

# Profibus - Data Point List

**High PROTEC** | PROTECTION TECHNOLOGY  
MADE SIMPLE

MRU4 |

Version: 3.7

Original document

English

Original reference manual

**SEG Electronics GmbH**

Krefelder Weg 47 • D-47906 Kempen (Germany)

Telephone: +49 (0) 21 52 145 1

Internet: [www.SEGelectronics.de](http://www.SEGelectronics.de)

Sales

Telephone: +49 (0) 21 52 145 331

Fax: +49 (0) 21 52 145 354

E-mail: [info@SEGelectronics.de](mailto:info@SEGelectronics.de)

Service

Telephone: +49 (0) 21 52 145 614

Fax: +49 (0) 21 52 145 354

E-mail: [info@SEGelectronics.de](mailto:info@SEGelectronics.de)

© 2020 SEG Electronics GmbH. All rights reserved.

# Table of Contents

<b>1</b>	<b>Profibus</b> .....	<b>4</b>
1.1	Configuration .....	5
<b>2</b>	<b>Data Point Lists</b> .....	<b>6</b>
2.1	Signals .....	6
2.2	Measuring Values .....	11
2.3	Commands .....	12

## 1 Profibus

The Slave is a so-called “Modular Slave”. Within the GSD-File the optional available Configuration Modules are described only. The precise configuration for a device can be inquired by means of the Profibus-Command “GetConfig”. The configuration consists of so-called “Modules”. The description of the modules can be taken from the Profibus specification. Please contact the Technical Support in case of questions regarding the configuration.

The meaning of the Input and Output fields can be taken from the following tables. The Input fields are sent from the Slave to the Master. The Output fields are sent from the Master to the Slave. The Output fields contain the Commands and the Input fields contain the States of the device.

## 1.1 Configuration

The configuration telegram follows right after the parameter telegram and declares the number of input and output bytes. The Master sends to all Slaves how many bytes for each input and output message cycle are required. The following table defines the required size of a single input and output frame.

Direction	Length	Configuration
Input	44	0x1F 0x1F 0x1b
Output	8	0x27

## 2 Data Point Lists

### 2.1 Signals

These Data can be taken from the Input Field of the Profibus. The Input Field is sent from the Slave to the Master.

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Latched</b>	<b>Description</b>
SG[1]	Pos	0/0		Signal: Circuit Breaker Position (0 = Indeterminate, 1 = OFF, 2 = ON, 3 = Disturbed)
Sys	PS 1	2/0		Signal: The currently active Parameter Set is PS 1
Sys	PS 2	2/1		Signal: The currently active Parameter Set is PS 2
Sys	PS 3	2/2		Signal: The currently active Parameter Set is PS 3
Sys	PS 4	2/3		Signal: The currently active Parameter Set is PS 4
Profibus	Data OK	2/4		Data within the Input field are OK (Yes=1)
Prot	active	2/5		Signal: active
Prot	Alarm L1	2/6		Signal: General-Alarm L1
Prot	Alarm L2	2/7		Signal: General-Alarm L2
Prot	Alarm L3	3/0		Signal: General-Alarm L3
Prot	Alarm G	3/1		Signal: General-Alarm - Earth fault
Prot	Alarm	3/2		Signal: General Alarm
Prot	Trip L1	3/3	*	Signal: General Trip L1
Prot	Trip L2	3/4	*	Signal: General Trip L2
Prot	Trip L3	3/5	*	Signal: General Trip L3
Prot	Trip G	3/6	*	Signal: General Trip Ground fault
Prot	Trip	3/7	*	Signal: General Trip
Profibus	Assignment 1-I	5/0		Module input state: Scada Assignment

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Latched</b>	<b>Description</b>
Profibus	Assignment 2-I	5/1		Module input state: Scada Assignment
Profibus	Assignment 3-I	5/2		Module input state: Scada Assignment
Profibus	Assignment 4-I	5/3		Module input state: Scada Assignment
Profibus	Assignment 5-I	5/4		Module input state: Scada Assignment
Profibus	Assignment 6-I	5/5		Module input state: Scada Assignment
Profibus	Assignment 7-I	5/6		Module input state: Scada Assignment
Profibus	Assignment 8-I	5/7		Module input state: Scada Assignment
Profibus	Assignment 9-I	6/0		Module input state: Scada Assignment
Profibus	Assignment 10-I	6/1		Module input state: Scada Assignment
Profibus	Assignment 11-I	6/2		Module input state: Scada Assignment
Profibus	Assignment 12-I	6/3		Module input state: Scada Assignment
Profibus	Assignment 13-I	6/4		Module input state: Scada Assignment
Profibus	Assignment 14-I	6/5		Module input state: Scada Assignment
Profibus	Assignment 15-I	6/6		Module input state: Scada Assignment
Profibus	Assignment 16-I	6/7		Module input state: Scada Assignment
Profibus	Assignment 17-I	7/0		Module input state: Scada Assignment
Profibus	Assignment 18-I	7/1		Module input state: Scada Assignment
Profibus	Assignment 19-I	7/2		Module input state: Scada Assignment
Profibus	Assignment 20-I	7/3		Module input state: Scada Assignment
Profibus	Assignment 21-I	7/4		Module input state: Scada Assignment
Profibus	Assignment 22-I	7/5		Module input state: Scada Assignment
Profibus	Assignment 23-I	7/6		Module input state: Scada Assignment
Profibus	Assignment 24-I	7/7		Module input state: Scada Assignment

## 2 Data Point Lists

### 2.1 Signals

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Latched</b>	<b>Description</b>
Profibus	Assignment 25-I	8/0		Module input state: Scada Assignment
Profibus	Assignment 26-I	8/1		Module input state: Scada Assignment
Profibus	Assignment 27-I	8/2		Module input state: Scada Assignment
Profibus	Assignment 28-I	8/3		Module input state: Scada Assignment
Profibus	Assignment 29-I	8/4		Module input state: Scada Assignment
Profibus	Assignment 30-I	8/5		Module input state: Scada Assignment
Profibus	Assignment 31-I	8/6		Module input state: Scada Assignment
Profibus	Assignment 32-I	8/7		Module input state: Scada Assignment
SG[1]	TripCmd	9/0	*	Signal: Trip Command
V[1] - 27, 59	Alarm	9/1		Signal: Alarm voltage stage
V[1] - 27, 59	TripCmd	9/2	*	Signal: Trip Command
V[2] - 27, 59	Alarm	9/3		Signal: Alarm voltage stage
V[2] - 27, 59	TripCmd	9/4	*	Signal: Trip Command
V[3] - 27, 59	Alarm	9/5		Signal: Alarm voltage stage
V[3] - 27, 59	TripCmd	9/6	*	Signal: Trip Command
V[4] - 27, 59	Alarm	9/7		Signal: Alarm voltage stage
V[4] - 27, 59	TripCmd	10/0	*	Signal: Trip Command
VG[1] - 27A, 59N,A	Alarm	10/1		Signal: Alarm Residual Voltage Supervision-stage
VG[1] - 27A, 59N,A	TripCmd	10/2	*	Signal: Trip Command
VG[2] - 27A, 59N,A	Alarm	10/3		Signal: Alarm Residual Voltage Supervision-stage
VG[2] - 27A, 59N,A	TripCmd	10/4	*	Signal: Trip Command
f[1] - 81	TripCmd	10/5	*	Signal: Trip Command
f[1] - 81	Alarm	10/6		Signal: Alarm Frequency Protection (collective signal)

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Latched</b>	<b>Description</b>
f[2] - 81	TripCmd	10/7	*	Signal: Trip Command
f[2] - 81	Alarm	11/0		Signal: Alarm Frequency Protection (collective signal)
f[3] - 81	TripCmd	11/1	*	Signal: Trip Command
f[3] - 81	Alarm	11/2		Signal: Alarm Frequency Protection (collective signal)
ExP[1]	Alarm	11/3		Signal: Alarm
ExP[1]	TripCmd	11/4	*	Signal: Trip Command
ExP[2]	Alarm	11/5		Signal: Alarm
ExP[2]	TripCmd	11/6	*	Signal: Trip Command
ExP[3]	Alarm	11/7		Signal: Alarm
ExP[3]	TripCmd	12/0	*	Signal: Trip Command
ExP[4]	Alarm	12/1		Signal: Alarm
ExP[4]	TripCmd	12/2	*	Signal: Trip Command
CBF - 62BF	Alarm	12/3		Signal: Circuit Breaker Failure
TCS - 74TC	Alarm	12/4		Signal: Alarm Trip Circuit Supervision
VTS	Alarm ΔV	12/5		Signal: Alarm ΔV Voltage Transformer Measuring Circuit Supervision
VTS	Alarm	12/6		Signal: Alarm Voltage Transformer Measuring Circuit Supervision
V012[1] - 47	Alarm	12/7		Signal: Alarm voltage asymmetry
V012[1] - 47	TripCmd	13/0	*	Signal: Trip Command
V012[2] - 47	Alarm	13/1		Signal: Alarm voltage asymmetry
V012[2] - 47	TripCmd	13/2	*	Signal: Trip Command
V012[3] - 47	Alarm	13/3		Signal: Alarm voltage asymmetry
V012[3] - 47	TripCmd	13/4	*	Signal: Trip Command
V012[4] - 47	Alarm	13/5		Signal: Alarm voltage asymmetry

## 2 Data Point Lists

### 2.1 Signals

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Latched</b>	<b>Description</b>
V012[4] - 47	TripCmd	13/6	*	Signal: Trip Command
DI Slot X1	DI 1	13/7		Signal: Digital Input
DI Slot X1	DI 2	14/0		Signal: Digital Input
DI Slot X1	DI 3	14/1		Signal: Digital Input
DI Slot X1	DI 4	14/2		Signal: Digital Input
DI Slot X1	DI 5	14/3		Signal: Digital Input
DI Slot X1	DI 6	14/4		Signal: Digital Input
DI Slot X1	DI 7	14/5		Signal: Digital Input
DI Slot X1	DI 8	14/6		Signal: Digital Input
BO Slot X2	BO 1	14/7		Signal: Binary Output Relay
BO Slot X2	BO 2	15/0		Signal: Binary Output Relay
BO Slot X2	BO 3	15/1		Signal: Binary Output Relay
BO Slot X2	BO 4	15/2		Signal: Binary Output Relay
BO Slot X2	BO 5	15/3		Signal: Binary Output Relay
ReCon[1]	V Ext Release PCC-I	15/4		Module input state: Release signal is being generated by the PCC (External Release)

## 2.2 Measuring Values

These Data can be taken from the Input Field of the Profibus. The Input Field is sent from the Slave to the Master.

<b>Module (ANSI / IEEE)</b>	<b>Name Function</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Format</b>	<b>Description</b>
VT	VL12	20/0	Float IEEE754	Measured value: Phase-to-phase voltage (fundamental)
VT	VL23	24/0	Float IEEE754	Measured value: Phase-to-phase voltage (fundamental)
VT	VL31	28/0	Float IEEE754	Measured value: Phase-to-phase voltage (fundamental)
VT	VX meas	32/0	Float IEEE754	Measured value (measured): VX measured (fundamental)
VT	f	36/0	Float IEEE754	Measured value: Frequency
Values	Operating hours Cr	40/0	Float IEEE754	Operating hours counter of the protective device

## 2.3 Commands

The commands are set within the Output Field. These data fields are sent from the master to the slave. The slave responds to data modifications only, for example if a 2 Bit state changes from Off (01) to On (2).

<b>Module (ANSI / IEEE)</b>	<b>Name</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Description</b>
	<b>Function</b>		
SG[1]	Control/Position of circuit breaker	0/0	Control respectively Position of circuit breaker (1 = OFF, 2 = On).
Sys	Ack LED	2/0	All acknowledgeable LEDs will be acknowledged.
Sys	Ack BO	2/2	All acknowledgeable binary output relays are acknowledged.
Sys	Ack Scada	2/4	Latched SCADA signals are acknowledged.
PSS via Scada	PSS via Scada	3/0	Signal: Parameter Set Switch via Scada. Write into this output byte the integer of the parameter set that should become active (e.g. 4 => Switch onto parameter set 4).
Commands	Scada Cmd 1	4/0	Scada Command
Commands	Scada Cmd 2	4/2	Scada Command
Commands	Scada Cmd 3	4/4	Scada Command
Commands	Scada Cmd 4	4/6	Scada Command
Commands	Scada Cmd 5	5/0	Scada Command
Commands	Scada Cmd 6	5/2	Scada Command
Commands	Scada Cmd 7	5/4	Scada Command
Commands	Scada Cmd 8	5/6	Scada Command
Commands	Scada Cmd 9	6/0	Scada Command
Commands	Scada Cmd 10	6/2	Scada Command
Commands	Scada Cmd 11	6/4	Scada Command
Commands	Scada Cmd 12	6/6	Scada Command
Commands	Scada Cmd 13	7/0	Scada Command
Commands	Scada Cmd 14	7/2	Scada Command

<b>Module (ANSI / IEEE)</b>	<b>Name</b>	<b>Offset (Byte pos. / Bit position)</b>	<b>Description</b>
<b>Function</b>			
Commands	Scada Cmd 15	7/4	Scada Command
Commands	Scada Cmd 16	7/6	Scada Command

## High PROTEC




SEG Electronics GmbH  
Krefelder Weg 47 • D-47906 Kempen (Germany)  
Telephone: +49 (0) 21 52 145 1

Internet: [www.SEGelectronics.de](http://www.SEGelectronics.de)

Sales  
Telephone: +49 (0) 21 52 145 331  
Fax: +49 (0) 21 52 145 354

Service  
Telephone: +49 (0) 21 52 145 614  
Fax: +49 (0) 21 52 145 354

[docs.SEGelectronics.de/HighPROTEC](http://docs.SEGelectronics.de/HighPROTEC)

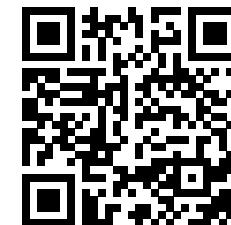

SEG Electronics GmbH reserves the right to update any portion of this publication at any time. Information provided by SEG Electronics GmbH is believed to be correct and reliable. However, SEG Electronics GmbH assumes no responsibility unless otherwise expressly undertaken.

Complete address / phone / fax / email information for all locations is available on our website.