

PROTECTION MADE SIMPLE.

**SEG**  
electronics

## Professional Line

### XUFD

#### NETZ- UND ANLAGENSCHUTZGERÄT



NETZ- UND ANLAGENSCHUTZGERÄT

Rev.: A

Originaldokument

Deutsch

**HANDBUCH XUFD-DE-MAN\_A**

**Inhalt**

1	Sicherheit und Symbole .....	6
1.1	Bestimmungsgemäße Verwendung .....	6
1.2	Sicherheitshinweise .....	6
1.3	Elektrofachkraft.....	7
2	Montage und Anschluss .....	8
2.1	Abmessungen und Bedienelemente .....	8
2.2	Vorsicherung der Versorgungsspannung .....	8
2.3	Klemmenbelegung .....	9
2.4	Montage auf Hutschiene gemäß EN 60715.....	9
2.5	Anschlussbild 1 (allgemein, ohne FRT-Maßnahmen) .....	10
2.6	Anschlussbild 2 (allgemein, mit FRT-Maßnahmen) .....	11
2.7	Anschlussbild 3 (CEI 0-21) .....	12
2.8	Anschlussbild 4 (C10/11) .....	13
3	Funktion.....	14
3.1	Features .....	14
3.2	Inbetriebnahme.....	14
3.3	Funktionsbeschreibung .....	14
3.4	Schutzfunktionen / Komparatoren .....	16
3.4.1	Spannungsüberwachung .....	16
3.4.2	Frequenzüberwachung .....	17
3.4.3	Phasensprungüberwachung .....	17
3.5	Inselnetzerkennung.....	18
3.5.1	Inselnetzerkennung mittels Spannungsmessung .....	18
3.5.2	Inselnetzerkennung mittels RoCoF.....	18
3.5.3	Inselnetzerkennung mittels Vektorsprung .....	18
3.6	Testfunktion .....	18
3.7	Digitale Eingänge .....	18
3.8	Ausgangsrelais R1, R2 und R3 .....	19
3.9	Fehler (Error).....	19
3.9.1	Messwertfehler .....	19
3.9.2	Systemfehler.....	19
3.9.3	Fehlerspeicher (LOG) .....	20
3.10	Neuheiten länderspezifische Parametersätze.....	20
3.10.1	VDE-AR-N 4105:2018.....	20
3.10.2	C10/11:2021 .....	21
3.10.3	EN50549-1/2:2019 (Voreinstellungen Niederlande) .....	22
3.10.4	OPEN_SETUP .....	22
4	Bedienung und Inbetriebnahme.....	23
4.1	Erste Inbetriebnahme .....	23
4.2	Menüführung.....	23
4.2.1	Ebene 0 .....	23
4.2.2	Ebene 1 .....	23
4.2.3	Ebene 2 .....	23
4.2.4	Ebene 3 .....	24
4.2.5	Ebene 4 .....	24
4.2.6	Ebene 5 .....	24
4.3	Menüstruktur.....	25
4.4	Plombierung .....	27
4.5	Fallbeispiele .....	27
4.5.1	Einsatz von Spannungswandlern in Mittelspannungsnetzen.....	27

4.5.2	FRT (Fault Ride Through) Fähigkeit von Stromerzeugungsanlagen: .....	28
4.5.3	Selbsthalteschaltung für Fernabschaltung mit manueller Freigabe.....	30
4.5.4	Anschluss eines Rundsteuerempfängers für Leistungsreduktion 0% .....	30
4.6	Versorgungskreis .....	31
4.7	Messkreis .....	31
4.8	Messbereiche .....	32
4.9	Digitale Eingänge .....	32
4.10	Ausgangskreis.....	32
4.11	Genauigkeit.....	32
4.12	Isolationsdaten.....	33
4.13	Umgebungsbedingungen.....	33
4.14	Elektrischer Anschluss .....	33
4.15	Plombierdraht .....	33
4.16	Schutzart.....	33
5	Settings der implementierten Parametersätze.....	34
5.1.1	Connection Modes .....	34
5.1.2	Einheiten .....	34
5.1.3	Funktionale Sicherheit.....	34
5.1.4	Operational Mode .....	34
5.1.5	Schwellen.....	34
5.1.6	Zeiten.....	35
5.1.7	Hilfskontakt.....	35
5.1.8	Ranges .....	35
6	Sicherheitskonzept .....	36
7	Glossar.....	37
8	Verfügbare Normen und Standards .....	38
8.1	Aktuell gültige Normen und Standards .....	38
8.2	Frühere Versionen von Normen und Standards .....	41
9	Übersicht der implementierten Parametersätze .....	42
9.1	OVE TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen).....	42
9.2	OVE TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen) .....	42
9.3	OVE TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen).....	42
9.4	OVE TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen).....	43
9.5	OOE TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen) .....	43
9.6	OOE TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen) .....	43
9.7	OOE TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen) .....	44
9.8	OOE TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen) .....	44
9.9	W TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen) .....	44
9.10	W TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen) .....	45
9.11	W TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen) .....	45
9.12	W TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen) .....	45
9.13	TIROL TOR NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen) .....	46
9.14	TIROL TOR NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen) .....	46
9.15	TIROL TOR MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen) .....	46
9.16	TIROL TOR MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen) .....	46
9.17	VDE-AR-N 4105:2018-11 (Pn ≤ 50 kW) .....	47
9.18	VDE-AR-N 4105:2018-11 (Pn > 50 kW) .....	47
9.19	VDE-AR-N 4105:2018-11 (Umrichter).....	47
9.20	VDE-AR-N 4110:2018-11 (geprüft nach TR3, Bewertungsbericht TR8).....	48
9.21	CEI 0-21:2019 .....	48

9.22	G99/1/3 LV:2018 (Niederspannung).....	48
9.23	G99/1/3 HV:2018 (Mittel/Hochspannung) .....	49
9.24	G98/1/2:2018 (Niederspannung) .....	49
9.25	C10-11:2021 LV-IP (Interface Protection / Niederspannung) .....	49
9.26	C10-11:2019 LV-ASS (Automatic Separation System / Niederspannung) .....	50
9.27	C10-11:2021 HV-IP (Interface Protection / Hochspannung) .....	50
9.28	C10-11:2019 HV-ASS (Automatic Separation System / Hochspannung).....	50
9.29	NA/EEA- CH 2014 Typ A <1MW (Niederspannung) .....	51
9.30	NA/EEA-NE7 - CH 2020 Typ A 800W bis 250kW (Niederspannung) .....	51
9.31	NA/EEA-NE7 - CH 2020 Typ B 250kW bis 36MW (Niederspannung).....	51
9.32	EN 50549-1:2019 LV (Niederlande) .....	52
9.33	EN 50549-2:2019 HV (Niederlande).....	52
9.34	EN 50438:2013 (DK) .....	53
9.35	VDE 0126-1-1:2013 (ERDF-NOI-RES_13E Frankreich).....	53
9.36	AB AS 4777.2:2020 .....	53
9.37	C AS 4777.2:2020 .....	54
9.38	NZS 4777.2:2020 .....	54
9.39	NRS 097-2-1:2017.....	55
9.40	OPEN SETUP.....	55
9.41	EN 50438:2013 .....	56
9.42	E 8001/8101 (Vorgänger von OVE TOR R25) .....	56
9.43	VDE 0124-100:2013 (Vorgänger von VDE-AR-N 4105:2018-11).....	56
9.44	TR3 Rev23:2013 (Vorgänger von VDE-AR-N 4110:2018-11) .....	56
9.45	AS/NZS 4777.2:2015 (Niederspannung) .....	57
9.46	G59/3/3:2015 LV (Niederspannung – Vorgänger von G99/1/3 LV:2018).....	57
9.47	G59/3/3:2015 MV (Mittelspannung Vorgänger von G99/1/3 HV:2018) .....	57
9.48	G83/2:2012 (Niederspannung Vorgänger von G98/1/2:2018) .....	58
9.49	C10-11:2012 LV (Niederspannung Vorgänger von C10-11:2019).....	58
9.50	C10-11:2012 MV (Mittelspannung Vorgänger von C10-11:2019) .....	58
9.51	C10-11:2019 LV-IP (Interface Protection / Niederspannung Vorgänger von C10-11:2021) .....	59
9.52	C10-11:2019 HV-IP (Interface Protection / Hochspannung Vorgänger von C10-11:2021)).....	59
10	ANHANG (Parameter der implementierten Standards im Detail).....	60
10.1	ÖVE TOR R25 NS SYNC [ID 802] Typ A/B low voltage synchr. generators .....	60
10.2	ÖVE TOR R25 NS ASYNC [ID 803] Typ A/B low voltage asynchr. generators.....	62
10.3	ÖVE TOR R25 MS SYNC [ID 852] Typ A/B medium voltage synchr. generators .....	64
10.4	ÖVE TOR R25 MS ASYNC [ID 853] Typ A/B medium voltage asynchr. generators .....	66
10.5	Oberösterreich OOE TOR R25 NS SYNC [ID 822] Typ A/B low voltage synchr. generators .....	68
10.6	Oberösterreich OOE TOR R25 NS ASYNC [ID 823] Typ A/B low voltage asynchr. generators .....	70
10.7	Oberösterreich OOE TOR R25 MS SYNC [ID 872] Typ A/B medium voltage synchr. generators .....	72
10.8	Oberösterreich OOE TOR R25 MS ASYNC [ID 873] Typ A/B med. voltage asynchr. generators .....	74
10.9	Wien TOR R25 NS SYNC [ID 832] Typ A/B low voltage synchr. generators.....	76
10.10	Wien TOR R25 NS ASYNC [ID 833] Typ A/B low voltage asynchr. generators.....	78
10.11	Wien TOR R25 MS SYNC [ID 882] Typ A/B medium voltage synchr. generators.....	80
10.12	Wien TOR R25 MS ASYNC [ID 883] Typ A/B medium voltage asynchr. generators .....	82
10.13	TIROL TOR NS SYNC [ID 812] Typ A/B low voltage synchr. generators .....	84
10.14	TIROL TOR NS ASYNC [ID 813] Typ A/B low voltage asynchr. generators .....	86
10.15	TIROL TOR MS SYNC [ID 862] Typ A/B medium voltage synchr. generators.....	88
10.16	TIROL TOR MS ASYNC [ID 863] Typ A/B medium voltage asynchr. generators .....	90
10.17	VDE-AR-N 4105:2018 ≤50kW [ID 311].....	91
10.18	VDE-AR-N 4105:2018 >50kW [ID 312] .....	94

10.19	VDE-AR-N 4105:2018 Umr [ID 313] .....	97
10.20	VDE-AR-N 4110:2018 TR3-25 [ID 706].....	100
10.21	CEI 0-21:2019 [ID 102] .....	103
10.22	G99/1/3:2018 LV [ID 410] .....	106
10.23	G99/1/3:2018 HV [ID 460].....	108
10.24	G98/1/2:2018 [ID 510] .....	110
10.25	C10-11:2021 LV-IP [ID 603] Interface Protection low voltage.....	112
10.26	C10-11:2019 LV-ASS [ID 602] Automatic Separation System / Low Voltage .....	115
10.27	C10-11:2021 HV-IP [ID 653] Interface Protection / High Voltage.....	117
10.28	C10-11:2019 HV-ASS [ID 652] Automatic Separation System / High Voltage.....	120
10.29	NA/EEA- CH 2014 [ID 1200] Low Voltage Type A up to 1MW.....	122
10.30	NA/EEA-NE7 - CH 2020 [ID 1220] Low Voltage Type A > 800W to ≤ 250kW .....	125
10.31	NA/EEA-NE7 - CH 2020 [ID 1221] Low Voltage Type B > 250kW to ≤ 36MW.....	128
10.32	EN50549-1:2019 LV Netherlands [ID 901].....	131
10.33	EN50549-2:2019 HV Netherlands [ID 926] .....	135
10.34	EN50438:2013 DK [ID 950].....	139
10.35	VDE 0126-1-1:2013 [ID 200].....	141
10.36	AB AS 4777.2:2020 [ID 1110] .....	143
10.37	C AS 4777.2:2020 [ID 1120] .....	145
10.38	NZS 4777.2:2020 [ID 1130] .....	147
10.39	NRS 097-2-1:2017 [ID 1000].....	149
10.40	OPEN SETUP [ID 9006] .....	152
10.41	EN50438:2013 [ID 900] .....	156
10.42	OVE E8001/8101:2014 [ID 801] renewed standard .....	158
10.43	VDE 0124-100:2013 [ID 300] renewed standard .....	161
10.44	TR3 Rev23:2013 [ID 700] renewed standard.....	163
10.45	AS/NZS 4777.2:2015 [ID 1102] renewed standard .....	165
10.46	G59/3/3:2015 LV [ID 405] renewed standard .....	167
10.47	G59/3/3:2015 MV [ID 455] renewed standard .....	169
10.48	G83/2:2012 [ID 500] renewed standard .....	171
10.49	C10-11:2013 LV [ID 600] renewed standard.....	173
10.50	C10-11:2013 MV [ID 650] renewed standard.....	175
10.51	C10-11:2019 LV-IP [ID 601] Interface Protection low voltage.....	177
10.52	C10-11:2019 HV-IP [ID 651] Interface Protection / High Voltage.....	179

## 1 Sicherheit und Symbole



**Vorsicht! Niemals bei angelegter Spannung arbeiten.  
Es besteht Lebensgefahr! Das Gerät bei erkennbarer Beschädigung  
auf keinen Fall verwenden! Verwendung nur durch geschultes  
Fachpersonal!**



**Fachprodukt!  
Dieses Produkt setzt besondere Fachkenntnisse bei der Installation  
voraus!**



**Dieses Gerät unterliegt der Elektro- und Elektronik-  
Altgeräteverordnung (WEEE) und darf nicht im normalen Hausmüll  
entsorgt werden.  
Das Gerät besteht aus Werkstoffen, die von darauf spezialisierten  
Recycling-Betrieben wiederverwertet werden können. Entsorgen  
Sie es entsprechend den nationalen gesetzlichen Bestimmungen.**

### 1.1 Bestimmungsgemäße Verwendung

Das XUFD dient dem Netz- und Anlagenschutz (NA-Schutz) bei einspeisenden Blockheizkraftwerken, Windkraft-, Wasserkraft- und Photovoltaikanlagen.

Im Falle eines Stromausfalls oder einer Störung im Netz des Energieversorgungsunternehmens müssen private Kleinkraftwerke sofort vom öffentlichen Netz getrennt werden, um die ungewollte Einspeisung zu verhindern. Ohne sofortige Netztrennung würde einerseits das Wartungspersonal gefährdet, andererseits könnten Verbraucher unzulässigen Spannungen und Frequenzen ausgesetzt werden.

Für den Fall, dass Netzbetreiber von den Standards abweichende Grenzwerte fordern, ist es teilweise möglich, Grenzwerte außerhalb des normativ definierten Bereiches einzustellen.

Außerhalb dieses Bereiches ist das Gerät nicht mehr normkonform und die entsprechenden Zertifikate verlieren ihre Gültigkeit. Dieser Status wird am Display durch die Kennung „ncnf“ dargestellt. Einstellungen außerhalb dieses Bereiches liegen somit in der Verantwortung des Betreibers und/oder der Abnahmestelle der Anlage.

### 1.2 Sicherheitshinweise

Dieses Gerät wurde nach anerkannten sicherheitstechnischen Regeln gebaut und geprüft. Dennoch kann bei unsachgemäßer Verwendung Gefahr für Mensch und Gerät entstehen.

Benutzen Sie dieses Gerät nur für die bestimmungsgemäße Verwendung, im sicherheitstechnisch einwandfreien Zustand und unter Beachtung der für den Einsatzort geltenden Regeln und Vorschriften zur Unfallverhütung.

- Beseitigen Sie sofort alle Störungen, die die Sicherheit beeinträchtigen können.
- Nehmen Sie keine unzulässigen Änderungen vor und verwenden Sie ausschließlich Ersatzteile und Zusatzeinrichtungen, welche vom Hersteller des Gerätes verkauft oder ausdrücklich empfohlen werden.
- Bei offensichtlicher Beschädigung darf das Gerät nicht mehr verwendet werden.
- Die länderspezifischen Normen und Richtlinien sind zu beachten.
- Das XUFD kann nach der Inbetriebnahme mittels Passwortschutz oder Plombierung gegen unbefugte Änderungen geschützt werden. Sollte dies in der jeweils länderspezifischen Norm bzw. Richtlinie gefordert sein, muss einer der oben genannten Schutzmechanismen angewandt werden.

### 1.3 Elektrofachkraft

Eine Elektrofachkraft kann Gefahren durch die Elektrizität selbstständig erkennen und vermeiden. Voraussetzungen dafür sind:

- Kenntnisse der Elektrotechnik
- Erfahrungen mit elektrotechnischer Arbeit
- Kenntnisse und Arbeitserfahrung an der jeweiligen Anlage oder ähnlichen Anlagen (Anlagenart)
- Kenntnisse der Gefährdungen und Gegenmaßnahmen
- Die Fähigkeit zu erkennen, ob die Sicherheit bei der Arbeitsdurchführung gegeben ist

Die Elektrofachkraft ist speziell für das Arbeitsumfeld, in dem sie tätig ist, ausgebildet und kennt relevante Normen und Bestimmungen. Es gelten die Vorschriften des jeweiligen Landes.



Dieses Dokument kann seit Erstellung dieser Kopie überarbeitet oder aktualisiert worden sein. Um sicherzustellen, dass Sie über die aktuelle Revision verfügen, sollten Sie auf dem Download-Bereich der SEG Electronics GmbH nachsehen:

- <https://docs.SEGelectronics.de/xufd>


Prüfen Sie in diesem Download-Bereich, ob es eine neuere Version der Betriebsanleitung gibt oder ob ein Errata-Sheet (Änderungsdokument) vorliegt. (Die ID eines jeden Dokuments finden Sie auf der Titelseite.)

**Die SEG Electronics GmbH bietet auch die XUFD-Konfiguration als Service an:**

**Alle Schutzeinstellungen werden auf Grundlage individueller Kunden-Anforderungen bzw. vom Kunden übermittelter Check-Listen erstellt und im Gerät eingestellt.**

## 2 Montage und Anschluss

### 2.1 Abmessungen und Bedienelemente

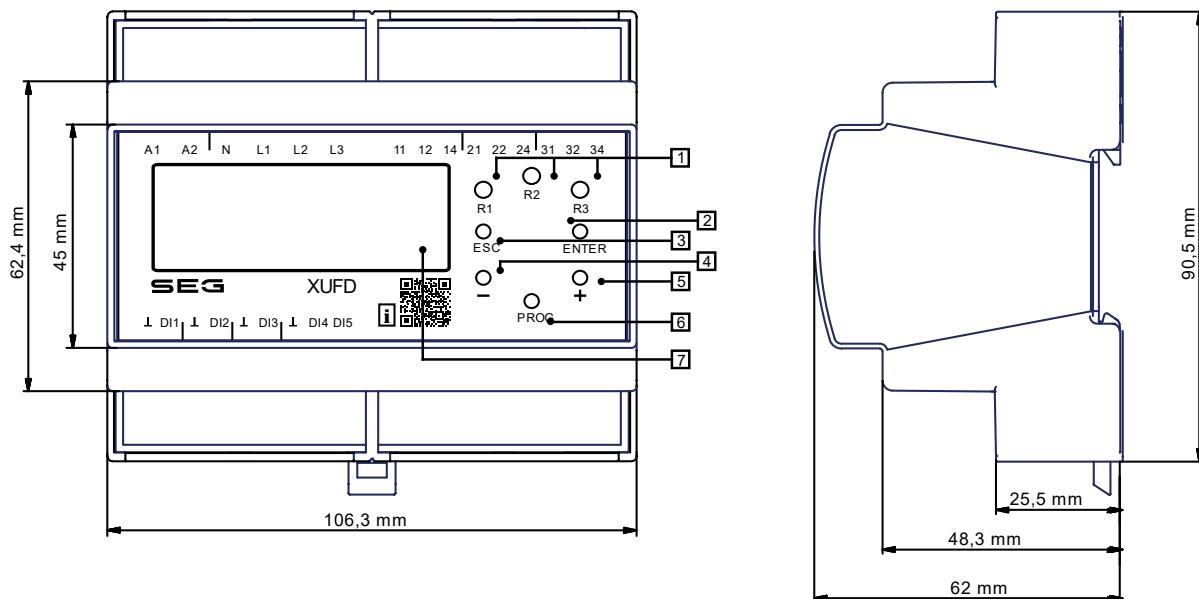

Legende	Beschriftung	Typ	Funktion
1	R1, R2, R3	LED (gelb)	Statusanzeige Ausgangsrelais
2	ENT	Taster	ENTER, Eingabe, nächste Ebene
3	ESC	Taster	ESCAPE, Retour, Ebene zurück, Test/Reset
4	-	Taster	Parametereinstellung, Anzeigenwechsel
5	+	Taster	Parametereinstellung, Anzeigenwechsel
6	PROG	Taster (plombierbar)	PROGRAMM, Programmieren
7		LCD-Display 4x20 Character	Anzeige

### 2.2 Vorsicherung der Versorgungsspannung

Die Versorgungs- und Messspannungen aller Systemkomponenten sind mit Vorsicherungen abzusichern. Die Vorsicherungen sind gemäß dem verwendeten Leiterquerschnitt zu dimensionieren.

Wir empfehlen, die Ausgangsrelais bei Gefahr von Kurzschluss mit einer Sicherung 5A flink abzusichern!


## 2.3 Klemmenbelegung

A1, A2	Versorgungskreis	DC: 24V AC: 110 - 230V A1: L (+) A2: N (-)
L1, L2, L3, N	Messkreis	UN: 3 x 400V AC
11, 12, 14	Ausgangsrelais Kanal A (Wechsler) Statusanzeige durch gelbe LED R1	Kontaktausgang (potentialfrei) 11: Wurzel 12: Öffner 14: Schließer
21, 22, 24	Ausgangsrelais Kanal B (Wechsler) Statusanzeige durch gelbe LED R2	Kontaktausgang (potentialfrei) 21: Wurzel 22: Öffner ( <i>n.c. / normally closed</i> ) 24: Schließer ( <i>n.o. / normally open</i> )
31, 32, 34	Ausgangsrelais D (Wechsler) Statusanzeige durch gelbe LED R3	Kontaktausgang (potentialfrei) 31: Wurzel 32: Öffner ( <i>n.c. / normally closed</i> ) 34: Schließer ( <i>n.o. / normally open</i> )
I1, ⊥	Digitaler Eingang 1 (Rückmeldekontakt Schütz A)	Kontakteingang (24V/5mA) Eingang aktiv, wenn I1 und ⊥ verbunden (konfigurierbar)
I2, ⊥	Digitaler Eingang 2 (Rückmeldekontakt Schütz B)	Kontakteingang (24V/5mA) Eingang aktiv, wenn I2 und ⊥ verbunden (konfigurierbar) Entfällt bei allen länderspezifischen Normen bei denen keine funktionale Sicherheit gefordert ist!
I3, ⊥	Digitaler Eingang 3 (Fernabschaltung)	Kontakteingang (24V/5mA) Eingang aktiv: I3 und ⊥ verbunden (konfigurierbar)
I4, I5, ⊥	Digitale Eingänge 4 und 5 (Umschaltung auf <i>narrower frequency window</i> )	Für CEI 0-21 und C10/11 Kontakteingang (24V/5mA) Eingang aktiv, wenn I4 bzw. I5 und ⊥ verbunden

## 2.4 Montage auf Hutschiene gemäß EN 60715

Rasten Sie den rückseitigen Montageclip des Geräts auf der Hutschiene so ein, dass ein sicherer und fester Sitz gewährleistet ist.

## 2.5 Anschlussbild 1 (allgemein, ohne FRT-Maßnahmen)

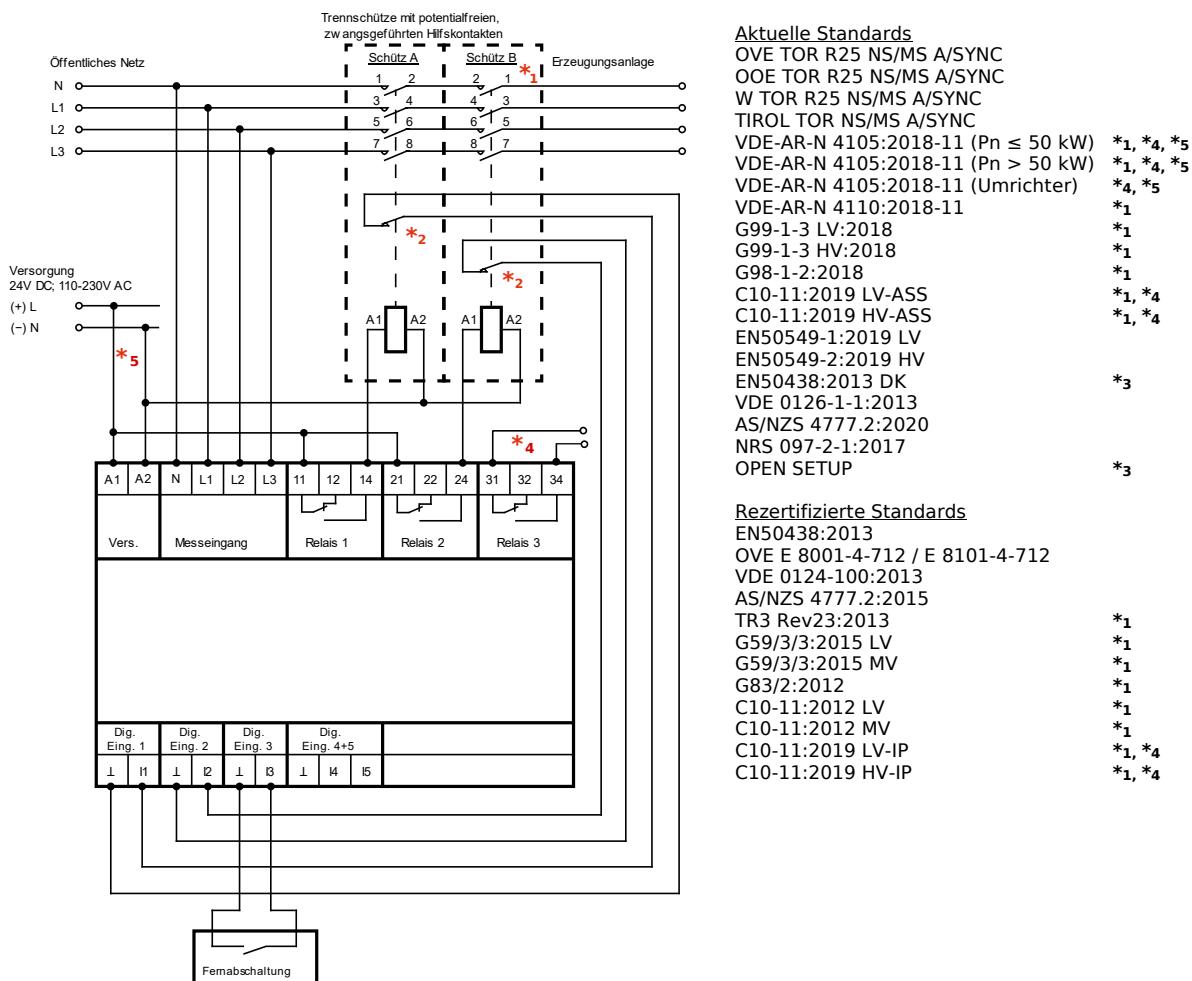

\*<sub>1</sub> ... Schütz B entfällt bei allen länderspezifischen Normen, bei denen keine funktionale Sicherheit gefordert ist!


\*<sub>2</sub> ... Hilfskontakt als Öffner, Schließer oder „nicht überwacht“ konfigurierbar.

\*<sub>3</sub> ... 1- oder 2-kanaliger Anschluss möglich und konfigurierbar.

\*<sub>4</sub> ... Auswertung, Kontaktfehler für Eigenerzeugungsanlagen nur für VDE-AR-N 4105:2018-11 und C10-11:2019

\*<sub>5</sub> ... siehe nächste Seite – VDE-AR-N 4105:2018-11 mit gepufferten Trennschützen für ein FRT-(Fault-Ride-Through-)Verhalten

## 2.6 Anschlussbild 2 (allgemein, mit FRT-Maßnahmen)

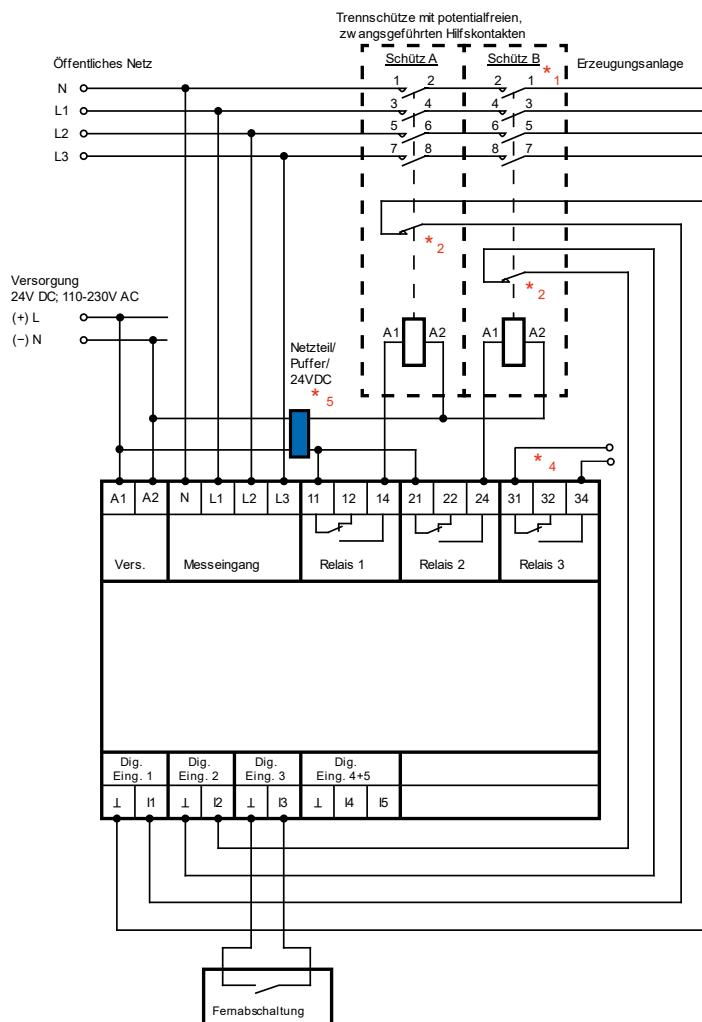

### Anzuwenden für:

Standards wie in 2.5 beschrieben

### \*<sub>5</sub> Verhalten von Trennschützen bei Unterspannung (FRT/fault ride through)

Netzteil/Puffer. Trennschütze und, wenn vorhanden, Koppelrelais müssen bei Unterspannung für 3s / 0,3s gepuffert werden (FRT).

Auch in Niederspannungsnetze einspeisende Anlagen müssen das Netz unterstützen. Deshalb darf der Trennschütz bei einem Spannungseinbruch auf einen Wert knapp über  $U < < (0,45 \text{ Un})$  bzw. 0,3s bei Spannungsunterbrechung wegen Unterspannung nicht abfallen, sondern erst wenn ihn das XUFD nach 3s ( $U < <$ ) bzw. 0,3s ( $U < <$ ) abschaltet (Netzteil/Puffer nötig).

Bei Verwendung von 2 Trennschützen müssen beide für 3s versorgt werden. Das XUFD verfügt über ein internes Breitbandnetzgerät und braucht daher keine gepufferte Steuerspannung.

**ACHTUNG bei Signalfolge:**  
Puffer - XUFD - Trennschütz. Das Abschaltsignal darf NICHT verzögert werden!

\*<sub>1</sub> ... Schütz B entfällt bei allen länderspezifischen Normen, bei denen keine funktionale Sicherheit gefordert ist!

\*<sub>2</sub> ... Hilfskontakt als Öffner, Schließer oder „nicht überwacht“ konfigurierbar.

\*<sub>3</sub> ... 1- oder 2-kanaliger Anschluss möglich und konfigurierbar.


\*<sub>4</sub> ... Auswertung, Kontaktfehler für Eigenerzeugungsanlagen nur für VDE-AR-N 4105:2018-11 und C10-11:2019

\*<sub>5</sub> ... Mit gepufferten Trennschützen, um ein FRT (fault ride through) Verhalten zu gewährleisten

## 2.7 Anschlussbild 3 (CEI 0-21)

Anzuwenden für:

CEI 0-21:2019

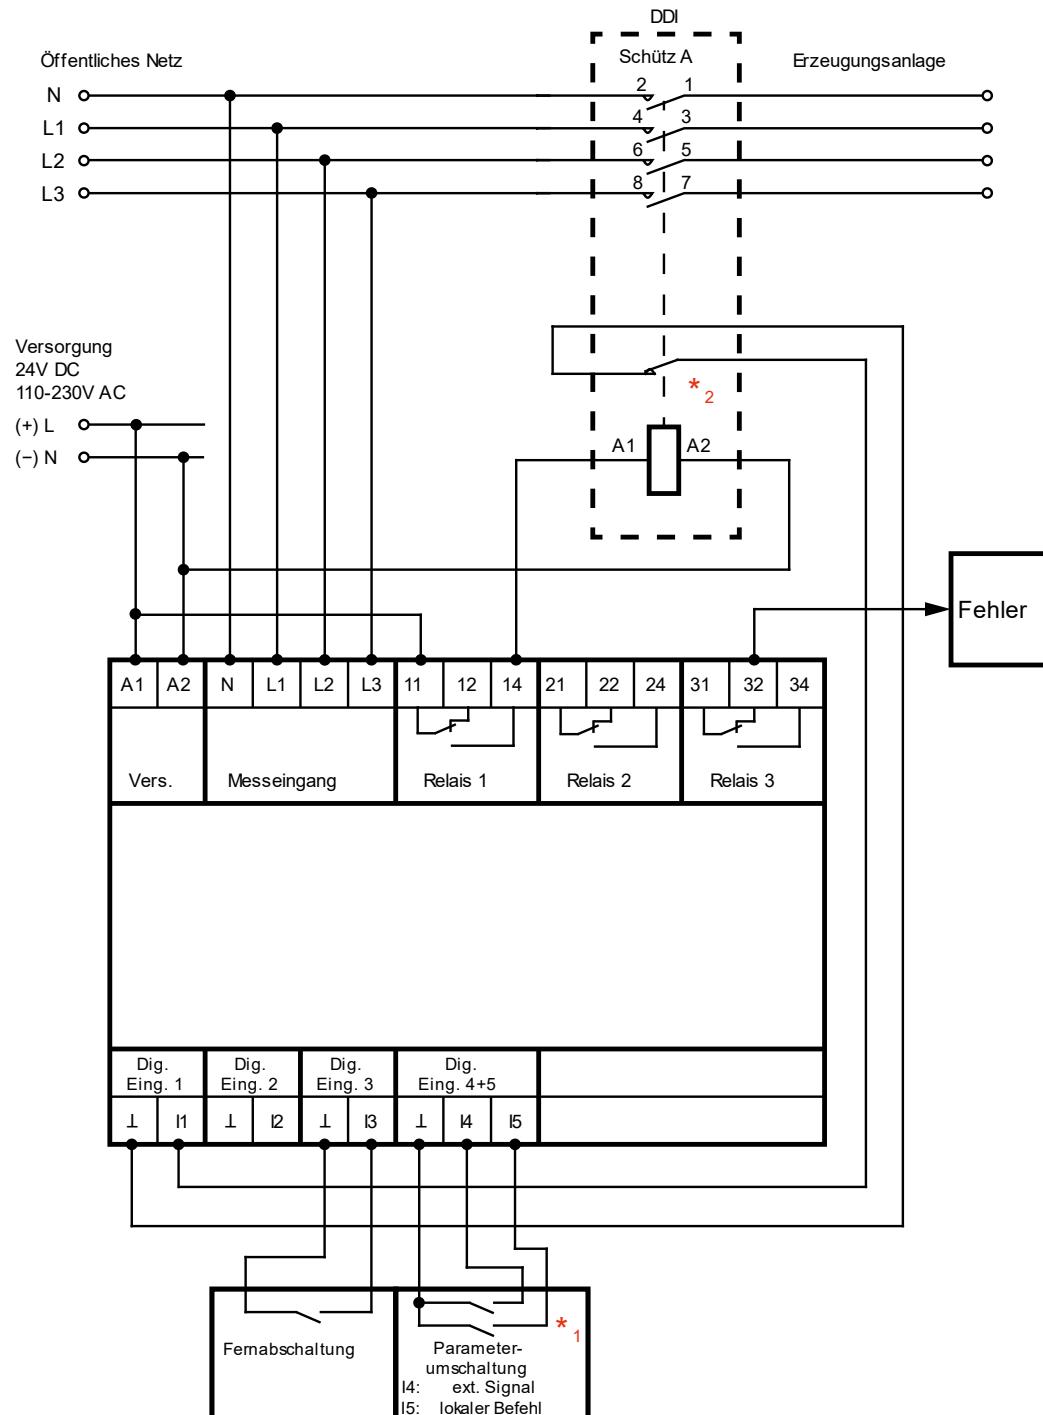

\*<sub>1</sub> Parameterumschaltung:

definitive mode (Operational mode 0):

I4 inaktiv / Kontakt geöffnet:

Overfrequency 1, Underfrequency 1

I4 aktiv / Kontakt geschlossen:

Overfrequency 2, Underfrequency 2

transitory mode (Operational mode 1):

I5 aktiv / Kontakt geschlossen:

Overfrequency 2, Underfrequency 2

I5 inaktiv / Kontakt geöffnet:

Overfrequency 3, Underfrequency 3


\*<sub>2</sub> Hilfskontakt als Öffner, Schließer oder „nicht überwacht“ konfigurierbar

## 2.8 Anschlussbild 4 (C10/11)

Anzuwenden für:

C10/11:2021 LV

C10/11:2021 HV

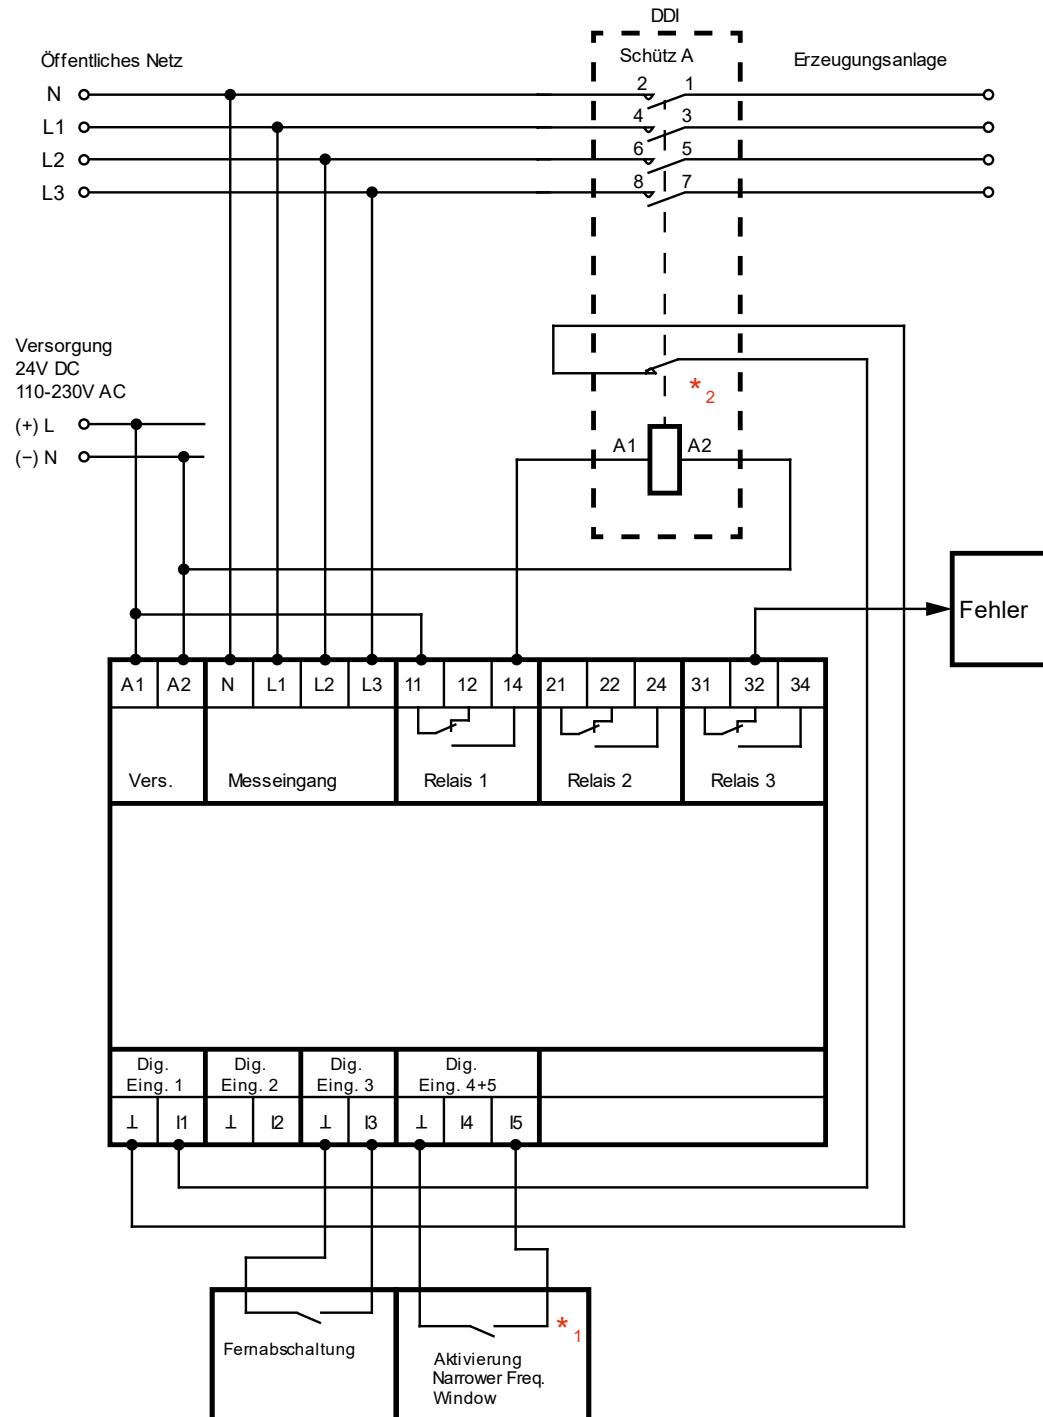

\*<sub>1</sub> Parameterumschaltung:

I5 inaktiv / Kontakt geöffnet: Overfrequency 1, Underfrequency 1  
 I5 aktiv / Kontakt geschlossen: Overfrequency 2, Underfrequency 2 (narrower frequency window)  
 (based on local voltage criteria / local setting)

\*<sub>2</sub> Hilfskontakt als Öffner, Schließer oder „nicht überwacht“ konfigurierbar

## 3 Funktion

### 3.1 Features

- Einfache Inbetriebnahme durch vordefinierte Setups für länderspezifische Normen und Richtlinien mit in weiten Grenzen einstellbaren Parametern.
- Weiter Nennspannungs- und Nennfrequenzbereich, Einstellbare Nennspannung
- Schutzfunktionen  $U_{<<}, U_{<}, U_{>}, U_{>>}$ ,  $U_{10\min}, f_{<} f_{>}$  ( $f_{<<}, f_{>>}$ )
- Zusätzliches „Open Setup“ für freie, praktisch unbeschränkte Parametrierbarkeit im Feld
- Einfliersicherheit
- Zyklischer Selbsttest
- Überwachung der angeschlossenen Kuppelschalter
- Fernabschaltung
- Inselnetzerkennung (RoCoF, PShift, Außenleiterspannung)
- Testfunktion mit Ermittlung der Abschaltzeit der angeschlossenen Trennschütze
- Überwachung von 1- und 3-phasigen Netzen für Nieder- und Mittelspannungsnetze
- Fehlerspeicher mit Zeitstempel (50 Einträge)
- Passwortschutz und Plombierbarkeit
- Zufällige Abschaltschwellen und Zuschaltzeiten für nichtregelbare Energieerzeuger (z.B. BHKW)
- Erfassung der symmetrischen Komponente Zero Sequence im 3-Phasennetz (Uzero)
- Umschaltung auf unterschiedliche Frequenzbänder (narrower frequency window)
- FRT-Fähigkeit (fault ride through)
- Konfigurationsservice und Einzelprüfprotokolle

### 3.2 Inbetriebnahme

Nach dem Anlegen der Versorgungsspannung an A1 und A2 erscheint am Display für 5 sek die Startanzeige. Das Gerät wird ohne eingestellten Parametersatz ausgeliefert. Bei der Erstinbetriebnahme geht das Gerät in die Parametersatzauswahl (Ebene 5 - Menüpunkt 5.001). Hier muss mittels +/- der entsprechende länderspezifische Parametersatz/Norm ausgewählt und mit ENTER bestätigt werden. Nähere Informationen dazu finden sie unter 4.3 „Menüstruktur“.

### 3.3 Funktionsbeschreibung

Je nach ausgewähltem länderspezifischen Parametersatz führt das Gerät mehrere Überwachungsfunktionen (Schutzfunktionen) gleichzeitig durch.

Soweit nicht anders angegeben beträgt die Nennspannung 230V/400V und die Nennfrequenz 50Hz (Kontrolle Menüpunkt 1.010)

1.010	dflt	60
U1	230.0V	f 50.00Hz
U2	230.0V	
U3	230.0V	

Beim Über- oder Unterschreiten eines Grenzwertes schalten R1 und R2 nach einer für jeden Grenzwert eigens definierten Ansprechverzögerung ab. Beim Selbsttest und bei Aktivierung der Fernabschaltung schalten R1 und R2 sofort ab. Erst wenn alle überwachten Größen innerhalb der zulässigen Grenzen liegen und die Fernabschaltung deaktiviert wurde, schalten R1 und R2 nach einer definierten Einschaltzeit wieder zu.

R1 und R2 sorgen mit den angeschlossenen Trennschützen (A und B) für die geforderte Netztrennung (Erzeugungsanlage – öffentliches Netz) bei Ansprechen einer Schutzfunktion.

Durch die Rückmeldekontakte der Trennschütze, die mit den digitalen Eingängen des XUFD verbunden sind, werden die Schalthandlungen der Trennschütze ebenfalls überwacht, was die Anlagensicherheit weiter erhöht.

Achten Sie darauf, dass die Rückmeldekontakte der Trennschütze A/B korrekt angeschlossen sind. Menüpunkt 1.040 gibt Auskunft über den Zustand der Schütze A und B (DI1 und DI2). Möglicherweise müssen die Rückmeldekontakte umparametriert werden unter Menüpunkt 3.099

(n.c. versus n.o.). Eine weitere Fehlerquelle bilden die Massen der digitalen Eingänge I1 und I2, die intern nicht miteinander verbunden sind und deshalb immer angeschlossen werden müssen.

R1(2) dunkel bedeutet R1(2) sind OFF (unbetätigt):

1.040	dflt	60		
Toff	---	ms		
DI1	DI2	DI3	DI4	DI5
1	1	0	0	0

Die digitalen Eingänge DI1(2) signalisieren mit „1“ einen geschlossenen Rückmeldekontakt der Trennschütze. Wenn bei Parameter 3.099 n.c. (normally closed) ausgewählt ist, wurde korrekt verdrahtet.

Signalisieren die digitalen Eingänge DI1(2) jedoch „0“ einen offenen Rückmeldekontakt der Trennschütze wie in folgendem Bild,

1.040	dflt	60		
Toff	---	ms		
DI1	DI2	DI3	DI4	DI5
0	0	0	0	0

müsste Parameter 3.099 auf n.o. (normally open) umgestellt werden, oder die Verdrahtung zwischen den Trennschützen A(B) und den digitalen Eingängen wurde nicht korrekt durchgeführt.

Tabellarische Ansicht Einstellung Parameter 3.099:

Art des Trennschütz-Hilfskontakte			Parameter 3.099 (Einstellwert)
Kontakttyp	Kontaktbezeichnung	Symbol	
Schließer (n.o.)	13/14, 23/24, 33/34, ...		n.o.
Öffner (n.c.)	11/12, 21/22, 31/32, ...		n.c.

### 3.4 Schutzfunktionen / Komparatoren

Je nach gewähltem Parametersatz sind bestimmte Schutzfunktionen / Komparatoren editierbar.

#### 3.4.1 Spannungsüberwachung

Außenleiter 59.S1 59.S2	Überspannung 1 Überspannung 2	Alle 3 Außenleiterspannungen werden entsprechend den eingestellten Überspannungsschaltschwellen überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Diese Überwachung ist im 2-phasigen (L+N) sowie 4-phasigen (L1,L2,L3+N) Connection Mode deaktiviert!
Außenleiter 27.S1 27.S2	Unterspannung 1 Unterspannung 2	Alle 3 Außenleiterspannungen werden entsprechend den eingestellten Unterspannungsschaltschwellen überwacht. Bei Unterschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Diese Überwachung ist im 2-phasigen (L+N) sowie 4-phasigen (L1, L2, L3+N) Connection Mode deaktiviert!
Stern 59.S1 59.S2	Überspannung 1 Überspannung 2	Alle 3 Sternspannungen werden entsprechend den eingestellten Überspannungsschaltschwellen überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: Im 2-phasigen (L+N) Connection Mode erfolgt eine Spannungsmessung nur zwischen L1 und N! Diese Überwachung ist im 3-phasigen (L1, L2, L3) Connection Mode deaktiviert!
Stern 27.S1 27.S2	Unterspannung 1 Unterspannung 2	Alle 3 Sternspannungen werden entsprechend den eingestellten Unterspannungsschaltschwellen überwacht. Bei Unterschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: Im 2-phasigen (L+N) Connection Mode erfolgt nur eine Überspannungsmessung zwischen L1 und N! Diese Überwachung ist 3-phasigen (L1, L2, L3) Connection Mode deaktiviert!
Mittelwert 59-AV	Überspannung	Die gebildeten 10-Minuten Mittelwerte werden entsprechend den eingestellten Schaltschwellen für den langsamen Spannungssteigerungsschutz überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Im 2-phasigen Connection Mode: L-N Im 3-phasigen Connection Mode: L1-L2-L3 Im 4-phasigen Connection Mode: L1-N; L2-N; L3-N
U (Zero Sequence) Uzero Stern Außenleiter 59V0	Überspannung	Alle 3 Sternspannungen werden mit Betrag und Phasenlage addiert, die resultierende Spannung betragsmäßig zum Nulleiter ermittelt und in Folge gedrittelt. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Die Zero Sequence ist nur im 4 phasigen (LN +LL) Connection Mode aktiviert!
U (resultierend) Ures Stern Außenleiter	Überspannung	Aktivierung des narrower frequency window bei Überschreiten der Schaltschwelle von 3 x Zero Sequence nach der eingestellten Ansprechverzögerung $t_{off}$ .
U (activation narrower frequency window) Uanfw Stern	Unterspannung	Alle 3 Sternspannungen werden entsprechend den eingestellten Unterspannungsschaltschwellen überwacht. Bei Unterschreiten der Schaltschwelle kommt es nach der eingestellten Ansprechverzögerung $t_{off}$ zur Aktivierung des narrower frequency window.

### 3.4.2 Frequenzüberwachung

Überfrequenz 1 Überfrequenz 2 Überfrequenz 3 Überfrequenz 4  810.S1, 810.S2, 810.S3, 810.S4	Die Frequenz der 3 Sternspannungen werden entsprechend den eingestellten Überfrequenzschaltschwellen überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: im 2-wire mode wird nur U L1-N überwacht.
Unterfrequenz 1 Unterfrequenz 2 Unterfrequenz 3 Unterfrequenz 4  81U.S1, 81U.S2, 81U.S3, 81U.S4	Die Frequenzen der 3 Sternspannungen werden entsprechend den eingestellten Unterfrequenzschaltschwellen überwacht. Bei Unterschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: im 2-wire mode wird nur U L1-N überwacht.
Überfrequenz Zufall	Die Frequenz der 3 Sternspannungen werden entsprechend den eingestellten Überfrequenzschaltschwellen (zufällige Max Frequenz) überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: im 2-wire mode wird nur U L1-N überwacht.
Frequenzüberwachung Unterspannung LL Frequenzüberwachung Unterspannung LN	Je nach Modus (2, 3, 4 wire) führt ein Unterschreiten der eingestellten Schwelle zur Deaktivierung der Frequenzüberwachung.
RoCoF  81R	Die Frequenzänderungsraten der 3 Sternspannungen werden entsprechend den eingestellten Parametern überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: im 2-wire mode wird nur U L1-N überwacht.

### 3.4.3 Phasensprungüberwachung

Phase Shift  78	Das Phasensprungverhalten der 3 Sternspannungen wird entsprechend den eingestellten Parametern überwacht. Bei Überschreiten der Schaltschwelle schalten R1 und R2 nach der eingestellten Ansprechverzögerung $t_{off}$ auf OFF. Ausnahme: im 2-wire mode wird nur U L1-N überwacht.
-----------------------	---

### 3.5 Inselnetzerkennung

Dabei handelt es sich um ein lokal abgegrenztes Stromnetz, das nur aus einem oder wenigen Stromerzeugern besteht, nur mehr ein kleines Gebiet versorgt und keinen Anschluss mehr zu anderen Stromnetzen hat.

#### 3.5.1 Inselnetzerkennung mittels Spannungsmessung

Bei diesem Verfahren wird mit Hilfe der 3-phasigen Spannungsüberwachung (Außenleiter) ein Inselnetz erkannt.

#### 3.5.2 Inselnetzerkennung mittels RoCoF

Bei diesem Verfahren wird ein Inselnetz mit Hilfe der Frequenzänderungsrate (Rate of change of frequency) erkannt. Die Messung beruht auf Frequenzmessung und spricht bei einer über mehrere Perioden andauernden Frequenzänderung an. Der  $df/dt$ -Grenzwert wird in mHz/s angegeben und eingestellt.

#### 3.5.3 Inselnetzerkennung mittels Vektorsprung

Bei diesem Verfahren wird durch Zeitmessung der Halbwellen und dem Vergleich mit vorhergehenden Messungen ein Phasen-/ bzw. Vektorsprung erkannt. Ein Vektorsprung kann durch einen plötzlichen Lastwechsel oder Kurzschlüsse im übergeordneten Netz auftreten. Der Grenzwert wird in Grad angegeben und eingestellt.

## 3.6 Testfunktion

Die Testfunktion kann auf 2 Arten ausgelöst werden:

- Betätigen der ESC Taste in jeder beliebigen Anzeige der Menüebene 1
- Betätigen der ENT Taste im Fenster 1.050

Die beiden Ausgangsrelais R1 und R2 werden bei Aktivierung der Testfunktion abgeschaltet und die Zuschaltzeit beginnt abzulaufen.

Wie bei jeder Abschaltung wird auch bei der Testfunktion die Abschaltzeit der angeschlossenen Trennschütze / Kuppelschalter gemessen: Die jeweils letzte Abschaltzeit kann in Anzeige 1.040 abgelesen werden (Toff)

## 3.7 Digitale Eingänge

Die aktuellen Zustände der digitalen Eingänge können mit dem Menüpunkt 1.040 festgestellt werden.

Die digitalen Eingänge 1 und 2 (jeweils mit  $\perp$ ) dienen als Rückmeldekontakte der beiden Trennschütze A und B. Sie werden über den Hilfskontakt des Trennschützes angesteuert. Hierbei kann der Hilfskontakt als Öffner oder Schließer angeschlossen und der digitale Eingang im Gerät entsprechend konfiguriert werden.

Der digitale Eingang 3 (I3 und  $\perp$ ) dient der Fernabschaltung. Bei Konfiguration .114 (I3 STOP) mit n.o. (normally open) werden R1 und R2 durch Brücken von I3 mit  $\perp$  abgeschaltet. Verwendet man n.c. (normally closed), muß für einen normalen Betrieb (R1 und R2 eingeschaltet) I3 mit  $\perp$  gebrückt sein. Durch ein Öffnen I3 von  $\perp$  werden R1 und R2 abgeschaltet und damit auch die angeschlossenen Trennschütze A und B (Öffentliches Netz von Erzeugereinheit getrennt). Wird für .114 dis. (disabled) gewählt, kann gar keine Fernabschaltung durchgeführt werden.

Die beiden digitalen Eingänge 4 und 5 dienen der Parameterumschaltung für den italienischen Parametersatz CEI 0-21:2019.

Der digitale Eingang 5 dient der Aktivierung des narrower frequency window für die belgischen und europäischen Parametersätze C10/11:2021 und EN50549-1/2:2019

Die unterschiedlichen  $\perp$  bei den digitalen Eingängen sind intern nicht miteinander verbunden, müssen bei Verwendung also einzeln angeschlossen werden.

### 3.8 Ausgangsrelais R1, R2 und R3

Die beiden Ausgangsrelais R1 und R2 steuern die Trennschütze/Kuppelschalter an. Ist das vom XUFD gemessene öffentliche Netz ok, darf die Erzeugungseinheit einspeisen. R1 und R2 schalten dazu auf ON (LED R1 und LED R2 leuchten), die angeschlossenen Trennschütze an 11-14 (21-24) werden betätigt und verbinden die Erzeugungseinheit mit dem öffentlichen Netz.

Bewegen sich gemessene Stern/Außenleiterspannungen, die Netzfrequenz, (oder RoCoF, Pshift, Uzero) außerhalb der ihnen zugeordneten Grenzwerte, wird eine Schutzfunktion verletzt. In diesem Fall schalten R1 und R2 auf OFF, welche wiederum die Trennschütze durch Öffnen 11-14 (21-24) zum Abfallen bringen und somit die Erzeugungseinheit vom öffentlichen Netz trennen.

Das Ausgangsrelais R3 wird länderspezifisch behandelt, Damit können Fehlerzustände (Verletzungen der Schutzfunktion, falsch konfigurierte/verdrahtete Rückmeldekontakte) ausgewertet werden. Je nachdem, für welchen Fehlerfall R3 konfiguriert ist, schaltet es im Fehlerfall auf ON (LED R3 leuchtet) wenn z.B. ein Spannungsfehler besteht, oder die Rückmeldekontakte nicht/falsch angeschlossen sind).

### 3.9 Fehler (Error)

Die Anzeige aktueller Fehler befindet sich in Ebene „1.060 Error“, die Anzeige des Fehlerspeichers befindet sich in Ebene 2. Es wird zwischen Messwert- und Systemfehlern unterschieden:

#### 3.9.1 Messwertfehler

1.060      Error
M: UΔ UY Ü f Δf ΔΦ C
S: T0123456789ABCDEF
ENT ->

Hier wird nur der aktuell anliegende Fehler angezeigt!

Fehlerarten:

UΔ	Fehler Außenleiterspannung (Unter- oder Überspannung)
UY	Fehler Sternspannung (Unter- oder Überspannung, Zero Sequence)
Ü	Fehler 10 Minuten Spannungsmittelwert
f	Fehler Frequenz (Unter- oder Überfrequenz)
Δf	Fehler Frequenzrampe (RoCoF)
ΔΦ	Fehler Phasensprung (PShift)
C	Fehler Rückmeldekontakt - Schütz fälschlich geschlossen
c	Fehler Rückmeldekontakt - Schütz fälschlich offen

#### 3.9.2 Systemfehler

1.060      Error
M: UΔ UY Ü f Δf ΔΦ C
S: T0123456789ABCDEF
ENT ->

Fehlerarten:

T	Fernabschaltung aktiv
0-9, A-F	Tritt einer dieser Fehler permanent auf, kontaktieren Sie bitte unseren technischen Support.

Im Auslieferungszustand befinden sich im Fehlerspeicher Systemfehleinträge. Diese entstehen werkseitig bei der Endprüfung des Gerätes, bei der diese Fehler bewusst herbeigeführt wurden. Da der Fehlerspeicher nicht lösbar sein darf, stellen diese Einträge keinen Gerätefehler dar und können ignoriert werden.

### 3.9.3 Fehlerspeicher (LOG)

Die Anzeige des Fehlerspeichers für max. 50 LOGs befindet sich in Ebene 2.  
Im Fehlerspeicher wird sowohl das Auftreten als auch das Wegfallen jedes Fehlers mit einem Zeitstempel gespeichert. Ein Eintrag ohne Fehlercodes ist daher kein Fehlerverhalten.

```
2.0nn Error
M: UΔ UY Ü f Δf ΔΦ C
S: T0123456789ABCDEF
t: 9999d 15h 03m 01s
```

nn ... Nummer des Eintrages im Fehlerspeicher  
t ... Zeitstempel: Zeitdauer seit Aufta...r in Tagen/Stunden/Minuten/Sekunden

## 3.10 Neuheiten länderspezifische Parametersätze

### 3.10.1 VDE-AR-N 4105:2018

Bei den 3 Parametersätzen der VDE-AR-N 4105 (ID:311,312,313) gilt folgendes für die Inbetriebnahme:

Bei der Inbetriebnahme ist darauf zu achten, dass nur mehr ein Kuppelschalter (an R1) angewendet werden soll. VDE-AR-N 4105 für Umrichter bildet hier eine Ausnahme- hier müssen weiterhin 2 Kuppelschalter (an R1 und R2) zur Anwendung kommen.

Im Weiteren müssen die/der Rückmeldekontakt/e an den dafür vorgesehenen digitalen Eingängen I1(2) und 1 angeschlossen sein. Letztendlich wird unter Parameter 3.099 festgelegt, ob es sich bei den/m Rückmelde-kontakt/en um normally closed (n.c.) oder normally open (n.o.) handelt.

Am Display erscheint ein Error C (Contact), insofern dies nicht berücksichtigt wurde. XUFD darf für die VDE-AR-N 4105 während Error C die Ausgangsrelais R1 und R2 nicht einschalten, solange die Rückmeldekontakte nicht korrekt angeschlossen und parametriert sind.

#### Contact Error-Reset:

Liegt UN 3x400V AC ordnungsgemäß an, kann erst durch Drücken der Taste Esc (Ebene 1.010) oder Ent (Ebene 1.050) ein Reset durchgeführt werden. Der Contact Error wird dadurch gelöscht und die Ausgangsrelais R1 und R2 ziehen nach Ablauf der Einschaltzeit an.

Ein bestehender Contact Error kann zusätzlich über R3 an die Erzeugungsanlage gemeldet werden. In diesem Zusammenhang möchten wir auf Kapitel 3.6 „Testfunktion“ hinweisen (Ermittlung der Auslösezeit des Kuppelschalters).

#### Neuer Parameter T ConDelOn:

Durch Synchronisereinrichtungen oder Leistungsschalter ist es erlaubt, dass nach der Freigabe durch das XUFD der/die Kuppelschütz/e erst verzögert eingeschaltet werden. Daher erfolgt auch die Rückmeldung vom Rückmeldekontakt verzögert. Die zulässige Ansprechverzögerung wird mit dem **Parameter 3.110**.

**T ConDelOn** definiert. In der Grundeinstellung ist diese Zeit mit **100ms** parametriert und kann bis auf maximal 300.000ms (5min) gestellt werden. Die Konformität ist bis 10.000ms gewährleistet.

#### Kriterien für den eingesetzten Kuppelschalter:

Bei den eingestellten 100 ms Auslösezeit für die unterschiedlichen Schutzfunktionen ergibt sich bei den **deutschen Parametersätzen** eine maximale Auslösezeit des XUFD von 119ms. Um die Gesamtauslösezeit von ≤200ms (XUFD + Kuppelschalter) zu gewährleisten, **muss der eingesetzte Kuppelschalter innerhalb von 81ms auslösen** können.

#### Passwortschutz:

Die Geräte sind bezüglich der VDE-AR-N 4105 bei Auslieferung mit einem fixen Passwortschutz versehen. Das Passwort lautet „4105“. Der Inbetriebnehmer ist aufgefordert, das Passwort aus Sicherheitsgründen unverzüglich zu ändern.

### 3.10.2 C10/11:2021

#### Schutzfunktion Zero Sequence:

Die Erfassung der Zero Sequence (Uzero) im Dreiphasensystem bildet eine weitere Ergänzung der Schutzfunktionen. Durch die Zero Sequence können beispielsweise Kurzschlüsse im übergeordneten Mittelspannungsnetz erfasst werden. Dazu werden die drei im Normalfall um 120° verschobenen Sternspannungen L1, L2 und L3 sowohl unter Betrachtung der Betrages als auch der Phasenlage zueinander addiert, die so entstehende betragsmäßige Spannungsdifferenz (ohne Winkel) zum Neutralleiter ermittelt und durch drei dividiert.

Wenn alle drei Sternspannungen den gleichen Betrag aufweisen und exakt 120° zueinander verschoben sind, beträgt die Zero Sequence 0VAC.

In der derzeit gültigen Fassung der C10/11 beträgt der Grenzwert für die Zero Sequence 20% Un (46VAC). Bei Überschreitung dieses Grenzwertes >1,5s schalten R1 und R2 ab und schalten nach Ablauf der Ton delay erst wieder ein, wenn die Zero Sequence 15% Un (34,5VAC) unterschreitet. Die zugehörigen Parameter findet man im Parametersatz ID:603 von 3.115 bis 3.118 (siehe Anhang).

Für die Ermittlung der Zero Sequence wird der Connection Mode 4-wire (LN+LL) benötigt. Dieser ist im Parametersatz ID 603 für C10-11:2021 LV-IP standardmäßig aktiviert und darf bei vorgeschriebener Schutzfunktion Zero Sequence durch den lokalen Netzbetreiber auch nicht abgeändert werden. Im Parametersatz ID 653 für C10-11:2021 HV-IP muß die Ermittlung der Zero Sequence mit dem lokalen Netzbetreiber individuell abgesprochen und entsprechend eingestellt werden.

Für eine fehlerfreie Erfassung der Zero Sequence darf keiner der 3 Winkel (Phi1, Phi2 oder Phi3) zwischen L1, L2 und L3 größer als 180° werden. Des Weiteren muss die Drehrichtung der 3 Phasen L1→L2→L3 unbedingt eingehalten werden. Dazu müssen L1, L2 Und L3 des öffentlichen Netzes parallel zu den Anschlüssen L1, L2 und L3 des XUFD angeschlossen werden. Für die Erfassung der Zero Sequence ist der Neutralleiter verpflichtend anzuschließen (auch aufgrund Connection Mode 4-wire (LN+LL)).

#### Aktivierung des narrower frequency window:

Diese basiert auf 2 Kriterien der lokal vorherrschenden Spannungen bei Inselbildung. Bei Ansprechen wird zusätzlich zur normalen Frequenzüberwachung  $\leq 47,5\text{Hz}$  und  $\geq 51,5\text{Hz}$  ( $<100\text{ms}$ ) ein engeres Frequenzfenster  $<49,7\text{Hz}$  und  $>50,3\text{Hz}$  ( $500\text{ms}$ ) überwacht und bildet so eine weitere Schutzfunktion für eine Abschaltung von R1 und R2 zur Netztrennung.

1. Kriterium: Aktivierung des narrower frequency window bei Überschreitung Ures-anfw  $> 5\%$  Un (Ures-anfw =  $3 \cdot$  Uzero). Zugehörige Parameter für Deaktivierung beispielsweise beginnend von 3.119 bis 3.122.  
Bei diesem Kriterium ist zu beachten, dass es bereits bei kleinsten betraglichen Änderungen einer der 3 Sternspannungen  $<218,5\text{VAC}$  (bei Un = 230VAC) oder einer Winkeländerung einer der drei Sternspannungen um  $>2,87^\circ$  zur Aktivierung des narrower frequency windows kommt.
2. Kriterium: Aktivierung des narrower frequency window bei Unterschreitung bei einer der drei Sternspannungen  $<85\%$ . Dieses Kriterium ersetzt die Messung der mit- und gegenläufigen symmetrischen Komponenten des 3-Phasensystems. Zugehörige Parameter für beispielweise Deaktivierung Beginnend mit 3.123 bis 3.126.

Eine weitere Möglichkeit zur Aktivierung des narrower frequency windows ist das Brücken des digitalen Einganges I5 mit L, um hier weitere Messmöglichkeiten anschließen zu können, wie in der EN50549-1:2019 + AC:2019 empfohlen (siehe Anschlussbild 4 (C10/11)).

**Wichtig:** Die Einstellungen zur Aktivierung des narrower frequency window (3.062 bis 3.069 und 3.119 bis 3.126) müssen unbedingt mit dem lokalen Netzbetreiber abgesprochen und dokumentiert werden.

### 3.10.3 EN50549-1/2:2019 (Voreinstellungen Niederlande)

Für die europäische EN50549-1/2 gelten betreffend der Aktivierung des narrower frequency window die gleichen Voraussetzungen wie unter Kapitel 3.10.2 Die entsprechenden Parameter (3.062 bis 3.069 und 3.119 bis 3.126) sind allerdings deaktiviert und müssen nach Absprache mit dem lokalen Netzbetreiber parametriert werden. Im Weiteren kann in den Parametersätzen der EN50549-1/2 ebenfalls die Schutzfunktion Zero Sequence aktiviert werden wie in 3.10.2 erwähnt. Die Voreinstellungen im Parametersatz sind für die standardmäßigen Schutzfunktionen der Niederlande ausgelegt.

### 3.10.4 OPEN\_SETUP

Innerhalb des Parametersets 9006\_OPEN\_SETUP können ab sofort Spannungsschwellwerte für die Deaktivierung aller 3 möglichen Frequenzüberwachungen aktiviert werden. Aktivierung/Deaktivierung erfolgt mit Parameter .046 für LL-Messungen und Parameter .050 für LN-Messungen. Mit .047 (für LL) bzw. mit .051 (für LN) können im Weiteren die Spannungsschwellen für die Deaktivierung der Frequenzüberwachungen eingestellt werden. In den meisten Ländern bewegen sich diese um die 20%Un. Die Hysterese für die abermalige Zuschaltung ist automatisch mit 1% definiert. Beim OPEN\_SETUP können auch die Zero Sequence als die Activation of narrower frequency band aktiviert werden.

## 4 Bedienung und Inbetriebnahme

### 4.1 Erste Inbetriebnahme

Das XUFD wird ohne voreingestellten Standard ausgeliefert. Deswegen wechselt die Anzeige beim ersten Einschalten auf die Parametersatz-Abfrage (Ebene 5, Menüpunkt 5.001). Der einzusetzende Standard muss mit den Tasten +/- ausgewählt und mit ENTER bestätigt werden. Weitere Informationen befinden sich in 4.3 „Menüstruktur“.

### 4.2 Menüführung

Die Anzeigeeinheit besteht aus einem 4 zeiligen Text-Display mit je 20 Zeichen pro Zeile. Die Anzeige hat 5 Ebenen. Mittels + und - kann durch die verschiedenen Anzeigen der Ebenen navigiert werden.

#### 4.2.1 Ebene 0

##### *Startanzeige (Anzeige für 5 Sekunden beim Power Up)*

Hier werden Basisinformationen wie die SW-Version und die Geräte-ID angezeigt. Diese Anzeige erscheint nach dem Einschalten und bleibt für 5s sichtbar. Danach springt die Anzeige auf das erste Fenster in Ebene1.

#### 4.2.2 Ebene 1

##### Messwerte (Anzeige 1.010-1.032)

Anzeige der aktuellen Messwerte.

Außerdem wird hier angezeigt, ob das Parameterset der Default Konfiguration entspricht (dflt - default = Grund- oder Werkseinstellung), innerhalb der normativ zulässigen Grenzwerte editiert wurde (edit - edited = bearbeitet) oder außerhalb der normativ zulässigen Grenzwerte eingestellt ist (ncnf - non conform = nicht mit der ausgewählten Norm bzw. dem ausgewählten Standard konform).

Gegebenenfalls Anzeige Zeitablauf „reconnection timer“ (Zuschaltzeit) in Sekunden.

Navigation +/- Von diesen Anzeigen gelangt man mittels ENT in Ebene 3

##### Digitale Inputs und Abschaltzeit (Anzeige 1.040)

Anzeige der aktuellen Zustände der digitalen Eingänge, sowie der letzten Abschaltzeit (Toff) der angeschlossenen Schütze (für zweikanalige Systeme der jeweils größere Wert).

##### Test/Reset (Anzeige 1.050)

Durch Betätigen der ENT-Taste wird ein Relaistest ausgelöst. Dabei schalten die Relais A und B ab und der „reconnection-timer“ (Zuschaltzeit) beginnt abzulaufen.

Im Weiteren kann mit der Test/Reset-Funktion ein Reset-Ereignis durchgeführt werden, dass die Relais 1/2 nach einem Contact-Error (C) wieder zuschalten lässt (Notwendig für die drei Parametersätze der VDE-AR-N 4105). Das Test/Reset-Ereignis lässt sich auch durch Drücken der Taste ESC in Ebene 1 durchführen.

##### Error (Anzeige 1.060)

Anzeige aktueller Fehler:

M	Messwertfehler
S	Systemfehler

Navigation +/- Durch Betätigen der ENT-Taste gelangt man in Ebene 2.

#### 4.2.3 Ebene 2

##### Fehlerspeicher

Hier werden die letzten Fehler mit Zeitstempel (Zeit seit dem Auftreten) angezeigt. Die Zeit wird nur gezählt, wenn das Gerät versorgt ist. Es werden sowohl positive als auch negative Fehlerflanken gespeichert und angezeigt.

Navigation +/- Von dieser Anzeige gelangt man mittels ESC in Ebene 1.

#### 4.2.4 Ebene 3

##### Parameteranzeige

Hier werden für den jeweiligen Parametersatz die sichtbar geschaltenen Parameter angezeigt.

Navigation +/- . Von dieser Anzeige gelangt man mittels ESC in Ebene 1.

Mittels PROG (plombierbar) gelangt man in den Editiermodus des gewählten Parameters.

Ist das Passwort „0000“ wird die Passwortabfrage übersprungen und man gelangt direkt in den Editiermodus in Ebene 5.

Wurde innerhalb der letzten 60 Sekunden ein gültiges Passwort eingegeben, so wird ebenfalls die Passwortabfrage übersprungen und man gelangt direkt in Ebene 5.

Wurde ein Passwort ungleich „0000“ festgelegt, so gelangt man zur Passworteingabe in Ebene 4.

#### 4.2.5 Ebene 4

##### Passworteingabe

Mit +/- kann die jeweils aktive Stelle des Passwortes inkrementiert / dekrementiert (0...9) werden.

Mit ENT wird auf die jeweils nächste Stelle der Passworteingabe gesprungen.

Nach Drücken von ENT bei der 4. Stelle wird das eingegebene Passwort überprüft.

Mit ESC wird auf die jeweils vorhergehende Stelle der Passworteingabe gesprungen.

Nach Drücken von ESC bei der 1. Stelle des Passwortes wird in Ebene 3 zurückgesprungen.

Sollten Sie das eingestellte Passwort vergessen haben, kontaktieren Sie bitte unter Bekanntgabe der Geräte-ID unseren technischen Support. Sie erhalten ein nur für Ihr Gerät gültiges Masterpasswort.

#### 4.2.6 Ebene 5

##### Parametereditierung

In dieser Ebene kann der zuvor in Ebene 3 ausgewählte Parameter mit +/- geändert werden.

Bestätigt wird mit ENT. Mit ESC wird die Änderung verworfen. In beiden Fällen springt die Anzeige auf den entsprechenden Parameter in Ebene 3.


Außerdem wird hier angezeigt, ob der Wert des gerade bearbeiteten Parameters der Defaultkonfiguration entspricht (dflt - default = Grund- oder Werkseinstellung), innerhalb der normativ zulässigen Grenzwerte editiert wurde (edit - edited = bearbeitet) oder außerhalb der normativ zulässigen Grenzwerte eingestellt ist (ncnf - non conform = nicht mit der ausgewählten Norm bzw. dem ausgewählten Standard konform).

Neben Schwellen, Zeiten und Modi sind auch die 4 Stellen des Passwortes je 1 Parameter.

Auch der aktuelle Standard ist ein Parameter, d.h. durch Ändern dieses Parameters wird der neue ausgewählte Standard aktiviert. Sämtliche bisherigen Änderungen werden dabei verworfen.

Wird der bereits eingestellte Standard ausgewählt, wird der Standard auf Werkseinstellungen (default) zurückgesetzt.

### 4.3 Menüstruktur

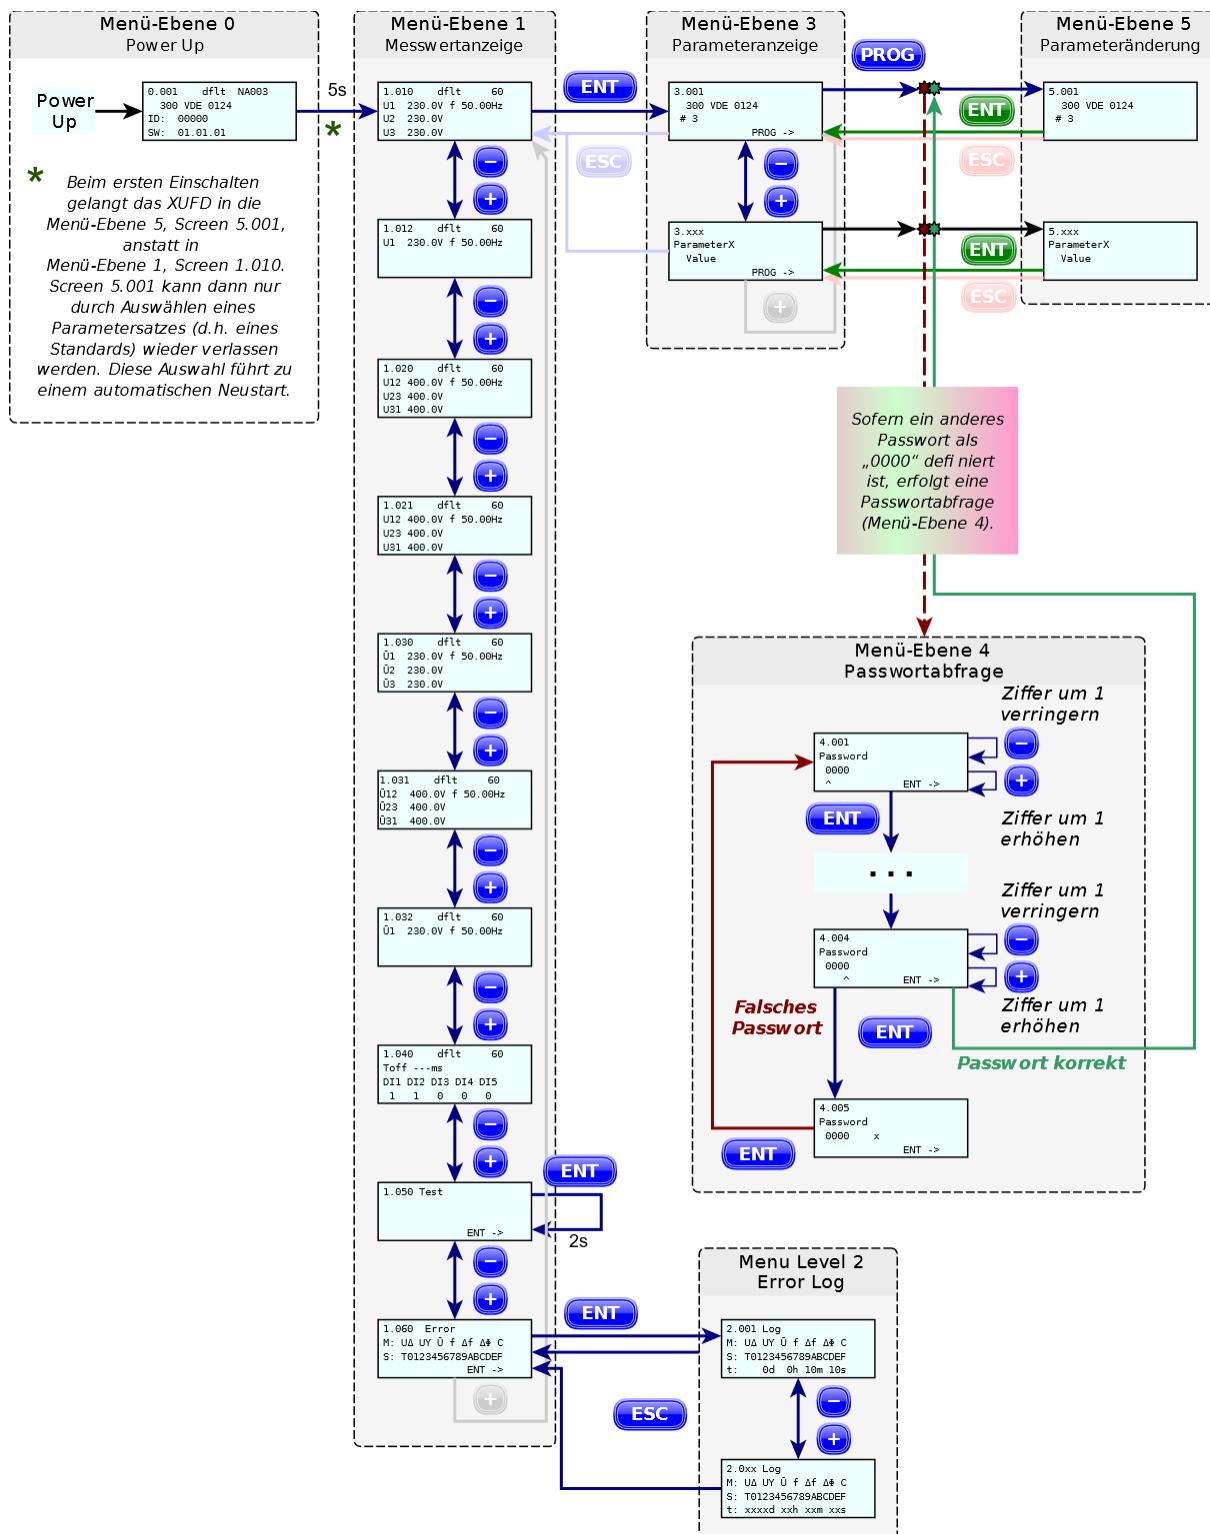

**Anmerkung Menü-Ebenen 1, 3, 5:**

- dflt = default
- edit = edited
- ncnf = non-conform

In Menü-Ebene 1 beziehen sich diese Kennzeichnungen auf den gesamten eingestellten Standard, in den Menü-Ebenen 3 und 5 nur auf den jeweils angezeigten Parameter.

**Anmerkung zur Messwertanzeige, Menü-Ebene 1:** Die Anzeige ist abhängig vom eingestellten Standard sowie von der Konfiguration, insbesondere von 3.003 Connection:

Einstellwert 3.003 Connection	Verfügbare Screens in Menü-Ebene 1
2-wire	1.012, 1.032
3-wire	1.021, 1.031
4-wire (LN)	1.010, 1.030
4-wire (LN+LL)	1.010, 1.020, 1.030

**Anmerkungen zum Passwort:** Bei einem Wechsel des Standards wird das Passwort auf „0000“ zurückgesetzt (Ausnahme: VDE-AR-N 4105, Standard-Passwort „4105“, siehe 4.2, 3.10.1).

Ist das Passwort „0000“, kommt es zu keiner Passwortabfrage. Nach korrekter Passworteingabe erfolgt keine weitere Passwortabfrage mehr, solange nicht die Menü-Ebene 3 bzw. 5 verlassen wird. Wenn für circa 2 Minuten keine Taste gedrückt wurde, wird automatisch in die Messwertanzeige (Menü-Ebene 1) zurückgekehrt, eventuell noch offene Änderungen werden dabei verworfen.

Falls ein gesetztes Passwort vergessen wurde, kann beim Hersteller ein Master-Passwort erfragt werden. Hierfür wird die ID benötigt, die im Screen 0.001 angezeigt wird.

**Anmerkung zum Fehlerspeicher, Screen 1.060 und Menü-Ebene 2:**

M: Messfehler-Flags


- $U\Delta$  = Dreiecksspannung
- $UY$  = Sternspannung
- $\bar{U}$  = Mittelwertspannung
- $F$  = Frequenz
- $\Delta f$  = RoCoF
- $\Delta\Phi$  = Phasensprung
- $C$  = Rückmeldekontakt

S: Systemfehler-Flags

- T = Fernabschaltung
- 0 = CODEID
- 1 = CCODEVERS
- 2 = CODECRC
- 3 = FLASHCRC
- 4 = EEPROMCRC
- 5 = LOGICVERS
- 6 = LOGICCRC
- 7 = reserviert
- 8 = POWER6V
- 9 = POWERDIGINP
- A = MEASCOMPAB
- B = PWDINACTIVE
- C = INTERCOM1
- D = reserviert
- E = reserviert
- F = reserviert

## 4.4 Plombierung

Das Gerät ist nach der Inbetriebnahme mittels einstellbaren Passworts gegen unbefugte Änderungen der schutzrelevanten Einstellparameter zu sichern! Wird der Passwortschutz nicht genutzt oder fordert es die länderspezifische Norm oder der Standard, so ist das Gerät zu plombieren!

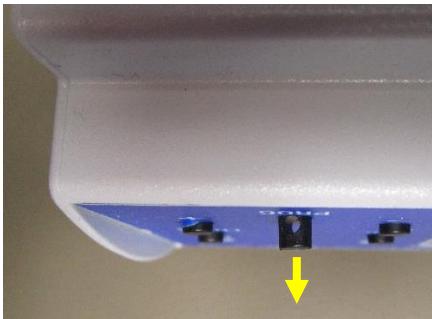

[1.] Die Taste „PROG“ lässt sich (ohne Kraftaufwand!) ein Stück weit herausziehen.



[2.] Diese Taste ist mit einer Bohrung versehen, durch die der Plombierdraht geführt werden kann  
(max. Durchmesser: siehe 4.15.).

## 4.5 Fallbeispiele

### 4.5.1 Einsatz von Spannungswandlern in Mittelspannungsnetzen

Am Beispiel Österreich wird bei Mittelspng. zwischen zwei grundlegenden Spngs.niveaus unterschieden:  
21kV und [31,7kV für Sonderfälle, z.B. Windparks]. Außenleiter (Phase-Phase-Spannung).

Zum Einsatz kommt ein 200:1 Spannungswandler bei Uc=21kV:

1. Wahl des Parametersatzes **852** (OVE/OOE TOR R25 MS SYNC) für synchrone bzw. **853** (OVE/OOE TOR R25 NS ASYNC) für nicht synchrone Erzeugungsanlagen (Umrichter).
2. Parameter .005 (Einstellung der Nominalspannung ULN/LL nom) auf **60.4/105.0V**. Rechnerisch ergibt sich der Wert aus  $21\text{kV} / 200 = 105\text{V}$  (die 60.4V stehen für die Sternspannungen, die bei Mittelspannungsanwendungen nicht relevant sind). Die Einstellmöglichkeiten sind wie mit **60.4/105.0V** beschrieben möglich.

Zum Einsatz kommt ein 200:1 Spannungswandler bei Uc=31,7kV (z.B. Windpark):

1. Wahl des Parametersatzes **852** (OVE/OOE TOR R25 MS SYNC) für synchrone bzw. **853** (OVE/OOE TOR R25 NS ASYNC) für nicht synchrone Erzeugungsanlagen (Umrichter).
2. Parameter .005 (Einstellung der Nominalspannung ULN/LL nom) auf **91.0/158.1V**. Rechnerisch ergibt sich der Wert aus  $31,7\text{kV} / 200 = 158,5\text{V}$  (die 91.0V stehen für die Sternspannungen, die bei Mittelspannungsanwendungen nicht relevant sind). Die Einstellmöglichkeiten sind wie mit **91/158,1V** beschrieben möglich.

Zum Einsatz kommt ein 300:1 Spannungswandler bei Uc=31,7kV (z.B. Windpark):

1. Wahl des Parametersatzes **852** (OVE/OOE TOR R25 MS SYNC) für synchrone bzw. **853** (OVE/OOE TOR R25 NS ASYNC) für nicht synchrone Erzeugungsanlagen (Umrichter).
2. Parameter .005 (Einstellung der Nominalspannung ULN/LL nom) auf **60.4/105.0V**. Rechnerisch ergibt sich der Wert aus  $31,7\text{kV} / 300 = 105,6\text{V}$  (die 60,4V stehen für die Sternspannungen, die bei Mittelspannungsanwendungen nicht relevant sind). Die Einstellmöglichkeiten sind wie mit **60.4/105.0V** beschrieben möglich.

In jedem Fall gilt: Alle Schutzfunktionen U>>, U>, U<<, U< stellen sich automatisch auf die neu eingestellten Spannungsniveaus ein, d.h. hier brauchen nur Änderungen durchgeführt zu werden, wenn diese den Vorgaben des Netzbetreibers nicht entsprechen.

### Änderung der Schutzfunktion U> und U>> nach Vorgaben des Netzbetreibers:

Im Auslieferungszustand (default) betragen diese Schwellen für  $U>\text{off}$   $1,06 \times U_c$  (106%) und für  $U>>\text{off}$   $1,1 \times U_c$  (110%). Sollte der Netzbetreiber hier Einstellungen für  $U>\text{off}$  von beispielsweise  $1,04 \times U_c$  (104%) und  $U>>\text{off}$  von  $1,15 \times U_c$  (115%) verlangen, müssen sowohl Parameter .011 als auch .027 dementsprechend verstellt werden. Gibt es auch abweichende Vorgaben für die Unterspannungsschwellen, so müssen zusätzlich Parameter .015 ( $U<\text{off}$ ) und .031 ( $U<<\text{off}$ ) angepasst werden.


Hinweis: In Niederspungsnetzen wird die Nennspannung  $U_n$  bezeichnet und in Mittelpungsnetzen  $U_c$ .

### **4.5.2 FRT (Fault Ride Through) Fähigkeit von Stromerzeugungsanlagen:**


Die FRT-Fähigkeit muss für die unterschiedlichen Komponenten einer Stromerzeugungsanlage getrennt voneinander betrachtet werden. Die FRT-Fähigkeit von Trennschützen wird in Kapitel 2.6 dargestellt, dabei muss der Errichter der Stromerzeugungsanlage dafür sorgen, dass für die Trennschütze ausreichend Pufferung zur Verfügung steht.

Der Errichter der Stromerzeugungsanlage muss zusätzlich darauf achten, dass sich die Anforderungen aus der FRT (Unterschiedliche Anforderungen zwischen den Ländern) und den Schutzeinstellungen für Unterspannung (Höhe  $U</U<<$  und Time OFF) nicht gegenseitig beeinflussen.


Sollte das XUFD versorgungsseitig (A1/A2) mit dem Hauptnetz verbunden sein (nicht getrennt vom Messkreis versorgt), kann gewährleistet werden, dass folgende FRT-Anforderungen aus der TOR 1.1 und VDE-AR-N 4105:2018 problemlos (auch öfters hintereinander) durchlaufen werden können, ohne dass die Ausgangsrelais R1/R2 fälschlicherweise, bedingt durch das interne Netzteil, abfallen.

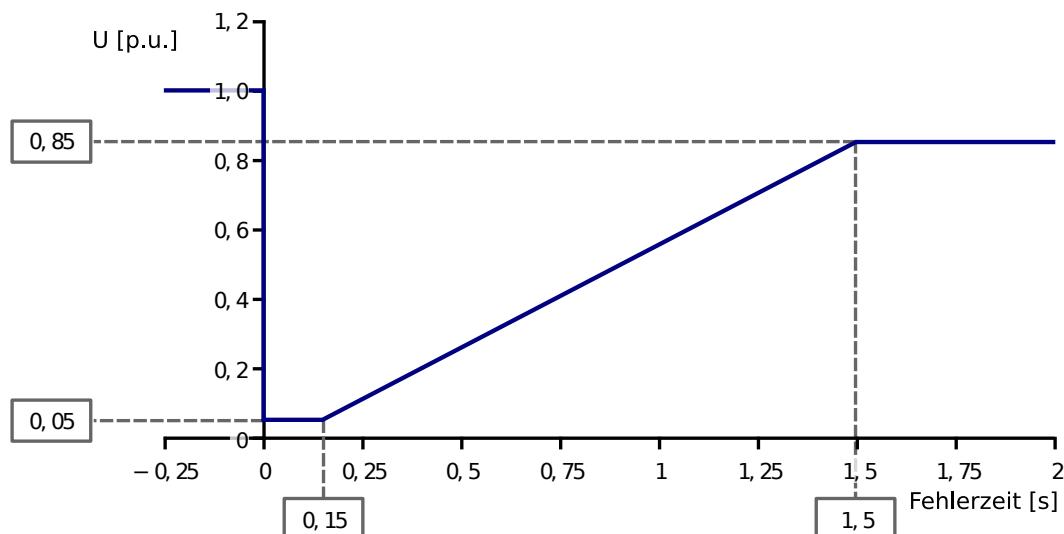

(FRT-Profil nichtsynchrone Stromerzeugungsanlagen nach TOR 1.1 2019; ausgewählt, weil schwierigstes FRT-Verhalten)

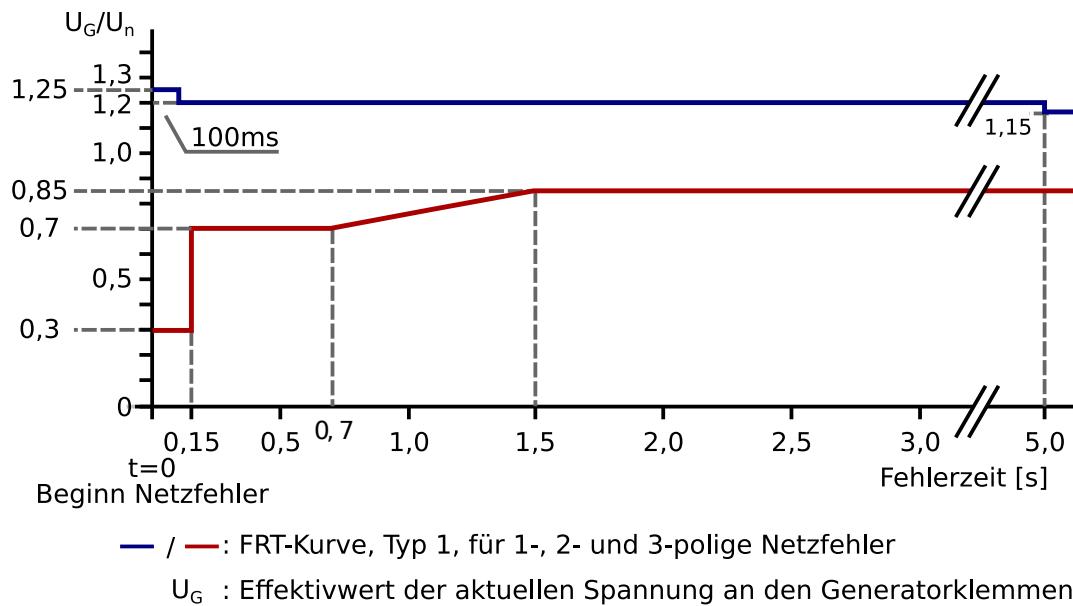

(FRT-Profil nach VDE-AR-N 4105:2018 Typ1 – nur Synchrongeneratoren)

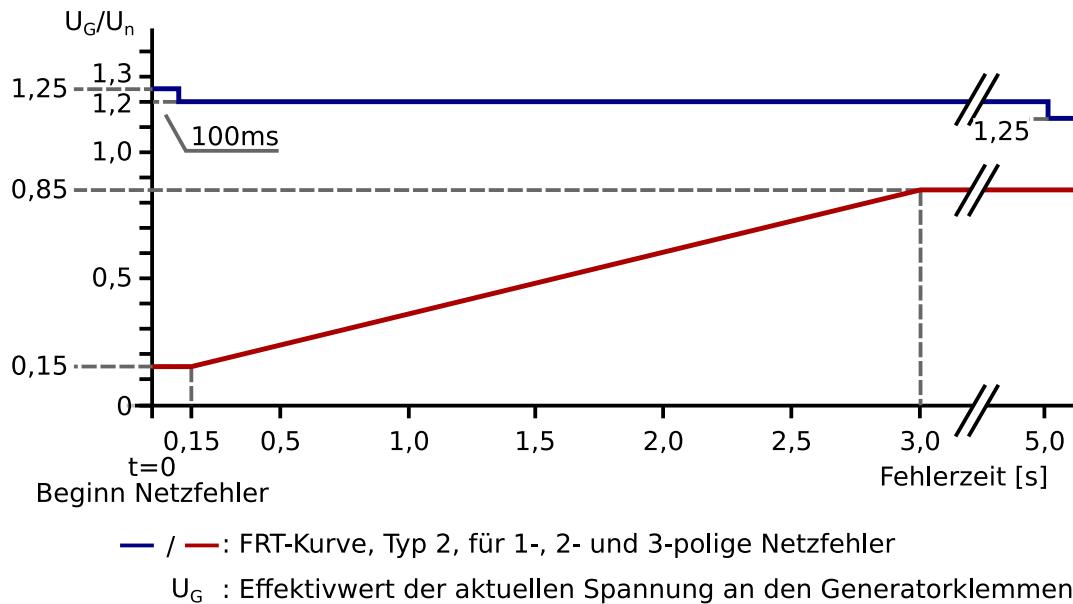

(FRT-Profil nach VDE-AR-N 4105:2018 Typ2 – Umrichter und andere)

Dieses FRT-Verhalten gilt für den gesamten AC-Versorgungsbereich 110-230VAC. Für eine Versorgung mit 24VDC ist das FRT-Verhalten (kein Abfallen der Ausgangsrelais R1/R2) nicht gewährleistet. In diesem Fall muss der Errichter der Stromerzeugungsanlage für eine ausreichende Pufferung der 24VDC Sorge tragen (Geräteverbrauch 1,25W/4VA).

Sollte es zu einem Komplett-Ausfall z.B. von L1 kommen, während A1 und A2 des NA-Schutzes mit L1 und N verbunden sind, kann das interne Netzteil des NA-Schutzes die folgenden Zeiten überbrücken, d.h. es kommt weder zu einem Reset des NA-Schutzes noch fallen die Relais R1/2 ab:

230VAC <580ms


110VAC <200ms

24VDC < 70ms (Schutz getrennt vom Messkreis versorgt)


Die genannte Überbrückung betrifft aber nur das XUFD selbst. Hängt das XUFD mit den Trennschützen zusammen an A1/A2, muß immer eine eigene Berechnung mit dem Eigenverbrauch der Trennschütze durchgeführt werden.

#### 4.5.3 Selbstthalteschaltung für Fernabschaltung mit manueller Freigabe

Für spezielle Anwendungen kann vom Netzbetreiber gefordert werden, dass nach einer Fernabschaltung erst wieder manuell freigegeben (zugeschaltet) werden darf. Das ist momentan durch die Verwirklichung einer Selbstthalteschaltung möglich:

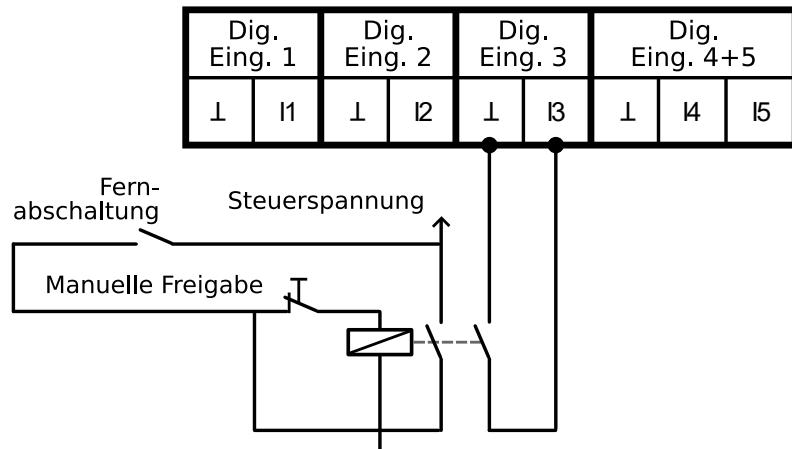

#### 4.5.4 Anschluss eines Rundsteuerempfängers für Leistungsreduktion 0%

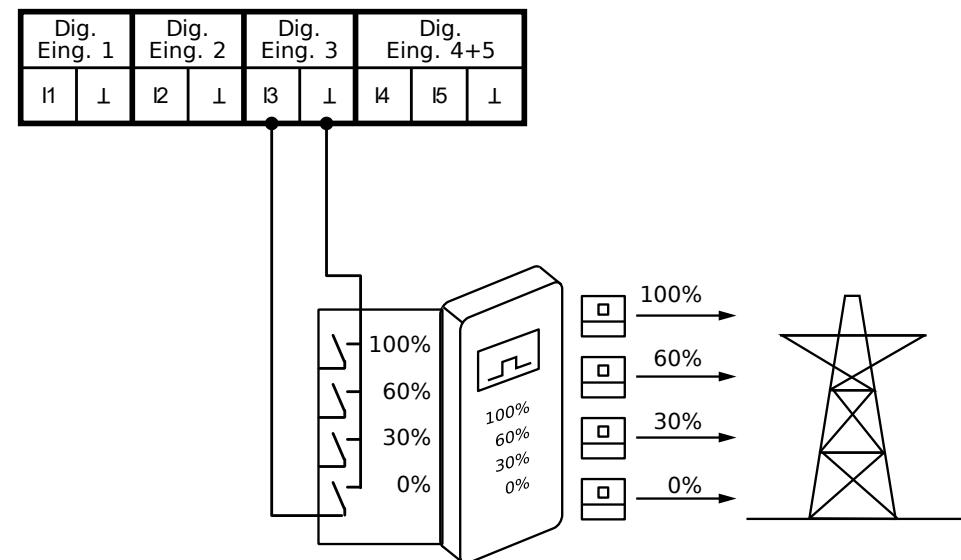

## 4.6 Versorgungskreis

Klemmen	A1 (L bzw. +); A2 (N bzw. -)
Versorgungsspannung	DC: 24V AC: 110 – 230V
Toleranz der Versorgungsspannung	DC: $\pm 10\%$ AC: $\pm 30\%$
Nennverbrauch	max. 1,25W / 4VA @ 230V AC
Nennfrequenz	50 / 60Hz
Toleranz der Nennfrequenz	48 – 63Hz
Einschaltdauer	100%
Wiederbereitschaftszeit	6 Sekunden + eingestellte Einschaltverzögerung
Abfallspannung	7V
Überspannungskategorie	III
Bemessungsstoßspannung	6 kV
Interne Absicherung	250V / 500mA träge (eingelötet)

Um die Gerätefunktion während eines Netzausfalls zu gewährleisten, ist das Gerät über eine externe USV-Anlage zu versorgen!

## 4.7 Messkreis

Klemmen	L1-L2-L3-N
Messeingang	3x 400V AC
Eingangswiderstand	1MΩ
Messgrößen	Außenleiterspannung, Sternspannung, 10 Minuten Spannungsmittelwert, Frequenz, Frequenzänderung (RoCoF), Phasensprung (PShift), Zero Sequence

## 4.8 Messbereiche

Außenleiterspannung	0 - 560VAC
Sternspannung	0 - 325VAC
Frequenz	40 - 65Hz (gemessen zw. L1/N)
RoCoF	100mHz/s - 2.000mHz/s
Pshift	1 - 15°
Überlastbarkeit	Dauerhaft $1,4 \times U_{\text{Nom}}$ Impuls $1,6 \times U_{\text{Nom}}$ (1 Sekunde)
Überspannungskategorie	III
Bemessungsstoßspannung	4 kV

## 4.9 Digitale Eingänge

Klemmen	I1 und $\perp$ ; I2 und $\perp$ ; I3 und $\perp$ ; I4 bzw. I5 und $\perp$ I1, I2, I3 können als n.c., n.o. und dis. konfiguriert werden
Kontaktart	Potentialfrei (max. Leitungslänge 30m, Verlegung als Steuerleitung, getrennt von Energiekabeln)
Schaltleistung	24V DC / 5mA

## 4.10 Ausgangskreis

Klemmen	11-12-14; 21-22-24; 31-32-34
Anzahl und Art der Kontakte	3 Wechsler
Kontaktmaterial	AgNi
Schaltleistung	5A / 250V AC
Schalthäufigkeit elektrisch (AC-1)	$100 \times 10^3$ Schaltspiele
Schalthäufigkeit mechanisch	$15 \times 10^6$ Schaltspiele
Dauerlast	5A
Impulslast (1s)	5A
Spannungsfestigkeit offener Kontakte	Relaiskontakte: 1000V <sub>rms</sub> Klemmen: 450V <sub>rms</sub>
Überspannungskategorie	III
Bemessungsstoßspannung	4 kV
Absicherung	5A flink

## 4.11 Genauigkeit

Spannungsmessung:	
Grundgenauigkeit	< 0,5% @ +25°C
Temperatureinfluss	< 0,01%/°C
Auflösung	10mV
Frequenzmessung:	
Grundgenauigkeit	< 0,01Hz @ +25°C
Temperatureinfluss	< 0,0002Hz/°C
Auflösung	1mHz
Anlaufverzögerung Ton delay	0...600s $\pm$ 0,6%
Ansprechverzögerung (TIME OFF) tUTHR OFF	0...300s $\pm$ 0,6%
Rückfallverzögerung tUTHR ON_total	130ms $\pm$ 45%
Ansprechverz. bei Überspng. tover	95ms $\pm$ 50%
Ansprechverz. bei Unterspng. tunder	95ms $\pm$ 40%
Ansprechzeit, toff_total_over/under	$\text{toff\_total\_over} = \text{tovver} + \text{tUTHR OFF}$ $\text{toff\_total\_under} = \text{tunder} + \text{tUTHR OFF}$
Überschwingzeit	40ms

## 4.12 Isolationsdaten

Bemessungsisolationsspannung	400V
Isolierung	
Versorgungskreis / Messkreis	Sichere Trennung
Versorgungskreis / Ausgangskreis	Sichere Trennung
Versorgungskreis / Digitale Eingänge	Sichere Trennung
Ausgangskreis / Messkreis	Basisisolierung
Ausgangskreis / Digitale Eingänge	Basisisolierung

## 4.13 Umgebungsbedingungen

Umgebungstemperatur Betrieb	-25 bis +65°C
Umgebungstemperatur Lagerung	-40 bis +70°C
Anzeigefähigkeit Display	-15 bis +65°C
Relative Luftfeuchtigkeit	5 bis 95%
Verschmutzungsgrad	2
Gewicht	300g
MTTF	93000h (für Displaytemperatur 25°C ±5°C)

## 4.14 Elektrischer Anschluss

Anschlussquerschnitt	max. 2,5mm <sup>2</sup>
Abisolierlänge	max. 8mm
Elektrische Belastbarkeit der Klemmen: Relaisausgänge / Digitale Eingänge Messeingänge	max. 450V/16A max. 750V/16A
Anzugsdrehmoment	max. 0,5Nm
Schraube	M3, Längsschlitz für Schraubendreher 0,6 × 3,5mm
Digitale Eingänge und Ausgangsrelais	Keine Beschränkung für gleichzeitigen Betrieb von Ein- und Ausgängen.

## 4.15 Plombierdraht

Drahdurchmesser	Ø max. 1,32mm
-----------------	---------------

## 4.16 Schutzart

Klemmen	IP 20
Gehäuse	IP 20

## 5 Settings der implementierten Parametersätze

Definition zu den folgenden Tabellen:

Grau hinterlegte Zeilen bedeuten, dass die zugehörigen Parameter editierbar sind. Alle anderen Parameter sind nicht verstellbar.

### 5.1.1 Connection Modes

2-wire	Es wird nur die Spannung zwischen L1 und N ausgewertet
3-wire	Es werden nur die Außenleiterspannungen $U_{L1-L2}$ , $U_{L2-L3}$ und $U_{L3-L1}$
4-wire (LN)	Es werden nur die Sternleiterspannungen $U_{L1-N}$ , $U_{L2-N}$ und $U_{L3-N}$ ausgewertet
4-wire (LN+LL)	Es werden sowohl die Sternspannungen $U_{L1-N}$ , $U_{L2-N}$ und $U_{L3-N}$ als auch die Außenleiterspannungen $U_{L1-L2}$ , $U_{L2-L3}$ und $U_{L3-L1}$ ausgewertet

### 5.1.2 Einheiten

%Unom	Prozent der Nennspannung (Nennspannungsfaktor)
-------	--

### 5.1.3 Funktionale Sicherheit

Errtol 2ch	es werden 2 getrennte Schütze mit 2 getrennten Hilfskontakten angeschlossen
Errtol 1ch	es wird 1 externer Schütz mit 1 Hilfskontakt angeschlossen

### 5.1.4 Operational Mode

Hier kann zwischen 2 verschiedenen Betriebsmodi umgeschaltet werden  
Wird momentan nur für die CEI-021 verwendet

Mode 0:	transitory mode
Mode 1:	definitive mode

### 5.1.5 Schwellen

$U_{THR}$ OFF	Spannungsschwelle für Abschaltung
$U_{THR}$ ON	Spannungsschwelle für Zuschaltung
$f_{THR}$ OFF	Frequenzschwelle für Abschaltung
$f_{THR}$ ON	Frequenzschwelle für Zuschaltung
$RoCoF_{THR}$ OFF	Frequenzänderungsschwelle für Abschaltung
$RoCoF_{THR}$ ON	Frequenzänderungsschwelle für Zuschaltung
$PShift_{THR}$ OFF	Phasensprungschwelle für Abschaltung
$PShift_{THR}$ ON	Phasensprungschwelle für Zuschaltung

### 5.1.6 Zeiten

Time OFF	Abschaltverzögerung
T on delay	Einschaltverzögerung
F wnd	window length frequency measuring (beobachtetes Zeitfenster, das für die Ermittlung der Frequenzgröße f / Hz herangezogen wird, einstellbar von 0,1s bis 1s abhängig vom verwendeten Parametersatz)
RoCoF wnd	window length RoCoF (Rate of Change of Frequency) measuring (beobachtetes Zeitfenster, das für die Ermittlung des RoCoF Hz/s herangezogen wird, einstellbar von 0,1s bis 1s abhängig vom verwendeten Parametersatz)
PShift wnd	window length PShift (Phase Shift) measuring (beobachtetes Zeitfenster, das für die Ermittlung des PShift / ° herangezogen wird, einstellbar von 0,1s bis 1s abhängig vom verwendeten Parametersatz, wobei nur eine Einstellung von 0,1 bis 0,6s Sinn ergibt. Ein Pshift wnd von 0,6s bis 1s wirkt sich nicht auf die Gesamtabschaltverzögerung aus)
Gesamtabschaltverz.	Diese setzt sich bei der Messung von Frequenz, RoCoF oder Pshift wie folgt zusammen: <ul style="list-style-type: none"> <li>• Frequenzmessung:  <math display="block">\text{TIME OFF gesamt}_f = \text{Time OFF}_f + F \text{ wnd}</math> </li> <li>• RoCoF-Messung:  <math display="block">\text{TIME OFF gesamt}_{\text{RoCoF}} = \text{Time OFF}_{\text{RoCoF}} + \text{RoCoF wnd}</math> </li> <li>• Phase-Shift-Messung:  <math display="block">\text{TIME OFF gesamt}_{\text{PShift}} = \text{Time OFF}_{\text{PShift}} + \text{PShift wnd}</math> </li> </ul>

### 5.1.7 Hilfskontakt

Bei geforderter funktionaler Sicherheit ist das Rücklesen der Stellung der angesteuerten Schütze (über zwangsgeführte Hilfskontakte) notwendig. Für diese Hilfskontakte kann folgendes ausgewählt werden:

Contact n.c. (normally closed) Hilfskontakt ist ein Öffner (empfohlene Ausführung)

Contact n.o. (normally opened) Hilfskontakt ist ein Schließer

Contact dis. (disabled) Hilfskontakt wird ignoriert (unzulässig für Standards, die funktionale Sicherheit fordern)

Contact t Einstellung der Zeit beim Abschalten, die vergehen darf, bis der Hilfskontakt an I1/2 zurückmelden muss, ansonsten wird ein contact error angezeigt


T ConDelOn Einstellung der Zeit beim Zuschalten, die vergehen darf, bis der Hilfskontakt des Kuppelschalters an den Klemmen I1/2 zurückmelden muss. Andernfalls wird R1/2 abgeschaltet und ein contact error angezeigt. Zusätzlich wird R3 aktiviert.

### 5.1.8 Ranges

Conformity Range	Innerhalb dieser Grenzen ist das Gerät normkonform konfiguriert. Außerhalb dieser Grenzen ist das Gerät nicht mehr normkonform und die entsprechenden Zertifikate verlieren ihre Gültigkeit. Dieser Status wird am Display durch die Kennung „ncnf“ dargestellt. Einstellungen außerhalb dieses Bereiches liegen somit in der Verantwortung des Betreibers und/oder der Abnahmestelle der Anlage.
Possible Range	Technisch möglicher Einstellbereich

## 6 Sicherheitskonzept

Das System besteht aus drei Microkontrollern. CH\_A und CH\_B sind die Messkanäle. Diese erfassen, berechnen und überwachen die Messwerte, lesen den Eingang für den Rückmeldekontakt ein und schalten eigenständig das zugehörige Relais. Beide Messkanäle sind redundant aufgebaut (u.a. Spannungsreferenz, Zeitbasis). Der dritte Kontroller CH\_D überwacht beide Messkanäle auf Abweichungen, steuert die Benutzerschnittstelle (LEDs, Display, Tasten) und kontrolliert nicht-sicherheitsrelevante Ein- und Ausgänge.

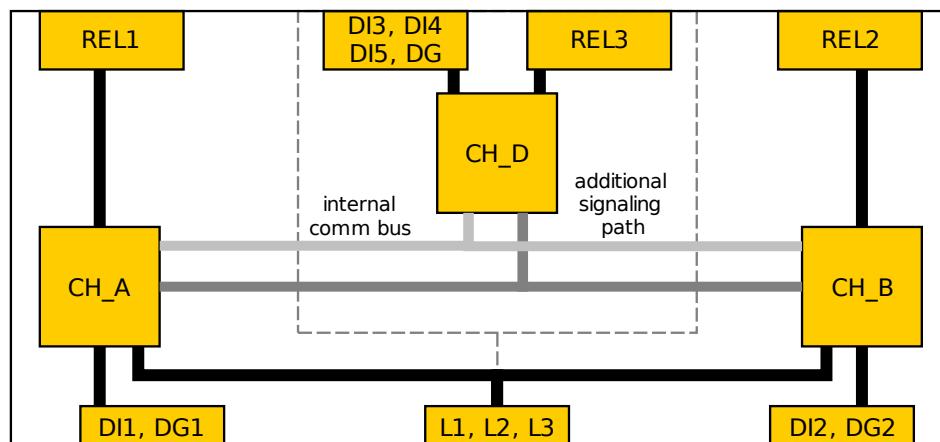

### Fehlerbehandlung

Fehler werden in drei Klassen eingeteilt:

1. **Grenzwertüberschreitung**  
Dabei handelt es sich um einen normalen Betriebszustand. Dazu zählt unter anderem die Erkennung einer Überspannung oder Unterfrequenz. Diese Fehler werden nach der normativen Spezifikation behandelt. Normalerweise werden die Relais von CH\_A und CH\_B nach einer Auslöseverzögerung abgeworfen. Nachdem der Fehler nicht mehr erkannt wird und alle anderen Parameter innerhalb der zulässigen Grenzen sind, werden die Relais nach einer Einschaltverzögerung wieder zugeschaltet.
2. **Nicht-kritische Systemfehler**  
Diese Fehler deuten auf ein Problem hin, sind aber nicht sicherheitskritisch. Dazu zählen eine zu niedrige Versorgungsspannung, ein als offen erkannter Rückmeldekontakt, der geschlossen sein sollte oder vereinzelte Fehler in der internen Kommunikation.
3. **Kritische Systemfehler**  
Diese Fehler sind sicherheitskritische Fehler. Dazu zählen unter anderem eine zu hohe Messabweichung der beiden Messkanäle, die Speicherintegrität ist nicht gegeben. Wird ein solcher Fehler erkannt, geht das System in den Sicherheitszustand (Relais im Ruhezustand – OFF).

### **Systemfehler:**

- T Fernabschaltung aktiv
- 0 CH\_A oder CH\_B enthält ungültige Software (CODEID)
- 1 Software in CH\_A und CH\_B ist unterschiedlich (CODEVERS)
- 2 Fehlerhafte Prüfsumme des Codespeicher (CODECRC)
- 3 Fehlerhafte Prüfsumme der Firmware (derzeit nicht verwendet - FLASHCRC)
- 4 Fehlerhafte Prüfsumme des EEPROM (EEPROMCRC)
- 5 Konfiguration ist inkonsistent (LOGICVERS)
- 6 Fehlerhafte Prüfsumme der Konfiguration (LOGICCRC)
- 8 Fehler in der Versorgungsspannung für die Ausgänge (POWER6V)
- 9 Fehler in der Versorgungsspannung für die Eingänge (POWERDIGINP)
- A Abweichung der Messkanäle (MEASCOMPAB)
- B Password-Abfrage deaktiviert (PWDINACTIVE)
- C Messkanal kommuniziert intern nicht (INTERCOM1)
- 7, D-F Reserviert

## 7 Glossar

OVE	Österreichischer Verband für Elektrotechnik
TOR	Technische und organisatorische Regeln (Österreich)
OOE	Oberösterreich
W	Wien
NS	Niederspannung
MS	Mittelspannung
VDE	Verband der Elektrotechnik
AR	Anschlussregeln
NA/EEA- CH	Netzanlagen/Eigenerzeugungsanlagen-Schweiz
AS	Australien
NZS	Neuseeland
DK	Dänemark
IP	Interface Protection
ASS	Automatic Separation System

## 8 Verfügbare Normen und Standards

### 8.1 Aktuell gültige Normen und Standards

Slot	ID	Norm/Standard	Regions	Number of channels		
				1	2	1 or 2 select able
#00	802	OVE TOR R25 NS SYNC	Austria (low voltage)		X	
#01	803	OVE TOR R25 NS ASYNC	Austria (low voltage)		X	
#02	852	OVE TOR R25 MS SYNC	Austria (medium voltage)		X	
#03	853	OVE TOR R25 MS ASYNC	Austria (medium voltage)		X	
#04	822	OOE TOR R25 NS SYNC	Upper Austria Oberösterreich (low voltage)		X	
#05	823	OOE TOR R25 NS ASYNC	Upper Austria Oberösterreich (low voltage)		X	
#06	872	OOE TOR R25 MS SYNC	Upper Austria Oberösterreich (medium voltage)		X	
#07	873	OOE TOR R25 MS ASYNC	Upper Austria Oberösterreich (medium voltage)		X	
#08	832	W TOR R25 NS SYNC	Vienna (low voltage)		X	
#09	833	W TOR R25 NS ASYNC	Vienna (low voltage)		X	
#10	882	W TOR R25 MS SYNC	Vienna (medium voltage)		X	
#11	883	W TOR R25 MS ASYNC	Vienna (medium voltage)		X	
#12	812	TIROL TOR NS SYNC	Tyrol (low voltage)		X	
#13	813	TIROL TOR NS ASYNC	Tyrol (low voltage)		X	
#14	862	TIROL TOR MS SYNC	Tyrol (medium voltage)		X	

#15	863	TIROL TOR MS ASYNC	Tyrol (medium voltage)		X	
#16	311	VDE-AR-N 4105: 2018 (Pn ≤ 50kW)	Germany (low voltage)	X		
#17	312	VDE-AR-N 4105: 2018 (Pn > 50kW)	Germany (low voltage)	X		
#18	313	VDE-AR-N 4105: 2018 (converter)	Germany (low voltage)		X	
#19	706	VDE-AR-N 4110: 2018 (Pn > 135kW)	Germany (medium voltage)	X		
#20	102	CEI 0-21: 2019	Italy	X		
#21	410	G99/1/3: 2018 LV	Great Britain (low voltage)	X		
#22	460	G99/1/3: 2018 HV	Great Britain (medium/high voltage)	X		
#23	510	G98/1/2: 2018	Great Britain (low voltage)	X		
#24	603	C10-11: 2021 LV-IP	Belgium (low voltage) interface protection	X		
#25	602	C10-11: 2019 LV-ASS	Belgium (low voltage) automatic separation system	X		
#26	653	C10-11: 2021 HV-IP	Belgium (medium/high voltage) interface protection	X		
#27	652	C10-11: 2019 HV-ASS	Belgium (medium/high voltage) automatic separation system	X		
#28	1200	NA/EEA- CH 2014 (Type A)	Switzerland 2014 (low voltage)		X	
#29	1220	NA/EEA-NE7 - CH 2020 (Type A)	Switzerland 2020 (low voltage)		X	
#30	1221	NA/EEA-NE7 - CH 2020 (Type B)	Switzerland 2020 (low voltage)		X	
#31	901	EN 50549-1:2019	Europe LV (Netherlands)		X	
#32	902	EN 50549-2:2019	Europe HV (Netherlands)		X	
#33	950	EN 50438: 2013 DK	Denmark			X

#34	200	VDE V 0126-1-1:2013	France, Turkey, Belgium, Greece, ...		X	
#35	1110	AB AS 4777.2:2020	Australia		X	
#36	1120	C AS 4777.2:2020	Australia		X	
#37	1130	NZS 4777.2:2020	New Zealand		X	
#38	1000	NRS 097-2-1: 2017	South Africa		X	
#39	9006	OPEN SETUP	Freely configurable setup			X

## 8.2 Frühere Versionen von Normen und Standards

Recertified Standards						
#52	900	EN 50438:2013	Europe		X	
#53	801	OVE E 8001/8101:2014	Austria		X	
#54	300	VDE-AR-N 4105 tested according to VDE 0124-100:2013	Germany (low voltage)		X	
#55	700	TR3 Rev23:2013 certified according to BDEW 2008	Germany (medium voltage)	X		
#56	1102	AS/NZS 4777.2:2015	Australia / Victoria (New Zealand)		X	
#57	405	G59/3/3: 2015 LV	Great Britain (low voltage)	X		
#58	455	G59/3/3: 2015 MV	Great Britain (high voltage)	X		
#59	500	G83/2: 2012	Great Britain (low voltage)	X		
#60	600	C10-11: 2012 LV	Belgium (low voltage)	X		
#61	650	C10-11: 2012 MV	Belgium medium voltage	X		
#62	601	C10-11: 2019 LV	Belgium (low voltage)	X		
#63	651	C10-11: 2019 HV	Belgium (high voltage)	X		

## 9 Übersicht der implementierten Parametersätze

### 9.1 OVE TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### 9.2 OVE TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### 9.3 OVE TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

#### **9.4 OVE TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

#### **9.5 OOE TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

#### **9.6 OOE TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht synchr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## 9.7 OOE TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen – Außenleiterspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## 9.8 OOE TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen – Außenleiterspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## 9.9 W TOR R25 NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## **9.10 W TOR R25 NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## **9.11 W TOR R25 MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## **9.12 W TOR R25 MS ASYNC (Typ A/B Mittelspng. für nicht synchr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### **9.13 TIROL TOR NS SYNC (Typ A/B Niederspng. für synchrone Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### **9.14 TIROL TOR NS ASYNC (Typ A/B Niederspng. für nicht syncr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### **9.15 TIROL TOR MS SYNC (Typ A/B Mittelspng. für synchrone Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### **9.16 TIROL TOR MS ASYNC (Typ A/B Mittelspng. für nicht syncr. Stromerzeugungsanlagen)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.17 VDE-AR-N 4105:2018-11 (Pn ≤ 50 kW)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte beim Zuschalten
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 1 Unterspannungsschwelle - Außenleiterspannung
- 1 Überspannungsschwelle - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.18 VDE-AR-N 4105:2018-11 (Pn > 50 kW)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte beim Zuschalten
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überspannungsschwelle - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.19 VDE-AR-N 4105:2018-11 (Umrichter)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte beim Zuschalten
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überspannungsschwelle - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.20 VDE-AR-N 4110:2018-11 (geprüft nach TR3, Bewertungsbericht TR8)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung (autom. Auswahl abhängig von Connection Mode)
- 2 Unterspannungsschwellen - Außenleiterspannung (autom. Auswahl abhängig von Connection Mode)
- 2 Überspannungsschwellen - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Unterspannungsschwellen - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Überfrequenzschwellen
- 1 Unterfrequenzschwelle
- Einschaltverzögerung

**9.21 CEI 0-21:2019**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbarer Operational Mode (transitory mode / definitive mode)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung (autom. Auswahl abh. vom Connection Mode)
- 2 Unterspannungsschwellen - Außenleiterspannung (autom. Auswahl abh. vom Connection Mode)
- 1 Überspannungsschwelle - Sternspannung (autom. Auswahl abh. vom Connection Mode)
- 2 Unterspannungsschwellen - Sternspannung (autom. Auswahl abh. vom Connection Mode)
- 10-Minuten Mittelwert Überspannungsschwelle
- 3 umschaltbare Überfrequenzschwellen (Umschaltung über Operational Mode und digitale Inputs)
- 3 umschaltbare Unterfrequenzschwellen (Umschaltung über Operational Mode und digitale Inputs)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar), RoCoF-Window verstellbar
- Auswählbare RoCoF window length
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.22 G99/1/3 LV:2018 (Niederspannung)**

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 1 Überfrequenzschwelle
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.23 G99/1/3 HV:2018 (Mittel/Hochspannung)

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 1 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.24 G98/1/2:2018 (Niederspannung)

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwellen - Sternspannung
- 1 Überfrequenzschwelle
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.25 C10-11:2021 LV-IP (Interface Protection / Niederspannung)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 1 Überspannungsschwelle Zero Sequence
- activation narrower frequency window (anfw) bei Unterspannung
- activation narrower frequency window (anfw) bei Zero Sequence
- activation narrower frequency window (anfw) mit digital input (DI5)
- 1 Überfrequenzschwelle
- 1 Überfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Unterfrequenzschwelle
- 1 Unterfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.26 C10-11:2019 LV-ASS (Automatic Separation System / Niederspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwellen – Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.27 C10-11:2021 HV-IP (Interface Protection / Hochspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen – Außenleiterspannung
- activation narrower frequency window (anfw) bei Unterspannung
- activation narrower frequency window (anfw) mit digital input (DI5)
- 1 Überfrequenzschwelle
- 1 Überfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Unterfrequenzschwelle
- 1 Unterfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.28 C10-11:2019 HV-ASS (Automatic Separation System / Hochspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwellen - Außenleiterspannung
- 1 Unterspannungsschwellen – Außenleiterspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.29 NA/EEA- CH 2014 Typ A <1MW (Niederspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 1 Unterspannungsschwelle - Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.30 NA/EEA-NE7 - CH 2020 Typ A 800W bis 250kW (Niederspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.31 NA/EEA-NE7 - CH 2020 Typ B 250kW bis 36MW (Niederspannung)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

### 9.32 EN 50549-1:2019 LV (Niederlande)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen – Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen – Sternspannung
- 1 Überspannungsschwelle Zero Sequence
- 10-Minuten Mittelwert Überspannungsschwelle
- activation narrower frequency window (anfw) bei Unterspannung
- activation narrower frequency window (anfw) bei Zero Sequence
- activation narrower frequency window (anfw) mit digital input (DI5)
- 1 Überfrequenzschwelle
- 1 Überfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Unterfrequenzschwelle
- 1 Unterfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.33 EN 50549-2:2019 HV (Niederlande)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen – Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen – Sternspannung
- 1 Überspannungsschwelle Zero Sequence
- 10-Minuten Mittelwert Überspannungsschwelle
- activation narrower frequency window (anfw) bei Unterspannung
- activation narrower frequency window (anfw) bei Zero Sequence
- activation narrower frequency window (anfw) mit digital input (DI5)
- 1 Überfrequenzschwelle
- 1 Überfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Unterfrequenzschwelle
- 1 Unterfrequenzschwelle bei activation narrower frequency window (anfw)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.34 EN 50438:2013 (DK)

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Safety Mode (1 Schütz oder 2 Schütze angesteuert und überwacht)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 1 Unterspannungsschwelle - Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

### 9.35 VDE 0126-1-1:2013 (ERDF-NOI-RES\_13E Frankreich)

- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 1 Unterspannungsschwelle - Außenleiterspannung
- 1 Überspannungsschwelle - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)

### 9.36 AB AS 4777.2:2020

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer/ kein)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Auswählbare RoCoF window length
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Auswählbare Pshift window length
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.37 C AS 4777.2:2020**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer/ kein)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen – Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Auswählbare RoCoF window length
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Auswählbare Pshift window length
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.38 NZS 4777.2:2020**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer/ kein)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen – Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Auswählbare RoCoF window length
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Auswählbare Pshift window length
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## 9.39 NRS 097-2-1:2017

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Unterspannungsschwellen - Außenleiterspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Überspannungsschwellen - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Unterspannungsschwellen - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

## 9.40 OPEN SETUP

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Safety Mode (1 Schütz oder 2 Schütze angesteuert und überwacht)
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung (automatische Auswahl abhängig vom Connection Mode, bei Bedarf manuell deaktivierbar)
- 2 Unterspannungsschwellen - Außenleiterspannung (automatische Auswahl abhängig vom Connection Mode, bei Bedarf manuell deaktivierbar)
- 2 Überspannungsschwellen - Sternspannung (automatische Auswahl abhängig vom Connection Mode, bei Bedarf manuell deaktivierbar)
- 2 Unterspannungsschwellen - Sternspannung (automatische Auswahl abhängig vom Connection Mode, bei Bedarf manuell deaktivierbar)
- 1 Überspannungsschwelle Zero Sequence Component (nur in Connection Mode 4-wire (LN+LL))
- 10-Minuten Mittelwert Überspannungsschwelle (bei Bedarf manuell deaktivierbar)
- 2 Überfrequenzschwellen (bei Bedarf manuell deaktivierbar)
- 2 Unterfrequenzschwelle (bei Bedarf manuell deaktivierbar)
- 1 Überfrequenzschwelle für narrower frequency window aktivierbar (NAFW) (nur in Connection Mode 4-wire (LN+LL))
- 1 Unterfrequenzschwelle für narrower frequency window aktivierbar (NAFW) (nur in Connection Mode 4-wire (LN+LL))
- Auswählbare Frequenz window length
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- Auswählbare RoCoF window length
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Auswählbare Pshift window length
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt und Spannungs/Frequenzfehlern
- Auswählbare Deaktivierung der Frequenzschwellen bei Unterspannung

**9.41 EN 50438:2013**

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung

**9.42 E 8001/8101 (Vorgänger von OVE TOR R25)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung

**9.43 VDE 0124-100:2013 (Vorgänger von VDE-AR-N 4105:2018-11)**

- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 1 Unterspannungsschwelle - Außenleiterspannung
- 1 Überspannungsschwelle - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 zufällige Überfrequenzschwelle (bei Bedarf aktivierbar)
- Einschaltverzögerung
- zufällige Einschaltverzögerung (bei Bedarf aktivierbar)

**9.44 TR3 Rev23:2013 (Vorgänger von VDE-AR-N 4110:2018-11)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle – Außenleiterspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Unterspannungsschwellen – Außenleiterspannung (autom. Auswahl abhängig vom Connection Mode)
- 1 Überspannungsschwelle - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 2 Unterspannungsschwellen - Sternspannung (autom. Auswahl abhängig vom Connection Mode)
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- Einschaltverzögerung

**9.45 AS/NZS 4777.2:2015 (Niederspannung)**

- Local standards must be taken into account
- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer/ kein)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 1 Unterspannungsschwelle - Sternspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 10-Minuten Mittelwert Überspannungsschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf deaktivierbar)
- Auswählbare RoCoF window length
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Auswählbare Pshift window length
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Ansprechen einer Schutzfunktion U/f oder bei Fehler Rückmeldekontakt

**9.46 G59/3/3:2015 LV (Niederspannung - Vorgänger von G99/1/3 LV:2018)**

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 2 Überfrequenzschwellen
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf deaktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Einschaltverzögerung

**9.47 G59/3/3:2015 MV (Mittelspannung Vorgänger von G99/1/3 HV:2018)**

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 2 Überfrequenzschwellen
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf deaktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf aktivierbar)
- Einschaltverzögerung

**9.48 G83/2:2012 (Niederspannung Vorgänger von G98/1/2:2018)**

- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 2 Überfrequenzschwellen
- 2 Unterfrequenzschwellen
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

**9.49 C10-11:2012 LV (Niederspannung Vorgänger von C10-11:2019)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

**9.50 C10-11:2012 MV (Mittelspannung Vorgänger von C10-11:2019)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 1 Überspannungsschwelle - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung

**9.51 C10-11:2019 LV-IP (Interface Protection / Niederspannung Vorgänger von C10-11:2021)**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Sternspannung
- 2 Unterspannungsschwellen - Sternspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

**9.52 C10-11:2019 HV-IP (Interface Protection / Hochspannung Vorgänger von C10-11:2021))**

- Auswählbarer Connection Mode (1 phasig, 3 phasig)
- Auswählbare Nennspannung
- Auswählbarer Rückmeldekontakt (Öffner / Schließer)
- Zusätzliche zeitliche Überwachung des Rückmeldekontakte
- Auswählbare Fernabschaltung (Öffner / Schließer)
- 2 Überspannungsschwellen - Außenleiterspannung
- 2 Unterspannungsschwellen - Außenleiterspannung
- 1 Überfrequenzschwelle
- 1 Unterfrequenzschwelle
- 1 Frequenzrampenschwelle (RoCoF ... bei Bedarf aktivierbar)
- 1 Phasensprungschwelle (PShift ... bei Bedarf deaktivierbar)
- Einschaltverzögerung
- Melderelais R3 - Aktivierung (LED R3 ON) bei Fehler Rückmeldekontakt

## 10 ANHANG (Parameter der implementierten Standards im Detail)

### 10.1 ÖVE TOR R25 NS SYNC [ID 802] Typ A/B low voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:			2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary			

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	Ueff >	Enable function	on	on / off		on / off	
.019	Ueff > off	UTHR OFF %Unom	111	100	130	100	135
.020	Ueff > on	UTHR ON %Unom	108	100	108	100	135
.021	T Ueff >	Time OFF ms	60000	50	180000	50	180000
Comment:			Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value				
Only active for:			Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.023	Ueff < off	UTHR OFF %Unom	80	10	100	10	100
.024	Ueff < on	UTHR ON %Unom	90	86	100	10	100
.025	T Ueff <	Time OFF ms	1000	50	180000	50	180000
Comment:			Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:			Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Overvoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.034	Ueff>>	Enable function	on	on		on / off	
.035	Ueff>> off	UTHR OFF %Unom	115	100	130	100	135
.036	Ueff>> on	UTHR ON %Unom	108	100	108	100	135
.037	T Ueff>>	Time OFF ms	100	50	180000	50	180000
Comment:			Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value				
Only active for:			Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.038	Ueff<<	Enable function	on	on		on / off	
.039	Ueff<< off	UTHR OFF %Unom	30	10	100	10	100
.040	Ueff<< on	UTHR ON %Unom	90	86	100	0	100
.041	T Ueff<<	Time OFF ms	200	50	180000	50	180000
Comment:			Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:			Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

10 minutes average overvoltage			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.042	U10min	Enable function	off	on / off		on / off	
.043	U10min off	UTHR OFF %Unom	111	100	130	100	135
		UTHR ON %Unom		Fixed Hysteresis (0.9% UNOM)			
		Time OFF ms		Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	300	0

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.2 ÖVE TOR R25 NS ASYNC [ID 803] Typ A/B low voltage asynchr. generators

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.018	Ueff >	Enable function	on	on / off	on / off	
.019	Ueff > off	UTHR OFF %Unom	111	100 130	100	135
.020	Ueff > on	UTHR ON %Unom	108	100 108	100	135
.021	T Ueff >	Time OFF ms	60000	50 180000	50	180000
Comment:	Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.023	Ueff < off	UTHR OFF %Unom	80	10 100	10	100
.024	Ueff < on	UTHR ON %Unom	90	86 100	10	100
.025	T Ueff <	Time OFF ms	1500	50 180000	50	180000
Comment:	Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Overvoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.034	Ueff>>	Enable function	on	on	on / off	
.035	Ueff>> off	UTHR OFF %Unom	115	100 130	100	135
.036	Ueff>> on	UTHR ON %Unom	108	100 108	100	135
.037	T Ueff>>	Time OFF ms	100	50 180000	50	180000
Comment:	Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.038	Ueff<<	Enable function	on	on	on / off	
.039	Ueff<< off	UTHR OFF %Unom	25	10 100	10	100
.040	Ueff<< on	UTHR ON %Unom	90	86 100	0	100
.041	T Ueff<<	Time OFF ms	500	50 180000	50	180000
Comment:	Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

10 minutes average overvoltage			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.042	U10min	Enable function	off	on / off	on / off	
.043	U10min off	UTHR OFF %Unom	111	100 130	100	135
		UTHR ON %Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

### 10.3 ÖVE TOR R25 MS SYNC [ID 852] Typ A/B medium voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	60.4 105.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1						

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U > off	UTHR OFF	%Unom	106	100	130	100	135
.012	U > on	UTHR ON	%Unom	104	100	108	100	135
.013	T U >	Time OFF	ms	60000	50	180000	50	180000
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U < off	UTHR OFF	%Unom	70	10	100	10	100
.016	U < on	UTHR ON	%Unom	90	86	100	10	100
.017	T U <	Time OFF	ms	1500	50	180000	50	180000
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.026	U >>	Enable function	on	on	on	on /off		
.027	U >> off	UTHR OFF	%Unom	110	100	130	100	135
.028	U >> on	UTHR ON	%Unom	104	100	108	100	135
.029	T U >>	Time OFF	ms	100	50	180000	50	180000
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.030	U <<	Enable function	on	on	on	on /off		
.031	U << off	UTHR OFF	%Unom	30	10	100	10	100
.032	U << on	UTHR ON	%Unom	90	86	100	0	100
.033	T U <<	Time OFF	ms	700	50	180000	50	180000
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value							
Only active for:	Voltage > 60% UNOM							

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information								
ID								
.105	ID: xxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set						

## 10.4 ÖVE TOR R25 MS ASYNC [ID 853] Typ A/B medium voltage asynchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	60.4 105.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1						

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U > off	UTHR OFF	%Unom	106	100	130	100	135
.012	U > on	UTHR ON	%Unom	104	100	108	100	135
.013	T U >	Time OFF	ms	60000	50	180000	50	180000
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U < off	UTHR OFF	%Unom	80	10	100	10	100
.016	U < on	UTHR ON	%Unom	90	86	100	10	100
.017	T U <	Time OFF	ms	1500	50	180000	50	180000
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.026	U >>	Enable function	on	on	on	on /off		
.027	U >> off	UTHR OFF	%Unom	110	100	130	100	135
.028	U >> on	UTHR ON	%Unom	104	100	108	100	135
.029	T U >>	Time OFF	ms	100	50	180000	50	180000
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.030	U <<	Enable function	on	on	on	on /off		
.031	U << off	UTHR OFF	%Unom	30	10	100	10	100
.032	U << on	UTHR ON	%Unom	90	86	100	0	100
.033	T U <<	Time OFF	ms	700	50	180000	50	180000
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information						
ID						
.105	ID: xxxxx	xxxxx = Device ID				
	SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

## 10.5 Oberösterreich OOE TOR R25 NS SYNC [ID 822] Typ A/B low voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	U <sub>nom</sub> Y U <sub>nom</sub> Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	U <sub>eff</sub> < off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	80	10	100	10	100
.024	U <sub>eff</sub> < on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	100	10	100
.025	T U <sub>eff</sub> <	Time OFF	ms	200	50	180000	50	180000
Comment:		U <sub>eff</sub> < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.034	U <sub>eff</sub> >>	Enable function	on	on		on /off		
.035	U <sub>eff</sub> >> off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	115	100	130	100	135
.036	U <sub>eff</sub> >> on	U <sub>THR</sub> ON	%U <sub>nom</sub>	109	100	109	100	135
.037	T U <sub>eff</sub> >>	Time OFF	ms	100	50	180000	50	180000
Comment:		U <sub>eff</sub> >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

Undervoltage2 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.038	U <sub>eff</sub> <<	Enable function	on	on		on /off		
.039	U <sub>eff</sub> << off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	30	10	100	10	100
.040	U <sub>eff</sub> << on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	100	0	100
.041	T U <sub>eff</sub> <<	Time OFF	ms	200	50	180000	50	180000
Comment:		U <sub>eff</sub> << on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

10 minutes average overvoltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.042	U10min	Enable function	on	on / off		on /off		
.043	U10min off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	111	100	130	100	135

U<sub>THR</sub> ON %U<sub>nom</sub> Fixed Hysteresis (0.9% UNOM)  
Time OFF ms Fixed to fastest possible disconnection

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	55.00	50.00	55.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.1	50.00	50.1	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information						
ID						
.105	ID: xxxxx	xxxxx = Device ID		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set		
	SW: aa.ddccb					

## 10.6 Oberösterreich OOE TOR R25 NS ASYNC [ID 823] Typ A/B low voltage asynchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	Ueff < off	UTHR OFF	%Unom	80	10	100	10	100
.024	Ueff < on	UTHR ON	%Unom	85	85	100	10	100
.025	T Ueff <	Time OFF	ms	1500	50	180000	50	180000
Comment:		Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

Overvoltage2 Line to Neutral			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.034	Ueff>>	Enable function	on	on	on /off			
.035	Ueff>> off	UTHR OFF	%Unom	115	100	130	100	135
.036	Ueff>> on	UTHR ON	%Unom	109	100	109	100	135
.037	T Ueff>>	Time OFF	ms	100	50	180000	50	180000
Comment:		Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

Undervoltage2 Line to Neutral			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.038	Ueff<<	Enable function	on	on	on /off			
.039	Ueff<< off	UTHR OFF	%Unom	25	10	100	10	100
.040	Ueff<< on	UTHR ON	%Unom	85	85	100	0	100
.041	T Ueff<<	Time OFF	ms	500	50	180000	50	180000
Comment:		Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL))						

10 minutes average overvoltage			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.042	U10min	Enable function	on	on / off	on /off			
.043	U10min off	UTHR OFF	%Unom	111	100	130	100	135
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)				
		Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.1	50.00	50.1	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information						
ID						
.105	ID: xxxxx	xxxxx = Device ID				
	SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

## 10.7 Oberösterreich OOE TOR R25 MS SYNC [ID 872] Typ A/B medium voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	60.4 105.0	57.5 100.0	230.0 400.0	28.8 50.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1					

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	U > off	UTHR OFF	%Unom	104.5	100	130	100
.012	U > on	UTHR ON	%Unom	104.5	100	109	100
.013	T U >	Time OFF	ms	60000	50	180000	50
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	U < off	UTHR OFF	%Unom	70	10	100	10
.016	U < on	UTHR ON	%Unom	85	85	100	10
.017	T U <	Time OFF	ms	200	50	180000	50
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.026	U >>	Enable function	on	on	on	on /off	on /off
.027	U >> off	UTHR OFF	%Unom	108	100	130	100
.028	U >> on	UTHR ON	%Unom	104.5	100	109	100
.029	T U >>	Time OFF	ms	100	50	180000	50
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.030	U <<	Enable function	on	on	on	on /off	on /off
.031	U << off	UTHR OFF	%Unom	30	10	100	10
.032	U << on	UTHR ON	%Unom	85	85	100	0
.033	T U <<	Time OFF	ms	200	50	180000	50
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

10 minutes average overvoltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.042	U10min	Enable function	off	on / off	on / off	on / off	on / off
.043	U10min off	UTHR OFF	%Unom	104.5	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	47.50	47.5	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.8 Oberösterreich OOE TOR R25 MS ASYNC [ID 873] Typ A/B med. voltage asynchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	60.4 105.0	57.5 100.0	230.0 400.0	28.8 50.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1					

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	U > off	UTHR OFF	%Unom	104.5	100	130	100
.012	U > on	UTHR ON	%Unom	104.5	100	109	100
.013	T U >	Time OFF	ms	60000	50	180000	50
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	U < off	UTHR OFF	%Unom	80	10	100	10
.016	U < on	UTHR ON	%Unom	85	85	100	10
.017	T U <	Time OFF	ms	1000	50	180000	50
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.026	U >>	Enable function	on	on	on	on /off	on /off
.027	U >> off	UTHR OFF	%Unom	108	100	130	100
.028	U >> on	UTHR ON	%Unom	104.5	100	109	100
.029	T U >>	Time OFF	ms	100	50	180000	50
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.030	U <<	Enable function	on	on	on	on /off	on /off
.031	U << off	UTHR OFF	%Unom	30	10	100	10
.032	U << on	UTHR ON	%Unom	85	85	100	0
.033	T U <<	Time OFF	ms	500	50	180000	50
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

10 minutes average overvoltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.042	U10min	Enable function	off	on / off	on / off	on / off	on / off
.043	U10min off	UTHR OFF	%Unom	104.5	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	47.50	47.5	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.9 Wien TOR R25 NS SYNC [ID 832] Typ A/B low voltage synchr. generators

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	Ueff >	Enable function	on	on / off		on / off	
.019	Ueff > off	UTHR OFF %Unom	108	100	130	100	135
.020	Ueff > on	UTHR ON %Unom	107	100	108	100	135
.021	T Ueff >	Time OFF ms	60000	50	180000	50	180000
Comment:	Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.023	Ueff < off	UTHR OFF %Unom	80	10	100	10	100
.024	Ueff < on	UTHR ON %Unom	90	86	100	10	100
.025	T Ueff <	Time OFF ms	1000	50	180000	50	180000
Comment:	Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.034	Ueff>>	Enable function	on	on		on / off	
.035	Ueff>> off	UTHR OFF %Unom	115	100	130	100	135
.036	Ueff>> on	UTHR ON %Unom	107	100	108	100	135
.037	T Ueff>>	Time OFF ms	100	50	180000	50	180000
Comment:	Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.038	Ueff<<	Enable function	on	on		on / off	
.039	Ueff<< off	UTHR OFF %Unom	30	10	100	10	100
.040	Ueff<< on	UTHR ON %Unom	90	86	100	0	100
.041	T Ueff<<	Time OFF ms	200	50	180000	50	180000
Comment:	Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

10 minutes average overvoltage			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.042	U10min	Enable function	off	on / off		on / off	
.043	U10min off	UTHR OFF %Unom	108	100	130	100	135
		UTHR ON %Unom	Fixed Hysteresis (0.9% UNOM)				
		Time OFF ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.00	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.10 Wien TOR R25 NS ASYNC [ID 833] Typ A/B low voltage asynchr. generators

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	Ueff >	Enable function	on	on / off		on / off	
.019	Ueff > off	UTHR OFF %Unom	108	100	130	100	135
.020	Ueff > on	UTHR ON %Unom	107	100	108	100	135
.021	T Ueff >	Time OFF ms	60000	50	180000	50	180000
Comment:	Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.023	Ueff < off	UTHR OFF %Unom	80	10	100	10	100
.024	Ueff < on	UTHR ON %Unom	90	86	100	10	100
.025	T Ueff <	Time OFF ms	1000	50	180000	50	180000
Comment:	Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.034	Ueff>>	Enable function	on	on		on / off	
.035	Ueff>> off	UTHR OFF %Unom	115	100	130	100	135
.036	Ueff>> on	UTHR ON %Unom	107	100	108	100	135
.037	T Ueff>>	Time OFF ms	100	50	180000	50	180000
Comment:	Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.038	Ueff<<	Enable function	on	on		on / off	
.039	Ueff<< off	UTHR OFF %Unom	30	10	100	10	100
.040	Ueff<< on	UTHR ON %Unom	90	86	100	0	100
.041	T Ueff<<	Time OFF ms	200	50	180000	50	180000
Comment:	Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

10 minutes average overvoltage			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.042	U10min	Enable function	off	on / off		on / off	
.043	U10min off	UTHR OFF %Unom	108	100	130	100	135
		UTHR ON %Unom	Fixed Hysteresis (0.9% UNOM)				
		Time OFF ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.00	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.11 Wien TOR R25 MS SYNC [ID 882] Typ A/B medium voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	58.7 102.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1						

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U > off	UTHR OFF	%Unom	108	100	130	100	135
.012	U > on	UTHR ON	%Unom	107	100	108	100	135
.013	T U >	Time OFF	ms	60000	50	180000	50	180000
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U < off	UTHR OFF	%Unom	80	10	100	10	100
.016	U < on	UTHR ON	%Unom	90	86	100	10	100
.017	T U <	Time OFF	ms	1000	50	180000	50	180000
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.026	U >>	Enable function	on	on	on	on /off		
.027	U >> off	UTHR OFF	%Unom	115	100	130	100	135
.028	U >> on	UTHR ON	%Unom	107	100	108	100	135
.029	T U >>	Time OFF	ms	100	50	180000	50	180000
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.030	U <<	Enable function	on	on	on	on /off		
.031	U << off	UTHR OFF	%Unom	30	10	100	10	100
.032	U << on	UTHR ON	%Unom	90	86	100	0	100
.033	T U <<	Time OFF	ms	200	50	180000	50	180000
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.00	50.00	55.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value							
Only active for:	Voltage > 60% UNOM							

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information						
ID						
.105	ID: xxxxx	xxxxx = Device ID				
	SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

## 10.12 Wien TOR R25 MS ASYNC [ID 883] Typ A/B medium voltage asynchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	58.7 102.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1						

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U > off	UTHR OFF	%Unom	108	100	130	100	135
.012	U > on	UTHR ON	%Unom	107	100	108	100	135
.013	T U >	Time OFF	ms	60000	50	180000	50	180000
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U < off	UTHR OFF	%Unom	80	10	100	10	100
.016	U < on	UTHR ON	%Unom	90	86	100	10	100
.017	T U <	Time OFF	ms	1000	50	180000	50	180000
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.026	U >>	Enable function	on	on	on	on /off		
.027	U >> off	UTHR OFF	%Unom	115	100	130	100	135
.028	U >> on	UTHR ON	%Unom	107	100	108	100	135
.029	T U >>	Time OFF	ms	100	50	180000	50	180000
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.030	U <<	Enable function	on	on	on	on /off		
.031	U << off	UTHR OFF	%Unom	30	10	100	10	100
.032	U << on	UTHR ON	%Unom	90	86	100	0	100
.033	T U <<	Time OFF	ms	200	50	180000	50	180000
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.00	50.00	55.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	49.50	47.55	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value							
Only active for:	Voltage > 60% UNOM							

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID							
.105	ID: xxxxx	xxxxx = Device ID		SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set		

### 10.13 TIROL TOR NS SYNC [ID 812] Typ A/B low voltage synchr. generators

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	Ueff >	Enable function	on	on / off	on / off		
.019	Ueff > off	UTHR OFF %Unom	111	100	130	100	135
.020	Ueff > on	UTHR ON %Unom	109	100	109	100	135
.021	T Ueff >	Time OFF ms	60000	50	180000	50	180000
Comment:	Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.023	Ueff < off	UTHR OFF %Unom	80	10	100	10	100
.024	Ueff < on	UTHR ON %Unom	86	86	100	10	100
.025	T Ueff <	Time OFF ms	1000	50	180000	50	180000
Comment:	Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.034	Ueff>>	Enable function	on	on	on / off		
.035	Ueff>> off	UTHR OFF %Unom	115	100	130	100	135
.036	Ueff>> on	UTHR ON %Unom	109	100	109	100	135
.037	T Ueff>>	Time OFF ms	100	50	180000	50	180000
Comment:	Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage2 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.038	Ueff<<	Enable function	on	on	on / off		
.039	Ueff<< off	UTHR OFF %Unom	30	10	100	10	100
.040	Ueff<< on	UTHR ON %Unom	86	86	100	0	100
.041	T Ueff<<	Time OFF ms	200	50	180000	50	180000
Comment:	Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

10 minutes average overvoltage			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.042	U10min	Enable function	off	on / off	on / off			
.043	U10min off	UTHR OFF %Unom	111	100	130	100	135	
		UTHR ON %Unom	Fixed Hysteresis (0.9% UNOM)					
		Time OFF ms	Fixed to fastest possible disconnection					

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	300	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.14 TIROL TOR NS ASYNC [ID 813] Typ A/B low voltage asynchr. generators

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.018	Ueff >	Enable function	on	on / off	on / off	
.019	Ueff > off	UTHR OFF %Unom	111	100 130	100	135
.020	Ueff > on	UTHR ON %Unom	109	100 109	100	135
.021	T Ueff >	Time OFF ms	60000	50 180000	50	180000
Comment:	Ueff > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.023	Ueff < off	UTHR OFF %Unom	80	10 100	10	100
.024	Ueff < on	UTHR ON %Unom	86	86 100	10	100
.025	T Ueff <	Time OFF ms	1500	50 180000	50	180000
Comment:	Ueff < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Overvoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.034	Ueff>>	Enable function	on	on	on / off	
.035	Ueff>> off	UTHR OFF %Unom	115	100 130	100	135
.036	Ueff>> on	UTHR ON %Unom	109	100 109	100	135
.037	T Ueff>>	Time OFF ms	100	50 180000	50	180000
Comment:	Ueff>> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.038	Ueff<<	Enable function	on	on	on / off	
.039	Ueff<< off	UTHR OFF %Unom	25	10 100	10	100
.040	Ueff<< on	UTHR ON %Unom	86	86 100	0	100
.041	T Ueff<<	Time OFF ms	500	50 180000	50	180000
Comment:	Ueff<< on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

10 minutes average overvoltage			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.042	U10min	Enable function	off	on / off	on / off	
.043	U10min off	UTHR OFF %Unom	111	100 130	100	135
		UTHR ON %Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 60% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	47.50	47.5	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	50
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	300	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID				Default	Min	Max	
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID					
		dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.15 TIROL TOR MS SYNC [ID 862] Typ A/B medium voltage synchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	U <sub>nom</sub> Y U <sub>nom</sub> Δ	V V	57.5 100.0	57.5 100.0	230.0 400.0	28.8 50.0
Comment:		Default for U <sub>c</sub> =21kV and 200:1 voltage transformer or U <sub>c</sub> =31,7kV and 300:1					

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	U > off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	105	100	130	100
.012	U > on	U <sub>THR</sub> ON	%U <sub>nom</sub>	104	100	108	100
.013	T U >	Time OFF	ms	60000	50	180000	50
Comment:		U > on has a fixed offset of 0.5% U <sub>NOM</sub> subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	U < off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	70	10	100	10
.016	U < on	U <sub>THR</sub> ON	%U <sub>nom</sub>	86	86	100	10
.017	T U <	Time OFF	ms	1000	50	180000	50
Comment:		U < on has a fixed offset of 0.5% U <sub>NOM</sub> added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.026	U >>	Enable function	on	on		on /off	
.027	U >> off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	115	100	130	100
.028	U >> on	U <sub>THR</sub> ON	%U <sub>nom</sub>	104	100	108	100
.029	T U >>	Time OFF	ms	100	50	180000	50
Comment:		U >> on has a fixed offset of 0.5% U <sub>NOM</sub> subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.030	U <<	Enable function	on	on		on /off	
.031	U << off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	30	10	100	10
.032	U << on	U <sub>THR</sub> ON	%U <sub>nom</sub>	86	86	100	0
.033	T U <<	Time OFF	ms	200	50	180000	50
Comment:		U << on has a fixed offset of 0.5% U <sub>NOM</sub> added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.10	50.00	50.10	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value					
Only active for:		Voltage > 60% U <sub>NOM</sub>					

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	300	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information						
ID						
.105	ID: xxxxx	xxxxx = Device ID				
	SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

## 10.16 TIROL TOR MS ASYNC [ID 863] Typ A/B medium voltage asynchr. generators

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	57.5 100.0	57.5 100.0	230.0 400.0	28.8 50.0
Comment:		Default for Uc=21kV and 200:1 voltage transformer or Uc=31,7kV and 300:1					

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	U > off	UTHR OFF	%Unom	105	100	130	100
.012	U > on	UTHR ON	%Unom	104	100	108	100
.013	T U >	Time OFF	ms	60000	50	180000	50
Comment:		U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	U < off	UTHR OFF	%Unom	80	10	100	10
.016	U < on	UTHR ON	%Unom	86	86	100	10
.017	T U <	Time OFF	ms	1500	50	180000	50
Comment:		U < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.026	U >>	Enable function	on	on	on	on /off	on /off
.027	U >> off	UTHR OFF	%Unom	115	100	130	100
.028	U >> on	UTHR ON	%Unom	104	100	108	100
.029	T U >>	Time OFF	ms	100	50	180000	50
Comment:		U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.030	U <<	Enable function	on	on	on	on /off	on /off
.031	U << off	UTHR OFF	%Unom	30	10	100	10
.032	U << on	UTHR ON	%Unom	86	86	100	0
.033	T U <<	Time OFF	ms	500	50	180000	50
Comment:		U << on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.10	50.00	50.10	50.00
.057	T f >	Time OFF	ms	50	50	50	50
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value					
Only active for:		Voltage > 60% UNOM					

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 60% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	0	300	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information								
ID								
.105	ID: xxxxxx SW: aa.dd.ccb		xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.17 VDE-AR-N 4105:2018 ≤50kW [ID 311]

Connection Mode			Conformity Range		Possible Range		
ID	Default		Min	Max	Min	Max	
.003	Connection	4-wire (LN+LL)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		

Nominal Voltage				Conformity Range		Possible Range	
ID	Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	Fixed to 230.0 / 400.0			

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	1ch	1ch		2ch, 1ch	
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary 1ch means: 1 channel without functional safety and 1 auxilliary contact necessary				

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	ULL >> off	UTHR OFF	%Unom	Fixed to 115% UNOM			
.012	ULL >> on	UTHR ON	%Unom	110	110	110	100
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	ULL < off	UTHR OFF	%Unom	80	80	85	80
.016	ULL < on	UTHR ON	%Unom	85	85	85	100
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		ULL < on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	ULN >> off	UTHR OFF	%Unom	Fixed to 115% UNOM			
.020	ULN >> on	UTHR ON	%Unom	110	110	110	100
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	ULN < off	UTHR OFF	%Unom	80	80	85	80
.024	ULN < on	UTHR ON	%Unom	85	85	85	100
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		ULN < on has a fixed offset of 0.5% UNOM added to the displayed value					

10 minutes average overvoltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.043	U > off	UTHR OFF	%Unom	110	110	115	110
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	Fixed to 51.50Hz			
.056	f > on	fTHR ON	Hz	50.10	50.10	50.10	50.00
		Time OFF	ms	Fixed to fastest possible disconnection			

Underfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	Fixed to 47.50Hz			
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	47.50
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		f < on has a fixed offset of 0.025 Hz added to the displayed value					

Random overfrequency				Conformity Range		Possible Range			
ID		Default		Min	Max	Min	Max		
.086	f > random	Enable function		off	on / off				
.087	f > random	fTHR OFF	Hz		50.20	51.50	50.20		
		fTHR ON	Hz	Fixed reconnection frequency of 50.10Hz					
		Time OFF	ms	Fixed to fastest possible disconnection					
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited							

Frequency measuring in general				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.113	F wnd	Window length		ms Fixed window length 100ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 100ms				
.110	T ConDelOn	Time ON	ms	100	100	10000	100	300000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	1	600

Random Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.103	Ton random	Enable function		off	on / off		on / off	
.104	Ton random	Turn on time	s		60	600	60	600

Comment: The random time value is shown in .104 and cannot be edited

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		4	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		1	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		5	0	9	

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.18 VDE-AR-N 4105:2018 >50kW [ID 312]**

Connection Mode			Conformity Range			Possible Range		
ID	Default							
.003	Connection	4-wire (LN+LL)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		

Nominal Voltage				Conformity Range		Possible Range		
ID	ULN/LL nom	Unom Y Unom Δ	V V	Default	Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	Fixed to 230.0 / 400.0				

Functional Safety			Conformity Range			Possible Range			
ID	Default								
.007	Errtol	1ch	1ch			2ch, 1ch			
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary 1ch means: 1 channel without functional safety and 1 auxilliary contact necessary							

Overvoltage1 Line to Line				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.011	ULL >> off	UTHR OFF	%Unom	Fixed to 125% UNOM							
.012	ULL >> on	UTHR ON	%Unom	110	110	110	100	110			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value									

Undervoltage1 Line to Line				Conformity Range			Possible Range		
ID		Default		Min	Max		Min	Max	
.015	ULL < off	UTHR OFF	%Unom	Fixed to 80% UNOM					
.016	ULL < on	UTHR ON	%Unom	85	85	85	85	100	
.017	T ULL <	Time OFF	ms	1000	50	1000	50	10000	
Comment:		ULL < on has a fixed offset of 0.5% UNOM added to the displayed value							

Overvoltage1 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.019	ULN >> off	UTHR OFF	%Unom	Fixed to 125% UNOM							
.020	ULN >> on	UTHR ON	%Unom	110	110	110	100	110			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value									

Undervoltage1 Line to Neutral				Conformity Range			Possible Range		
ID		Default		Min	Max		Min	Max	
.023	ULN < off	UTHR OFF	%Unom	Fixed to 80% UNOM					
.024	ULN < on	UTHR ON	%Unom	85	85	85	85	100	
.025	T ULN <	Time OFF	ms	1000	50	1000	50	10000	
Comment:		ULN < on has a fixed offset of 0.5% UNOM added to the displayed value							

Undervoltage2 Line to Line				Conformity Range			Possible Range		
ID		Default		Min	Max		Min	Max	
.031	ULL << off	UTHR OFF	%Unom	Fixed to 45% UNOM					
.032	ULL << on	UTHR ON	%Unom	85	85	85	85	100	
.033	T ULL <<	Time OFF	ms	300	50	300	50	10000	
Comment:		ULL << on has a fixed offset of 0.5% UNOM added to the displayed value							

Undervoltage2 Line to Neutral				Conformity Range			Possible Range		
ID		Default		Min	Max		Min	Max	
.039	ULN << off	UTHR OFF	%Unom	Fixed to 45% UNOM					
.040	ULN << on	UTHR ON	%Unom	85	85	85	85	100	
.041	T ULN <<	Time OFF	ms	200	50	300000	50	300000	
Comment:		ULN << on has a fixed offset of 0.5% UNOM added to the displayed value							

10 minutes average overvoltage				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.043	U > off	UTHR OFF	%Unom	110	110	115	110
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	Fixed to 51.50Hz			
.056	f > on	fTHR ON	Hz	50.10	50.10	50.10	50.00
		Time OFF	ms	Fixed to fastest possible disconnection			

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	Fixed to 47.50Hz			
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	47.50
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		f < on has a fixed offset of 0.025 Hz added to the displayed value					

Random overfrequency				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.086	f > random	Enable function	off	on / off		on / off	
.087	f > random	fTHR OFF	Hz	50.20	51.50	50.20	51.50
		fTHR ON	Hz	Fixed reconnection frequency of 50.10Hz			
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited					

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
						dis. (disabled)	dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 100ms			
.110	T ConDelOn	Time ON	ms	100	10000	100	300000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
						dis. (disabled)	dis. (disabled)

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	1
							600

Random Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.103	Ton random	Enable function	off	on / off	on / off	on / off	on / off
.104	Ton random	Turn on time	s	60	600	60	600
Comment:		The random time value is shown in .104 and cannot be edited					

Password				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		4	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		1	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		5	0	9	
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information		
ID		
.105	ID:xxxxxx SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set

**10.19 VDE-AR-N 4105:2018 Umr [ID 313]**

Connection Mode			Conformity Range			Possible Range		
ID	Default							
.003	Connection	4-wire (LN+LL)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		

Nominal Voltage				Conformity Range		Possible Range		
ID	ULN/LL nom	U <sub>nom</sub> Y U <sub>nom</sub> Δ	V V	Default	Min	Max	Min	Max
.005	ULN/LL nom	U <sub>nom</sub> Y U <sub>nom</sub> Δ	V V	Fixed to 230.0 / 400.0				

Functional Safety			Conformity Range			Possible Range			
ID	Default								
.007	Errtol	2ch	2ch			2ch, 1ch			
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary 1ch means: 1 channel without functional safety and 1 auxilliary contact necessary							

Overvoltage1 Line to Line				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.011	ULL >> off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 125% UNOM							
.012	ULL >> on	U <sub>THR</sub> ON	%U <sub>nom</sub>	110	110	110	100	110			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value									

Undervoltage1 Line to Line				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.015	ULL < off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 80% UNOM							
.016	ULL < on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	85	85	100			
		Time OFF	ms	Fixed to 3000ms							
Comment:		ULL < on has a fixed offset of 0.5% UNOM added to the displayed value									

Overvoltage1 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.019	ULN >> off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 125% UNOM							
.020	ULN >> on	U <sub>THR</sub> ON	%U <sub>nom</sub>	110	110	110	100	110			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value									

Undervoltage1 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.023	ULN < off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 80% UNOM							
.024	ULN < on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	85	85	100			
		Time OFF	ms	Fixed to 3000ms							
Comment:		ULN < on has a fixed offset of 0.5% UNOM added to the displayed value									

Undervoltage2 Line to Line				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.031	ULL << off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 45% UNOM							
.032	ULL << on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	85	85	100			
		Time OFF	ms	Fixed to 300ms							
Comment:		ULL << on has a fixed offset of 0.5% UNOM added to the displayed value									

Undervoltage2 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max		Min	Max			
.039	ULN << off	U <sub>THR</sub> OFF	%U <sub>nom</sub>	Fixed to 45% UNOM							
.040	ULN << on	U <sub>THR</sub> ON	%U <sub>nom</sub>	85	85	85	85	100			
		Time OFF	ms	Fixed to 300ms							
Comment:		ULN << on has a fixed offset of 0.5% UNOM added to the displayed value									

10 minutes average overvoltage				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.043	U > off	UTHR OFF	%Unom	110	110	115	110
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	Fixed to 51.50Hz			
.056	f > on	fTHR ON	Hz	50.10	50.10	50.10	50.00
		Time OFF	ms	Fixed to fastest possible disconnection			

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	Fixed to 47.50Hz			
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	47.50
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		f < on has a fixed offset of 0.025 Hz added to the displayed value					

Random overfrequency				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.086	f > random	Enable function	off	on / off		on / off	
.087	f > random	fTHR OFF	Hz	50.20	51.50	50.20	51.50
		fTHR ON	Hz	Fixed reconnection frequency of 50.10Hz			
		Time OFF	ms	Fixed to fastest possible disconnection			
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited					

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
						dis. (disabled)	dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 100ms			
.110	T ConDelOn	Time ON	ms	100	10000	100	300000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
						dis. (disabled)	dis. (disabled)

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	1
							600

Random Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.103	Ton random	Enable function	off	on / off	on / off	on / off	on / off
.104	Ton random	Turn on time	s	60	600	60	600
Comment:		The random time value is shown in .104 and cannot be edited					

Password				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		4	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		1	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		5	0	9	
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information		
ID		
.105	ID:xxxxxx SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set

**10.20 VDE-AR-N 4110:2018 TR3-25 [ID 706]**

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	3-wire, 4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 1ch					
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	ULL > off	UTHR OFF	%Unom	110	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (1% UNOM)			
.013	T ULL >	Time OFF	ms	18000 0	100	180000	100
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	ULL < off	UTHR OFF	%Unom	80	10	100	10
.016	ULL < on	UTHR ON	%Unom	95	95	95	10
.017	T ULL <	Time OFF	ms	1500	1500	2400	50
Comment:		ULL < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	ULN > off	UTHR OFF	%Unom	110	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (1% UNOM)			
.021	T ULN >	Time OFF	ms	18000 0	100	180000	100
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	ULN < off	UTHR OFF	%Unom	80	10	100	10
.024	ULN < on	UTHR ON	%Unom	95	95	95	10
.025	T ULN <	Time OFF	ms	1500	1500	2400	50
Comment:		ULN < on has a fixed offset of 0.5% UNOM added to the displayed value					
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.027	ULL >> off	UTHR OFF	%Unom	125	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (1% UNOM)			
.029	T ULL >>	Time OFF	ms	100	100	100	100
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.031	ULL << off	UTHR OFF	%Unom	30	10	100	10
.032	ULL << on	UTHR ON	%Unom	95	95	95	10
.033	T ULL <<	Time OFF	ms	800	800	800	50
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:		ULL << on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.035	ULN >> off	UTHR OFF	%Unom	125	100	130	100
		UTHR ON	%Unom	Fixed Hysteresis (1% Unom)			
.037	T ULN >>	Time OFF	ms	100	100	100	100
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.039	ULN << off	UTHR OFF	%Unom	30	10	100	10
.040	ULN << on	UTHR ON	%Unom	95	95	95	10
.041	T ULN <<	Time OFF	ms	800	800	800	50
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:	ULN << on has a fixed offset of 0.5% Unom added to the displayed value						

Overfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	55.00	50.00
.056	f > on	fTHR ON	Hz	50.10	50.10	50.00	55.00
.057	T f >	Time OFF	ms	5000	150	5000	150
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						

Underfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	45.00	50.00	45.00
.060	f < on	fTHR ON	Hz	49.90	49.90	49.90	45.00
.061	T f <	Time OFF	ms	50	50	70	50
Comment:	f < off has a fixed offset of 0.01 Hz added to the displayed value f < on has a fixed offset of 0.01 Hz added to the displayed value						

Overfrequency2				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.063	f >> off	fTHR OFF	Hz	52.50	50.00	55.00	50.00
.064	f >> on	fTHR ON	Hz	50.10	50.10	50.10	50.00
.065	T f >>	Time OFF	ms	50	50	70	50
Comment:	f >> off has a fixed offset of 0.01 Hz subtracted to the displayed value						

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			

Turn-on delay				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	600	0

Password					
ID			Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password	0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password	0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password	0	0	9
.109	PW4	4 <sup>th</sup> digit of Password	0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information		
ID		
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set

**10.21 CEI 0-21:2019 [ID 102]**

Connection Mode			Conformity Range			Possible Range		
ID		Default						
.003	Connection	4-wire (LN)	2-wire, 3-wire, 4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		

Nominal Voltage				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	Fixed to 230.0 / 400.0				

Functional Safety			Conformity Range			Possible Range		
ID		Default						
.007	Errtol	Fixed to 1ch						
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary						

Operational Mode			Conformity Range			Possible Range		
ID		Default						
.009	Mode	1 (transitory)	0 (definitive), 1 (transitory)			0 (definitive), 1 (transitory)		

Overvoltage1 Line to Line				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.011	V 59.S2 LL	UTHR OFF UTHR ON	%Unom %Unom	115	100 Fixed Hysteresis (4% UTHR)	130	100 135	
.013	T 59.S2 LL	Time OFF	ms	200	50 1000	50	10000	
Only active for:				Connection Modes: 3-wire, 4-wire (LN+LL)				

Undervoltage1 Line to Line				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.015	V 27.S1 LL	UTHR OFF UTHR ON	% Unom %Unom	85	20 Fixed Hysteresis (4% UTHR)	100	0 100	
.017	T 27.S1 LL	Time OFF	ms	1500	50 5000	5000	50 10000	
Only active for:				Connection Modes: 3-wire, 4-wire (LN+LL)				

Overvoltage1 Line to Neutral				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.019	V 59.S2 LN	UTHR OFF UTHR ON	%Unom %Unom	115	100 Fixed Hysteresis (4% UTHR)	130	100 135	
.021	T 59.S2 LN	Time OFF	ms	200	50 1000	5000	50 10000	
Only active for:				Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage1 Line to Neutral				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.023	V 27.S1 LN	UTHR OFF UTHR ON	%Unom %Unom	85	20 Fixed Hysteresis (4% UTHR)	100	0 100	
.025	T 27.S1 LN	Time OFF	ms	1500	50 5000	5000	50 10000	
Only active for:				Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage2 Line to Line				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.031	V 27.S2 LL	UTHR OFF UTHR ON	%Unom %Unom	15	5 Fixed Hysteresis (4% UTHR)	100	0 100	
.033	T 27.S2 LL	Time OFF	ms	200	50 5000	5000	50 10000	
Only active for:				Connection Modes: 3-wire, 4-wire (LN+LL)				

Undervoltage2 Line to Neutral				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.039	V 27.S2 LN	UTHR OFF UTHR ON	%Unom %Unom	15	5 Fixed Hysteresis (4% UTHR)	100	0 100	
.041	T 27.S2 LN	Time OFF	ms	200	50 5000	5000	50 10000	
Only active for:				Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

10 minutes average overvoltage				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.043	V 59.S1	U <sub>THR</sub> OFF	%Unom	110	100	120	100
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (4% U <sub>THR</sub> )			
.045	T 59.S1	Time OFF	ms	0	0	0	0
							10000

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	F 81>S2 ws	f <sub>THR</sub> OFF	Hz	51.50	50.00	52.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.057	T 81>S2 ws	Time OFF	ms	1000	50	5000	50
							10000
Only active for:		Operational Mode 0 (definitive mode) when DigIn4 is inactive (contact open) Voltage > 20% UNOM					

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	F 81<S2 ws	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.061	T 81<S2 ws	Time OFF	ms	4000	50	5000	50
							10000
Only active for:		Operational Mode 0 (definitive mode) when DigIn4 is inactive (contact open) Voltage > 20% UNOM					

Overfrequency2				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.063	F 81>S1 nf	f <sub>THR</sub> OFF	Hz	50.20	50.00	52.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.065	T 81>S1 nf	Time OFF	ms	100	50	5000	50
							10000
Only active for:		Operational Mode 0 (definitive mode) when DigIn4 is active (contact closed) Operational Mode 1 (transitory mode) when DigIn5 is active (contact closed) Voltage > 20% UNOM					

Underfrequency2				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.067	F 81<S1 nf	f <sub>THR</sub> OFF	Hz	49.80	47.00	50.00	45.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.069	T 81<S1 nf	Time OFF	ms	100	50	5000	50
							10000
Only active for:		Operational Mode 0 (definitive mode) when DigIn4 is active (contact closed) Operational Mode 1 (transitory mode) when DigIn5 is active (contact closed) Voltage > 20% UNOM					

Overfrequency3				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.071	F 81>S2 wf	f <sub>THR</sub> OFF	Hz	51.50	50.00	52.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.073	T 81>S2 wf	Time OFF	ms	100	50	5000	50
							10000
Only active for:		Operational Mode 1 (transitory mode) when DigIn5 is inactive (contact open) Voltage > 20% UNOM					

Underfrequency3				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.075	F 81<S2 wf	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.2% f <sub>THR</sub> )			
.077	T 81<S2 wf	Time OFF	ms	100	50	5000	50
							10000
Only active for:		Operational Mode 1 (transitory mode) when DigIn5 is inactive (contact open) Voltage > 20% UNOM					

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.090	RoCoF	Enable Function		off	on / off	on / off		
.091	RoCoF OFF	RoCoF <sub>THR</sub> OFF	mHz/s	2700	1000	4000	100	8000
.092	RoCoF ON	RoCoF <sub>THR</sub> ON	mHz/s	2300	1000	4000	100	8000
.093	T RoCoF	Time OFF	ms	0	0	1000	0	10000
.111	RoCoF wnd	Window length	ms	100	100	1000	100	1000

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)		n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	5	0	300	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information							
ID							
.105	ID: xxxxxx	xxxxx = Device ID					
	SW: aa.ddccb	dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

**10.22 G99/1/3:2018 LV [ID 410]**

Connection Mode			Conformity Range			Possible Range		
ID	Default							
.003	Connection		Fixed to 4-wire (LN)					
Nominal Voltage				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4
Functional Safety			Conformity Range			Possible Range		
ID	Default							
.007	Errtol	Fixed to 1ch						
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary						
Overvoltage1 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.019	O/V st 1	U <sub>THR</sub> OFF	%Unom	114	114	114	100	135
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.021	T O/V st 1	Time OFF	ms	1000	1000	1000	50	300000
Overvoltage2 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.035	O/V st 2	U <sub>THR</sub> OFF	%Unom	119	119	119	100	135
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.037	T O/V st 2	Time OFF	ms	500	500	500	50	300000
Undervoltage2 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.039	U/V	U <sub>THR</sub> OFF	%Unom	80	80	80	0	100
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.041	T U/V	Time OFF	ms	2500	2500	2500	50	300000
Underfrequency1				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.059	U/F st 1	f <sub>THR</sub> OFF	Hz	47.50	47.50	47.50	40.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)				
.061	T U/F st 1	Time OFF	ms	20000	20000	20000	1000	300000
Overfrequency2				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.063	O/F	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00	55.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)				
.065	T O/F	Time OFF	ms	500	500	500	50	300000
Underfrequency2				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.067	U/F st 2	f <sub>THR</sub> OFF	Hz	47.00	47.00	47.00	40.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)				
.069	T U/F st 2	Time OFF	ms	500	500	500	50	300000
Frequency measuring in general				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.090	RoCoF	Enable Function			on	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10	3000	
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10	3000	
.093	RoCoFDelay	Time OFF			500	50	500	50	2000
.111	RoCoF wnd	Window length		ms	Fixed window length 225ms				

Phase Shift (PShift)				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.094	PShift	Enable Function			off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	12	--	--	3	15	
.096	PShift on	PShift <sub>THR</sub> ON	°	9	--	--	3	15	
		Time OFF		ms	Fixed to fastest possible disconnection				
.112	PShift wnd	Window length		ms	Fixed window length 200ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	20	20	20	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information						
ID						
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

**10.23 G99/1/3:2018 HV [ID 460]**

Connection Mode			Conformity Range			Possible Range					
ID	Default										
.003	Connection		Fixed to 3-wire								
Nominal Voltage				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400	28.8 50.0	241.4 420.0			
Functional Safety			Conformity Range			Possible Range					
ID	Default										
.007	Errtol	Fixed to 1ch									
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary									
Overvoltage1 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.011	O/V st 1	U <sub>THR</sub> OFF	%Unom	110	110	110	100	135			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.013	T O/V st 1	Time OFF	ms	1000	1000	1000	50	300000			
Overvoltage2 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.027	O/V st 2	U <sub>THR</sub> OFF	%Unom	113	113	113	100	135			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.029	T O/V st 2	Time OFF	ms	500	500	500	50	300000			
Undervoltage2 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.031	U/V	U <sub>THR</sub> OFF	%Unom	80	80	80	0	100			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.033	T U/V	Time OFF	ms	2500	2500	2500	50	300000			
Underfrequency1				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.059	U/F st 1	f <sub>THR</sub> OFF	Hz	47.50	47.50	47.50	40.00	50.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.061	T U/F st 1	Time OFF	ms	20000	20000	20000	1000	300000			
Overfrequency2				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.063	O/F	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00	55.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.065	T O/F	Time OFF	ms	500	500	500	50	300000			
Underfrequency2				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.067	U/F st 2	f <sub>THR</sub> OFF	Hz	47.00	47.00	47.00	40.00	50.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.069	T U/F st 2	Time OFF	ms	500	500	500	50	300000			
Frequency measuring in general				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.113	F wnd	Window length	ms	Fixed window length 100ms							

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.090	RoCoF	Enable Function			on	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10	3000	
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10	3000	
.093	RoCoFDelay	Time OFF			500	50	500	50	2000
.111	RoCoF wnd	Window length		ms	Fixed window length 225ms				

Phase Shift (PShift)				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.094	PShift	Enable Function			off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	12	--	--	3	15	
.096	PShift on	PShift <sub>THR</sub> ON	°	9	--	--	3	15	
		Time OFF		ms	Fixed to fastest possible disconnection				
.112	PShift wnd	Window length		ms	Fixed window length 200ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms				

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	20	20	20	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.24 G98/1/2:2018 [ID 510]**

Connection Mode			Conformity Range			Possible Range	
ID	Default						
.003	Connection		Fixed to 4-wire (LN)				

Nominal Voltage				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.005	ULN/LL nom	U <sub>nom</sub> Y	V	230.0	230.0	240.0	100.0
		U <sub>nom</sub> Δ	V	400.0	400.0	417.4	173.9

Functional Safety			Conformity Range			Possible Range	
ID	Default						
.007	Errtol		Fixed to 1ch				
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.019	O/V st 1	U <sub>THR</sub> OFF	%U <sub>nom</sub>	114	114	114	100
		U <sub>THR</sub> ON	%U <sub>nom</sub>	Fixed Hysteresis (0.75% U <sub>NOM</sub> )			
.021	T O/V st 1	Time OFF	ms	1000	1000	1000	50

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.035	O/V st 2	U <sub>THR</sub> OFF	%U <sub>nom</sub>	119	119	119	100
		U <sub>THR</sub> ON	%U <sub>nom</sub>	Fixed Hysteresis (0.75% U <sub>NOM</sub> )			
.037	T O/V st 2	Time OFF	ms	500	500	500	50

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.039	U/V	U <sub>THR</sub> OFF	%U <sub>nom</sub>	80	80	80	0
		U <sub>THR</sub> ON	%U <sub>nom</sub>	Fixed Hysteresis (0.75% U <sub>NOM</sub> )			
.041	T U/V	Time OFF	ms	2500	2500	2500	50

Underfrequency1				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.059	U/F st 1	f <sub>THR</sub> OFF	Hz	47.50	47.50	47.50	40.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)			
.061	T U/F st 1	Time OFF	ms	20000	20000	20000	1000

Overfrequency2				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.063	O/F	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)			
.065	T O/F	Time OFF	ms	500	500	500	50

Underfrequency2				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.067	U/F st 2	f <sub>THR</sub> OFF	Hz	47.00	47.00	47.00	40.00
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)			
.069	T U/F st 2	Time OFF	ms	500	500	500	50

Frequency measuring in general				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID	Default			Min	Max	Min	Max
.090	RoCoF	Enable Function	on	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10
		Time OFF	ms	Fixed to fastest possible disconnection			
.111	RoCoF wnd	Window length	ms	Fixed window length 535ms			

Phase Shift (PShift)				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.094	PShift	Enable Function			off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	12	--	--	3	15	
.096	PShift on	PShift <sub>THR</sub> ON	°	9	--	--	3	15	
		Time OFF		ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length		ms	Fixed window length 200ms				

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)			
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)			

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	20	20	20	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information							
ID							
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.25 C10-11:2021 LV-IP [ID 603] Interface Protection low voltage

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y	V	230.0	230.0	240.0	100.0 240.0
		Unom Δ	V	400.0	400.0	417.4	173.9 417.4

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 1ch				
Remark:	1ch means: 1 channel without functional safety and 1 auxilliary contact necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	U LN > off	U <sub>THR</sub> OFF	%Unom	110	100	110	100 135
.020	U LN > on	U <sub>THR</sub> ON	%Unom	109	100	120	100 135
.021	T U LN >	Time OFF	ms	1000	0	3000	0 10000
Comment:	U LN > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	U LN < off	U <sub>THR</sub> OFF	%Unom	70	50	85	0 100
.024	U LN < on	U <sub>THR</sub> ON	%Unom	85	50	100	0 100
.025	T U LN <	Time OFF	ms	1500	0	1500	0 10000
Comment:	U LN < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.035	U LN>> off	U <sub>THR</sub> OFF	%Unom	115	110	130	100 135	
.036	U LN>> on	U <sub>THR</sub> ON	%Unom	114	100	120	100 135	
.037	T U LN>>	Time OFF	ms	0	0	0	0 10000	
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	U LN > off has a fixed offset of 0.25% UNOM subtracted from the displayed value							
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.039	U LN<< off	U <sub>THR</sub> OFF	%Unom	15	15	50	0 100
.040	U LN<< on	U <sub>THR</sub> ON	%Unom	85	50	100	0 100
.041	T U LN<<	Time OFF	ms	250	0	5000	0 10000
Comment:	U LN < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Zero Voltage Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.115	Uzero >	Enable Function	on	on		on/off	
.116	Uzero> off	U <sub>THR</sub> OFF	%Unom	20	20	20	5 100
.117	Uzero> on	U <sub>THR</sub> ON	%Unom	15	1	19	1 100
.118	T Uzero >	Time OFF	ms	1500	0	1500	0 10000
Only active for:	Connection Modes: 4-wire (LN+LL)						

Residual Voltage (3 x Zero Voltage) Line to Neutral Activation of a narrower frequency window				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.119	Ures-anfw>	Enable Function	on	on		on/off	
.120	Ures > on	UTHR OFF %Unom	5	5	5	2	100
.121	Ures > off	UTHR ON %Unom	3	1	3	1	100
.122	T Ures >	Time OFF ms	200	0	240000	0	240000
Only active for:	Connection Modes: 4-wire (LN+LL)						

Undervoltage Line to Neutral Activation of a narrower frequency window				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.123	Uanfw <	Enable Function	on	on		on/off	
.124	Uanfw< on	UTHR OFF %Unom	85	85	85	1	100
.125	Uanfw< off	UTHR ON %Unom	86	86	100	2	100
.126	T Uanfw <	Time OFF ms	0	0	240000	0	240000
Only active for:	Connection Modes: 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.055	f > off	fTHR OFF Hz	51.50	51.50	51.50	50.00	55.00
.056	f > on	fTHR ON Hz	50.10	50.00	52.00	50.00	55.00
.057	T f >	Time OFF ms	0	0	0	0	10000
Comment:	f > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 20% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.059	f < off	fTHR OFF Hz	47.50	47.50	47.50	40.00	50.00
.060	f < on	fTHR ON Hz	49.90	47.00	50.00	40.00	50.00
.061	T f <	Time OFF ms	0	0	0	0	10000
Comment:	f < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 20% UNOM						

Overfrequency nw (narrower window)				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.062	f nw >	Enable Function	on	on		on/off	
.063	f nw > off	fTHR OFF Hz	50.30	50.30	50.30	50.00	55.00
.064	f nw > on	fTHR ON Hz	50.10	50.00	52.00	50.00	55.00
.065	T f nw >	Time OFF ms	500	500	500	0	10000
Comment:	f nw > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Underfrequency nw (narrower window)				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.066	f nw <	Enable Function	on	on		on/off	
.067	f nw < off	fTHR OFF Hz	49.70	49.70	49.70	45.00	50.00
.068	f nw < on	fTHR ON Hz	49.90	47.00	50.00	45.00	50.00
.069	T f nw <	Time OFF ms	500	500	500	0	10000
Comment:	f nw < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		on	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	1000	2000	100	5000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	2000	100	5000
.093	RoCoF t	Time OFF	ms	0	0	0	0	5000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	7	7	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:		PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	300	100	300	10	5000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	T on delay	Turn on time	s	60	60	60	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information							
ID							
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

## 10.26C10-11:2019 LV-ASS [ID 602] Automatic Separation System / Low Voltage

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 1ch				
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary				

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.019	U LN > off	UTHR OFF	%Unom	115	100	120	100	135
.020	U LN > on	UTHR ON	%Unom	109	100	120	100	135
.021	T U LN >	Time OFF	ms	100	100	100000	100	100000
Comment:		U LN > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	U LN < off	UTHR OFF	%Unom	80	20	100	0	100
.024	U LN < on	UTHR ON	%Unom	85	50	100	0	100
.025	T U LN <	Time OFF	ms	100	100	100000	100	100000
Comment:		U LN < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

10 minutes average overvoltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.042	Uavg	Enable function	on			on /off		
.043	Uavg off	UTHR OFF	%Unom	110	100	115	100	135
		UTHR ON	%Unom	Fixed Hysteresis (1% UNOM)				
		Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range					
ID		Default		Min	Max	Min	Max				
.055	f > off	fTHR OFF	Hz	51.50	50.00	52.00	50.00	55.00			
.056	f > on	fTHR ON	Hz	50.10	50.00	52.00	50.00	55.00			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		f > off has a fixed offset of 0.01 Hz subtracted to the displayed value									
Only active for:		Voltage > 20% UNOM									

Underfrequency1				Conformity Range		Possible Range					
ID		Default		Min	Max	Min	Max				
.059	f < off	fTHR OFF	Hz	47.50	47.00	50.00	40.00	50.00			
.060	f < on	fTHR ON	Hz	49.90	47.00	50.00	40.00	50.00			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		f < off has a fixed offset of 0.01 Hz added to the displayed value									
Only active for:		Voltage > 20% UNOM									

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	1000	100	1000
.093	RoCoF t	Time OFF	ms	0	0	0	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	7	7	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:		PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	300			100	300
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password			0	0
.107	PW2	2 <sup>nd</sup> digit of Password			0	0
.108	PW3	3 <sup>rd</sup> digit of Password			0	0
.109	PW4	4 <sup>th</sup> digit of Password			0	0
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information						
ID						
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

## 10.27C10-11:2021 HV-IP [ID 653] Interface Protection / High Voltage

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range			
ID		Default							
.007	Errtol	Fixed to 1ch							
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact necessary							

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	U LL > off	UTHR OFF	%Unom	110	100	110	100
.012	U LL > on	UTHR ON	%Unom	109	100	120	100
.013	T U LL >	Time OFF	ms	1000	0	3000	0
Comment:	U LL > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	U LL < off	UTHR OFF	%Unom	70	50	85	0
.016	U LL < on	UTHR ON	%Unom	90	50	100	0
.017	T U LL <	Time OFF	ms	1500	0	1500	0
Comment:	U LL < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.027	U LL>> off	UTHR OFF	%Unom	115	110	130	100
.028	U LL>> on	UTHR ON	%Unom	114	100	120	100
.029	T U LL>>	Time OFF	ms	0	0	0	10000
Comment:	U LL>> off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.031	U LL<< off	UTHR OFF	%Unom	15	15	50	0
.032	U LL<< on	UTHR ON	%Unom	90	50	100	0
.033	T U LL<<	Time OFF	ms	250	0	5000	0
Comment:	U LL<< off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage Line to Neutral Activation of a narrower frequency window				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.123	Uanfw <	Enable Function		off	on/off		on/off	
.124	Uanfw< on	UTHR OFF	%Unom	85	85	85	1	
.125	Uanfw< off	UTHR ON	%Unom	90	86	100	2	
.126	T Uanfw <	Time OFF	ms	0	0	240000	0	
Only active for:	Connection Modes: 4-wire (LN+LL)							

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	51.50	51.50	50.00
.056	f > on	fTHR ON	Hz	50.10	50.00	52.00	50.00
.057	T f >	Time OFF	ms	0	0	0	0
Comment:	f > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 20% UNOM						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	47.50	47.50	40.00
.060	f < on	fTHR ON	Hz	49.90	47.00	50.00	40.00
.061	T f <	Time OFF	ms	0	0	0	0
Comment:	f < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 20% UNOM						

Overfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.062	f nw >	Enable Function	on	on	on	on/off	
.063	f nw > off	fTHR OFF	Hz	50.30	50.30	50.00	55.00
.064	f nw > on	fTHR ON	Hz	50.10	50.00	52.00	55.00
.065	T f nw >	Time OFF	ms	500	500	500	0
Comment:	f nw > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Dig Input5=HIGH (local setting)						

Underfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.066	f nw <	Enable Function	on	on	on	on/off	
.067	f nw < off	fTHR OFF	Hz	49.70	49.70	49.70	45.00
.068	f nw < on	fTHR ON	Hz	49.90	47.00	50.00	45.00
.069	T f nw <	Time OFF	ms	500	500	500	0
Comment:	f nw < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Dig Input5=HIGH (local setting)						

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.090	RoCoF	Enable Function	on	on / off		on / off		
.091	RoCoF off	RoCoFTHR OFF	mHz/s	1000	1000	2000	100	
.092	RoCoF on	RoCoFTHR ON	mHz/s	800	100	2000	100	
.093	RoCoF t	Time OFF	ms	0	0	0	5000	
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.094	PShift	Enable Function	off	on / off		on / off		
.095	PShift off	PShiftTHR OFF	°	7	7	7	3	
.096	PShift on	PShiftTHR ON	°	5	3	7	3	
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:	PShift off has a fixed offset of 1° subtracted from the displayed value							

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	Contact t	Time OFF	ms	300		100	300
.114	I3 STOP	Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	T on delay	Turn on time	s	60	60	60	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

## 10.28C10-11:2019 HV-ASS [ID 652] Automatic Separation System / High Voltage

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 1ch				
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary				

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U LL > off	UTHR OFF	%Unom	115	100	120	100	135
.012	U LL > on	UTHR ON	%Unom	109	100	120	100	135
.013	T U LL >	Time OFF	ms	100	100	100000	100	100000
Comment:		U LL > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U LL < off	UTHR OFF	%Unom	80	20	100	0	100
.016	U LL < on	UTHR ON	%Unom	90	50	100	0	100
.017	T U LL <	Time OFF	ms	100	100	100000	100	10000
Comment:		U LL < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

10 minutes average overvoltage				Conformity Range		Possible Range				
ID		Default		Min	Max	Min	Max			
.042	Uavg	Enable function	on			on /off				
.043	Uavg off	UTHR OFF	%Unom	110	100	115	100	135		
		UTHR ON	%Unom	Fixed Hysteresis (1% UNOM)						
		Time OFF	ms	Fixed to fastest possible disconnection						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.50	50.00	52.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.10	50.00	52.00	50.00	55.00
.057	T f >	Time OFF	ms	100	100	100000	100	100000
Comment:		f > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 20% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	47.00	50.00	40.00	50.00
.060	f < on	fTHR ON	Hz	49.90	47.00	50.00	40.00	50.00
.061	T f <	Time OFF	ms	100	100	100000	100	100000
Comment:		f < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:		Voltage > 20% UNOM						

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	1000	100	1000
.093	RoCoF t	Time OFF	ms	0	0	0	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	7	7	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:		PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	300	100	300	10	5000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information					
ID					
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

## 10.29NA/EEA- CH 2014 [ID 1200] Low Voltage Type A up to 1MW

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y	V	230.0	230.0	230.0	28.8 241.4
		Unom Δ	V	400.0	400.0	400.0	50.0 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.010	ULL >	Enable function	off	on / off	on / off	
.011	ULL > off	U <sub>THR</sub> OFF	%Unom	110	100	115
.012	ULL > on	U <sub>THR</sub> ON	%Unom	110	100	110
.013	T ULL >	Time OFF	ms	60000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.015	ULL < off	U <sub>THR</sub> OFF	%Unom	80	10	100
.016	ULL < on	U <sub>THR</sub> ON	%Unom	90	90	100
.017	T ULL <	Time OFF	ms	100	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL < on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.018	ULN >	Enable function	off	on / off	on / off	
.019	ULN > off	U <sub>THR</sub> OFF	%Unom	110	100	115
.020	ULN > on	U <sub>THR</sub> ON	%Unom	110	100	110
.021	T ULN >	Time OFF	ms	60000	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					
Comment:	ULN > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.023	ULN < off	U <sub>THR</sub> OFF	%Unom	80	10	100
.024	ULN < on	U <sub>THR</sub> ON	%Unom	90	90	100
.025	T ULN <	Time OFF	ms	100	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					
Comment:	ULN < on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.027	ULL >> off	U <sub>THR</sub> OFF	%Unom	115	100	125
.028	ULL >> on	U <sub>THR</sub> ON	%Unom	110	100	110
.029	T ULL >>	Time OFF	ms	100	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.035	ULN >> off	UTHR OFF	%Unom	115	100	125	100	135
.036	ULN >> on	UTHR ON	%Unom	110	100	110	100	135
.037	T ULN >>	Time OFF	ms	100	50	180000	50	180000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:		ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.042	U10min	Enable function		on	on/off		on /off	
.043	U10min off	UTHR OFF	%Unom	110	110	115	100	135
		UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)				
		Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	51.50	50.00	53.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.00	50.05	50.00	55.00
.057	T f >	Time OFF	ms	50	50	50	50	180000
Comment:		f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						

Underfrequency1				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	47.00	50.00	45.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	50.00	45.00	50.00
.061	T f <	Time OFF	ms	50	50	50	50	180000
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value						

Frequency measuring in general				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.113	F wnd	Window length		ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.102	Ton delay		Turn on time	s	120	0	1800	0	1800

Password				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9		
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9		
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9		
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9		
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information		
ID		
.105	ID:xxxxxx SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set

## 10.30NA/EEA-NE7 - CH 2020 [ID 1220] Low Voltage Type A &gt; 800W to ≤ 250kW

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.010	ULL >	Enable function	off	on / off		on / off		
.011	ULL > off	UTHR OFF	%Unom	110	100	115	100	135
.012	ULL > on	UTHR ON	%Unom	110	100	110	100	135
.013	T ULL >	Time OFF	ms	60000	50	180000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)							
Comment:	ULL > on has a fixed offset of 0.5% UNOM subtracted from the displayed value							

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	ULL < off	UTHR OFF	%Unom	80	10	100	10	100
.016	ULL < on	UTHR ON	%Unom	85	85	100	10	100
.017	T ULL <	Time OFF	ms	1500	50	10000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)							
Comment:	ULL > on has a fixed offset of 0.5% UNOM added to the displayed value							

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.018	ULN >	Enable function	off	on / off		on / off		
.019	ULN > off	UTHR OFF	%Unom	110	100	115	100	135
.020	ULN > on	UTHR ON	%Unom	110	100	110	100	135
.021	T ULN >	Time OFF	ms	60000	50	180000	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							
Comment:	ULN > on has a fixed offset of 0.5% UNOM subtracted from the displayed value							

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	ULN < off	UTHR OFF	%Unom	80	10	100	10	100
.024	ULN < on	UTHR ON	%Unom	85	85	100	10	100
.025	T ULN <	Time OFF	ms	1500	50	10000	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							
Comment:	ULN > on has a fixed offset of 0.5% UNOM added to the displayed value							

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.027	ULL >> off	UTHR OFF	%Unom	120	100	125	100	135
.028	ULL >> on	UTHR ON	%Unom	110	100	110	100	135
.029	T ULL >>	Time OFF	ms	100	50	1000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)							
Comment:	ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value							

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.031	ULL << off	U <sub>THR</sub> OFF	%Unom	45	10	100	10
.032	ULL << on	U <sub>THR</sub> ON	%Unom	85	85	100	10
.033	T ULL <<	Time OFF	ms	300	50	1000	50
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						
Comment:	ULL << on has a fixed offset of 0.5% UNOM added to the displayed value						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.035	ULN >> off	U <sub>THR</sub> OFF	%Unom	120	100	125	100
.036	ULN >> on	U <sub>THR</sub> ON	%Unom	110	100	110	100
.037	T ULN >>	Time OFF	ms	100	50	1000	50
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:	ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.039	ULN << off	U <sub>THR</sub> OFF	%Unom	45	10	100	10
.040	ULN << on	U <sub>THR</sub> ON	%Unom	85	85	100	100
.041	T ULN <<	Time OFF	ms	300	50	1000	50
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:	ULN << on has a fixed offset of 0.5% UNOM added to the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.042	U10min	Enable function	On	on/off		on / off	
.043	U10min off	U <sub>THR</sub> OFF	%Unom	110	110	115	100
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	53.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
.060	f < on	f <sub>THR</sub> ON	Hz	47.50	47.50	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.090	RoCoF	Enable Function	off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	2000	2000	2000	100
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	1900	100	1900	100
.093	RoCoF t	Time OFF	ms	0	0	500	0
.111	RoCoF wnd	Window length	ms	Fixed window length 500ms			

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	60	1800	0	1800

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password			0	0
.107	PW2	2 <sup>nd</sup> digit of Password			0	0
.108	PW3	3 <sup>rd</sup> digit of Password			0	0
.109	PW4	4 <sup>th</sup> digit of Password			0	0

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

## 10.31NA/EEA-NE7 - CH 2020 [ID 1221] Low Voltage Type B &gt; 250kW to ≤ 36MW

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.010	ULL >	Enable function	off	on / off	on / off	
.011	ULL > off	UTHR OFF %Unom	110	100 115	100	135
.012	ULL > on	UTHR ON %Unom	110	100 110	100	135
.013	T ULL >	Time OFF ms	60000	50 180000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.015	ULL < off	UTHR OFF %Unom	80	10 100	10	100
.016	ULL < on	UTHR ON %Unom	85	85 100	10	100
.017	T ULL <	Time OFF ms	1000	50 10000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL > on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.018	ULN >	Enable function	off	on / off	on / off	
.019	ULN > off	UTHR OFF %Unom	110	100 115	100	135
.020	ULN > on	UTHR ON %Unom	110	100 110	100	135
.021	T ULN >	Time OFF ms	60000	50 180000	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					
Comment:	ULN > on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage1 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.023	ULN < off	UTHR OFF %Unom	80	10 100	10	100
.024	ULN < on	UTHR ON %Unom	85	85 100	10	100
.025	T ULN <	Time OFF ms	1000	50 10000	50	180000
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					
Comment:	ULN > on has a fixed offset of 0.5% UNOM added to the displayed value					

Overvoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.027	ULL >> off	UTHR OFF %Unom	120	100 125	100	135
.028	ULL >> on	UTHR ON %Unom	110	100 110	100	135
.029	T ULL >>	Time OFF ms	100	50 1000	50	180000
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)					
Comment:	ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value					

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.031	ULL << off	U <sub>THR</sub> OFF	%Unom	45	10	100	10
.032	ULL << on	U <sub>THR</sub> ON	%Unom	85	85	100	10
.033	T ULL <<	Time OFF	ms	300	50	1000	50
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						
Comment:	ULL << on has a fixed offset of 0.5% UNOM added to the displayed value						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.035	ULN >> off	U <sub>THR</sub> OFF	%Unom	120	100	125	100
.036	ULN >> on	U <sub>THR</sub> ON	%Unom	110	100	110	100
.037	T ULN >>	Time OFF	ms	100	50	1000	50
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:	ULN >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.039	ULN << off	U <sub>THR</sub> OFF	%Unom	45	10	100	10
.040	ULN << on	U <sub>THR</sub> ON	%Unom	85	85	100	100
.041	T ULN <<	Time OFF	ms	300	50	1000	50
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Comment:	ULN << on has a fixed offset of 0.5% UNOM added to the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.042	U10min	Enable function	On	on/off		on / off	
.043	U10min off	U <sub>THR</sub> OFF	%Unom	110	110	115	100
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.9% UNOM)			
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	53.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.1	50.00	50.1	50.00
.057	T f >	Time OFF	ms	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
.060	f < on	f <sub>THR</sub> ON	Hz	47.50	47.50	50.00	45.00
.061	T f <	Time OFF	ms	50	50	50	180000
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.090	RoCoF	Enable Function	off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	2000	2000	2000	100
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	1900	100	1900	100
.093	RoCoF t	Time OFF	ms	0	0	500	0
.111	RoCoF wnd	Window length	ms	Fixed window length 500ms			

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	600	60	1800	0	1800

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

## 10.32EN50549-1:2019 LV Netherlands [ID 901]

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y	V	230.0	230.0	57.5	230.0	100.0
		Unom Δ	V	400.0	400.0	100.0	400.0	50.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				

Overvoltage1 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.010	ULL >	Enable Function	on	on/off	on/off		
.011	ULL > off	U <sub>THR</sub> OFF %Unom	110	100	120	100	135
.012	ULL > on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.013	T ULL >	Time OFF ms	200	100	100000	100	300000
Comment:	ULL > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.014	ULL <	Enable Function	on	on/off	on/off		
.015	ULL < off	U <sub>THR</sub> OFF %Unom	80	20	100	10	100
.016	ULL < on	U <sub>THR</sub> ON %Unom	85	50	100	10	100
.017	T ULL <	Time OFF ms	3000	100	100000	100	3000000
Comment:	ULL < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	ULN >	Enable Function	on	on/off	on/off		
.019	ULN > off	U <sub>THR</sub> OFF %Unom	110	100	120	100	135
.020	ULN > on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.021	T ULN >	Time OFF ms	200	100	100000	100	300000
Comment:	ULN > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.022	ULN <	Enable Function	on	on/off	on/off		
.023	ULN < off	U <sub>THR</sub> OFF %Unom	80	20	100	10	100
.024	ULN < on	U <sub>THR</sub> ON %Unom	85	50	100	10	100
.025	T LN <	Time OFF ms	3000	100	100000	0	300000
Comment:	ULN < off has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.026	ULL >>	Enable Function	on	on/off	on/off		
.027	ULL >> off	U <sub>THR</sub> OFF %Unom	120	100	120	100	135
.028	ULL >> on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.029	T ULL >	Time OFF ms	100	100	5000	100	300000
Comment:	ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.030	ULL <<	Enable Function	on	on/off	on/off	
.031	ULL << off	UTHR OFF %Unom	30	20	100	10
.032	ULL << on	UTHR ON %Unom	85	50	100	10
.033	T ULL <<	Time OFF ms	100	100	5000	100
Comment:		ULL << on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)				

Overvoltage2 Line to Neutral			Conformity Range		Possible Range					
ID		Default	Min	Max	Min	Max				
.034	ULN>>	Enable Function	on	on/off	on/off					
.035	ULN>> off	UTHR OFF %Unom	120	100	130	100				
.036	ULN>> on	UTHR ON %Unom	109	100	120	100				
.037	T ULN>>	Time OFF ms	100	100	5000	100				
		Time OFF ms	Fixed to fastest possible disconnection							
Comment:		U LN > off has a fixed offset of 0.5% UNOM subtracted from the displayed value								
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)								

Undervoltage2 Line to Neutral			Conformity Range		Possible Range					
ID		Default	Min	Max	Min	Max				
.038	ULN<<	Enable Function	on	on/off	on/off					
.039	ULN<< off	UTHR OFF %Unom	30	20	100	10				
.040	ULN<< on	UTHR ON %Unom	85	50	100	10				
.041	T ULN<<	Time OFF ms	100	100	5000	100				
		Time OFF ms	Fixed to fastest possible disconnection							
Comment:		U LN < off has a fixed offset of 0.25% UNOM added to the displayed value								
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)								

10 minutes average overvoltage			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.042	Uavg	Enable function	on	on / off	on / off	
.043	Uavg off	UTHR OFF %Unom	110	100	115	100
.044	Uavg on	UTHR ON %Unom	109	100	115	100
		Time OFF ms	Fixed to fastest possible disconnection			

Zero Voltage Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.115	Uzero >	Enable Function	off	on/off	on/off	
.116	Uzero> off	UTHR OFF %Unom	20	1	100	1
.117	Uzero> on	UTHR ON %Unom	15	1	100	1
.118	T Uzero >	Time OFF ms	1500	200	100000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Residual Voltage (3 x Zero Voltage) Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.119	Ures-anfw>	Enable Function	off	on/off	on/off	
.120	U res > on	UTHR OFF %Unom	5	2	20	2
.121	U res > off	UTHR ON %Unom	3	1	20	1
.122	T Ures >	Time OFF ms	200	0	240000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Undervoltage Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.123	Uanfw <	Enable Function	off	on/off	on/off	
.124	Uanfw< on	UTHR OFF %Unom	85	21	100	2
.125	Uanfw< off	UTHR ON %Unom	86	21	100	2
.126	T Uanfw <	Time OFF ms	0	0	240000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.054	f >	Enable Function		on	on	on/off	
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	52.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.10	50.00	52.00	50.00
.057	T f >	Time OFF	ms	100	100	100000	100
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 20% U <sub>NOM</sub>						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.058	f <	Enable Function		on	on	on/off	
.059	f < off	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
.060	f < on	f <sub>THR</sub> ON	Hz	48.50	47.00	50.00	45.00
.061	T f <	Time OFF	ms	100	100	100000	100
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 20% U <sub>NOM</sub>						

Overfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.062	f nw >	Enable Function		off	on/off	on/off	
.063	f nw > off	f <sub>THR</sub> OFF	Hz	50.30	50.00	52.00	50.00
.064	f nw > on	f <sub>THR</sub> ON	Hz	50.10	50.00	52.00	50.00
.065	T f nw >	Time OFF	ms	500	100	5000	100
Comment:	f nw > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Underfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.066	f nw <	Enable Function		off	on/off	on/off	
.067	f nw < off	f <sub>THR</sub> OFF	Hz	49.70	47.00	50.00	45.00
.068	f nw < on	f <sub>THR</sub> ON	Hz	49.80	47.00	50.00	45.00
.069	T f nw <	Time OFF	ms	500	100	5000	100
Comment:	f nw < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.090	ROCOF	Enable Function		off	on / off	on / off	
.091	ROCOF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	200	9990	100
.092	ROCOF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	9990	100
.093	ROCOF t	Time OFF	ms	0	0	5000	0
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms			

Phase Shift (PShift)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off	on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	2	15	2
.096	PShift on	PShift <sub>THR</sub> ON	°	5	1	15	1
		Time OFF	ms	Fixed to the fastest possible disconnection			
.112	PShift wnd	Window length	ms	Fixed window length 100ms			
Comment:	PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	500			
.114	I3 STOP	Type	n.o. (normally opened)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	T on delay	Turn on time	s	60	10	600	10	600

Password					
ID				Default	
.106	PW1	1 <sup>st</sup> digit of Password			0
.107	PW2	2 <sup>nd</sup> digit of Password			0
.108	PW3	3 <sup>rd</sup> digit of Password			0
.109	PW4	4 <sup>th</sup> digit of Password			0

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

### 10.33 EN50549-2:2019 HV Netherlands [ID 926]

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN+LL)	3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	100.0 50.0	240.0 420.0

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 2ch				

Overvoltage1 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.010	ULL >	Enable Function	on	on/off	on/off		
.011	ULL > off	U <sub>THR</sub> OFF %Unom	110	100	120	100	135
.012	ULL > on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.013	T ULL >	Time OFF ms	200	100	100000	100	300000
Comment:	ULL > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.014	ULL <	Enable Function	on	on/off	on/off		
.015	ULL < off	U <sub>THR</sub> OFF %Unom	80	20	100	10	100
.016	ULL < on	U <sub>THR</sub> ON %Unom	90	50	100	10	100
.017	T ULL <	Time OFF ms	3000	100	100000	100	3000000
Comment:	ULL < on has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.018	ULN >	Enable Function	on	on/off	on/off		
.019	ULN > off	U <sub>THR</sub> OFF %Unom	110	100	120	100	135
.020	ULN > on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.021	T ULN >	Time OFF ms	200	100	100000	100	300000
Comment:	ULN > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.022	ULN <	Enable Function	on	on/off	on/off		
.023	ULN < off	U <sub>THR</sub> OFF %Unom	80	20	100	10	100
.024	ULN < on	U <sub>THR</sub> ON %Unom	90	50	100	10	100
.025	T LN <	Time OFF ms	3000	100	100000	0	300000
Comment:	ULN < off has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Line			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.026	ULL >>	Enable Function	on	on/off	on/off		
.027	ULL >> off	U <sub>THR</sub> OFF %Unom	120	100	120	100	135
.028	ULL >> on	U <sub>THR</sub> ON %Unom	109	100	120	100	135
.029	T ULL >	Time OFF ms	100	100	5000	100	300000
Comment:	ULL >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.030	ULL <<	Enable Function	on	on/off	on/off	
.031	ULL << off	UTHR OFF %Unom	30	20	100	10
.032	ULL << on	UTHR ON %Unom	90	50	100	10
.033	T ULL <<	Time OFF ms	100	100	5000	100
Comment:		ULL << on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)				

Overvoltage2 Line to Neutral			Conformity Range		Possible Range					
ID		Default	Min	Max	Min	Max				
.034	ULN>>	Enable Function	on	on/off	on/off					
.035	ULN>> off	UTHR OFF %Unom	120	100	130	100				
.036	ULN>> on	UTHR ON %Unom	109	100	120	100				
.037	T ULN>>	Time OFF ms	100	100	5000	100				
		Time OFF ms	Fixed to fastest possible disconnection							
Comment:		U LN > off has a fixed offset of 0.5% UNOM subtracted from the displayed value								
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)								

Undervoltage2 Line to Neutral			Conformity Range		Possible Range					
ID		Default	Min	Max	Min	Max				
.038	ULN<<	Enable Function	on	on/off	on/off					
.039	ULN<< off	UTHR OFF %Unom	30	20	100	10				
.040	ULN<< on	UTHR ON %Unom	90	50	100	10				
.041	T ULN<<	Time OFF ms	100	100	5000	100				
		Time OFF ms	Fixed to fastest possible disconnection							
Comment:		U LN < off has a fixed offset of 0.25% UNOM added to the displayed value								
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)								

10 minutes average overvoltage			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.042	Uavg	Enable function	on	on / off	on / off	
.043	Uavg off	UTHR OFF %Unom	110	100	115	100
.044	Uavg on	UTHR ON %Unom	109	100	115	100
		Time OFF ms	Fixed to fastest possible disconnection			

Zero Voltage Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.115	Uzero >	Enable Function	off	on/off	on/off	
.116	Uzero> off	UTHR OFF %Unom	20	1	100	1
.117	Uzero> on	UTHR ON %Unom	15	1	100	1
.118	T Uzero >	Time OFF ms	1500	200	100000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Residual Voltage (3 x Zero Voltage) Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.119	Ures-anfw>	Enable Function	off	on/off	on/off	
.120	U res > on	UTHR OFF %Unom	5	2	20	2
.121	U res > off	UTHR ON %Unom	3	1	20	1
.122	T Ures >	Time OFF ms	200	0	240000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Undervoltage Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.123	Uanfw <	Enable Function	off	on/off	on/off	
.124	Uanfw< on	UTHR OFF %Unom	85	21	100	2
.125	Uanfw< off	UTHR ON %Unom	86	21	100	2
.126	T Uanfw <	Time OFF ms	0	0	240000	0
		Time OFF ms	Fixed to fastest possible disconnection			
Only active for:		Connection Modes: 4-wire (LN+LL)				

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.054	f >	Enable Function		on	on	on/off	
.055	f > off	f <sub>THR</sub> OFF	Hz	51.50	50.00	52.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.10	50.00	52.00	50.00
.057	T f >	Time OFF	ms	100	100	100000	100
Comment:	f > on has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Voltage > 20% U <sub>NOM</sub>						

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.058	f <	Enable Function		on	on	on/off	
.059	f < off	f <sub>THR</sub> OFF	Hz	47.50	47.00	50.00	45.00
.060	f < on	f <sub>THR</sub> ON	Hz	48.50	47.00	50.00	45.00
.061	T f <	Time OFF	ms	100	100	100000	100
Comment:	f < on has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Voltage > 20% U <sub>NOM</sub>						

Overfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.062	f nw >	Enable Function		off	on/off	on/off	
.063	f nw > off	f <sub>THR</sub> OFF	Hz	50.30	50.00	52.00	50.00
.064	f nw > on	f <sub>THR</sub> ON	Hz	50.10	50.00	52.00	50.00
.065	T f nw >	Time OFF	ms	500	100	5000	100
Comment:	f nw > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Underfrequency nw (narrower window)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.066	f nw <	Enable Function		off	on/off	on/off	
.067	f nw < off	f <sub>THR</sub> OFF	Hz	49.70	47.00	50.00	45.00
.068	f nw < on	f <sub>THR</sub> ON	Hz	49.80	47.00	50.00	45.00
.069	T f nw <	Time OFF	ms	500	100	5000	100
Comment:	f nw < off has a fixed offset of 0.01 Hz added to the displayed value						
Only active for:	Ures-anfw, Uanfw, Dig Input5=HIGH (local setting)						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.090	ROCOF	Enable Function		off	on / off	on / off	
.091	ROCOF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	200	9990	100
.092	ROCOF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	9990	100
.093	ROCOF t	Time OFF	ms	0	0	5000	0
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms			

Phase Shift (PShift)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off	on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	2	15	2
.096	PShift on	PShift <sub>THR</sub> ON	°	5	1	15	1
		Time OFF	ms	Fixed to the fastest possible disconnection			
.112	PShift wnd	Window length	ms	Fixed window length 100ms			
Comment:	PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	500			
.114	I3 STOP	Type	n.o. (normally opened)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	T on delay	Turn on time	s	60	10	600	10	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password			0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password			0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password			0	0	9
.109	PW4	4 <sup>th</sup> digit of Password			0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.34 EN50438:2013 DK [ID 950]**

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	3-wire, 4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	230.0 400.0	100.0 173.9 240.0 417.4

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	2ch	2ch, 1ch			2ch, 1ch	
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary 1ch means: 1 channel without functional safety and 1 auxilliary contact necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	ULL max 1	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	110	110	110	100 135
				Fixed Hysteresis (1% UNOM)			
.013	ULL max 1t	Time OFF	ms	39500	39500	39500	50 60000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	ULL min	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	90	90	90	10 100
				Fixed Hysteresis (1% UNOM)			
.017	ULL min t	Time OFF	ms	9500	9500	9500	50 60000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	ULN max 1	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	110	110	110	100 135
				Fixed Hysteresis (1% UNOM)			
.021	ULN max 1t	Time OFF	ms	39500	39500	39500	50 60000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	ULN min	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	90	90	90	10 100
				Fixed Hysteresis (1% UNOM)			
.025	ULN min t	Time OFF	ms	9500	9500	9500	50 60000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.027	ULL max 2	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	113	113	113	100 135
				Fixed Hysteresis (1% UNOM)			
		Time OFF	ms	Fixed to 100ms			
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)					

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.035	ULN max 2	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	113	113	113	100 135
				Fixed Hysteresis (1% UNOM)			
		Time OFF	ms	Fixed to 100ms			
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)					

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f > off	fTHR OFF	Hz	52.00	52.00	50.00	55.00
.056	f > on	fTHR ON	Hz	50.05	50.05	50.00	55.00
		Time OFF	ms	Fixed to 150ms			

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f < off	fTHR OFF	Hz	47.50	47.50	47.50	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	50.00
		Time OFF	ms	Fixed to 150ms			
Comment:		f < on has a fixed offset of 0.025 Hz added to the displayed value					

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.090	RoCoF	Enable Function	on	on / off		on / off	
.091	RoCoF off	fRoCoFTHR OFF	mHz/s	2500	2500	2500	3000
.092	RoCoF on	fRoCoFTHR ON	mHz/s	2300	2300	2300	3000
		Time OFF	ms	Fixed to the fastest possible disconnection			
.111	RoCoF wnd	Window length	ms	Fixed window length 200ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information							
ID							
.105	ID: xxxxxx		xxxxx = Device ID				
	SW: aa.ddccb			dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

**10.35 VDE 0126-1-1:2013 [ID 200]**

Connection Mode			Conformity Range		Possible Range	
ID	Default		Min	Max	Min	Max
.003	Connection	Fixed to 4-wire (LN+LL)				

Nominal Voltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.005	ULN/LL nom Unom Y Unom Δ	V V	Fixed to 230.0 / 400.0				

Functional Safety			Conformity Range		Possible Range	
ID	Default		Min	Max	Min	Max
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.011	ULLmax off U <sub>THR</sub> OFF %Unom	115	115	115	100	135	
.012	ULLmax on U <sub>THR</sub> ON %Unom	110	110	110	100	135	
	Time OFF ms	Fixed to fastest possible disconnection					
Comment:	ULLmax on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.015	ULLmin off U <sub>THR</sub> OFF % Unom	80	80	80	10	100	
.016	ULLmin on U <sub>THR</sub> ON %Unom	85	85	85	10	100	
	Time OFF ms	Fixed to fastest possible disconnection					
Comment:	ULLmin on has a fixed offset of 0.5% UNOM added to the displayed value						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.019	U >> off U <sub>THR</sub> OFF %Unom	115	115	115	100	135	
.020	U >> on U <sub>THR</sub> ON %Unom	110	110	110	100	135	
	Time OFF ms	Fixed to fastest possible disconnection					
Comment:	U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.023	U < off U <sub>THR</sub> OFF %Unom	80	80	80	10	100	
.024	U < on U <sub>THR</sub> ON %Unom	85	85	85	10	100	
	Time OFF ms	Fixed to fastest possible disconnection					
Comment:	U < on has a fixed offset of 0.5% UNOM added to the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.043	U> U <sub>THR</sub> OFF %Unom	110	110	115	100	135	
	U <sub>THR</sub> ON %Unom	Fixed Hysteresis (0.9% UNOM)					
	Time OFF ms	Fixed to fastest possible disconnection					

Overfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.055	f > off f <sub>THR</sub> OFF Hz	51.50	51.50	51.50	50.00	55.00	
.056	F > on f <sub>THR</sub> ON Hz	50.05	50.05	50.05	50.00	55.00	
	Time OFF ms	Fixed to fastest possible disconnection					

Underfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max	Min	Max
.059	f < off f <sub>THR</sub> OFF Hz	47.50	47.50	47.50	45.00	50.00	
.060	f < on f <sub>THR</sub> ON ms	47.50	47.50	47.50	45.00	50.00	
	Time OFF ms	Fixed to fastest possible disconnection					
Comment:	f < on has a fixed offset of 0.025 Hz added to the displayed value						

Random overfrequency				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.086	f> random	Enable function		off	on / off		on / off	
.087	f> random	fTHR OFF	Hz		50.20	51.50	50.20	51.50
		fTHR ON	Hz	Fixed reconnection frequency of 50.05Hz				
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length		ms		Fixed window length 100ms	

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	
							dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	
							dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0 600

Random Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.103	Ton random	Enable function	off	on / off		on / off	
.104	Ton random	Turn on time	s	60	600	60	600
Comment:		The random time value is shown in .104 and cannot be edited					

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.36 AB AS 4777.2:2020 [ID 1110]**

Connection Mode			Conformity Range			Possible Range	
ID	Default						
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range			Possible Range	
ID	Default						
.007	Errtol	Fixed to 2ch					
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.019	V> off	UTHR OFF	%Unom	115.2	115.2	115.2	100 135
.020	V> on	UTHR ON	%Unom	110	100	110	100 135
.021	T V>	Time OFF	ms	1000	1000	1900	50 300000

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.023	V< off	UTHR OFF	%Unom	78.3	78.3	78.3	0 100
.024	V< on	UTHR ON	%Unom	89	89	100	0 100
.025	T V<	Time OFF	ms	10000	10000	10900	50 300000

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.034	V>>	Enable function	off	on /off		on /off	
.035	V>> off	UTHR OFF	%Unom	119.6	119.6	119.6	100 135
.036	V>> on	UTHR ON	%Unom	110	100	110	100 135
.037	T V>>	Time OFF	ms	100	100	200	100 300000

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.039	V<< off	UTHR OFF	%Unom	30.4	30.4	30.4	0 100
.040	V<< on	UTHR ON	%Unom	89	89	100	0 100
.041	T V<<	Time OFF	ms	1000	1000	1900	50 300000

10 minutes average overvoltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.042	Uavg	Enable function	on	on / off		on /off	
.043	Uavg off	UTHR OFF	%Unom	112.2	106.1	112.2	100 135
.044	Uavg on	UTHR ON	%Unom	110	100	110	100 135
		Time OFF	ms	Fixed to fastest possible disconnection			

Overfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.055	F> off	fTHR OFF	Hz	52.00	52.00	52.00	50.00 55.00
.056	F> on	fTHR ON	Hz	50.15	50.00	50.15	50.00 55.00
.057	T F>	Time OFF	ms	100	100	200	100 300000

Underfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.059	F< off	fTHR OFF	Hz	47.00	47.00	47.00	40.00 50.00
.060	F< on	fTHR ON	Hz	47.50	47.50	50.00	40.00 50.00
.061	T F<	Time OFF	ms	1000	1000	1900	50 300000

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length ms		Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.090	RoCoF	Enable Function off		on / off		on / off		
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	9990	10	9990
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	9990	10	9990
.093	RoCoFDelay	Time OFF ms		500	50	500	50	10000
.111	RoCoF wnd	Window length	ms	225	100	1000	100	1000

Phase Shift (PShift)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.094	PShift	Enable Function off		on / off		on / off		
.095	PShift off	PShift <sub>THR</sub> OFF	°	8	1	8	1	15
.096	PShift on	PShift <sub>THR</sub> ON	°	6	1	7	1	15
.097	PShiftDel	Time OFF ms		50	50	50	50	10000
.112	PShift wnd	Window length	ms	50	50	500	50	1000

Auxiliary Contact type				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	0	60	0	600

Password					
ID			Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0
.107	PW2	2 <sup>nd</sup> digit of Password		0	0
.108	PW3	3 <sup>rd</sup> digit of Password		0	0
.109	PW4	4 <sup>th</sup> digit of Password		0	0

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information					
ID					
.105	ID: xxxxxx SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

**10.37 C AS 4777.2:2020 [ID 1120]**

Connection Mode			Conformity Range		Possible Range	
ID	Default					
.003	Connection	4-wire (LN)	4-wire (LN)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range		Possible Range	
ID	Default					
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.019	V> off	UTHR OFF	%Unom	115.2	115.2	115.2	100	135
.020	V> on	UTHR ON	%Unom	110	100	110	100	135
.021	T V>	Time OFF	ms	1000	1000	1900	50	300000

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.023	V< off	UTHR OFF	%Unom	78.3	78.3	78.3	0	100
.024	V< on	UTHR ON	%Unom	89	89	100	0	100
.025	T V<	Time OFF	ms	10000	10000	10900	50	300000

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.034	V>>	Enable function	off	on /off		on /off		
.035	V>> off	UTHR OFF	%Unom	119.6	119.6	119.6	100	135
.036	V>> on	UTHR ON	%Unom	110	100	110	100	135
.037	T V>>	Time OFF	ms	100	100	200	100	300000

Undervoltage2 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.039	V<< off	UTHR OFF	%Unom	30.4	30.4	30.4	0	100
.040	V<< on	UTHR ON	%Unom	89	89	100	0	100
.041	T V<<	Time OFF	ms	1000	1000	1900	50	300000

10 minutes average overvoltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.042	Uavg	Enable function	on	on / off		on /off		
.043	Uavg off	UTHR OFF	%Unom	112.2	106.1	112.2	100	135
.044	Uavg on	UTHR ON	%Unom	110	100	110	100	135
		Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.055	F> off	fTHR OFF	Hz	55.00	55.00	55.00	50.00	55.00
.056	F> on	fTHR ON	Hz	50.15	50.00	50.15	50.00	55.00
.057	T F>	Time OFF	ms	100	100	200	100	300000

Underfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.059	F< off	fTHR OFF	Hz	45.00	45.00	45.00	40.00	50.00
.060	F< on	fTHR ON	Hz	47.50	47.50	50.00	40.00	50.00
.061	T F<	Time OFF	ms	5000	5000	5900	50	300000

Frequency measuring in general				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	9990	10	9990
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	9990	10	9990
.093	RoCoFDelay	Time OFF		ms	50	500	50	10000
.111	RoCoF wnd	Window length		ms	225	100	1000	100

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	8	1	8	1	15
.096	PShift on	PShift <sub>THR</sub> ON	°	6	1	7	1	15
.097	PShiftDel	Time OFF		ms	50	50	50	10000
.112	PShift wnd	Window length		ms	50	50	500	1000

Auxiliary Contact type			Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max
.099	Contact		n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact		Time OFF	ms	Fixed to 500ms		
.114	I3 STOP		Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	60	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.38 NZS 4777.2:2020 [ID 1130]**

Connection Mode			Conformity Range		Possible Range	
ID	Default					
.003	Connection	4-wire (LN)	4-wire (LN)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range		Possible Range	
ID	Default					
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.019	V> off	UTHR OFF	%Unom	115.2	115.2	115.2	100	135
.020	V> on	UTHR ON	%Unom	110	100	110	100	135
.021	T V>	Time OFF	ms	1000	1000	1900	50	300000

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.023	V< off	UTHR OFF	%Unom	78.3	78.3	78.3	0	100
.024	V< on	UTHR ON	%Unom	89	89	100	0	100
.025	T V<	Time OFF	ms	10000	10000	10900	50	300000

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.034	V>>	Enable function	off	on /off		on /off		
.035	V>> off	UTHR OFF	%Unom	119.6	119.6	119.6	100	135
.036	V>> on	UTHR ON	%Unom	110	100	110	100	135
.037	T V>>	Time OFF	ms	100	100	200	100	300000

Undervoltage2 Line to Neutral				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.039	V<< off	UTHR OFF	%Unom	30.4	30.4	30.4	0	100
.040	V<< on	UTHR ON	%Unom	89	89	100	0	100
.041	T V<<	Time OFF	ms	1000	1000	1900	50	300000

10 minutes average overvoltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.042	Uavg	Enable function	on	on / off		on /off		
.043	Uavg off	UTHR OFF	%Unom	108.3	106.1	112.2	100	135
.044	Uavg on	UTHR ON	%Unom	106.1	100	110	100	135
		Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.055	F> off	fTHR OFF	Hz	55.00	55.00	55.00	50.00	55.00
.056	F> on	fTHR ON	Hz	50.15	50.00	50.15	50.00	55.00
.057	T F>	Time OFF	ms	100	100	200	100	300000

Underfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.059	F< off	fTHR OFF	Hz	45.00	45.00	45.00	40.00	50.00
.060	F< on	fTHR ON	Hz	47.50	47.50	50.00	40.00	50.00
.061	T F<	Time OFF	ms	1000	1000	1900	50	300000

Frequency measuring in general				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	9990	10	9990
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	9990	10	9990
.093	RoCoFDelay	Time OFF		ms	50	500	50	10000
.111	RoCoF wnd	Window length		ms	225	100	1000	100

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	8	1	8	1	15
.096	PShift on	PShift <sub>THR</sub> ON	°	6	1	7	1	15
.097	PShiftDel	Time OFF		ms	50	50	50	10000
.112	PShift wnd	Window length		ms	50	50	500	1000

Auxiliary Contact type			Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max
.099	Contact		n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact		Time OFF	ms	Fixed to 500ms		
.114	I3 STOP		Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	60	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.39 NRS 097-2-1:2017 [ID 1000]**

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y	V	230.0	230.0	230.0	28.8 250.0
		Unom Δ	V	400.0	400.0	400.0	50.0 434.8

Functional Safety			Conformity Range			Possible Range			
ID		Default							
.007	Errtol	Fixed to 2ch							
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary								

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	ULL>1 OFF	U <sub>THR</sub> OFF	%Unom	111	111	111	100 135
.012	ULL>1 ON	U <sub>THR</sub> ON	%Unom	109	100	109	100 135
.013	ULL>1 T	Time OFF	ms	2000	200	2000	200 60000
Comment:	ULL>1 OFF has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	ULL<1 OFF	U <sub>THR</sub> OFF	%Unom	84	84	84	10 100
.016	ULL<1 ON	U <sub>THR</sub> ON	%Unom	86	86	100	10 100
.017	ULL<1 T	Time OFF	ms	10000	600	10000	200 60000
Comment:	ULL<1 OFF has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	ULN>1 OFF	U <sub>THR</sub> OFF	%Unom	111	111	111	100 135
.020	ULN>1 ON	U <sub>THR</sub> ON	%Unom	109	100	109	100 135
.021	ULN>1 T	Time OFF	ms	2000	200	2000	200 60000
Comment:	ULN>1 OFF has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	ULN<1 OFF	U <sub>THR</sub> OFF	%Unom	84	84	84	10 100
.024	ULN<1 ON	U <sub>THR</sub> ON	%Unom	86	86	100	10 100
.025	ULN<1 T	Time OFF	ms	10000	600	10000	200 60000
Comment:	ULN<1 OFF has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.027	ULL>2 OFF	U <sub>THR</sub> OFF	%Unom	121	121	121	100 135
.028	ULL>2 ON	U <sub>THR</sub> ON	%Unom	119	100	119	100 135
.029	ULL>2 T	Time OFF	ms	160	110	160	110 60000
Comment:	ULL>2 OFF has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.031	ULL<2 OFF	U <sub>THR</sub> OFF	%Unom	49	49	49	10 100
.032	ULL<2 ON	U <sub>THR</sub> ON	%Unom	51	51	100	10 100
.033	ULL<2 T	Time OFF	ms	200	150	200	150 60000
Comment:	ULL<2 OFF has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.035	ULN>2 OFF	U <sub>THR</sub> OFF	%Unom	121	121	121	100	135
.036	ULN>2 ON	U <sub>THR</sub> ON	%Unom	119	100	119	100	135
.037	ULN>2 T	Time OFF	ms	160	110	160	110	60000
Comment:	ULN>2 OFF has a fixed offset of 0.5% Unom added to the displayed value							
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							

Undervoltage2 Line to Neutral				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.039	ULN<2 OFF	U <sub>THR</sub> OFF	%Unom	49	49	49	10	100
.040	ULN<2 ON	U <sub>THR</sub> ON	%Unom	51	51	100	10	100
.041	ULN<2 T	Time OFF	ms	200	150	200	150	60000
Comment:	ULN<2 OFF has a fixed offset of 0.5% Unom added to the displayed value							
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							

Overfrequency1				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.055	f>1 OFF	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00	60.00
.056	f>1 ON	f <sub>THR</sub> ON	Hz	50.50	50.00	50.50	50.00	60.00
.057	f>1 T	Time OFF	ms	4000	4000	4000	200	60000

Underfrequency1				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.059	f<1 OFF	f <sub>THR</sub> OFF	Hz	47.00	47.00	47.00	40.00	50.00
.060	f<1 ON	f <sub>THR</sub> ON	Hz	47.10	47.10	50.00	40.00	50.00
.061	f<1 T	Time OFF	ms	200	200	200	200	60000

Random overfrequency				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.086	f>RND	Enable function		off	on / off		on / off	
.087	f>RND OFF	f <sub>THR</sub> OFF	Hz		50.50	52.00	50.50	52.00
.088	f>RND ON	f <sub>THR</sub> ON	Hz	50.10	50.00	50.49	50.00	50.49
.089	f>RND T	Time OFF	ms	4000	4000	4000	50	60000
Comment:	The random f <sub>THR</sub> OFF threshold is shown in .087 and cannot be edited							

Frequency measuring in general				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF OFF	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	9990	10	9990
.092	RoCoF ON	RoCoF <sub>THR</sub> ON	mHz/s	950	10	9990	100	9990
.093	RoCoFDelay	Time OFF	ms	500	50	60000	50	60000
.111	RoCoF wnd	Window length	ms	Fixed window length 225ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		off	on / off		on / off	
.095	PShift OFF	PShift <sub>THR</sub> OFF	°	7	2	20	2	20
.096	PShift ON	PShift <sub>THR</sub> ON	°	5	2	20	2	20
.097	PShift T	Time OFF	ms	0	0	60000	0	60000
.112	PShift wnd	Window length	ms	Fixed window length 200ms				

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	600	0	600

Random Turn-on delay				Conformity Range		Possible Range			
ID				Default	Min	Max	Min	Max	
.103	Ton random	Enable function		off	on / off		on / off		
.104	Ton random	Turn on time	s		60	600	60	600	
Comment:		The random time value is shown in .104 and cannot be edited							

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information					
ID					
.105	ID: xxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

## 10.40 OPEN SETUP [ID 9006]

Connection Mode			Conformity Range		Possible Range			
ID		Default						
.003	Connection	4-wire (LN)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			
Nominal Voltage			Conformity Range		Possible Range			
ID	ULN/LL nom	U <sub>nom</sub> Y U <sub>nom</sub> Δ	V	Min	Max	Min	Max	
.005			230.0 400.0	28.8 50.0	250.0 434.8	28.8 50.0	250.0 434.8	
Functional Safety			Conformity Range		Possible Range			
ID		Default						
.007	Errtol	2ch	2ch, 1ch		2ch, 1ch			
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary 1ch means: 1 channel without functional safety and 1 auxilliary contact necessary						
Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.010	ULL>1	Enable function	on	on / off		on / off		
.011	ULL>1 OFF	U <sub>THR</sub> OFF	%U <sub>nom</sub>	110	0	180	0	180
.012	ULL>1 ON	U <sub>THR</sub> ON	%U <sub>nom</sub>	109	0	180	0	180
.013	ULL>1 T	Time OFF	ms	200	50	300000	50	300000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						
Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.014	ULL<1	Enable function	on	on / off		on / off		
.015	ULL<1 OFF	U <sub>THR</sub> OFF	%U <sub>nom</sub>	90	0	180	0	180
.016	ULL<1 ON	U <sub>THR</sub> ON	%U <sub>nom</sub>	91	0	180	0	180
.017	ULL<1 T	Time OFF	ms	200	50	300000	50	300000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						
Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.018	ULN>1	Enable function	on	on / off		on / off		
.019	ULN>1 OFF	U <sub>THR</sub> OFF	%U <sub>nom</sub>	110	0	180	0	180
.020	ULN>1 ON	U <sub>THR</sub> ON	%U <sub>nom</sub>	109	0	180	0	180
.021	ULN>1 T	Time OFF	ms	200	50	300000	50	300000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.022	ULN<1	Enable function	on	on / off		on / off		
.023	ULN<1 OFF	U <sub>THR</sub> OFF	%U <sub>nom</sub>	90	0	180	0	180
.024	ULN<1 ON	U <sub>THR</sub> ON	%U <sub>nom</sub>	91	0	180	0	180
.025	ULN<1 T	Time OFF	ms	200	50	300000	50	300000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						
Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.026	ULL>2	Enable function	on	on / off		on / off		
.027	ULL>2 OFF	U <sub>THR</sub> OFF	%U <sub>nom</sub>	120	0	180	0	180
.028	ULL>2 ON	U <sub>THR</sub> ON	%U <sub>nom</sub>	119	0	180	0	180
.029	ULL>2 T	Time OFF	ms	100	50	300000	50	300000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.030	ULL<2	Enable function	on	on / off	on / off	
.031	ULL<2 OFF	U <sub>THR</sub> OFF	%Unom	80	0	180
.032	ULL<2 ON	U <sub>THR</sub> ON	%Unom	81	0	180
.033	ULL<2 T	Time OFF	ms	100	50	300000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)				

Overvoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.034	ULN>2	Enable function	on	on / off	on / off	
.035	ULN>2 OFF	U <sub>THR</sub> OFF	%Unom	120	0	180
.036	ULN>2 ON	U <sub>THR</sub> ON	%Unom	119	0	180
.037	ULN>2 T	Time OFF	ms	100	50	300000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.038	ULN<2	Enable function	on	on / off	on / off	
.039	ULN<2 OFF	U <sub>THR</sub> OFF	%Unom	80	0	180
.040	ULN<2 ON	U <sub>THR</sub> ON	%Unom	81	0	180
.041	ULN<2 T	Time OFF	ms	100	50	300000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

10 minutes average overvoltage			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.042	UAVG>	Enable function	on	on / off	on / off	
.043	UAVG> OFF	U <sub>THR</sub> OFF	%Unom	110	0	180
.044	UAVG> ON	U <sub>THR</sub> ON	%Unom	109	0	180
.045	UAVG> T	Time OFF	ms	0	0	300000

Deactivation frequency monitoring LL			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.046	fdeac ULL<	Enable function	off	on / off	on / off		
.047	ULL< OFF	U <sub>THR</sub> OFF	%Unom	9.5	9.5	60	
	ULL< ON	U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (1% UNOM)			

Deactivation frequency monitoring LN			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.050	fdeac ULN<	Enable function	off	on / off	on / off		
.051	ULN< OFF	U <sub>THR</sub> OFF	%Unom	9.5	9.5	60	
	ULN< ON	U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (1% UNOM)			

Overfrequency1			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.054	f>1	Enable function	on	on / off	on / off	
.055	f>1 OFF	f <sub>THR</sub> OFF	Hz	51.00	40.00	65.00
.056	f>1 ON	f <sub>THR</sub> ON	Hz	50.90	40.00	65.00
.057	f>1 T	Time OFF	ms	200	75	300000

Underfrequency1			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.058	f<1	Enable function	on	on / off	on / off	
.059	f<1 OFF	f <sub>THR</sub> OFF	Hz	49.00	40.00	65.00
.060	f<1 ON	f <sub>THR</sub> ON	Hz	49.10	40.00	65.00
.061	f<1 T	Time OFF	ms	200	75	300000

Overfrequency2				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.062	f>2	Enable function		on	on / off		on / off	
.063	f>2 OFF	fTHR OFF	Hz	52.00	40.00	65.00	40.00	65.00
.064	f>2 ON	fTHR ON	Hz	51.90	40.00	65.00	40.00	65.00
.065	f>1 T	Time OFF	ms	100	75	300000	75	300000

Underfrequency2				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.066	f<2	Enable function		on	on / off		on / off	
.067	f<2 OFF	fTHR OFF	Hz	48.00	40.00	65.00	40.00	65.00
.068	f<2 ON	fTHR ON	Hz	48.10	40.00	65.00	40.00	65.00
.069	f<2 T	Time OFF	ms	100	75	300000	75	300000

Random overfrequency				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.086	f>RND	Enable function		off	on / off		on / off	
.087	f>RND OFF	fTHR OFF	Hz	50.20	51.50	50.20	51.50	
.088	f>RND ON	fTHR ON	Hz	50.05	50.00	50.19	50.00	
.089	f>RND T	Time OFF	ms	100	50	300000	50	
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	100	100	1000	100

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF OFF	RoCoFTHR OFF	mHz/s	1000	10	9990	10	
.092	RoCoF ON	RoCoFTHR ON	mHz/s	950	10	9990	10	
.093	RoCoFDelay	Time OFF	ms	500	50	300000	50	
.111	RoCoF wnd	Window length	ms	225	100	1000	100	

Phase Shift (PShift)				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.094	PShift	Enable Function		off	on / off		on / off	
.095	PShift OFF	PShiftTHR OFF	°	7	2	20	2	
.096	PShift ON	PShiftTHR ON	°	5	2	20	2	
.097	PShift T	Time OFF	ms	0	0	300000	0	
.112	PShift wnd	Window length	ms	200	50	500	50	

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened)	n.c. (normally closed)	n.o. (normally opened)	n.c. (normally closed)
					dis. (disabled)	dis. (disabled)	dis. (disabled)

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	600	0

Random Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.103	Ton random	Enable function	off	on / off		on / off	
.104	Ton random	Turn on time	s	60	600	60	600
Comment:		The random time value is shown in .104 and cannot be edited					

Password						
ID			Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information		
ID		
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set

**10.41 EN50438:2013 [ID 900]**

Connection Mode			Conformity Range			Possible Range	
ID	Default						
.003	Connection	Fixed to 4-wire (LN)					

Nominal Voltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	230.0 400.0	100.0 173.9
							240.0 417.4

Functional Safety			Conformity Range		Possible Range	
ID	Default					
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.019	U > off	U <sub>THR</sub> OFF	%Unom	115	115	115	100
.020	U > on	U <sub>THR</sub> ON	%Unom	110	110	110	100
	Time OFF	ms	Fixed to 100ms				
Comment:	U > on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.023	U < off	U <sub>THR</sub> OFF	%Unom	85	85	85	10
.024	U < on	U <sub>THR</sub> ON	%Unom	85	85	85	10
.025	U < t	Time OFF	ms	1300	1300	1300	50
Comment:	U < on has a fixed offset of 0.5% UNOM added to the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.043	U avg off	U <sub>THR</sub> OFF	%Unom	110	110	110	100
	U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.9% UNOM)				
	Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.055	f > off	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00
.056	f > on	f <sub>THR</sub> ON	Hz	50.05	50.05	50.05	55.00
.057	f > t	Time OFF	ms	400	400	400	50

Underfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.059	f < off	f <sub>THR</sub> OFF	Hz	47.50	47.50	47.50	45.00
.060	f < on	f <sub>THR</sub> ON	Hz	47.50	47.50	47.50	50.00
.061	f < t	Time OFF	ms	400	400	400	50
Comment:	f < on has a fixed offset of 0.025 Hz added to the displayed value						

Frequency measuring in general				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	60	60	60	0	600

Password					
ID				Default	
.106	PW1	1 <sup>st</sup> digit of Password			0
.107	PW2	2 <sup>nd</sup> digit of Password			0
.108	PW3	3 <sup>rd</sup> digit of Password			0
.109	PW4	4 <sup>th</sup> digit of Password			0

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.42 OVE E8001/8101:2014 [ID 801] renewed standard**

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.005	ULN/LL nom	Unom Y	V	230.0	230.0	230.0	28.8 241.4
		Unom Δ	V	400.0	400.0	400.0	50.0 420.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 2ch					
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary						

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.011	ULLmaxloff	U <sub>THR</sub> OFF	%Unom	115	115	115	100 135
.012	ULLmaxlon	U <sub>THR</sub> ON	%Unom	110	110	110	100 135
.013	T ULL max1	Time OFF	ms	50	50	180000	50 180000
Comment:	ULLmaxlon has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.015	ULLminloff	U <sub>THR</sub> OFF	%Unom	80	80	80	10 100
.016	ULLminlon	U <sub>THR</sub> ON	%Unom	90	90	90	10 100
.017	T ULL min1	Time OFF	ms	50	50	180000	50 180000
Comment:	ULLminlon has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.019	ULNmaxloff	U <sub>THR</sub> OFF	%Unom	115	115	115	100 135
.020	ULNmaxlon	U <sub>THR</sub> ON	%Unom	110	110	110	100 135
.021	T ULN max1	Time OFF	ms	50	50	180000	50 180000
Comment:	ULNmaxlon has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.023	ULNminloff	U <sub>THR</sub> OFF	%Unom	80	80	80	10 100
.024	ULNminlon	U <sub>THR</sub> ON	%Unom	90	90	90	10 100
.025	T ULN min1	Time OFF	ms	50	50	180000	50 180000
Comment:	ULNminlon has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.026	ULL max 2	Enable function	off	on / off		on / off	
.027	ULLmax2off	U <sub>THR</sub> OFF	%Unom	105	100	135	100 135
.028	ULLmax2on	U <sub>THR</sub> ON	%Unom	110	110	110	100 135
.029	T ULL max2	Time OFF	ms	60000	50	180000	50 180000
Comment:	ULLmax2on has a fixed offset of 0.5% UNOM subtracted from the displayed value						
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.030	ULL min 2	Enable function	off	on / off	on / off	
.031	ULLmin2off	U <sub>THR</sub> OFF %Unom	30	10	100	10 100
.032	ULLmin2on	U <sub>THR</sub> ON %Unom	90	90	90	0 100
.033	T ULL min2	Time OFF ms	50	50	180000	50 180000
Comment:		ULLmin2on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)				

Overvoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.034	ULN max 2	Enable function	off	on / off	on / off	
.035	ULNmax2off	U <sub>THR</sub> OFF %Unom	105	100	135	100 135
.036	ULNmax2on	U <sub>THR</sub> ON %Unom	110	110	110	100 135
.037	T ULN max2	Time OFF ms	60000	50	180000	50 180000
Comment:		ULNmax2on has a fixed offset of 0.5% UNOM subtracted from the displayed value				
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

Undervoltage2 Line to Neutral			Conformity Range		Possible Range	
ID		Default	Min	Max	Min	Max
.038	ULN min 2	Enable function	off	on / off	on / off	
.039	ULNmin2off	U <sub>THR</sub> OFF %Unom	30	10	100	10 100
.040	ULNmin2on	U <sub>THR</sub> ON %Unom	90	90	90	0 100
.041	T ULN min2	Time OFF ms	50	50	180000	50 180000
Comment:		ULNmin2on has a fixed offset of 0.5% UNOM added to the displayed value				
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)				

10 minutes average overvoltage			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.042	U avg	Enable function	on	on	on / off		
.043	U avg off	U <sub>THR</sub> OFF %Unom	112	110	115	100 135	
		U <sub>THR</sub> ON %Unom	Fixed Hysteresis (0.9% UNOM)				
		Time OFF ms	Fixed to fastest possible disconnection				

Overfrequency1			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.055	f > off	f <sub>THR</sub> OFF Hz	51.50	51.50	51.50	50.00 55.00	
		f <sub>THR</sub> ON Hz	Fixed reconnection frequency of 50.05Hz				
		Time OFF ms	Fixed to fastest possible disconnection				

Underfrequency1			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.059	f < off	f <sub>THR</sub> OFF Hz	47.50	47.50	47.50	45.00 50.00	
.060	f < on	f <sub>THR</sub> ON Hz	47.50	47.50	47.50	45.00 50.00	
		Time OFF ms	Fixed to fastest possible disconnection				
Comment:		f < on has a fixed offset of 0.01 Hz added to the displayed value					

Frequency measuring in general			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.113	F wnd	Window length ms	Fixed window length 100ms				

Auxiliary Contact type			Conformity Range		Possible Range		
ID		Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	30	30	30	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password			0	0
.107	PW2	2 <sup>nd</sup> digit of Password			0	0
.108	PW3	3 <sup>rd</sup> digit of Password			0	0
.109	PW4	4 <sup>th</sup> digit of Password			0	0
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped				

Device Information			
ID			
.105	ID: xxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.43 VDE 0124-100:2013 [ID 300] renewed standard**

Connection Mode			Conformity Range		Possible Range	
ID	Default		Min	Max	Min	Max
.003	Connection	Fixed to 4-wire (LN+LL)				

Nominal Voltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.005	ULN/LL nom Unom Y Unom Δ	V V	Fixed to 230.0 / 400.0				

Functional Safety			Conformity Range		Possible Range	
ID	Default		Min	Max	Min	Max
.007	Errtol	Fixed to 2ch				
Remark:	2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.011	ULLmax off UTHR OFF	%Unom	115	115	115	100	135
.012	ULLmax on UTHR ON	%Unom	110	110	110	100	135
	Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	ULLmax on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage1 Line to Line				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.015	ULLmin off UTHR OFF	%Unom	80	80	80	10	100
.016	ULLmin on UTHR ON	%Unom	85	85	85	10	100
	Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	ULLmin on has a fixed offset of 0.5% UNOM added to the displayed value						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.019	U >> off UTHR OFF	%Unom	115	115	115	100	135
.020	U >> on UTHR ON	%Unom	110	110	110	100	135
	Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	U >> on has a fixed offset of 0.5% UNOM subtracted from the displayed value						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.023	U < off UTHR OFF	%Unom	80	80	80	10	100
.024	U < on UTHR ON	%Unom	85	85	85	10	100
	Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	U < on has a fixed offset of 0.5% UNOM added to the displayed value						

10 minutes average overvoltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.043	U> UTHR OFF	%Unom	110	110	115	100	135
	UTHR ON	%Unom	Fixed Hysteresis (0.9% UNOM)				
	Time OFF	ms	Fixed to fastest possible disconnection				

Overfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.055	f > off fTHR OFF	Hz	51.50	51.50	51.50	50.00	55.00
.056	f > on fTHR ON	Hz	50.05	50.05	50.05	50.00	55.00
	Time OFF	ms	Fixed to fastest possible disconnection				

Underfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.059	f < off fTHR OFF	Hz	47.50	47.50	47.50	45.00	50.00
.060	f < on fTHR ON	Hz	47.50	47.50	47.50	45.00	50.00
	Time OFF	ms	Fixed reconnection frequency of 50.05Hz				
Comment:	f < on has a fixed offset of 0.025 Hz added to the displayed value						

Random overfrequency				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.086	f> random	Enable function		off	on / off		on / off	
.087	f> random	fTHR OFF	Hz		50.20	51.50	50.20	51.50
		fTHR ON	Hz	Fixed reconnection frequency of 50.05Hz				
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:		The random fTHR OFF threshold is shown in .087 and cannot be edited						

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length		ms Fixed window length 100ms			

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.099	Contact	Type	n.c. (normally closed)	n.o. (normally opened) n.c. (normally closed)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0 600

Random Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.103	Ton random	Enable function	off	on / off		on / off	
.104	Ton random	Turn on time	s	60	600	60	600
Comment:		The random time value is shown in .104 and cannot be edited					

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

## 10.44 TR3 Rev23:2013 [ID 700] renewed standard

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	4-wire (LN)	3-wire, 4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 1ch					
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	ULL>> Off	U <sub>THR</sub> OFF	%Unom	120	100	130	100	135
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (1% UNOM)				
.013	T ULL>>	Time OFF	ms	50	50	50	50	10000
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	ULL< Off	U <sub>THR</sub> OFF	%Unom	80	10	100	10	100
.016	ULL< On	U <sub>THR</sub> ON	%Unom	95	95	95	10	100
.017	T ULL<	Time OFF	ms	1500	1500	2400	50	10000
Comment:		ULL< On has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.019	ULN>> Off	U <sub>THR</sub> OFF	%Unom	120	100	130	100	135
		U <sub>THR</sub> ON		Fixed Hysteresis (1% UNOM)				
.021	T ULN>>	Time OFF	ms	50	50	50	50	10000
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	ULN< Off	U <sub>THR</sub> OFF	%Unom	80	10	100	10	100
.024	ULN< On	U <sub>THR</sub> ON	%Unom	95	95	95	10	100
.025	T ULN<	Time OFF	ms	1500	1500	2400	50	10000
Comment:		ULN< On has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.031	ULL<< Off	U <sub>THR</sub> OFF	%Unom	45	10	100	0	100
.032	ULL<< On	U <sub>THR</sub> ON	%Unom	95	95	95	10	100
.033	T ULL<<	Time OFF	ms	300	300	300	50	10000
Comment:		ULL<< On has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.039	ULN<< Off	U <sub>THR</sub> OFF	%Unom	45	10	100	0	100
.040	ULN<< On	U <sub>THR</sub> ON	%Unom	95	95	95	10	100
.041	T ULN<<	Time OFF	ms	300	300	300	50	10000
Comment:		ULN<< On has a fixed offset of 0.5% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.055	f> Off	fTHR OFF	Hz	51.50	50.00	52.00	50.00
.056	f> On	fTHR ON	Hz	50.05	50.05	50.05	50.00
.057	T f>	Time OFF	ms	50	50	50	10000

Underfrequency1				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.059	f< Off	fTHR OFF	Hz	47.50	47.50	50.00	45.00
.060	f< On	fTHR ON	Hz	47.50	47.50	47.50	45.00
.061	T f<	Time OFF	ms	50	50	50	10000
Comment:		f< On has a fixed offset of 0.025 Hz added to the displayed value					

Frequency measuring in general				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Auxiliary Contact type			Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	60	0

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.45 AS/NZS 4777.2:2015 [ID 1102] renewed standard**

Connection Mode			Conformity Range			Possible Range		
ID	Default							
.003	Connection	4-wire (LN)	4-wire (LN)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		
Nominal Voltage				Conformity Range		Possible Range		
ID	ULN/LL nom	Unom Y Unom Δ	V V	Min	Max	Min	Max	
.005				230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4
Functional Safety			Conformity Range			Possible Range		
ID	Default							
.007	Errtol	Fixed to 2ch						
Remark:		2ch means: 2 channel with functional safety and 2 auxilliary contacts necessary						
Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.019	V> off	UTHR OFF	%Unom	113	113	113	100	135
.020	V> on	UTHR ON	%Unom	111	100	112	100	135
.021	T V>	Time OFF	ms	2000	1100	2000	100	300000
Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	V< off	UTHR OFF	%Unom	78	78	78	0	100
.024	V< on	UTHR ON	%Unom	80	79	100	0	100
.025	T V<	Time OFF	ms	2000	1100	2000	100	300000
Overvoltage2 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.034	V>>	Enable function	off	on /off		on /off		
.035	V>> off	UTHR OFF	%Unom	115	115	115	100	135
.036	V>> on	UTHR ON	%Unom	111	100	112	100	135
.037	T V>>	Time OFF	ms	200	100	200	100	300000
10 minutes average overvoltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.042	Uavg	Enable function	on	on / off		on / off		
.043	Uavg off	UTHR OFF	%Unom	112	112	112	100	135
.044	Uavg on	UTHR ON	%Unom	111	100	111	100	135
		Time OFF	ms	Fixed to fastest possible disconnection				
Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	F> off	fTHR OFF	Hz	52.00	52.00	52.00	50.00	55.00
.056	F> on	fTHR ON	Hz	51.90	50.00	51.90	50.00	55.00
.057	T F>	Time OFF	ms	2000	100	2000	100	300000
Underfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.059	F< off	fTHR OFF	Hz	47.00	45.00	47.00	40.00	50.00
.060	F< on	fTHR ON	Hz	47.50	45.50	50.00	40.00	50.00
.061	T F<	Time OFF	ms	2000	1100	2000	1000	300000
Frequency measuring in general				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		on	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10	3000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10	3000
.093	RoCoFDelay	Time OFF		ms	50	500	50	10000
.111	RoCoF wnd	Window length		ms	225	100	1000	100

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	8	1	8	1	15
.096	PShift on	PShift <sub>THR</sub> ON	°	6	1	7	1	15
.097	PShiftDel	Time OFF		ms	50	50	50	10000
.112	PShift wnd	Window length		ms	50	50	500	1000

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	0	60	0	600

Password						
ID				Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.46 G59/3/3:2015 LV [ID 405] renewed standard**

Connection Mode			Conformity Range			Possible Range		
ID	Default							
.003	Connection		Fixed to 4-wire (LN)					
Nominal Voltage				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4
Functional Safety			Conformity Range			Possible Range		
ID	Default							
.007	Errtol		Fixed to 1ch					
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary						
Overvoltage1 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.019	O/V st 1	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	114	114	114	100	135
				Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.021	T O/V st 1	Time OFF	ms	1000	1000	1000	50	300000
Undervoltage1 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.023	U/V st 1	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	87	87	87	0	100
				Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.025	T U/V st 1	Time OFF	ms	2500	2500	2500	50	300000
Overvoltage2 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.035	O/V st 2	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	119	119	119	100	135
				Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.037	T O/V st 2	Time OFF	ms	500	500	500	50	300000
Undervoltage2 Line to Neutral				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.039	U/V st 2	U <sub>THR</sub> OFF U <sub>THR</sub> ON	%Unom %Unom	80	80	80	0	100
				Fixed Hysteresis (0.75% U <sub>NOM</sub> )				
.041	T U/V st 2	Time OFF	ms	500	500	500	50	300000
Overfrequency1				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.055	O/F st 1	f <sub>THR</sub> OFF f <sub>THR</sub> ON	Hz Hz	51.50	51.50	51.50	50.00	55.00
				Fixed Hysteresis (0.05 Hz)				
.057	T O/F st 1	Time OFF	ms	90000	90000	90000	1000	300000
Underfrequency1				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.059	U/F st 1	f <sub>THR</sub> OFF f <sub>THR</sub> ON	Hz Hz	47.50	47.50	47.50	40.00	50.00
				Fixed Hysteresis (0.05 Hz)				
.061	T U/F st 1	Time OFF	ms	20000	20000	20000	1000	300000
Overfrequency2				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.063	O/F st 2	f <sub>THR</sub> OFF f <sub>THR</sub> ON	Hz Hz	52.00	52.00	52.00	50.00	55.00
				Fixed Hysteresis (0.05 Hz)				
.065	T O/F st 2	Time OFF	ms	500	500	500	50	300000
Underfrequency2				Conformity Range			Possible Range	
ID	Default		Min		Max		Min	
.067	U/F st 2	f <sub>THR</sub> OFF f <sub>THR</sub> ON	Hz Hz	47.00	47.00	47.00	40.00	50.00
				Fixed Hysteresis (0.05 Hz)				
.069	T U/F st 2	Time OFF	ms	500	500	500	50	300000

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.090	RoCoF	Enable Function	on	on / off		on / off		
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10	3000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10	3000
.093	RoCoFDelay	Time OFF	ms	500	50	2000	50	2000
.111	RoCoF wnd	Window length	ms	Fixed window length 225ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.094	PShift	Enable Function	off	on / off		on / off		
.095	PShift off	PShift <sub>THR</sub> OFF	°	12	6	12	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	9	5	11	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 200ms				

Auxiliary Contact type				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact		Time OFF	ms	Fixed to 500ms		
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay			Conformity Range		Possible Range			
ID		Default	Min	Max	Min	Max		
.102	Ton delay	Turn on time	s	20	20	20	0	600

Password						
ID			Default		Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information						
ID						
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set				

**10.47 G59/3/3:2015 MV [ID 455] renewed standard**

Connection Mode			Conformity Range			Possible Range					
ID	Default										
.003	Connection		Fixed to 3-wire								
Nominal Voltage				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0			
Functional Safety			Conformity Range			Possible Range					
ID	Default										
.007	Errtol	Fixed to 1ch									
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary									
Overvoltage1 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.011	O/V st 1	U <sub>THR</sub> OFF	%Unom	110	110	110	100	135			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.013	T O/V st 1	Time OFF	ms	1000	1000	1000	50	300000			
Undervoltage1 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.015	U/V st 1	U <sub>THR</sub> OFF	%Unom	87	87	87	0	100			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.017	T U/V st 1	Time OFF	ms	2500	2500	2500	50	300000			
Overvoltage2 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.027	O/V st 2	U <sub>THR</sub> OFF	%Unom	113	113	113	100	135			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.029	T O/V st 2	Time OFF	ms	500	500	500	50	300000			
Undervoltage2 Line to Line				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.031	U/V st 2	U <sub>THR</sub> OFF	%Unom	80	80	80	0	100			
		U <sub>THR</sub> ON	%Unom	Fixed Hysteresis (0.75% U <sub>NOM</sub> )							
.033	T U/V st 2	Time OFF	ms	500	500	500	50	300000			
Overfrequency1				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.055	O/F st 1	f <sub>THR</sub> OFF	Hz	51.50	51.50	51.50	50.00	55.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.057	T O/F st 1	Time OFF	ms	90000	90000	90000	1000	300000			
Underfrequency1				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.059	U/F st 1	f <sub>THR</sub> OFF	Hz	47.50	47.50	47.50	40.00	50.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.061	T U/F st 1	Time OFF	ms	20000	20000	20000	1000	300000			
Overfrequency2				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.063	O/F st 2	f <sub>THR</sub> OFF	Hz	52.00	52.00	52.00	50.00	55.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.065	T O/F st 2	Time OFF	ms	500	500	500	50	300000			
Underfrequency2				Conformity Range			Possible Range				
ID	Default		Min		Max		Min	Max			
.067	U/F st 2	f <sub>THR</sub> OFF	Hz	47.00	47.00	47.00	40.00	50.00			
		f <sub>THR</sub> ON	Hz	Fixed Hysteresis (0.05 Hz)							
.069	T U/F st 2	Time OFF	ms	500	500	500	50	300000			

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.090	RoCoF	Enable Function	on	on / off		on / off		
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	10	3000	10	3000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	950	10	3000	10	3000
.093	RoCoFDelay	Time OFF	ms	500	50	2000	50	2000
.111	RoCoF wnd	Window length	ms	Fixed window length 225ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.094	PShift	Enable Function	off	on / off		on / off		
.095	PShift off	PShift <sub>THR</sub> OFF	°	12	6	12	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	9	5	11	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 200ms				
Comment:		PShift off has a fixed offset of 0.2° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.102	Ton delay	Turn on time	s	20	20	20	0	600

Password					
ID			Default	Min	Max
.106	PW1	1 <sup>st</sup> digit of Password		0	0
.107	PW2	2 <sup>nd</sup> digit of Password		0	0
.108	PW3	3 <sup>rd</sup> digit of Password		0	0
.109	PW4	4 <sup>th</sup> digit of Password		0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information					
ID					
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

**10.48 G83/2:2012 [ID 500] renewed standard**

Connection Mode			Conformity Range			Possible Range	
ID	Default						
.003	Connection	Fixed to 4-wire (LN)					

Nominal Voltage				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.005	ULN/LL nom Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range		Possible Range		
ID	Default						
.007	Errtol	Fixed to 1ch					
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary					

Overvoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.019	U/V st 1 UTHR OFF %Unom	114	114	114	114	100	135
	UTHR ON %Unom			Fixed Hysteresis (0.75% UNOM)			
.021	T O/V st 1 Time OFF	ms	1000	1000	1000	50	10000

Undervoltage1 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.023	U/V st 1 UTHR OFF %Unom	87	87	87	87	0	100
	UTHR ON %Unom			Fixed Hysteresis (0.75% UNOM)			
.025	T U/V st 1 Time OFF	ms	2500	2500	2500	50	10000

Overvoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.035	O/V st 2 UTHR OFF %Unom	119	119	119	119	100	135
	UTHR ON %Unom			Fixed Hysteresis (0.75% UNOM)			
.037	T O/V st 2 Time OFF	ms	500	500	500	50	10000

Undervoltage2 Line to Neutral				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.039	U/V st 2 UTHR OFF %Unom	80	80	80	80	0	100
	UTHR ON %Unom			Fixed Hysteresis (0.75% UNOM)			
.041	T U/V st 2 Time OFF	ms	500	500	500	50	10000

Overfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.055	O/F st 1 fTHR OFF Hz	51.50	51.50	51.50	51.50	50.00	55.00
	fTHR ON Hz			Fixed Hysteresis (0.05 Hz)			
.057	T O/F st 1 Time OFF	ms	90000	90000	90000	1000	120000

Underfrequency1				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.059	U/F st 1 fTHR OFF Hz	47.50	47.50	47.50	47.50	40.00	50.00
	fTHR ON Hz			Fixed Hysteresis (0.05 Hz)			
.061	T U/F st 1 Time OFF	ms	20000	20000	20000	1000	120000

Overfrequency2				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.063	O/F st 2 fTHR OFF Hz	52.00	52.00	52.00	52.00	50.00	55.00
	fTHR ON Hz			Fixed Hysteresis (0.05 Hz)			
.065	T O/F st 2 Time OFF	ms	500	500	500	50	10000

Underfrequency2				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.067	U/F st 2 fTHR OFF Hz	47.00	47.00	47.00	47.00	40.00	50.00
	fTHR ON Hz			Fixed Hysteresis (0.05 Hz)			
.069	T U/F st 2 Time OFF	ms	500	500	500	50	10000

Frequency measuring in general				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.090	RoCoF	Enable Function	off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	200	190	210	100 1000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	190	180	210	100 1000
		Time OFF	ms	Fixed to the fastest possible disconnection			
.111	RoCoF wnd	Window length	ms	Fixed window length 535ms			

Phase Shift (PShift)				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.094	PShift	Enable Function	on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	12.0	11.0	13.0	3.0 15.0
.096	PShift on	PShift <sub>THR</sub> ON	°	10.5	9.5	13.0	3.0 15.0
		Time OFF	ms	Fixed to the fastest possible disconnection			
.112	PShift wnd	Window length	ms	Fixed window length 200ms			

Auxiliary Contact type				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms			
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID		Default		Min	Max	Min	Max
.102	Ton delay	Turn on time	s	20	20	20	0 600

Password							
ID		Default		Min	Max		
.106	PW1	1 <sup>st</sup> digit of Password		0	0	0	9
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	0	9
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	0	9
.109	PW4	4 <sup>th</sup> digit of Password		0	0	0	9

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information							
ID				Default		Min	Max
.105	ID: xxxxxx  SW: aa.ddccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set					

**10.49 C10-11:2013 LV [ID 600] renewed standard**

Connection Mode			Conformity Range			Possible Range		
ID		Default						
.003	Connection	4-wire (LN)	2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)		

Nominal Voltage				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y	V	230.0	230.0	230.0	100.0	240.0
		Unom Δ	V	400.0	400.0	400.0	173.9	417.4

Functional Safety			Conformity Range			Possible Range		
ID		Default						
.007	Errtol	Fixed to 1ch						
Remark:	1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary							

Overvoltage1 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max	Min	Max				
.019	U LN >	UTHR OFF	%Unom	110	100	110	100	135			
		UTHR ON	%Unom	Fixed Hysteresis (0.5% UNOM)							
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:	U LN > has a fixed offset of 0.25% UNOM subtracted from the displayed value										
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)										

Undervoltage1 Line to Neutral				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.023	U LN <	UTHR OFF	%Unom	85	50	85	0	100
		UTHR ON	%Unom	Fixed Hysteresis (0.5% UNOM)				
.025	T U LN <	Time OFF	ms	1500	100	1500	100	10000
Comment:	U LN < has a fixed offset of 0.25% UNOM added to the displayed value							
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)							

Undervoltage2 Line to Neutral				Conformity Range			Possible Range				
ID		Default		Min	Max	Min	Max				
.039	U LN <<	UTHR OFF	%Unom	50	25	50	0	100			
		UTHR ON	%Unom	Fixed Hysteresis (0.5% UNOM)							
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:	U LN << has a fixed offset of 0.25% UNOM added to the displayed value										
Only active for:	Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)										

Overfrequency1				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.055	f >	fTHR OFF	Hz	51.50	50.00	51.50	50.00	55.00
		fTHR ON	Hz	Fixed reconnection frequency of 50.05Hz				
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f > has a fixed offset of 0.01 Hz subtracted from the displayed value							

Underfrequency1				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	47.50	50.00	40.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	40.00	50.00
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f < on has a fixed offset of 0.02 Hz added to the displayed value							

Frequency measuring in general				Conformity Range			Possible Range	
ID		Default		Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	1000	100	1000
.093	RoCoF T	Time OFF	ms	0	0	100	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	7	7	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:		PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 500ms				
.114	I3 STOP	Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

**10.50 C10-11:2013 MV [ID 650] renewed standard**

Connection Mode			Conformity Range			Possible Range	
ID	Default						
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range	
ID	Default						
.007	Errtol	Fixed to 1ch					
Remark:	1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary						

Overvoltage1 Line to Line				Conformity Range		Possible Range					
ID	Default	Min	Max	Min	Max						
.011	U LL >	UTHR OFF UTHR ON	%Unom %Unom	110 Fixed Hysteresis (0.5% UNOM)	100	110	100	135			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:	U LL > has a fixed offset of 0.25% UNOM subtracted from the displayed value										
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)										

Undervoltage1 Line to Line				Conformity Range		Possible Range					
ID	Default	Min	Max	Min	Max						
.015	U LL <	UTHR OFF UTHR ON	%Unom %Unom	85 Fixed Hysteresis (0.5% UNOM)	50	85	0	100			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:	U LL < has a fixed offset of 0.25% UNOM added to the displayed value										
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)										

Undervoltage2 Line to Line				Conformity Range		Possible Range					
ID	Default	Min	Max	Min	Max						
.031	U LL <<	UTHR OFF UTHR ON	%Unom %Unom	50 Fixed Hysteresis (0.5% UNOM)	25	50	0	100			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:	U LL << has a fixed offset of 0.25% UNOM added to the displayed value										
Only active for:	Connection Modes: 3-wire, 4-wire (LN+LL)										

Overfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.055	f >	fTHR OFF fTHR ON	Hz Hz	51.50 Fixed reconnection frequency of 50.05Hz	50.00	51.50	50.00	55.00
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f > has a fixed offset of 0.01 Hz subtracted from the displayed value							

Underfrequency1				Conformity Range		Possible Range		
ID	Default	Min	Max	Min	Max			
.059	f < off	fTHR OFF	Hz	47.50	47.50	50.00	40.00	50.00
.060	f < on	fTHR ON	Hz	47.50	47.50	47.50	40.00	50.00
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f < on has a fixed offset of 0.02 Hz added to the displayed value							

Frequency measuring in general				Conformity Range		Possible Range	
ID	Default	Min	Max	Min	Max		
.113	F wnd	Window length	ms	Fixed window length 100ms			

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	RoCoF <sub>THR</sub> OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	RoCoF <sub>THR</sub> ON	mHz/s	800	100	1000	100	1000
.093	RoCoF T	Time OFF	ms	0	0	100	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	PShift <sub>THR</sub> OFF	°	7	7	7	3	15
.096	PShift on	PShift <sub>THR</sub> ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:		PShift off has a fixed offset of 1° subtracted from the displayed value						

Auxiliary Contact type				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	T Contact	Time OFF	ms	Fixed to 270ms				
.114	I3 STOP	Type	n.o. (normally opened)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)		n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0	600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:		If all 4 digits of the Password are 0 (default setting) the Password request is skipped					

Device Information			
ID			
.105	ID: xxxxxx  SW: aa.dd.ccb	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set	

## 10.51 C10-11:2019 LV-IP [ID 601] Interface Protection low voltage

Connection Mode			Conformity Range		Possible Range	
ID		Default				
.003	Connection	4-wire (LN)	4-wire (LN)		2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	230.0 400.0	240.0 417.4	100.0 173.9	240.0 417.4

Functional Safety			Conformity Range		Possible Range	
ID		Default				
.007	Errtol	Fixed to 1ch				
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary				

Overvoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.019	U LN > off	UTHR OFF	%Unom	110	100	110	100	135
.020	U LN > on	UTHR ON	%Unom	109	100	120	100	135
.021	T U LN >	Time OFF	ms	1000	0	3000	0	10000
Comment:		U LN > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Undervoltage1 Line to Neutral				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.023	U LN < off	UTHR OFF	%Unom	70	50	85	0	100
.024	U LN < on	UTHR ON	%Unom	85	50	100	0	100
.025	T U LN <	Time OFF	ms	1500	0	1500	0	10000
Comment:		U LN < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)						

Overvoltage2 Line to Neutral				Conformity Range		Possible Range					
ID		Default		Min	Max	Min	Max				
.035	U LN>> off	UTHR OFF	%Unom	115	100	130	100	135			
.036	U LN>> on	UTHR ON	%Unom	114	100	120	100	135			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		U LN > off has a fixed offset of 0.25% UNOM subtracted from the displayed value									
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)									

Undervoltage2 Line to Neutral				Conformity Range		Possible Range					
ID		Default		Min	Max	Min	Max				
.039	U LN<< off	UTHR OFF	%Unom	25	25	50	0	100			
.040	U LN<< on	UTHR ON	%Unom	85	50	100	0	100			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		U LN < off has a fixed offset of 0.25% UNOM added to the displayed value									
Only active for:		Connection Modes: 2-wire, 4-wire (LN), 4-wire (LN+LL)									

Overfrequency1				Conformity Range		Possible Range					
ID		Default		Min	Max	Min	Max				
.055	f > off	fTHR OFF	Hz	51.50	51.50	51.50	50.00	55.00			
.056	f > on	fTHR ON	Hz	50.10	50.00	52.00	50.00	55.00			
		Time OFF	ms	Fixed to fastest possible disconnection							
Comment:		f > off has a fixed offset of 0.01 Hz subtracted to the displayed value									
Only active for:		Voltage > 20% UNOM									

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	47.50	47.50	40.00 50.00	
.060	f < on	fTHR ON	Hz	49.90	47.00	50.00	40.00 50.00	
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f < off has a fixed offset of 0.01 Hz added to the displayed value							
Only active for:	Voltage > 20% UNOM							

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	fTHR OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	fTHR ON	mHz/s	800	100	1000	100	1000
.093	RoCoF t	Time OFF	ms	0	0	0	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	fTHR OFF	°	7	7	7	3	15
.096	PShift on	fTHR ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:	PShift off has a fixed offset of 1° subtracted from the displayed value							

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Type	Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	300	100	300	10	5000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0 600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	

Remark: If all 4 digits of the Password are 0 (default setting) the Password request is skipped

Device Information			
ID			
.105	ID: xxxxxx SW: aa.dd.ccb		
	xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set		

## 10.52 C10-11:2019 HV-IP [ID 651] Interface Protection / High Voltage

Connection Mode			Conformity Range			Possible Range	
ID		Default					
.003	Connection	3-wire	3-wire			2-wire, 3-wire, 4-wire (LN), 4-wire (LN+LL)	

Nominal Voltage				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.005	ULN/LL nom	Unom Y Unom Δ	V V	230.0 400.0	57.5 100.0	230.0 400.0	28.8 50.0	241.4 420.0

Functional Safety			Conformity Range			Possible Range	
ID		Default					
.007	Errtol	Fixed to 1ch					
Remark:		1ch means: 1 channel without functional safety and 1 auxilliary contact1 necessary					

Overvoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.011	U LL > off	UTHR OFF	%Unom	110	100	110	100	135
.012	U LL > on	UTHR ON	%Unom	109	100	120	100	135
.013	T U LL >	Time OFF	ms	1000	0	3000	0	10000
Comment:		U LL > off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage1 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.015	U LL < off	UTHR OFF	%Unom	70	50	85	0	100
.016	U LL < on	UTHR ON	%Unom	90	50	100	0	100
.017	T U LL <	Time OFF	ms	1500	0	1500	0	10000
Comment:		U LL < off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overvoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.027	U LL>> off	UTHR OFF	%Unom	115	100	130	100	135
.028	U LL>> on	UTHR ON	%Unom	114	100	120	100	135
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:		U LL>> off has a fixed offset of 0.25% UNOM subtracted from the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Undervoltage2 Line to Line				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.031	U LL<< off	UTHR OFF	%Unom	25	25	50	0	100
.032	U LL<< on	UTHR ON	%Unom	90	50	100	0	100
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:		U LL<< off has a fixed offset of 0.25% UNOM added to the displayed value						
Only active for:		Connection Modes: 3-wire, 4-wire (LN+LL)						

Overfrequency1				Conformity Range		Possible Range		
ID		Default		Min	Max	Min	Max	
.055	f > off	fTHR OFF	Hz	51.50	51.50	51.50	50.00	55.00
.056	f > on	fTHR ON	Hz	50.10	50.00	52.00	50.00	55.00
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:		f > off has a fixed offset of 0.01 Hz subtracted to the displayed value						
Only active for:		Voltage > 20% UNOM						

Underfrequency1				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.059	f < off	fTHR OFF	Hz	47.50	47.50	47.50	40.00 50.00	
.060	f < on	fTHR ON	Hz	49.90	47.00	50.00	40.00 50.00	
		Time OFF	ms	Fixed to fastest possible disconnection				
Comment:	f < off has a fixed offset of 0.01 Hz added to the displayed value							
Only active for:	Voltage > 20% UNOM							

Frequency measuring in general				Conformity Range		Possible Range		
ID			Default	Min	Max	Min	Max	
.113	F wnd	Window length	ms	Fixed window length 100ms				

Rate of Change of Frequency (RoCoF)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.090	RoCoF	Enable Function		off	on / off		on / off	
.091	RoCoF off	fTHR OFF	mHz/s	1000	1000	1000	100	2000
.092	RoCoF on	fTHR ON	mHz/s	800	100	1000	100	1000
.093	RoCoF t	Time OFF	ms	0	0	0	0	1000
.111	RoCoF wnd	Window length	ms	Fixed window length 100ms				

Phase Shift (PShift)				Conformity Range		Possible Range		
ID				Default	Min	Max	Min	Max
.094	PShift	Enable Function		on	on / off		on / off	
.095	PShift off	fTHR OFF	°	7	7	7	3	15
.096	PShift on	fTHR ON	°	5	3	7	3	15
		Time OFF	ms	Fixed to the fastest possible disconnection				
.112	PShift wnd	Window length	ms	Fixed window length 100ms				
Comment:	PShift off has a fixed offset of 1° subtracted from the displayed value							

Auxiliary Contact type				Conformity Range		Possible Range		
ID			Type	Default	Min	Max	Min	Max
.099	Contact	Type	dis. (disabled)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	
.100	Contact t	Time OFF	ms	300	100	300	10	5000
.114	I3 STOP	Type	n.o. (normally opened)	n.o. (normally opened) n.c. (normally closed) dis. (disabled)			n.o. (normally opened) n.c. (normally closed) dis. (disabled)	

Turn-on delay				Conformity Range		Possible Range	
ID			Default	Min	Max	Min	Max
.102	Ton delay	Turn on time	s	60	60	60	0 600

Password							
ID				Default	Min	Max	
.106	PW1	1 <sup>st</sup> digit of Password		0	0	9	
.107	PW2	2 <sup>nd</sup> digit of Password		0	0	9	
.108	PW3	3 <sup>rd</sup> digit of Password		0	0	9	
.109	PW4	4 <sup>th</sup> digit of Password		0	0	9	
Remark:	If all 4 digits of the Password are 0 (default setting) the Password request is skipped						

Device Information							
ID							
.105	ID: xxxxxx SW: aa.ddccb			xxxxx = Device ID  dd: Software version of Display Software aa: Software version of Measuring Software cc: Index of Configuration set b: Version of Configuration set			

## Professional Line

### XUFD

#### MANUAL

[docs.SEGelectronics.de/xufd](http://docs.SEGelectronics.de/xufd)



SEG Electronics GmbH reserves the right to update any portion of this publication at any time.  
Information provided by SEG Electronics GmbH is believed to be correct and reliable.  
However, SEG Electronics GmbH assumes no responsibility unless otherwise expressly undertaken.



**SEG Electronics GmbH**  
Krefelder Weg 47 • D-47906 Kempen (Germany)  
Telephone: +49 (0) 21 52 145 1  
Internet: [www.SEGelectronics.de](http://www.SEGelectronics.de)

Sales  
Telephone: +49 (0) 21 52 145 331  
Fax: +49 (0) 21 52 145 354  
E-mail: [sales@SEGelectronics.de](mailto:sales@SEGelectronics.de)

Service  
Telephone: +49 (0) 21 52 145 600  
Fax: +49 (0) 21 52 145 354  
E-mail: [support@SEGelectronics.de](mailto:support@SEGelectronics.de)

Complete address / phone / fax / email information for all locations is available on our website.