
PROTECTION MADE SIMPLE.

WI Line

WIC1

SELF-/DUAL POWERED PROTECTION DEVICE

WIC1-1	Self-powered device, parameter settings via Smart view (PC) / DiggiMEC
WIC1-2	Self-powered device, parameter settings via DIP switches and/or Smart view (PC) / DiggiMEC
WIC1-3	Self-powered device, parameter settings via HEX switches and/or Smart view (PC) / DiggiMEC
WIC1-4	Dual-powered device, parameter settings via Smart view (PC) / DiggiMEC

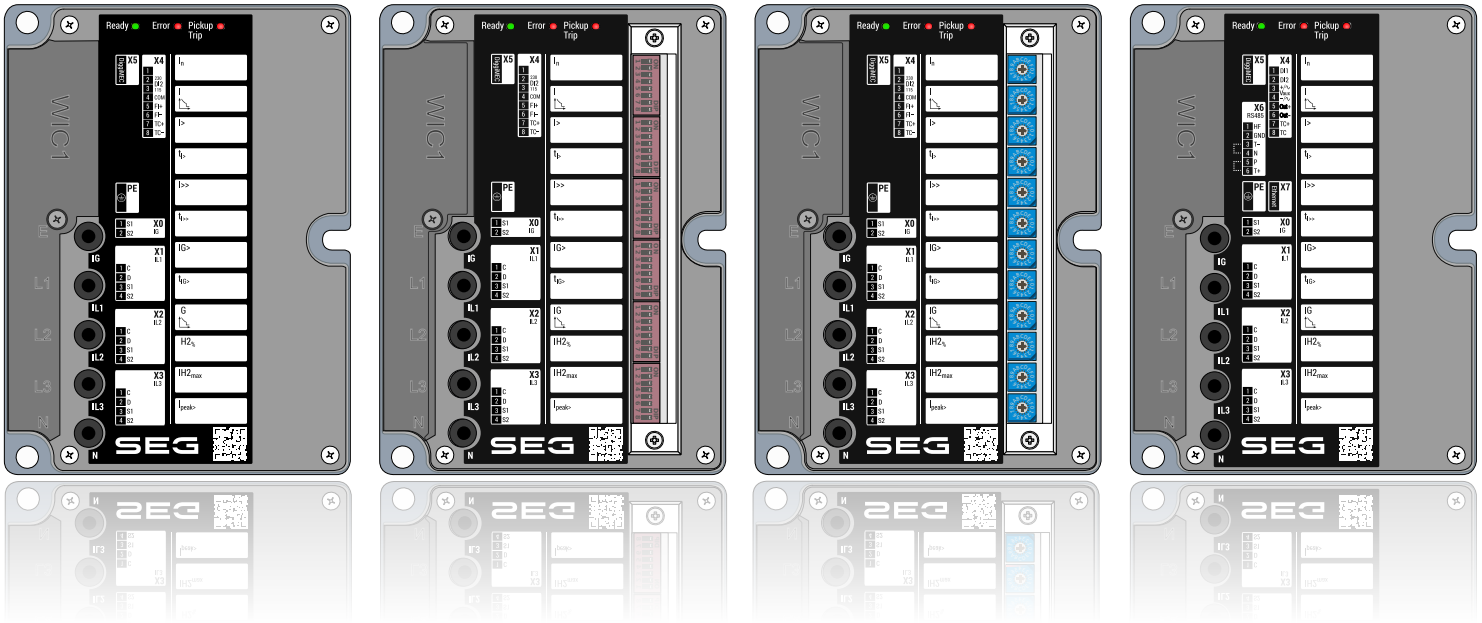

SELF-/DUAL POWERED PROTECTION DEVICE

Version: 2.3


Original document

English

WIRING DIAGRAMS

This document does not replace the Technical Manual.

WIC1-1SN0NN0SA0

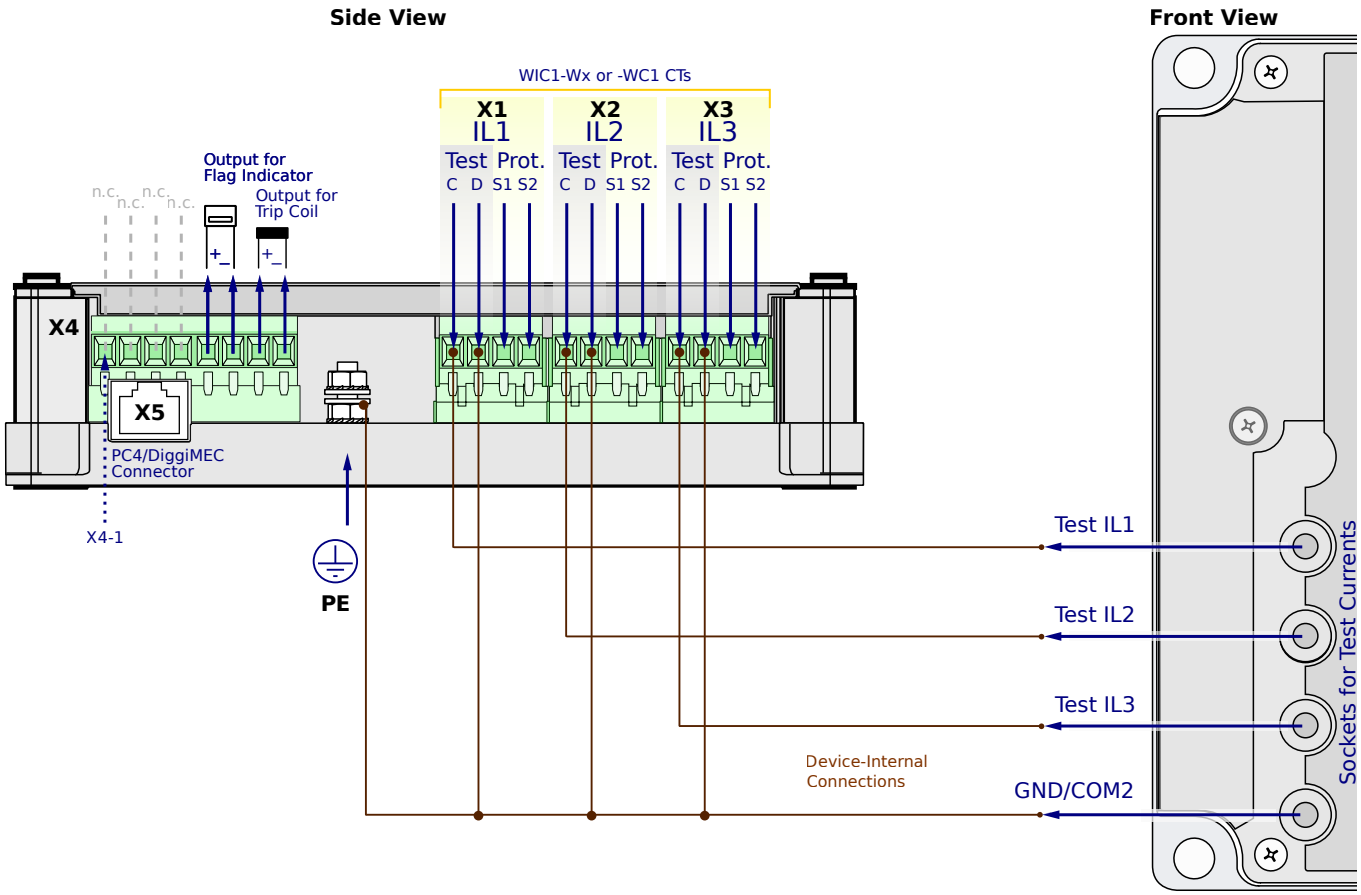


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN0SAH

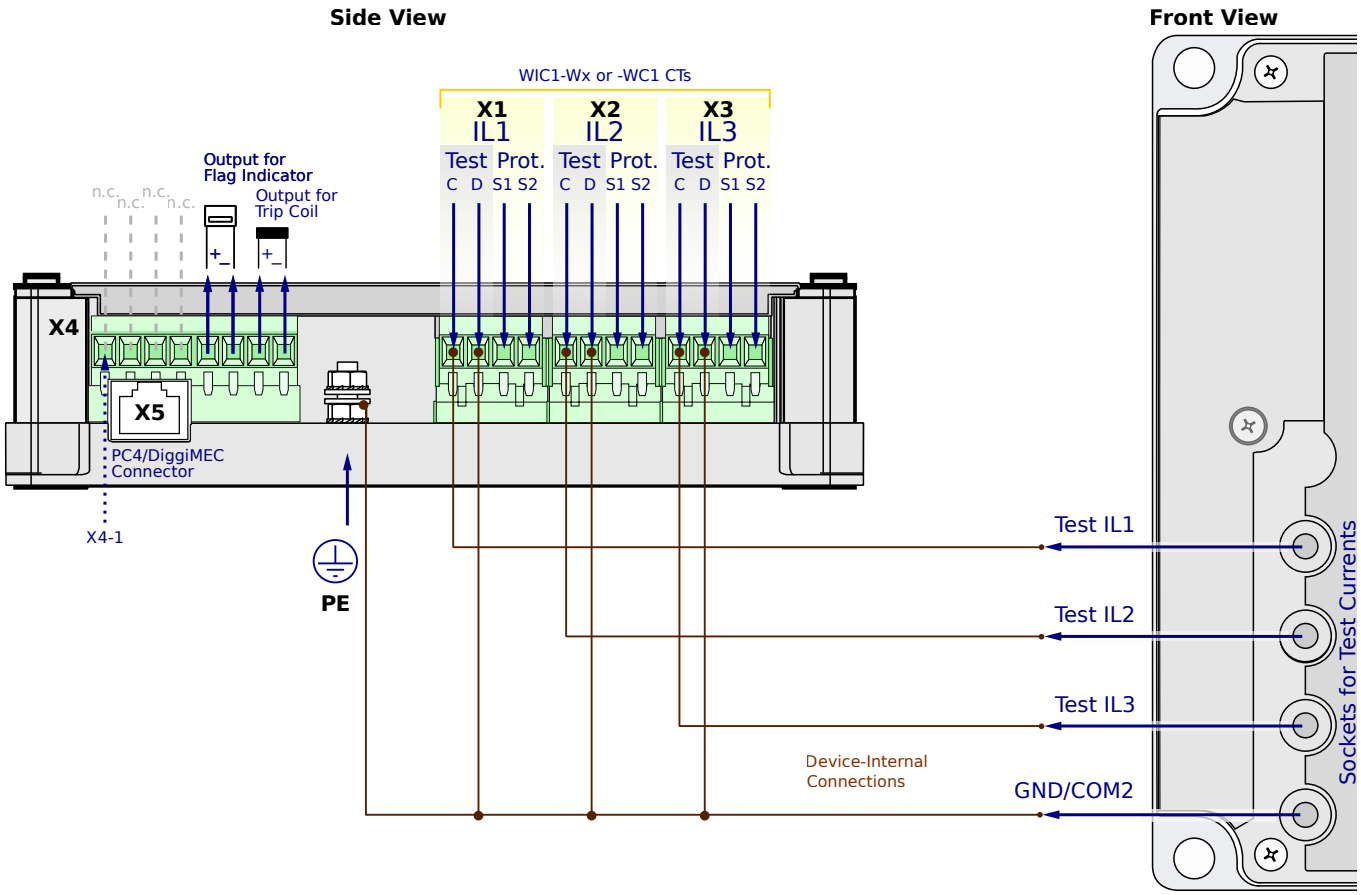


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN0AA0

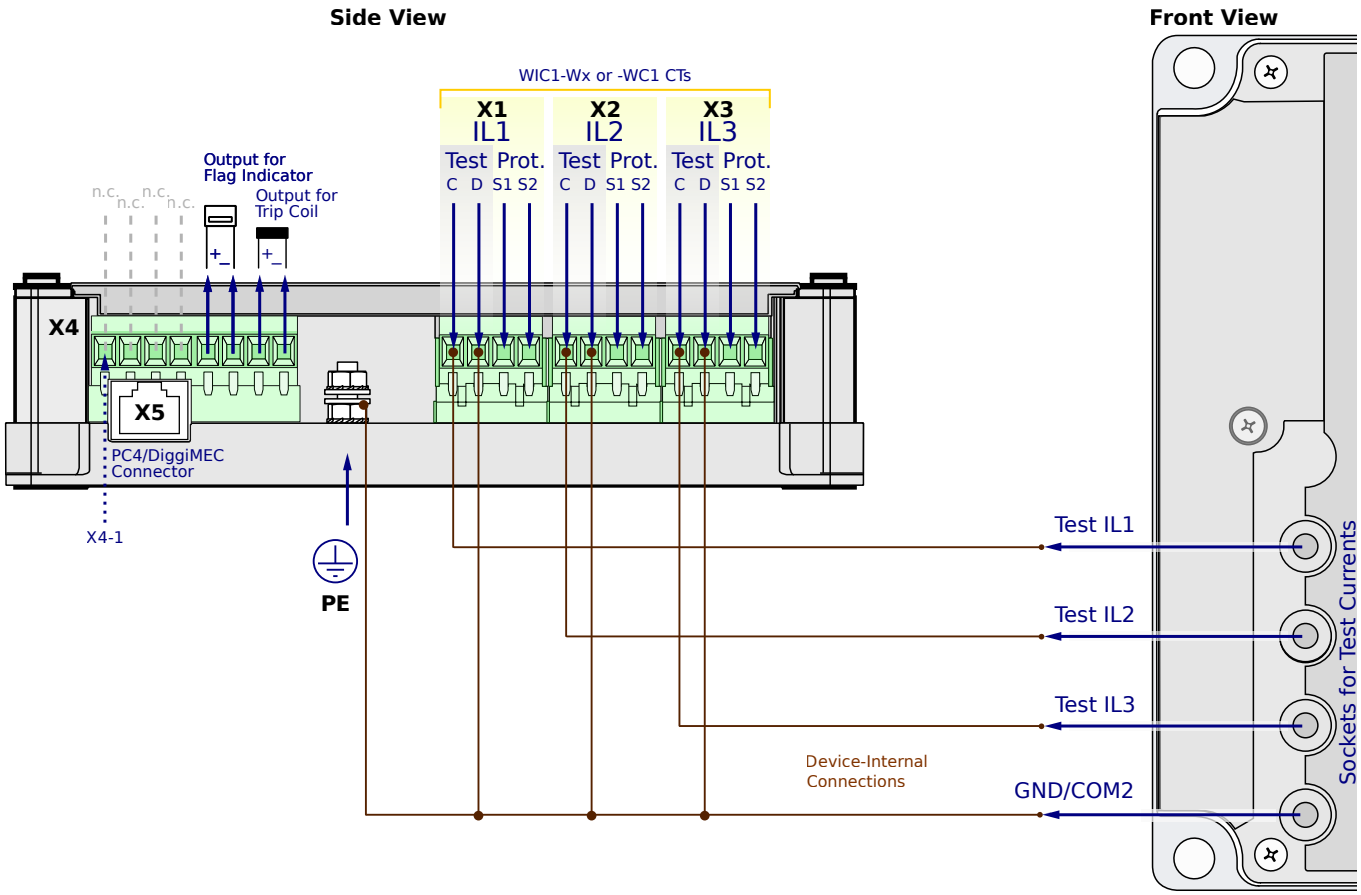


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN0AAH

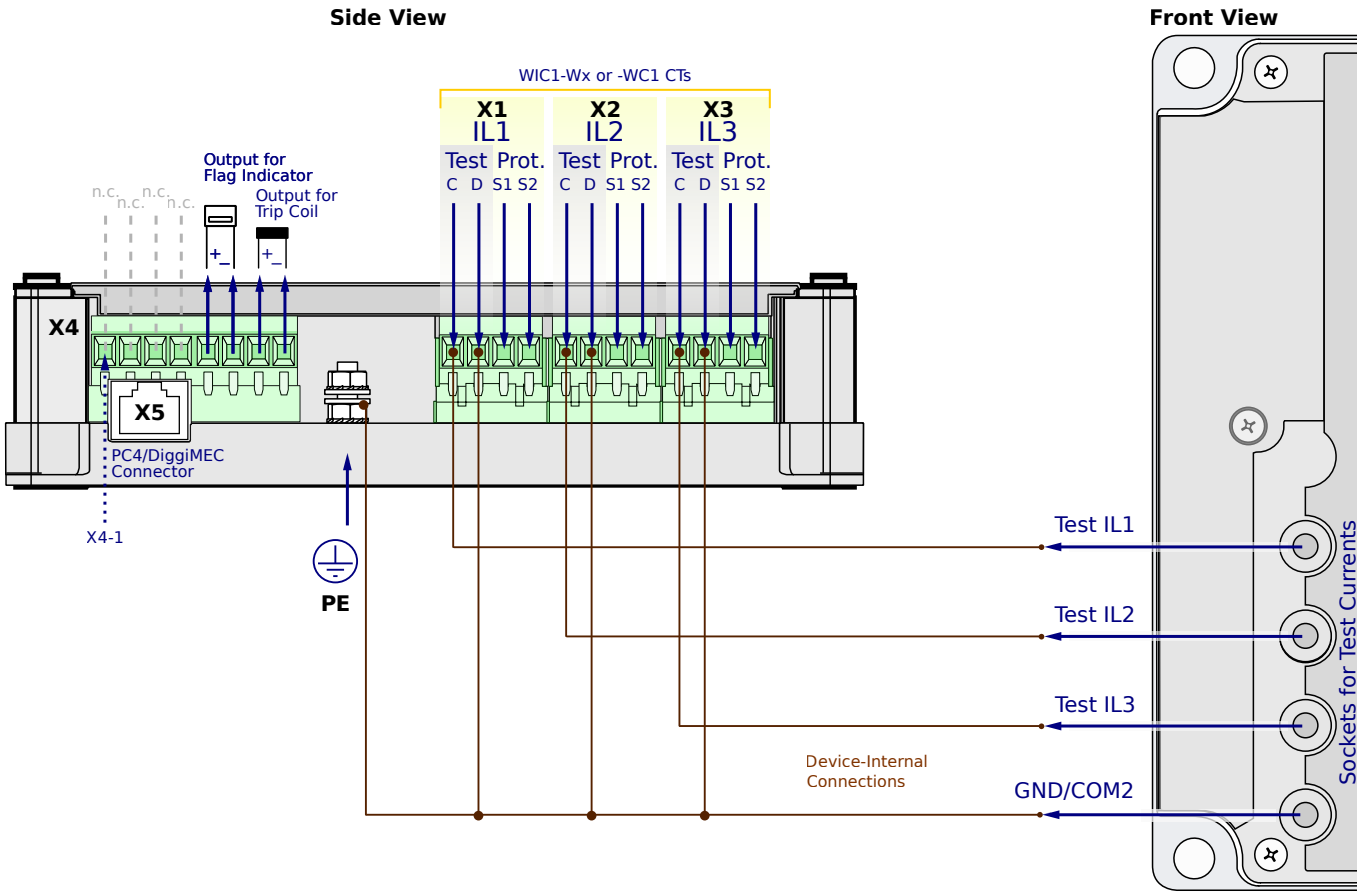


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN0PA0

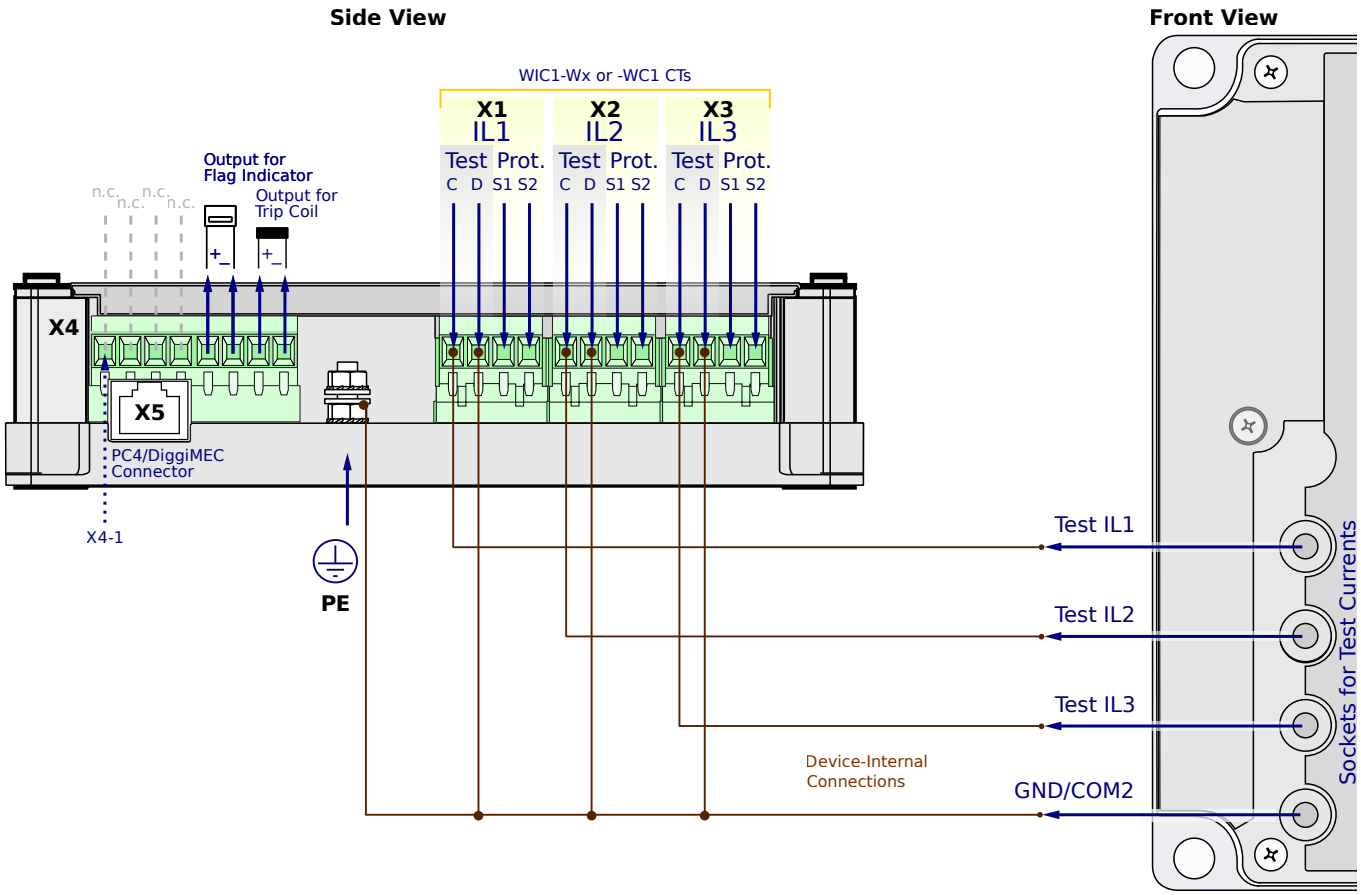


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN0PAH

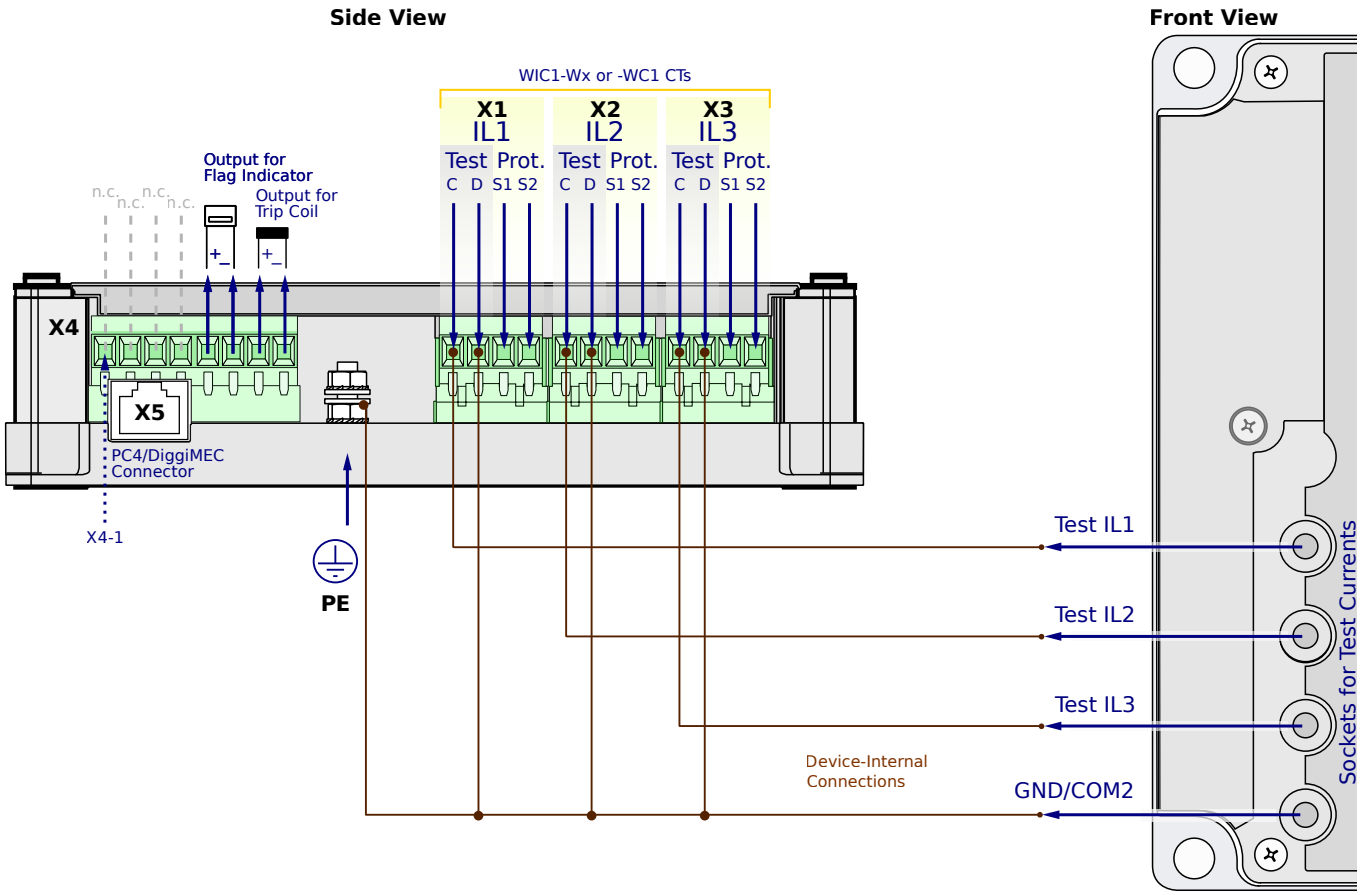


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1SA0

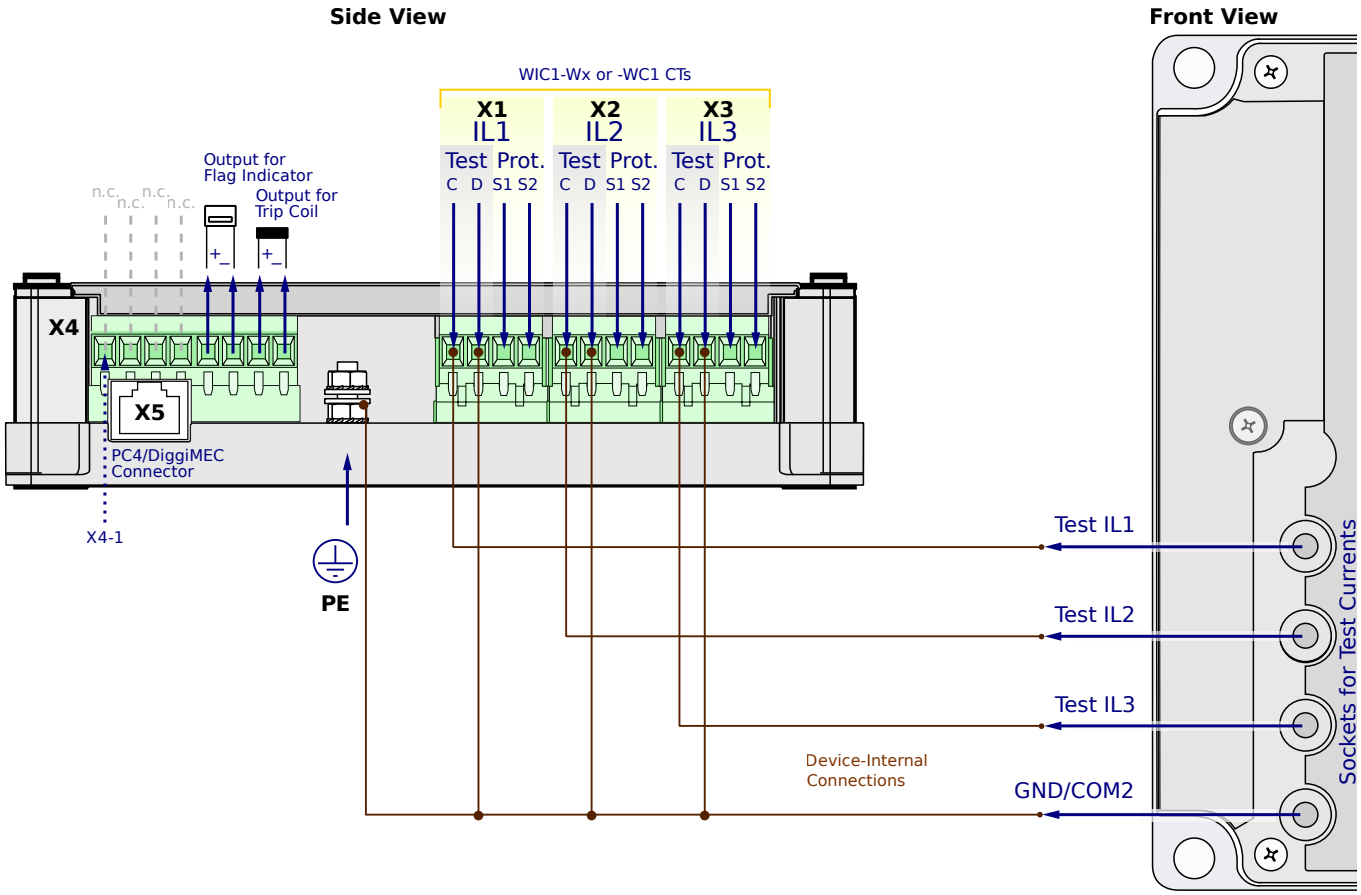


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1SAH

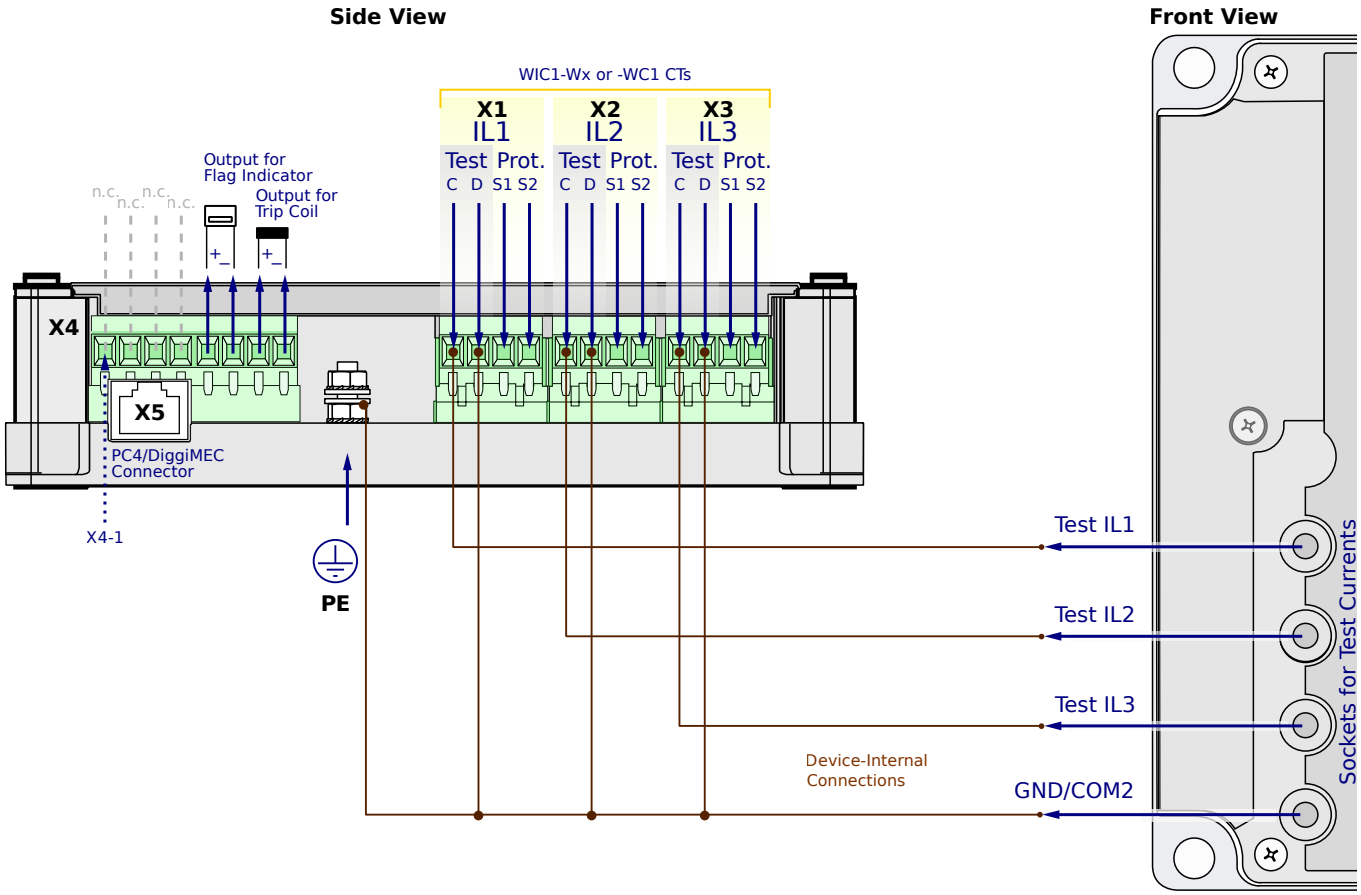


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1AA0

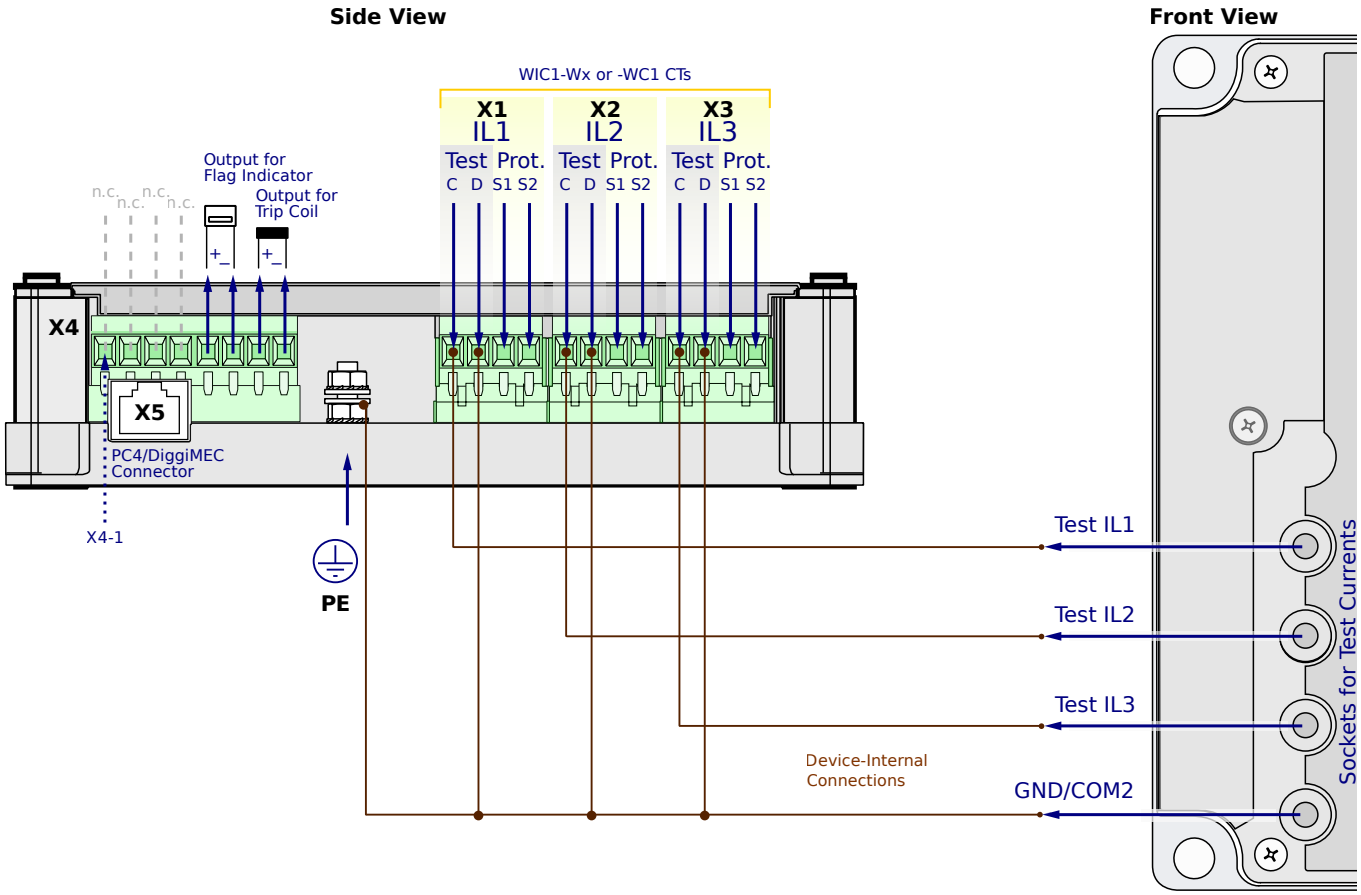


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1AAH

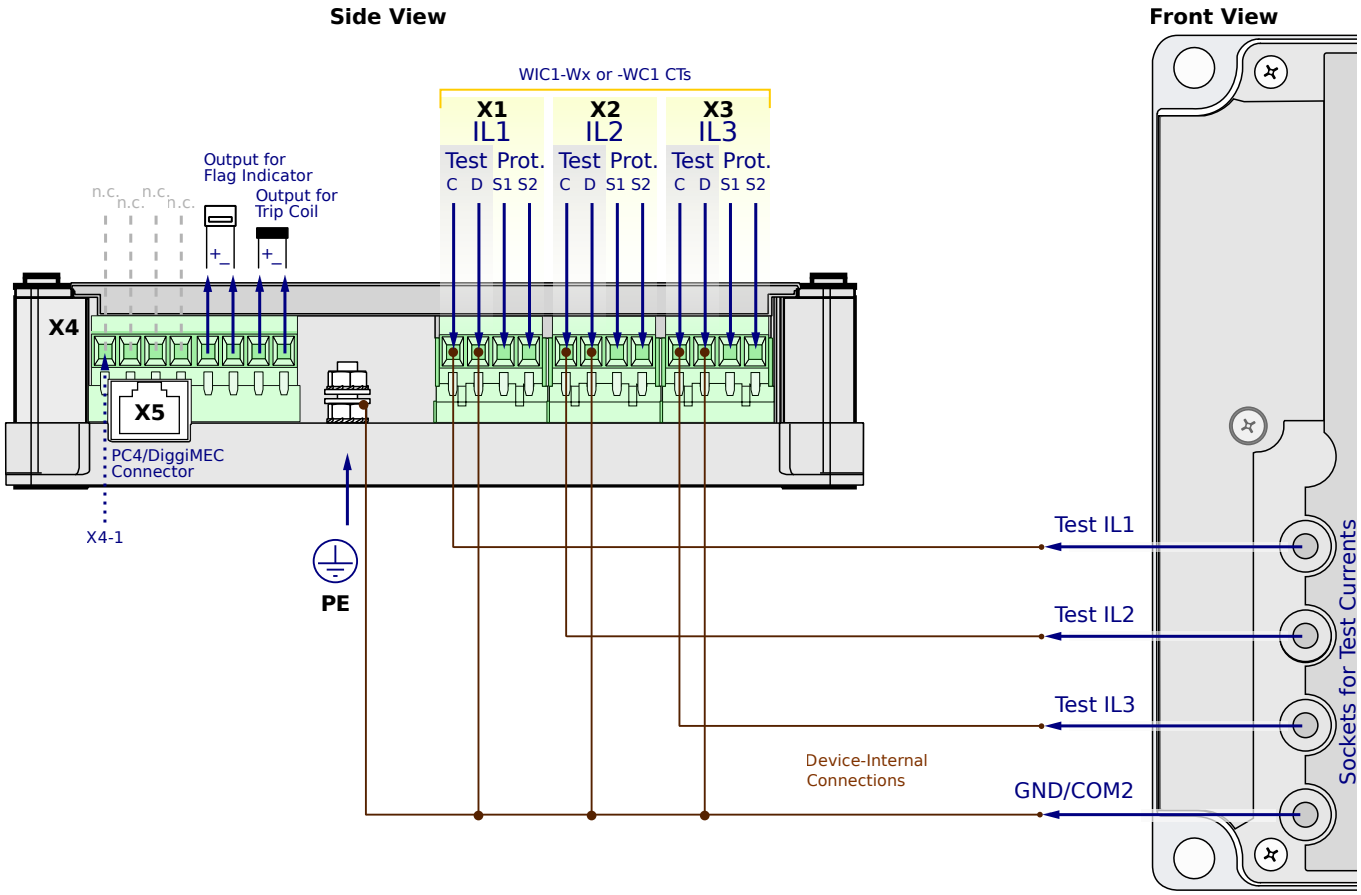


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1PA0

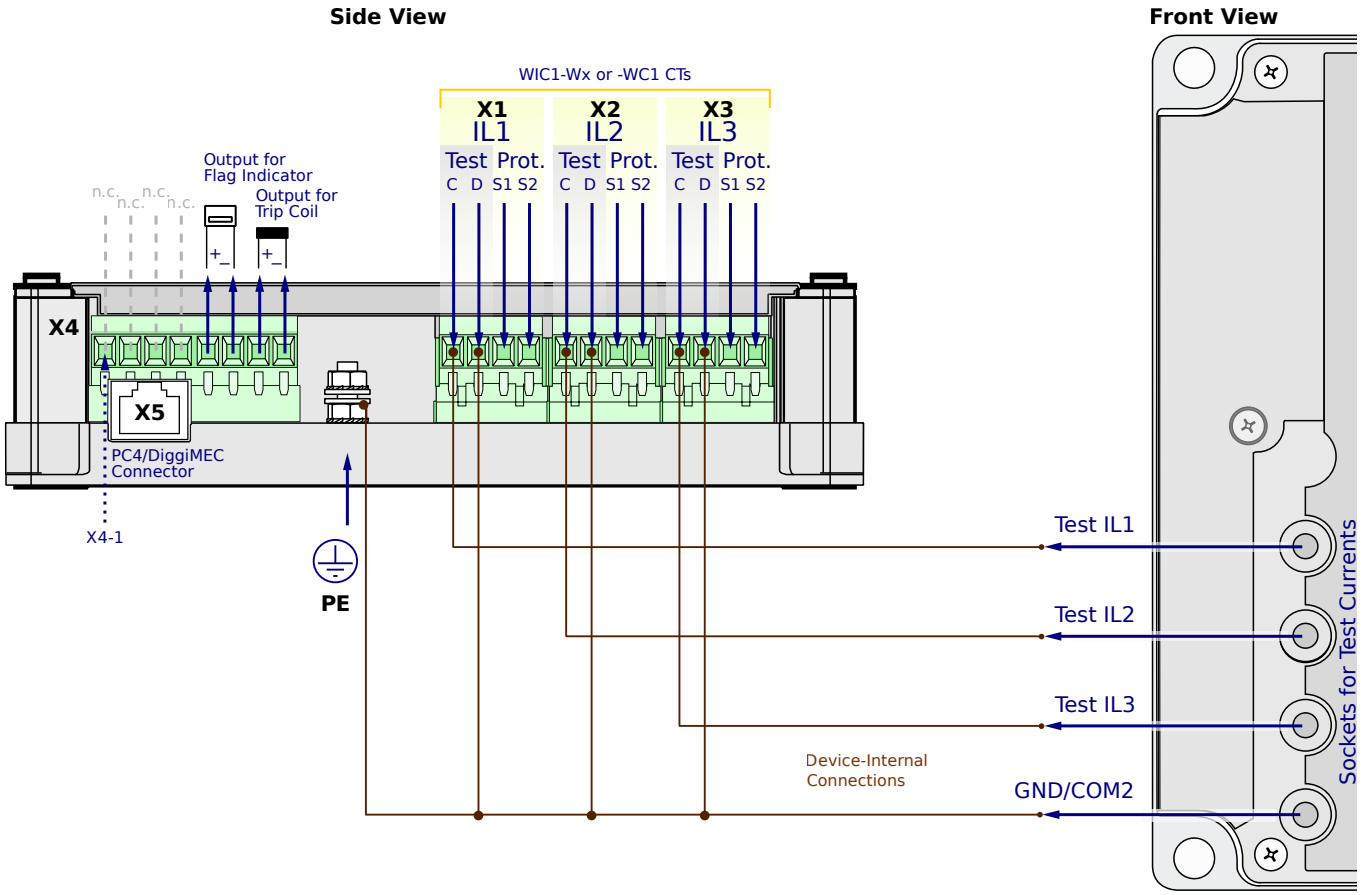


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN1PAH

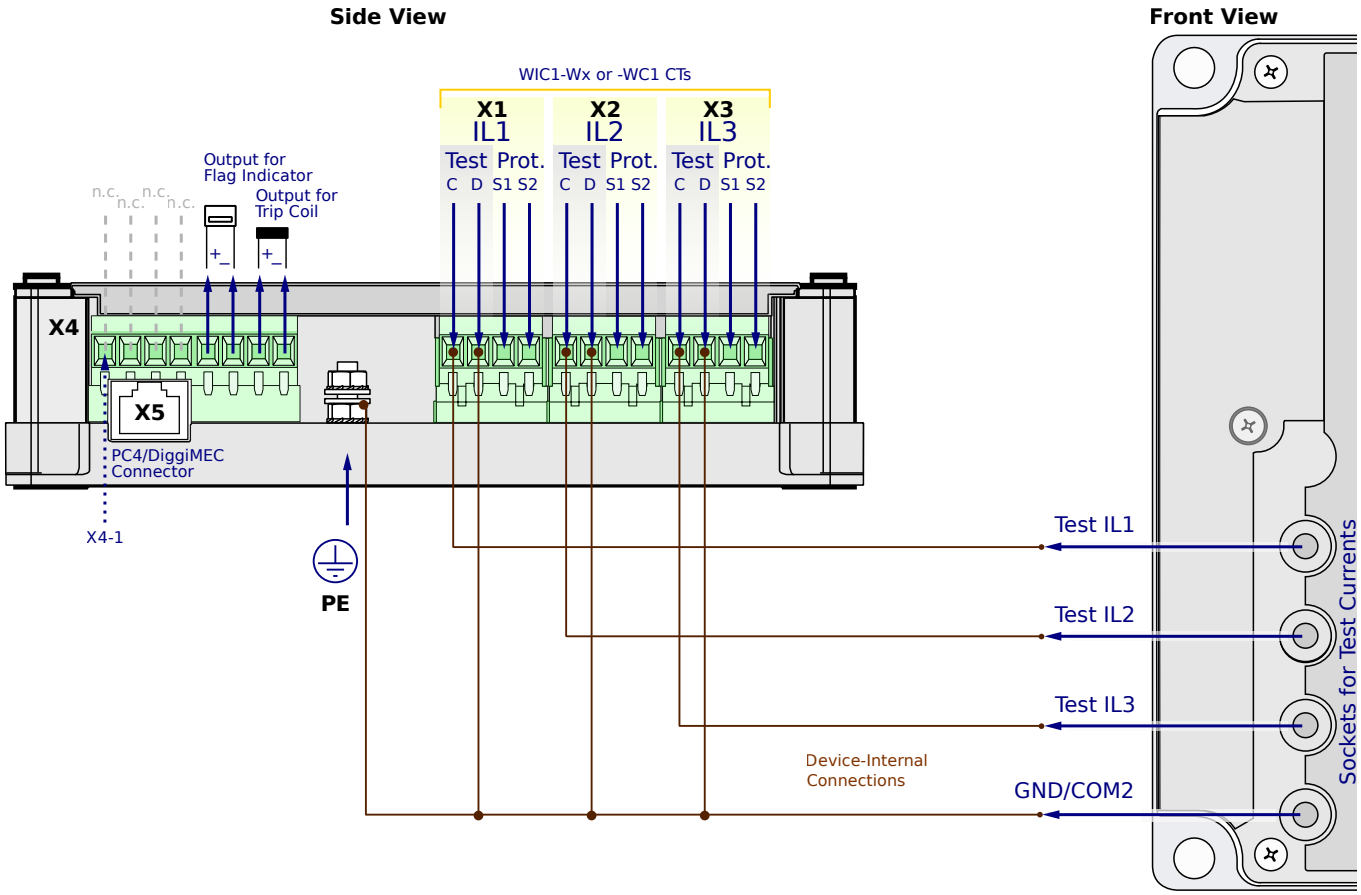


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2SA0

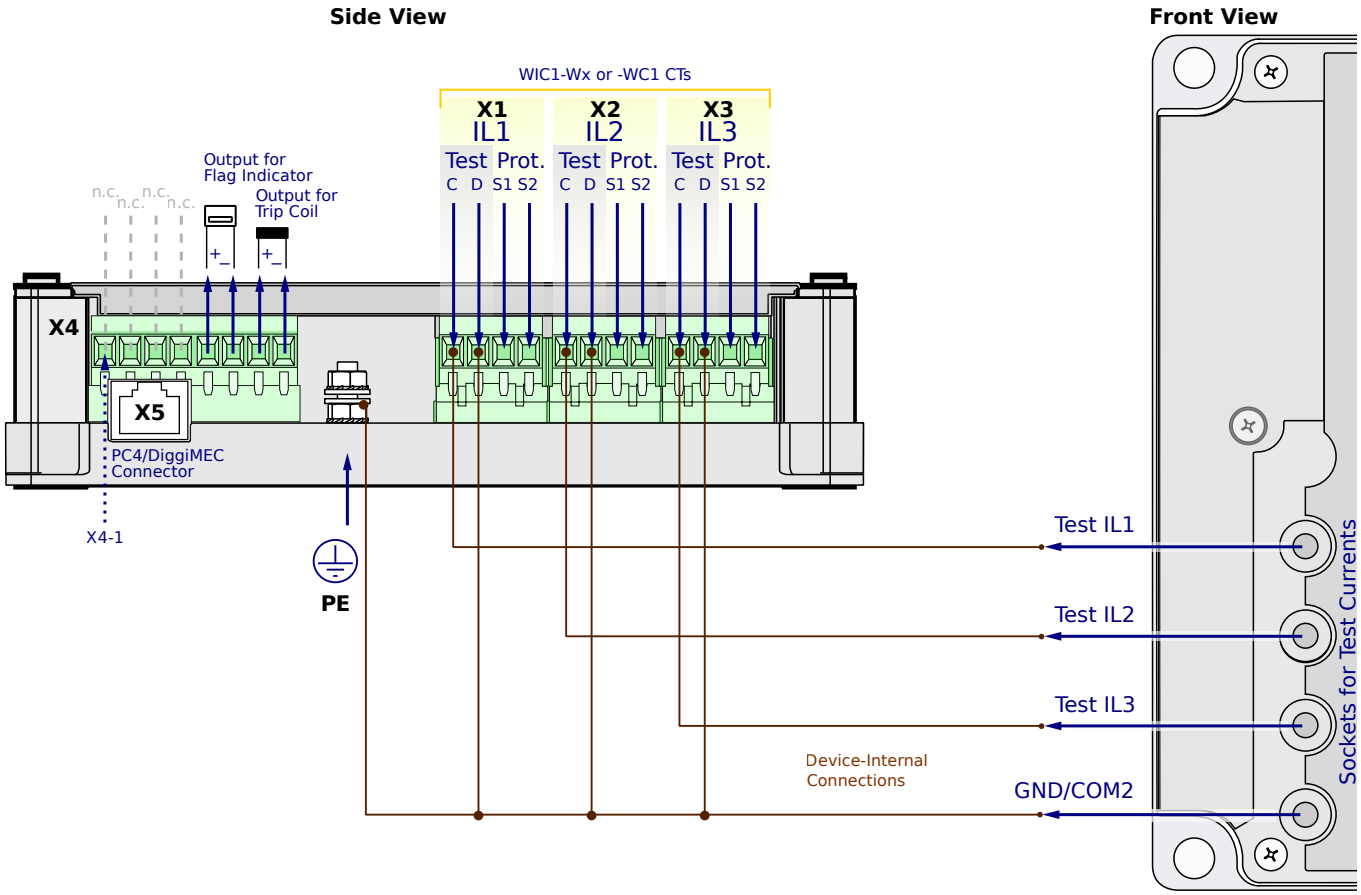


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2SAH

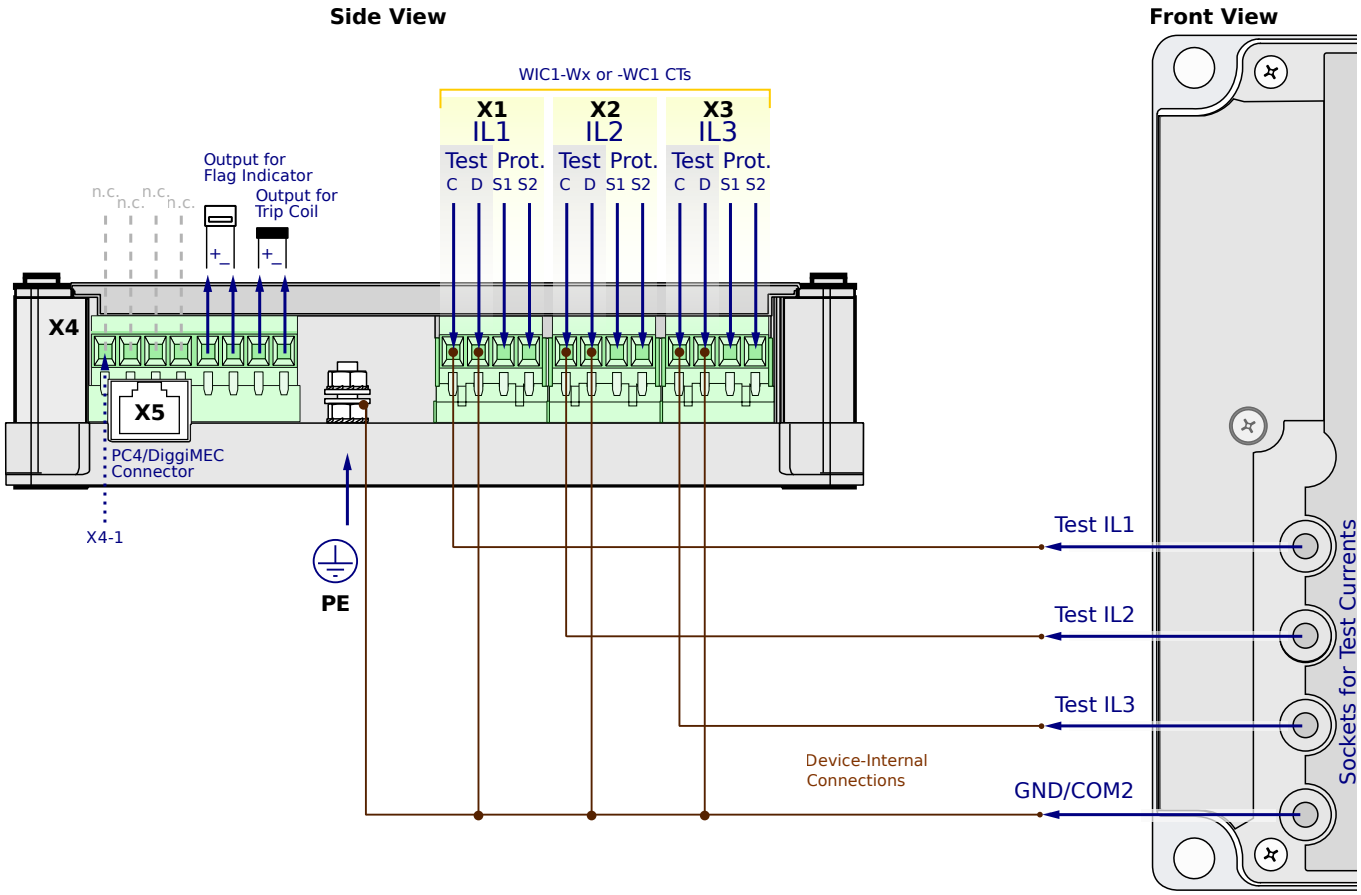


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2AA0

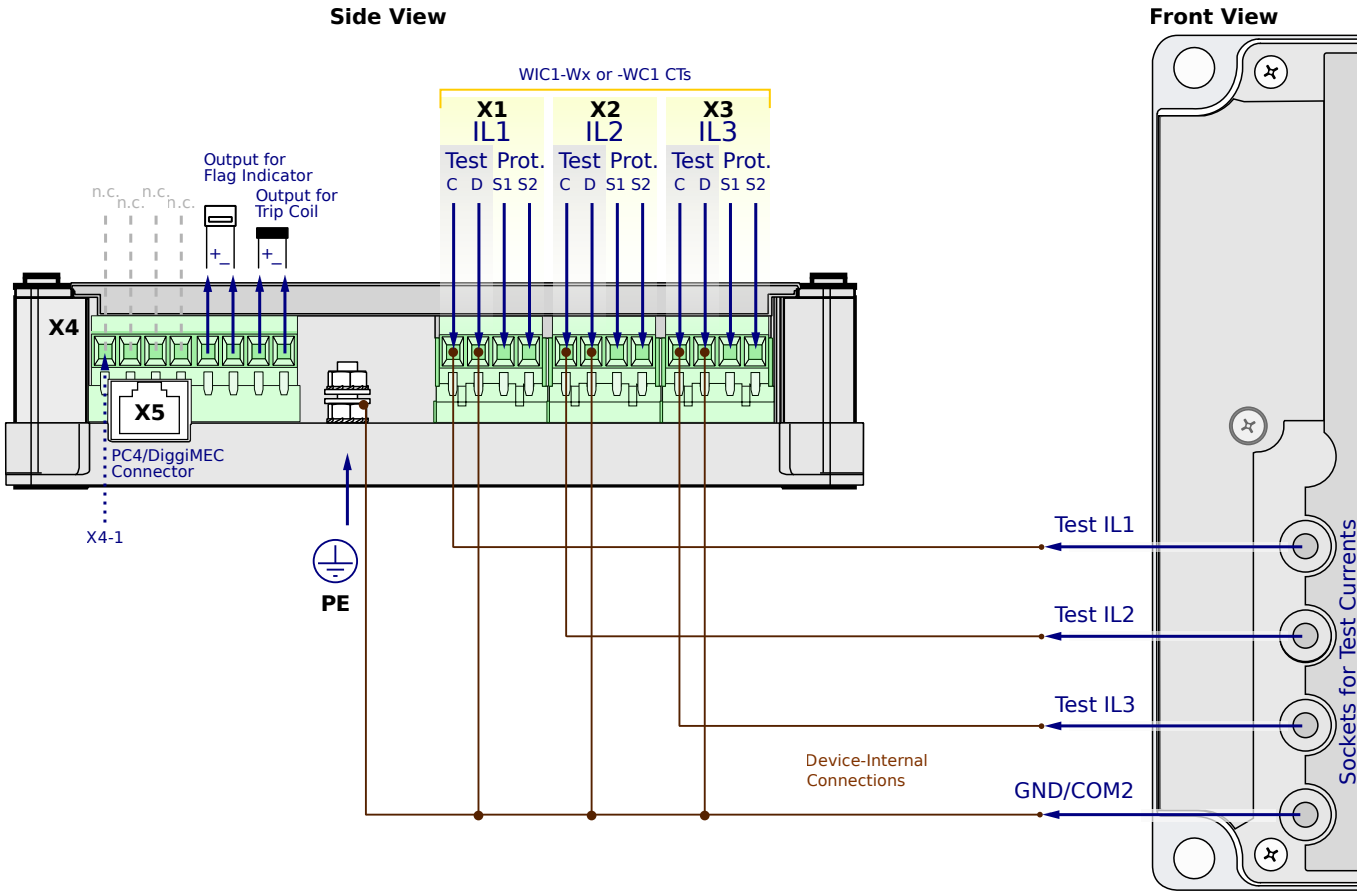


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2AAH

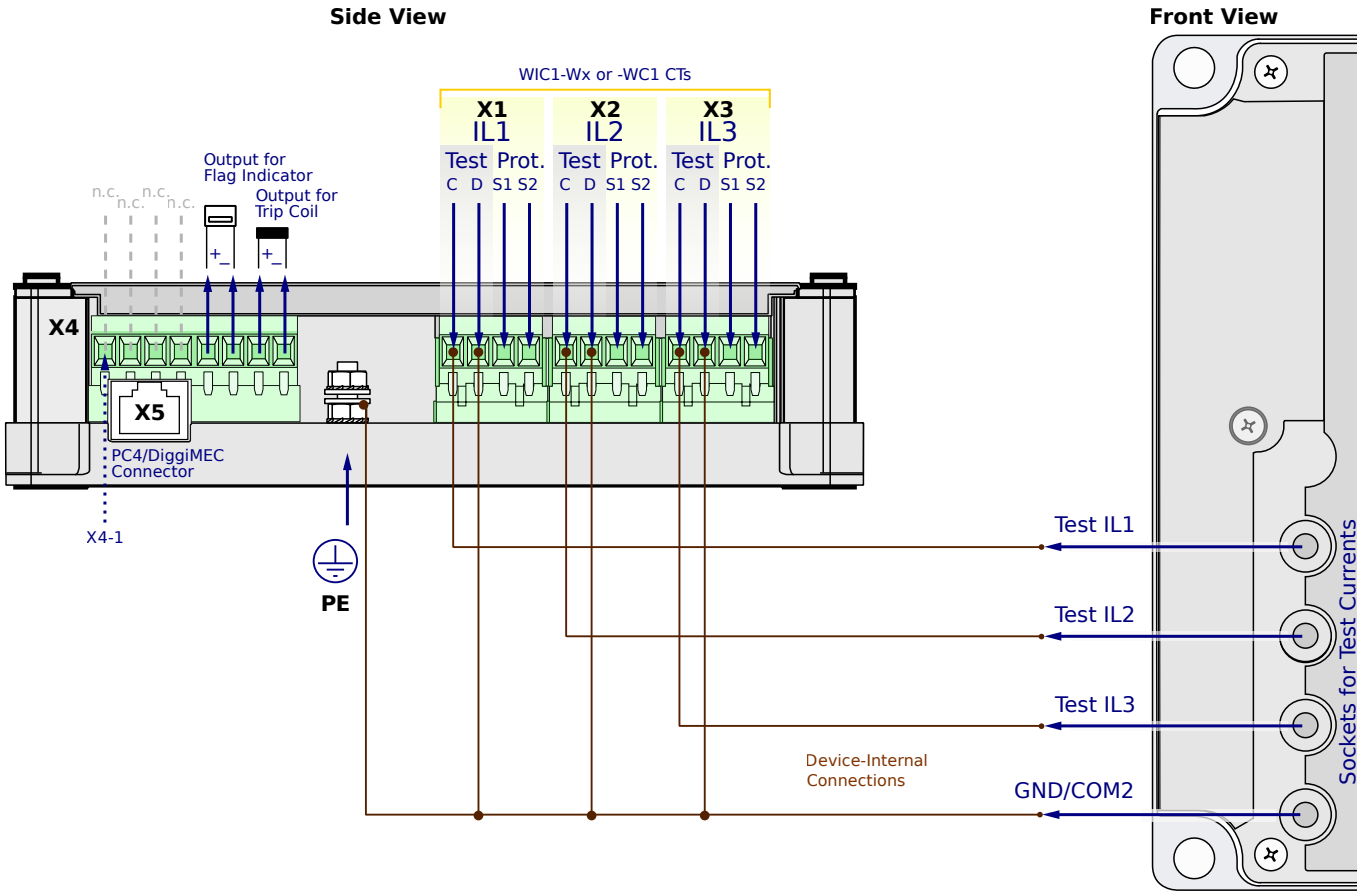


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2PA0

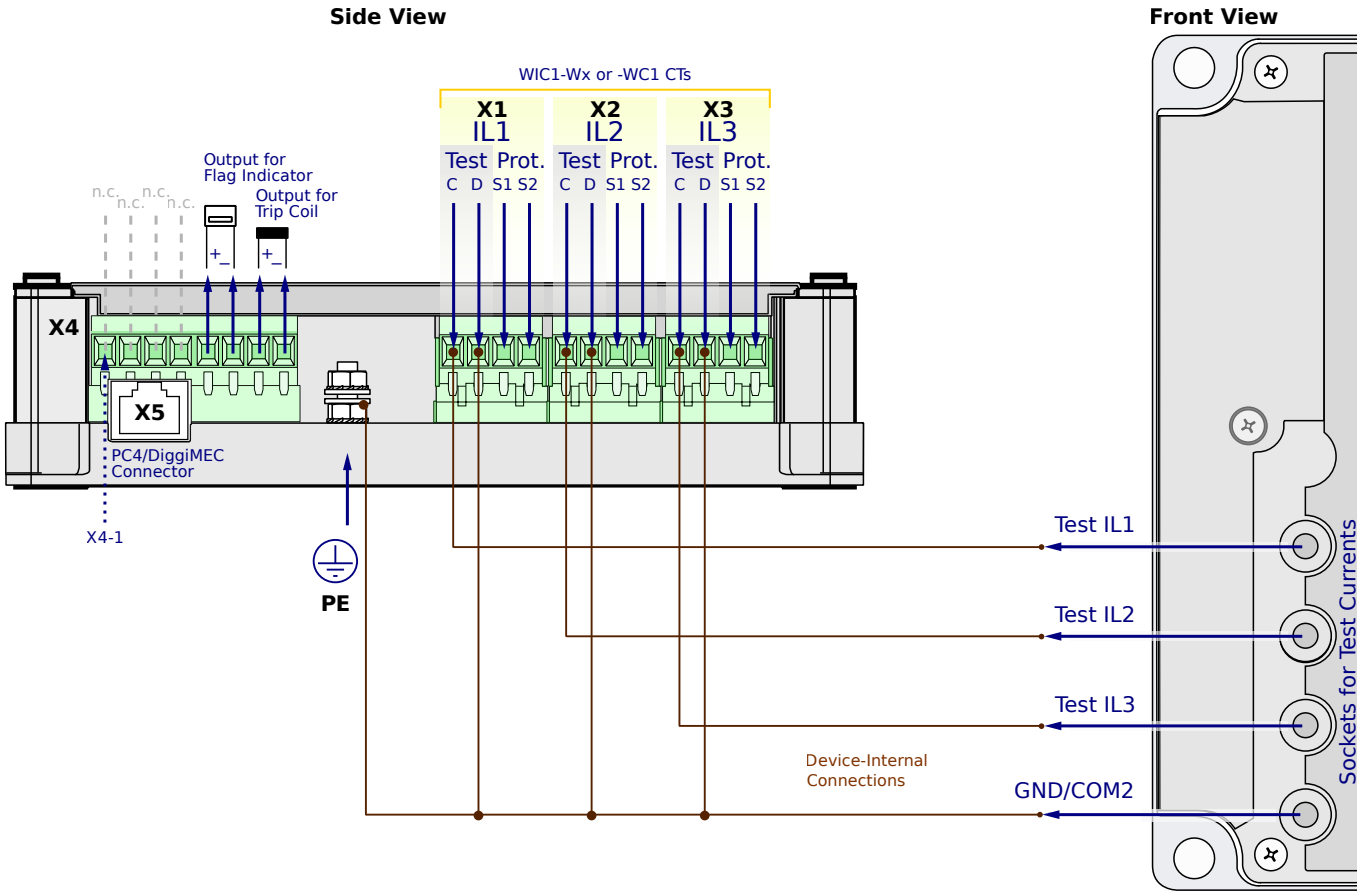


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NN2PAH

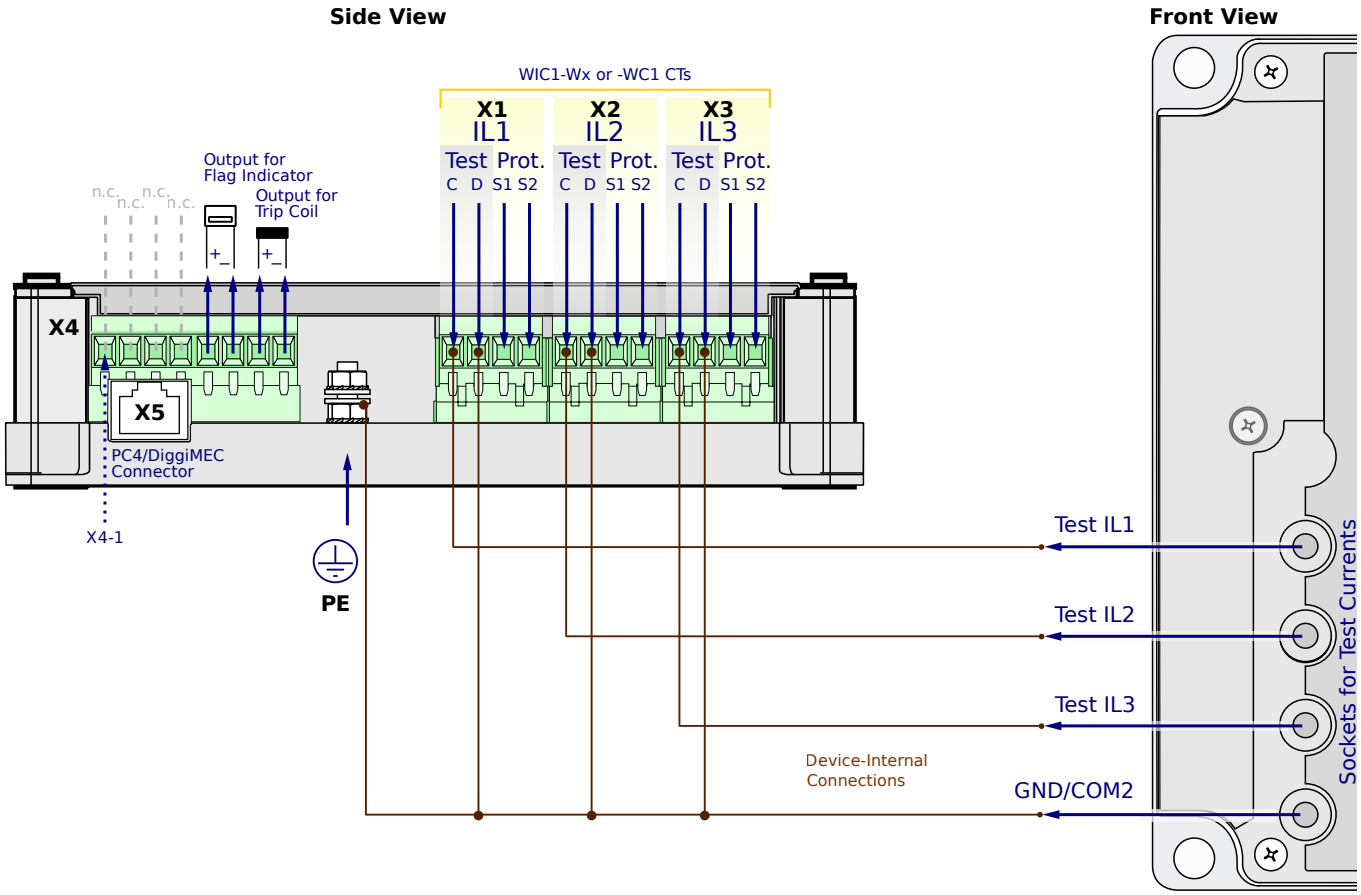


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0SA0

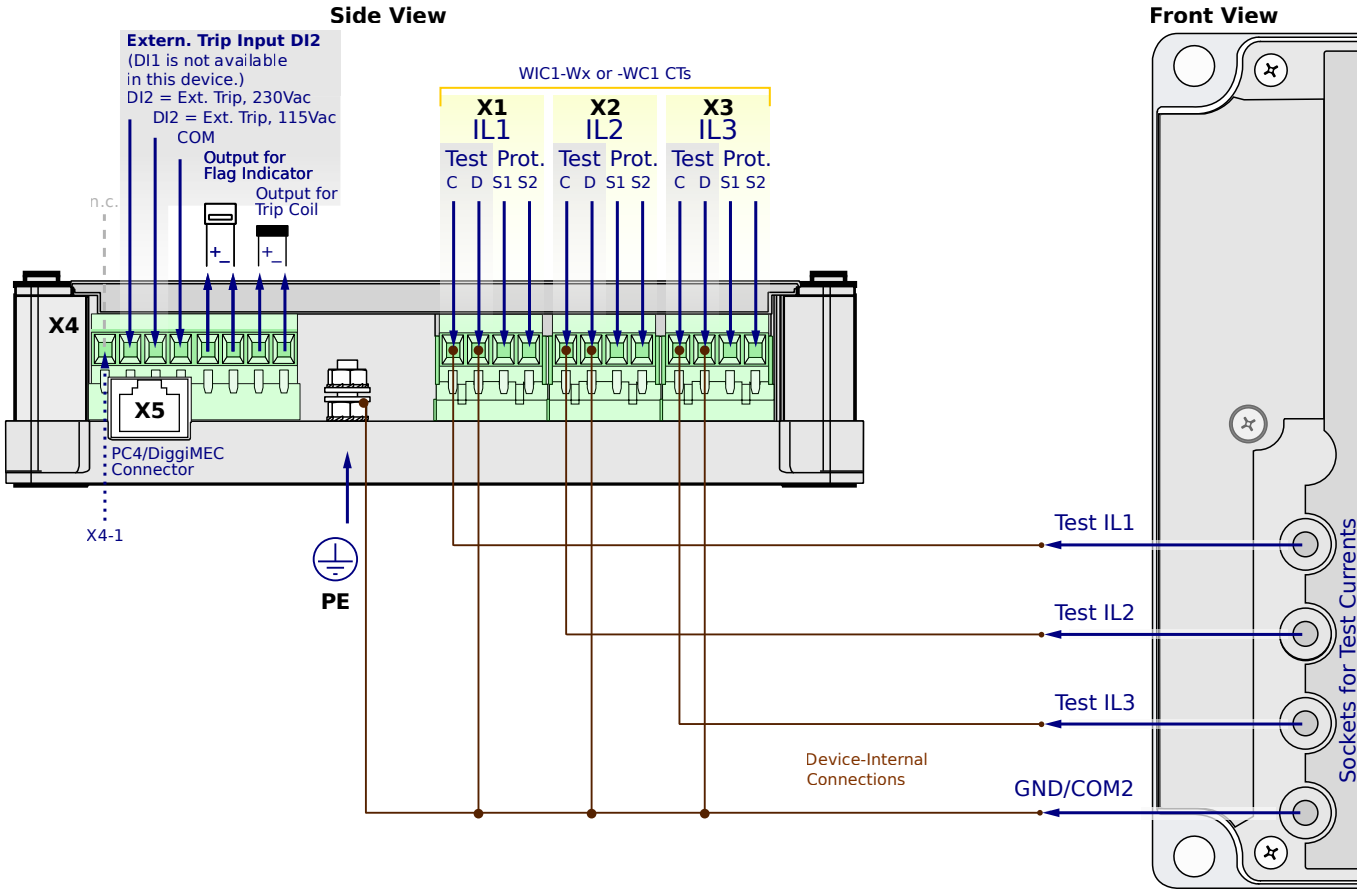


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0SAH

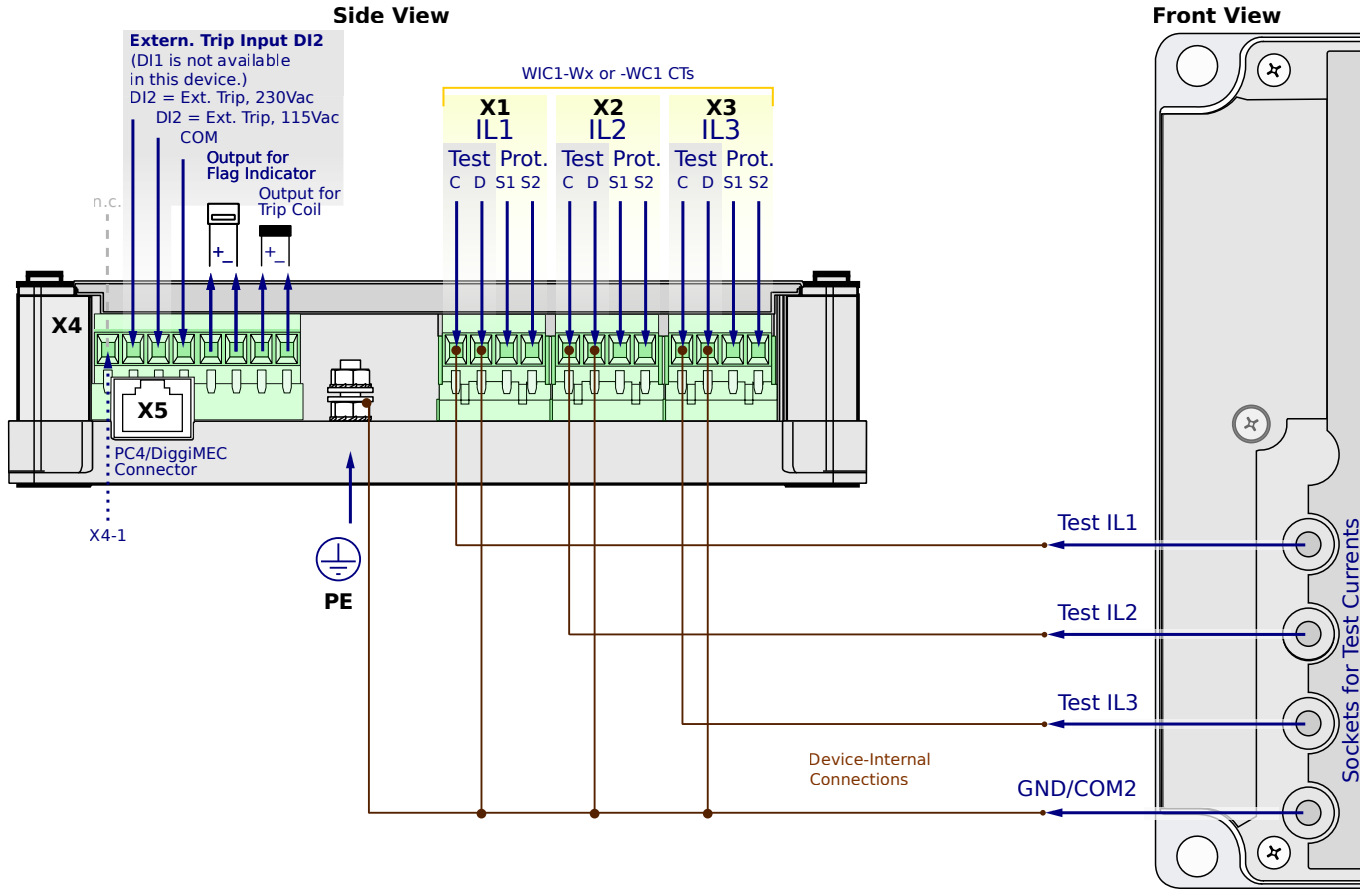


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0AA0

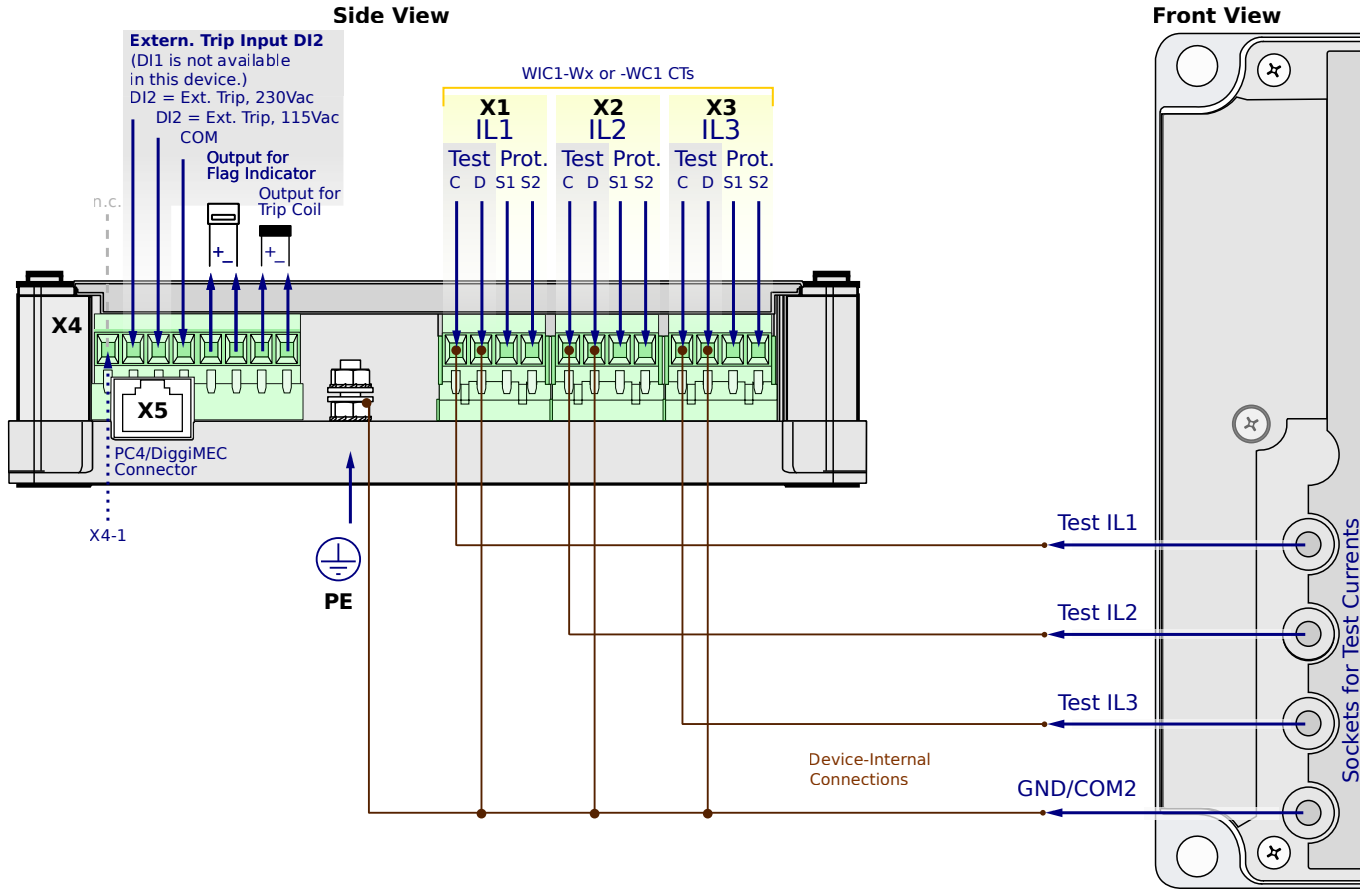


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0AAH

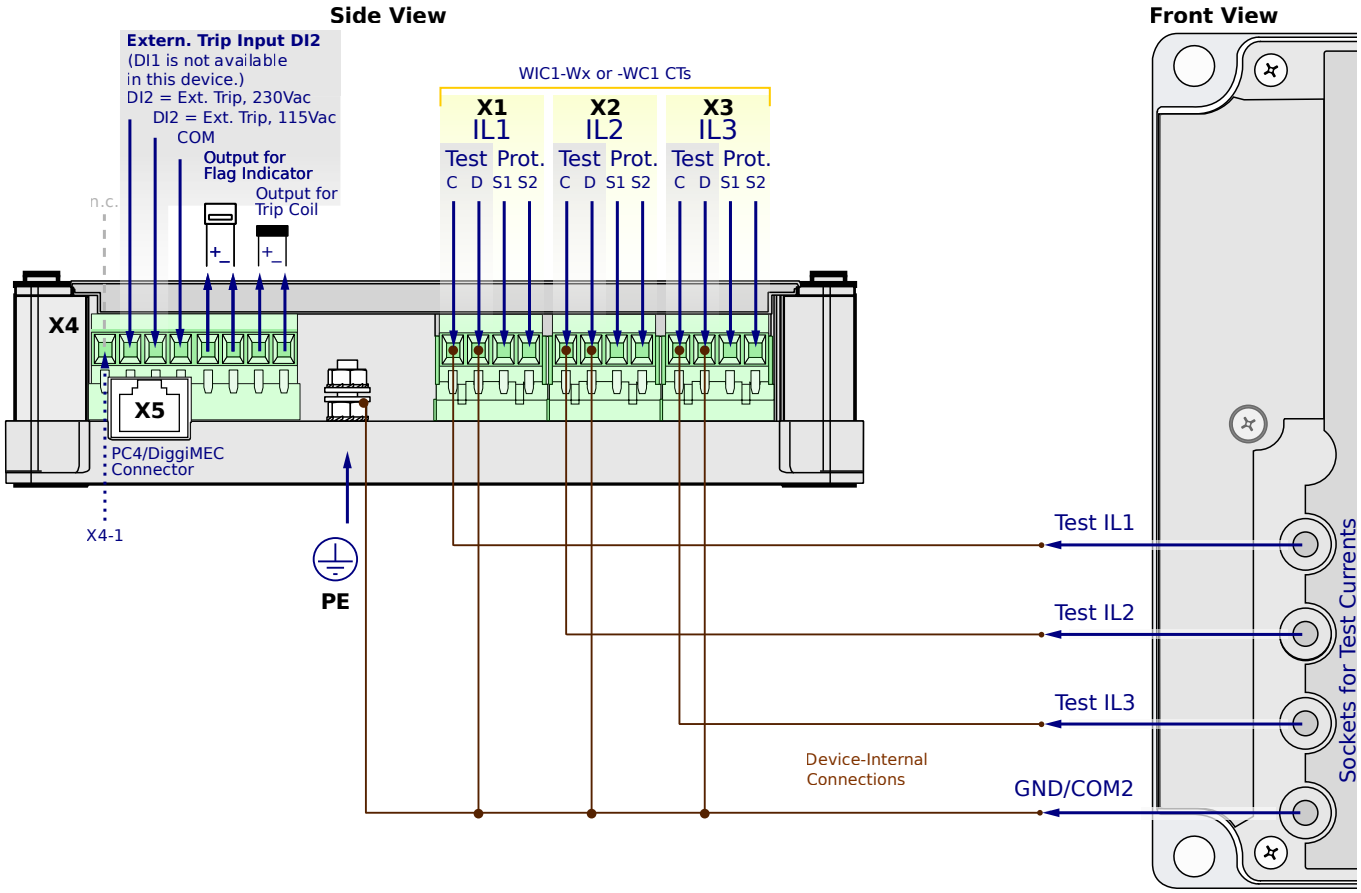


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0PA0

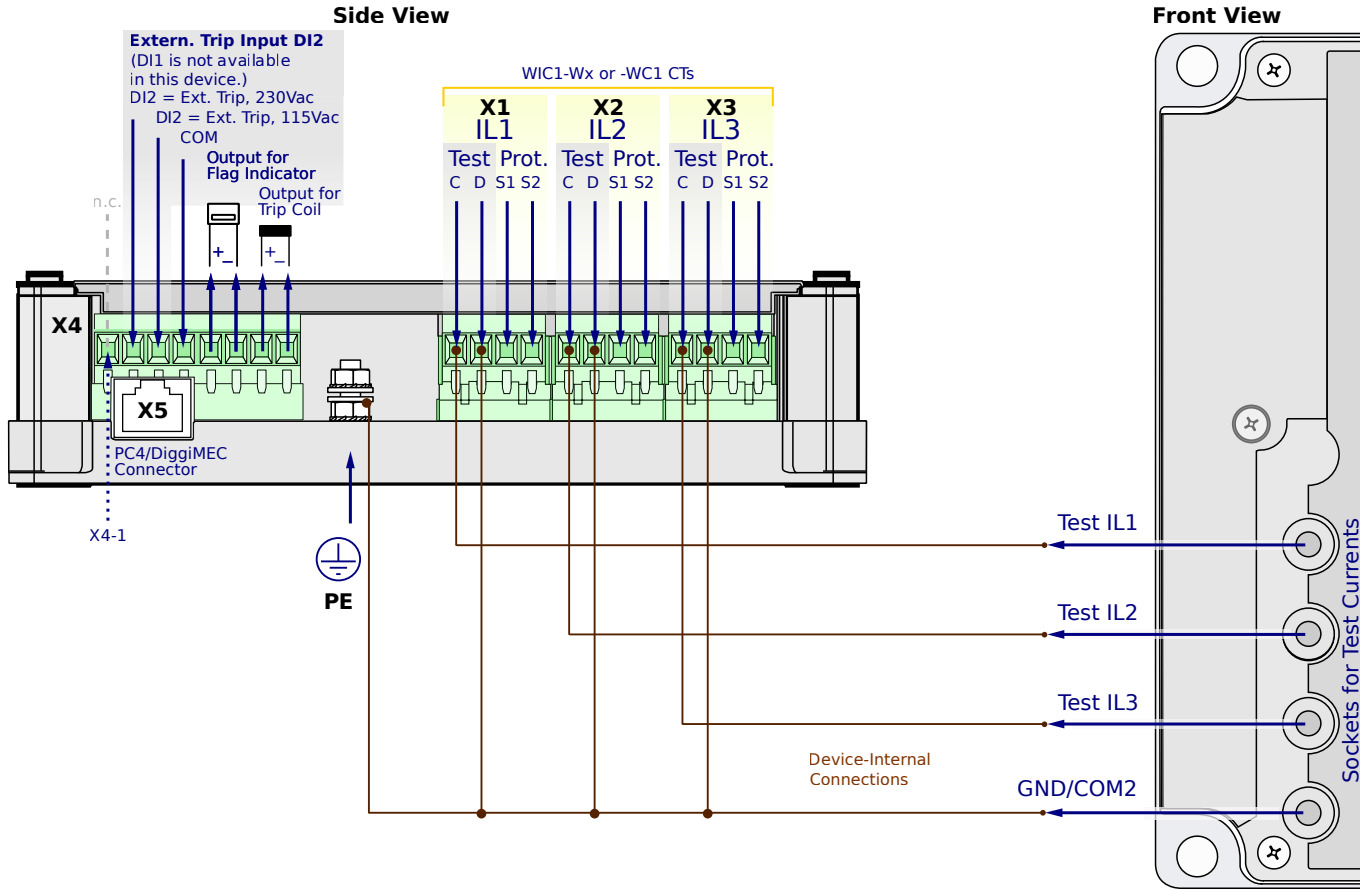


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF0PAH

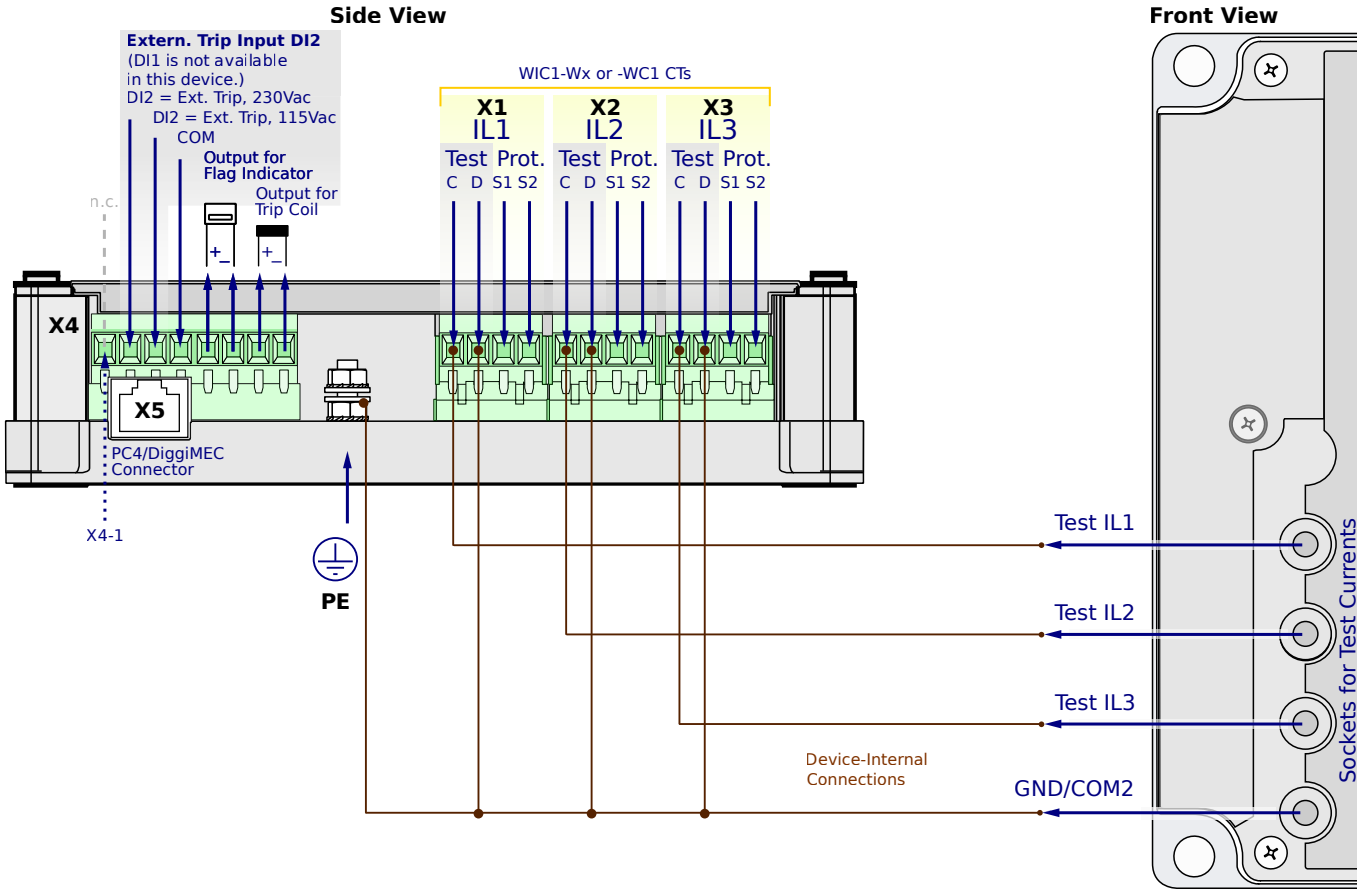


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1SA0

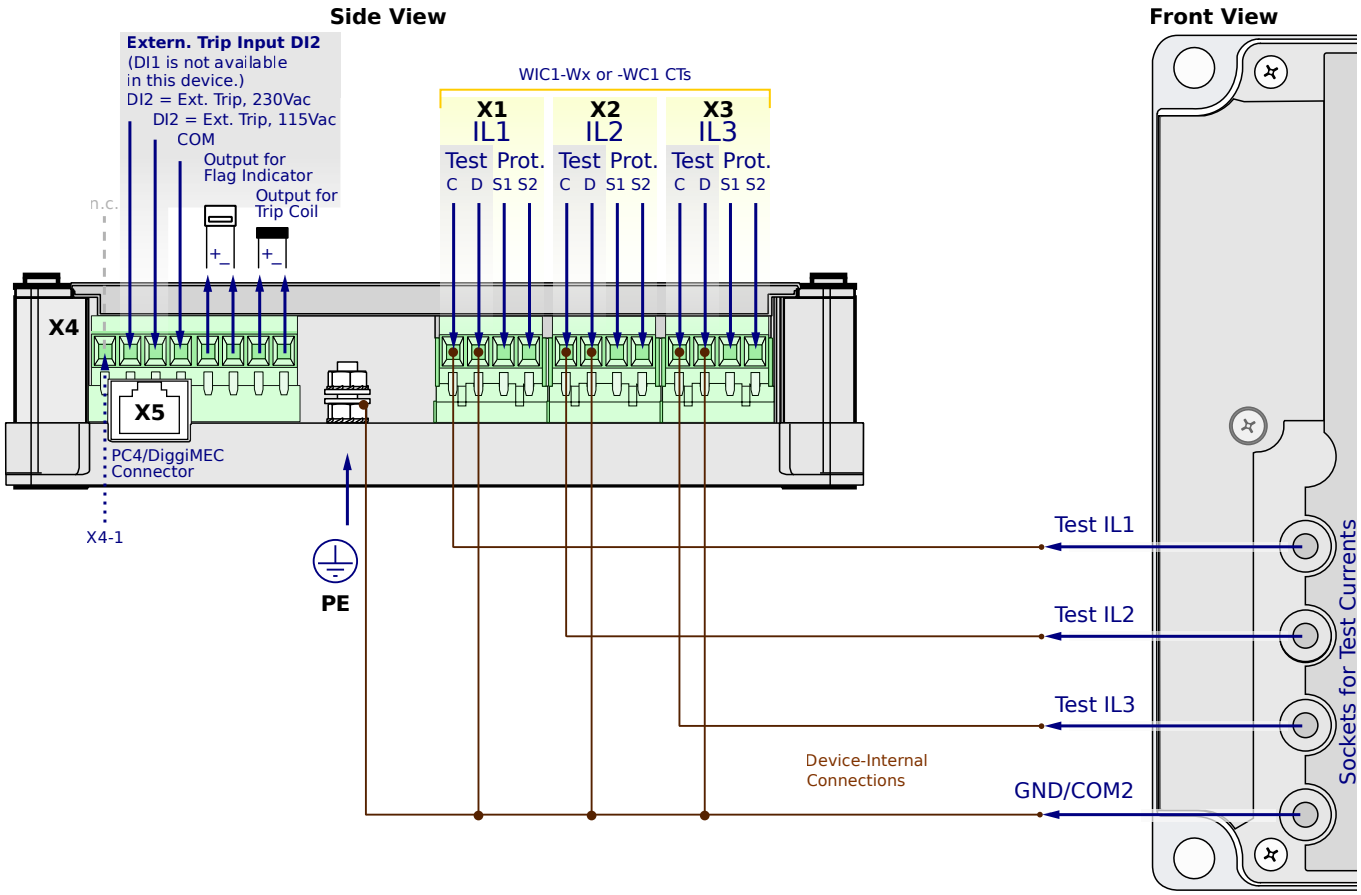


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1SAH

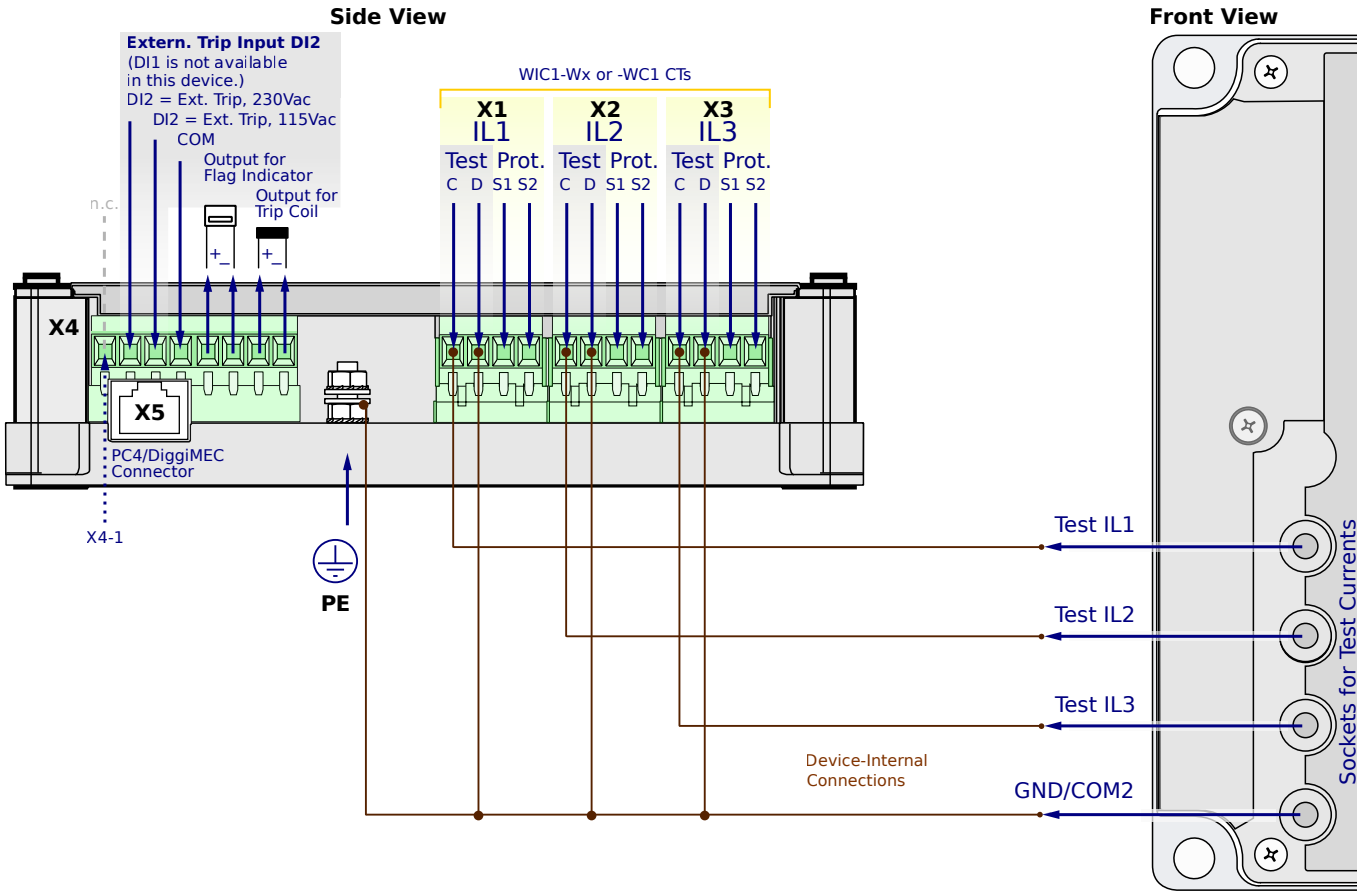


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1AA0

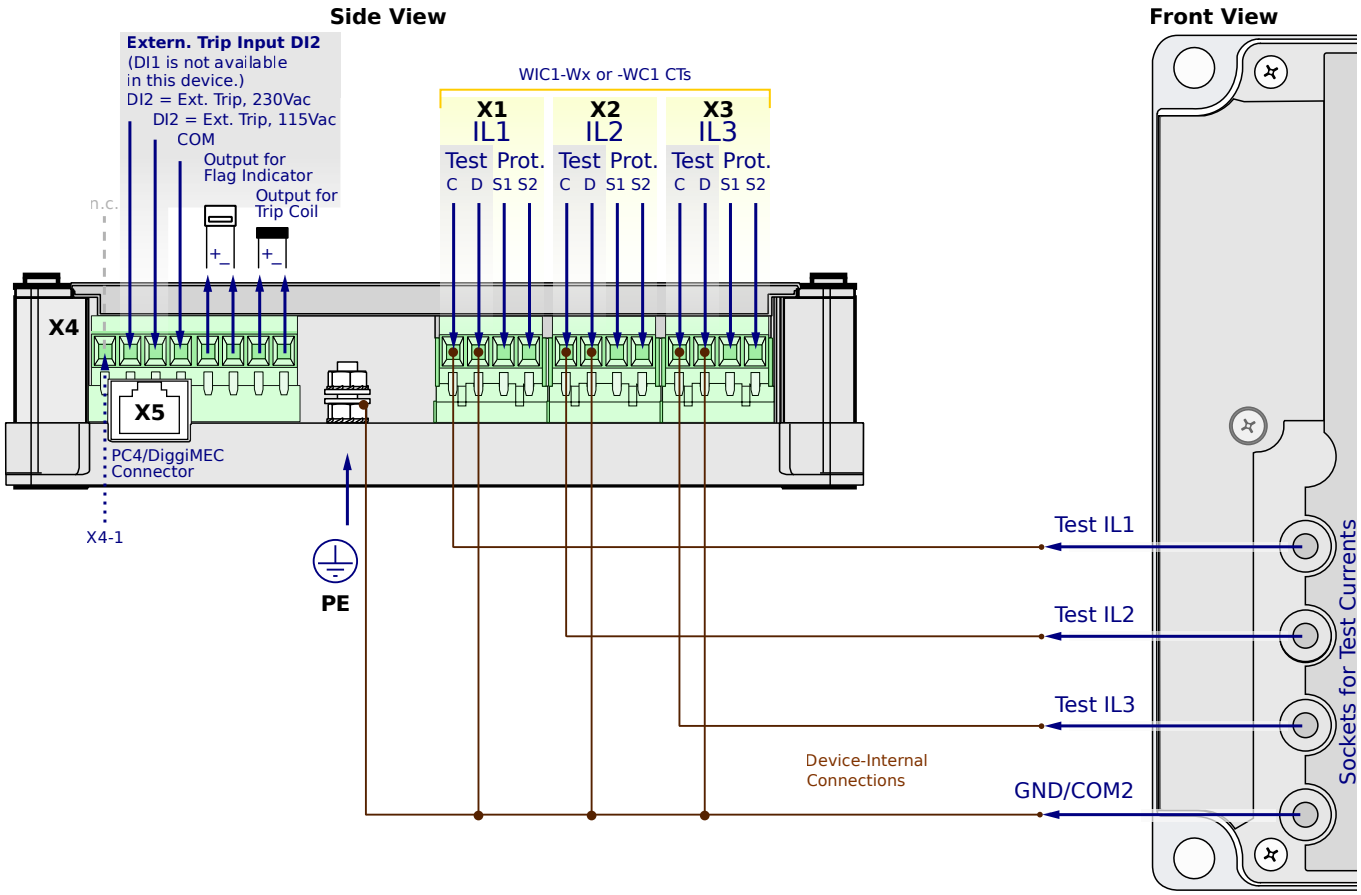


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1AAH

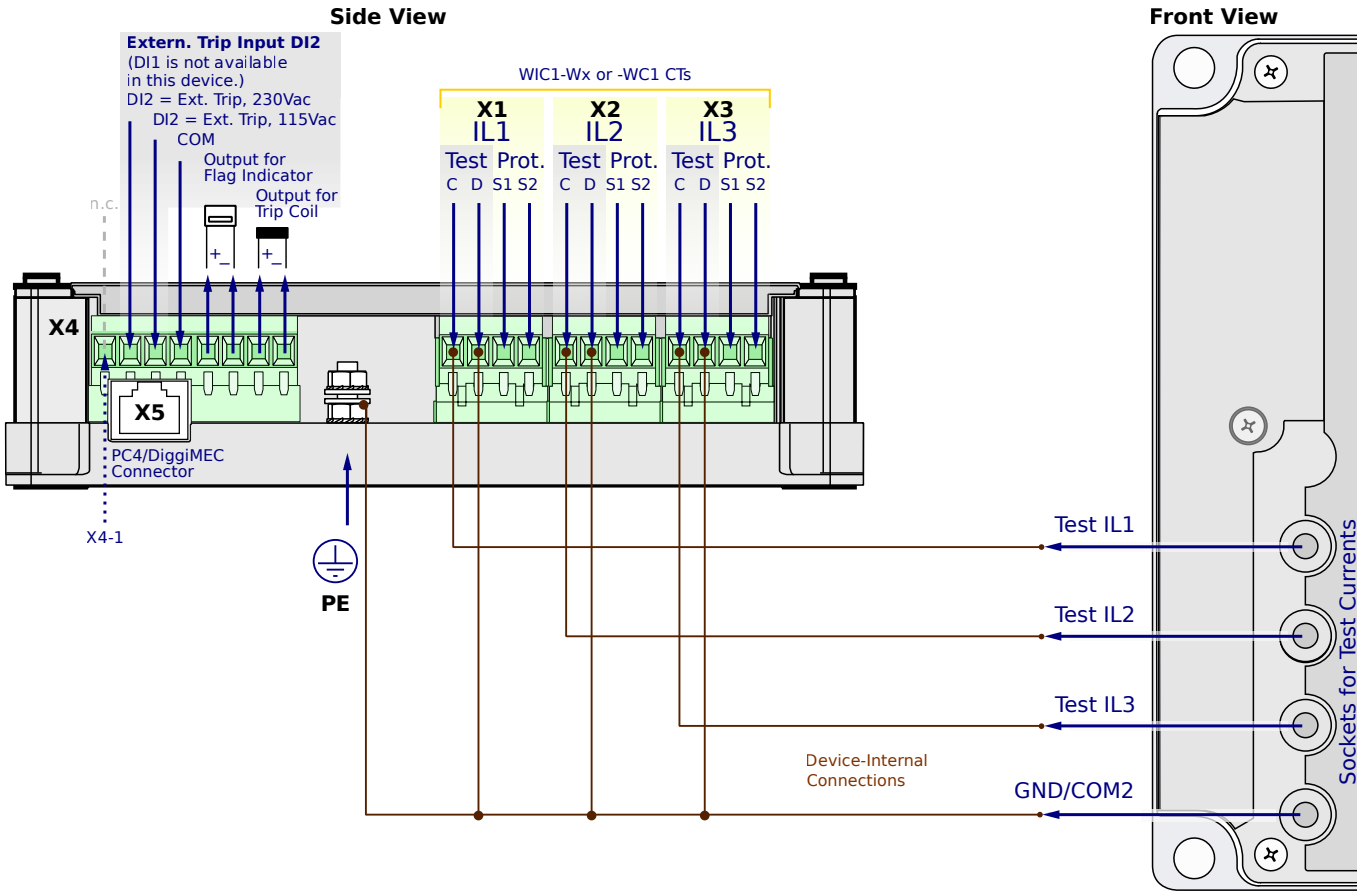


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1PA0

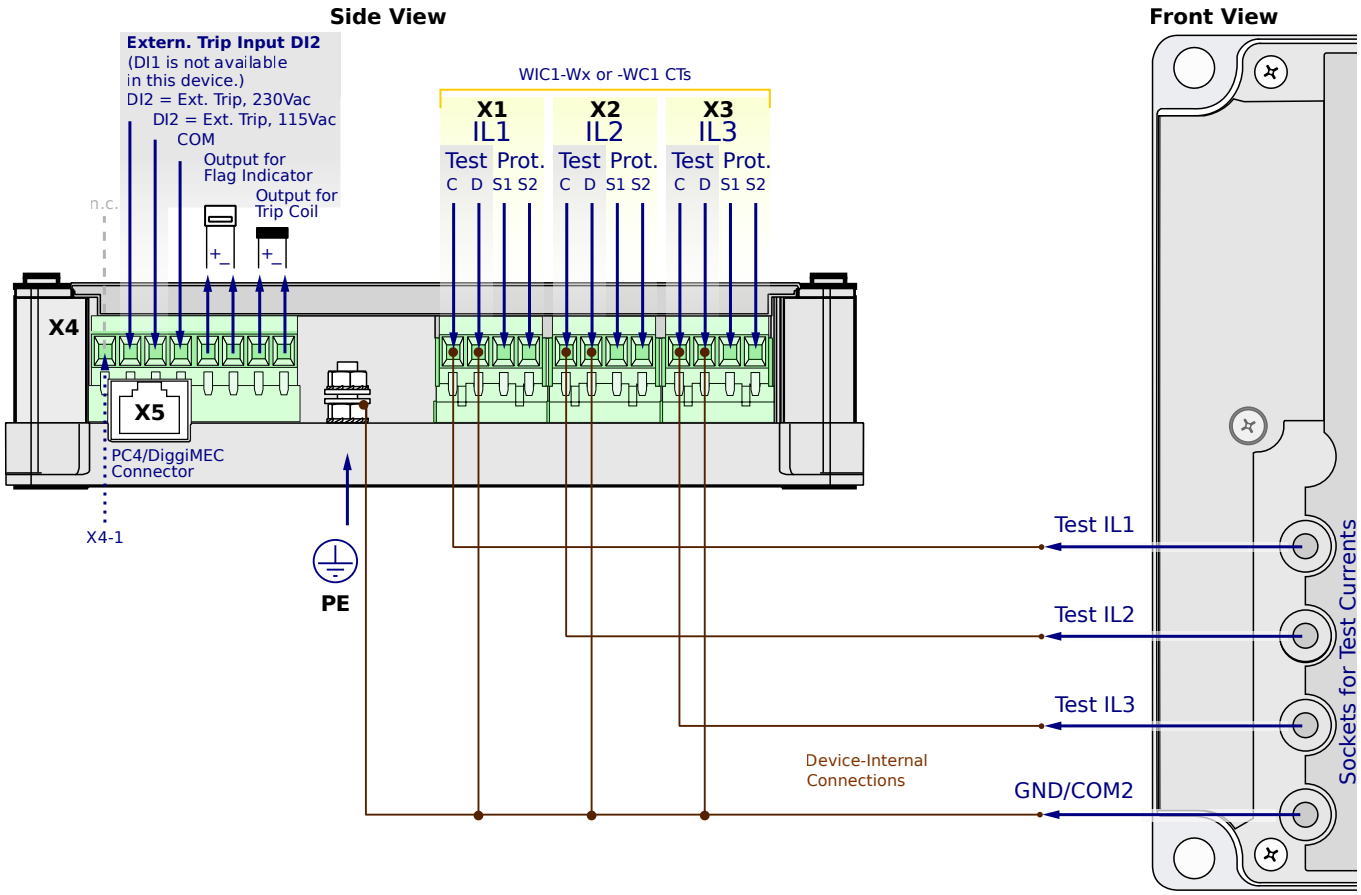


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF1PAH

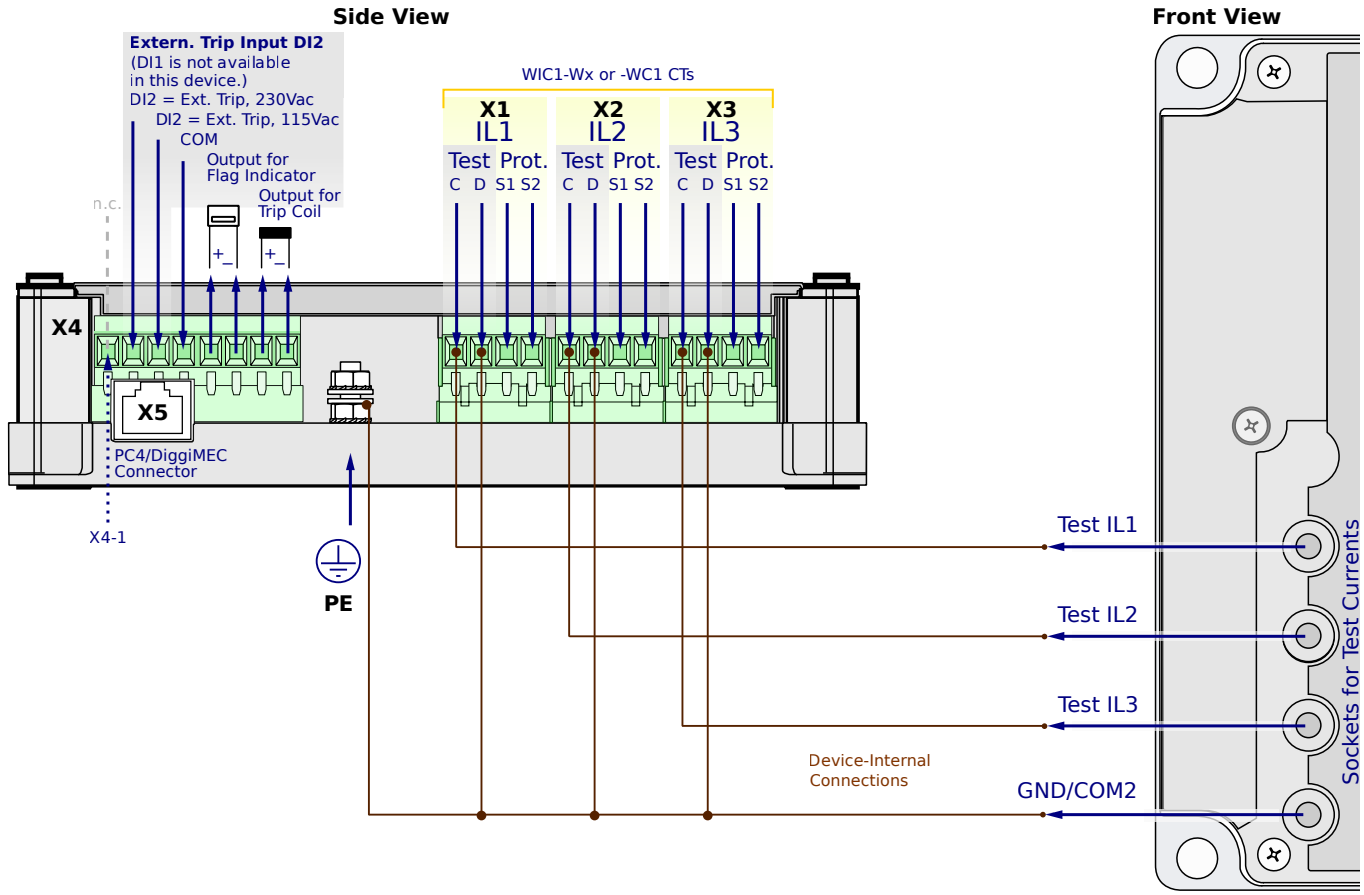


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2SA0

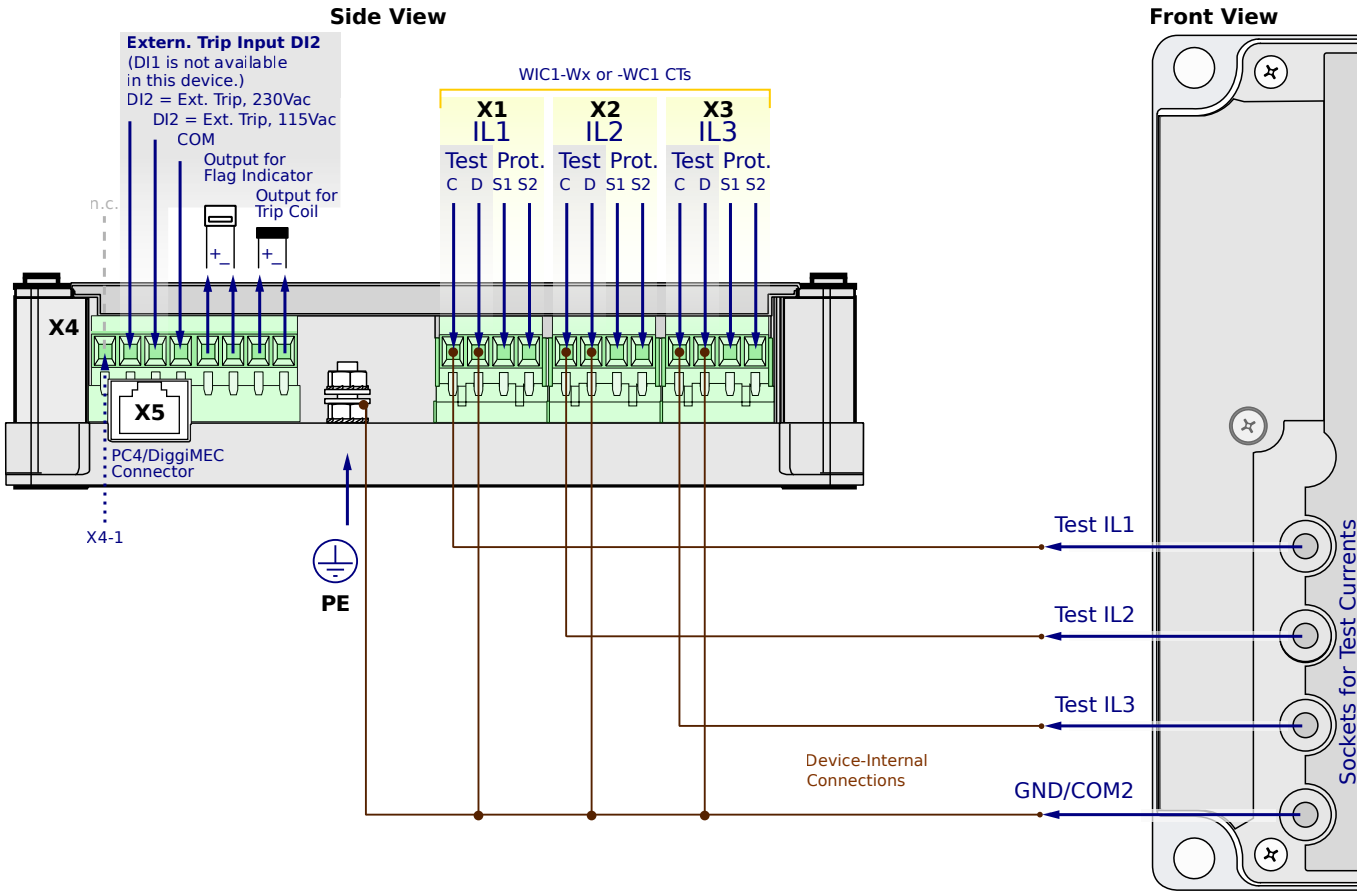


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2SAH

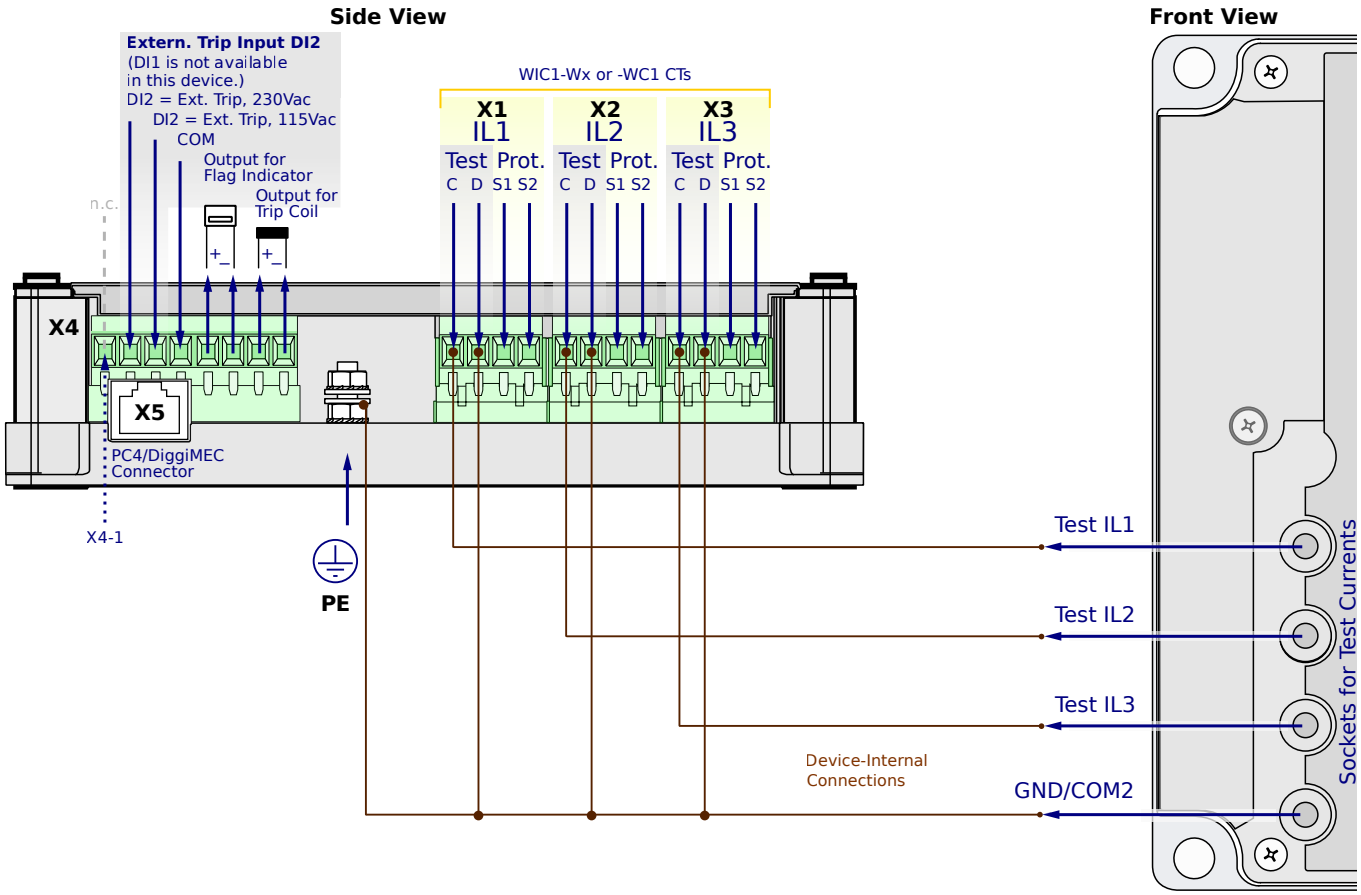


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2AA0

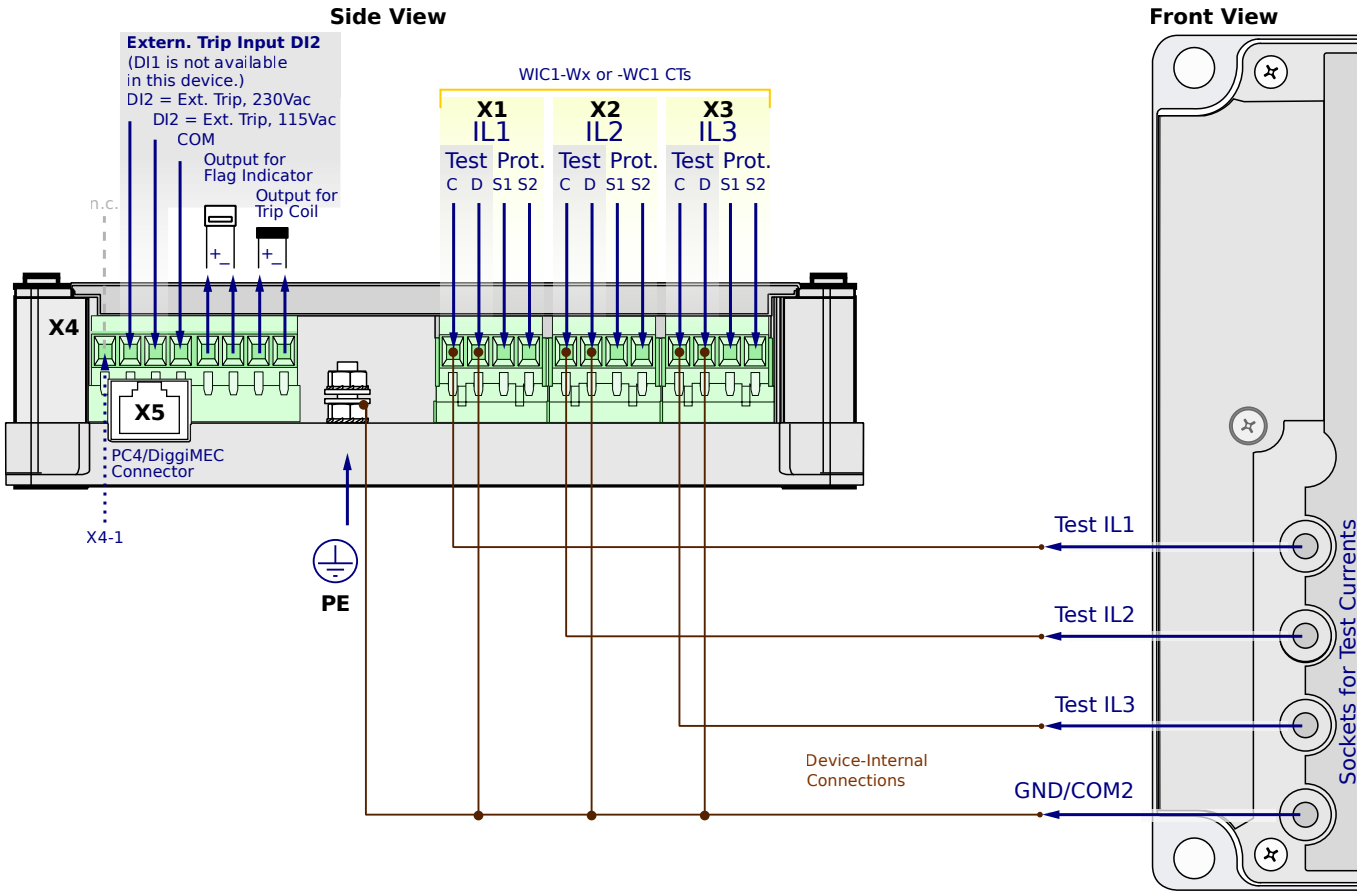


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2AAH

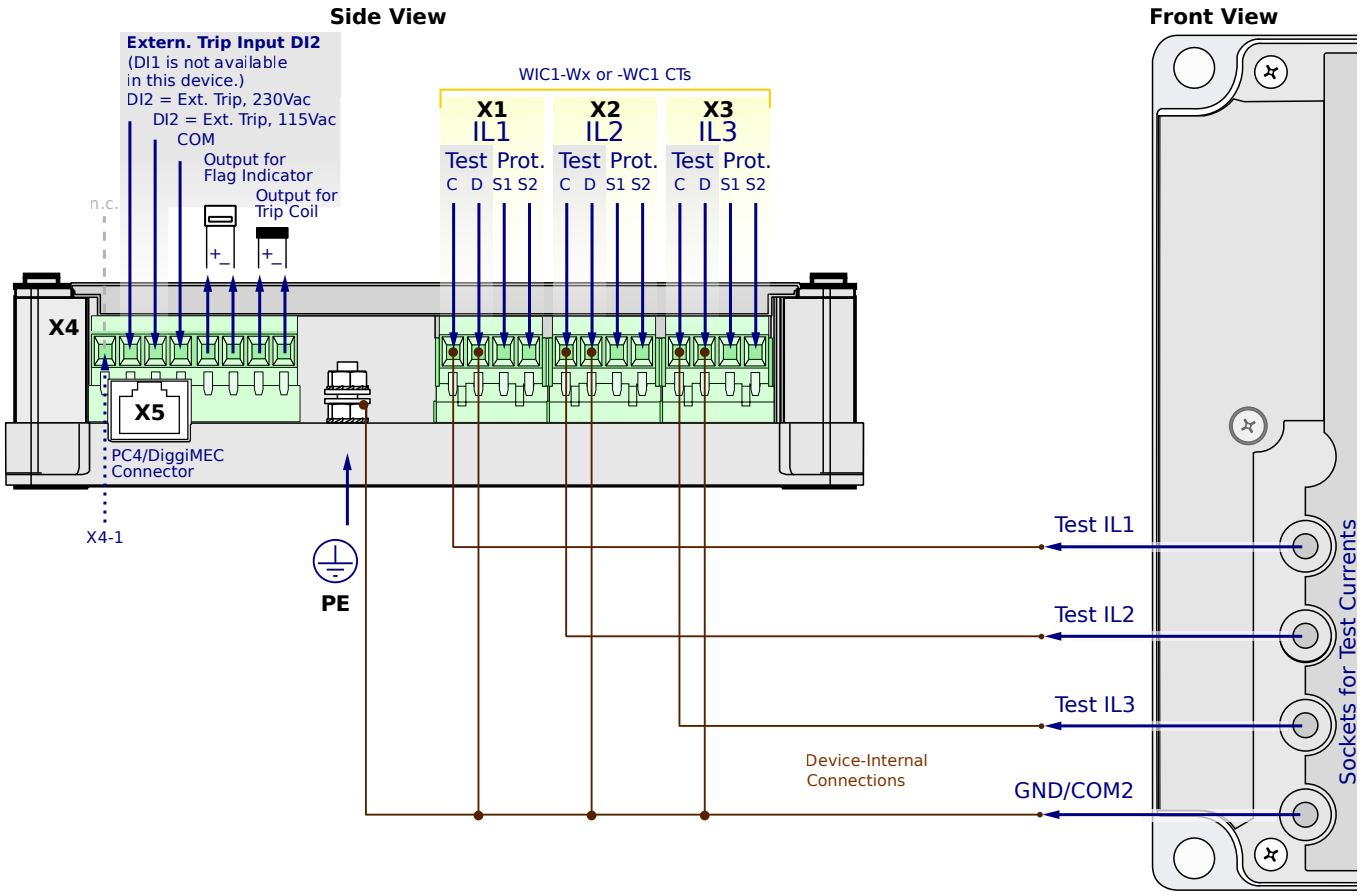


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2PA0

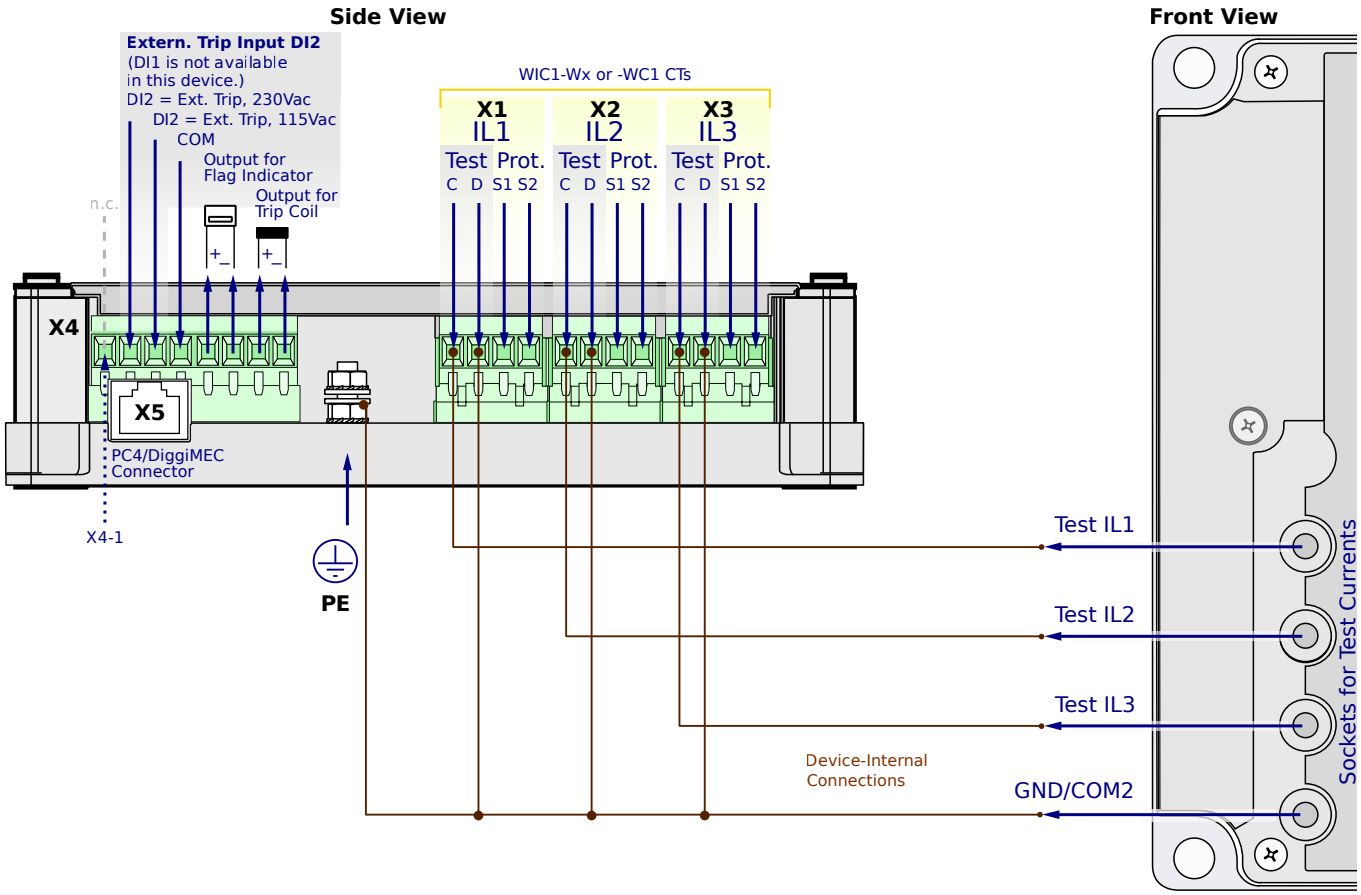


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NF2PAH

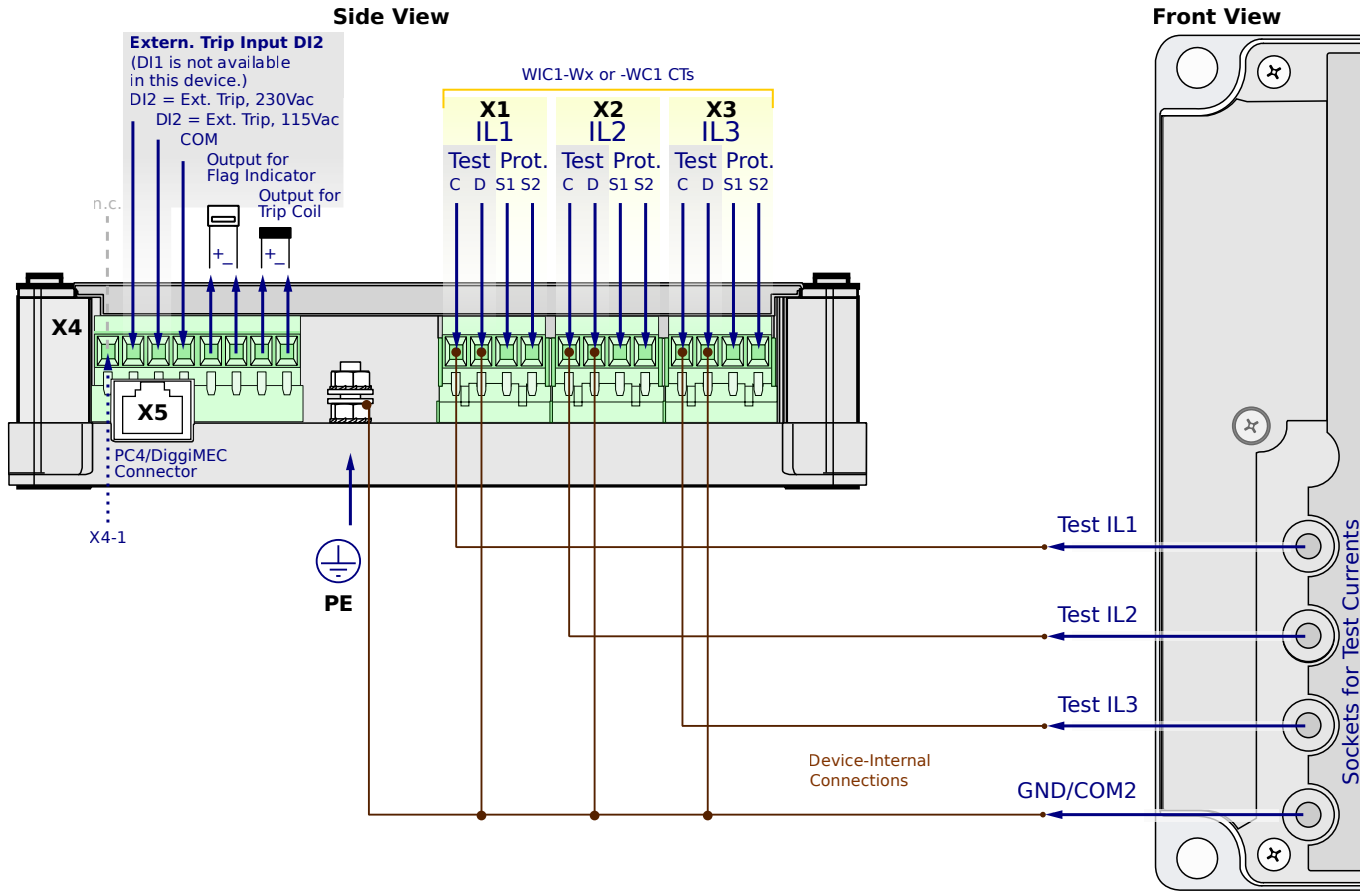


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0SA0

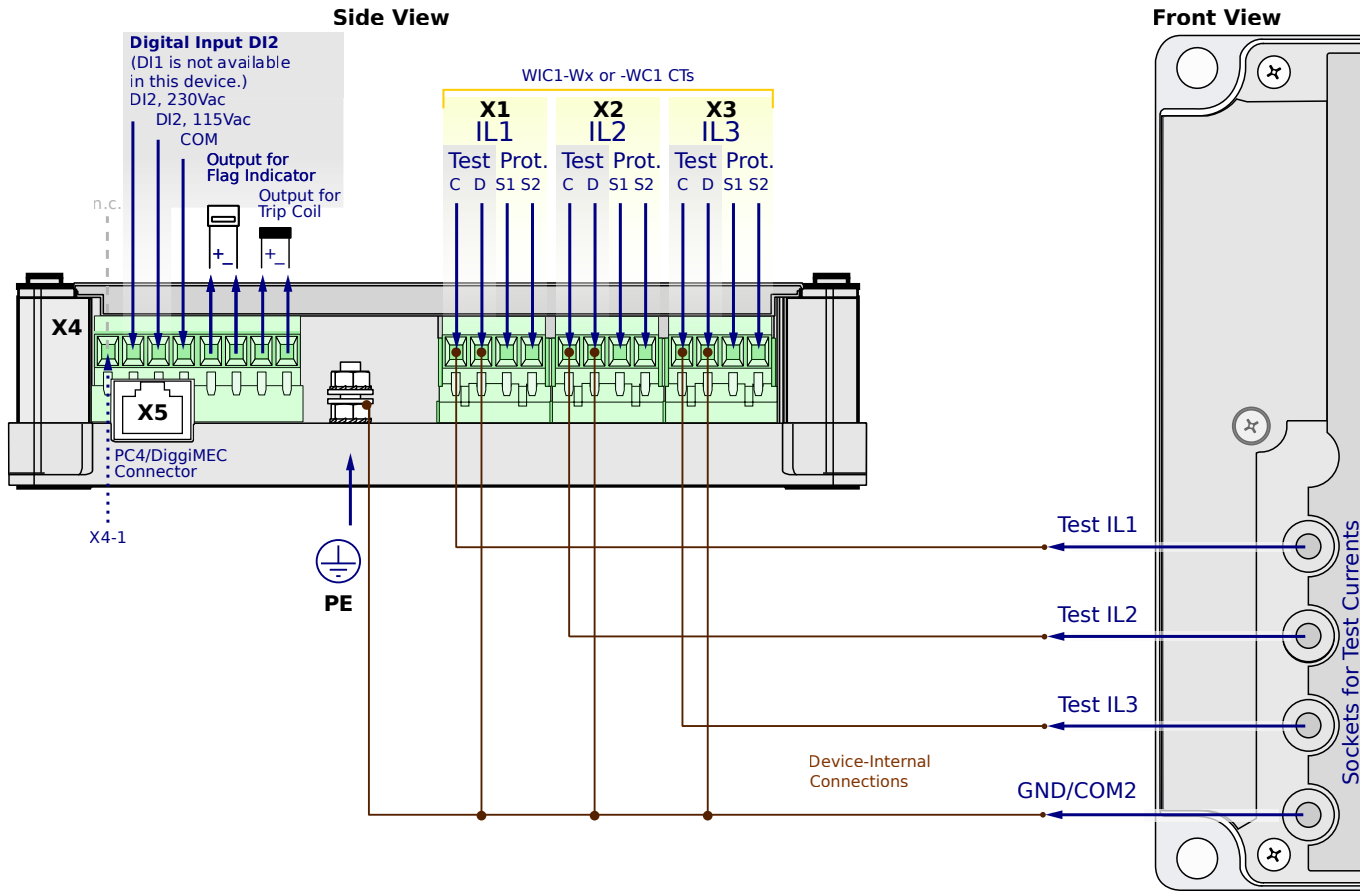


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0SAH

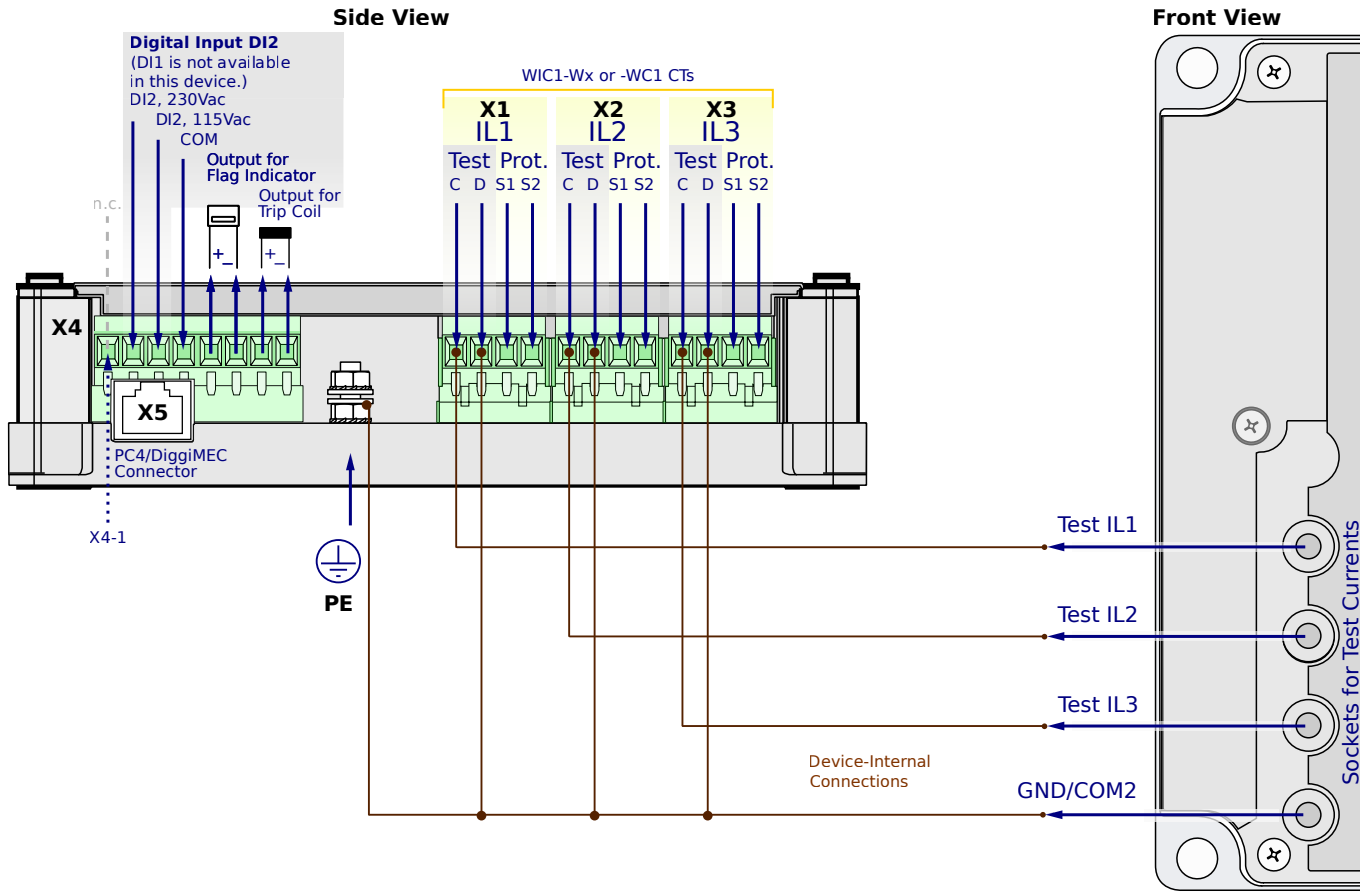


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0AA0

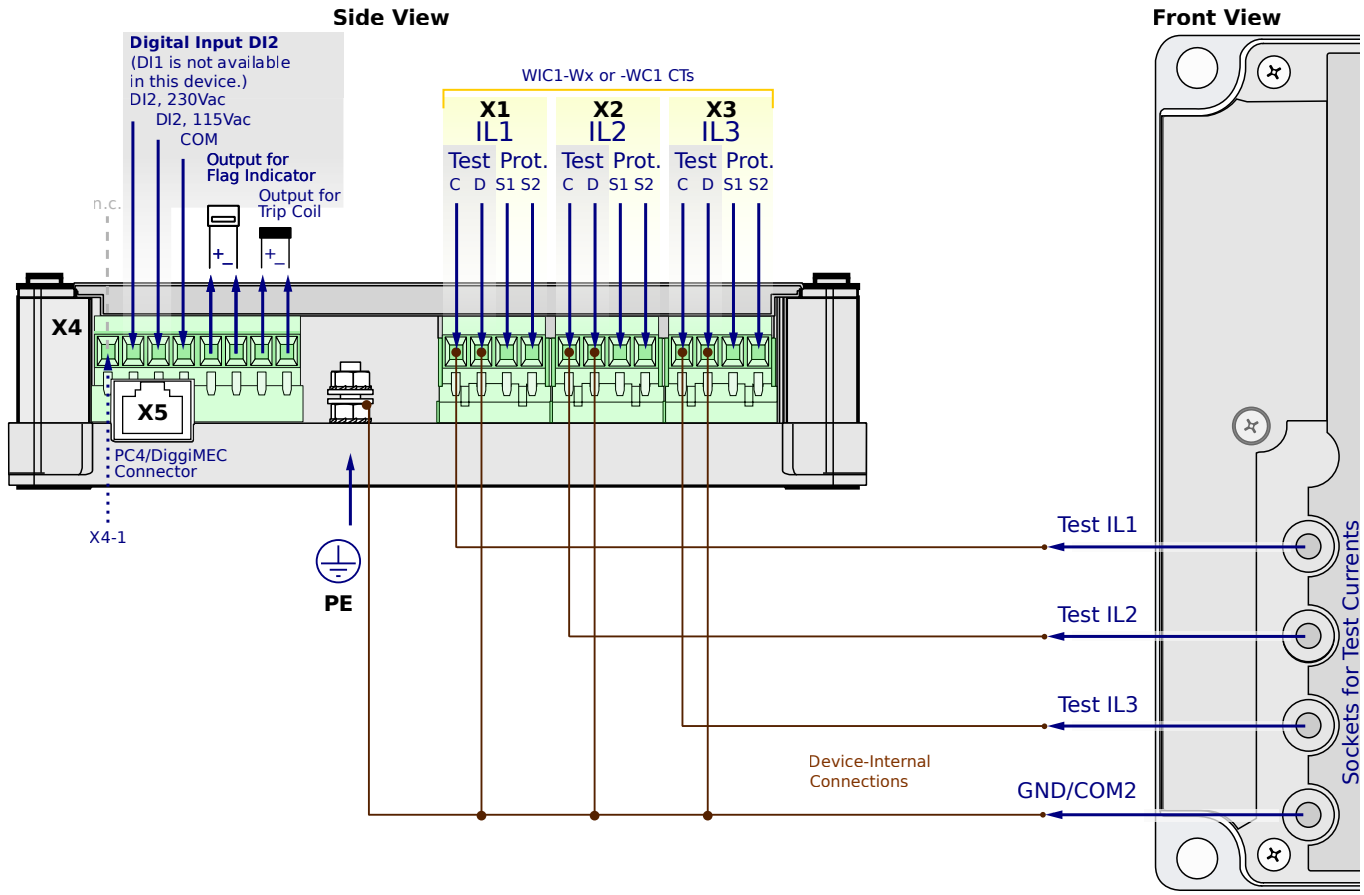


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0AAH

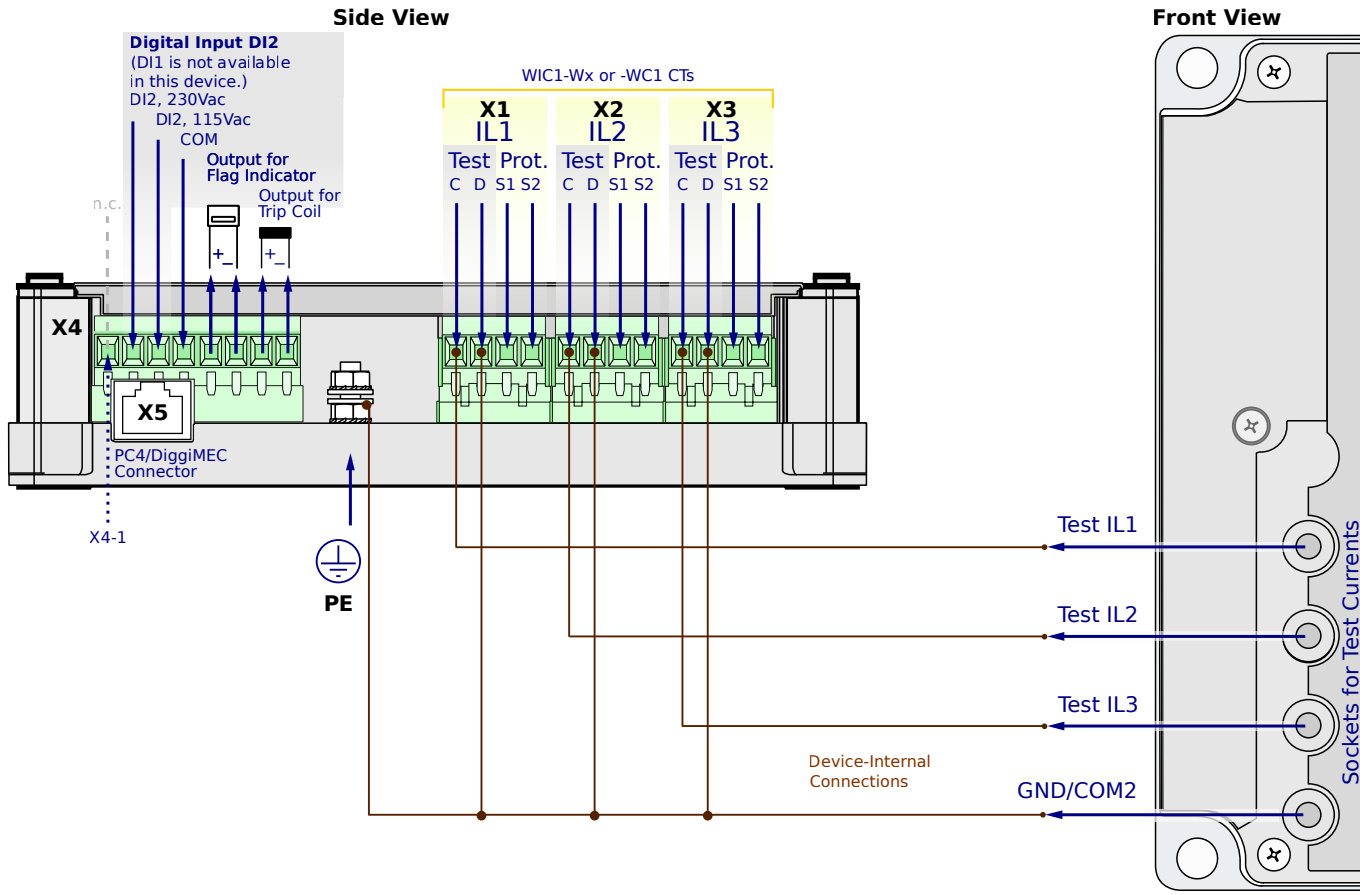


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0PA0

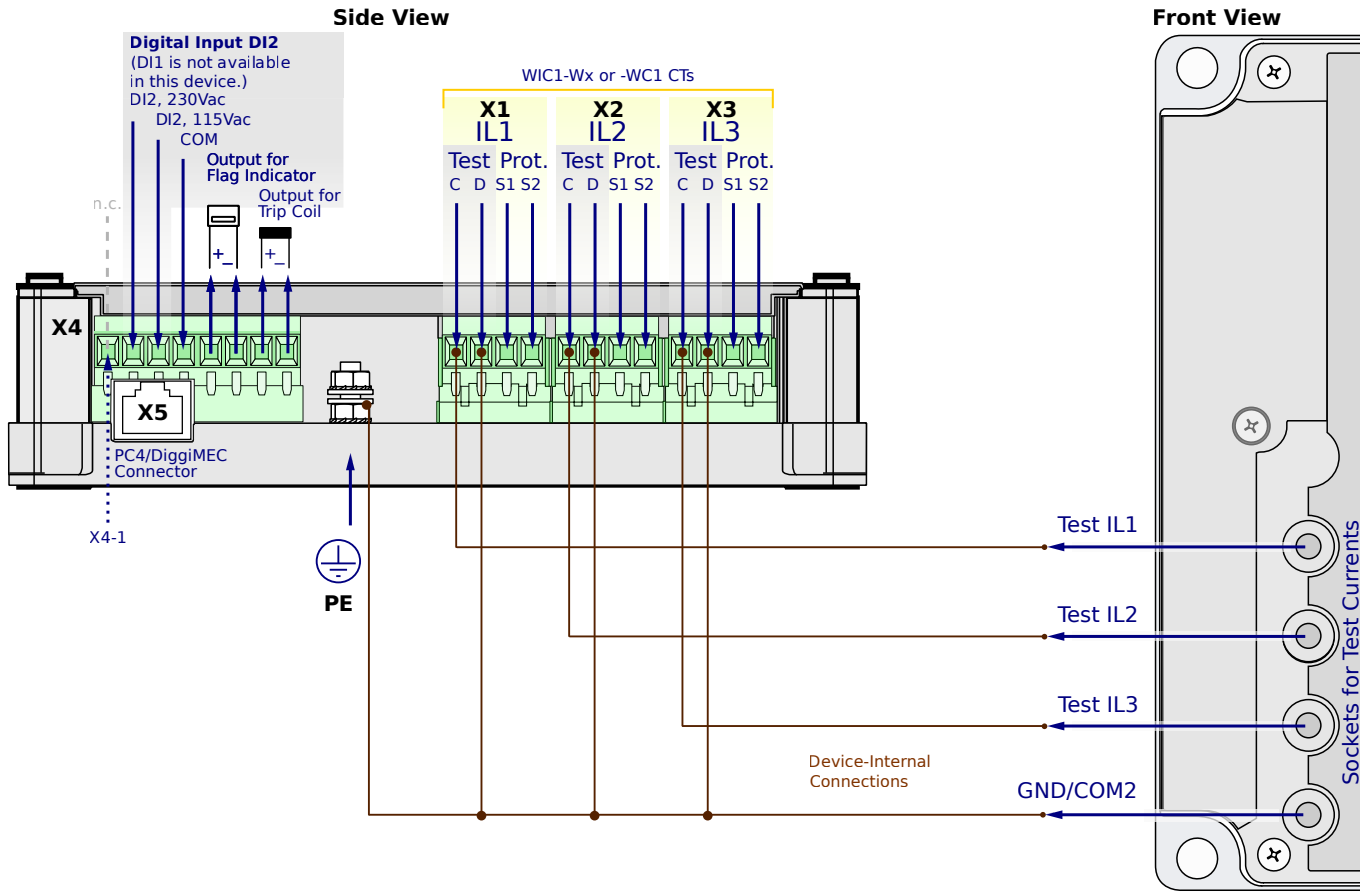


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC0PAH

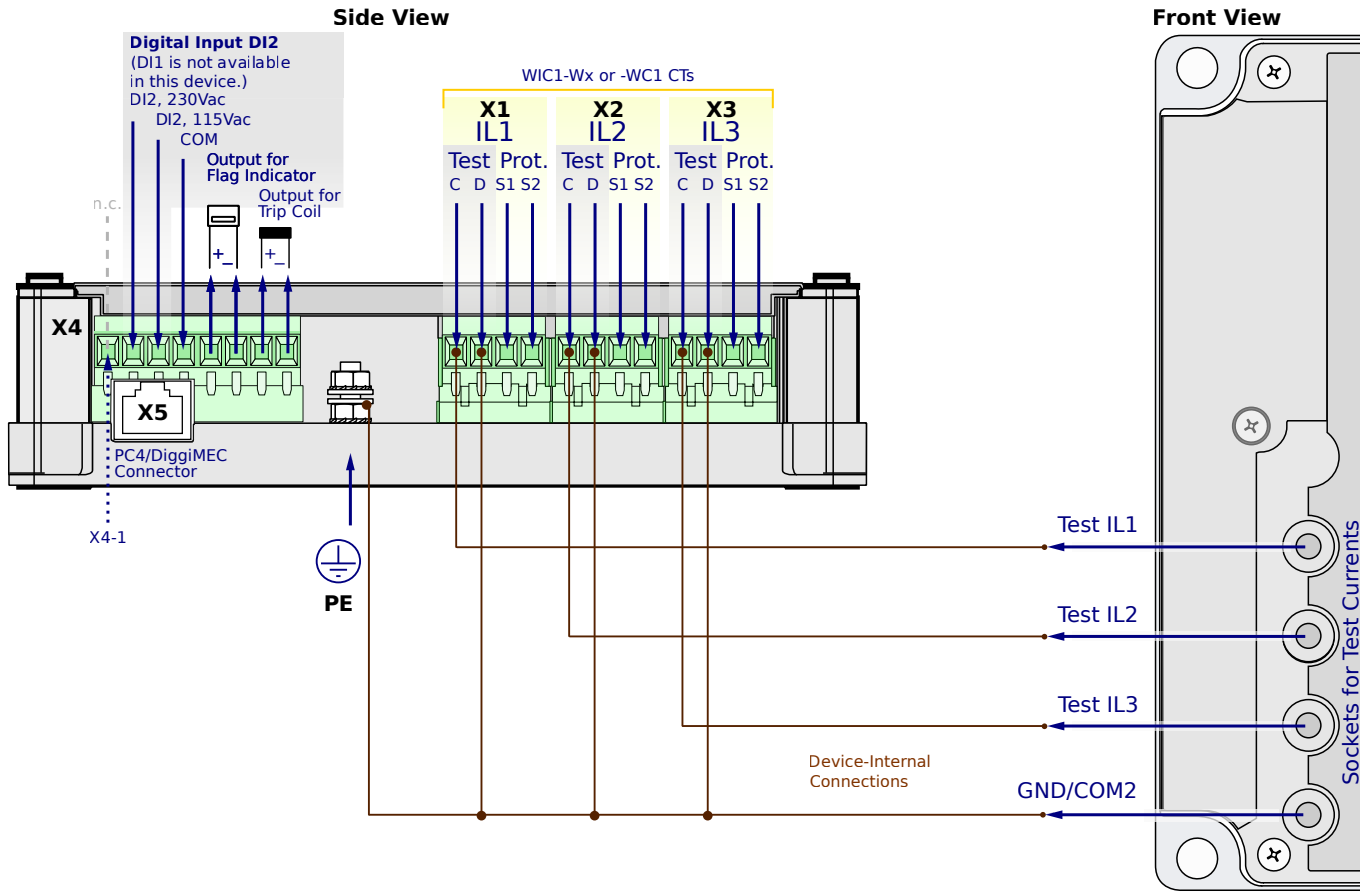


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1SA0

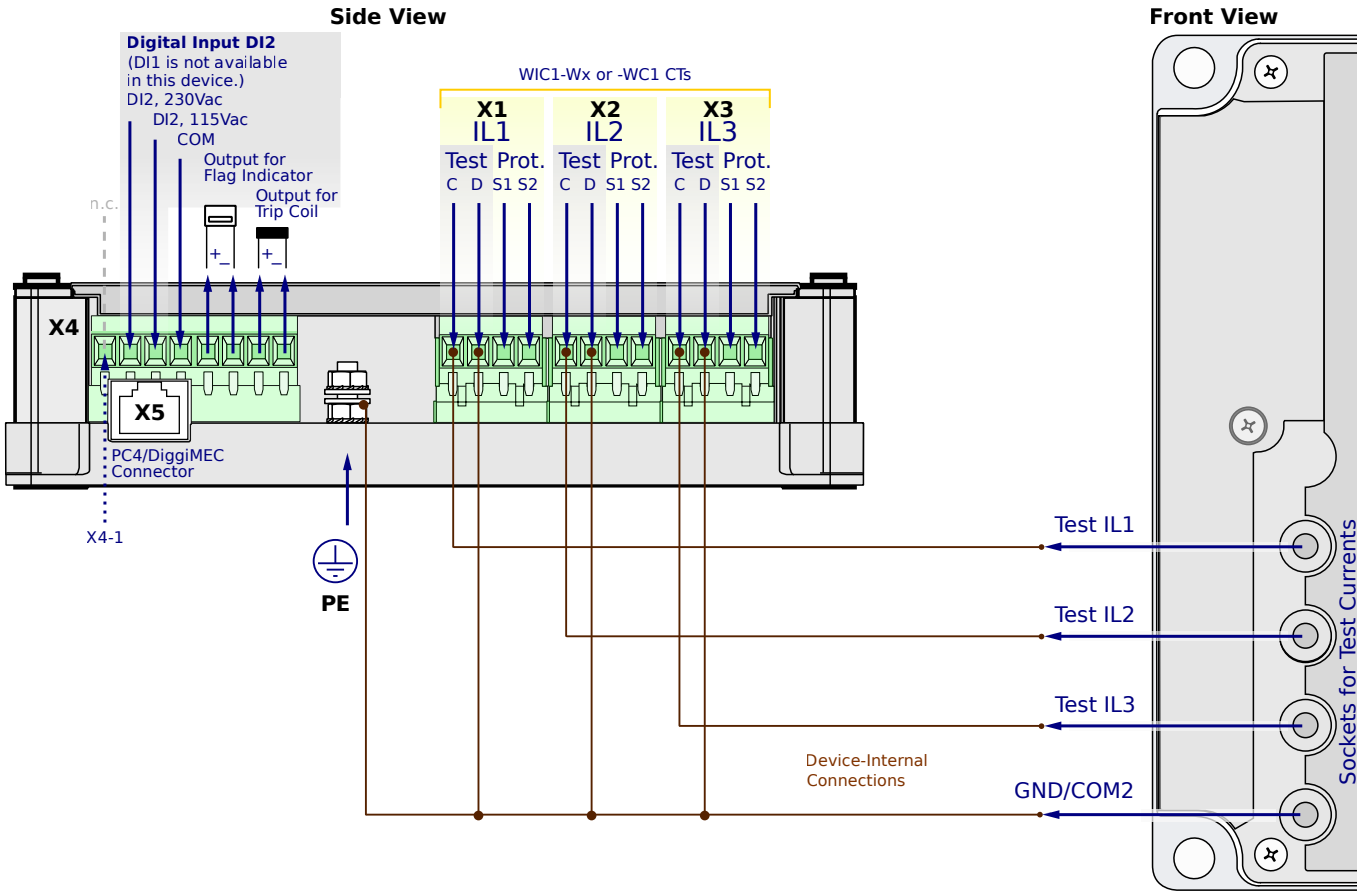


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1SAH

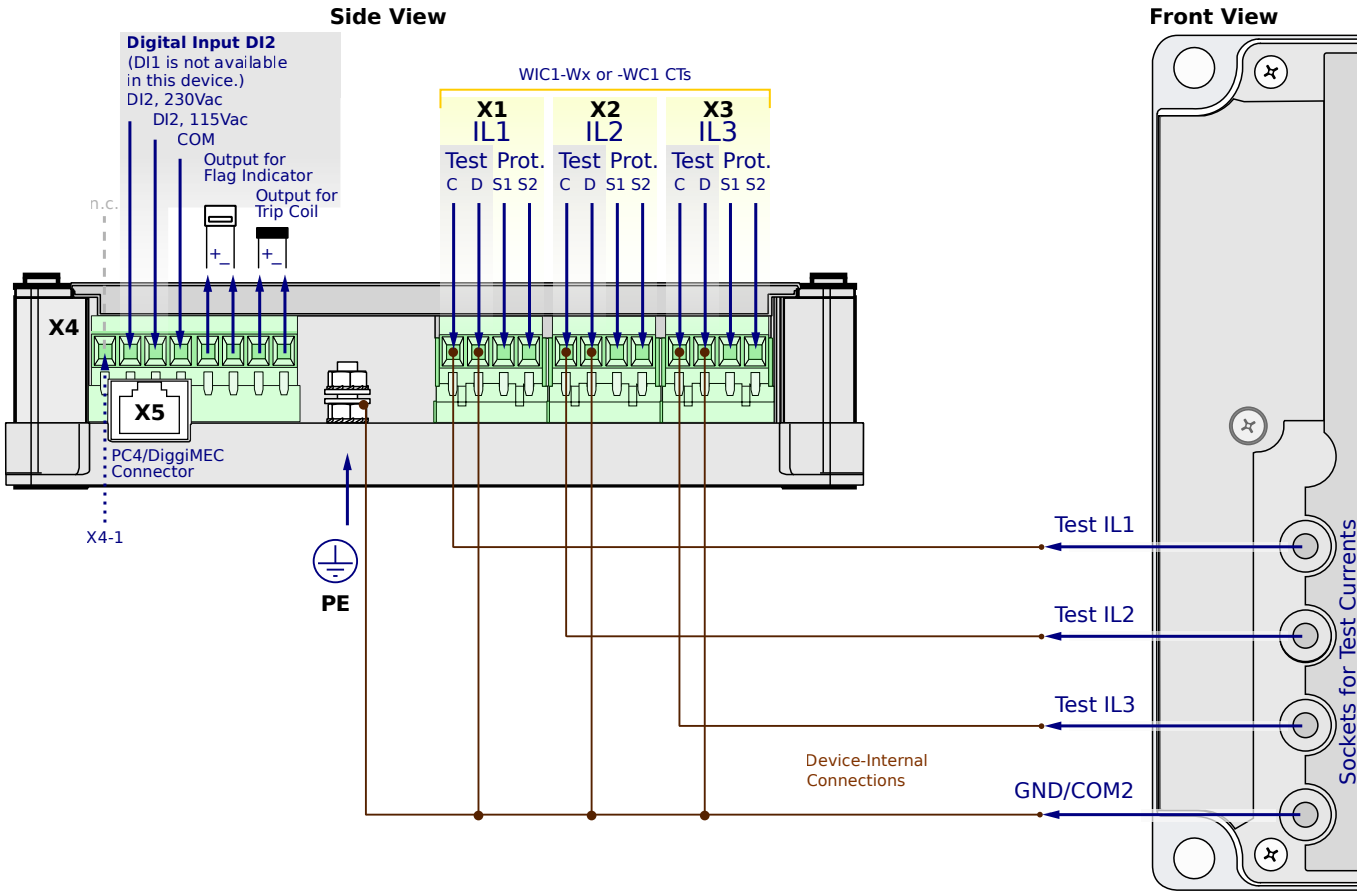


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1AA0

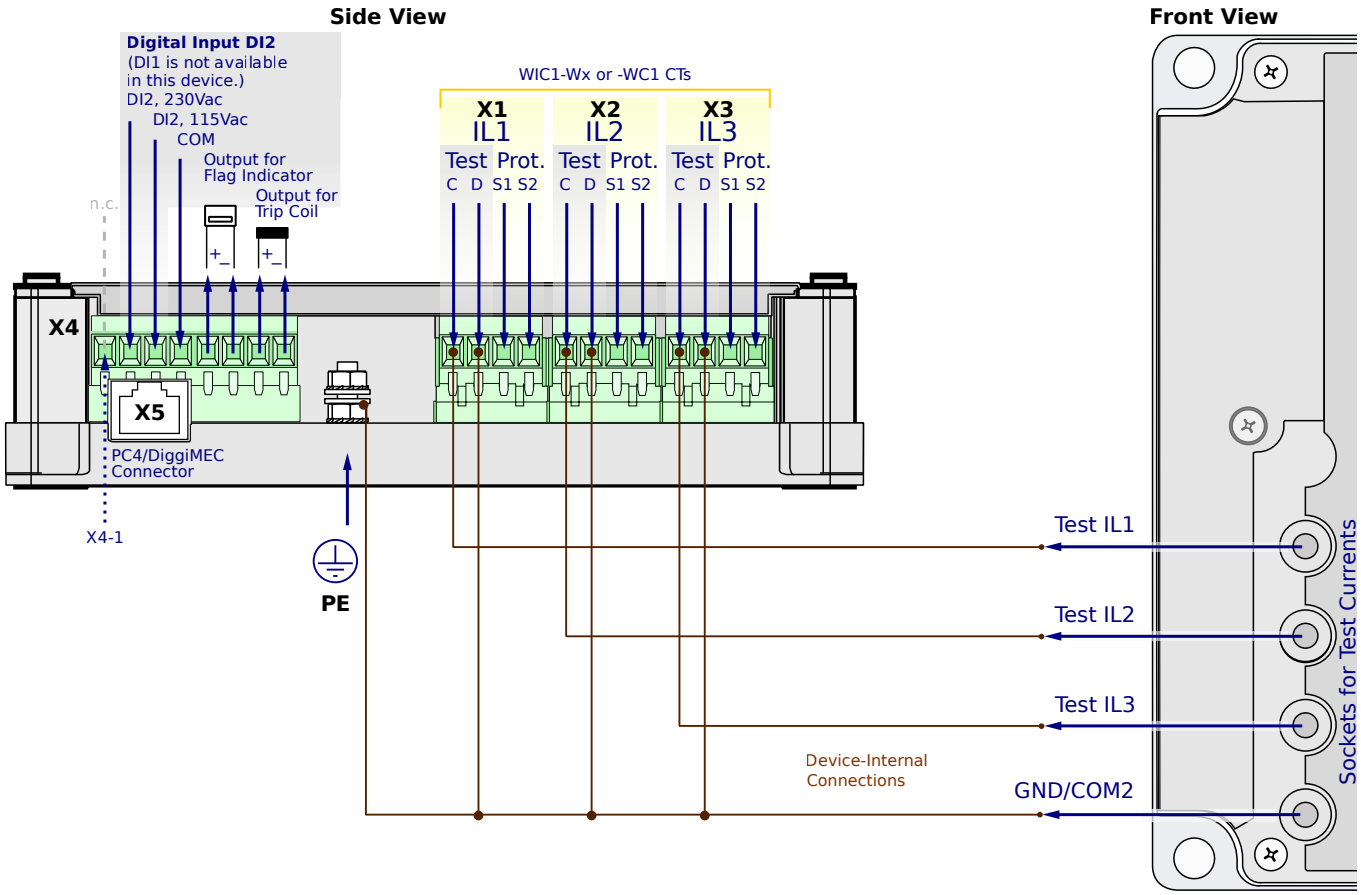


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1AAH

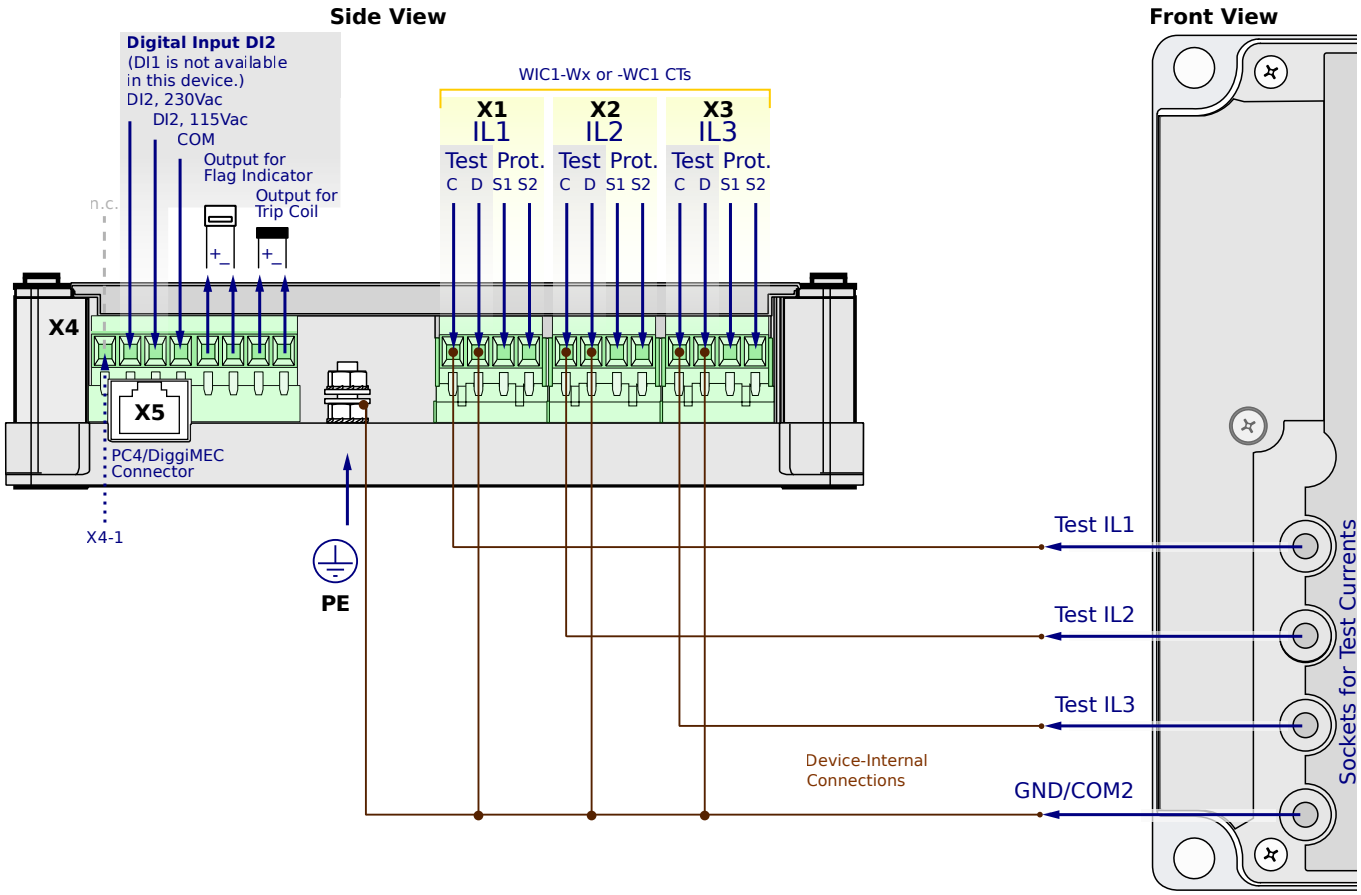


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1PA0

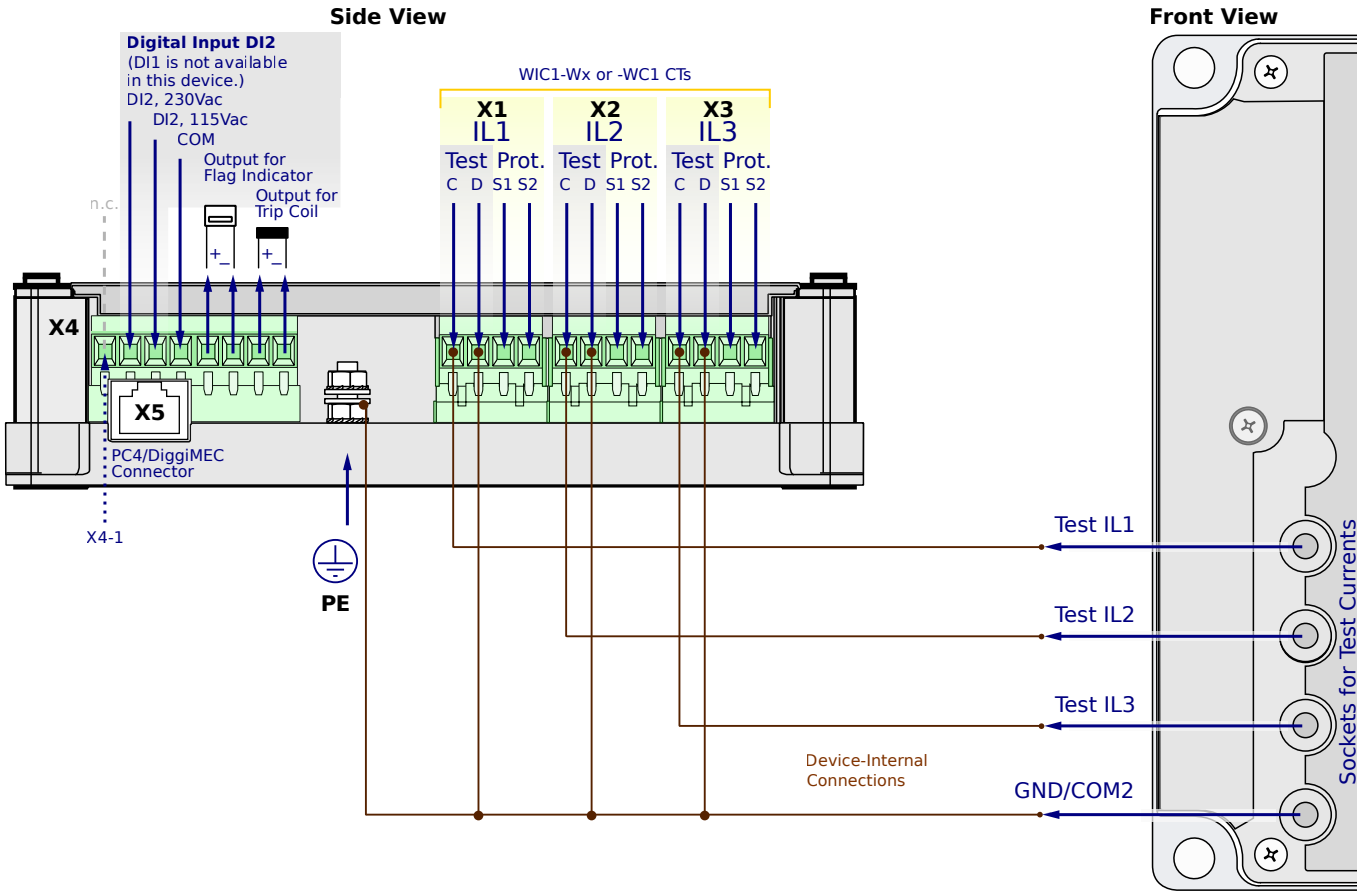


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC1PAH

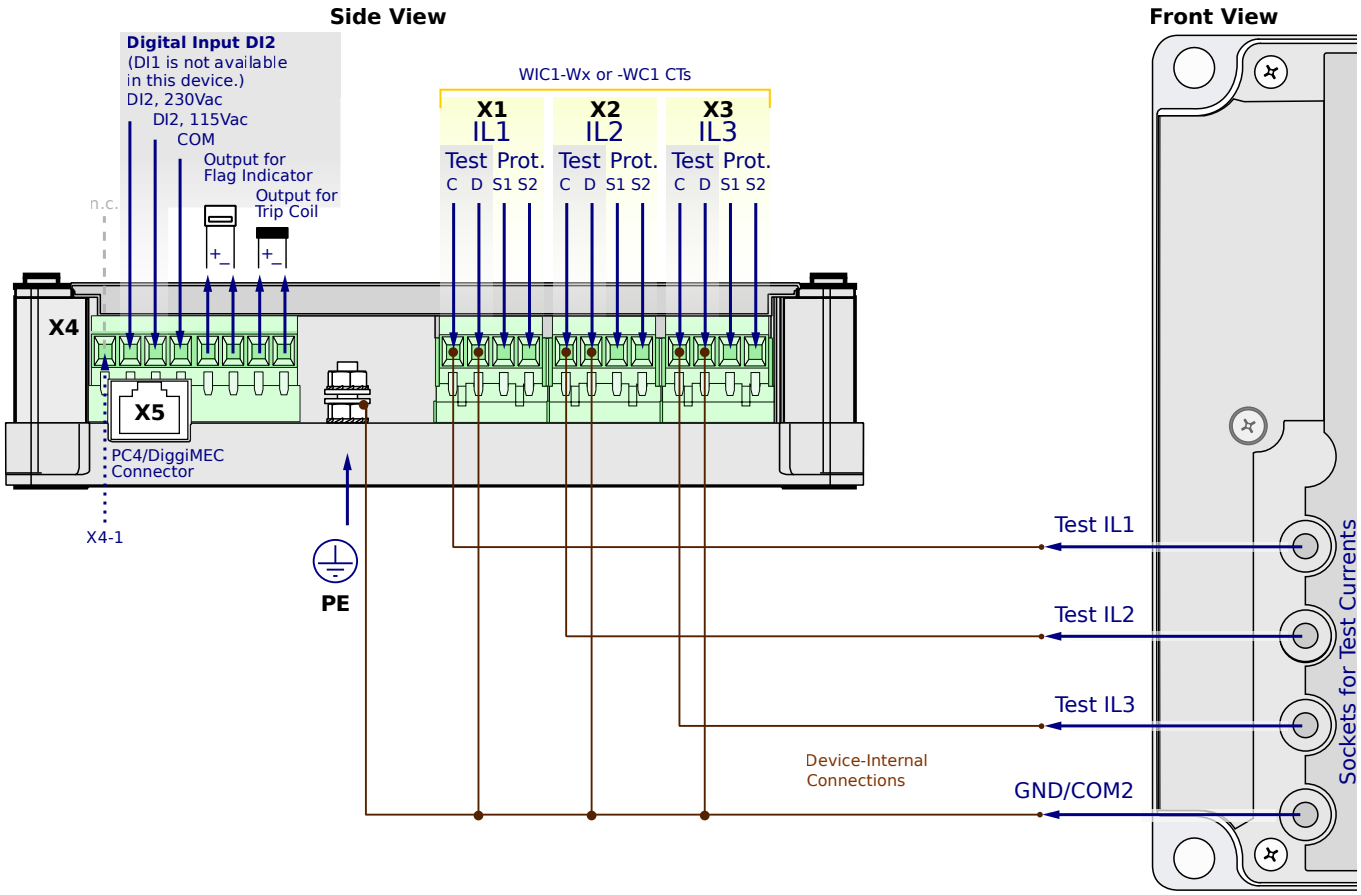


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2SA0

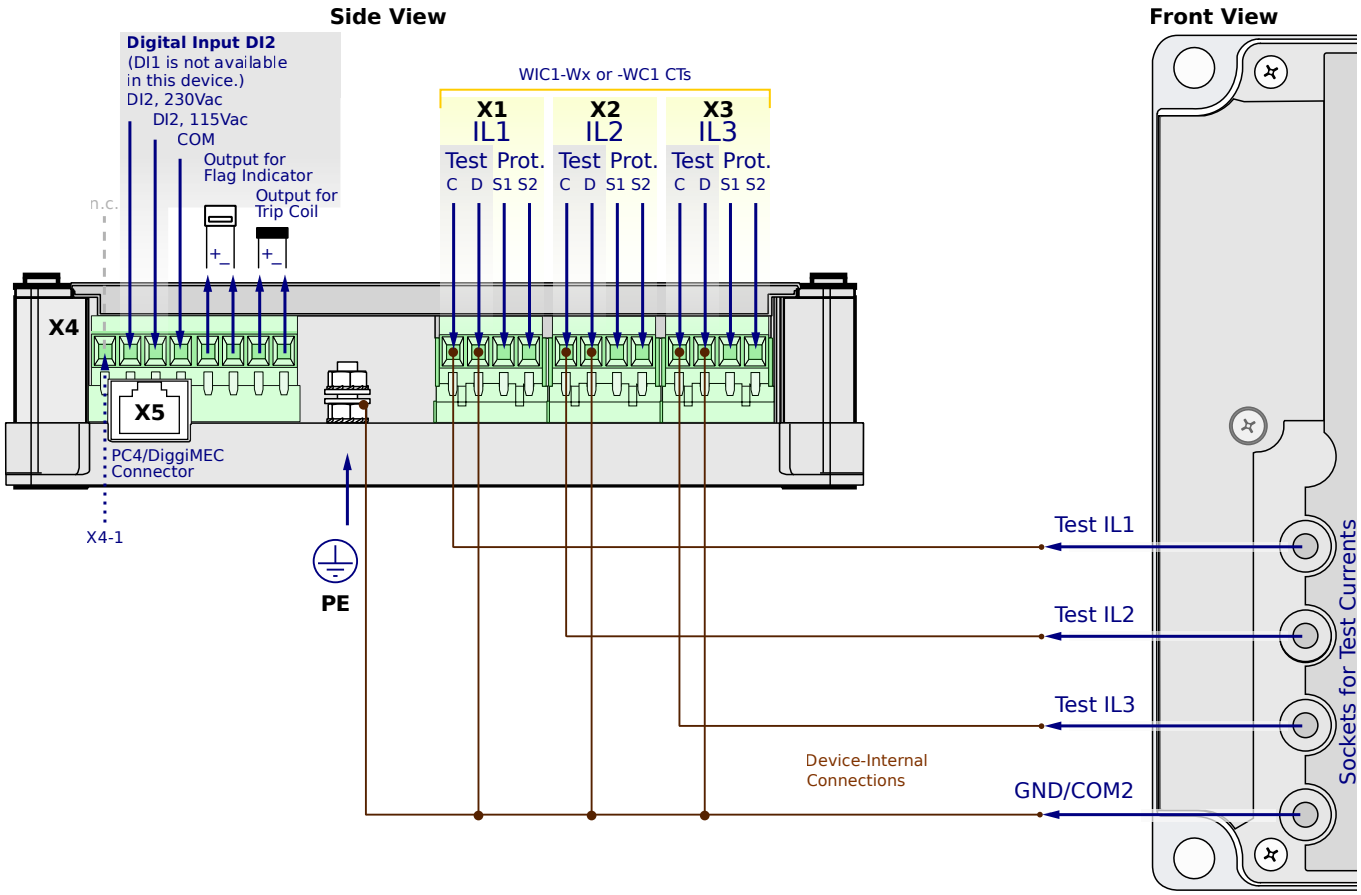


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2SAH

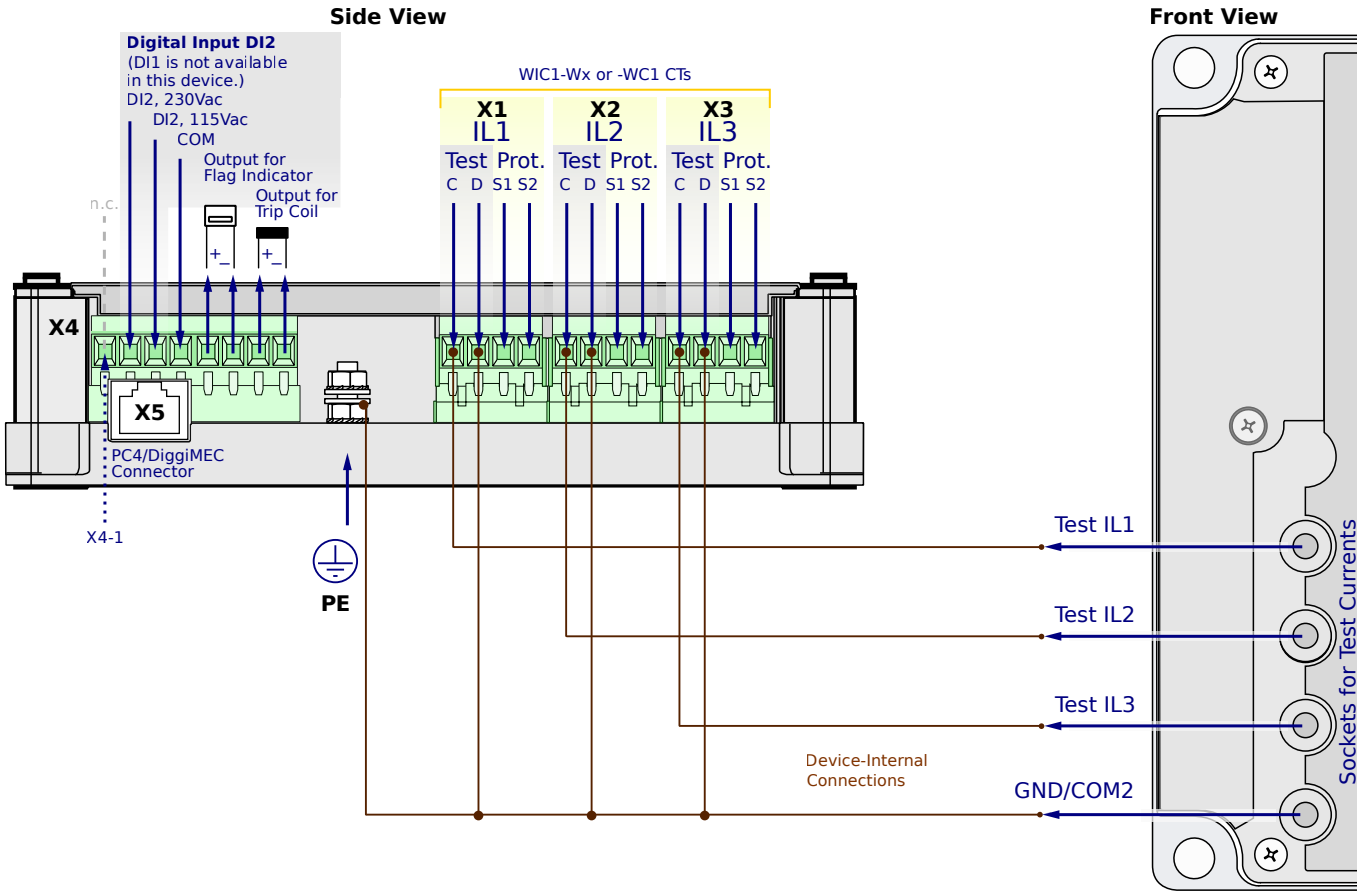


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2AA0

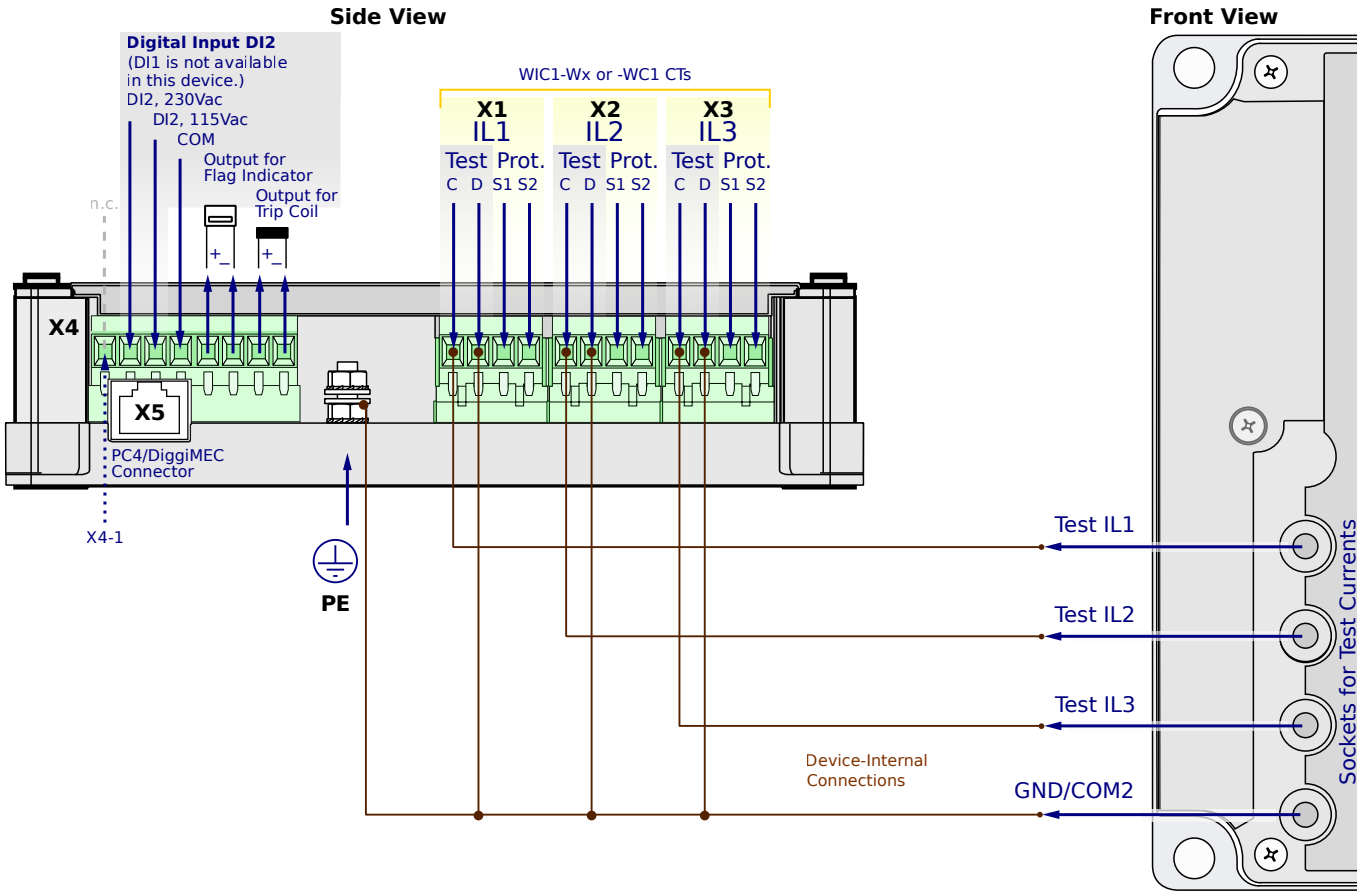


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2AAH

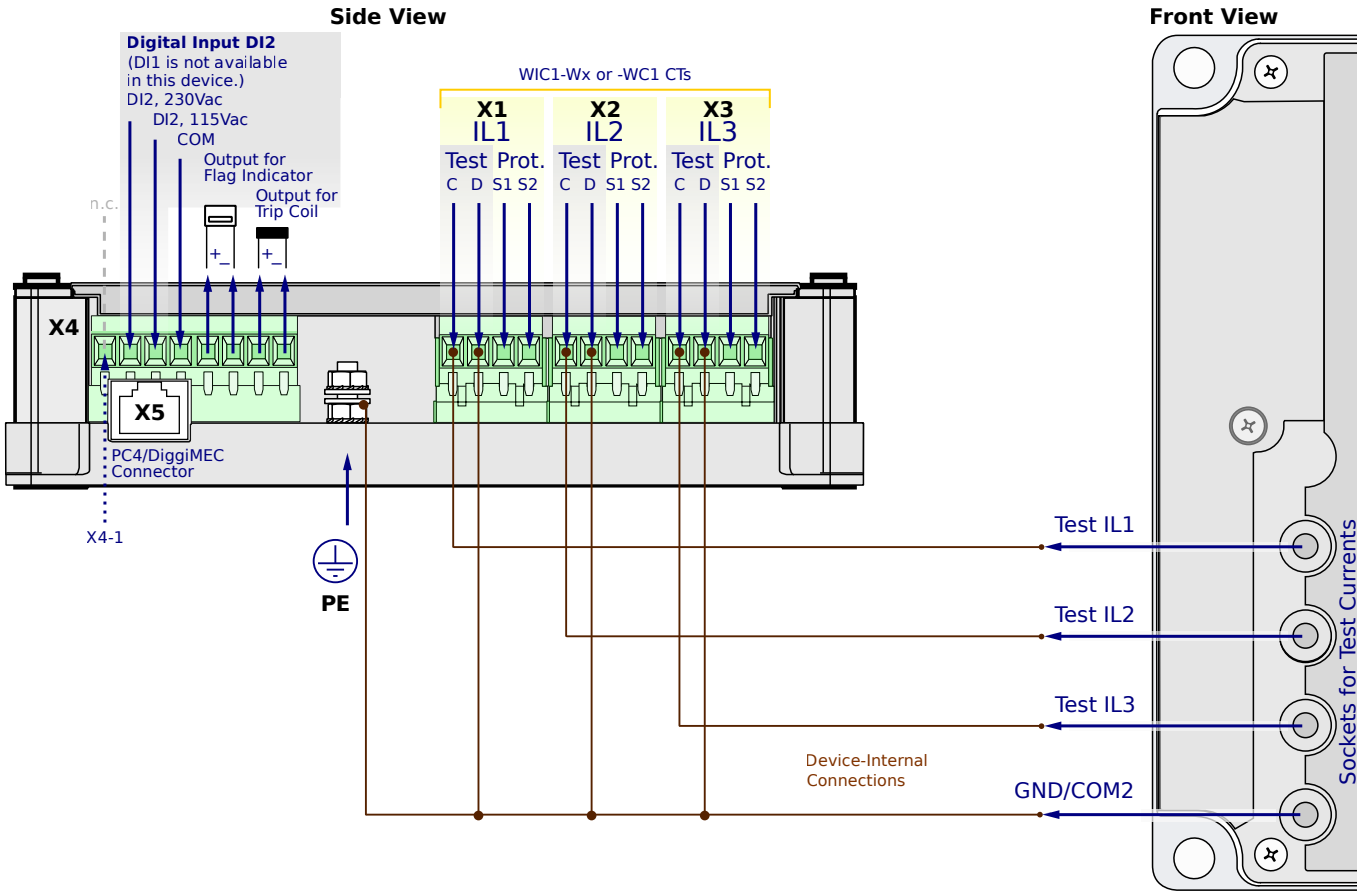


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2PA0

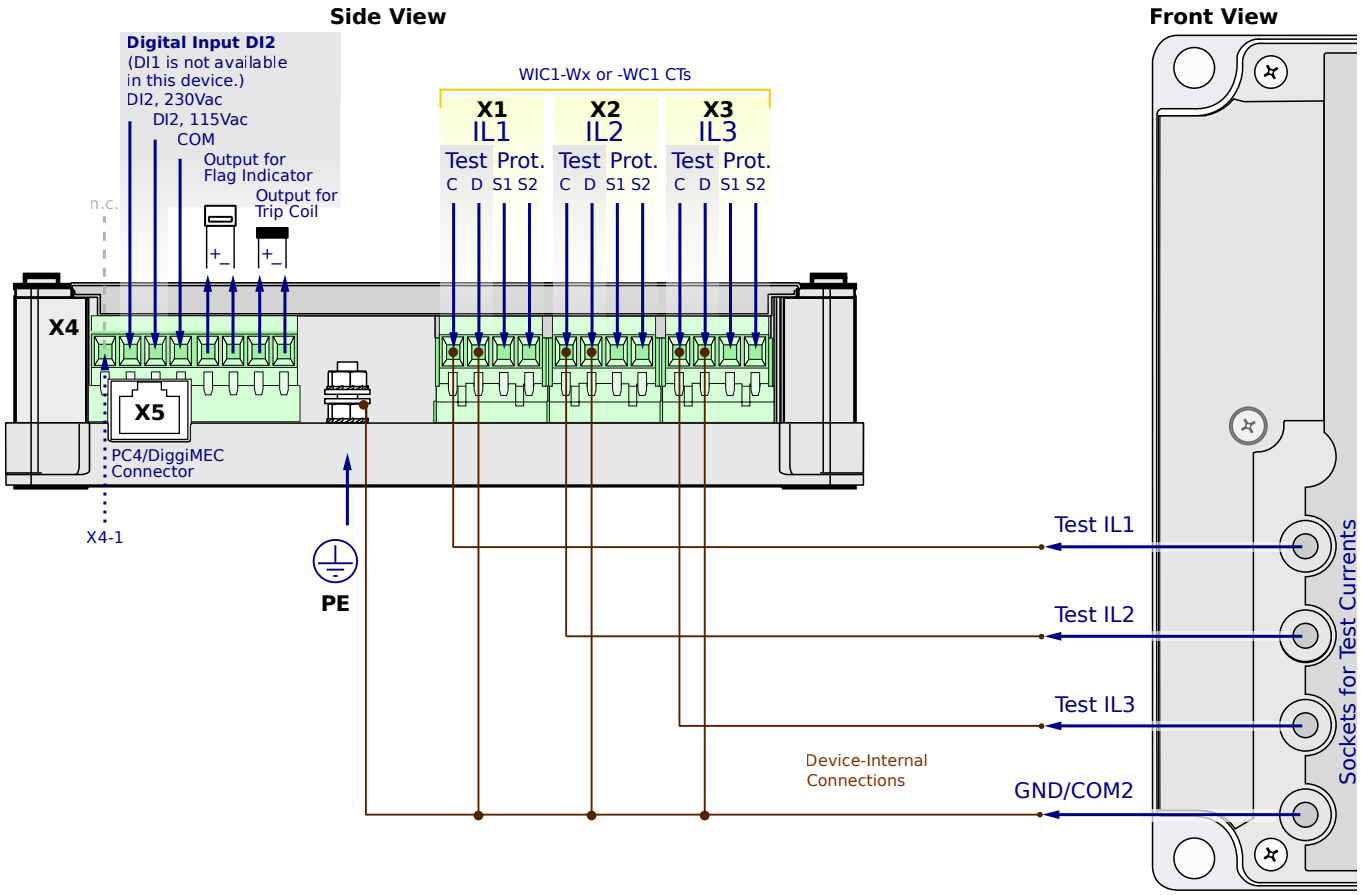


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0NC2PAH

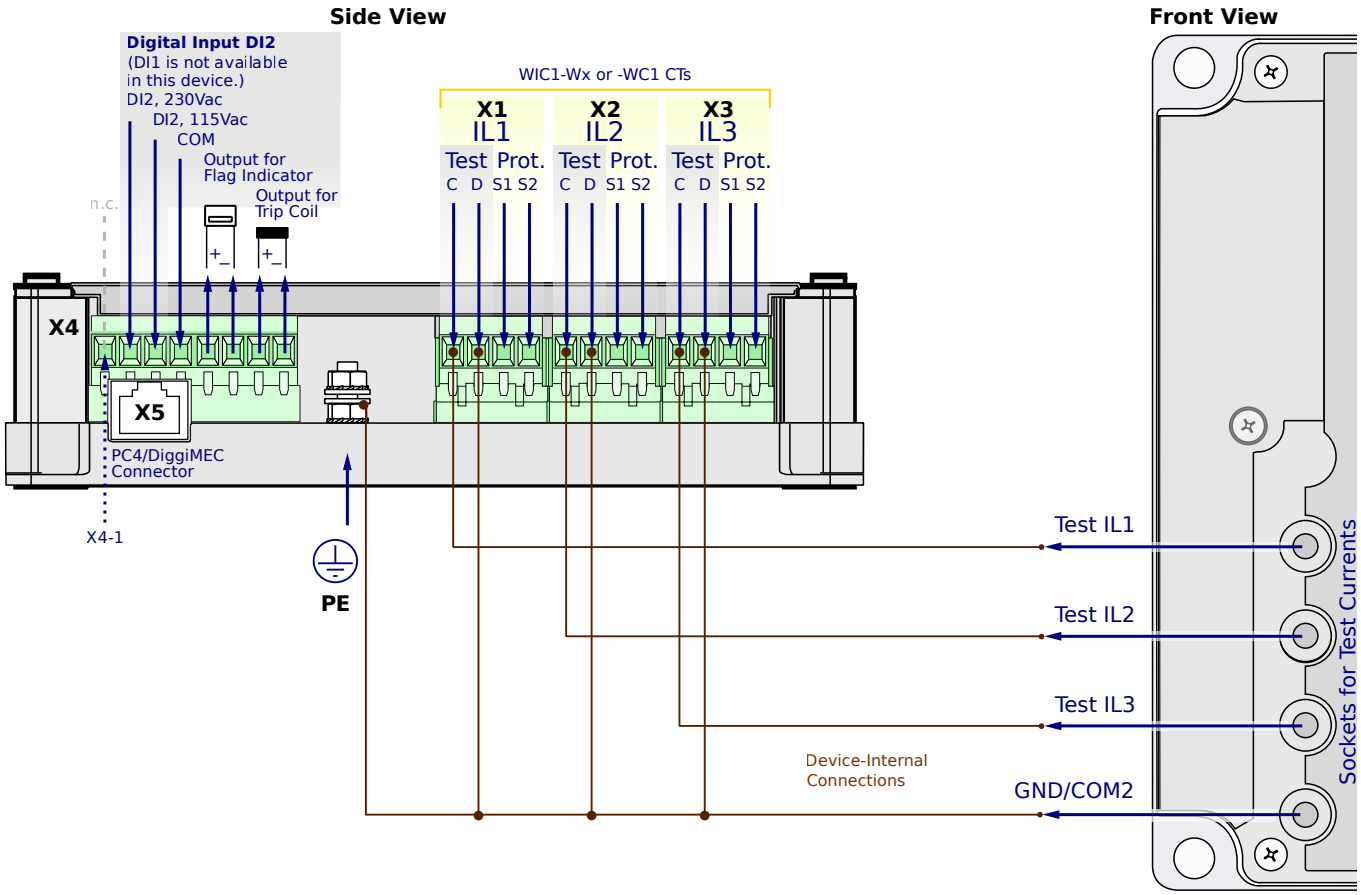


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1SA0

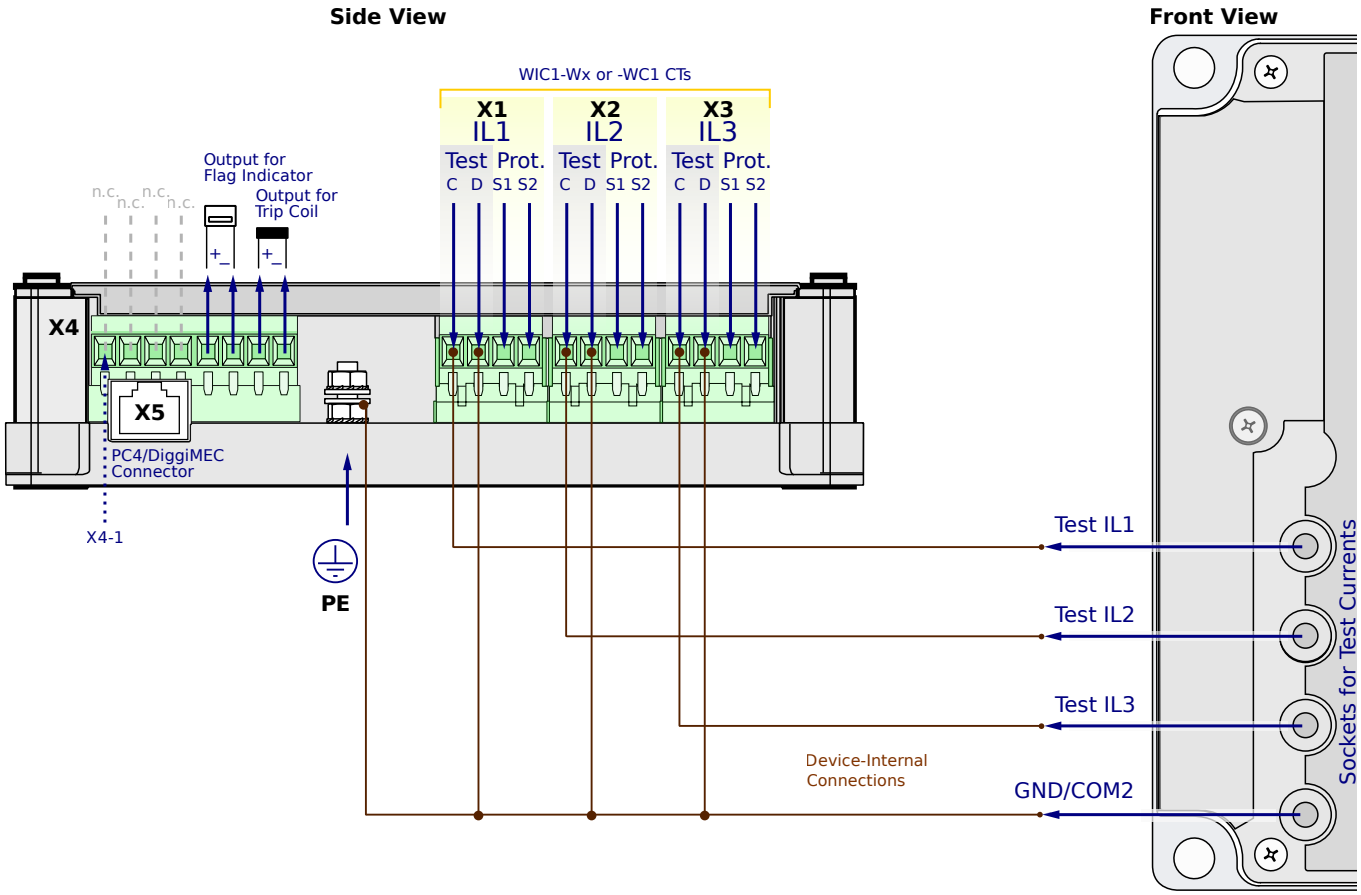


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1SAH

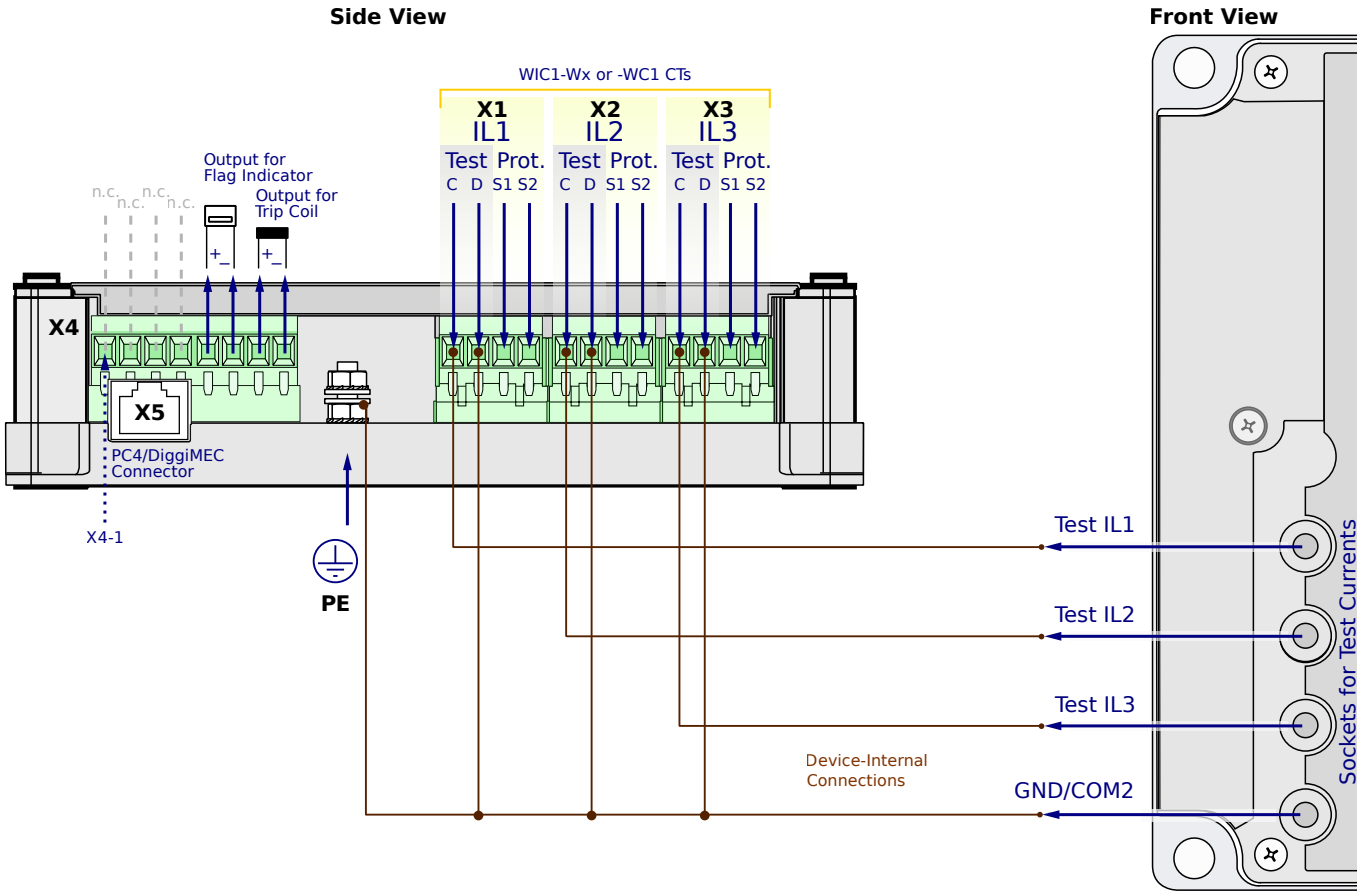


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1AA0

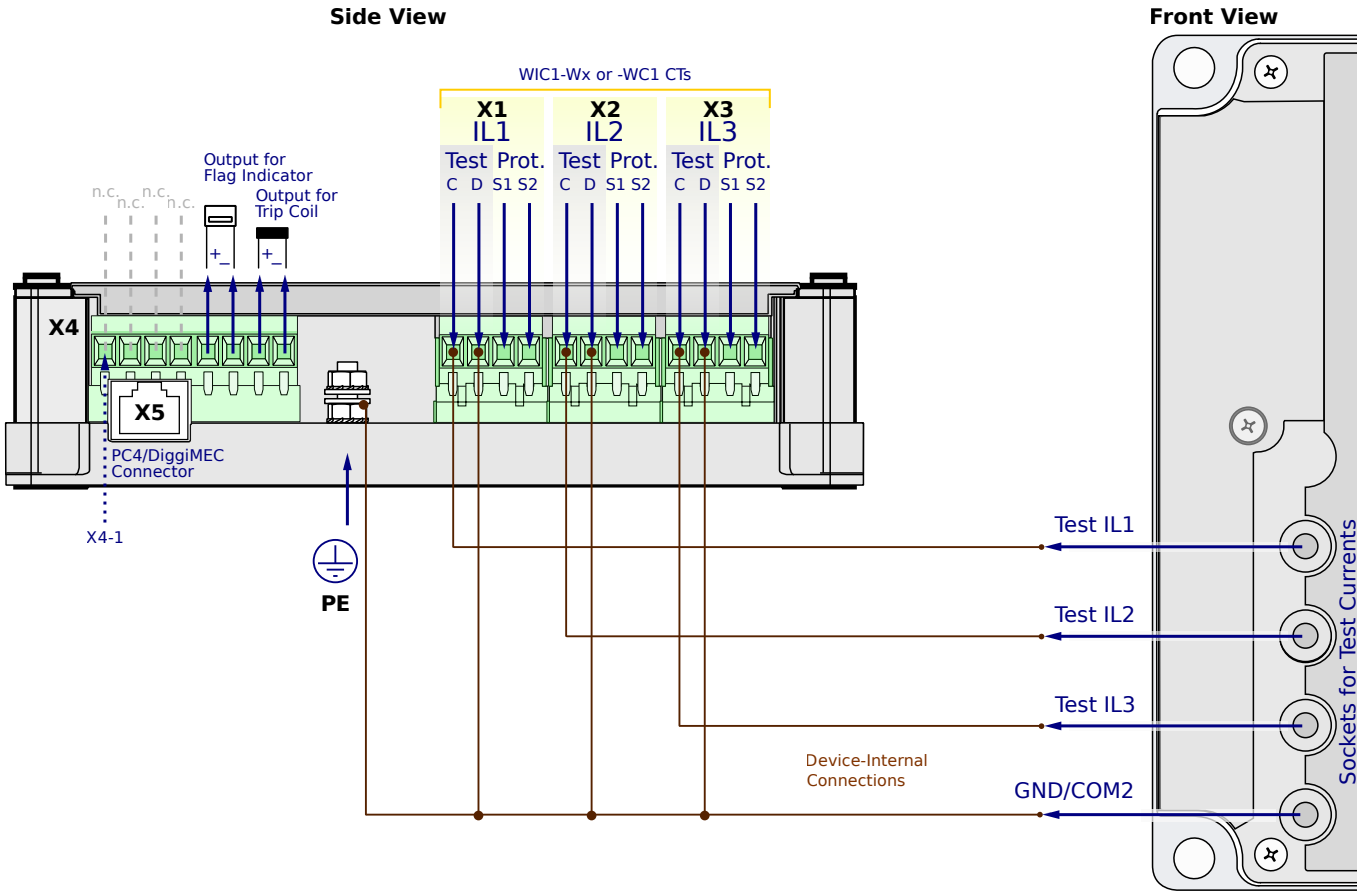


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1AAH

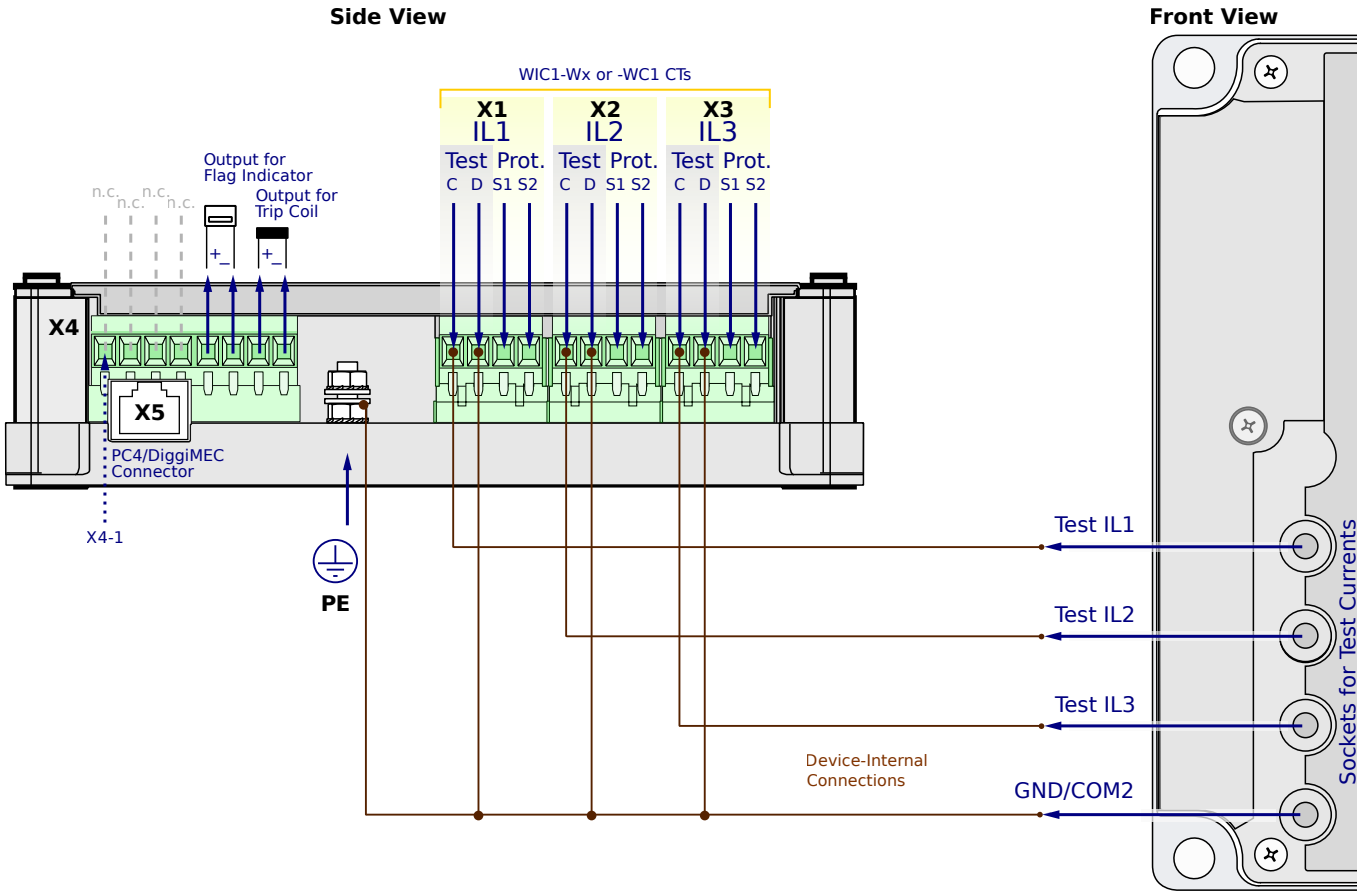


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1PA0

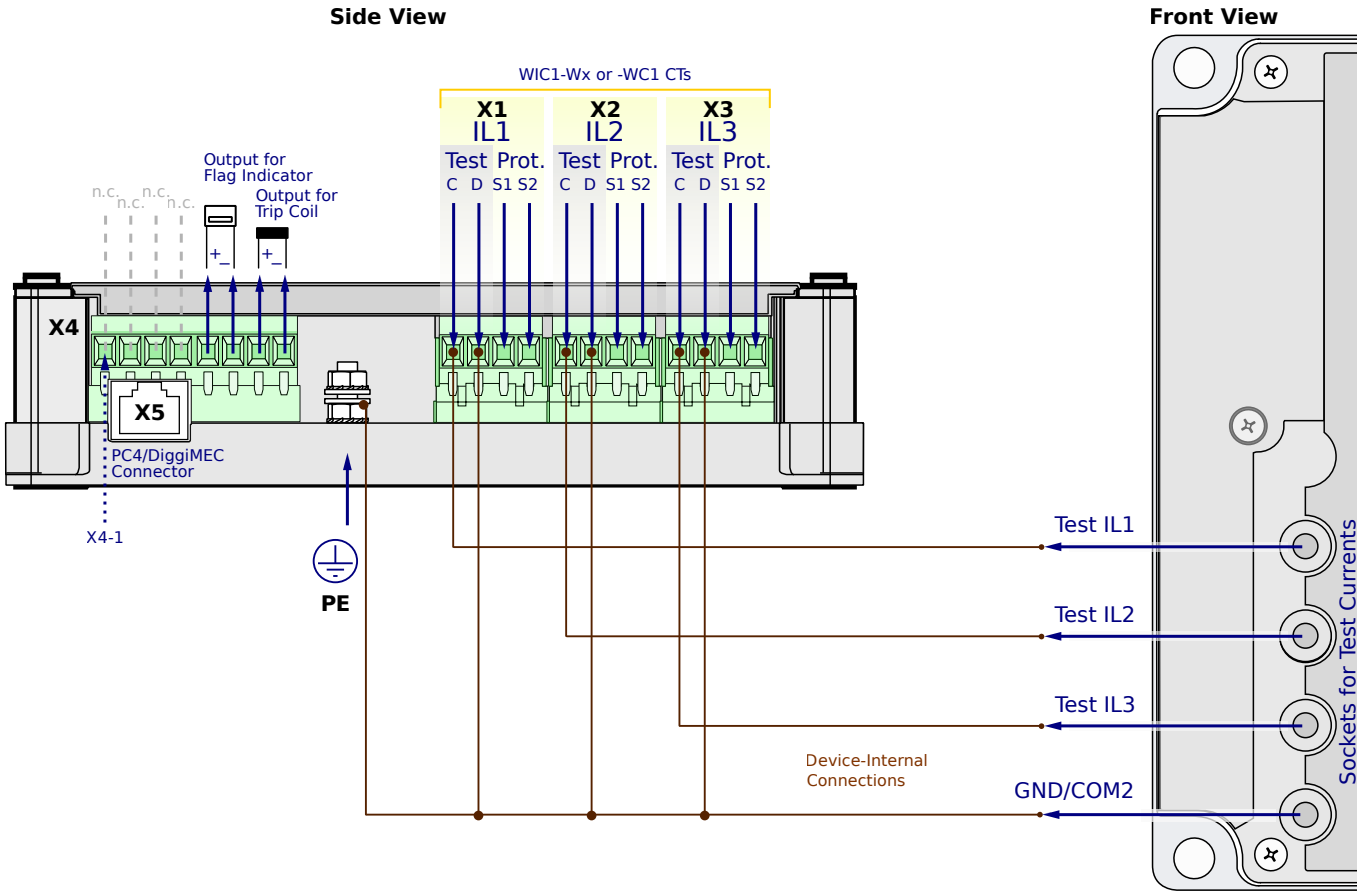


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN1PAH

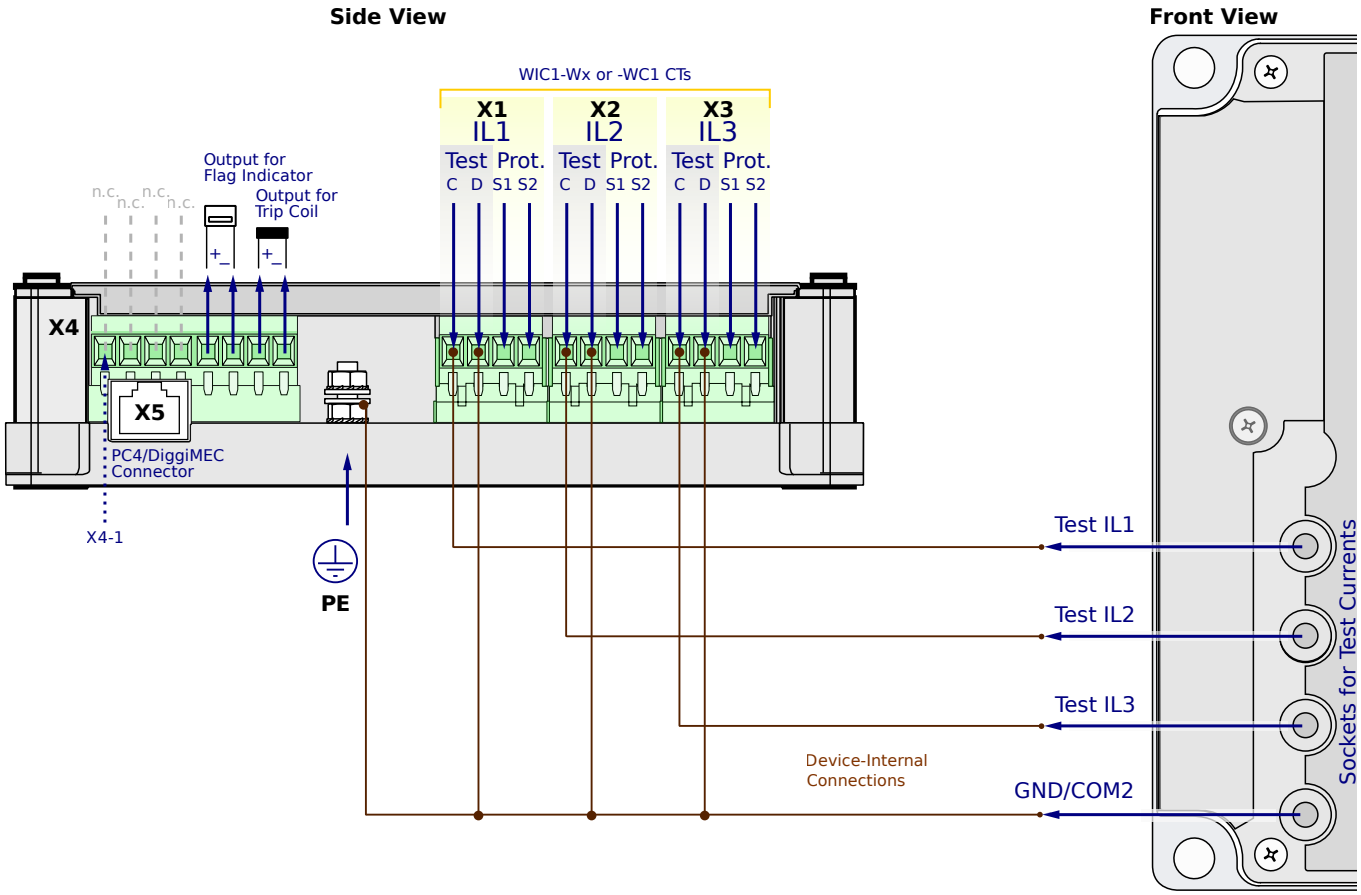


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2SA0

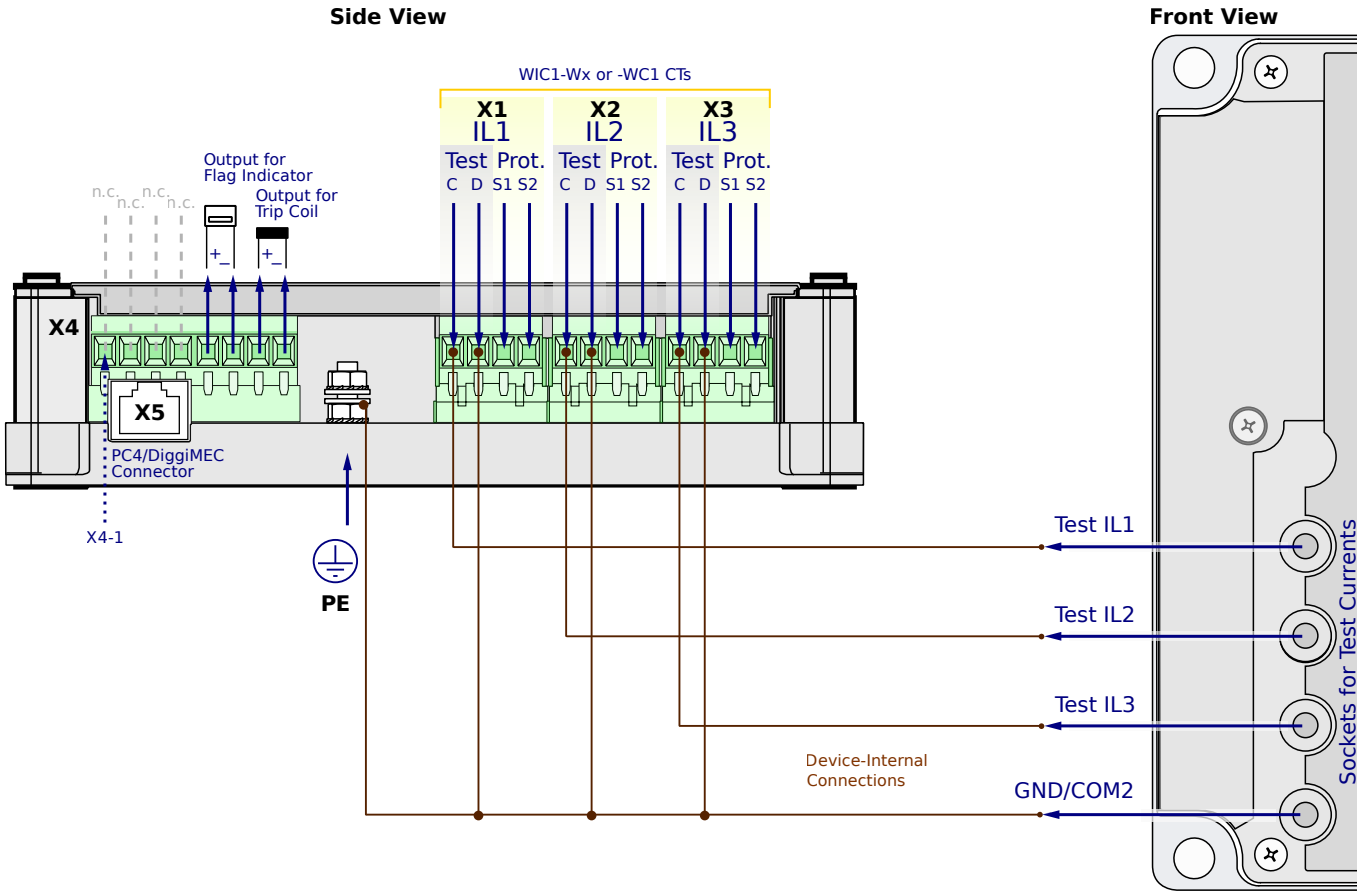


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2SAH

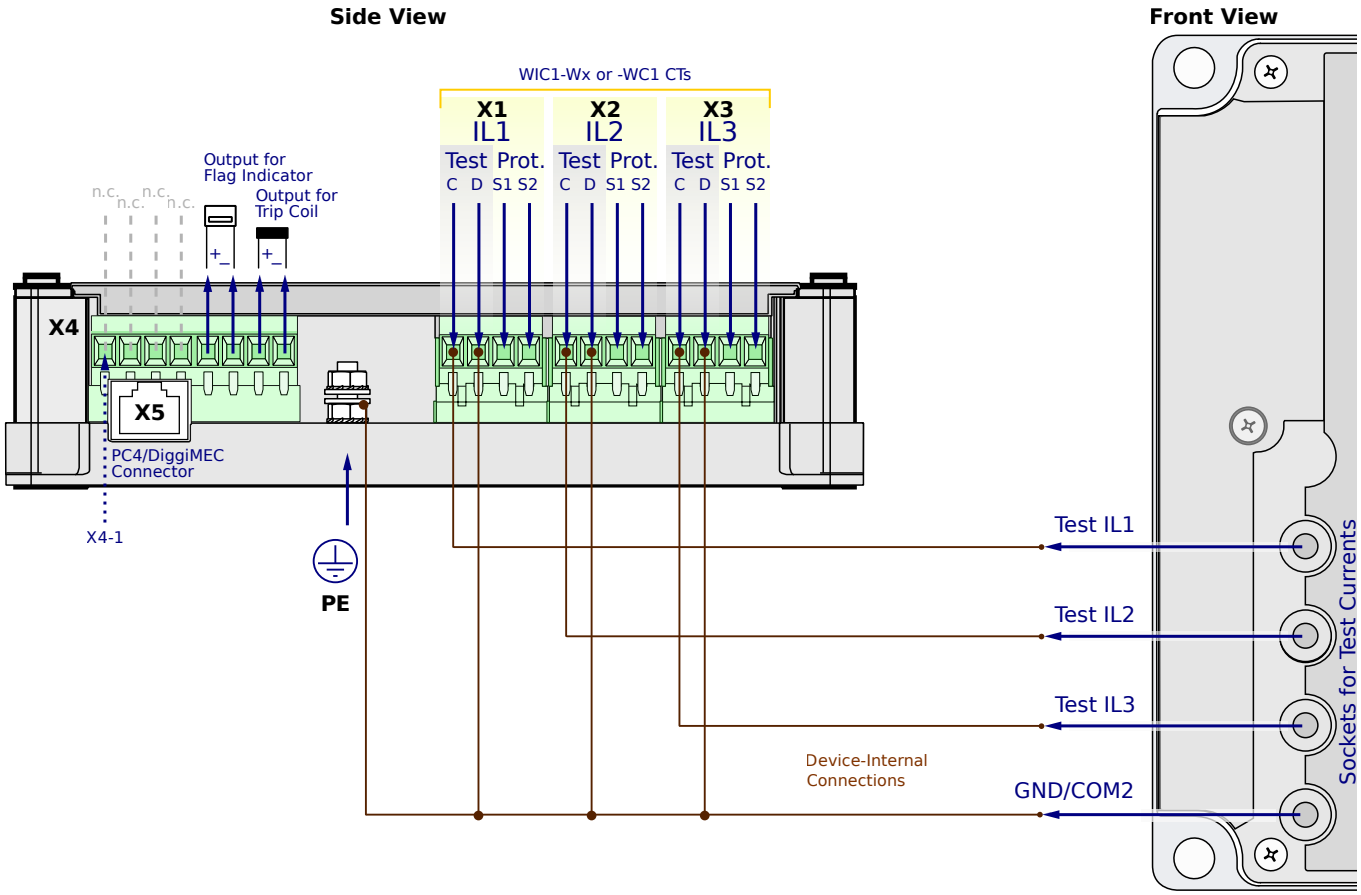


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2AA0

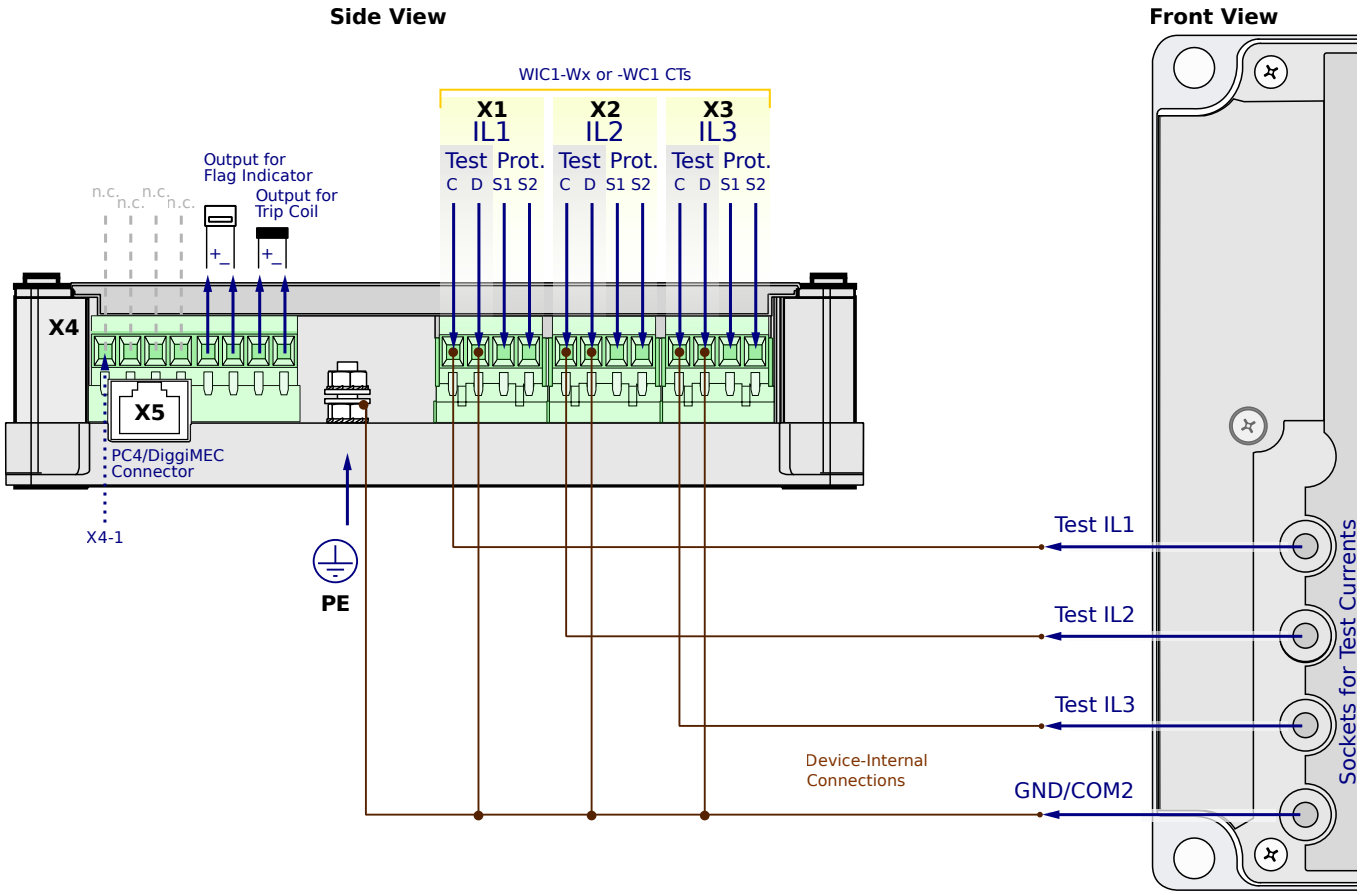


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2AAH

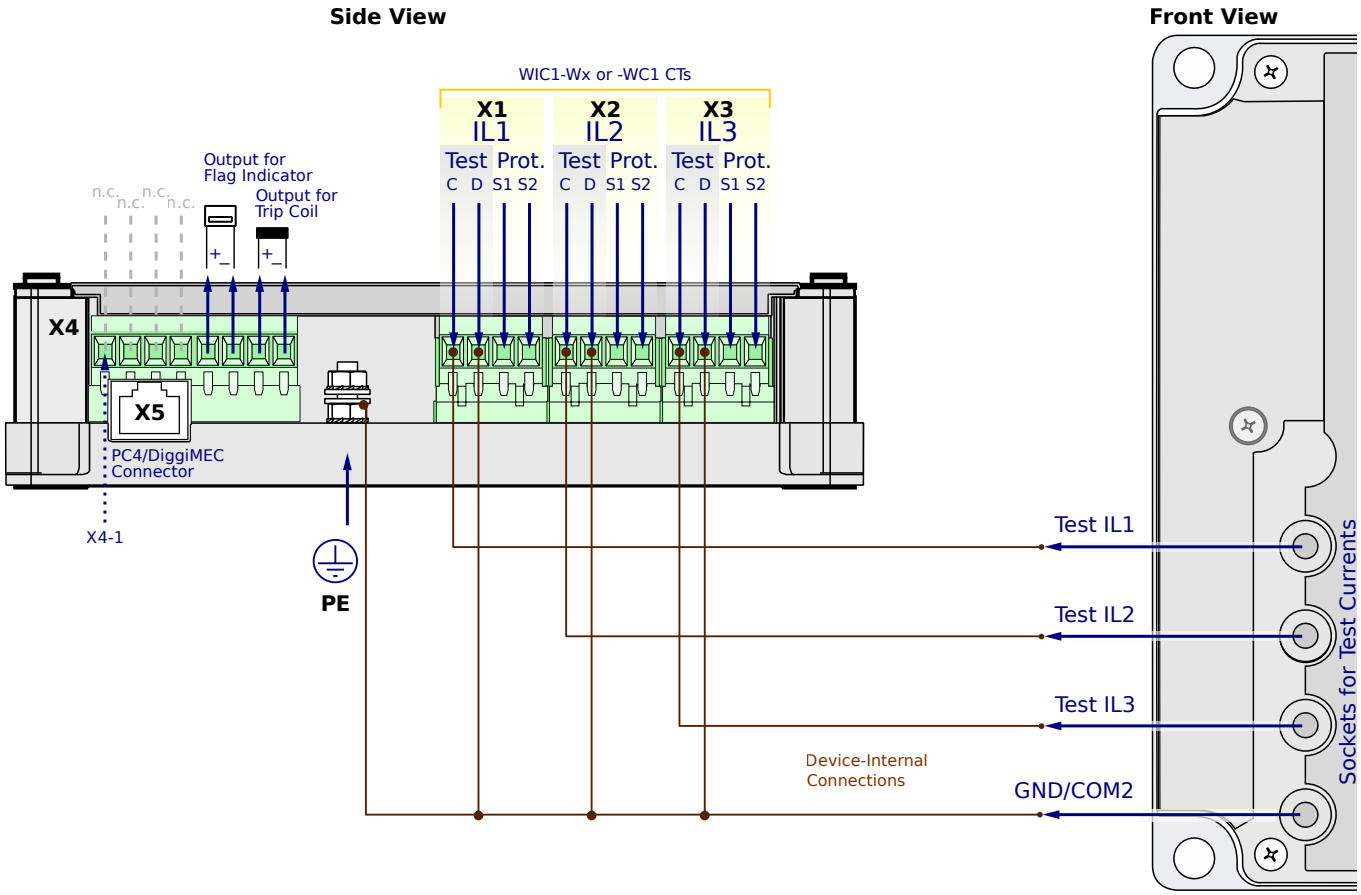


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2PA0

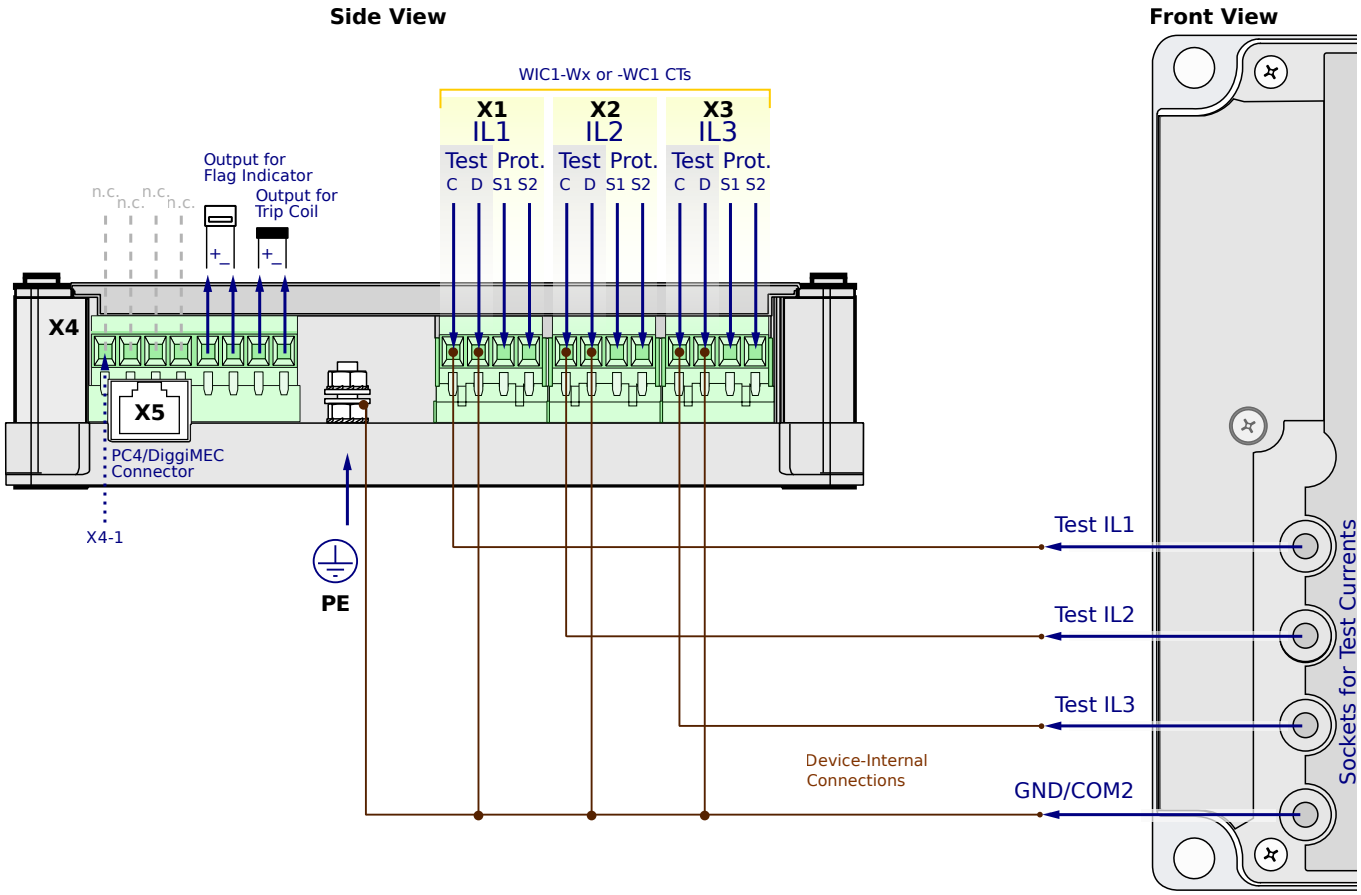


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FN2PAH

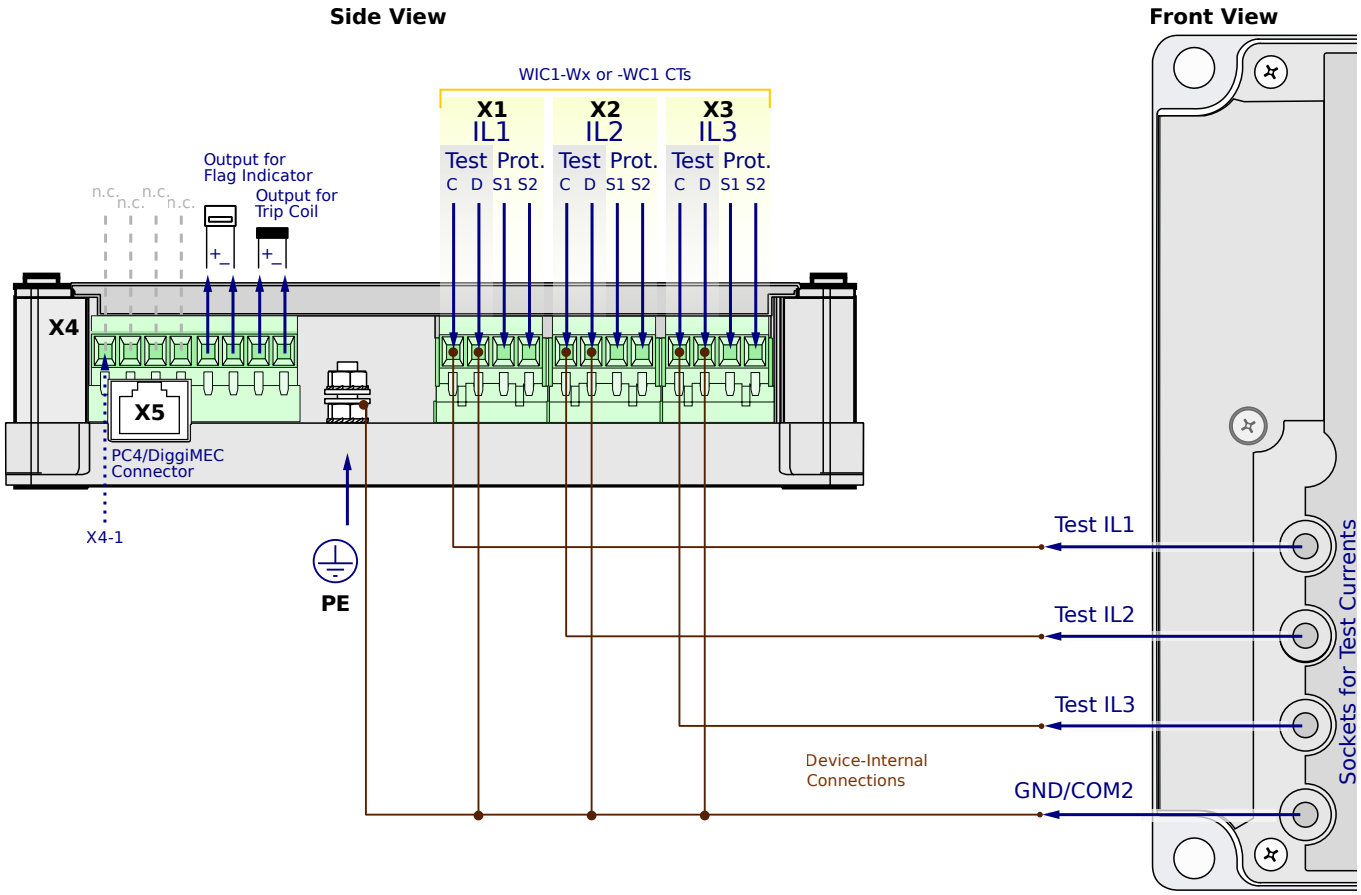


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1SA0

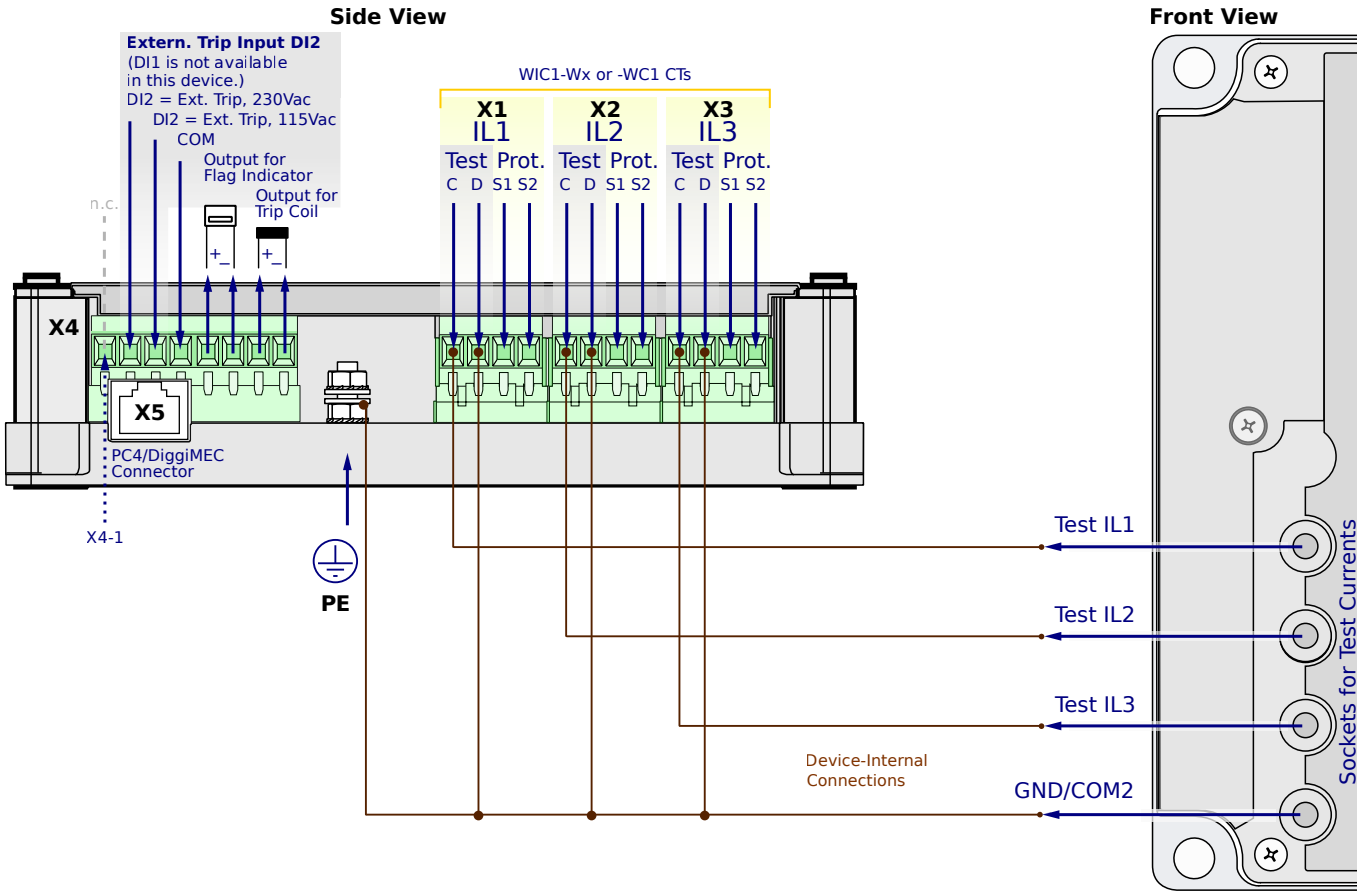


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1SAH

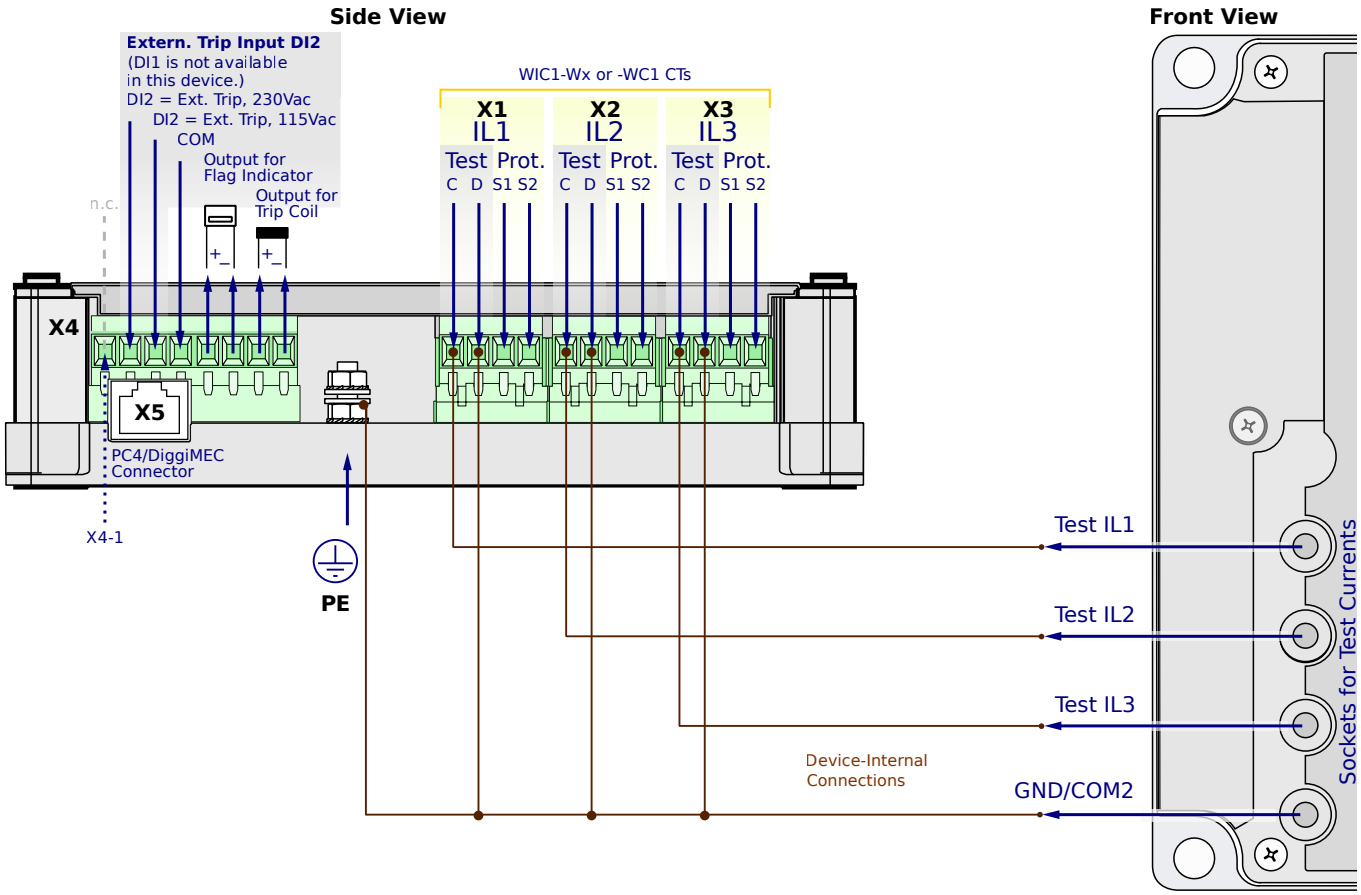


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1AA0

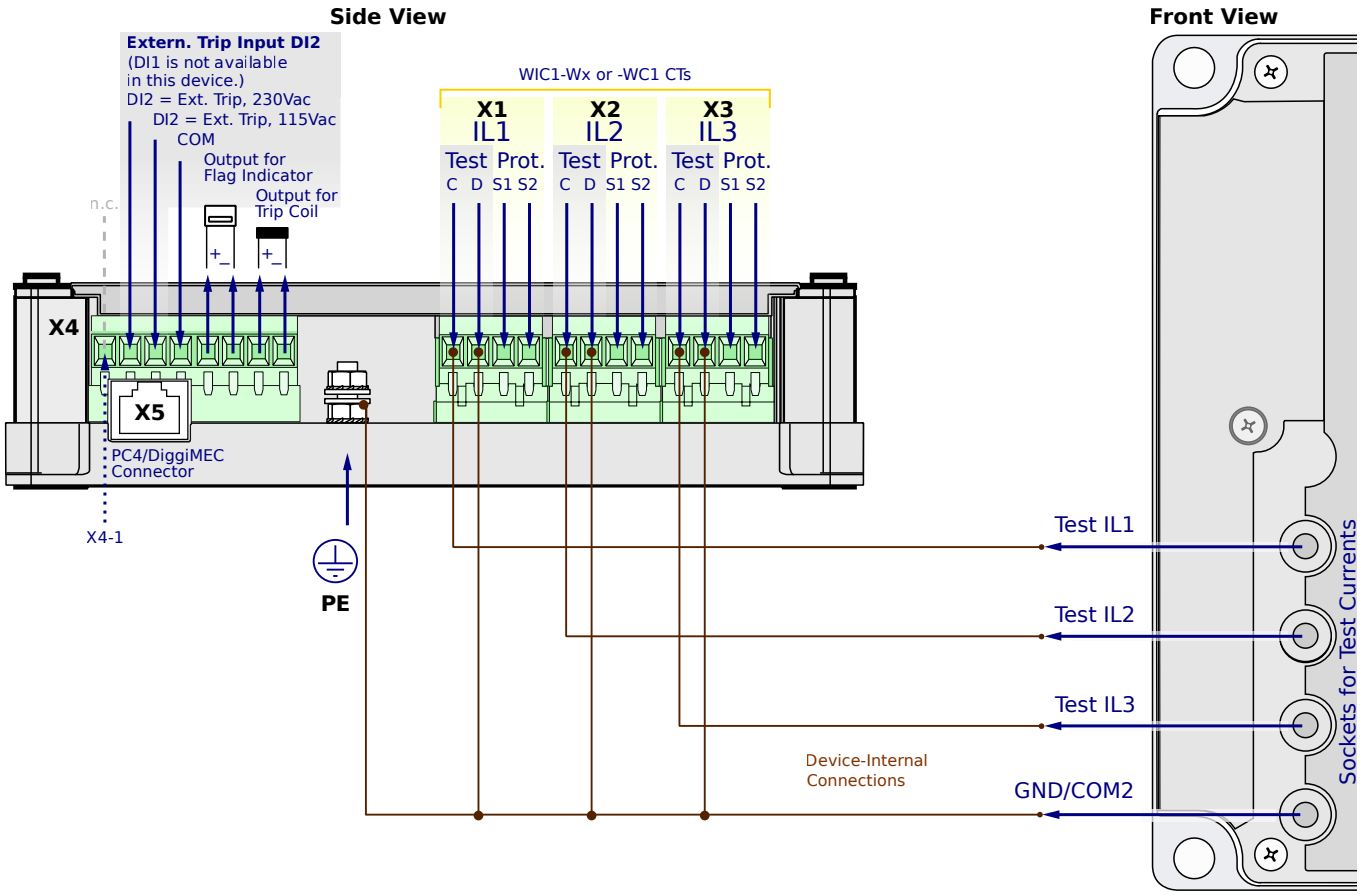


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1AAH

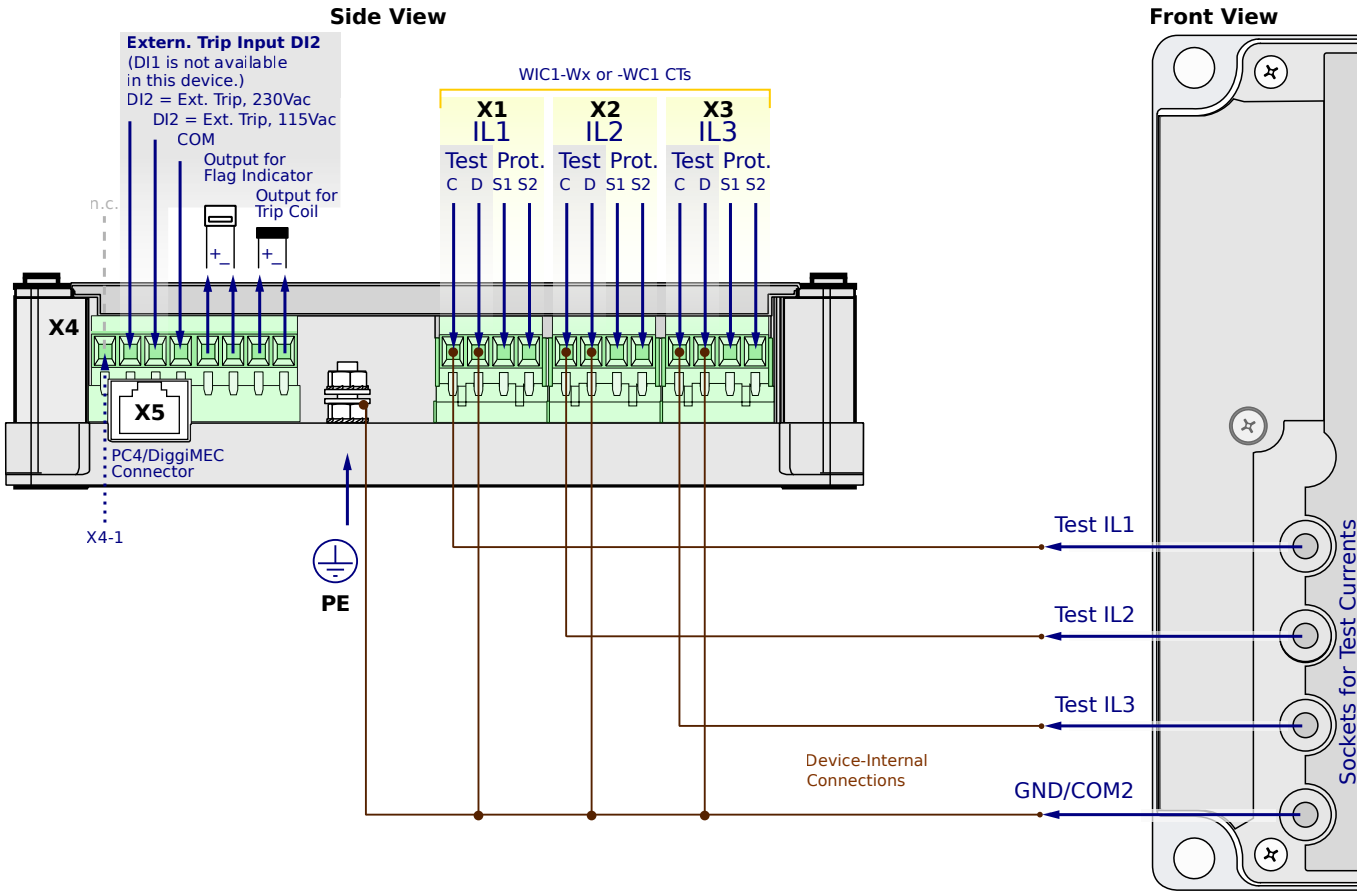


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1PA0

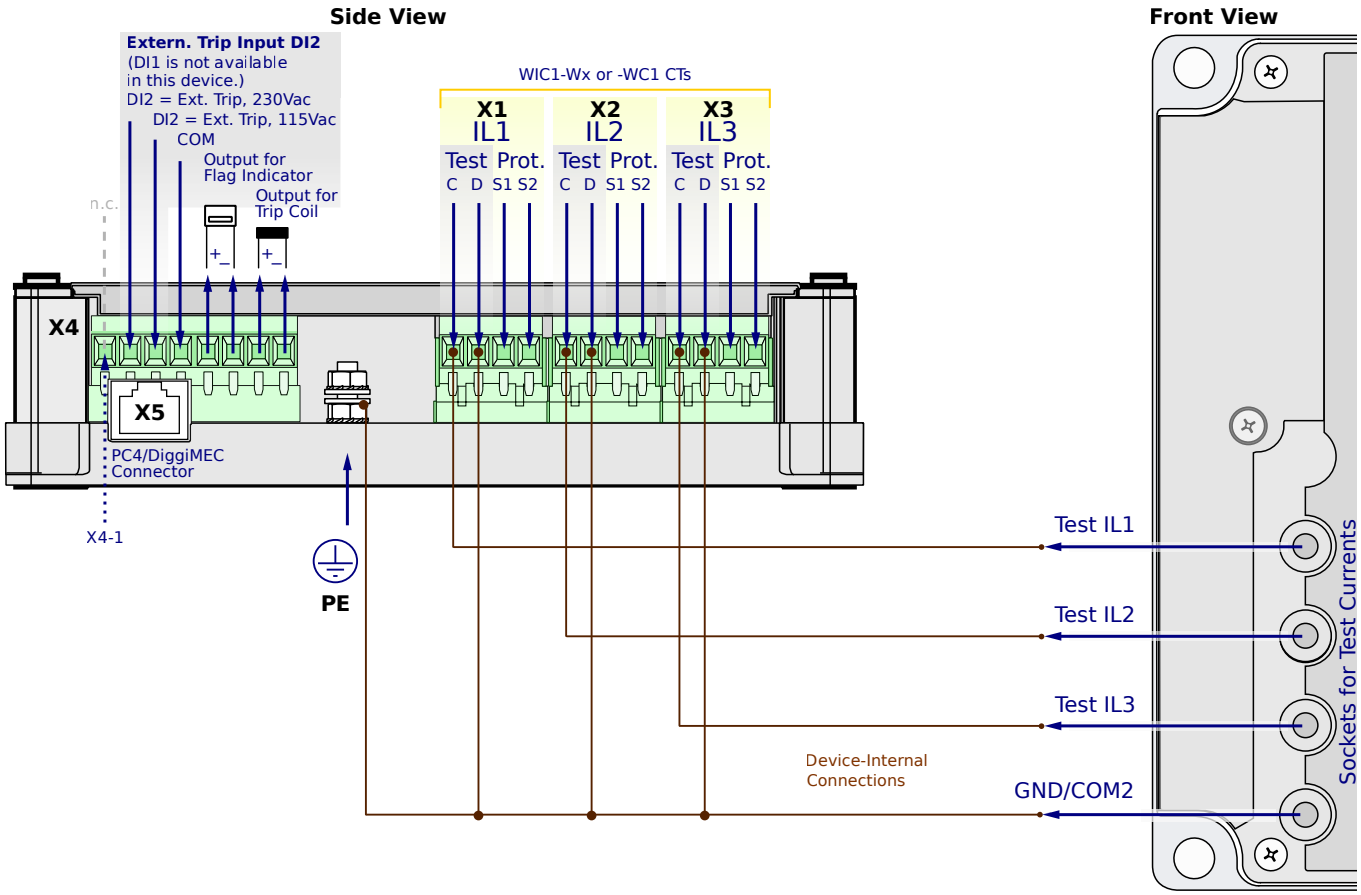


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF1PAH

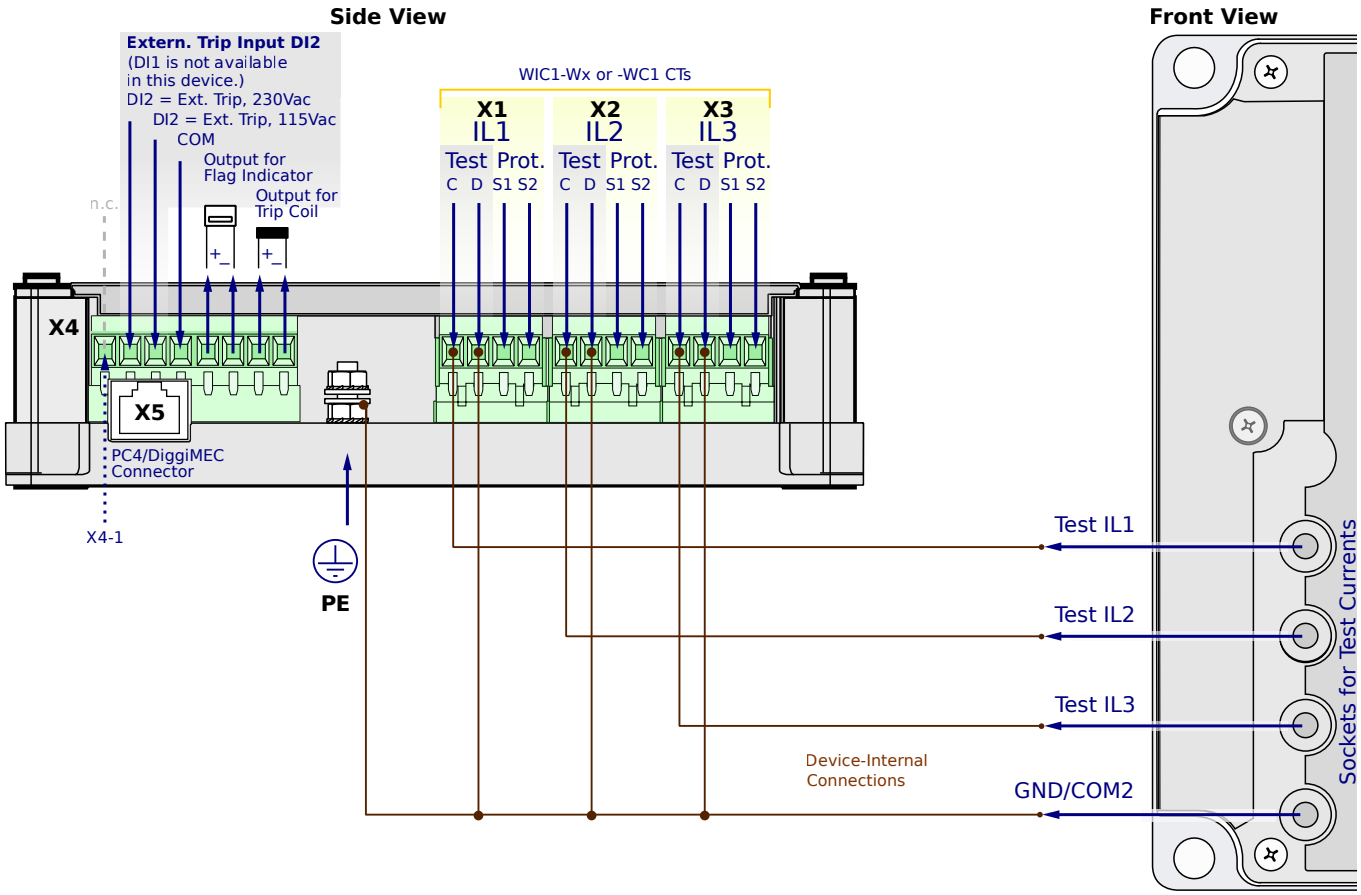


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2SA0

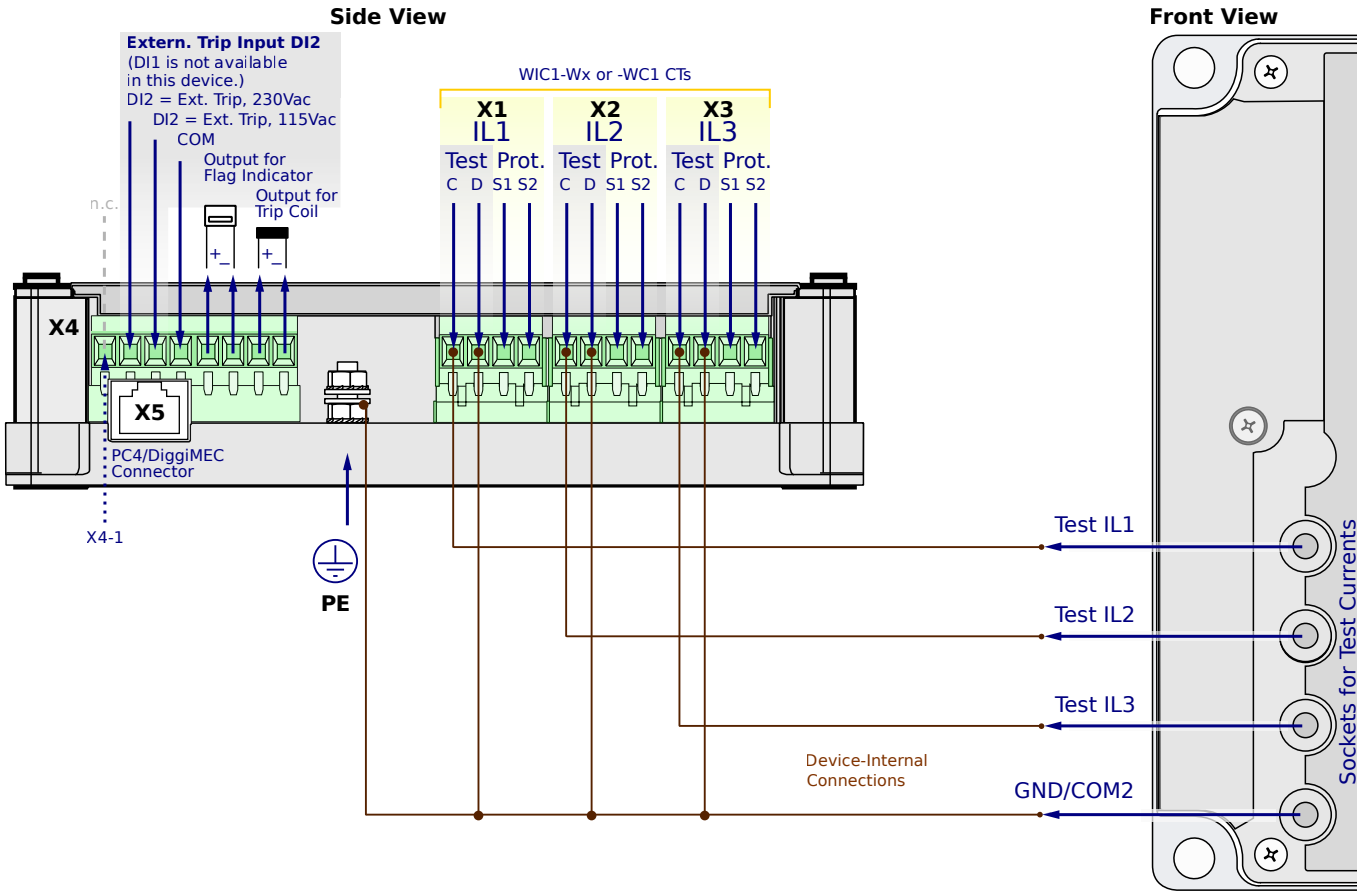


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2SAH

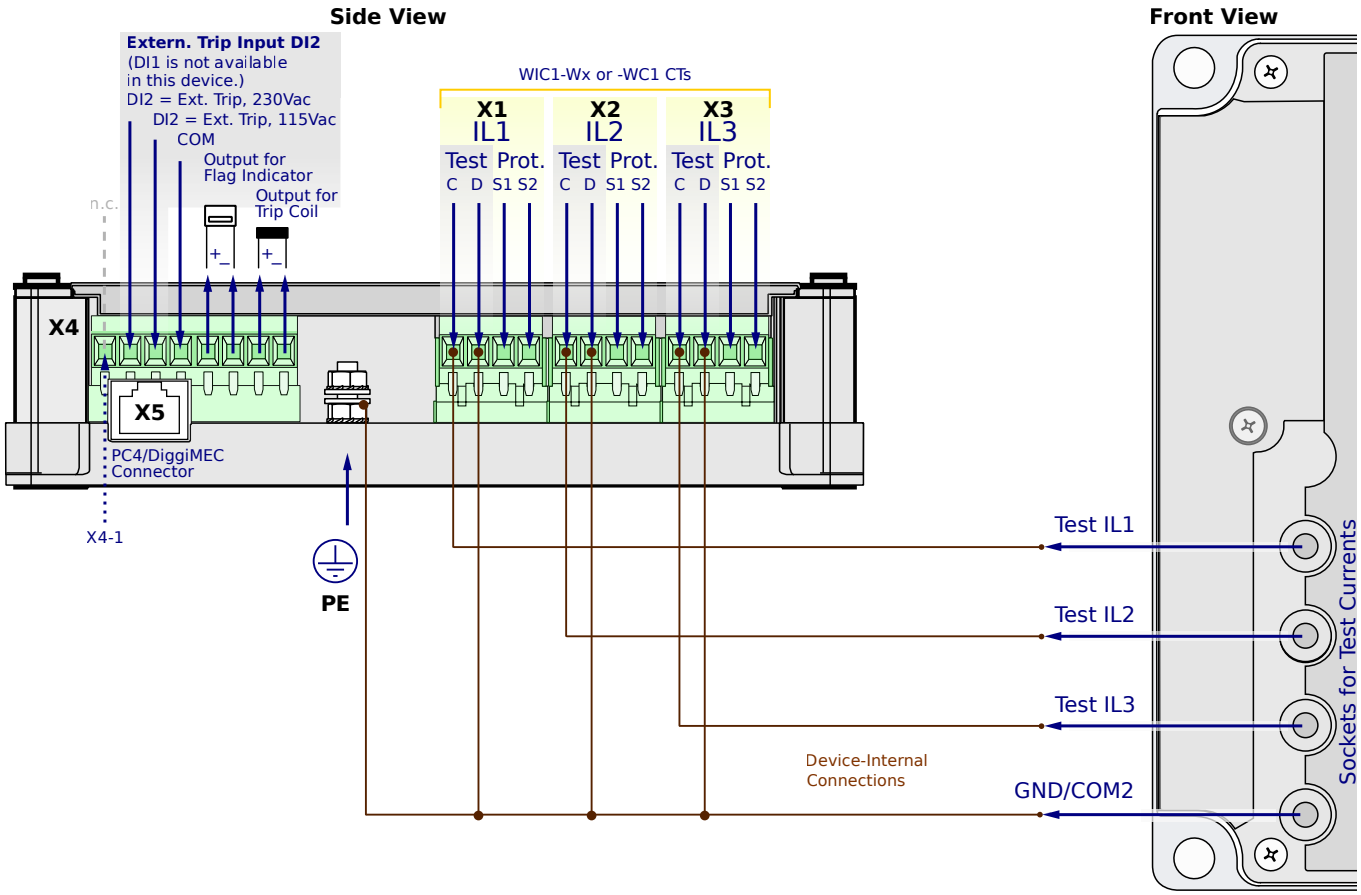


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2AA0

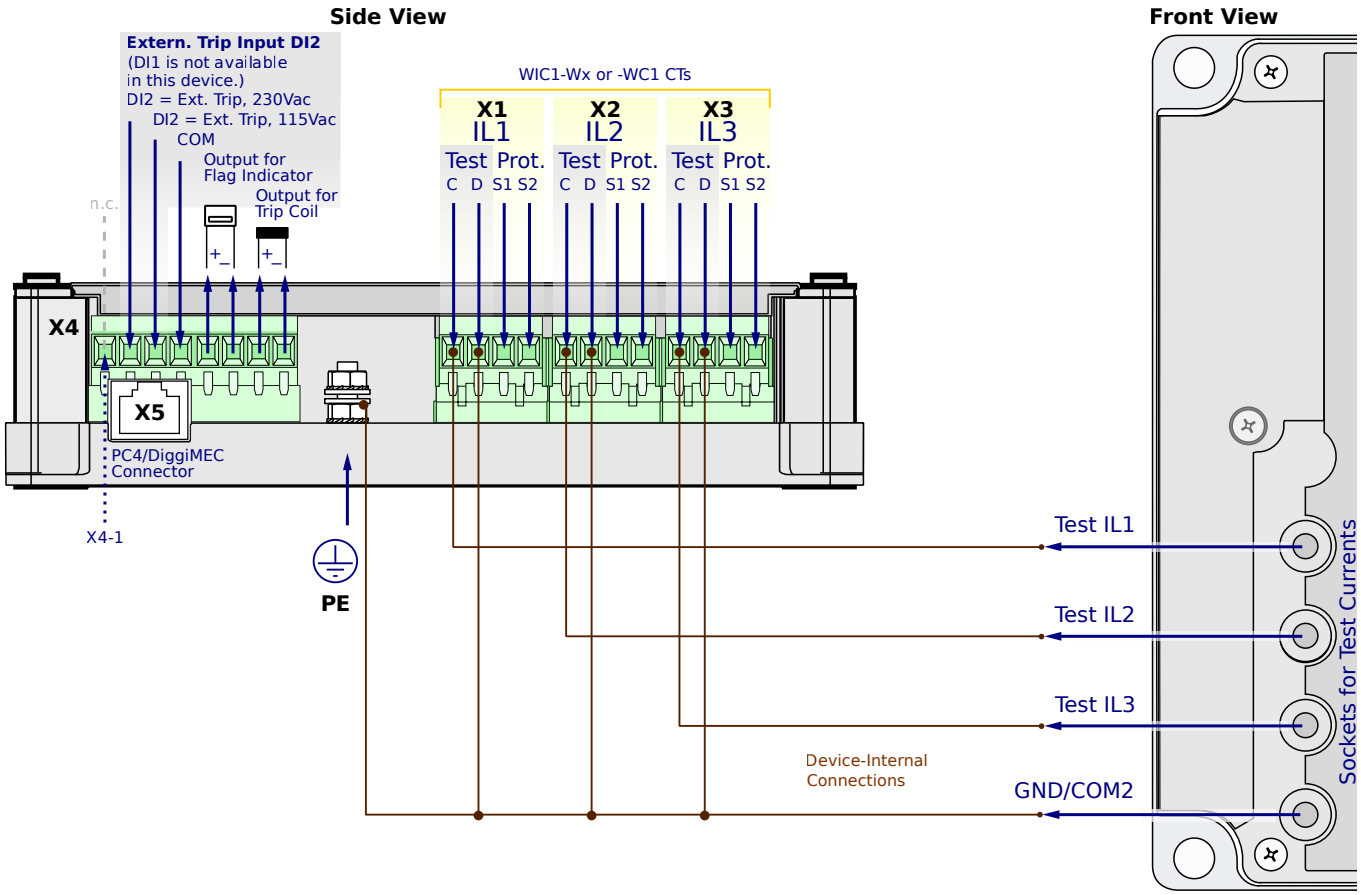


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2AAH

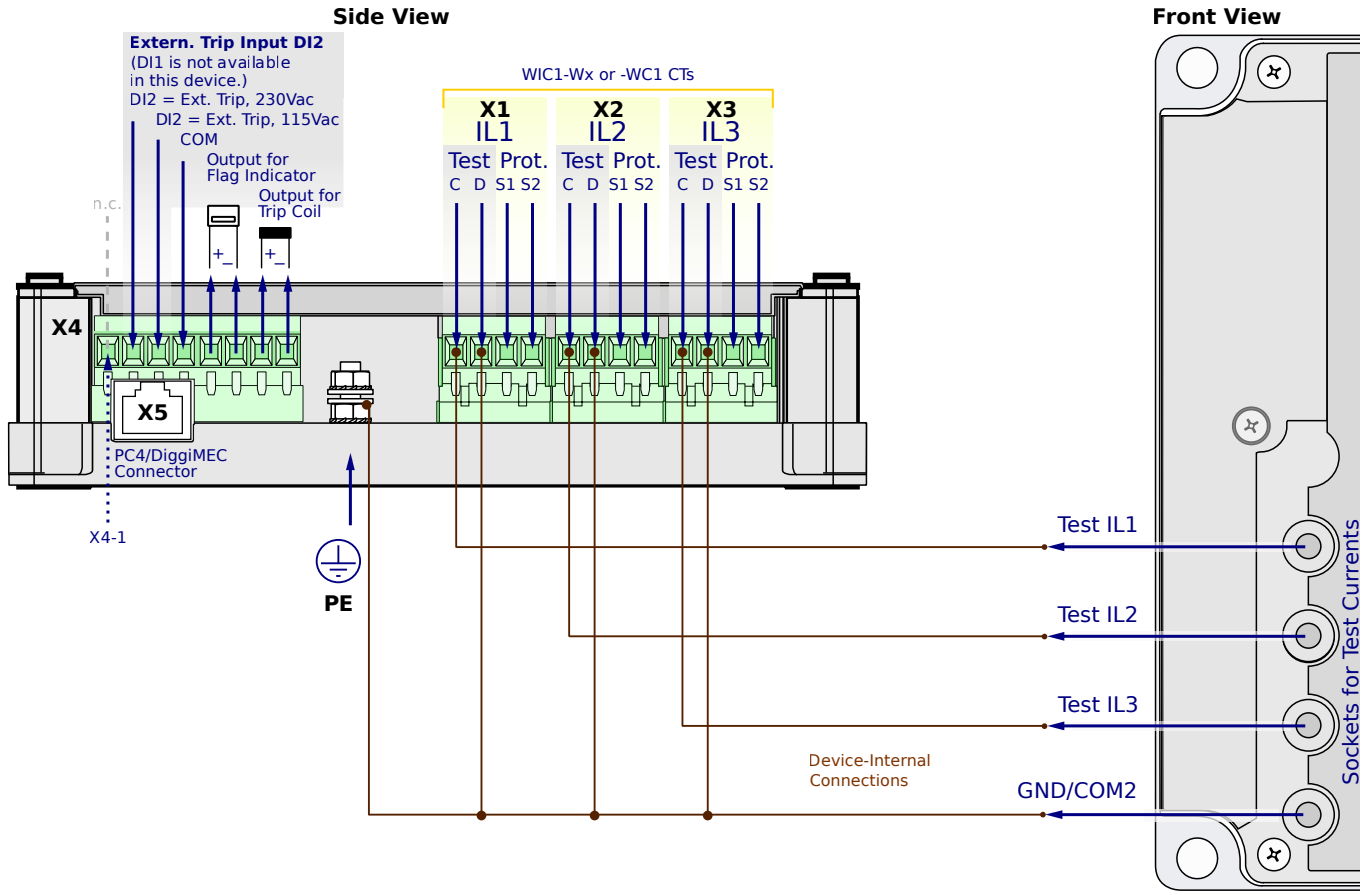


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2PA0

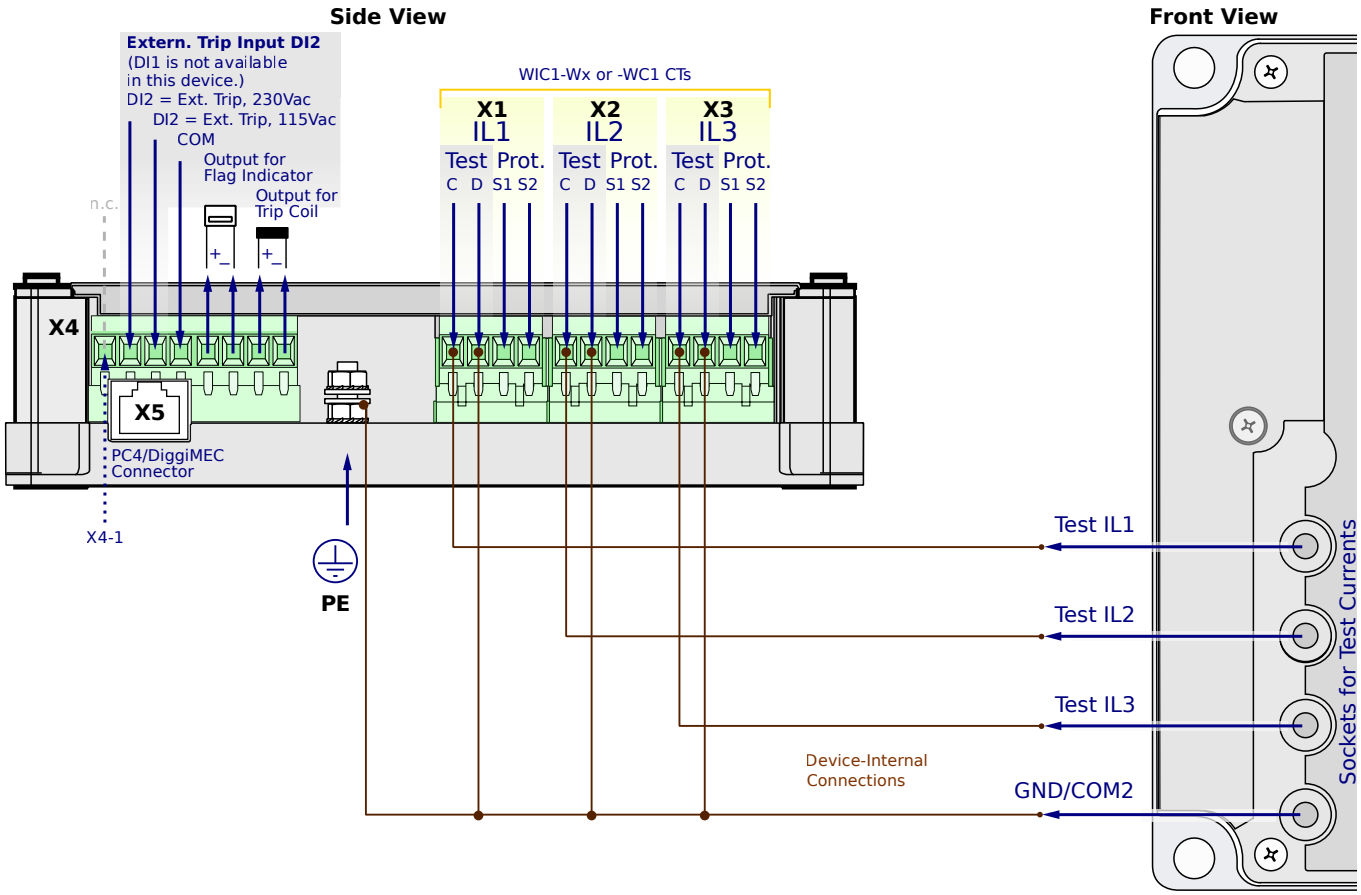


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FF2PAH

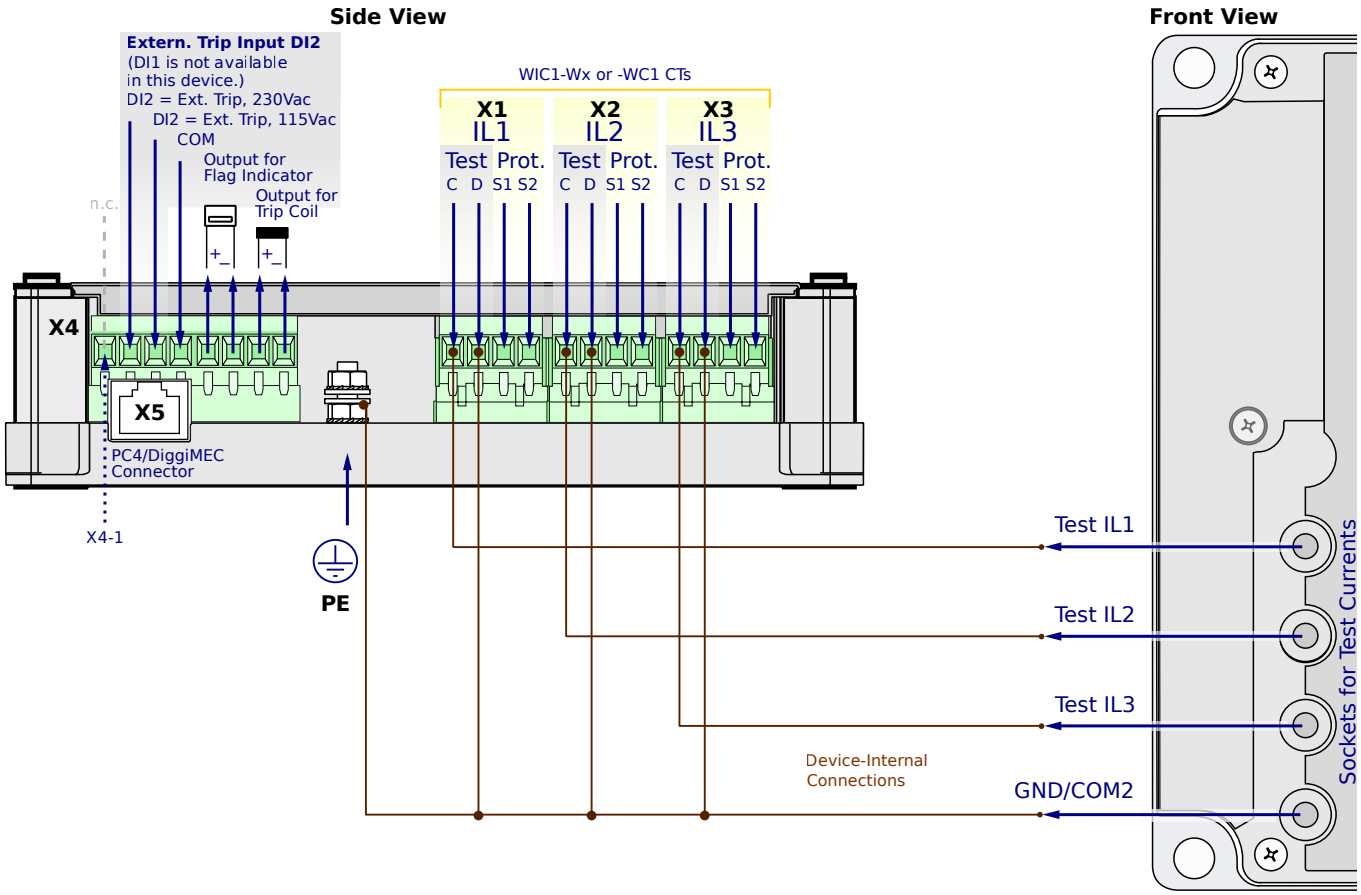


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1SA0

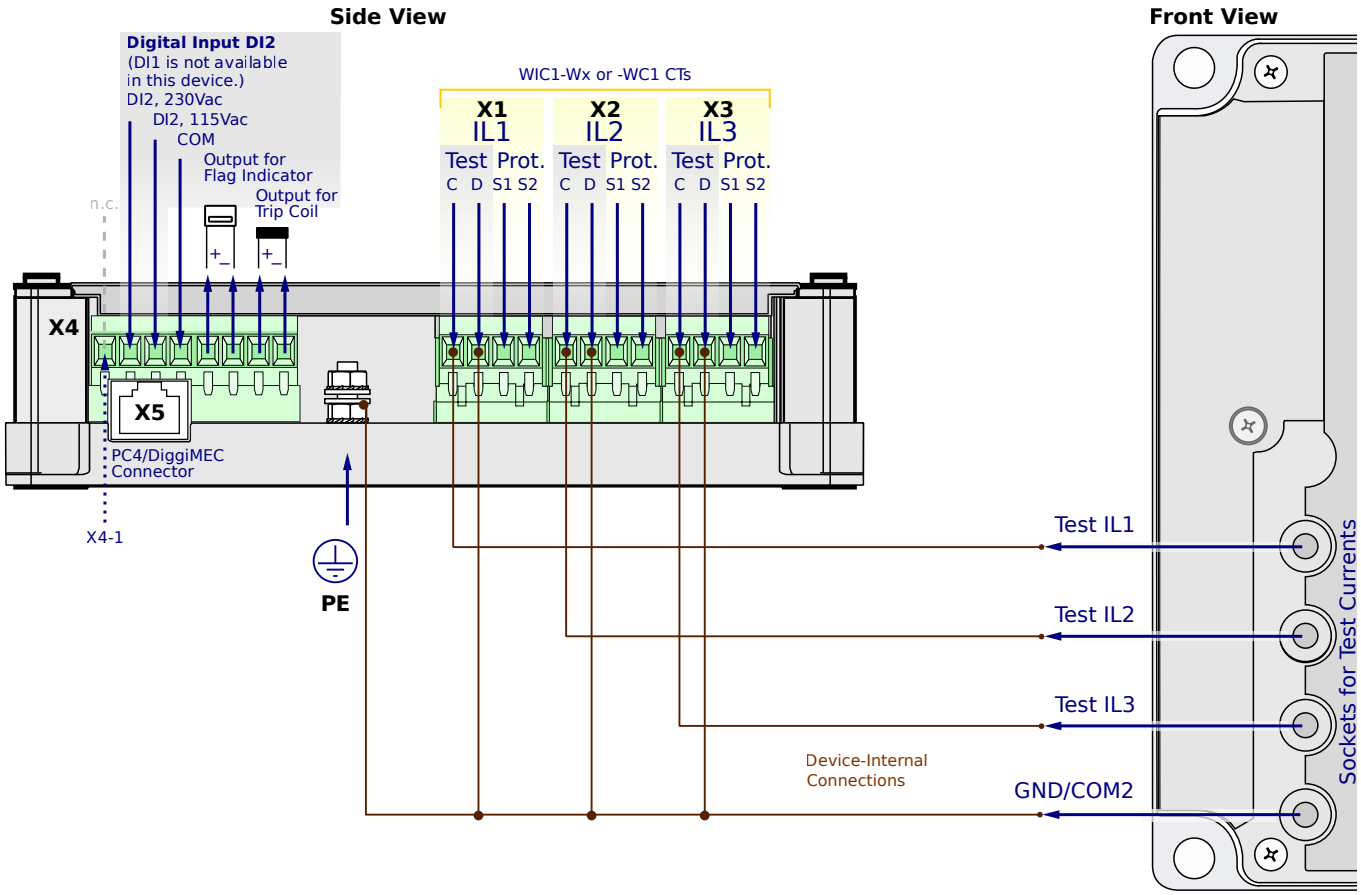


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1SAH

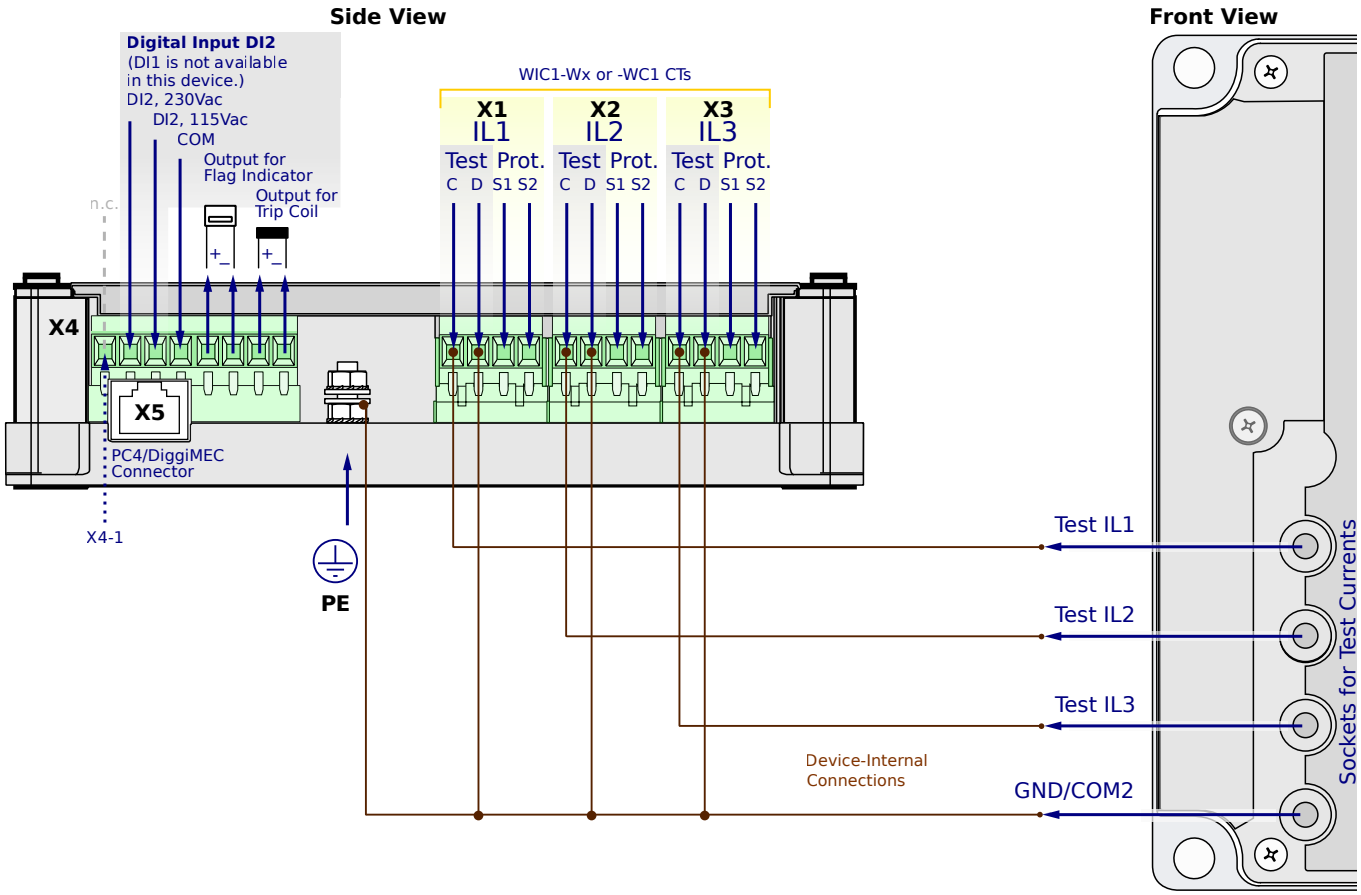


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1AA0

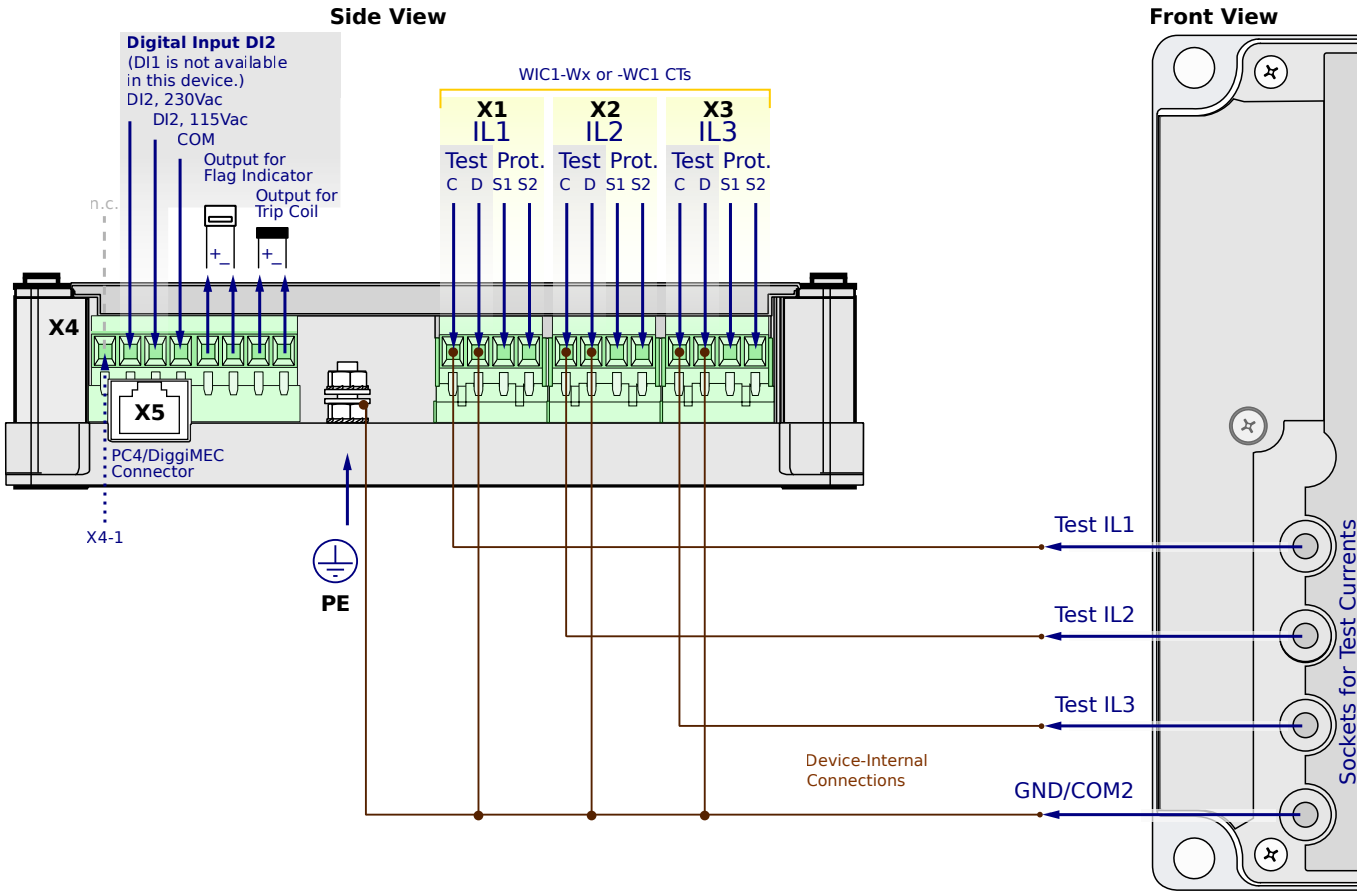


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1AAH

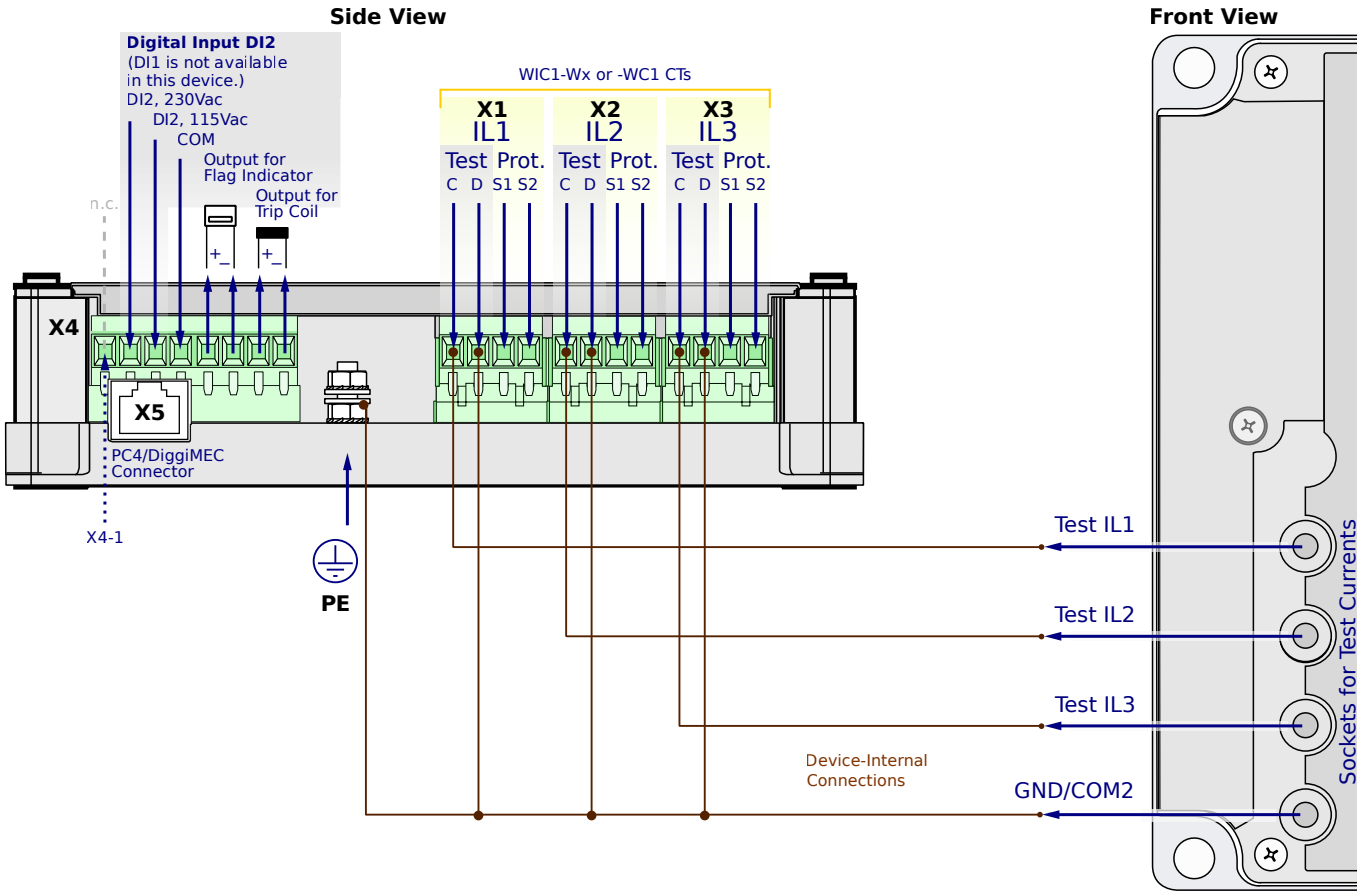


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1PA0

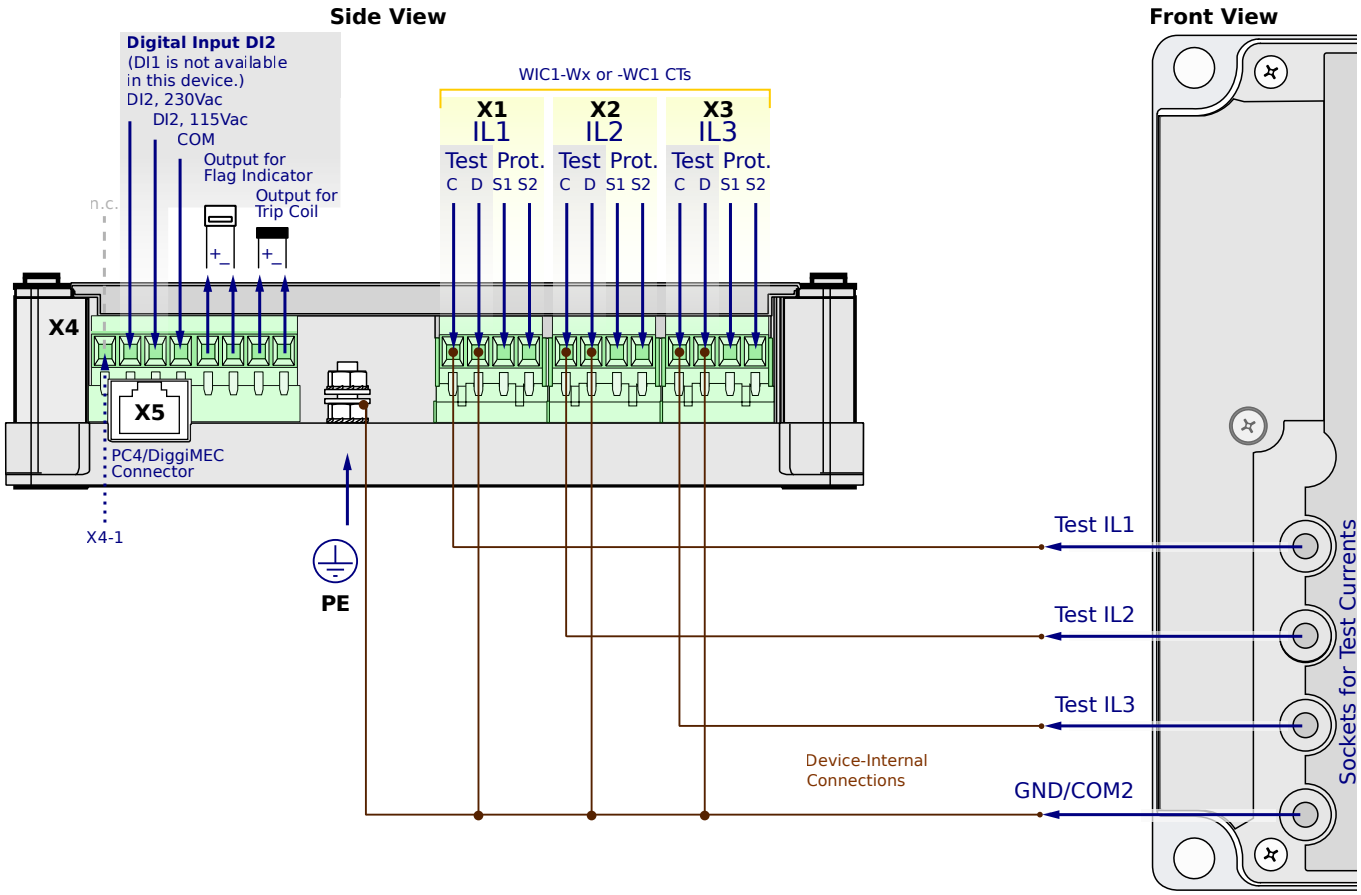


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC1PAH

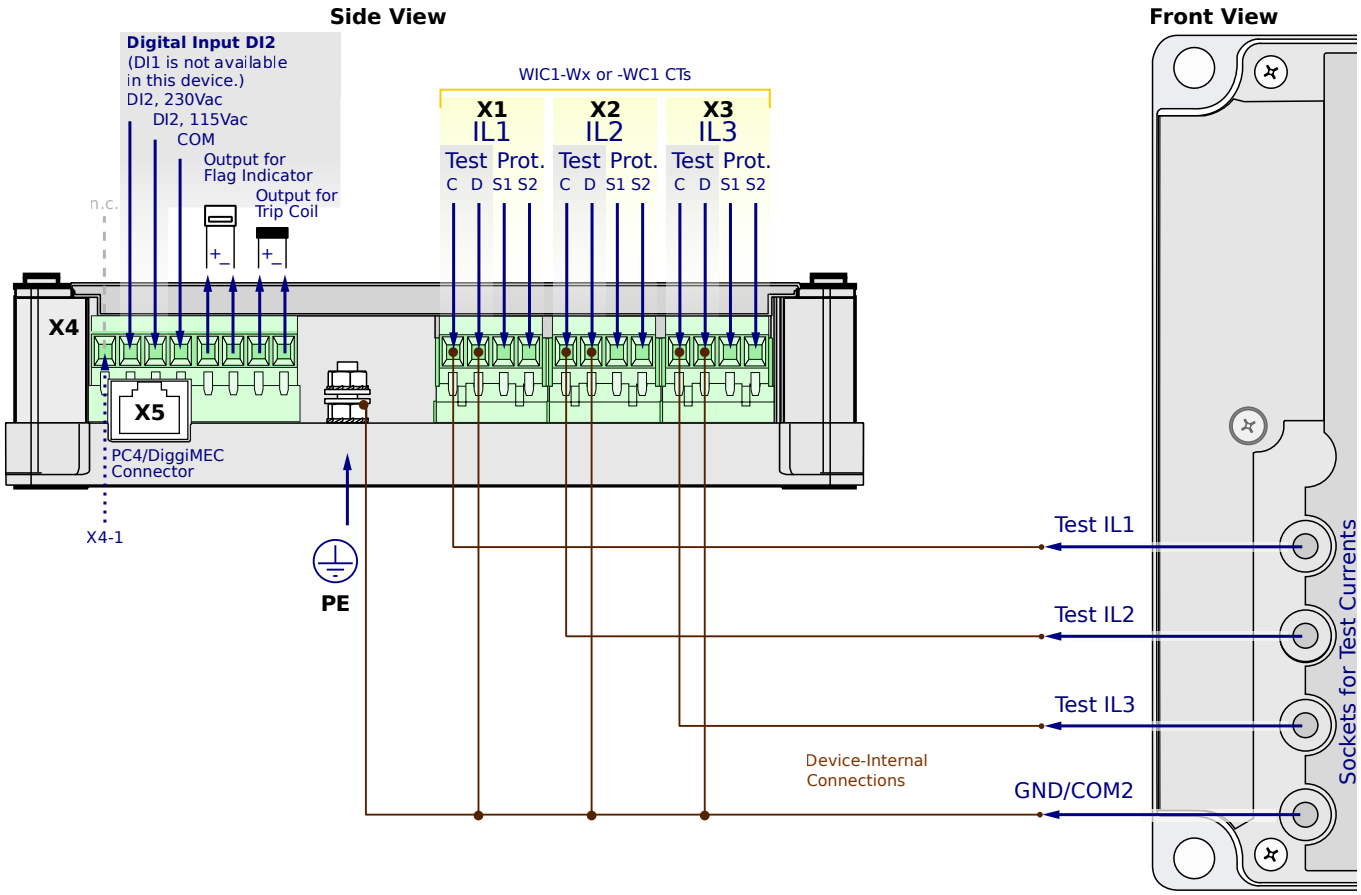


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2SA0

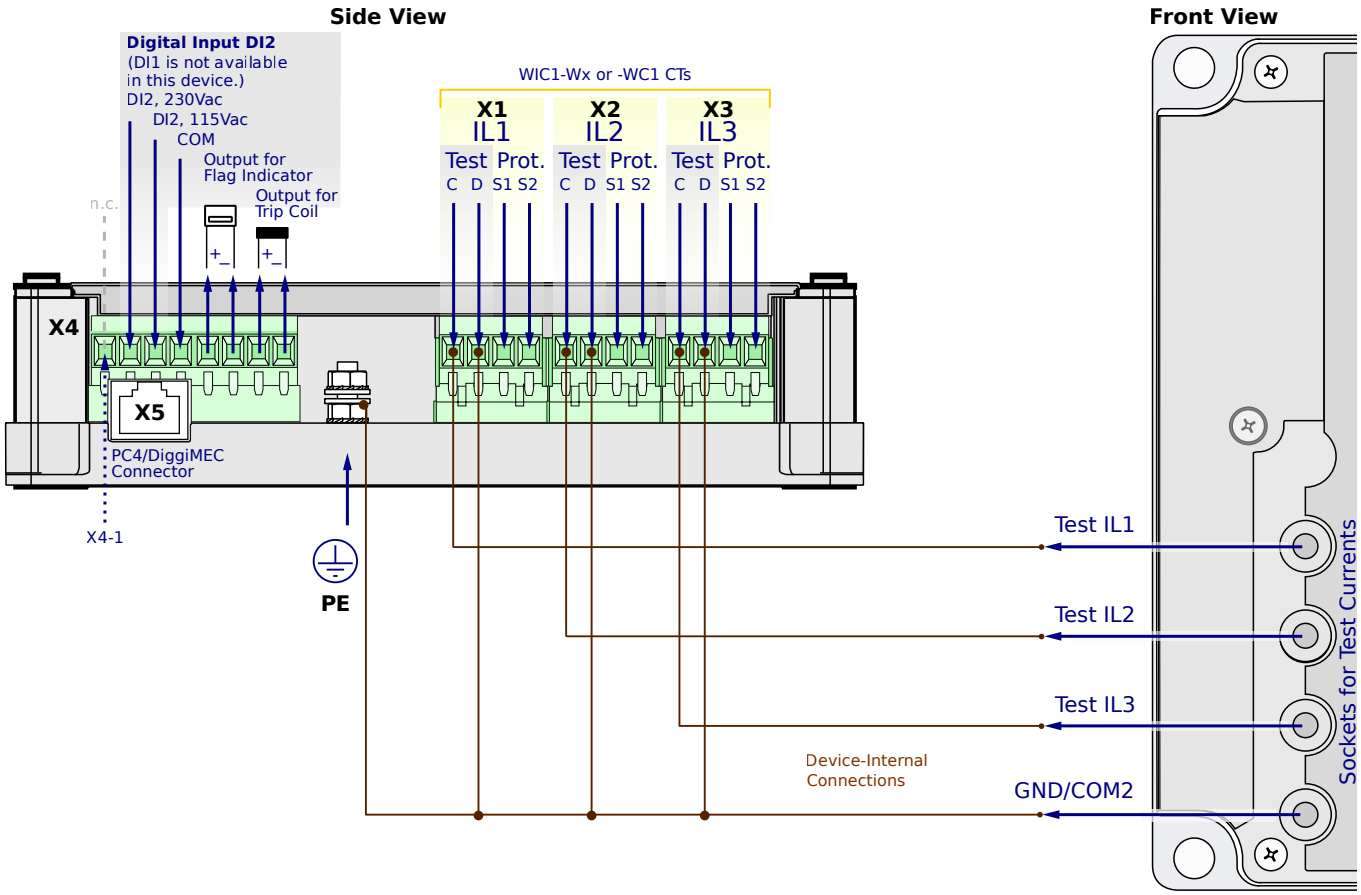


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2SAH

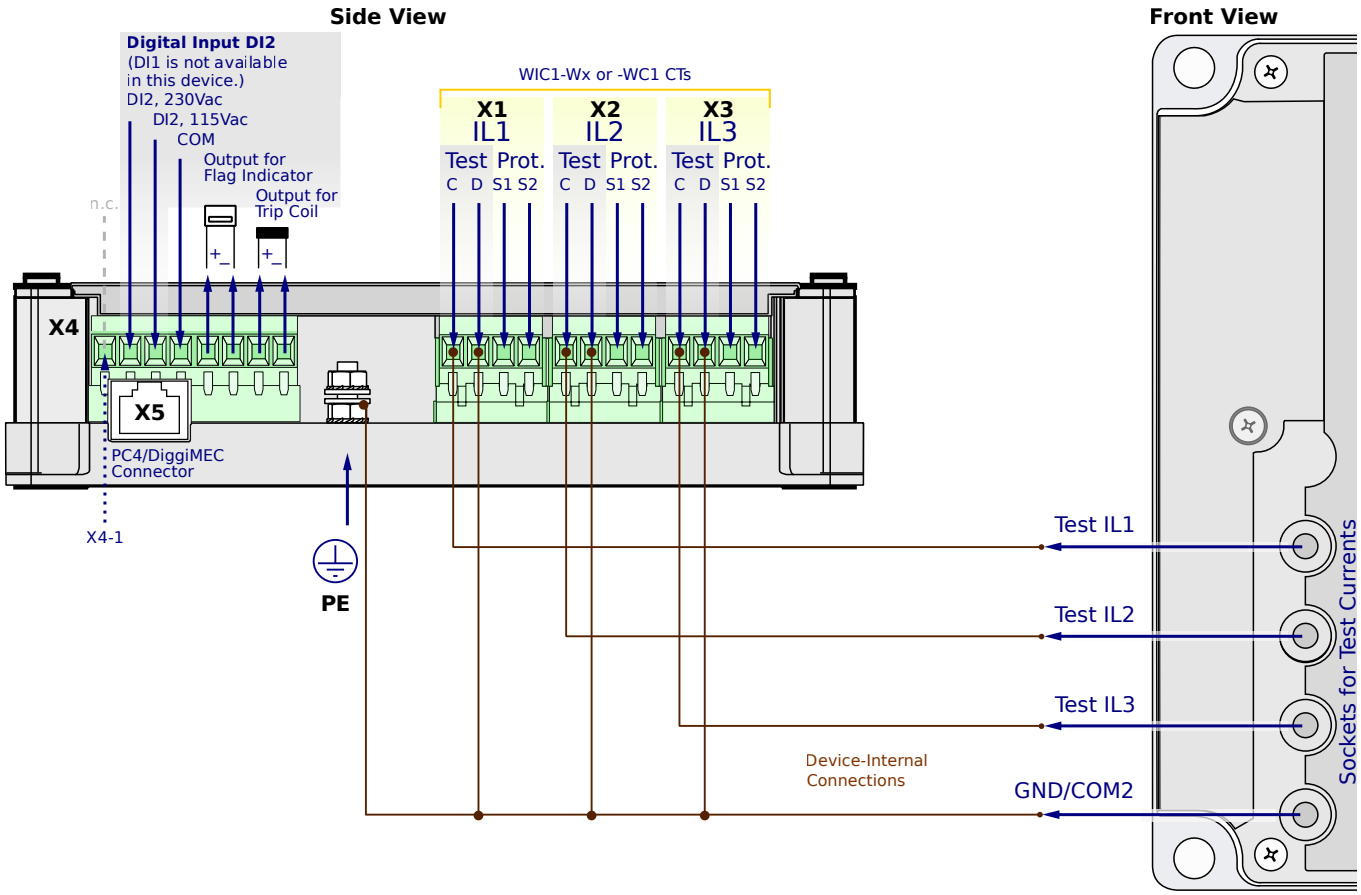


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2AA0

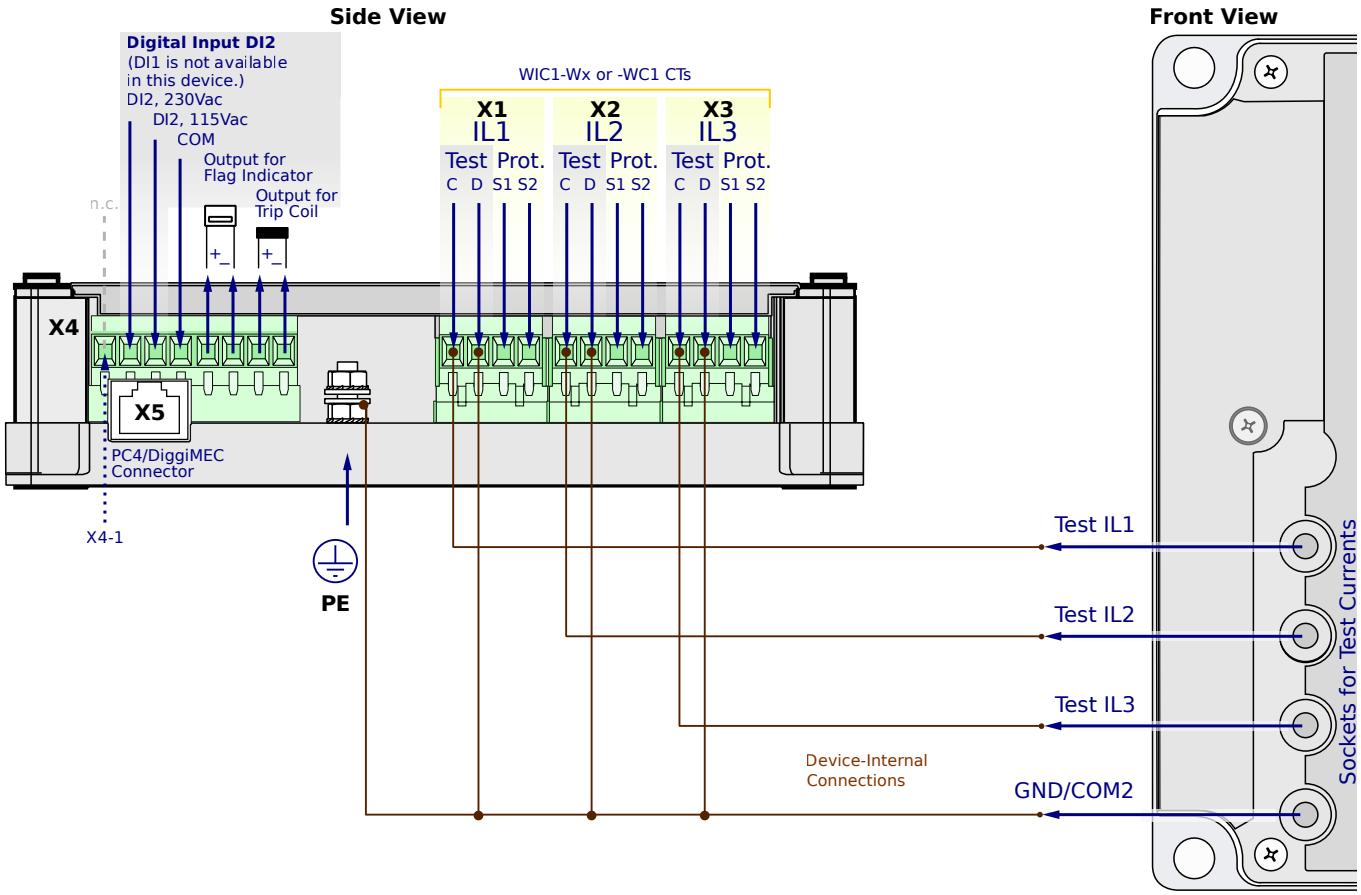


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2AAH

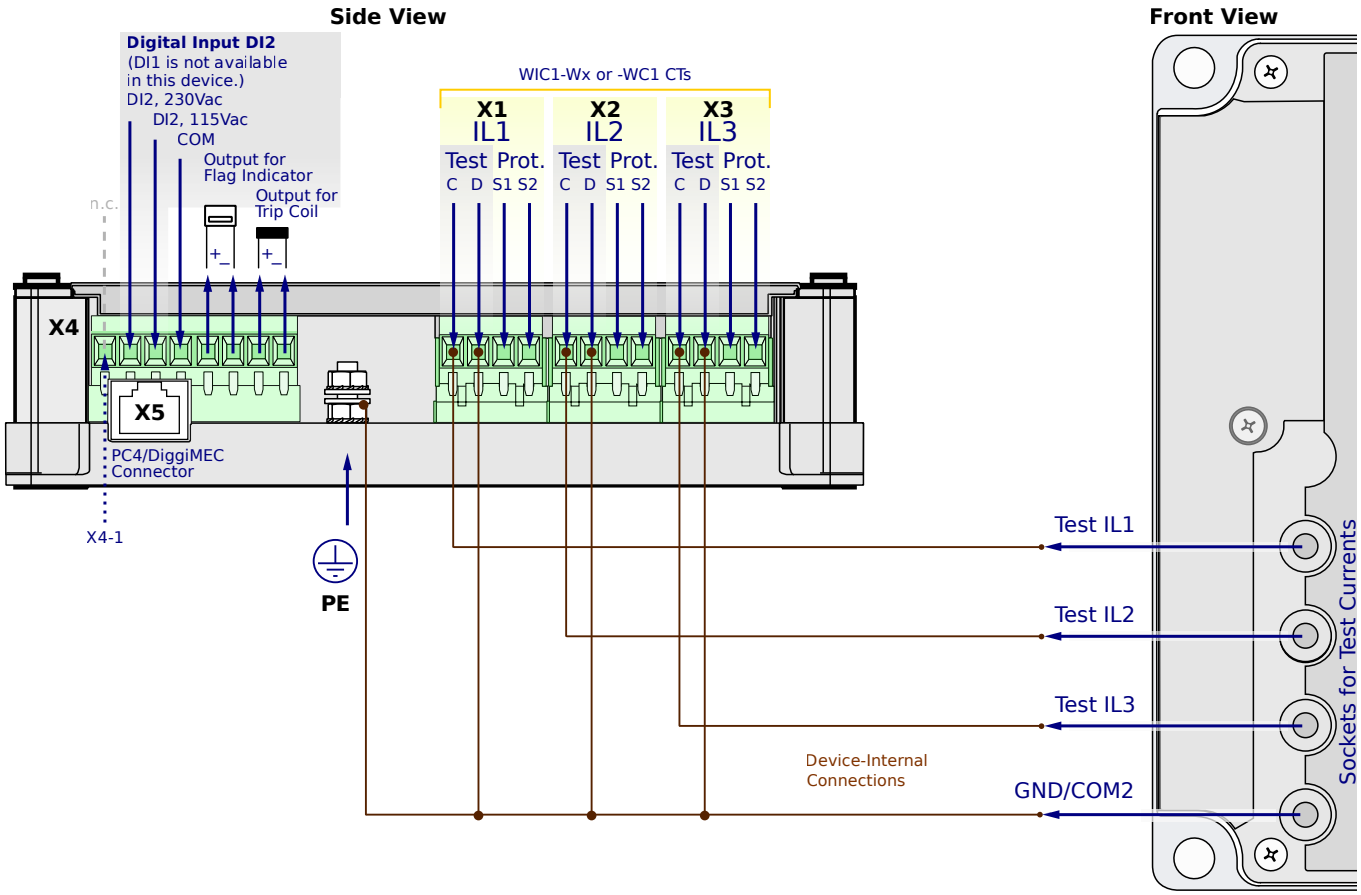


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2PA0

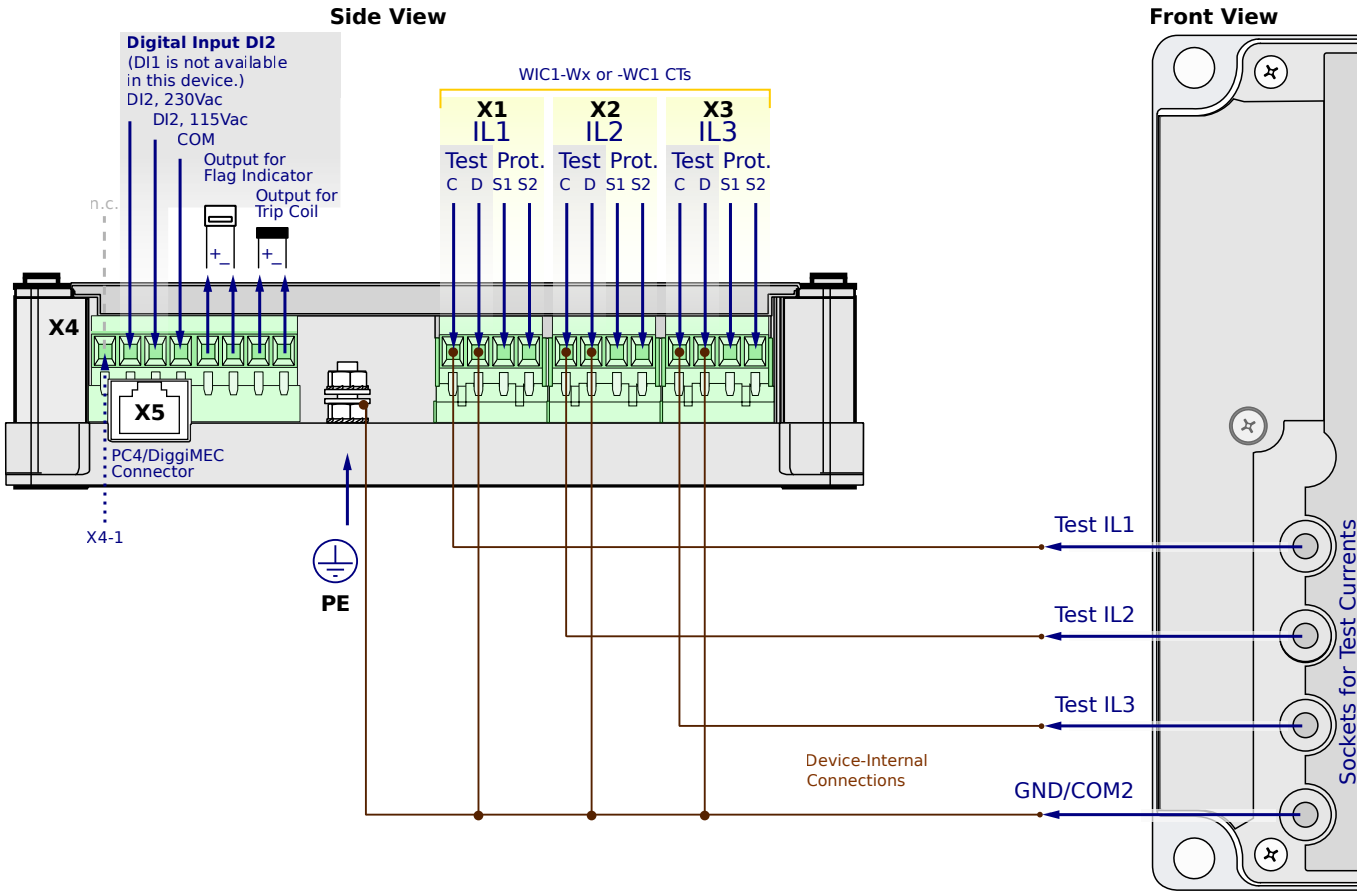


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0FC2PAH

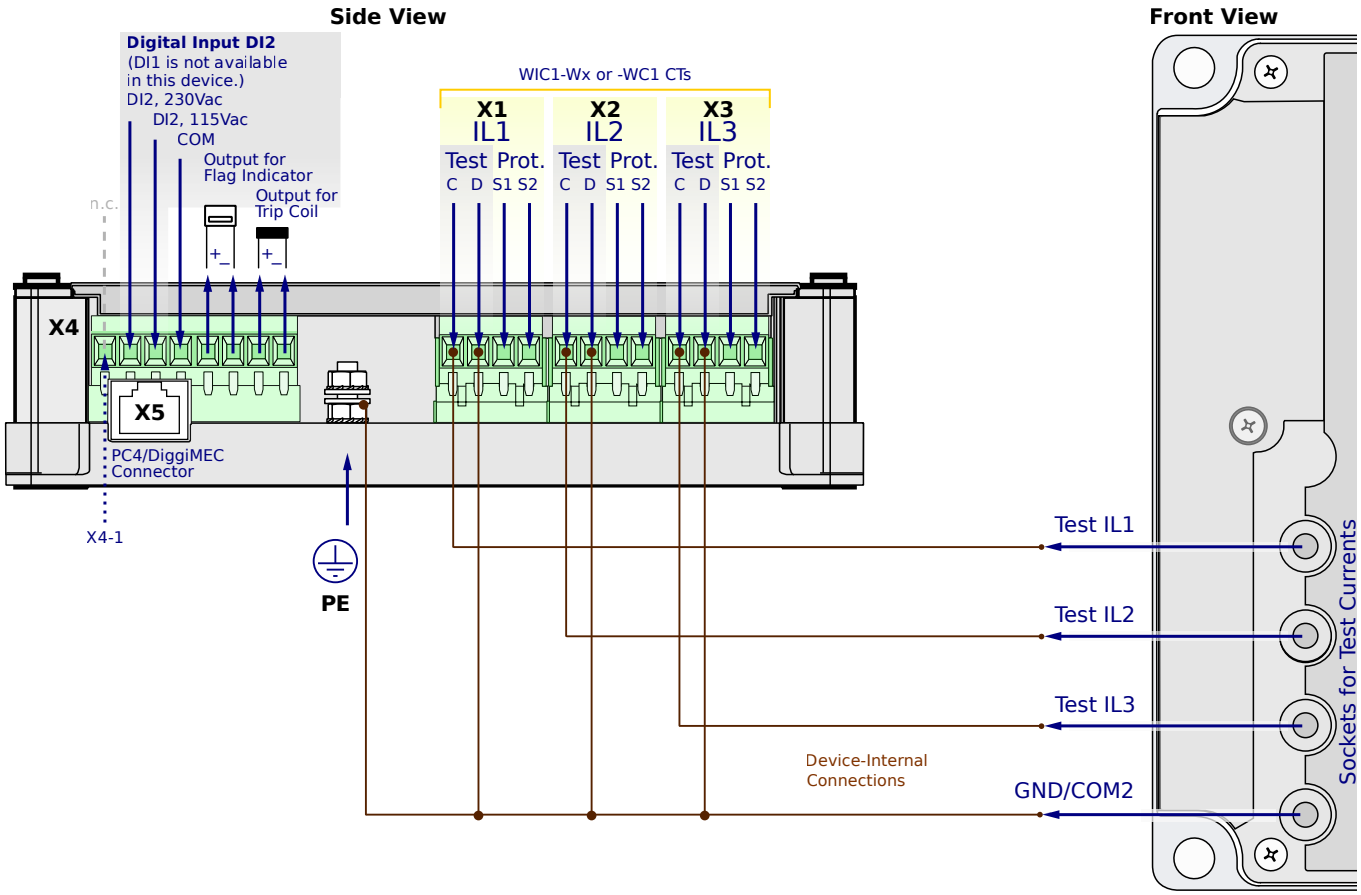


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1SA0

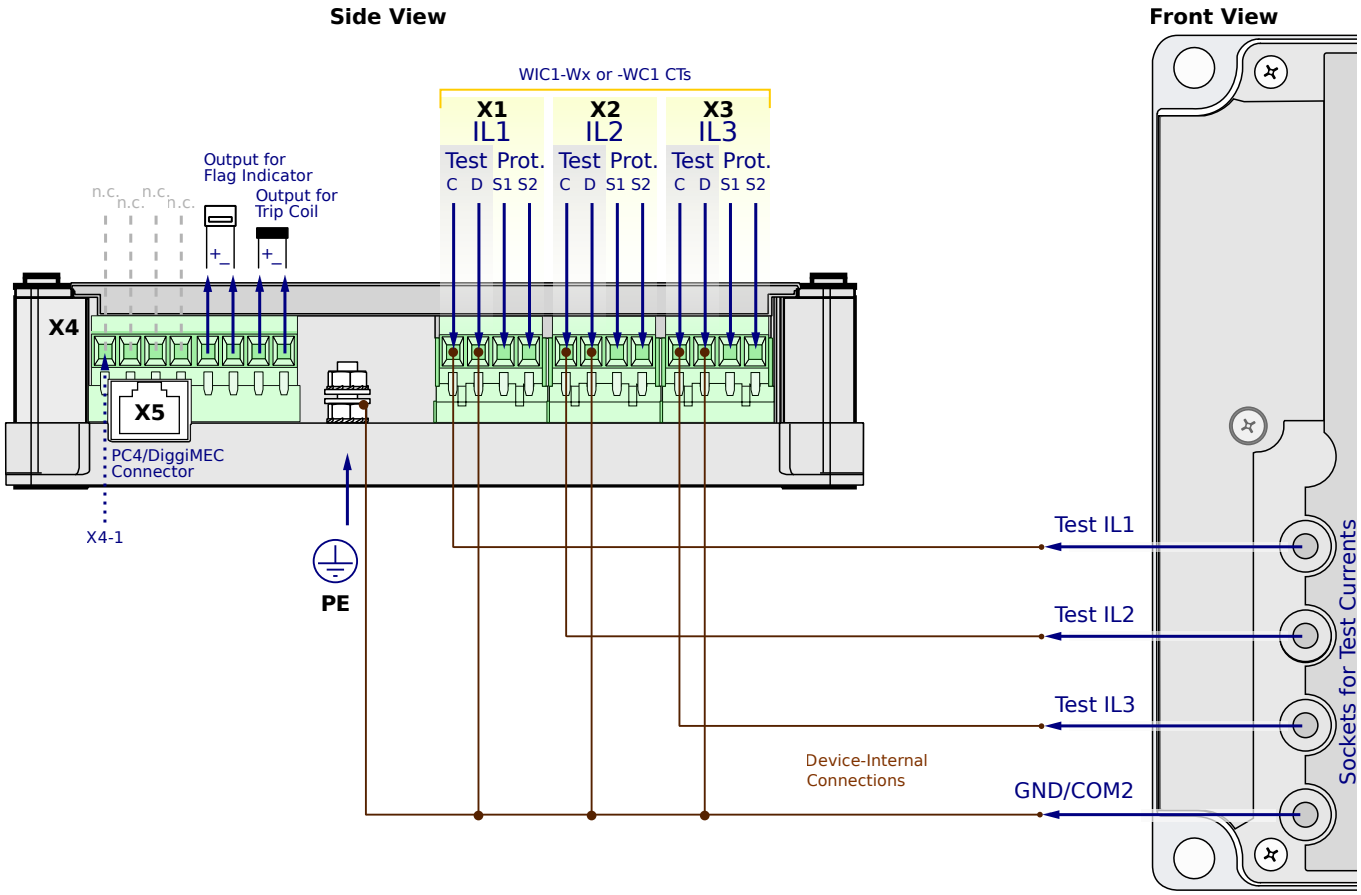


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1SAH

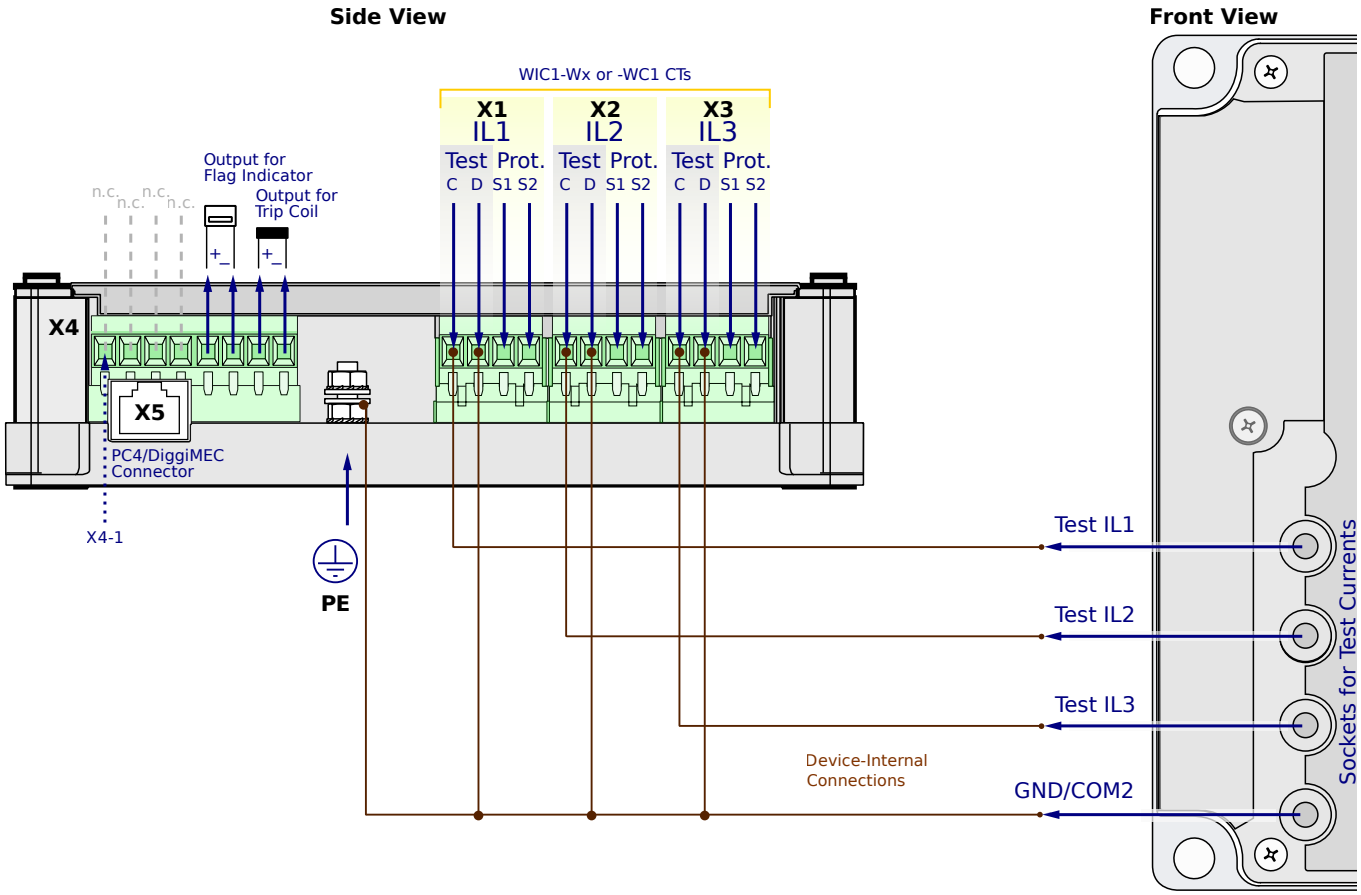


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1AA0

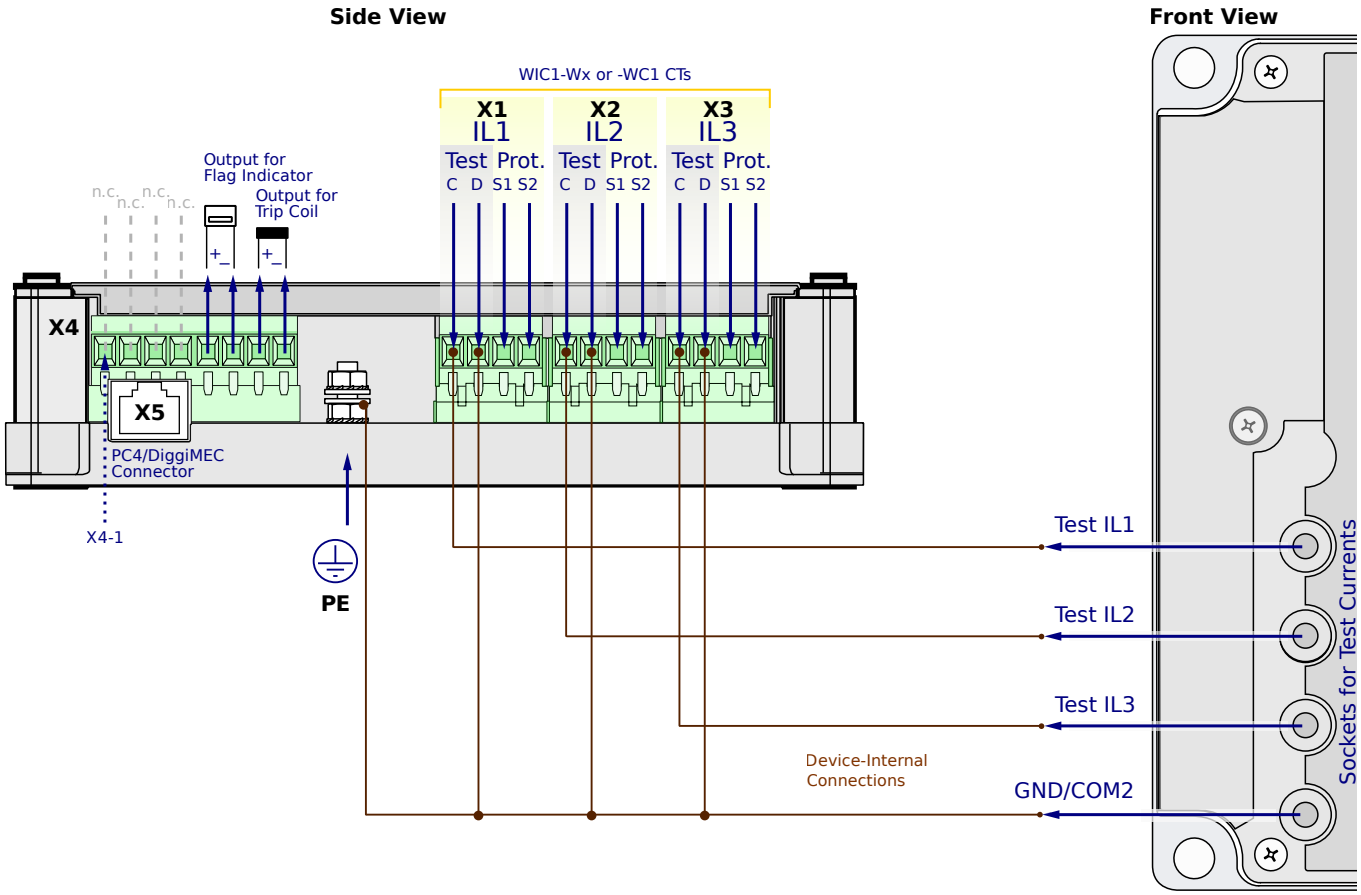


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1AAH

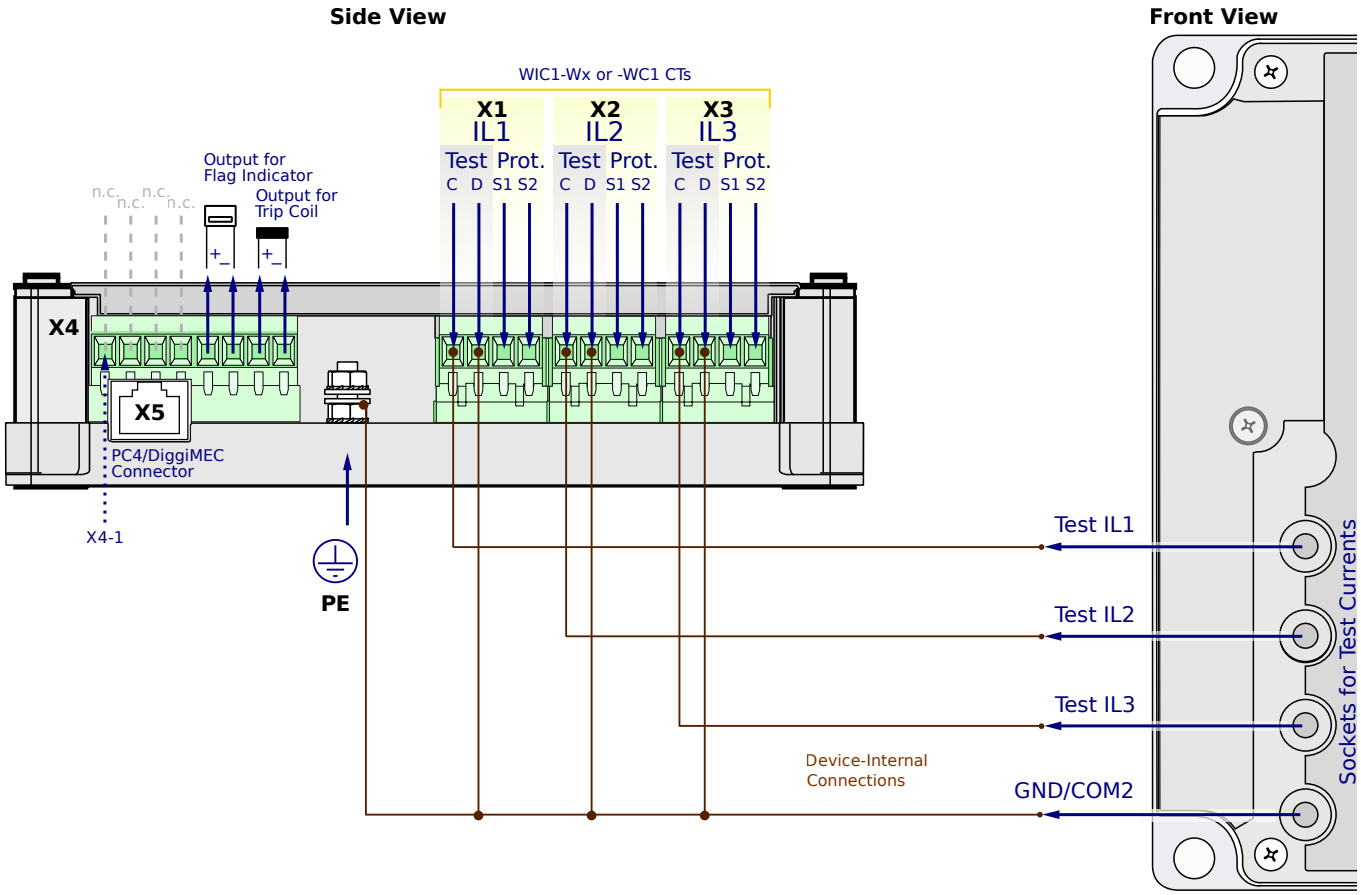


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1PA0

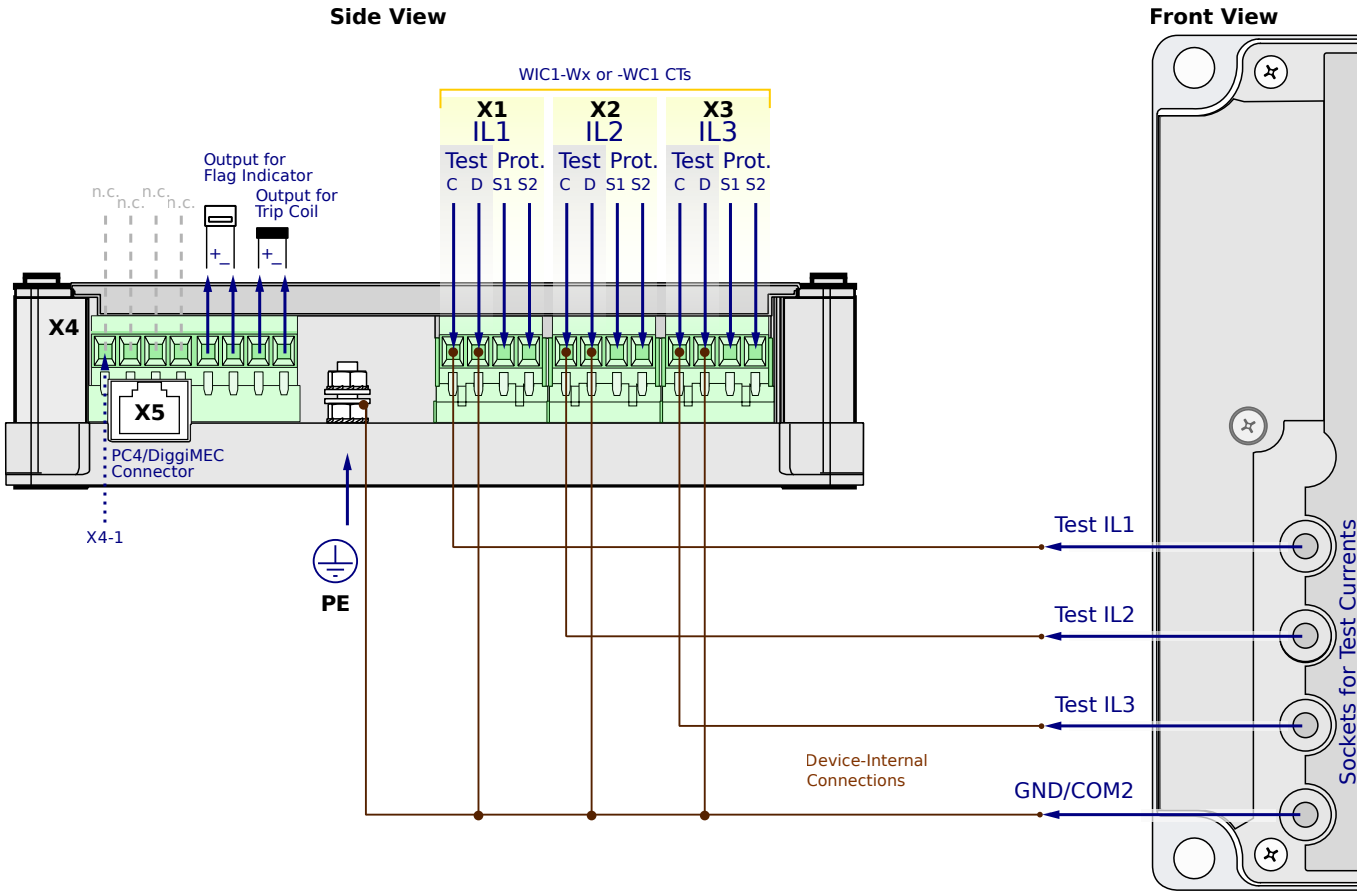


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN1PAH

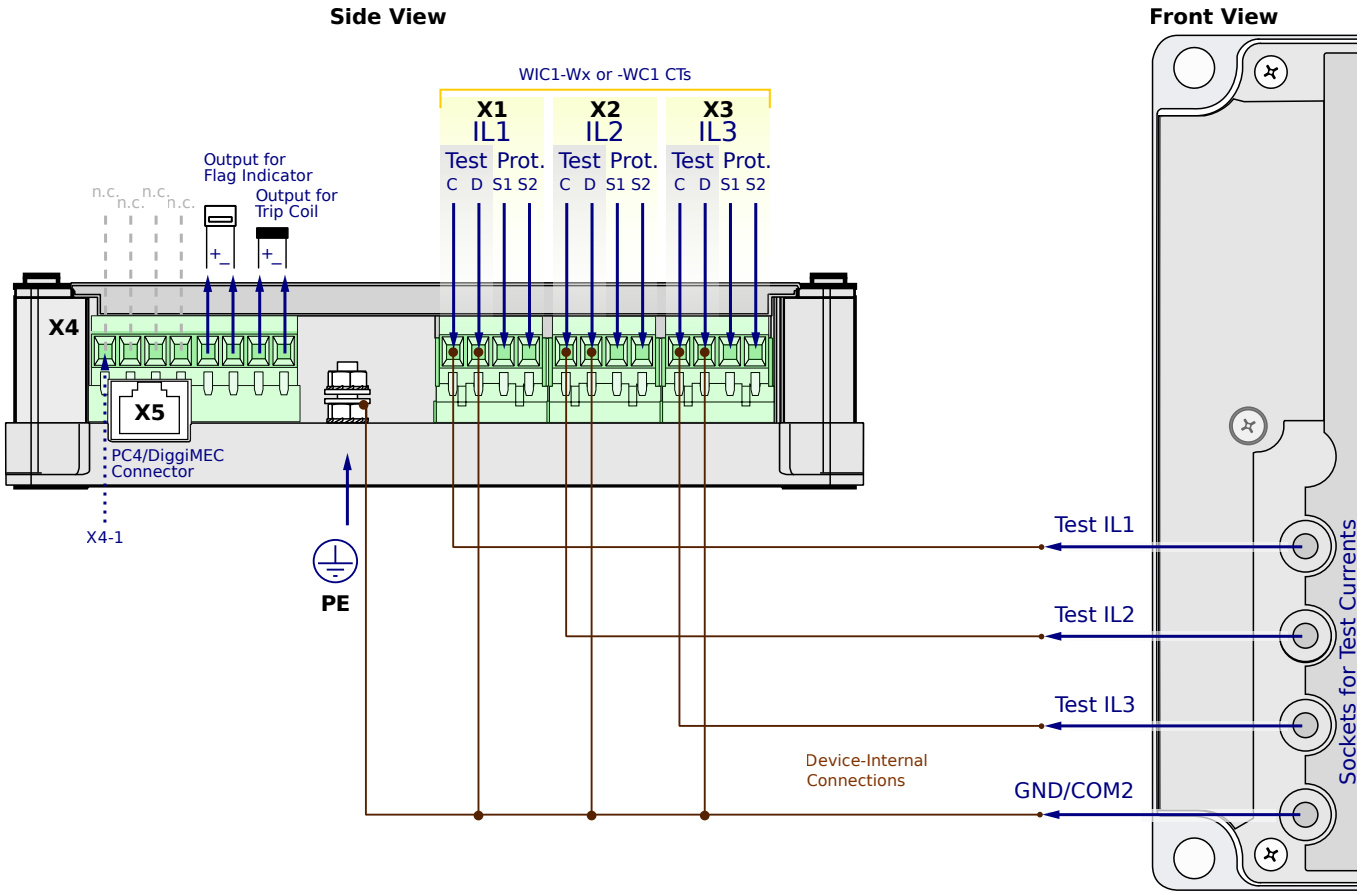


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2SA0

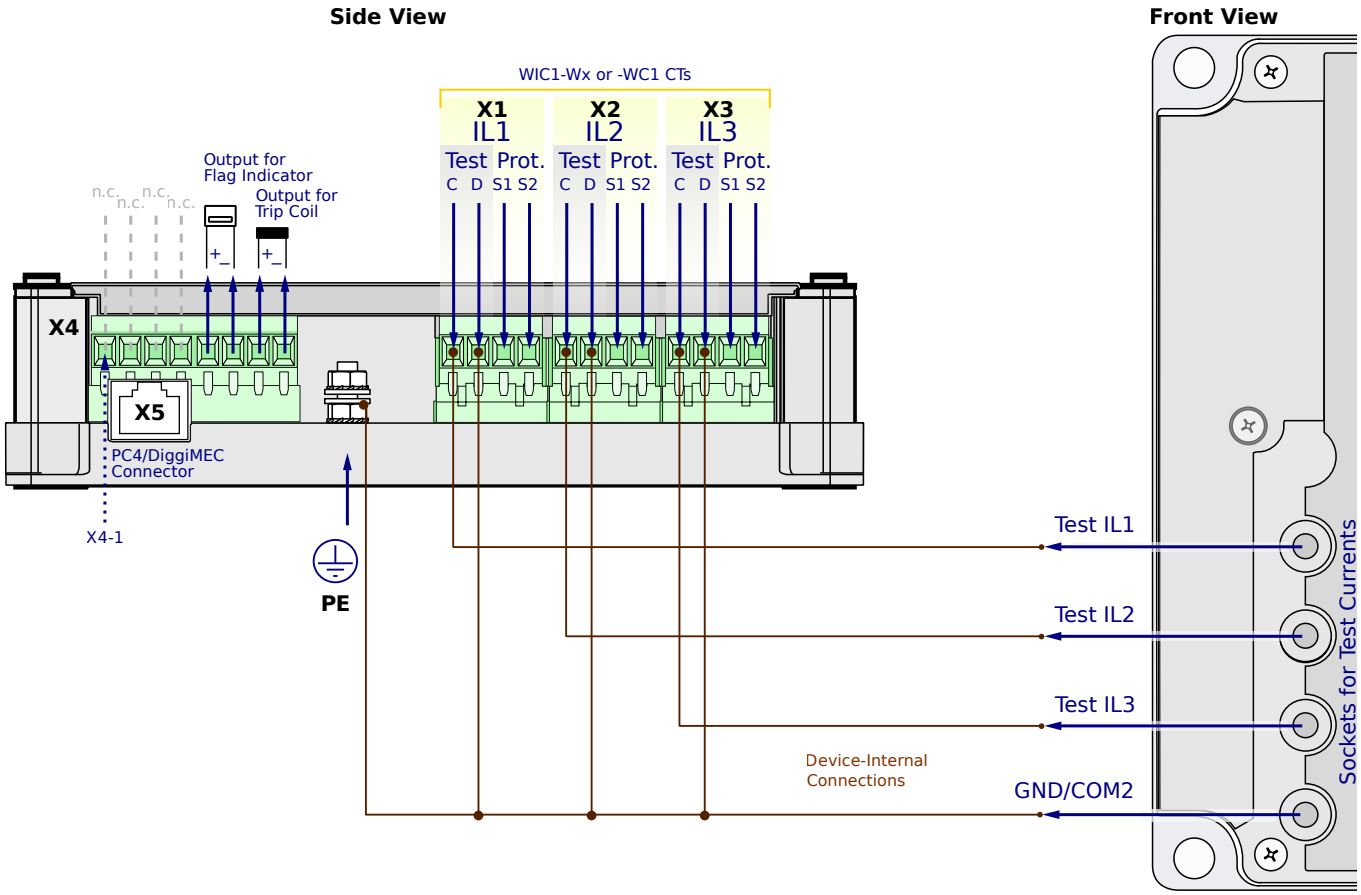


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2SAH

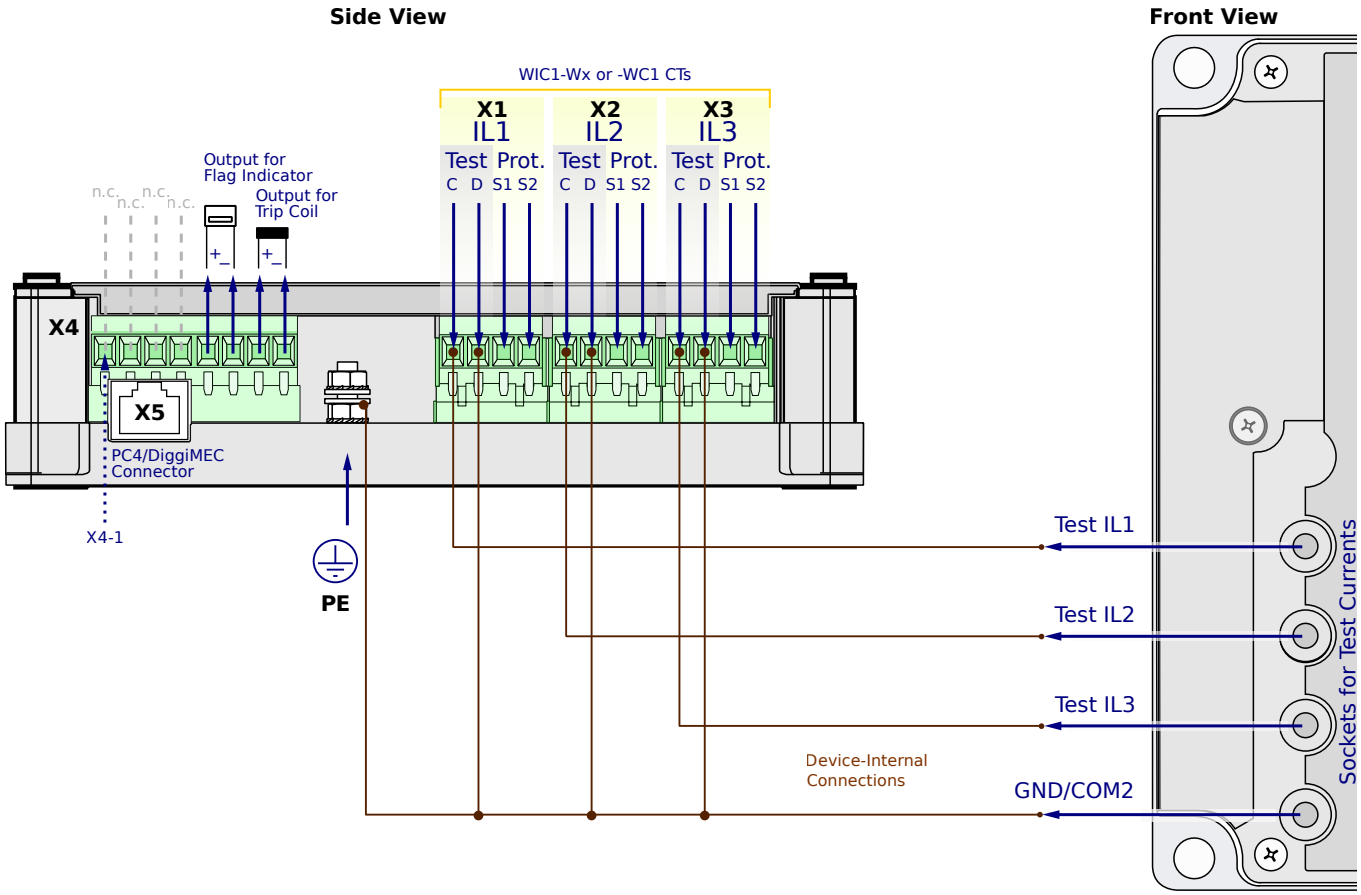


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2AA0

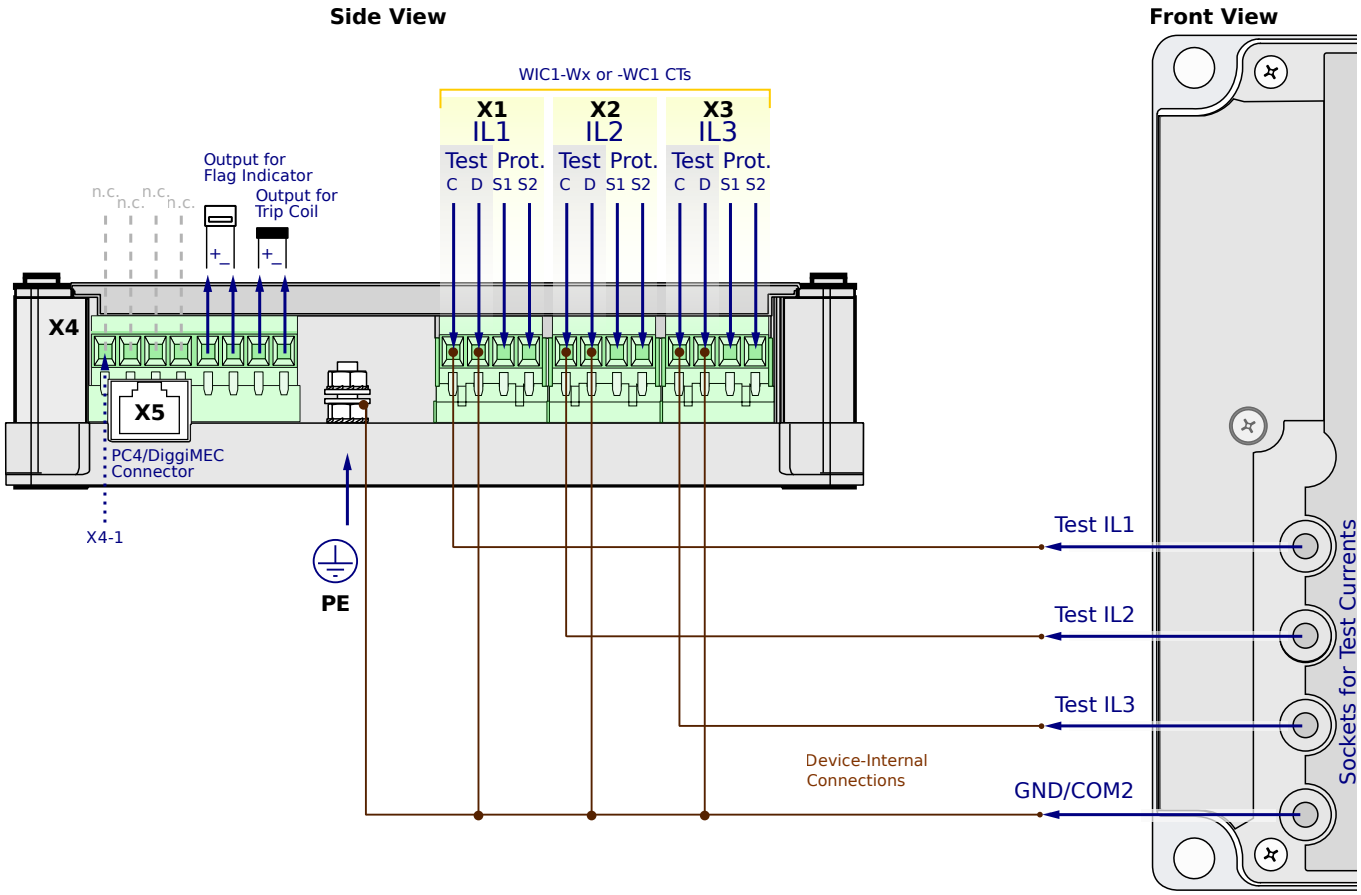


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2AAH

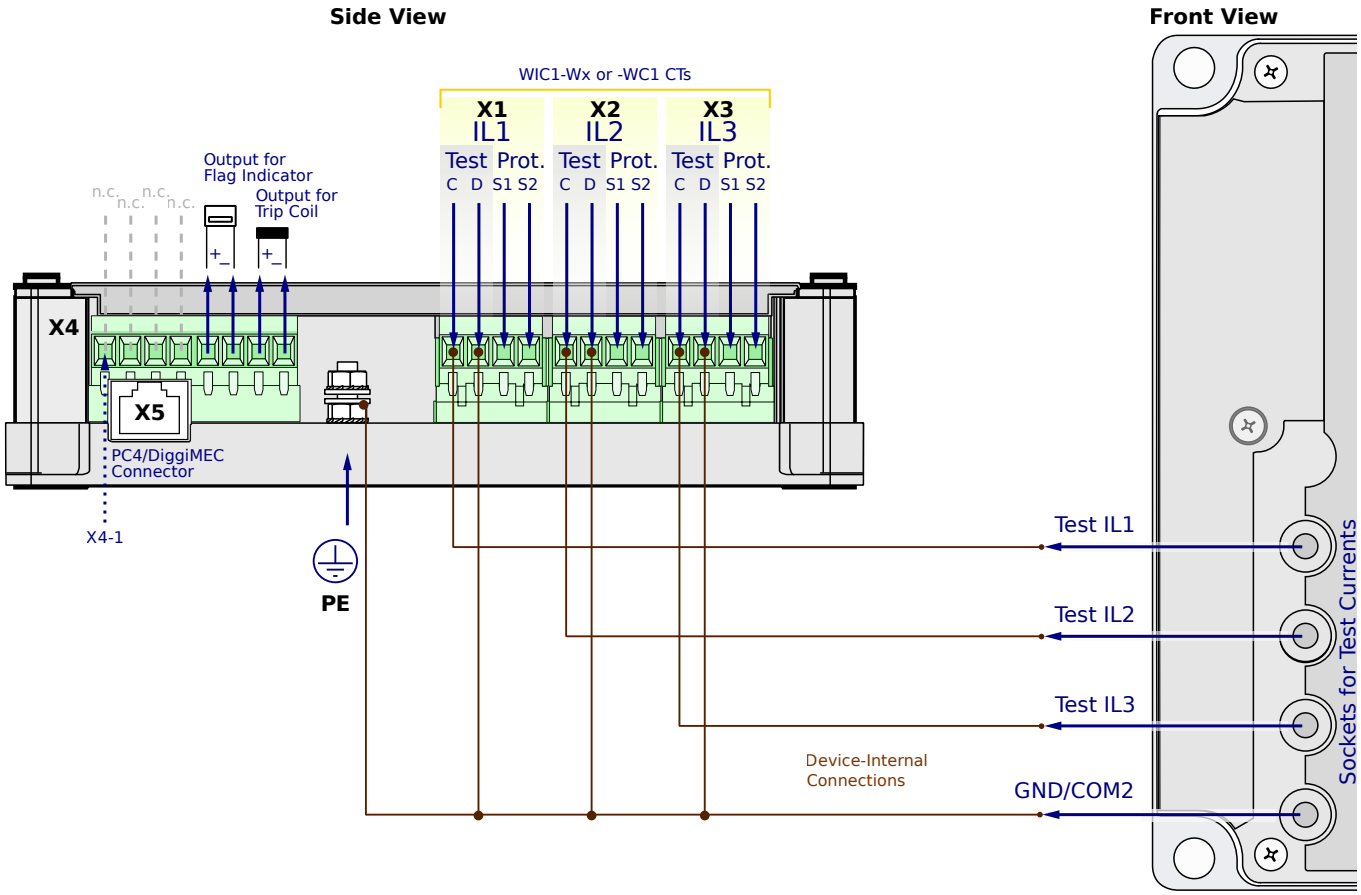


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2PA0

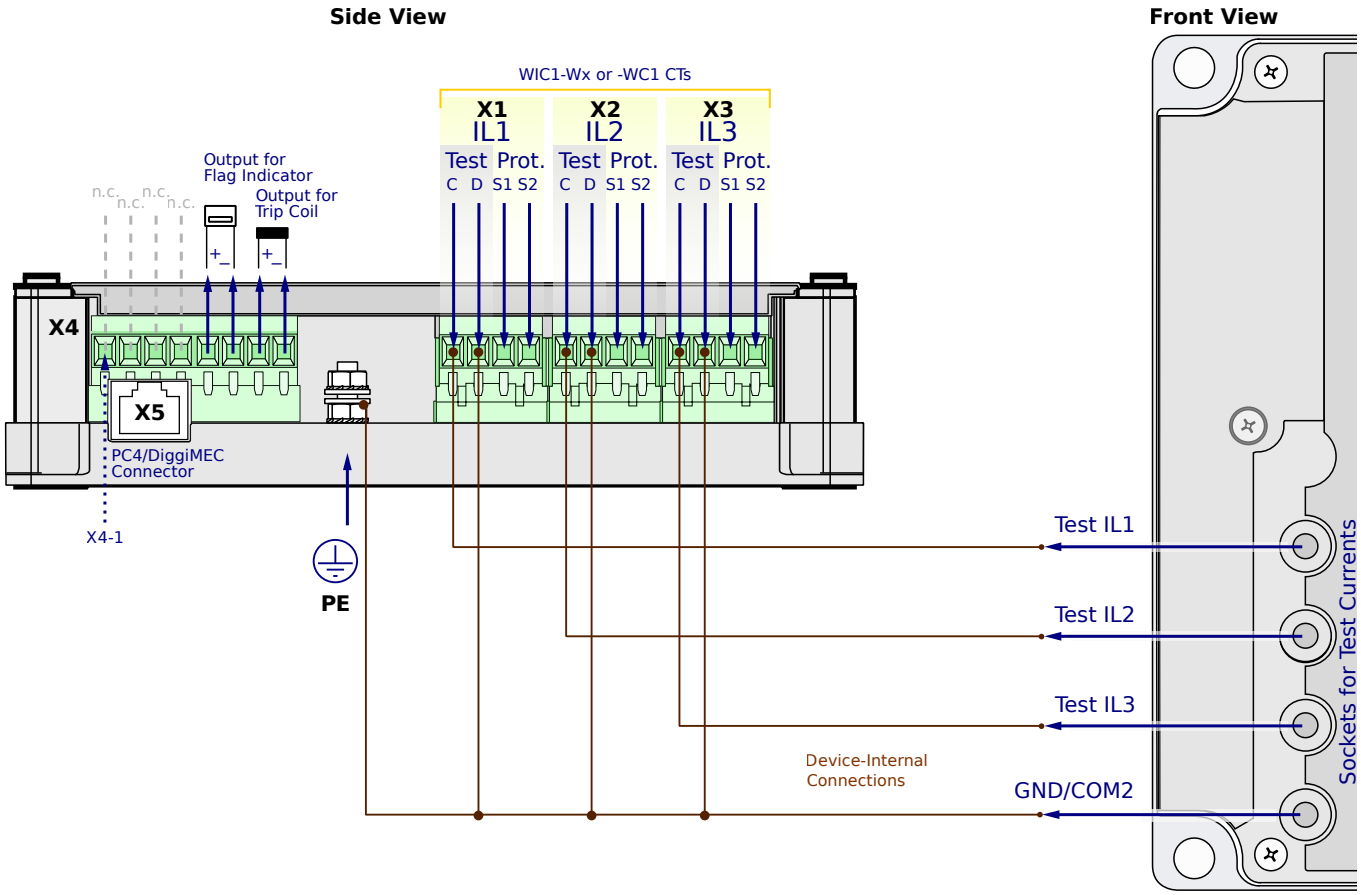


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CN2PAH

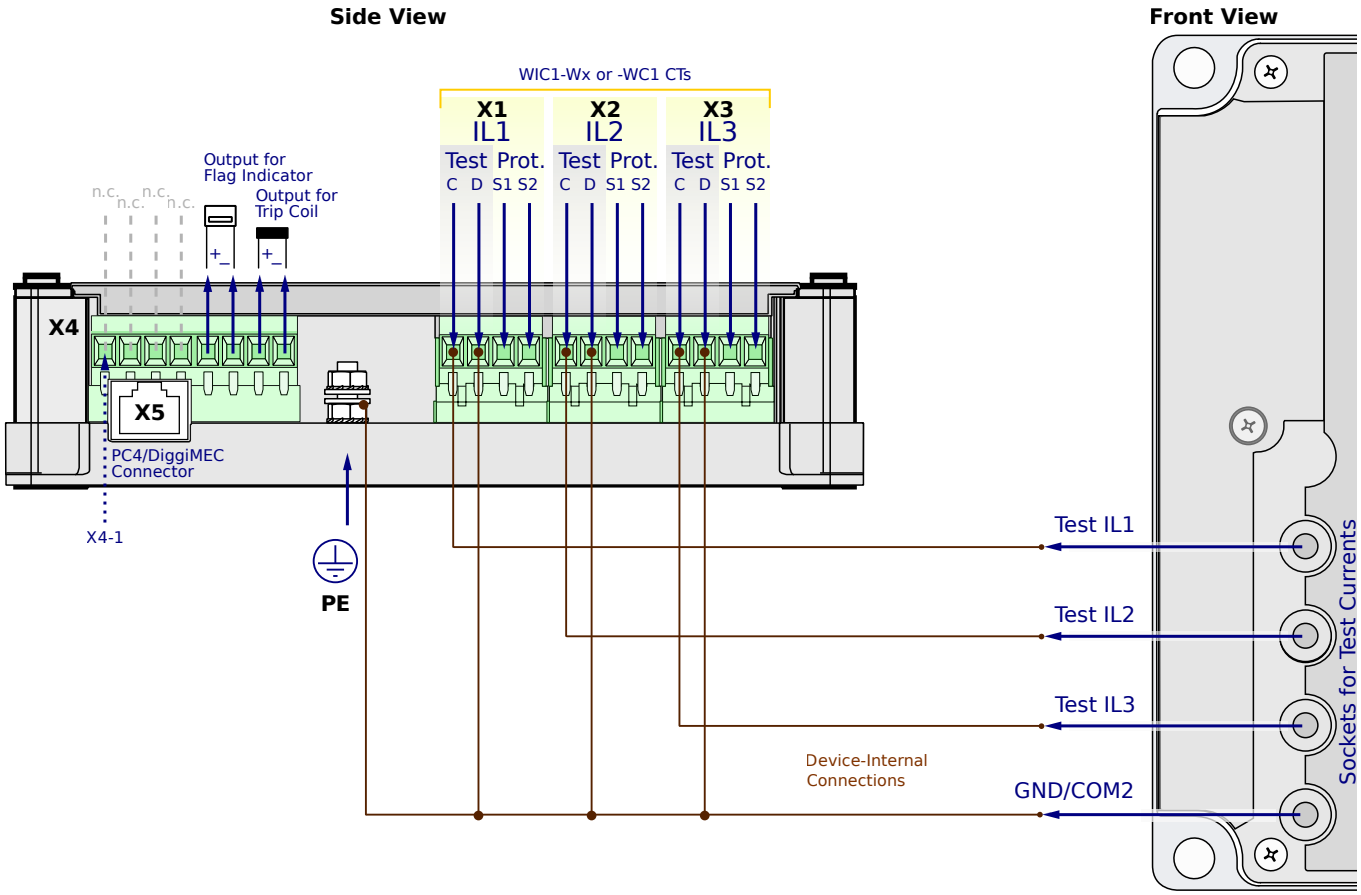


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1SA0

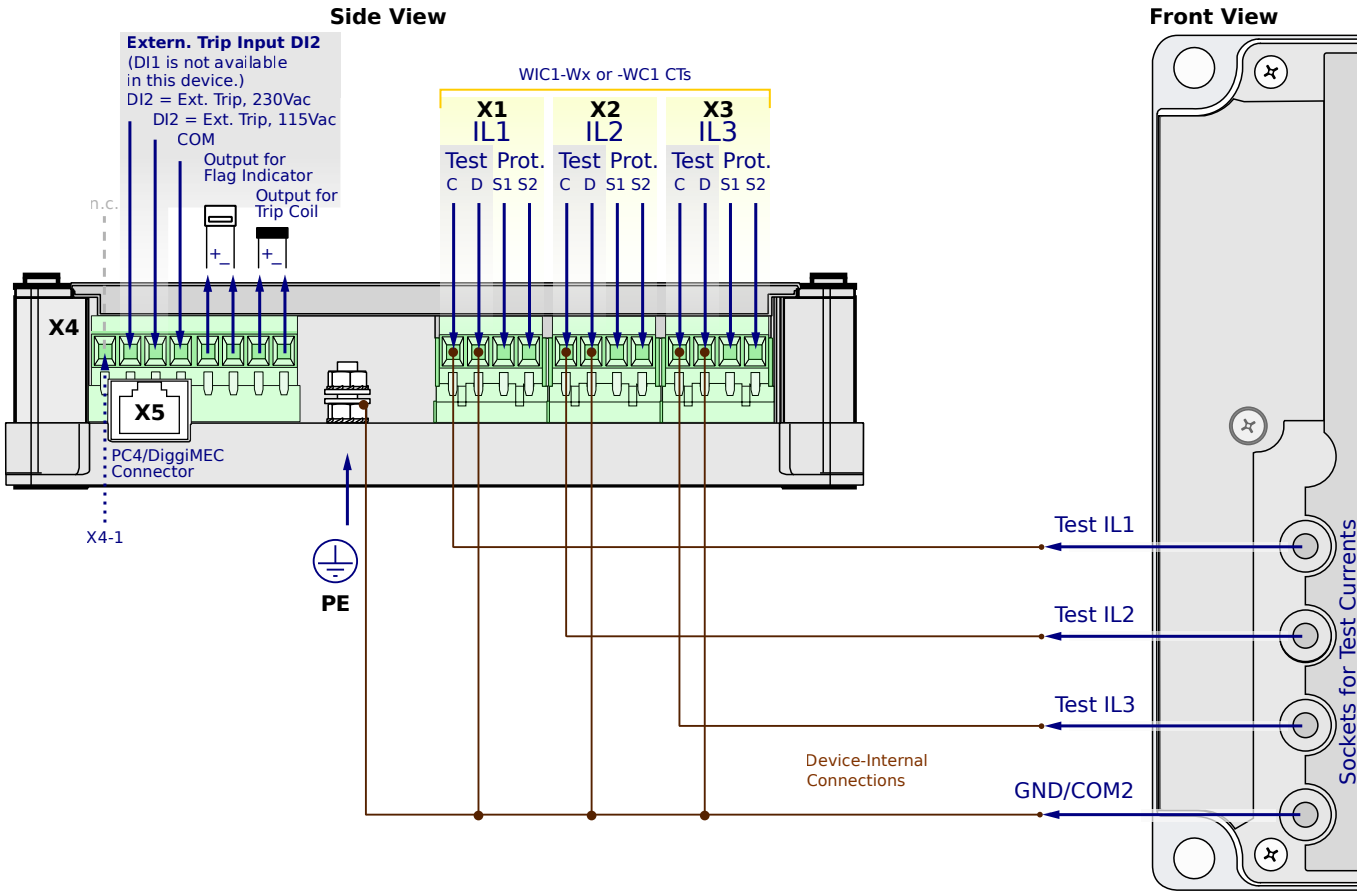


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1SAH

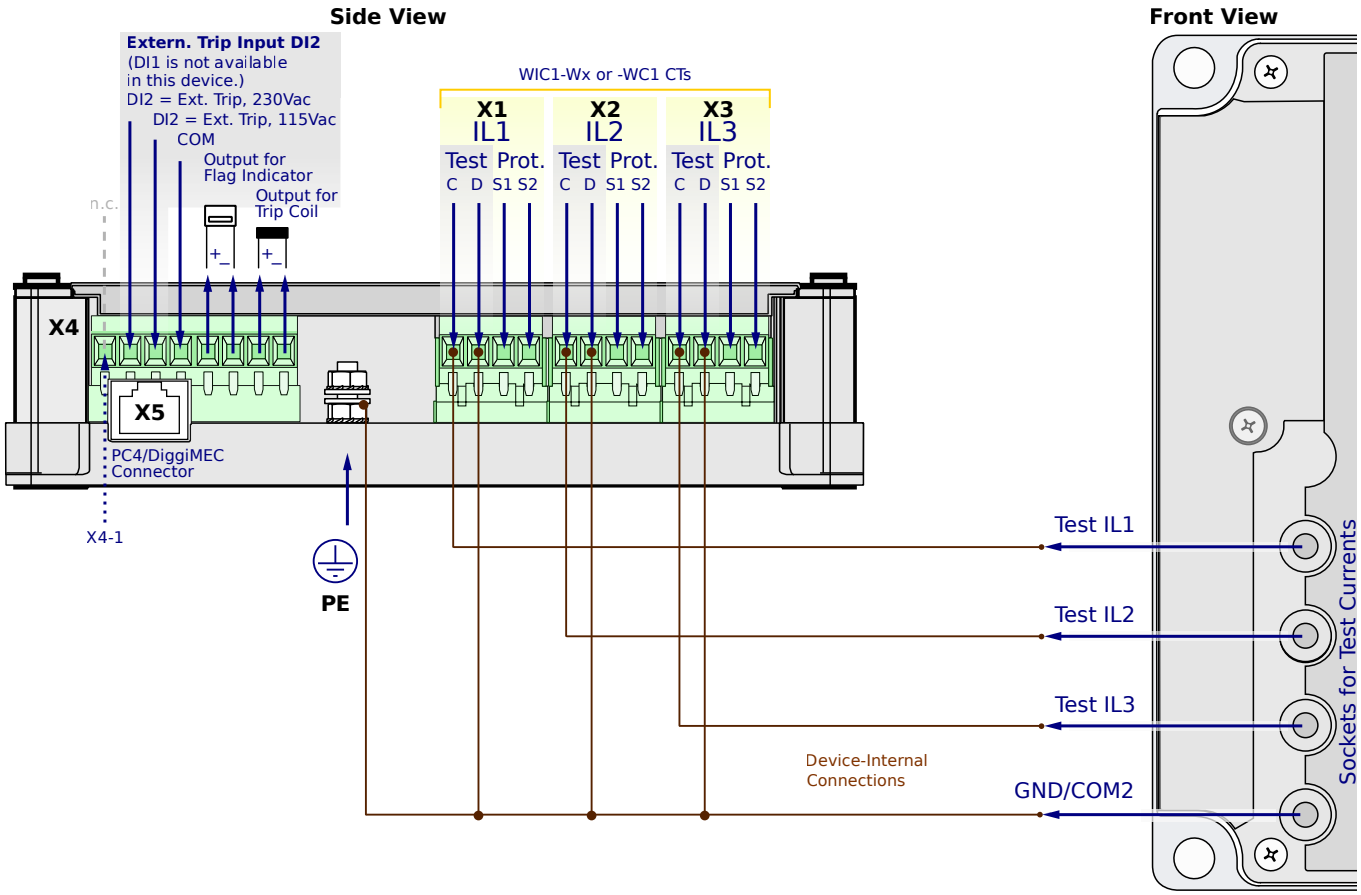


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1AA0

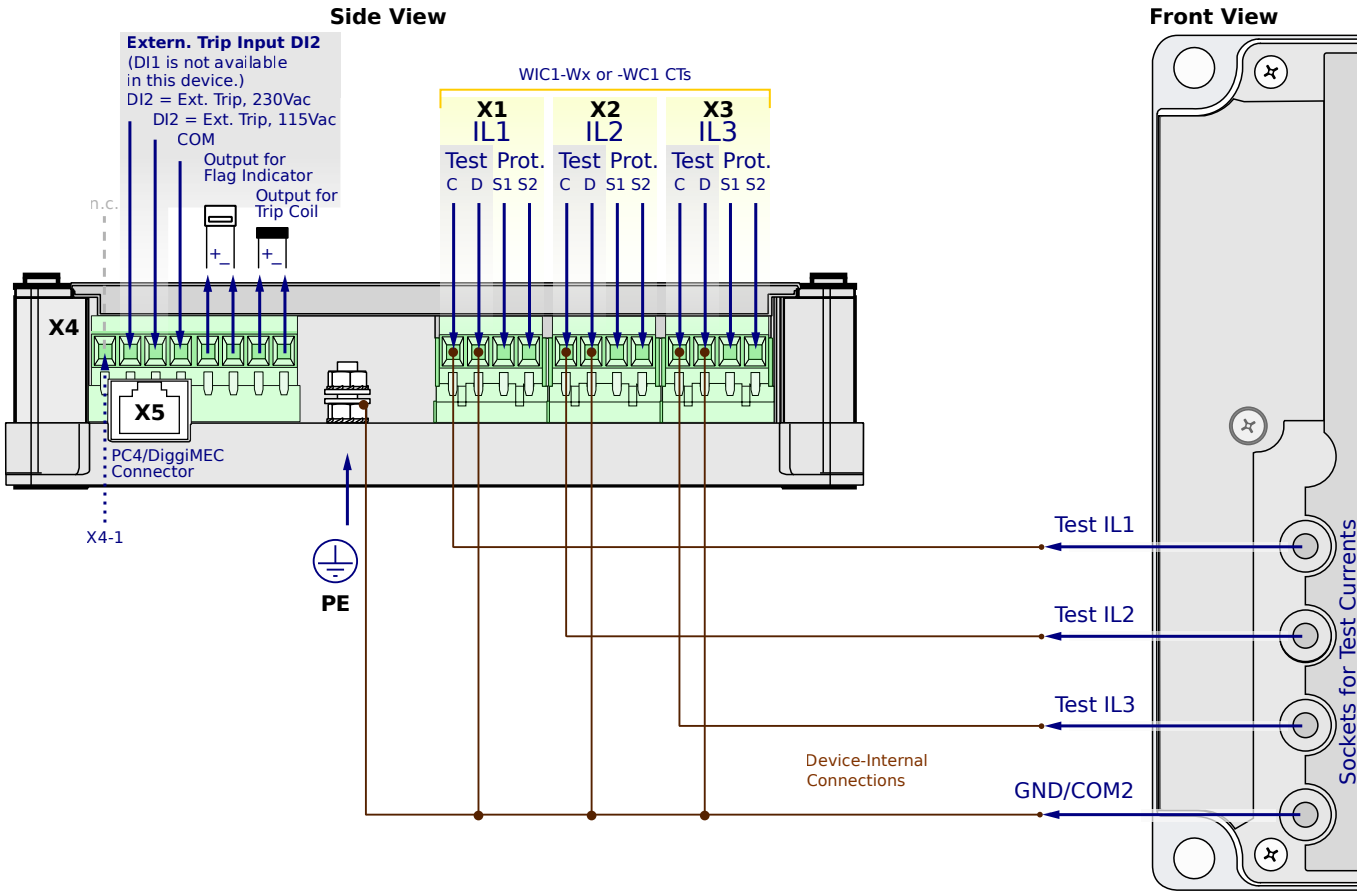


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1AAH

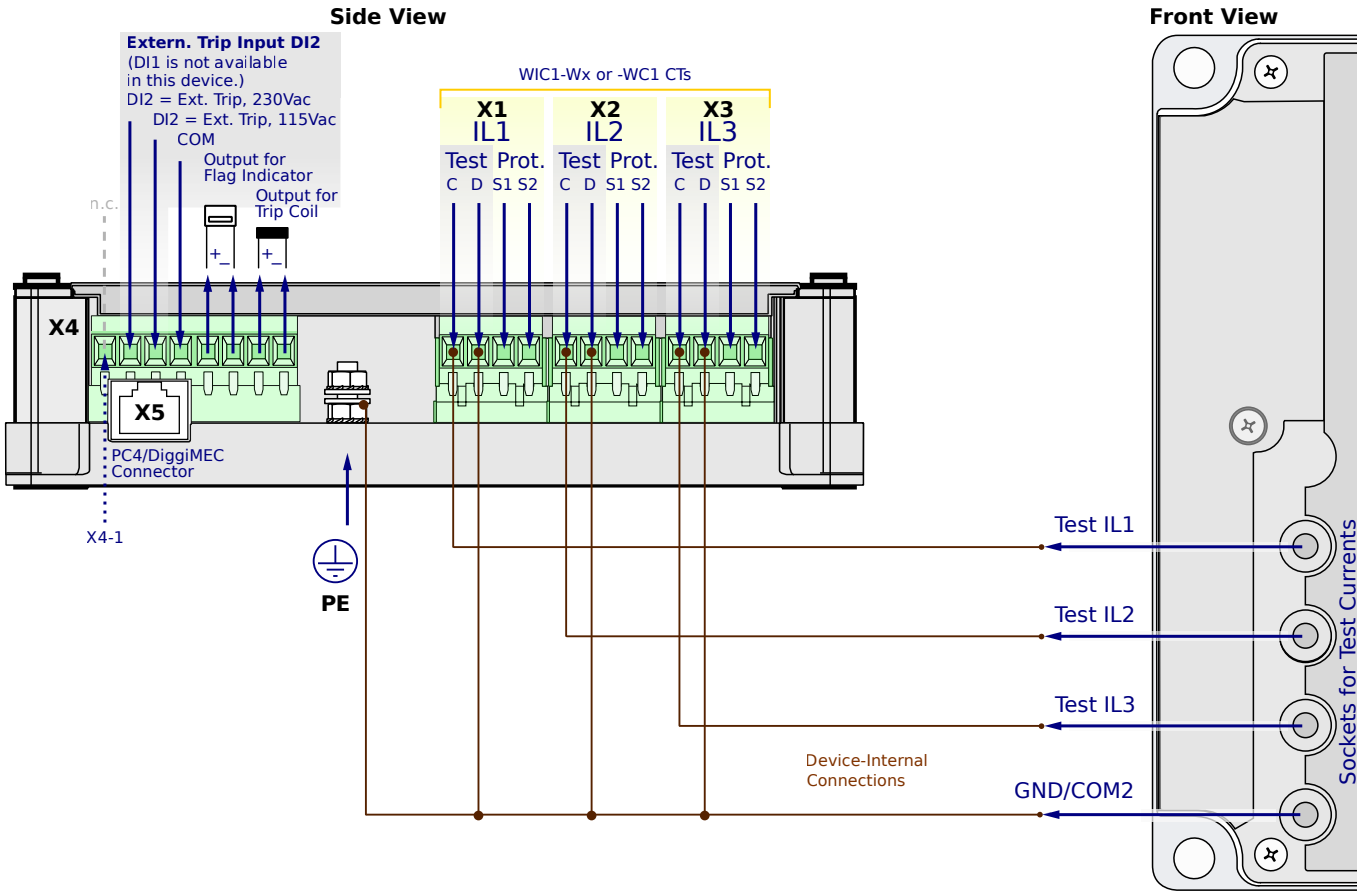


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1PA0

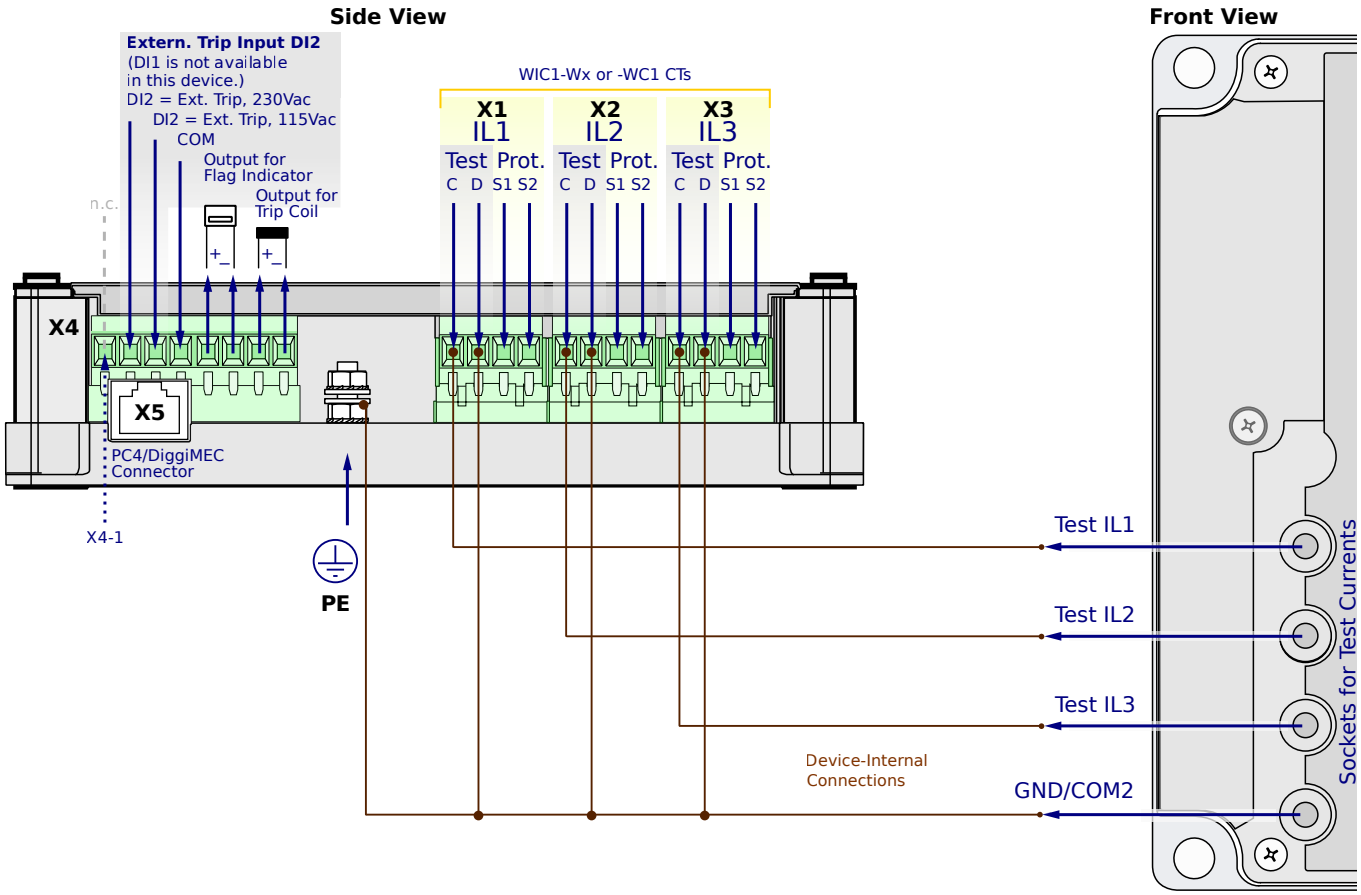


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF1PAH

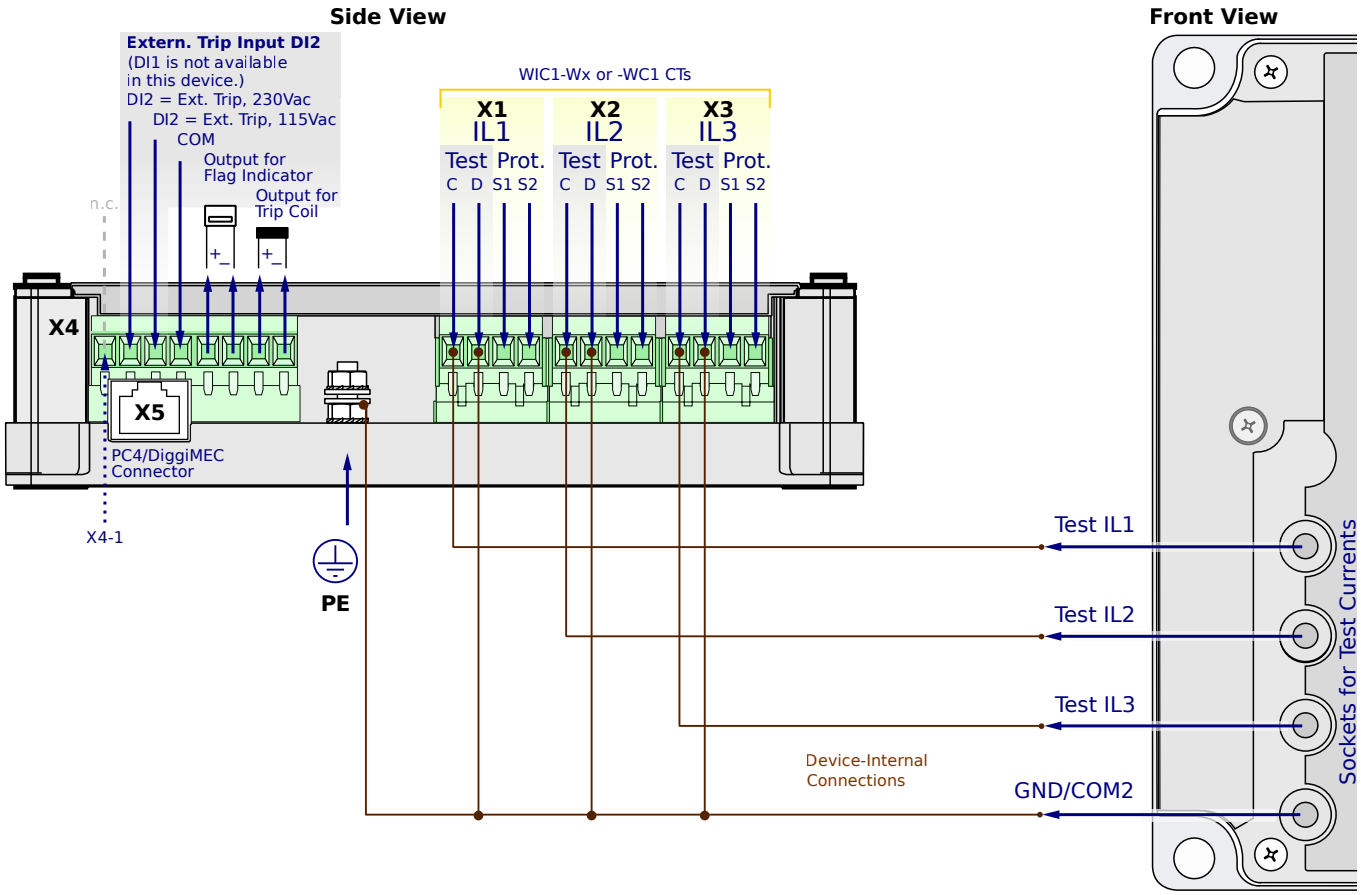


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2SA0

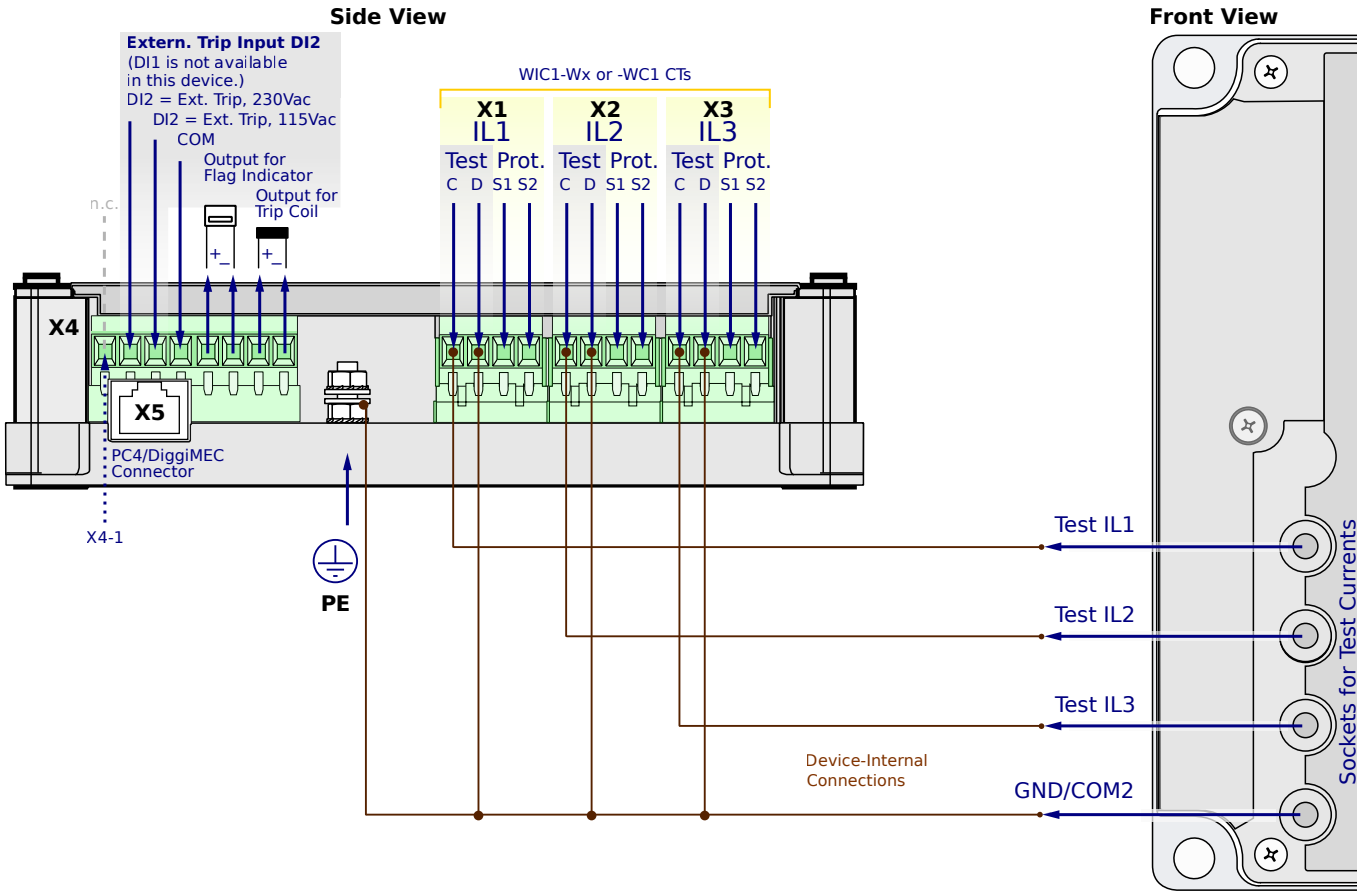


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2SAH

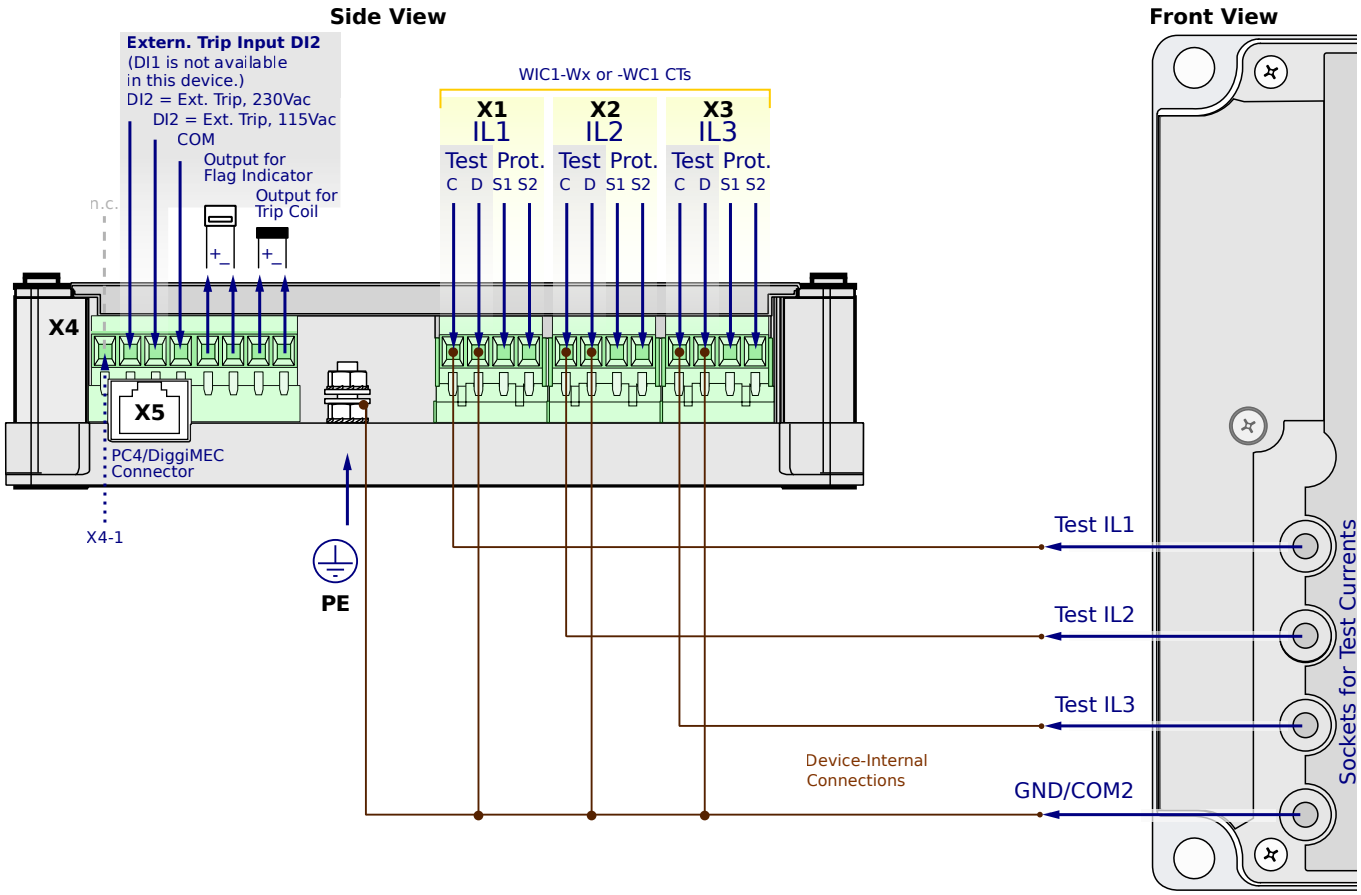


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2AA0

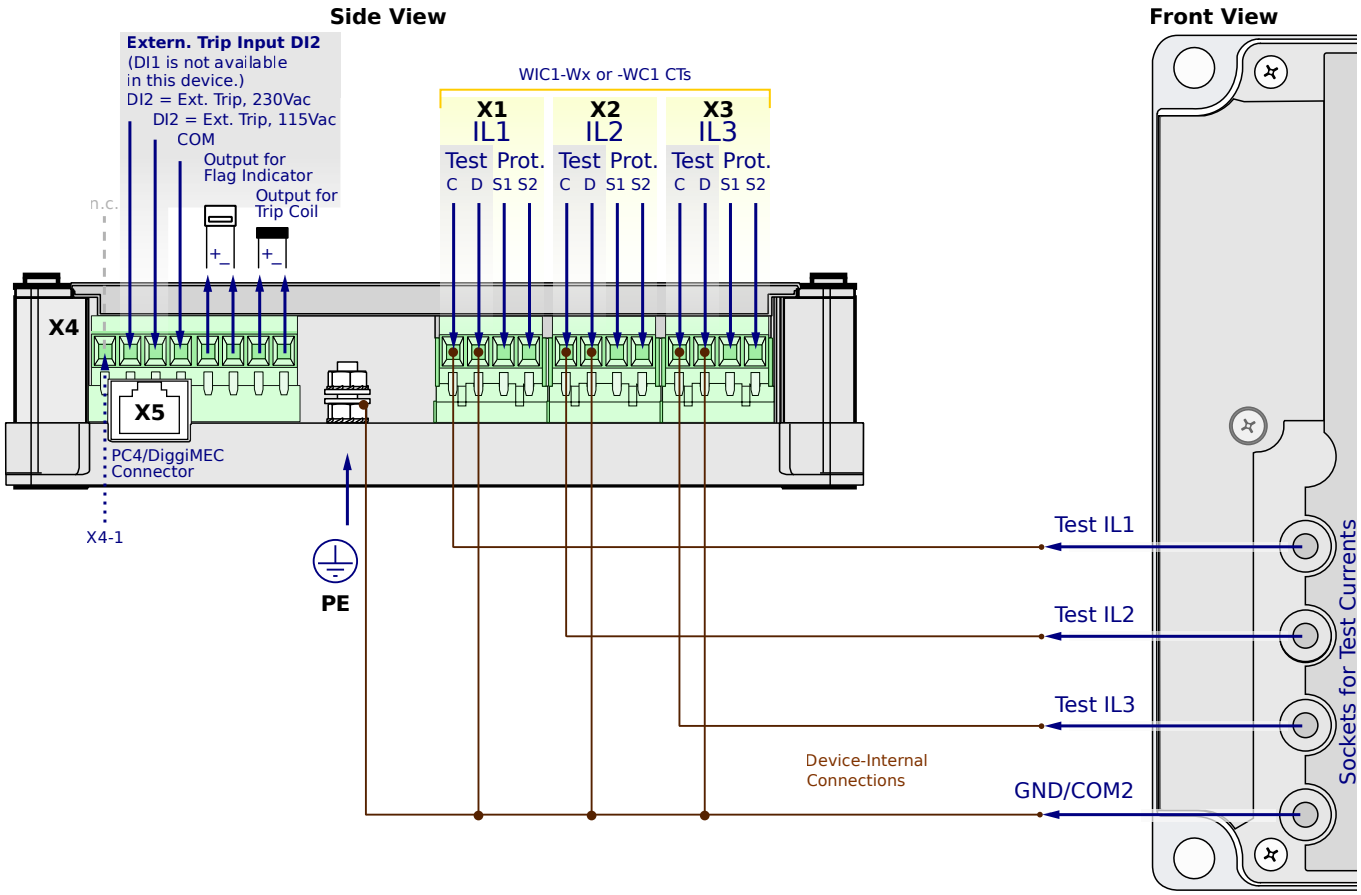


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2AAH

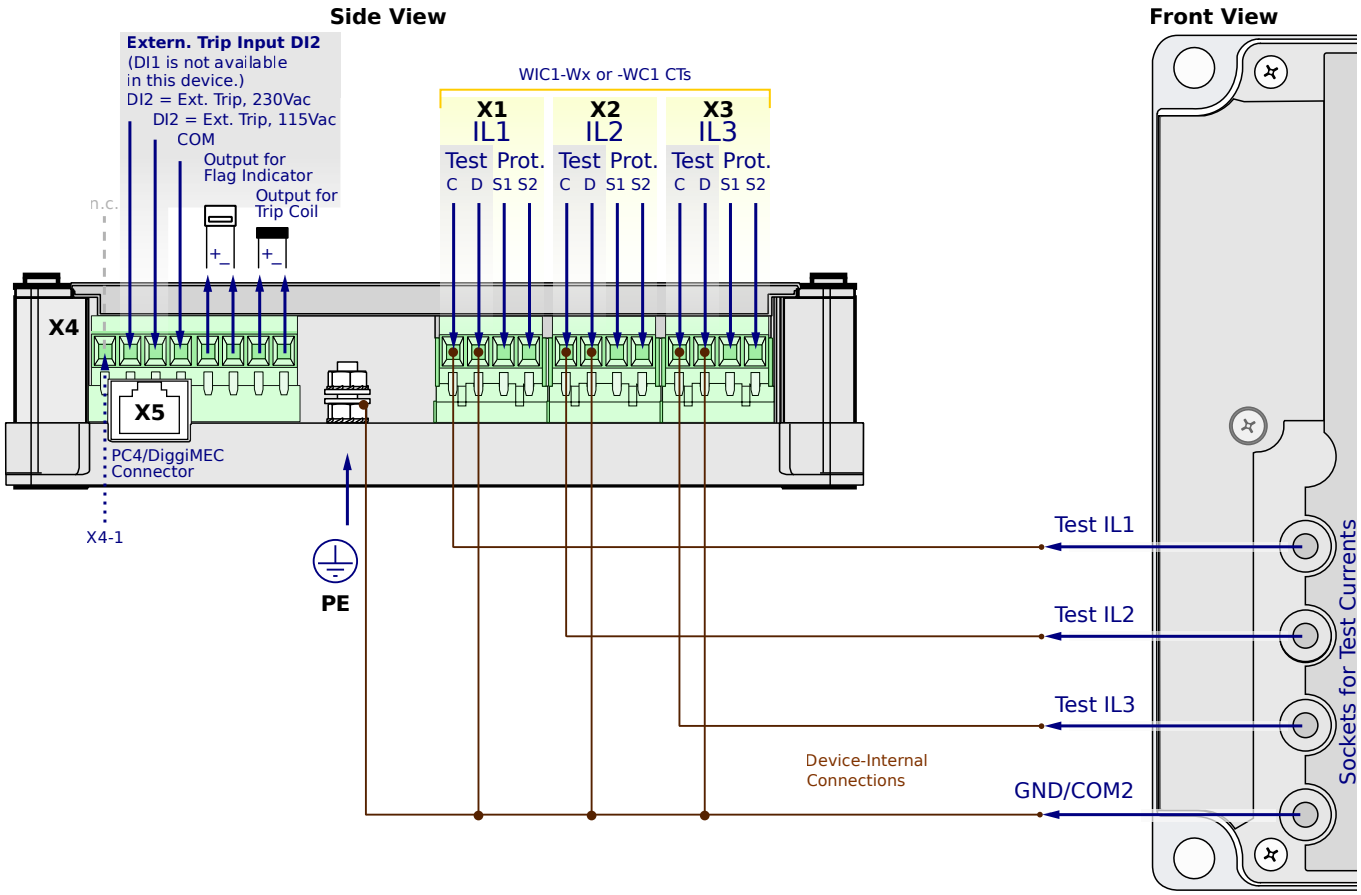


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2PA0

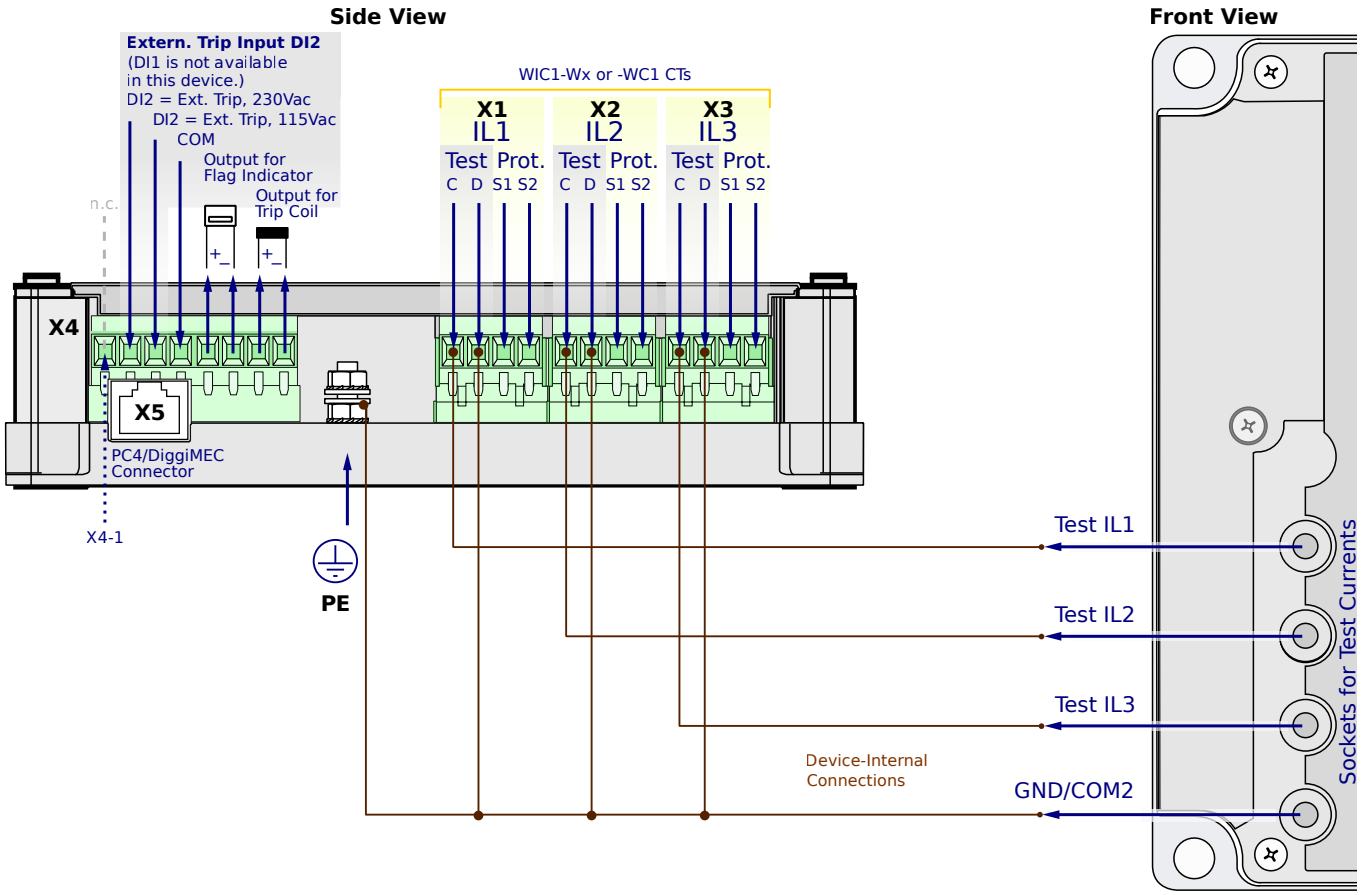


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CF2PAH

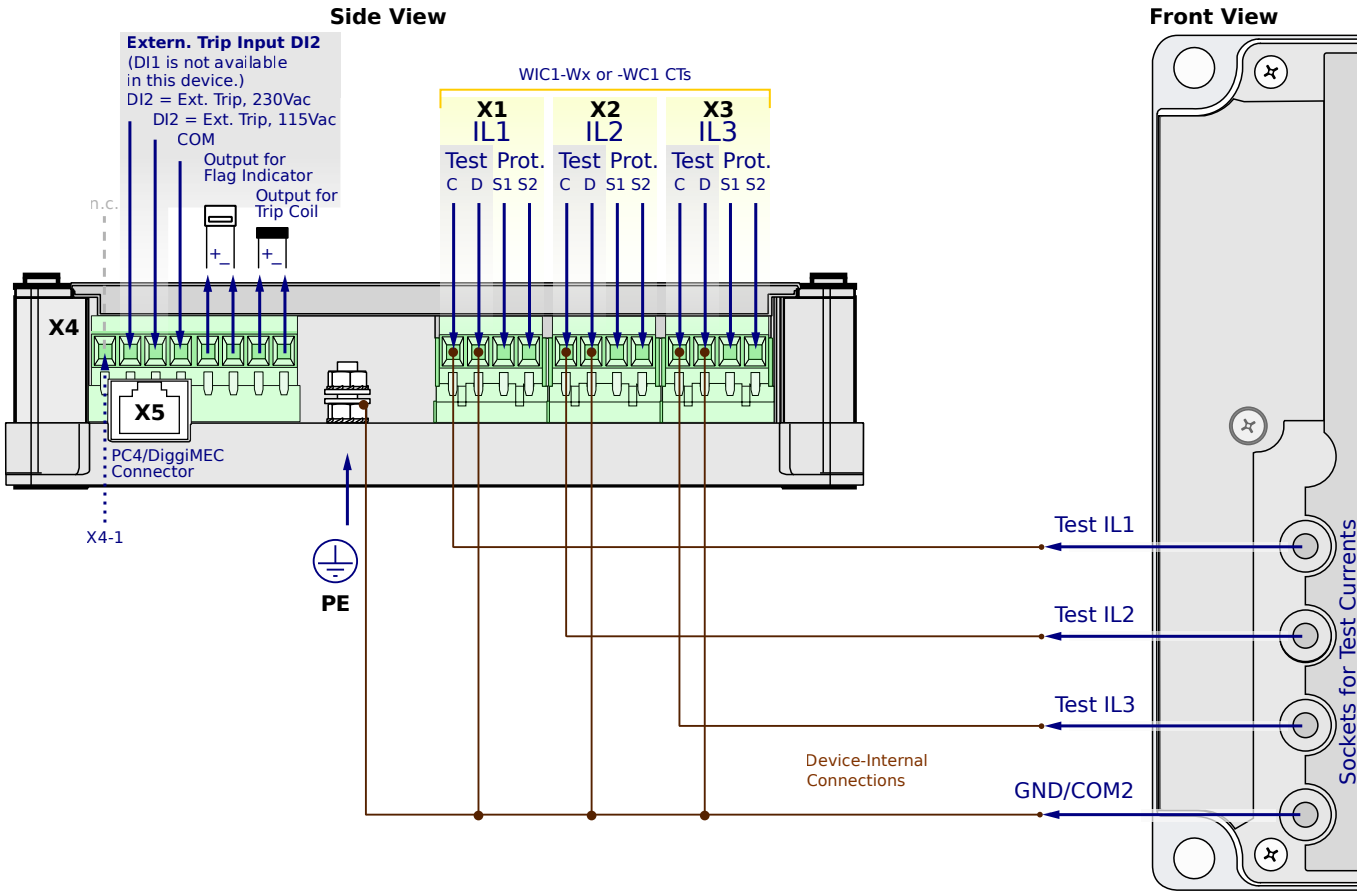


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1SA0

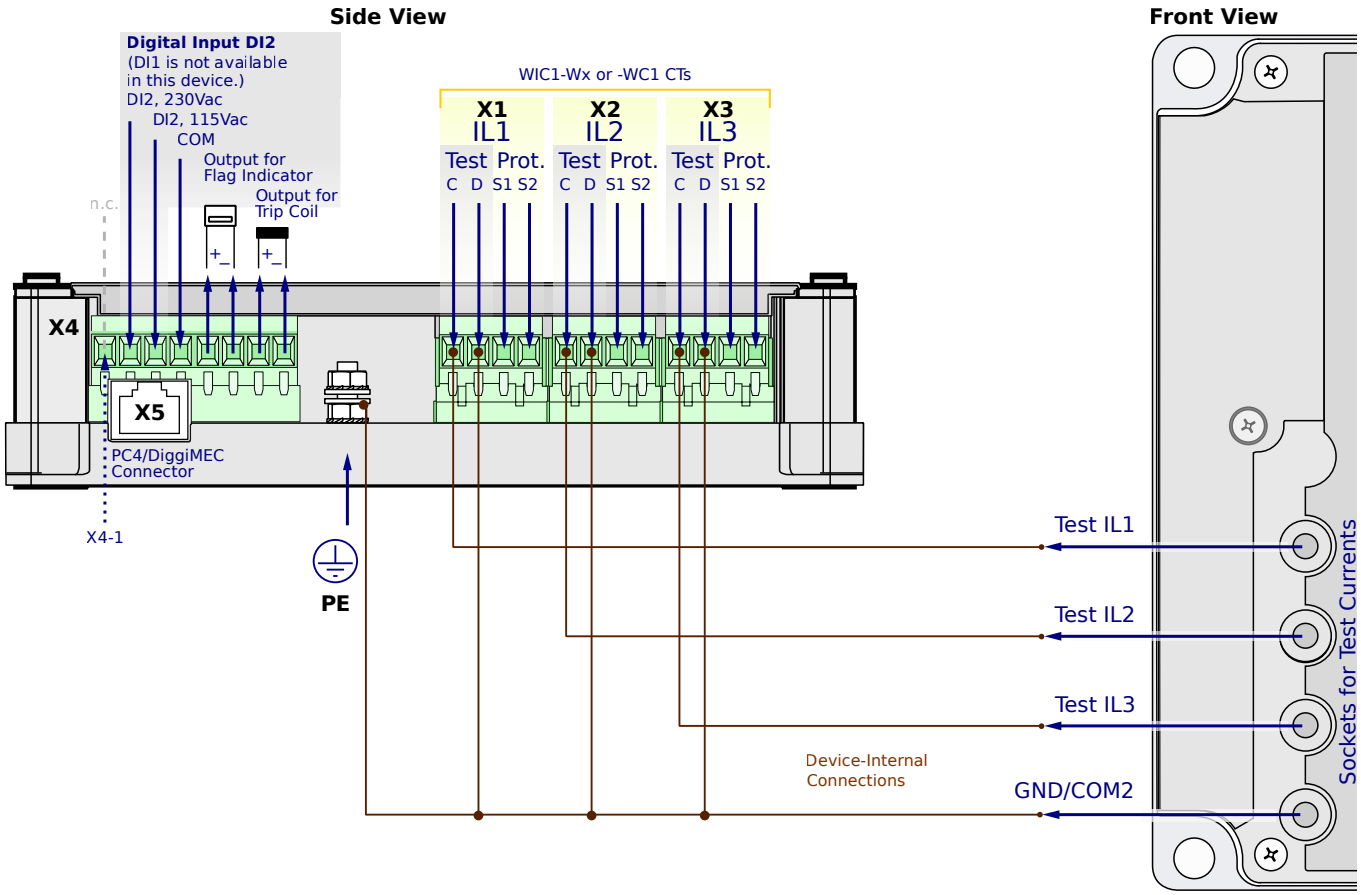


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1SAH

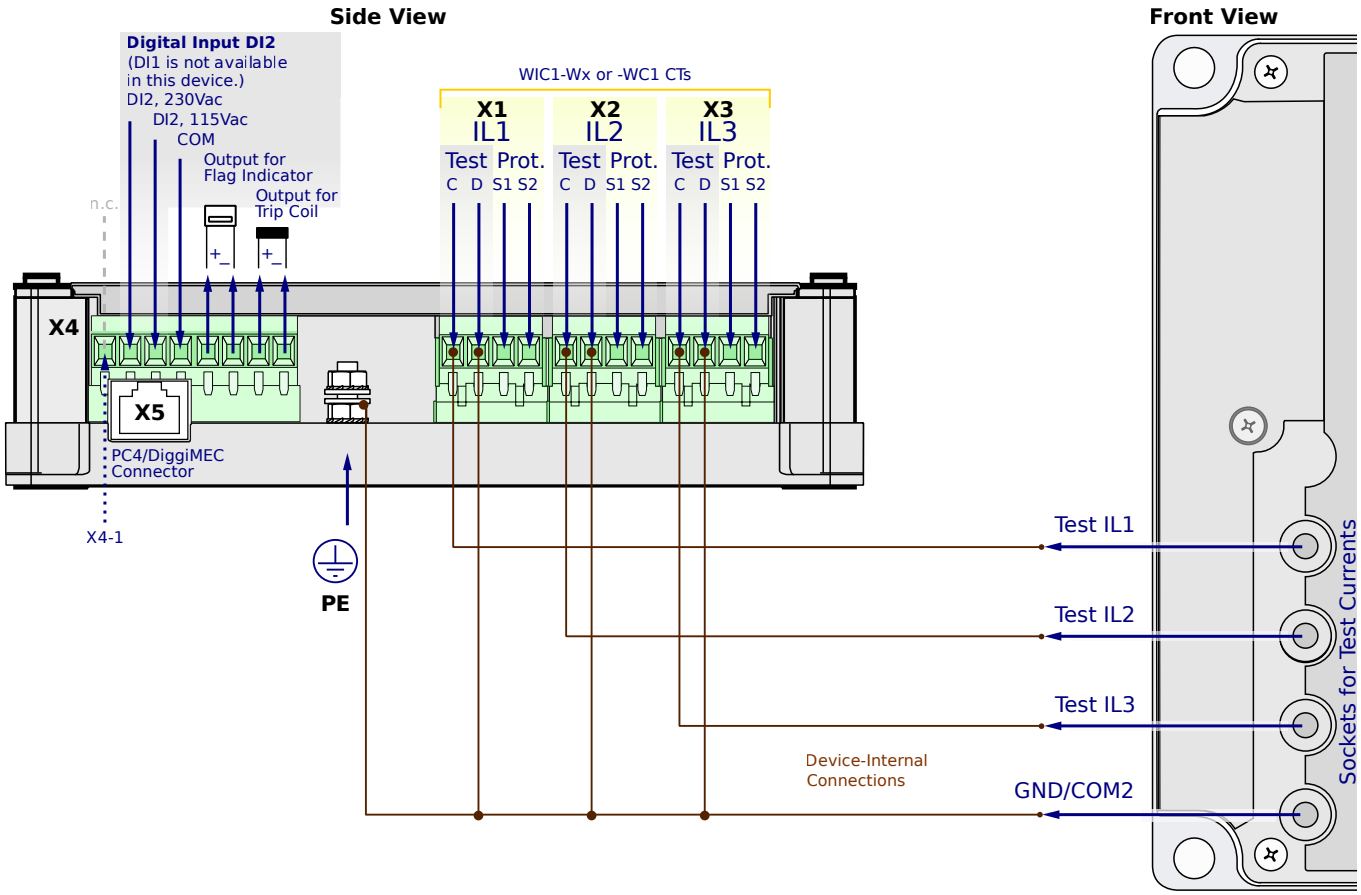


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1AA0

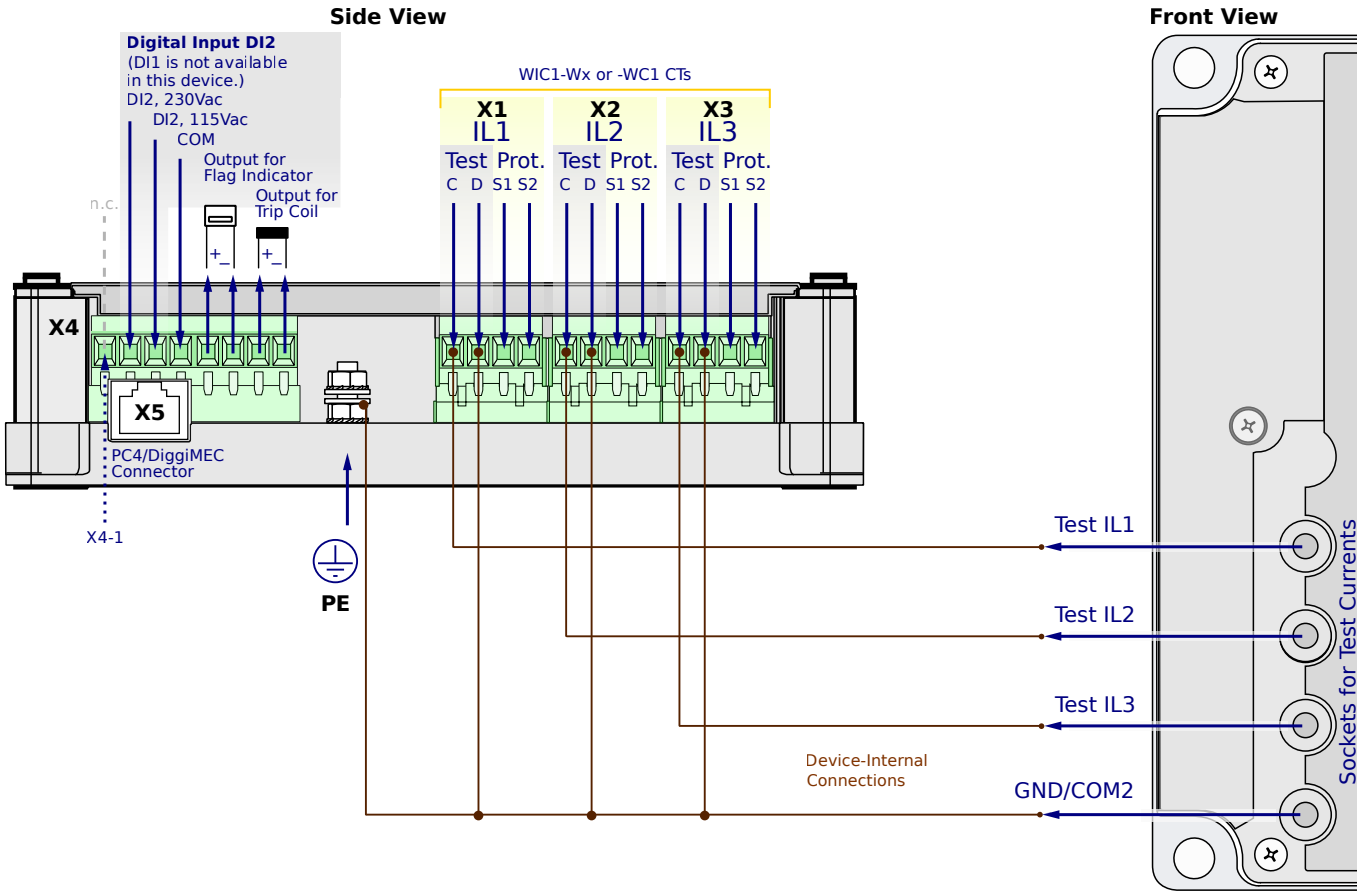


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1AAH

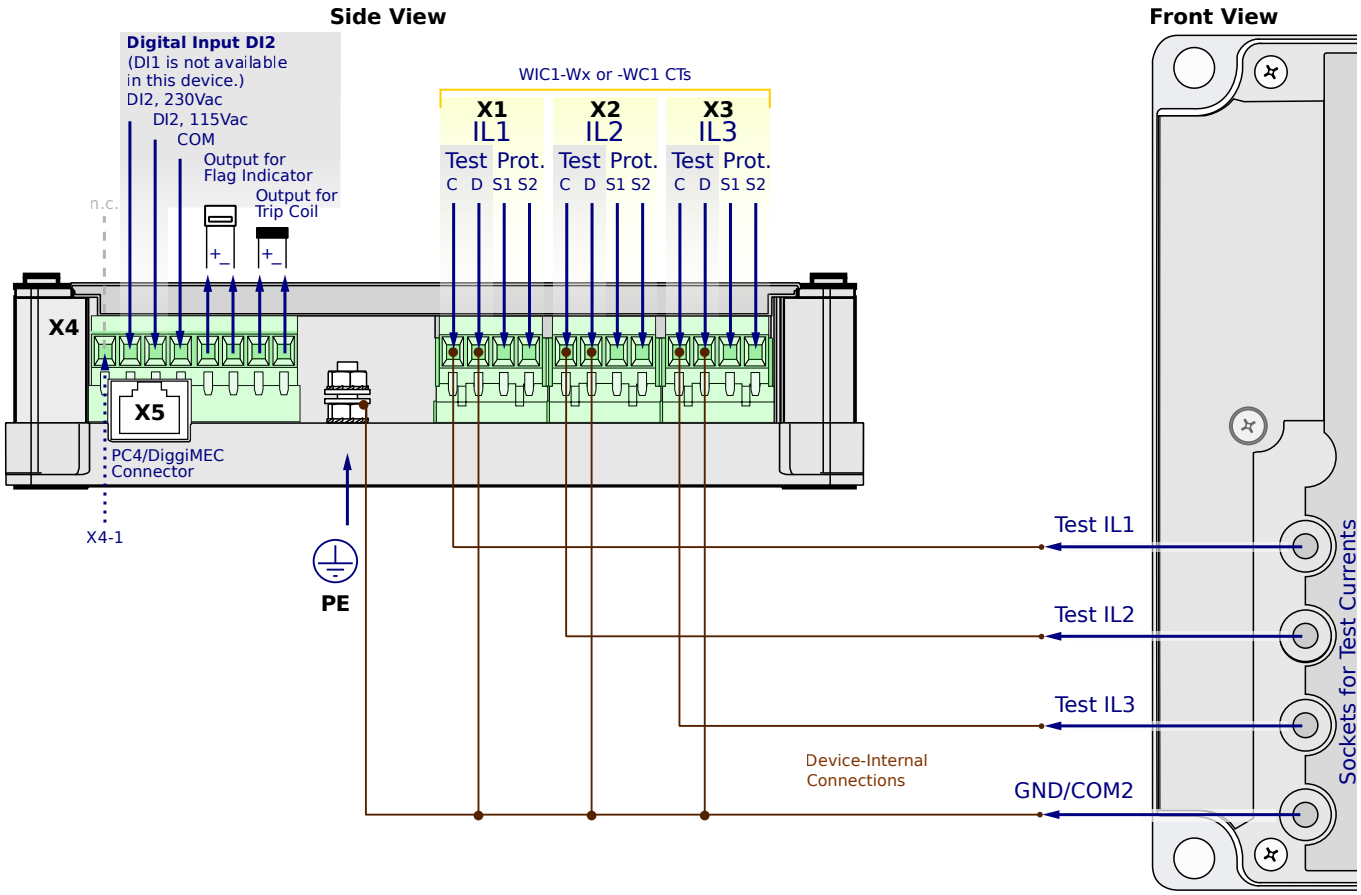


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1PA0

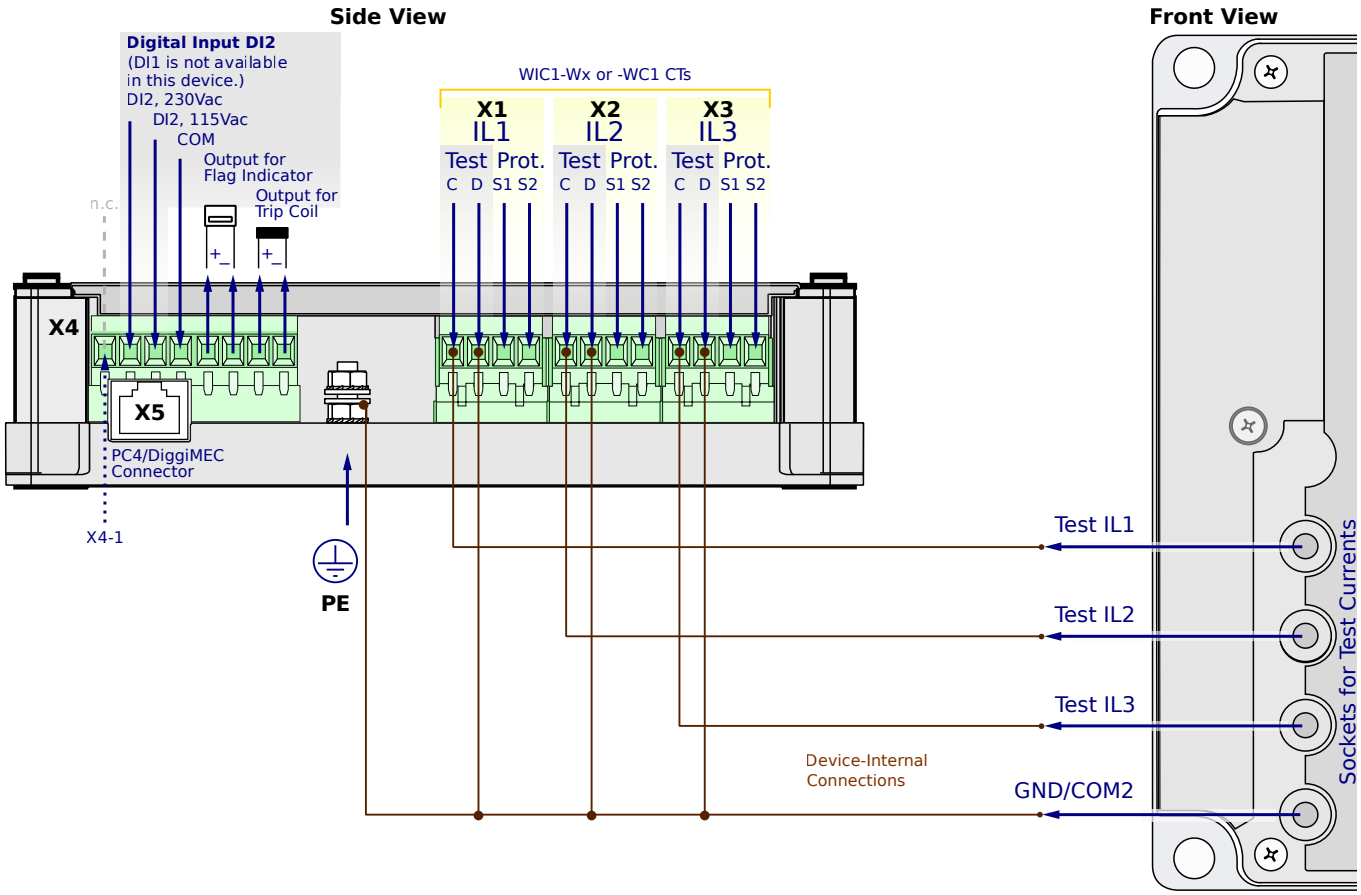


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC1PAH

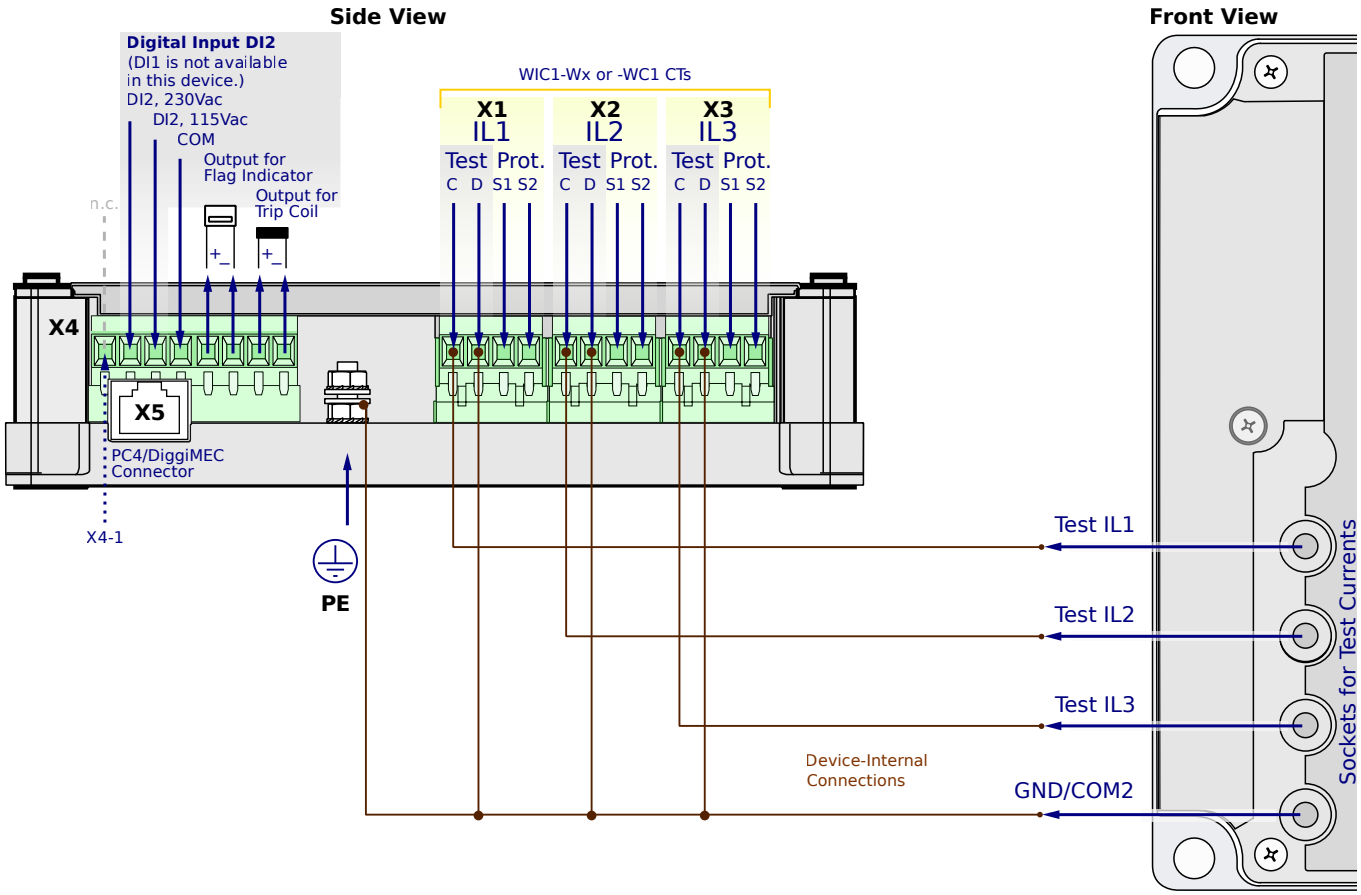


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2SA0

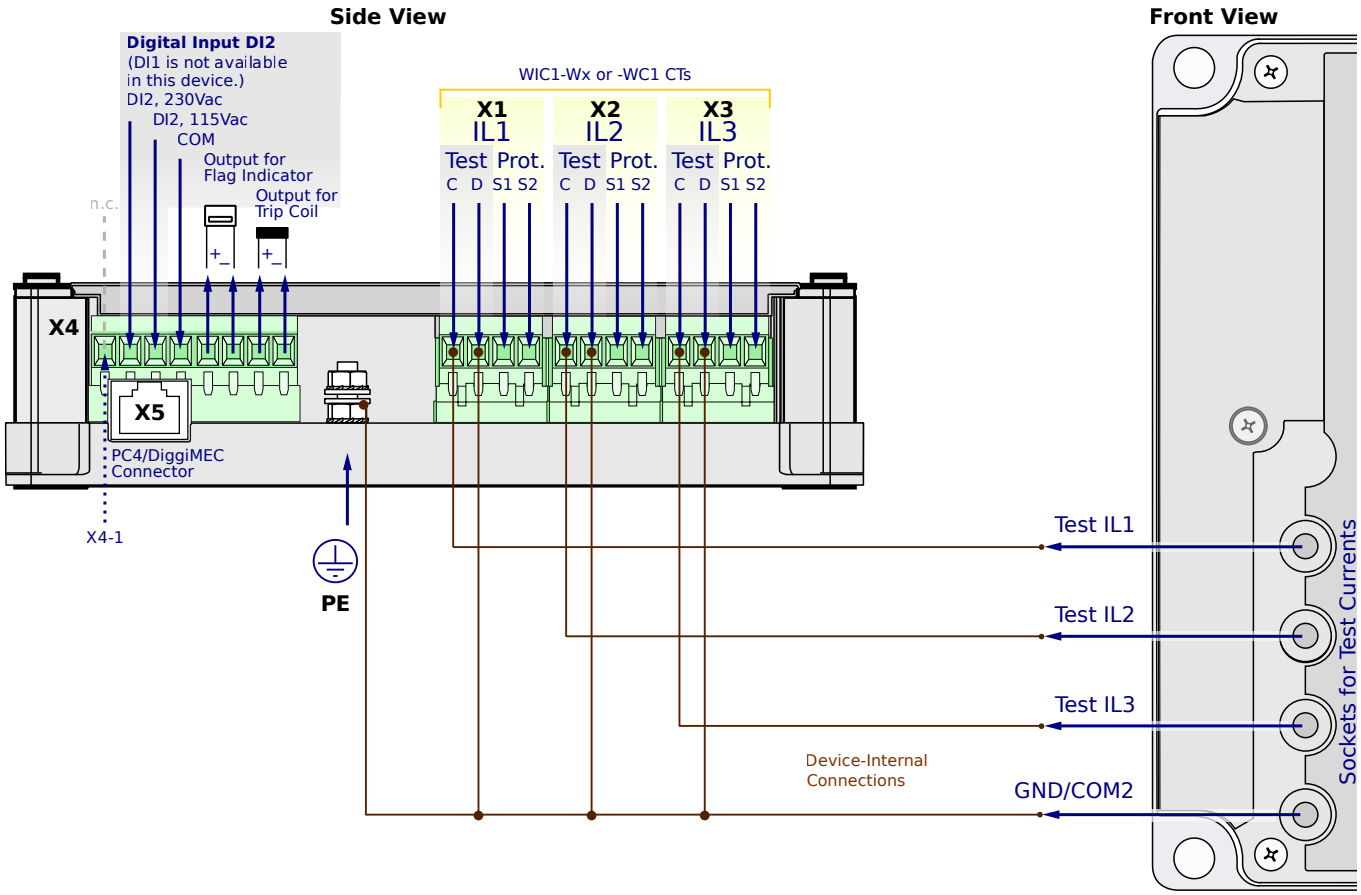


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2SAH

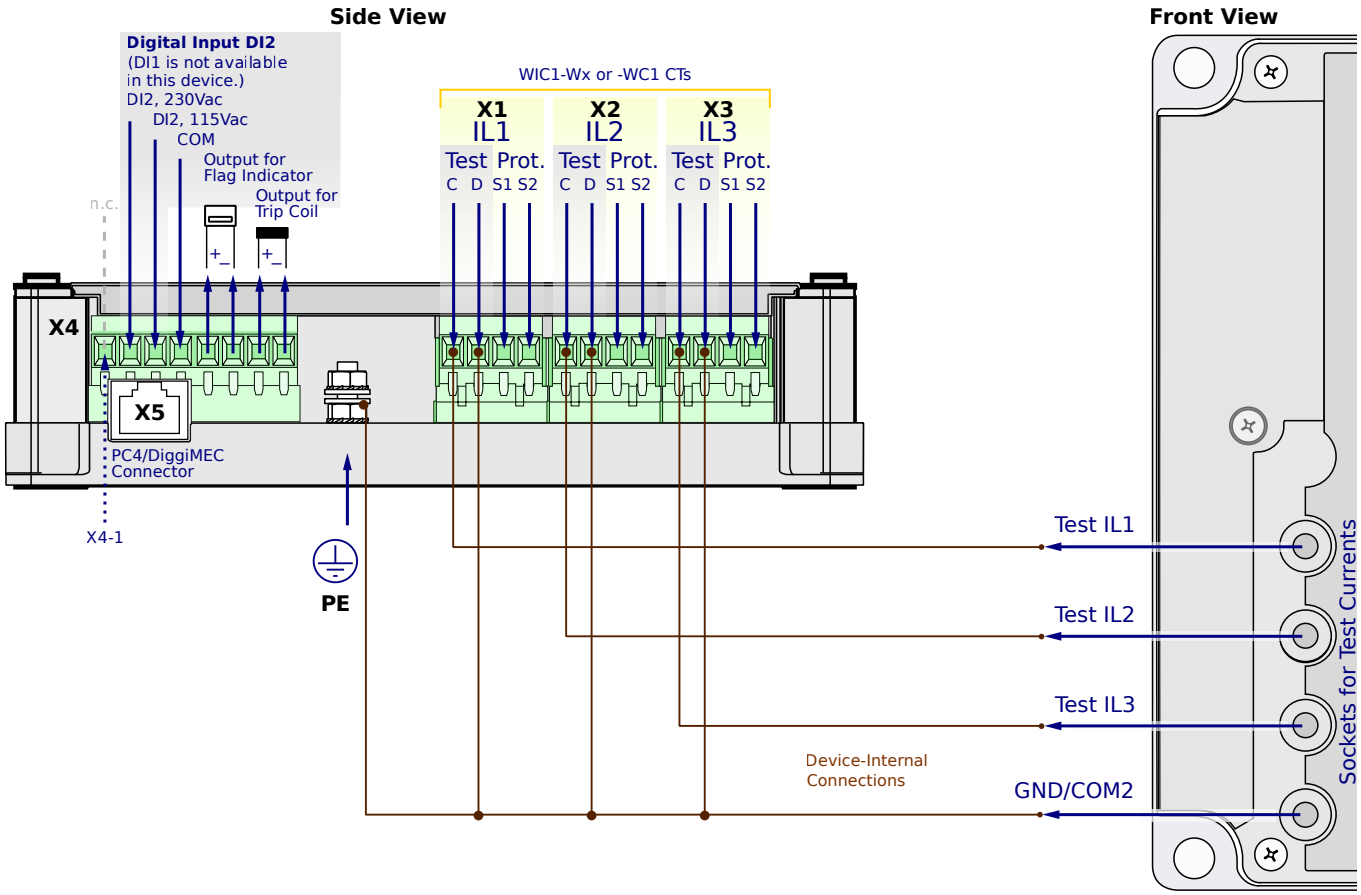


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2AA0

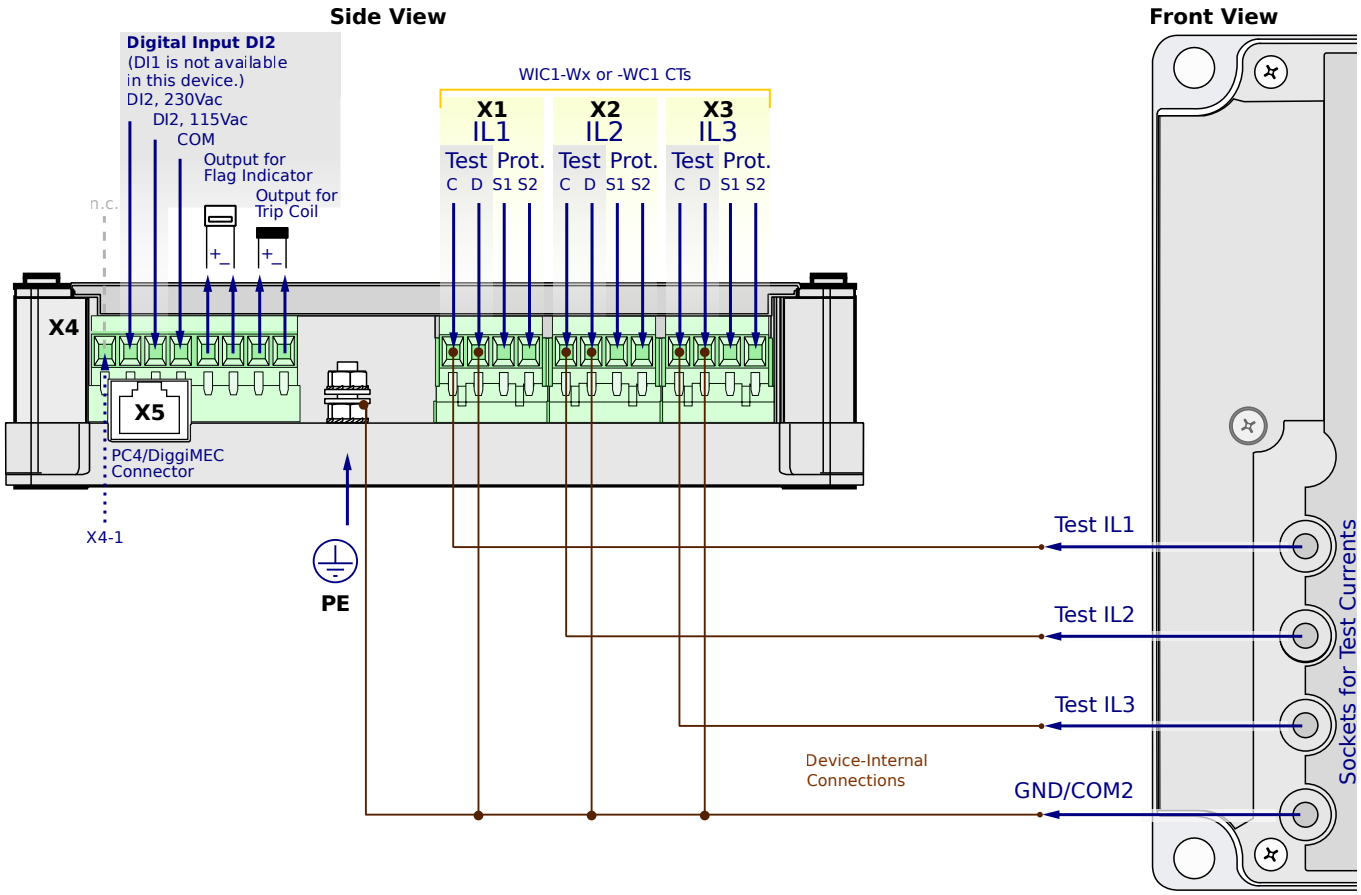


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2AAH

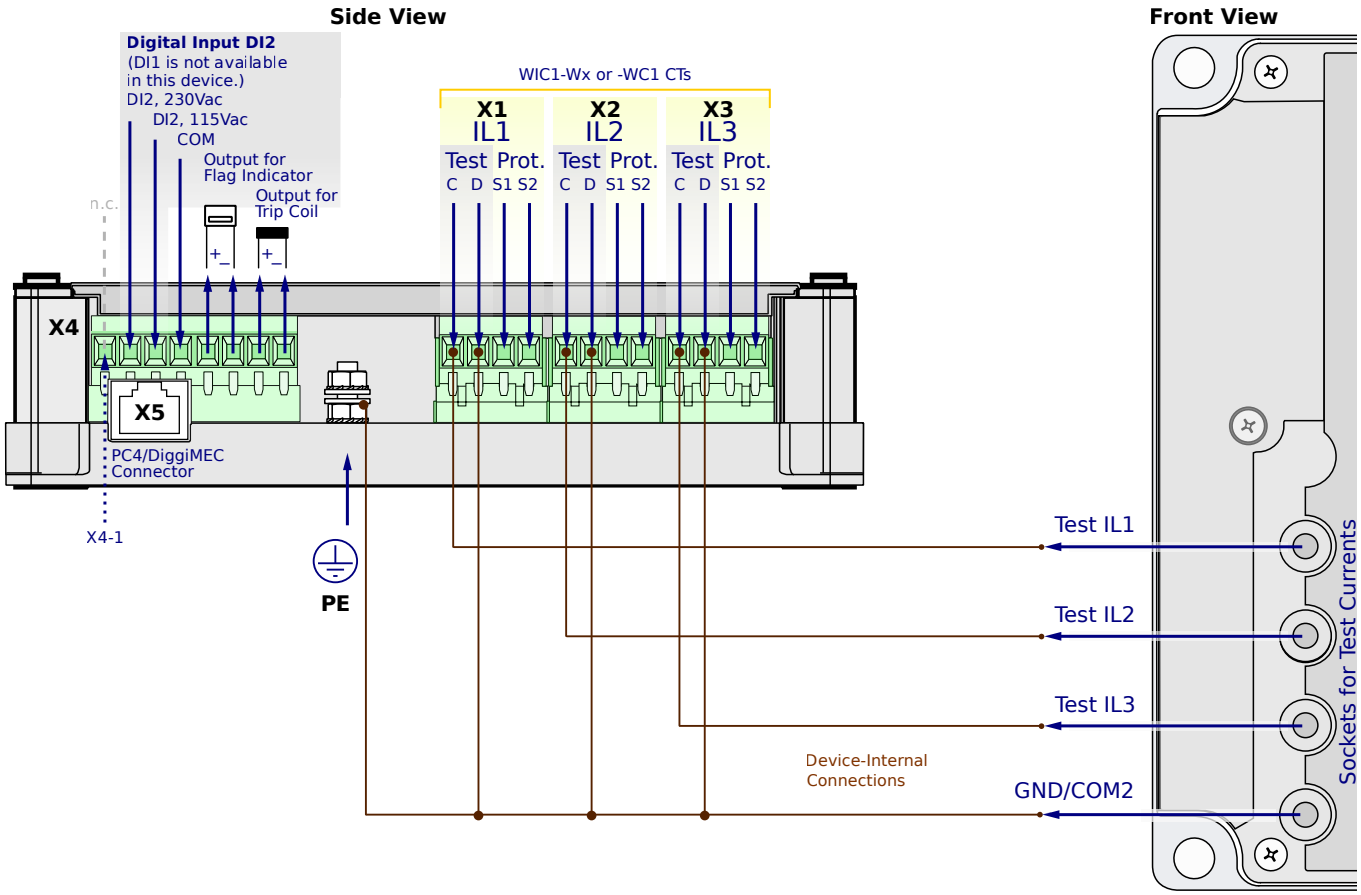


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2PA0

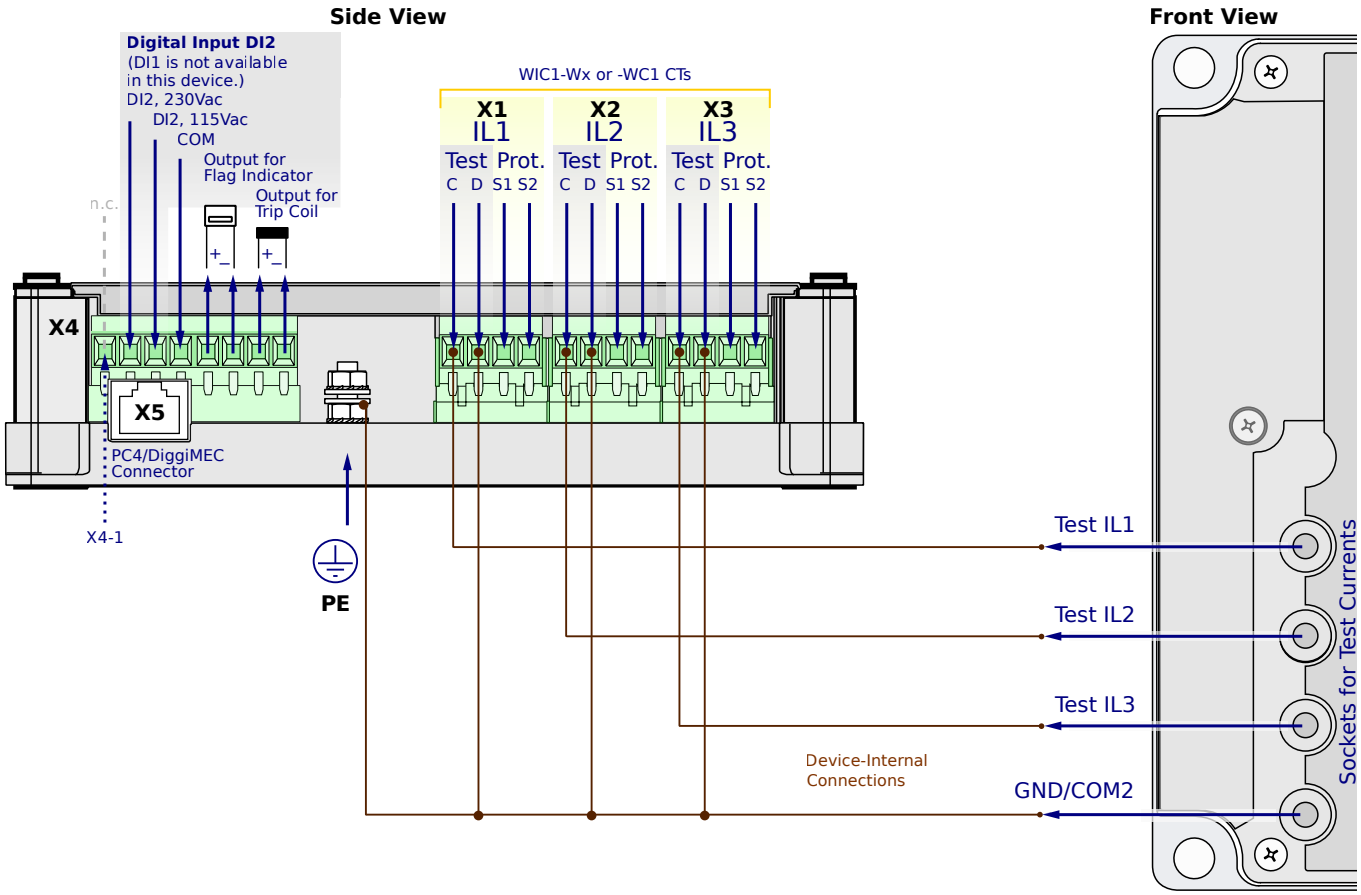


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SN0CC2PAH

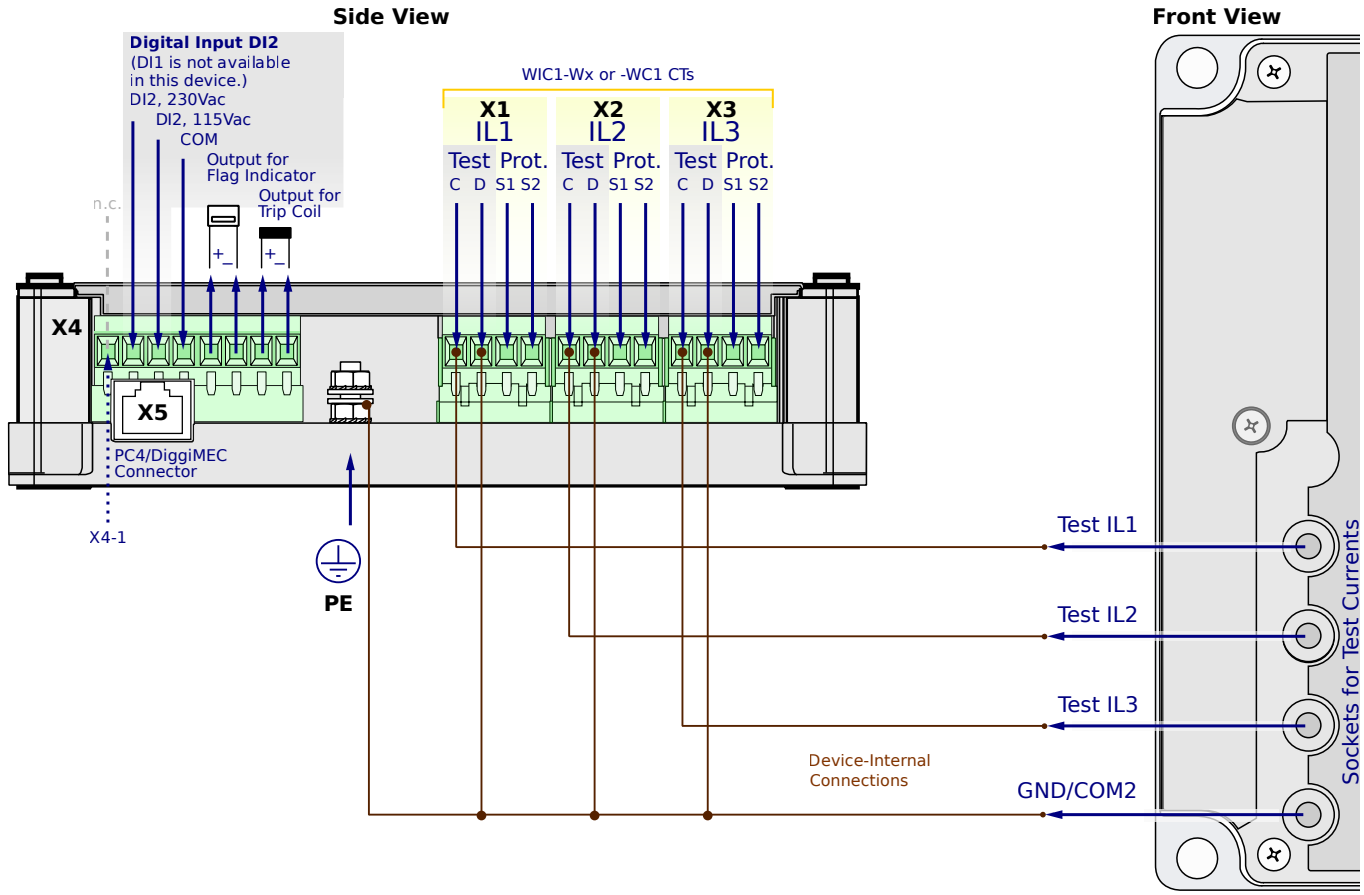


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0SA0

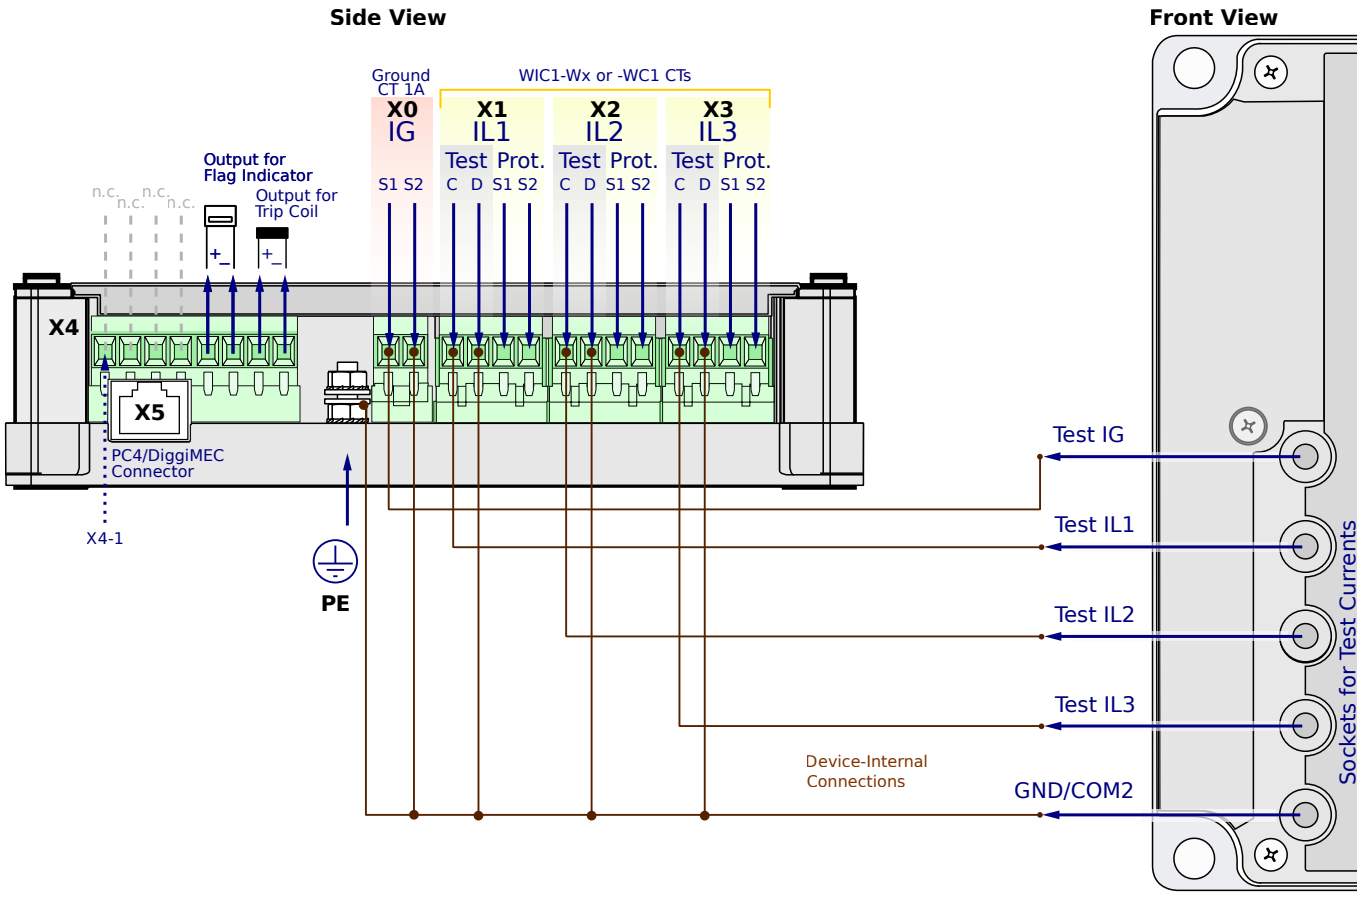


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0SAH

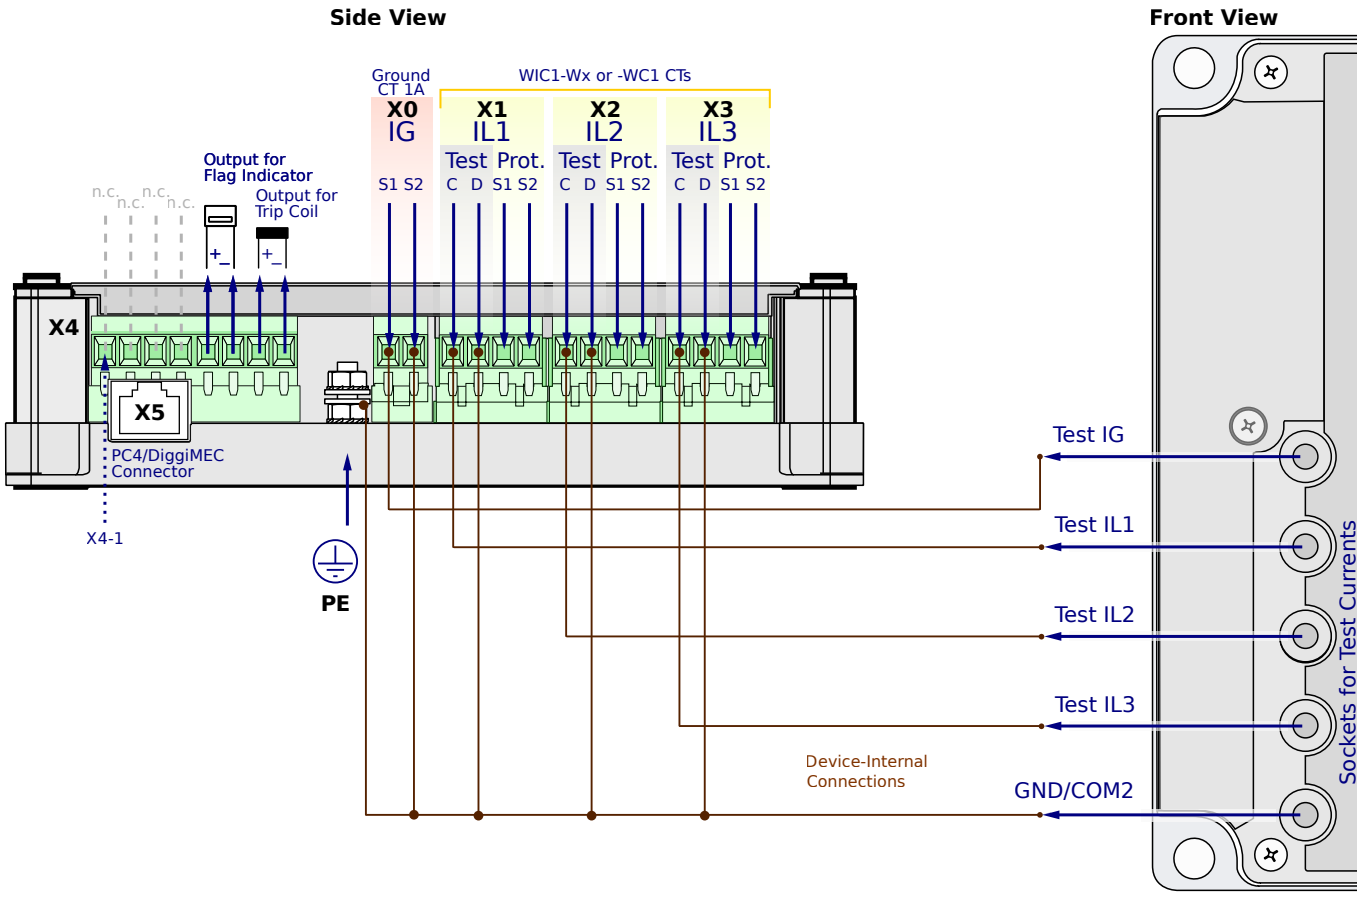


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0AA0

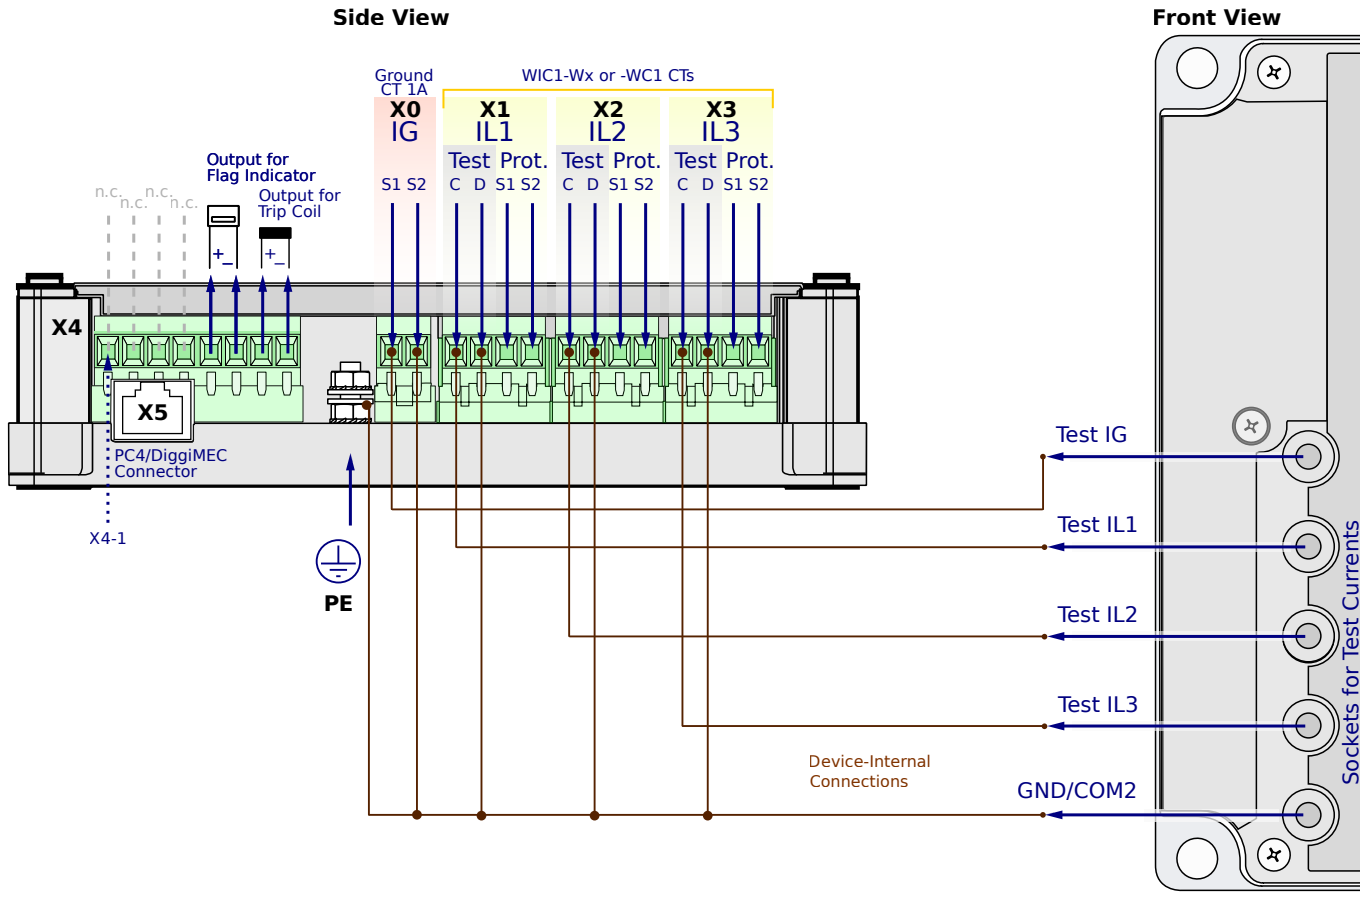


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0AAH

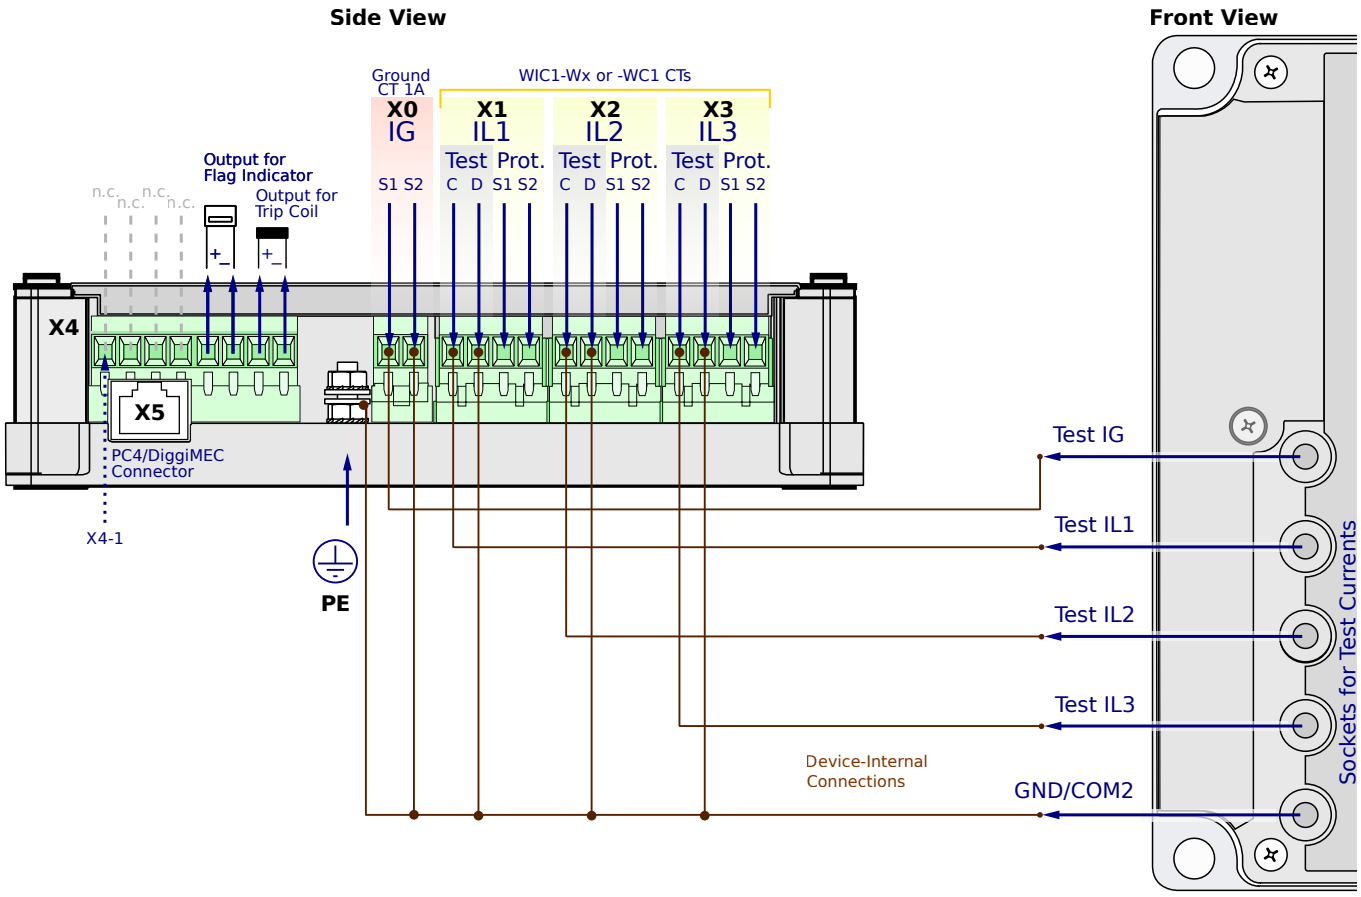


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0PA0

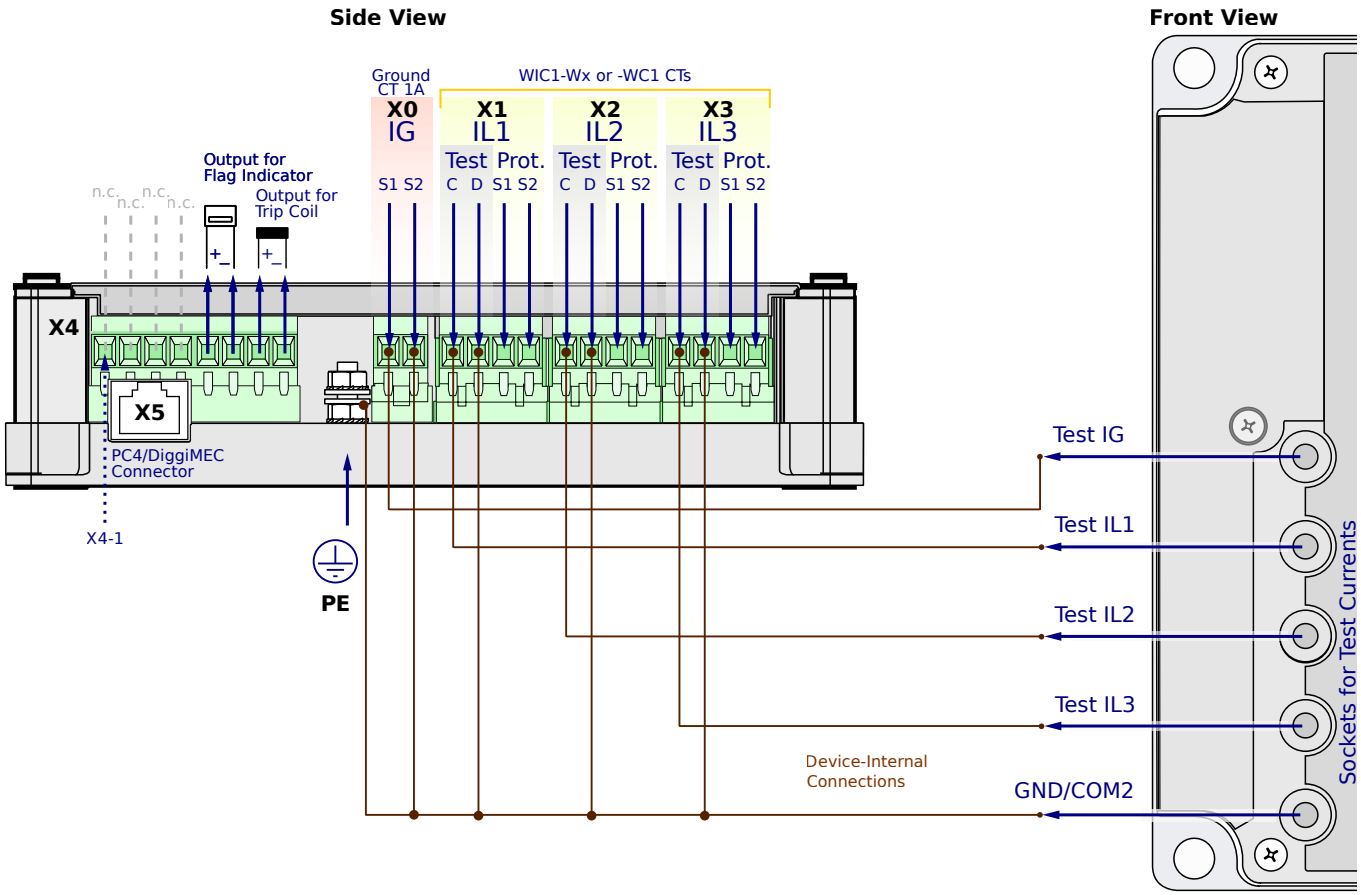


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN0PAH

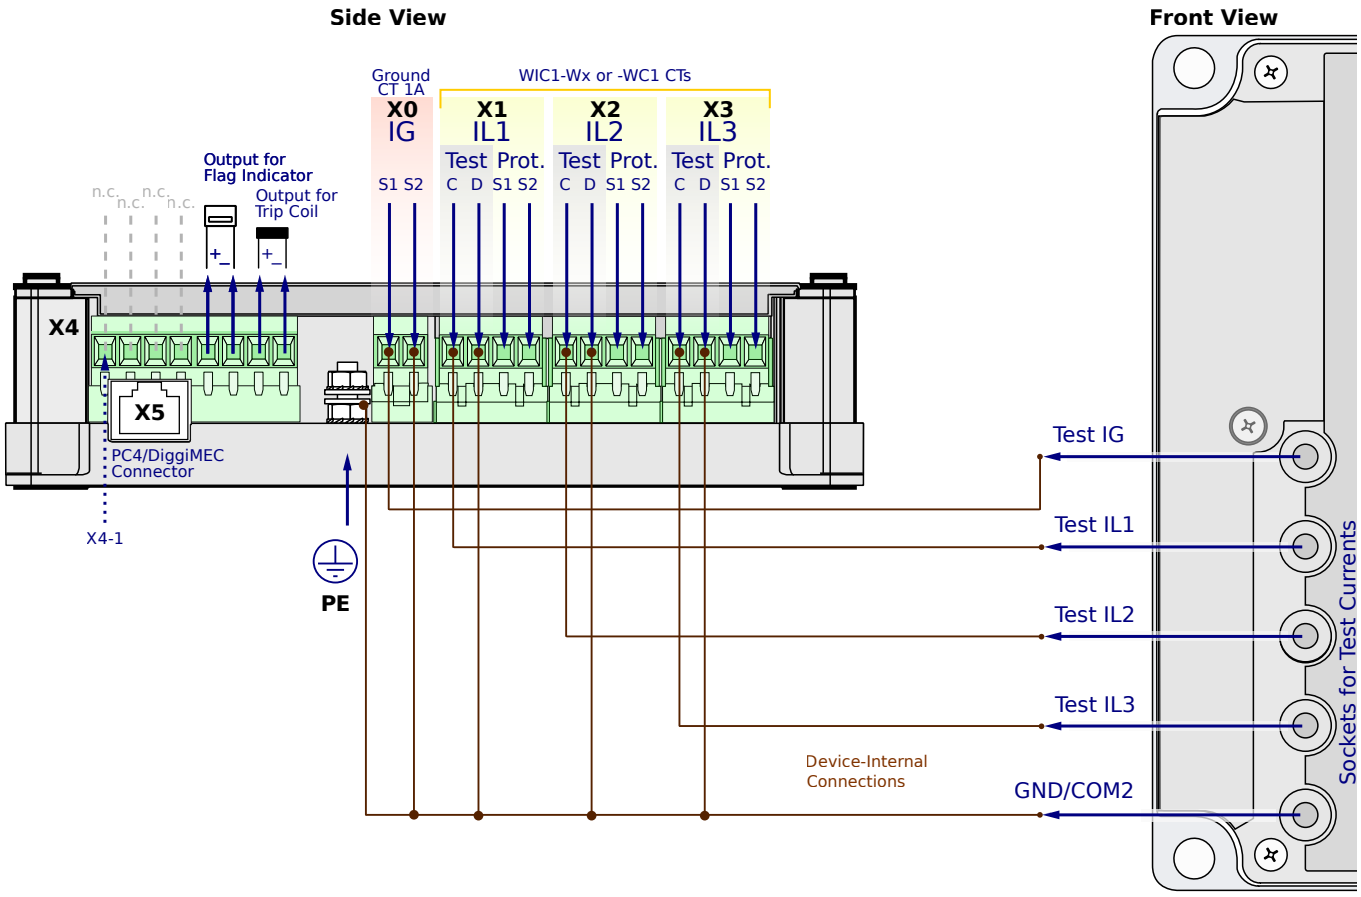


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1SA0

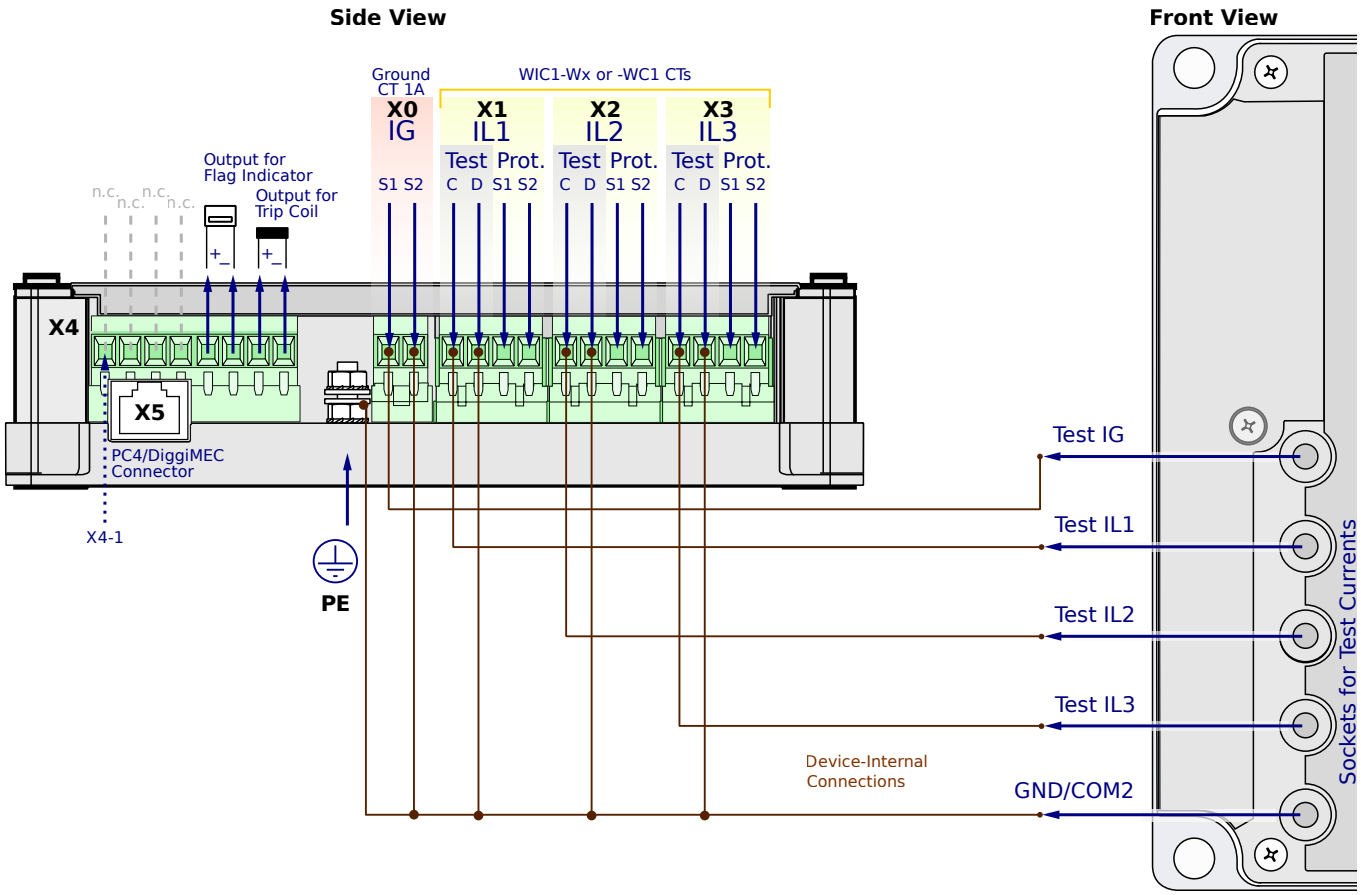


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1SAH

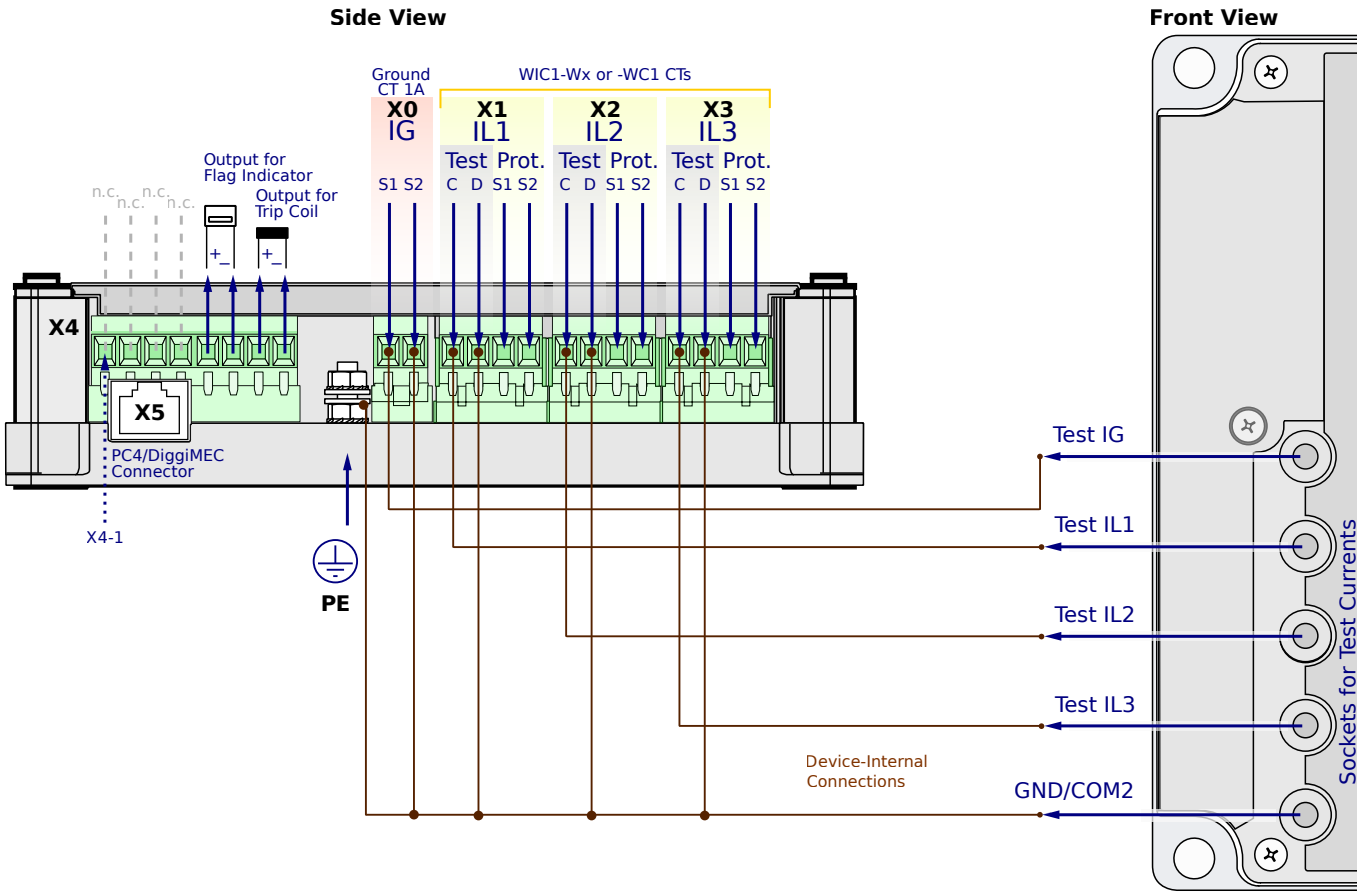


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1AA0

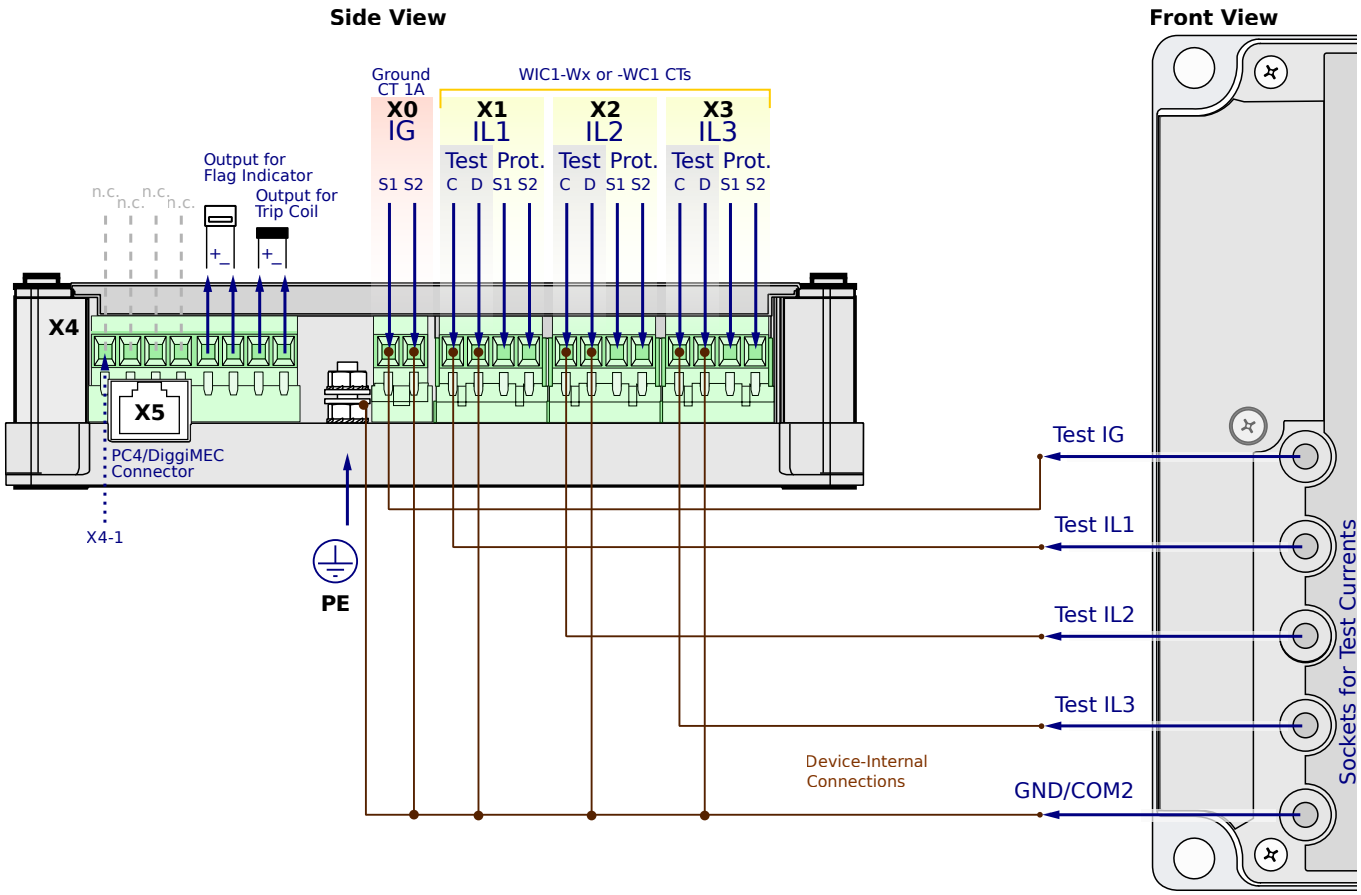


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1AAH

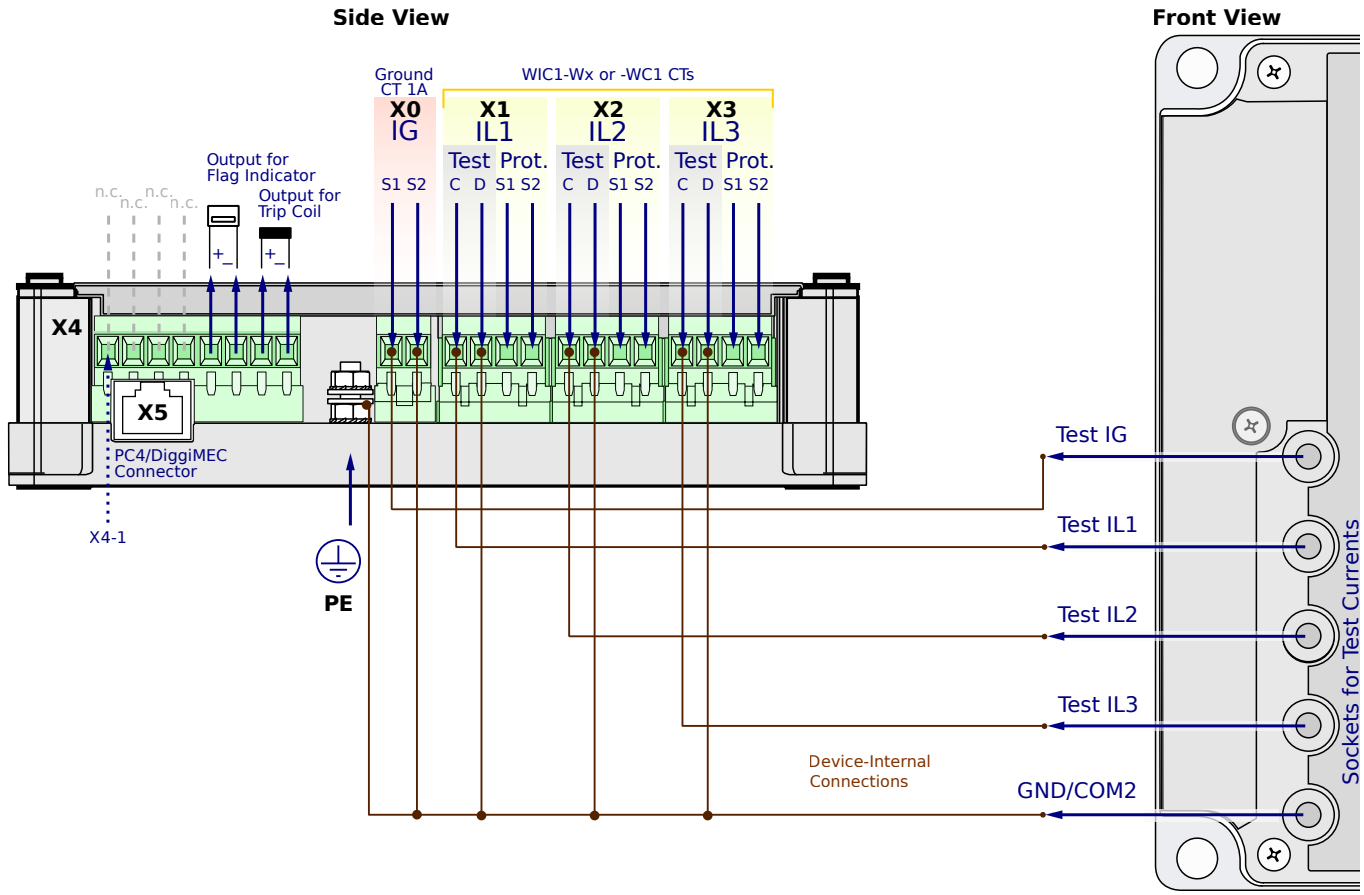


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1PA0

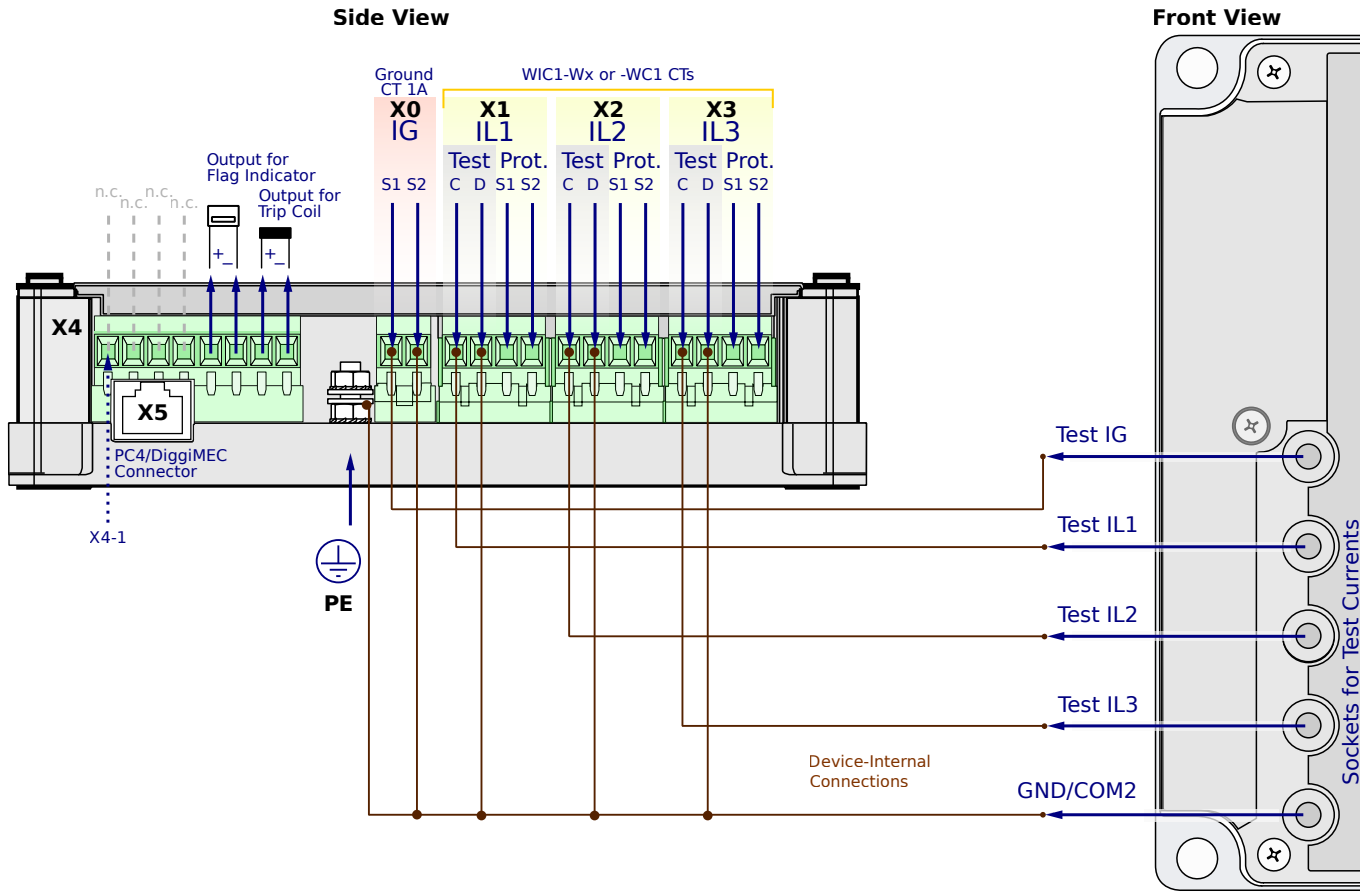


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN1PAH

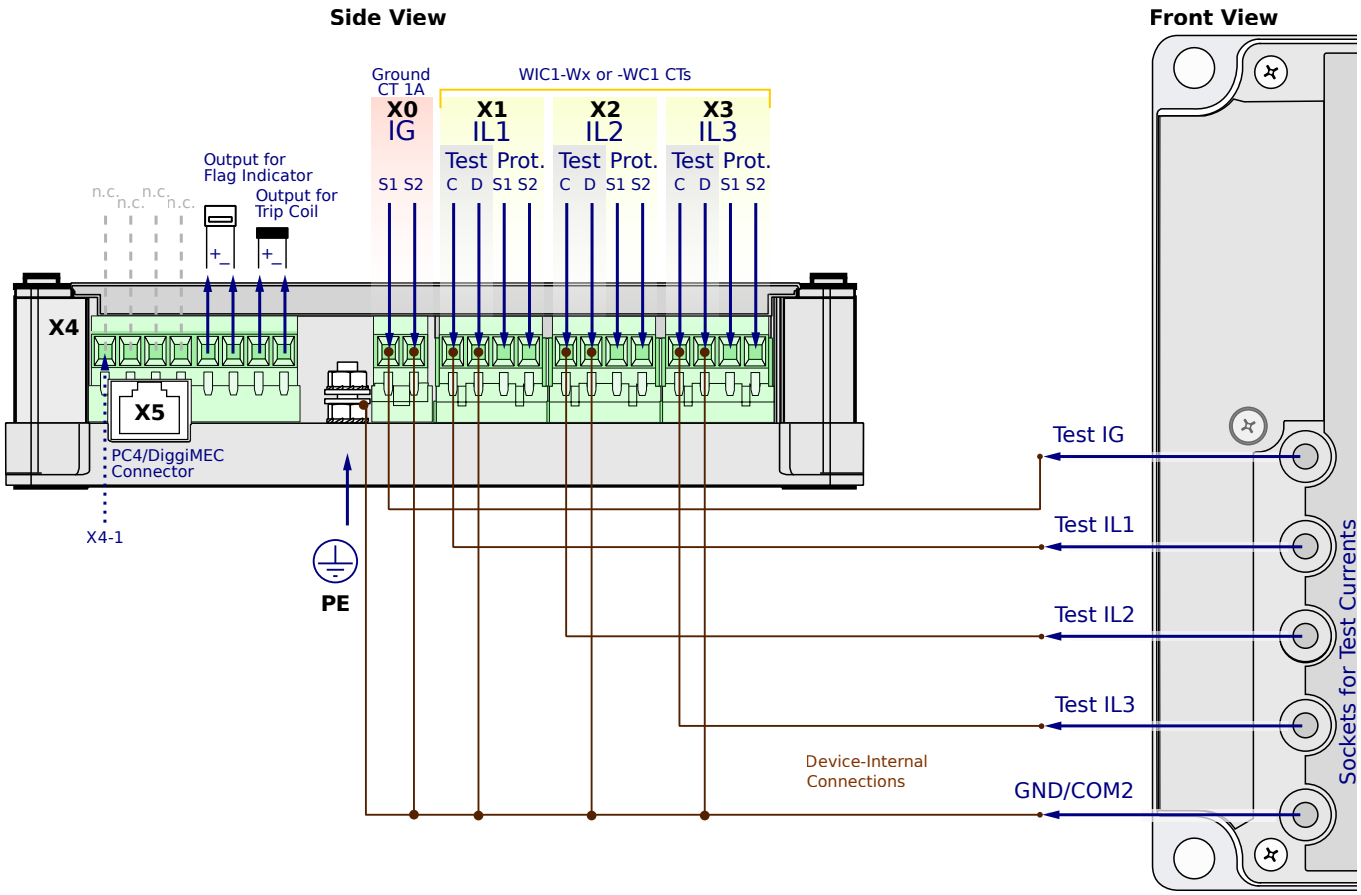


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2SA0

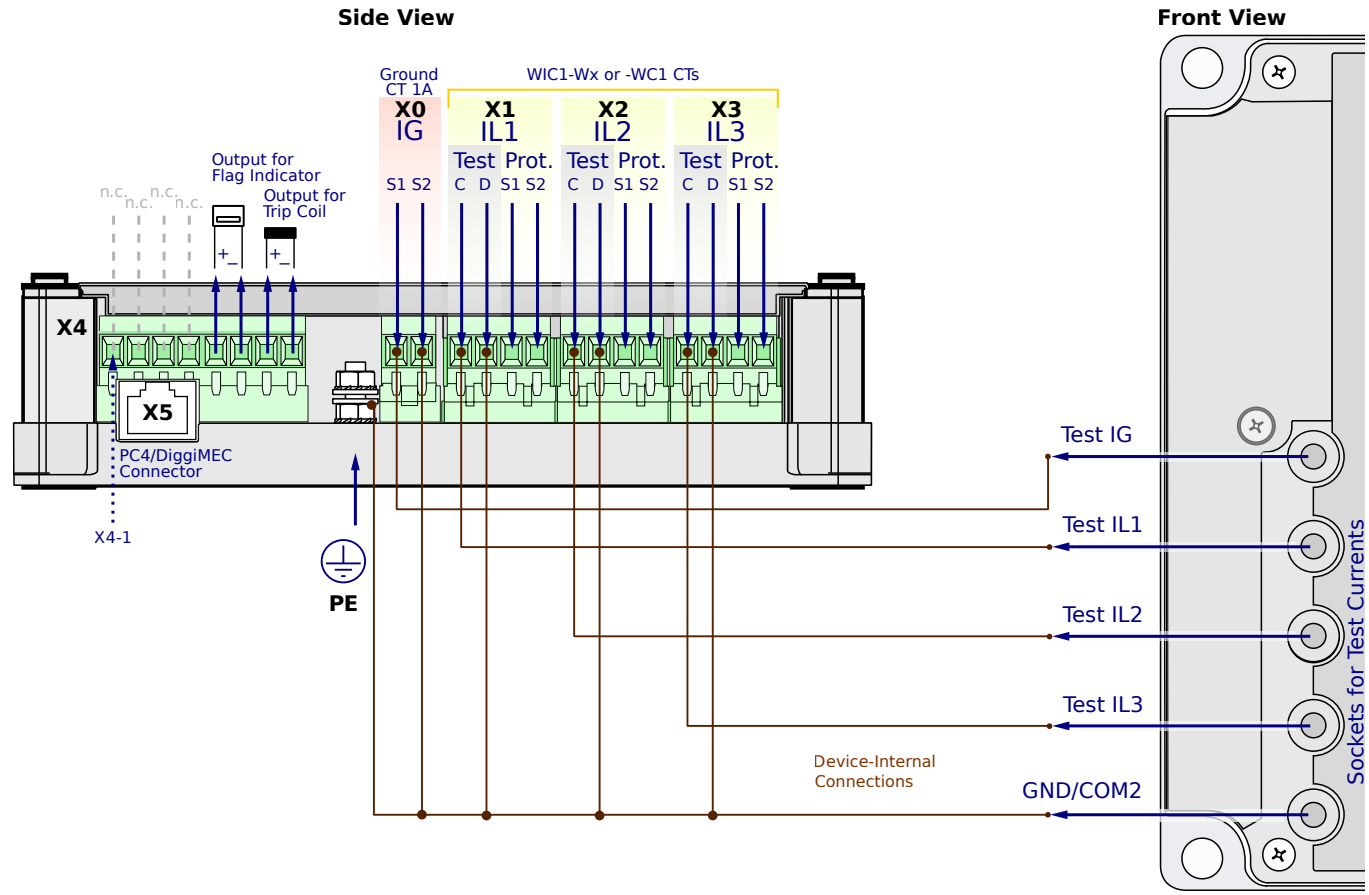


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2SAH

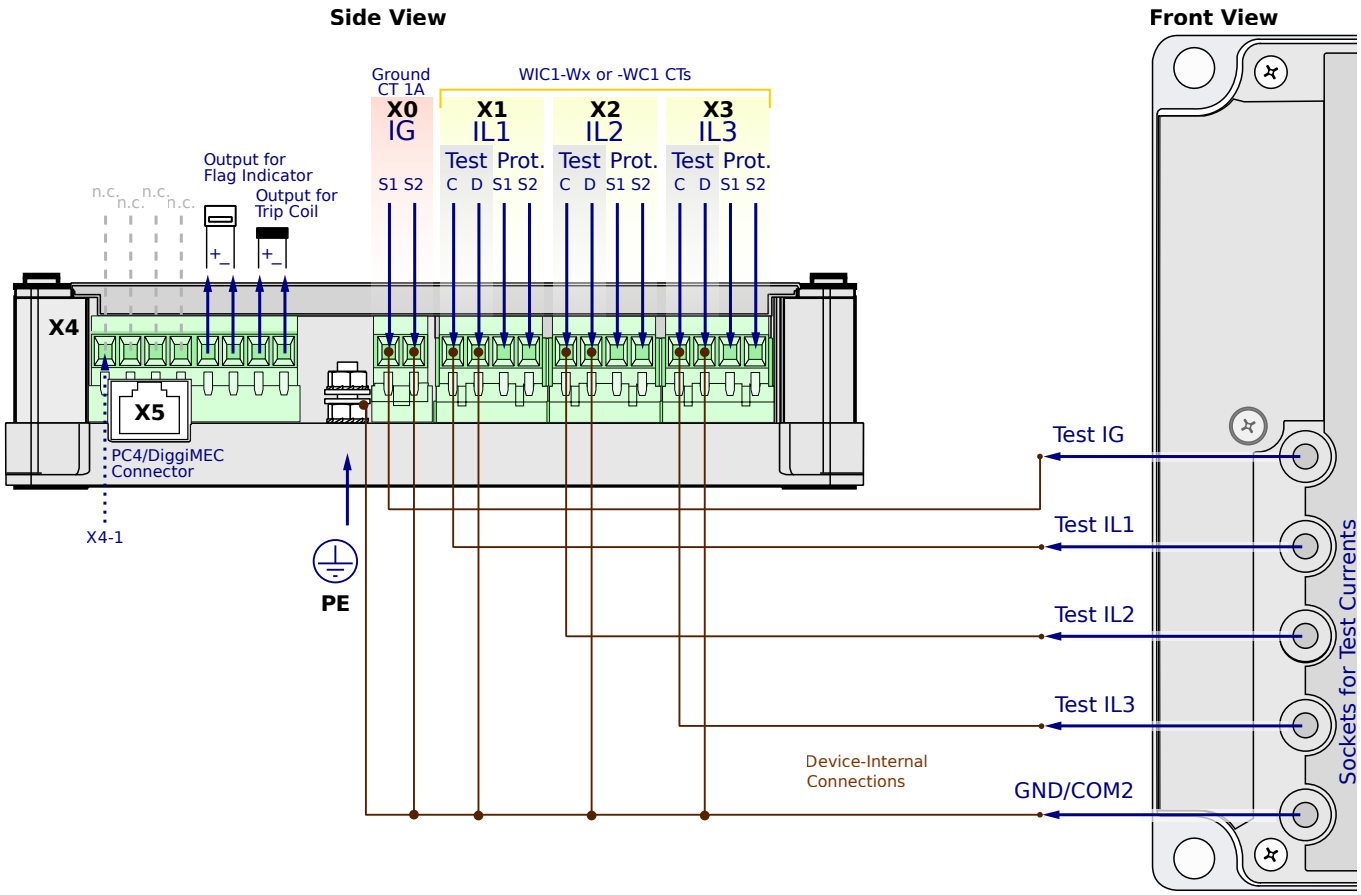


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2AA0

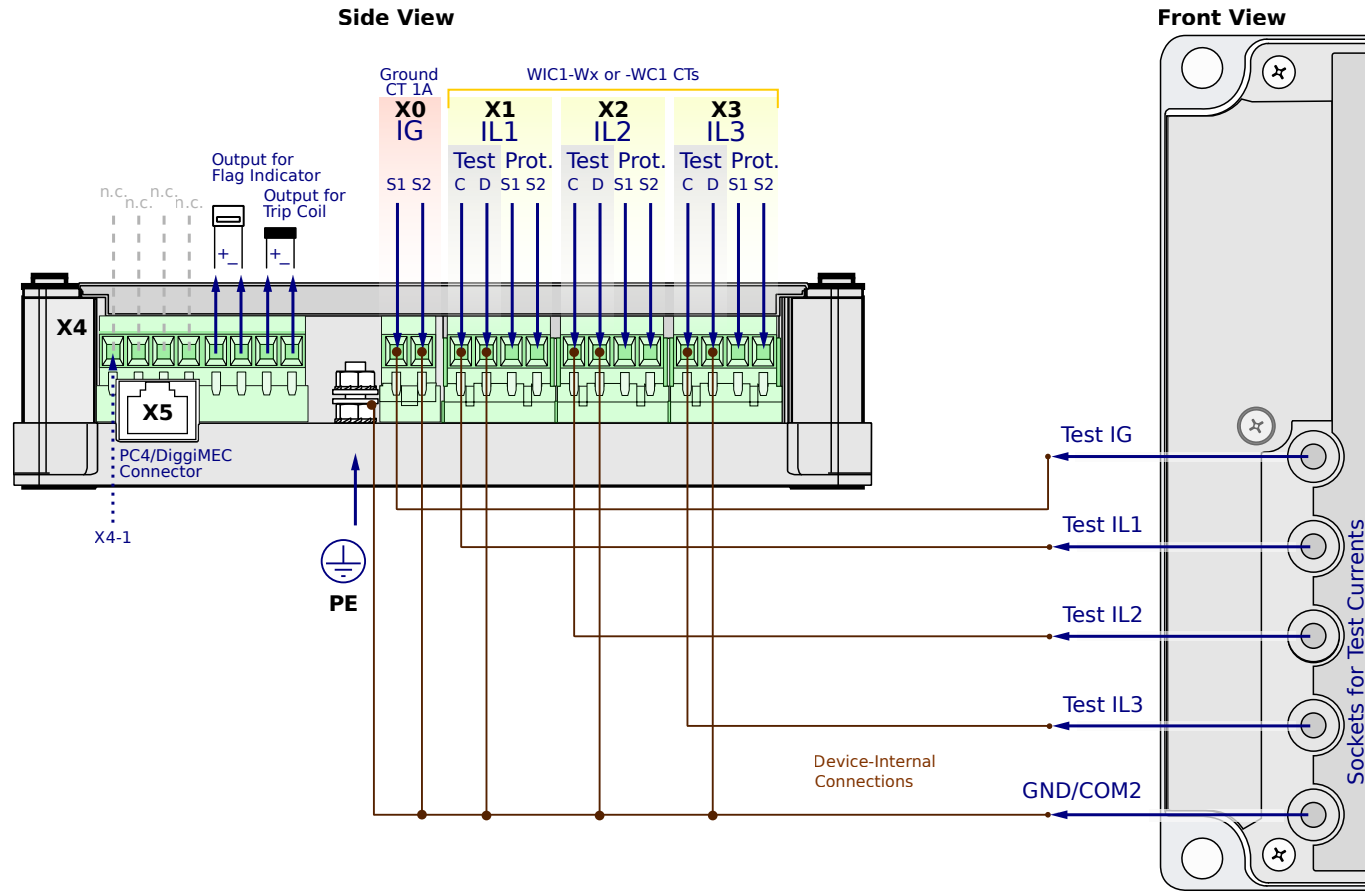


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2AAH

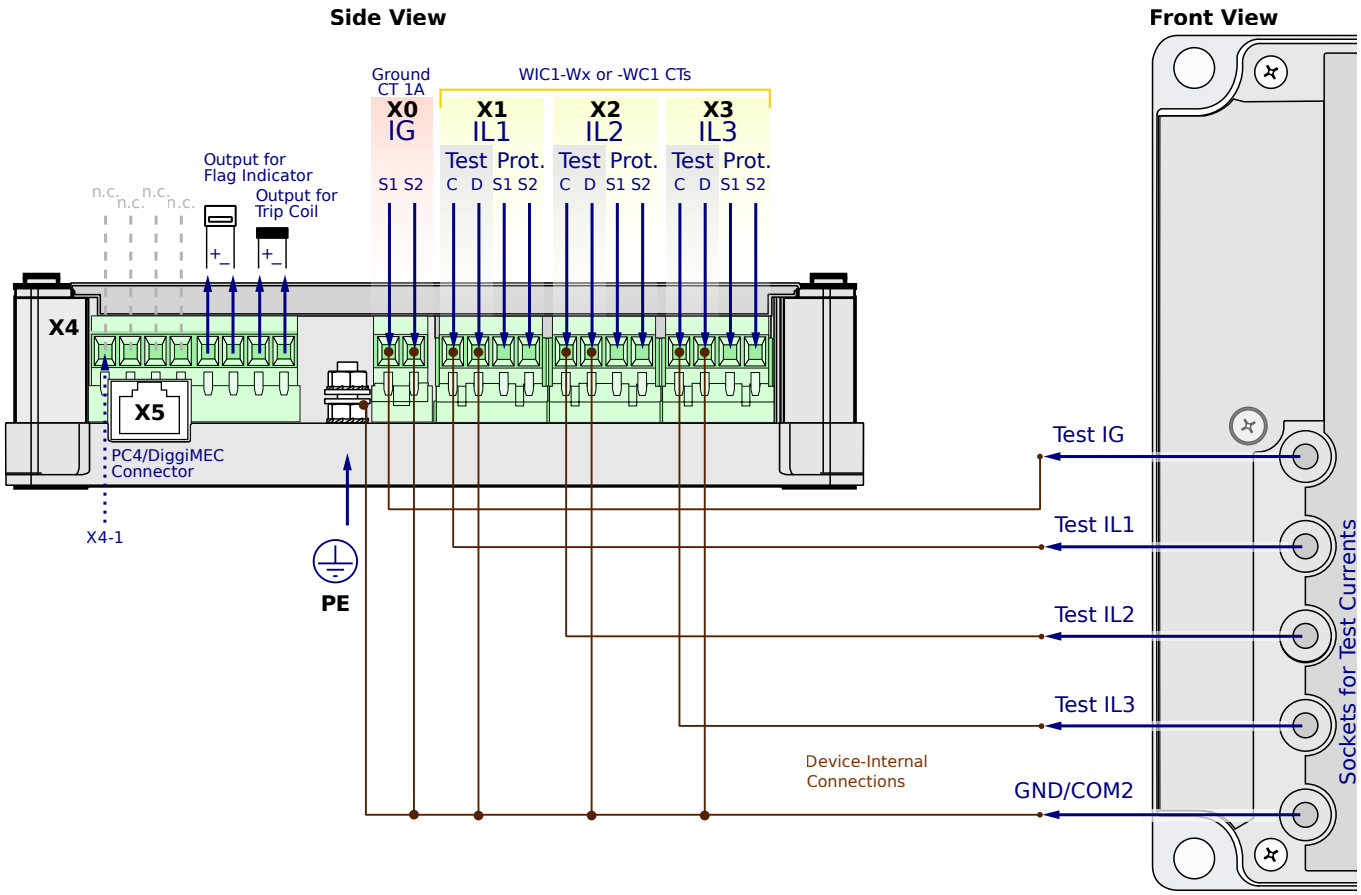


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2PA0

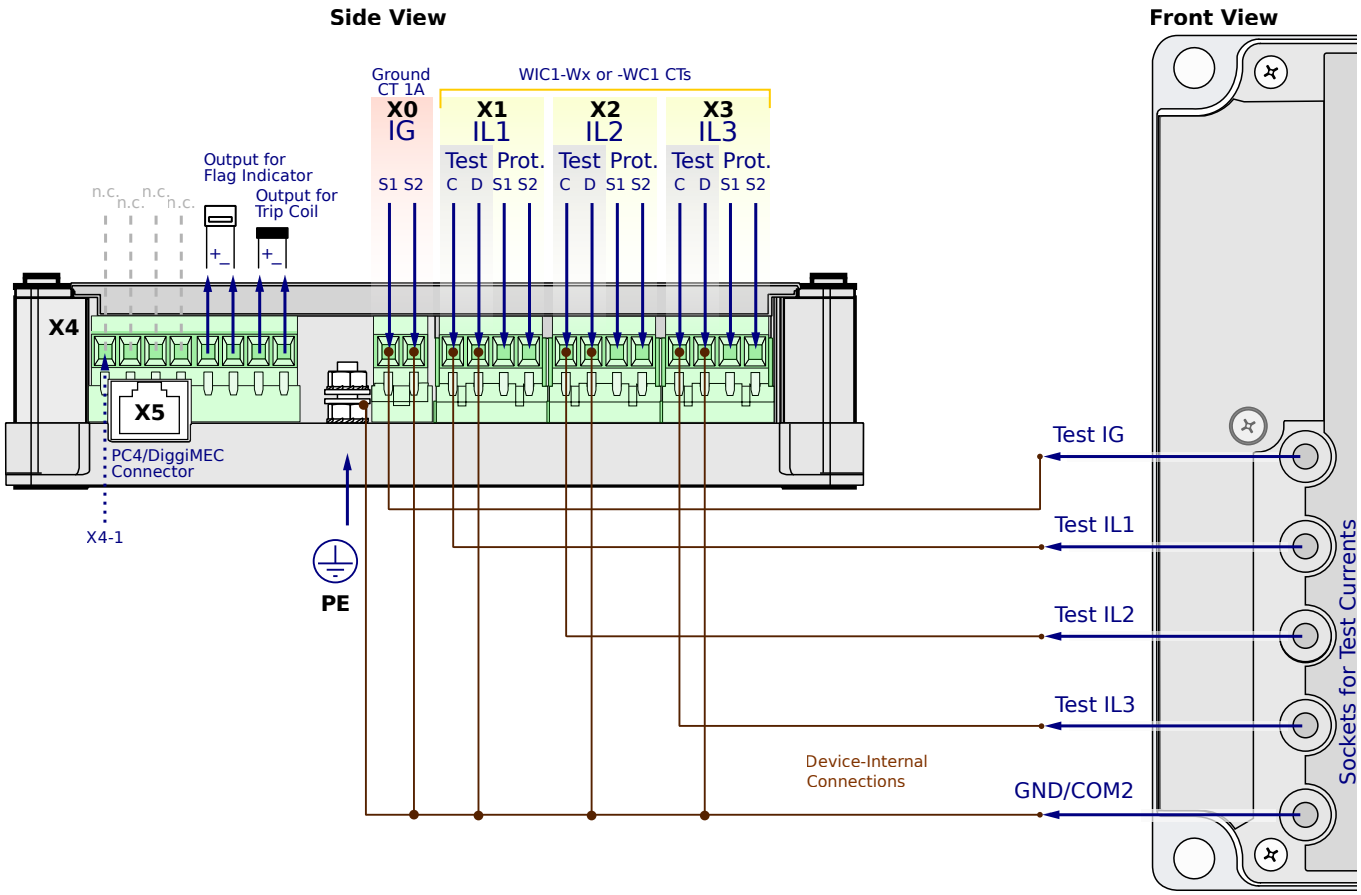


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NN2PAH

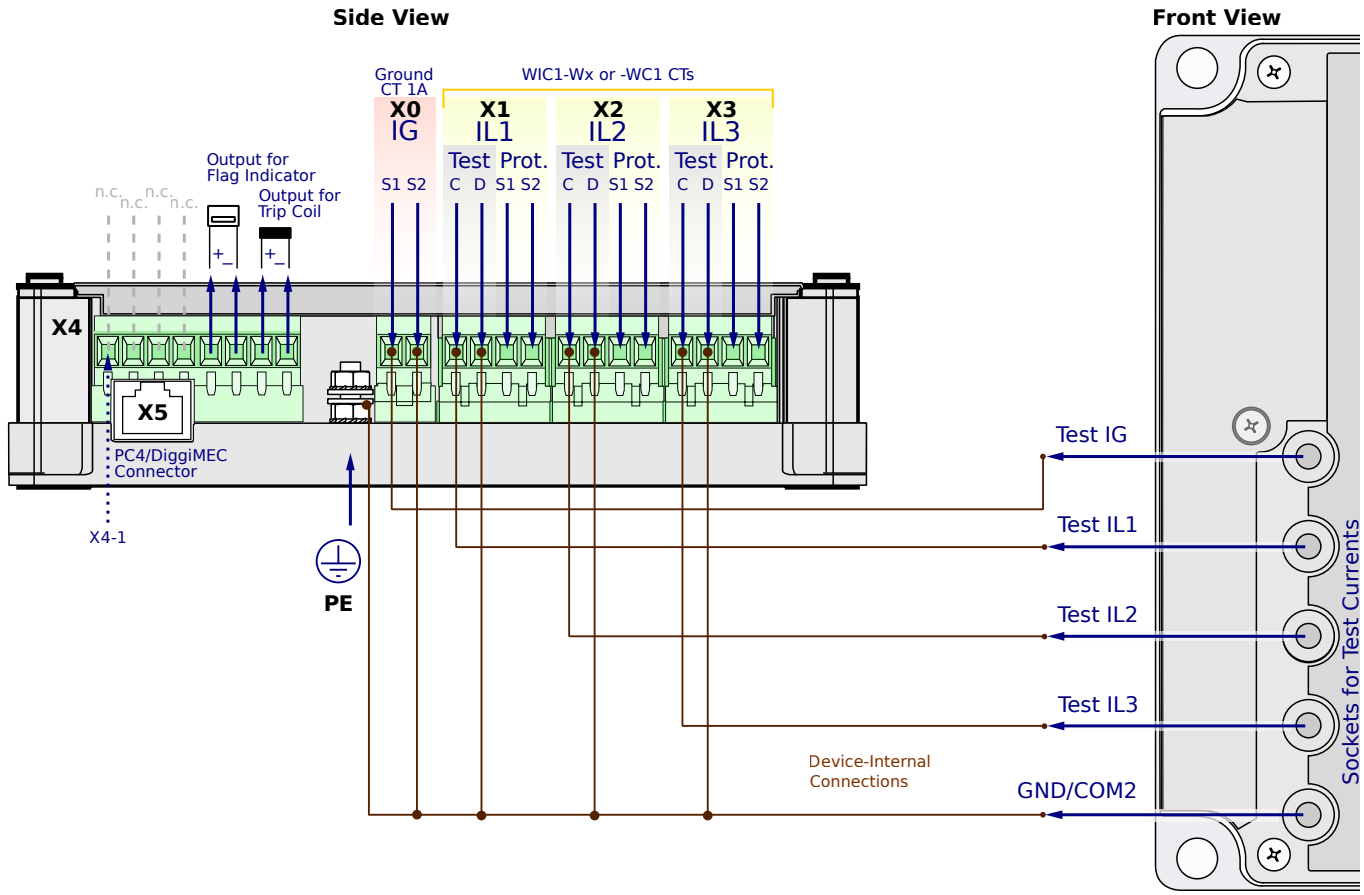


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0SA0

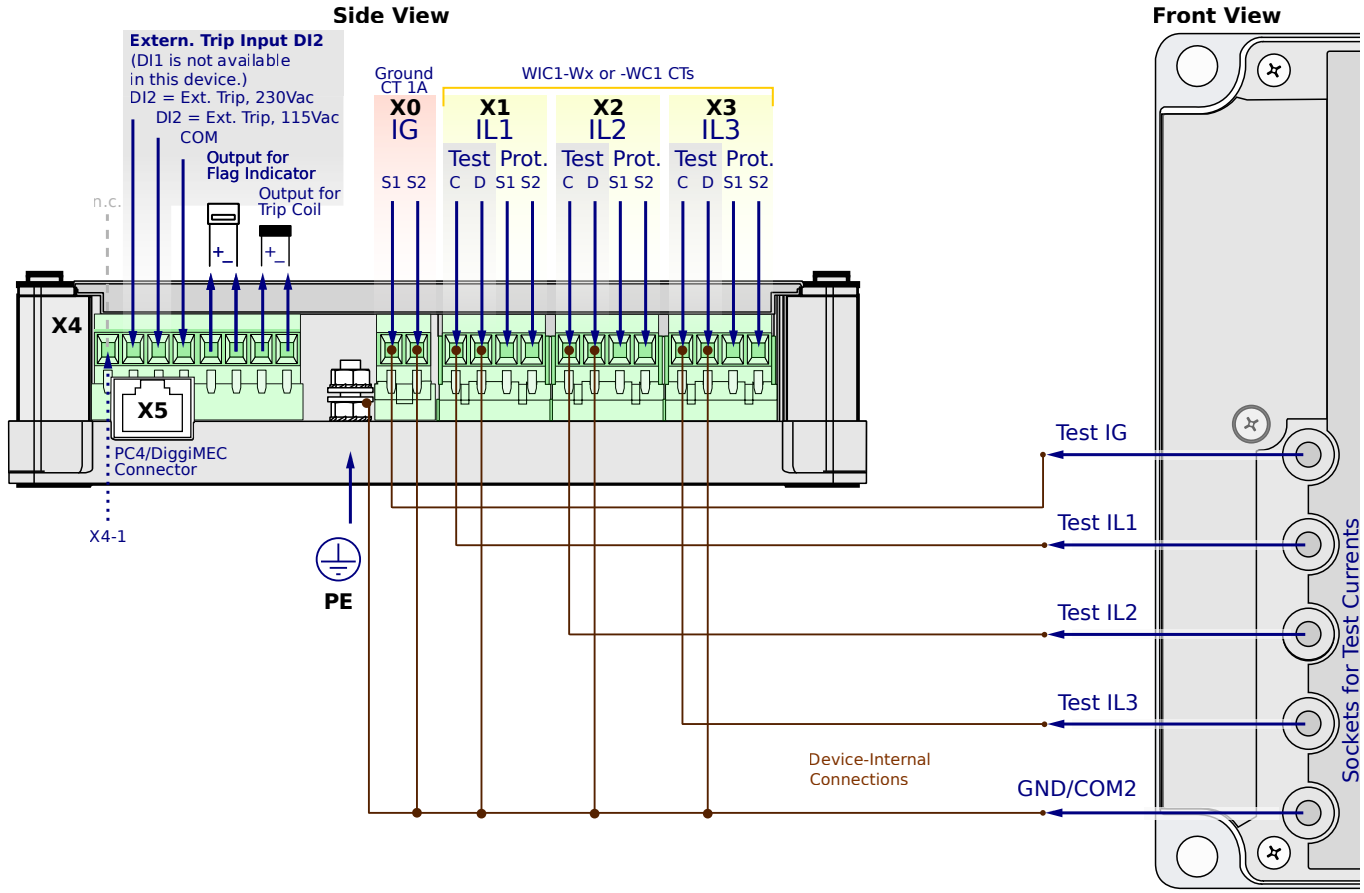


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0SAH

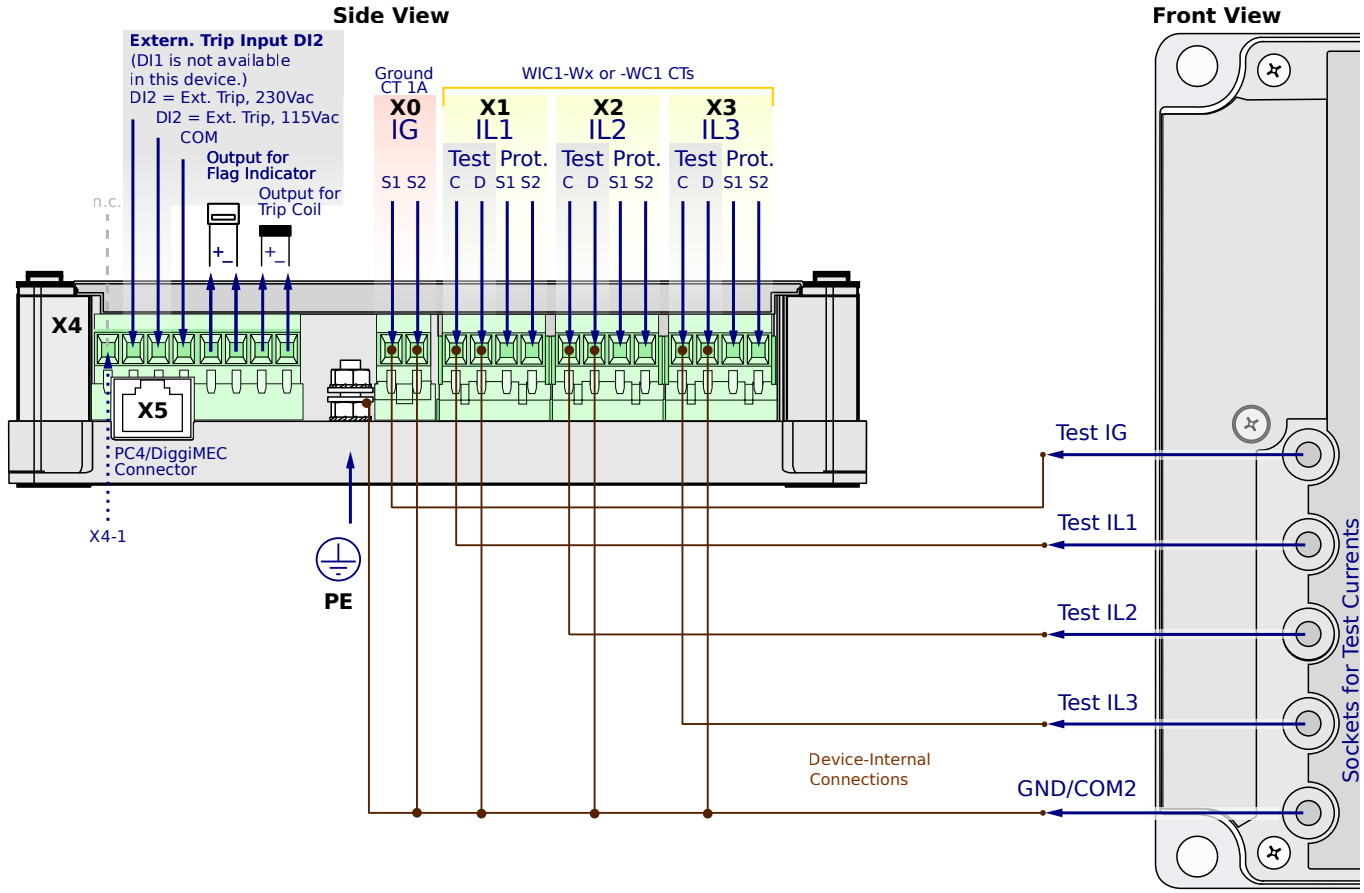


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0AA0

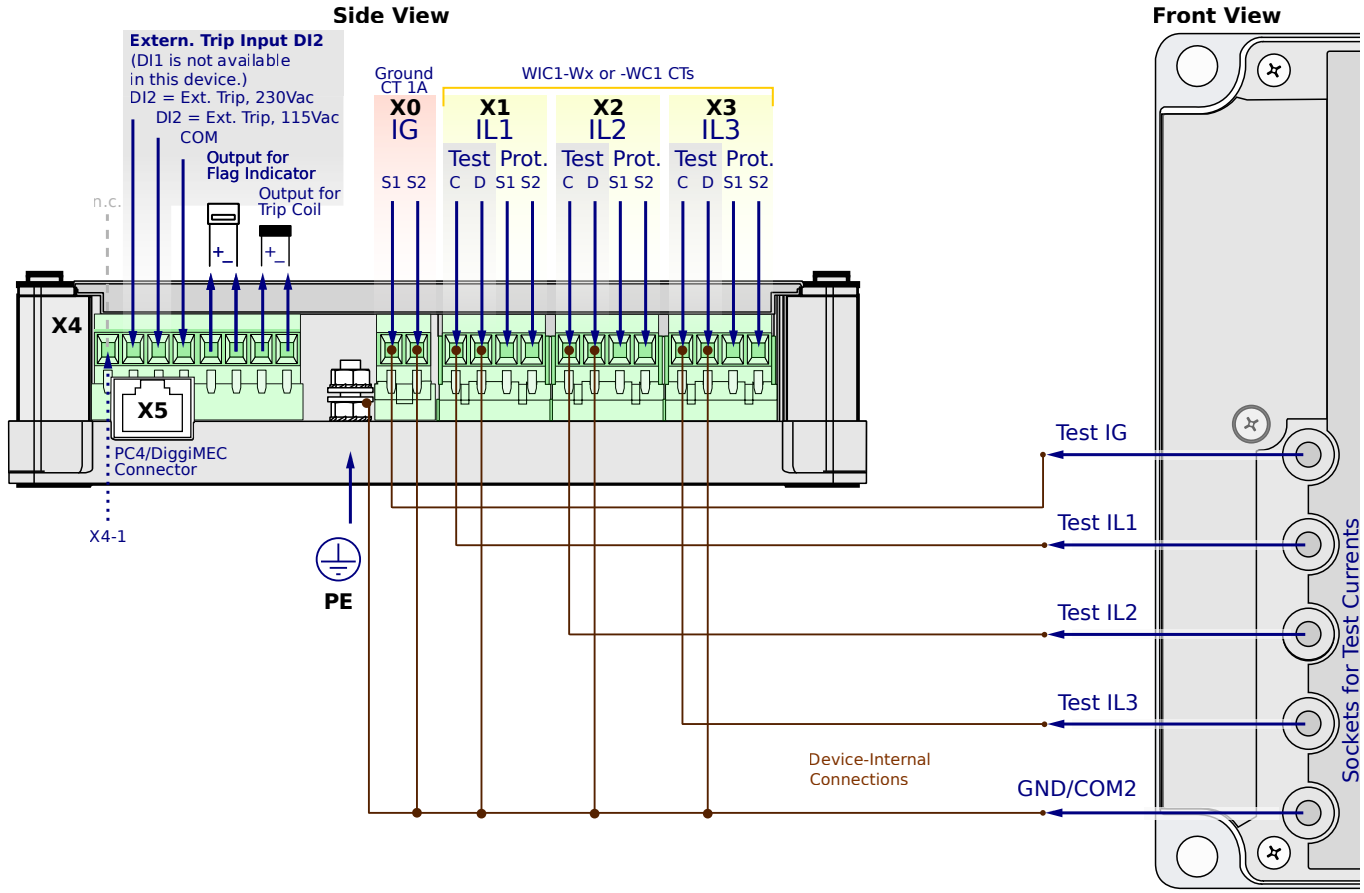


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0AAH

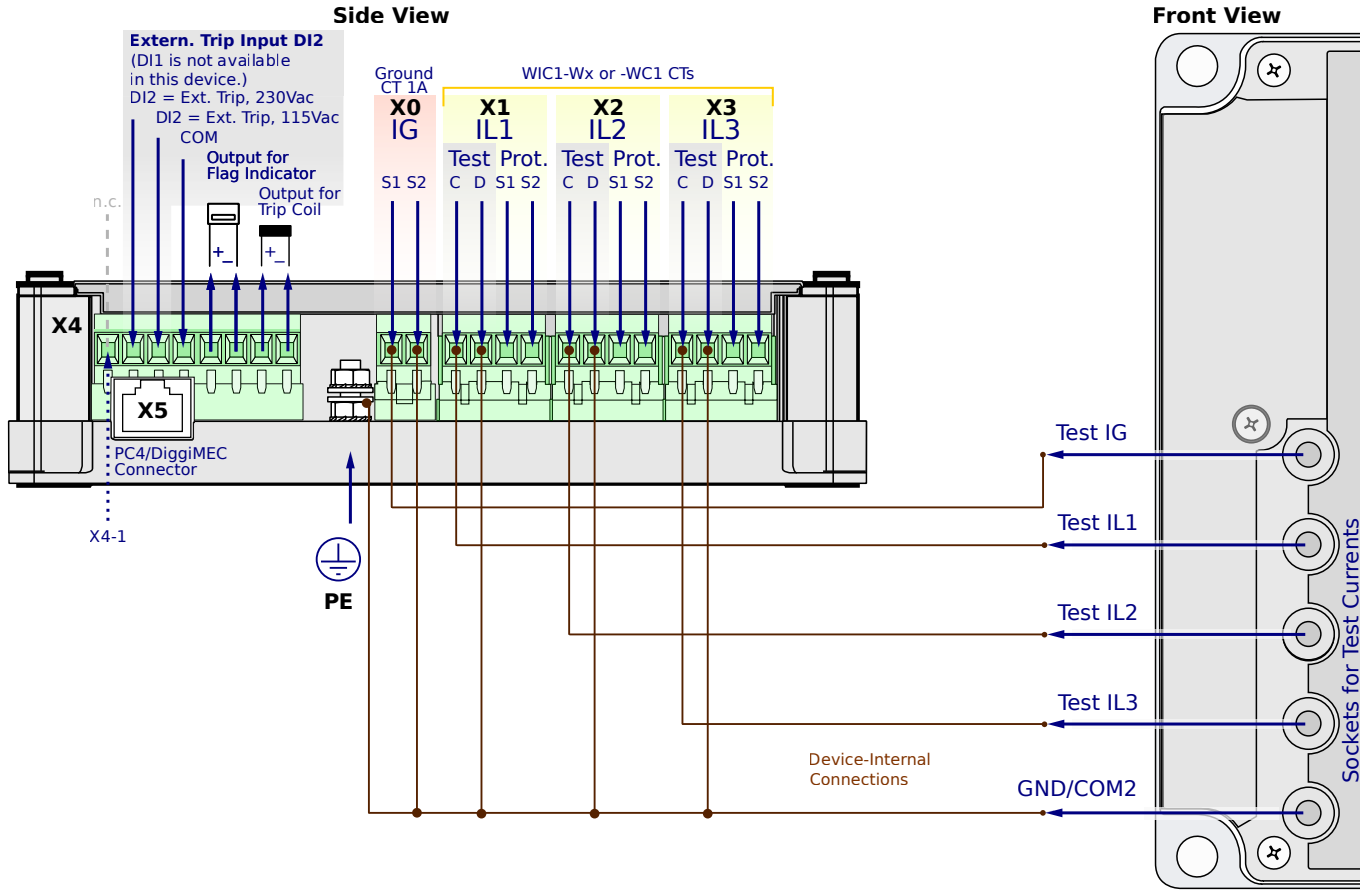


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0PA0

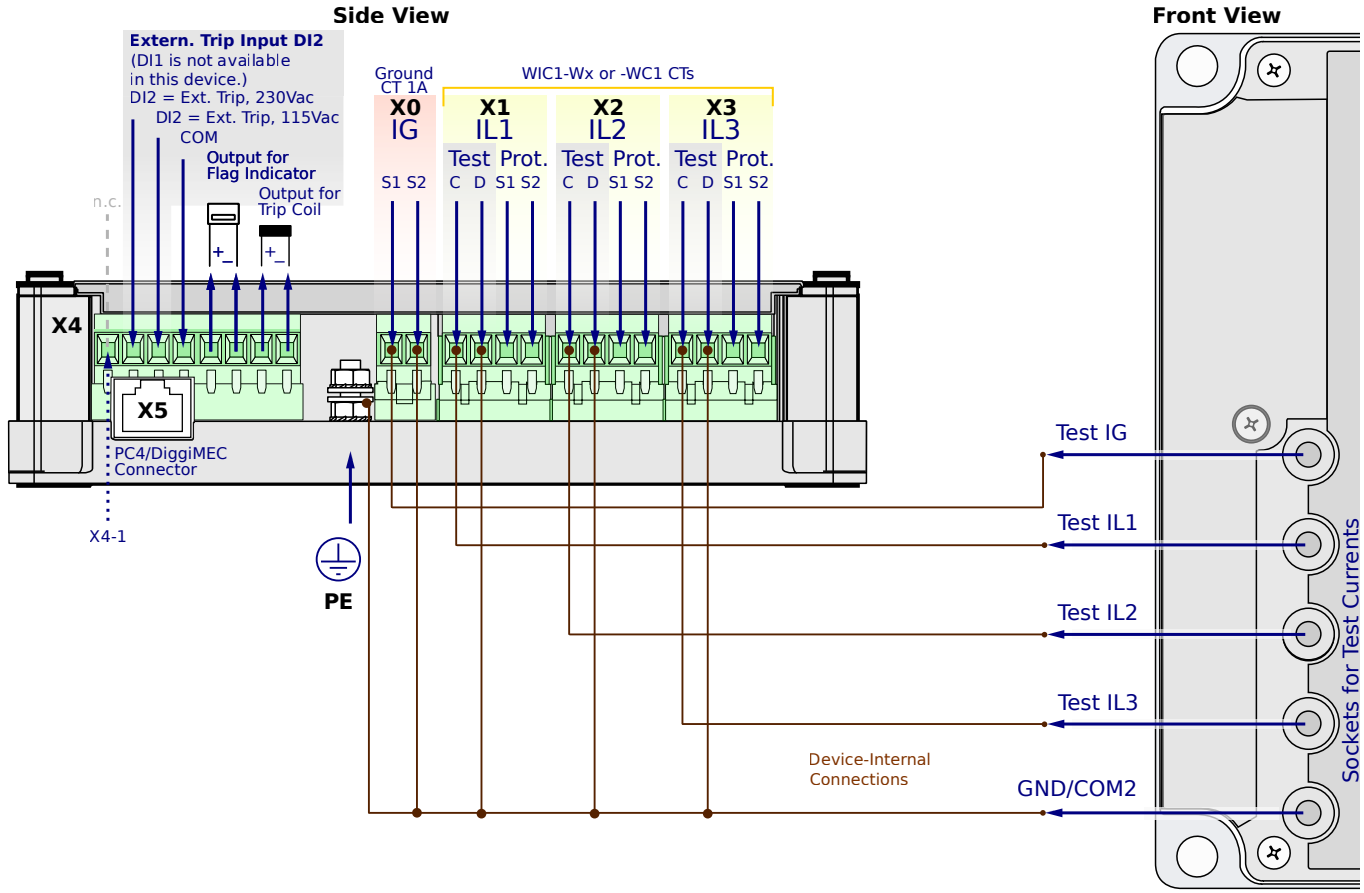


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF0PAH

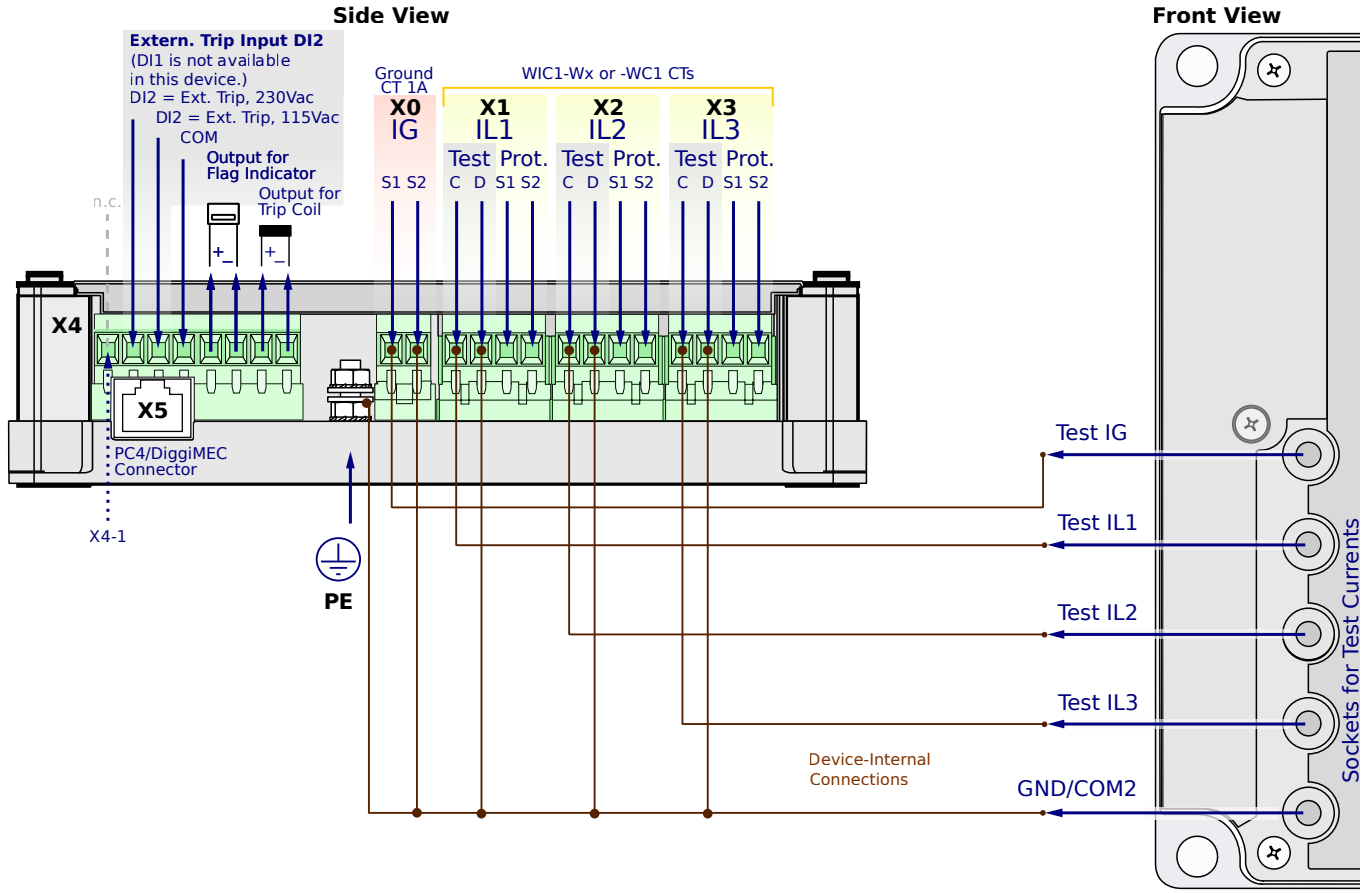


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1SA0

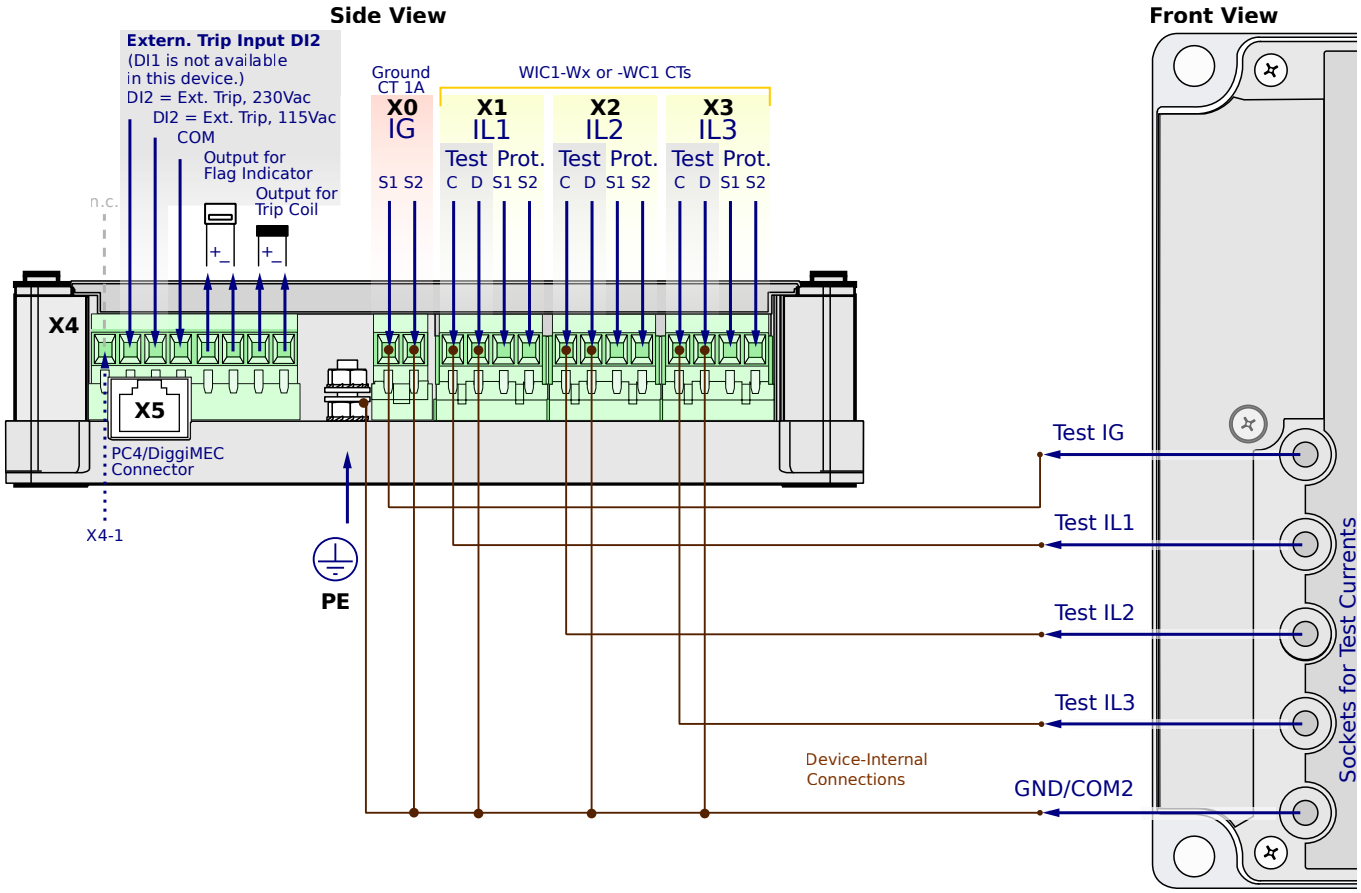


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1SAH

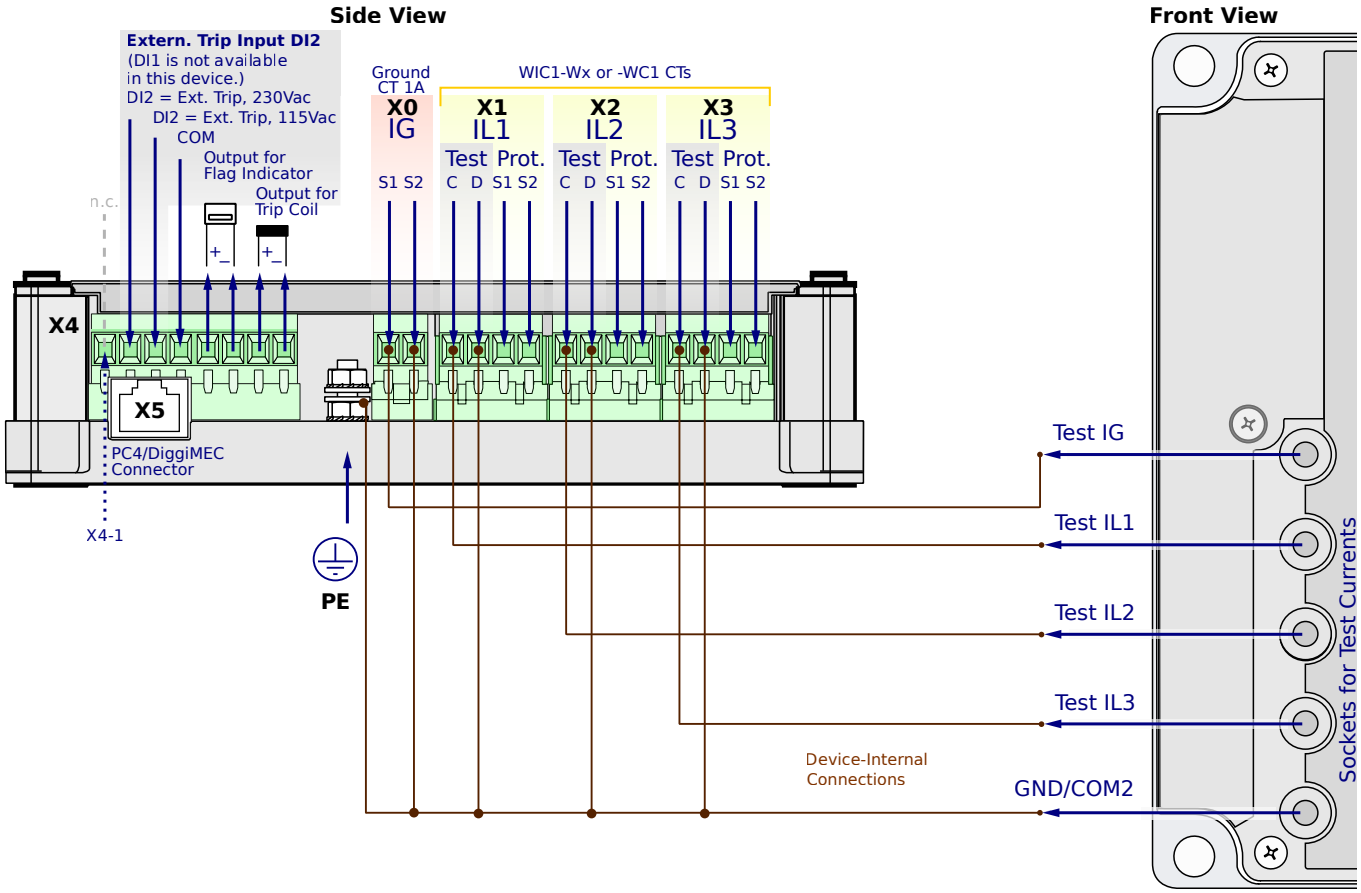


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1AA0

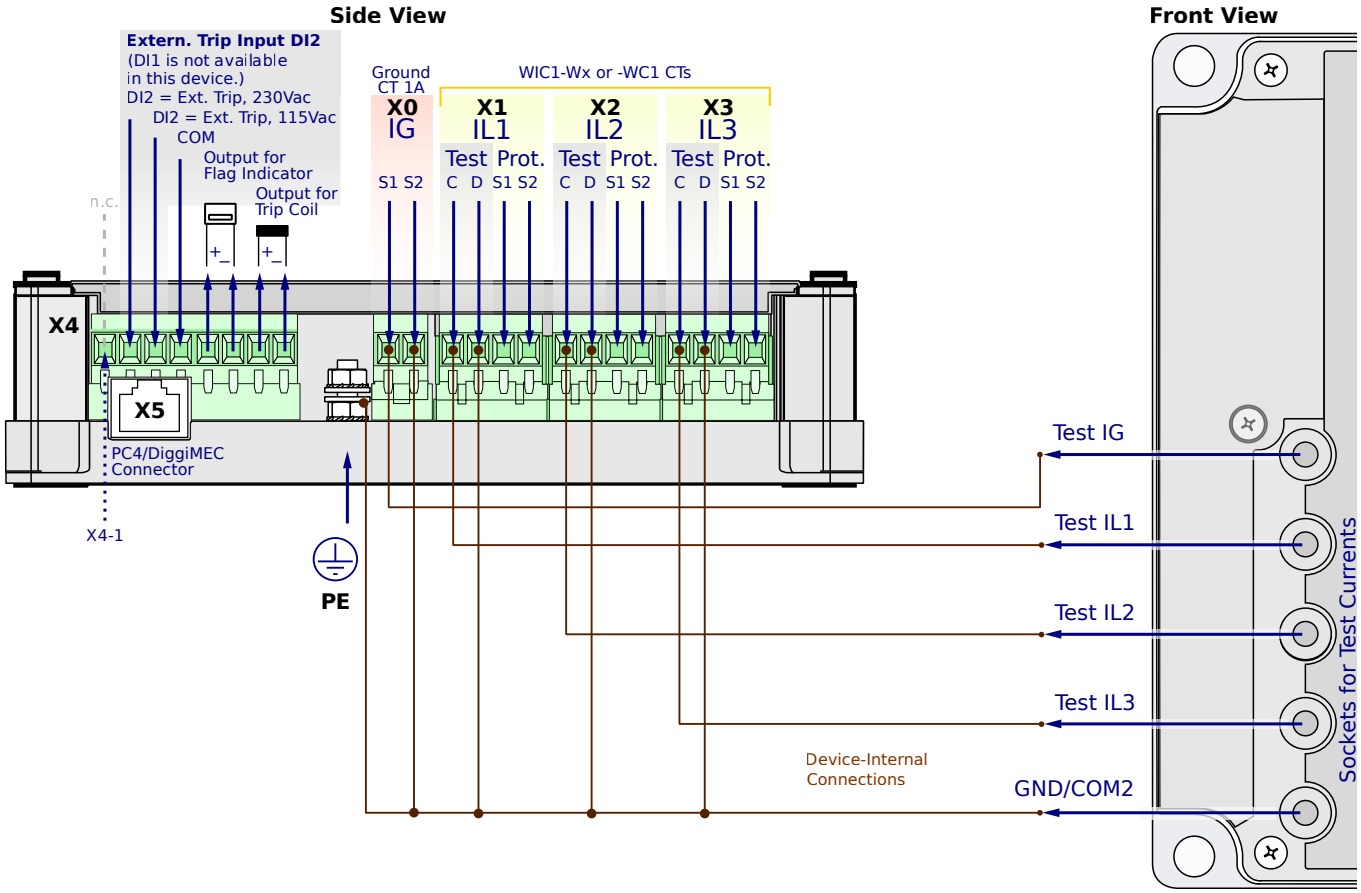


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1AAH

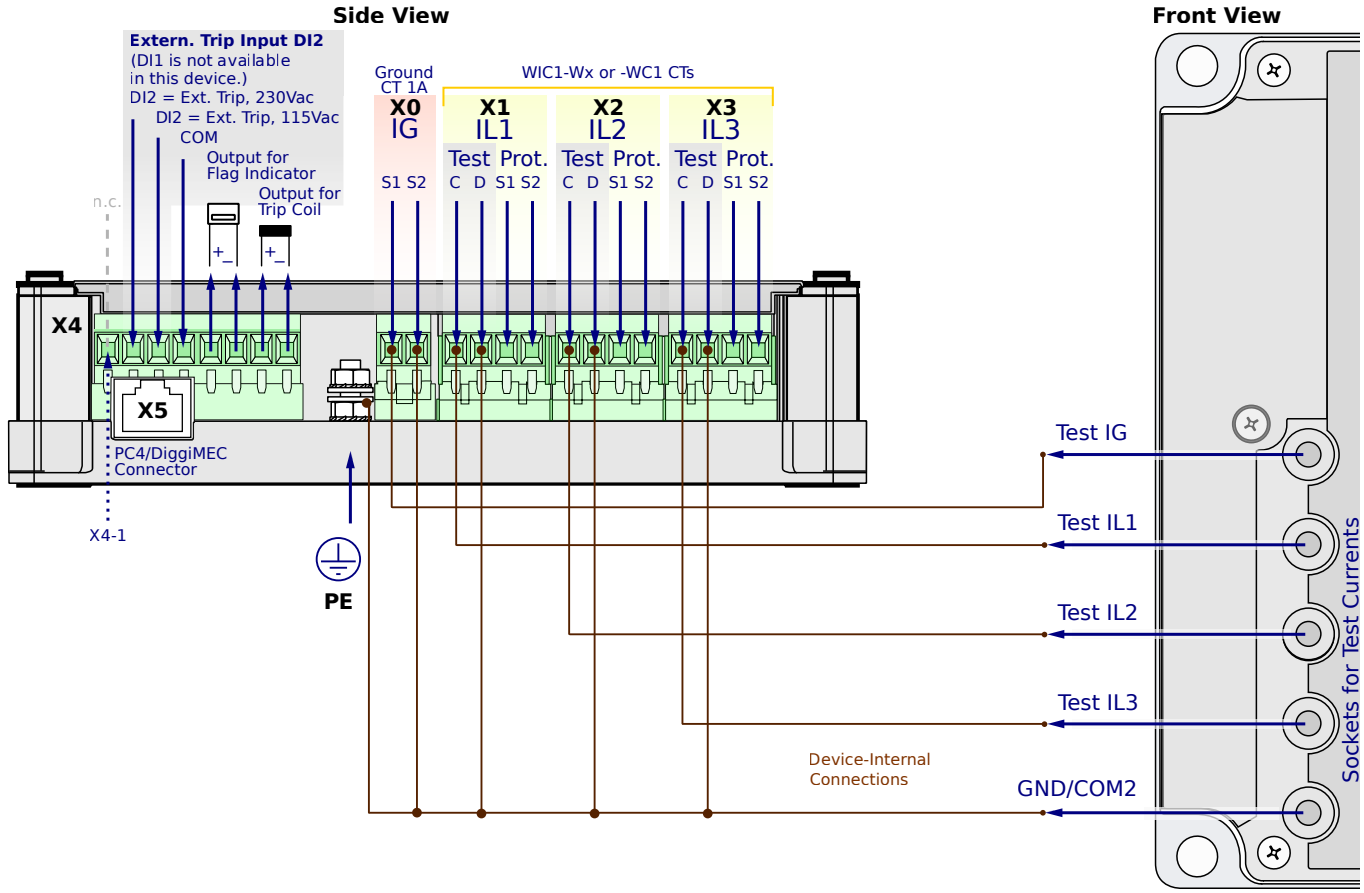


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1PA0

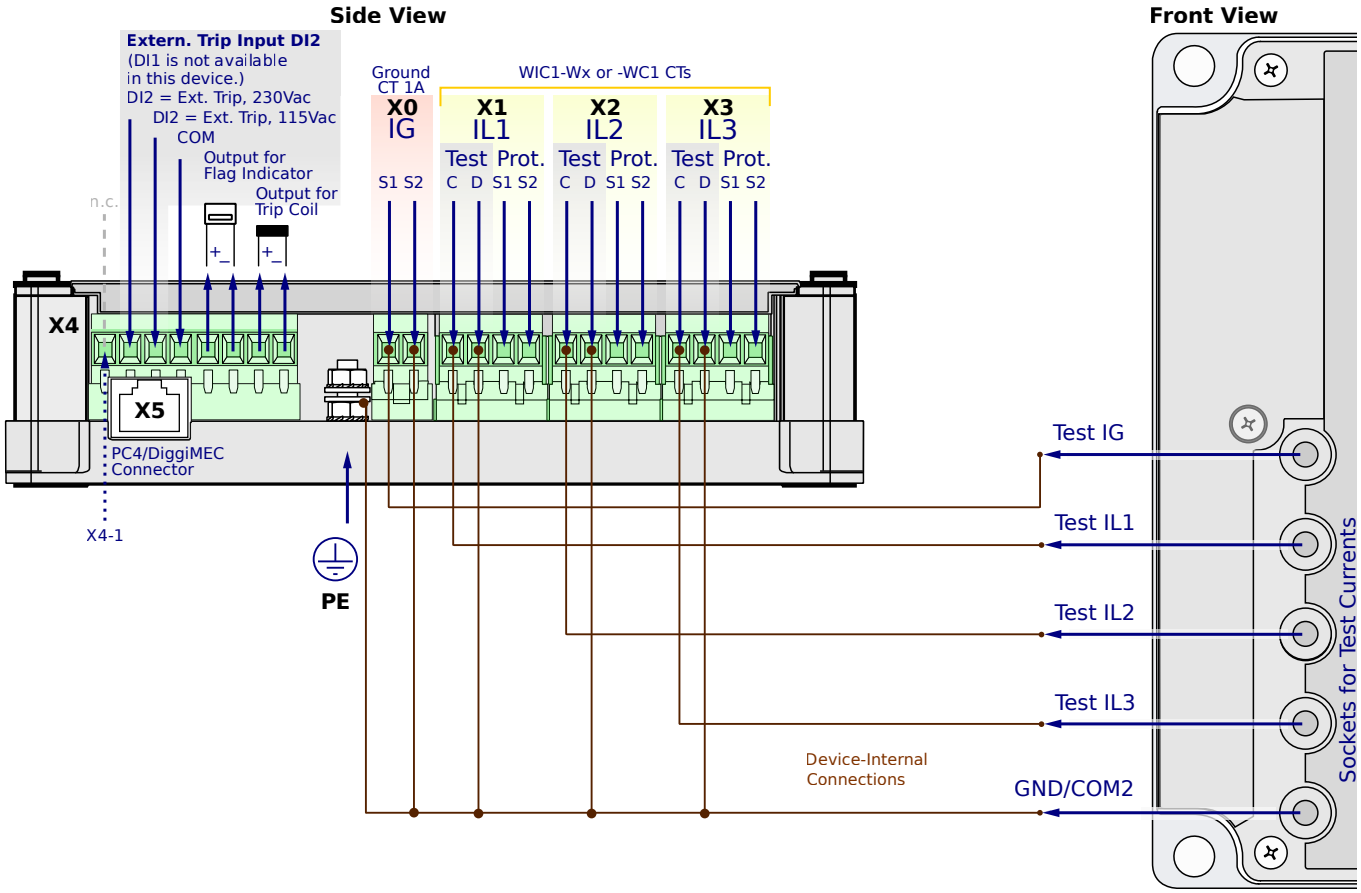


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF1PAH

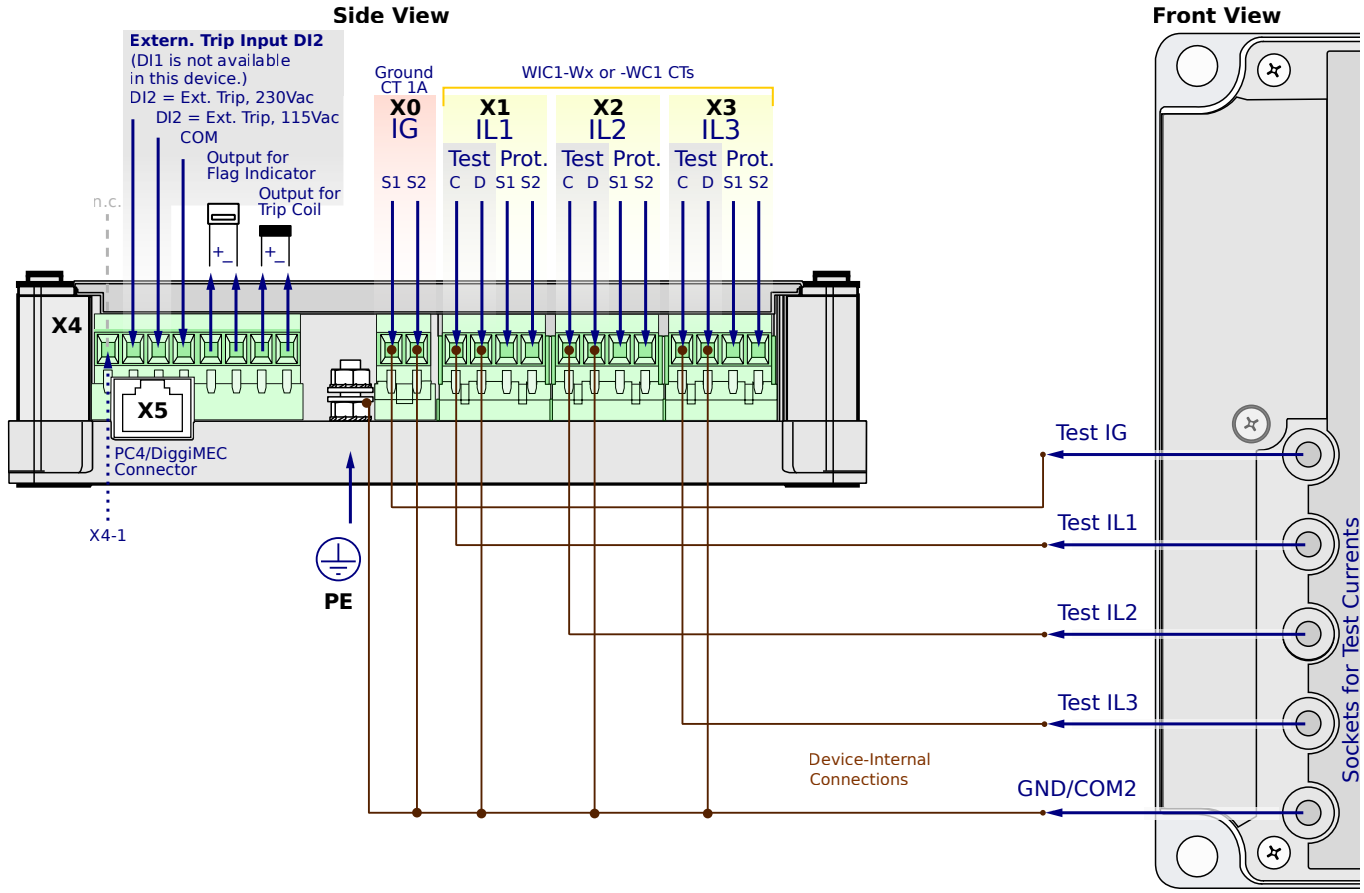


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2SA0

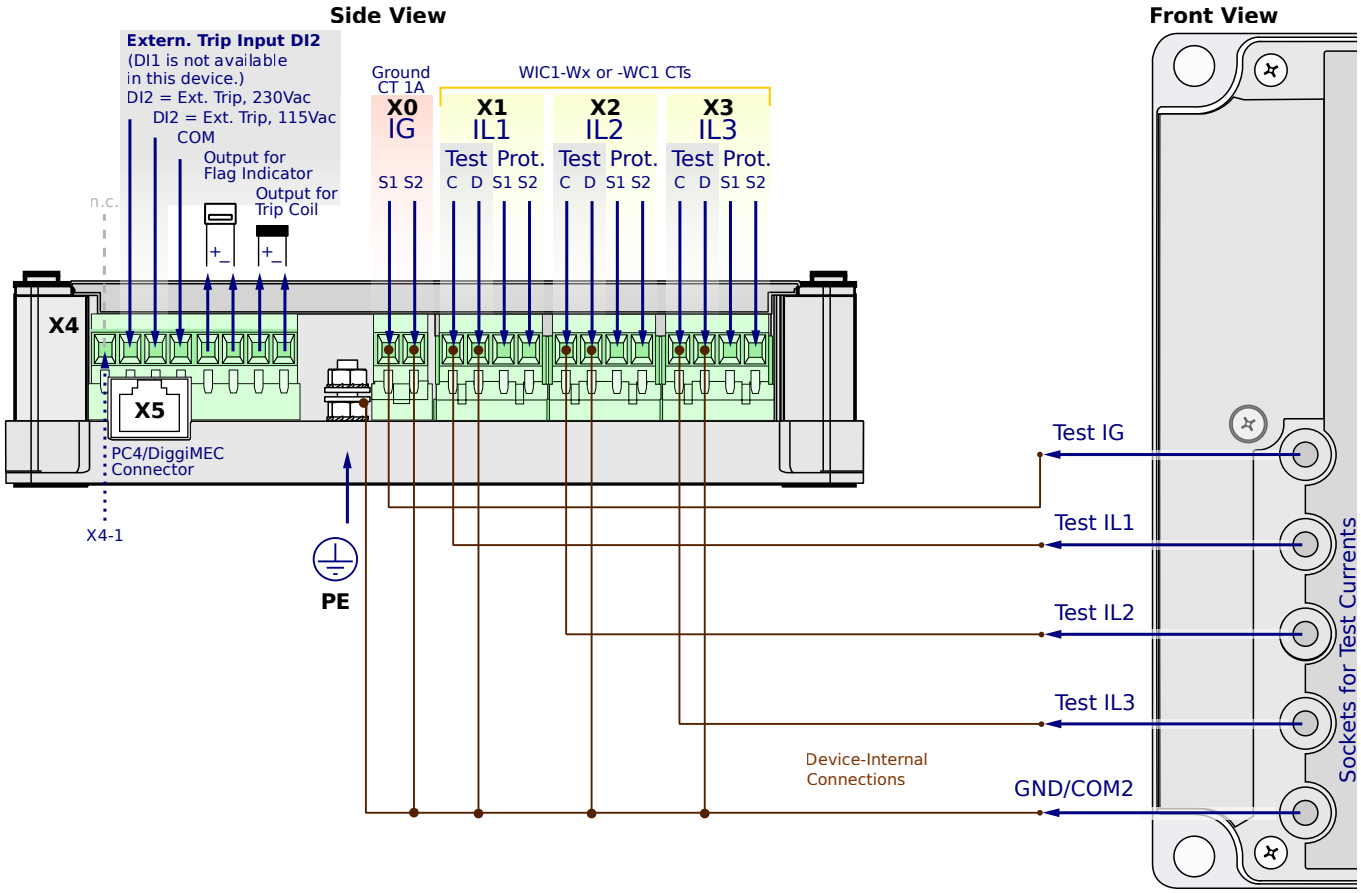


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2SAH

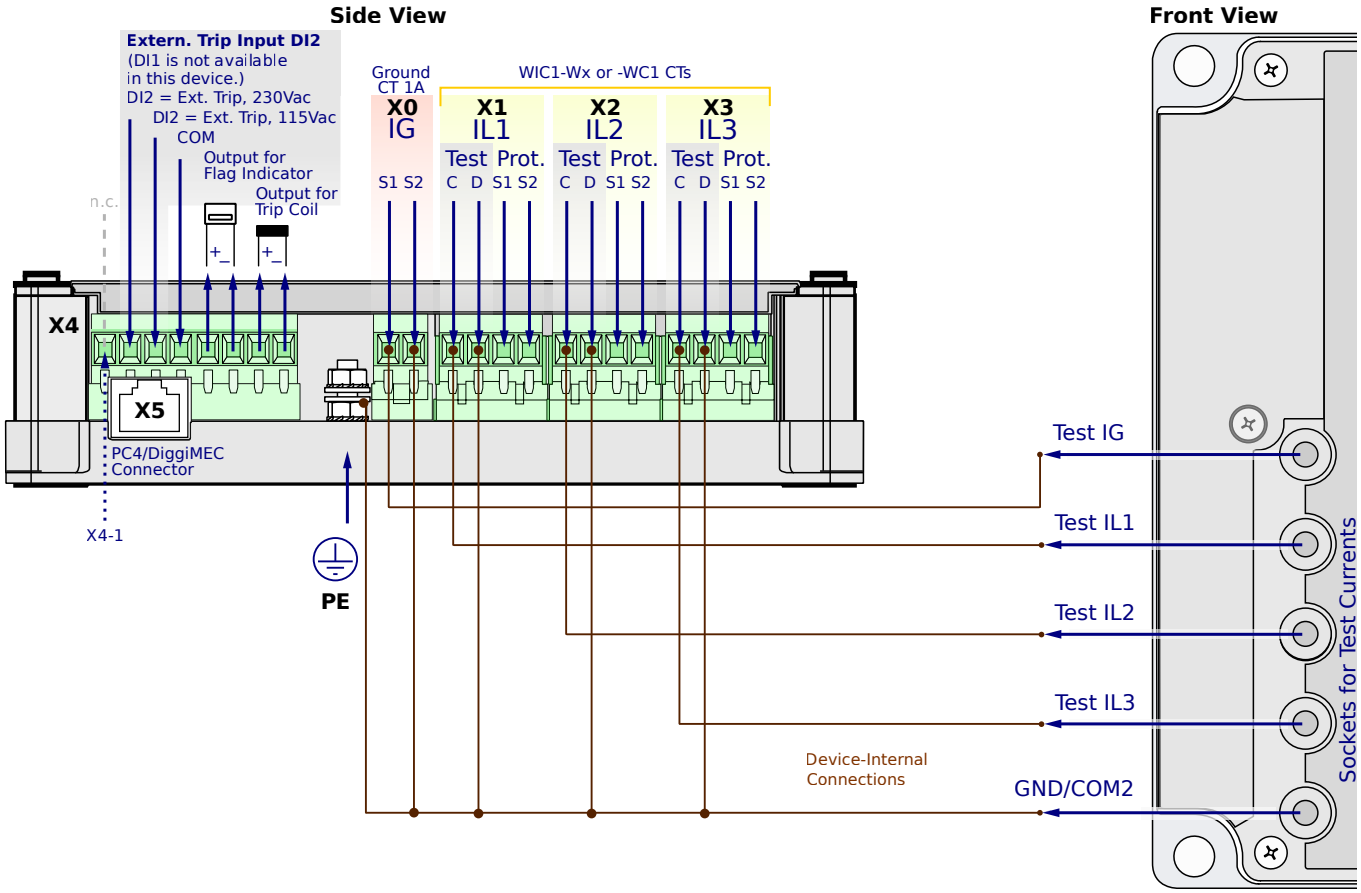


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2AA0

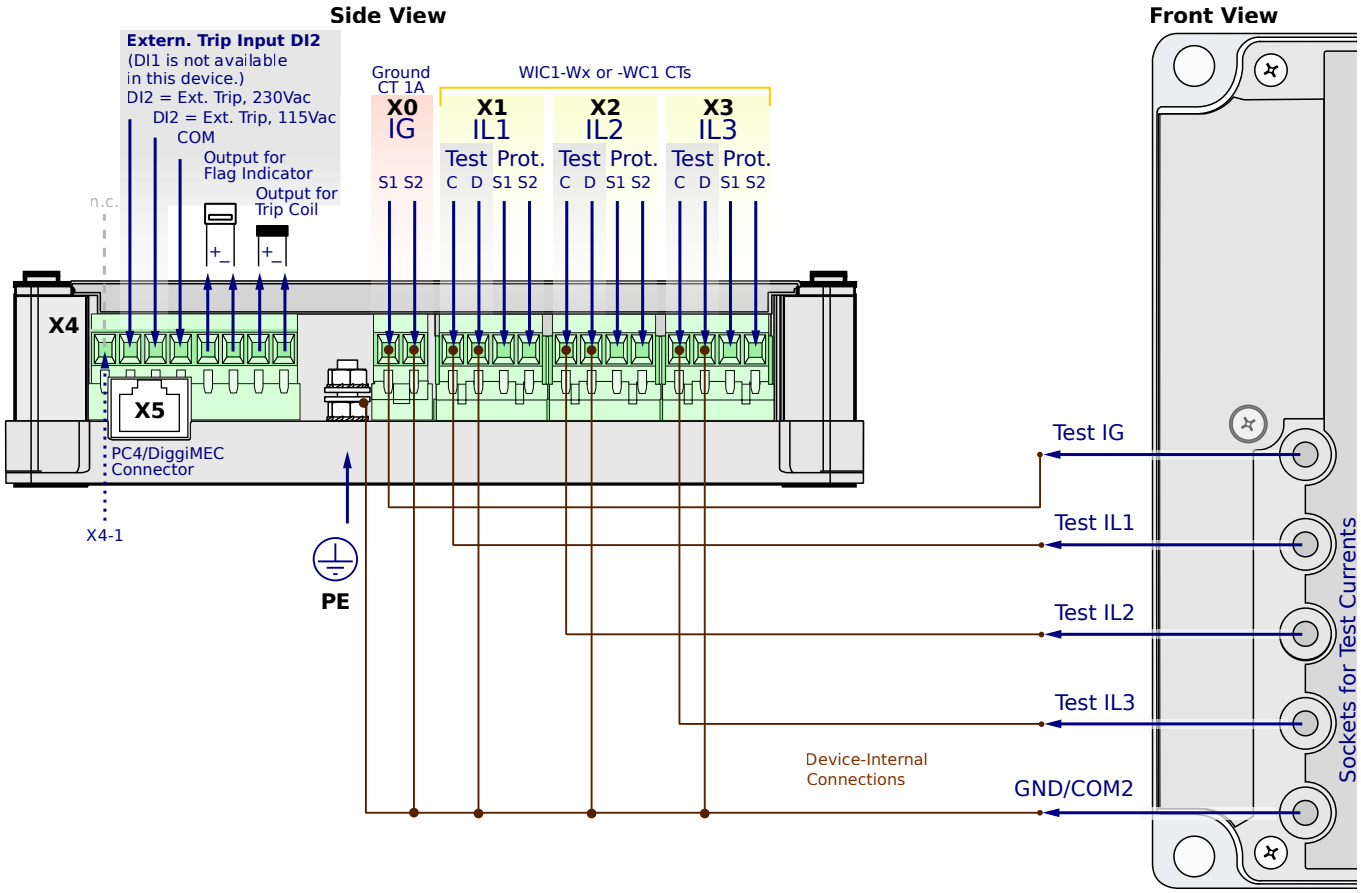


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2AAH

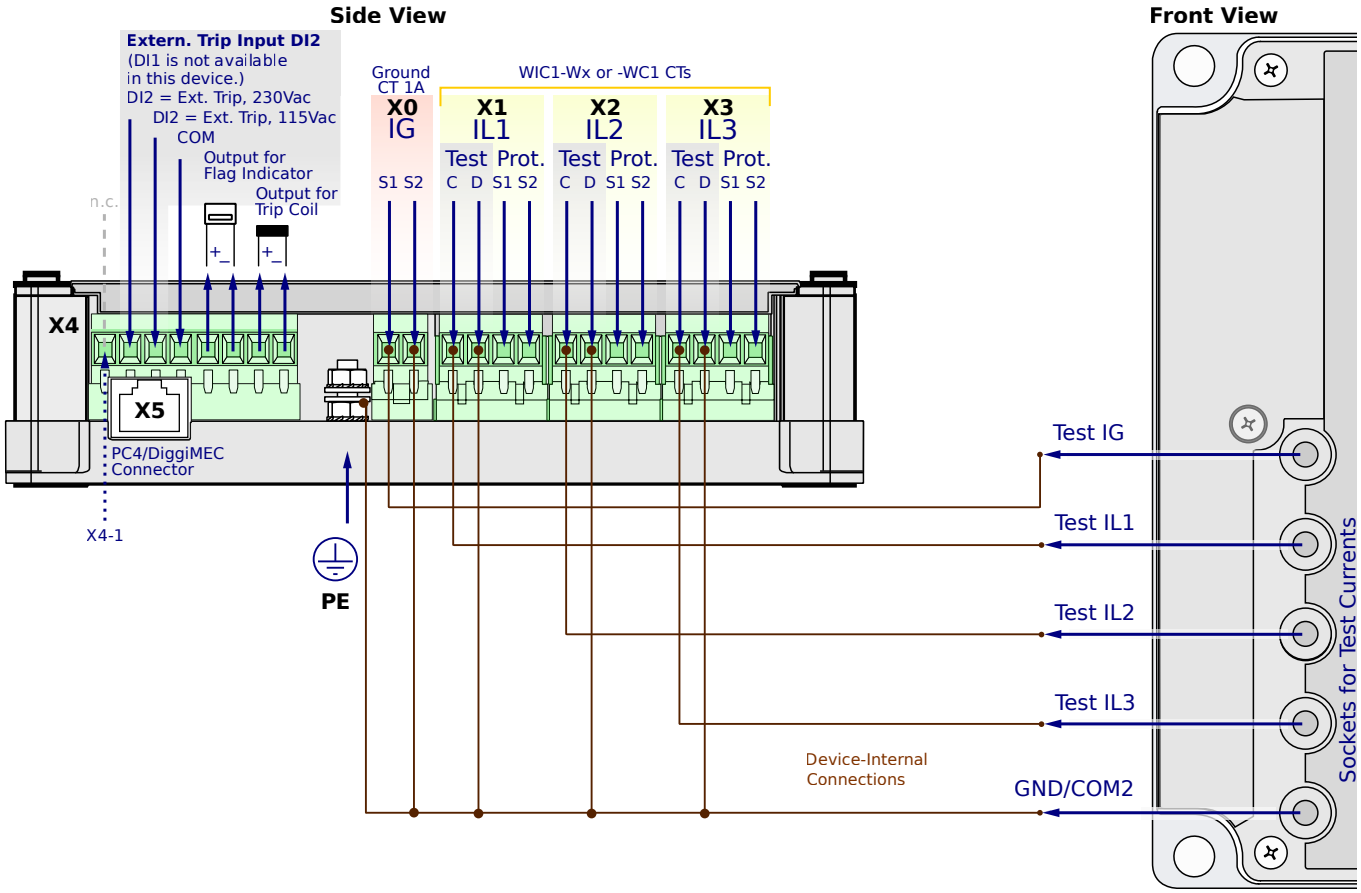


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2PA0

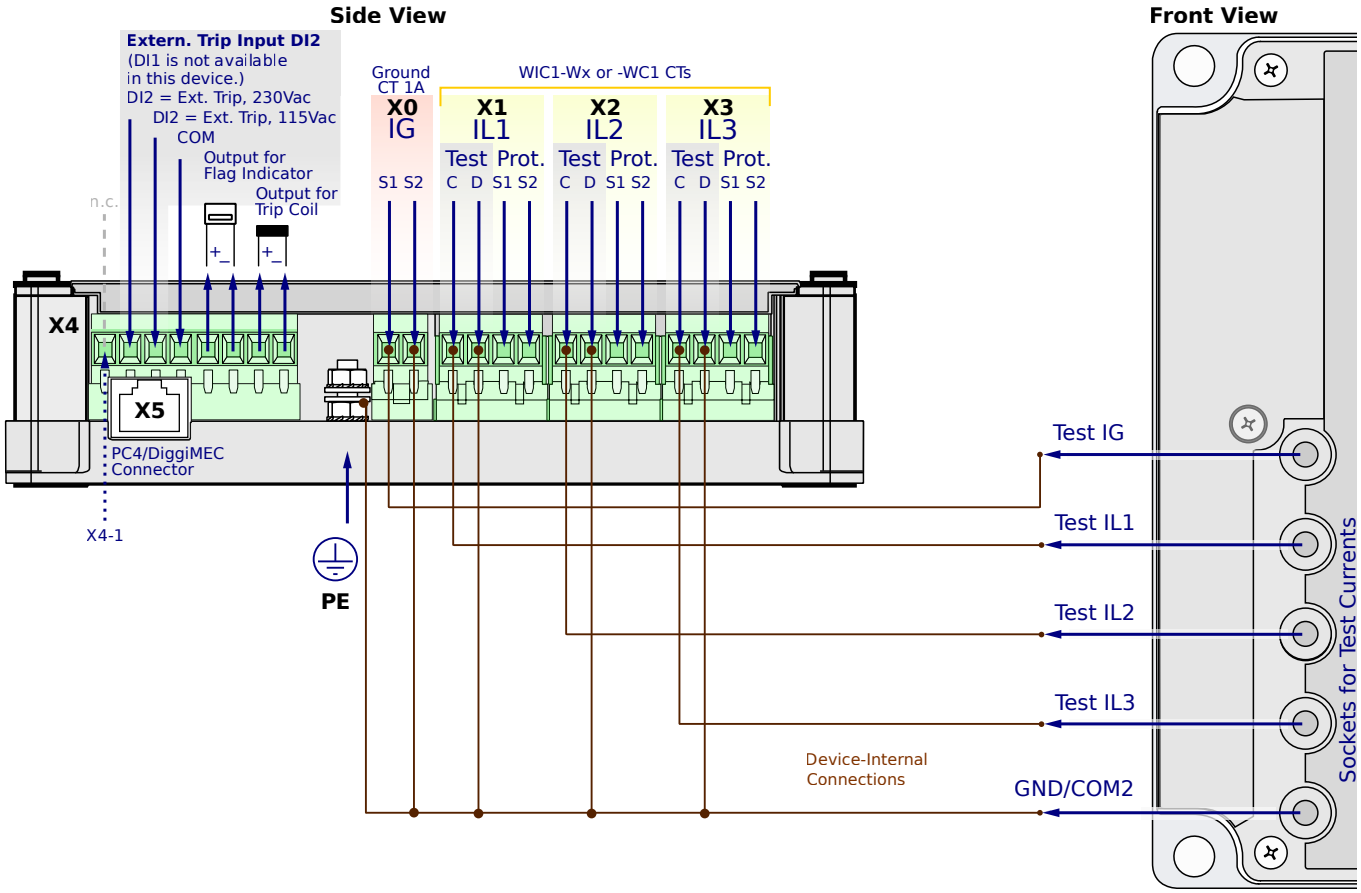


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NF2PAH

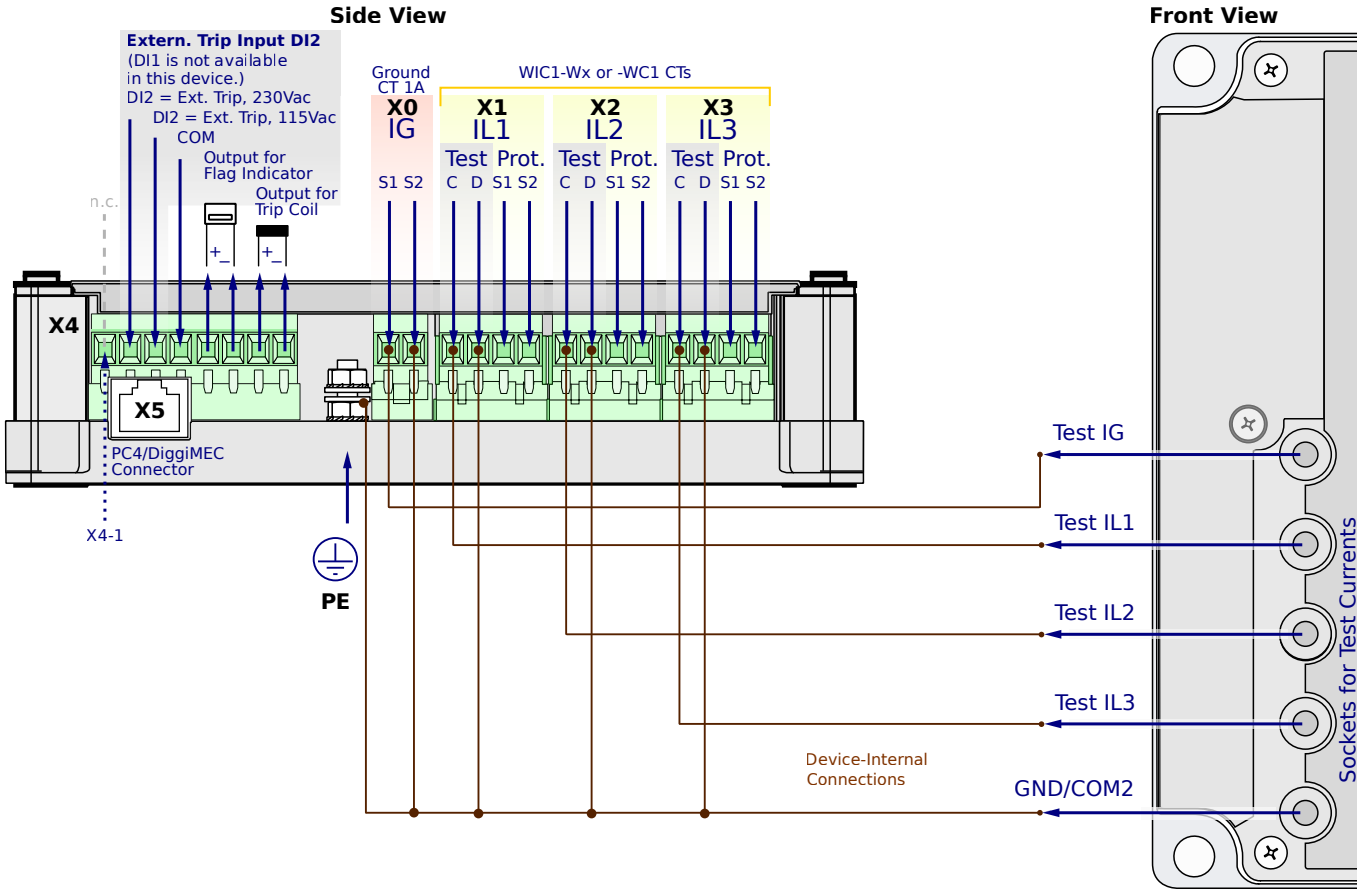


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0SA0

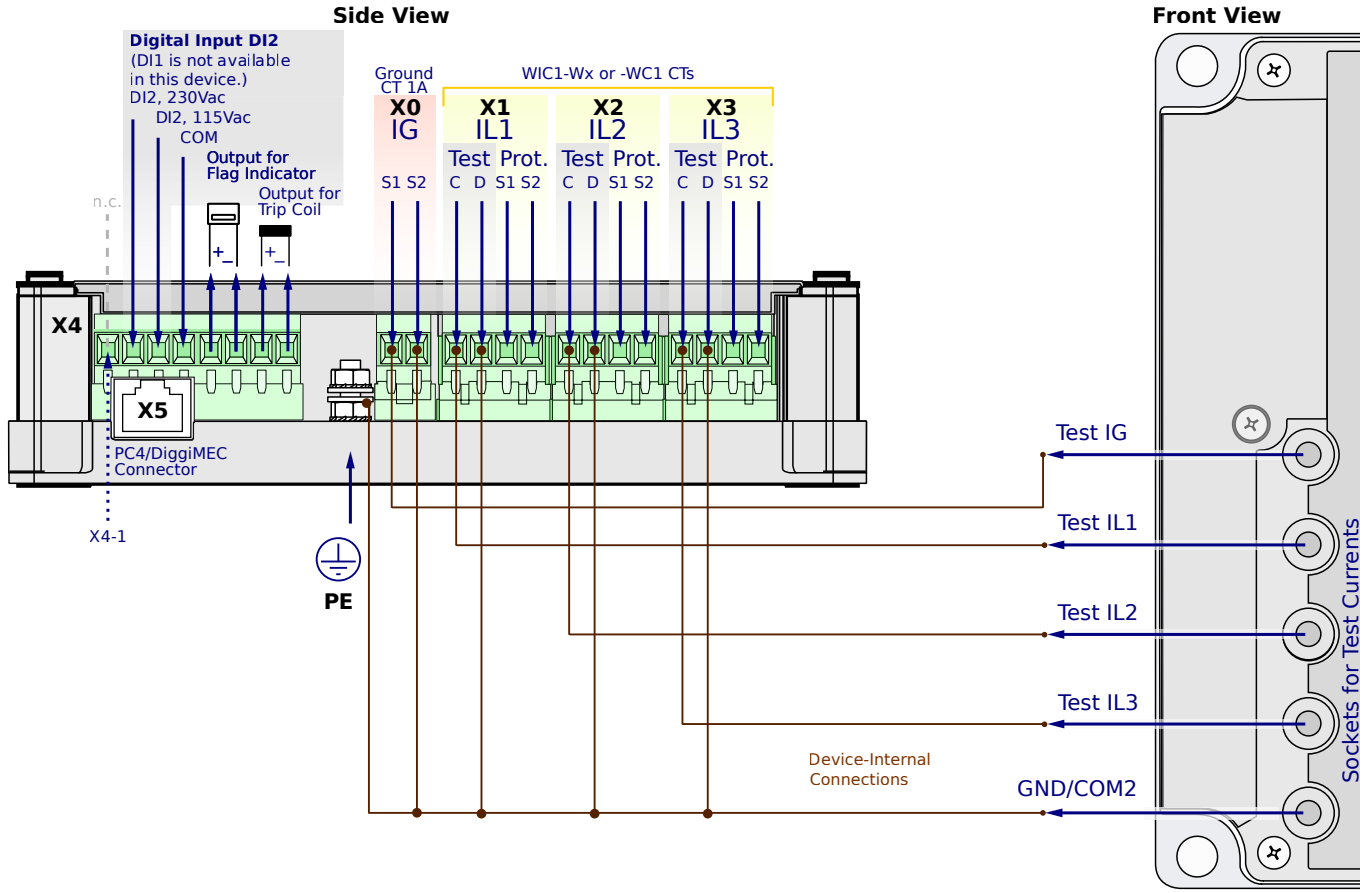


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0SAH

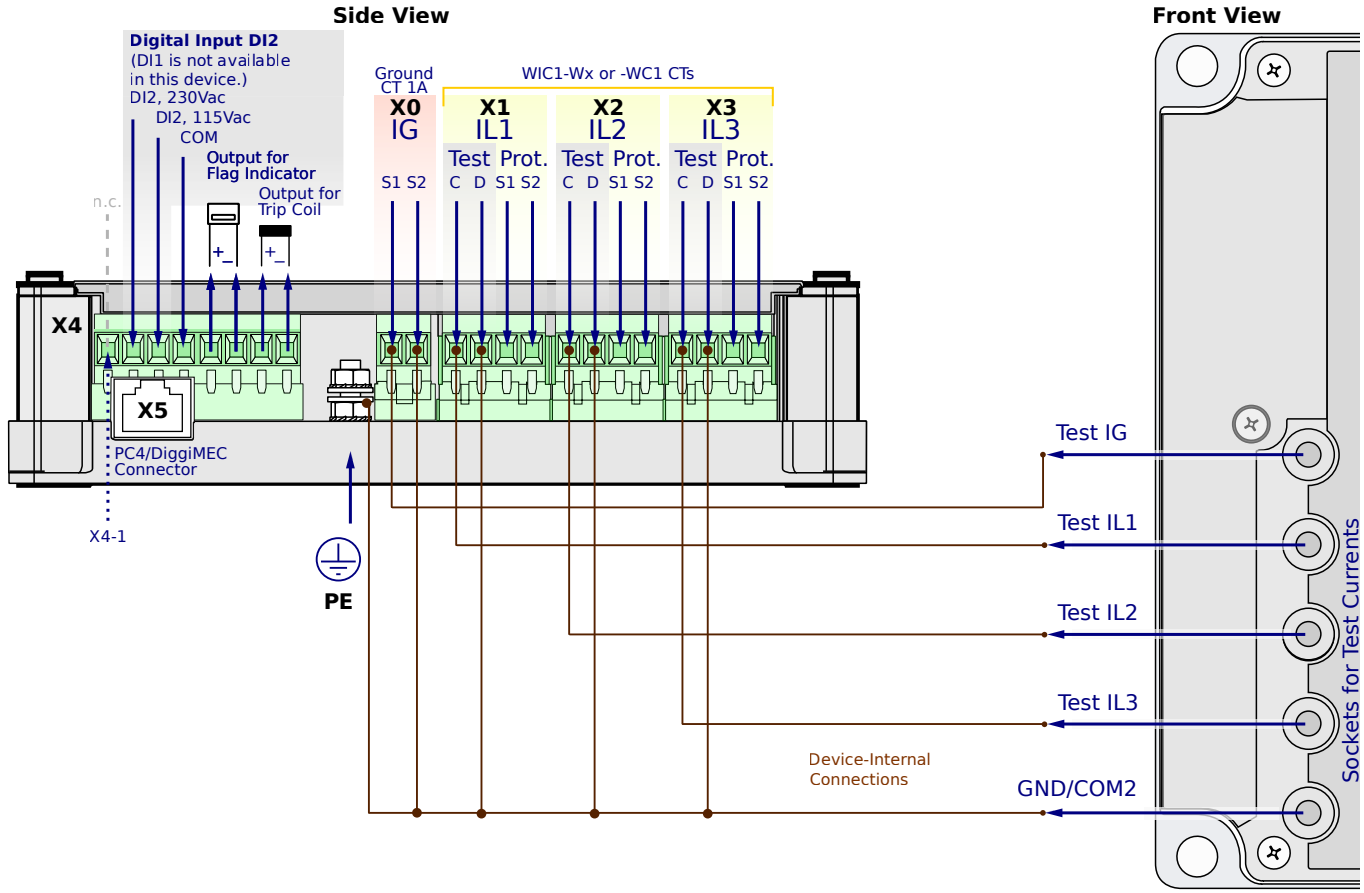


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0AA0

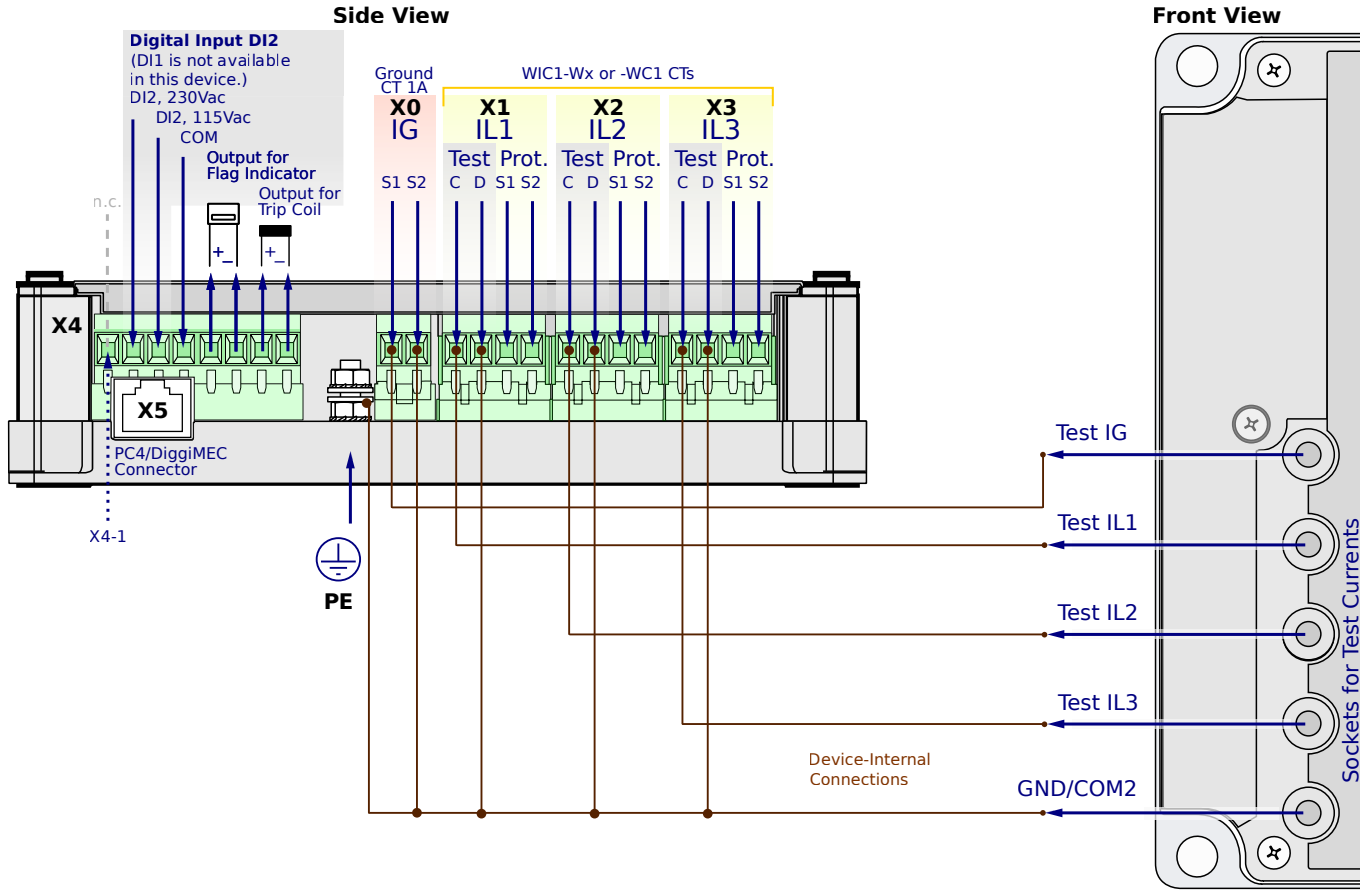


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0AAH

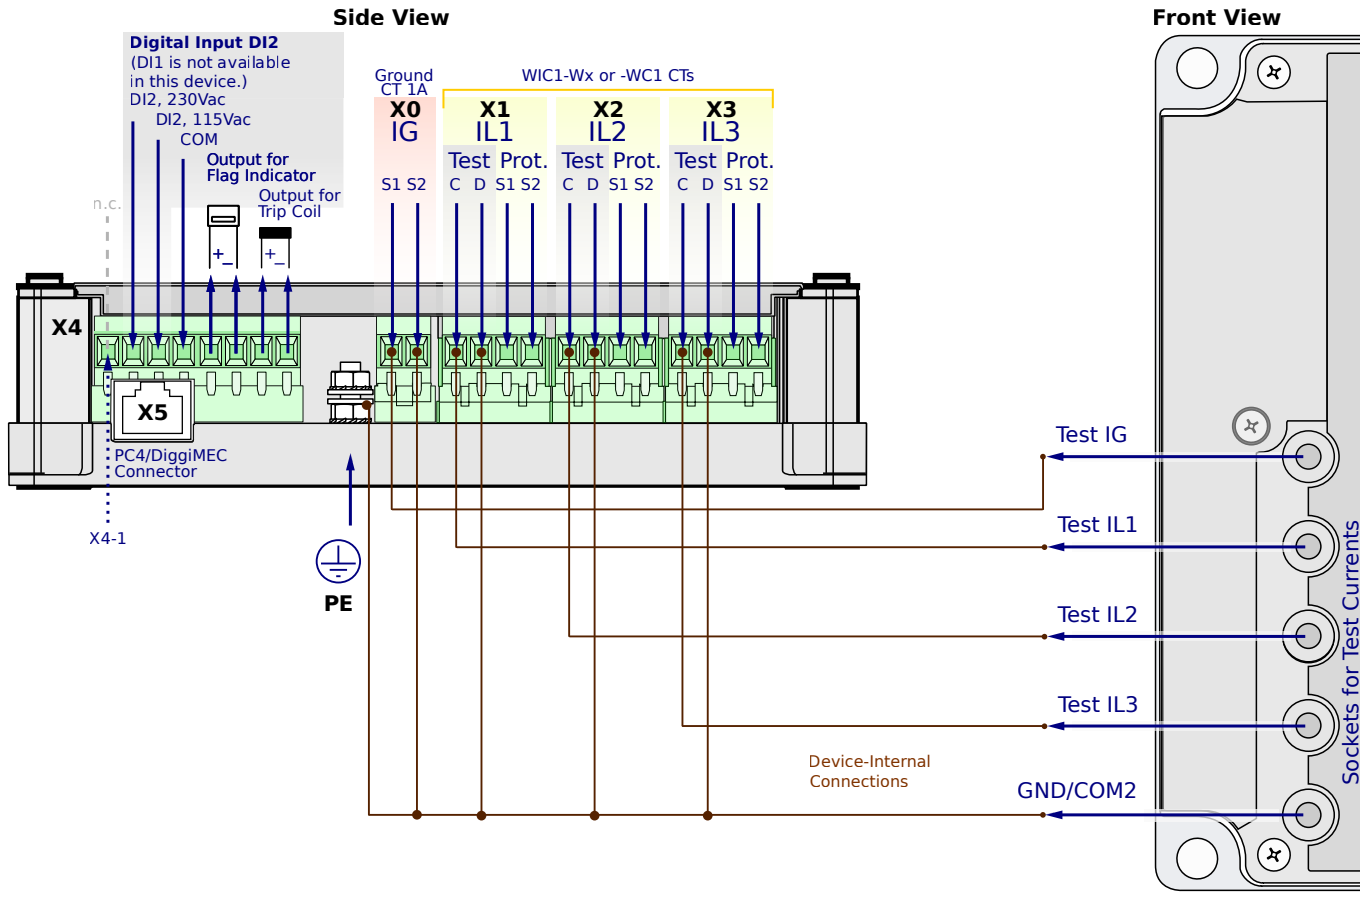


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0PA0

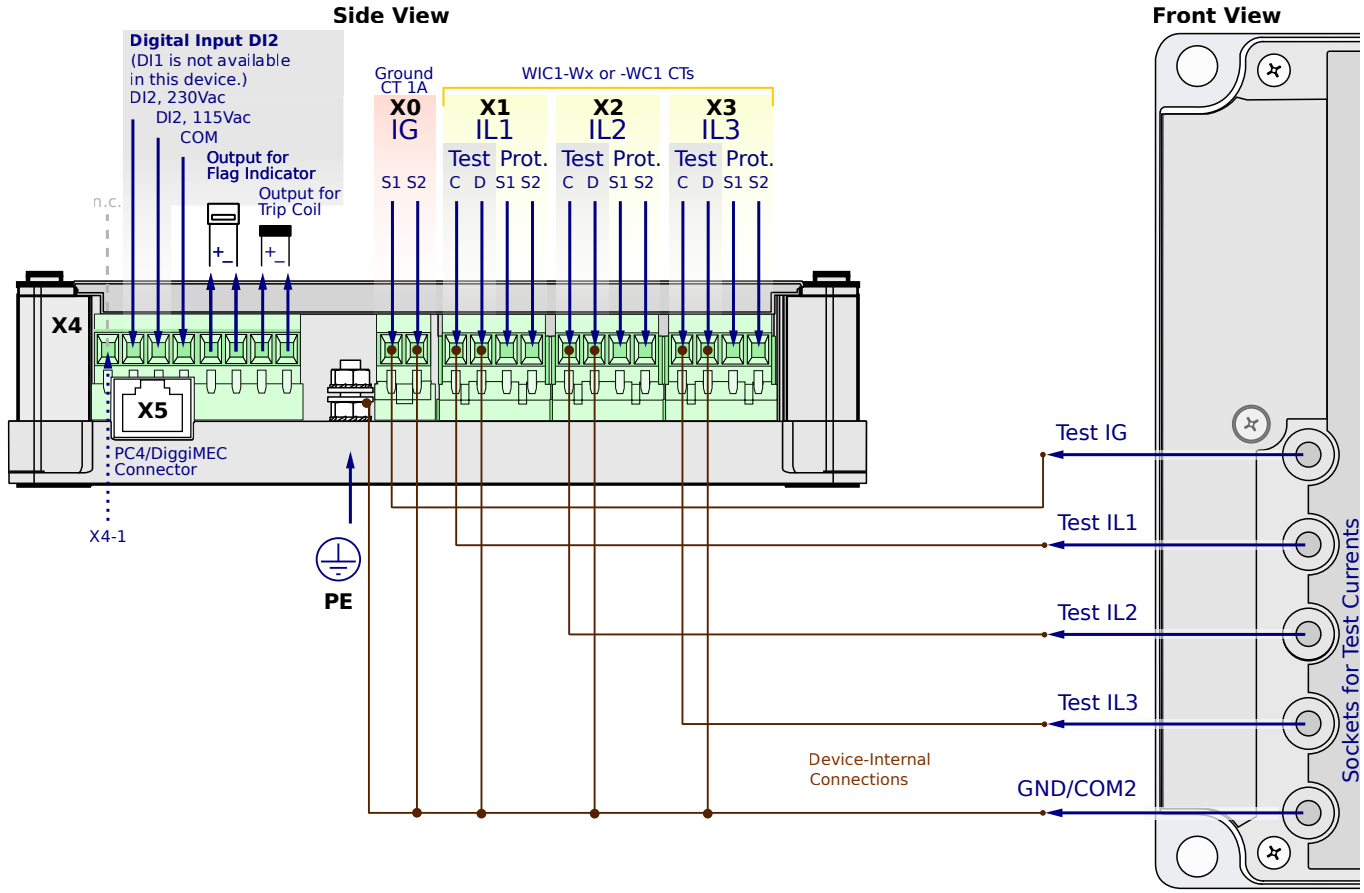


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC0PAH

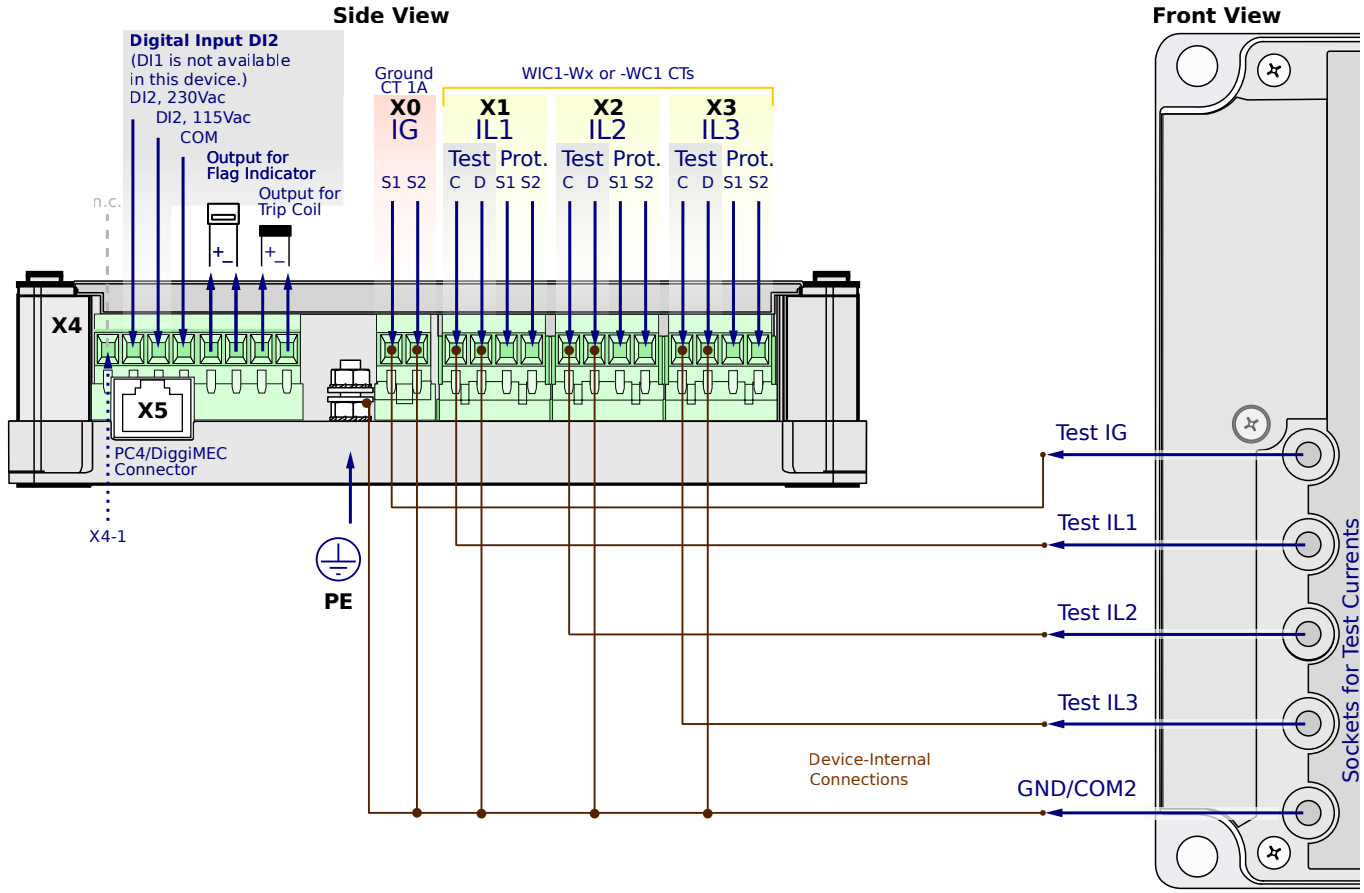


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1SA0

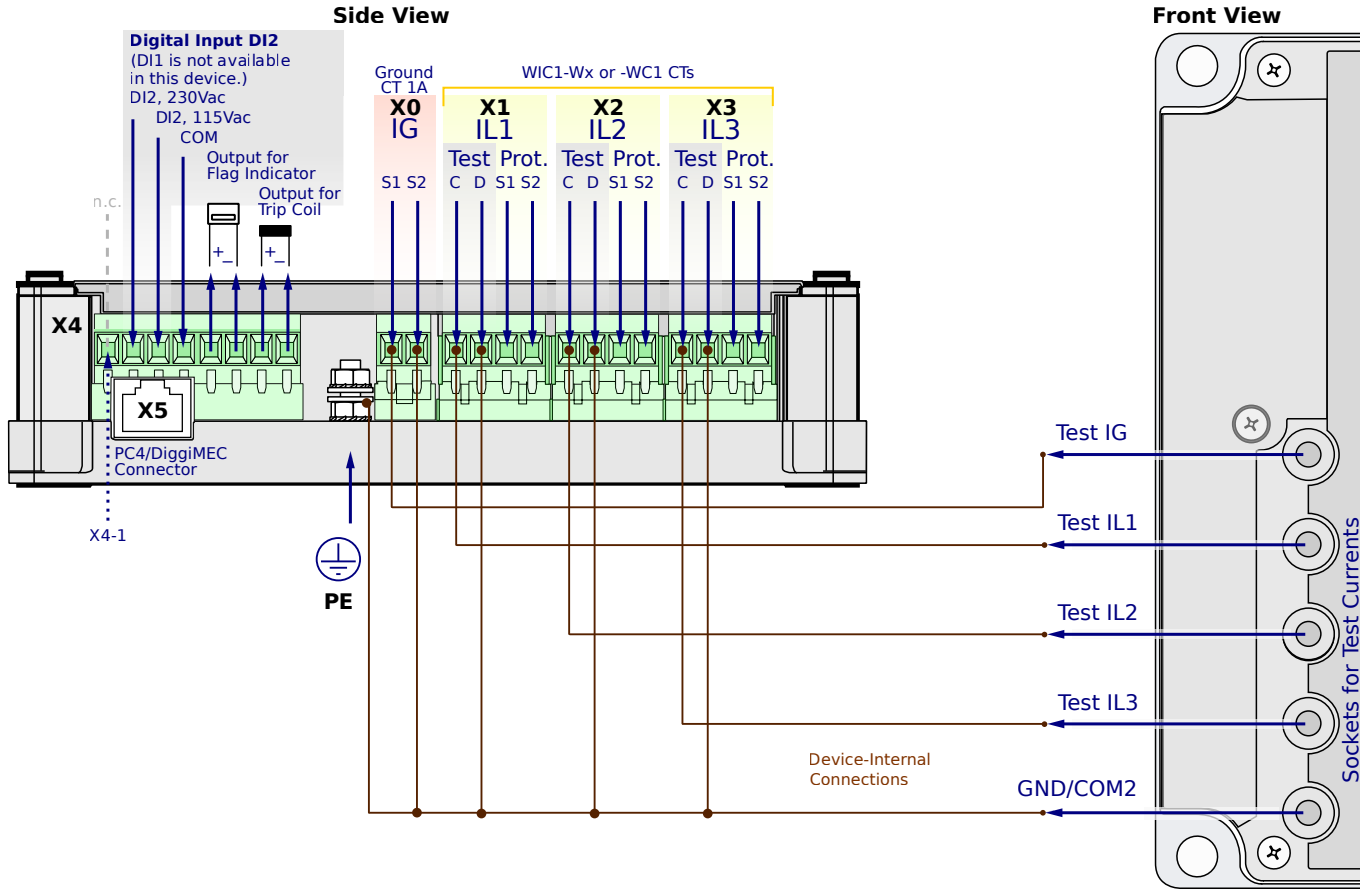


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1SAH

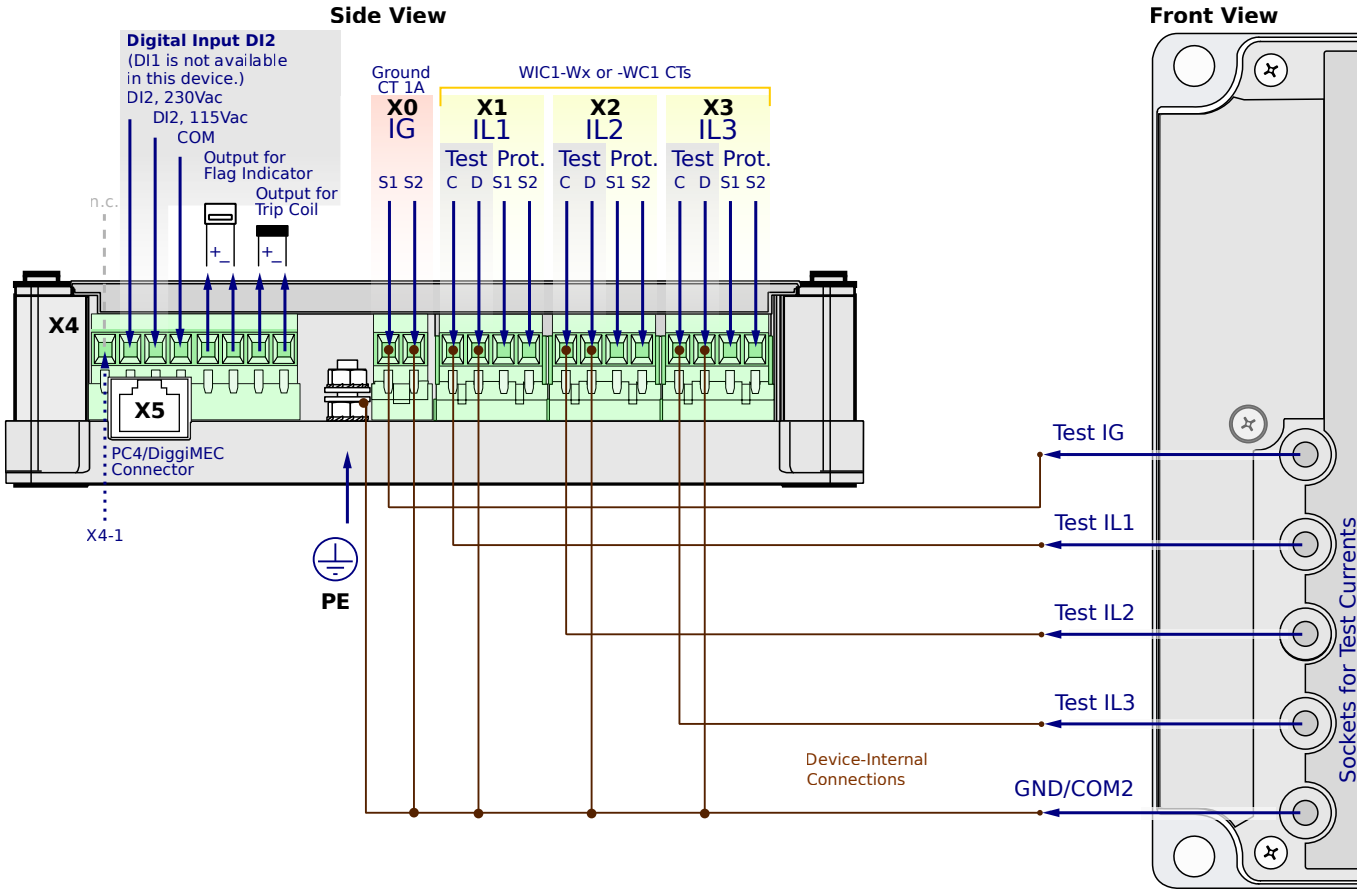


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1AA0

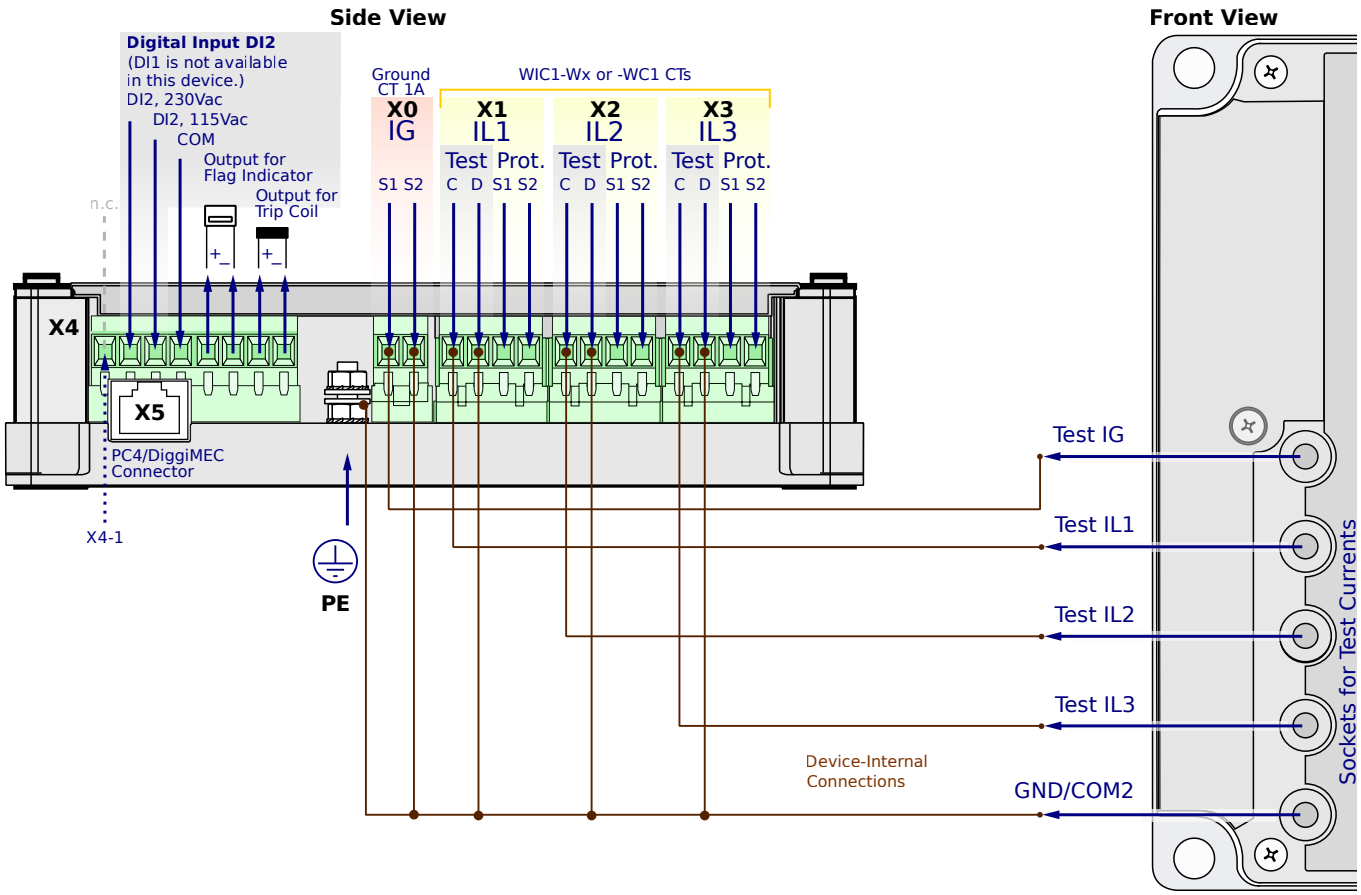


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1AAH

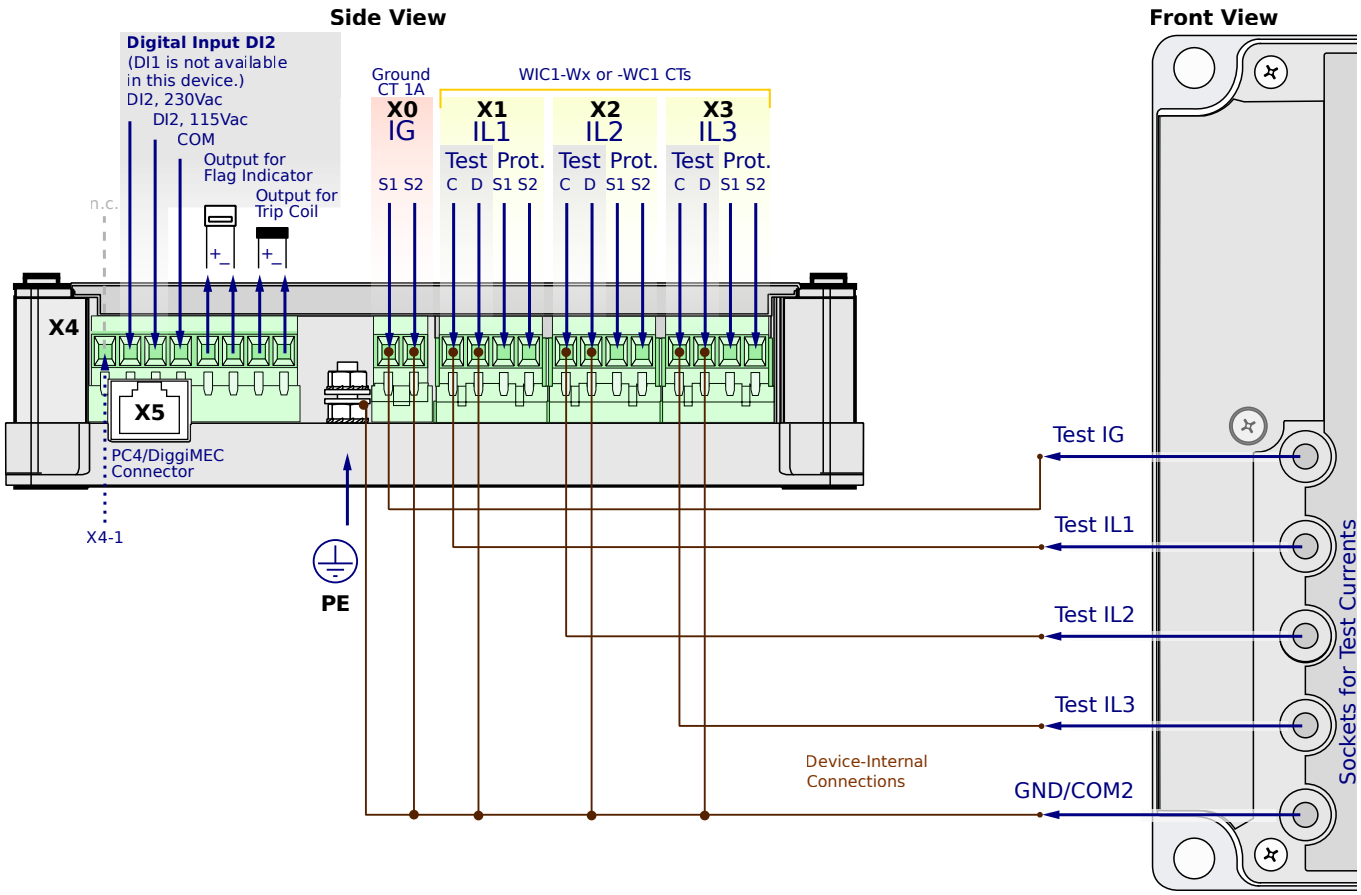


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1PA0

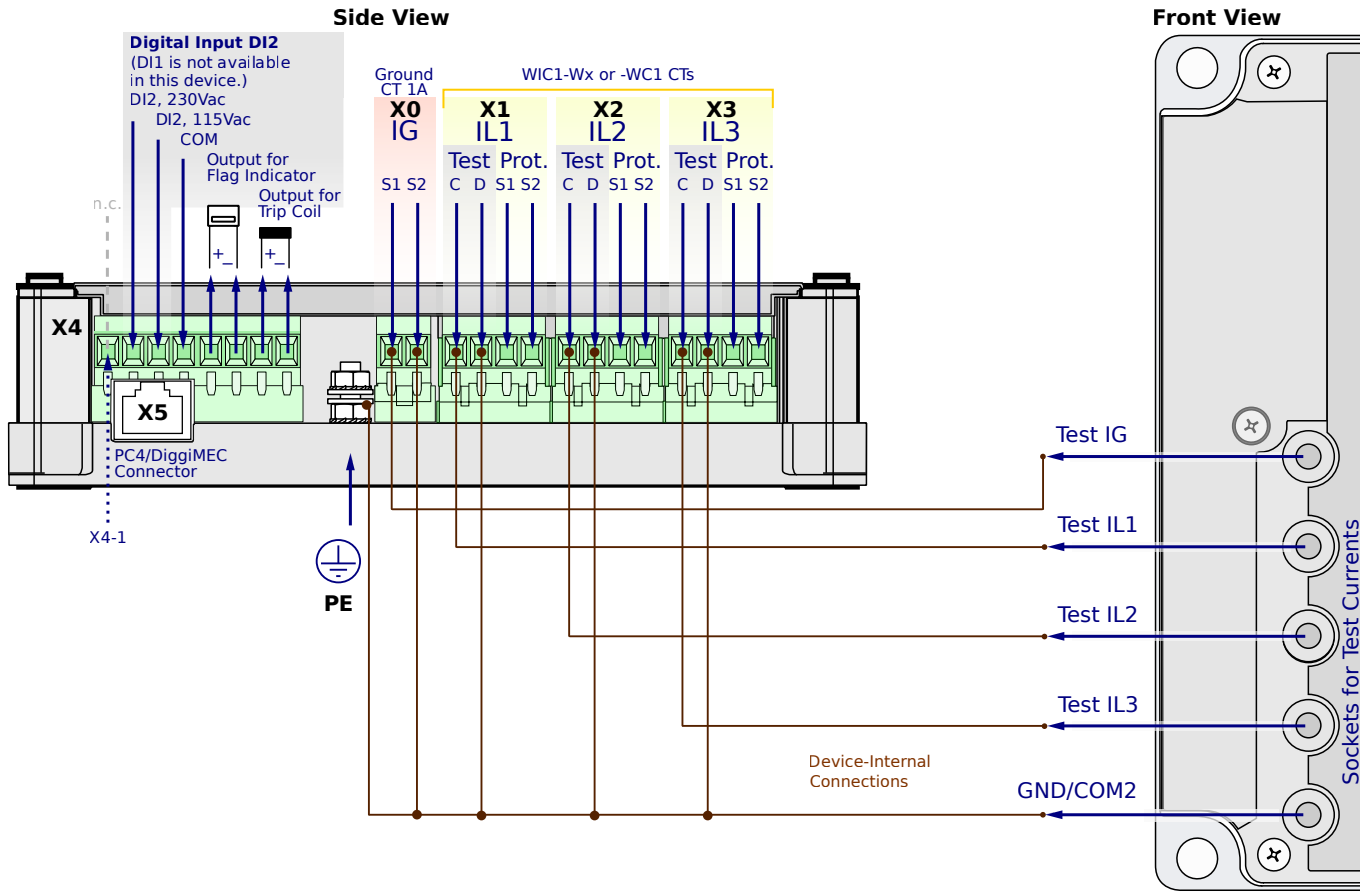


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC1PAH

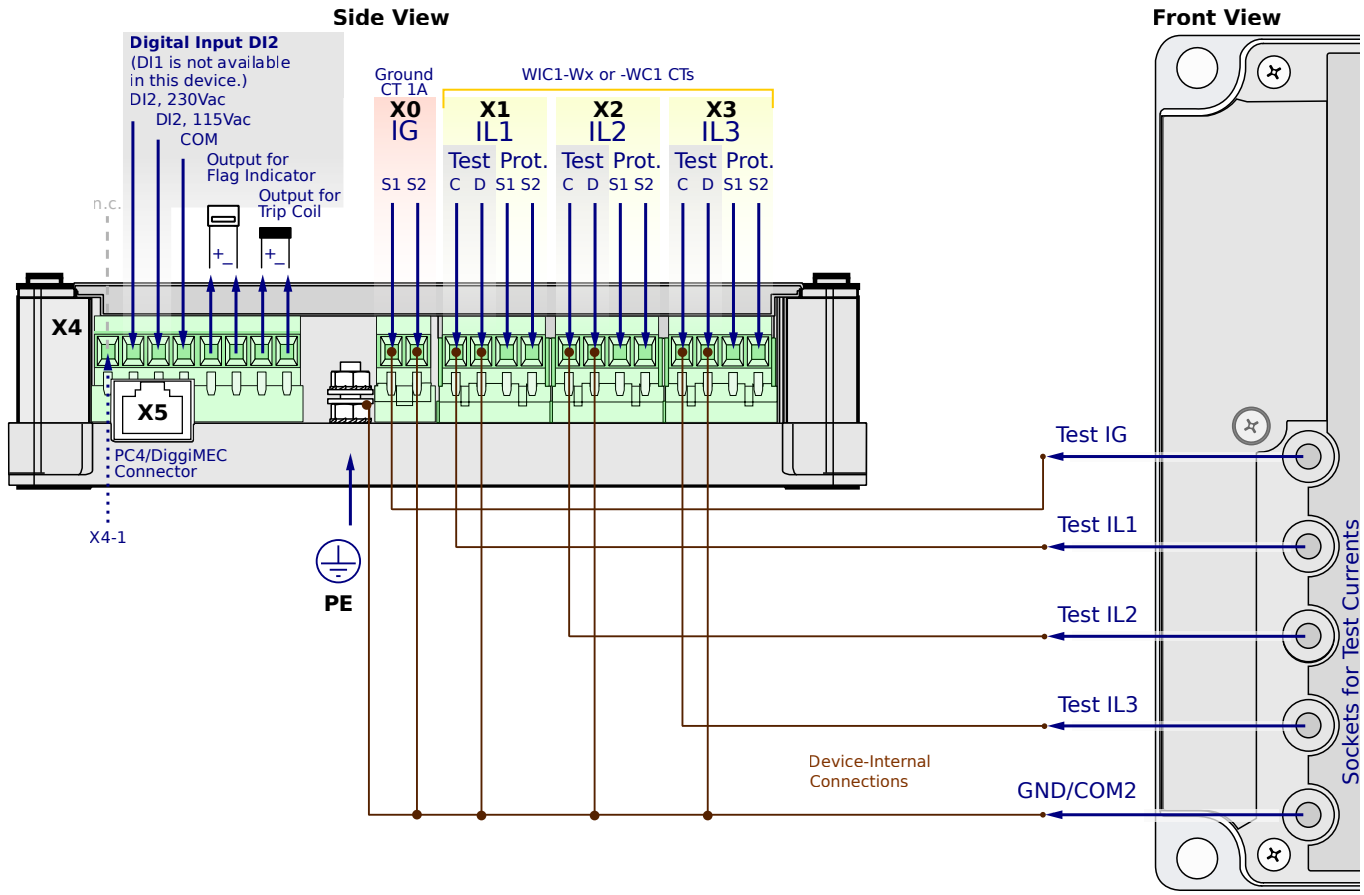


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2SA0

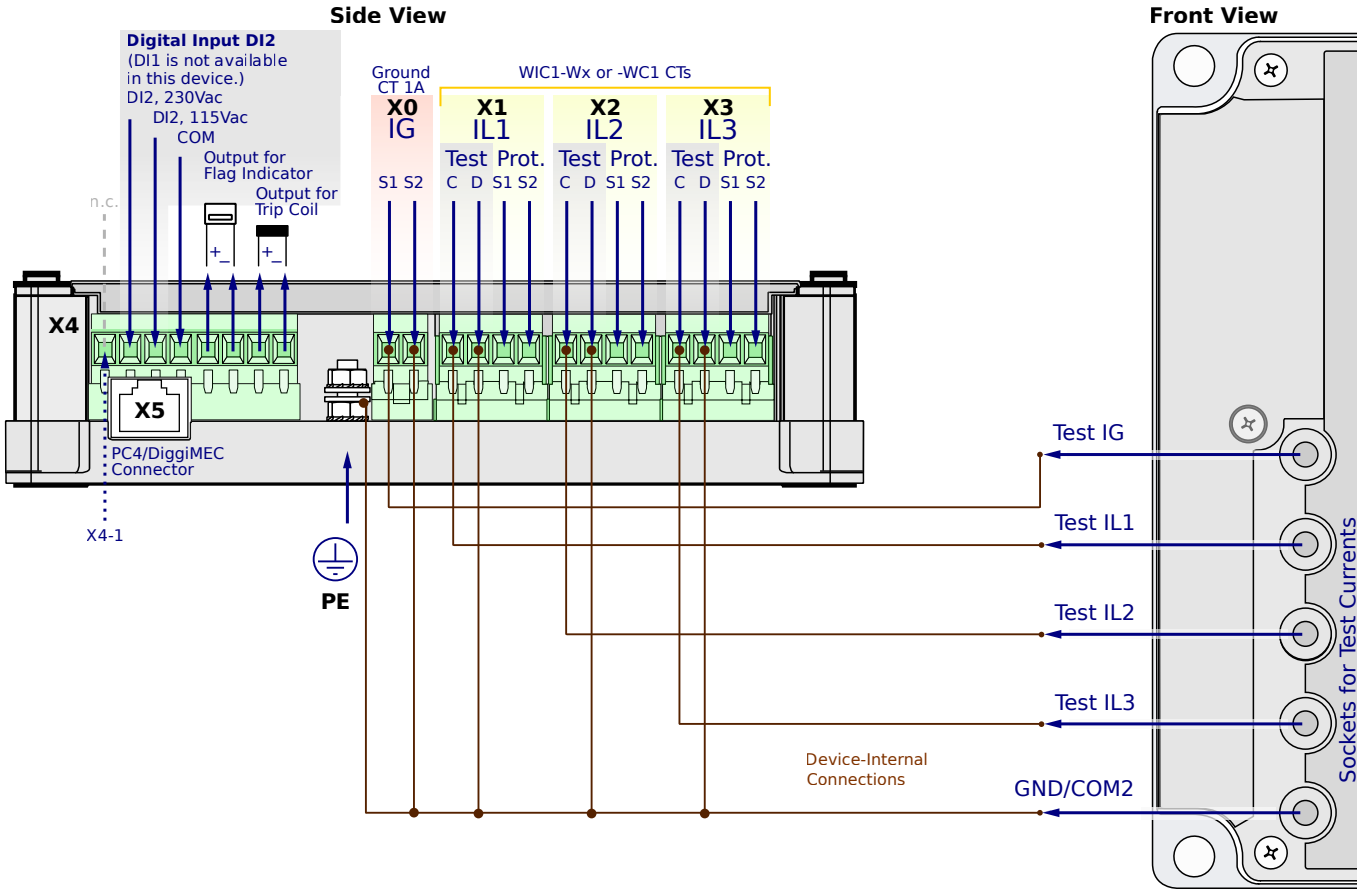


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2SAH

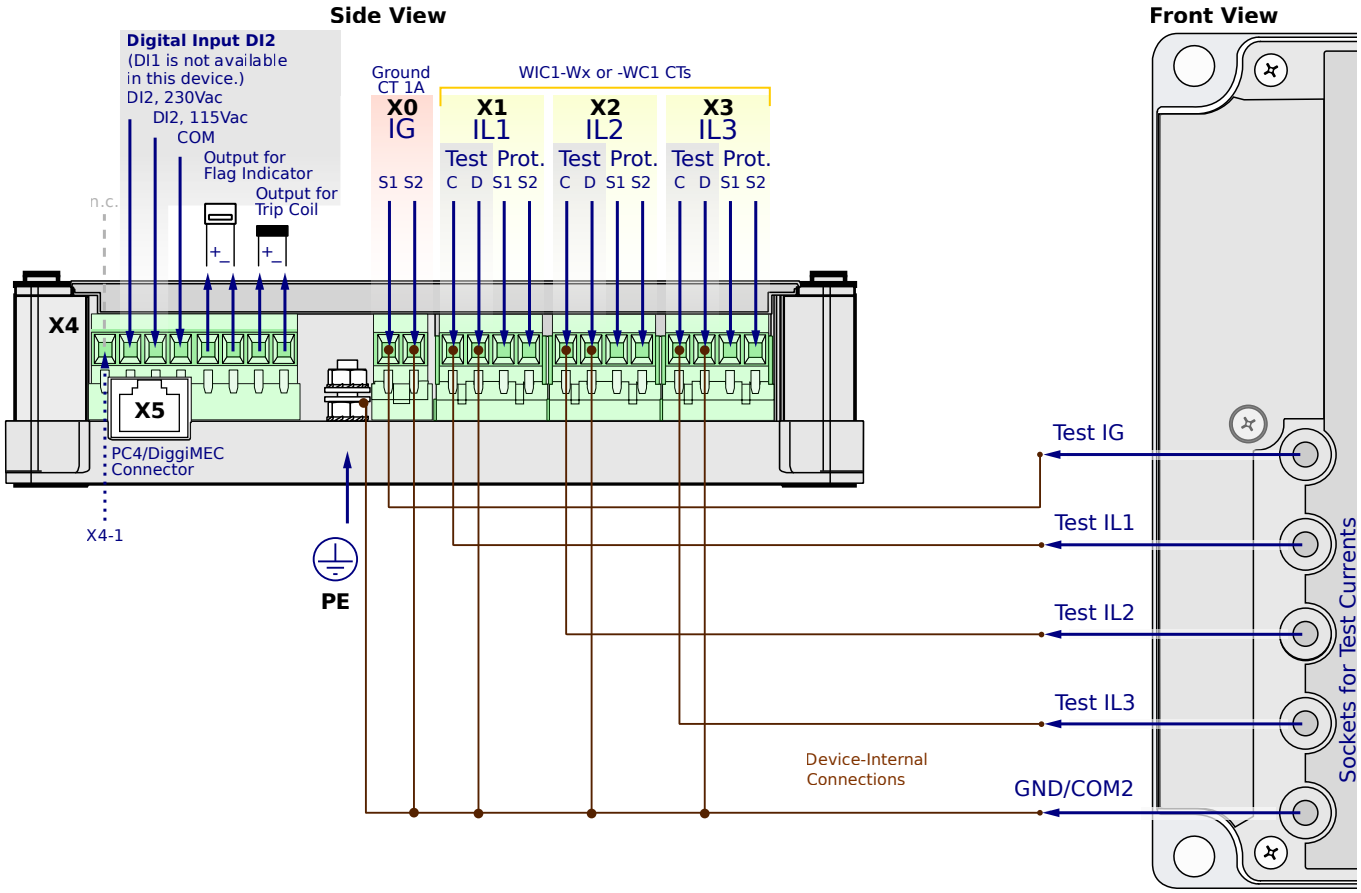


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2AA0

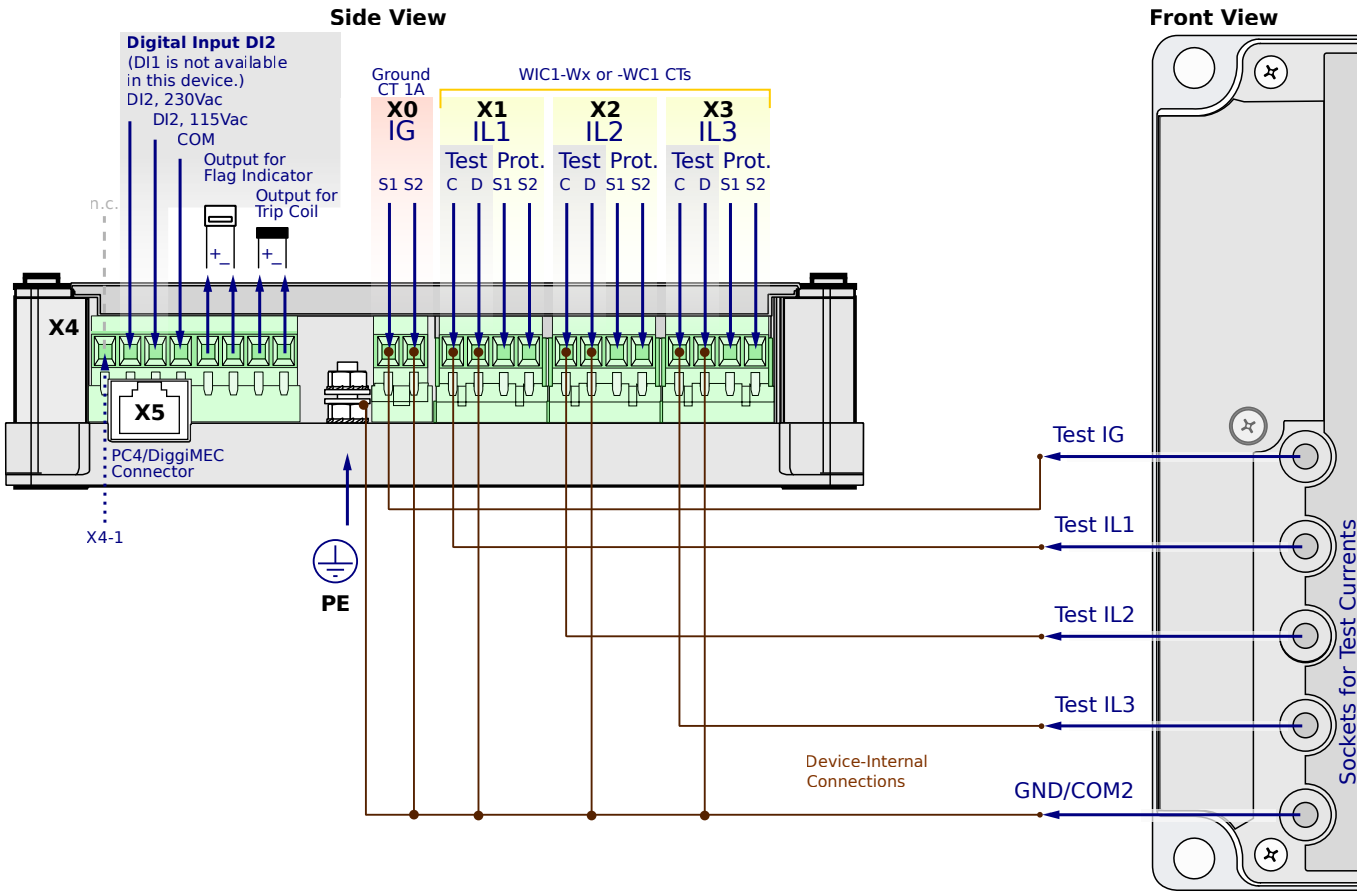


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2AAH

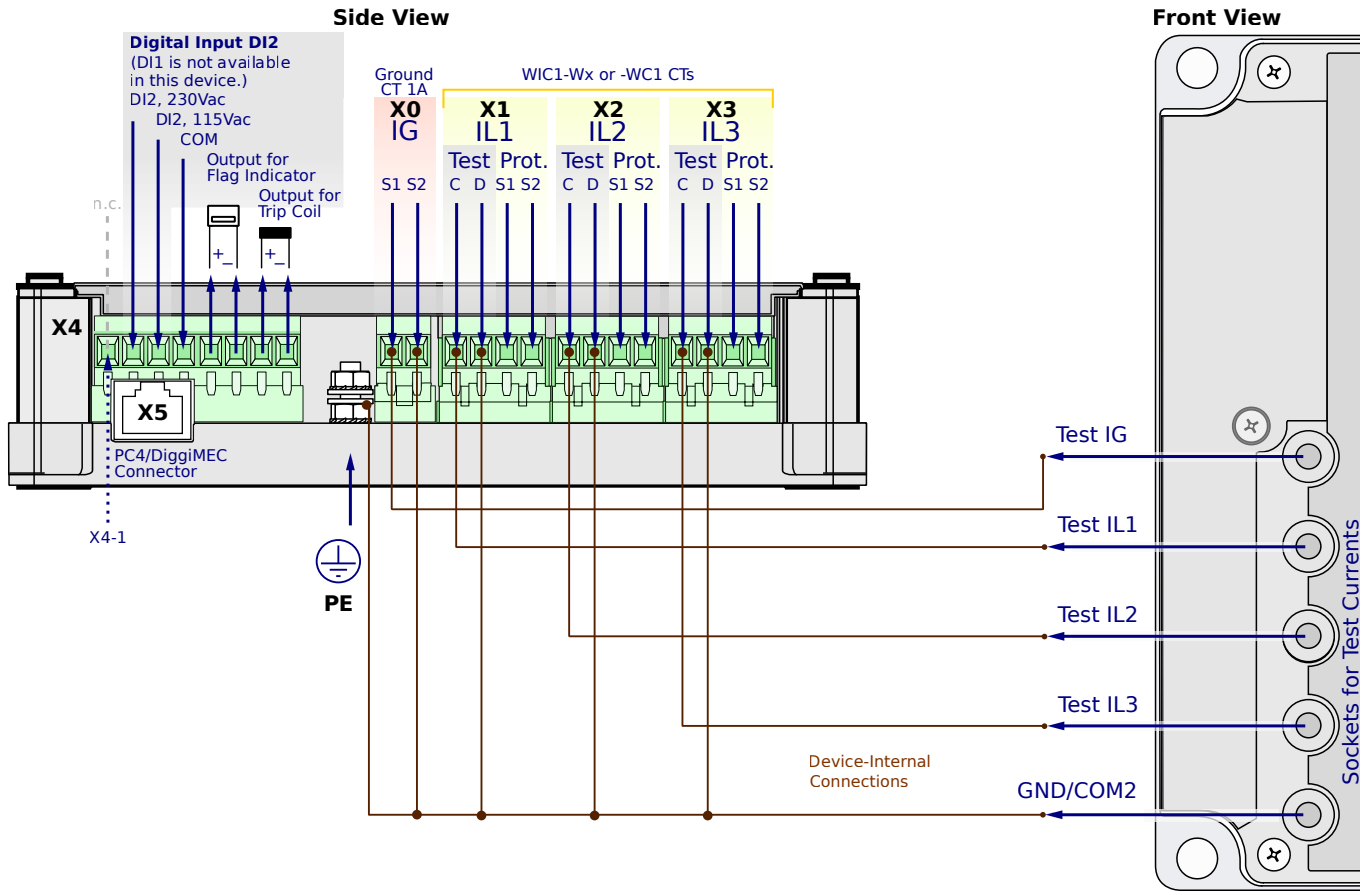


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2PA0

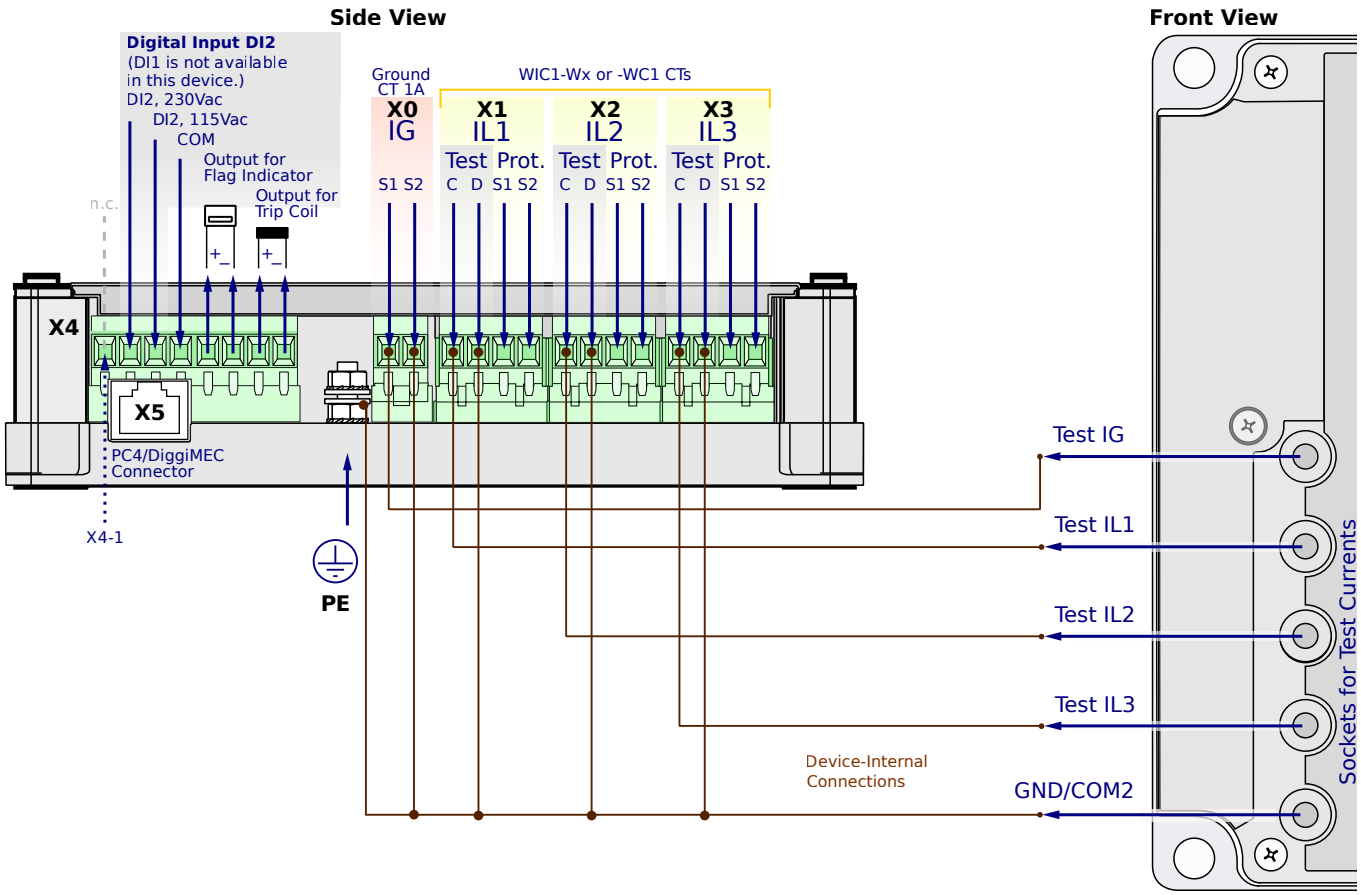


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0NC2PAH

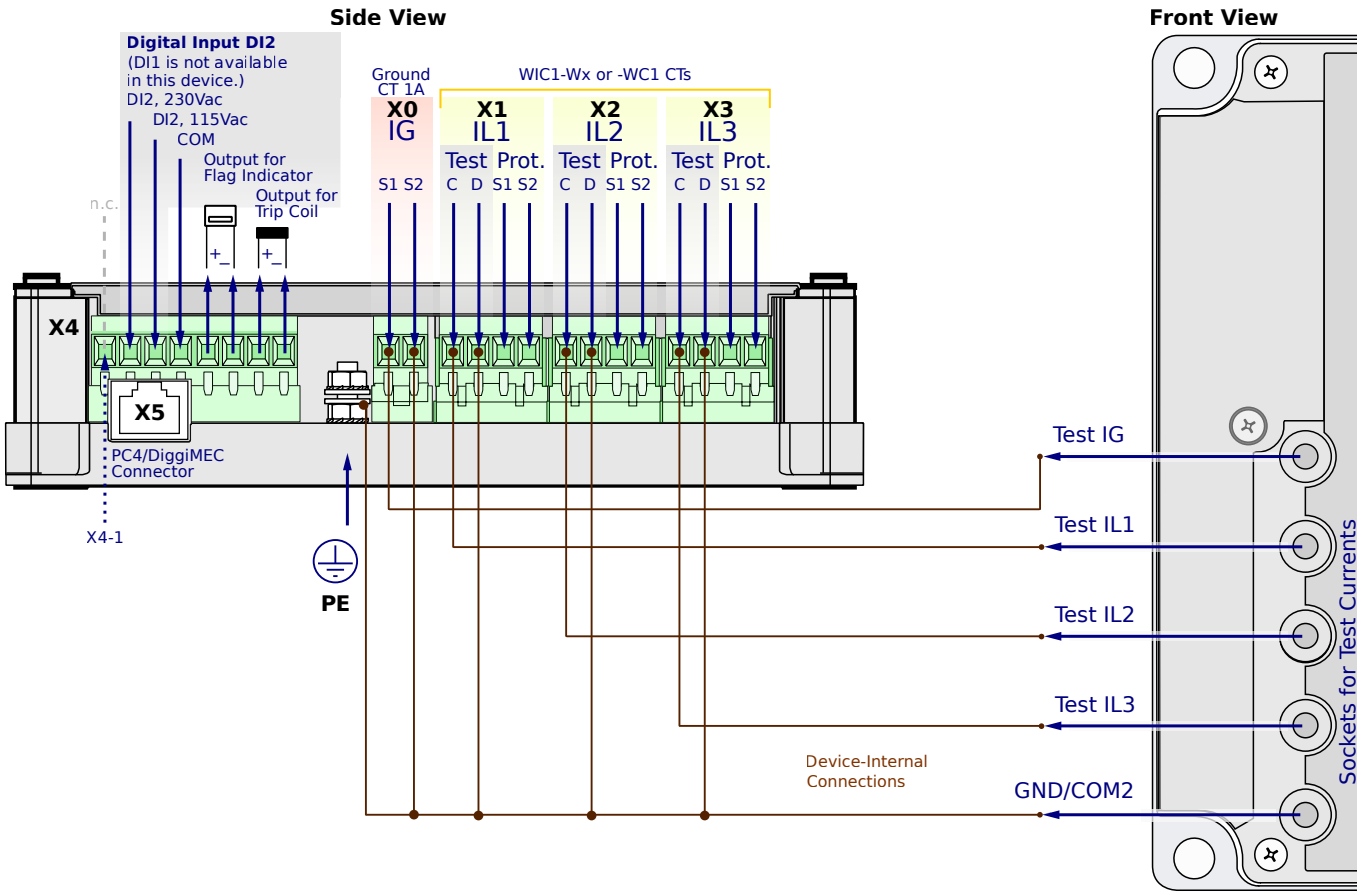


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1SA0

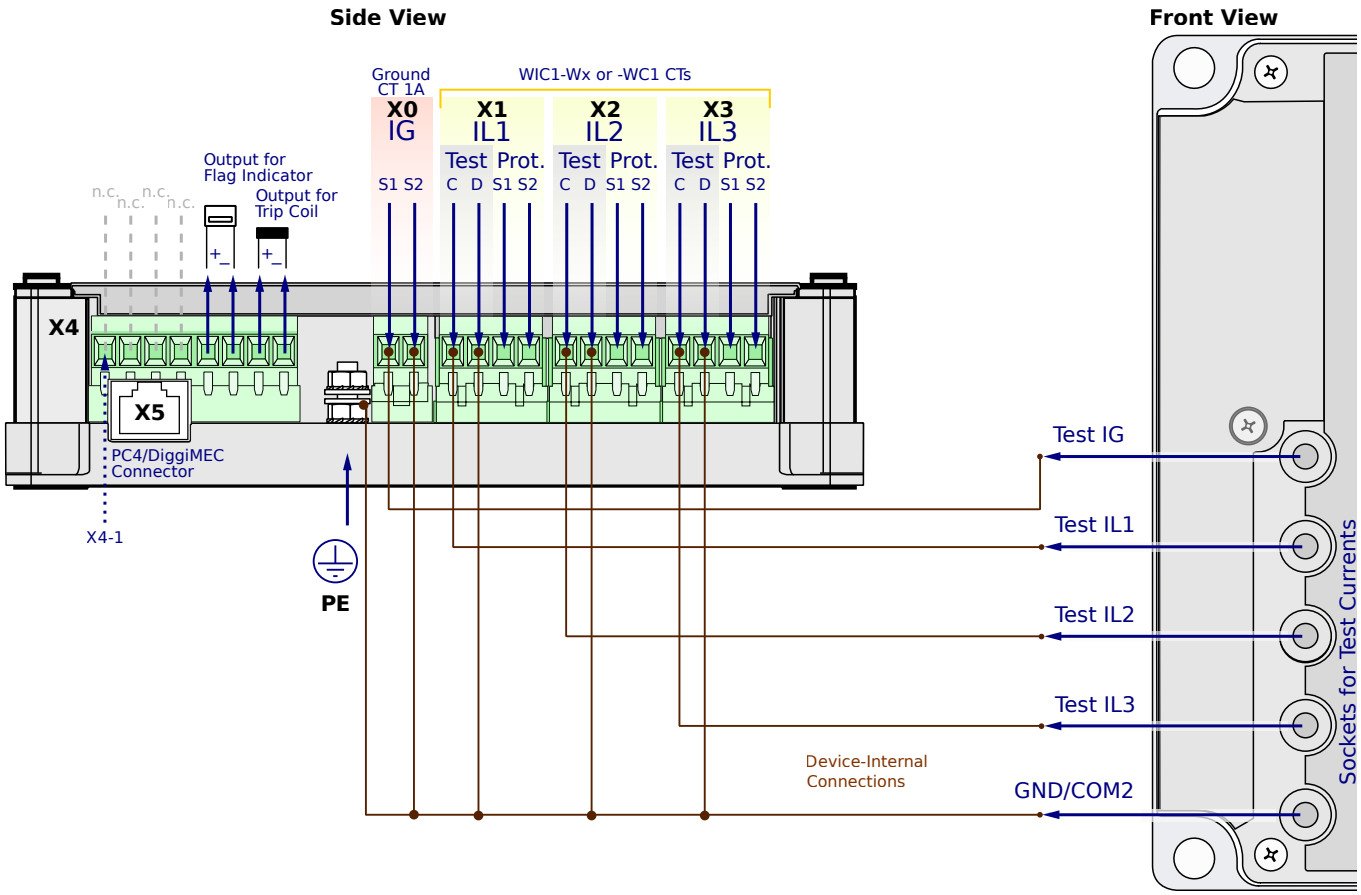


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1SAH

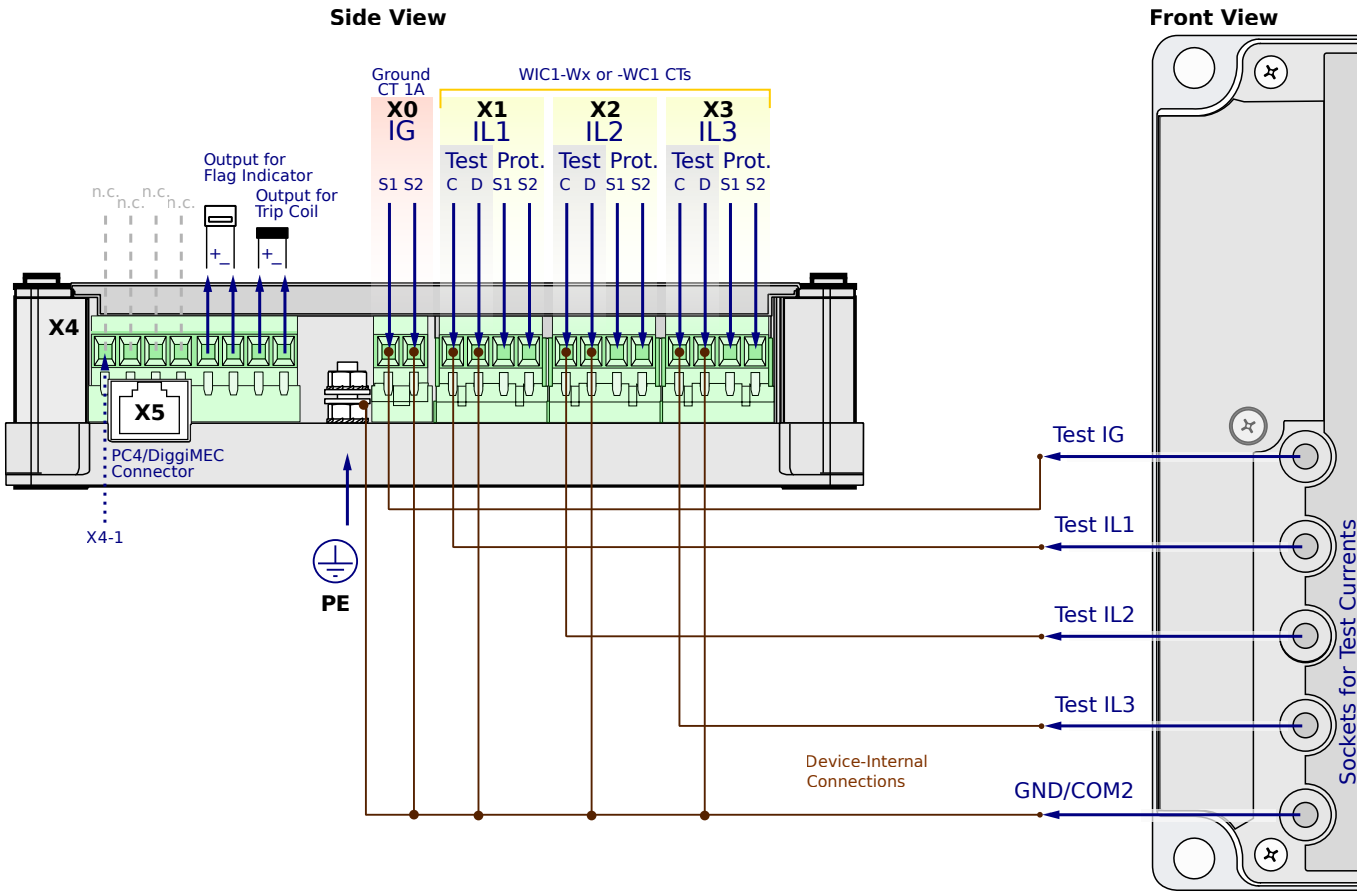


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1AA0

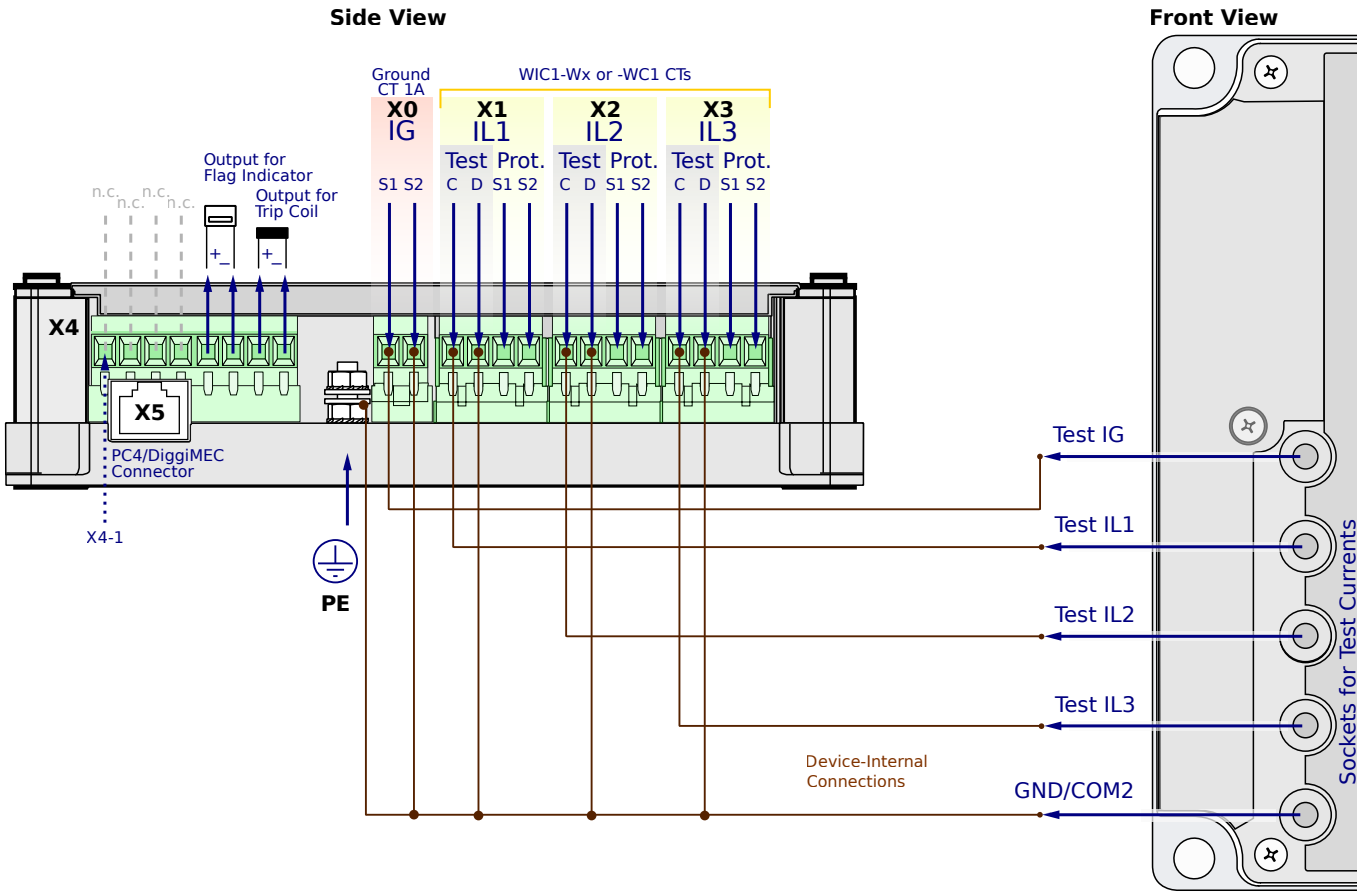


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1AAH

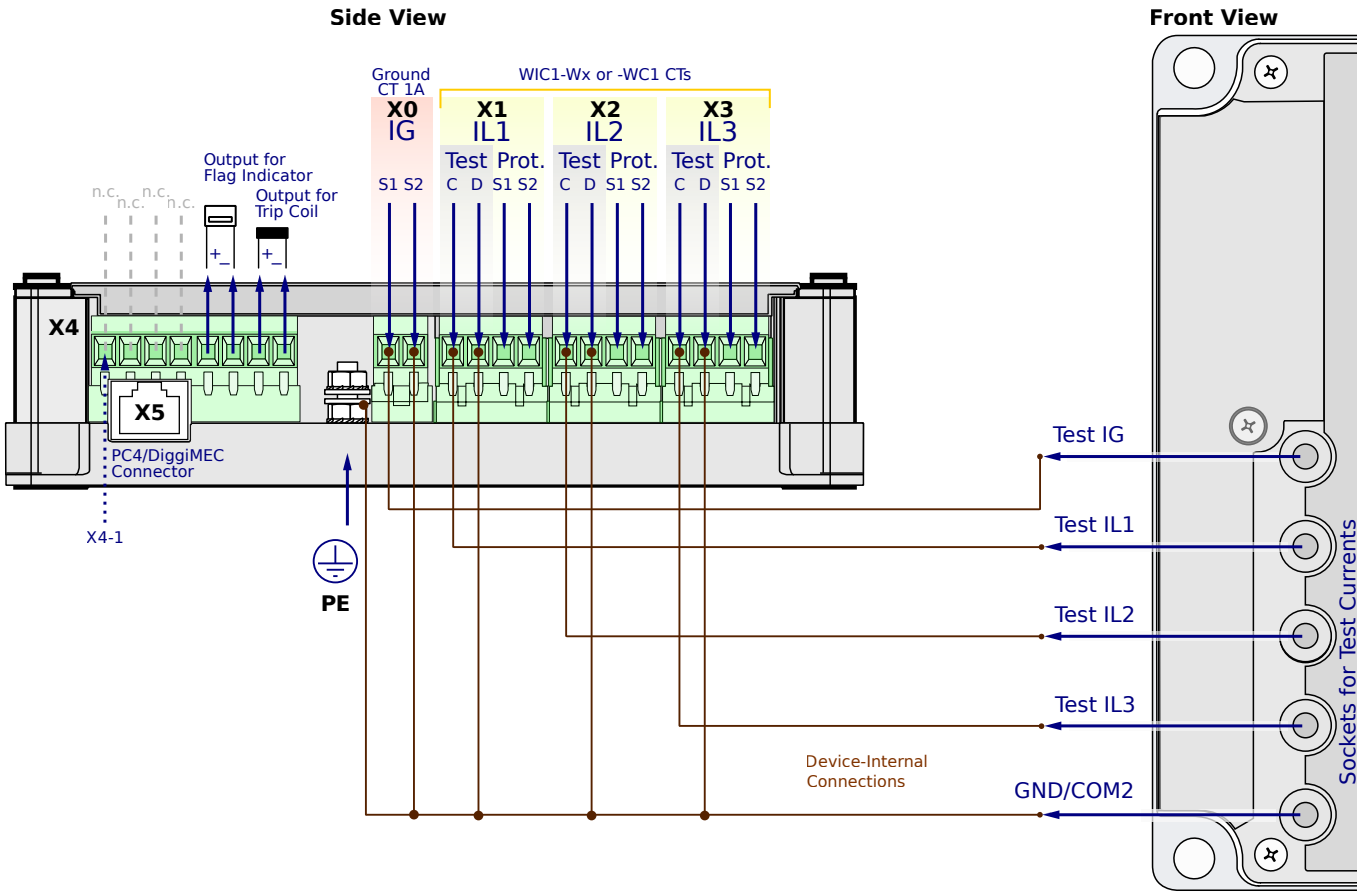


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1PA0

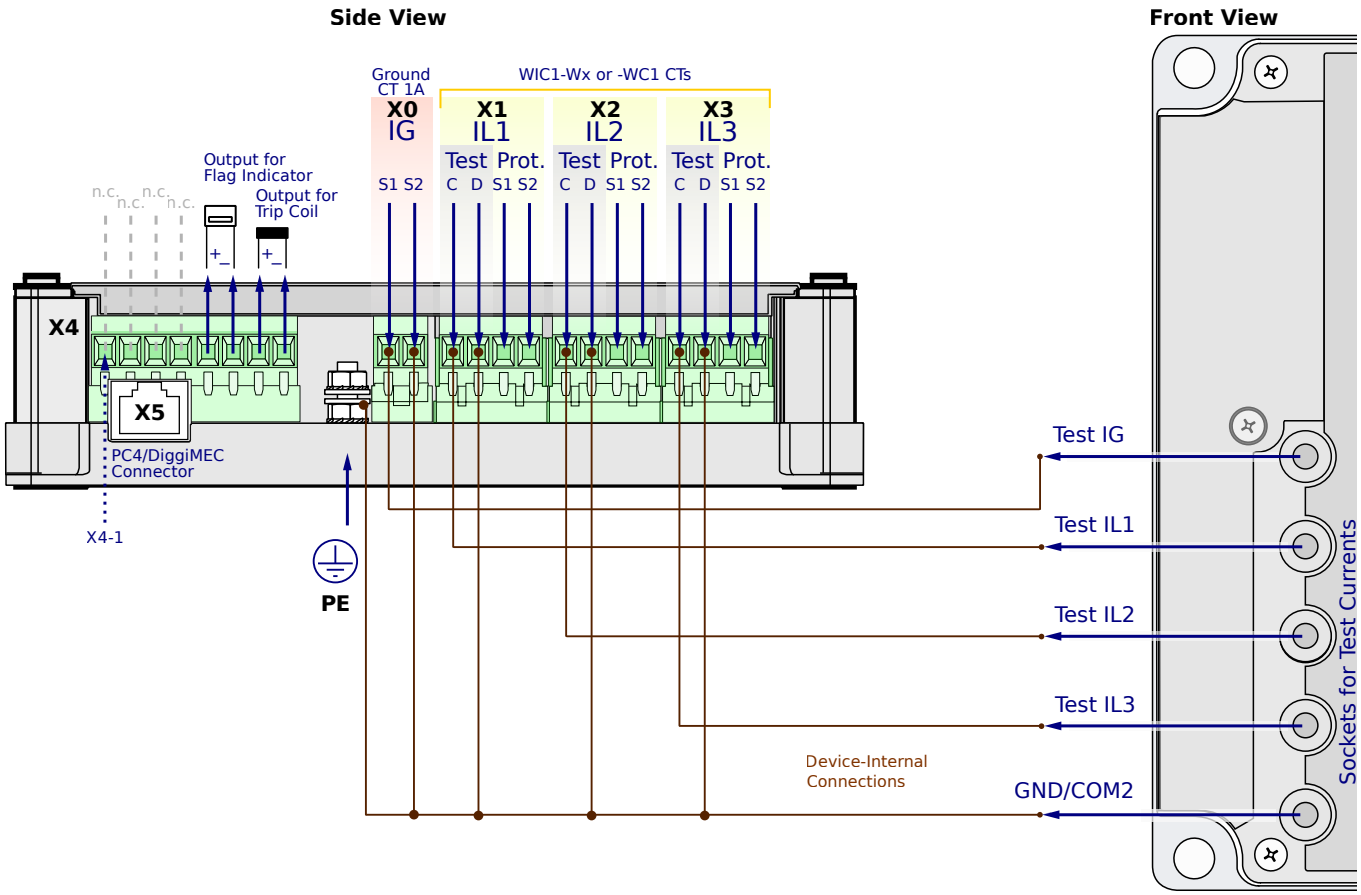


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN1PAH

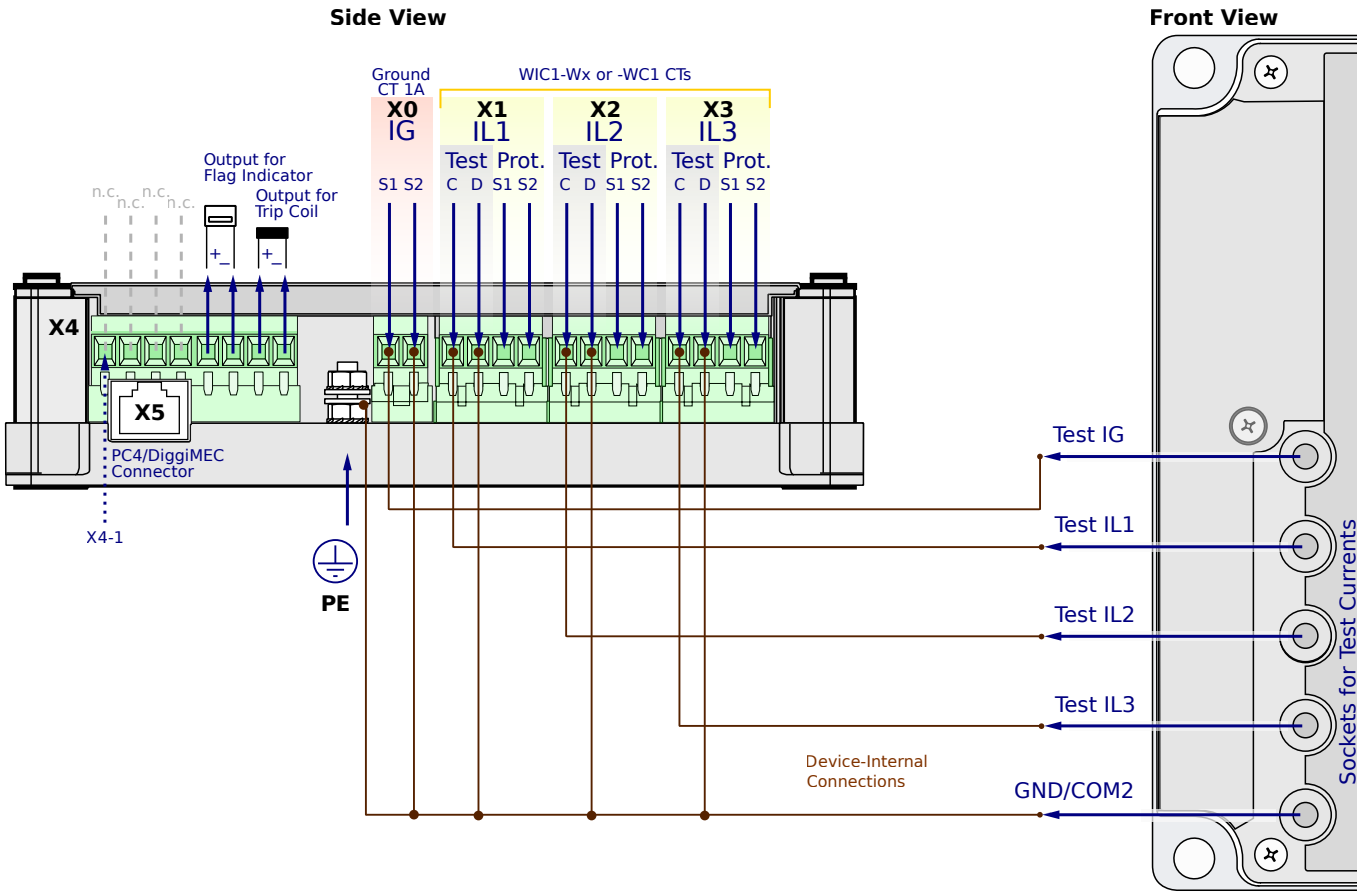


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2SA0

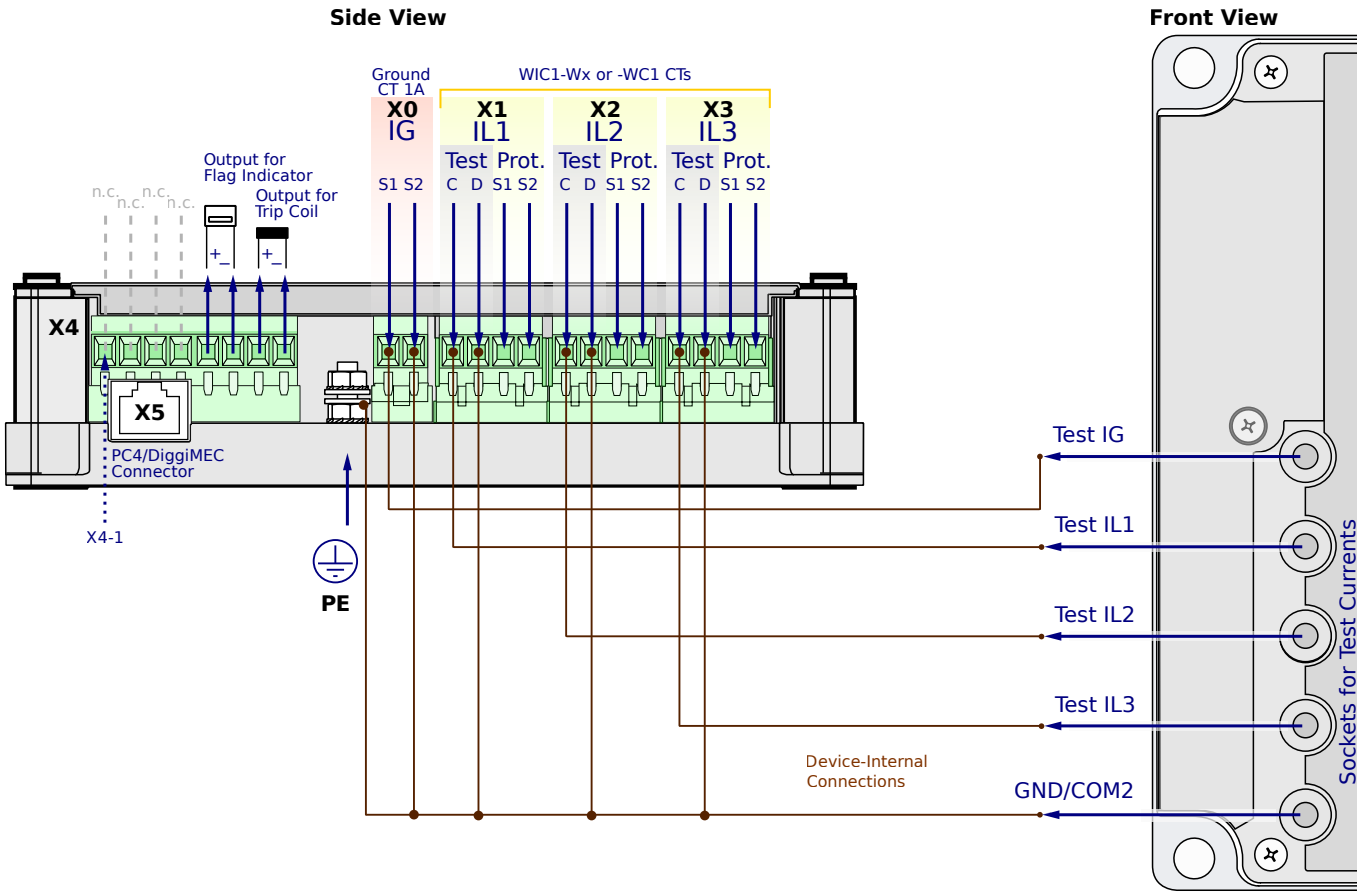


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2SAH

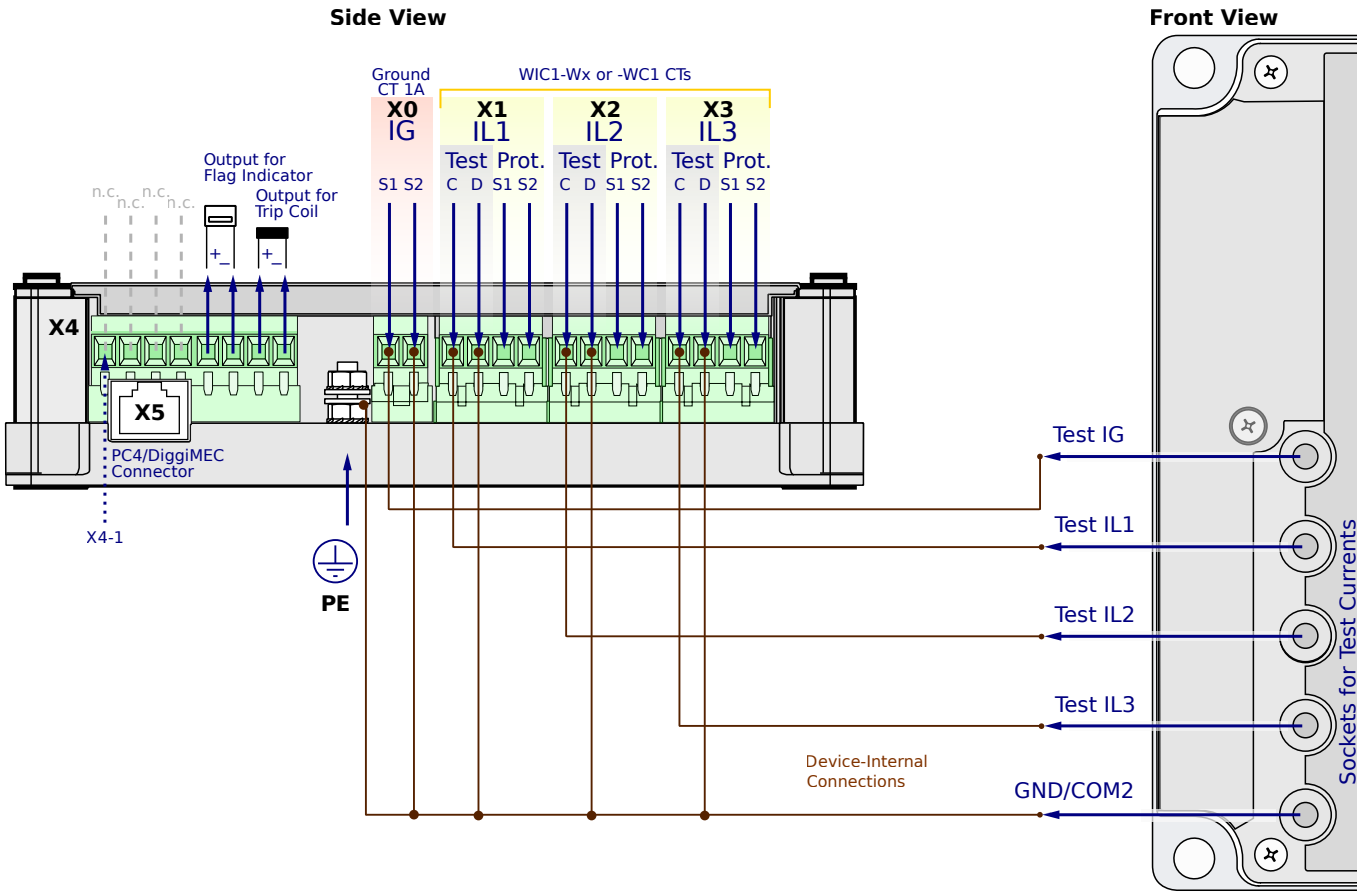


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2AA0

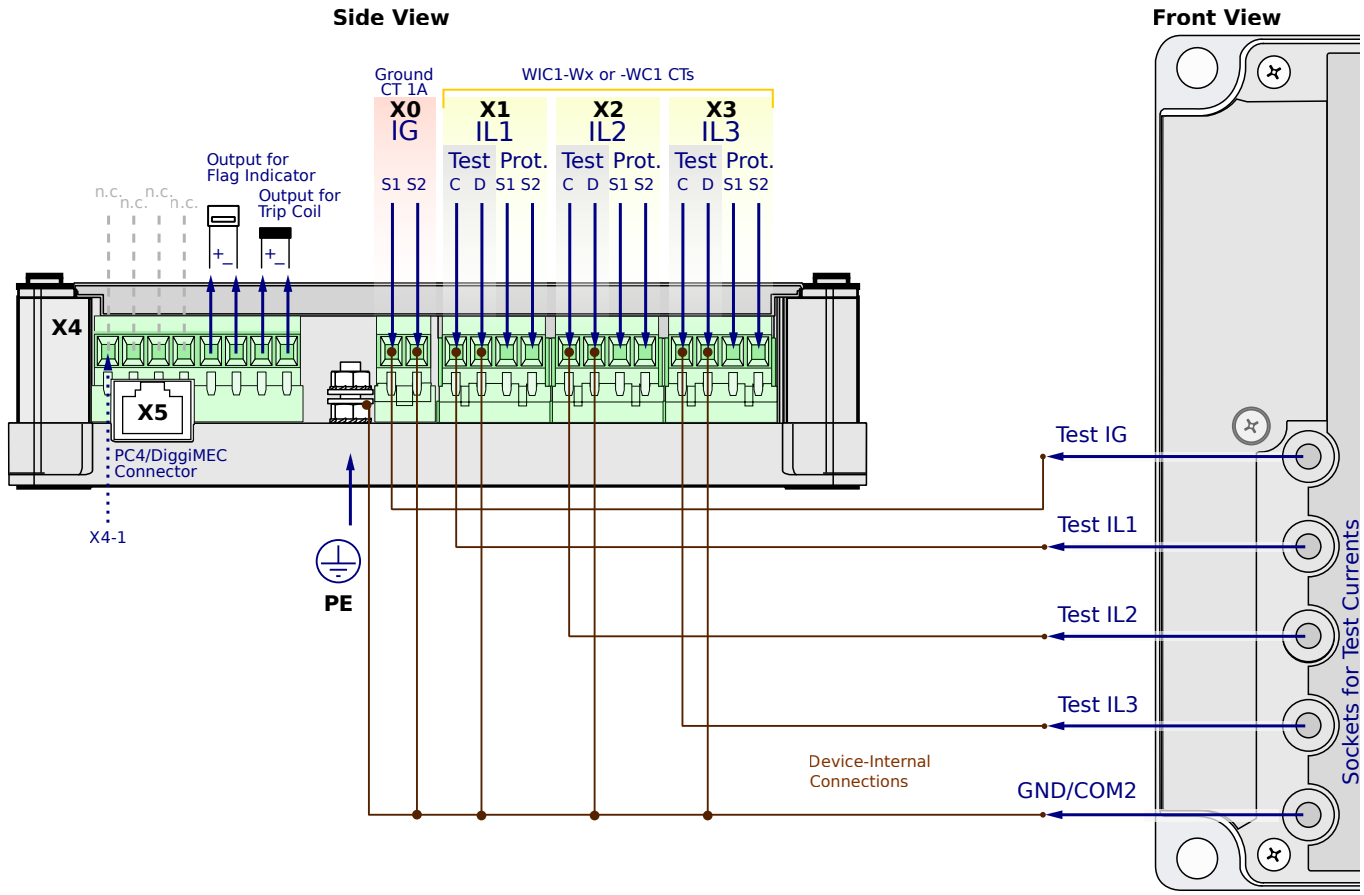


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2AAH

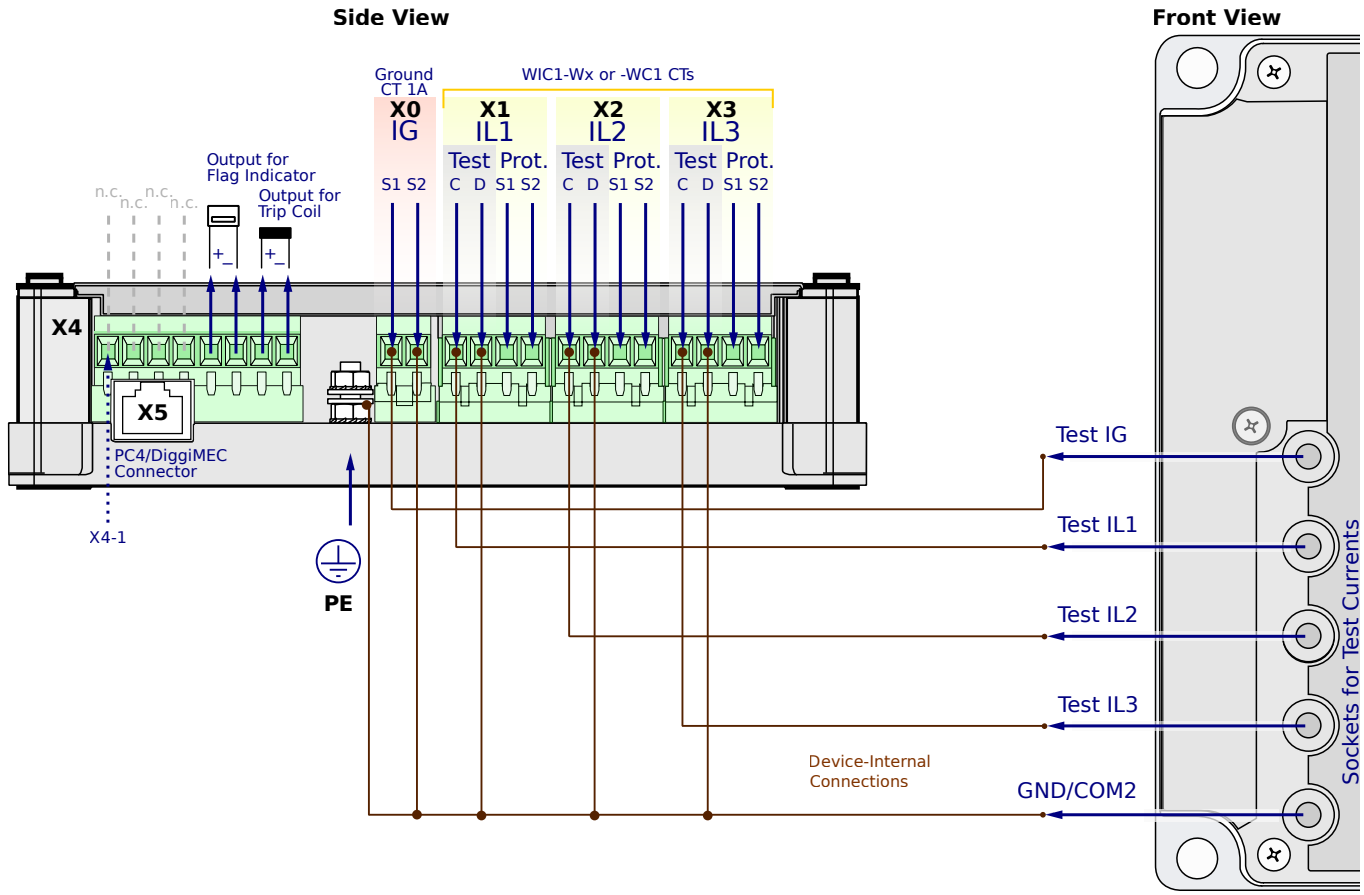


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2PA0

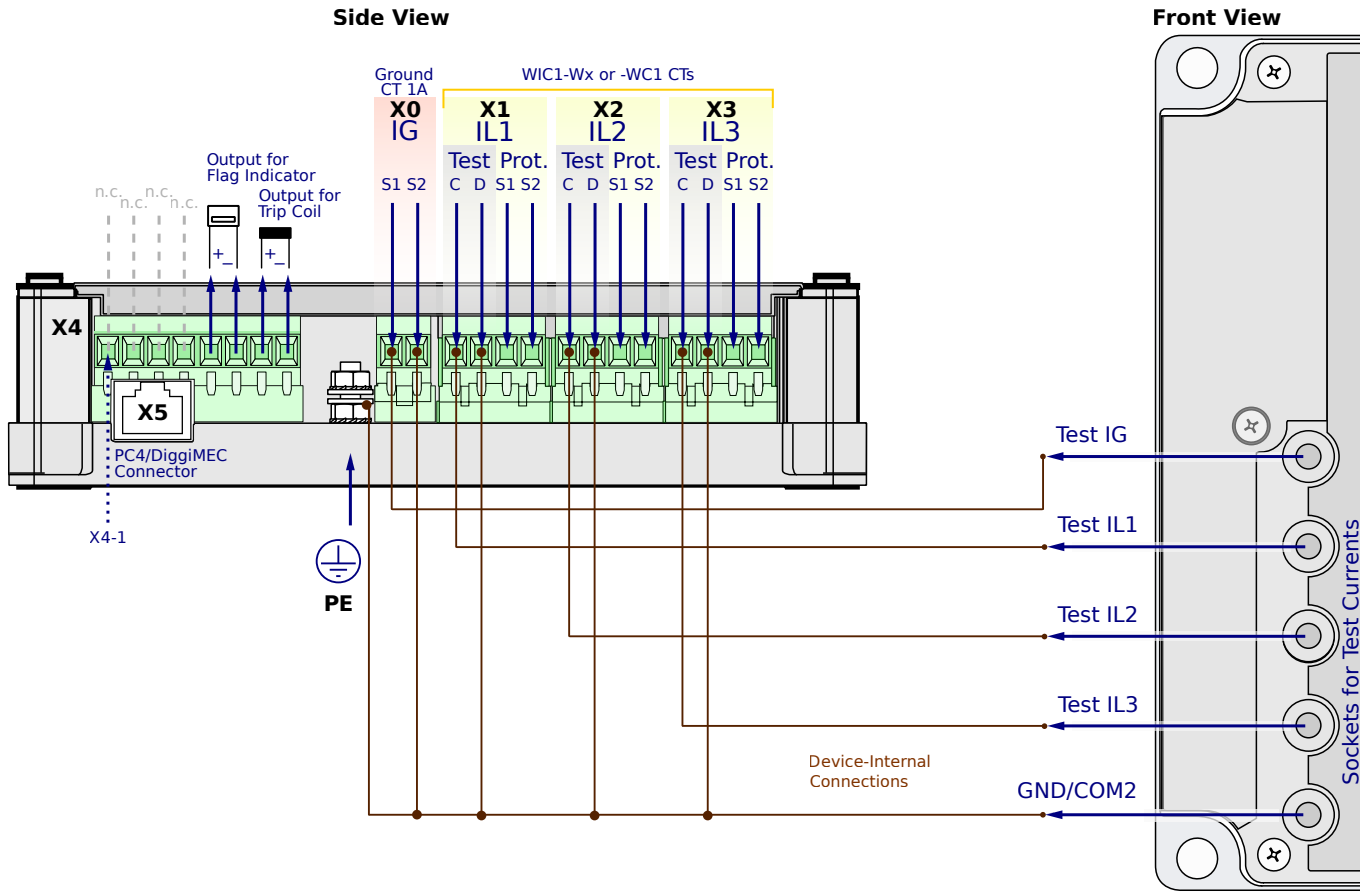


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FN2PAH

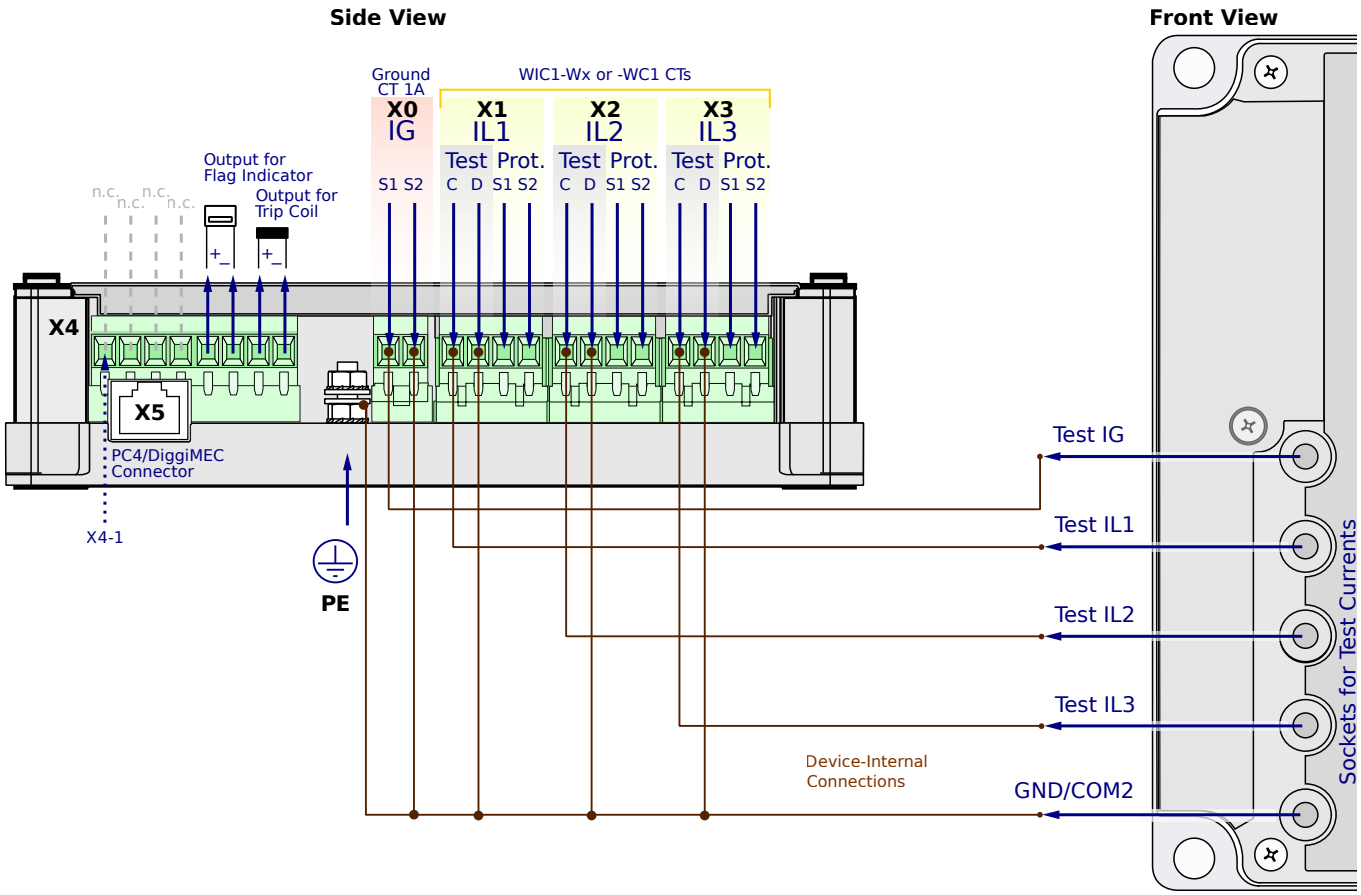


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1SA0

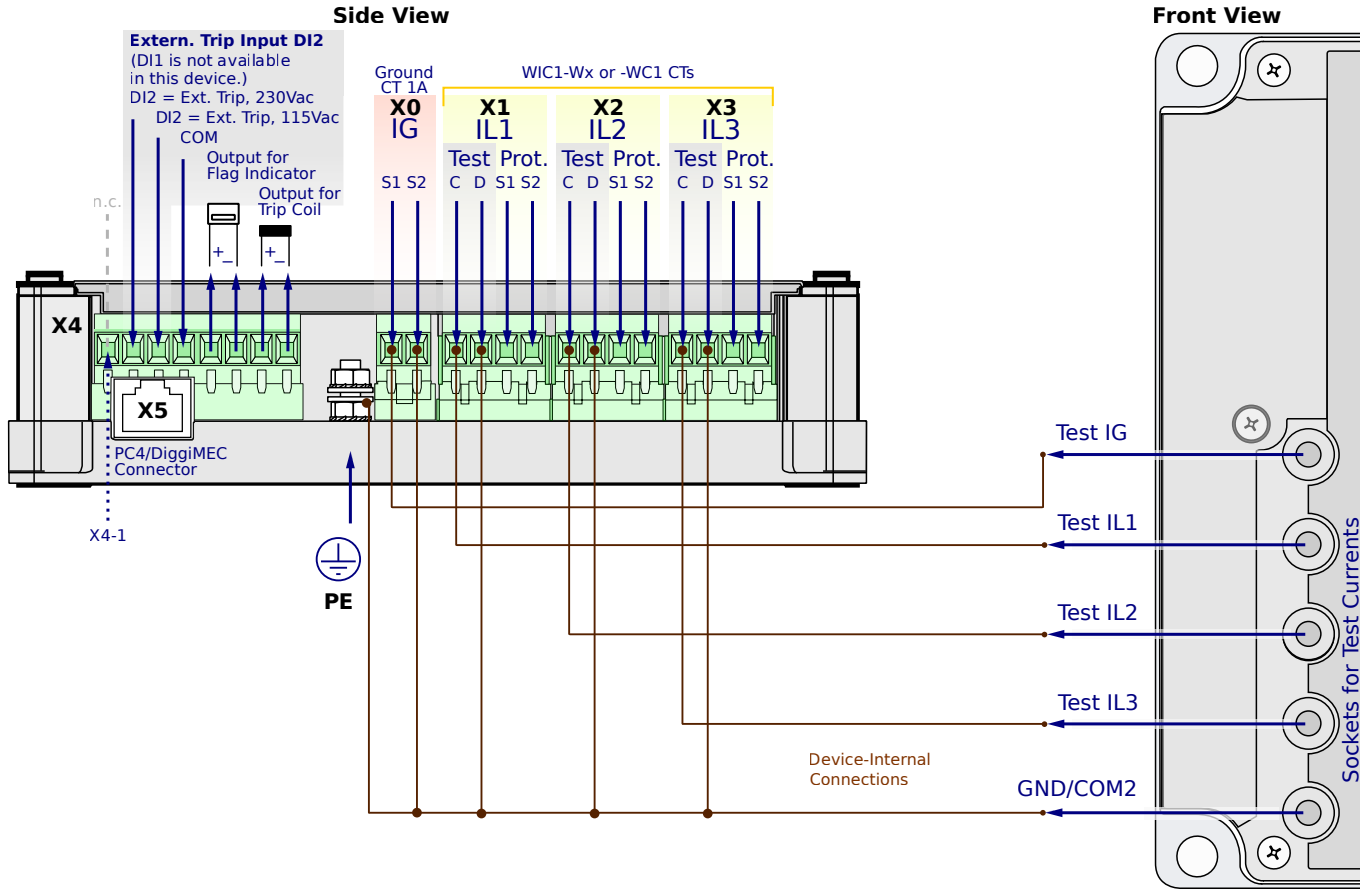


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1SAH

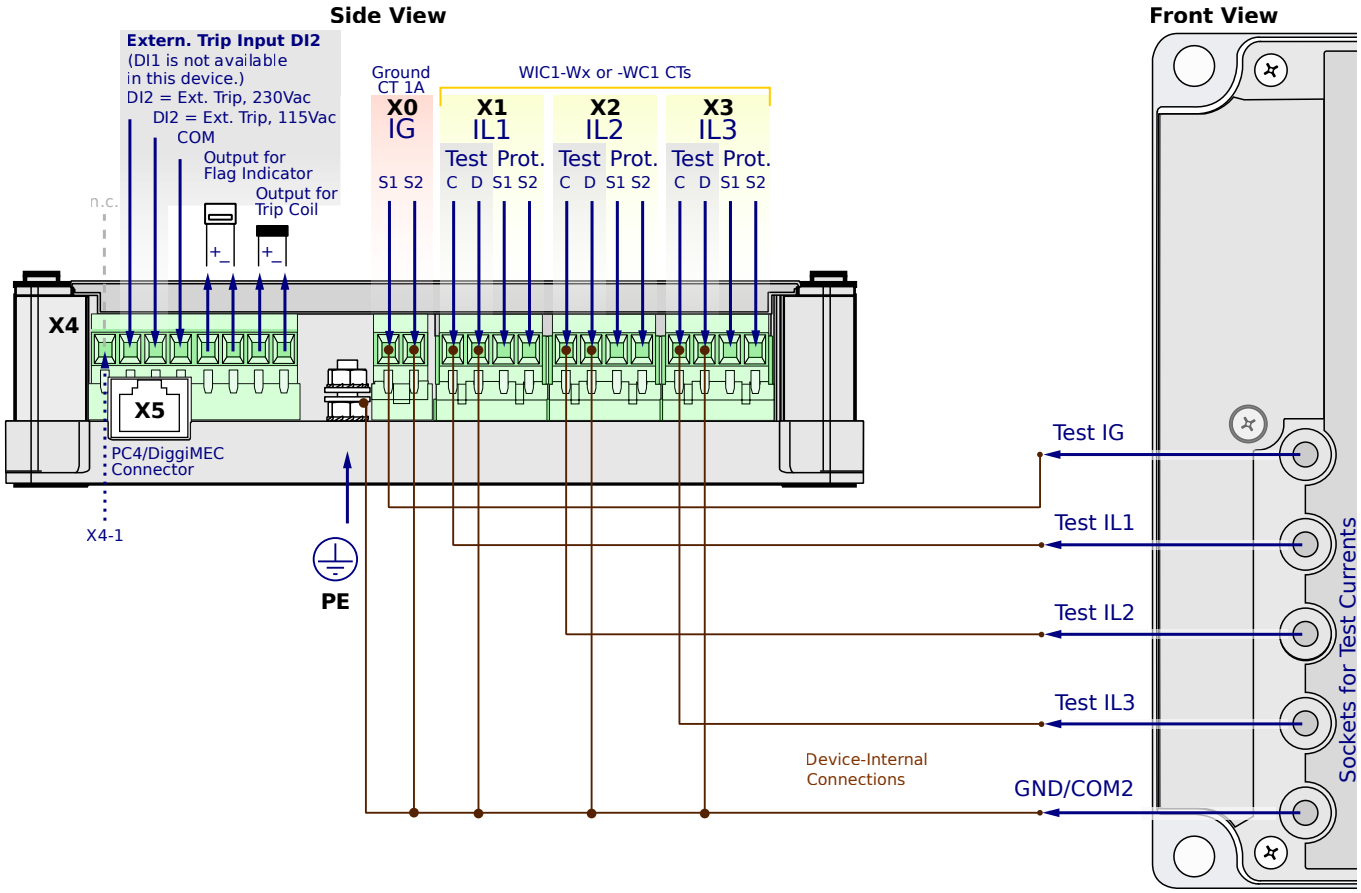


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1AA0

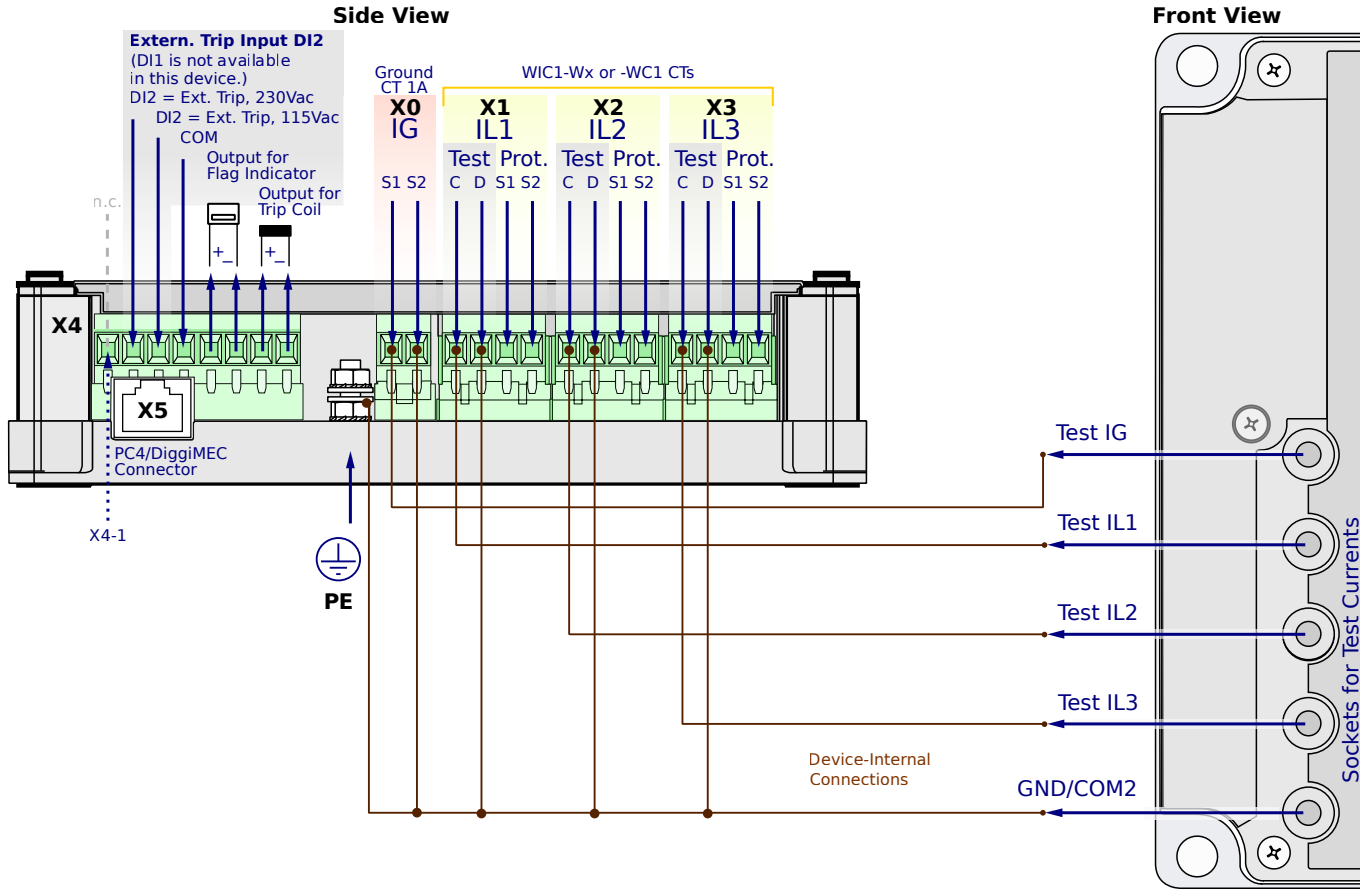


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1AAH

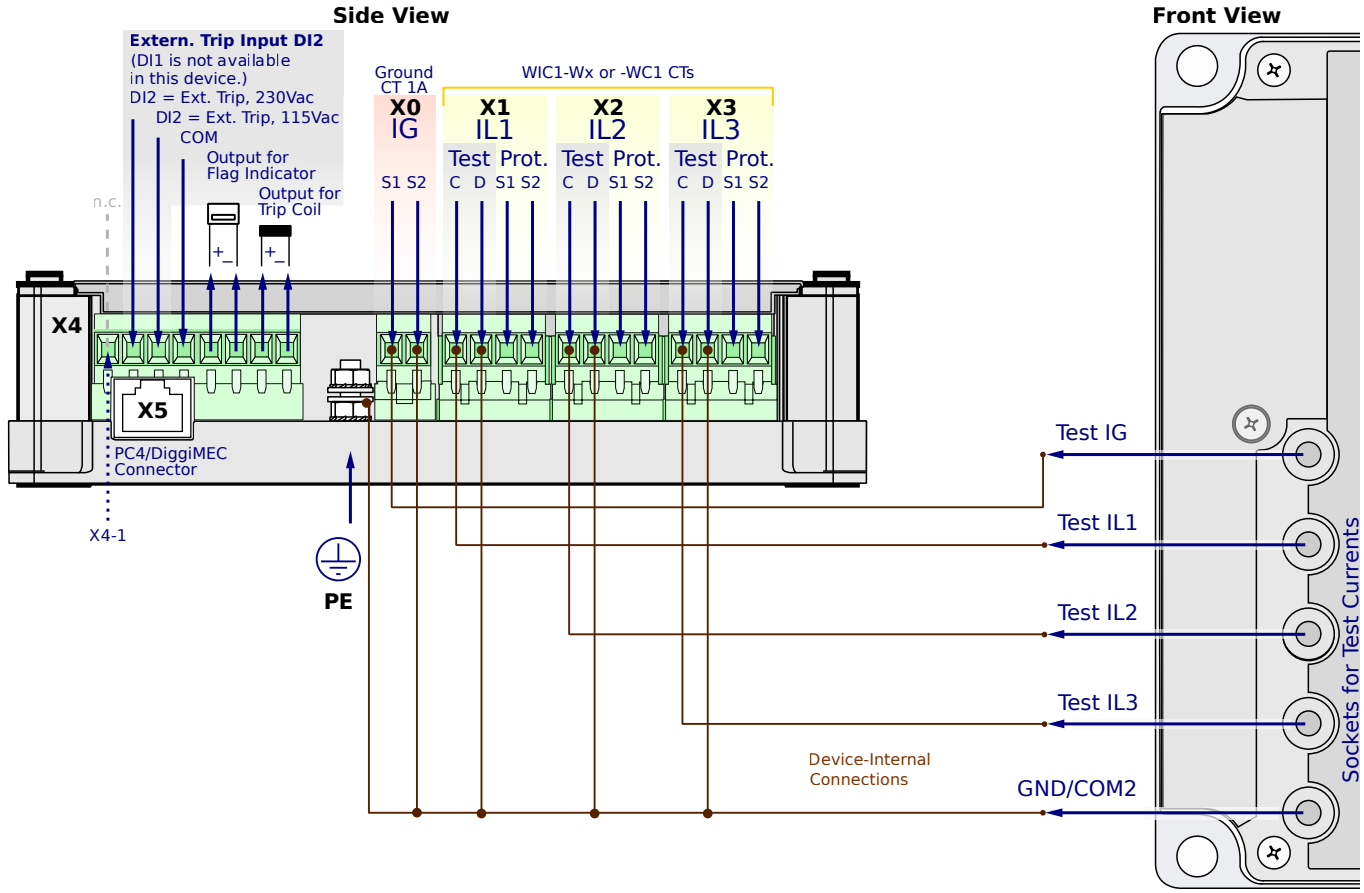


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1PA0

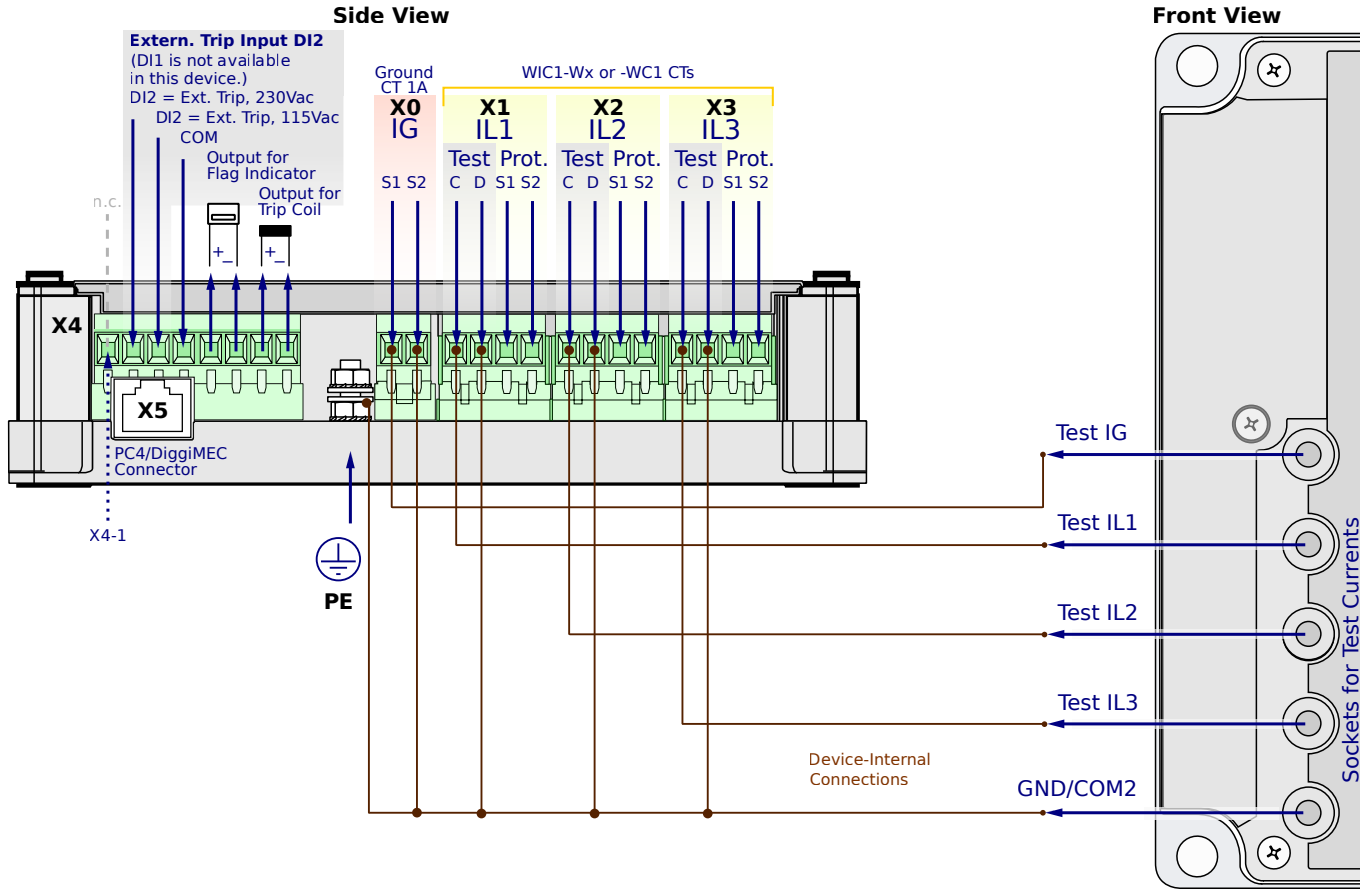


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF1PAH

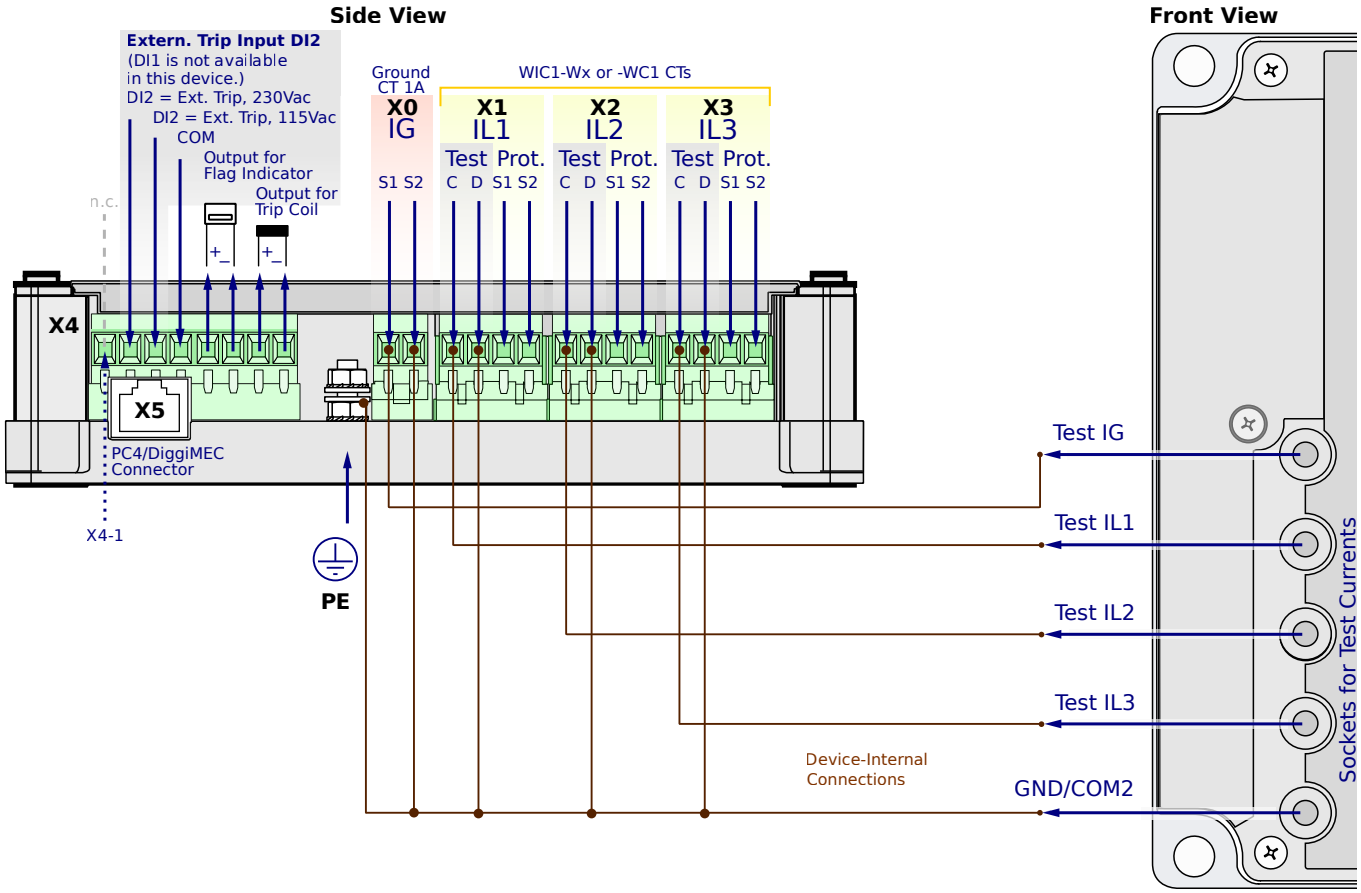


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2SA0

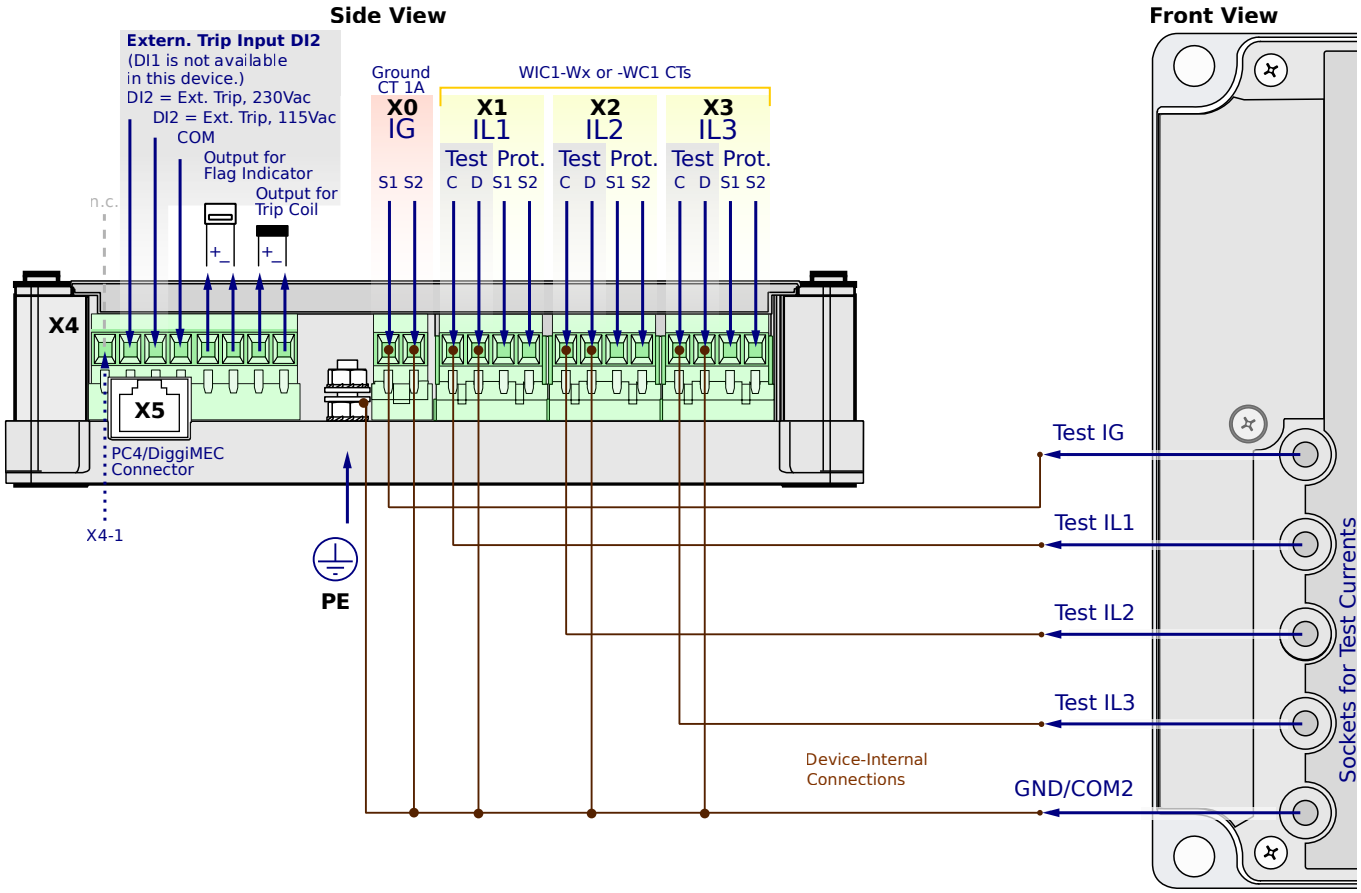


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2SAH

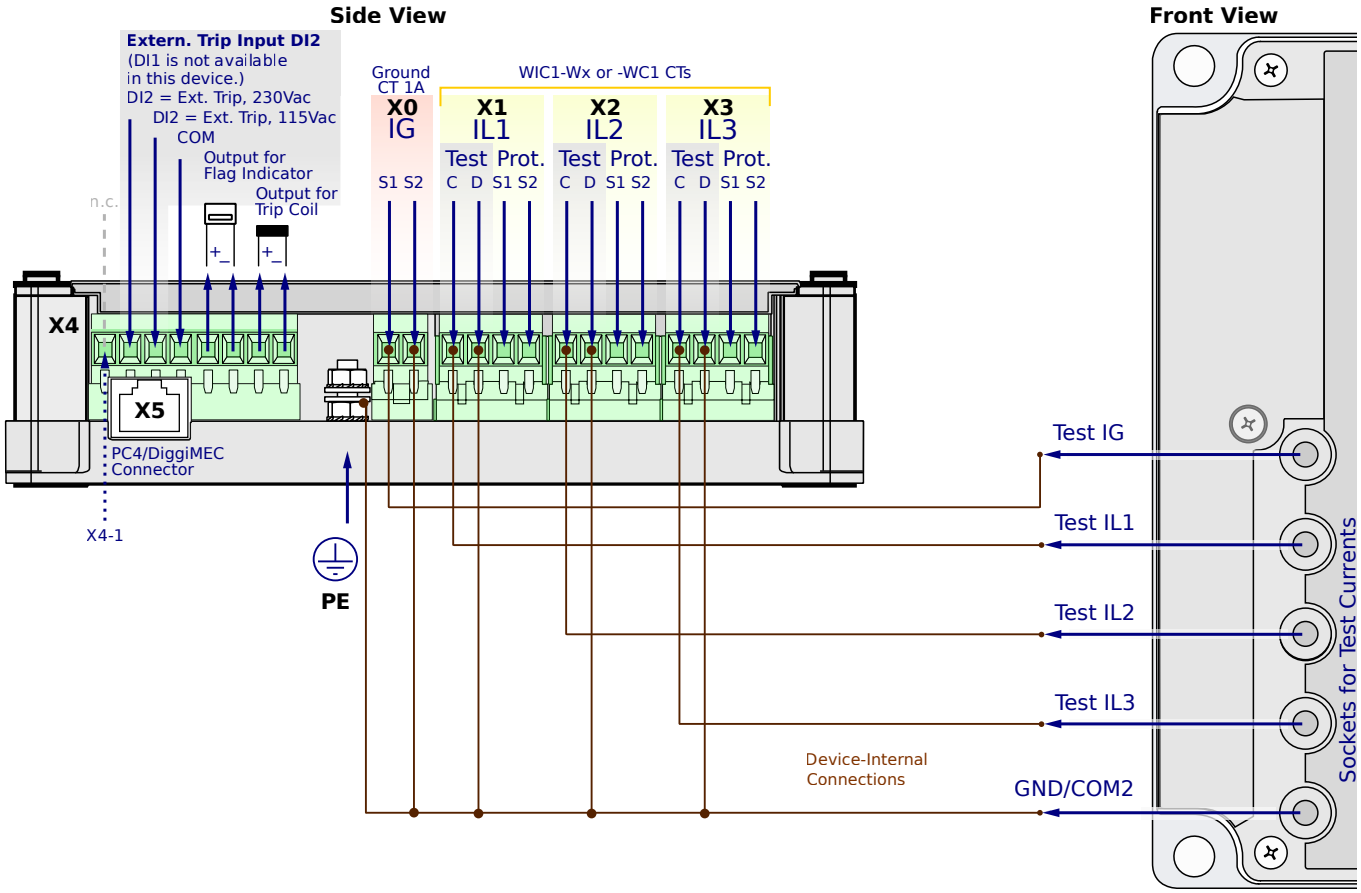


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2AA0

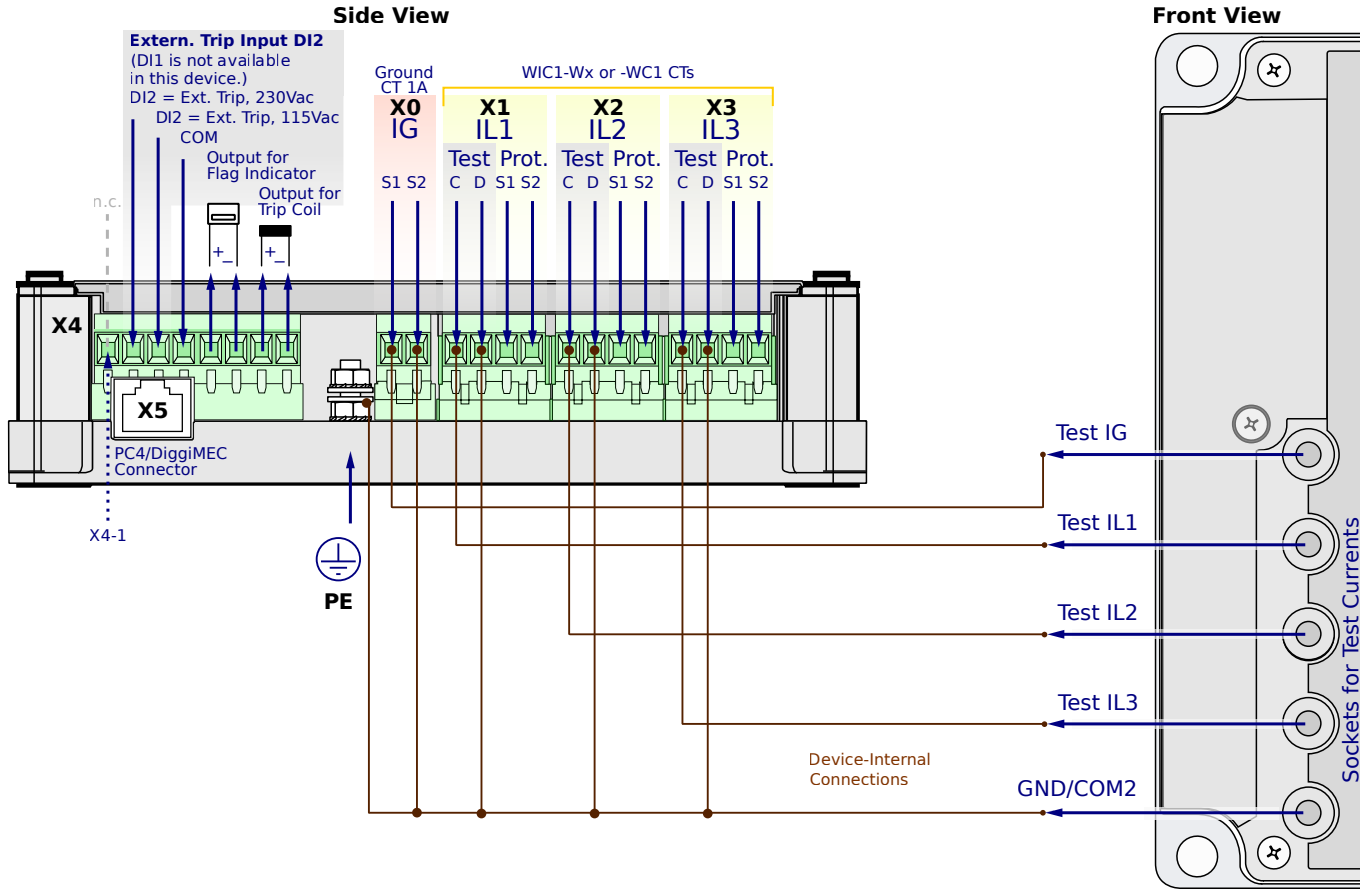


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2AAH

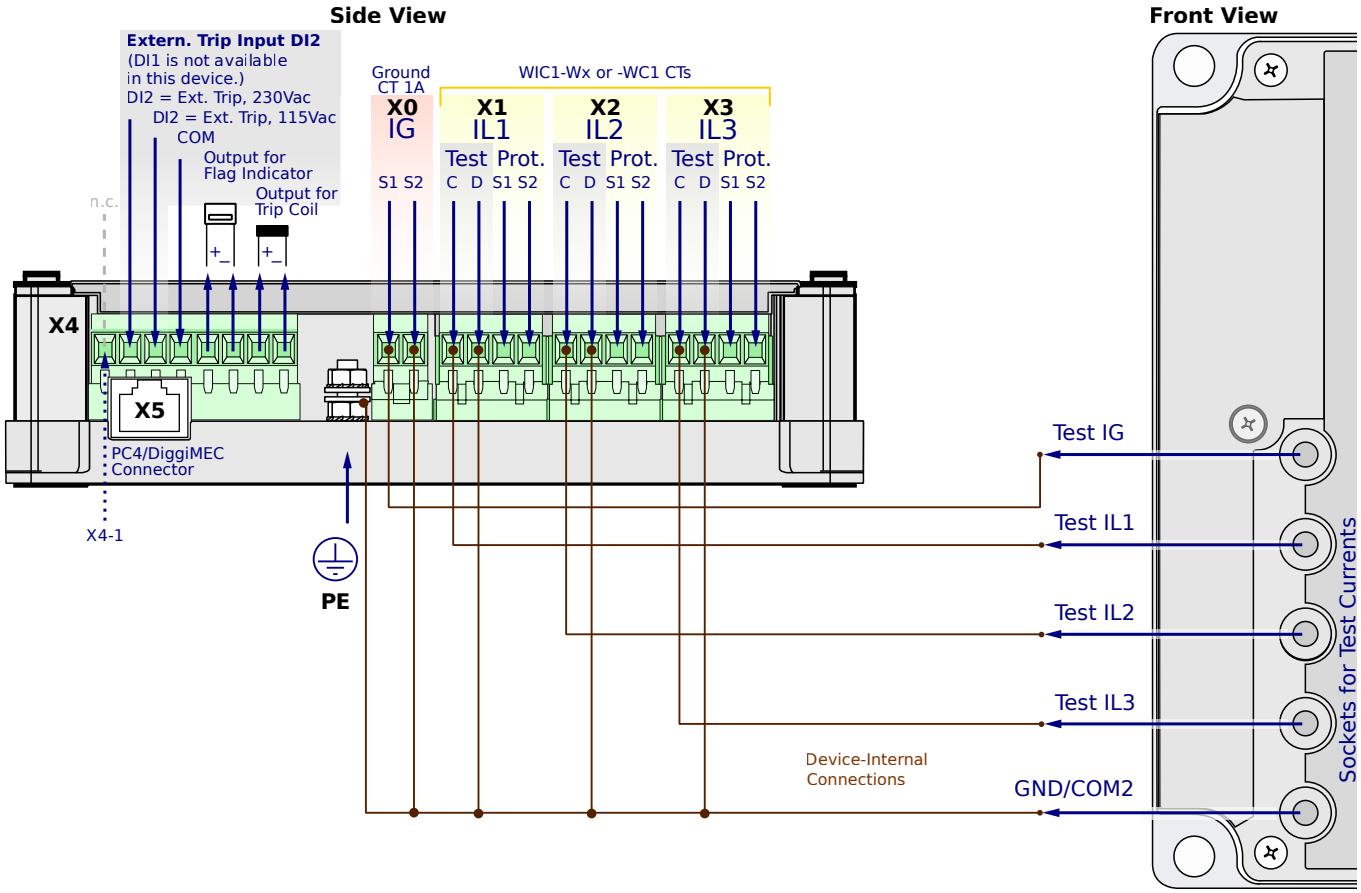


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2PA0

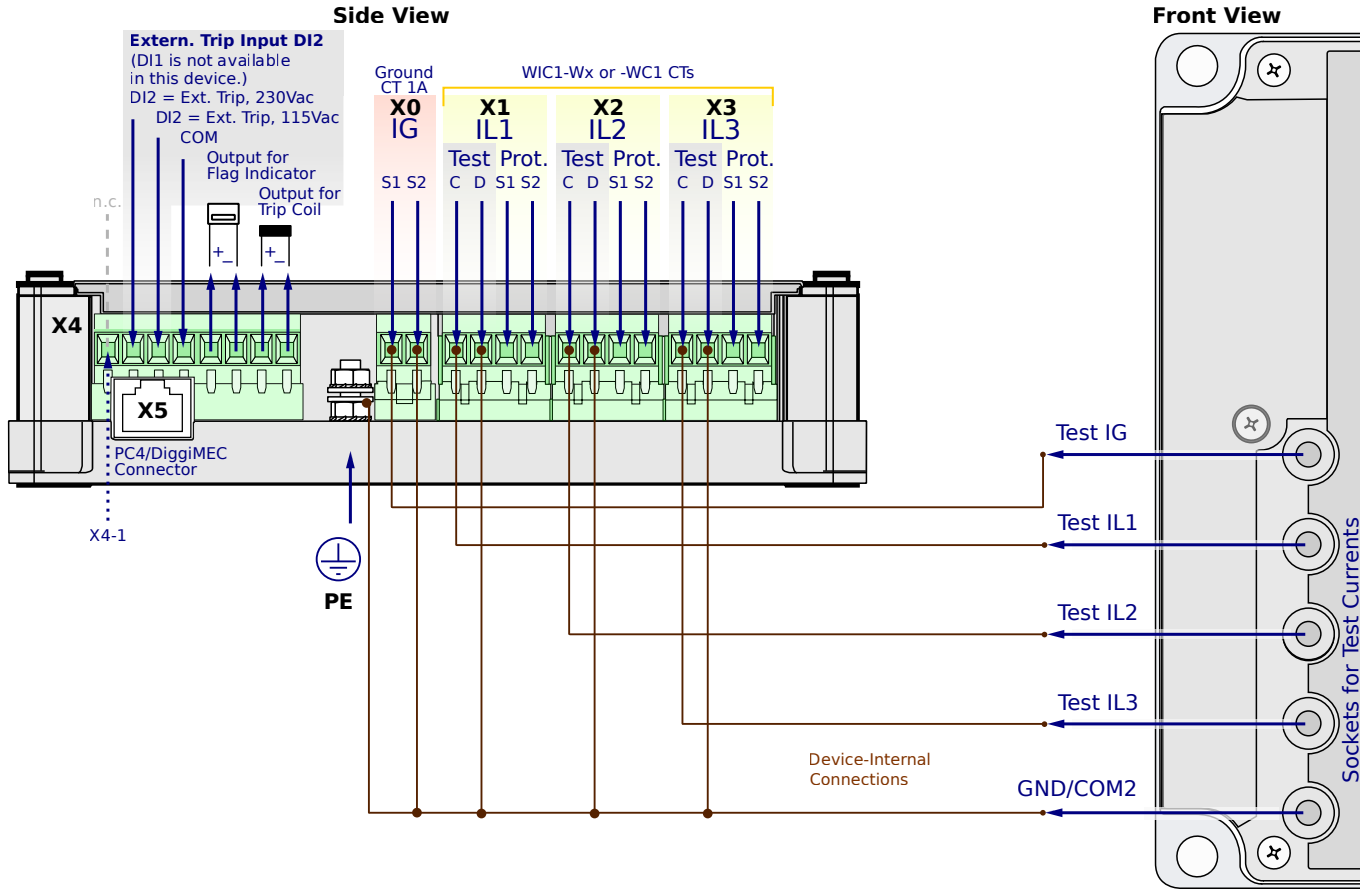


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FF2PAH

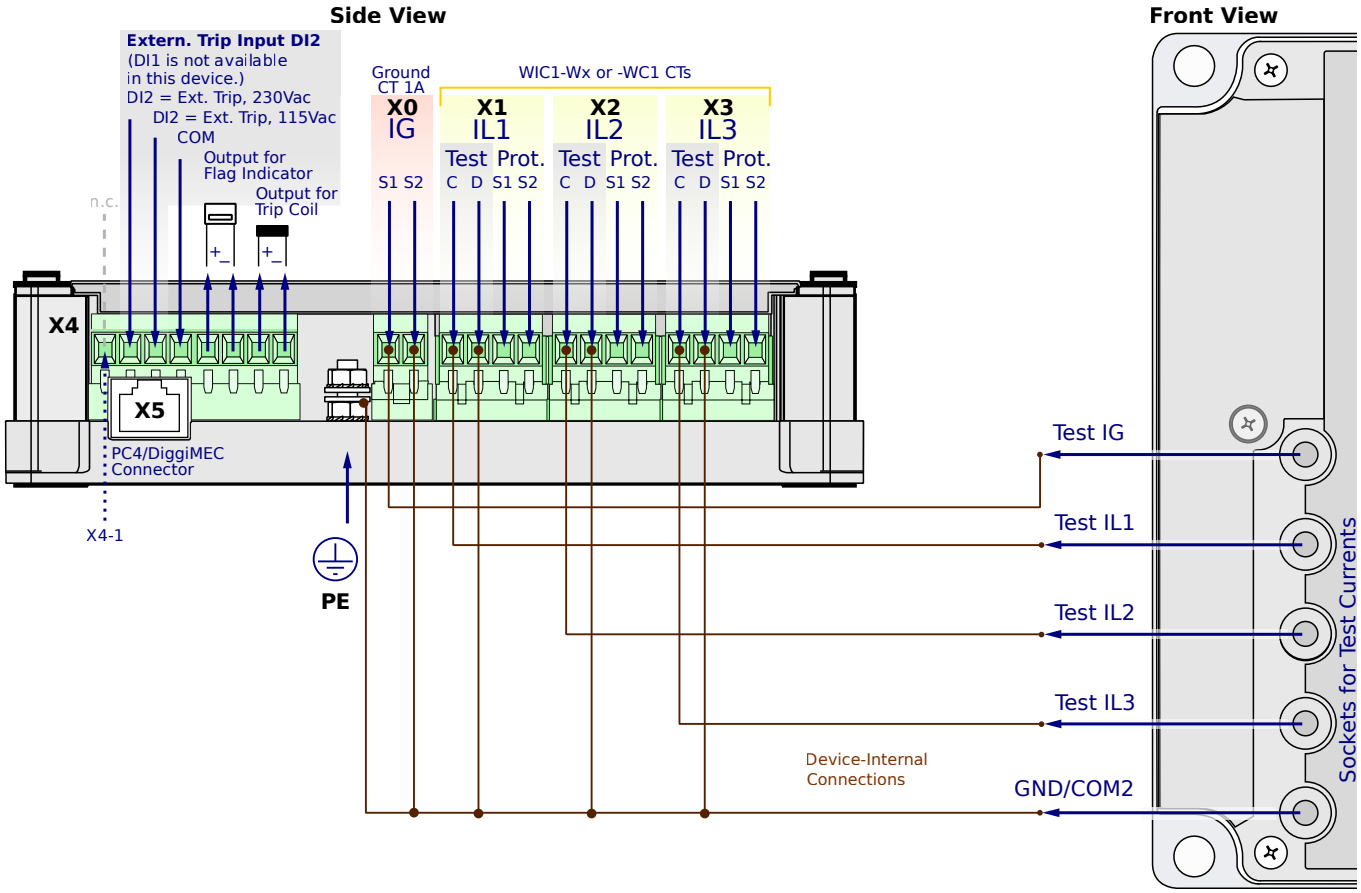


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1SA0

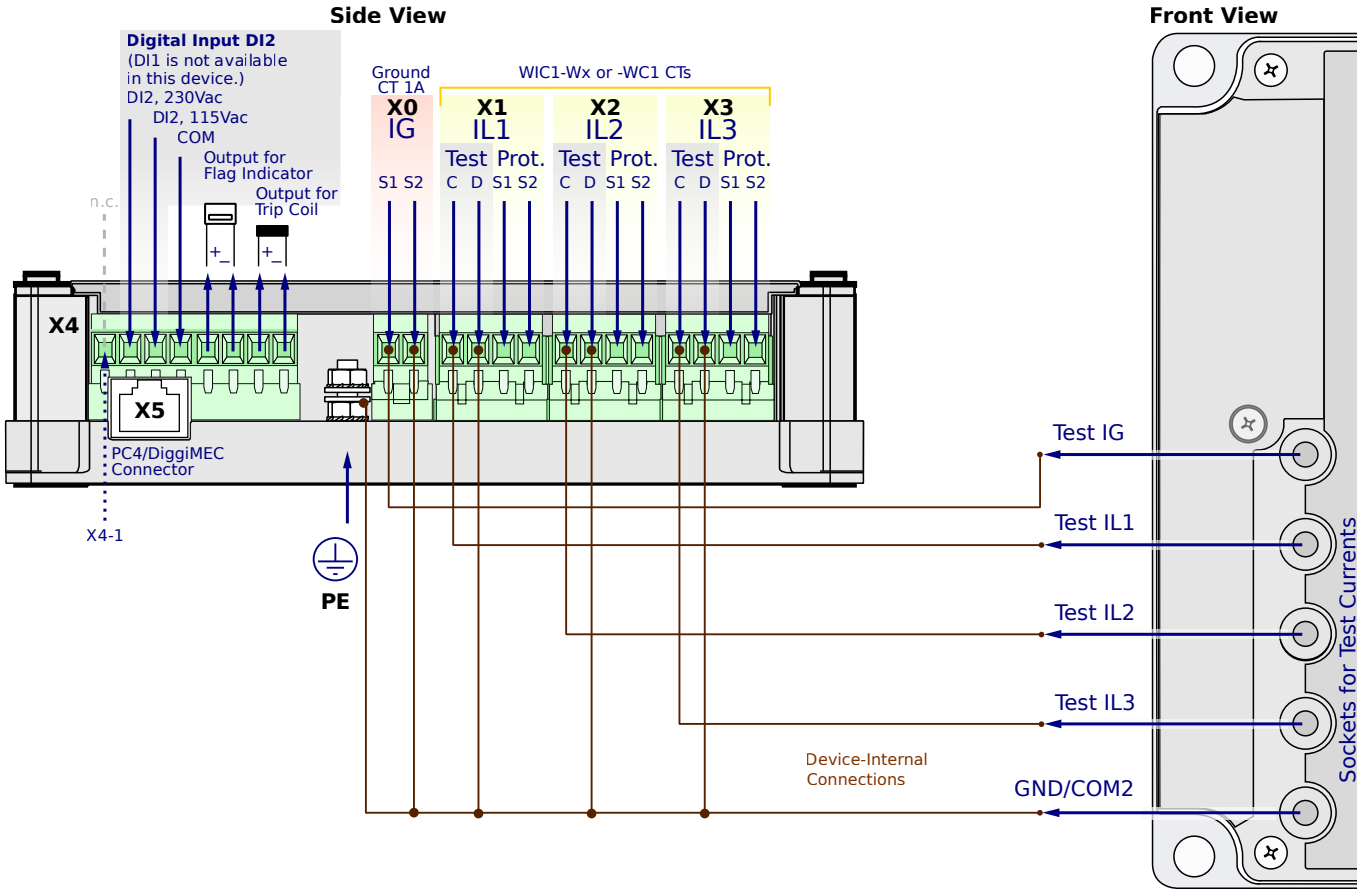


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1SAH

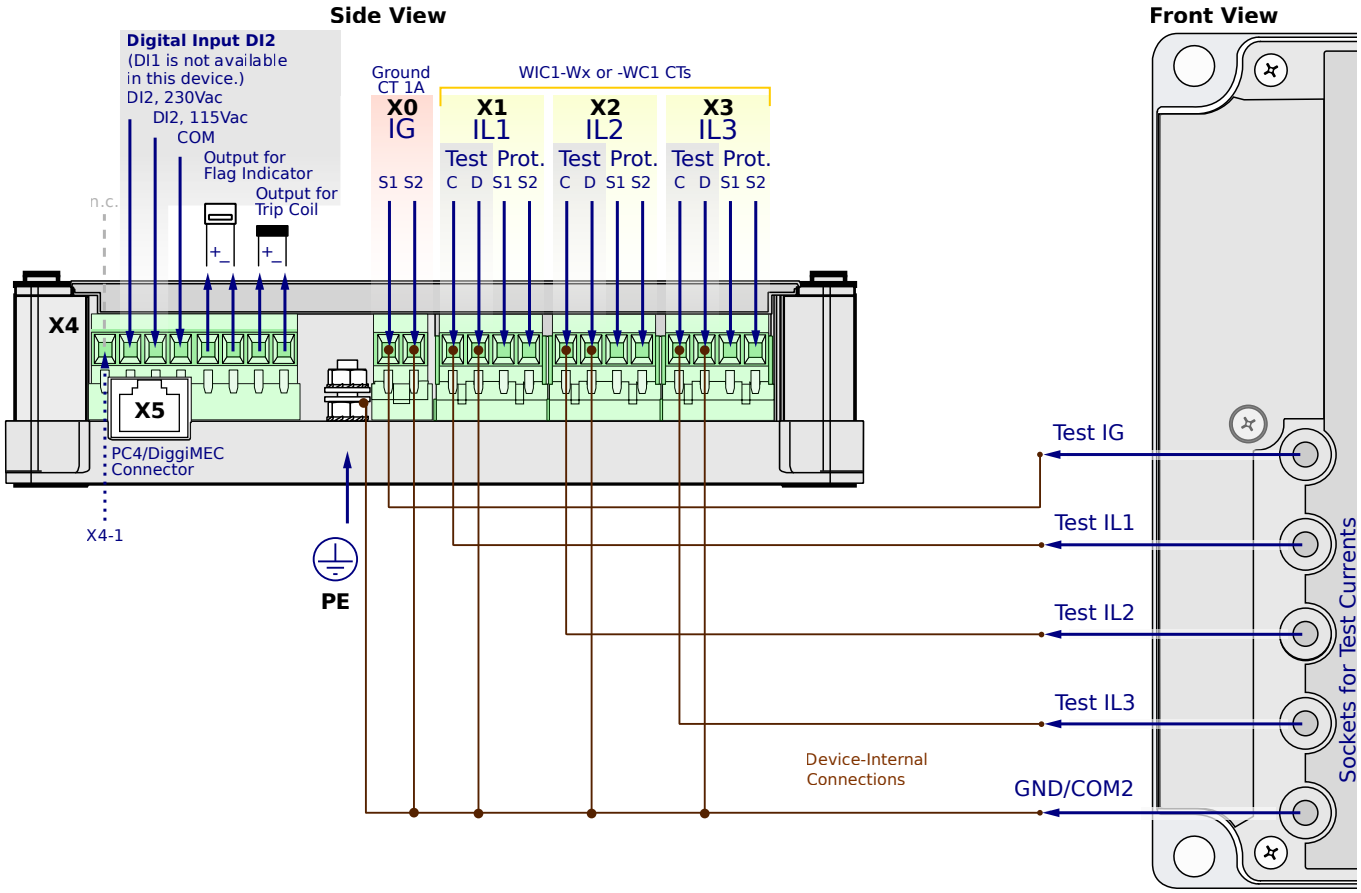


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1AA0

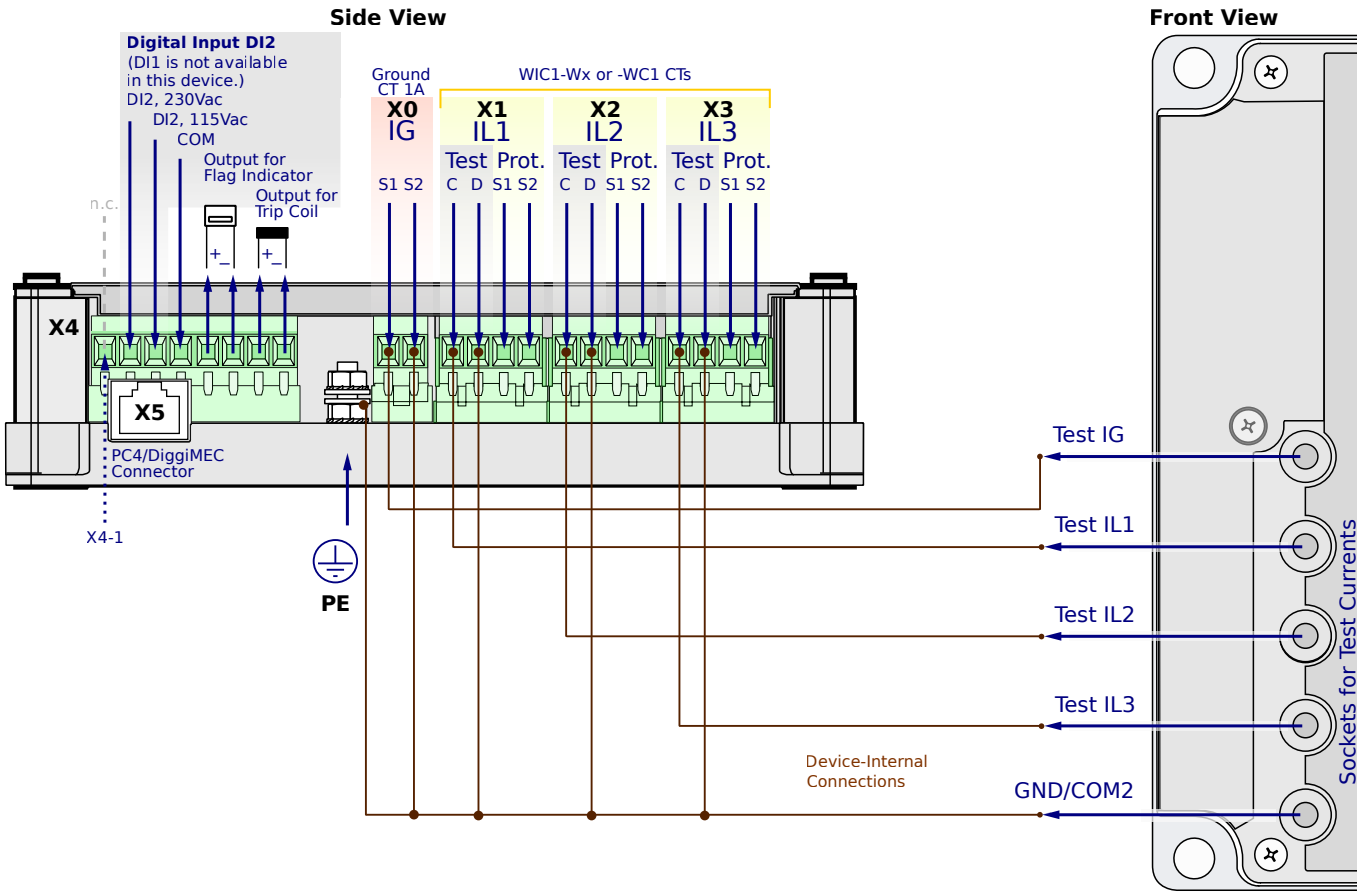


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1AAH

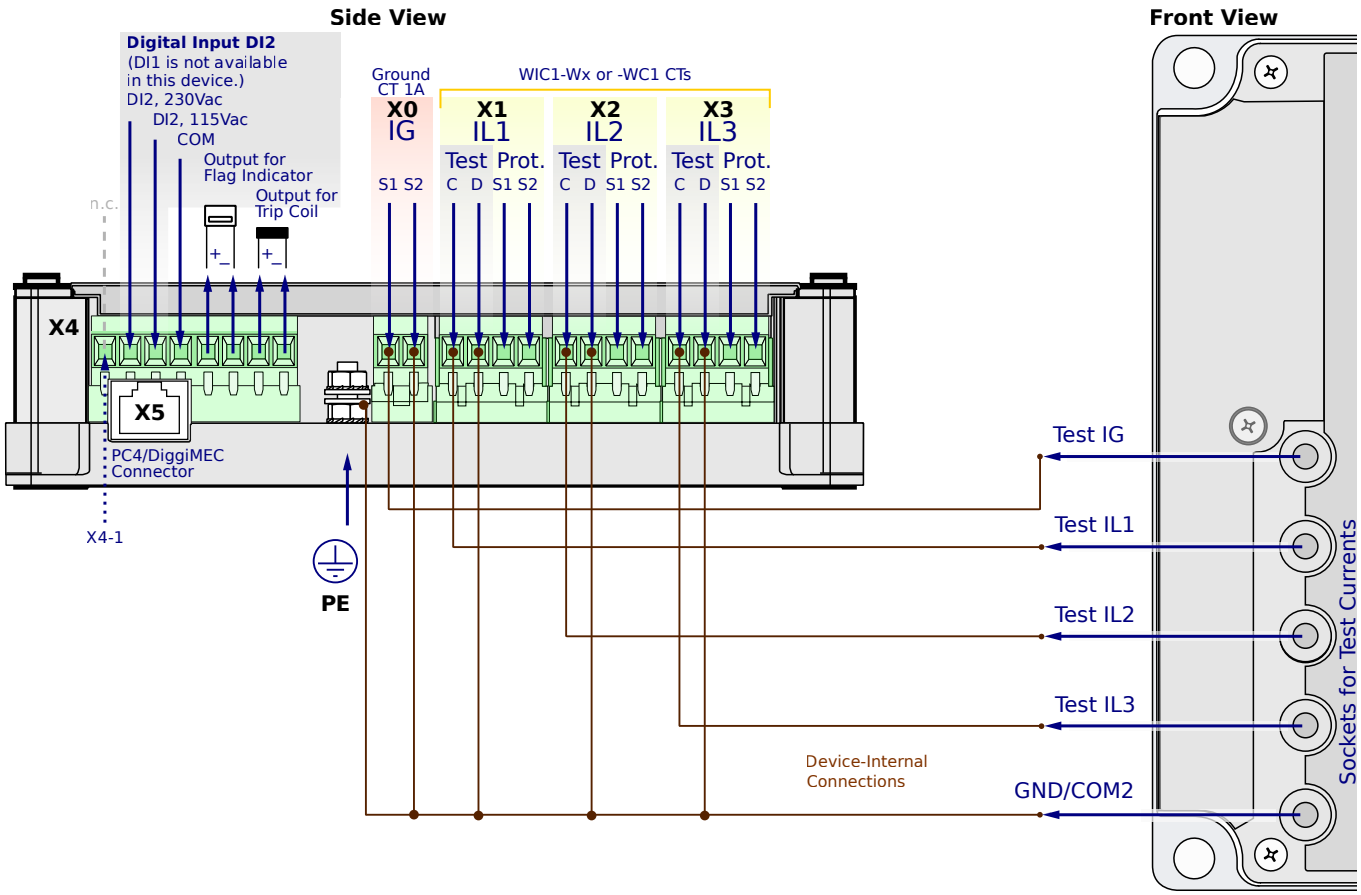


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1PA0

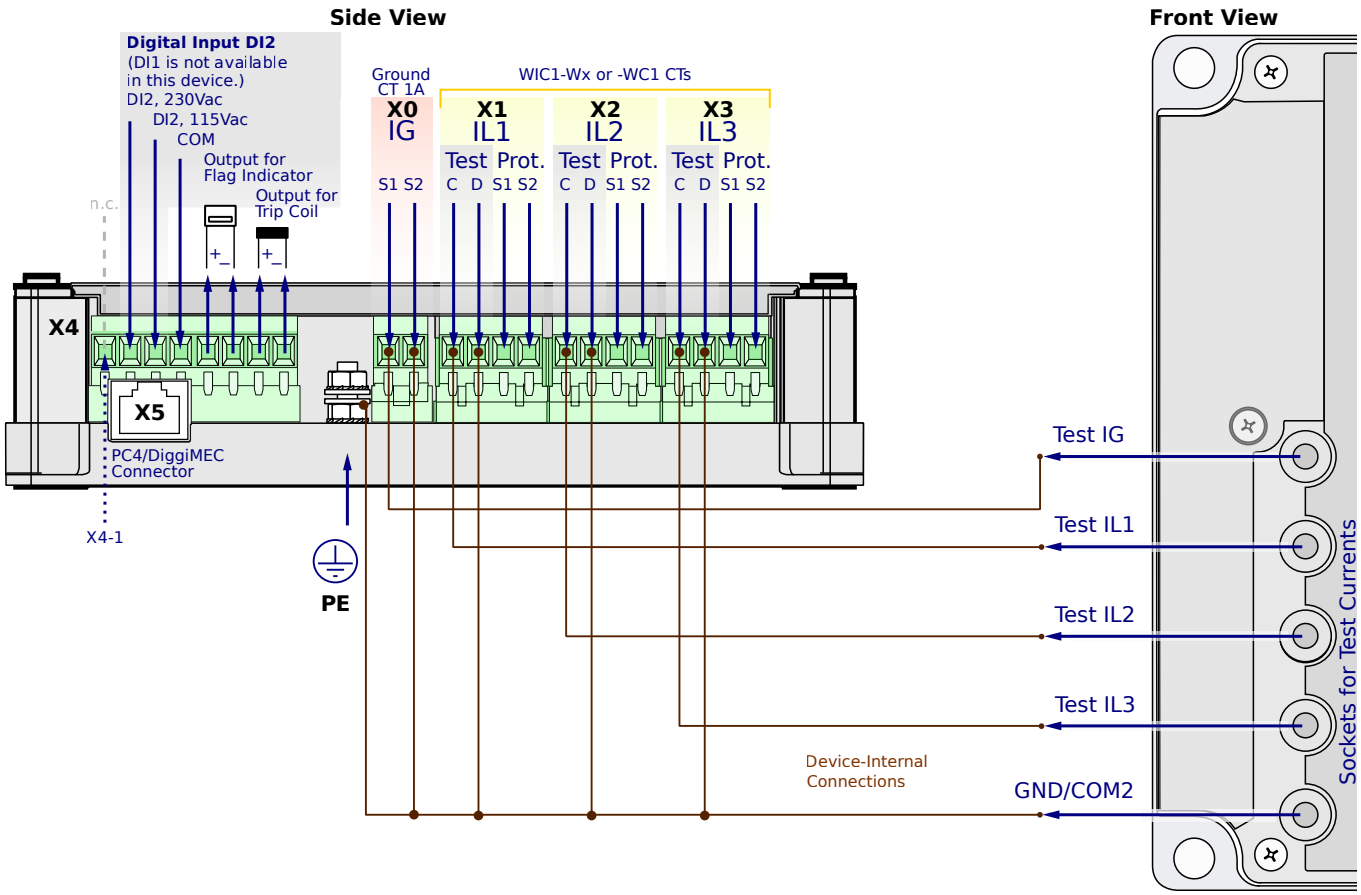


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC1PAH

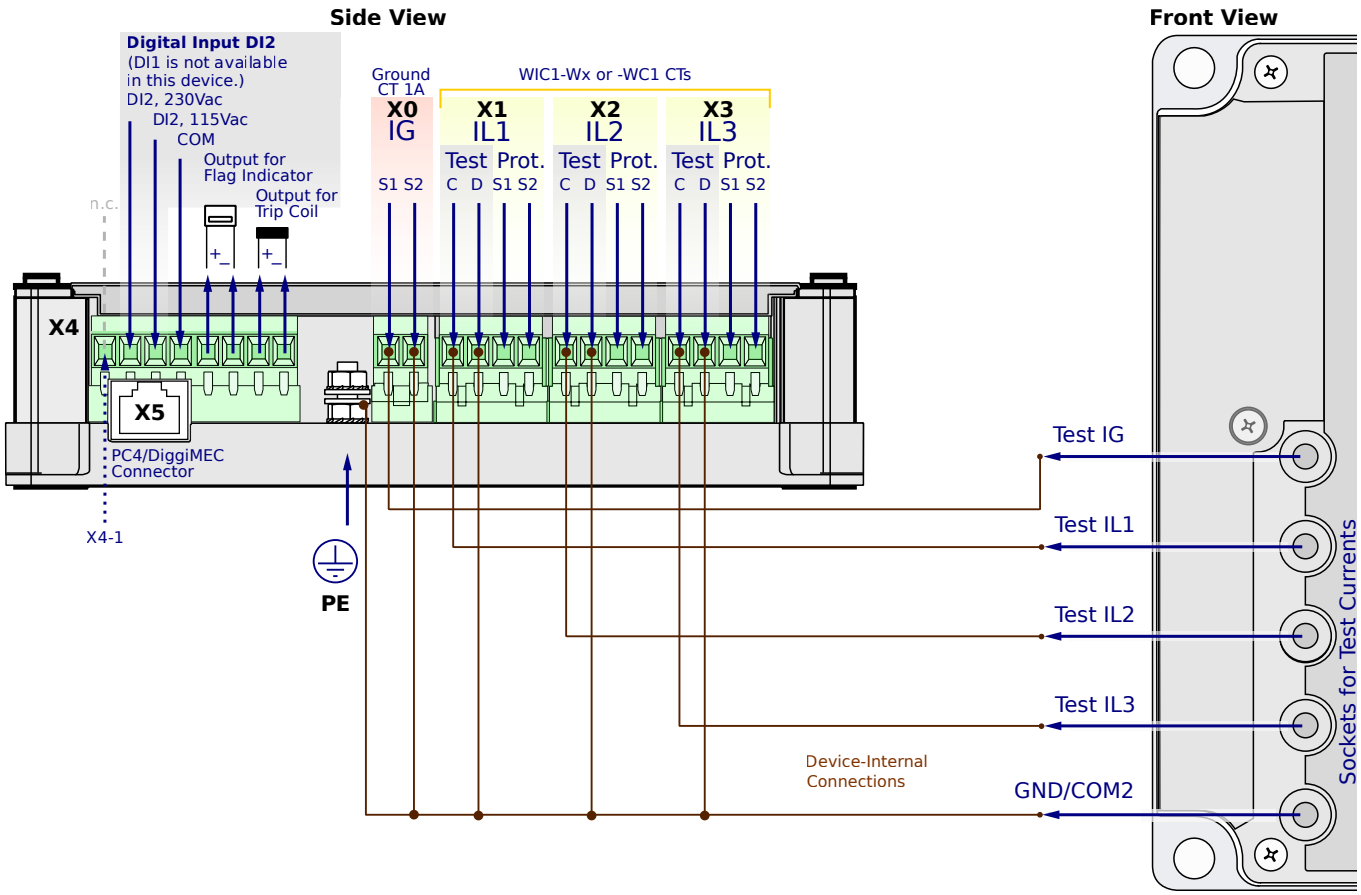


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2SA0

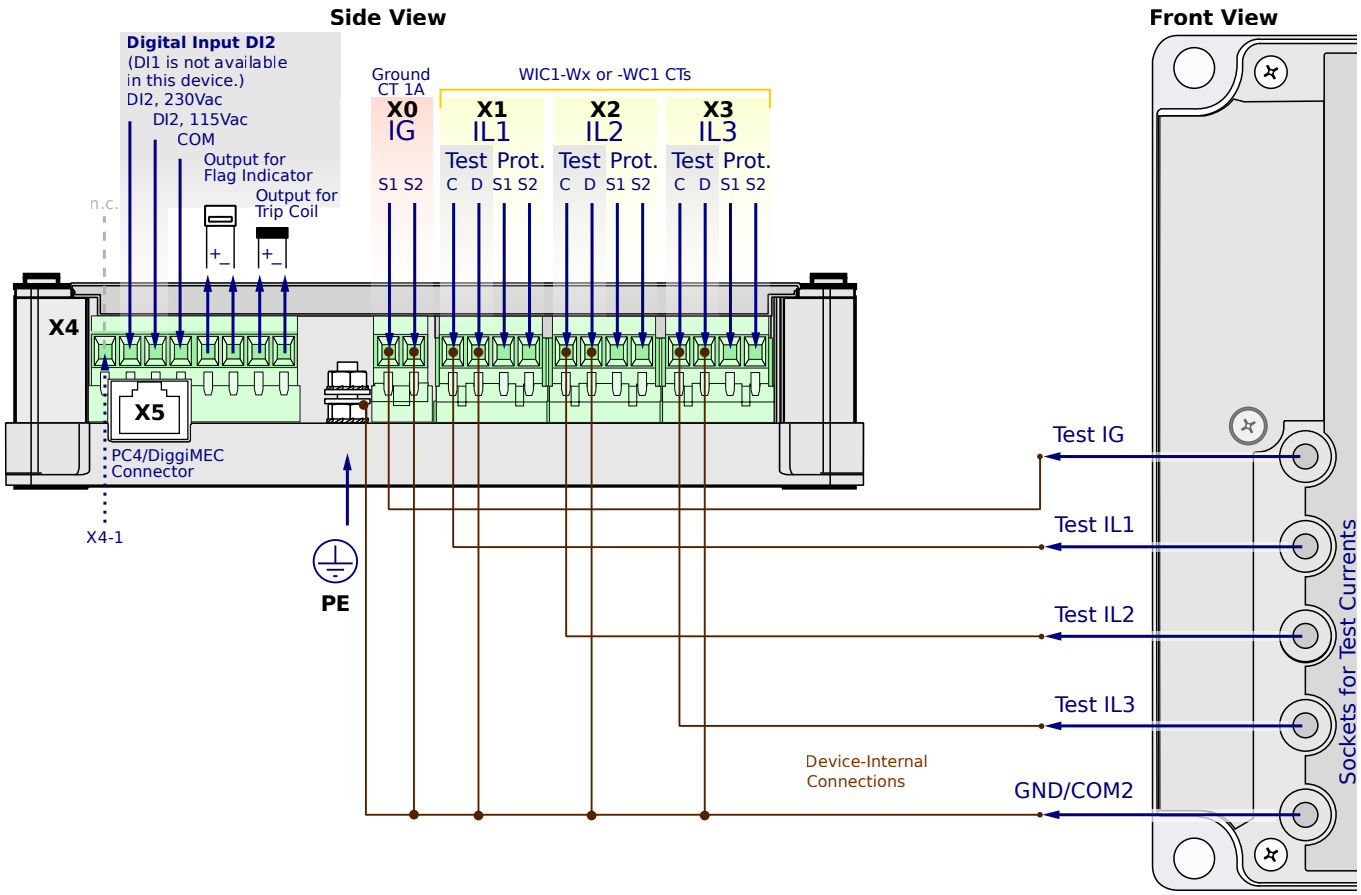


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2SAH

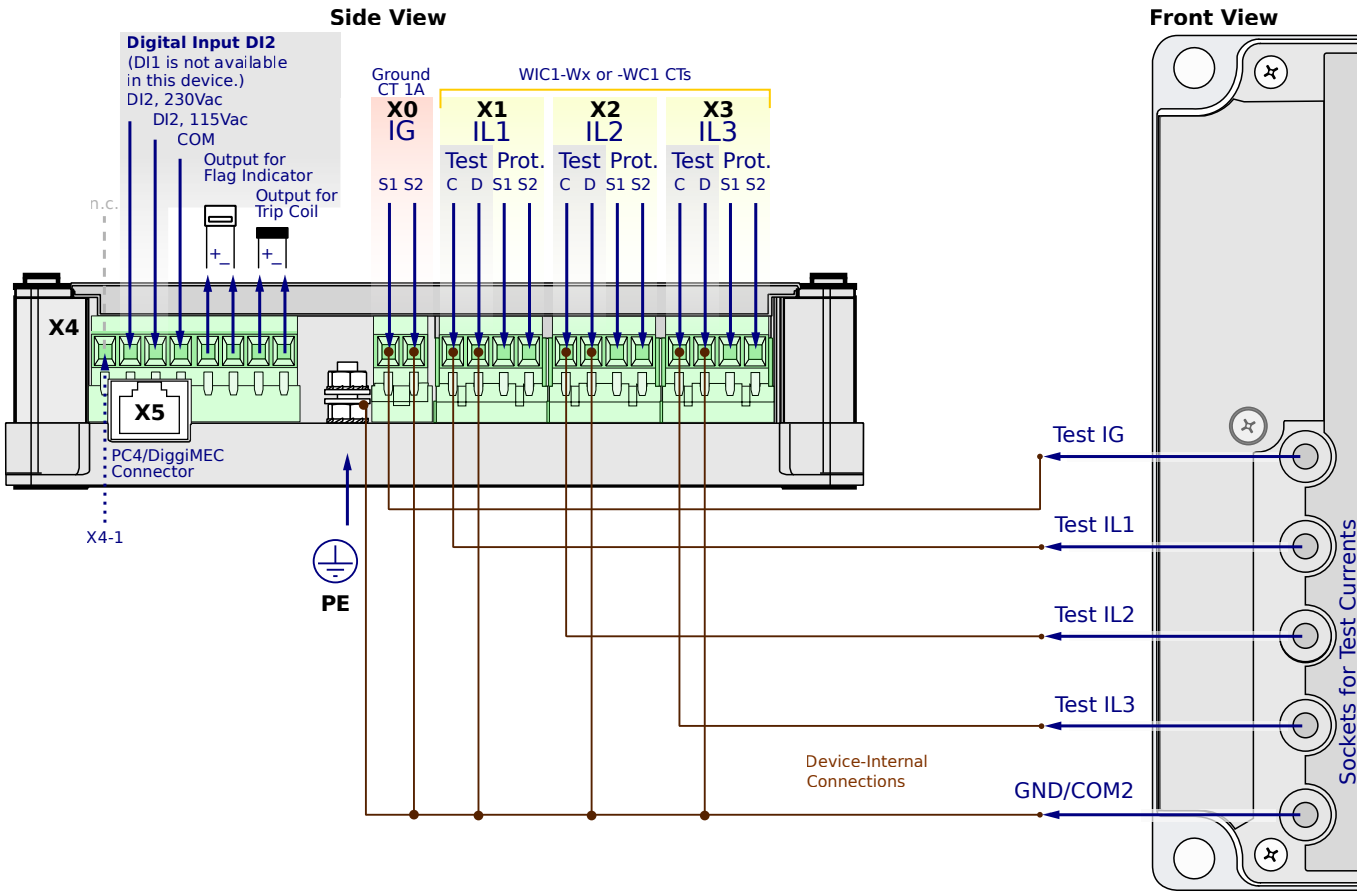


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2AA0

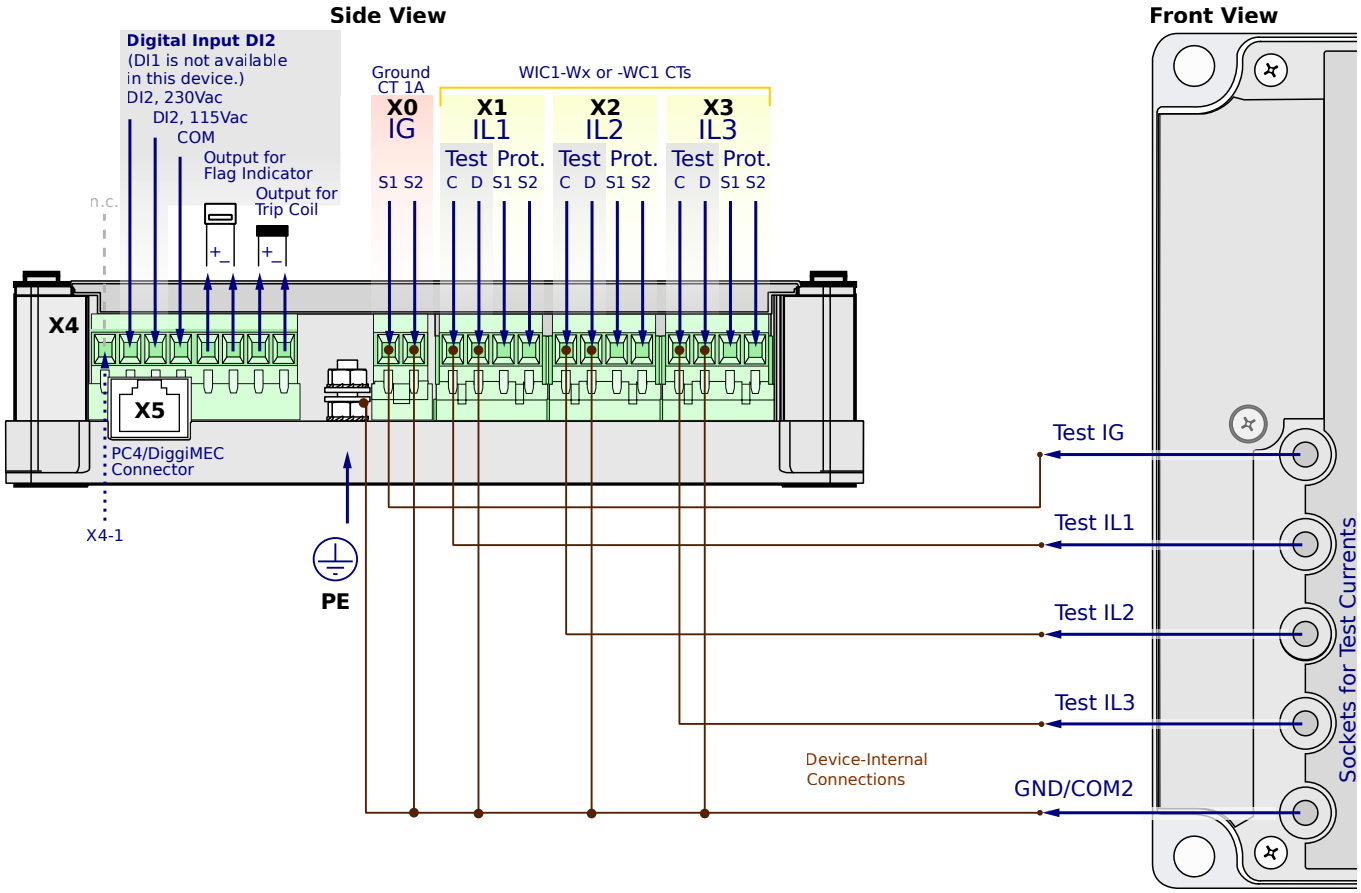


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2AAH

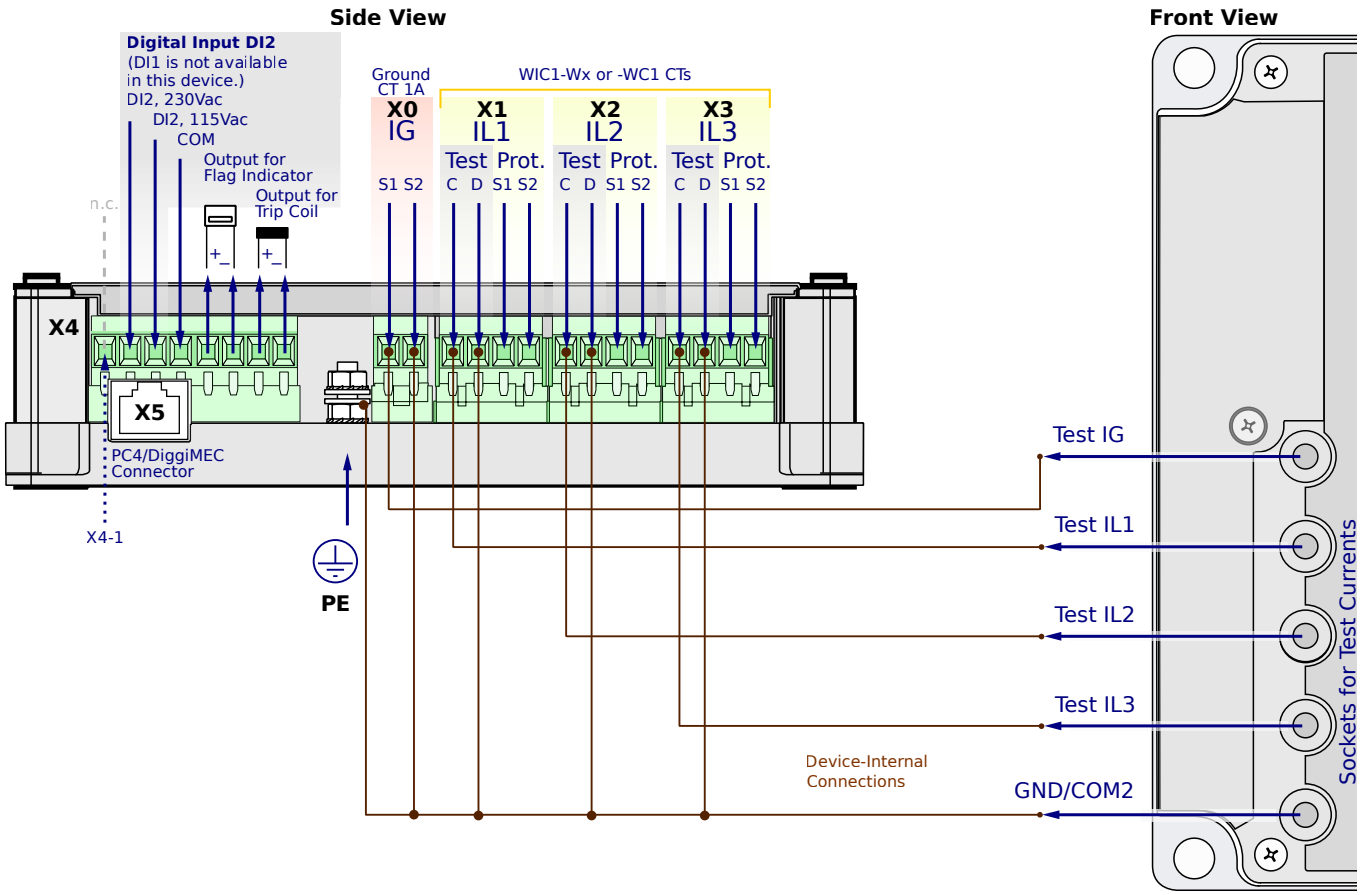


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2PA0

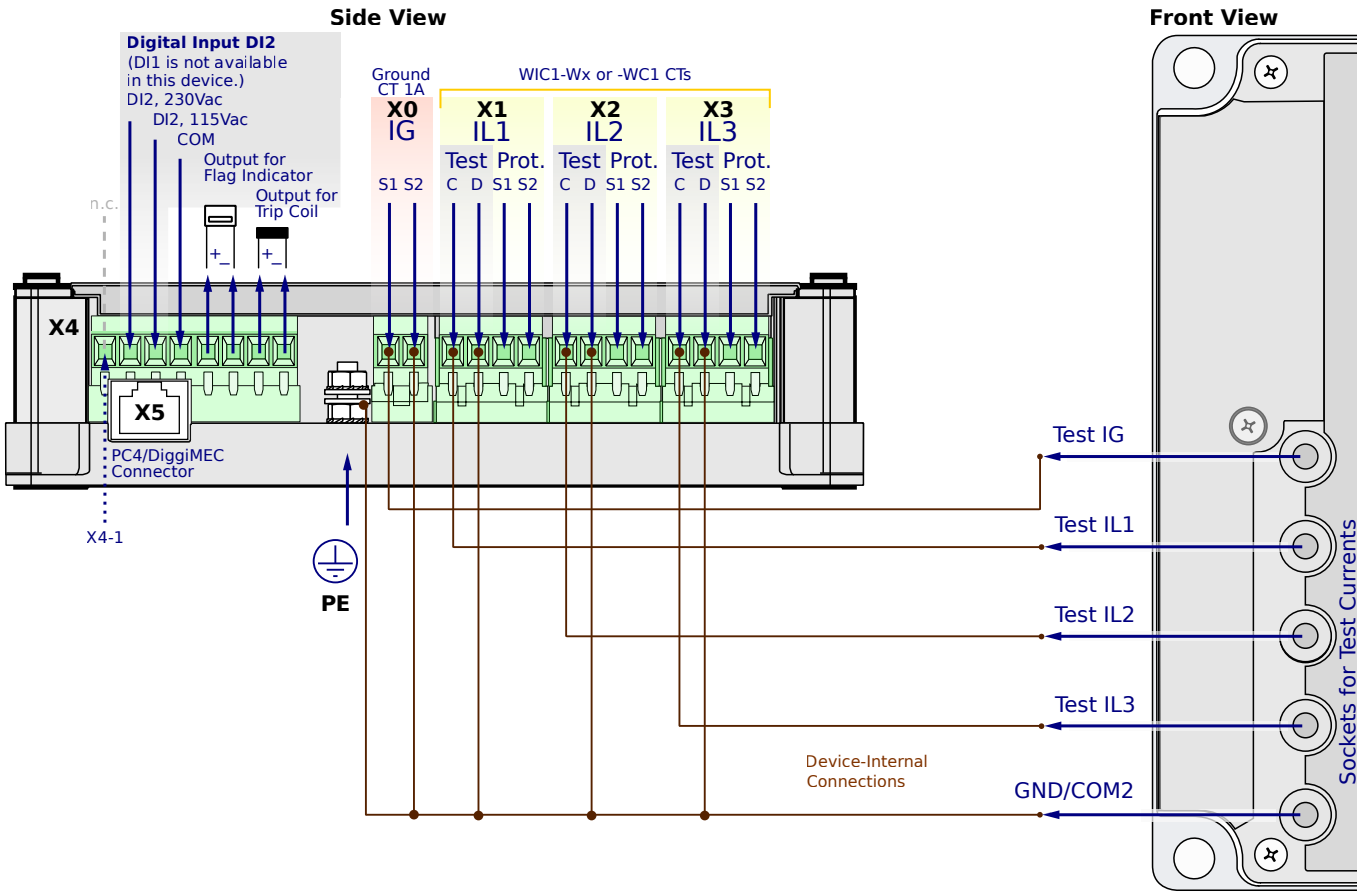


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0FC2PAH

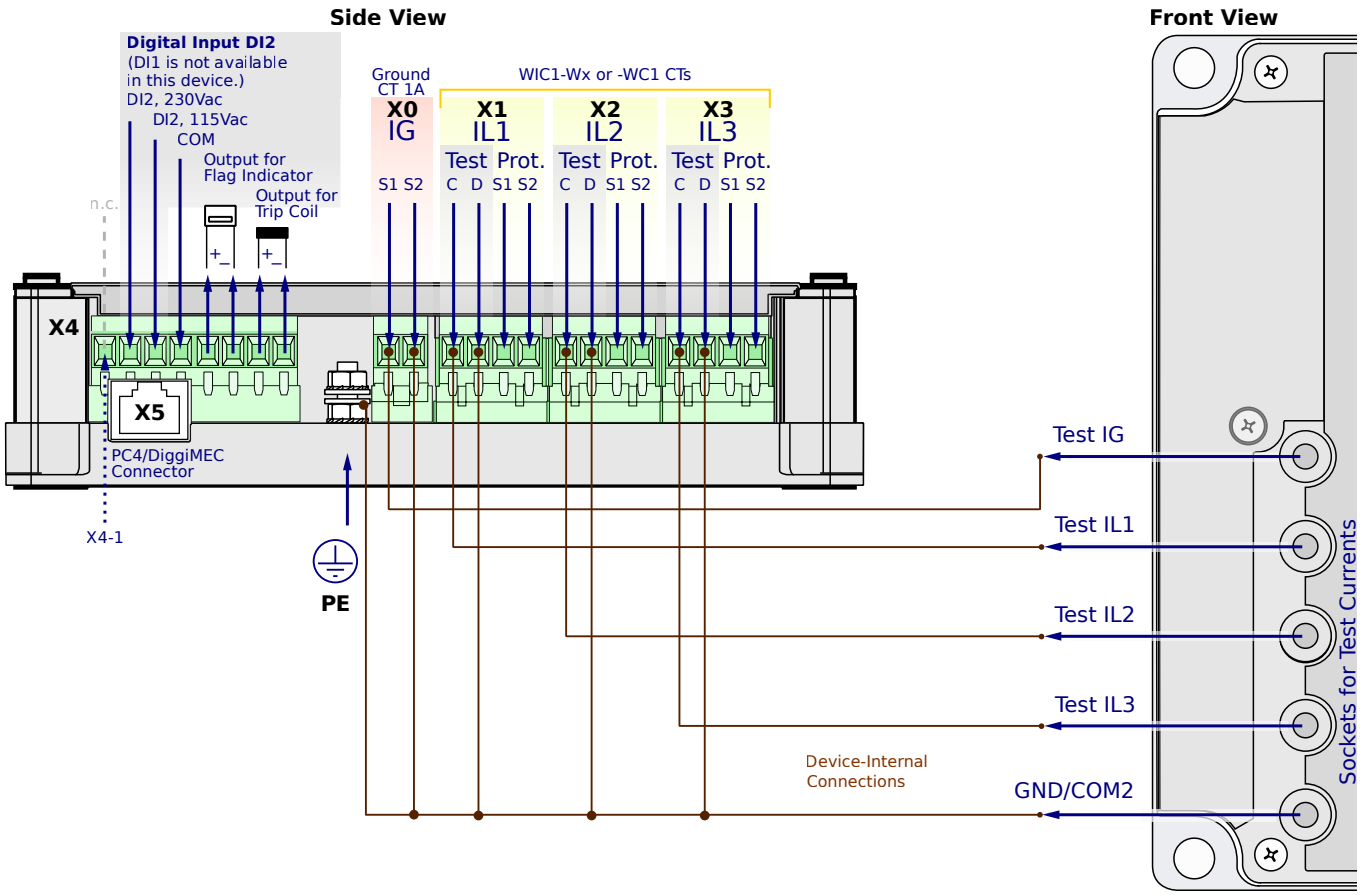


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1SA0

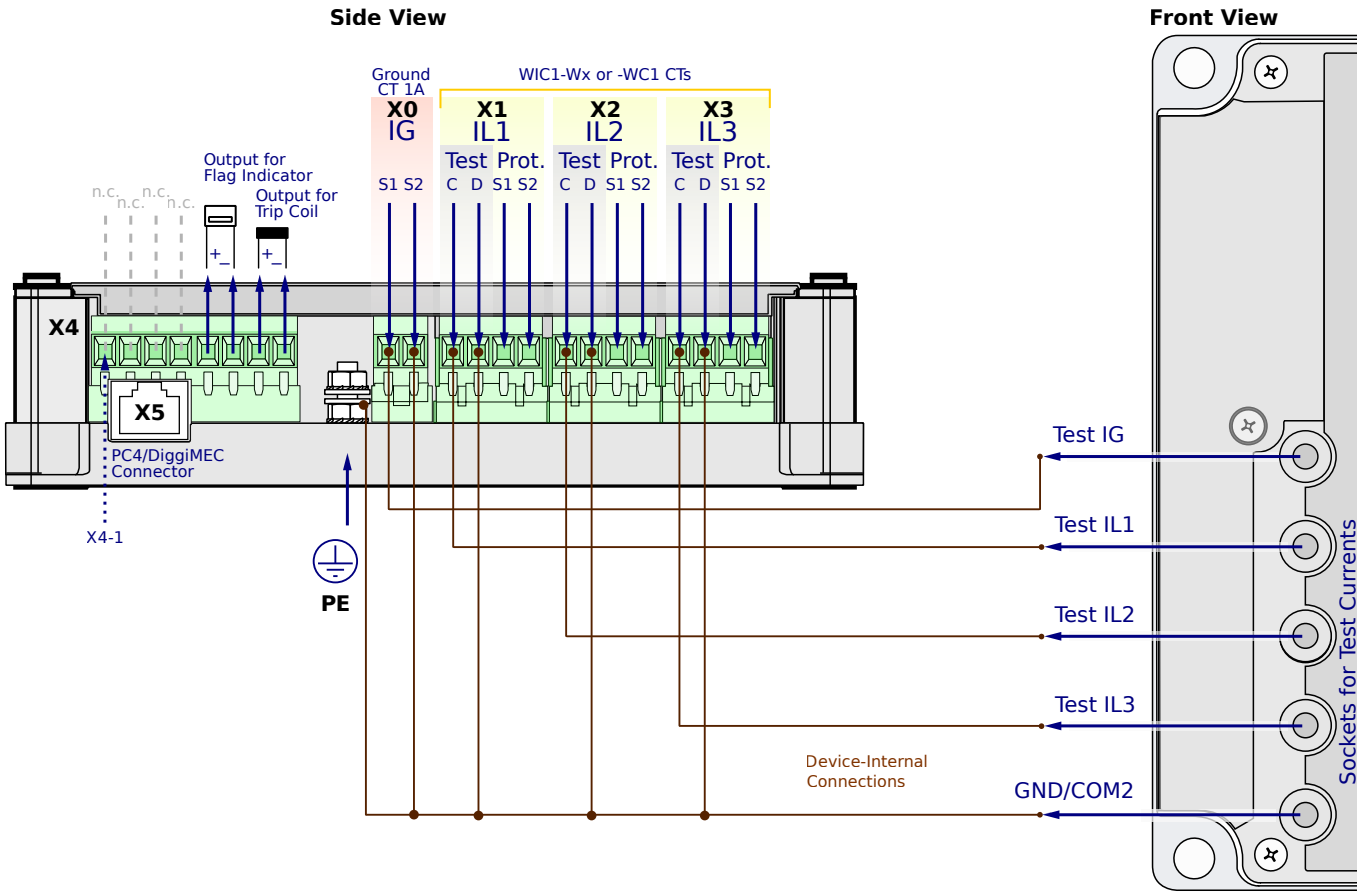


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1SAH

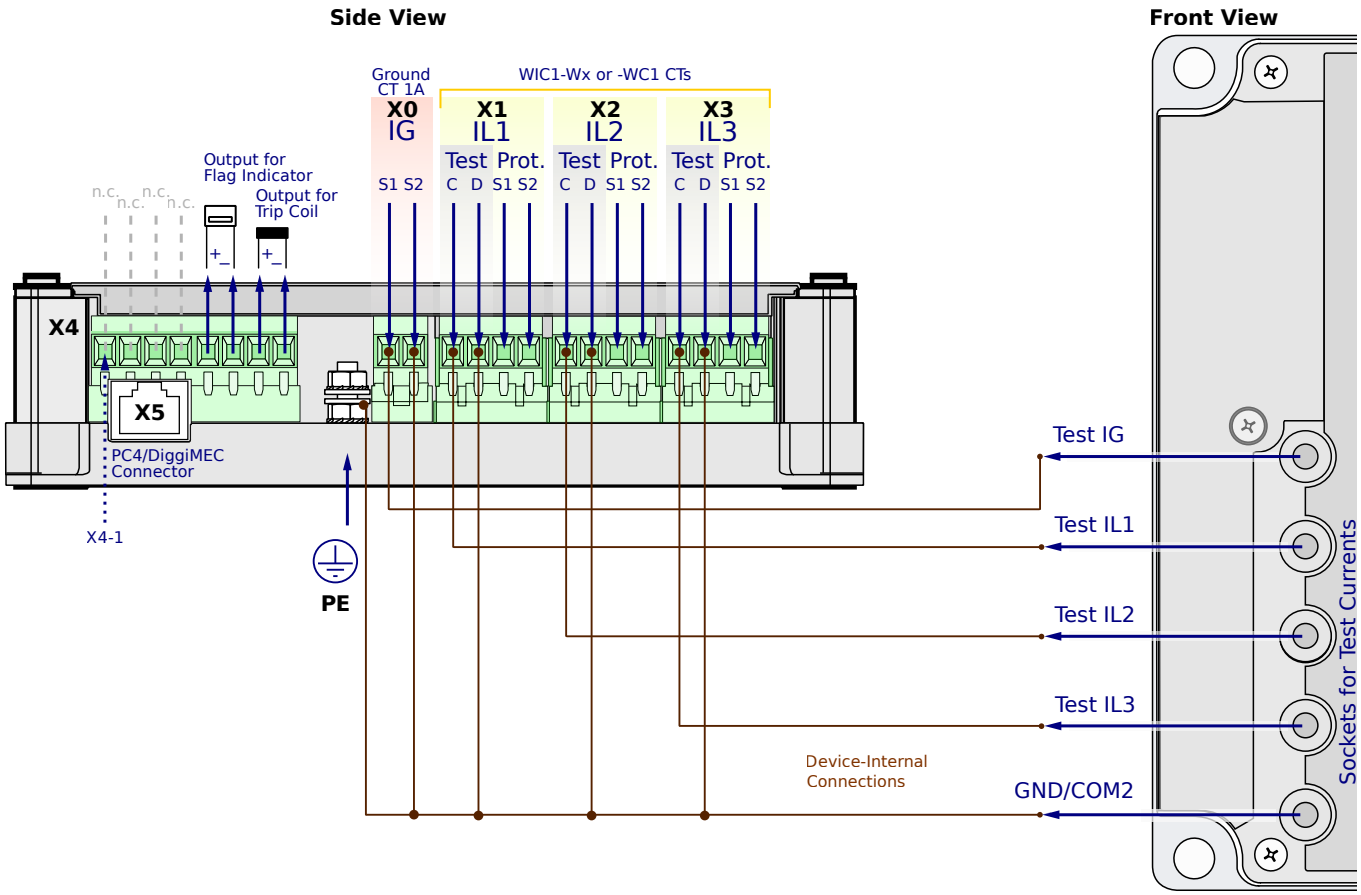


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1AA0

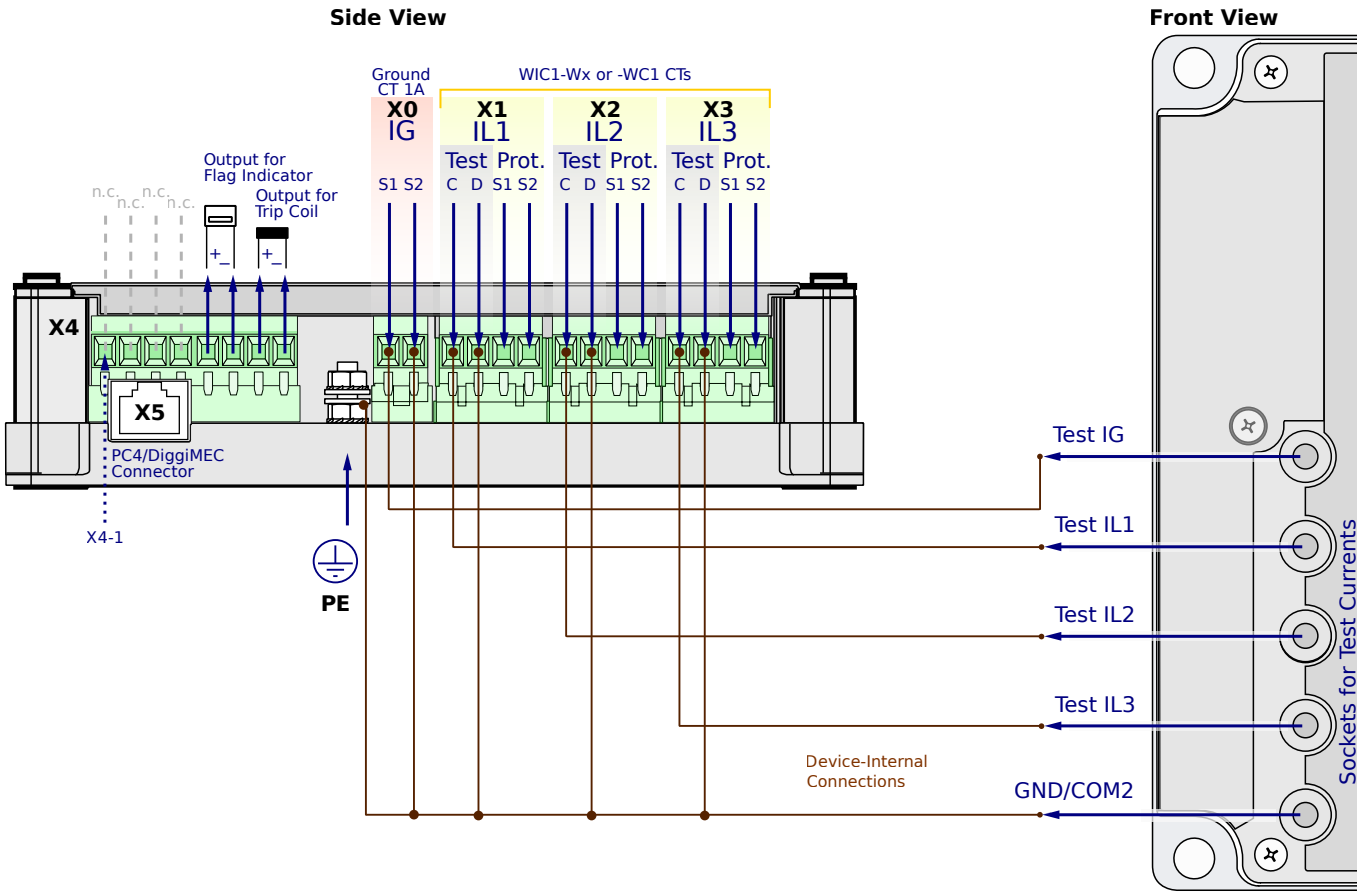


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1AAH

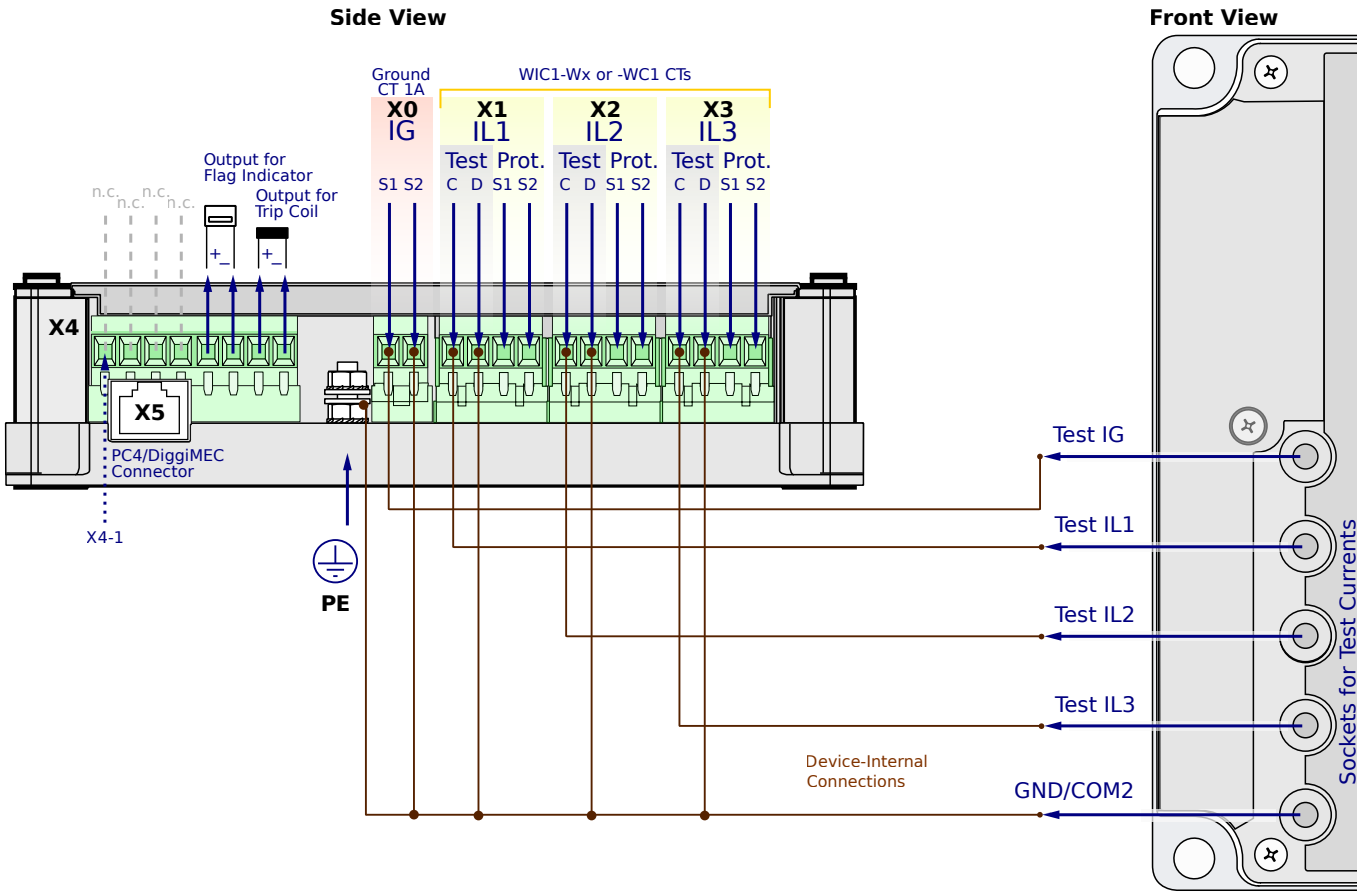


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1PA0

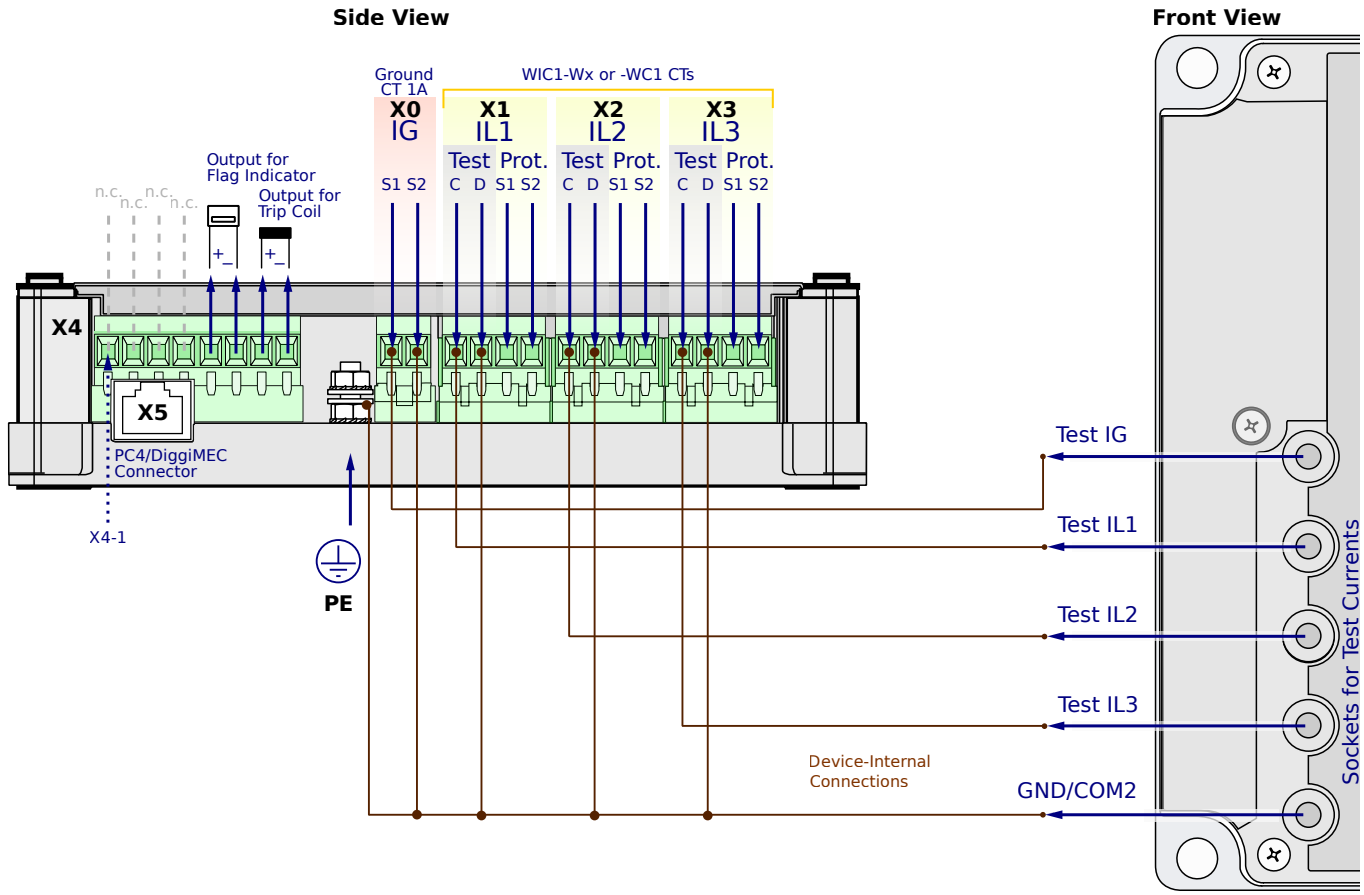


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN1PAH

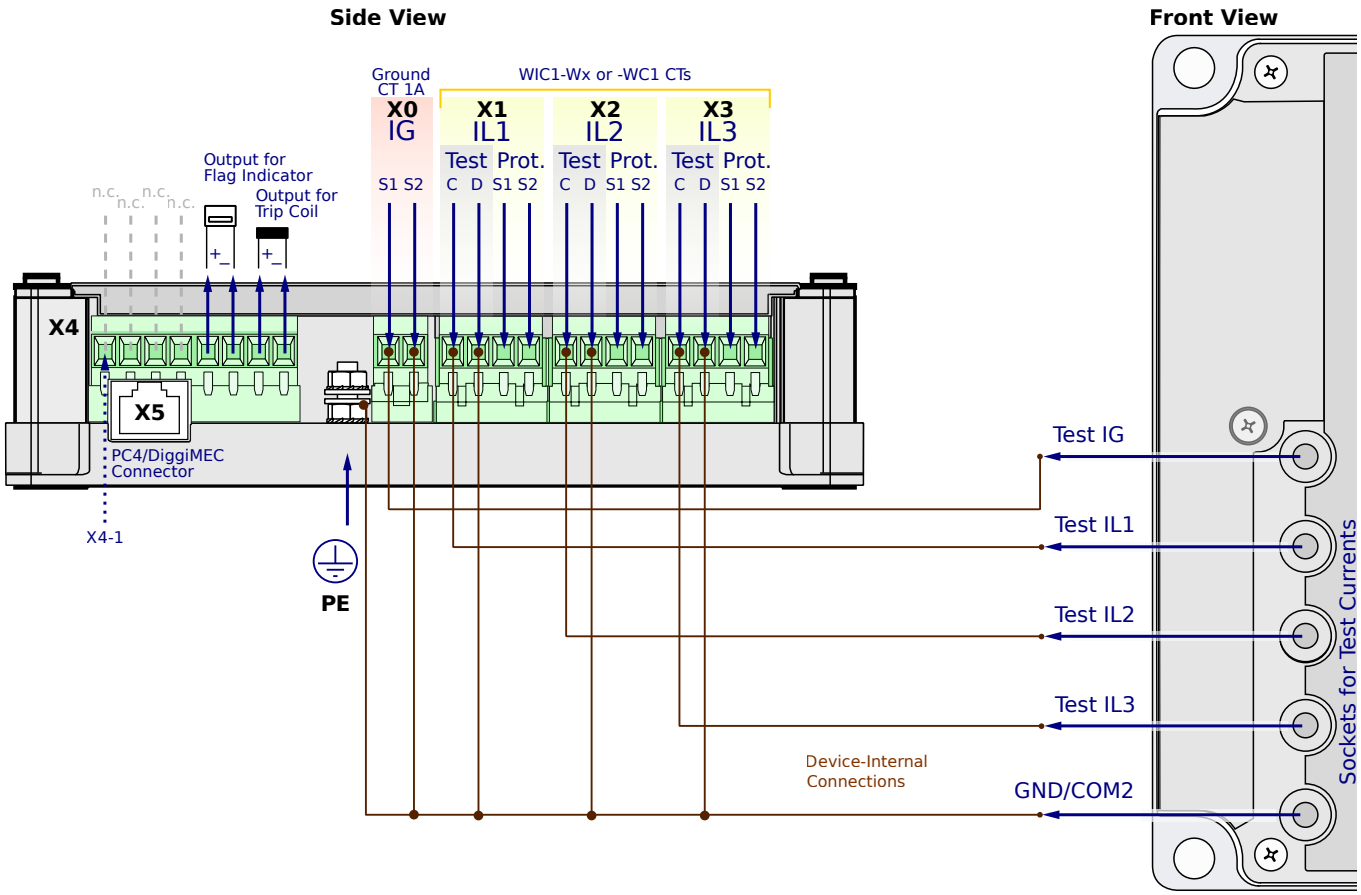


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2SA0

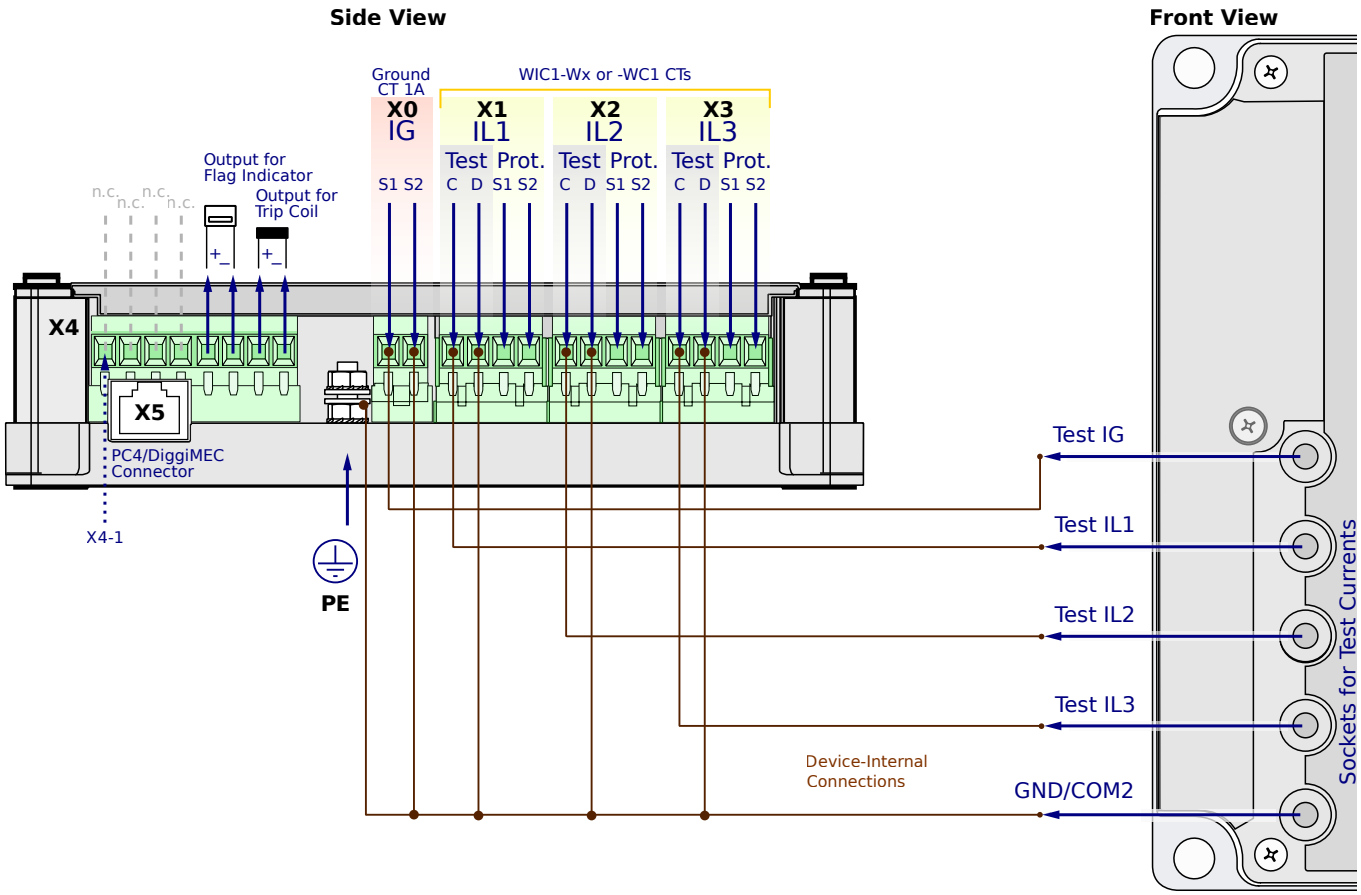


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2SAH

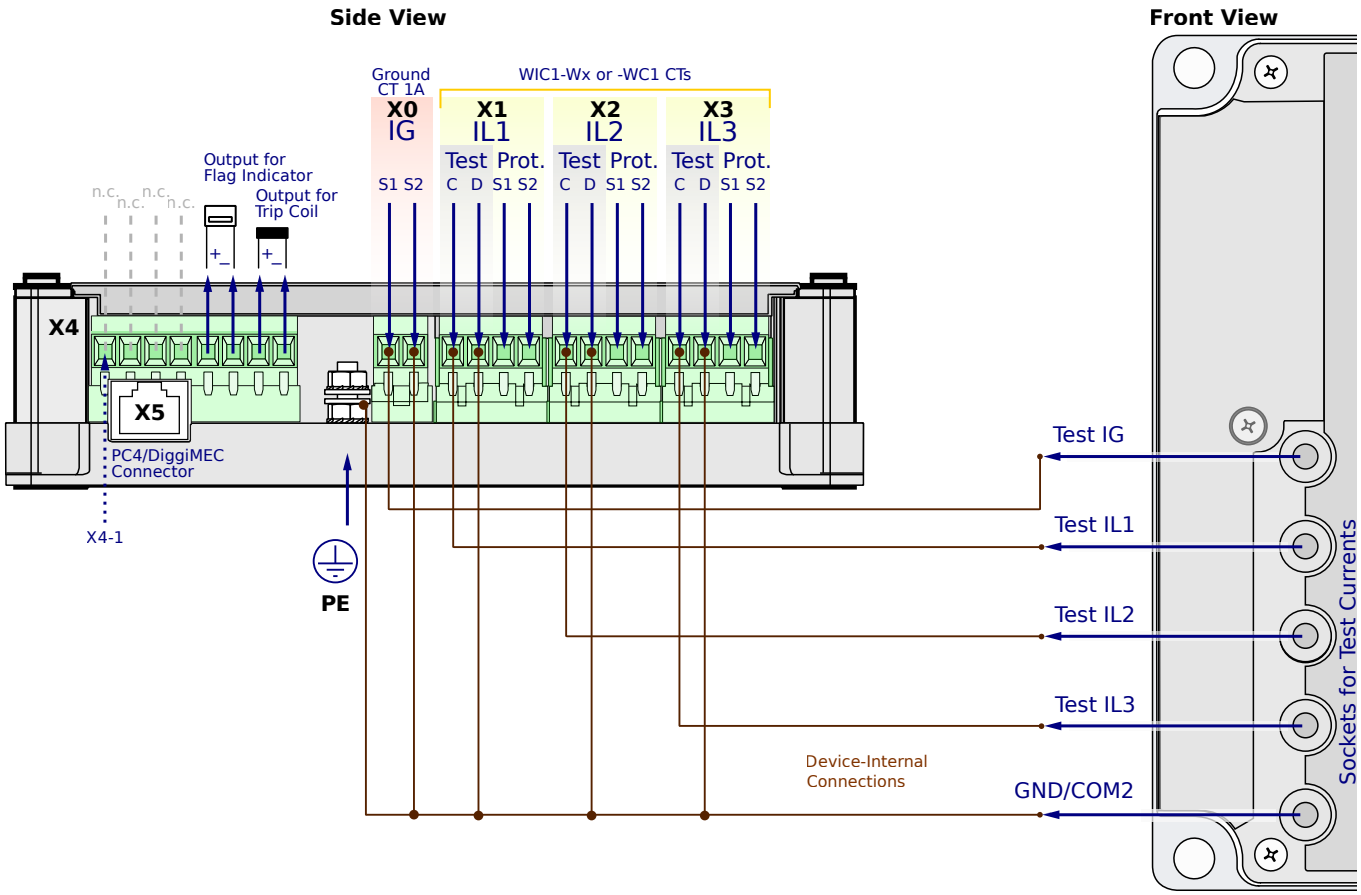


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2AA0

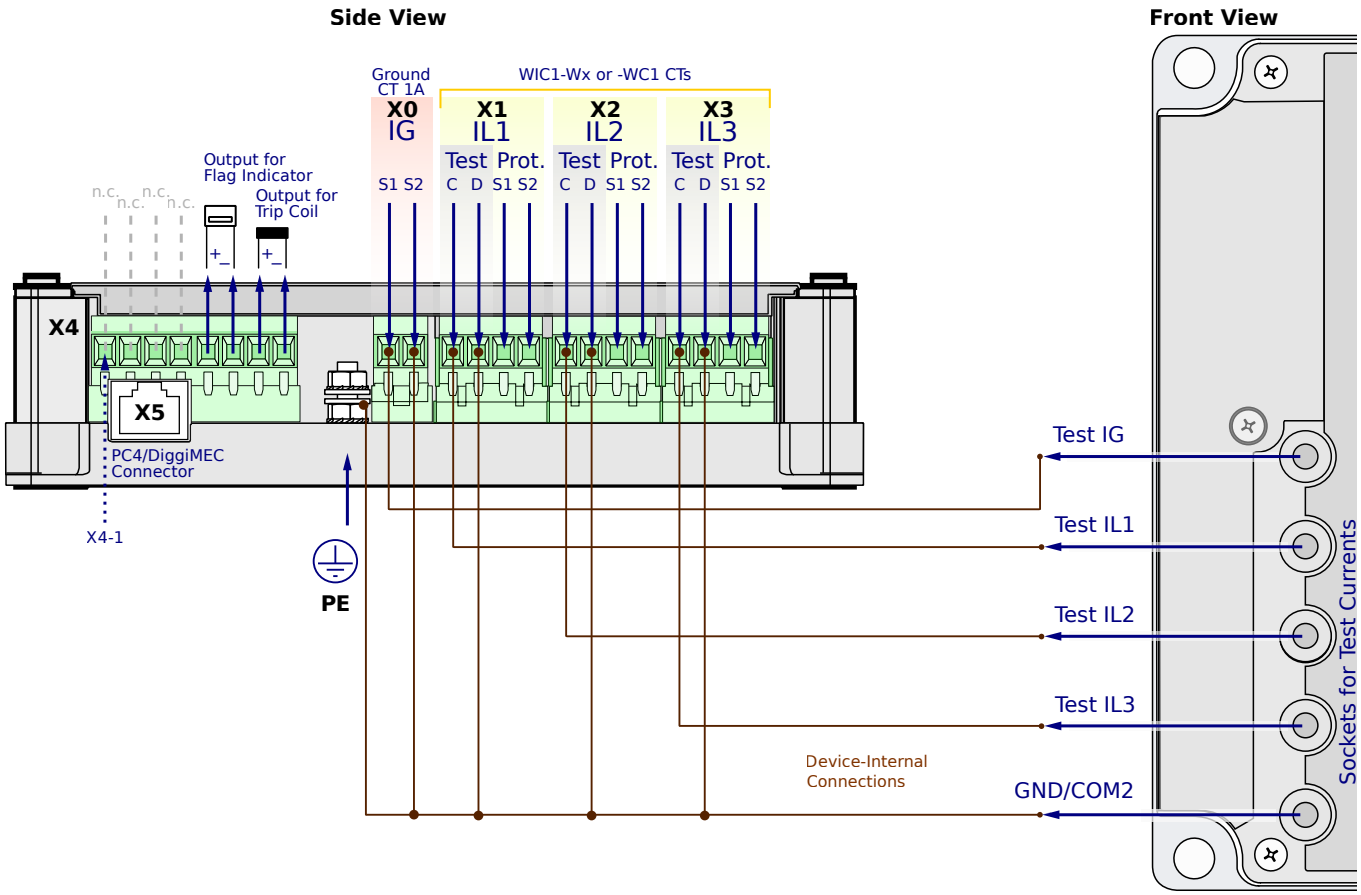


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2AAH

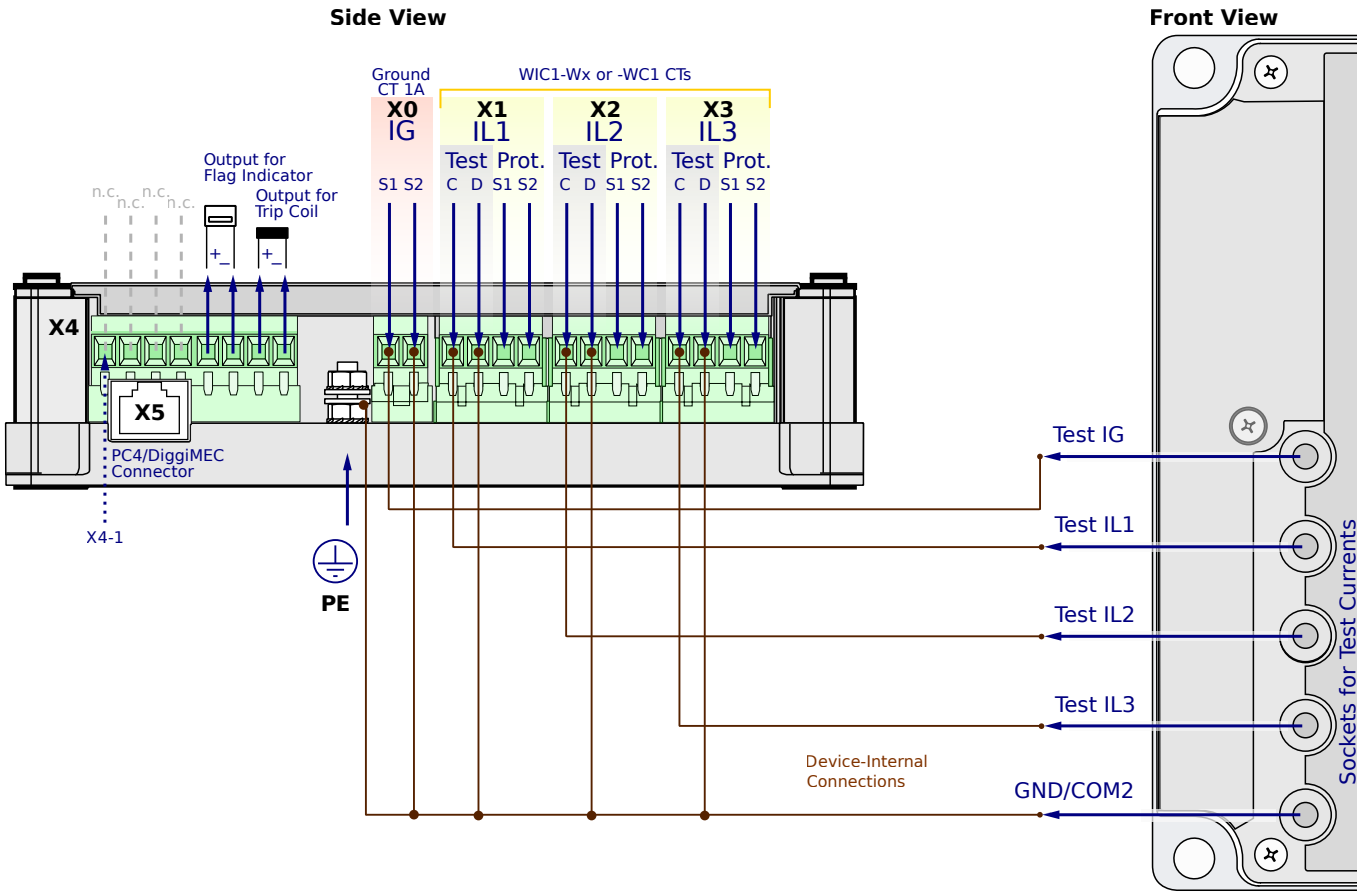


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2PA0

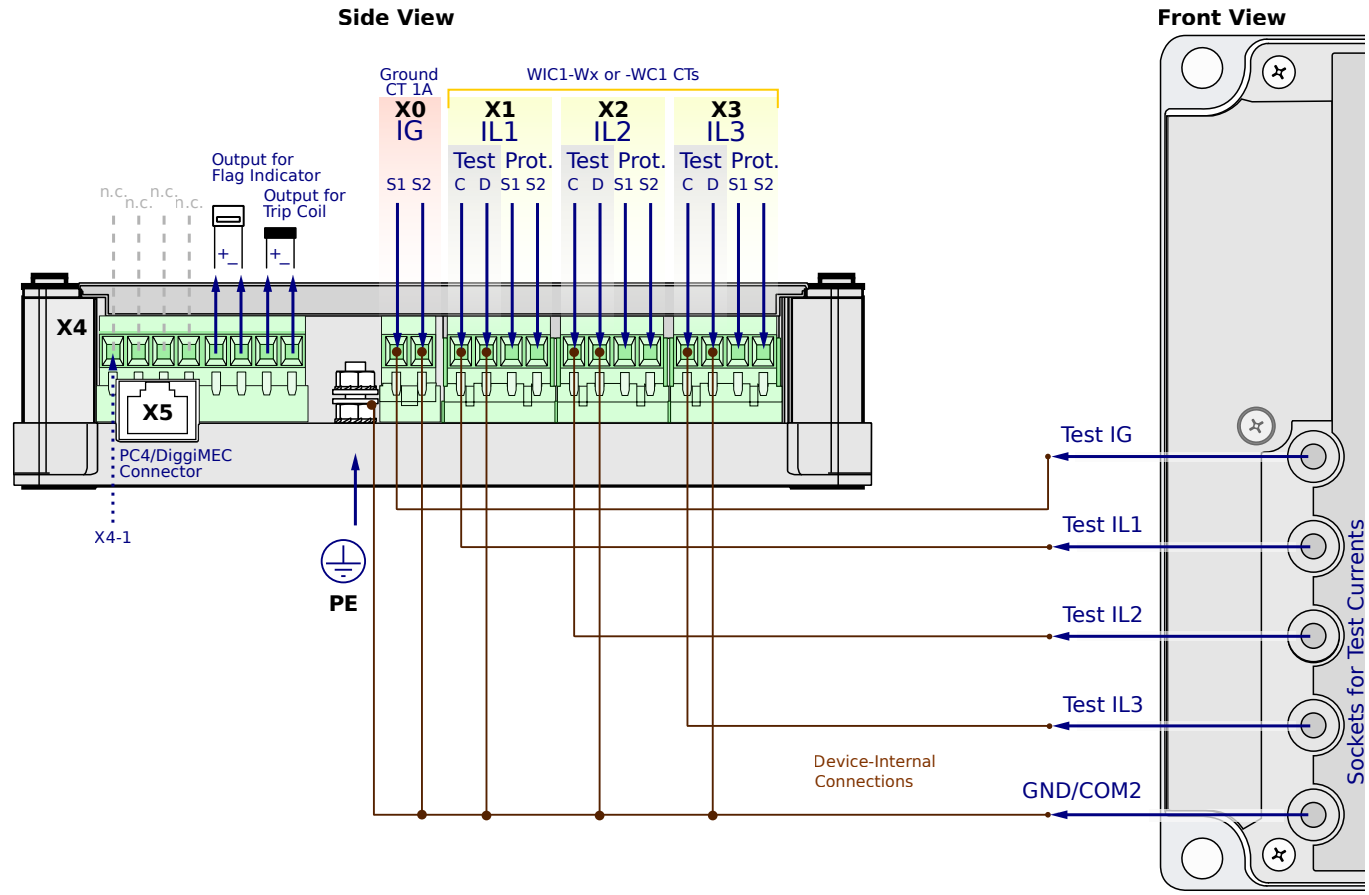


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CN2PAH

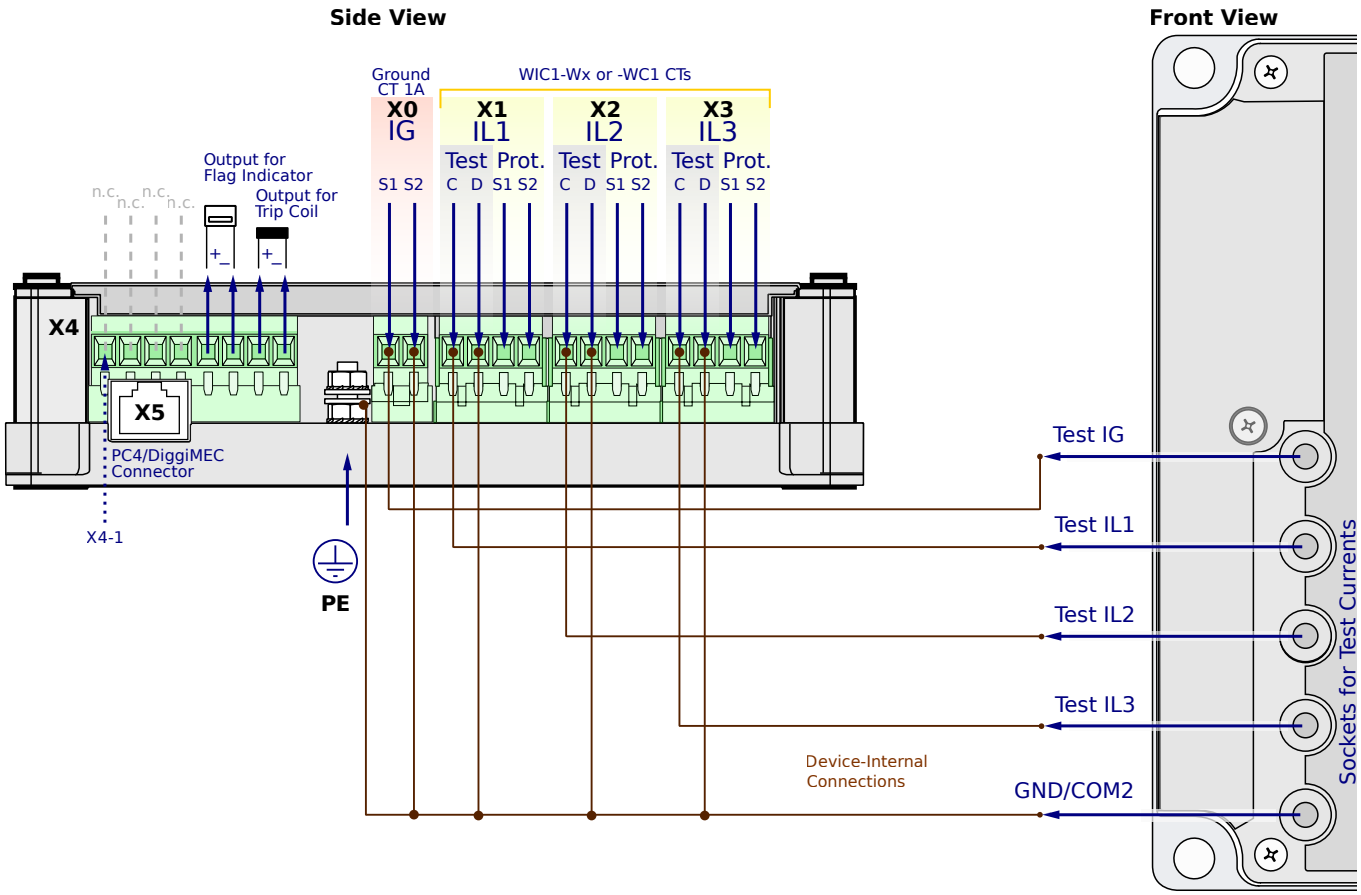


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1SA0

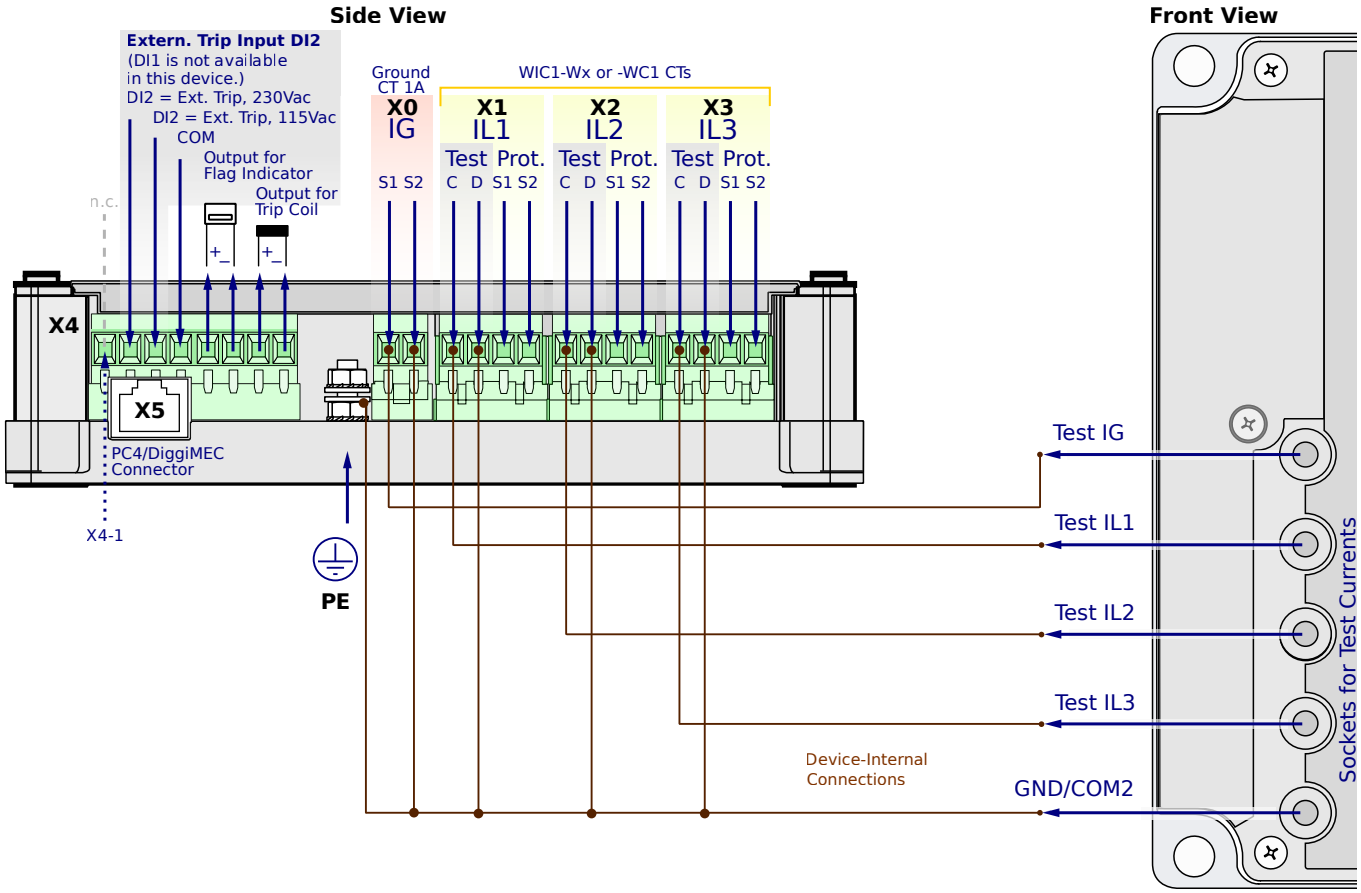


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1SAH

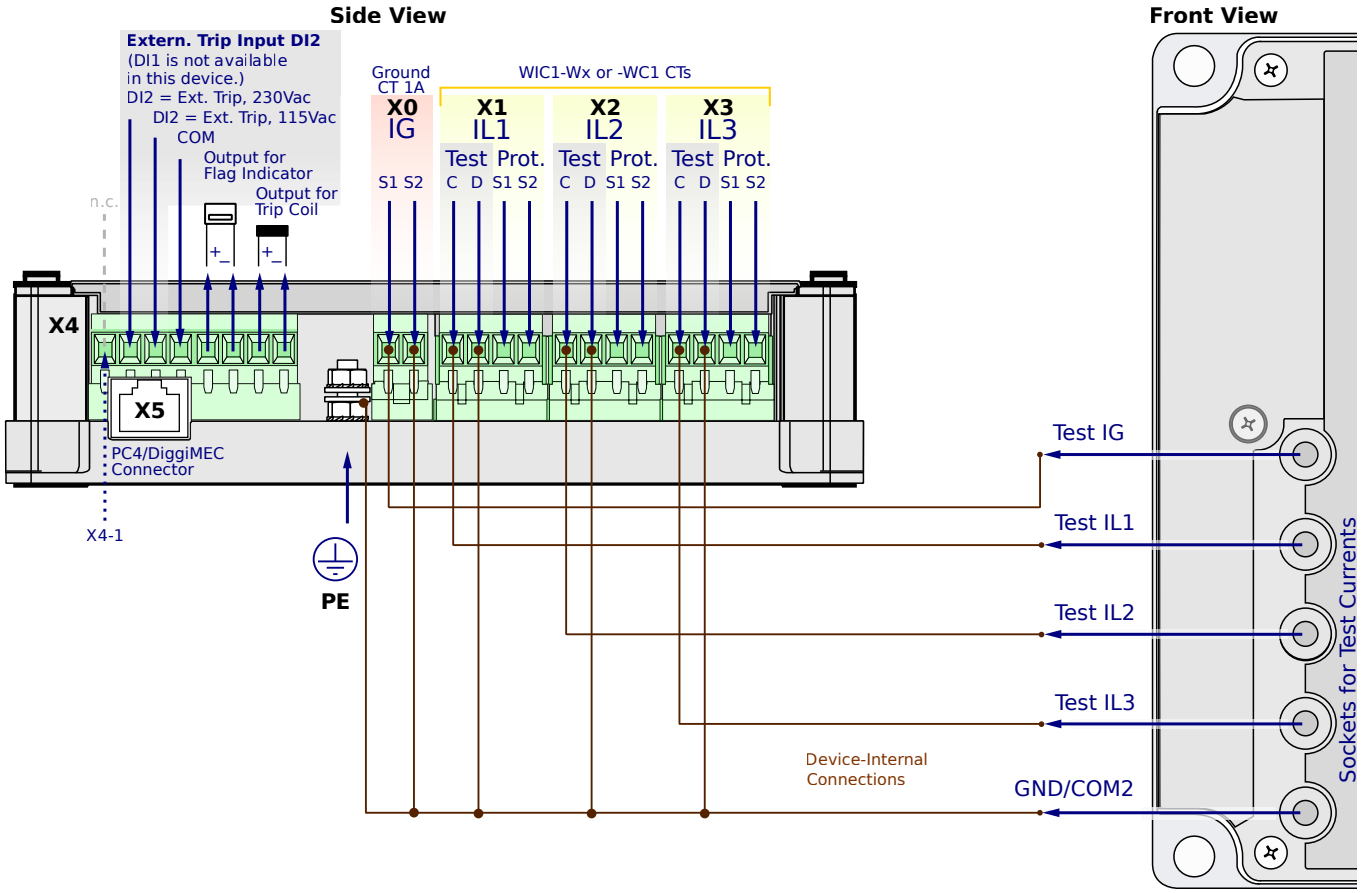


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1AA0

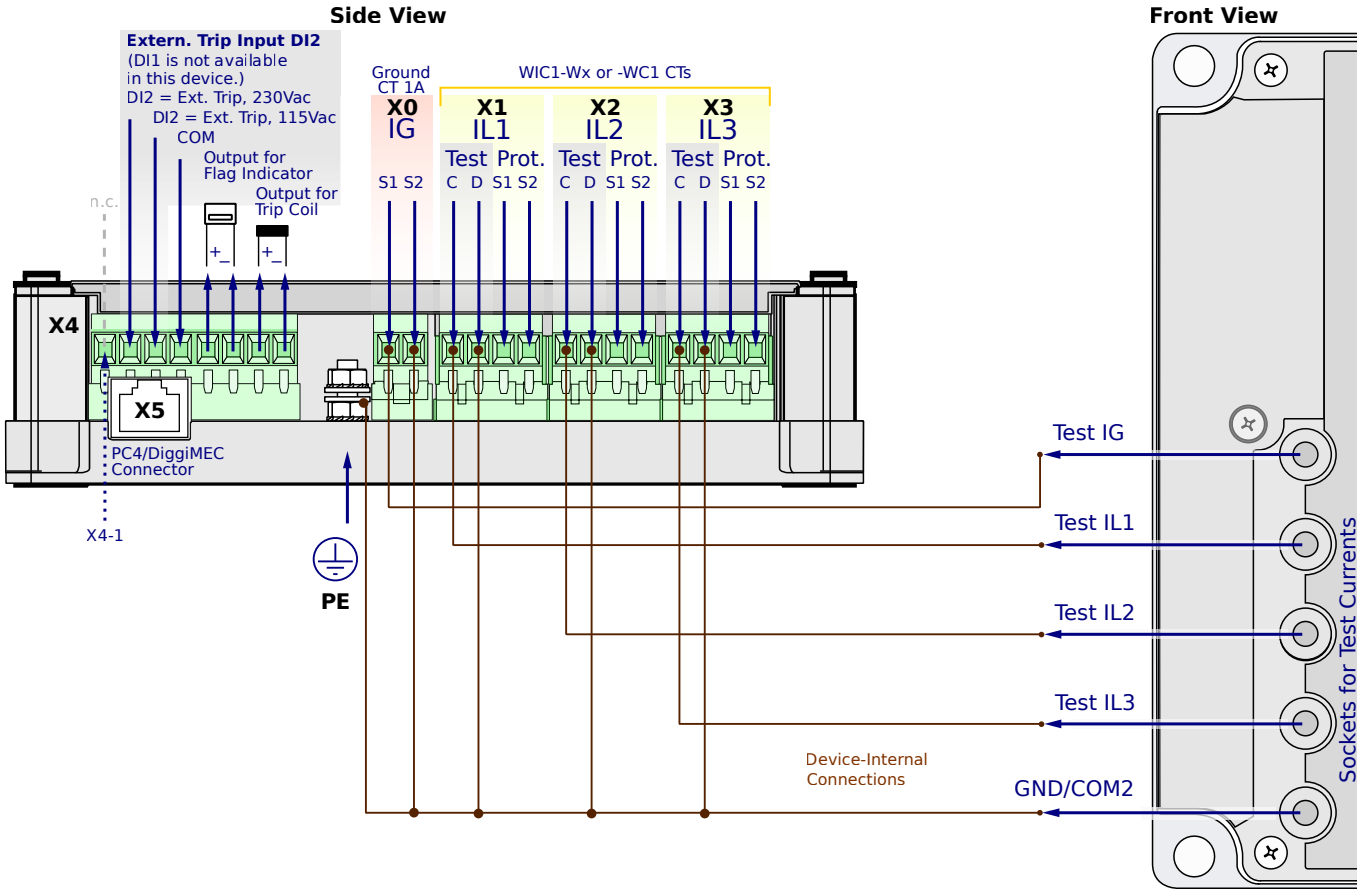


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1AAH

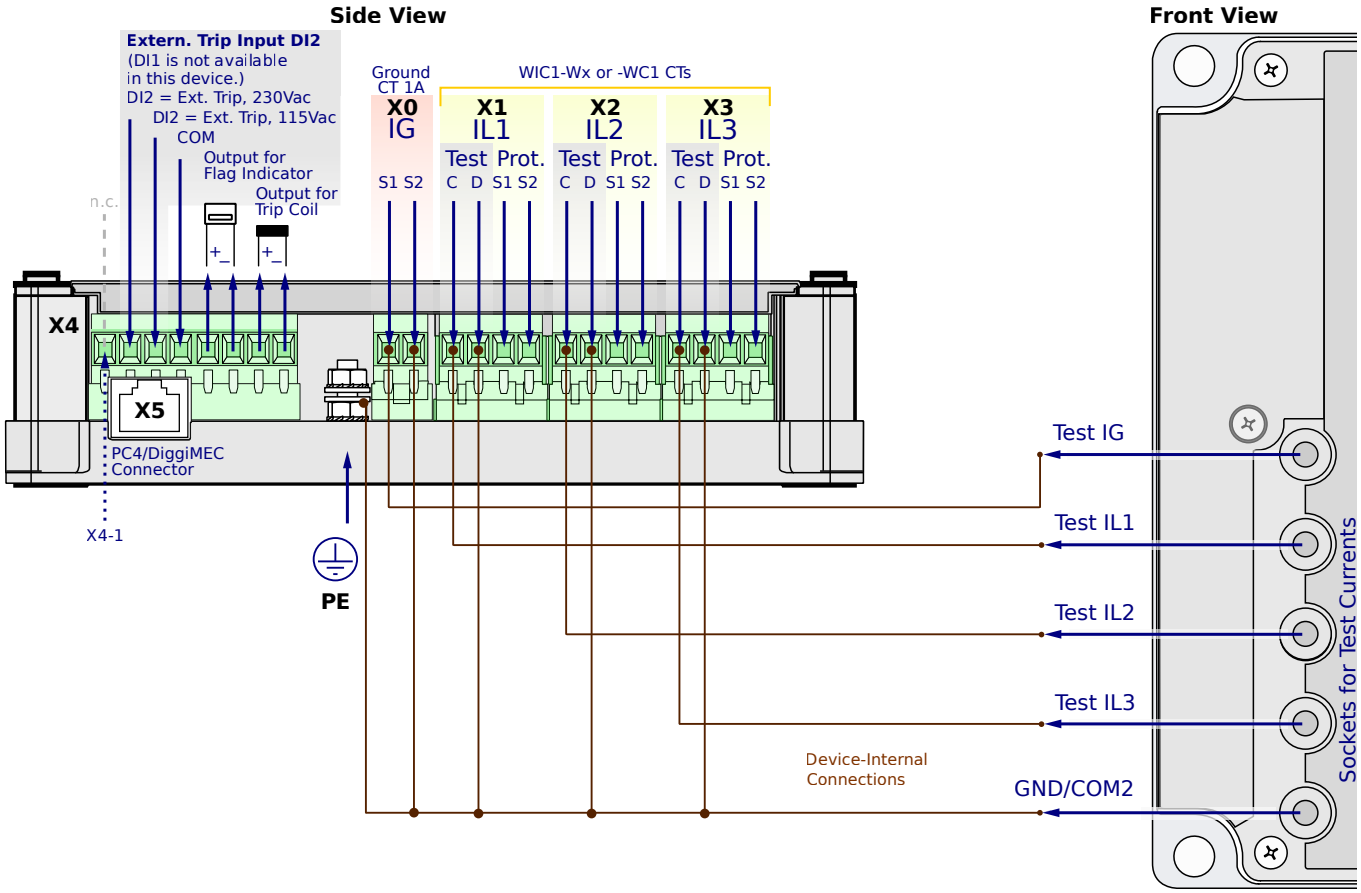


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1PA0

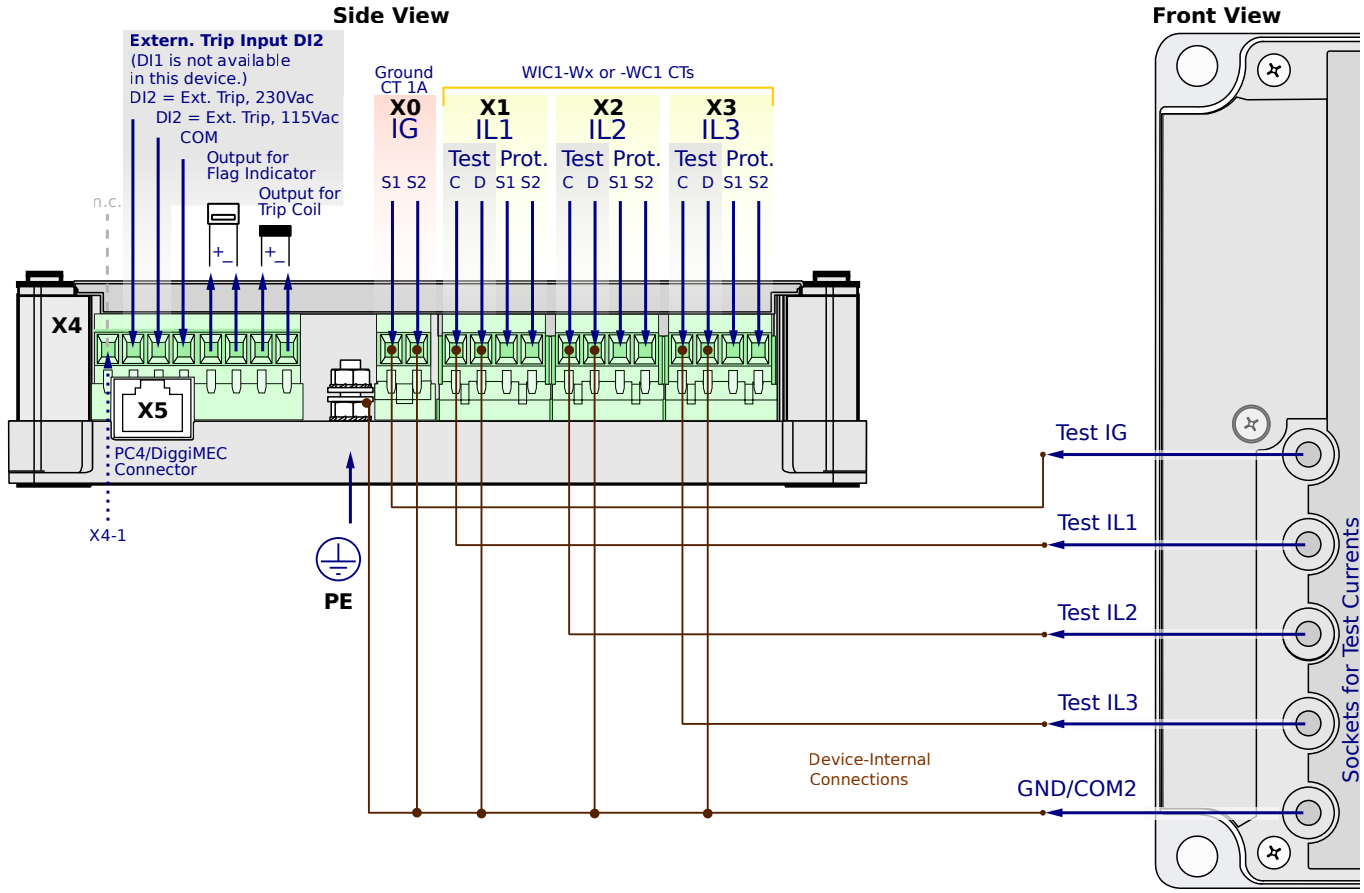


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF1PAH

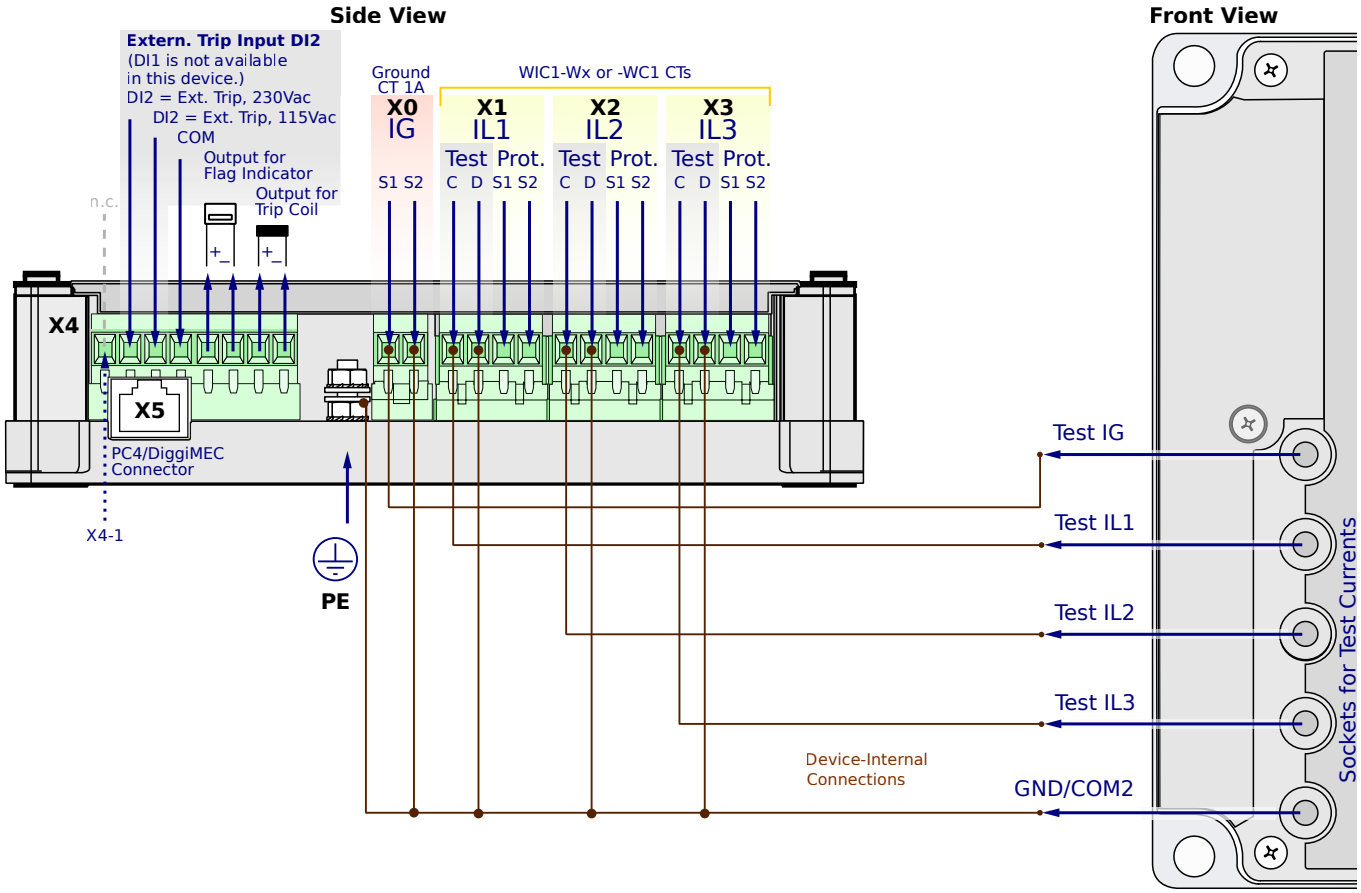


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2SA0

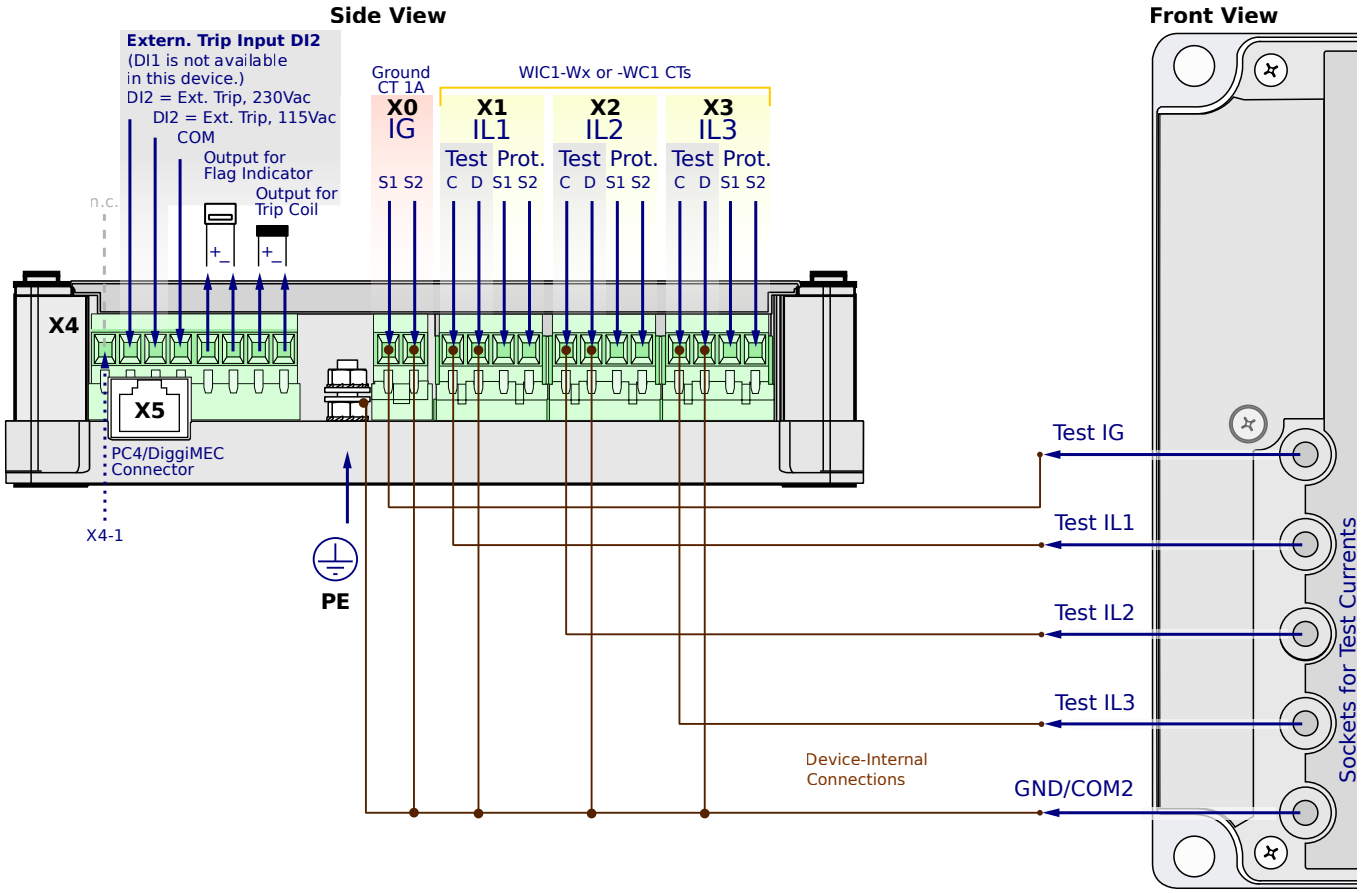


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2SAH

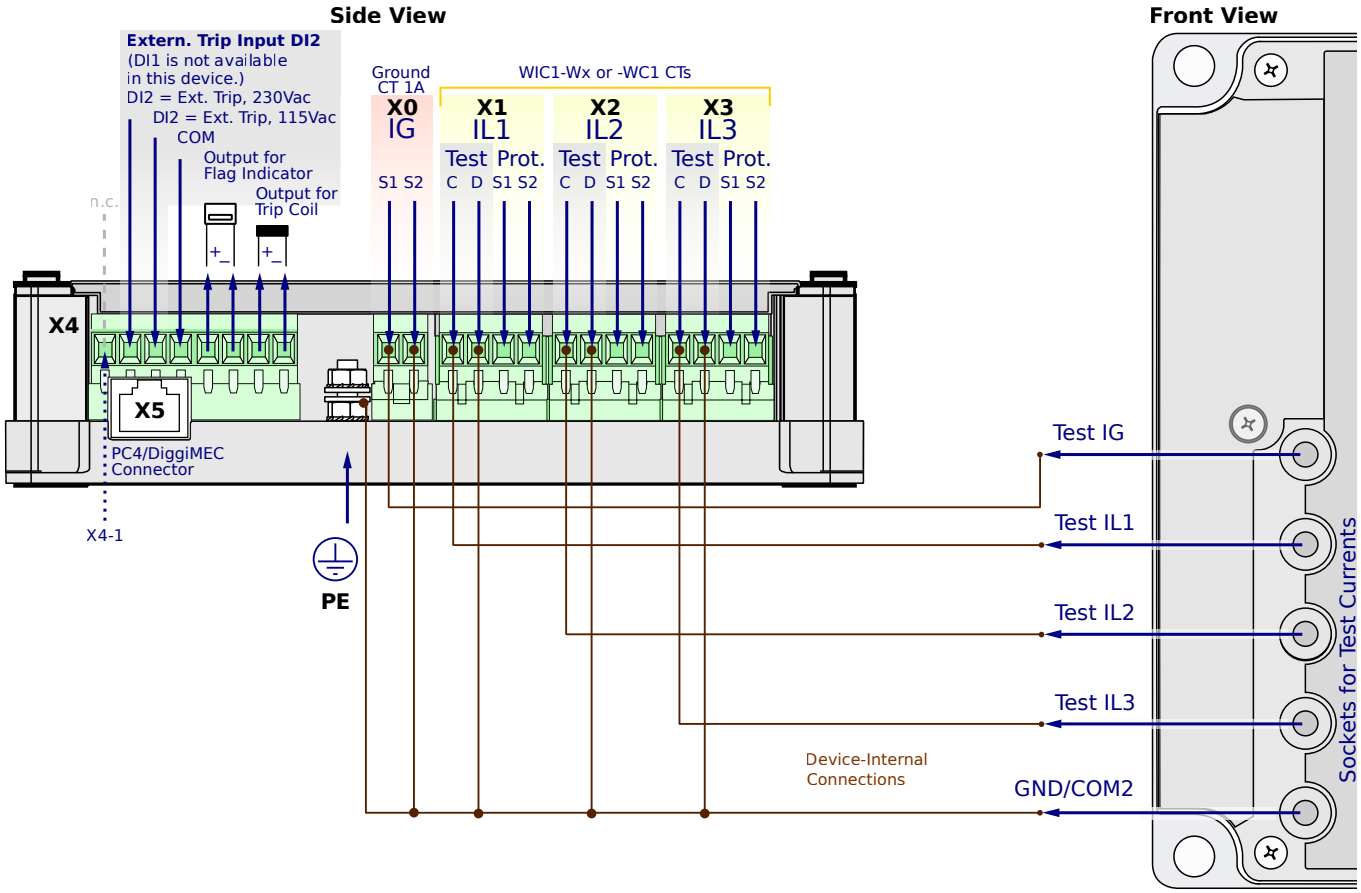


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2AA0

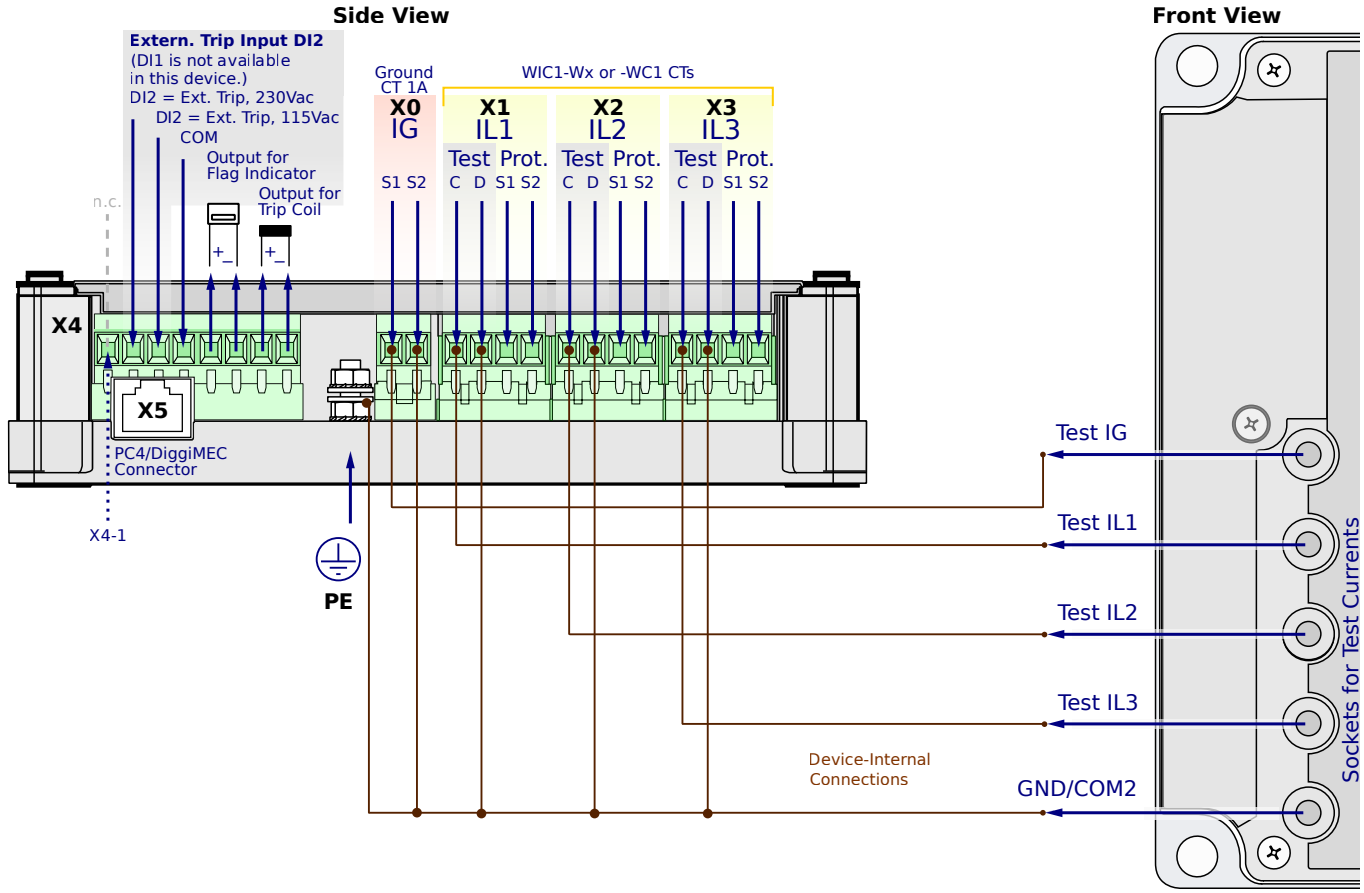


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2AAH

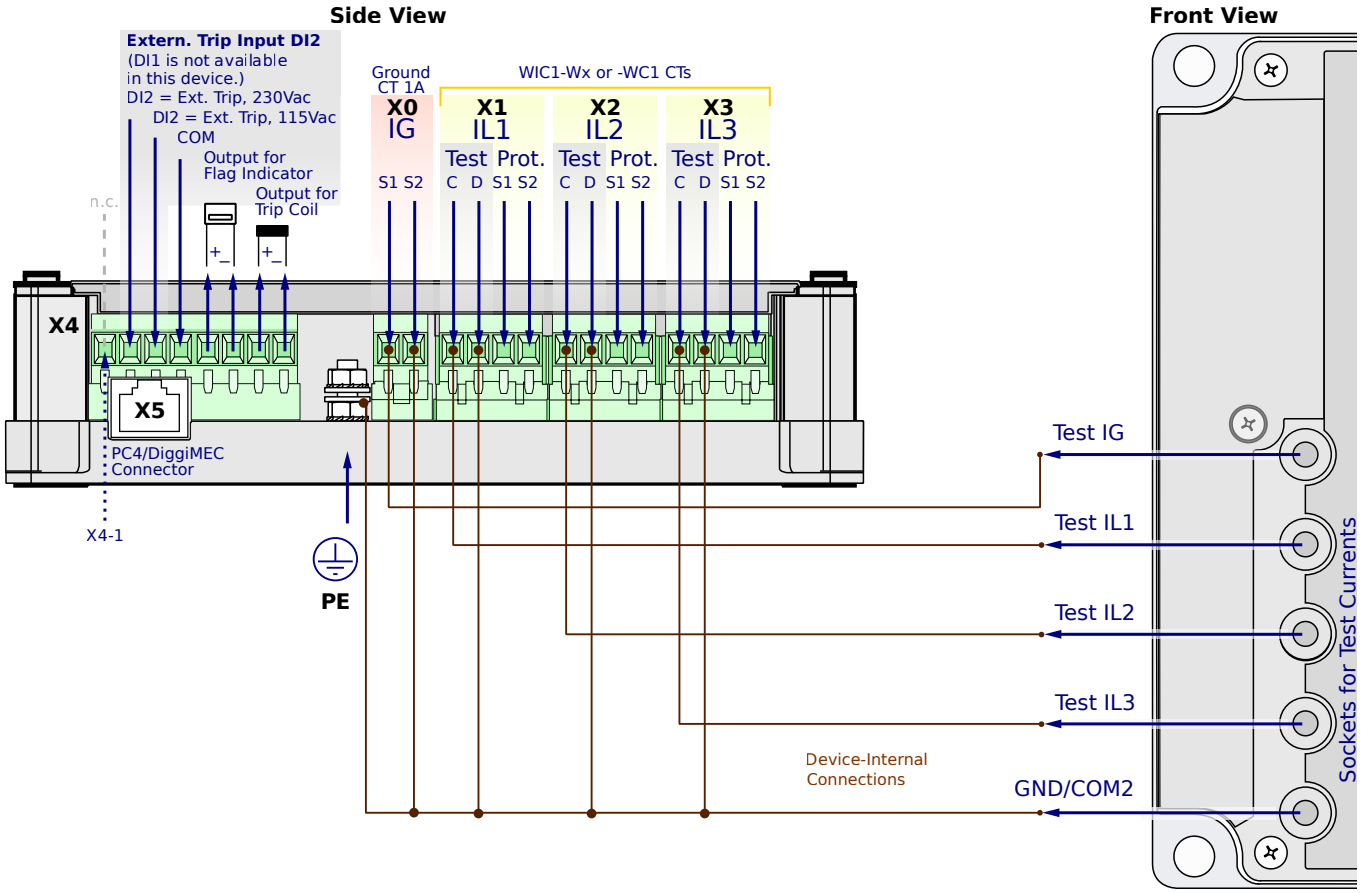


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2PA0

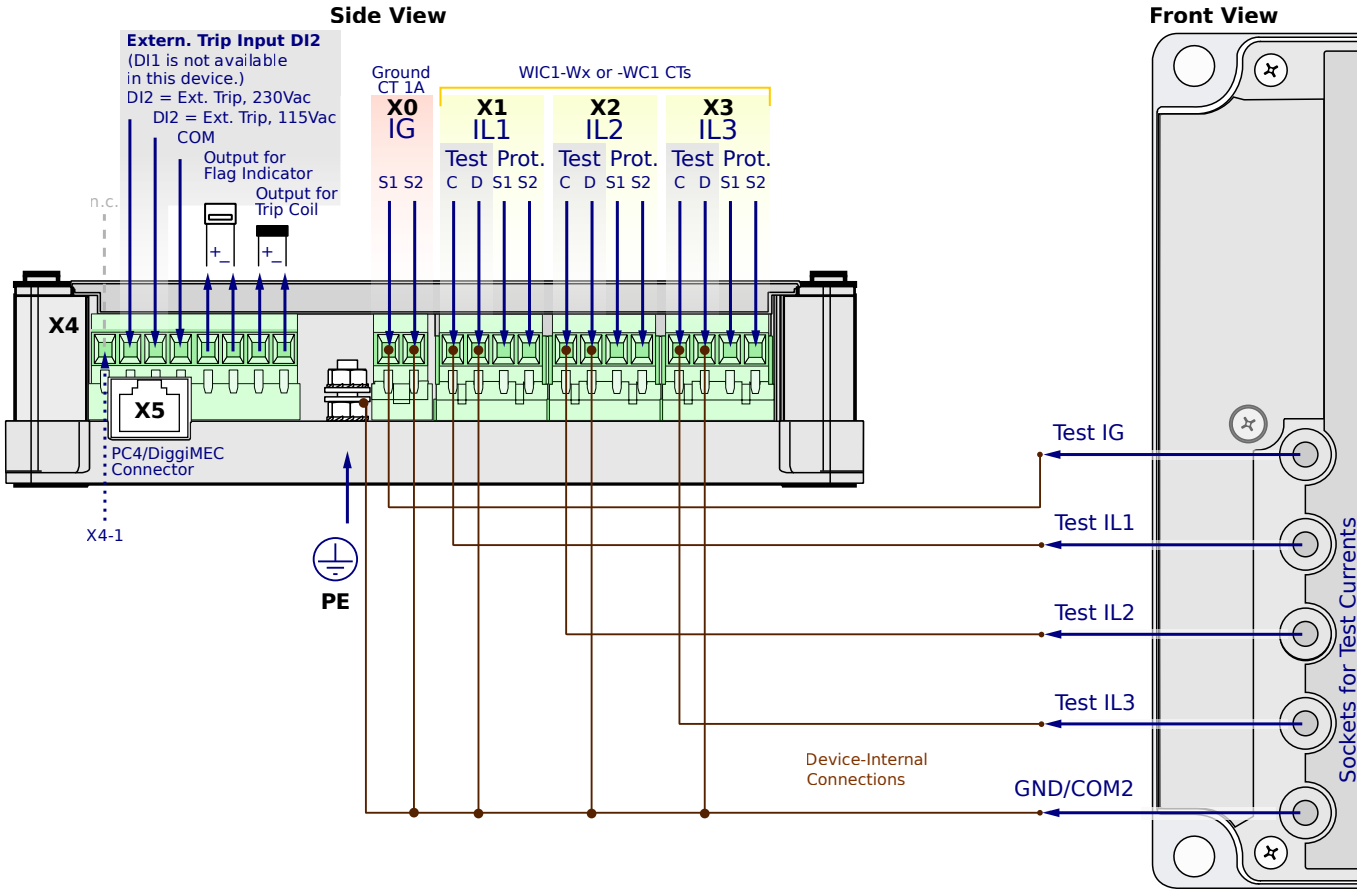


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CF2PAH

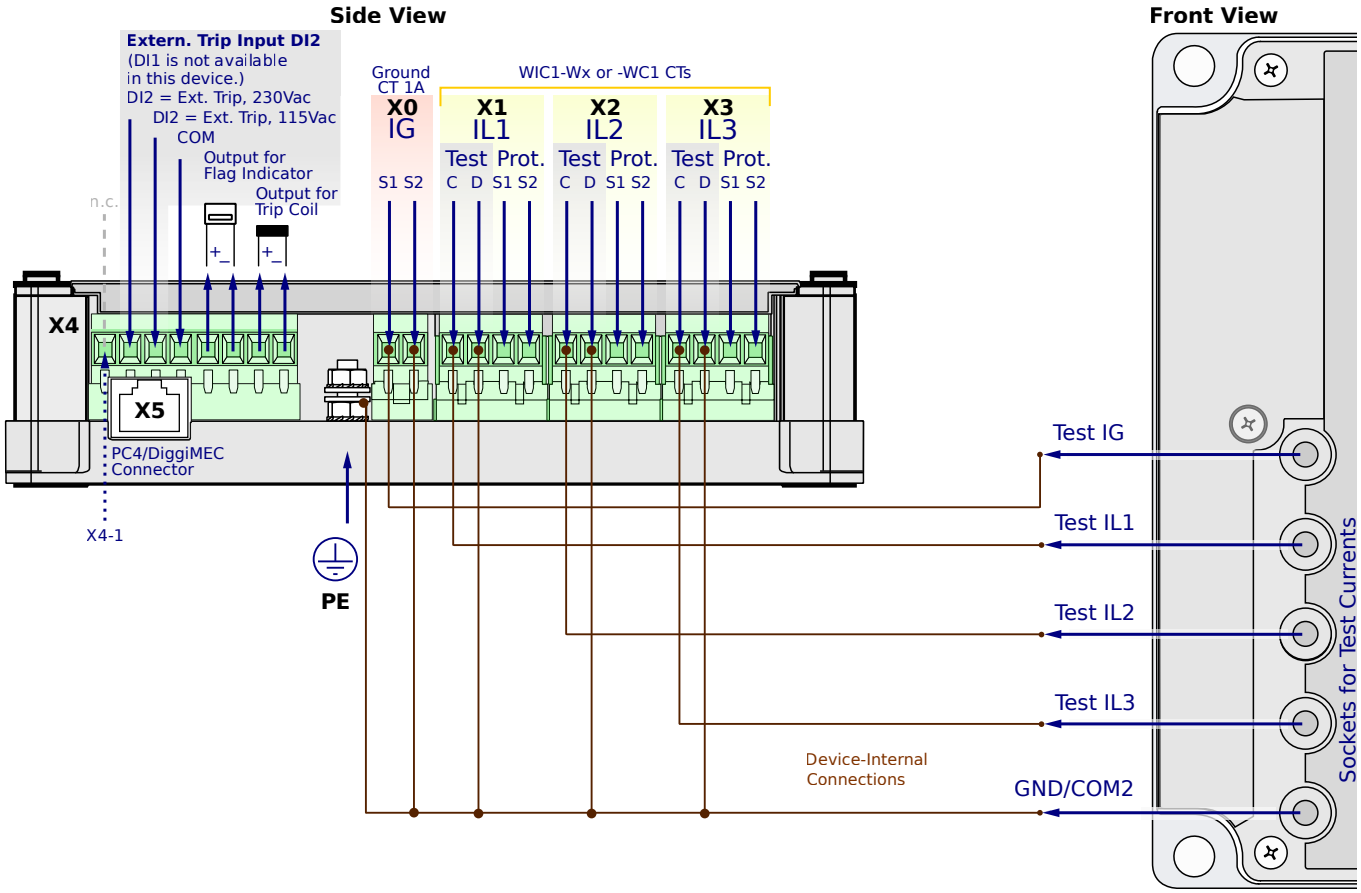


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1SA0

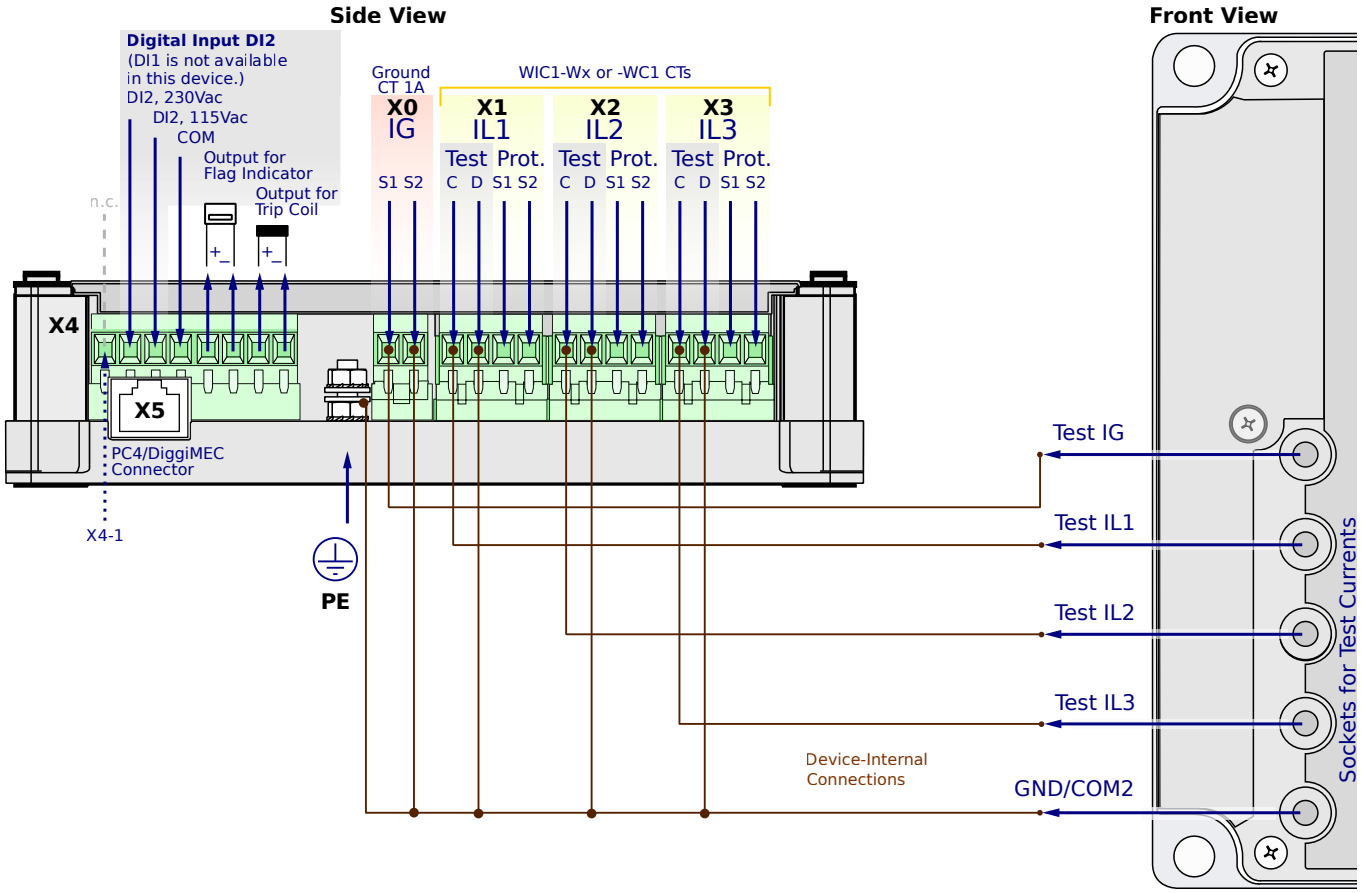


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1SAH

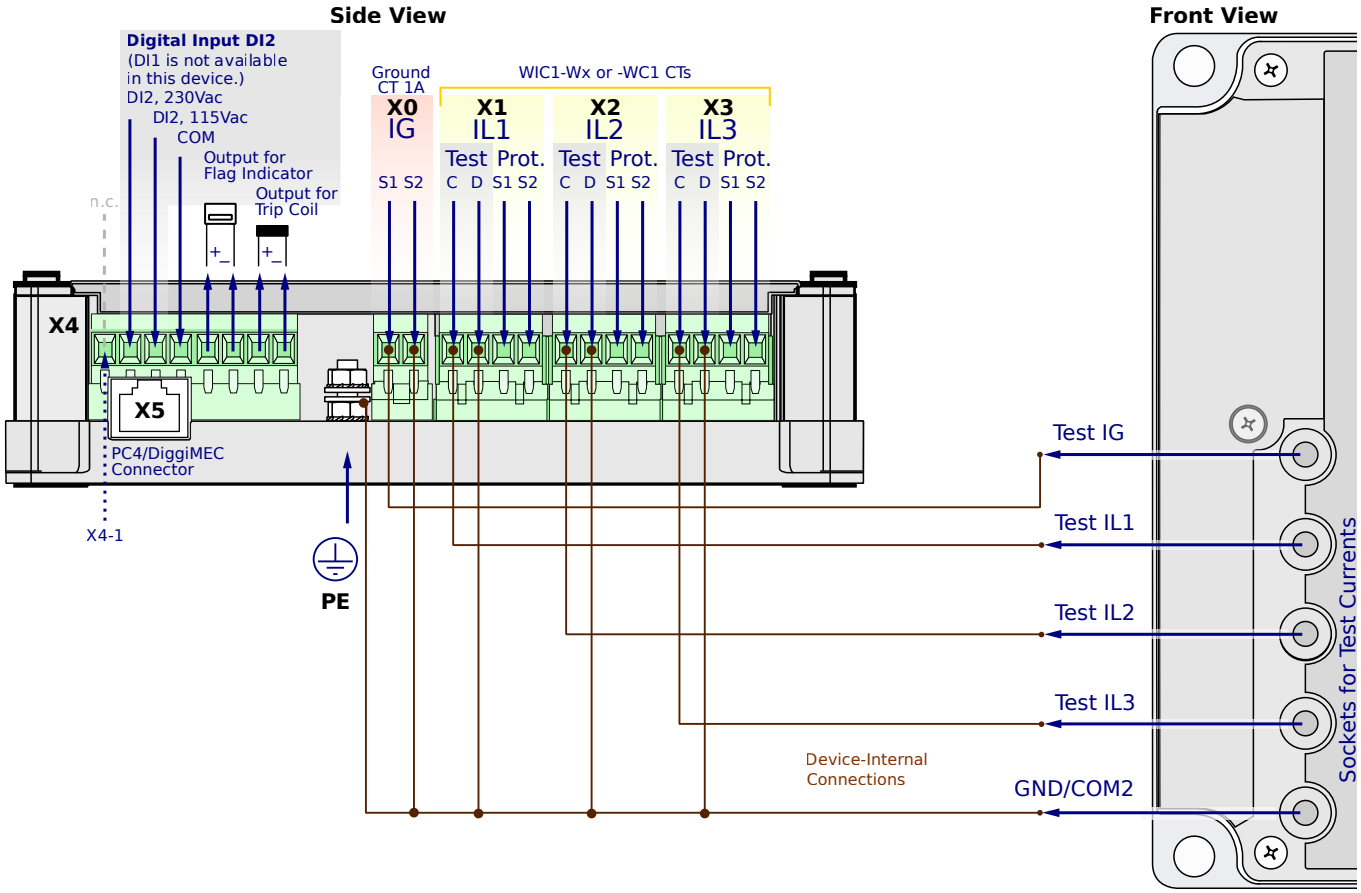


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1AA0

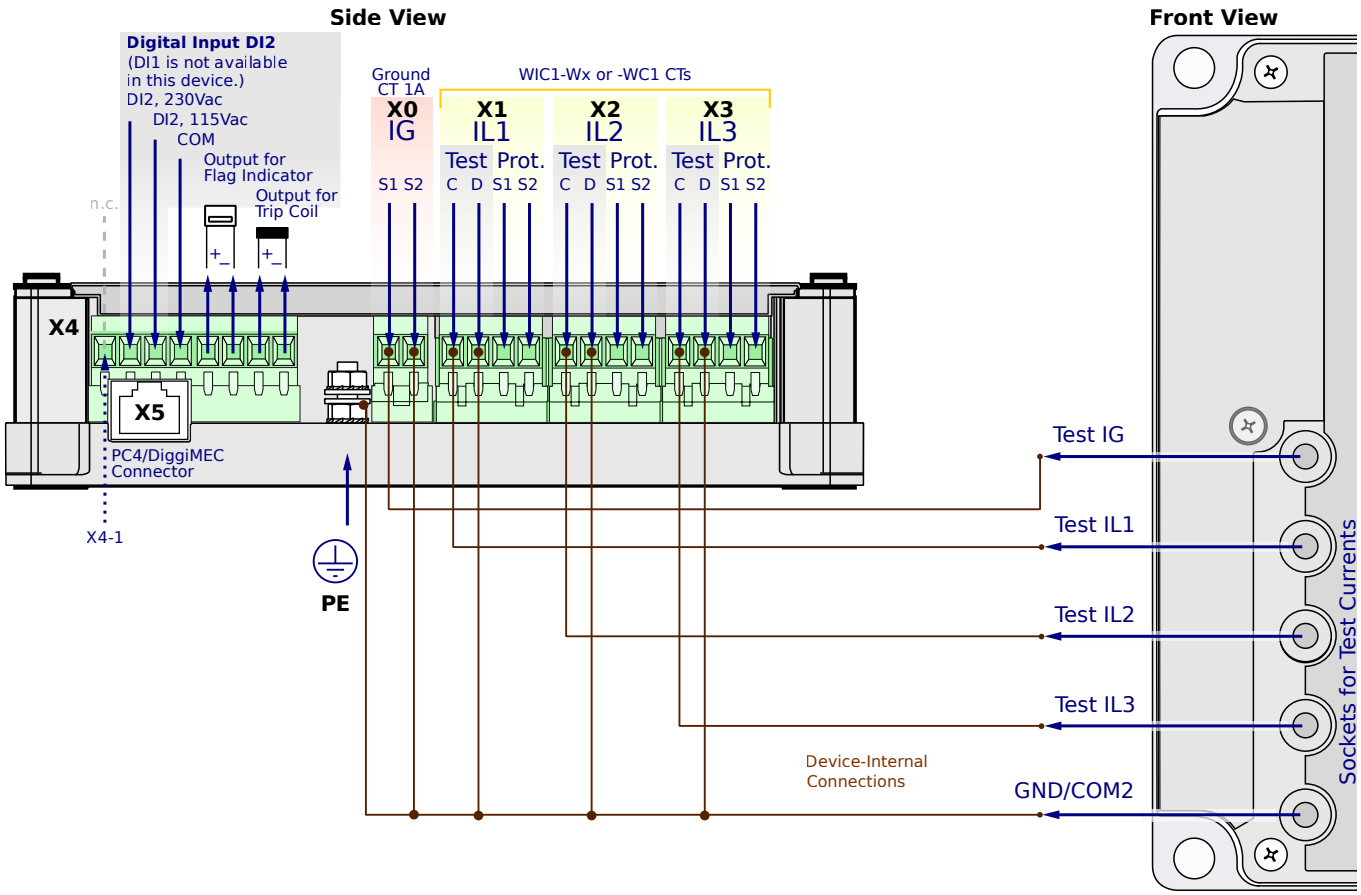


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1AAH

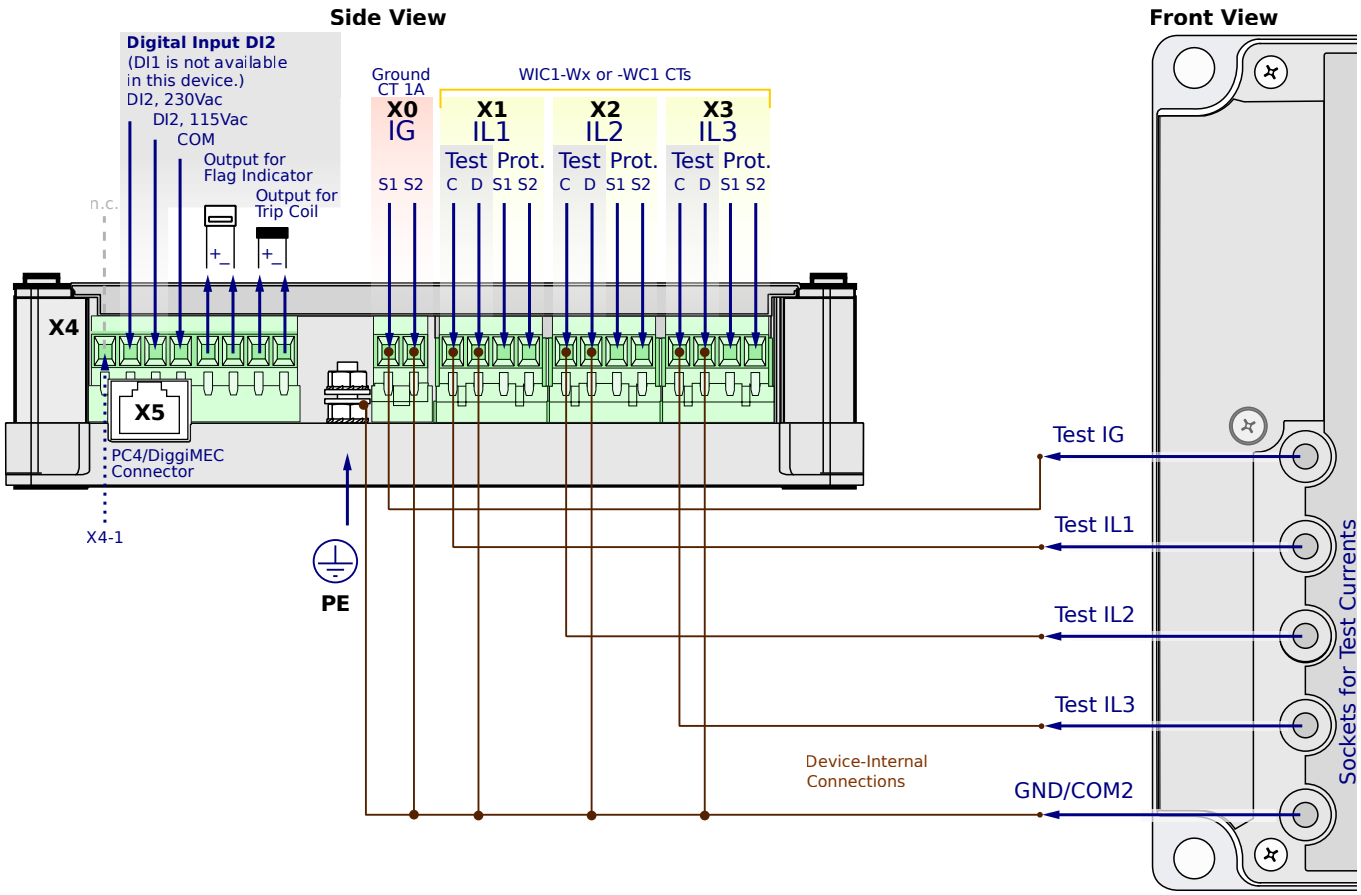


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1PA0

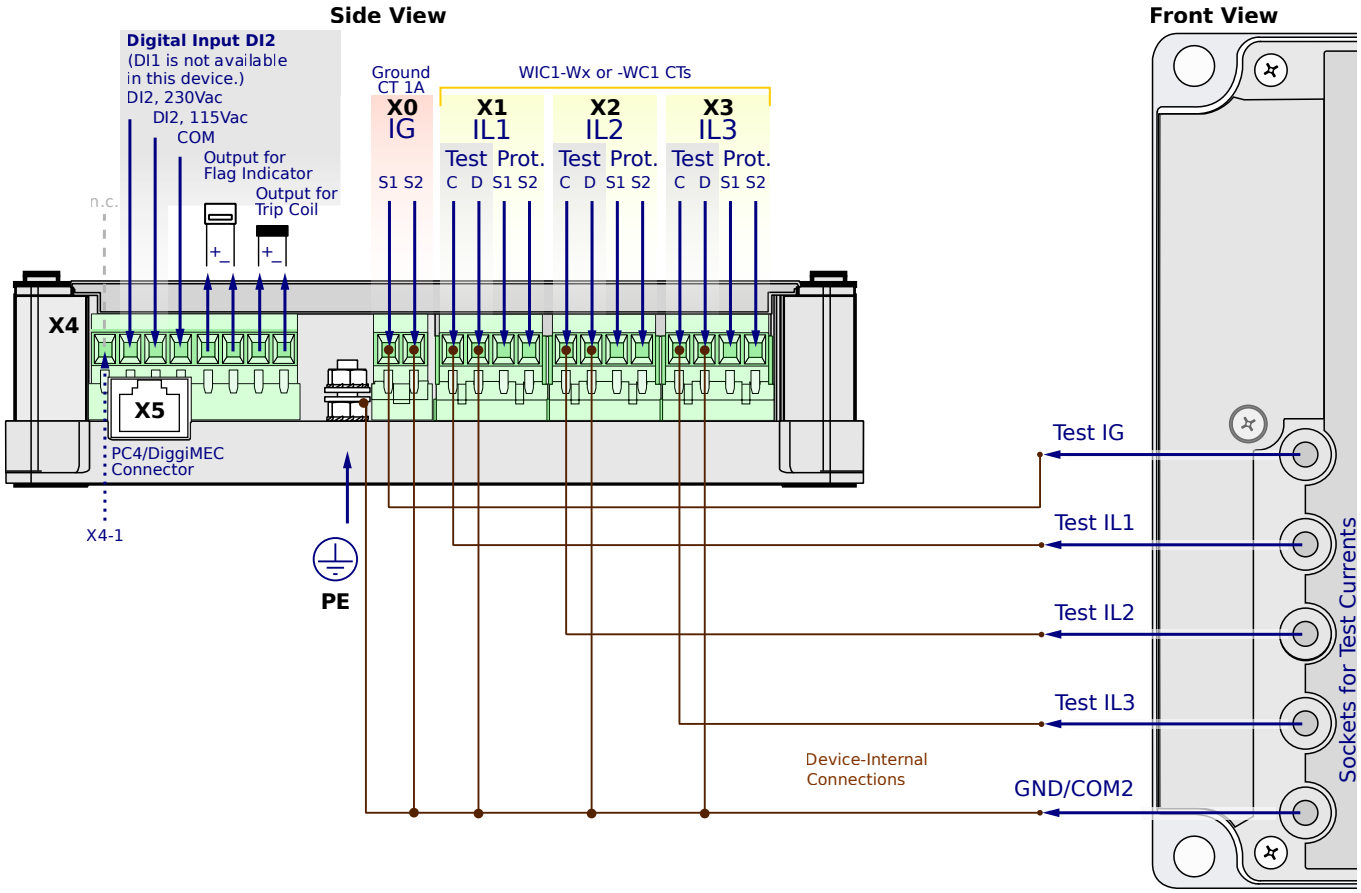


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC1PAH

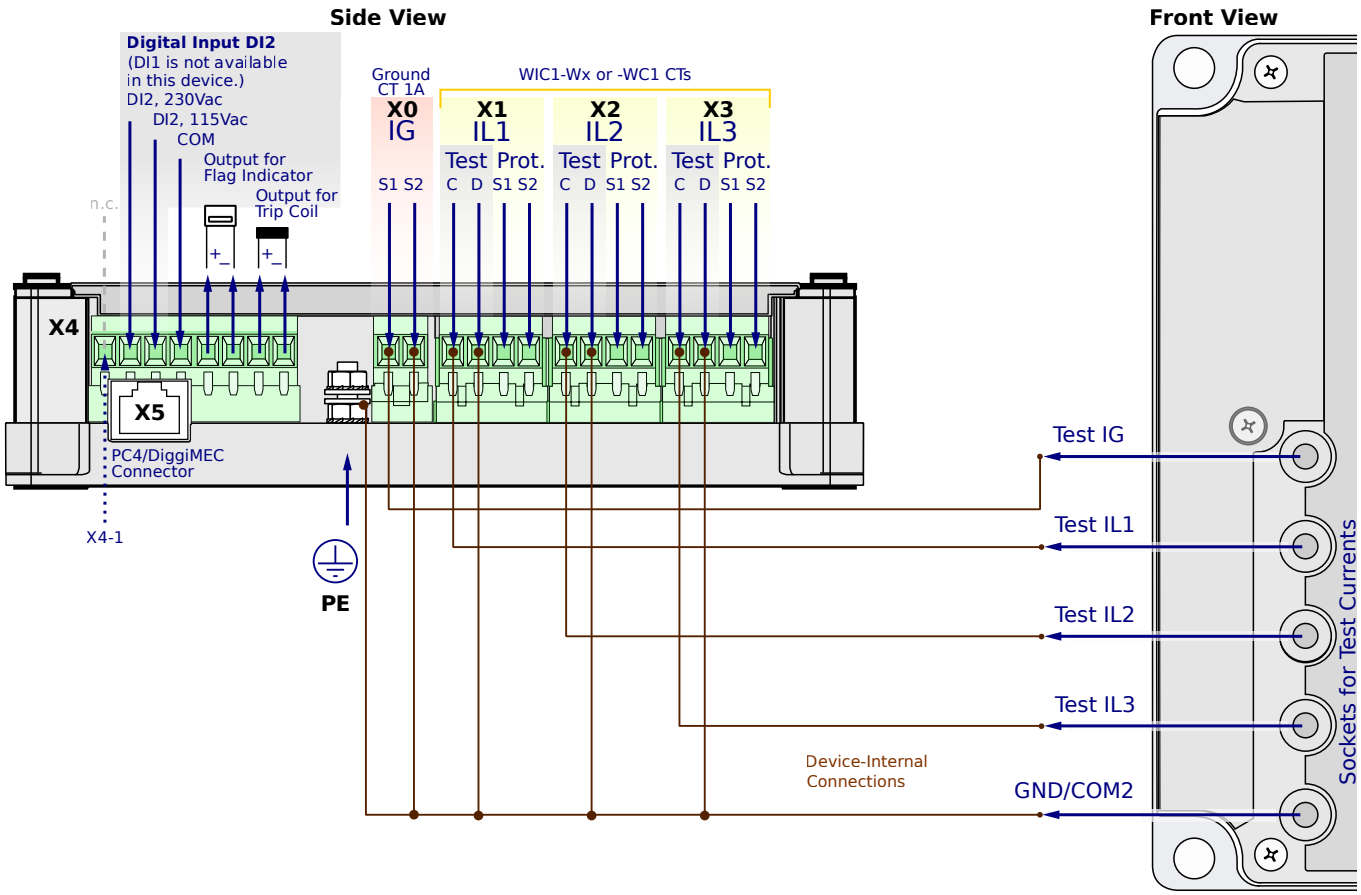


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2SA0

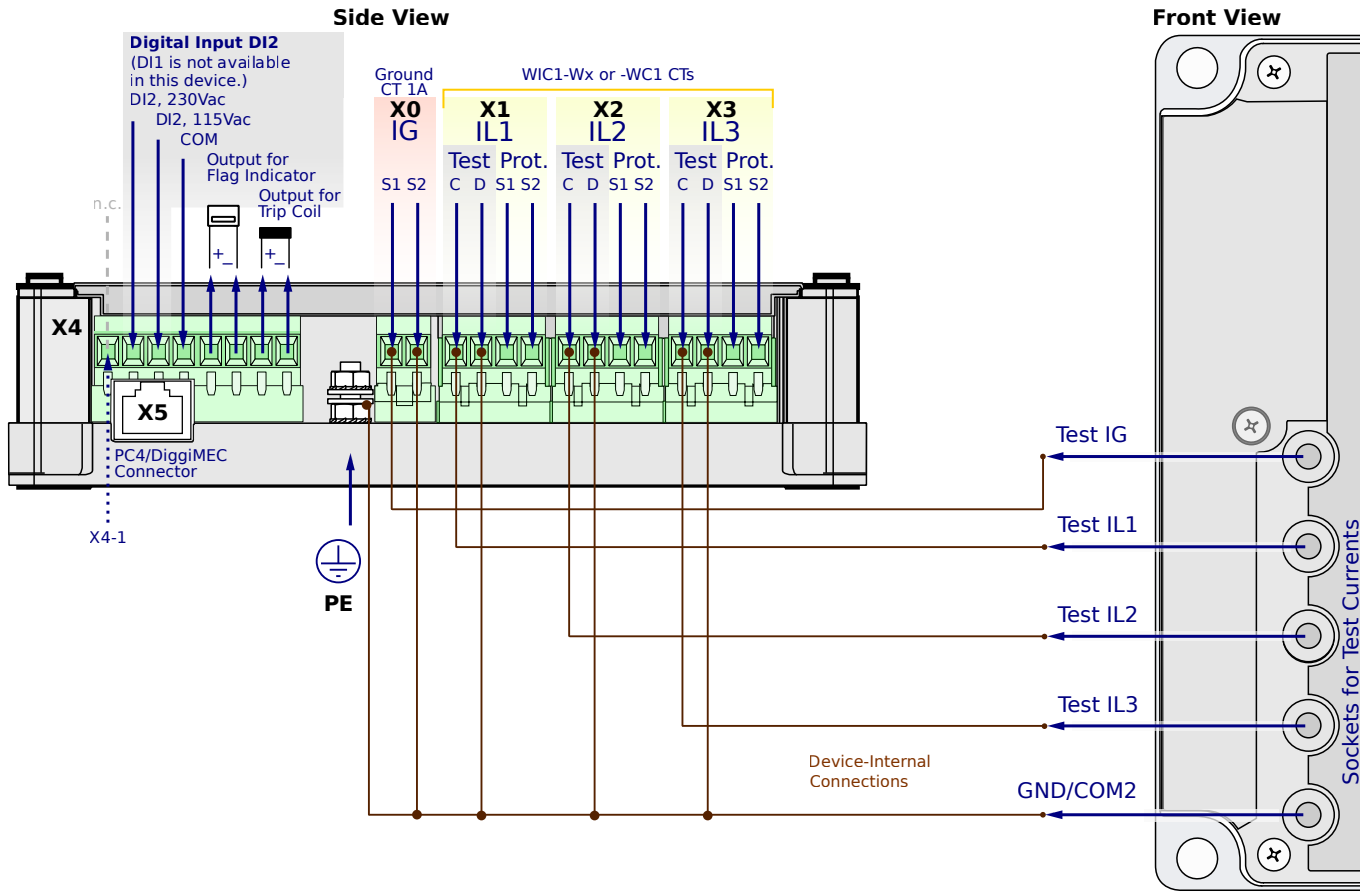


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2SAH

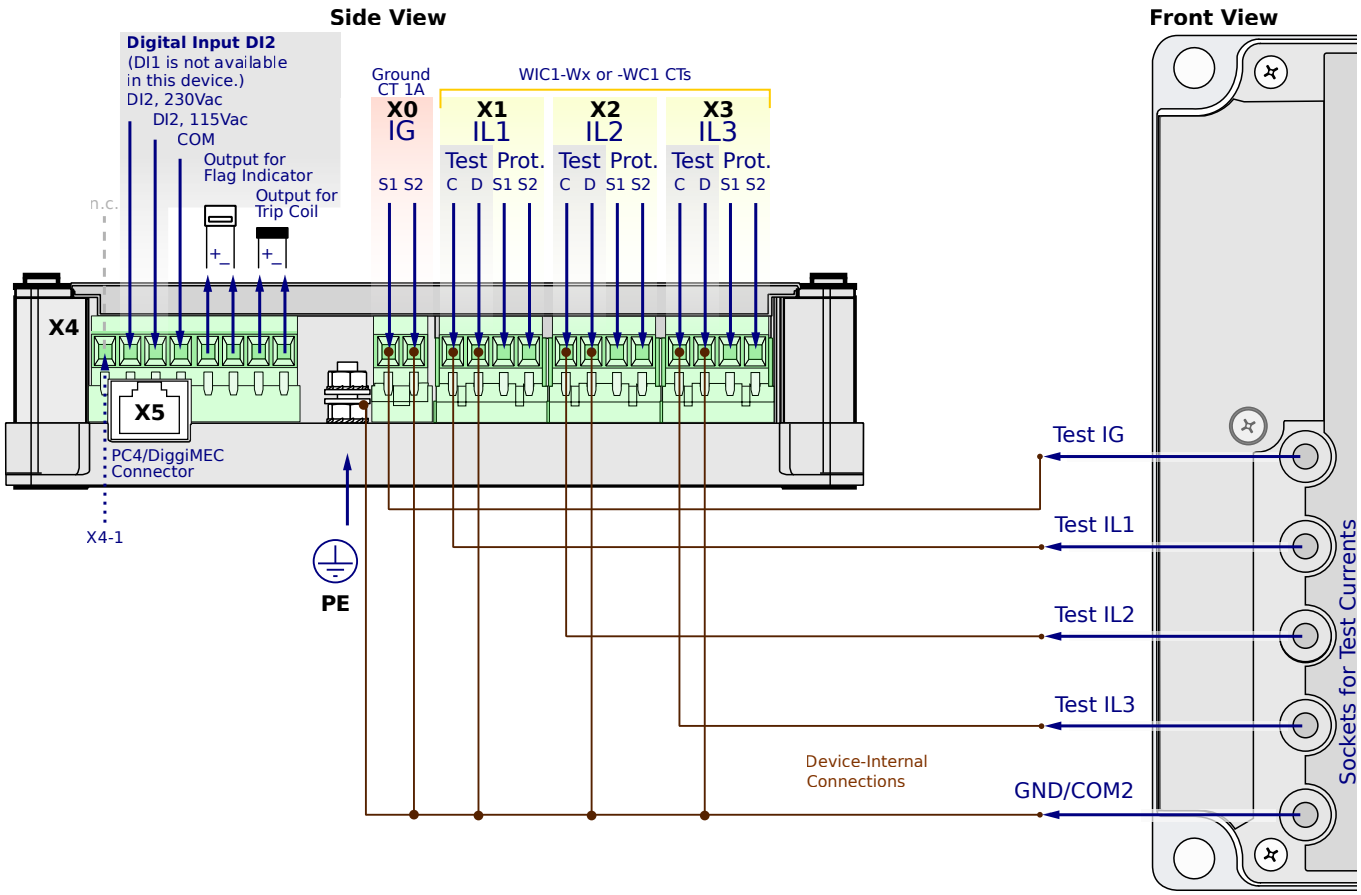


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2AA0

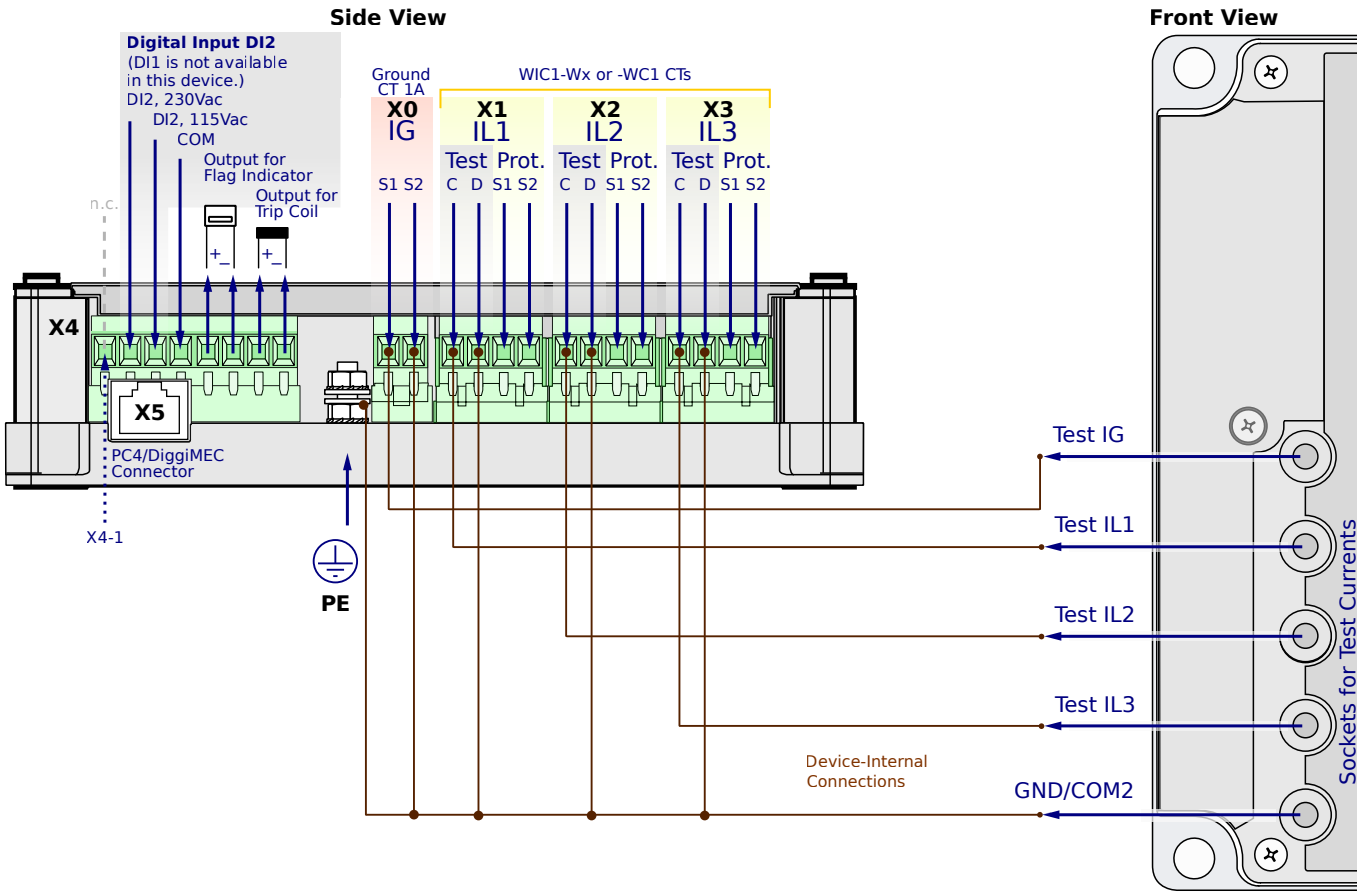


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2AAH

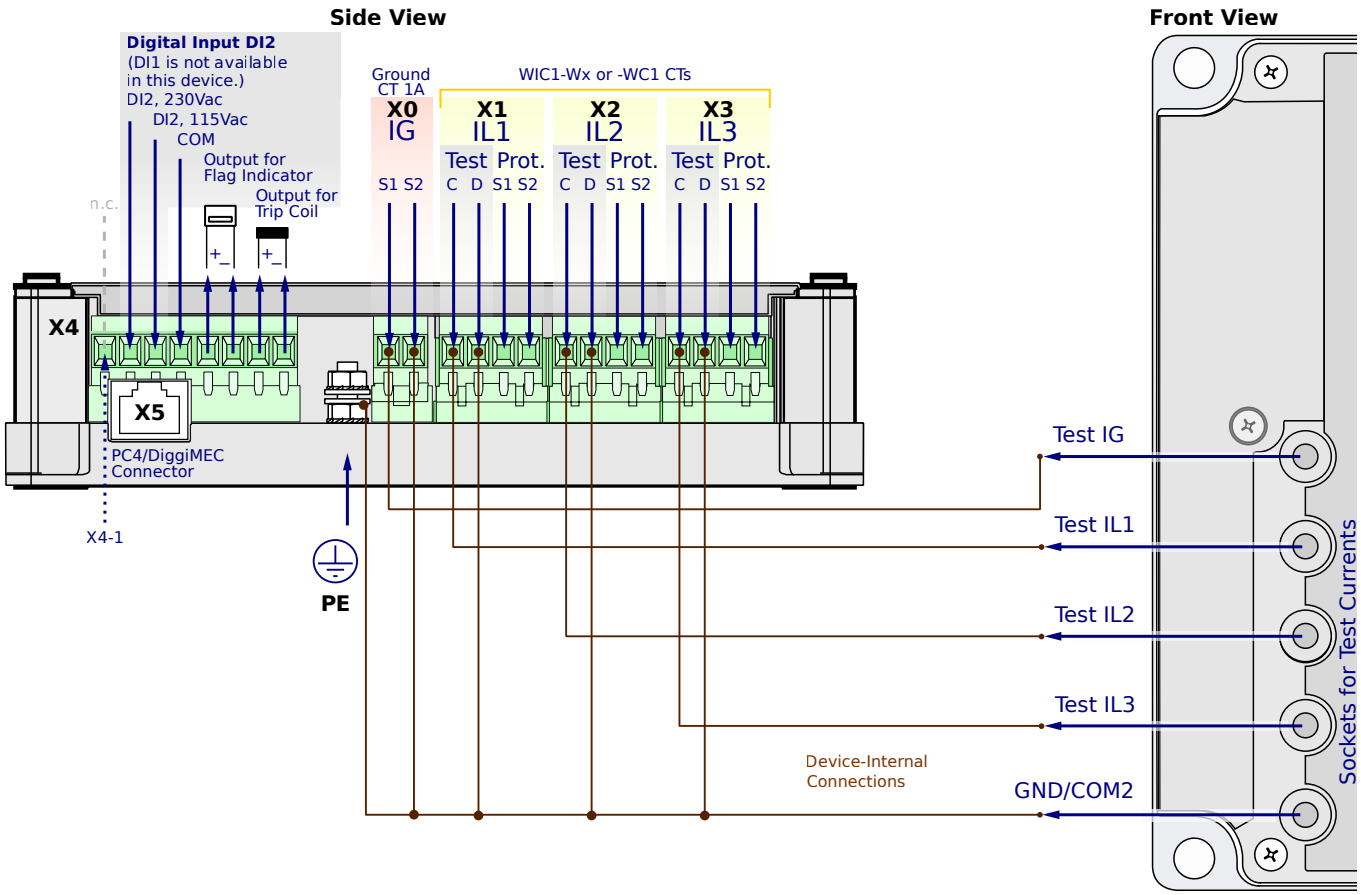


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2PA0

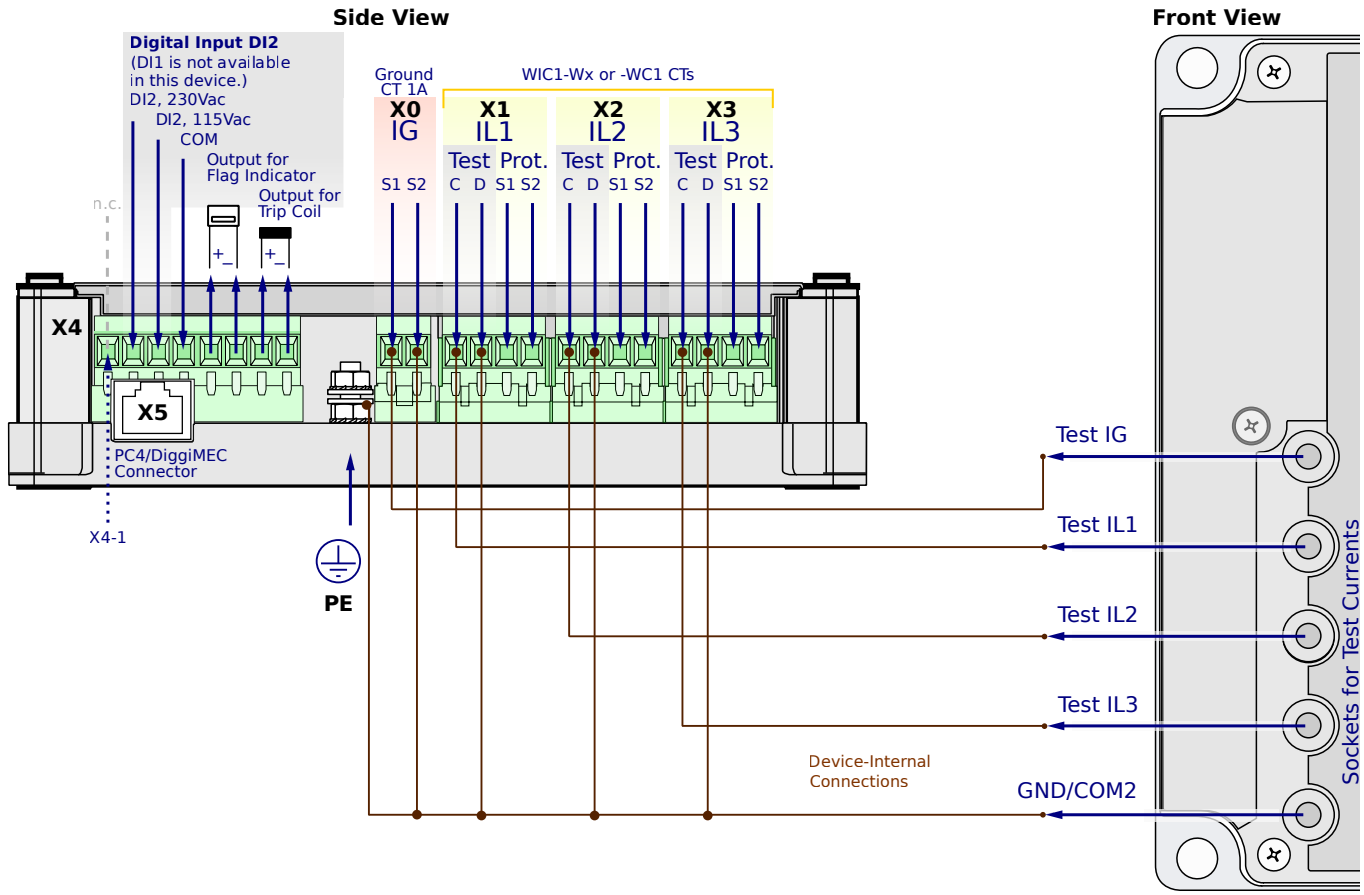


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SG0CC2PAH

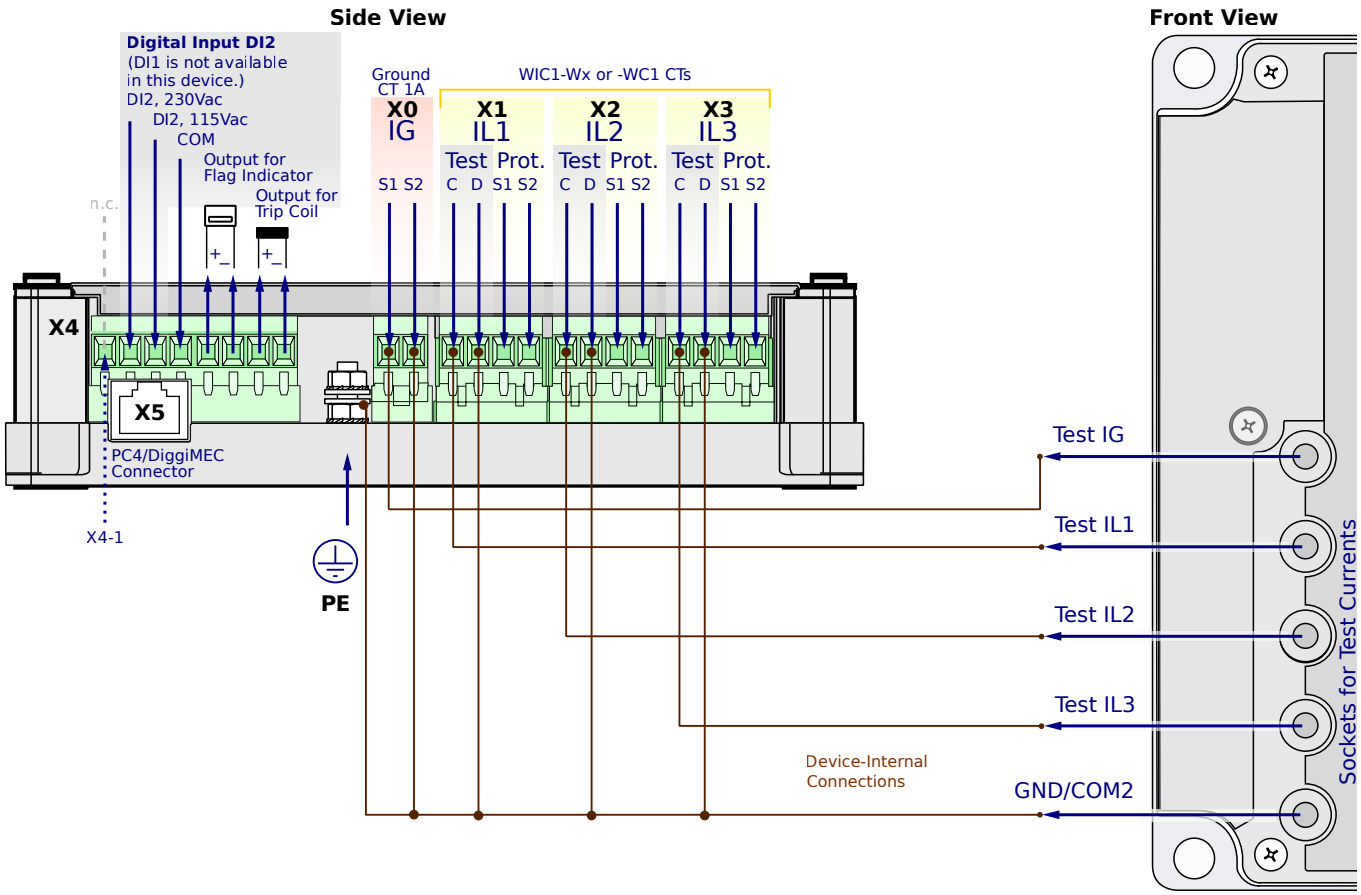


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0SA0

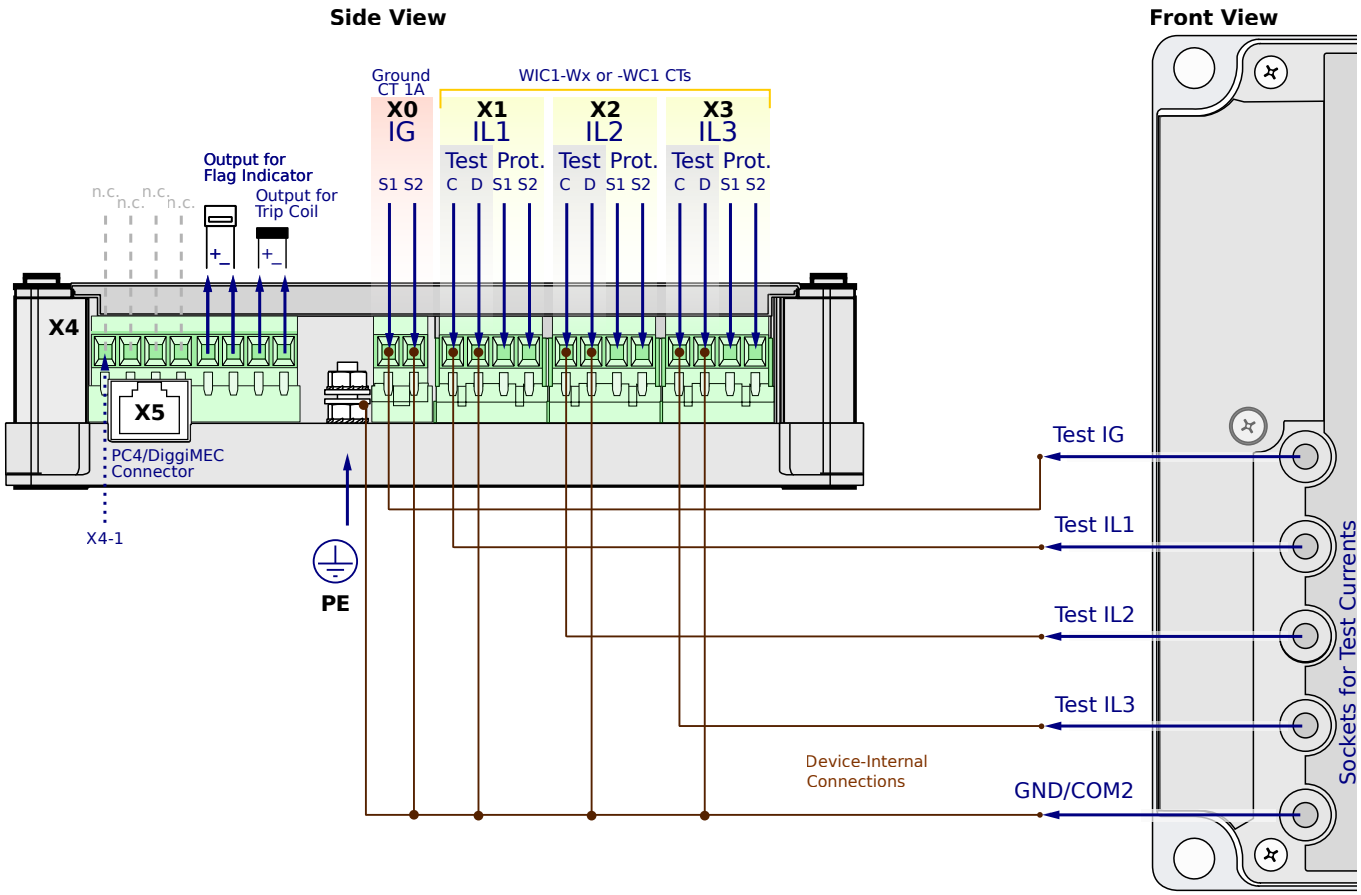


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0SAH

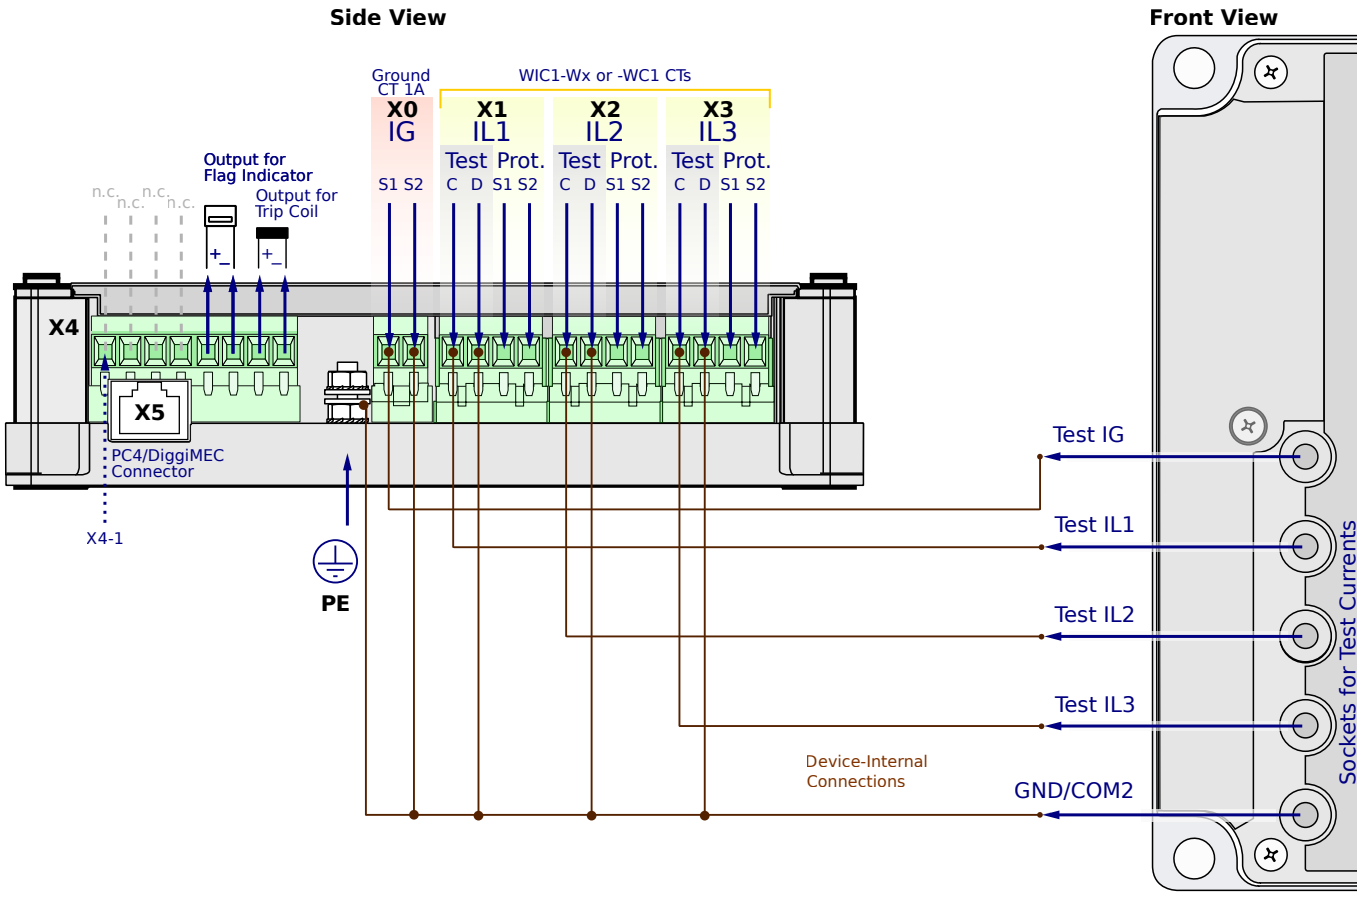


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0AA0

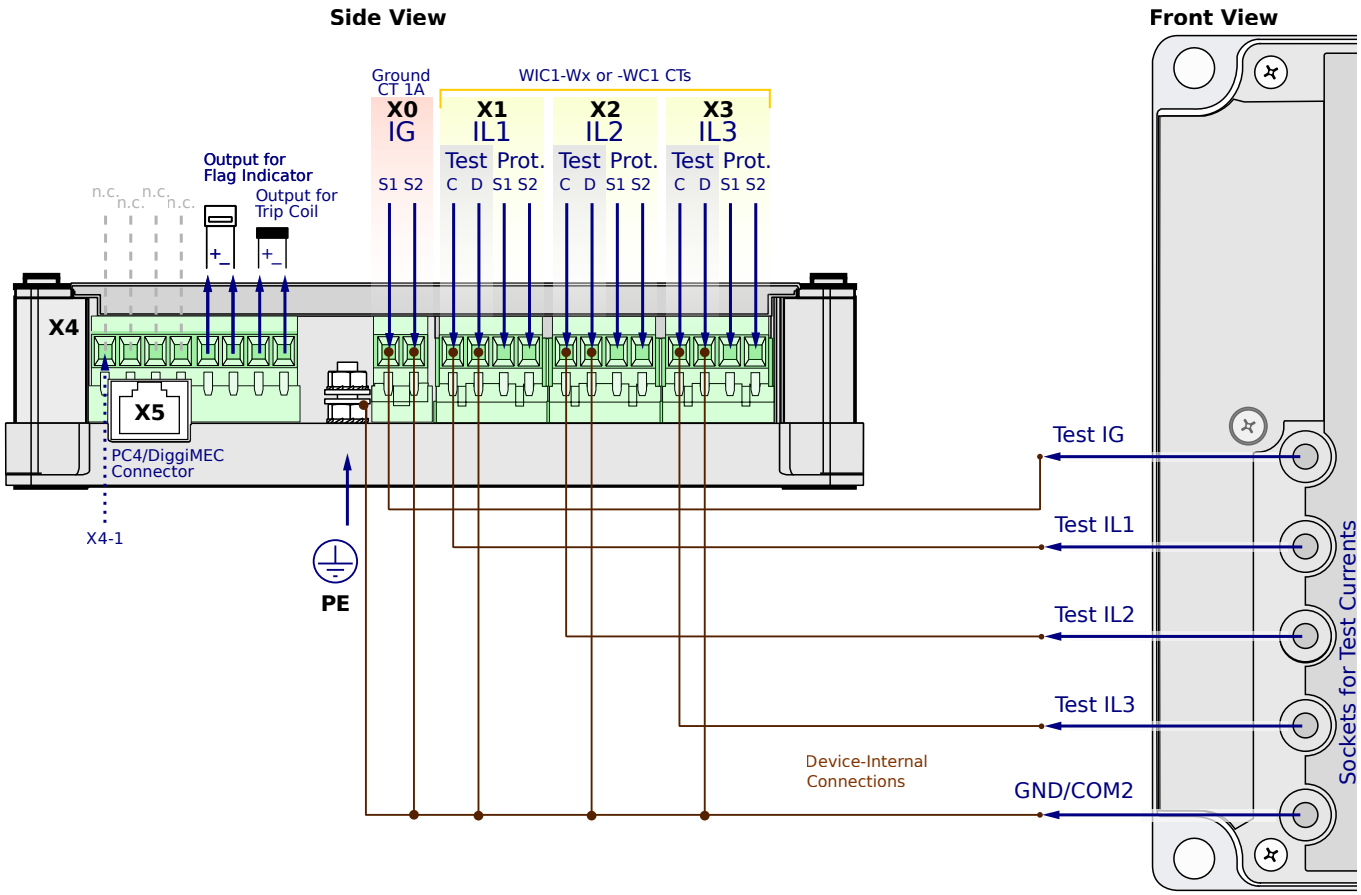


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0AAH

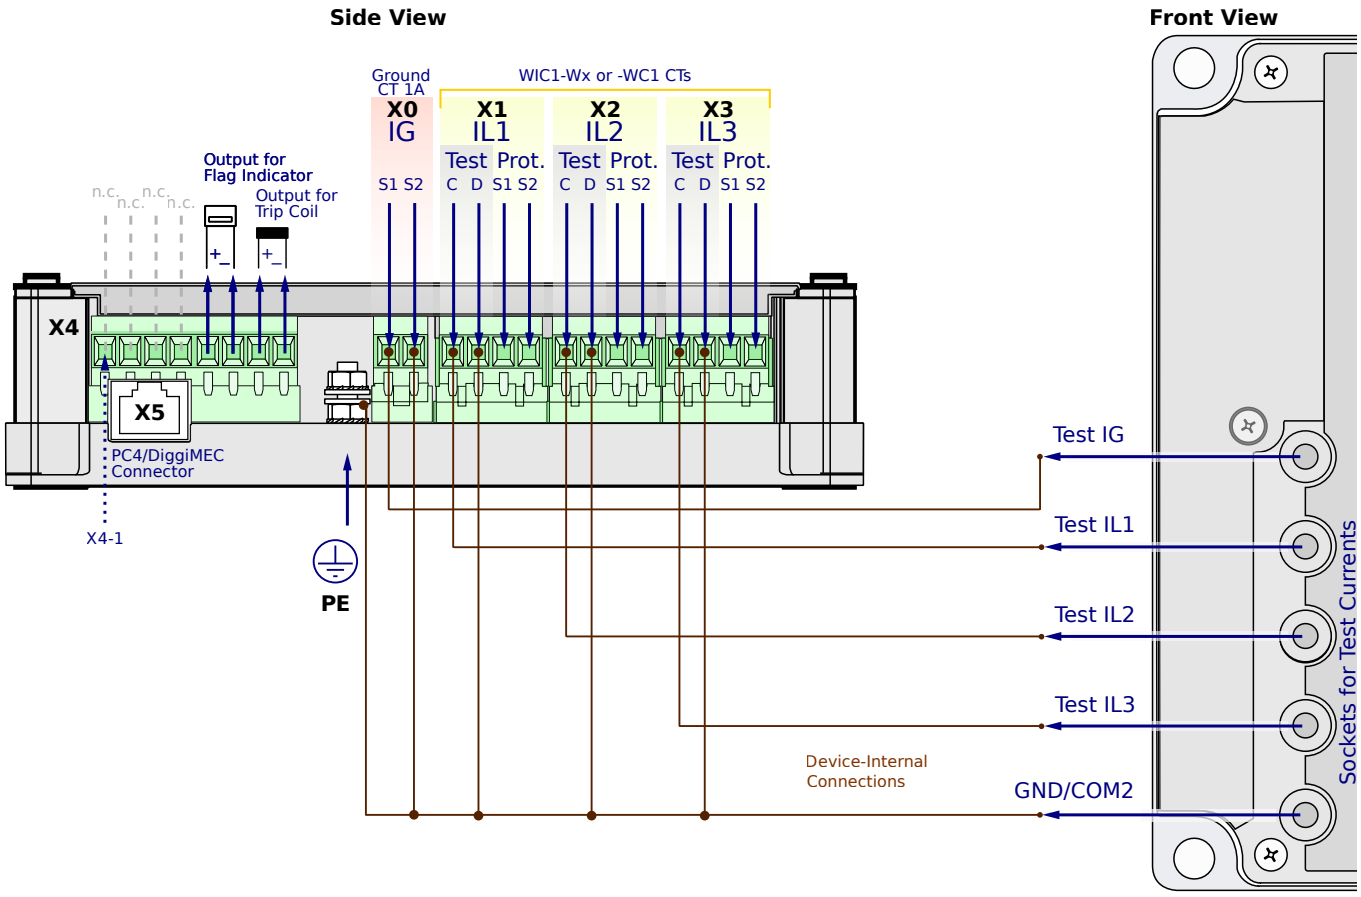


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0PA0

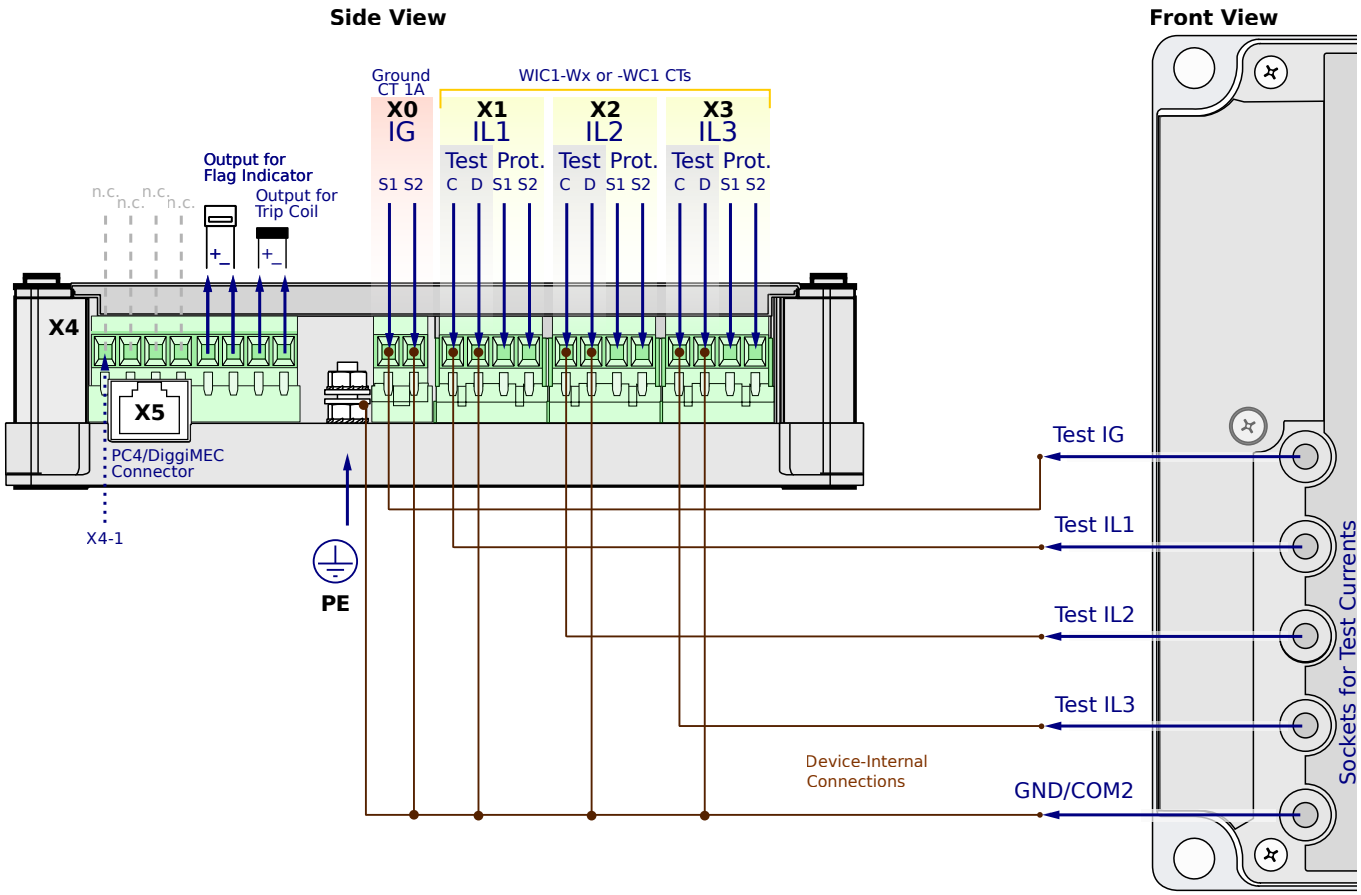


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN0PAH

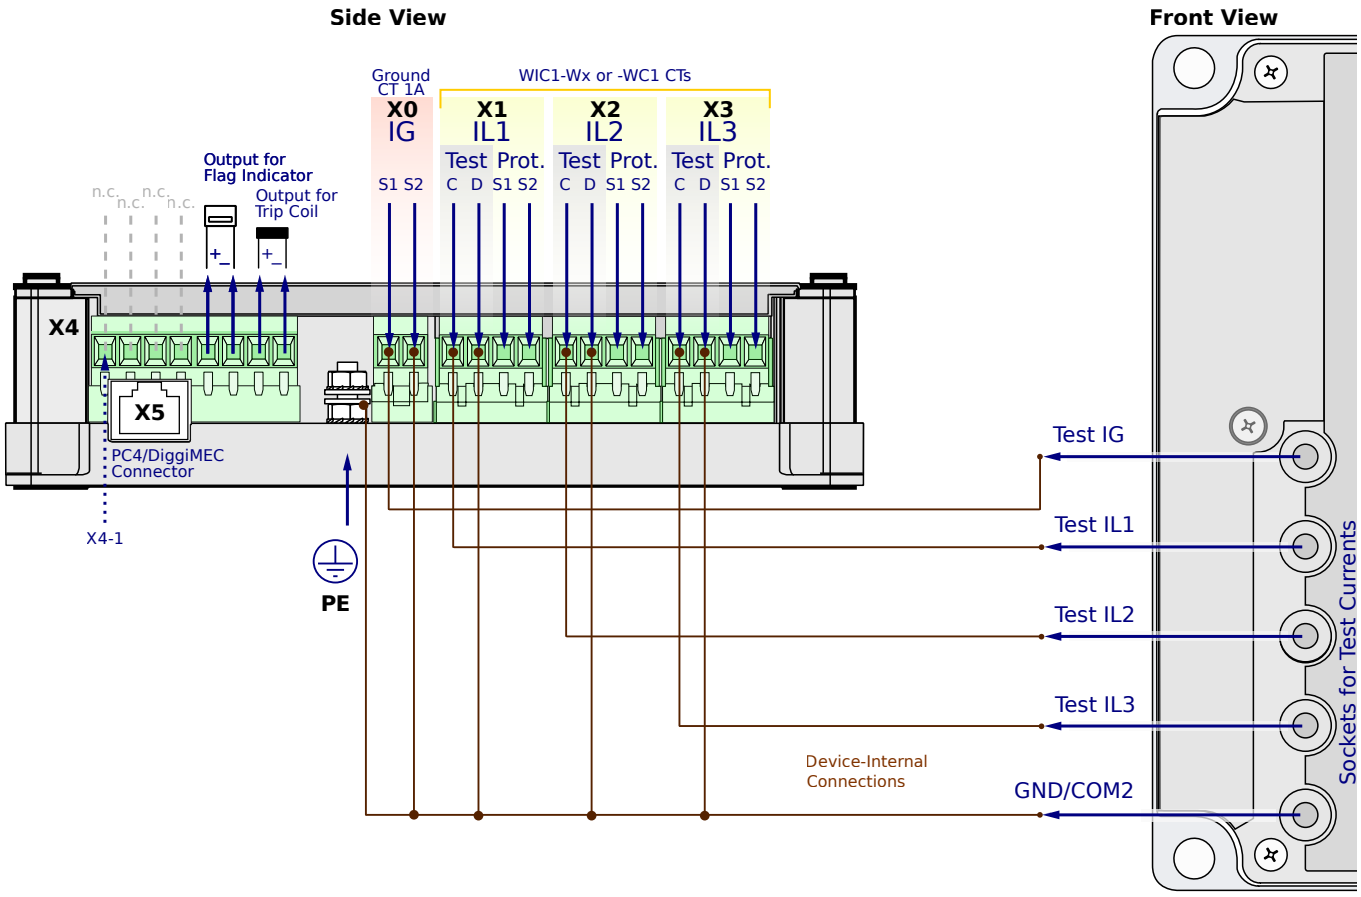


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1SA0

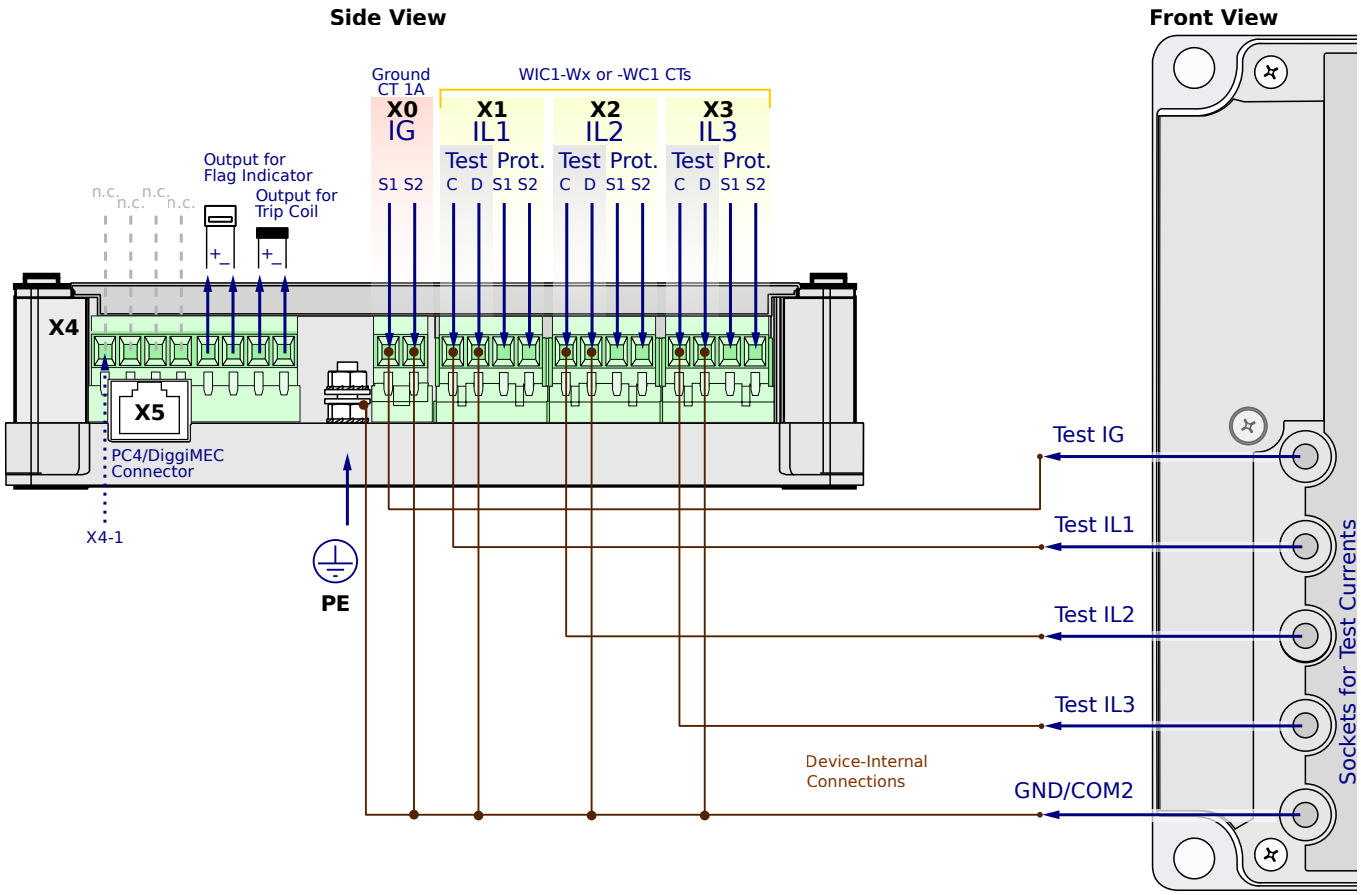


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1SAH

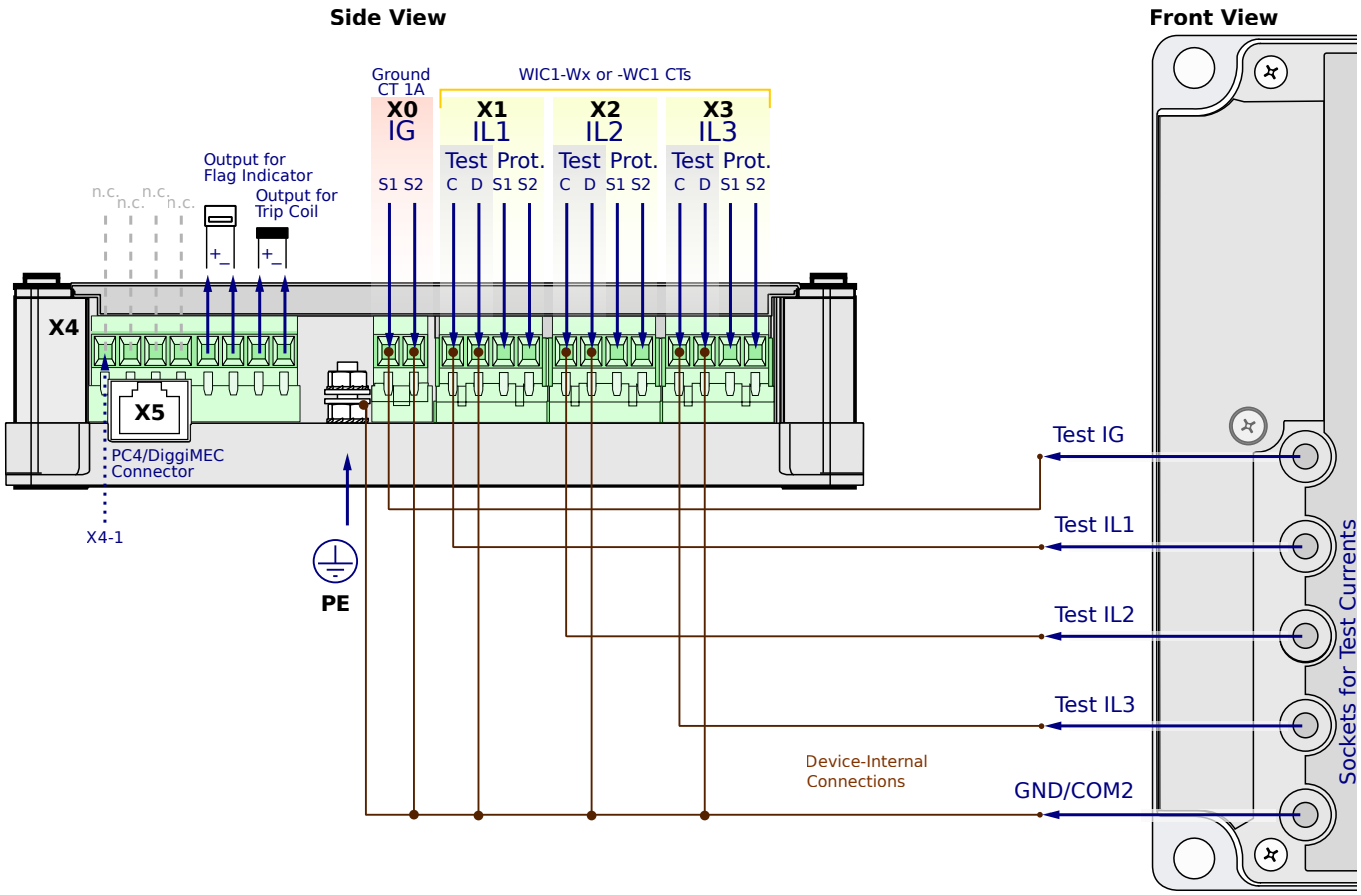


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1AA0

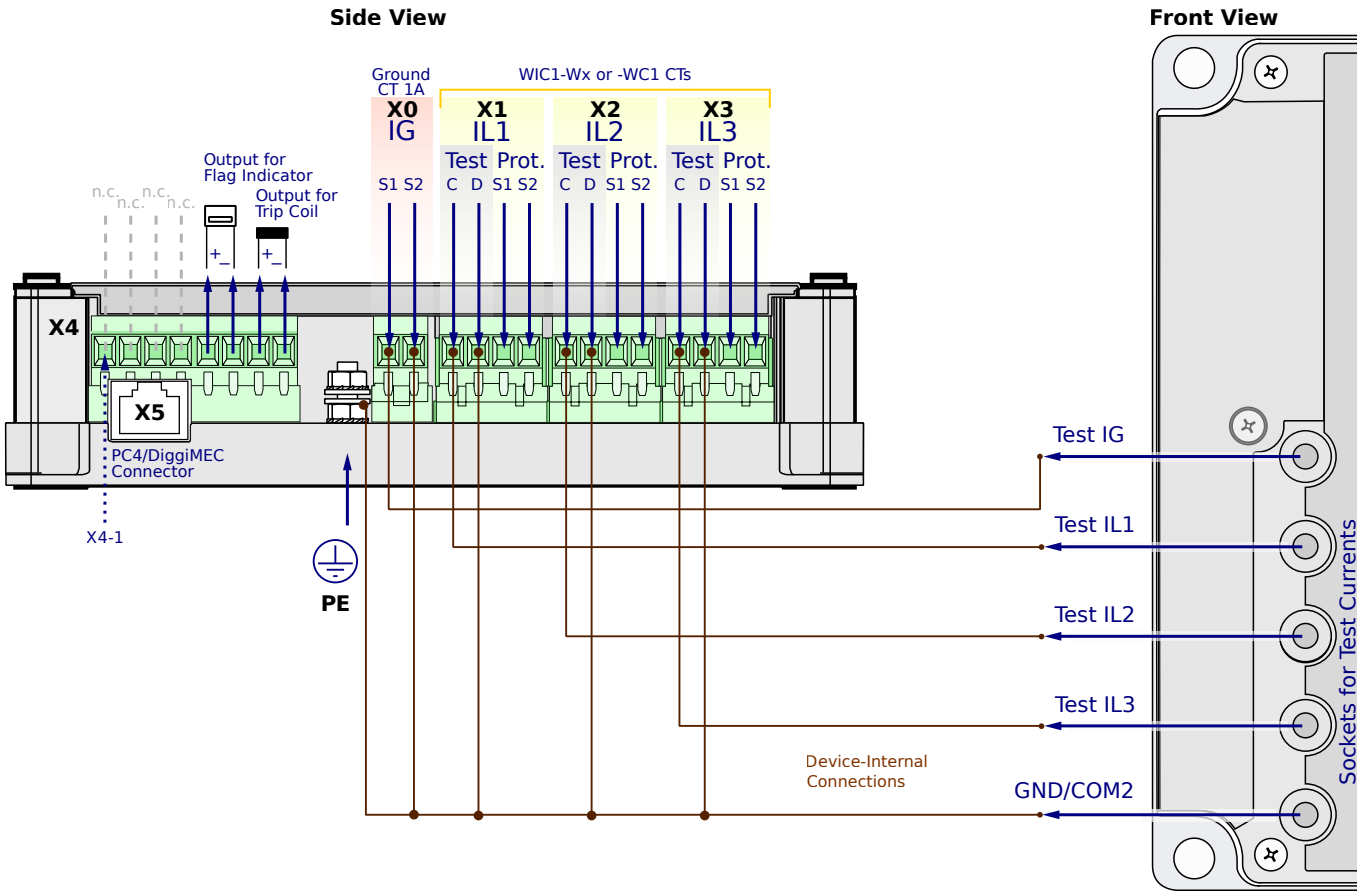


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1AAH

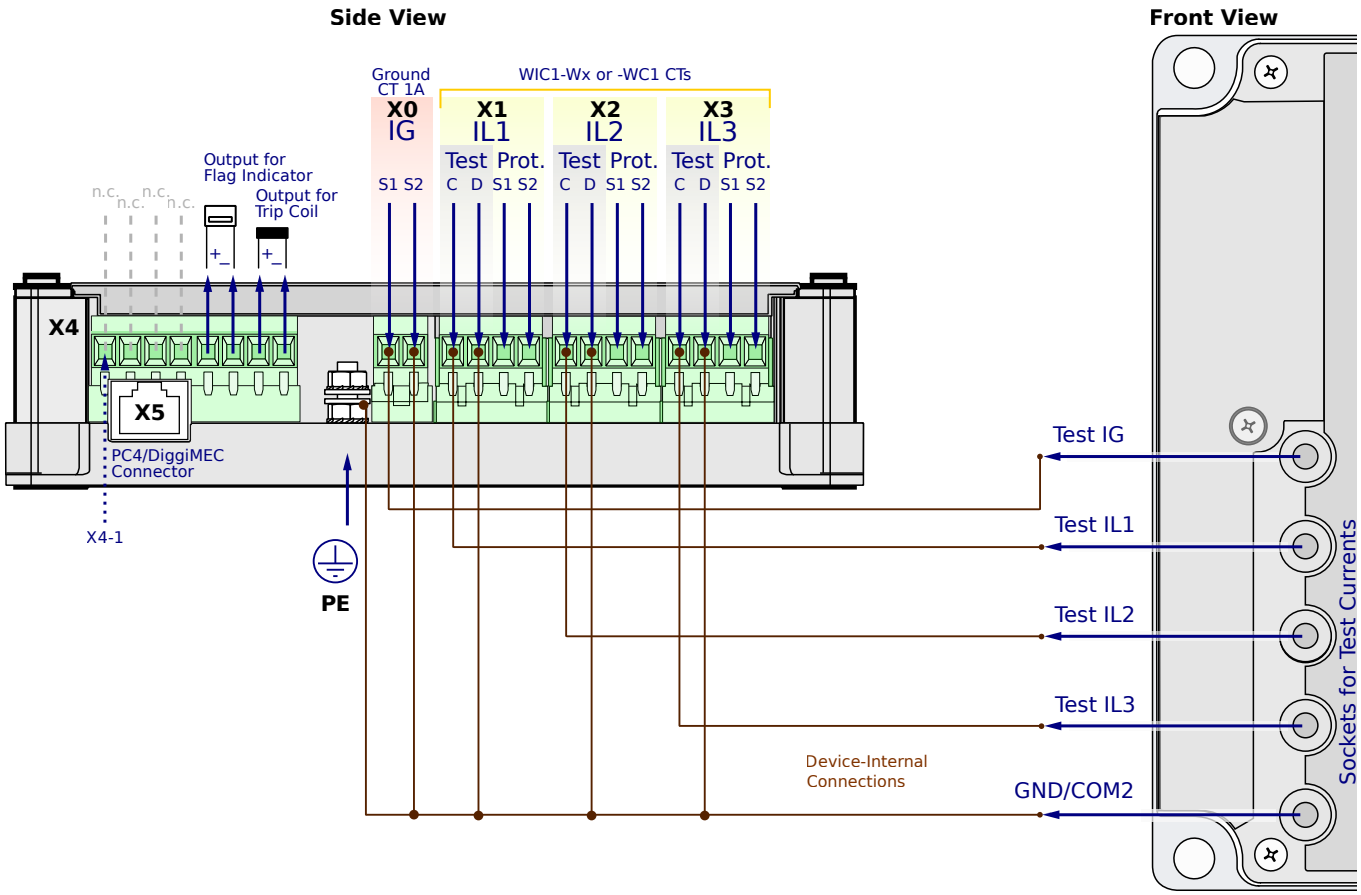


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1PA0

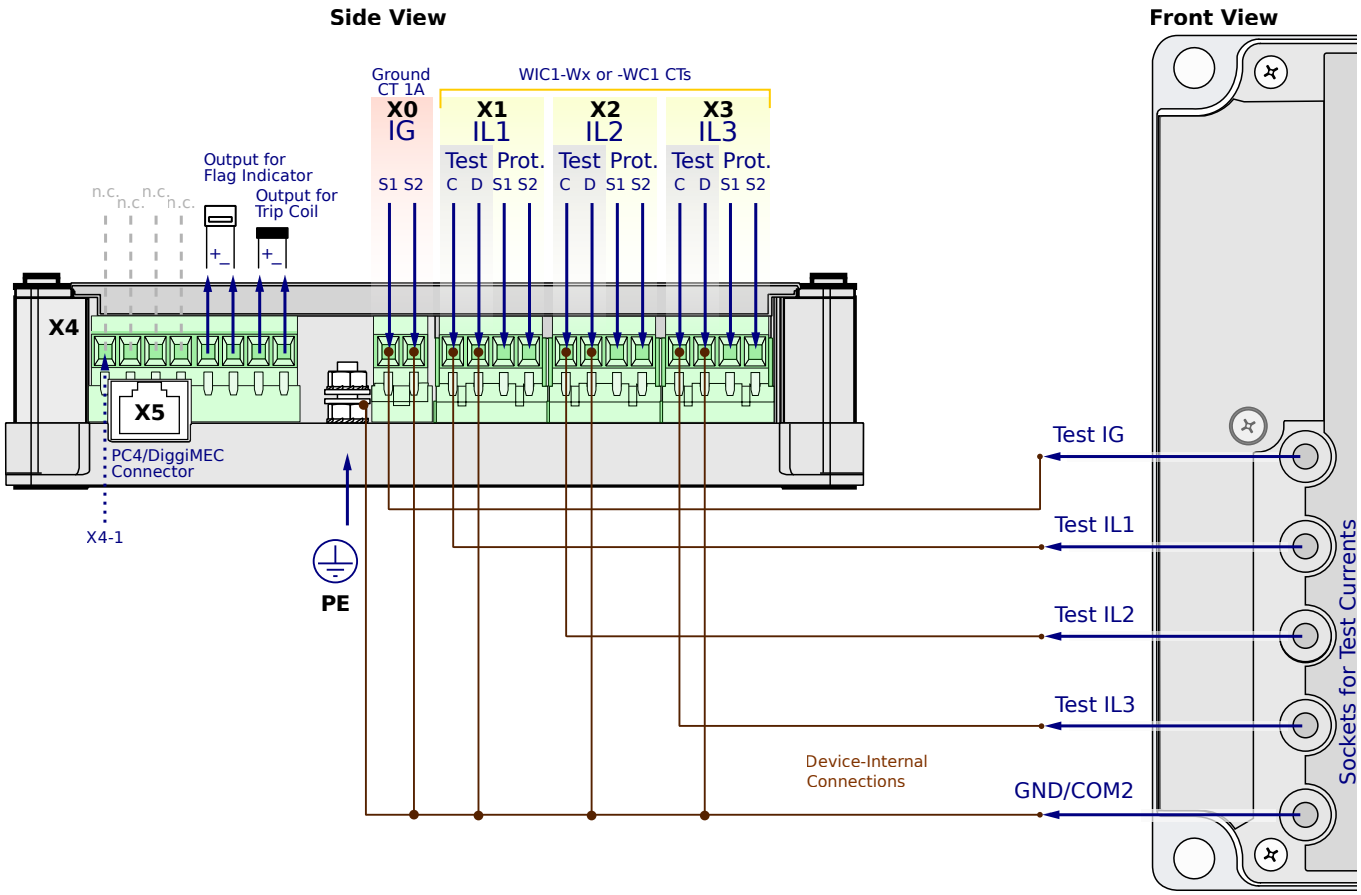


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN1PAH

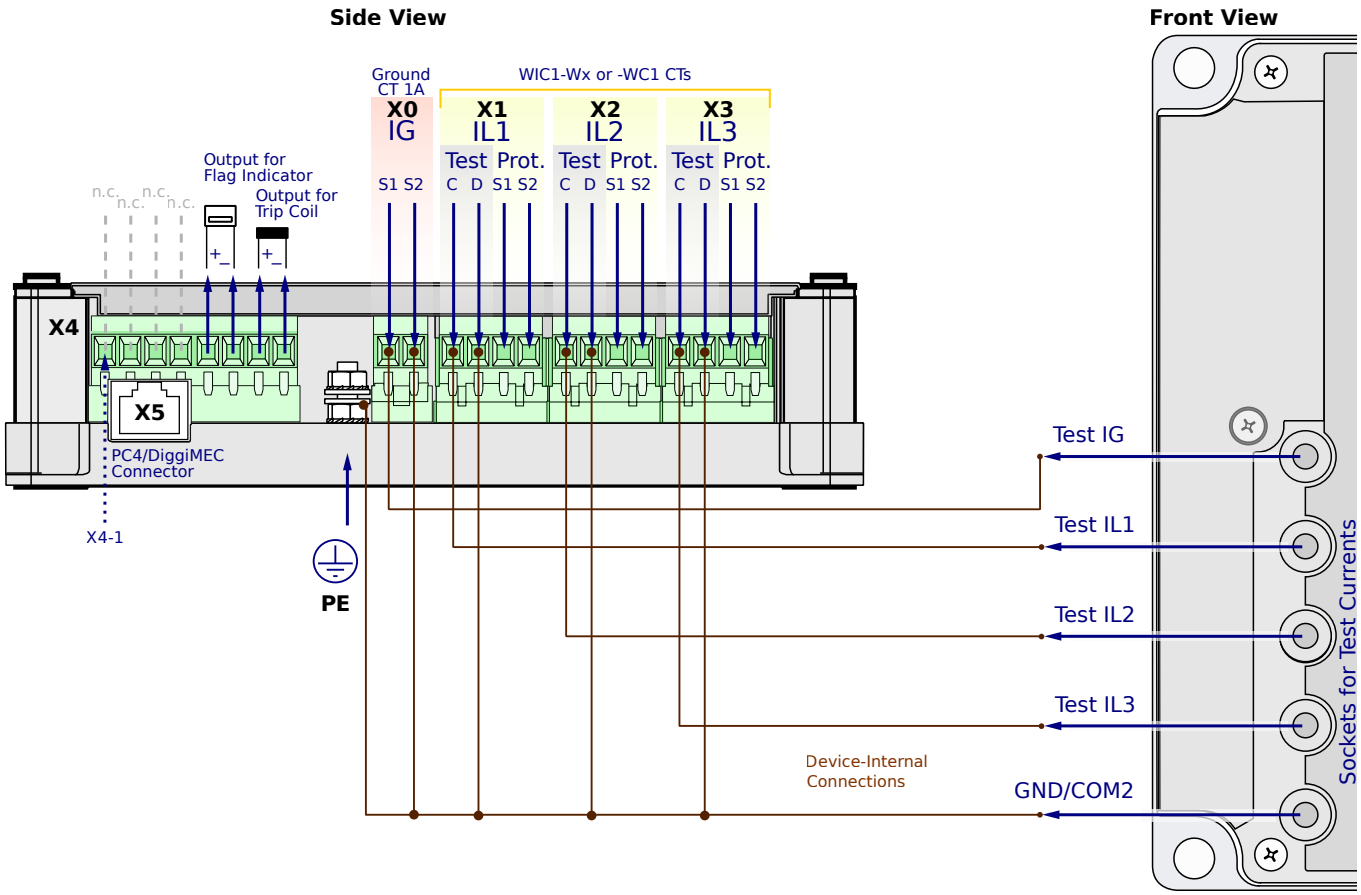


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2SA0

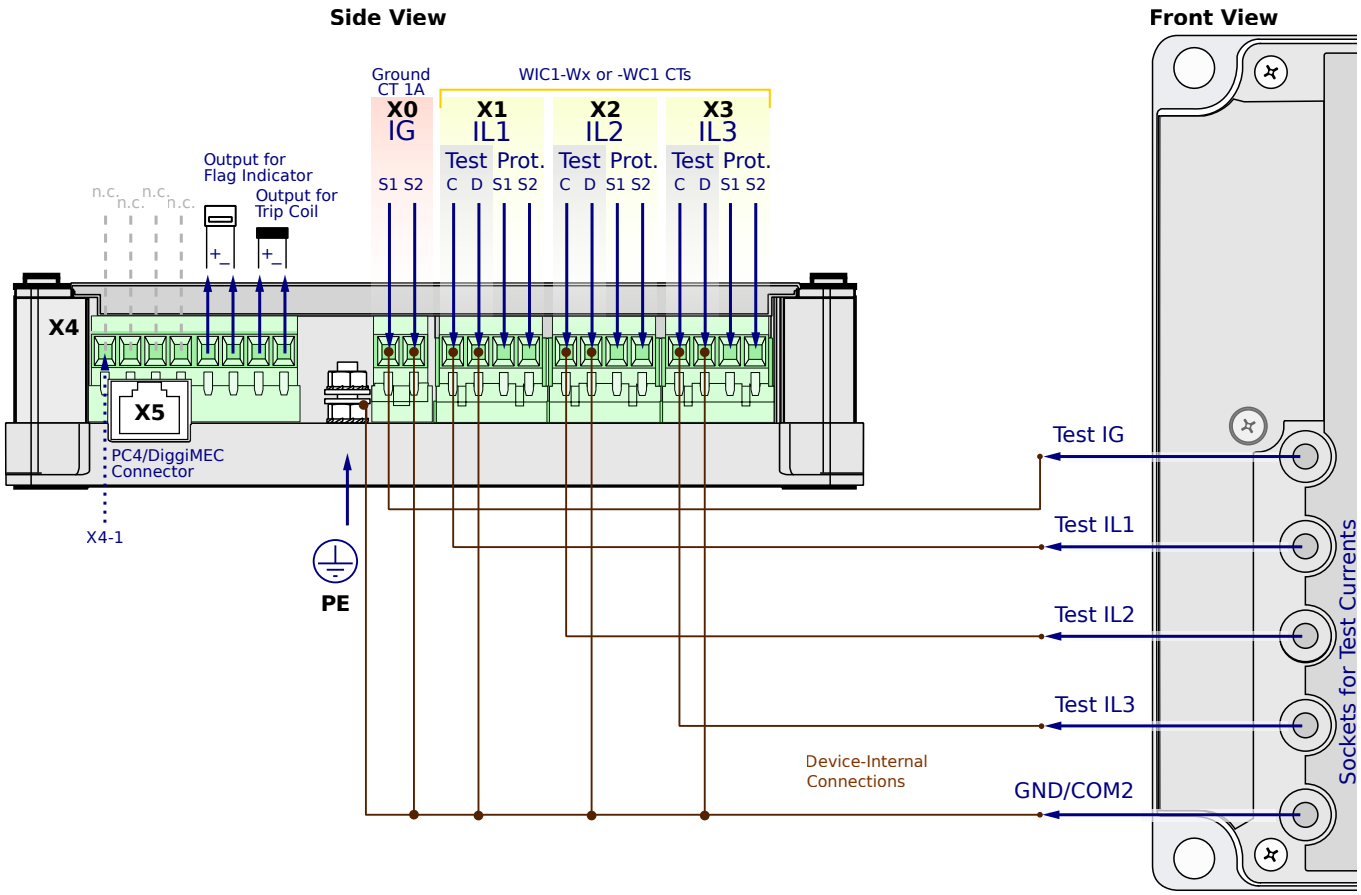


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2SAH

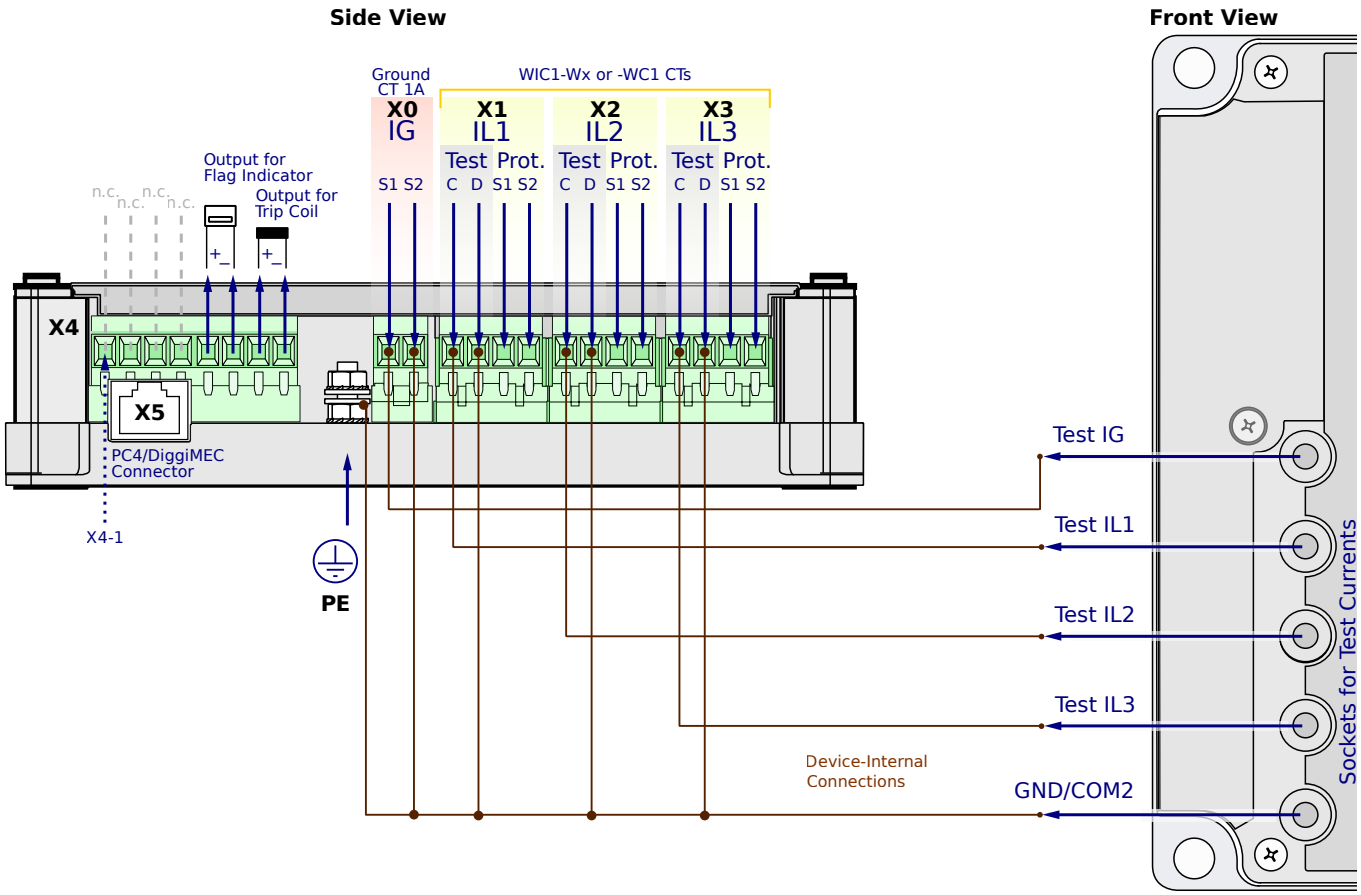


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2AA0

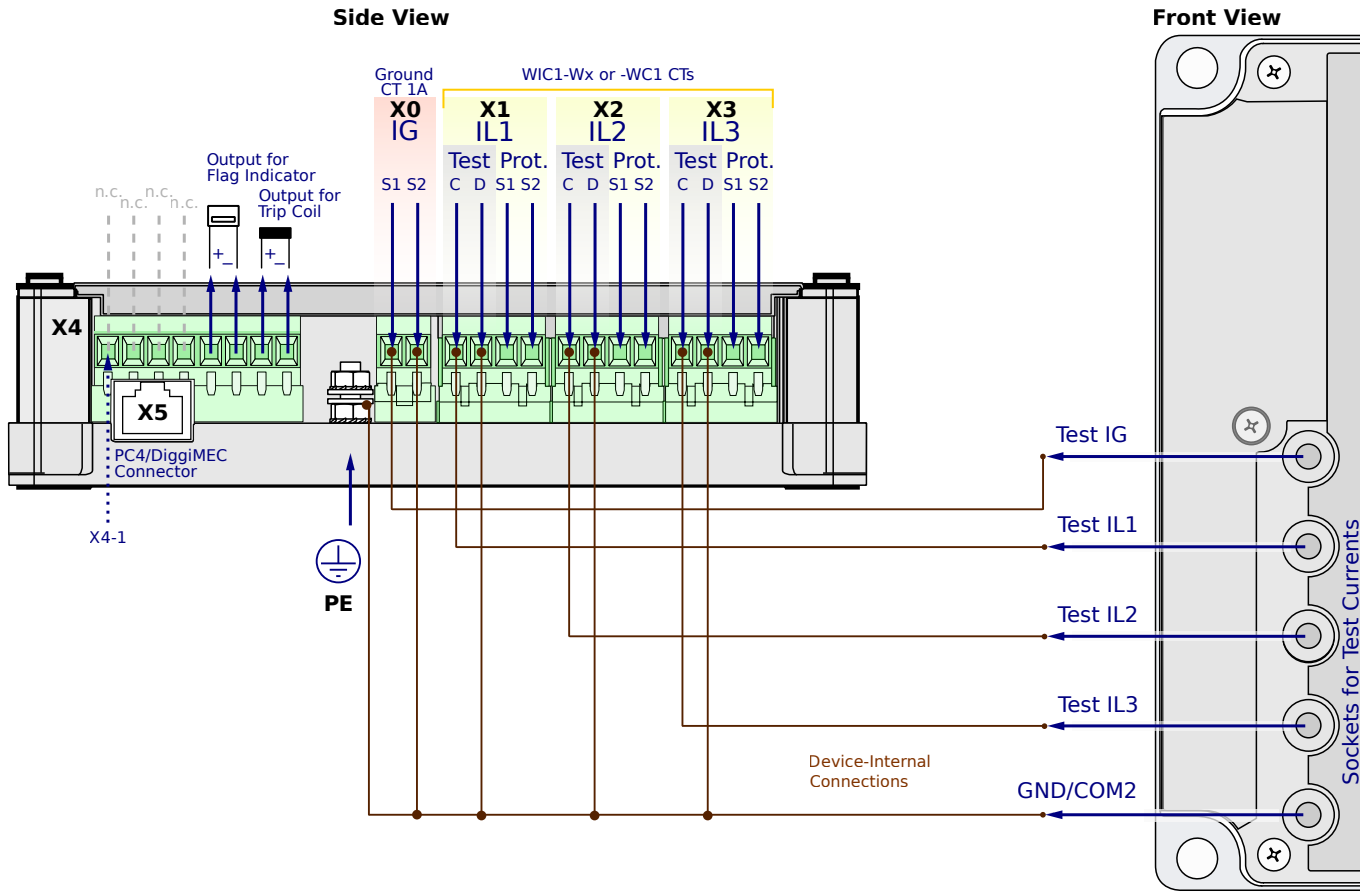


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2AAH

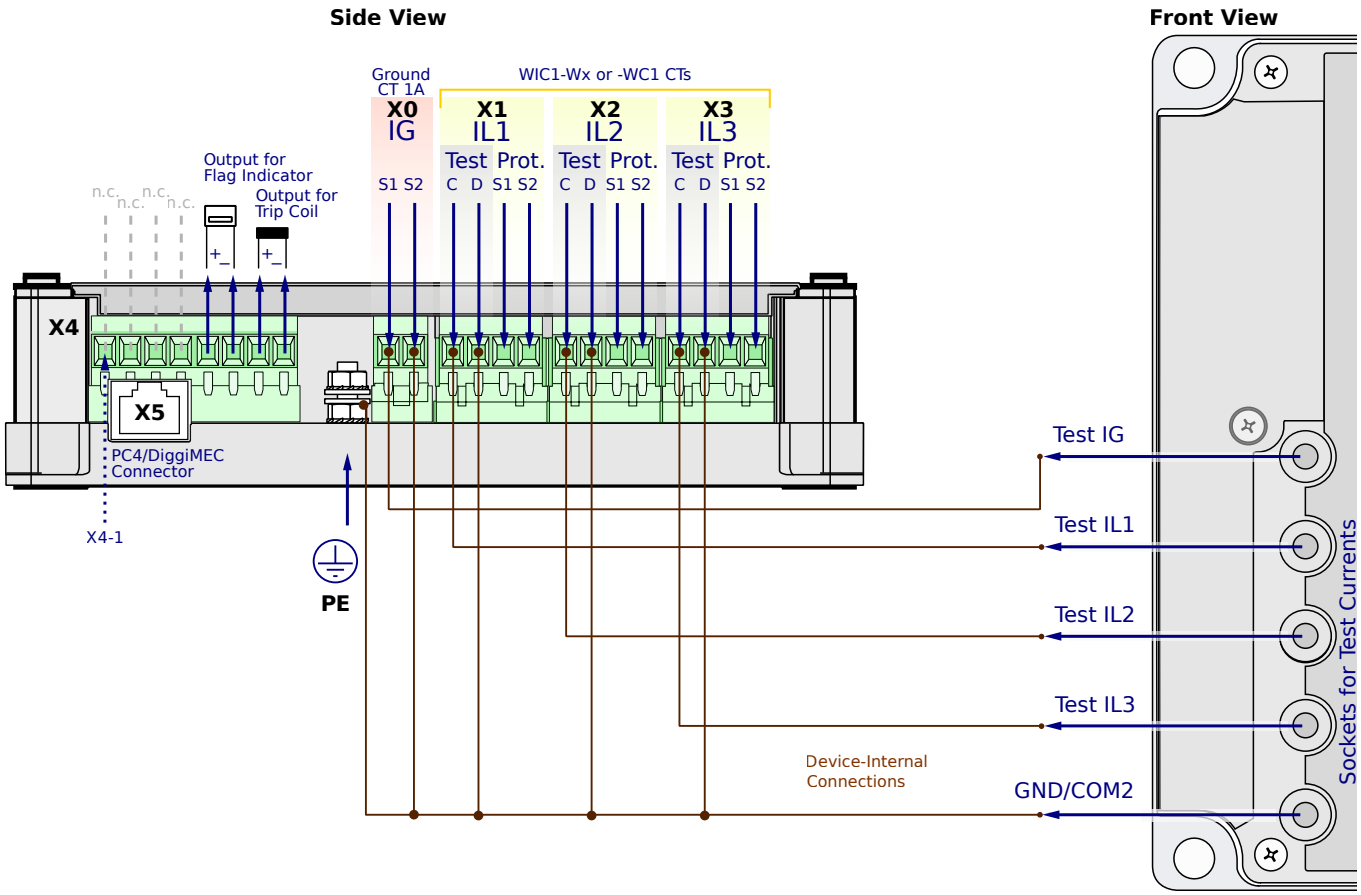


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2PA0

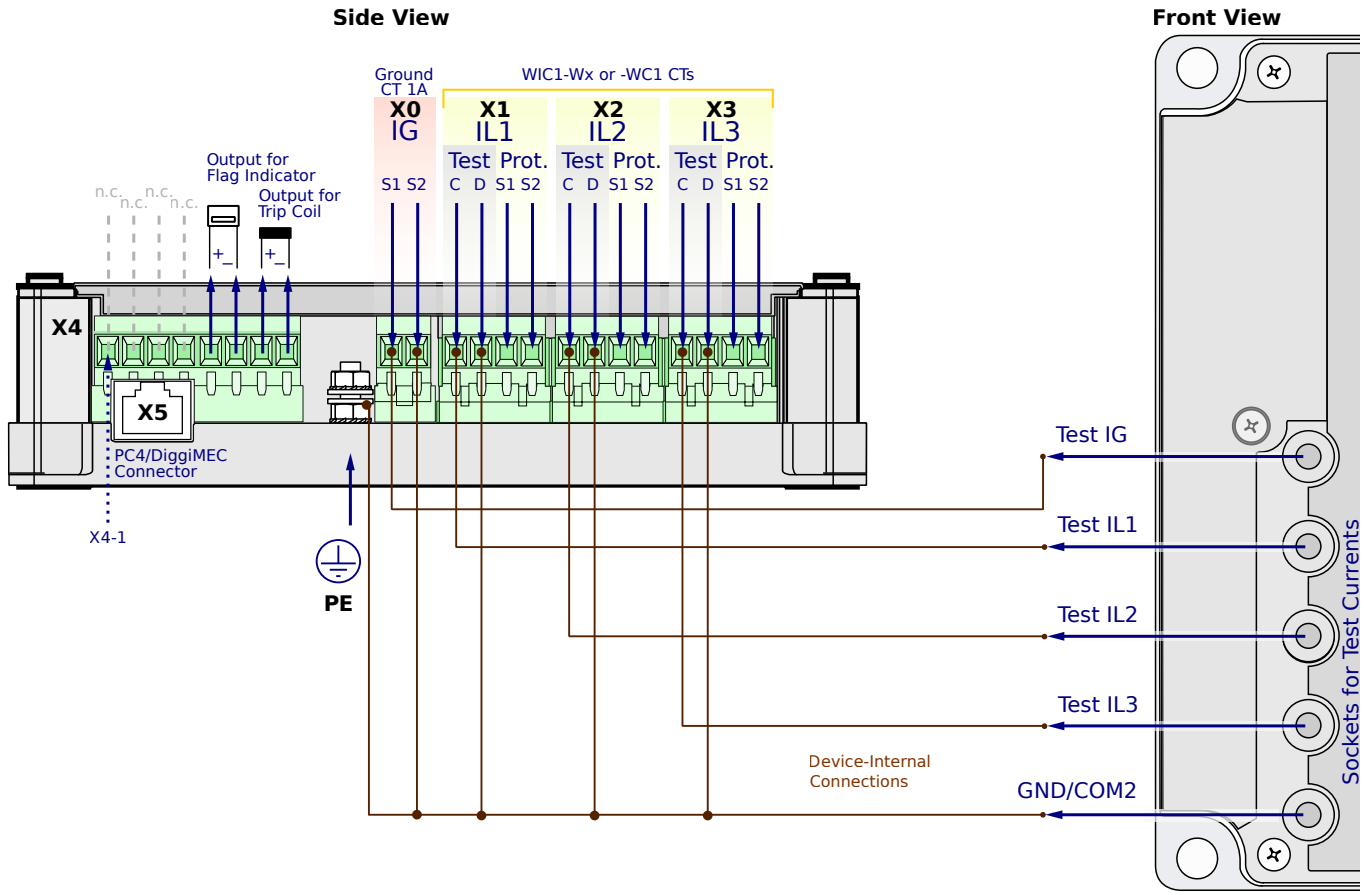


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NN2PAH

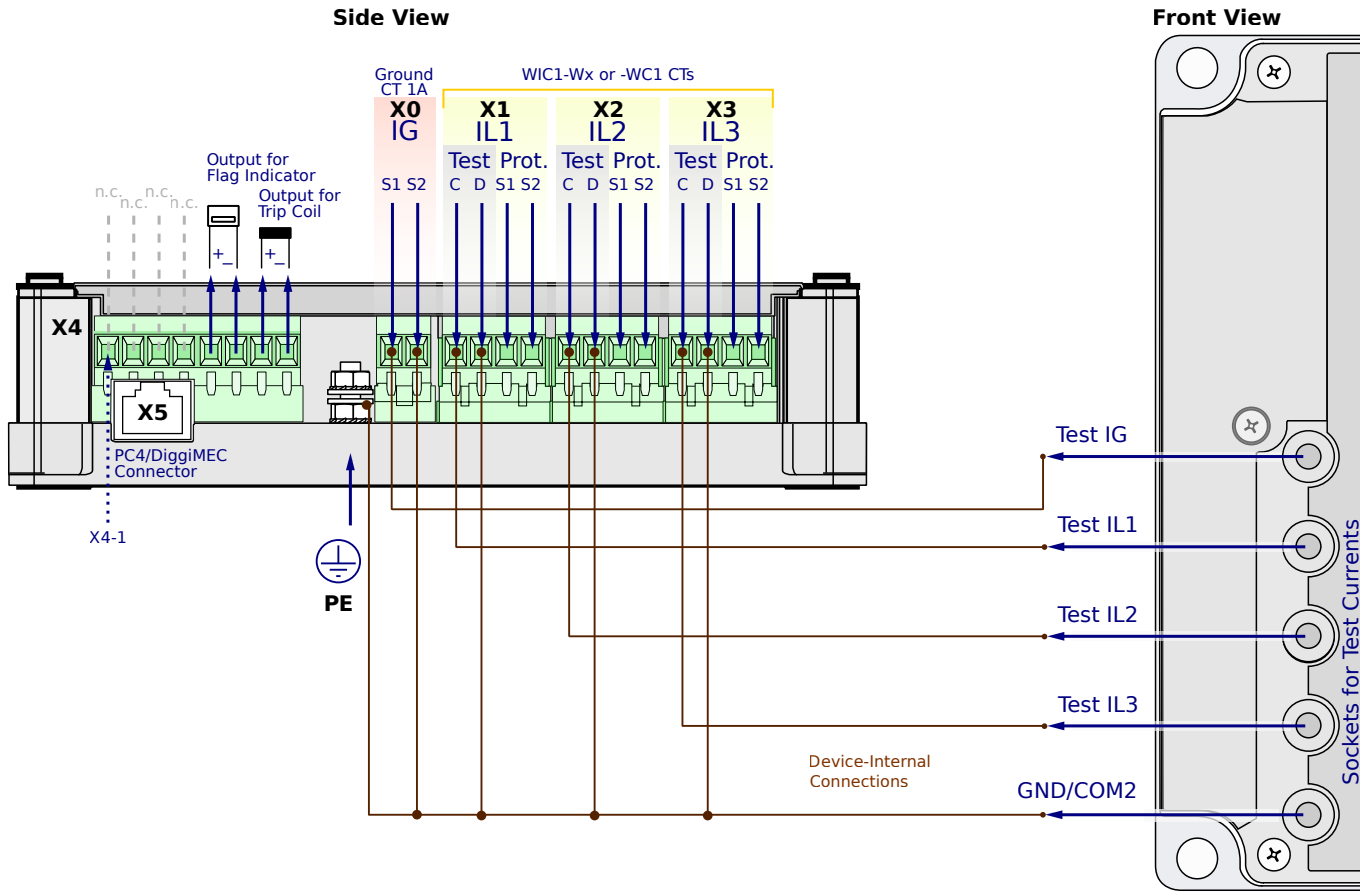


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0SA0

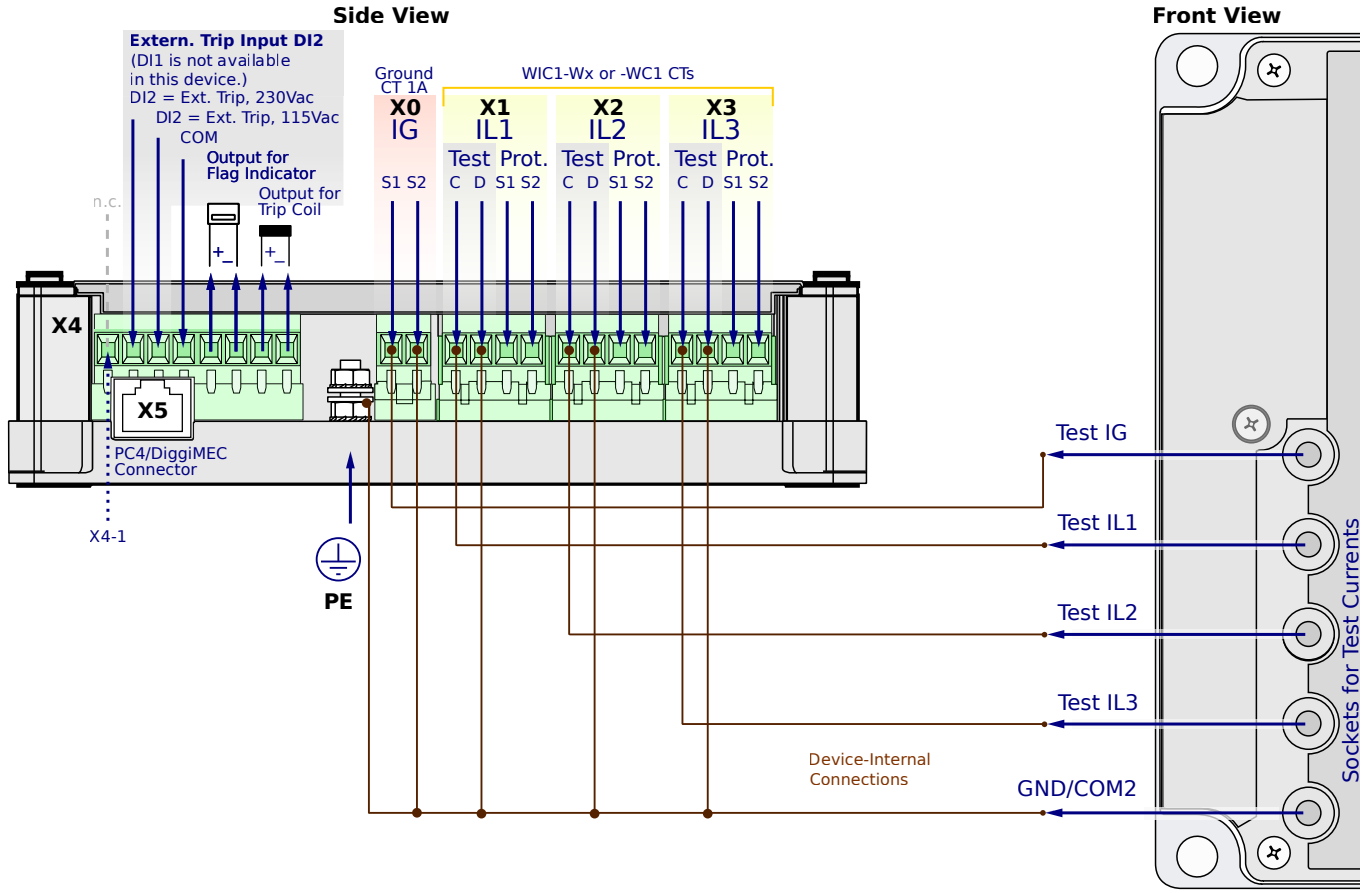


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0SAH

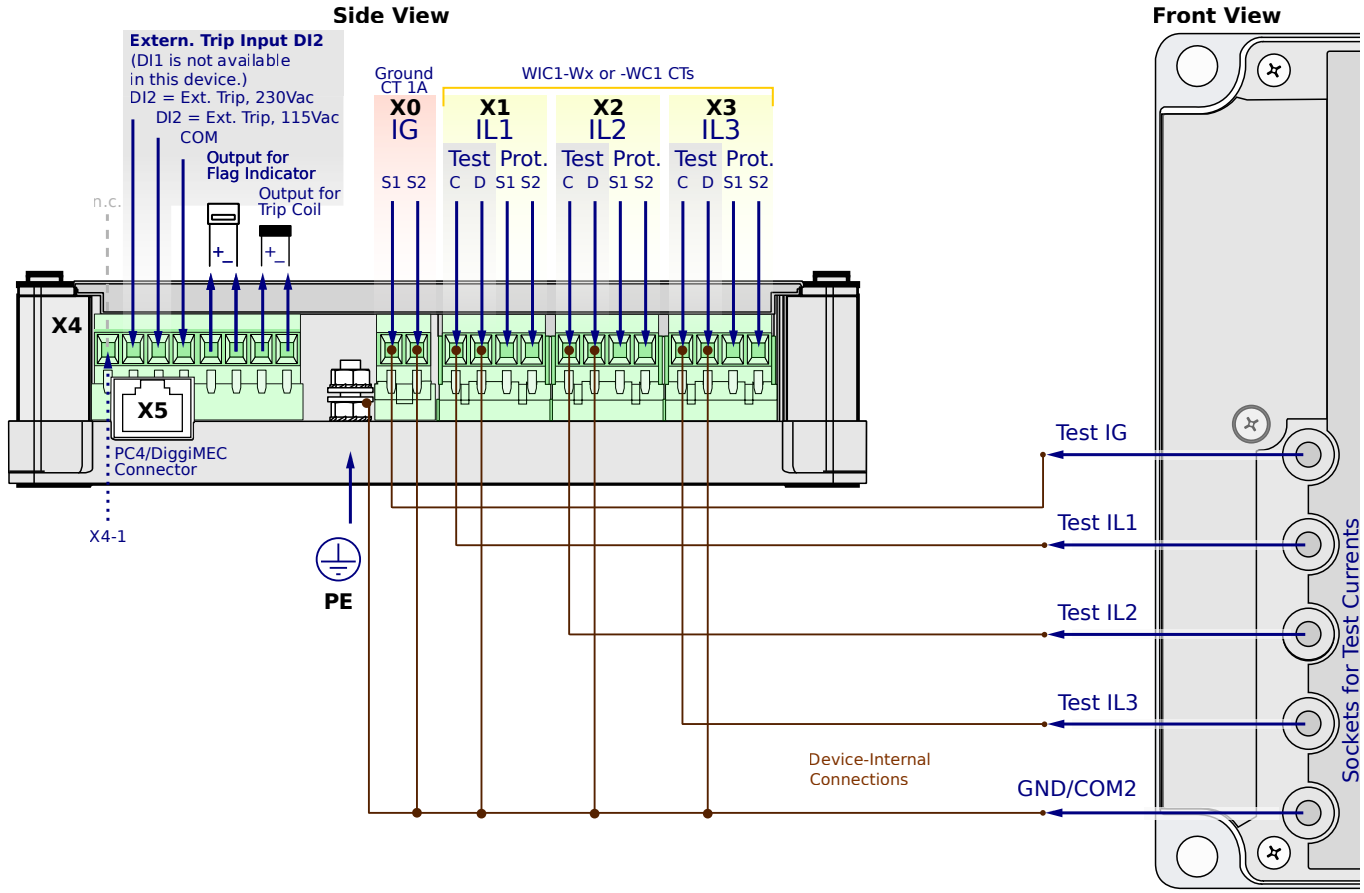


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0AA0

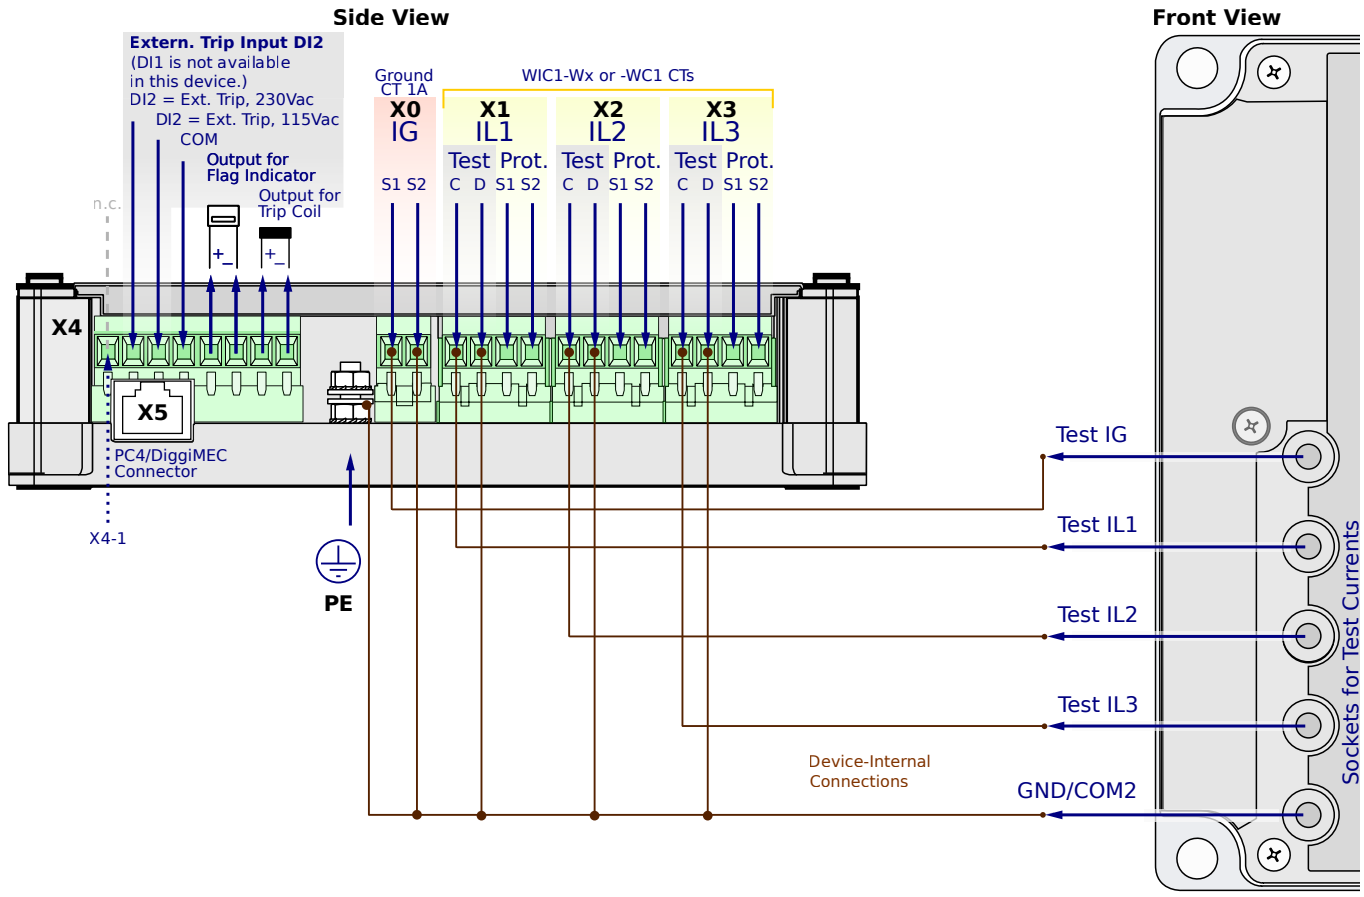


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0AAH

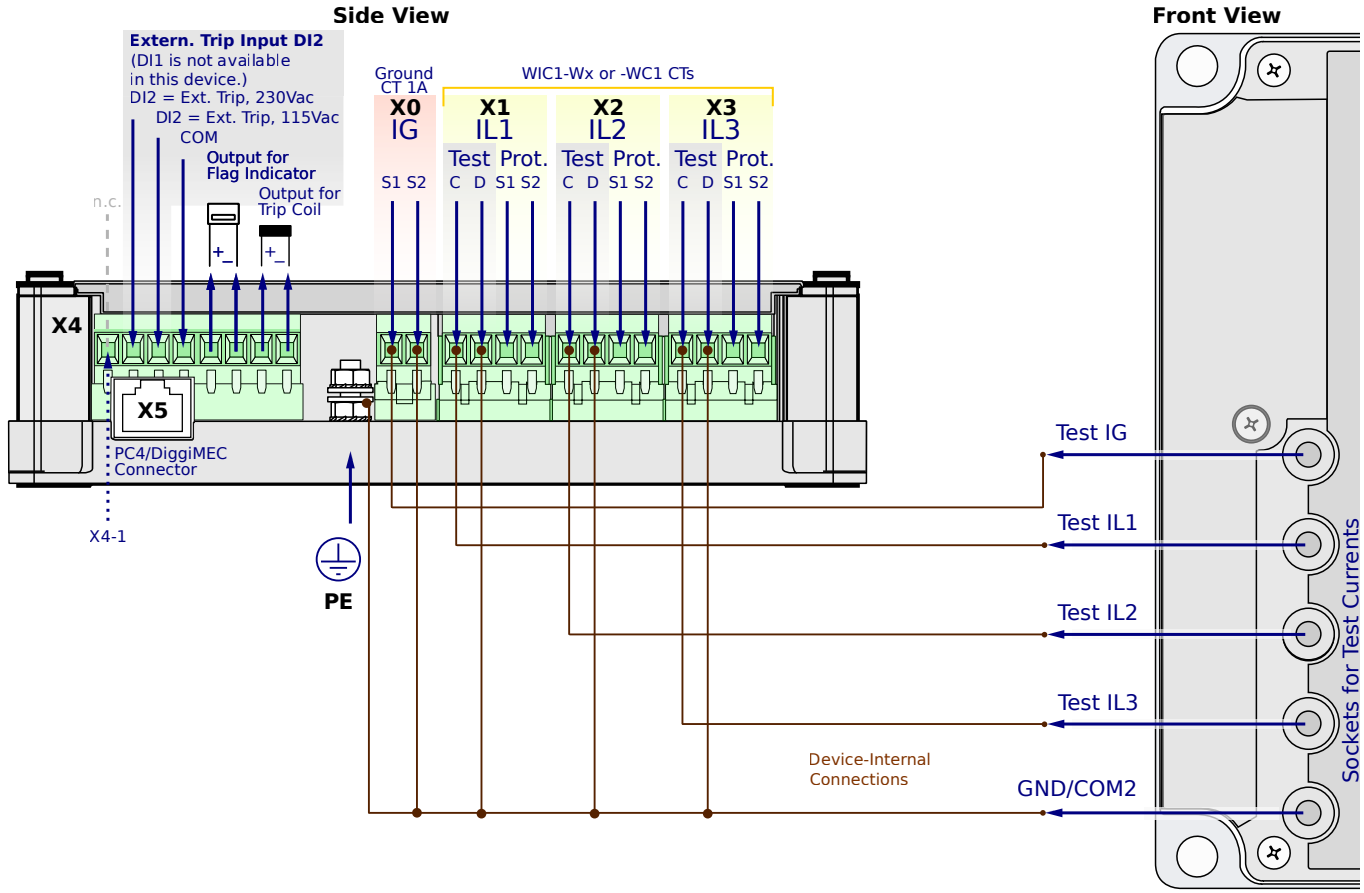


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0PA0

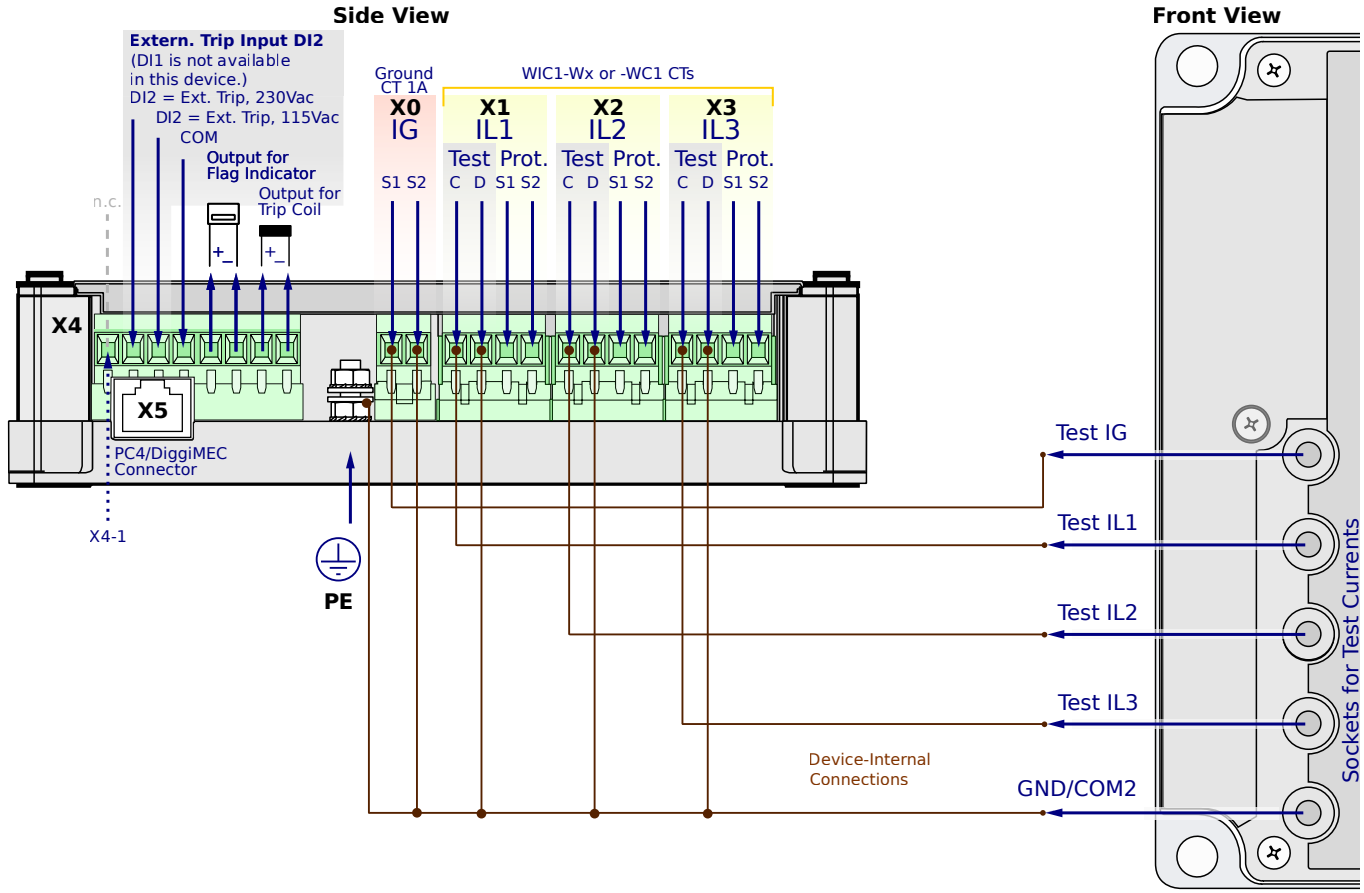


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF0PAH

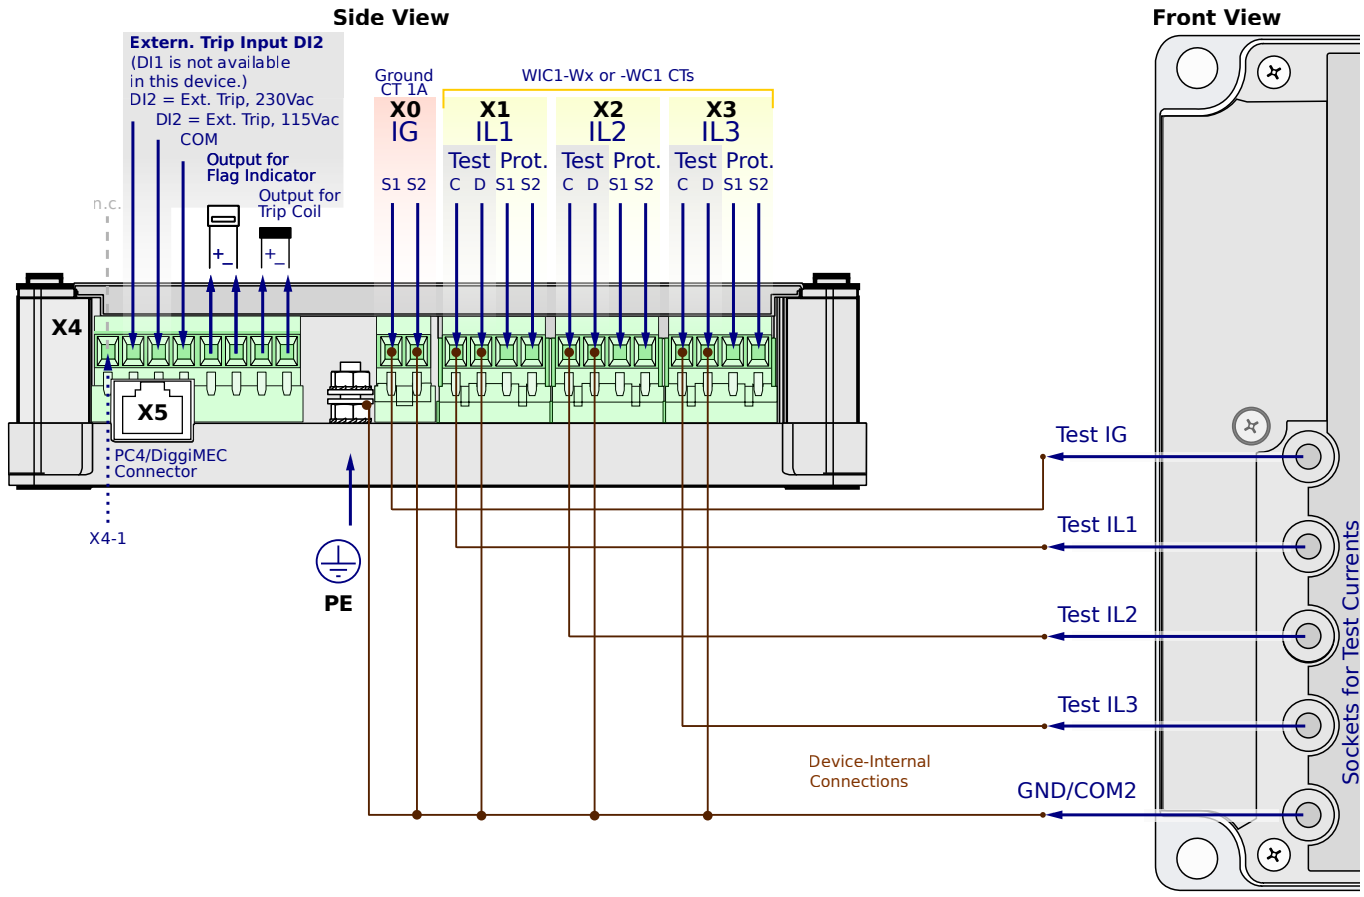


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1SA0

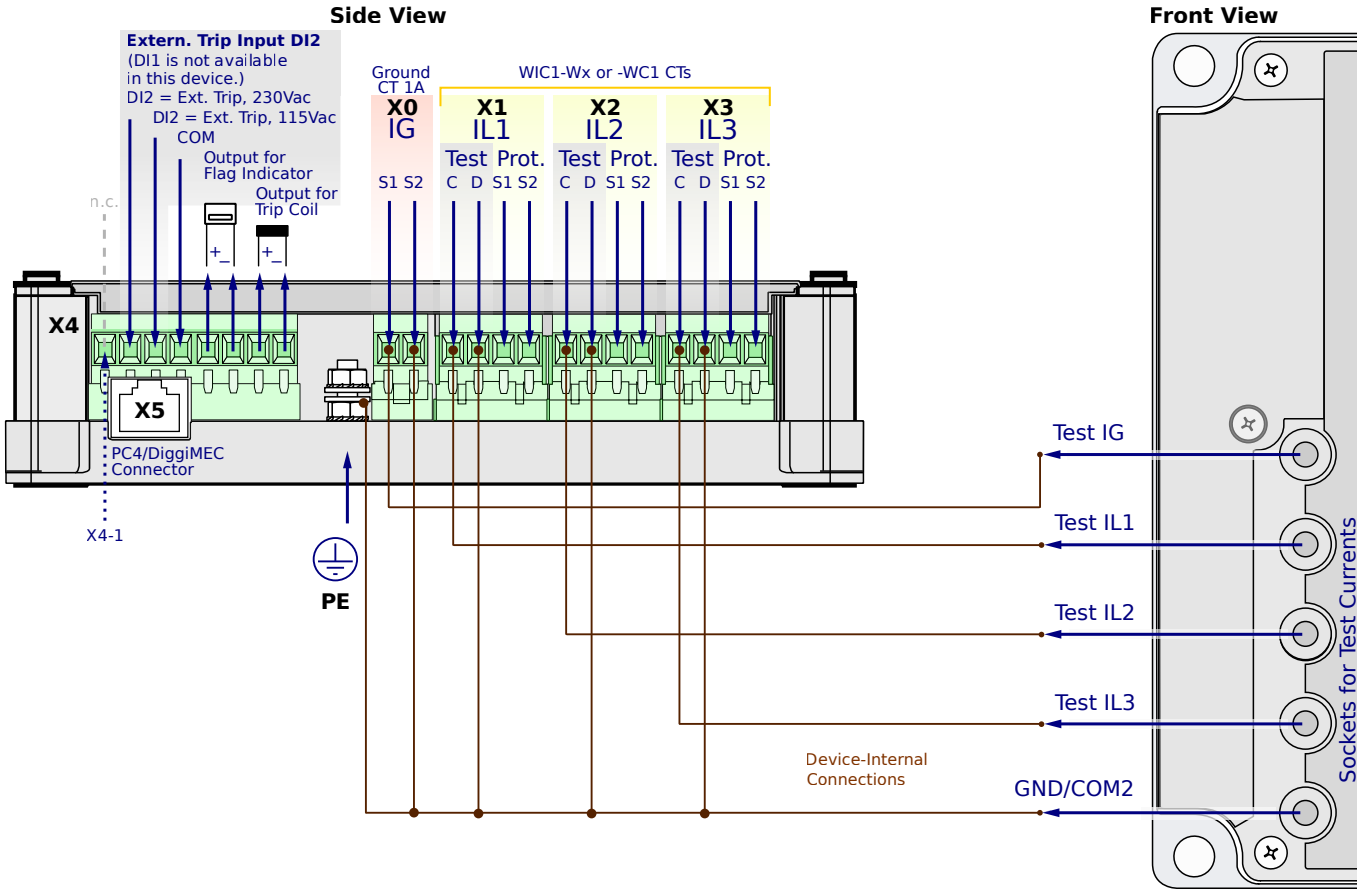


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1SAH

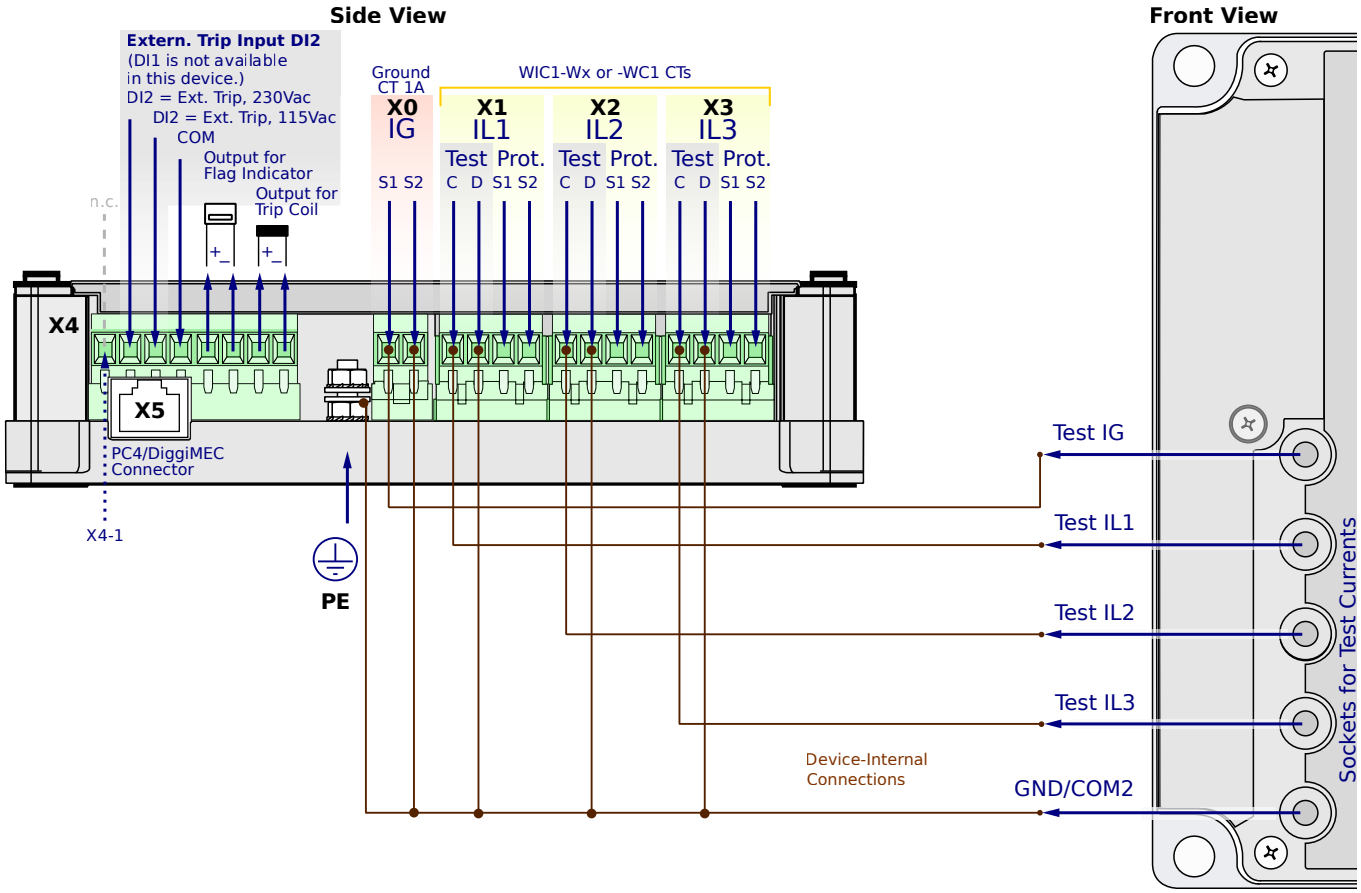


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1AA0

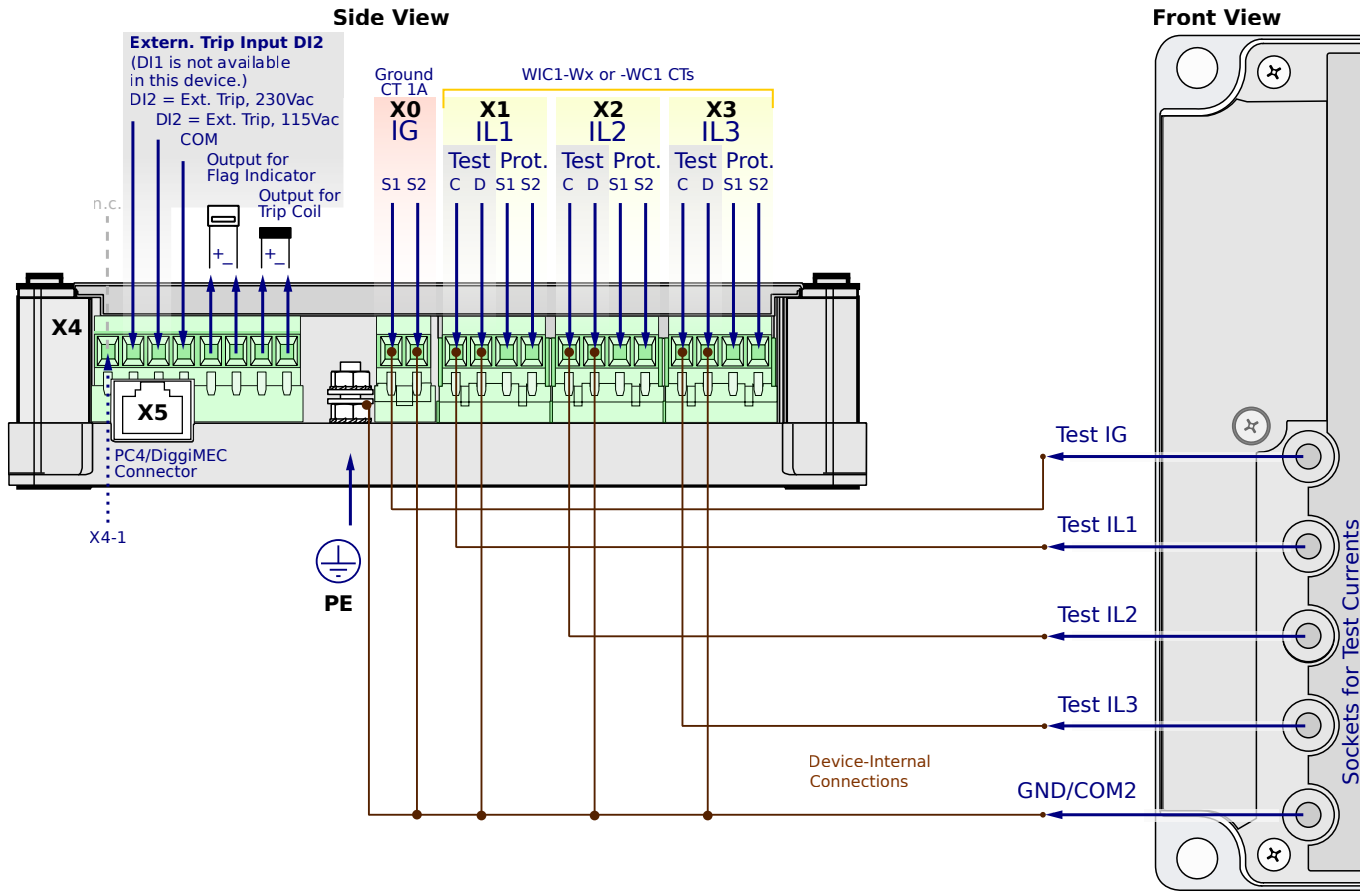


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1AAH

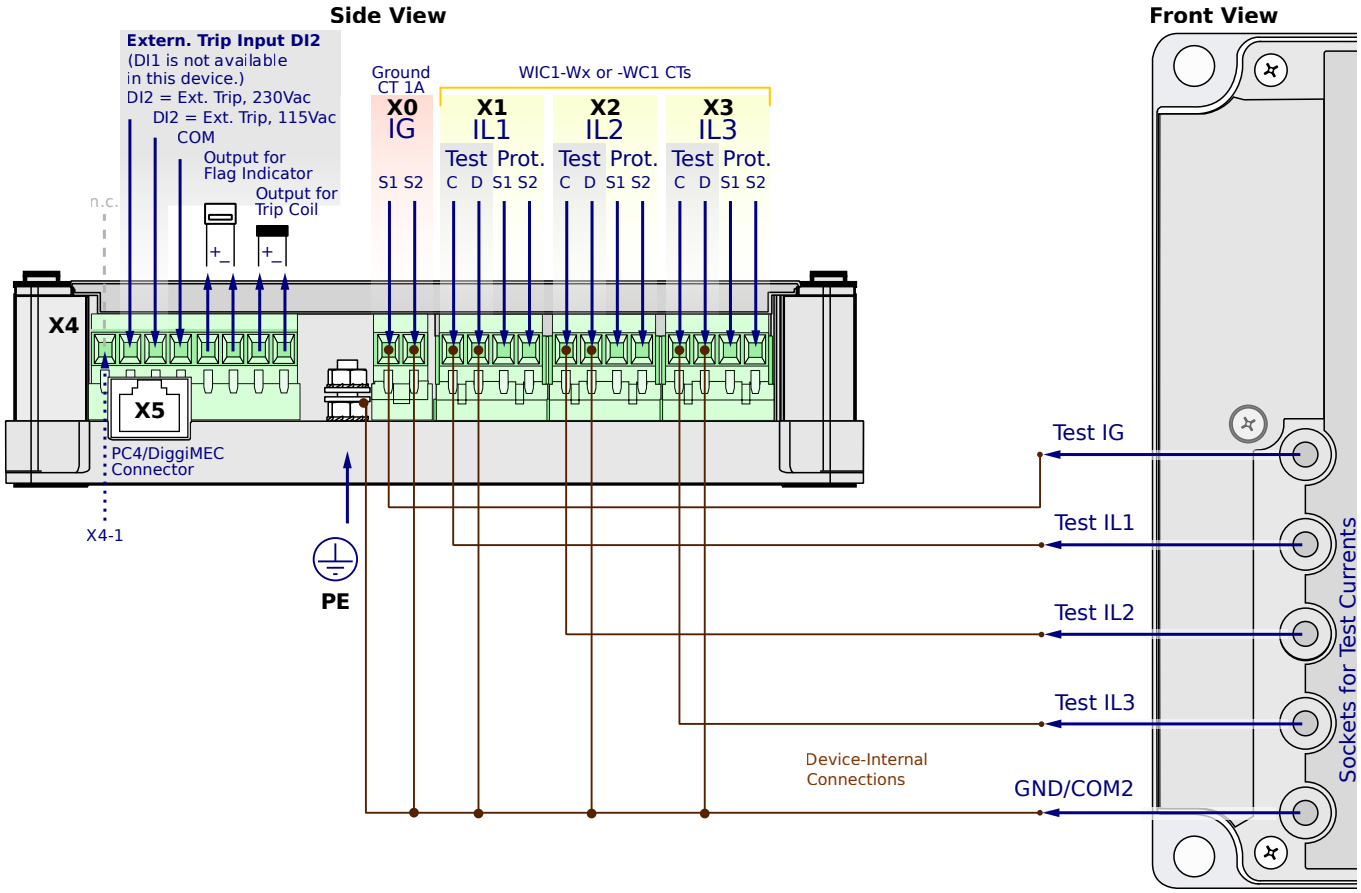


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1PA0

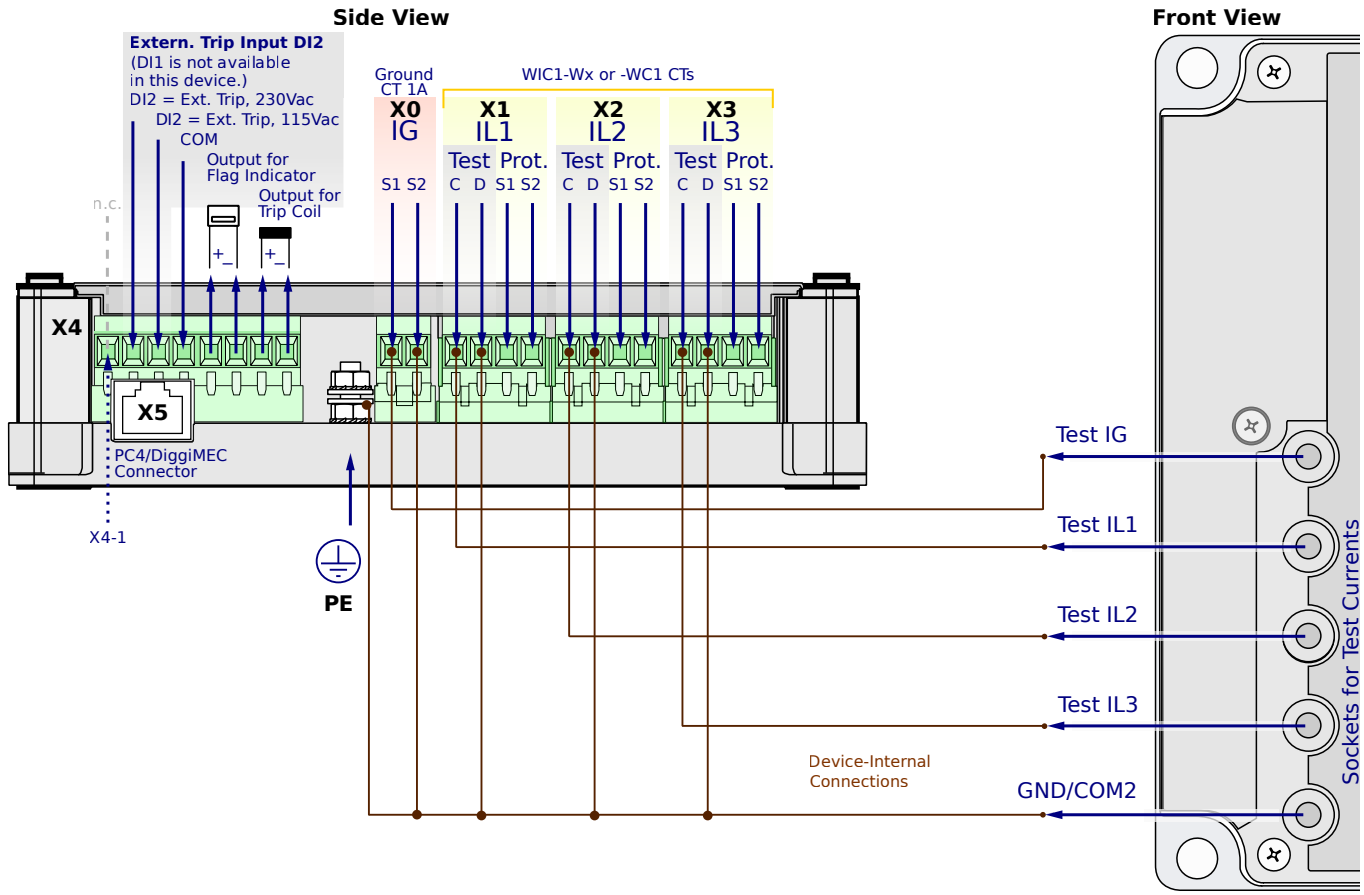


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF1PAH

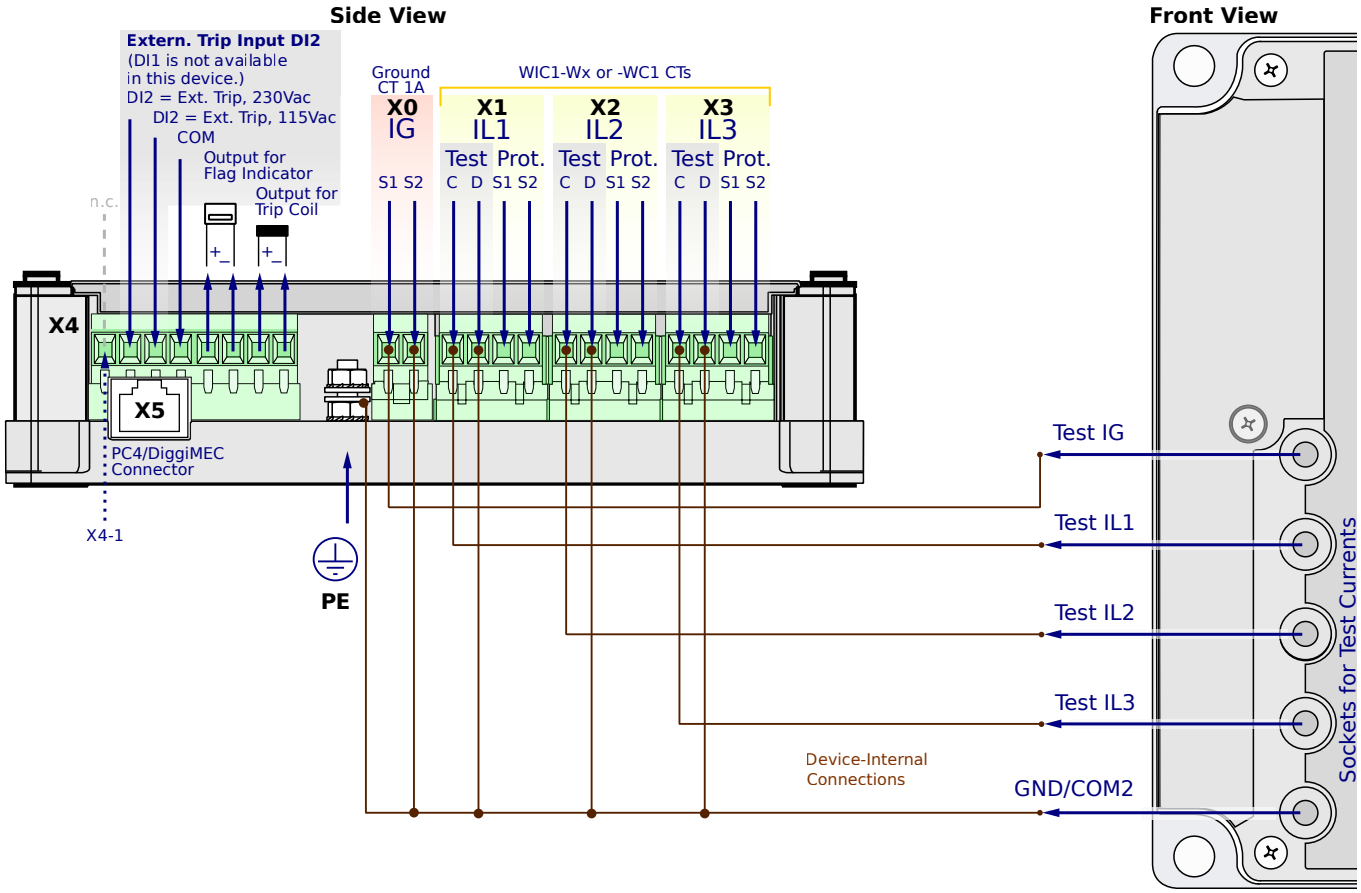


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2SA0

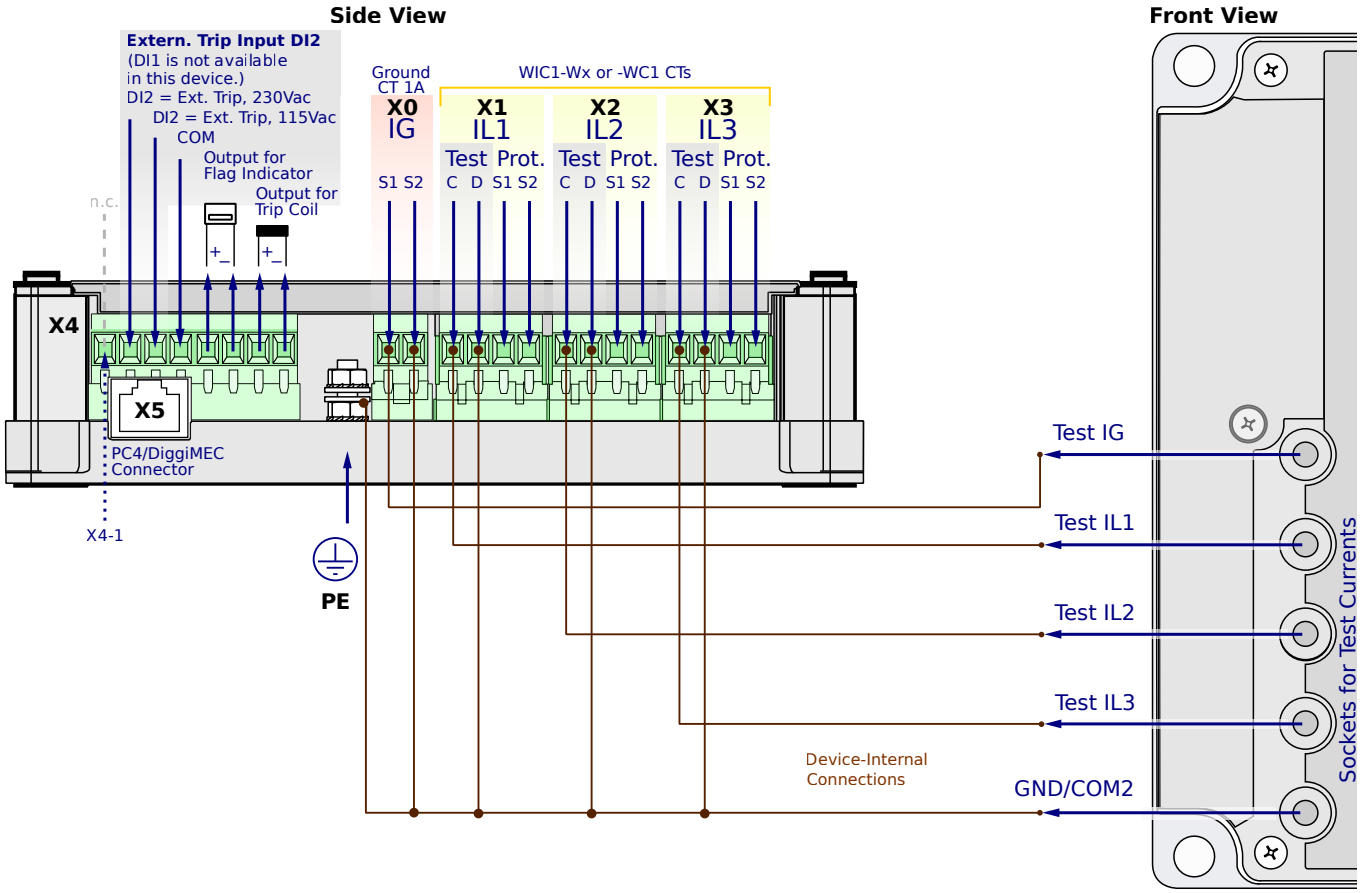


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2SAH

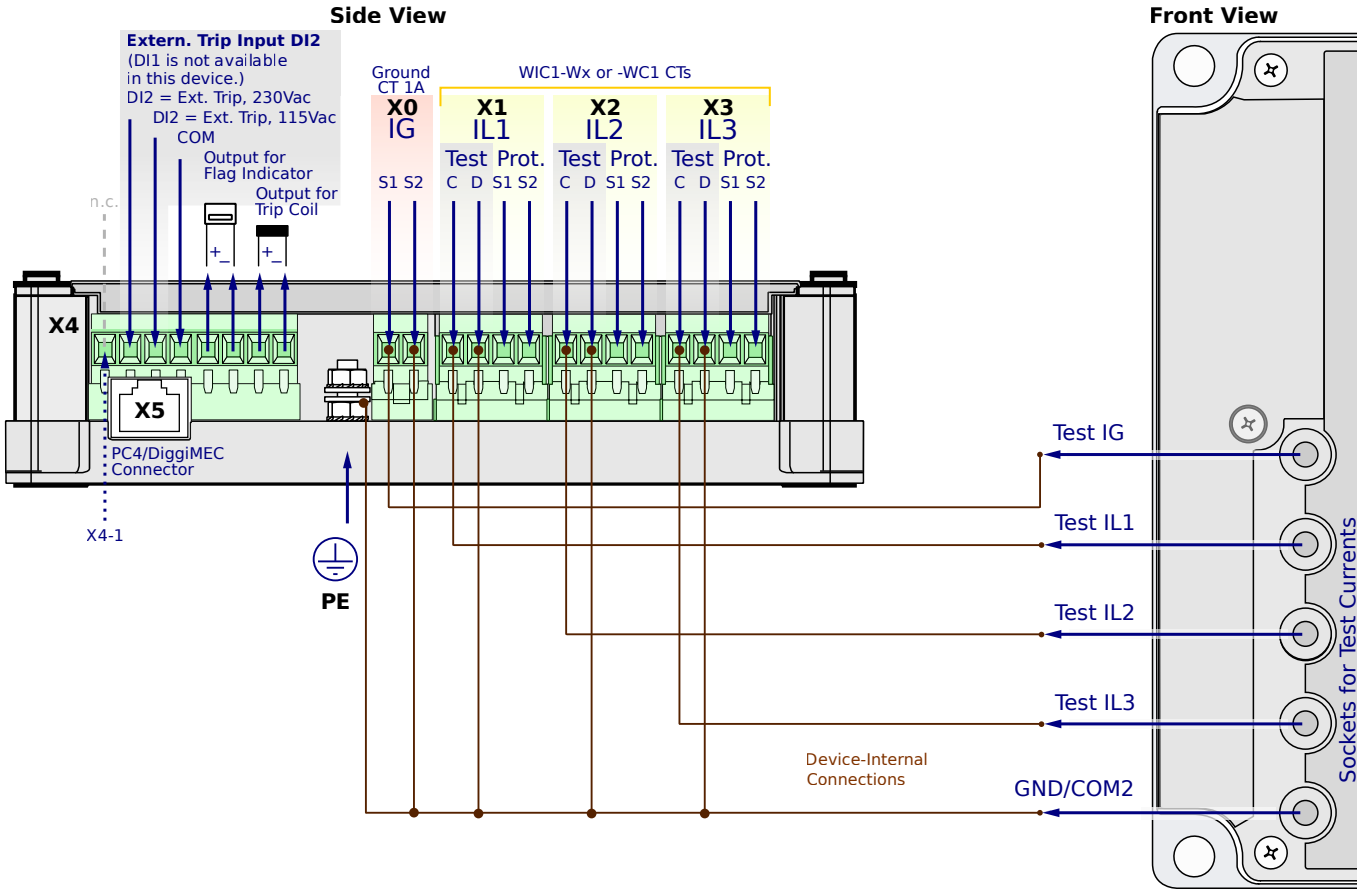


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2AA0

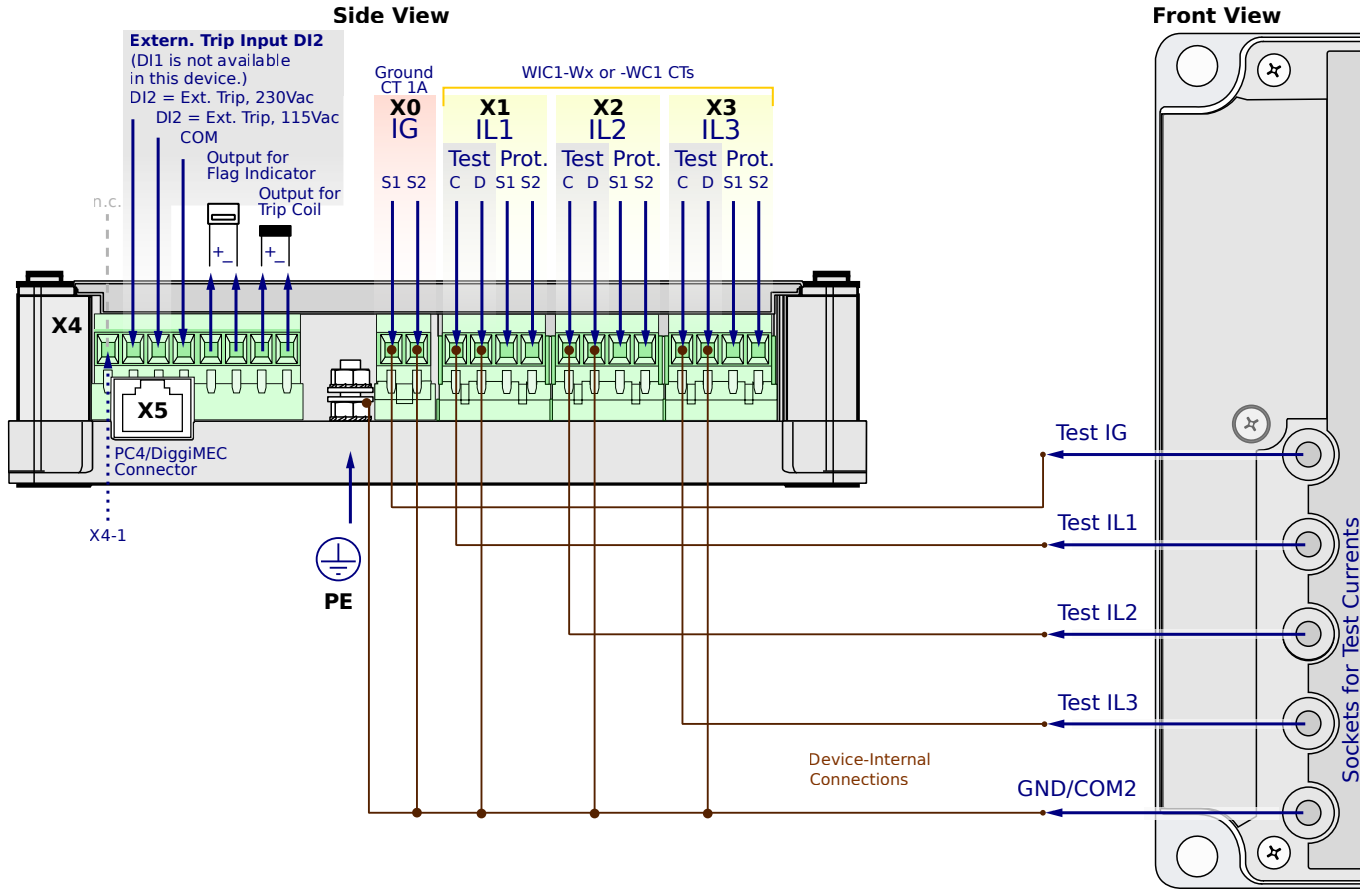


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2AAH

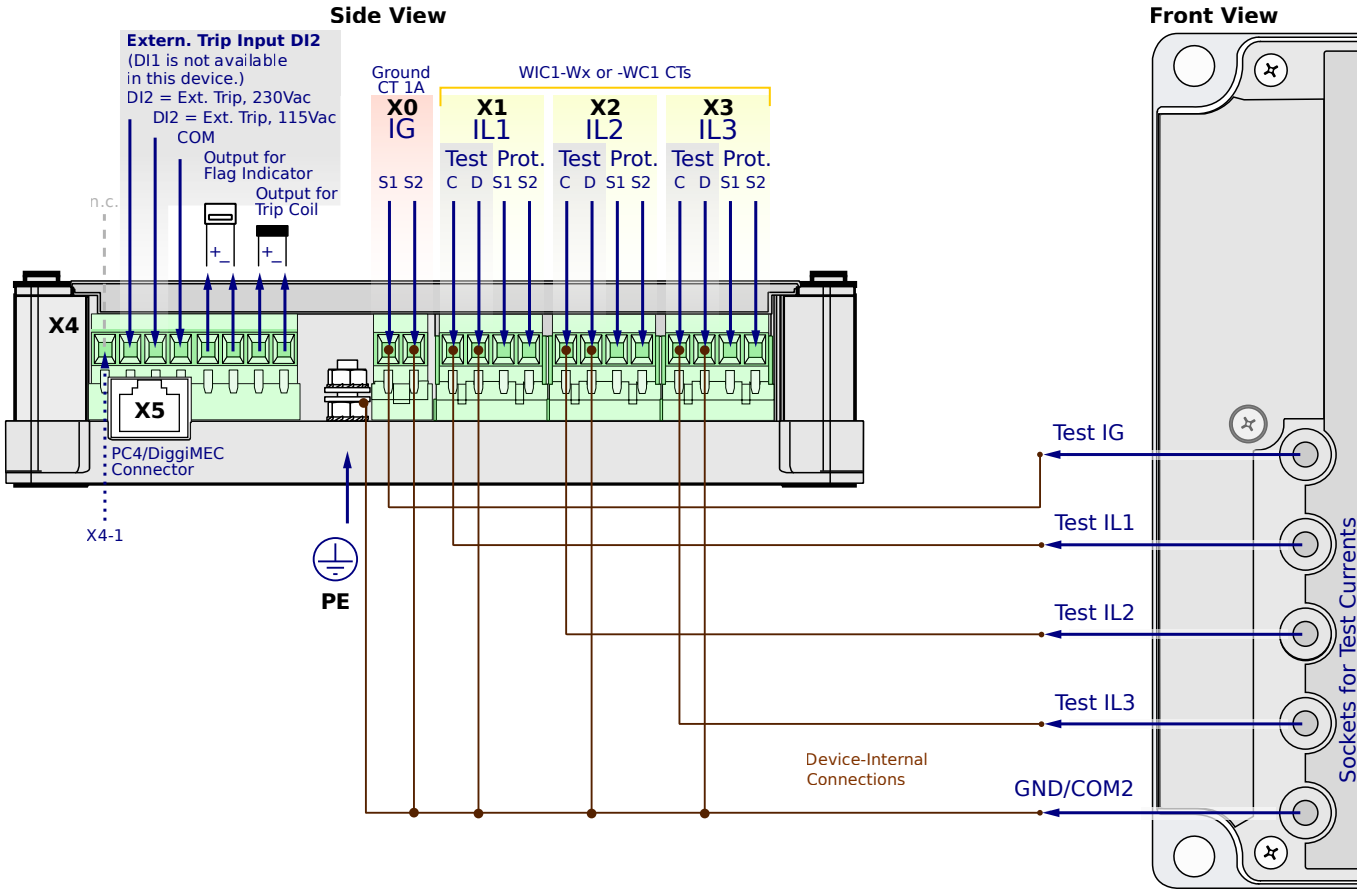


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2PA0

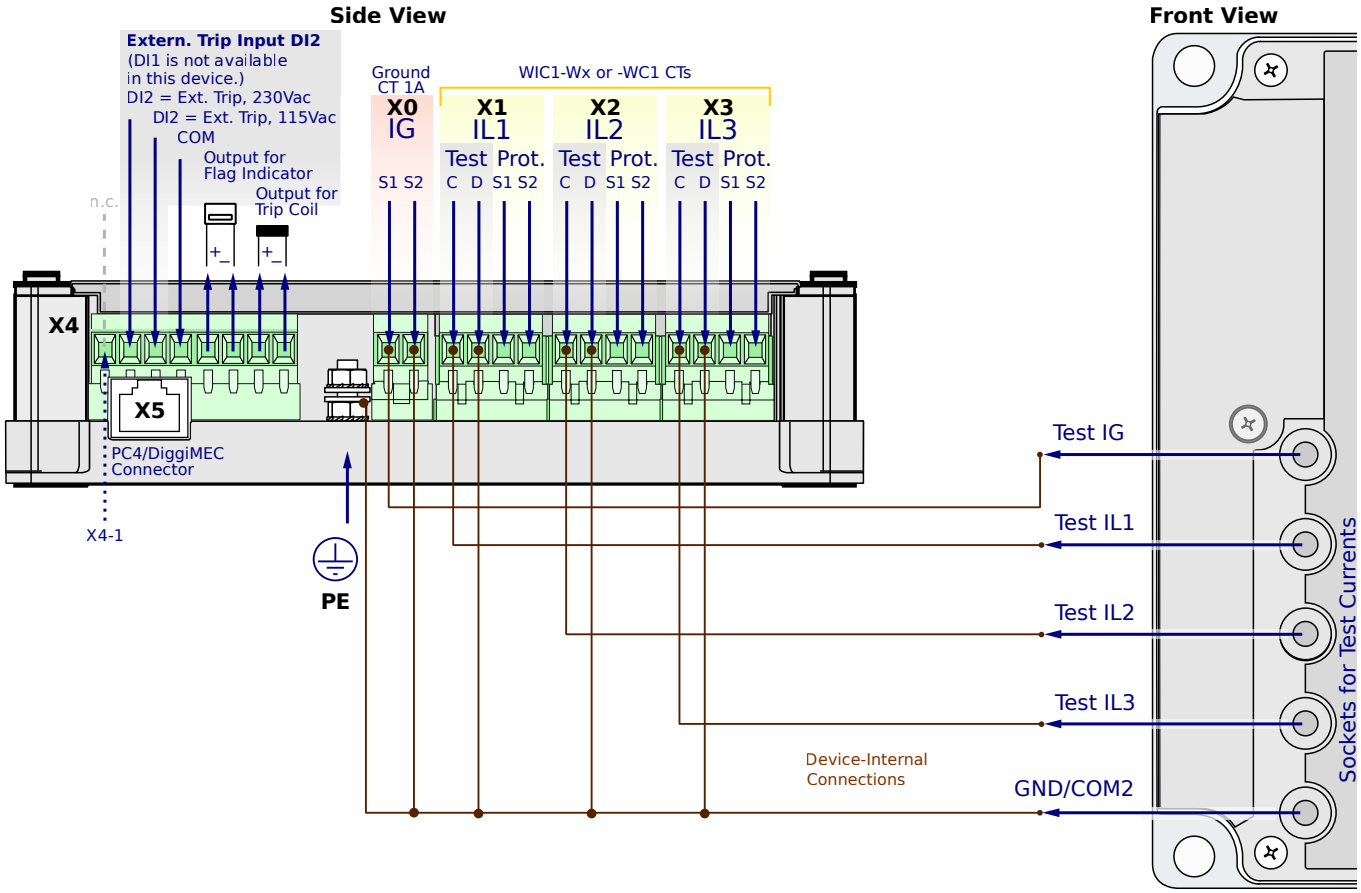


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NF2PAH

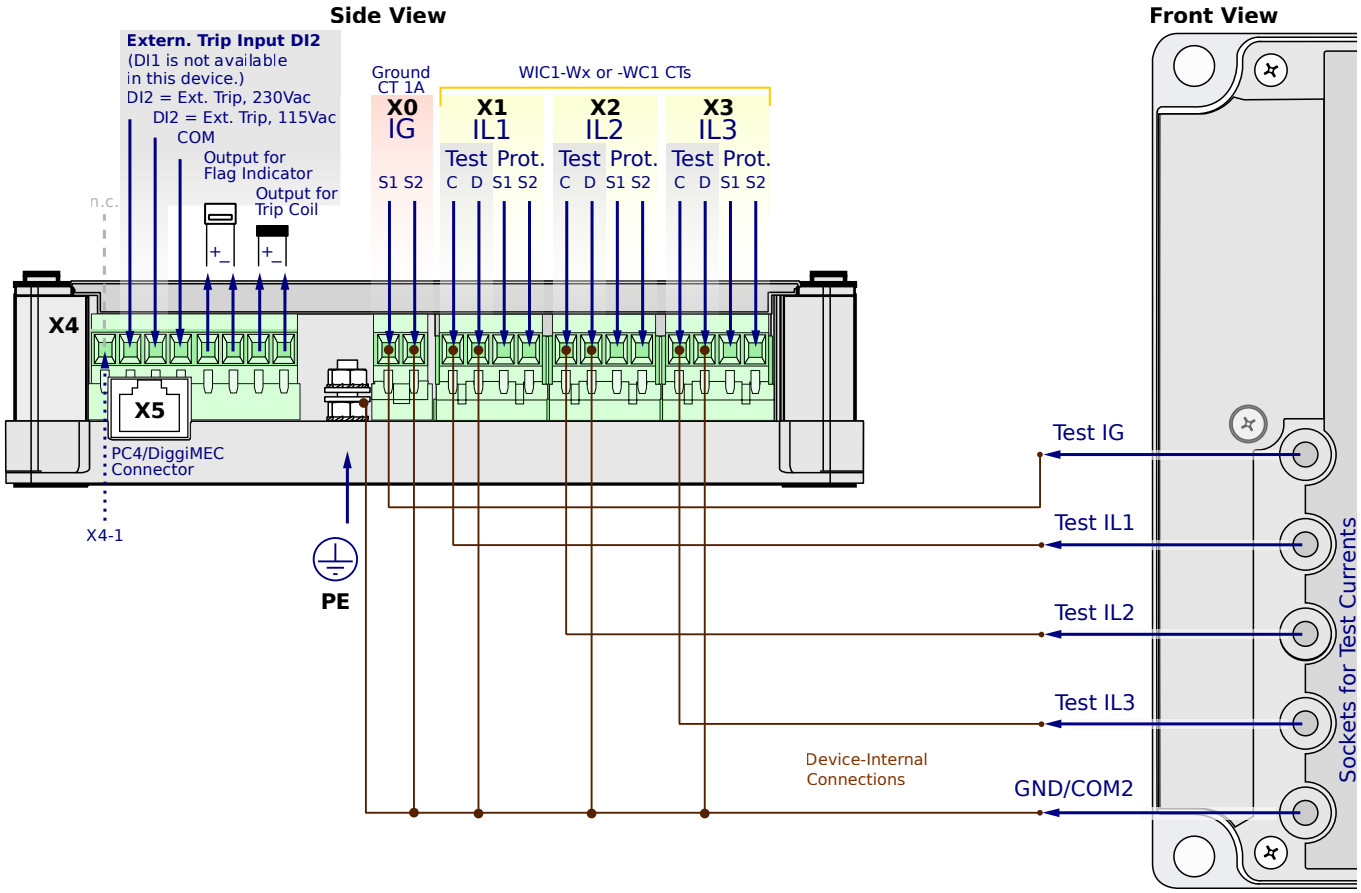


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0SA0

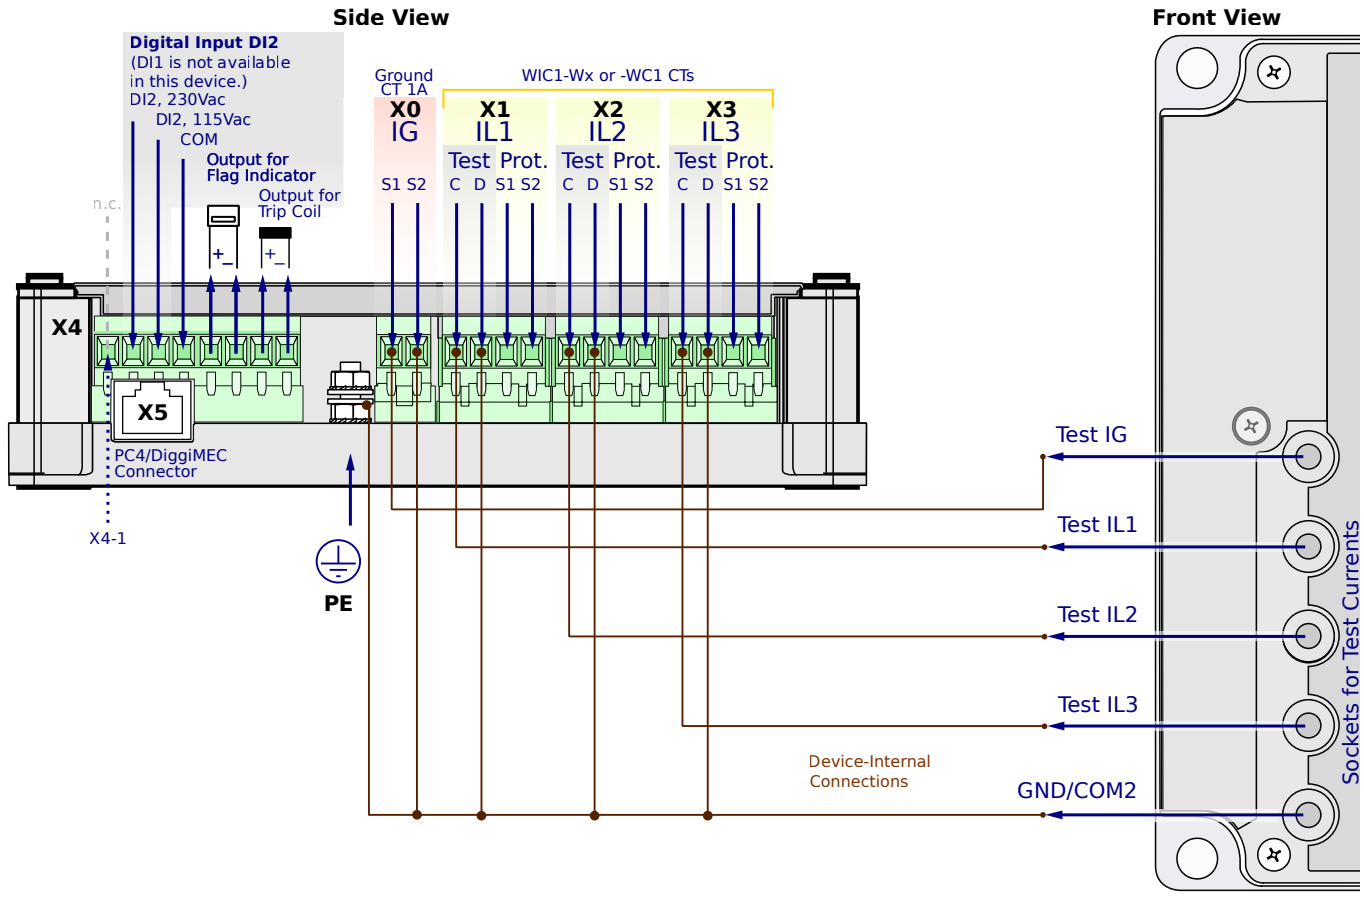


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0SAH

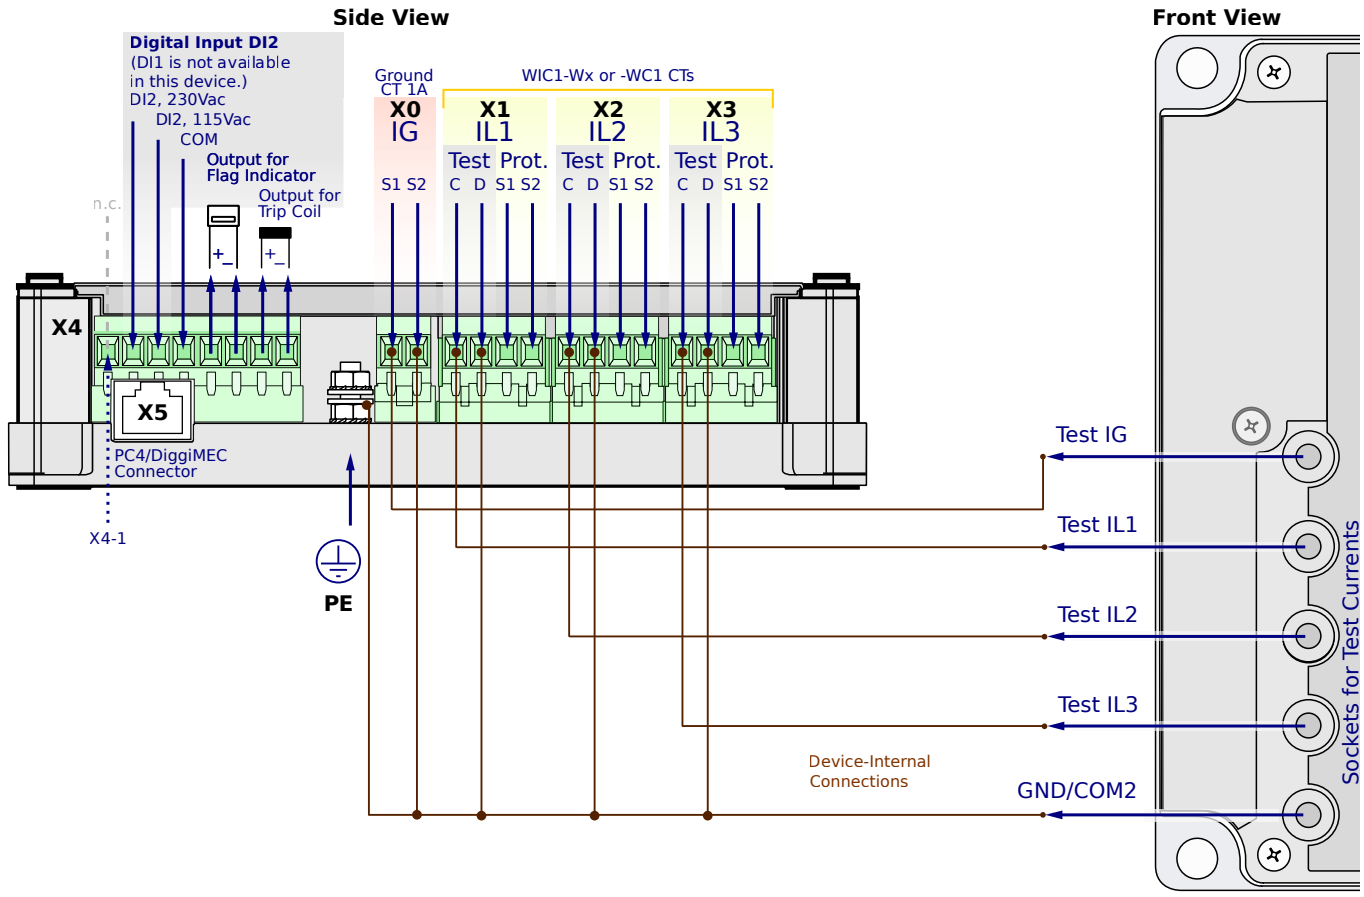


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0AA0

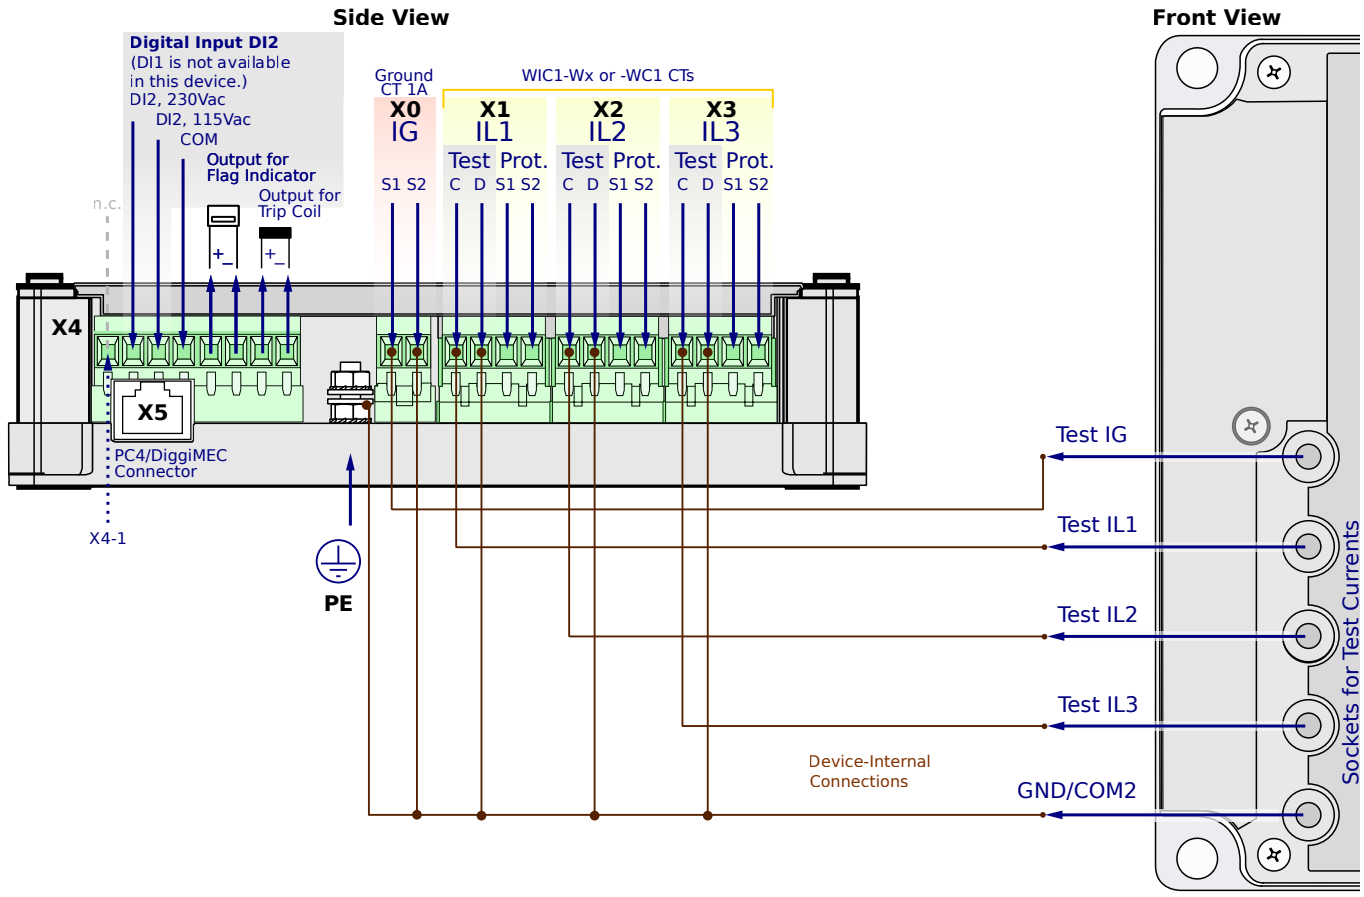


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0AAH

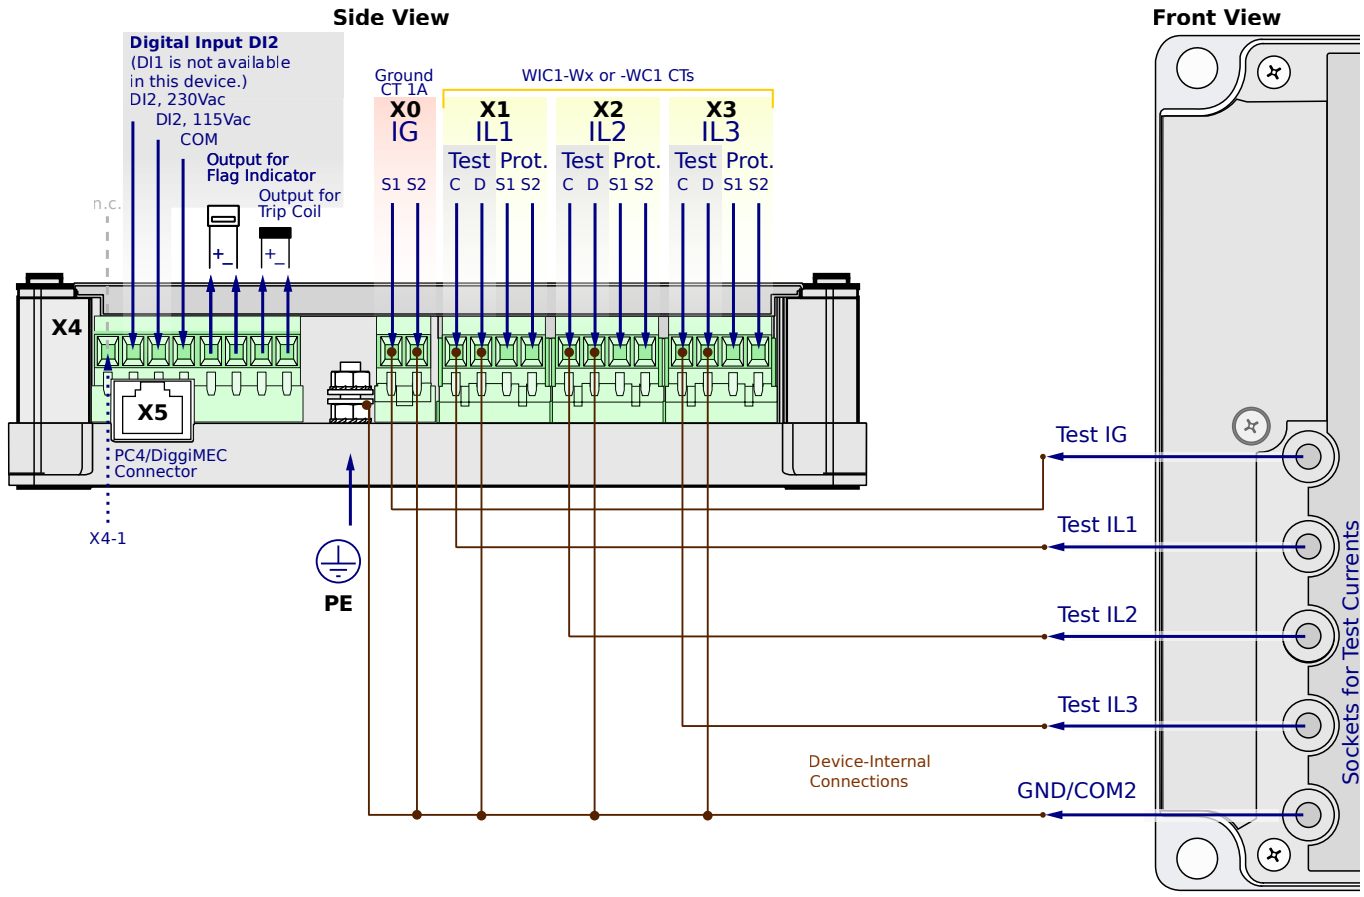


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0PA0

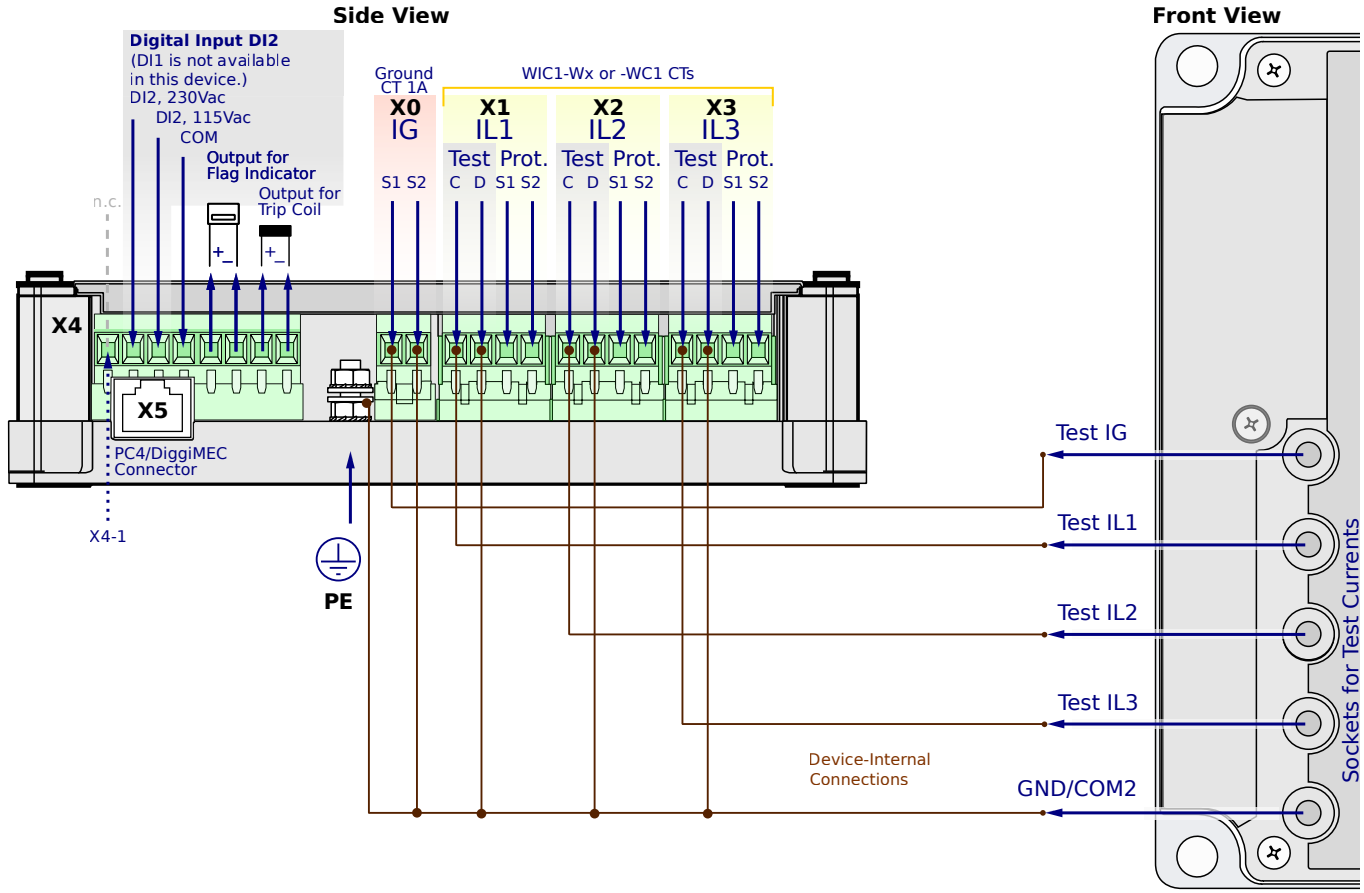


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC0PAH

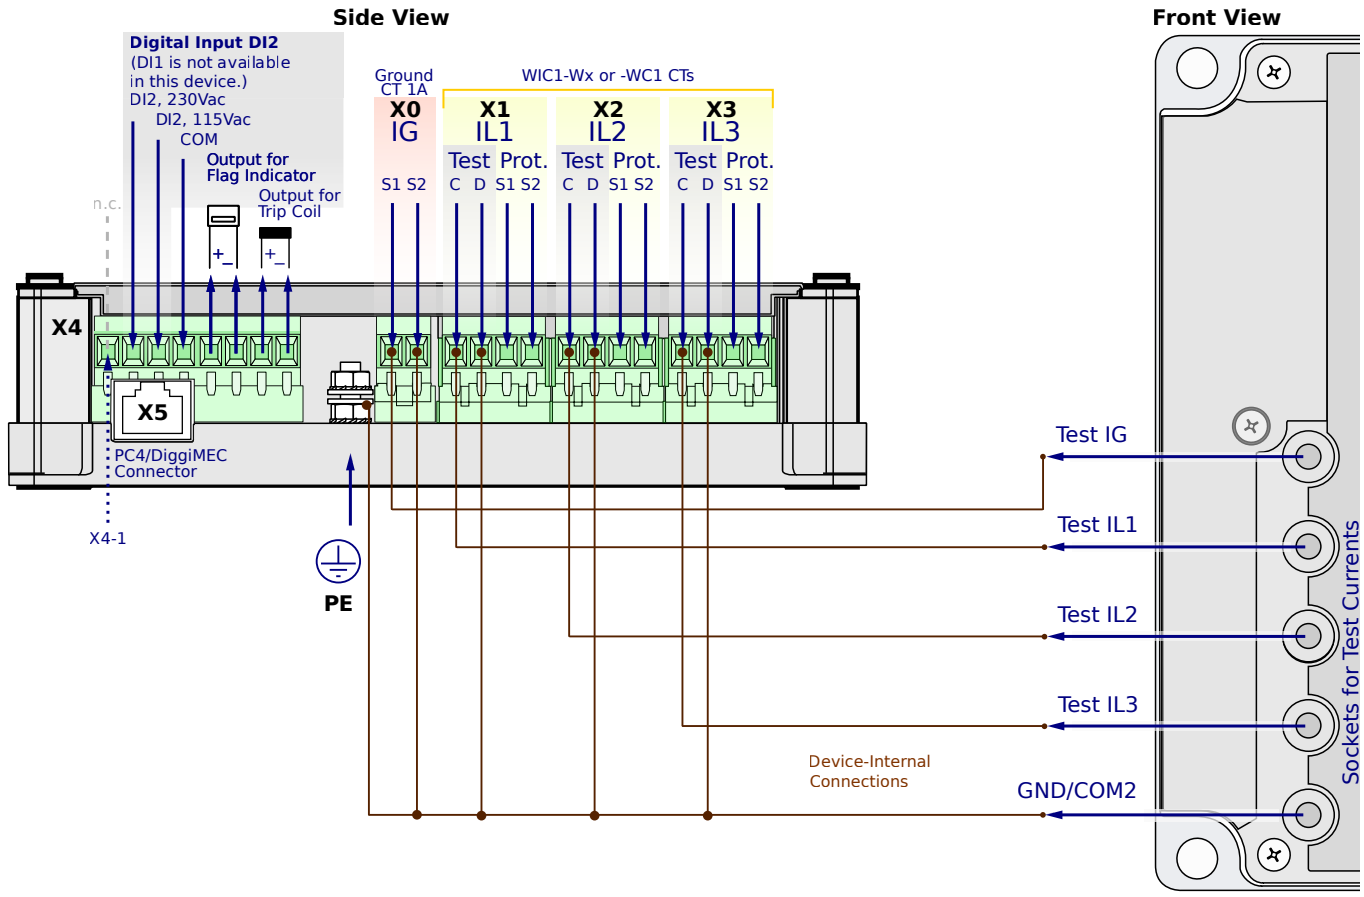


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1SA0

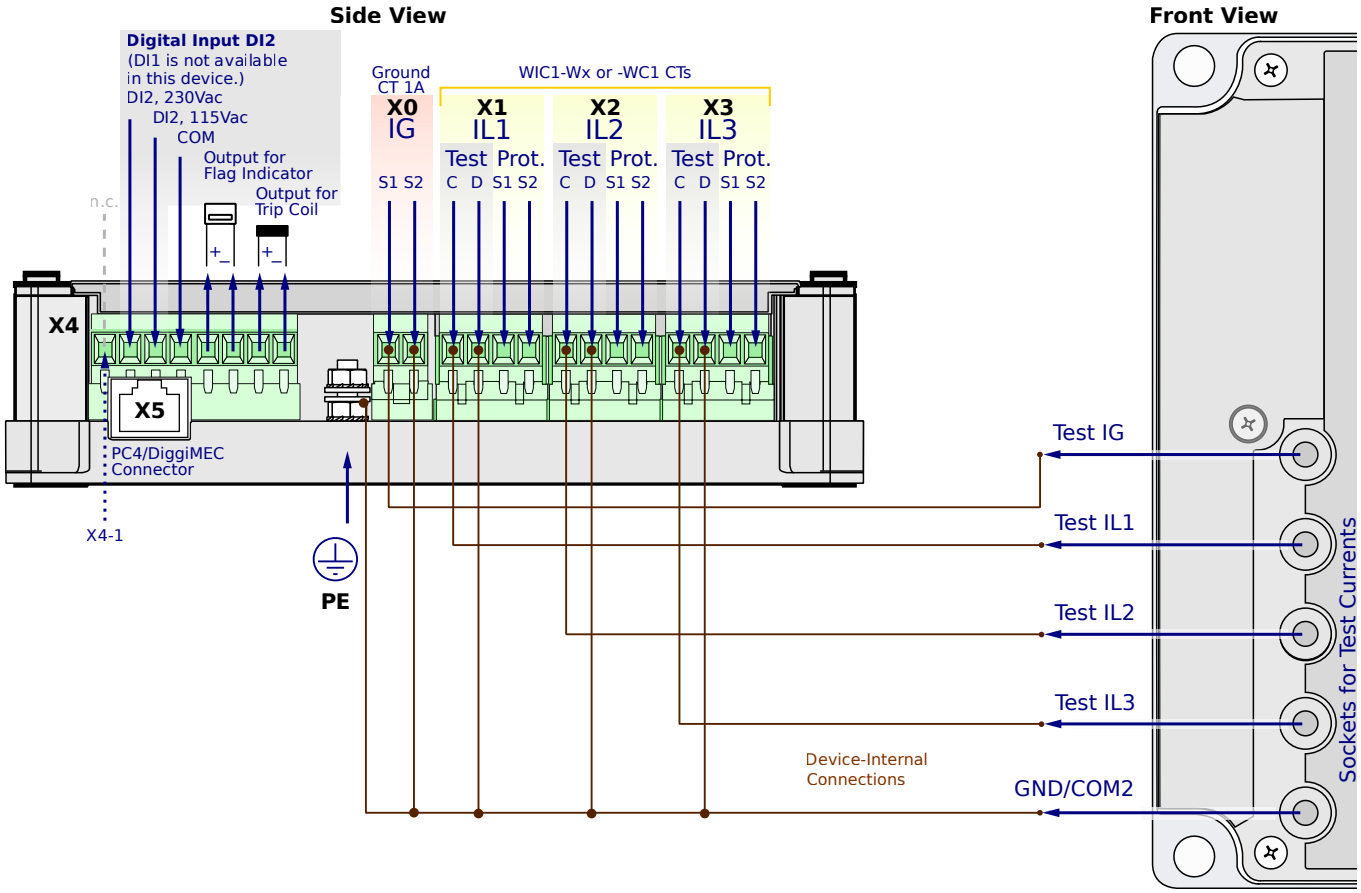


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1SAH

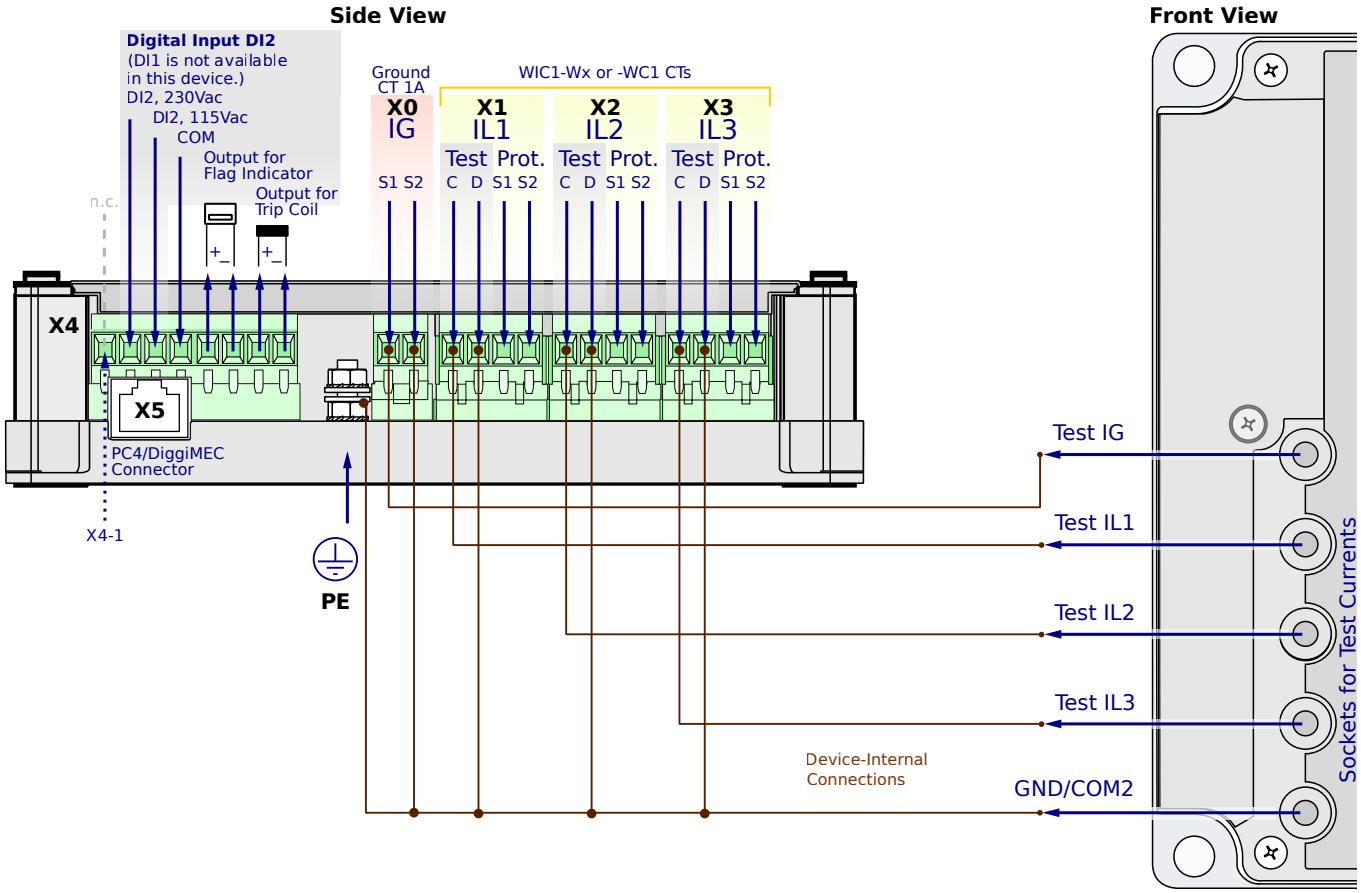


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1AA0

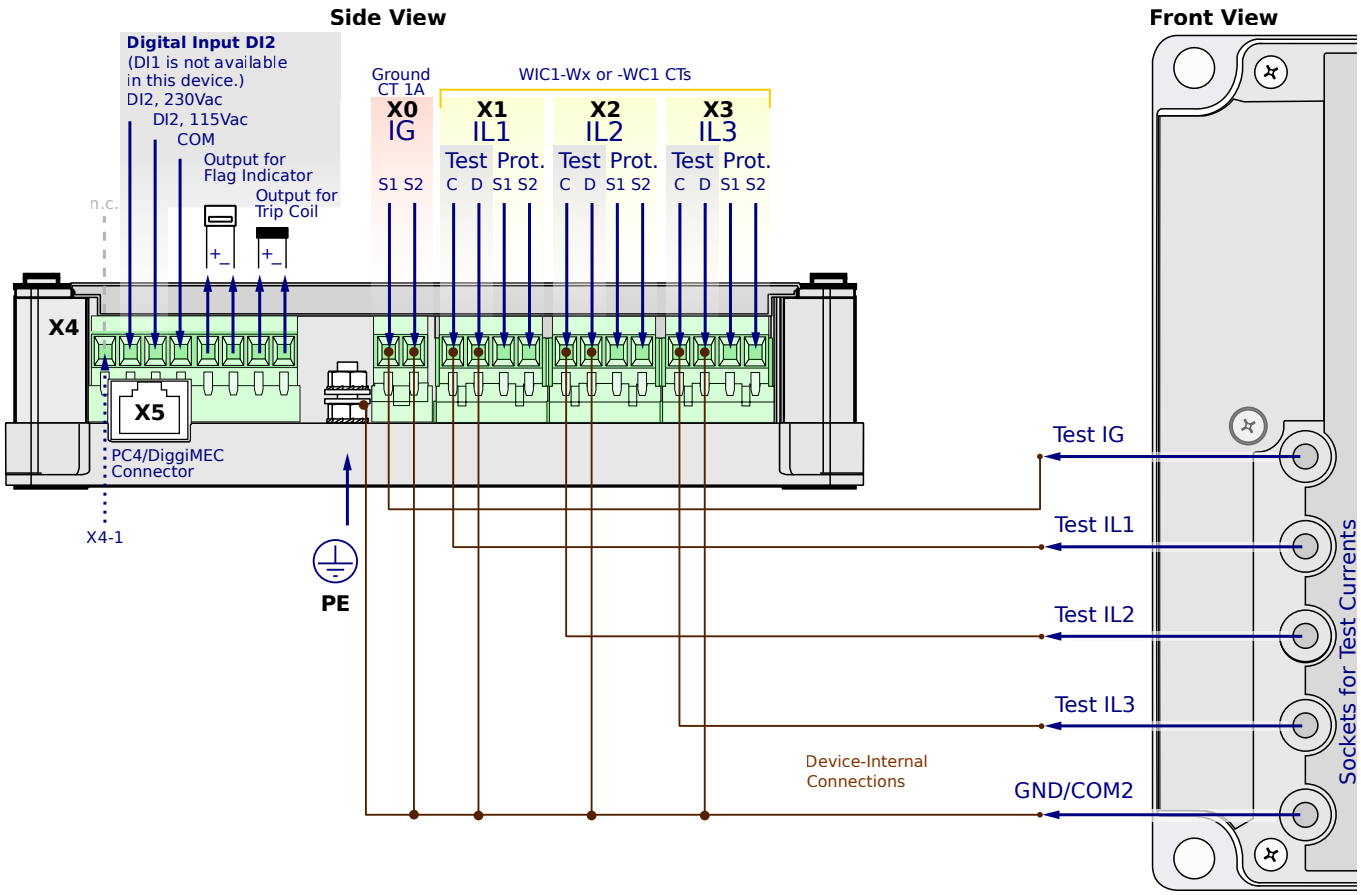


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1AAH

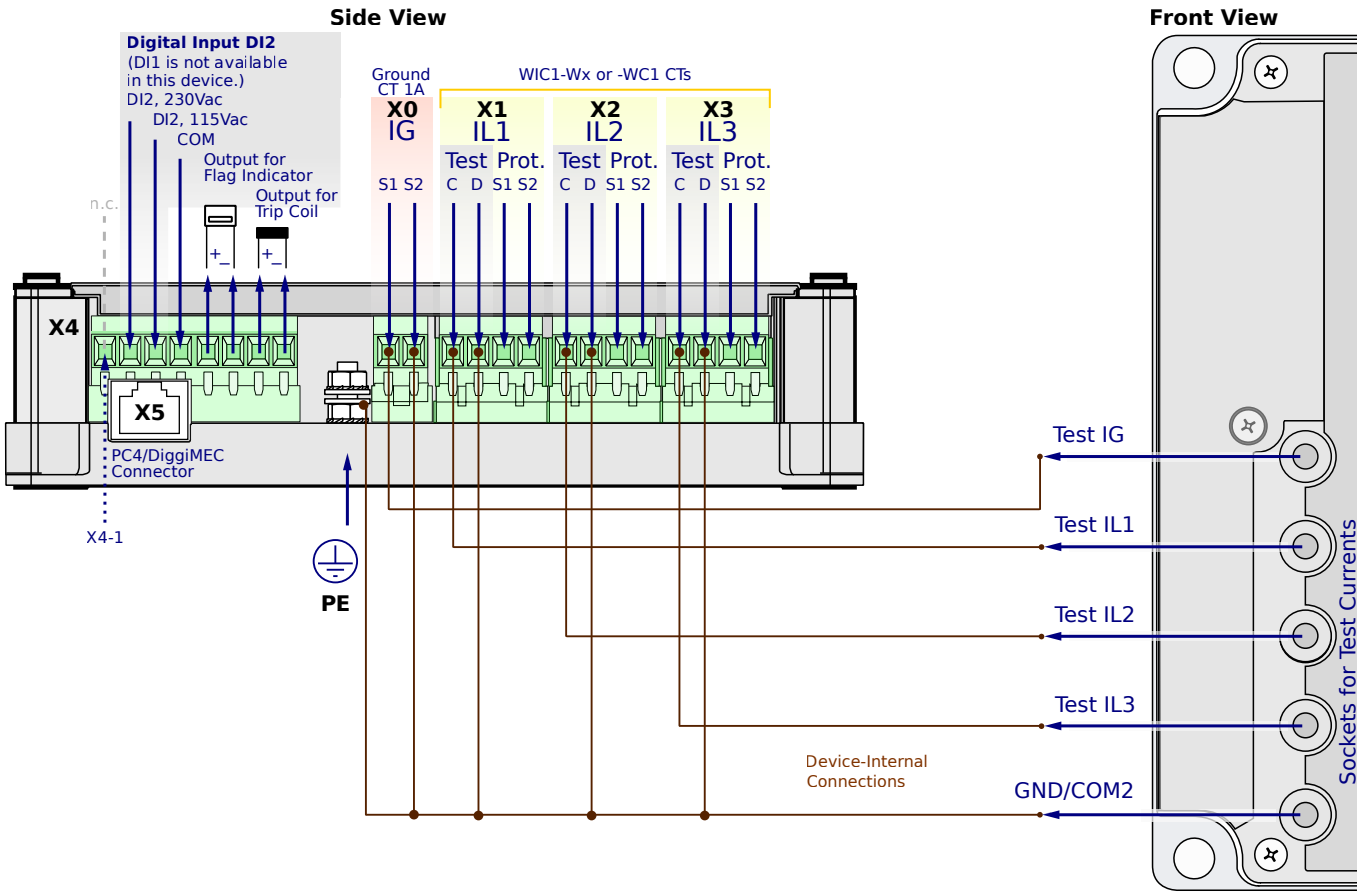


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1PA0

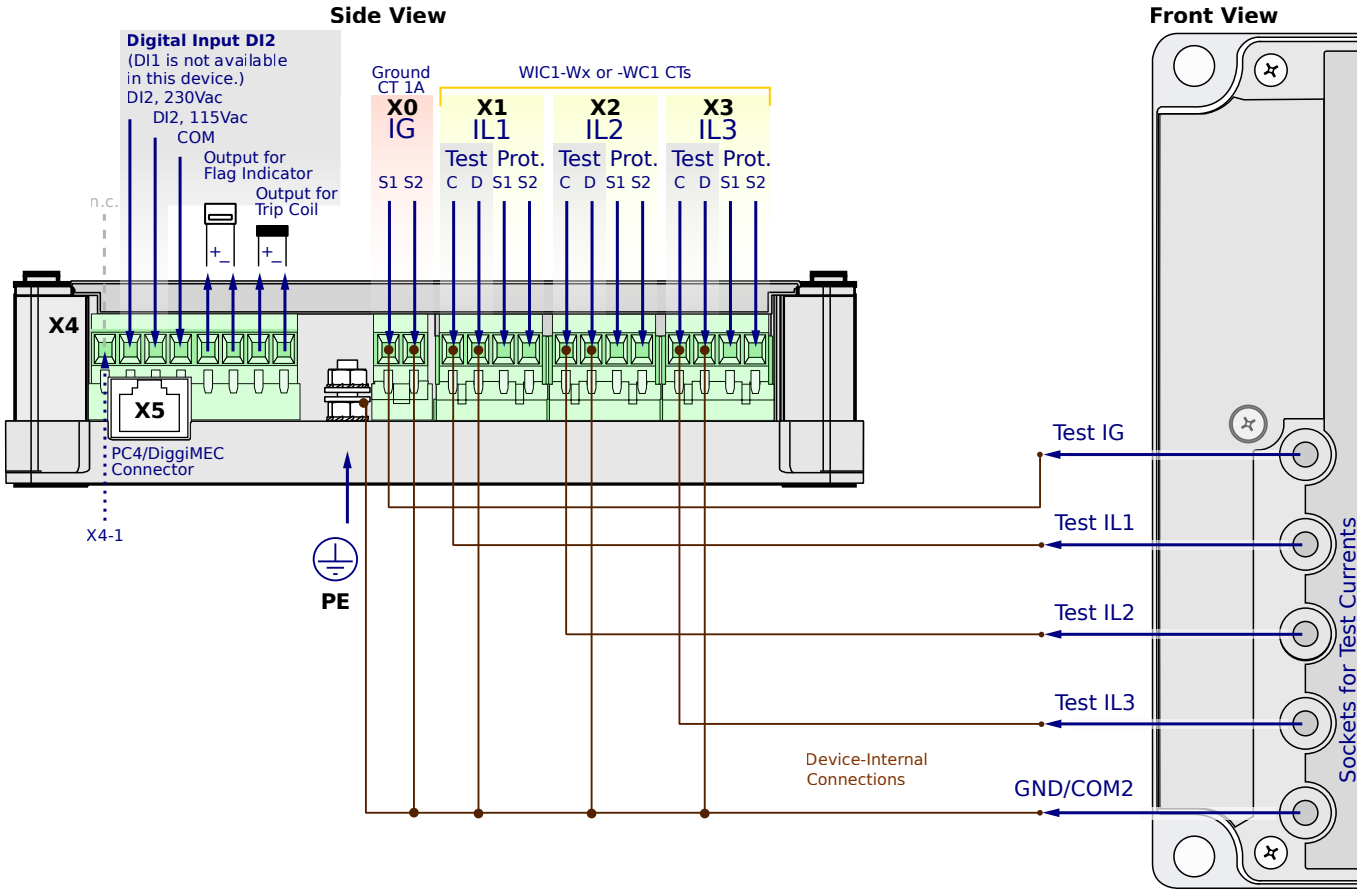


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC1PAH

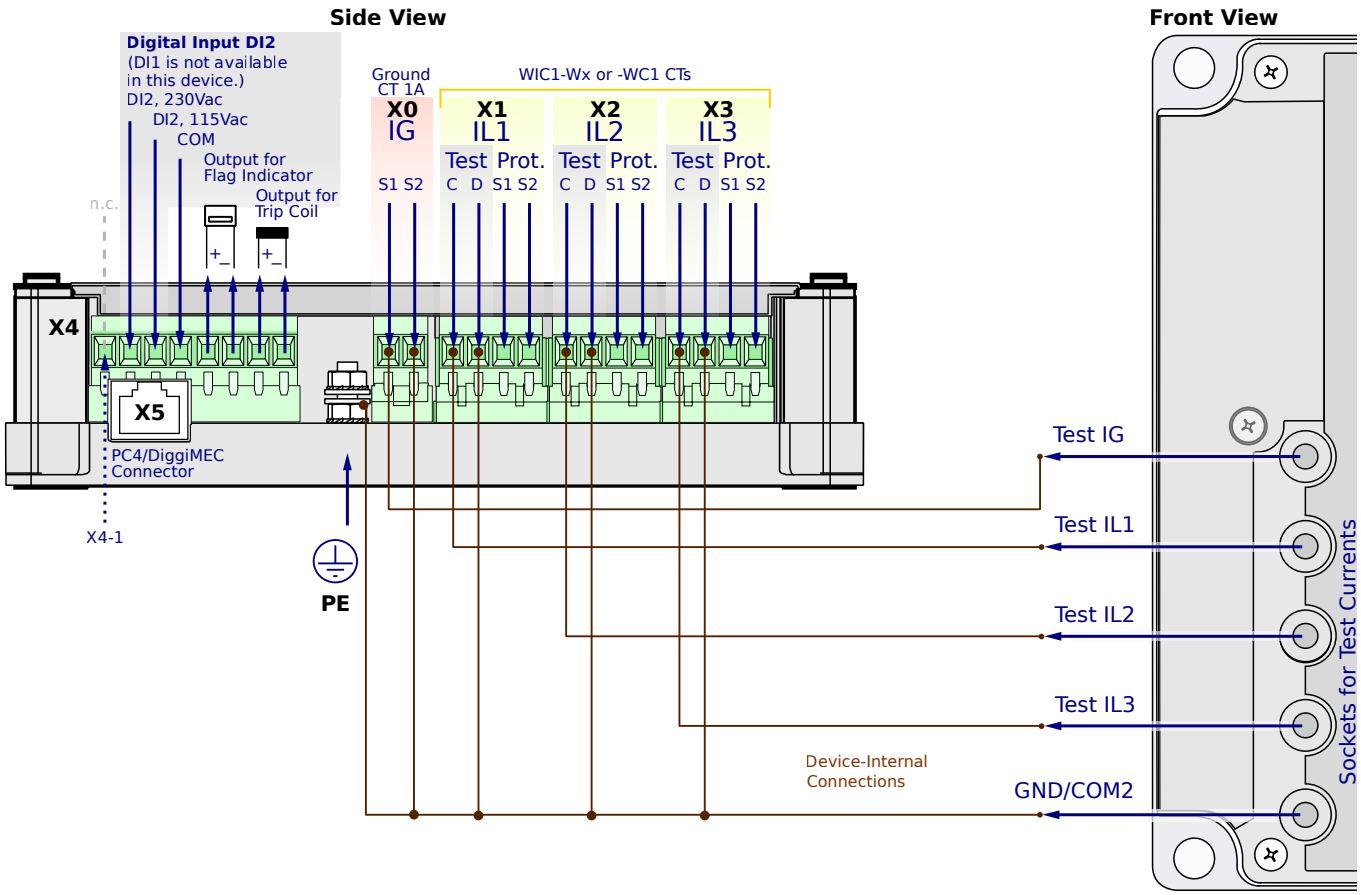


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2SA0

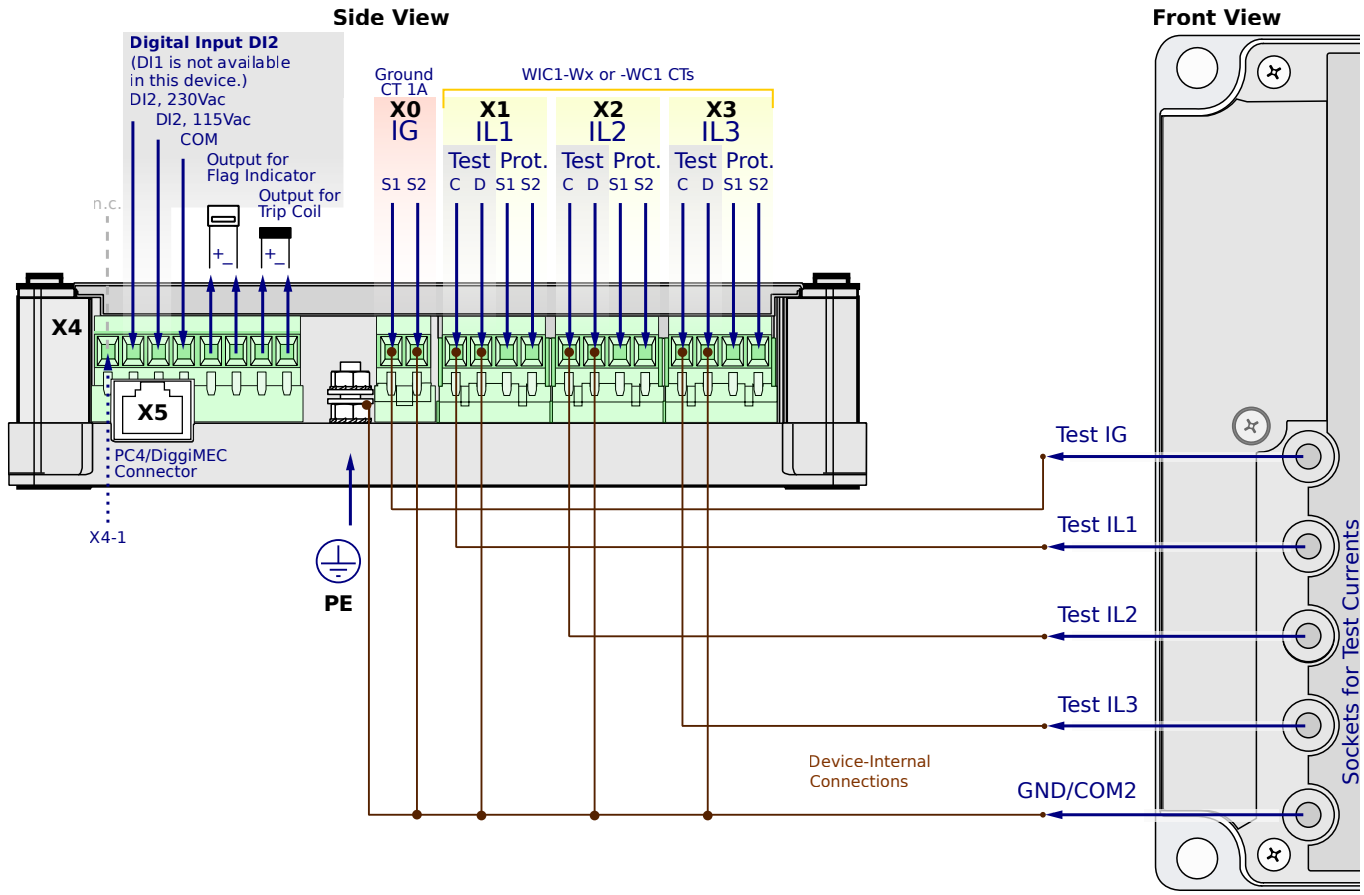


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2SAH

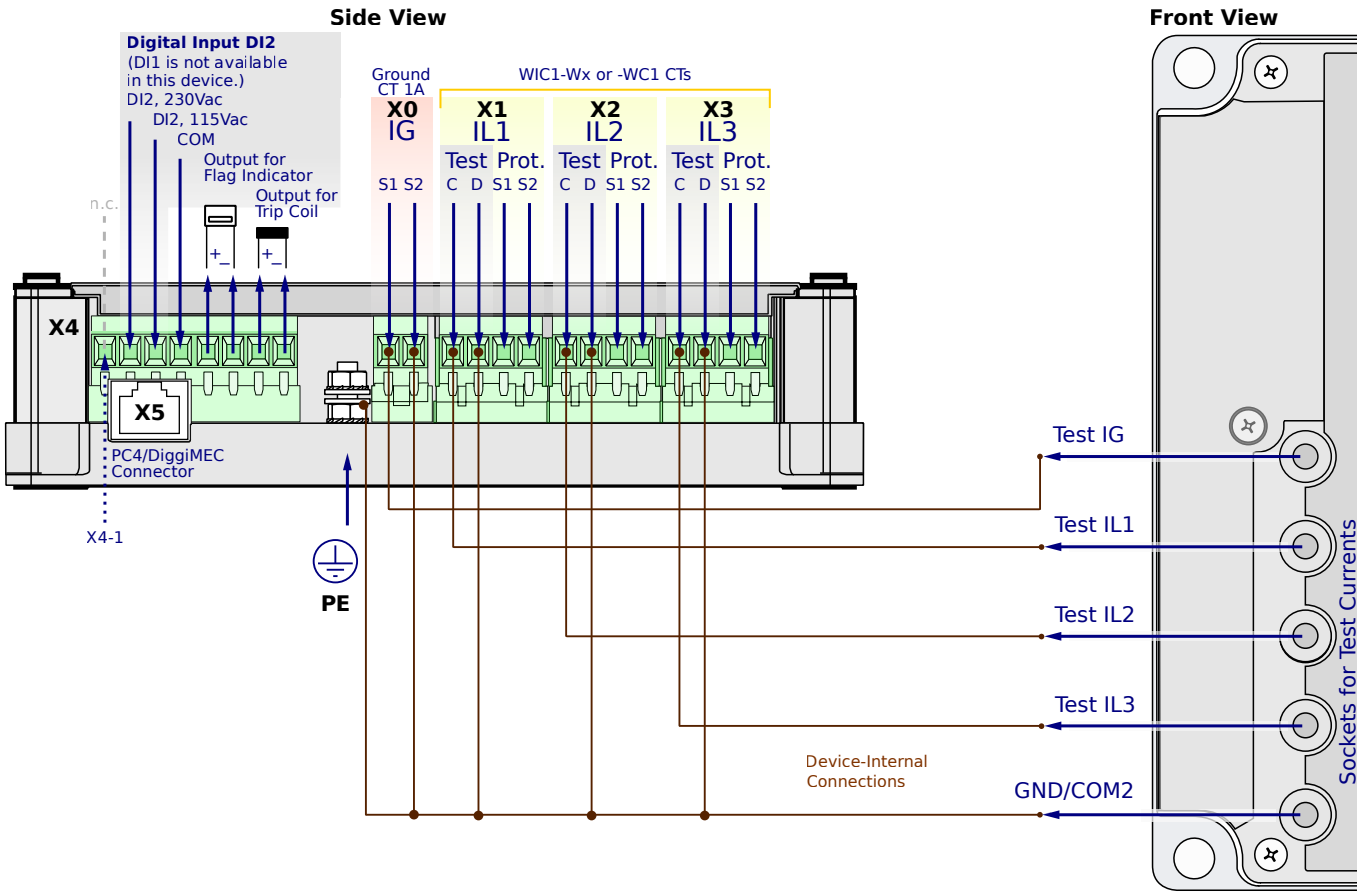


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2AA0

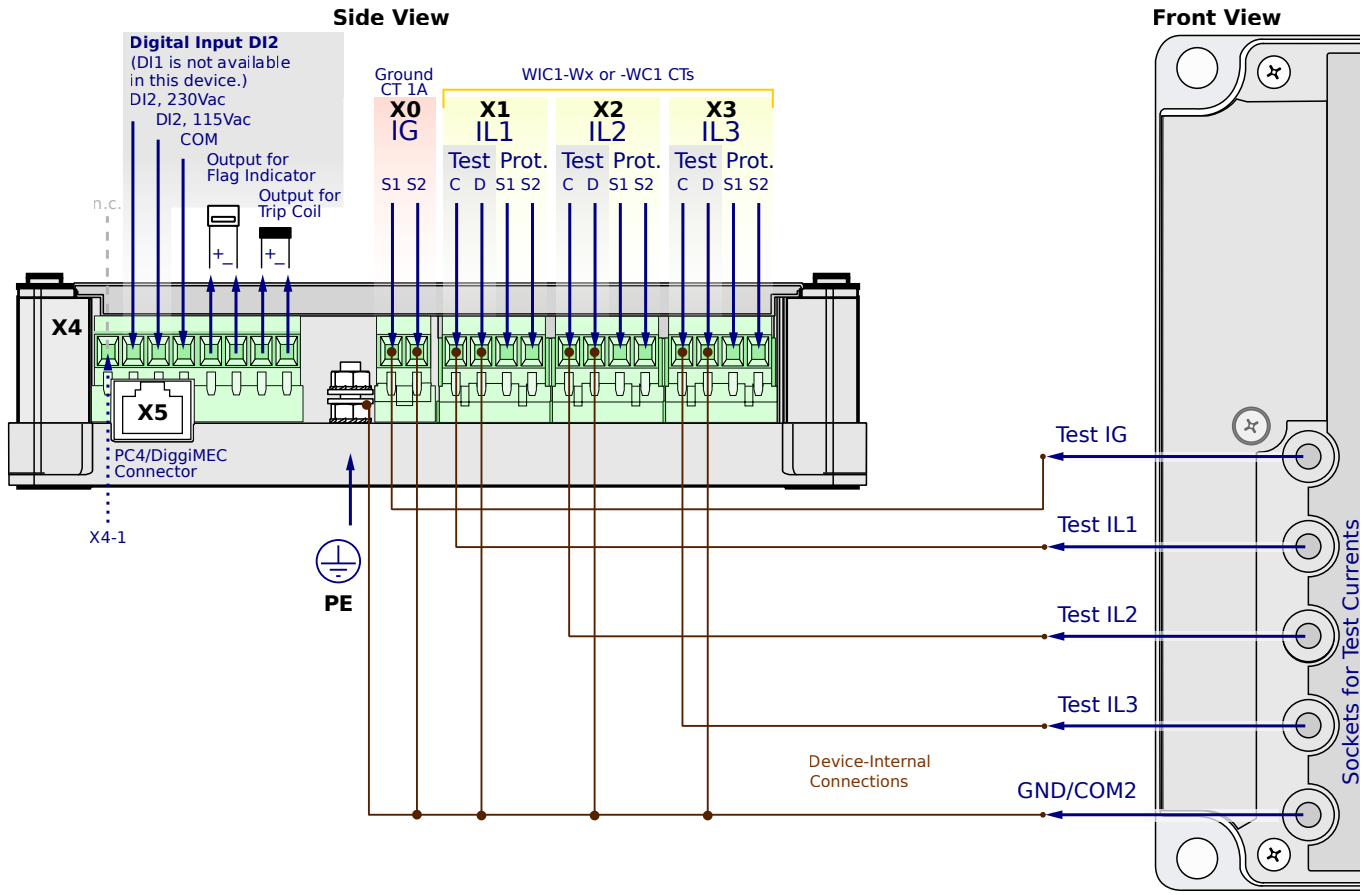


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2AAH

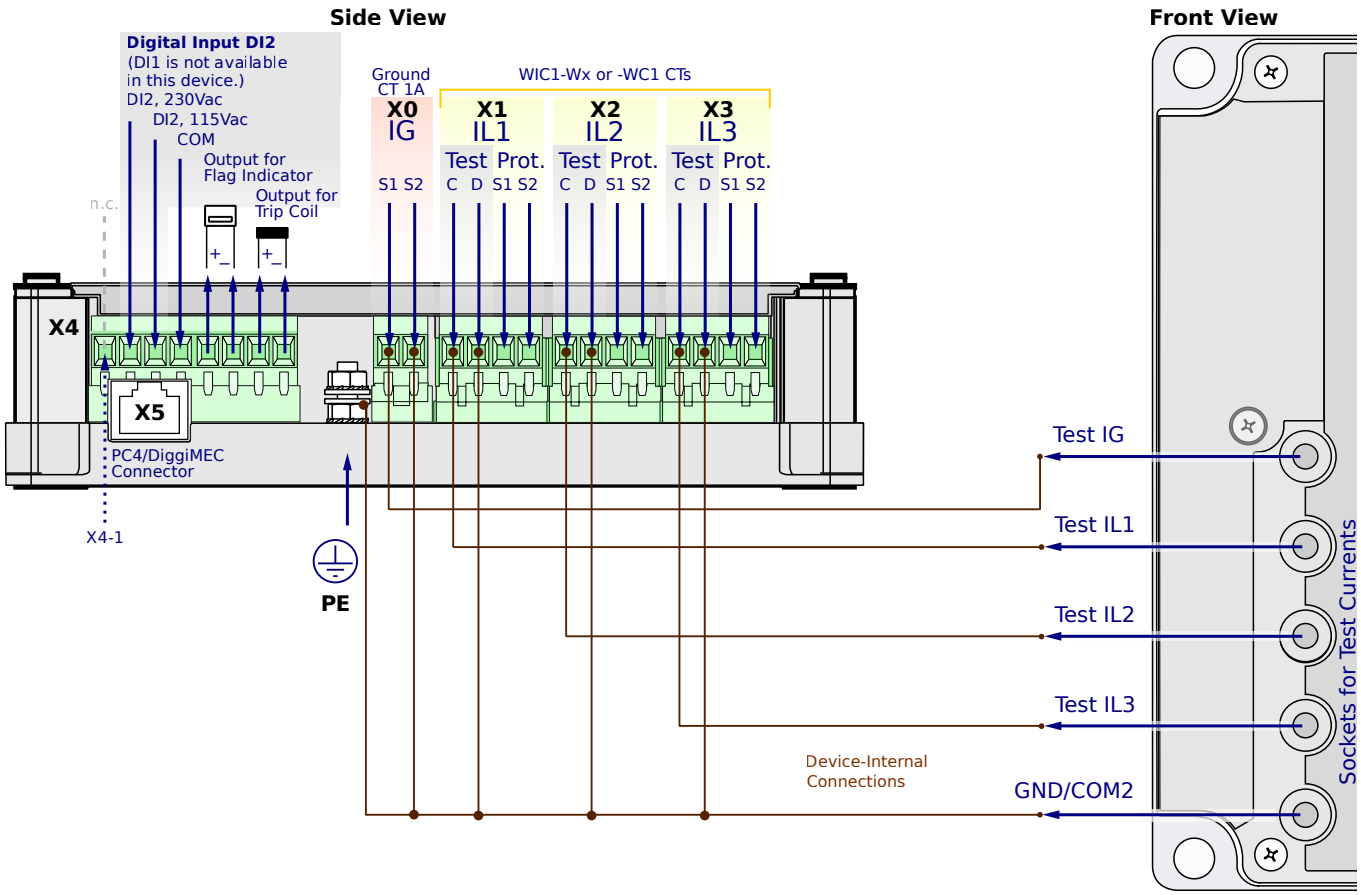


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2PA0

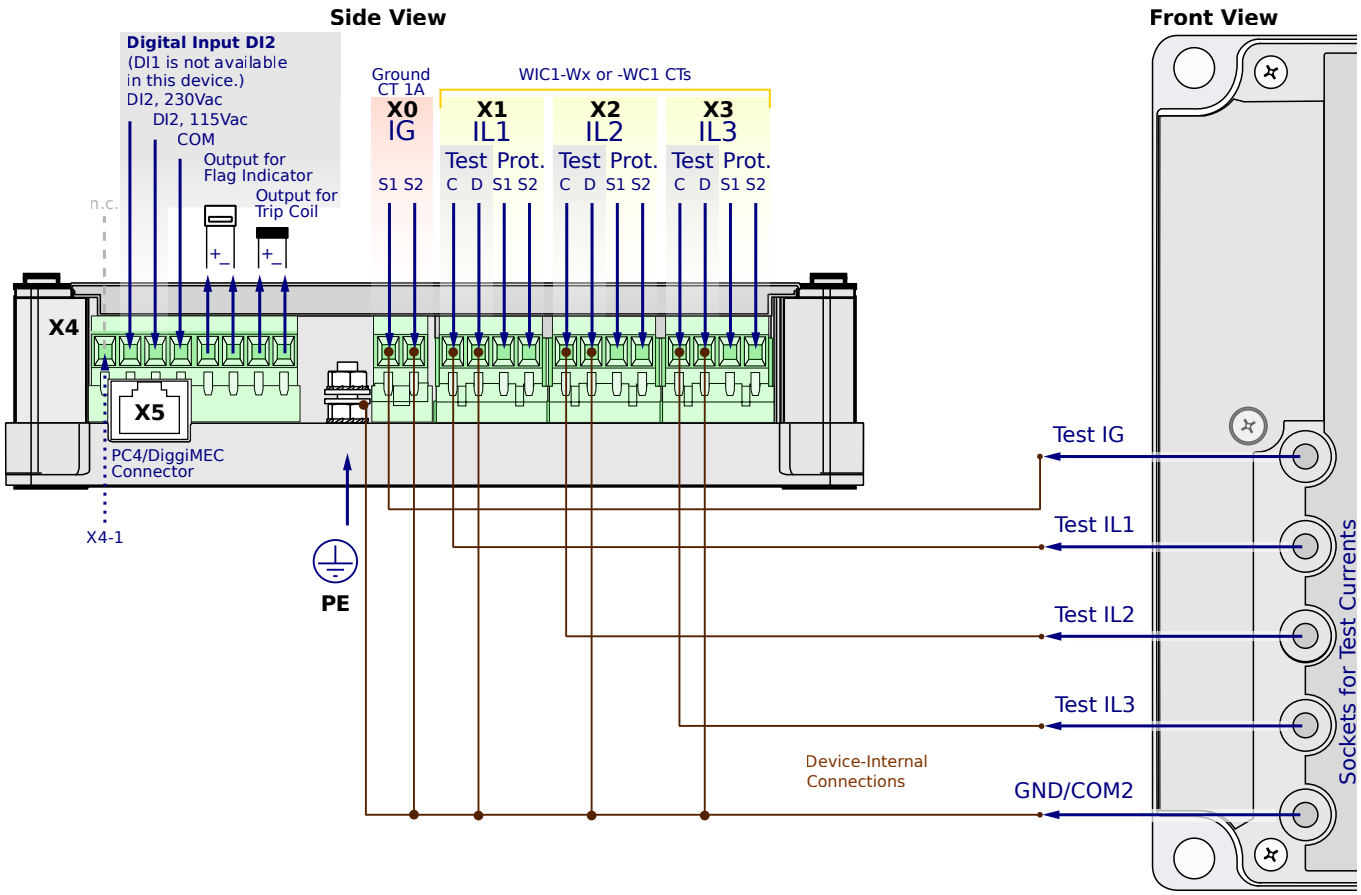


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0NC2PAH

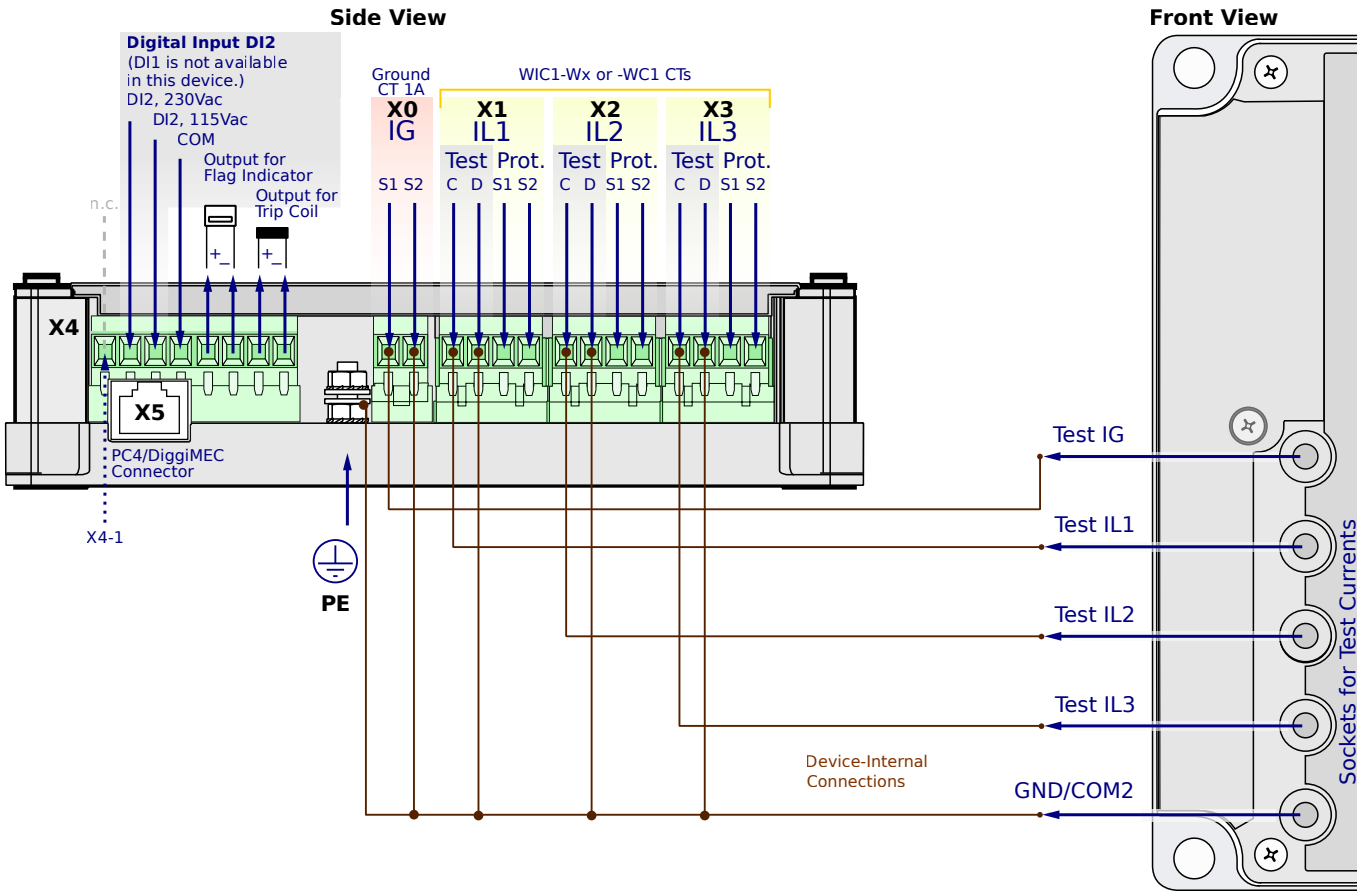


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1SA0

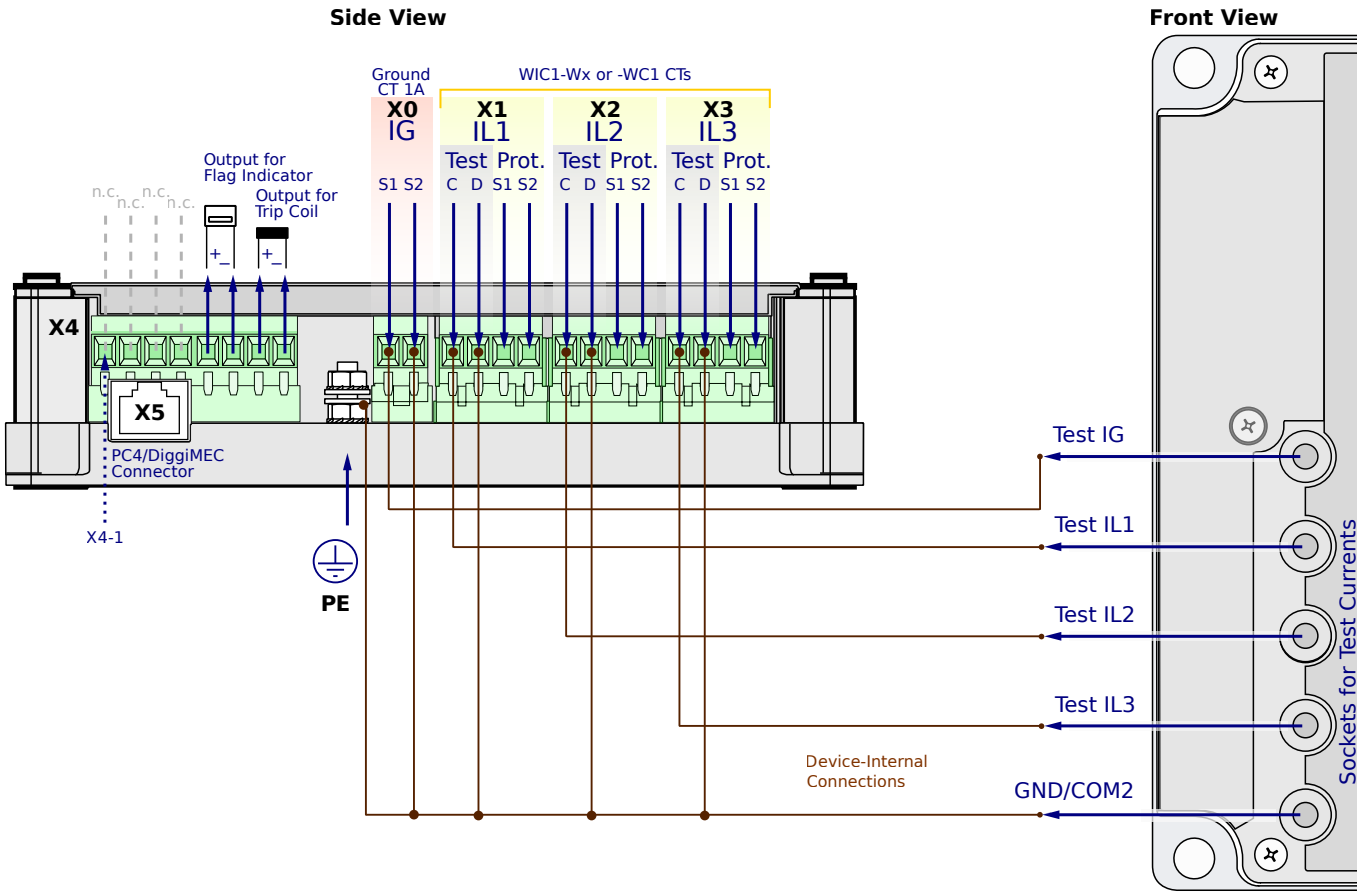


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1SAH

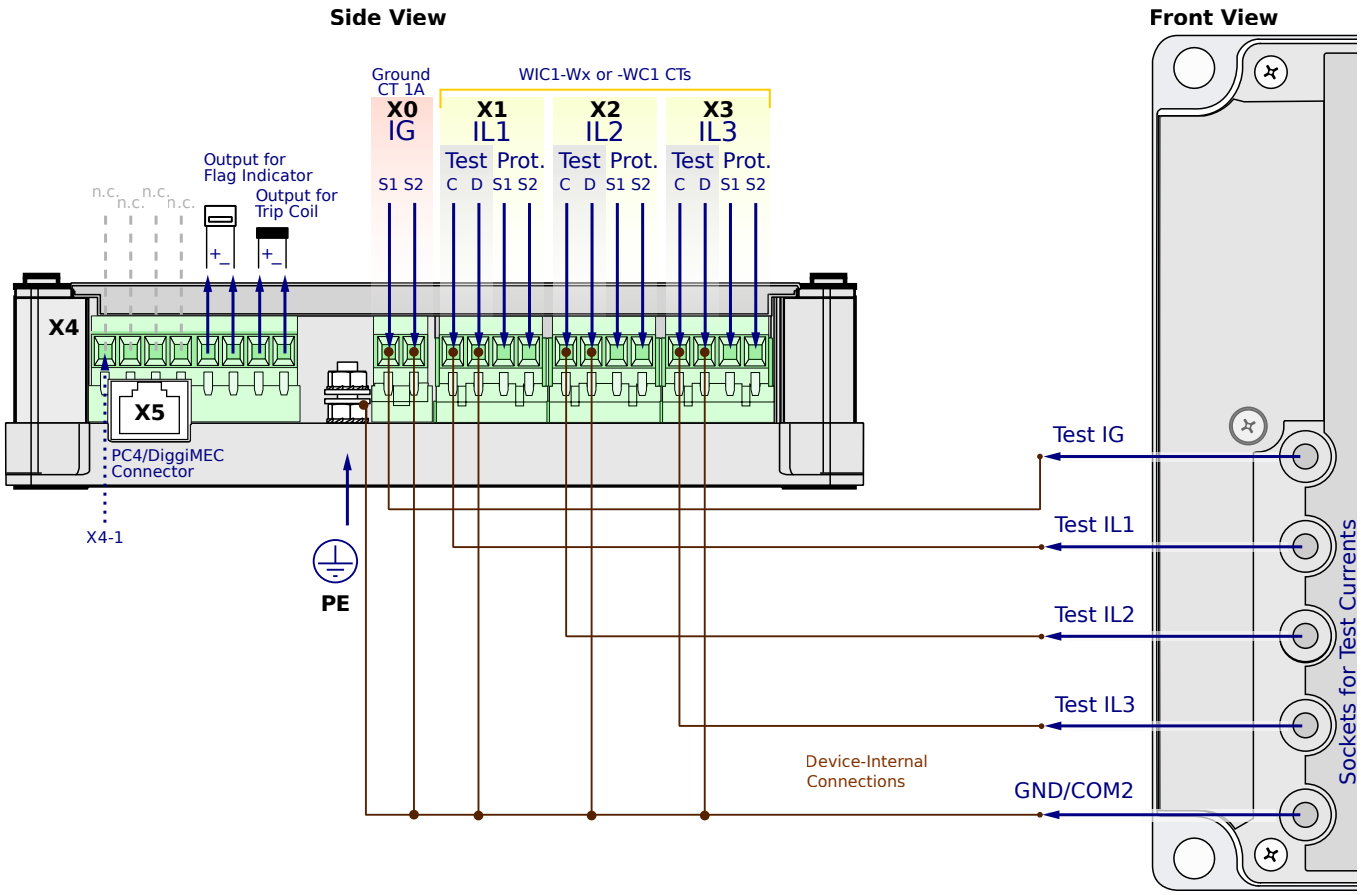


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1AA0

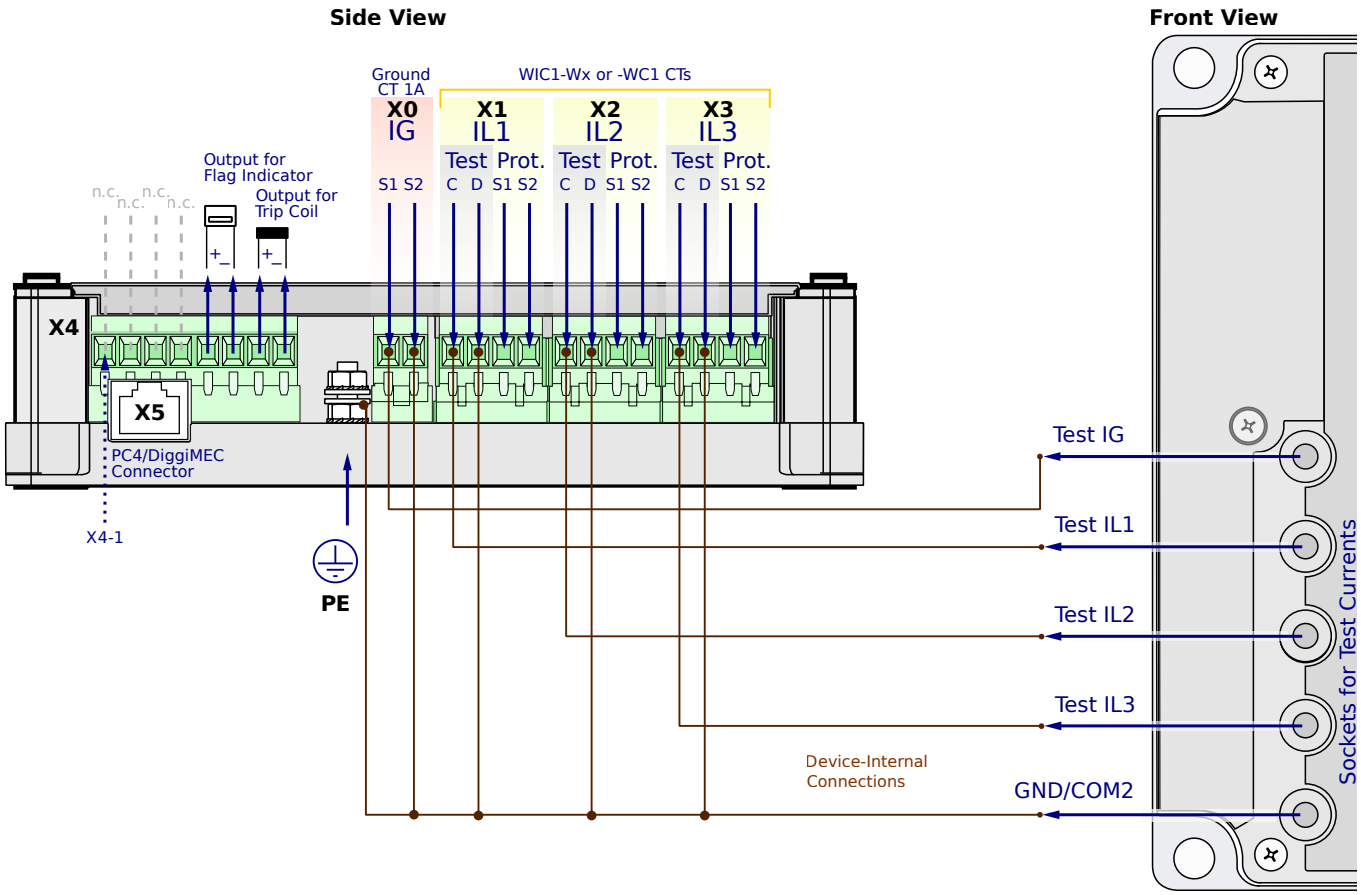


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1AAH

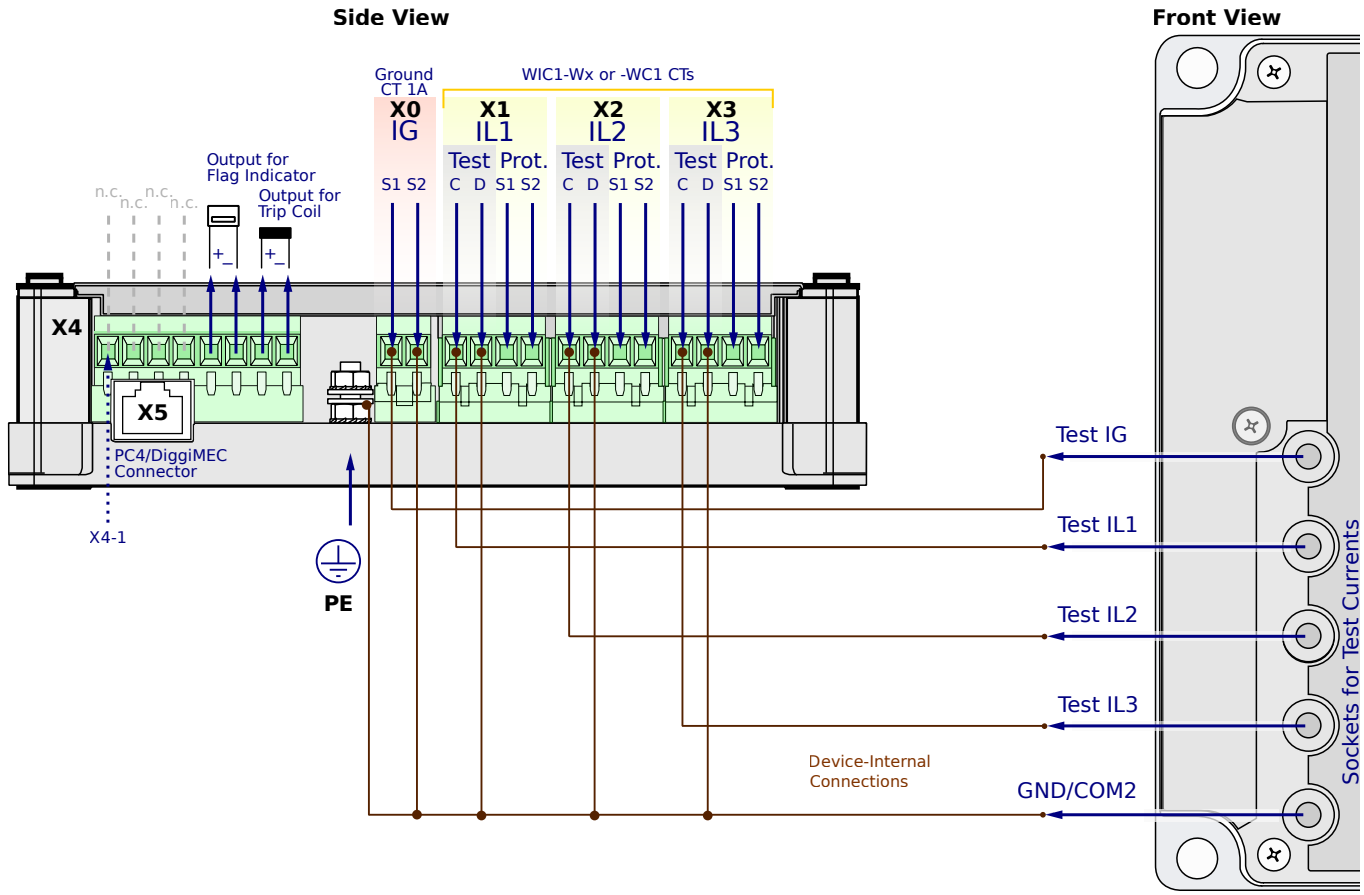


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1PA0

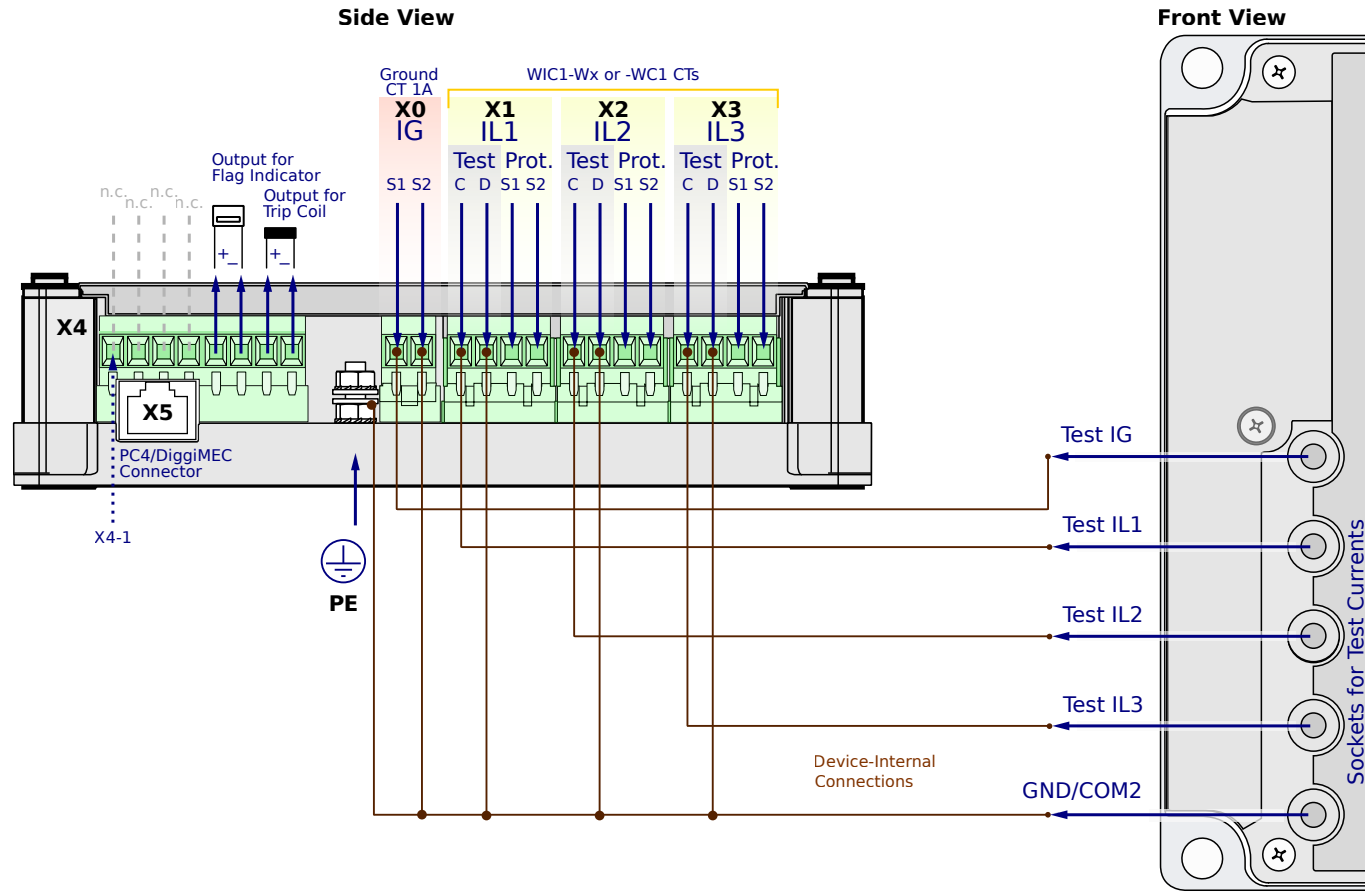


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN1PAH

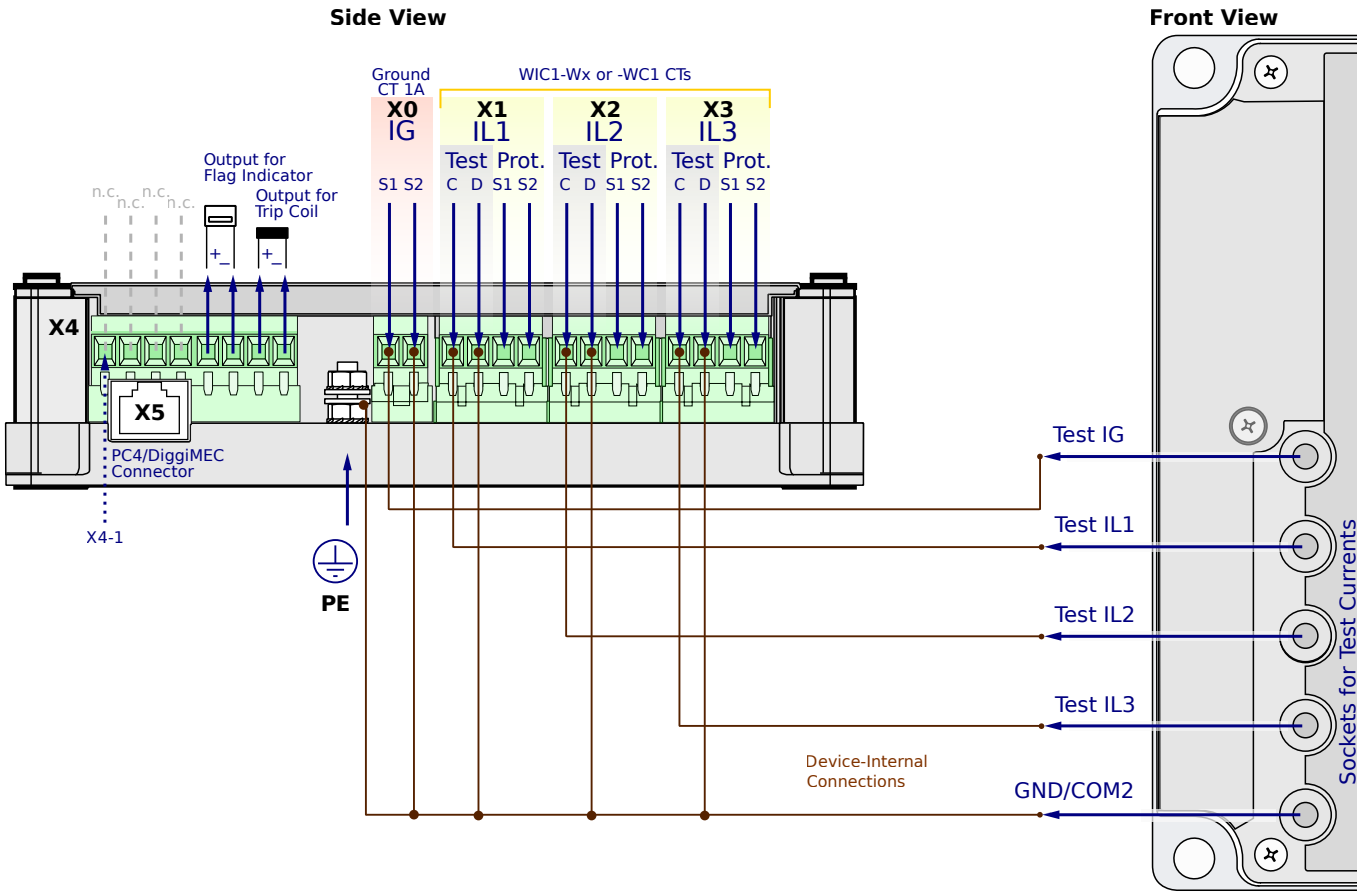


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2SA0

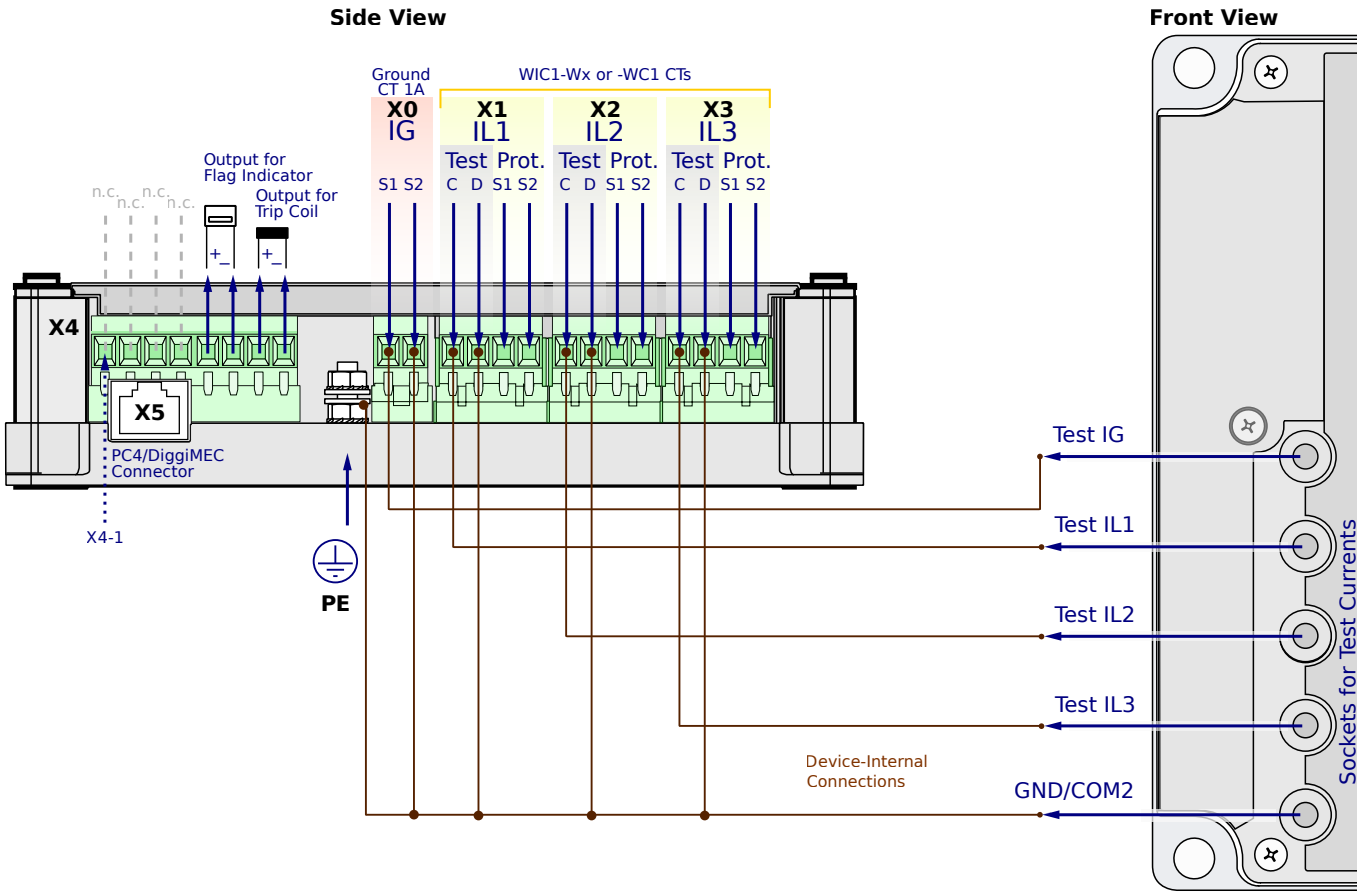


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2SAH

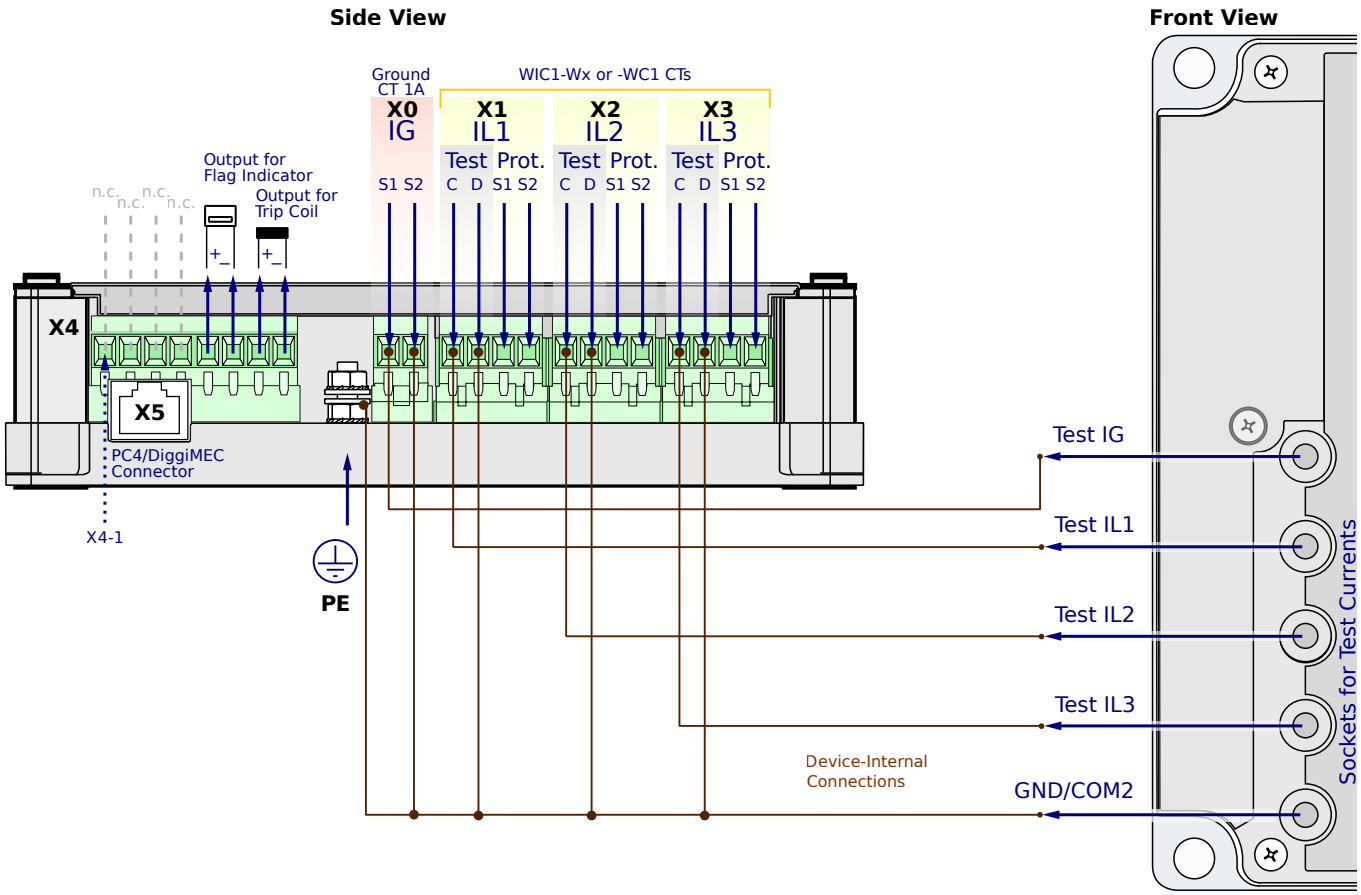


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2AA0

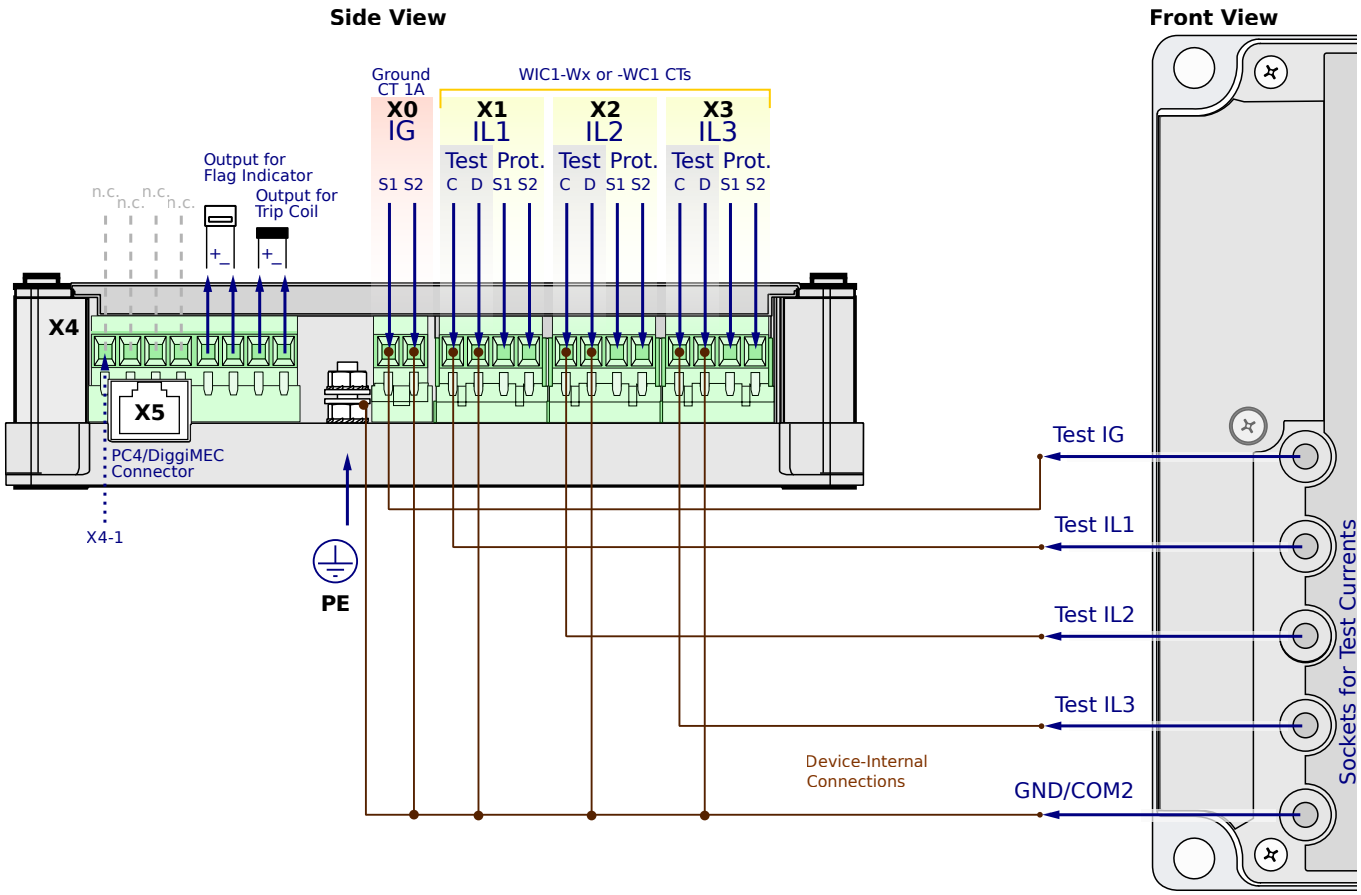


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2AAH

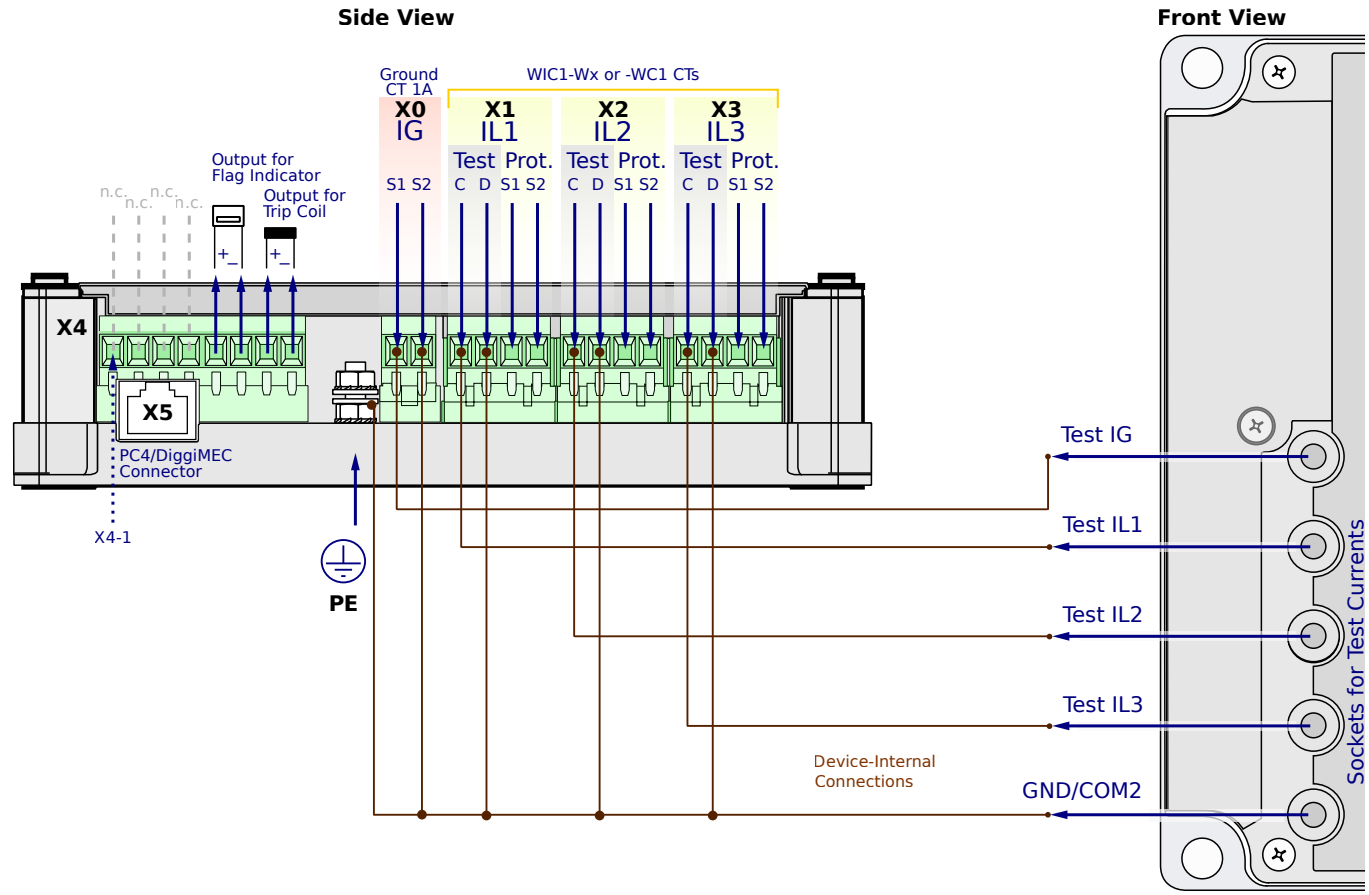


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2PA0

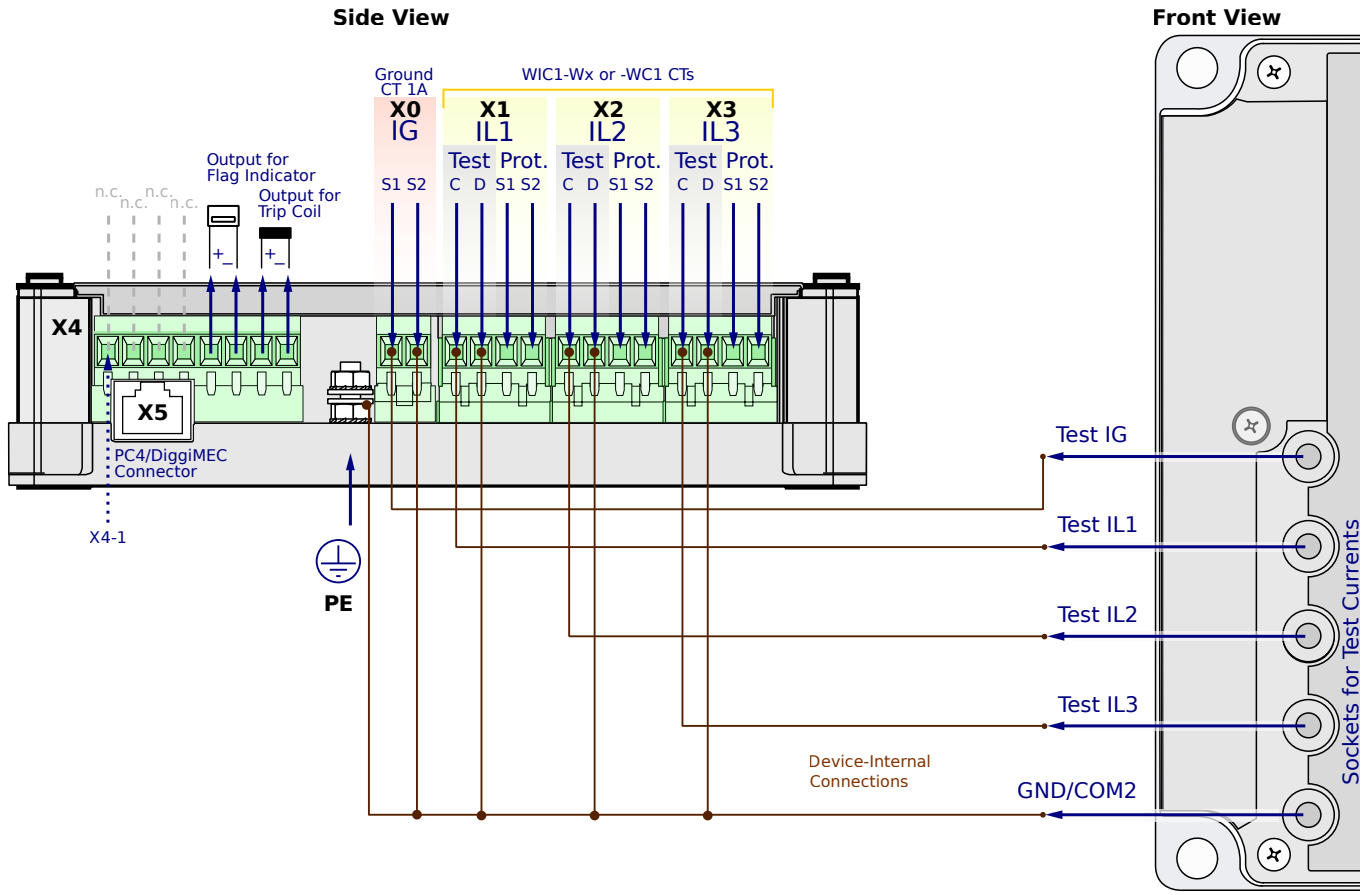


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FN2PAH

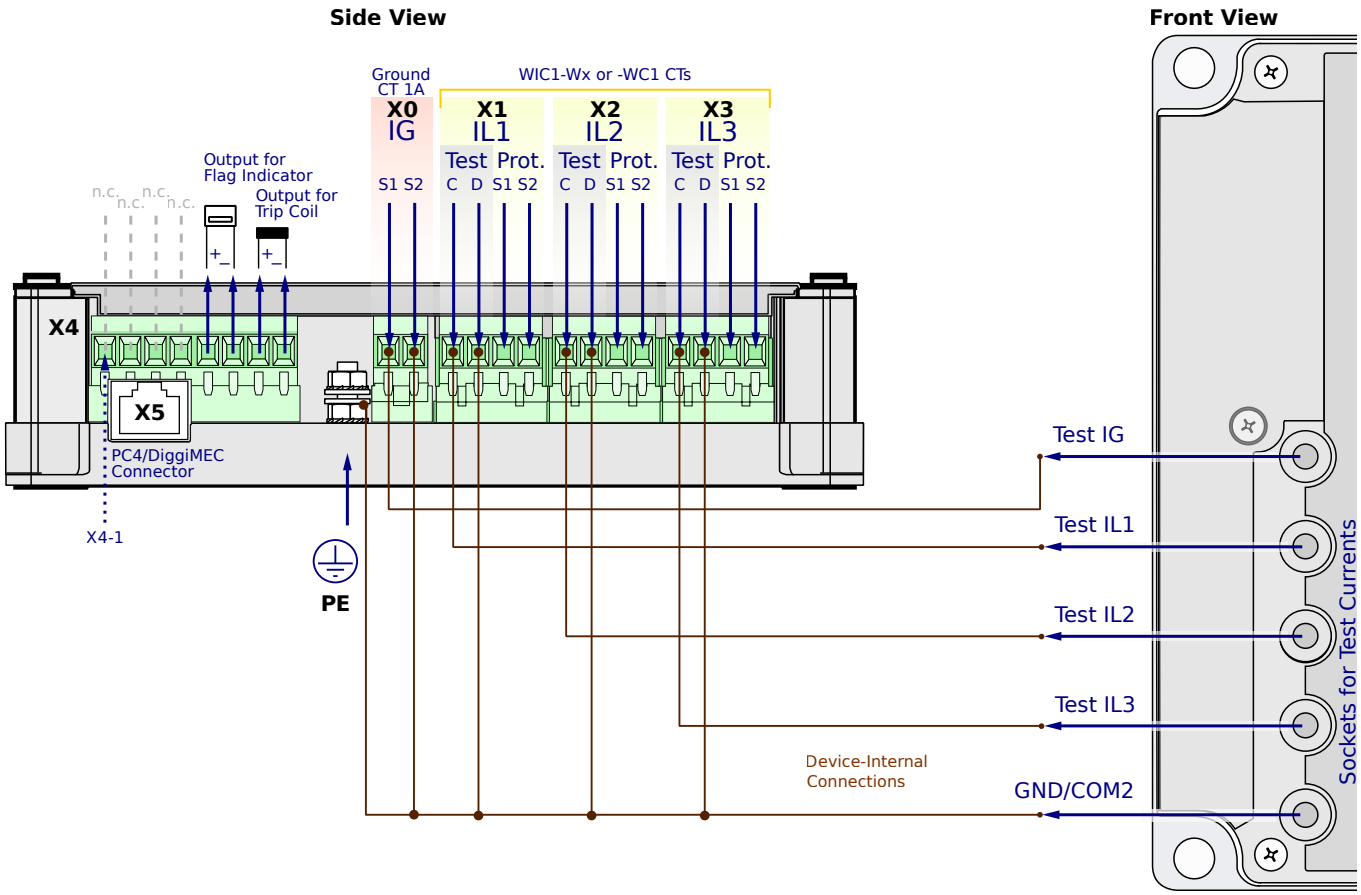


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1SA0

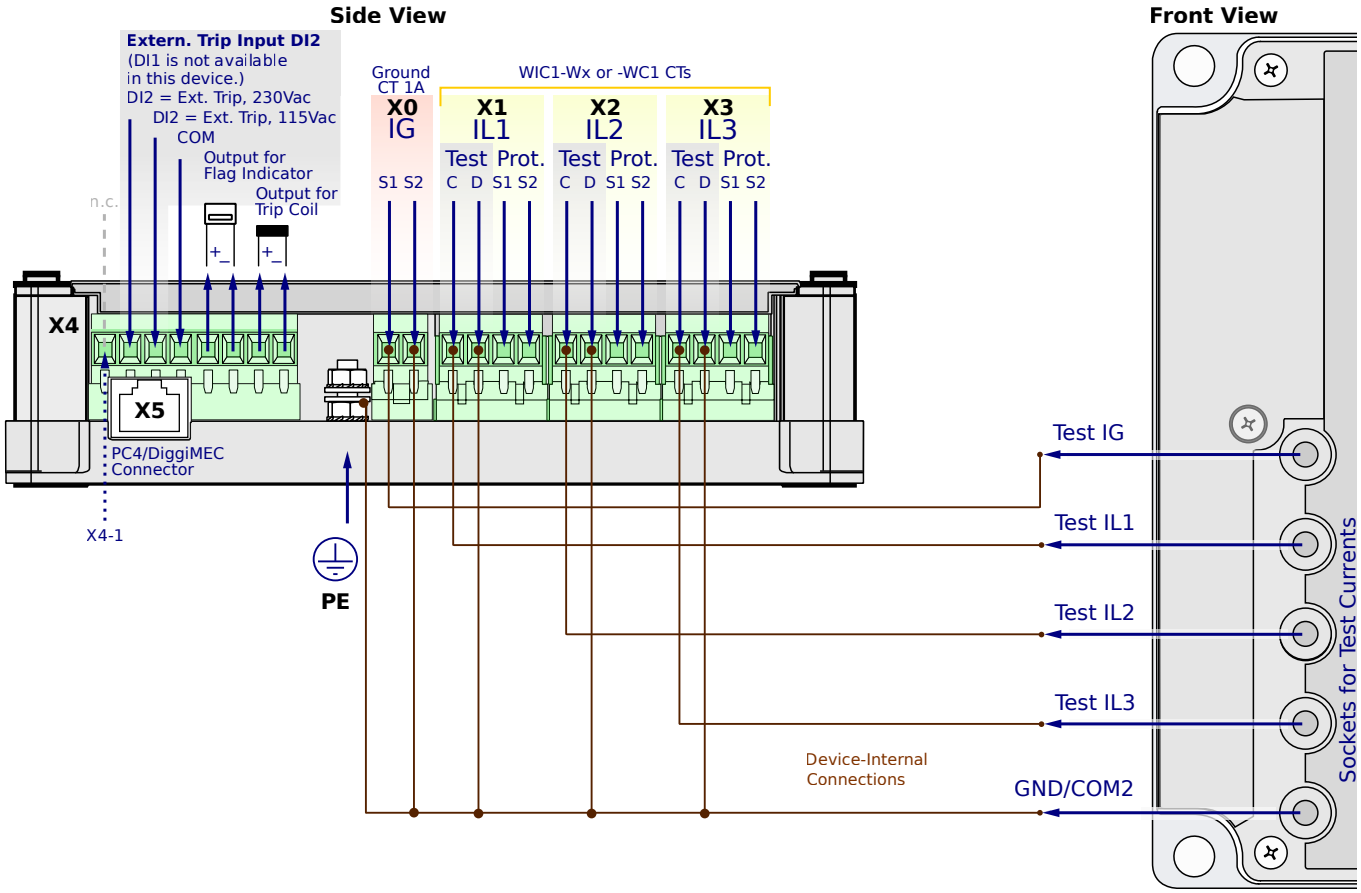


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1SAH

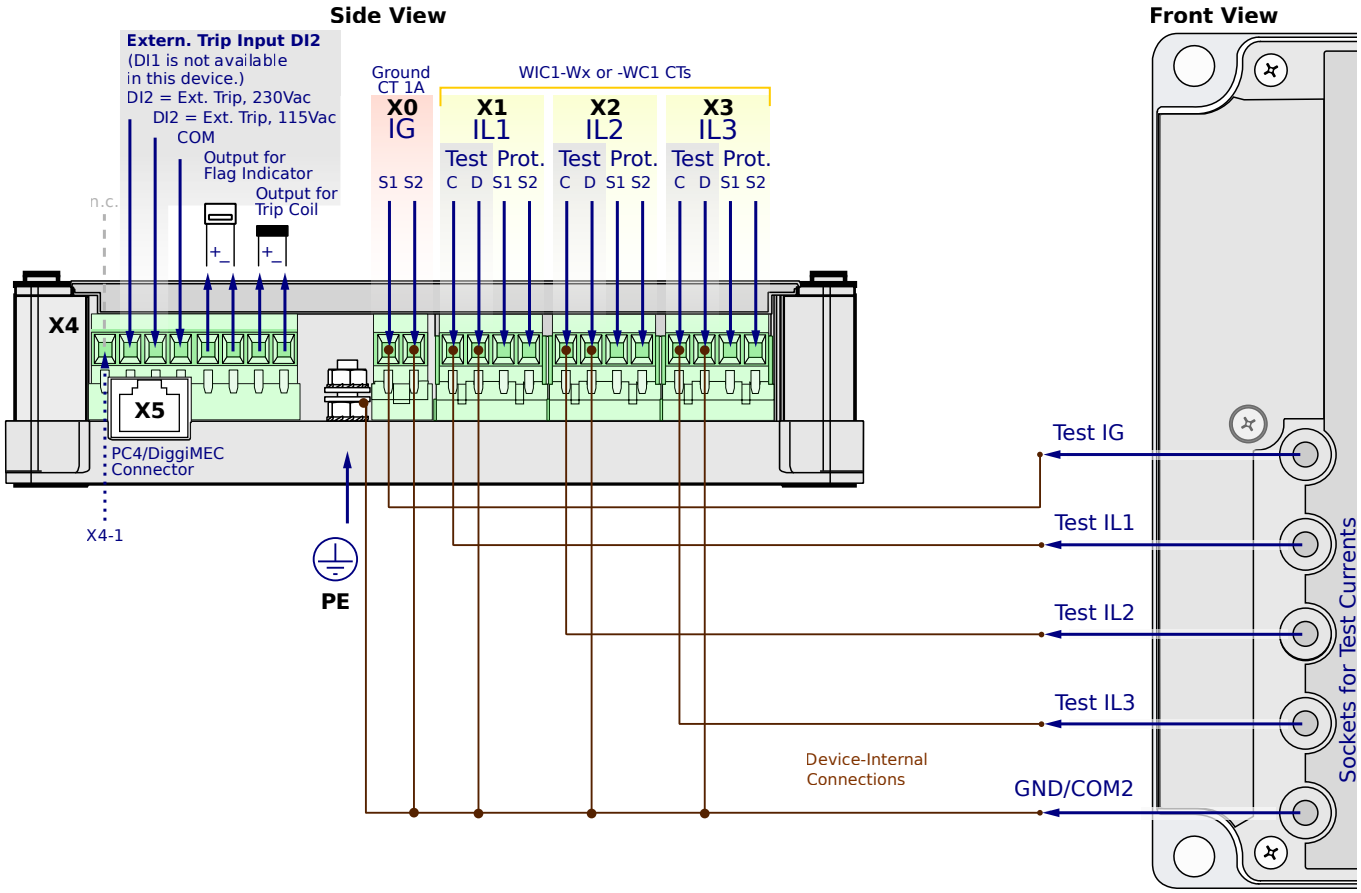


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1AA0

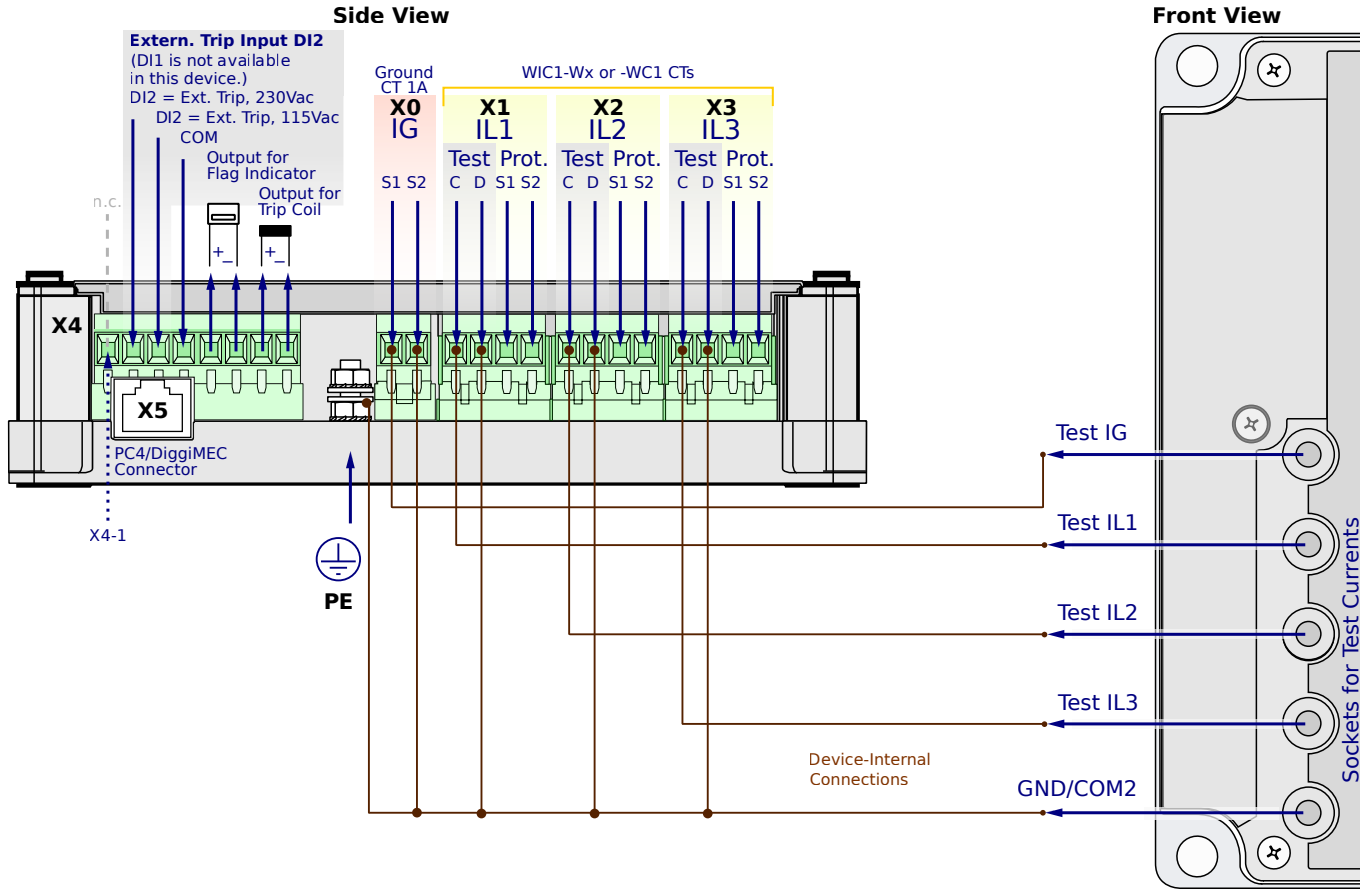


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1AAH

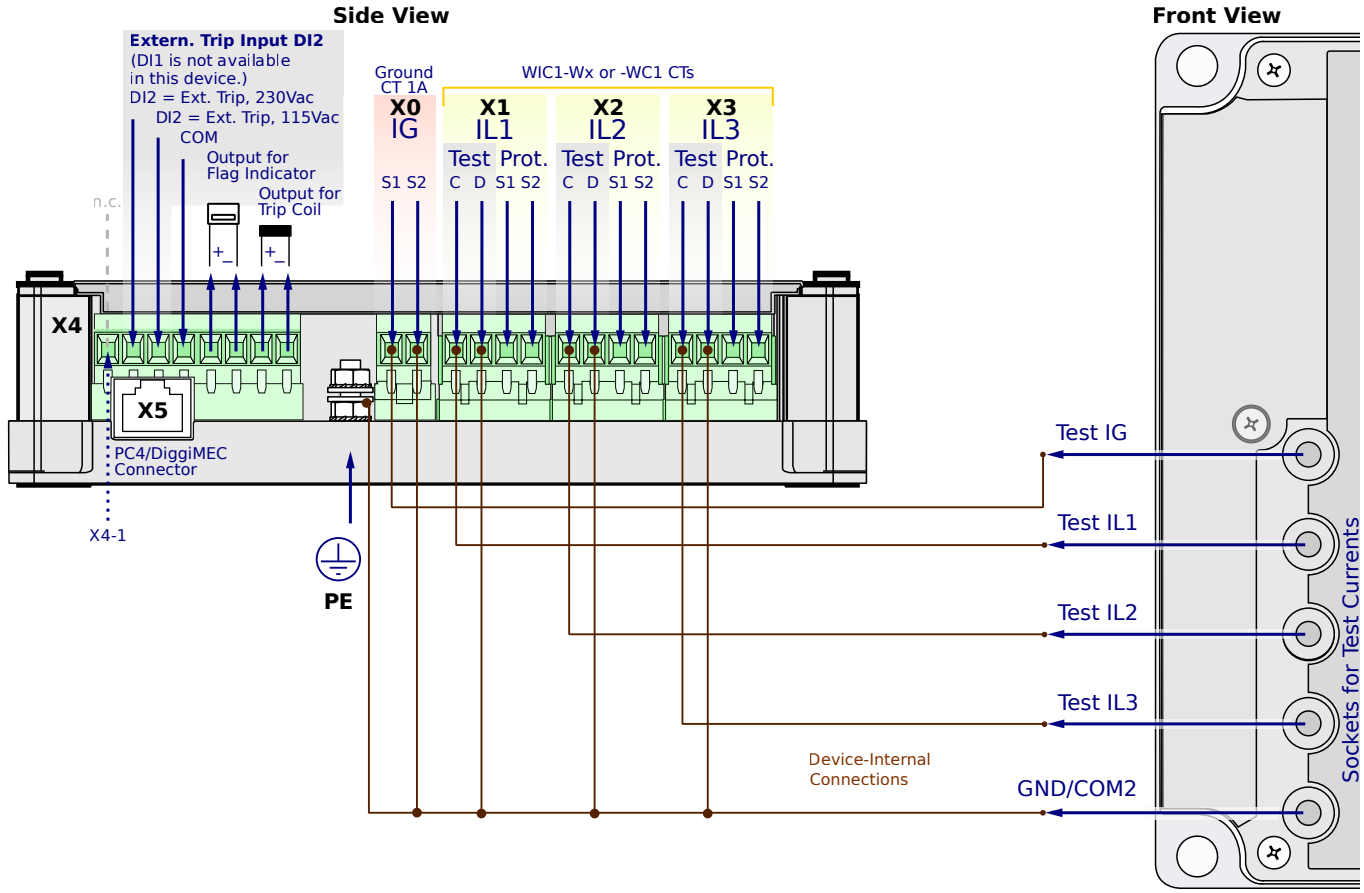


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1PA0

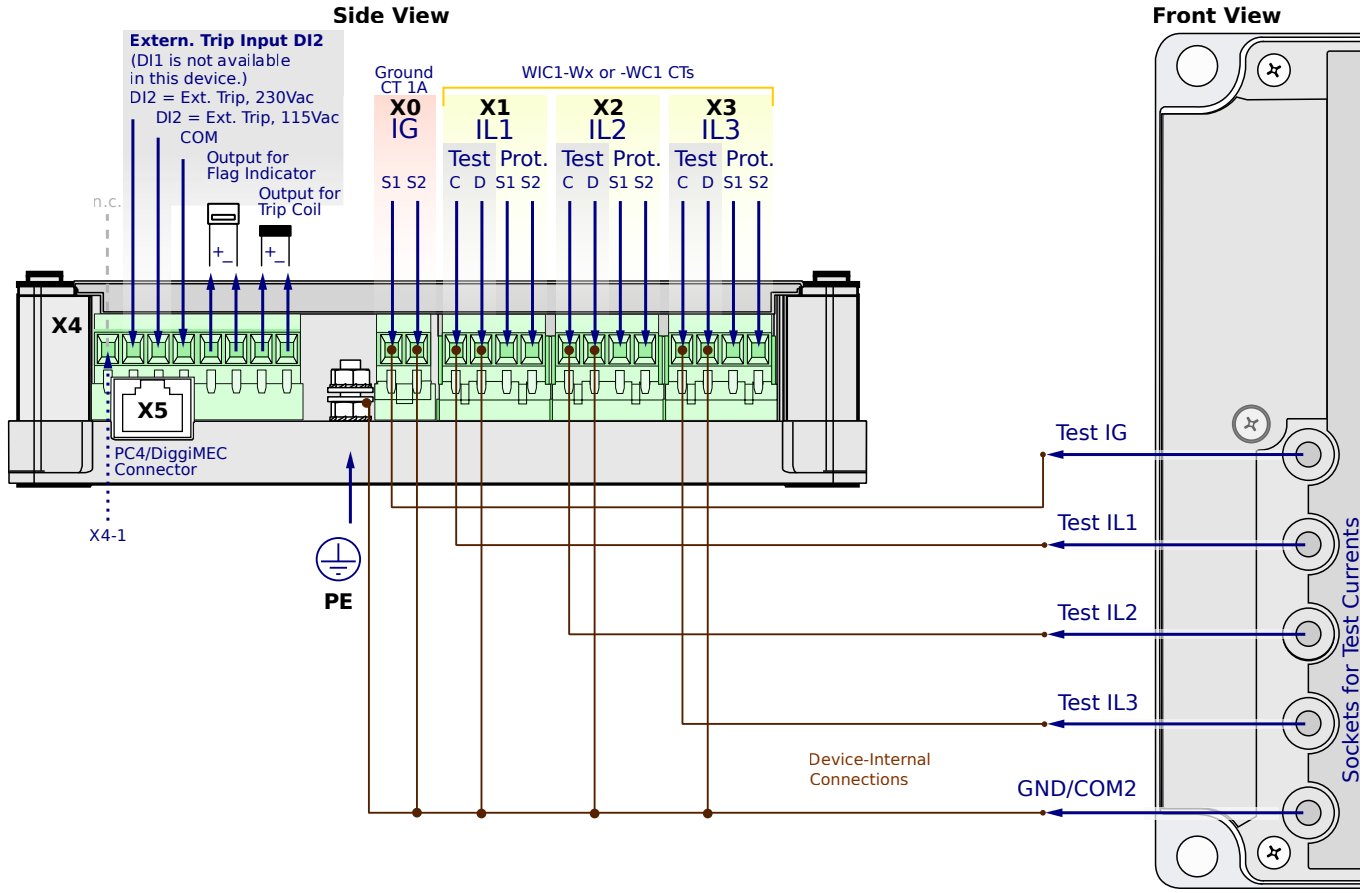


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF1PAH

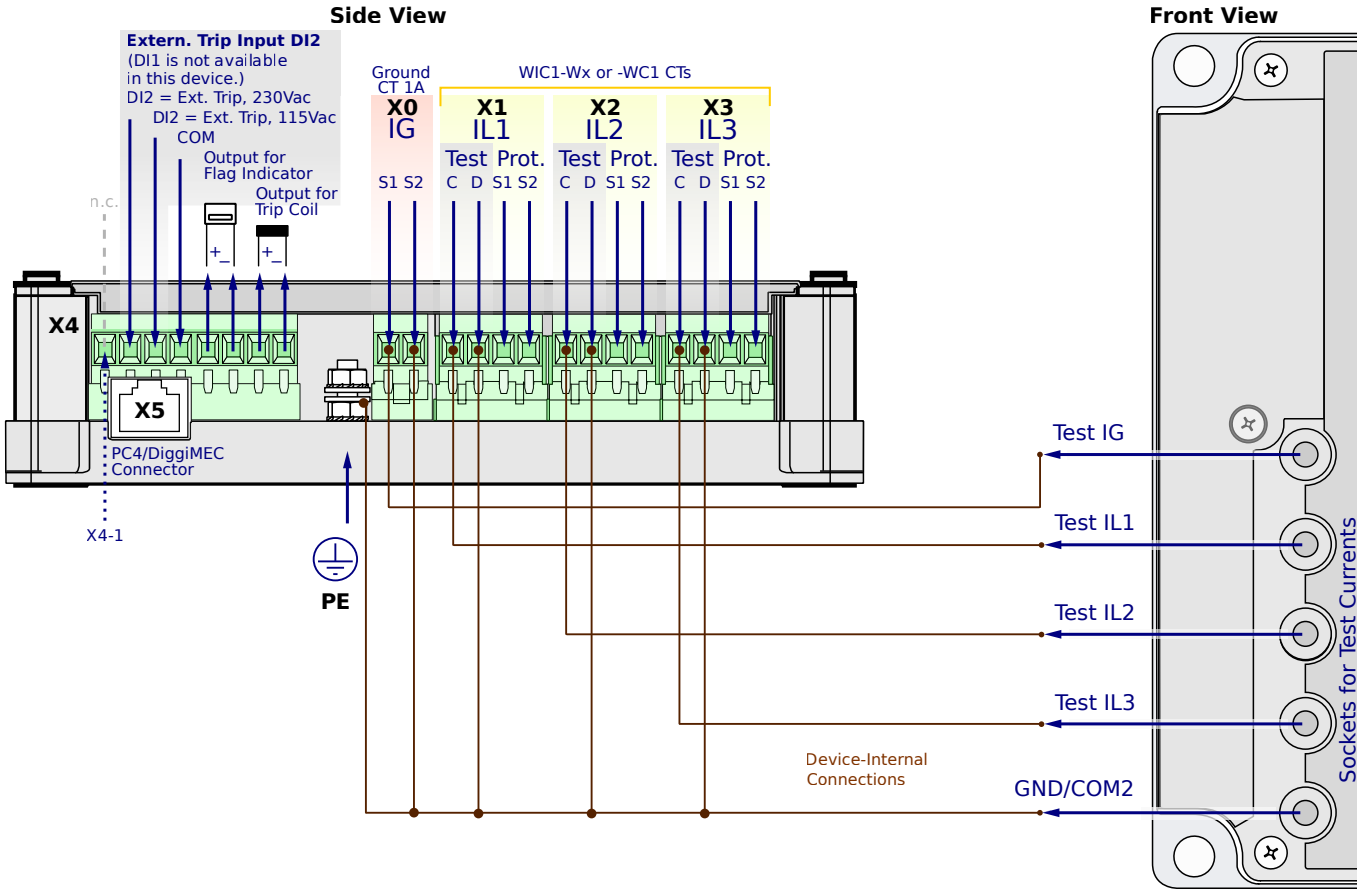


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2SA0

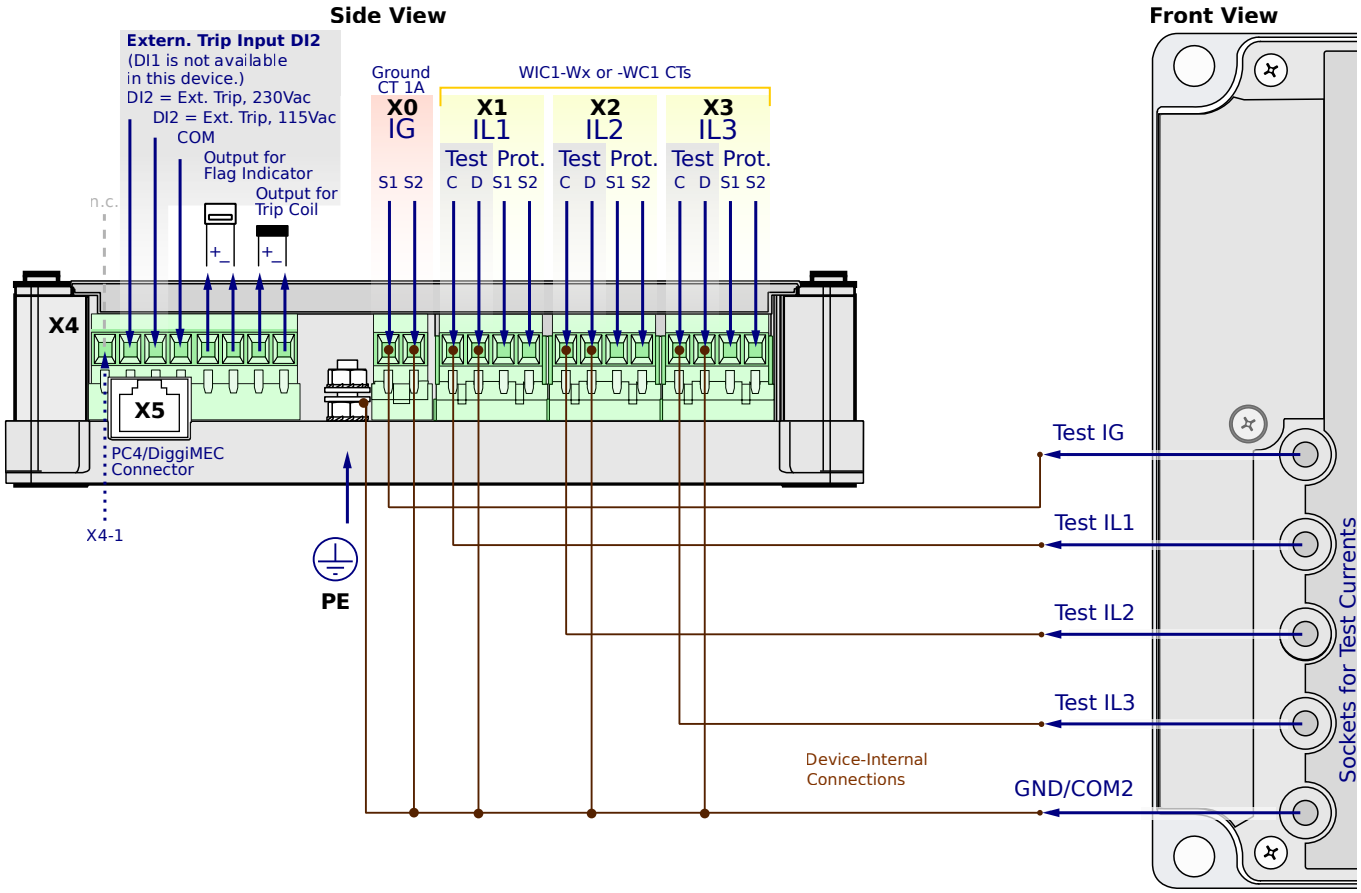


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2SAH

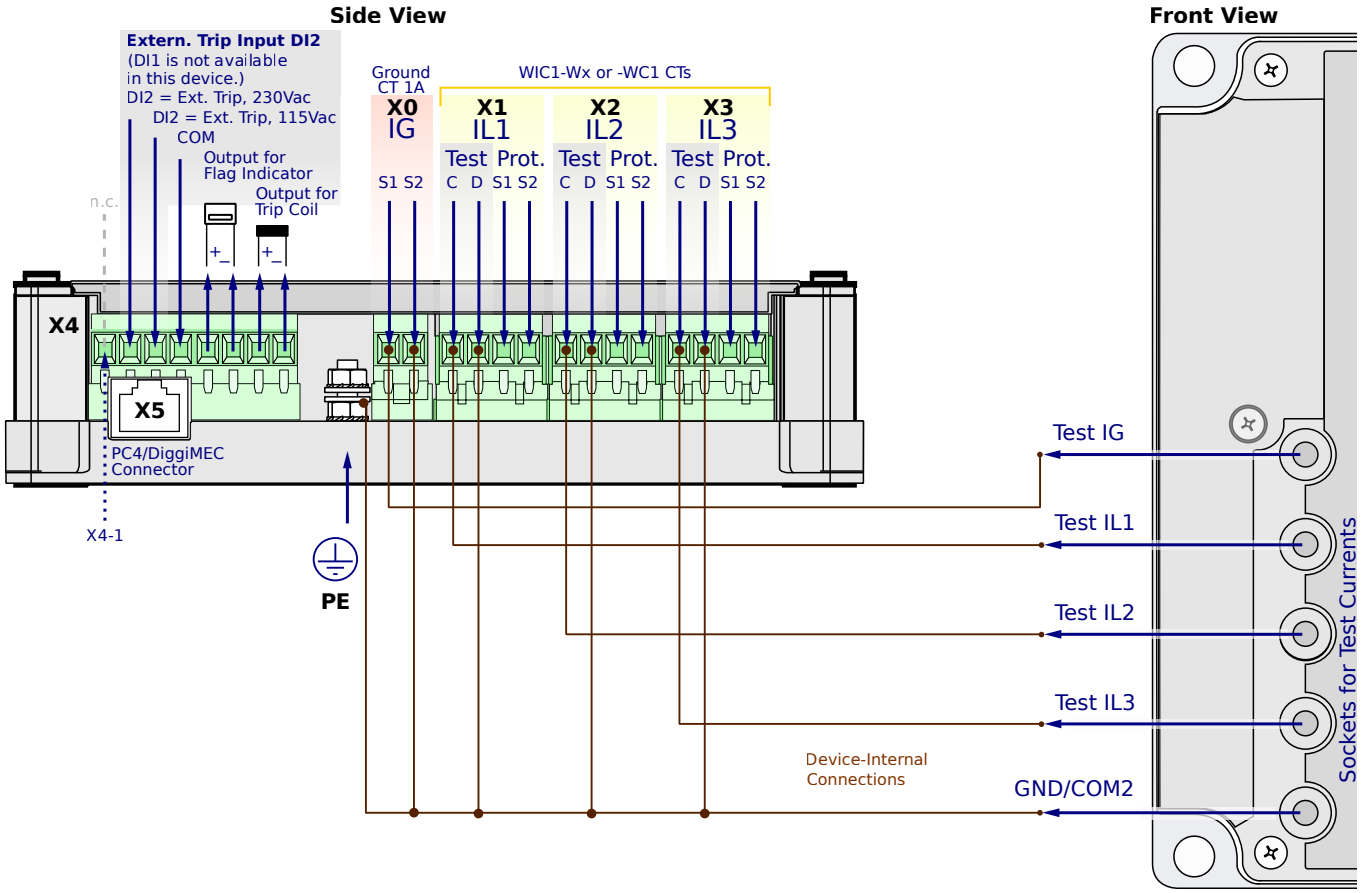


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2AA0

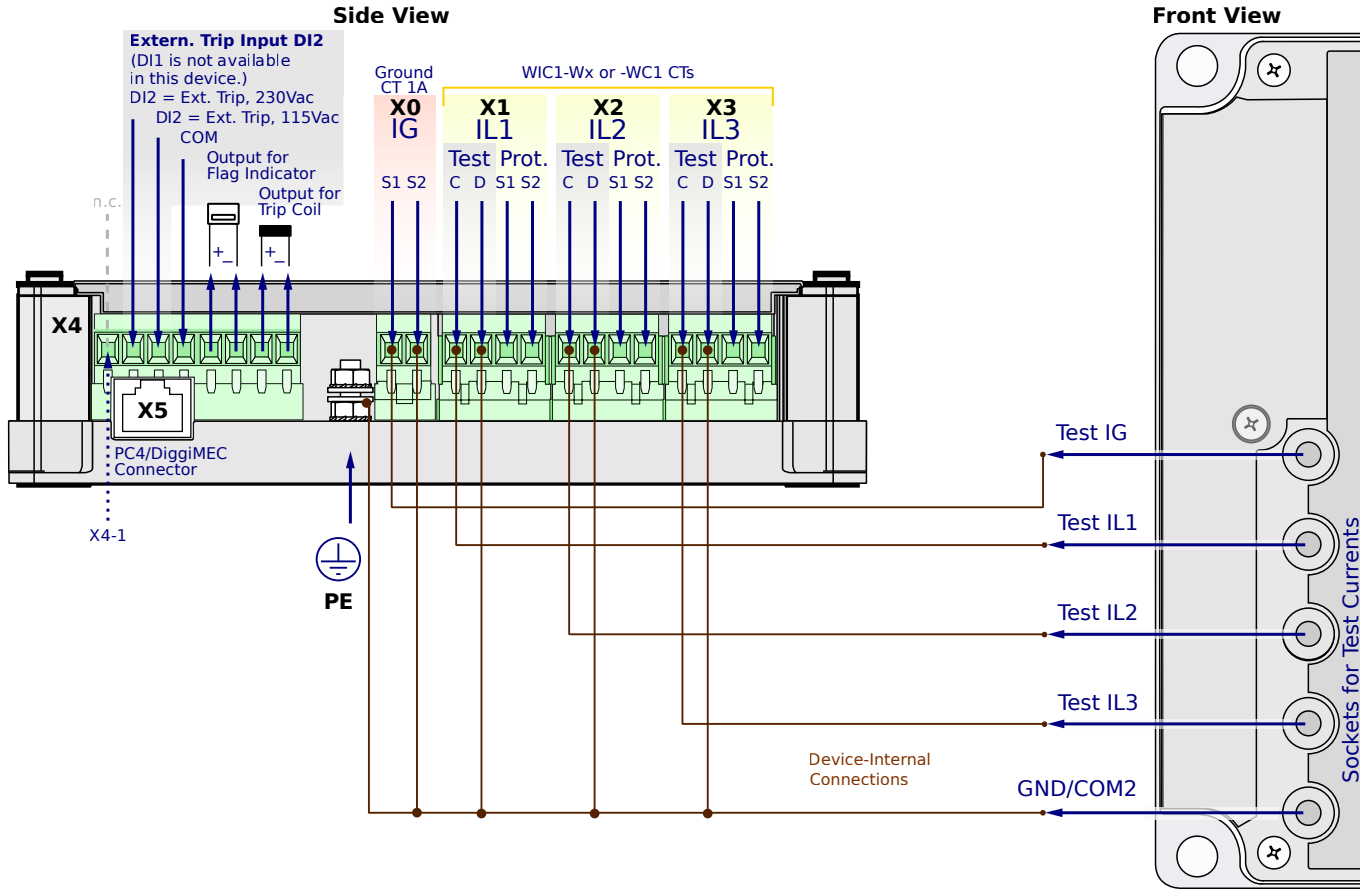


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2AAH

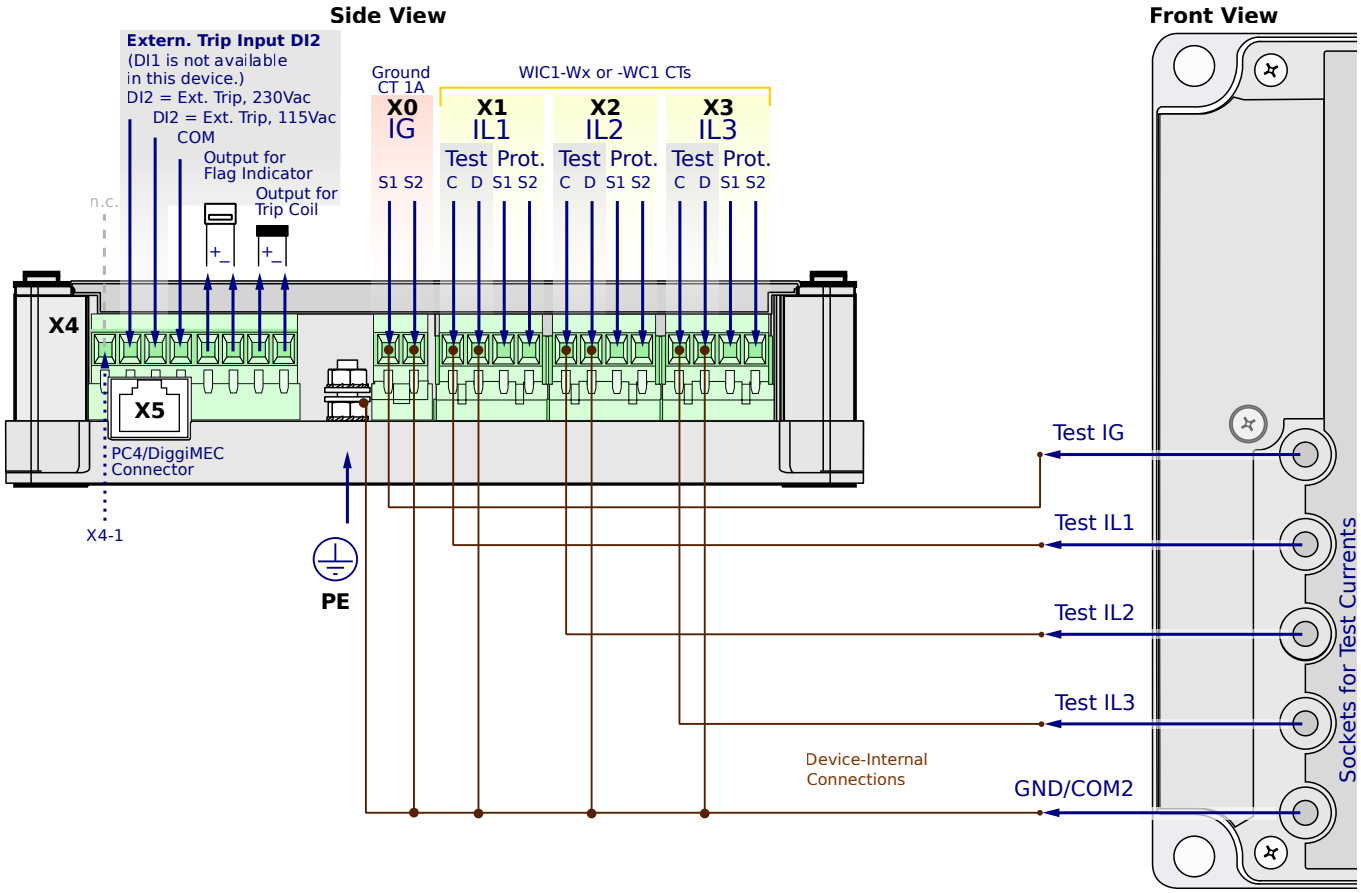


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2PA0

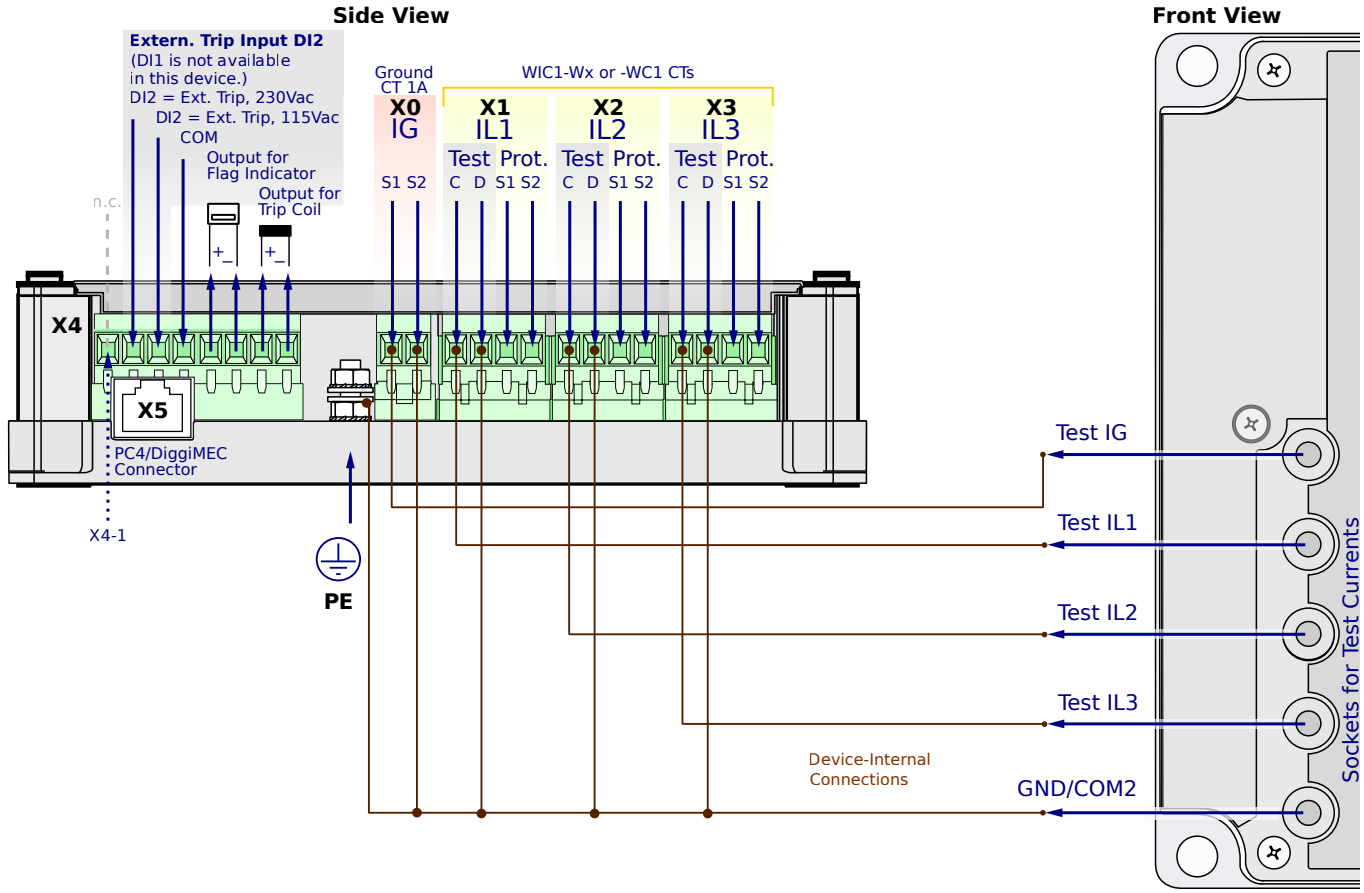


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FF2PAH

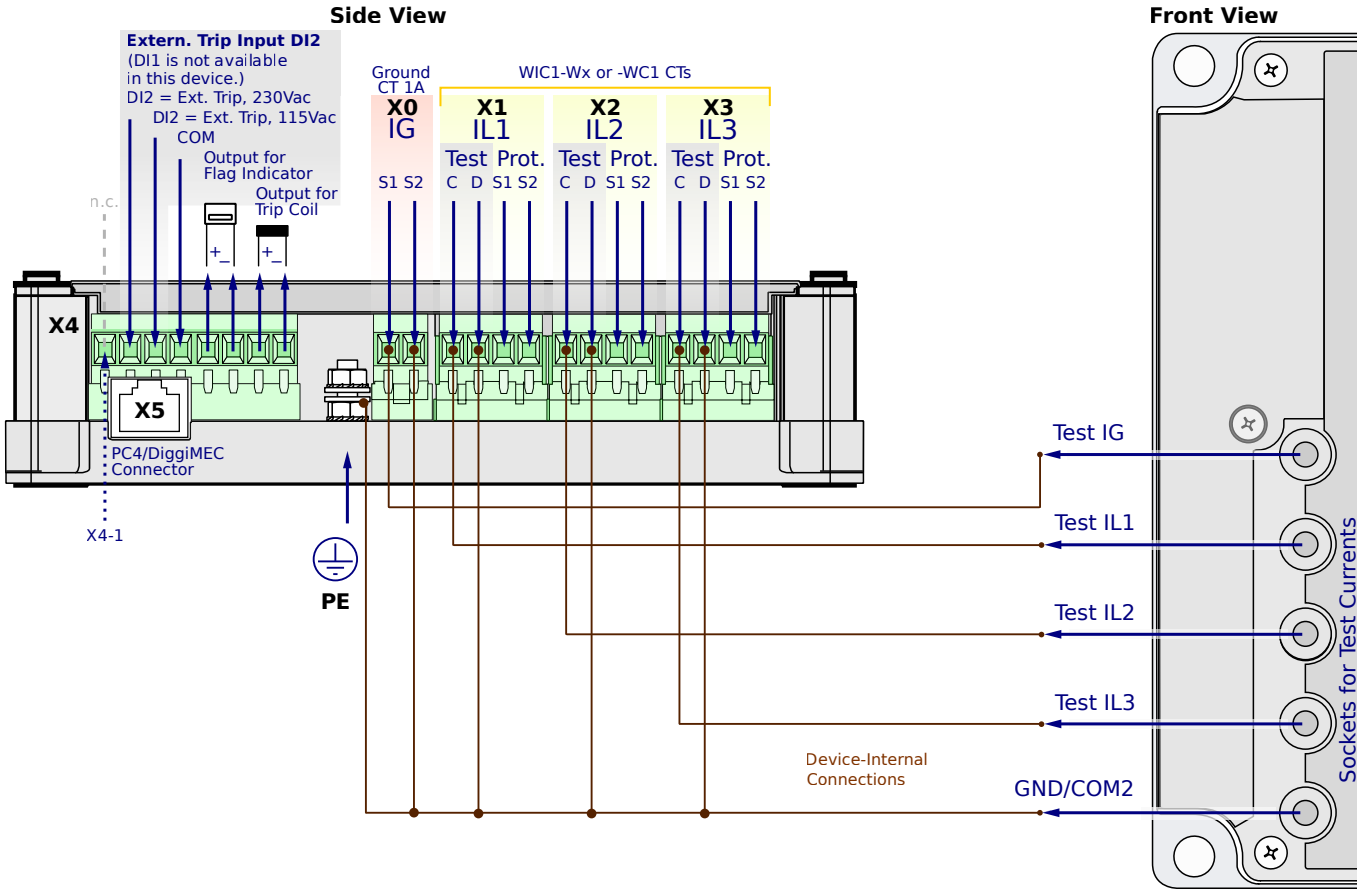


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1SA0

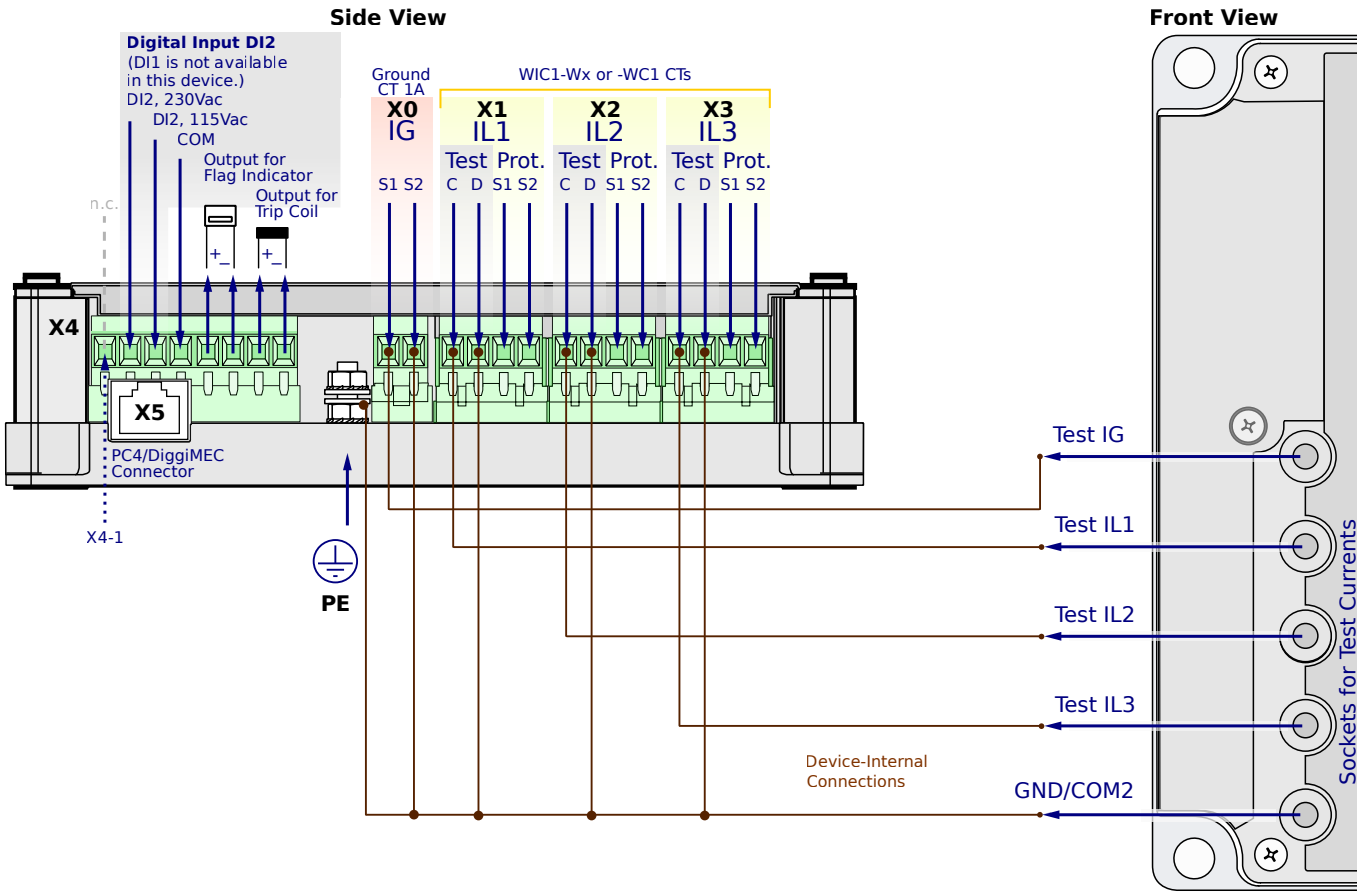


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1SAH

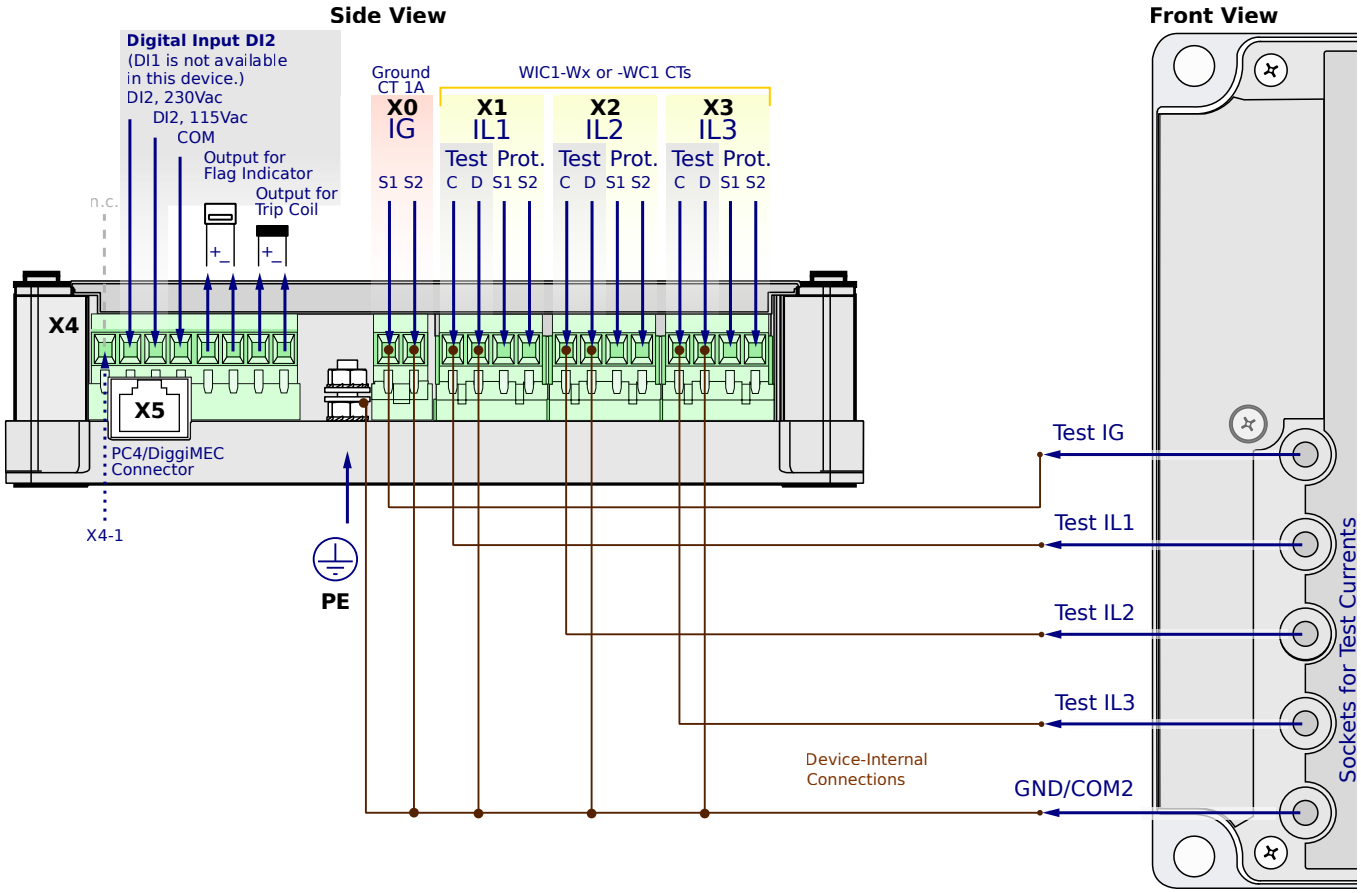


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1AA0

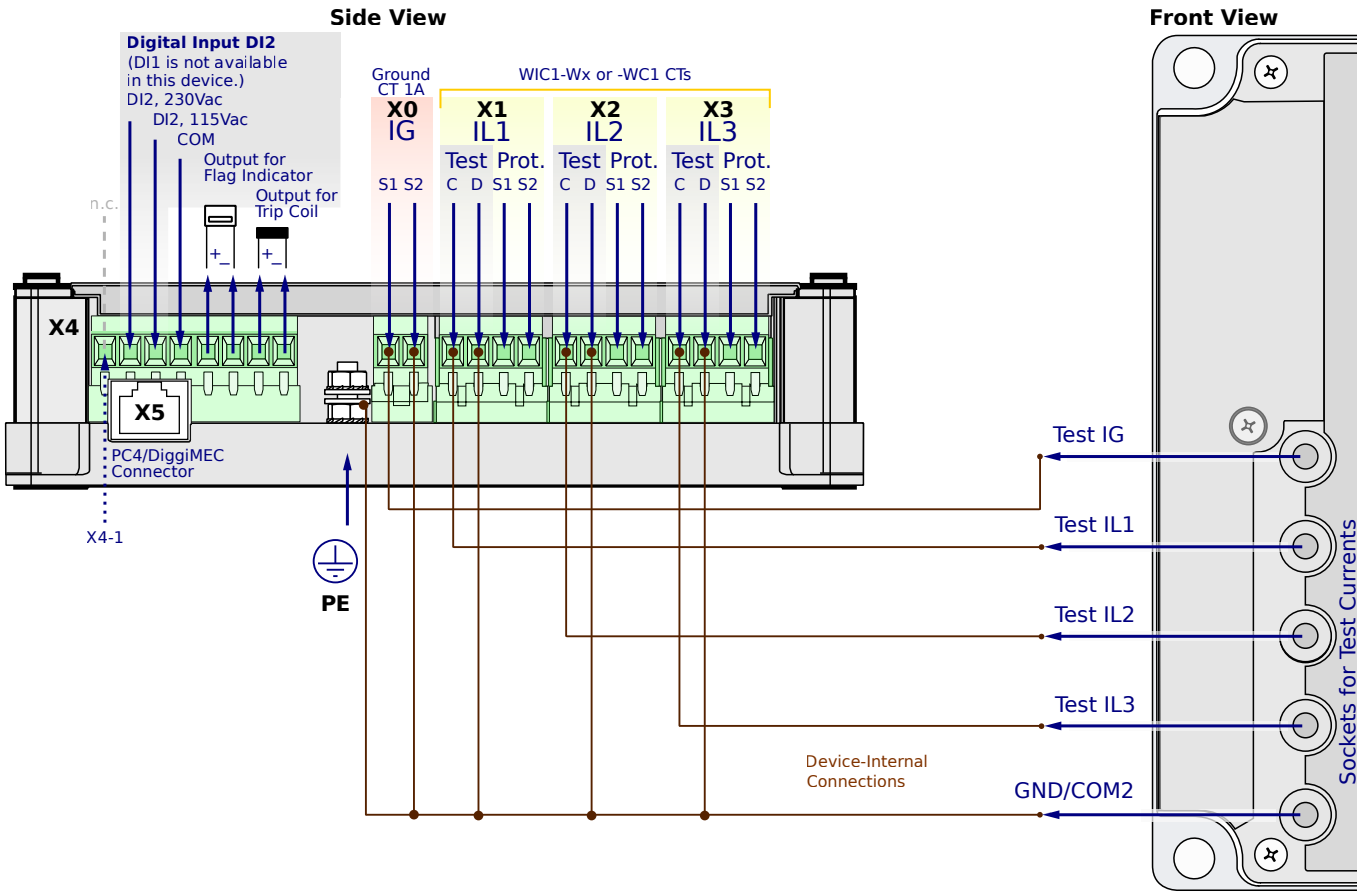


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1AAH

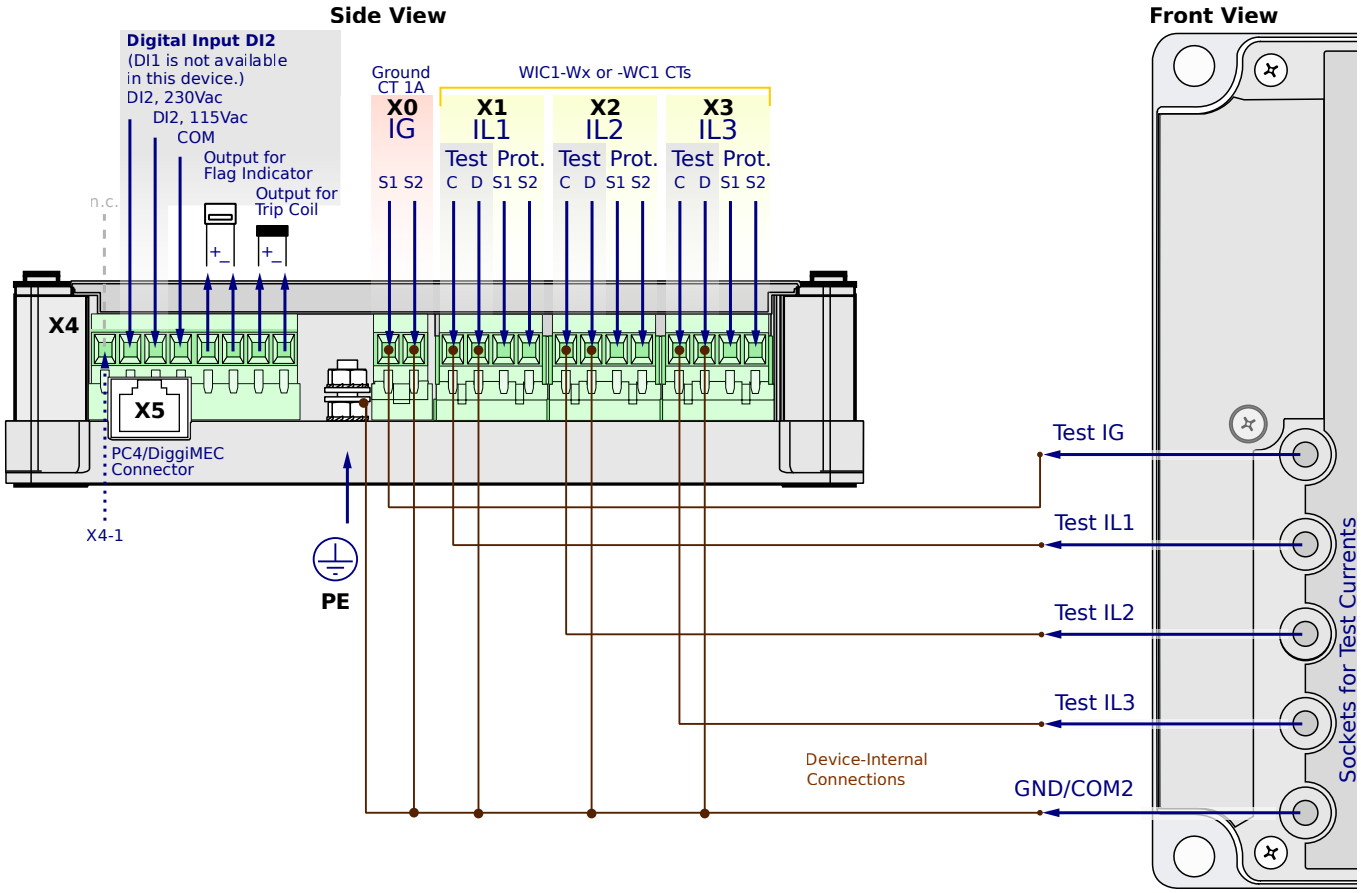


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1PA0

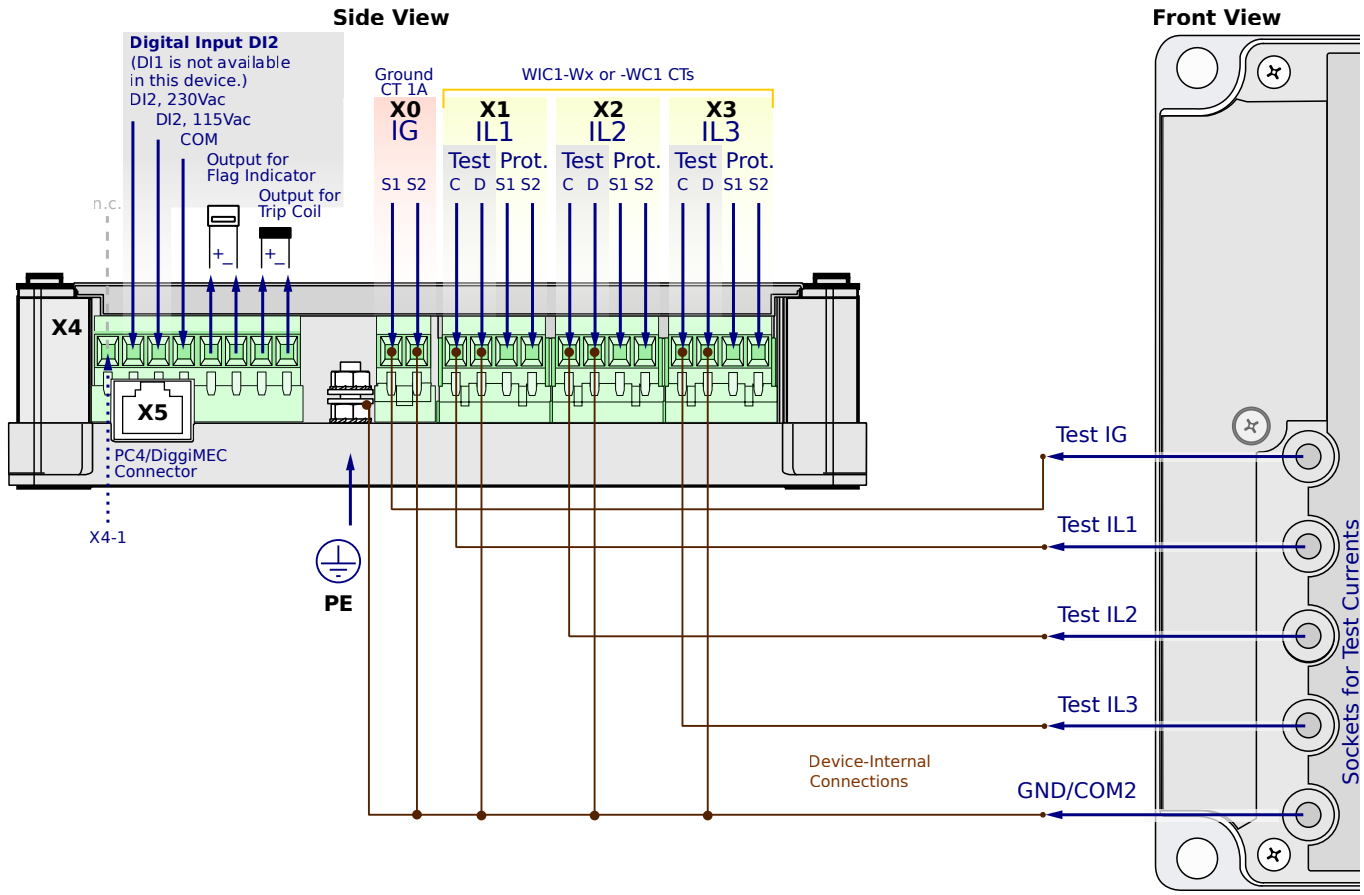


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC1PAH

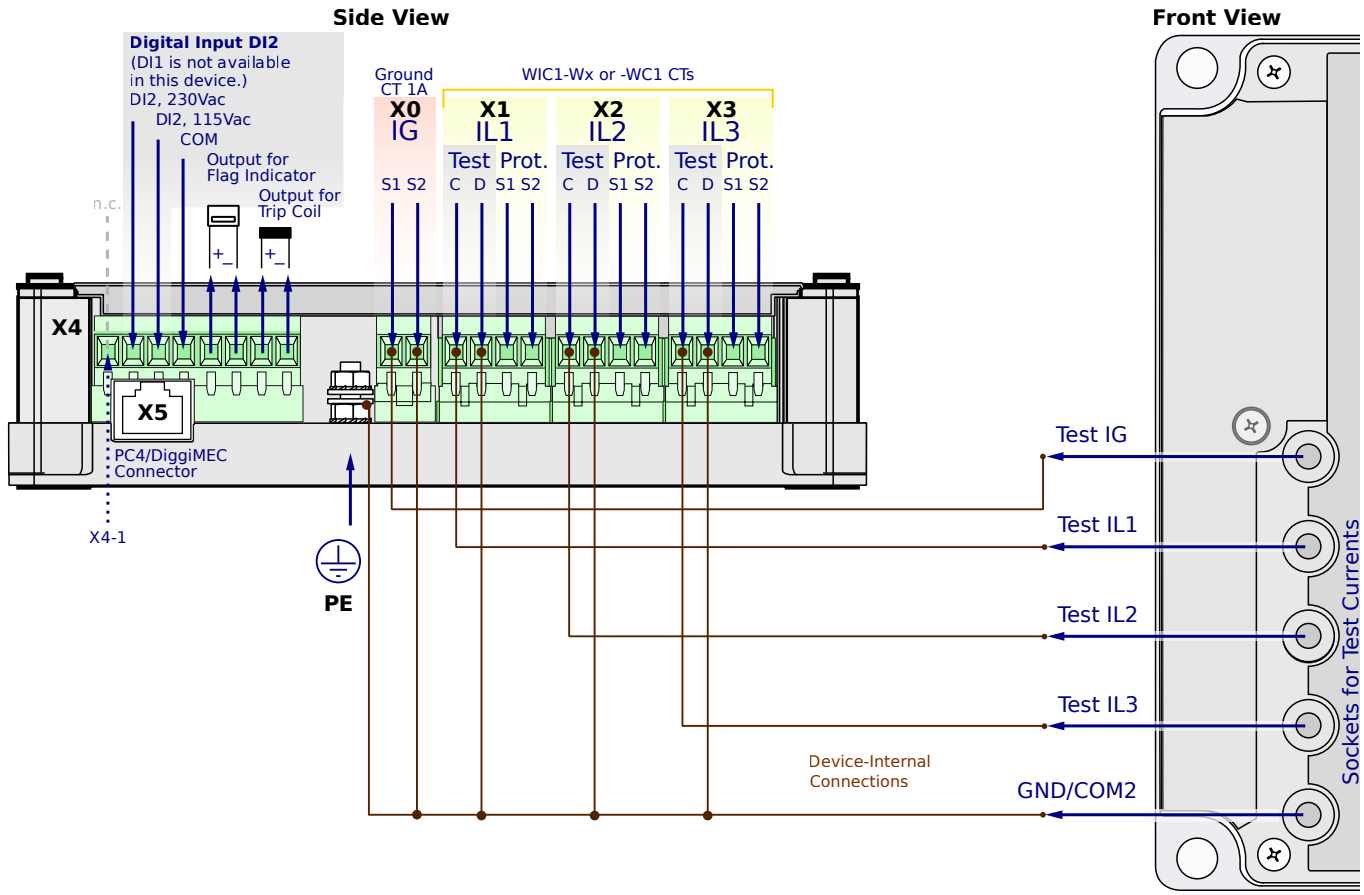


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2SA0

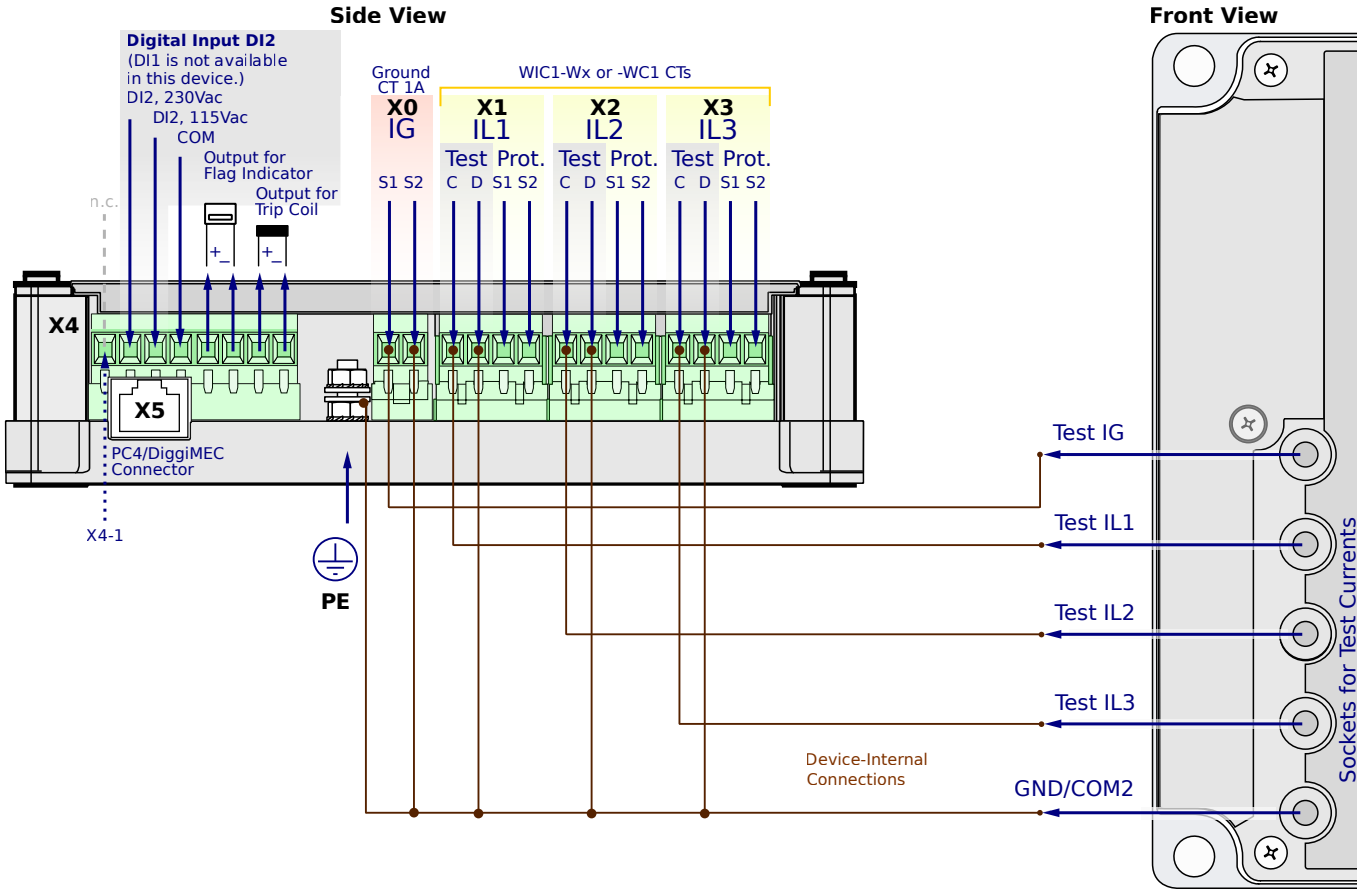


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2SAH

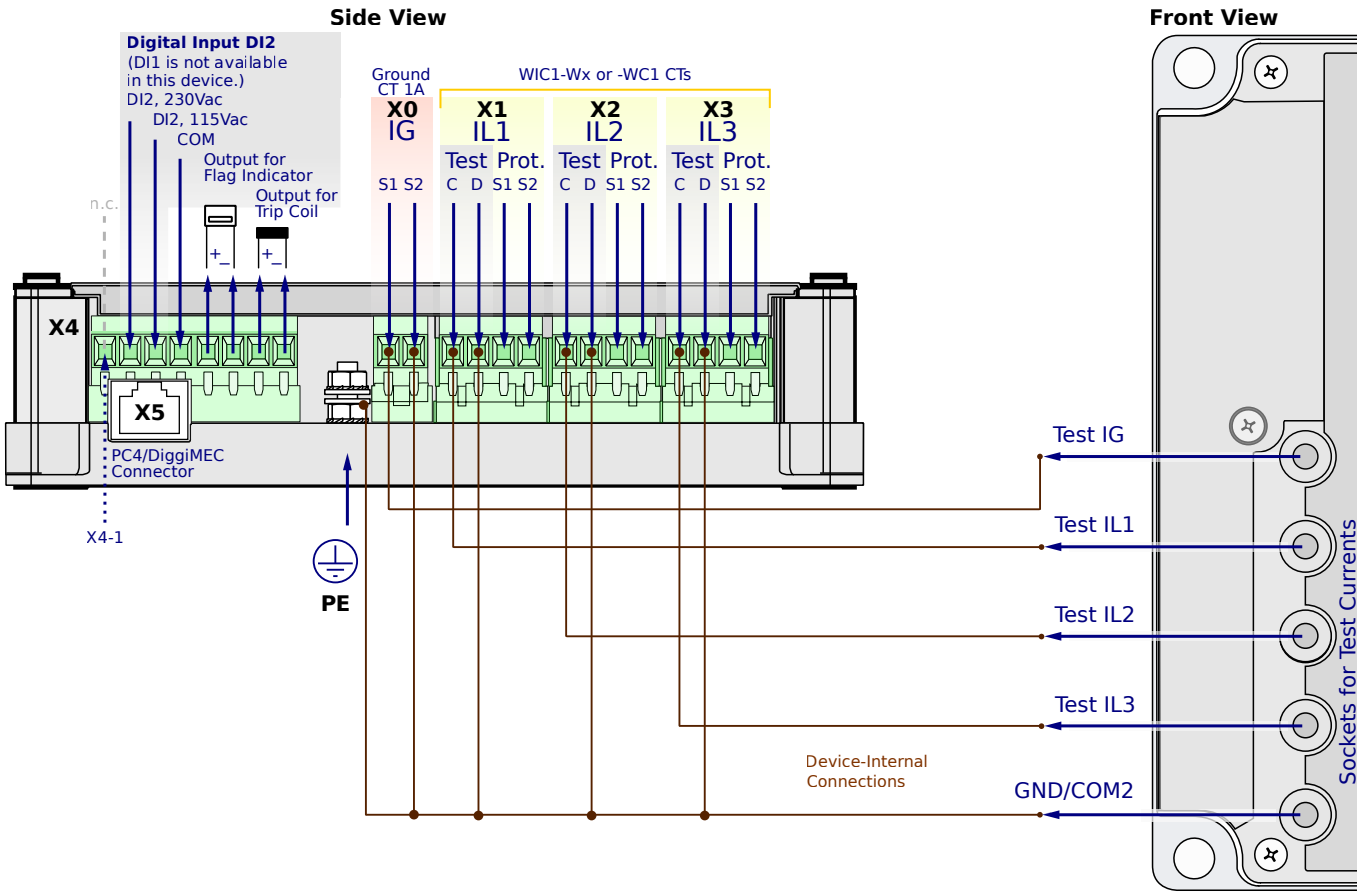


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2AA0

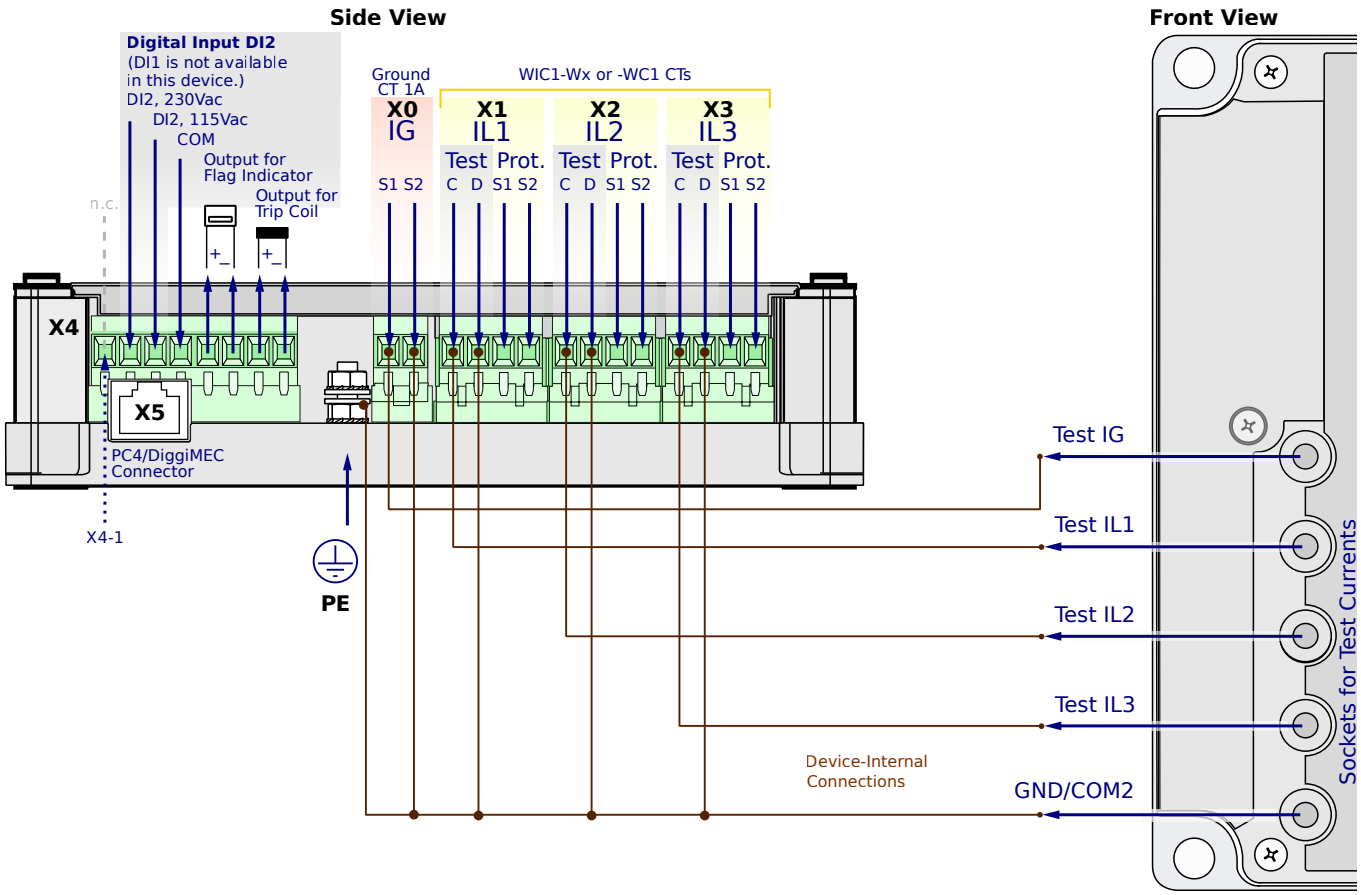


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2AAH

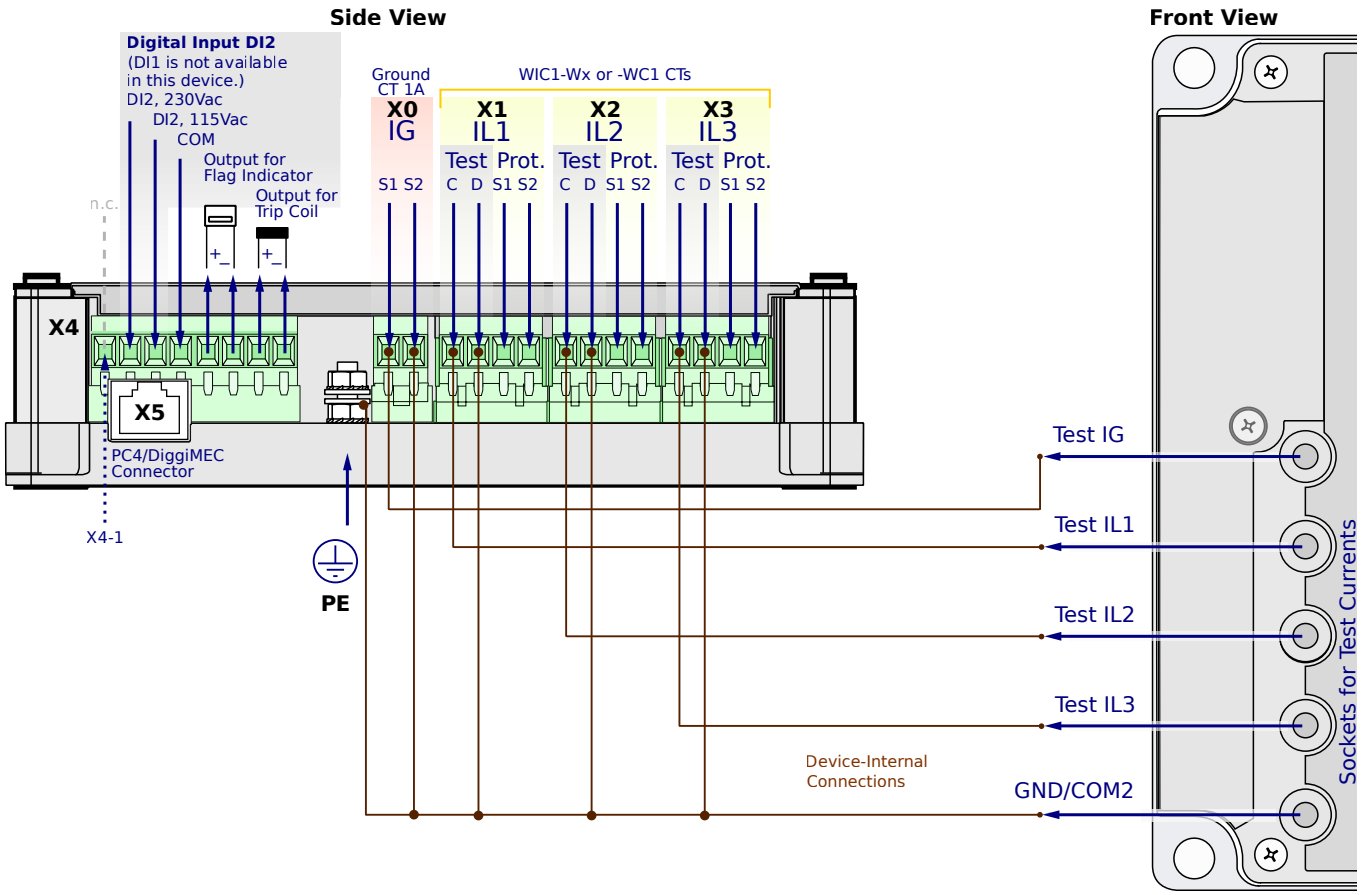


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2PA0

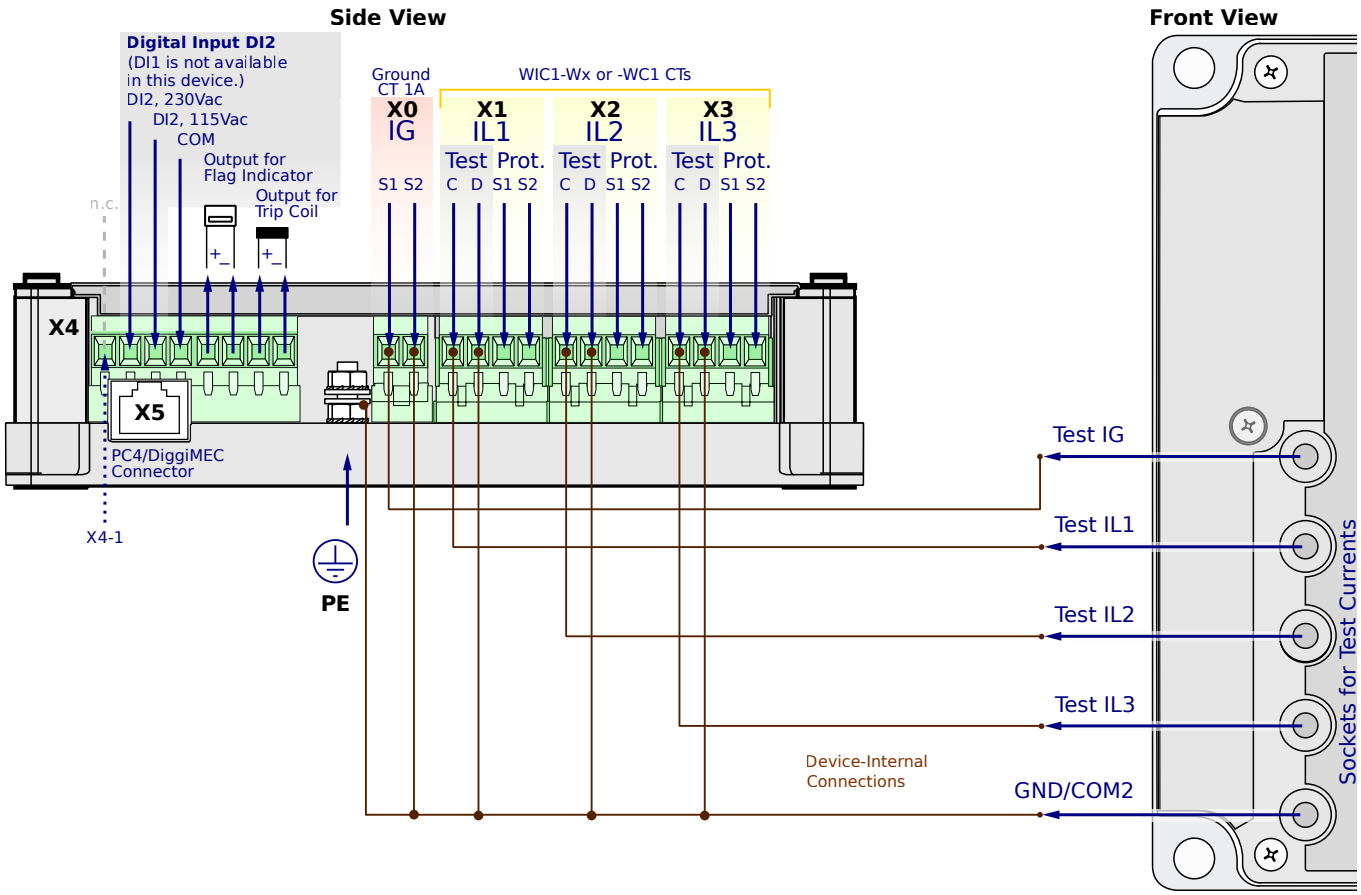


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0FC2PAH

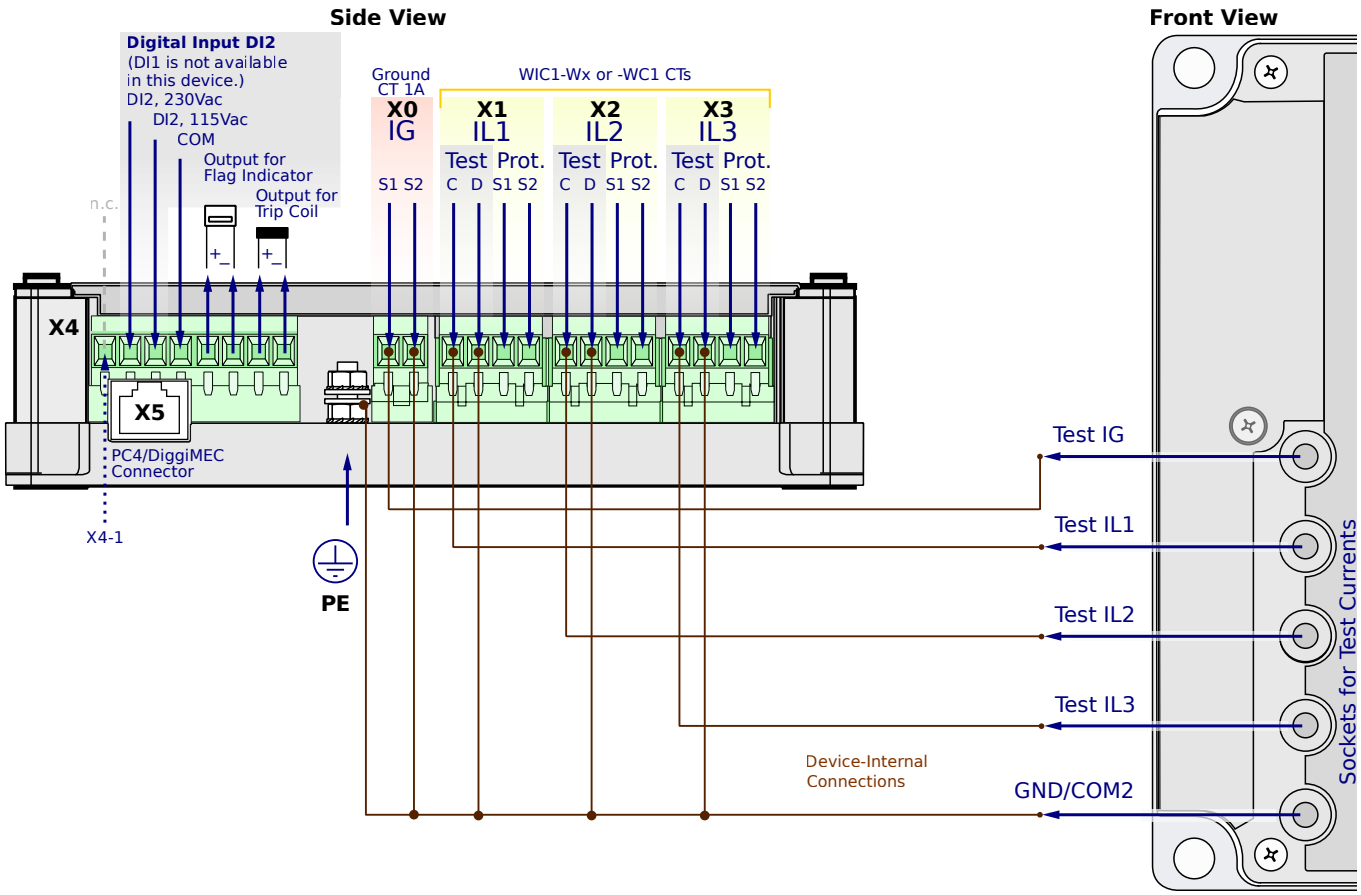


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1SA0

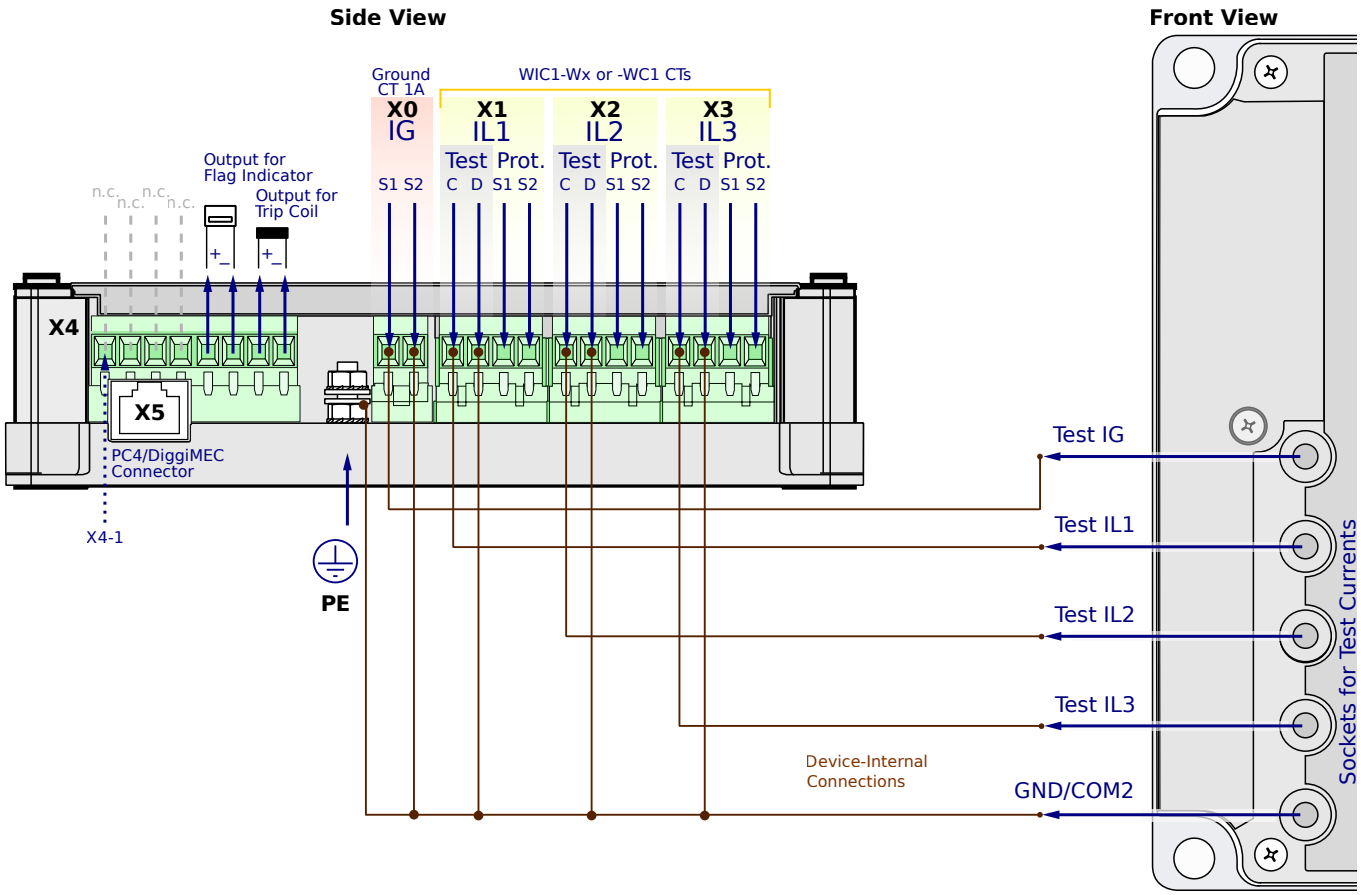


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1SAH

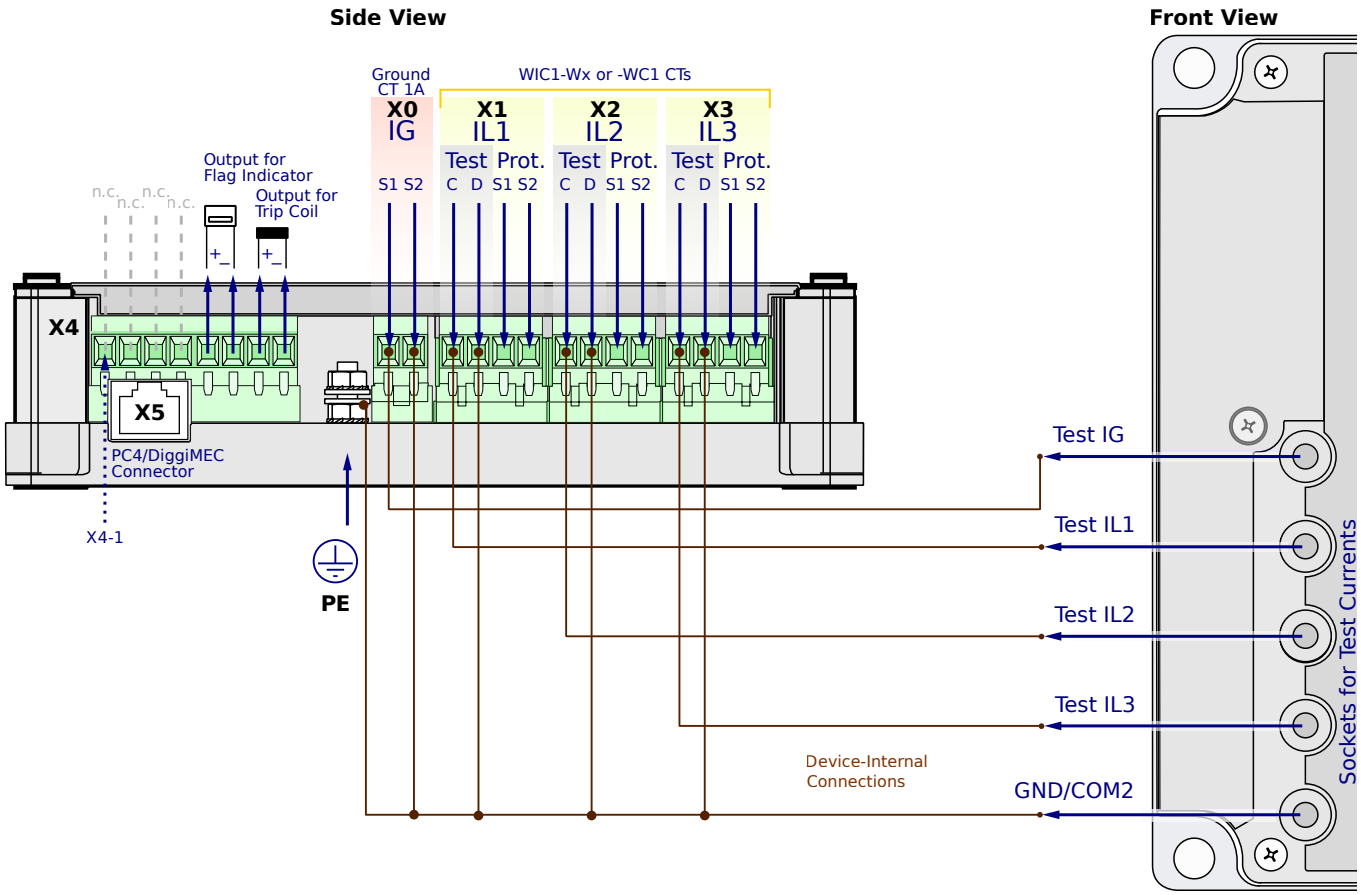


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1AA0

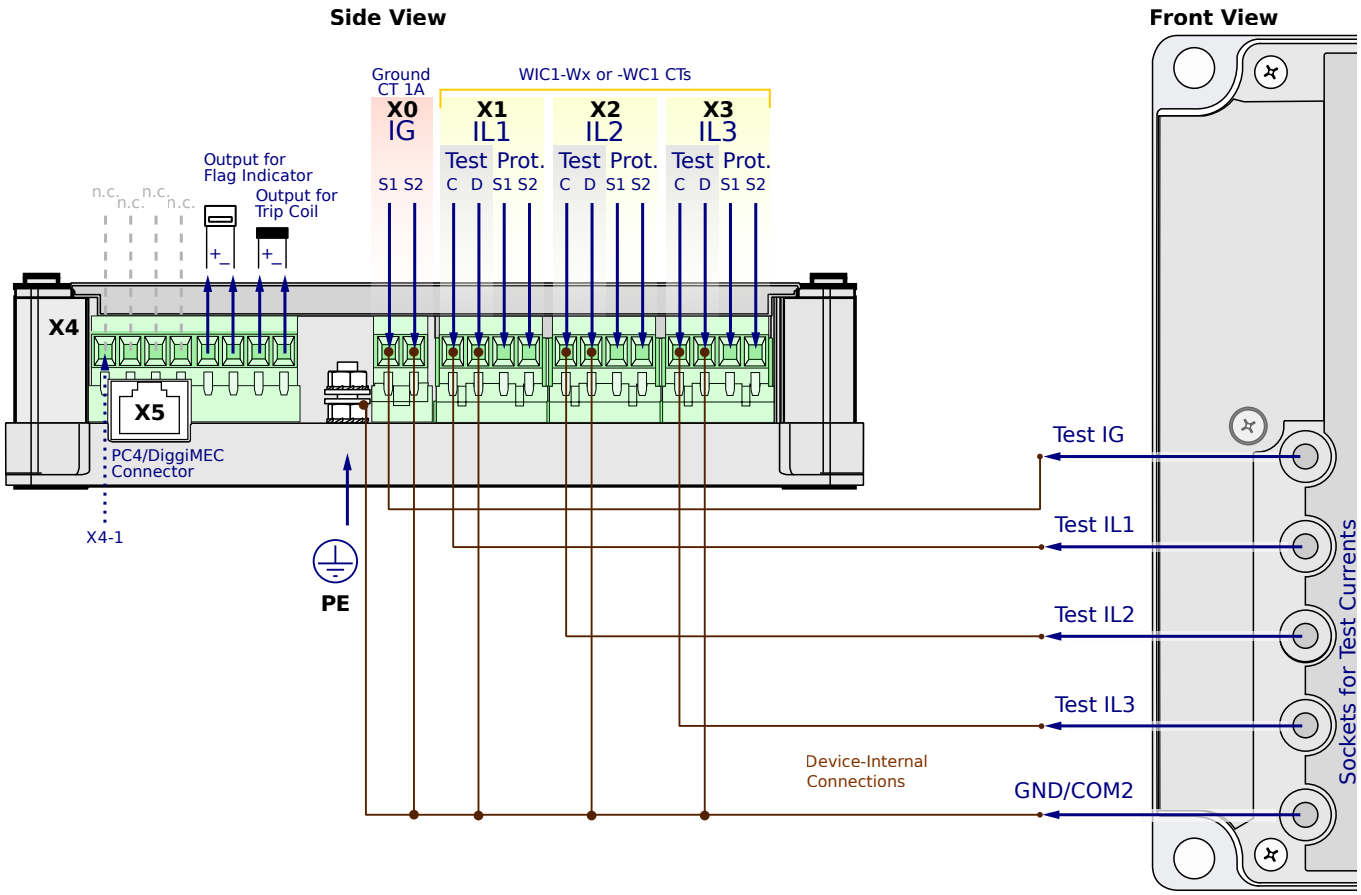


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1AAH

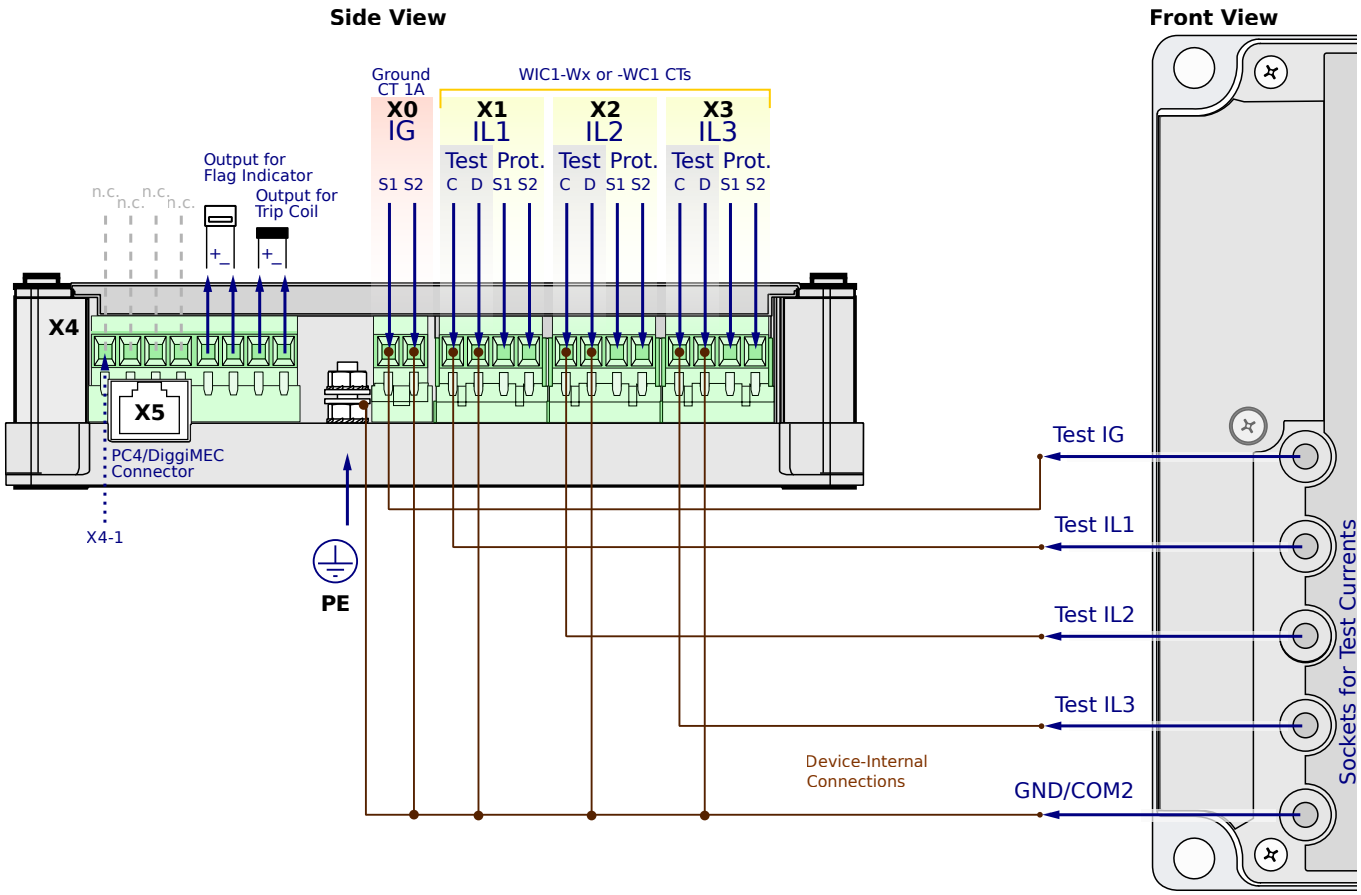


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1PA0

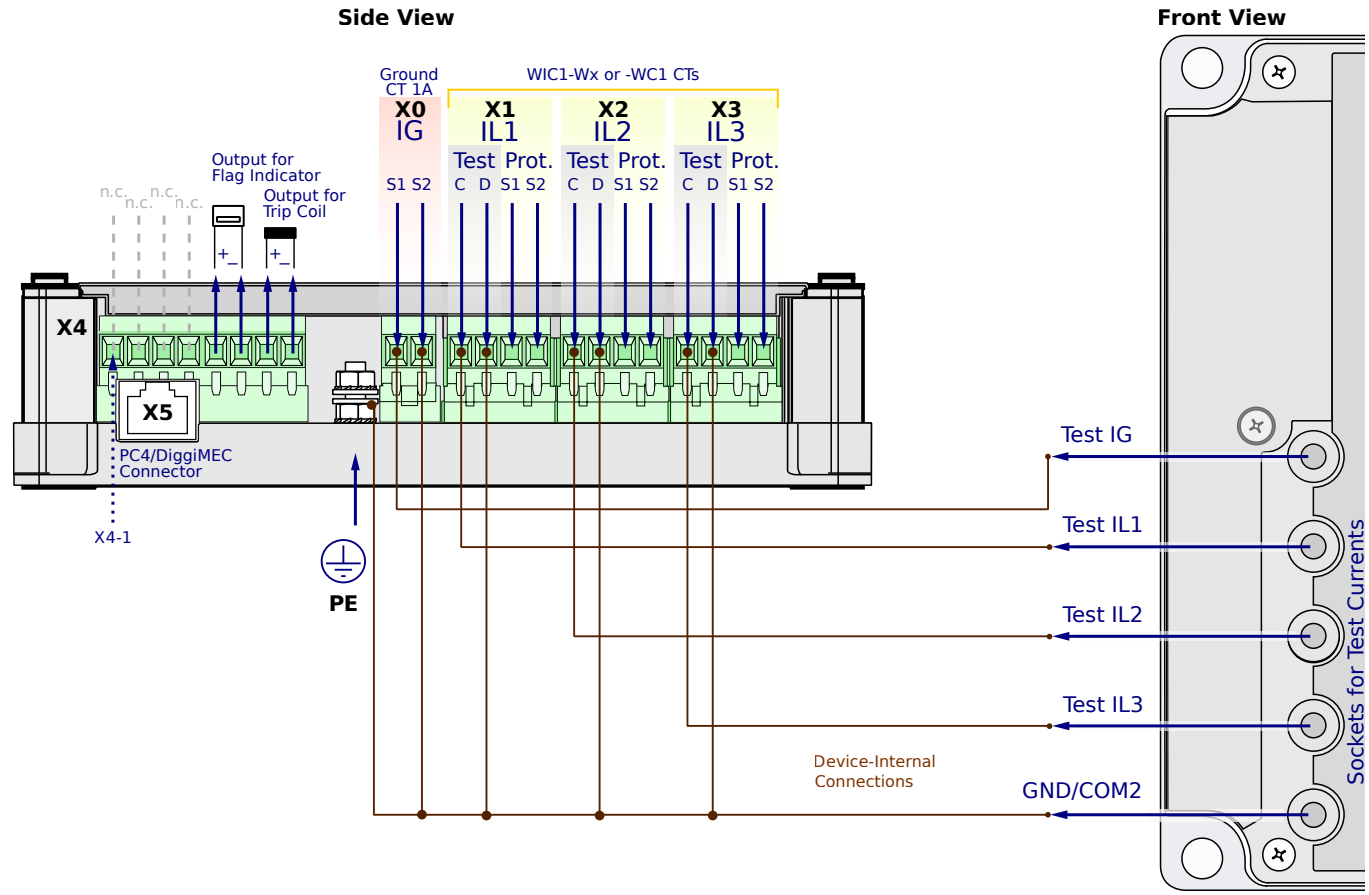


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN1PAH

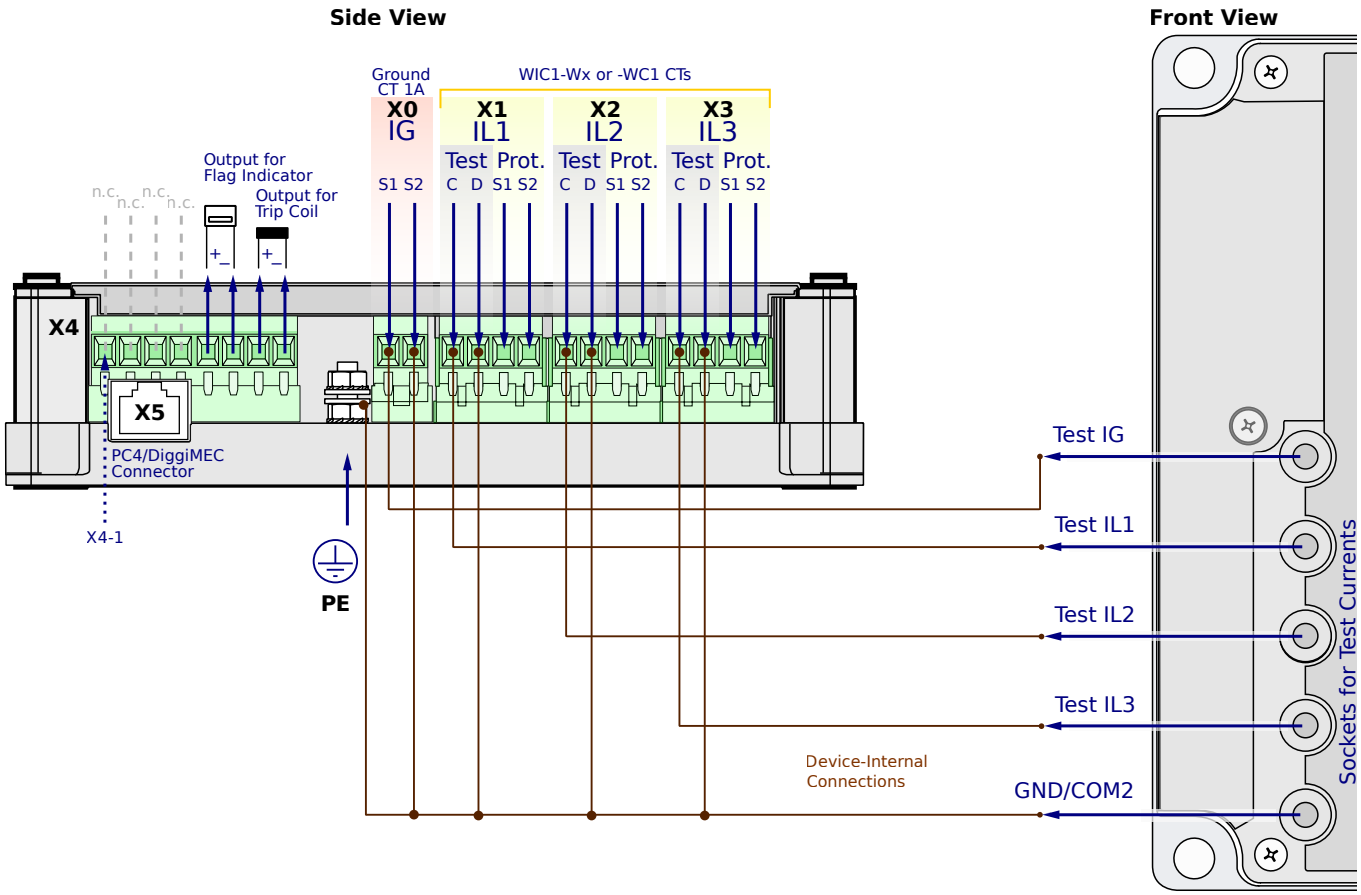


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2SA0

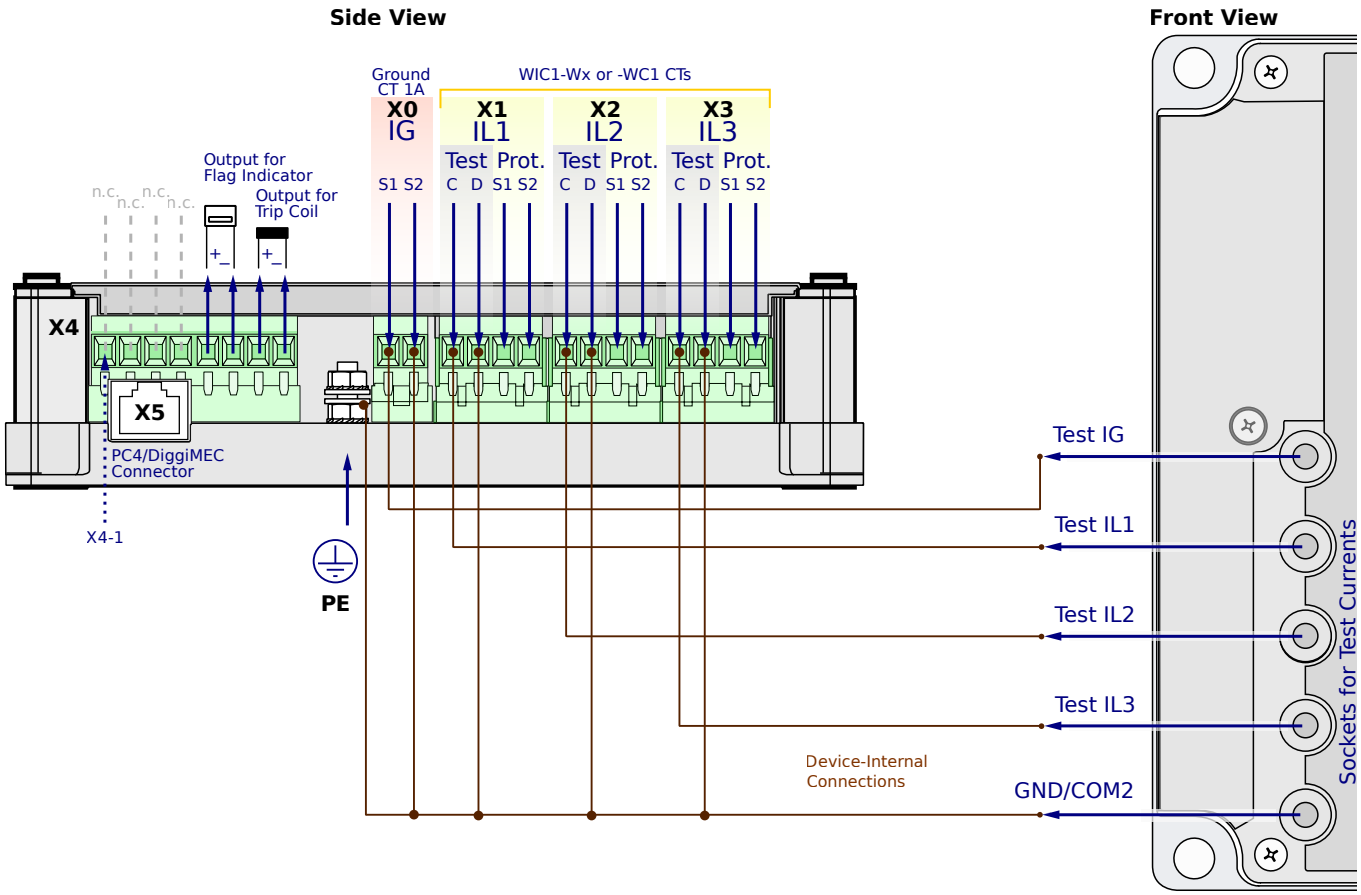


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2SAH

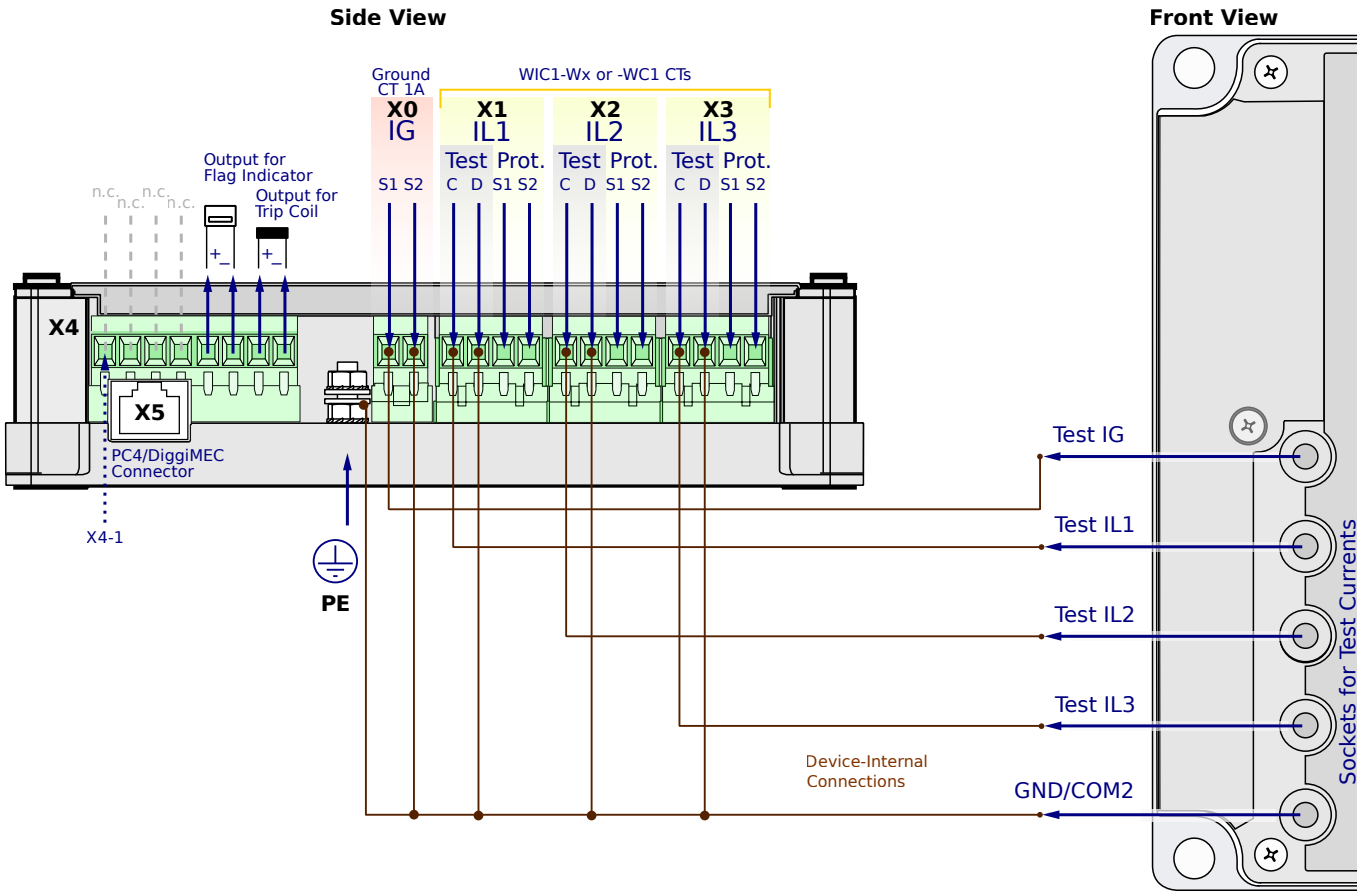


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2AA0

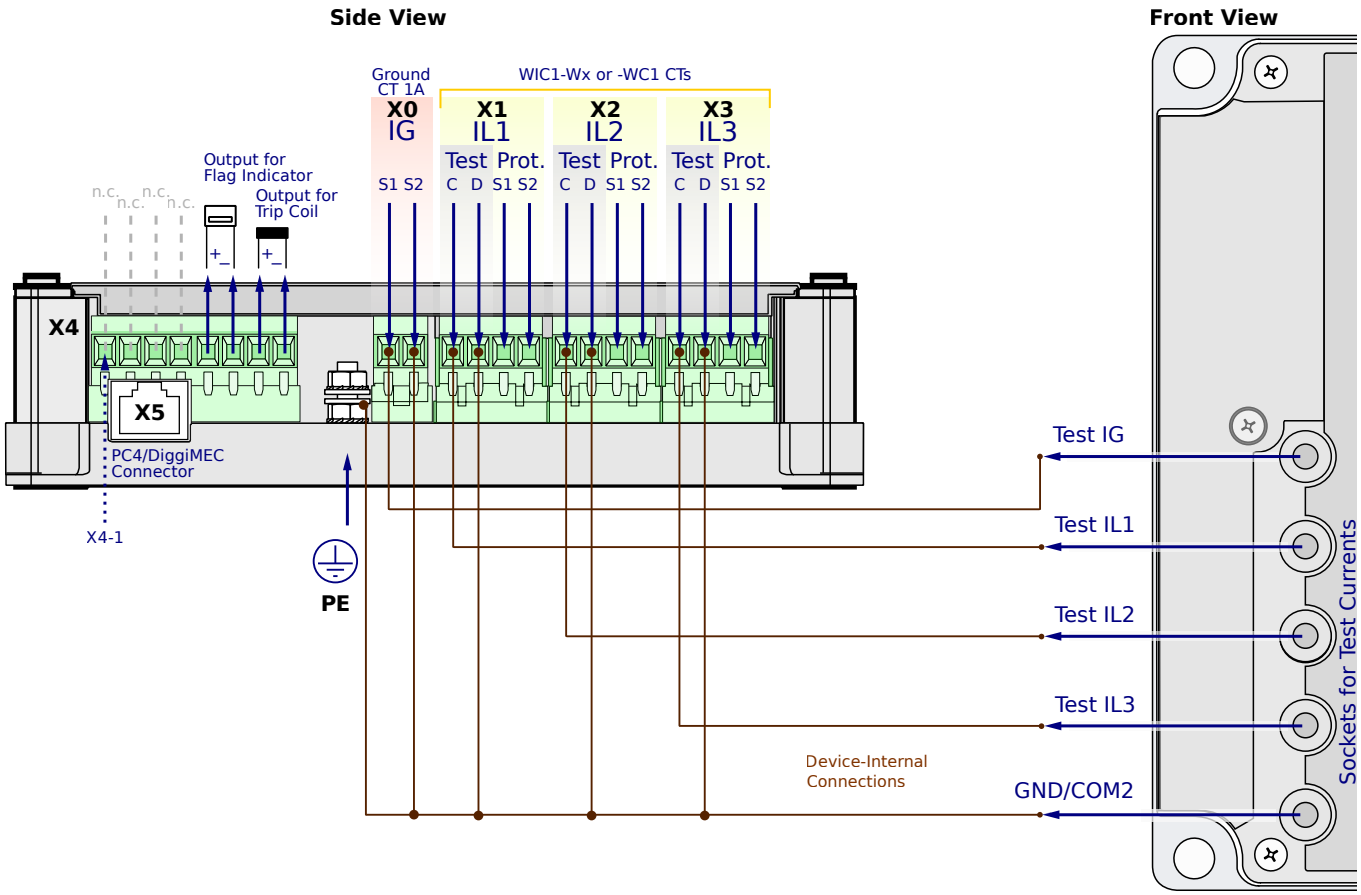


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2AAH

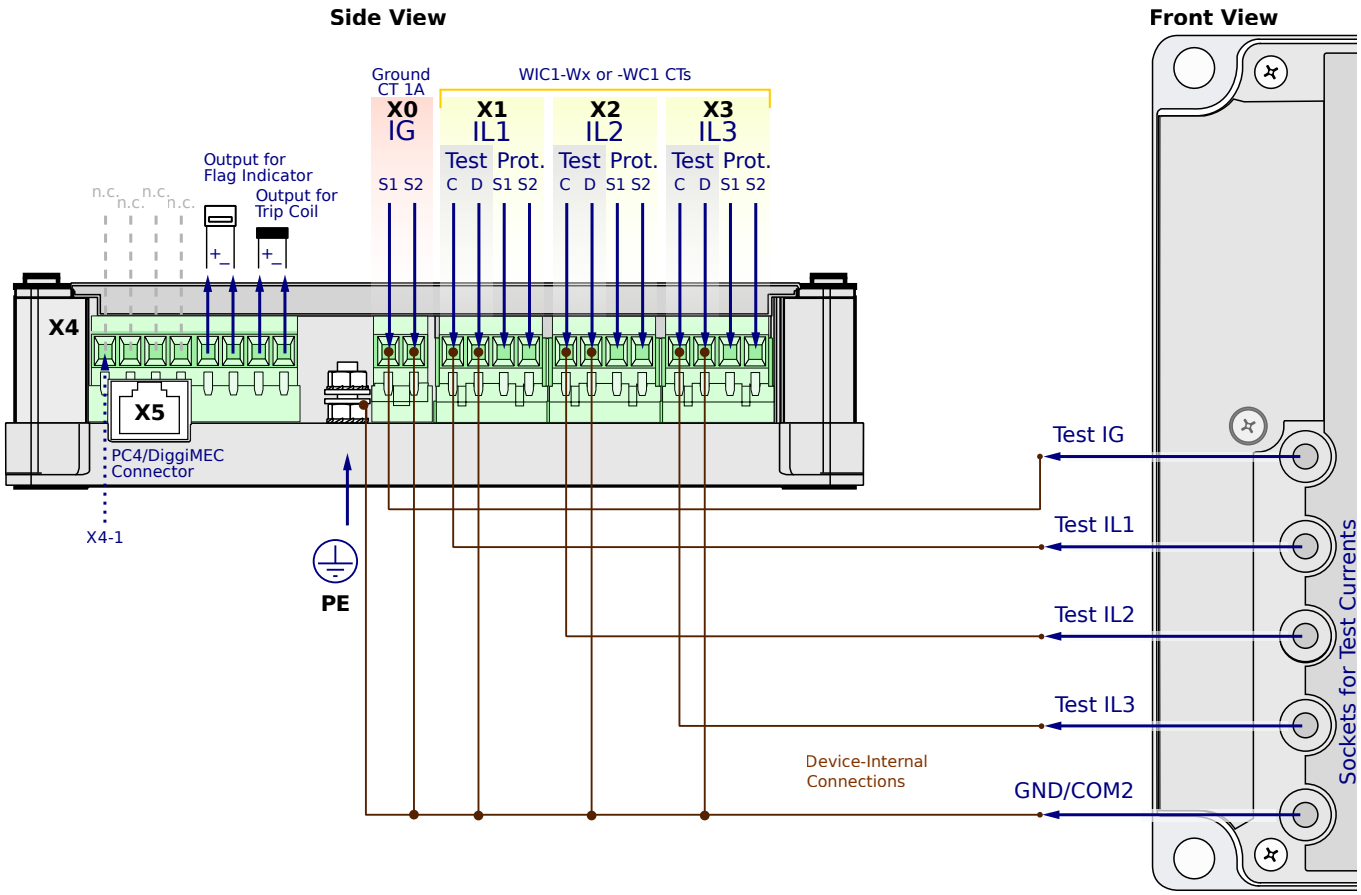


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2PA0

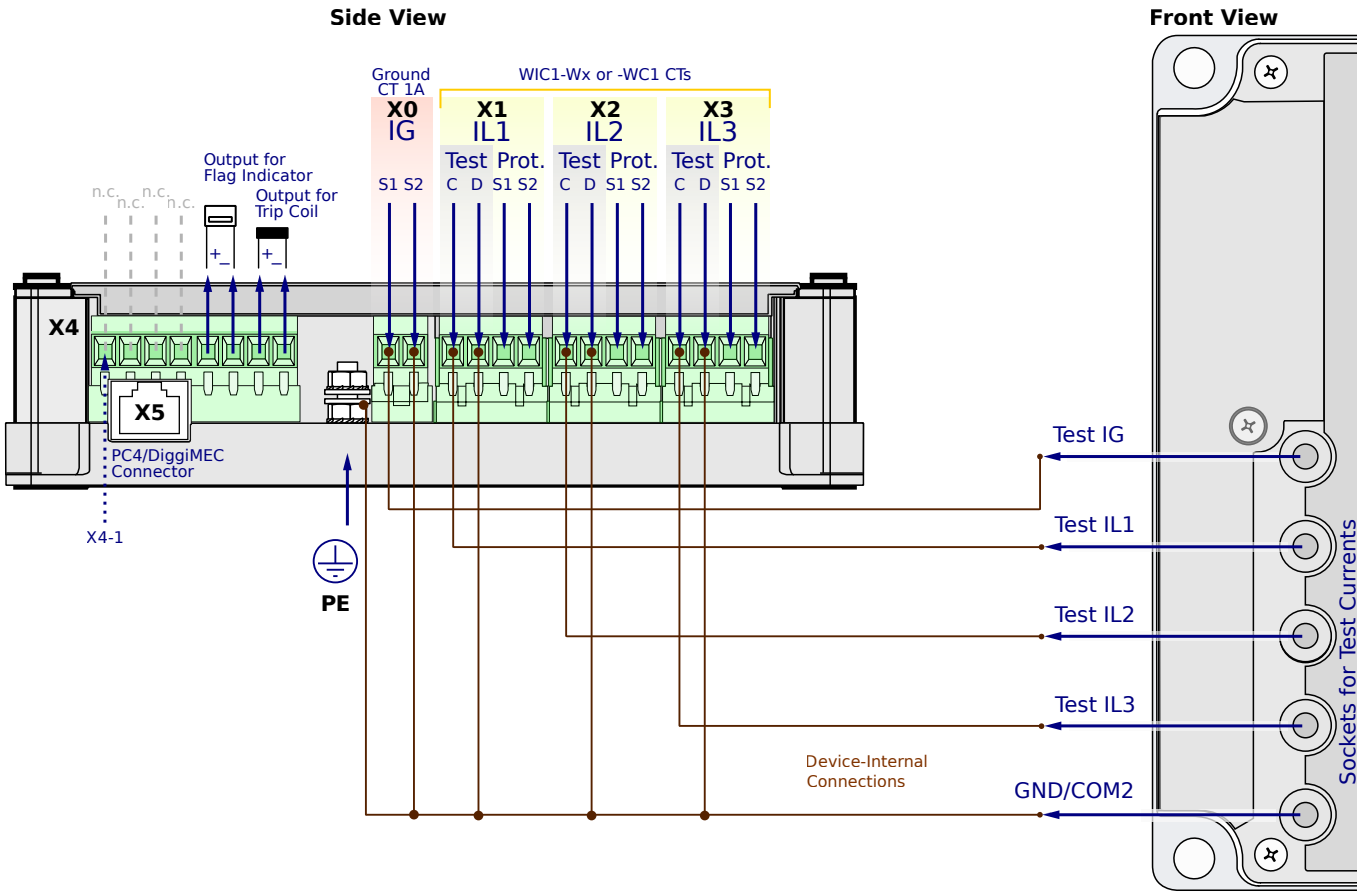


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CN2PAH

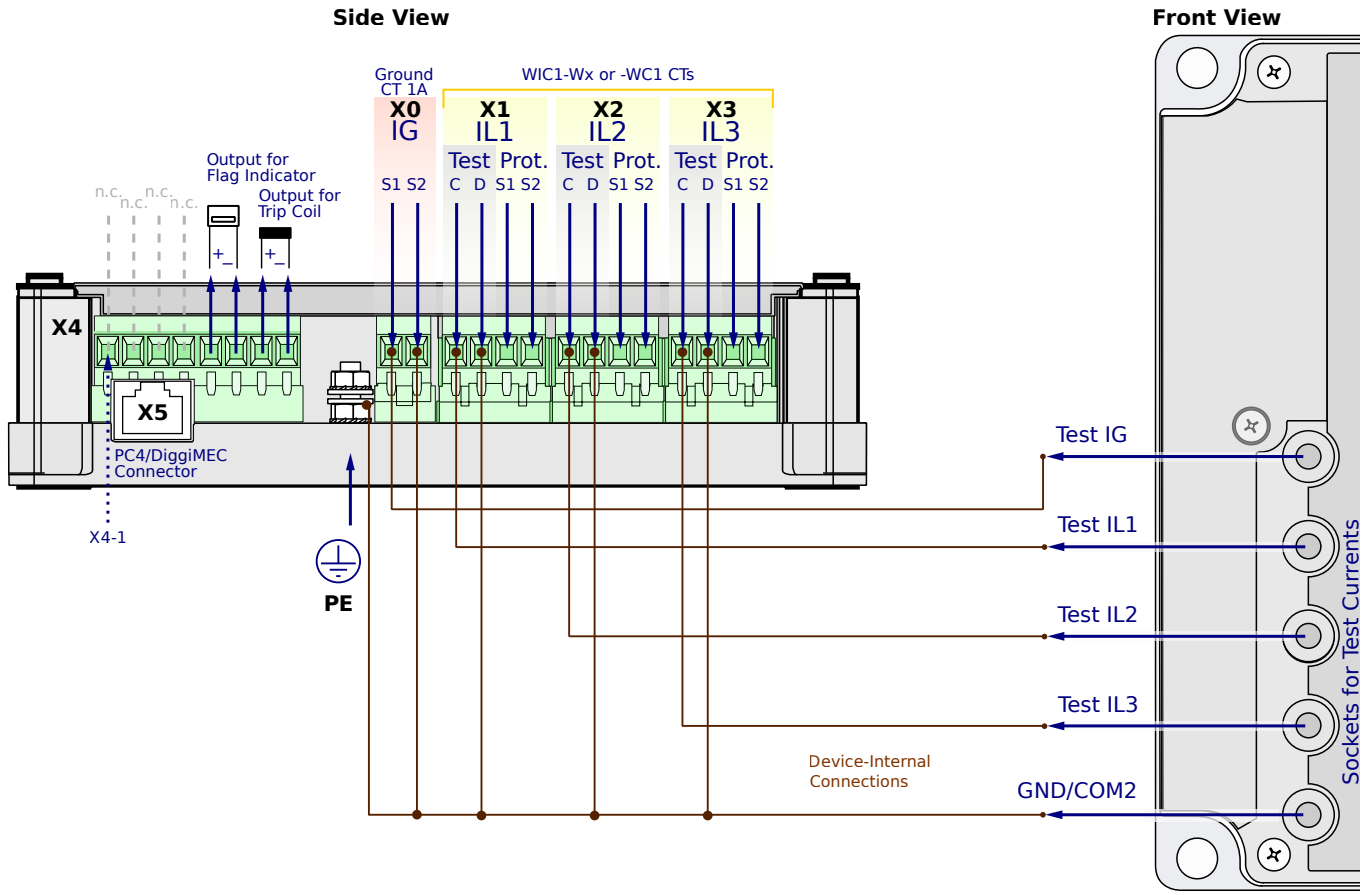


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1SA0

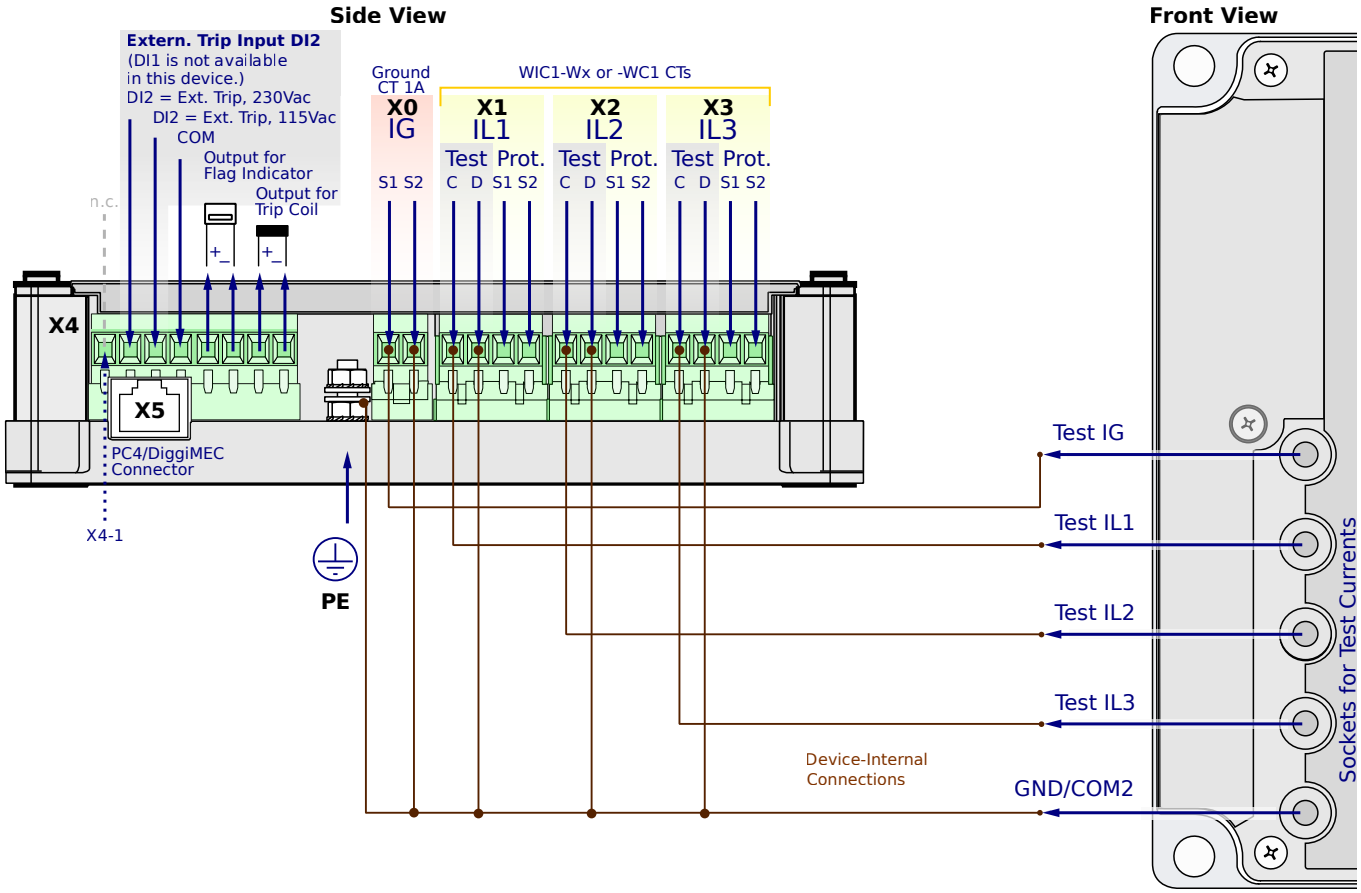


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1SAH

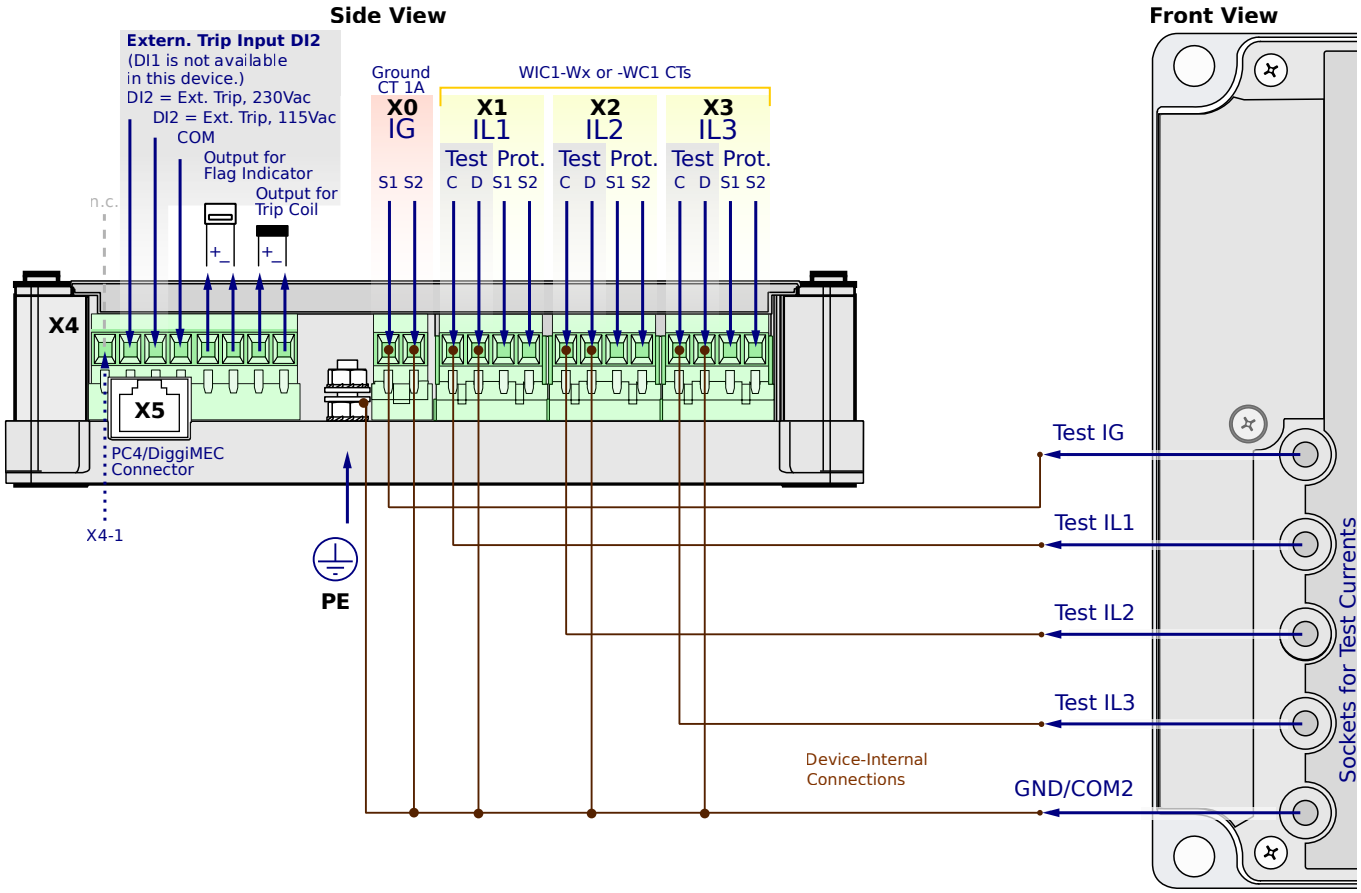


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1AA0

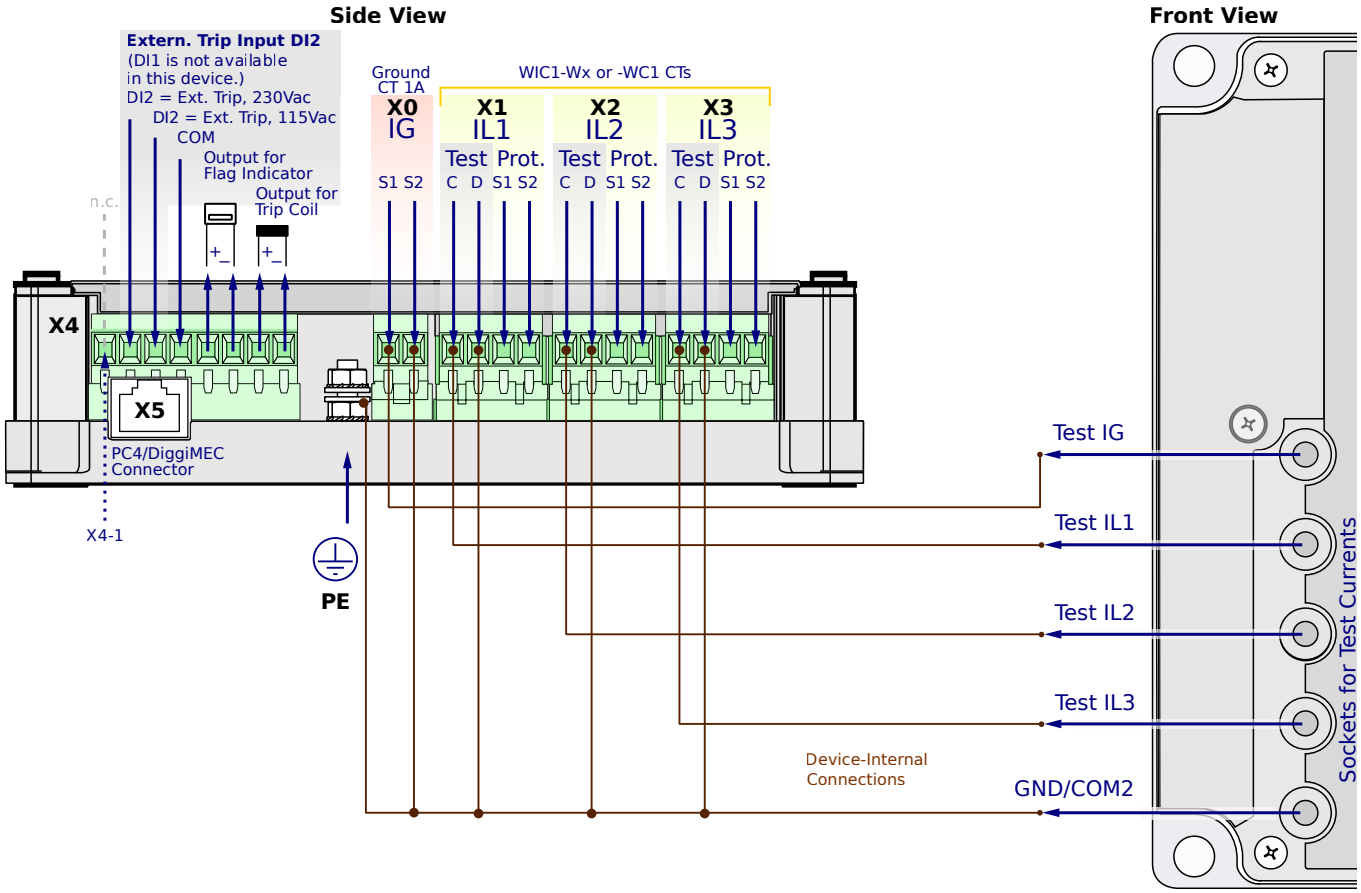


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1AAH

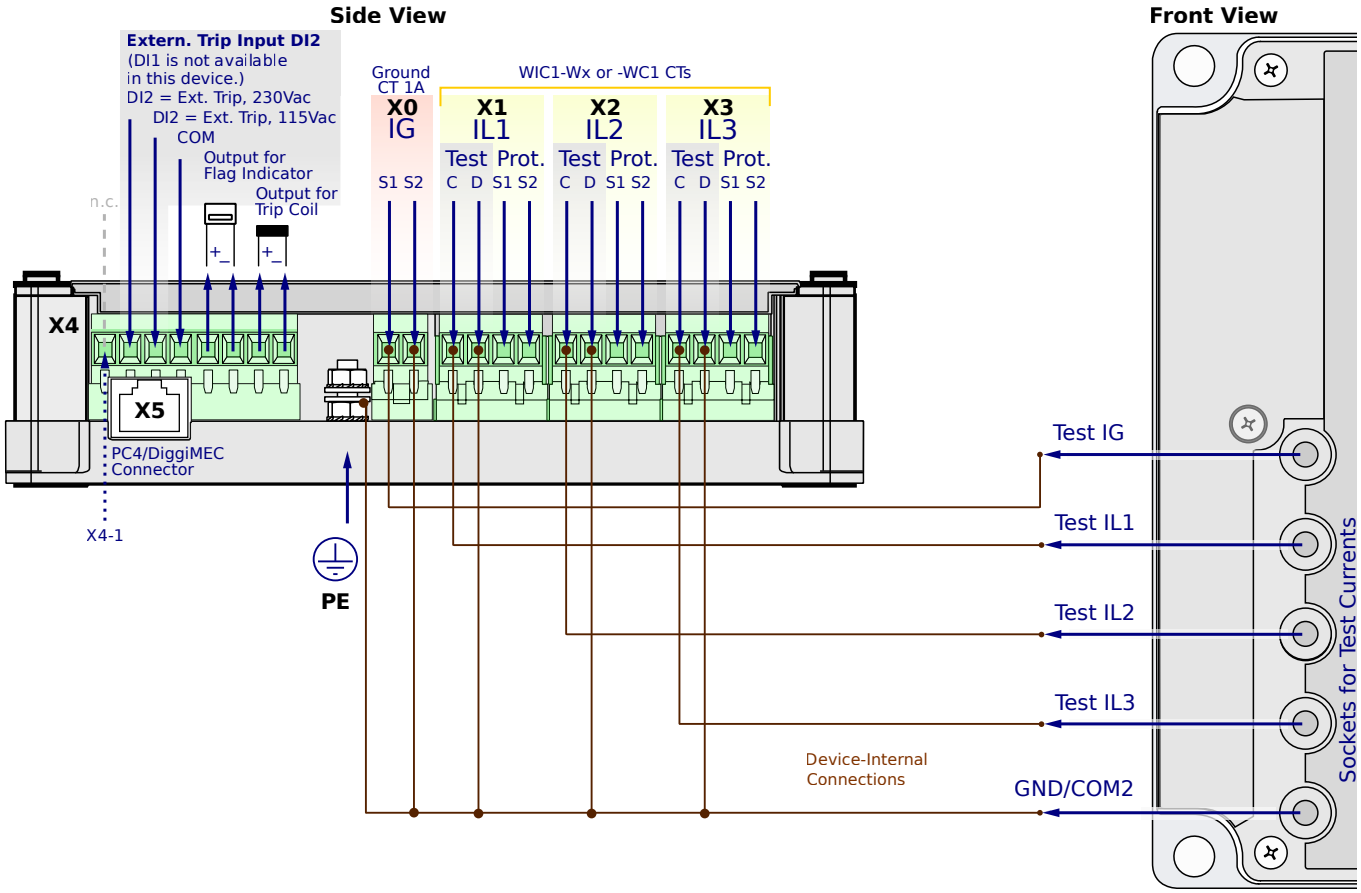


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1PA0

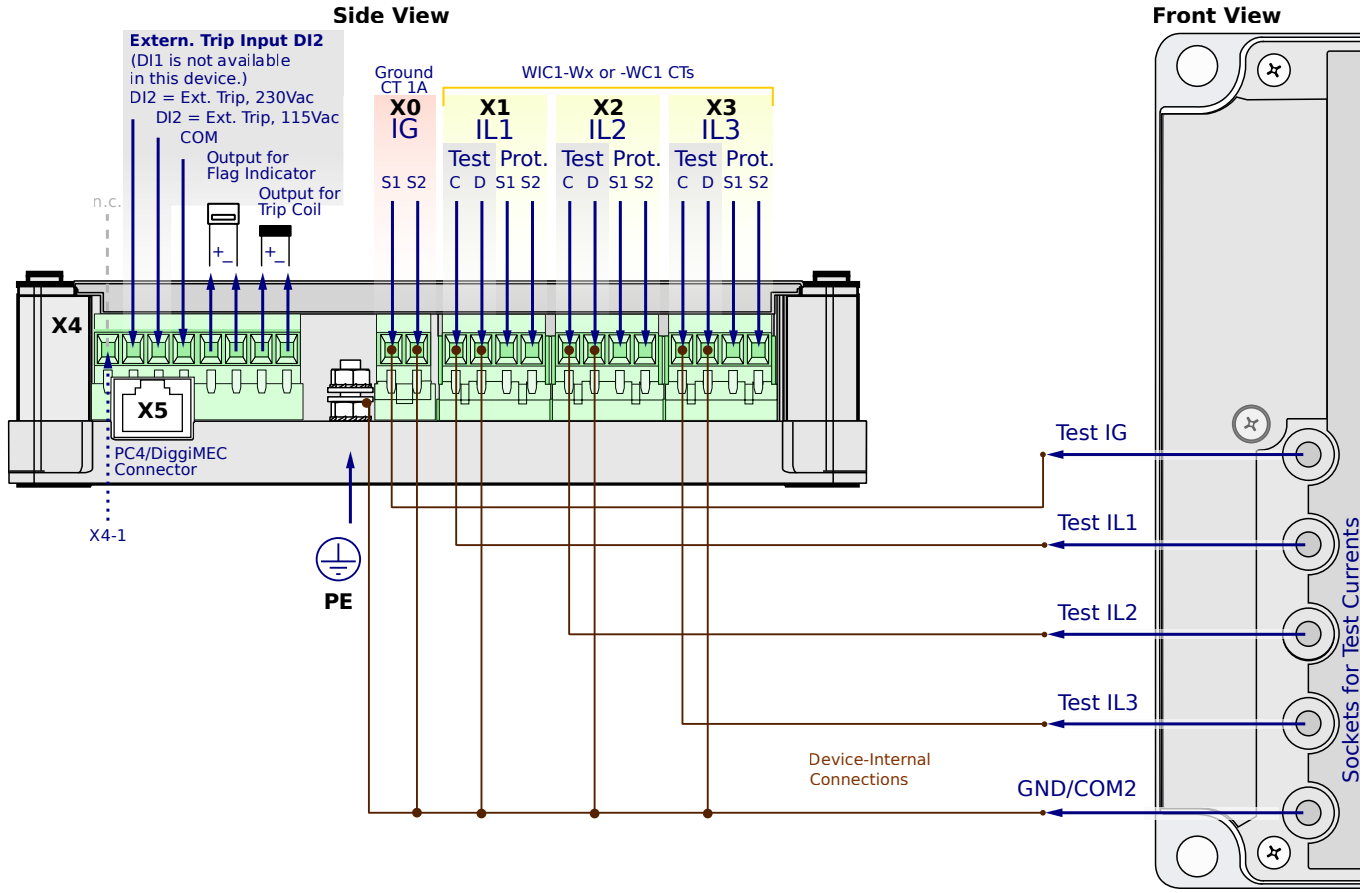


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF1PAH

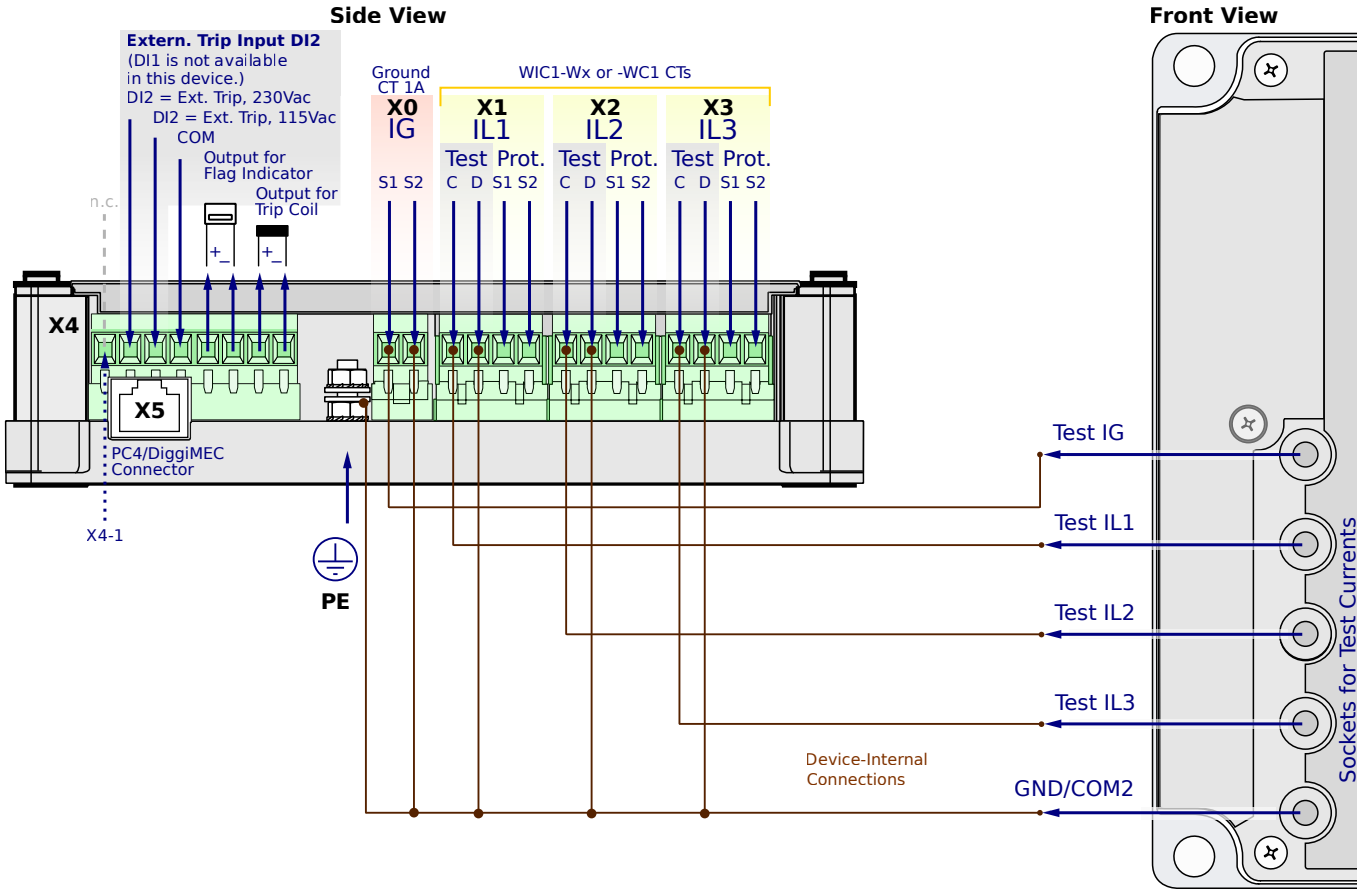


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2SA0

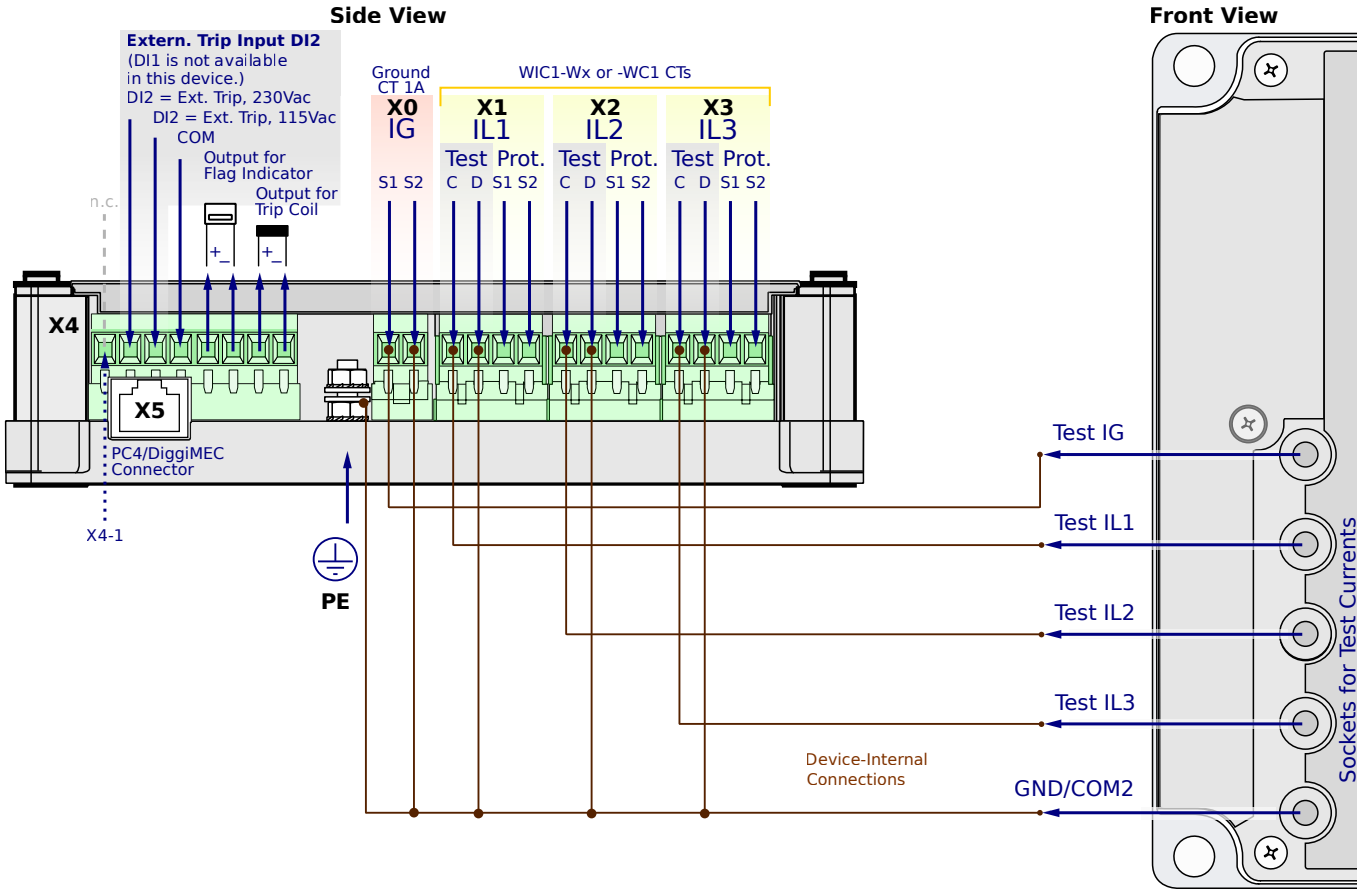


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2SAH

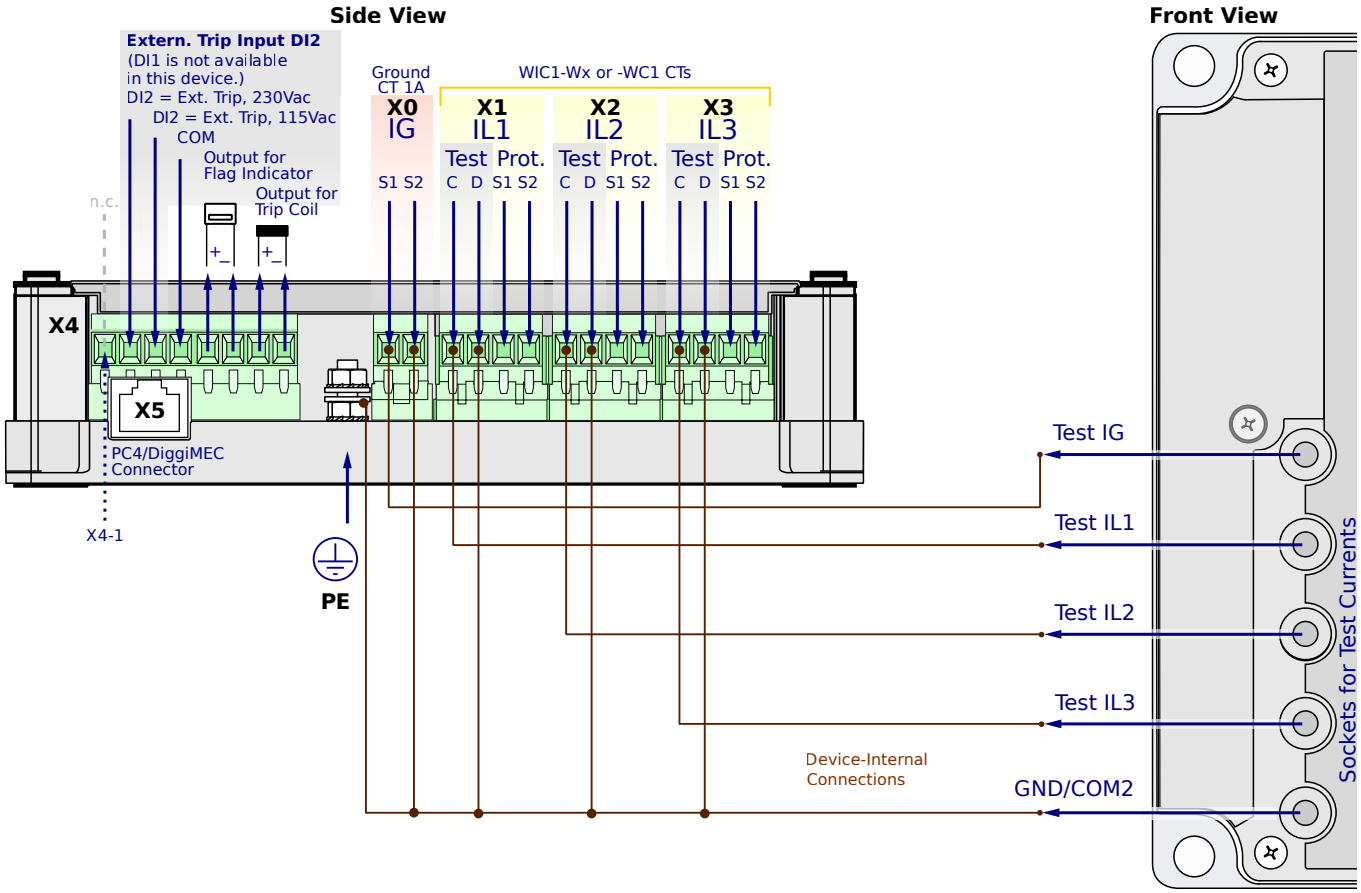


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2AA0

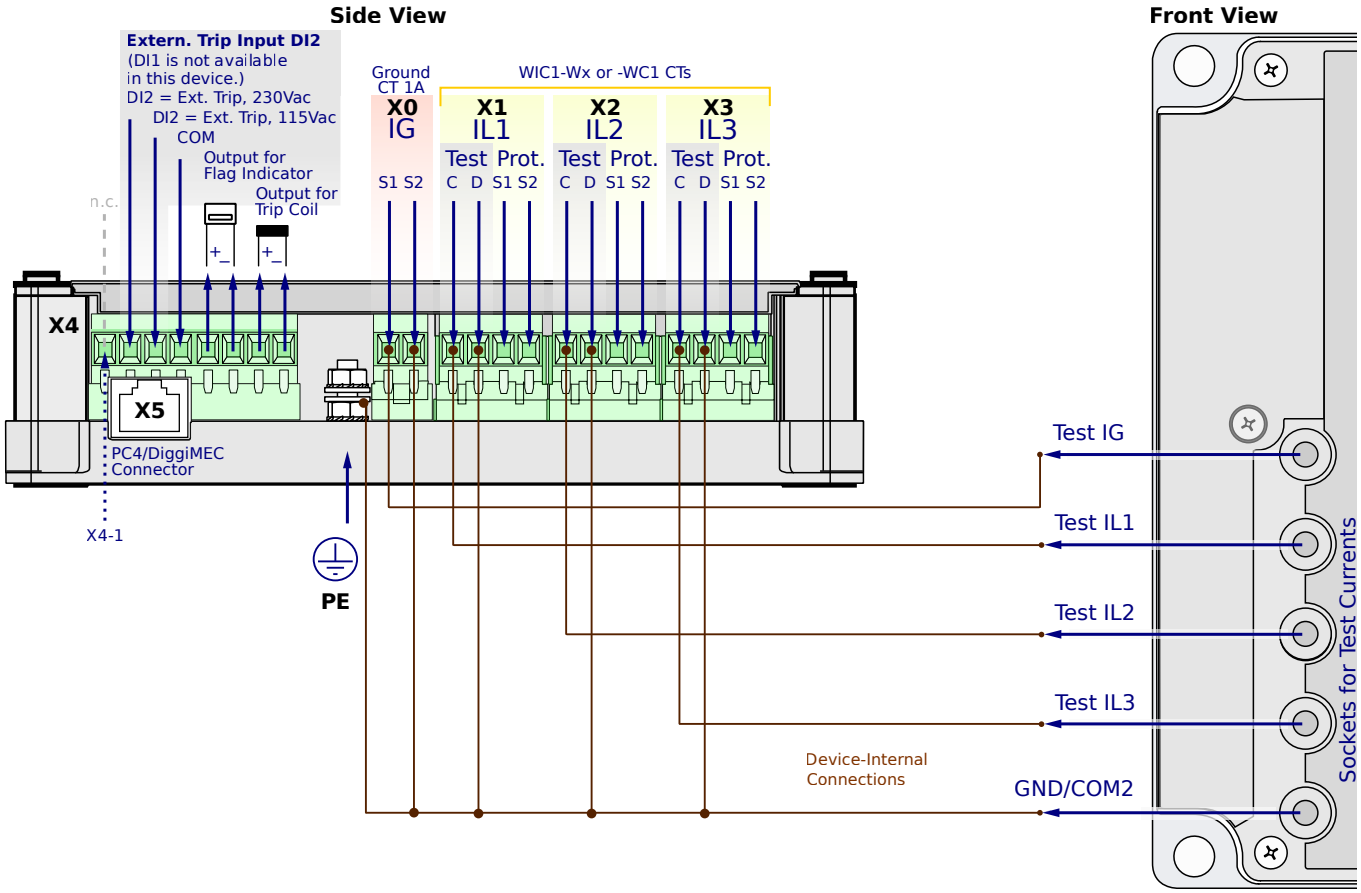


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2AAH

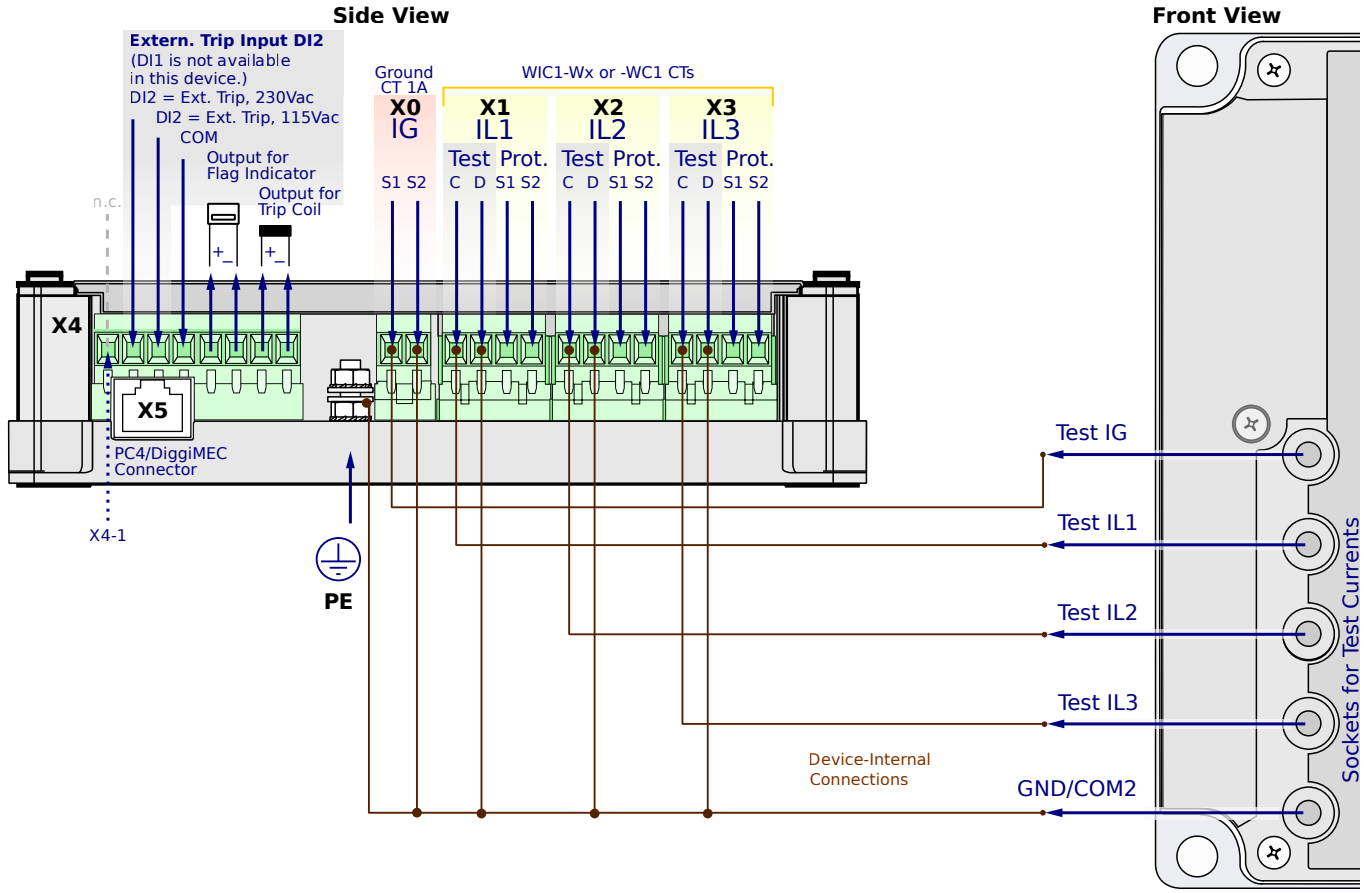


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2PA0

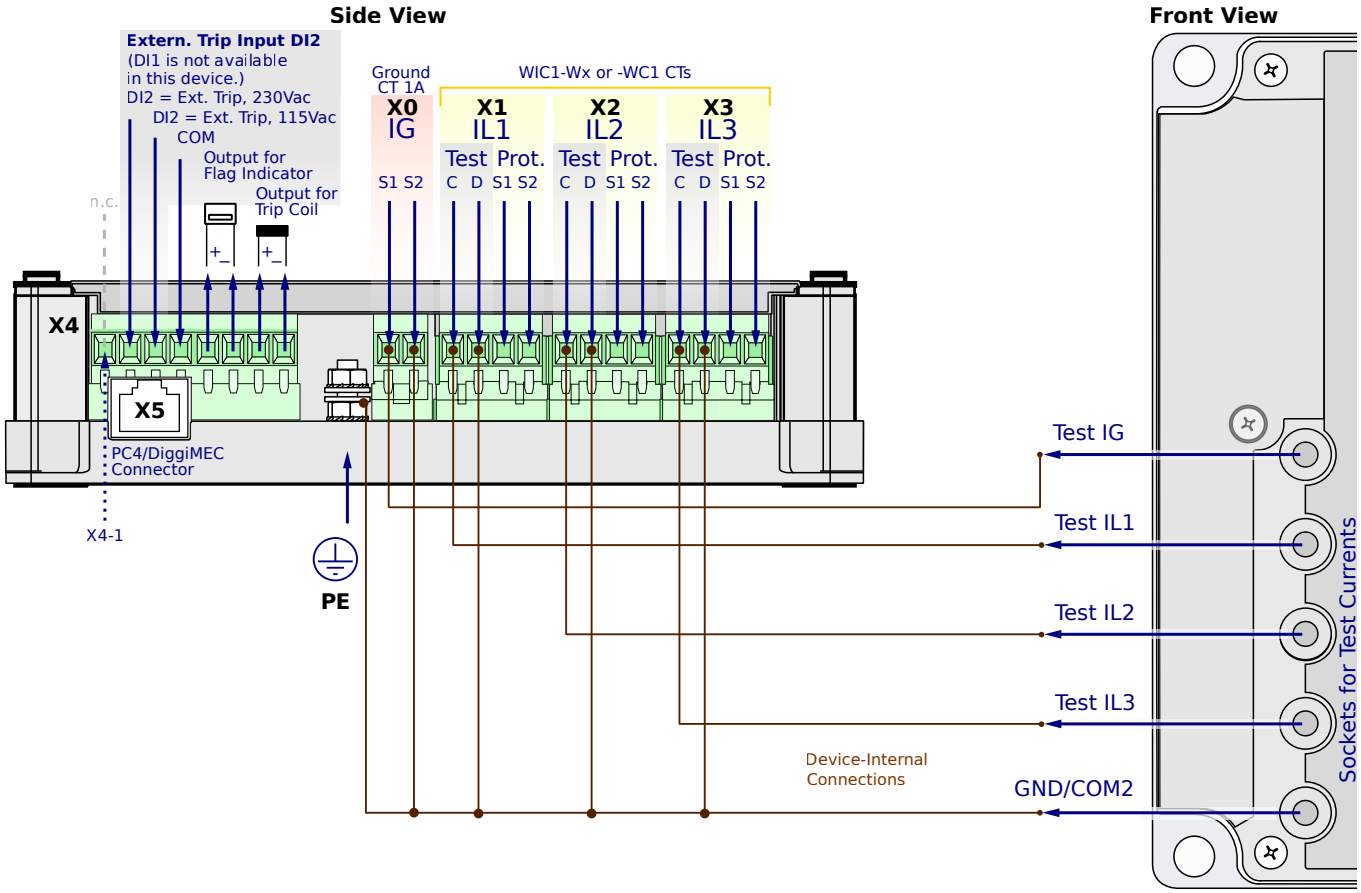


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CF2PAH

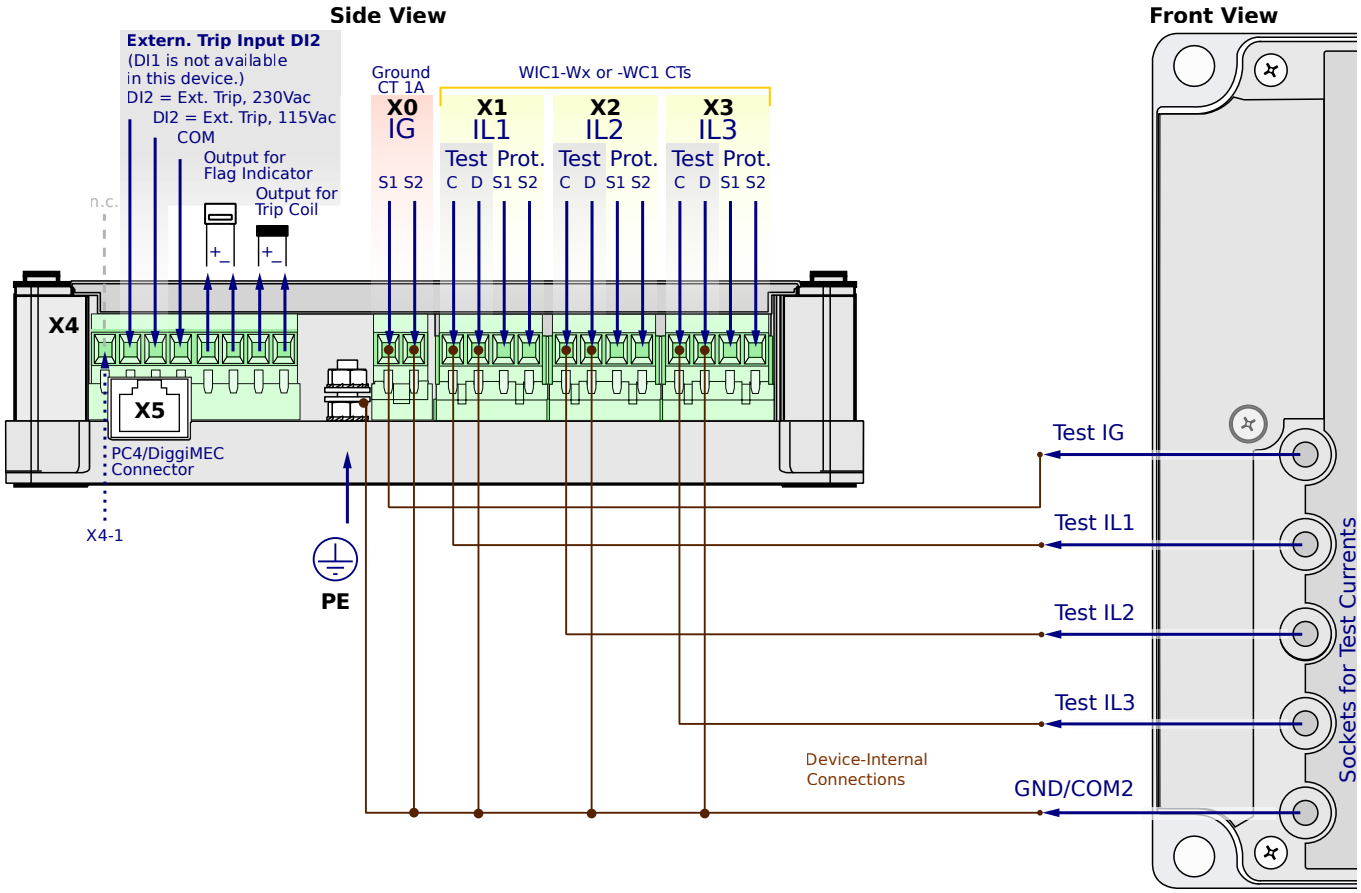


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1SA0

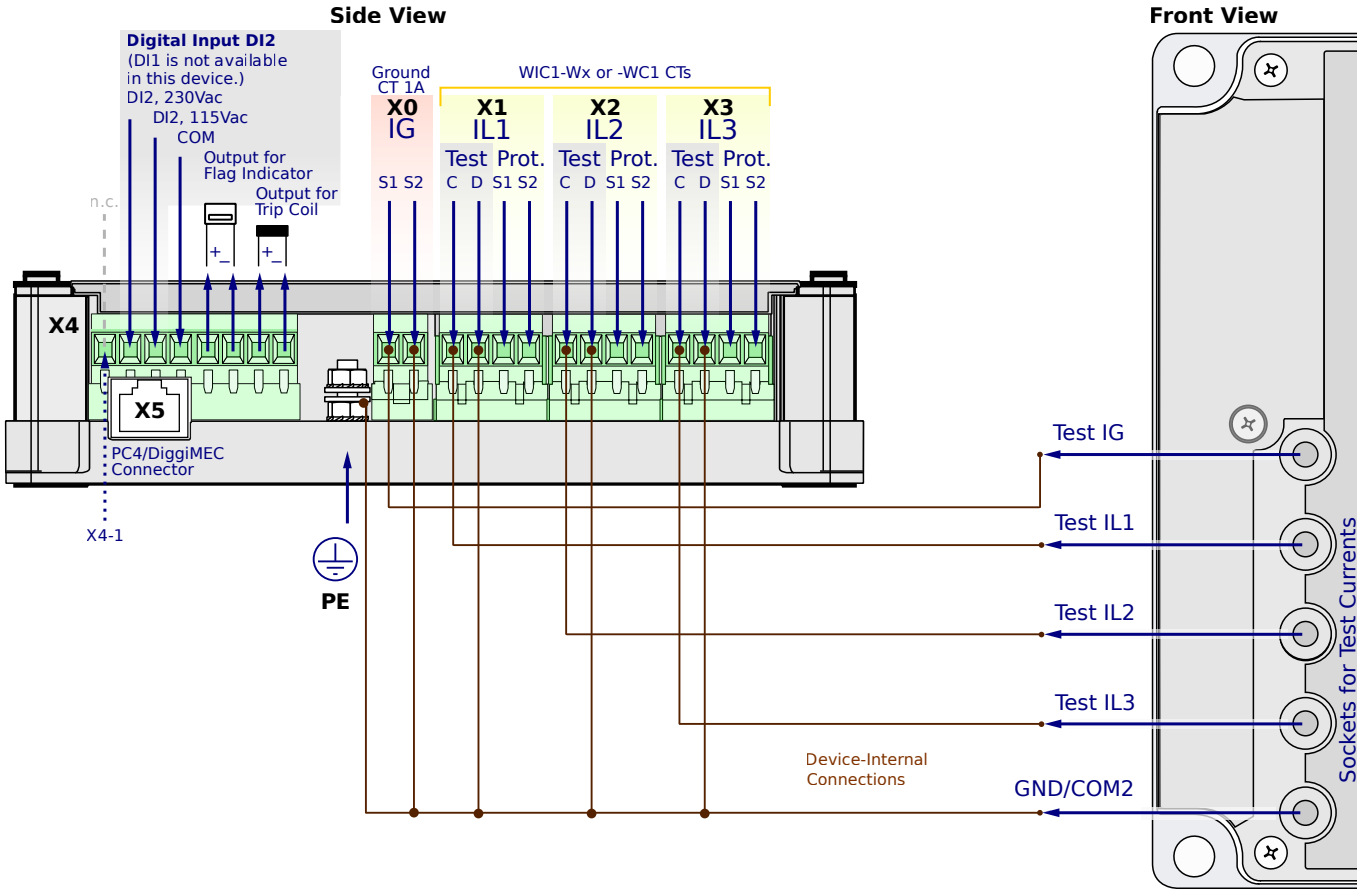


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1SAH

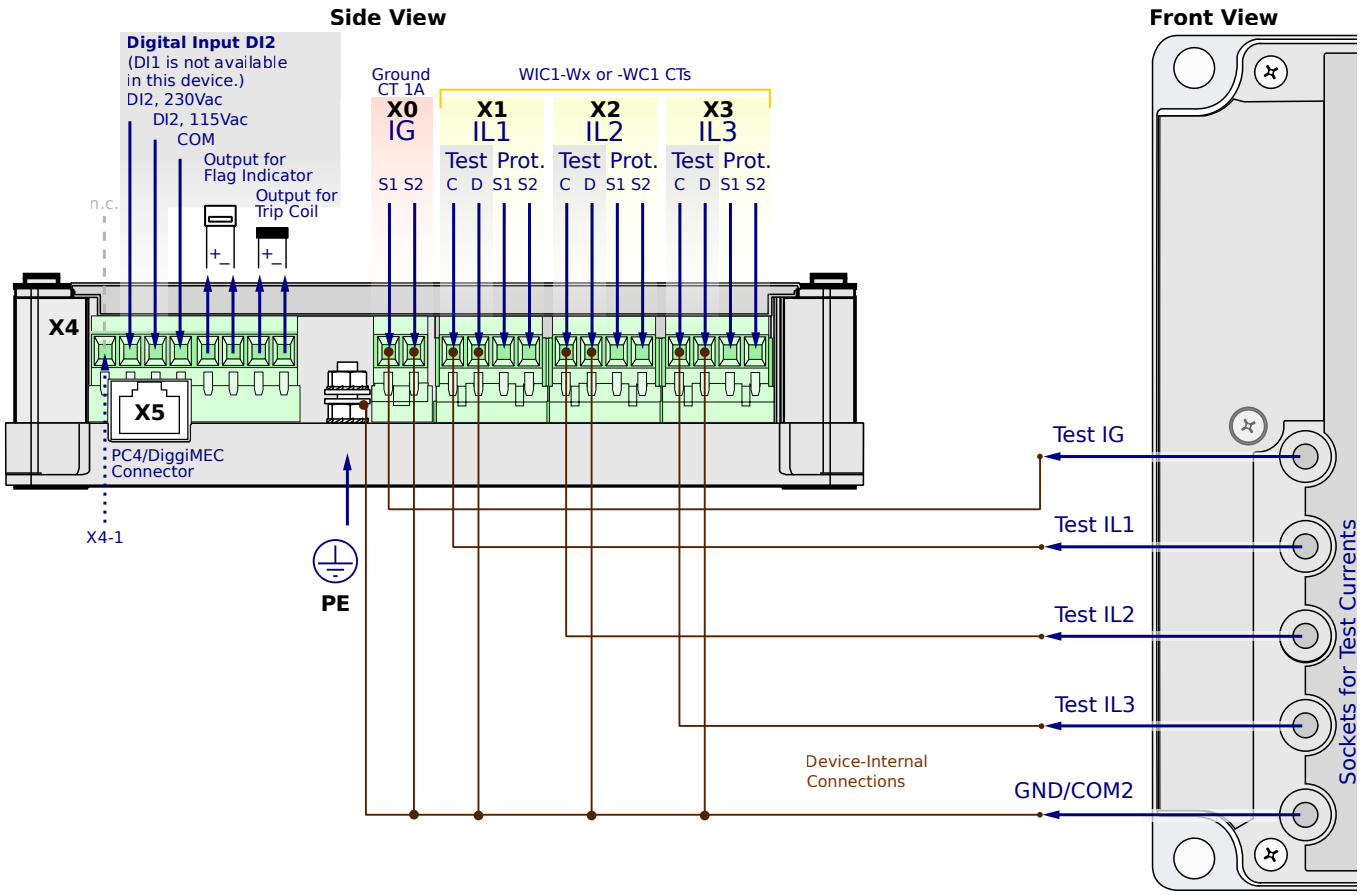


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1AA0

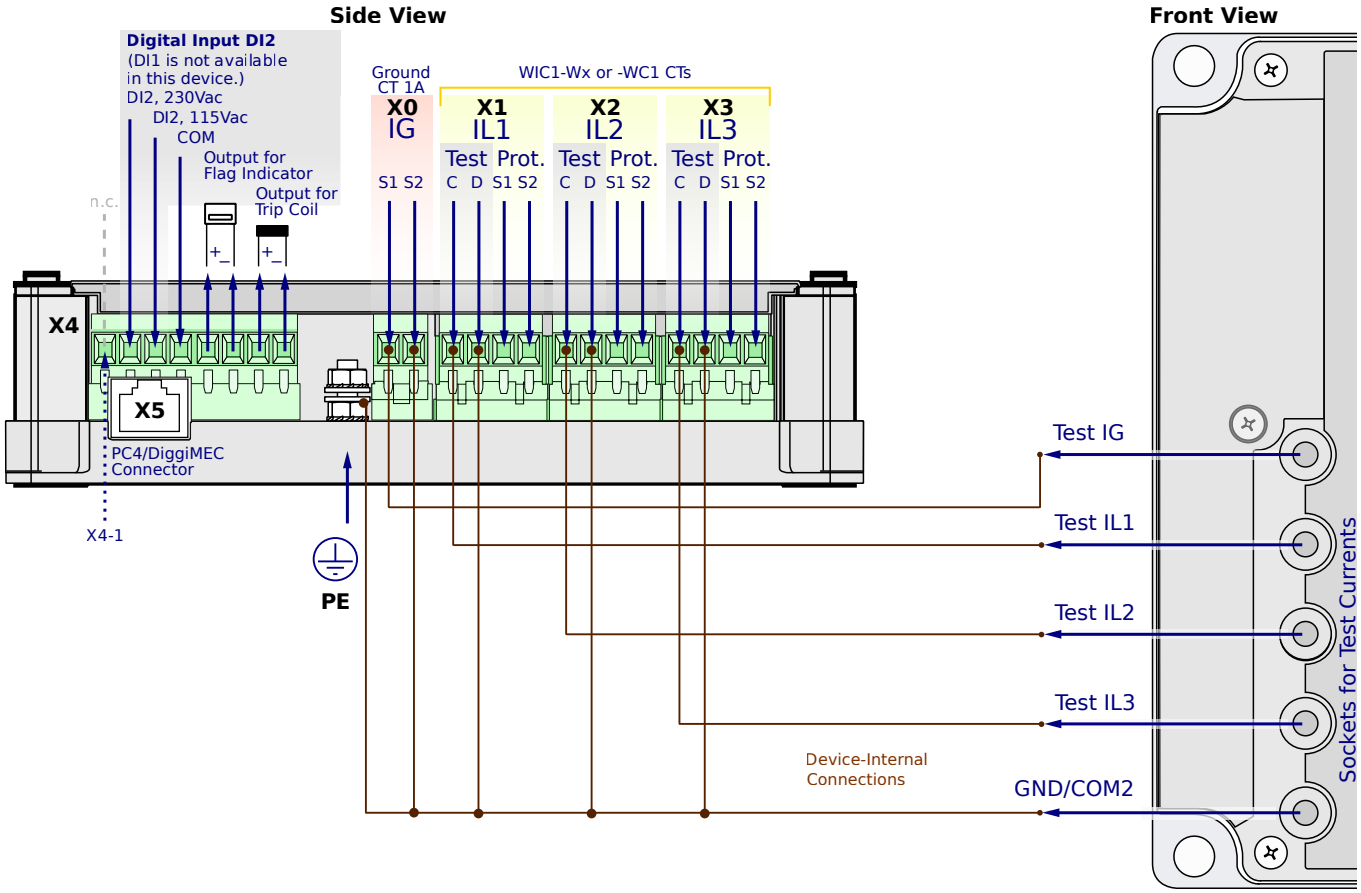


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1AAH

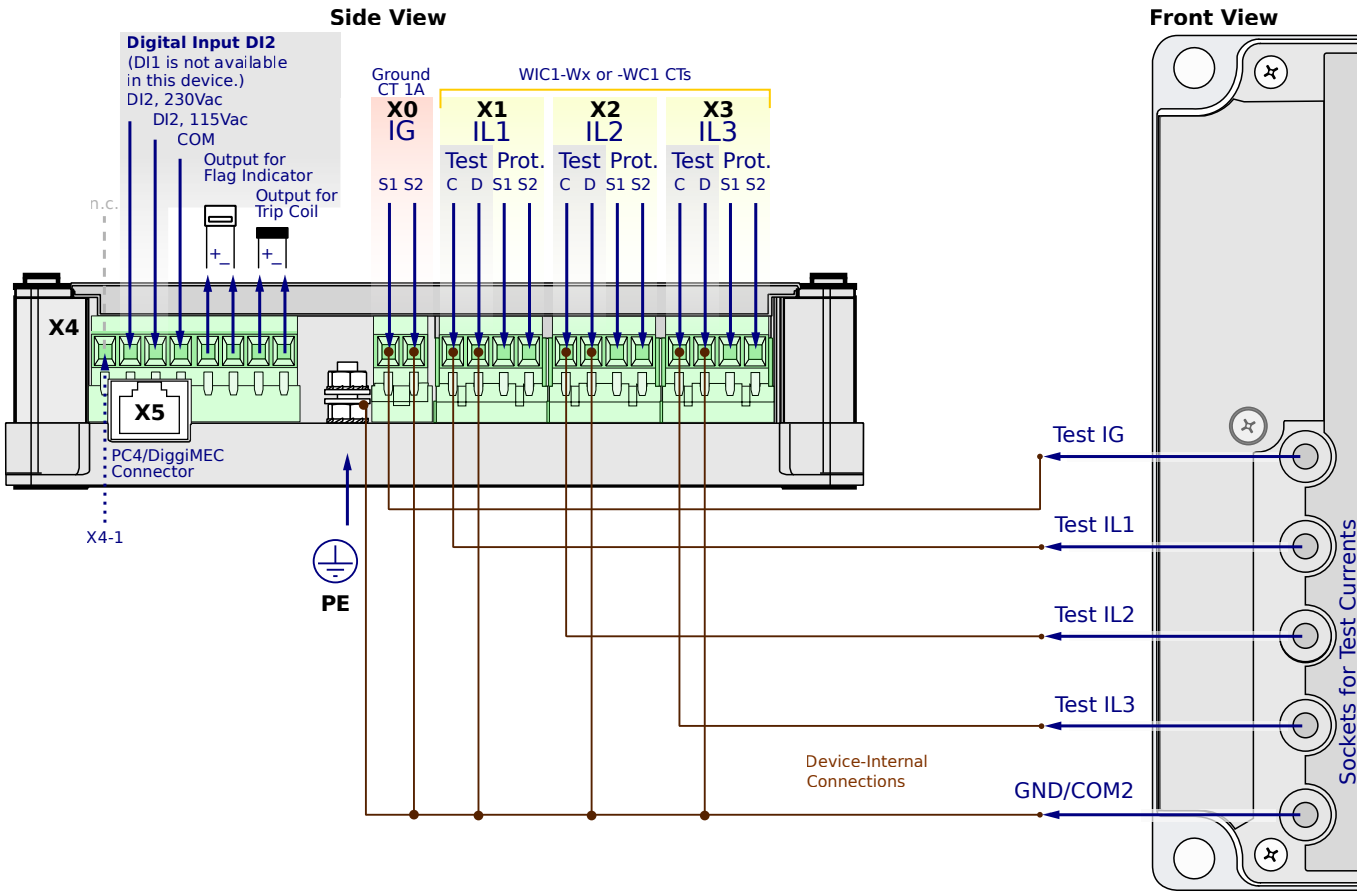


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1PA0

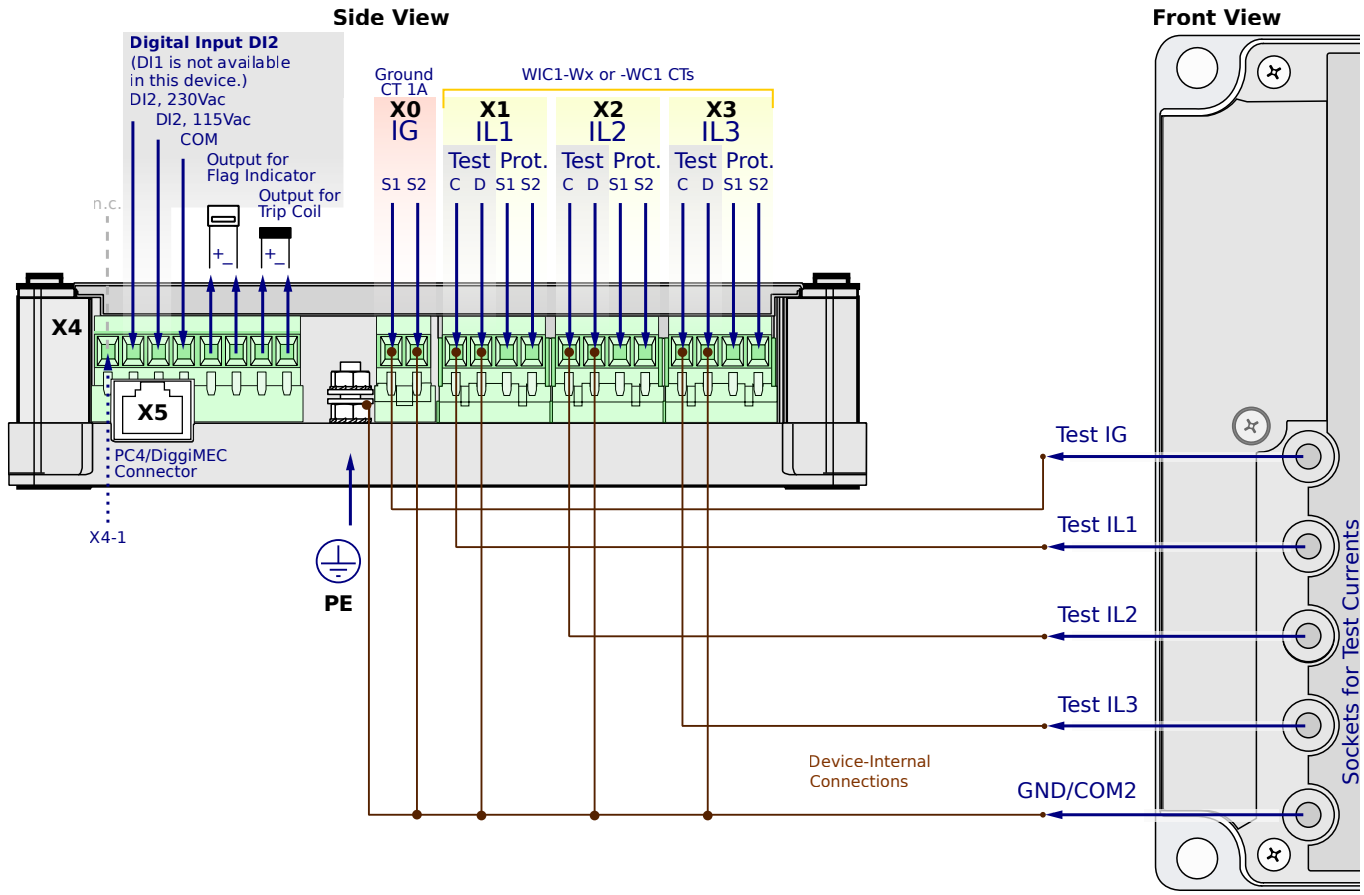


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC1PAH

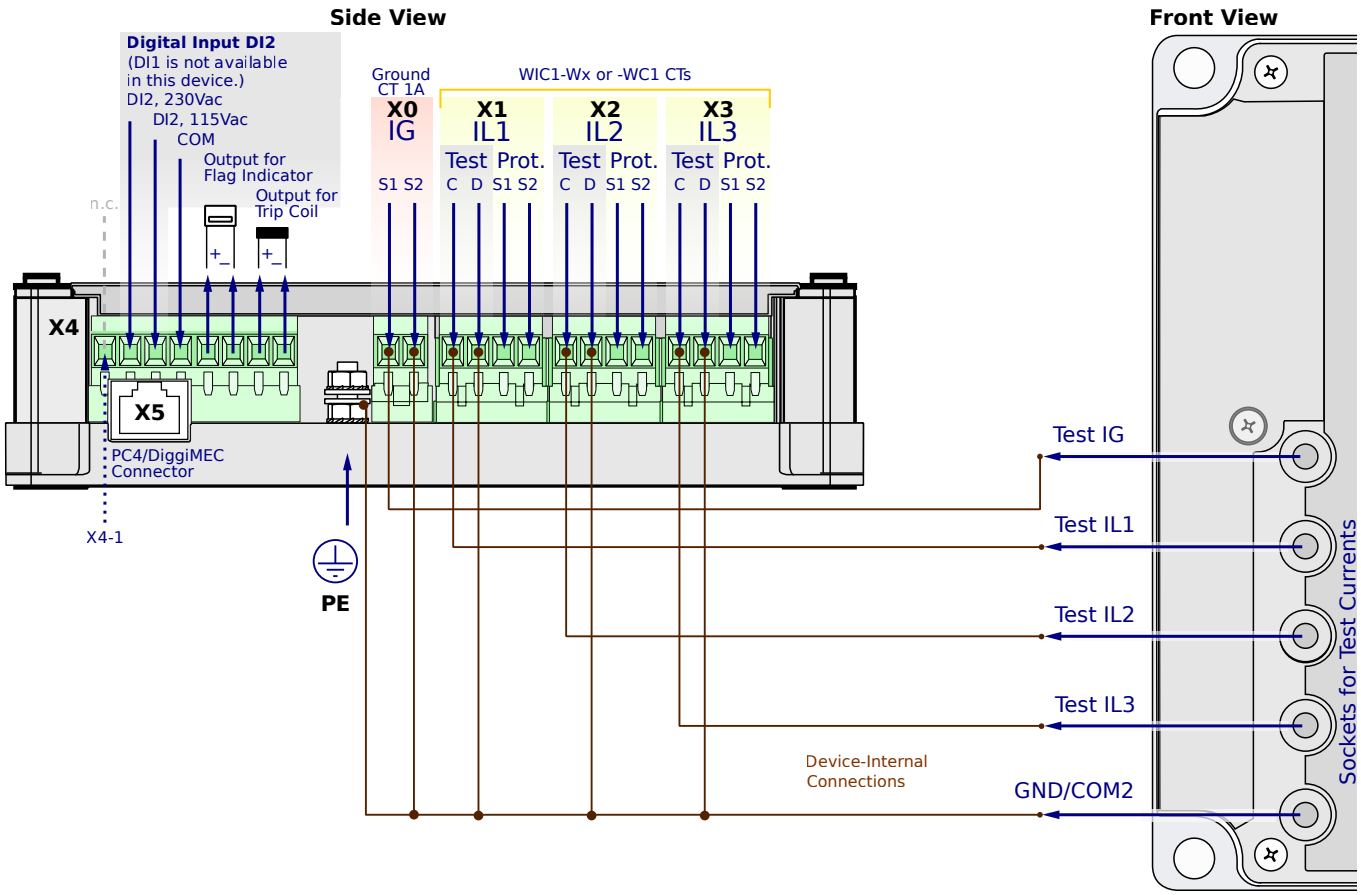


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2SA0

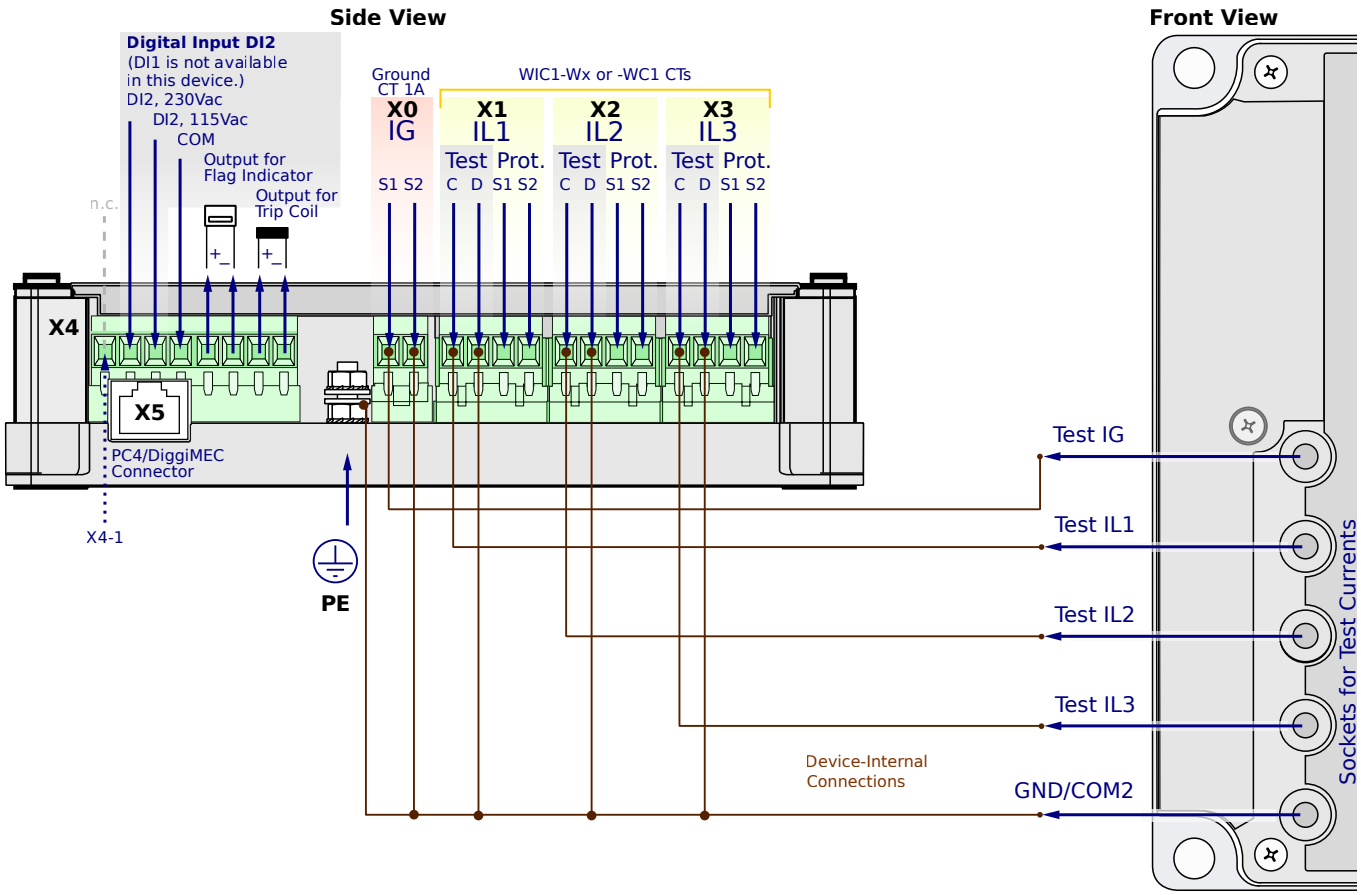


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2SAH

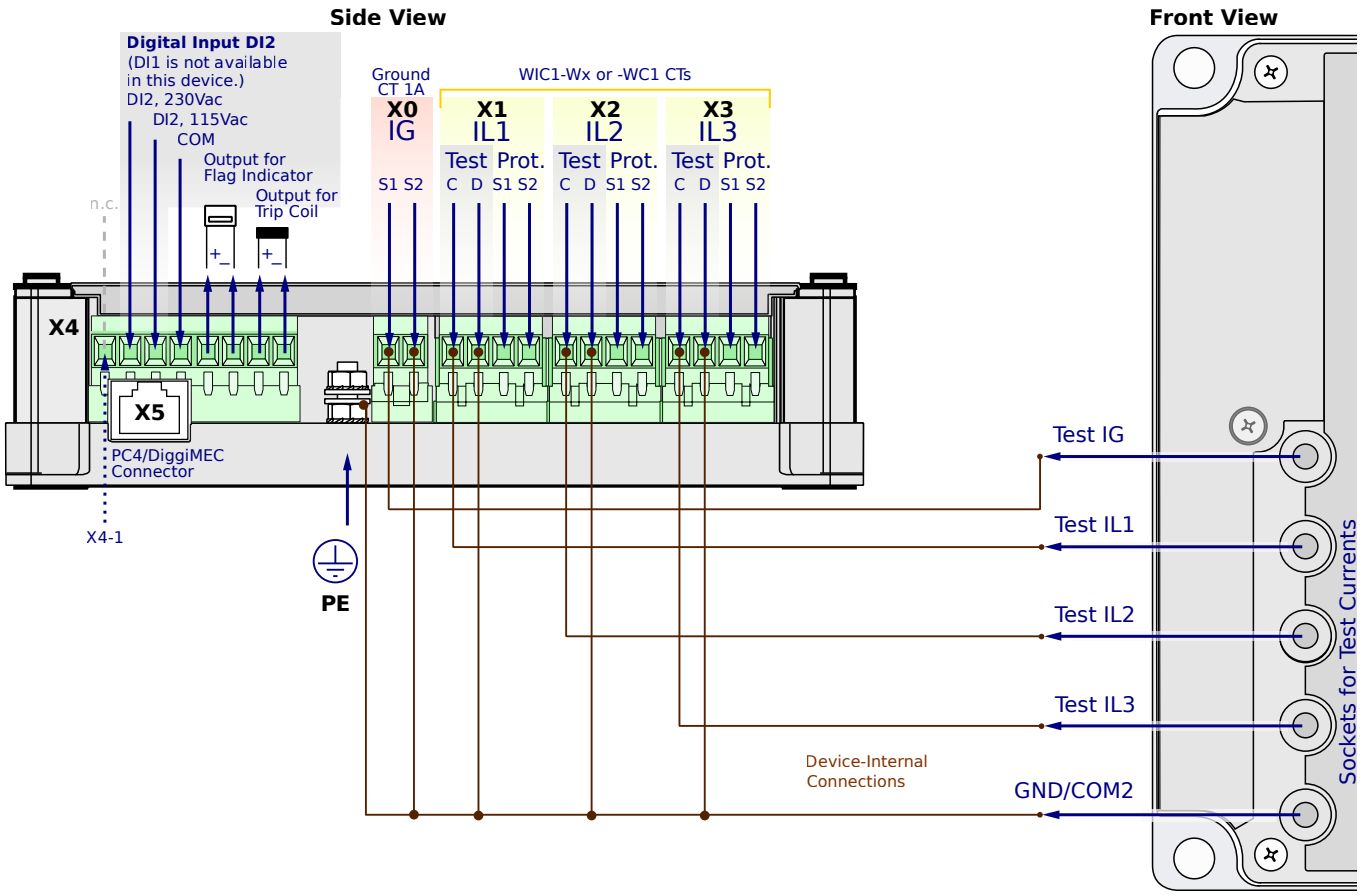


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2AA0

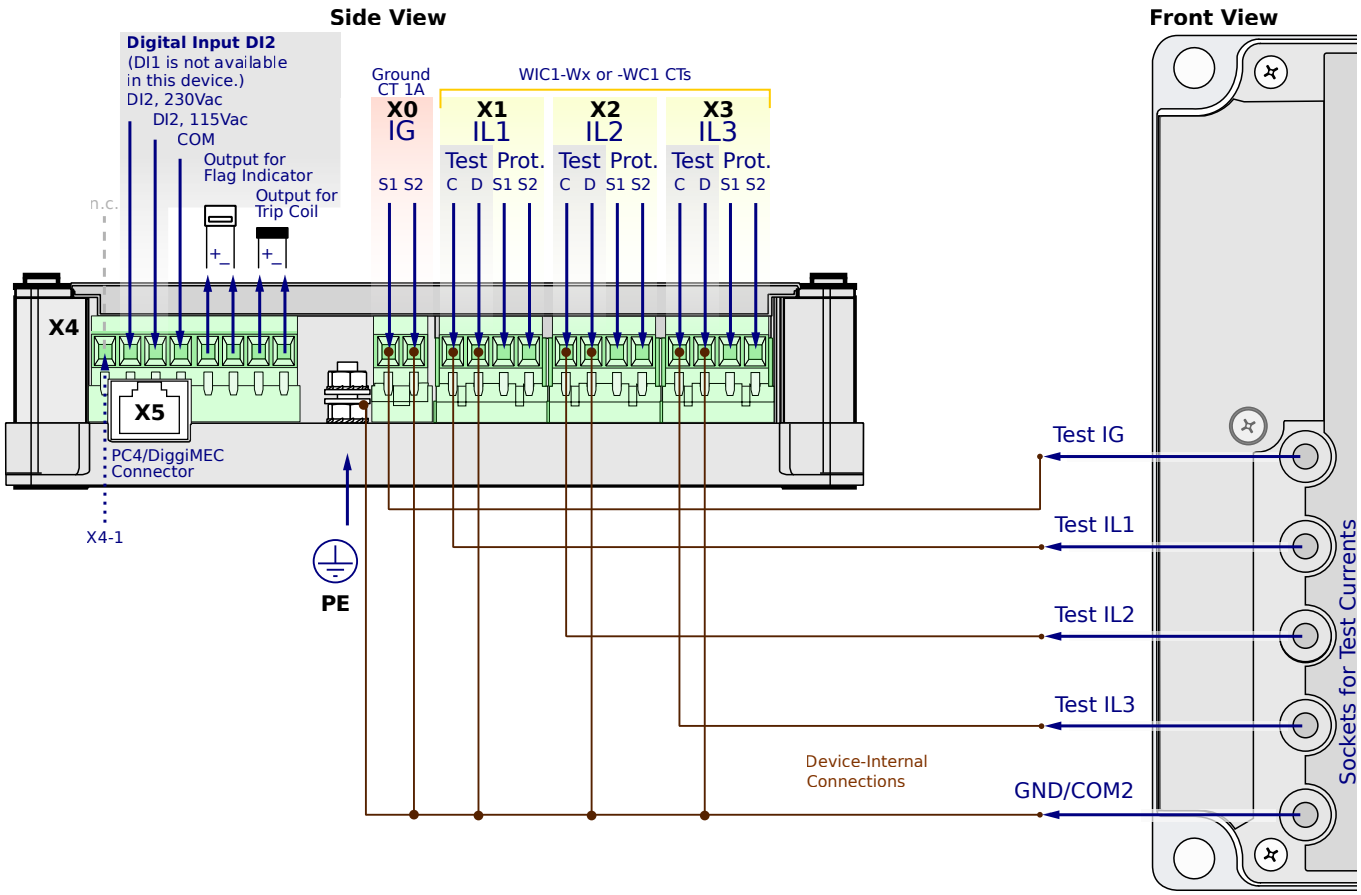


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2AAH

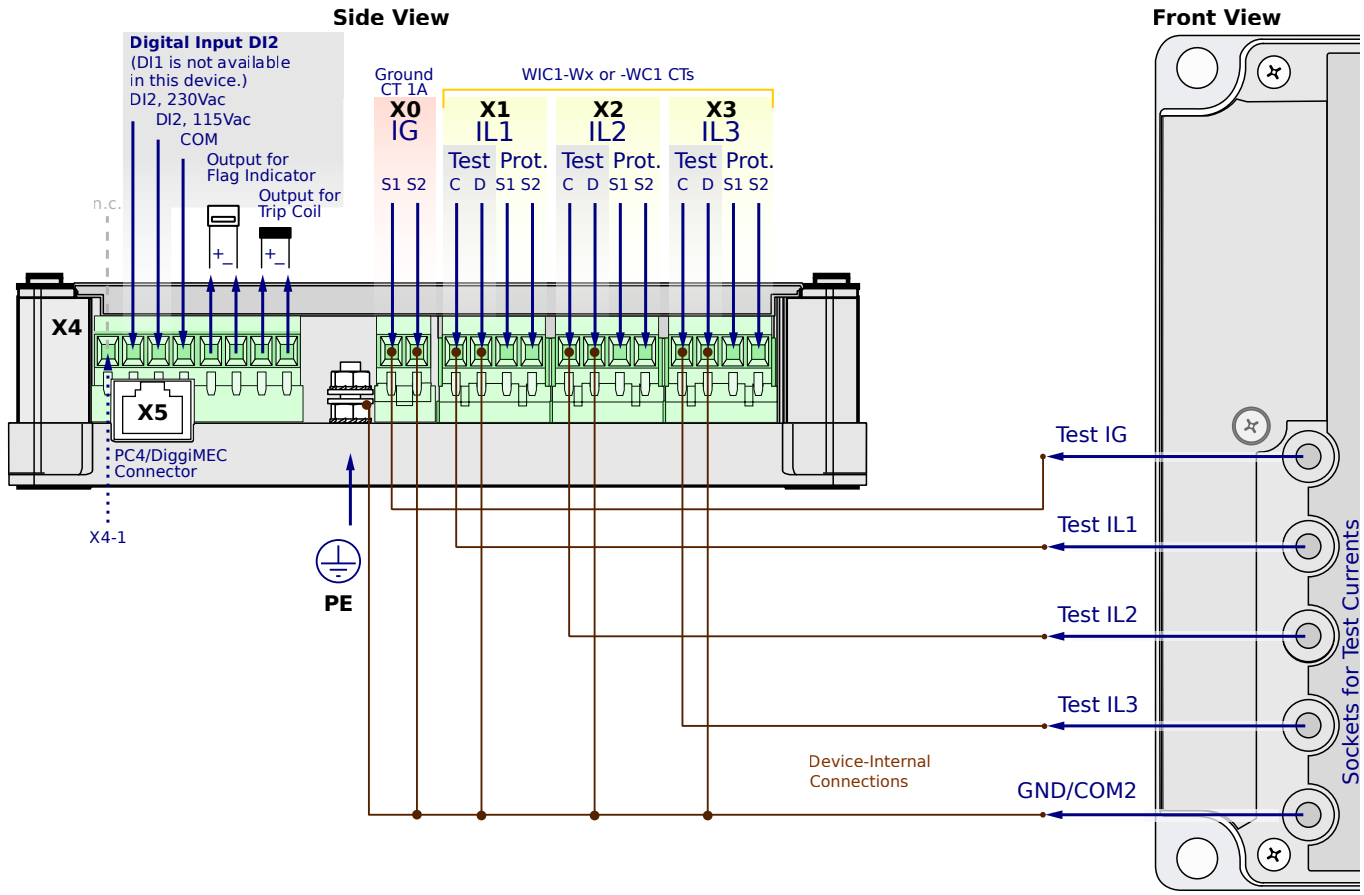


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2PA0

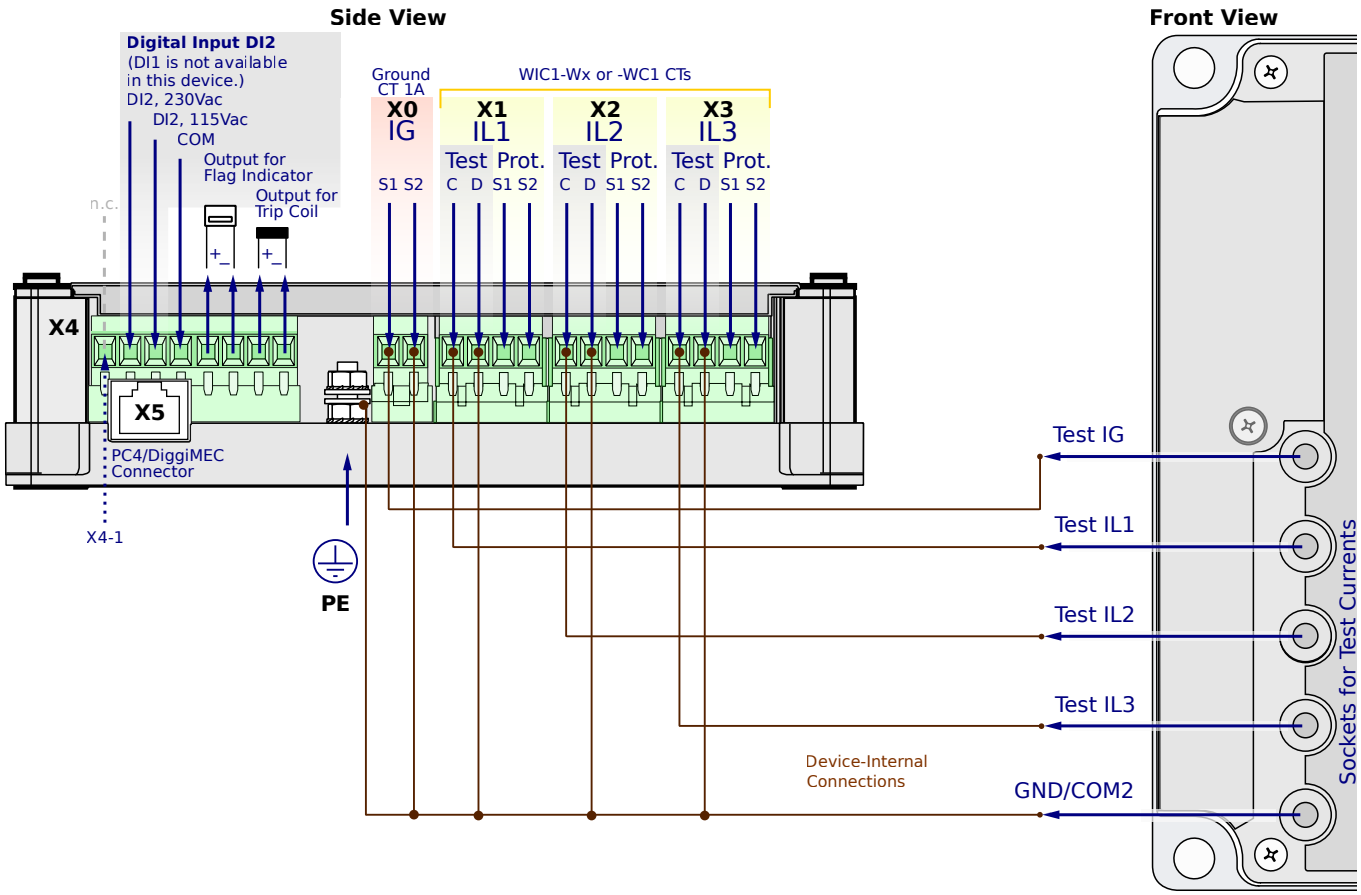


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1SB0CC2PAH

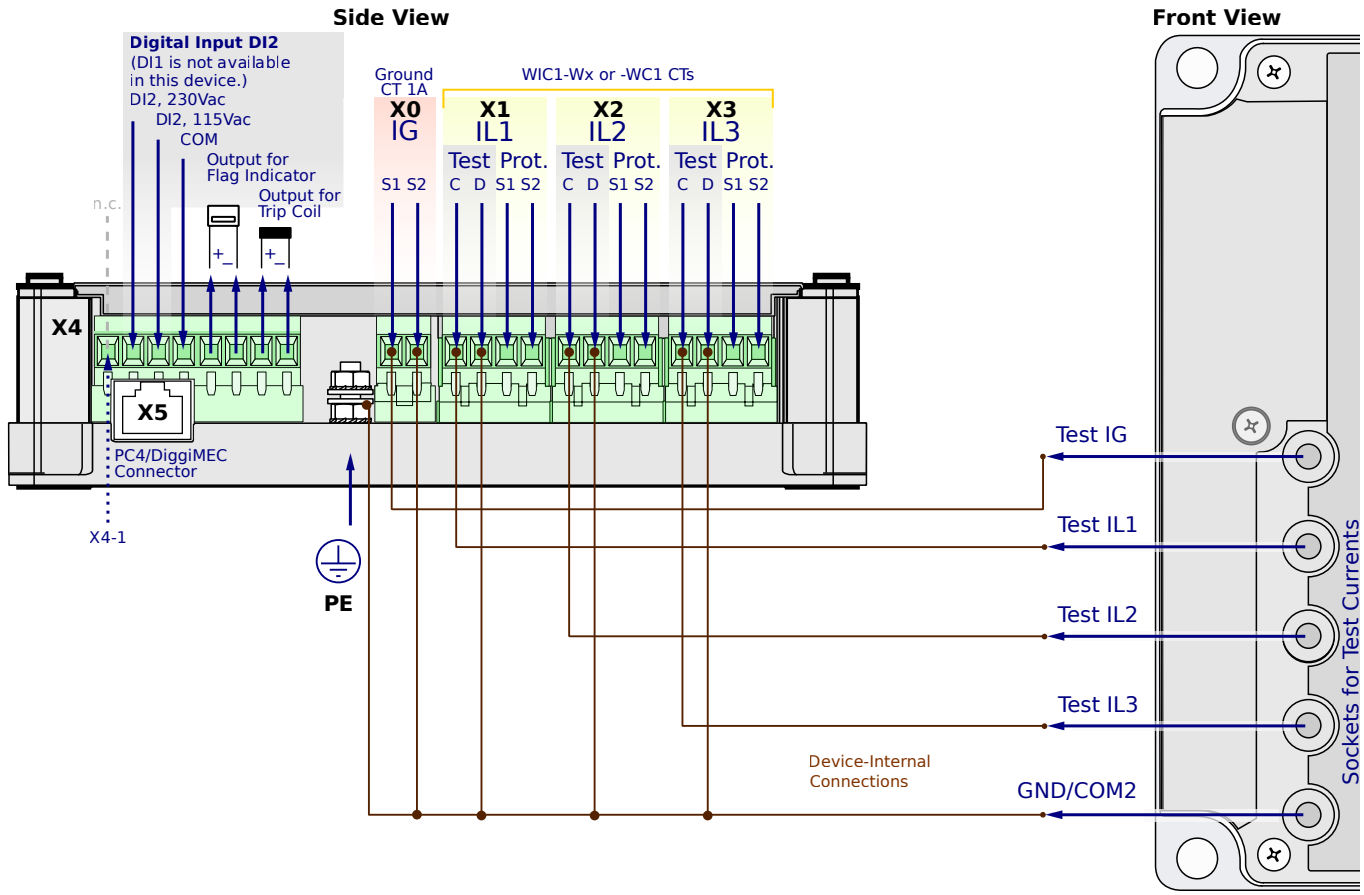


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0SA0

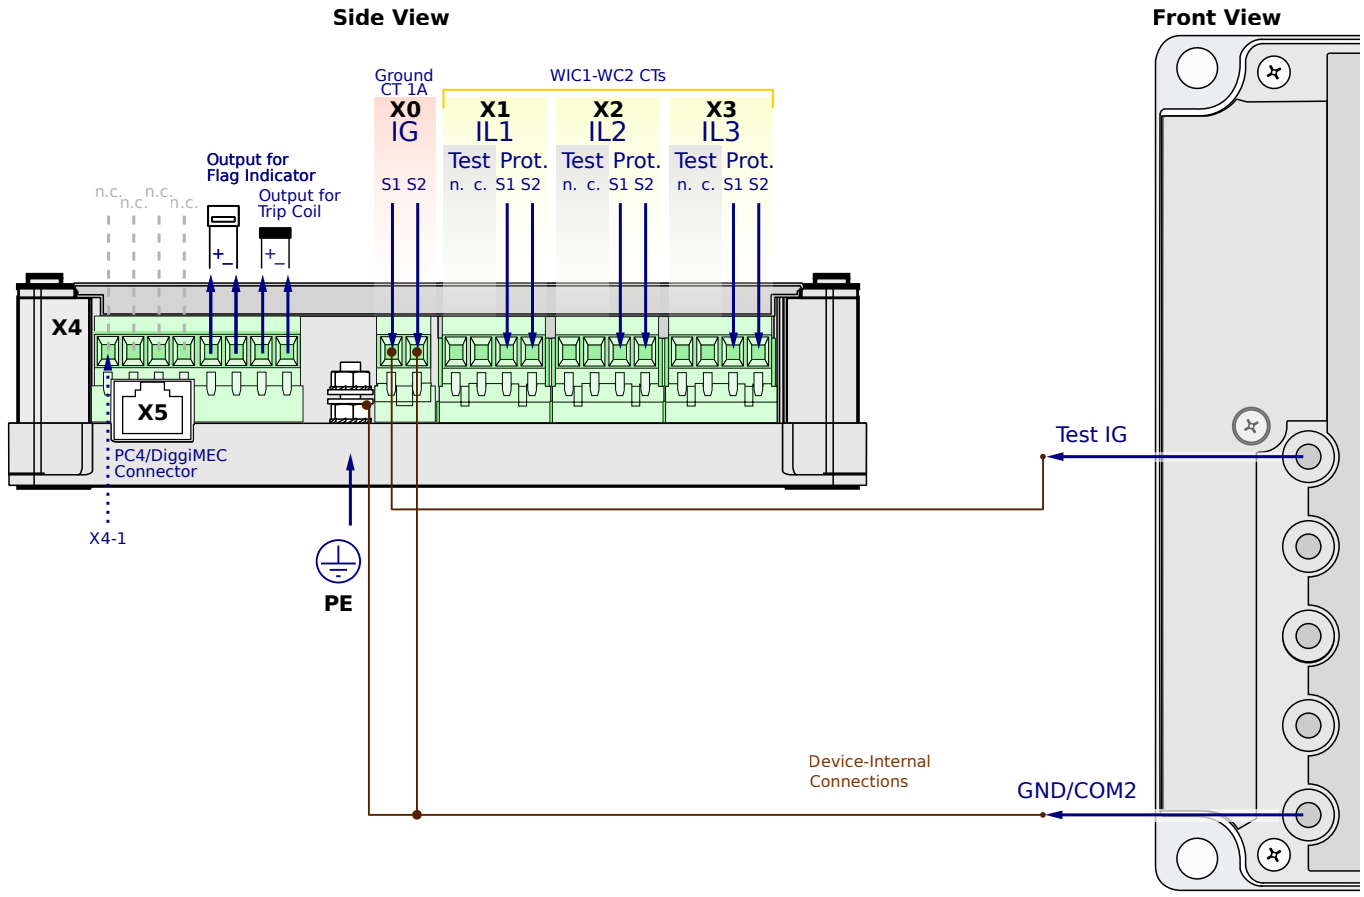


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0SAH

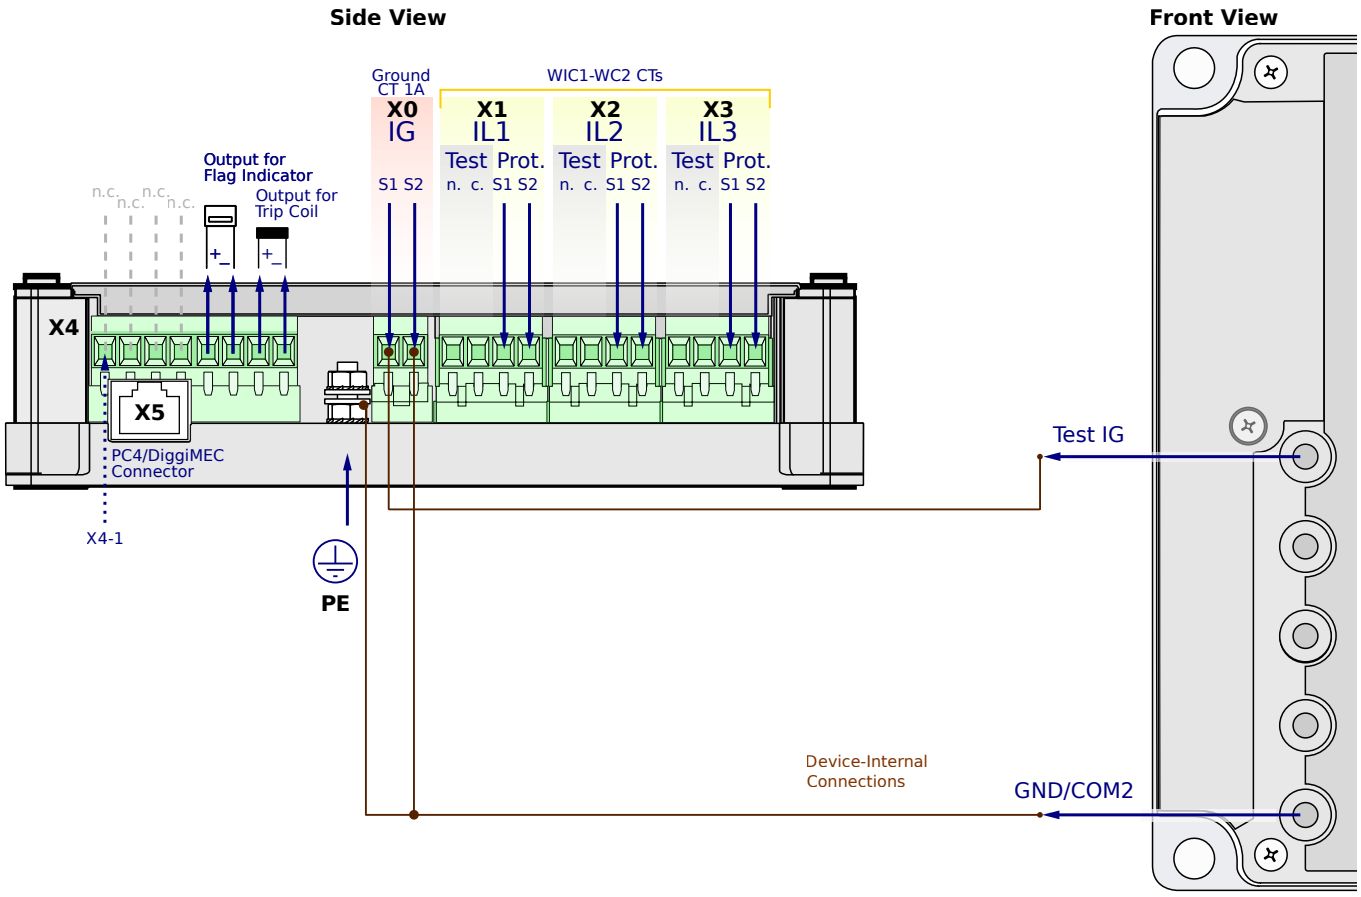


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0AA0

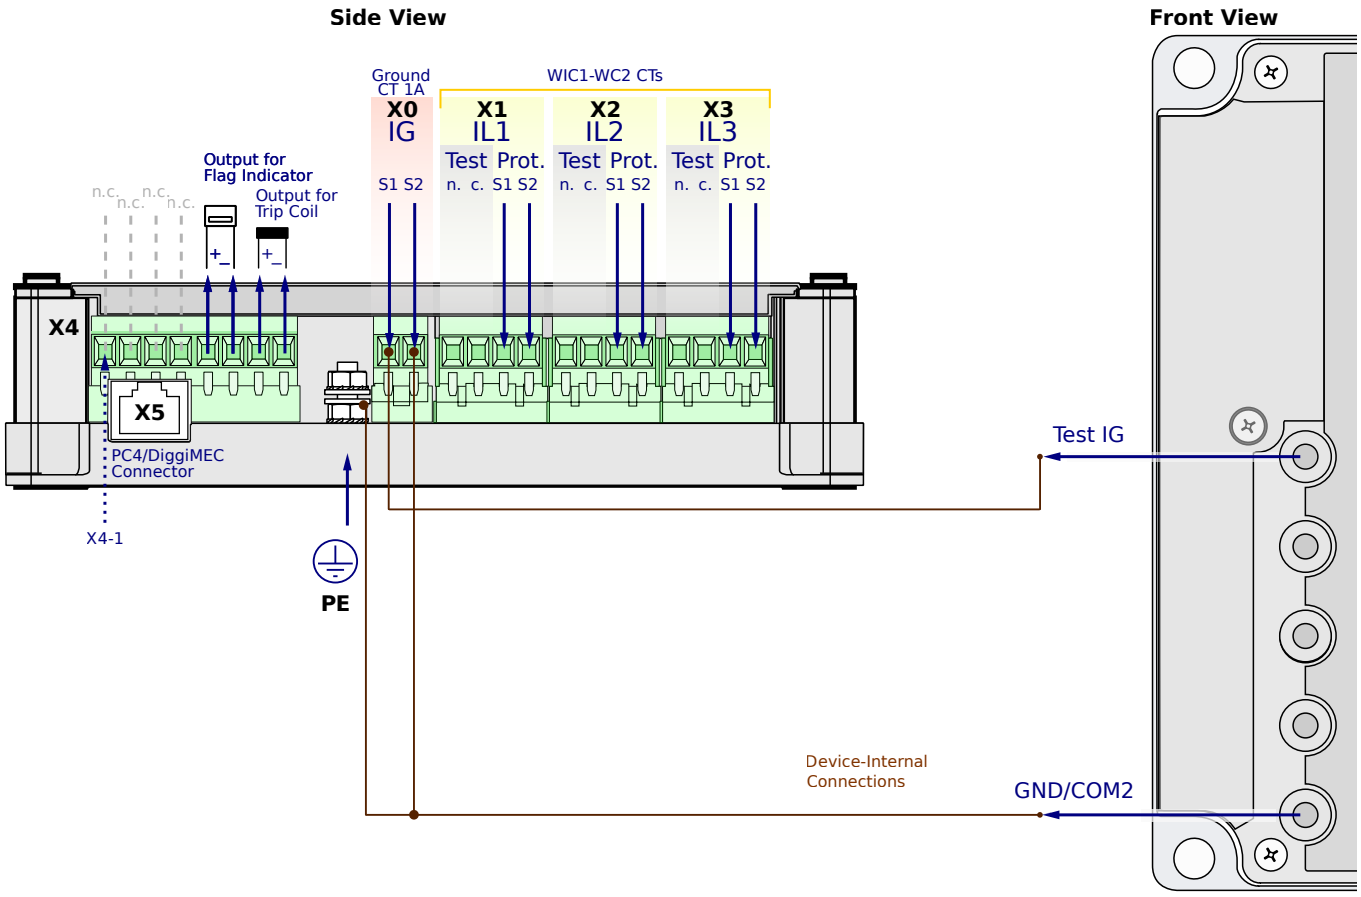


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0AAH

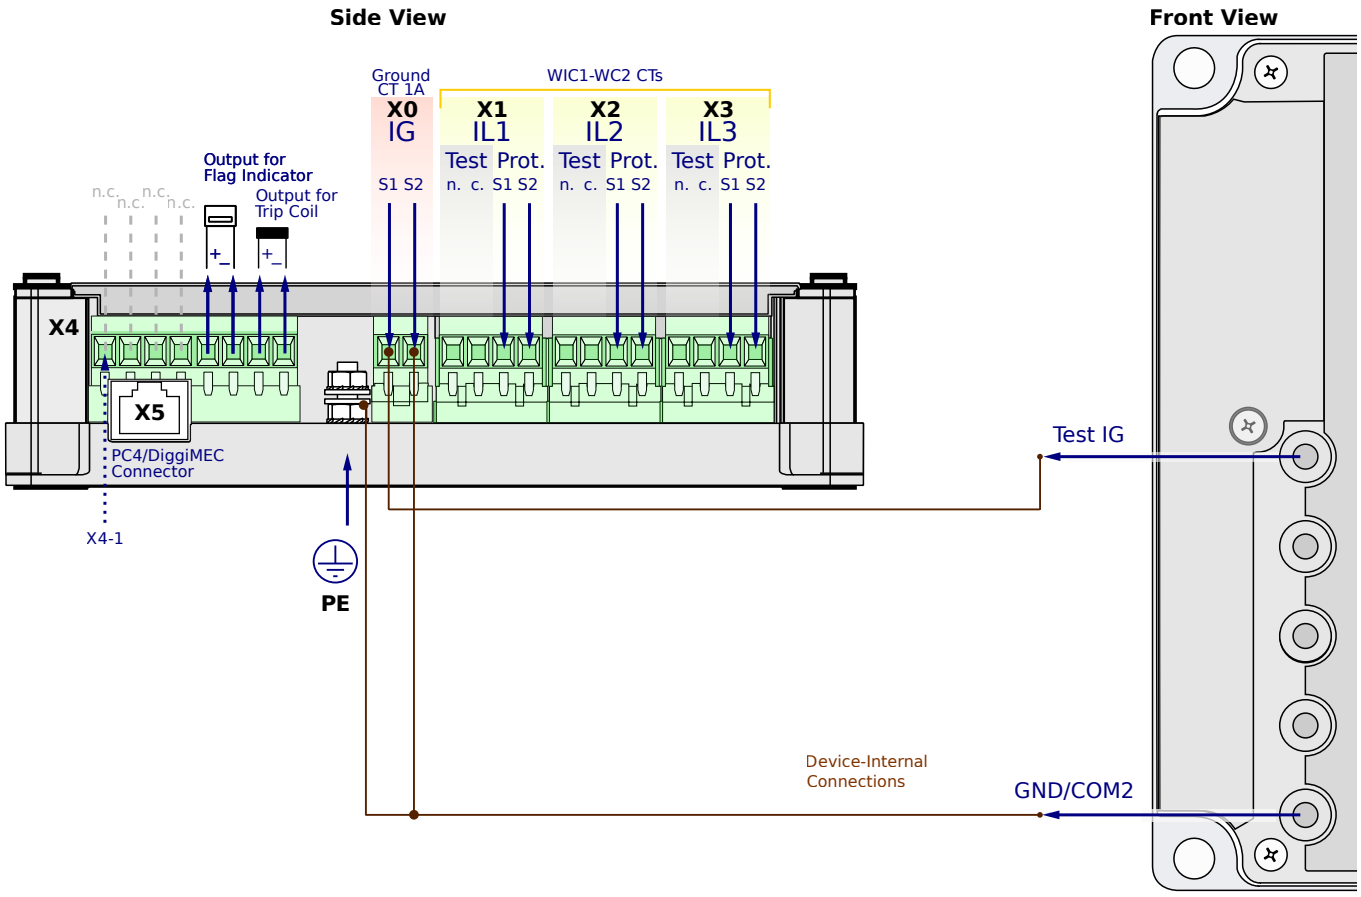


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0PA0

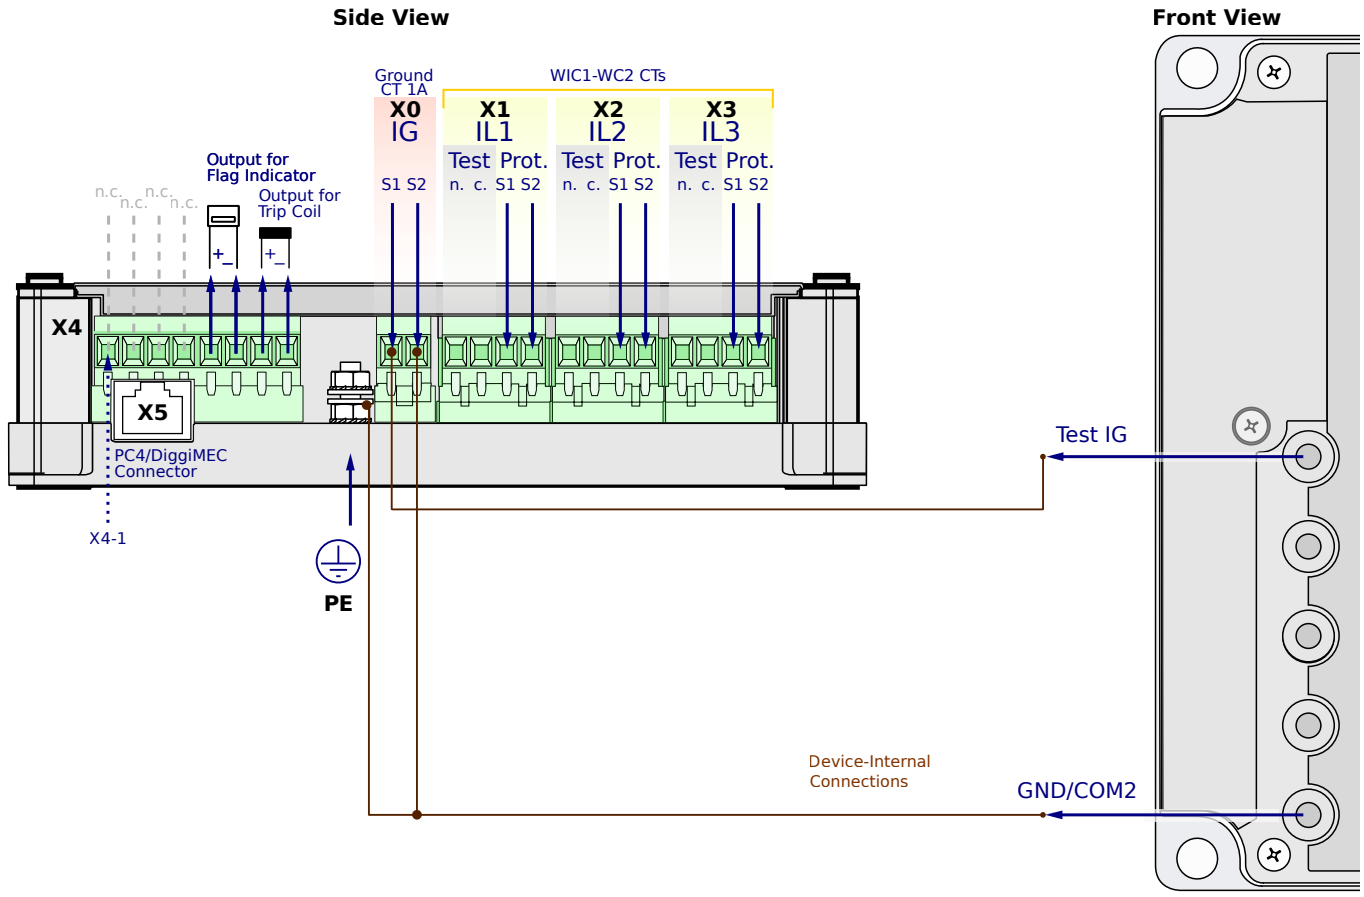


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN0PAH

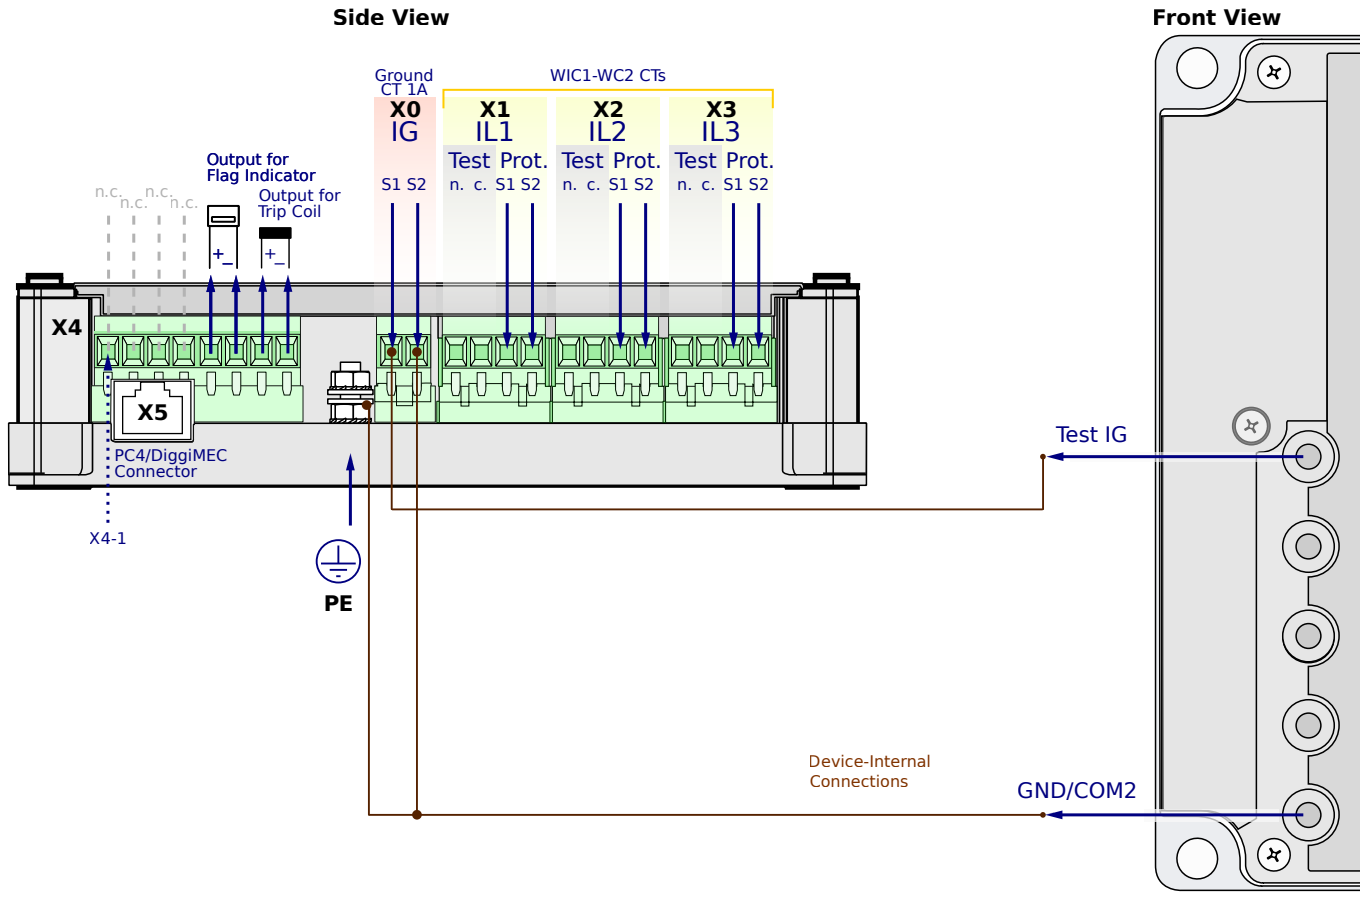


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1SA0

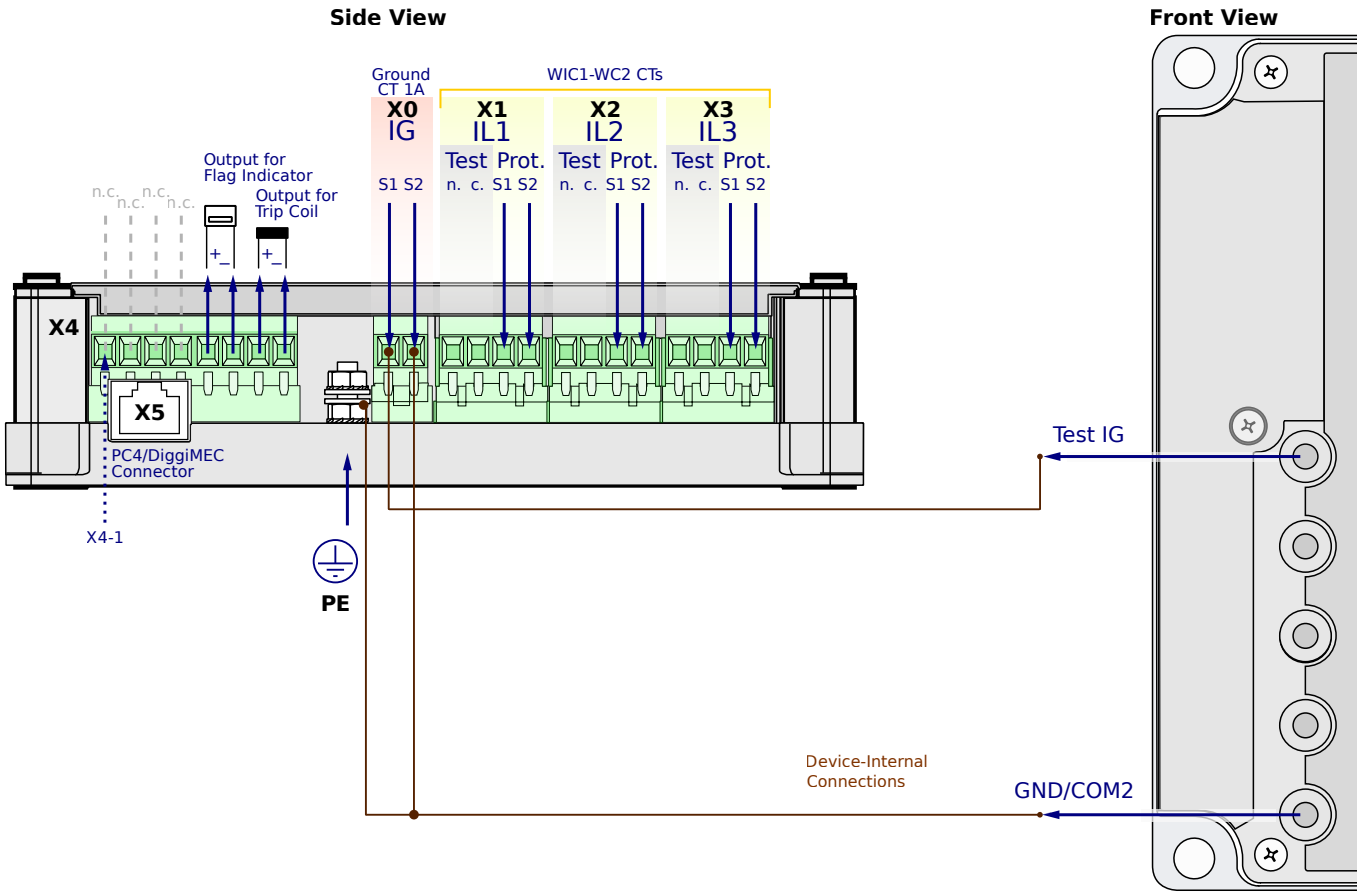


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1SAH

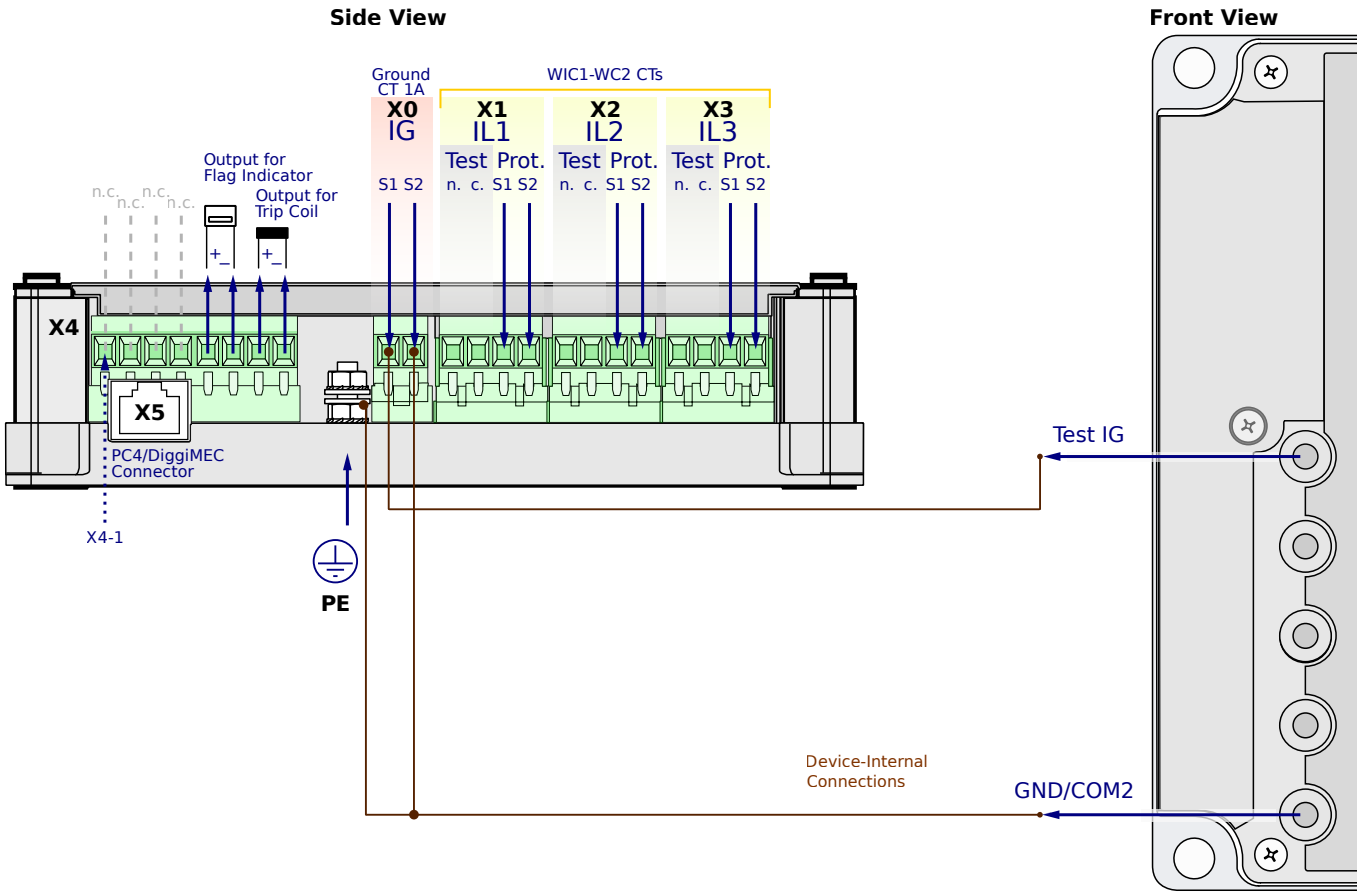


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1AA0

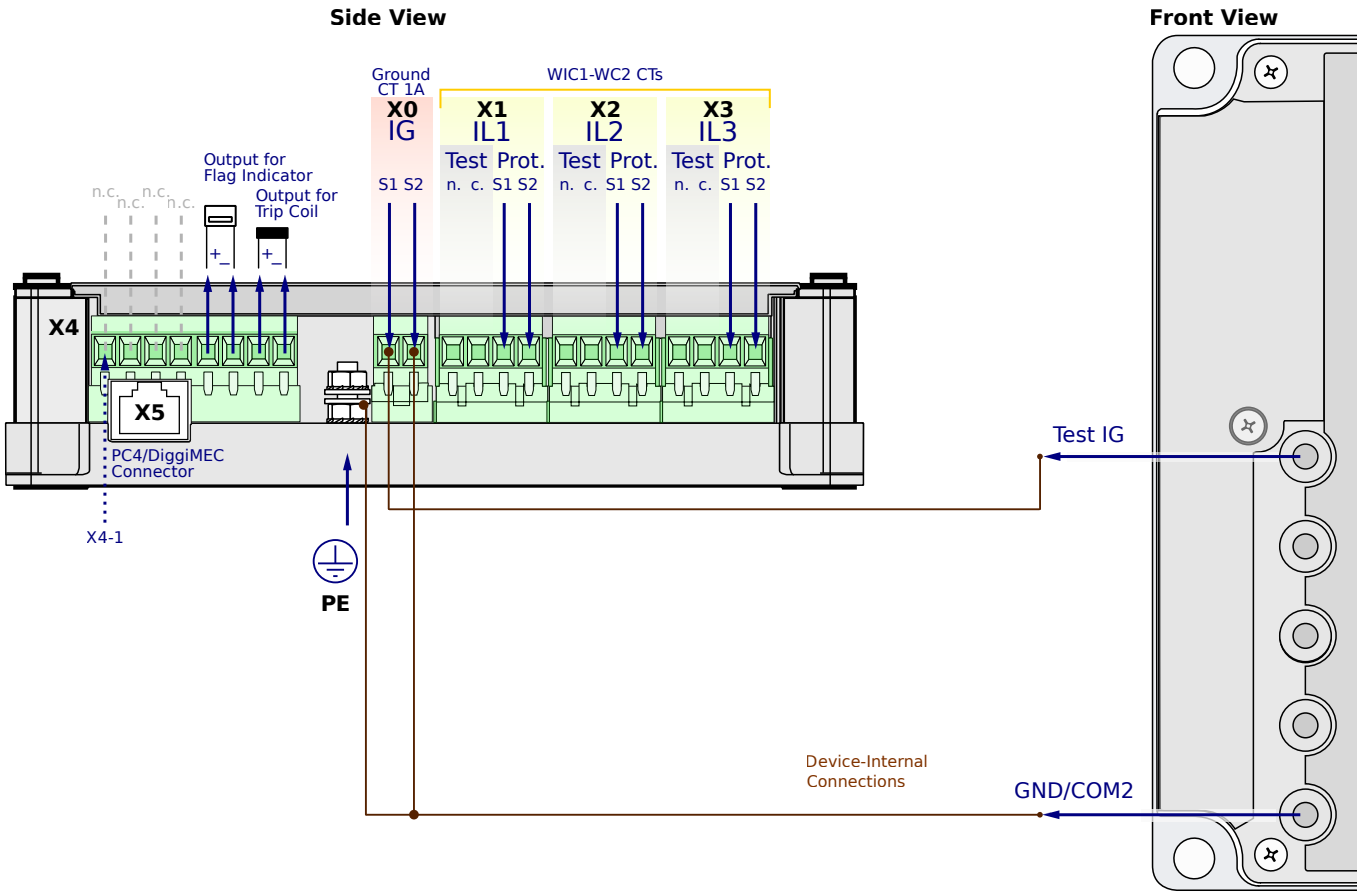


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1AAH

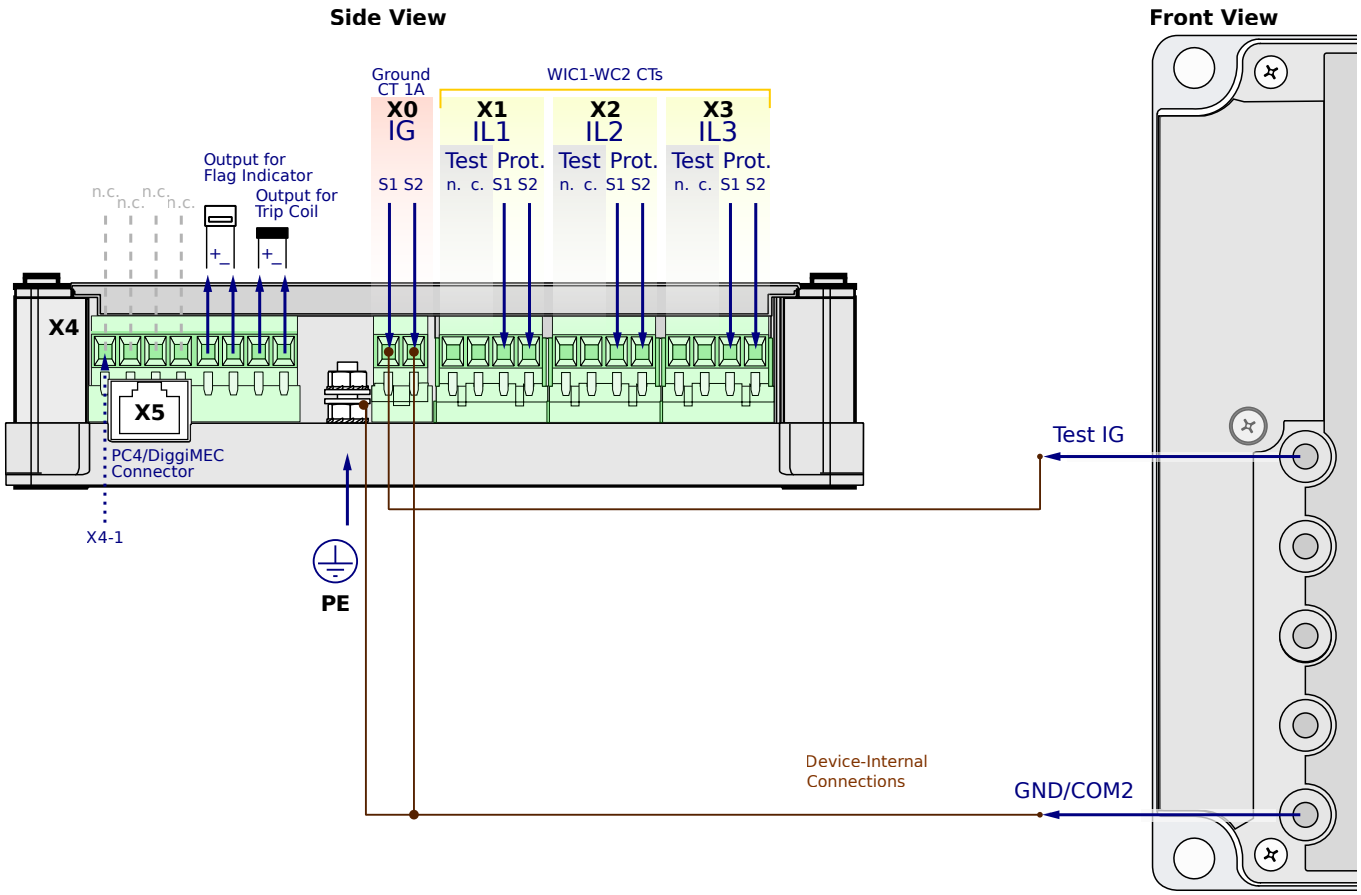


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1PA0

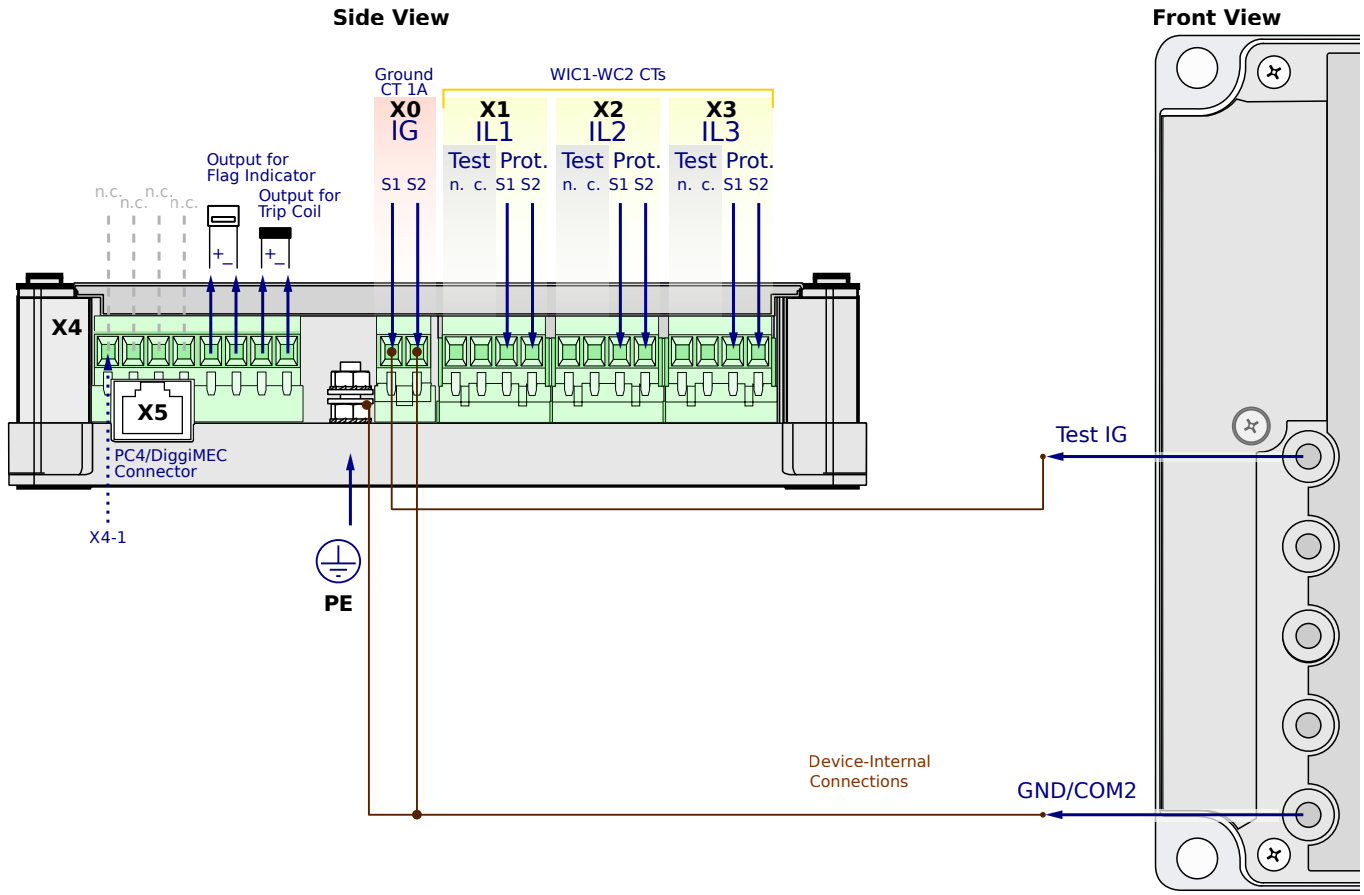


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN1PAH

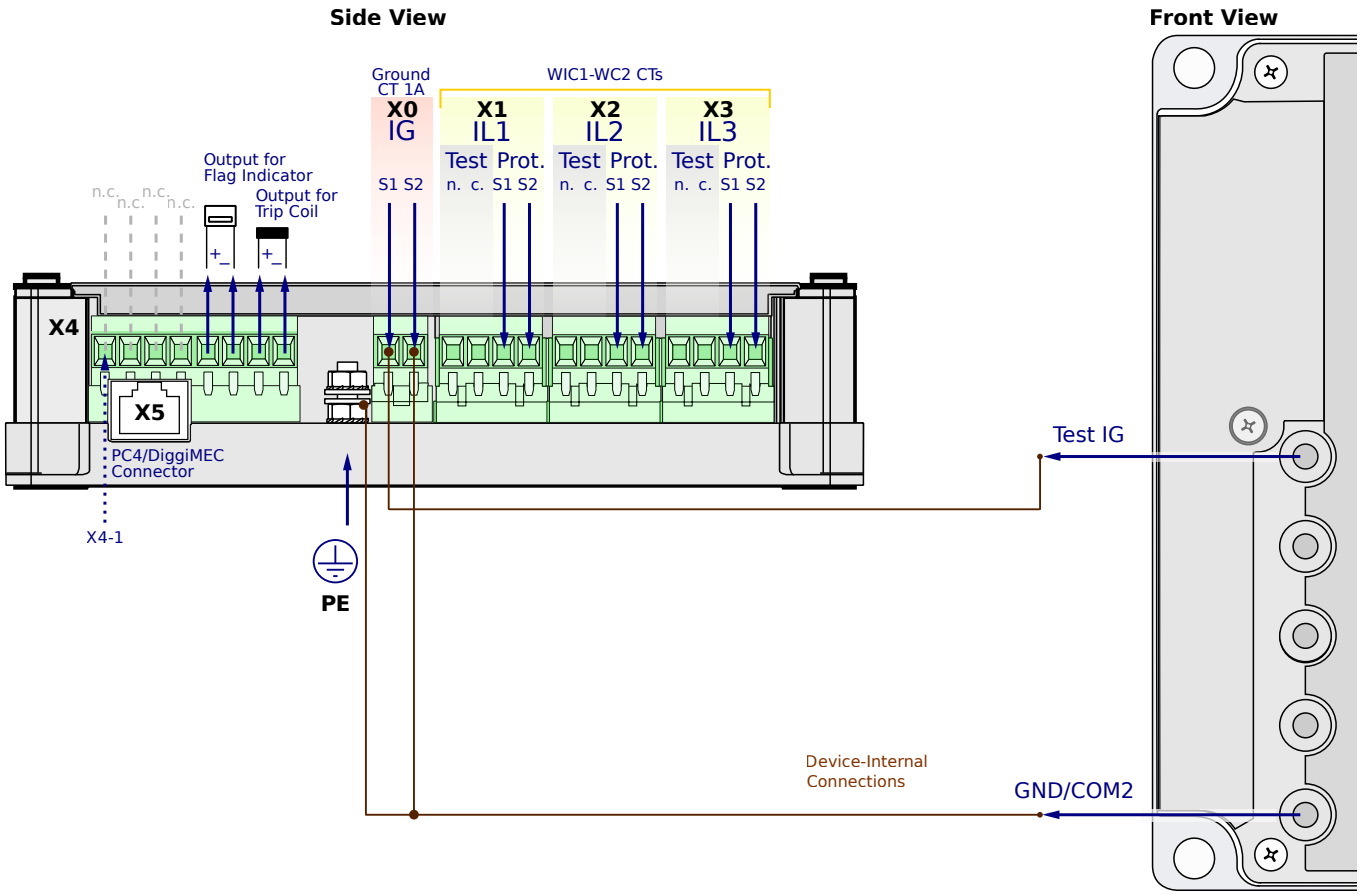


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2SA0

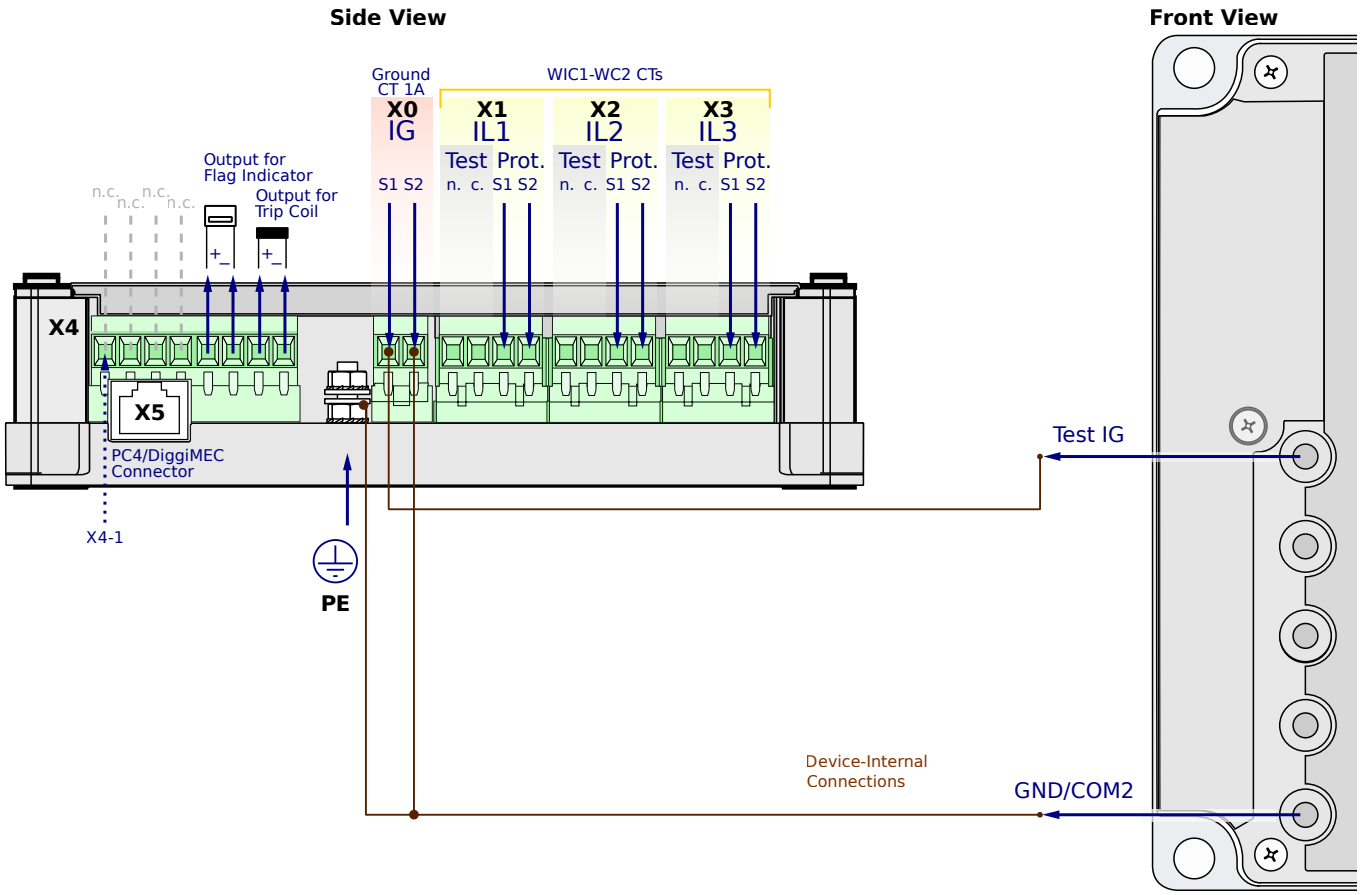


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2SAH

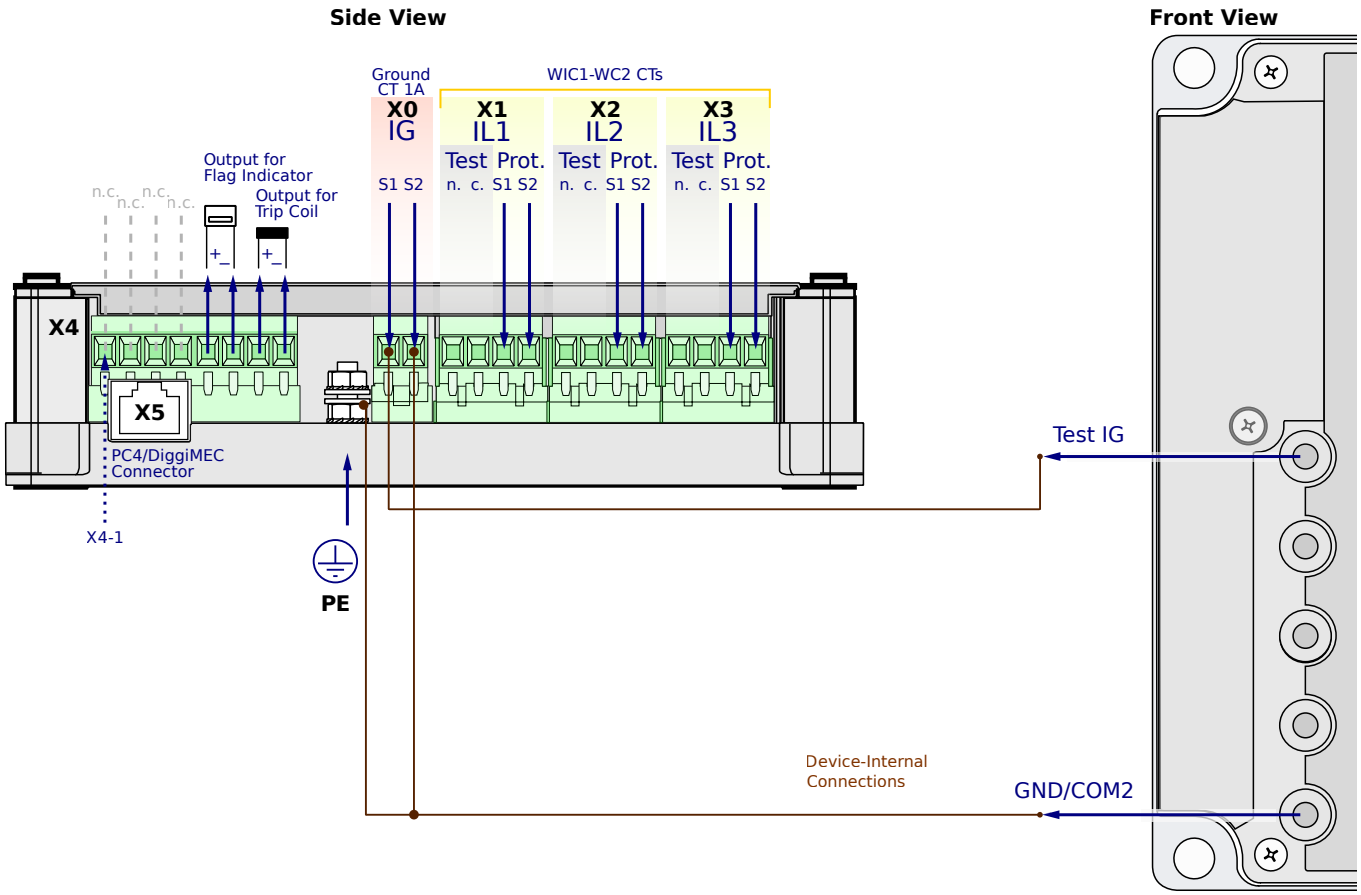


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2AA0

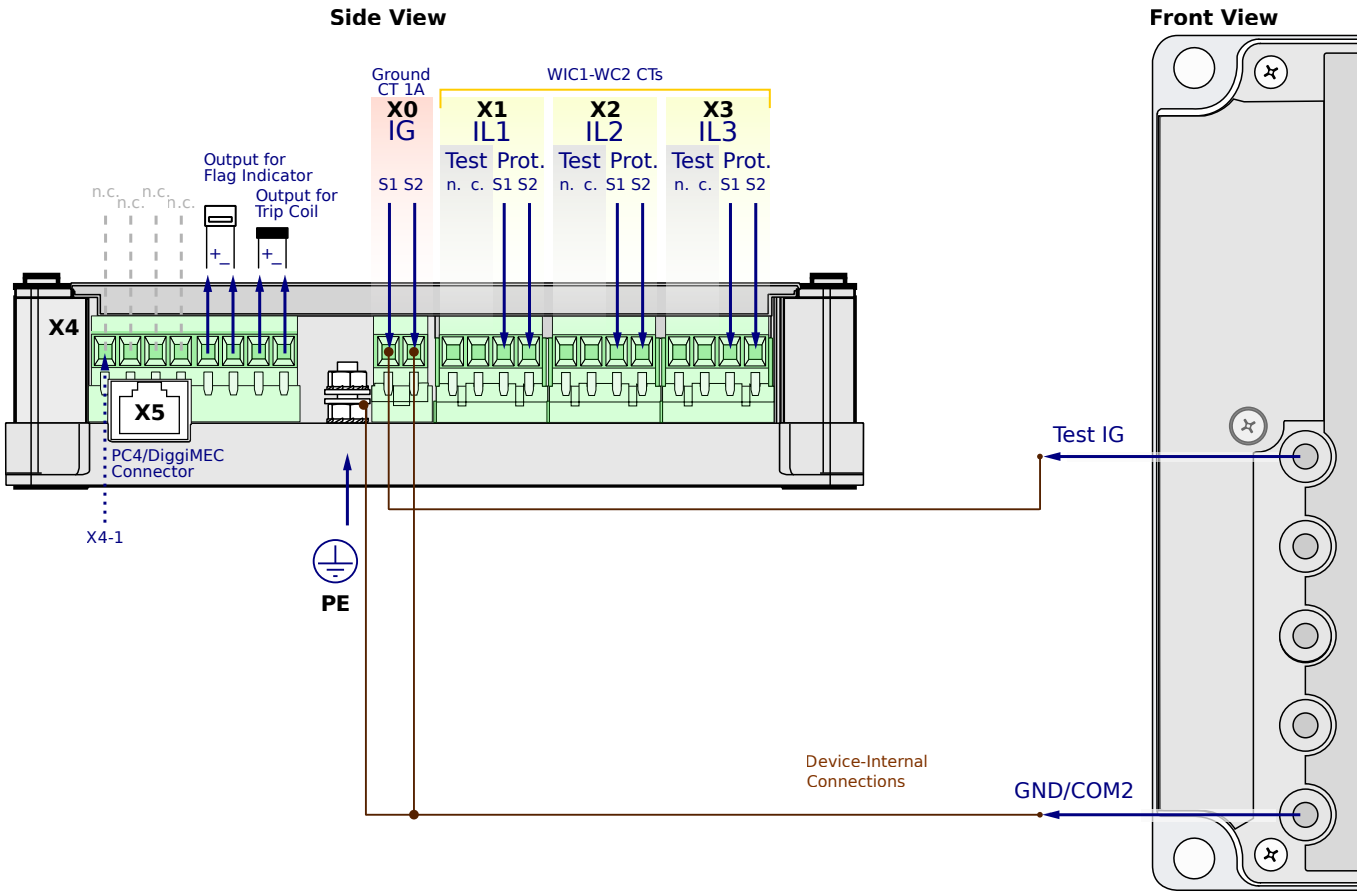


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2AAH

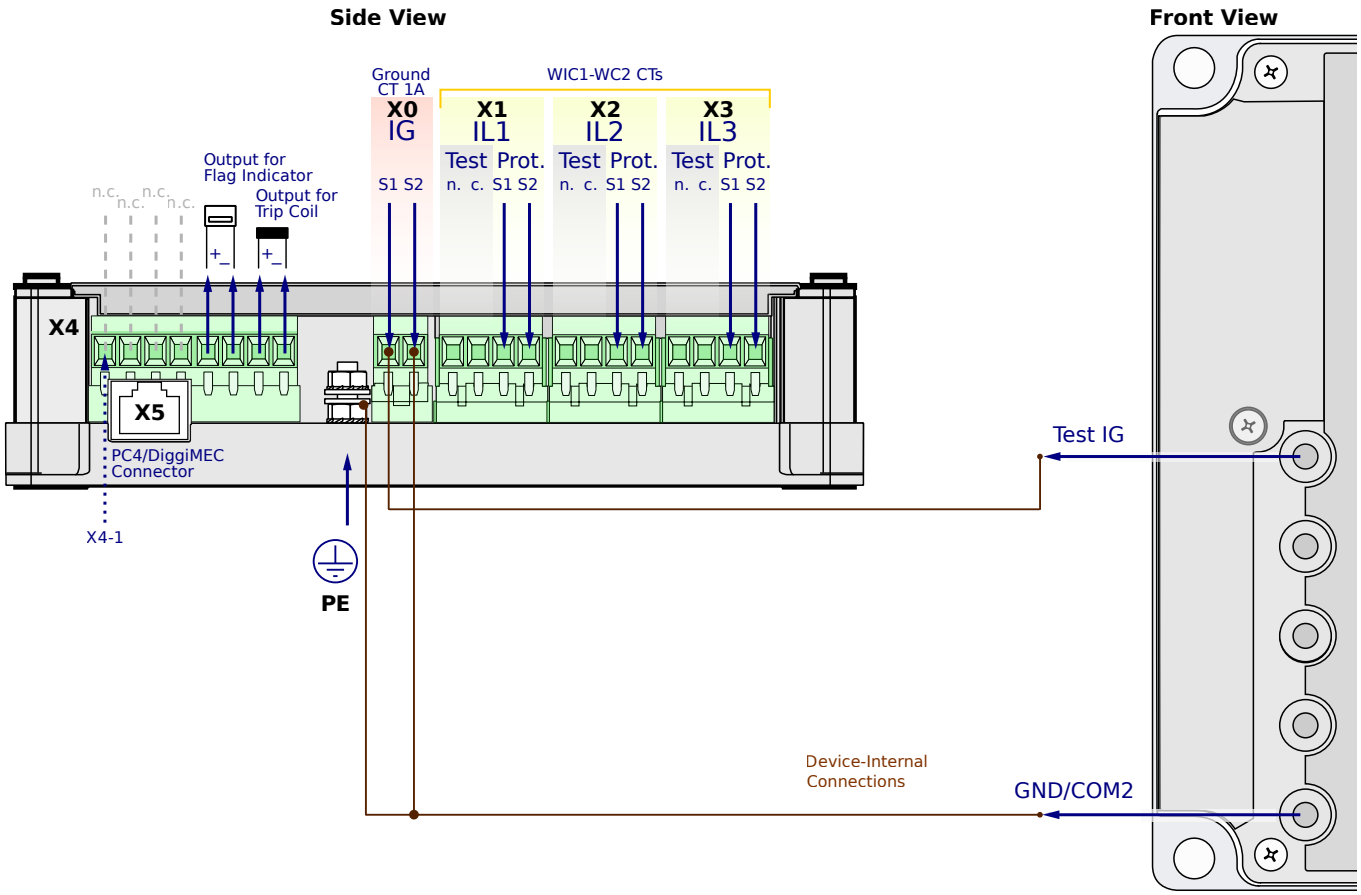


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2PA0

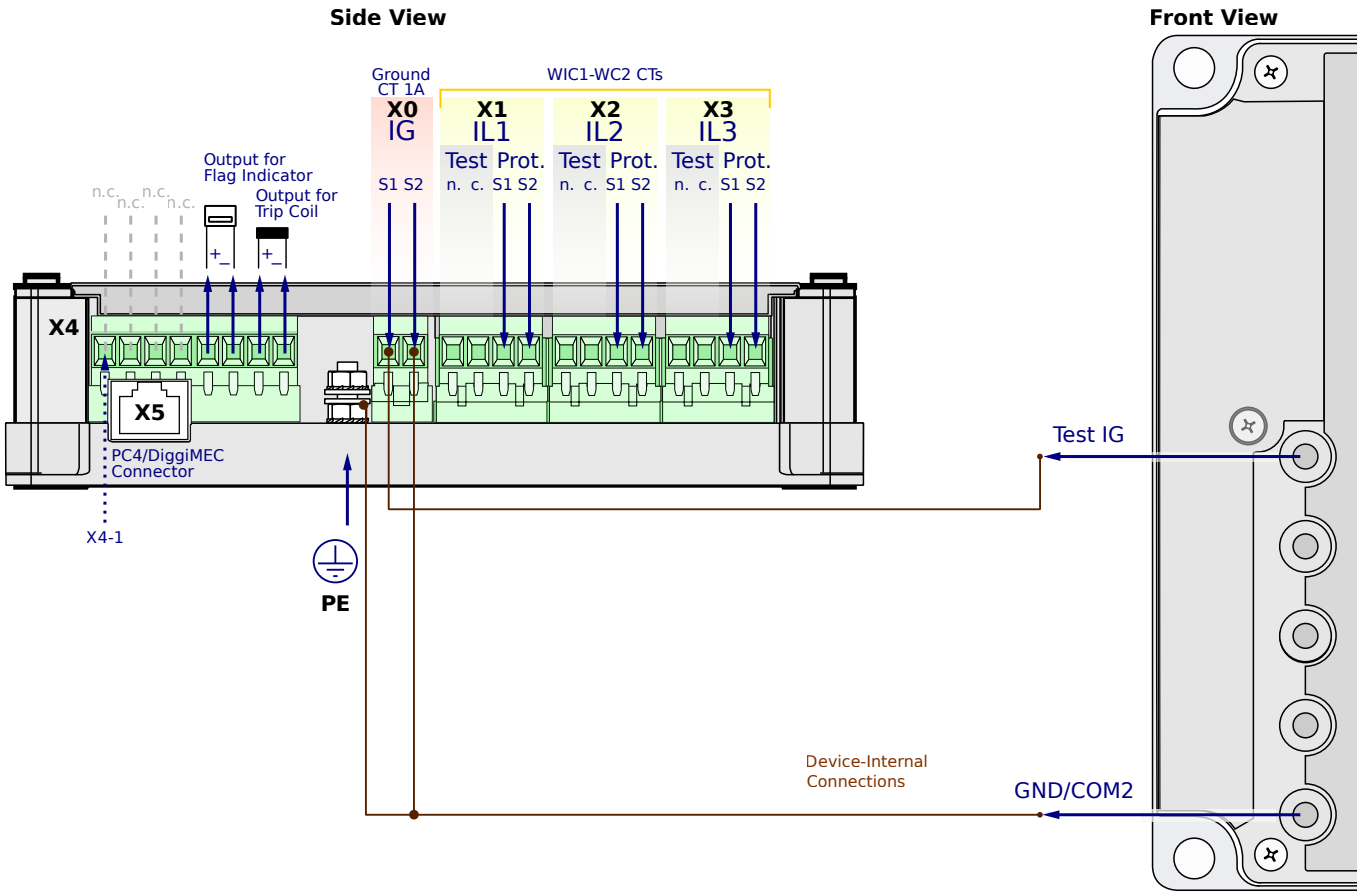


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NN2PAH

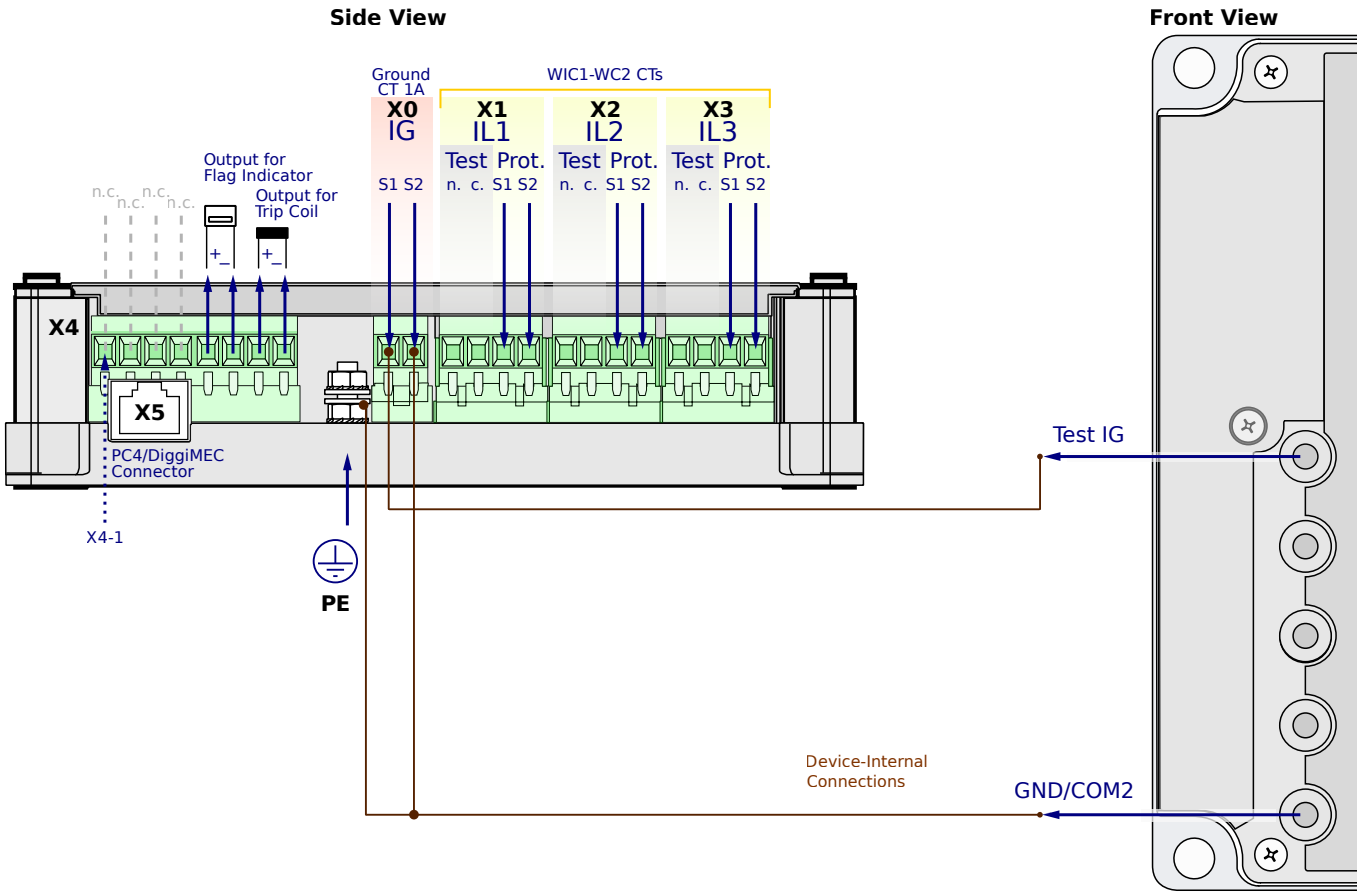


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0SA0

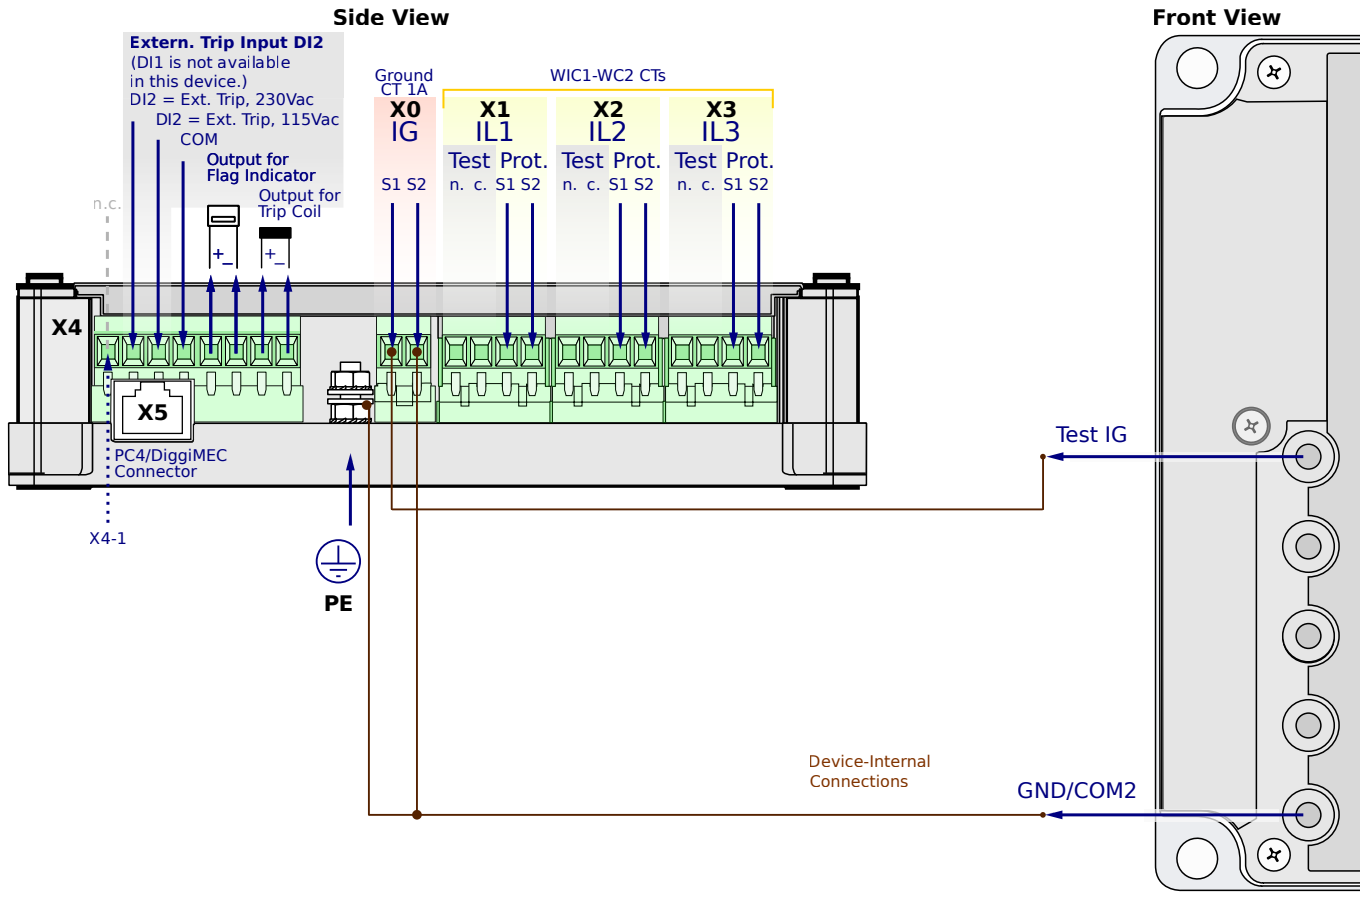


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0SAH

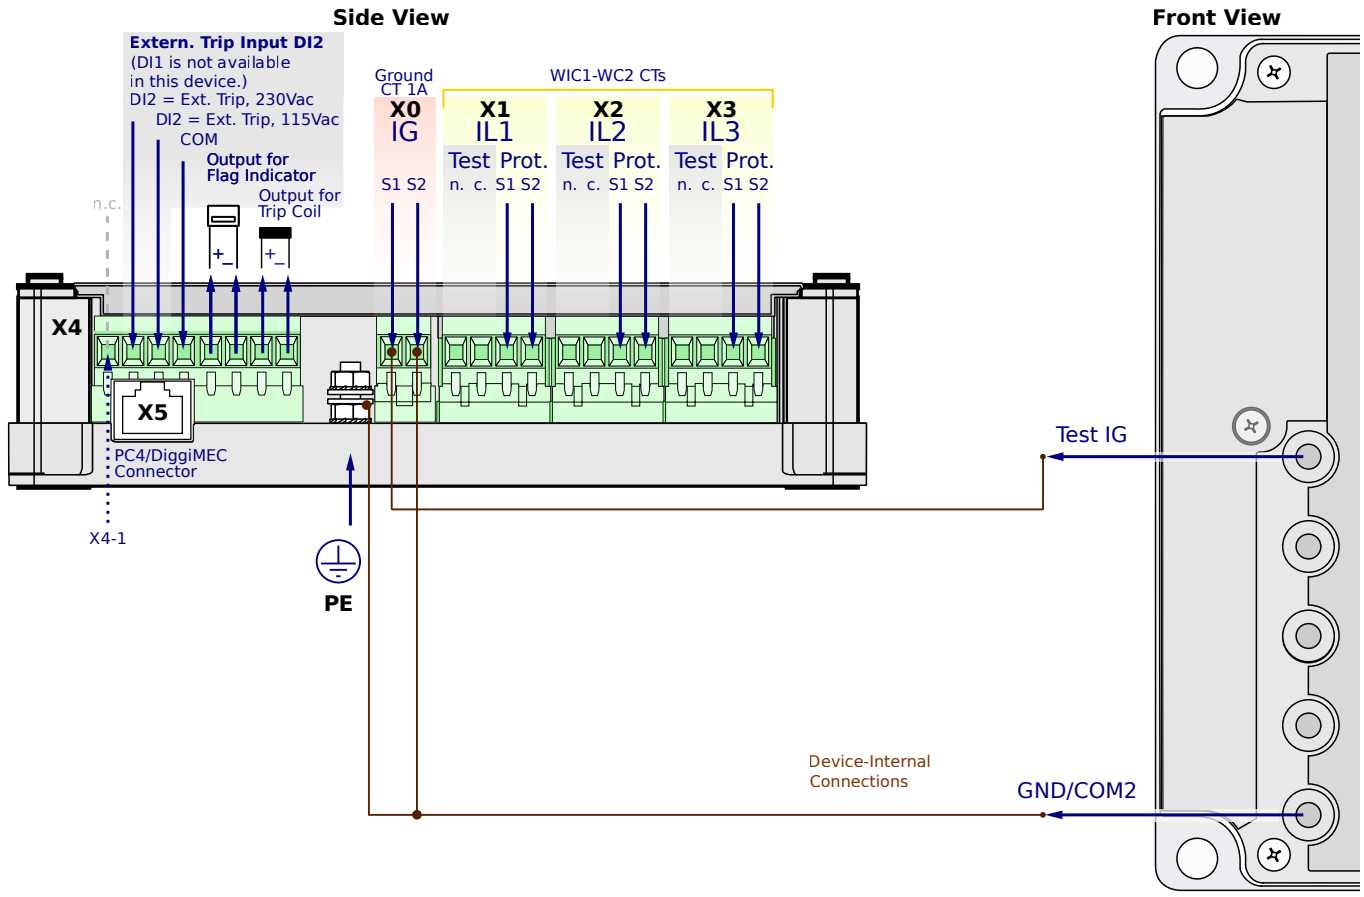


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0AA0

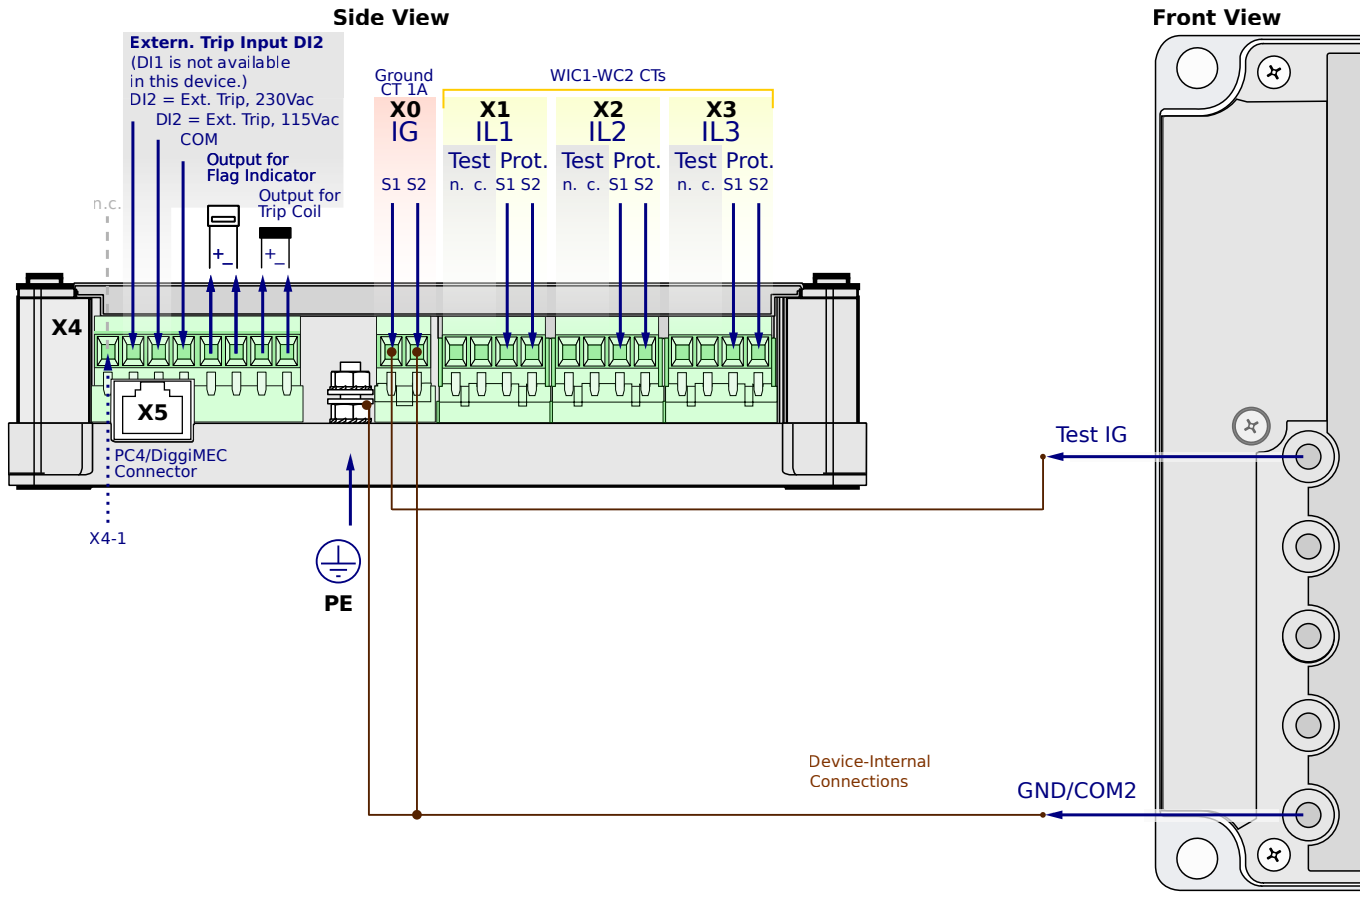


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0AAH

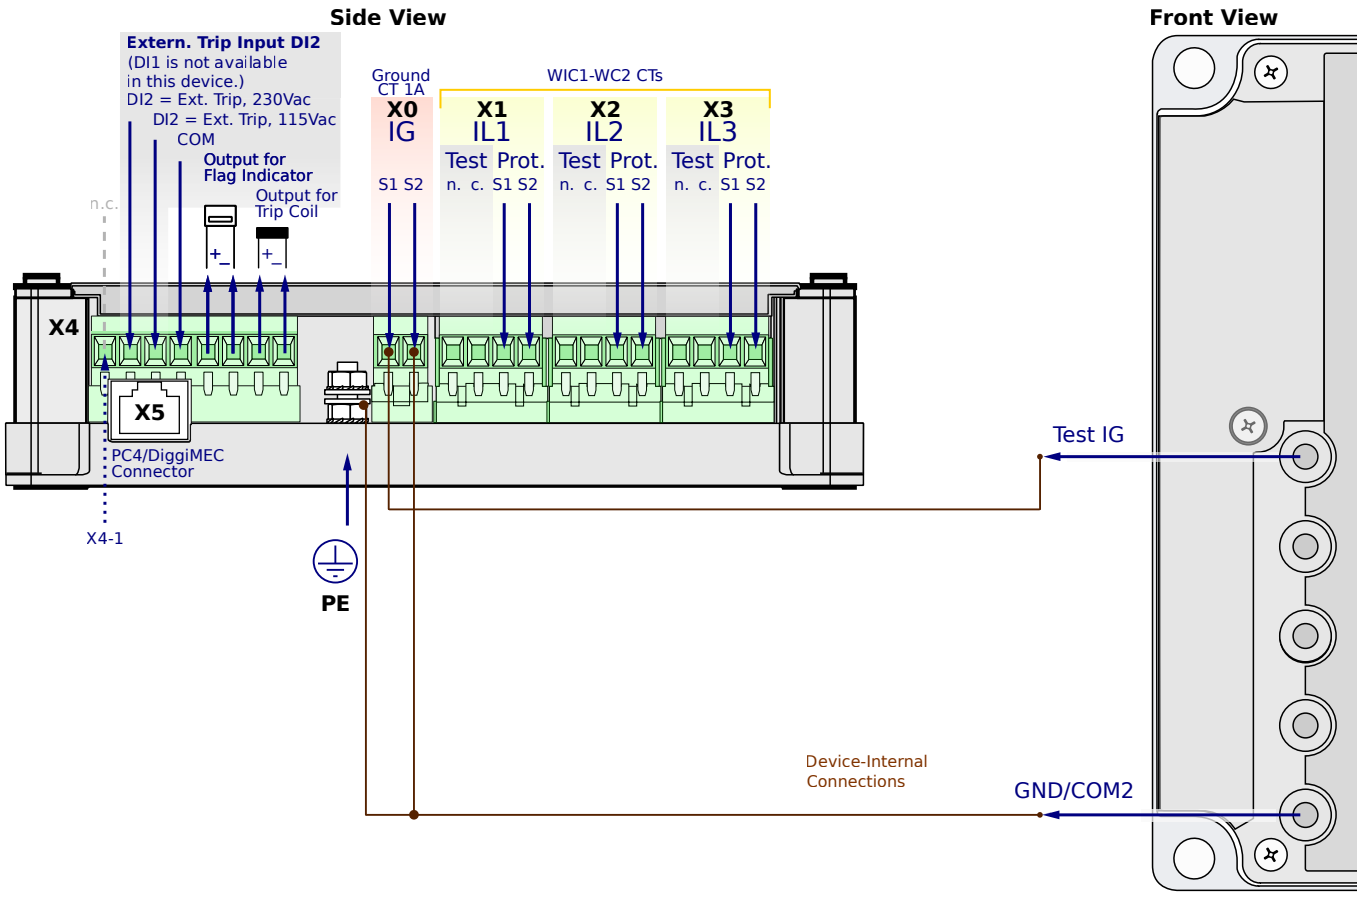


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0PA0

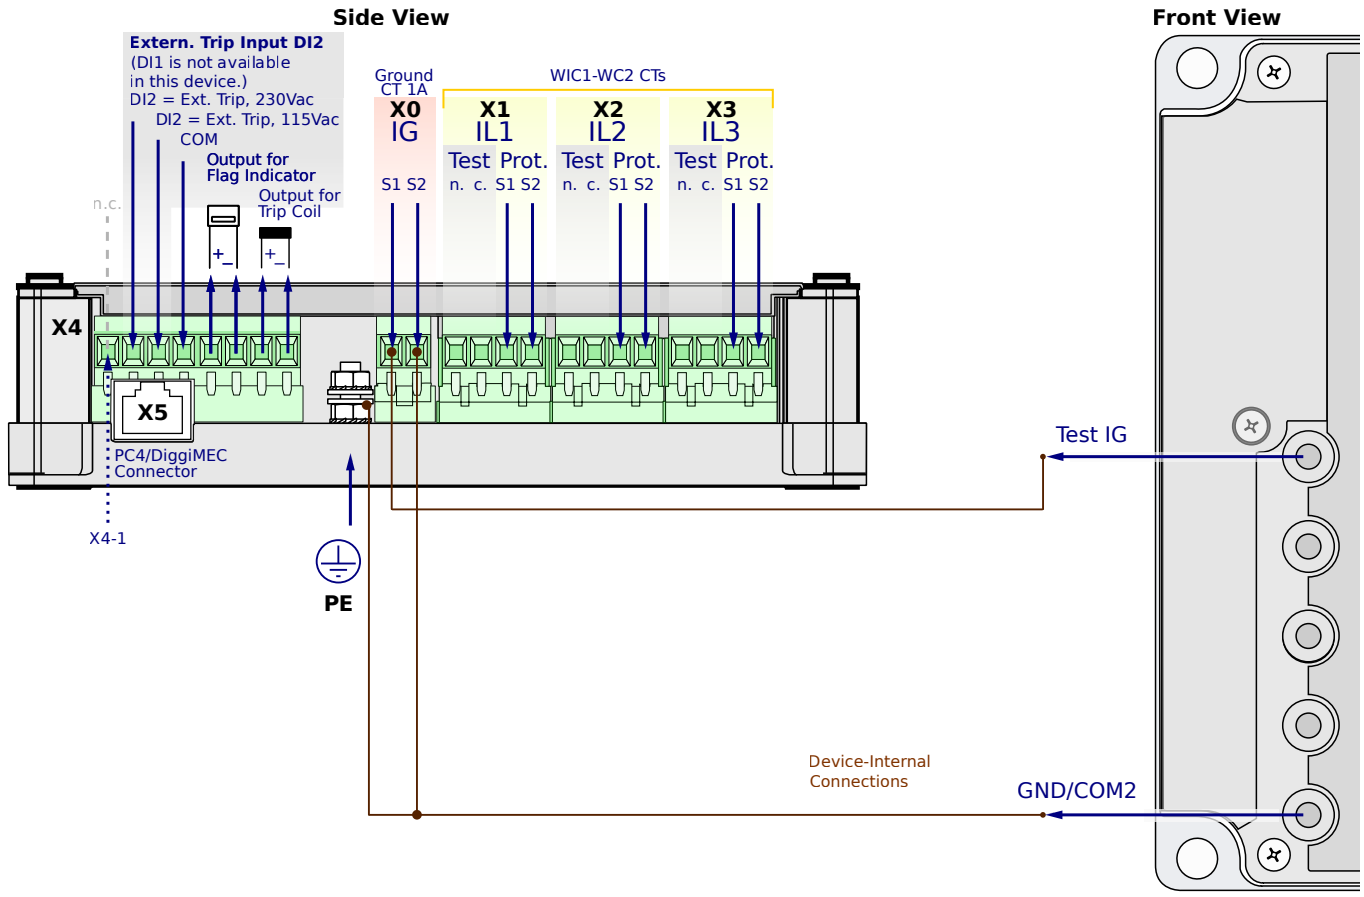


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF0PAH

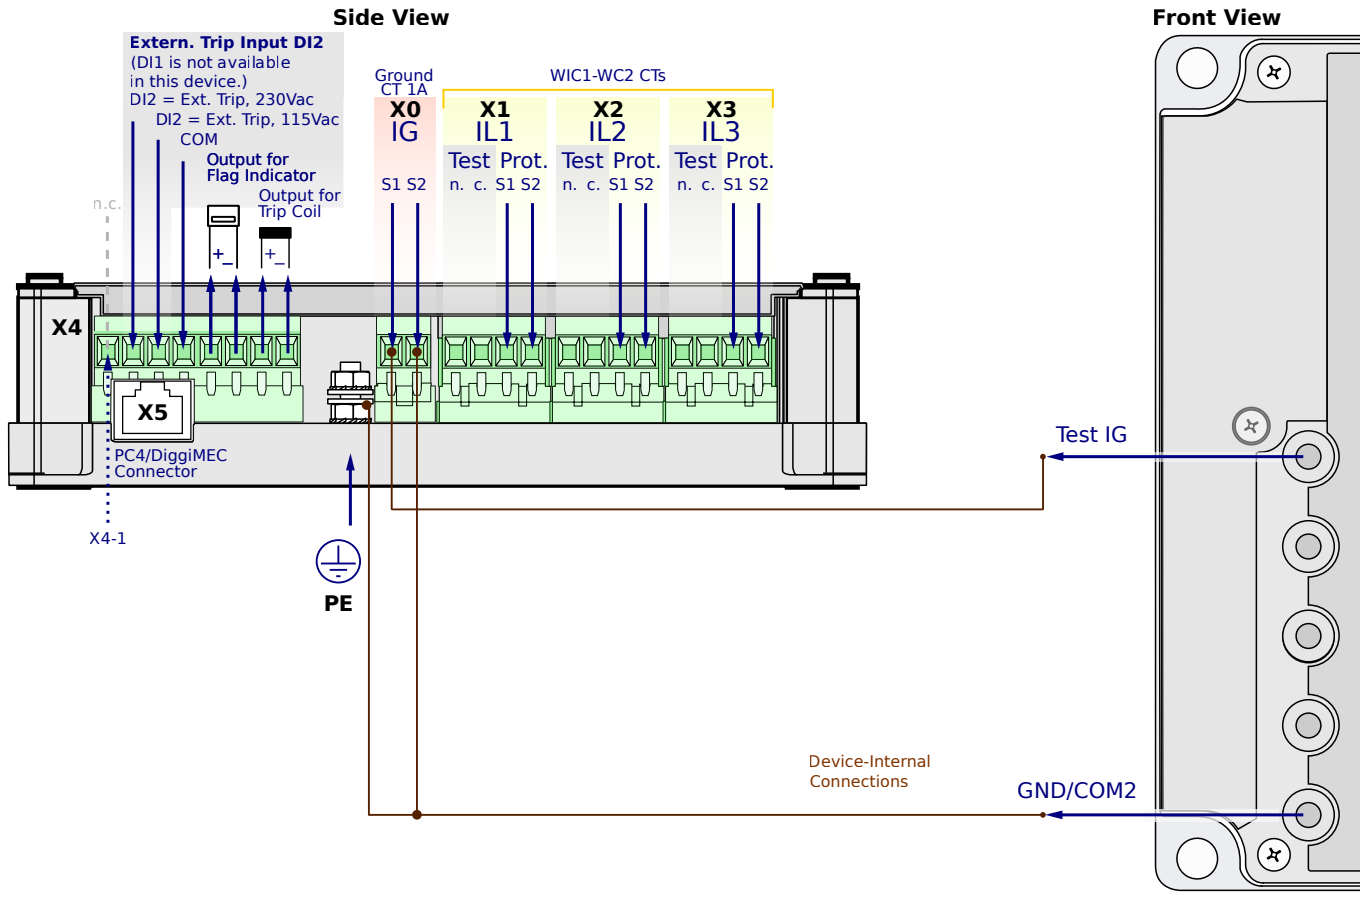


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1SA0

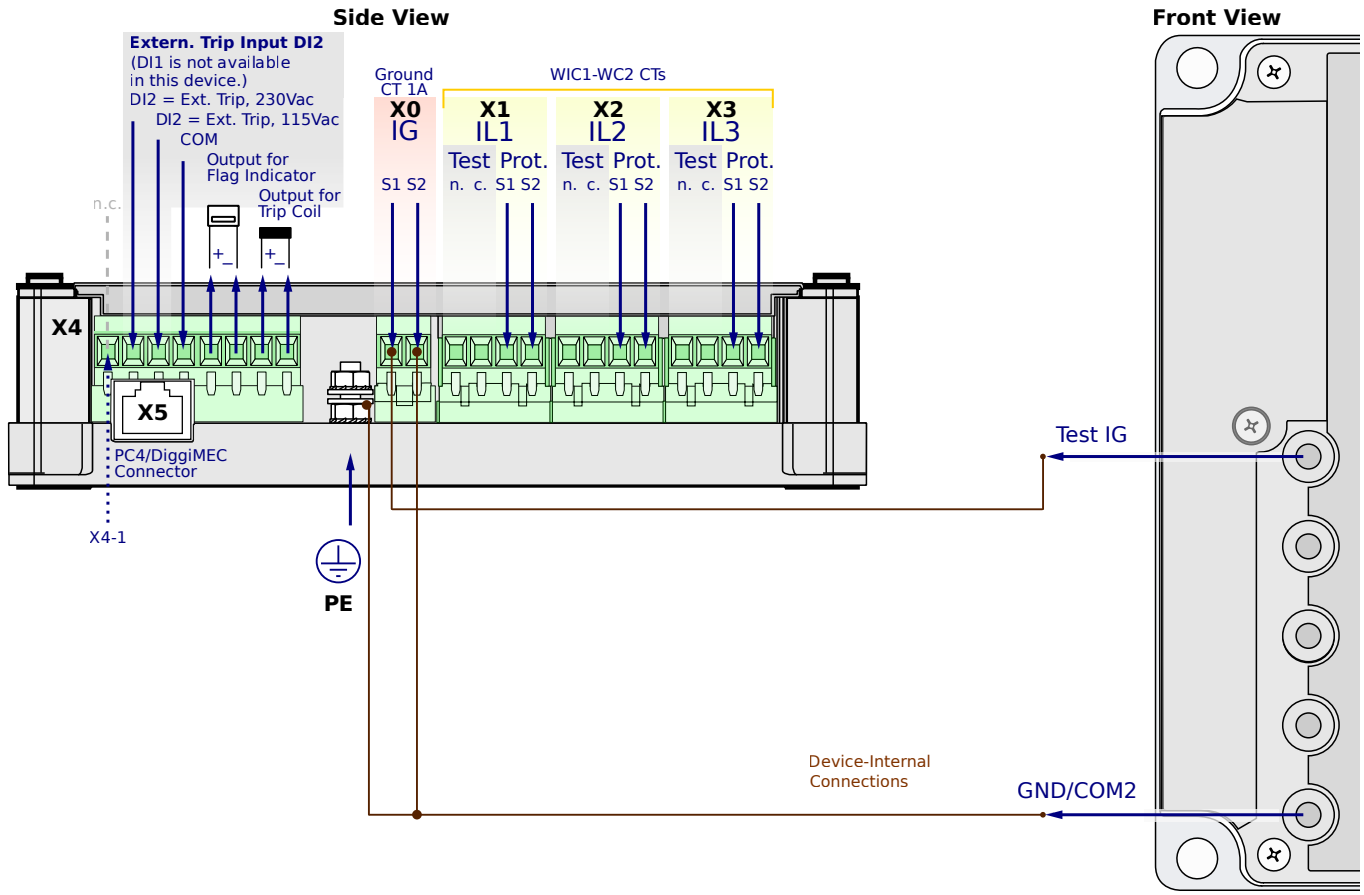


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1SAH

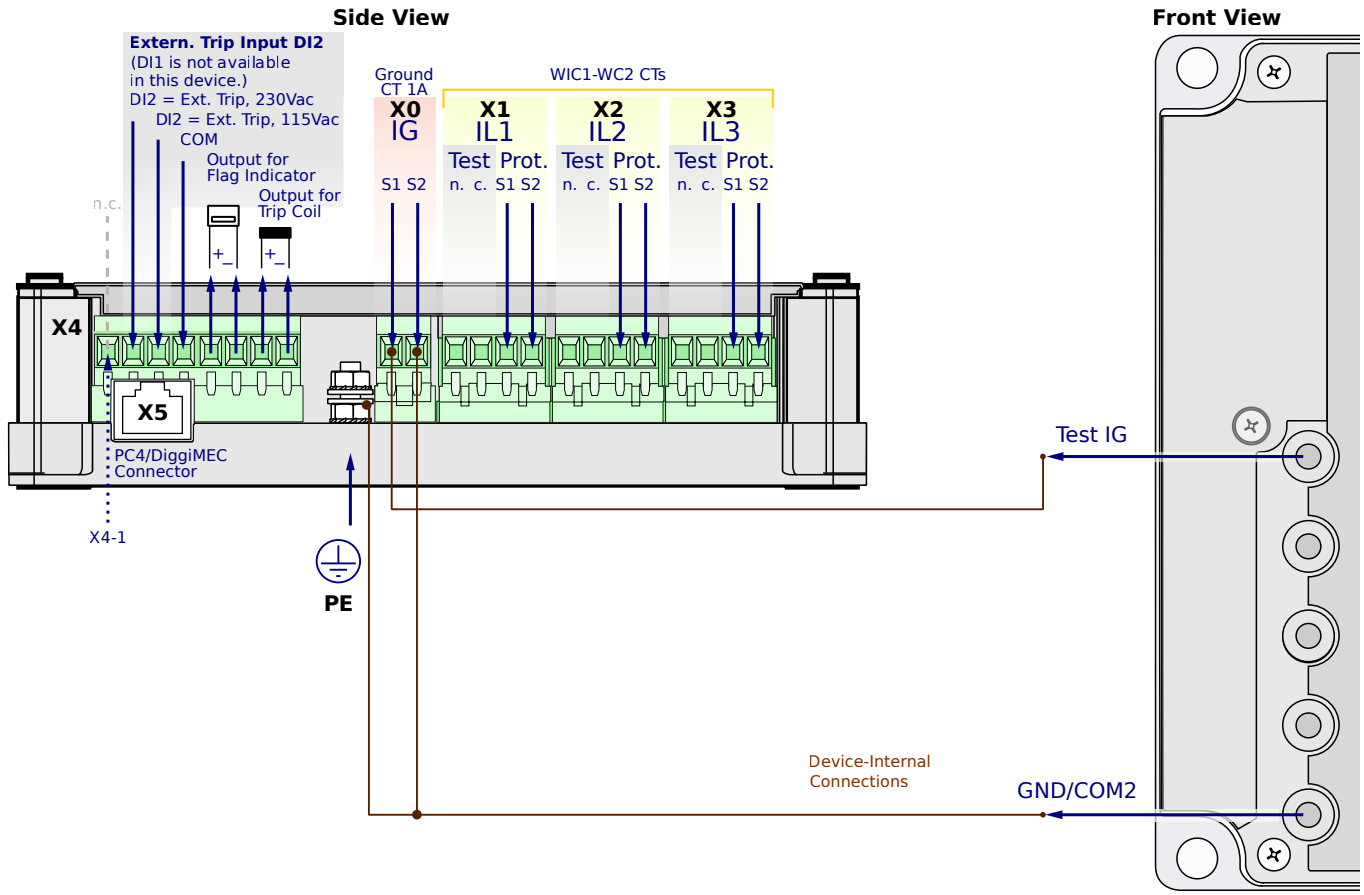


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1AA0

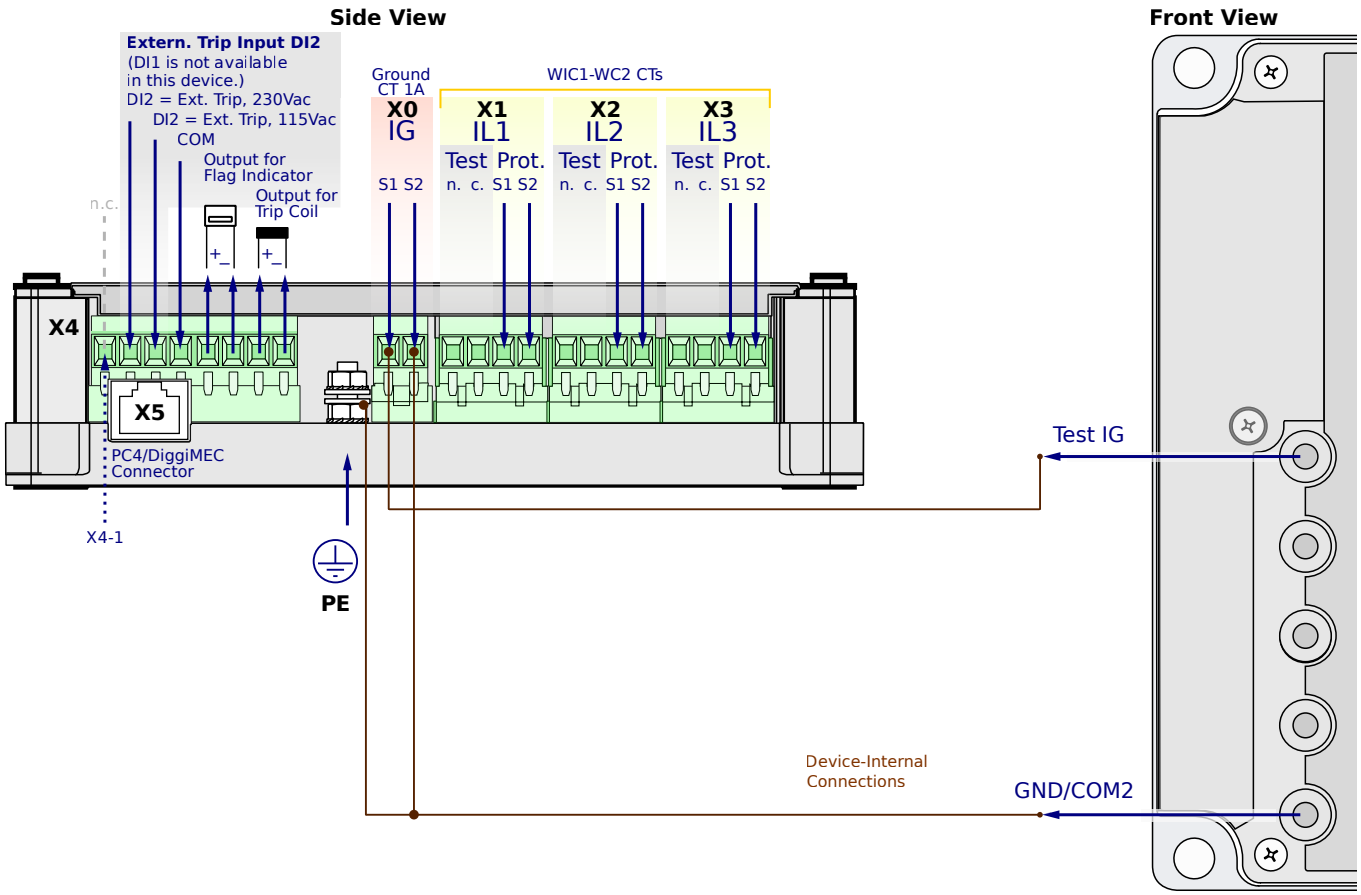


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1AAH

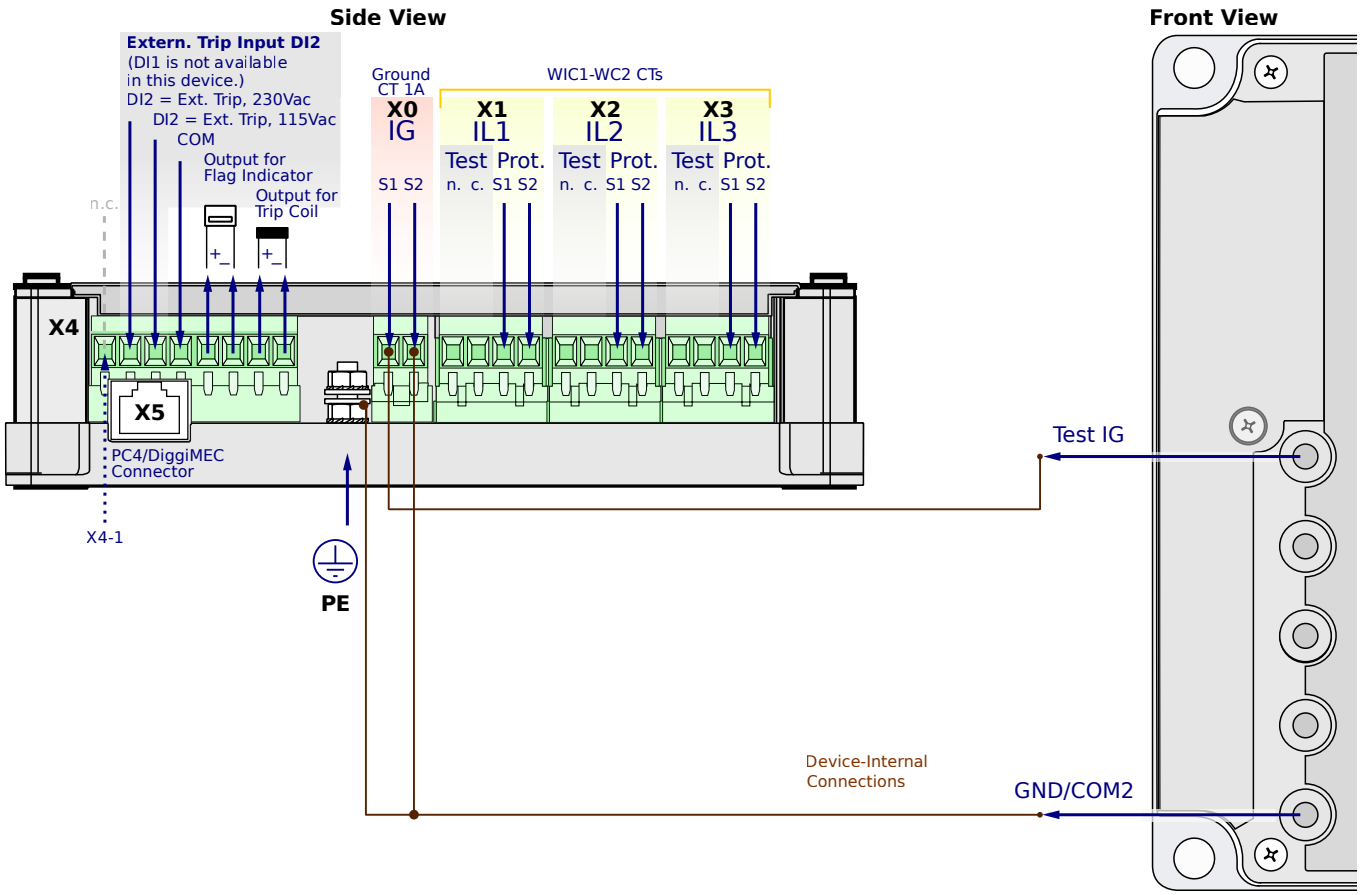


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1PA0

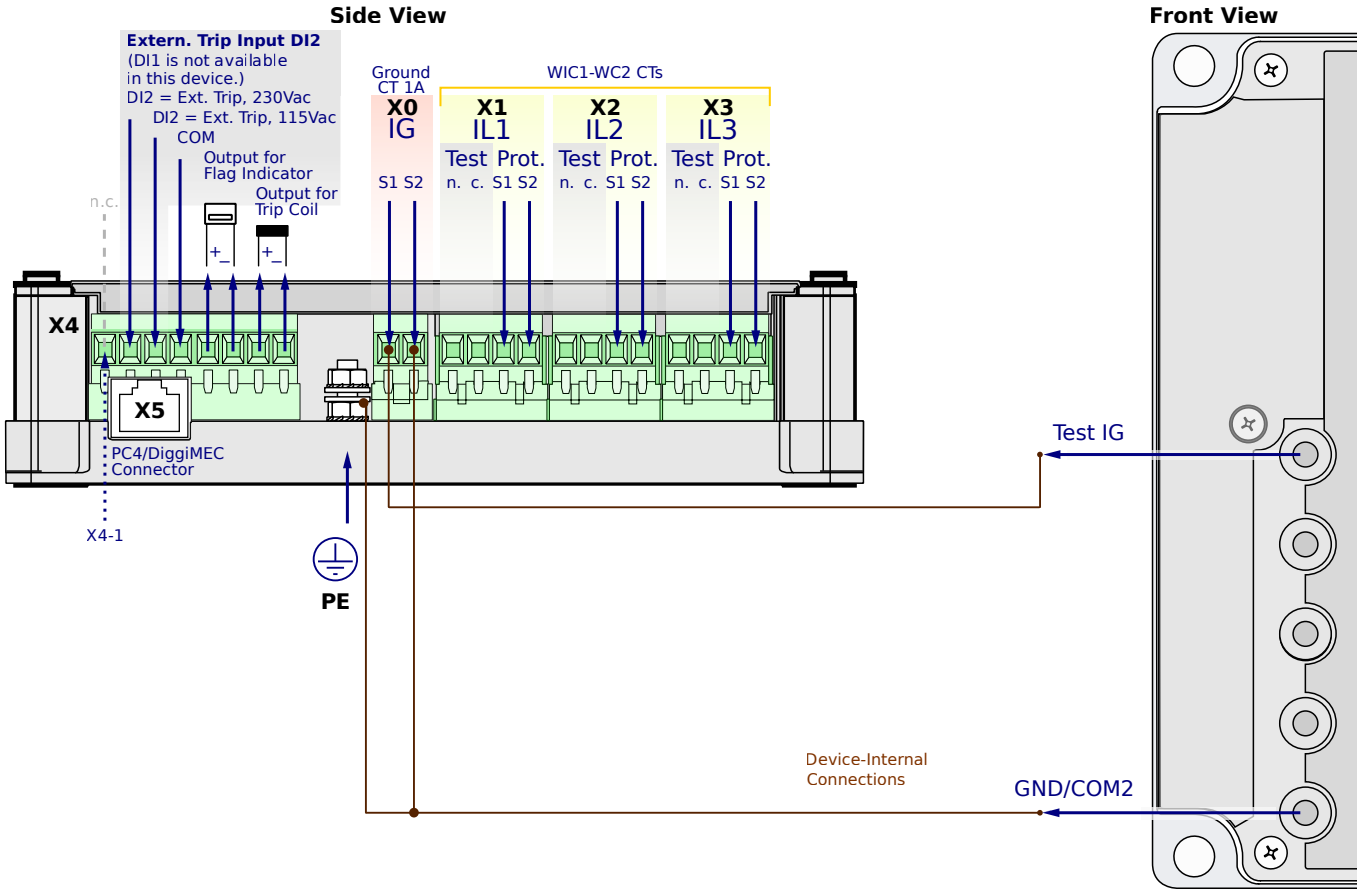


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF1PAH

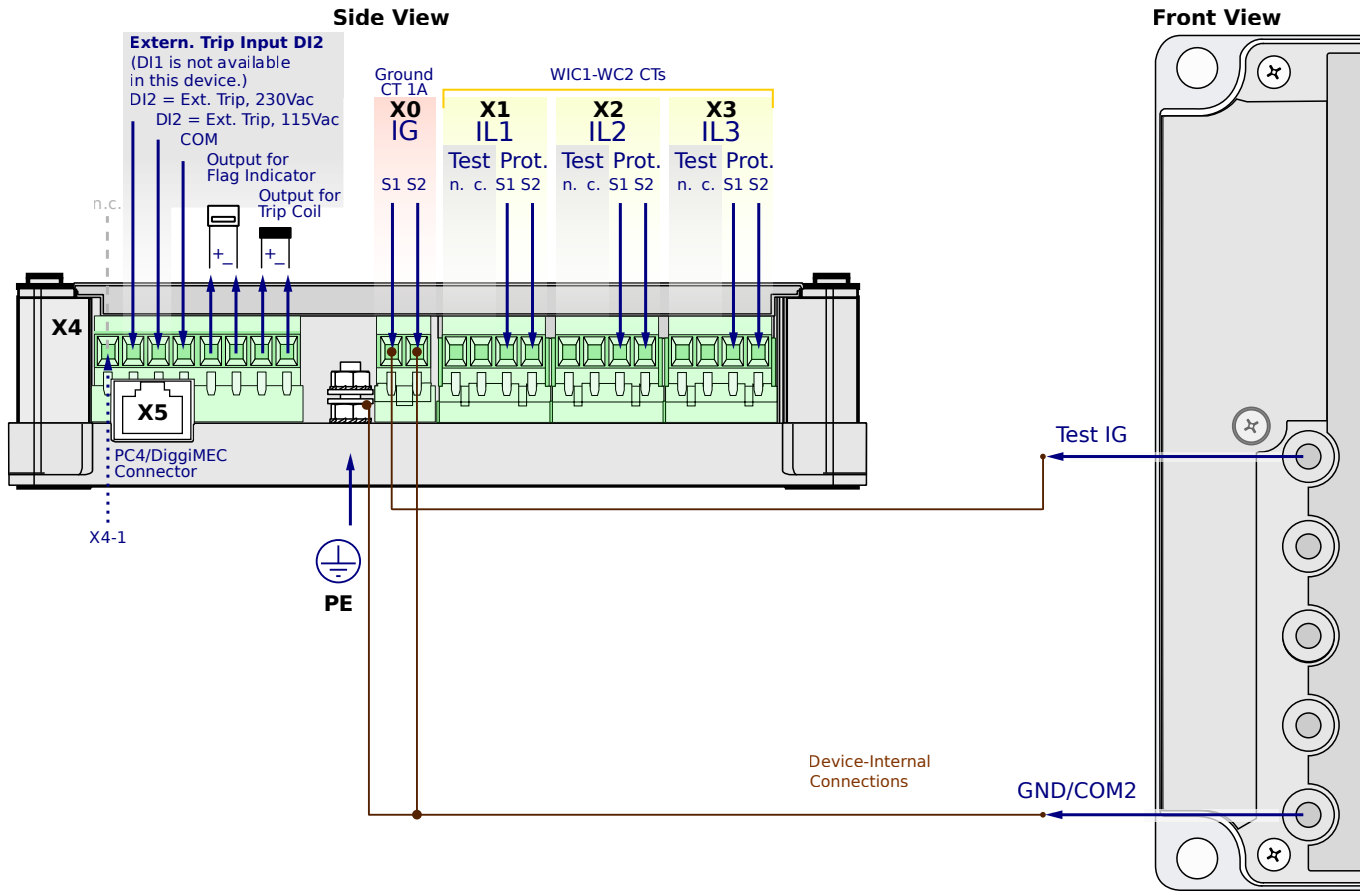


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2SA0

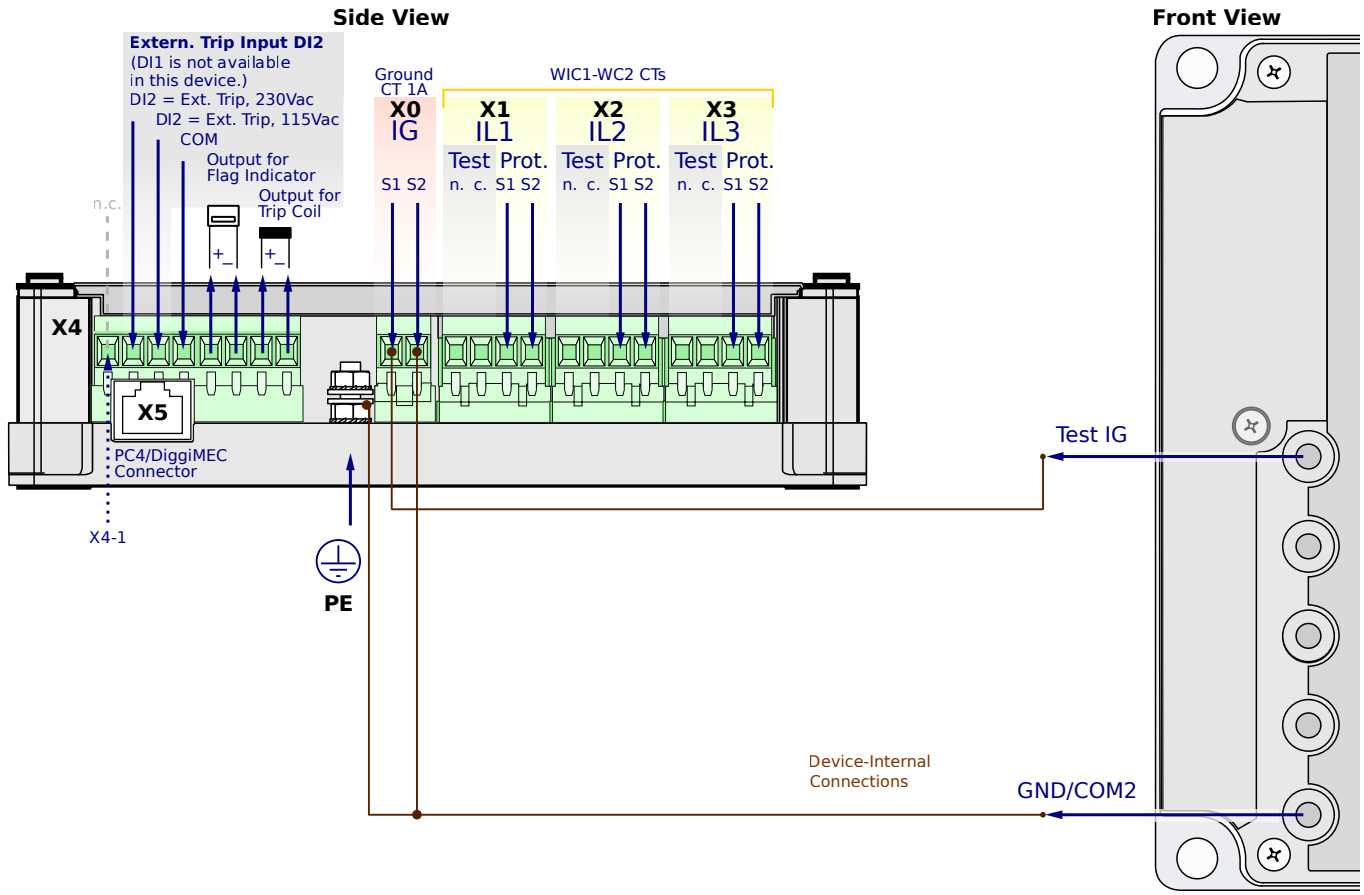


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2SAH

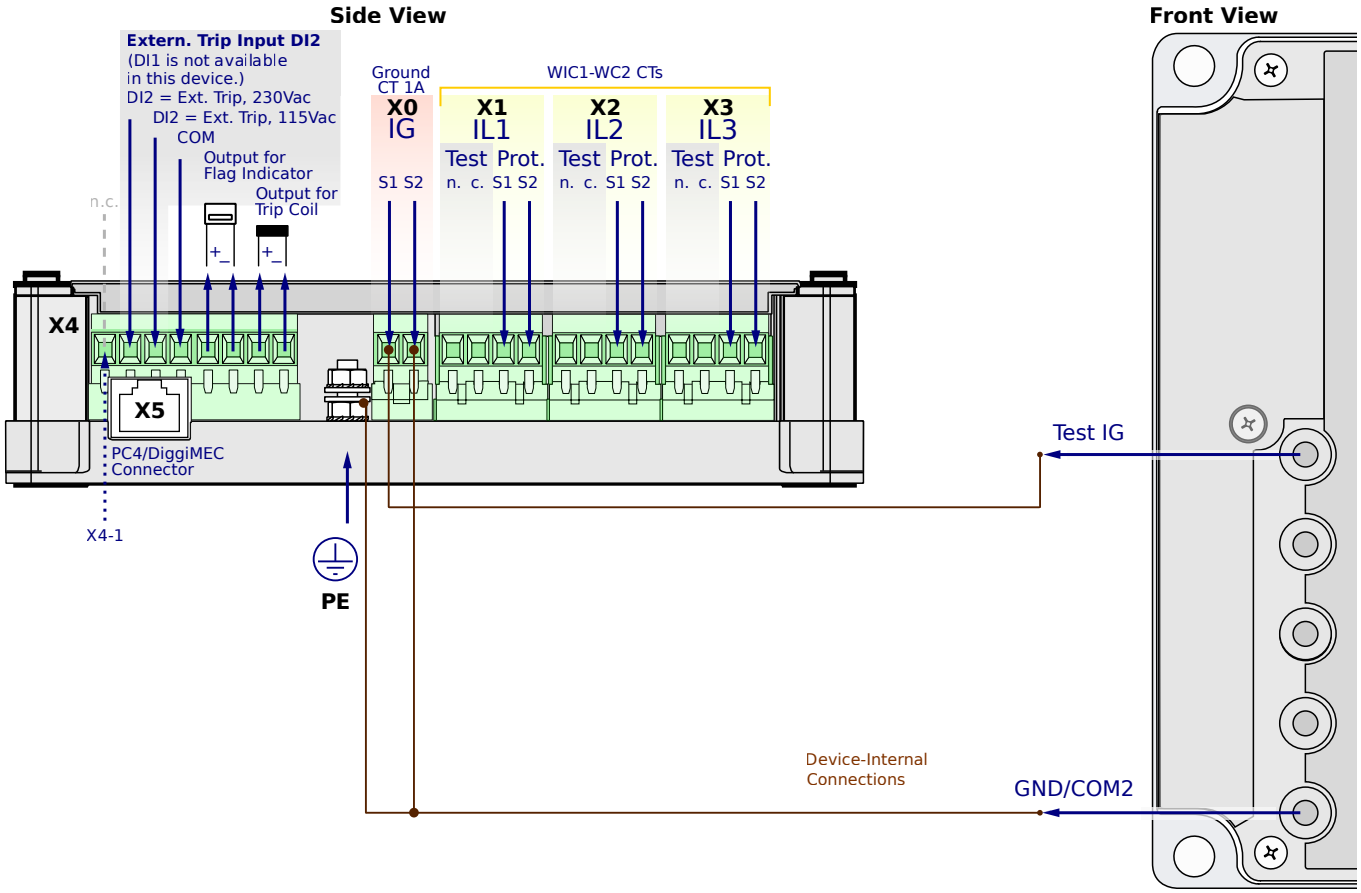


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2AA0

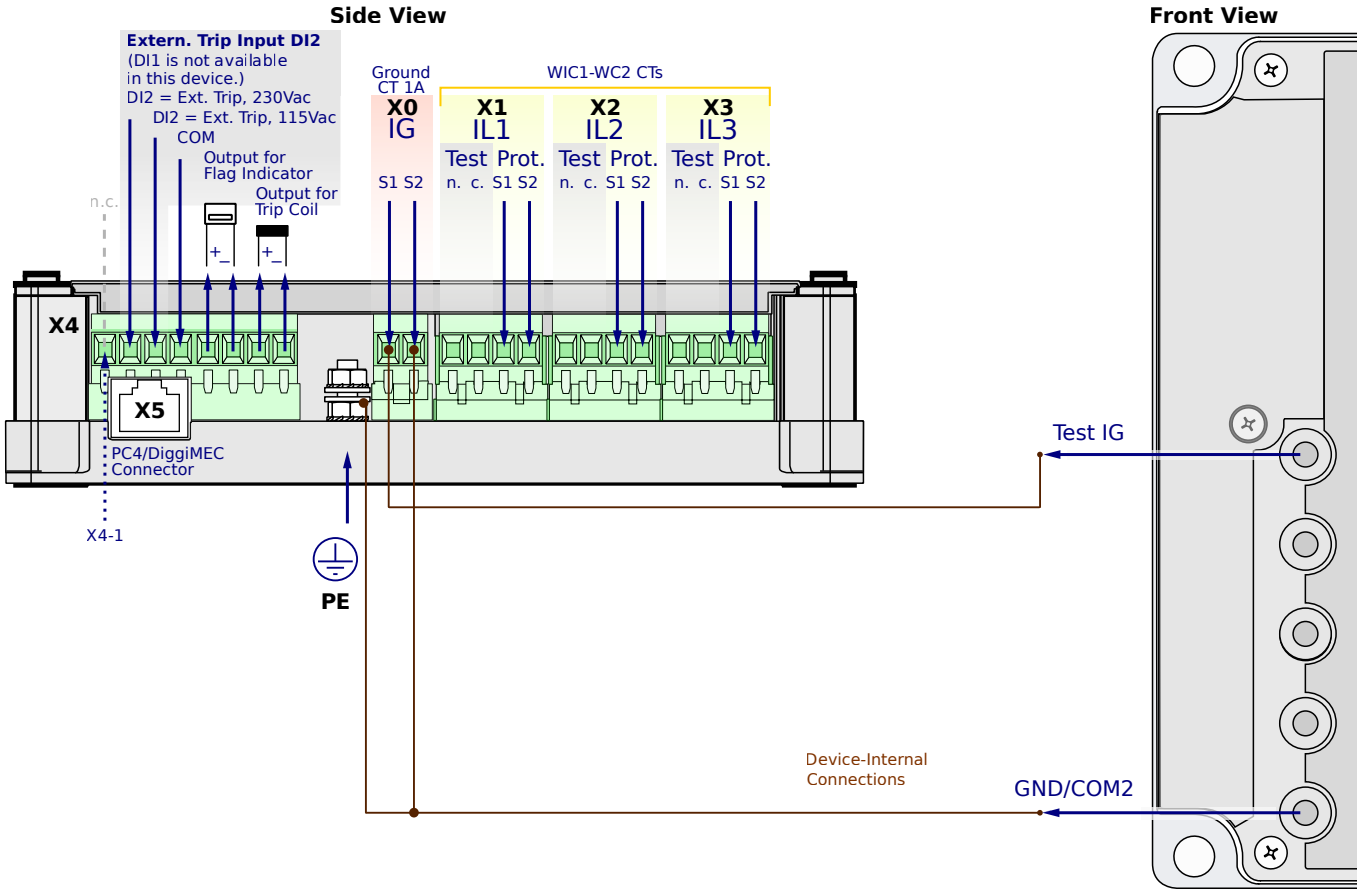


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2AAH

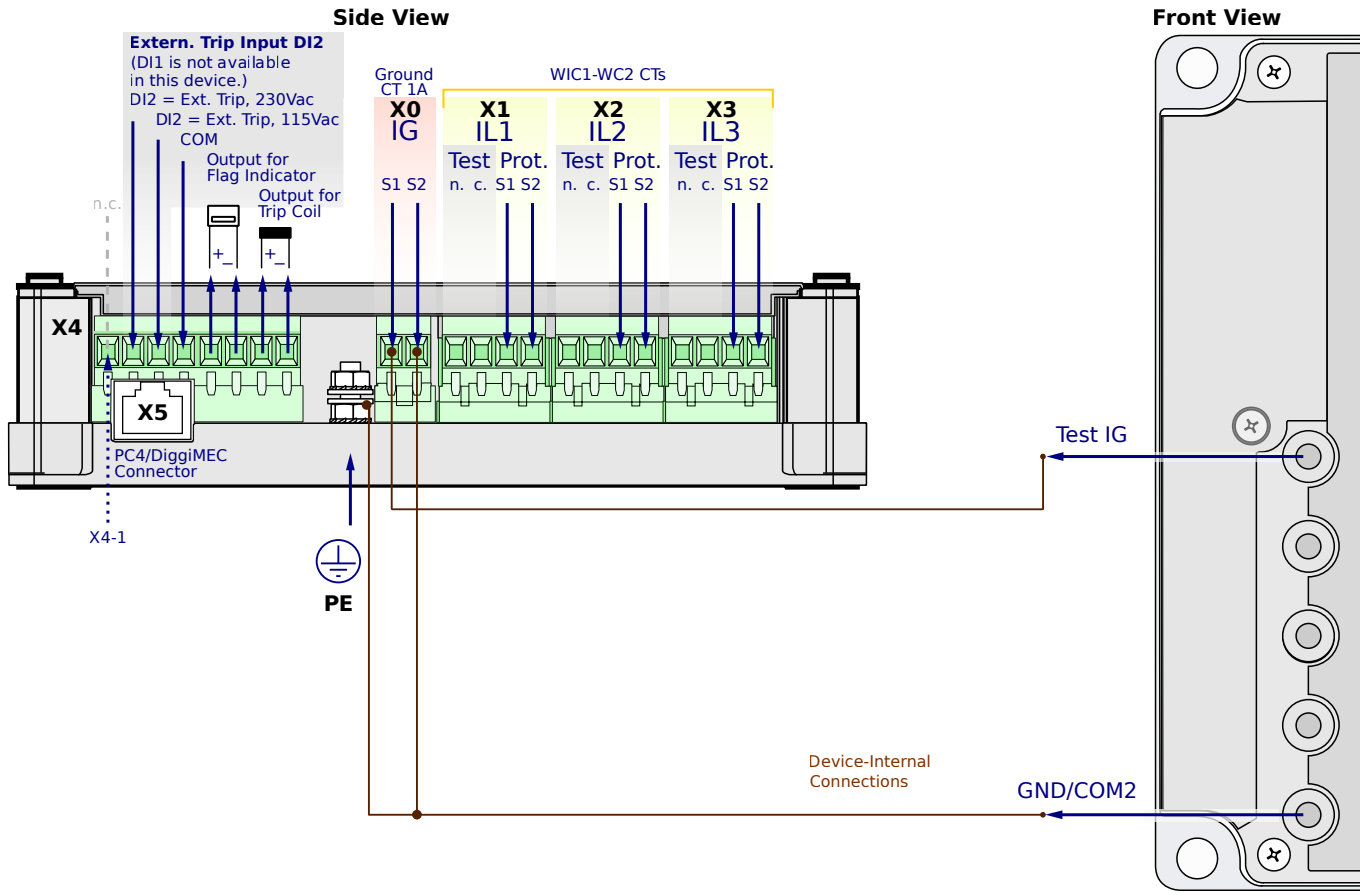


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2PA0

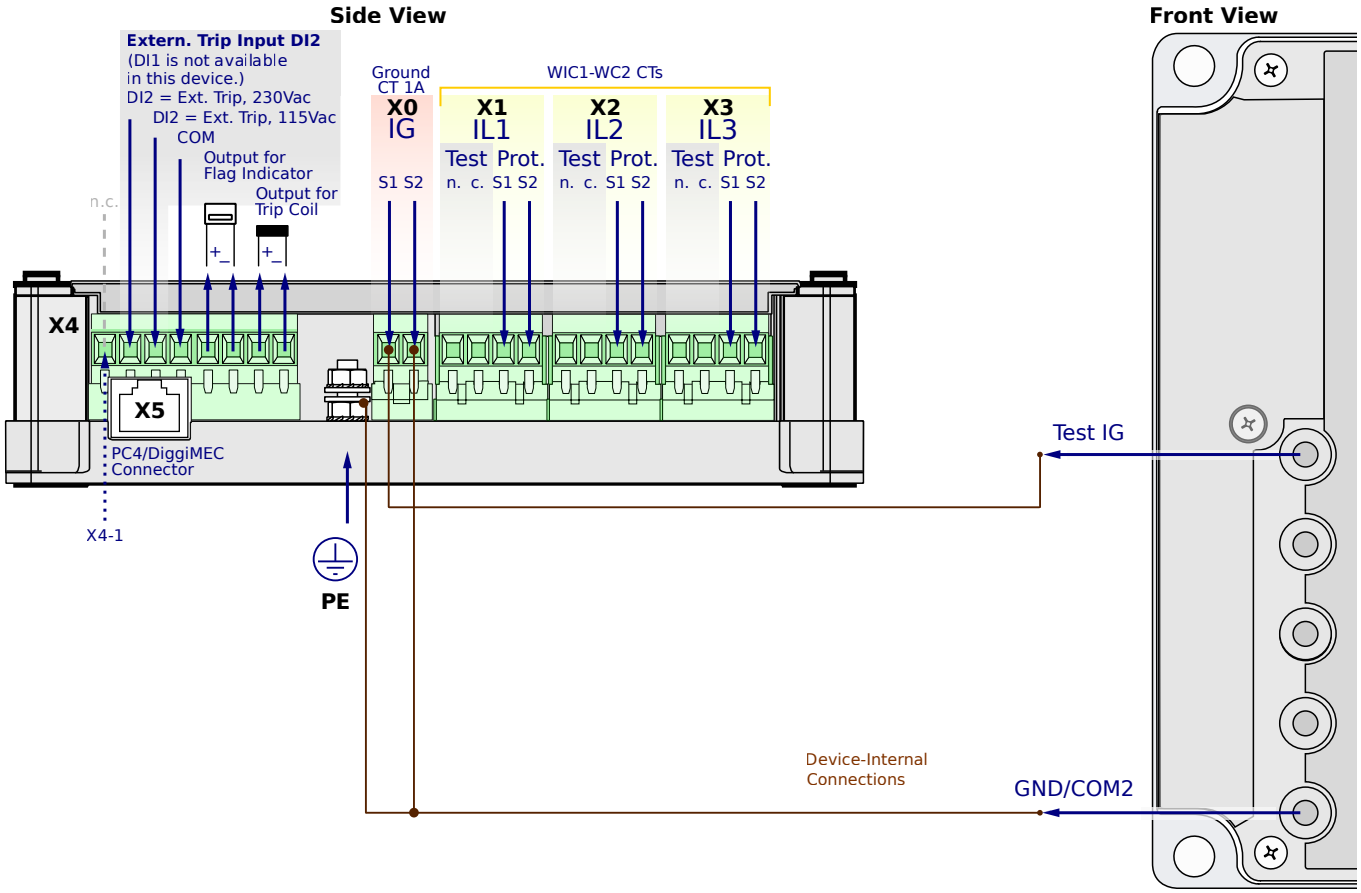


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NF2PAH

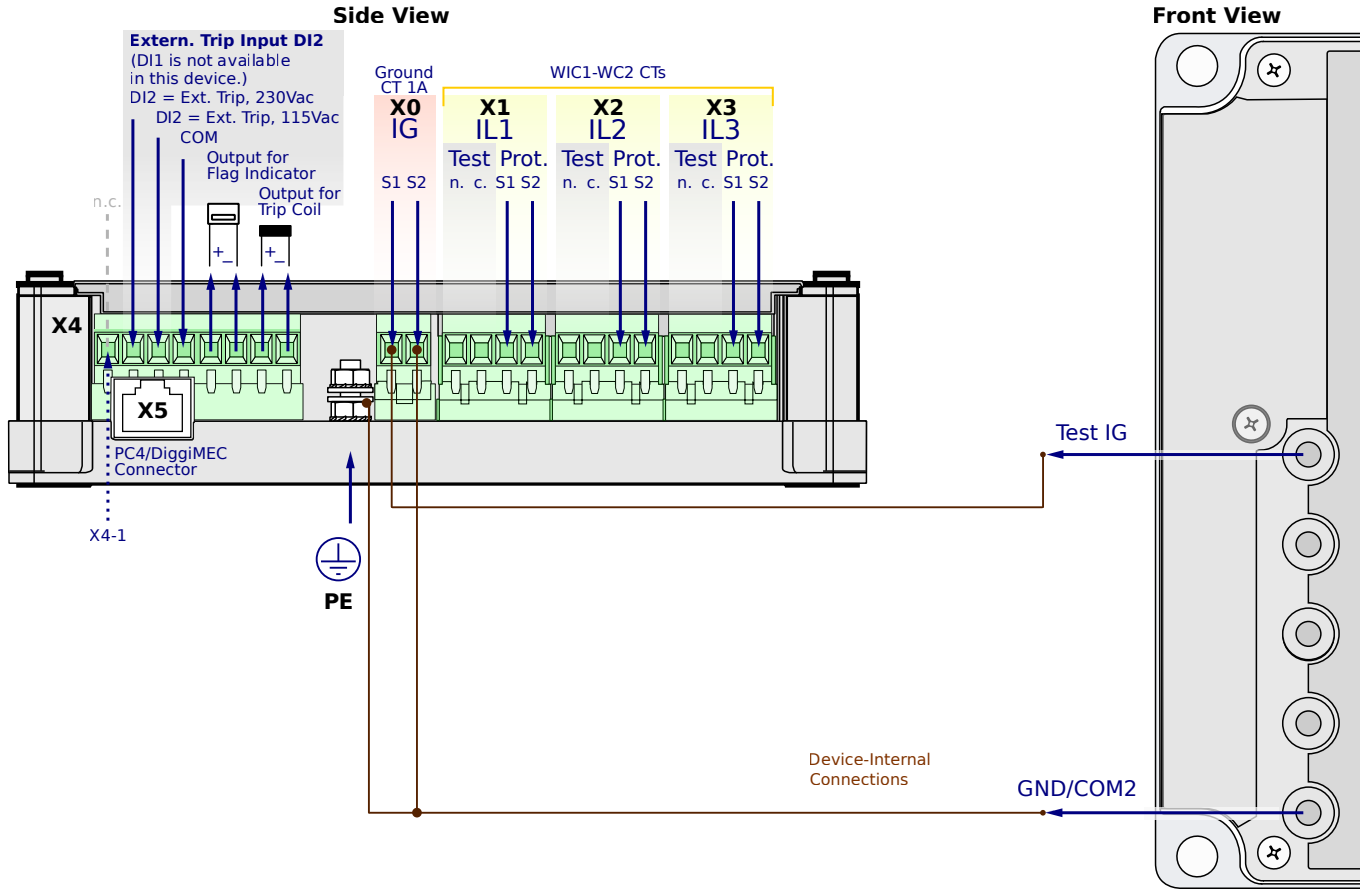


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0SA0

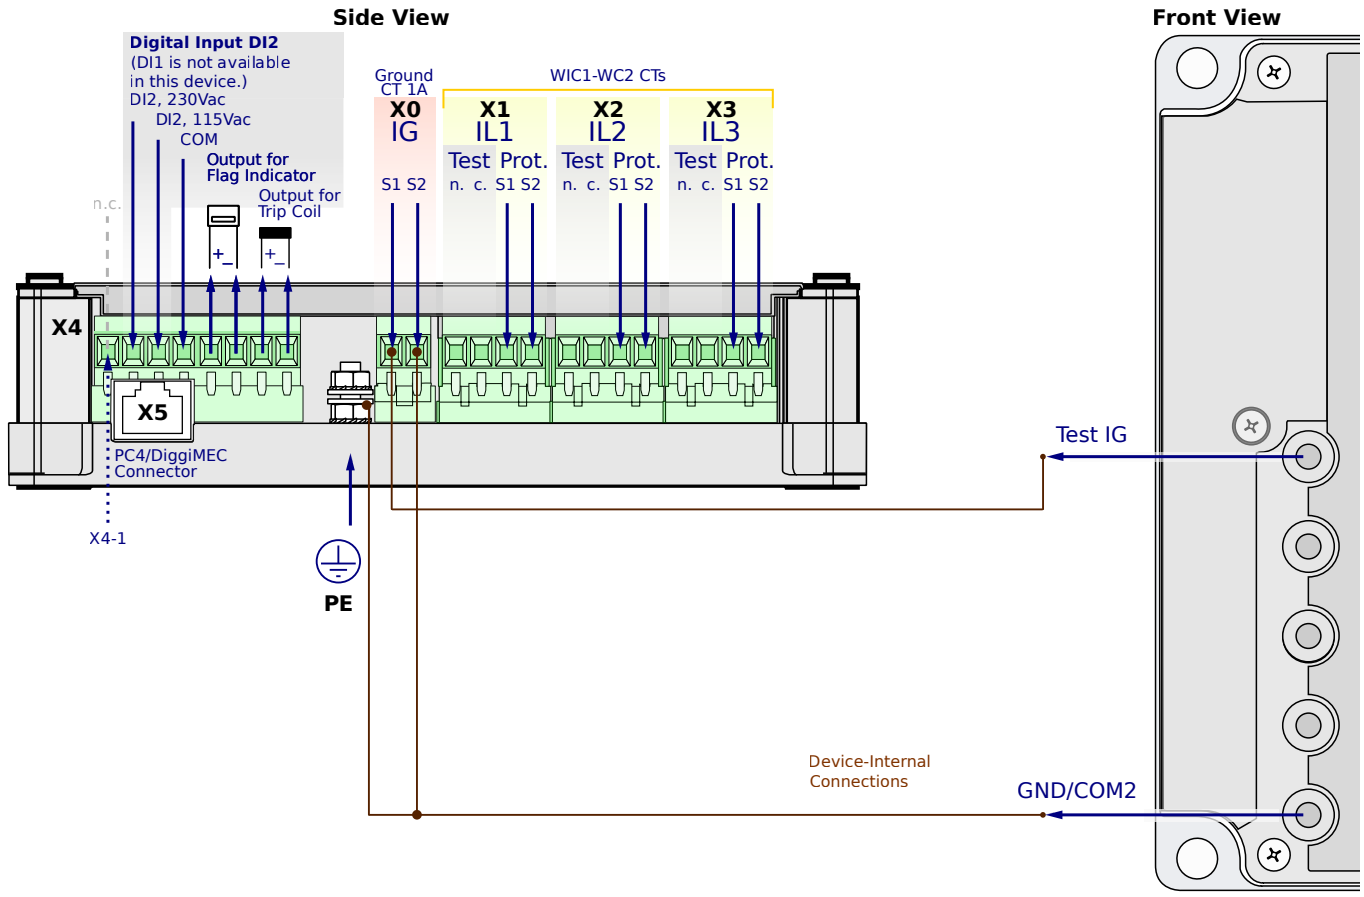


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0SAH

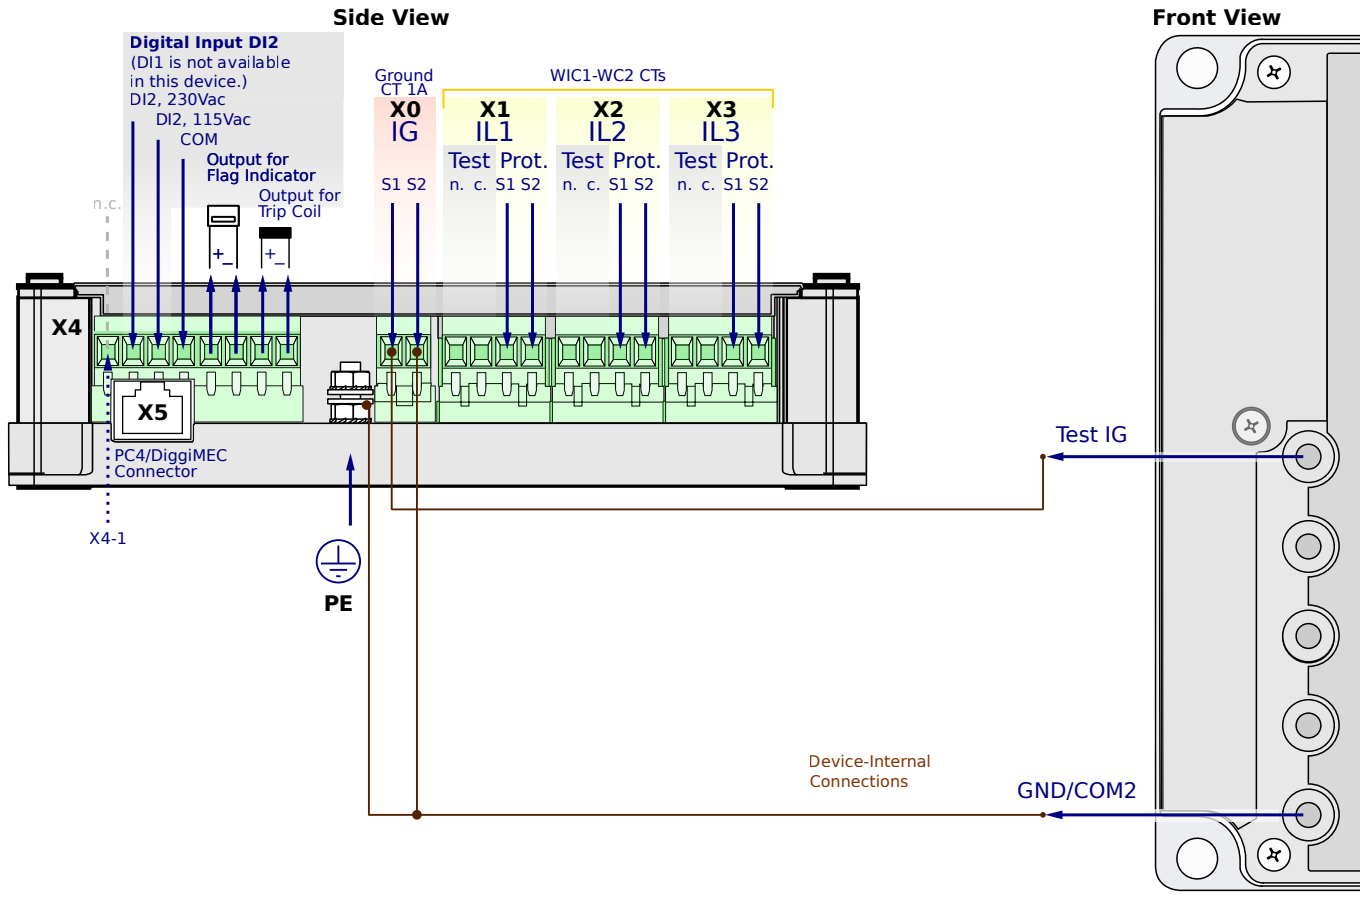


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0AA0

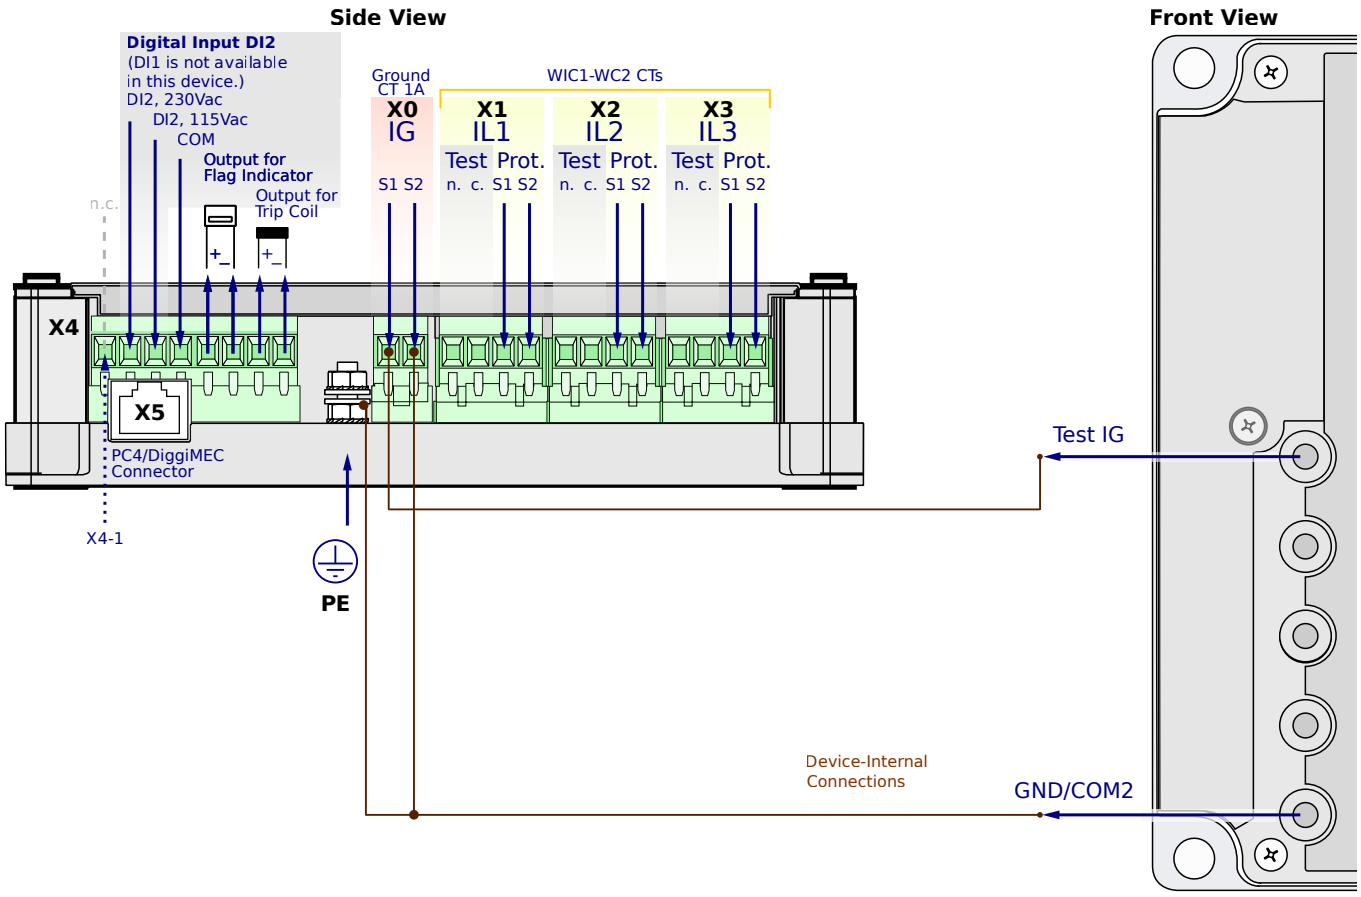


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0AAH

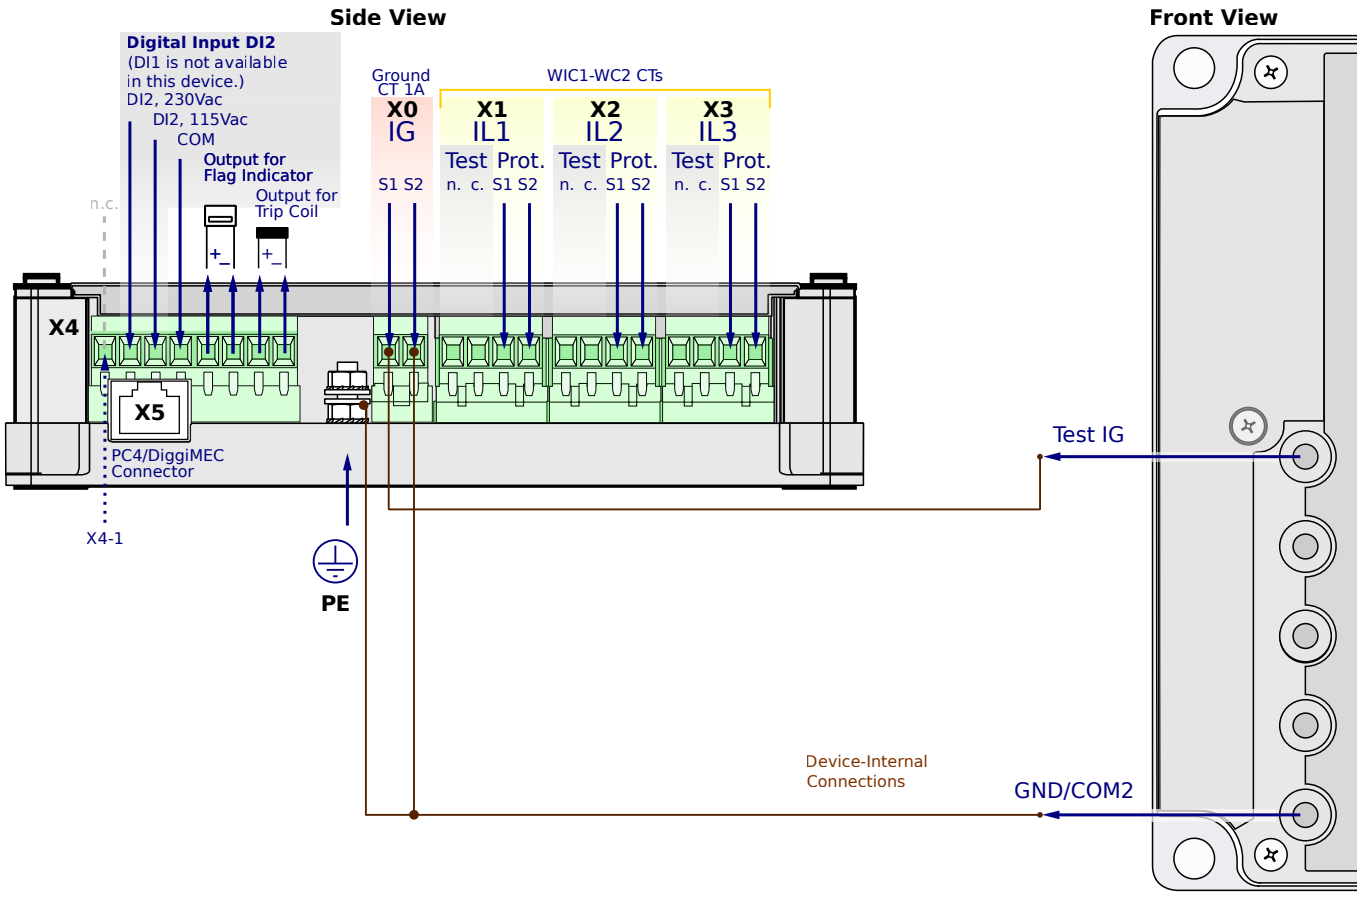


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0PA0

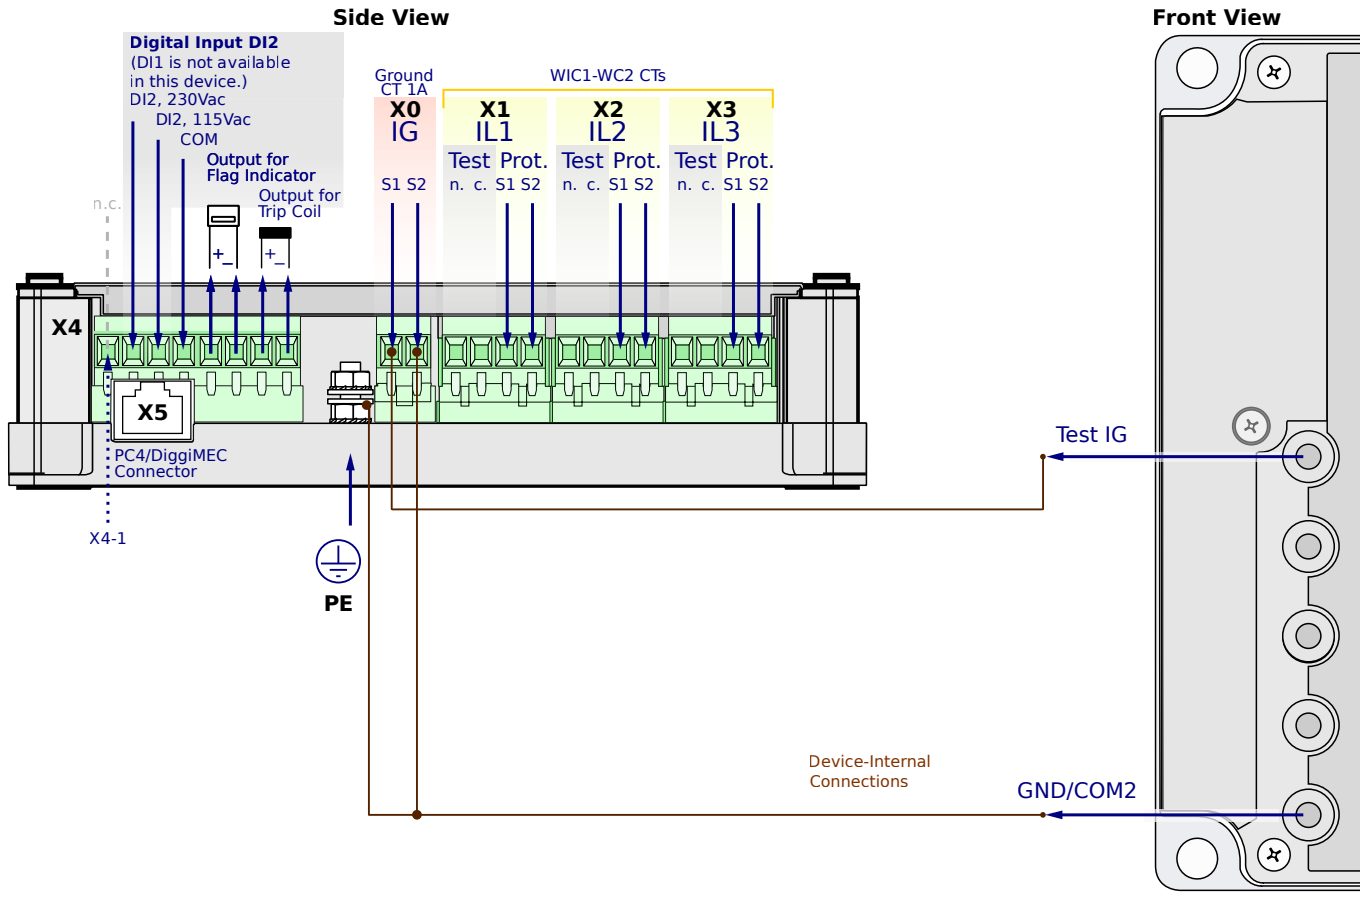


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC0PAH

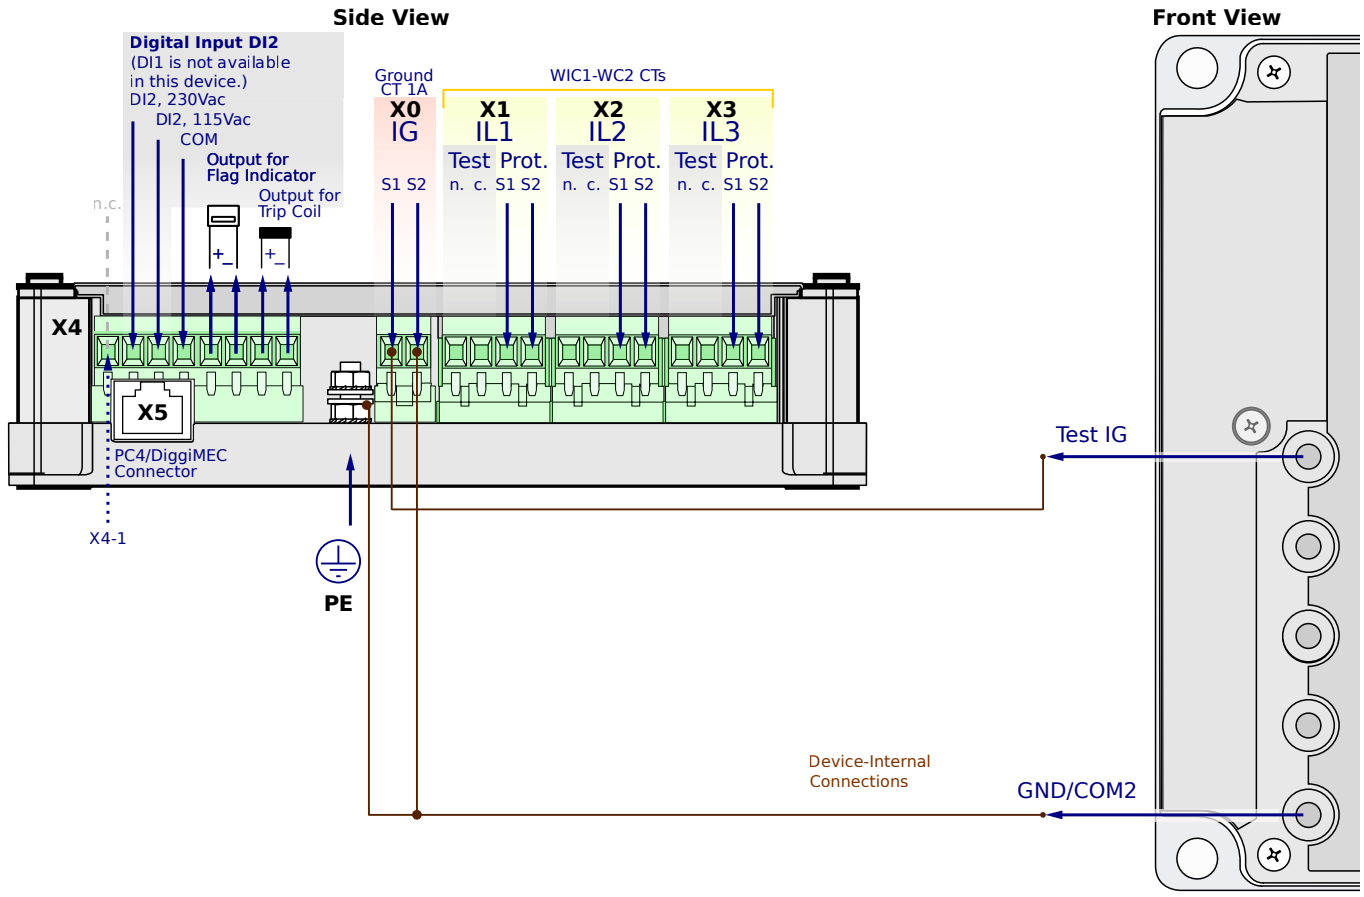


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1SA0

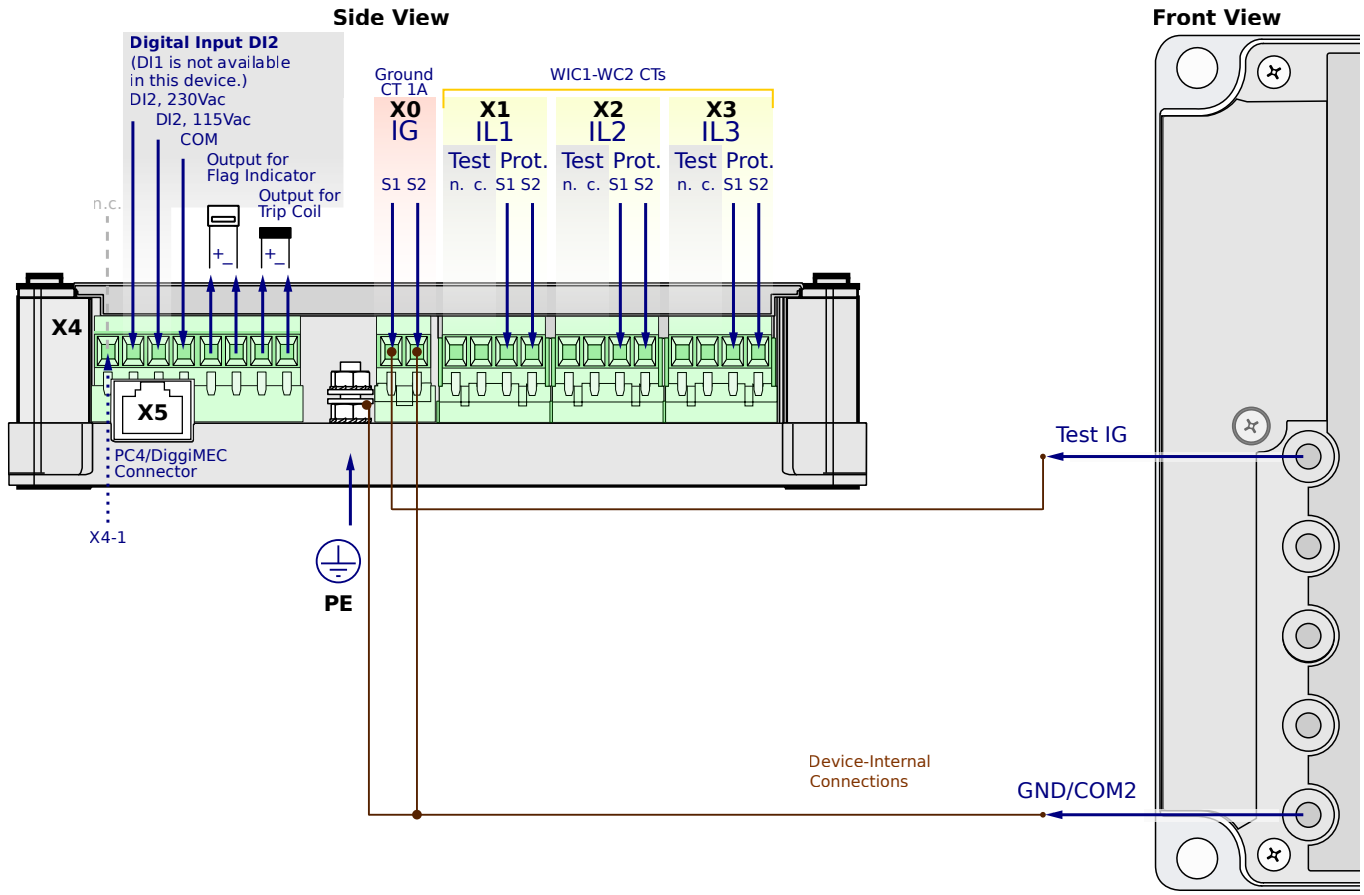


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1SAH

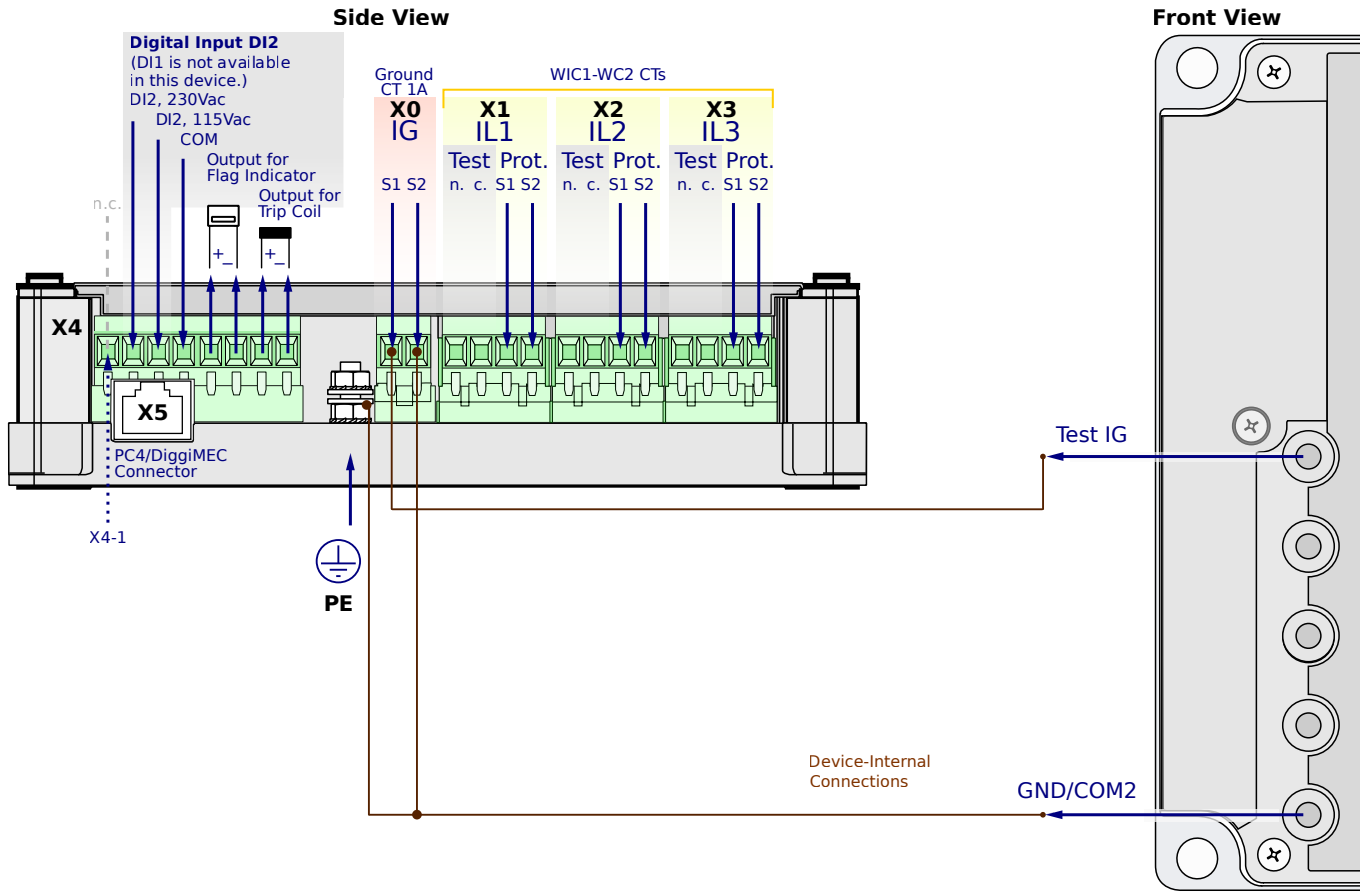


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1AA0

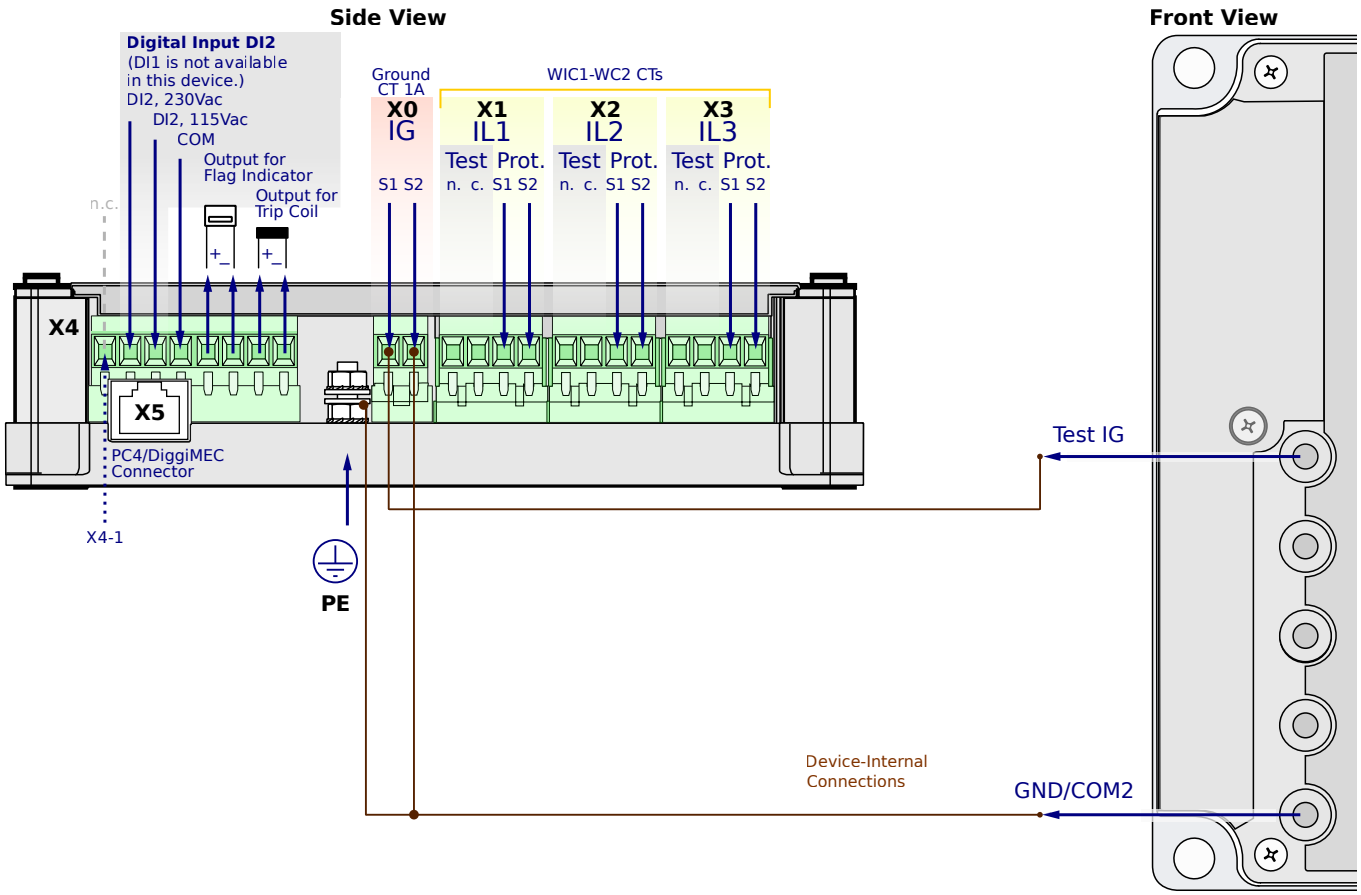


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1AAH

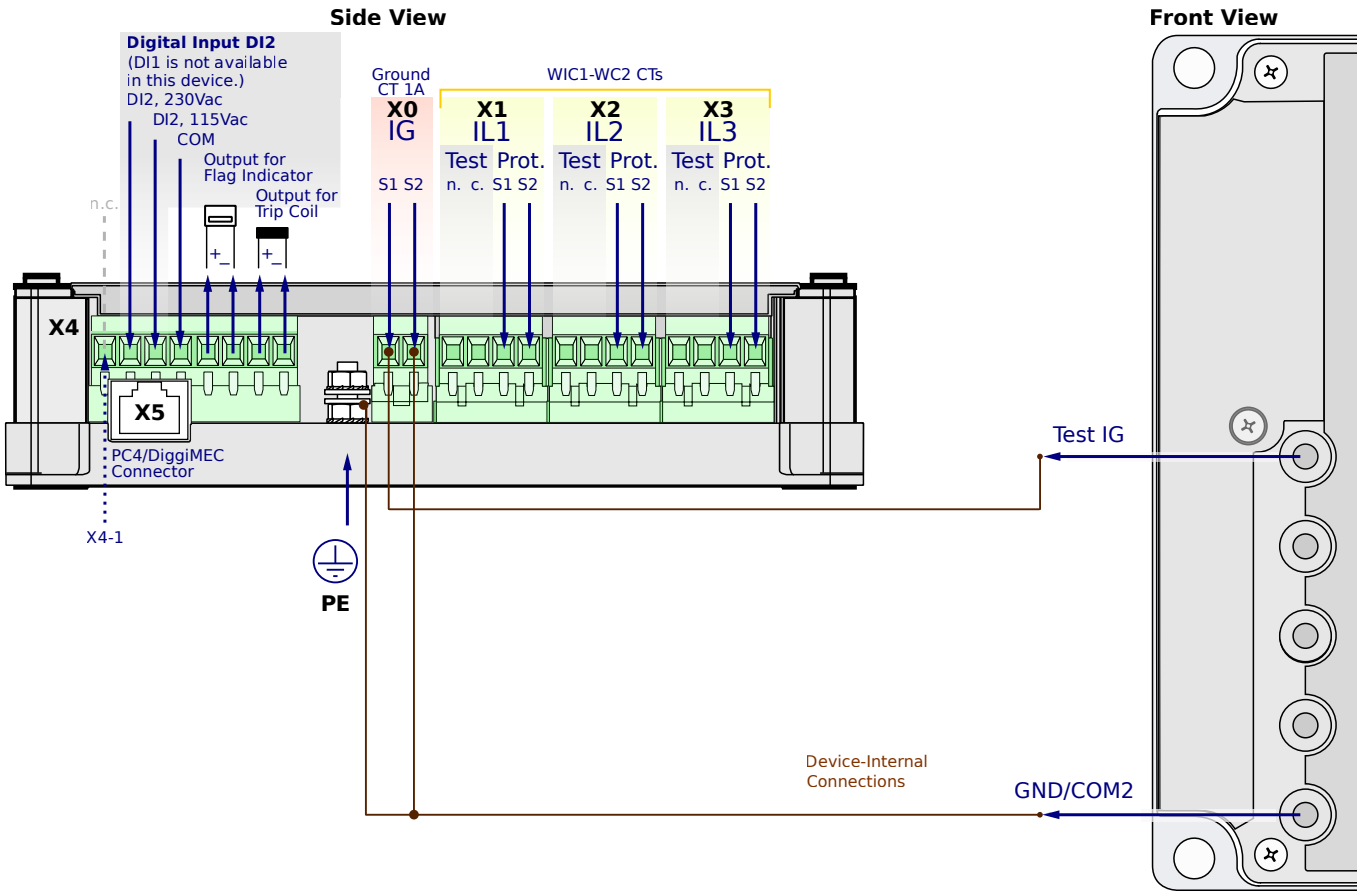


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1PA0

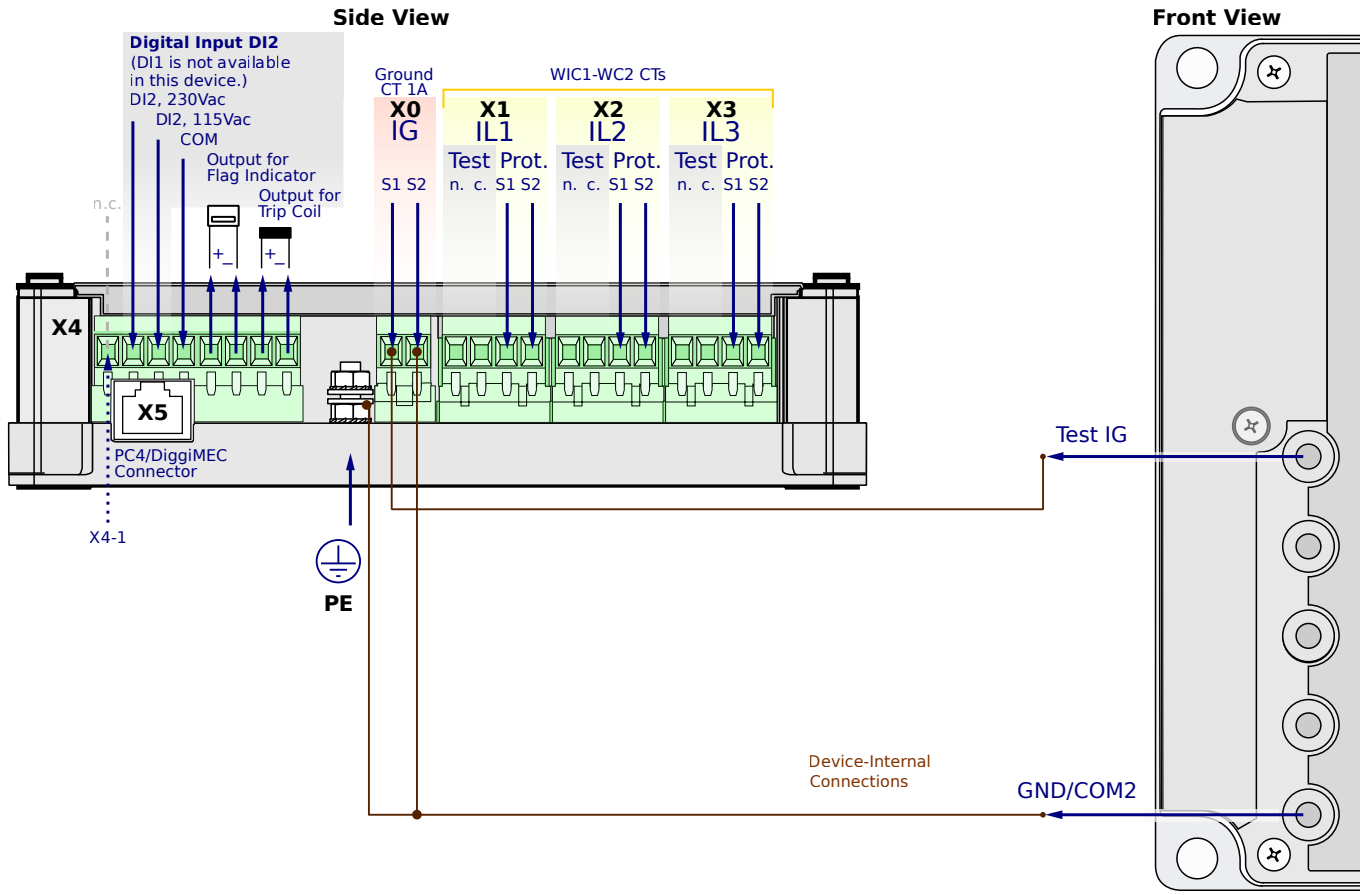


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC1PAH

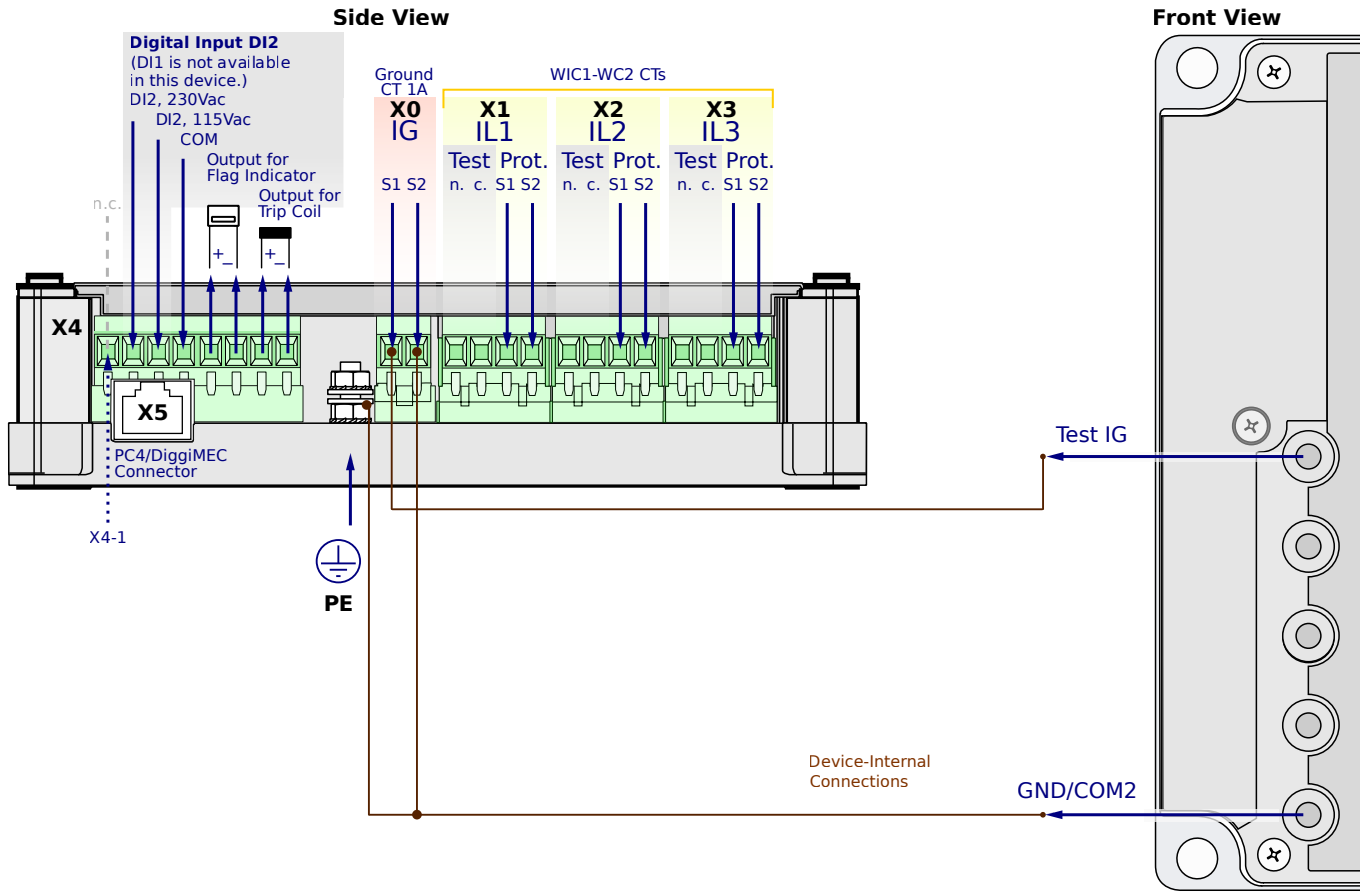


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2SA0

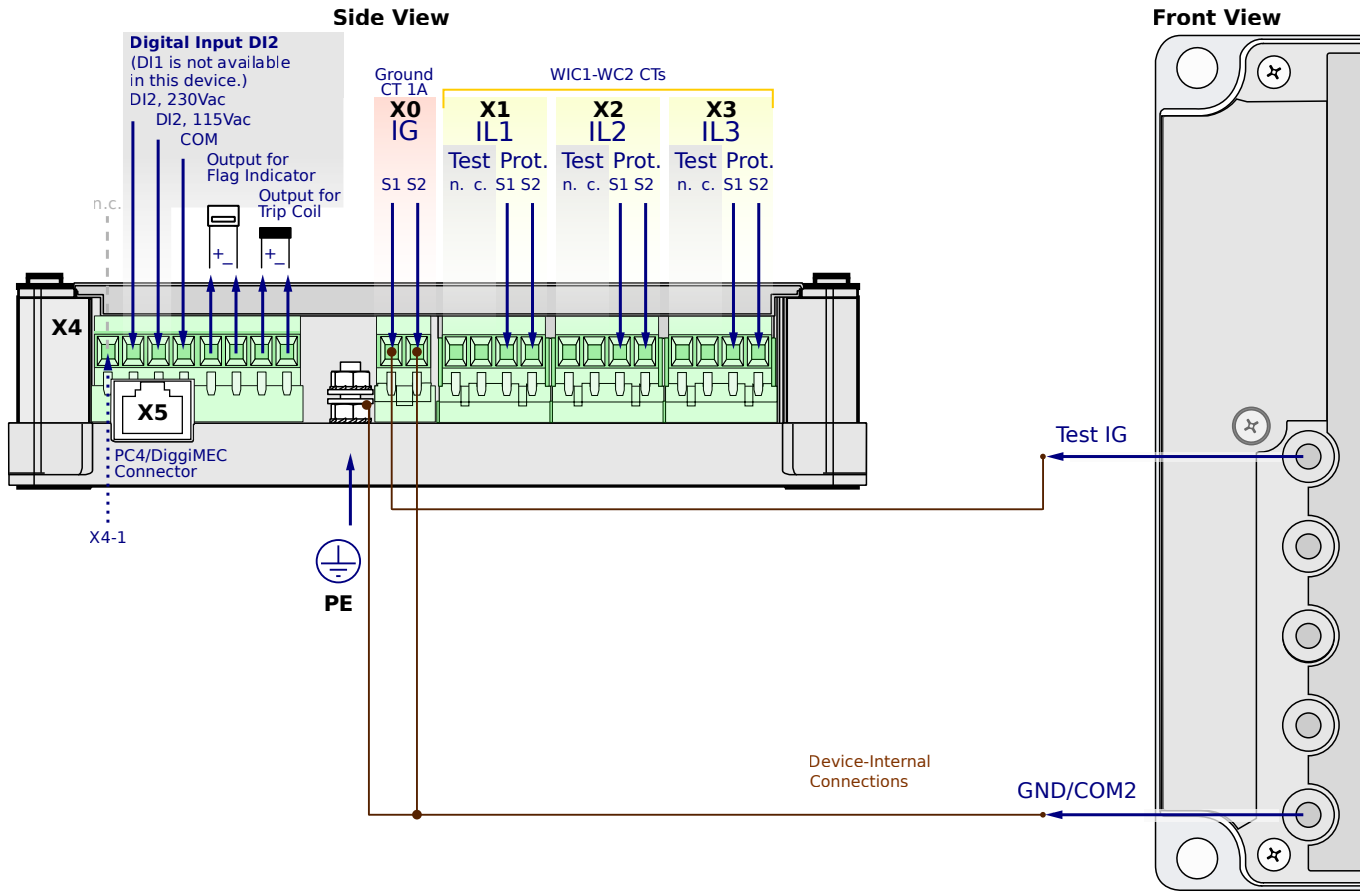


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2SAH

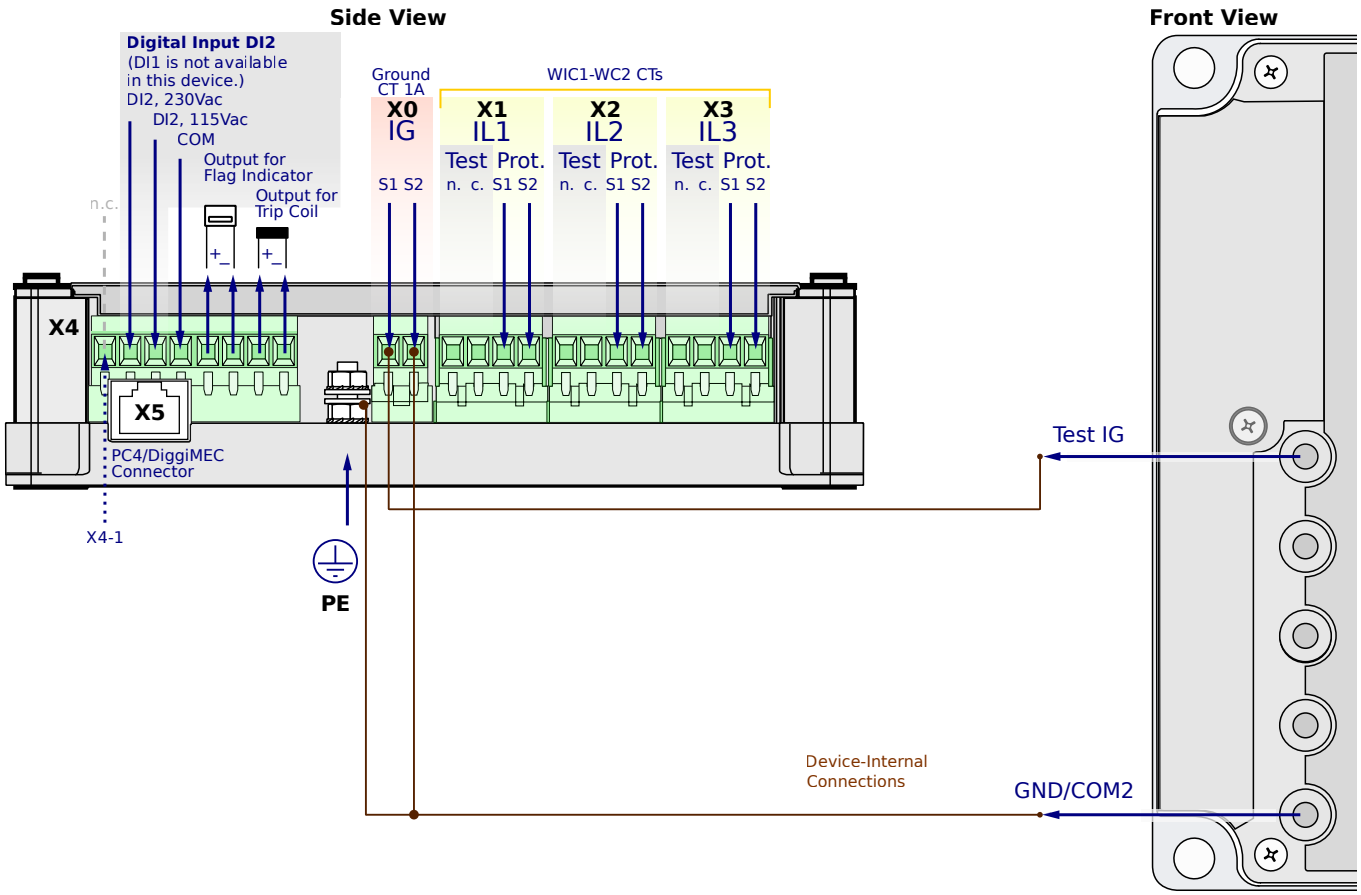


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2AA0

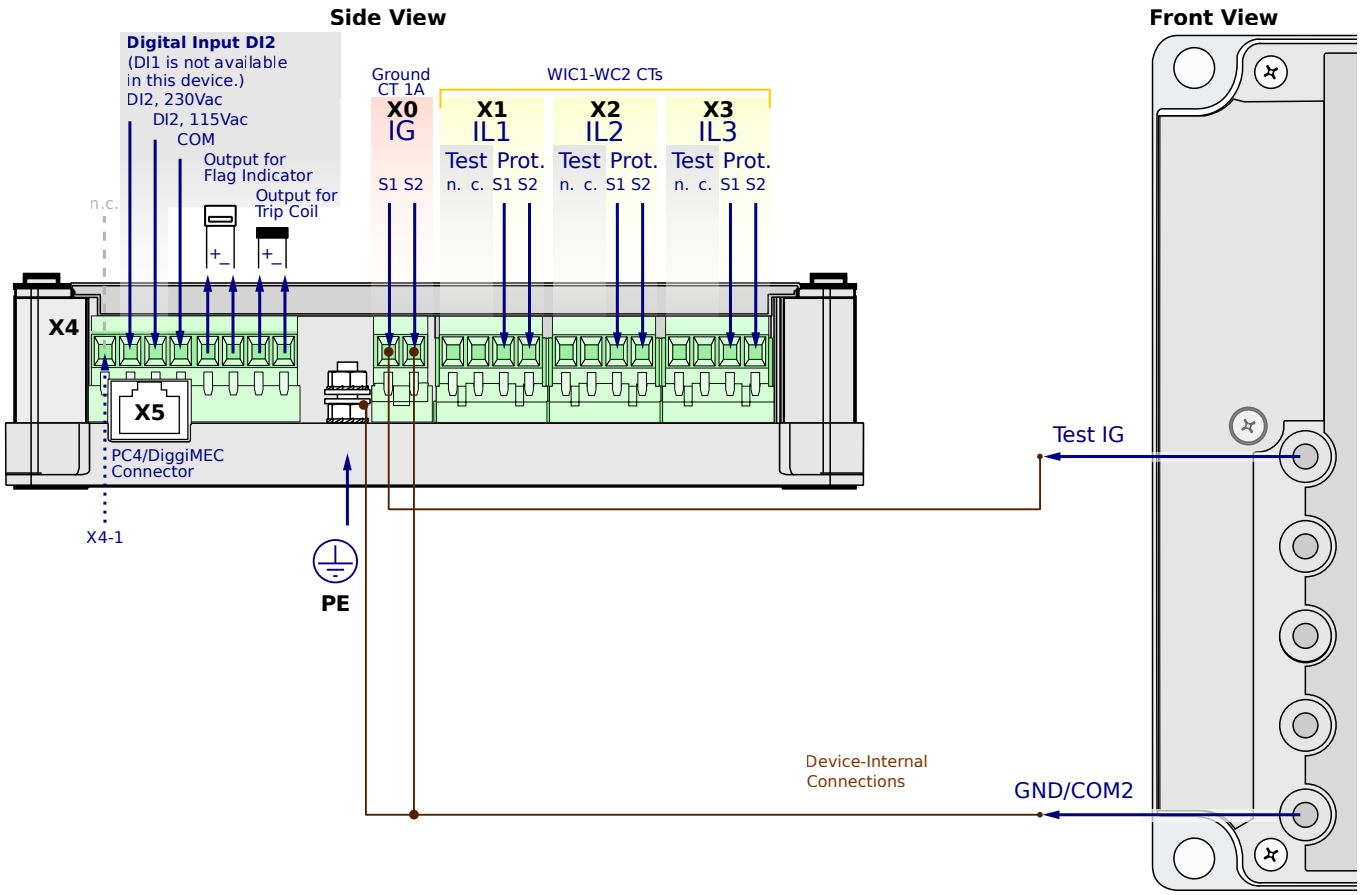


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2AAH

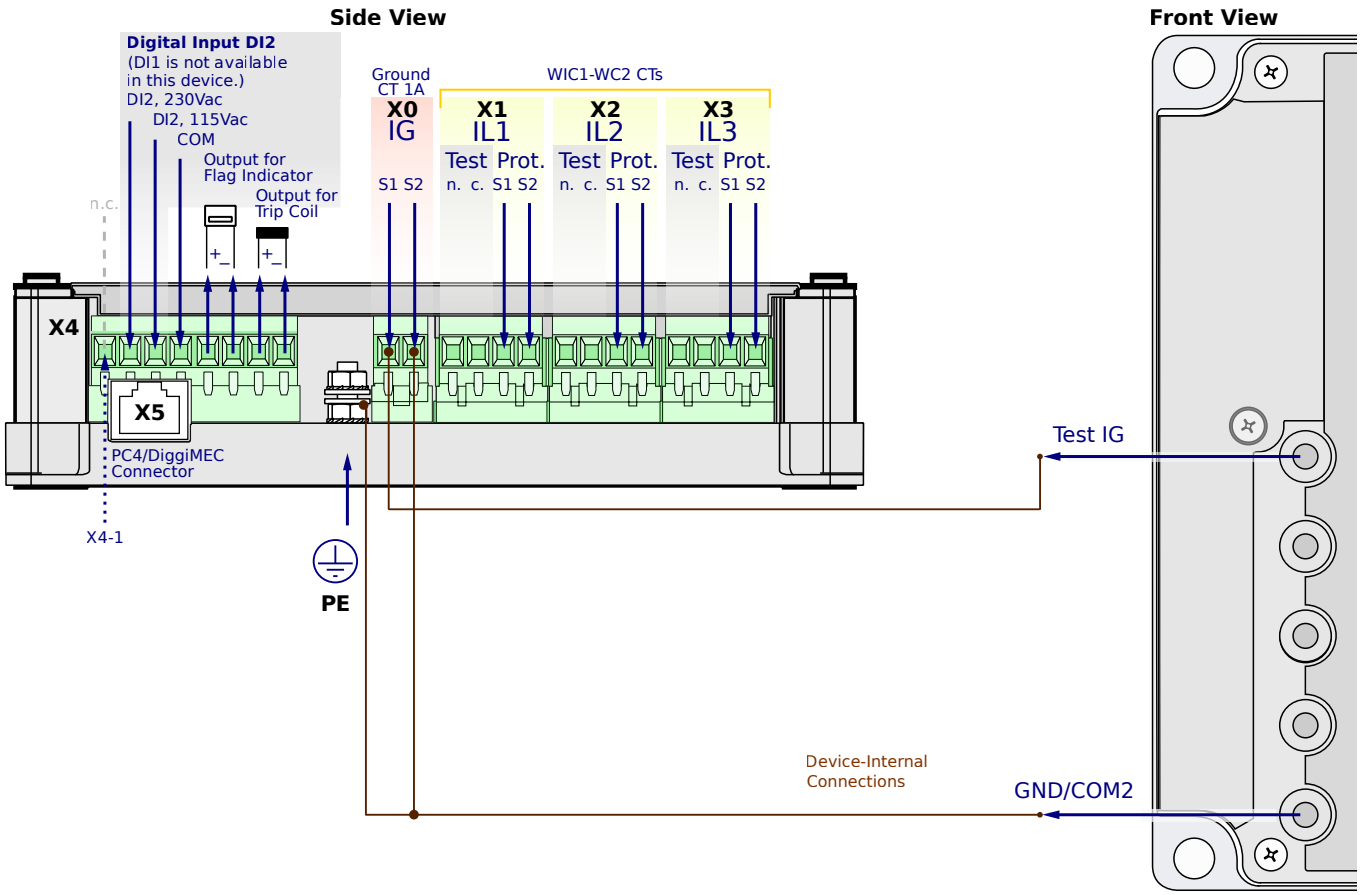


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2PA0

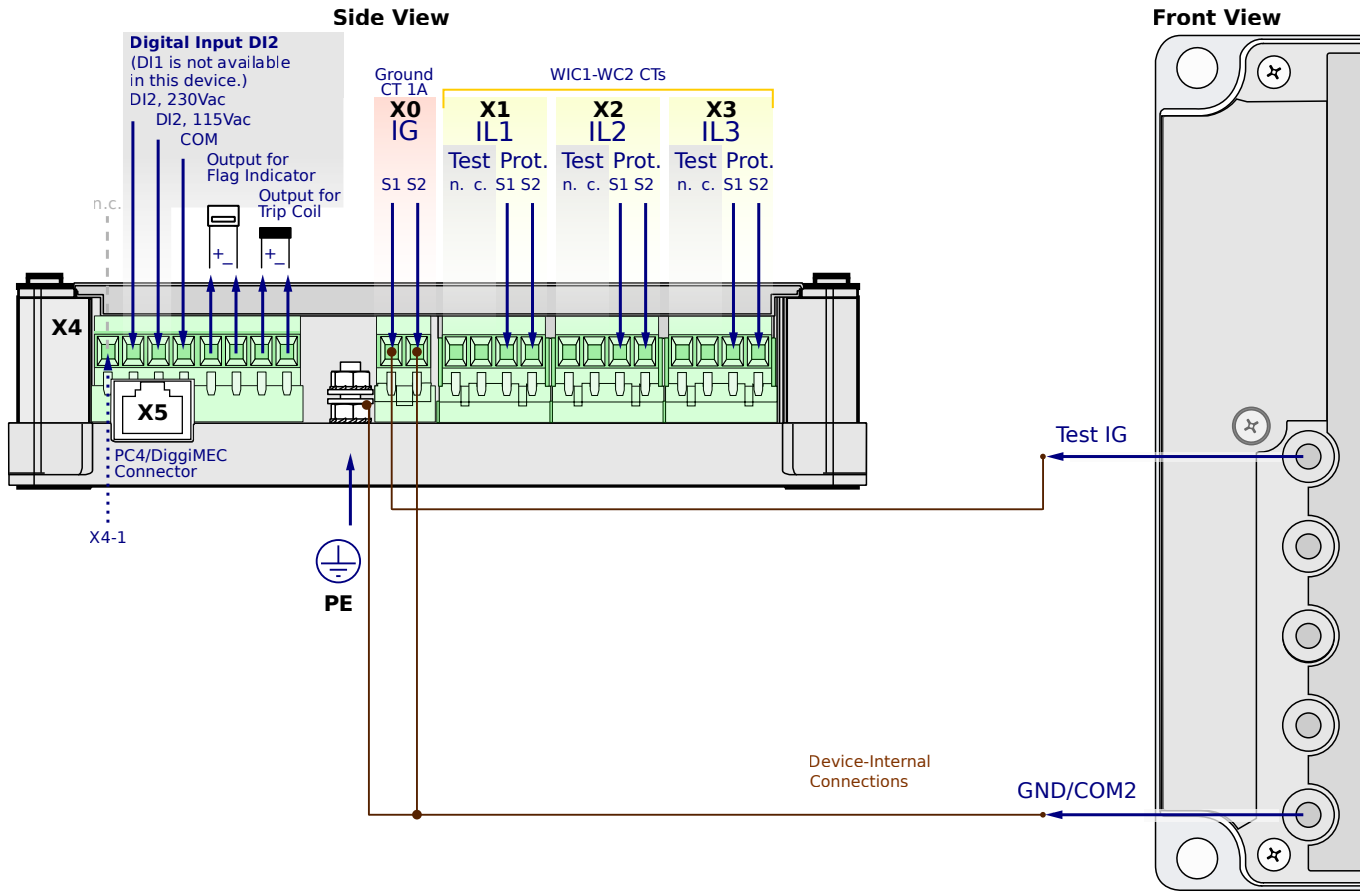


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0NC2PAH

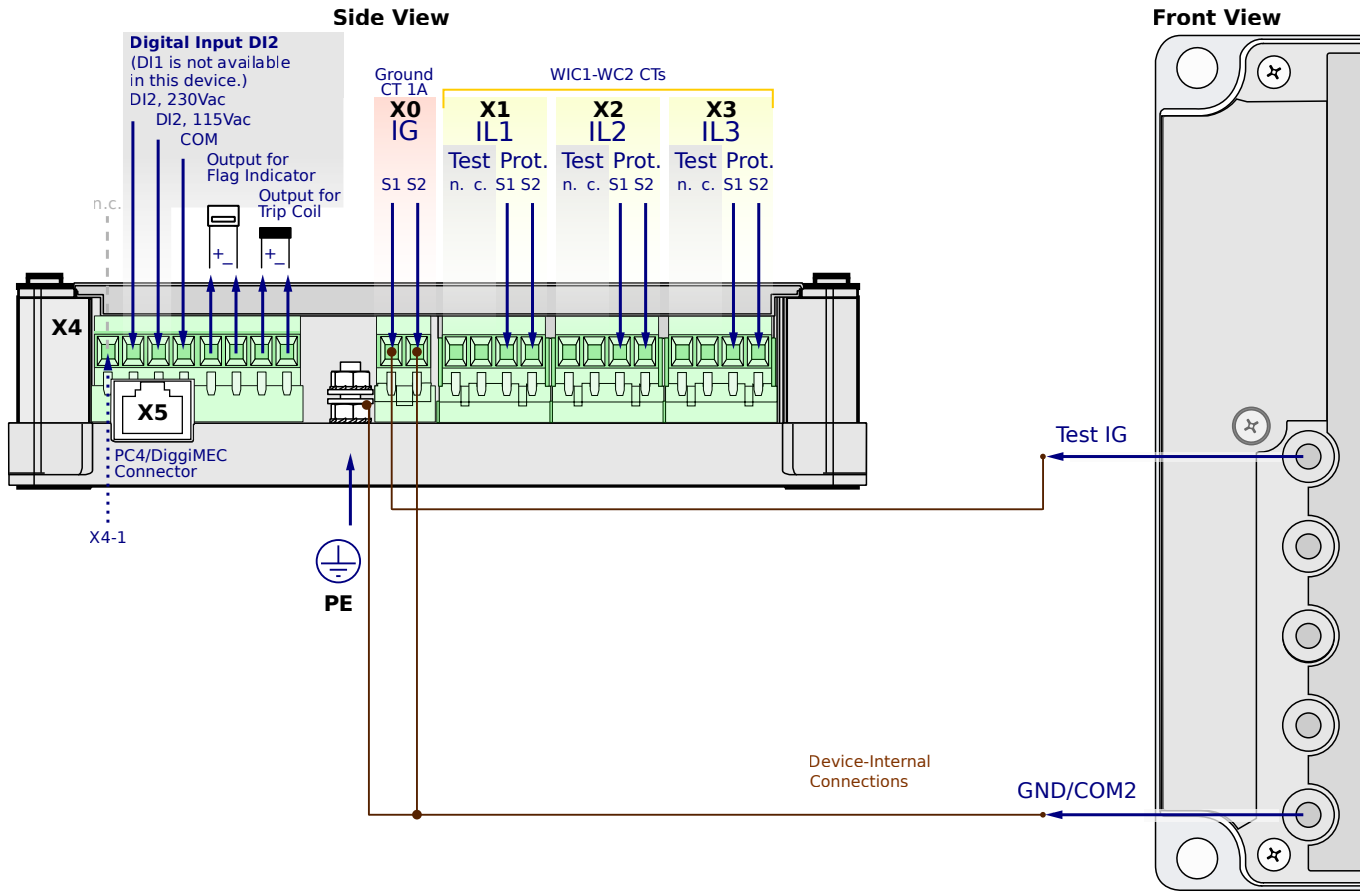


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1SA0

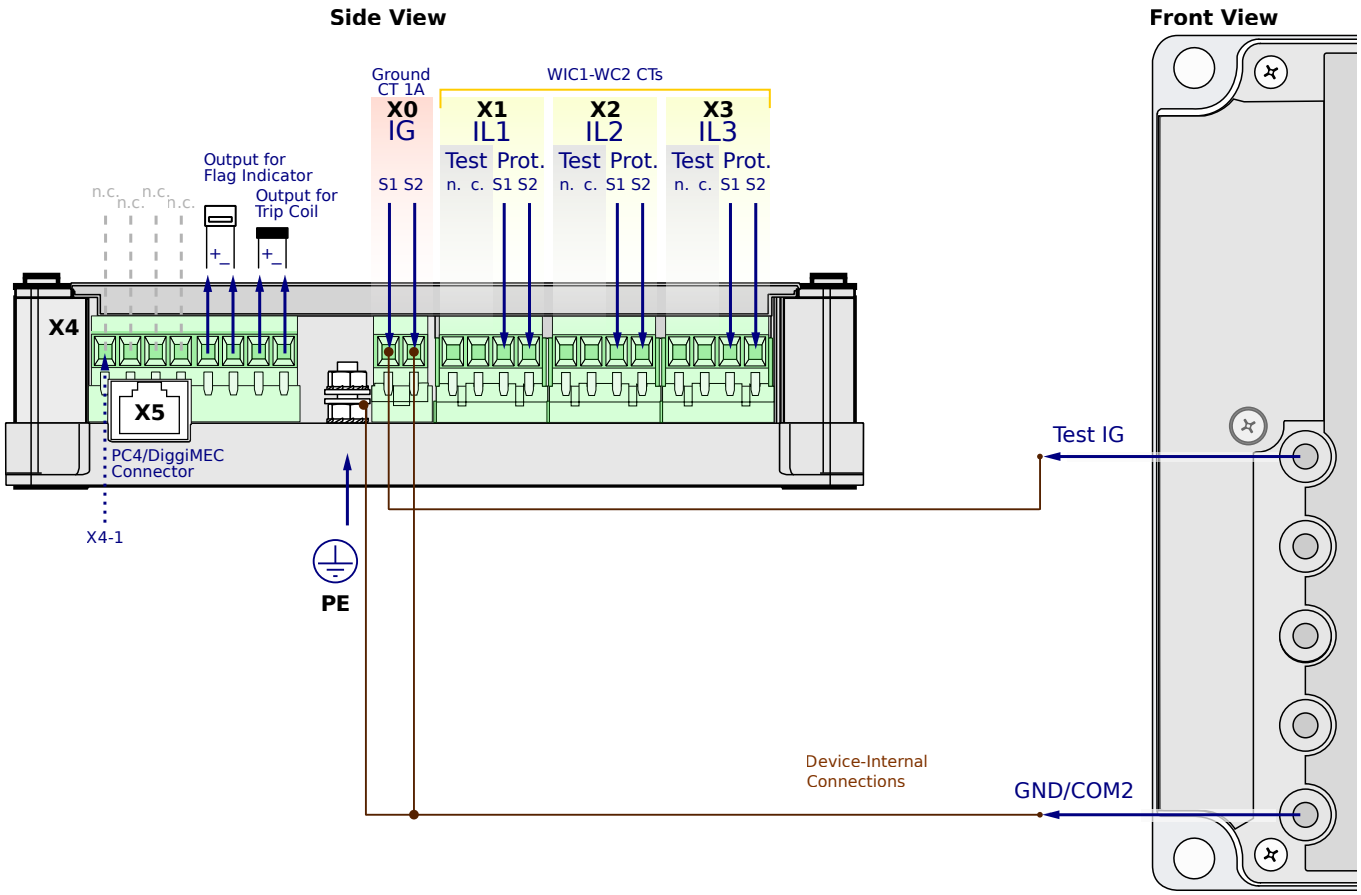


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1SAH

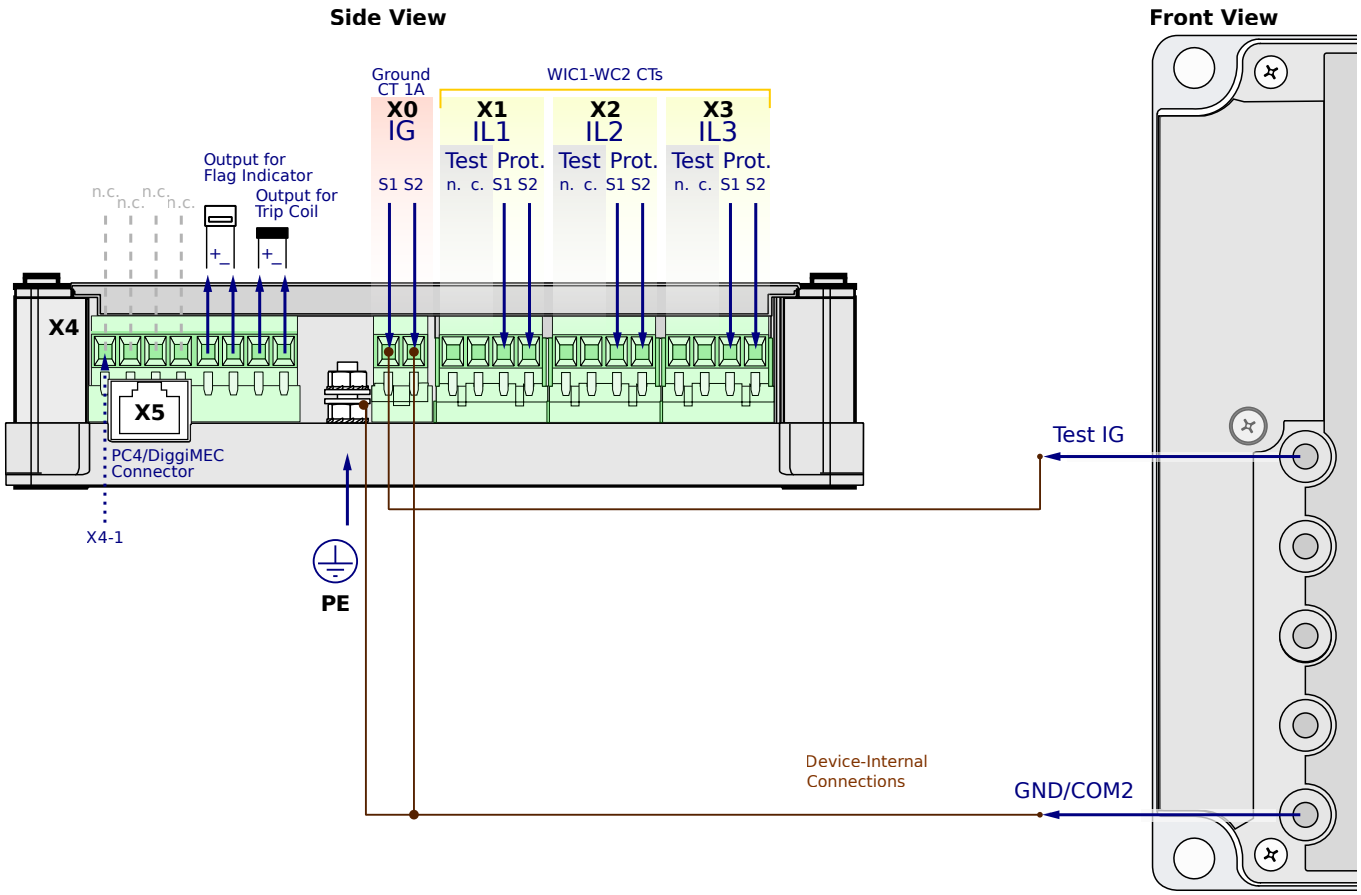


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1AA0

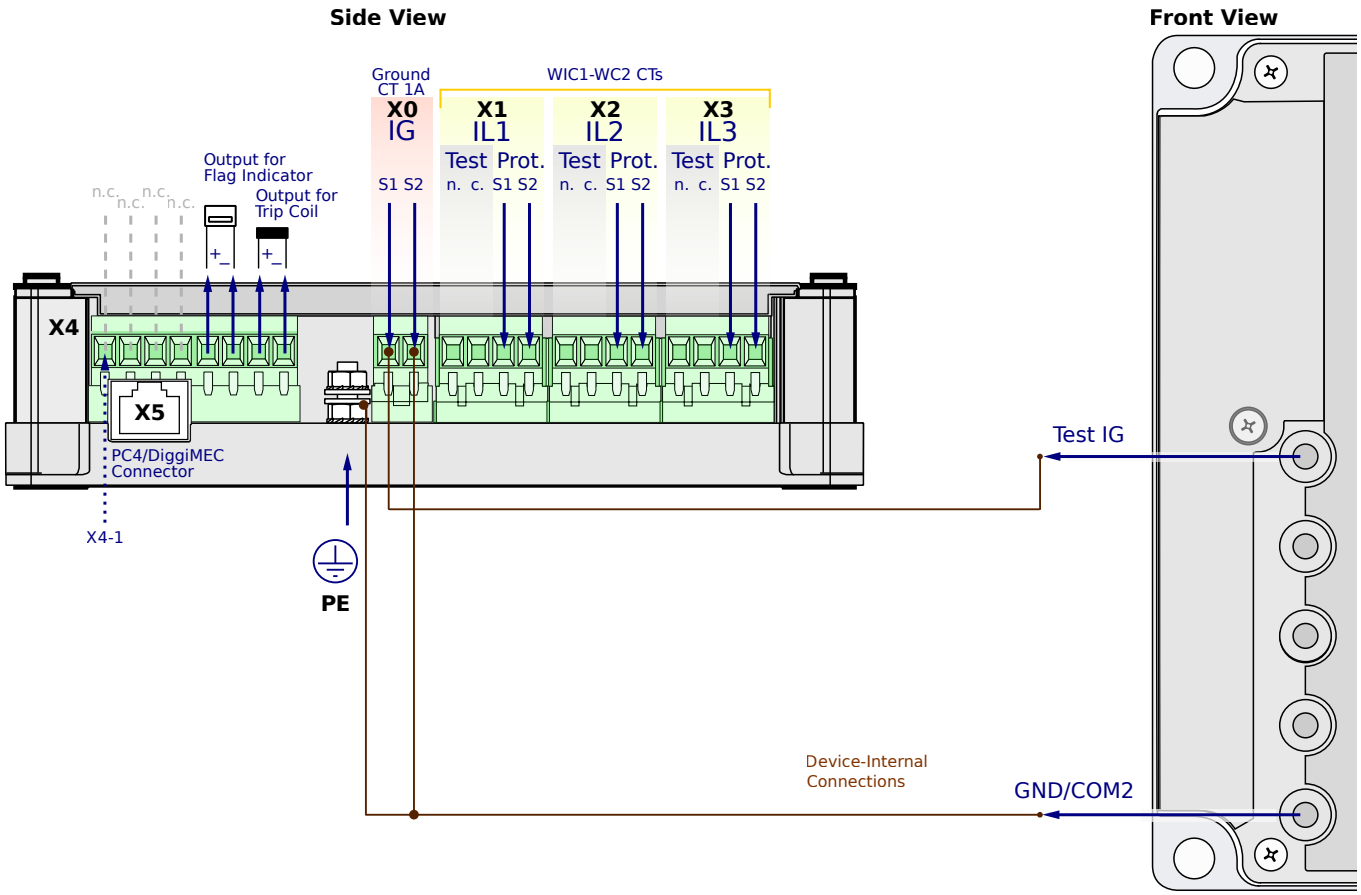


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1AAH

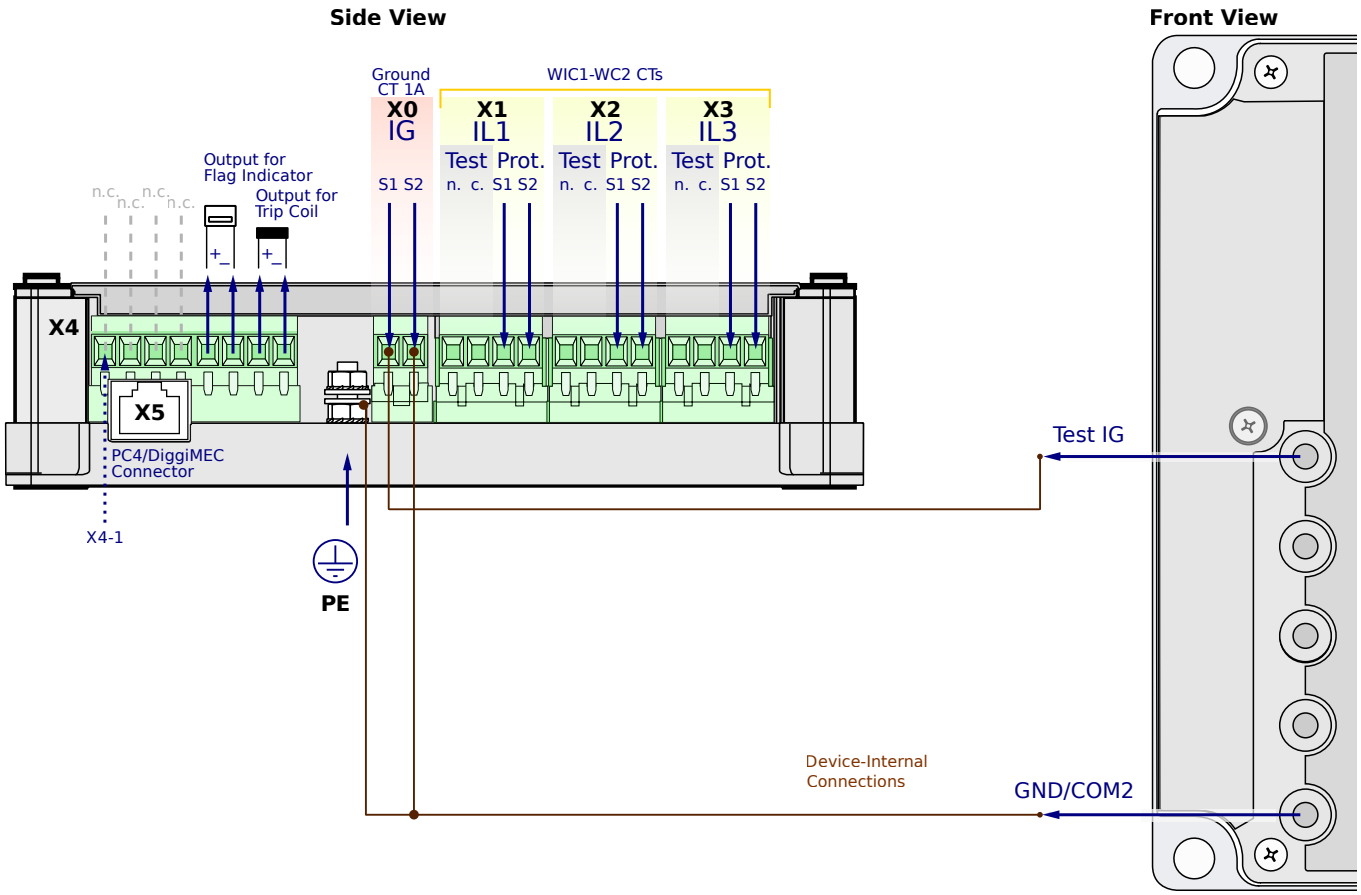


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1PA0

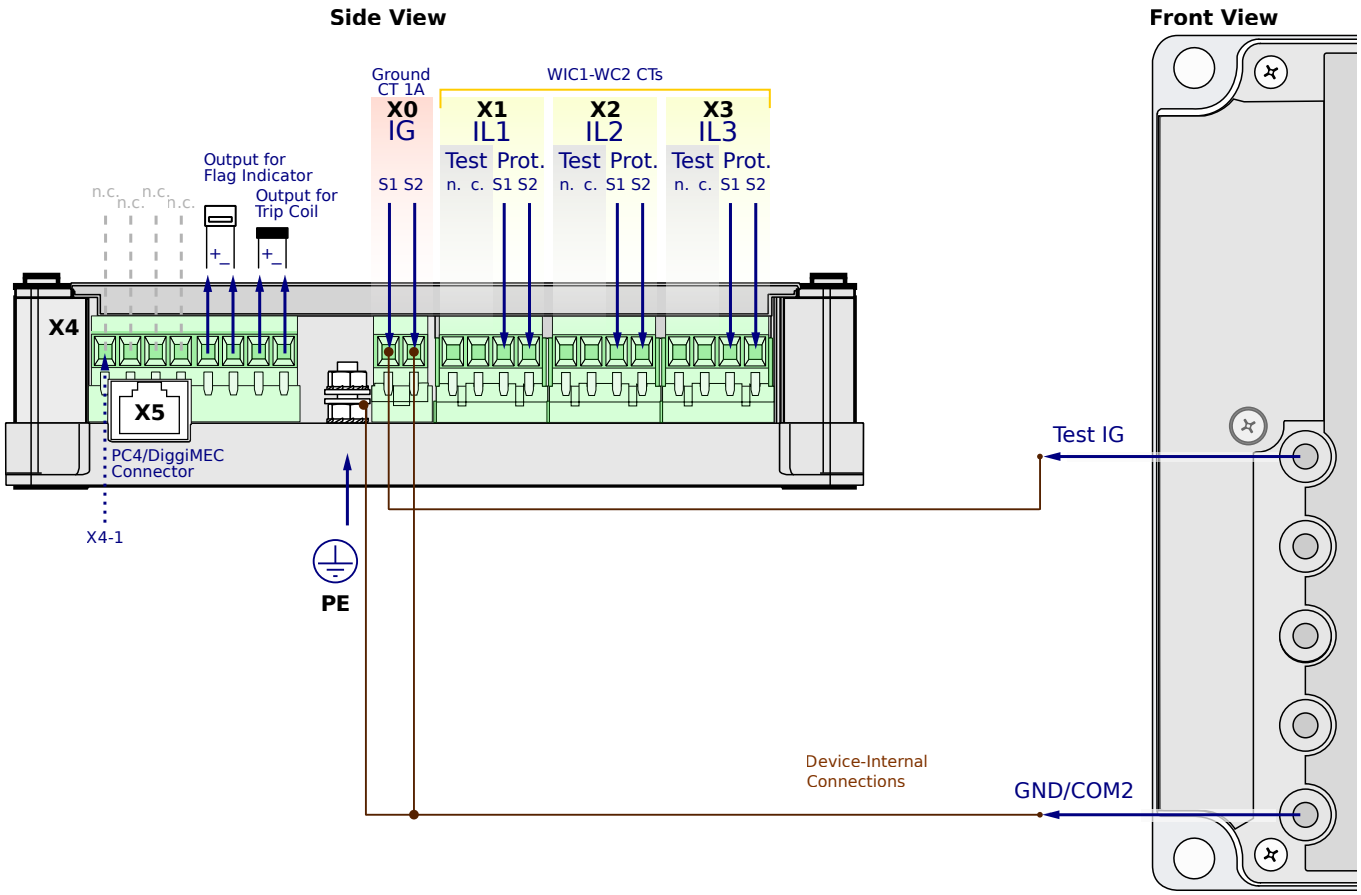


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN1PAH

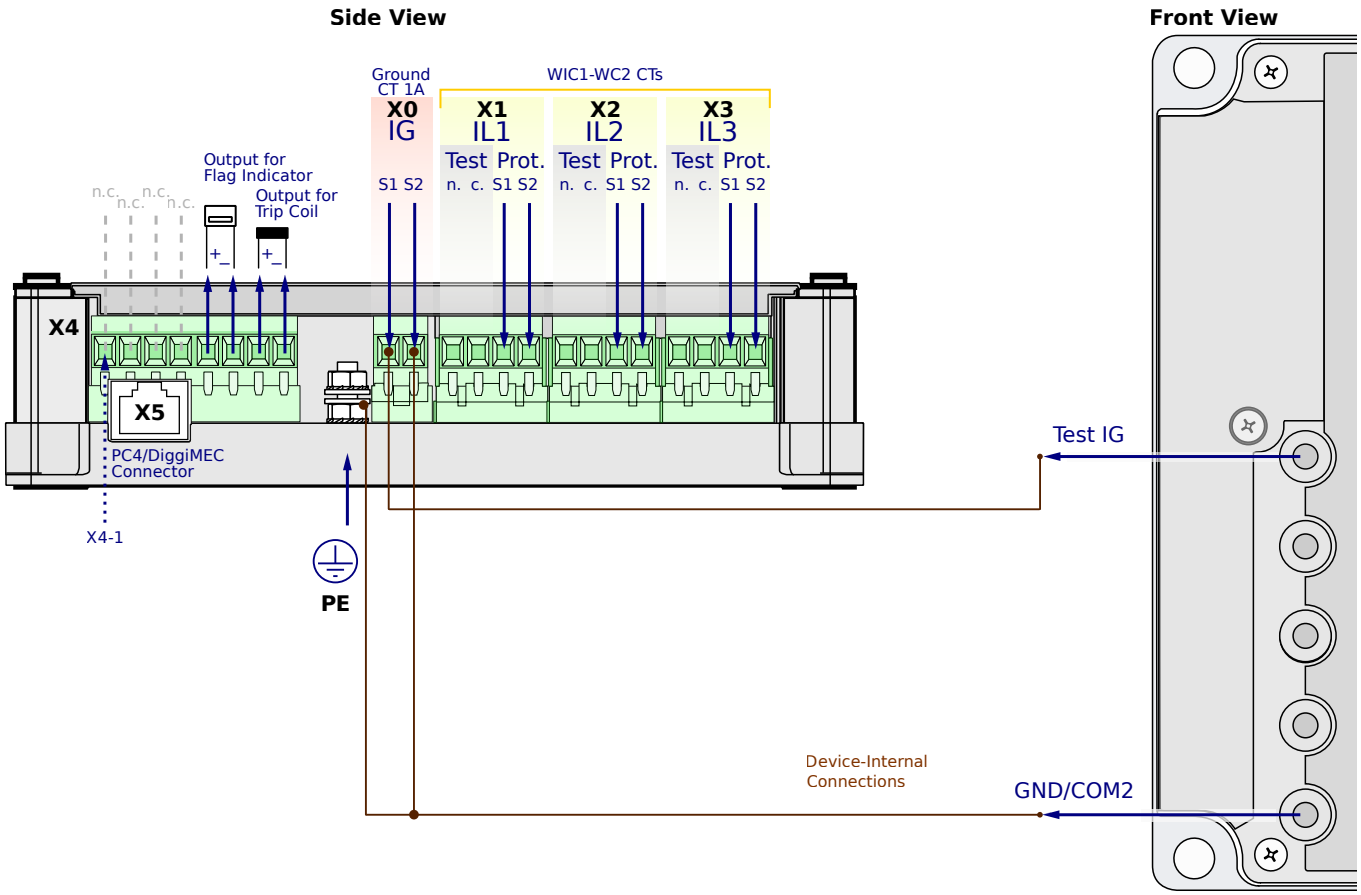


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2SA0

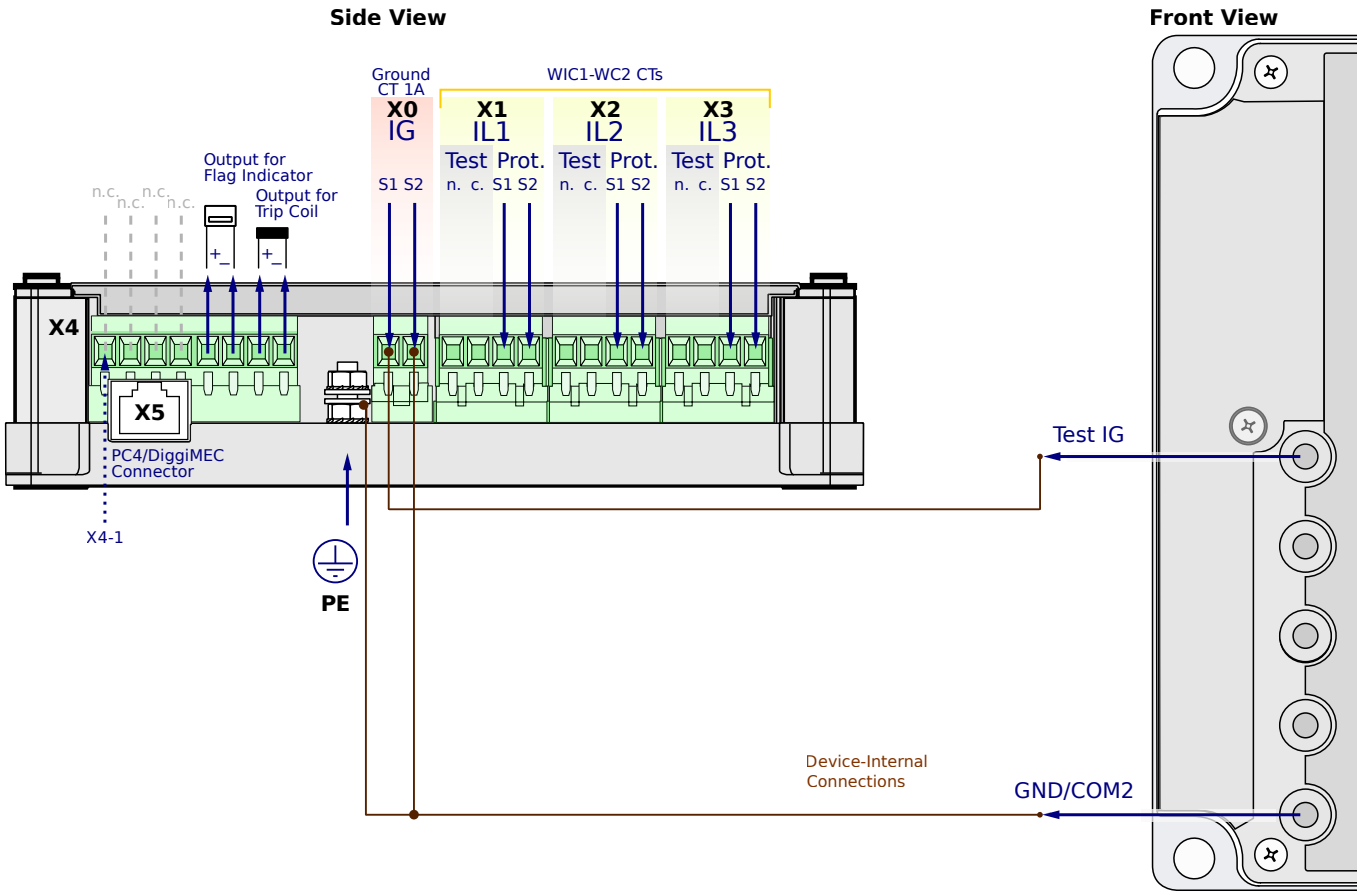


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2SAH

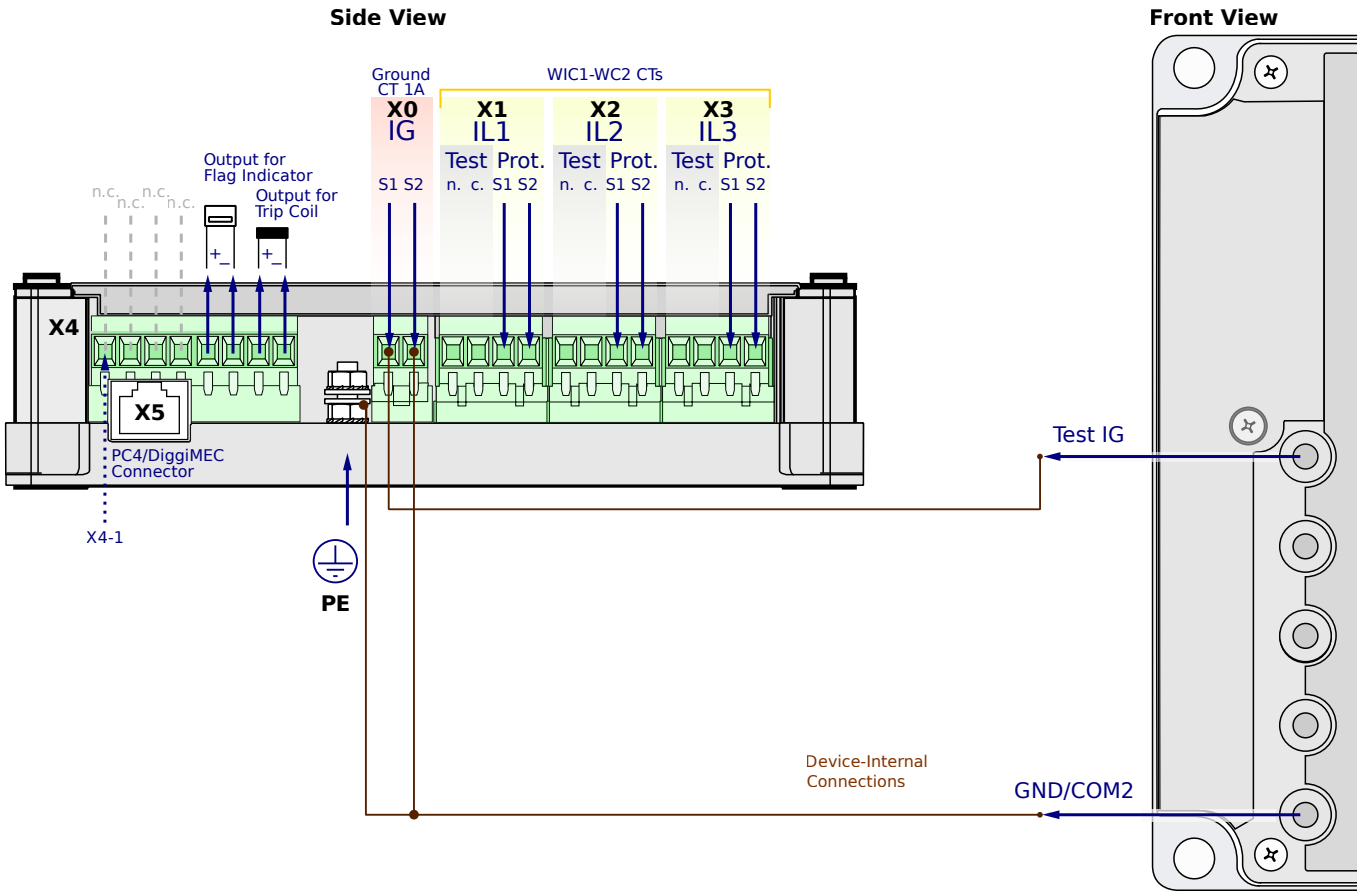


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2AA0

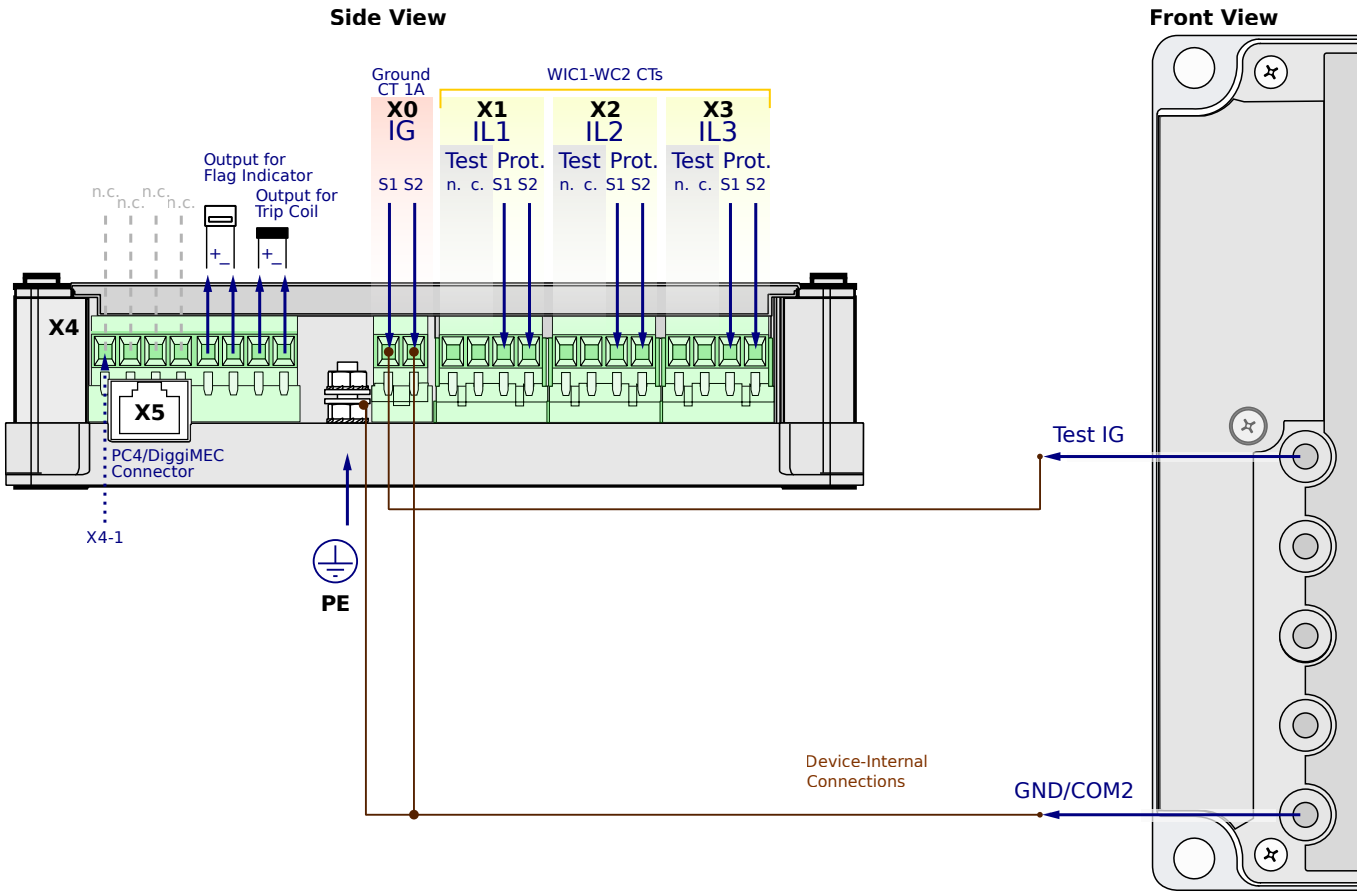


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2AAH

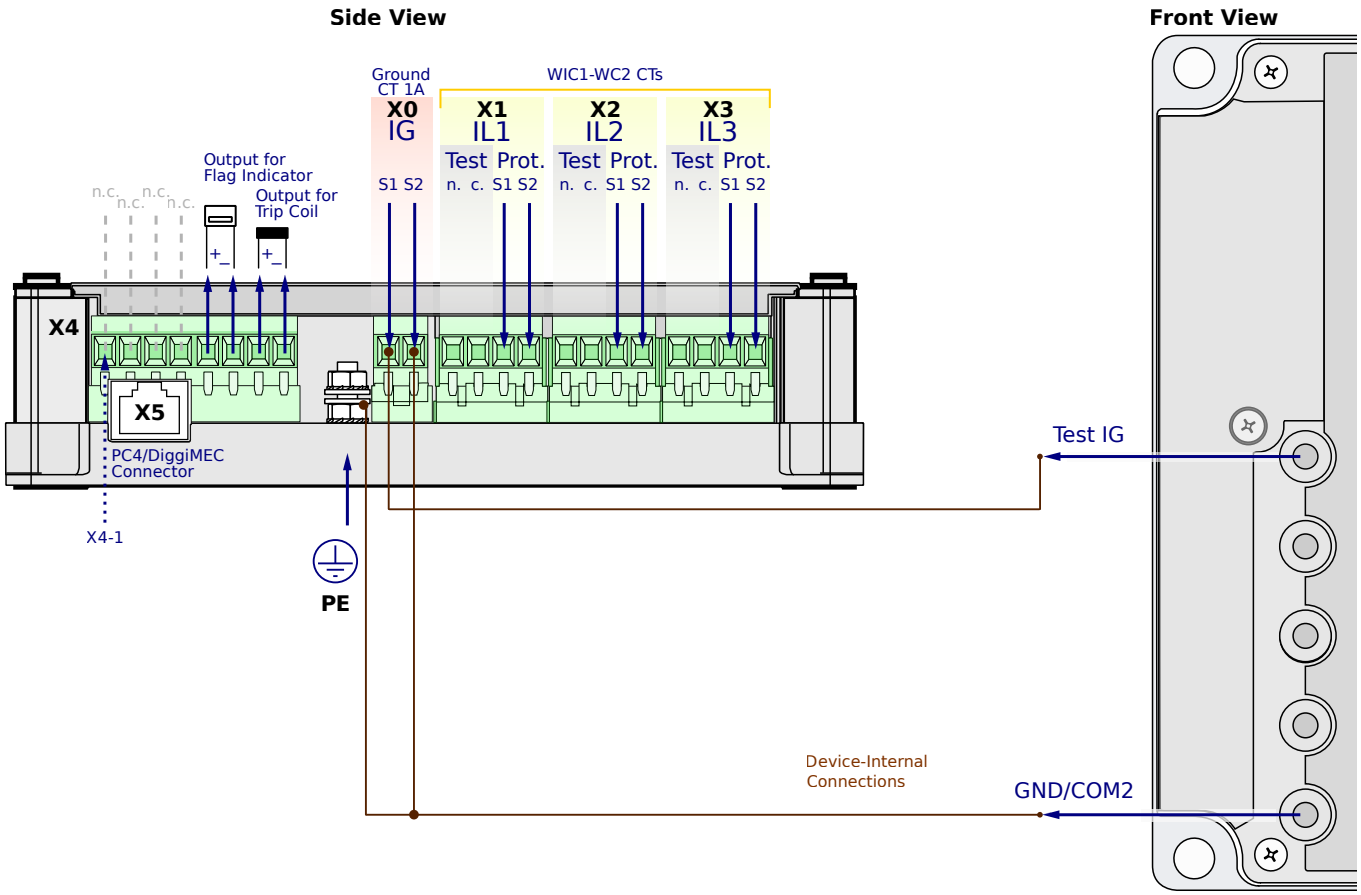


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2PA0

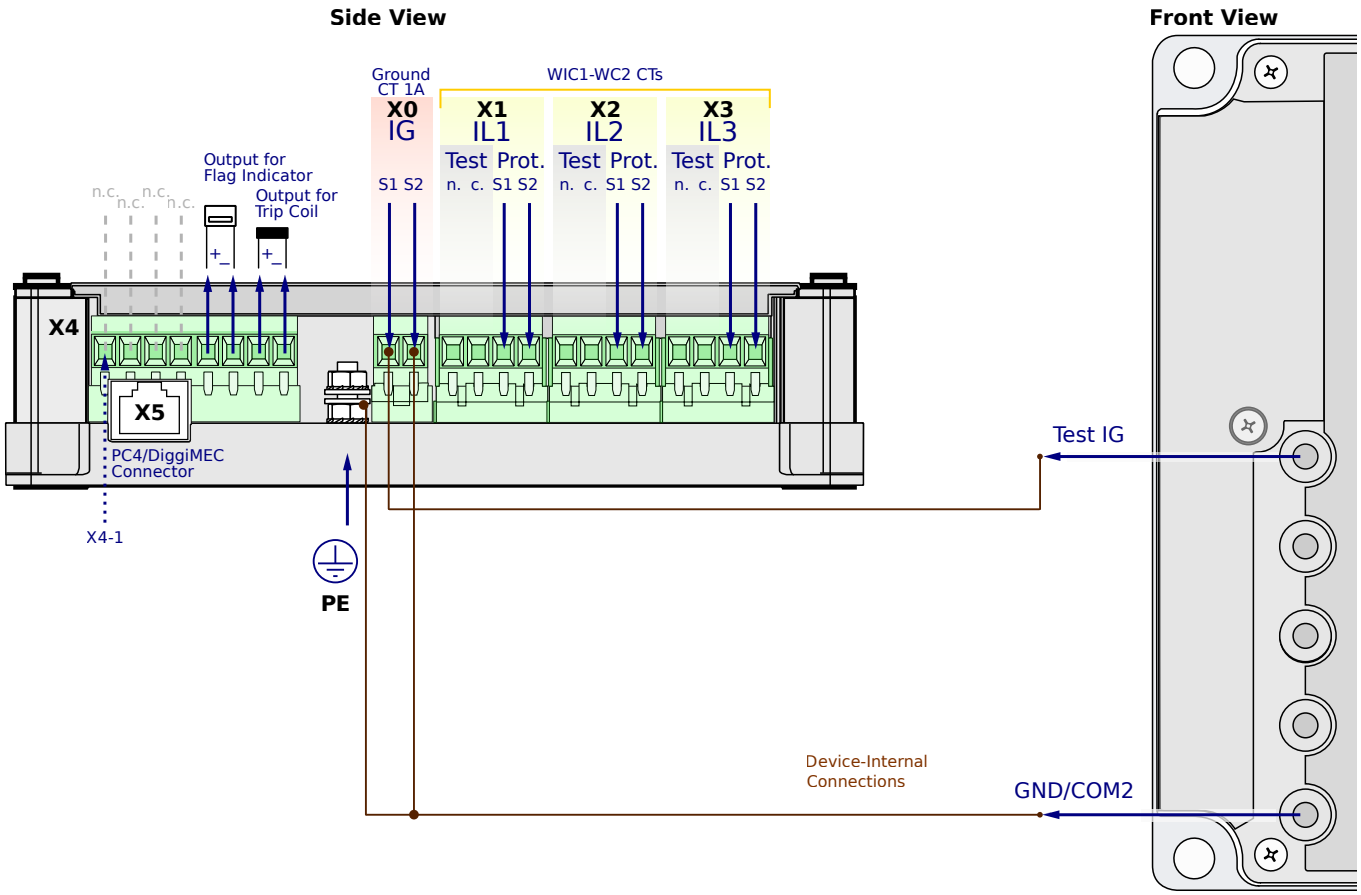


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FN2PAH

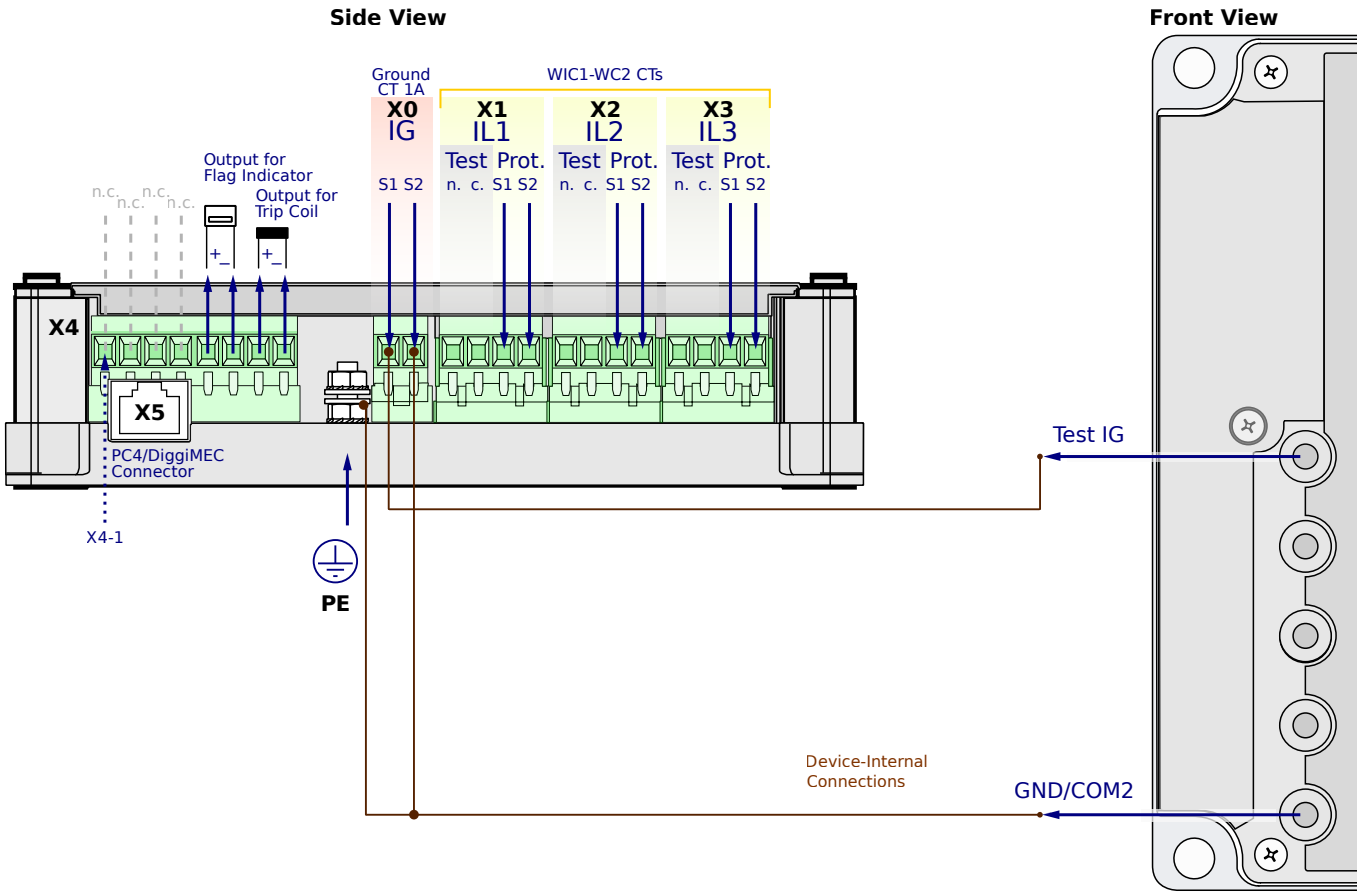


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1SA0

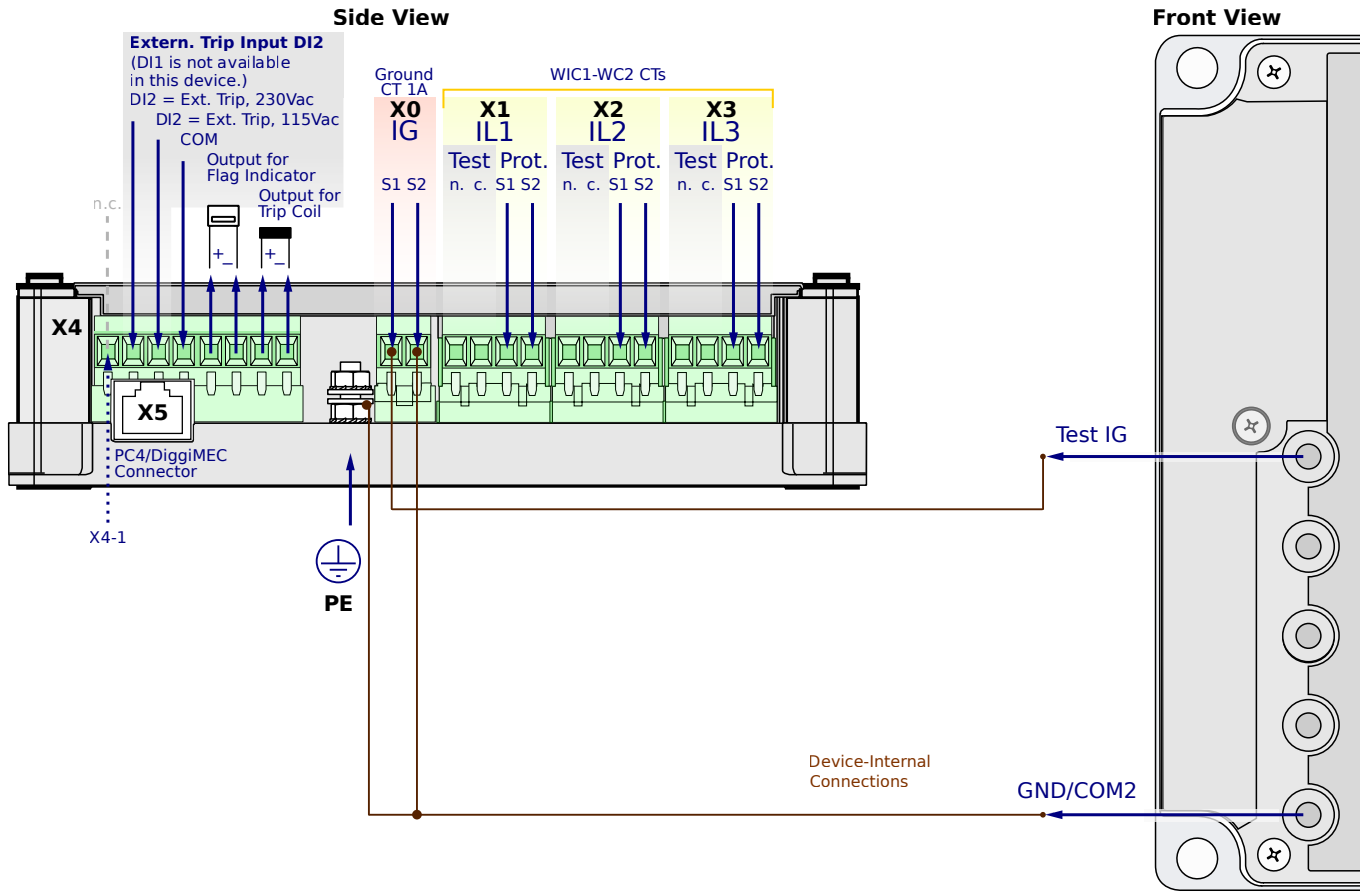


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1SAH

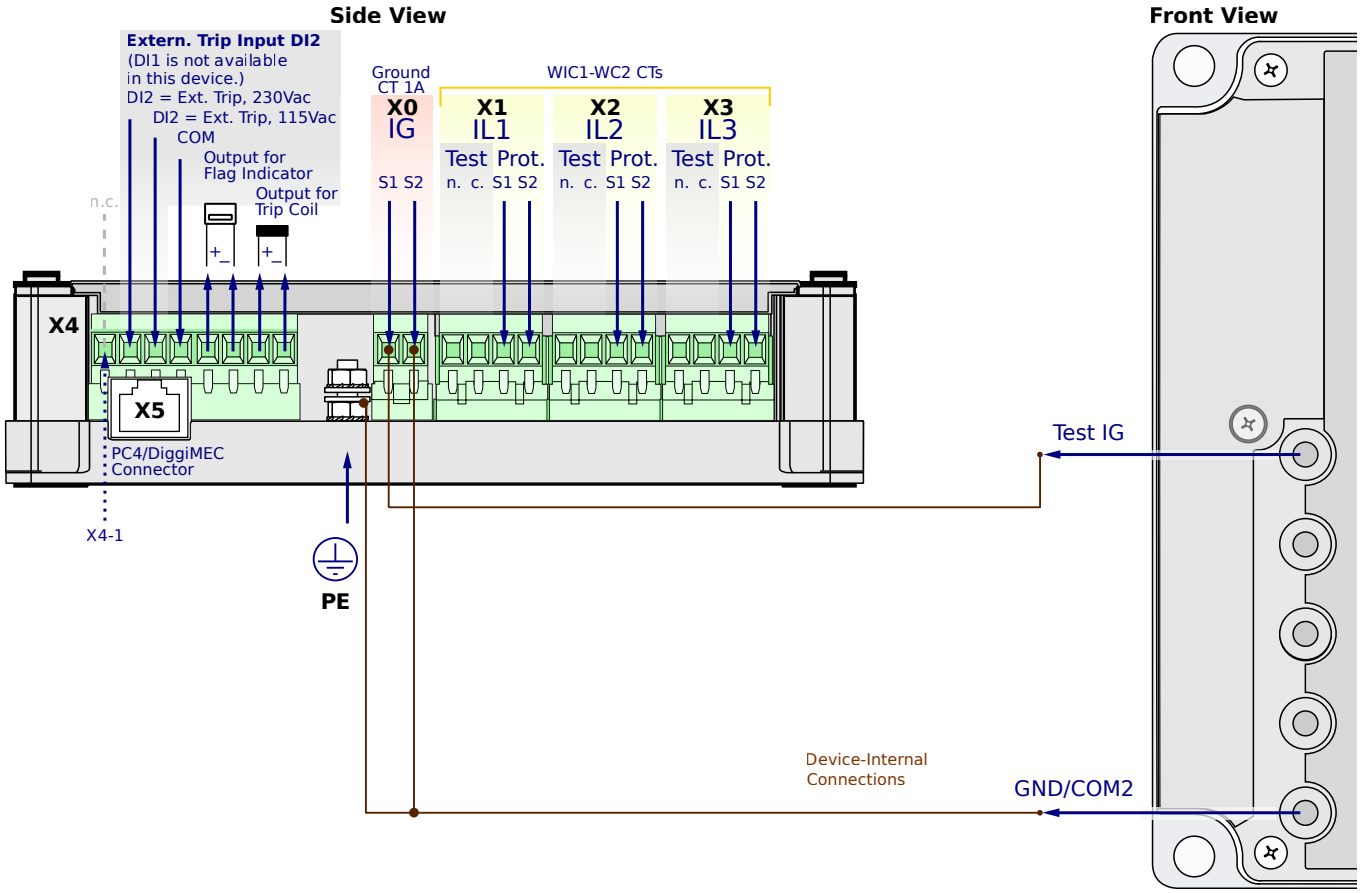


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1AA0

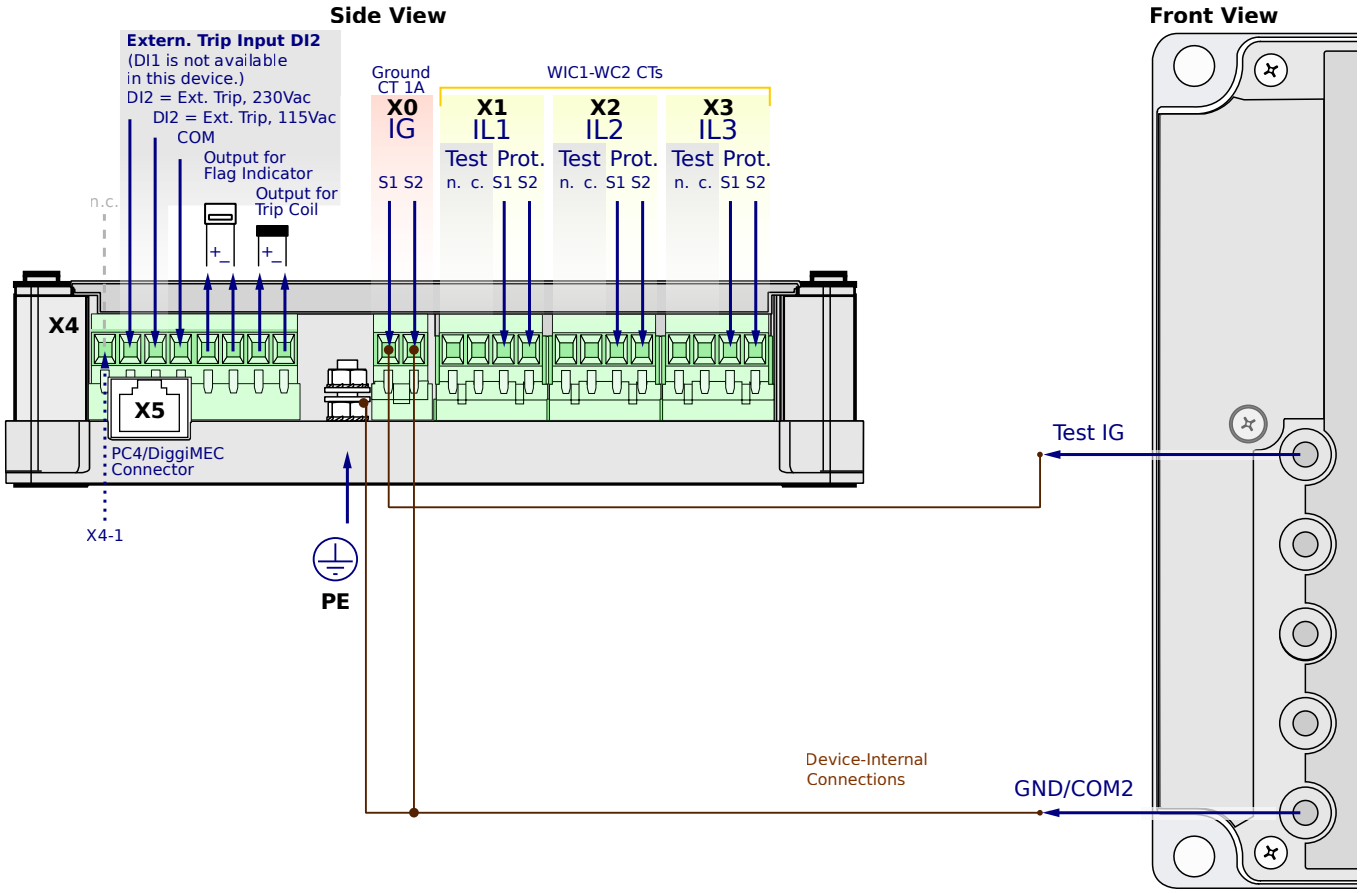


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1AAH

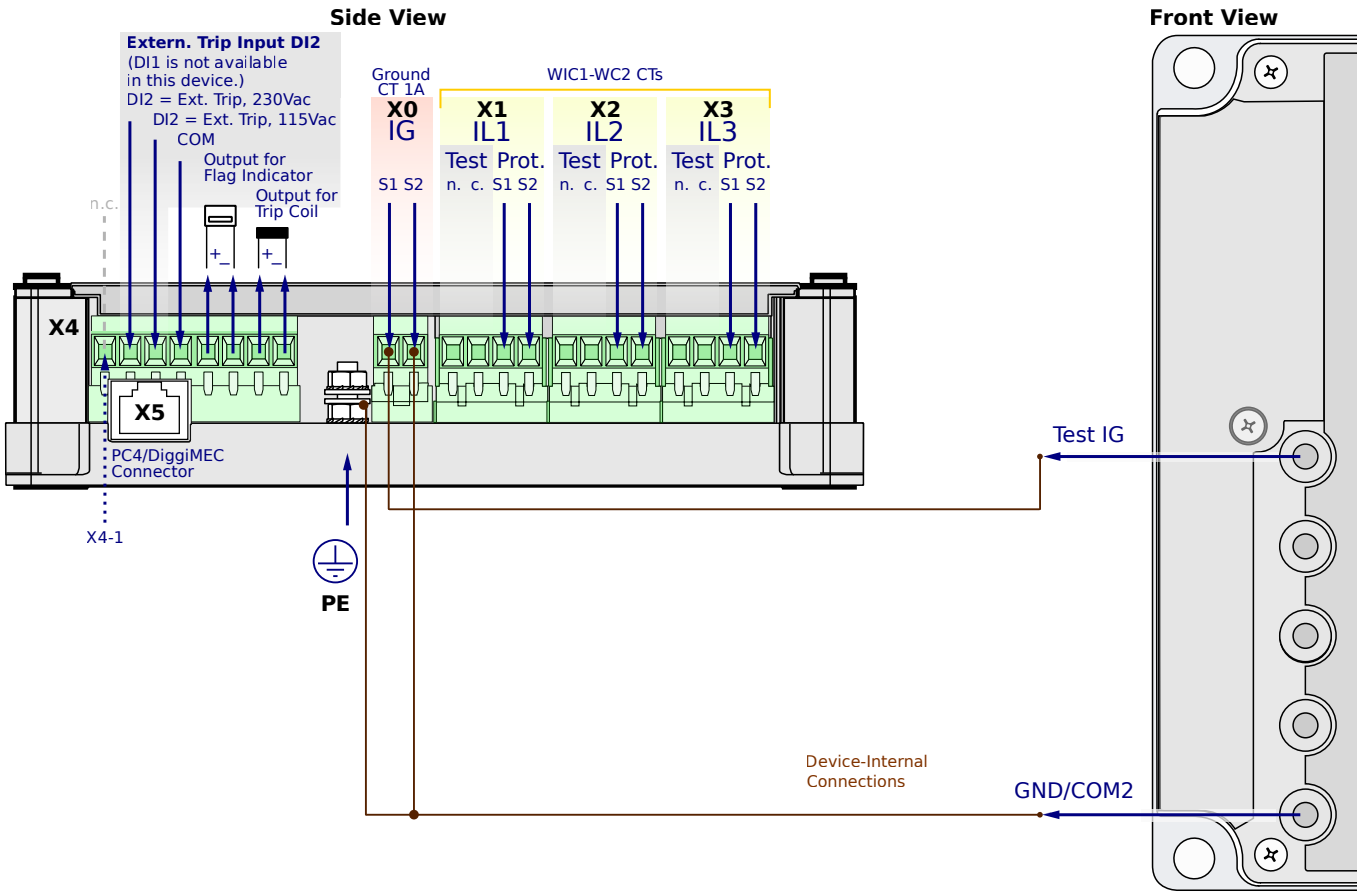


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1PA0

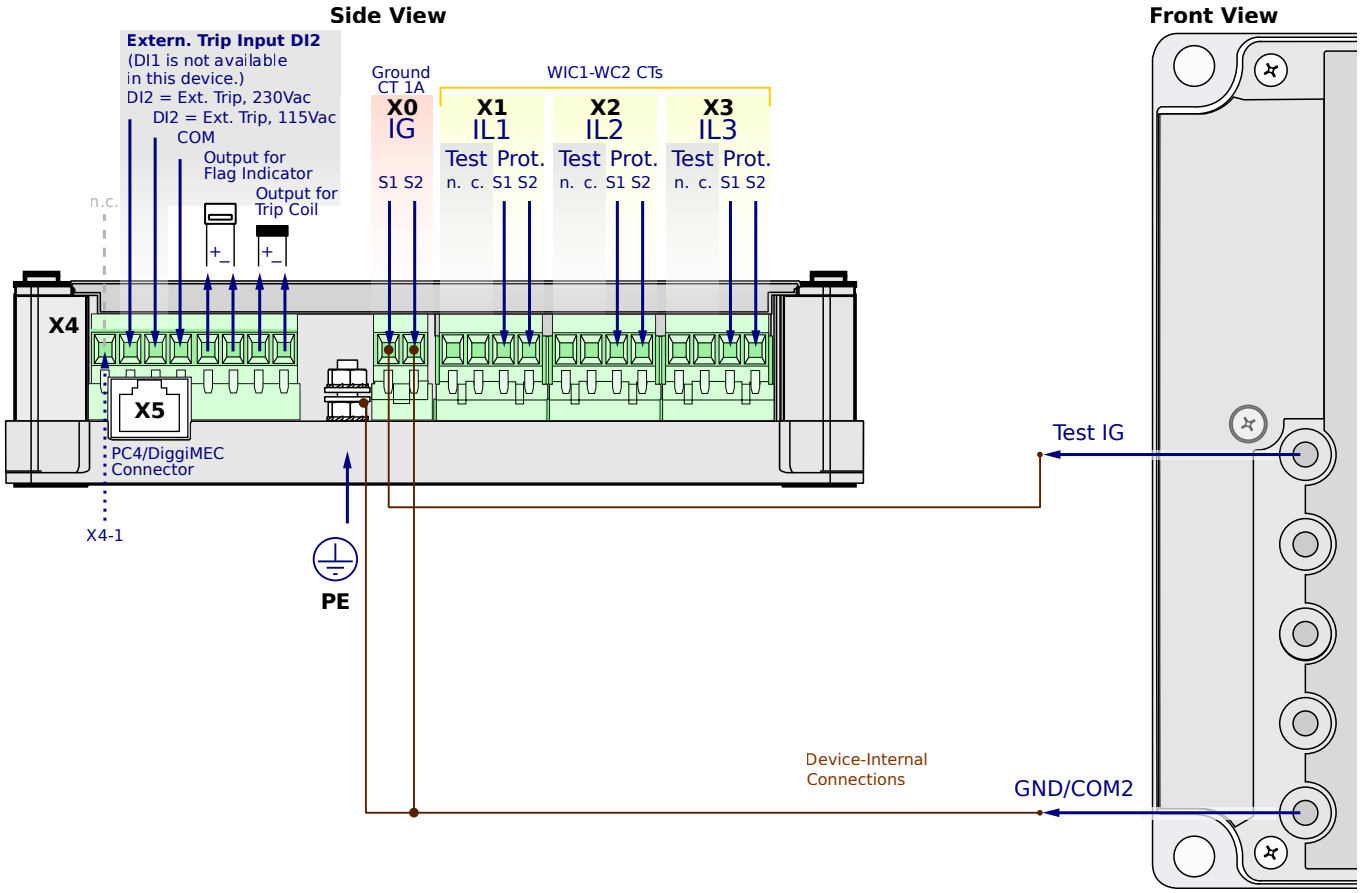


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF1PAH

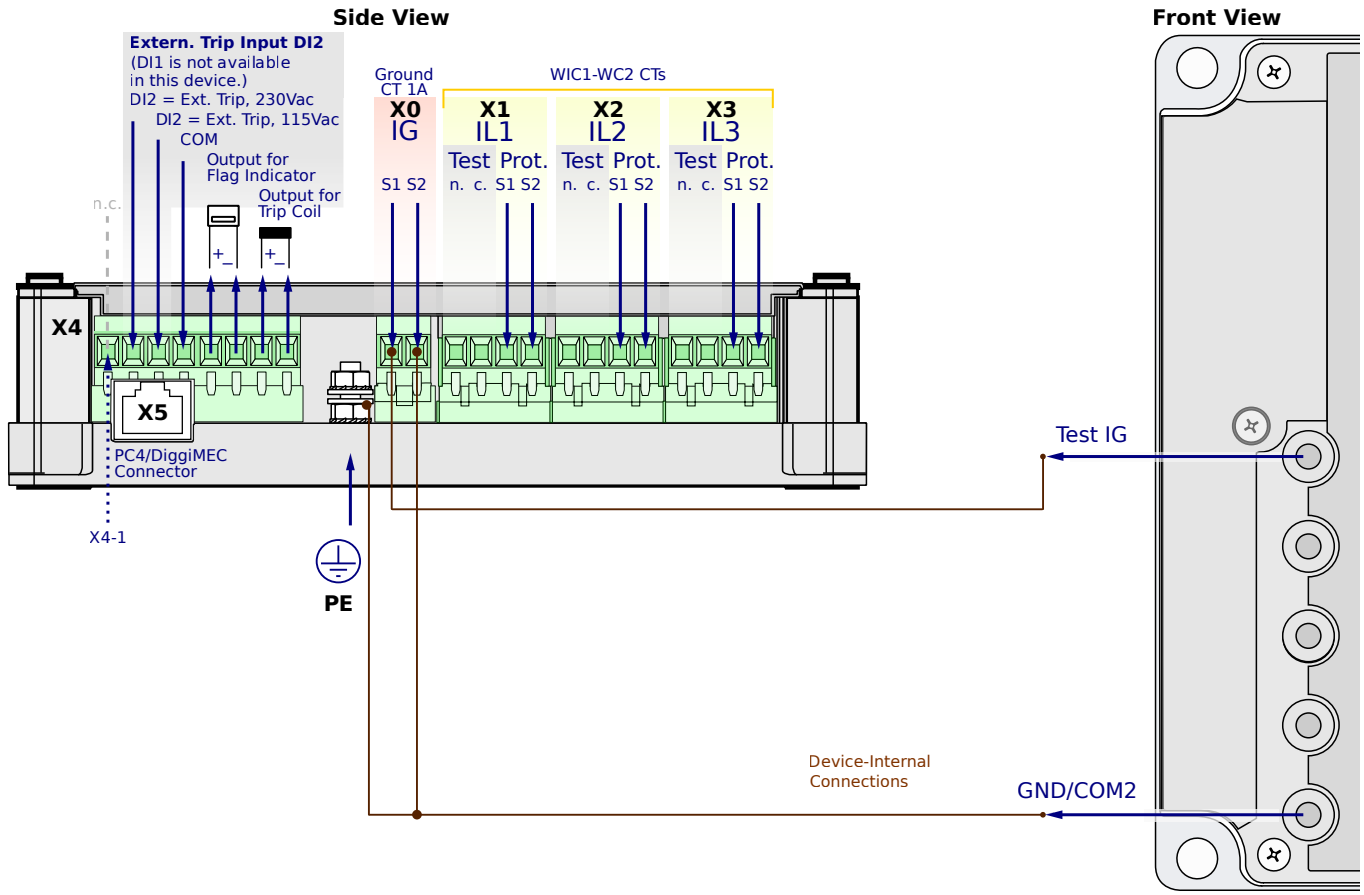


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2SA0

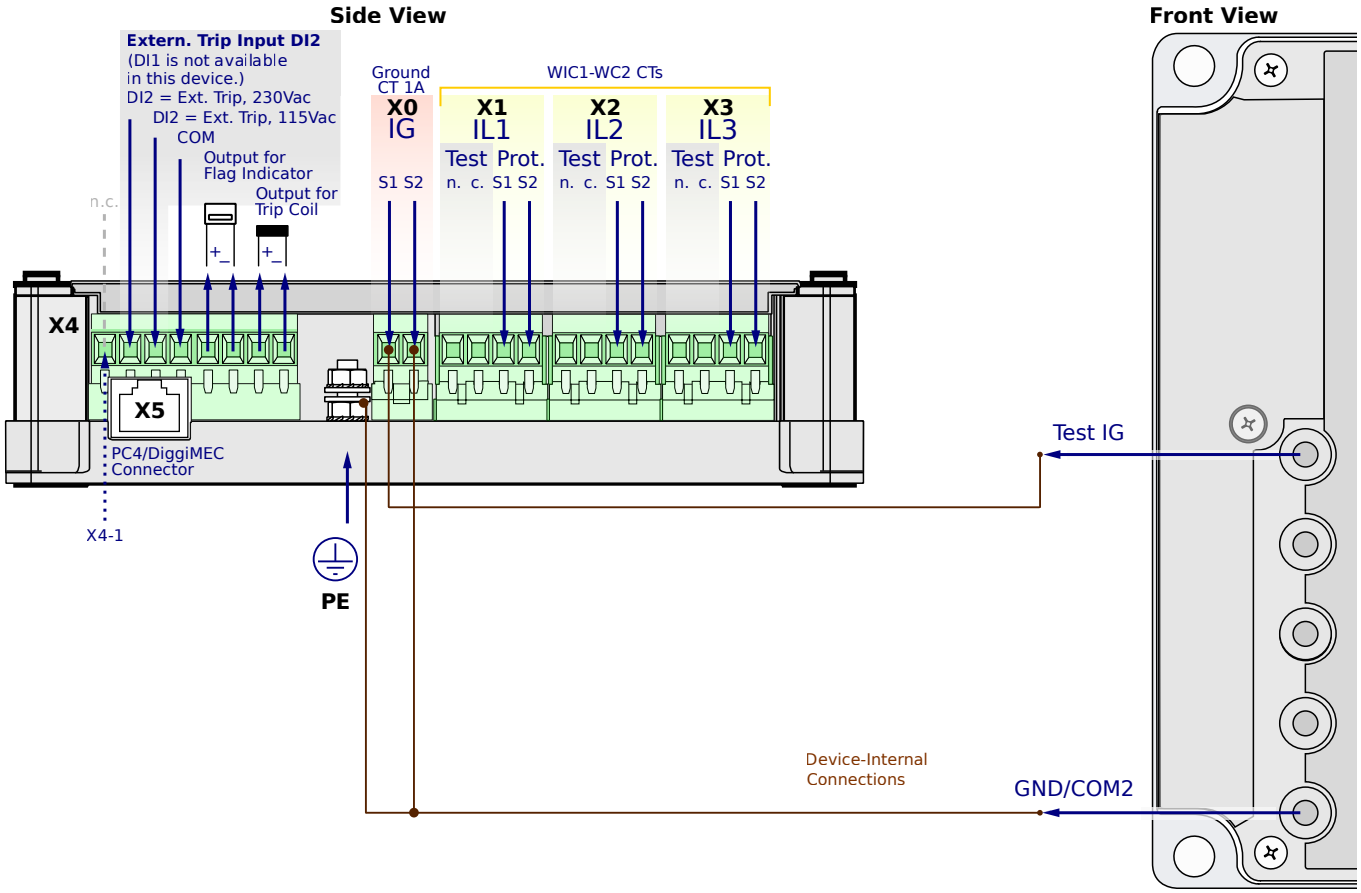


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2SAH

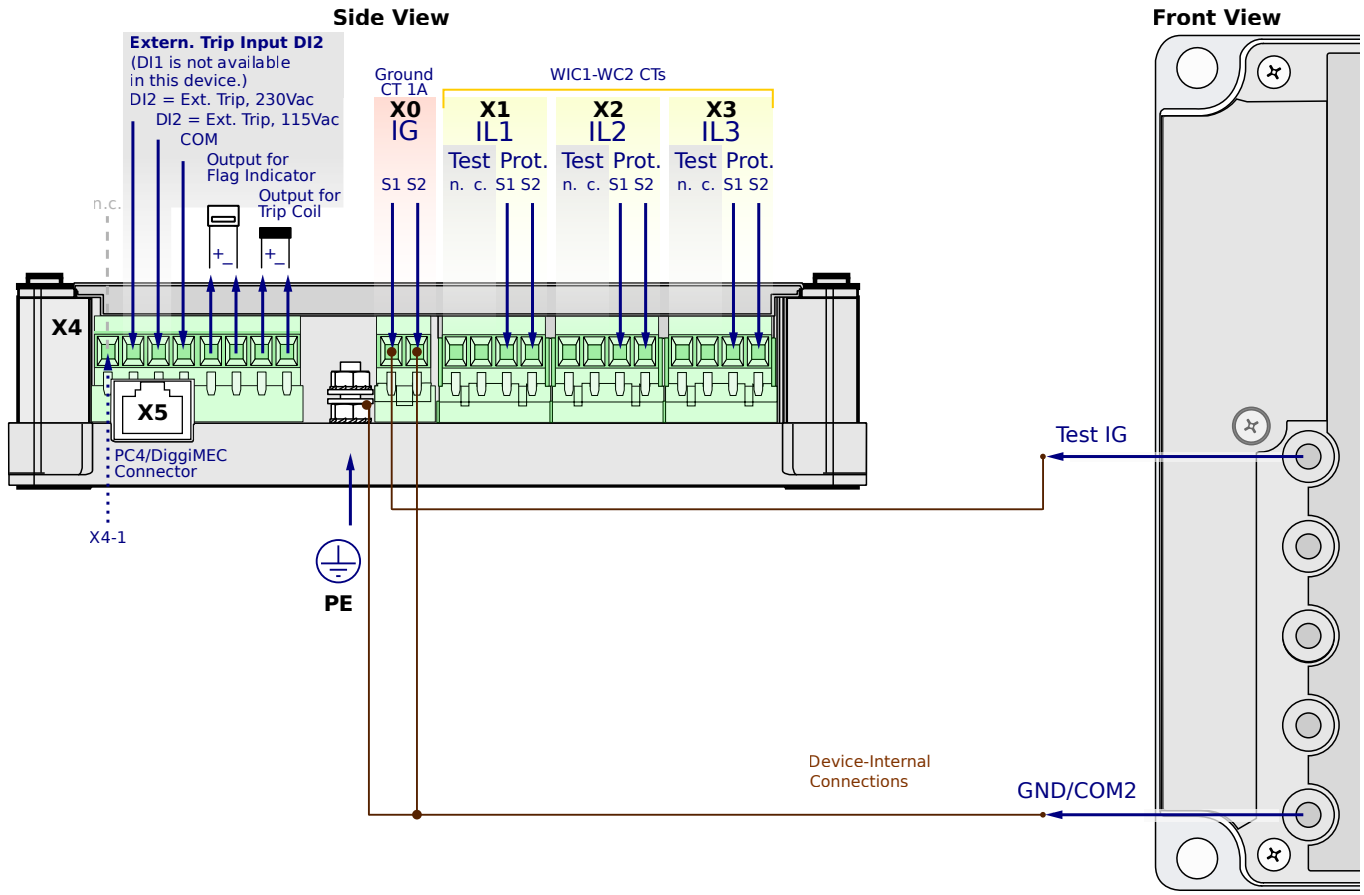


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2AA0

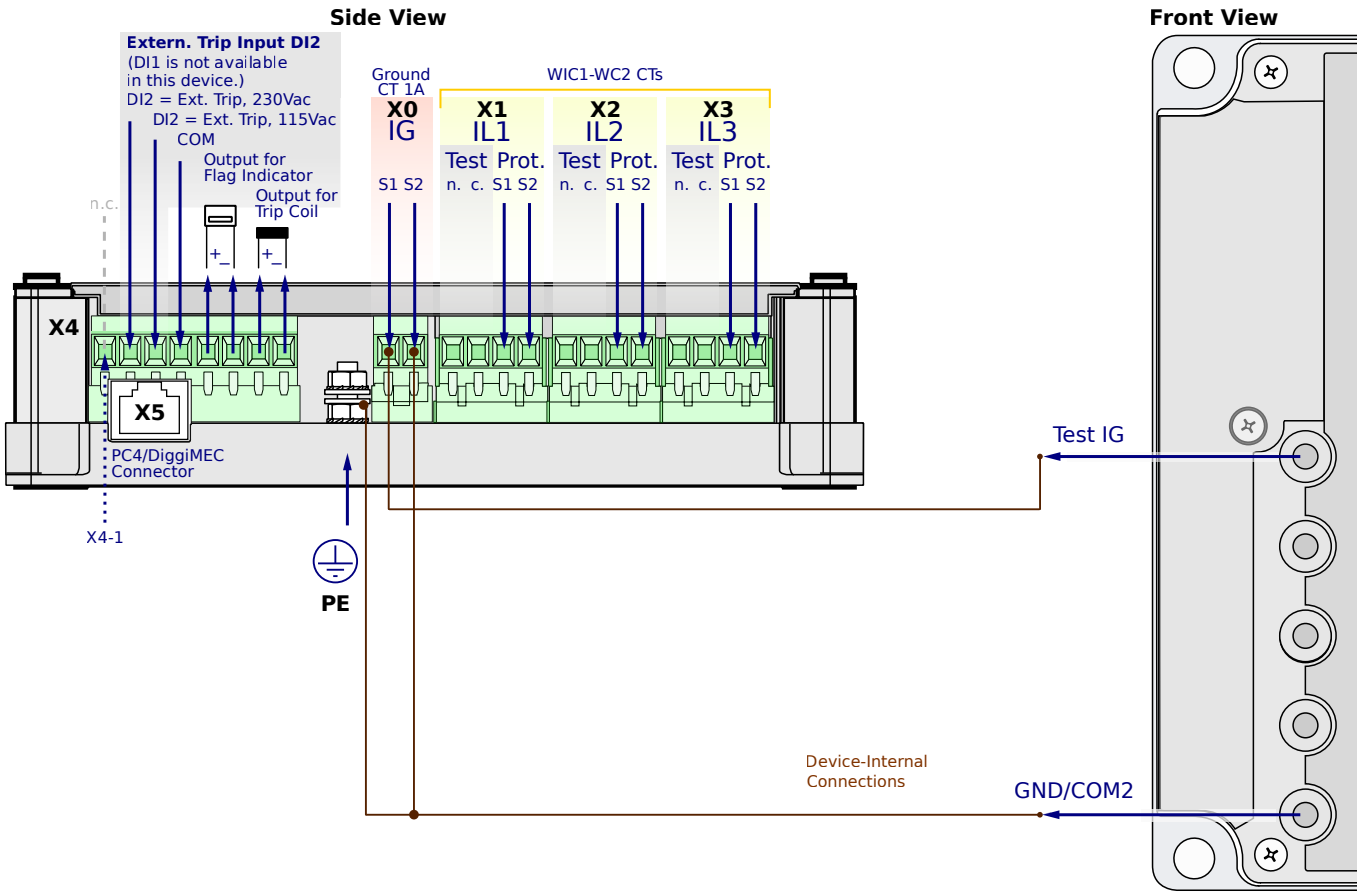


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2AAH

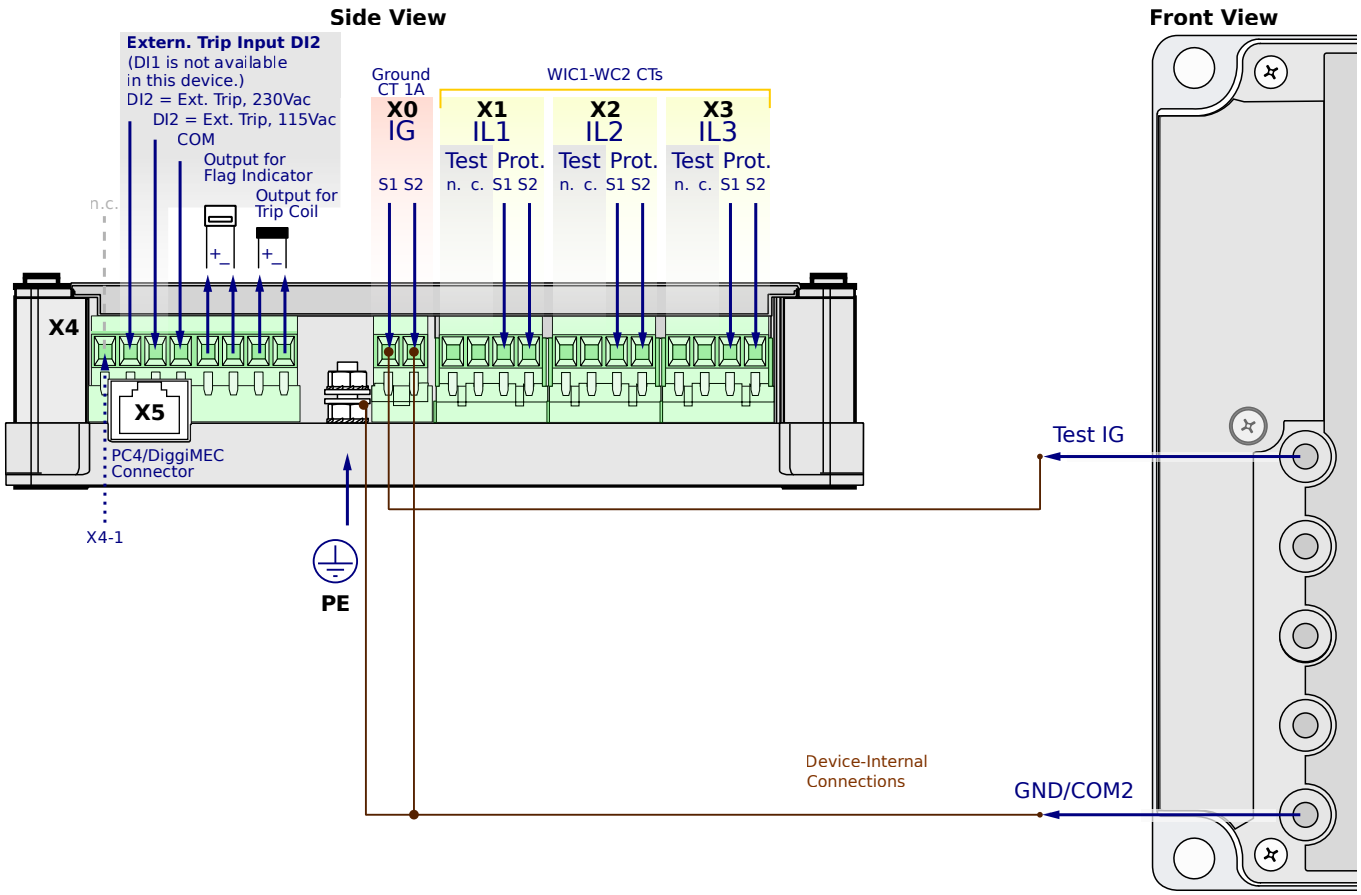


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2PA0

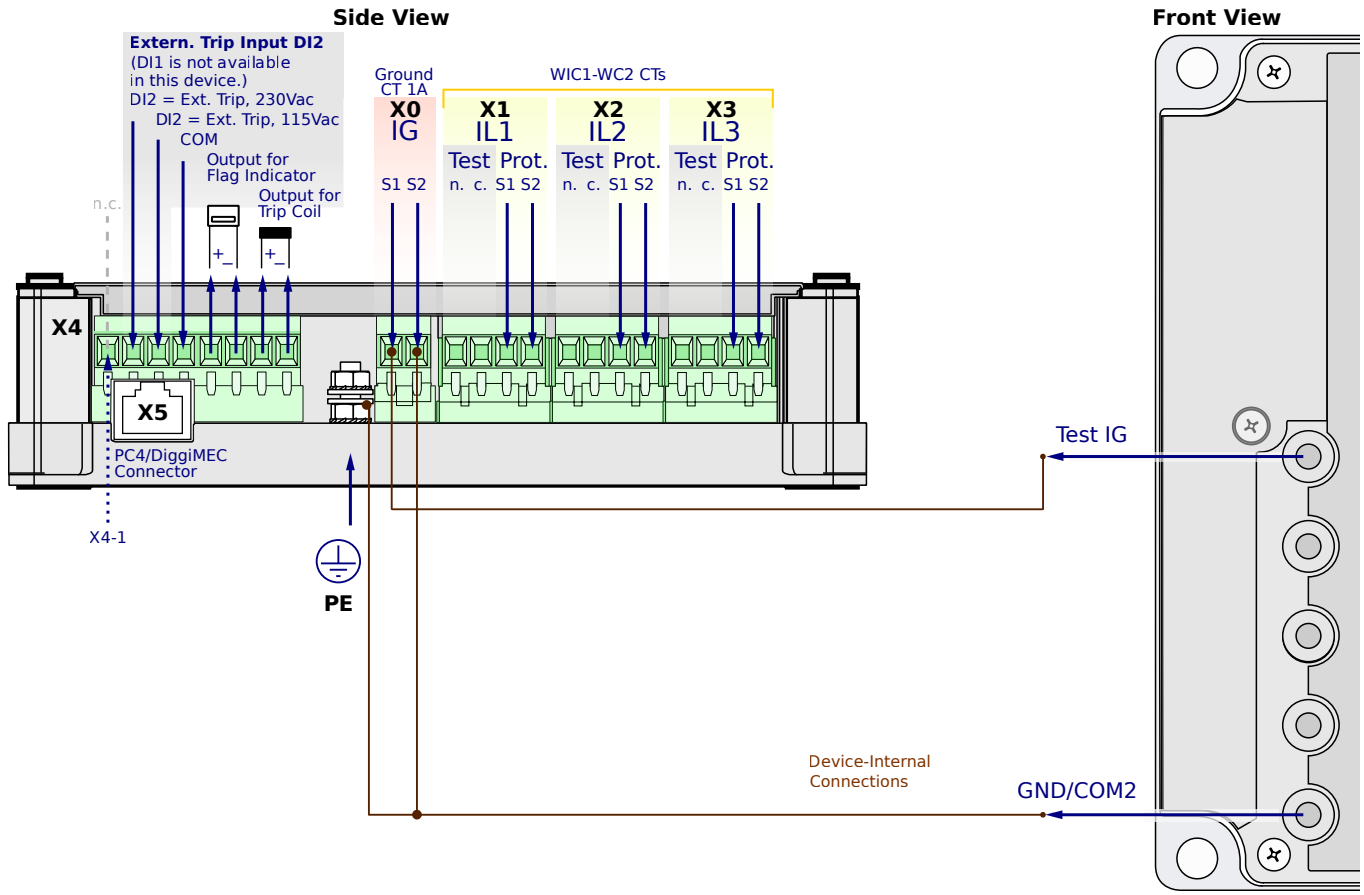


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FF2PAH

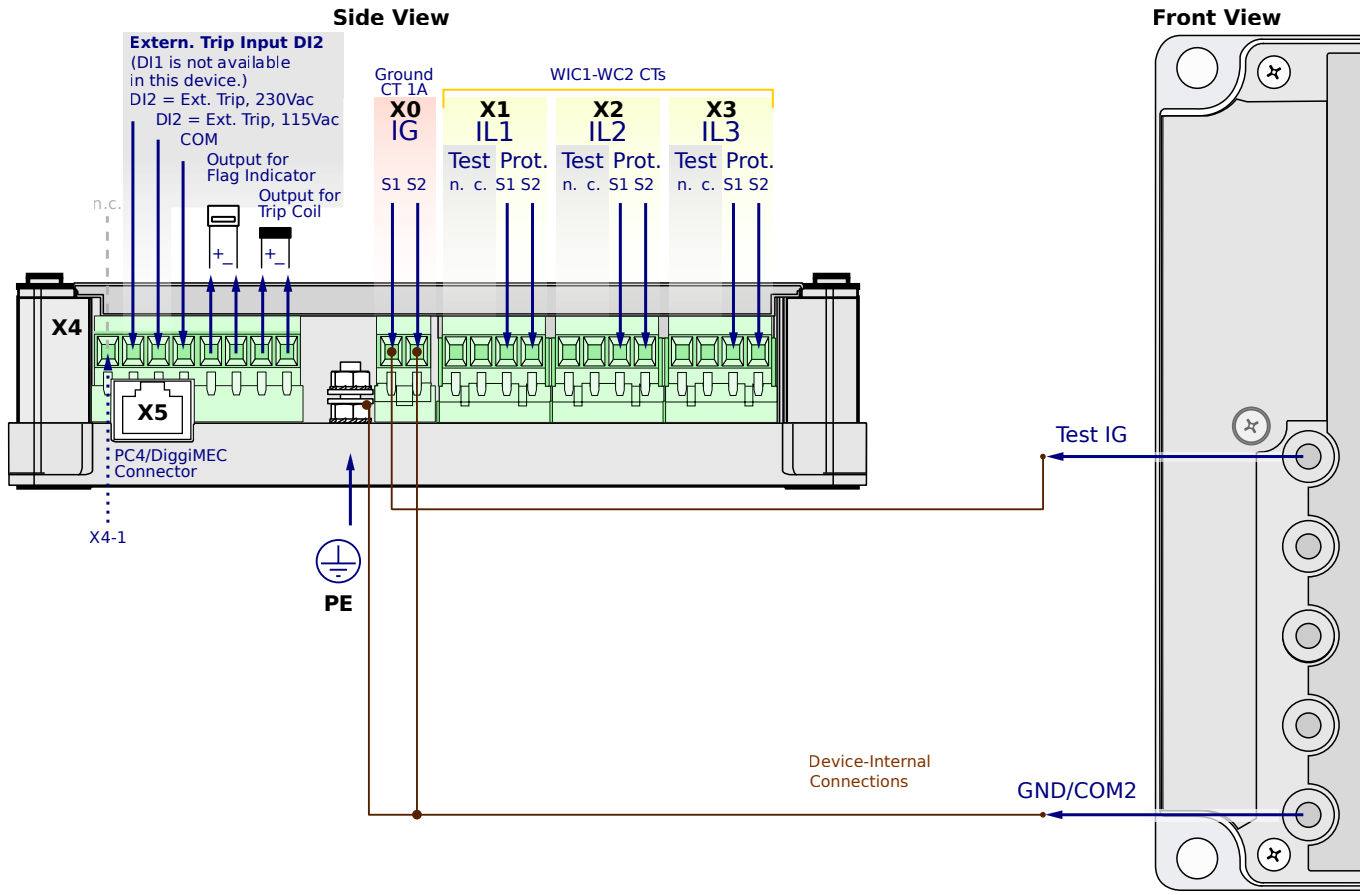


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1SA0

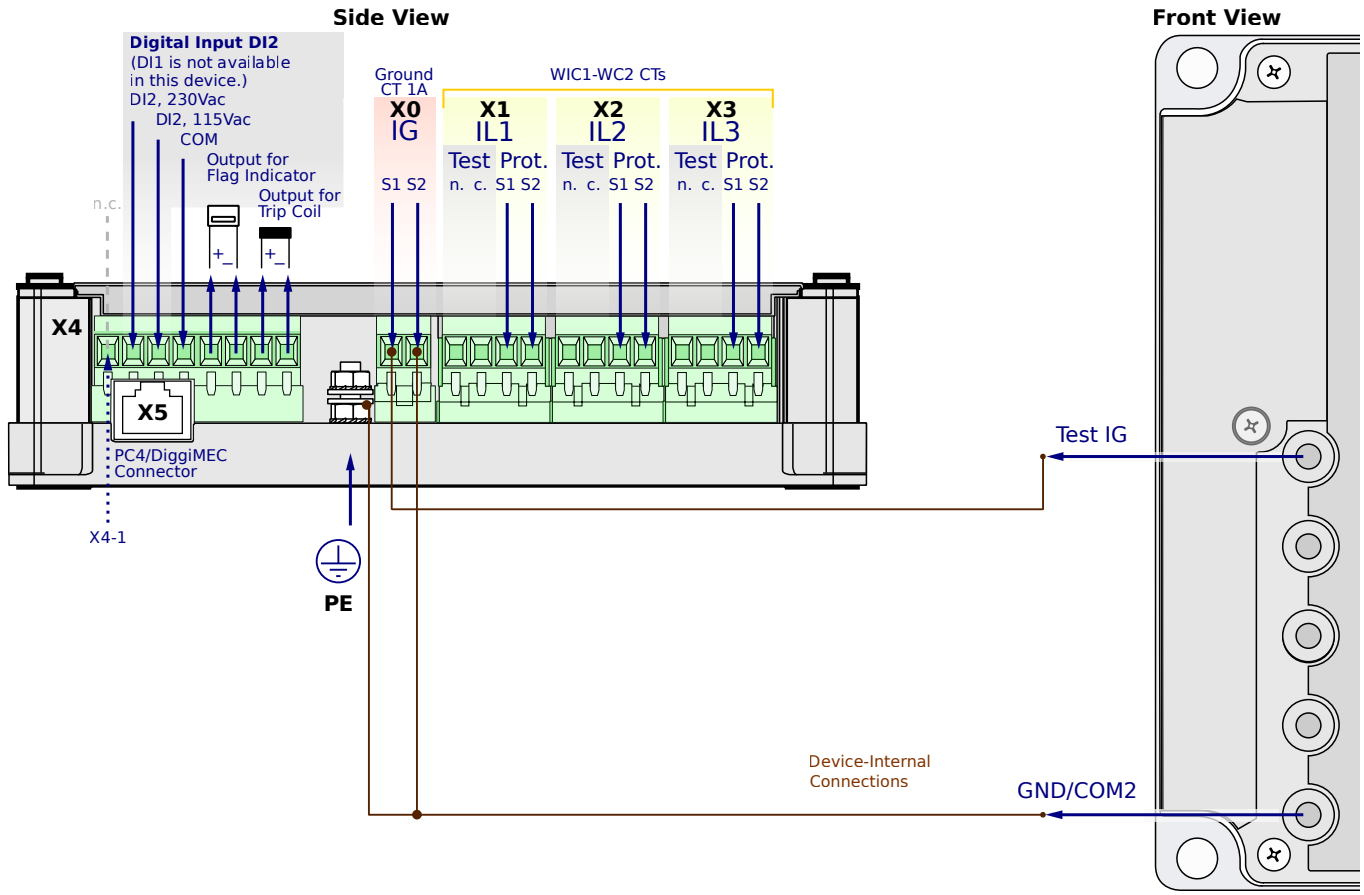


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1SAH

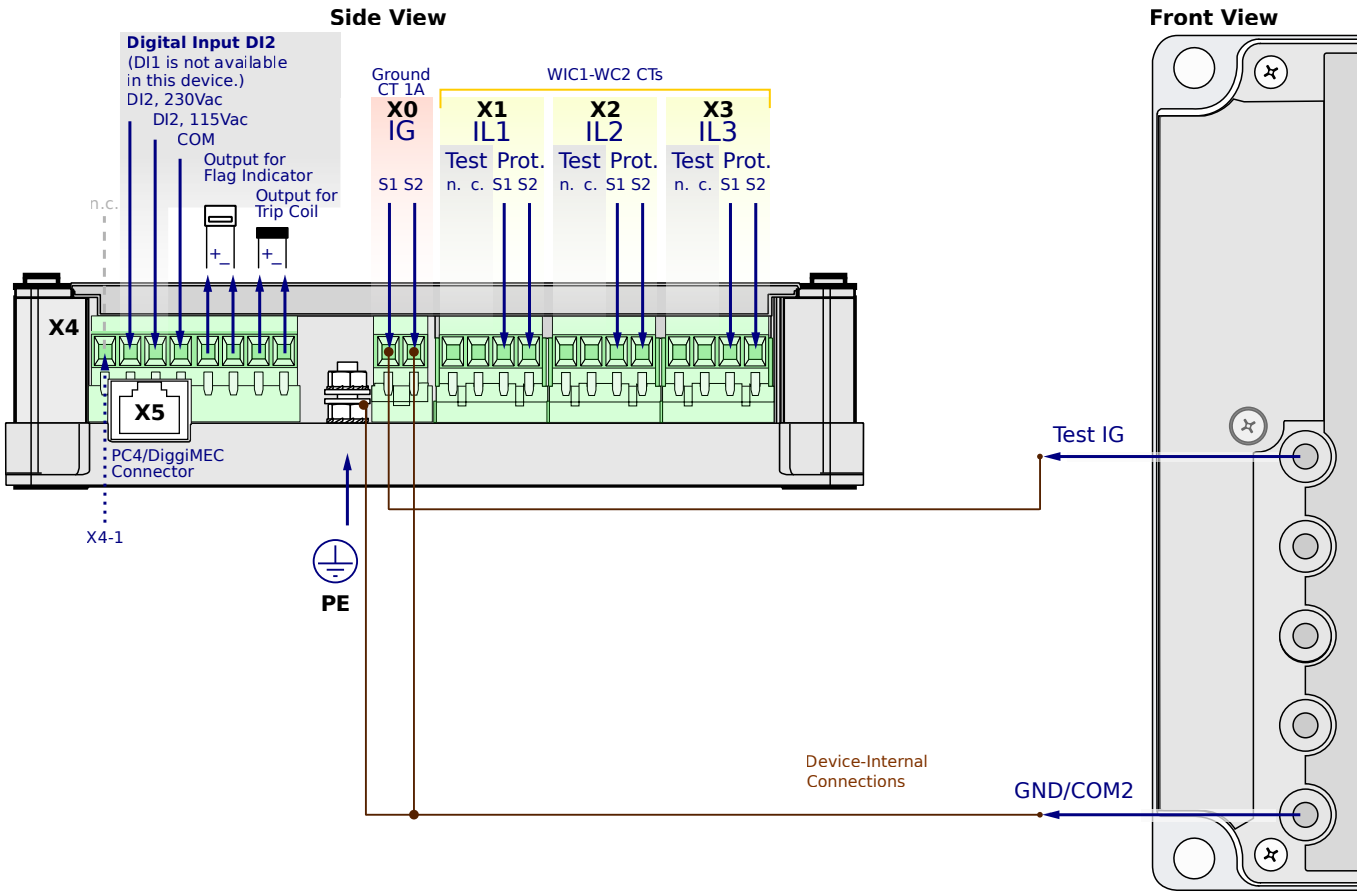


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1AA0

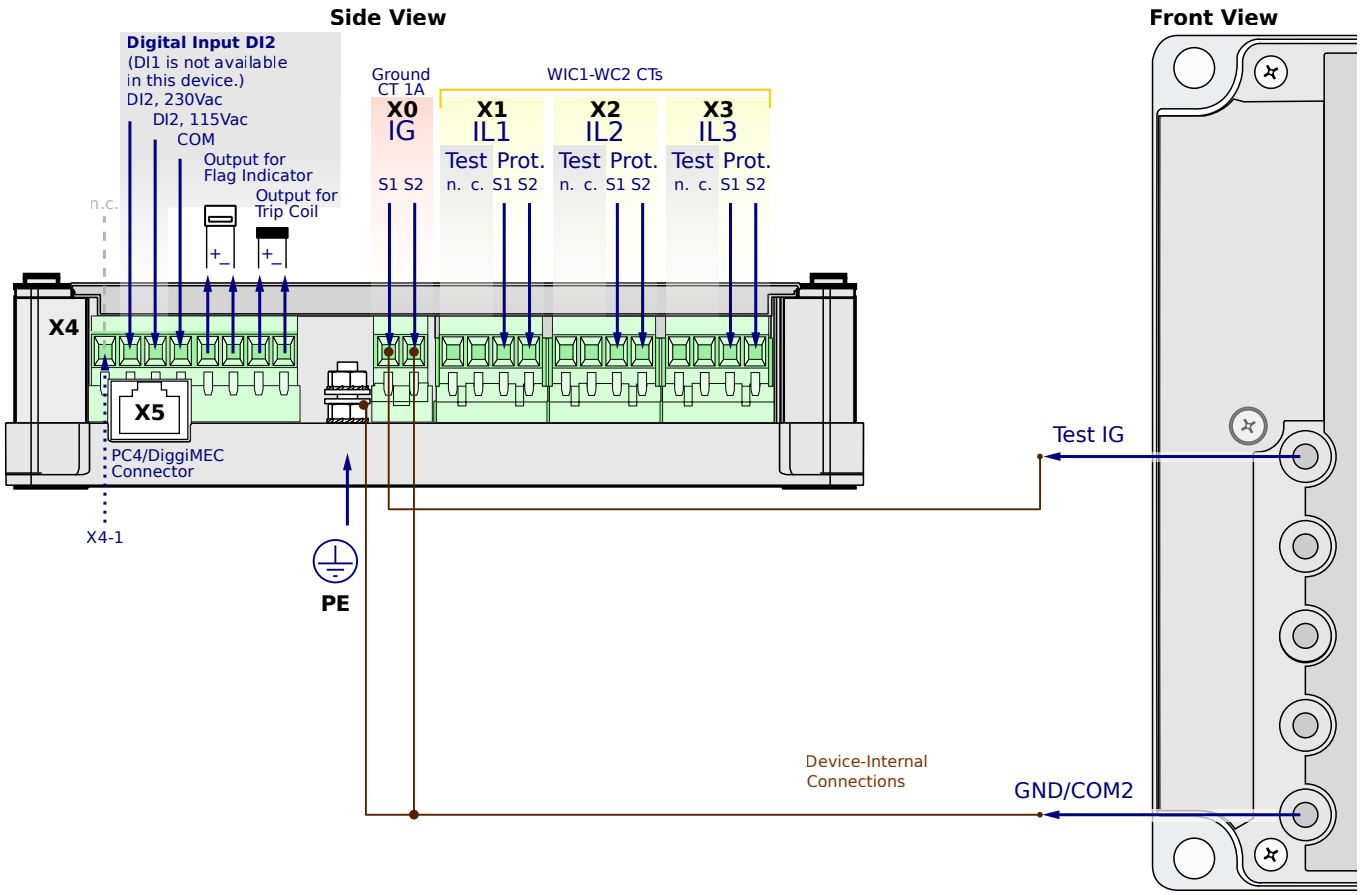


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1AAH

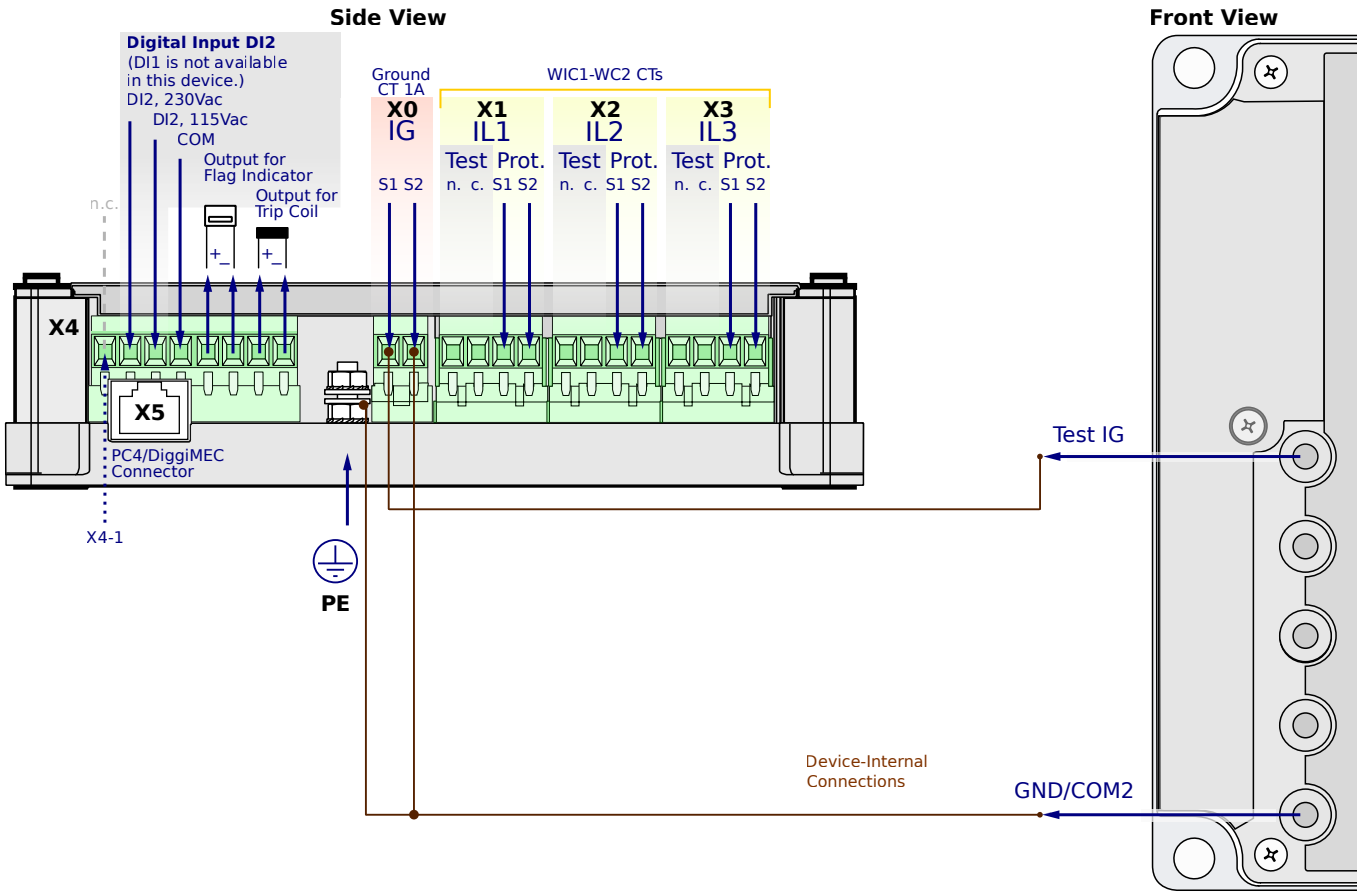


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1PA0

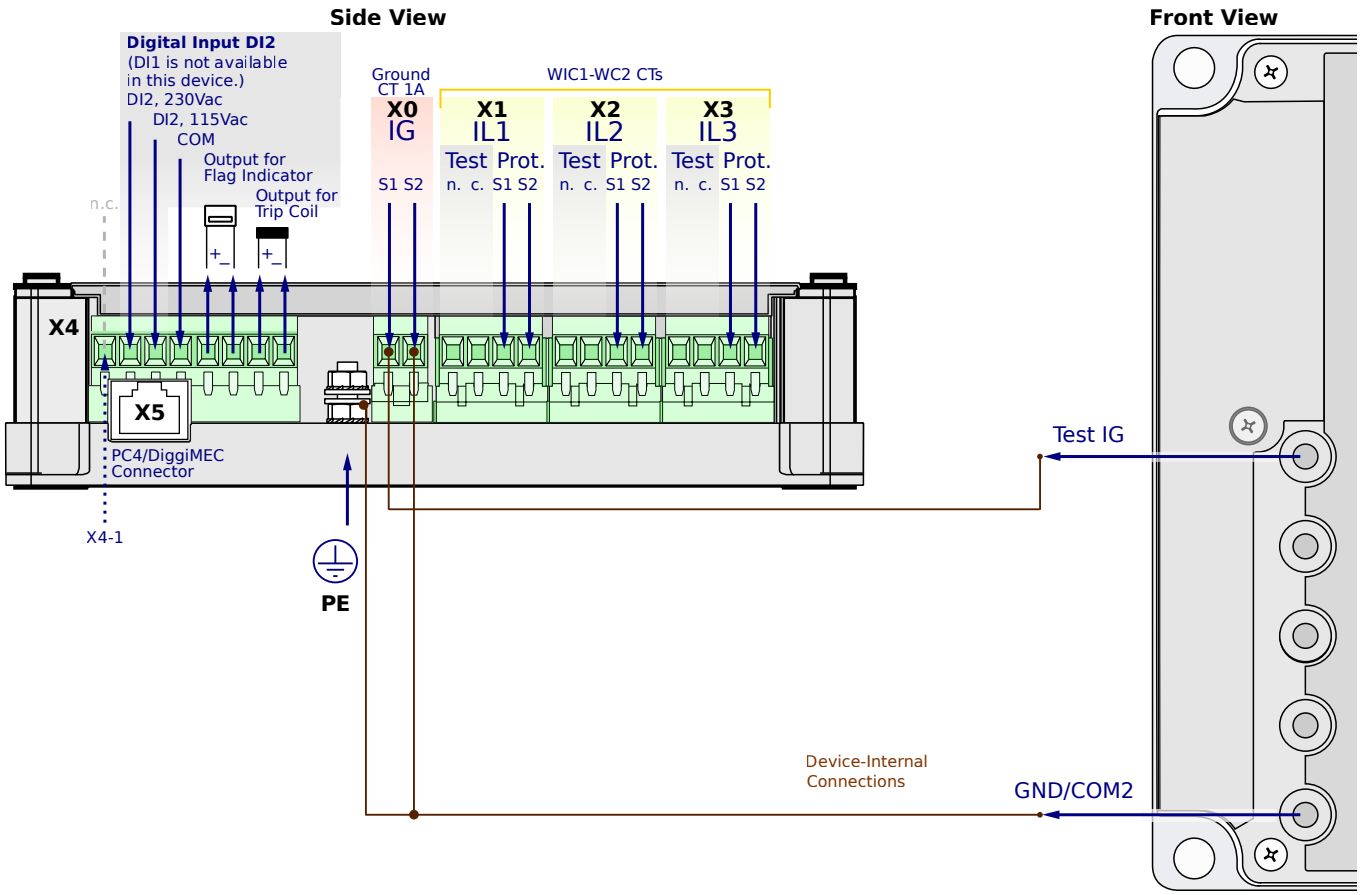


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC1PAH

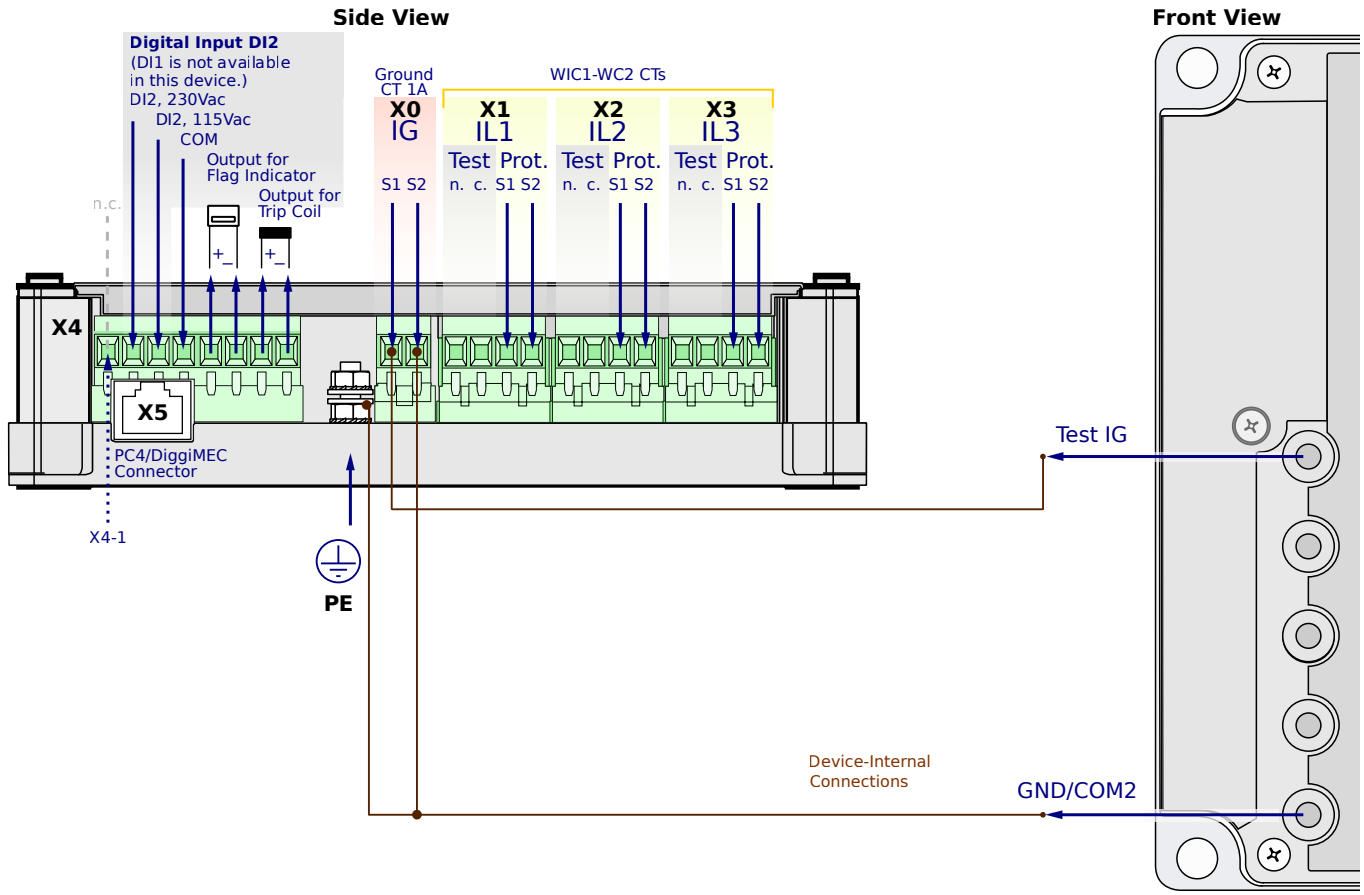


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2SA0

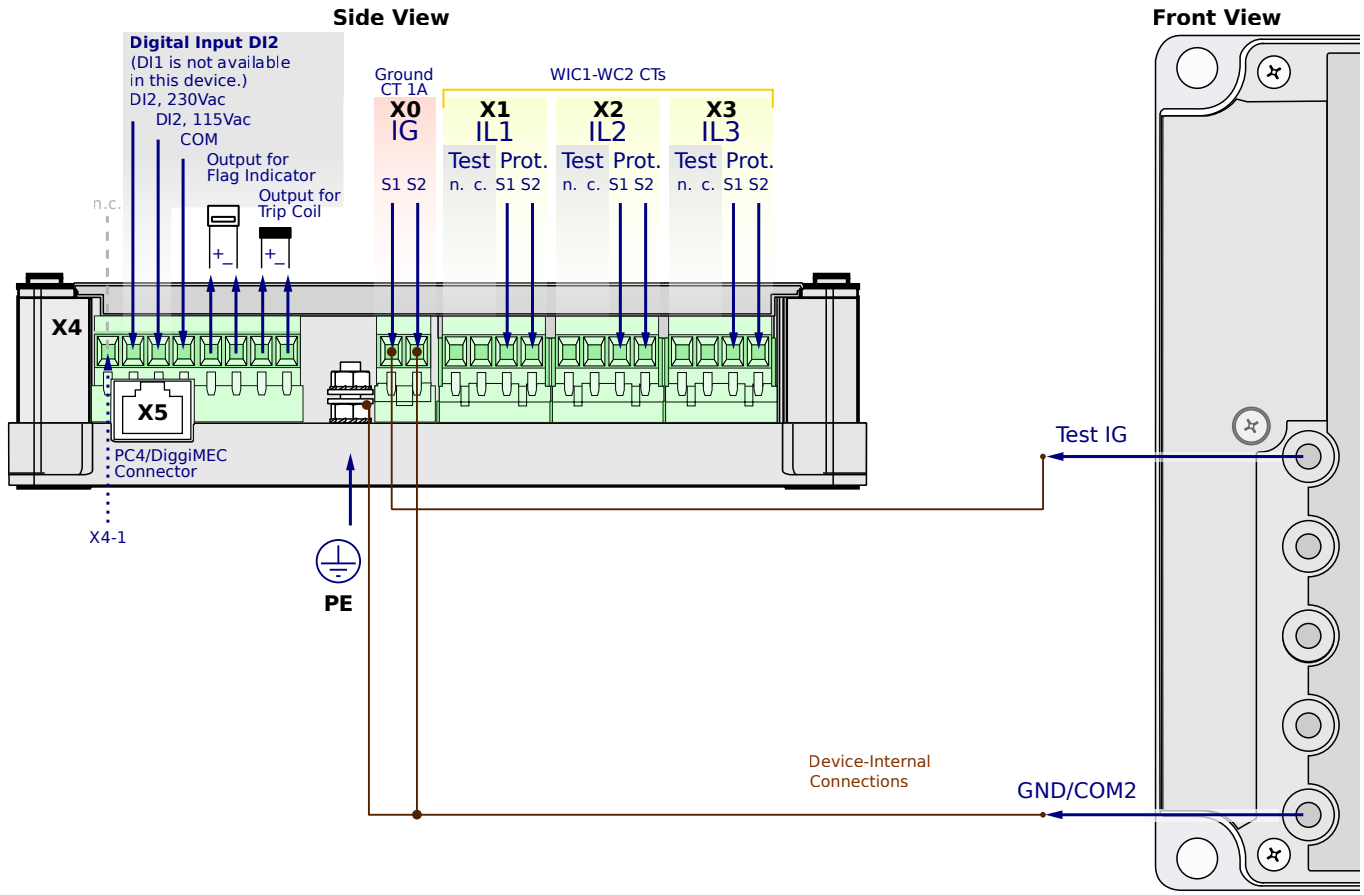


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2SAH

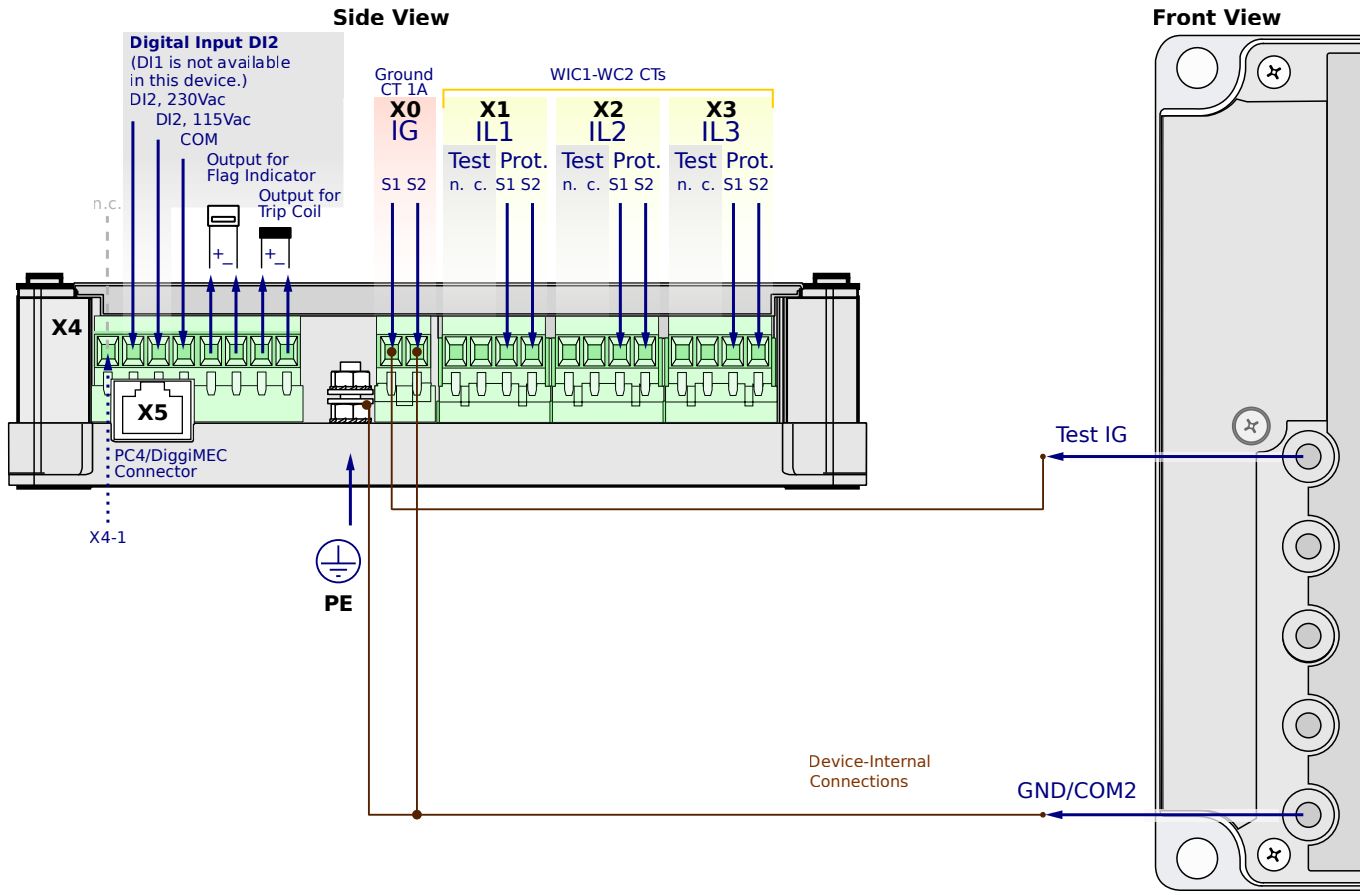


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2AA0

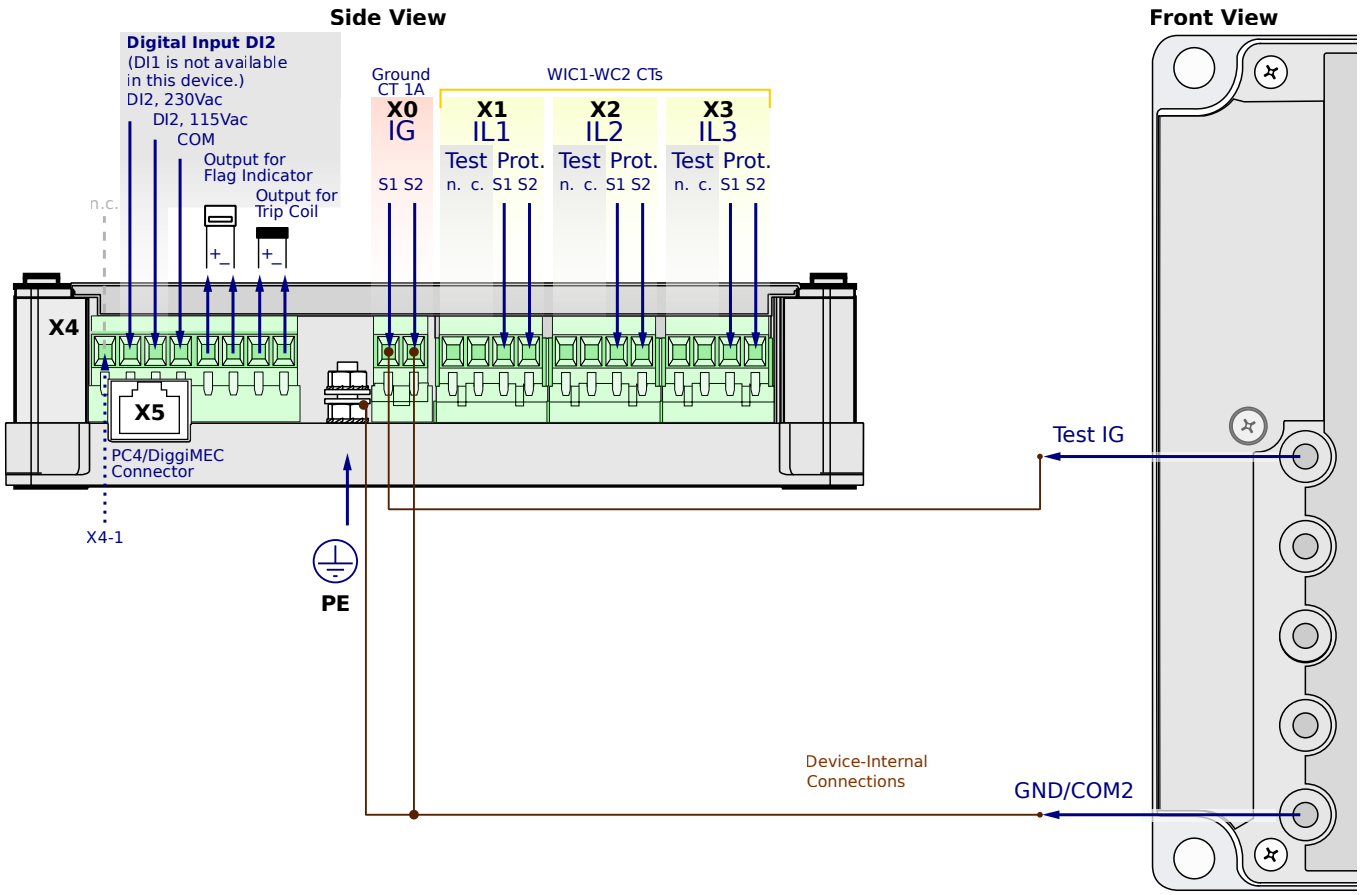


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2AAH

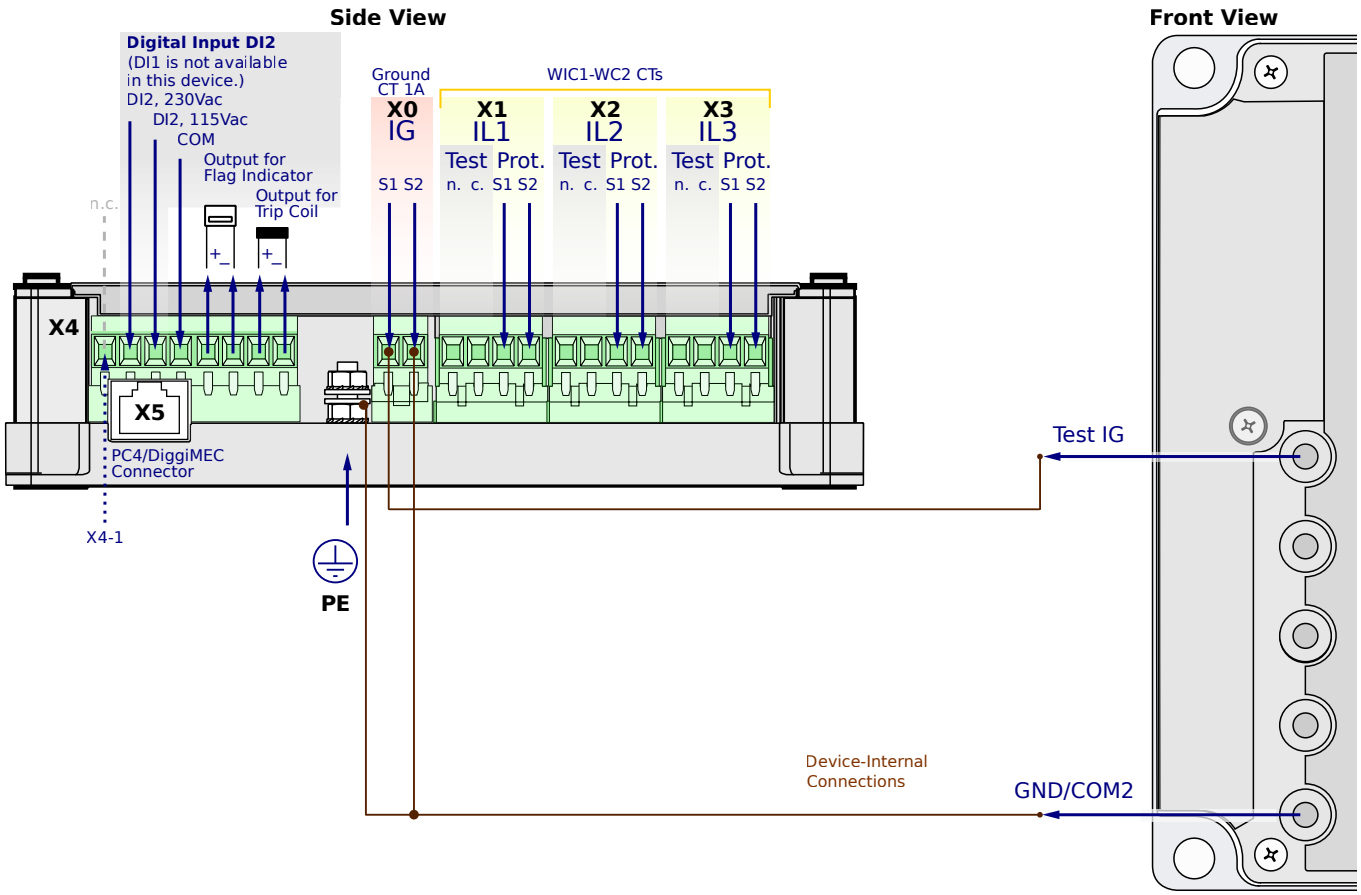


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2PA0

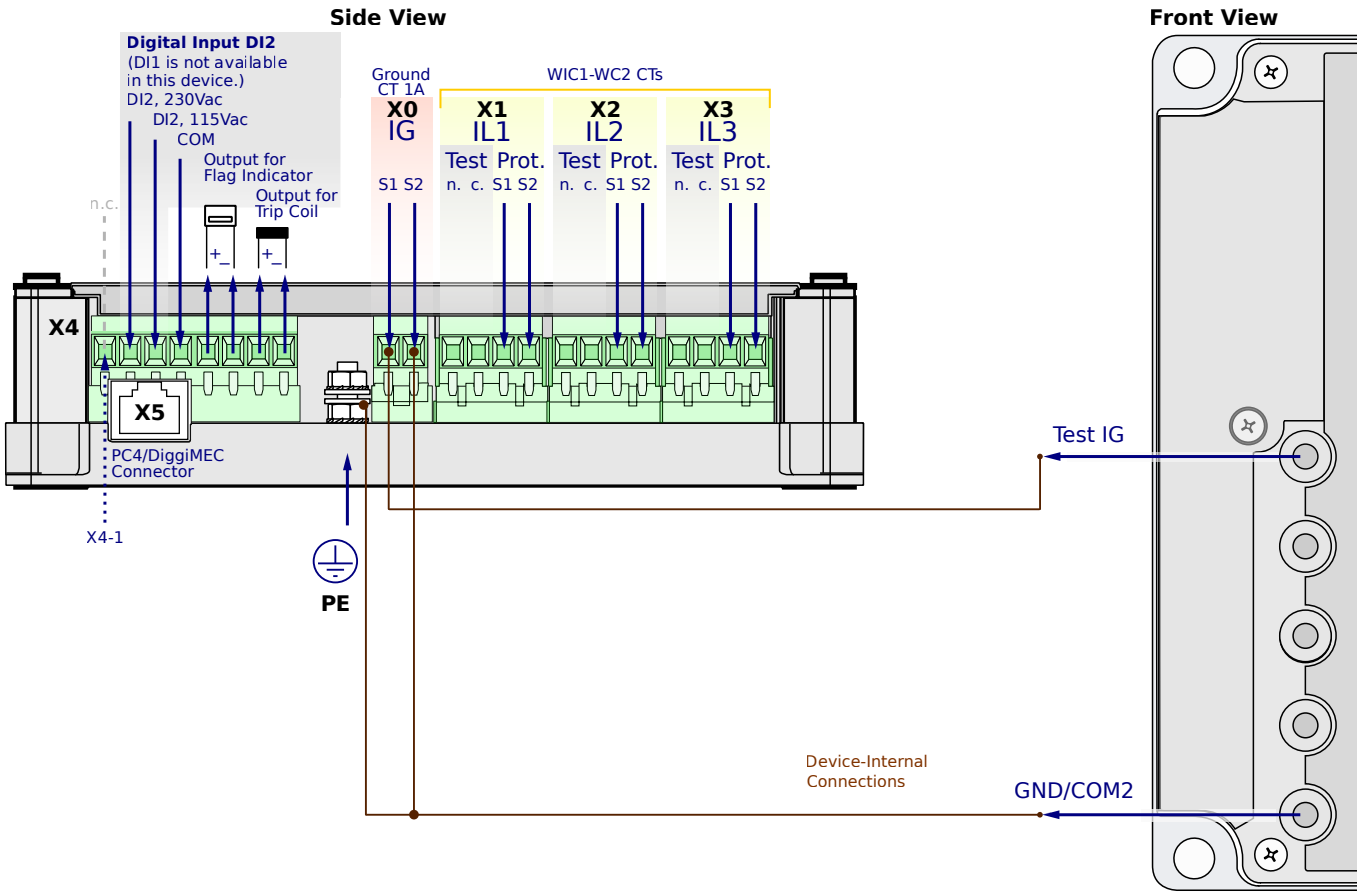


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0FC2PAH

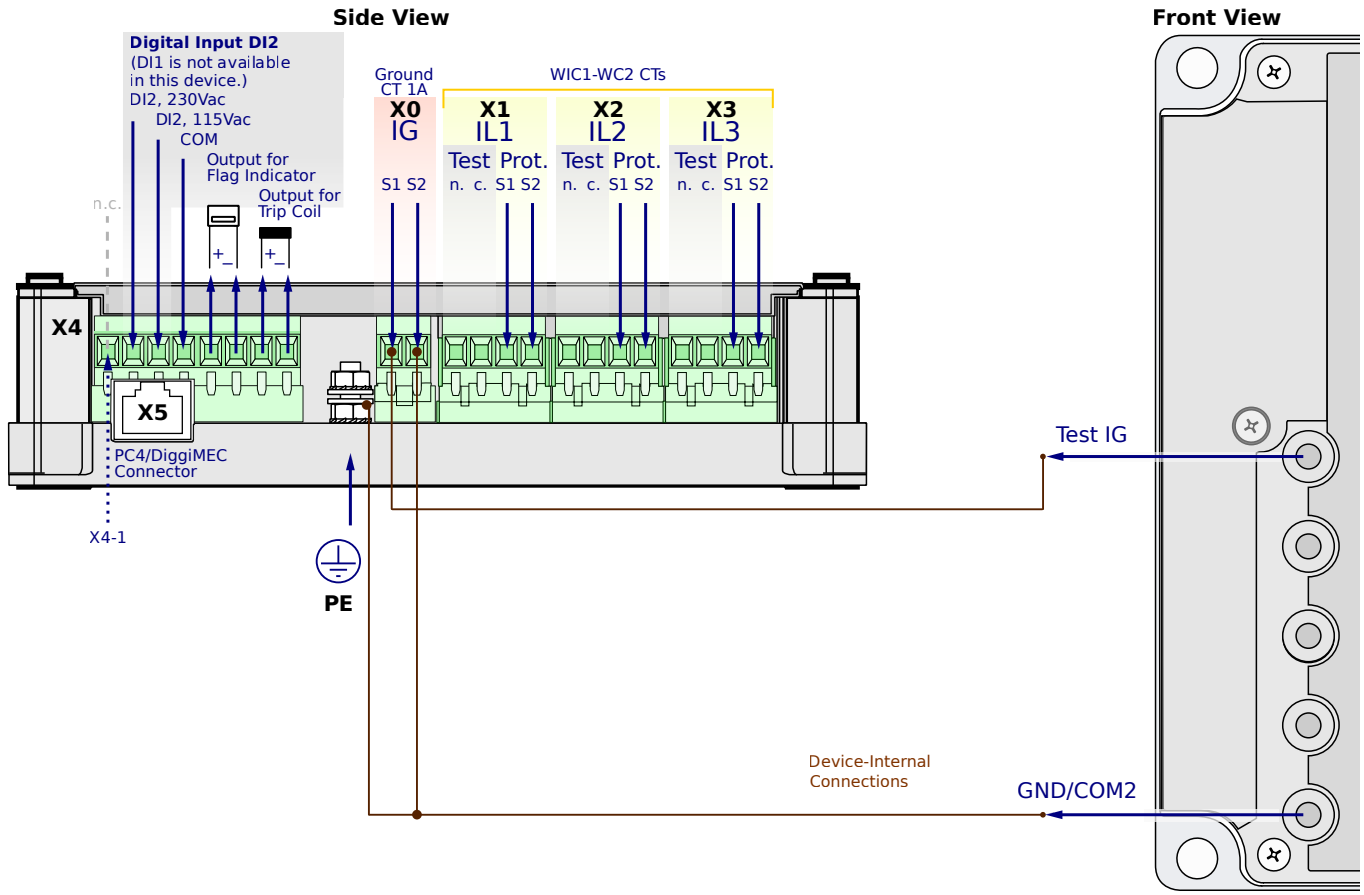


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1SA0

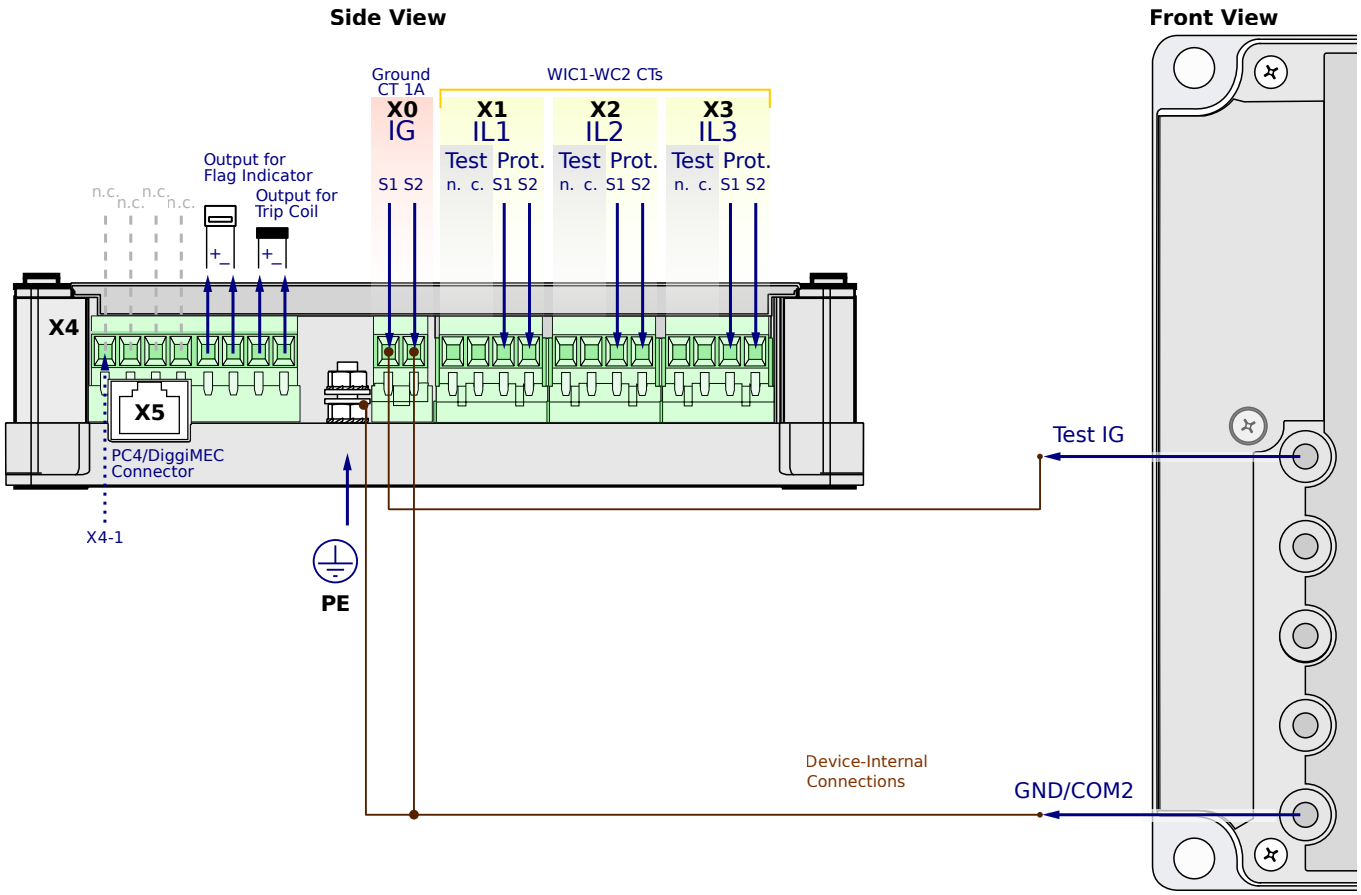


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1SAH

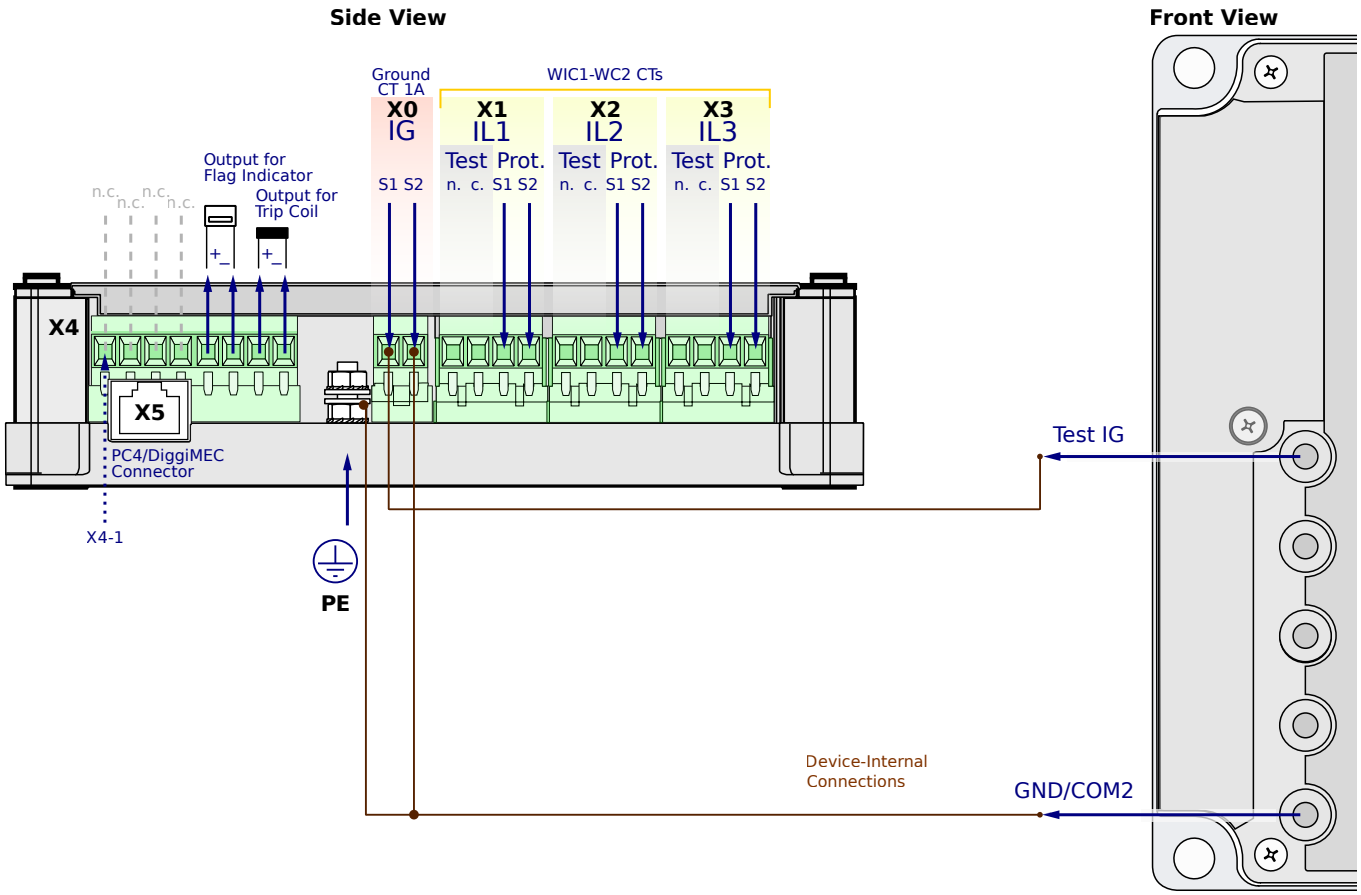


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1AA0

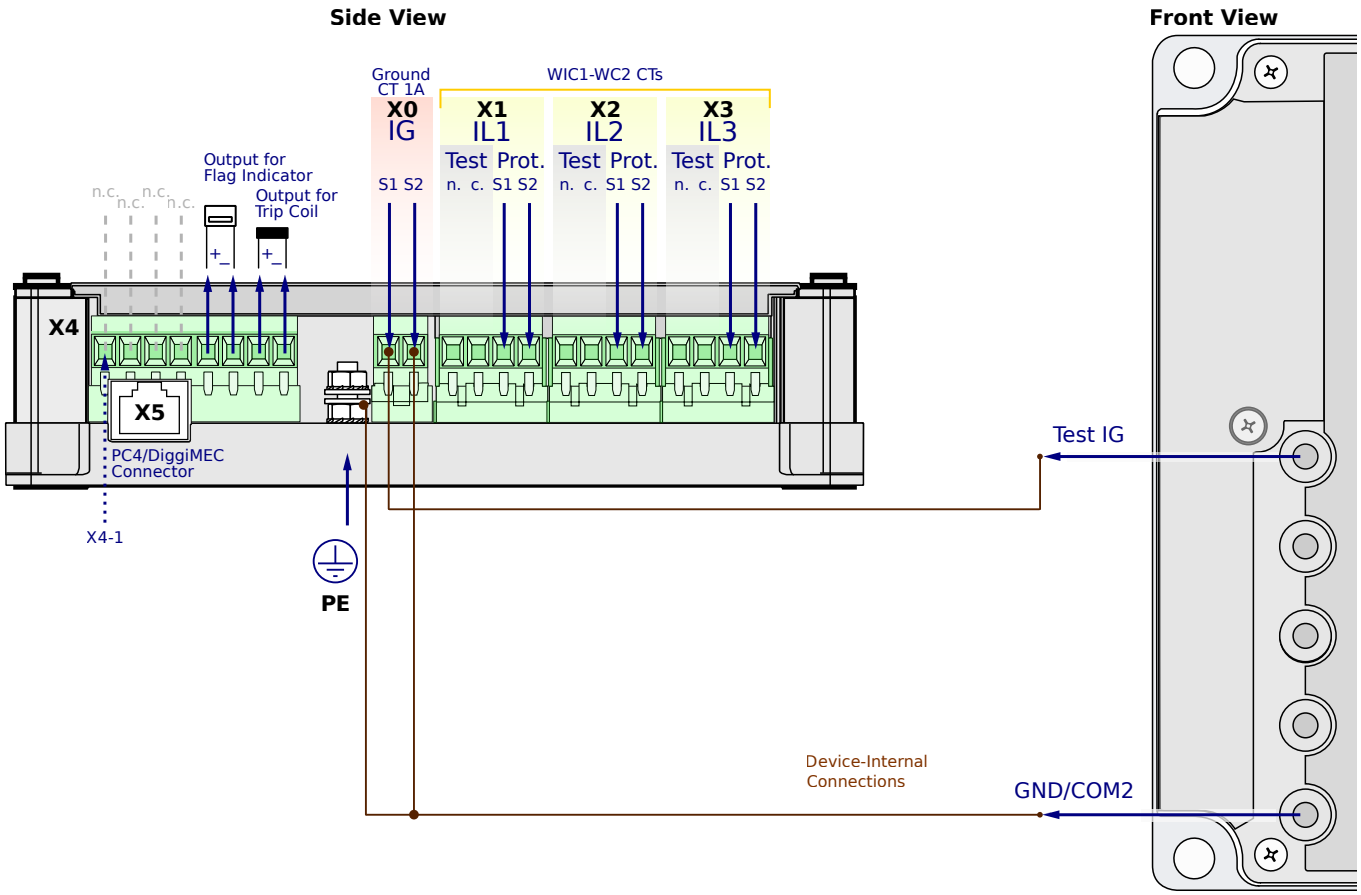


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1AAH

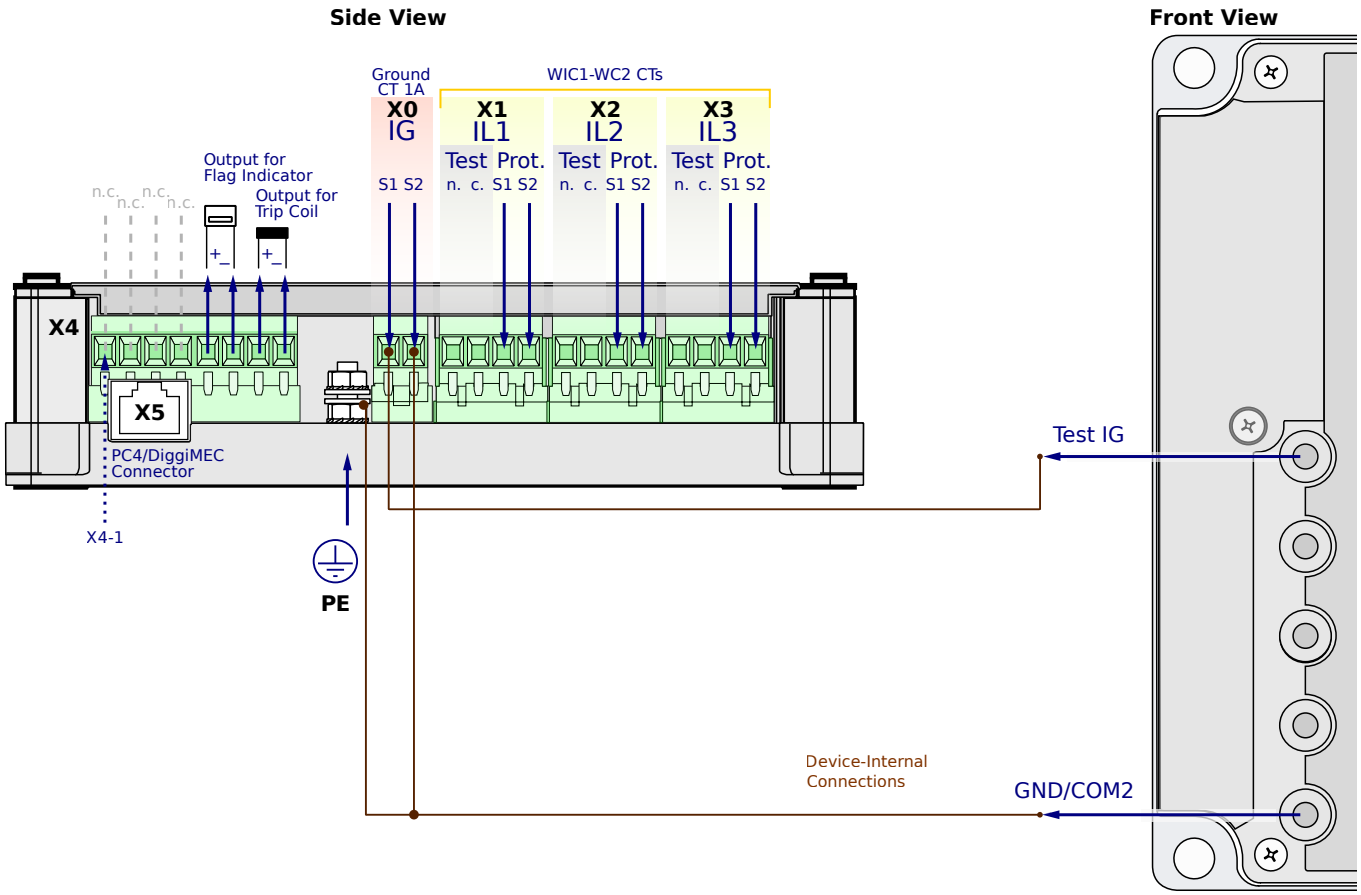


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1PA0

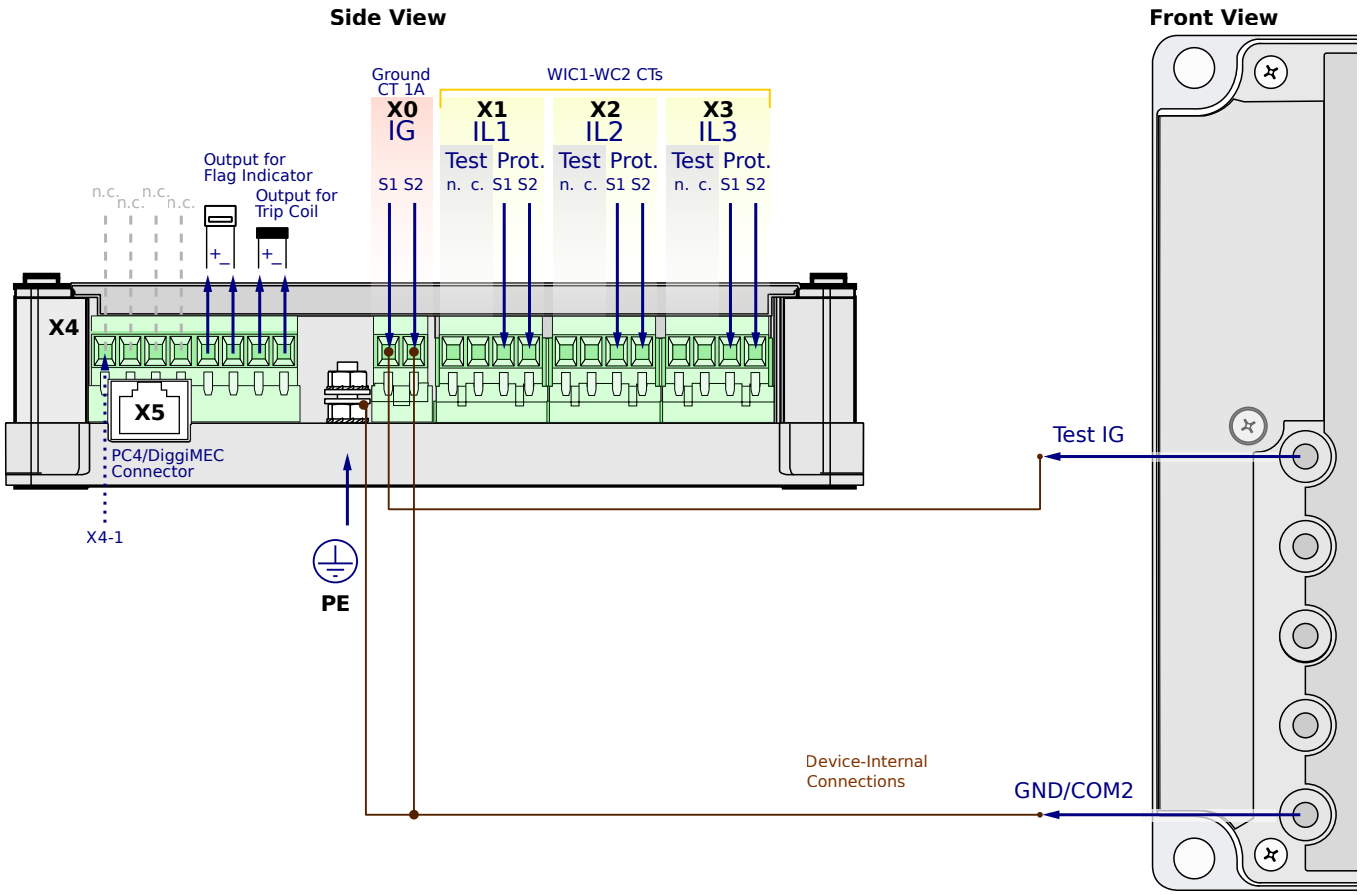


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN1PAH

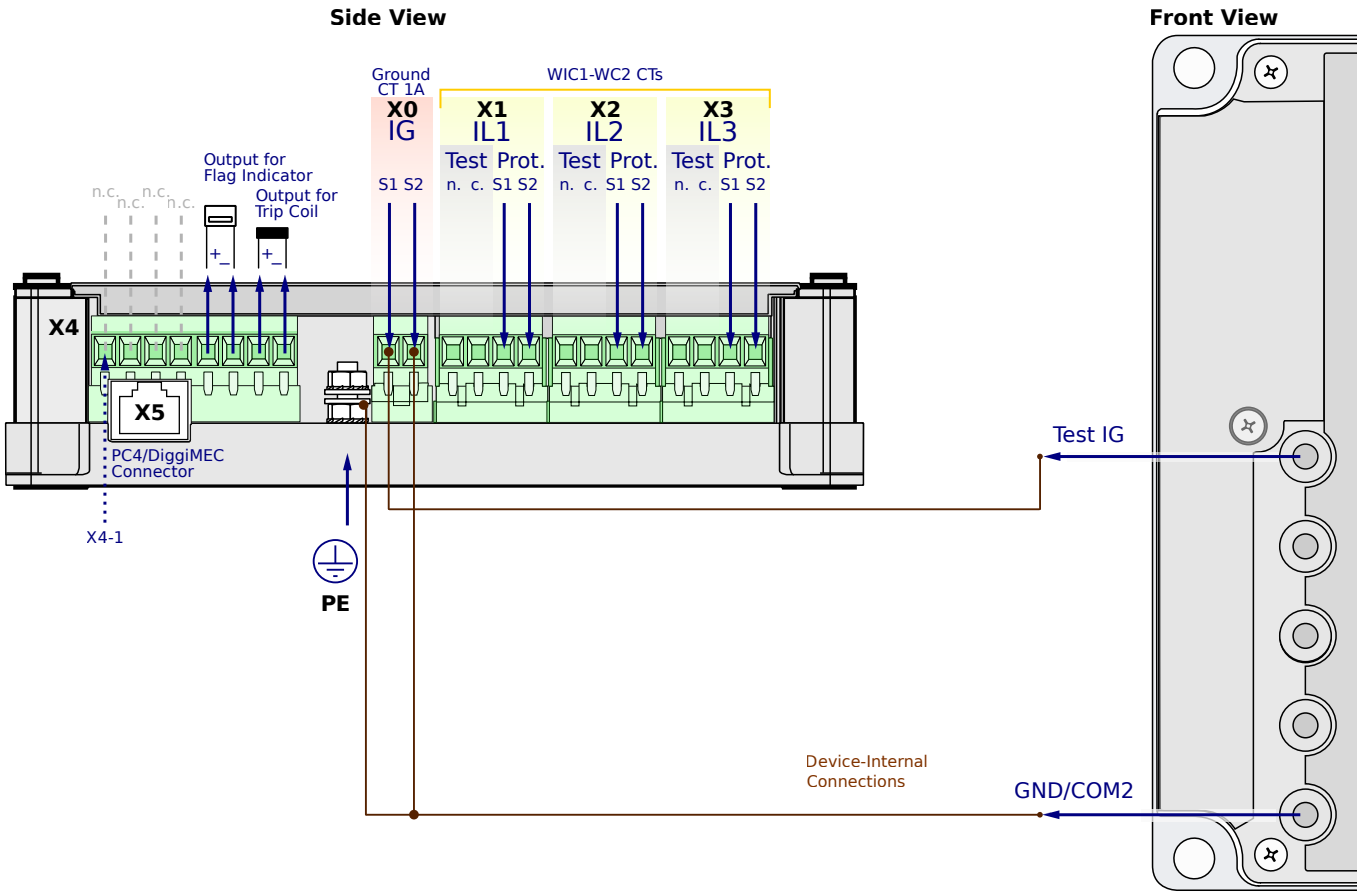


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2SA0

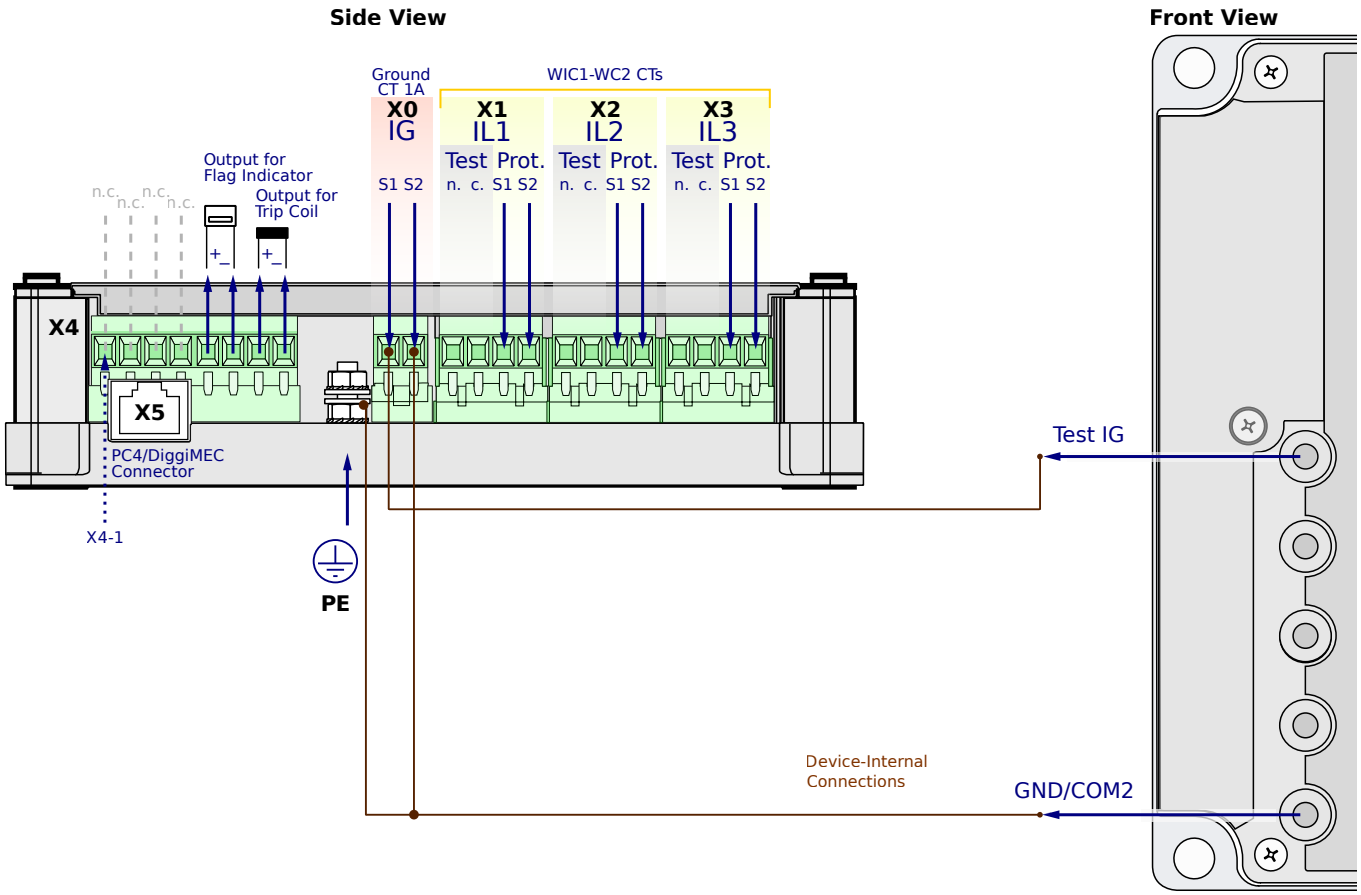


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2SAH

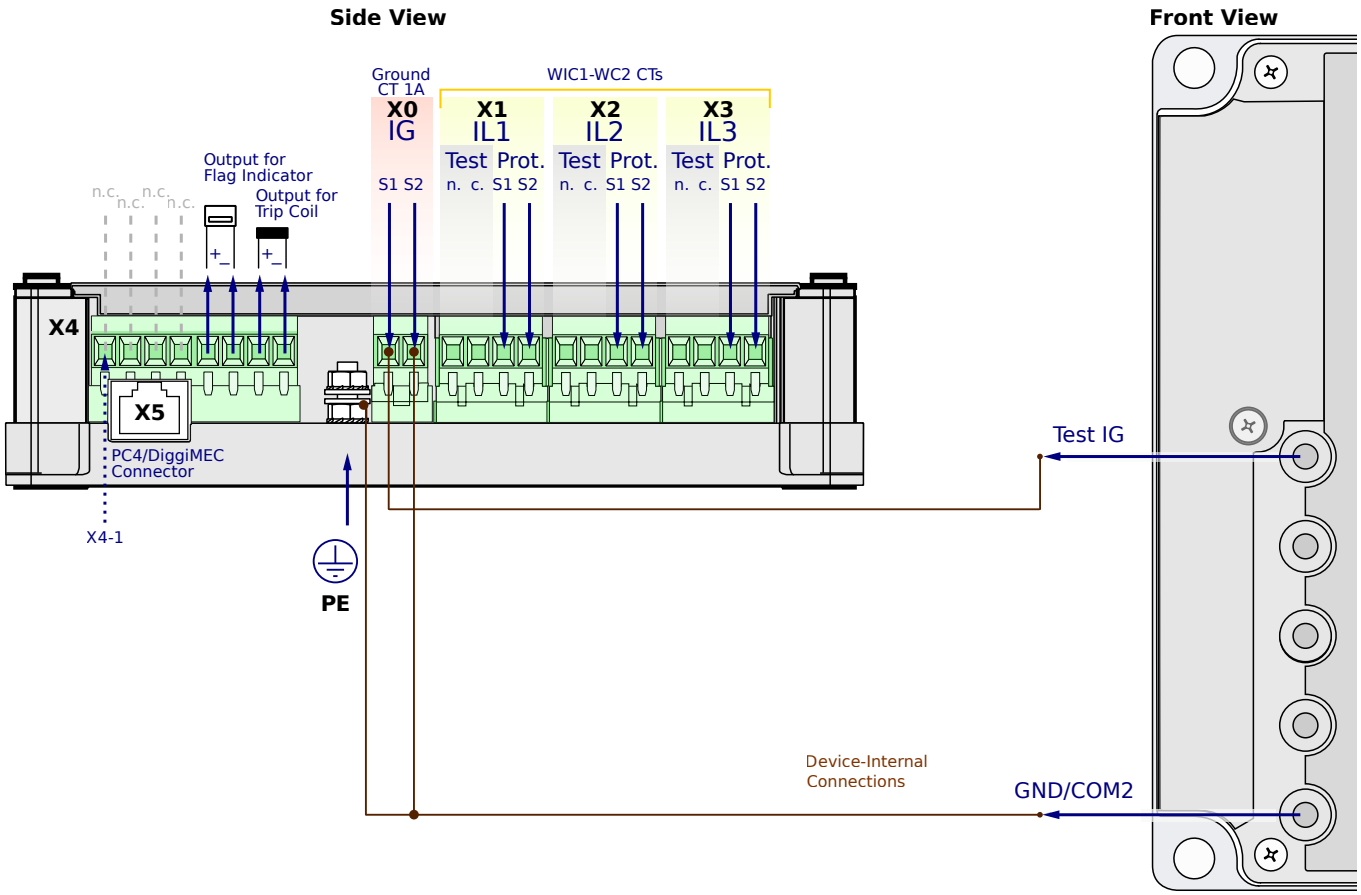


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2AA0

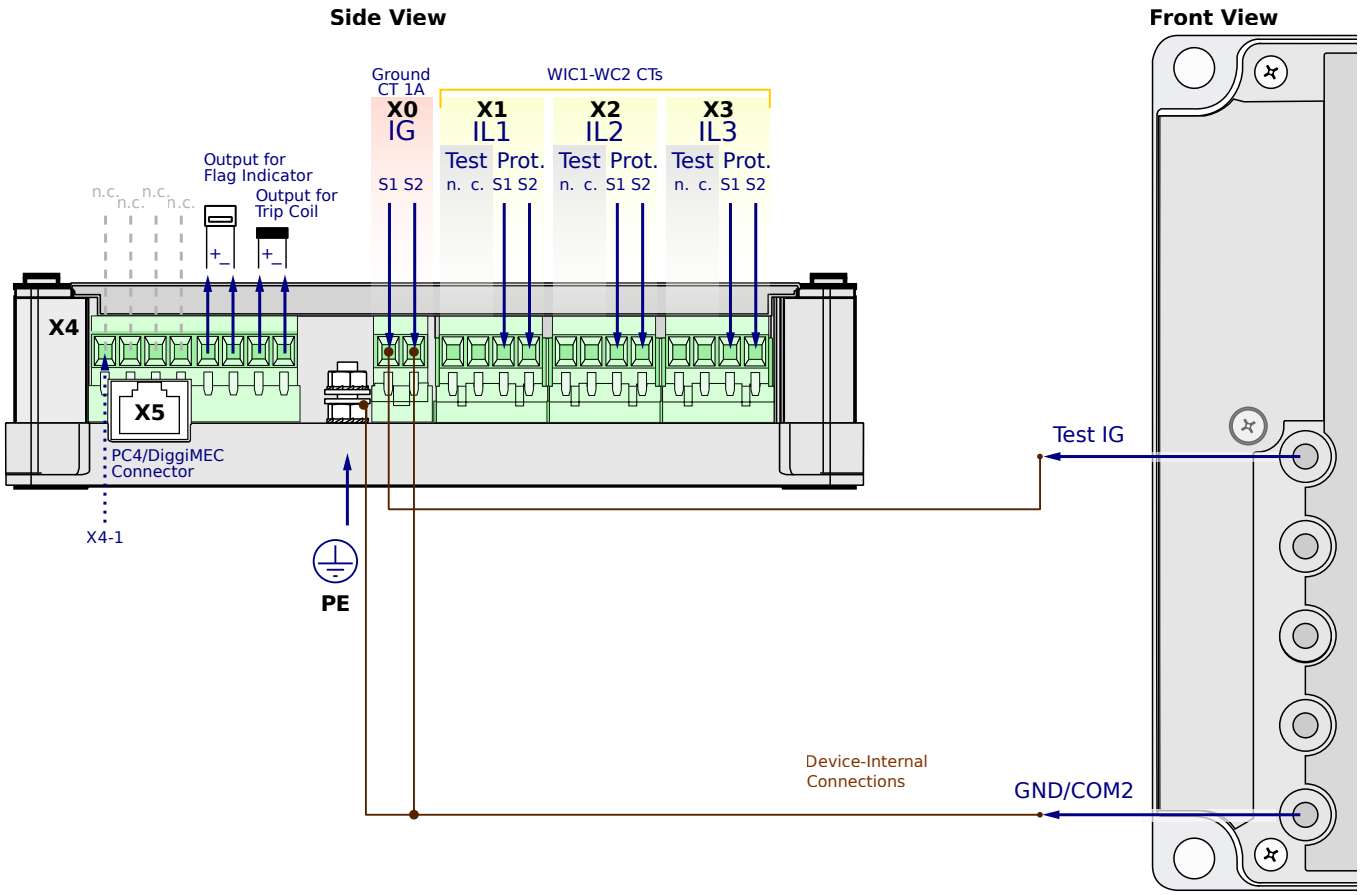


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2AAH

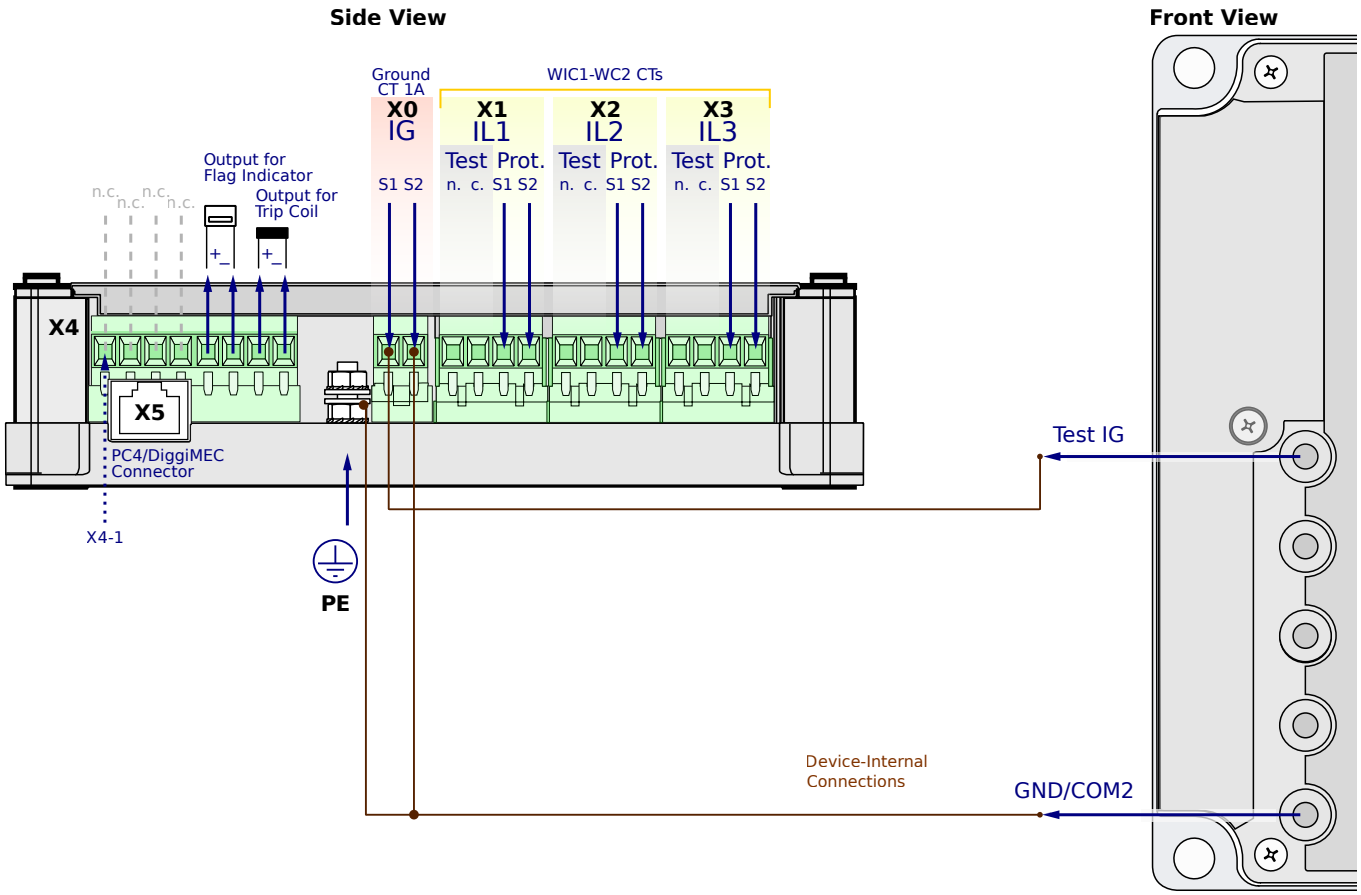


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2PA0

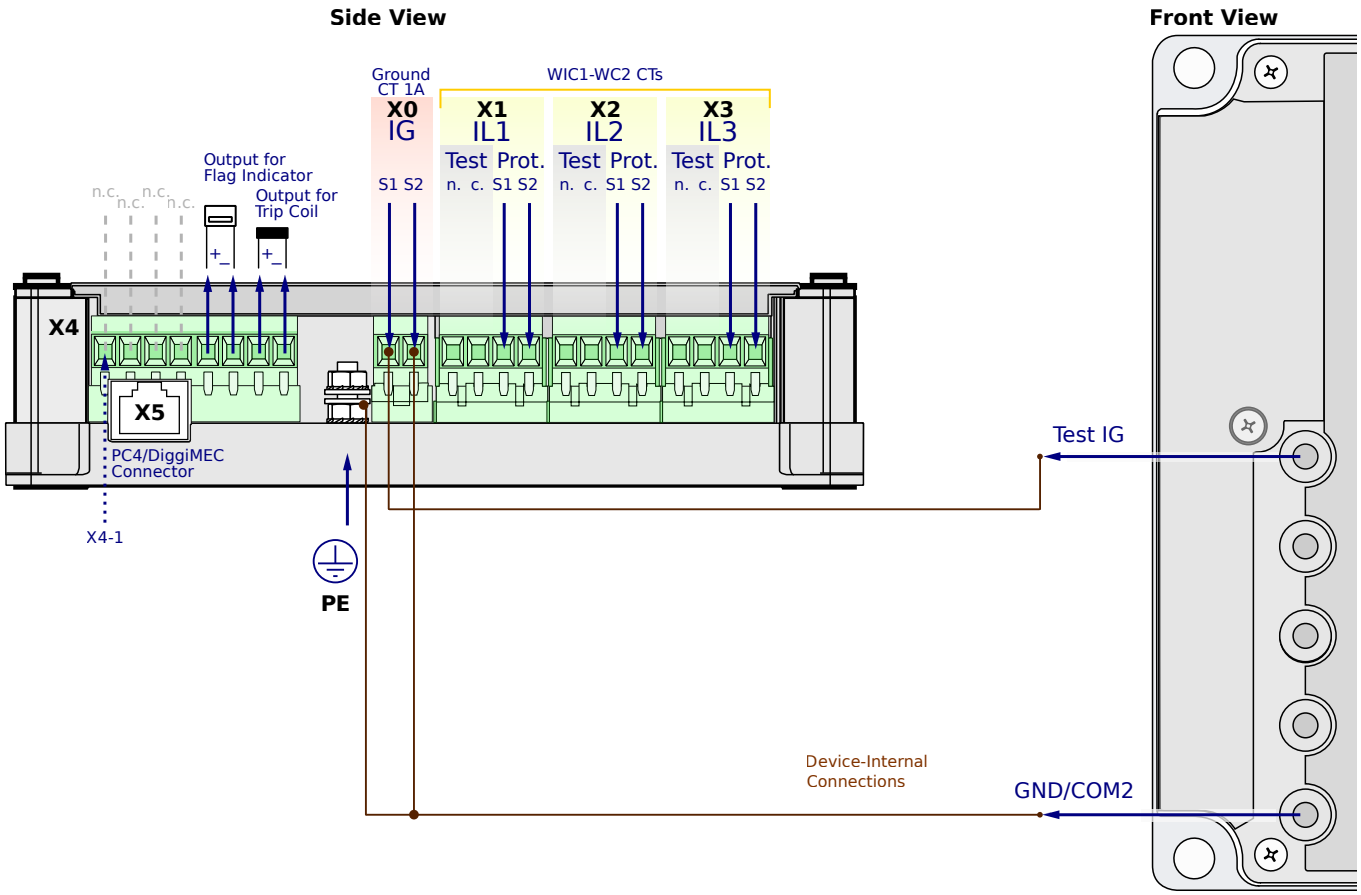


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CN2PAH

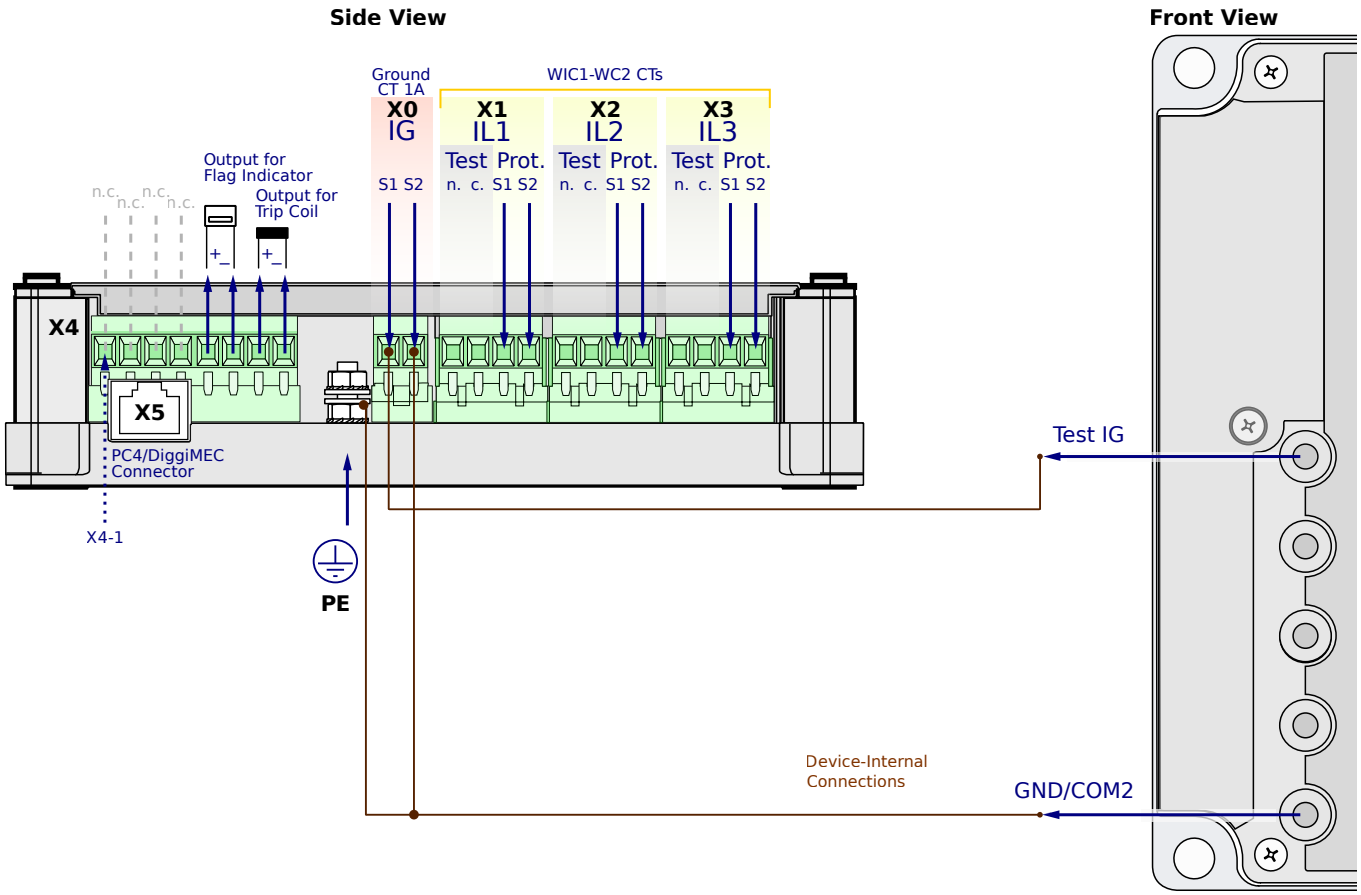


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1SA0

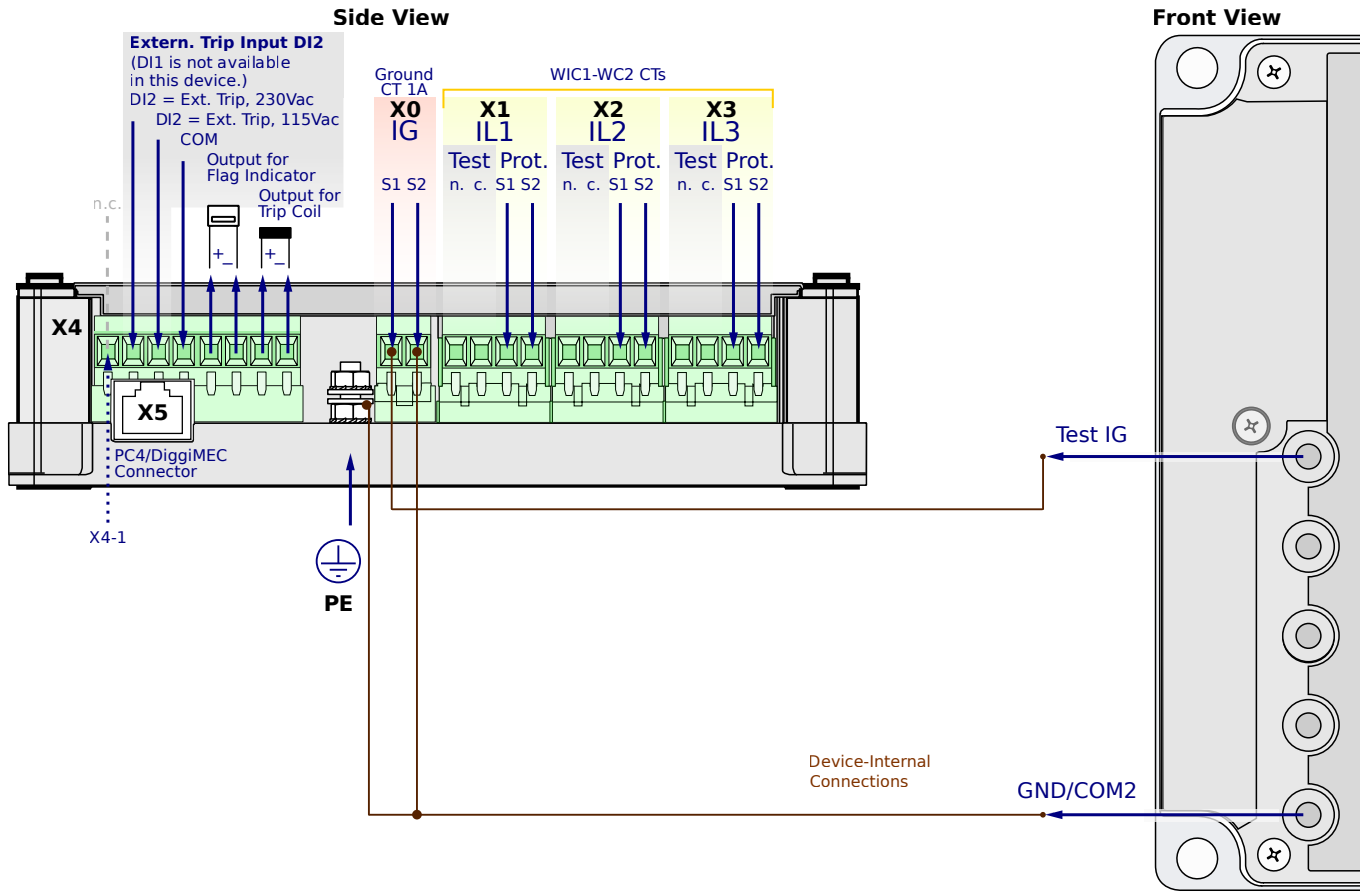


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1SAH

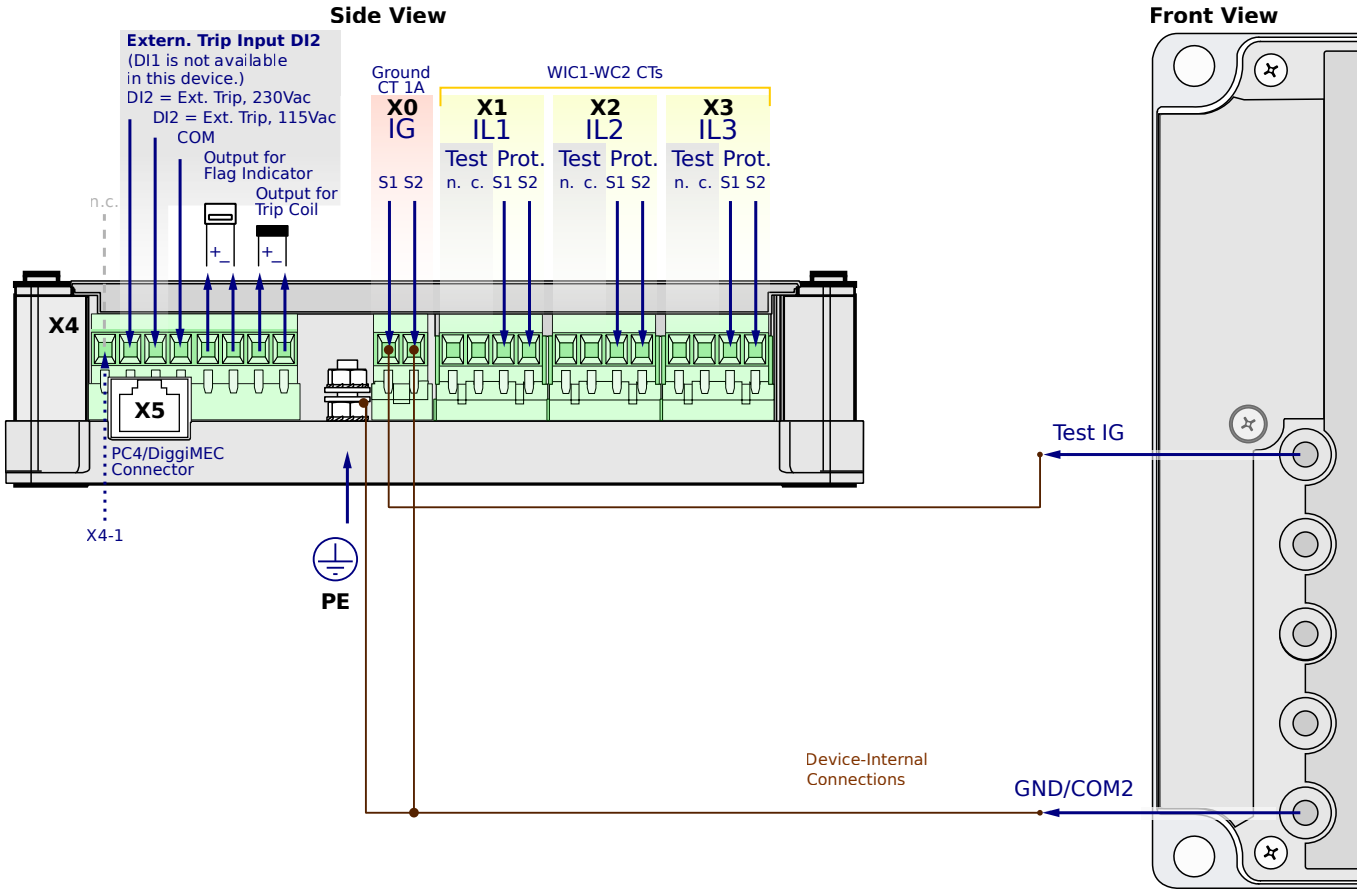


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1AA0

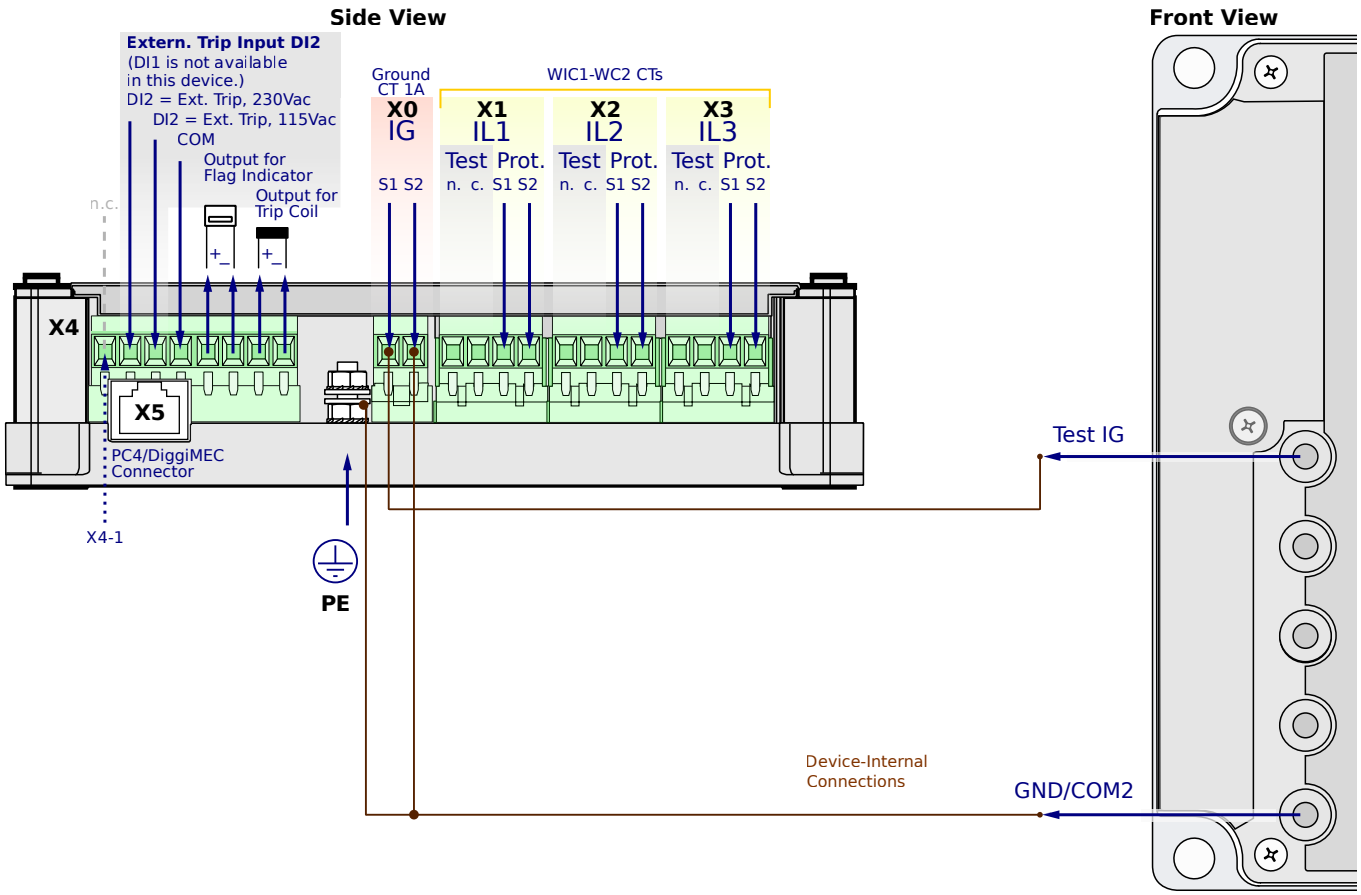


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1AAH

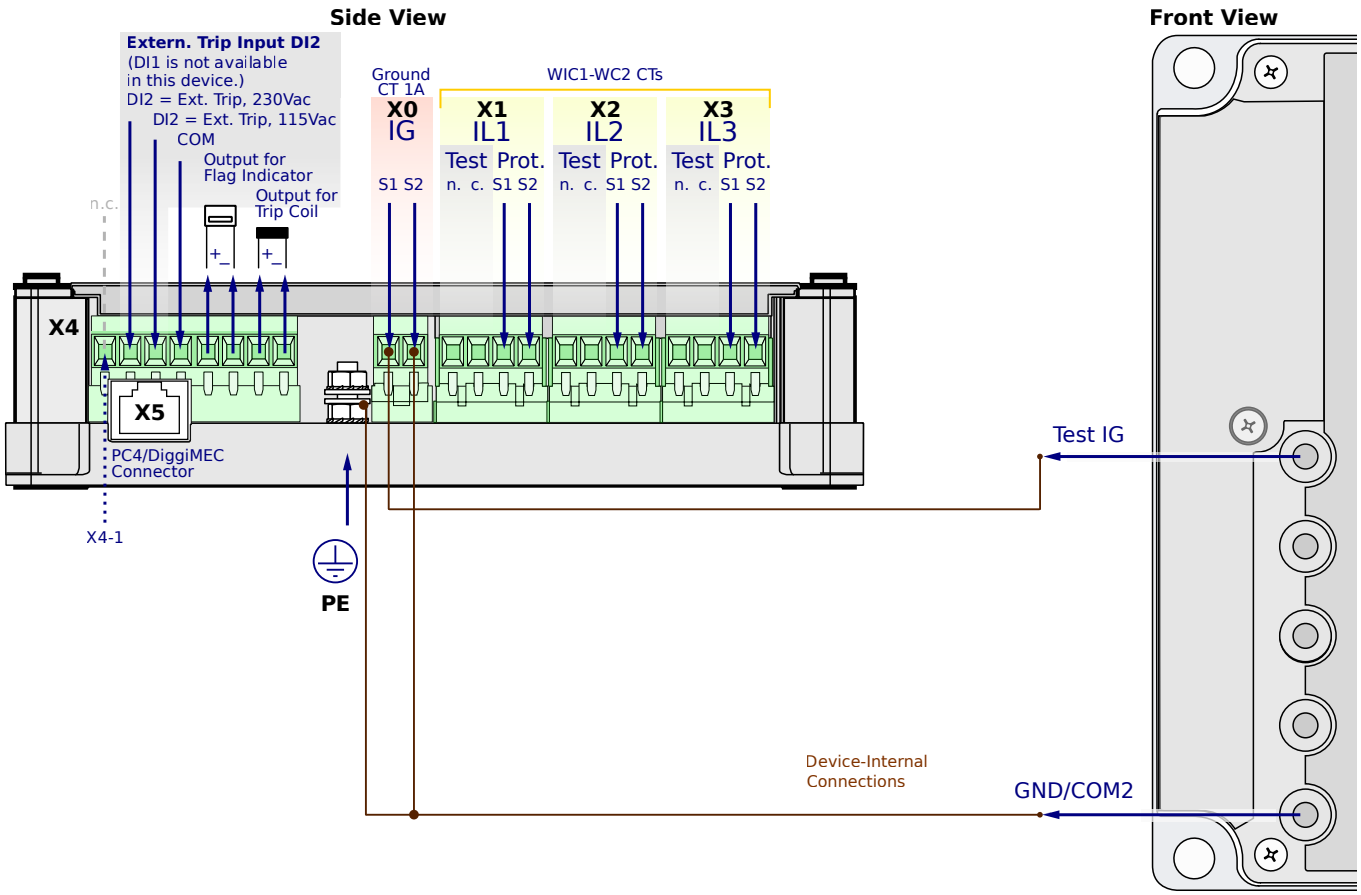


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1PA0

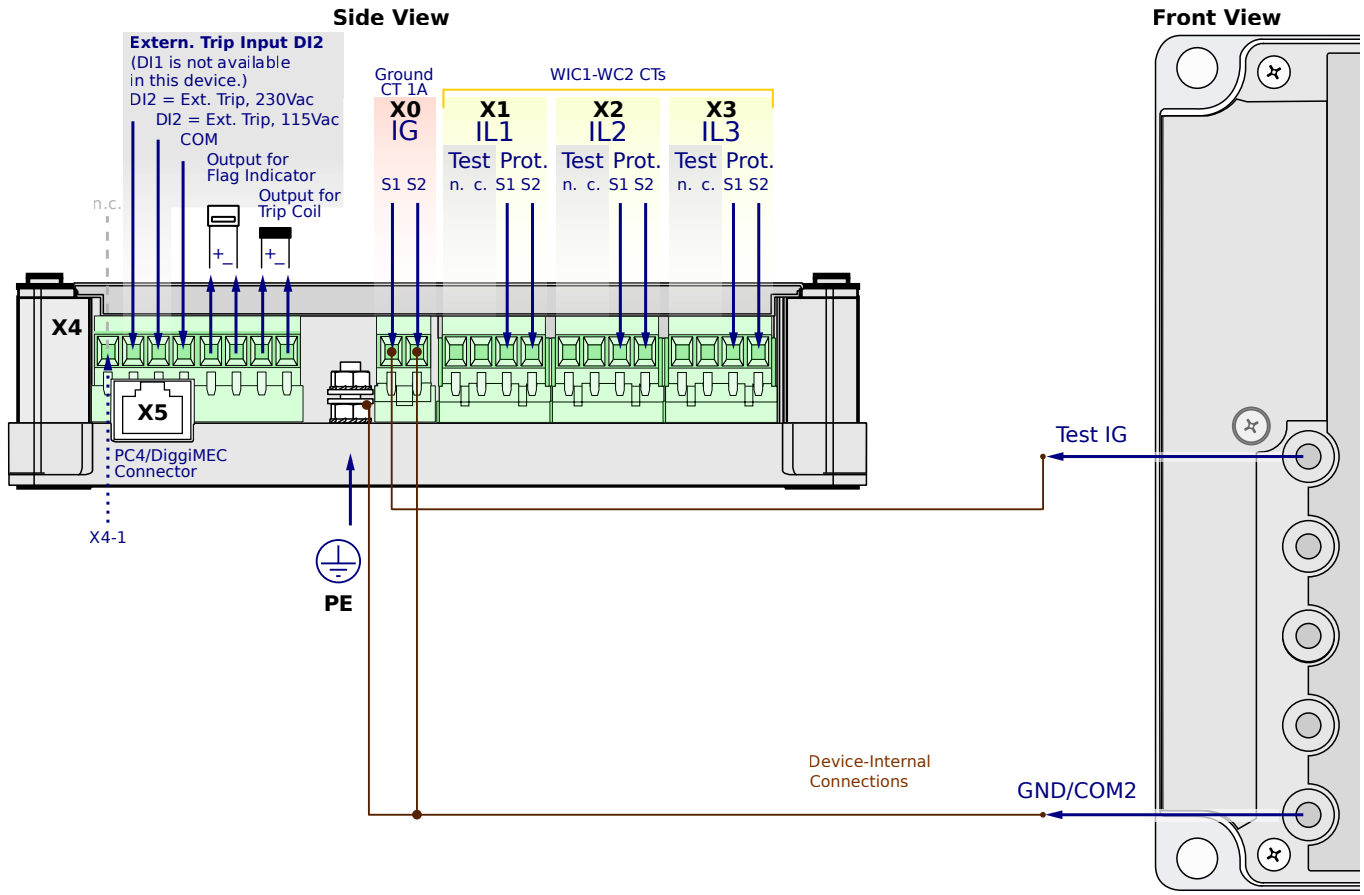


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF1PAH

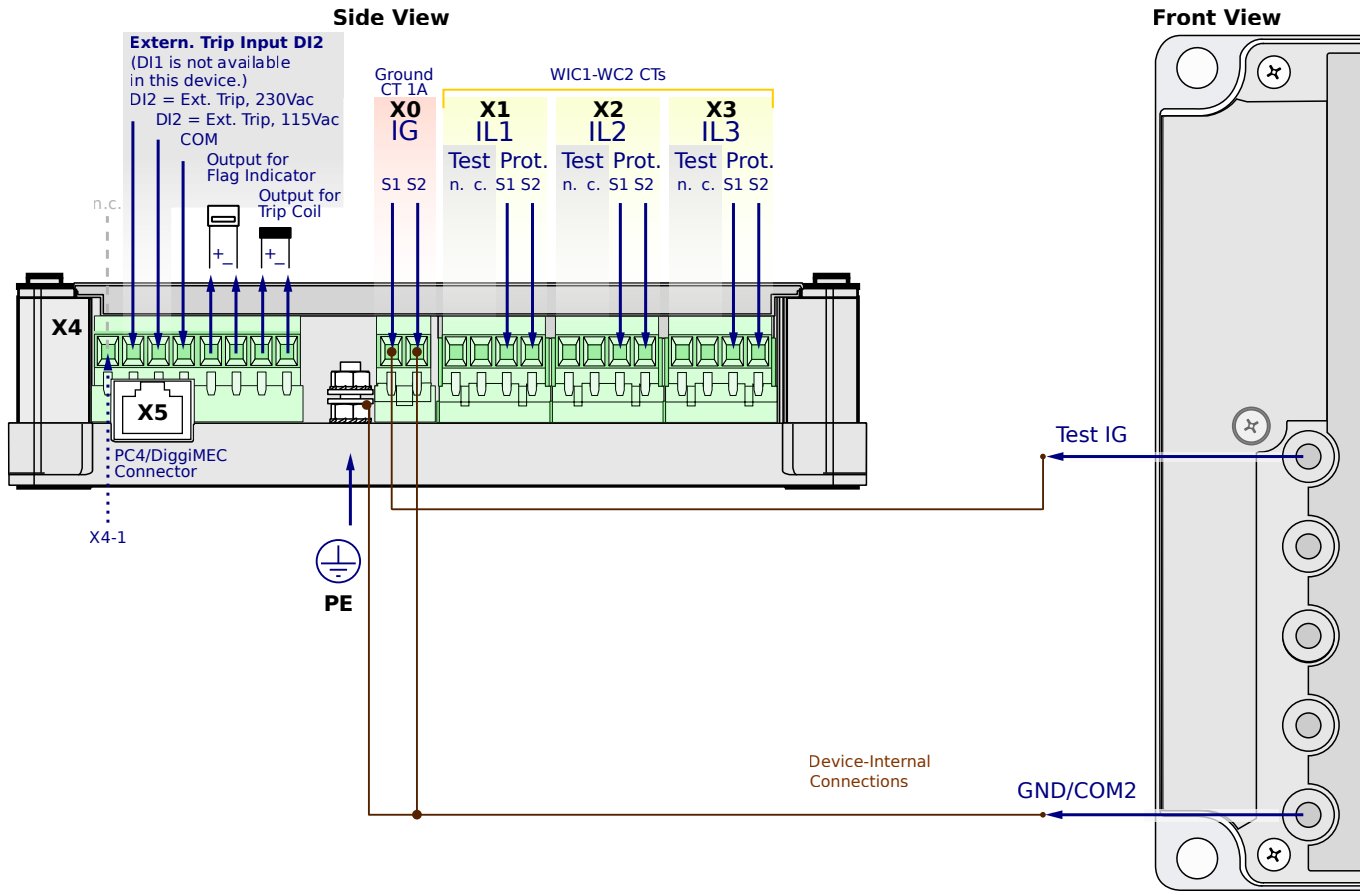


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2SA0

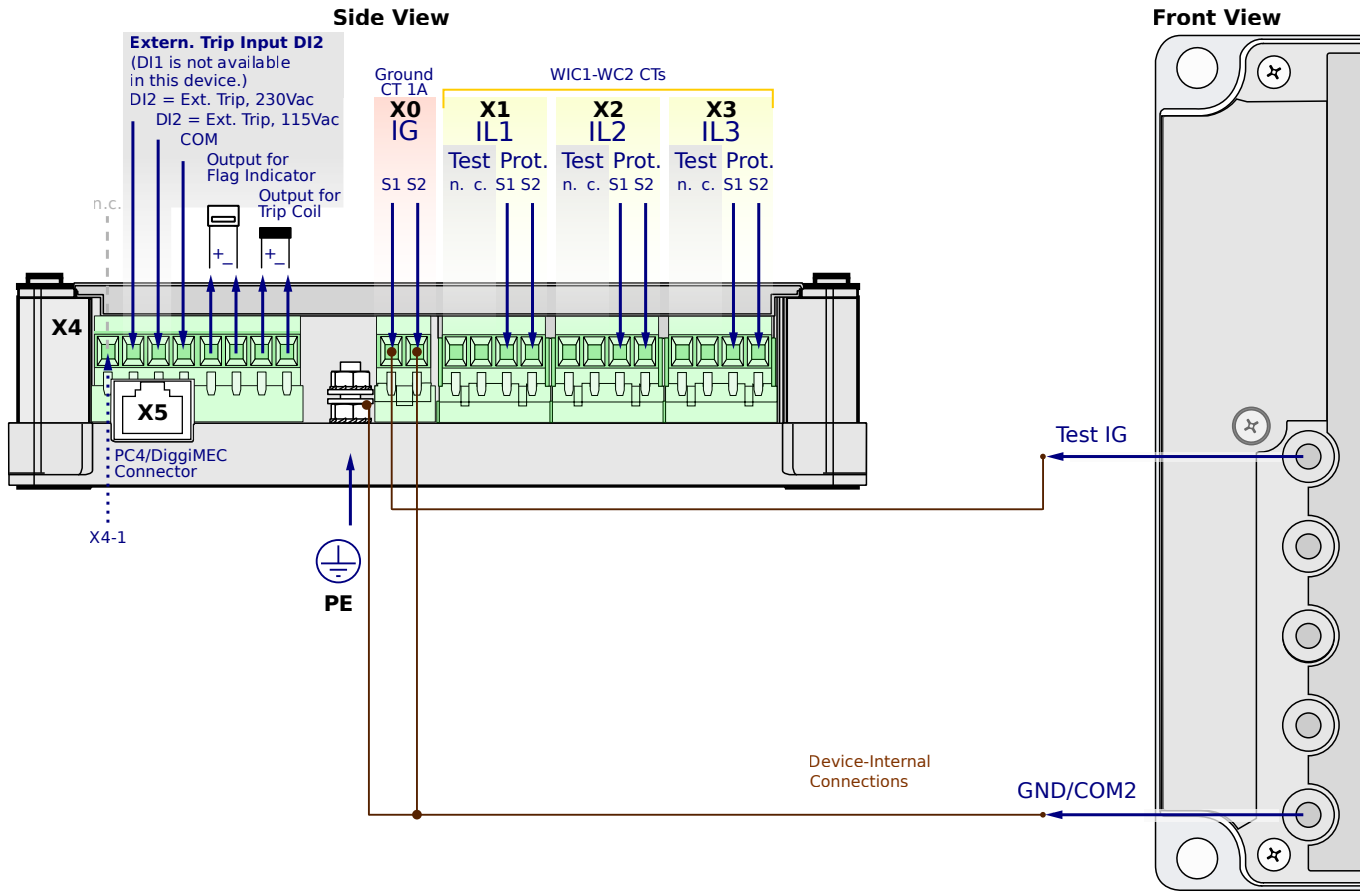


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2SAH

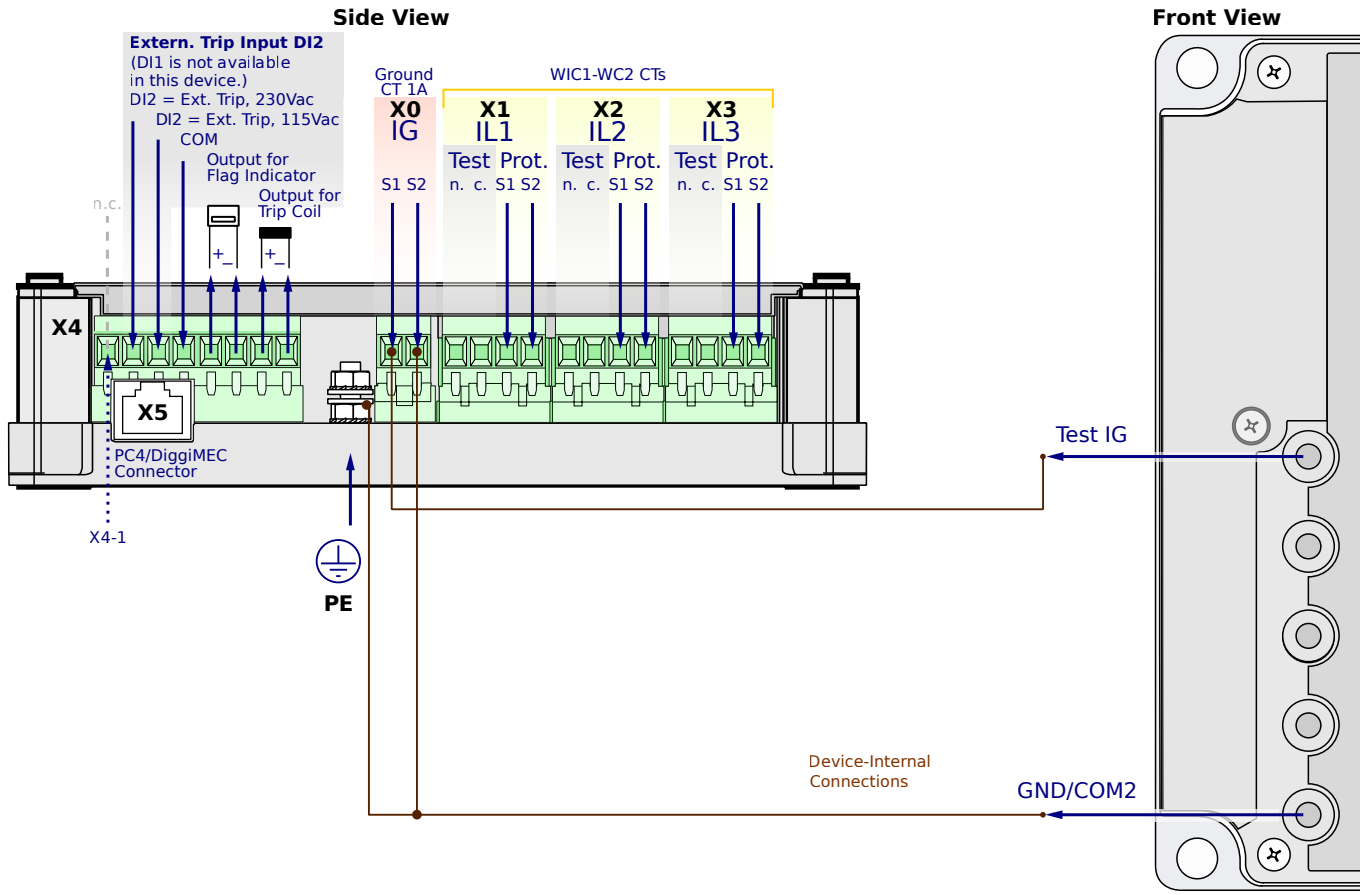


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2AA0

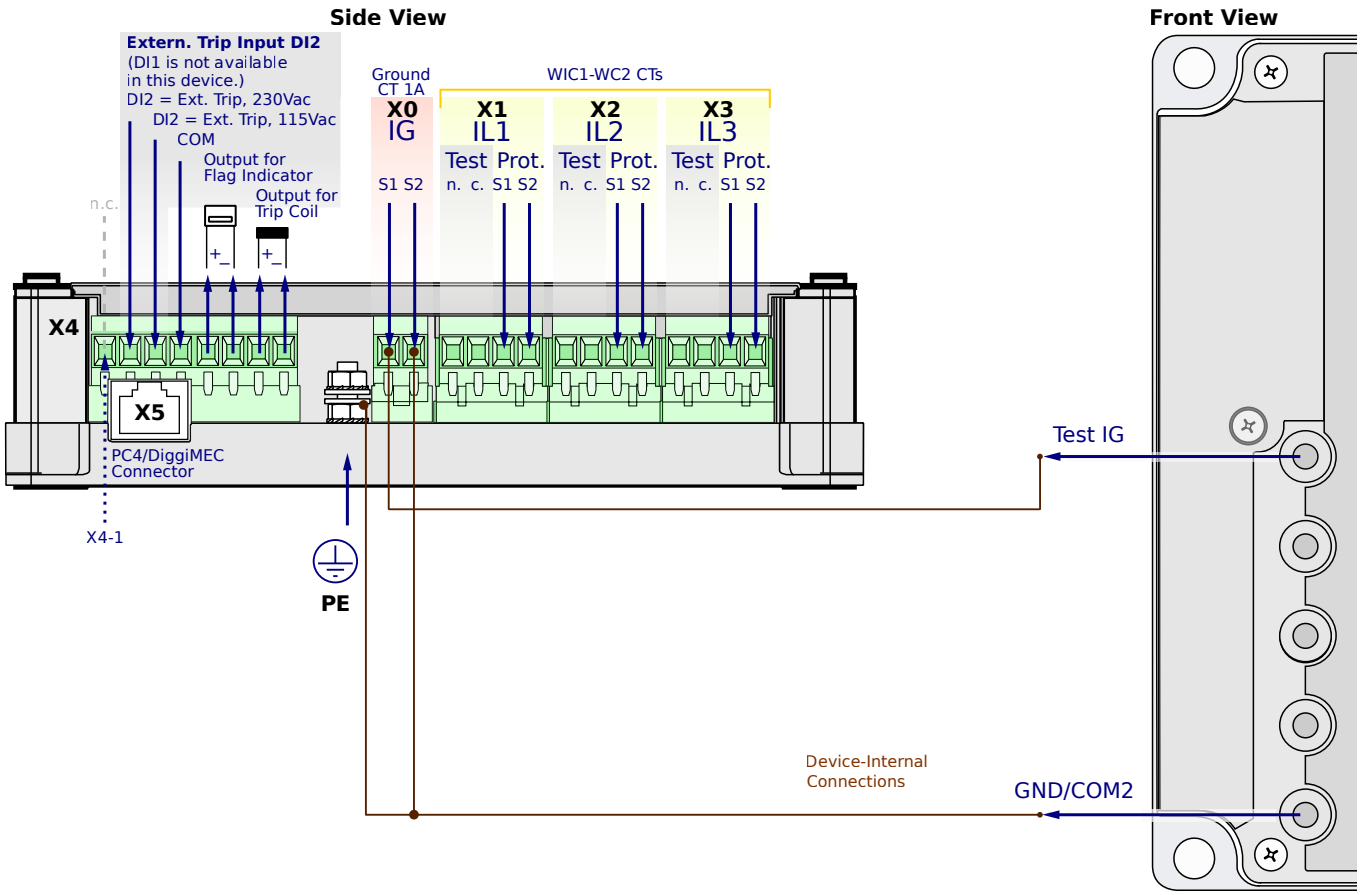


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2AAH

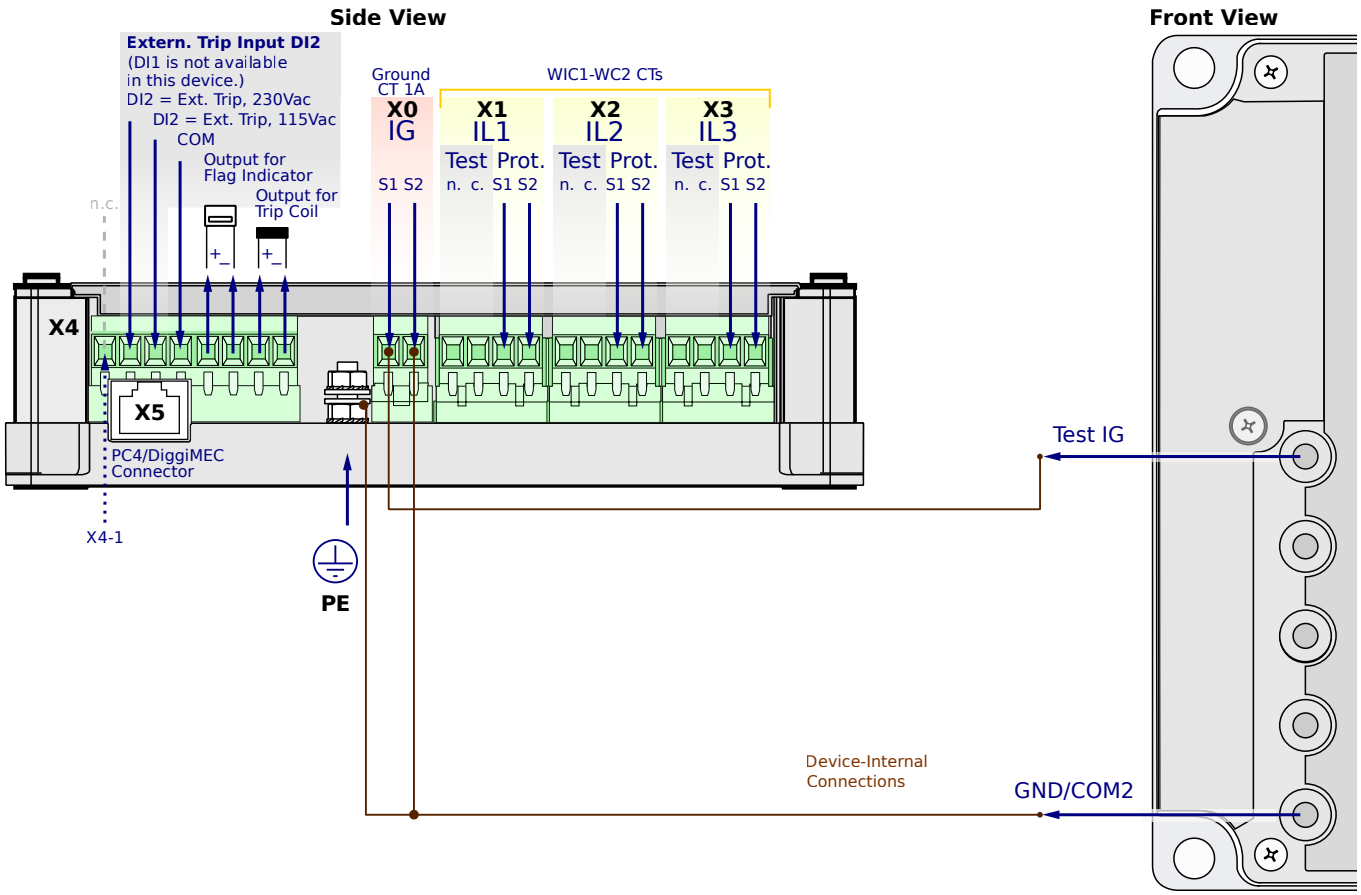


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2PA0

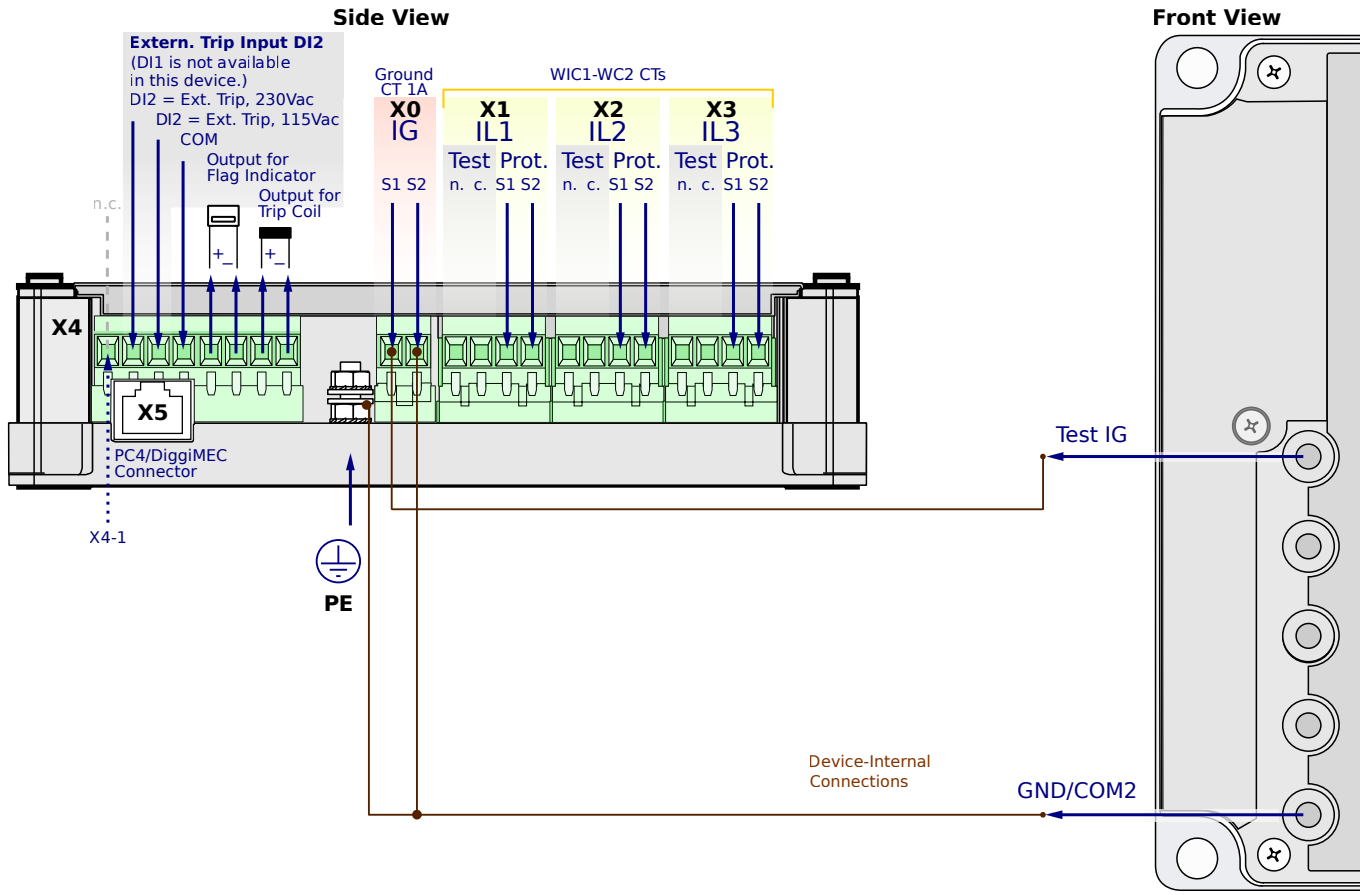


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CF2PAH

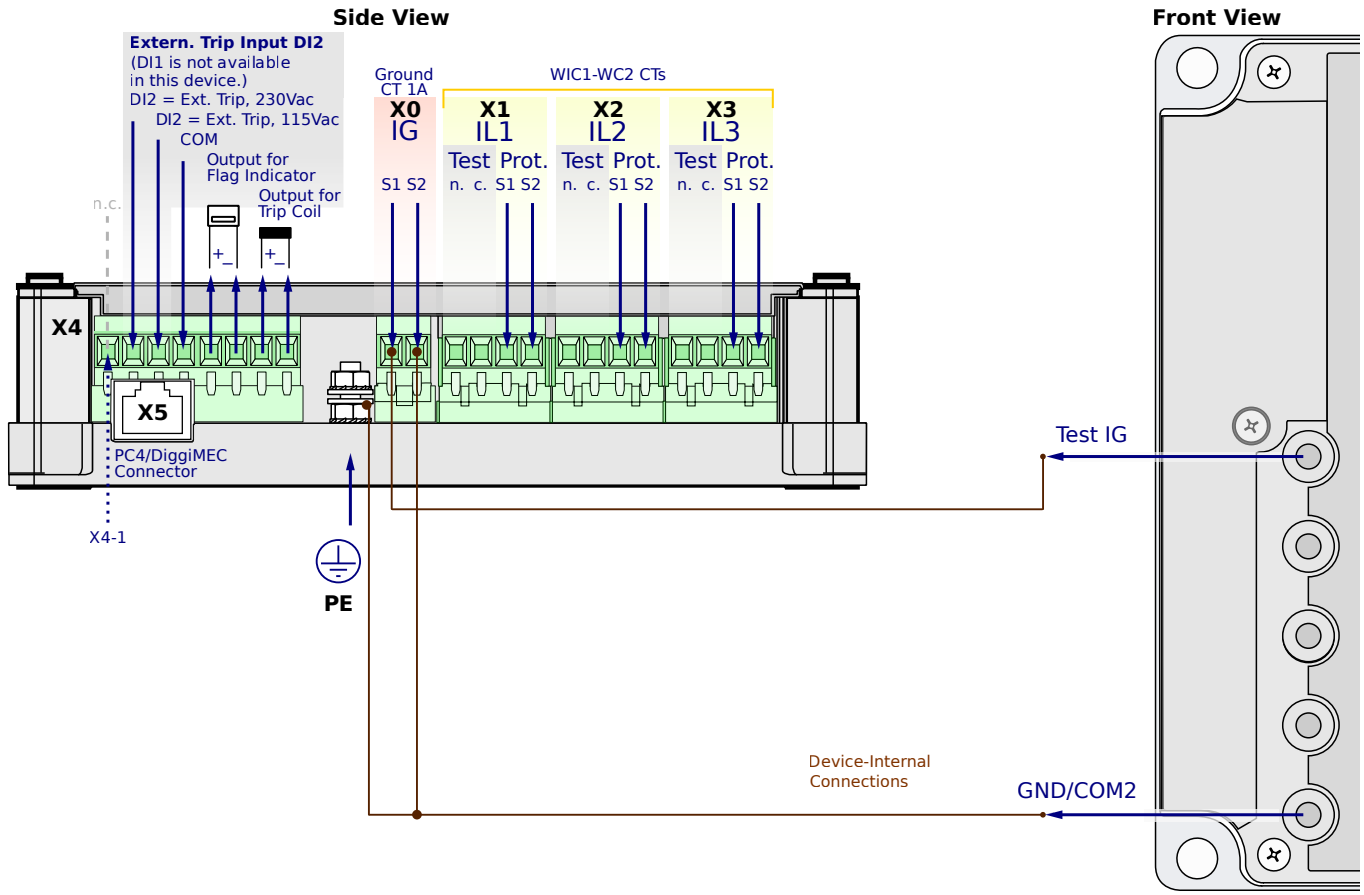


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1SA0

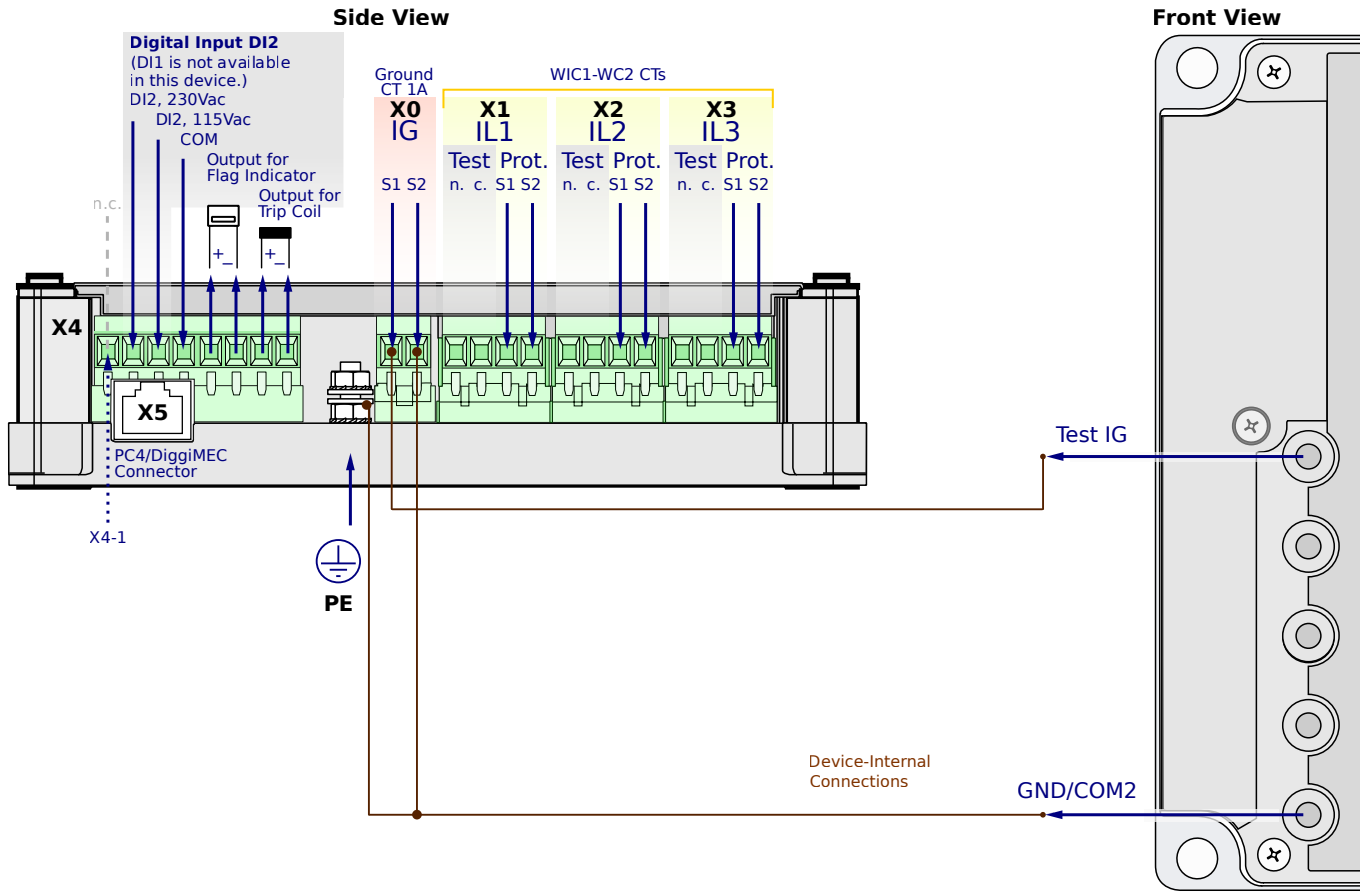


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1SAH

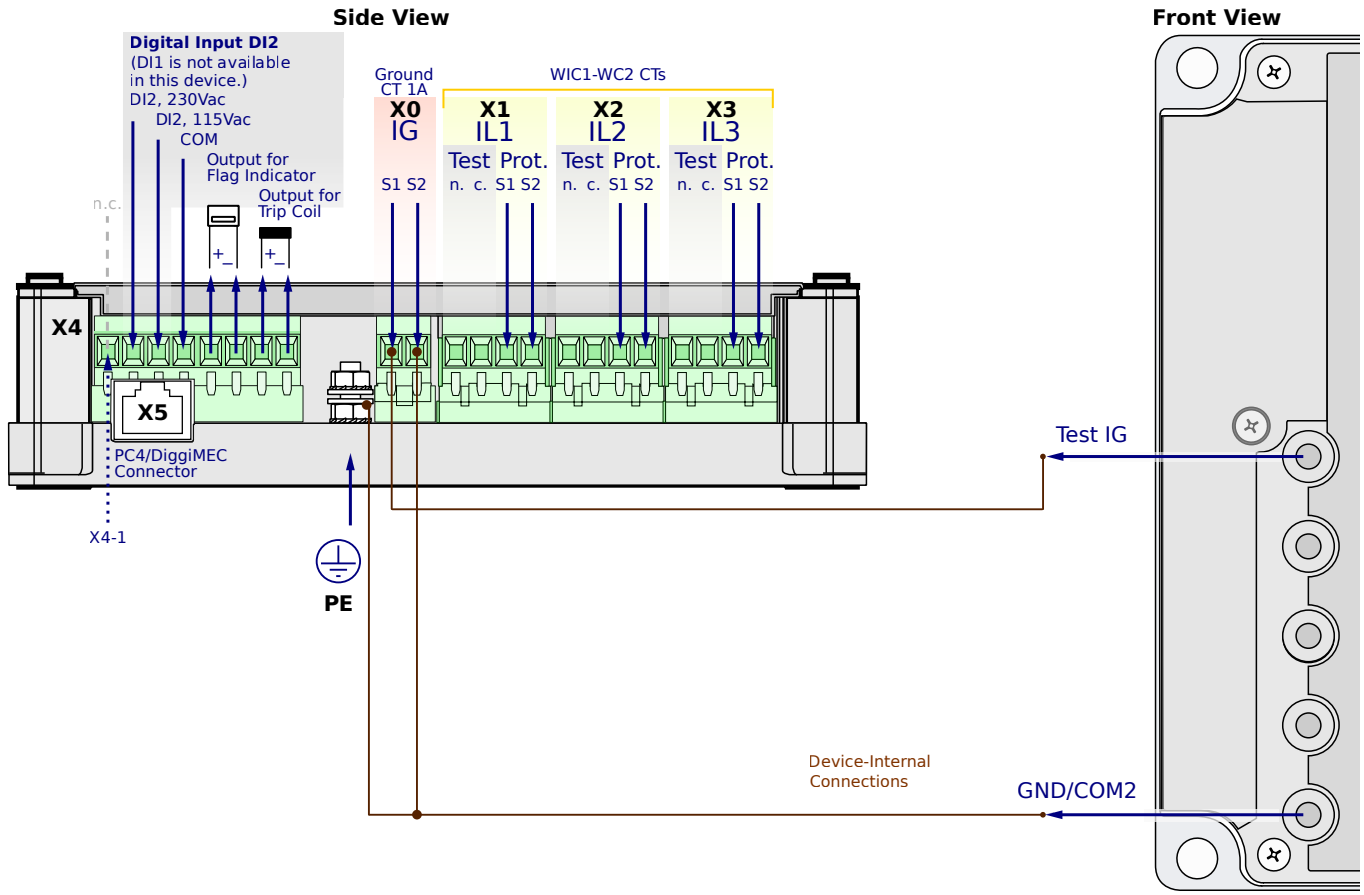


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1AA0

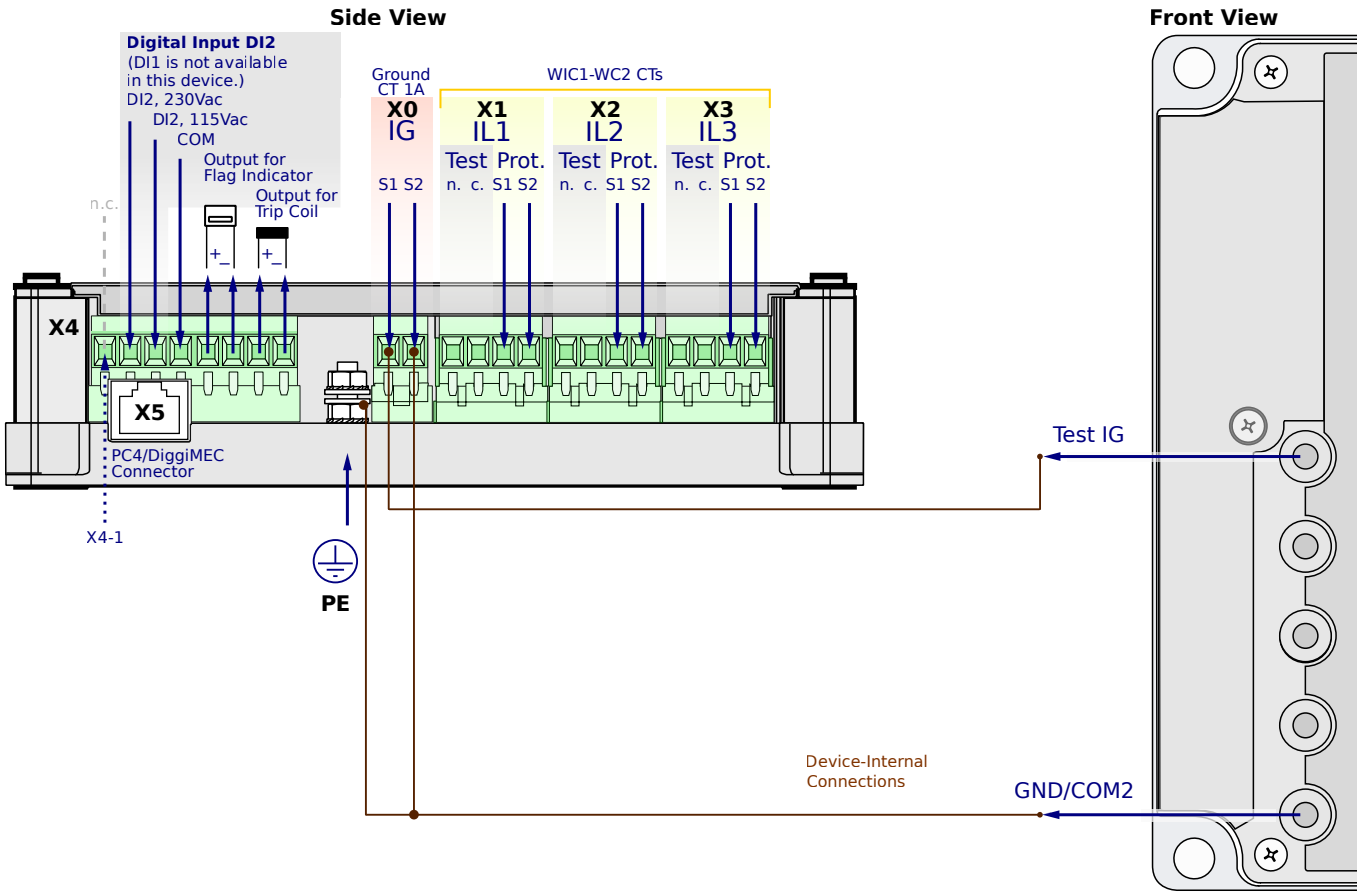


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1AAH

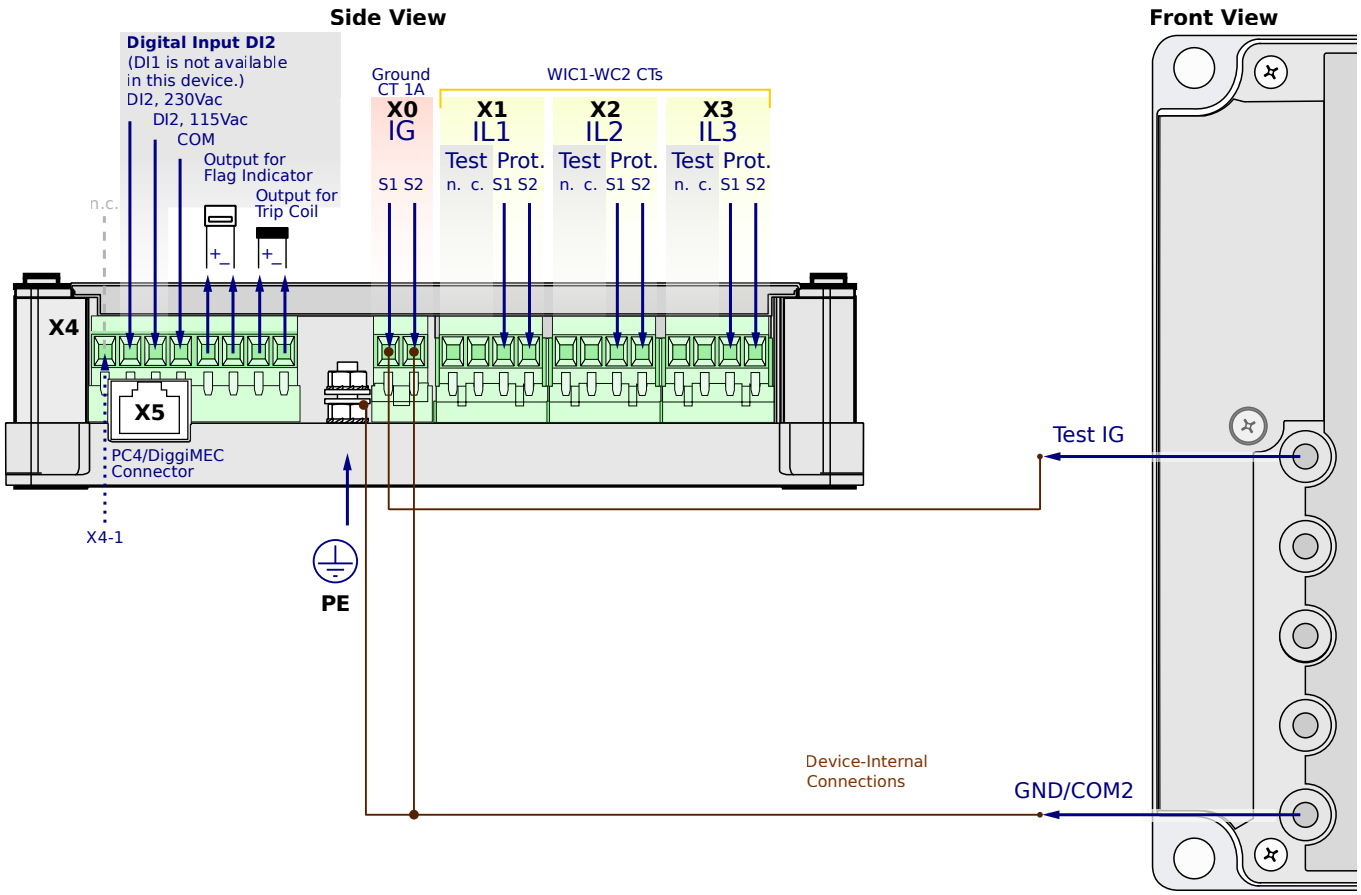


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1PA0

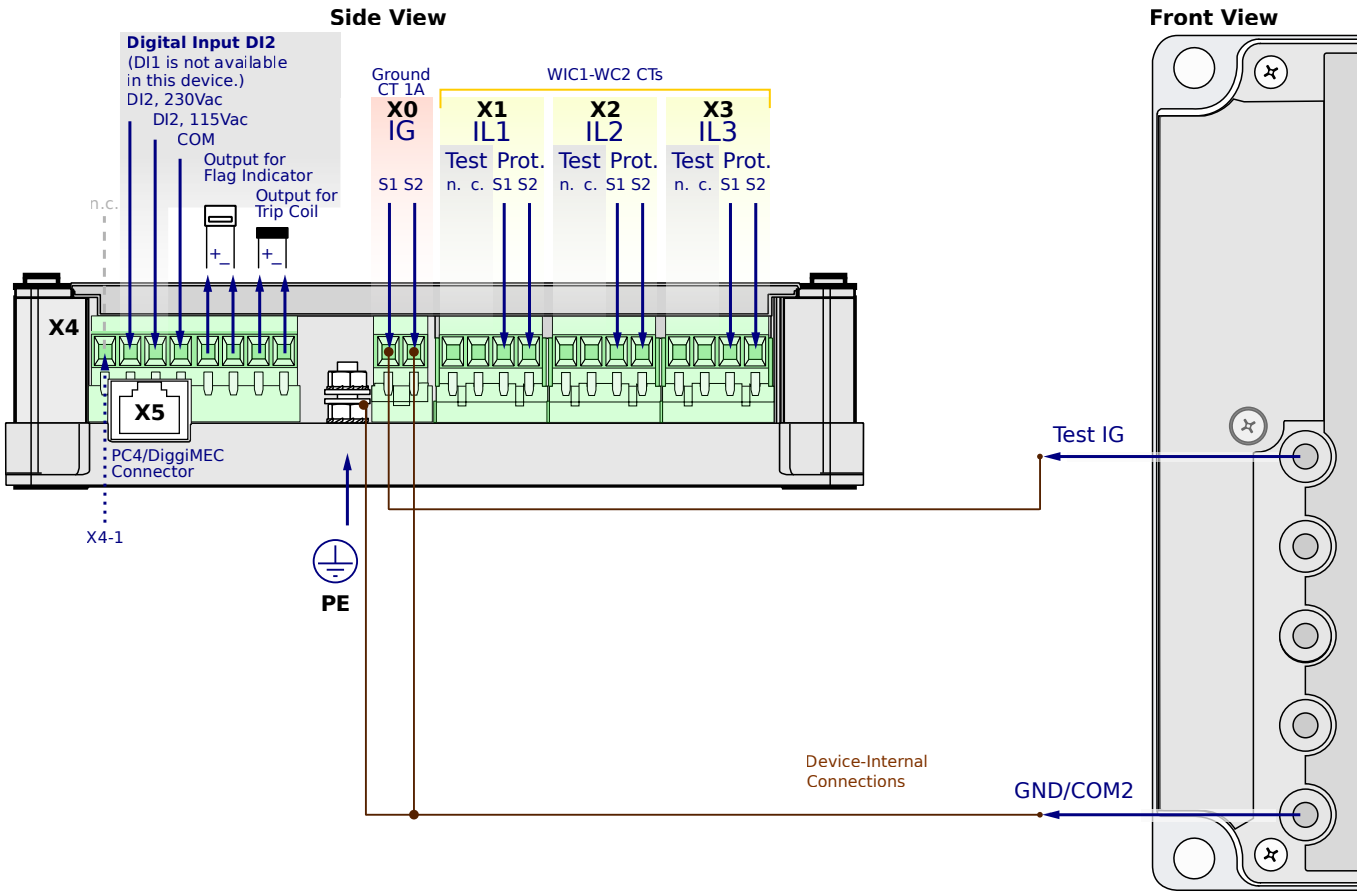


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC1PAH

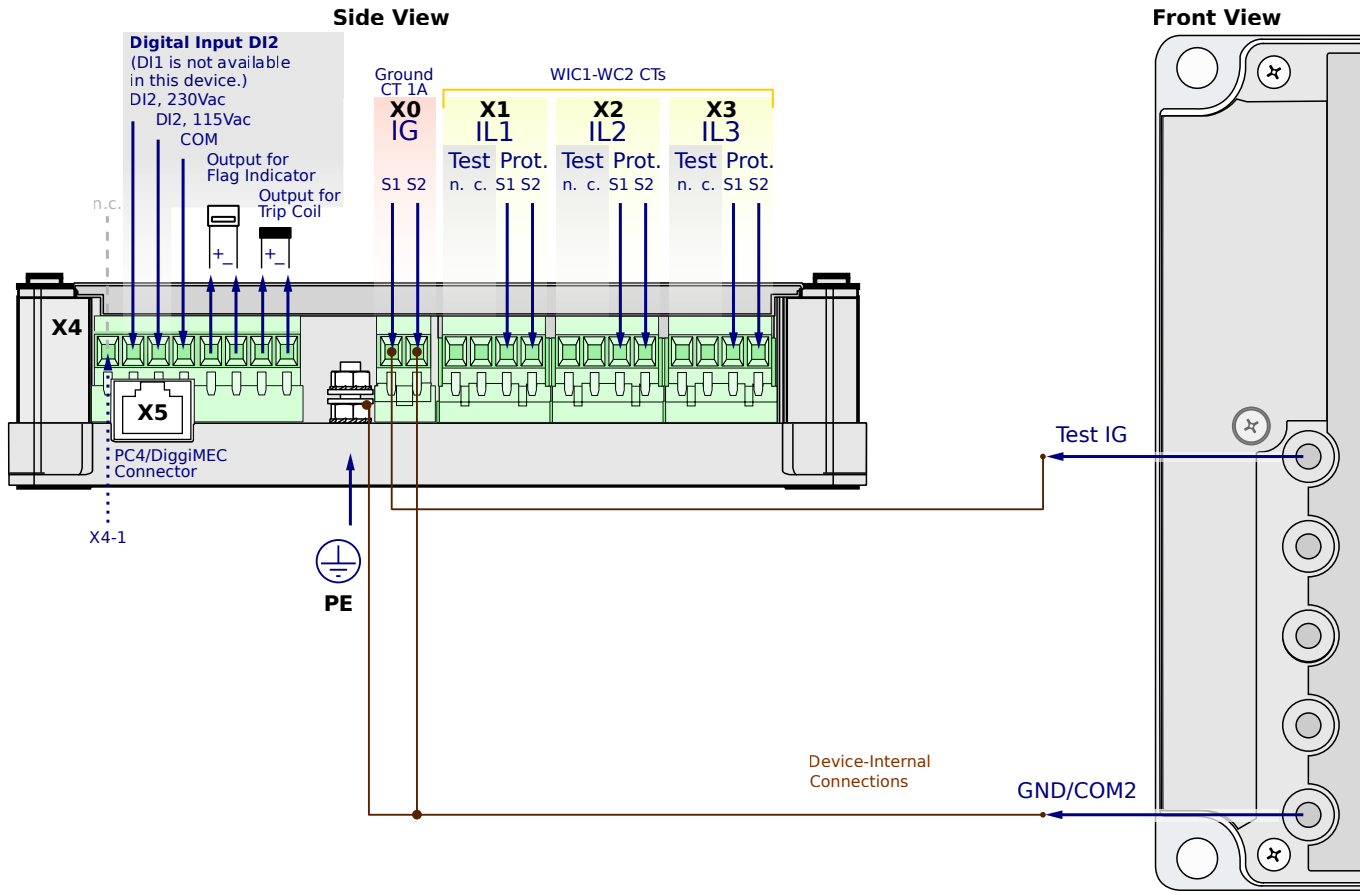


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2SA0

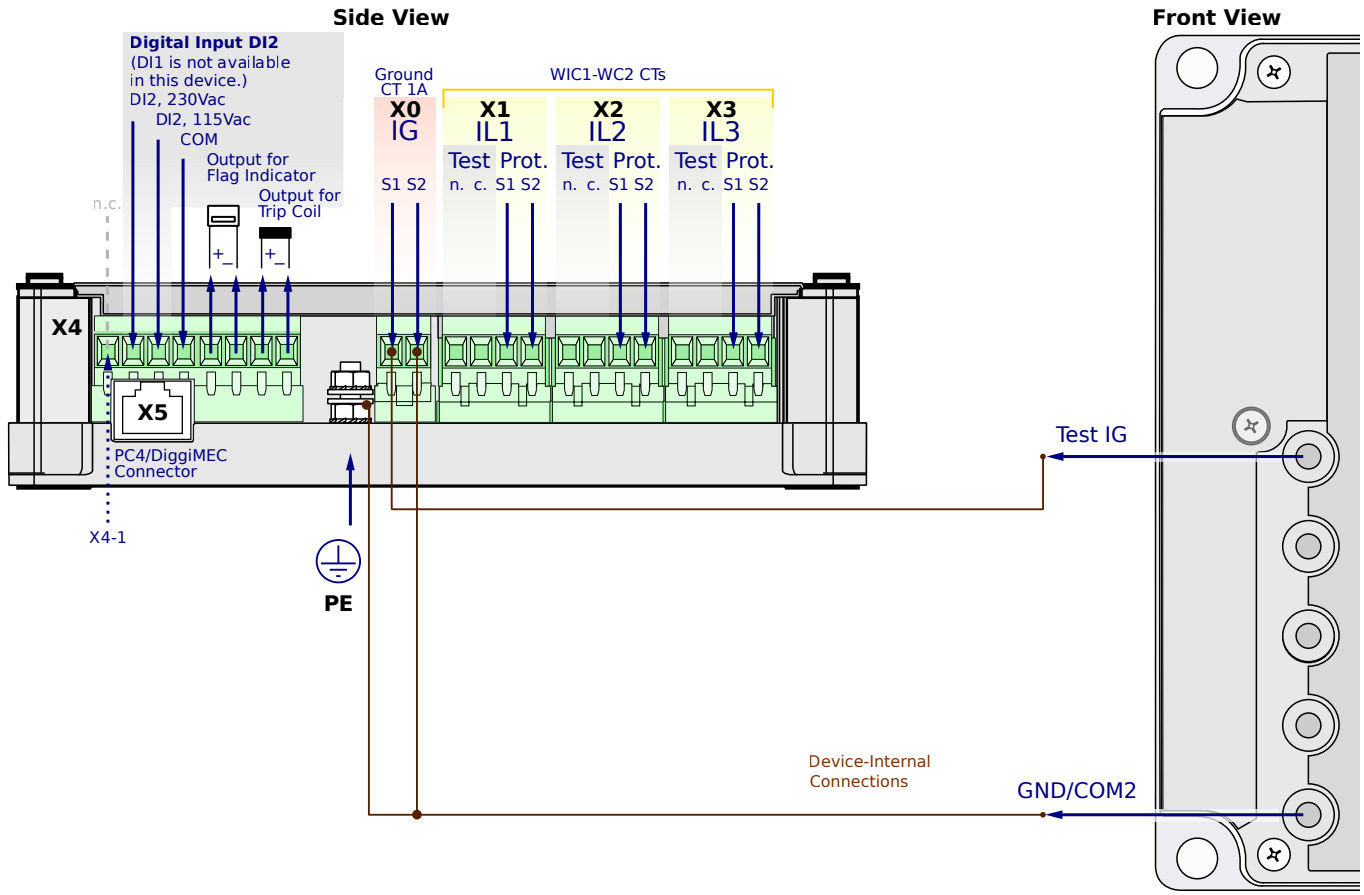


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2SAH

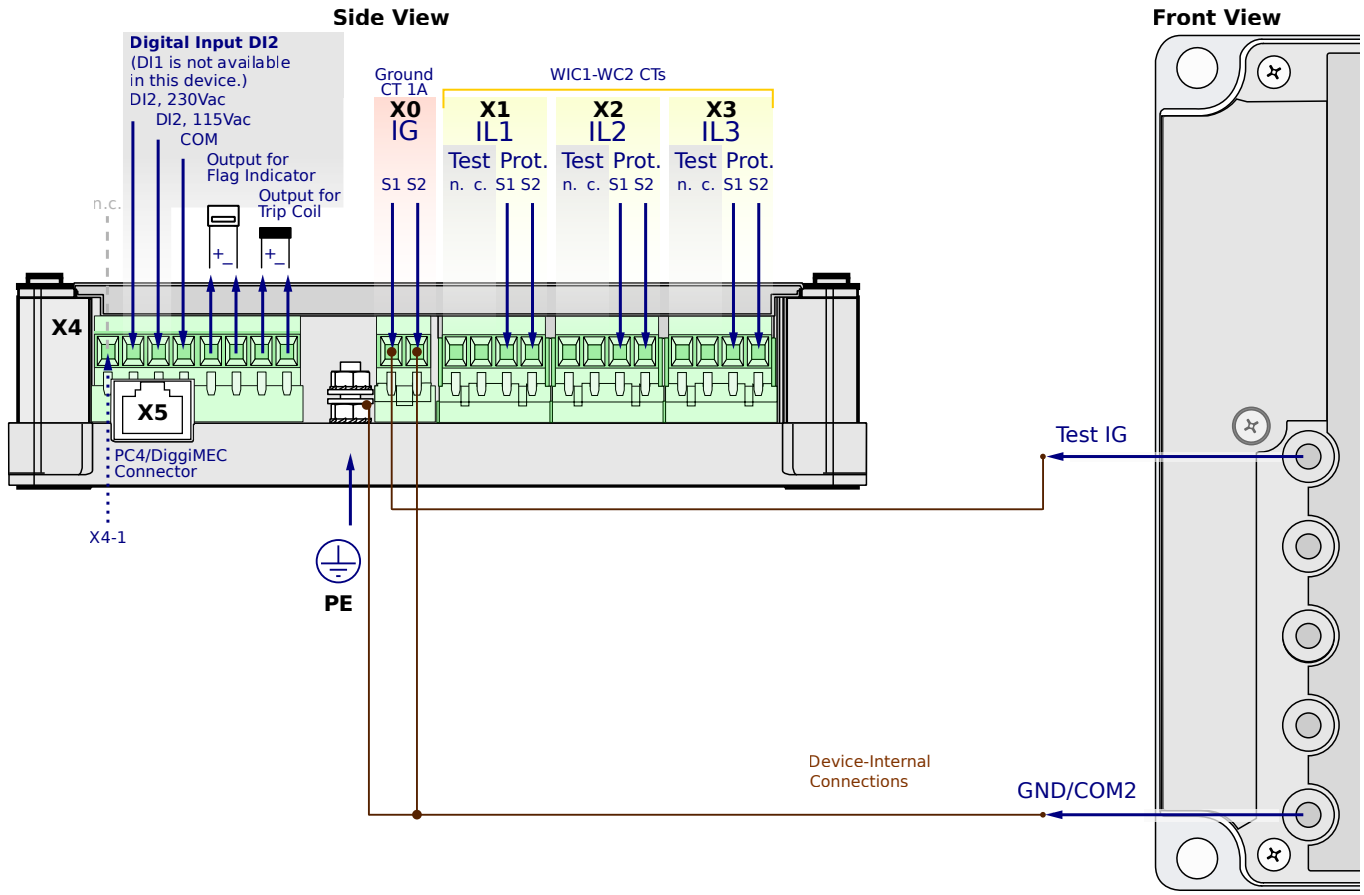


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2AA0

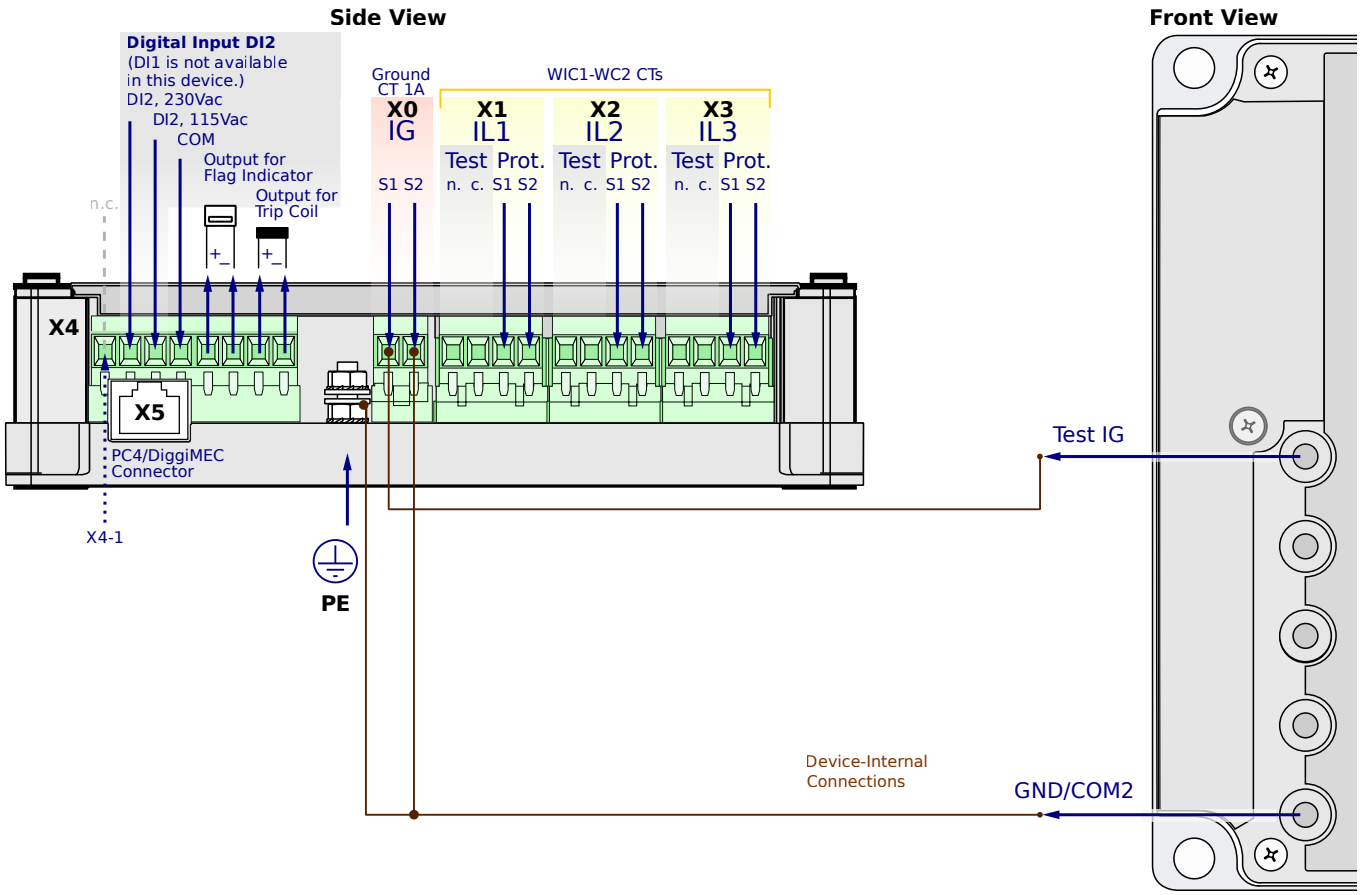


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2AAH

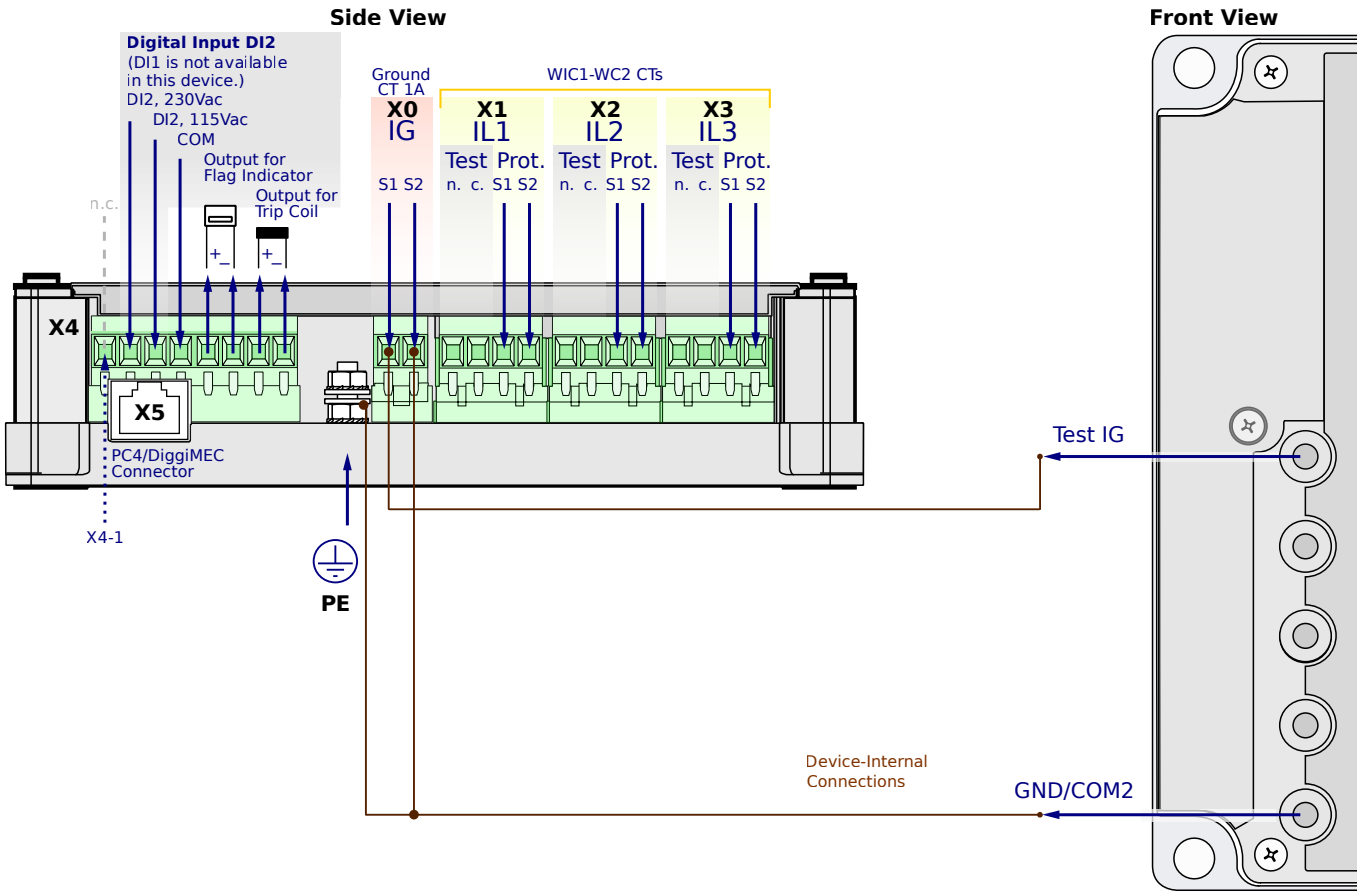


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2PA0

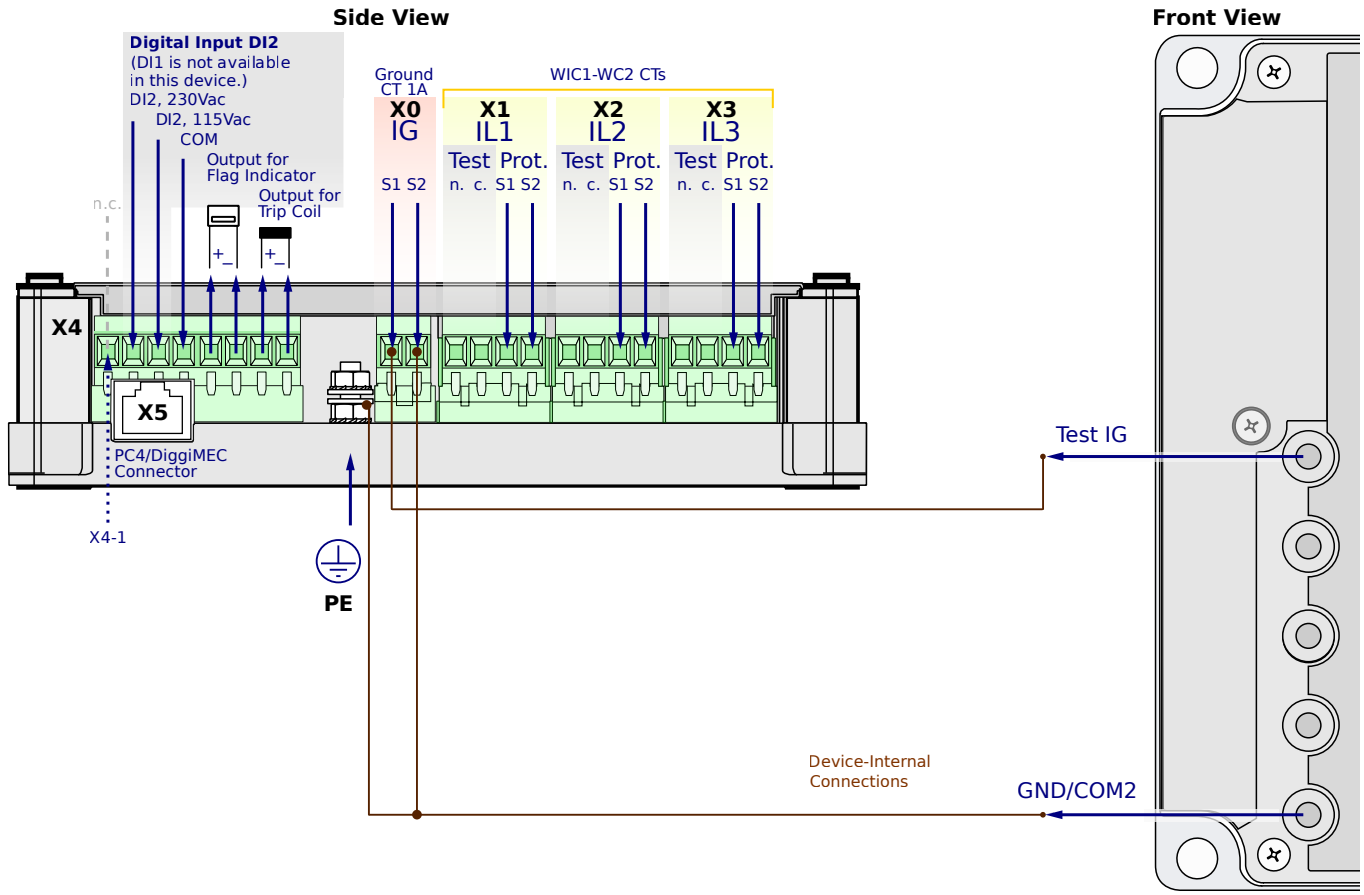


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-1DG0CC2PAH

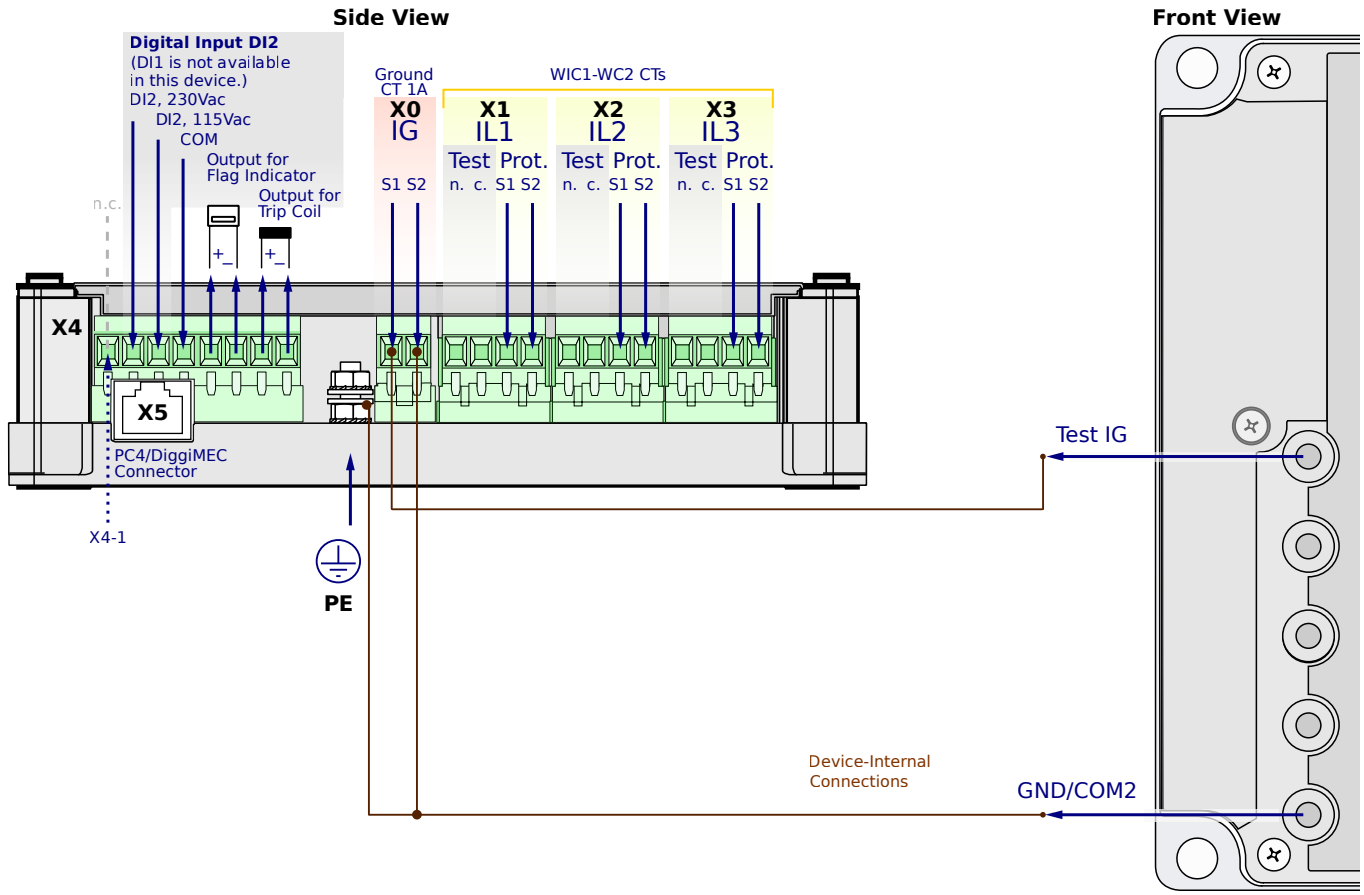


CT-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0SA0

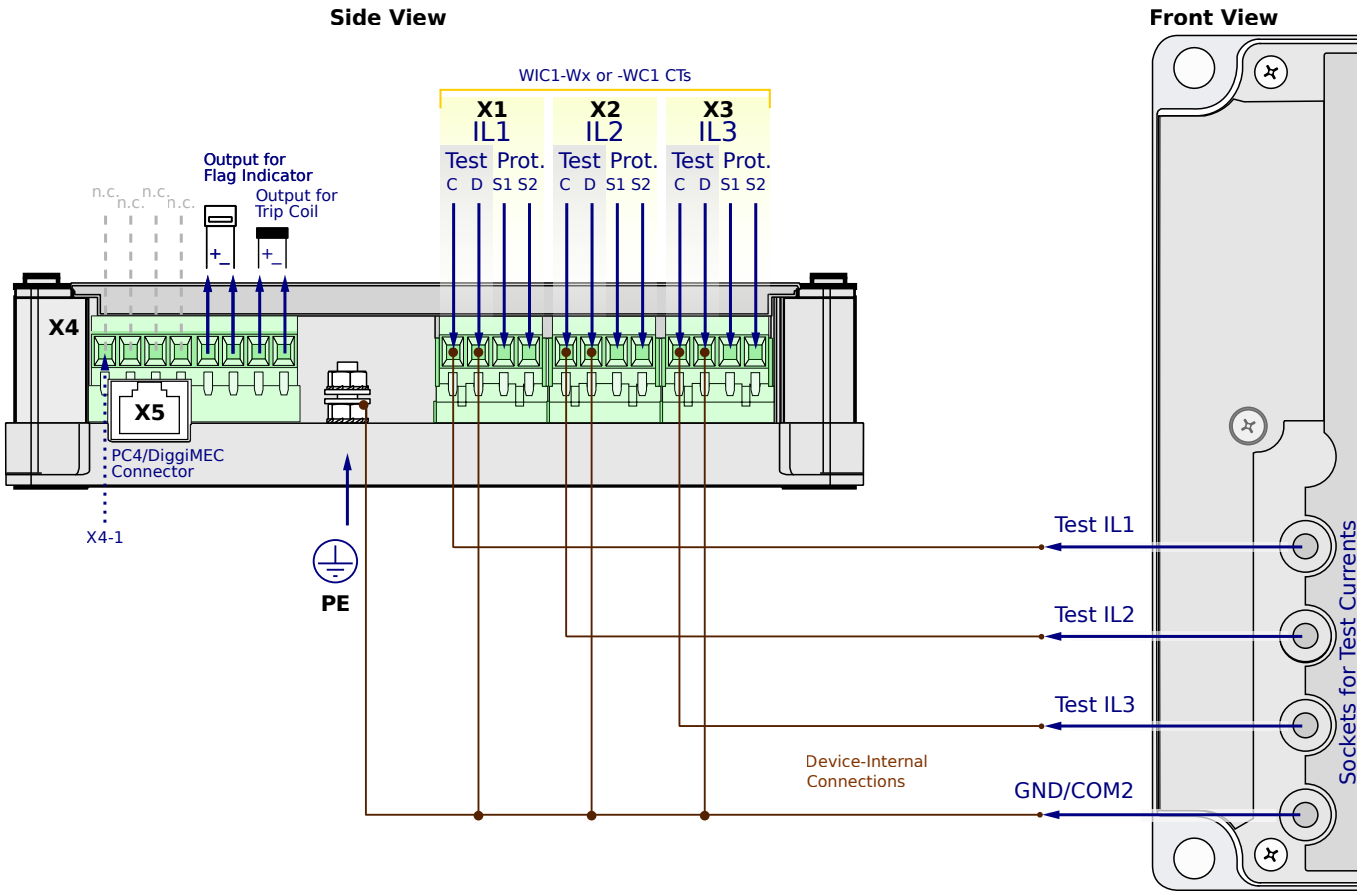


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0SAH

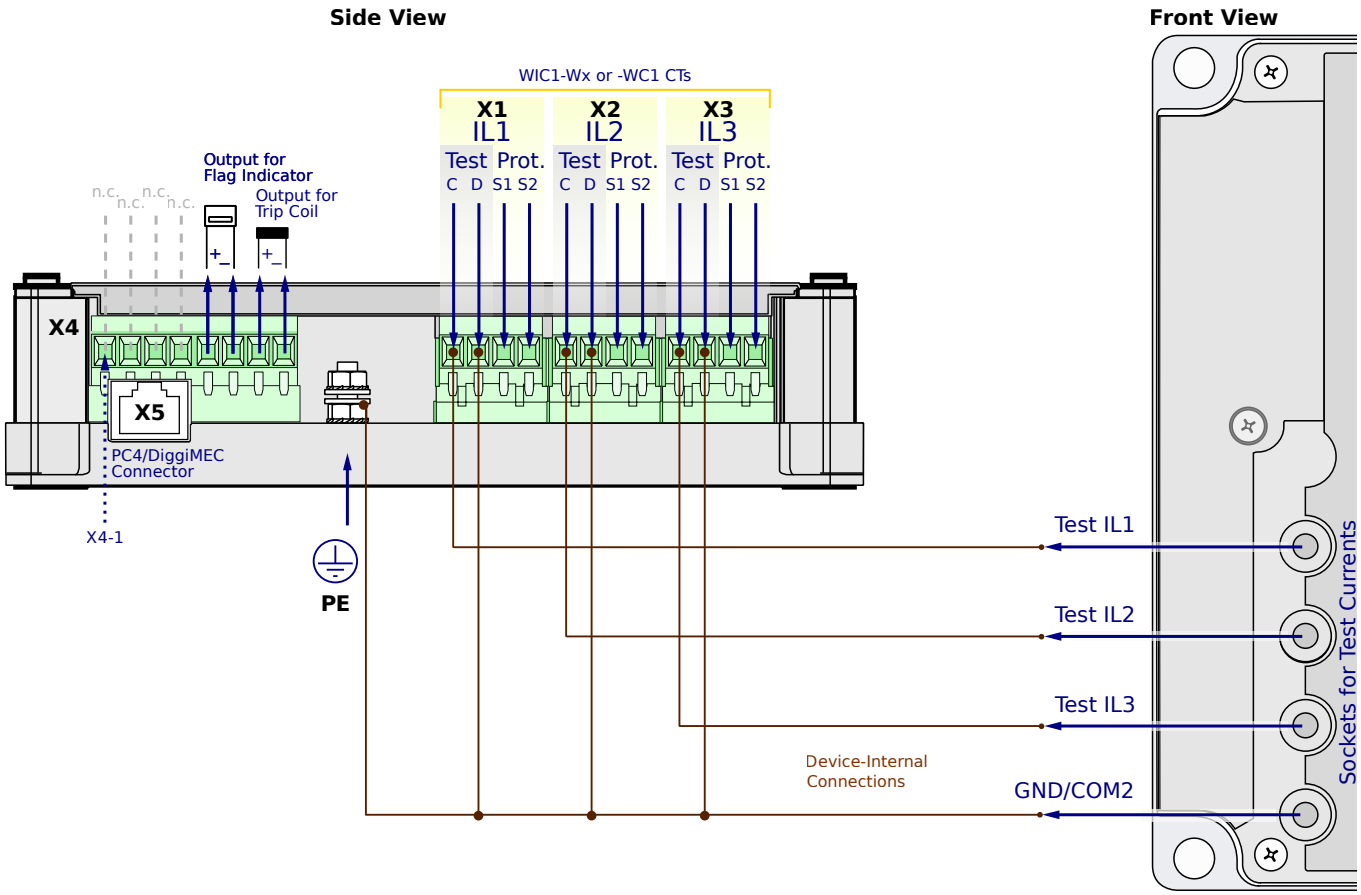


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0AA0

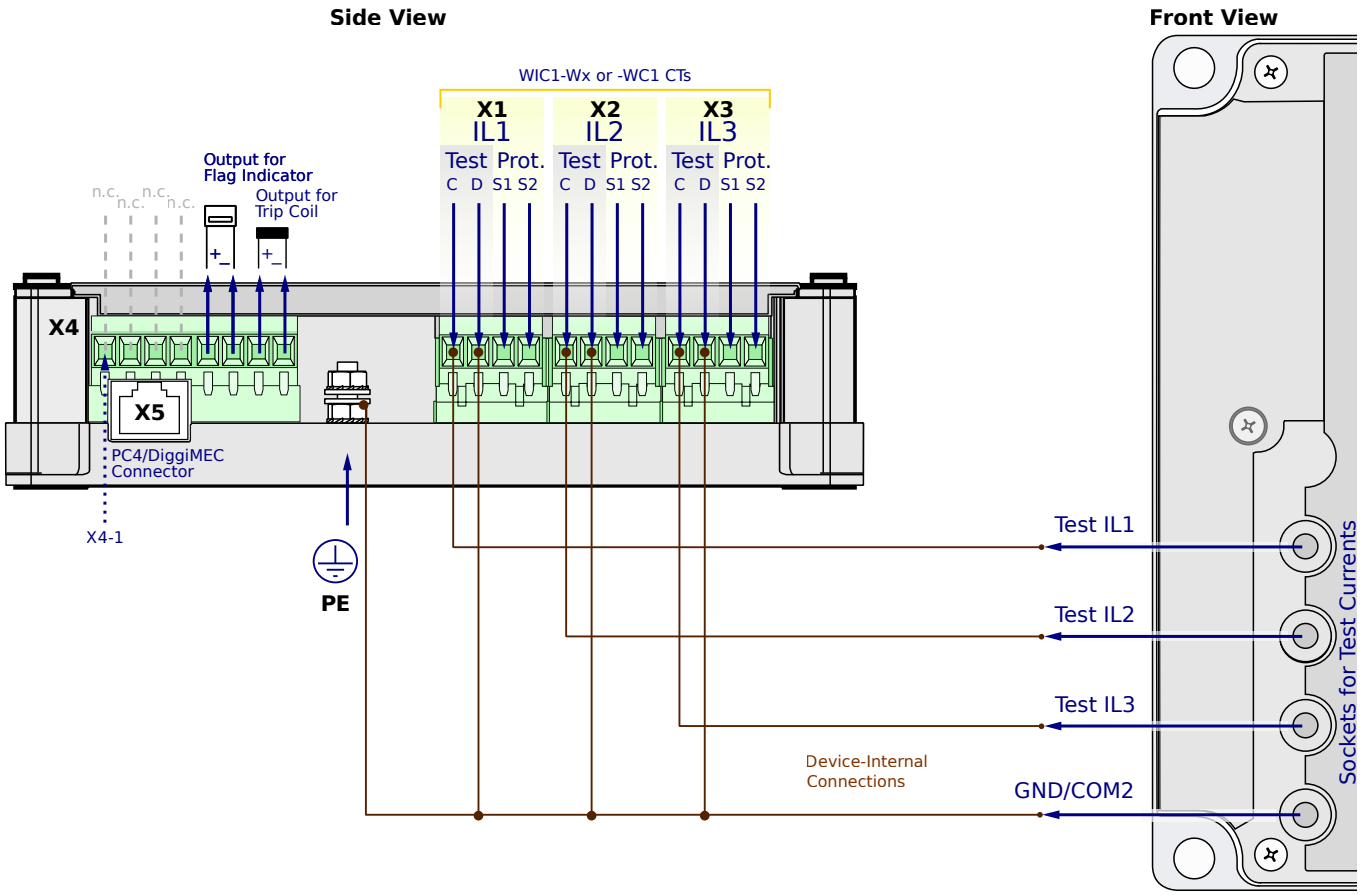


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0AAH

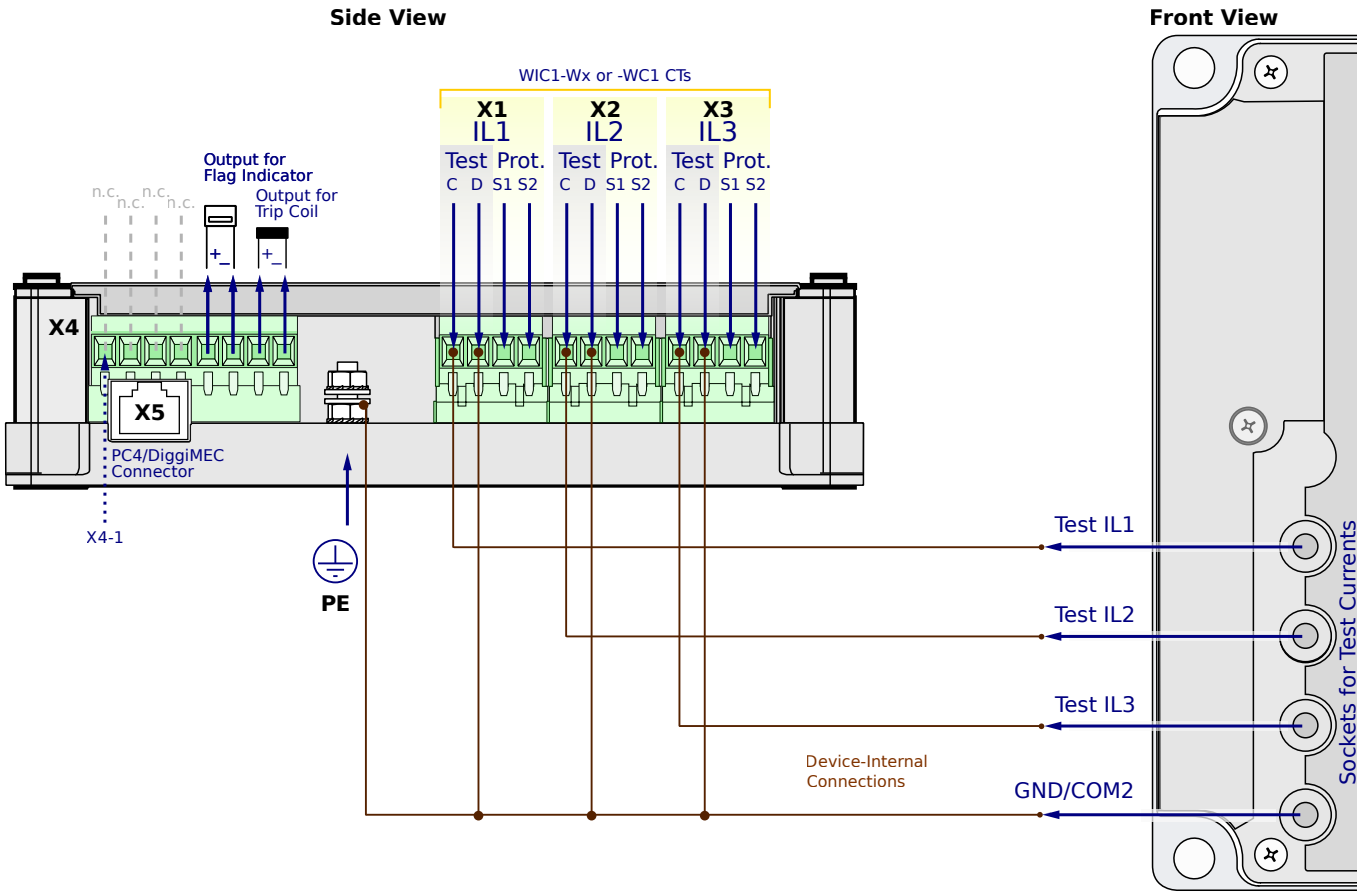


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0PA0

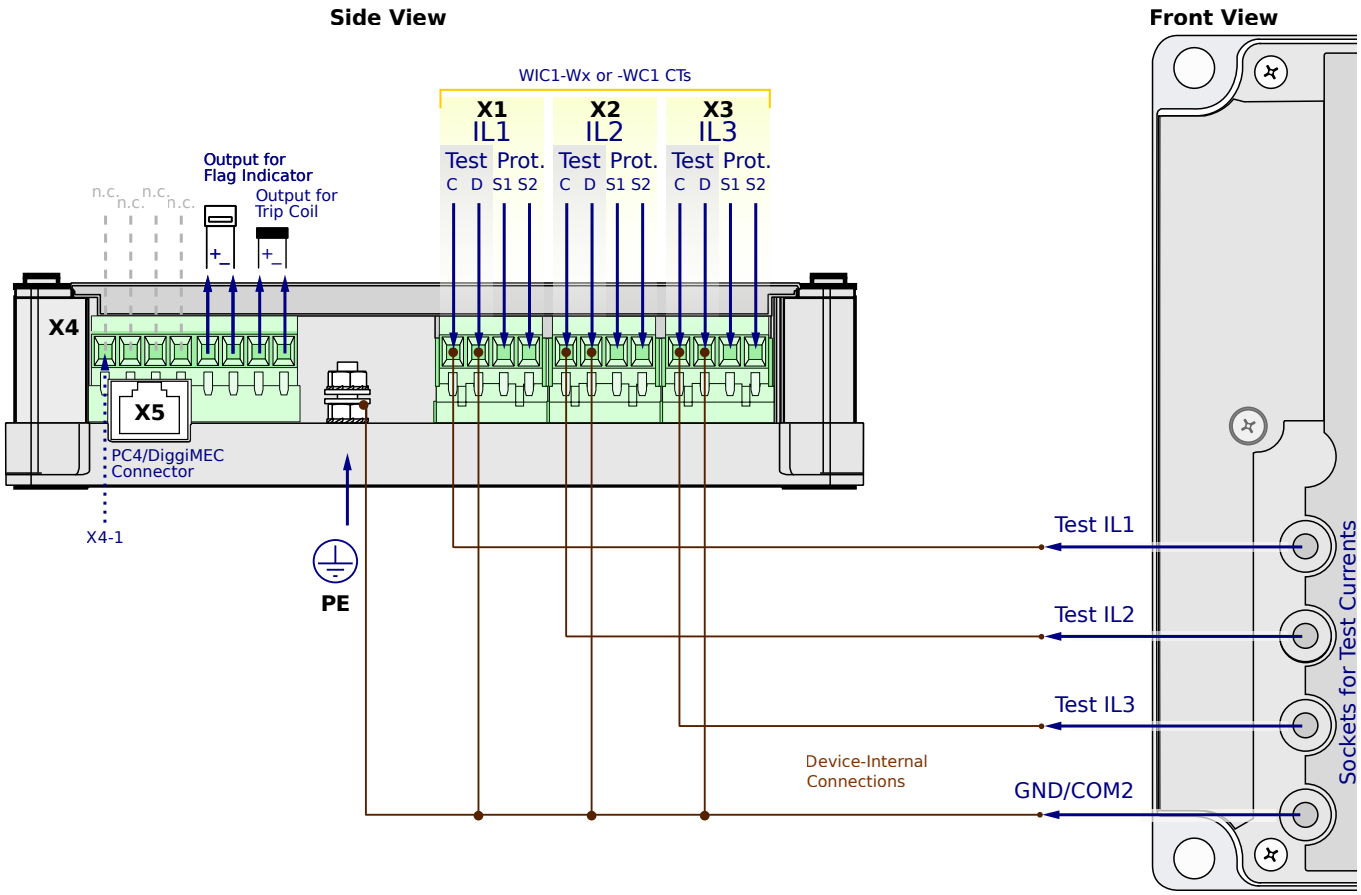


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN0PAH

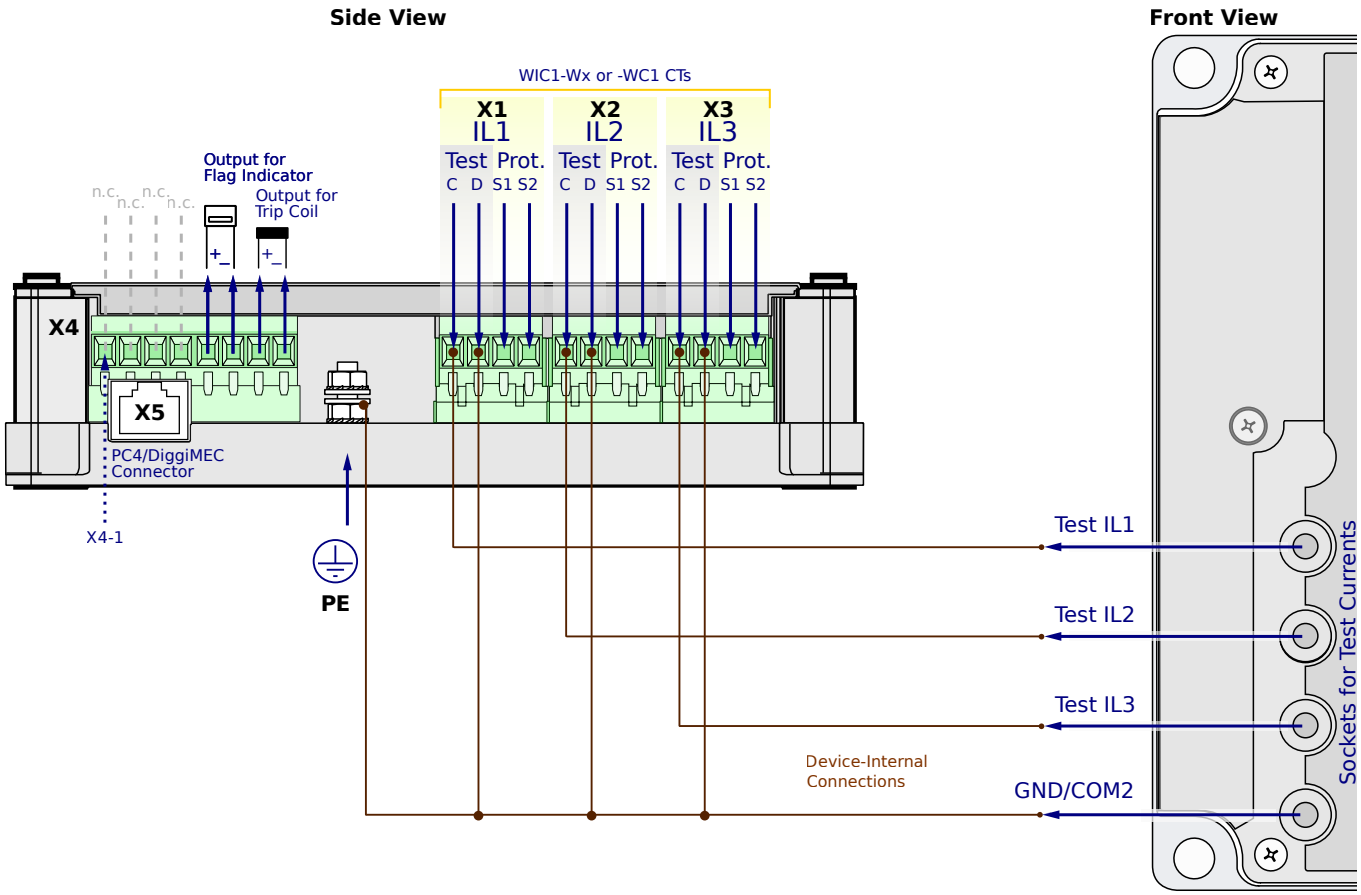


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1SA0

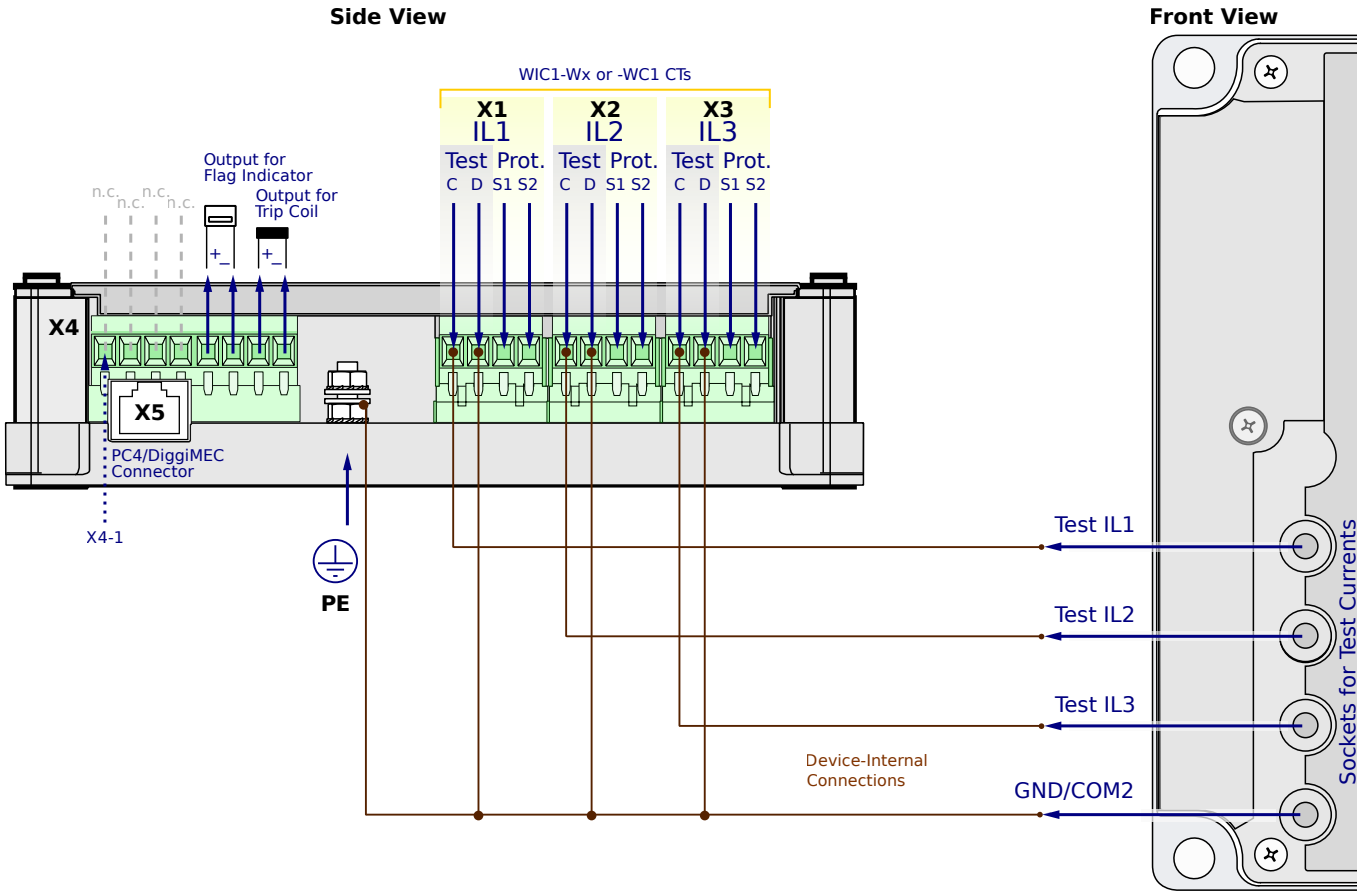


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1SAH

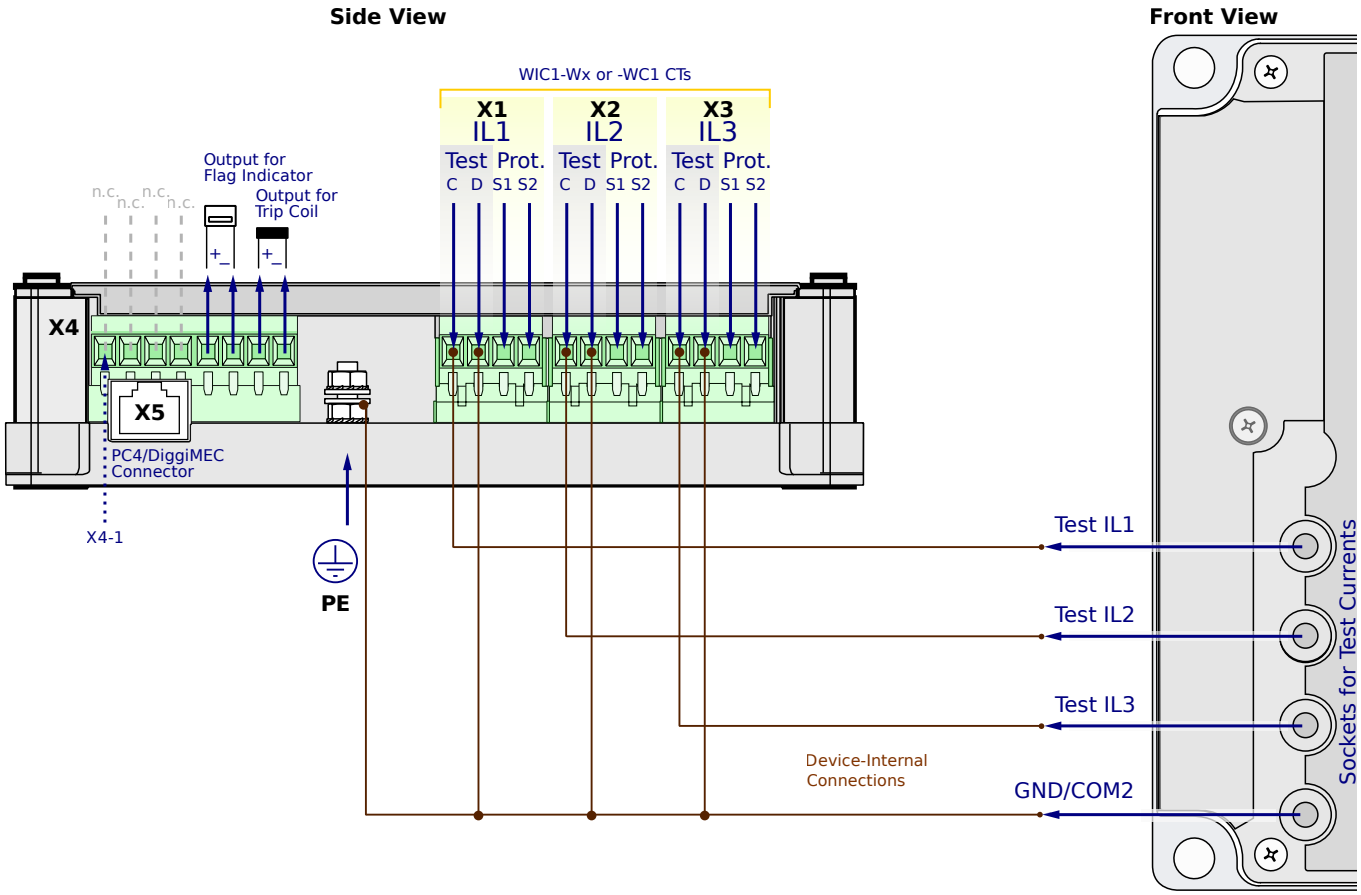


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1AA0

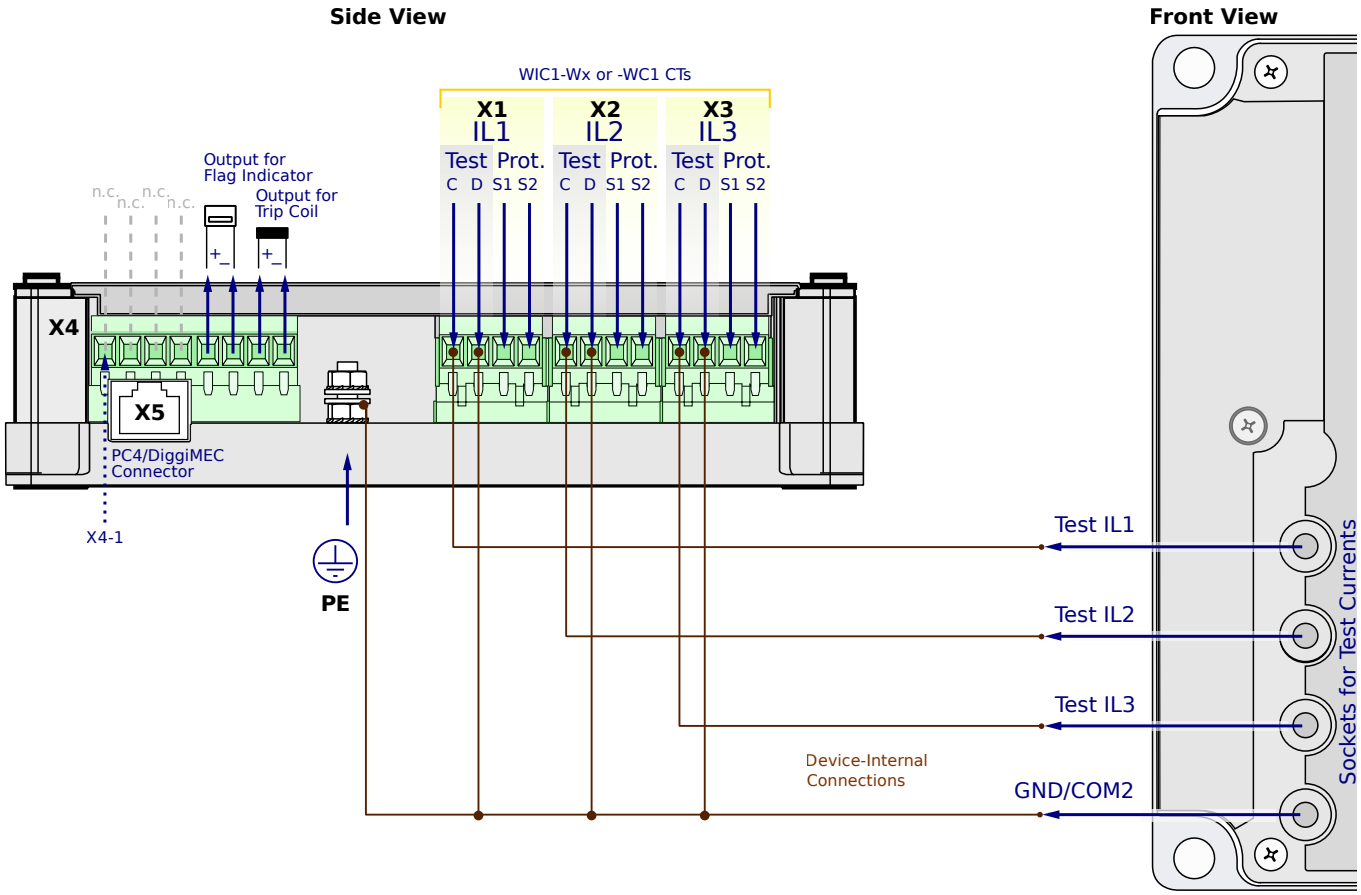


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1AAH

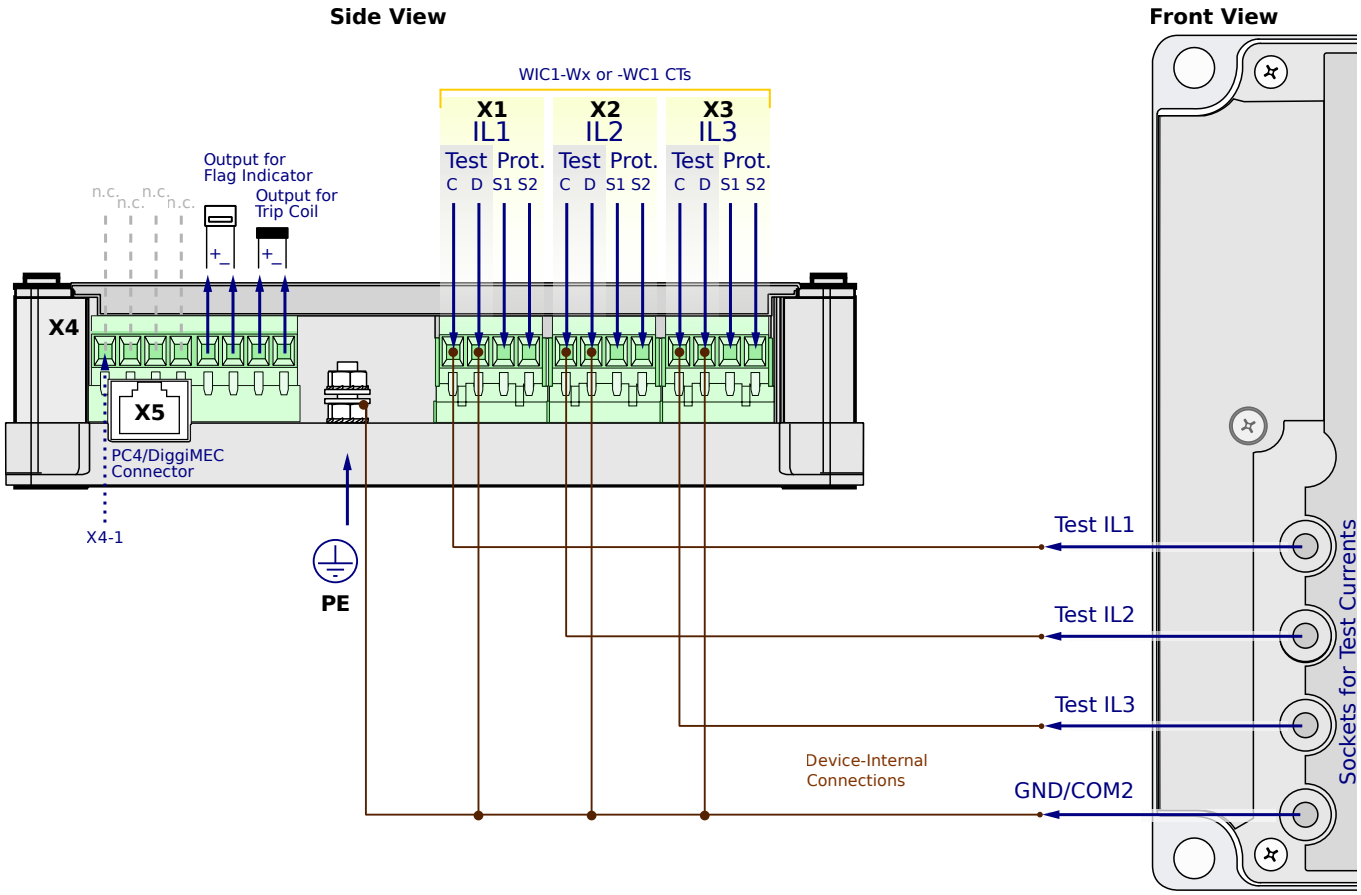


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1PA0

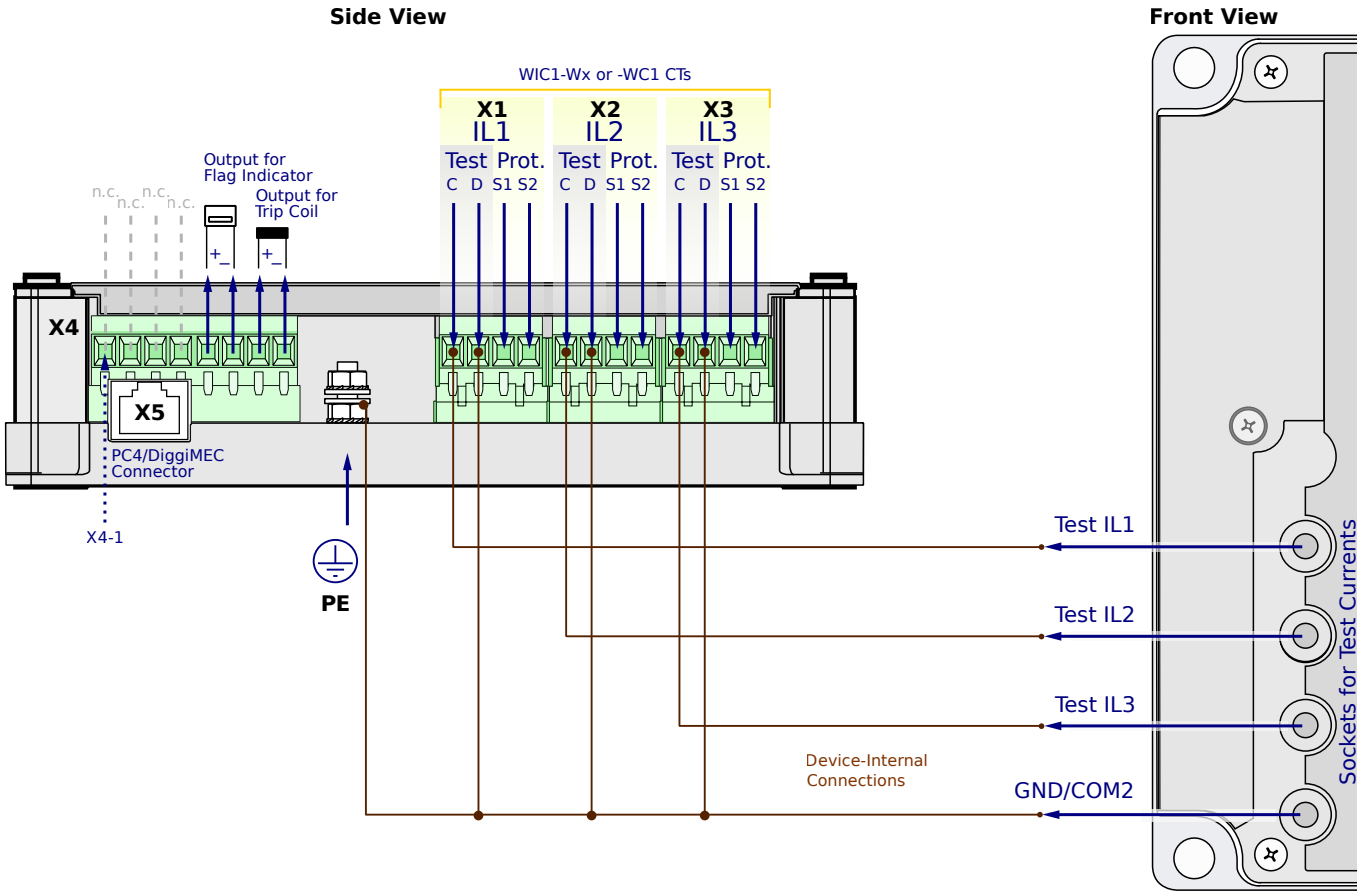


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN1PAH

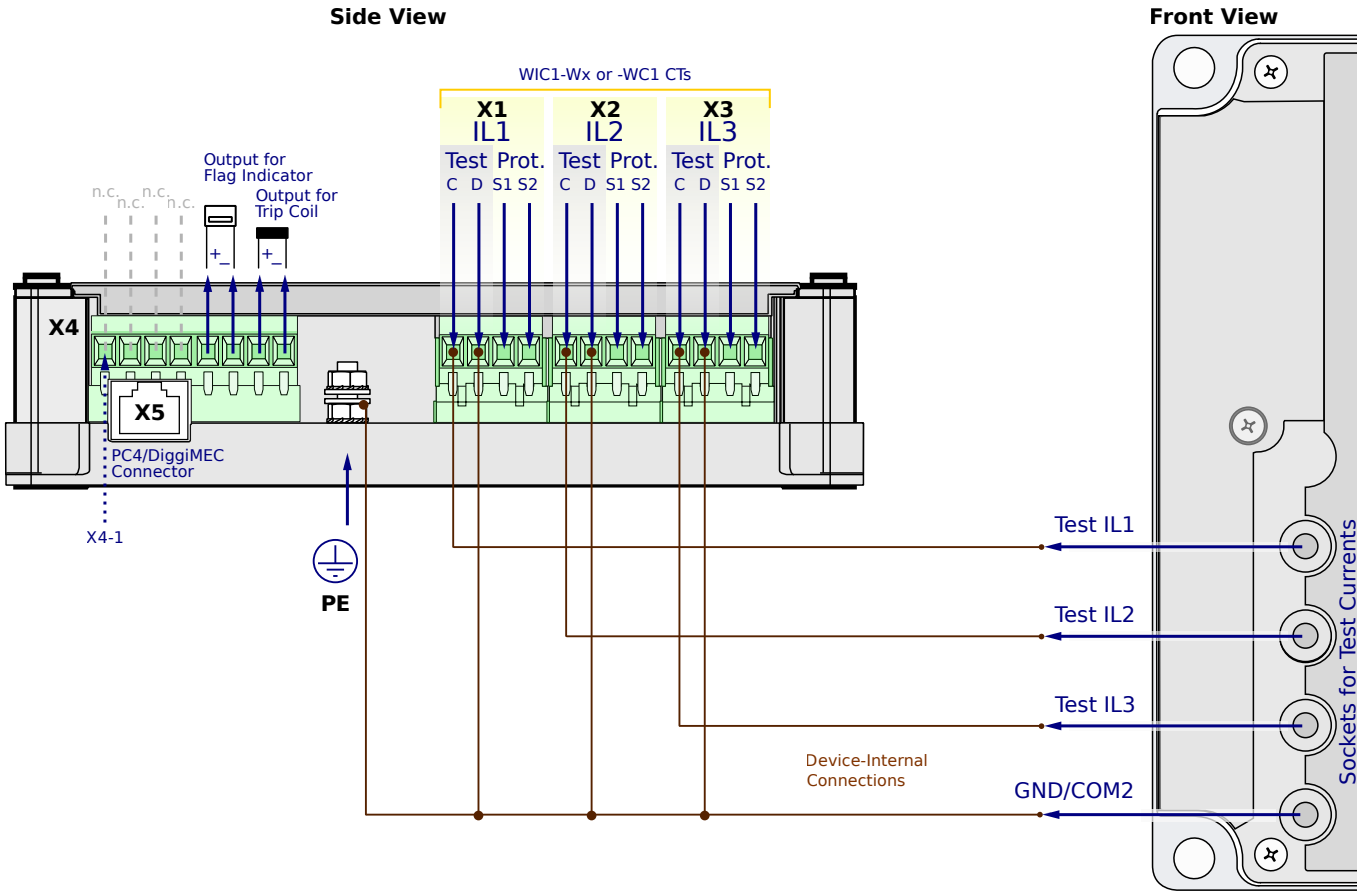


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2SA0

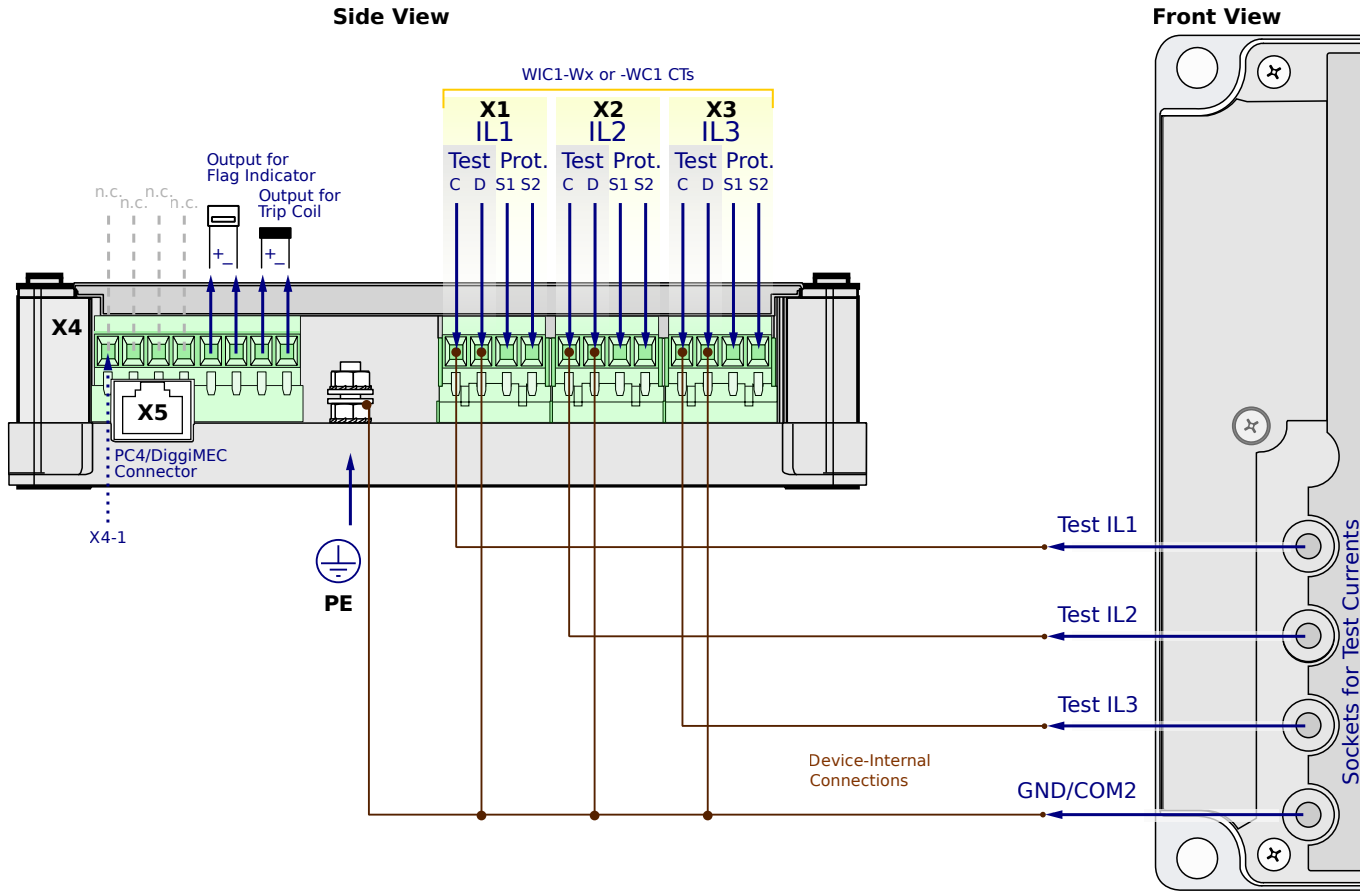


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2SAH

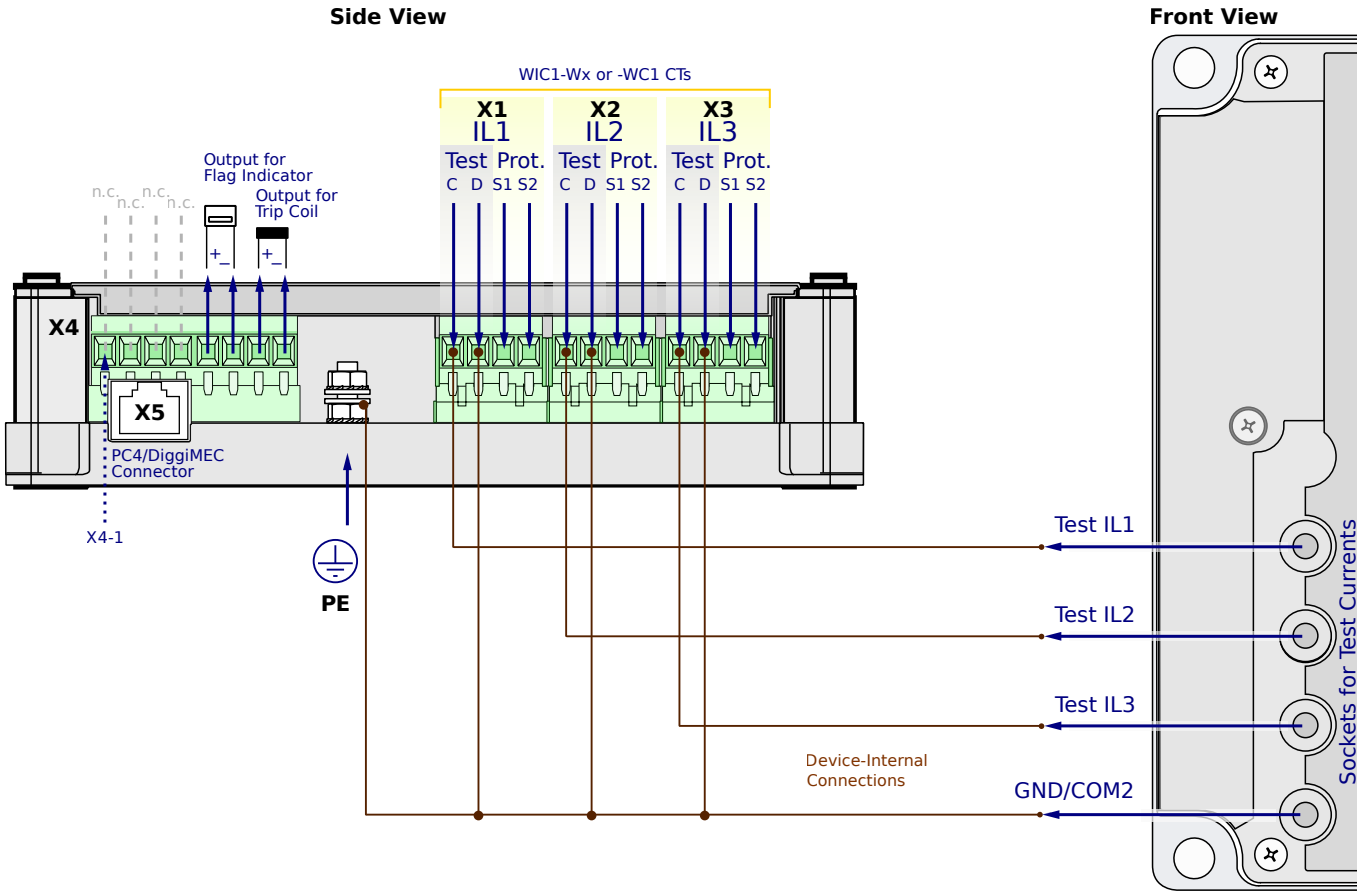


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2AA0

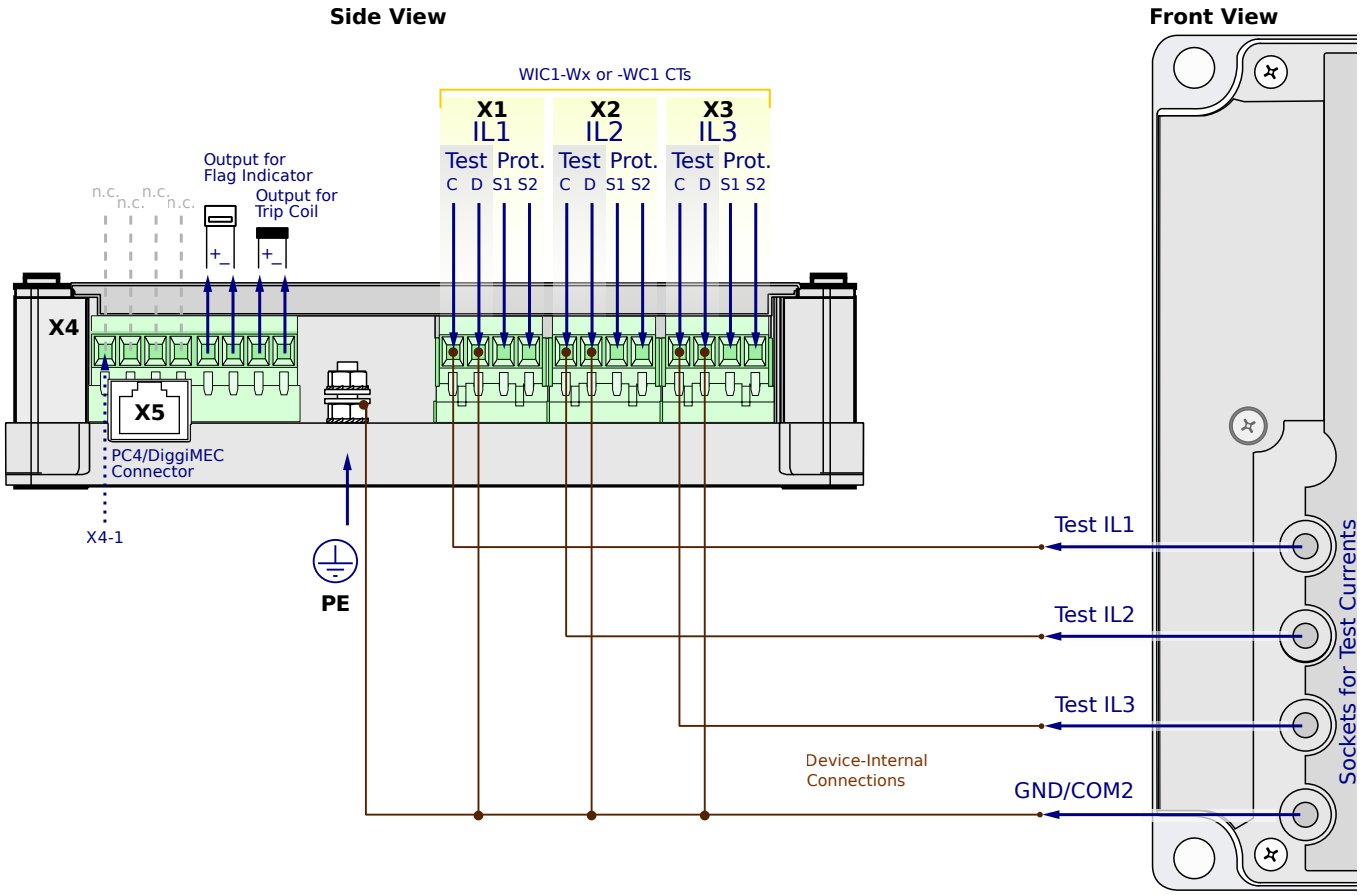


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2AAH

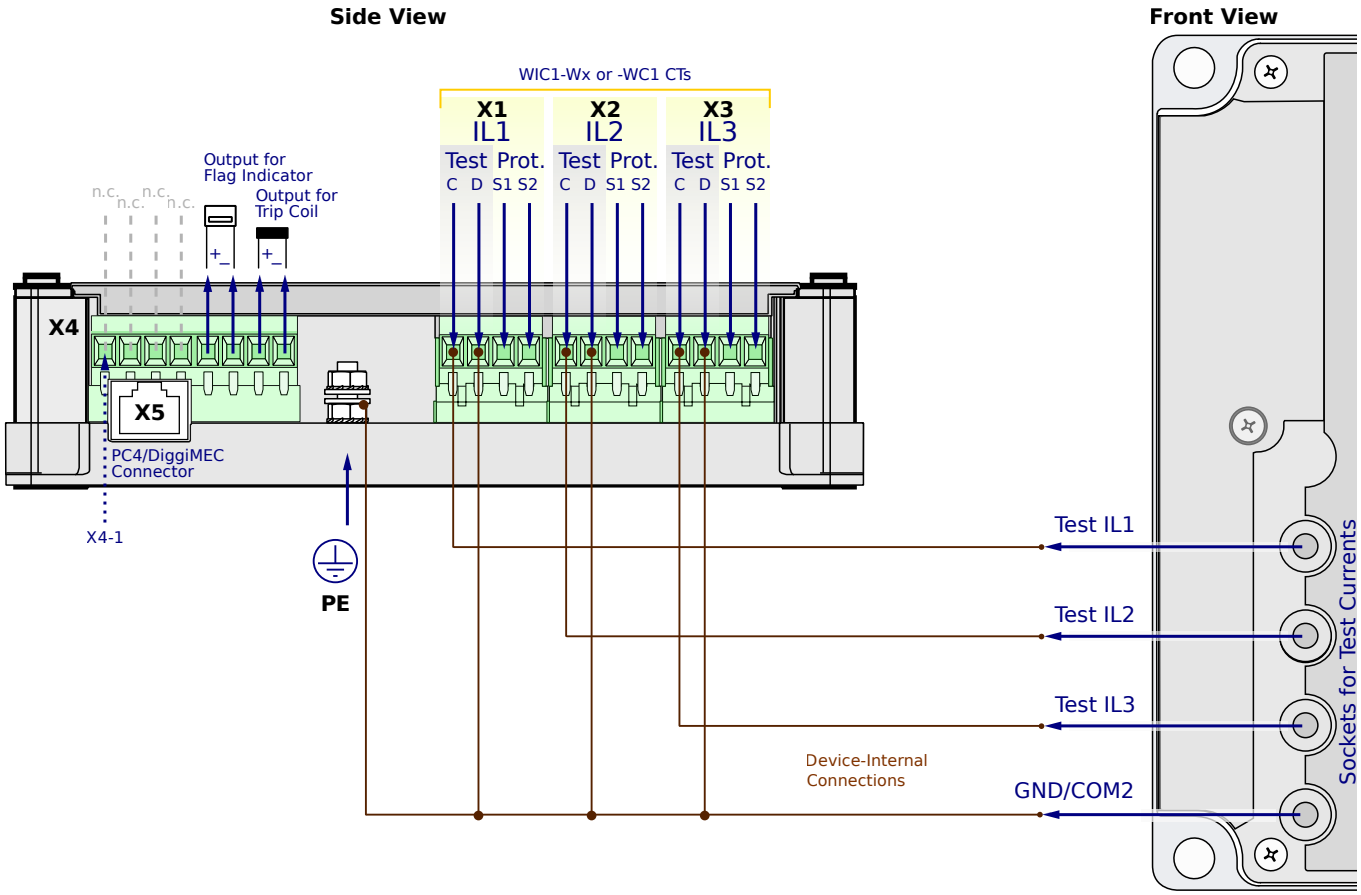


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2PA0

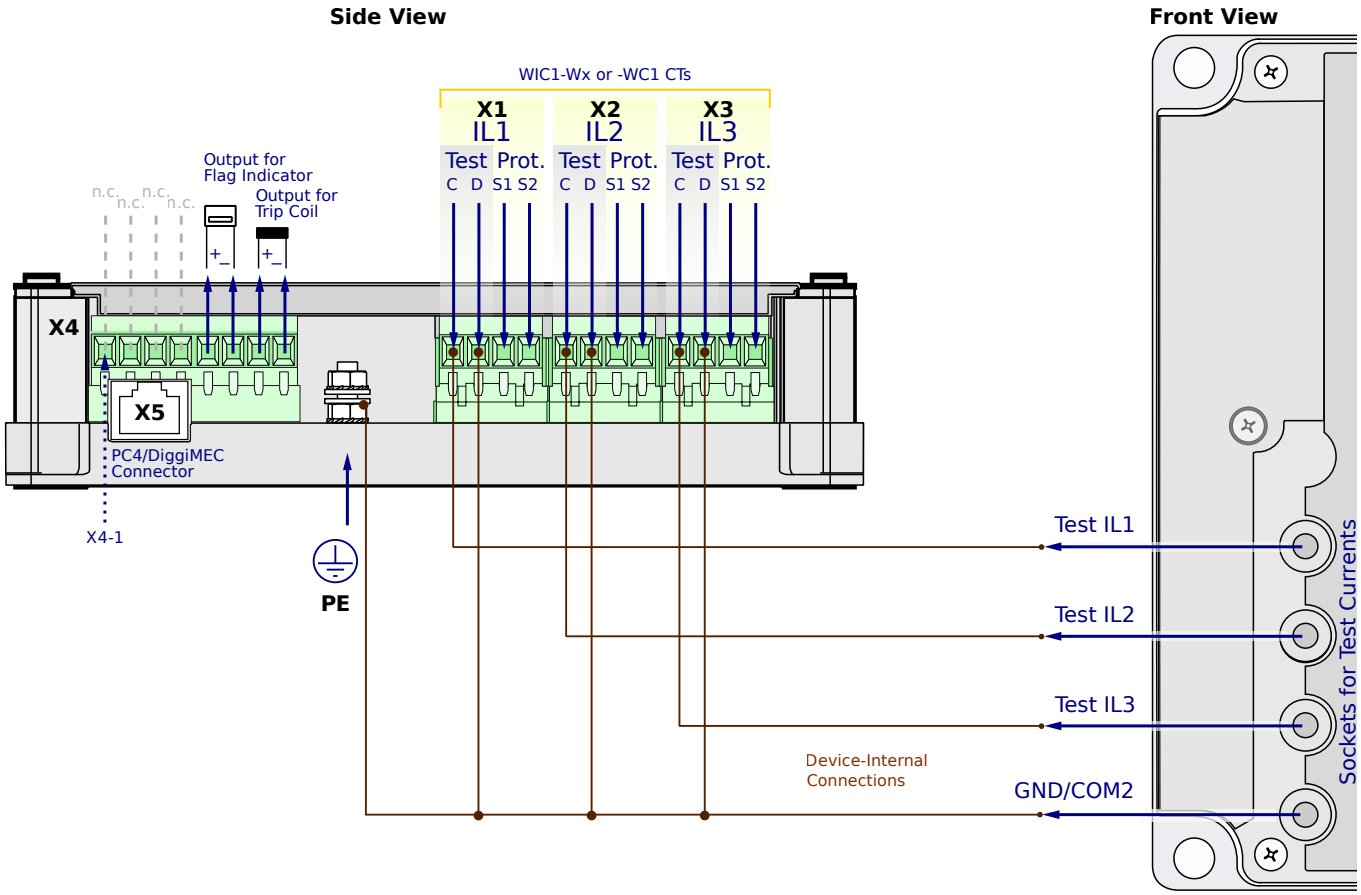


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NN2PAH

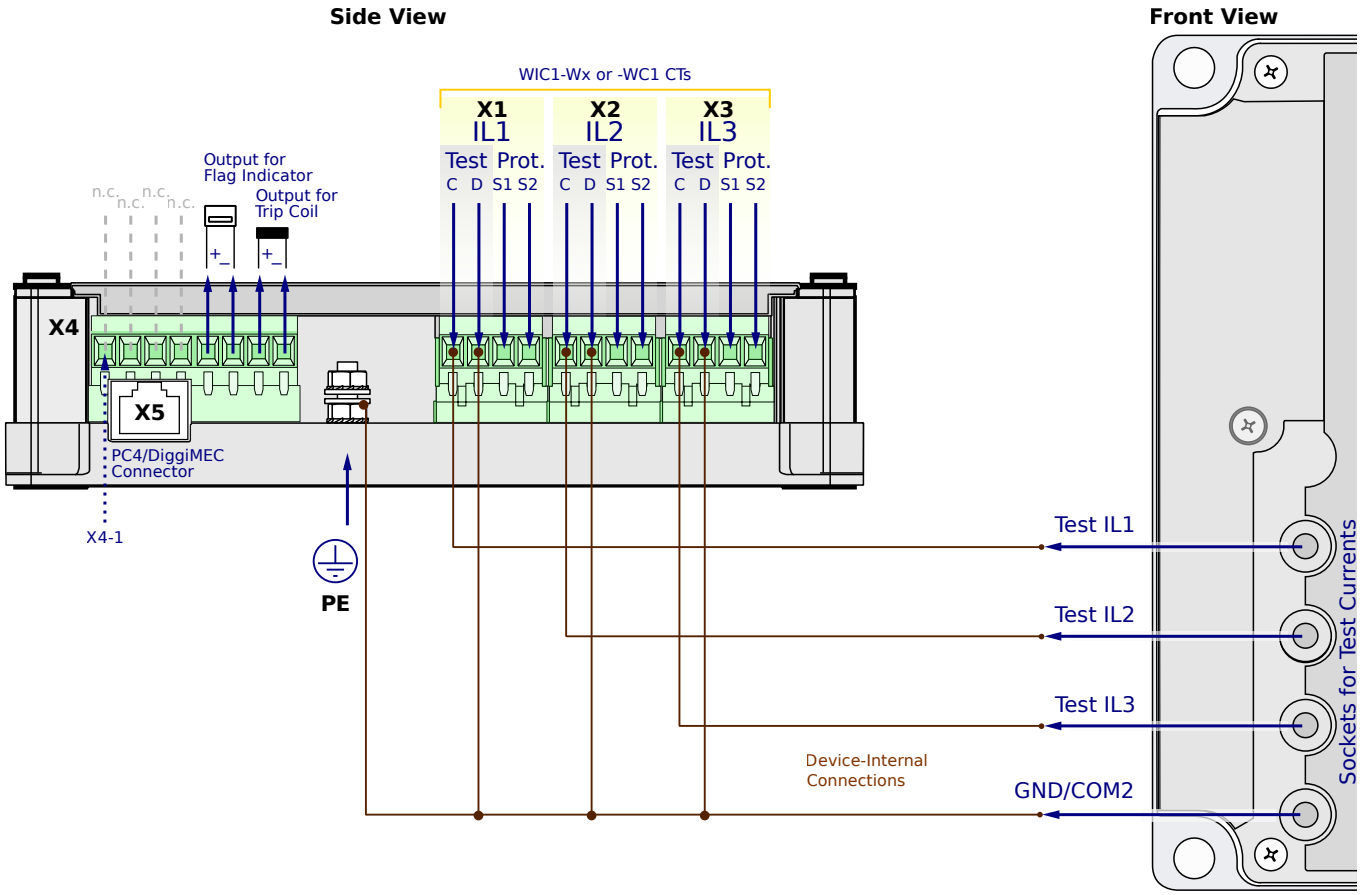


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0SA0

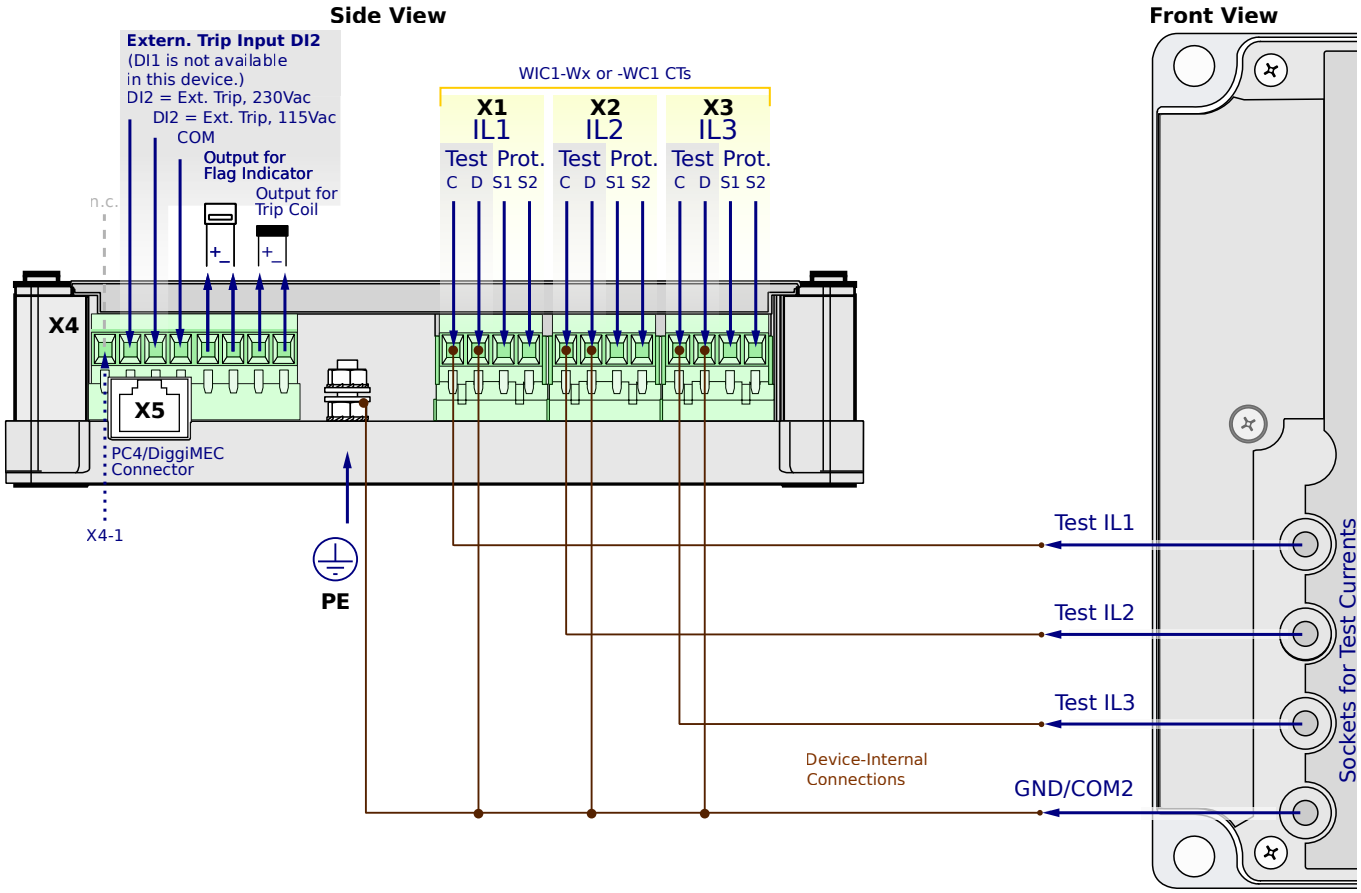


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0SAH

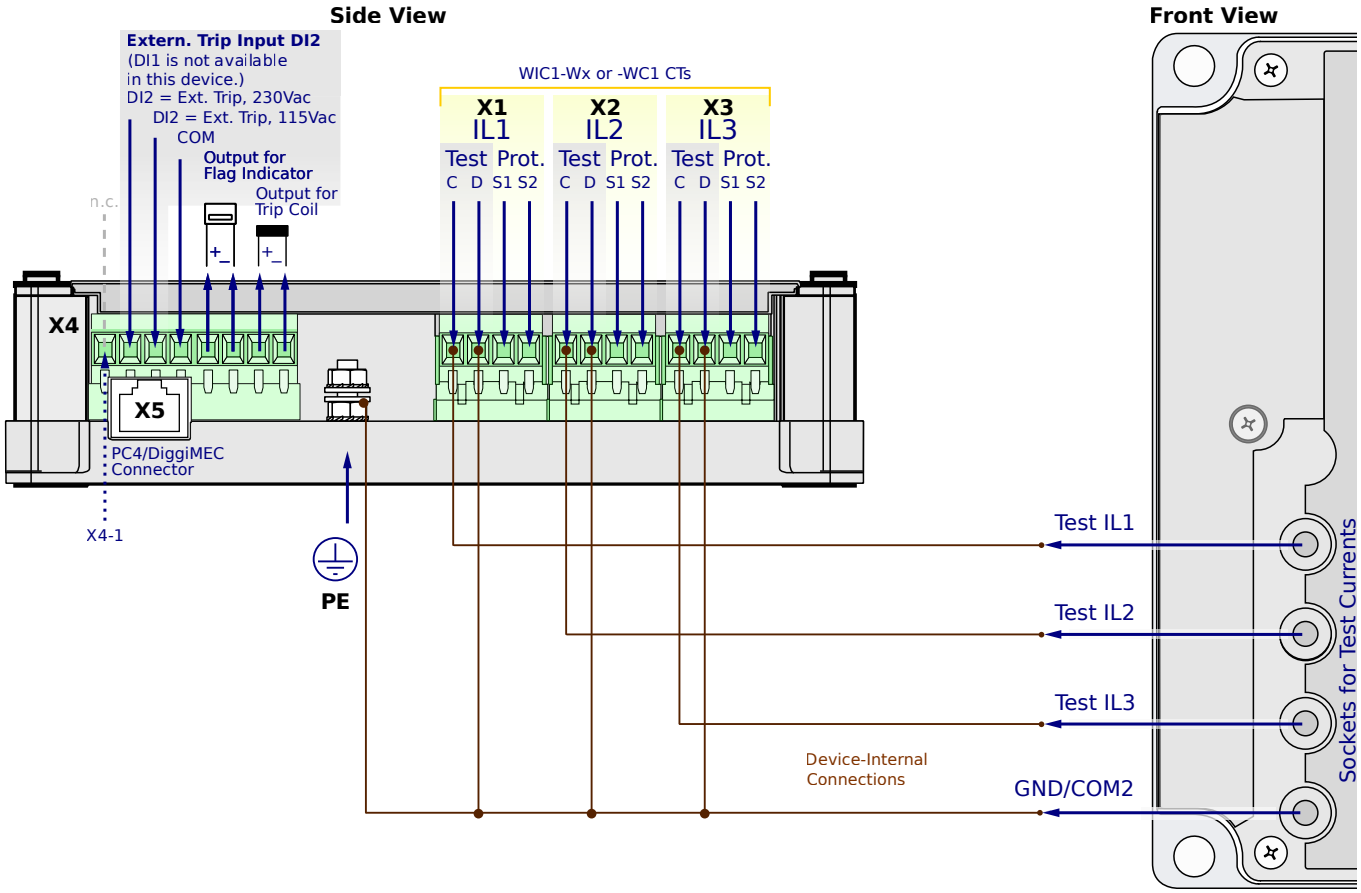


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0AA0

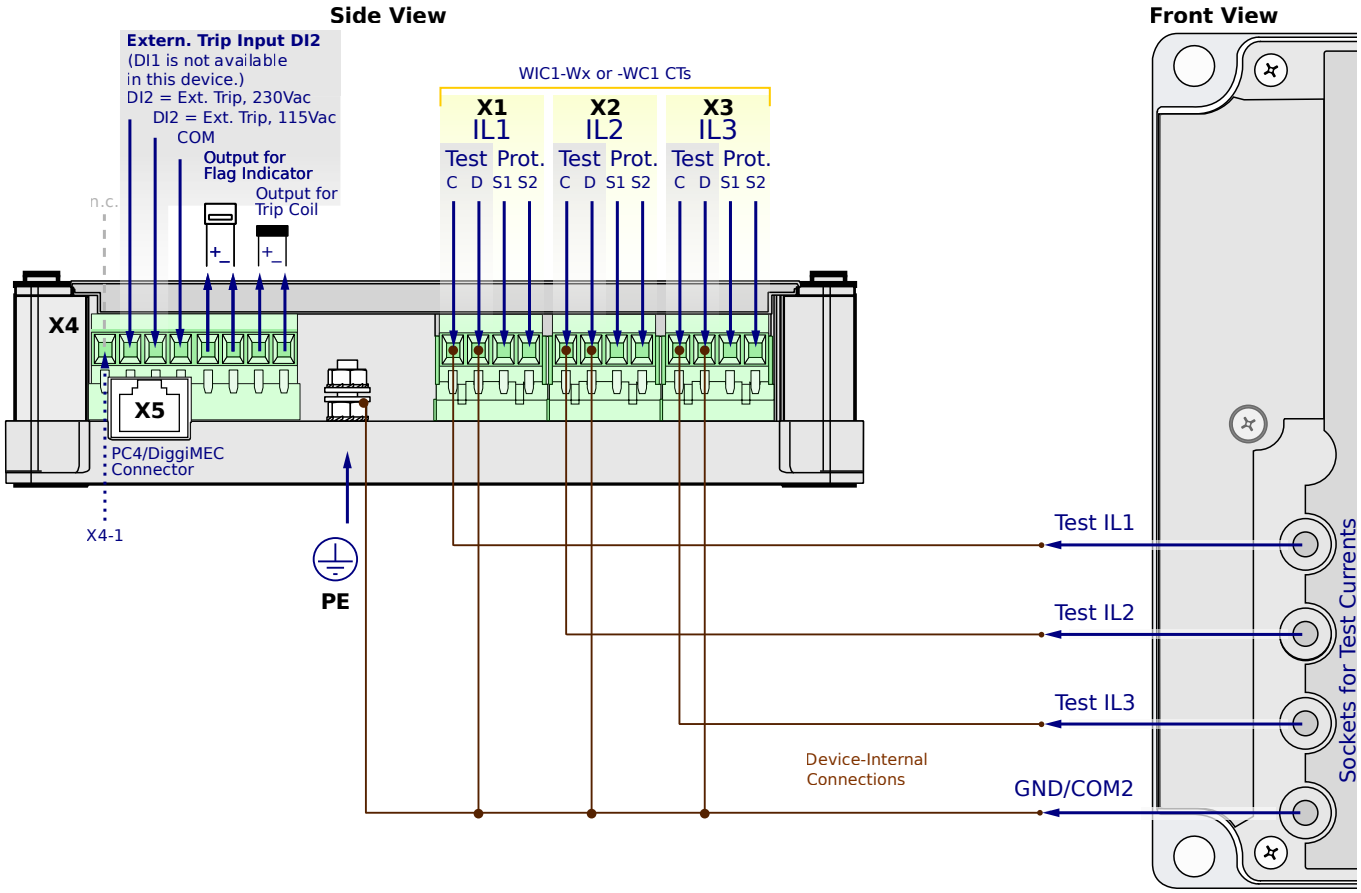


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0AAH

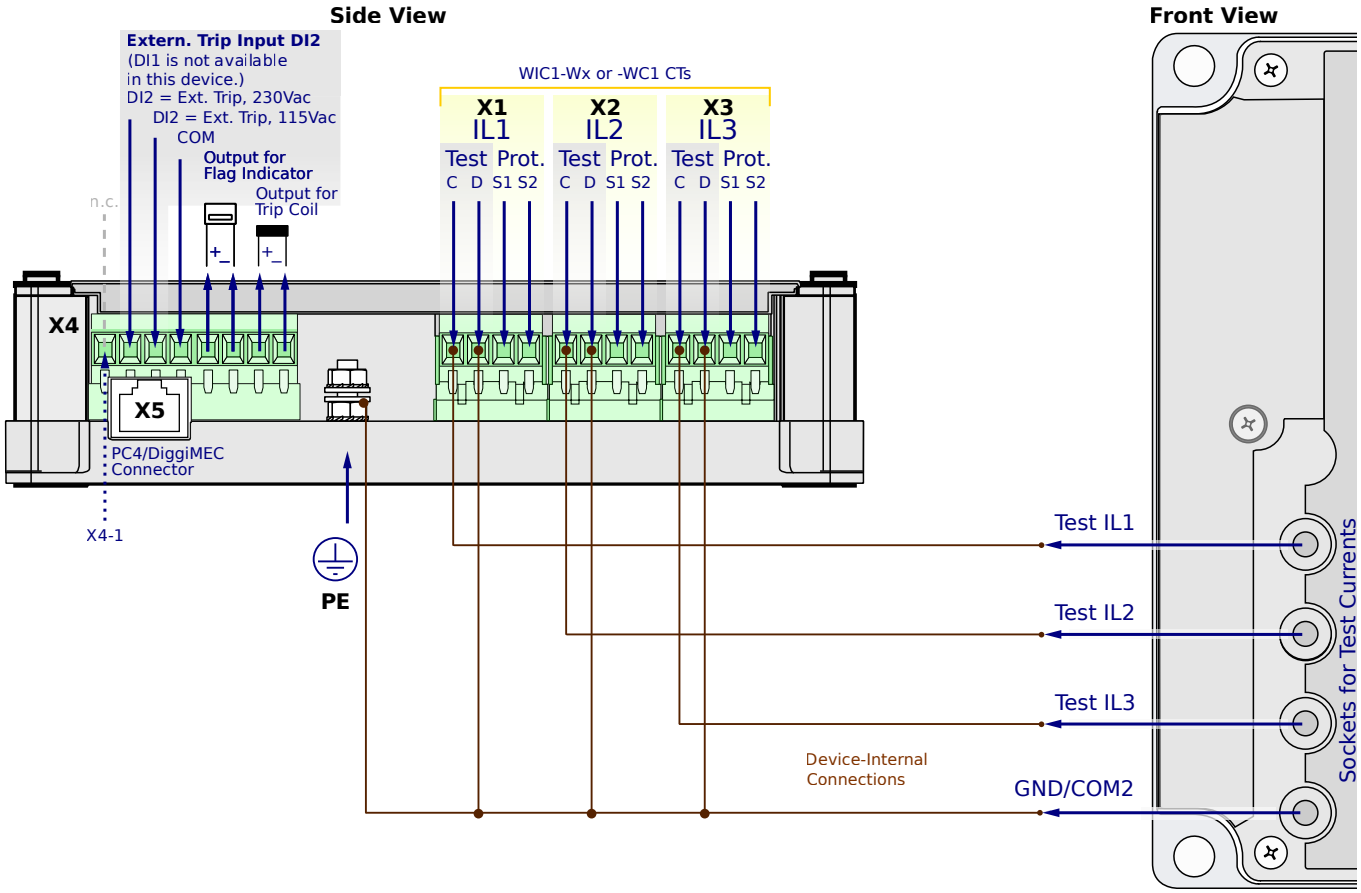


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0PA0

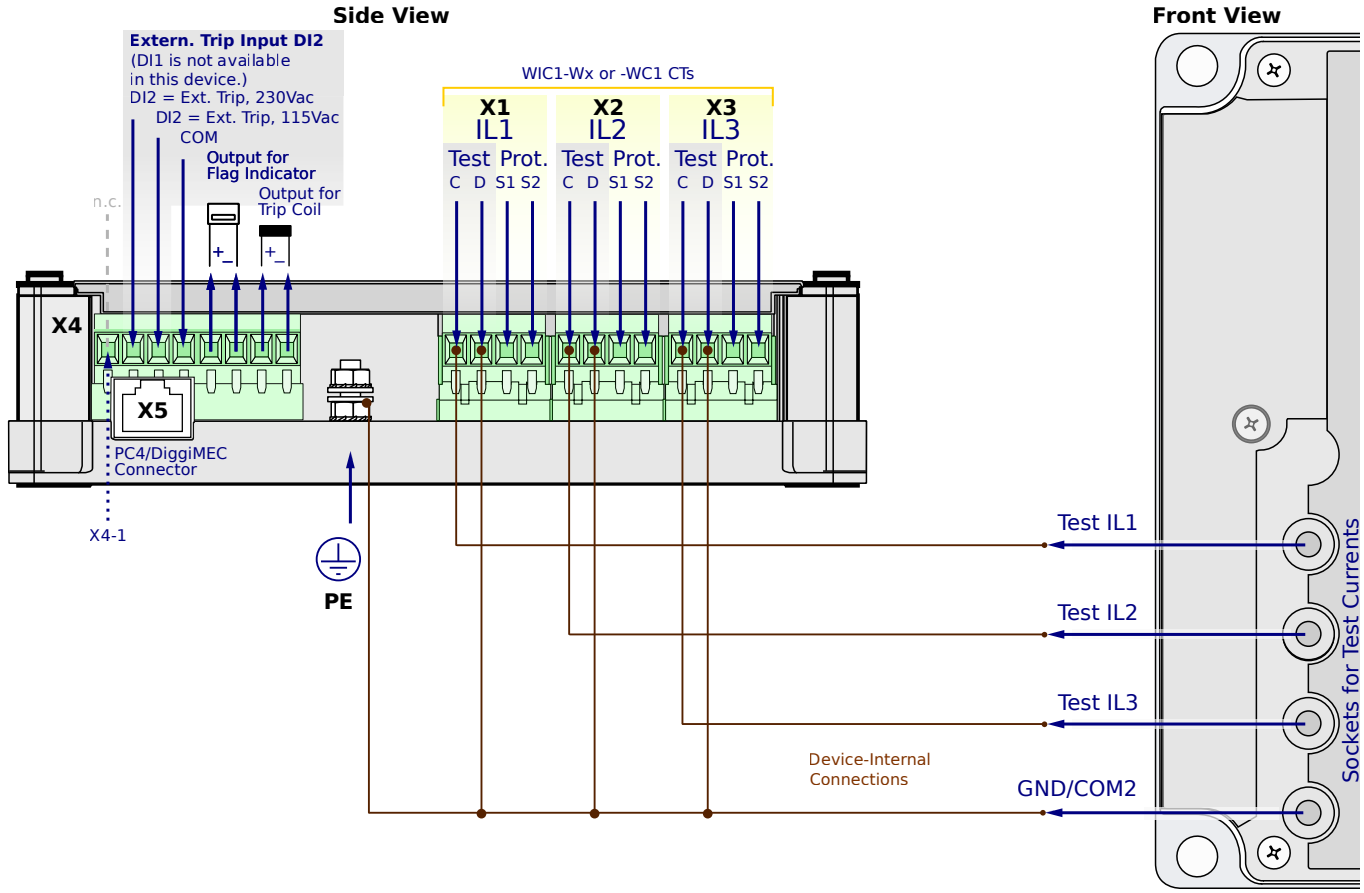


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF0PAH

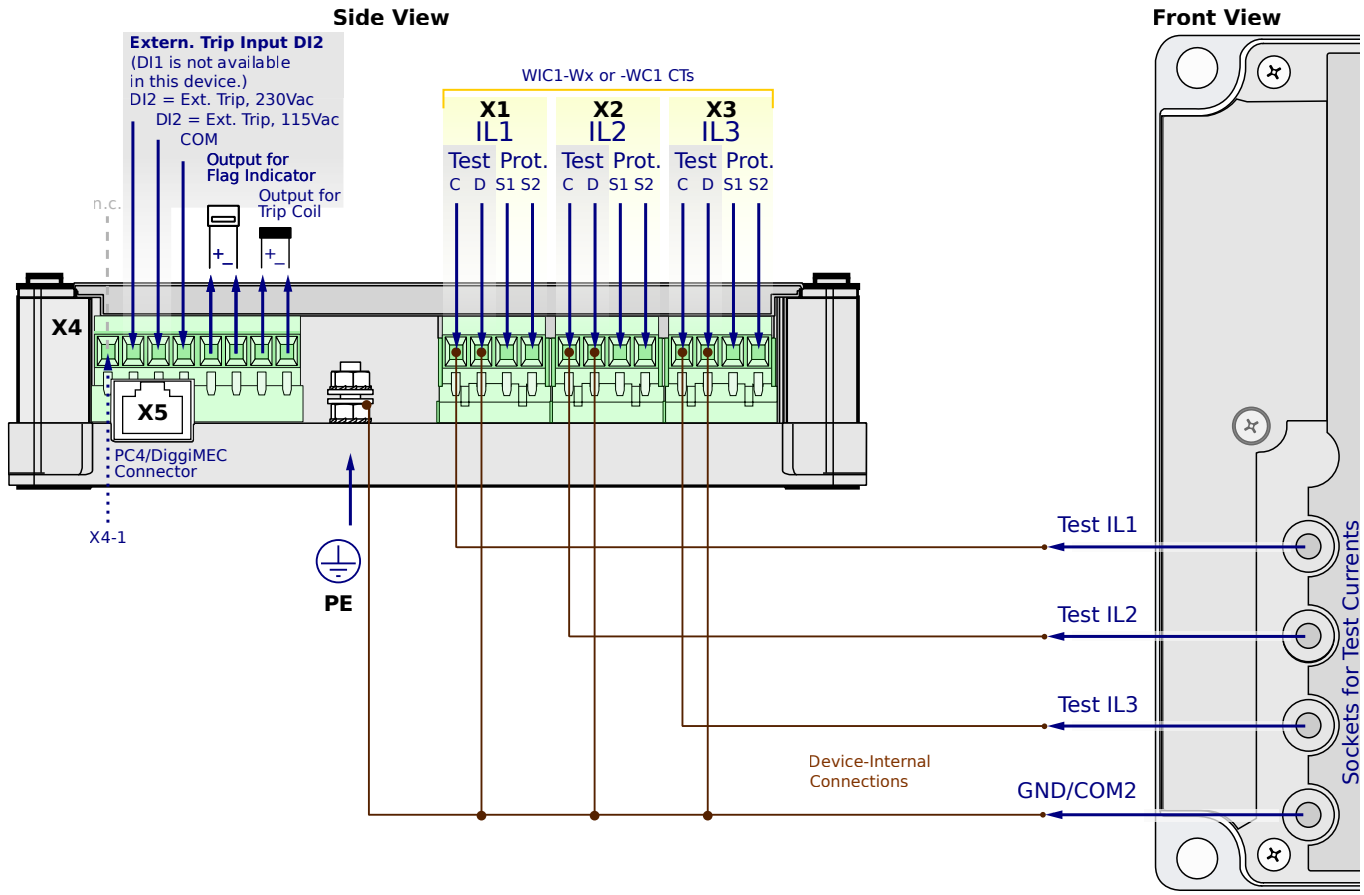


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1SA0

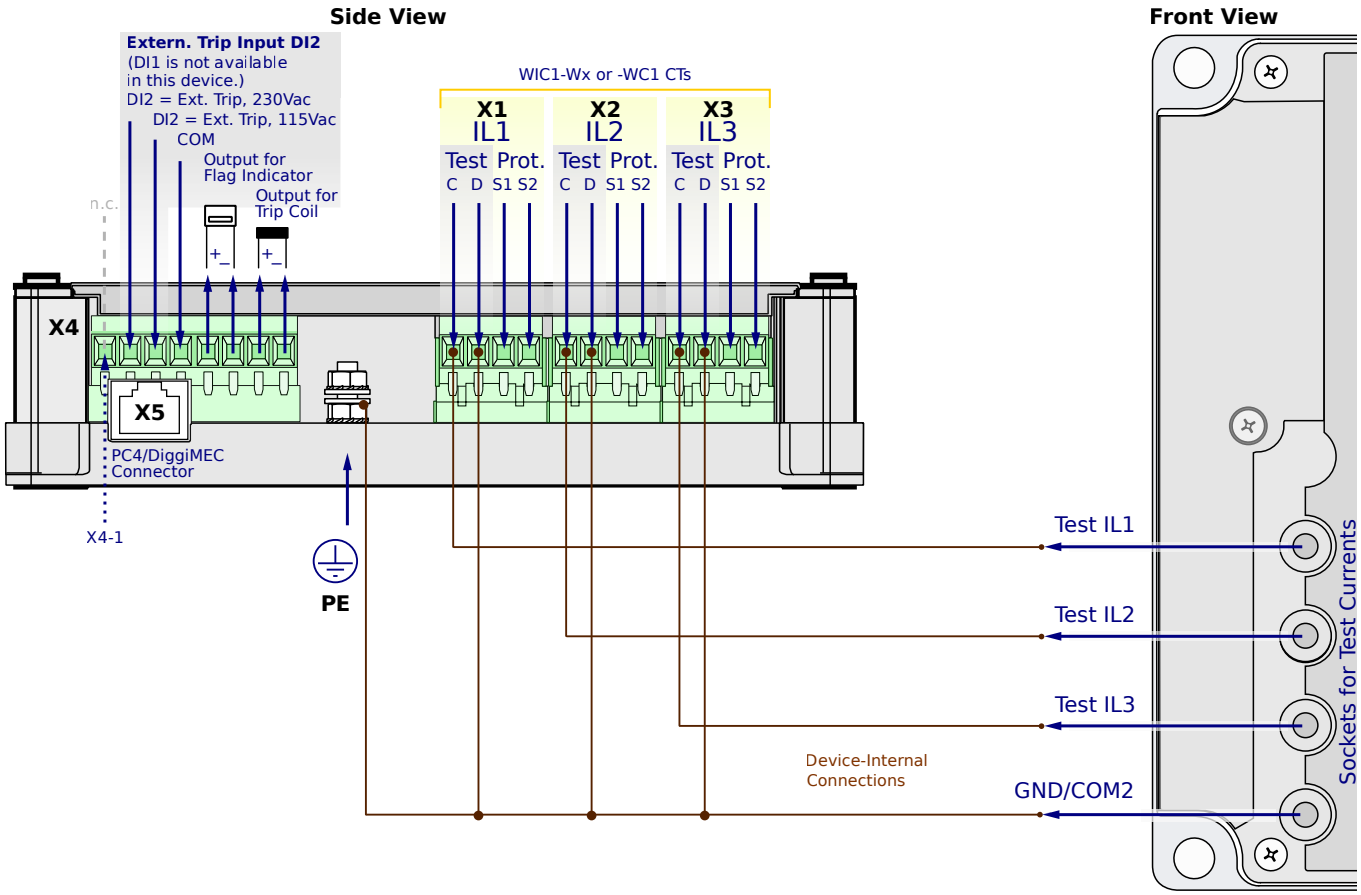


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1SAH

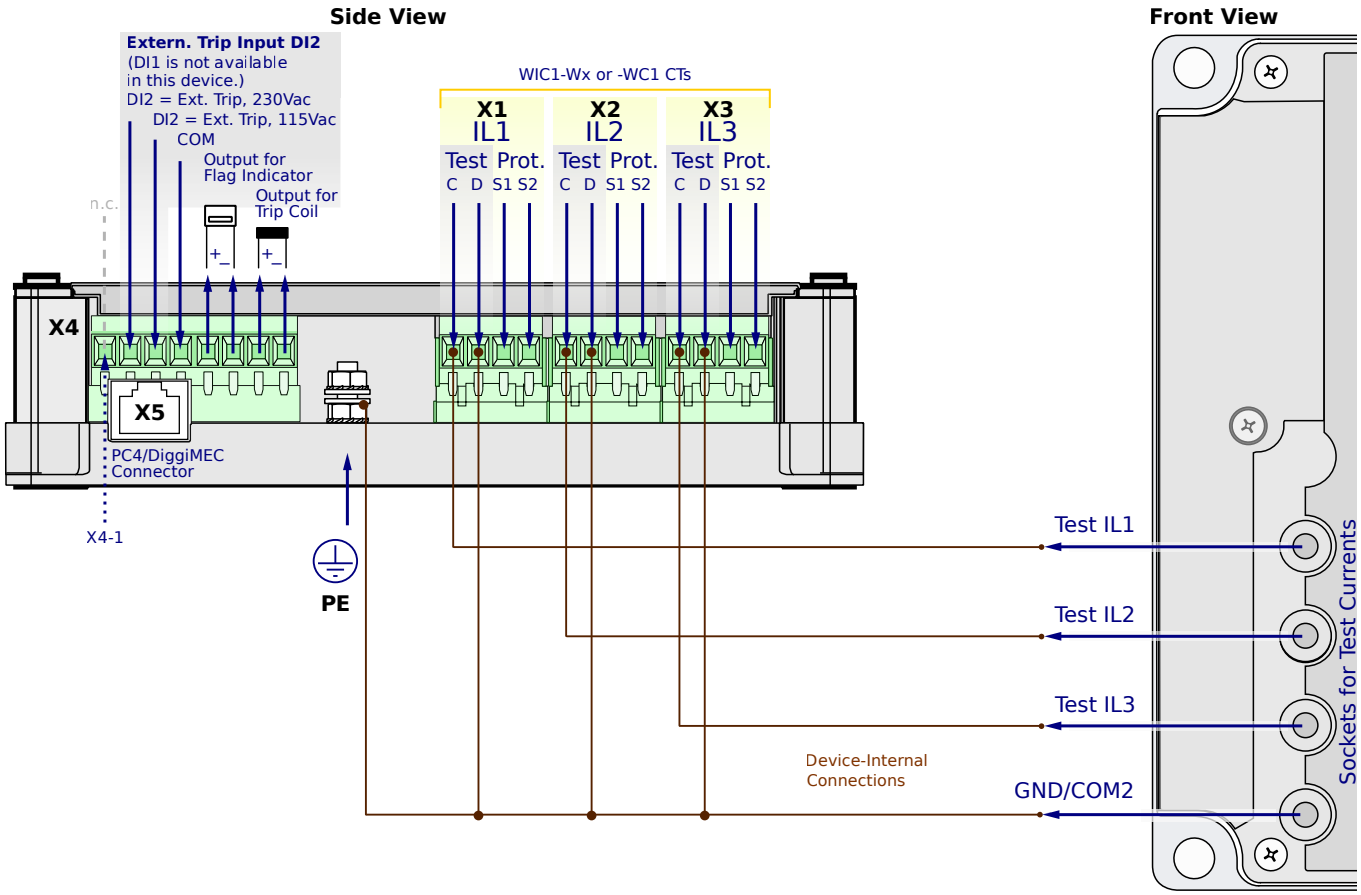


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1AA0

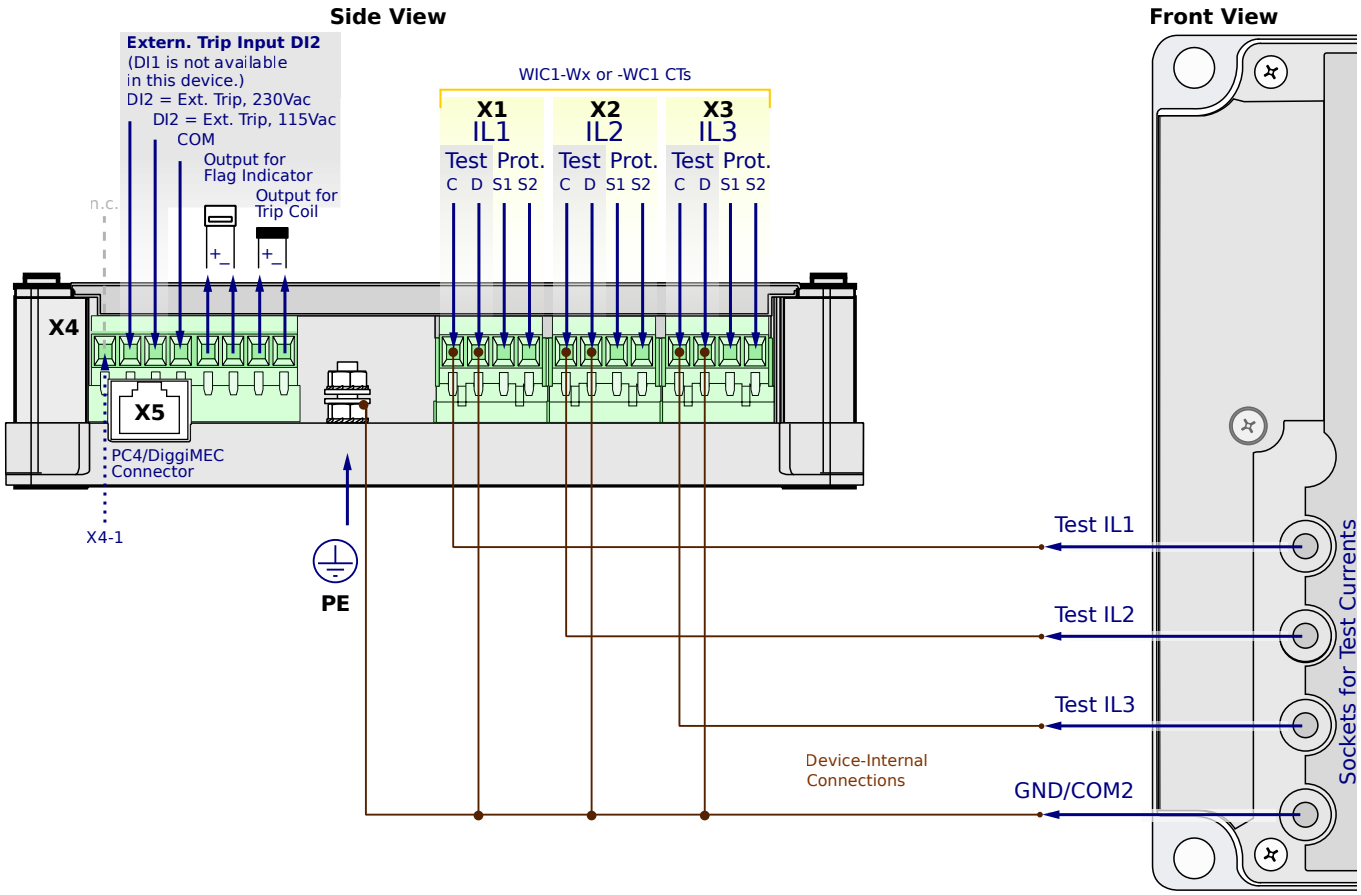


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1AAH

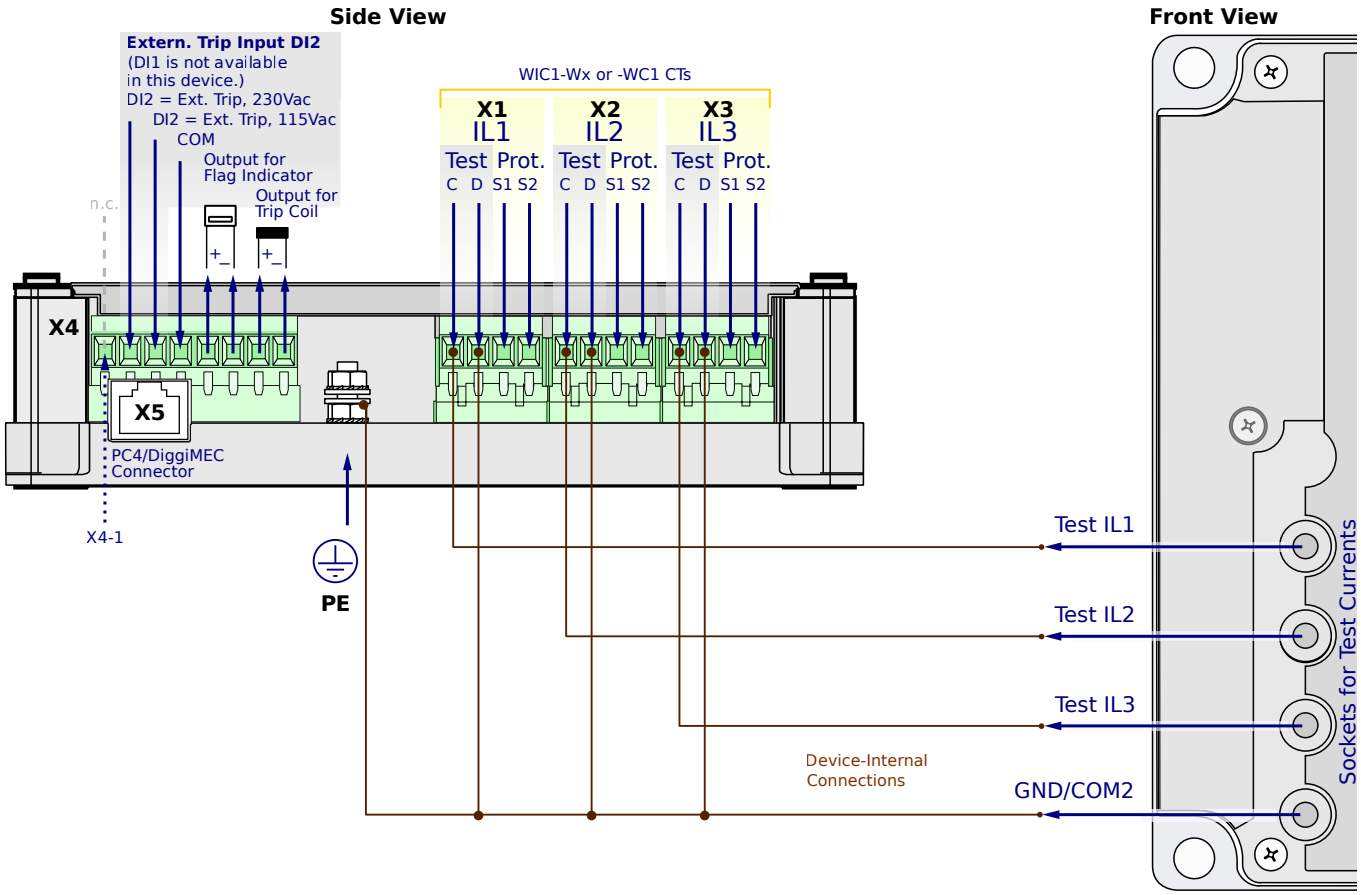


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1PA0

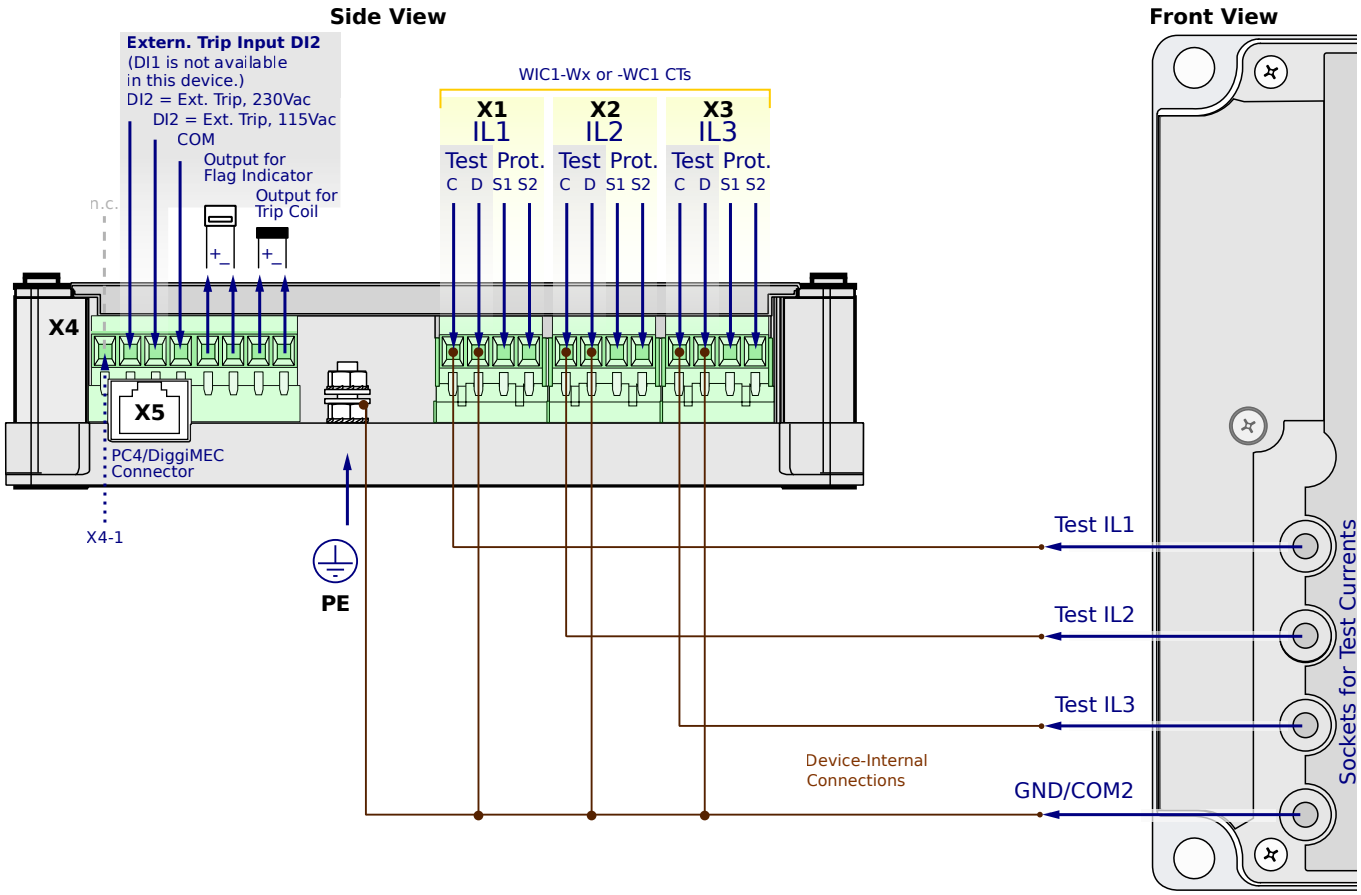


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF1PAH

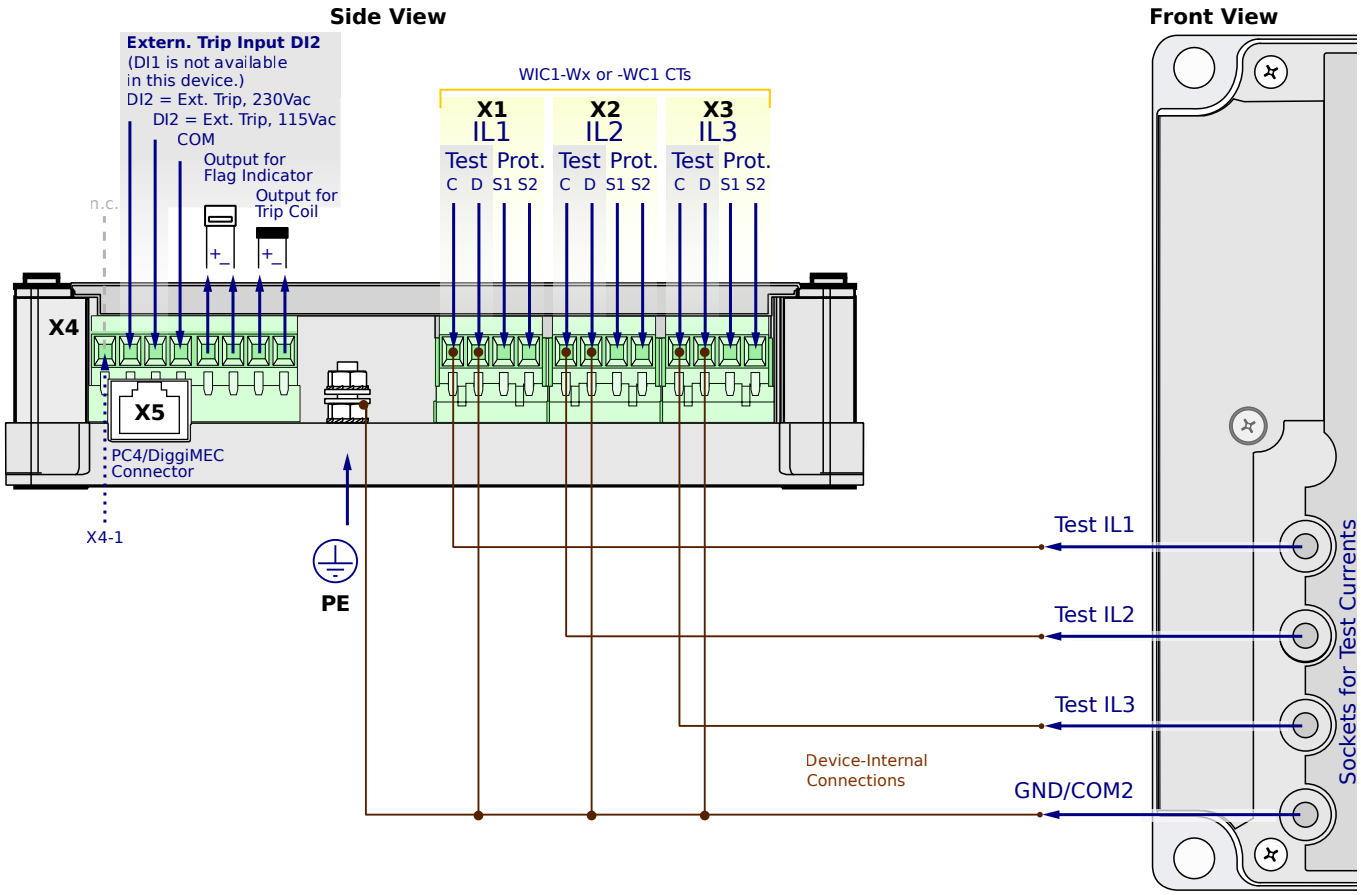


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2SA0

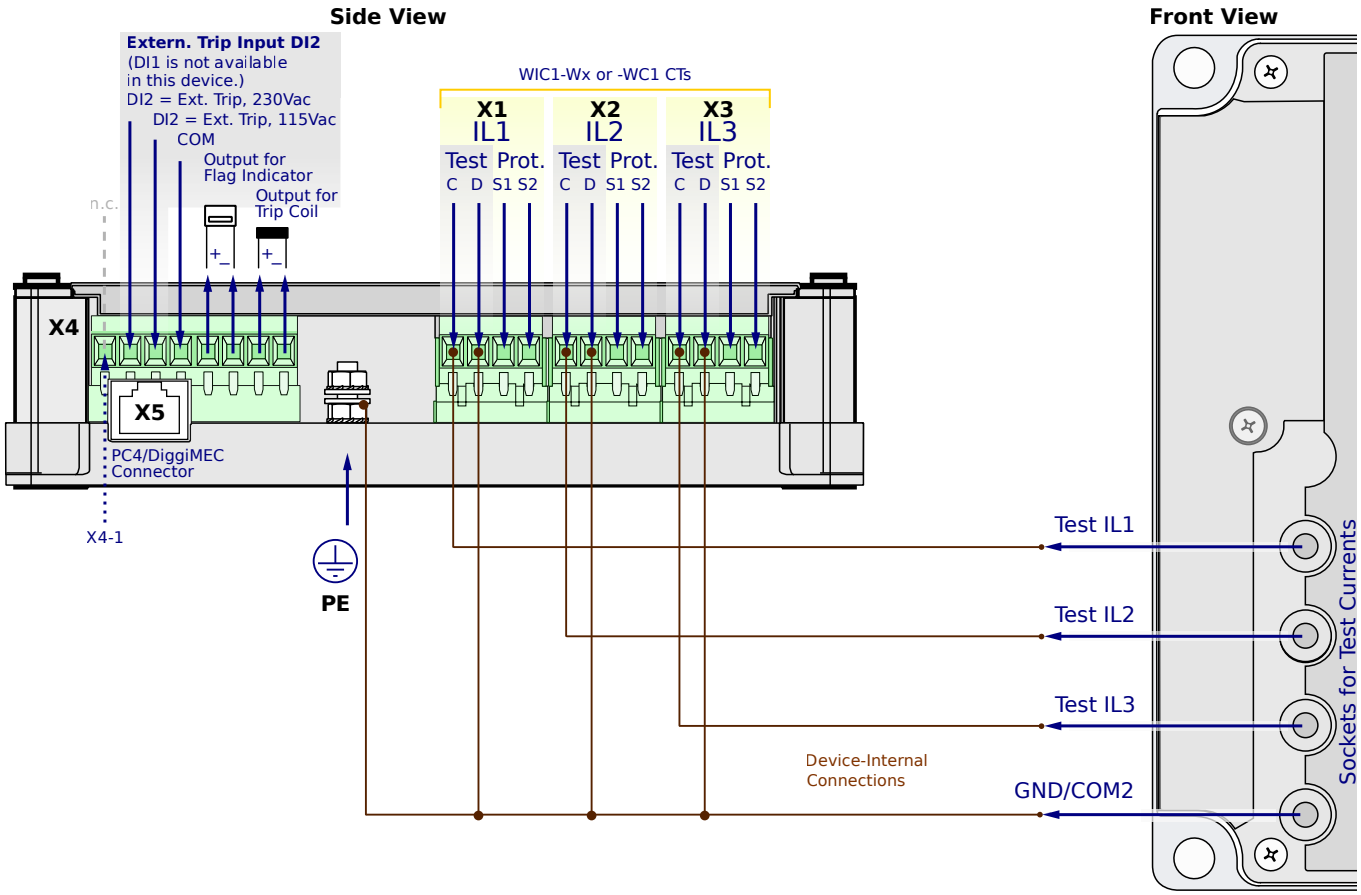


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2SAH

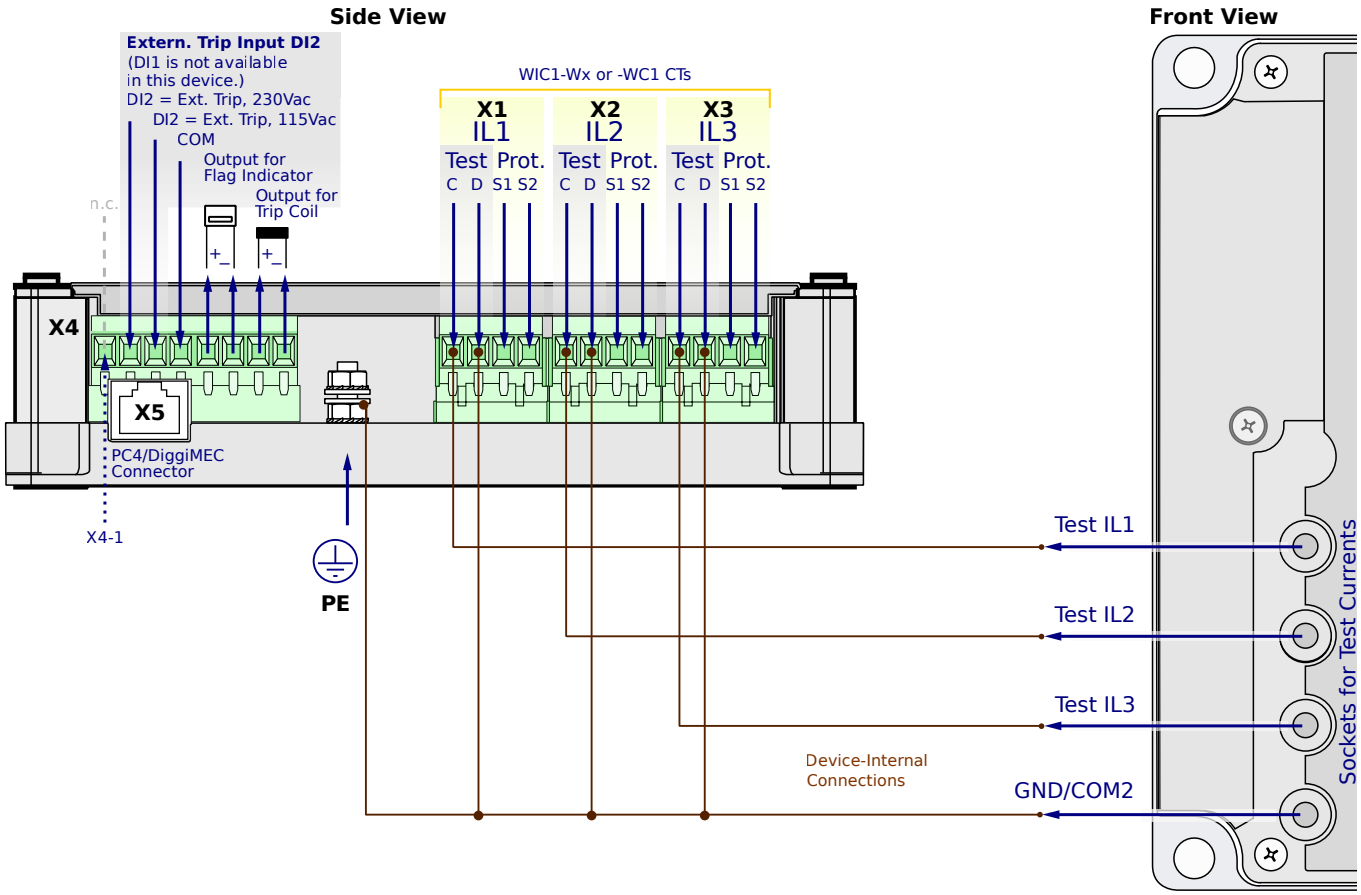


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2AA0

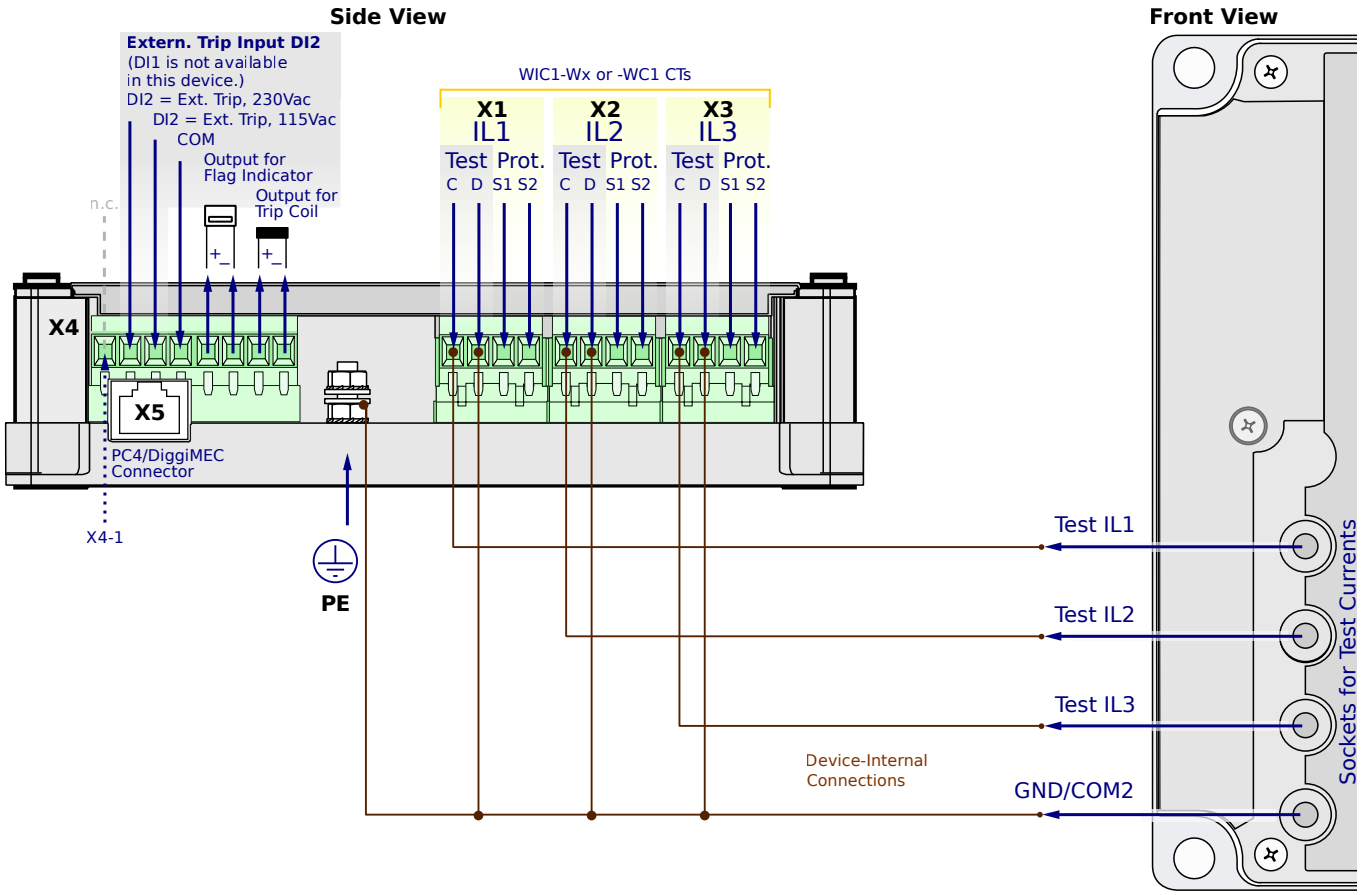


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2AAH

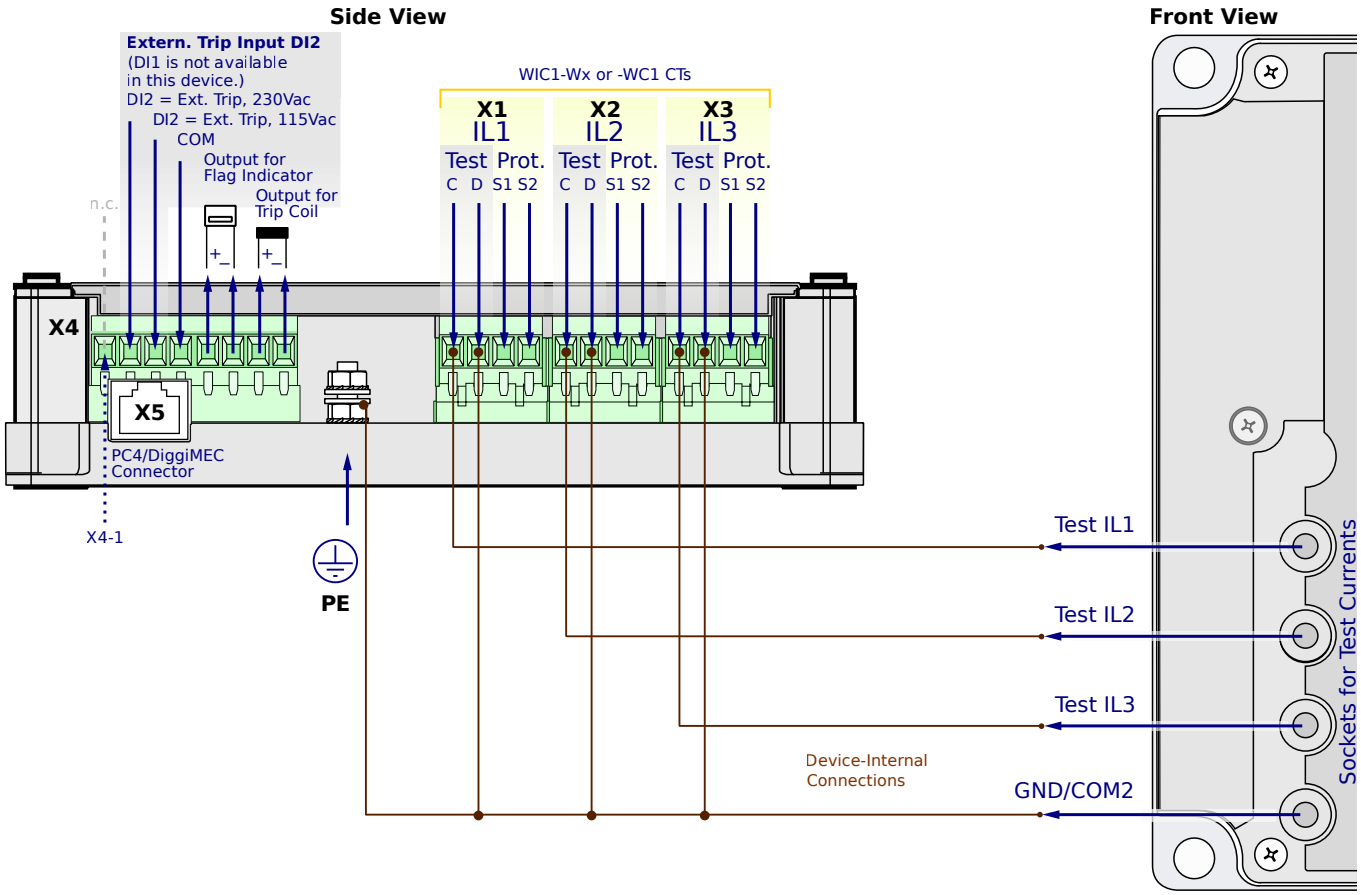


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2PA0

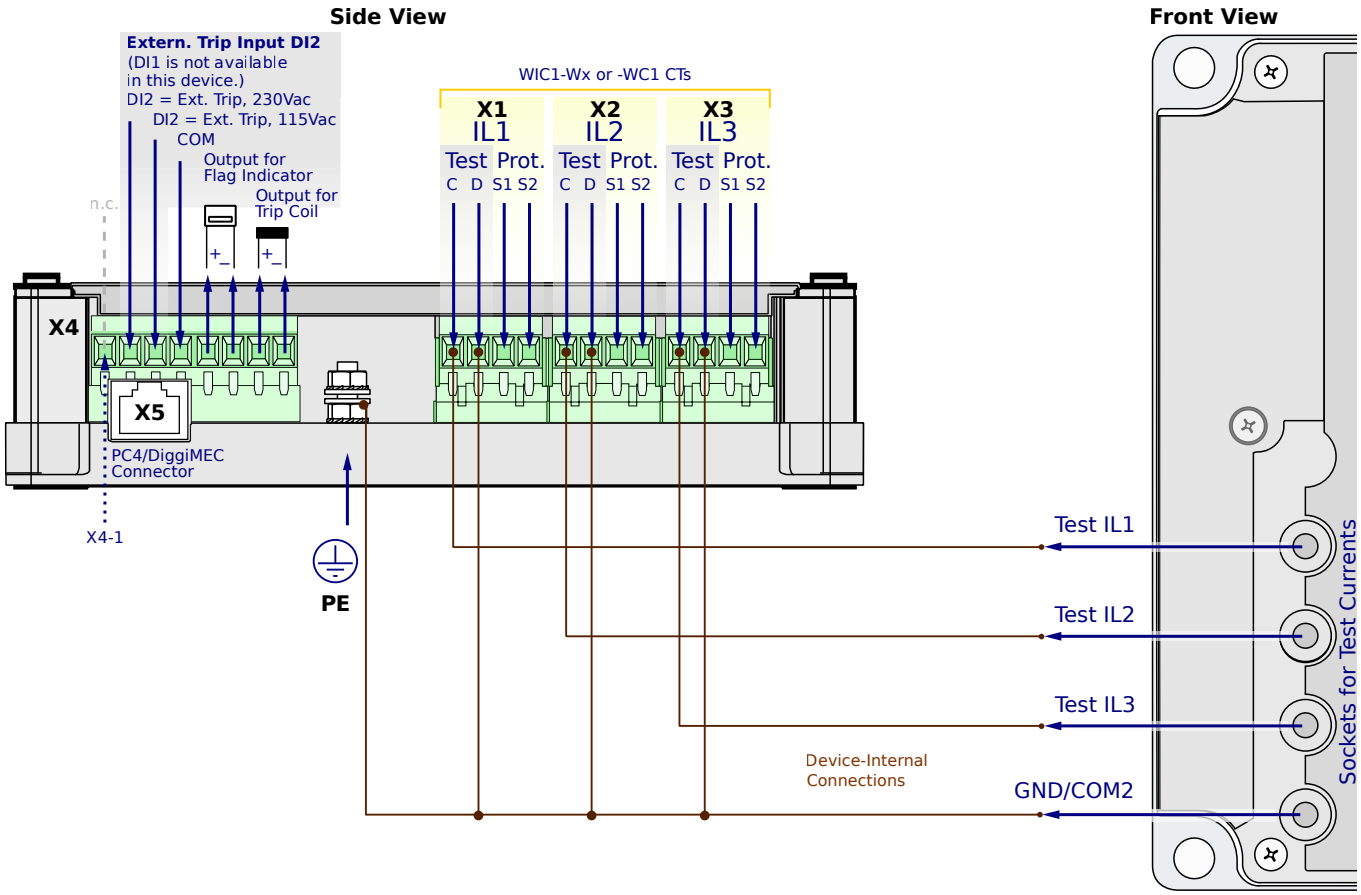


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NF2PAH

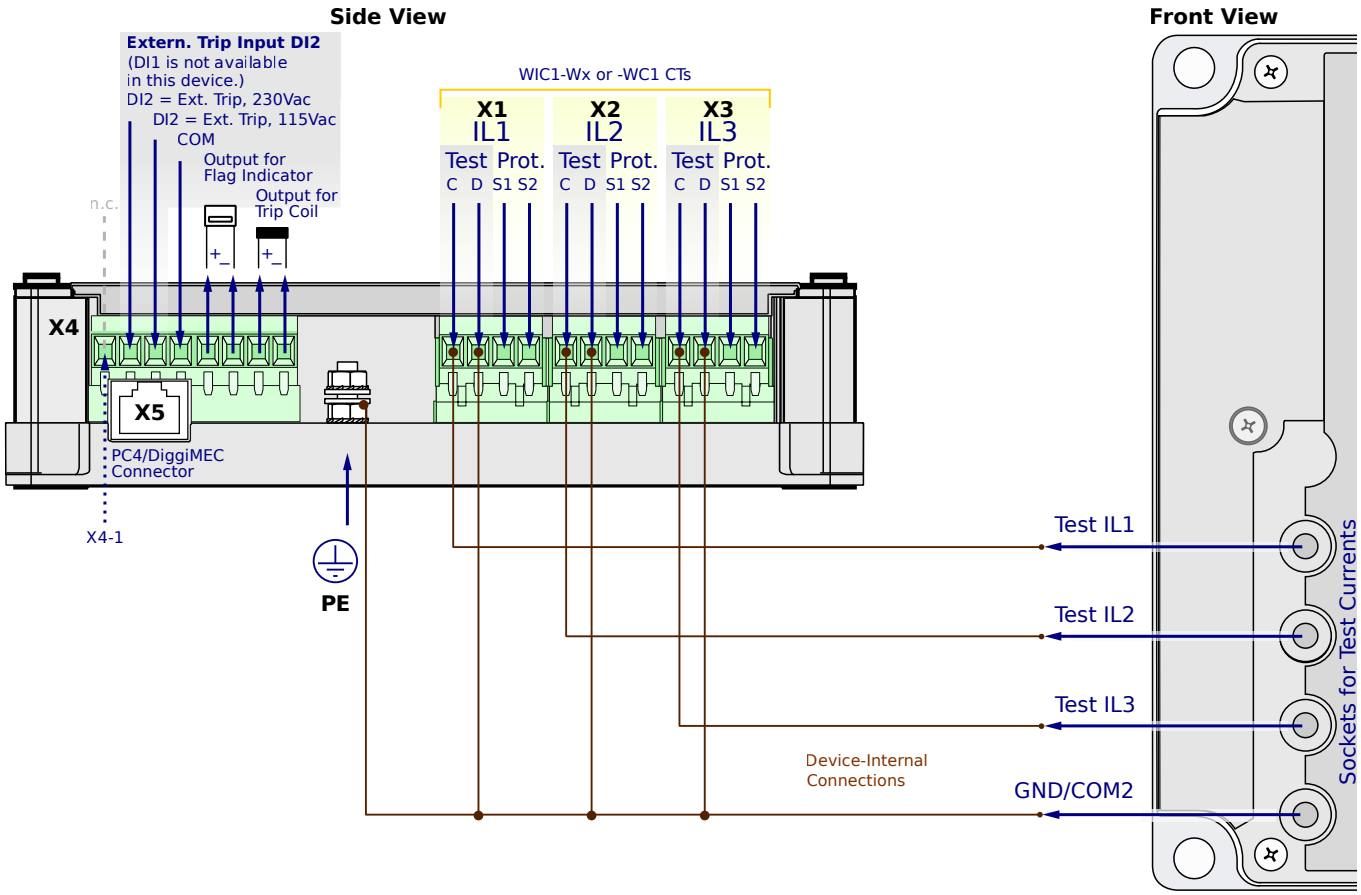


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0SA0

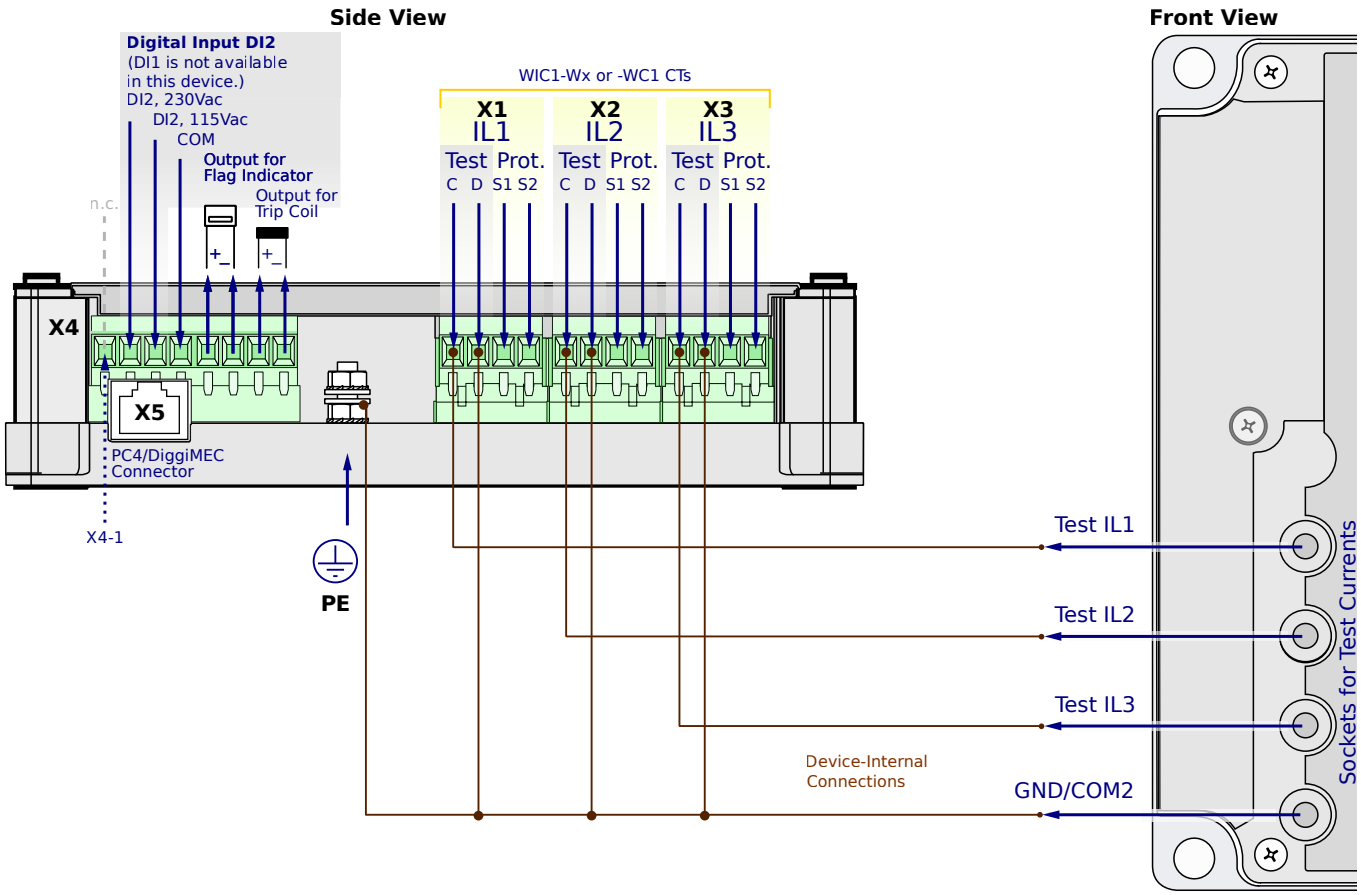


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0SAH

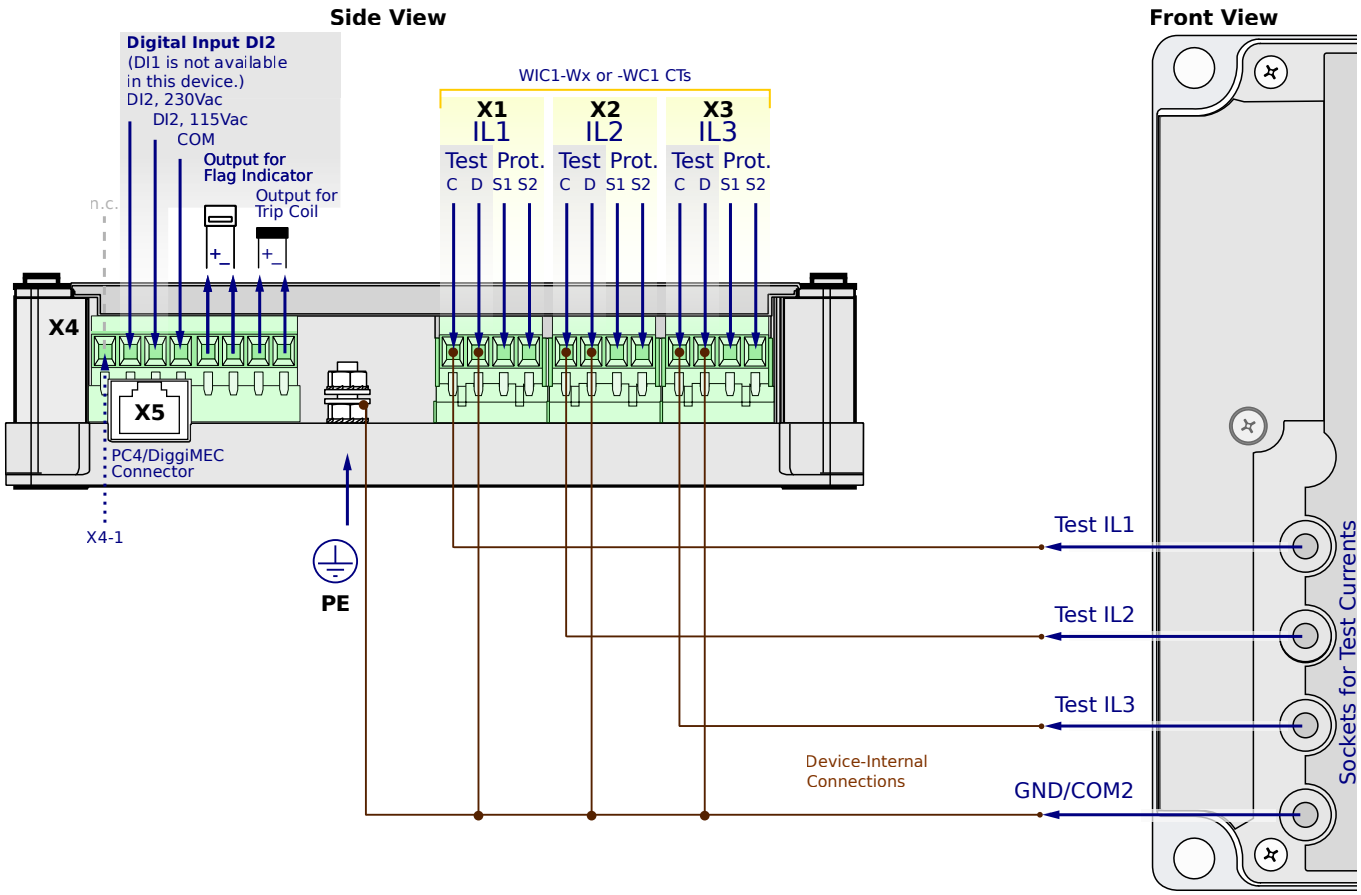


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0AA0

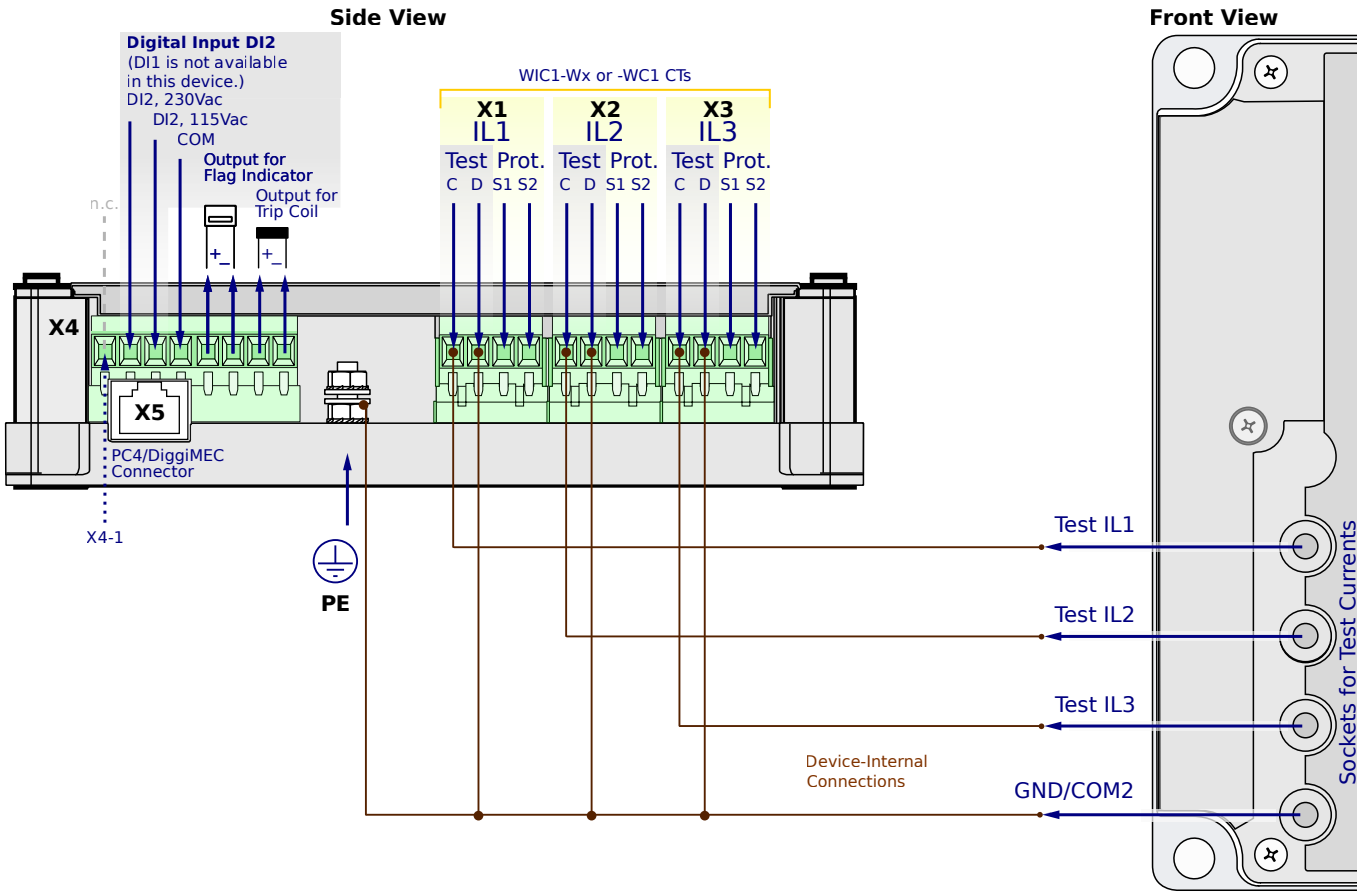


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0AAH

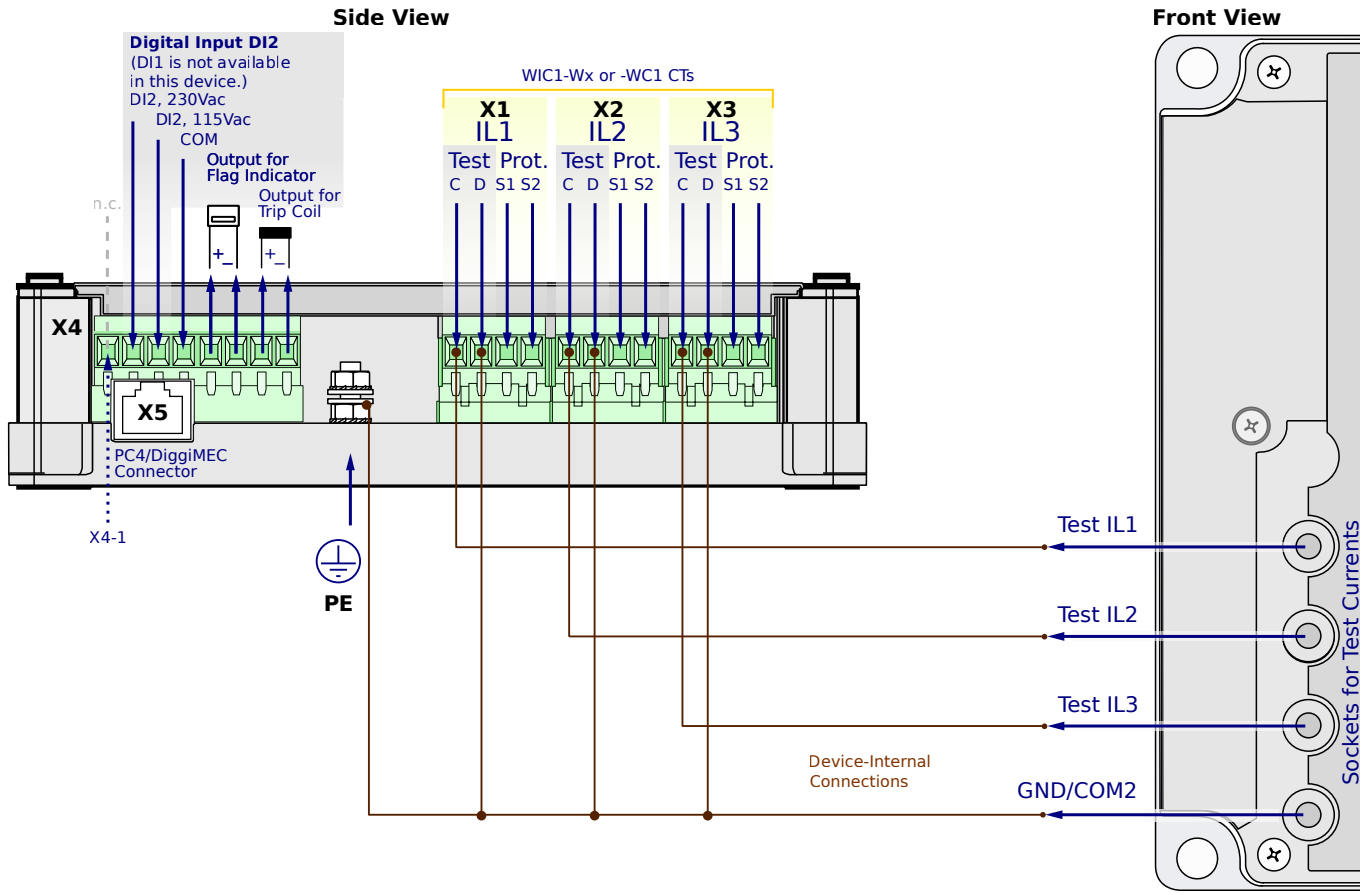


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0PA0

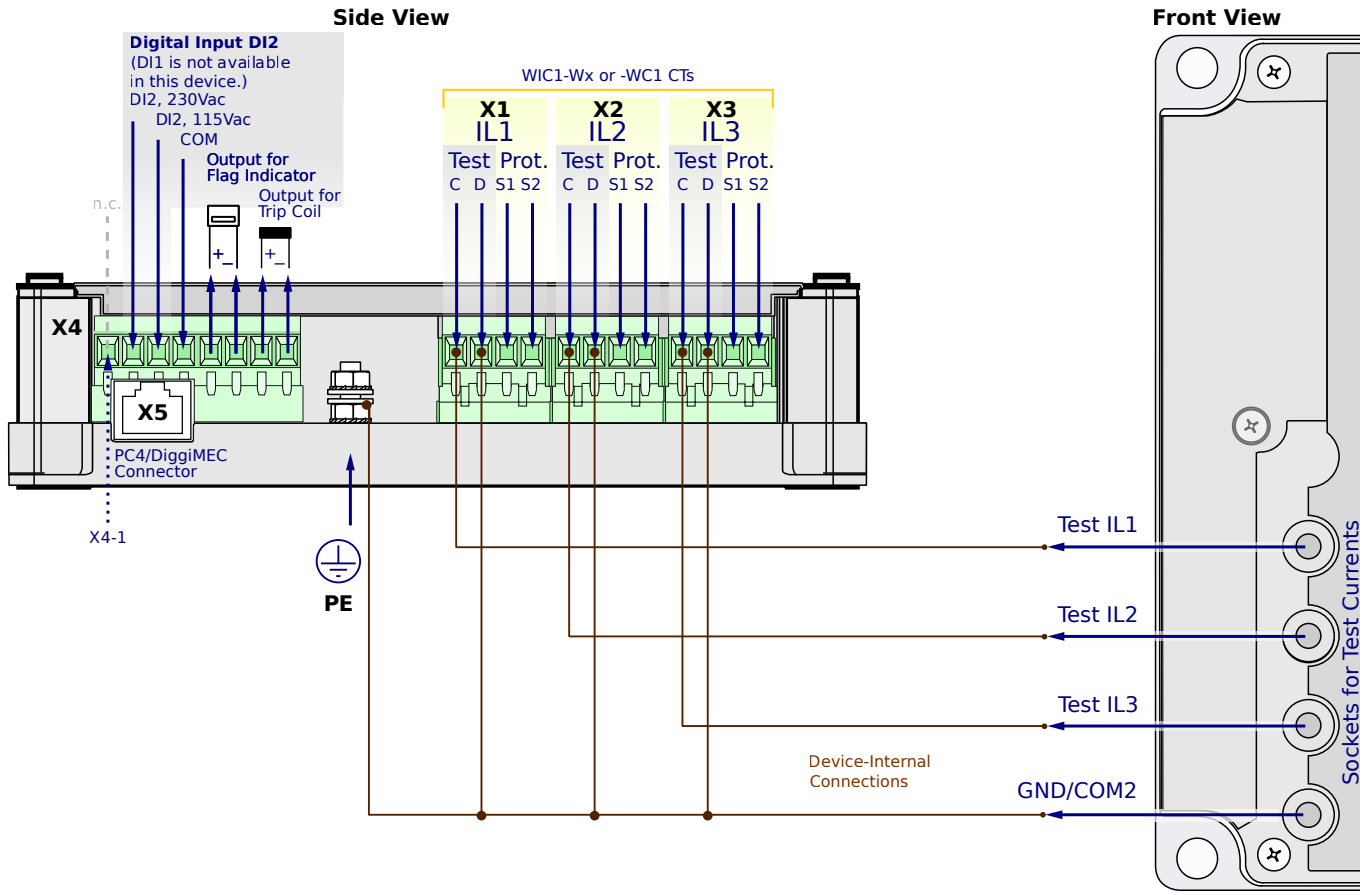


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC0PAH

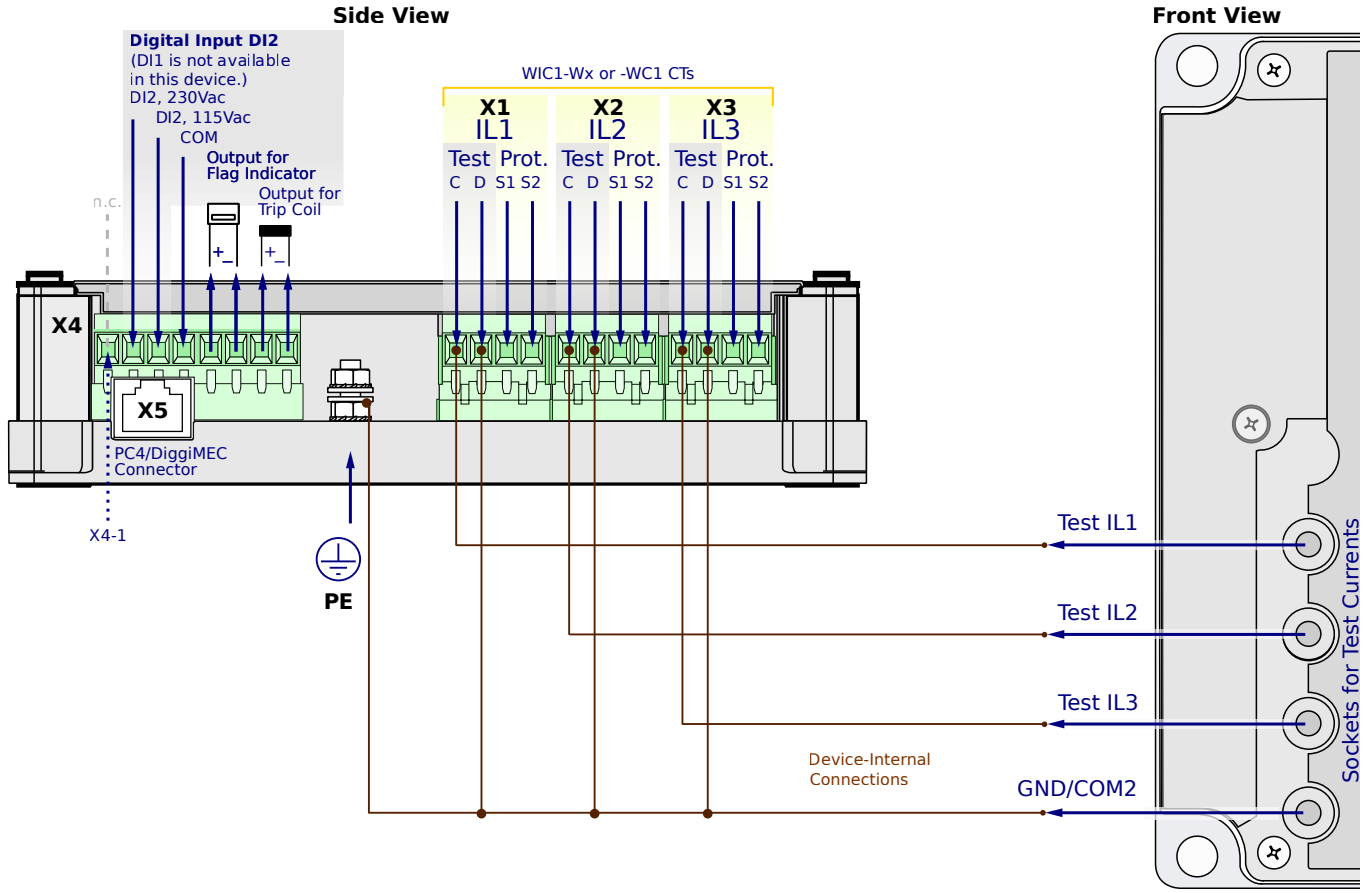


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1SA0

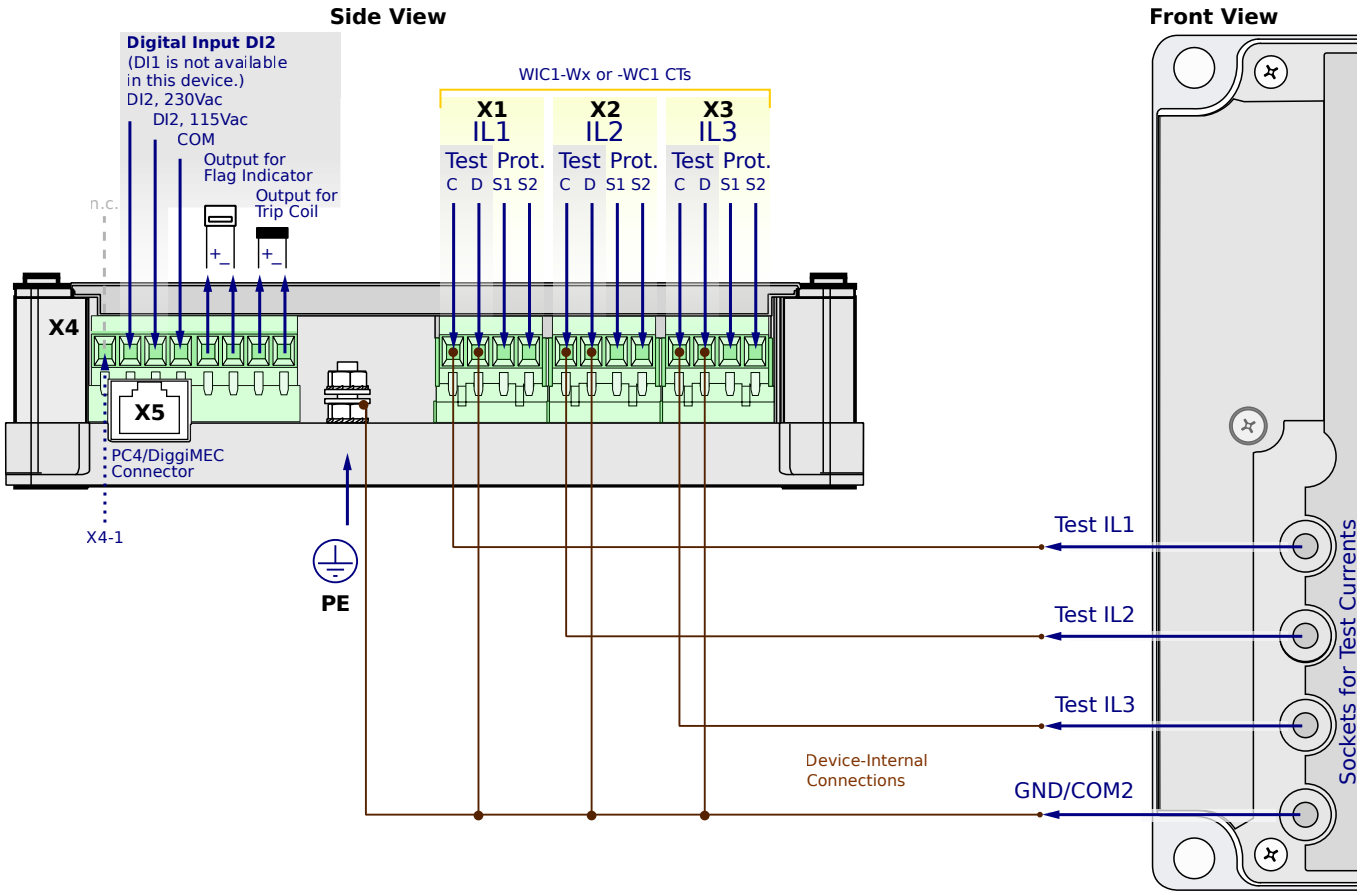


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1SAH

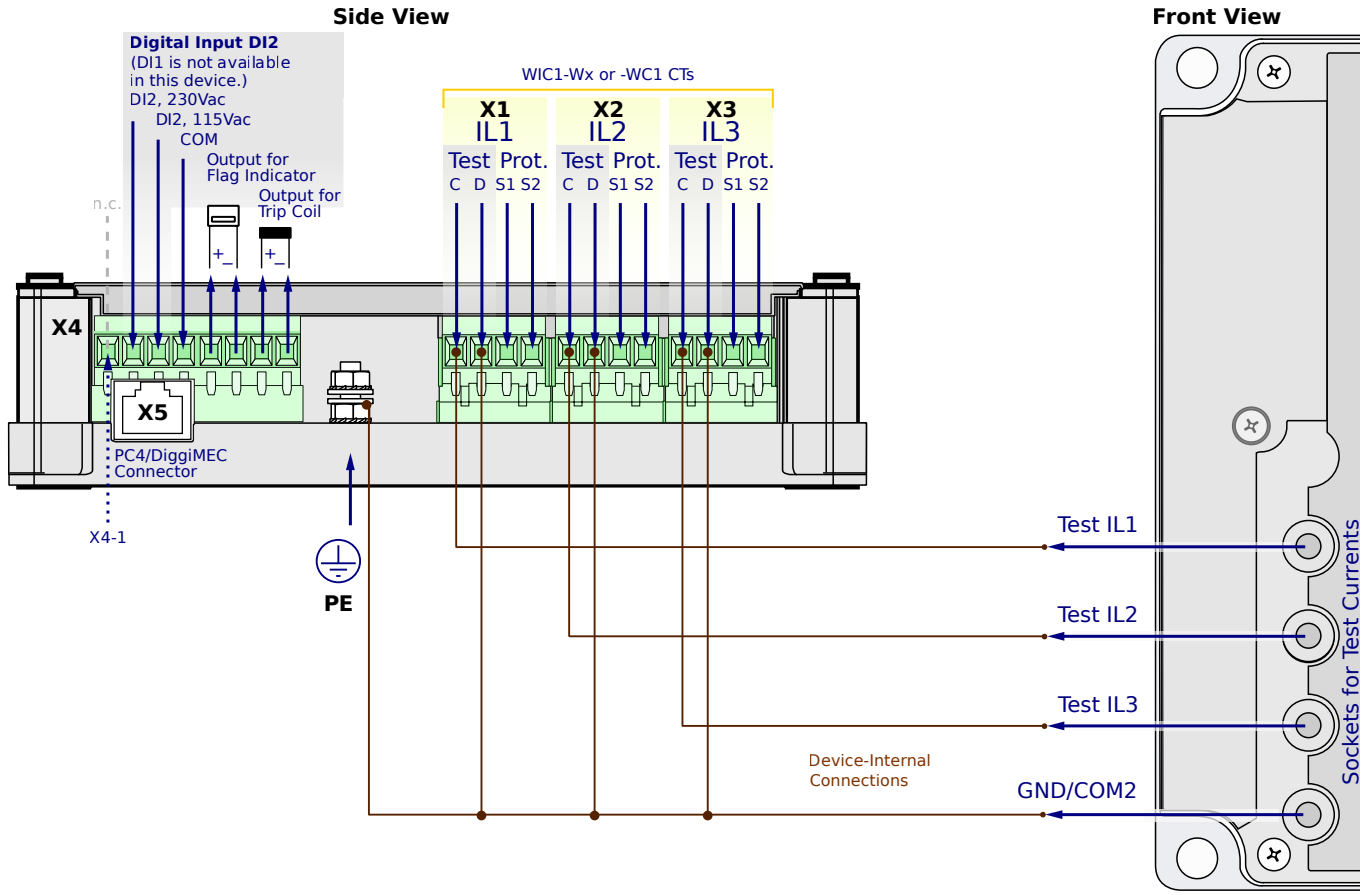


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1AA0

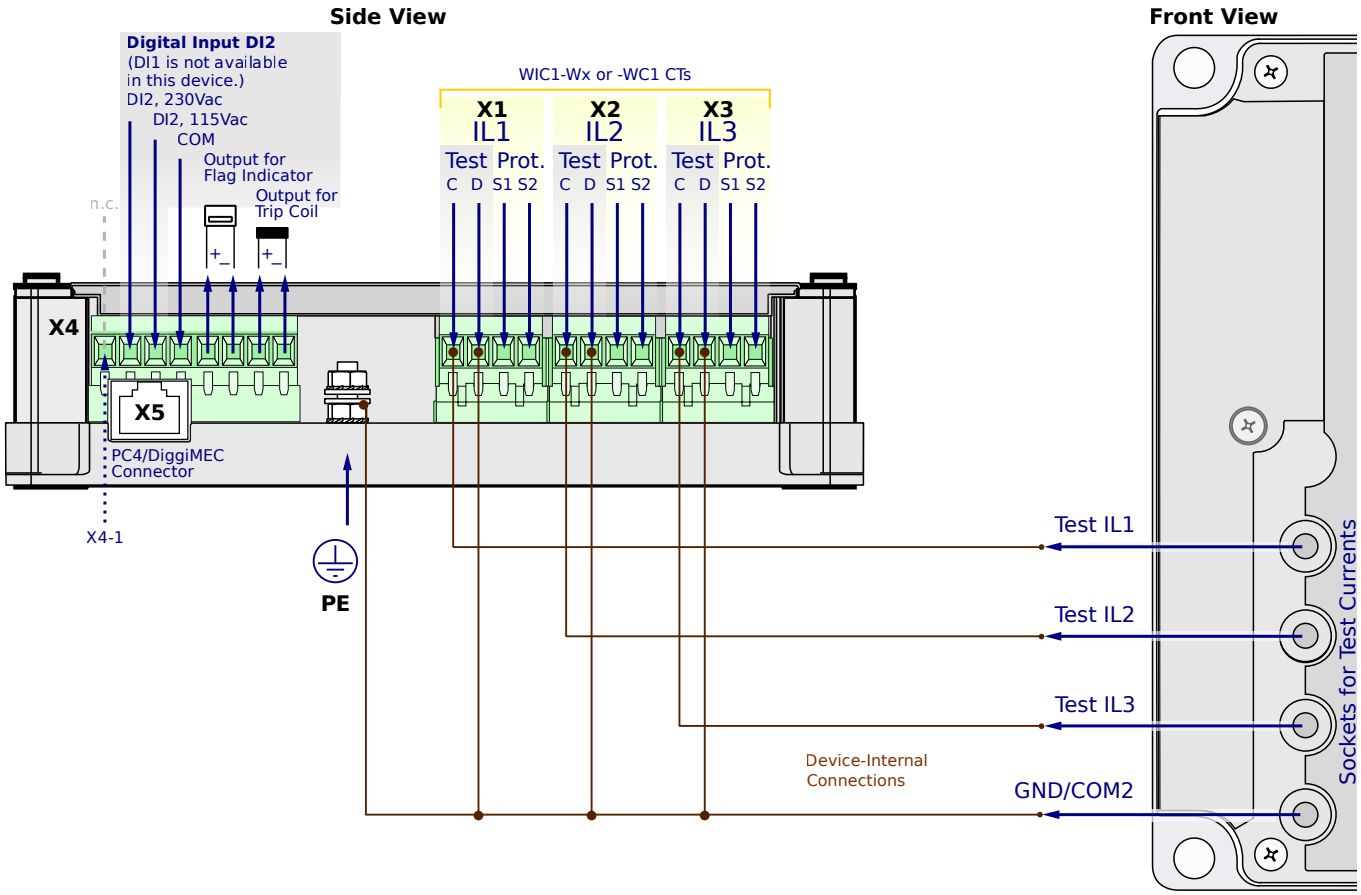


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1AAH

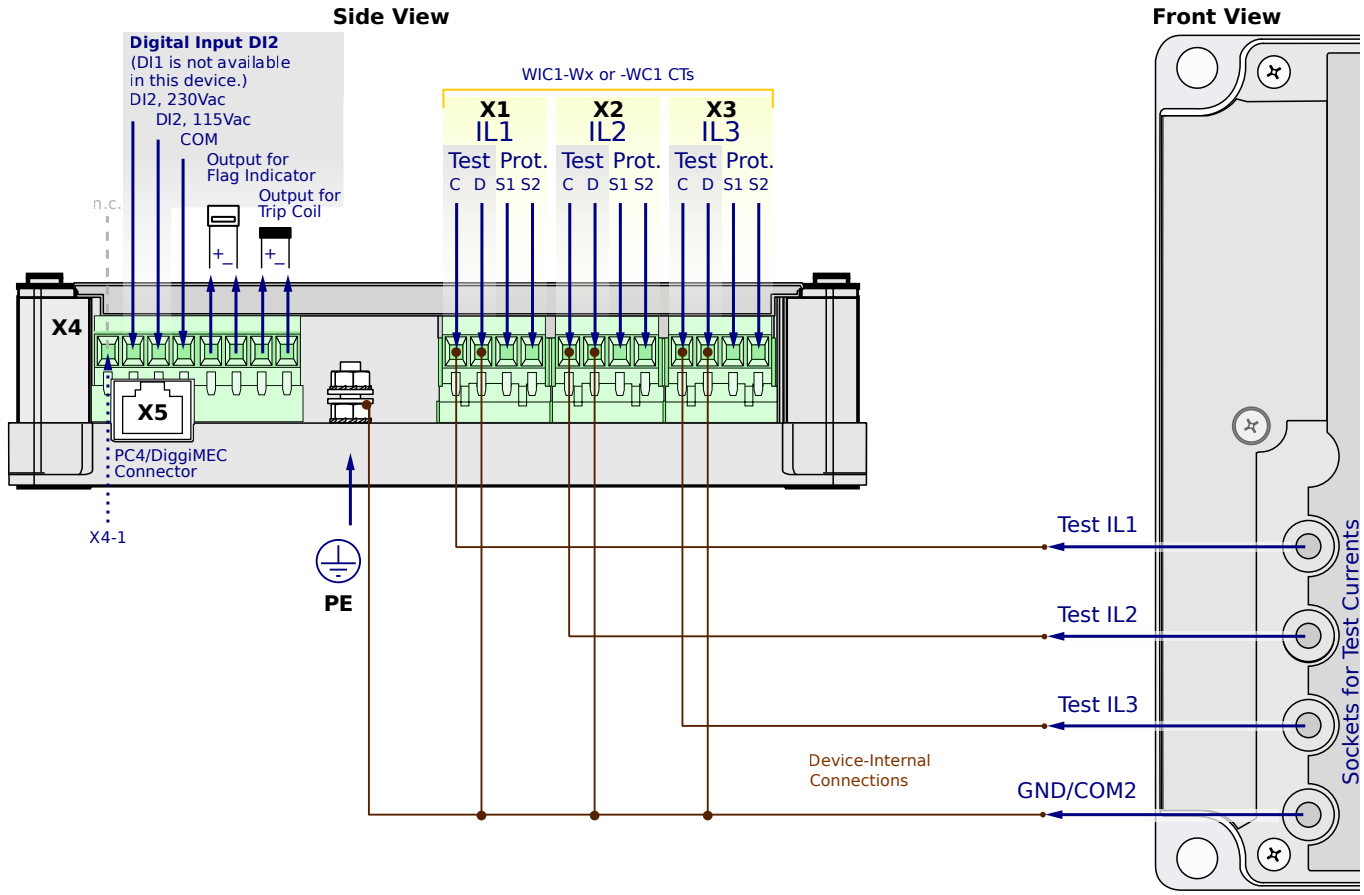


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1PA0

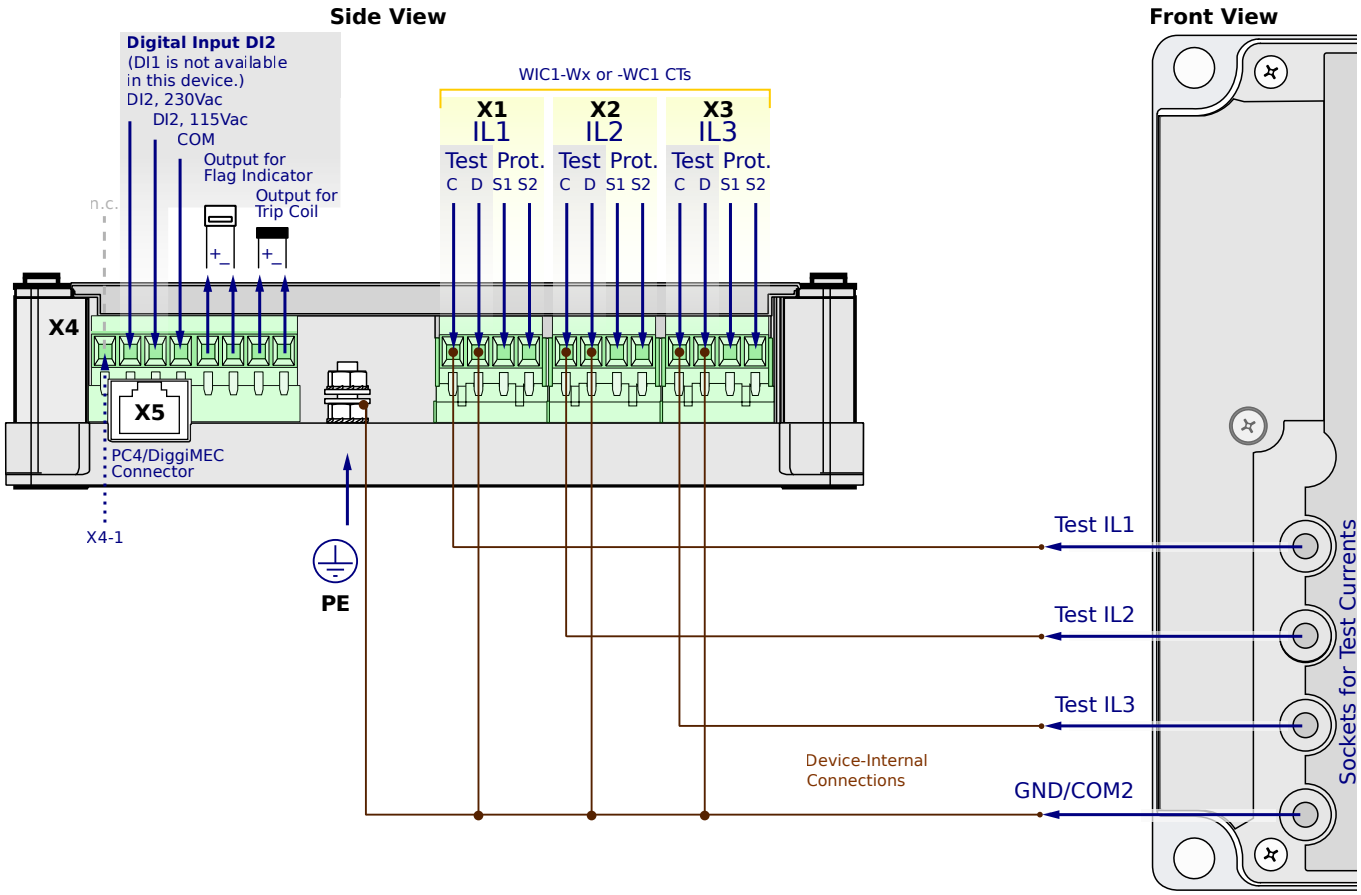


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC1PAH

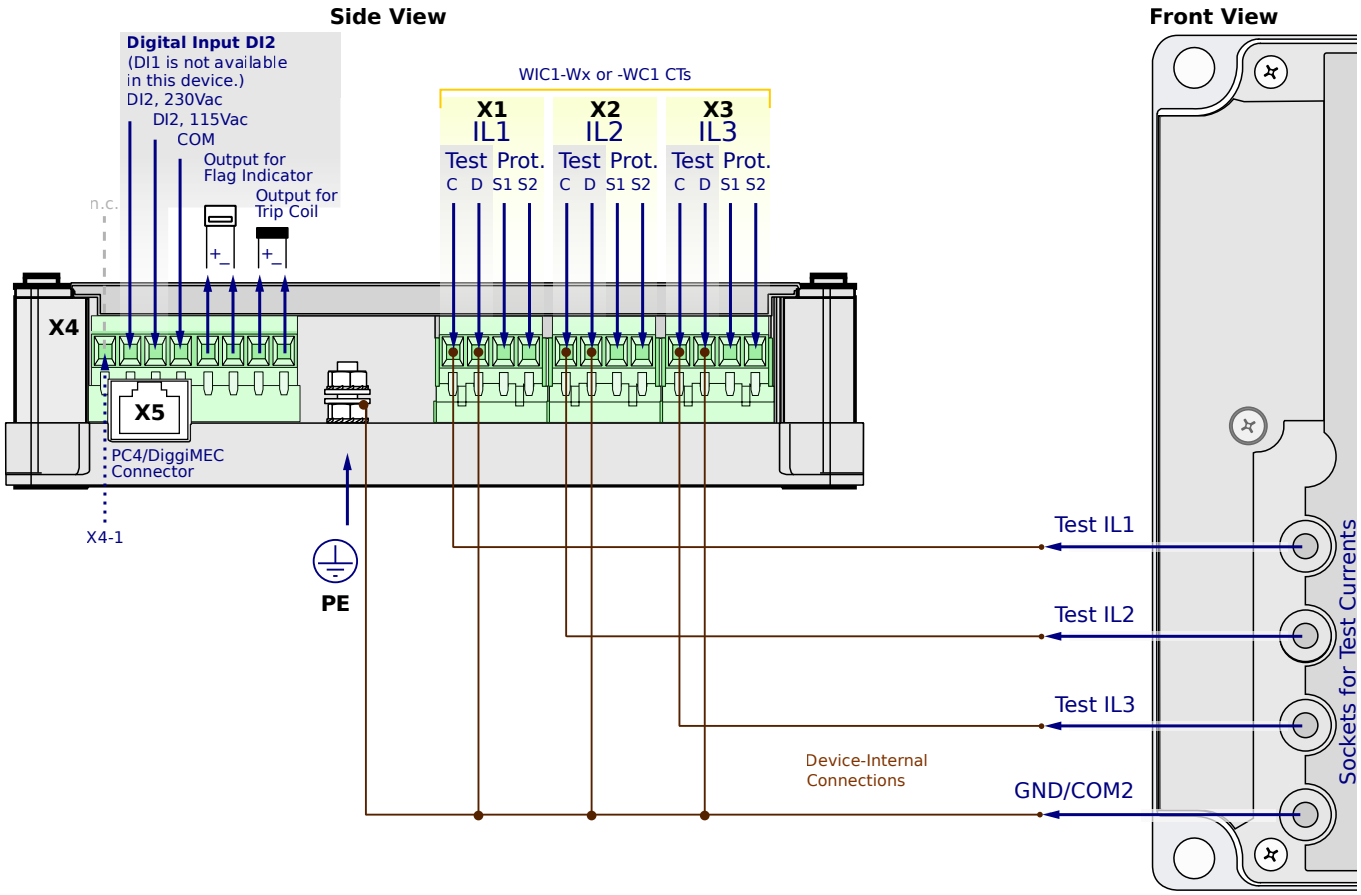


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2SA0

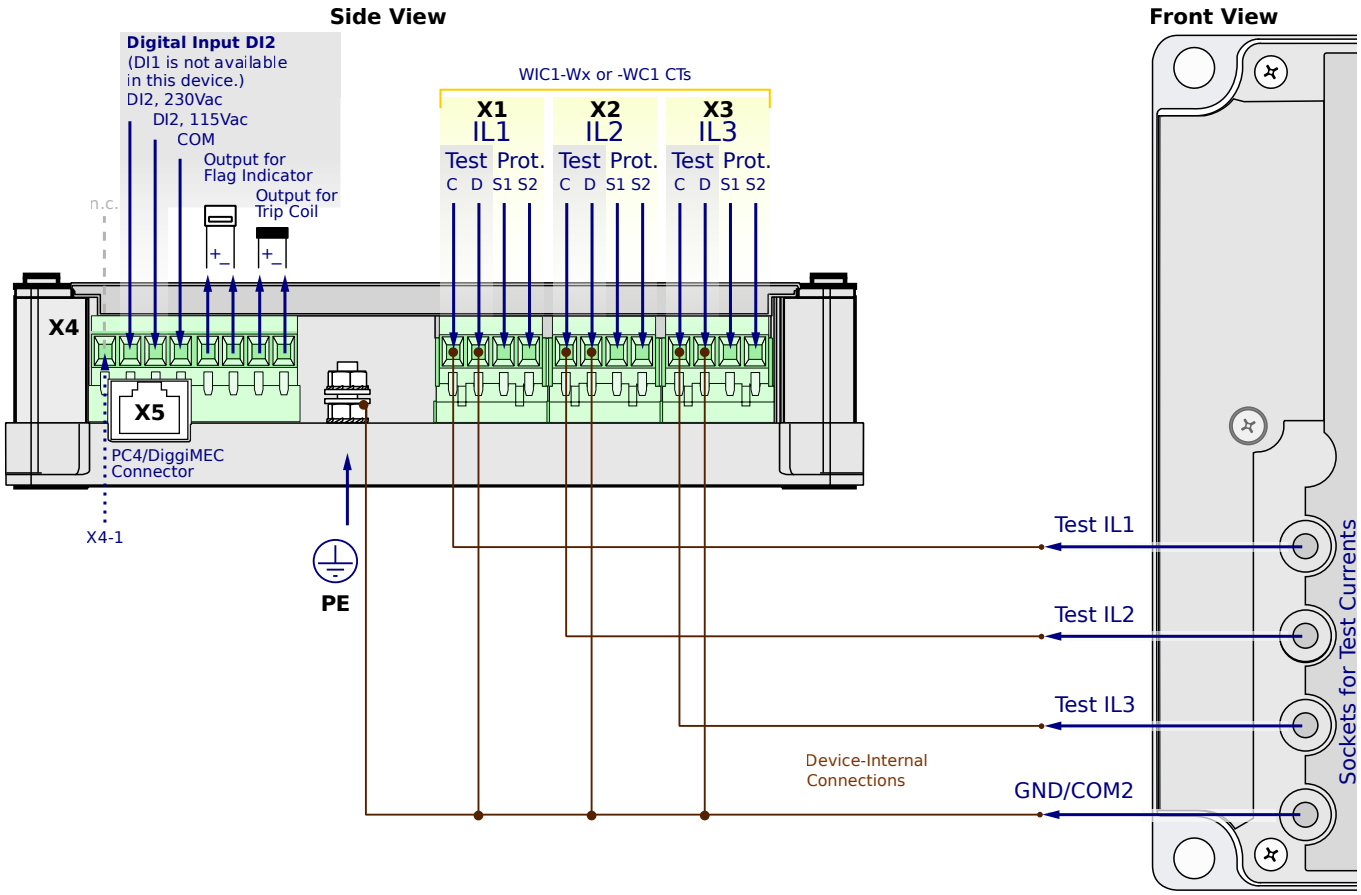


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2SAH

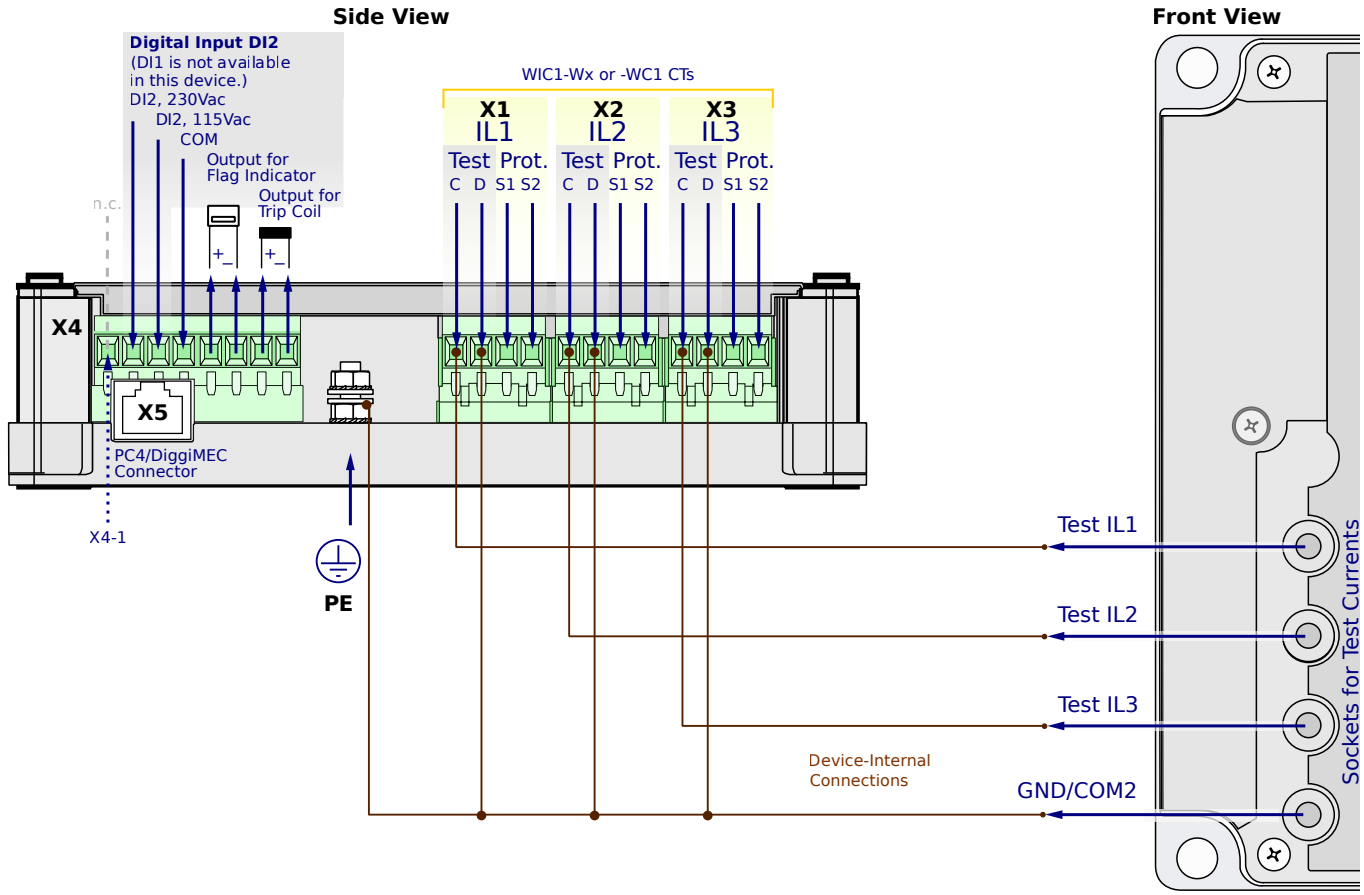


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2AA0

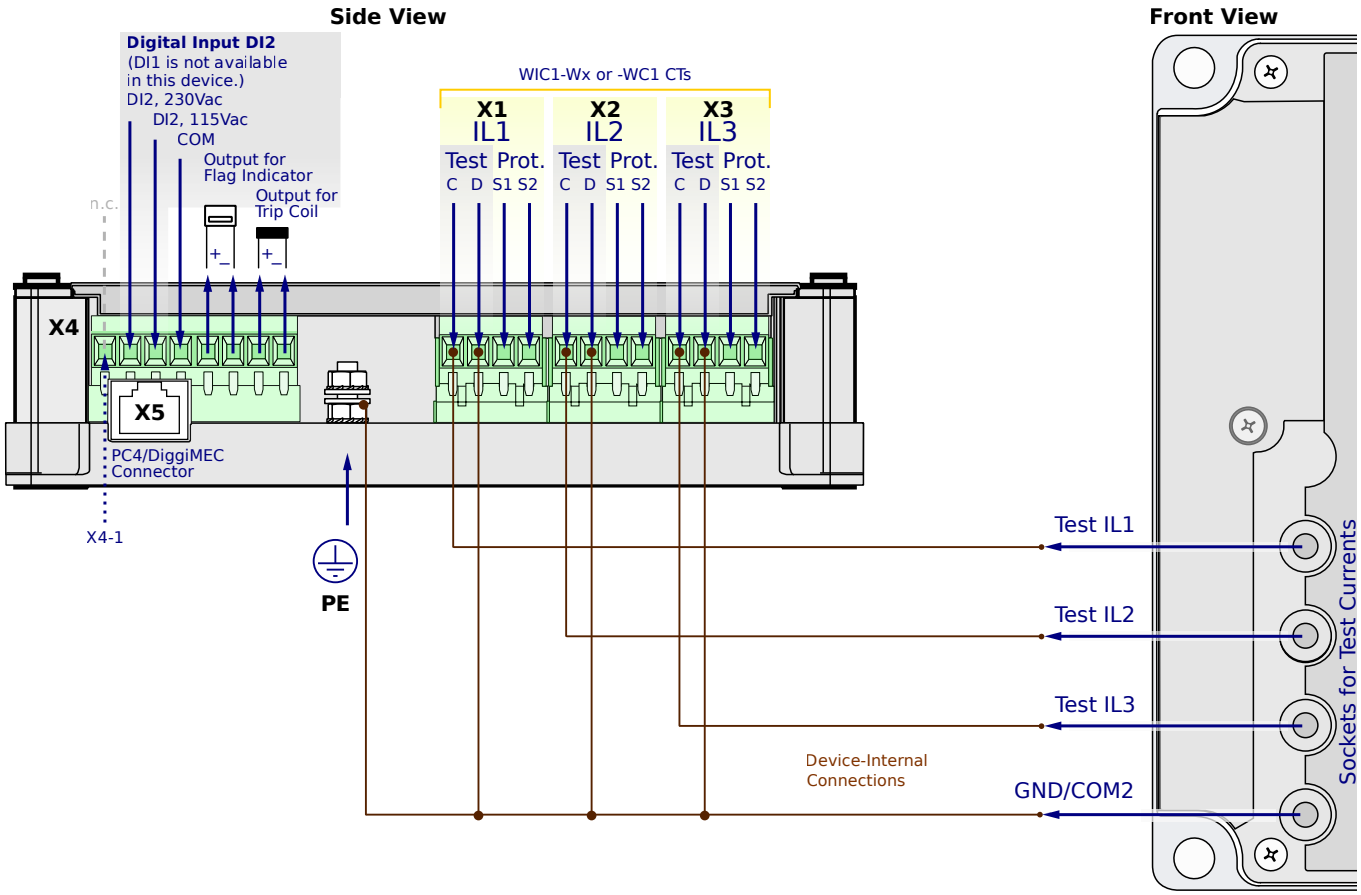


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2AAH

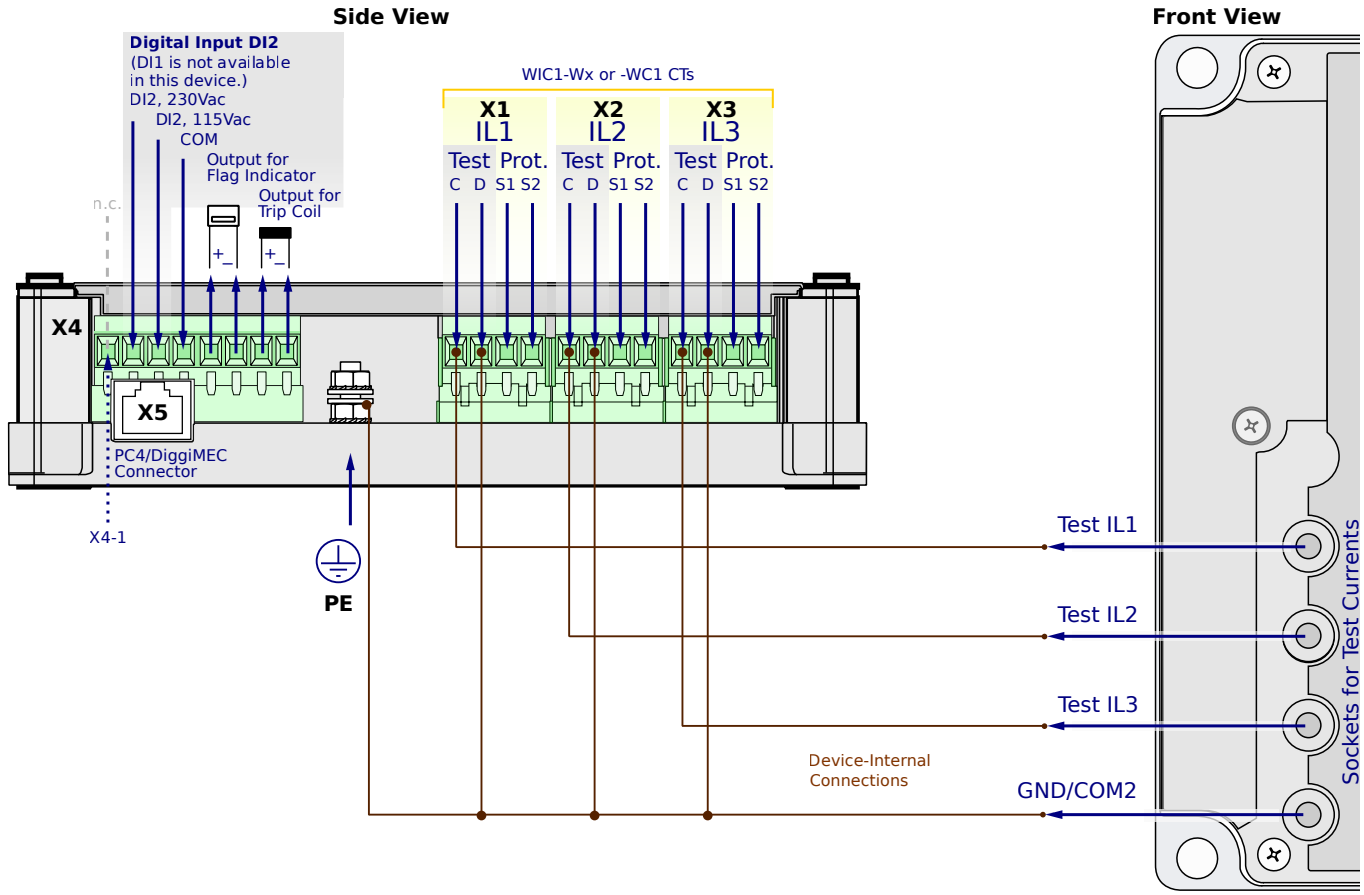


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2PA0

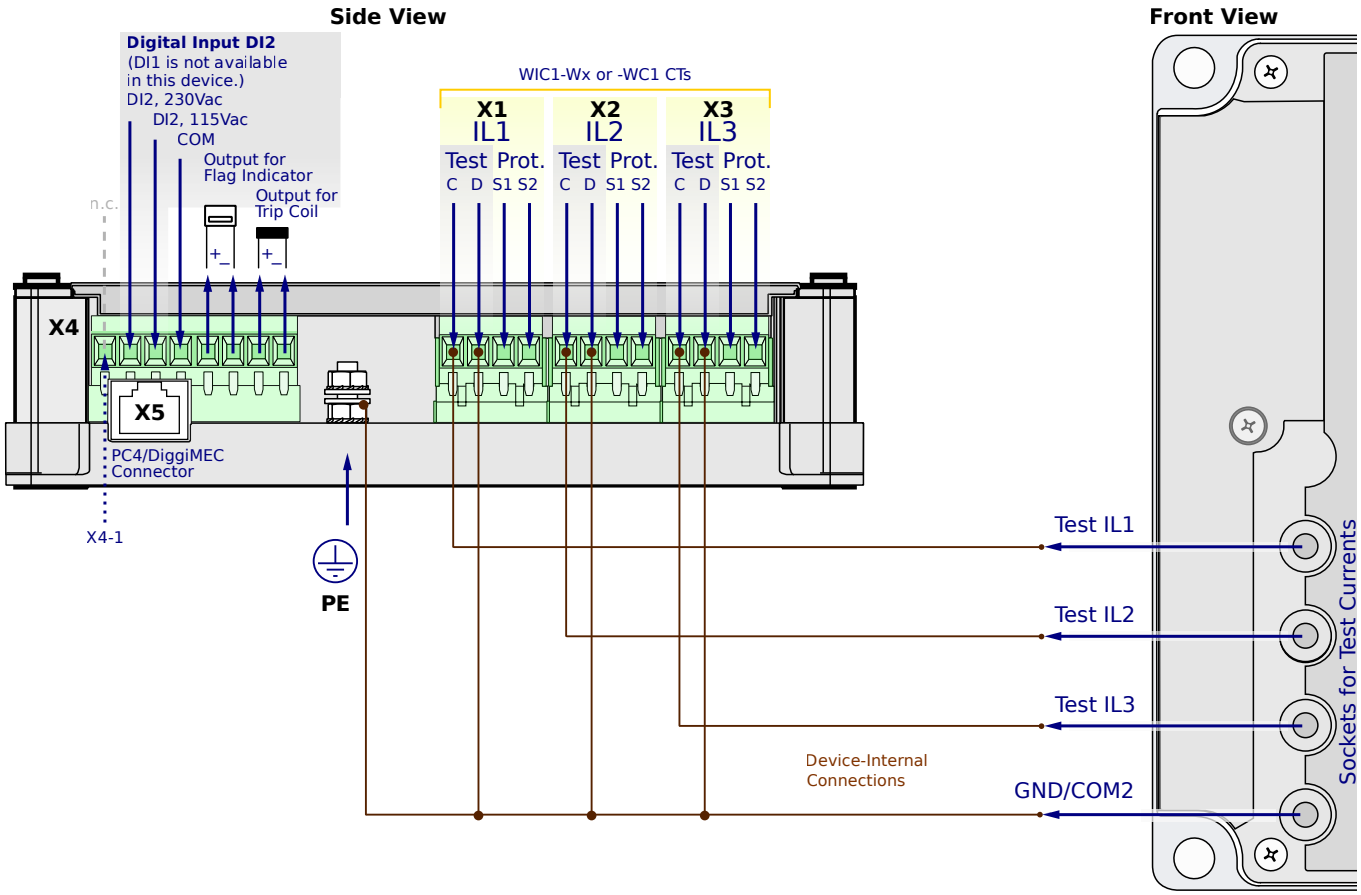


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5NC2PAH

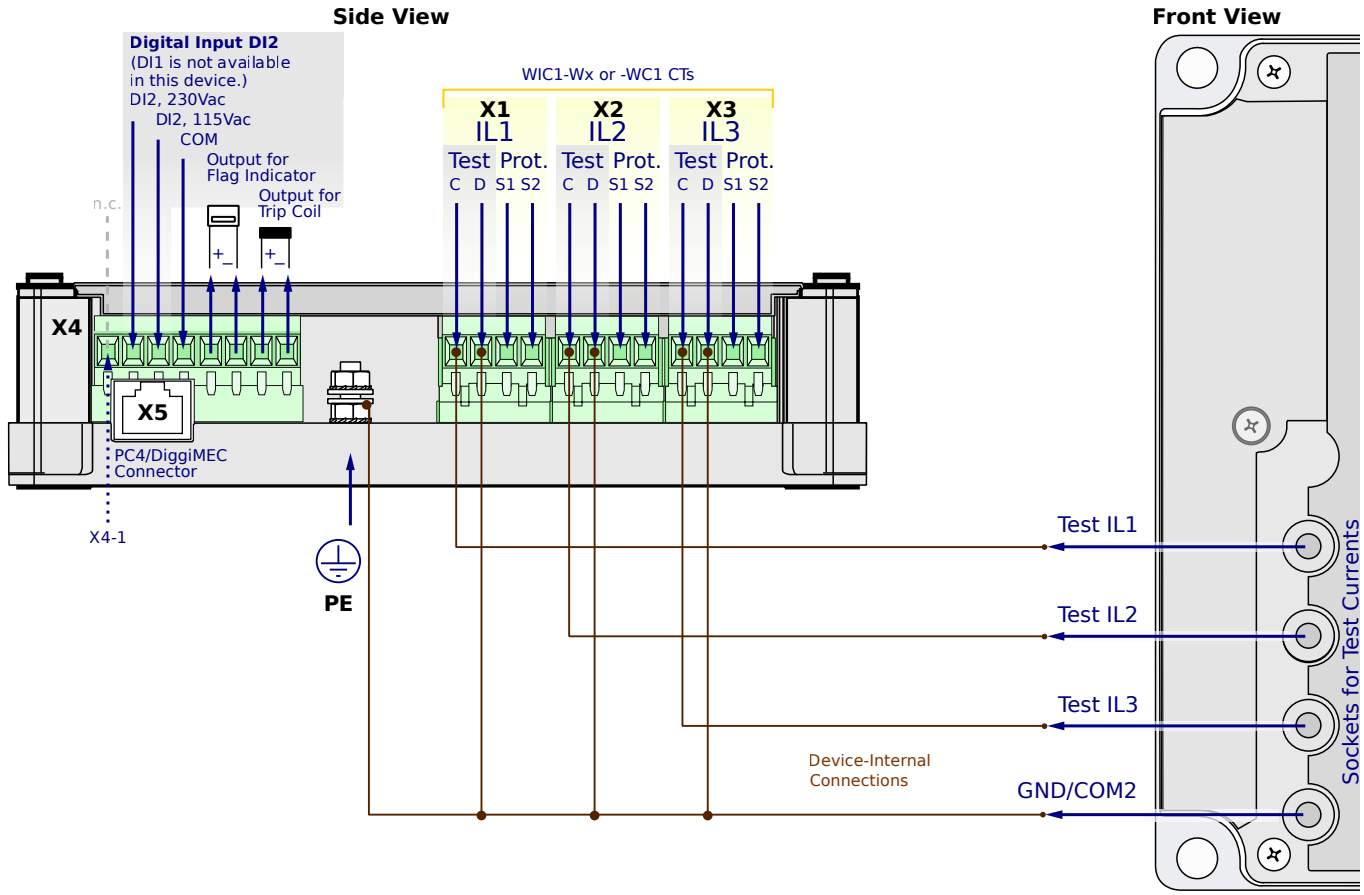


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1SA0

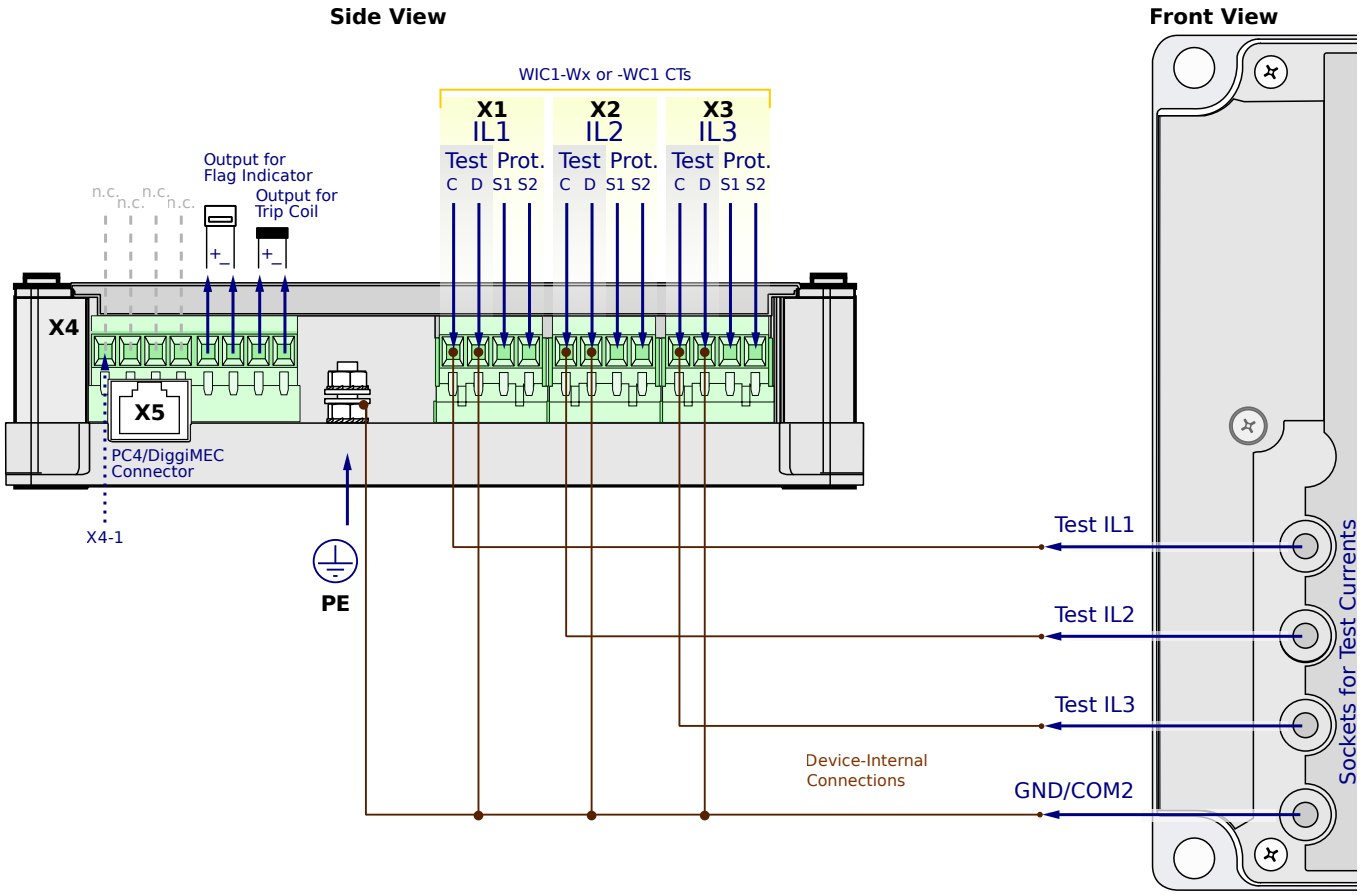


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1SAH

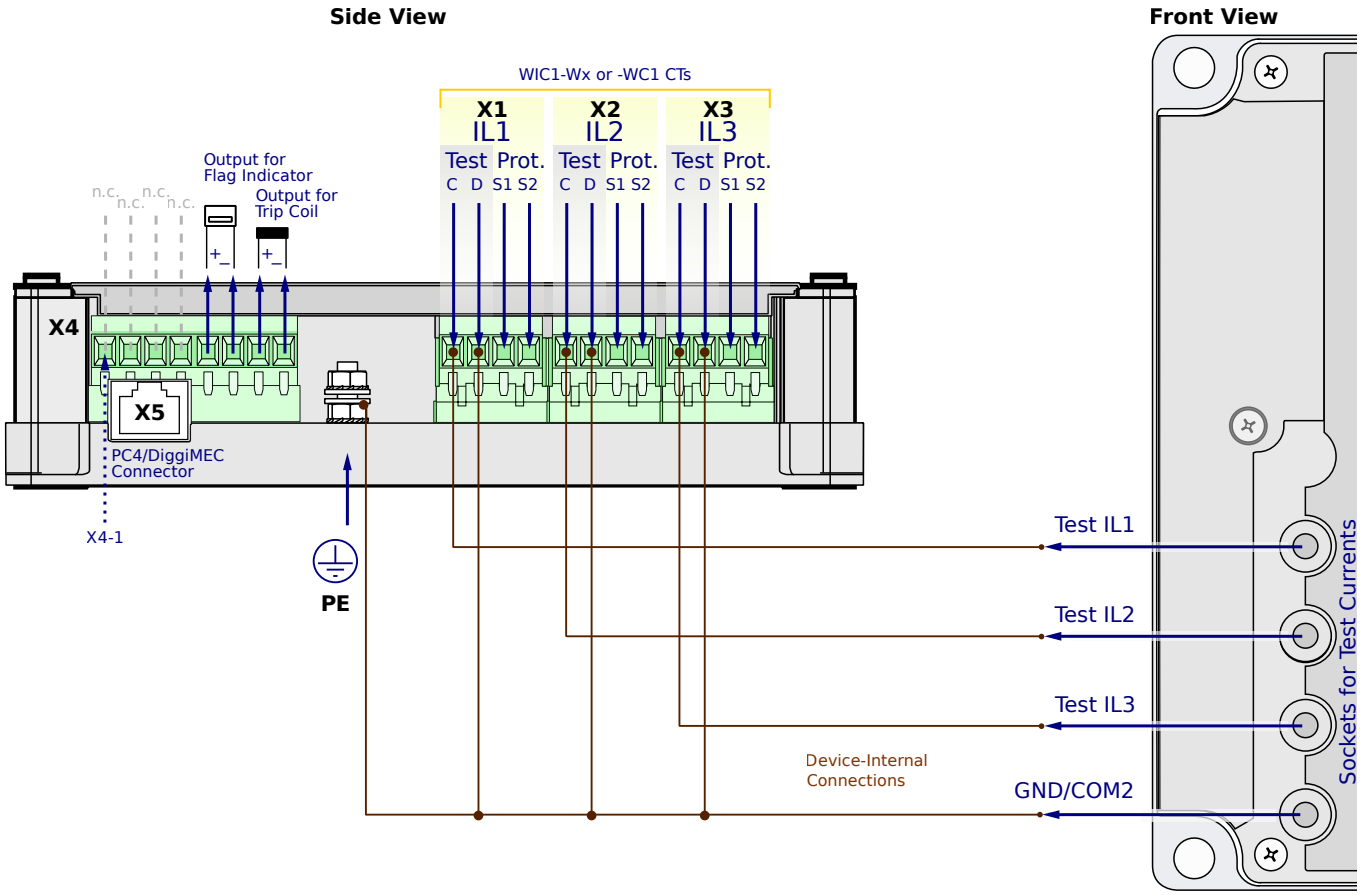


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1AA0

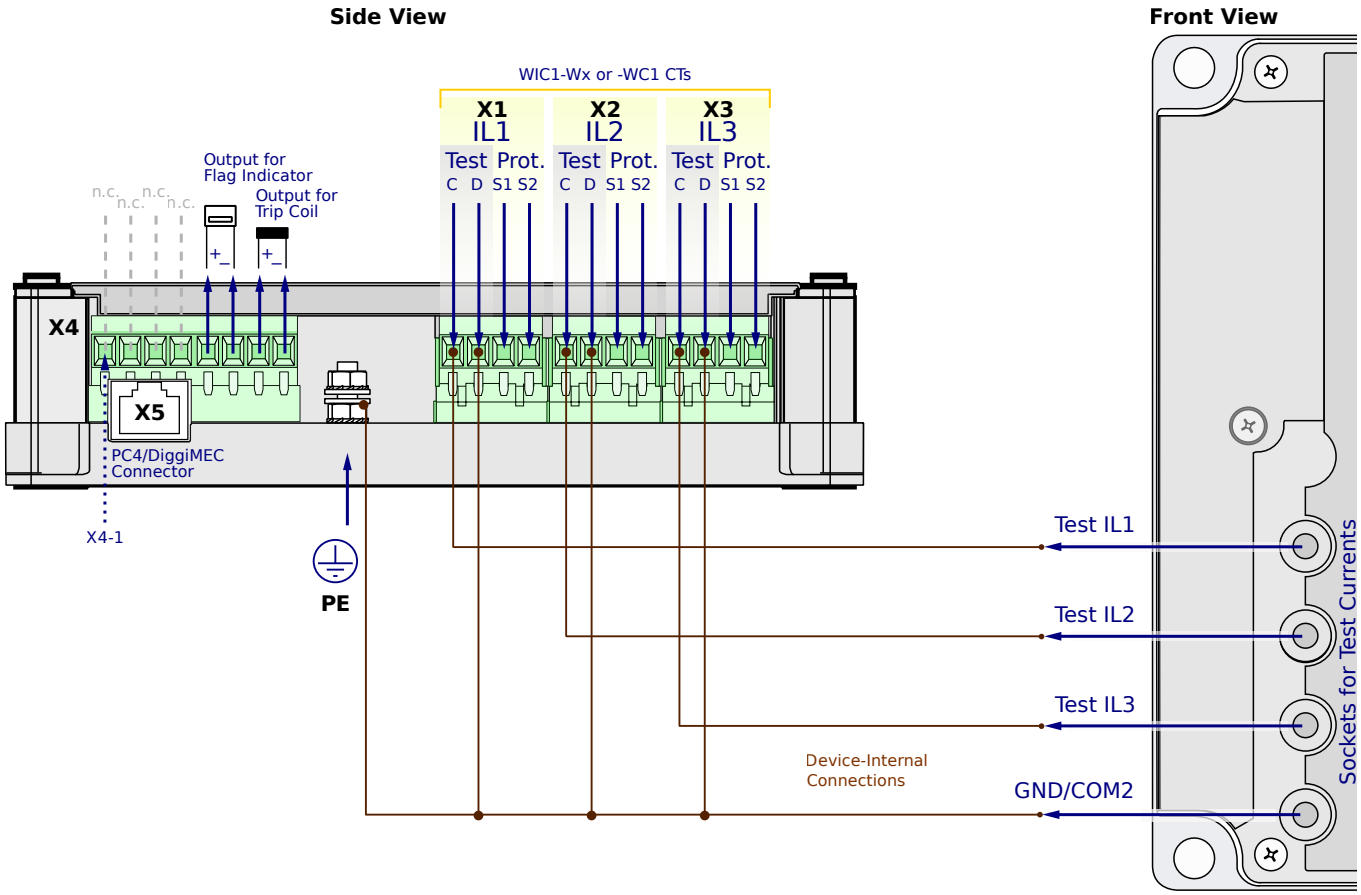


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1AAH

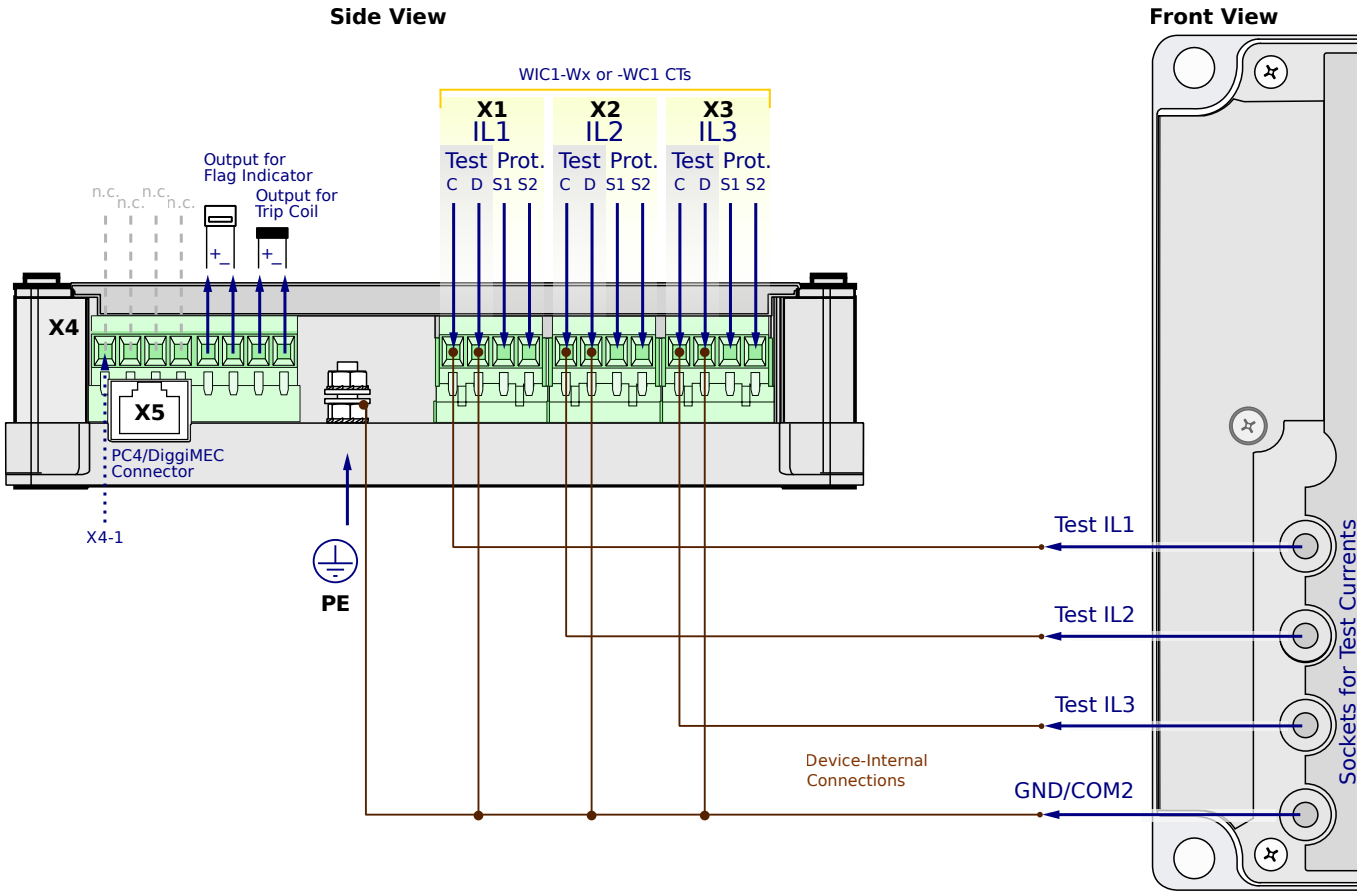


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1PA0

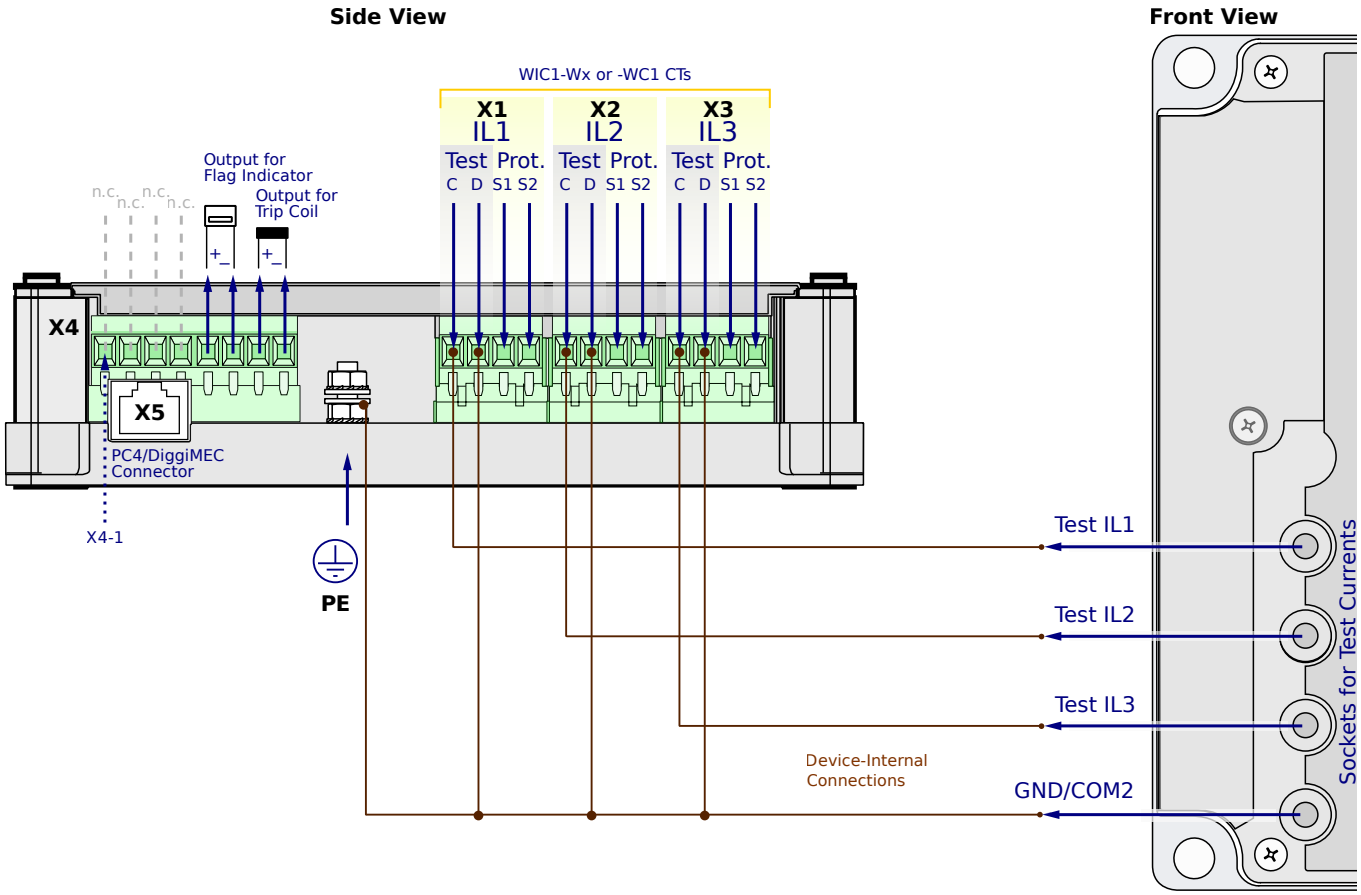


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN1PAH

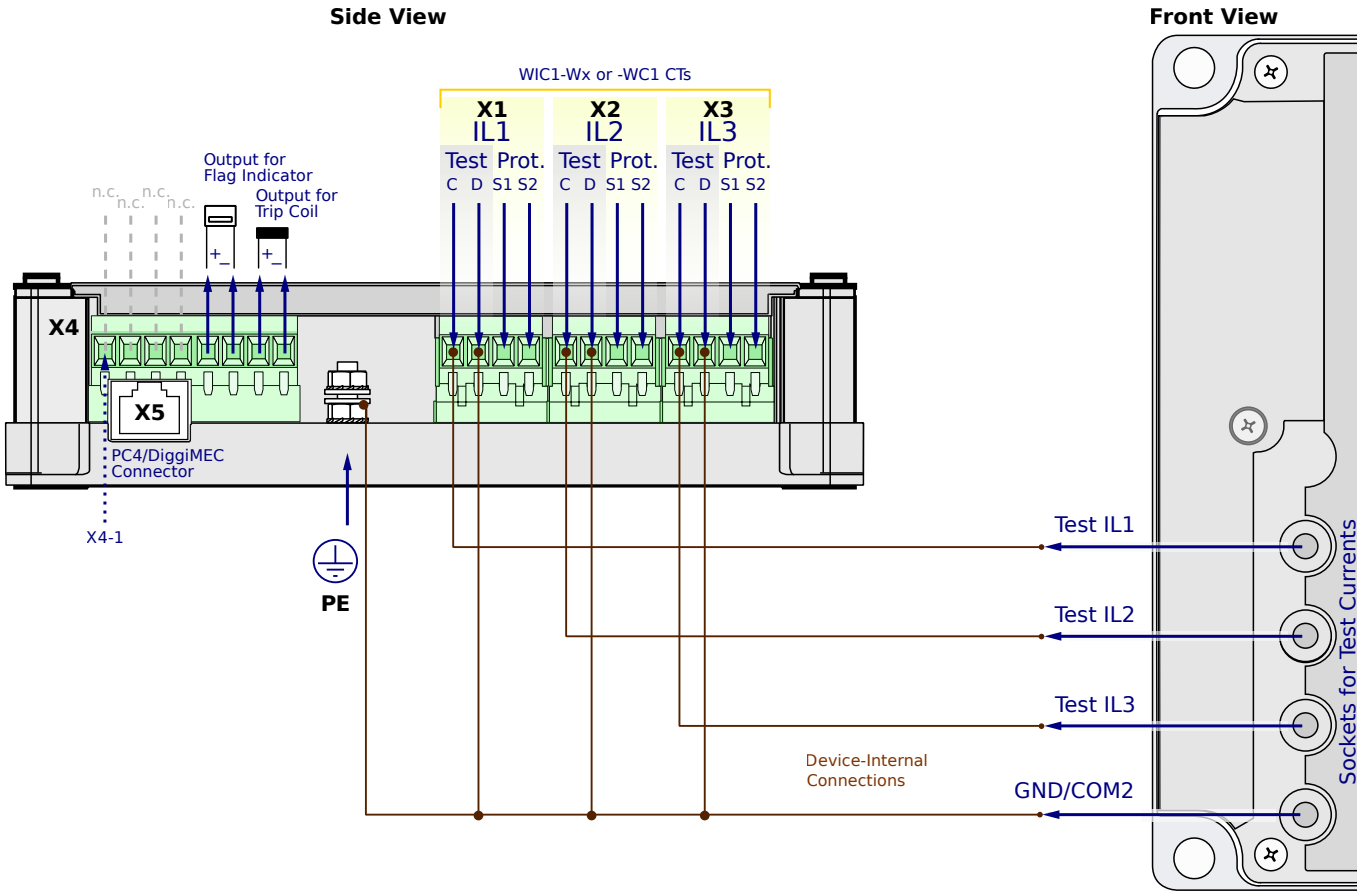


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2SA0

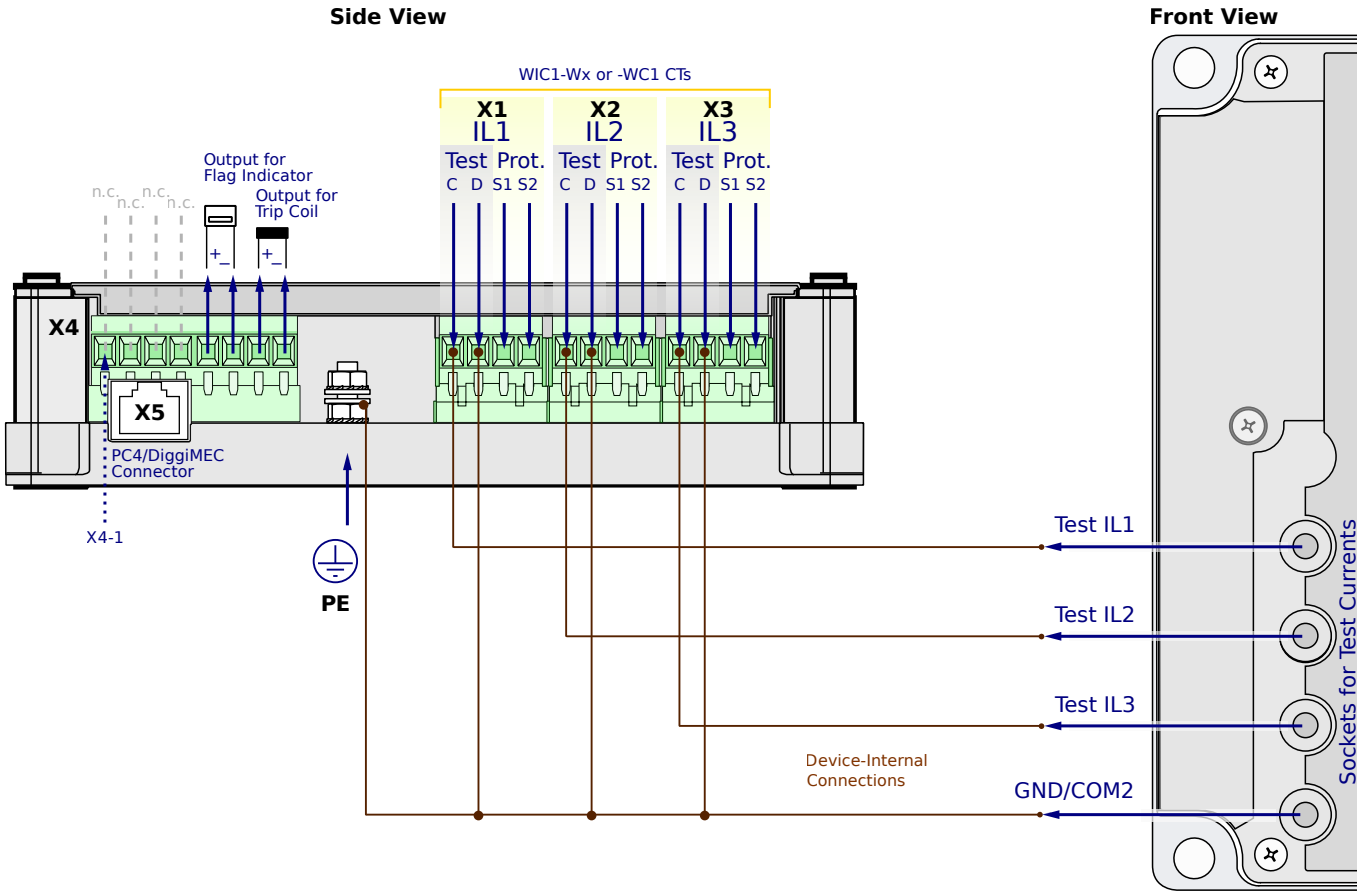


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2SAH

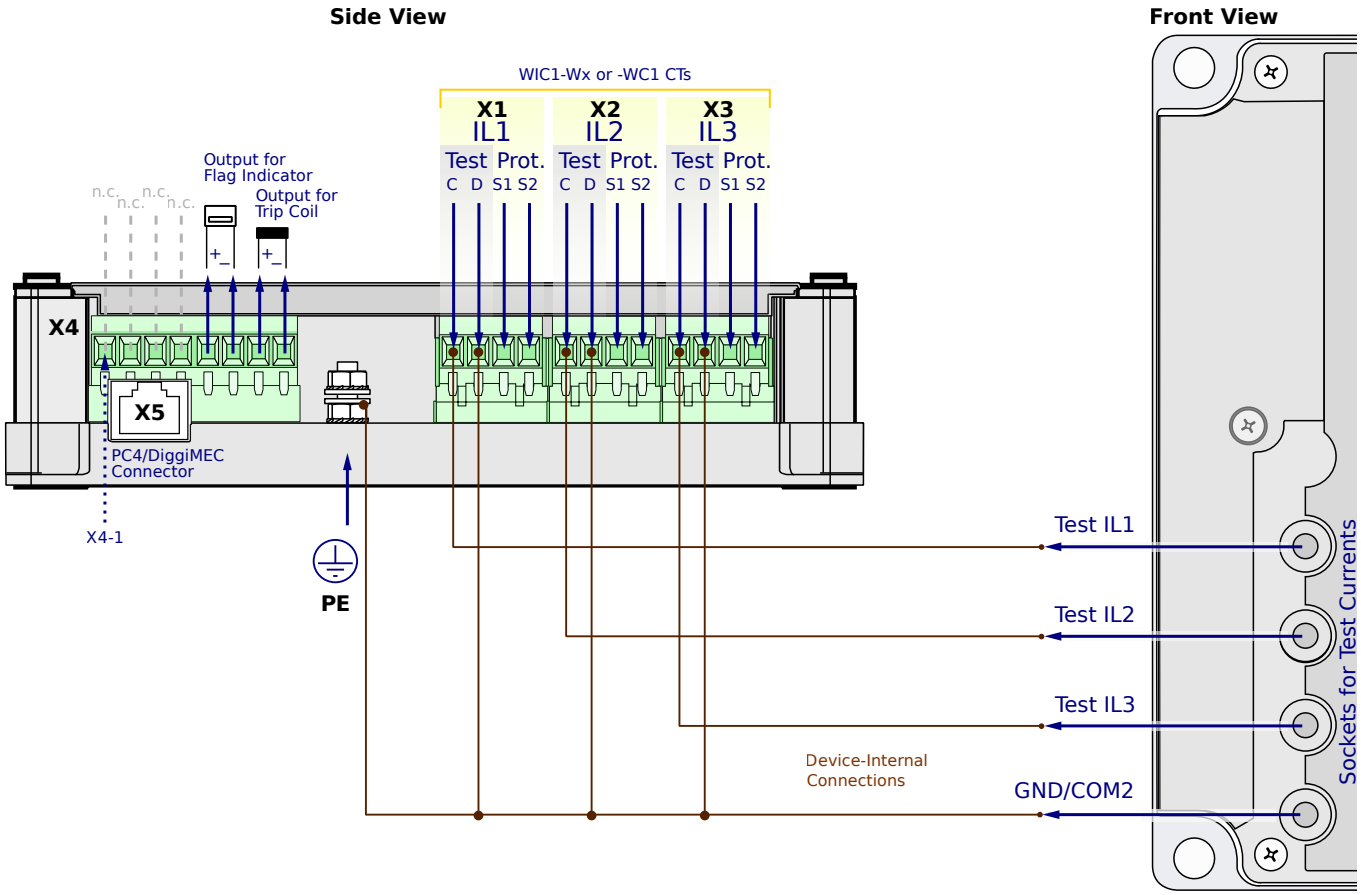


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2AA0

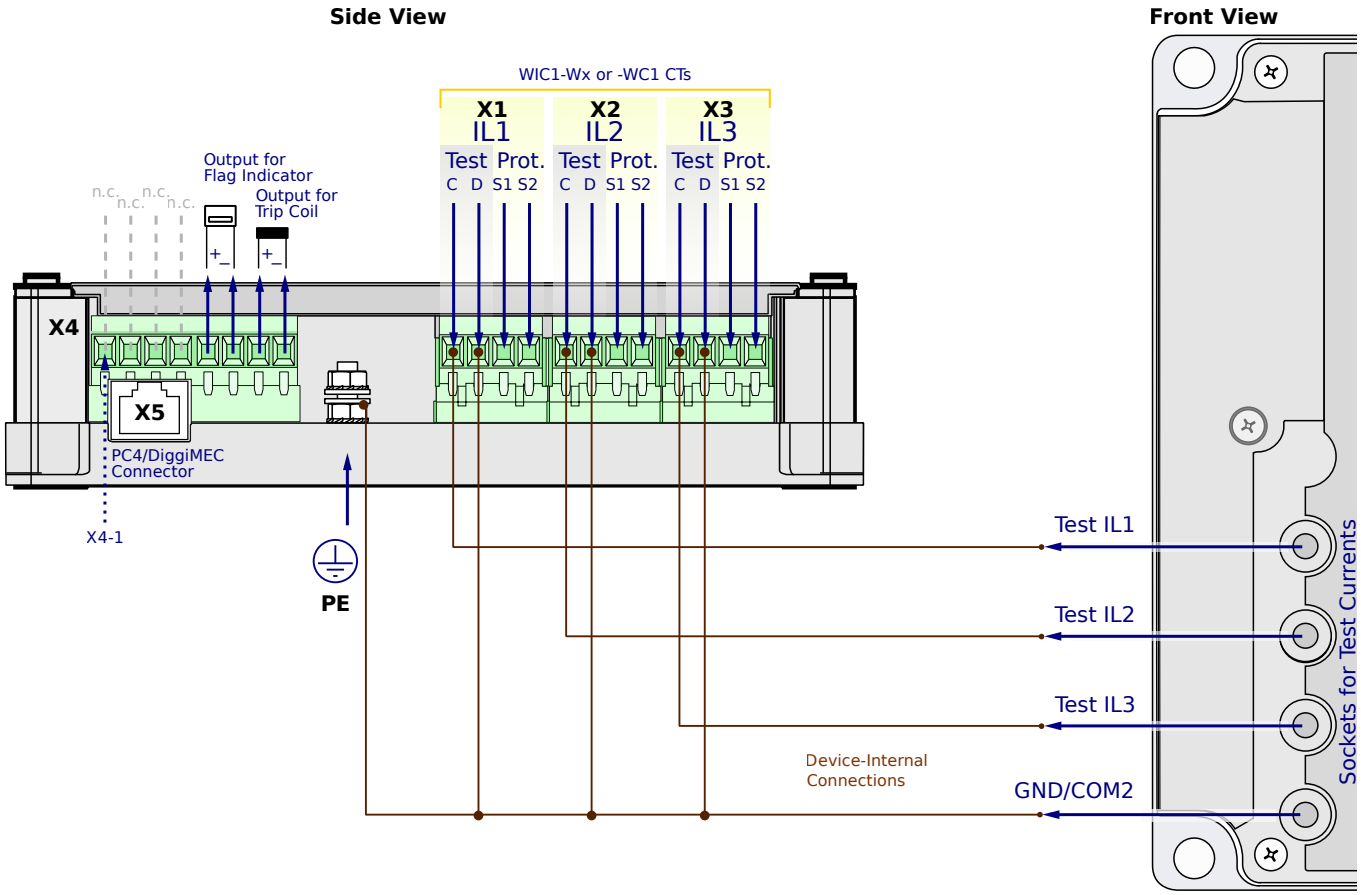


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2AAH

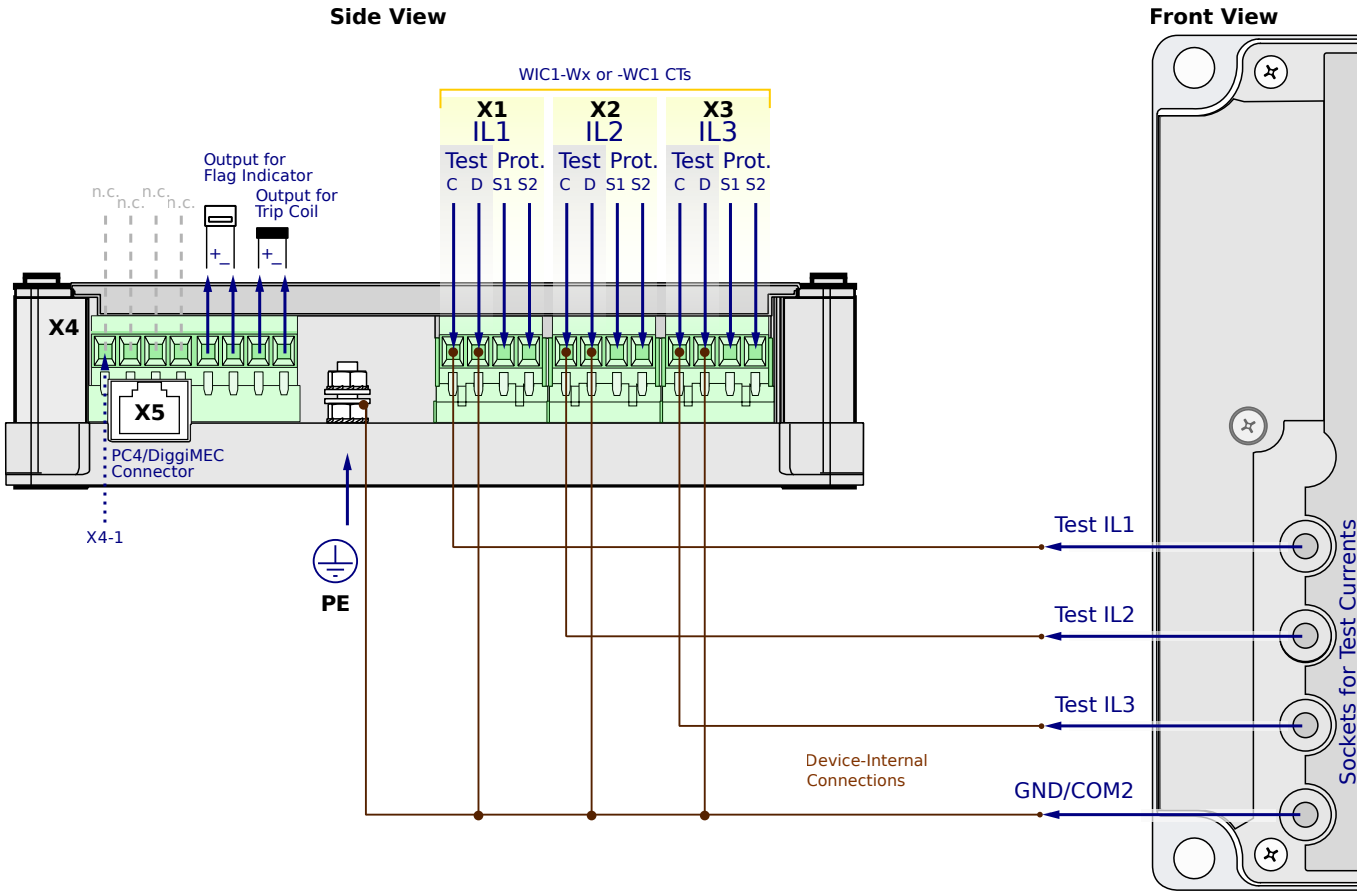


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2PA0

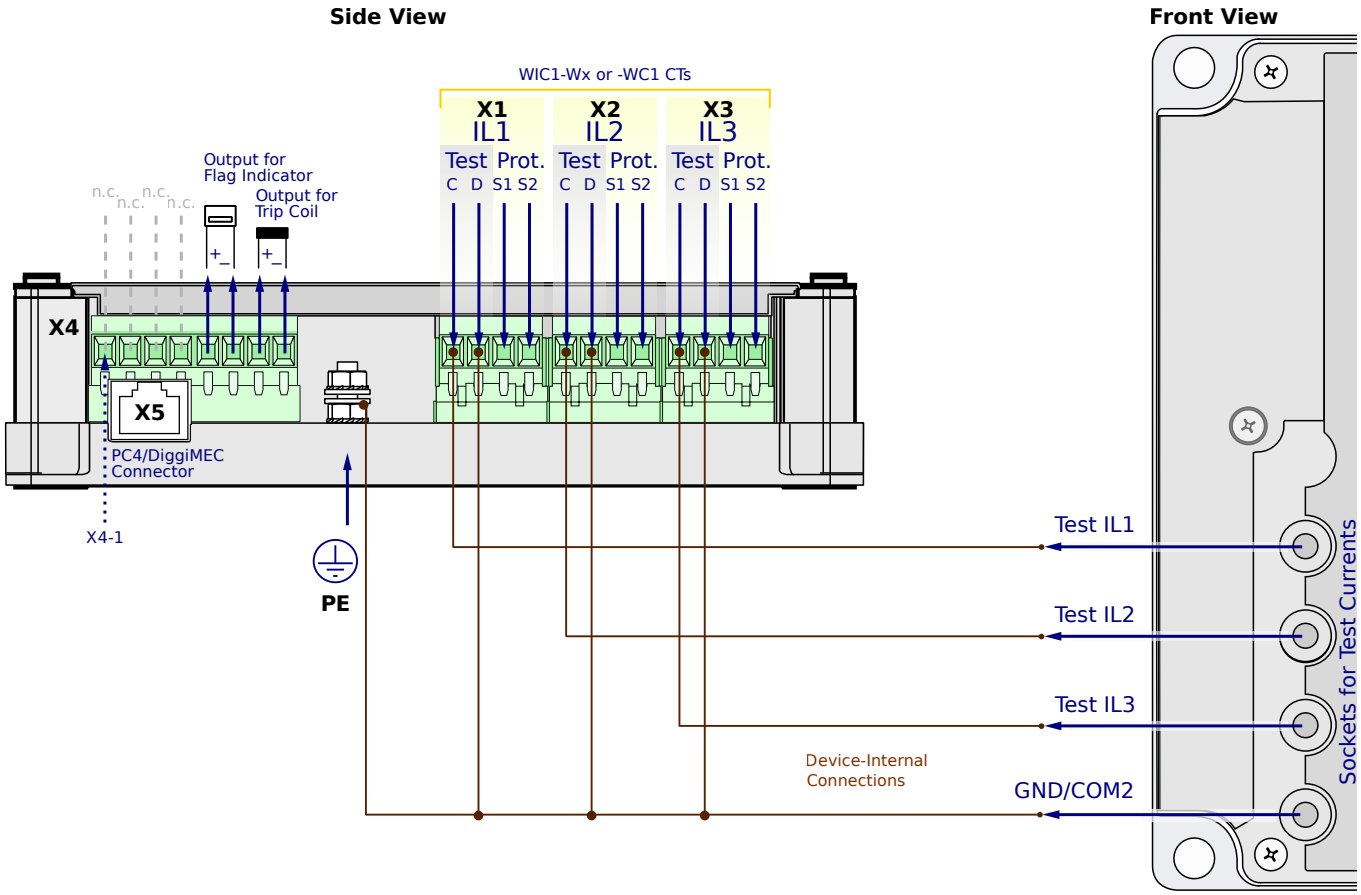


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FN2PAH

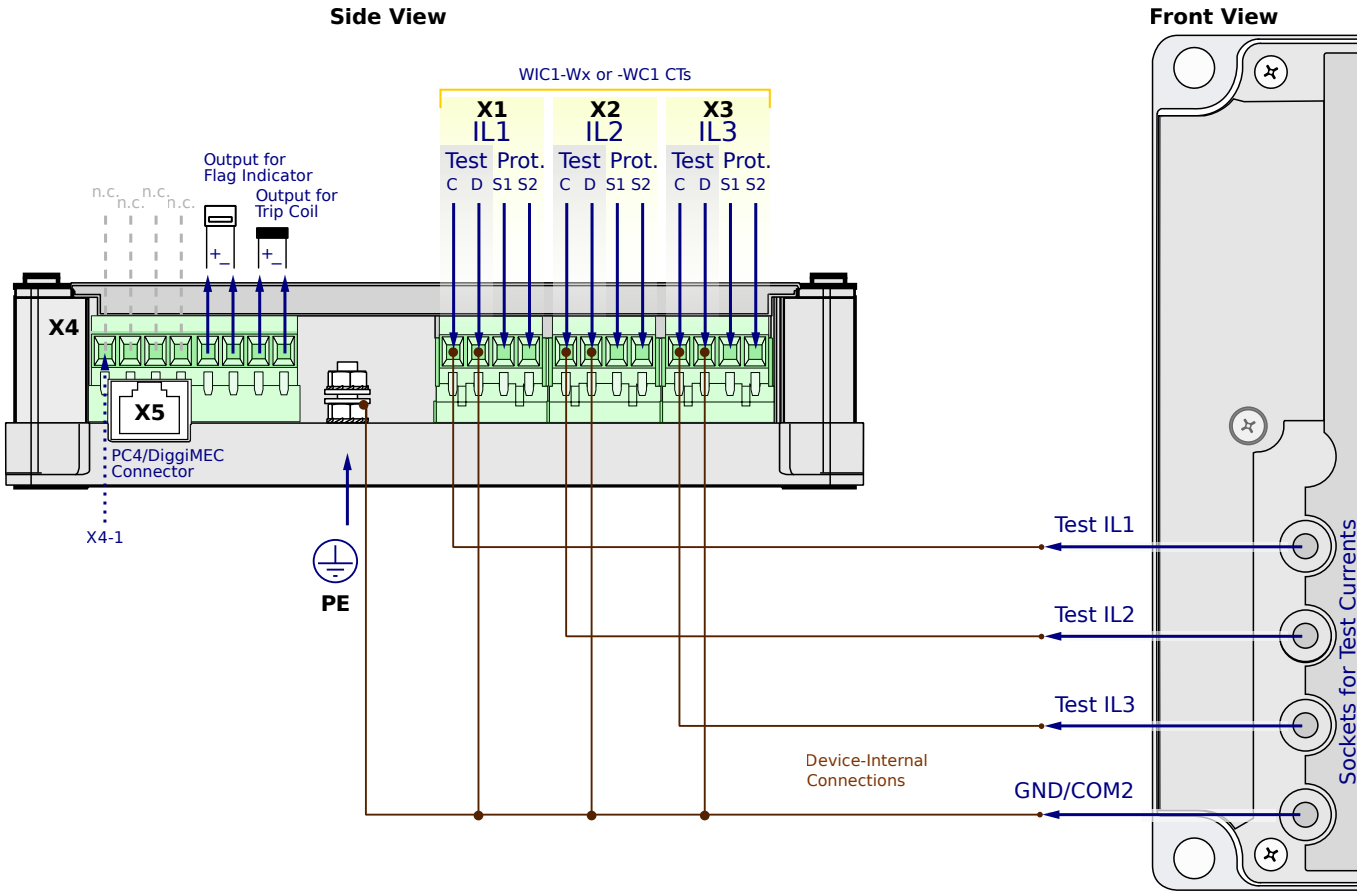


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1SA0

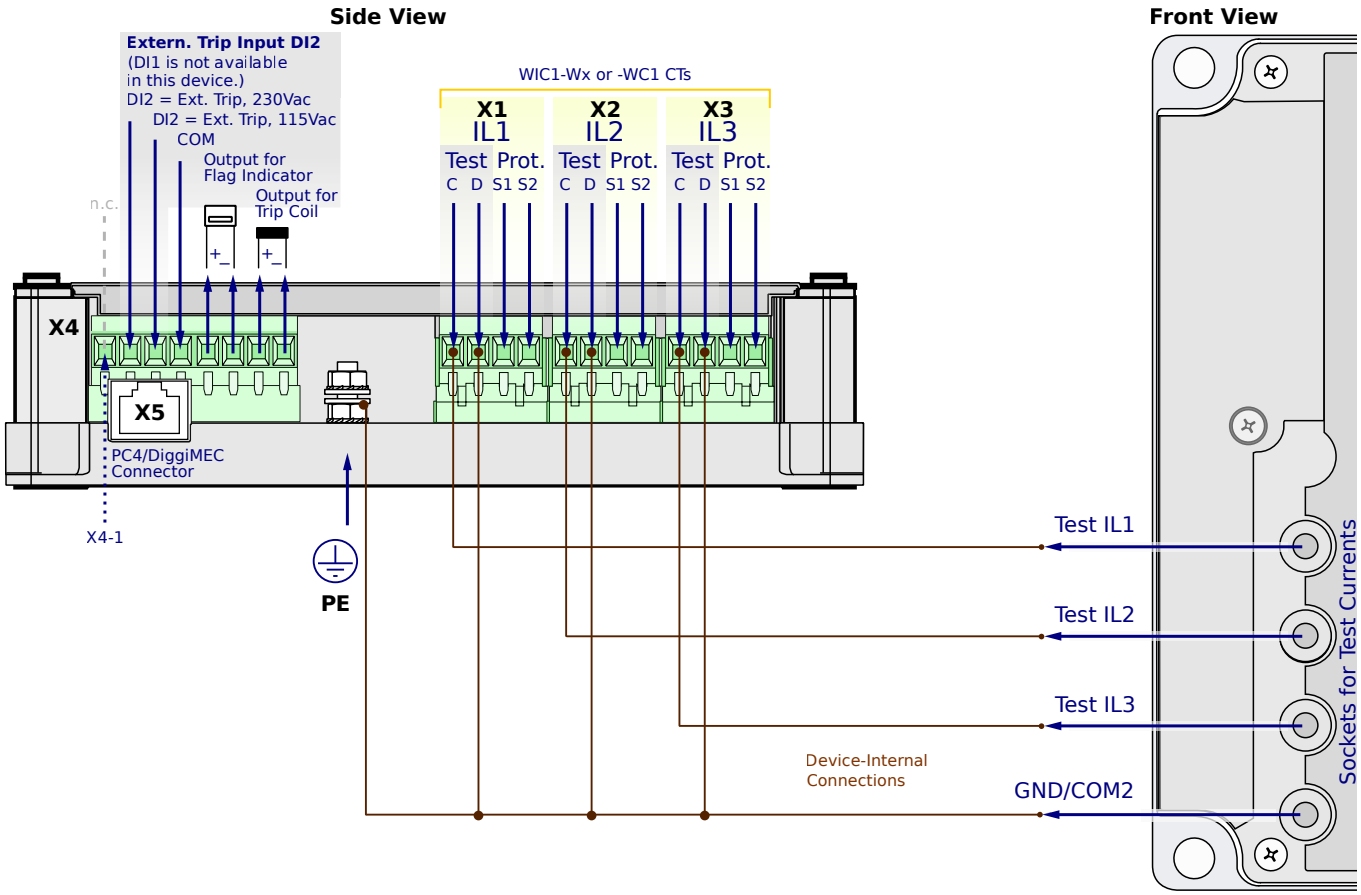


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1SAH

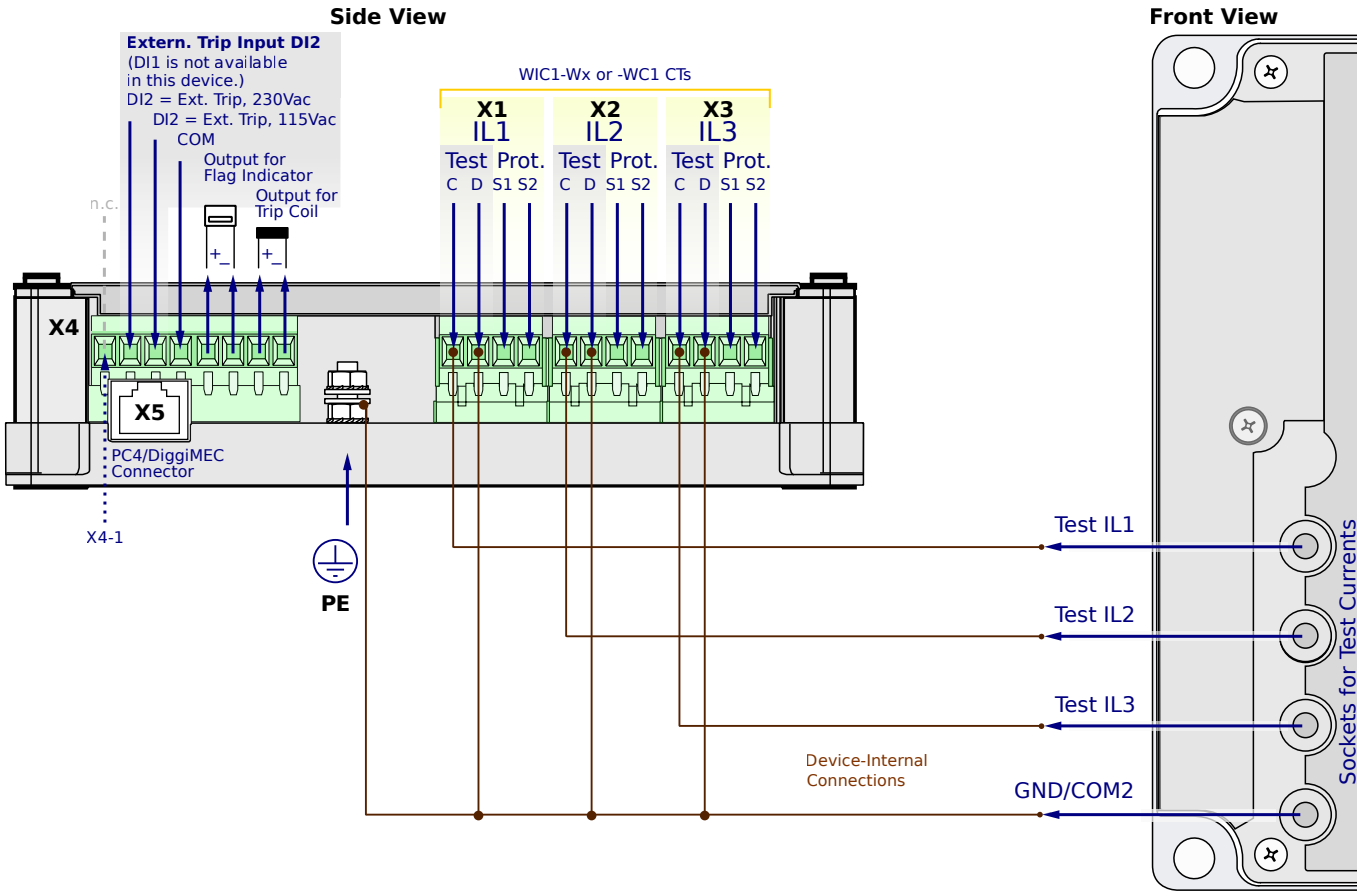


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1AA0

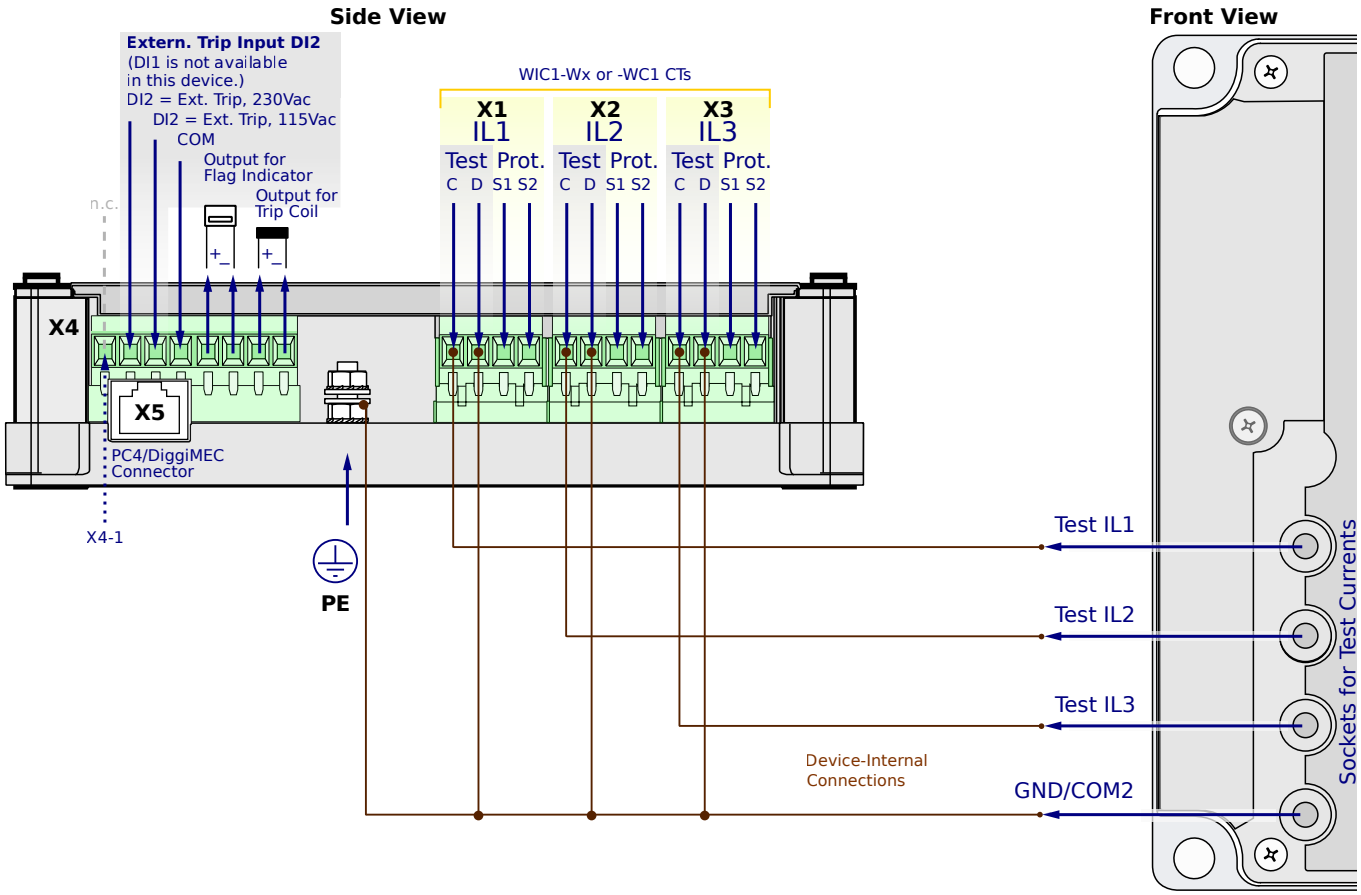


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1AAH

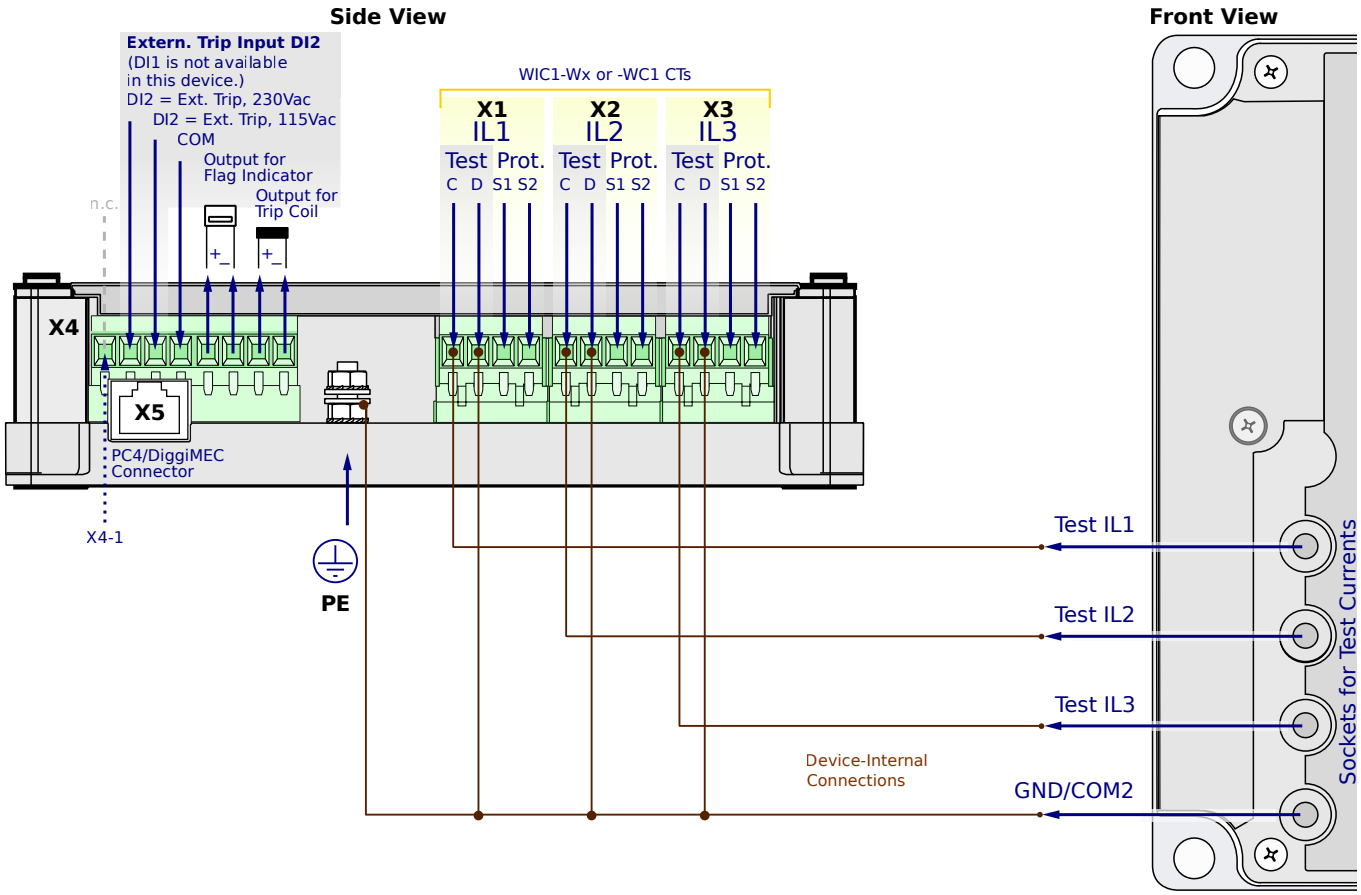


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1PA0

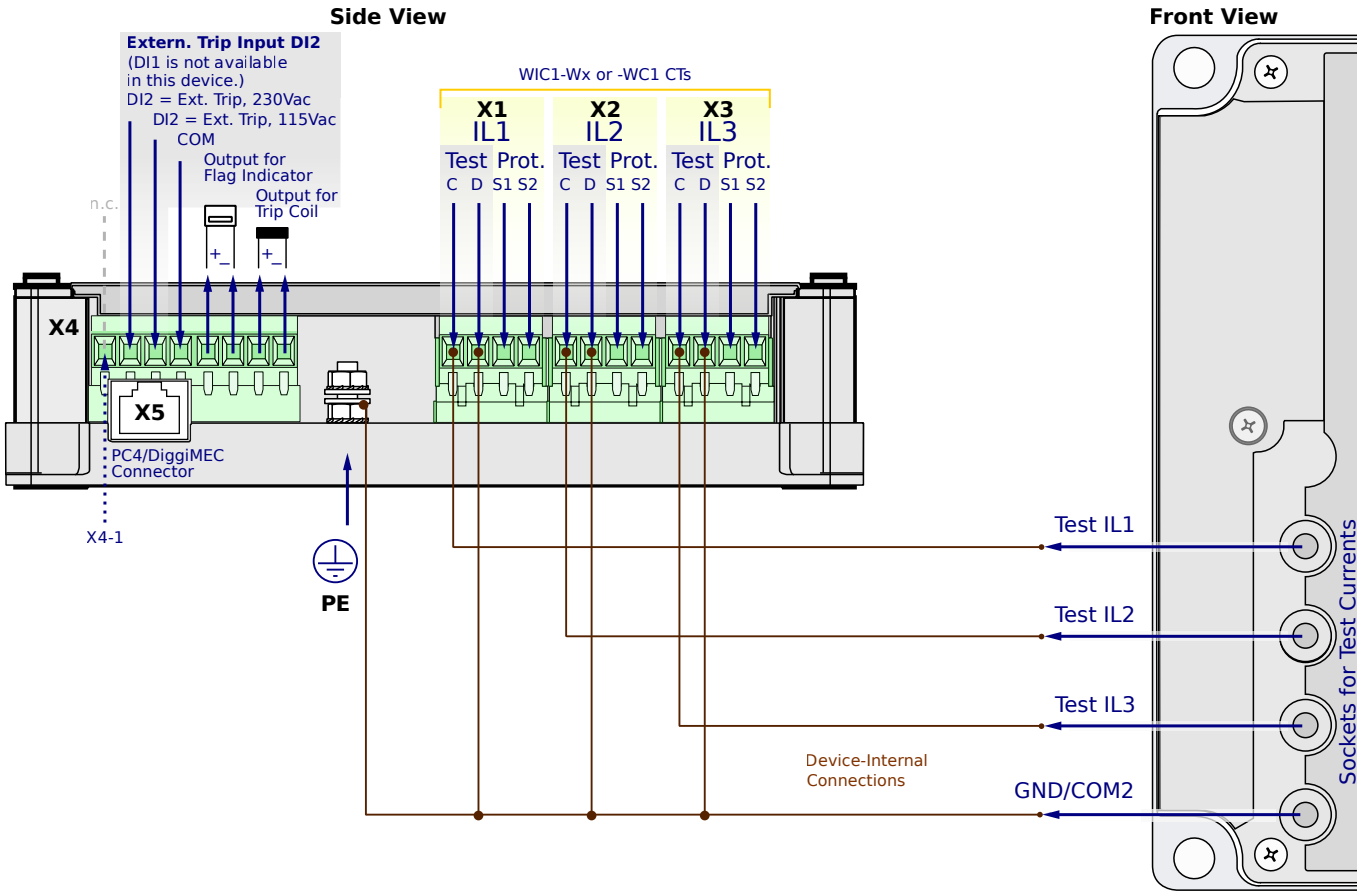


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF1PAH

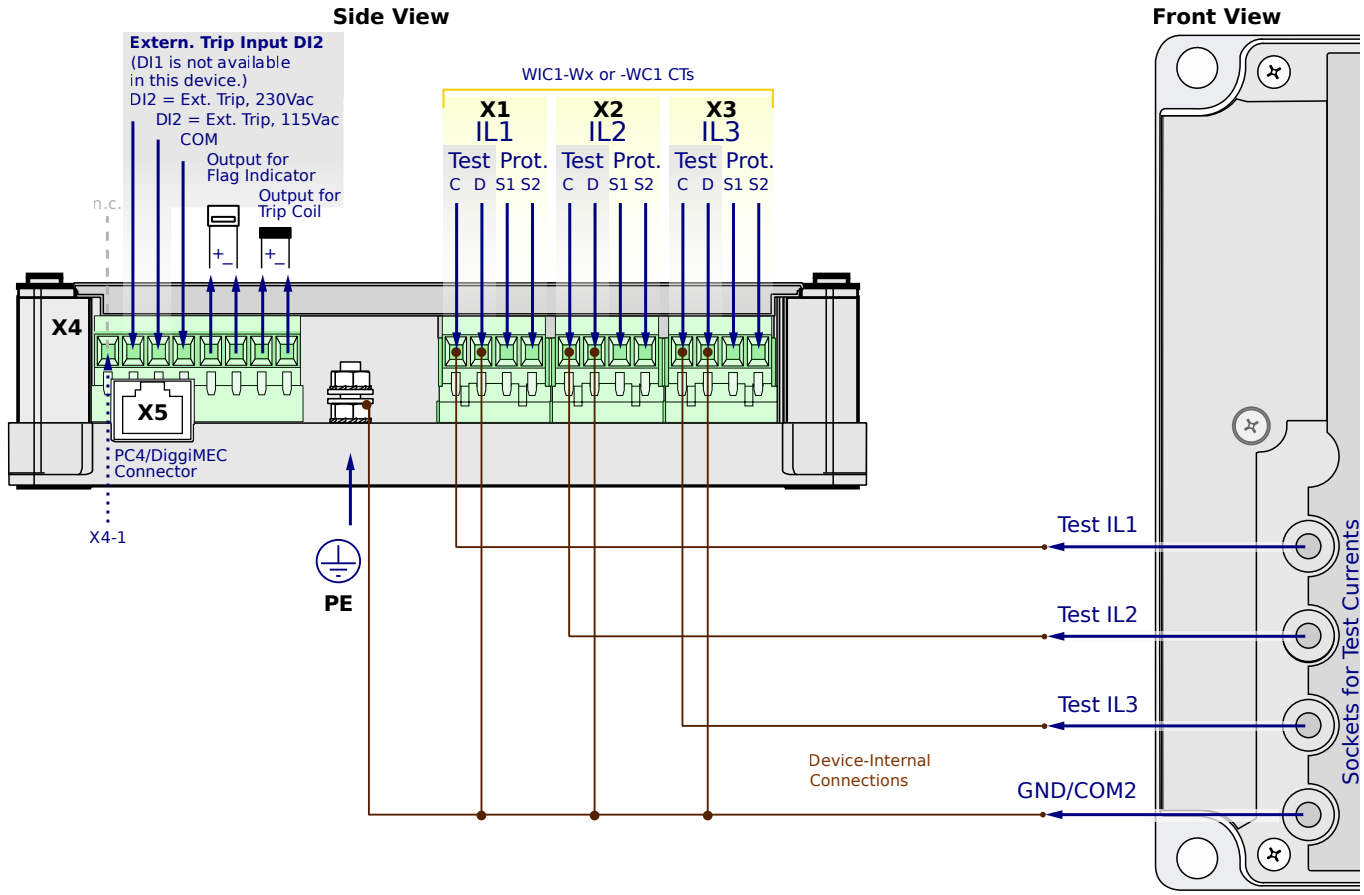


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2SA0

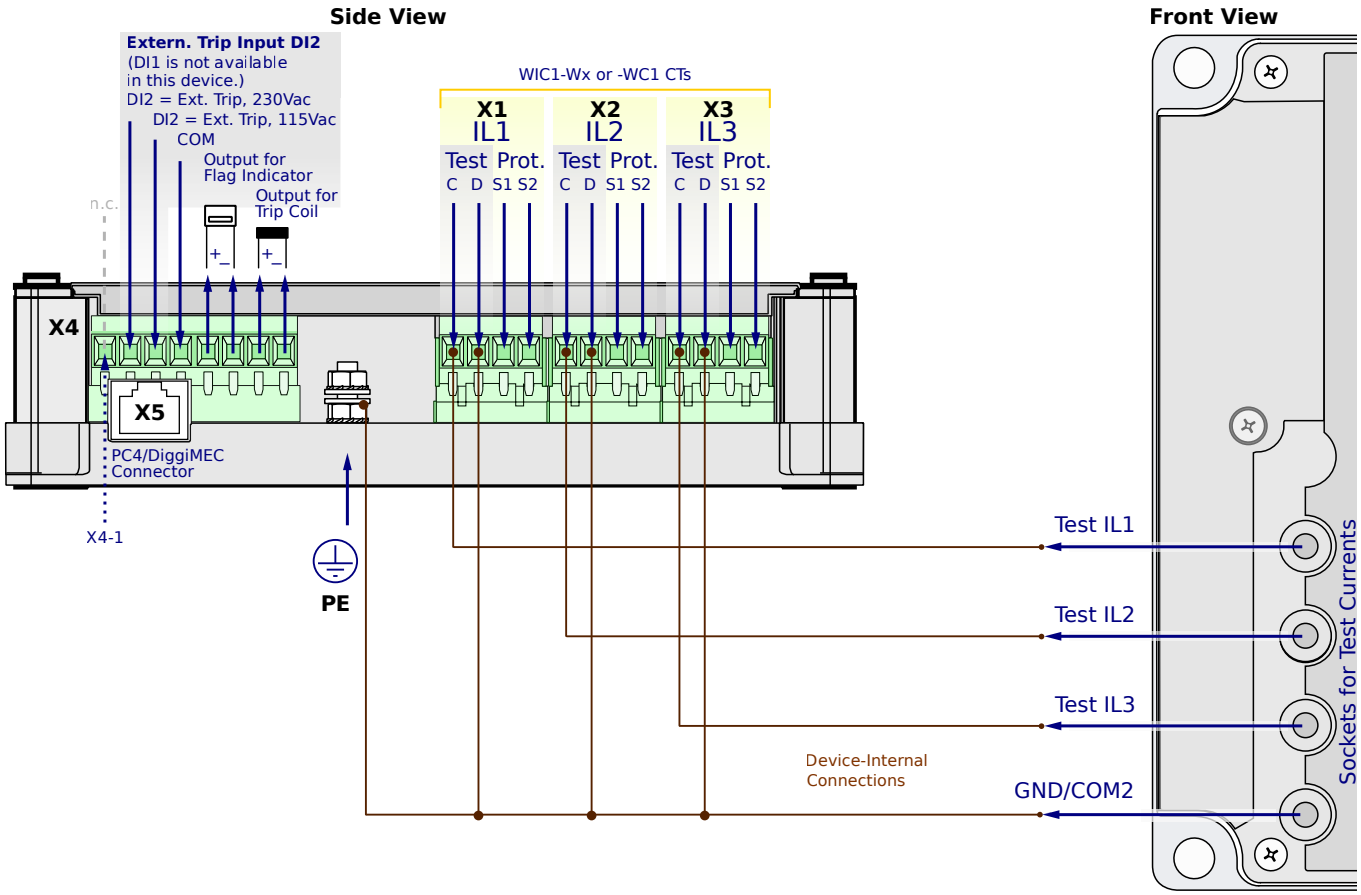


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2SAH

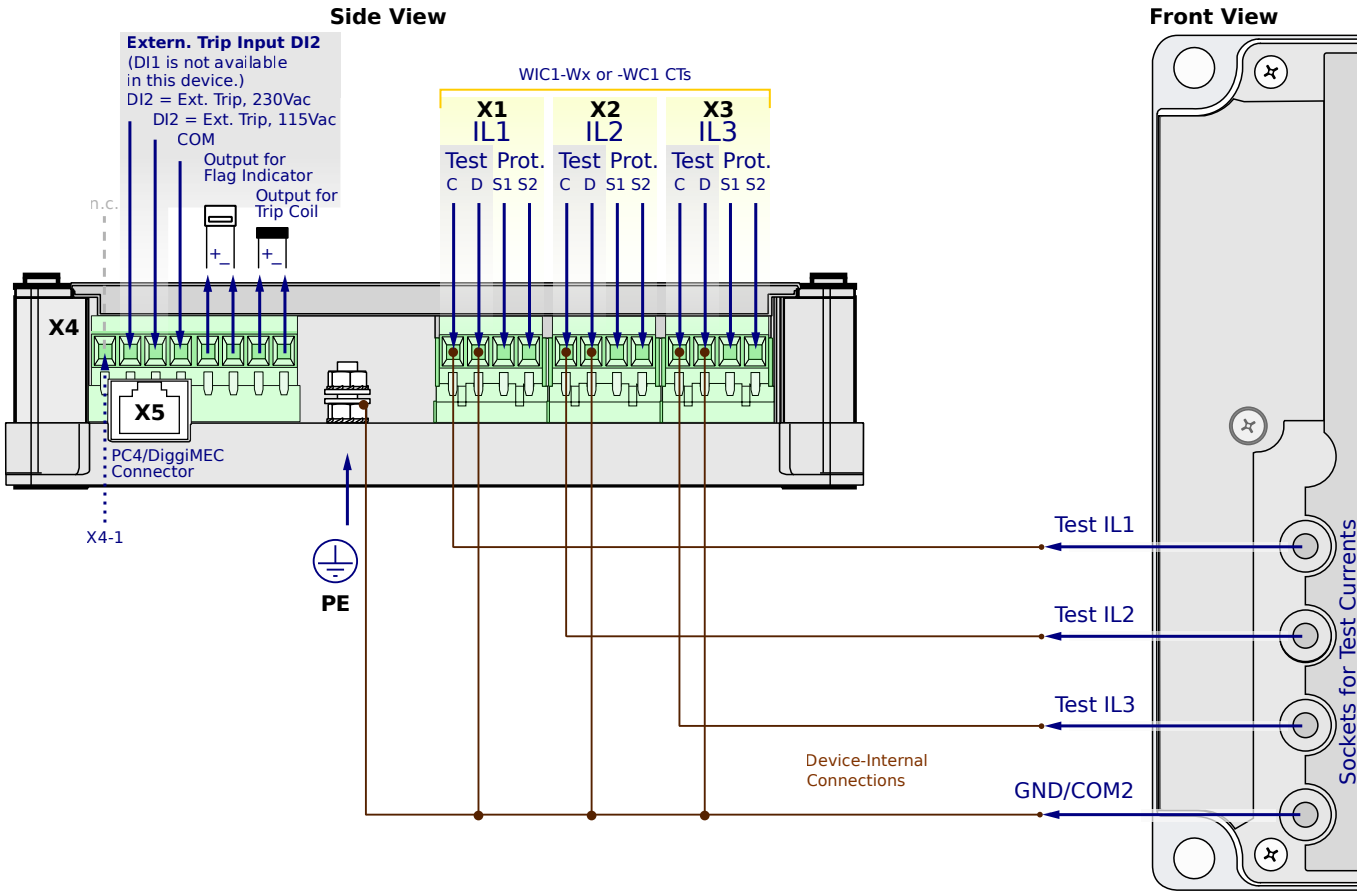


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2AA0

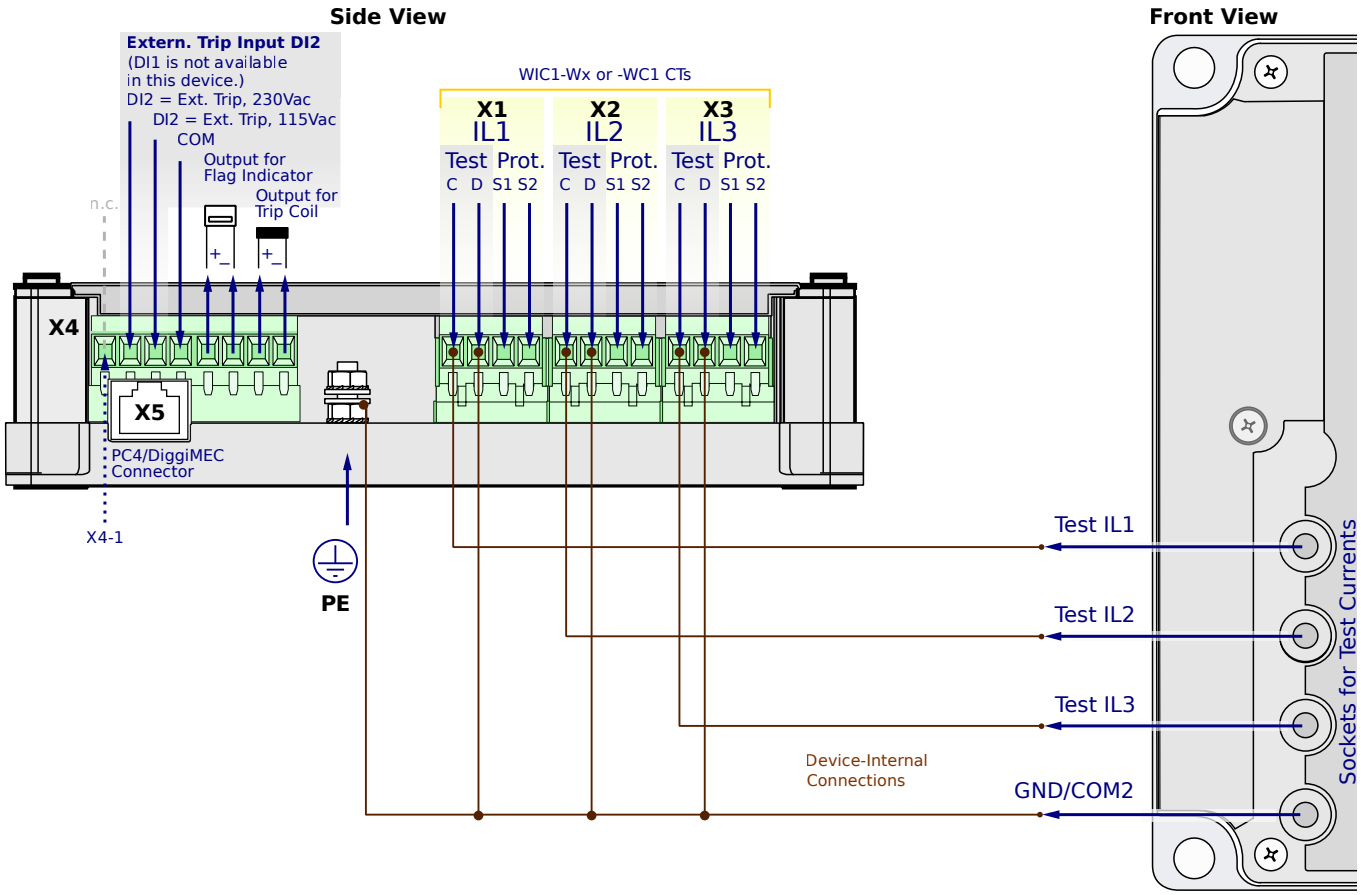


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2AAH

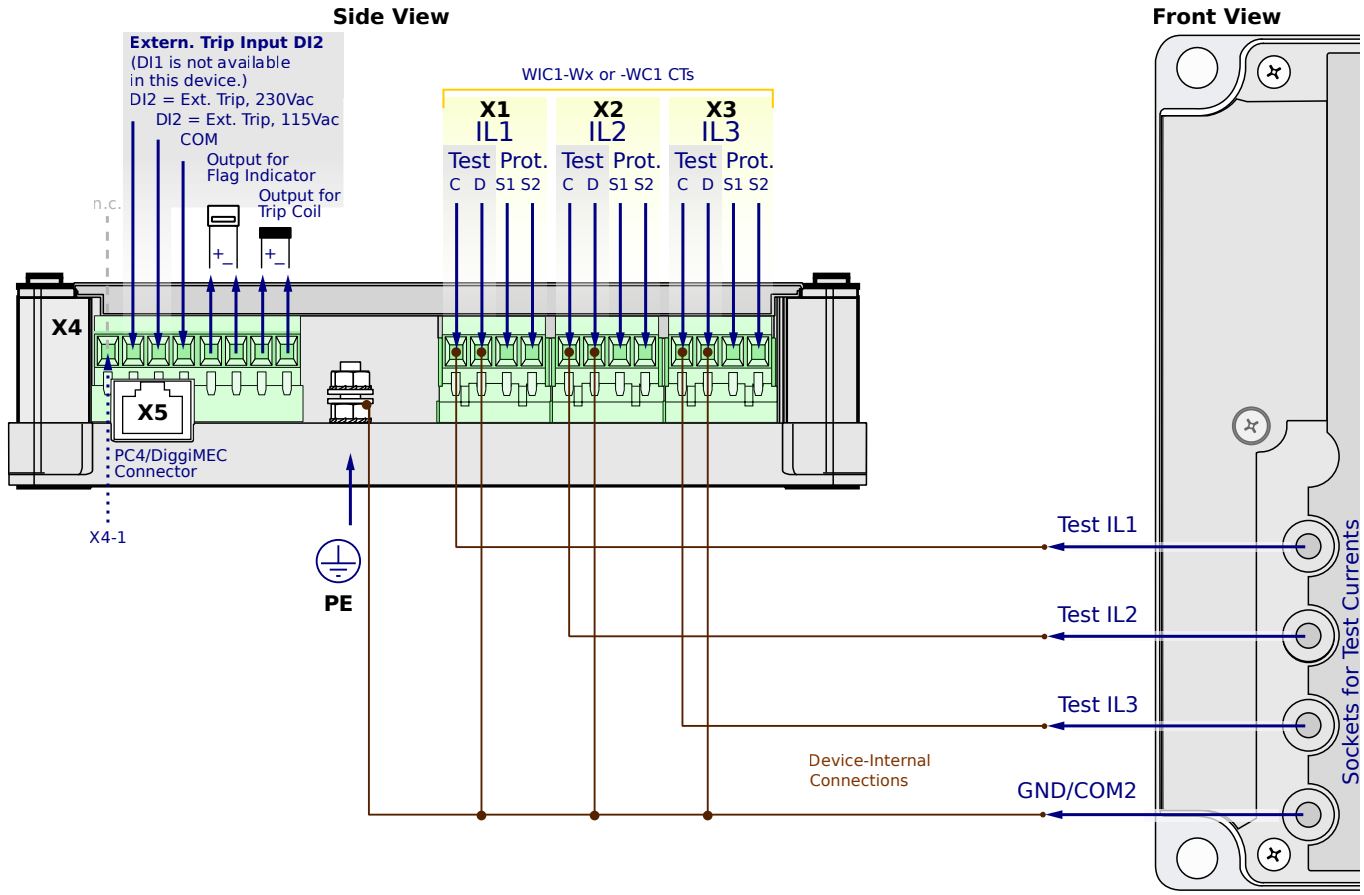


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2PA0

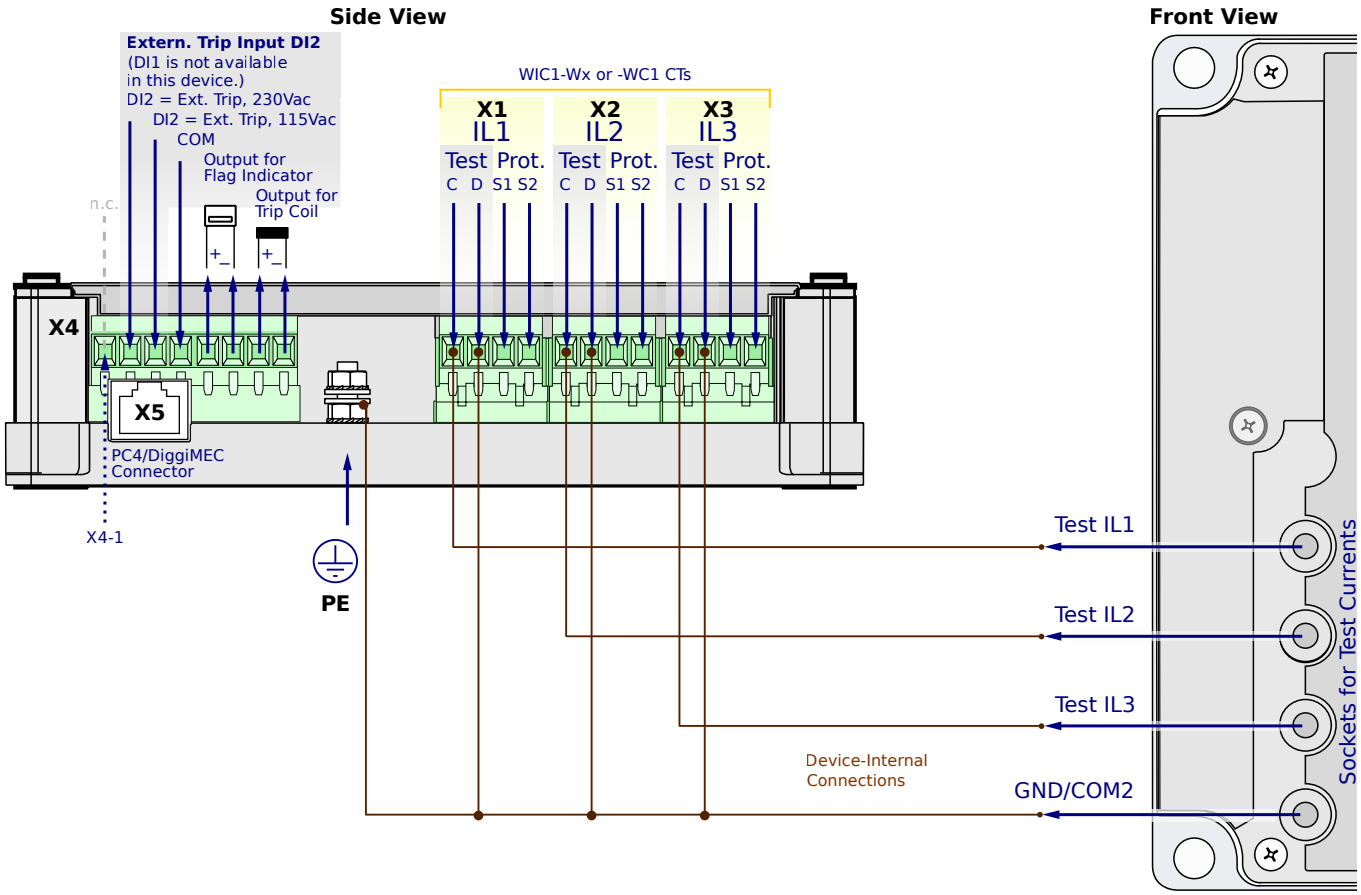


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FF2PAH

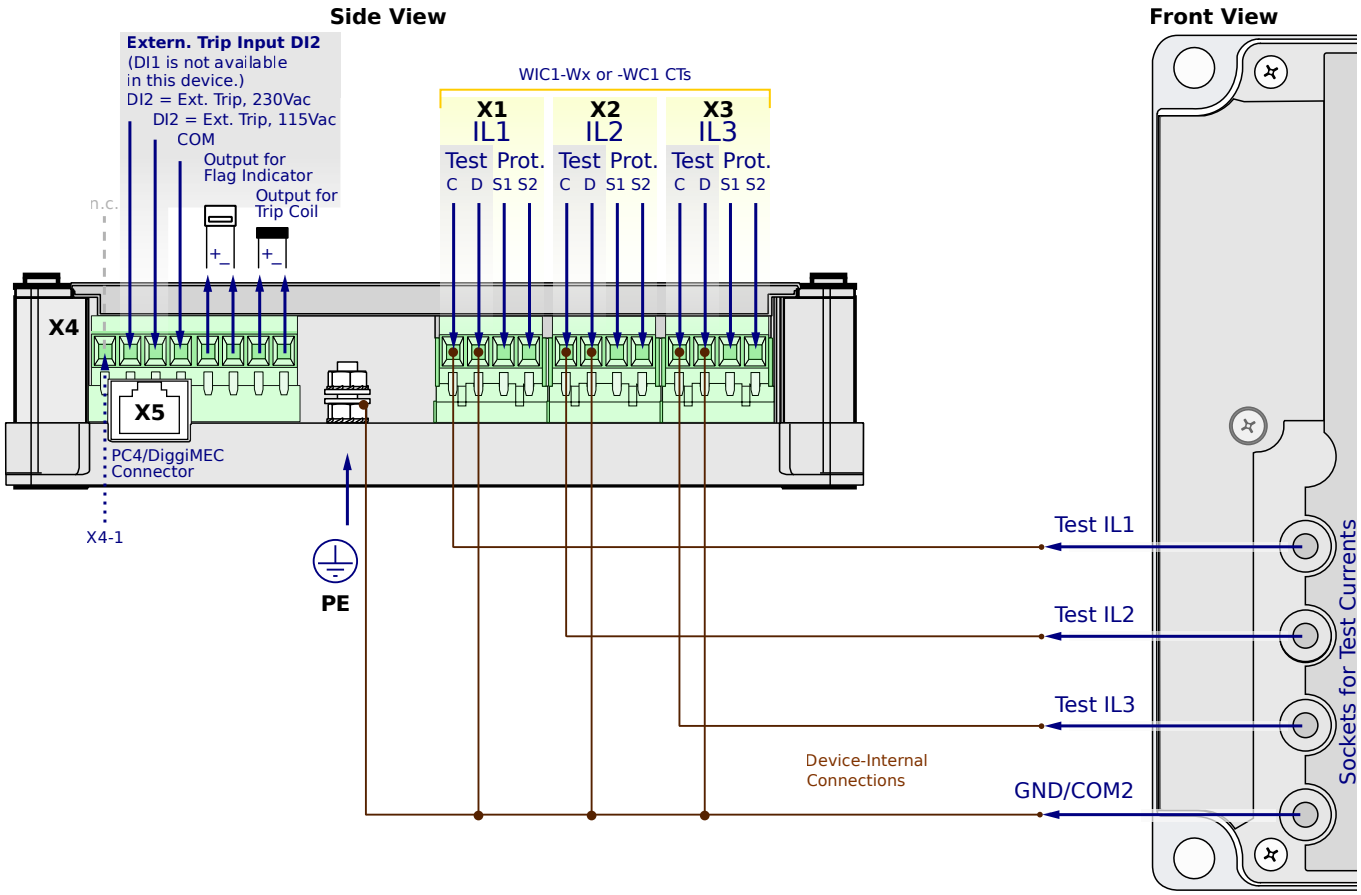


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1SA0

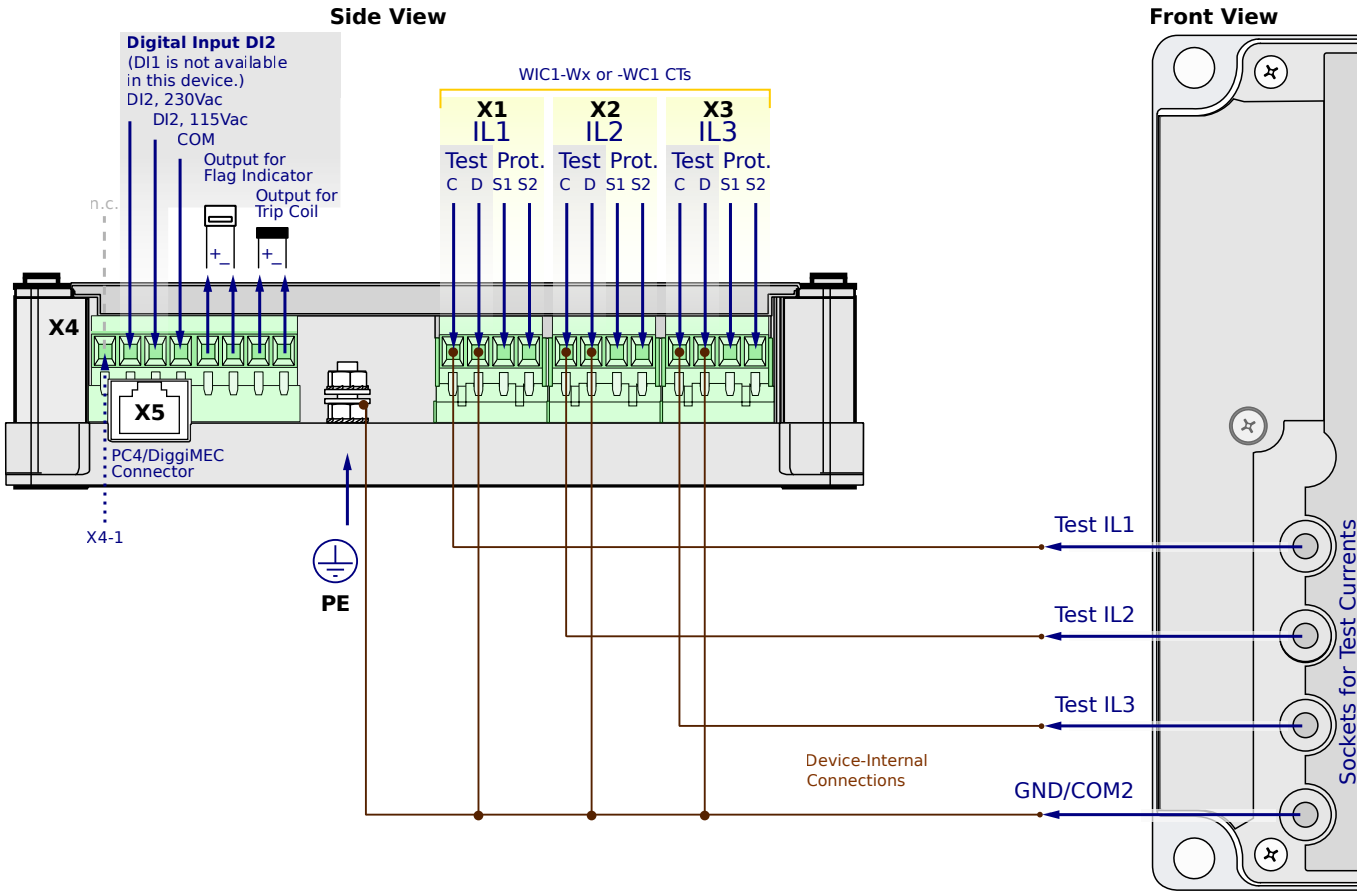


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1SAH

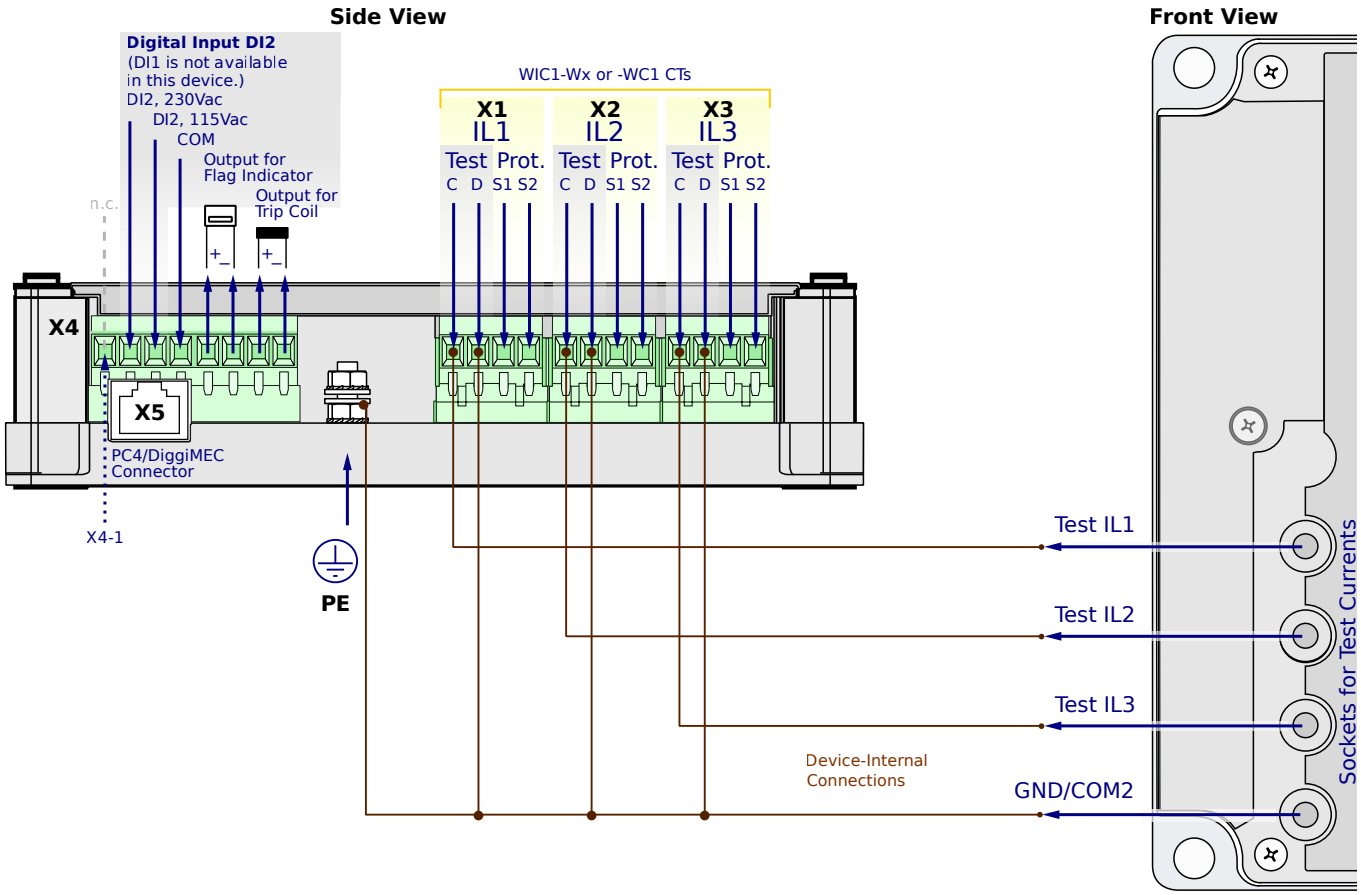


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1AA0

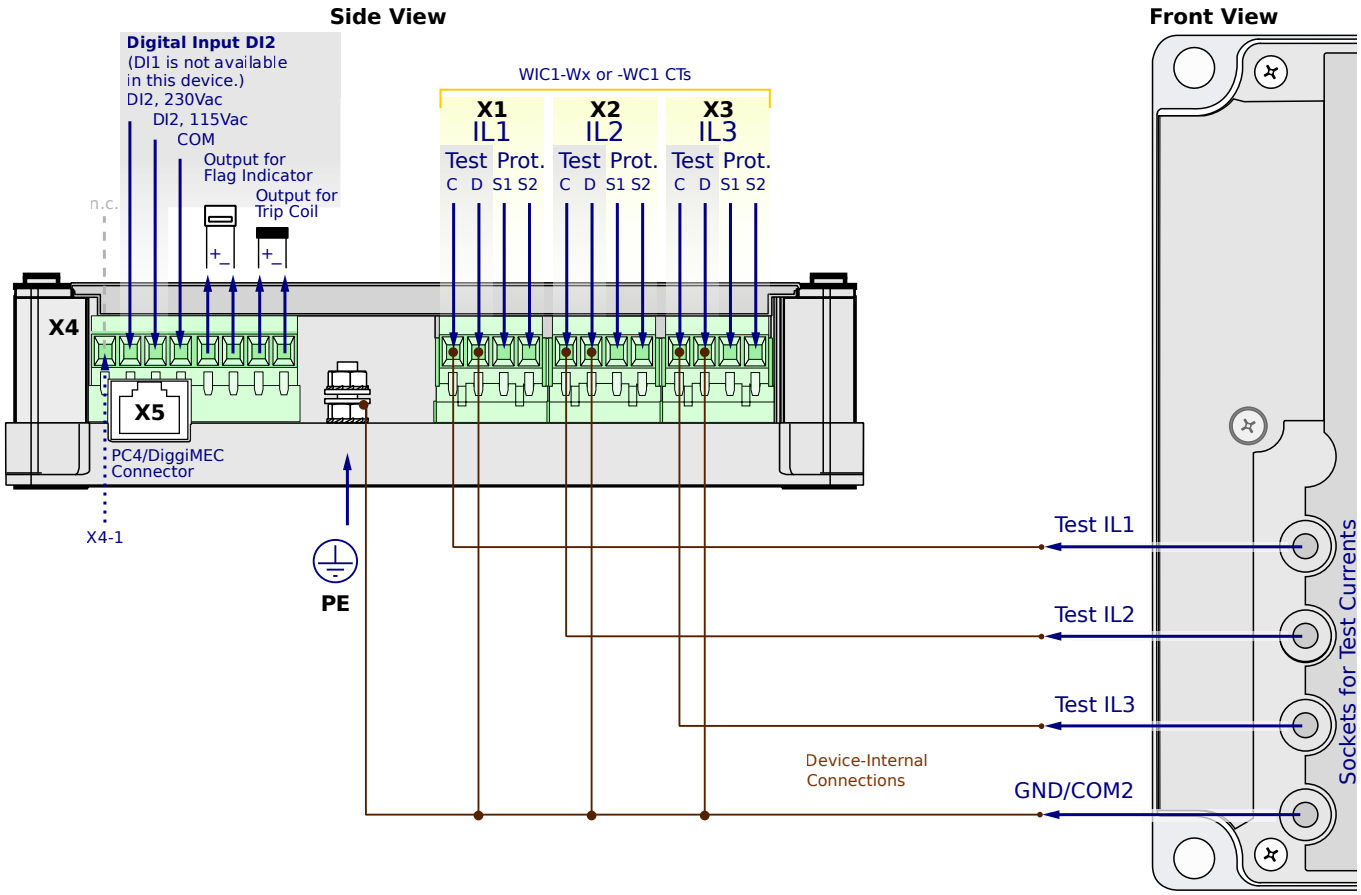


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1AAH

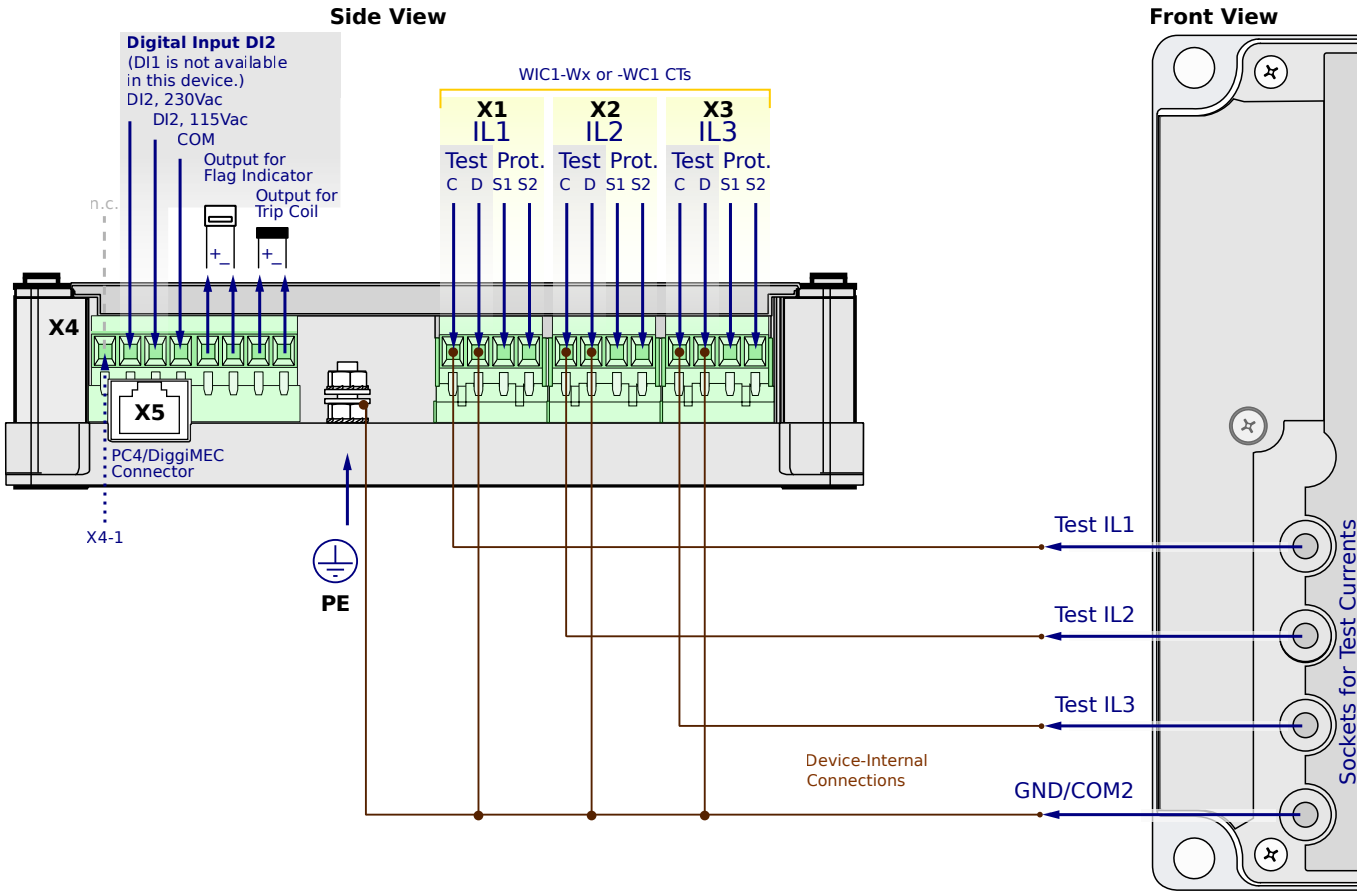


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1PA0

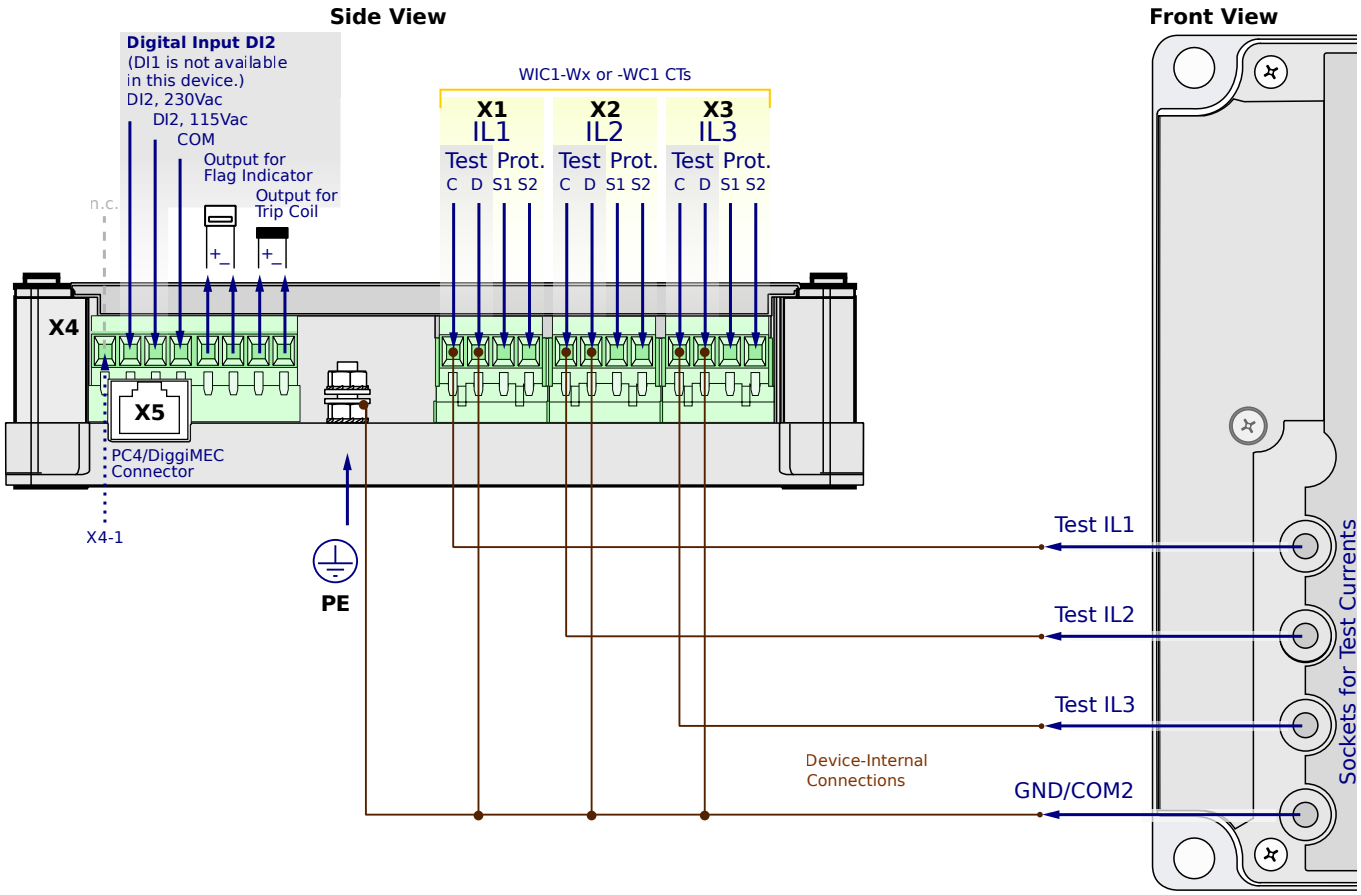


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC1PAH

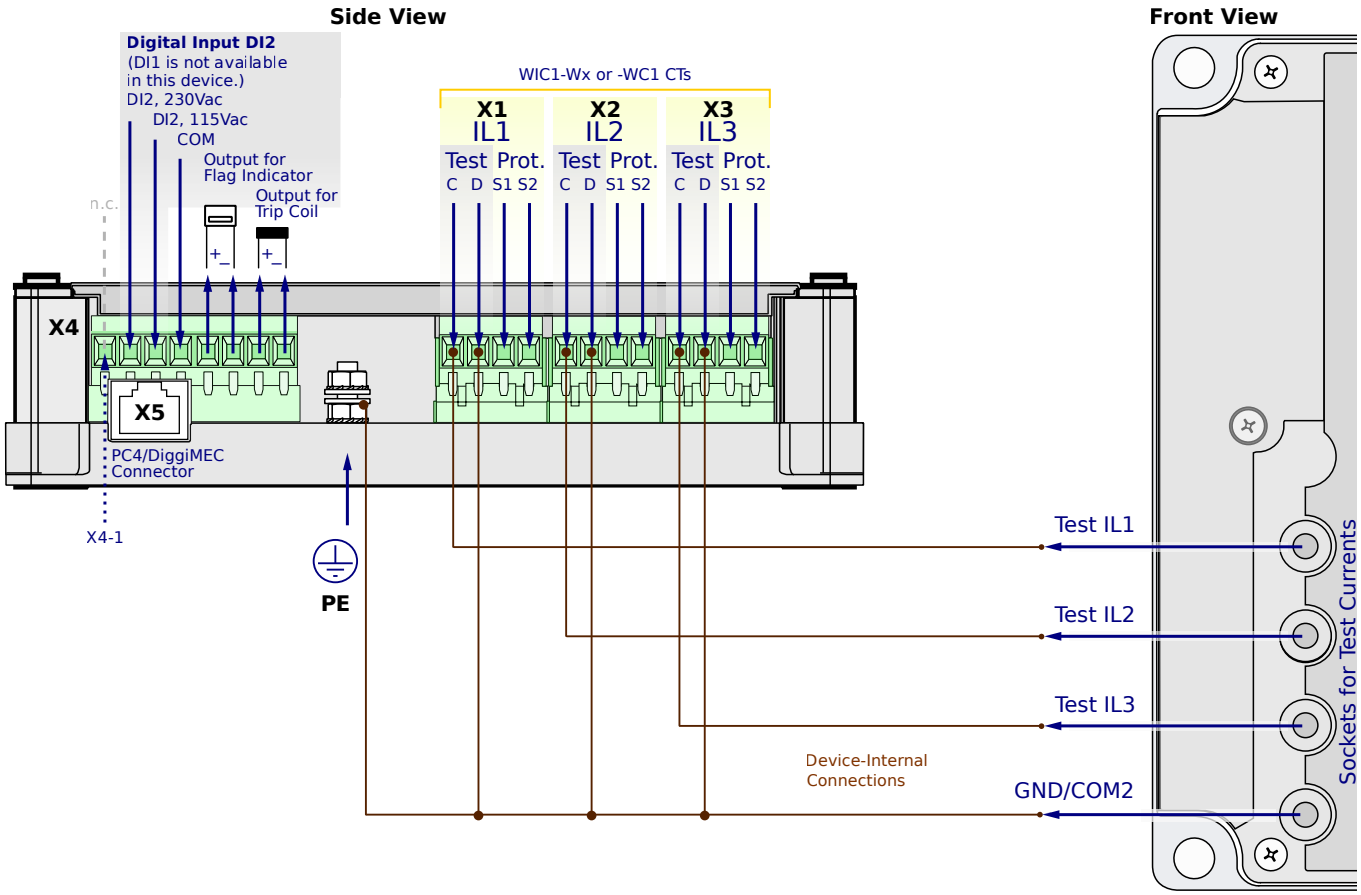


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2SA0

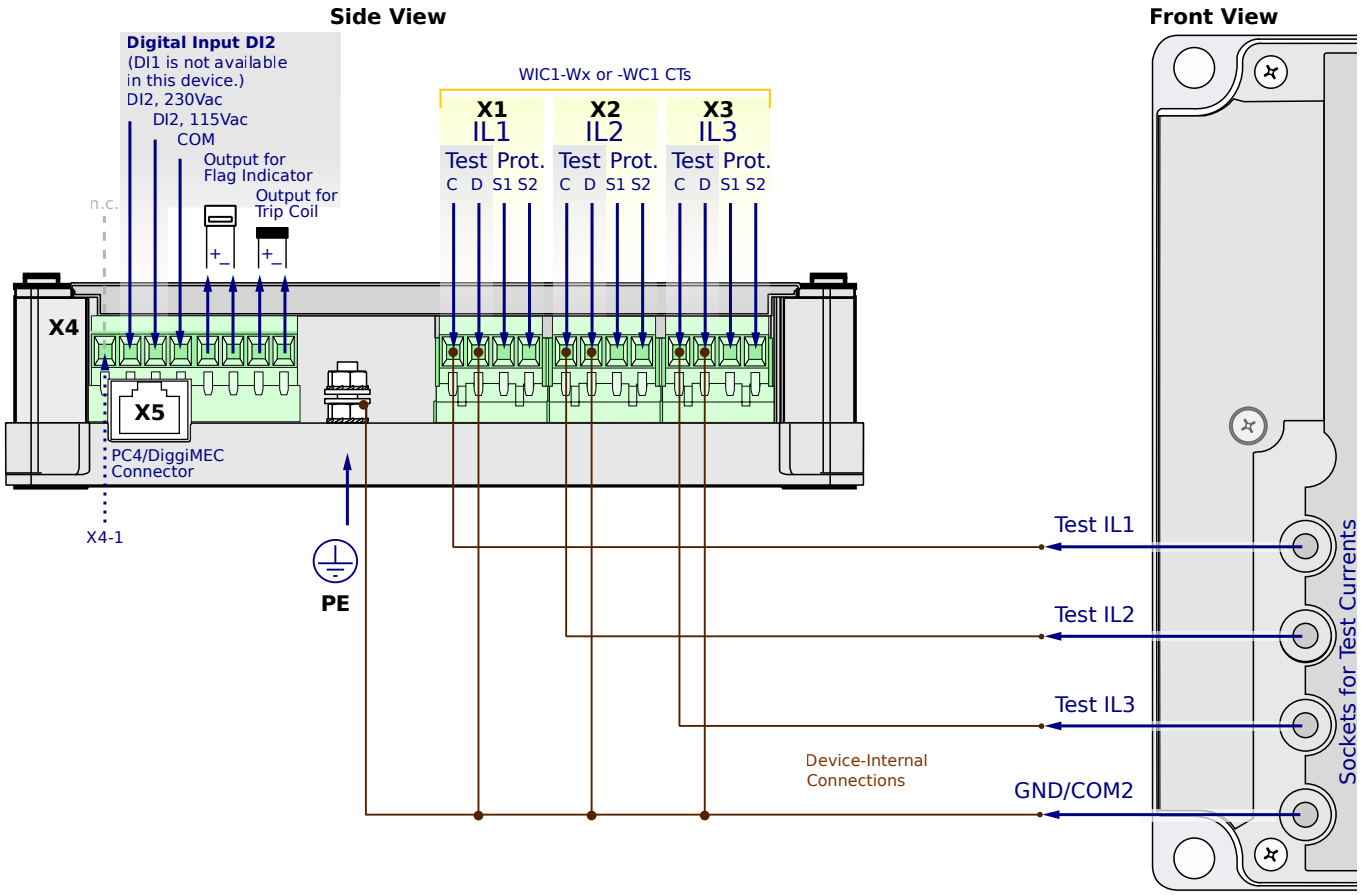


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2SAH

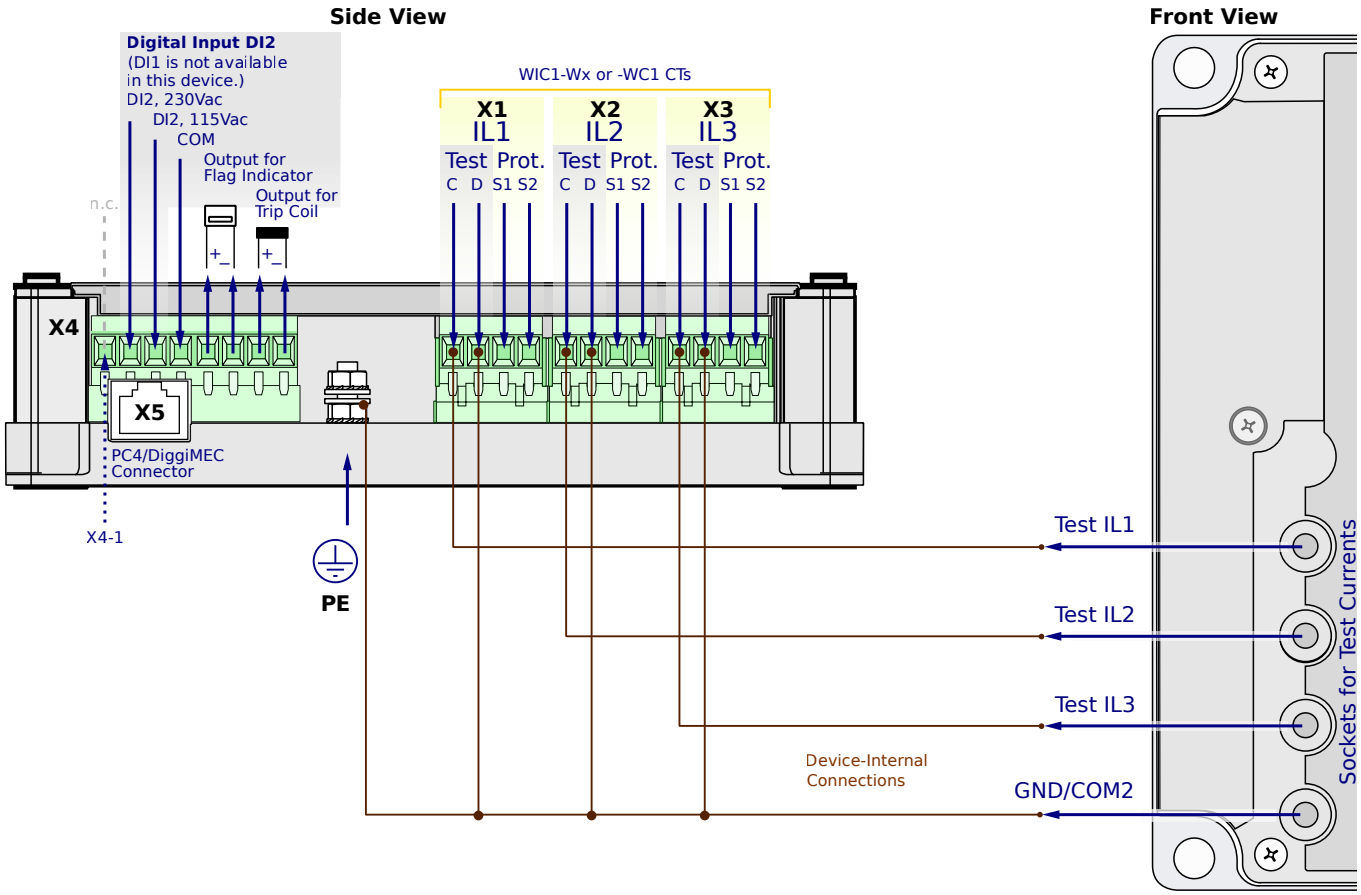


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2AA0

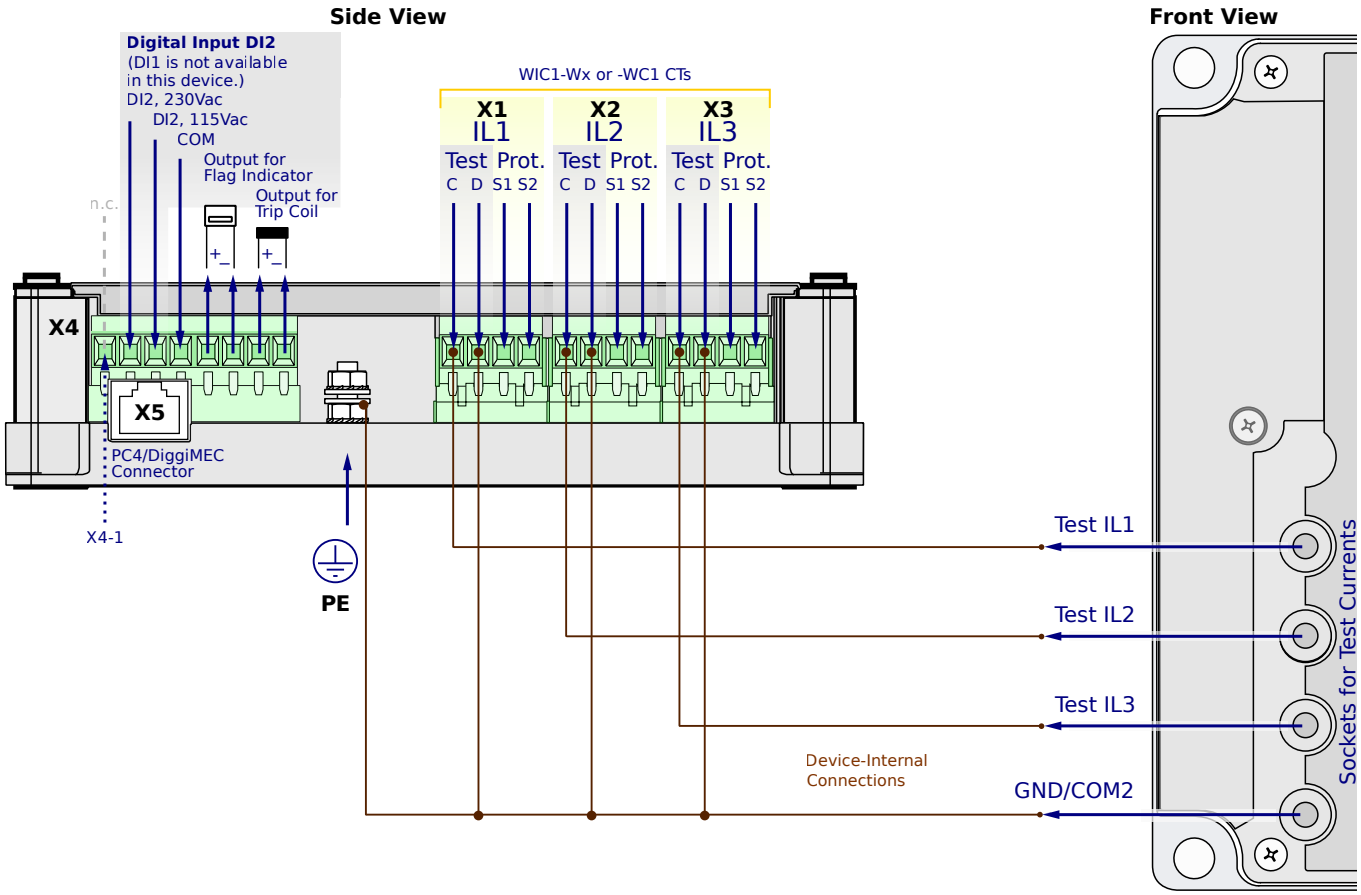


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2AAH

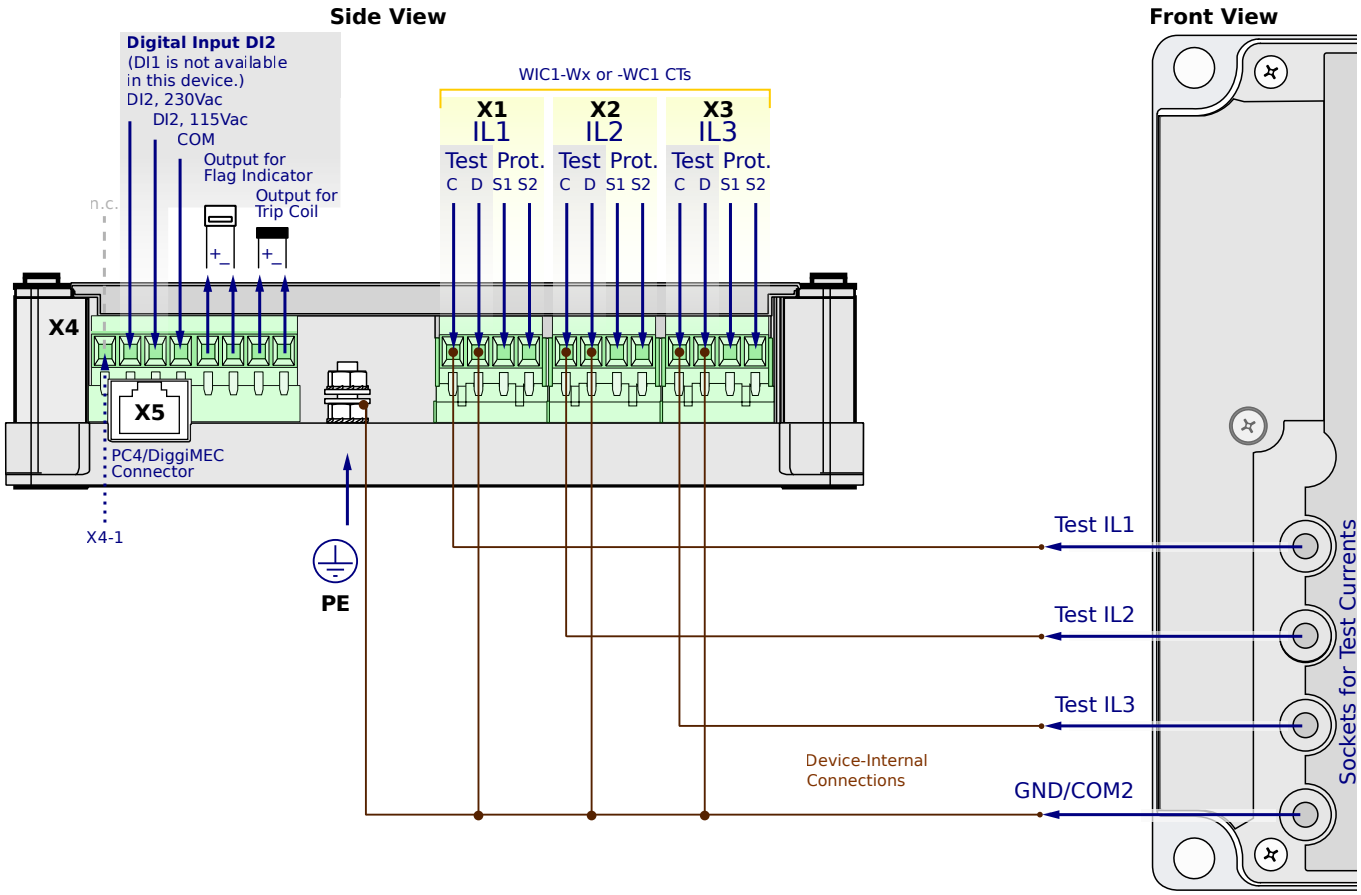


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2PA0

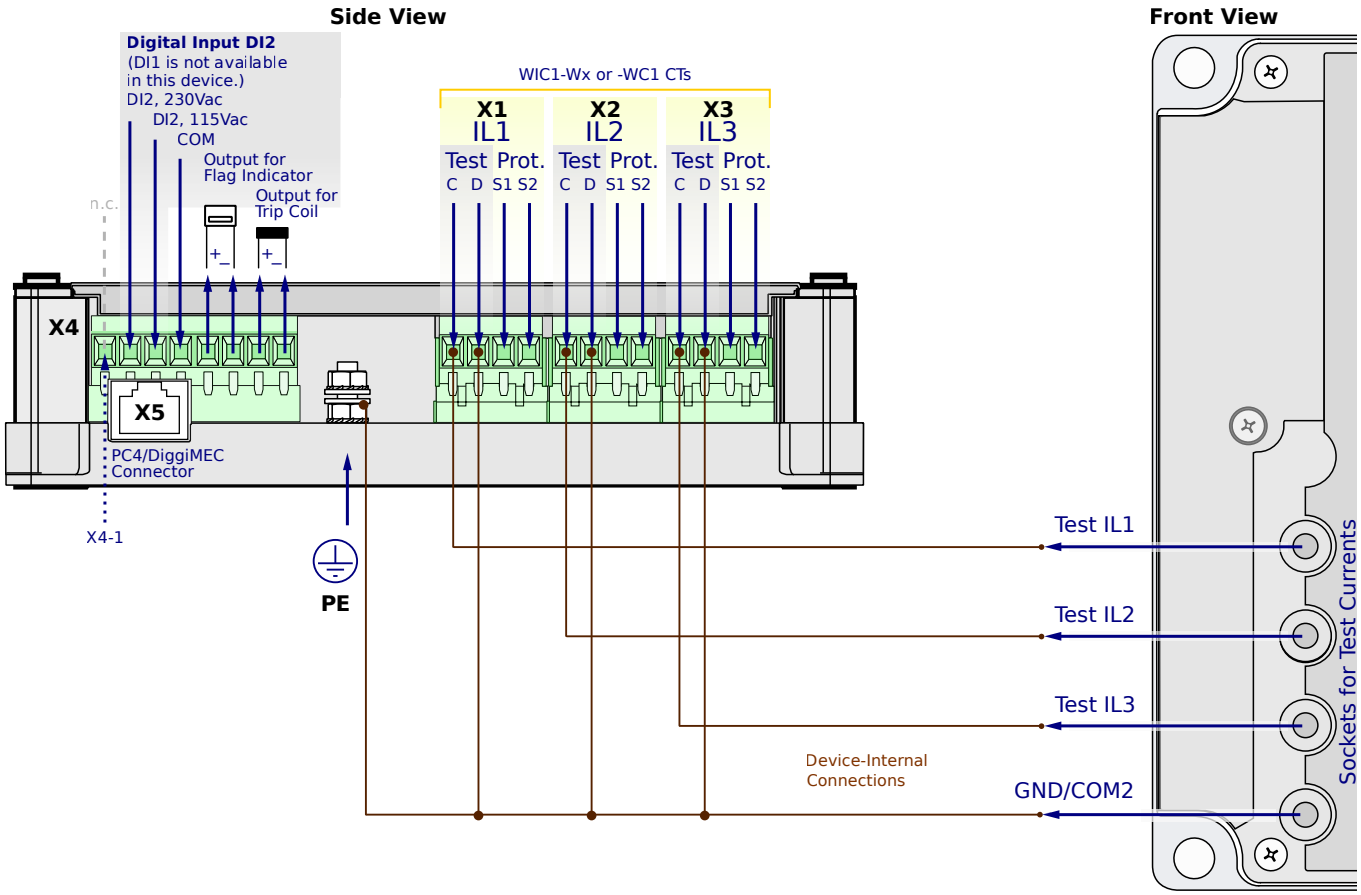


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5FC2PAH

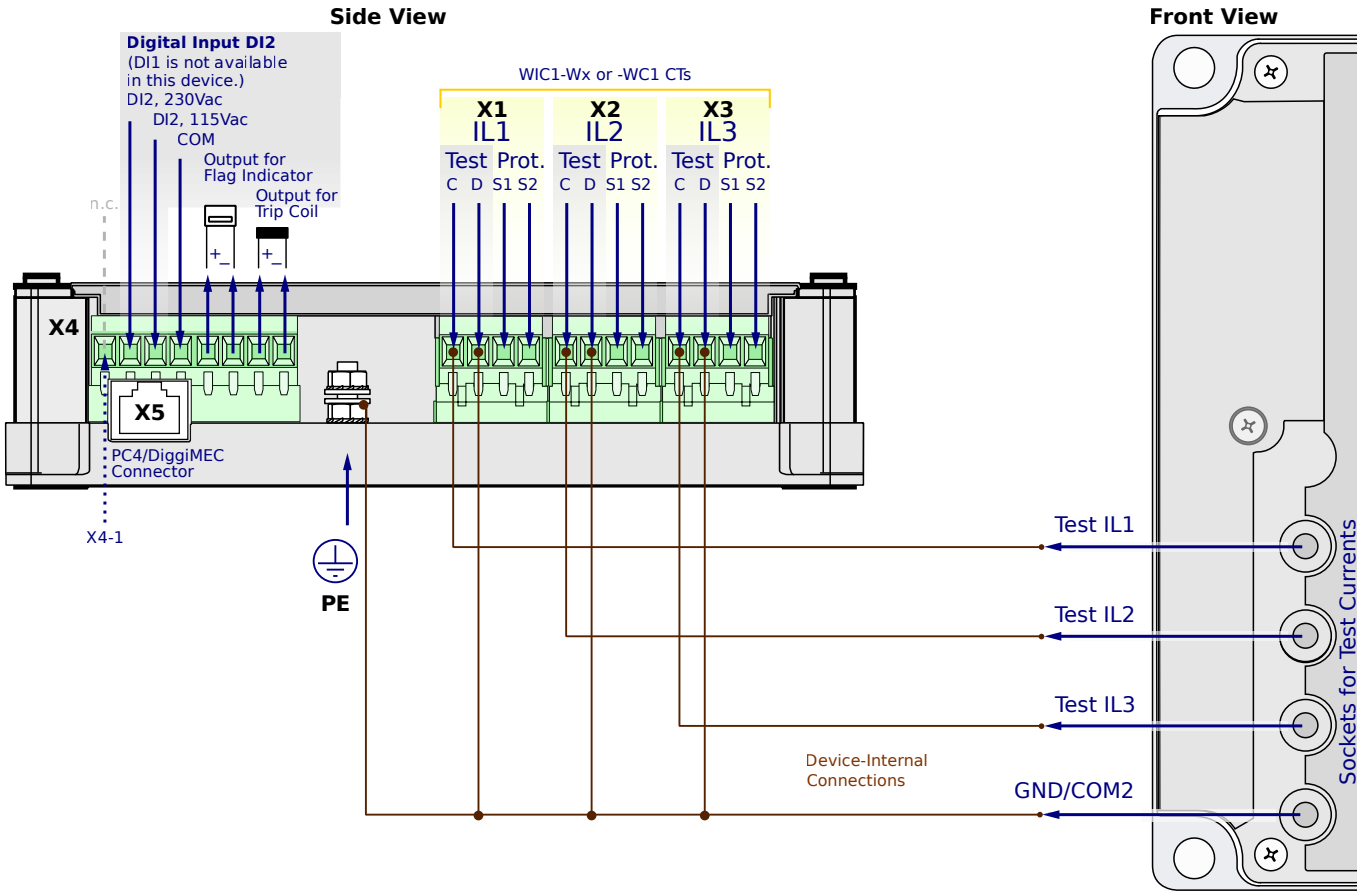


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1SA0

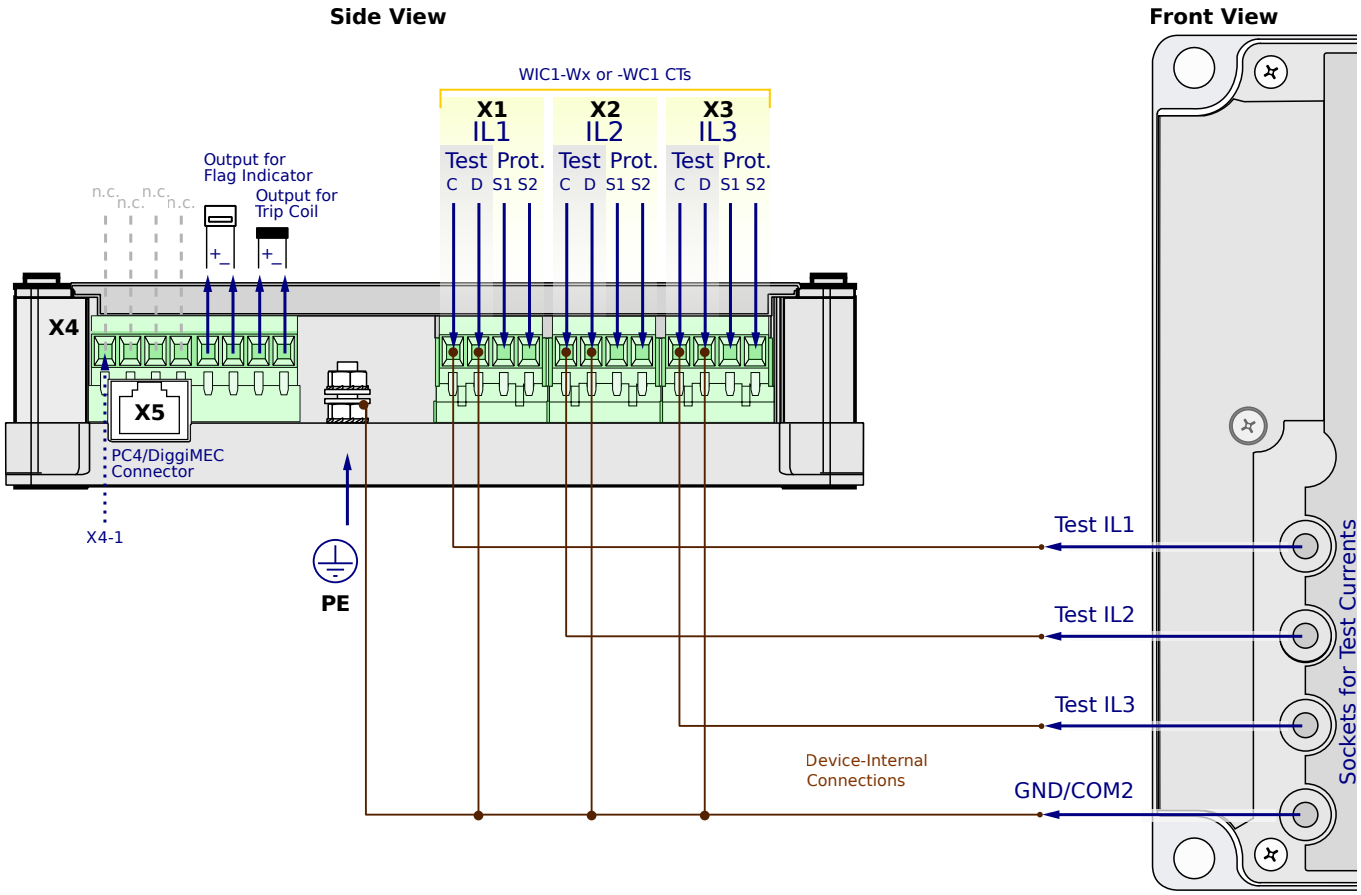


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1SAH

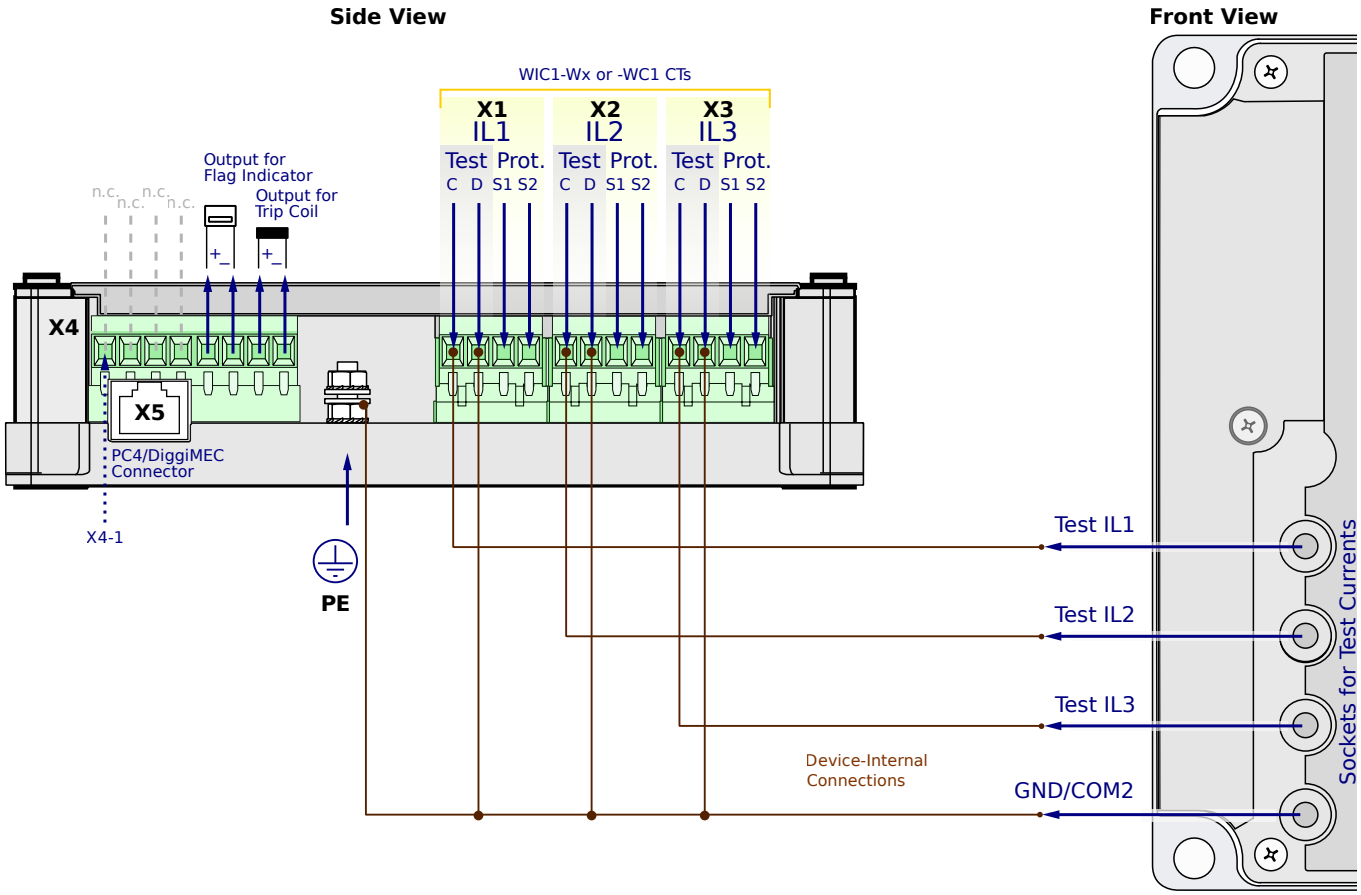


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1AA0

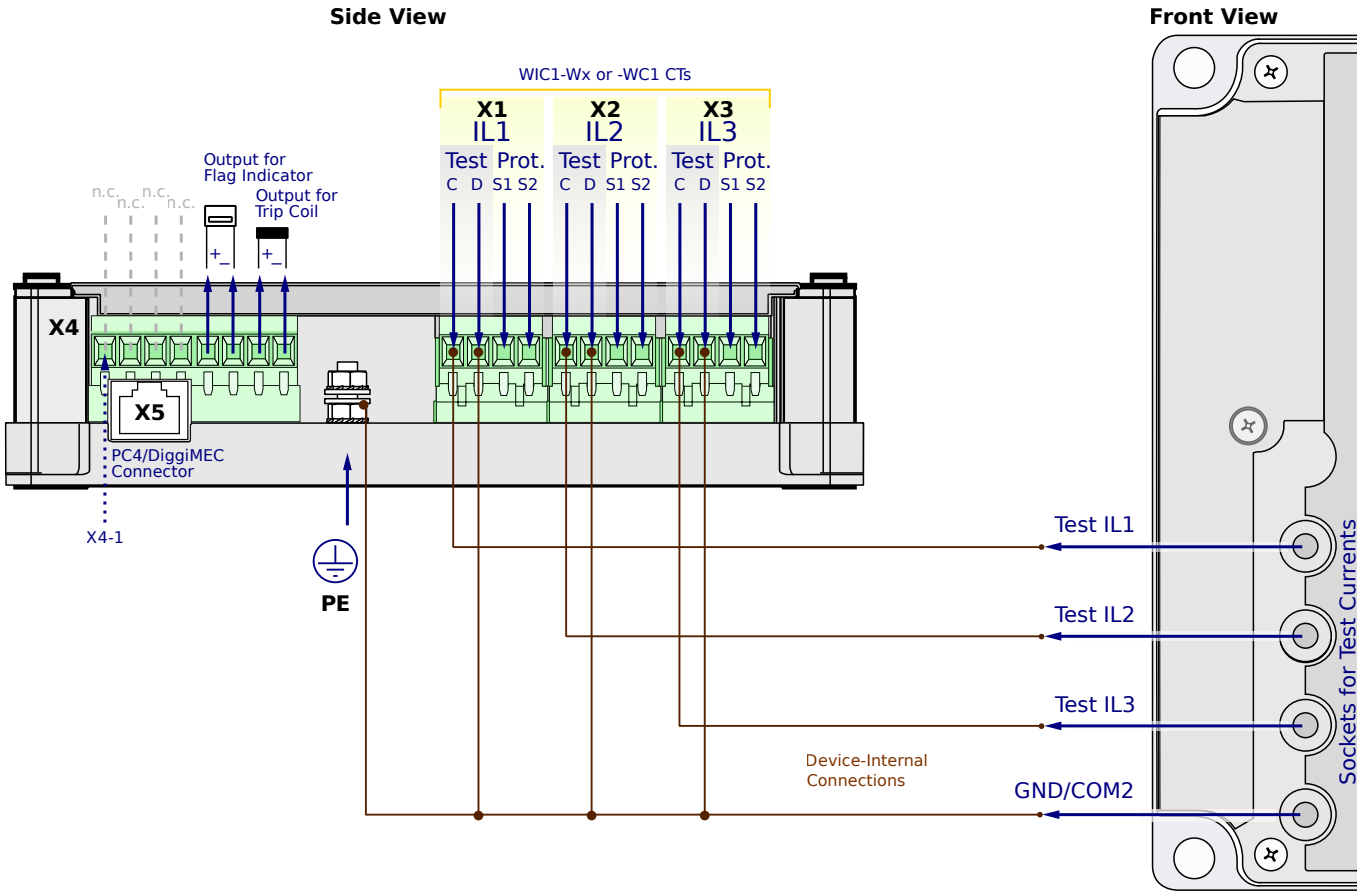


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1AAH

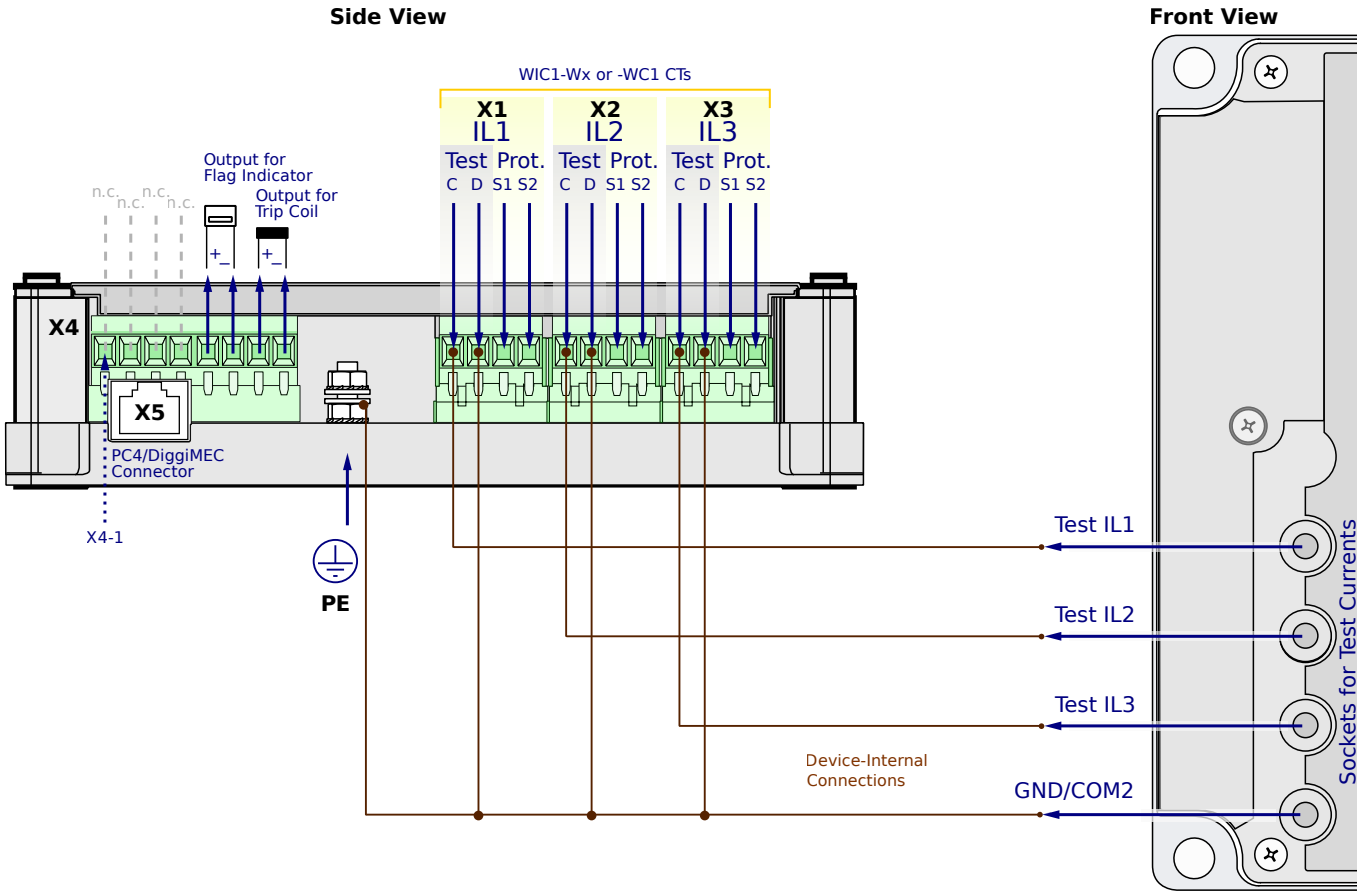


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1PA0

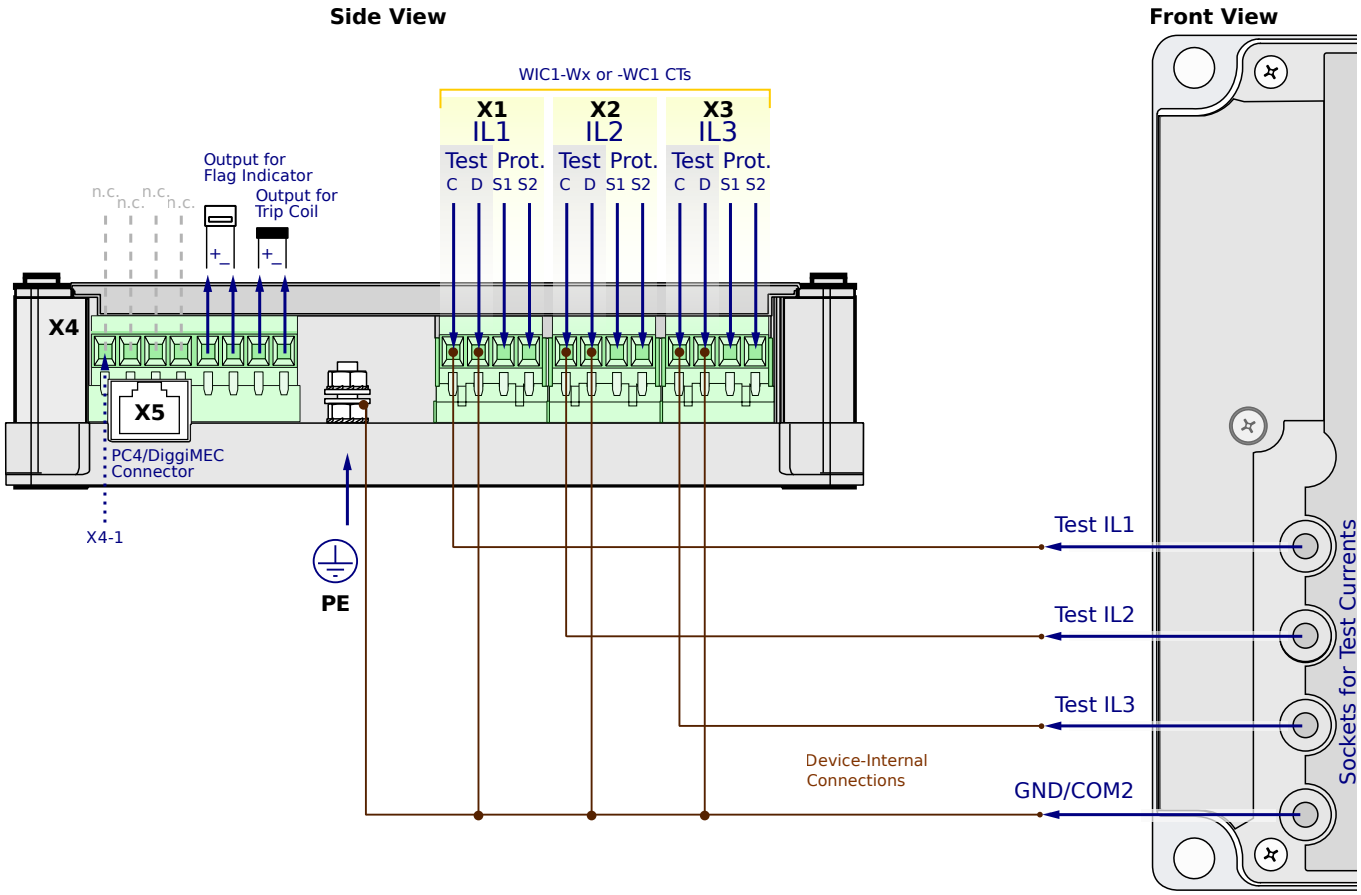


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN1PAH

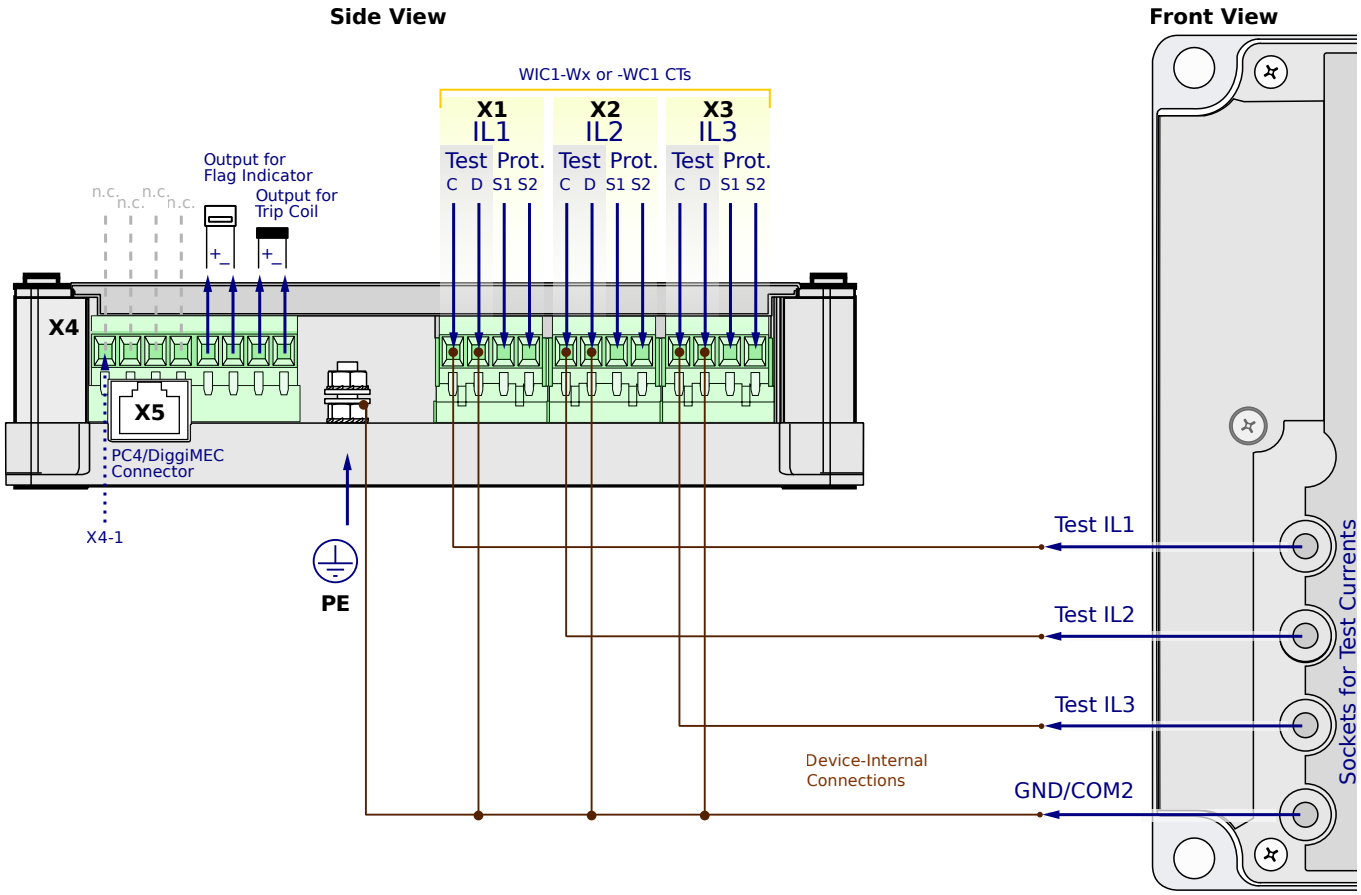


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2SA0

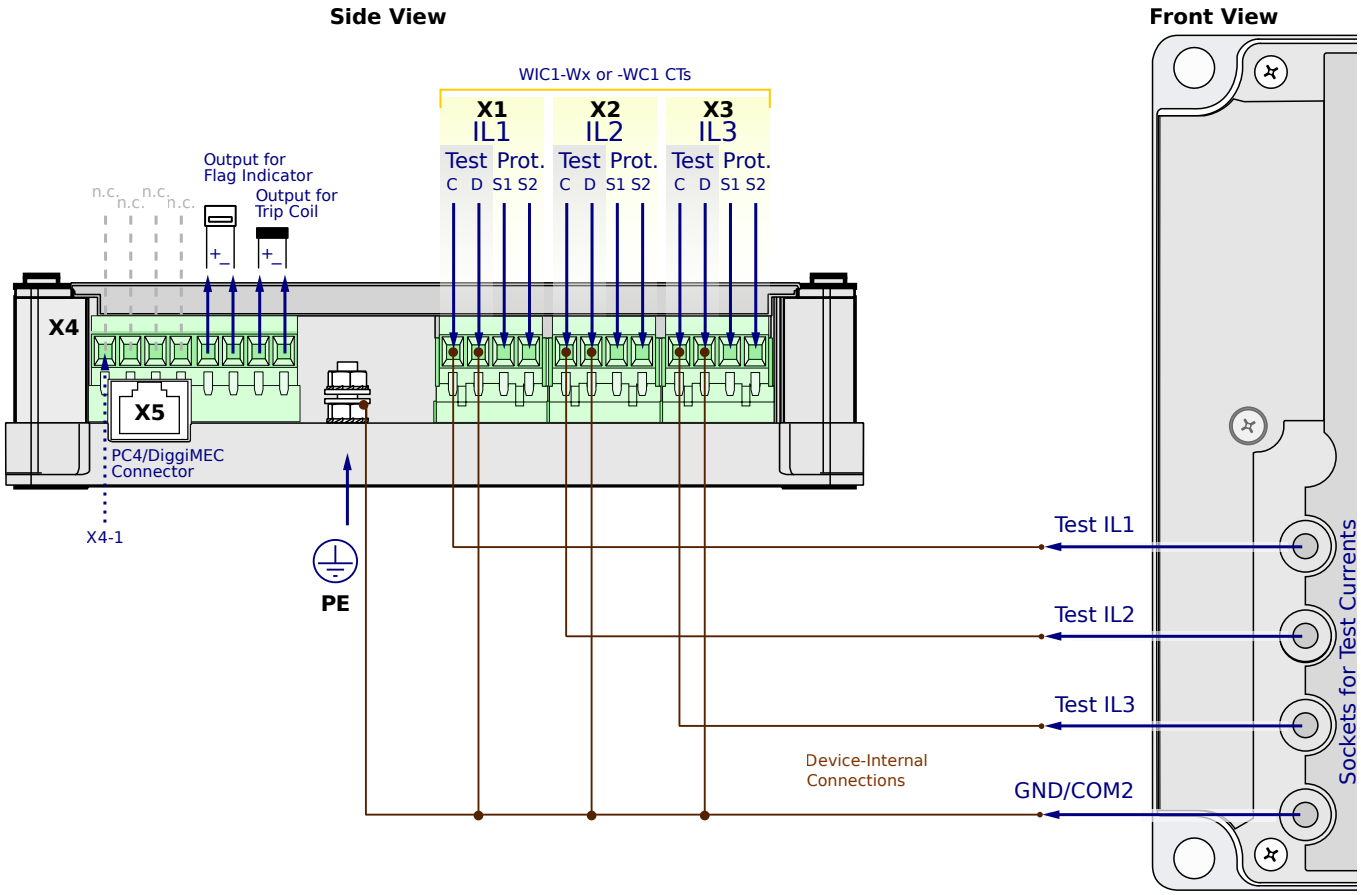


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2SAH

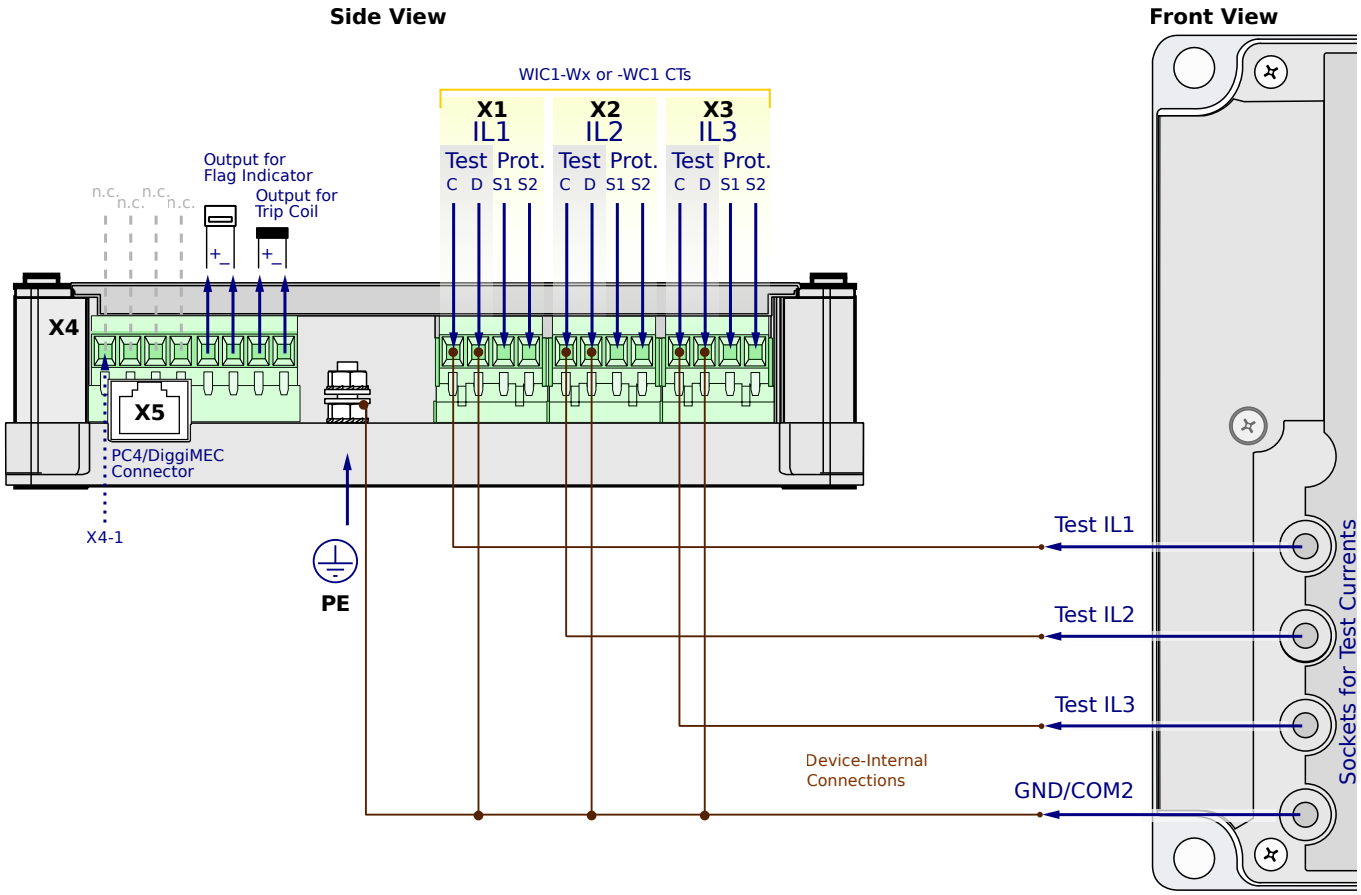


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2AA0

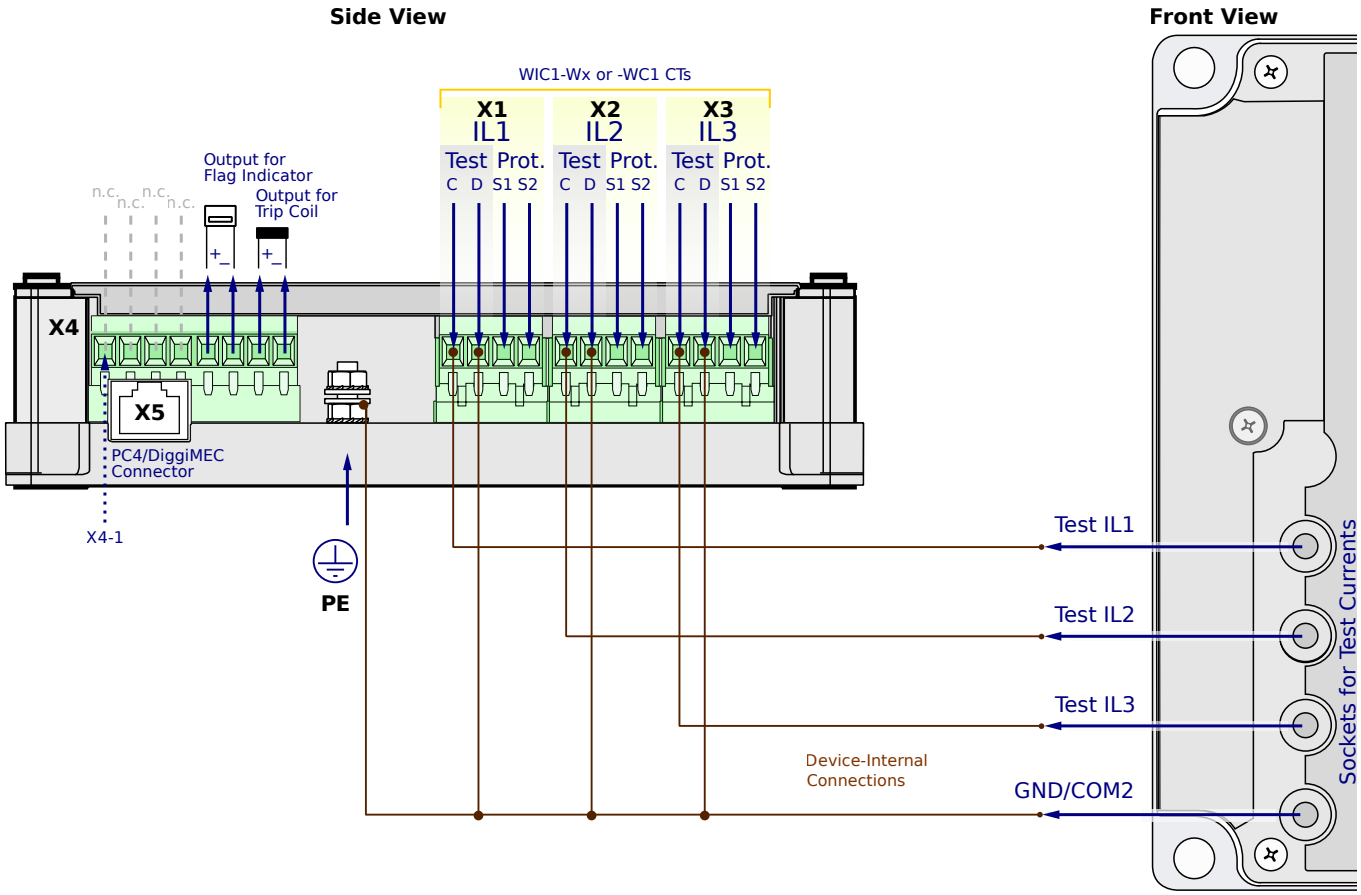


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2AAH

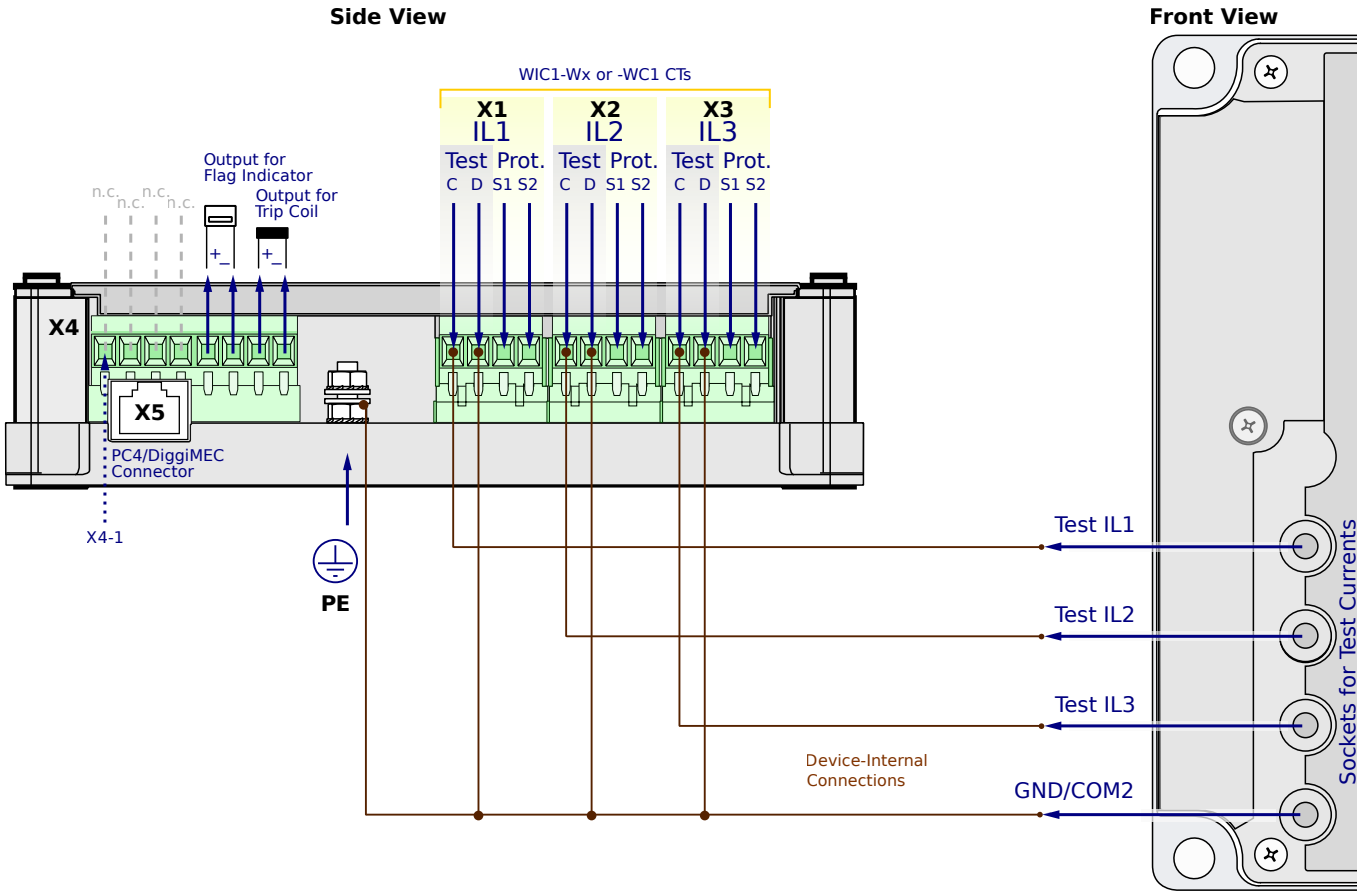


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2PA0

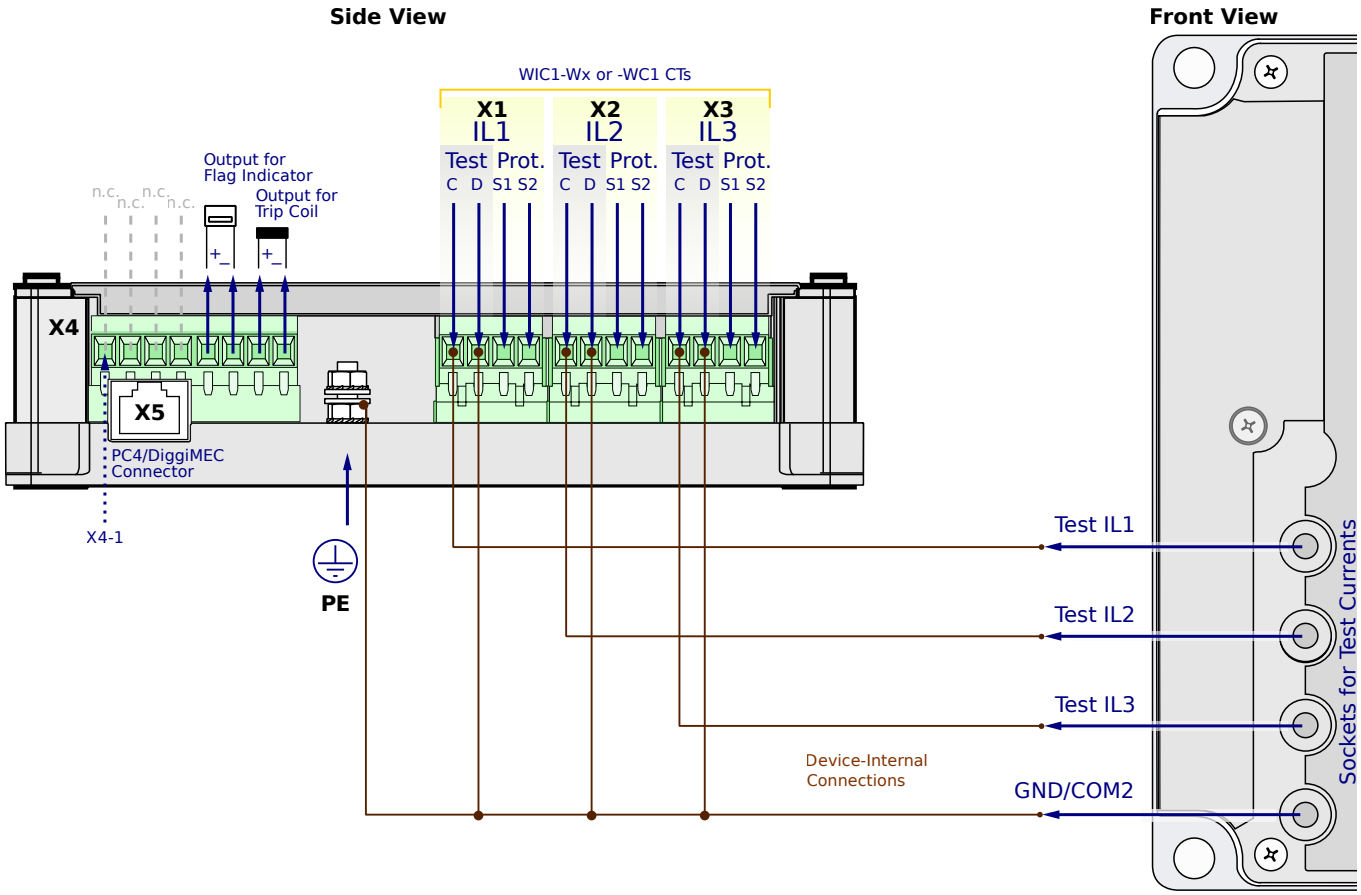


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CN2PAH

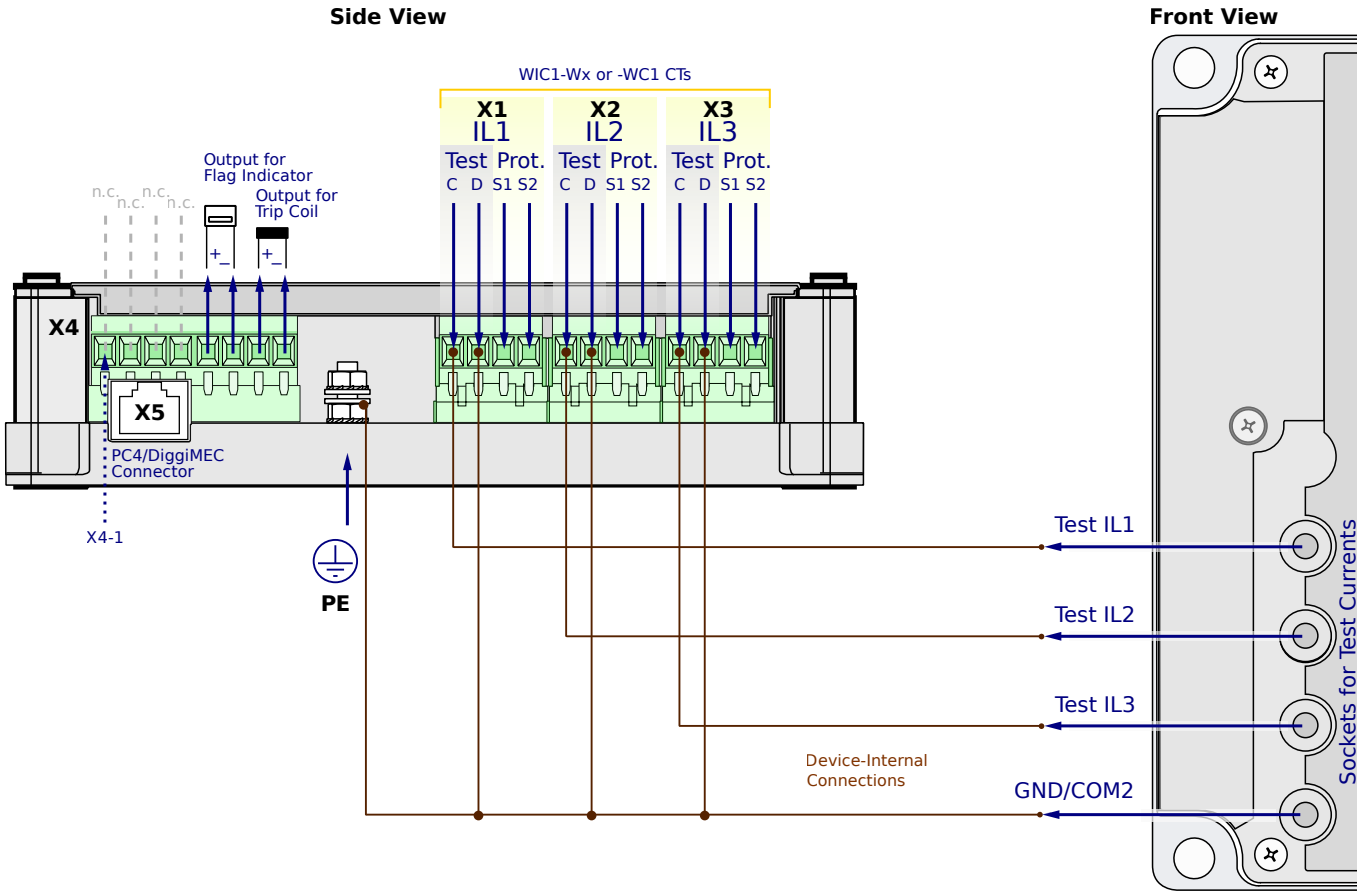


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1SA0

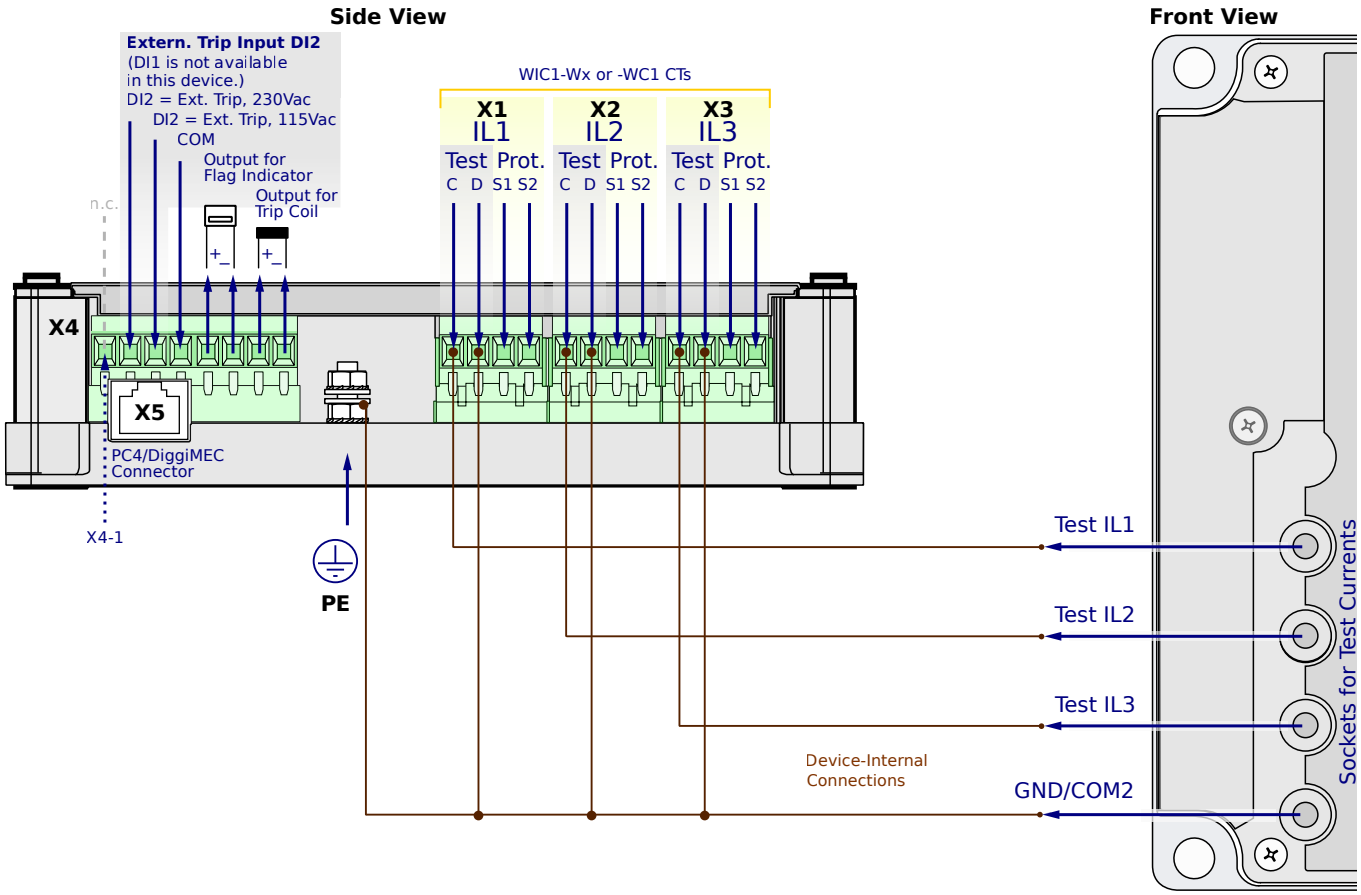


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1SAH

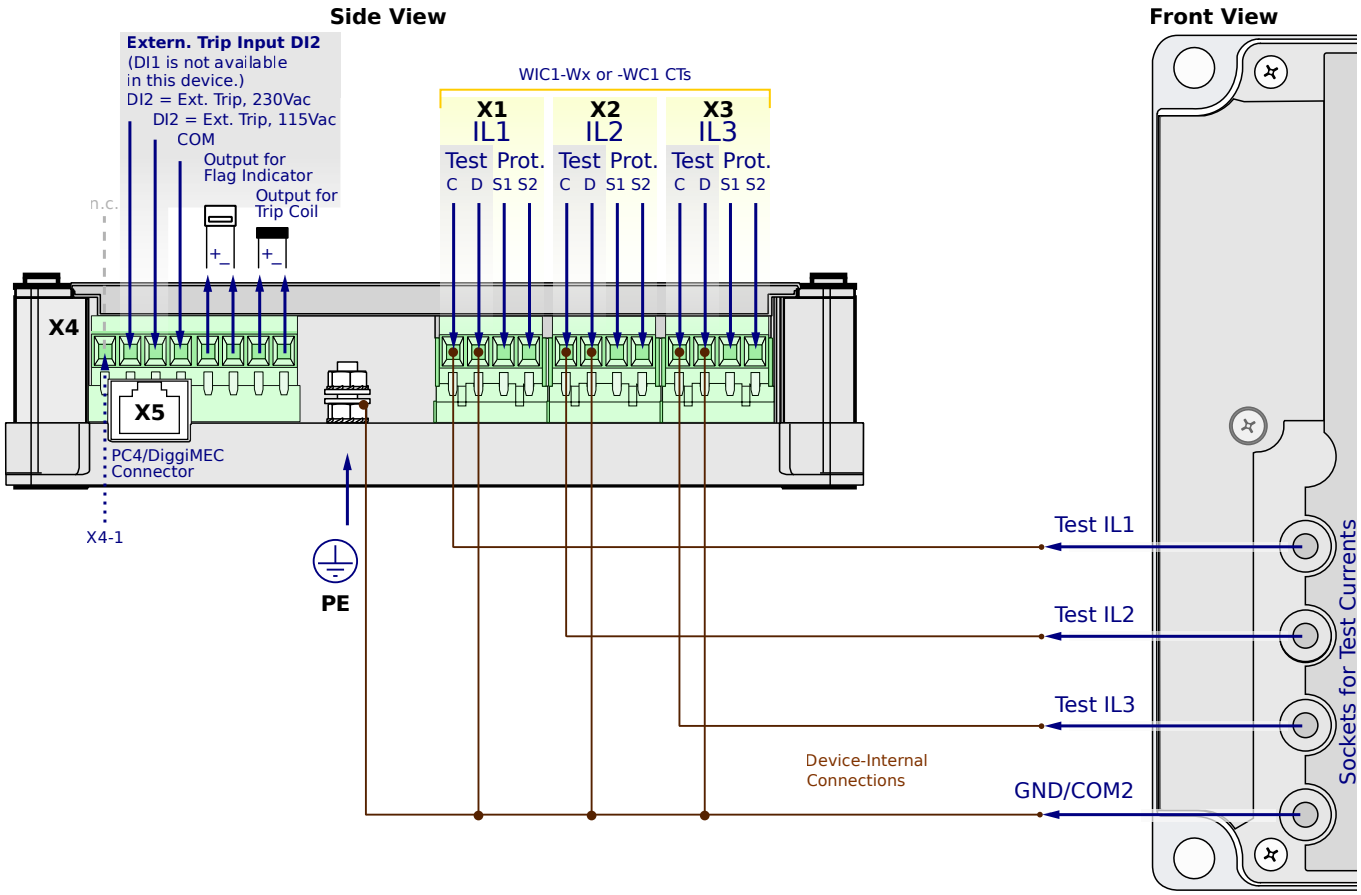


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1AA0

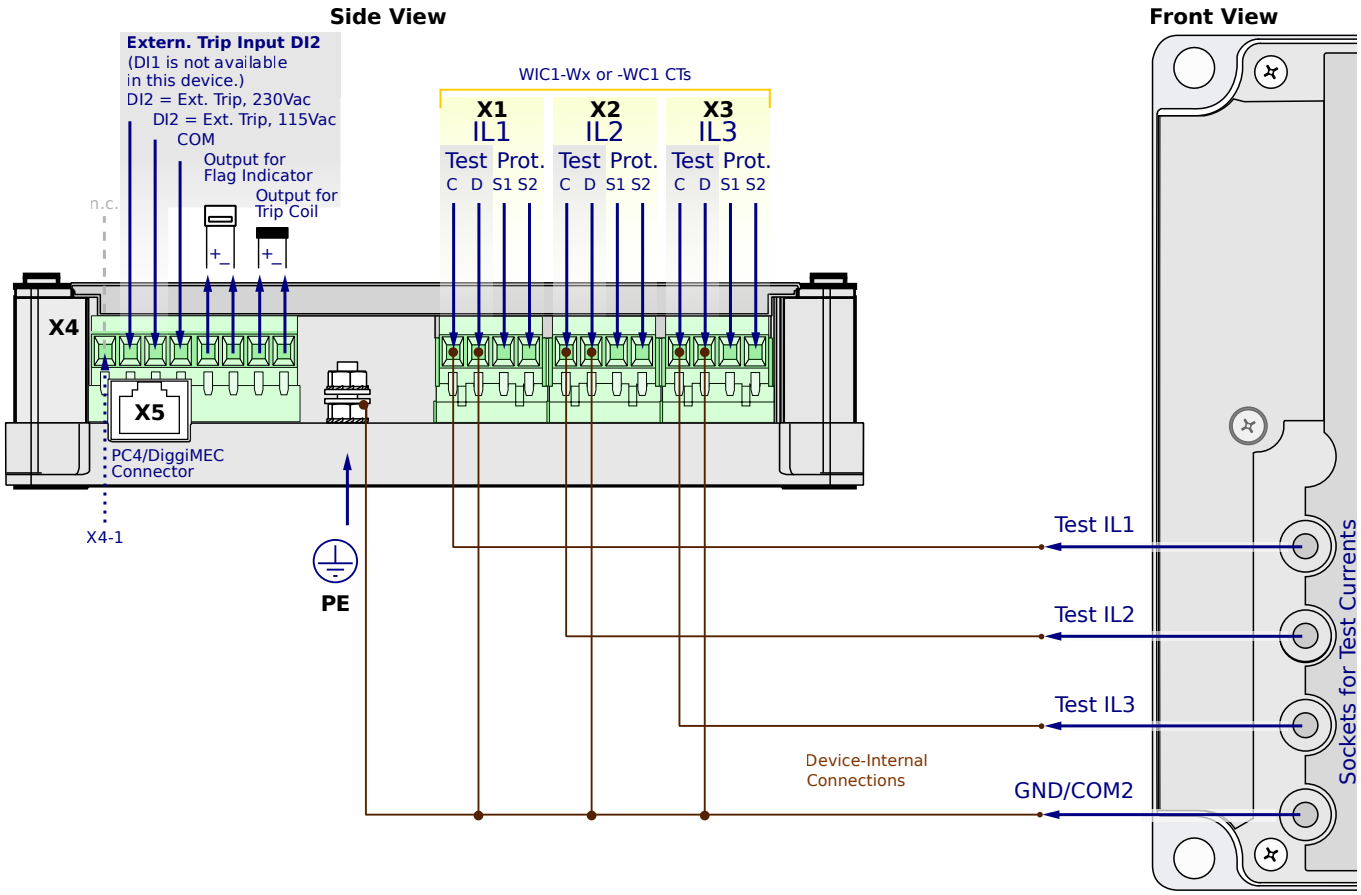


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1AAH

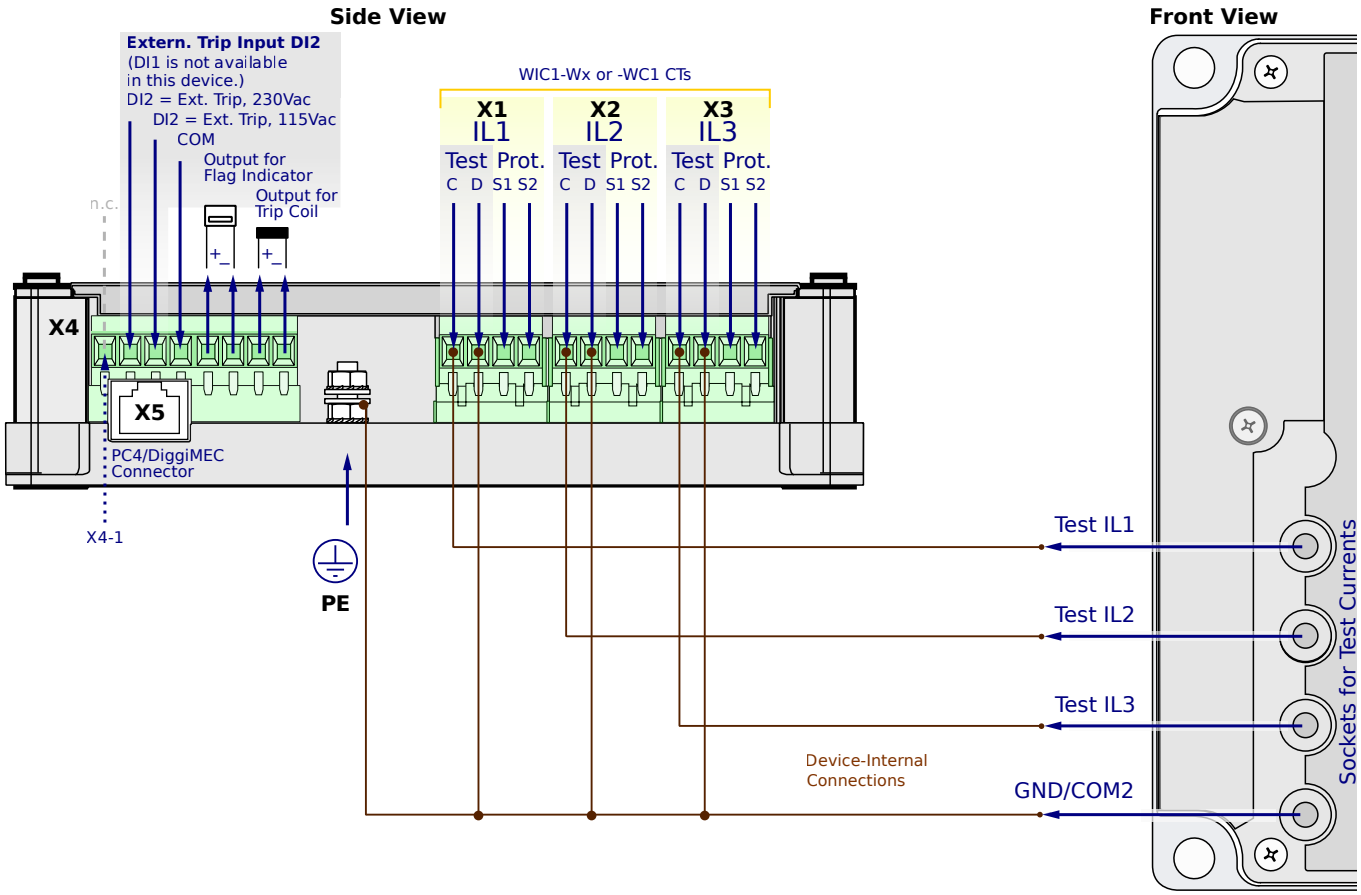


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1PA0

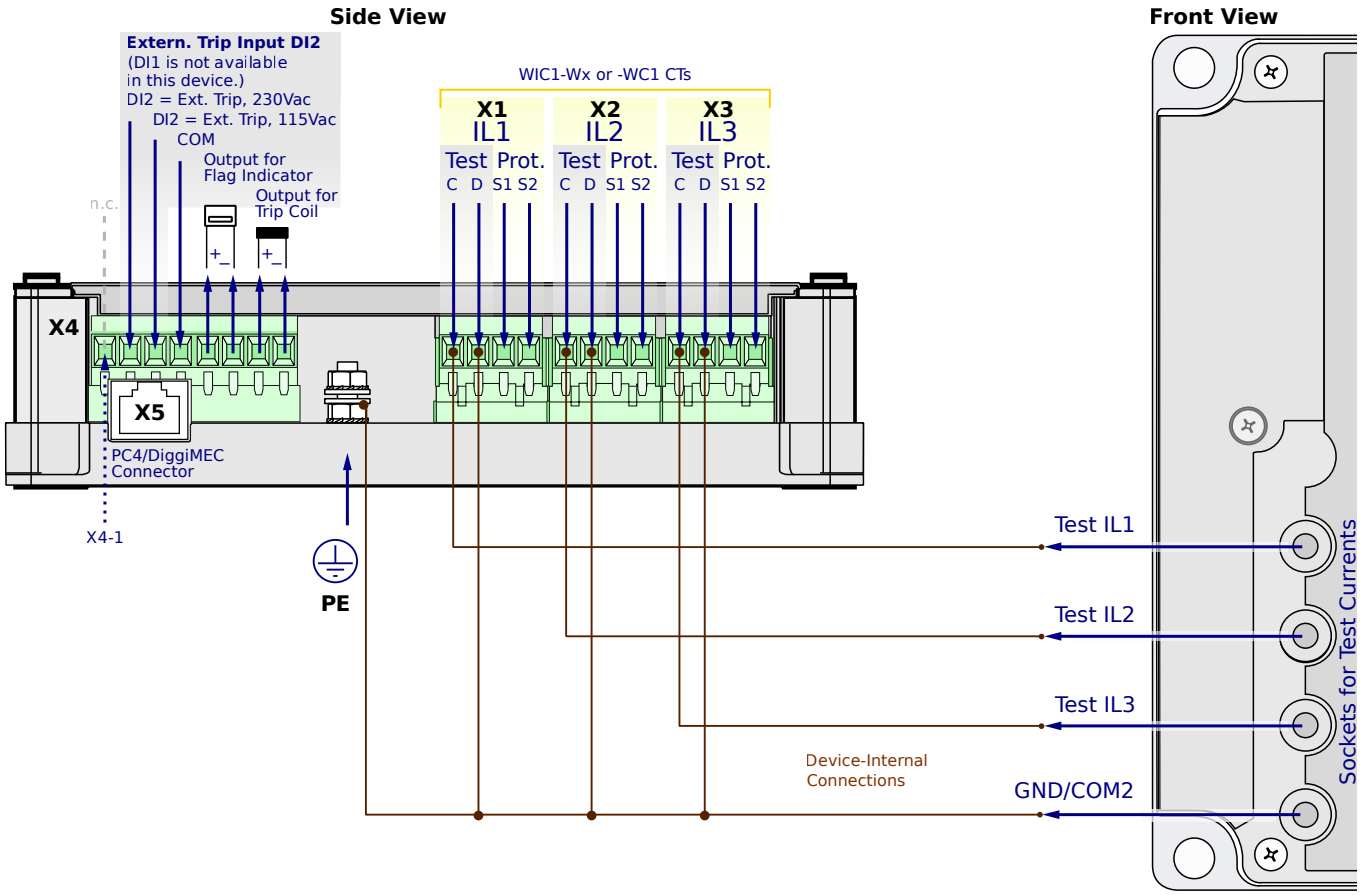


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF1PAH

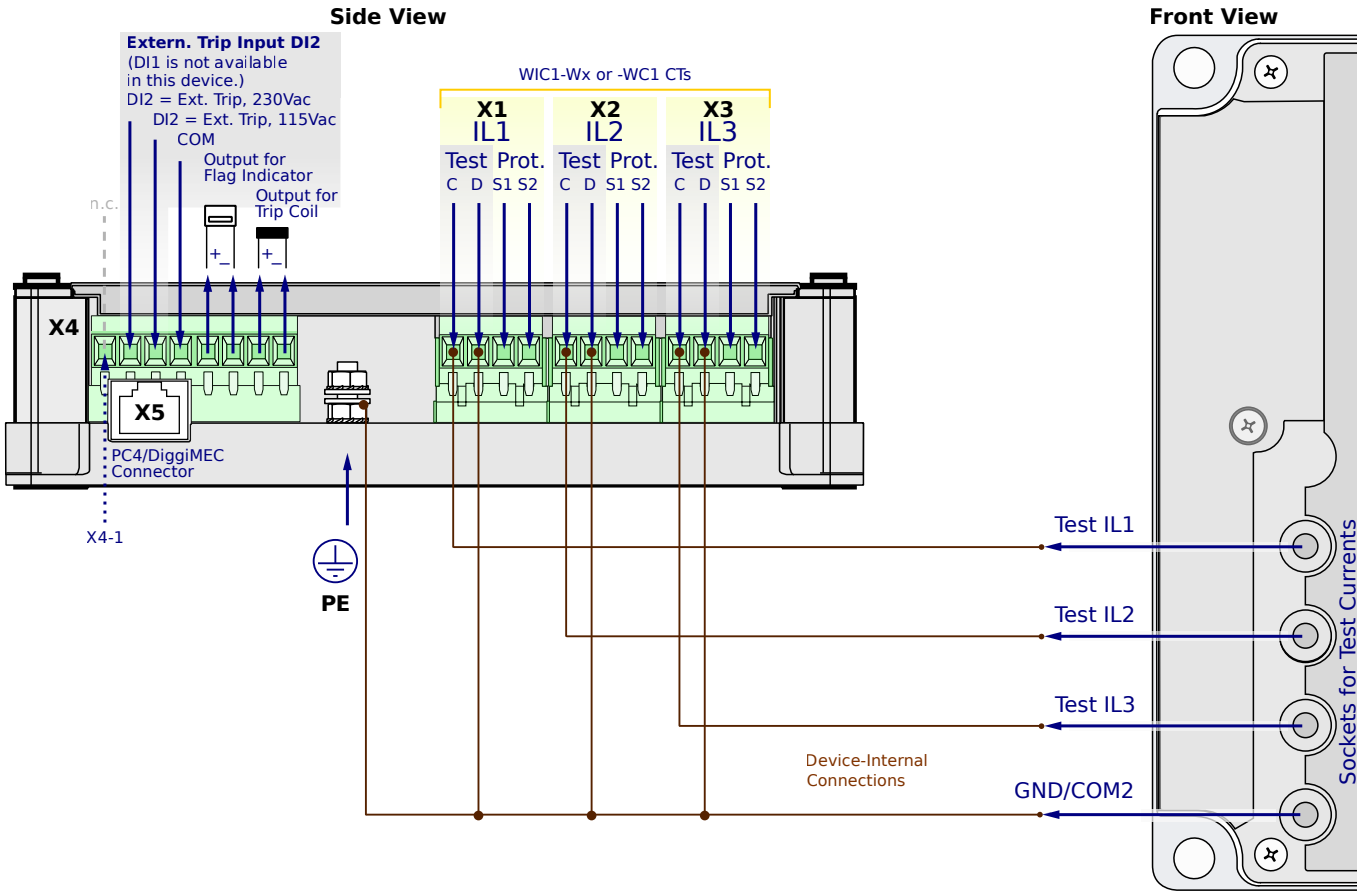


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2SA0

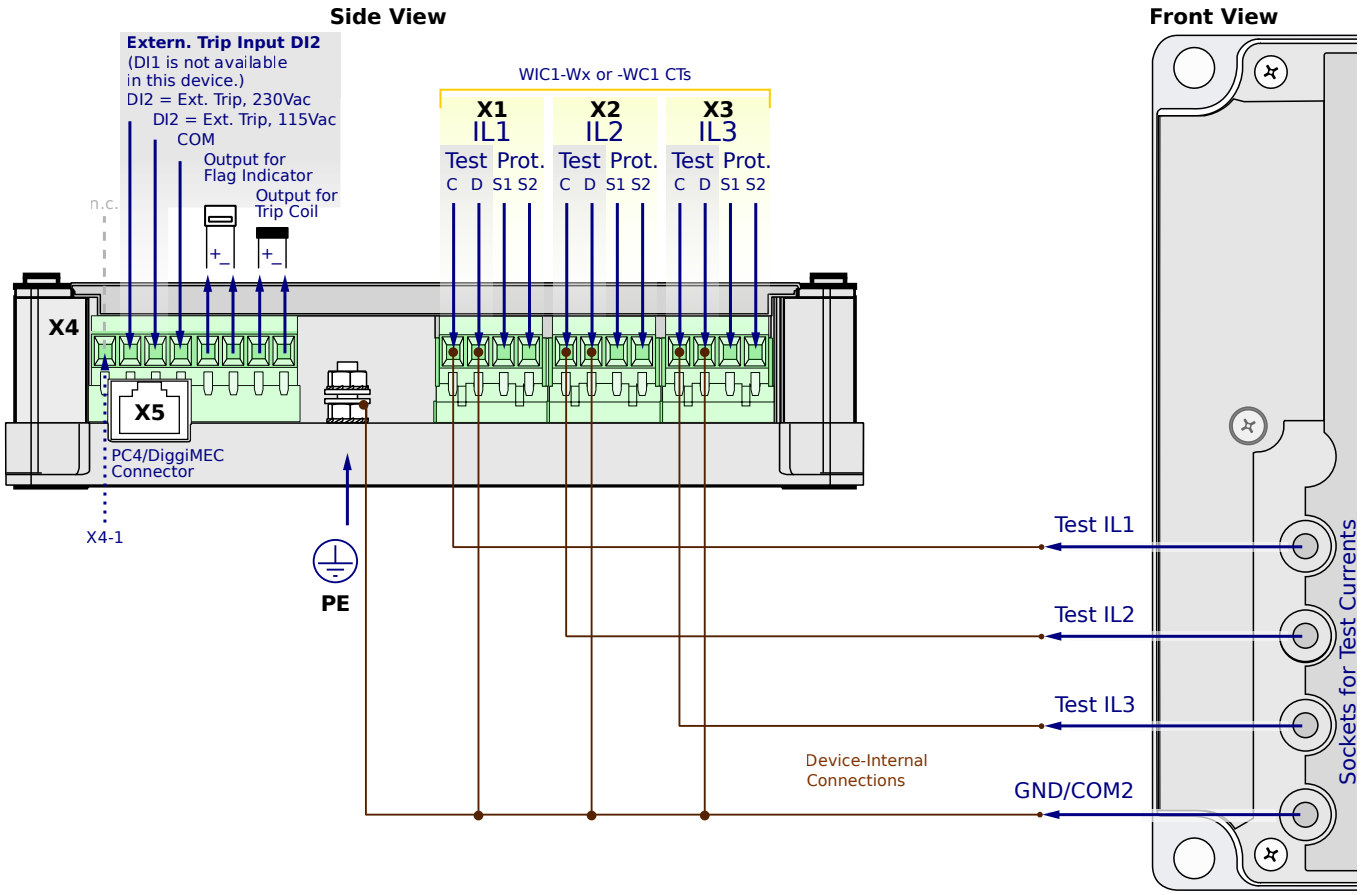


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2SAH

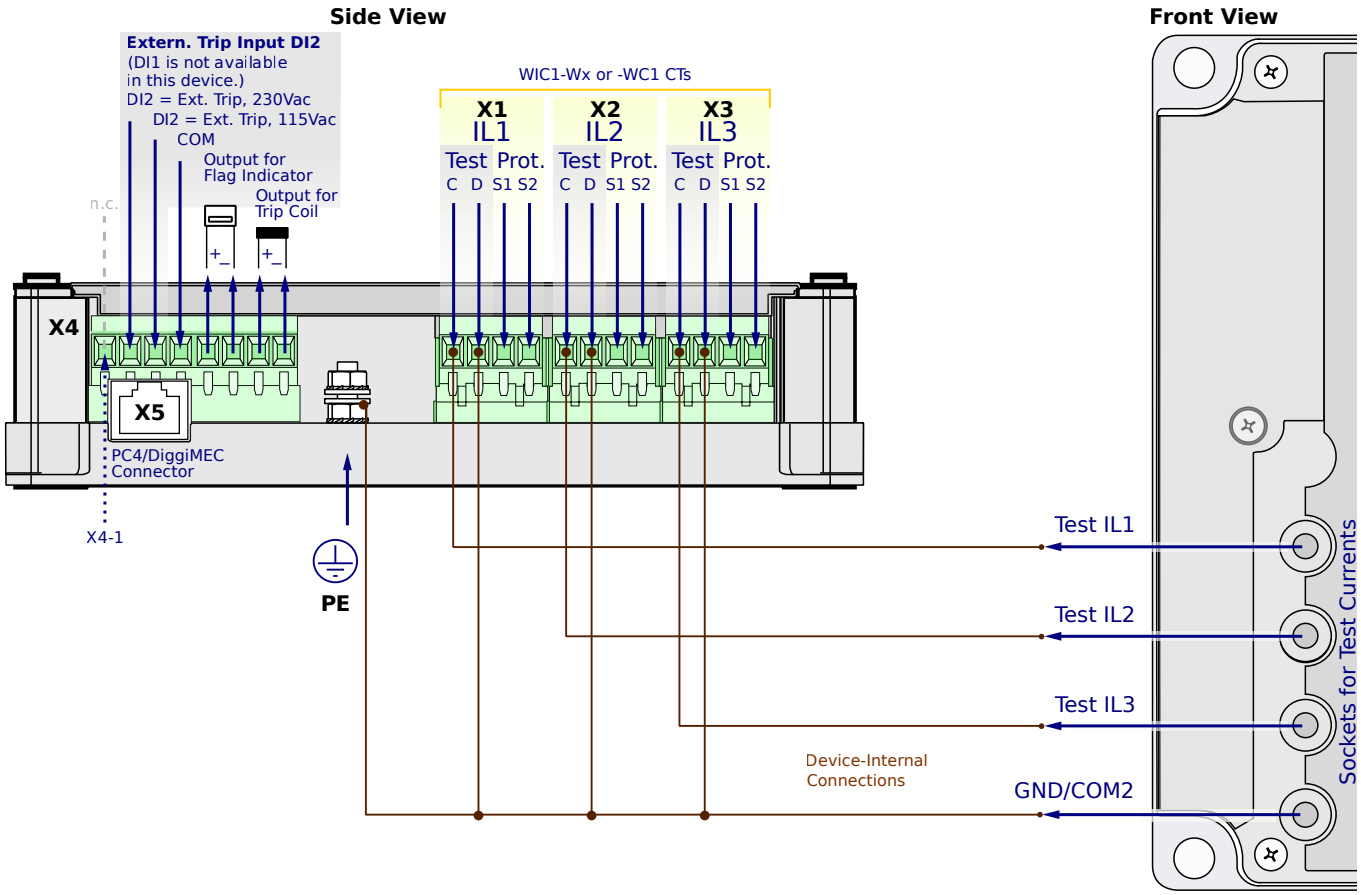


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2AA0

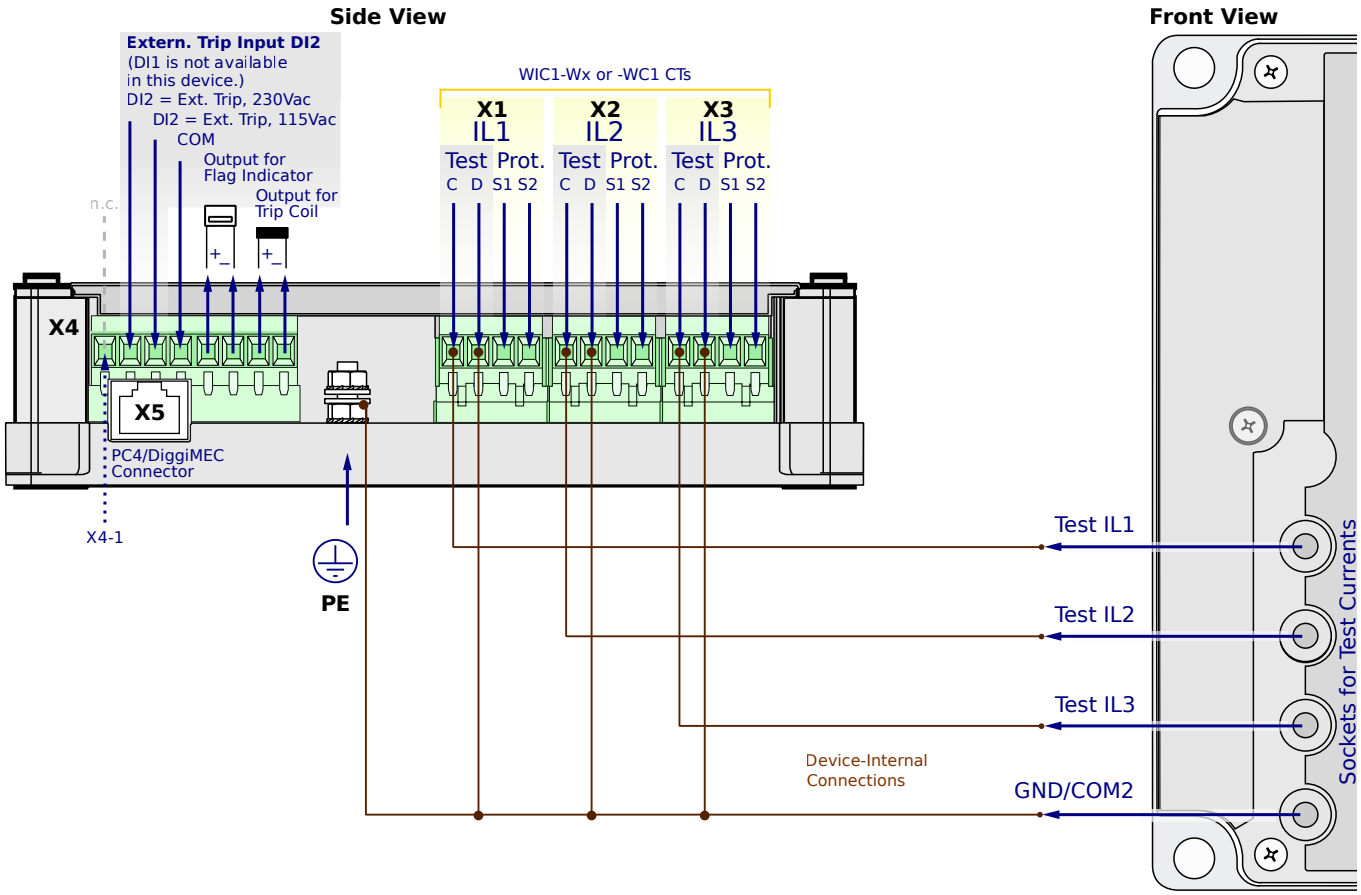


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2AAH

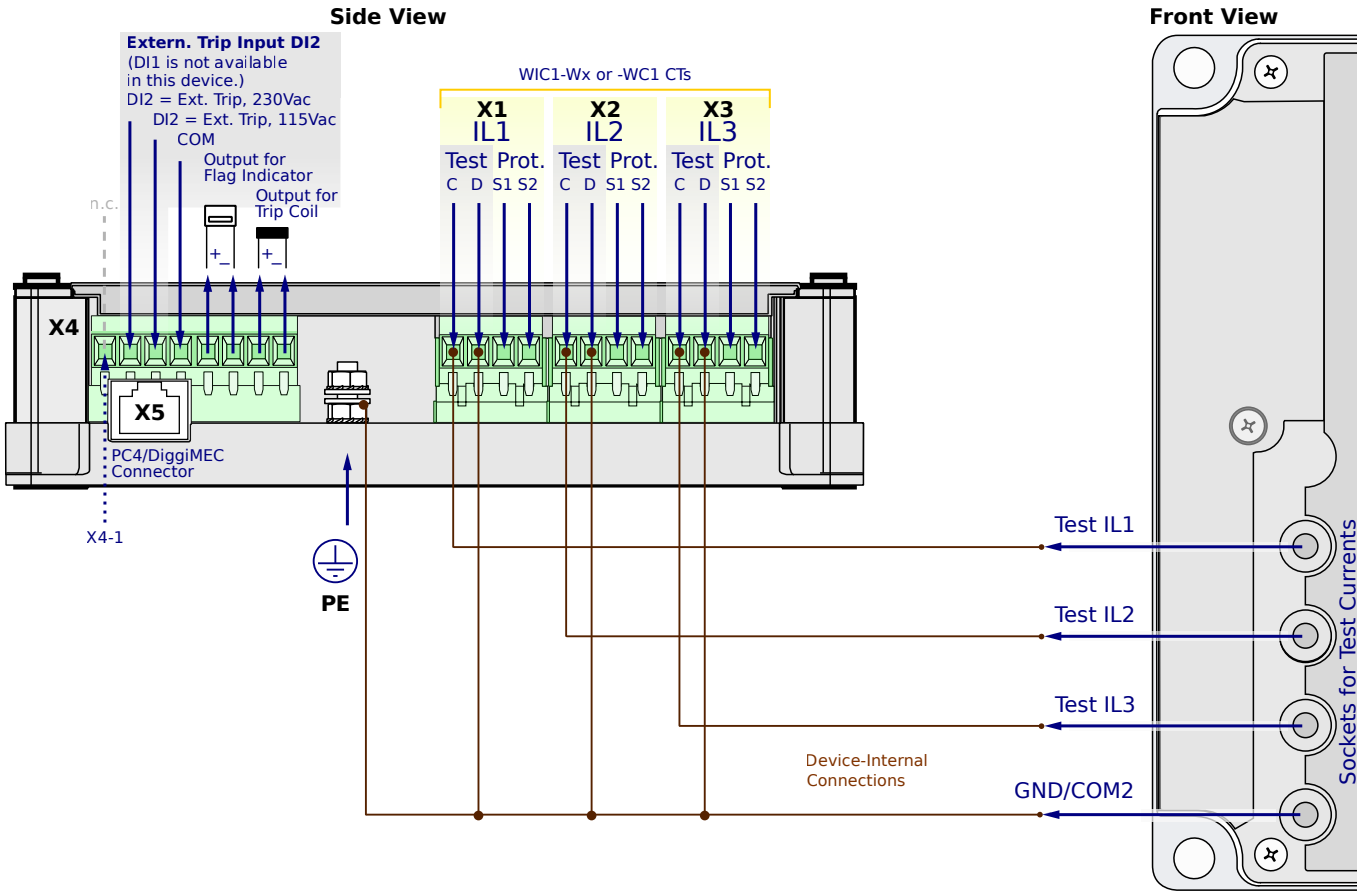


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2PA0

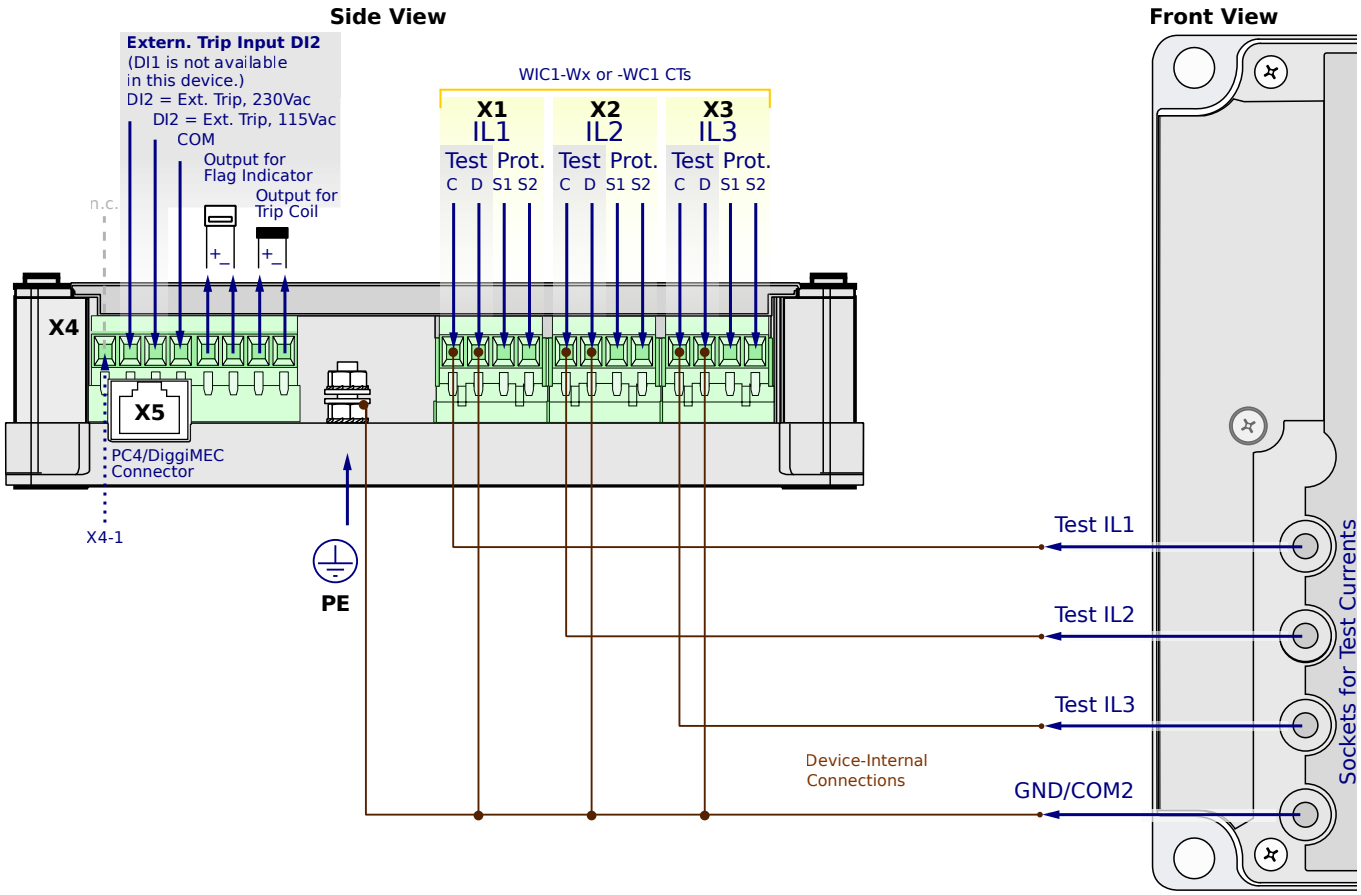


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CF2PAH

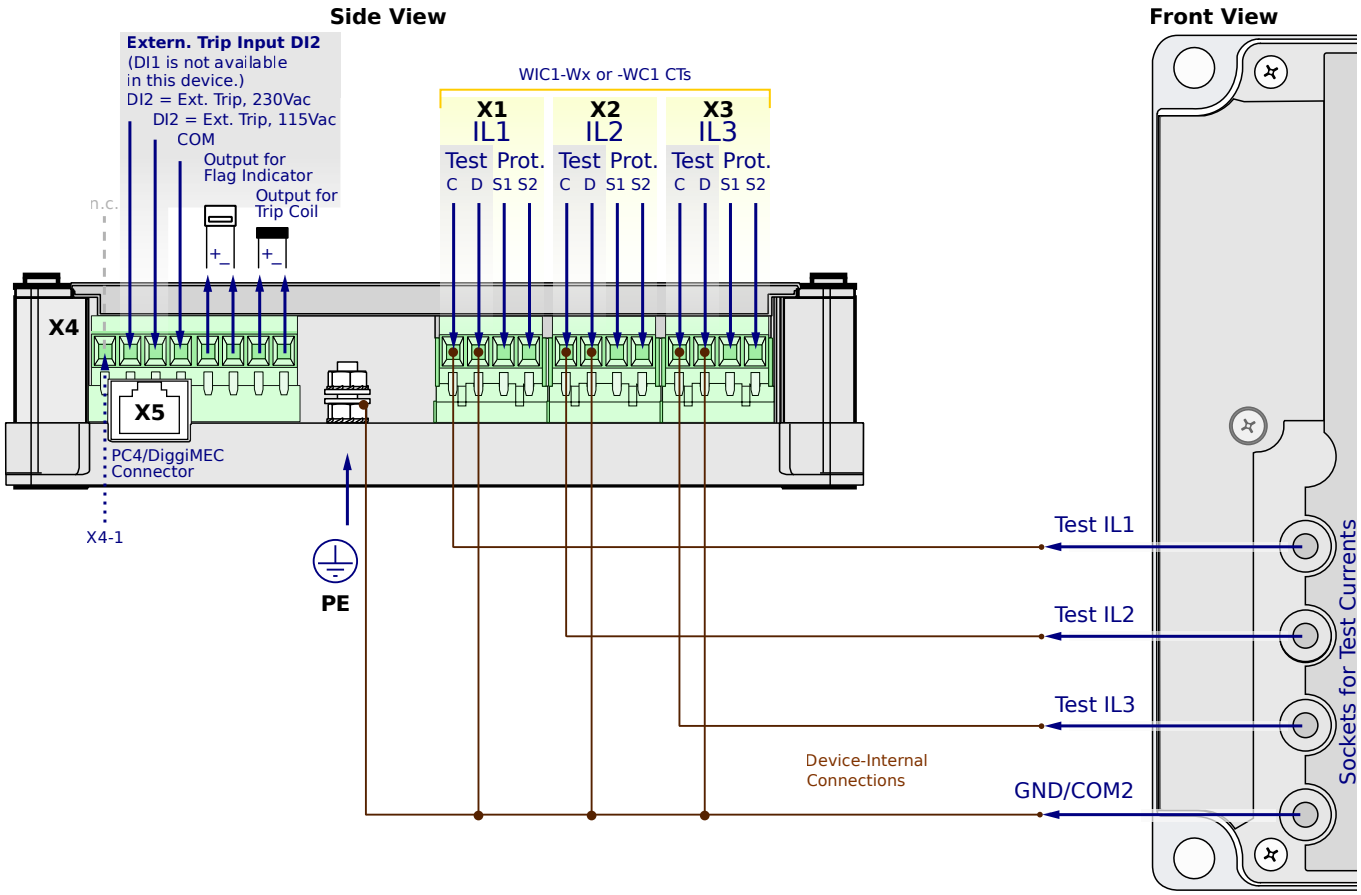


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1SA0

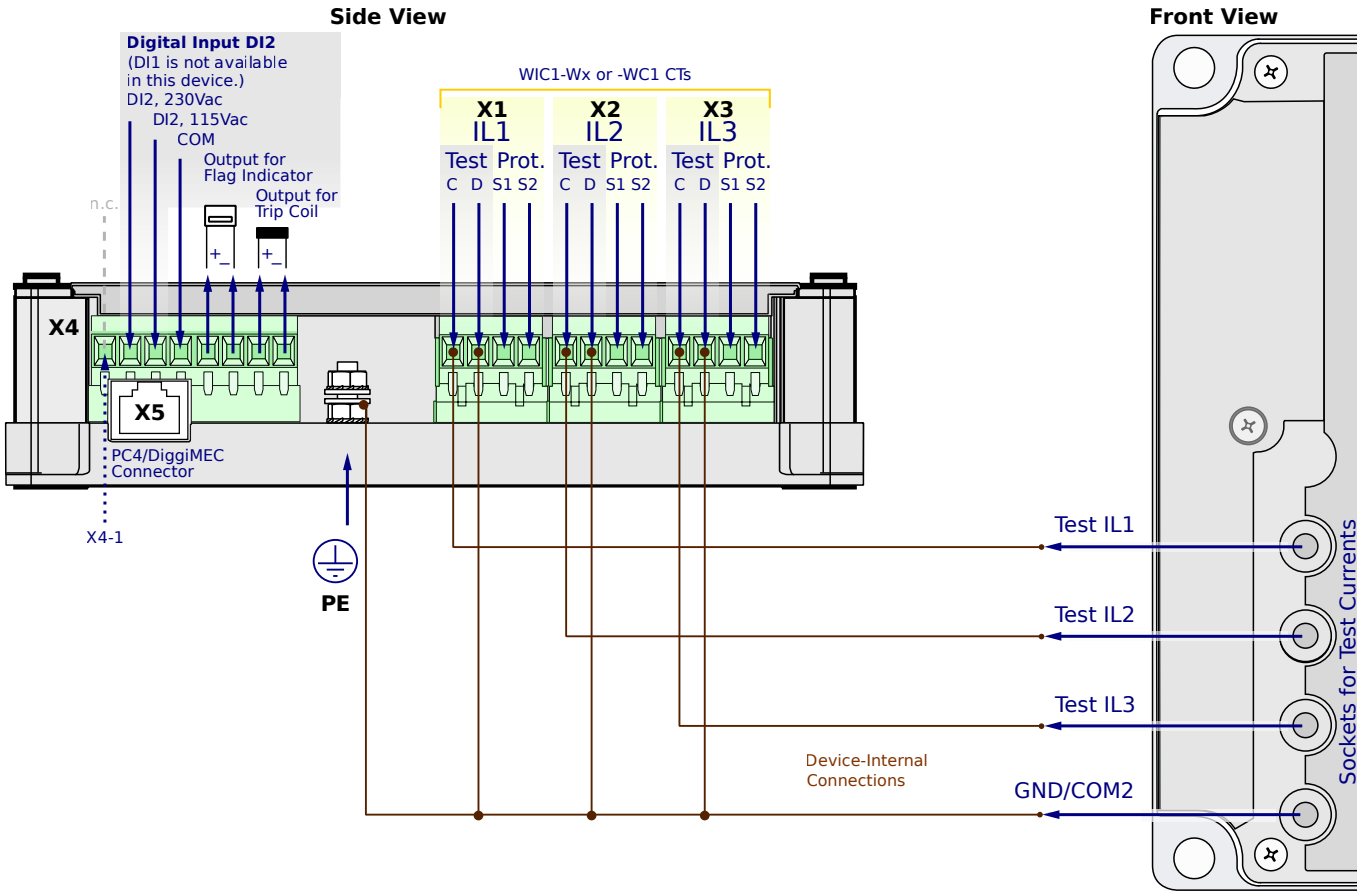


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1SAH

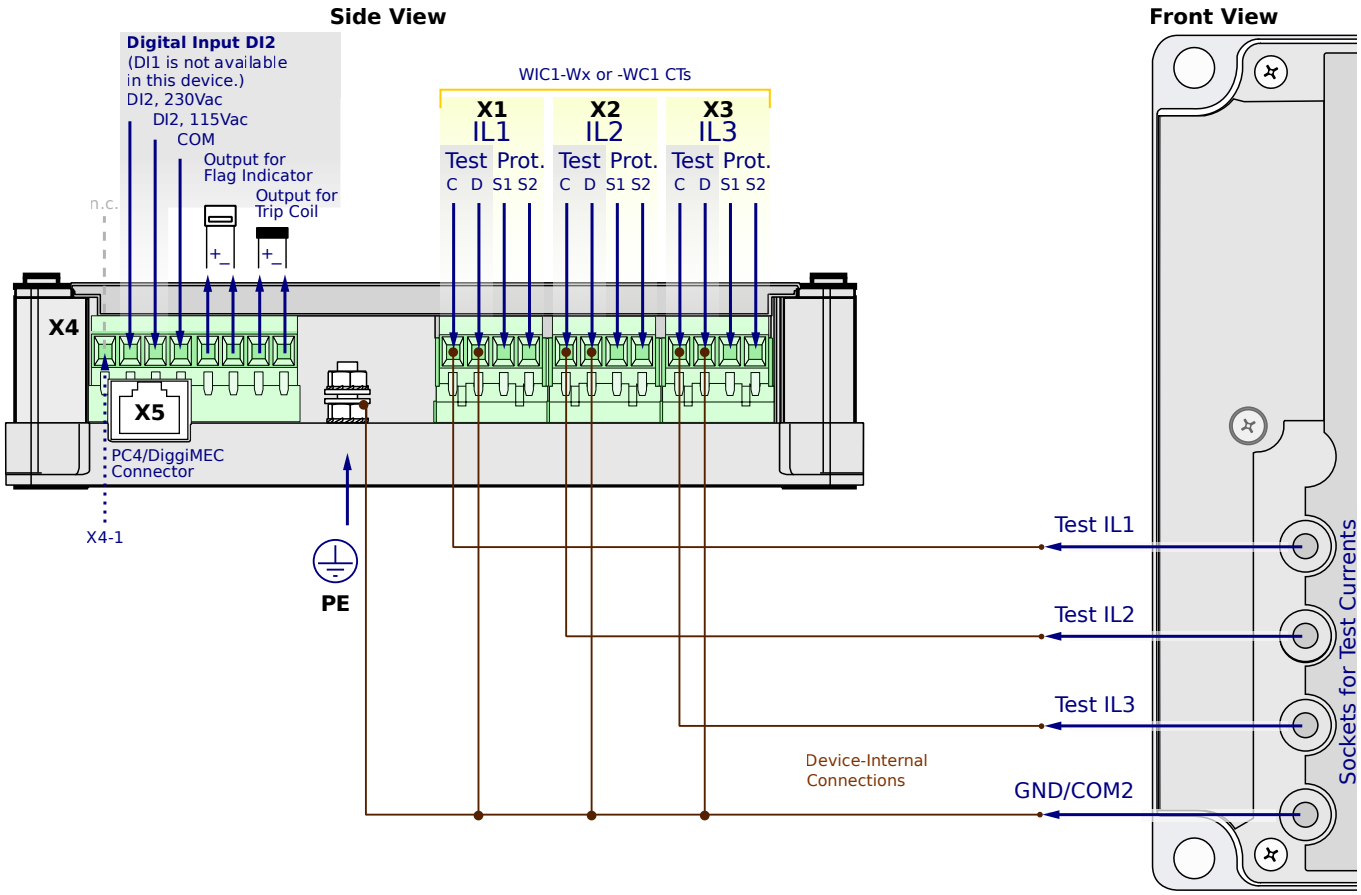


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1AA0

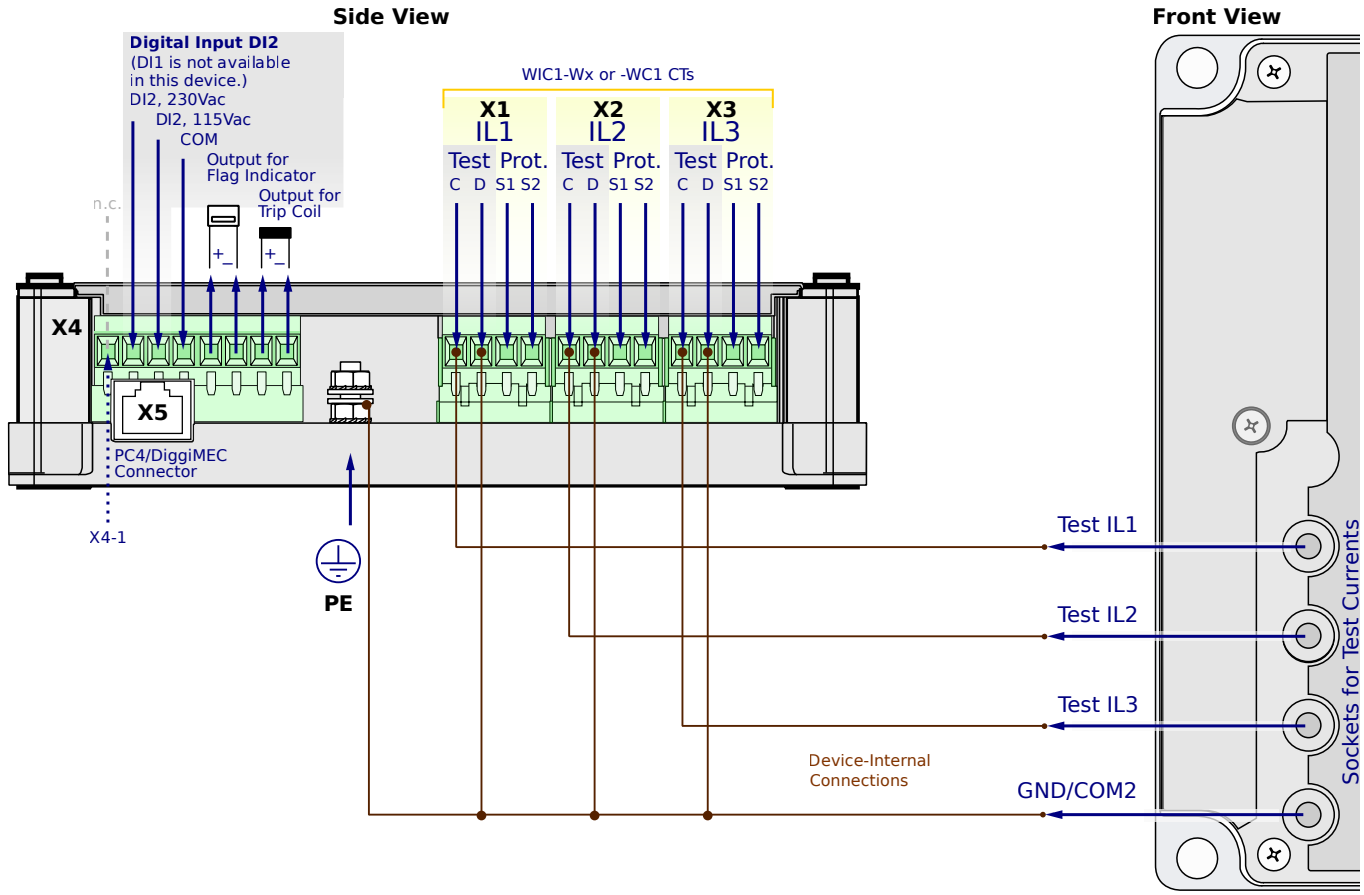


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1AAH

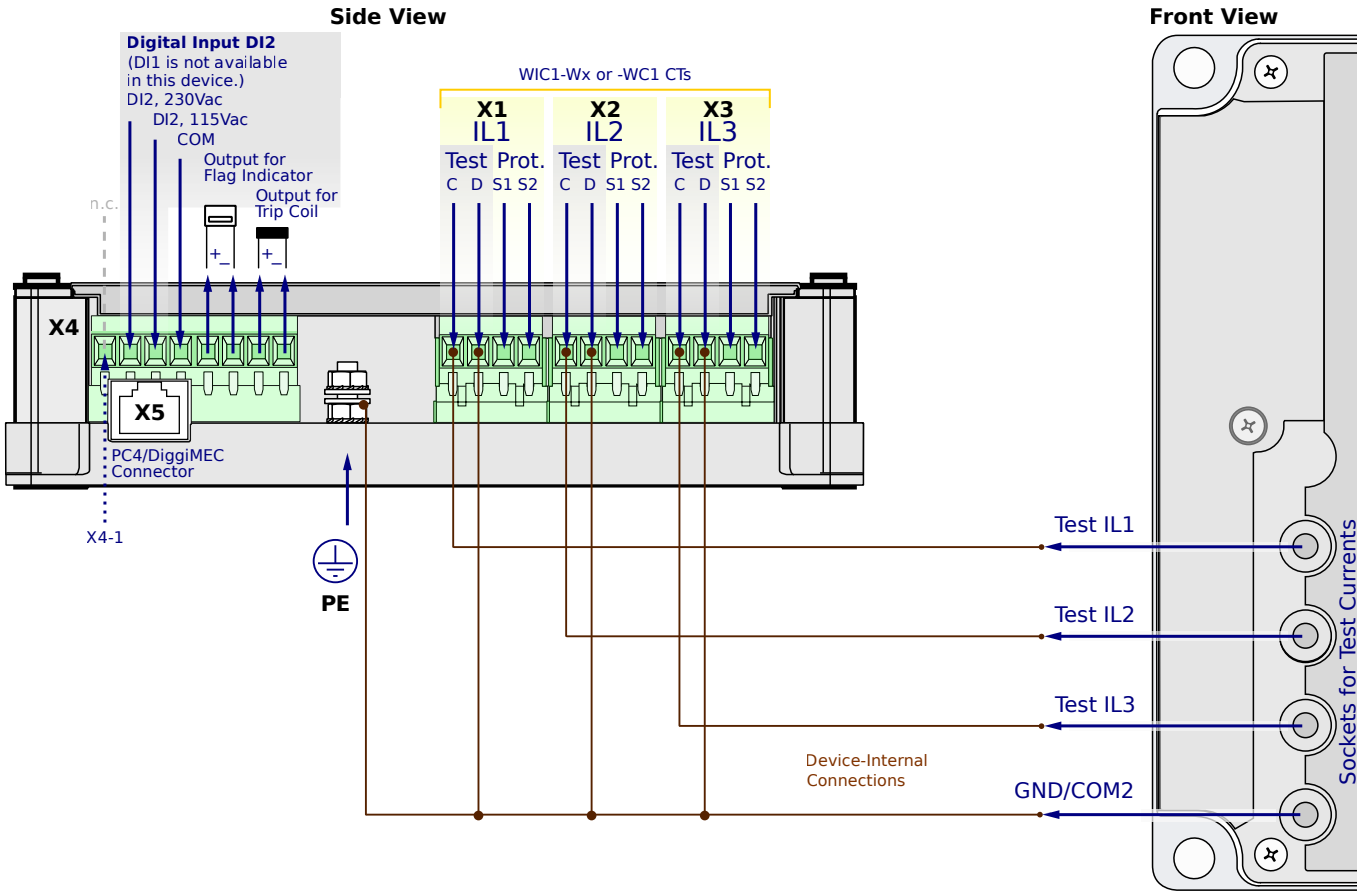


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1PA0

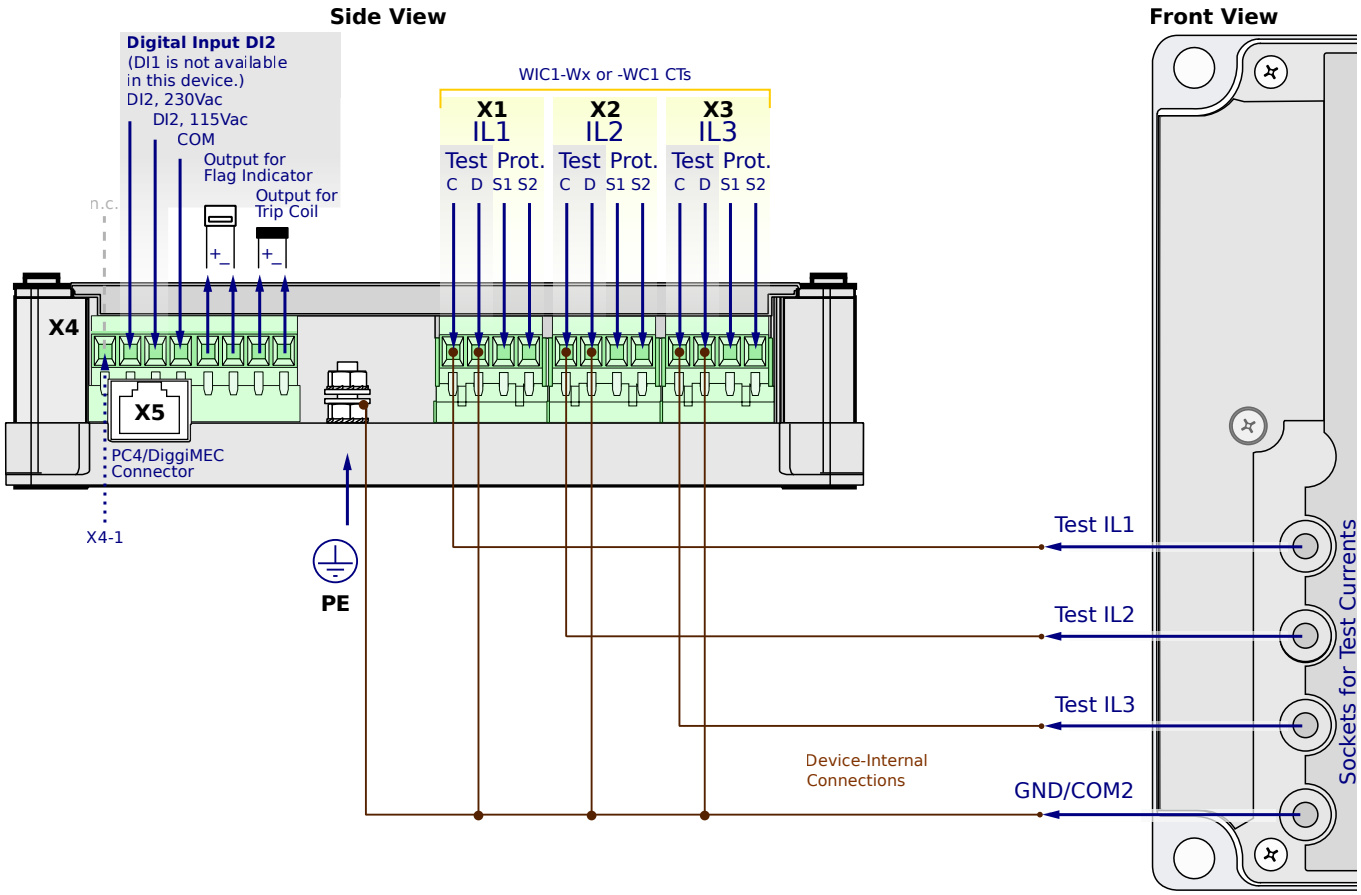


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC1PAH

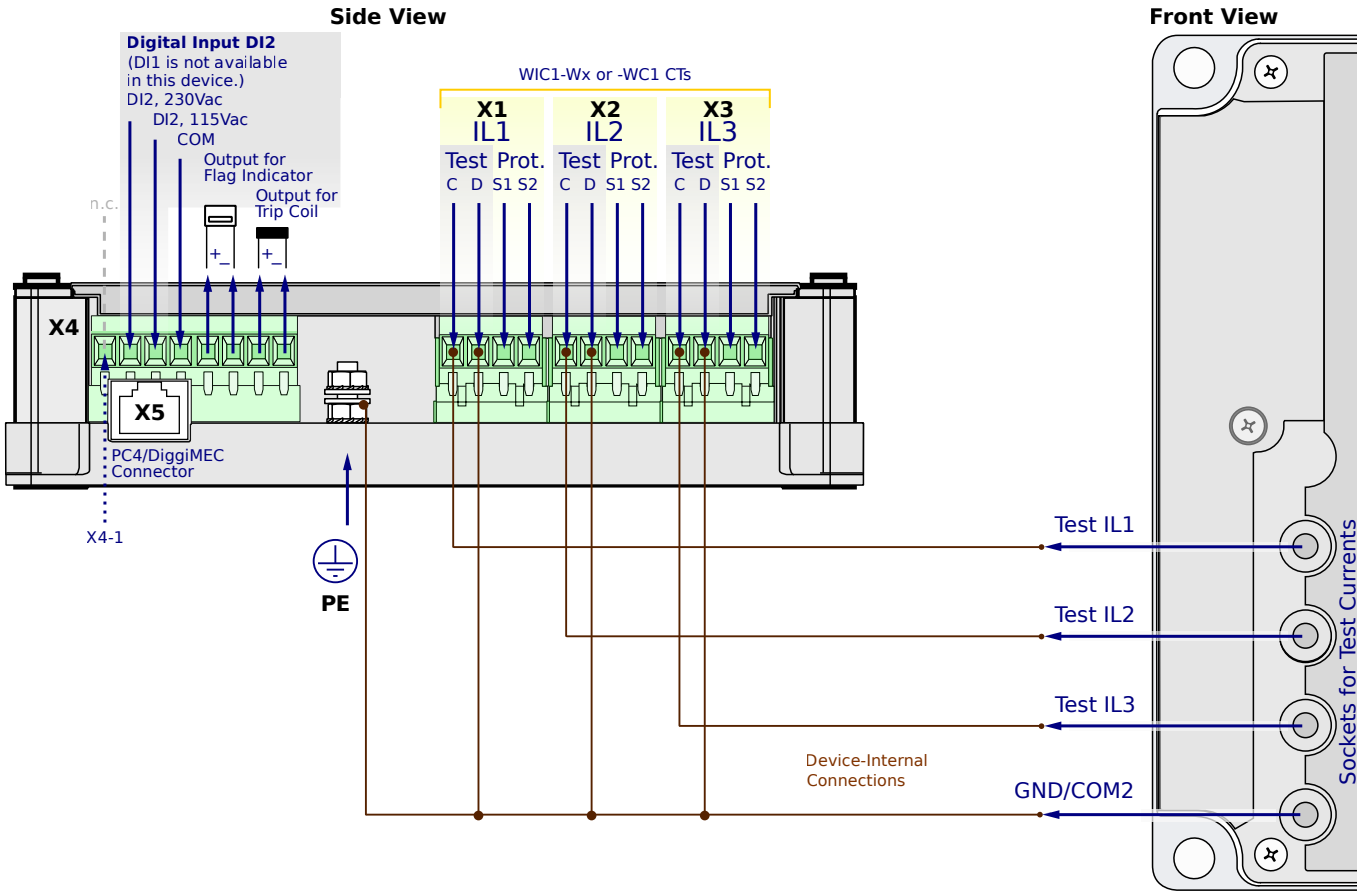


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2SA0

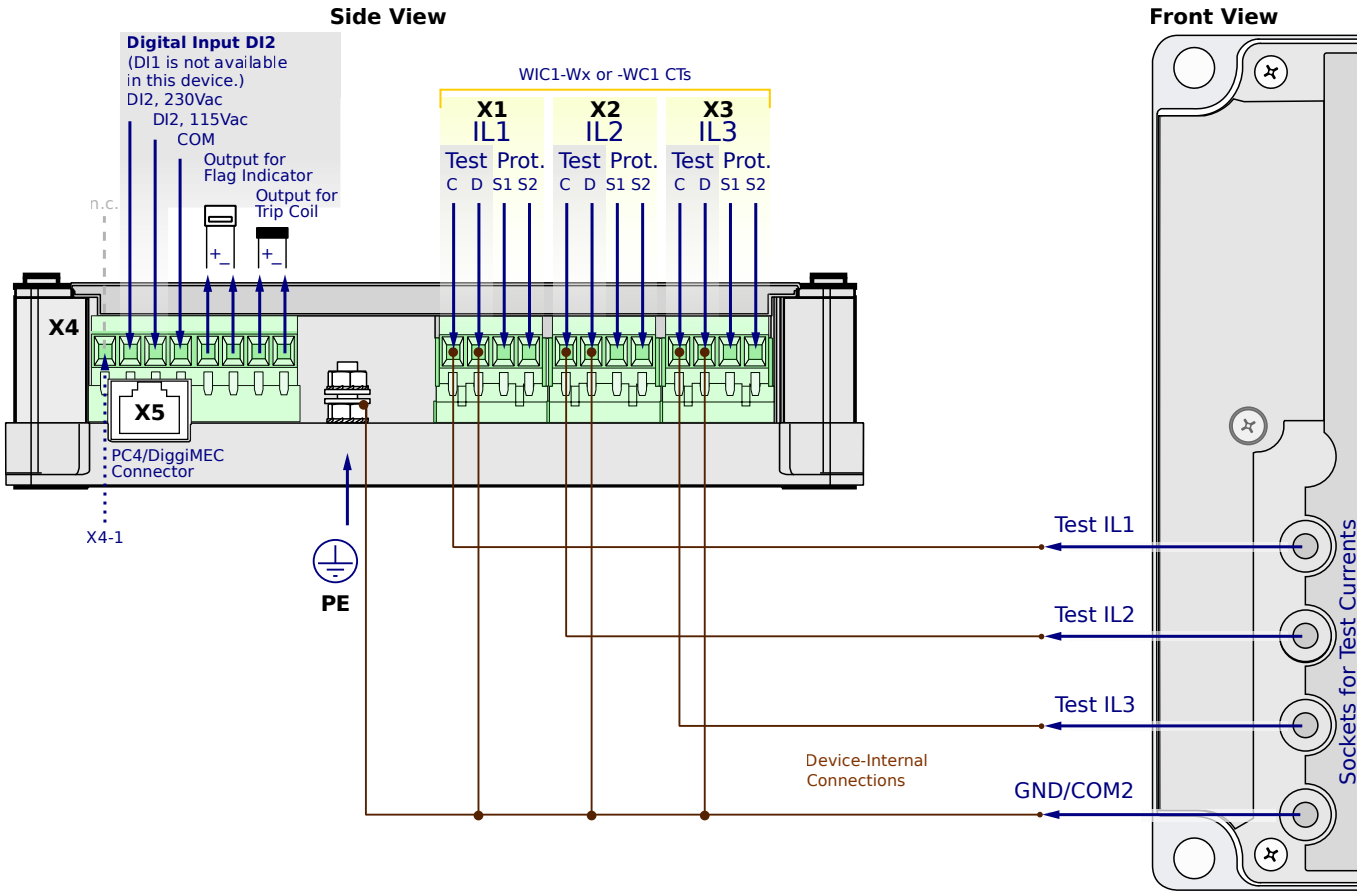


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2SAH

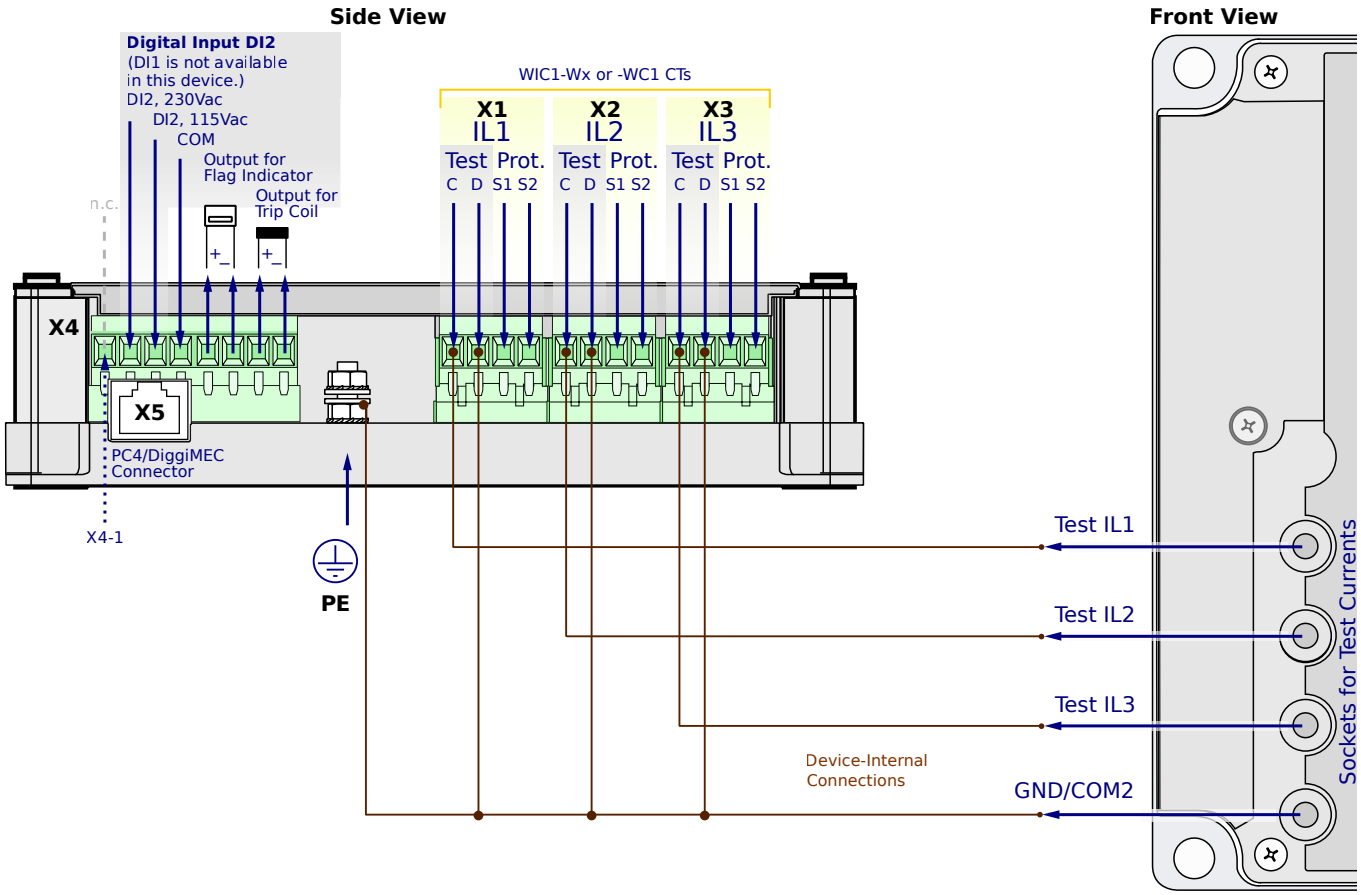


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2AA0

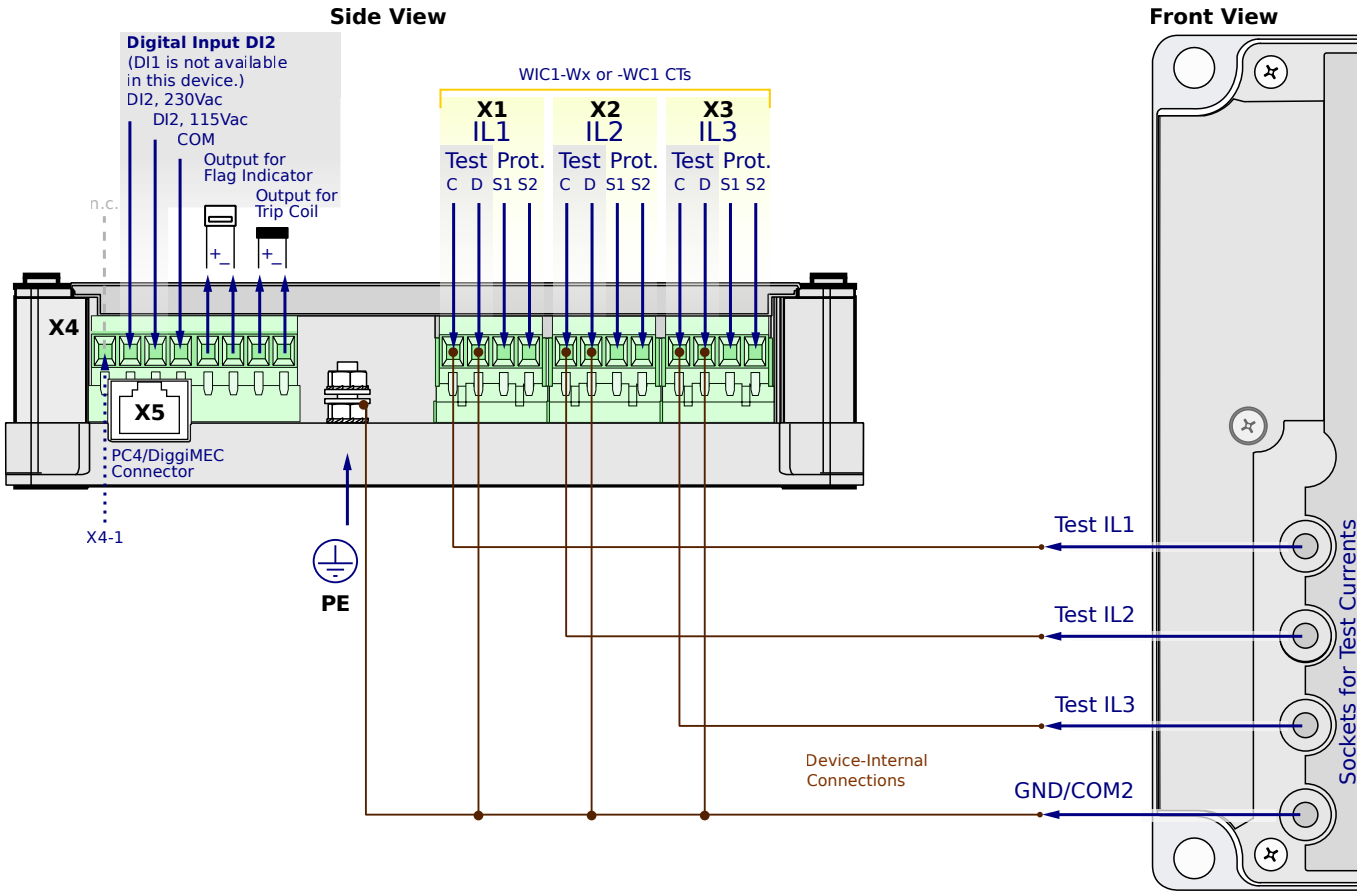


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2AAH

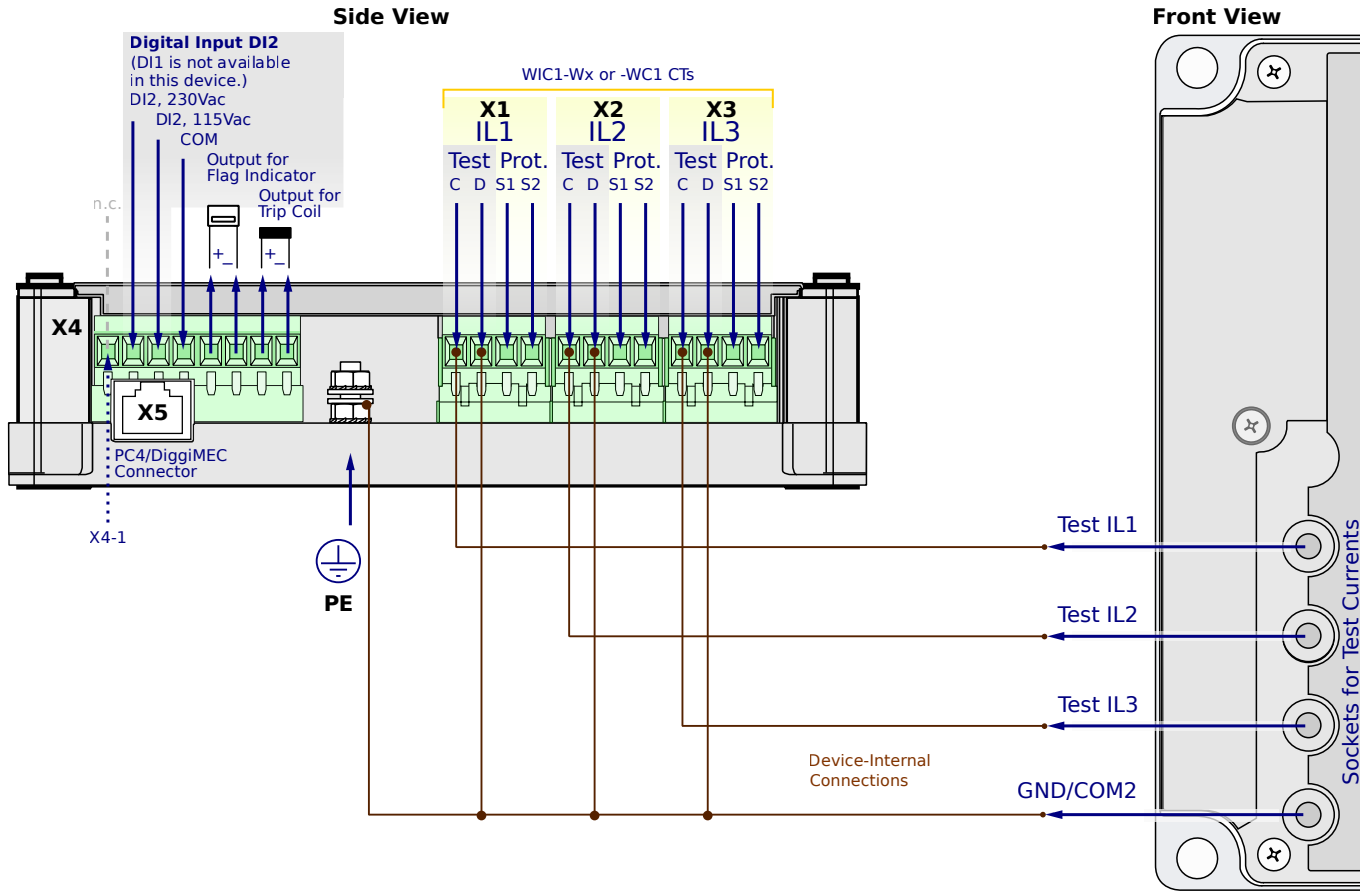


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2PA0

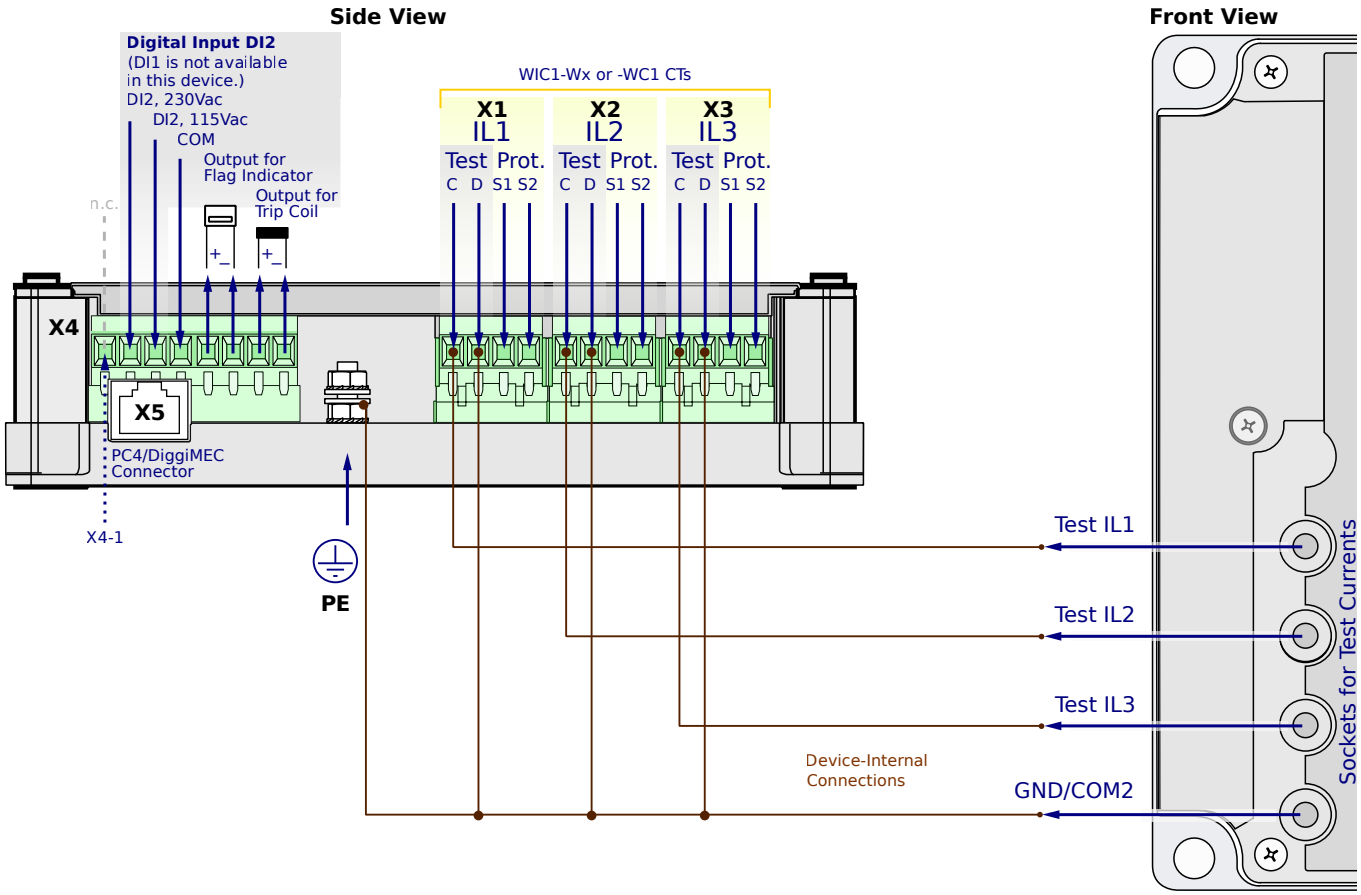


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN5CC2PAH

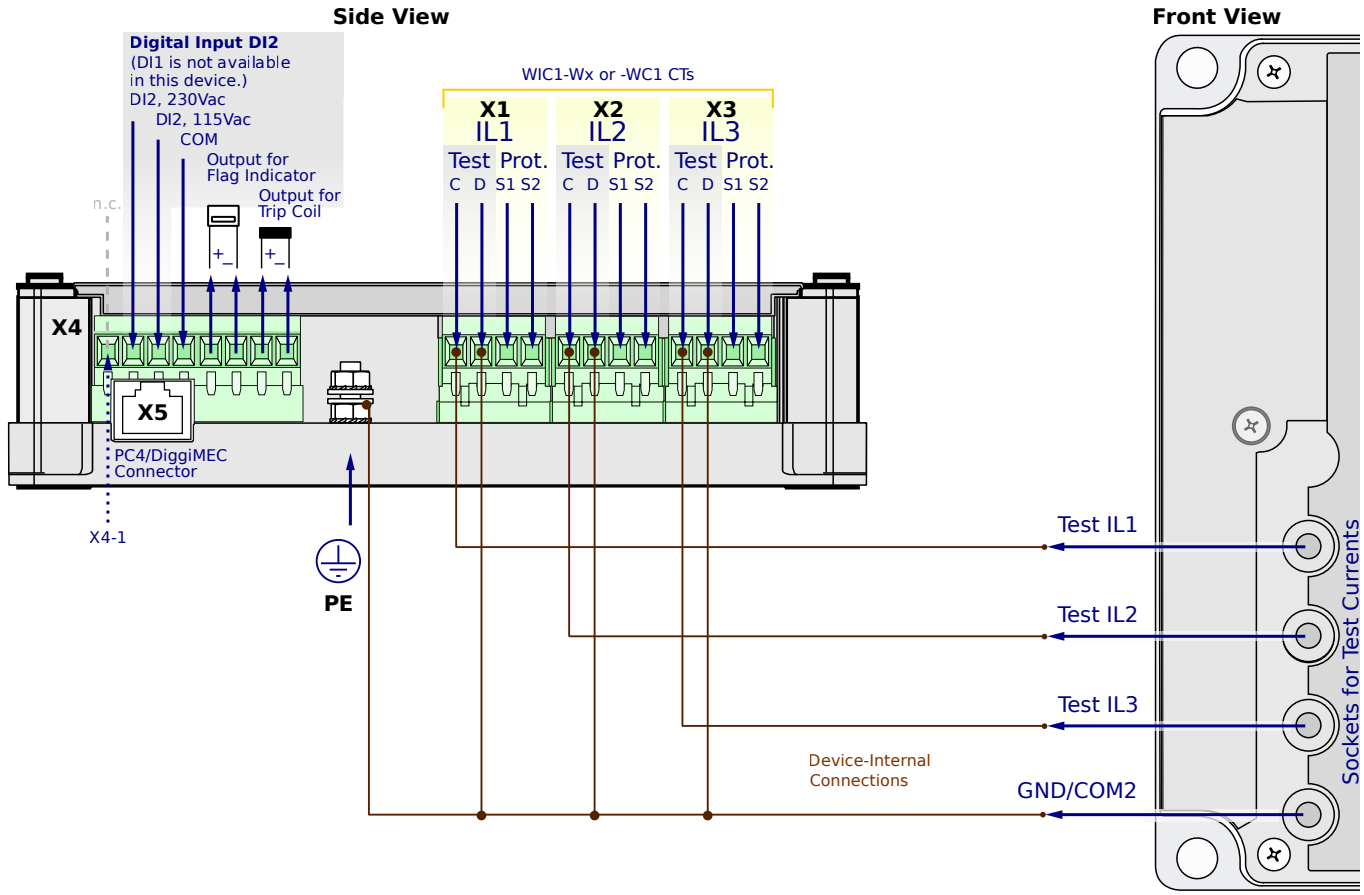


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0SA0

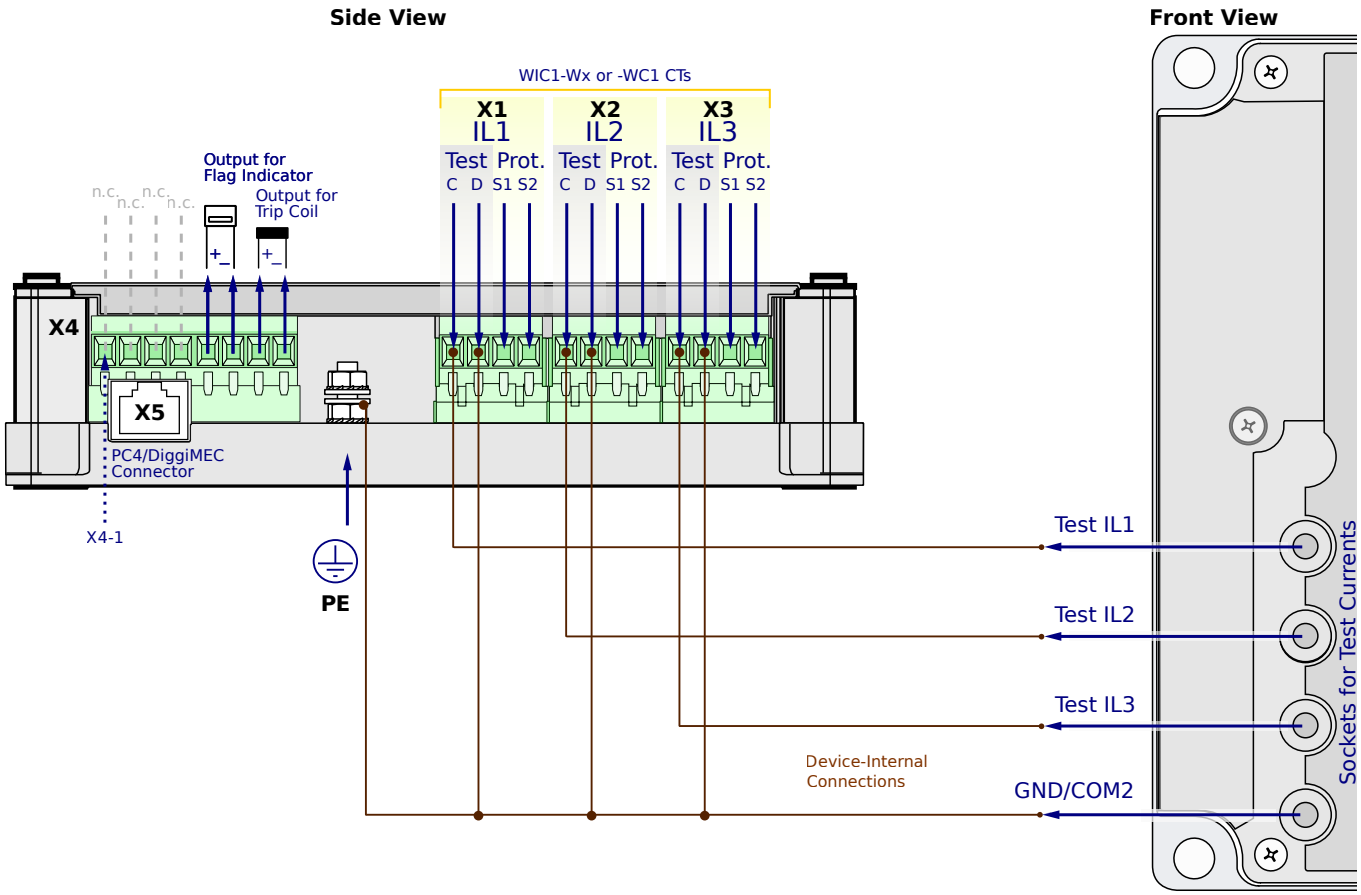


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0SAH

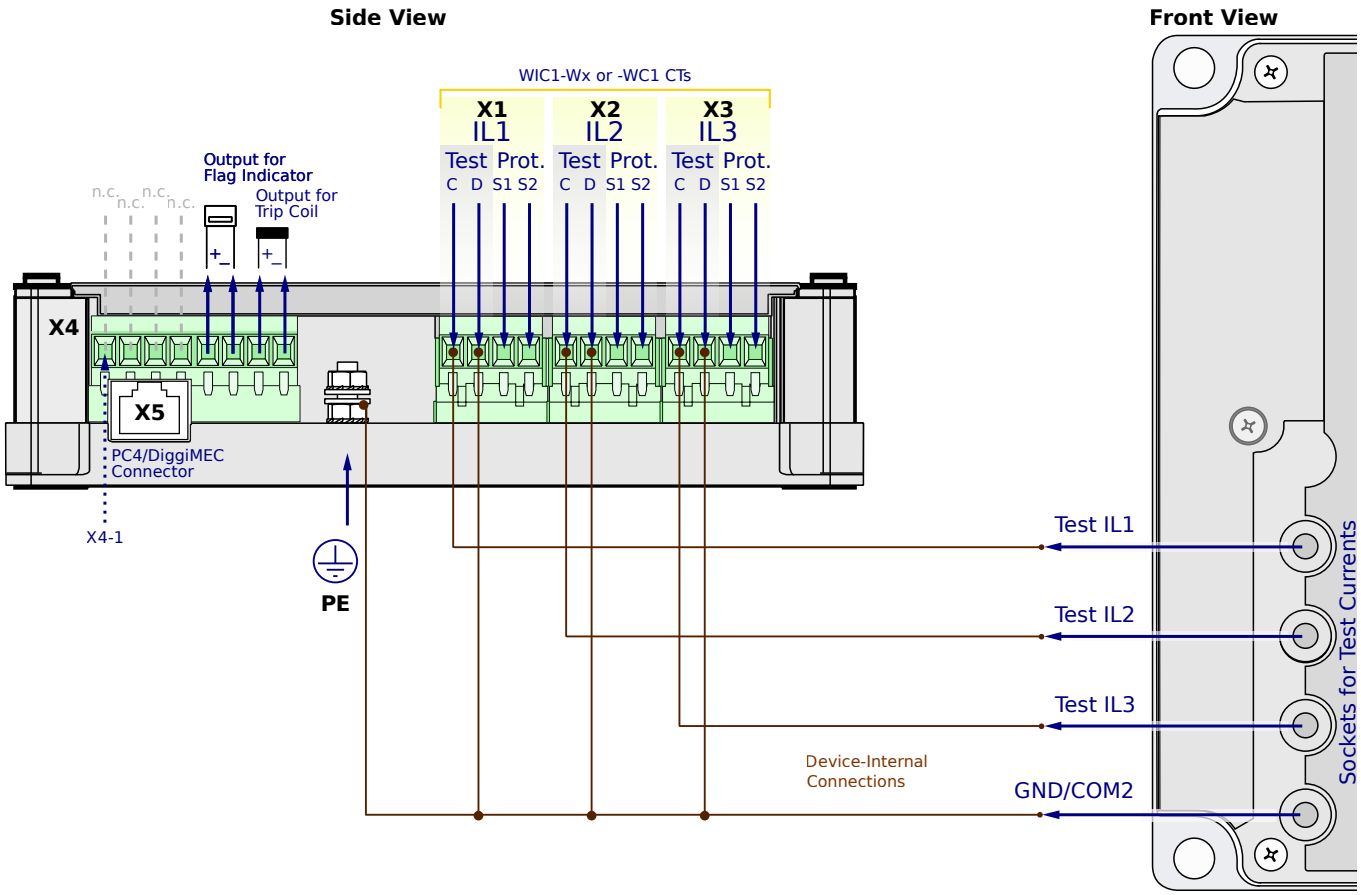


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0AA0

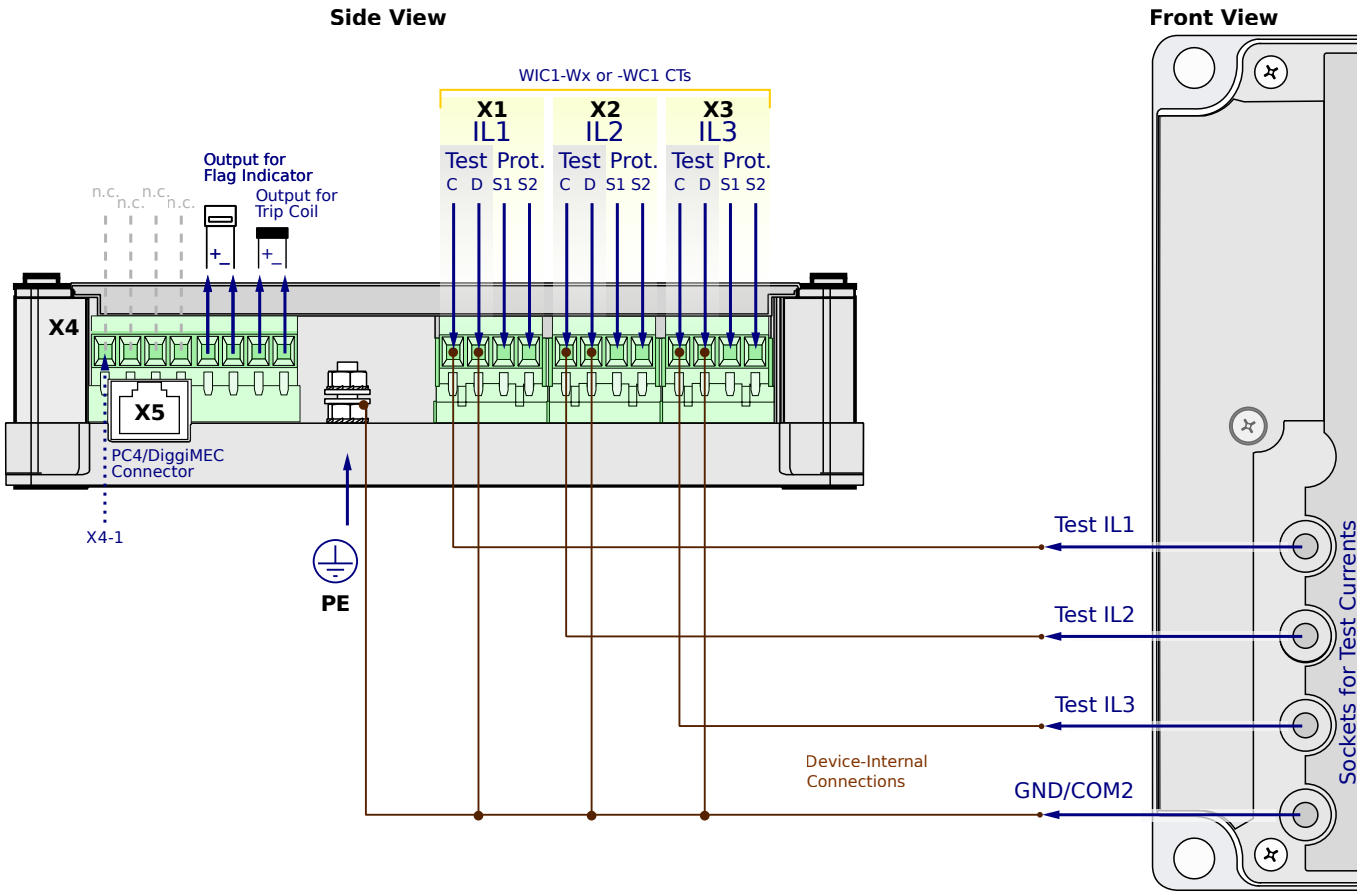


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0AAH

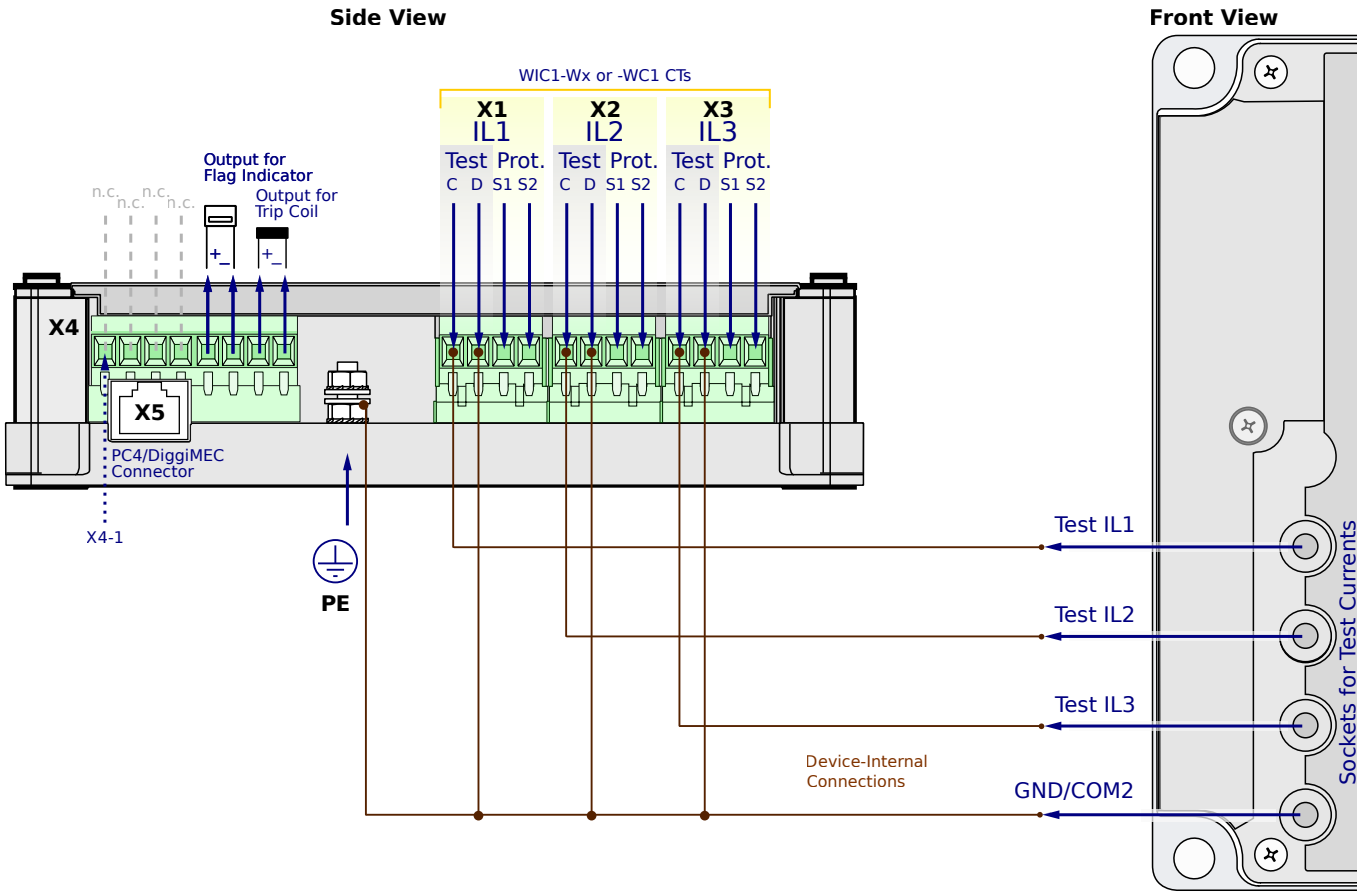


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0PA0

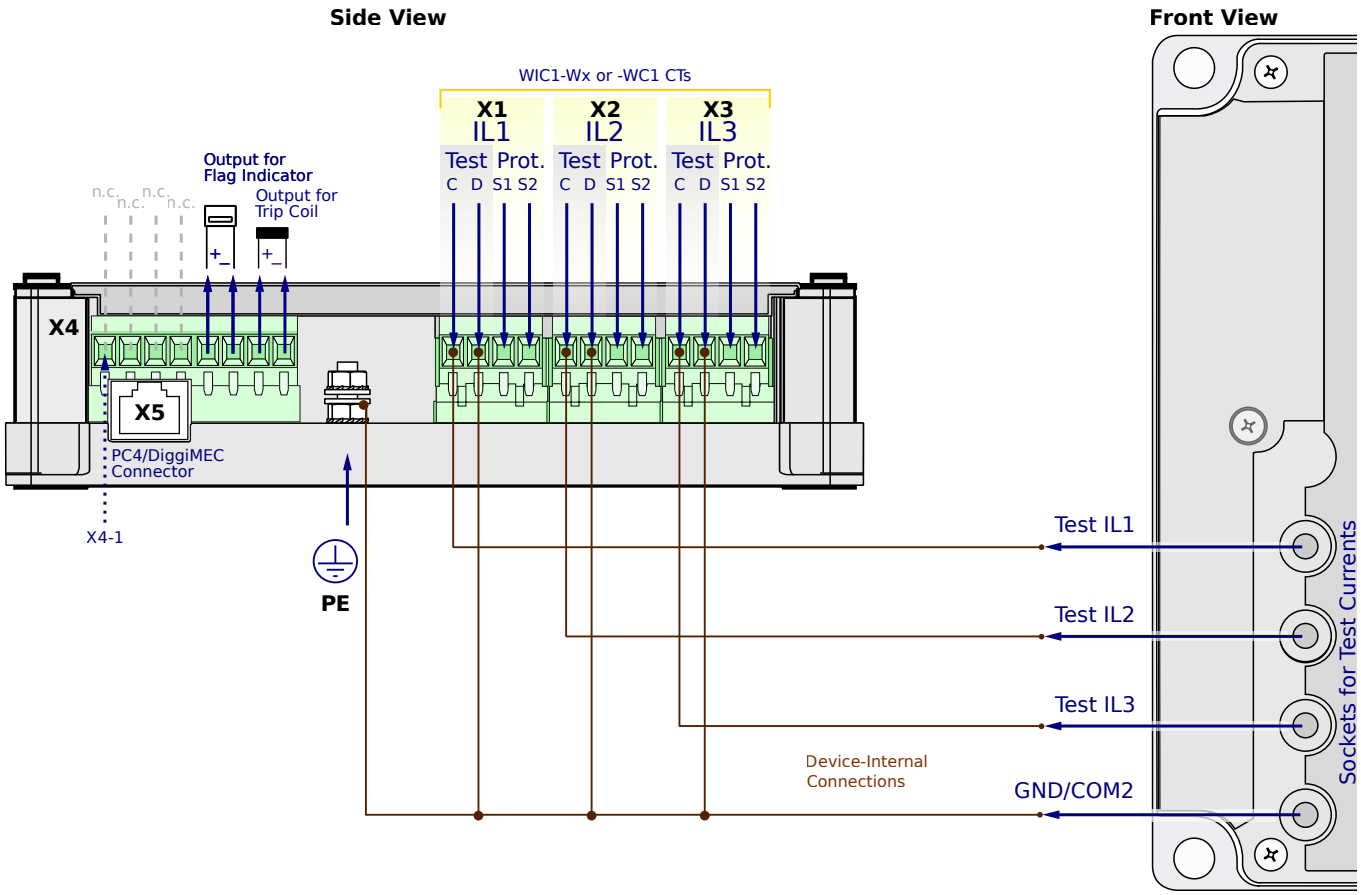


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN0PAH

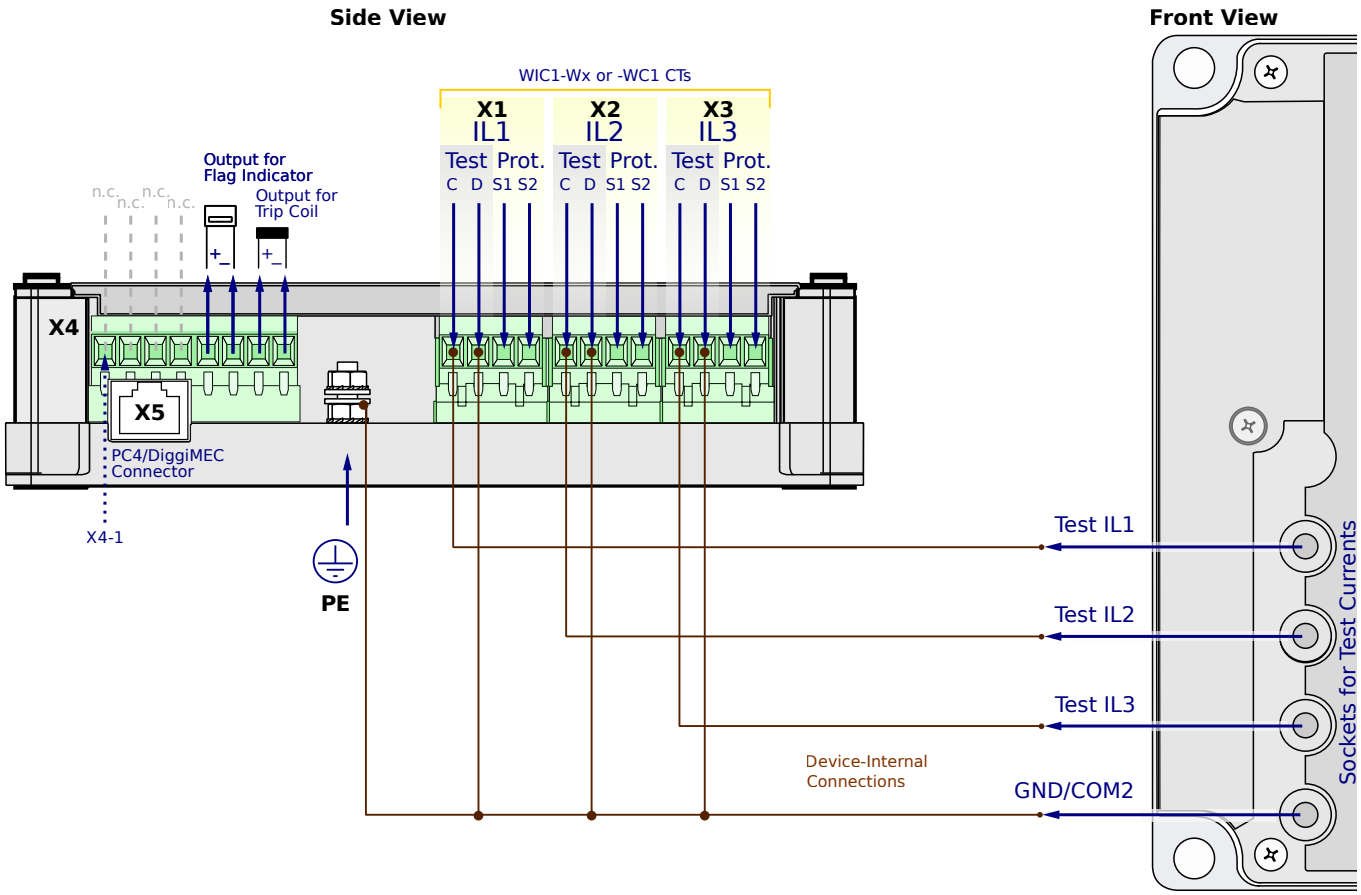


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1SA0

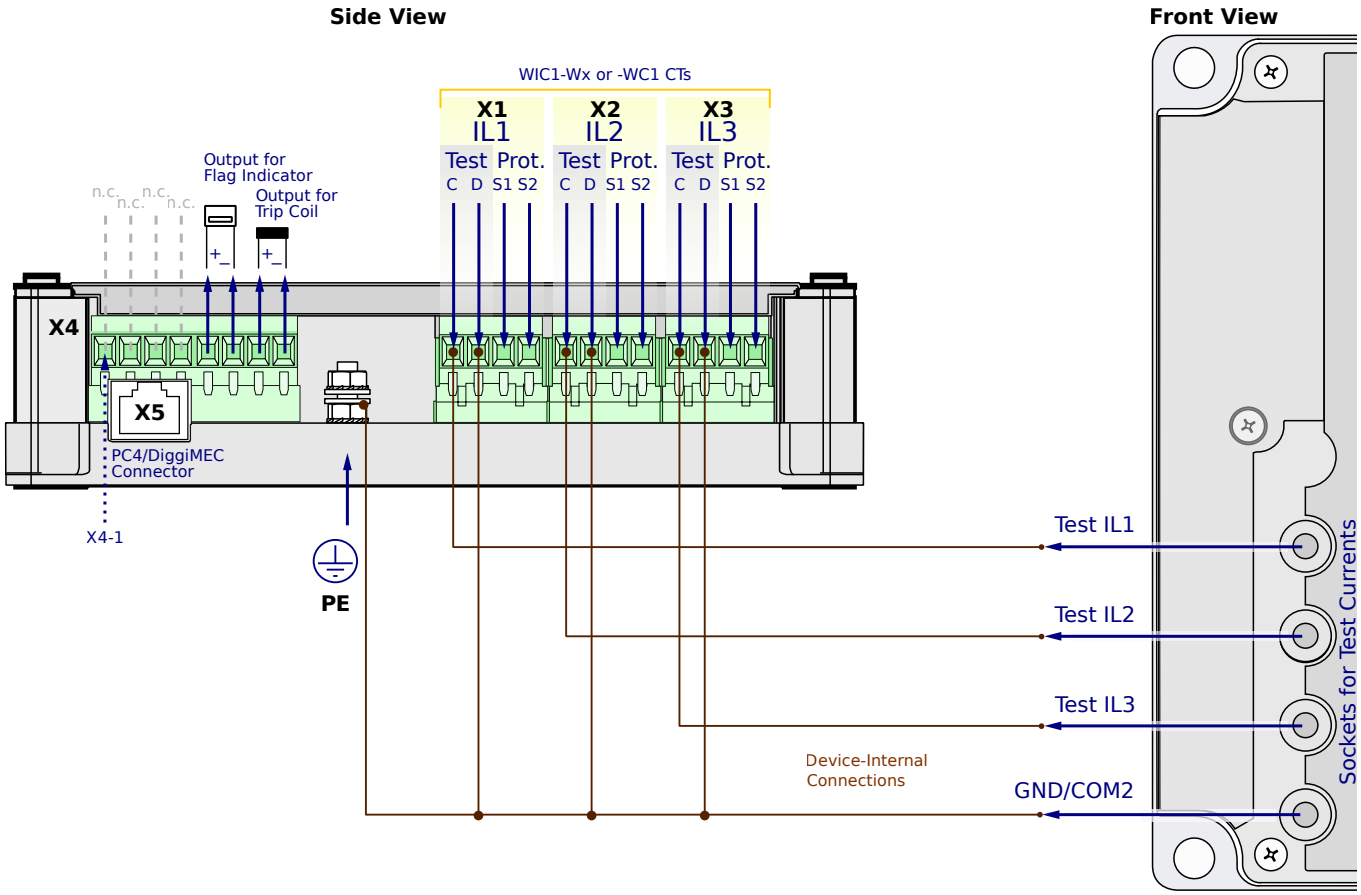


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1SAH

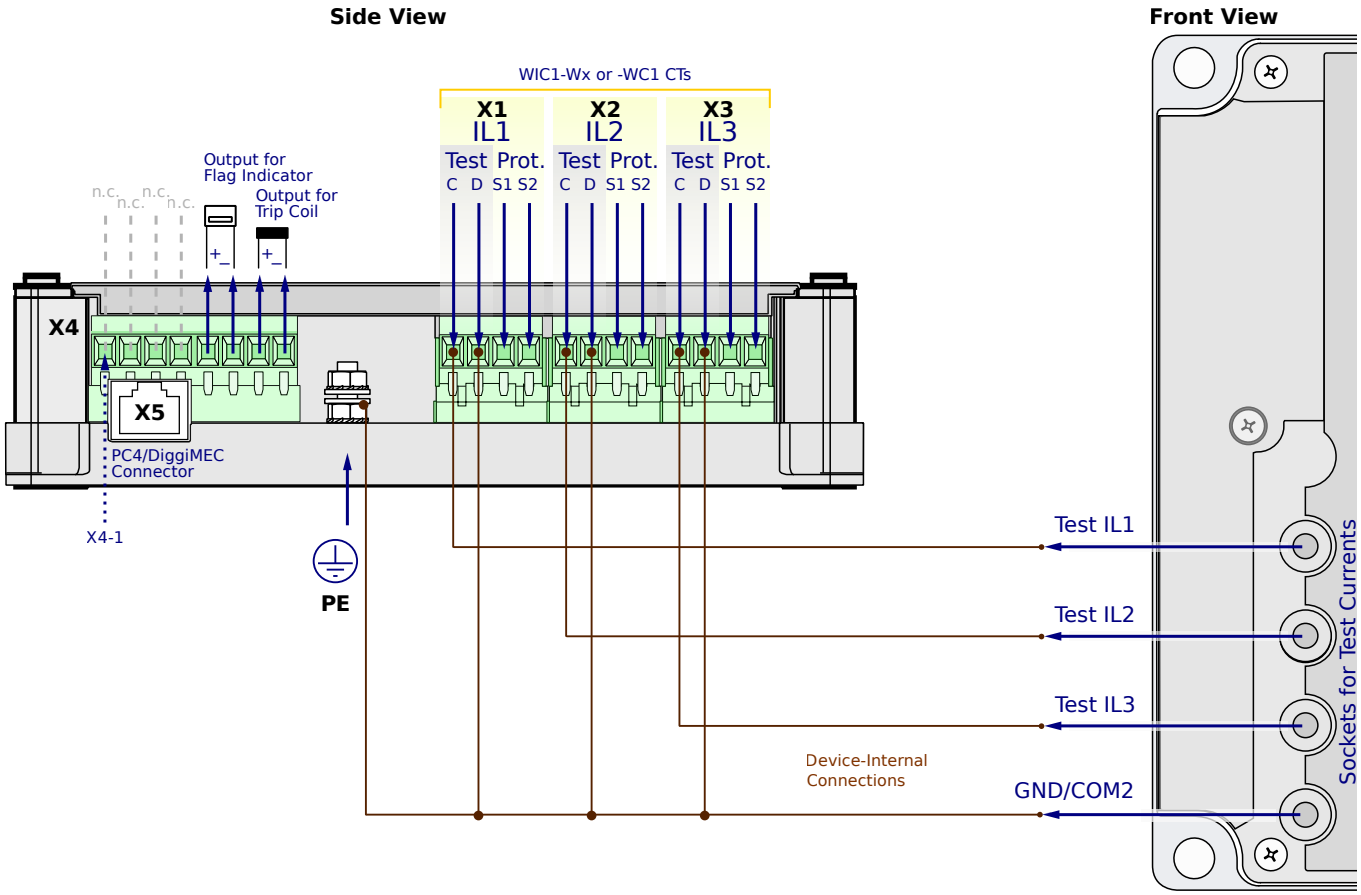


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1AA0

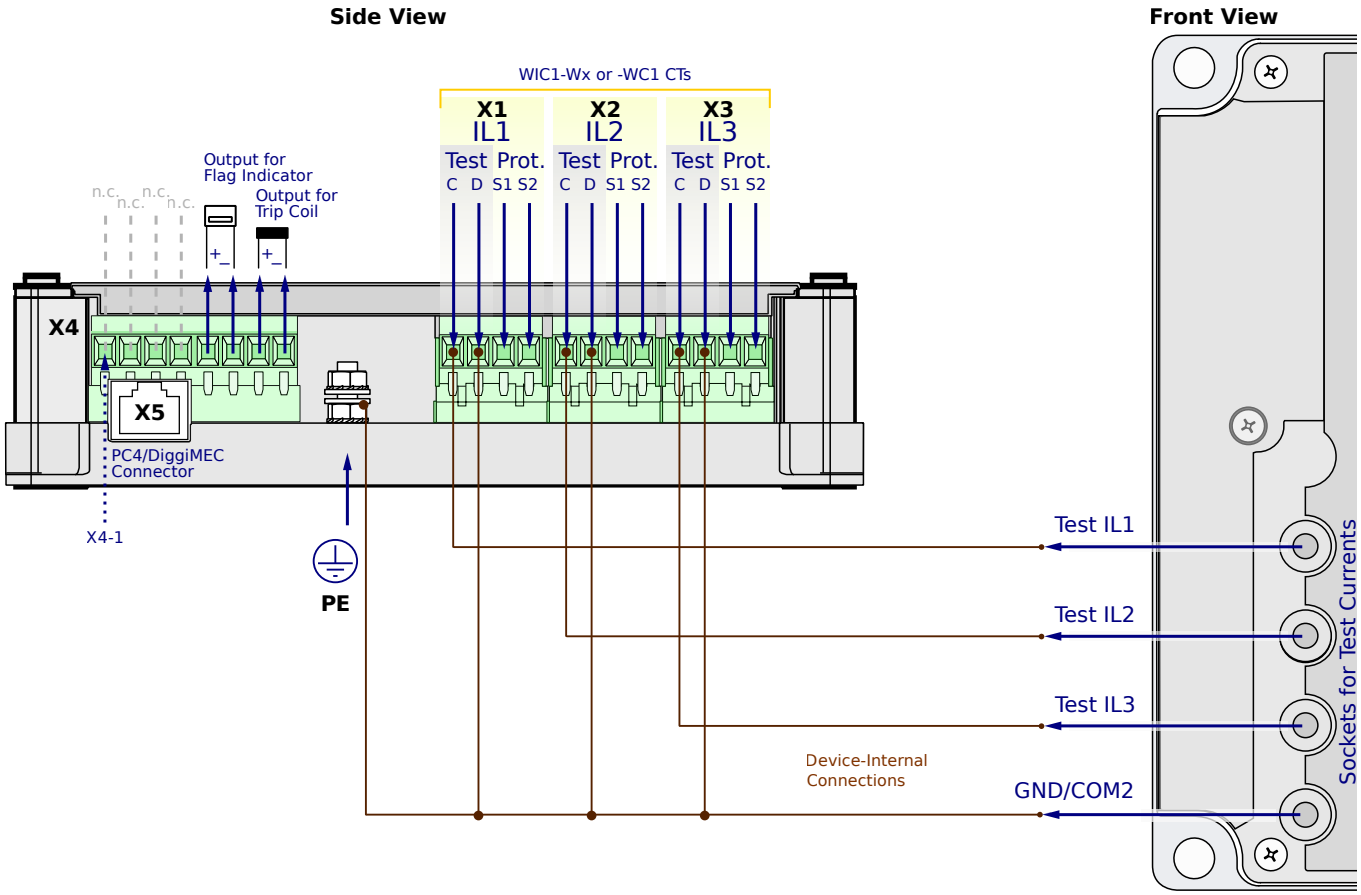


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1AAH

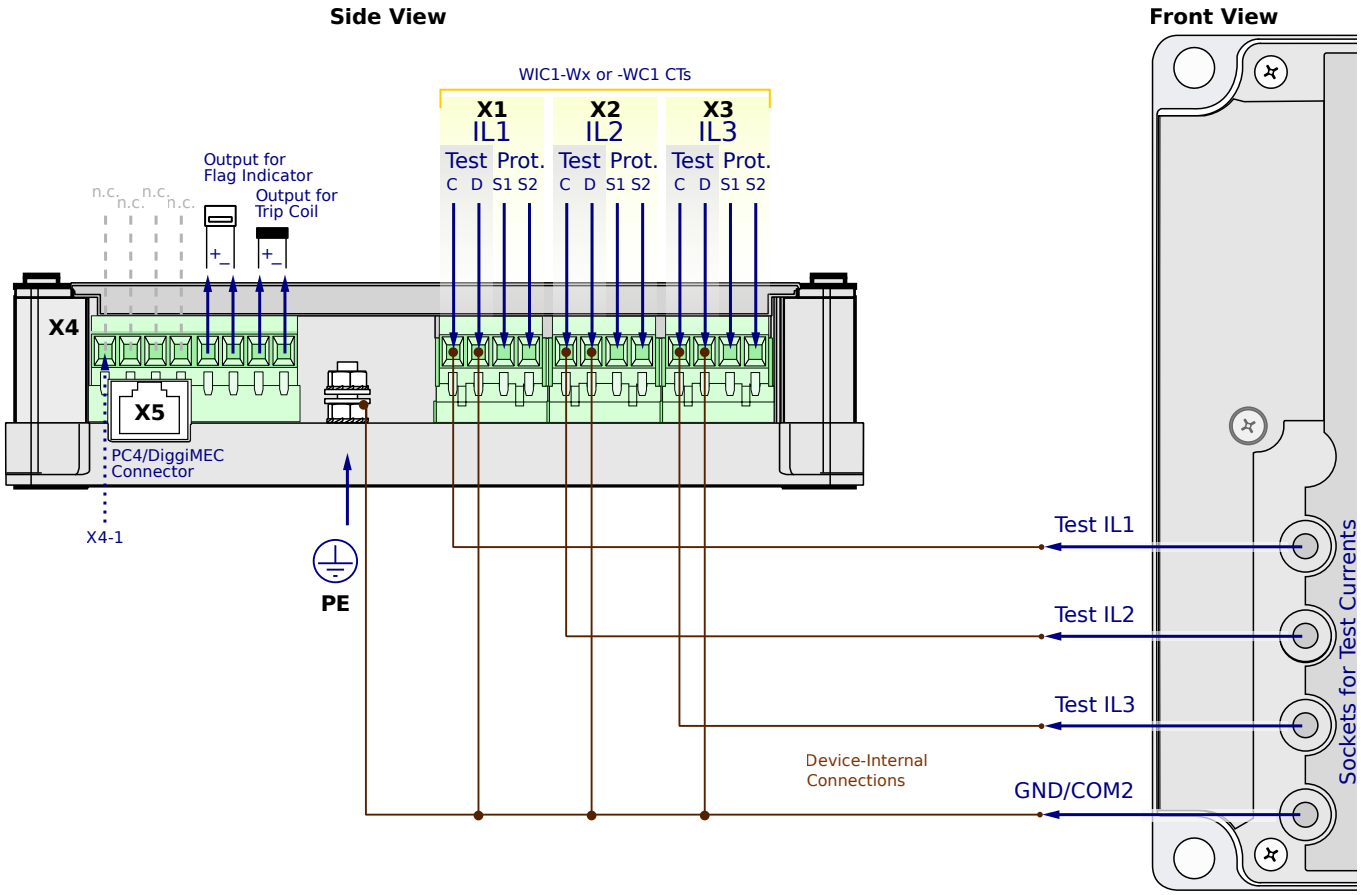


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1PA0

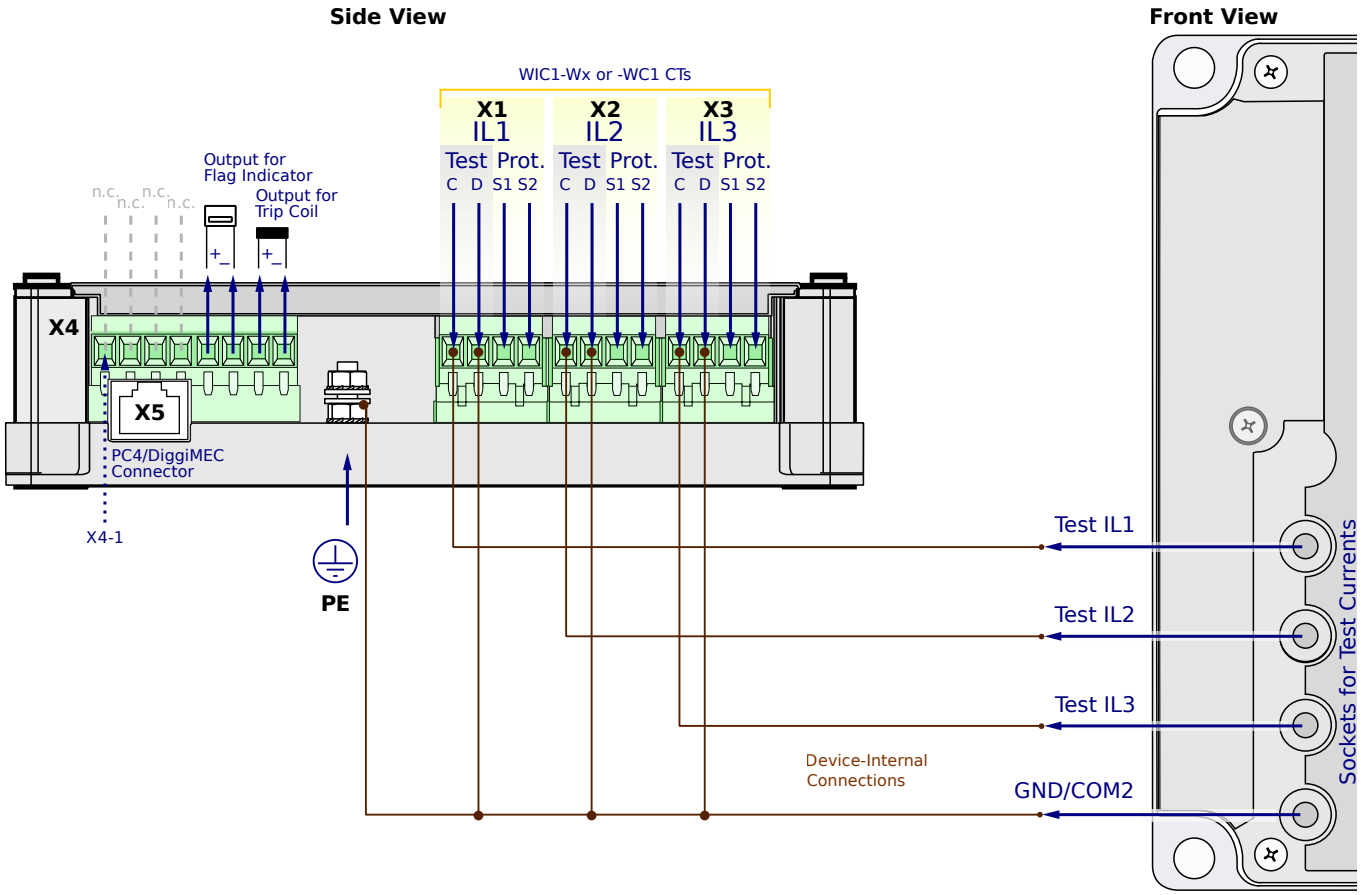


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN1PAH

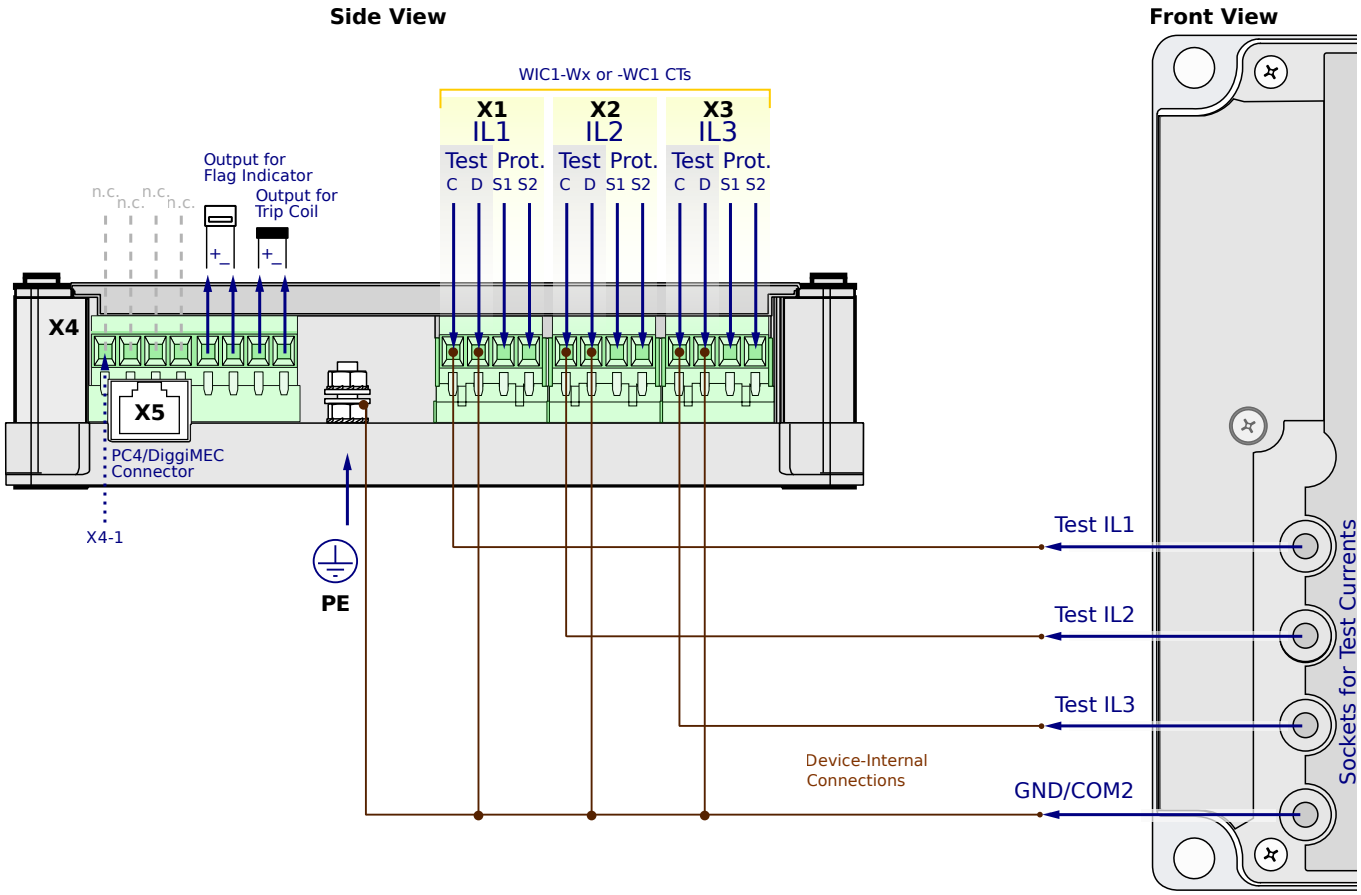


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2SA0

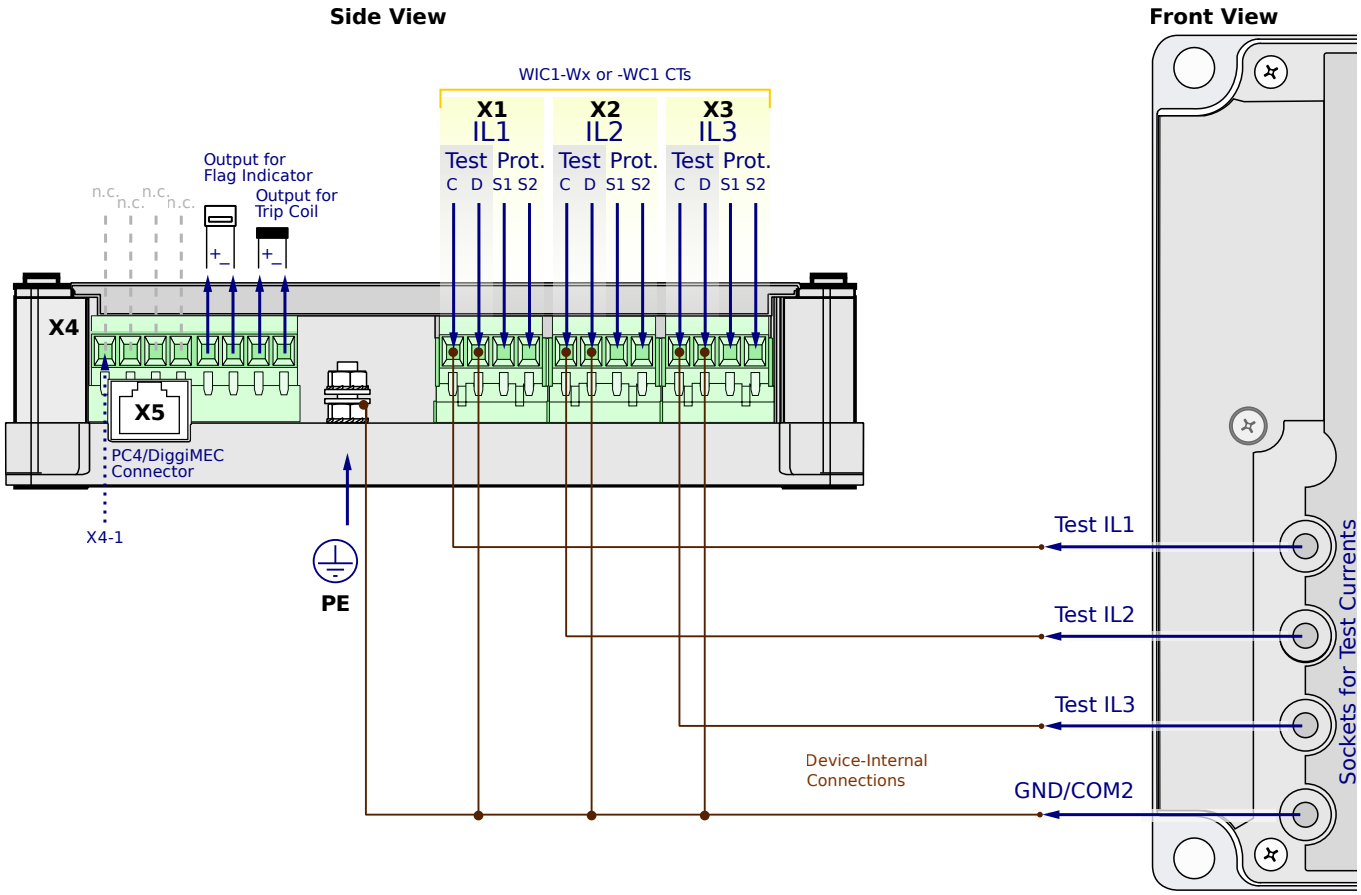


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2SAH

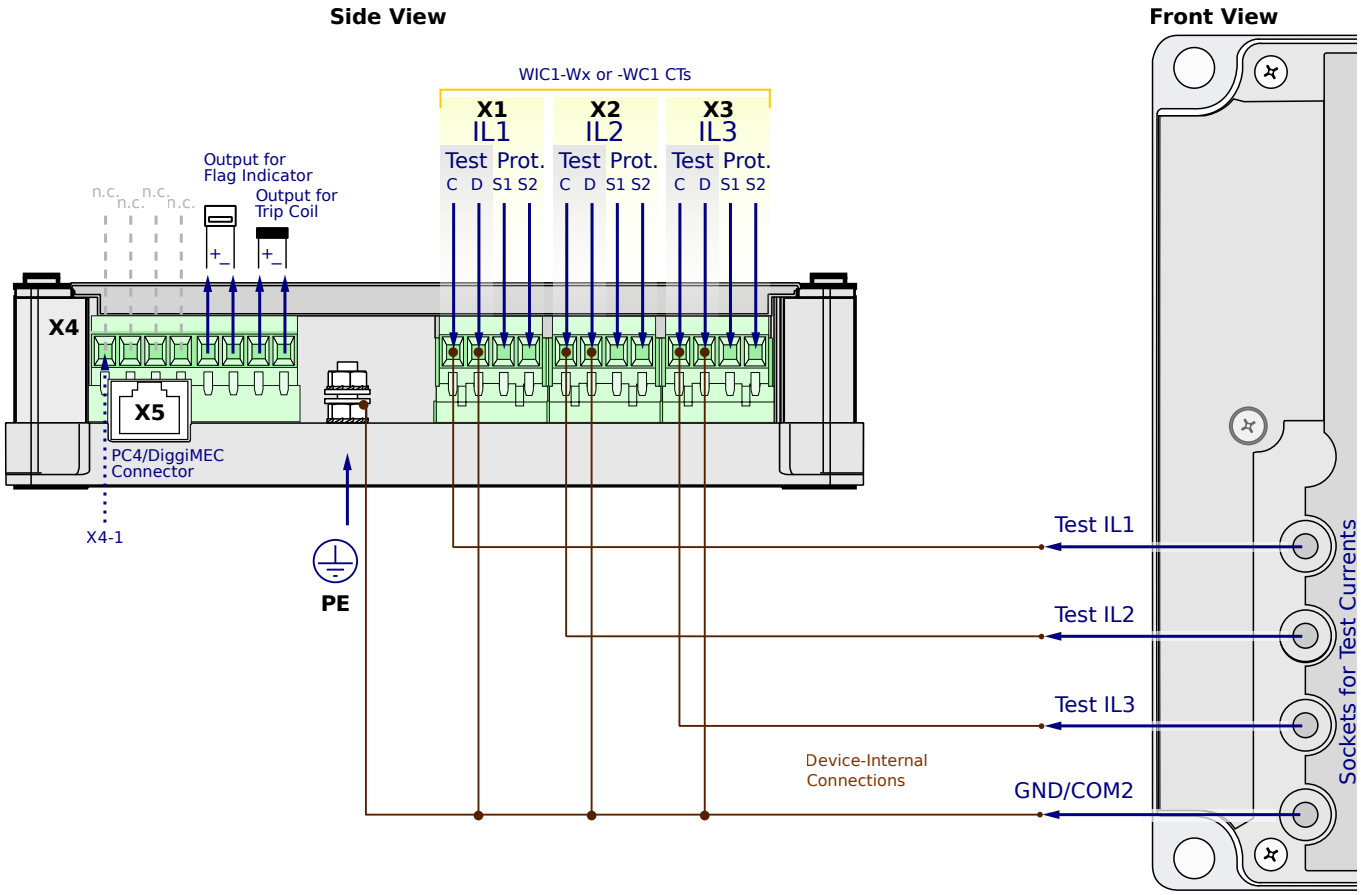


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2AA0

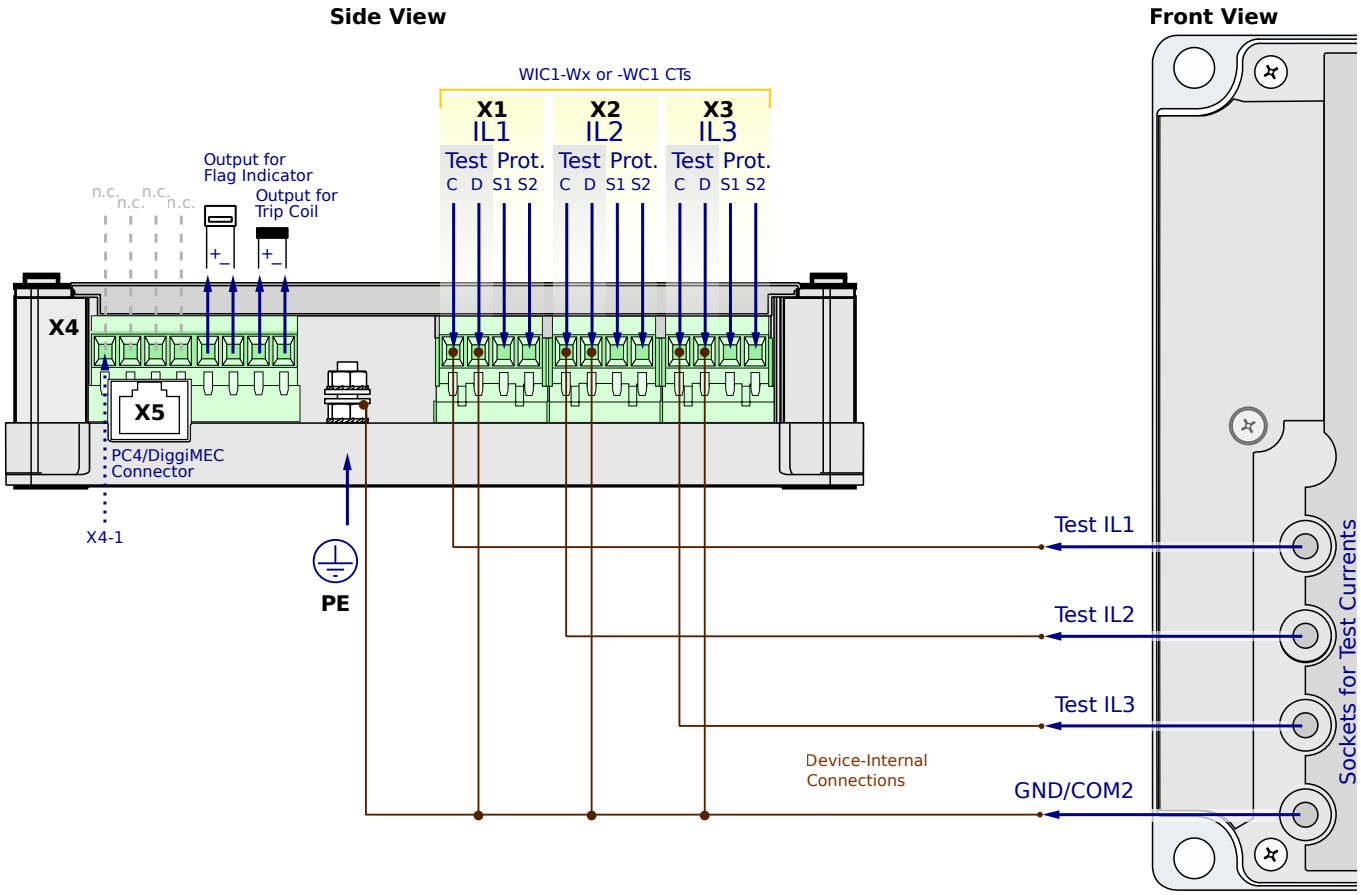


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2AAH

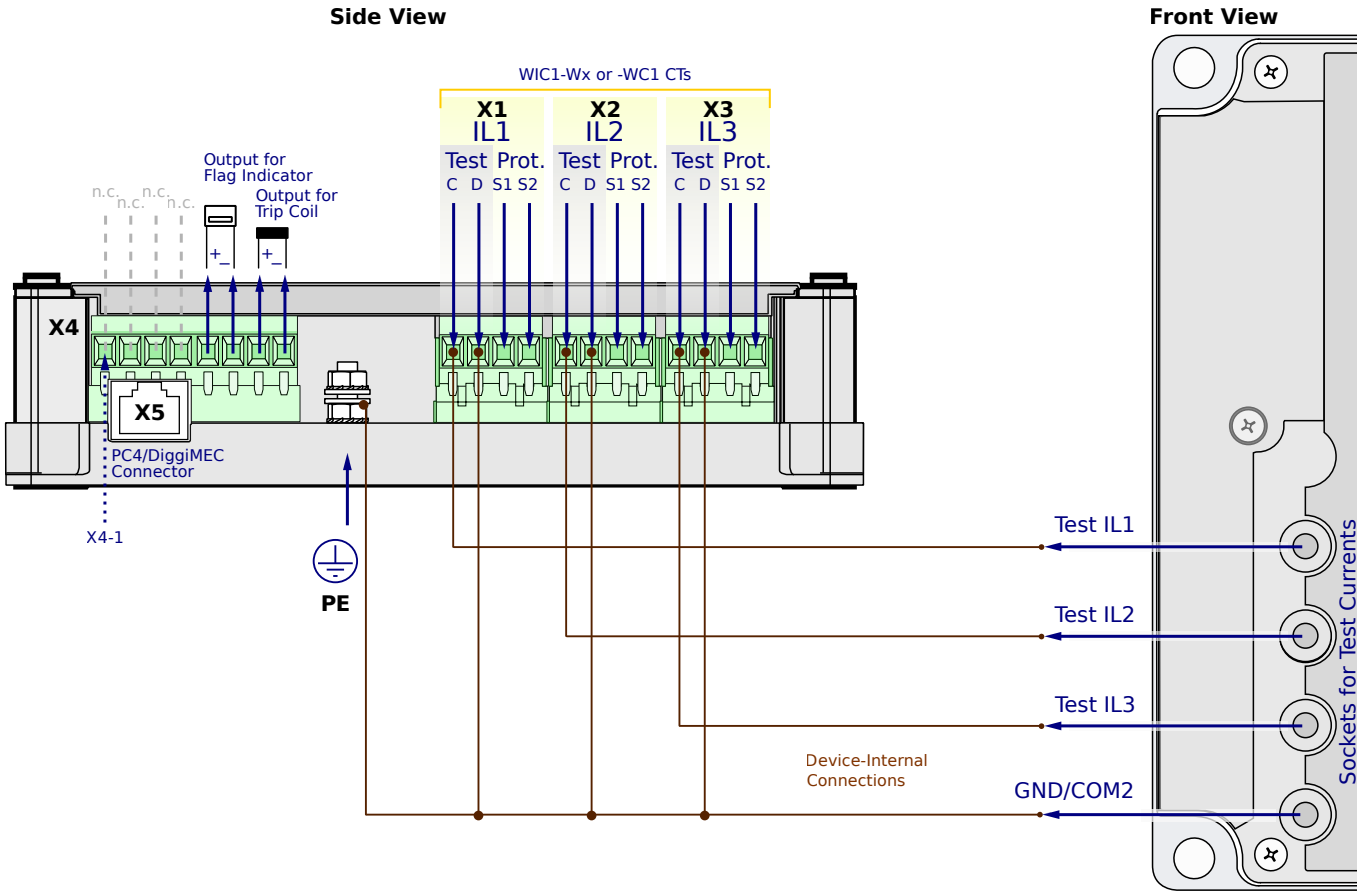


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2PA0

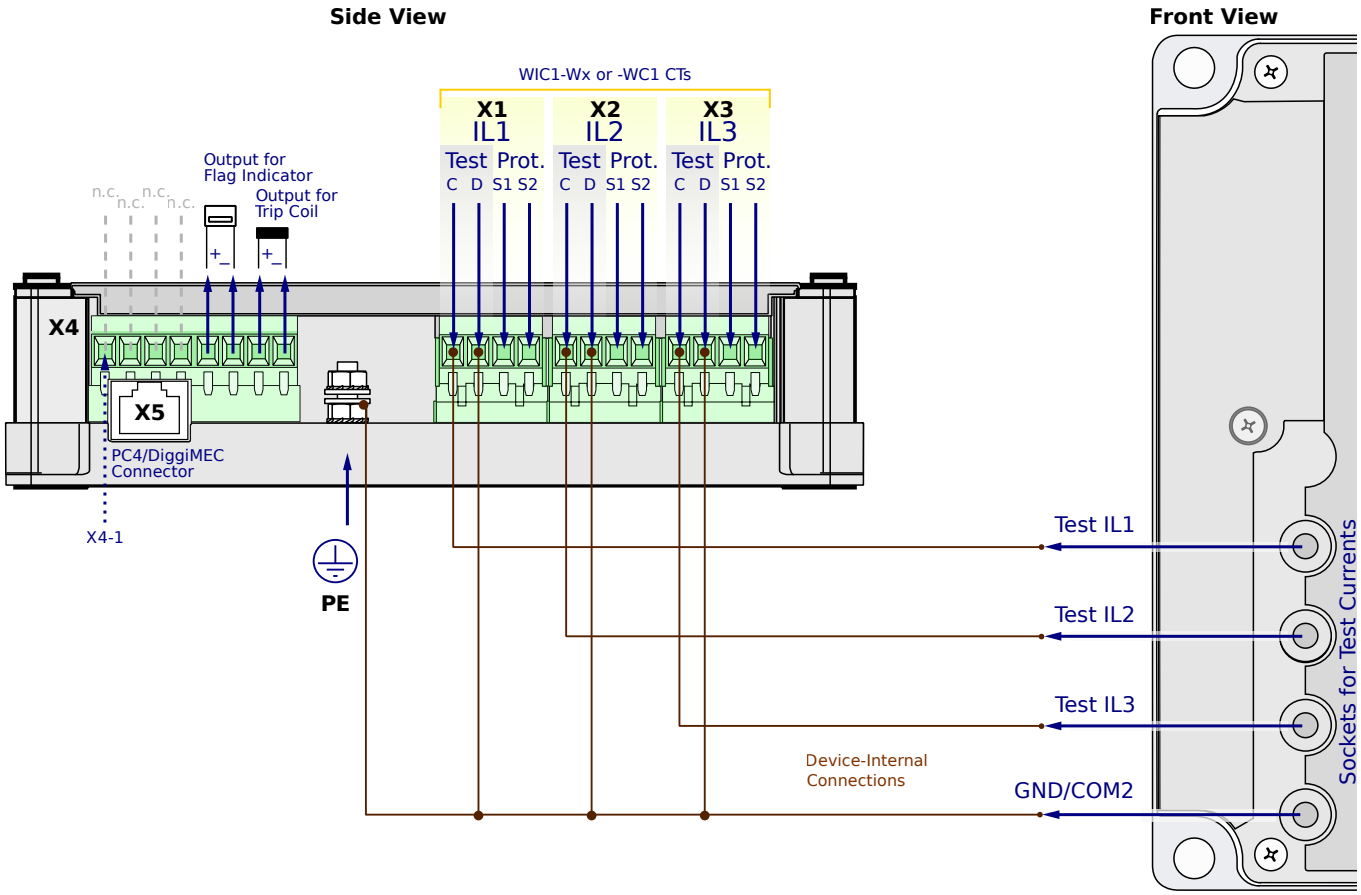


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NN2PAH

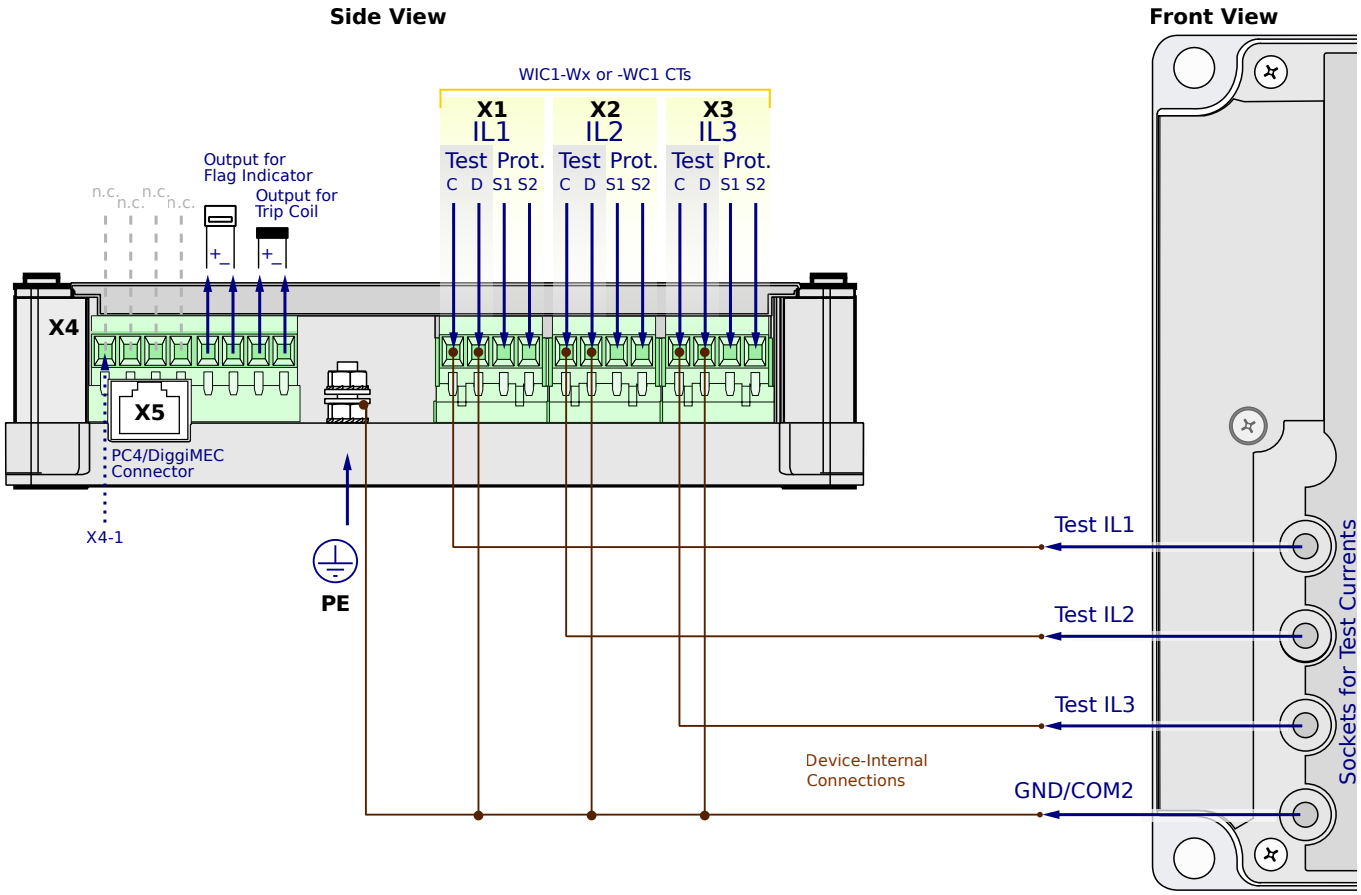


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0SA0

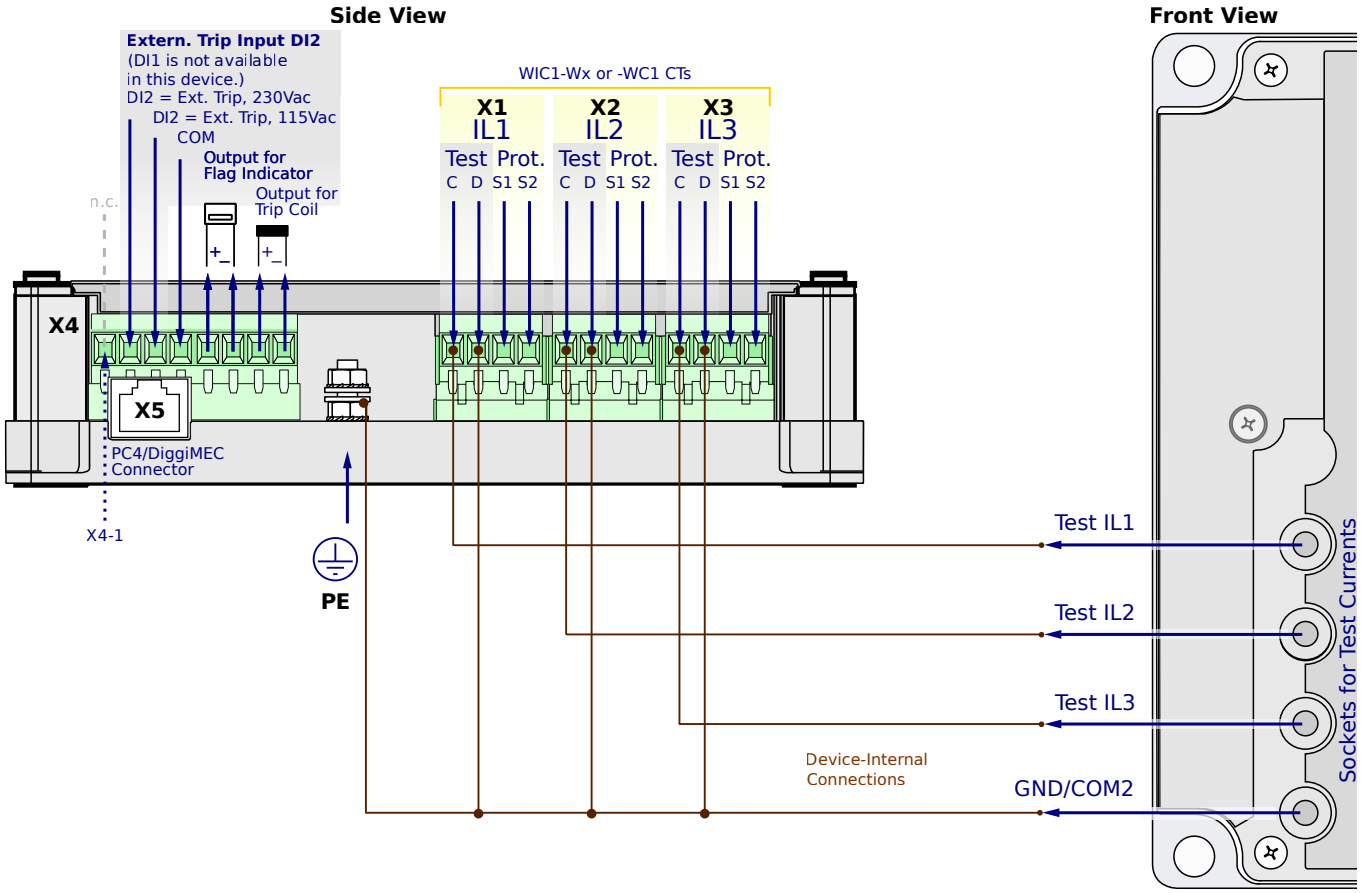


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0SAH

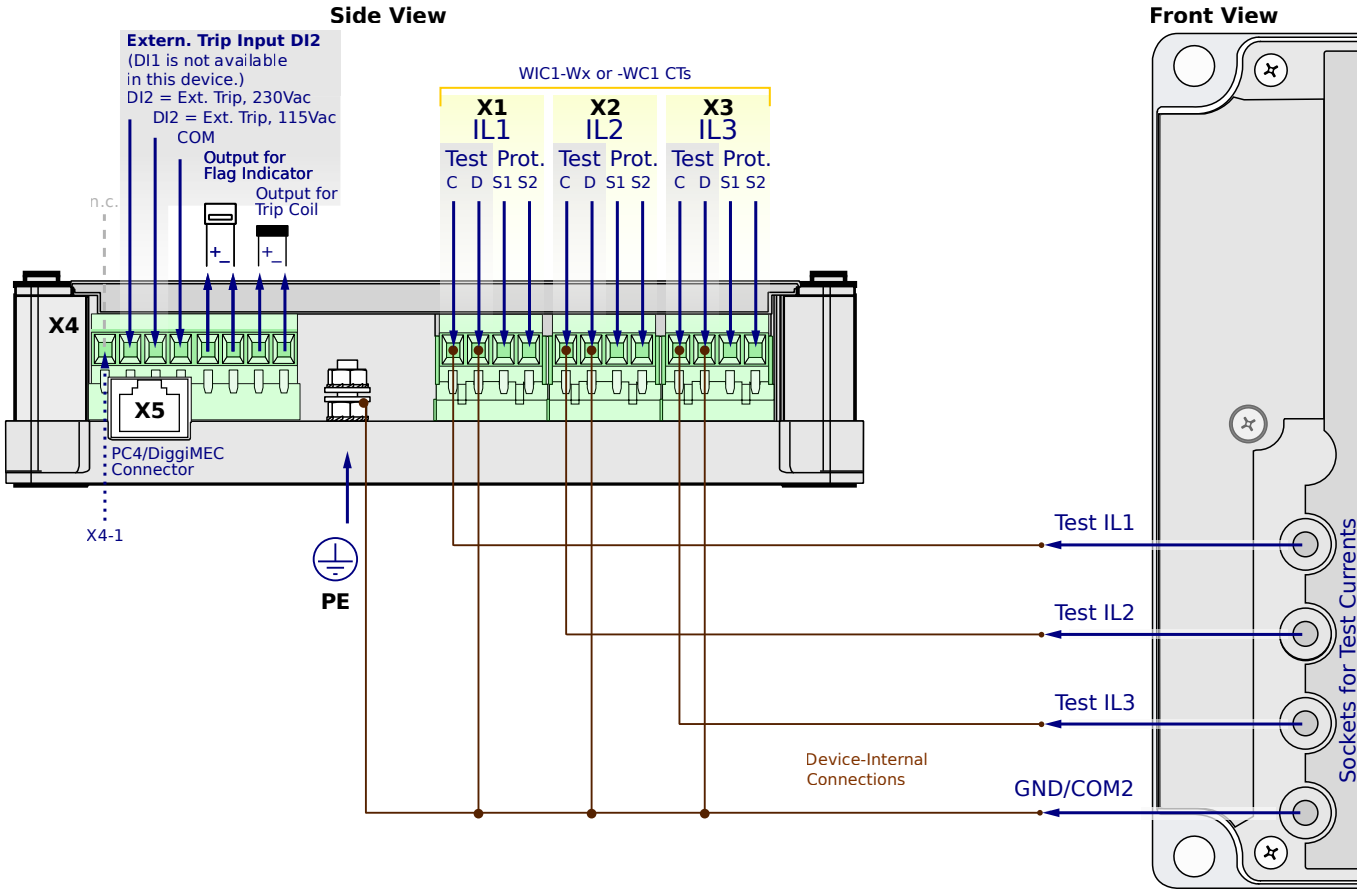


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0AA0

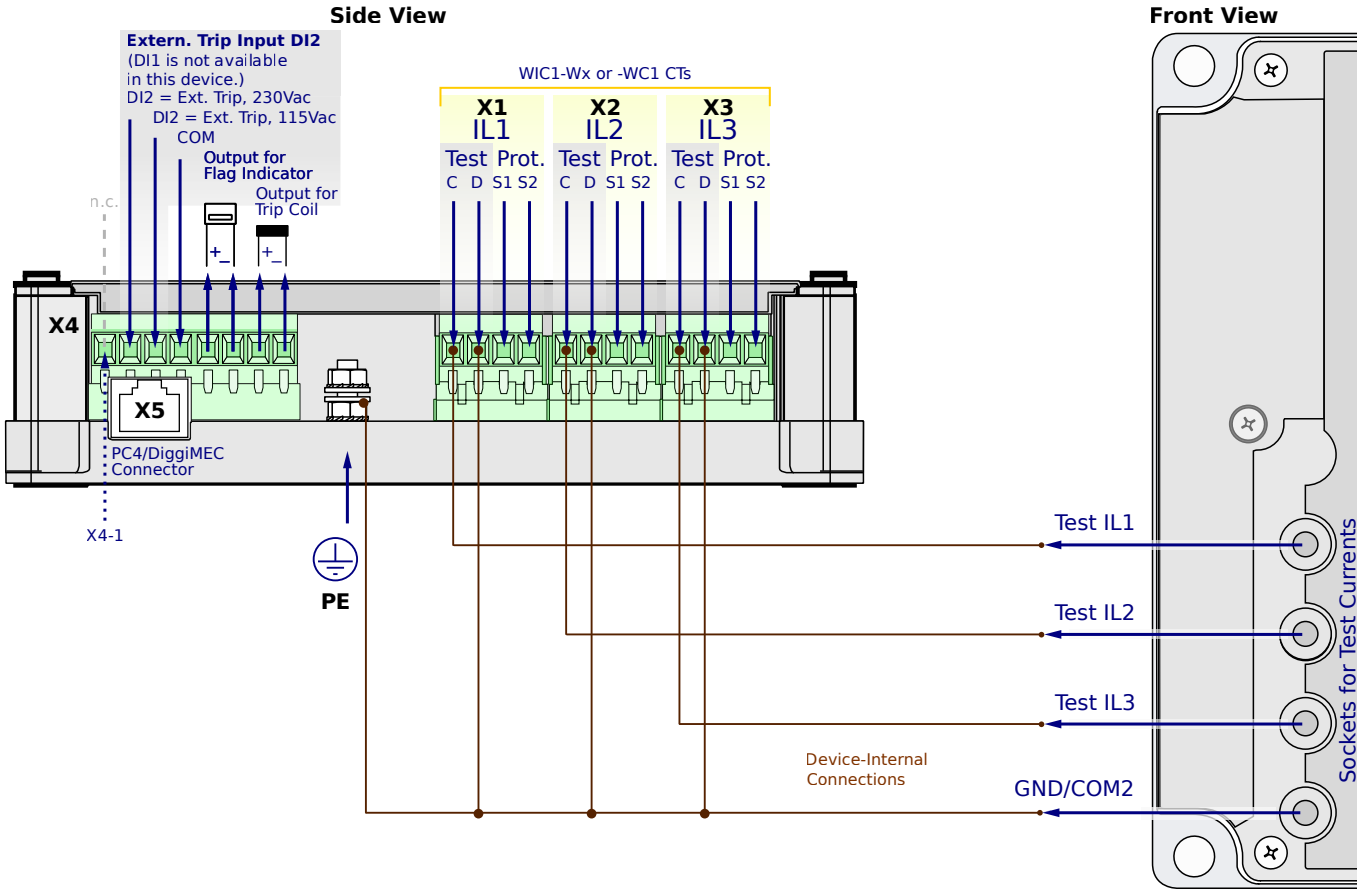


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0AAH

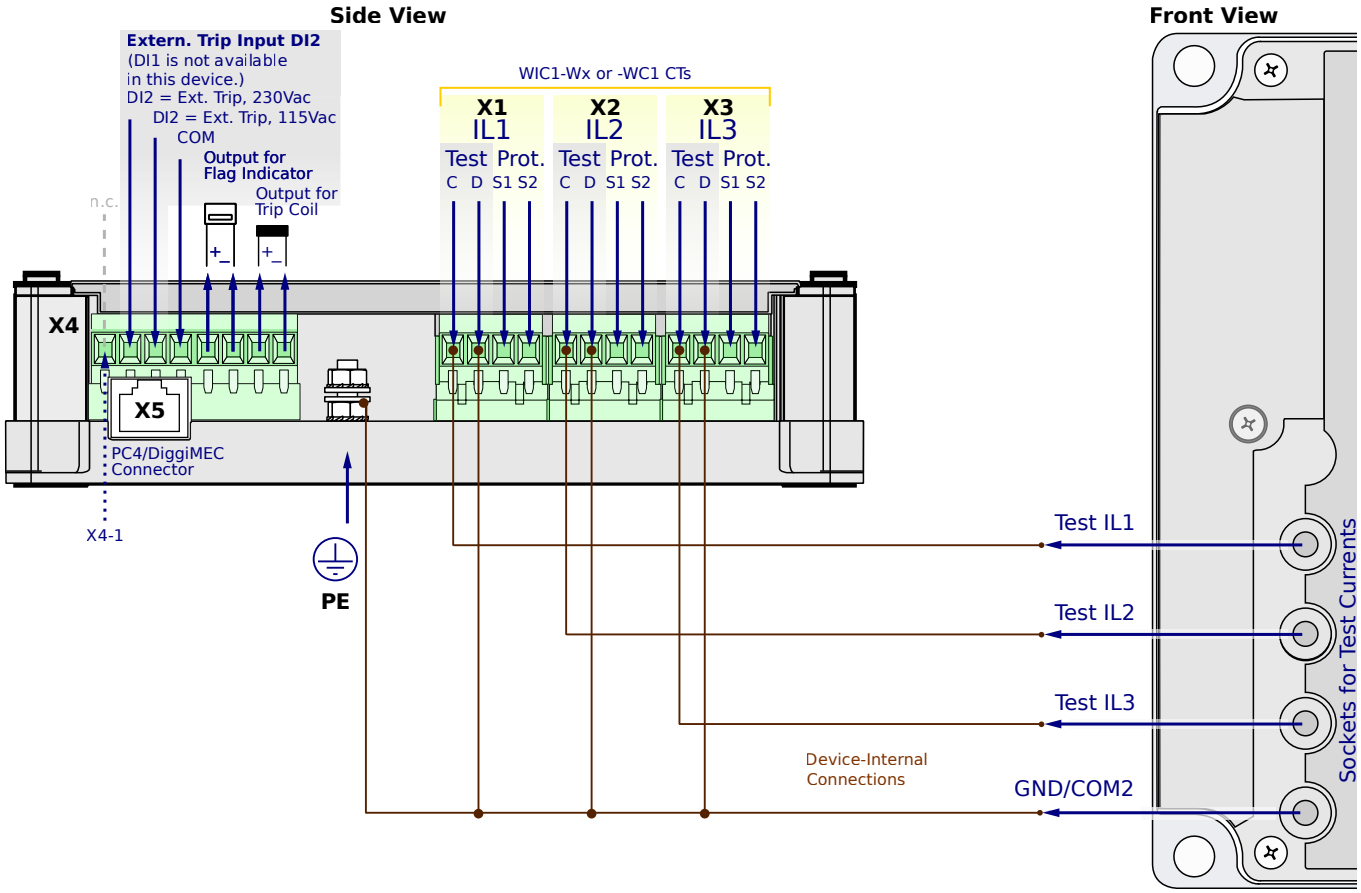


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0PA0

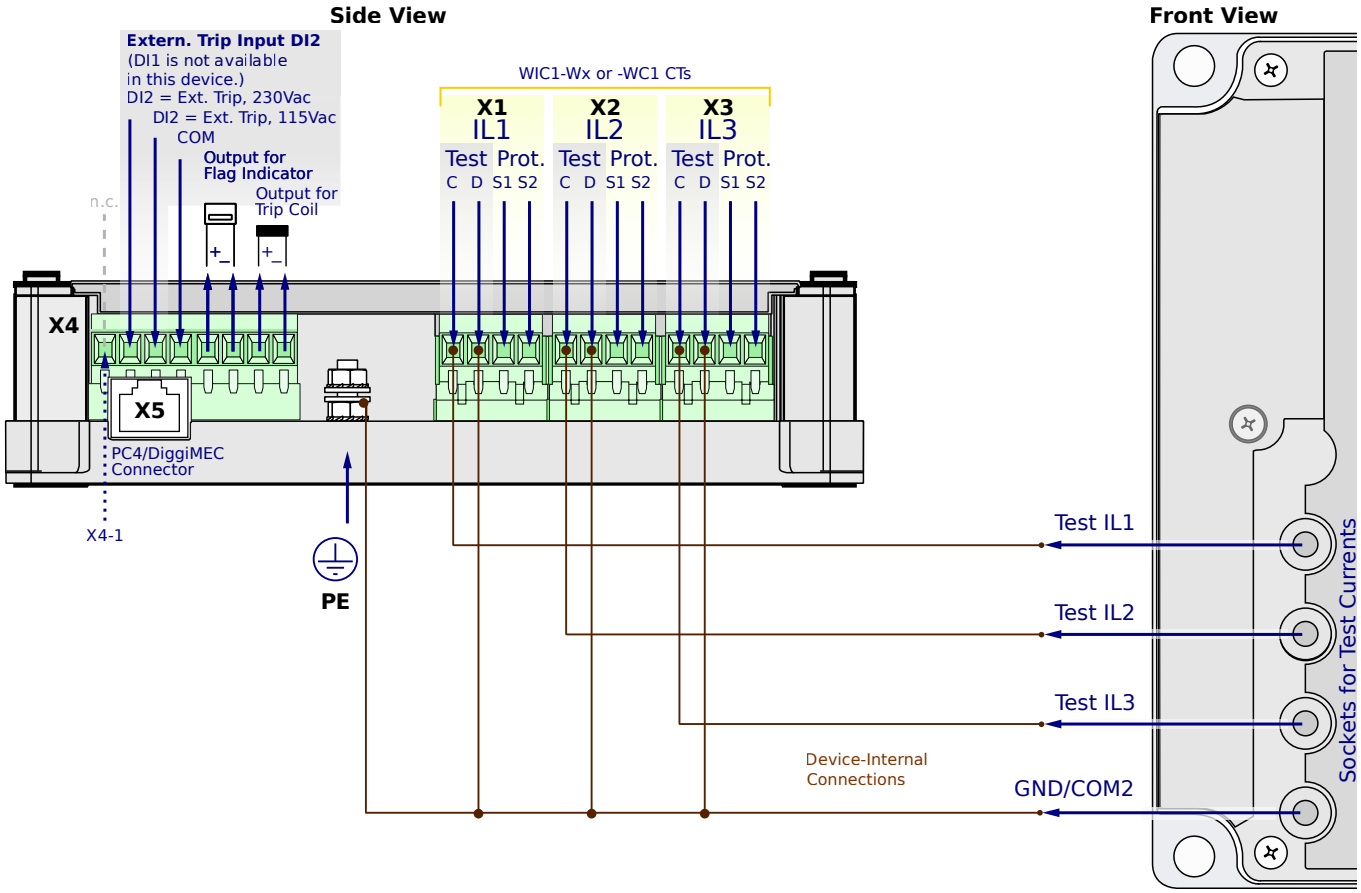


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF0PAH

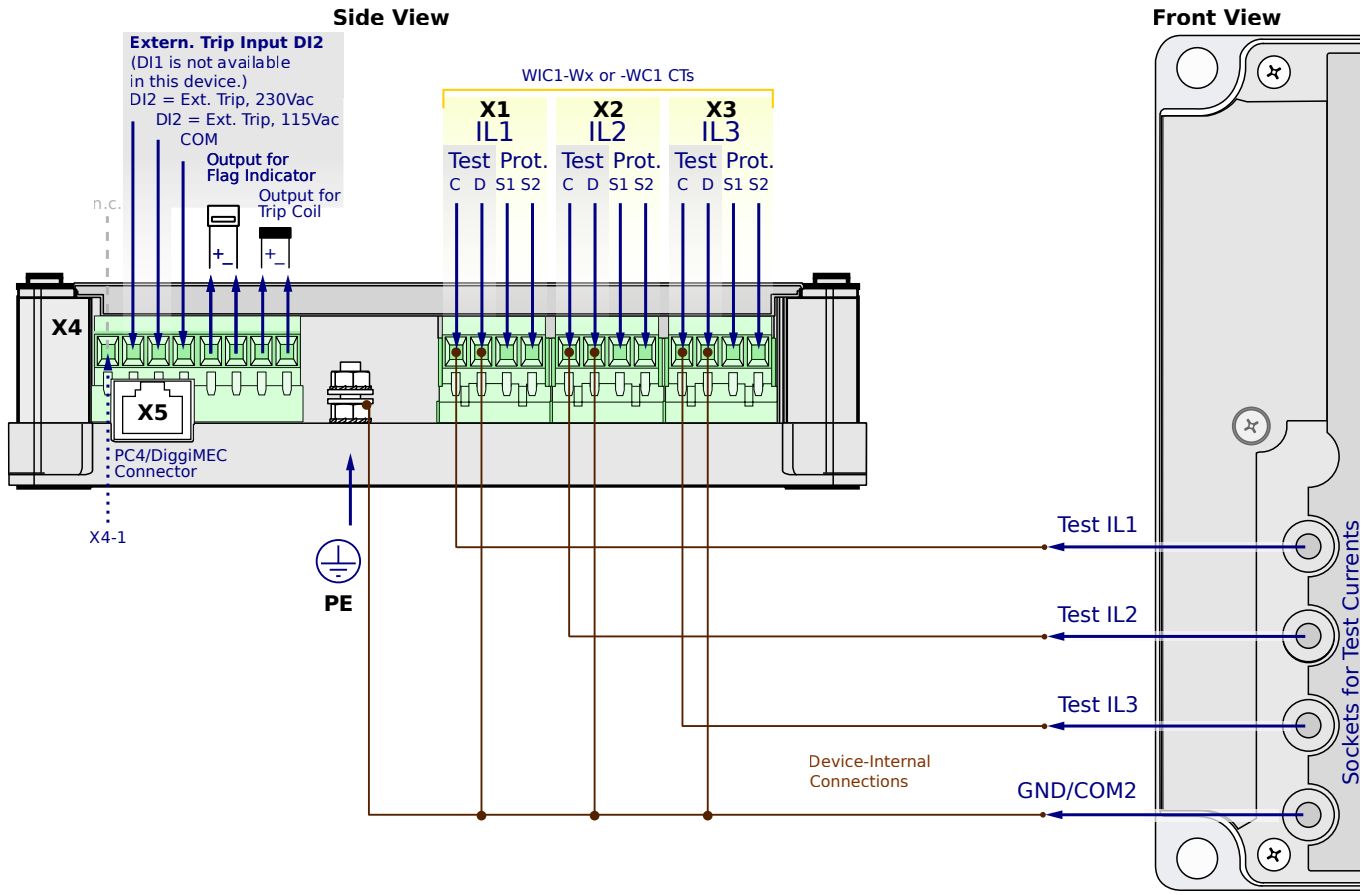


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1SA0

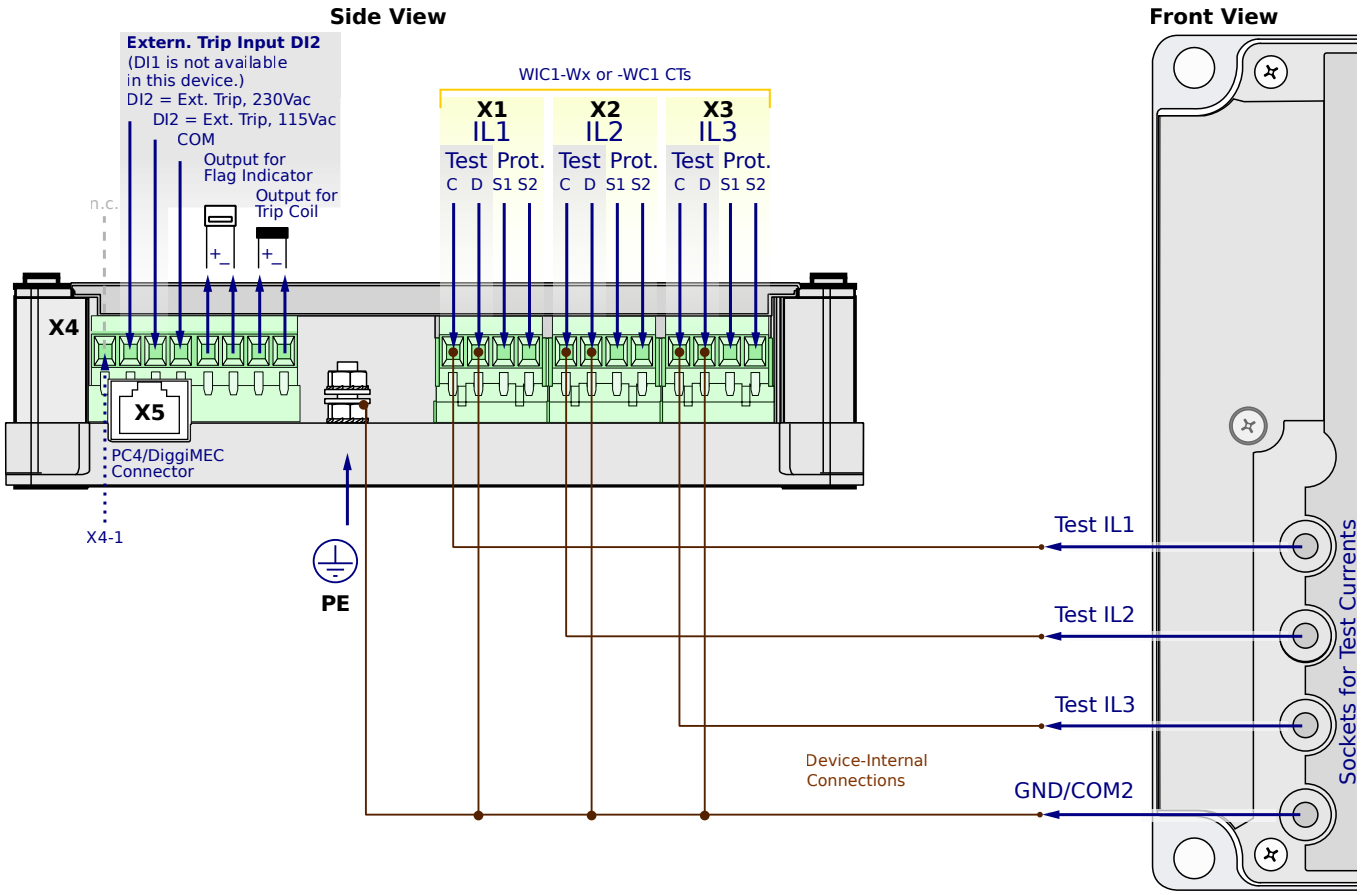


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1SAH

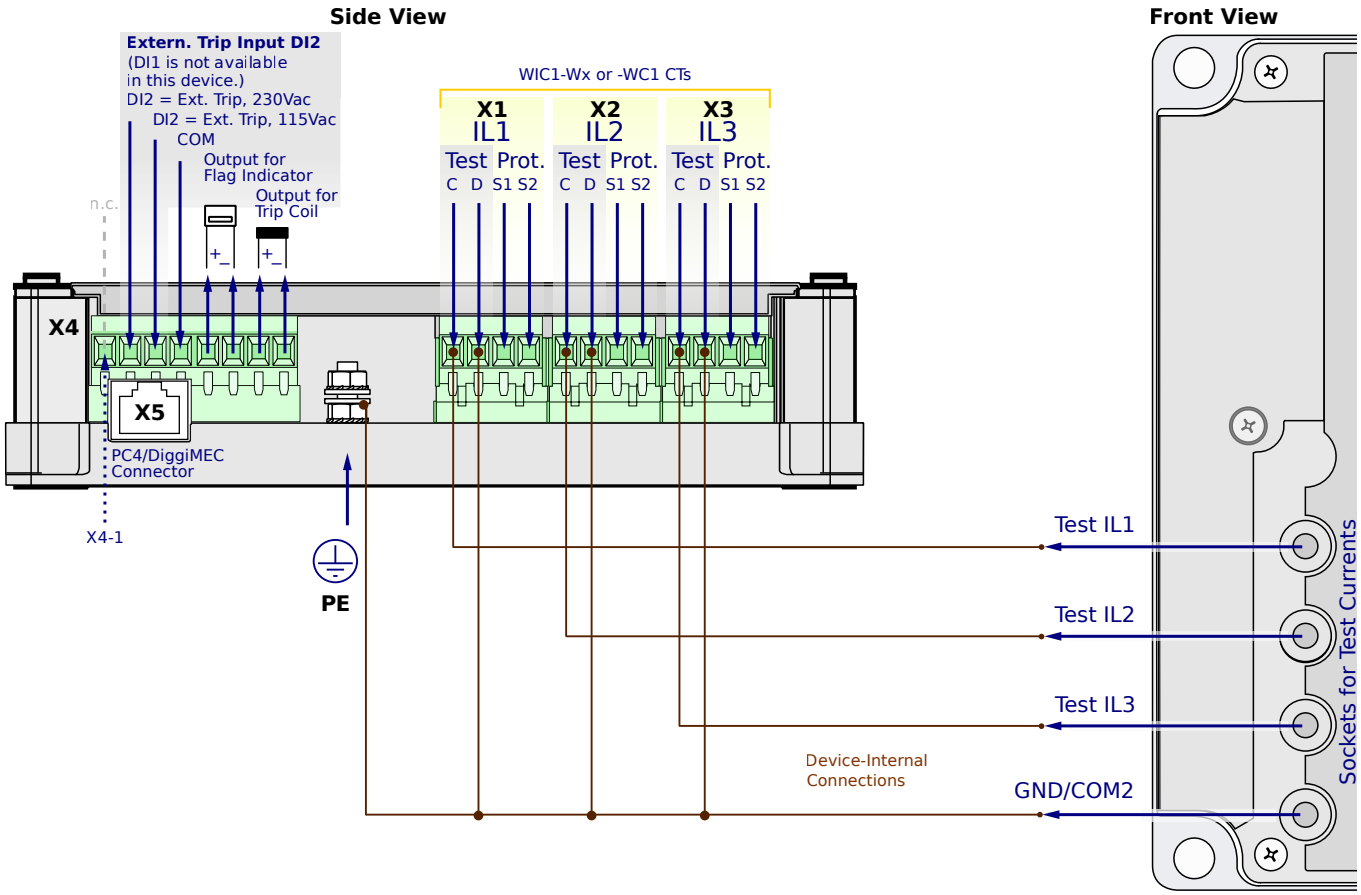


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1AA0

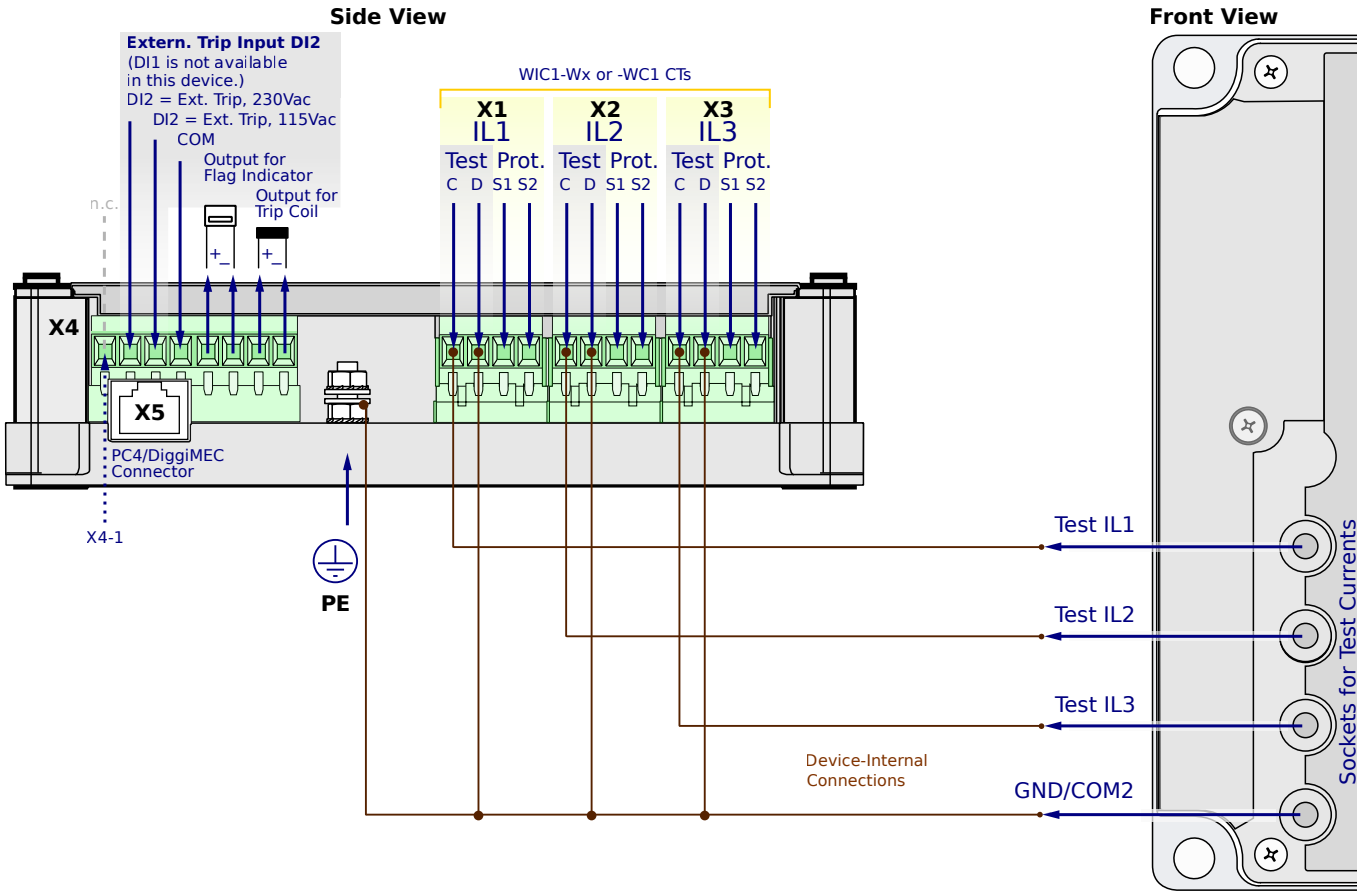


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1AAH

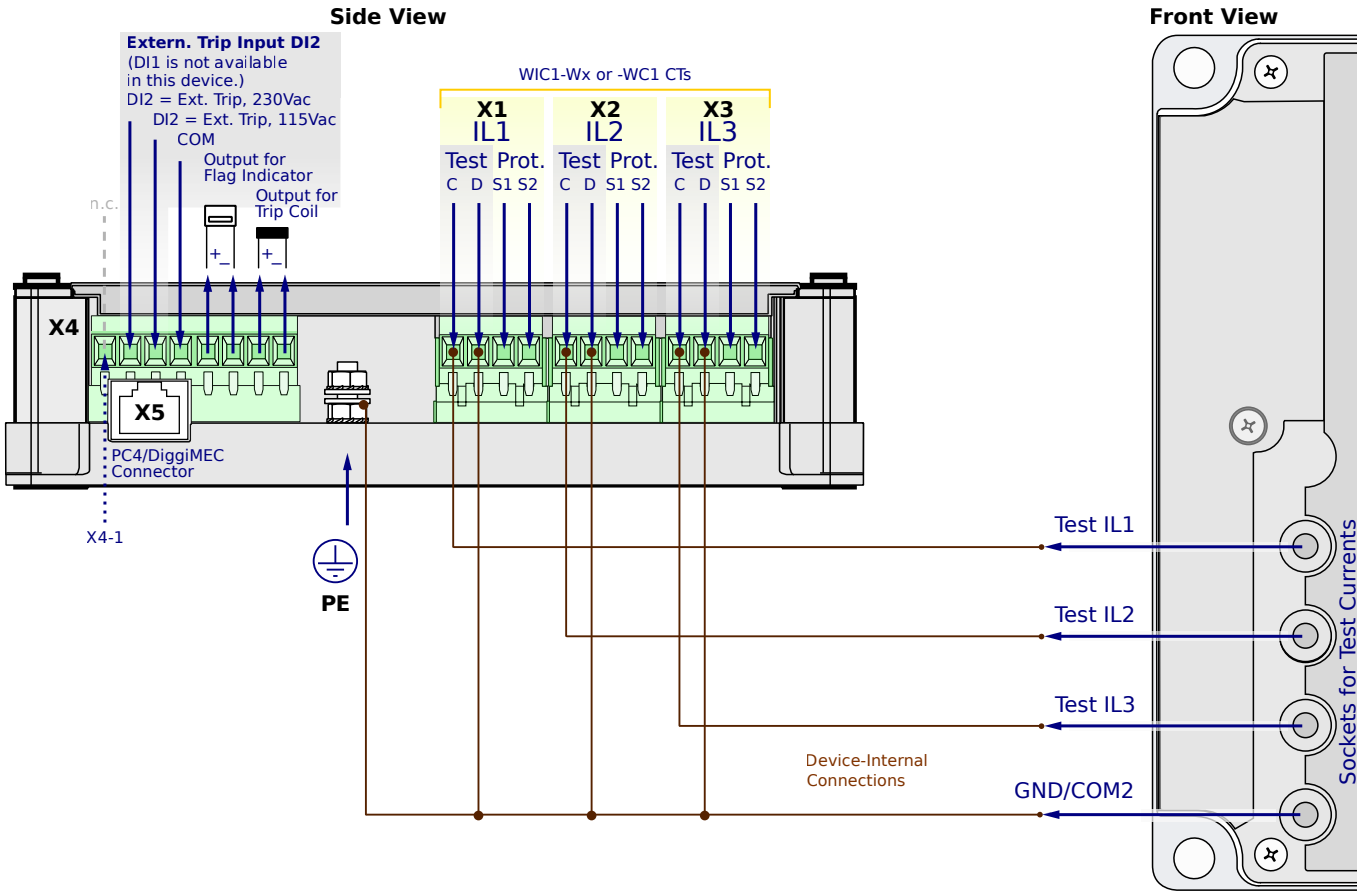


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1PA0

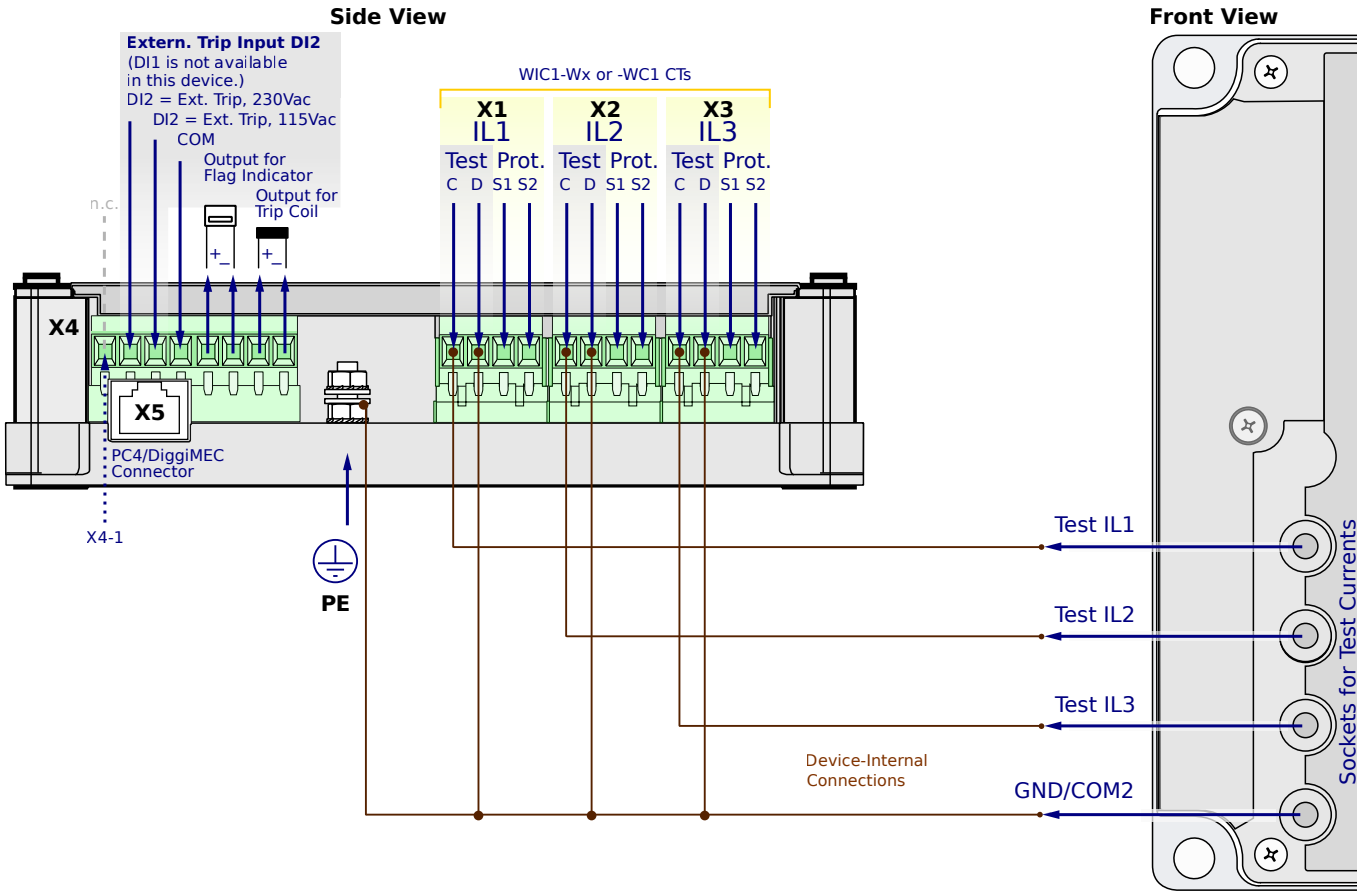


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF1PAH

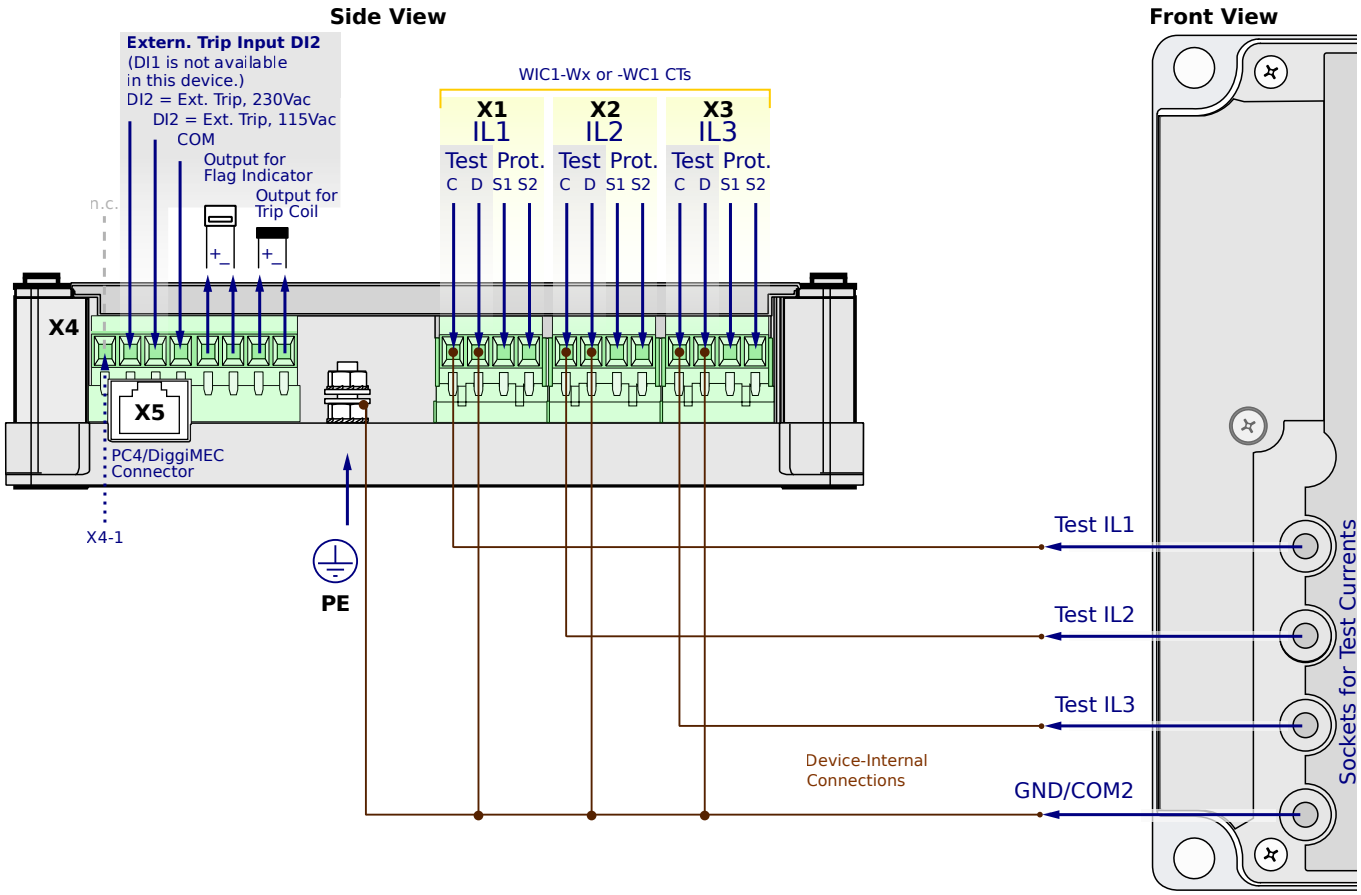


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2SA0

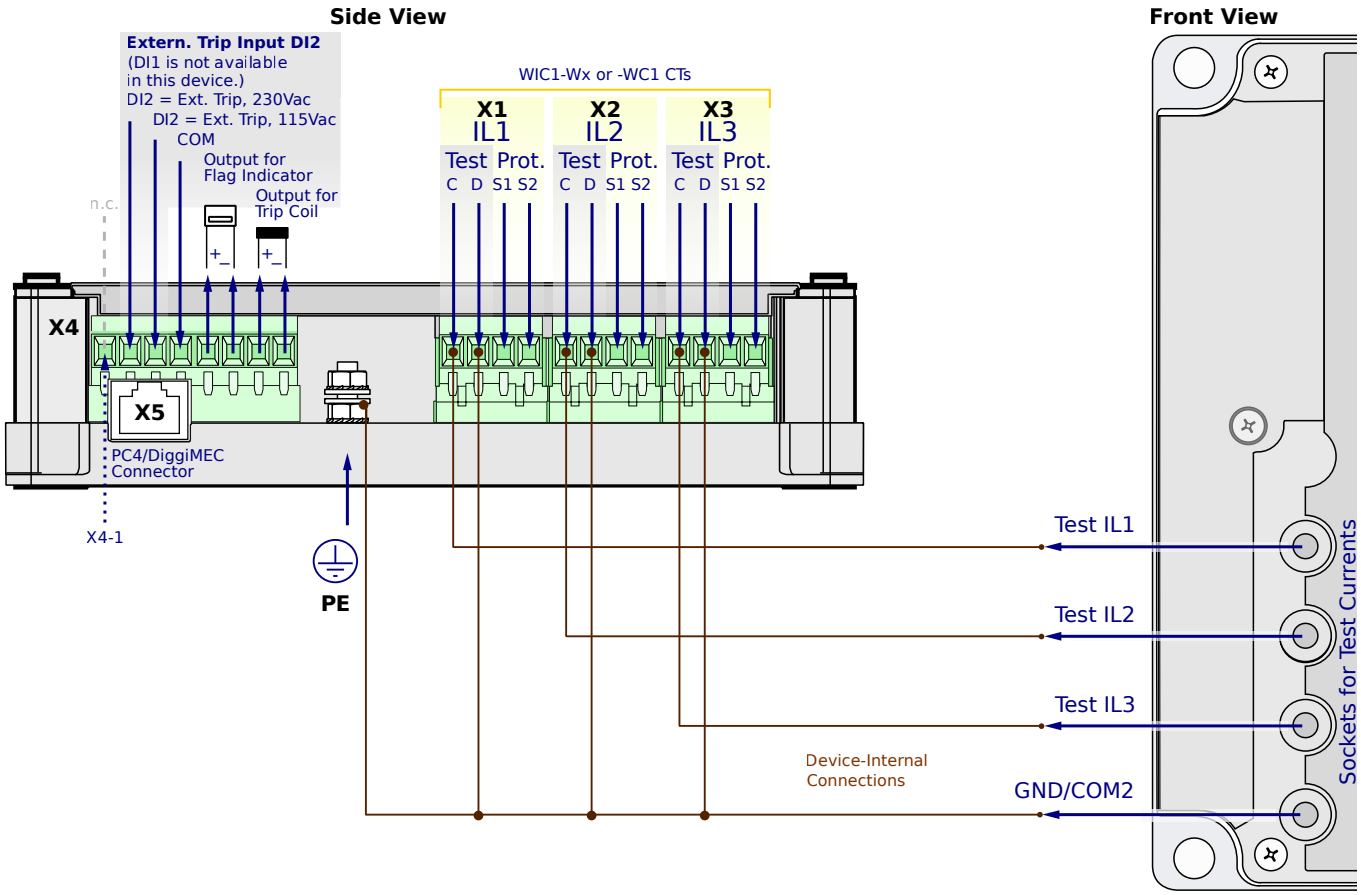


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2SAH

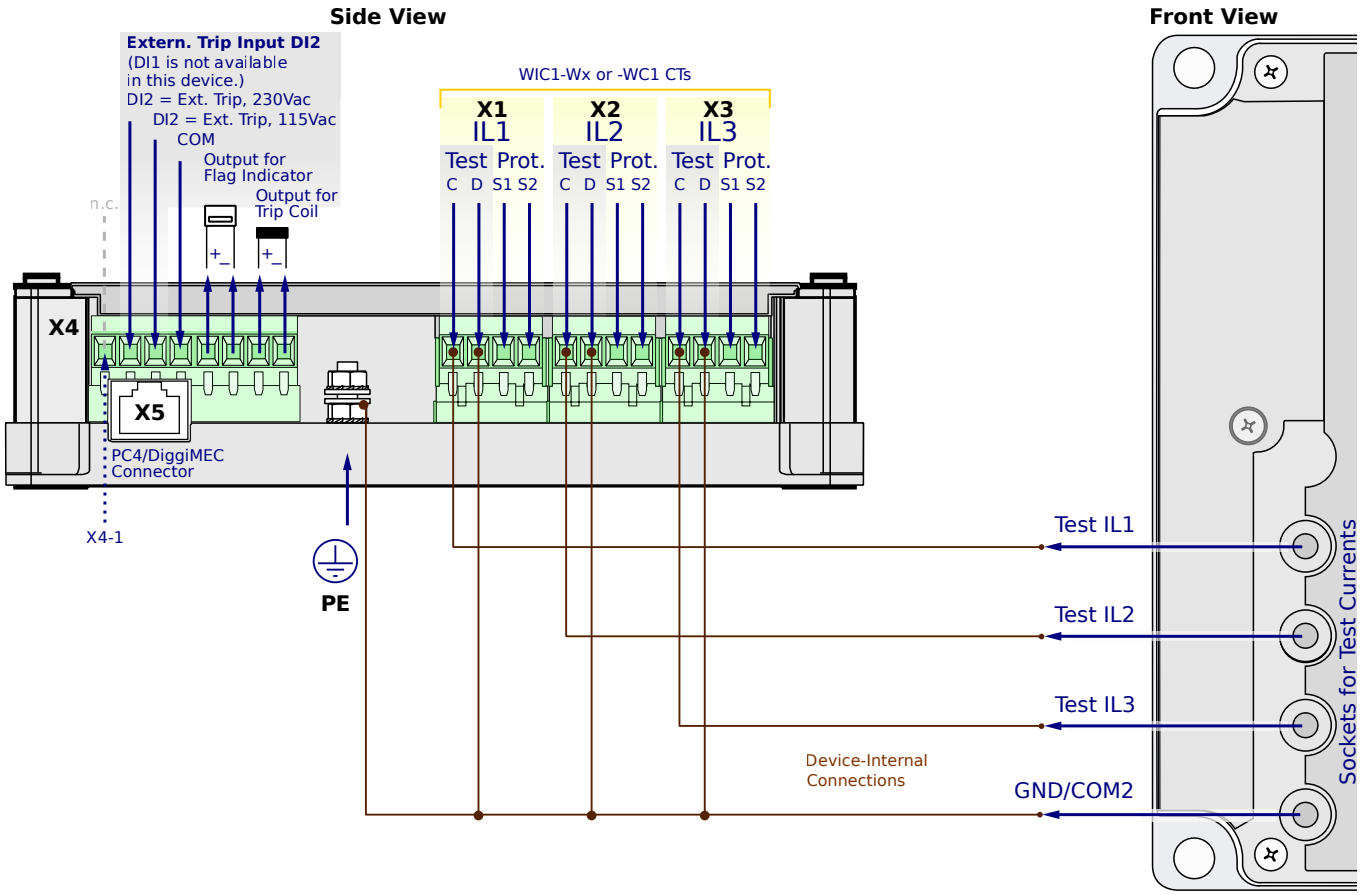


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2AA0

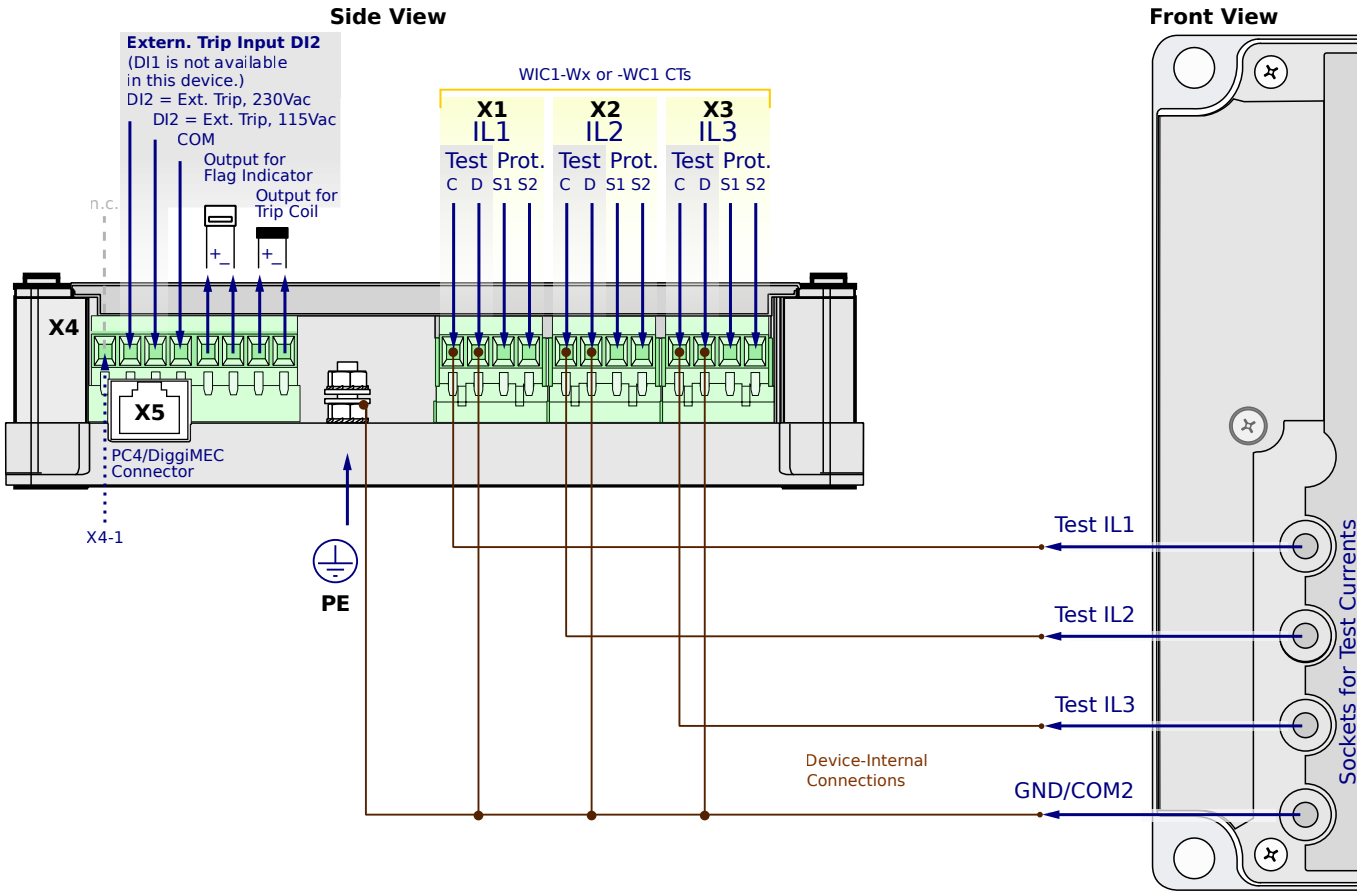


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2AAH

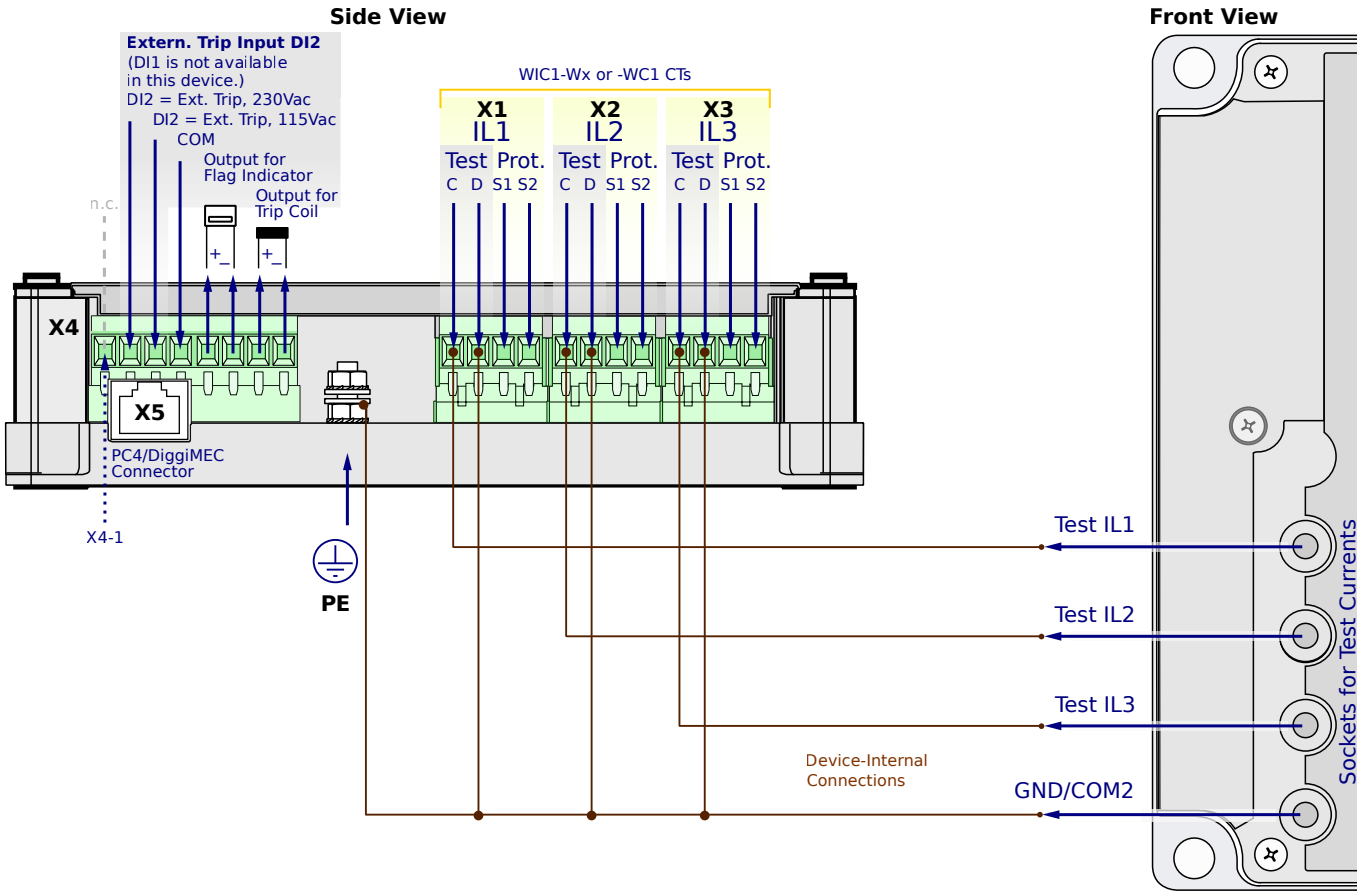


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2PA0

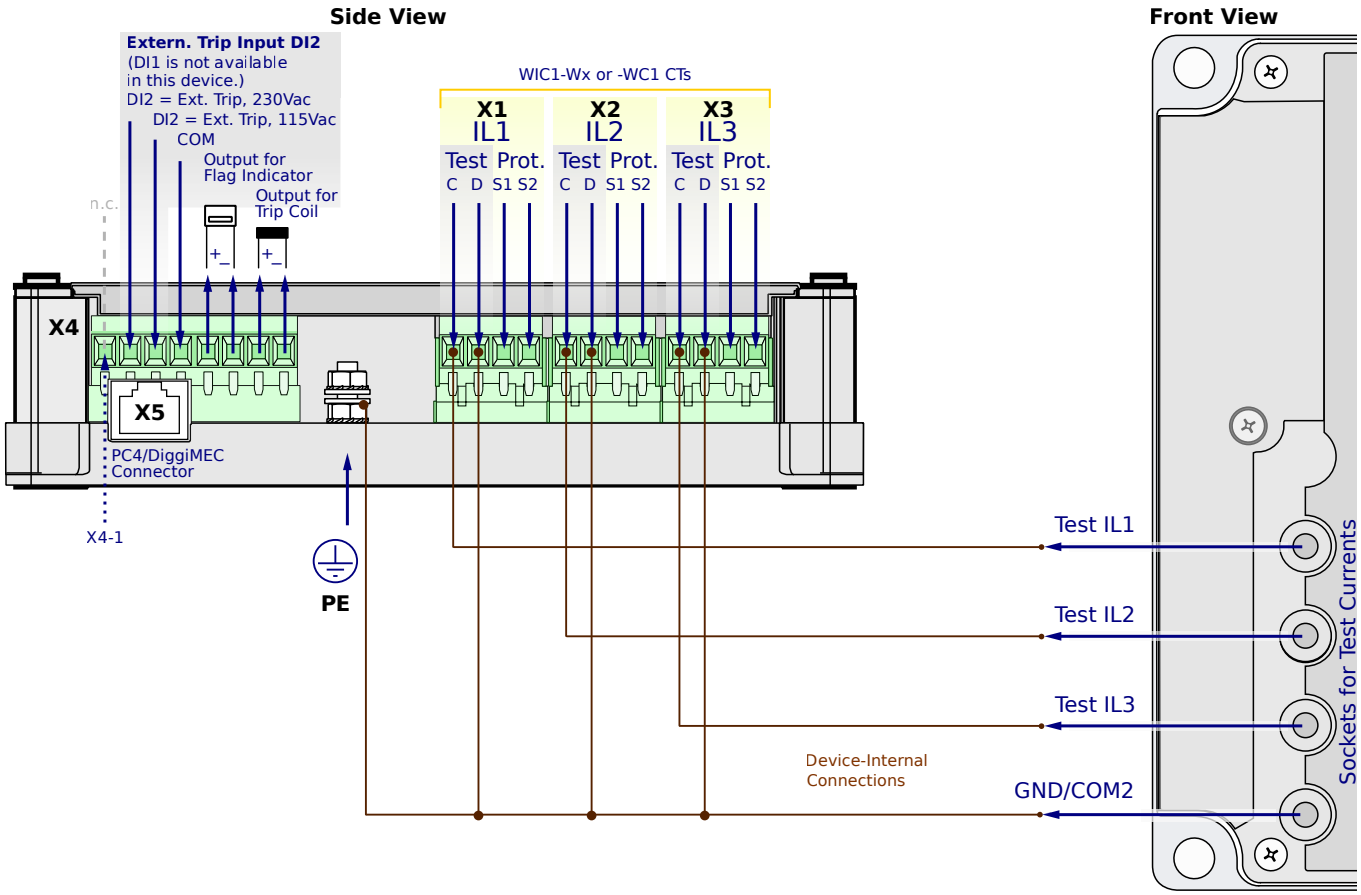


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NF2PAH

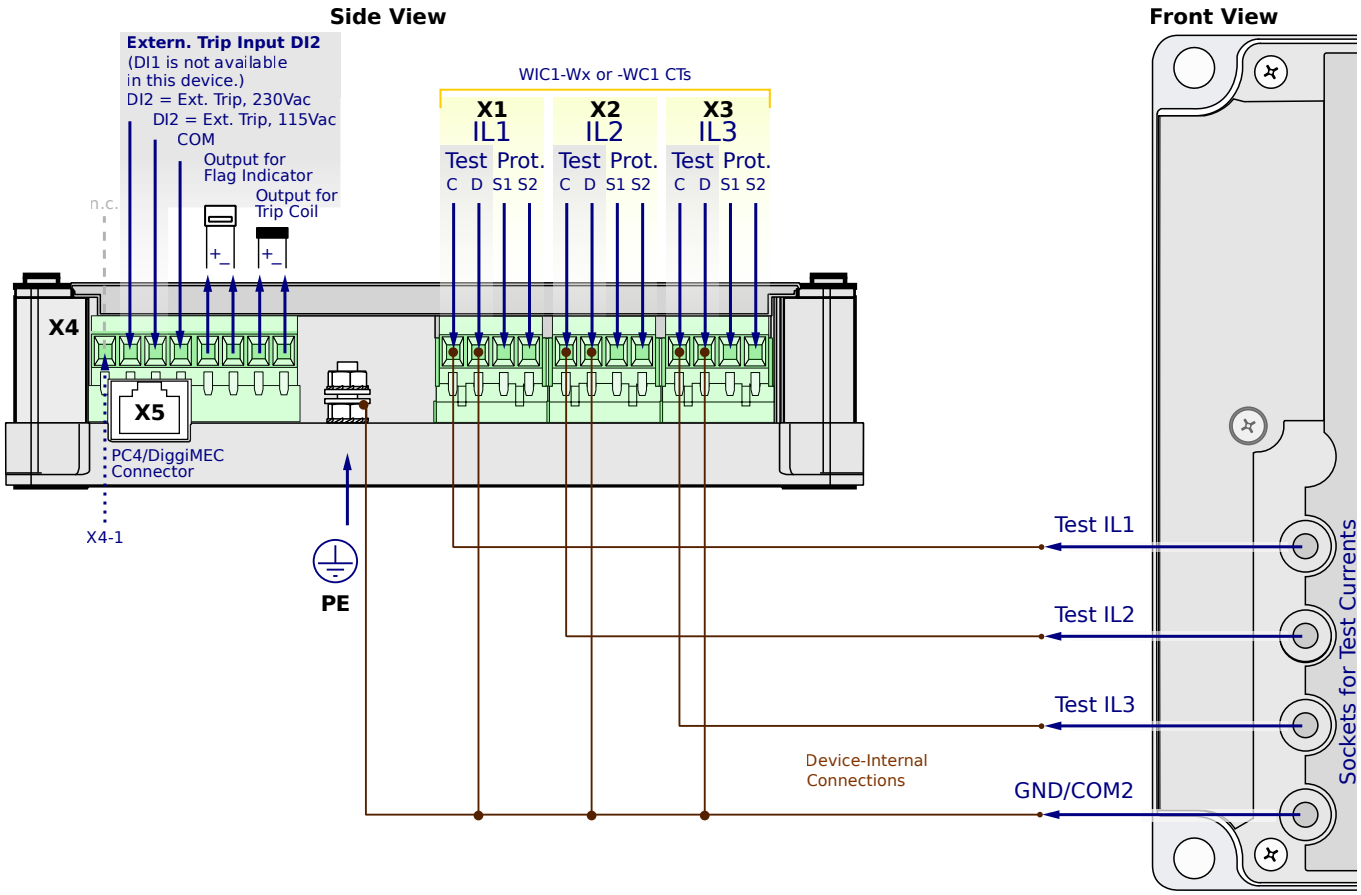


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0SA0

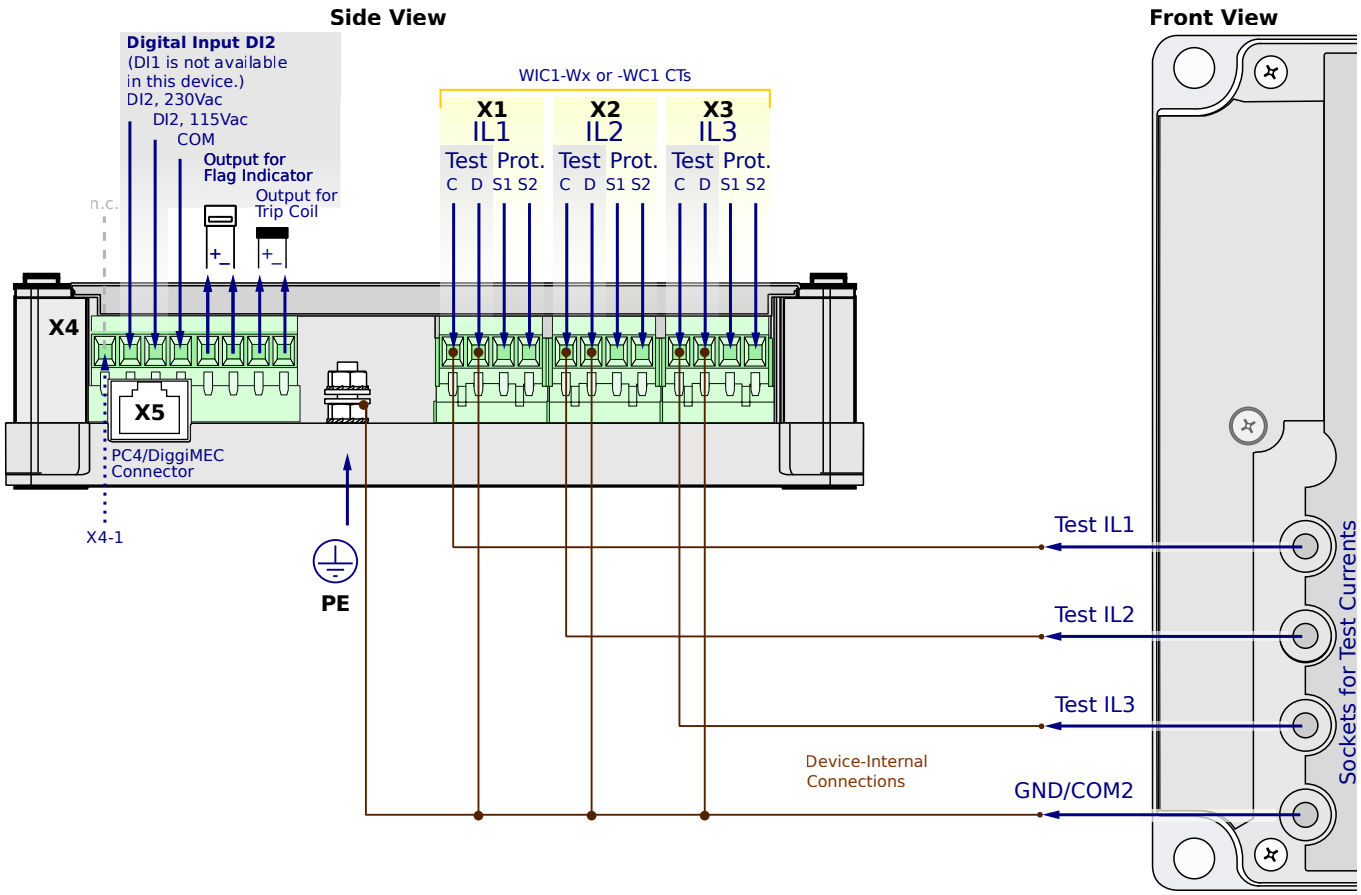


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0SAH

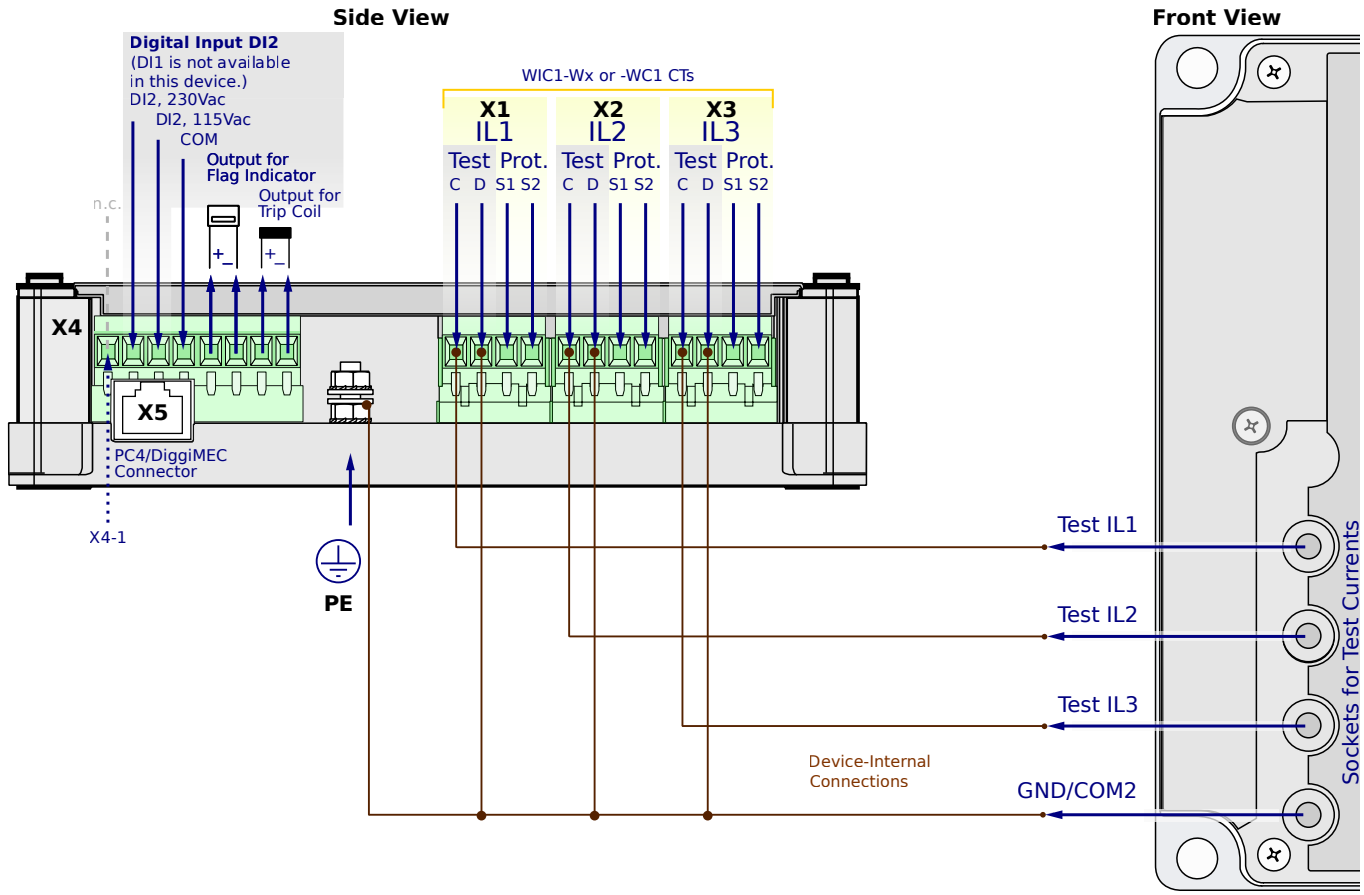


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0AA0

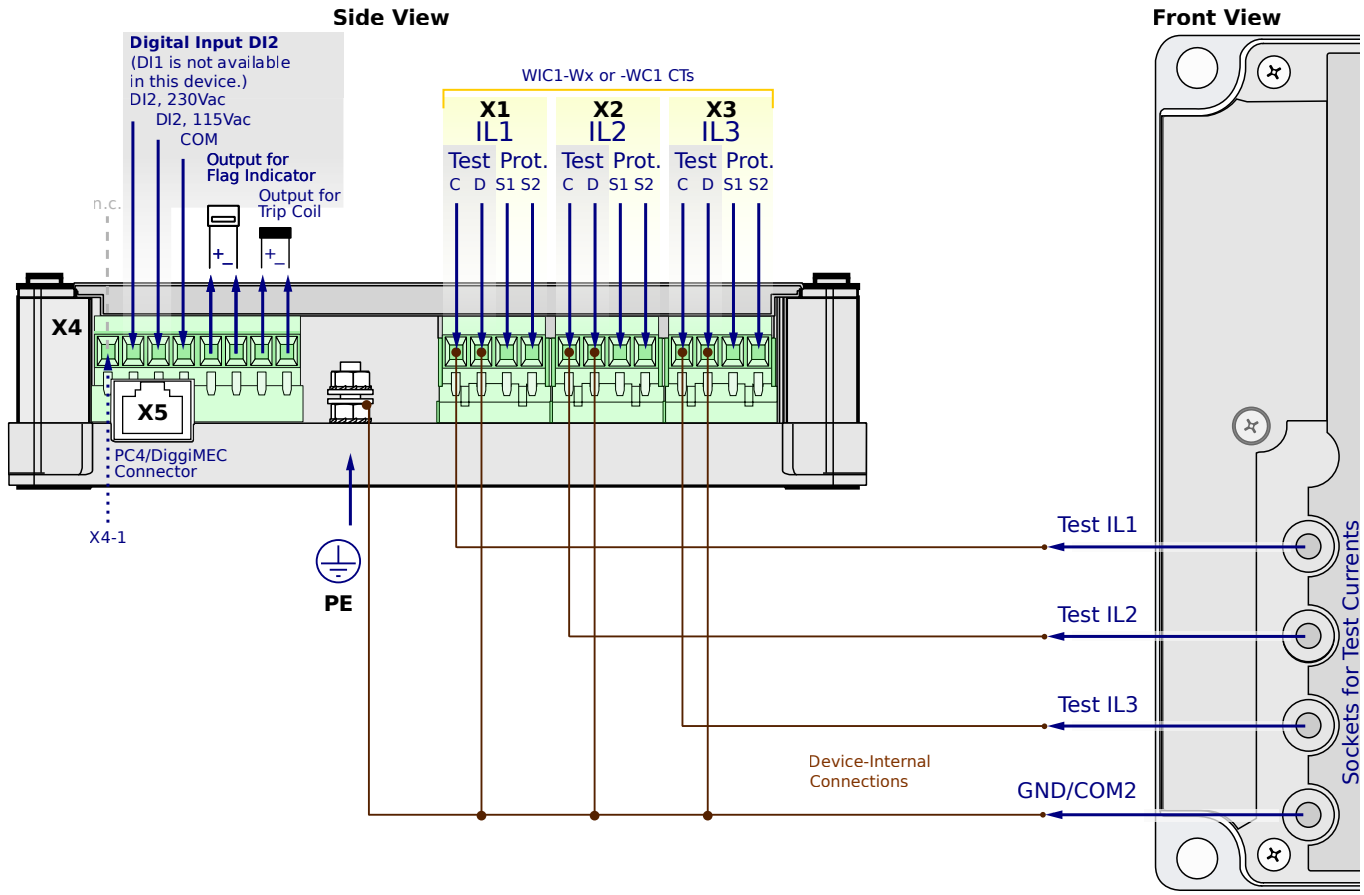


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0AAH

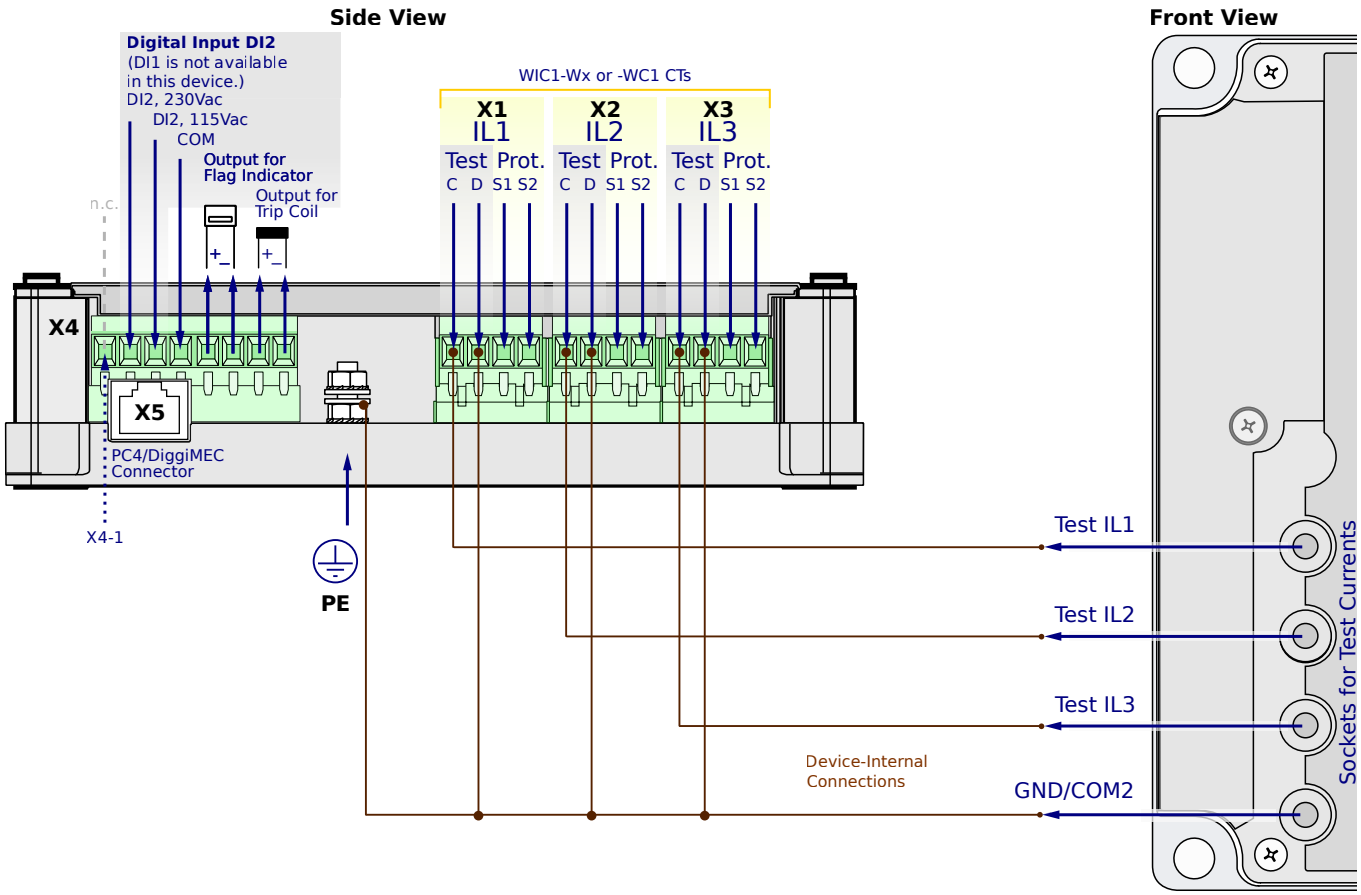


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0PA0

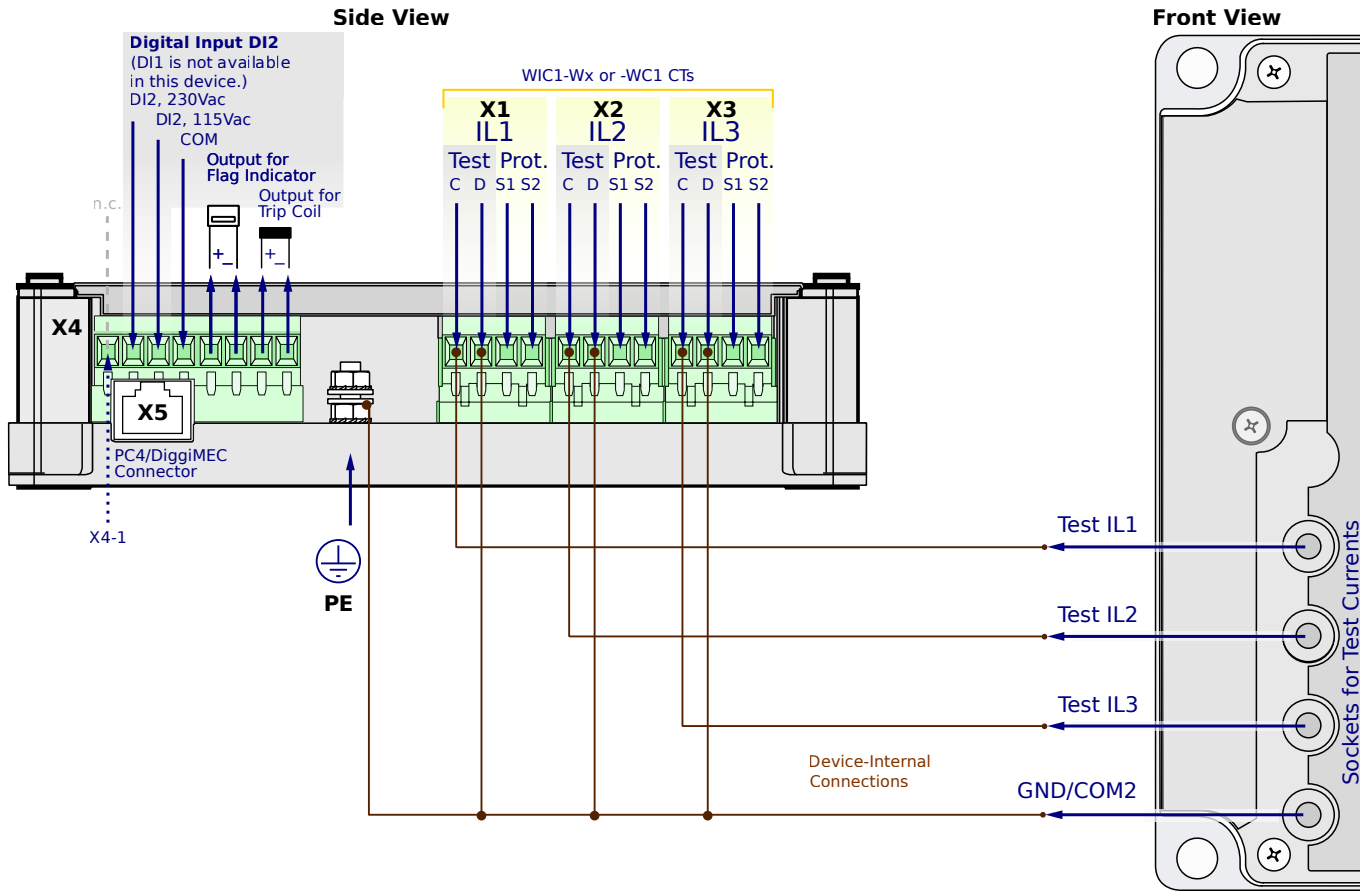


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC0PAH

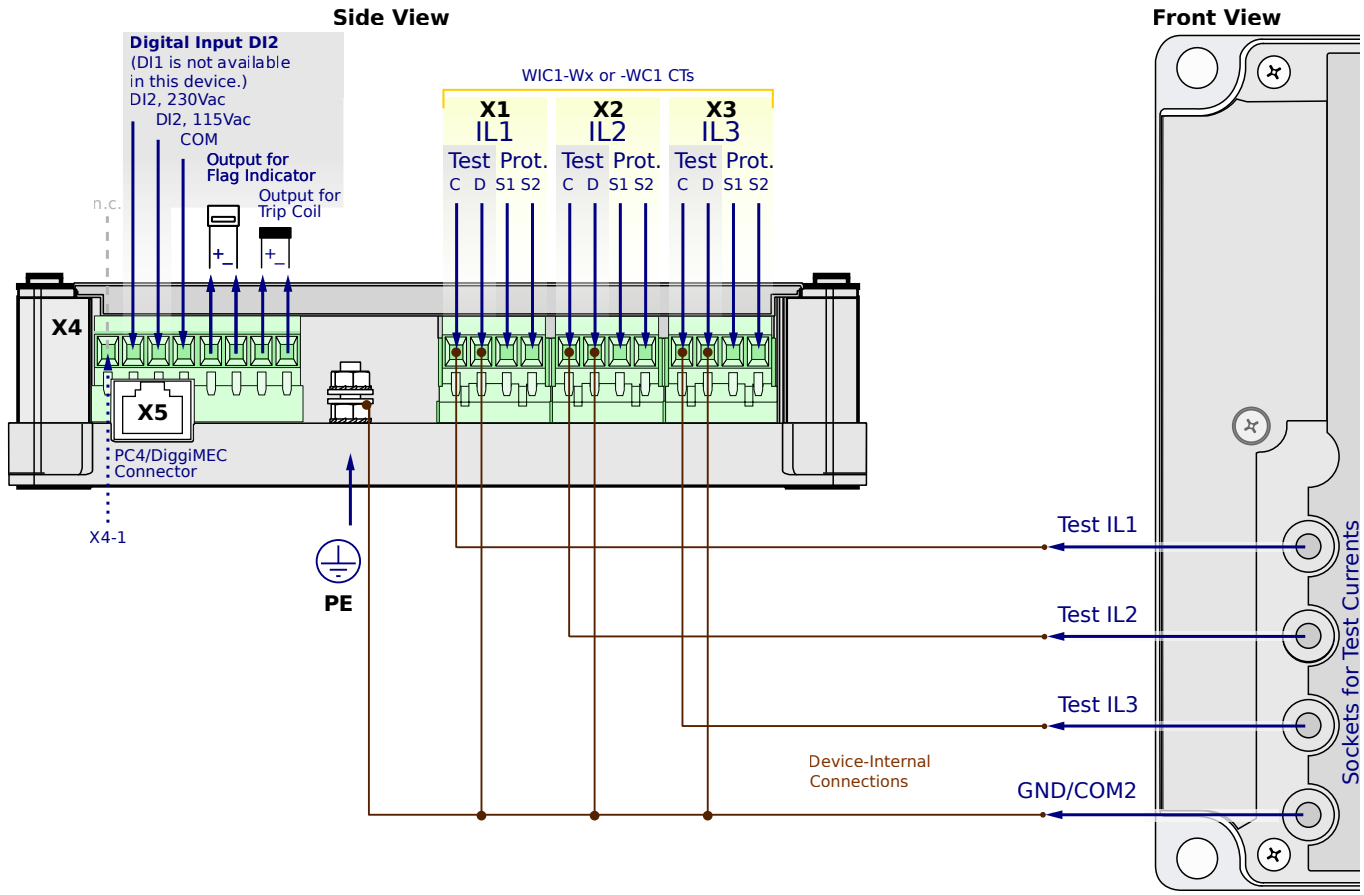


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1SA0

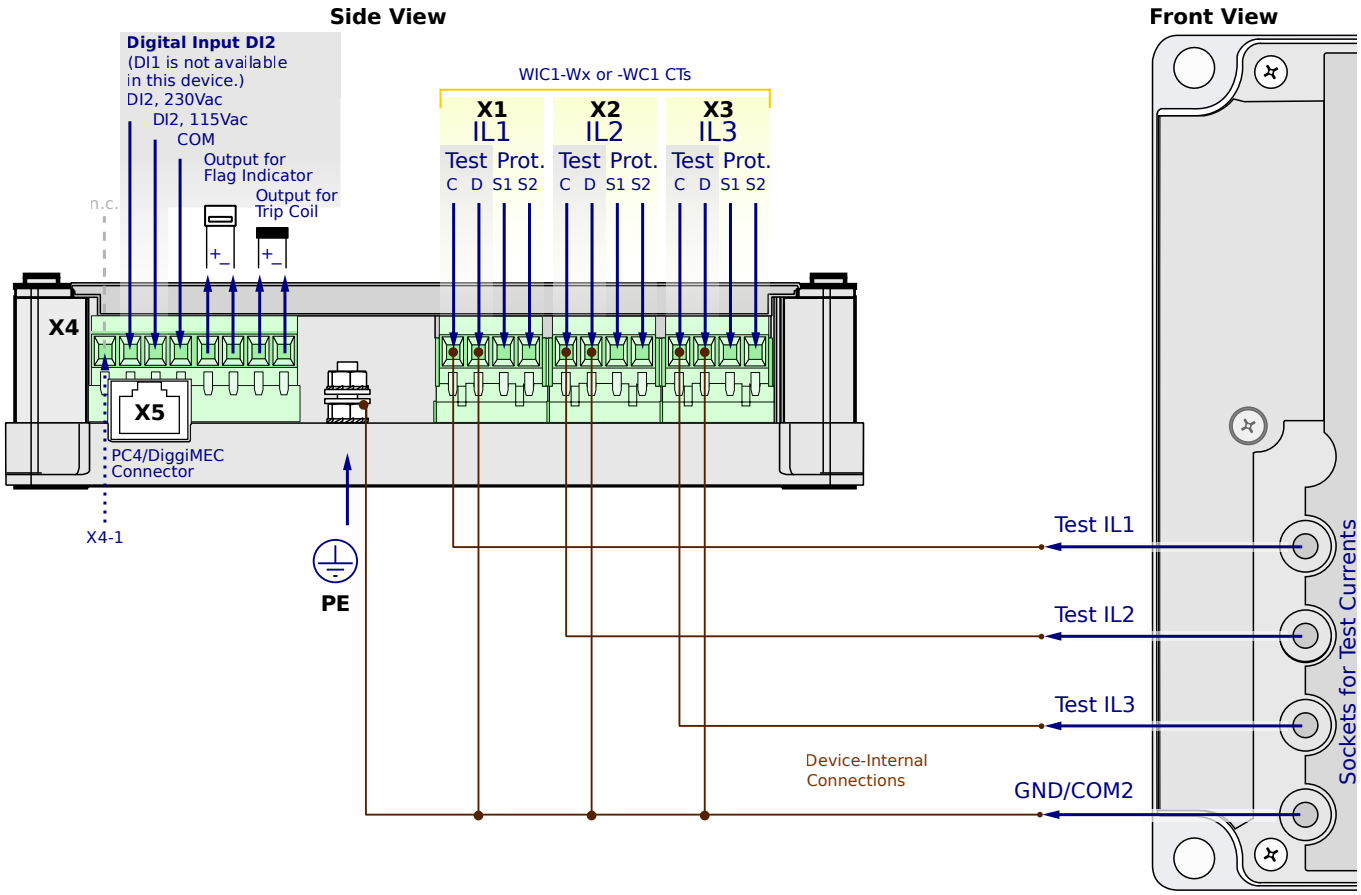


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1SAH

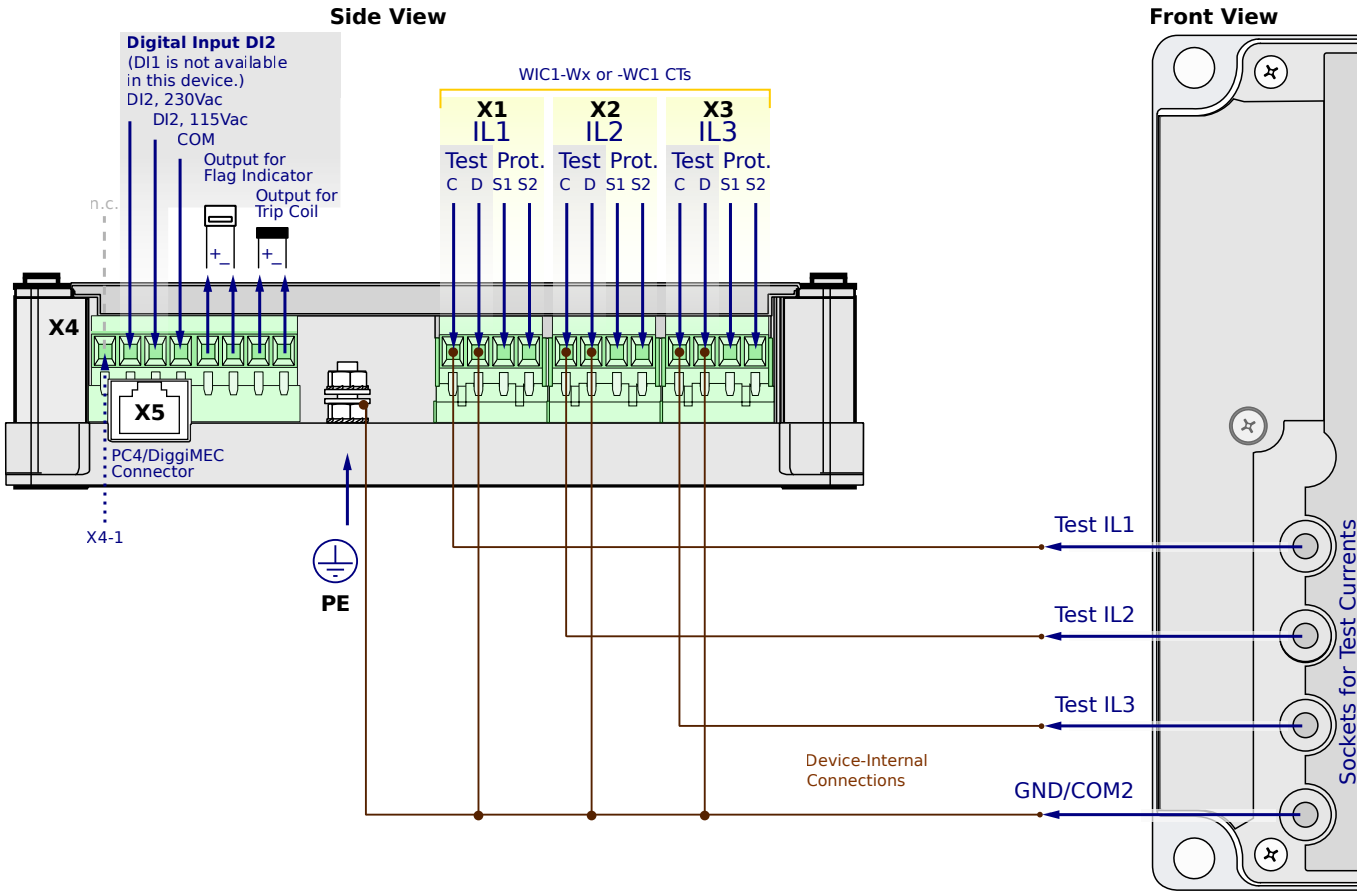


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1AA0

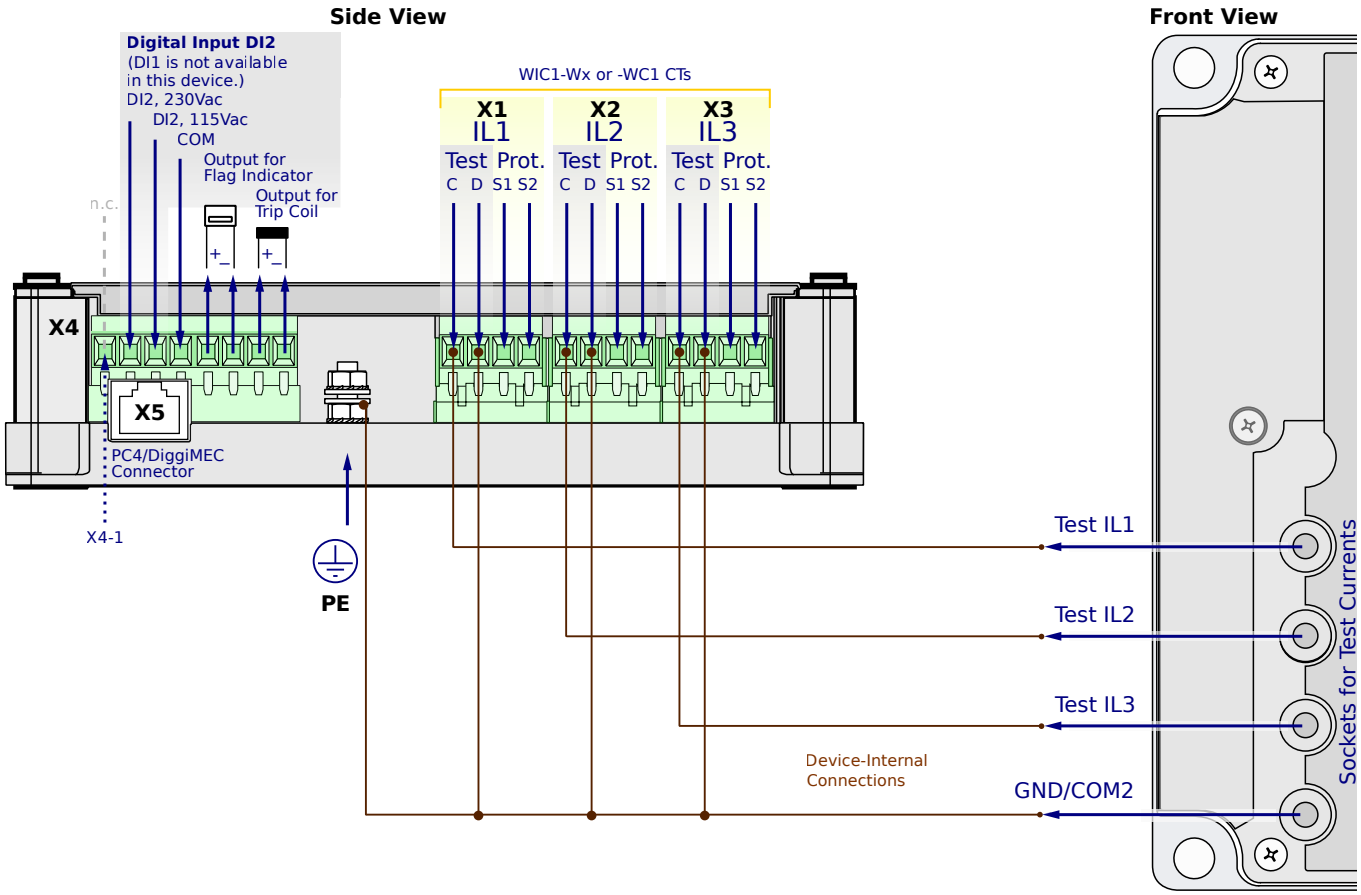


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1AAH

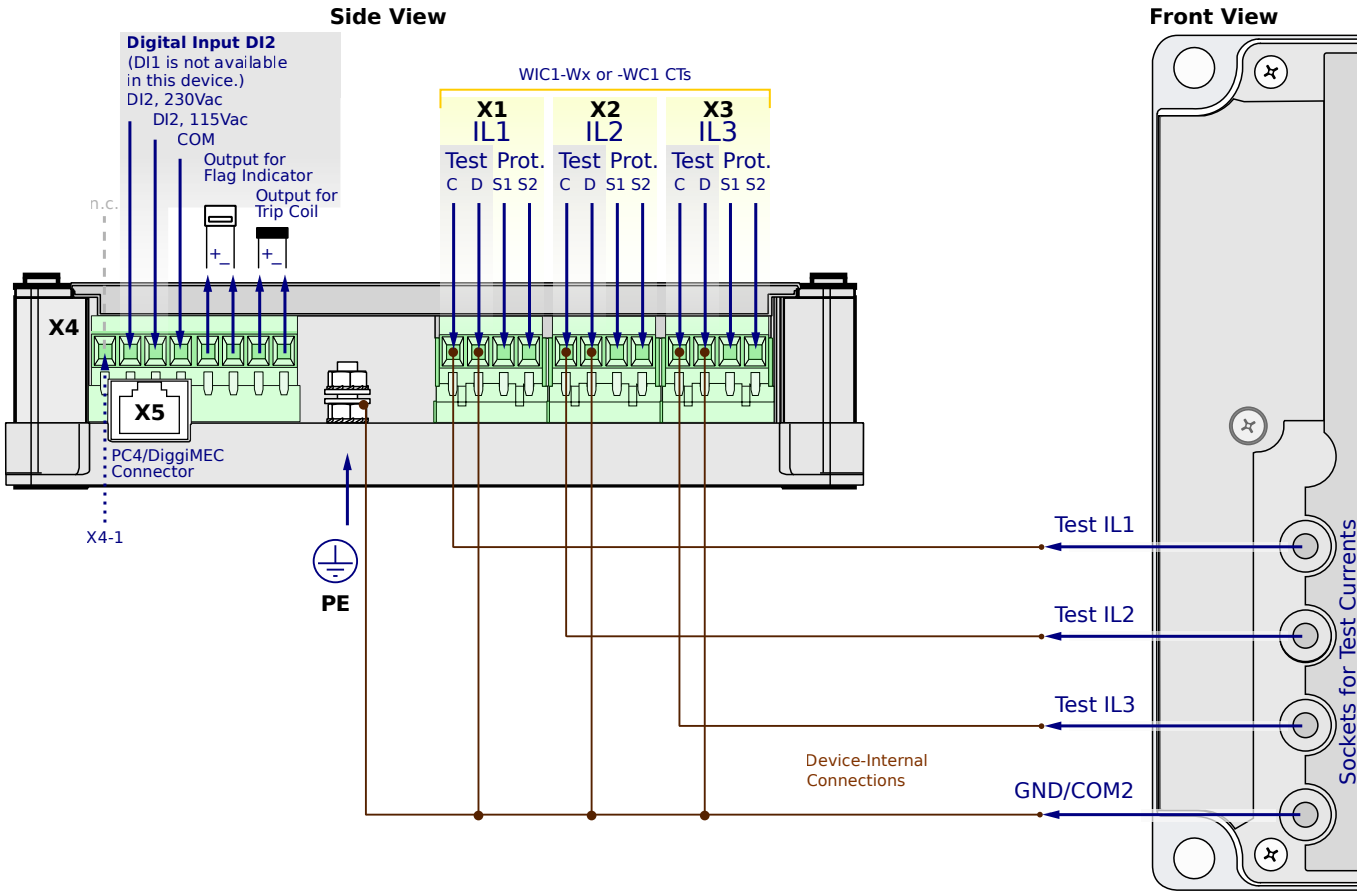


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1PA0

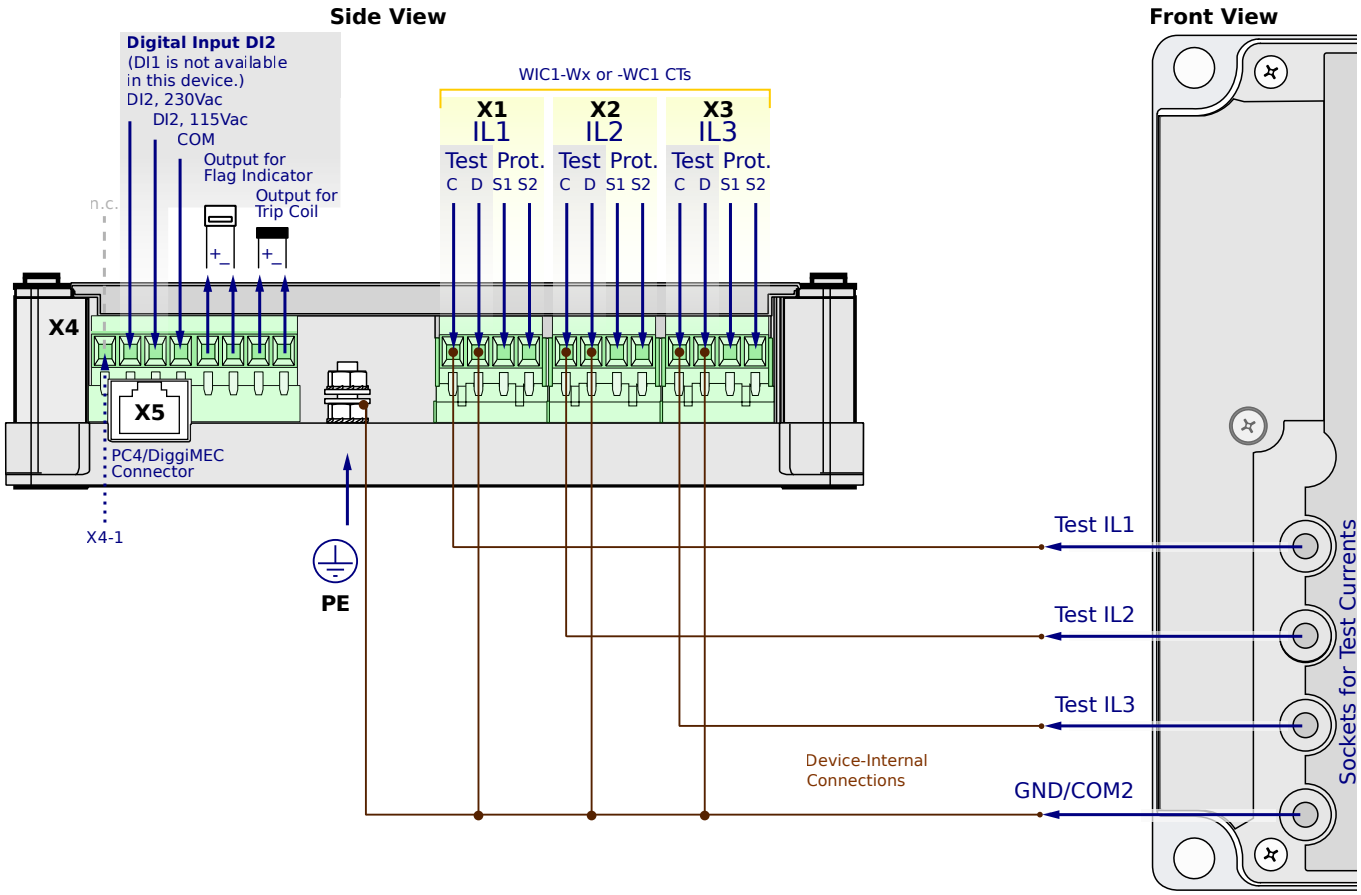


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC1PAH

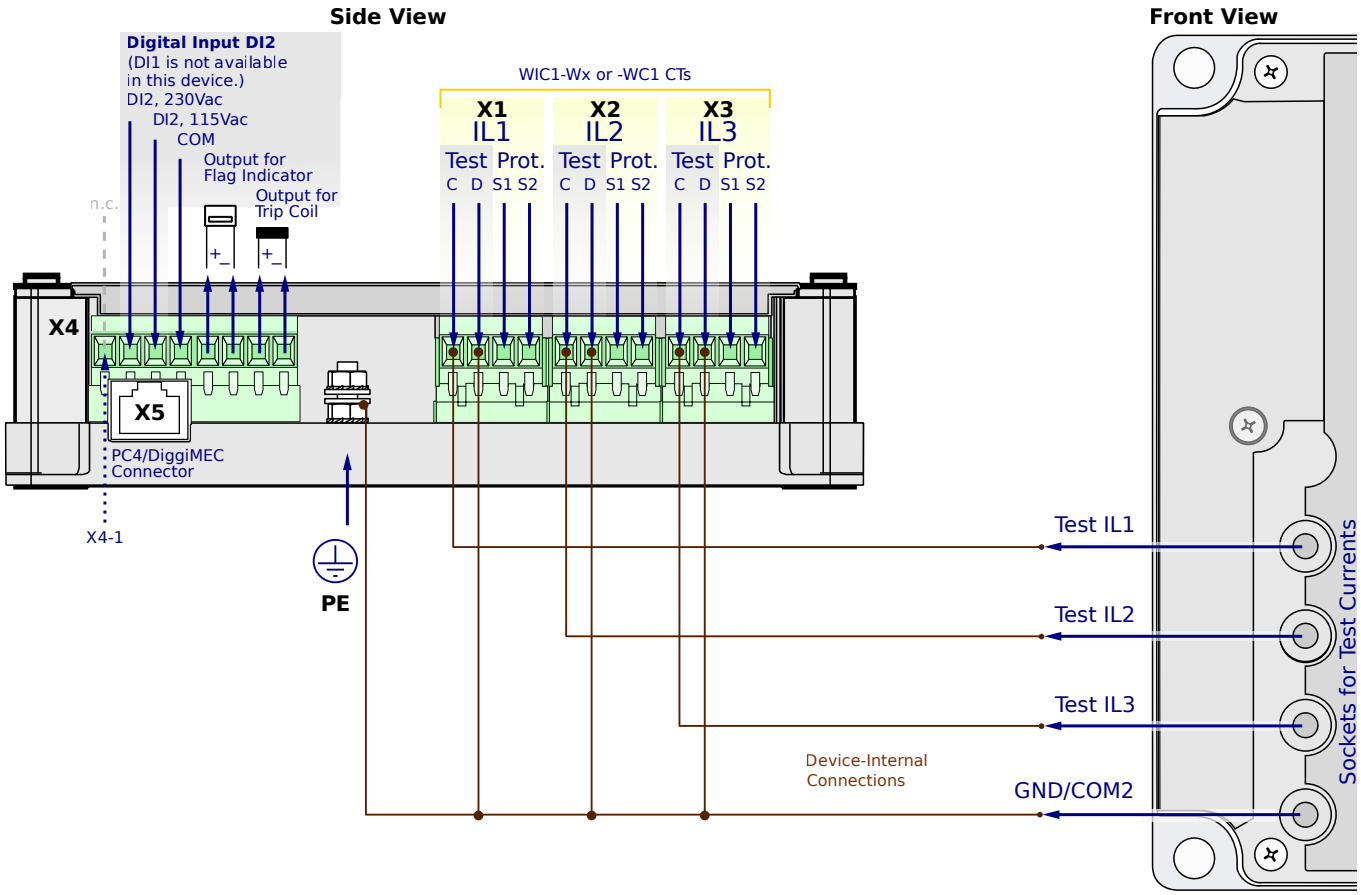


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2SA0

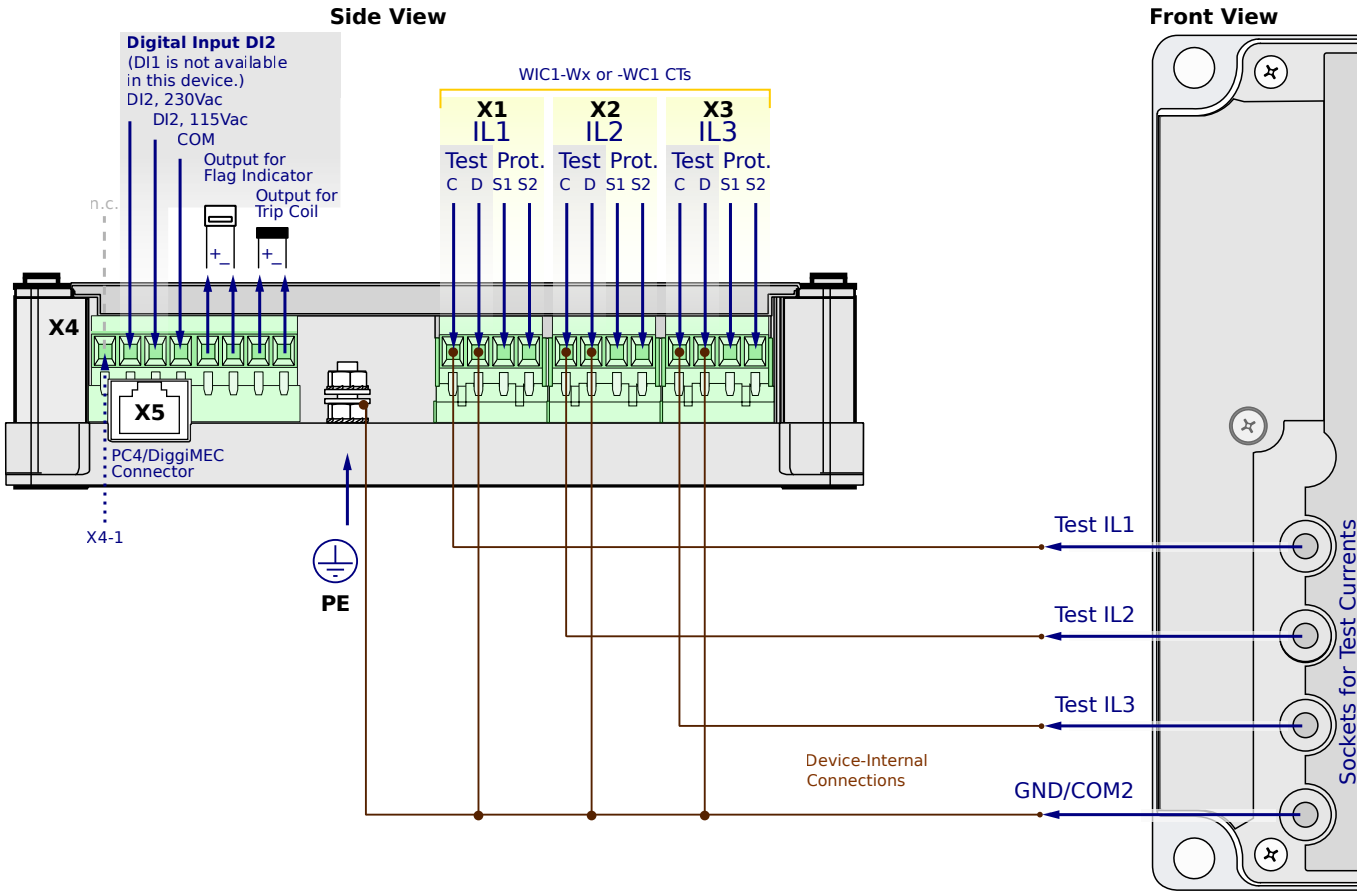


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2SAH

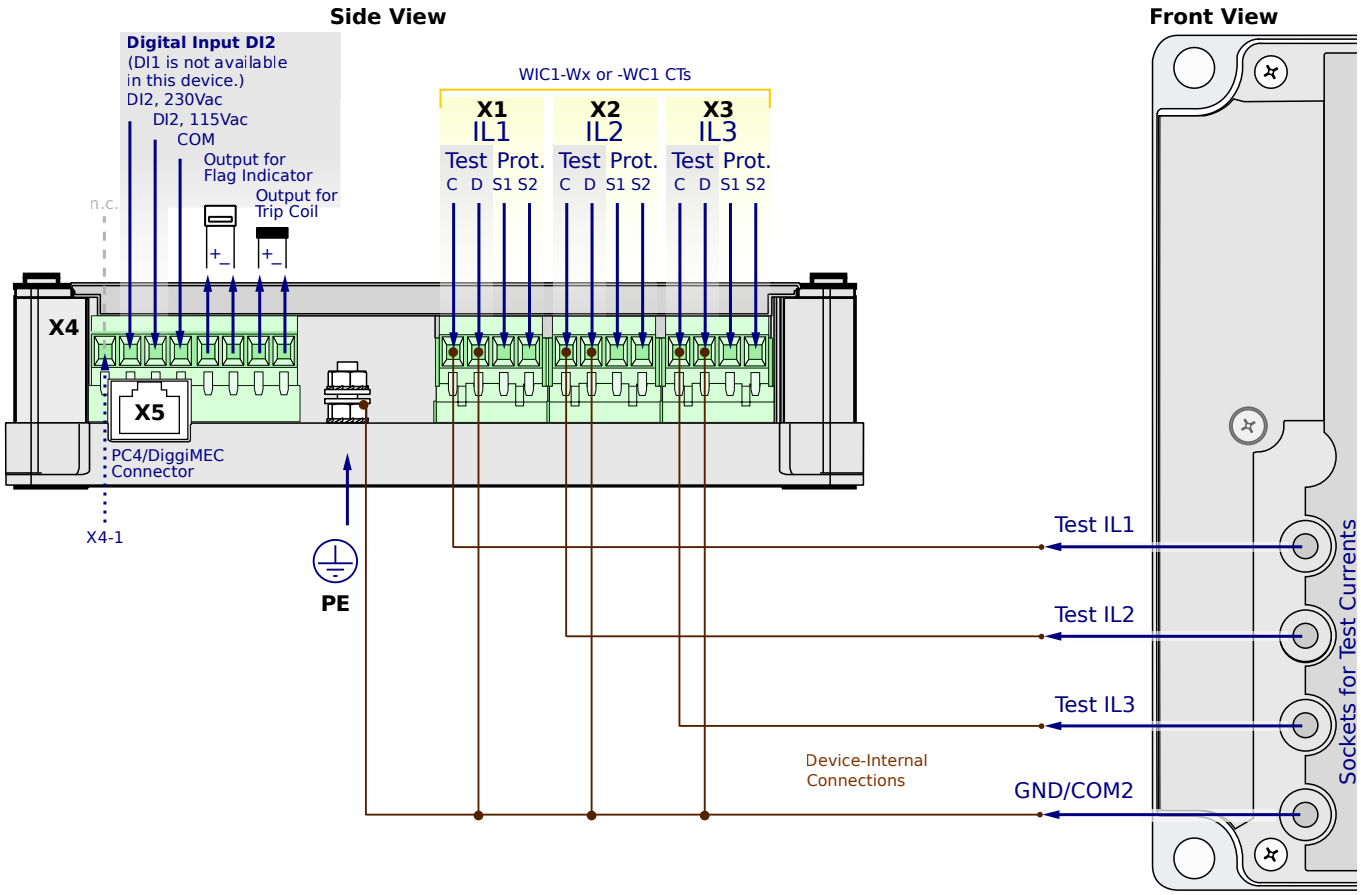


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2AA0

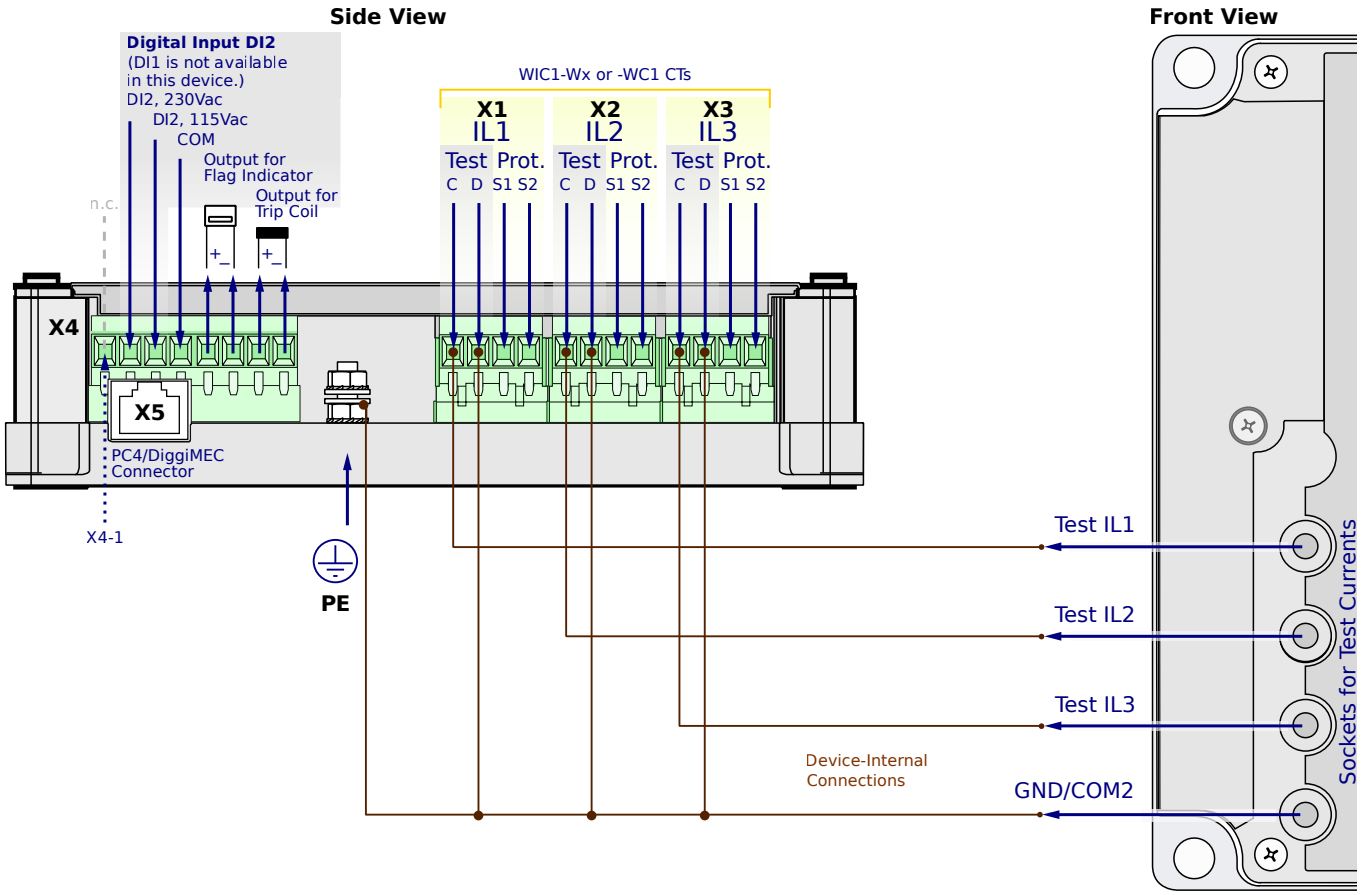


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2AAH

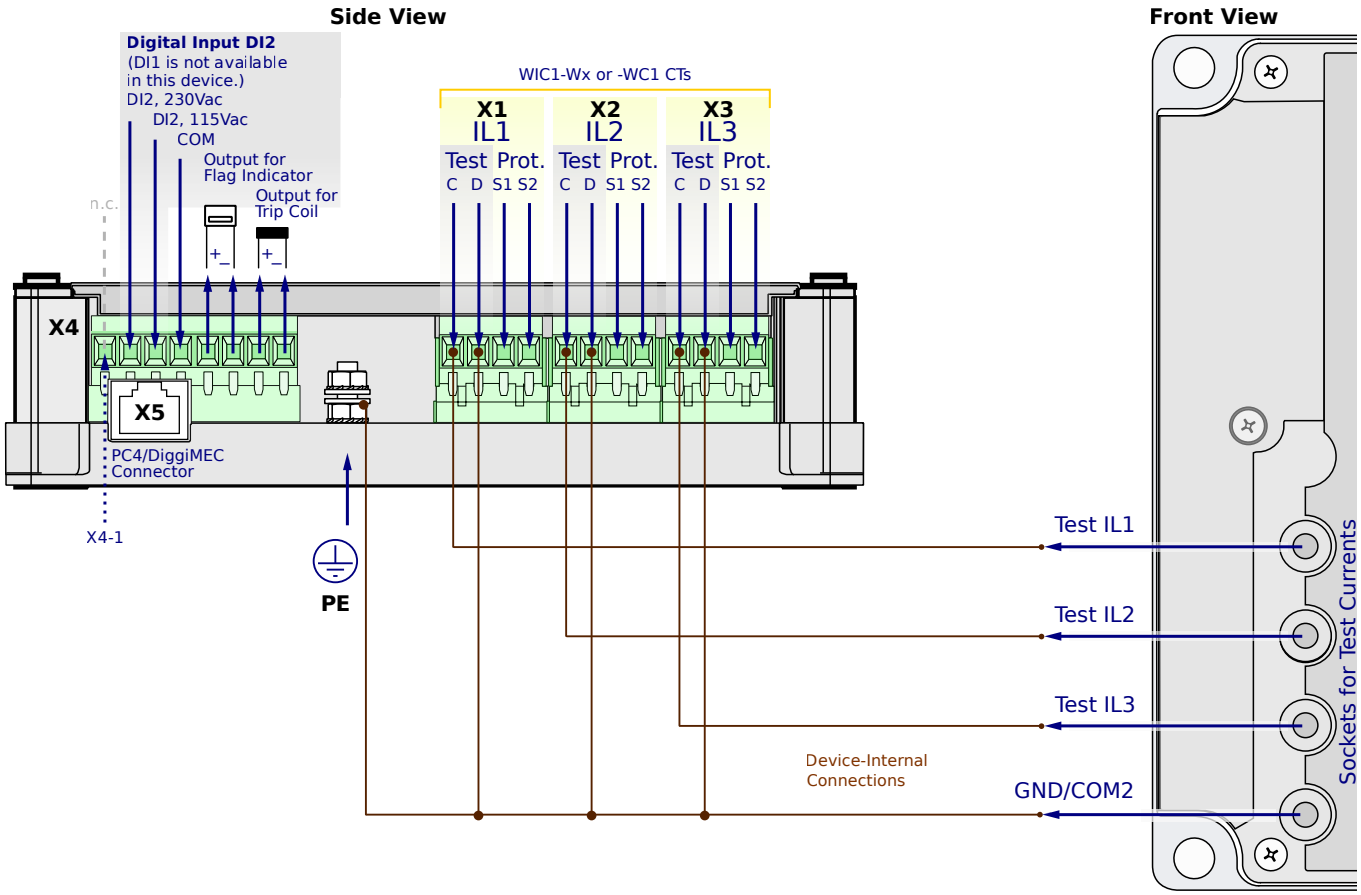


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2PA0

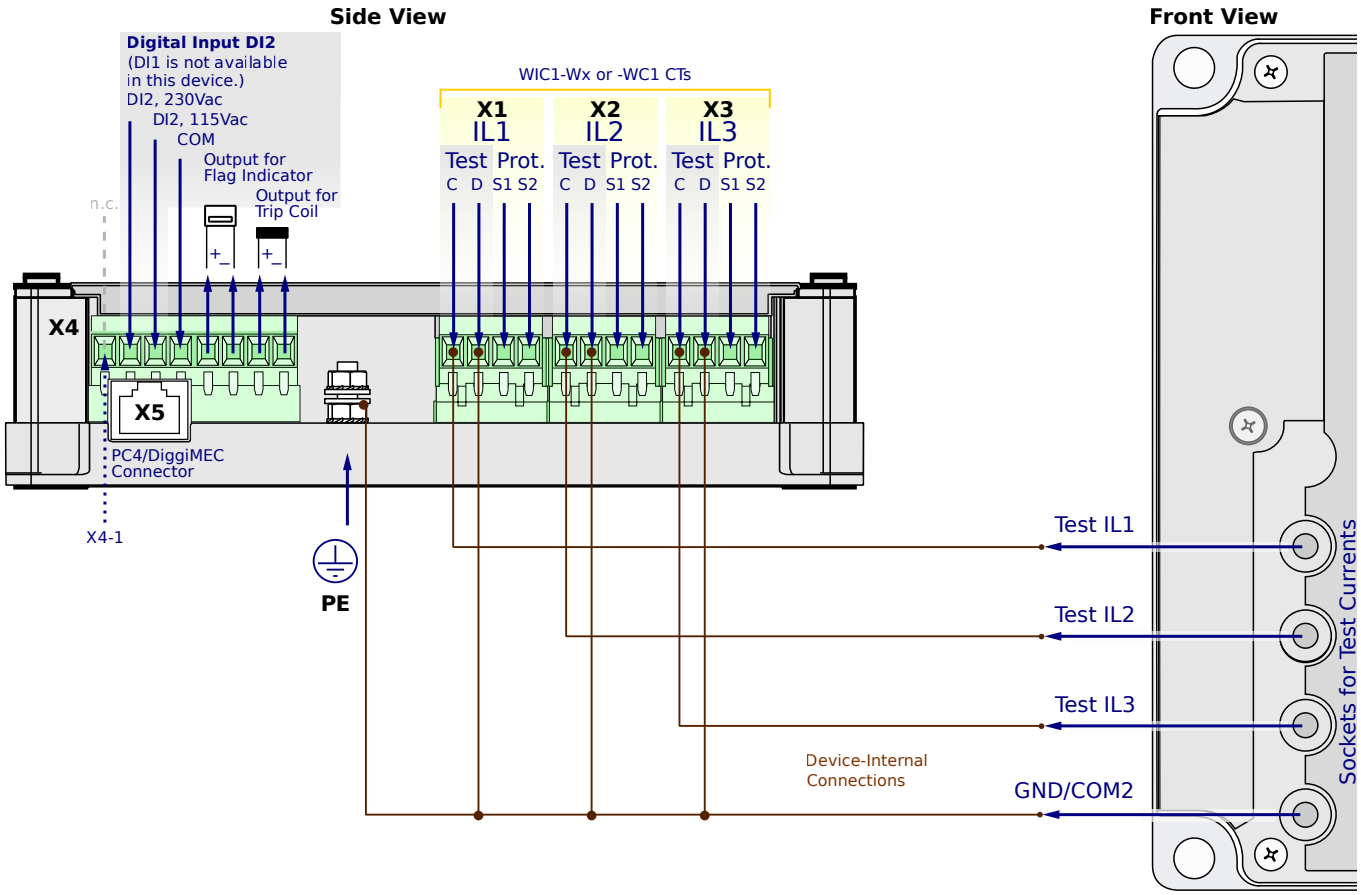


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6NC2PAH

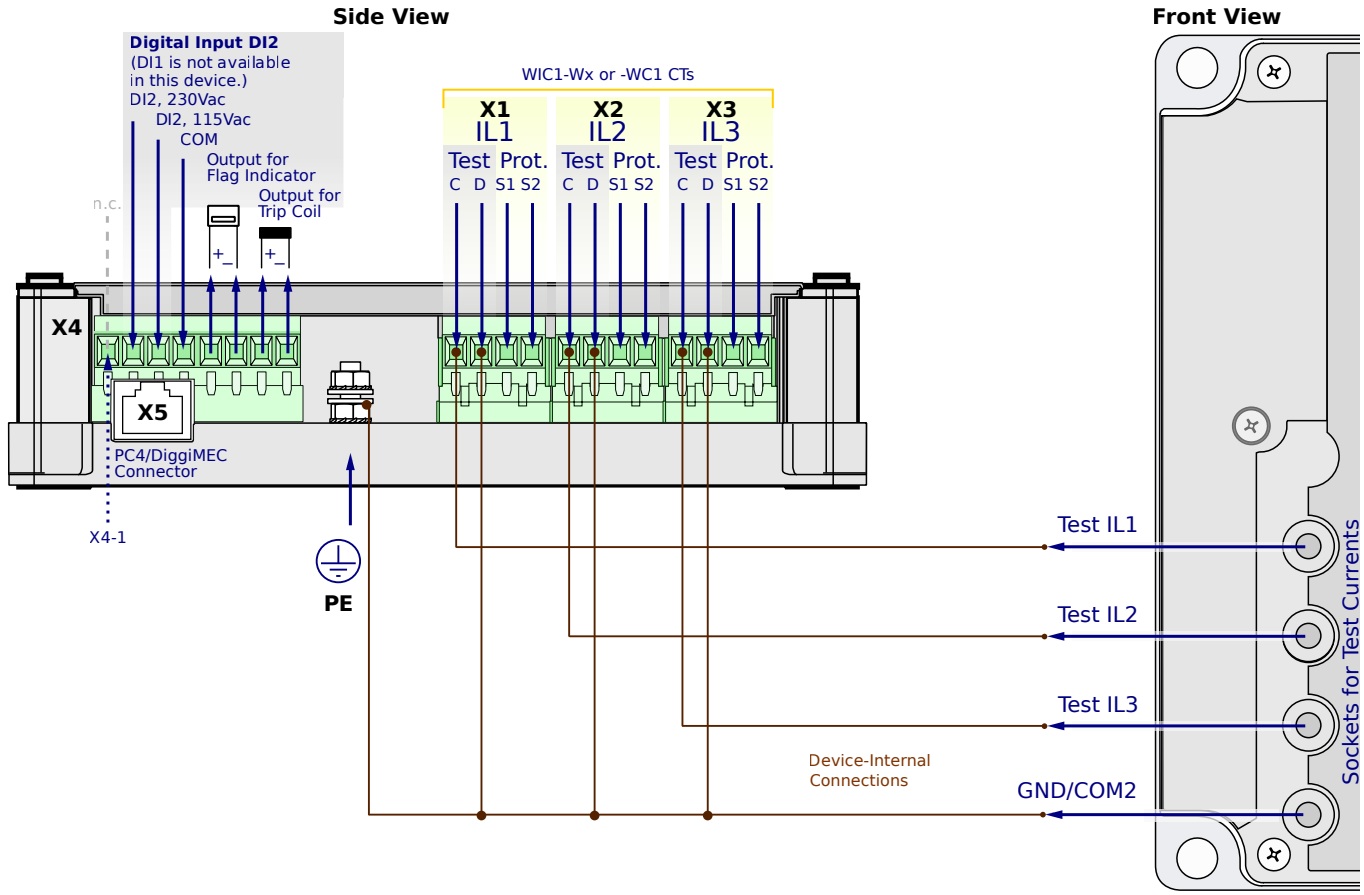


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1SA0

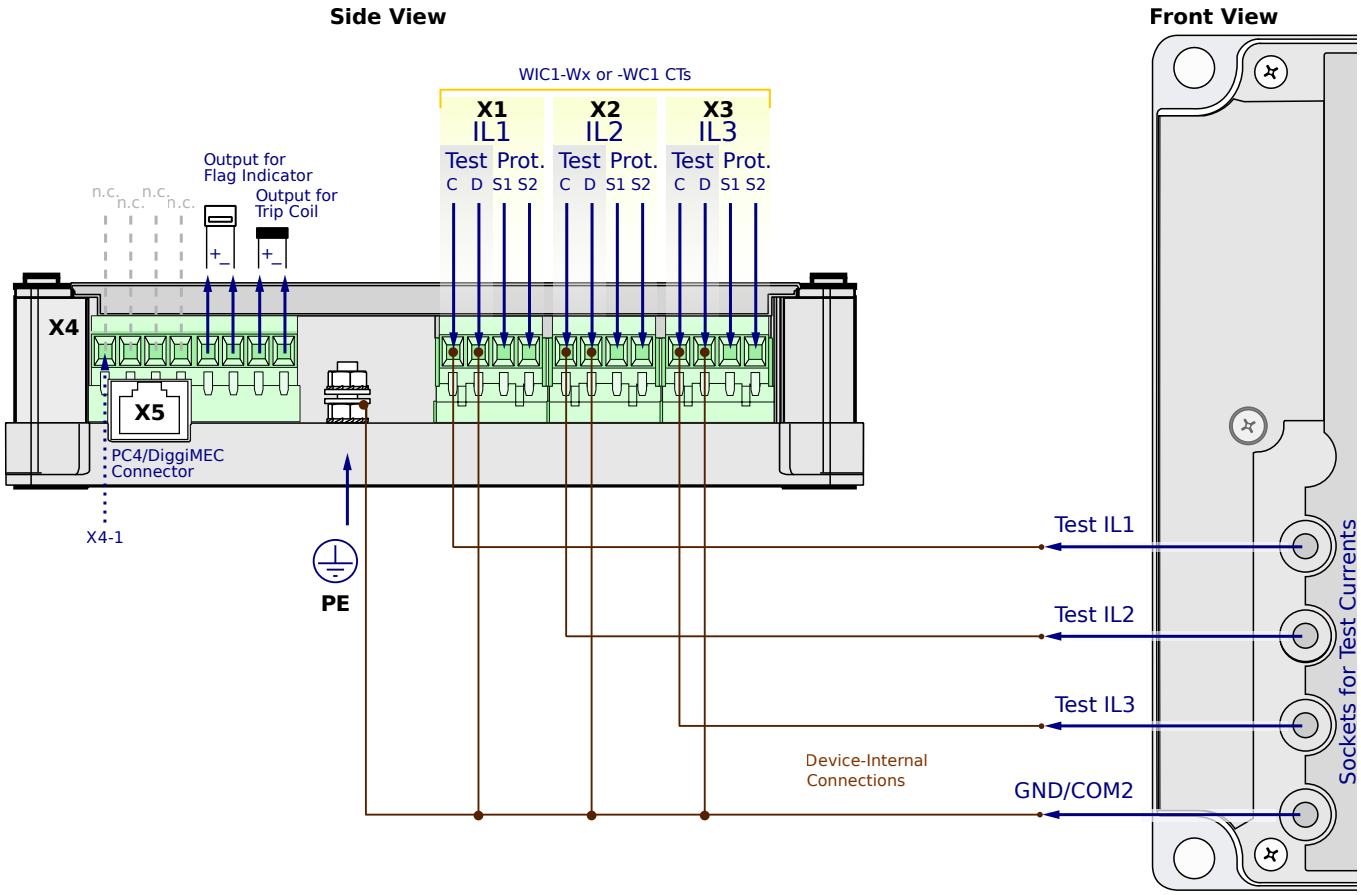


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1SAH

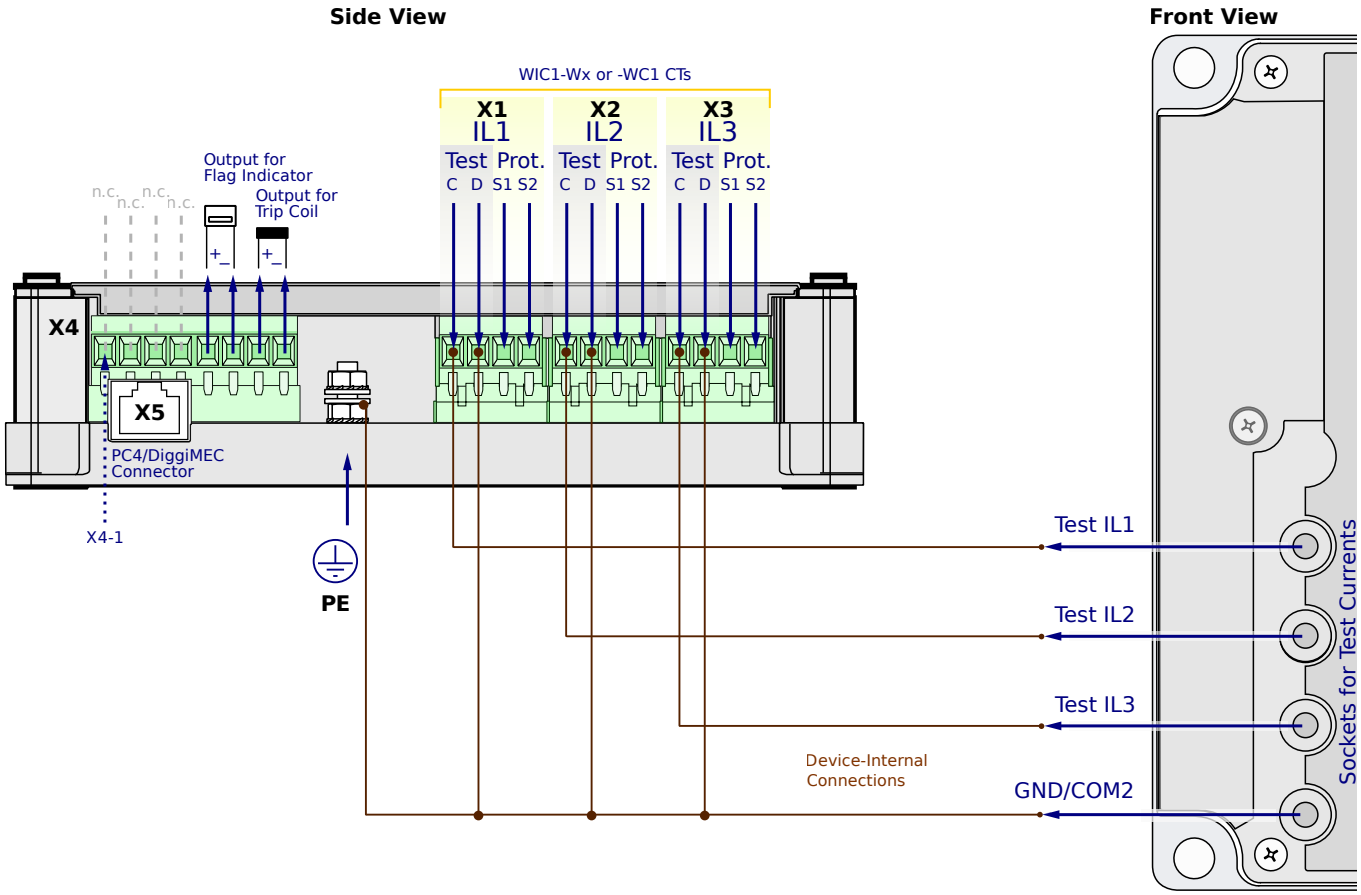


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1AA0

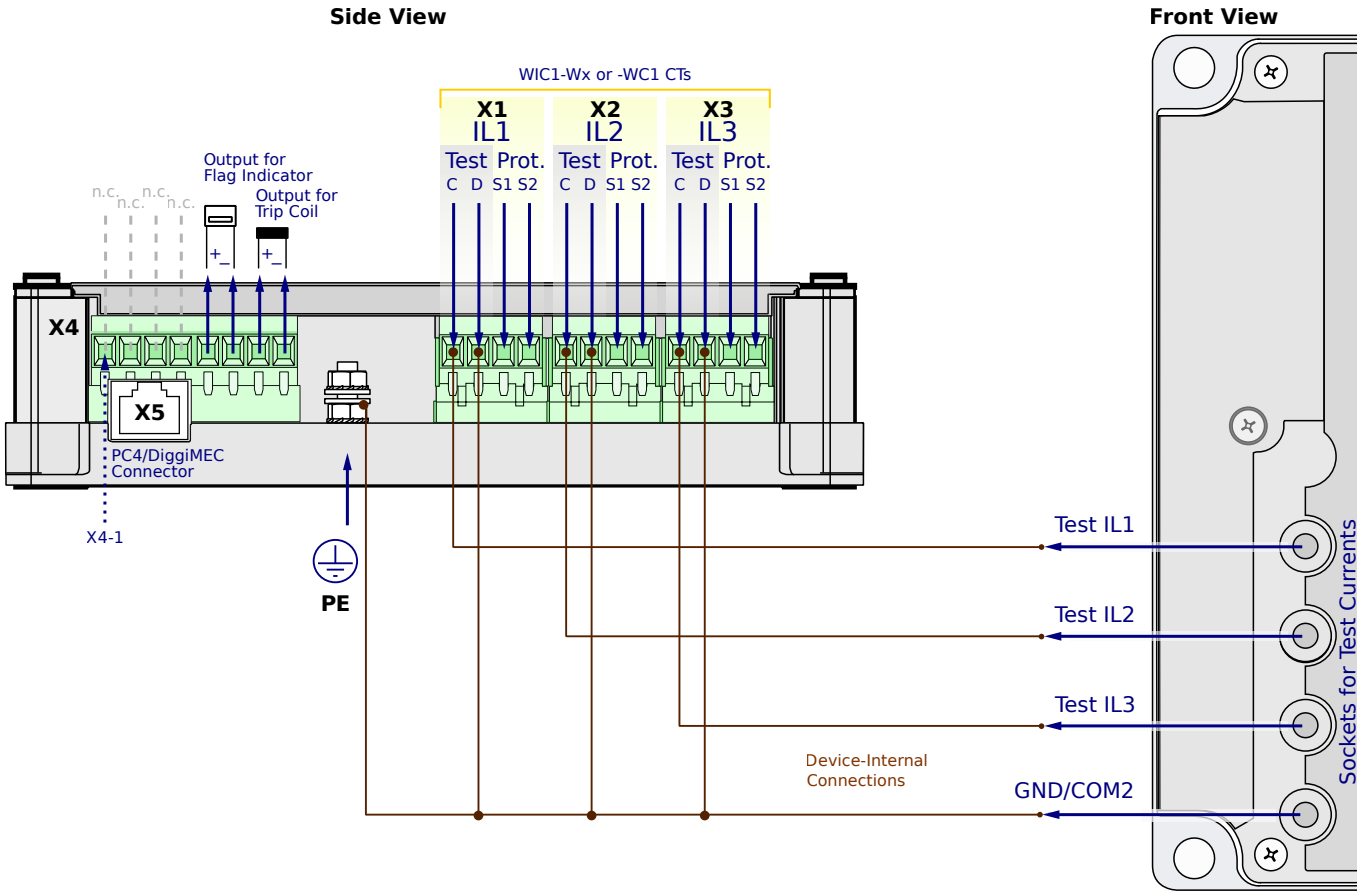


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1AAH

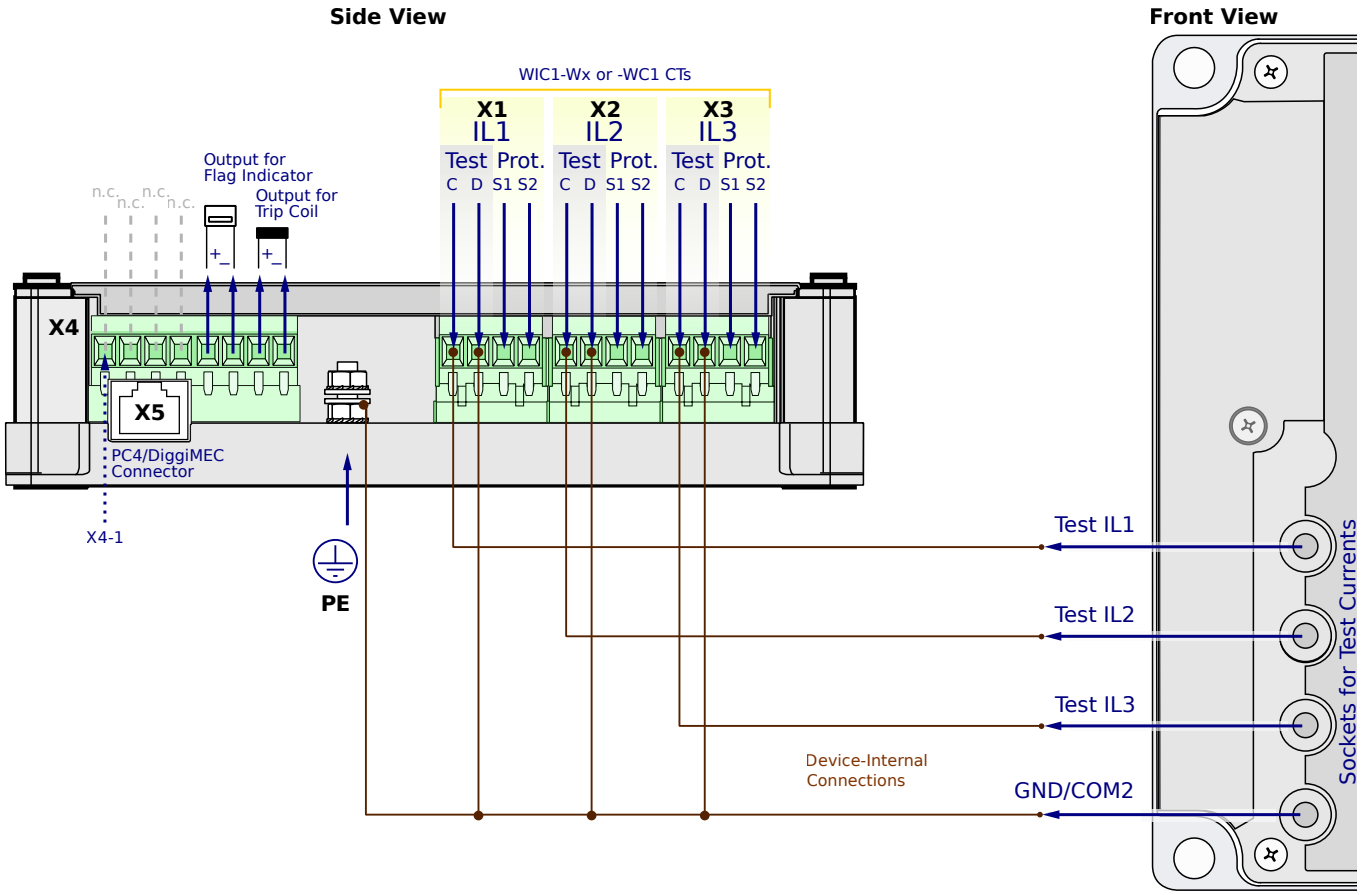


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1PA0

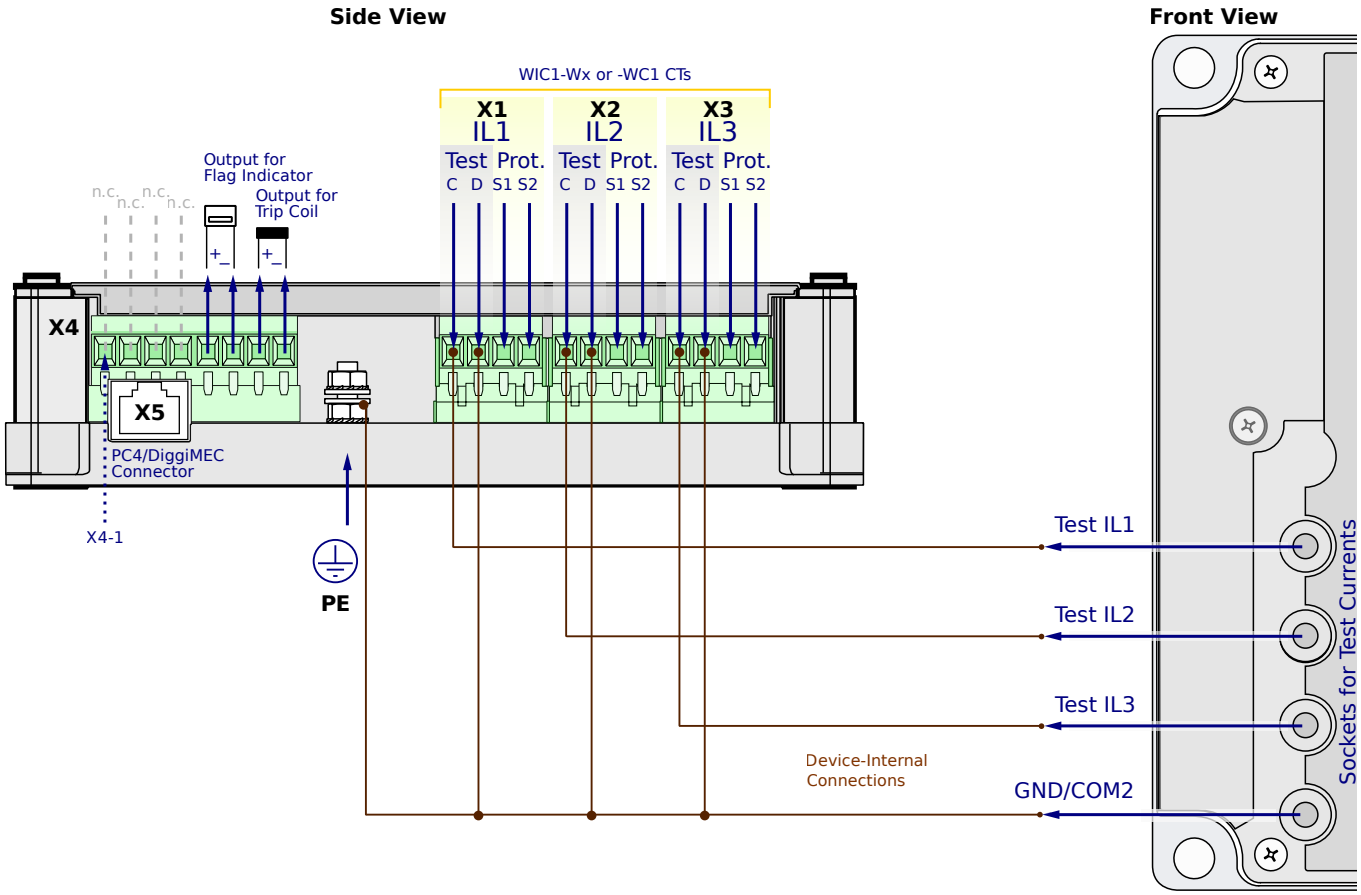


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN1PAH

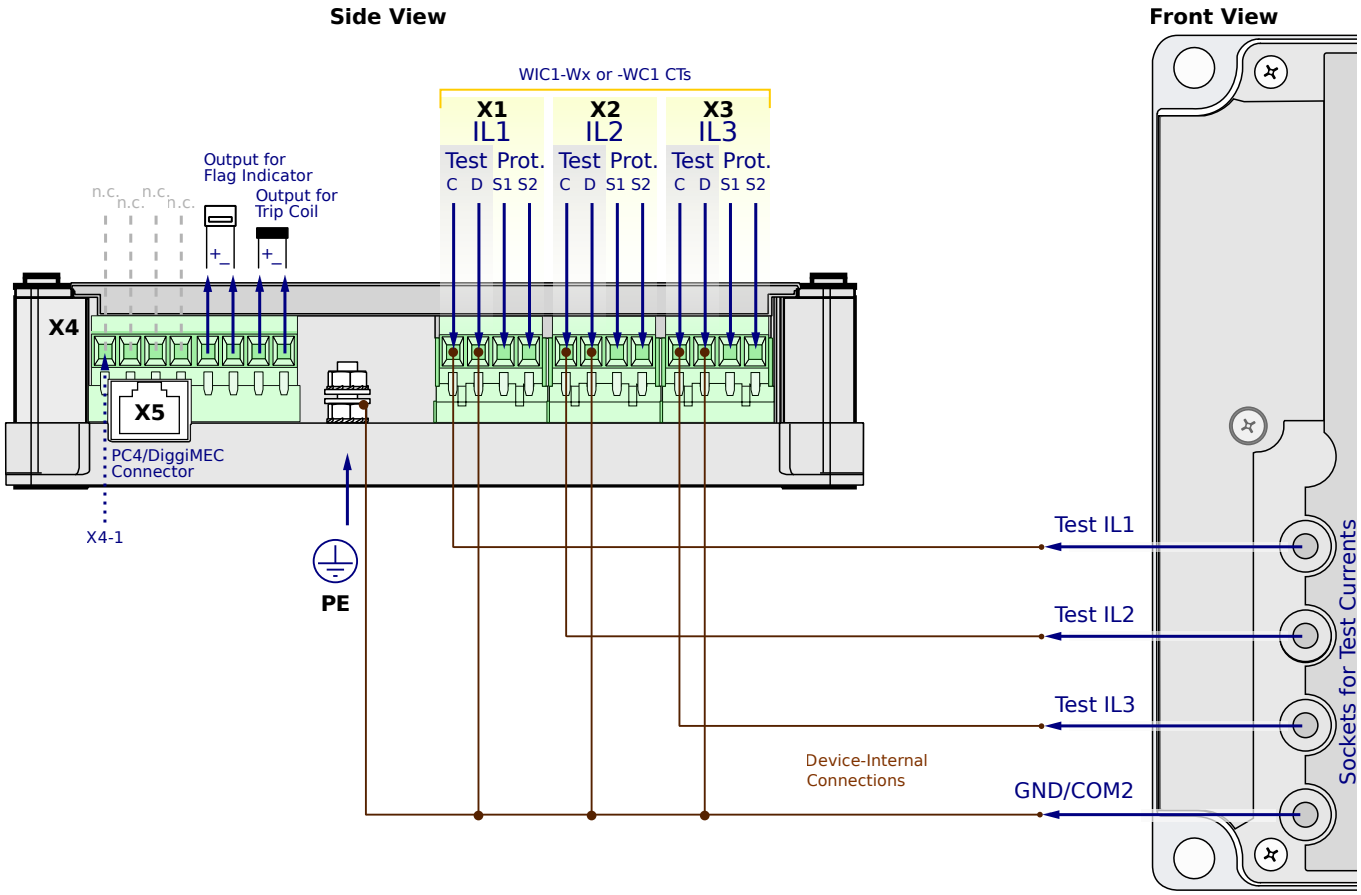


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2SA0

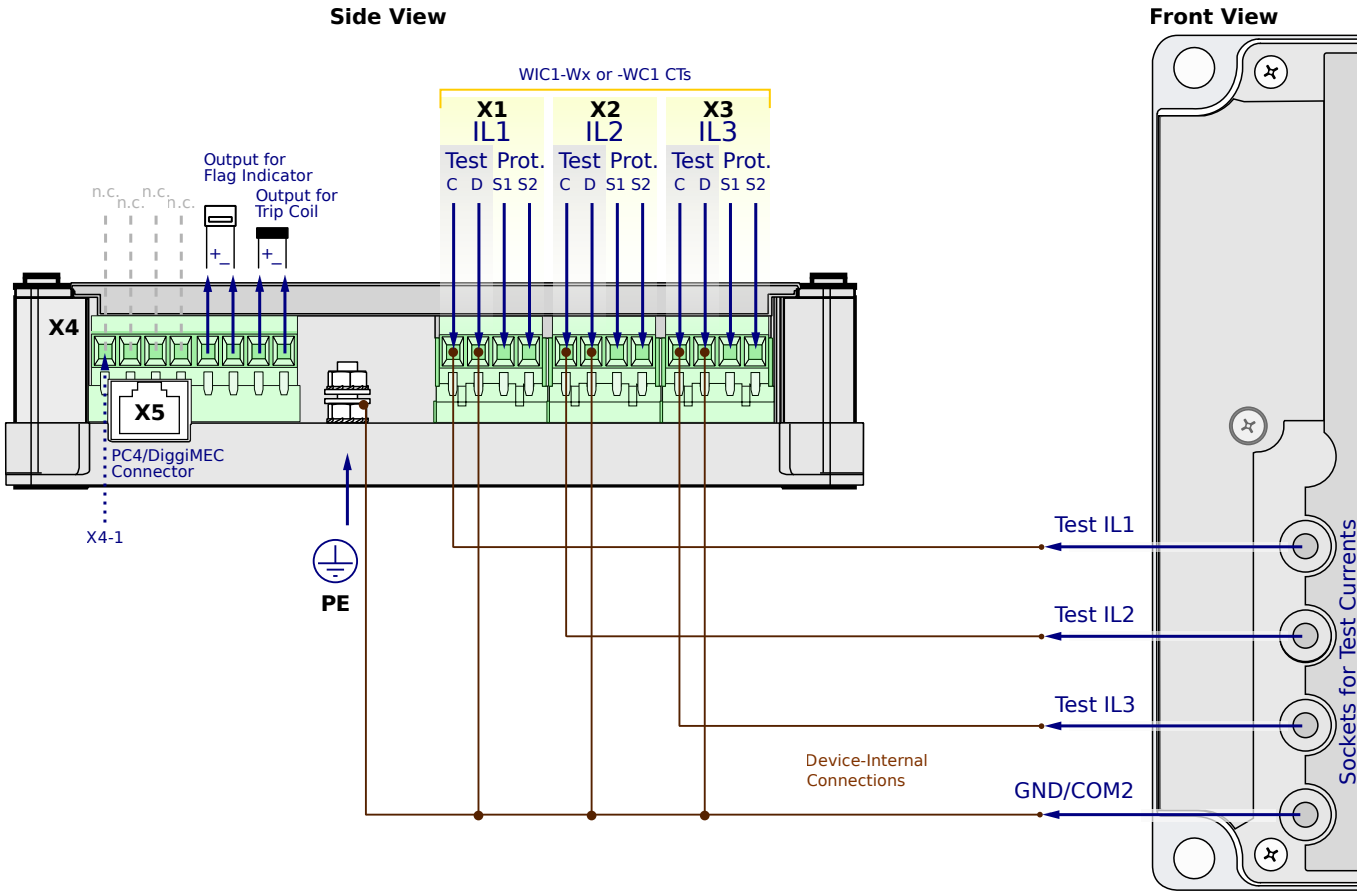


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2SAH

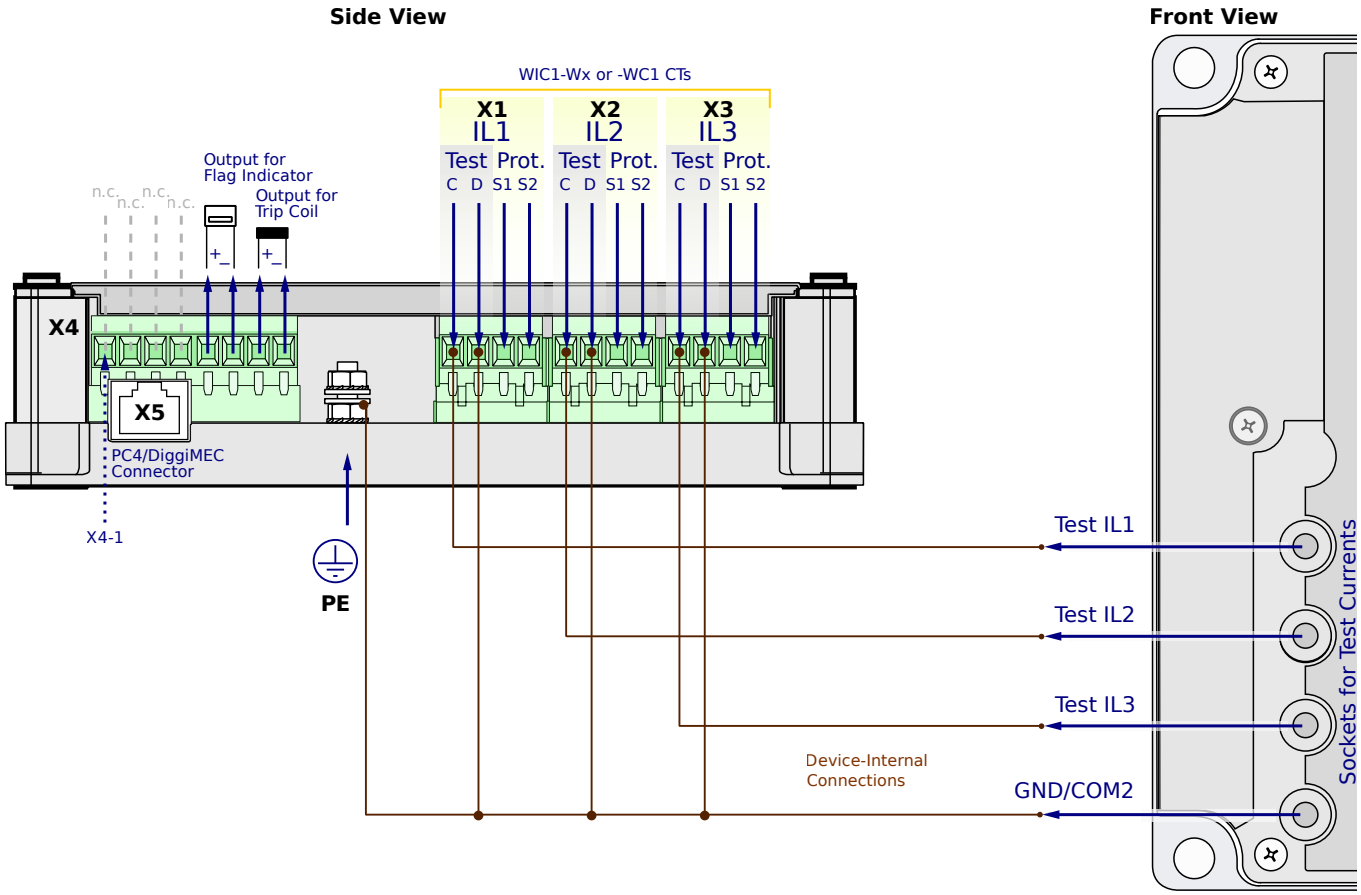


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2AA0

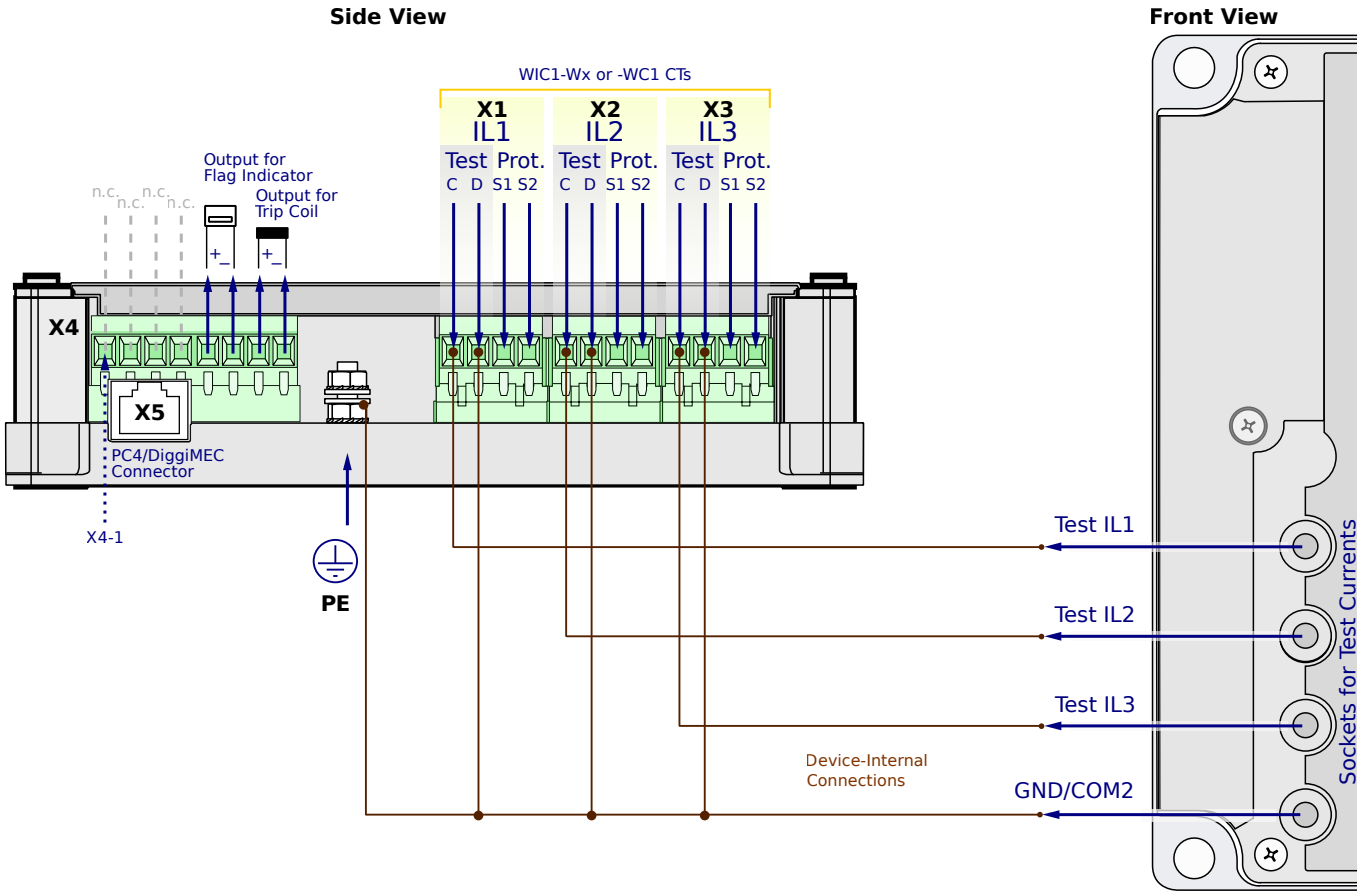


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2AAH

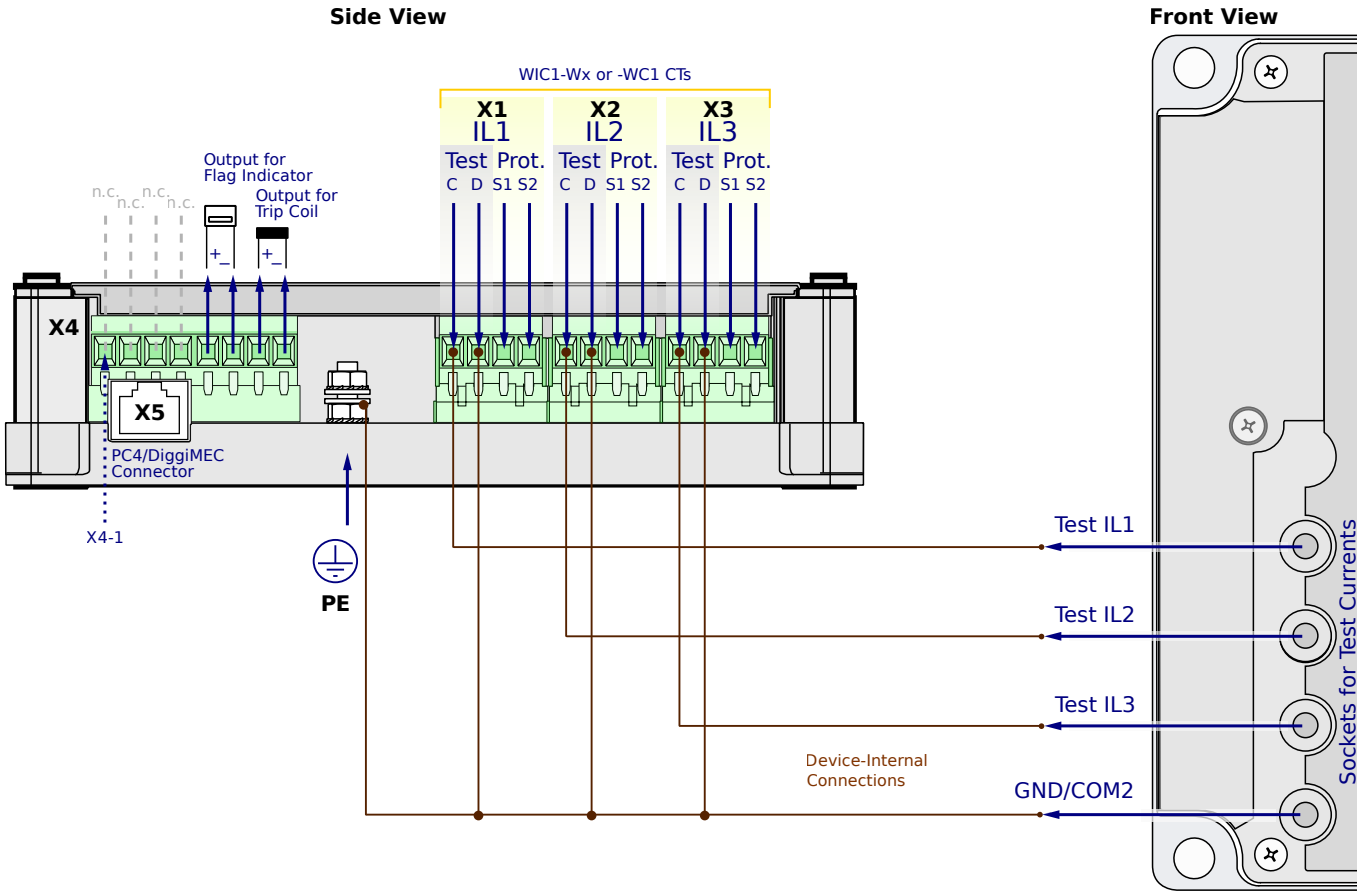


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2PA0

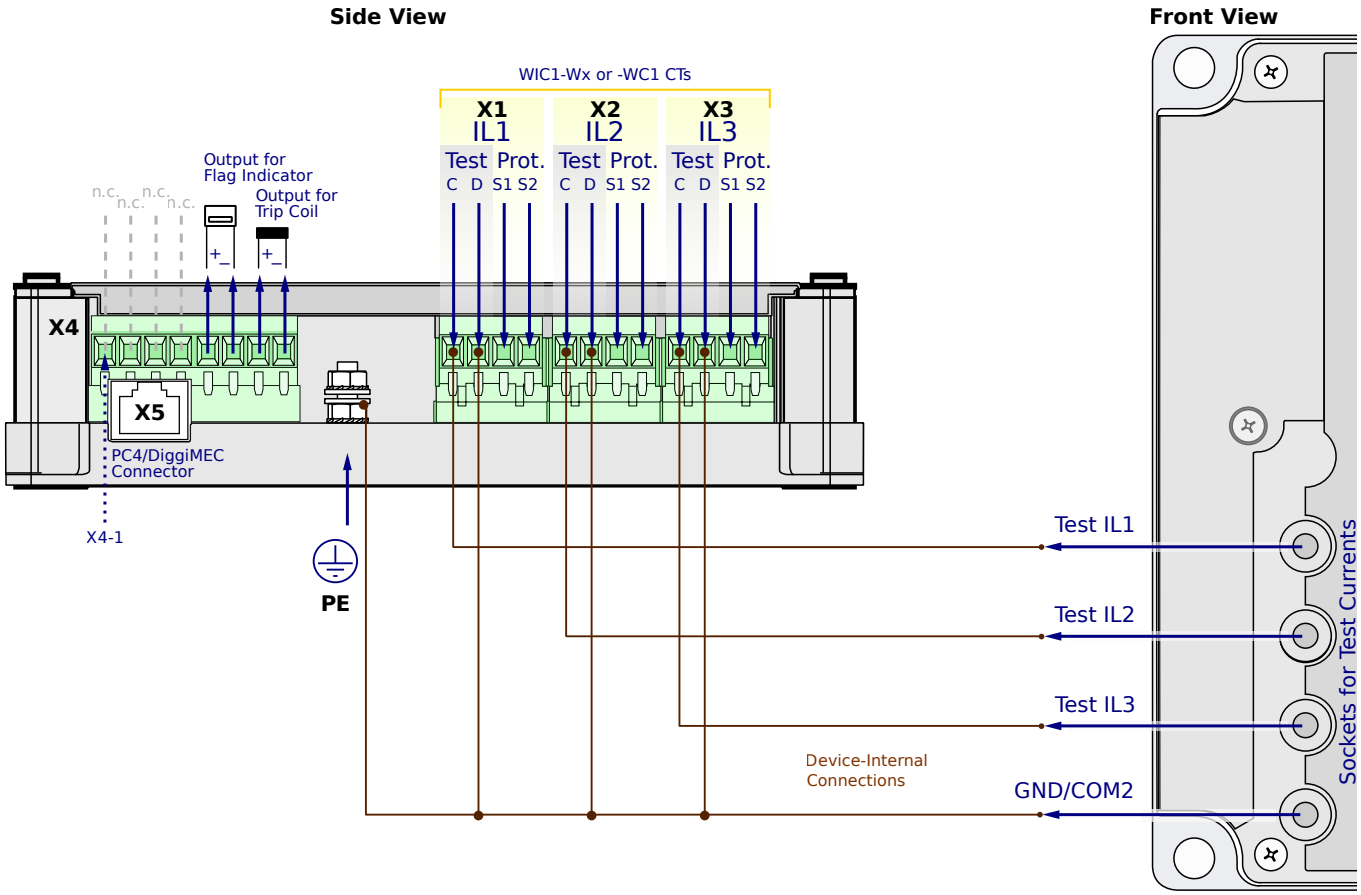


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FN2PAH

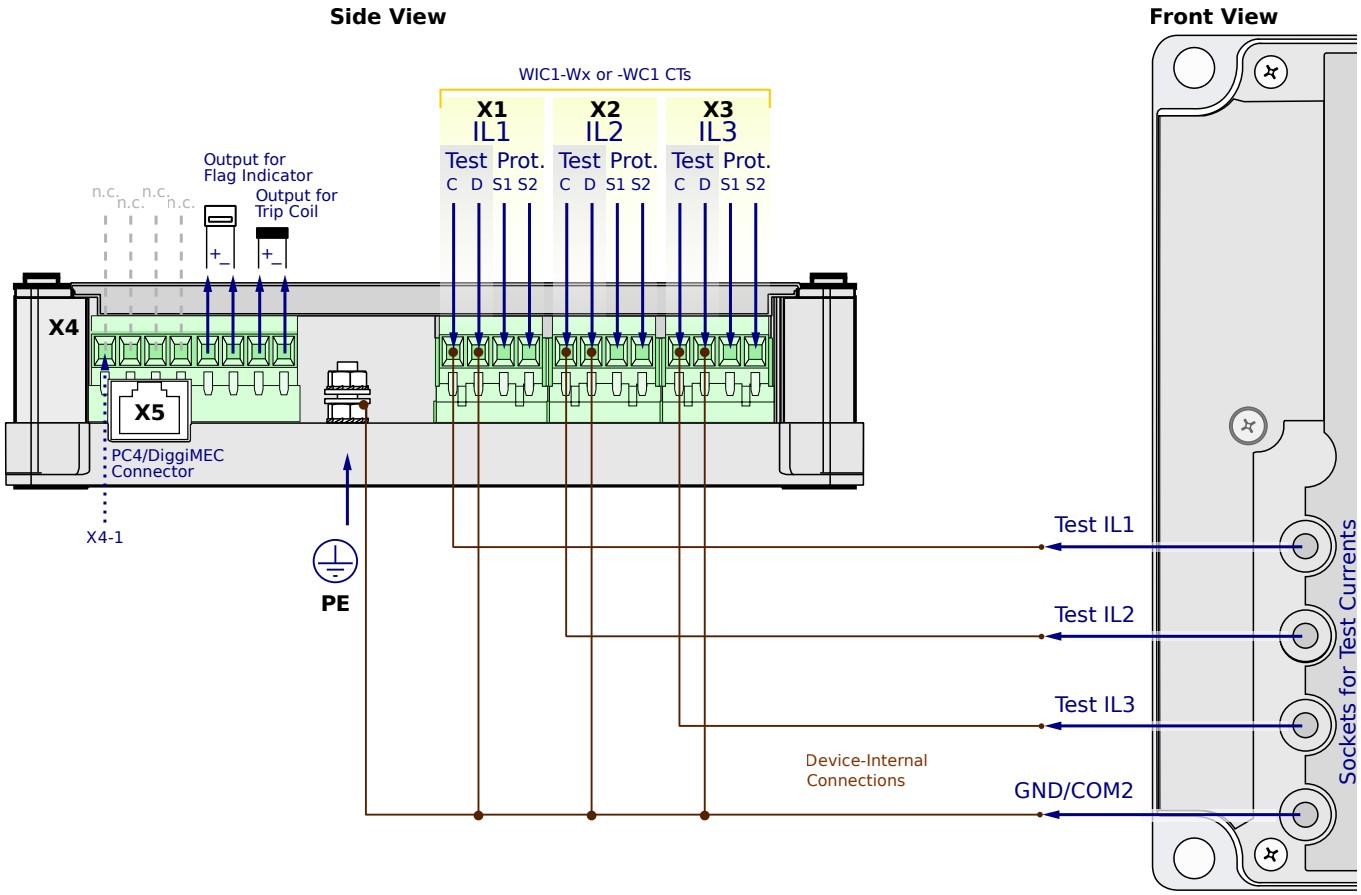


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1SA0

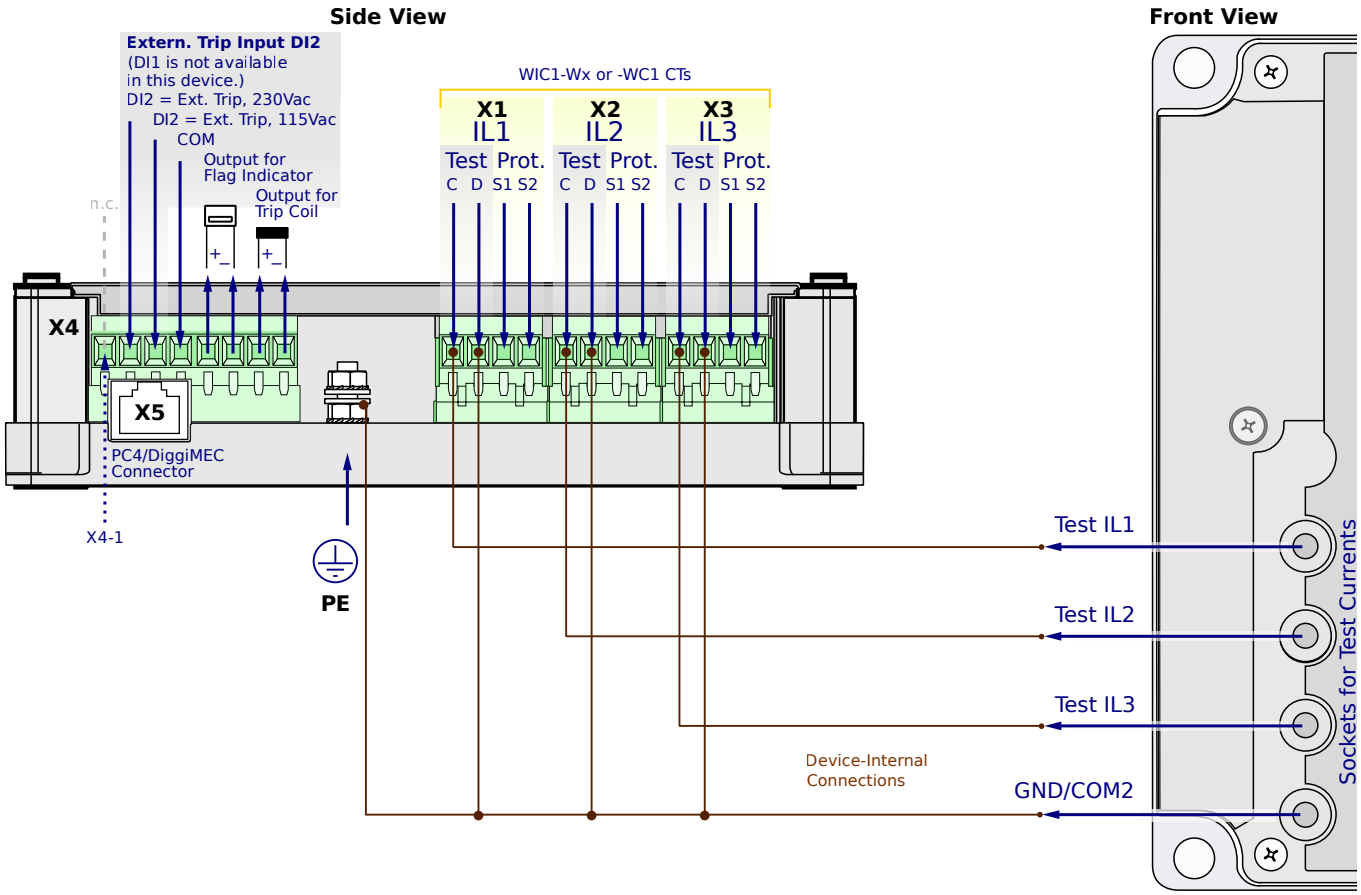


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1SAH

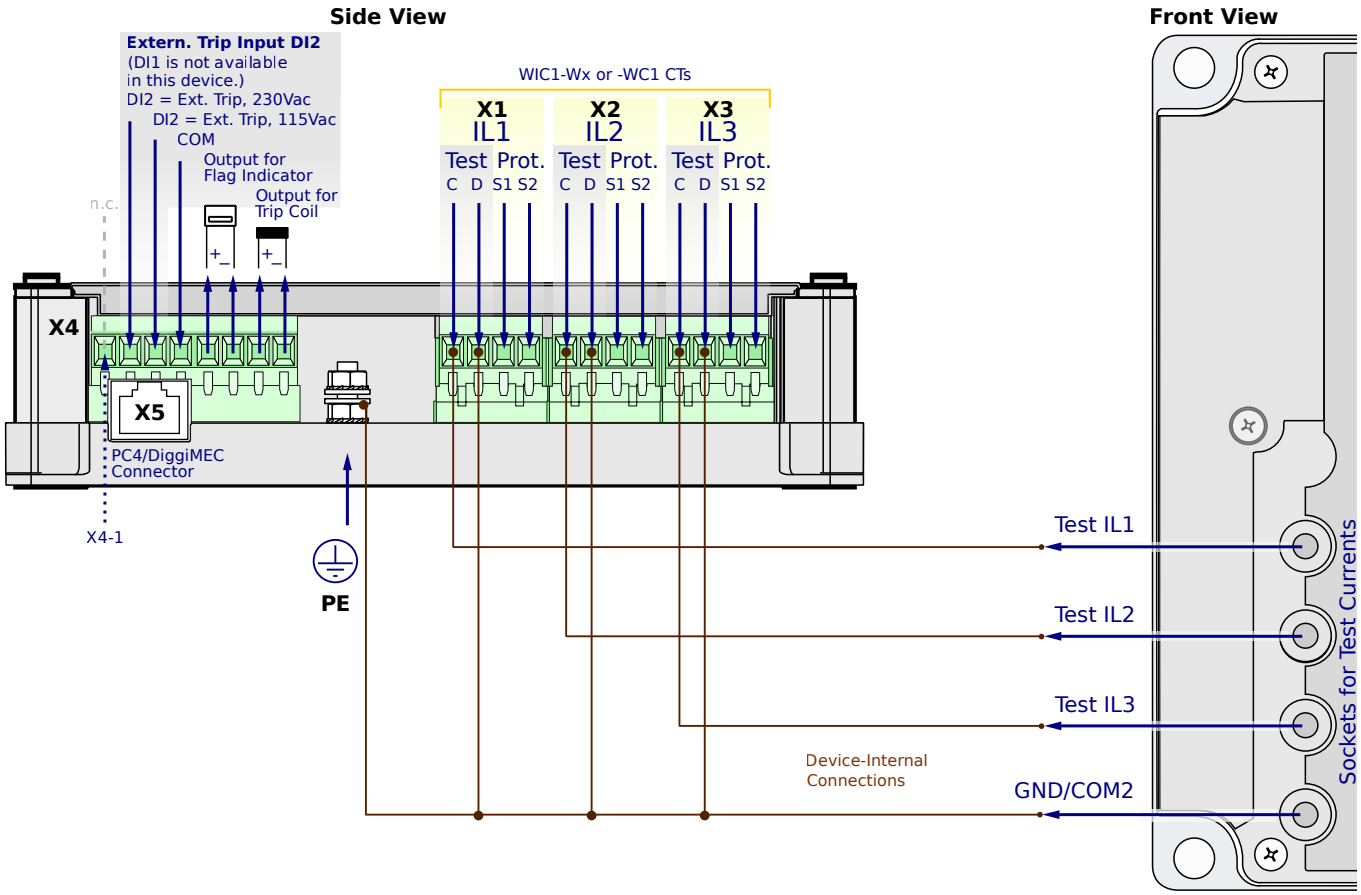


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1AA0

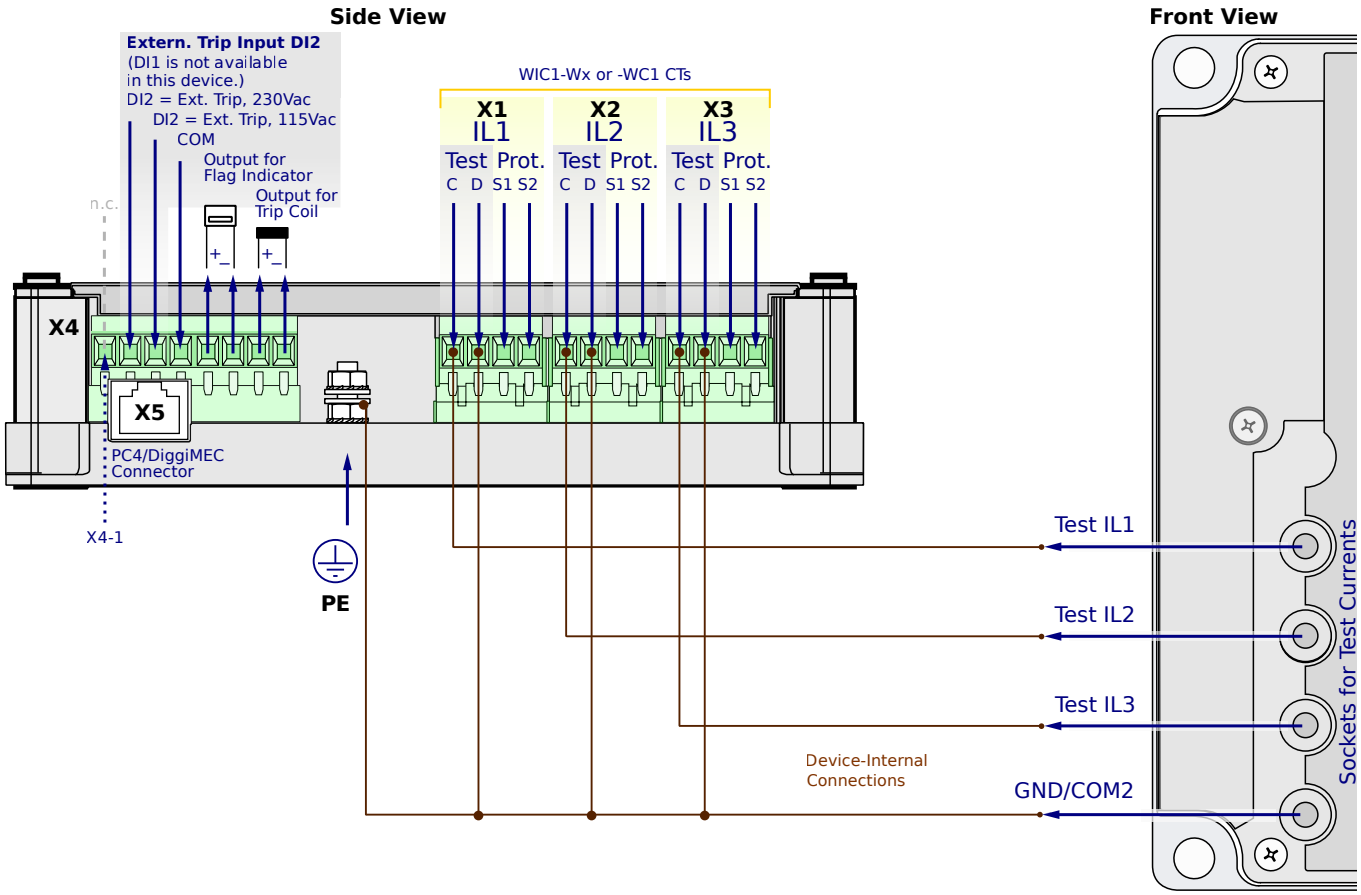


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1AAH

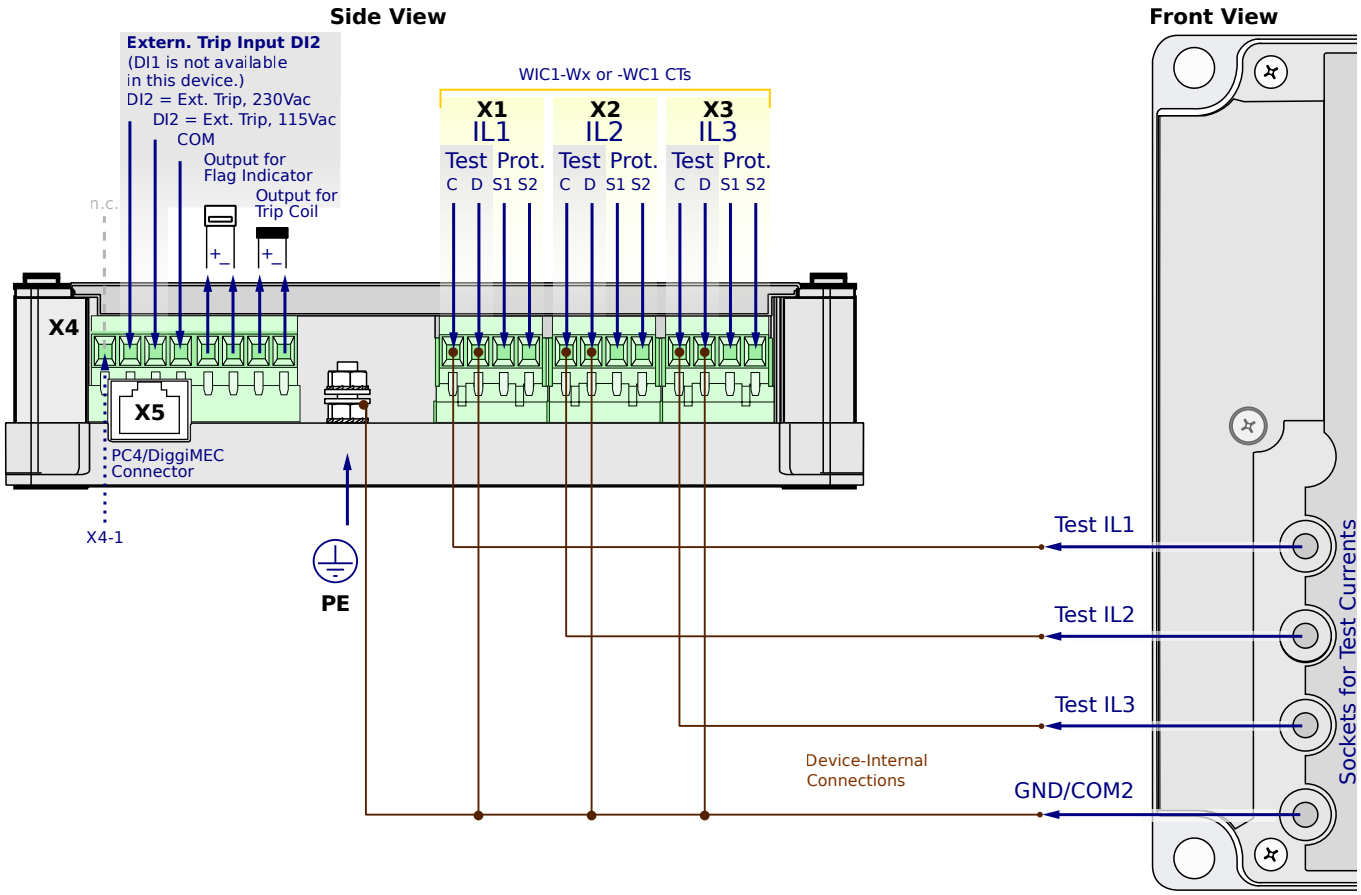


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1PA0

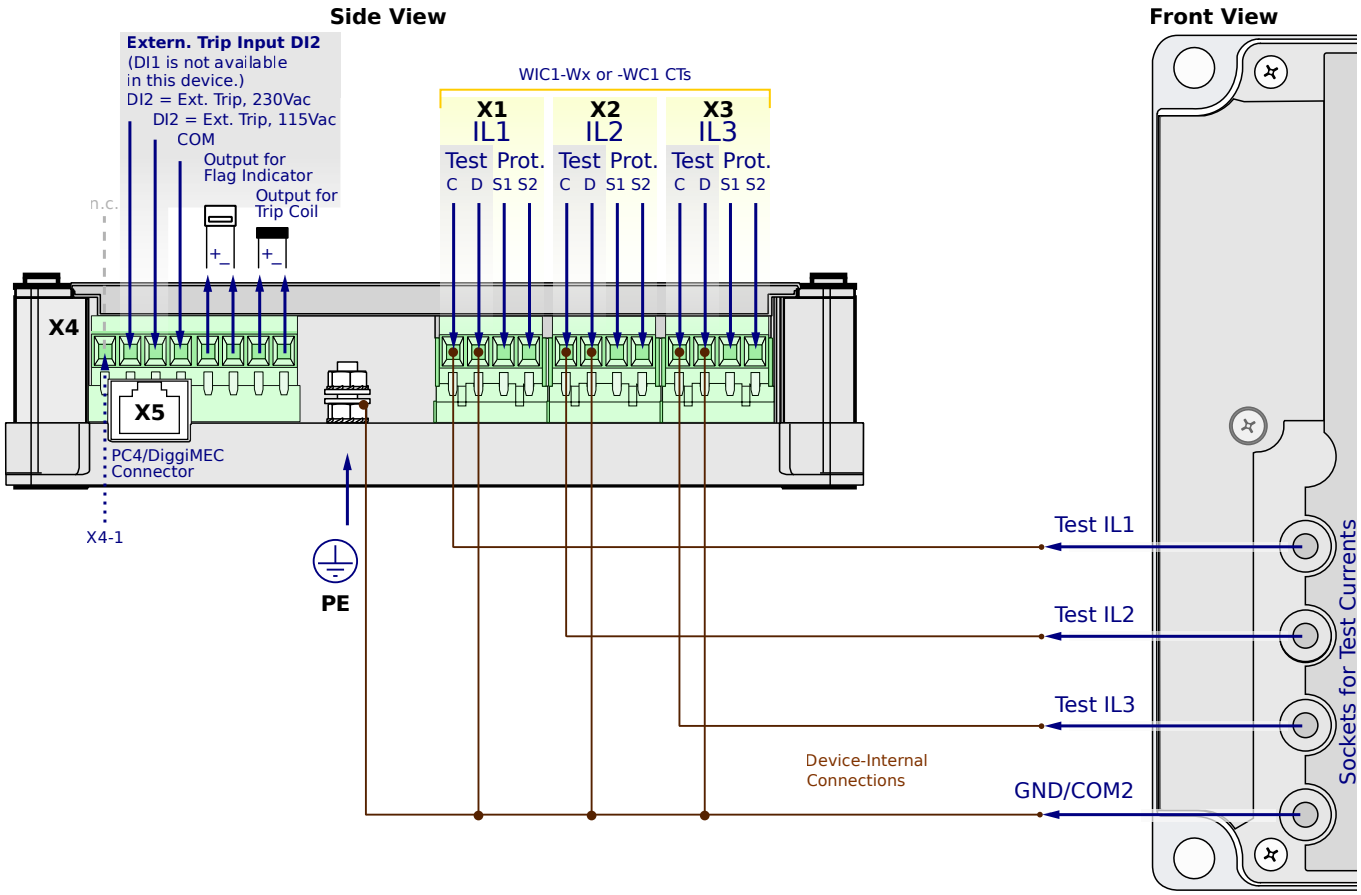


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF1PAH

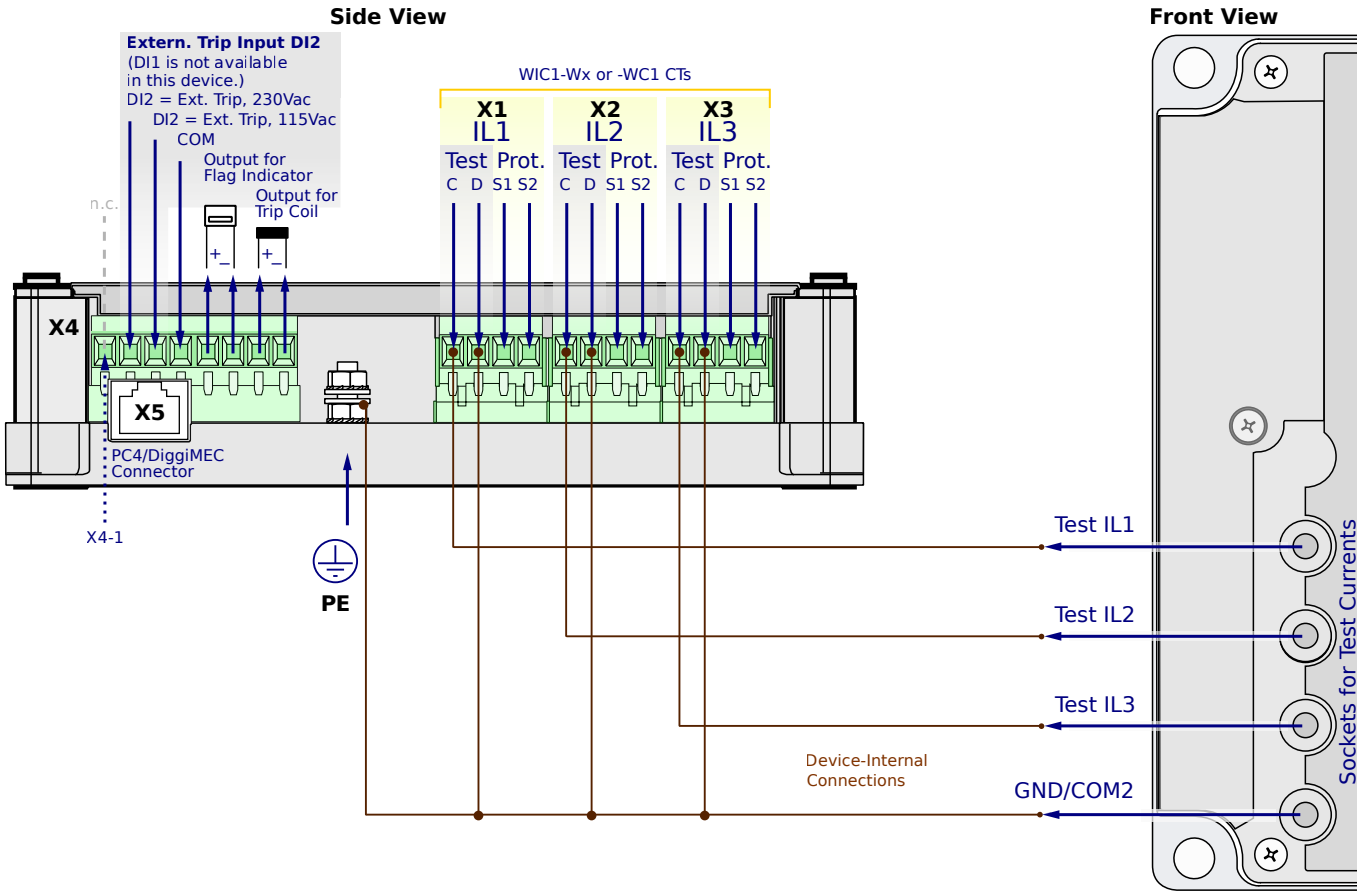


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2SA0

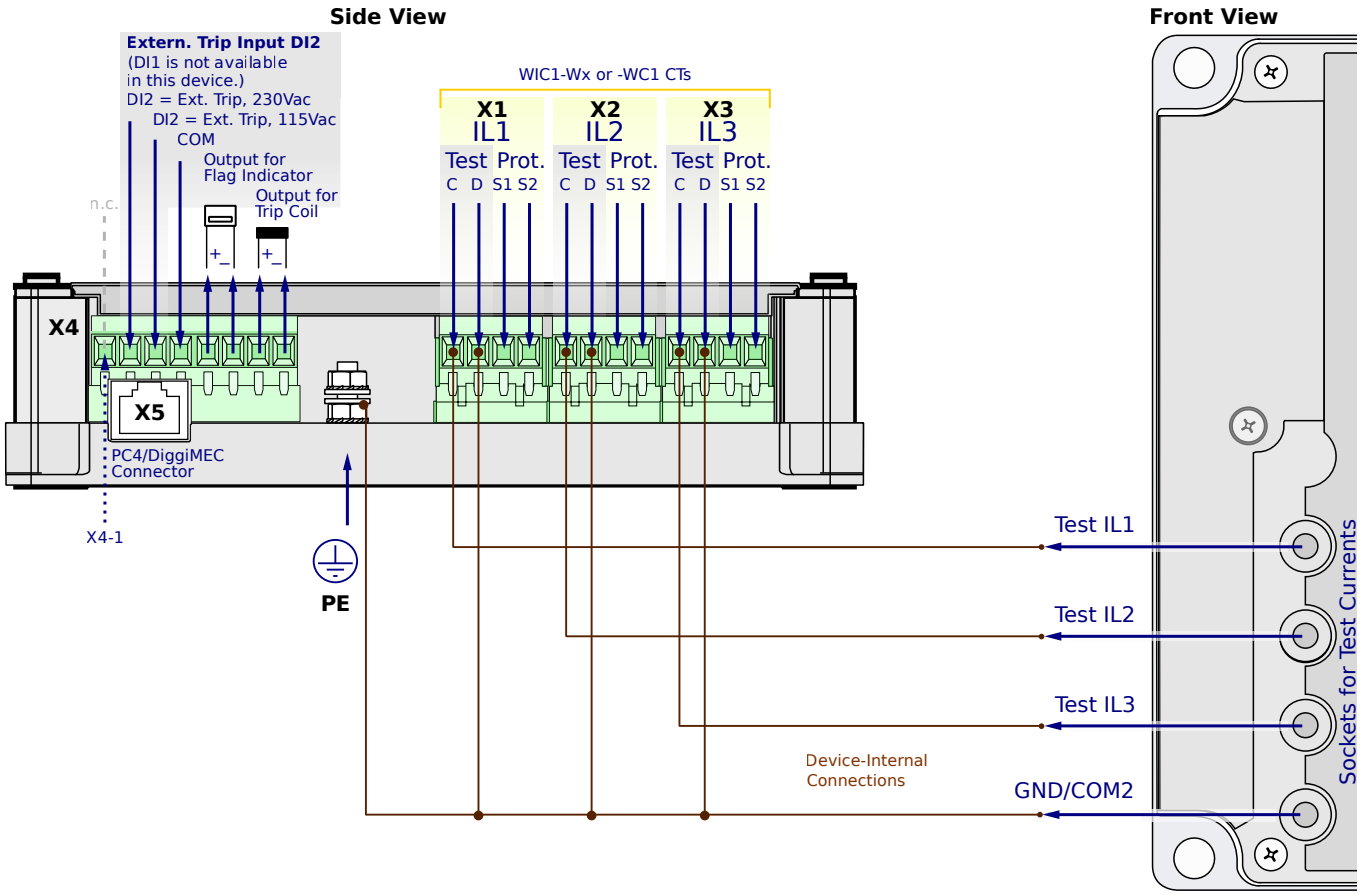


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2SAH

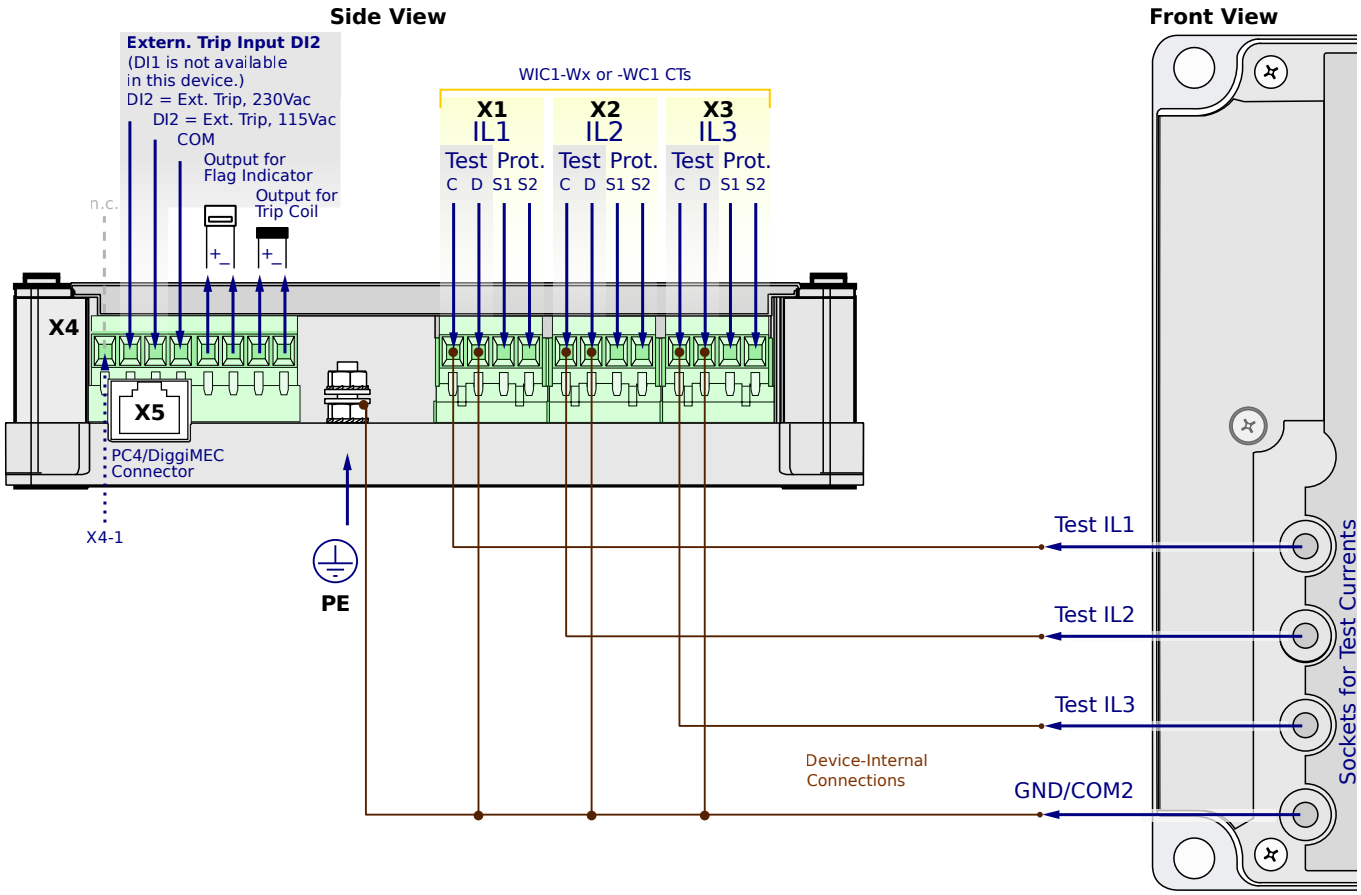


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2AA0

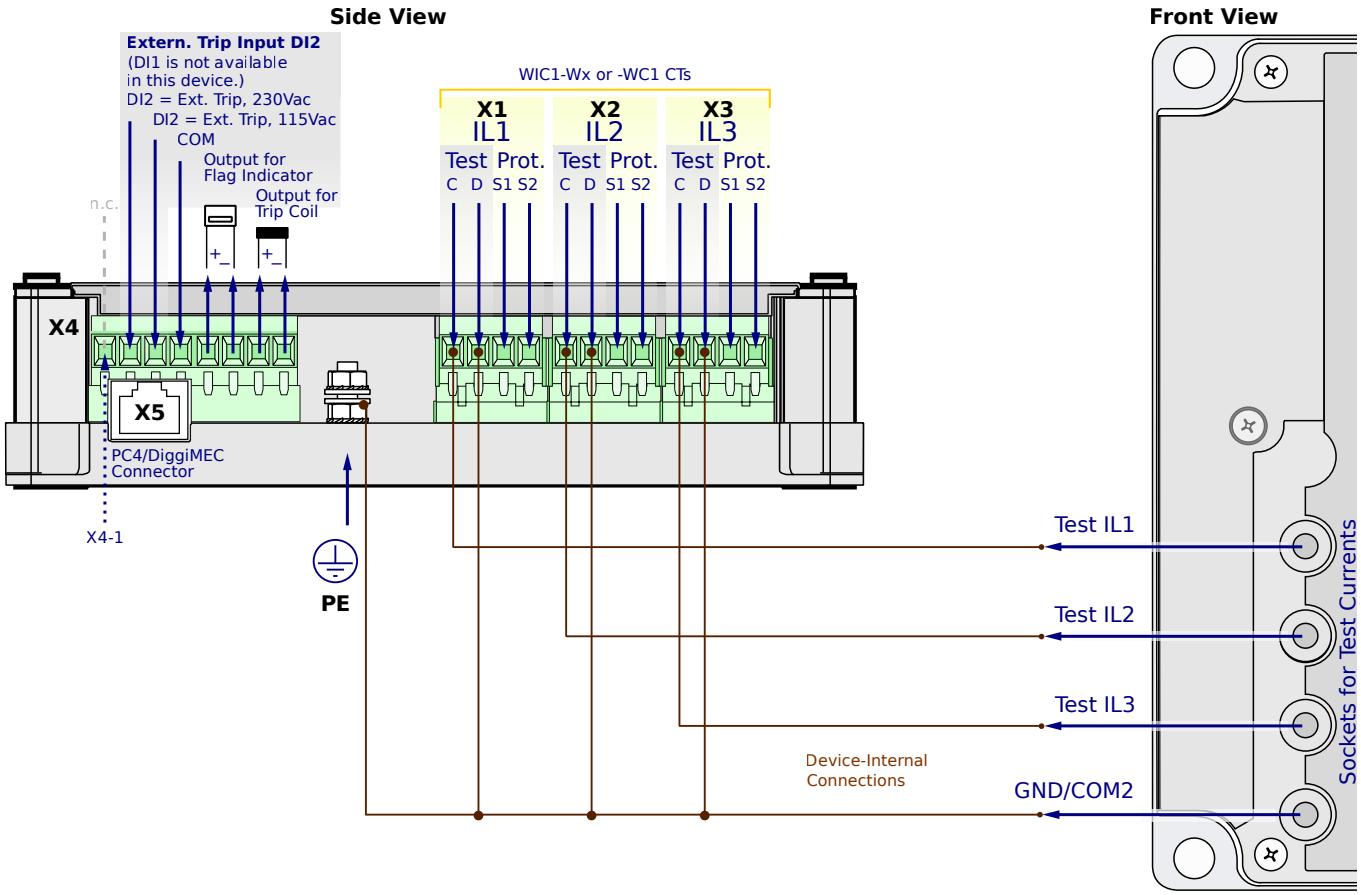


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2AAH

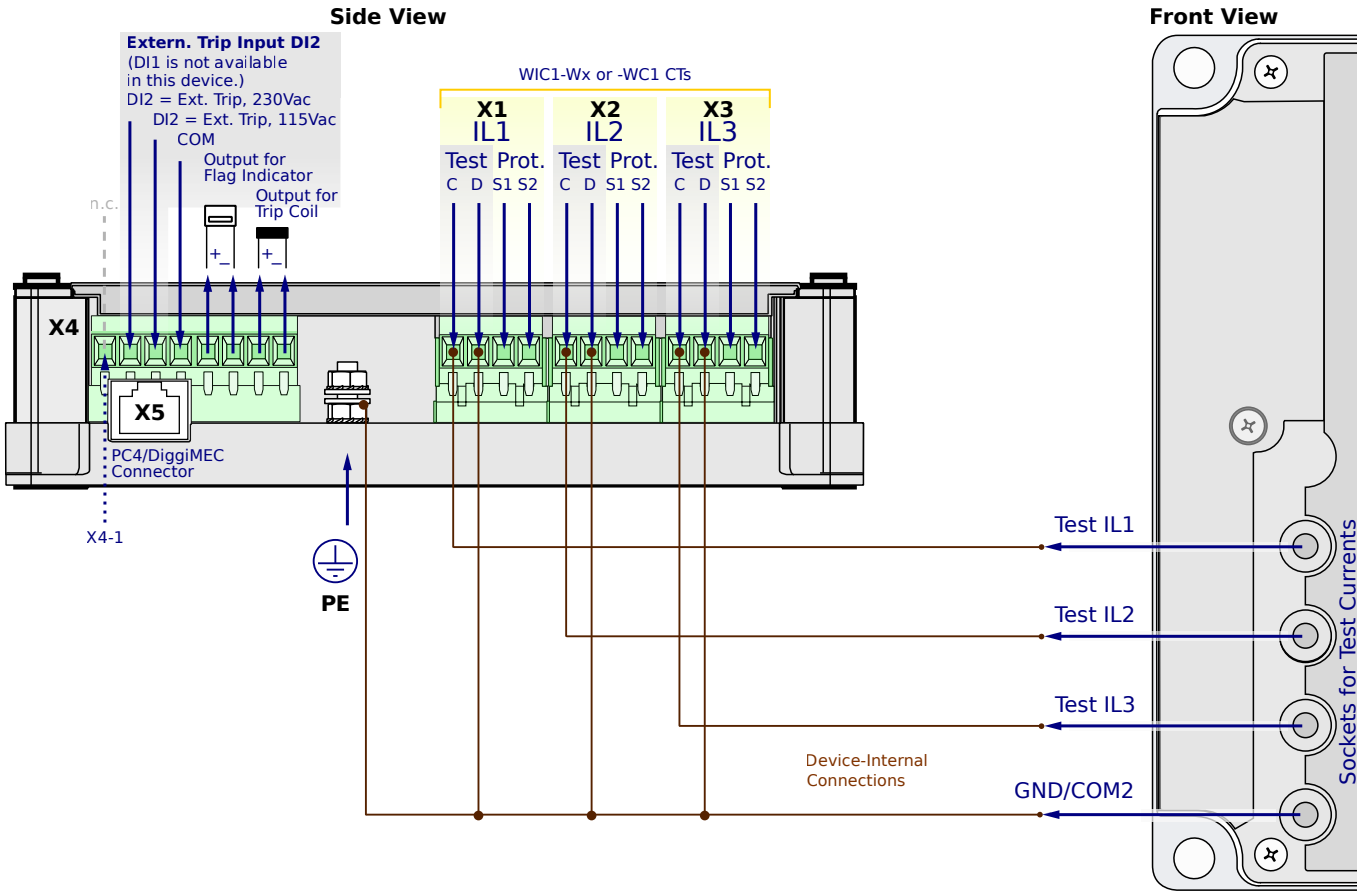


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2PA0

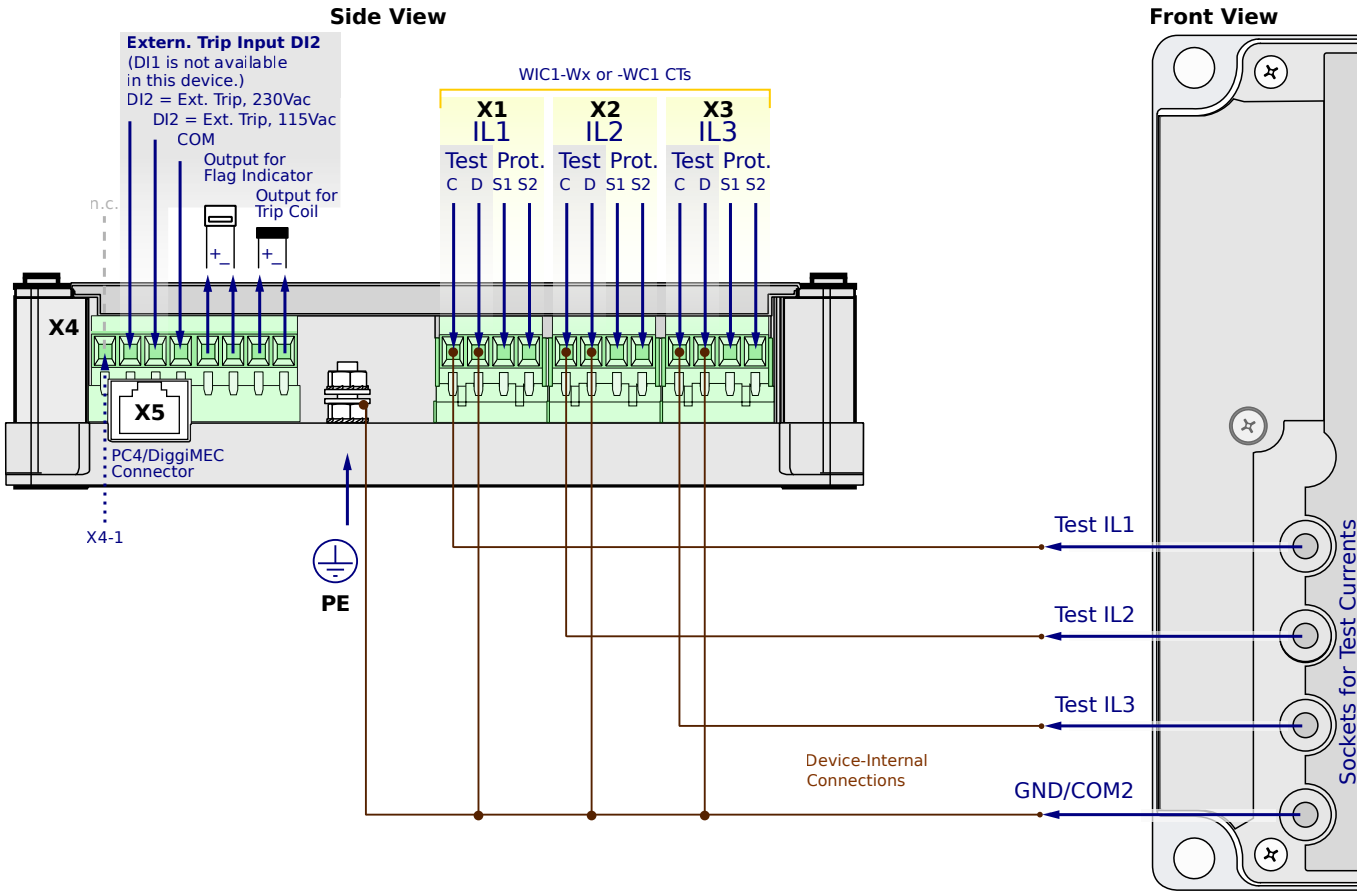


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FF2PAH

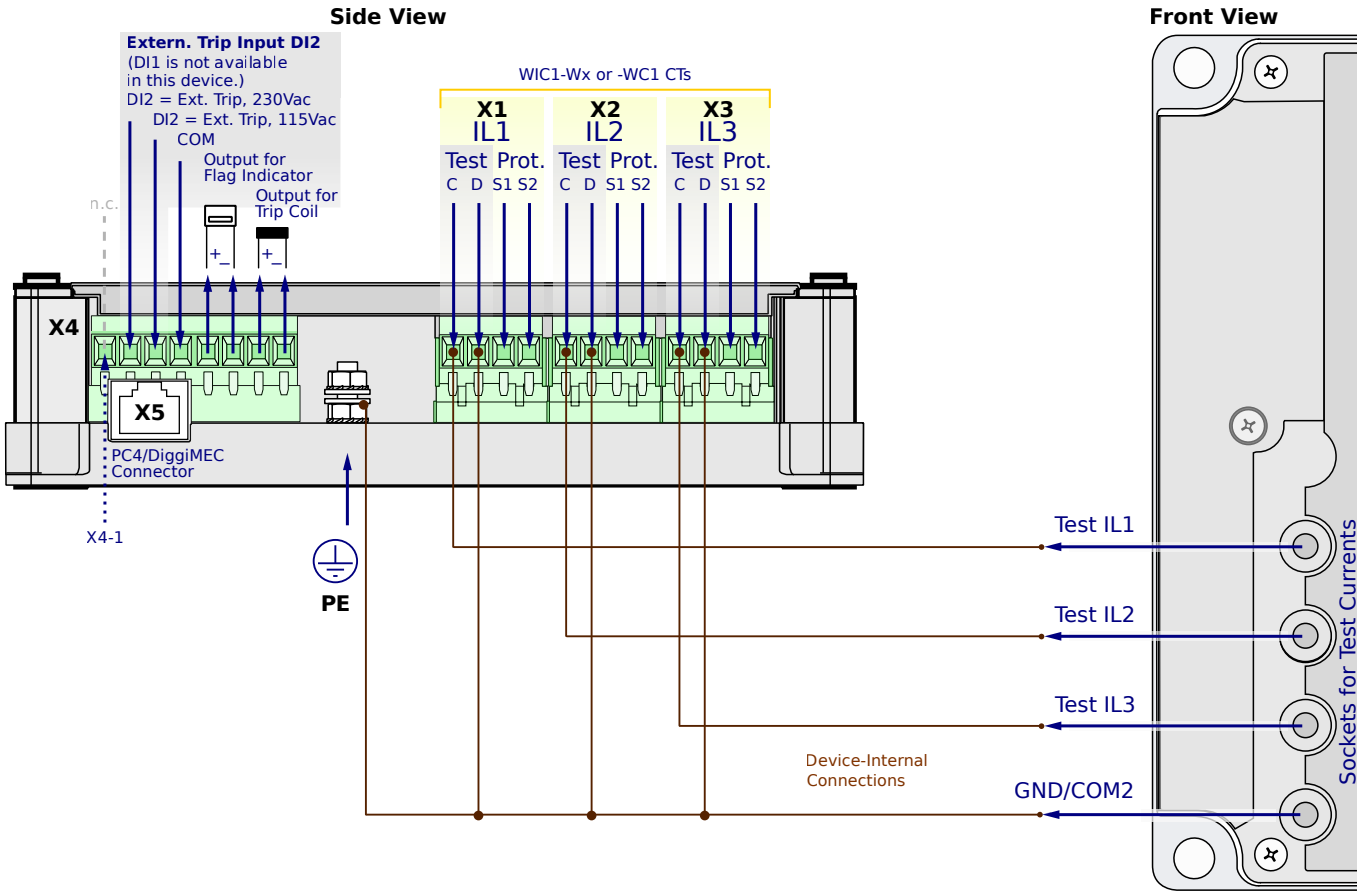


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1SA0

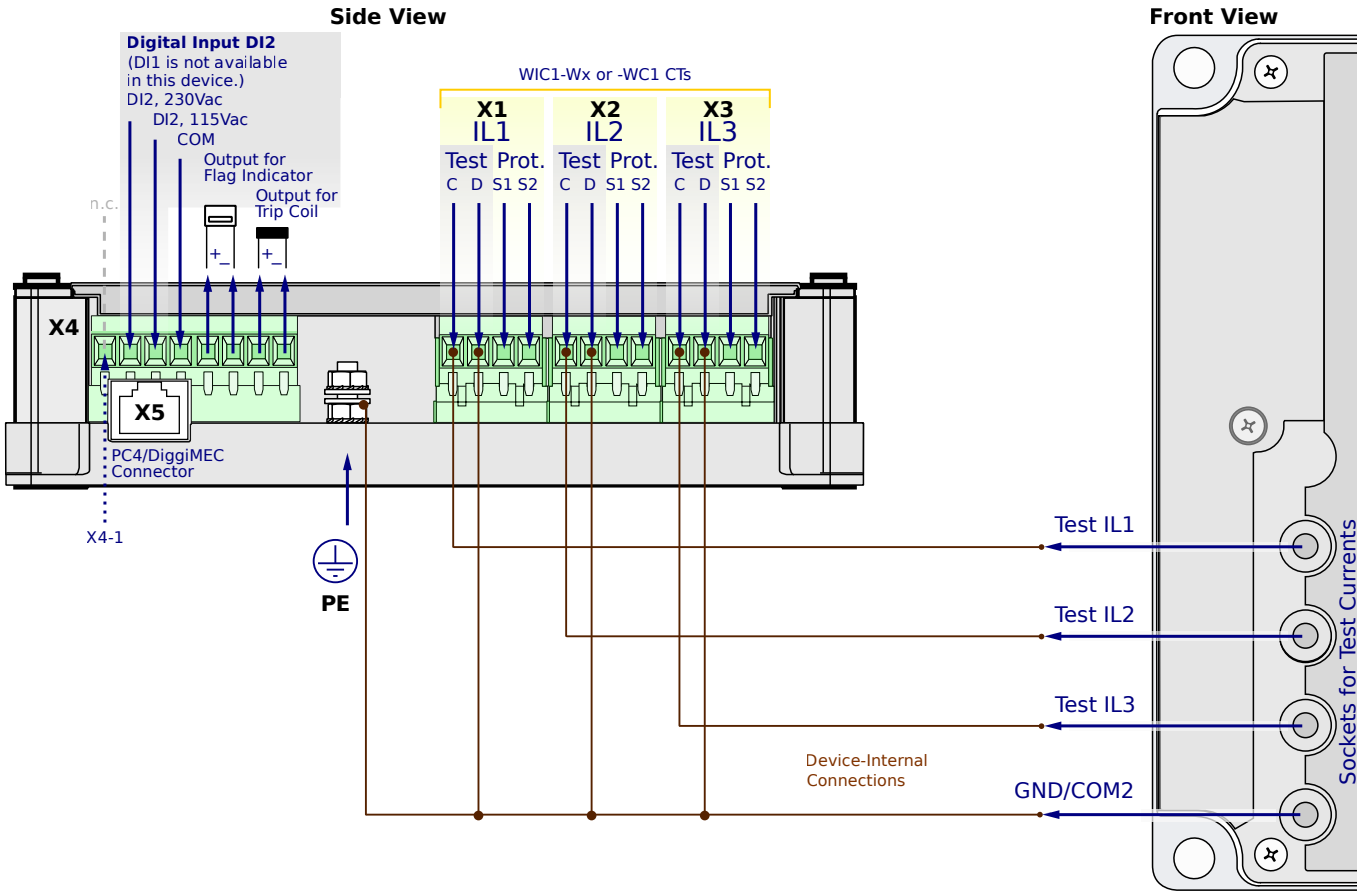


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1SAH

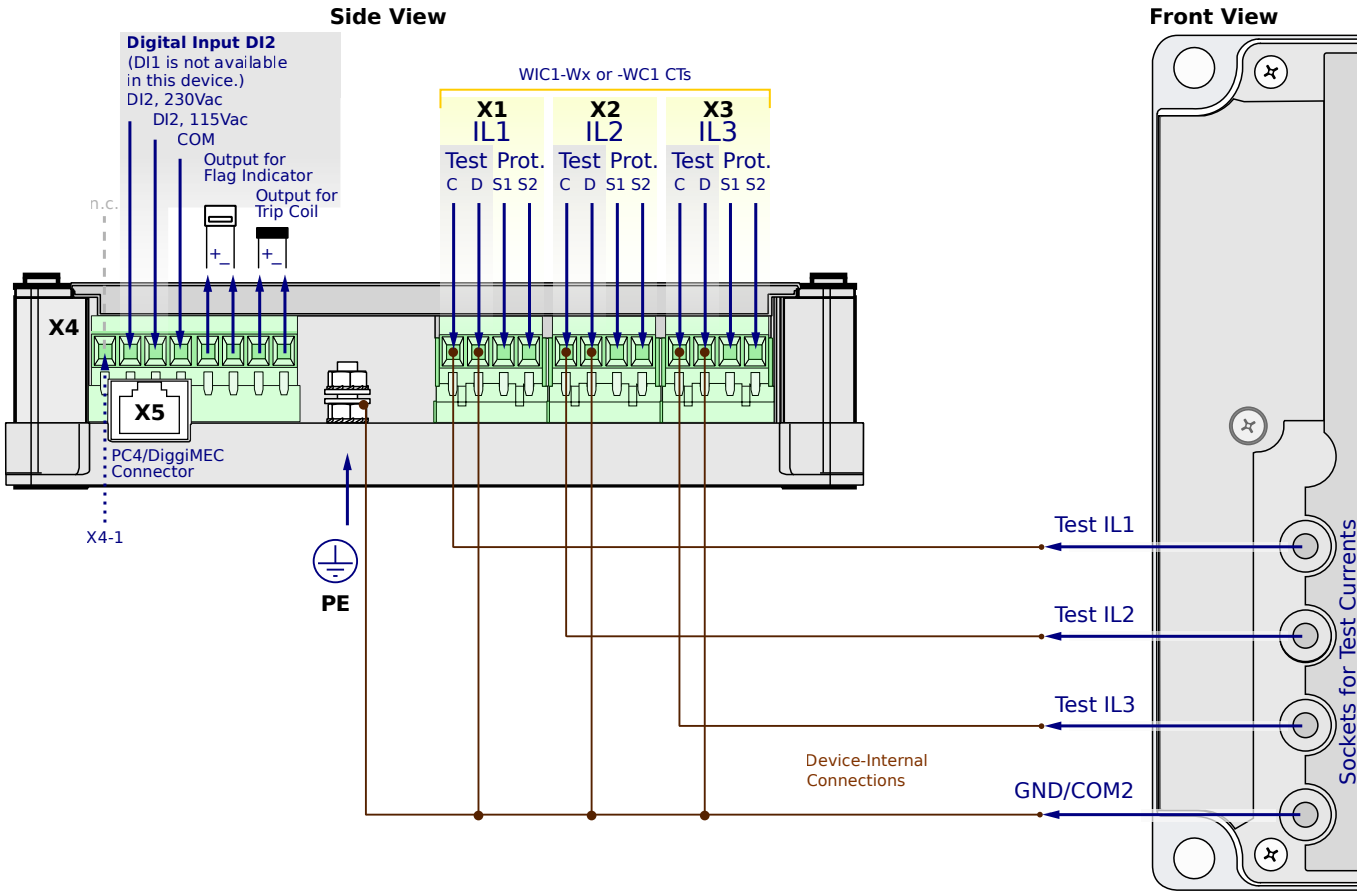


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Calculated ground (earth) current.
- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1AA0

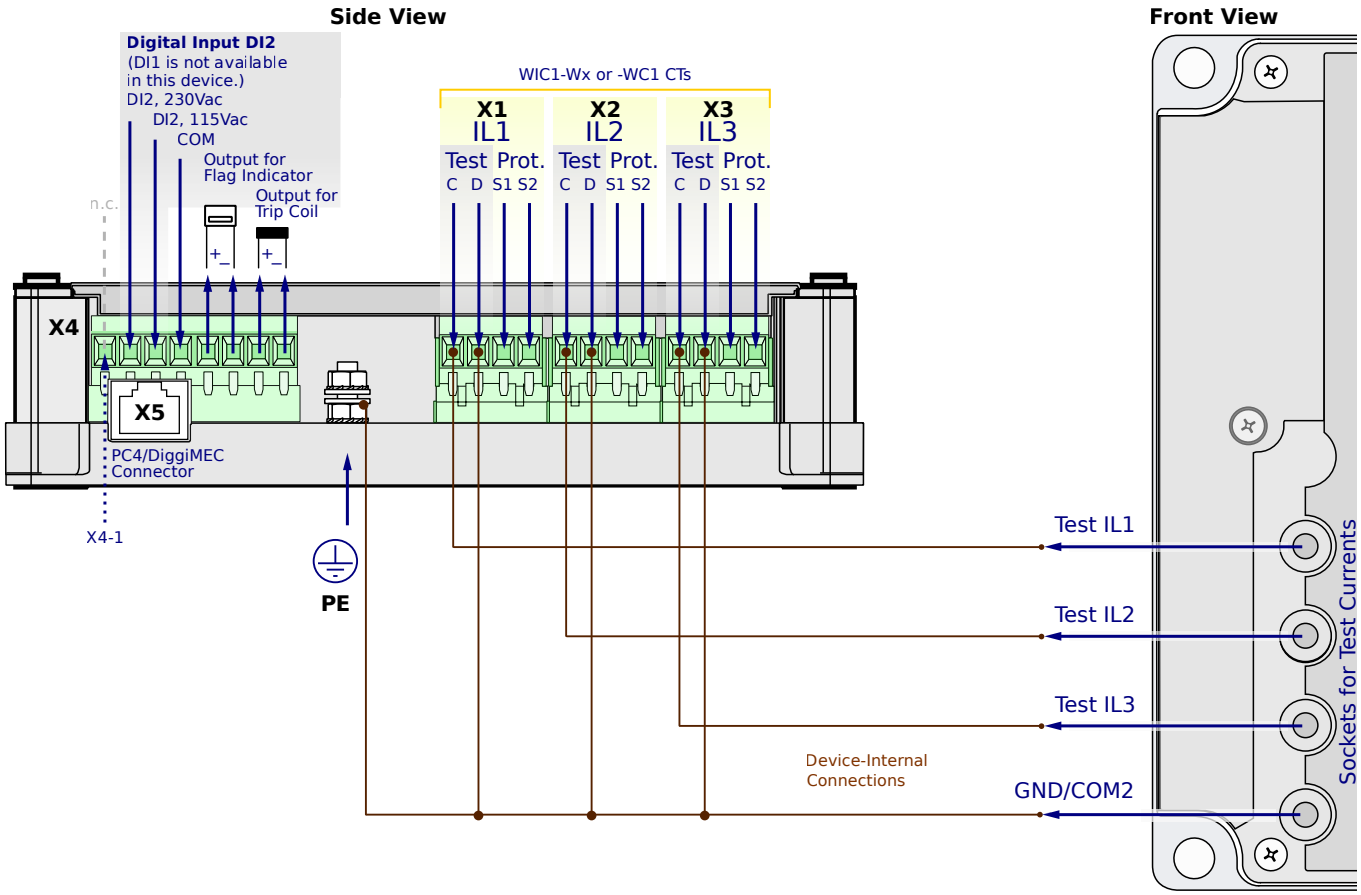


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1AAH

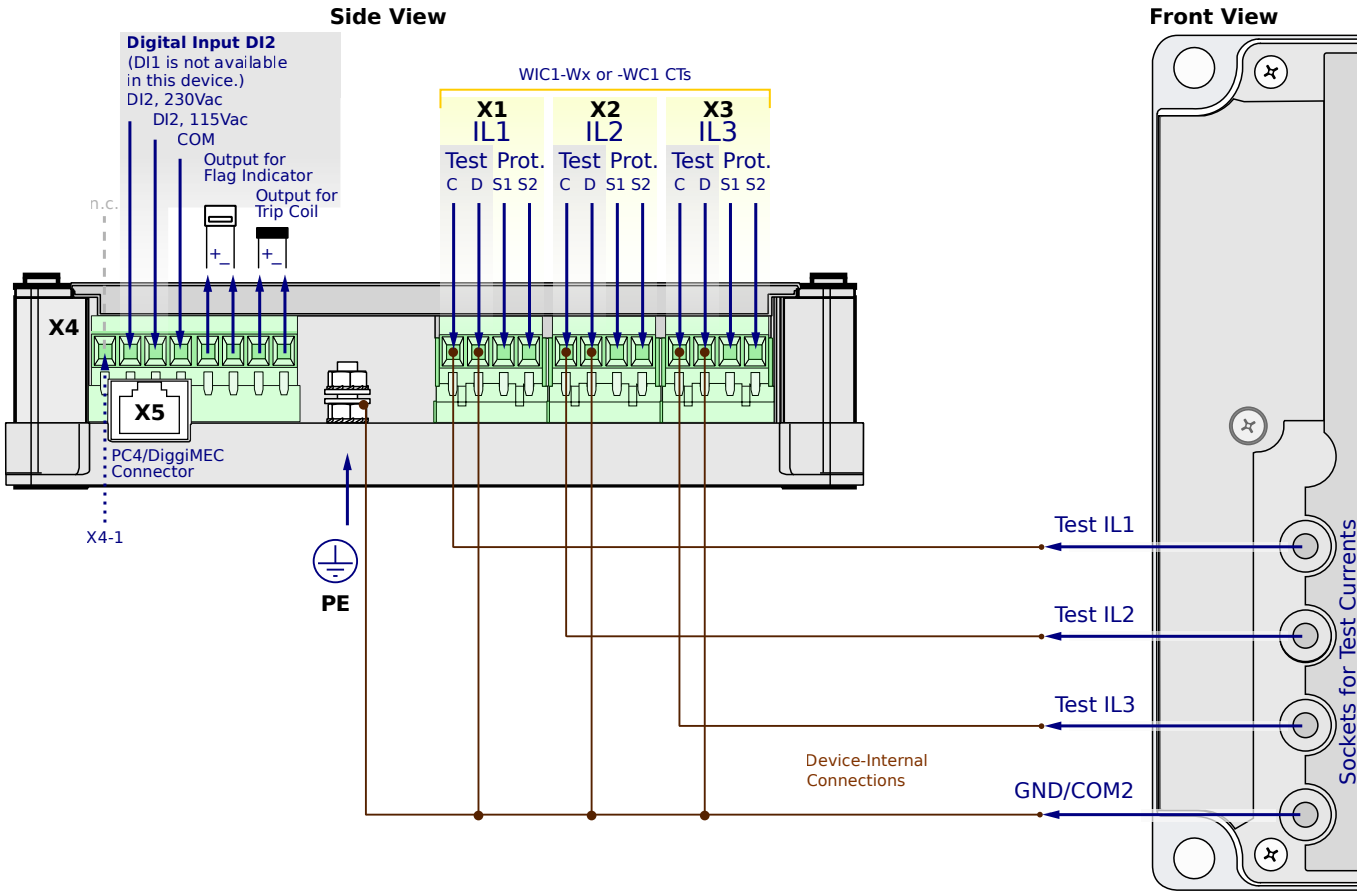


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1PA0

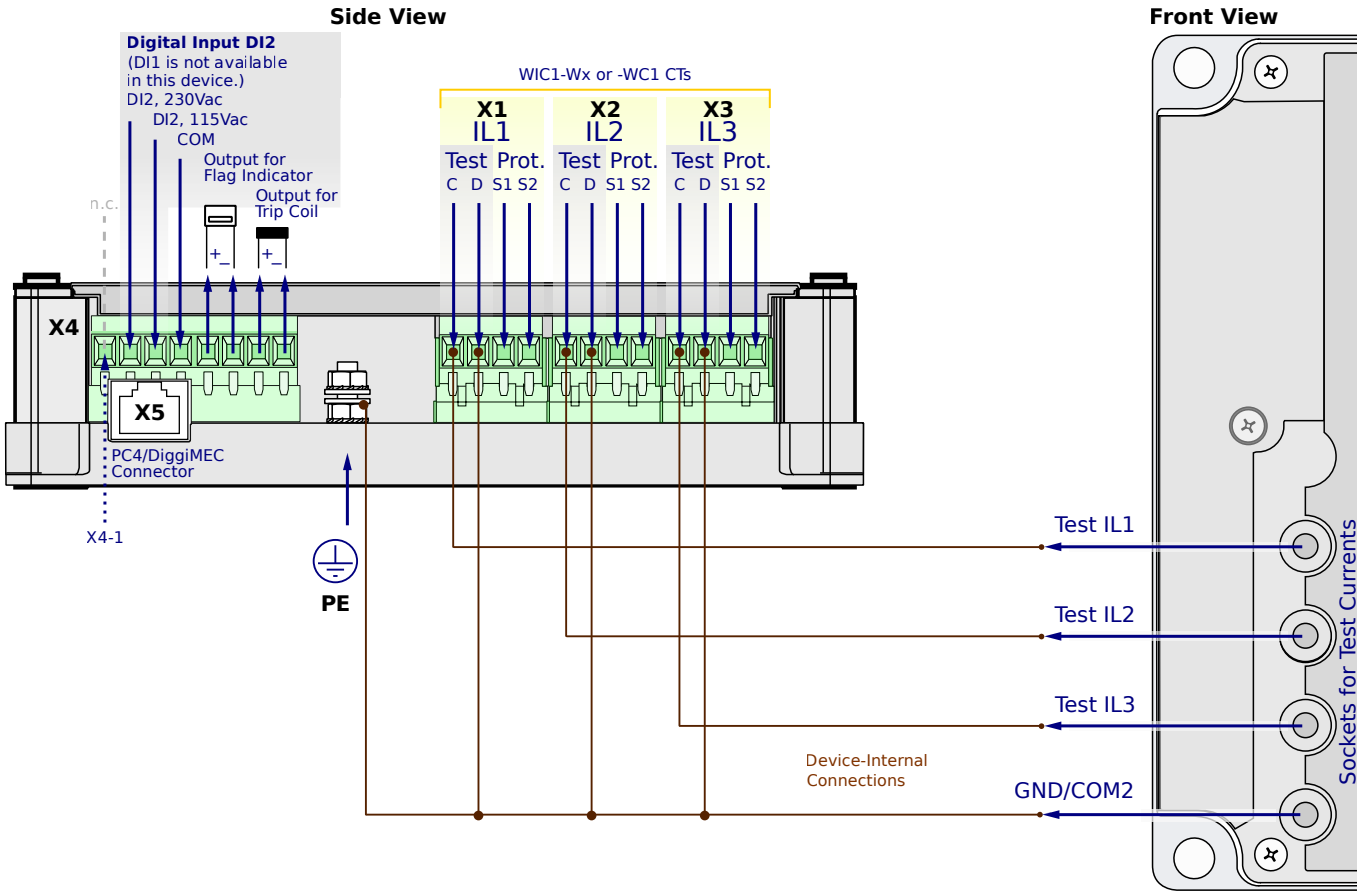


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC1PAH

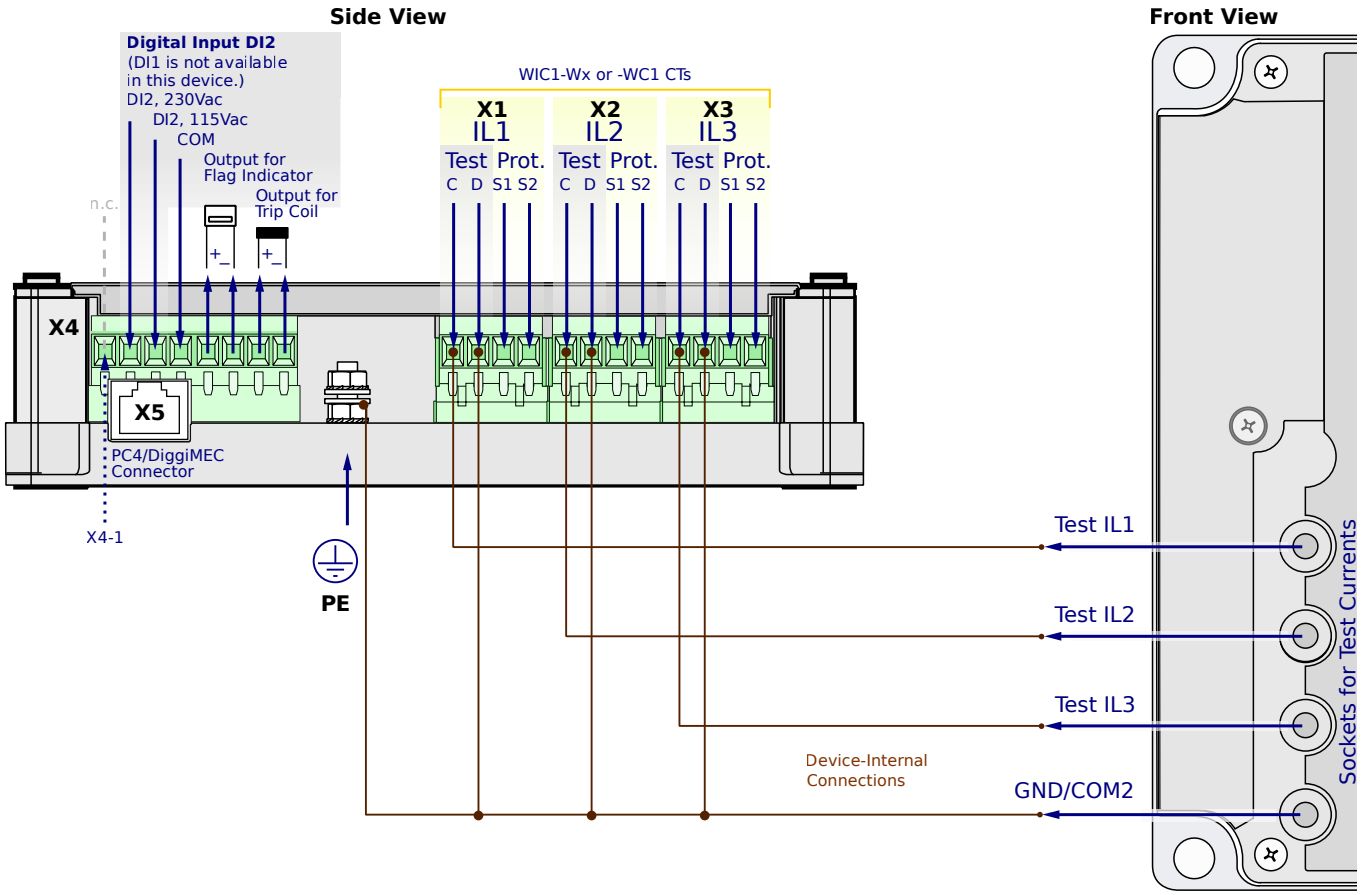


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2SA0

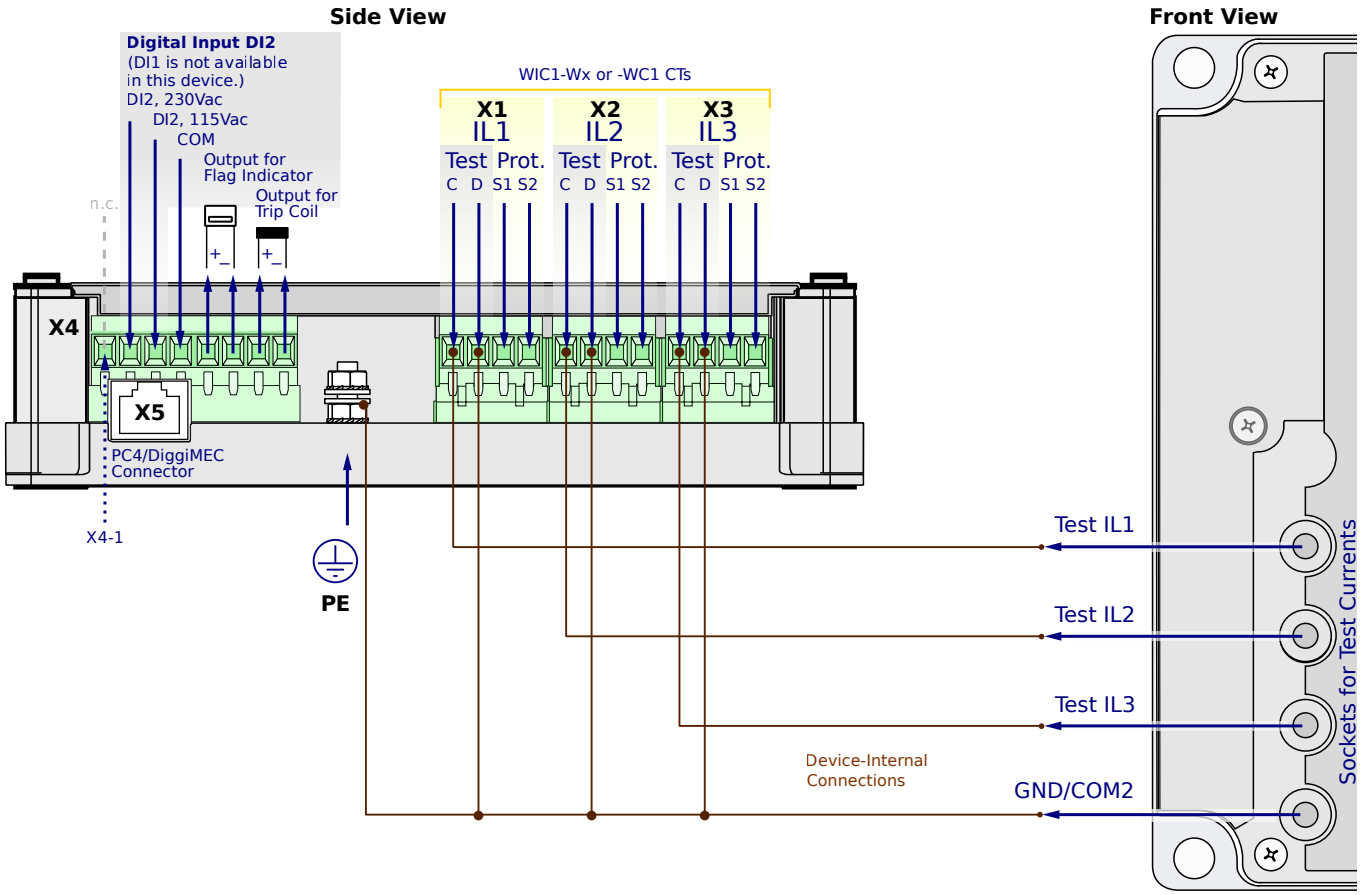


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2SAH

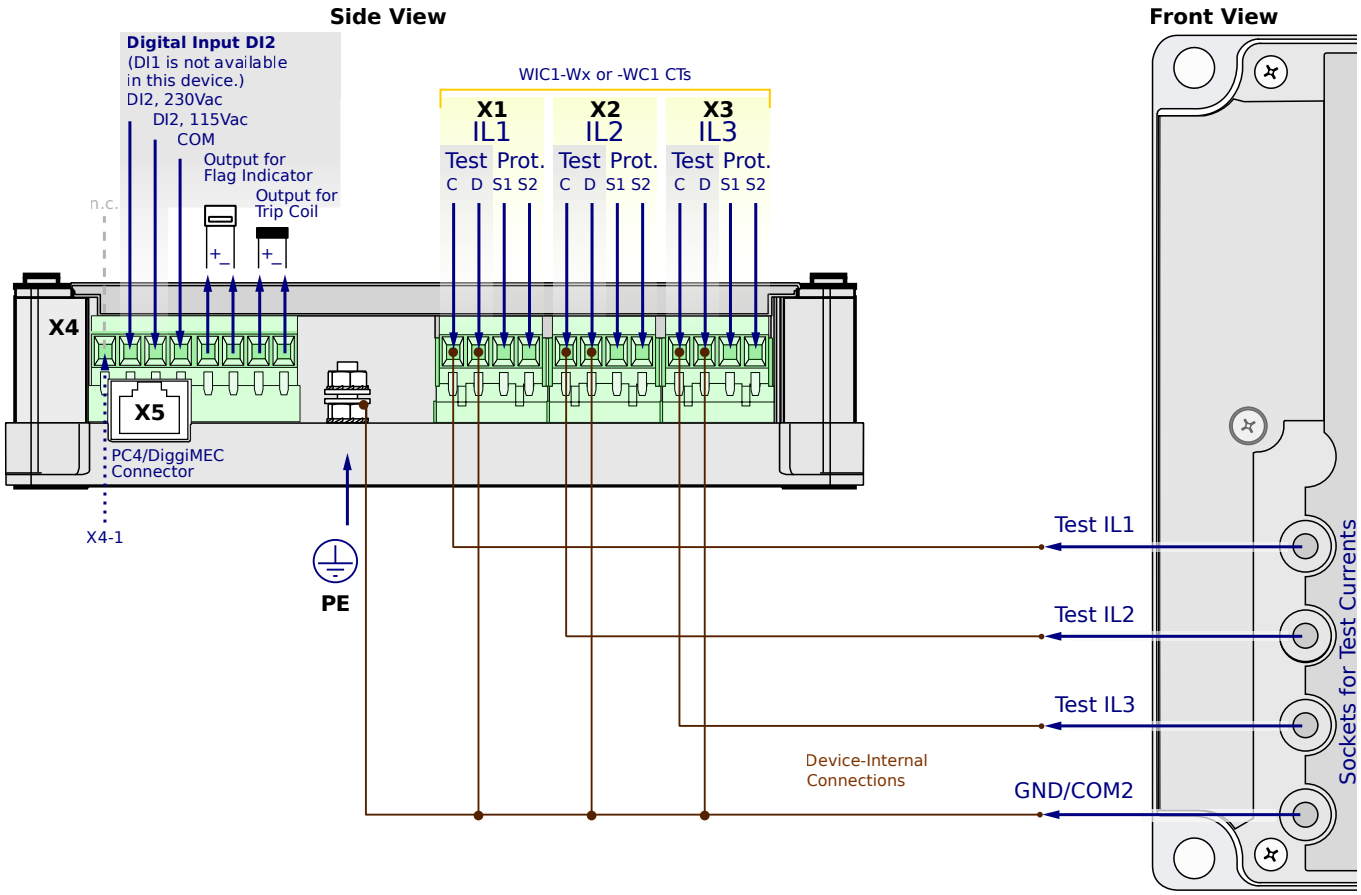


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2AA0

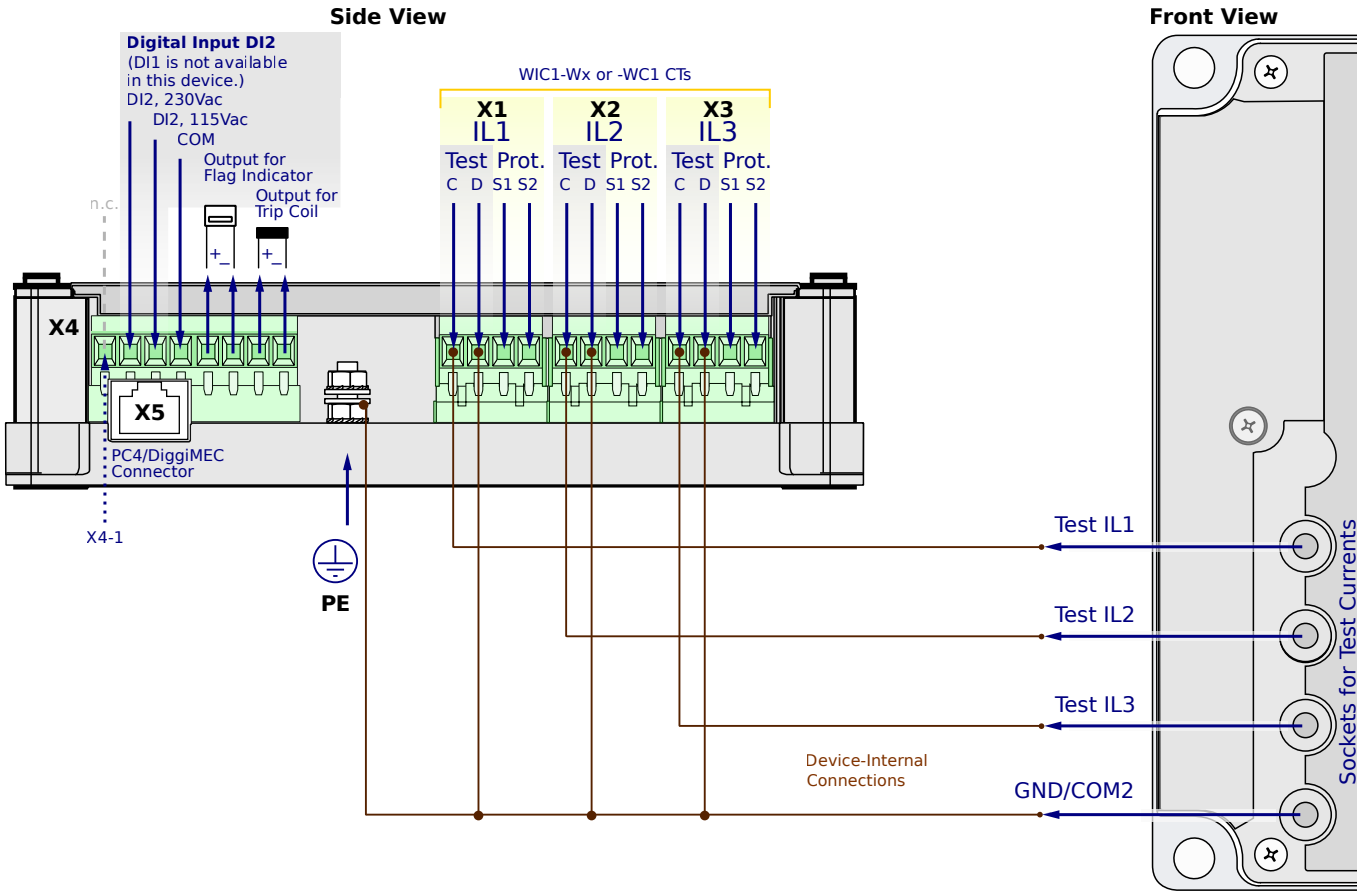


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2AAH

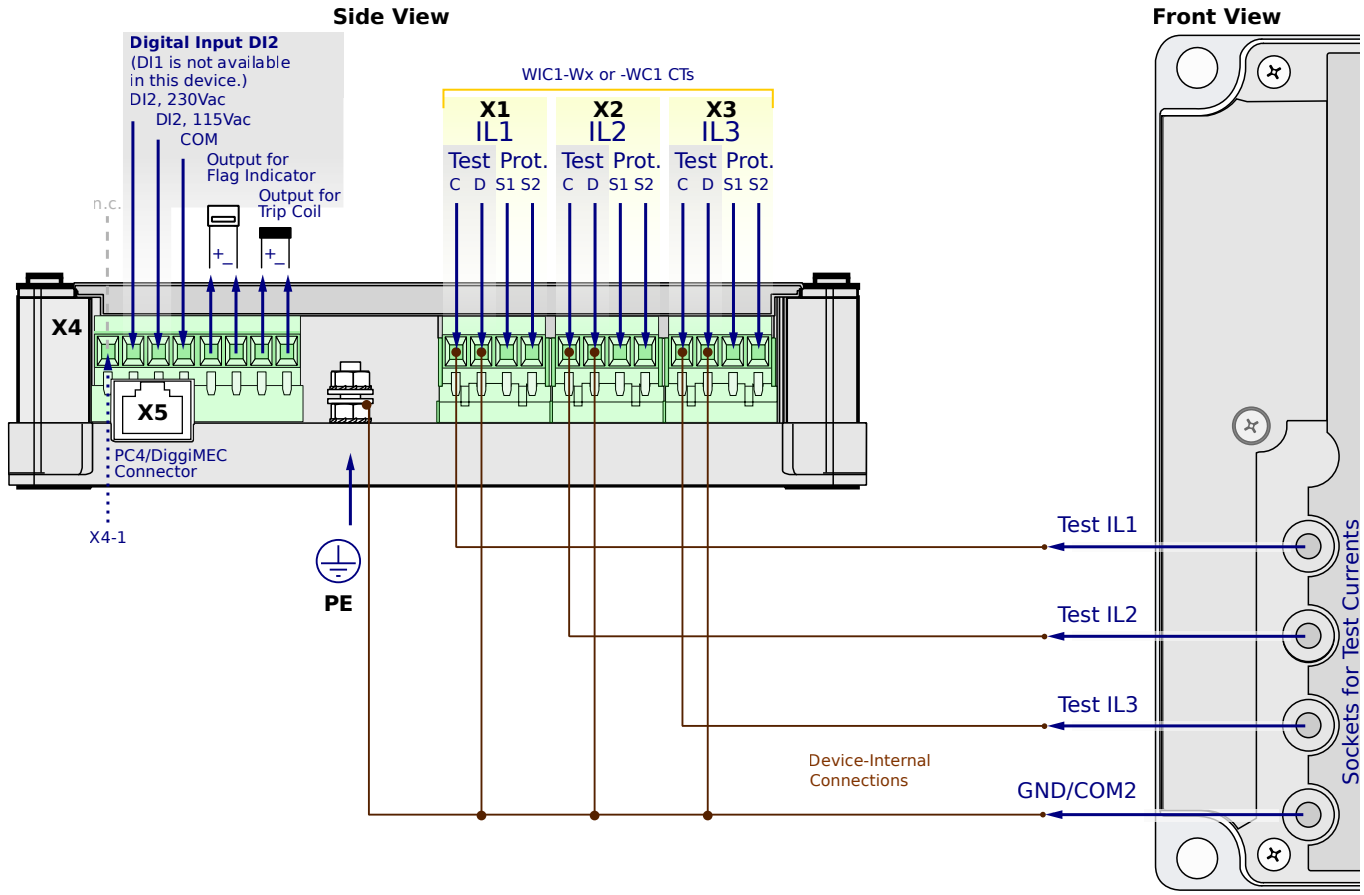


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2PA0

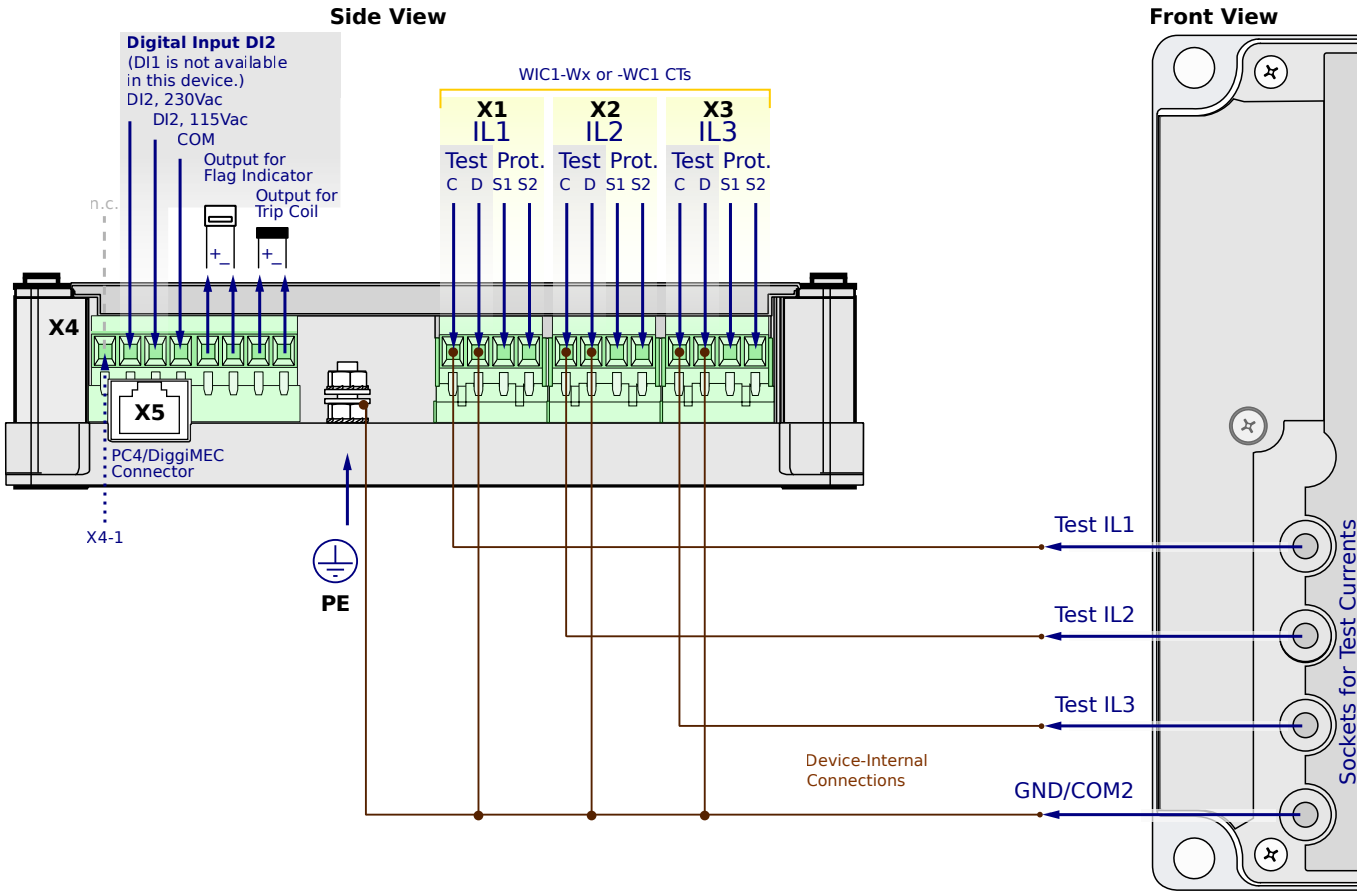


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6FC2PAH

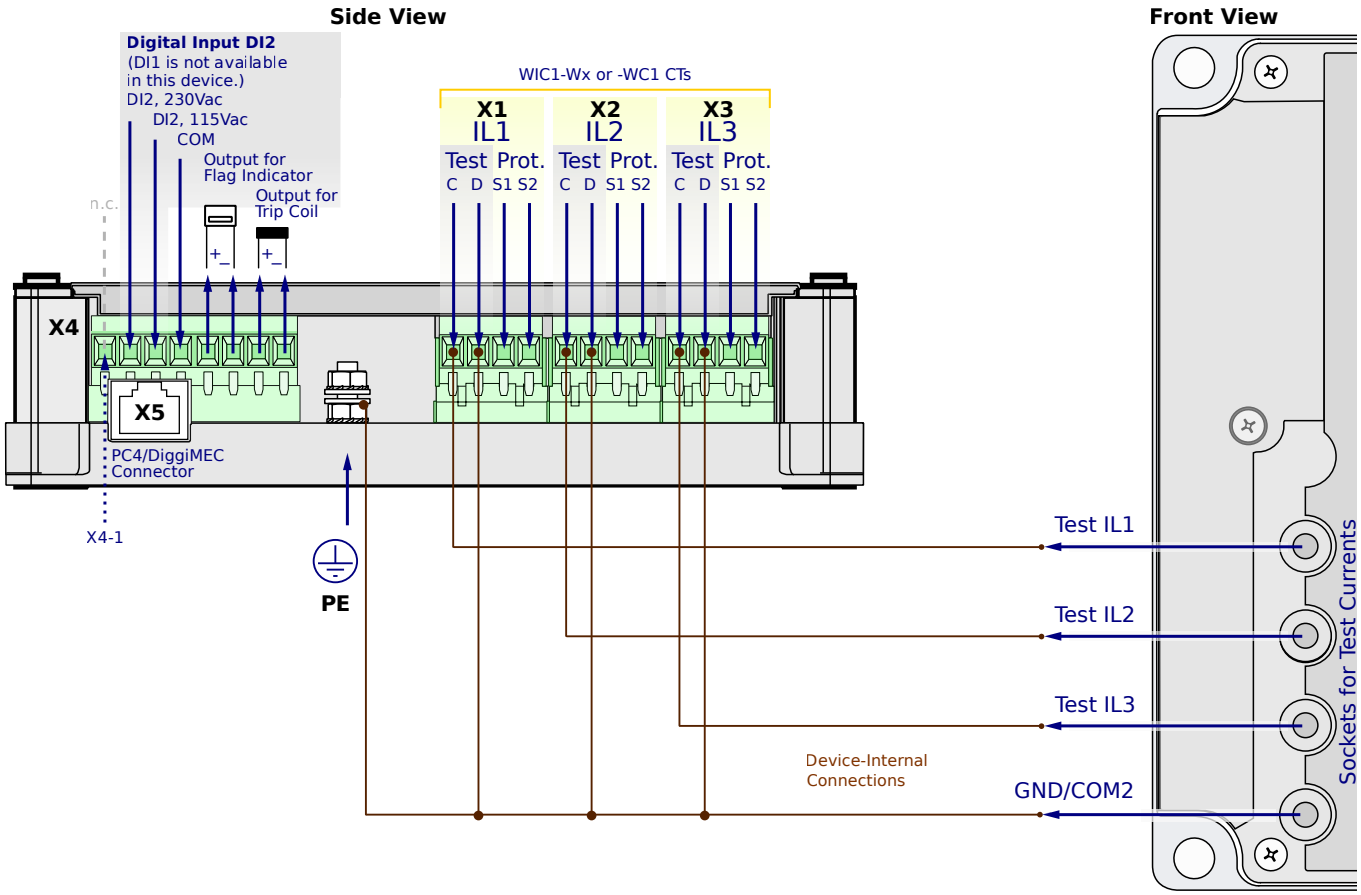


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1SA0

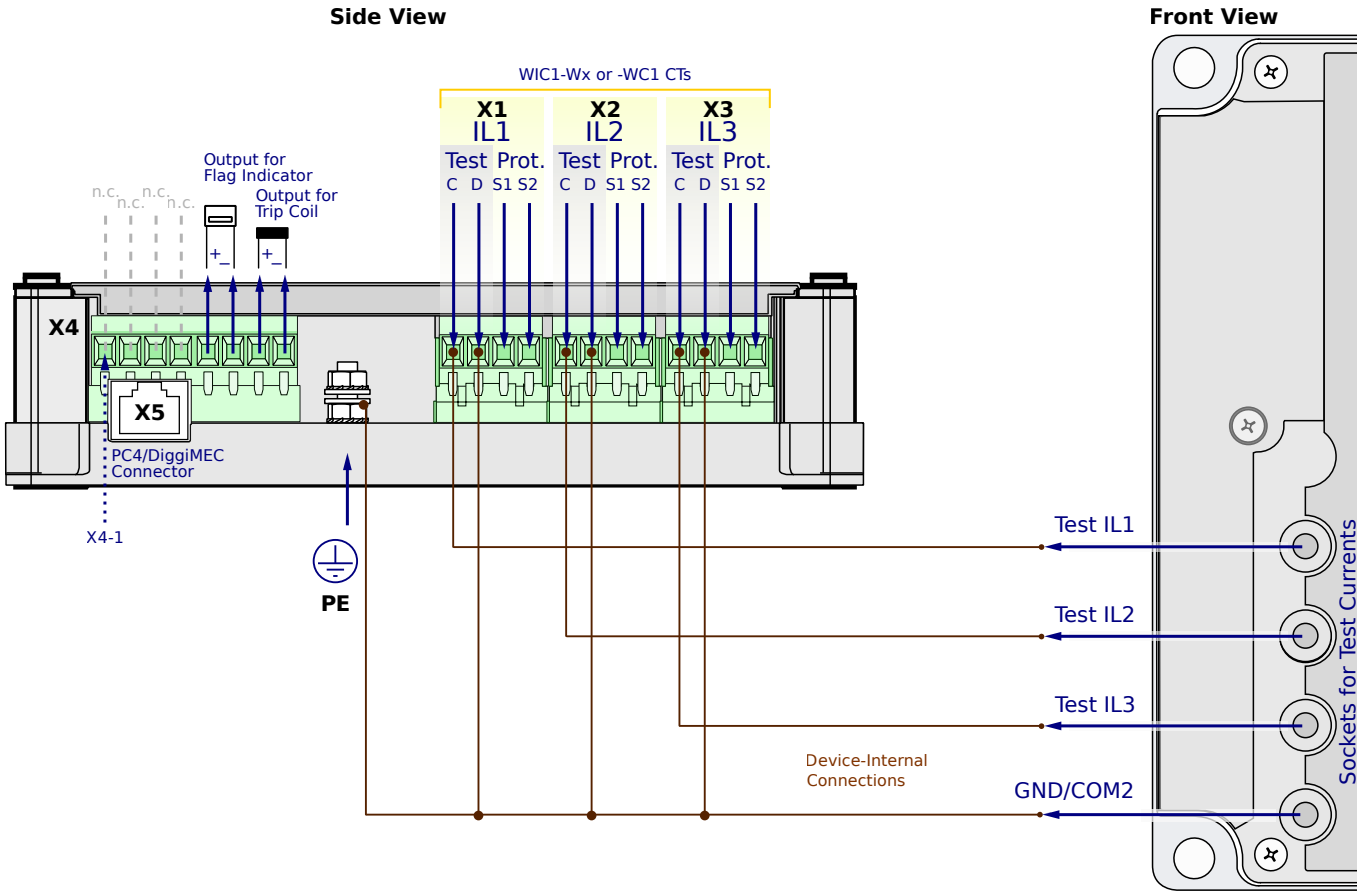


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1SAH

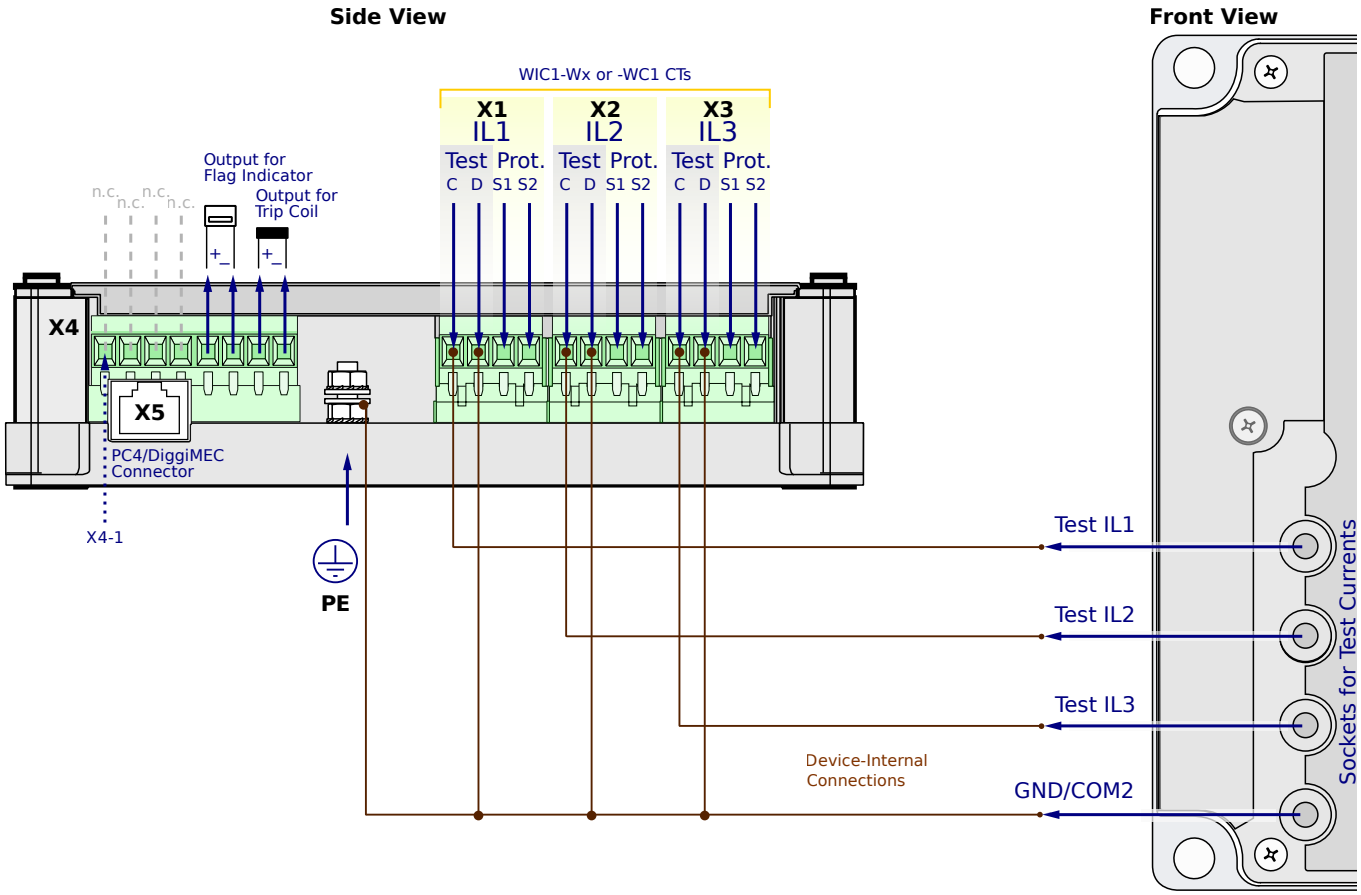


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1AA0

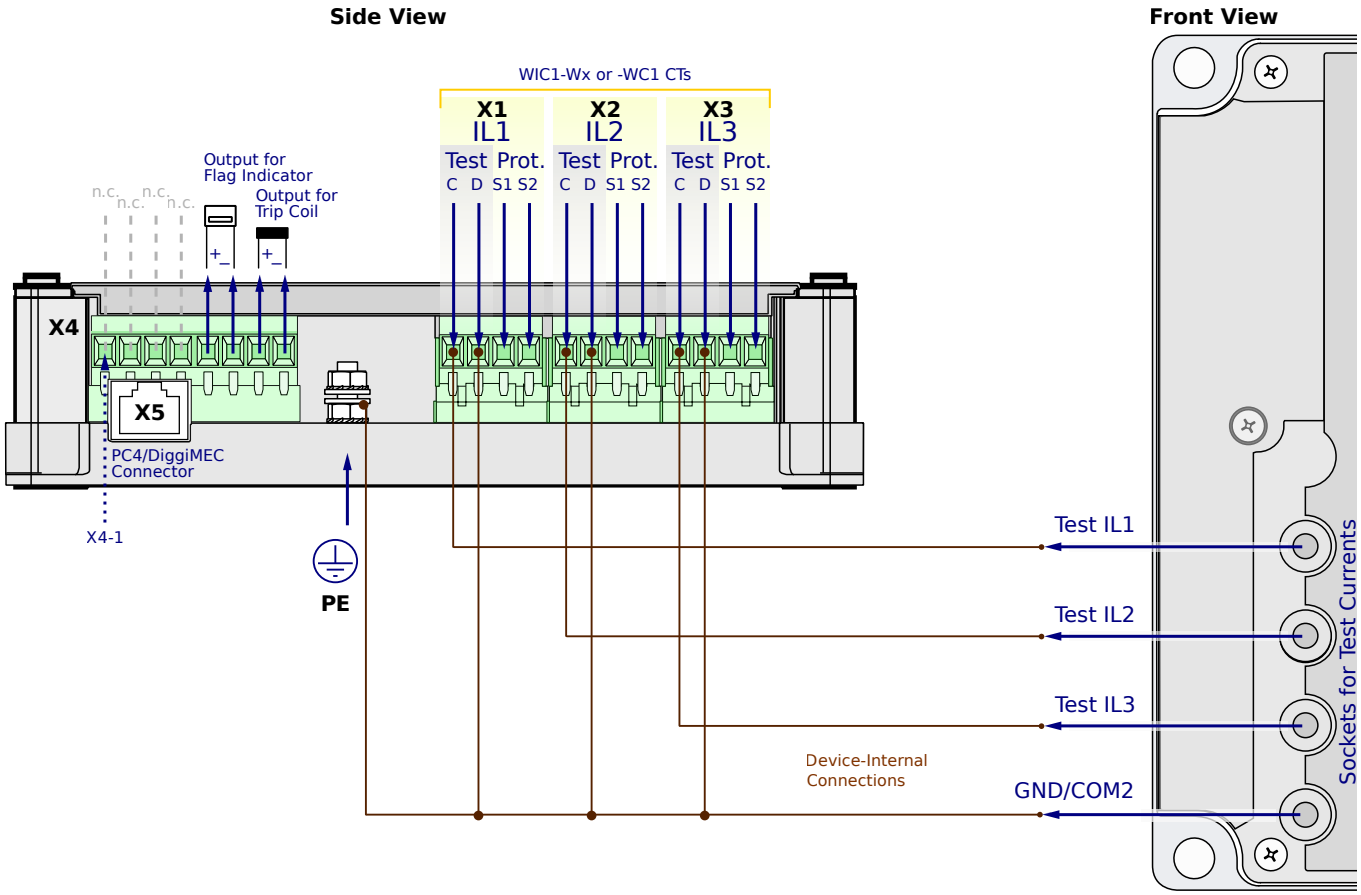


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1AAH

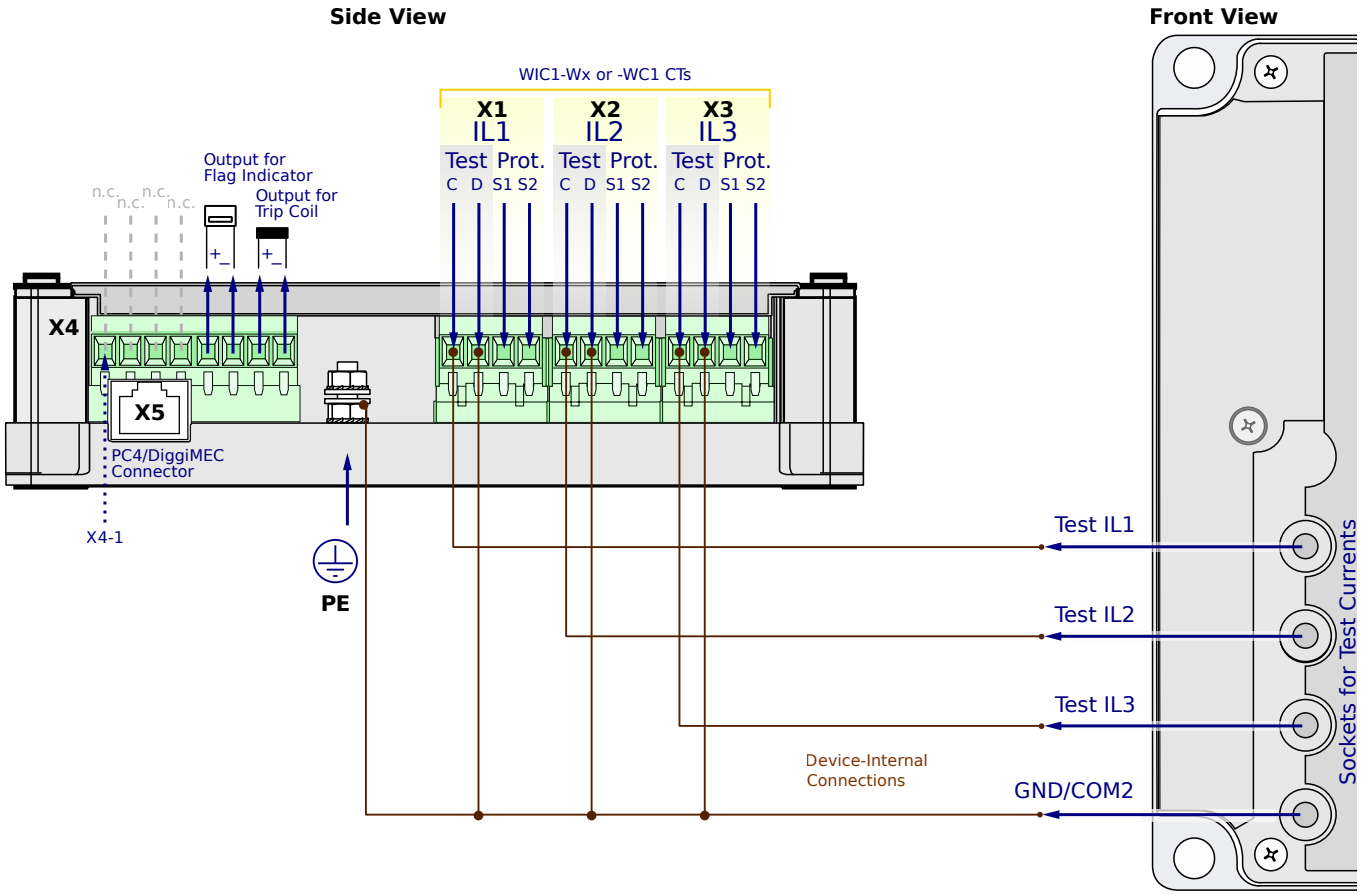


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1PA0

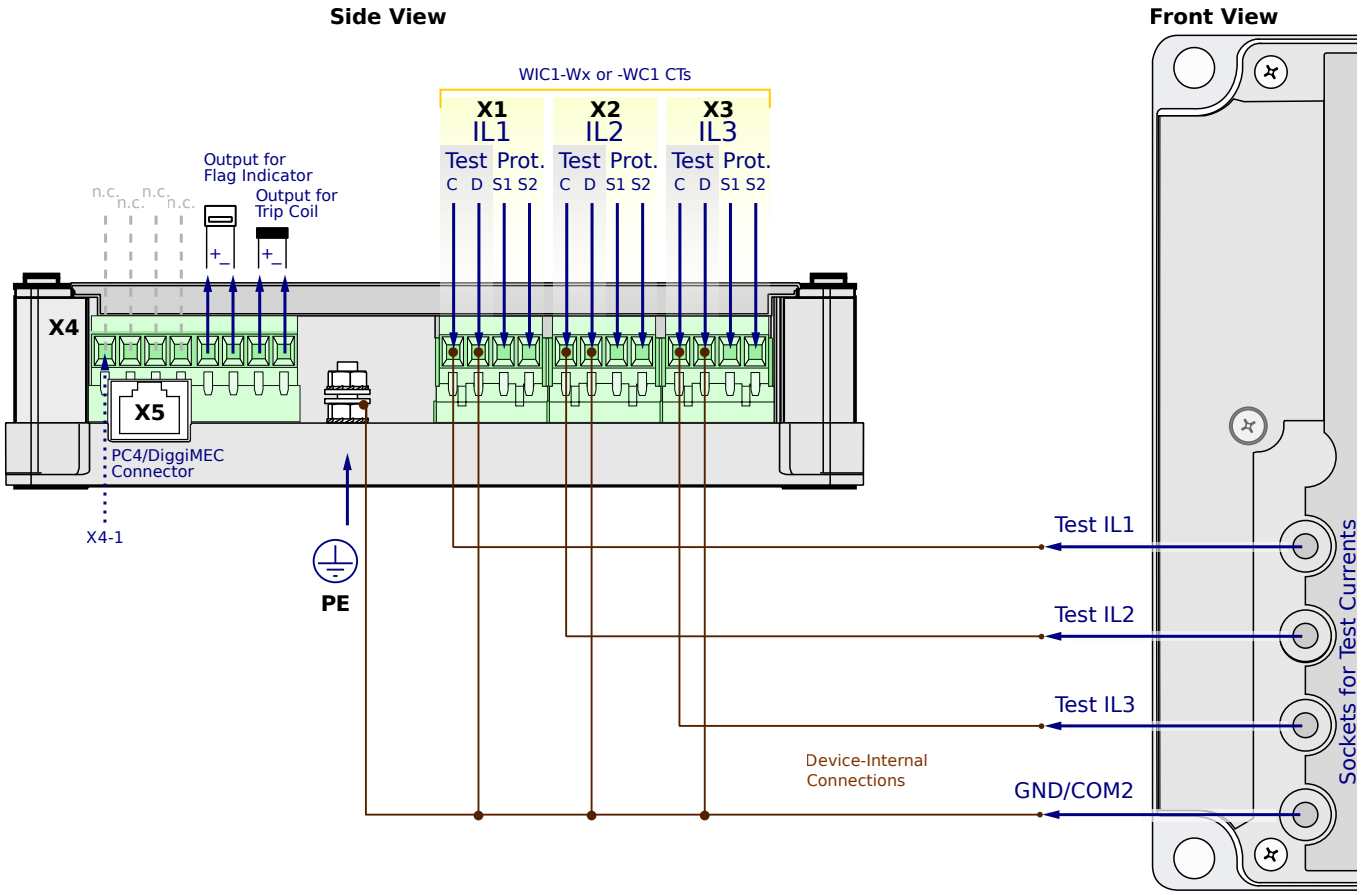


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN1PAH

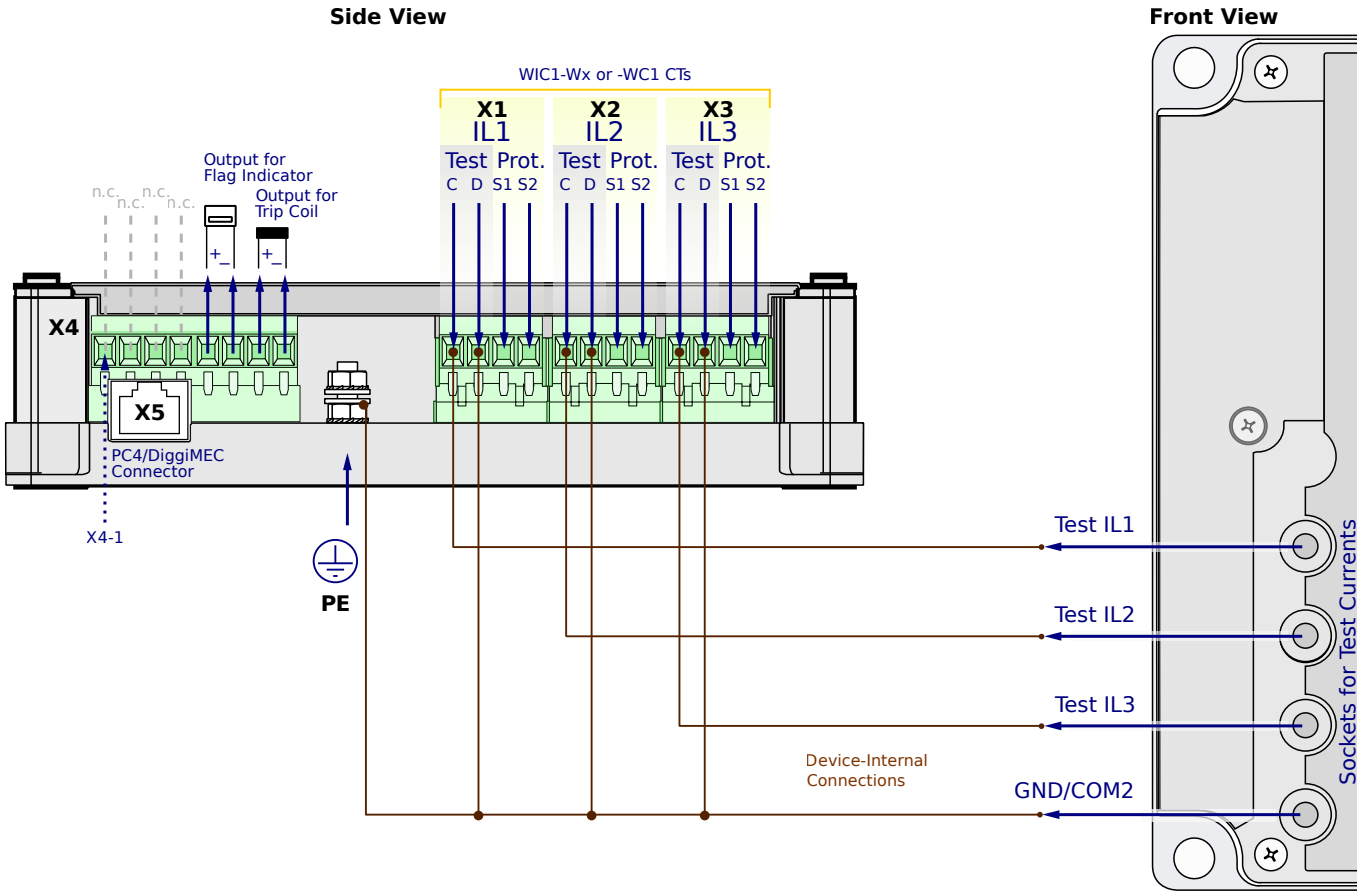


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2SA0

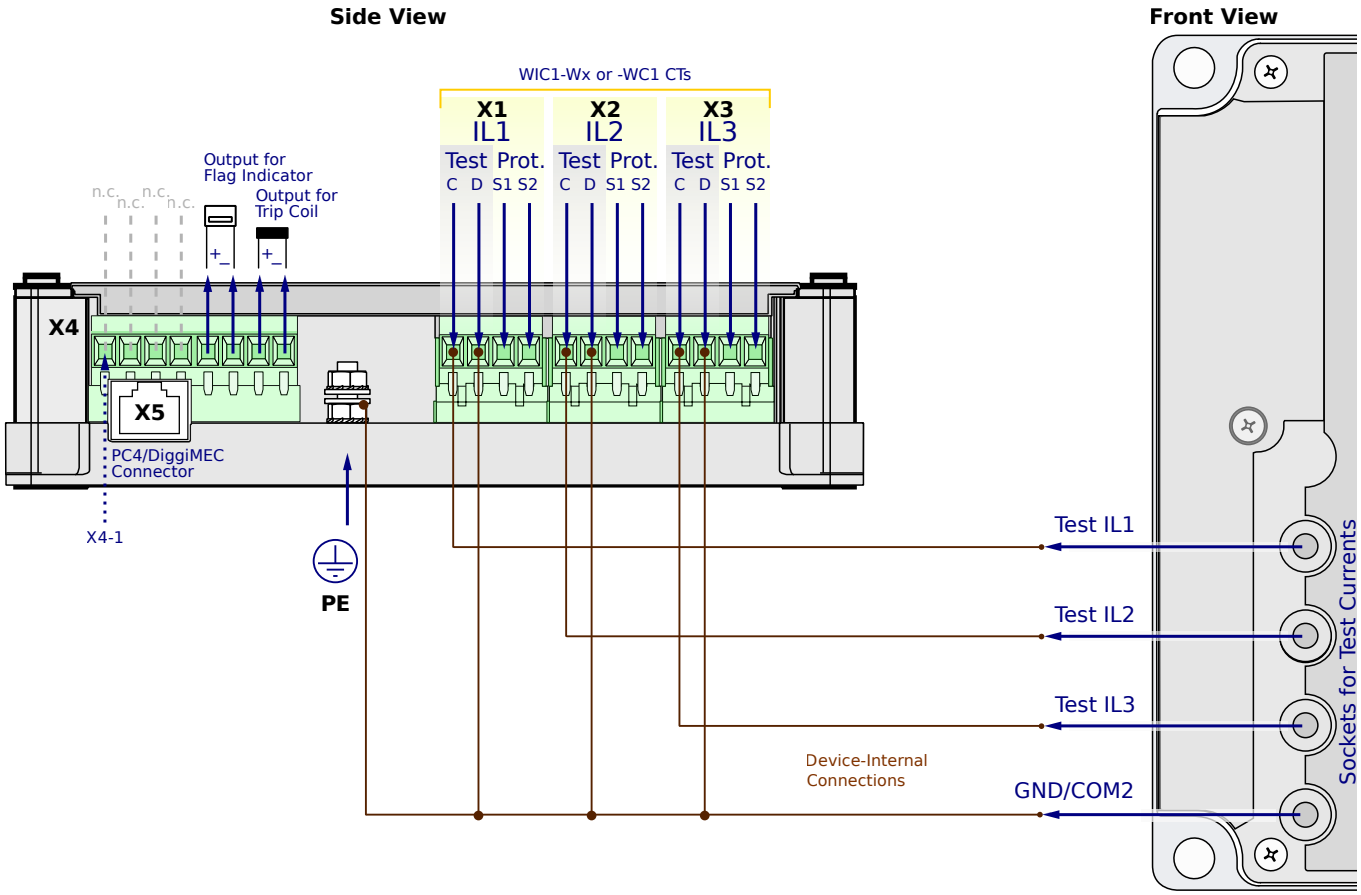


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2SAH

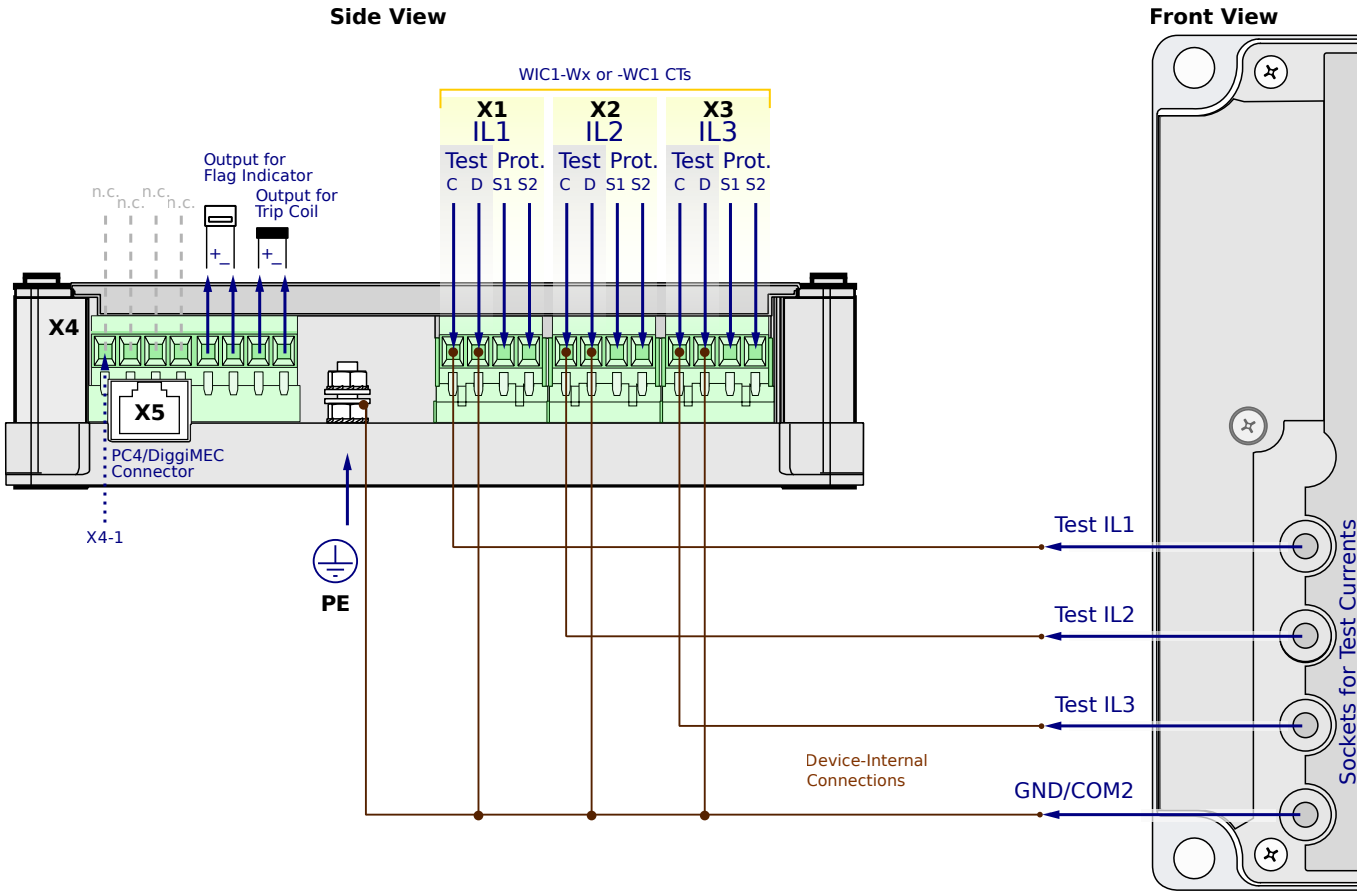


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2AA0

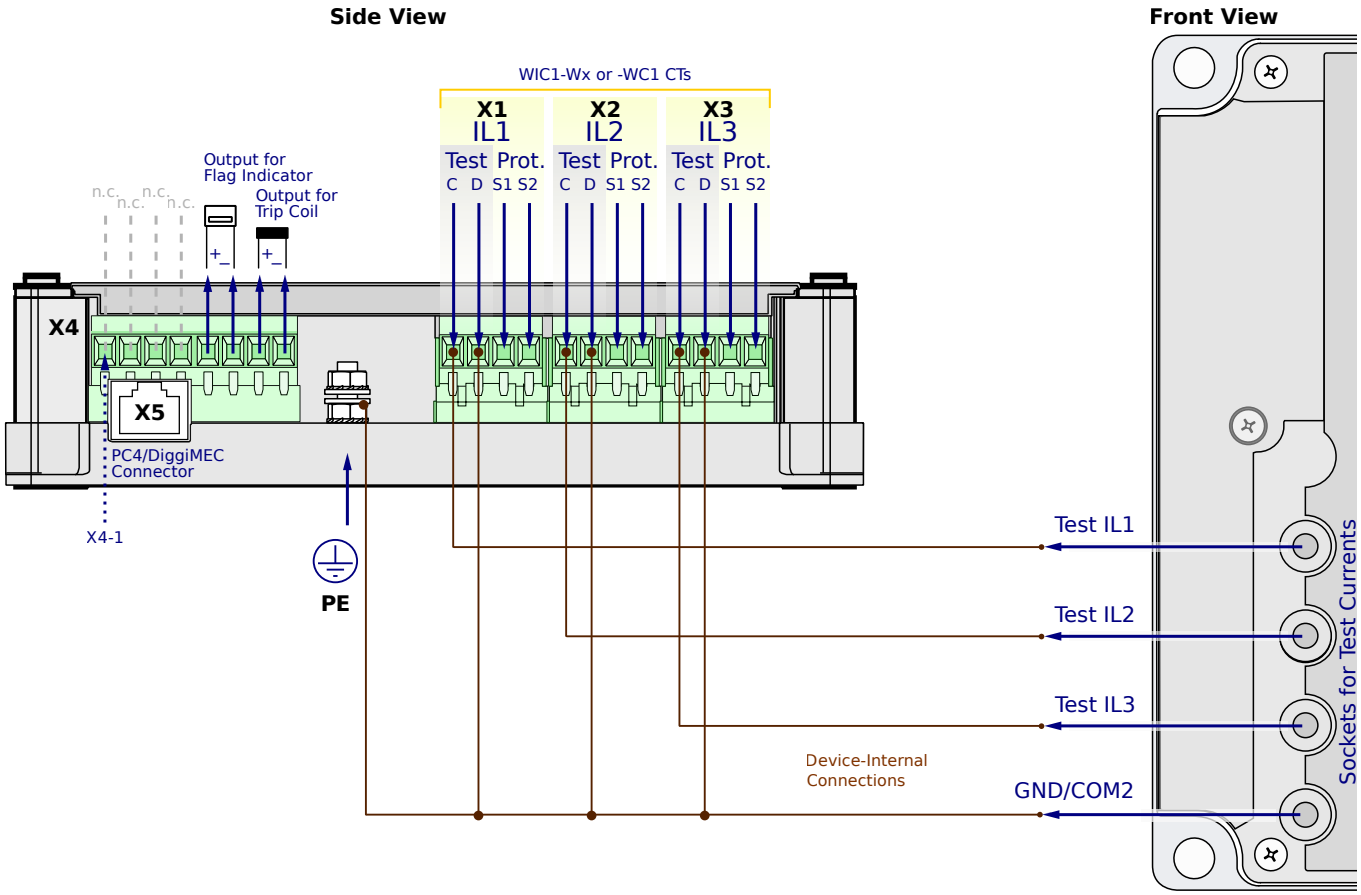


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2AAH

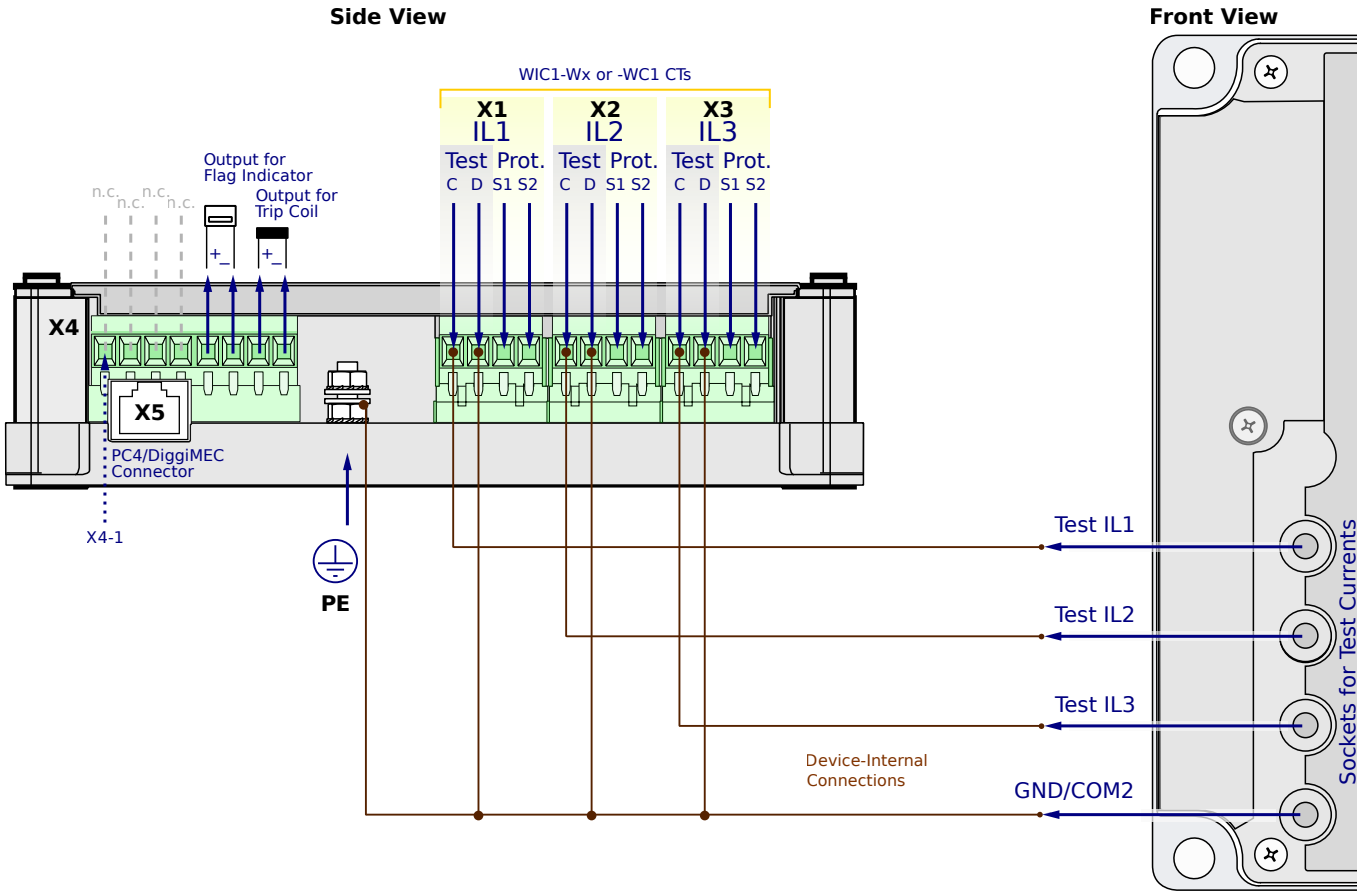


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2PA0

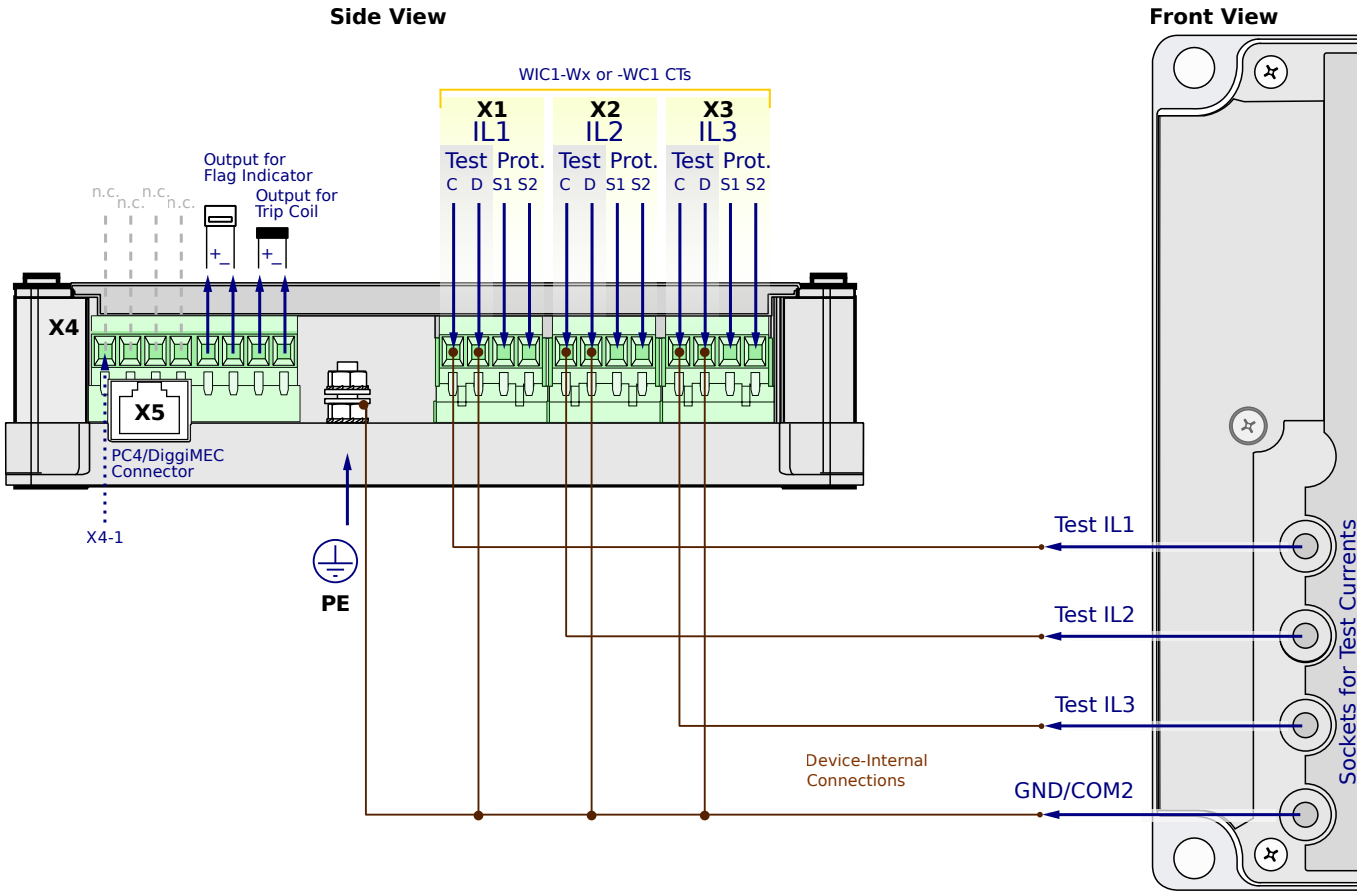


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CN2PAH

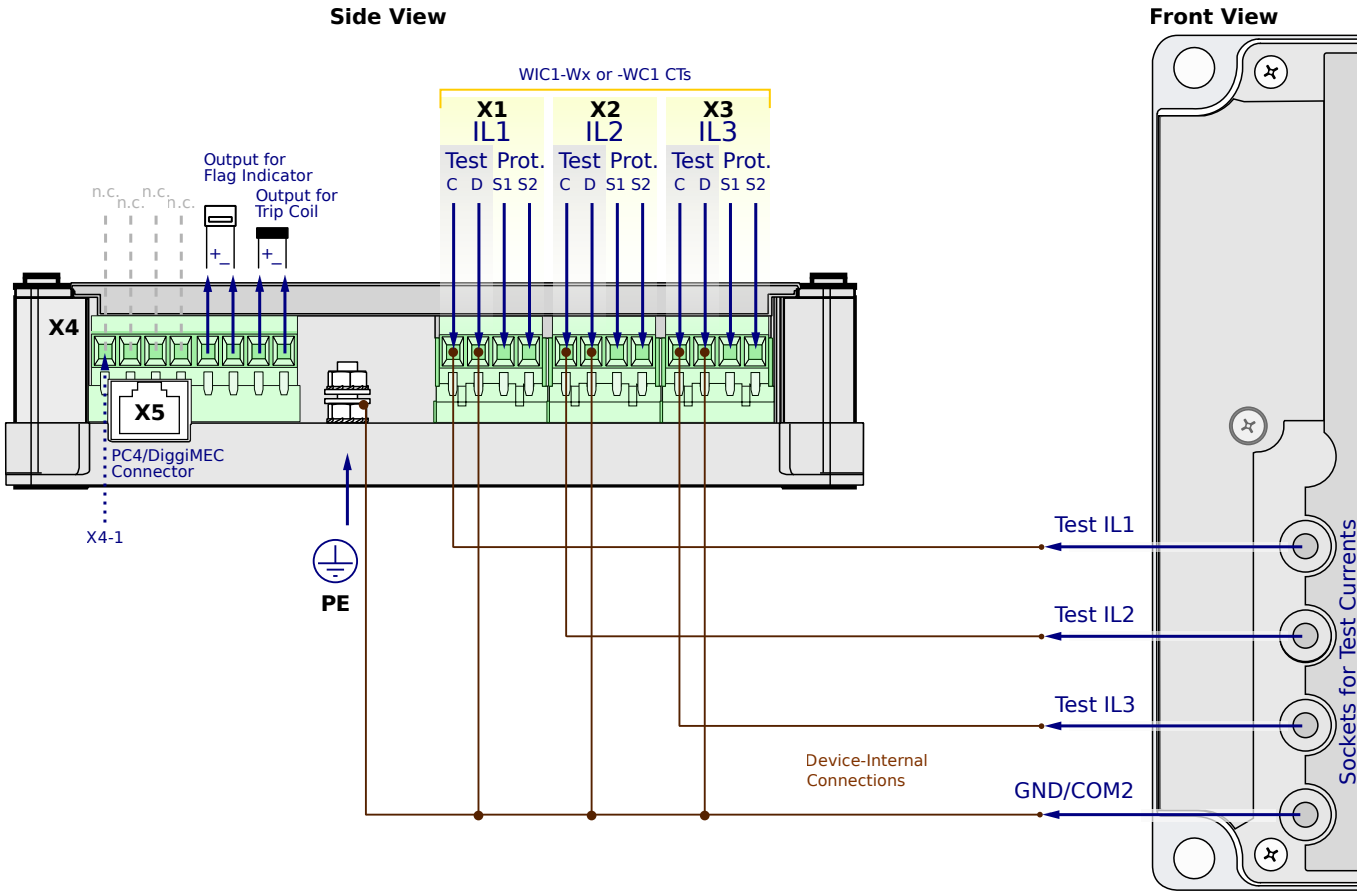


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1SA0

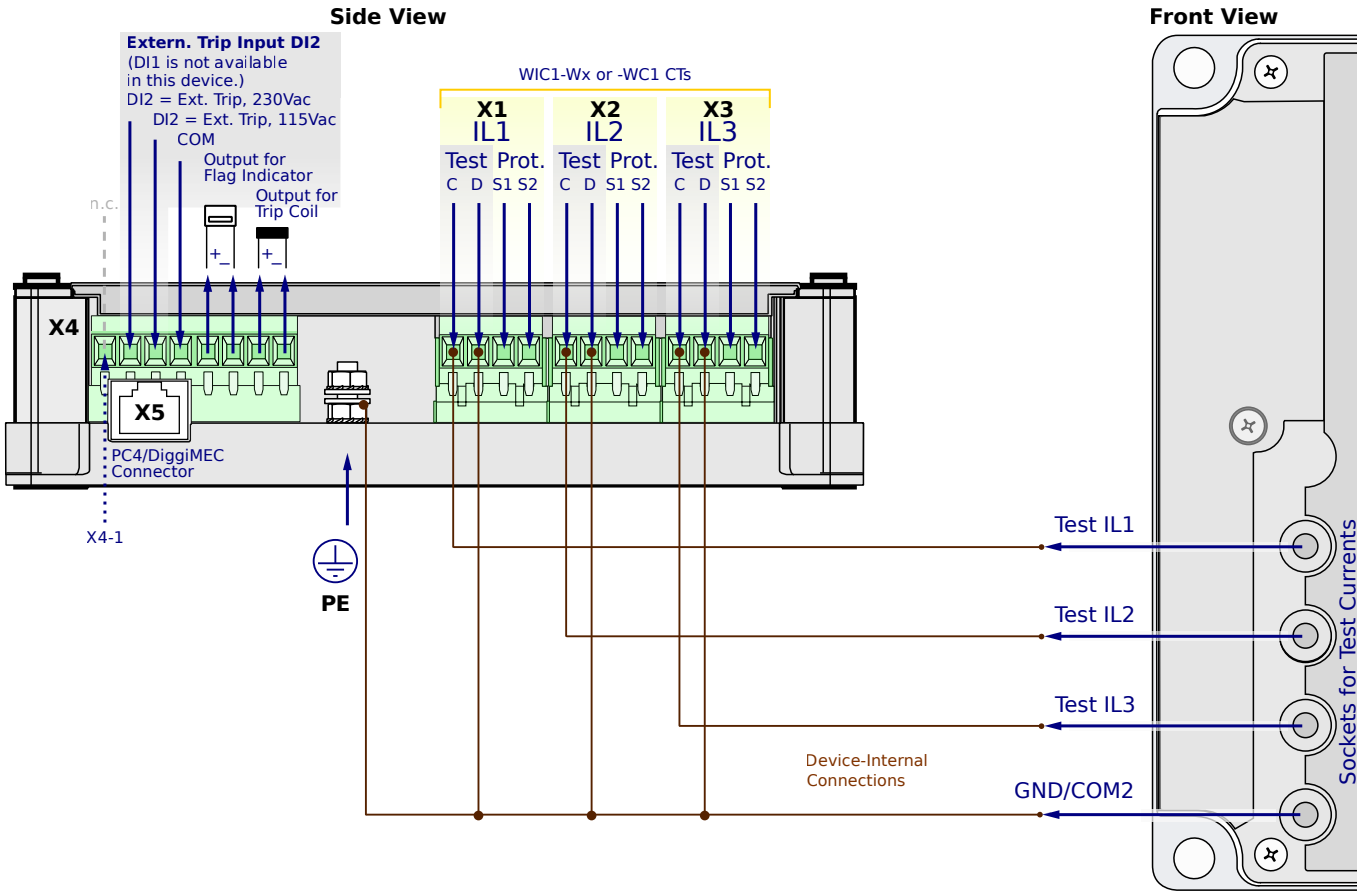


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1SAH

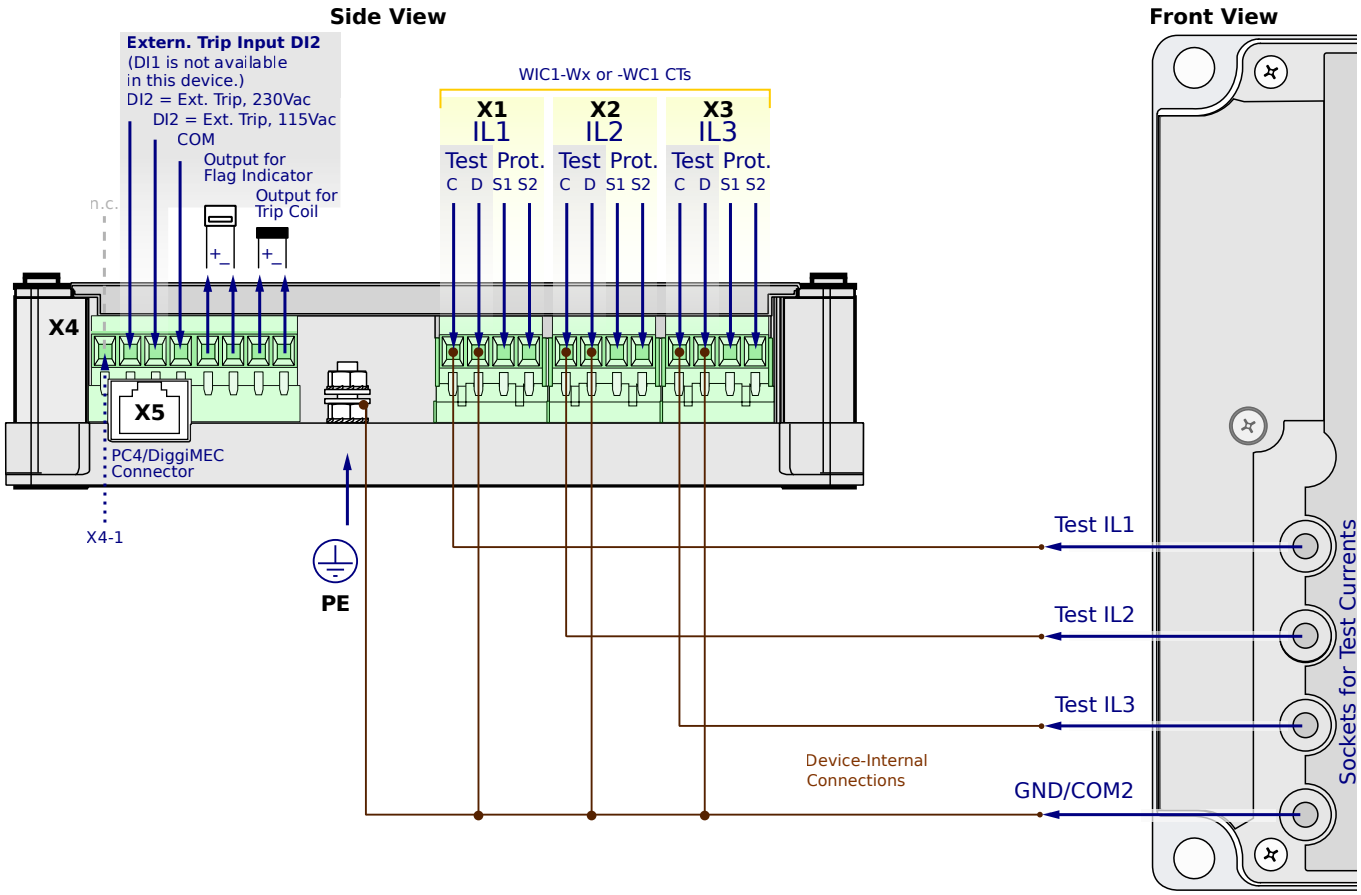


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1AA0

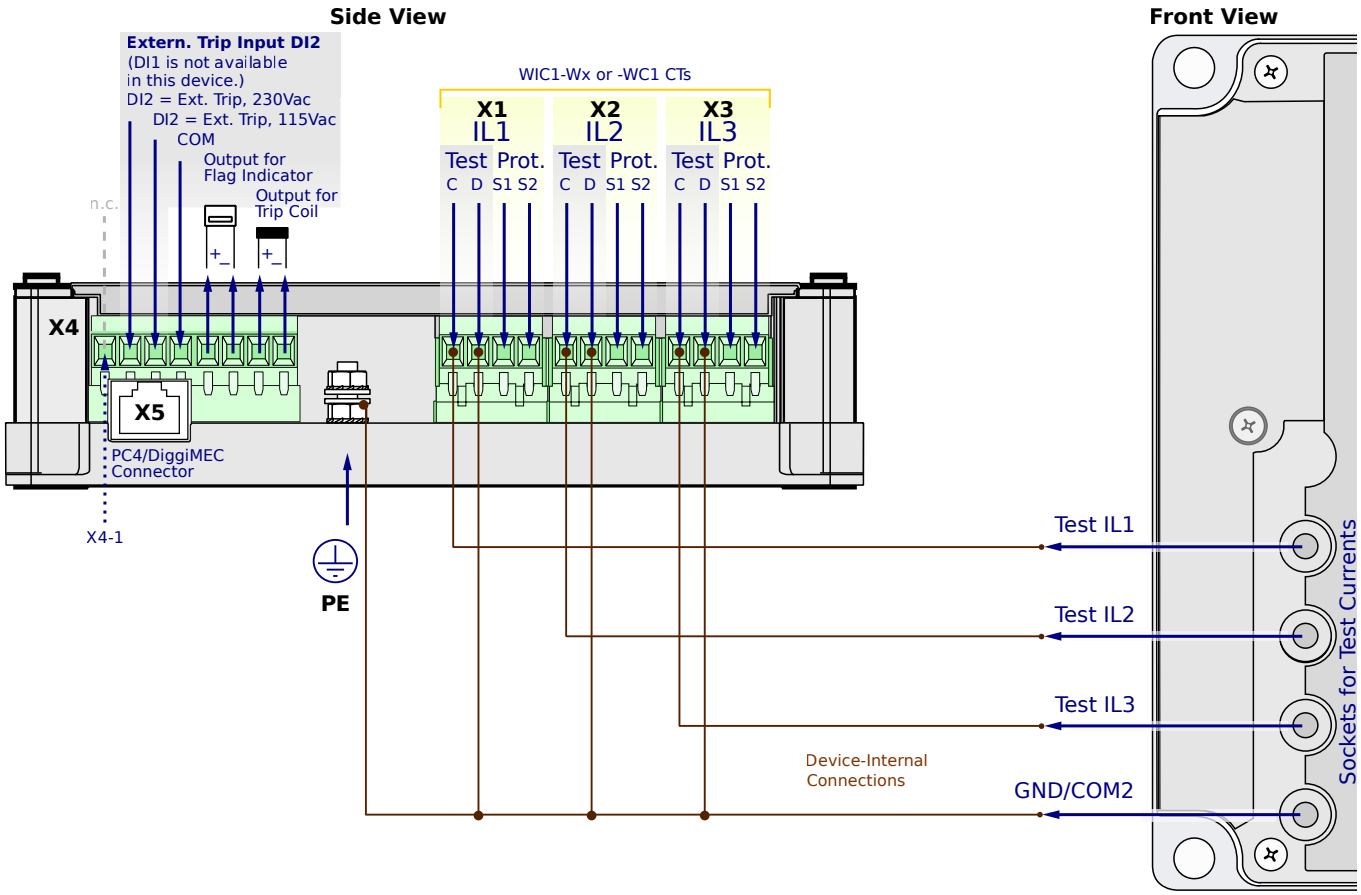


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1AAH

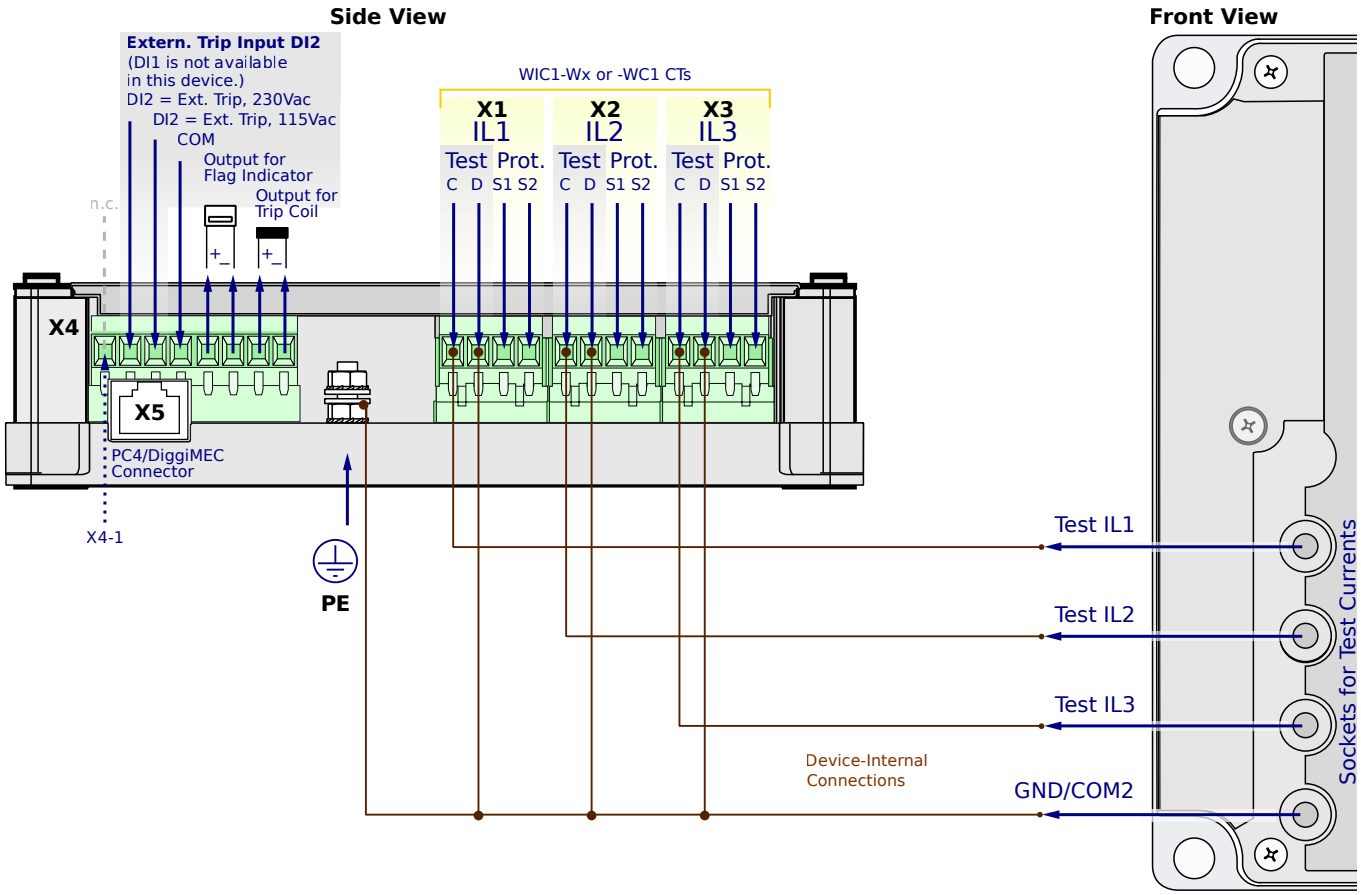


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1PA0

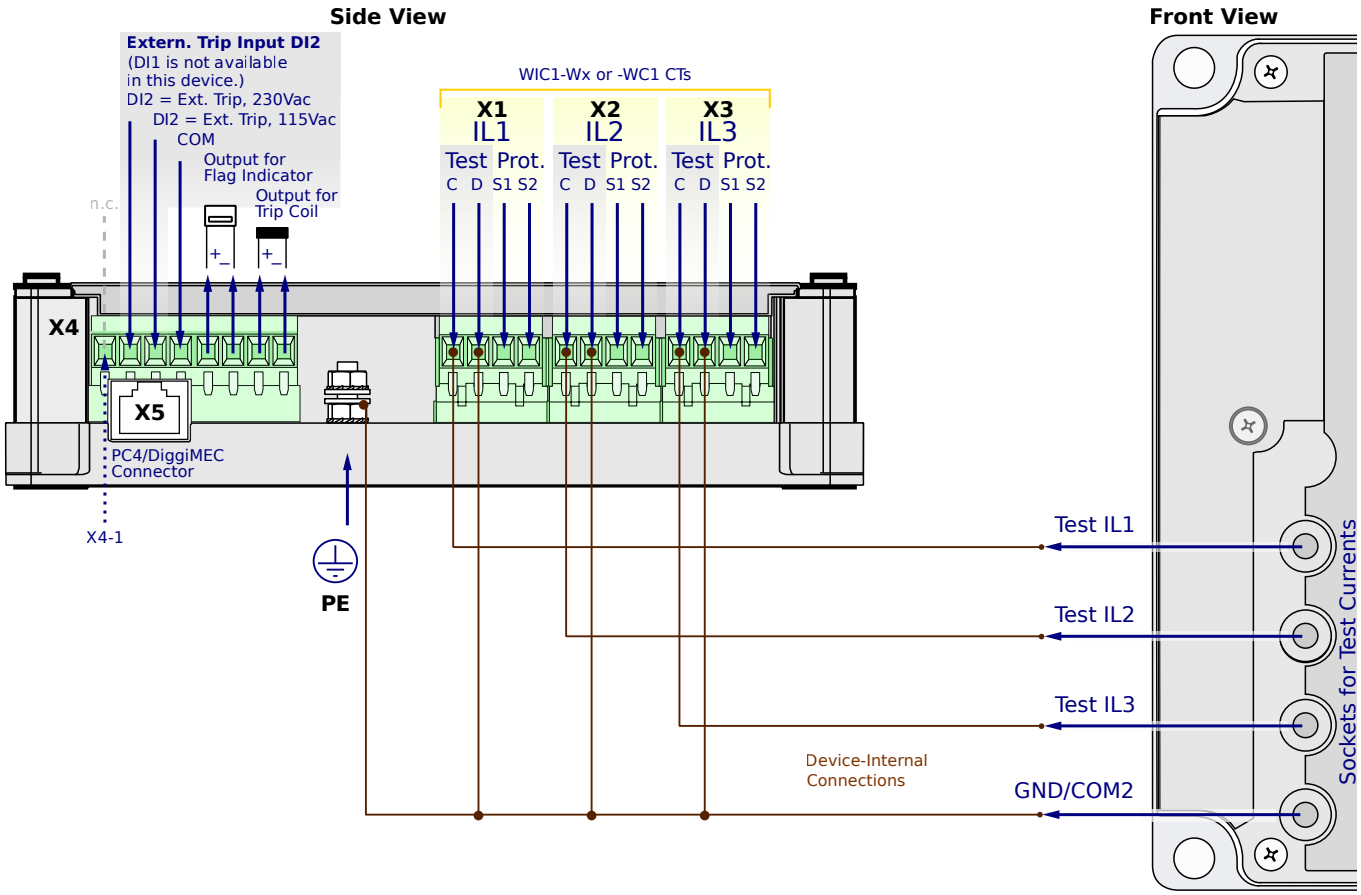


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF1PAH

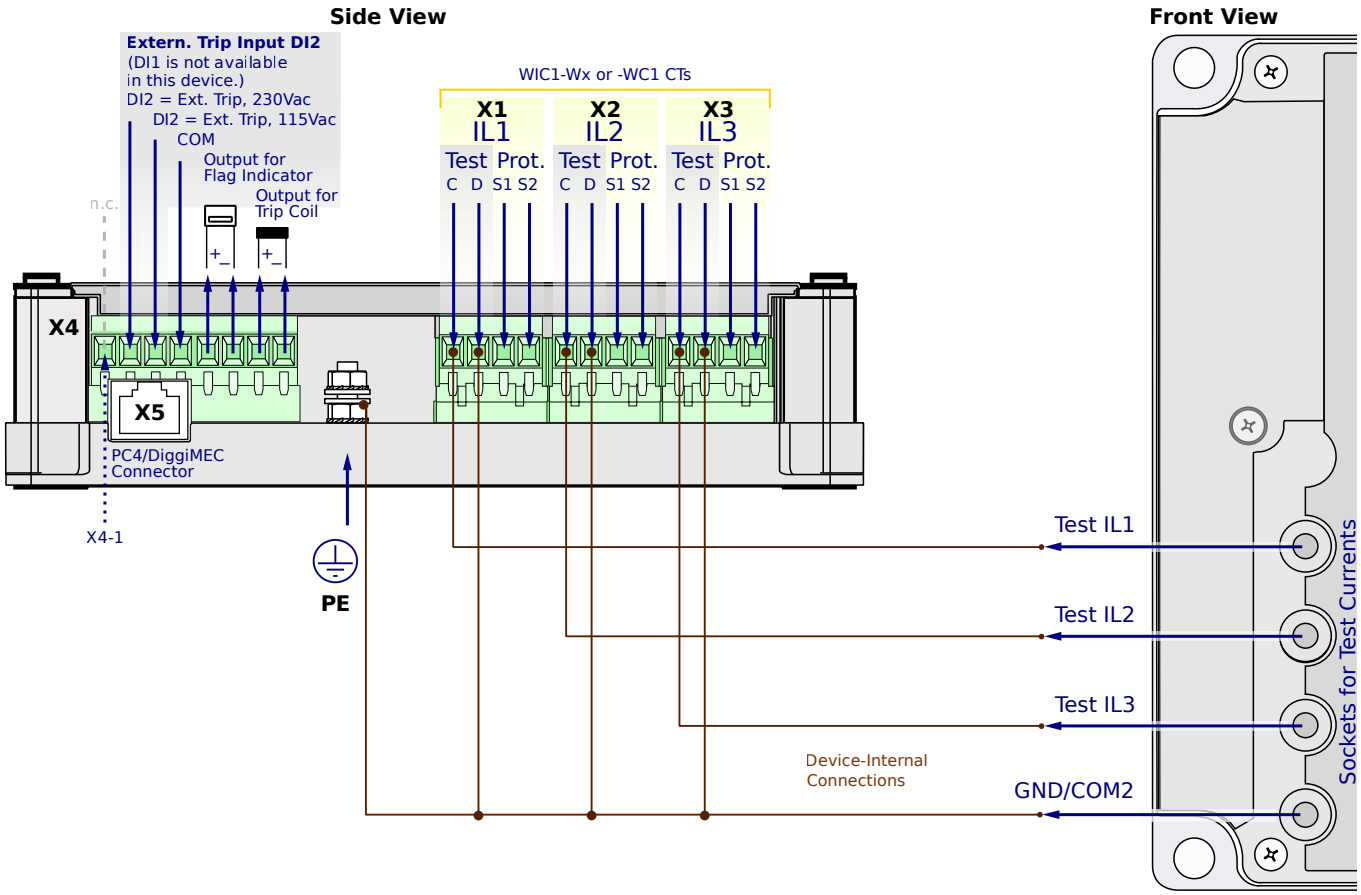


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2SA0

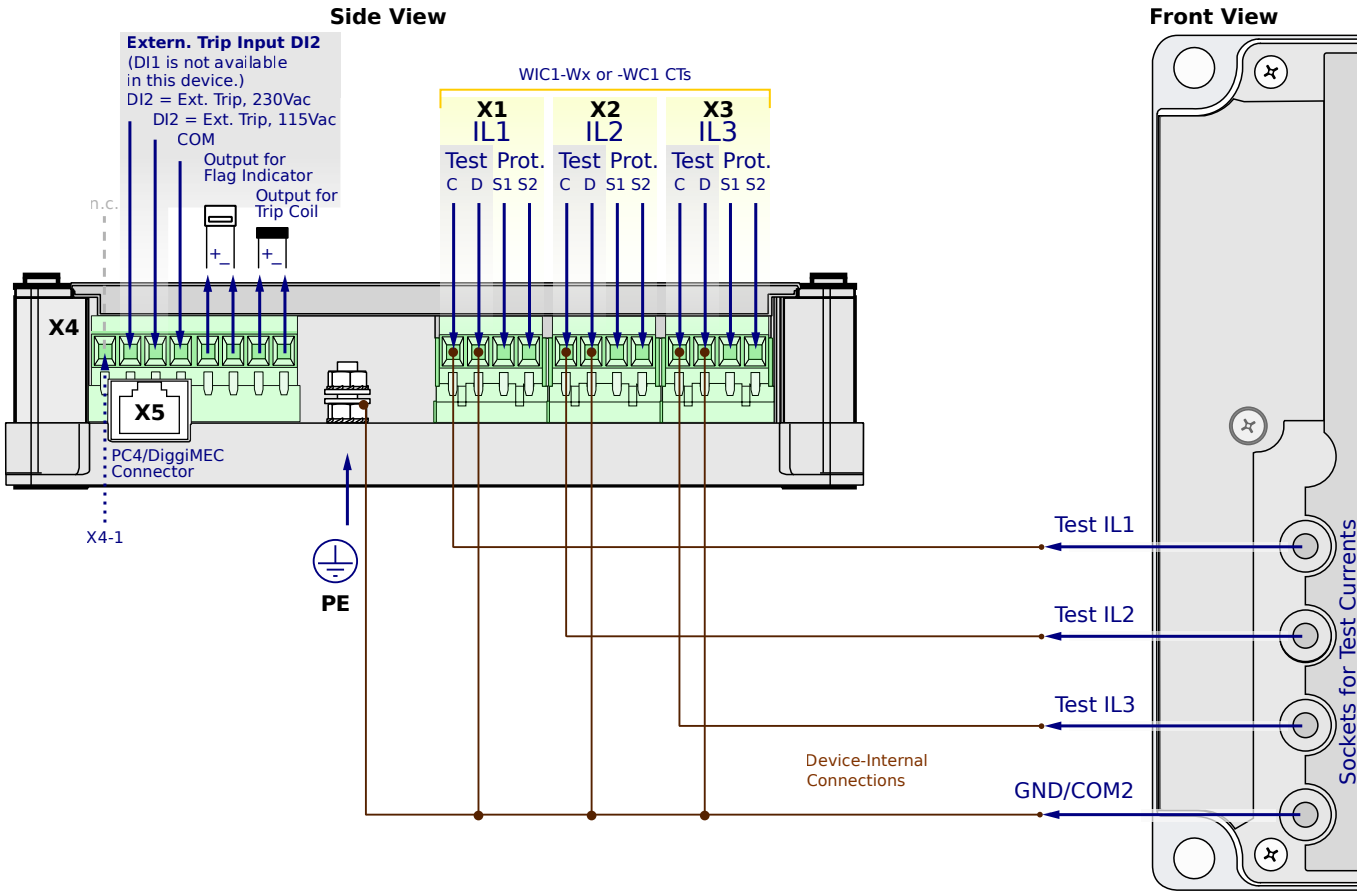


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2SAH

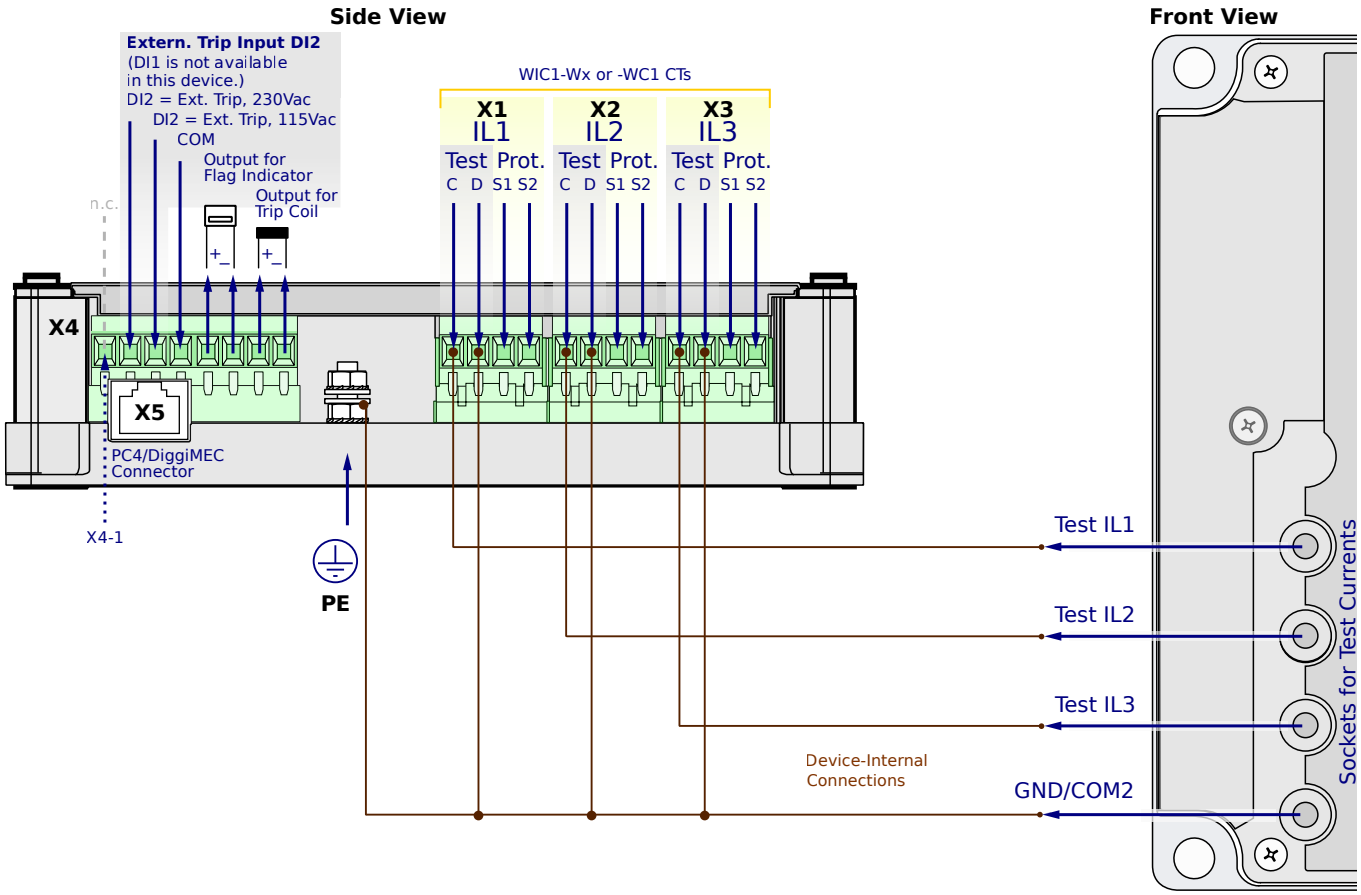


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2AA0

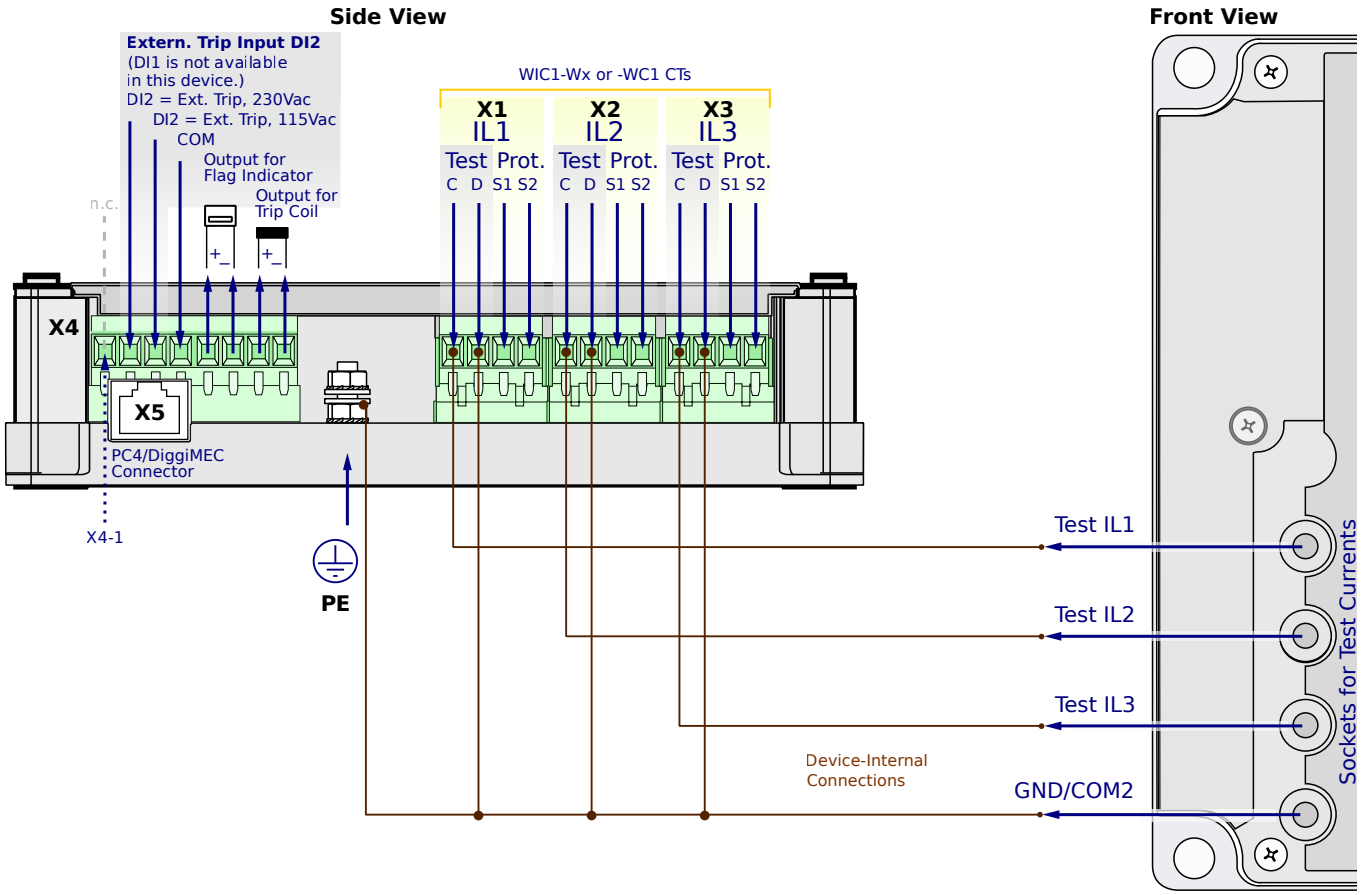


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2AAH

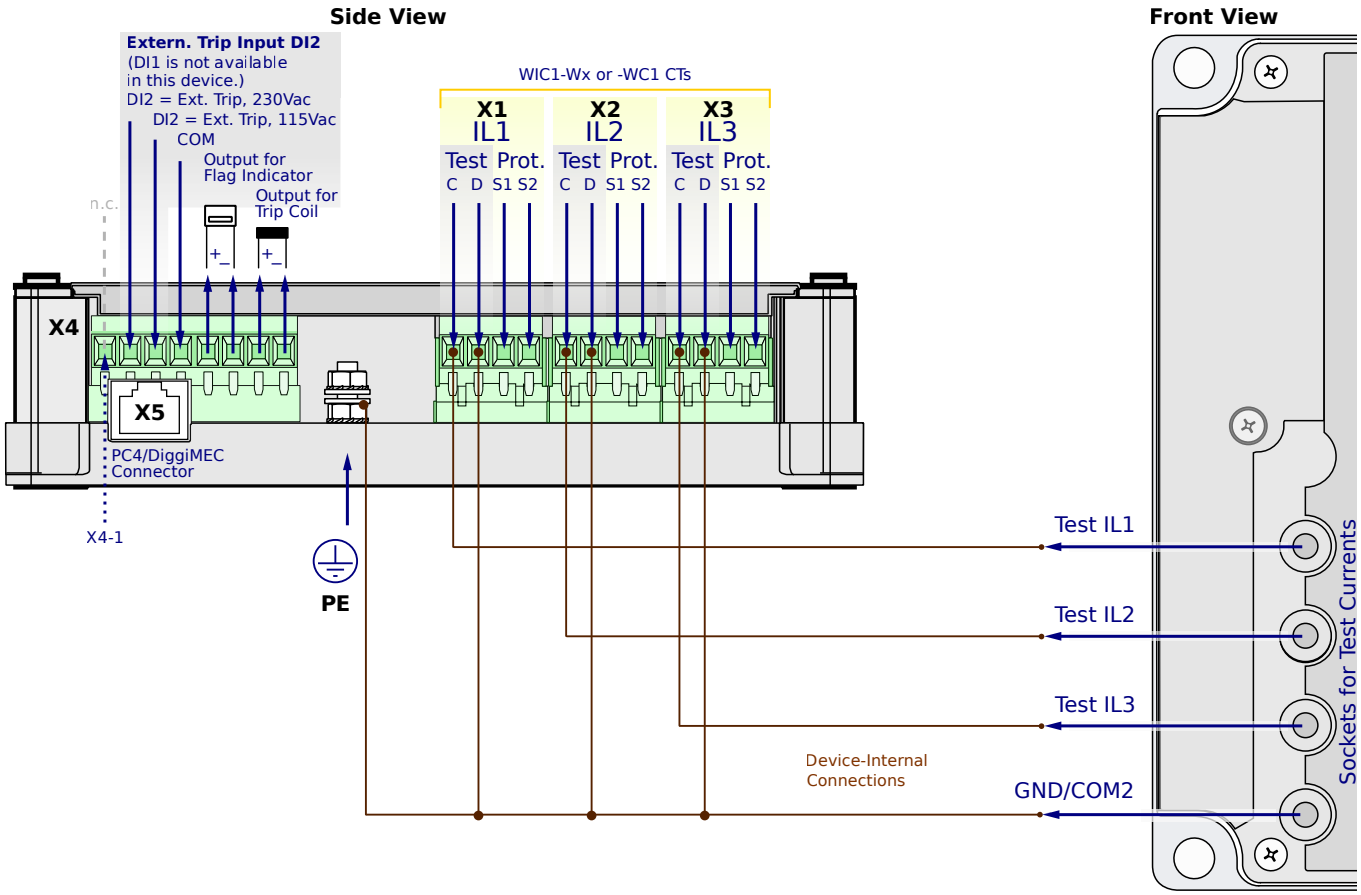


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2PA0

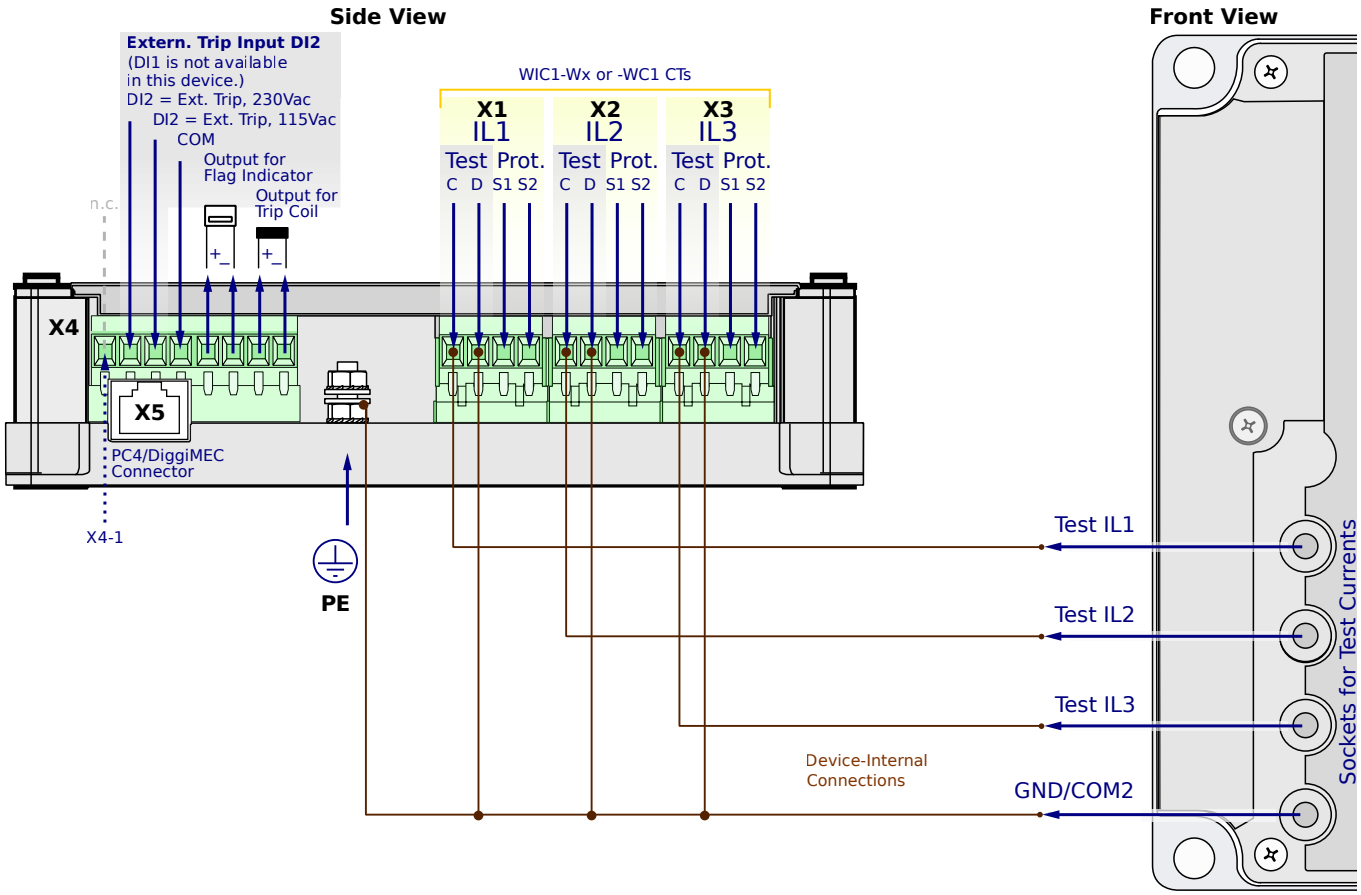


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CF2PAH

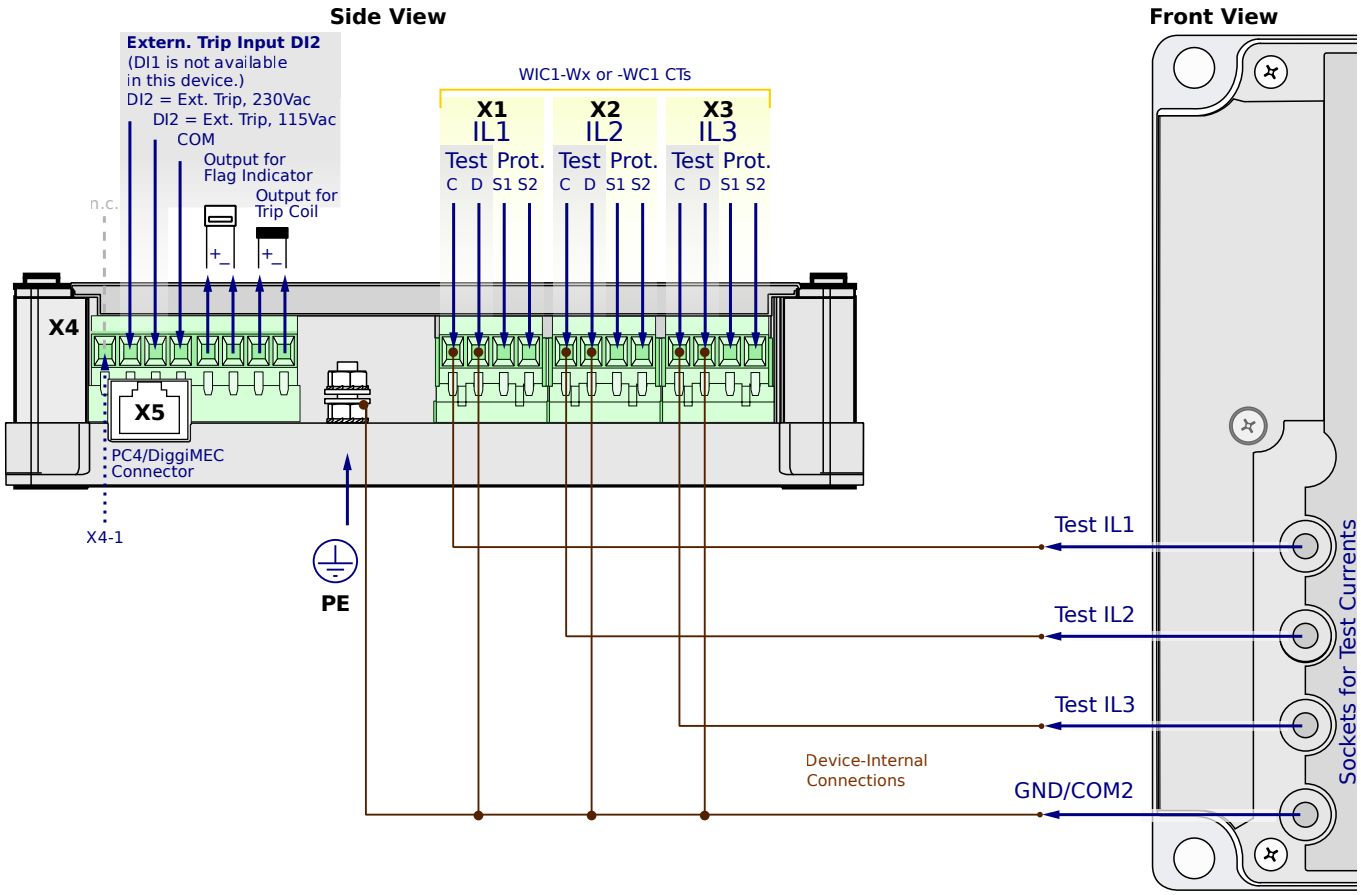


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1SA0

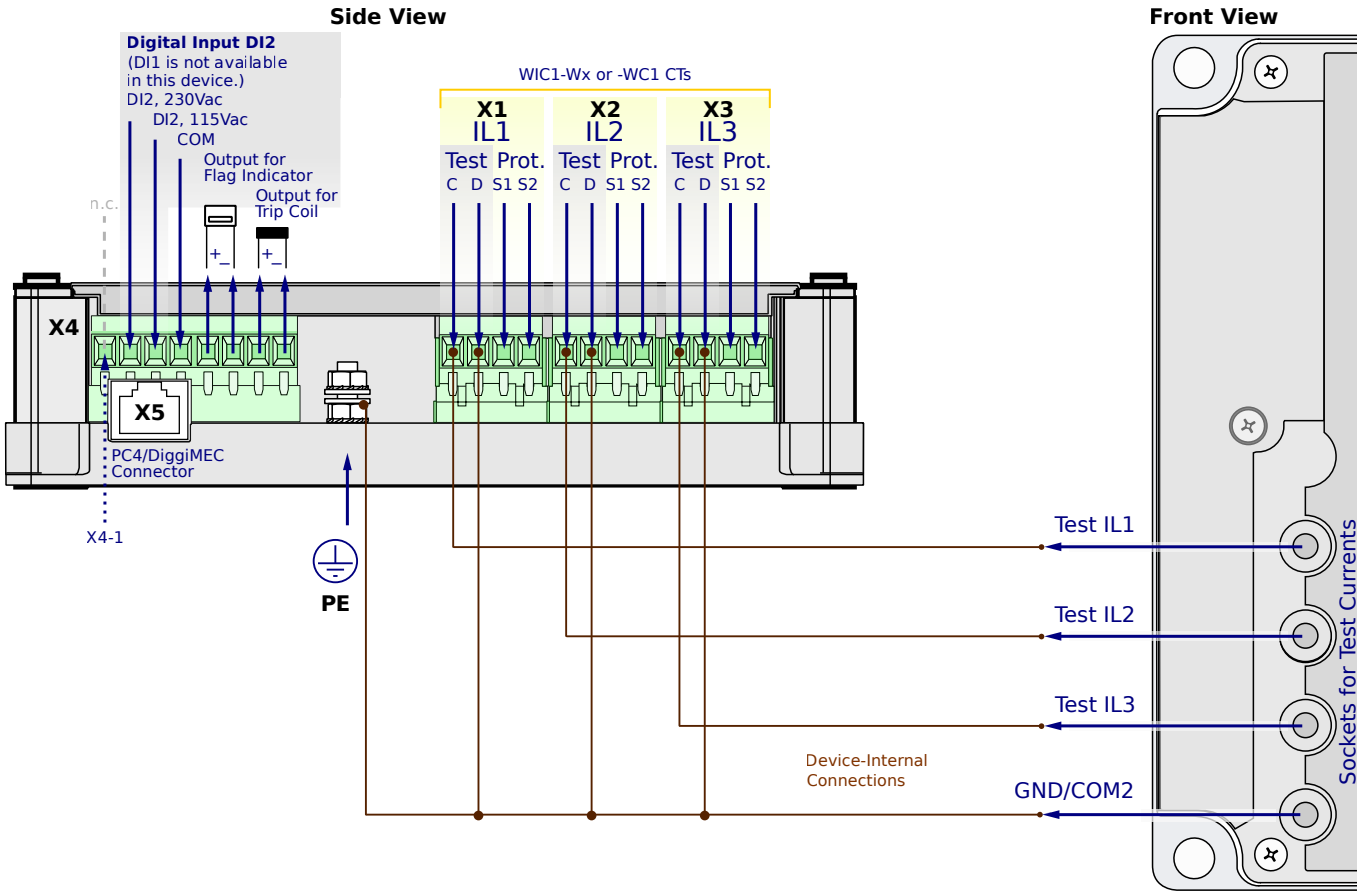


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1SAH

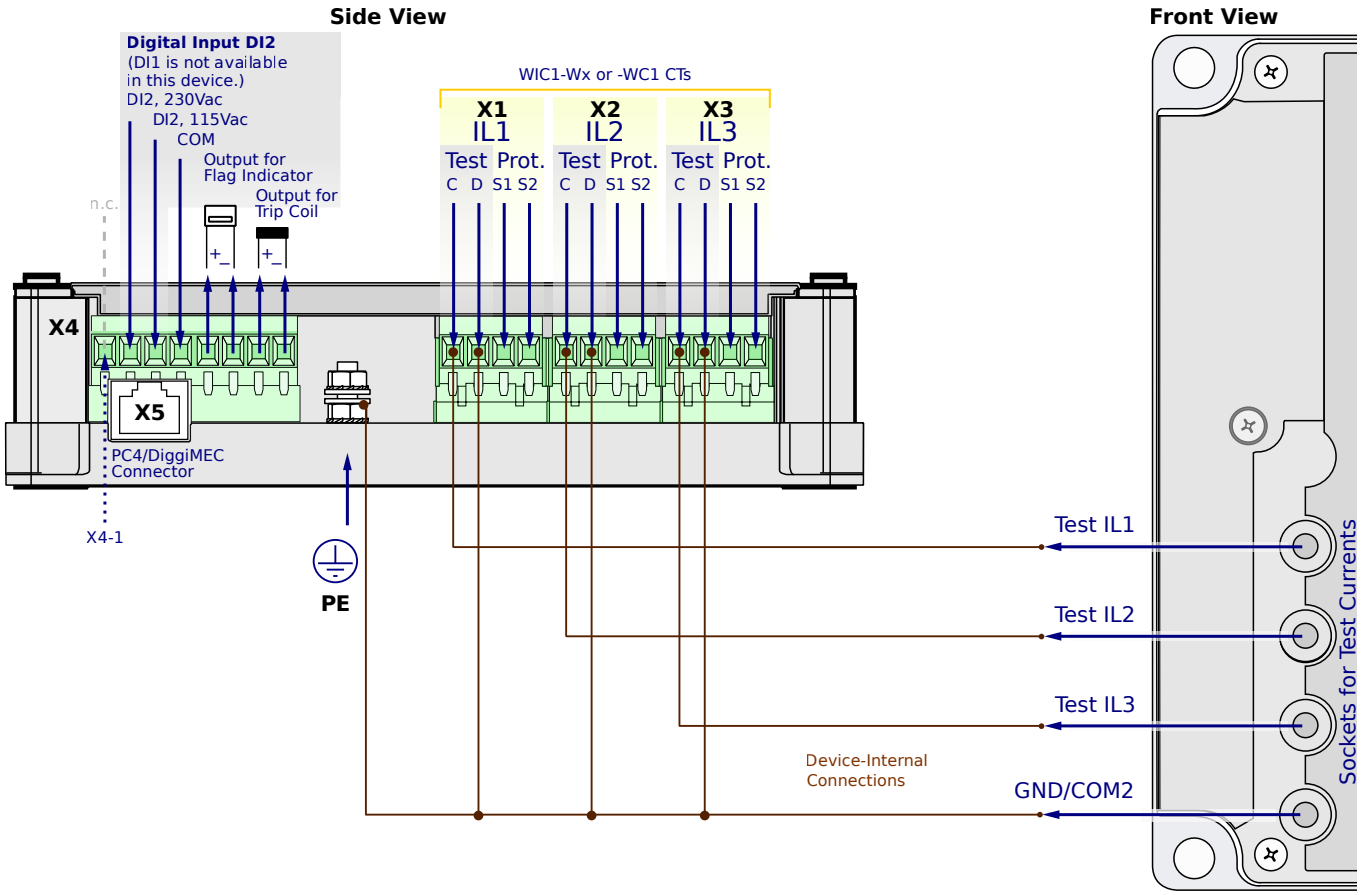


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1AA0

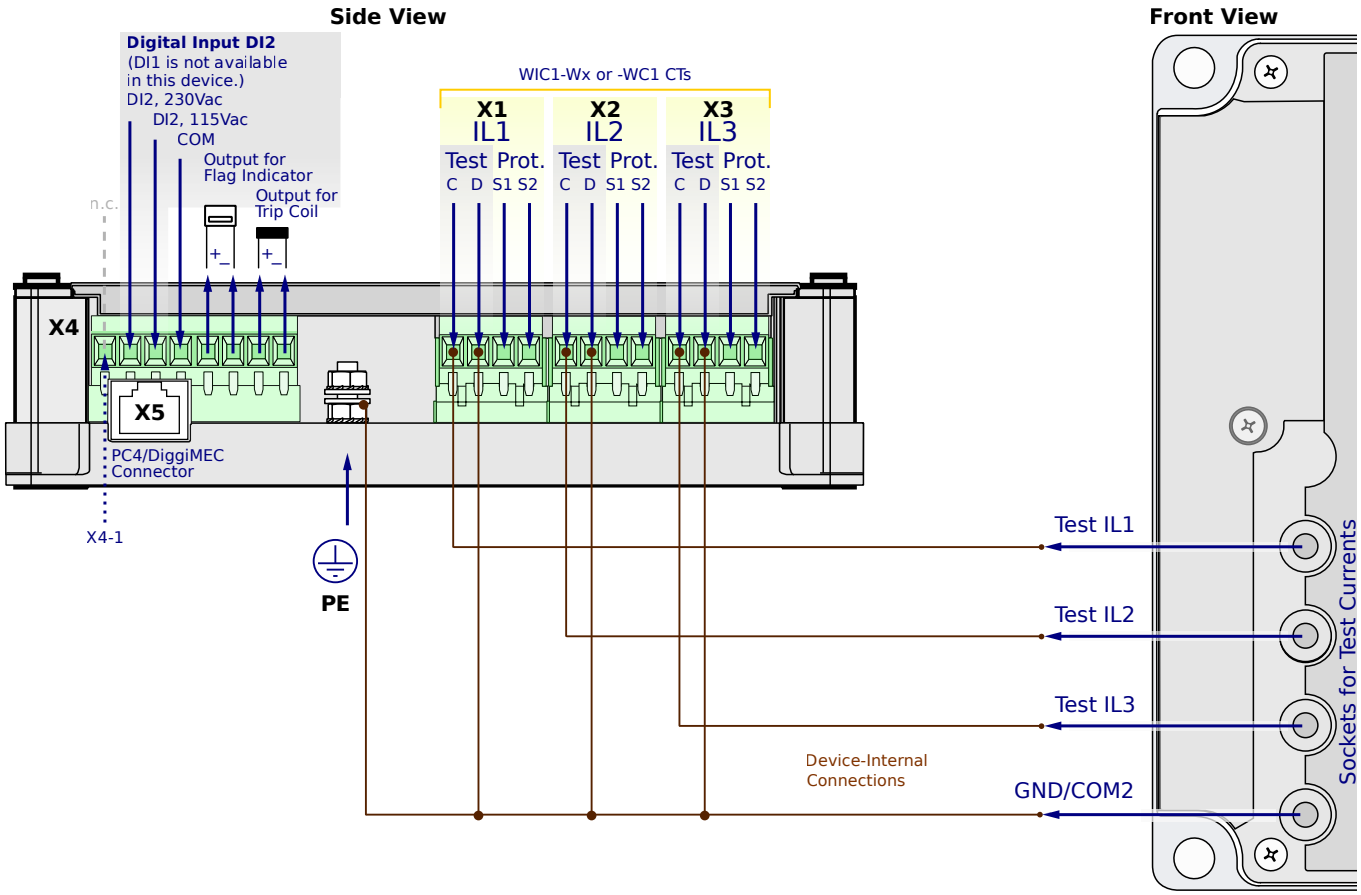


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1AAH

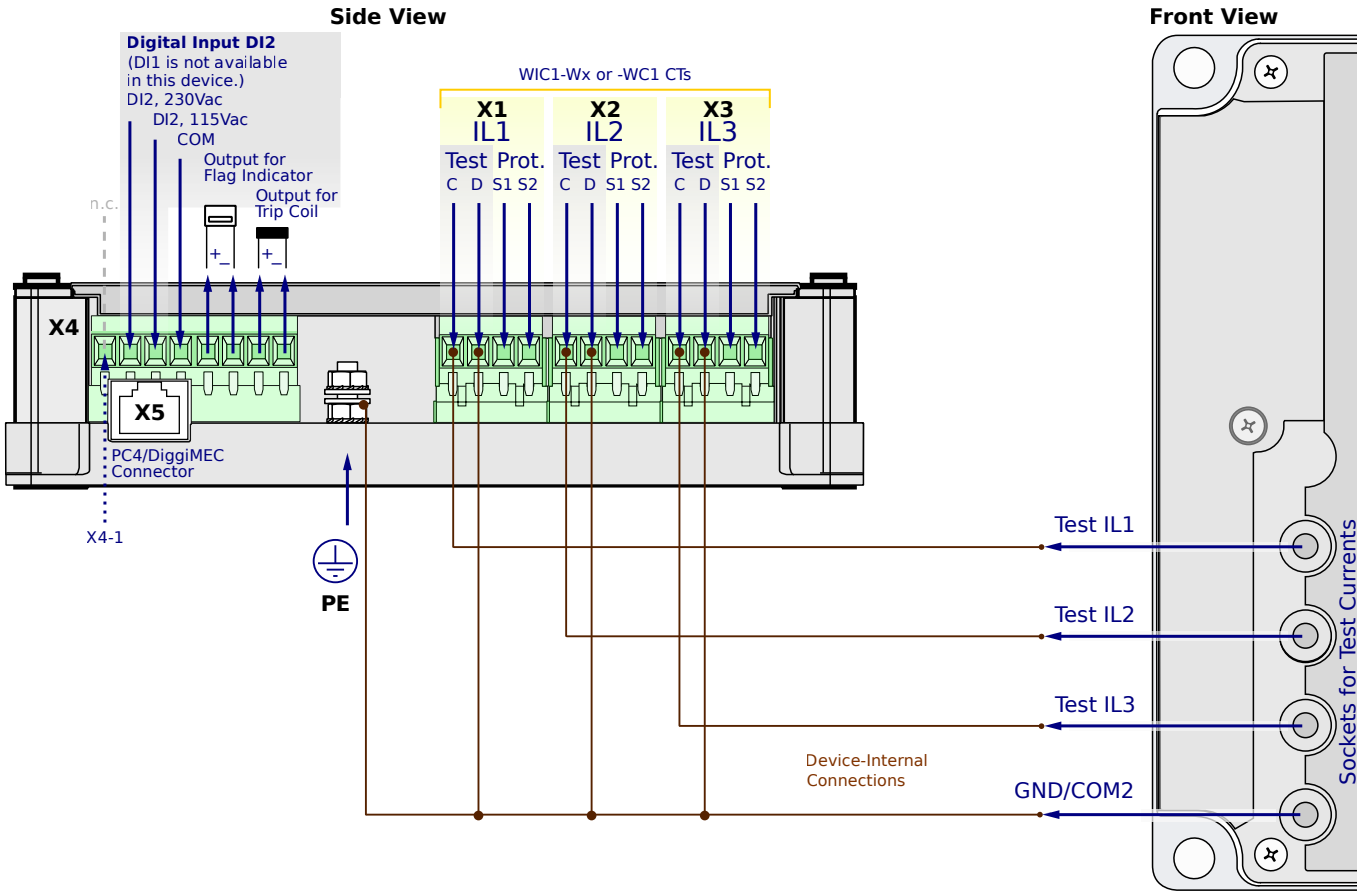


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1PA0

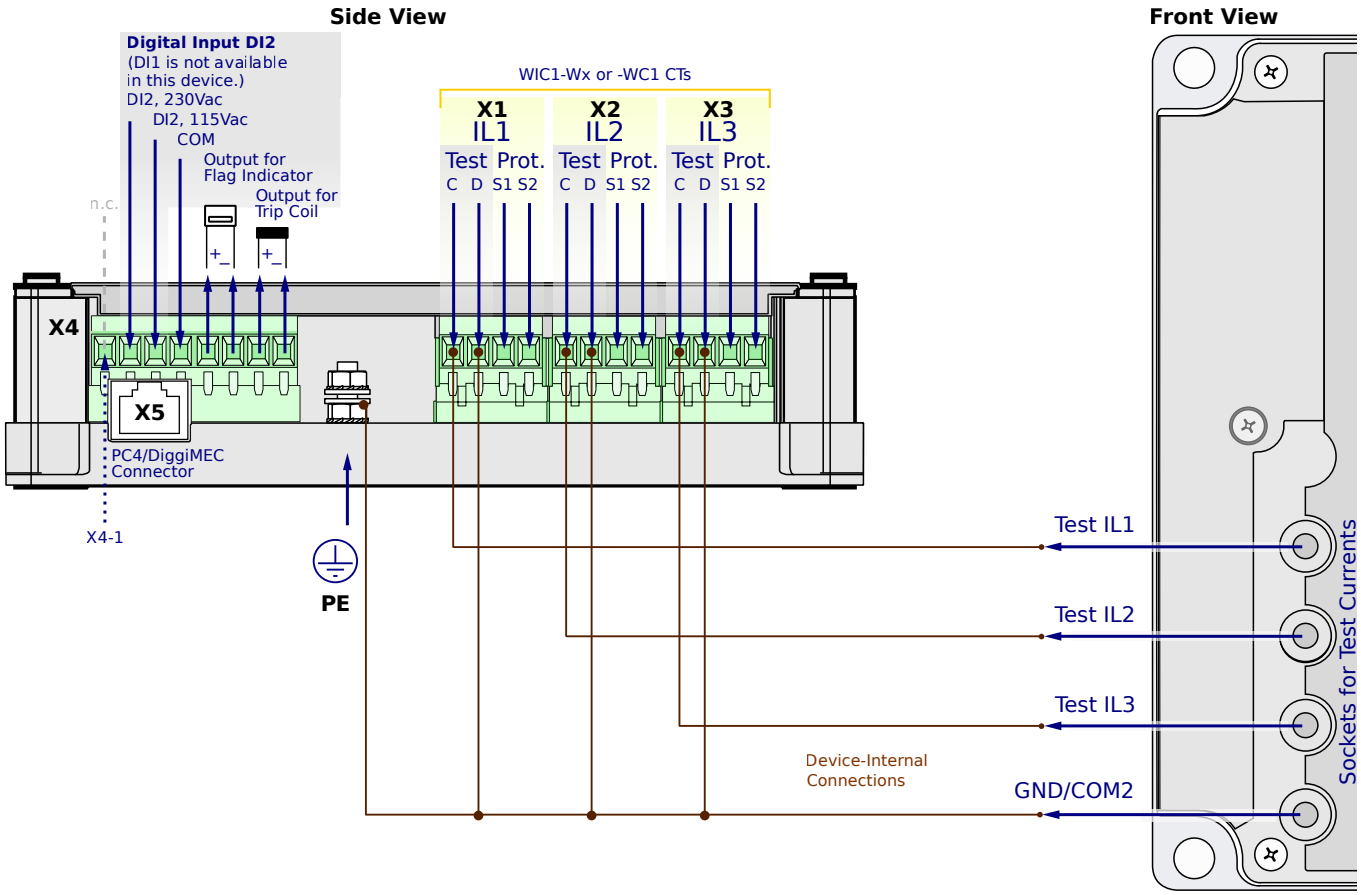


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC1PAH

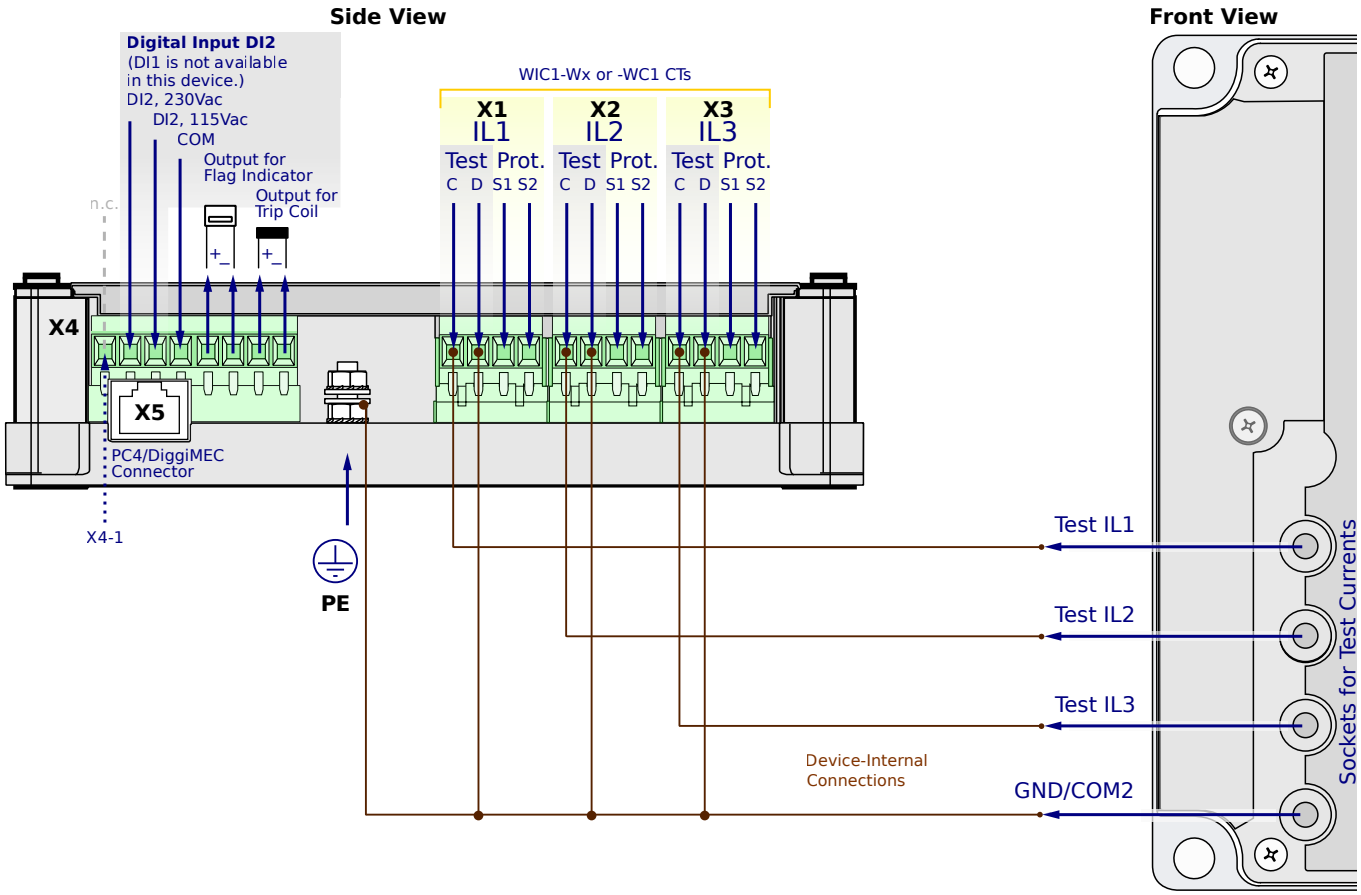


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2SA0

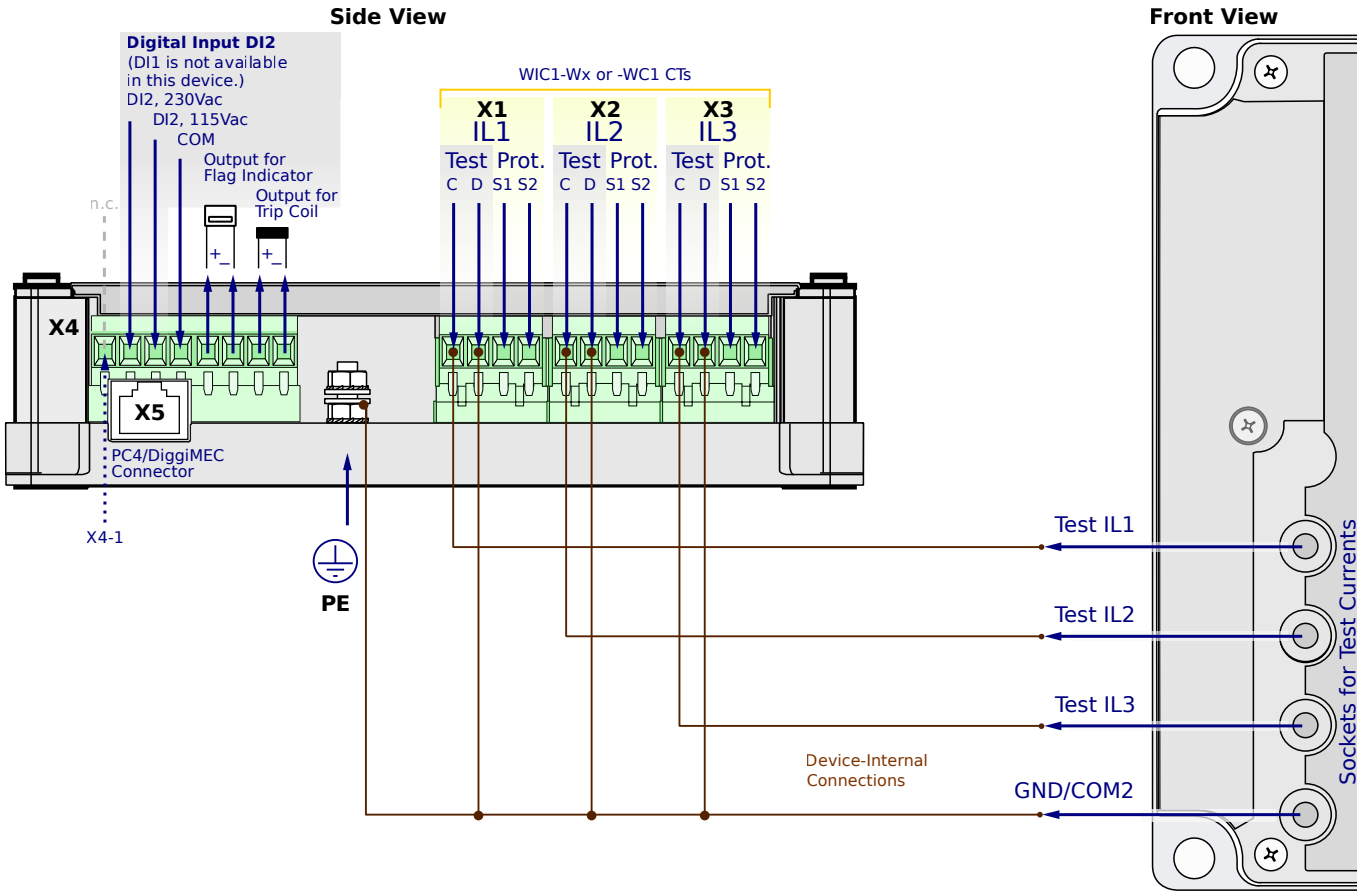


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2SAH

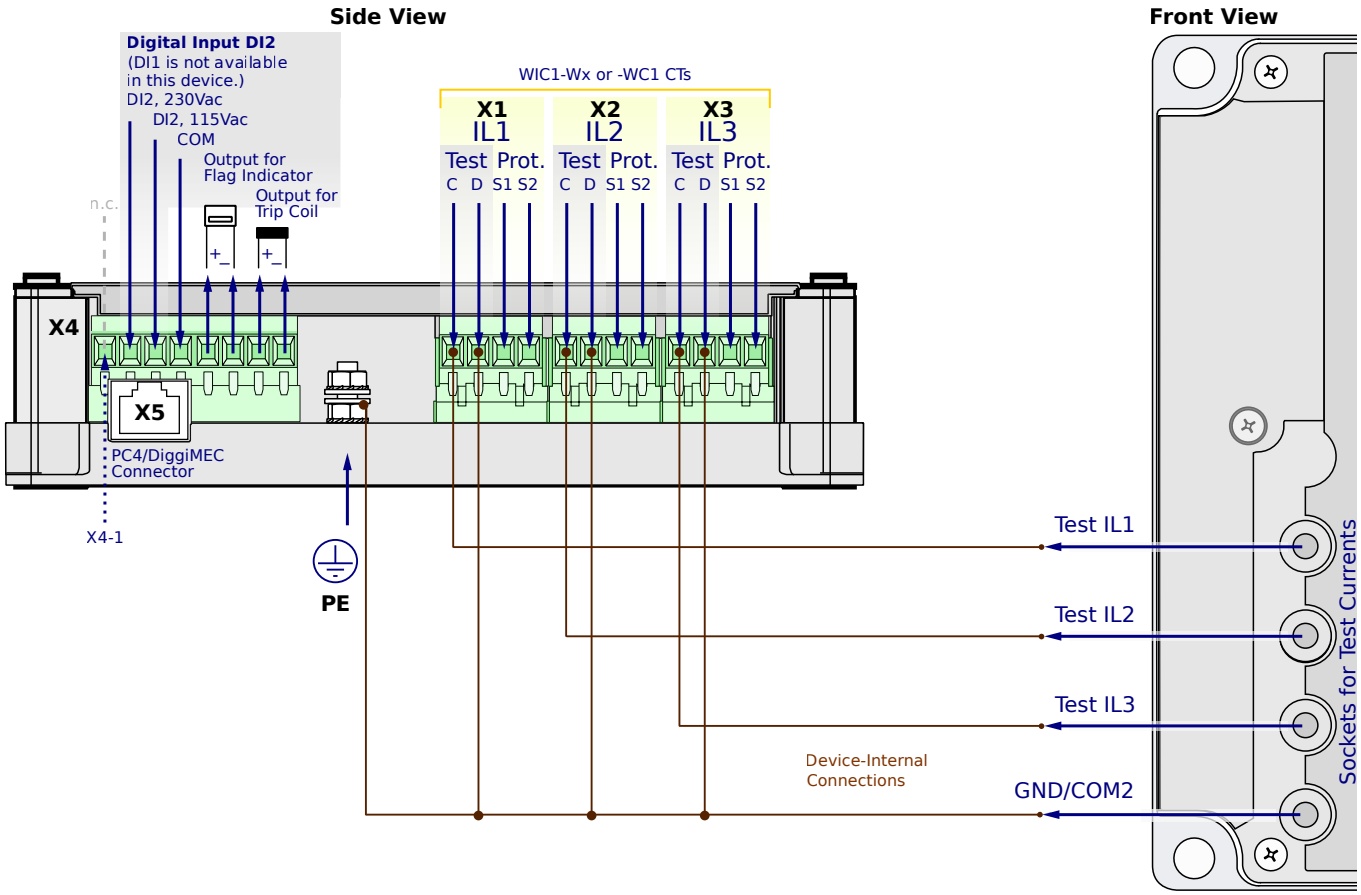


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2AA0

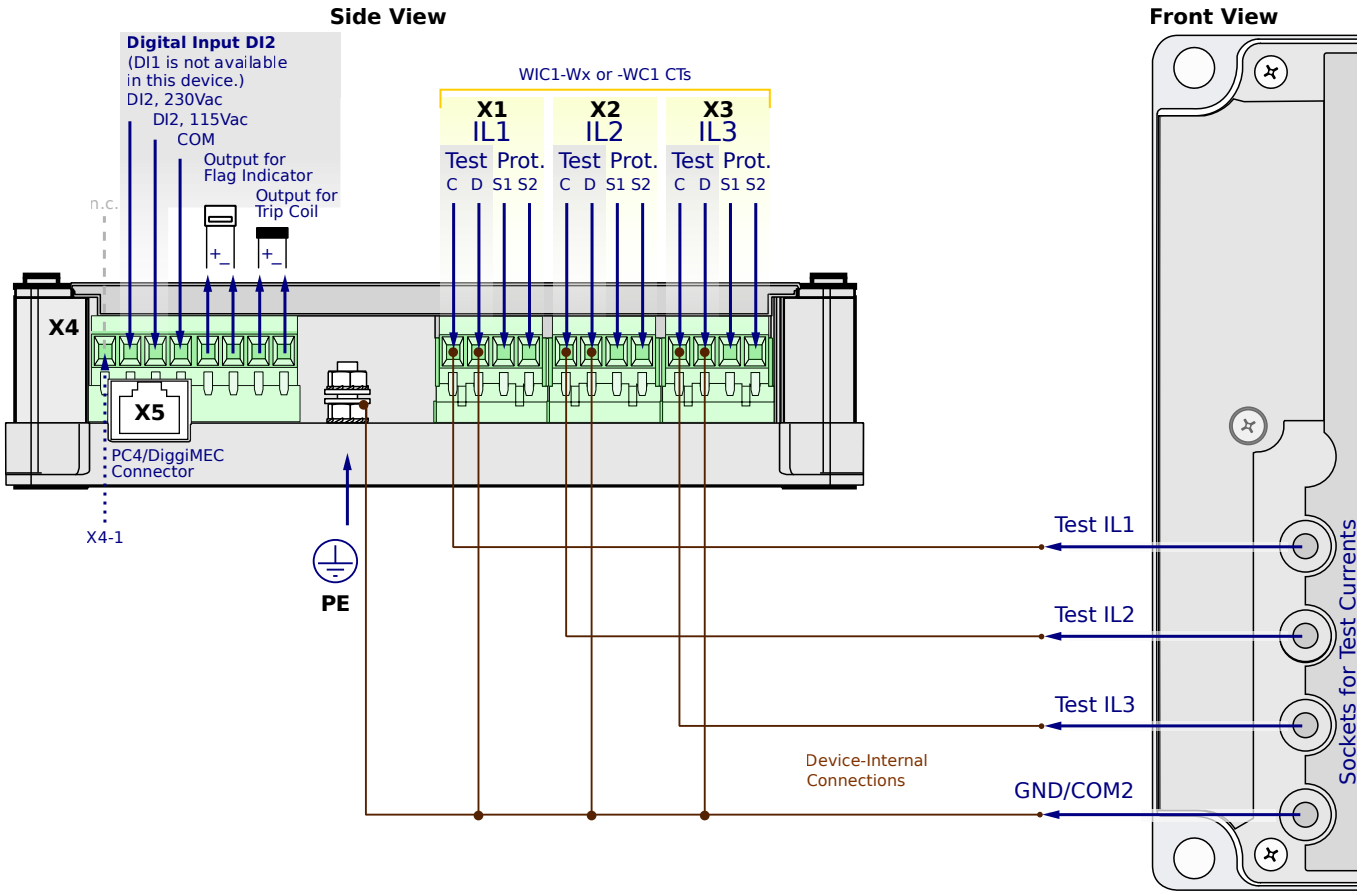


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2AAH

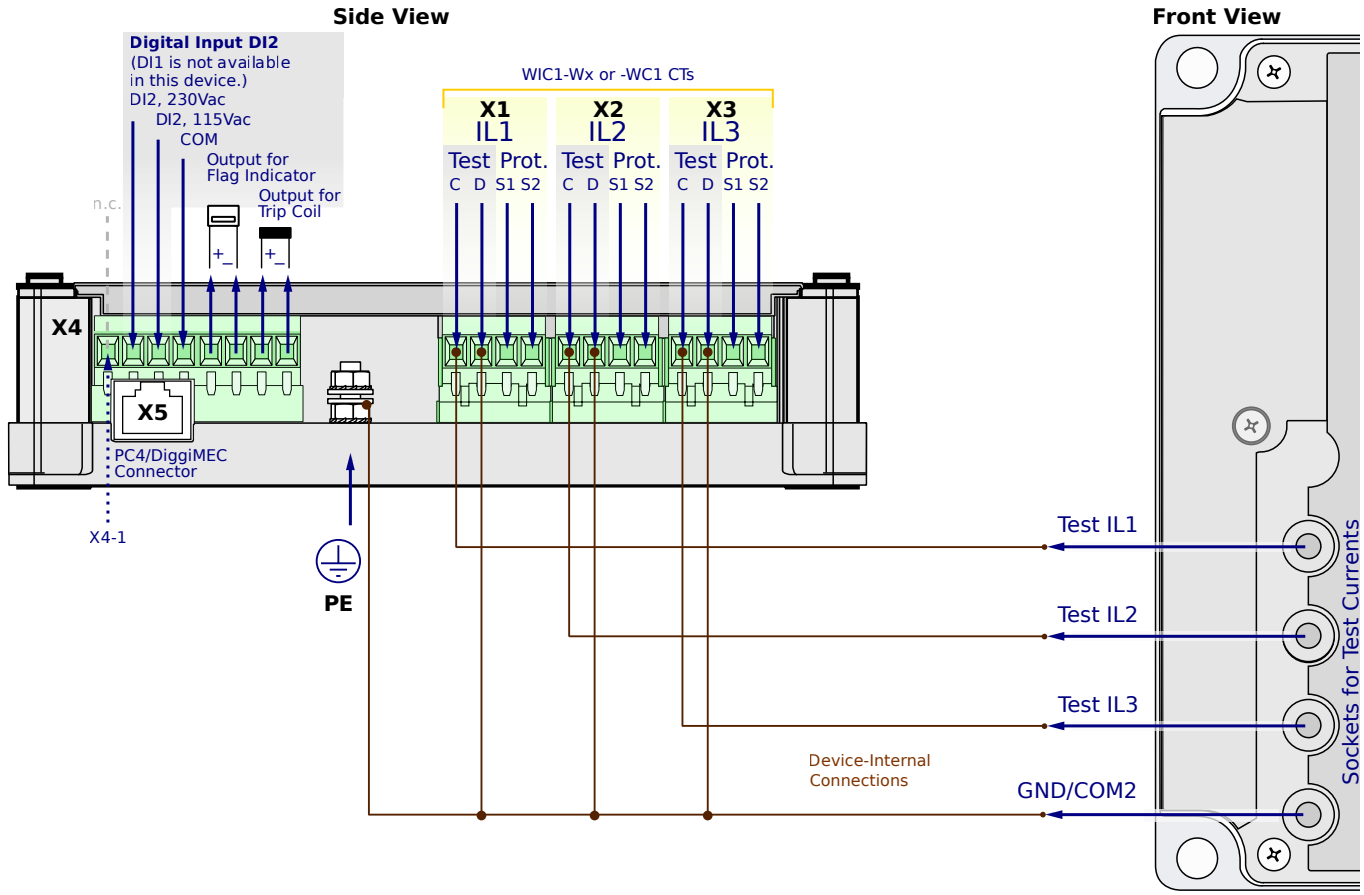


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2PA0

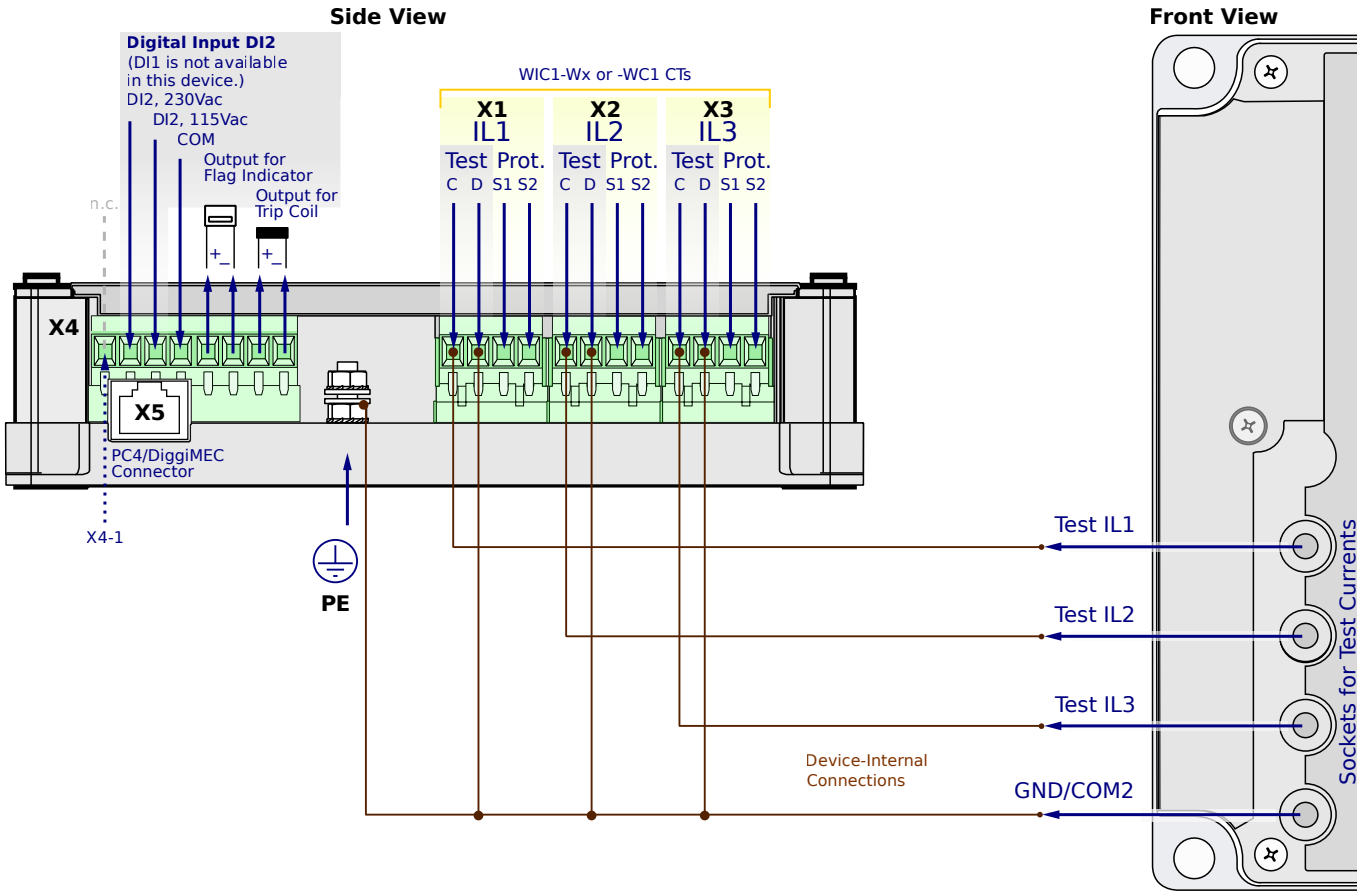


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SN6CC2PAH

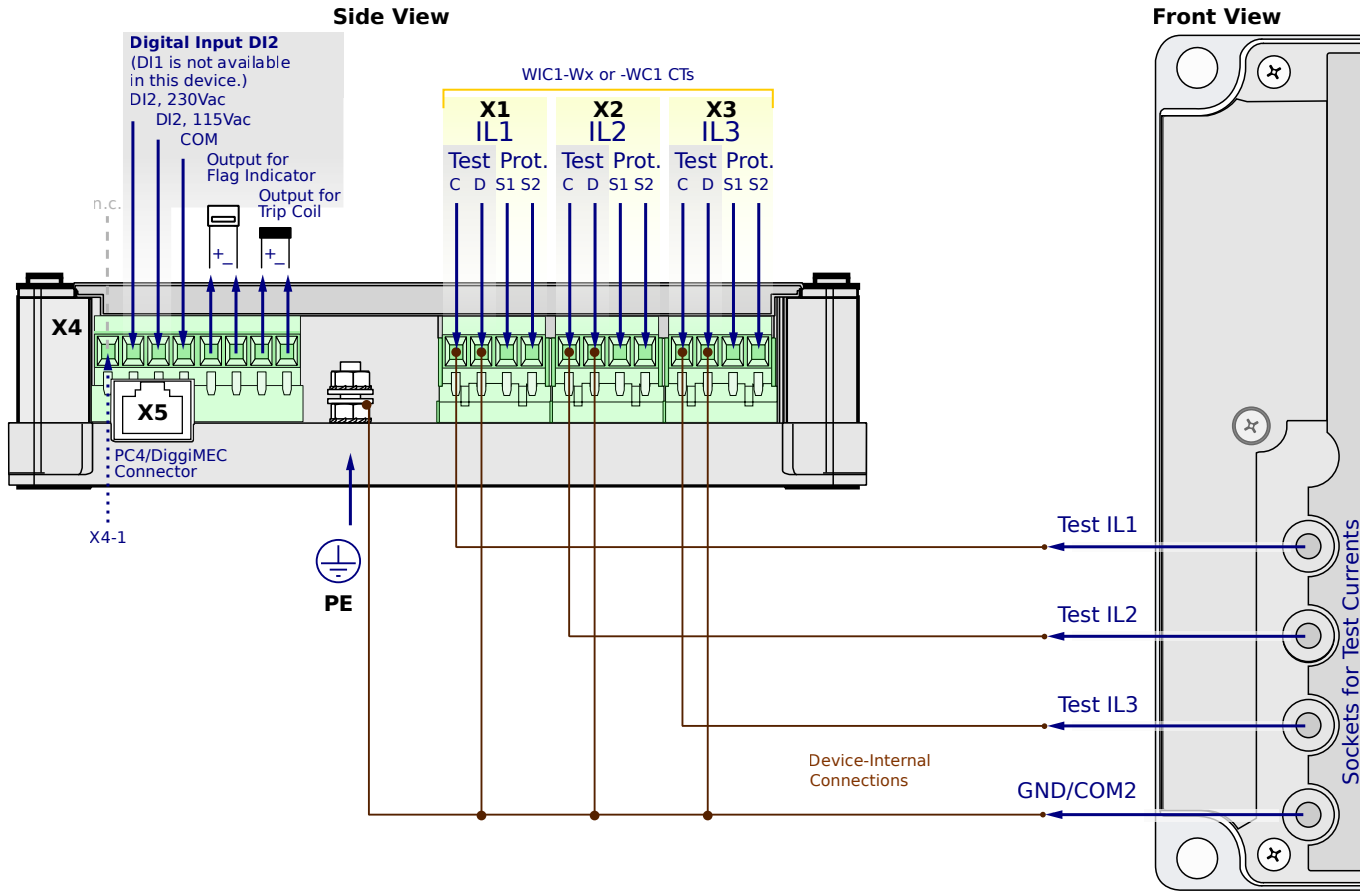


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0SA0

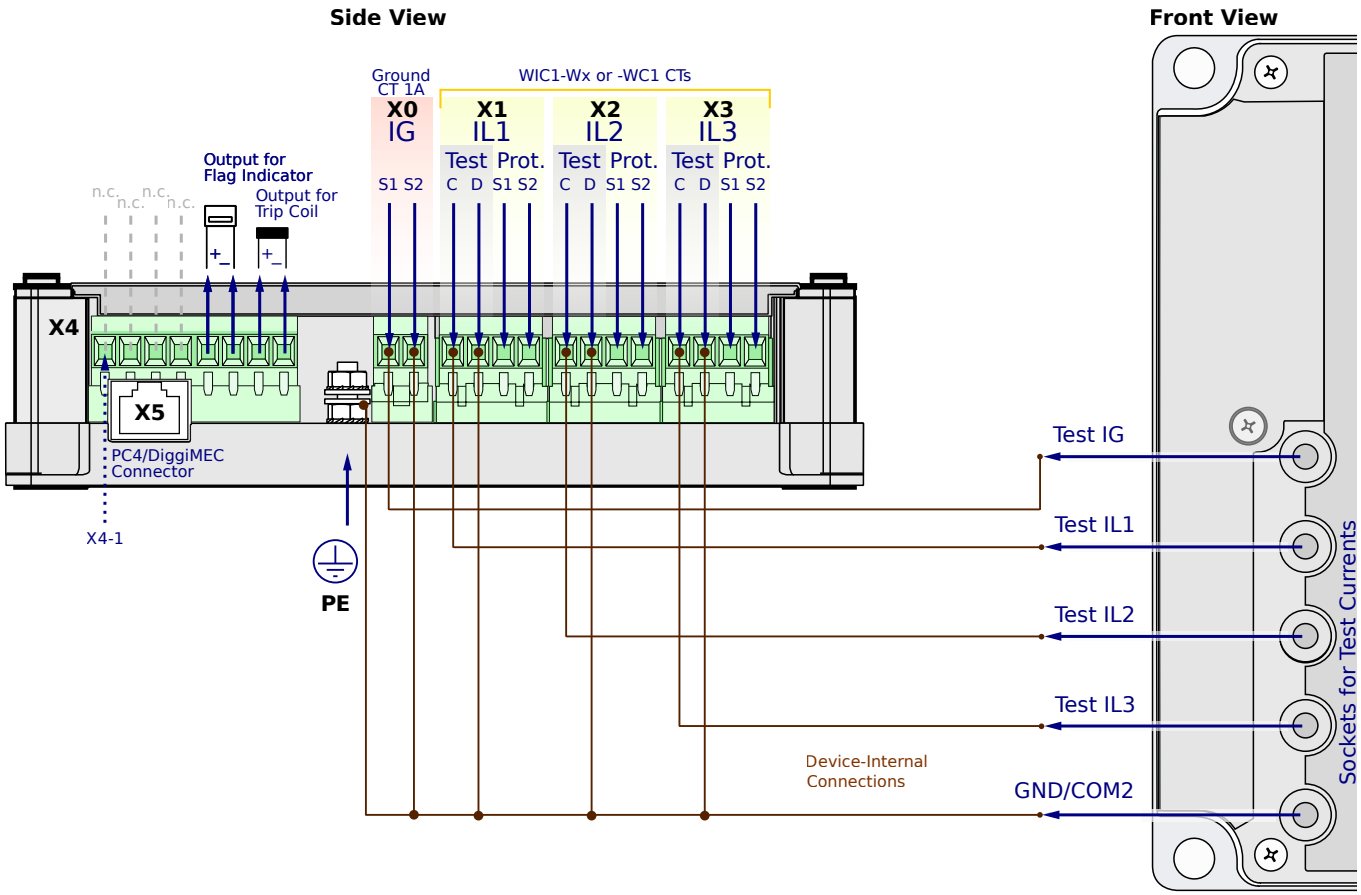


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0SAH

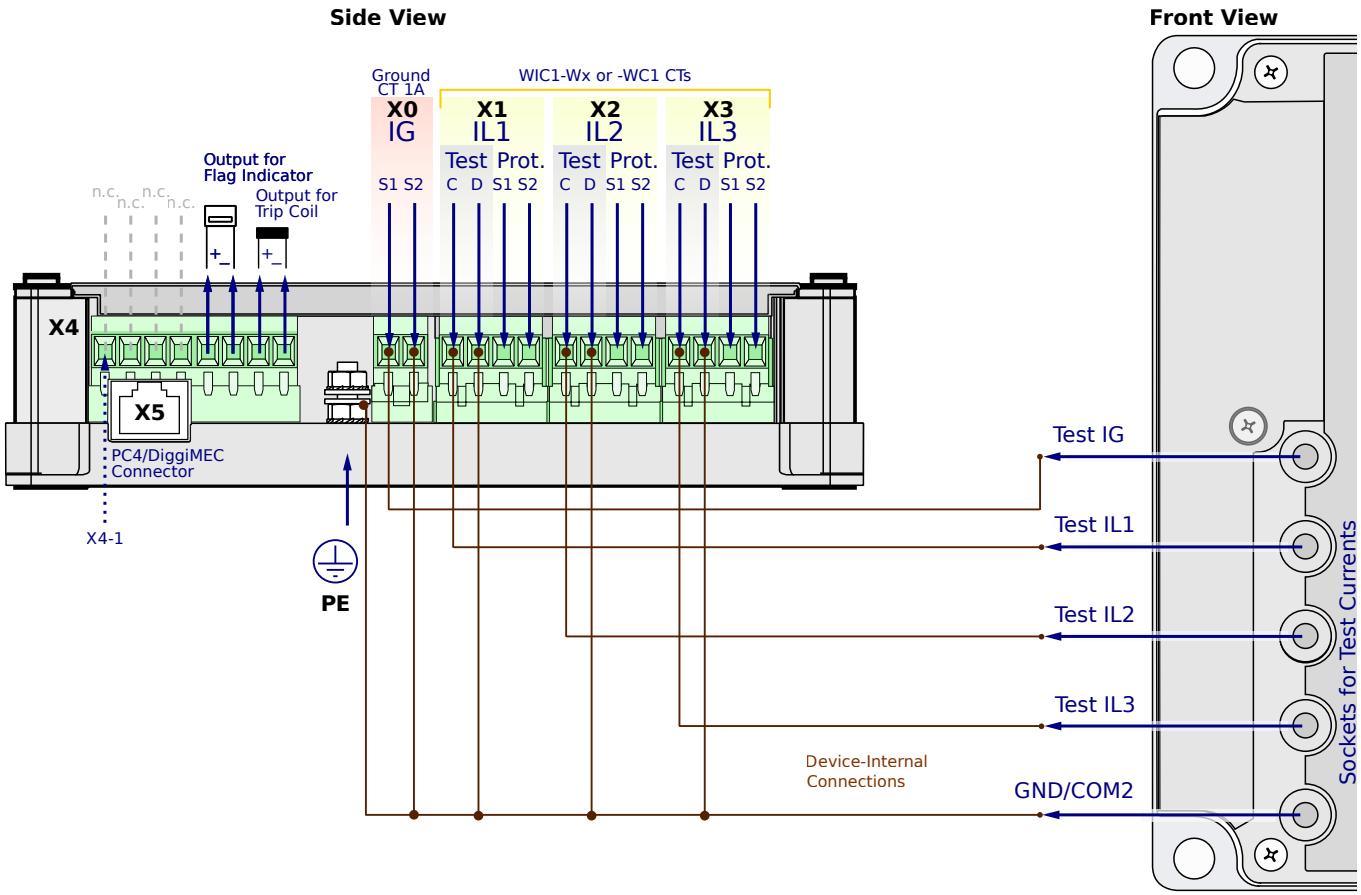


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0AA0

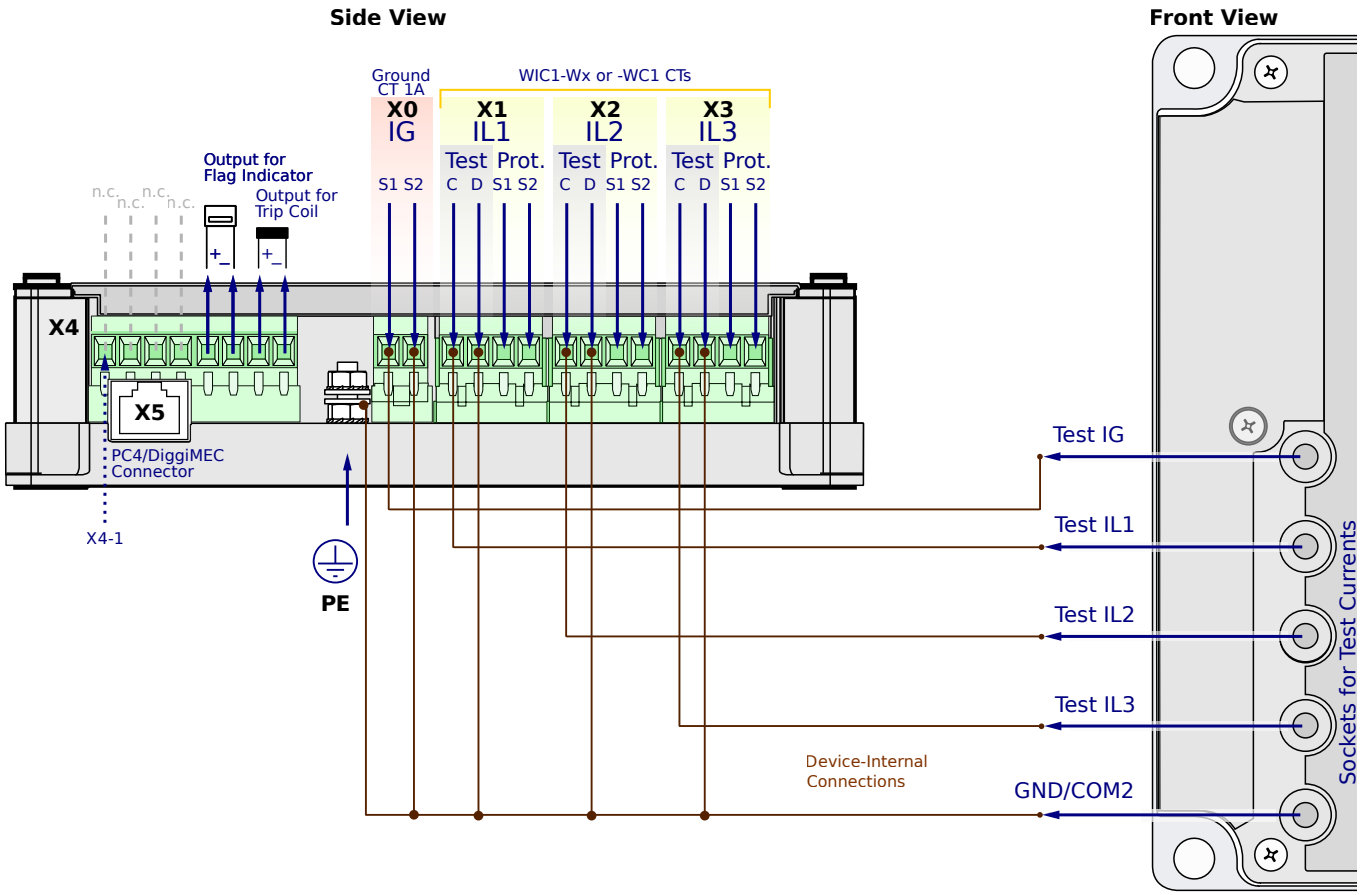


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0AAH

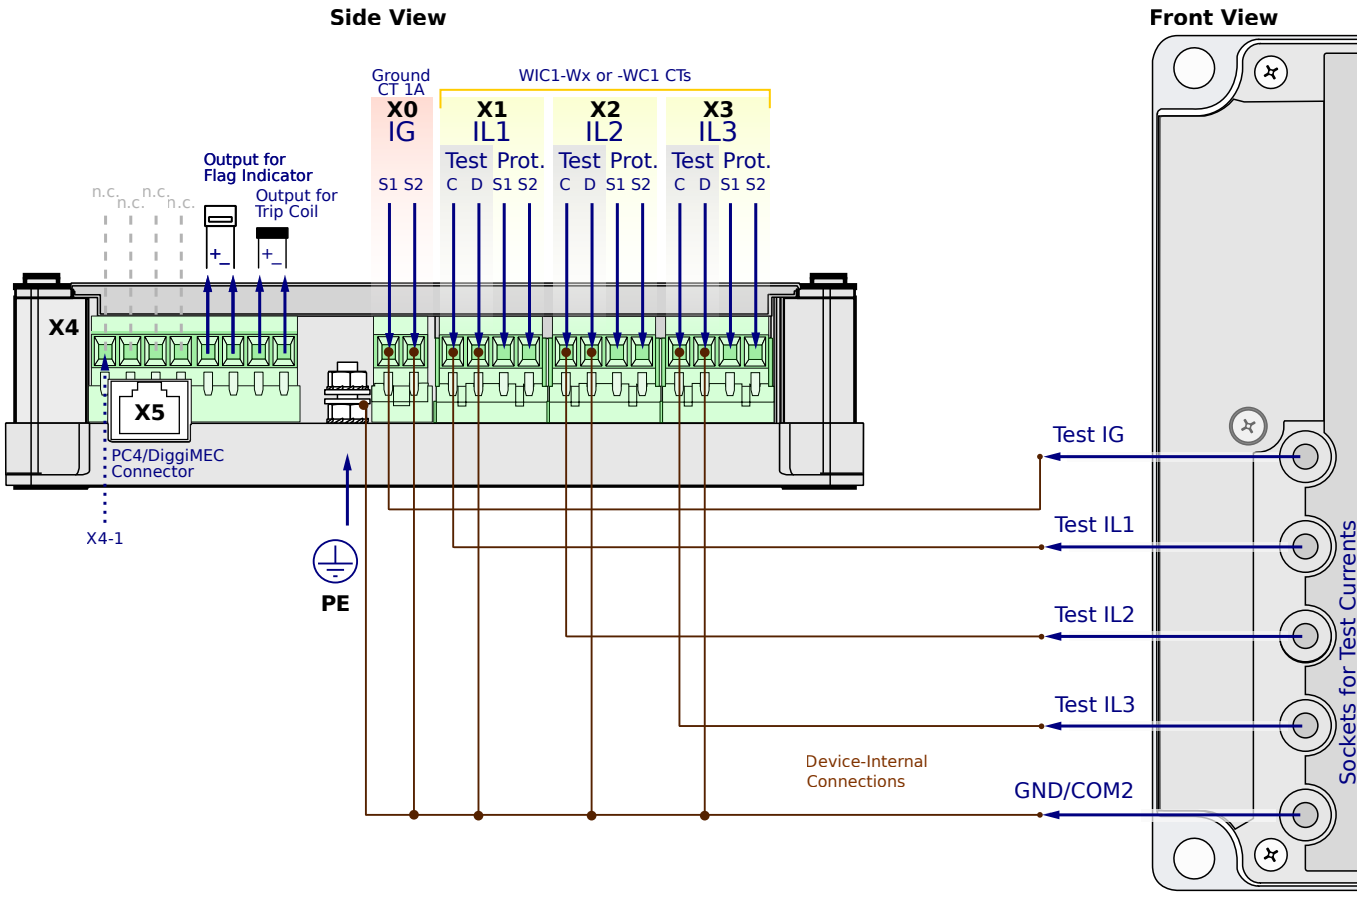


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0PA0

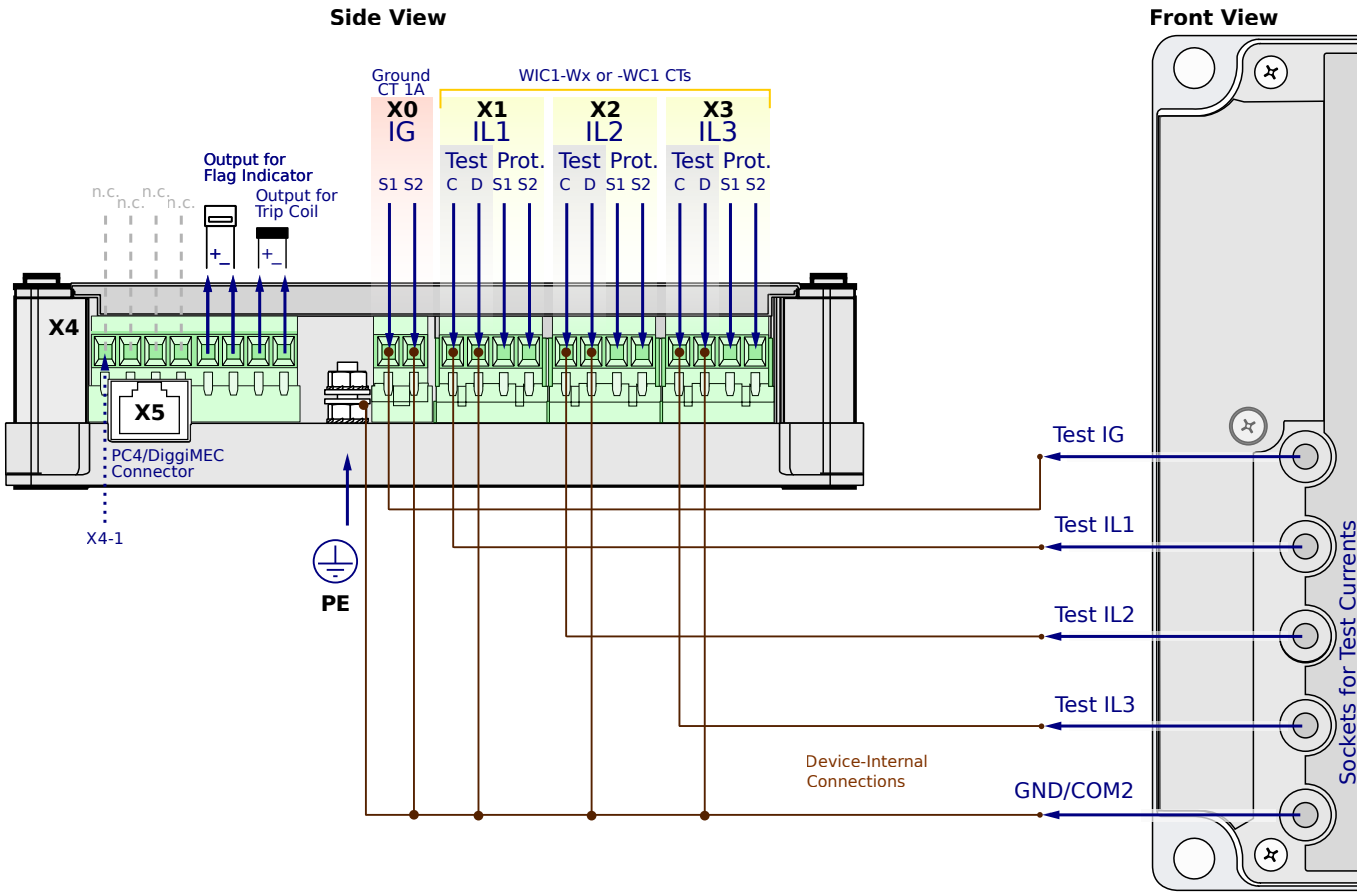


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN0PAH

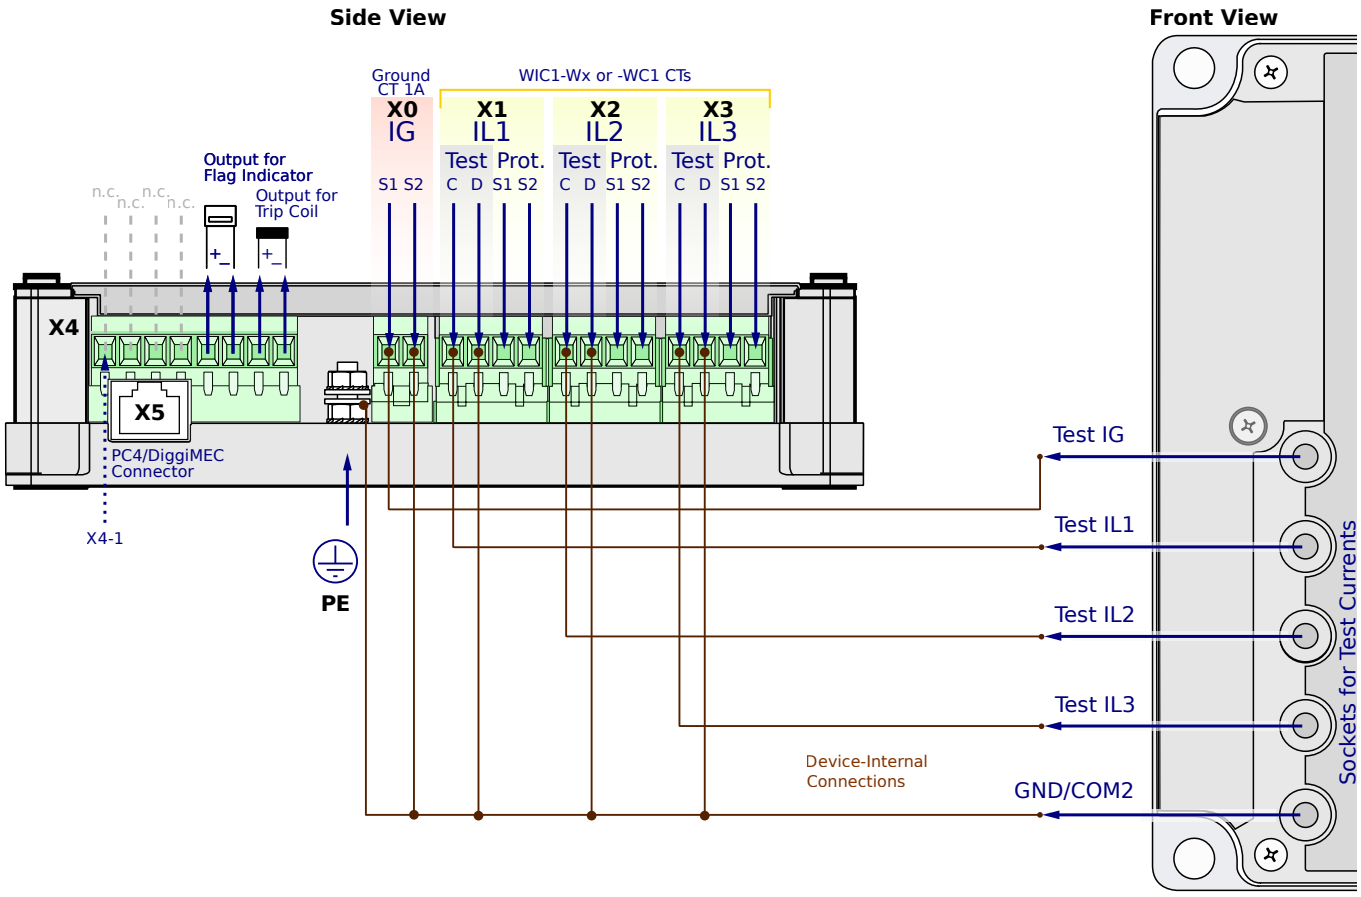


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1SA0

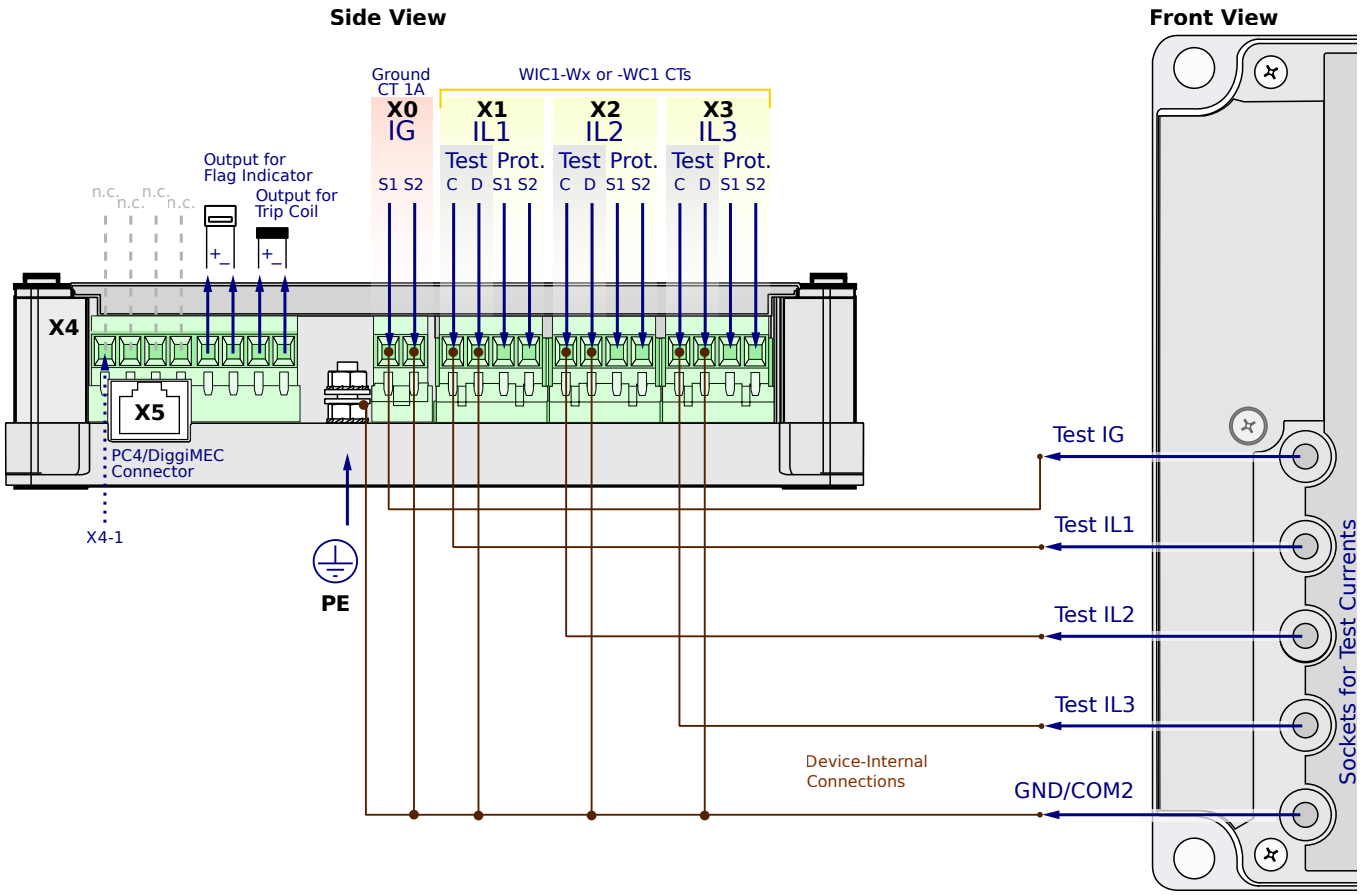


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1SAH

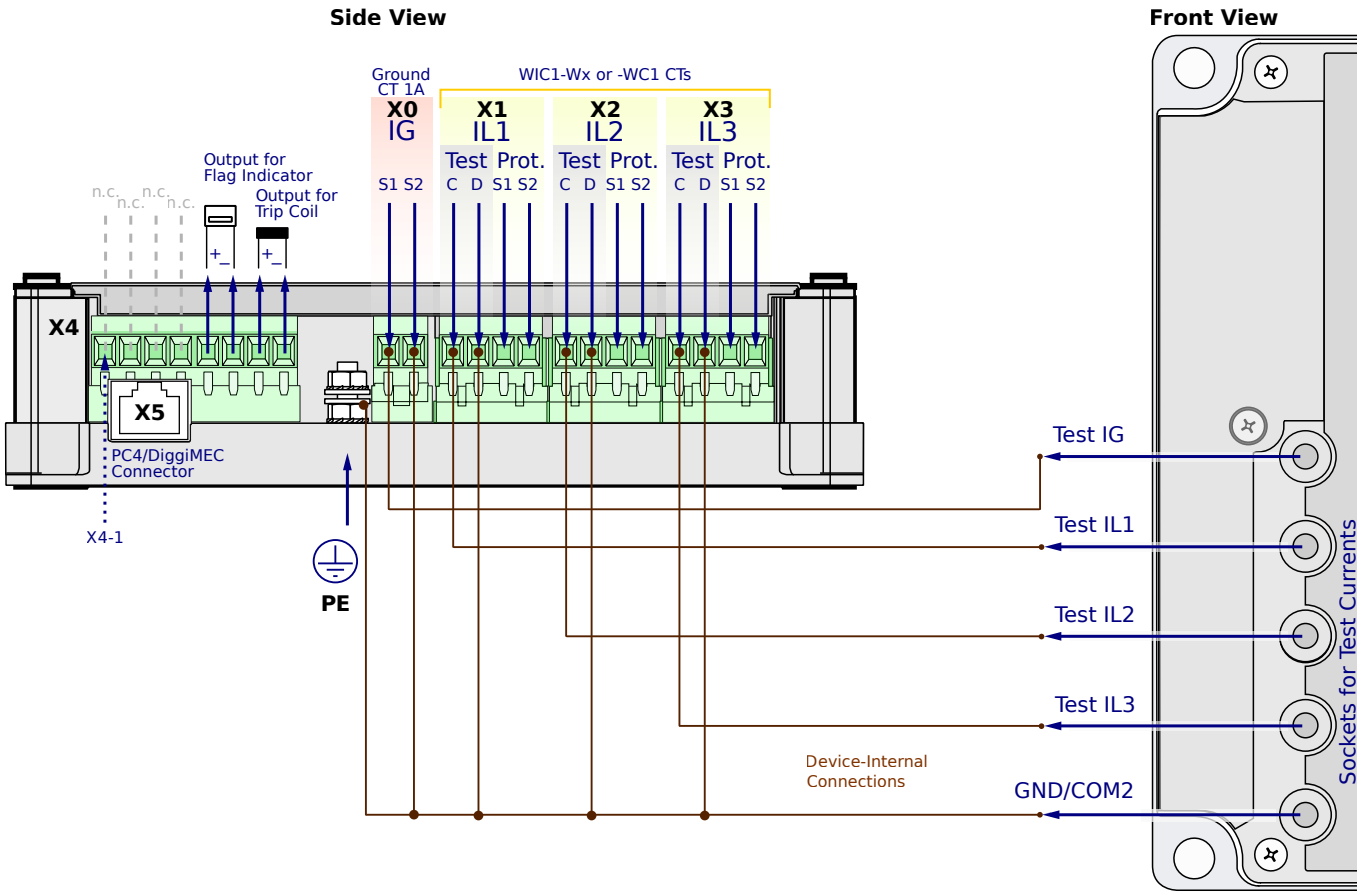


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1AA0

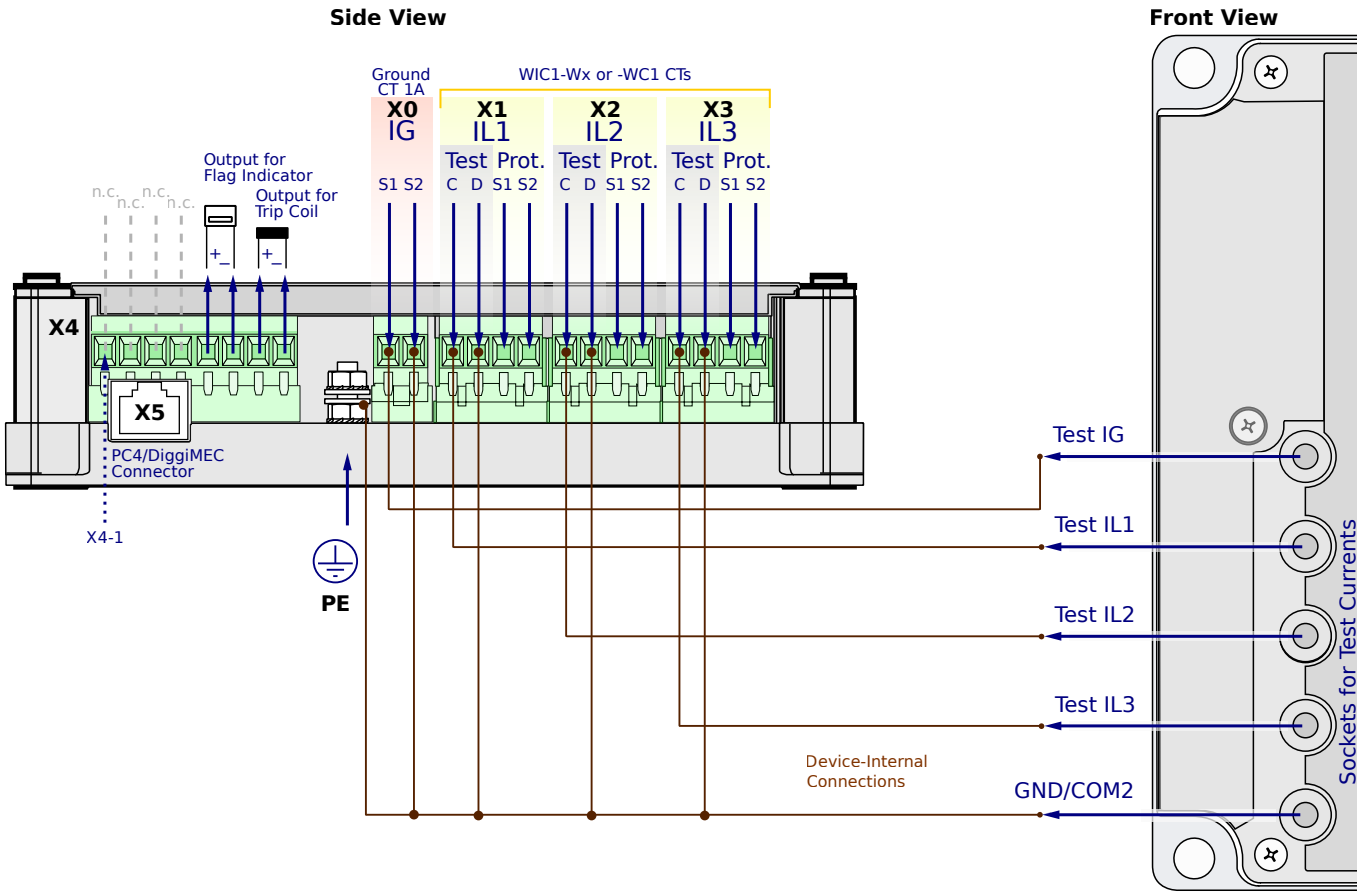


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1AAH

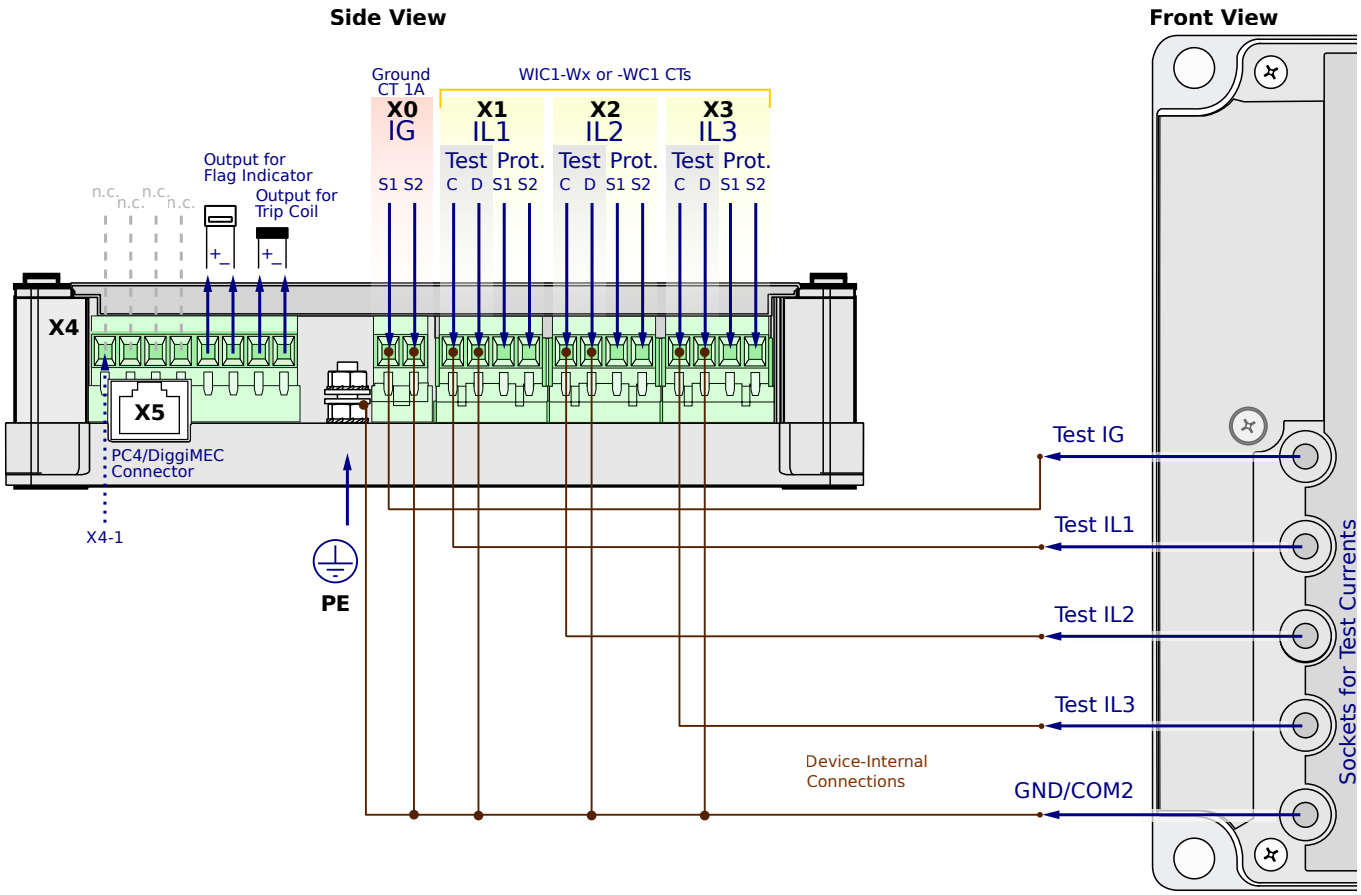


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1PA0

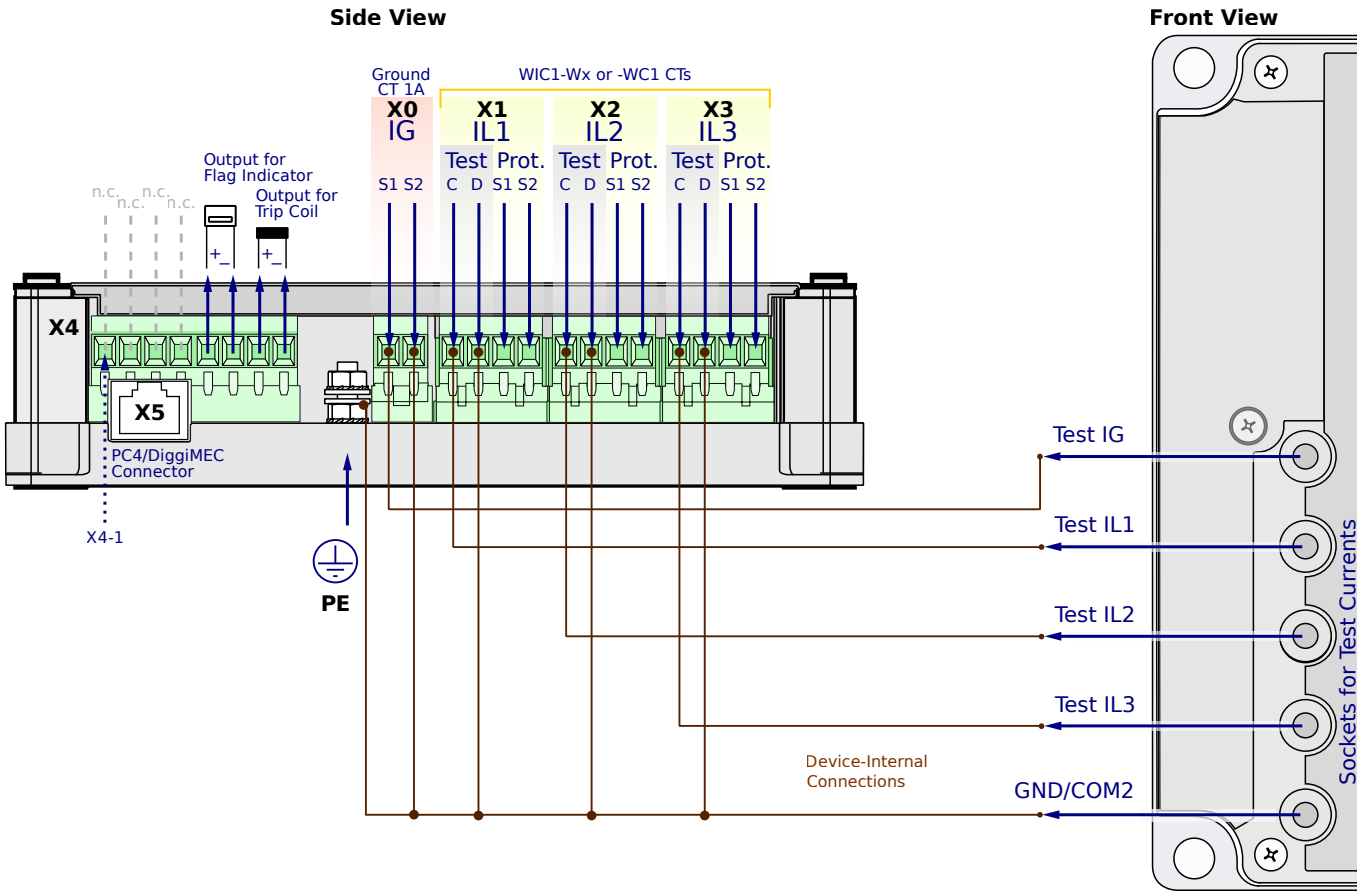


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN1PAH

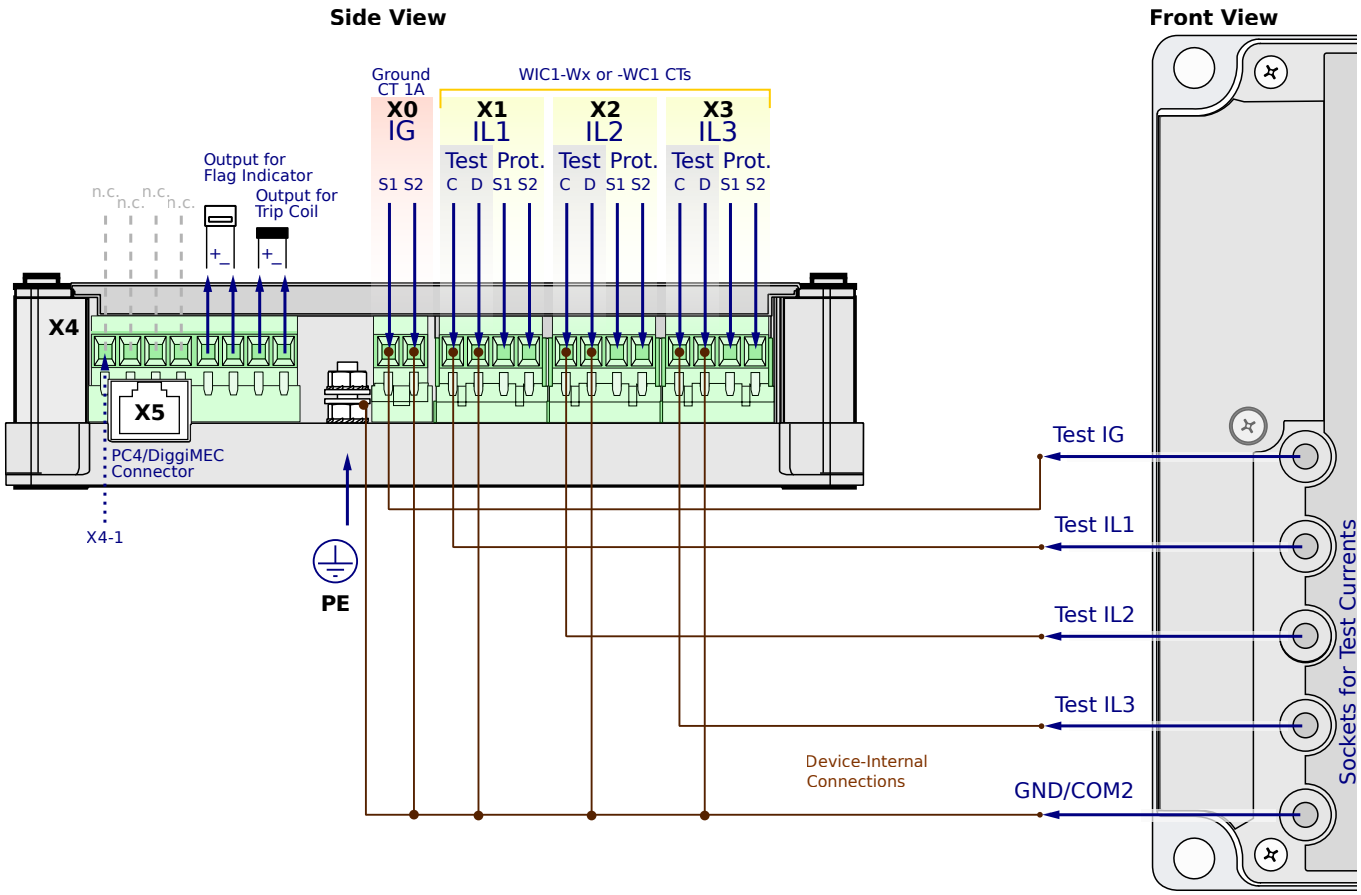


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2SA0

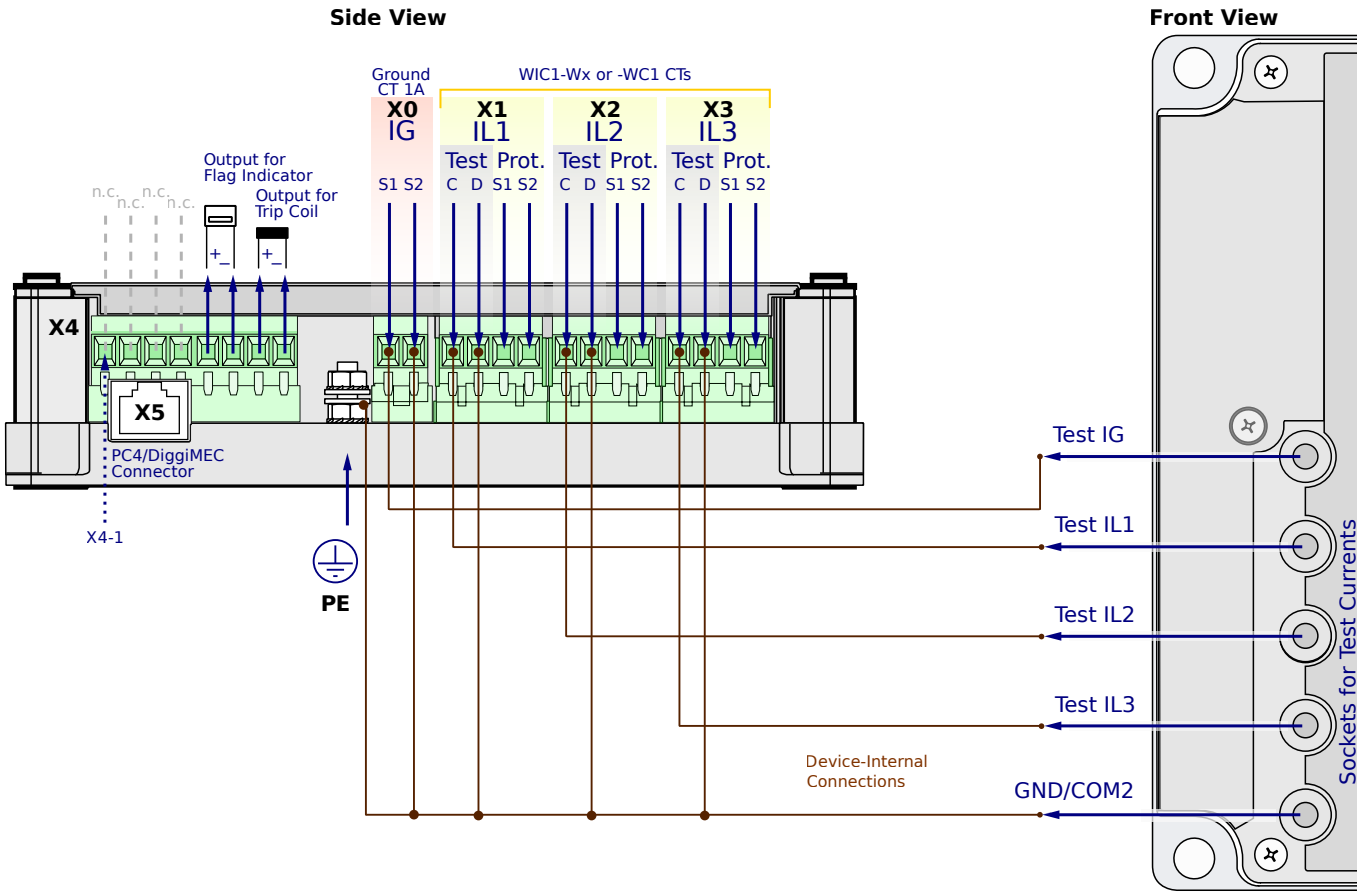


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2SAH

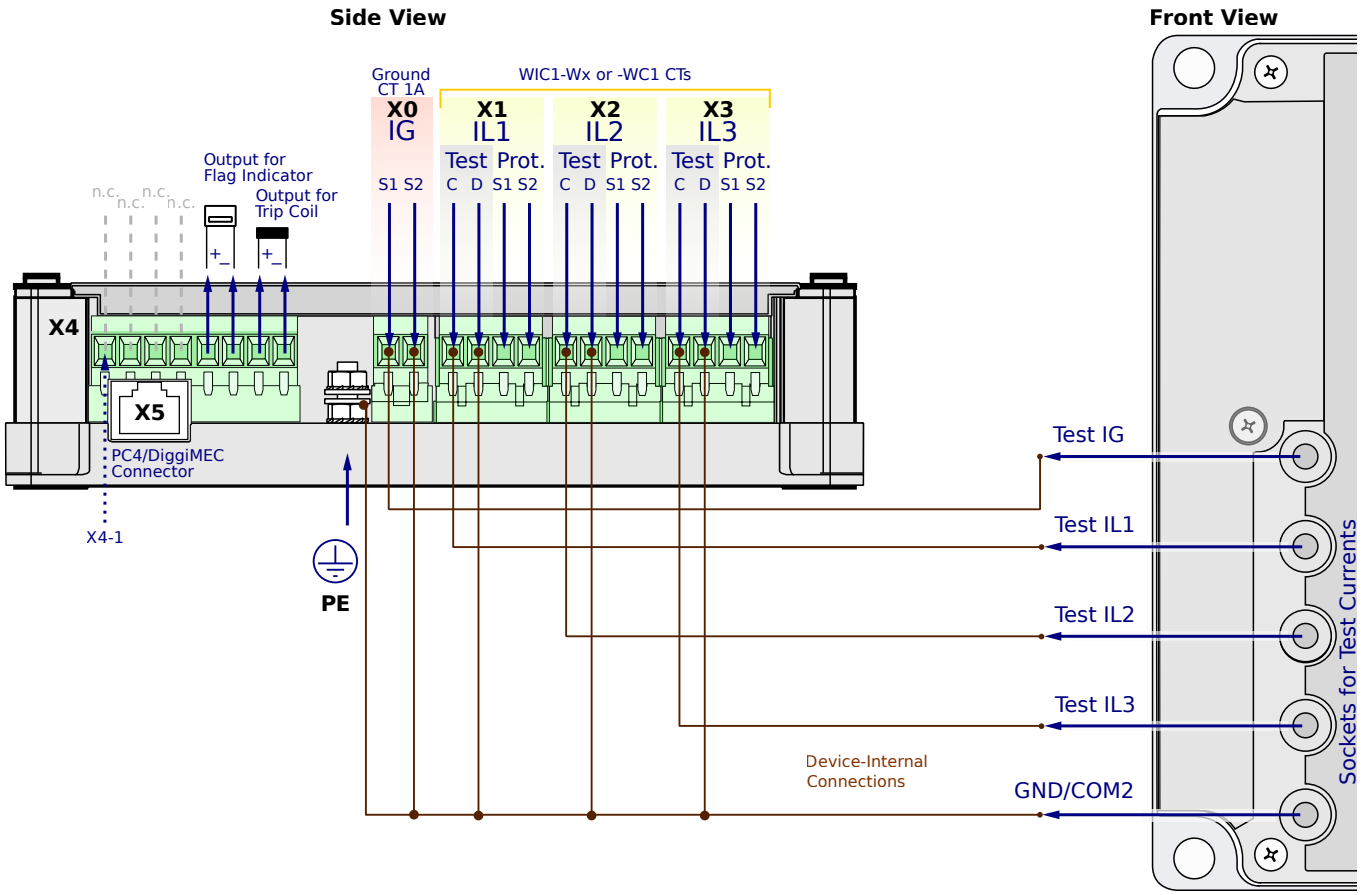


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2AA0

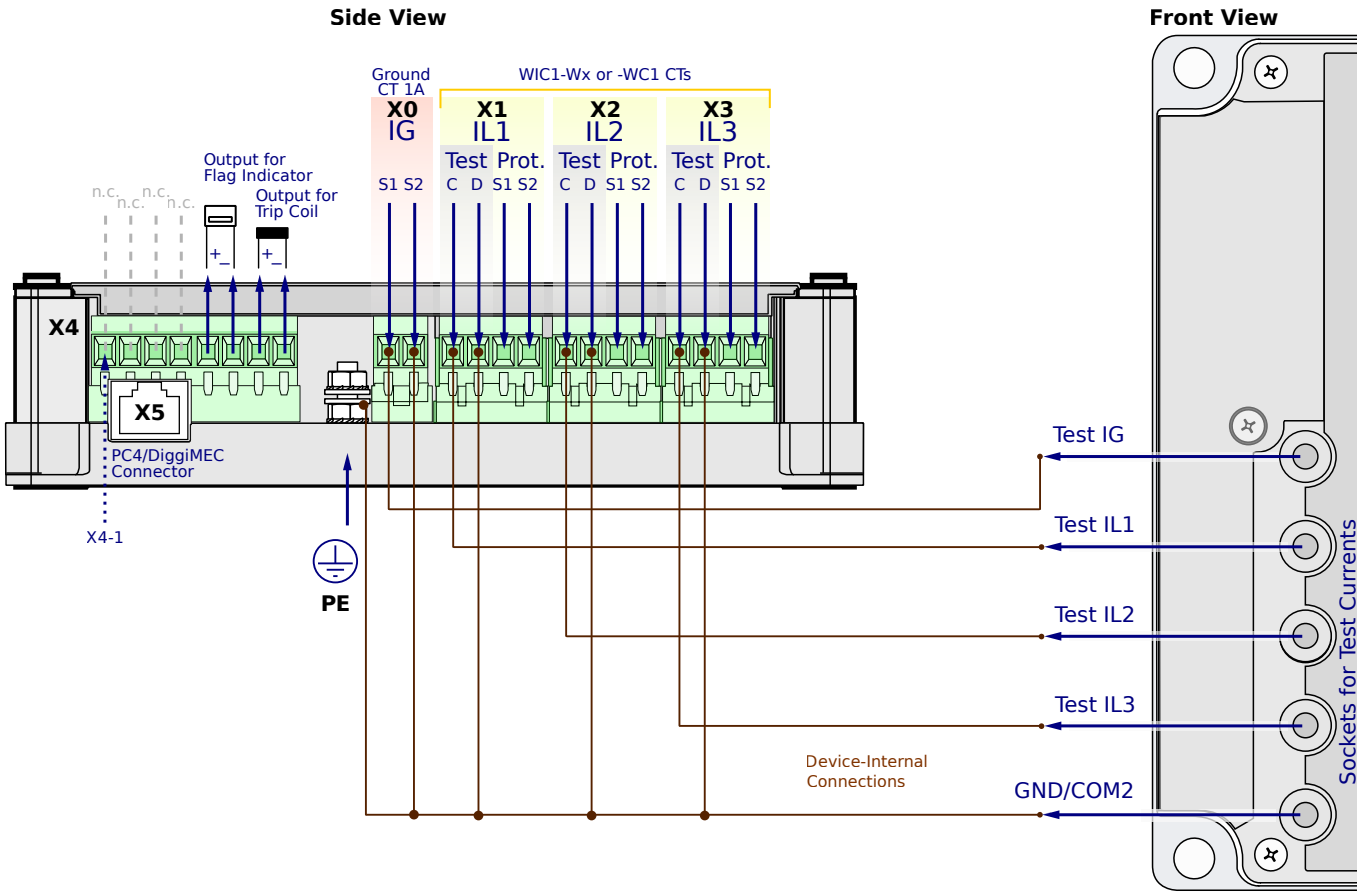


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2AAH

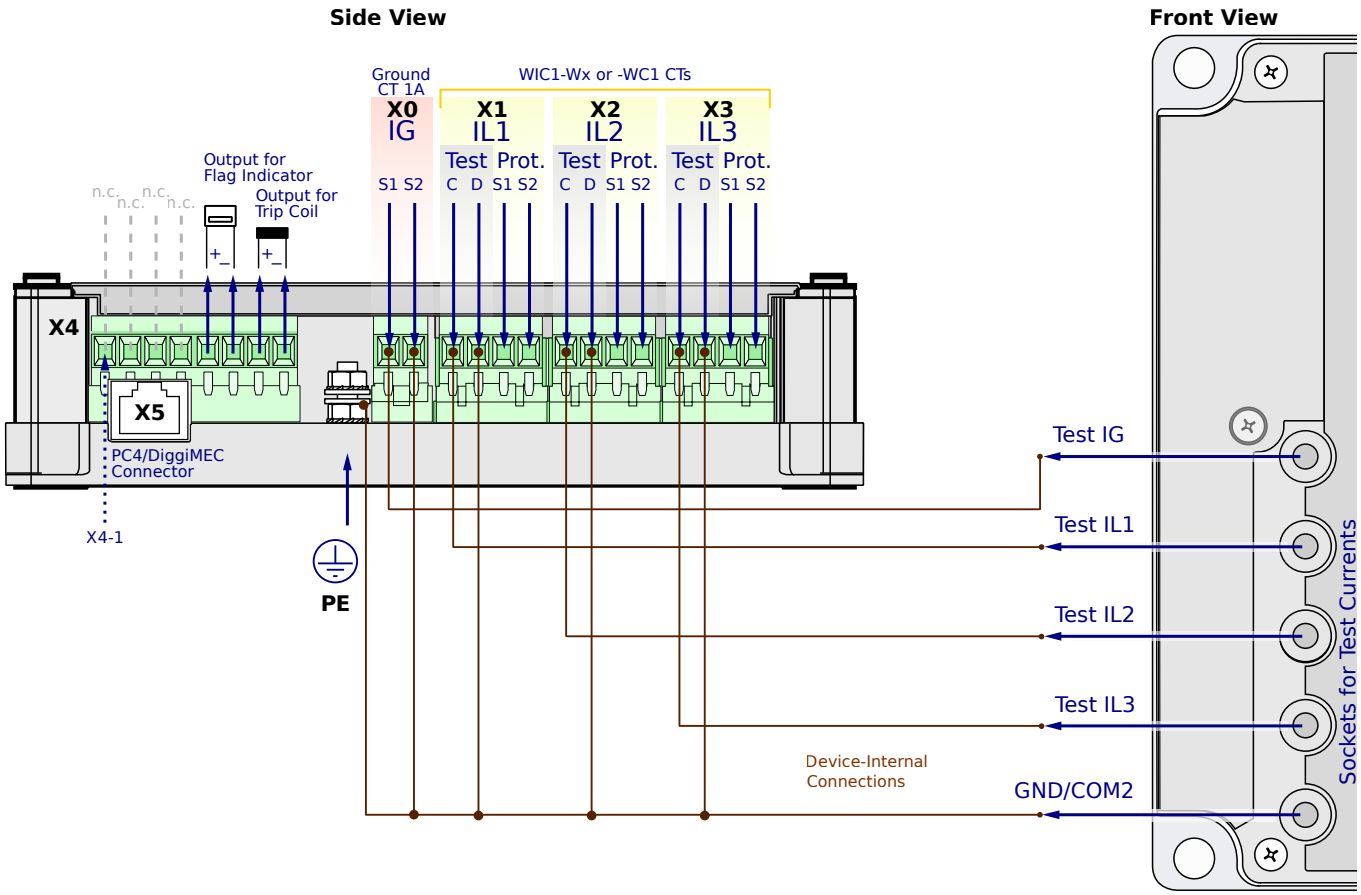


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2PA0

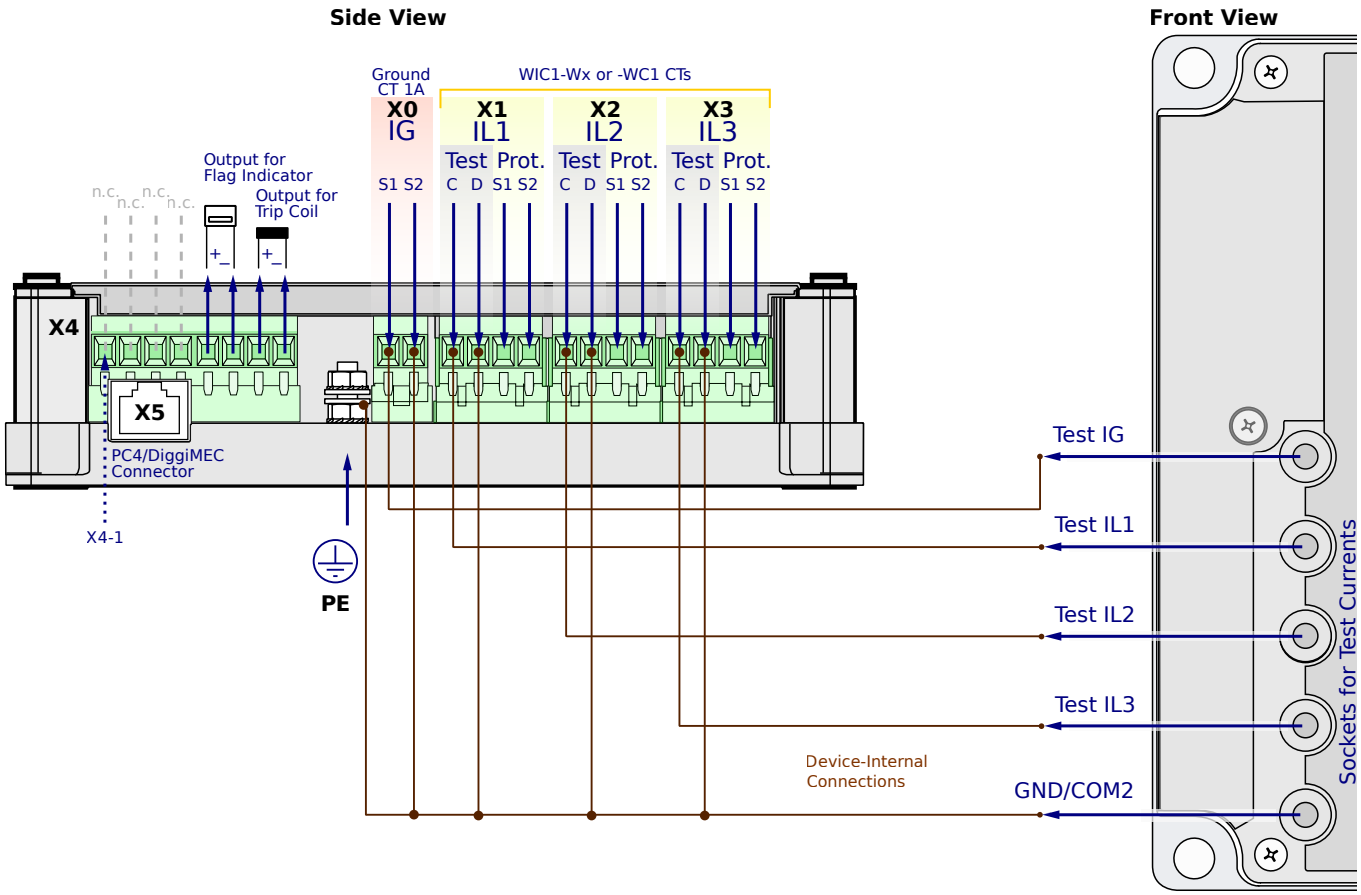


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NN2PAH

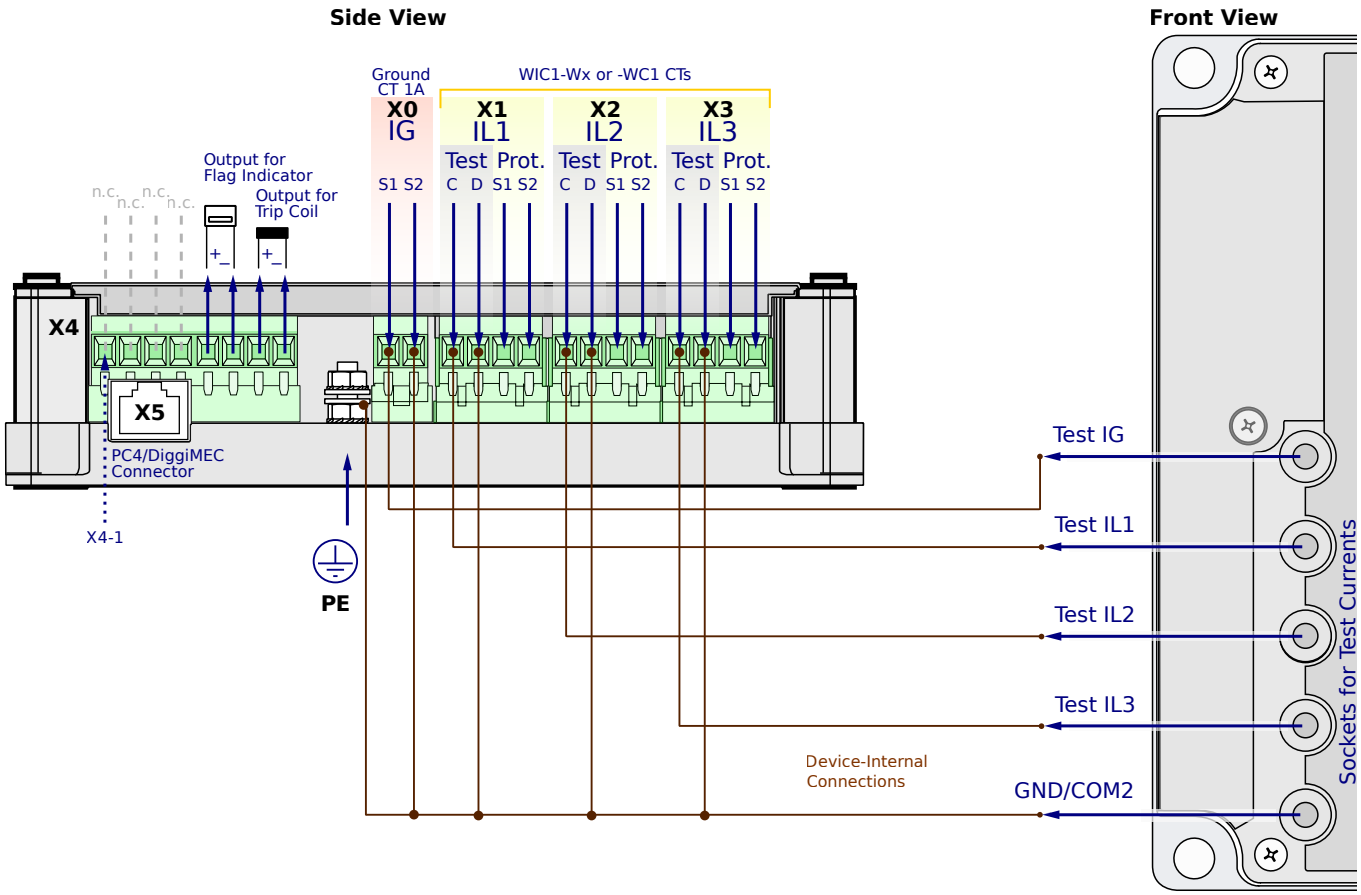


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0SA0

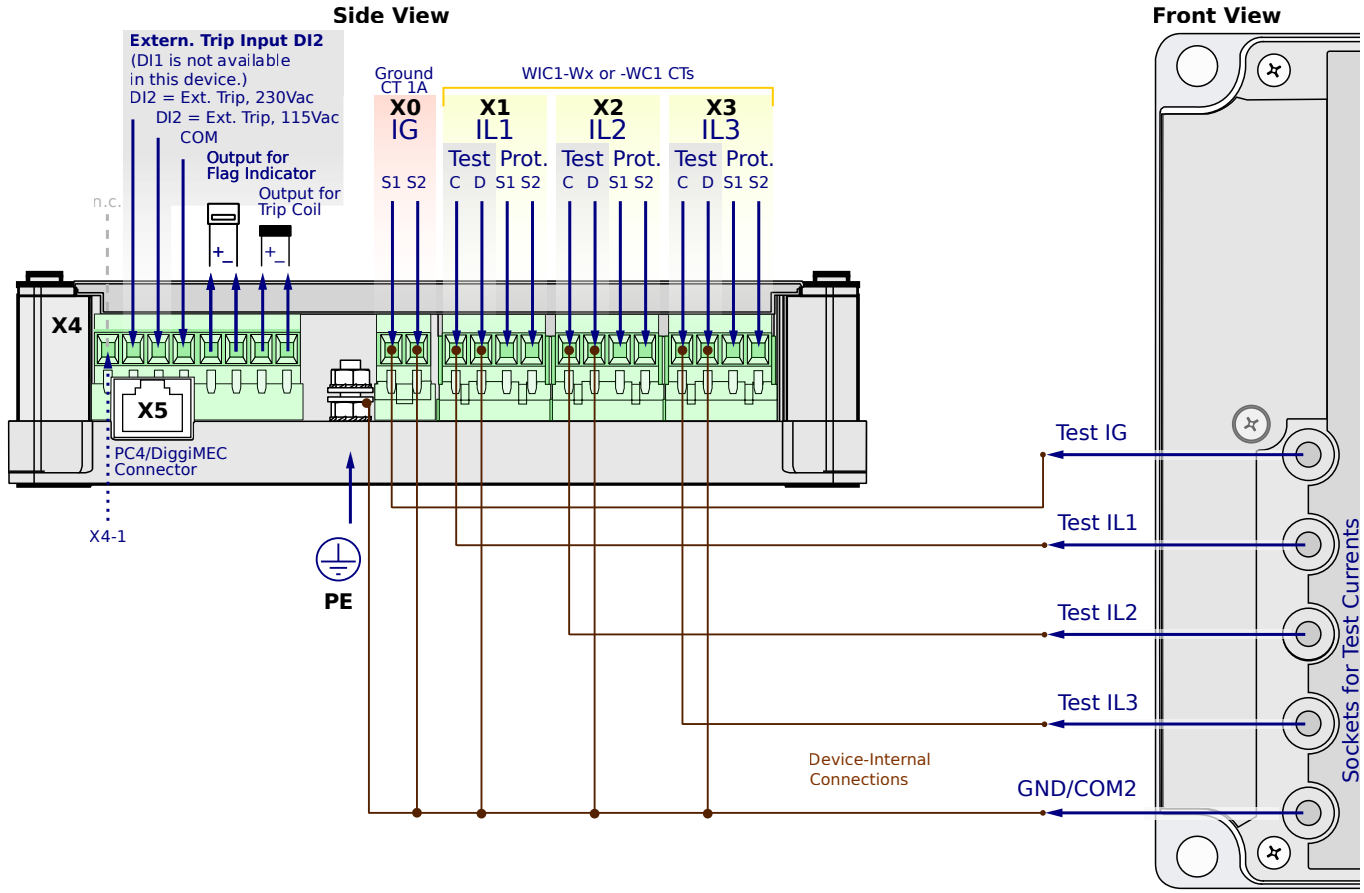


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0SAH

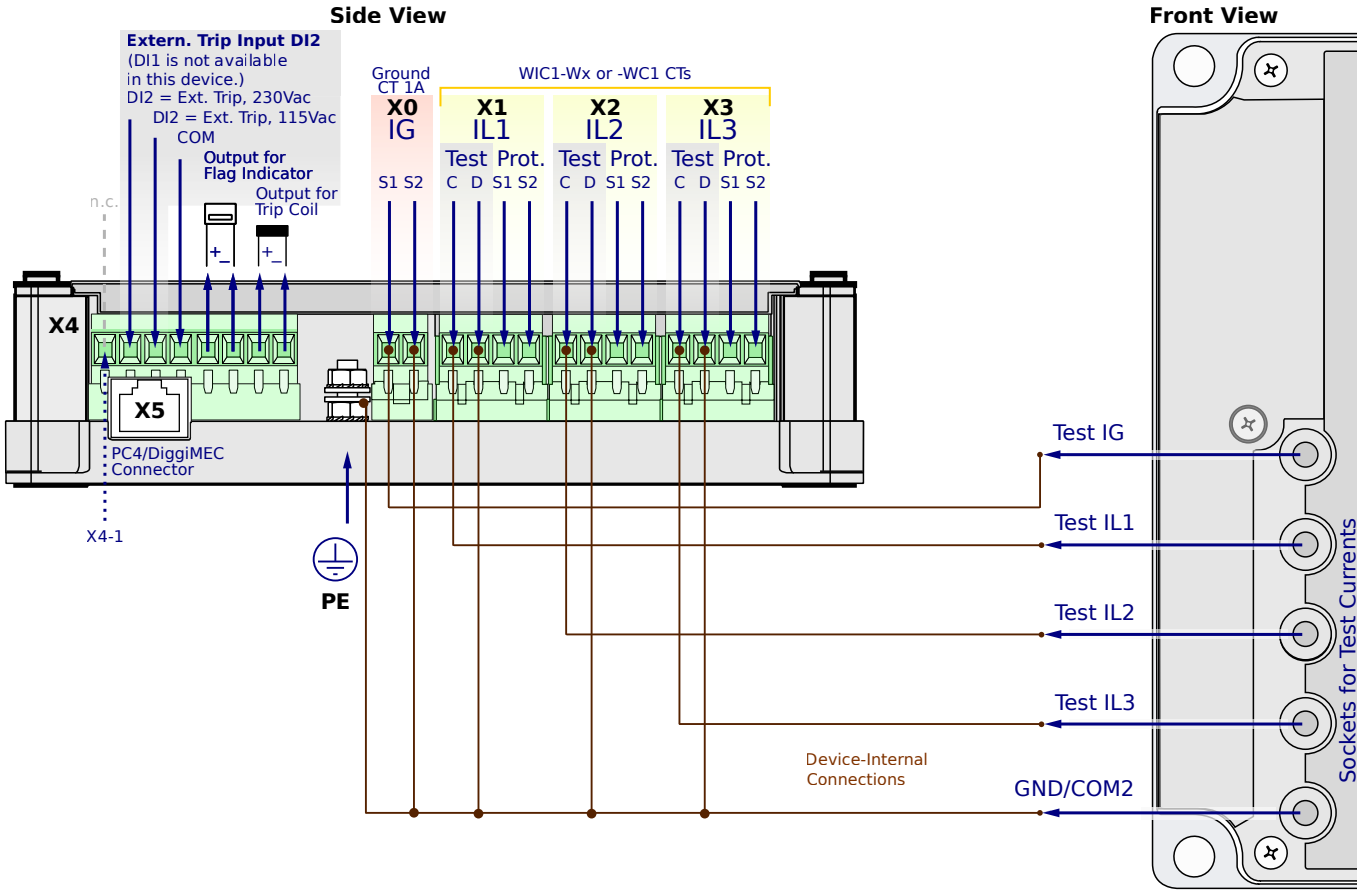


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0AA0

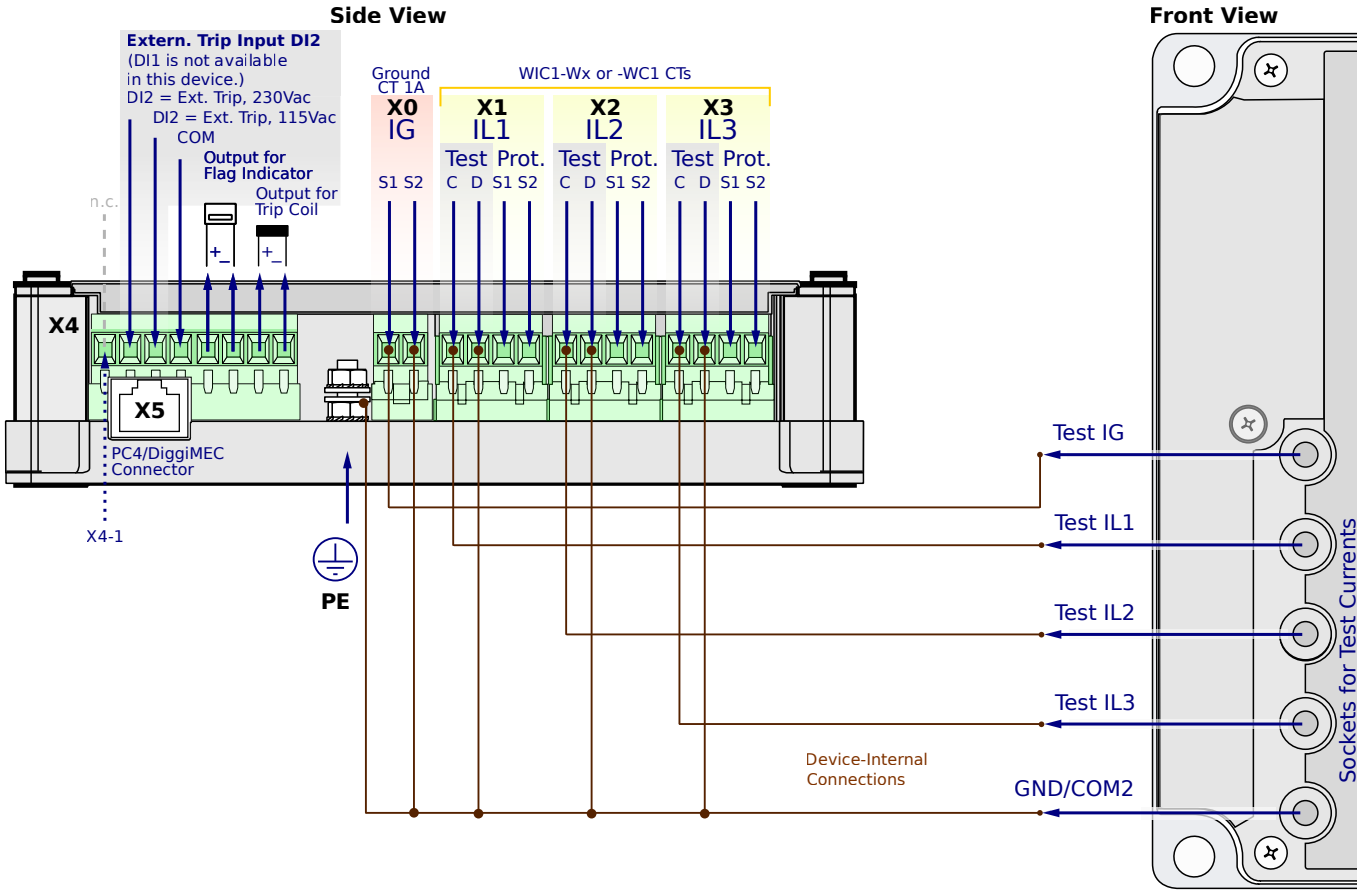


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0AAH

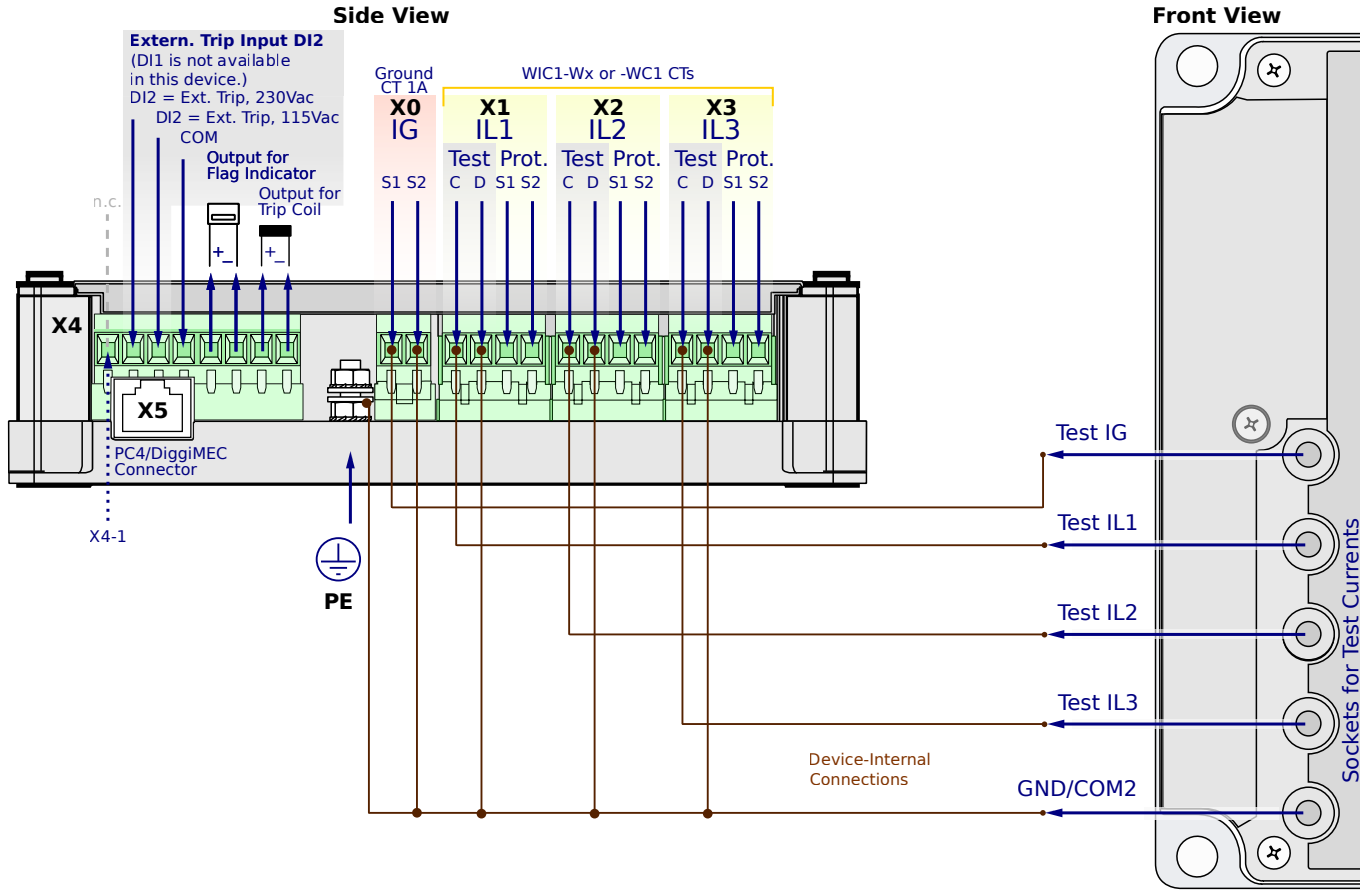


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0PA0

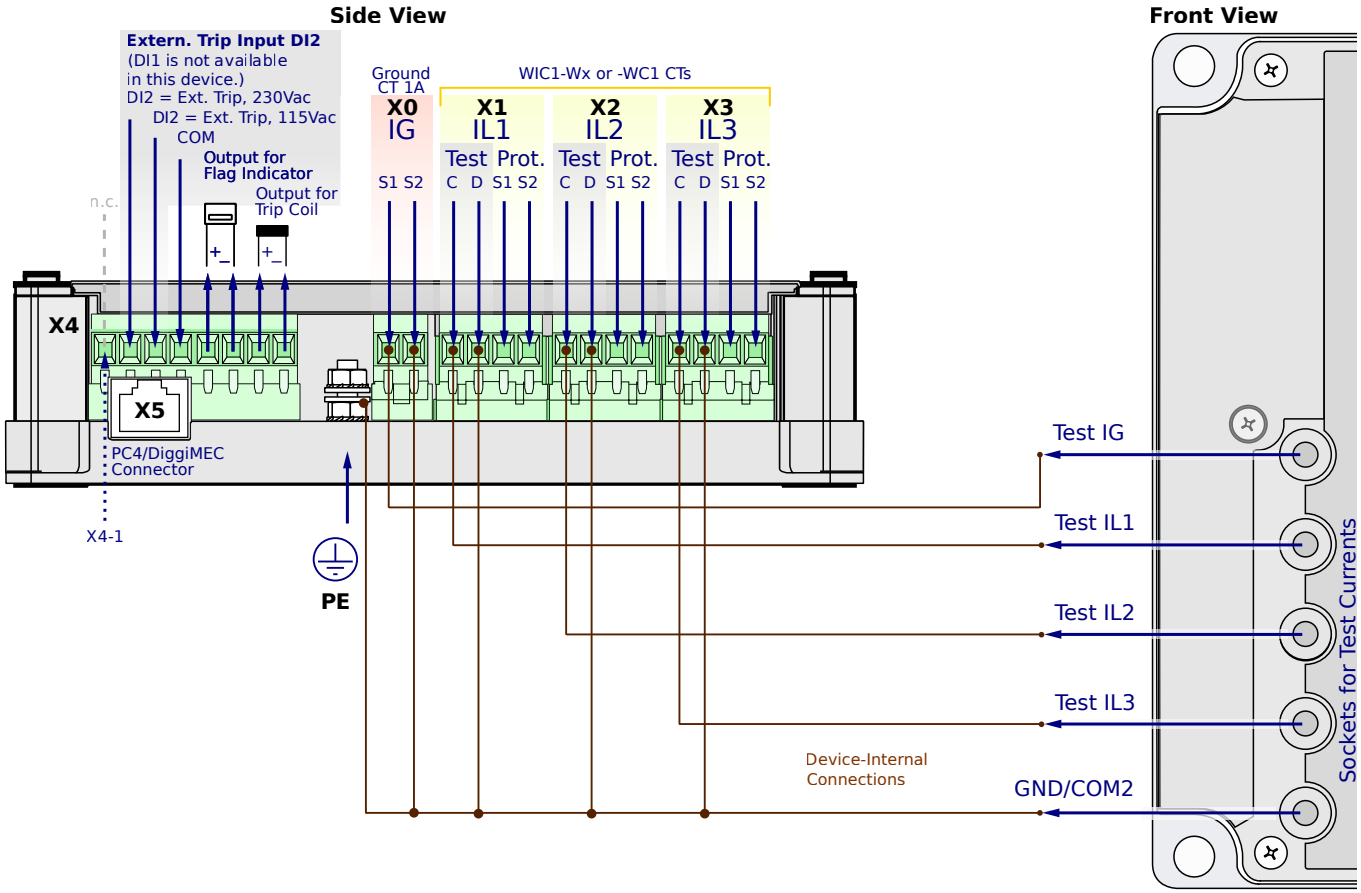


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF0PAH

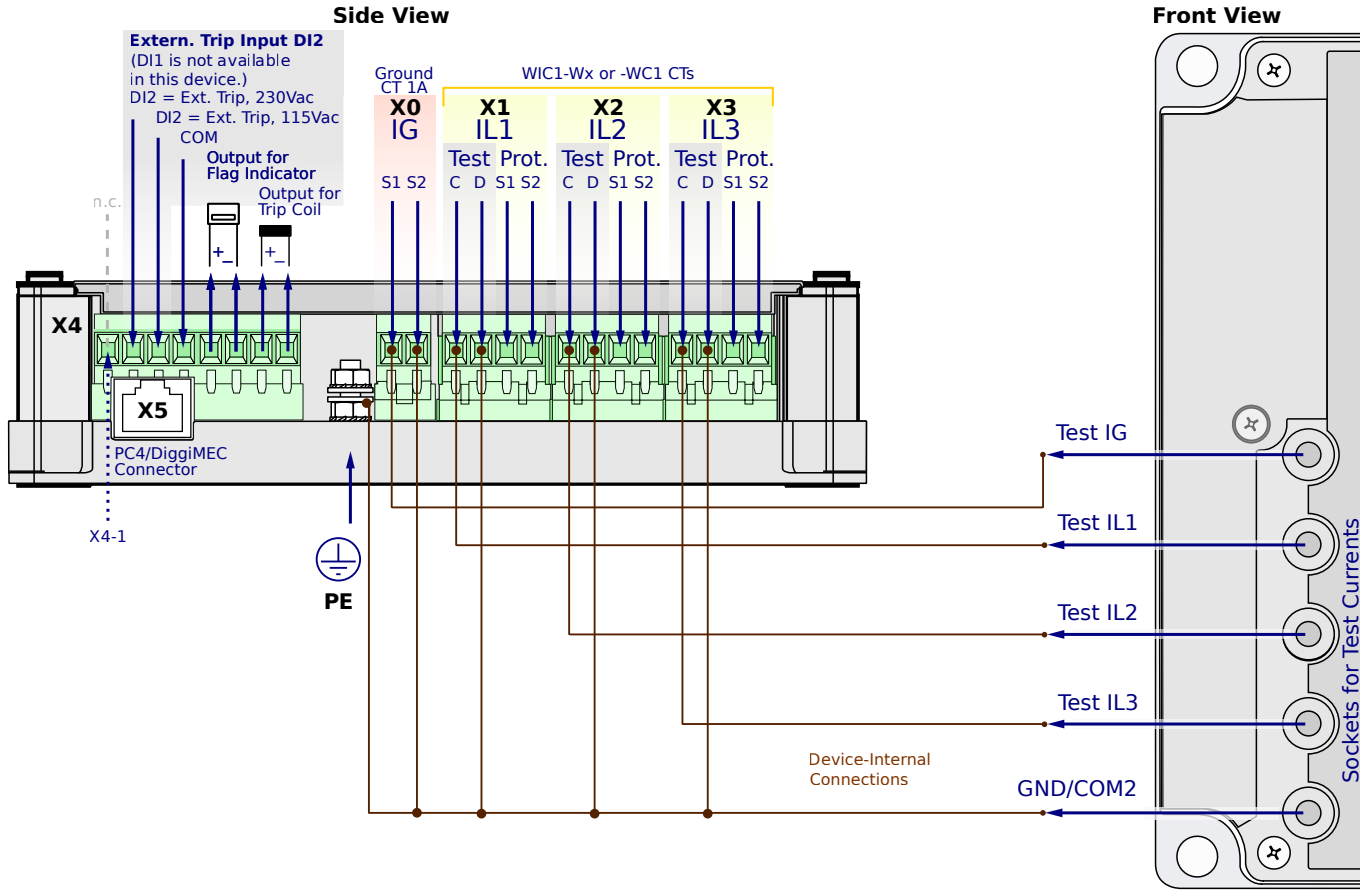


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1SA0

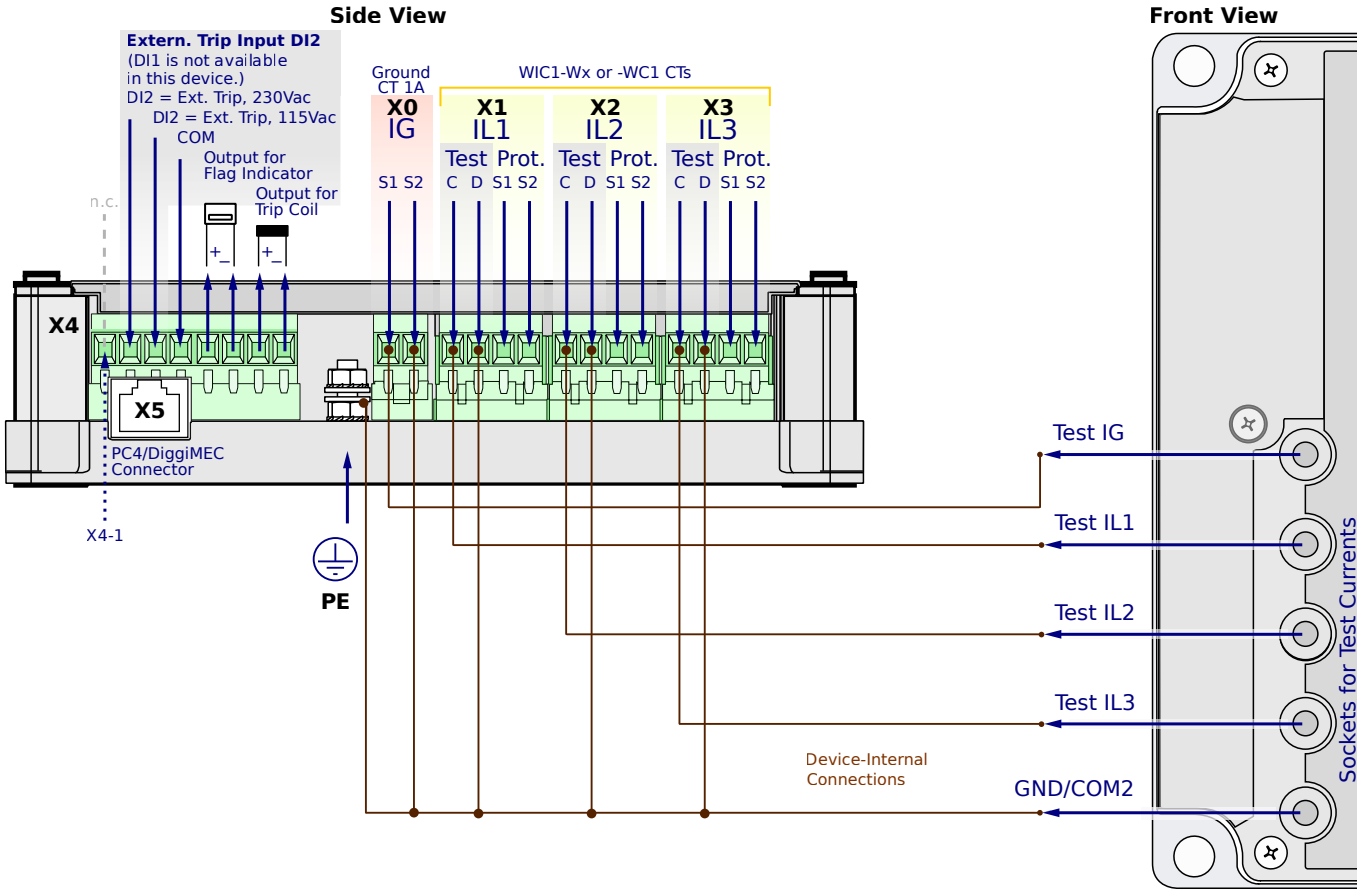


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1SAH

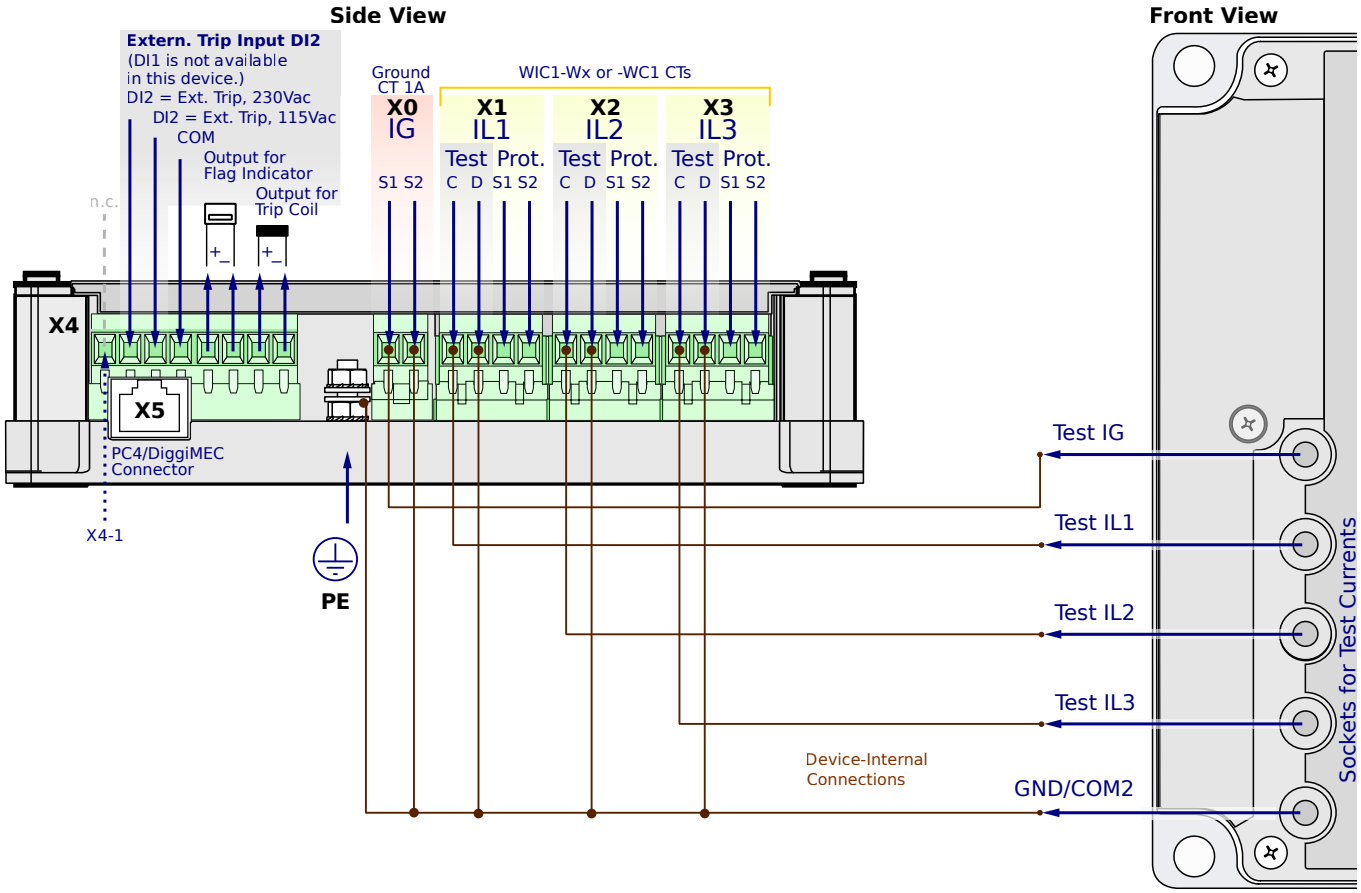


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1AA0

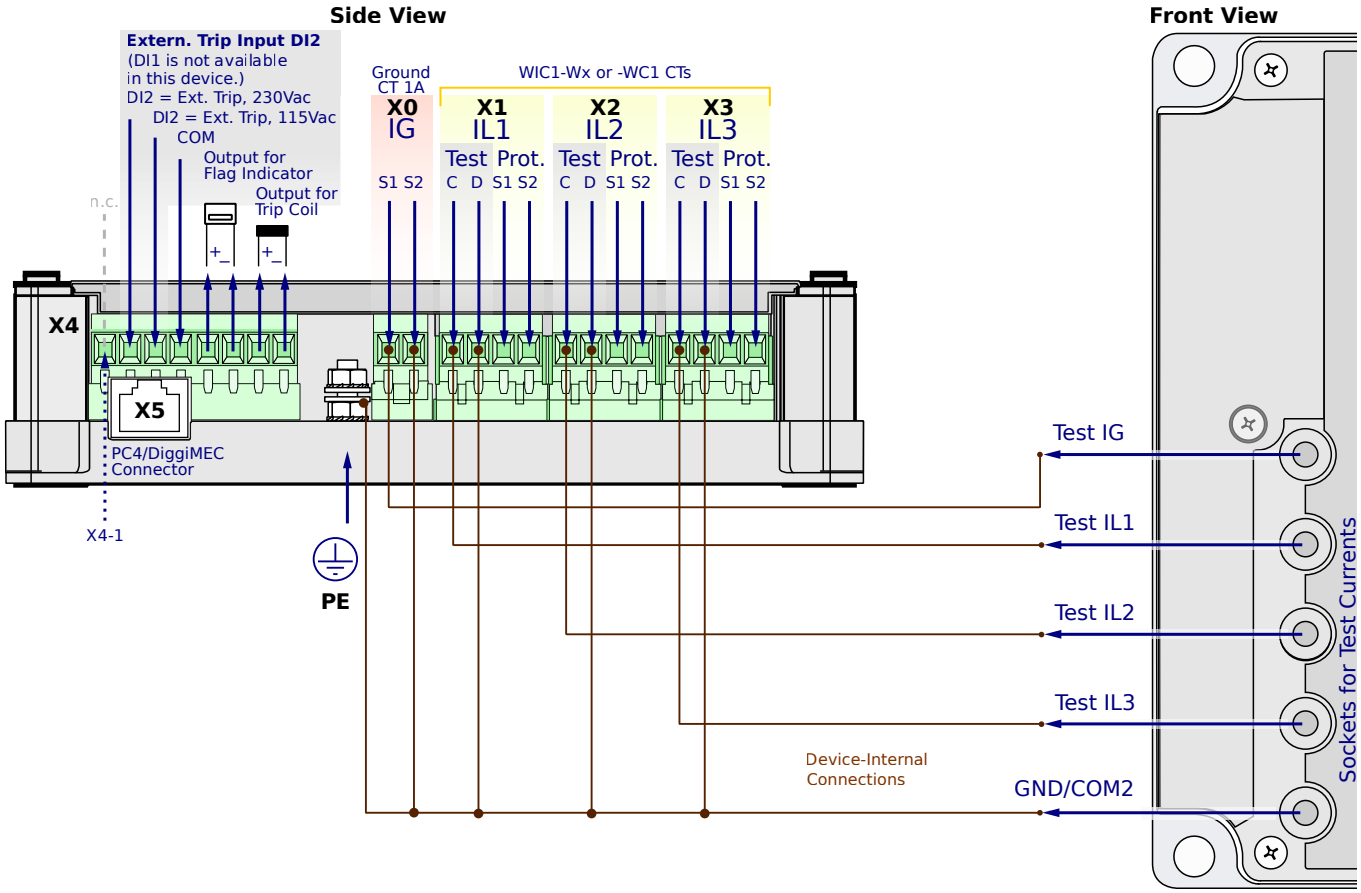


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1AAH

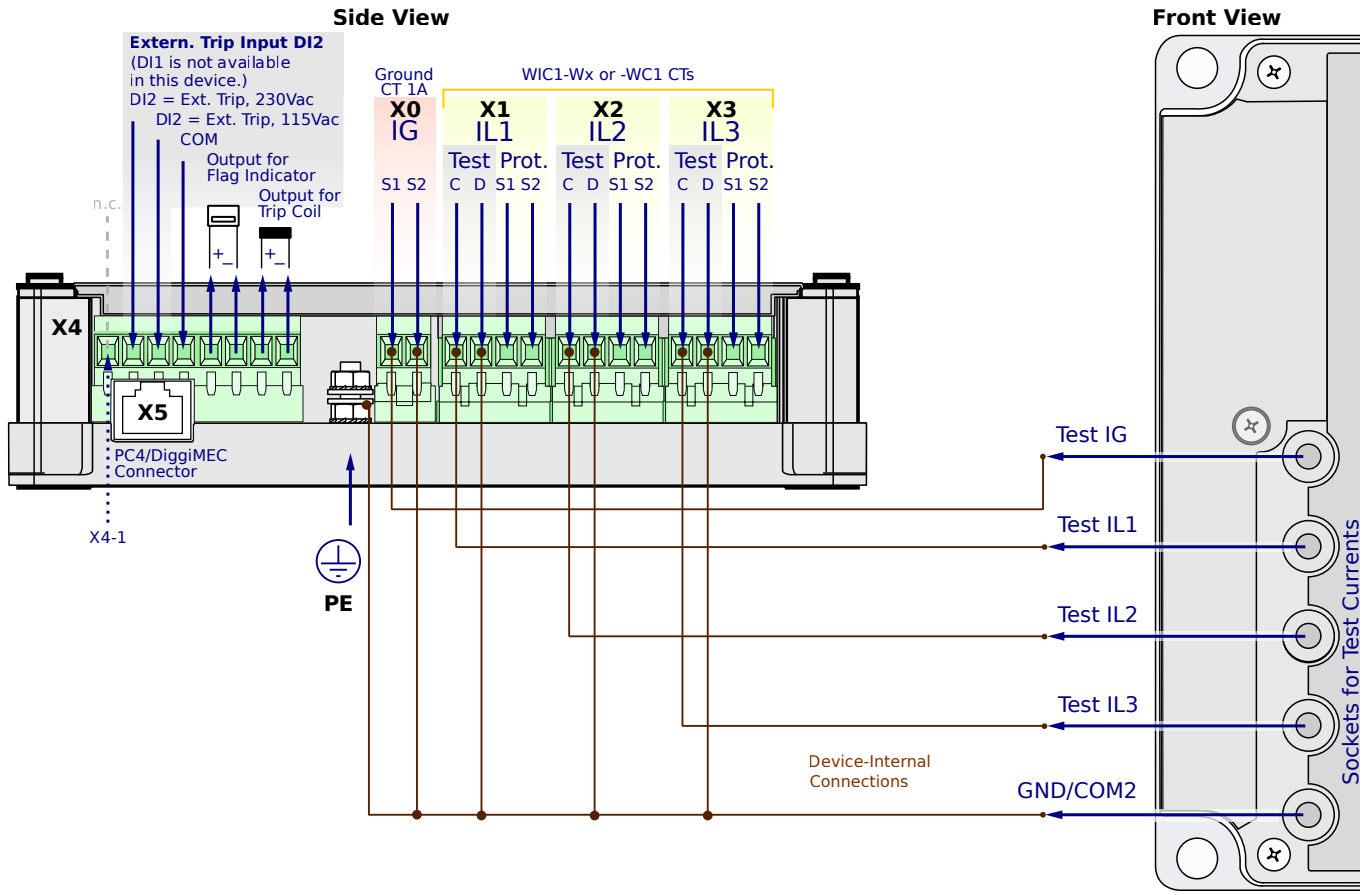


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1PA0

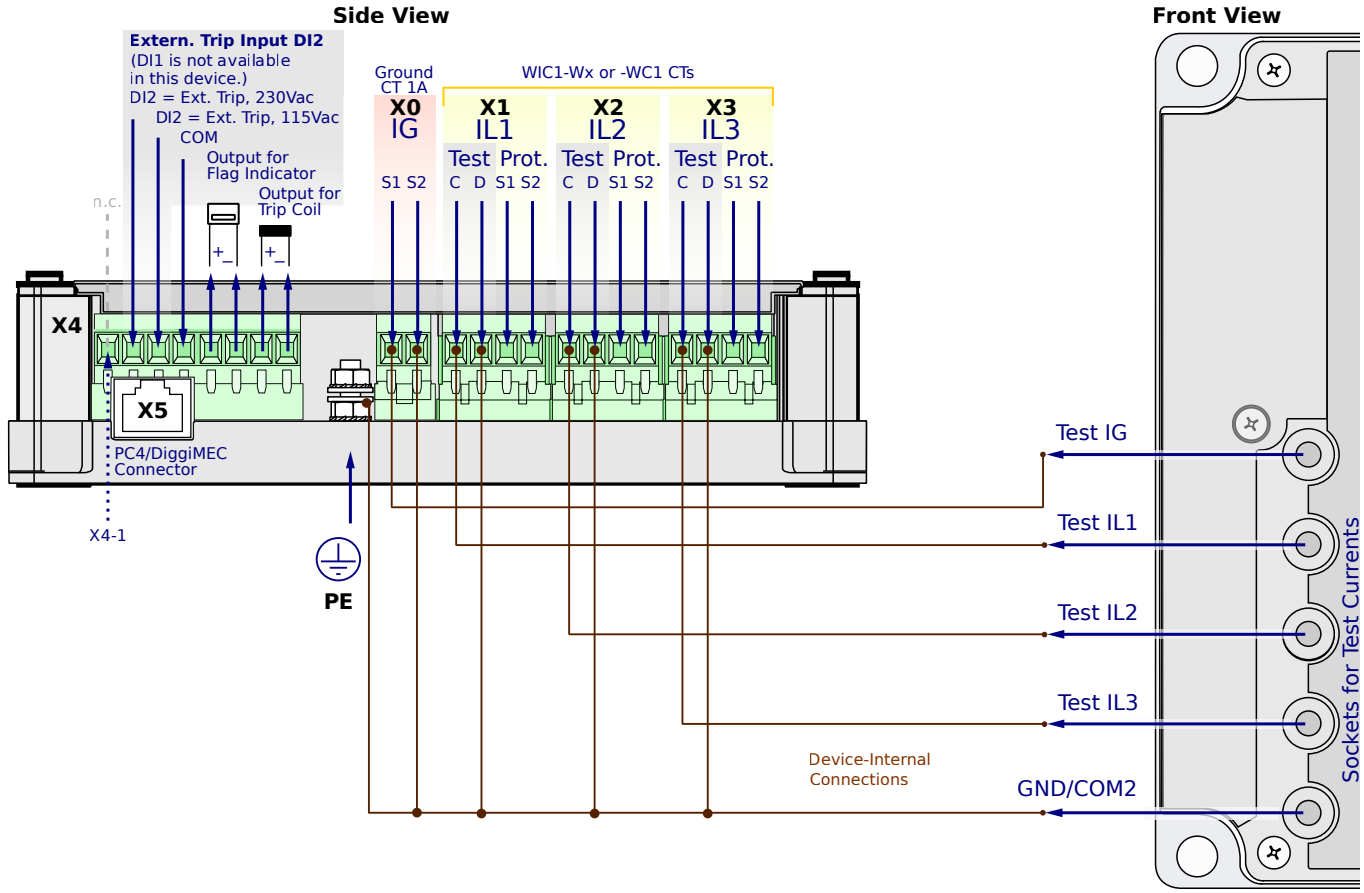


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF1PAH

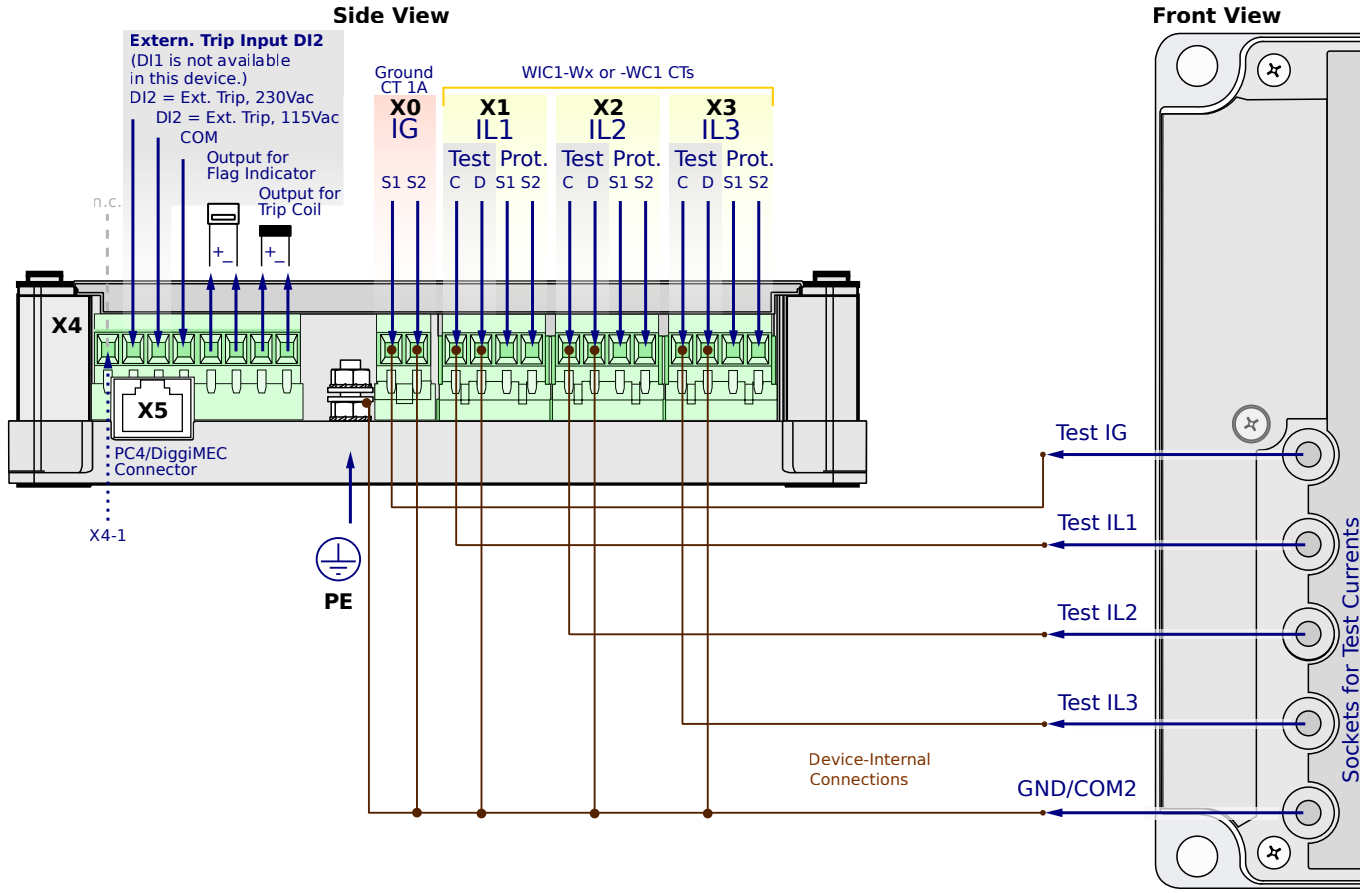


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2SA0

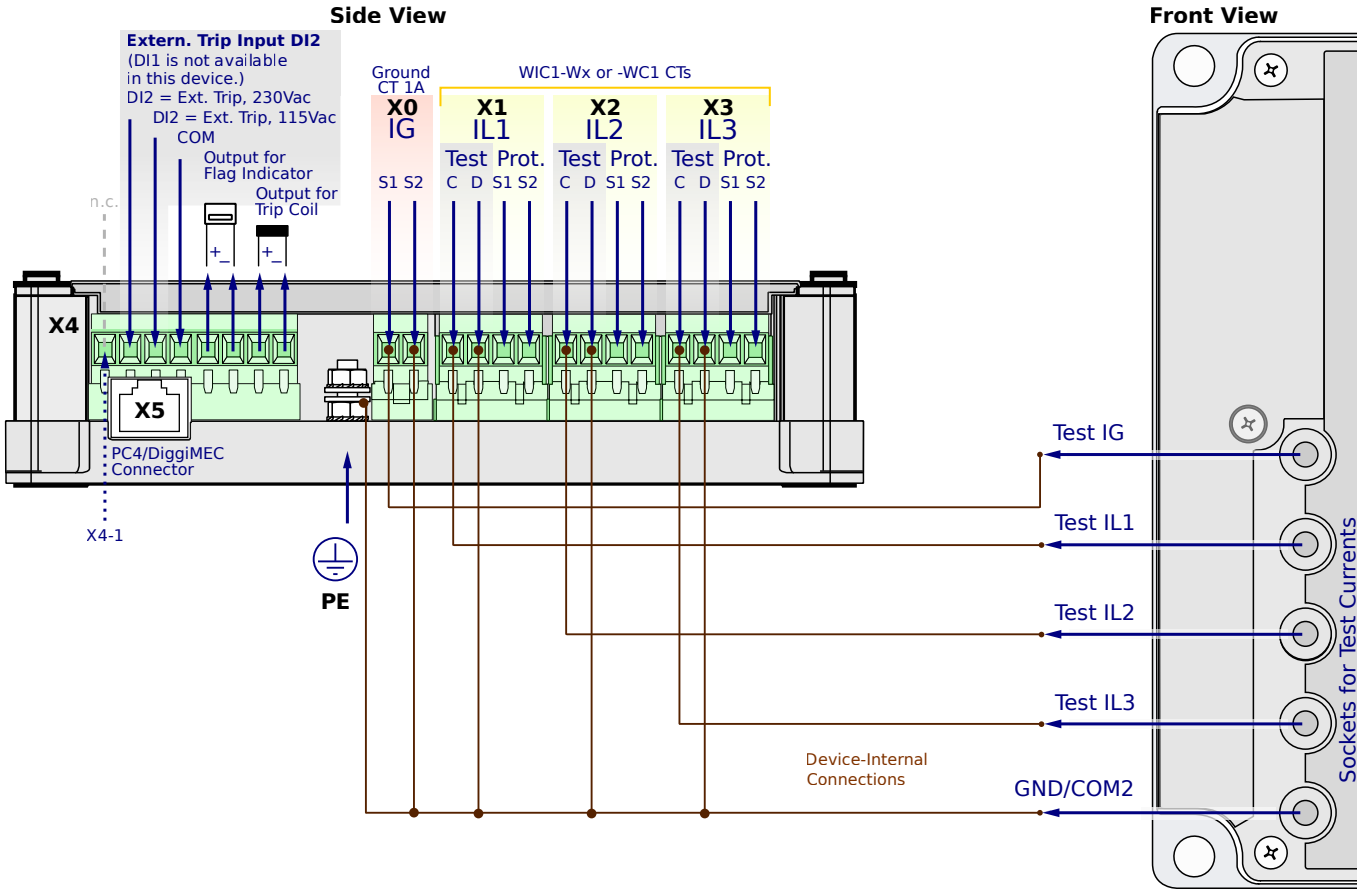


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2SAH

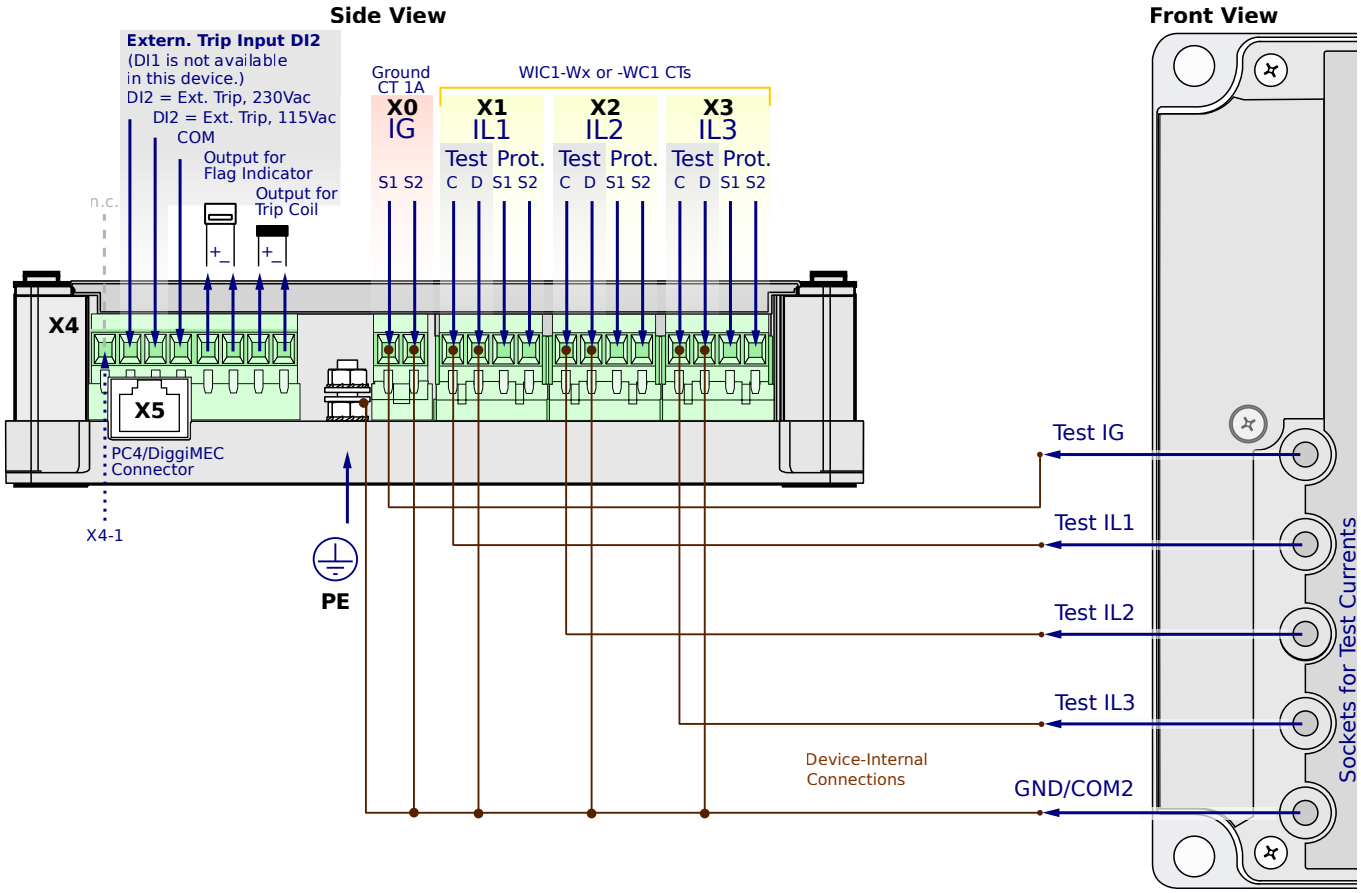


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2AA0

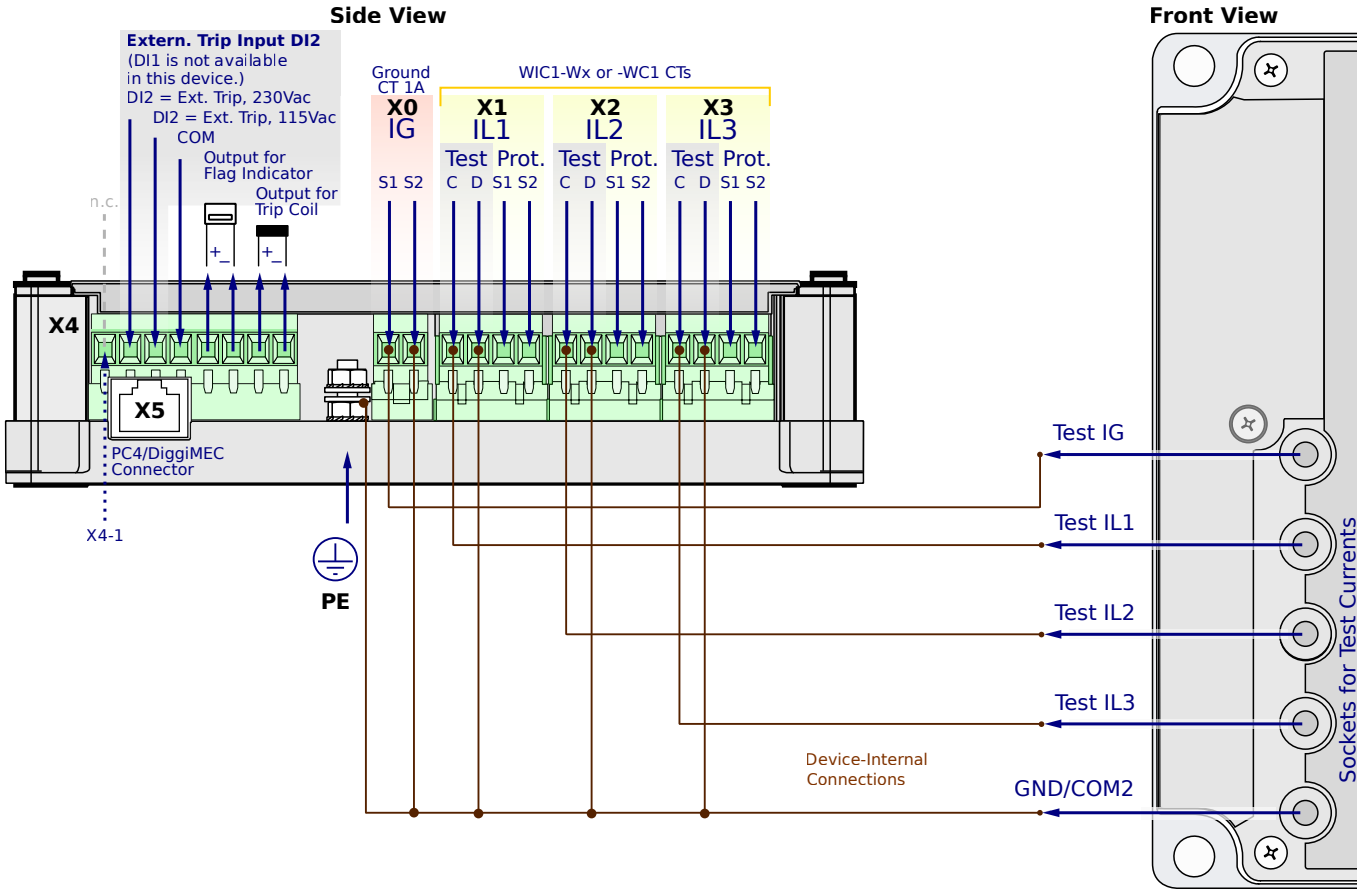


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2AAH

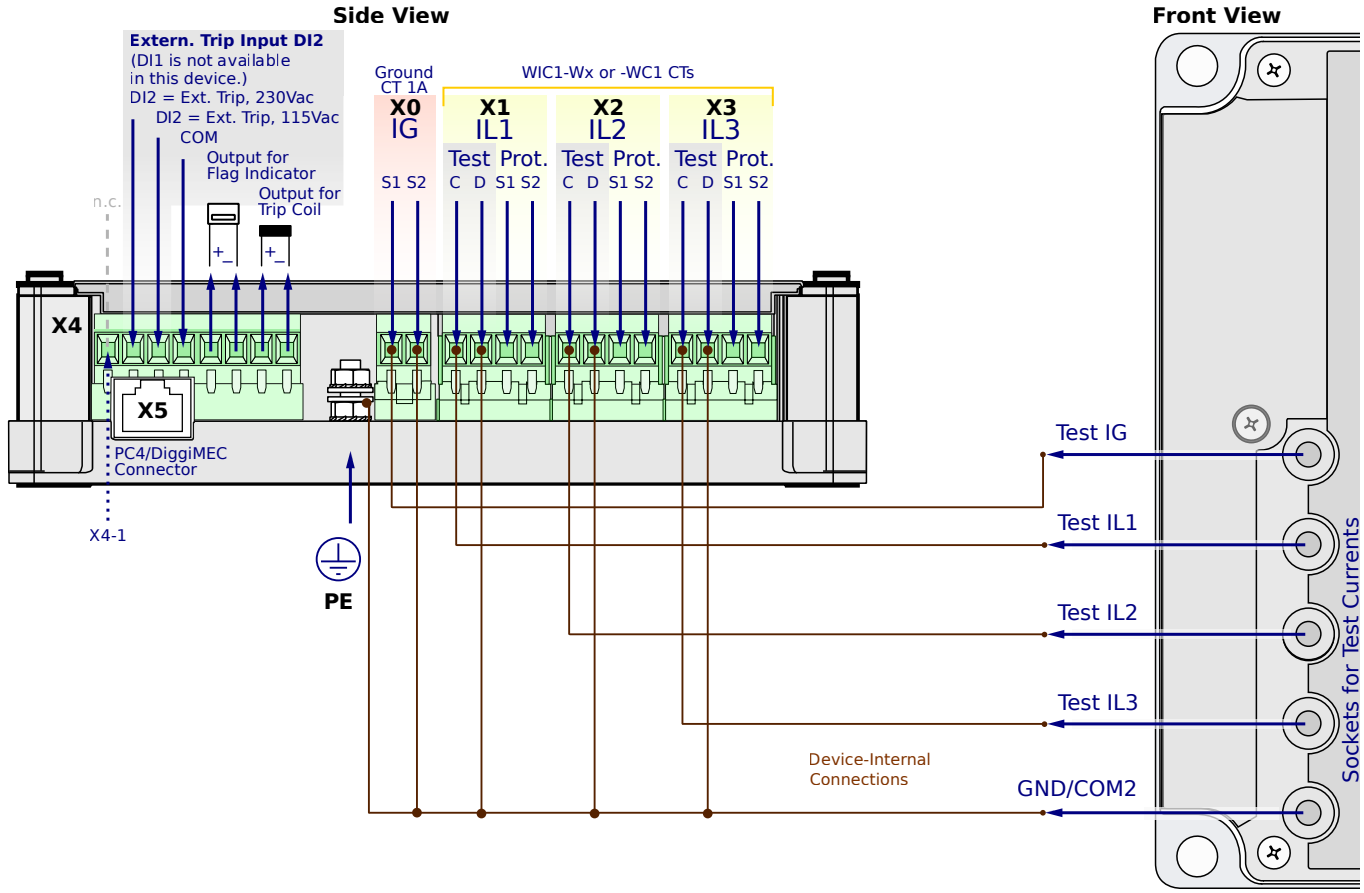


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2PA0

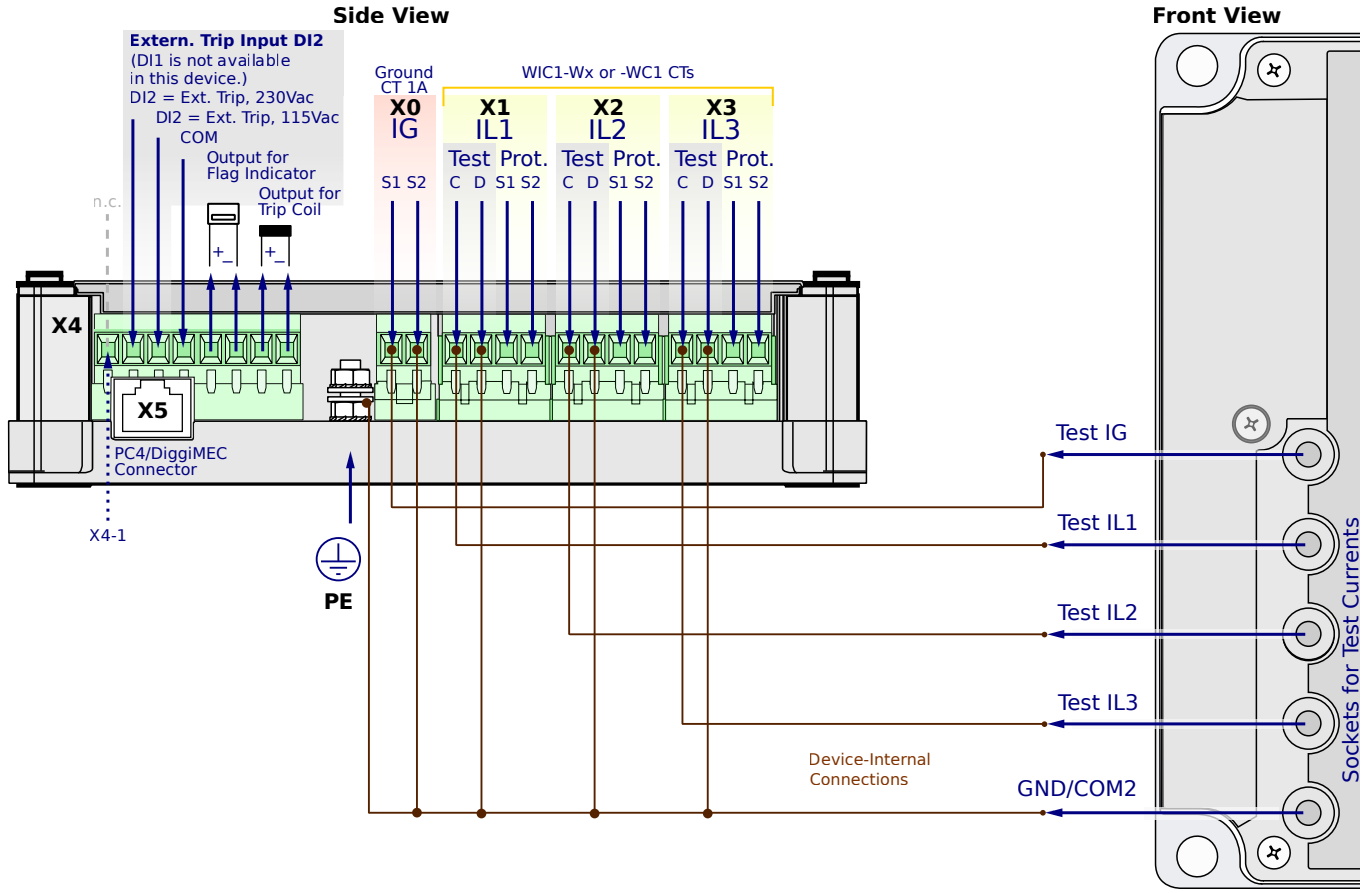


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NF2PAH

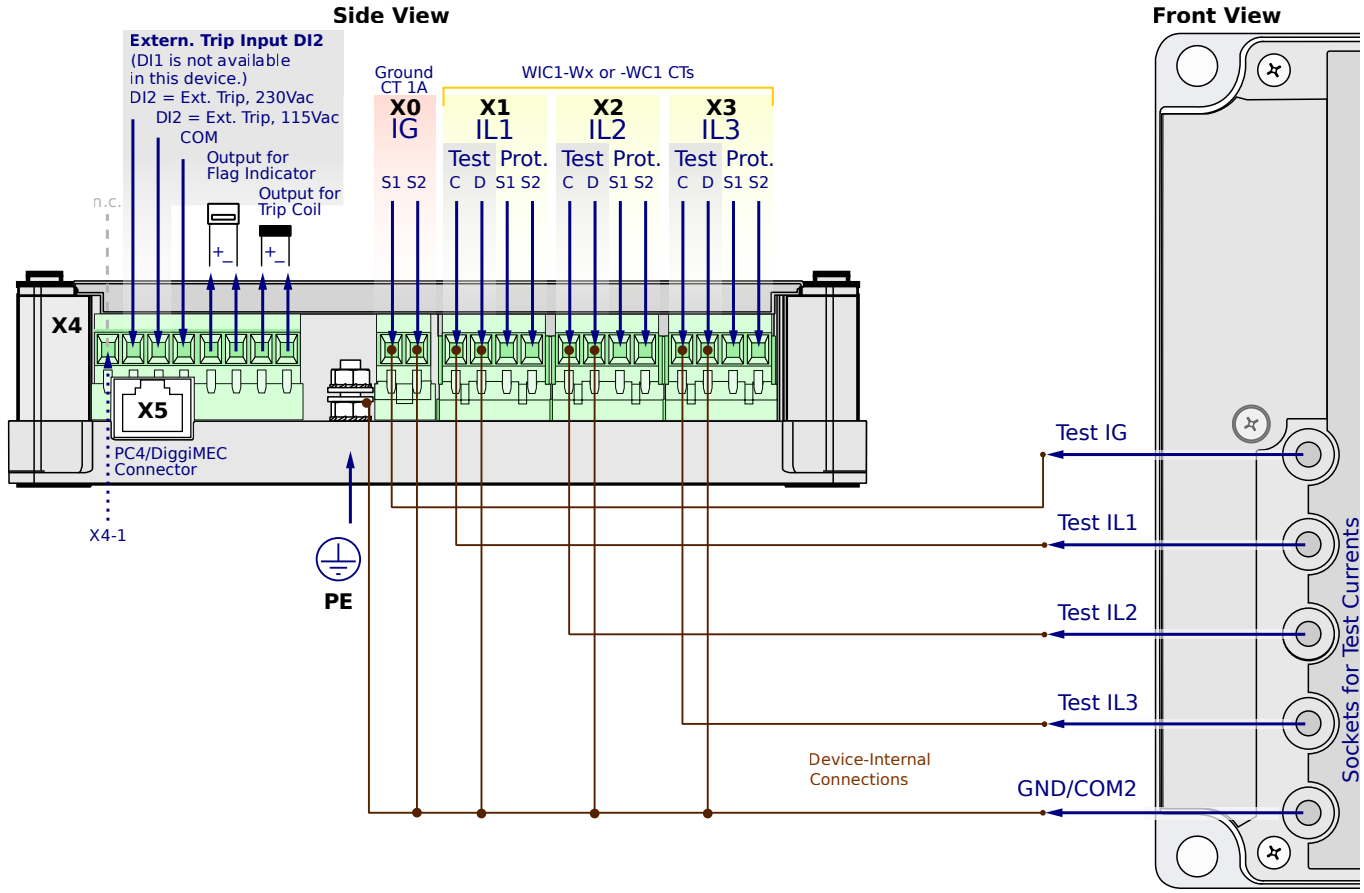


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0SA0

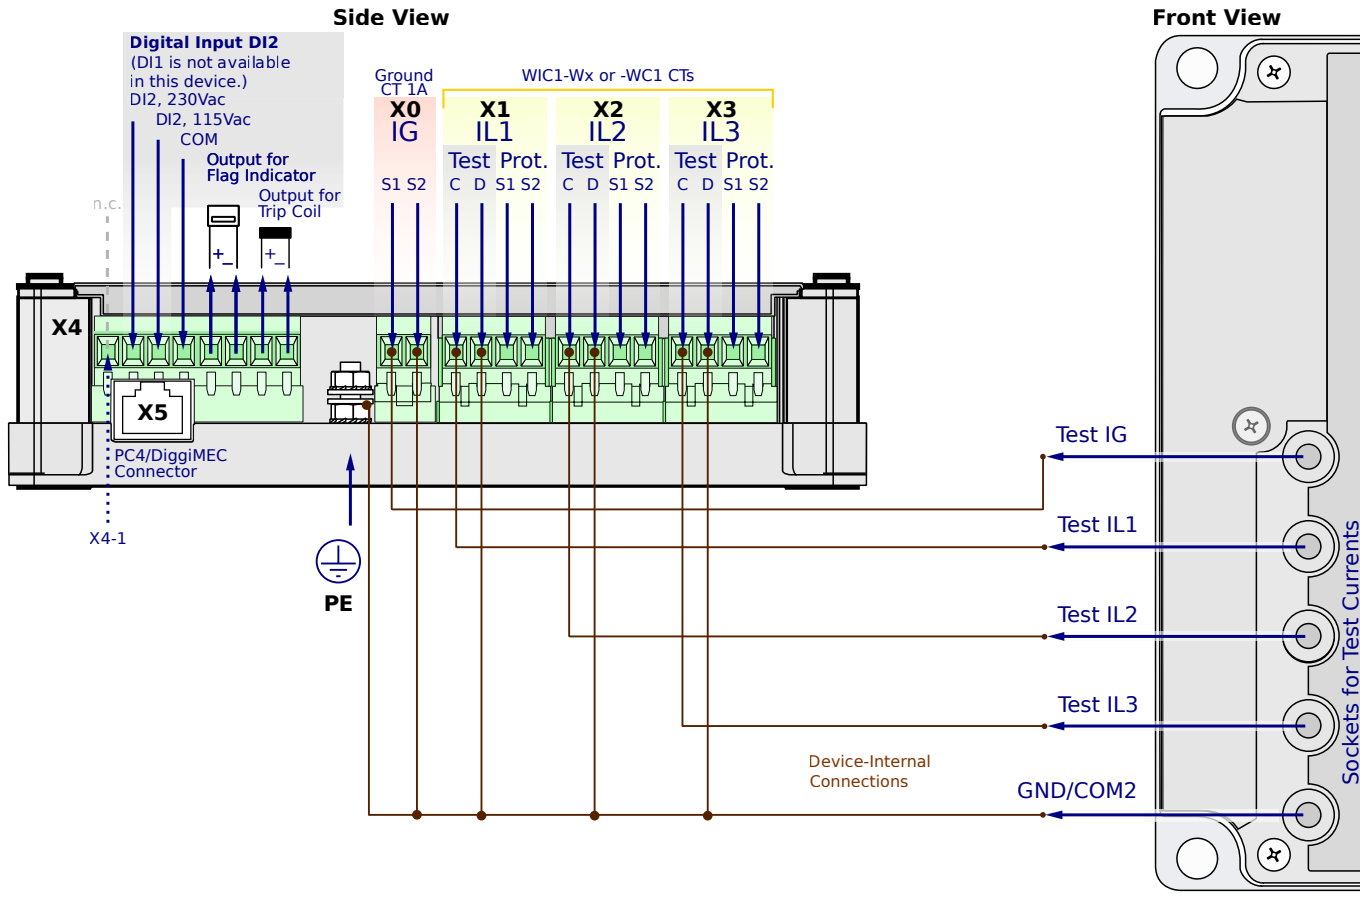


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0SAH

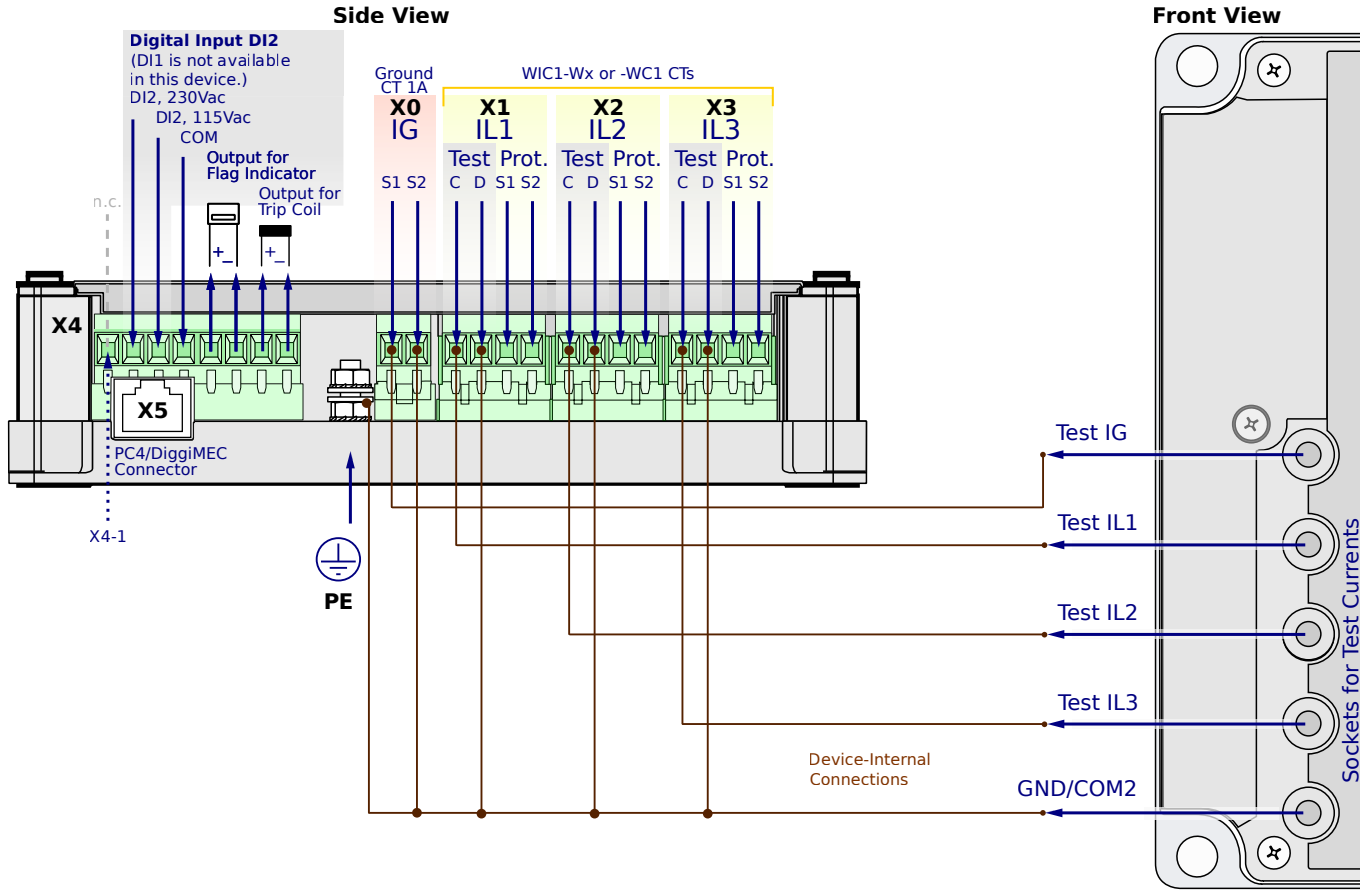


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0AA0

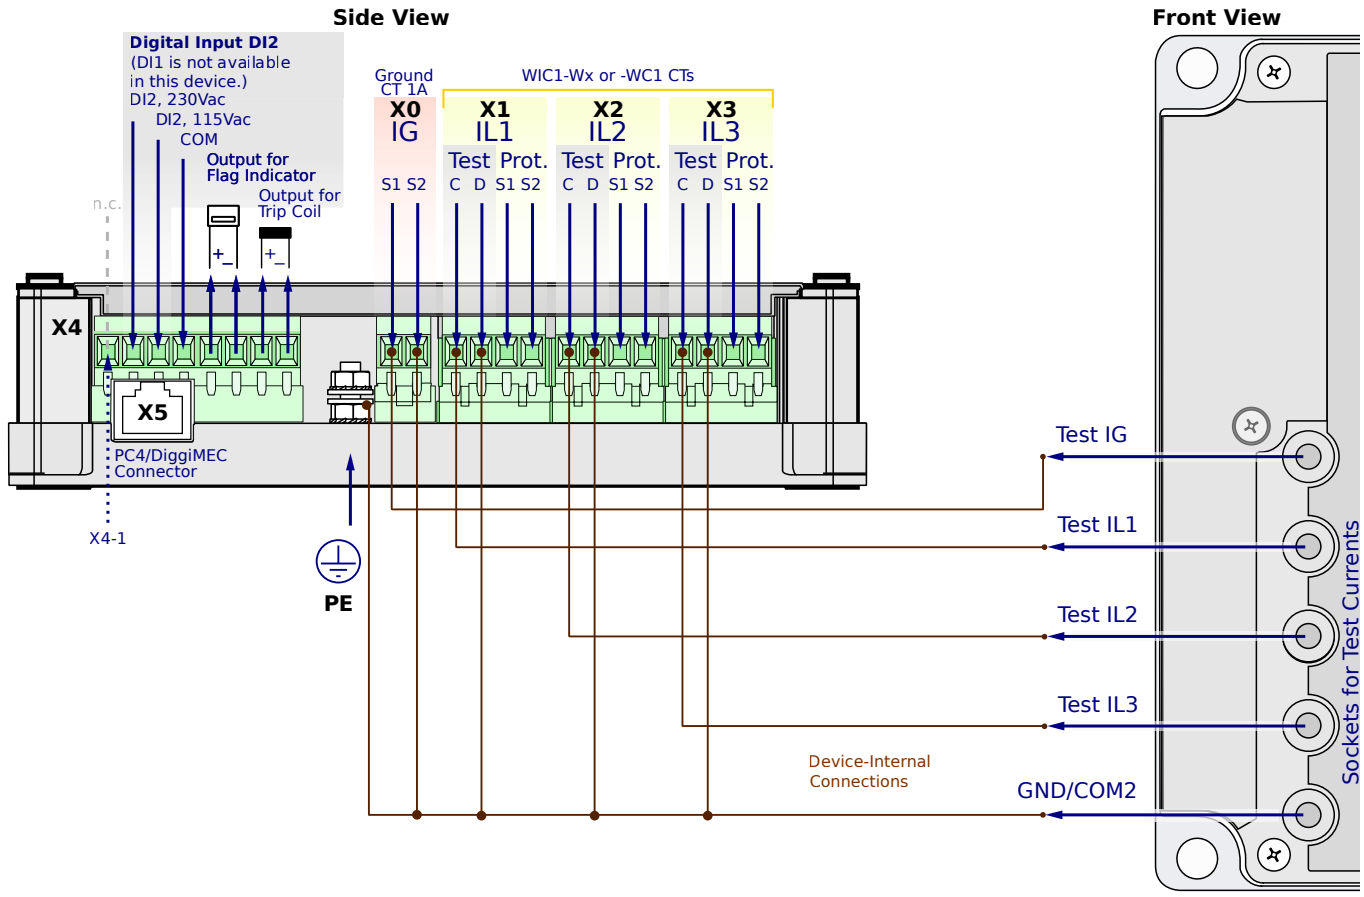


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0AAH

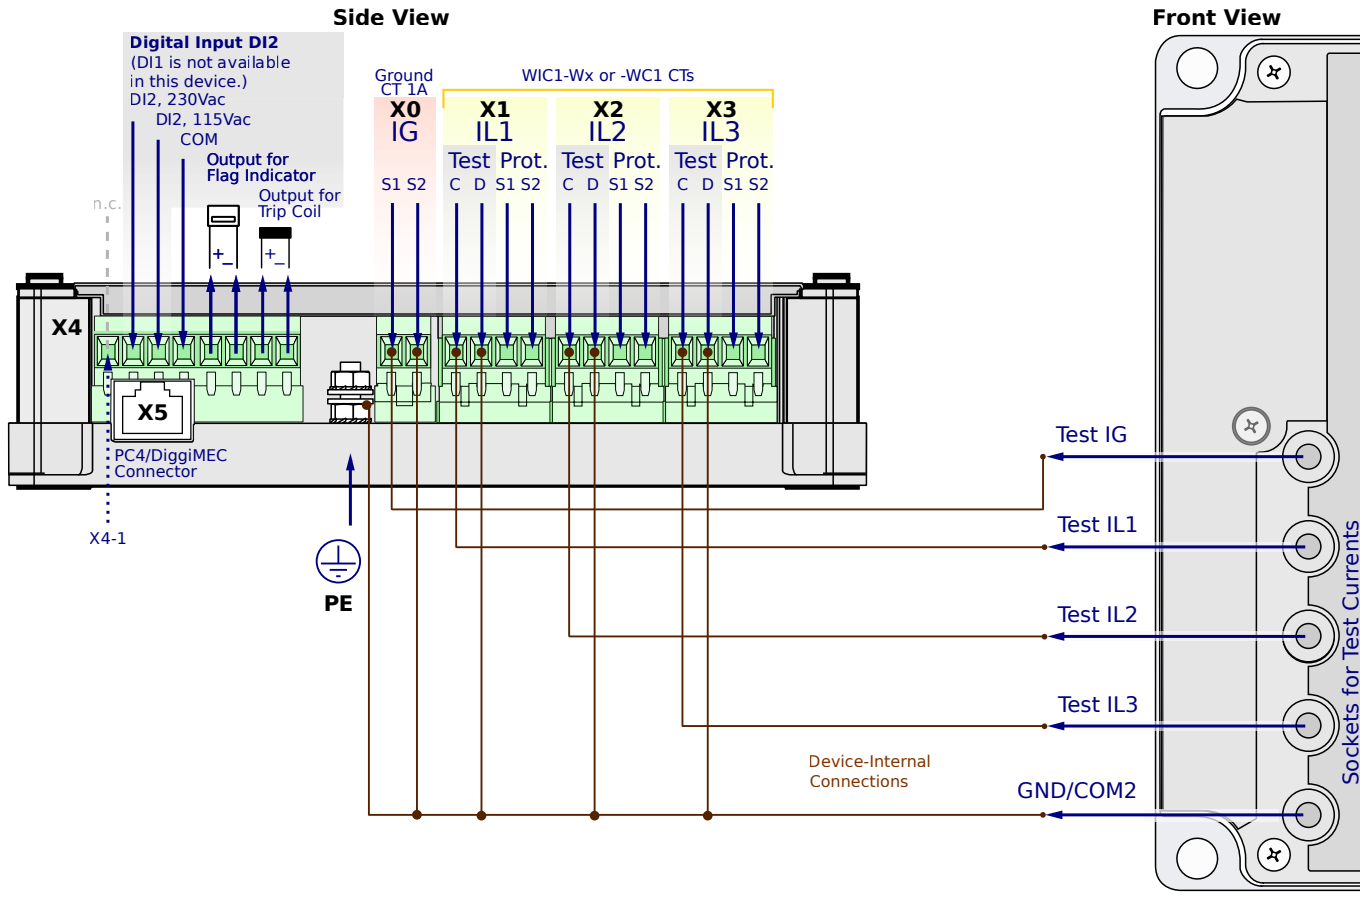


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0PA0

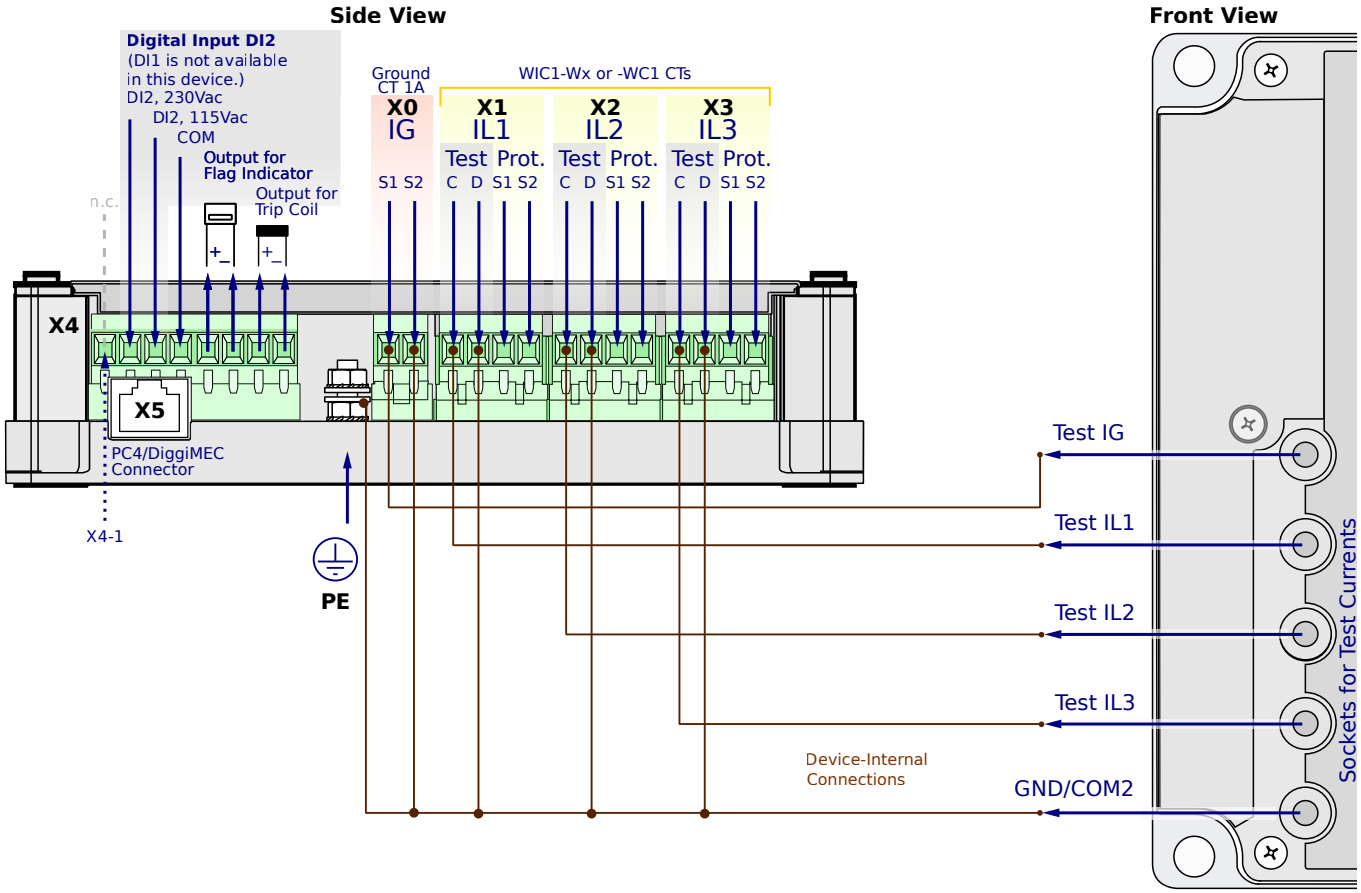


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC0PAH

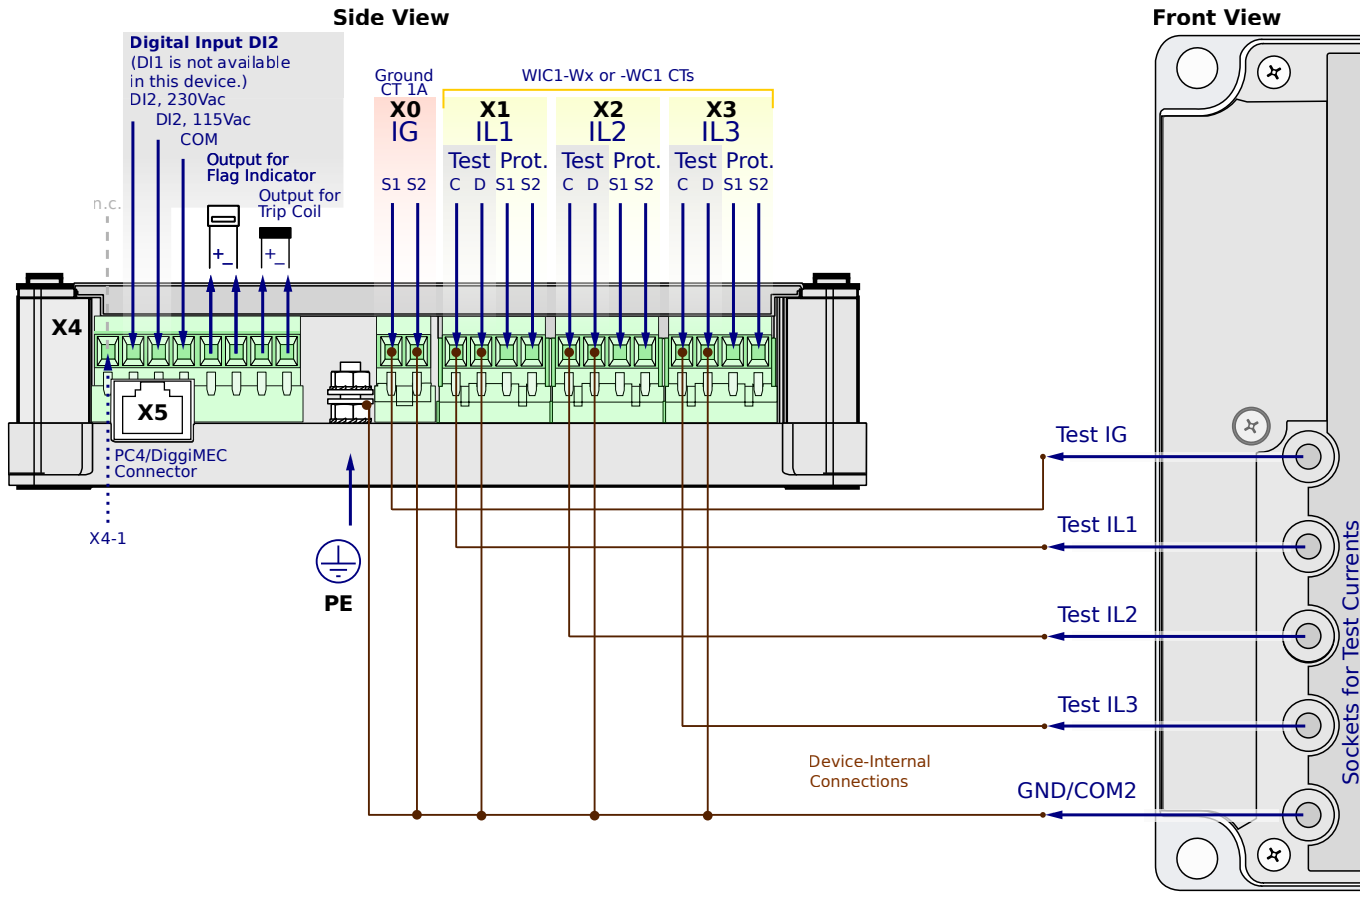


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1SA0

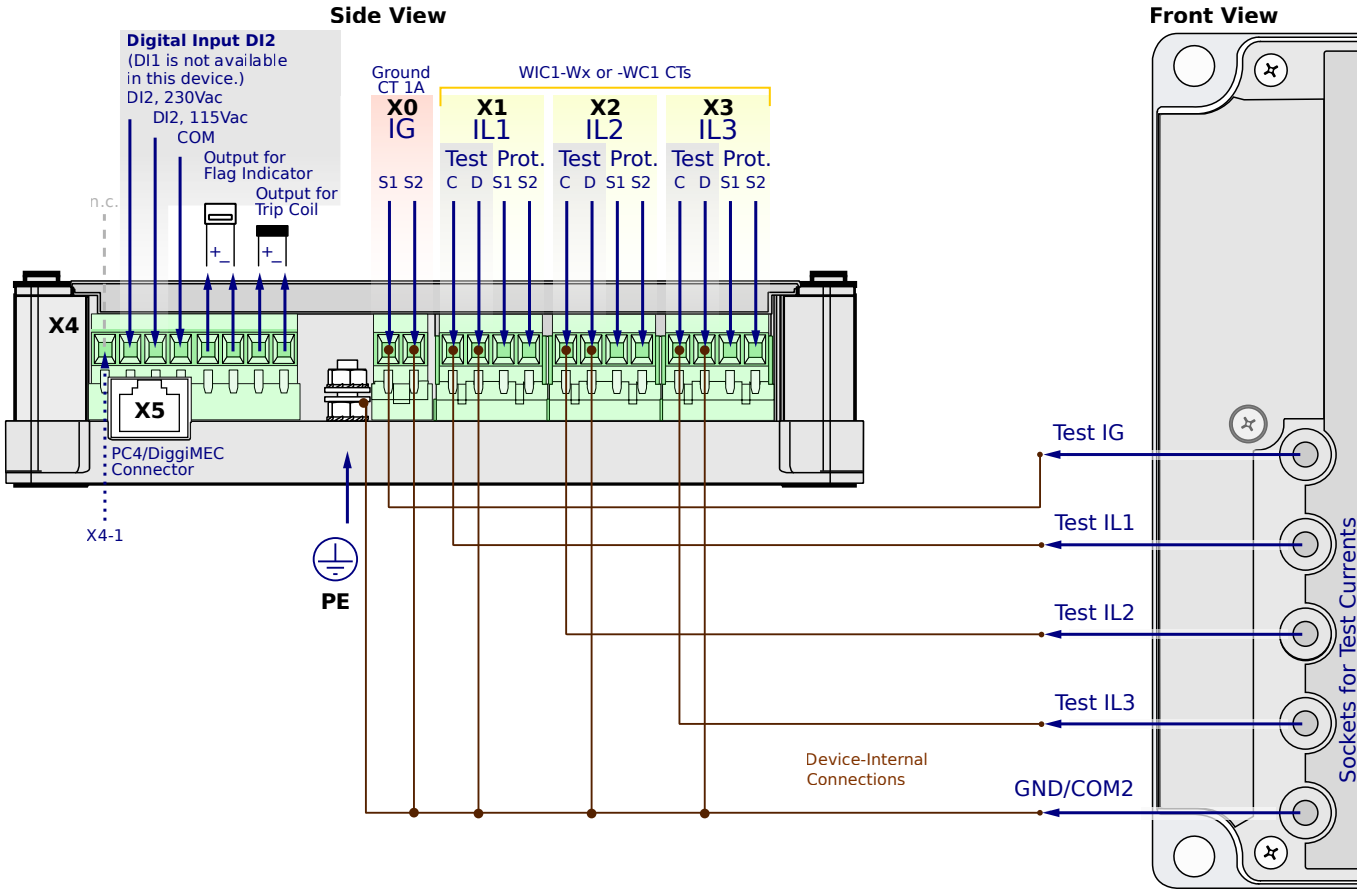


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1SAH

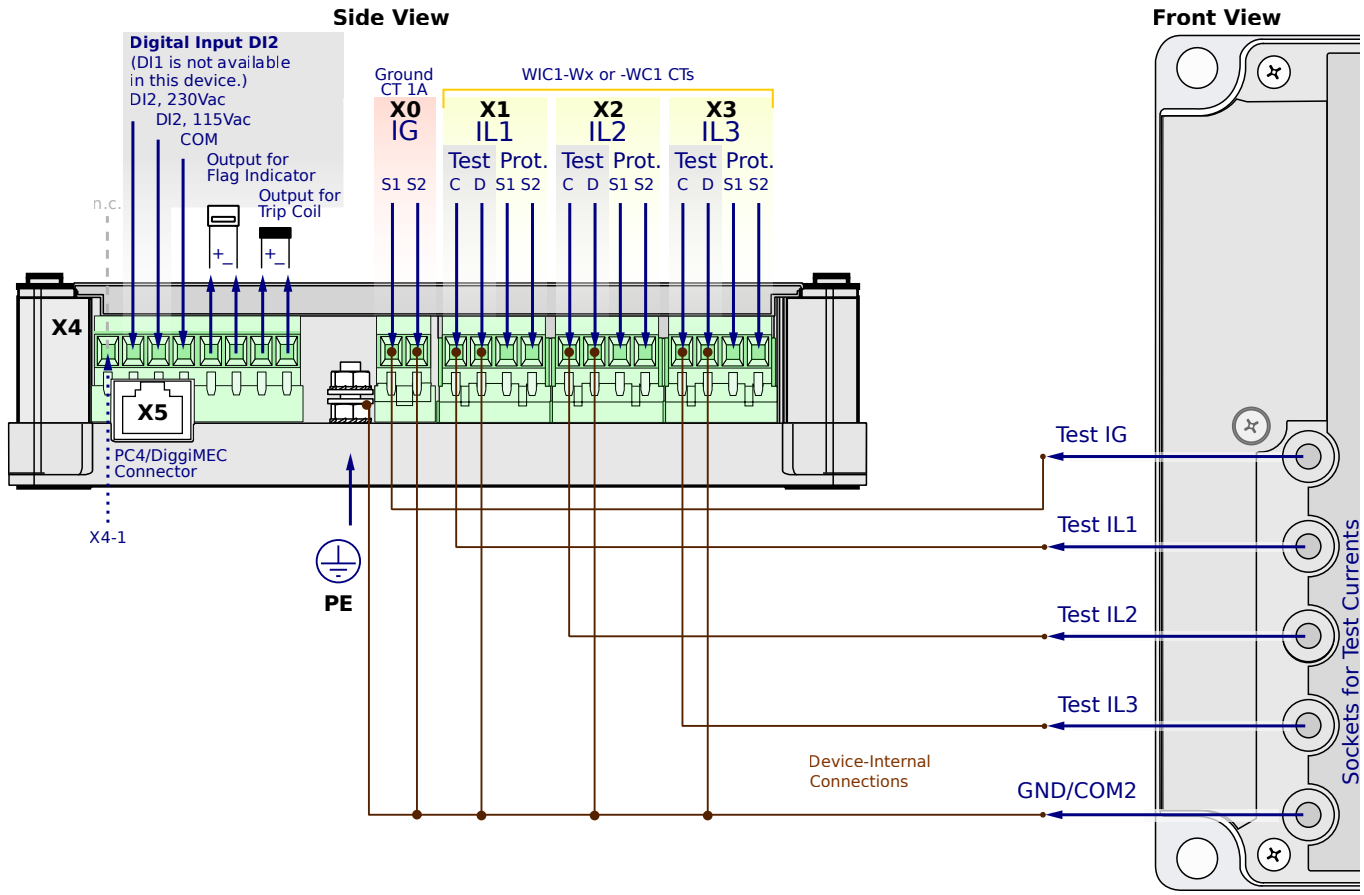


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1AA0

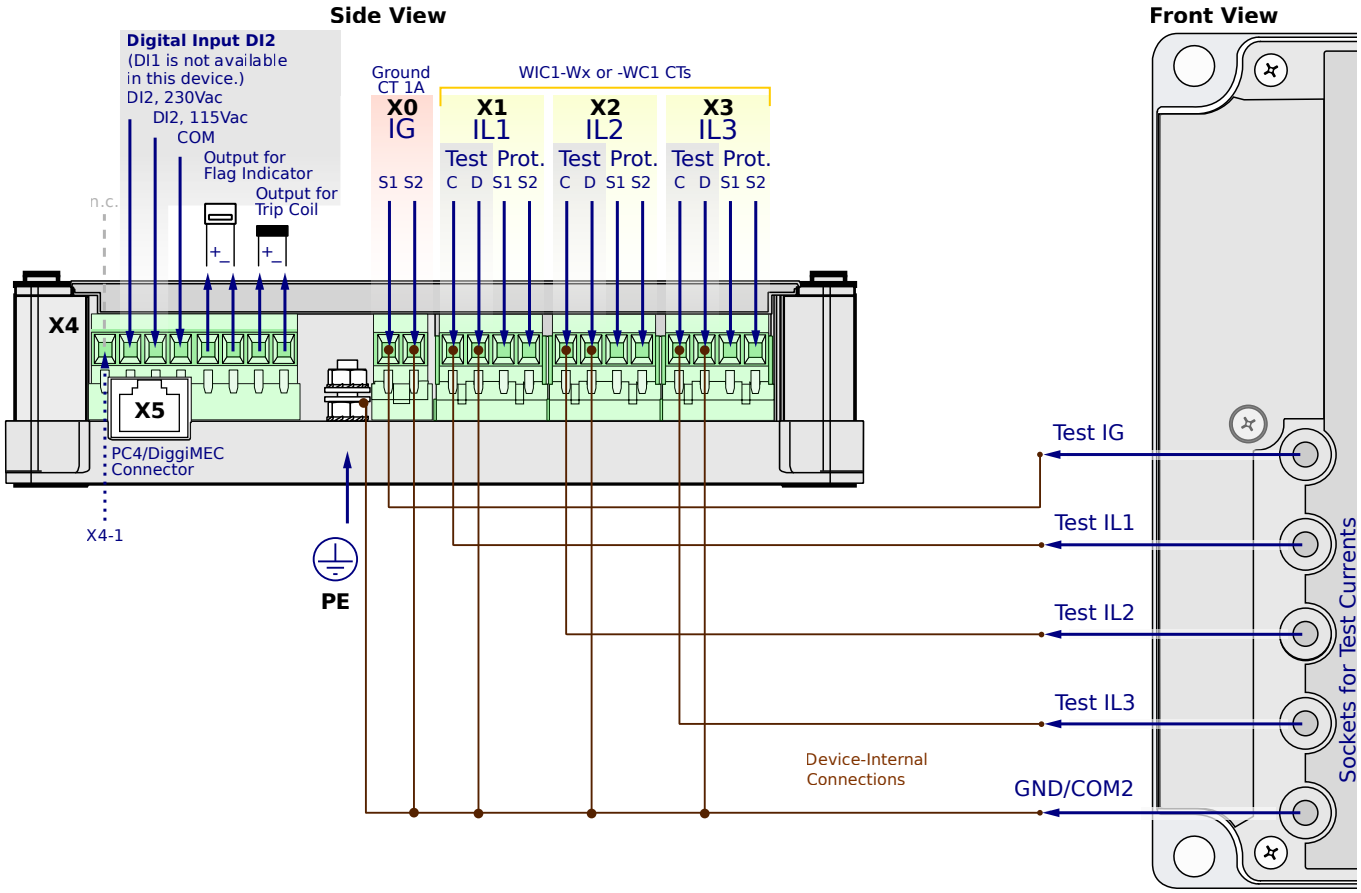


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1AAH

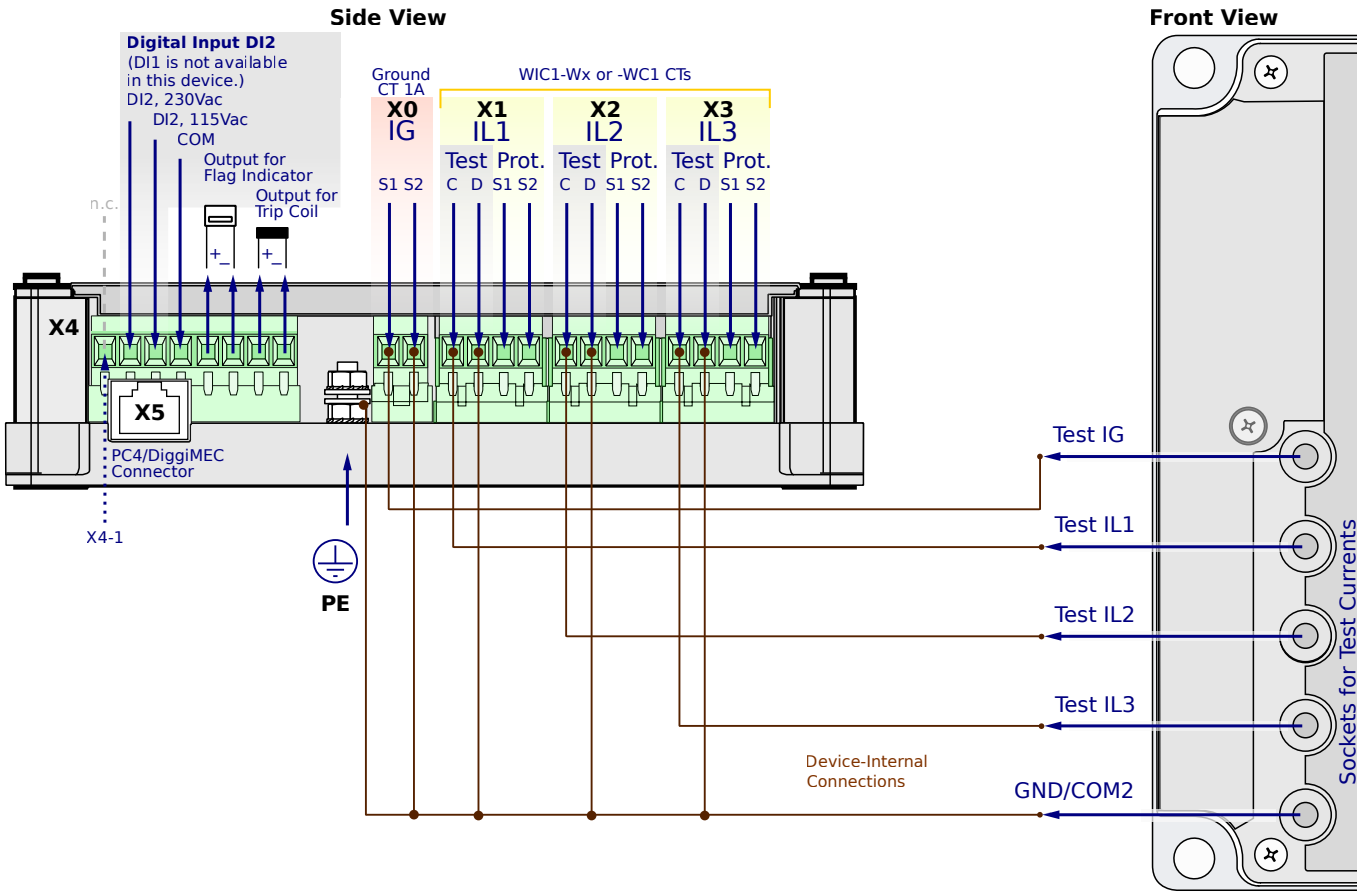


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1PA0

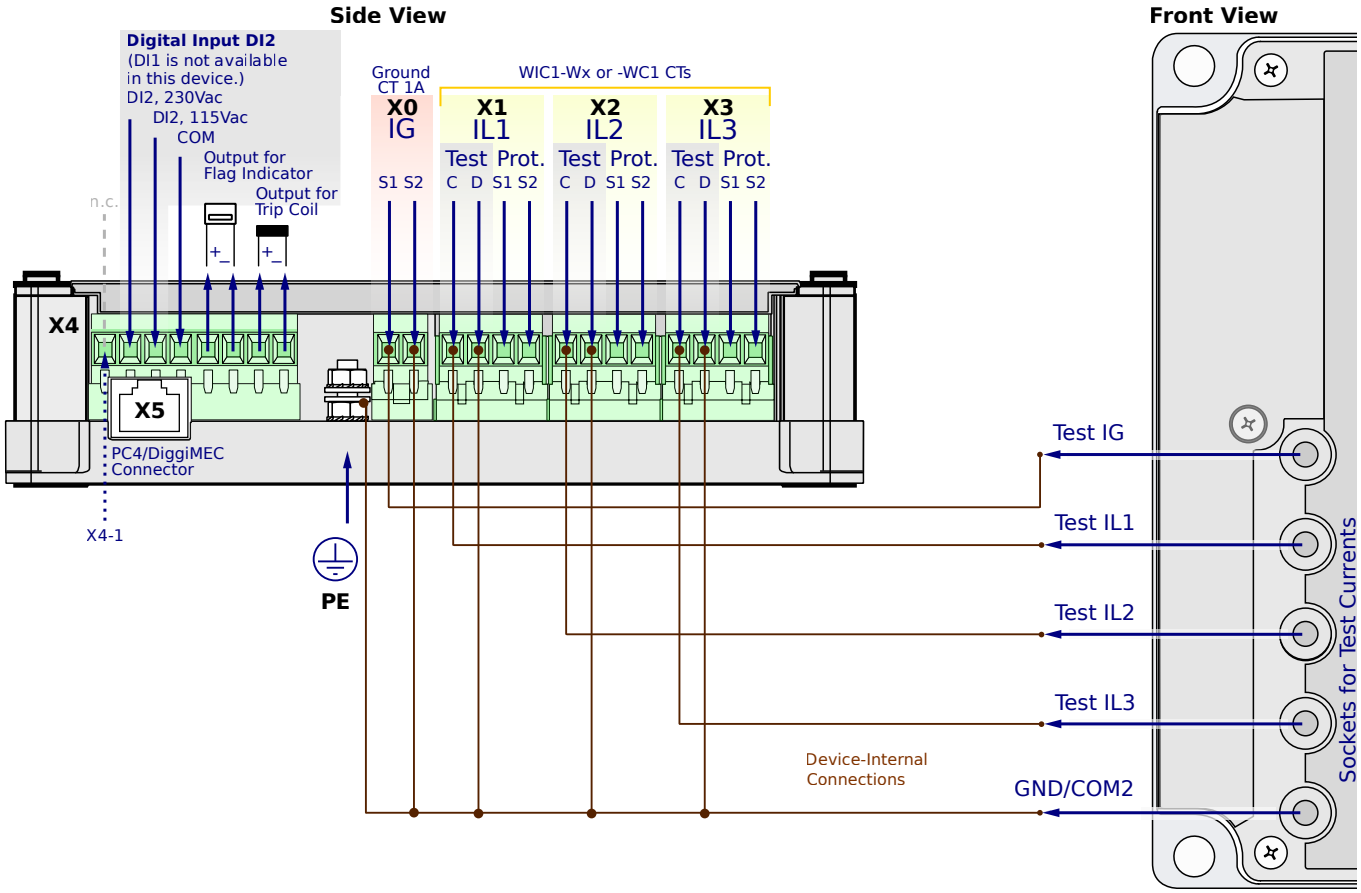


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC1PAH

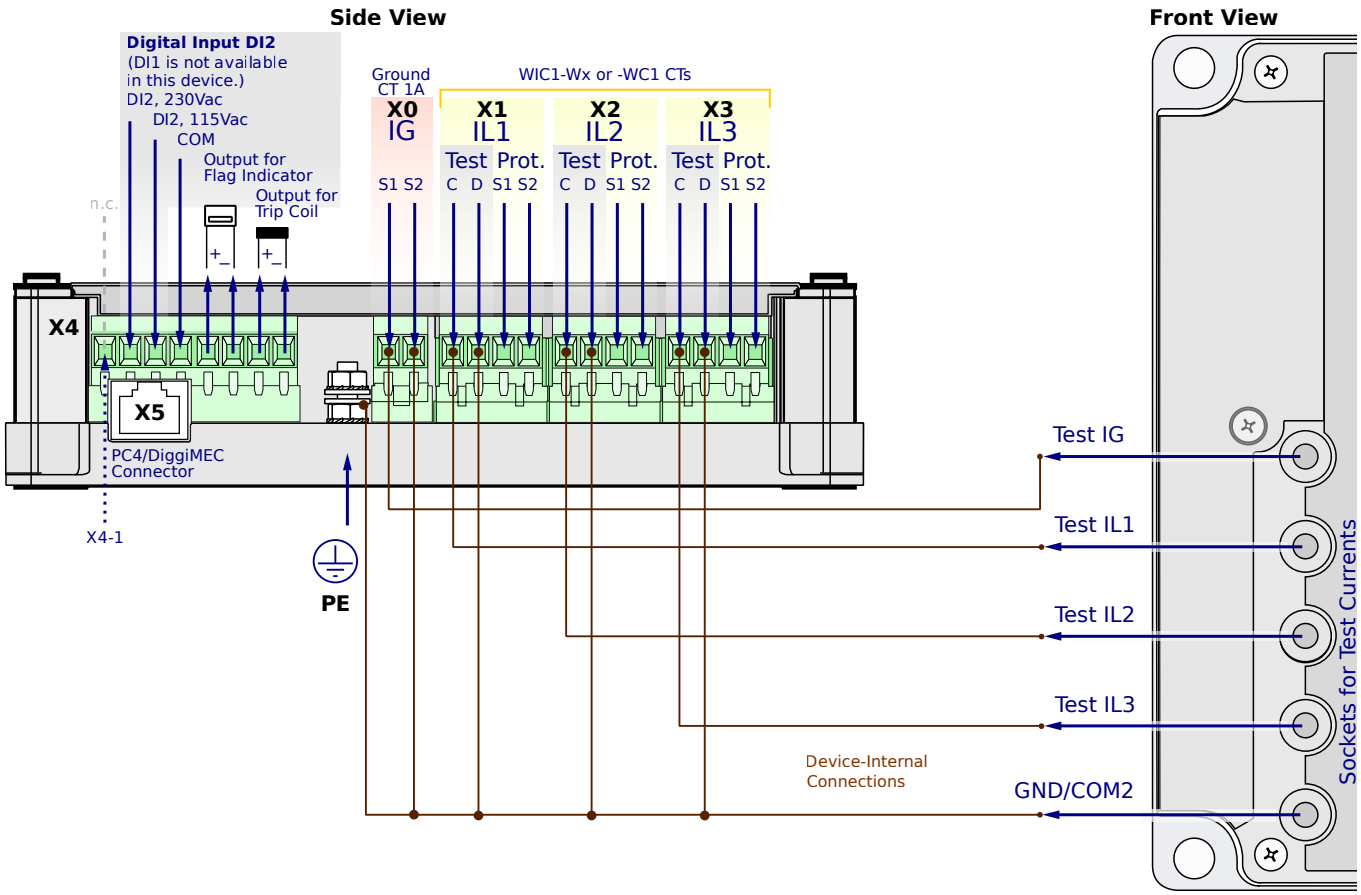


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2SA0

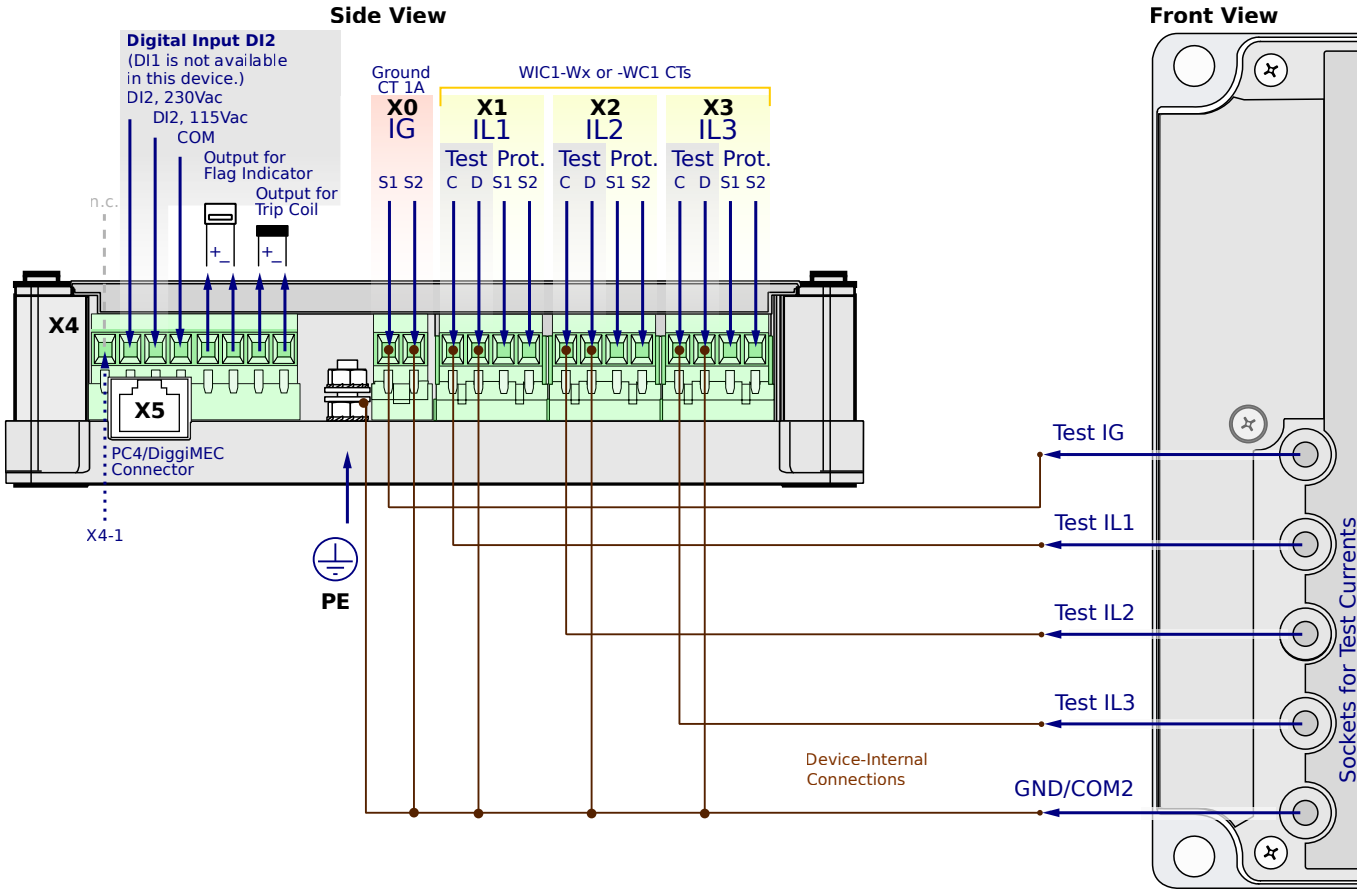


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2SAH

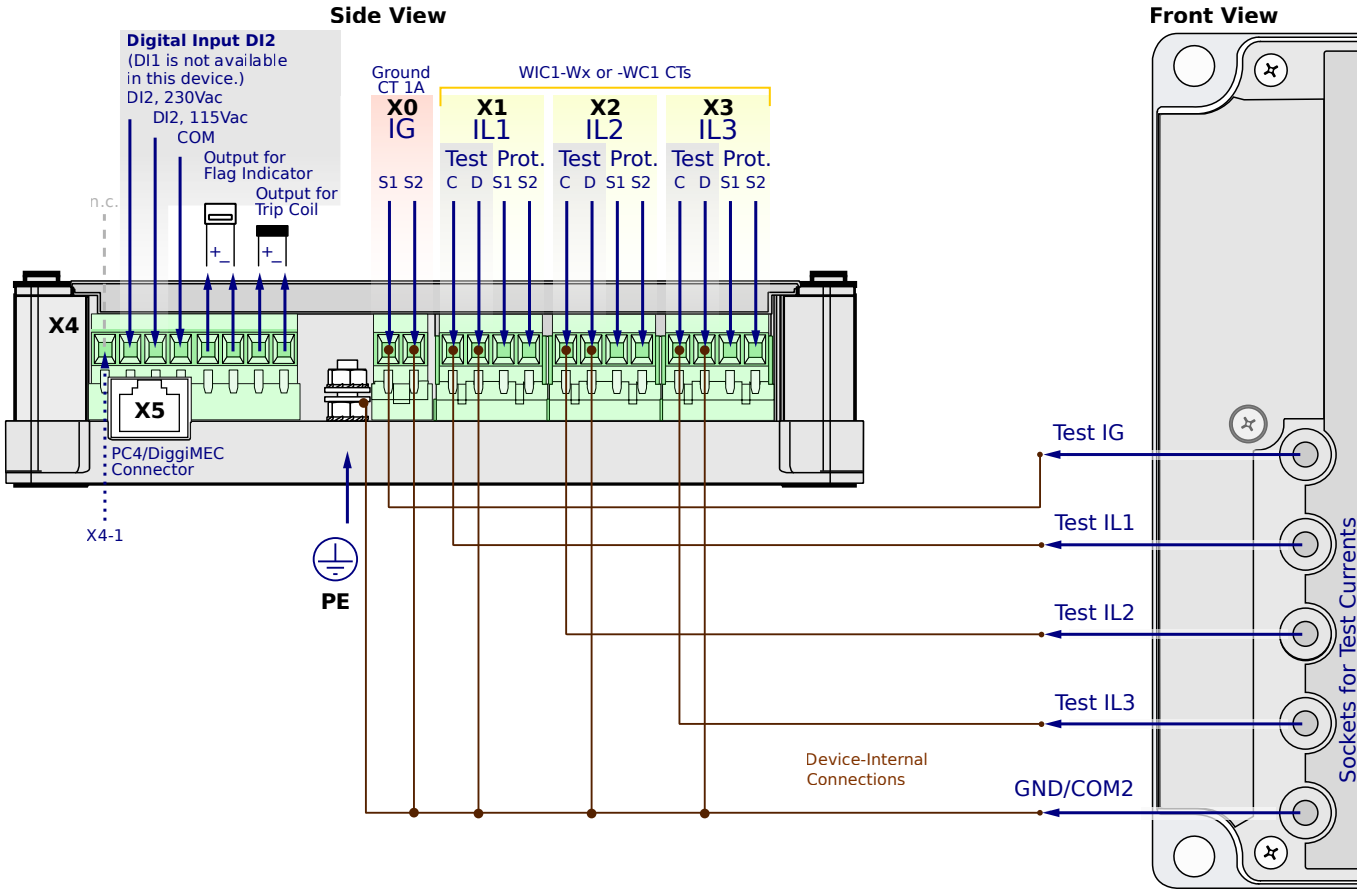


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2AA0

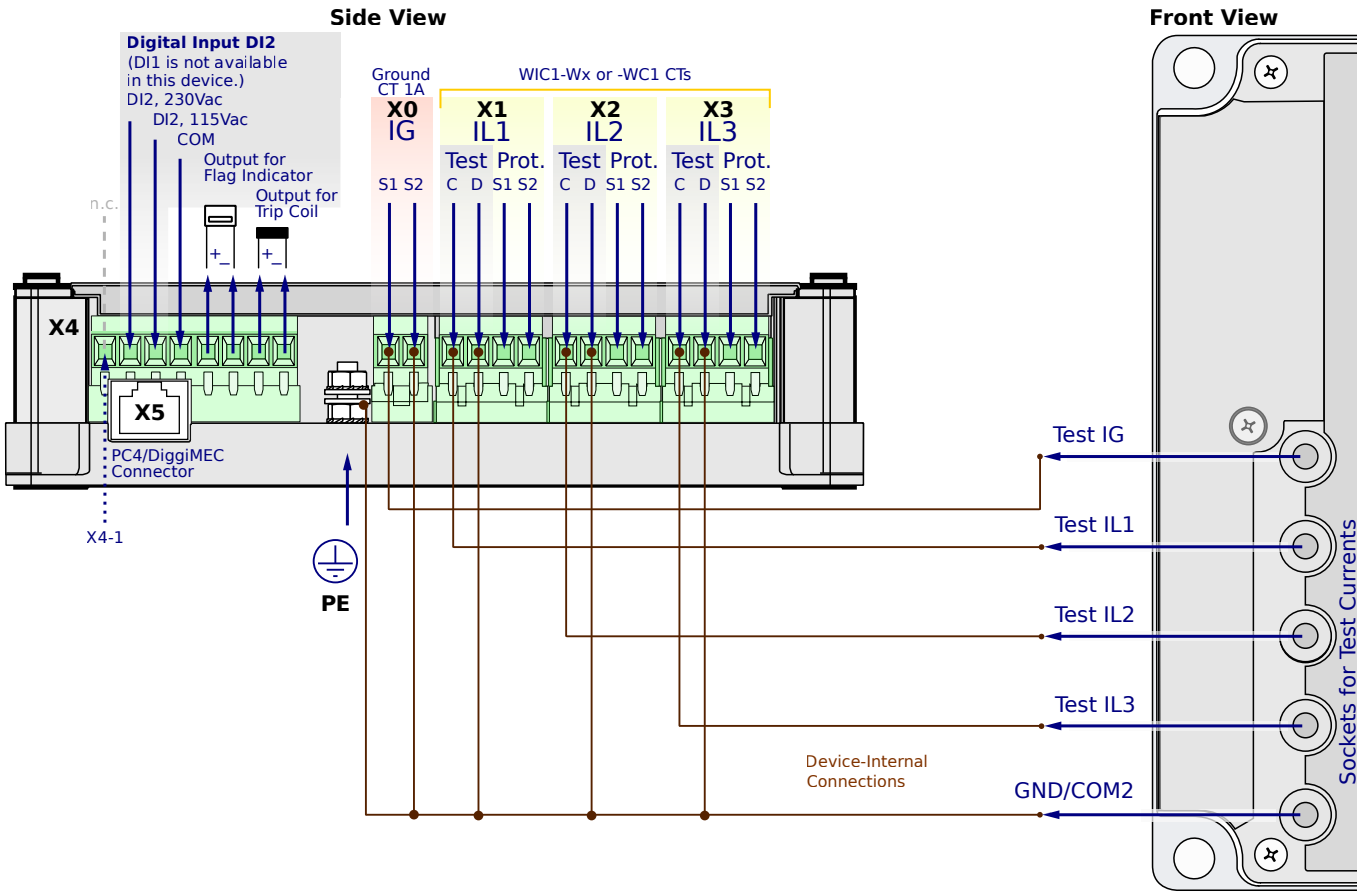


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2AAH

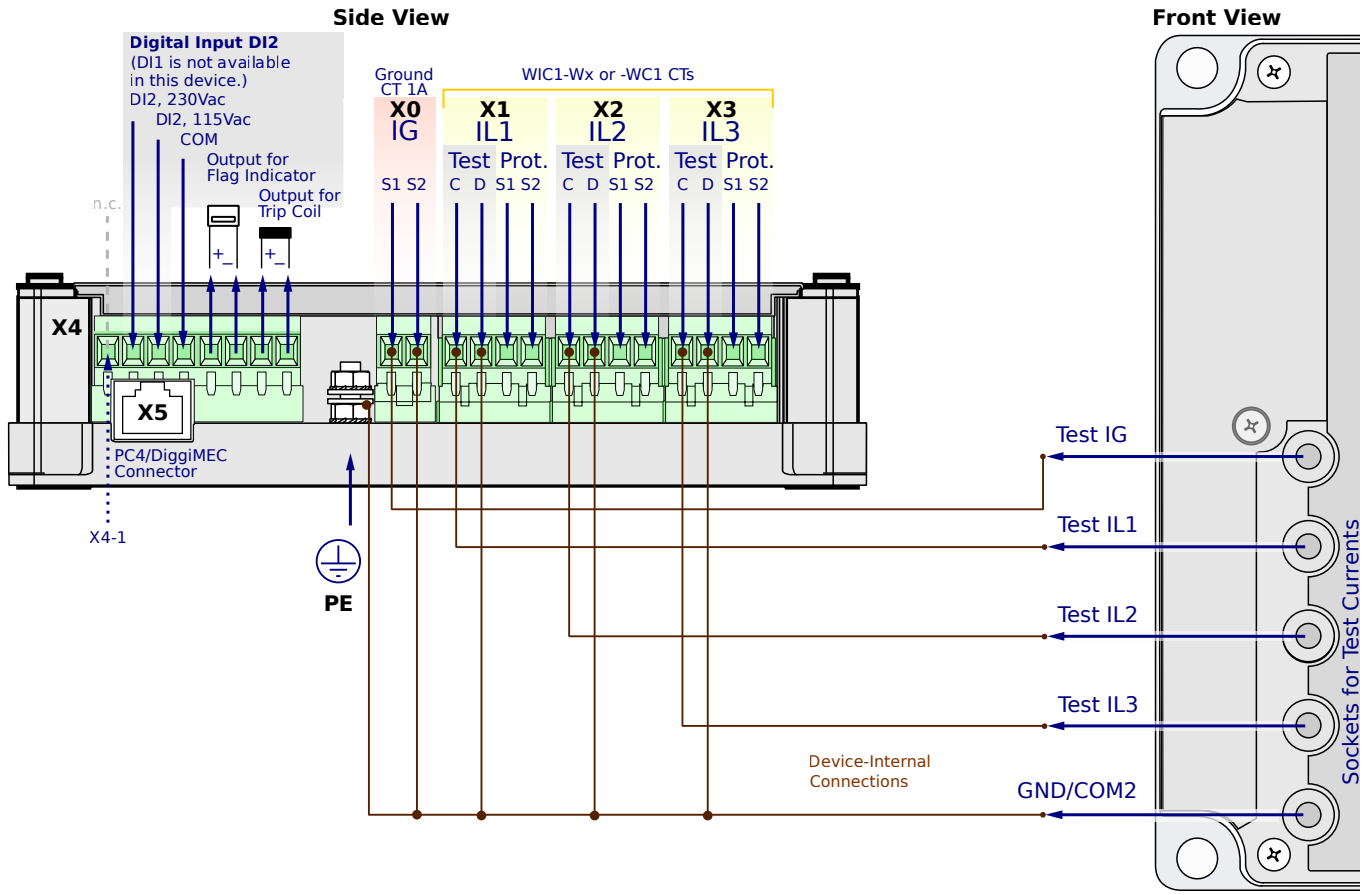


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2PA0

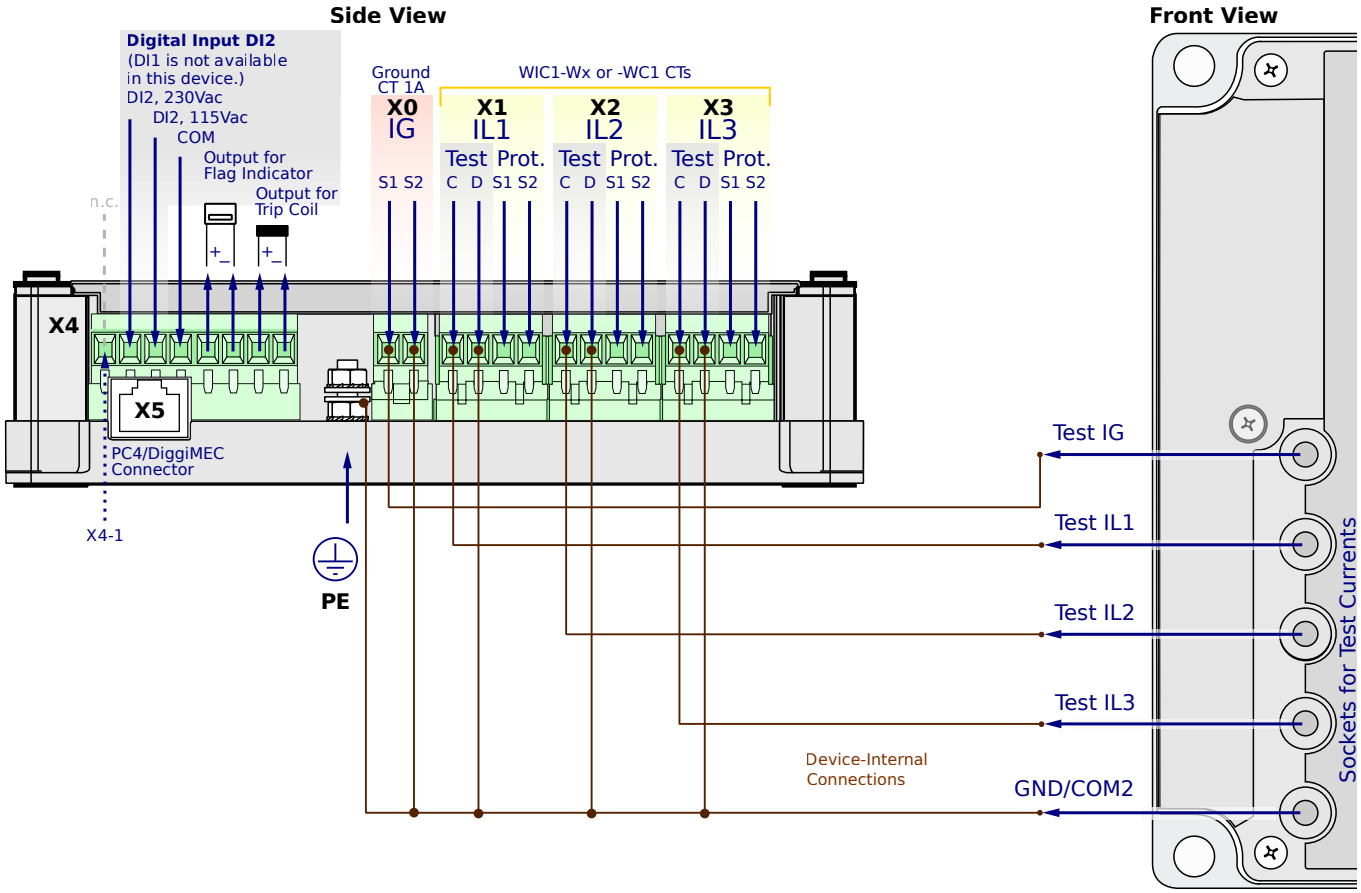


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5NC2PAH

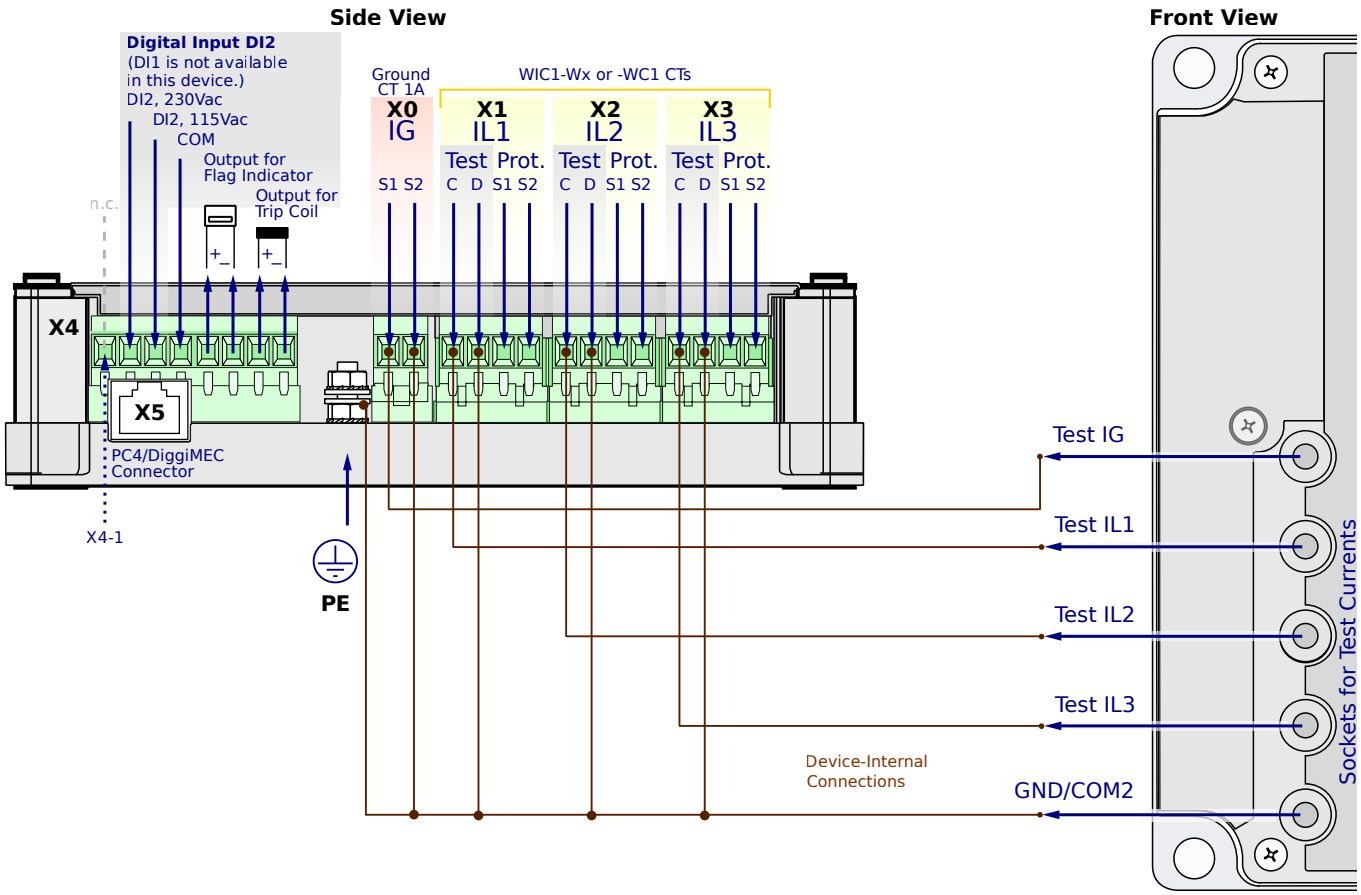


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1SA0

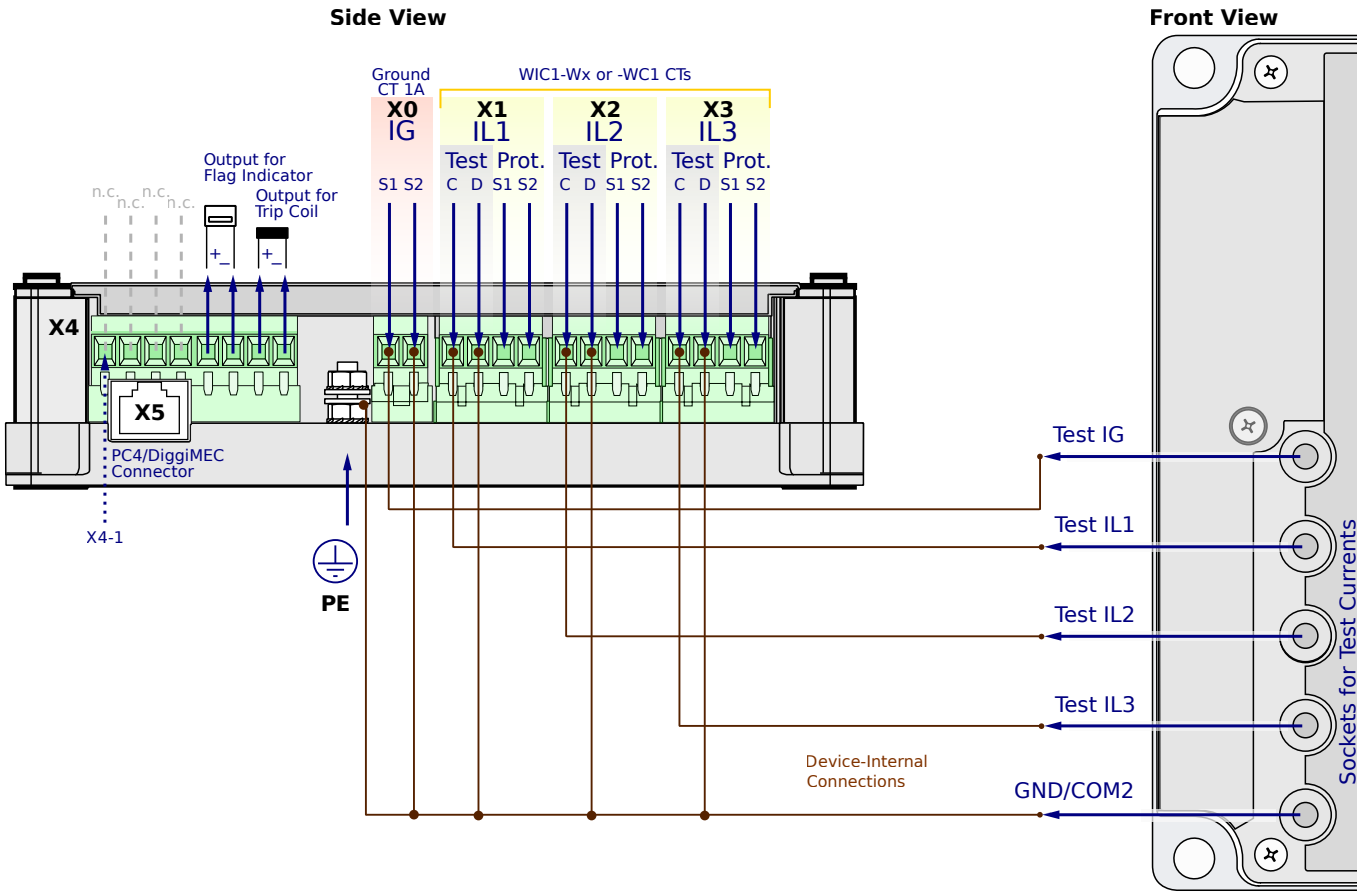


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1SAH

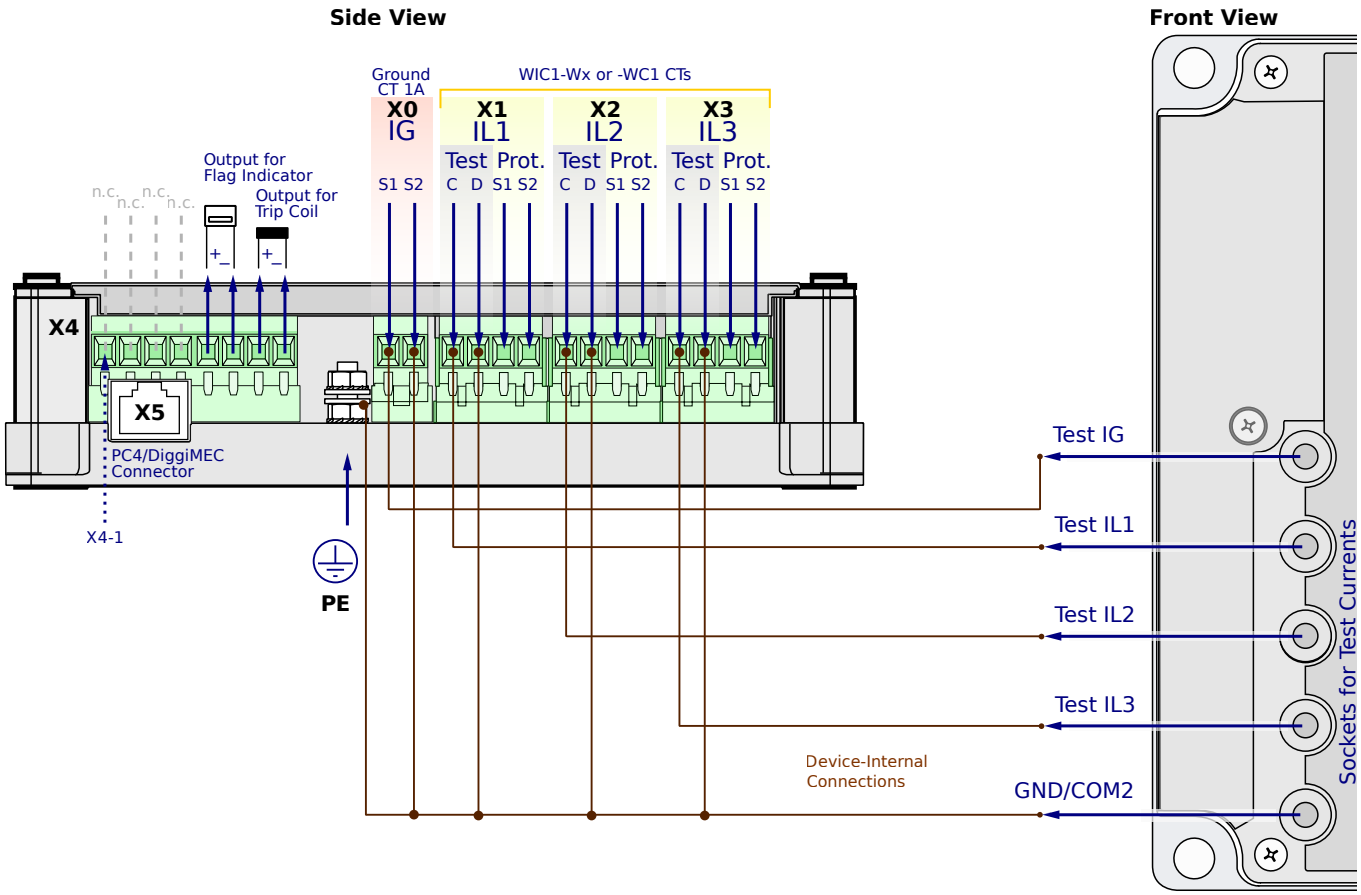


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1AA0

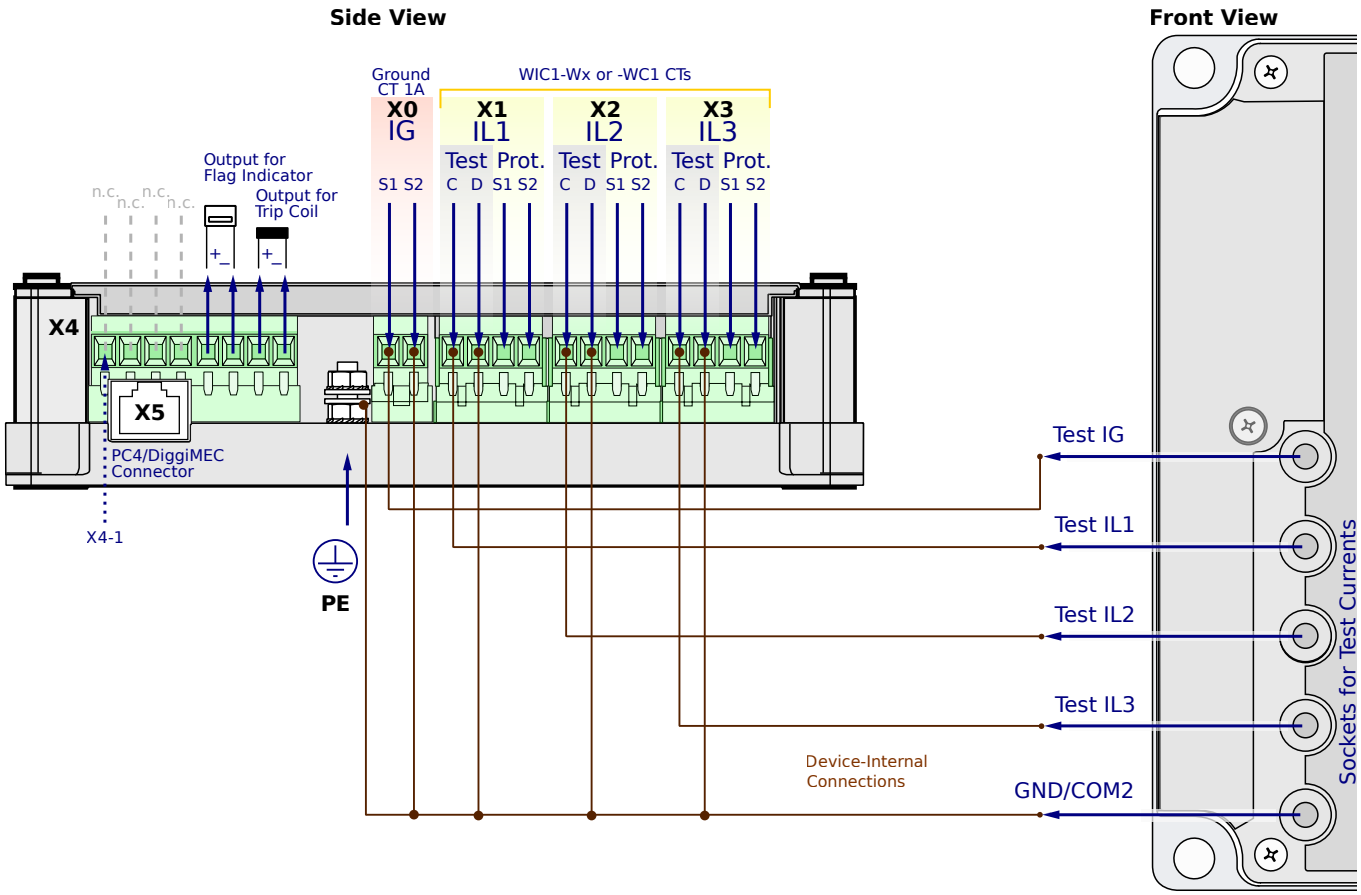


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1AAH

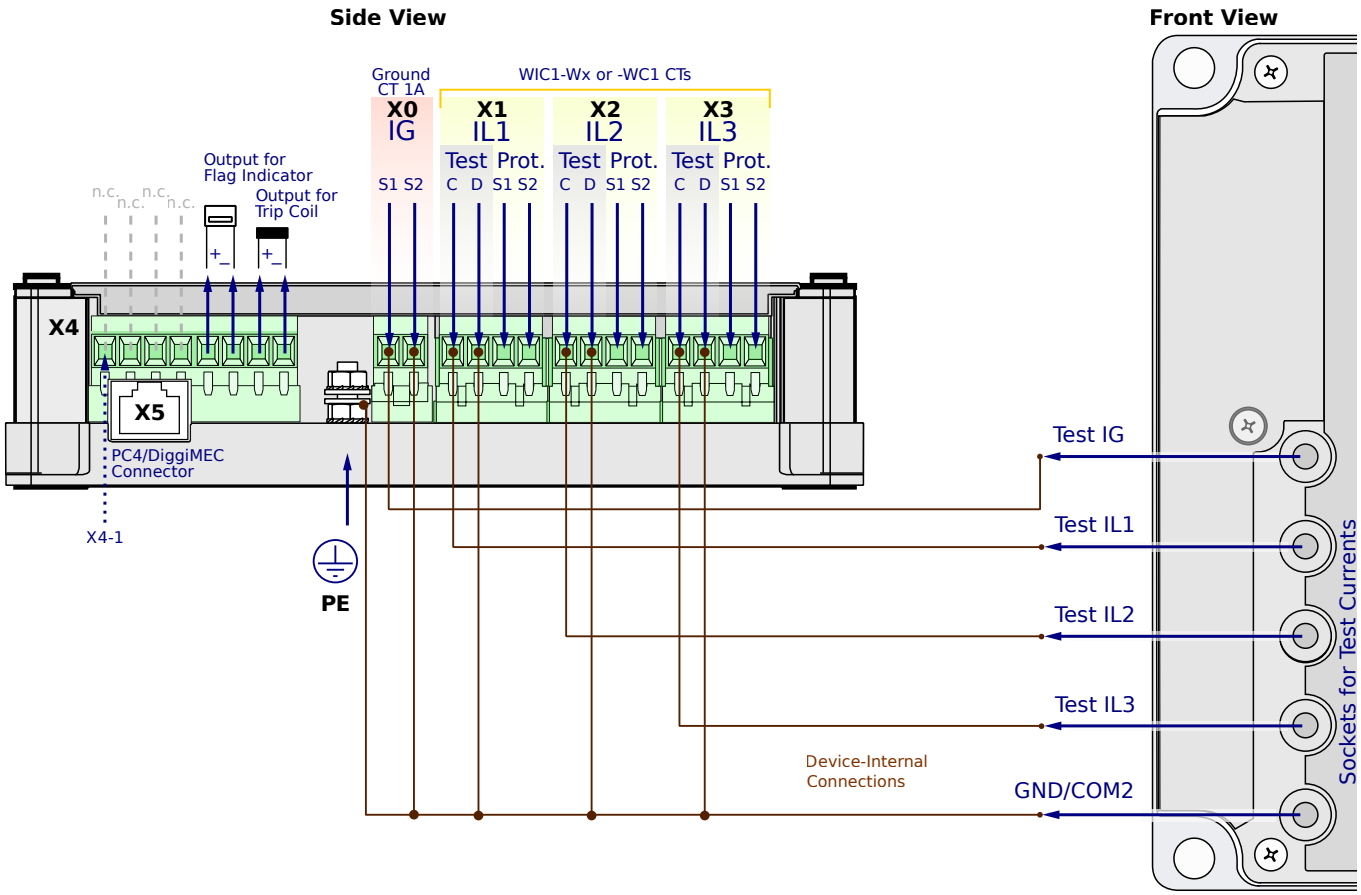


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1PA0

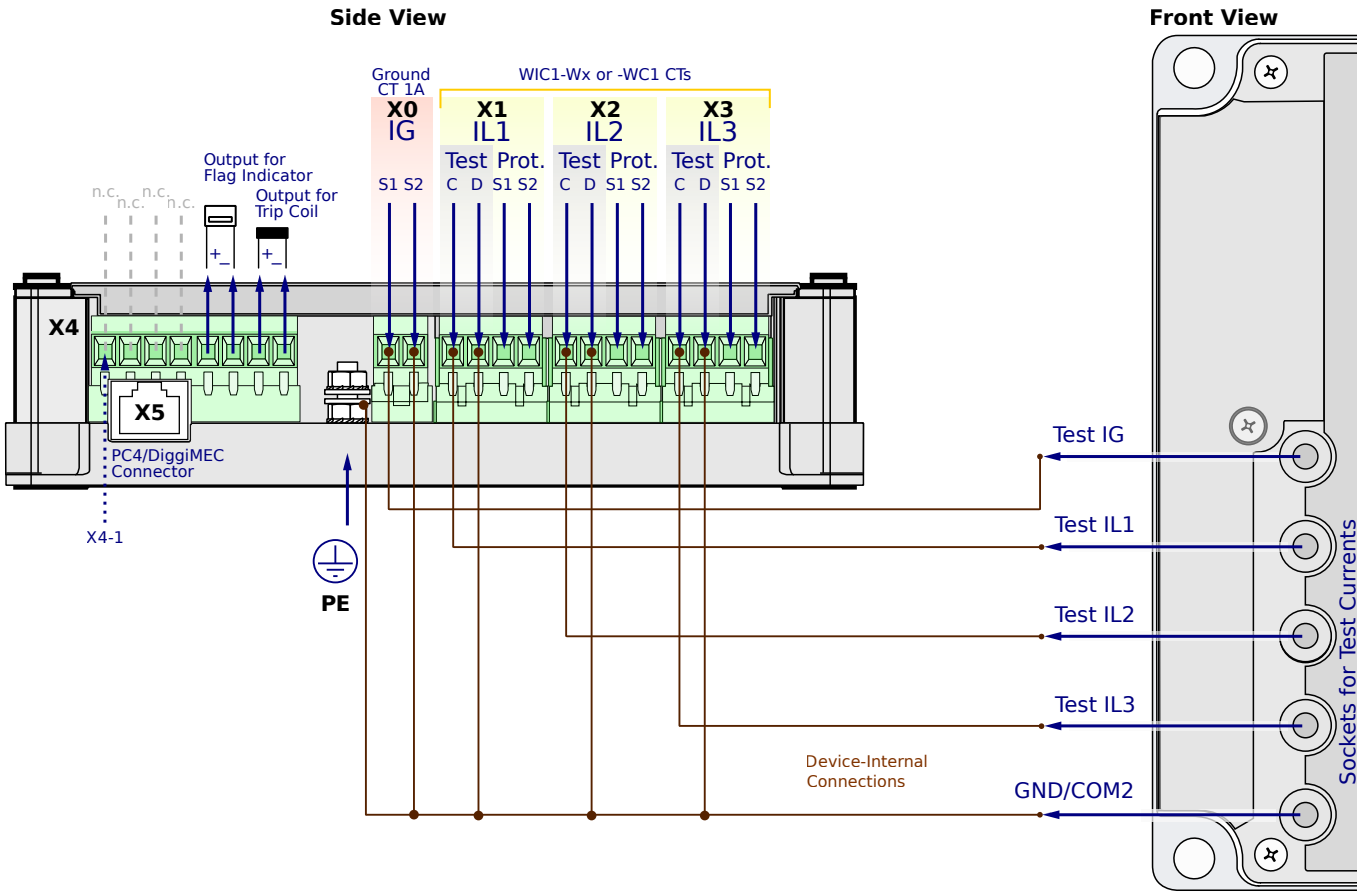


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN1PAH

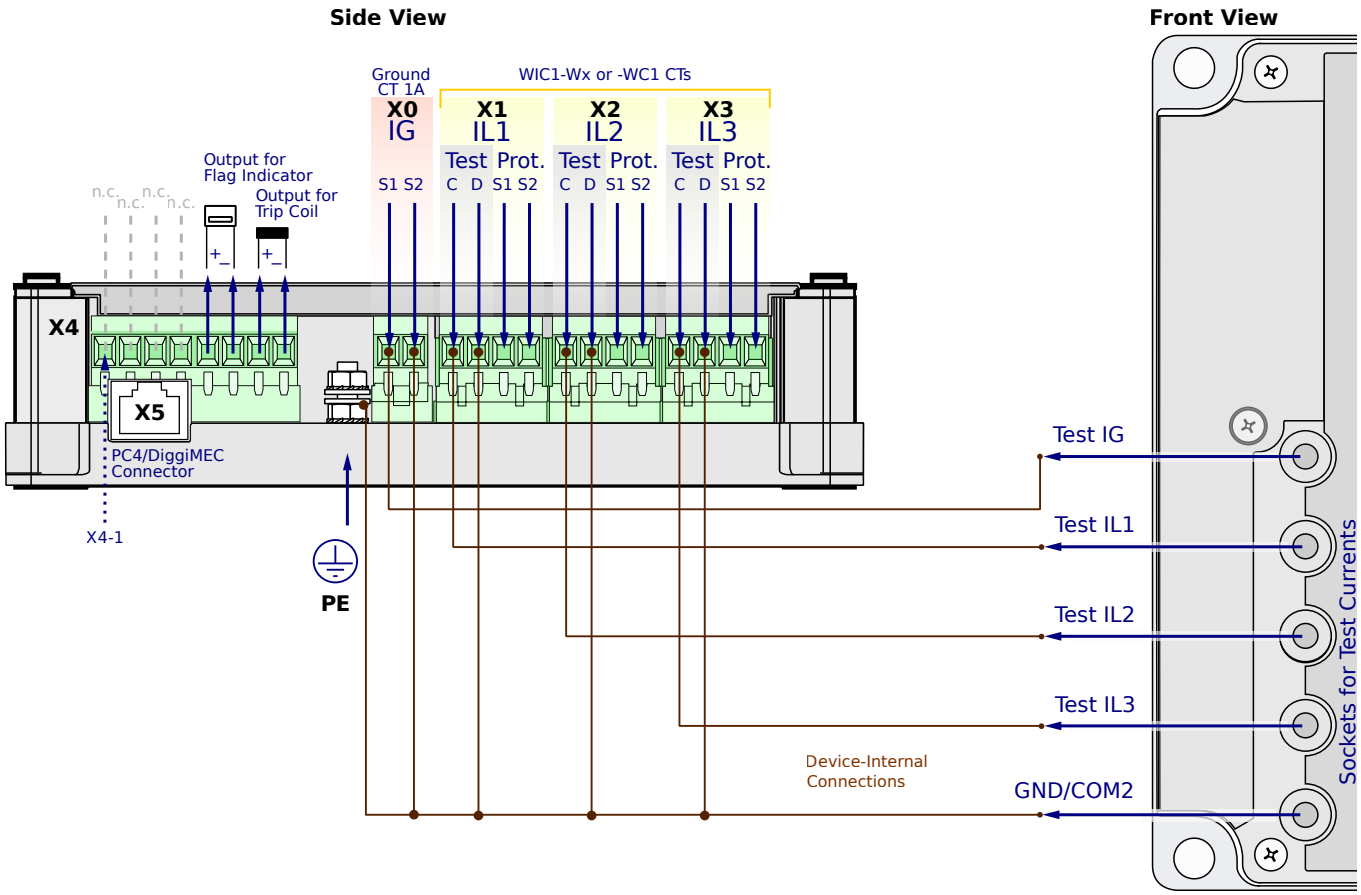


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2SA0

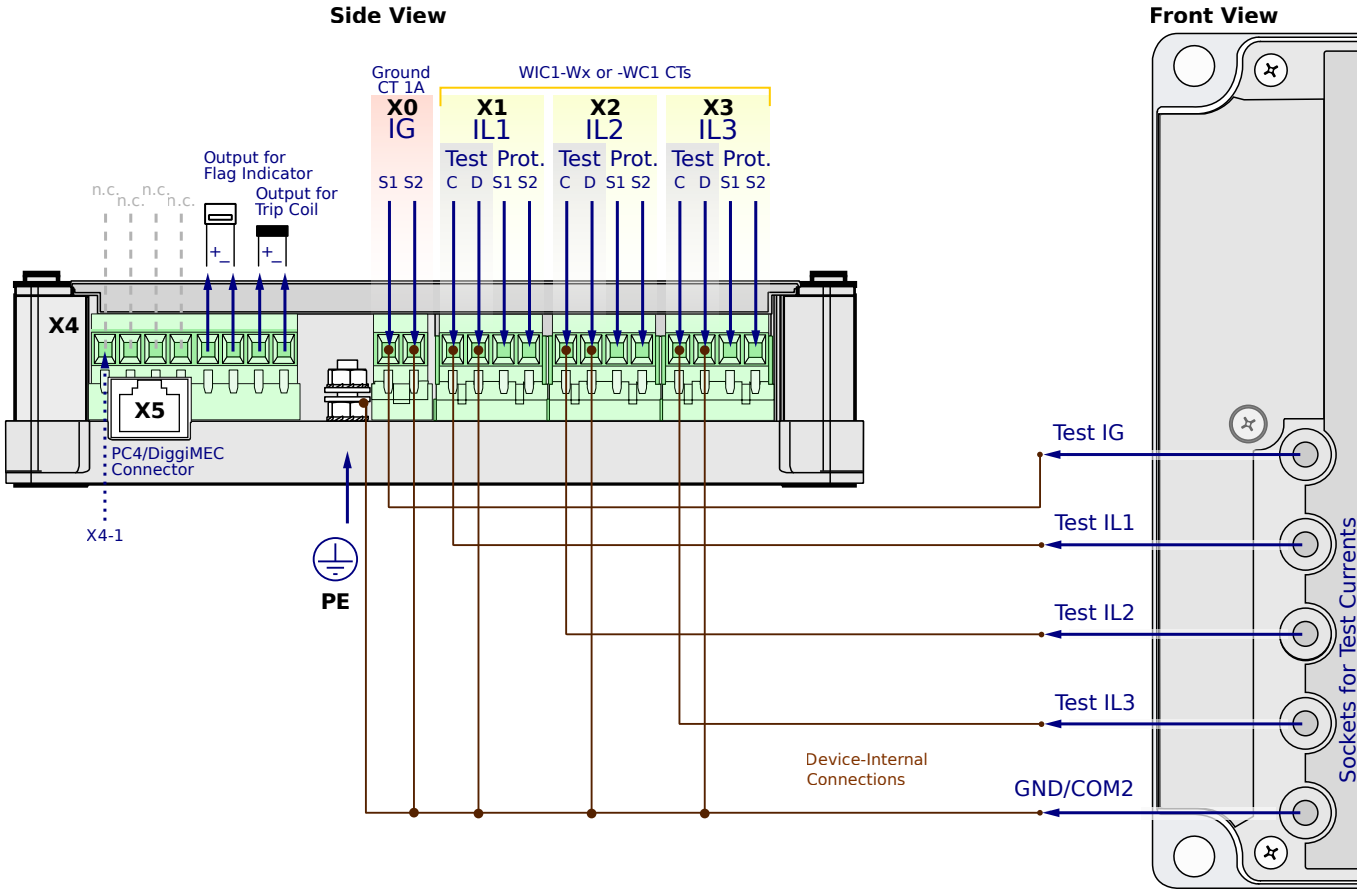


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2SAH

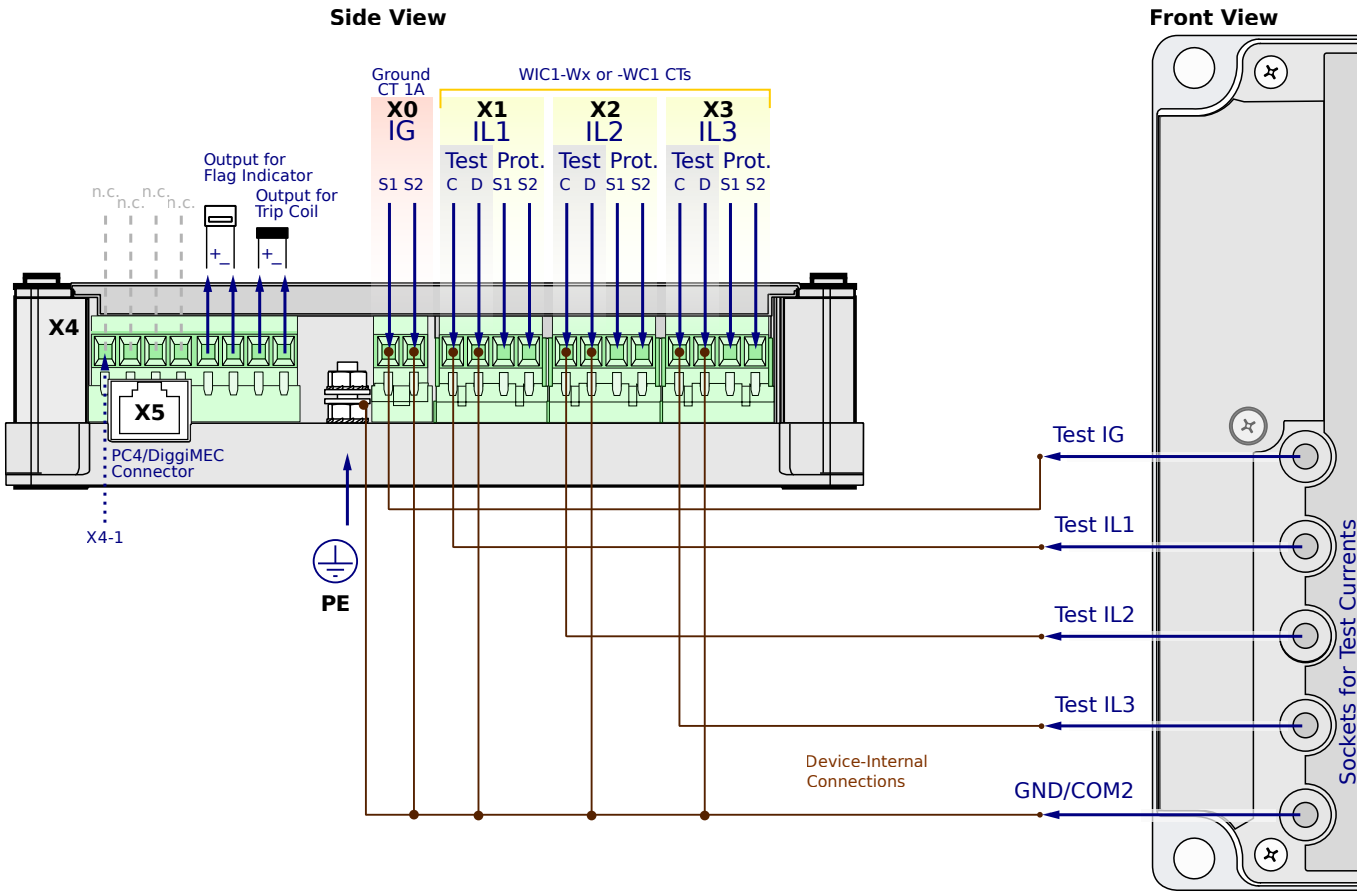


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2AA0

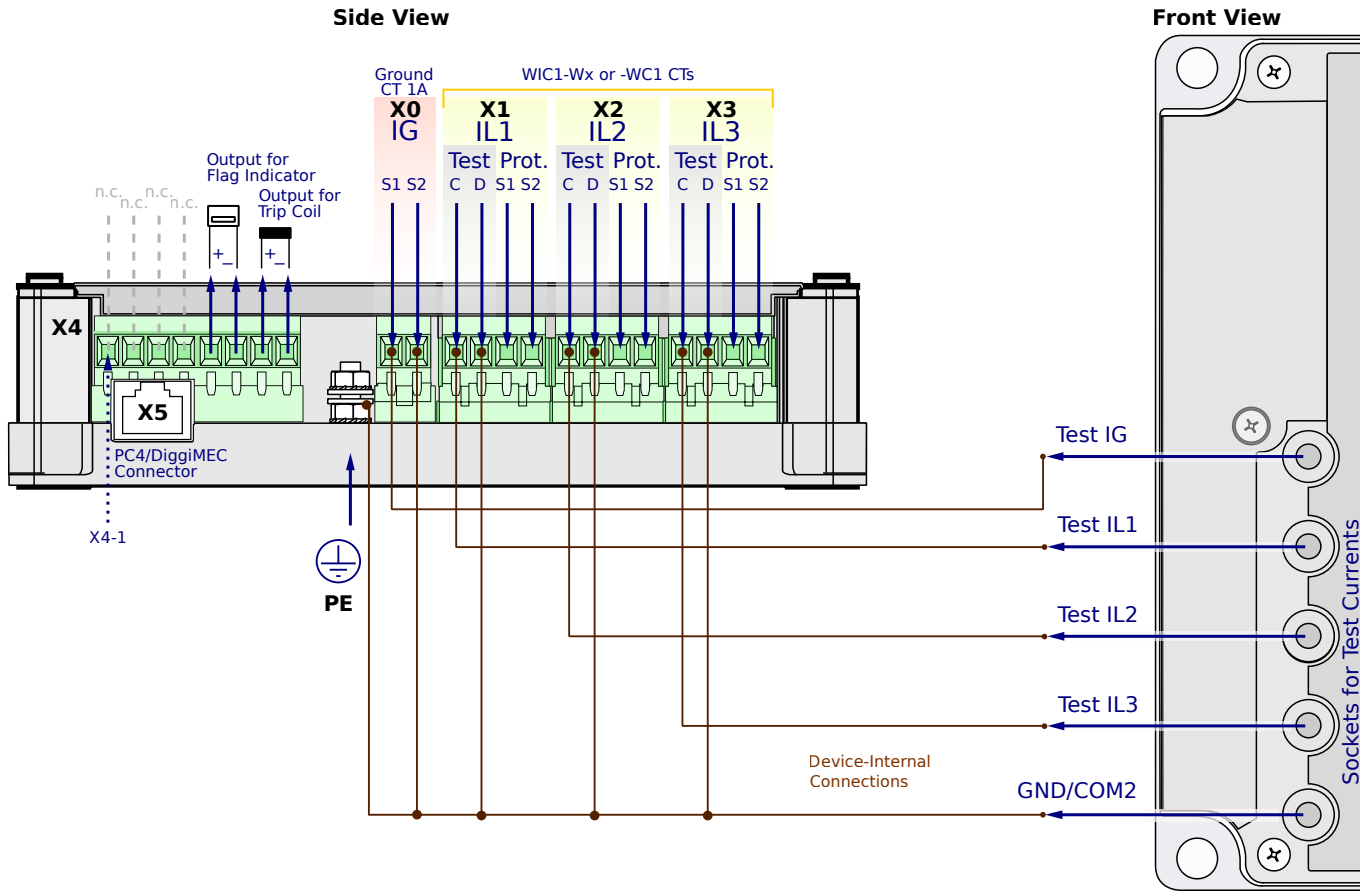


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2AAH

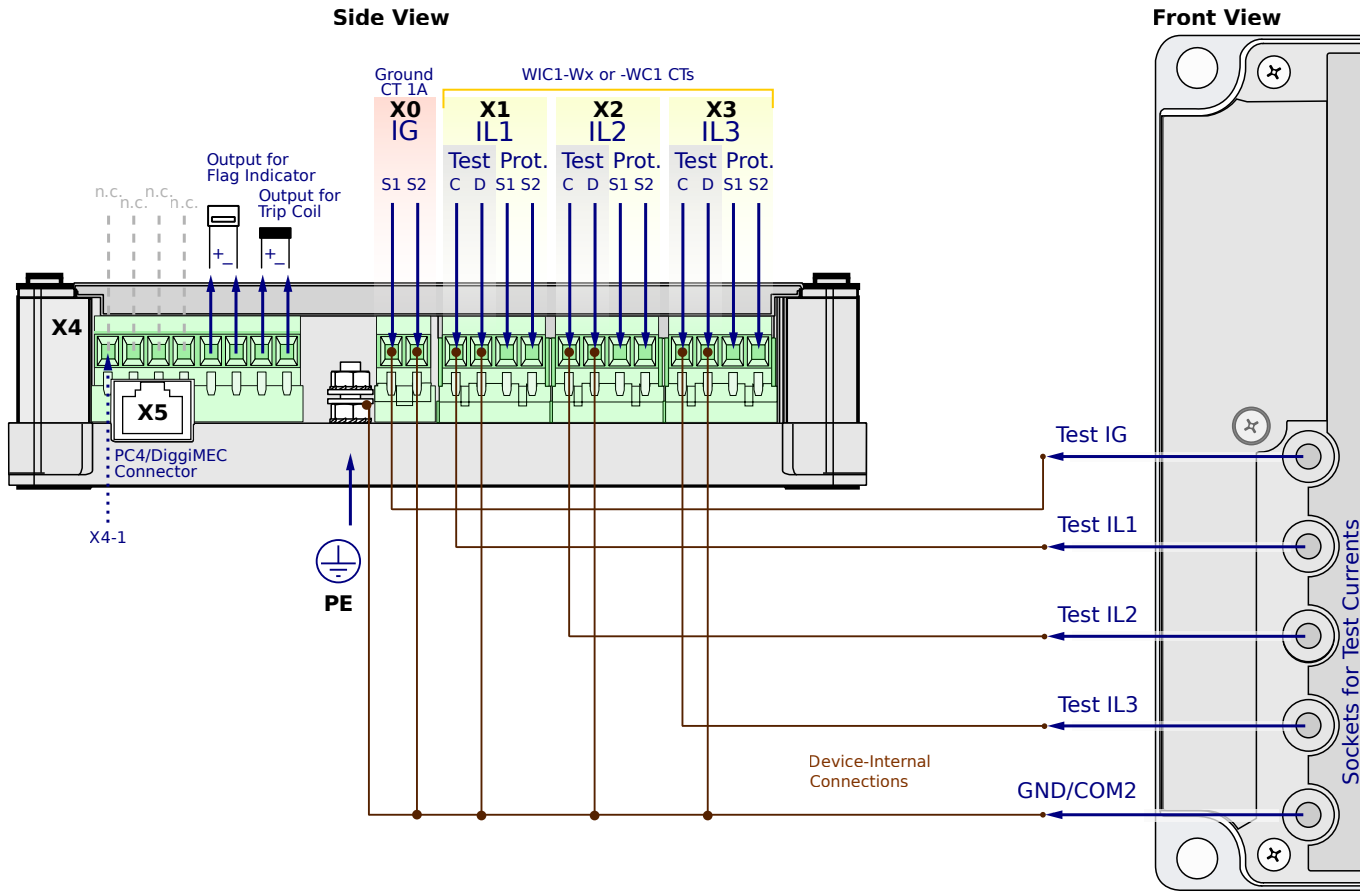


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2PA0

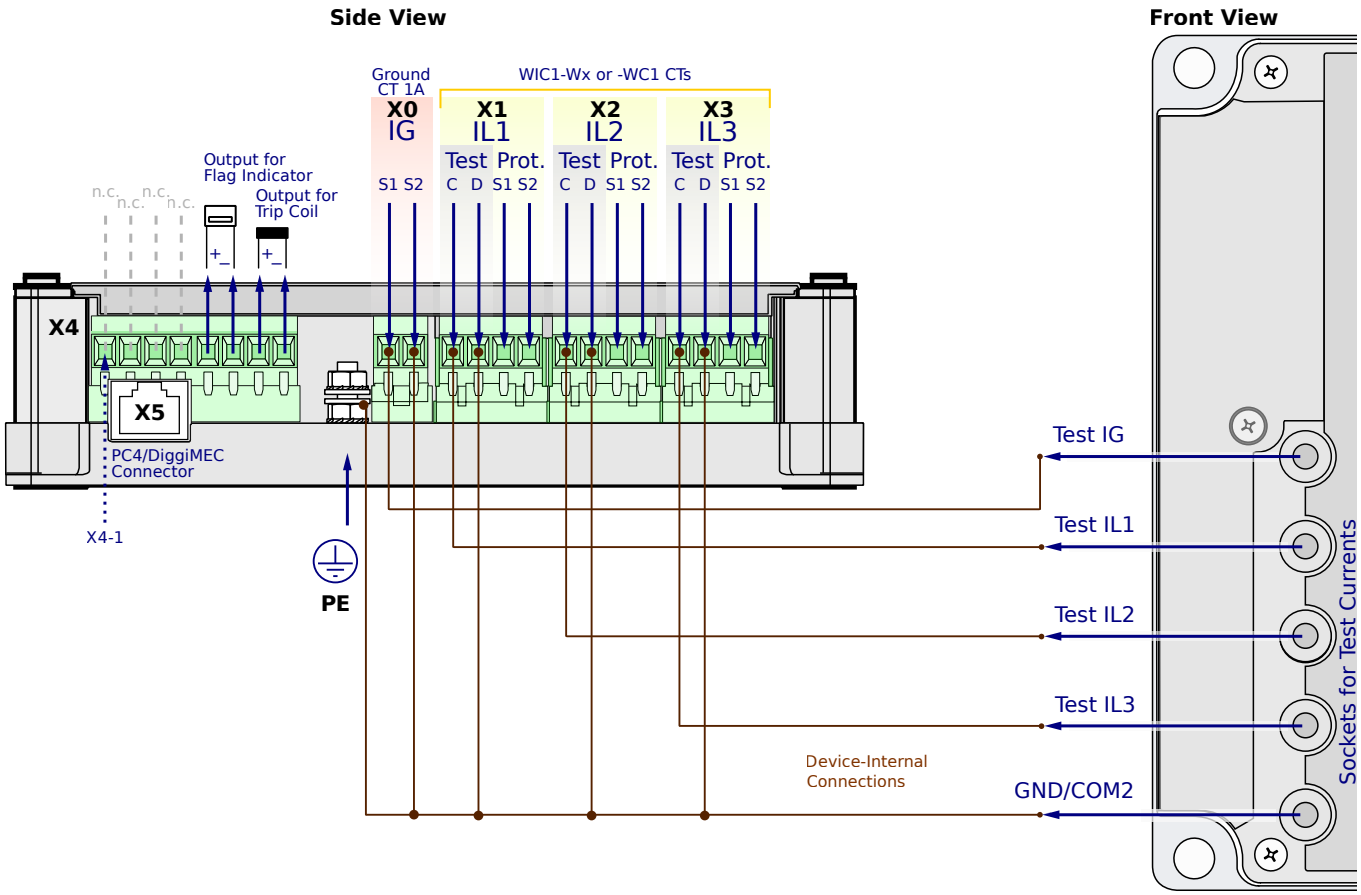


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FN2PAH

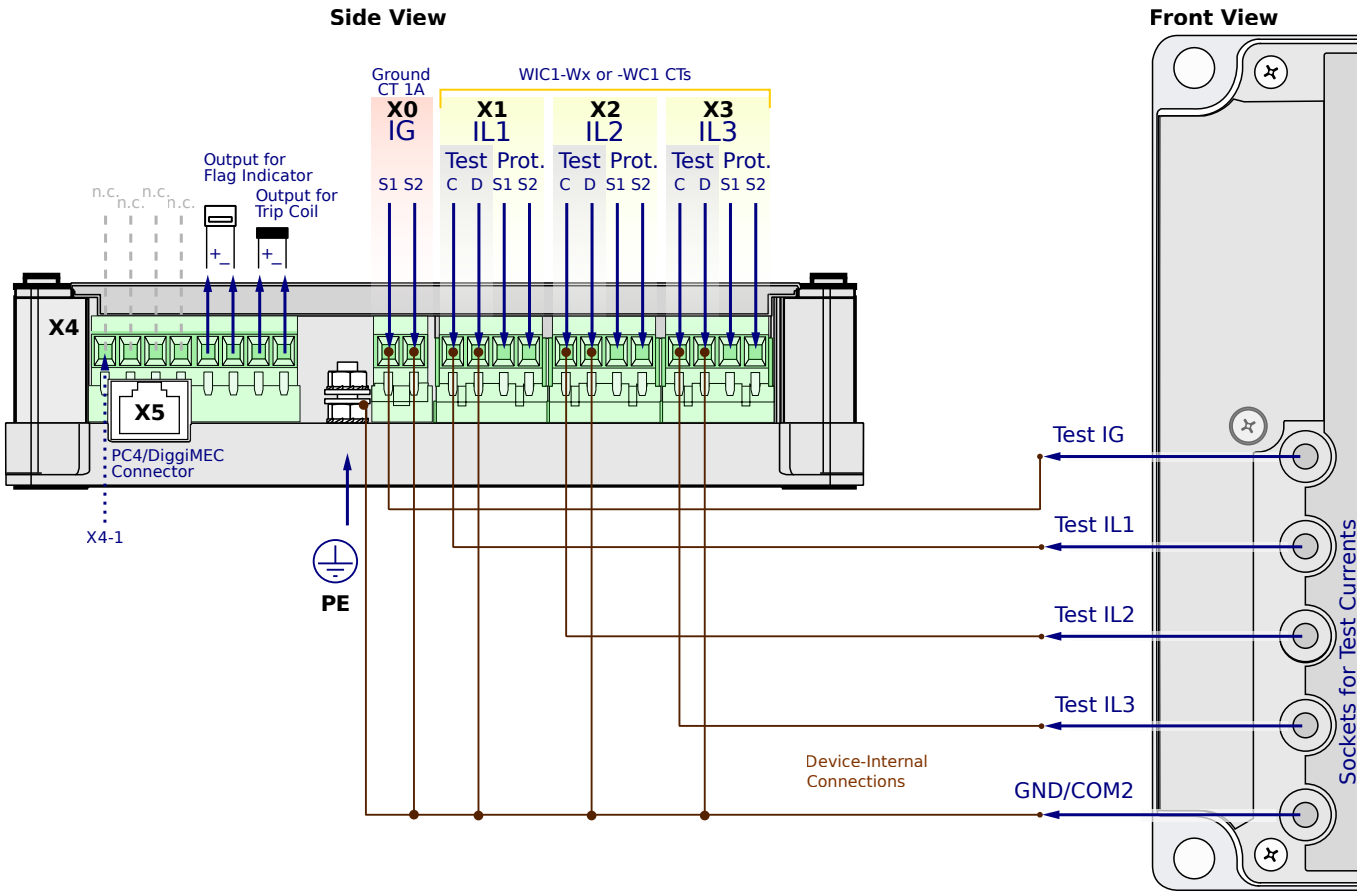


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1SA0

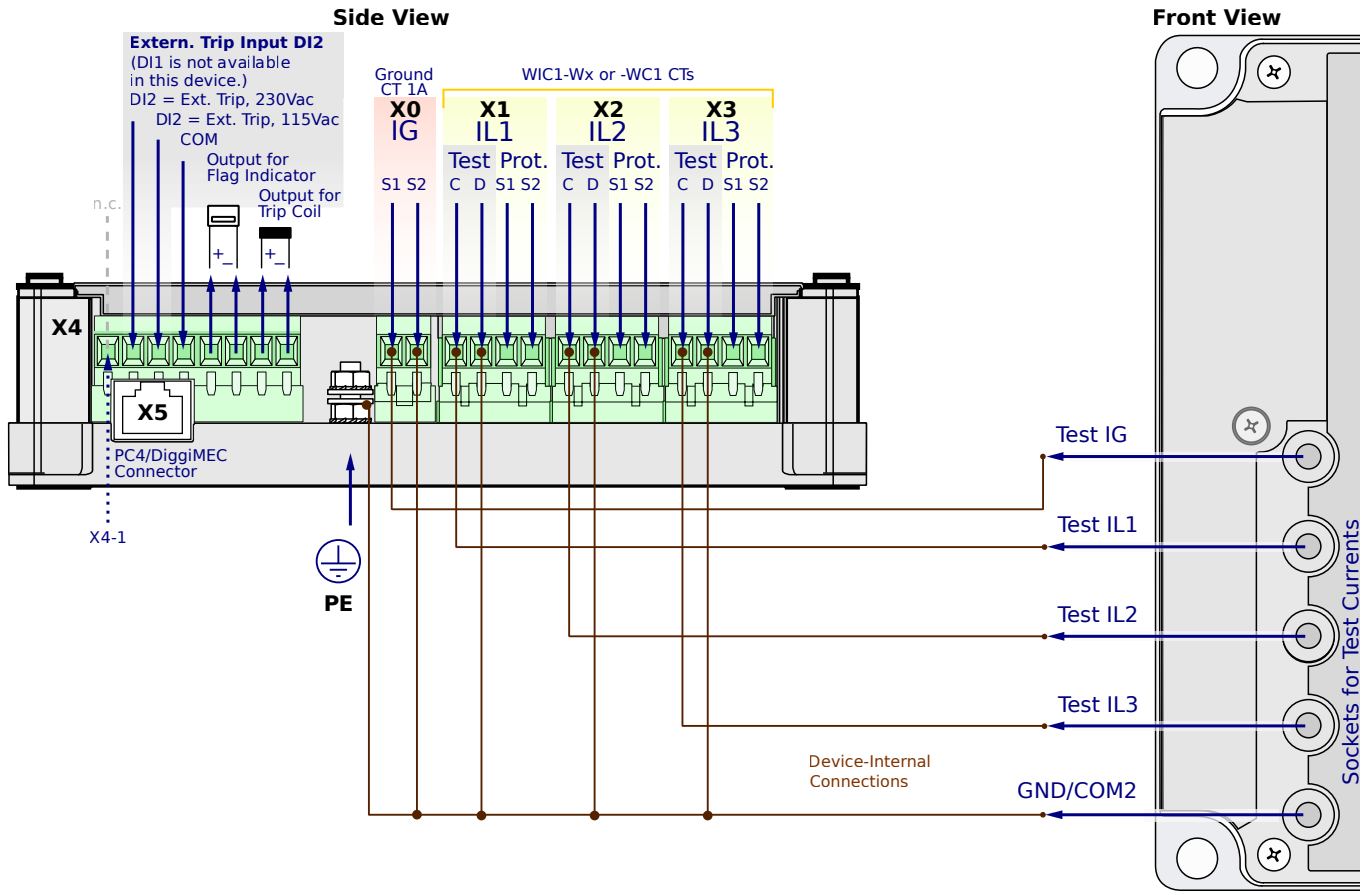


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1SAH

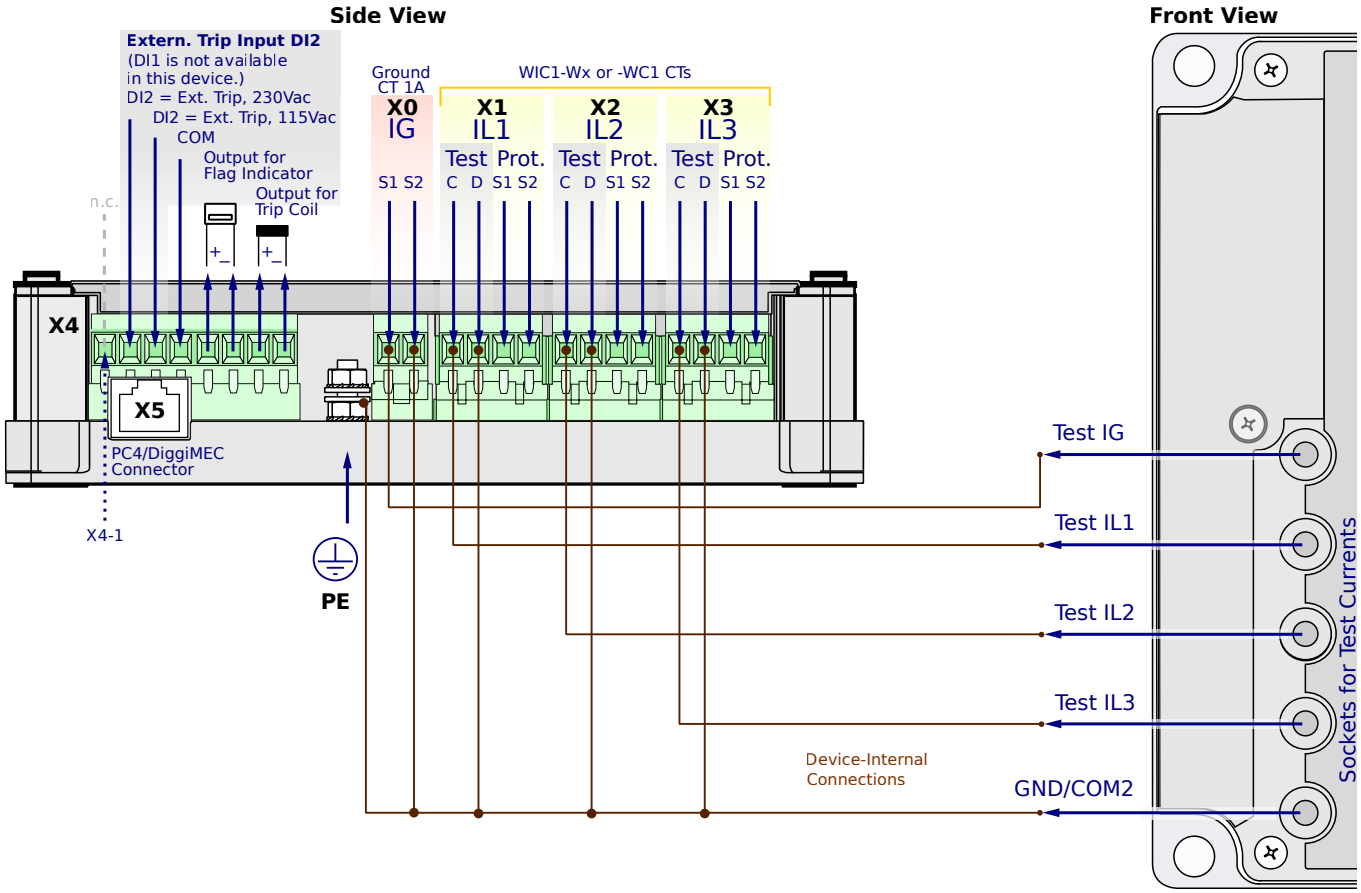


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1AA0

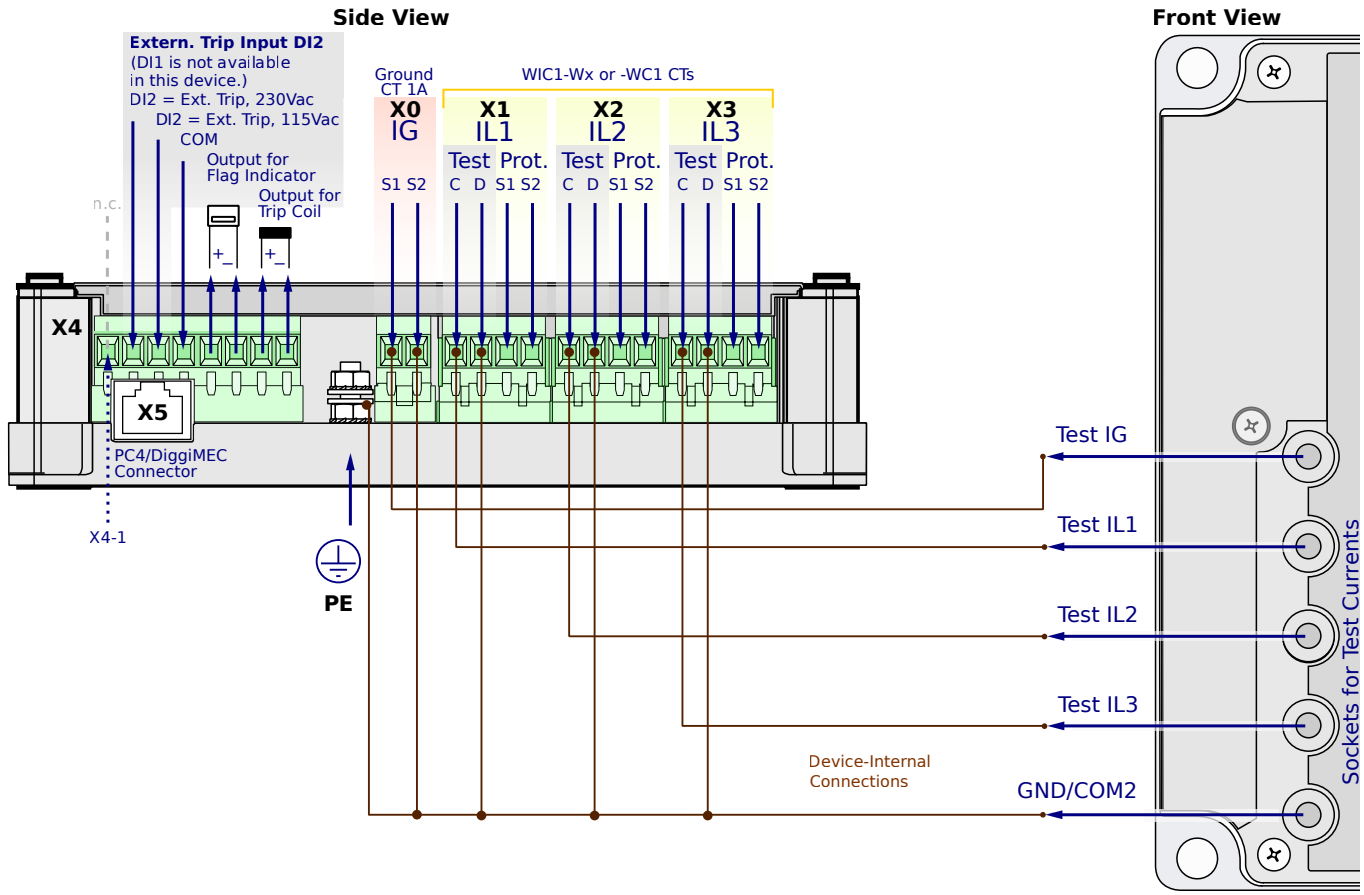


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1AAH

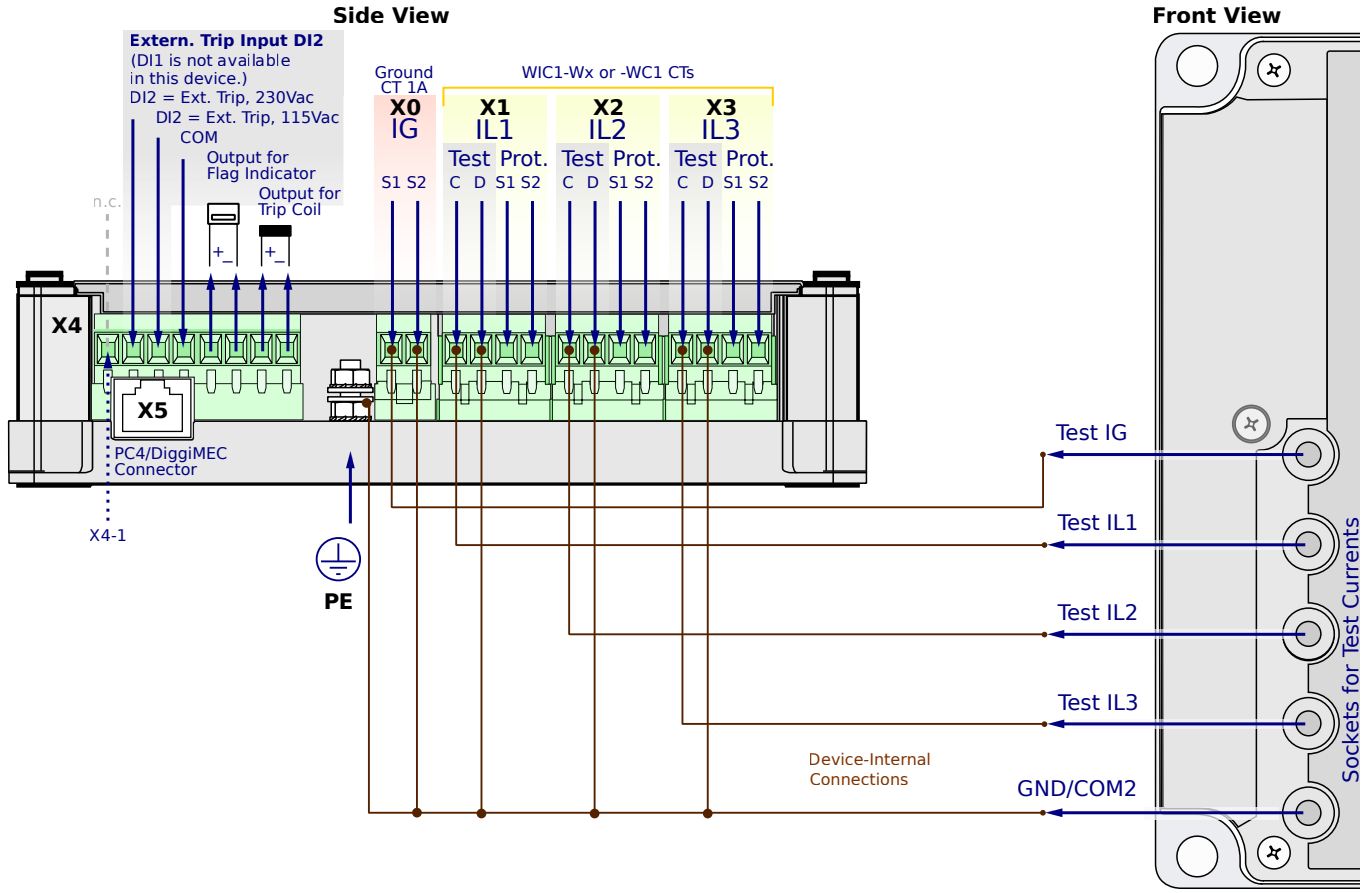


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1PA0

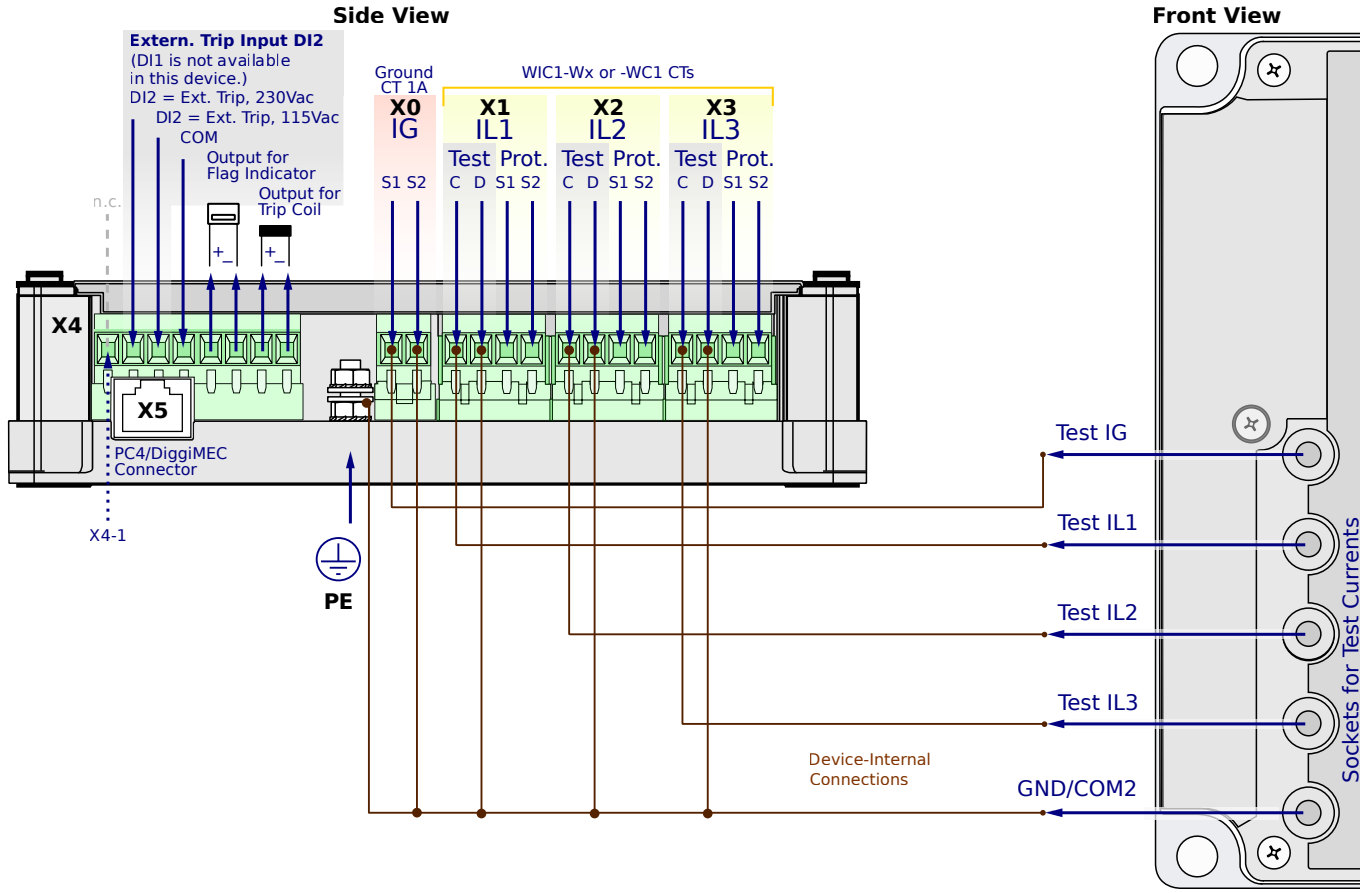


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF1PAH

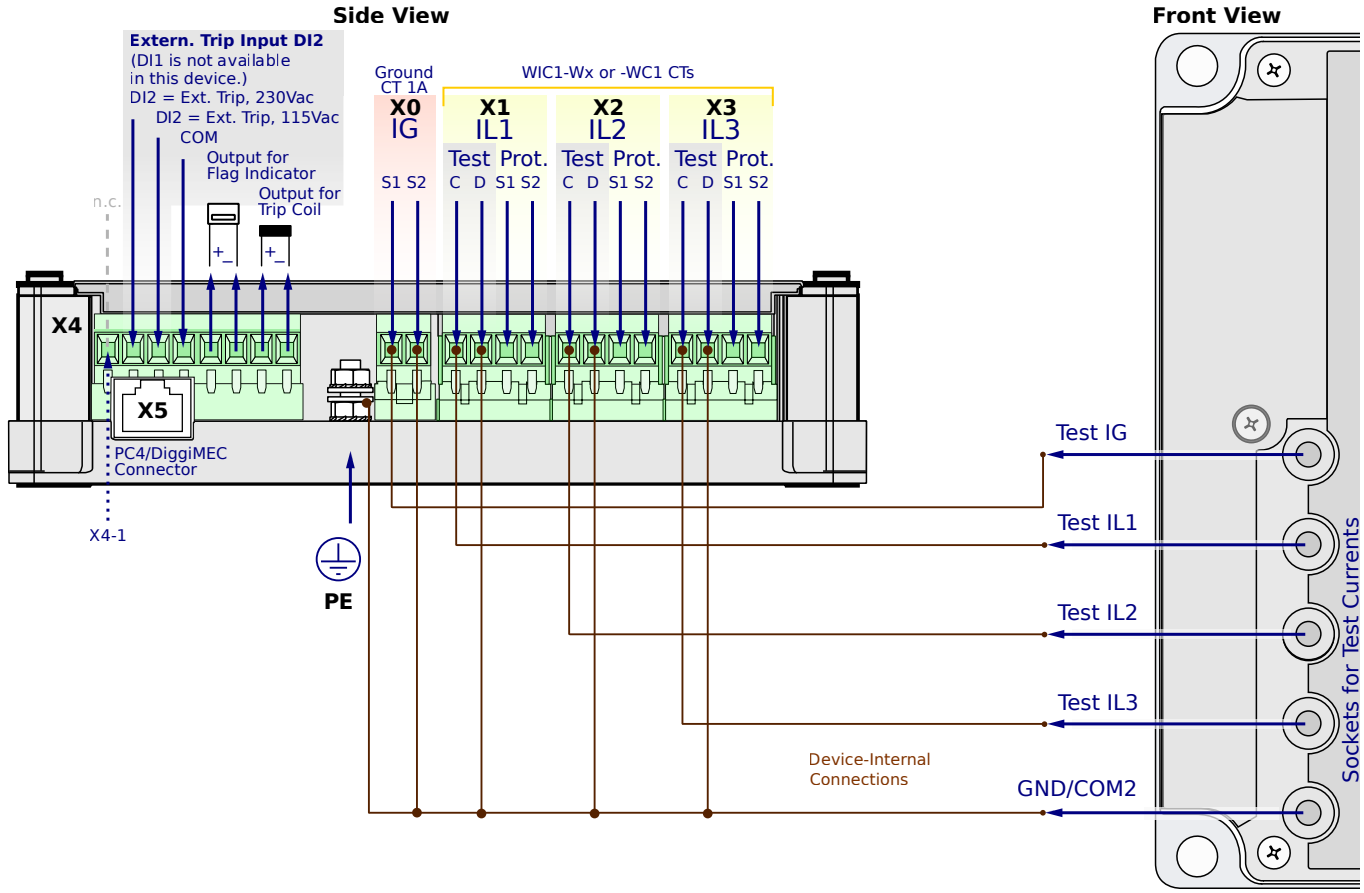


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2SA0

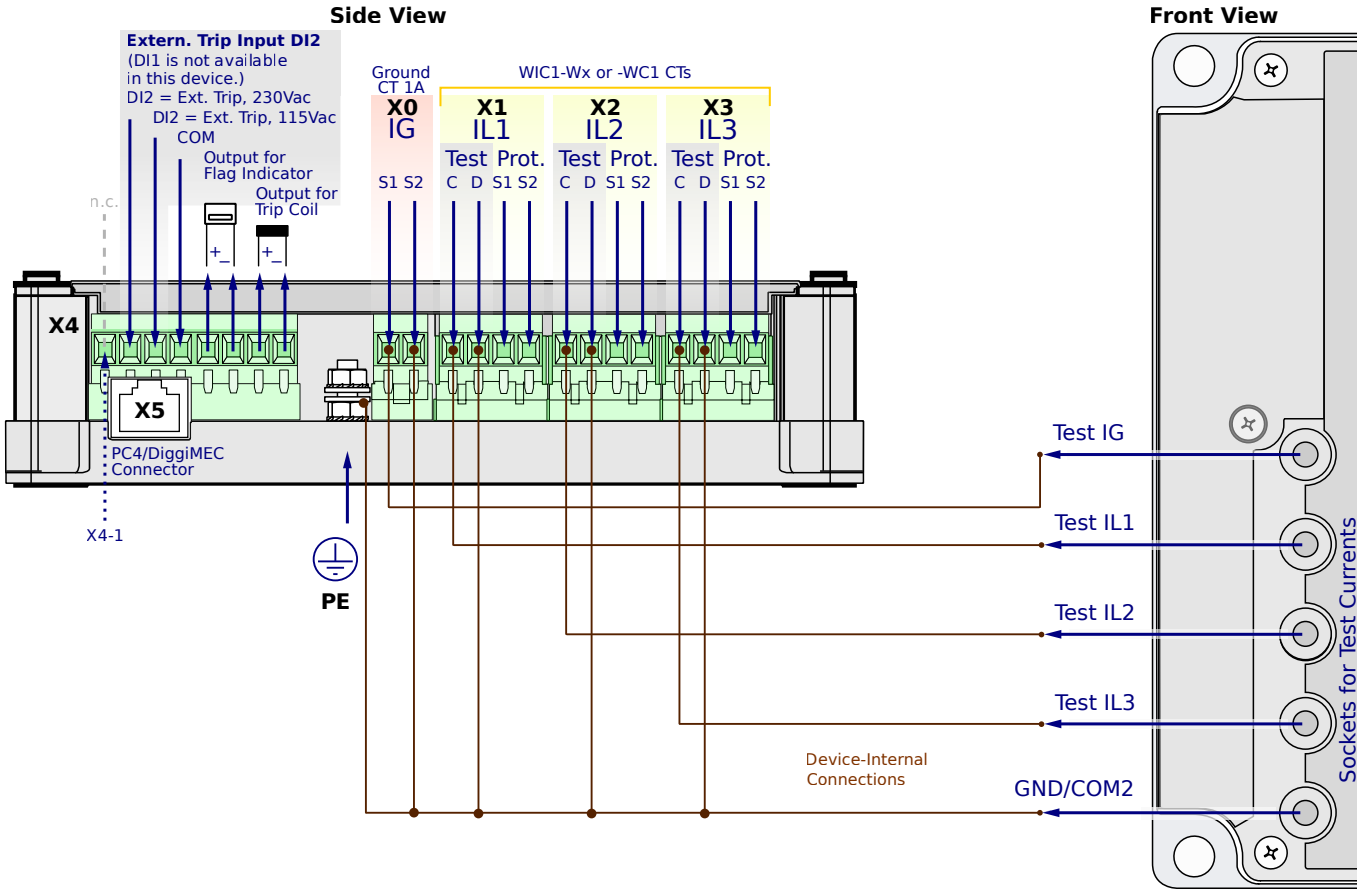


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2SAH

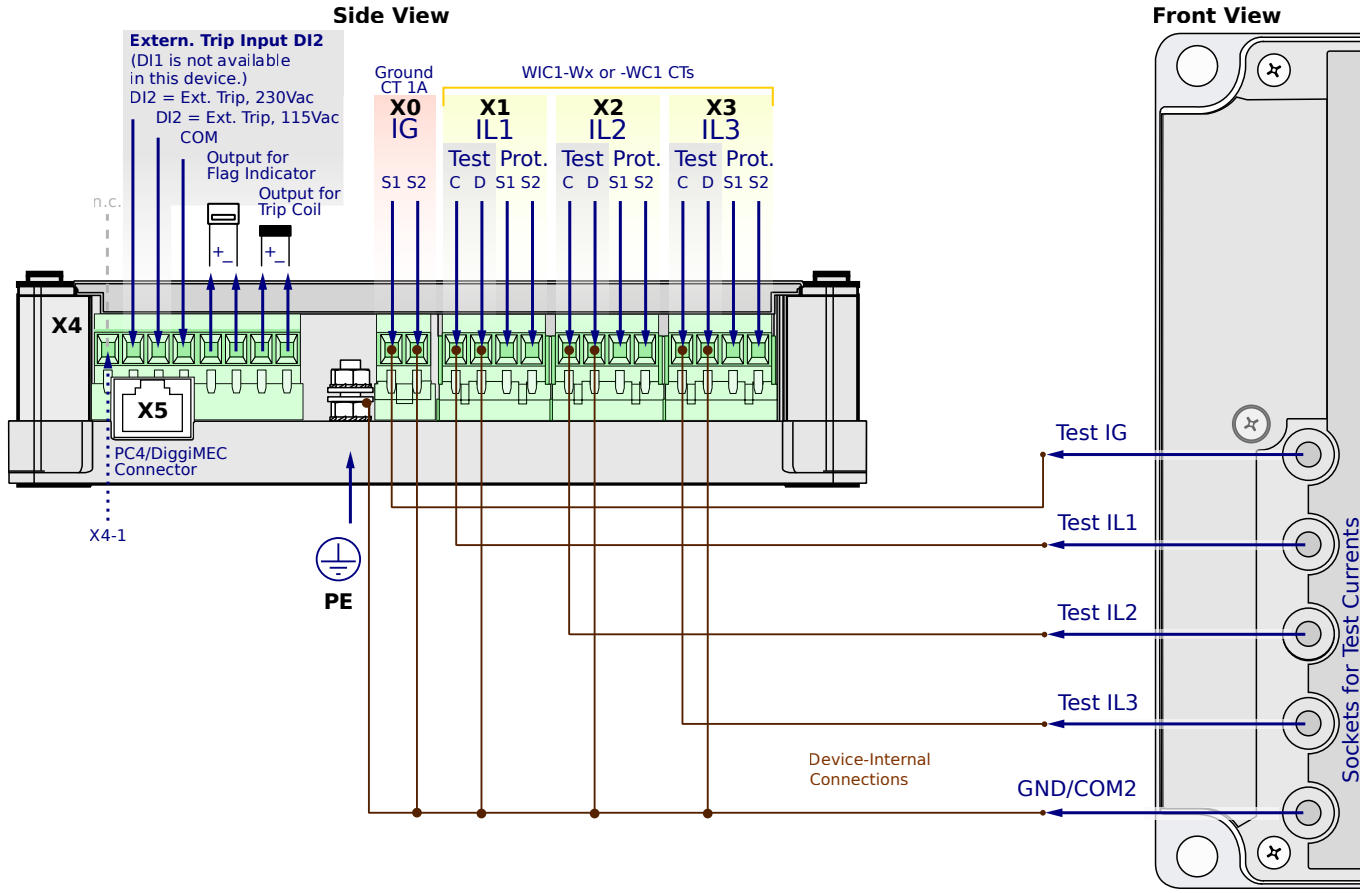


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2AA0

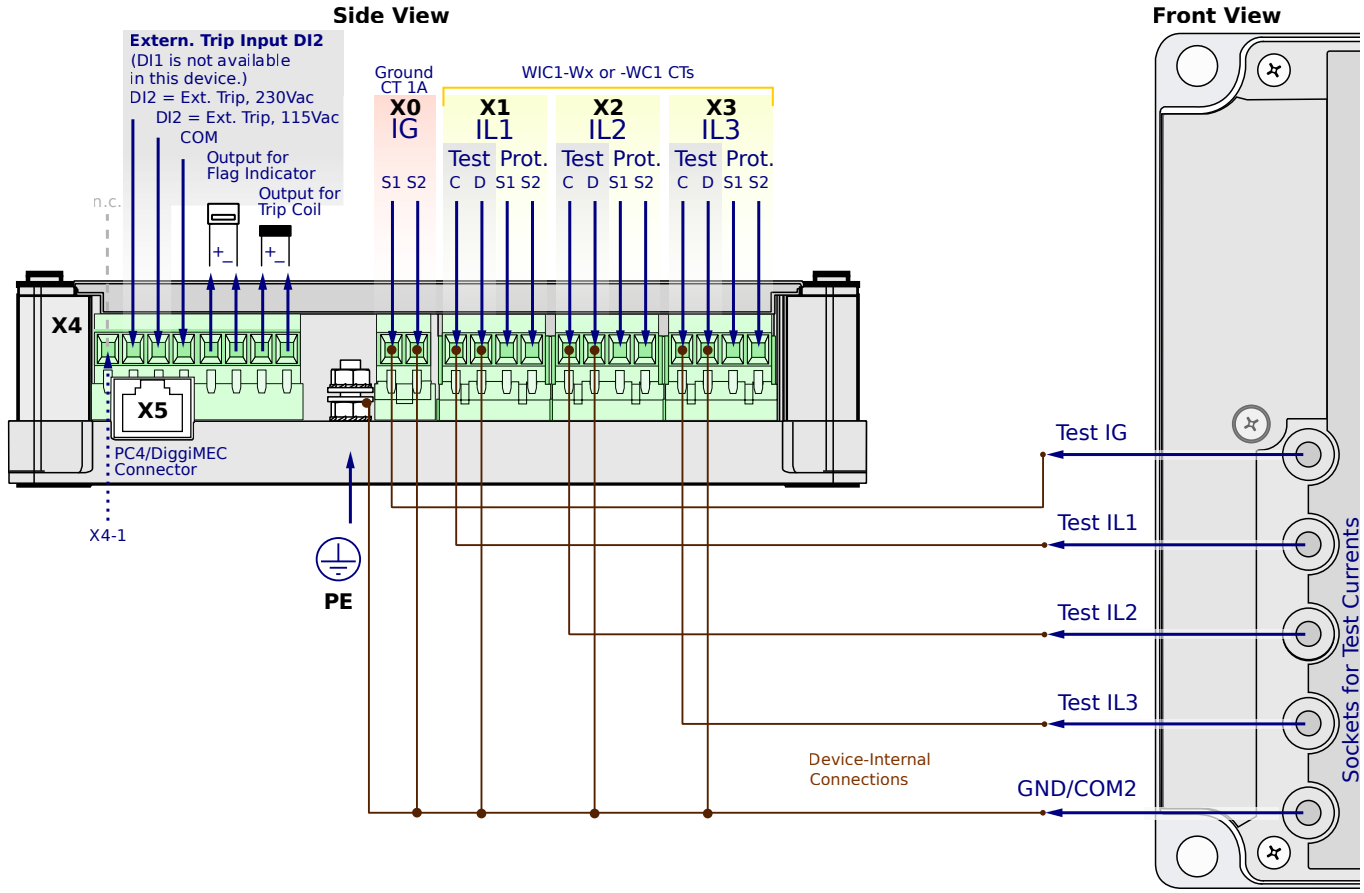


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2AAH

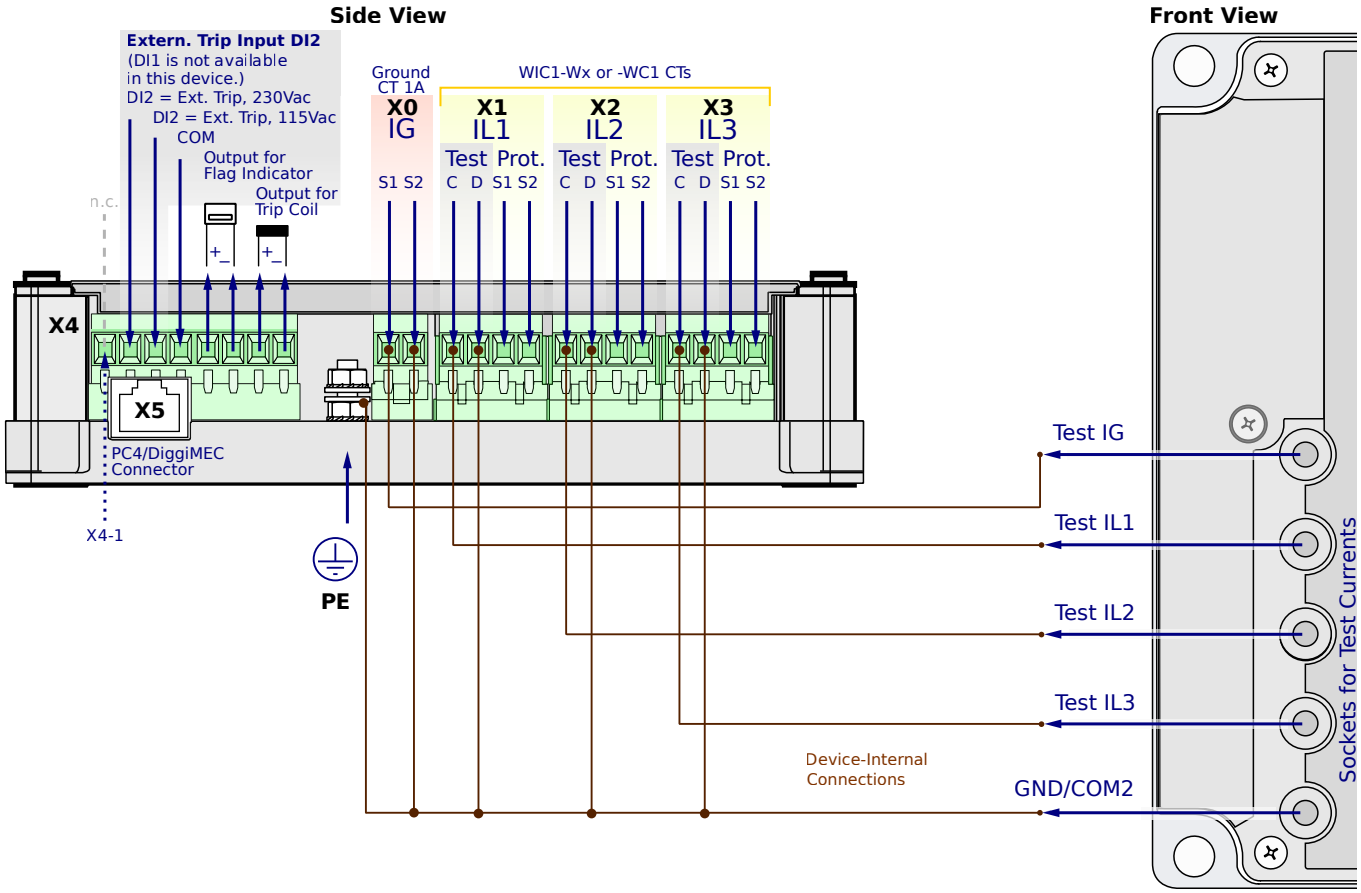


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2PA0

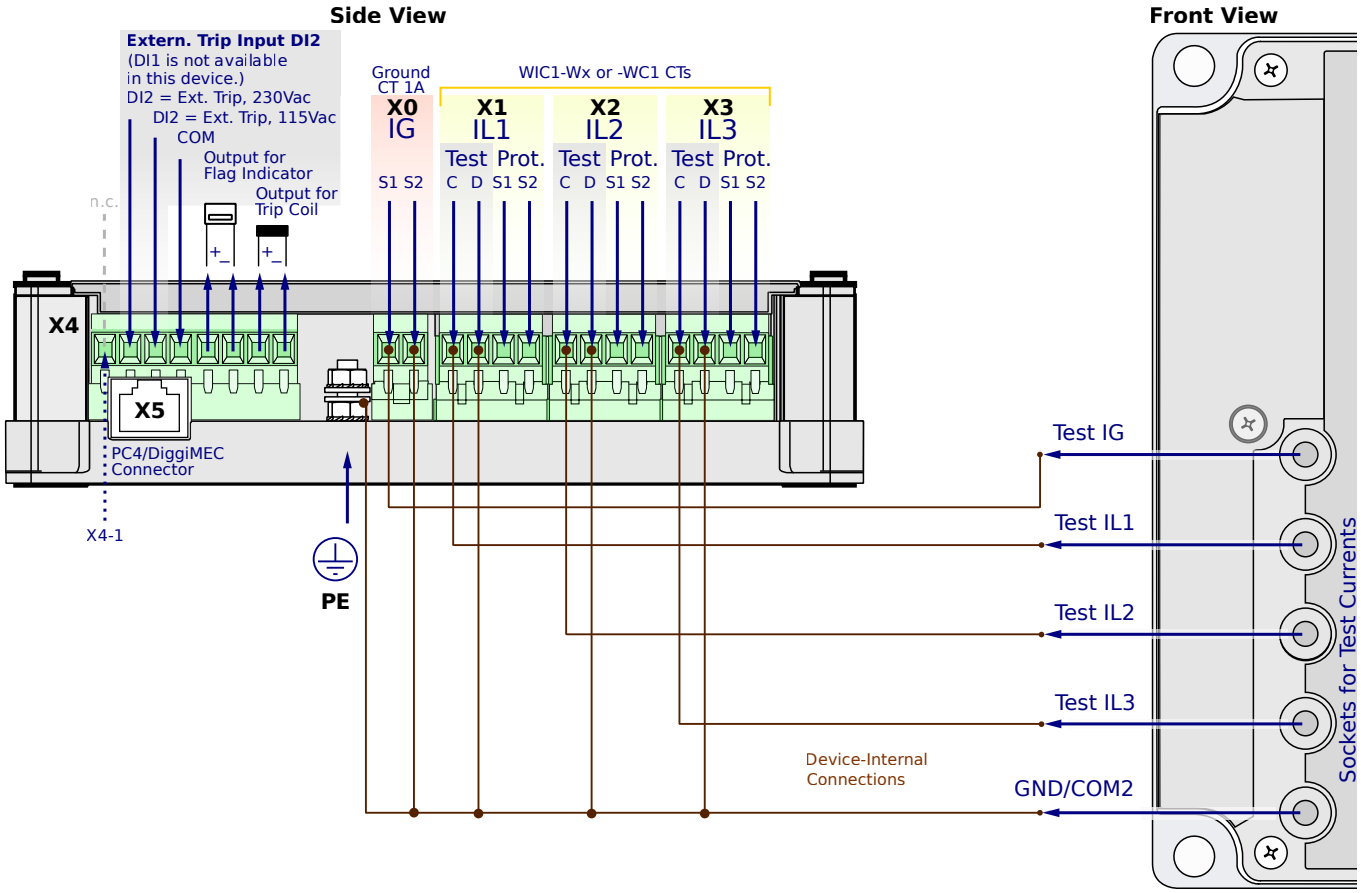


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FF2PAH

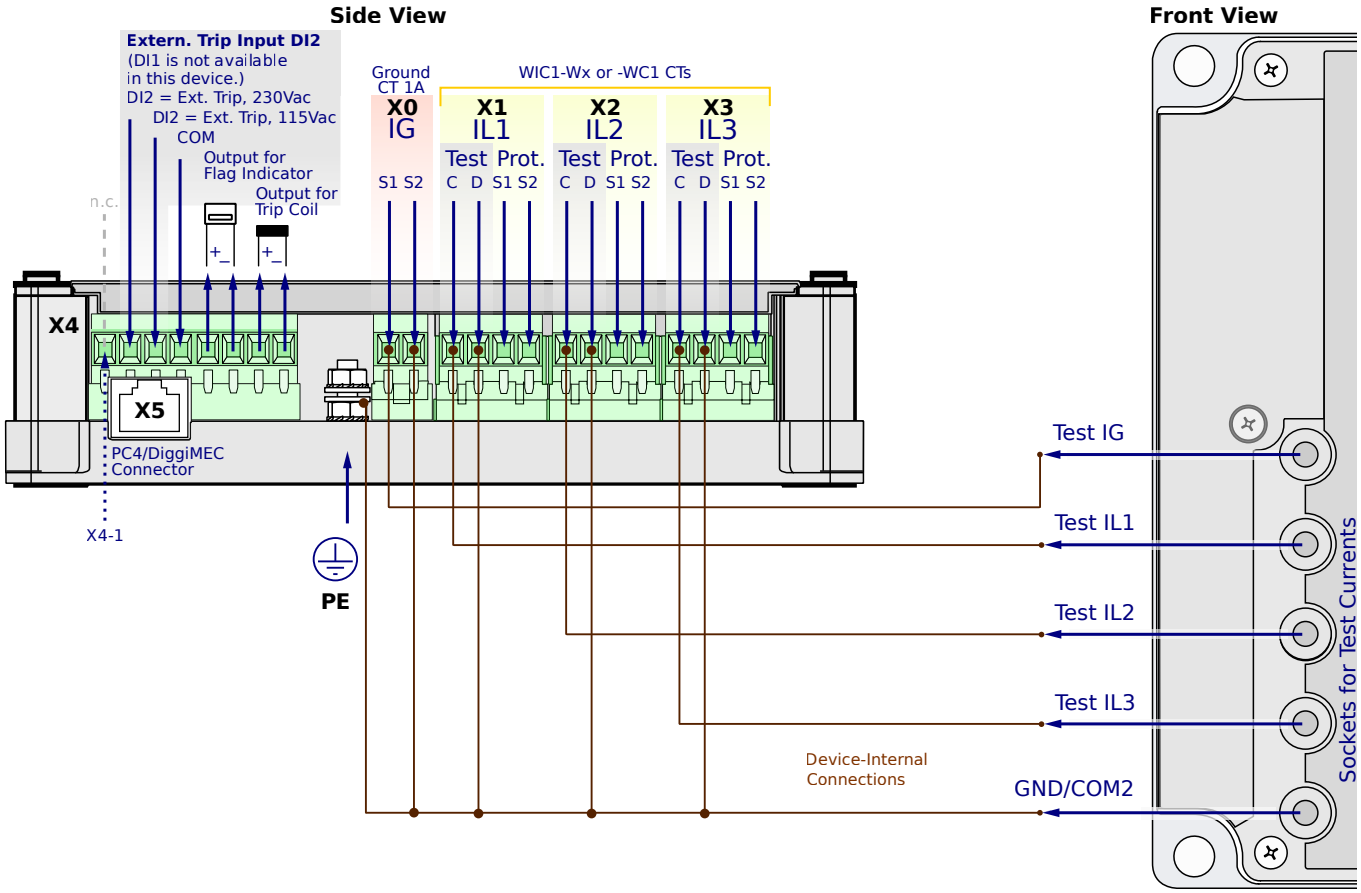


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1SA0

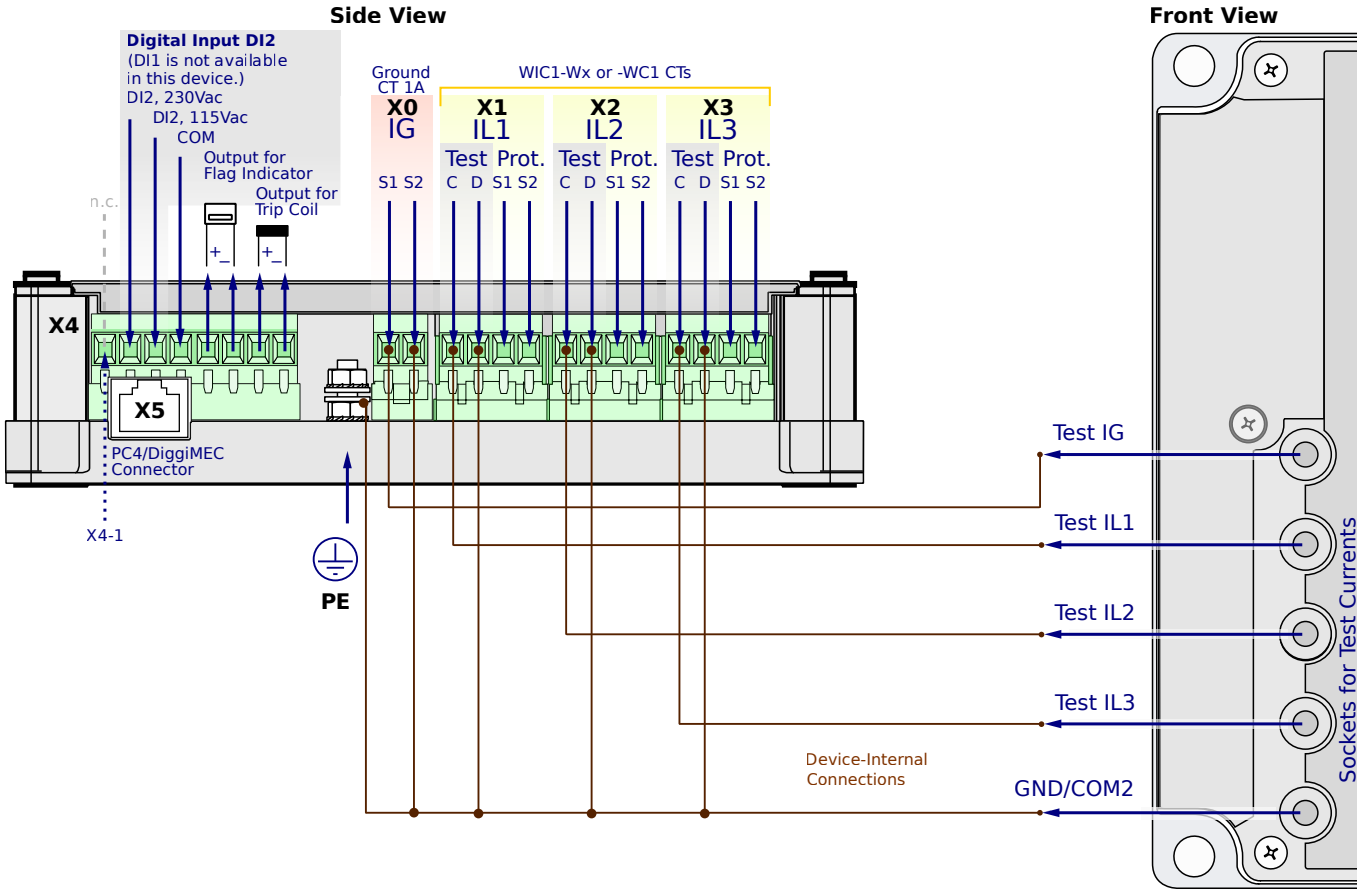


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1SAH

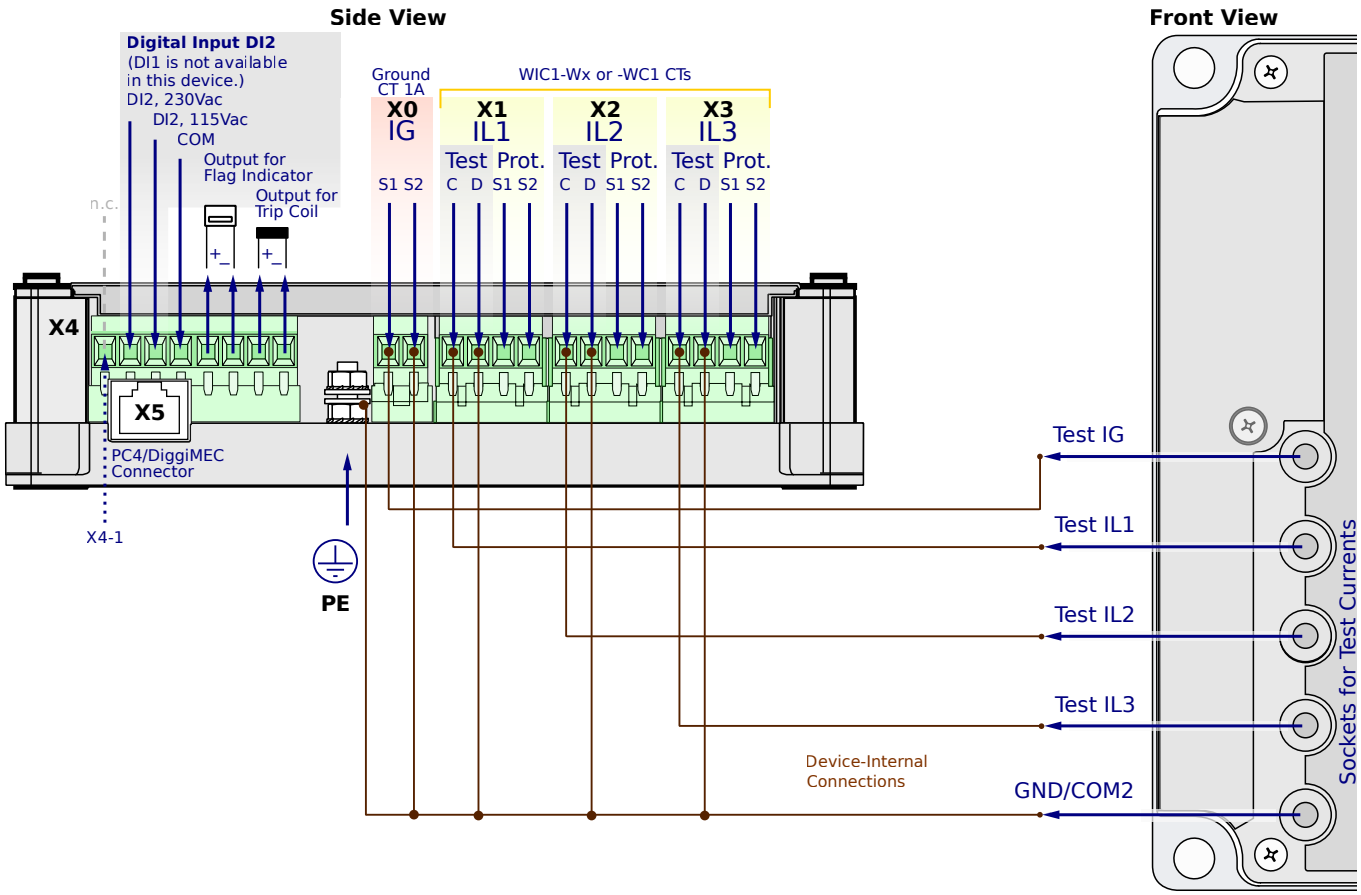


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1AA0

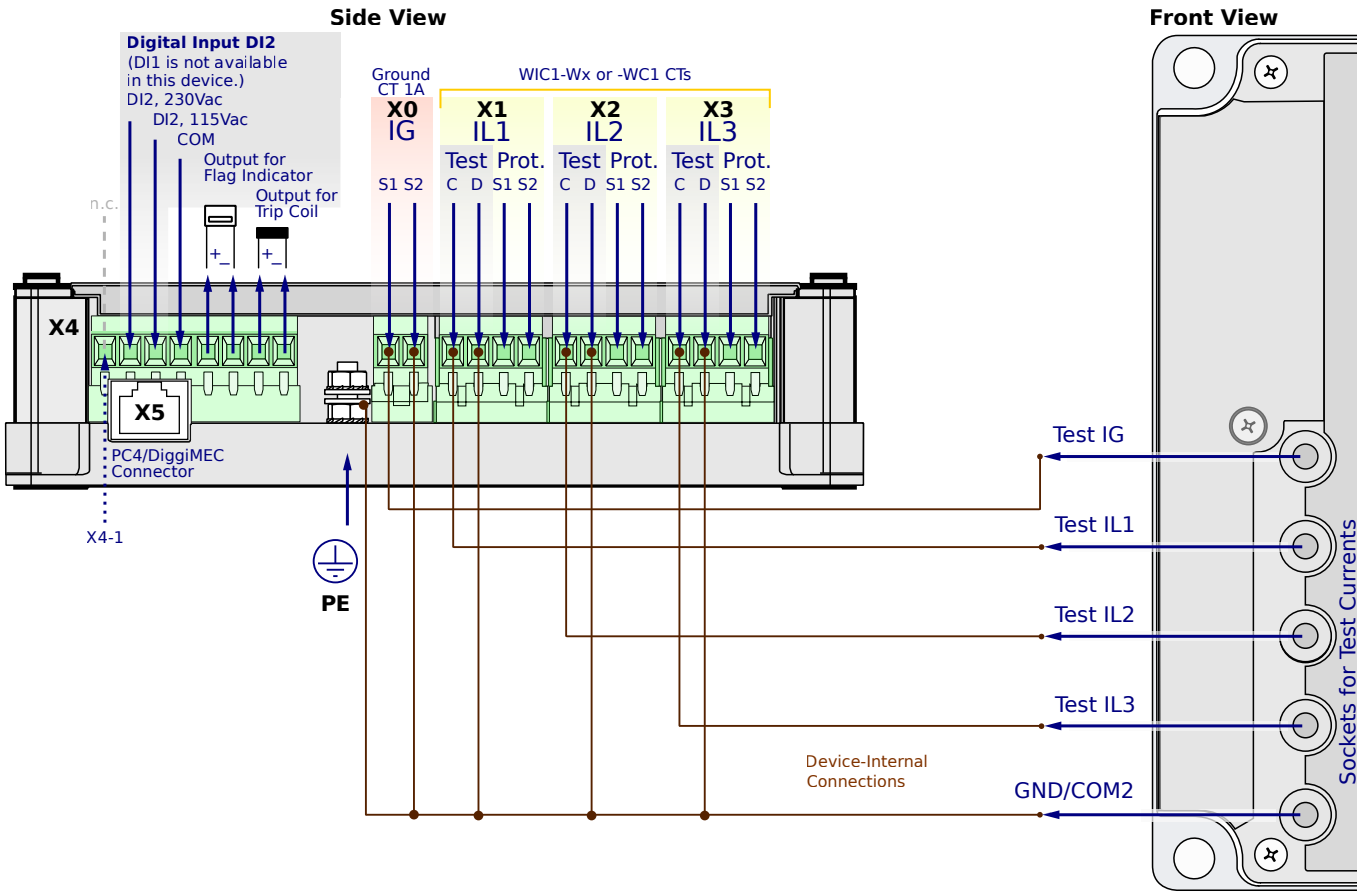


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1AAH

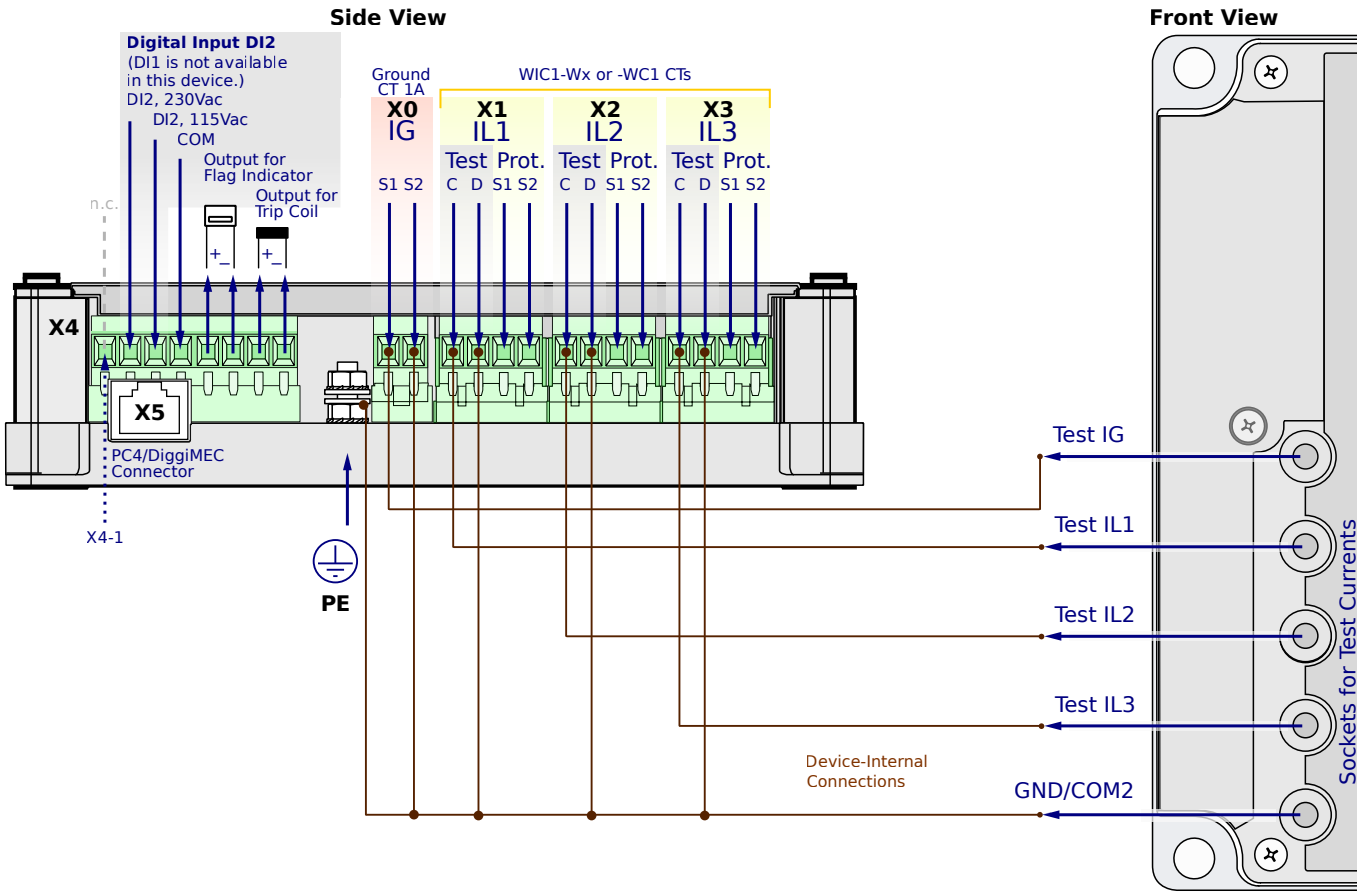


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1PA0

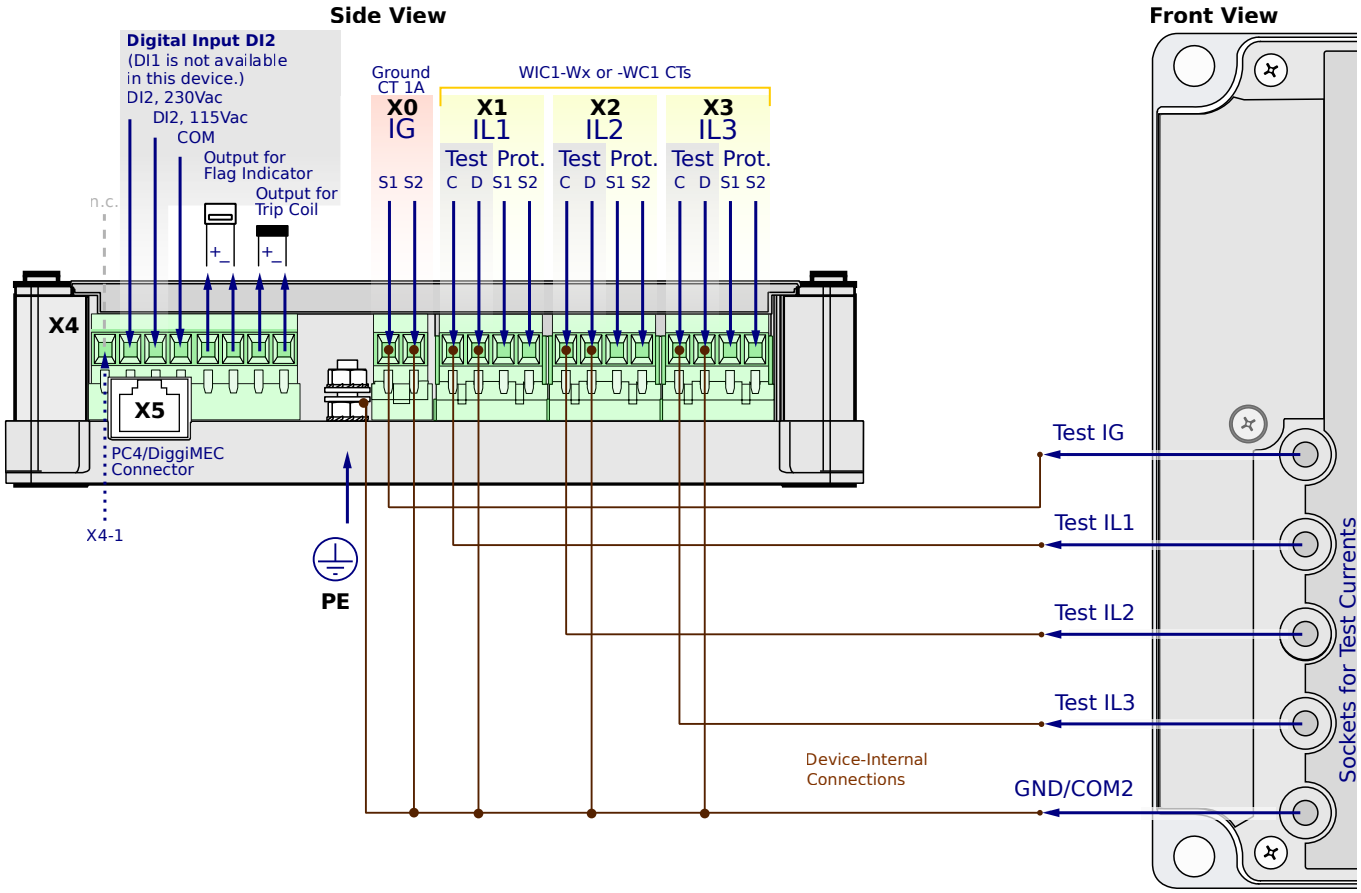


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC1PAH

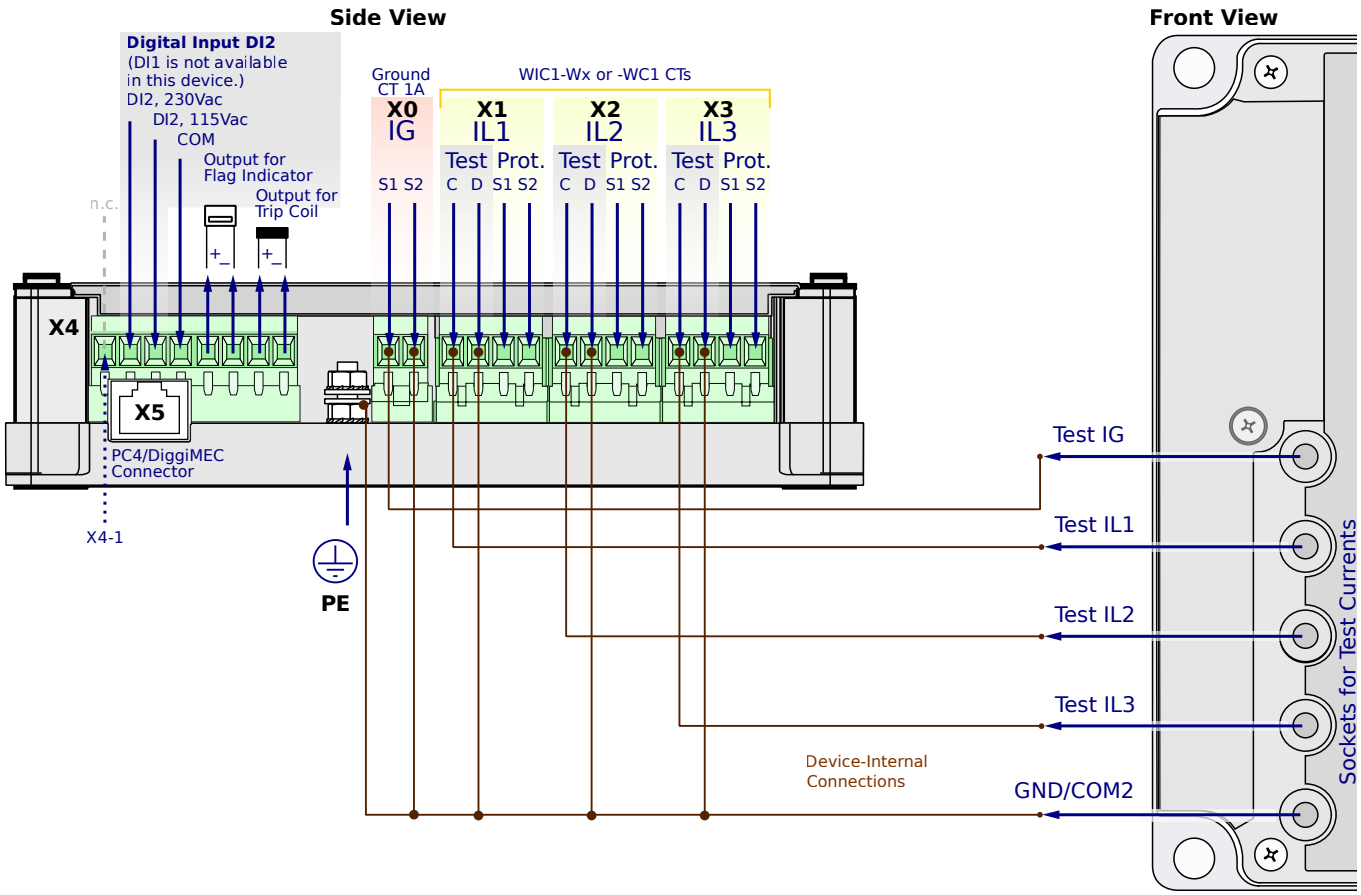


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2SA0

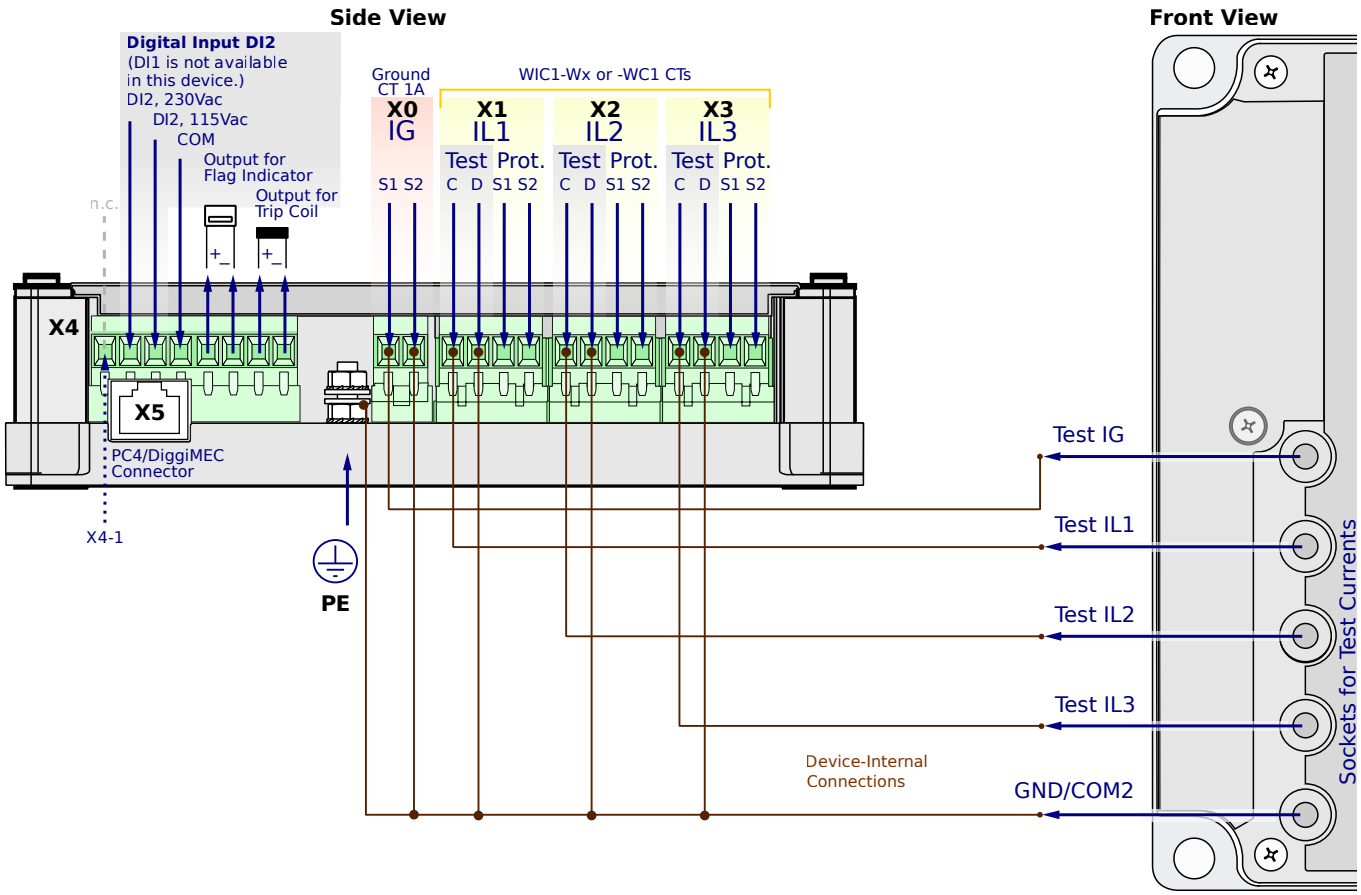


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2SAH

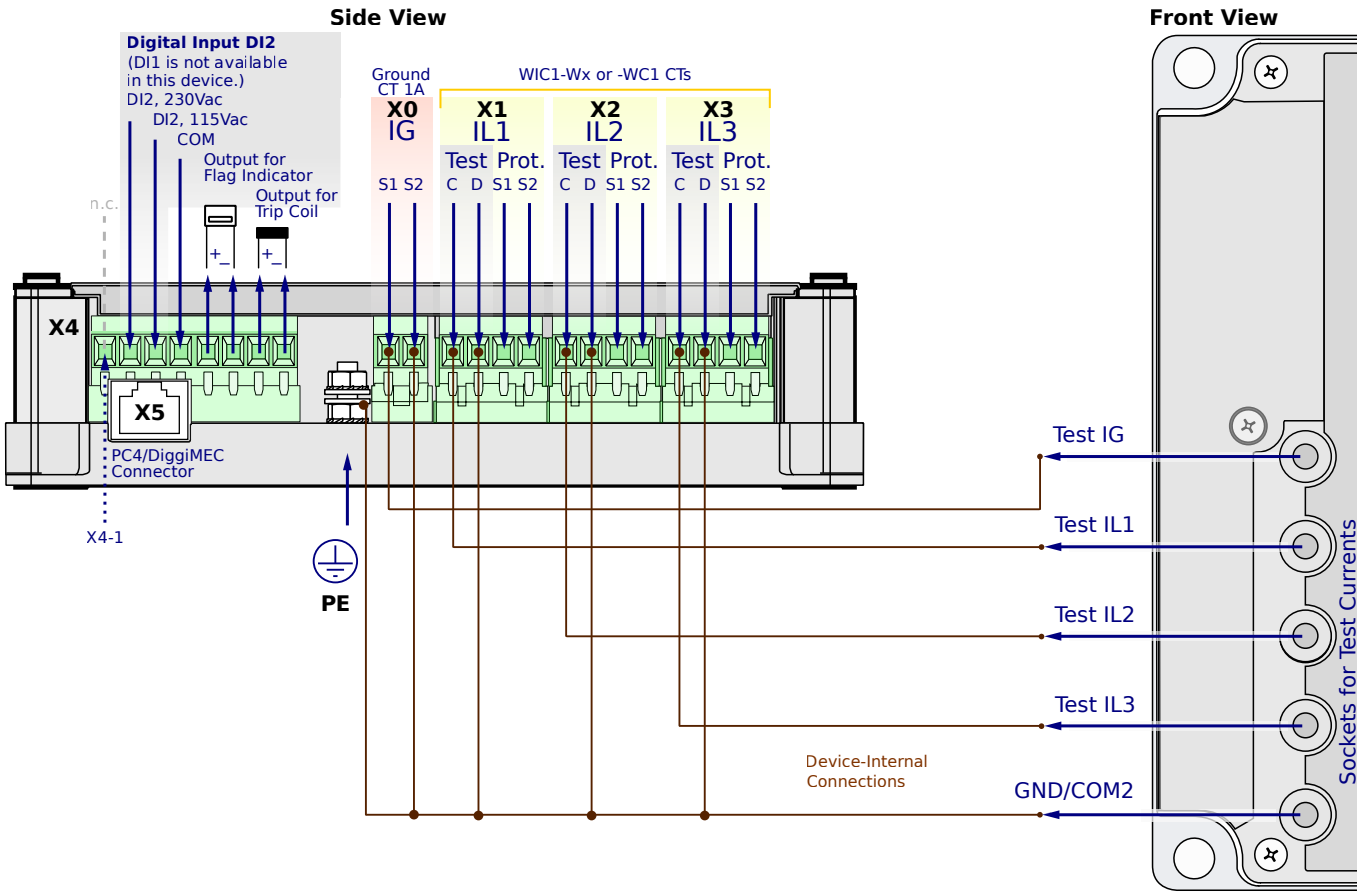


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2AA0

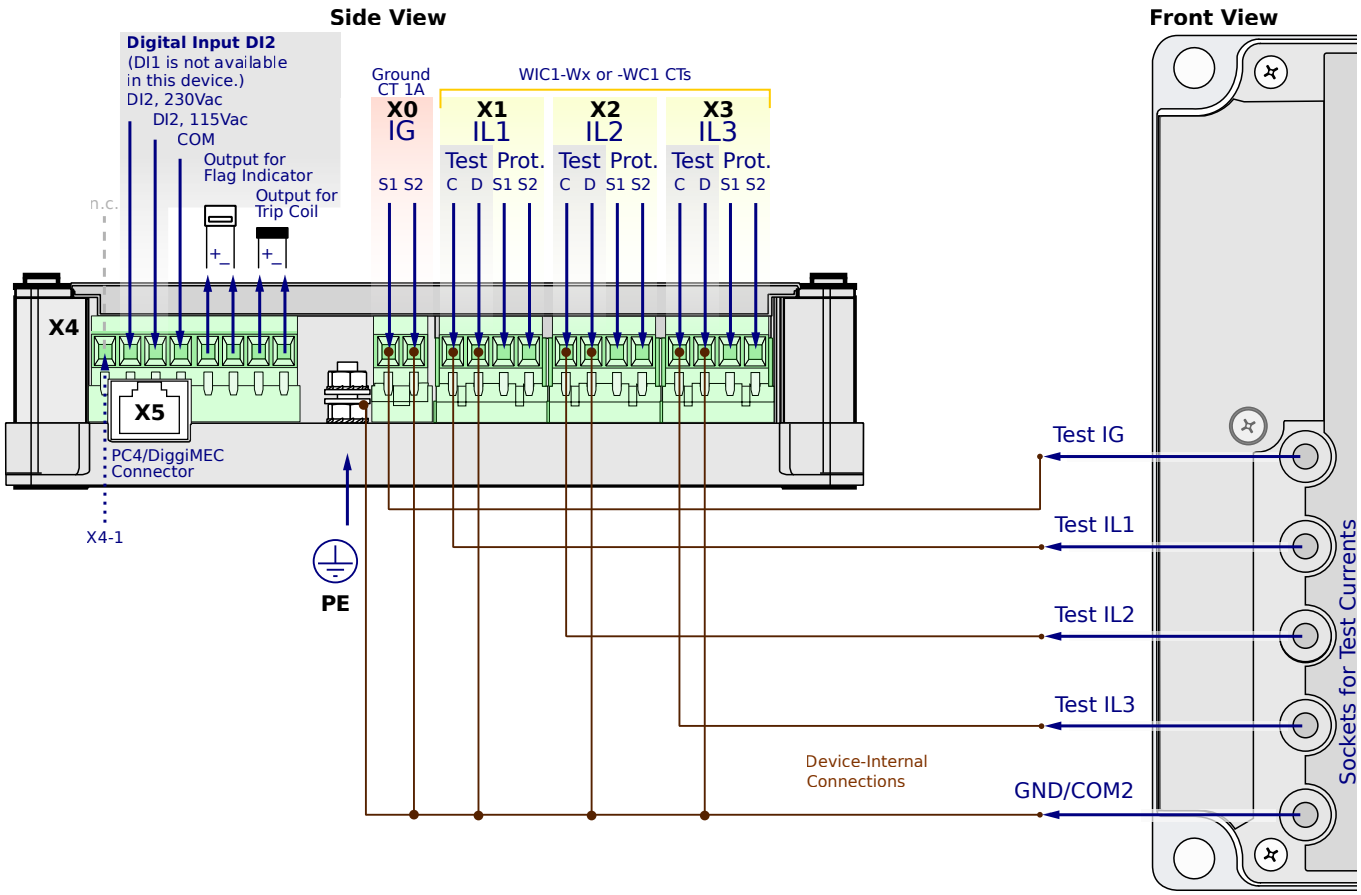


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2AAH

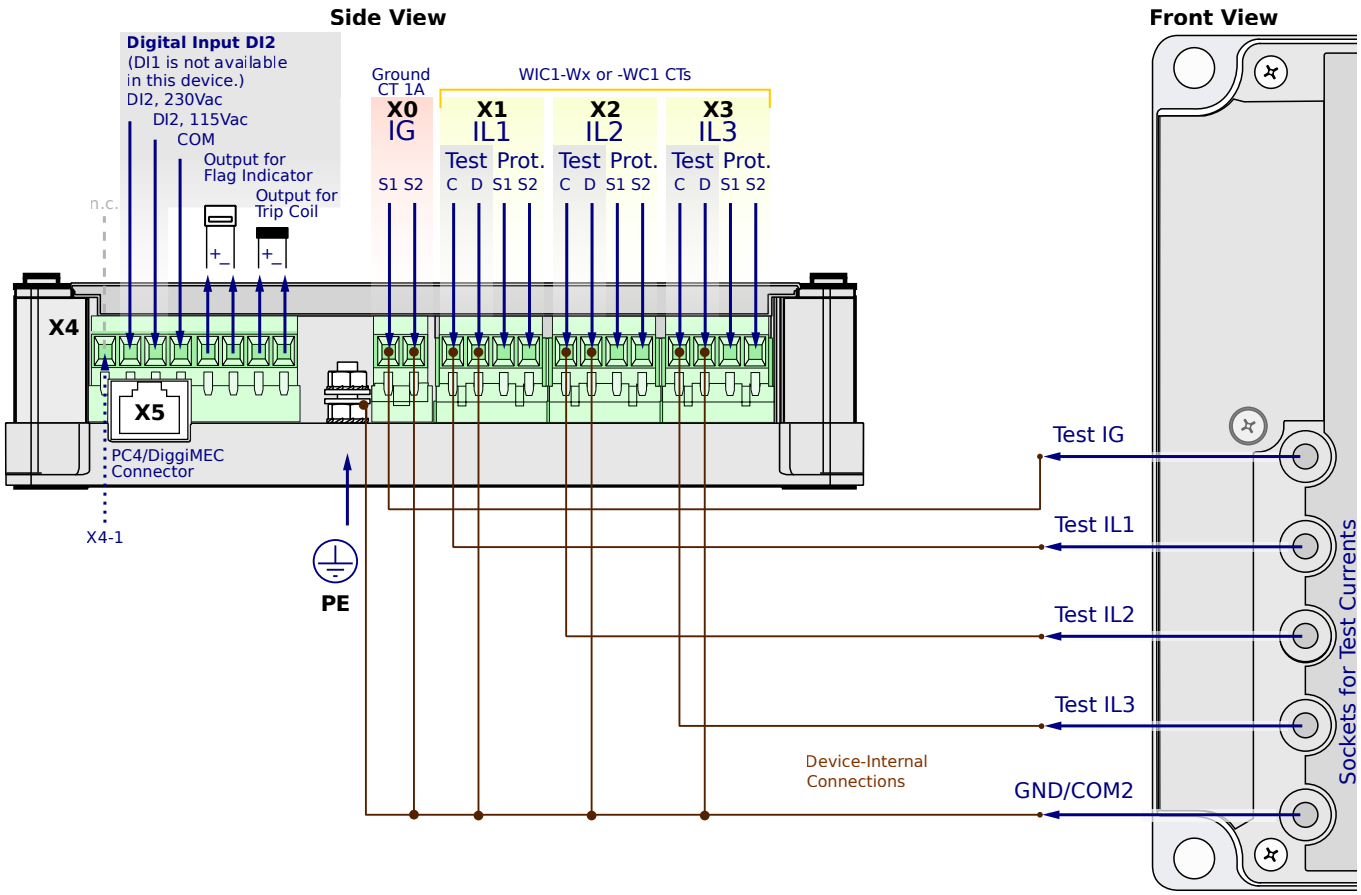


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2PA0

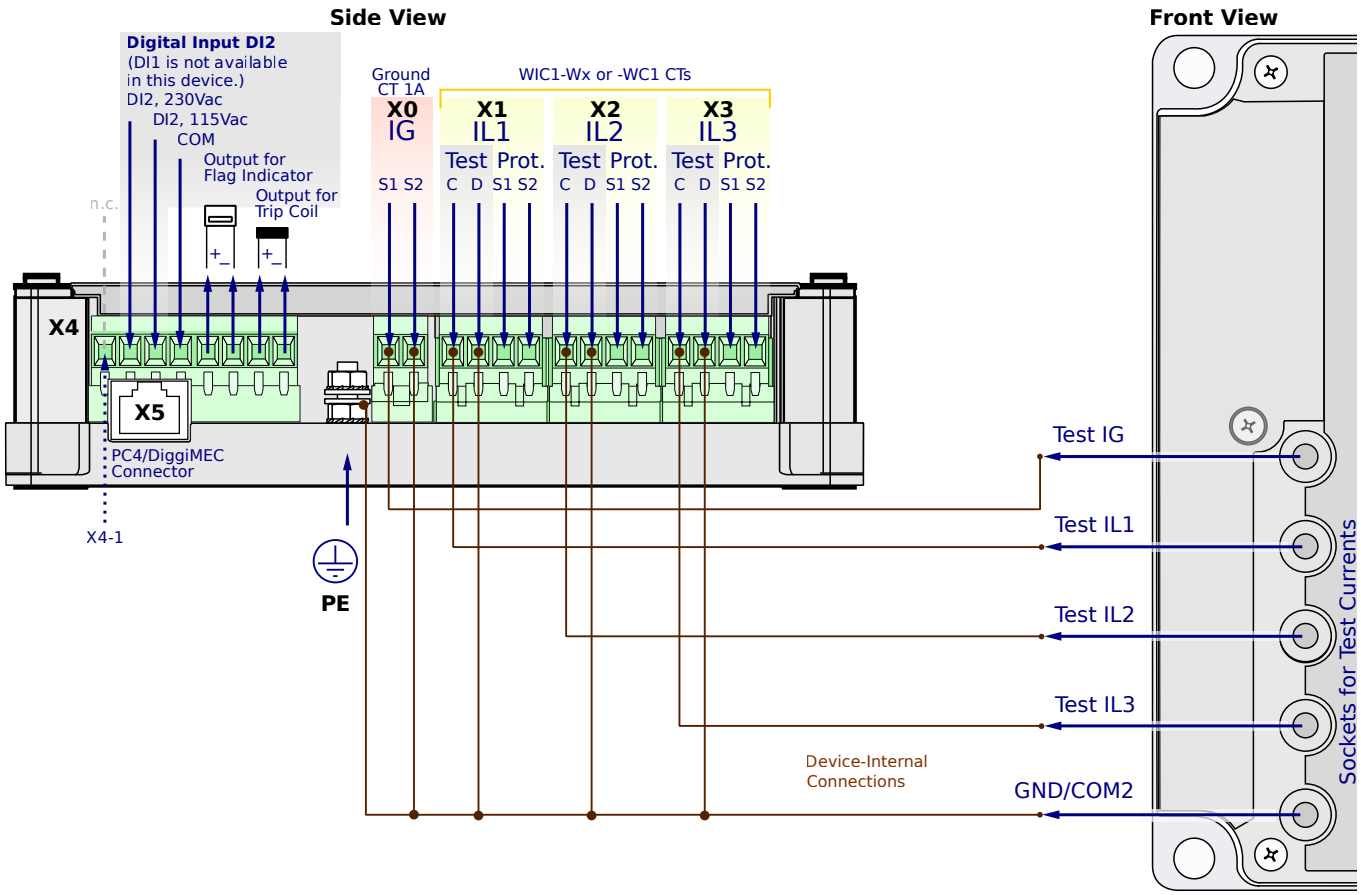


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5FC2PAH

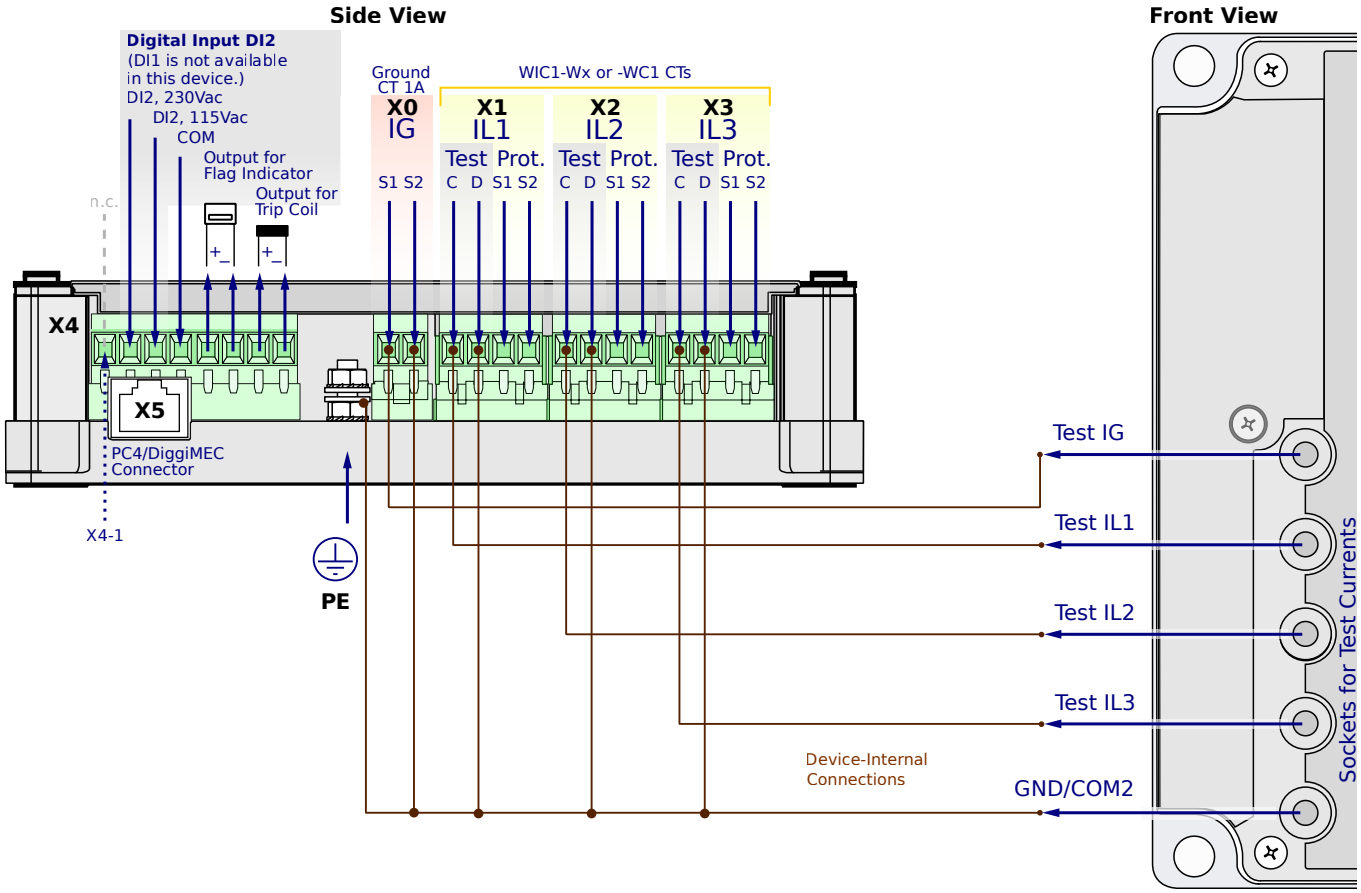


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1SA0

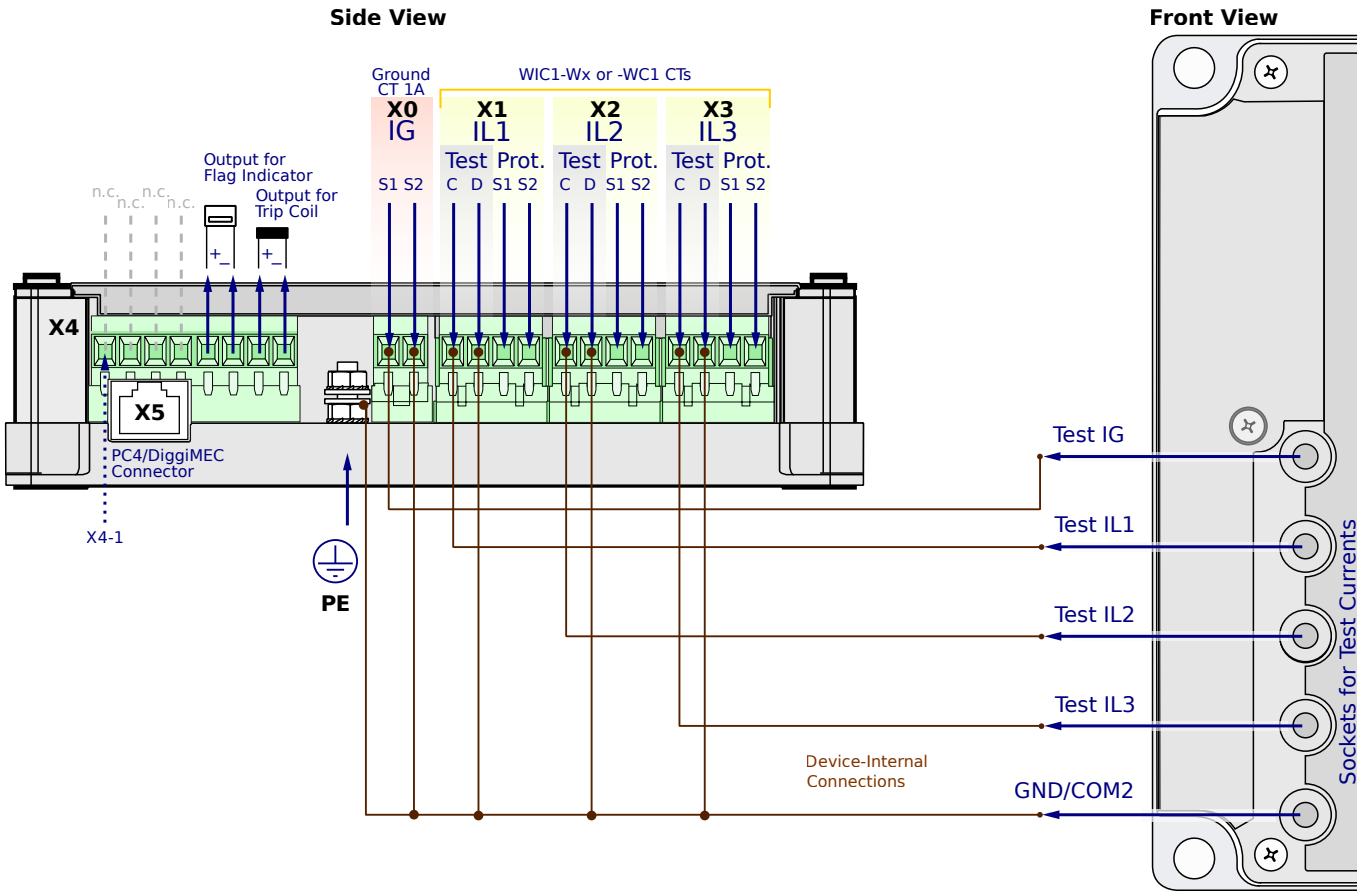


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1SAH

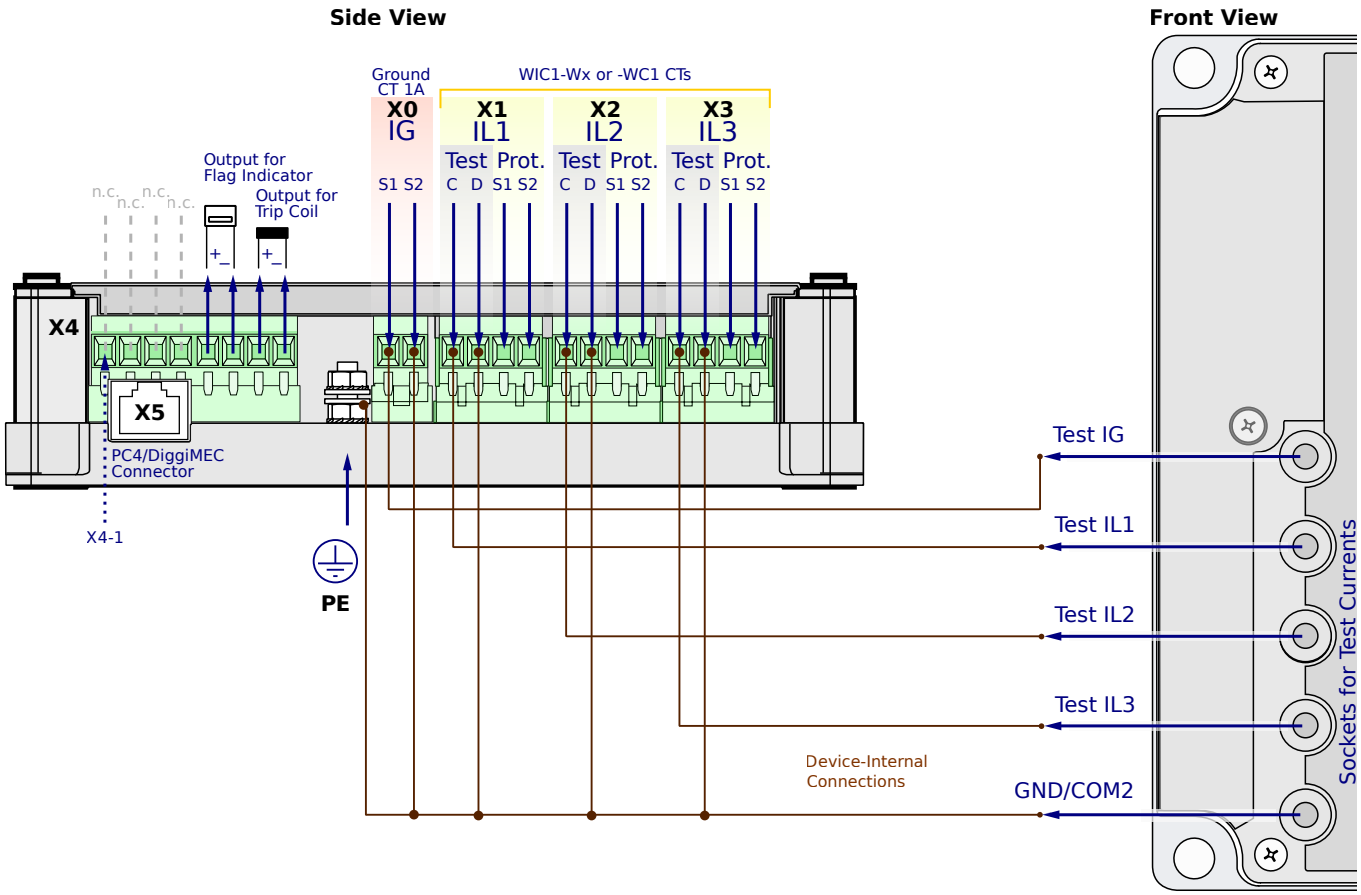


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1AA0

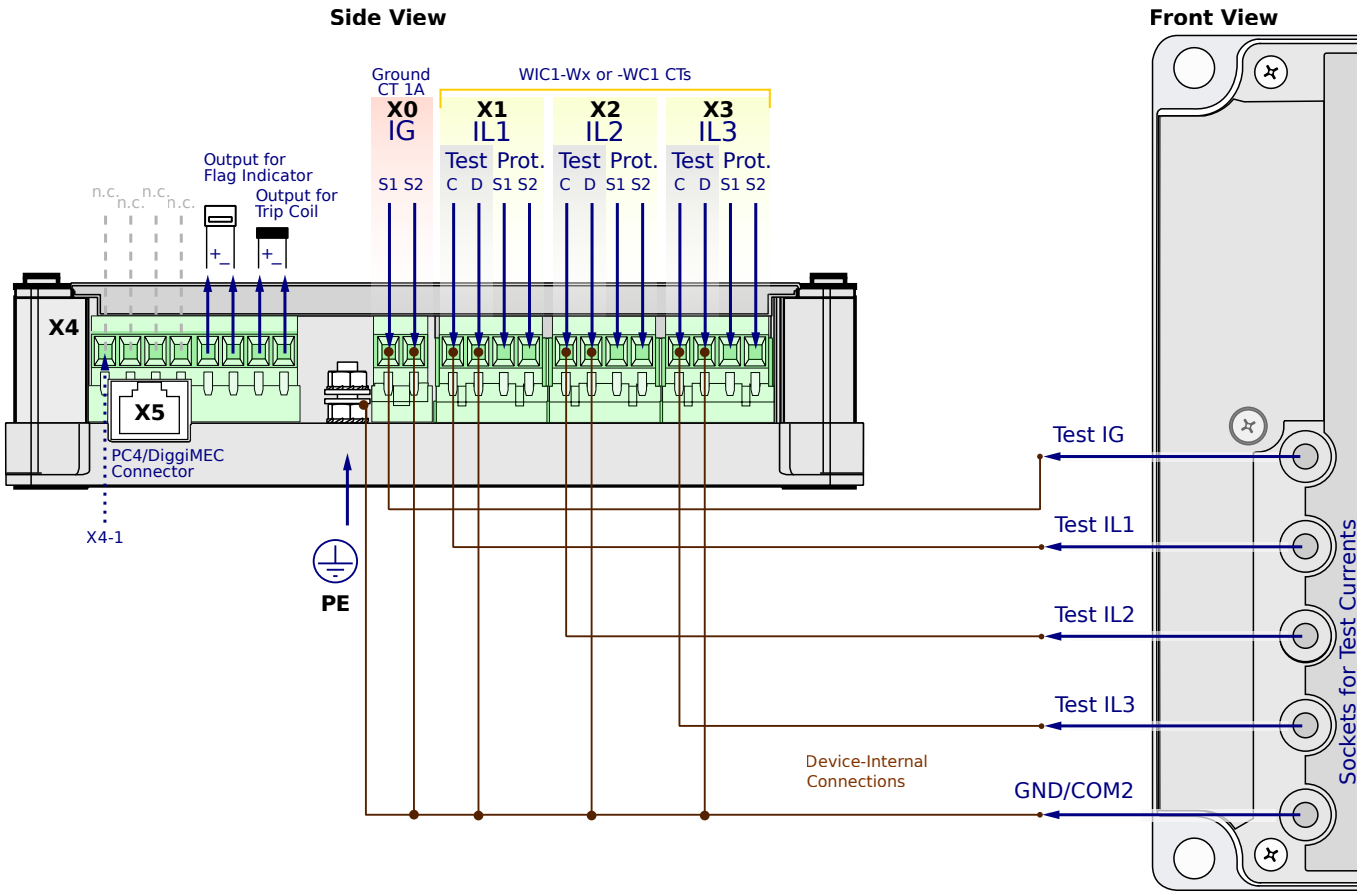


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1AAH

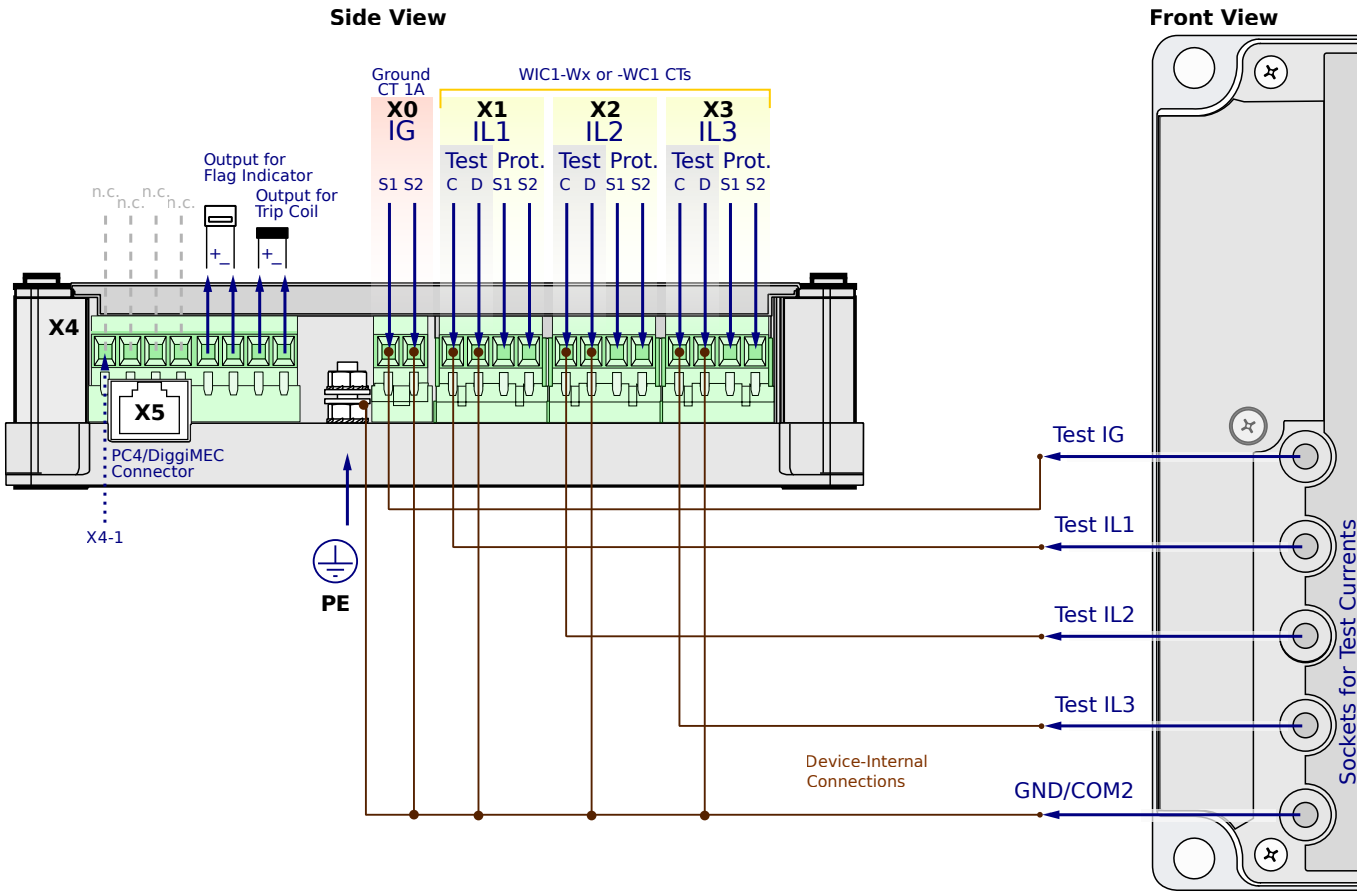


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1PA0

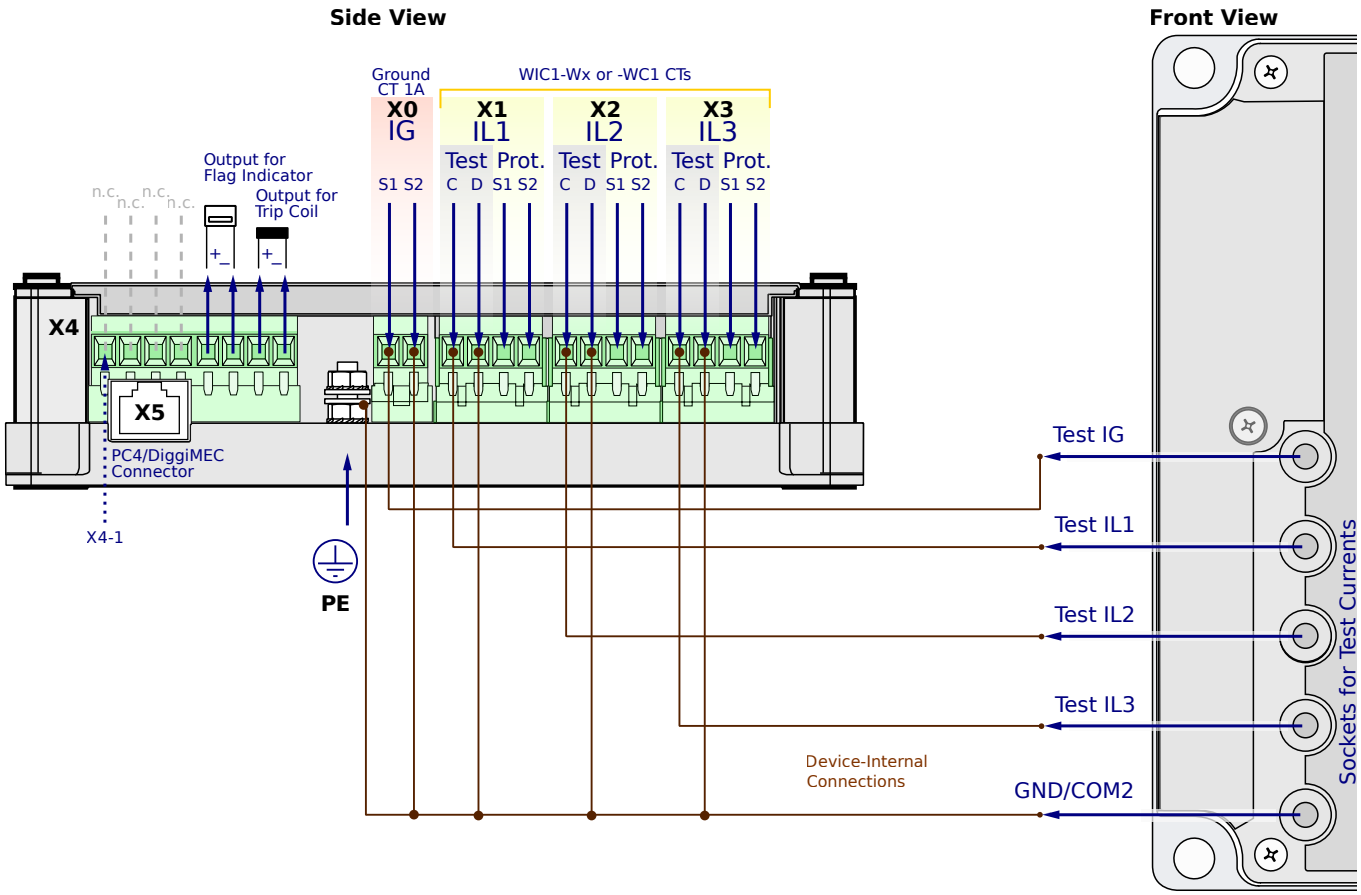


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN1PAH

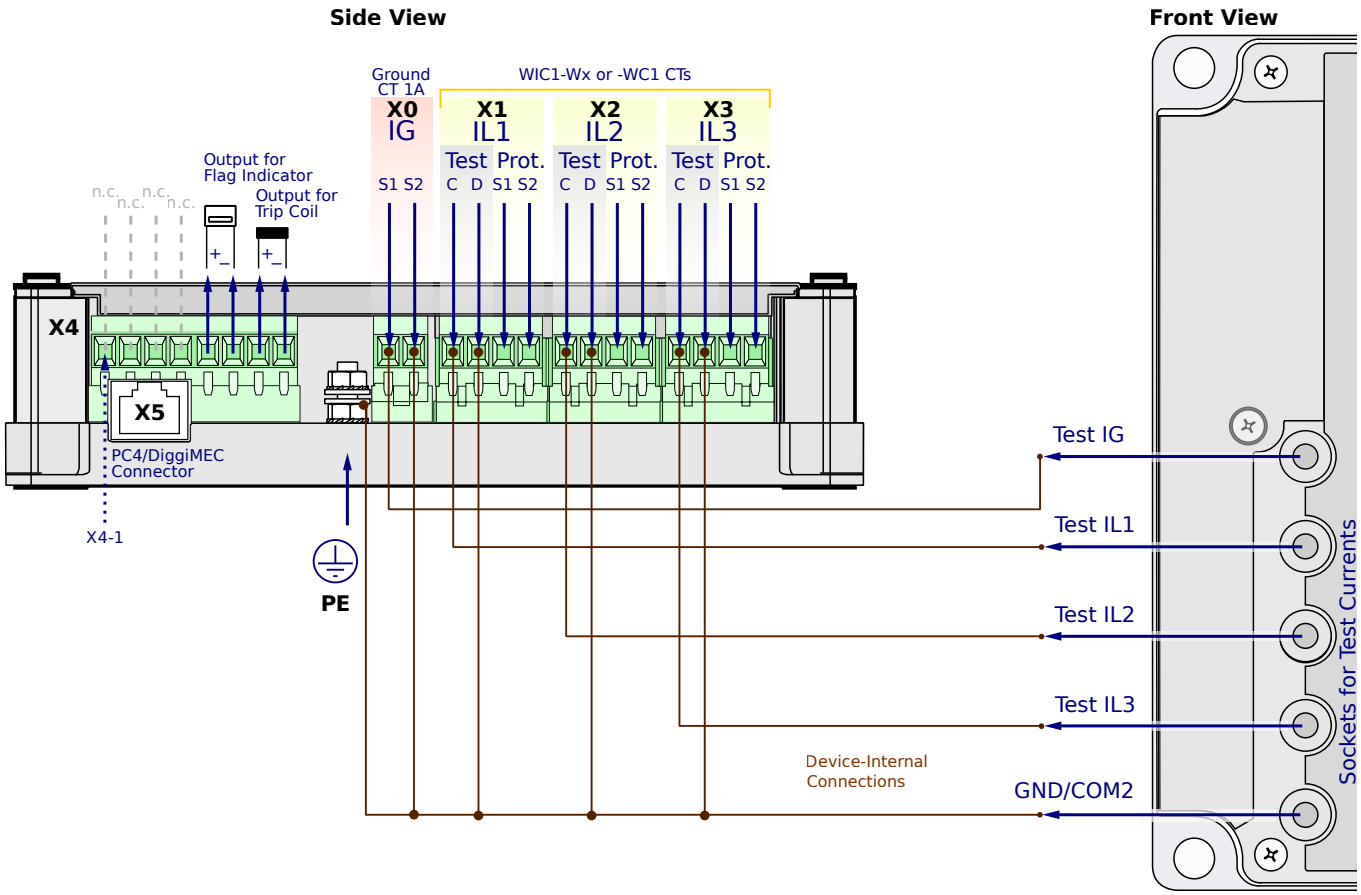


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2SA0

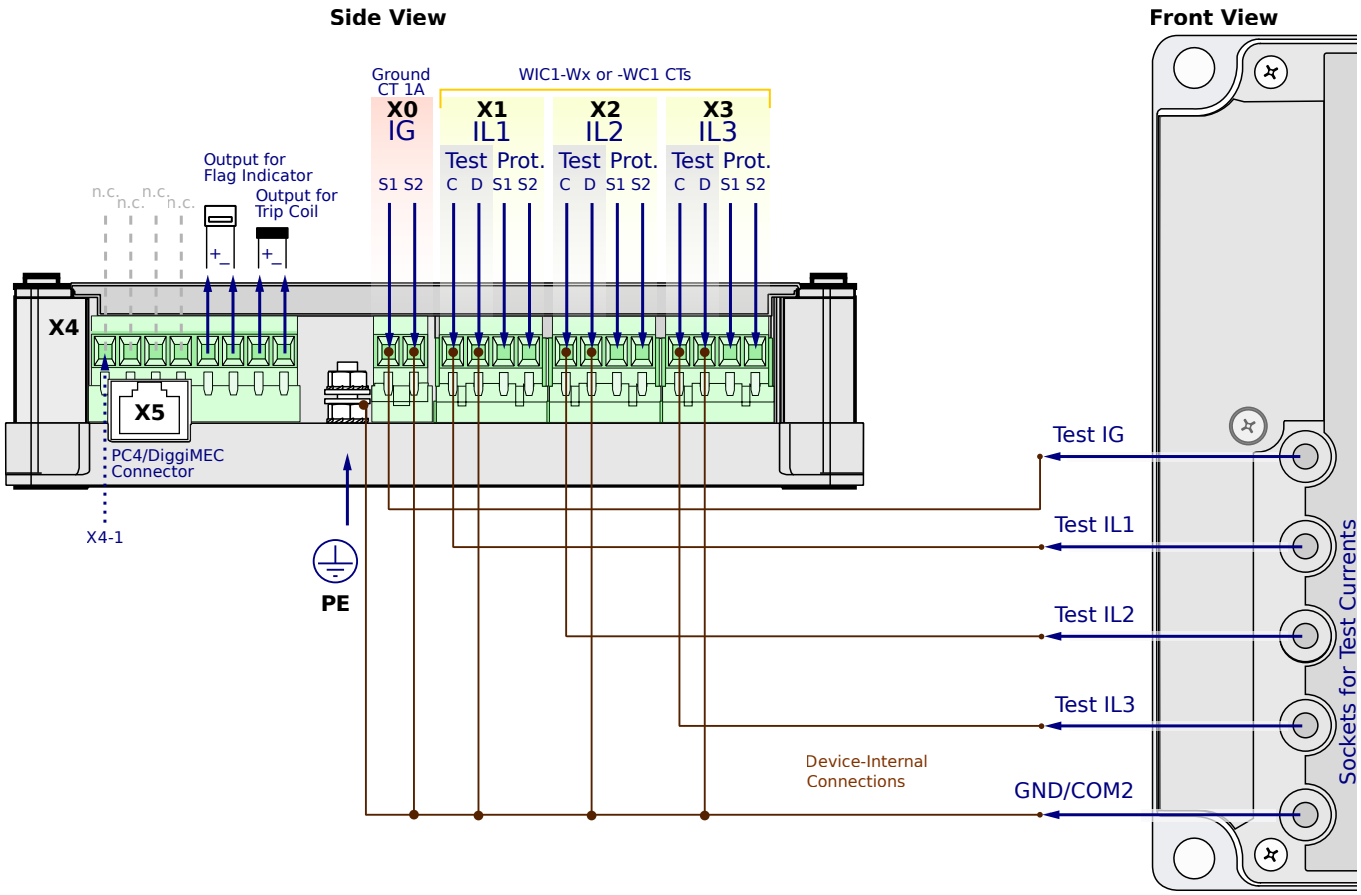


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2SAH

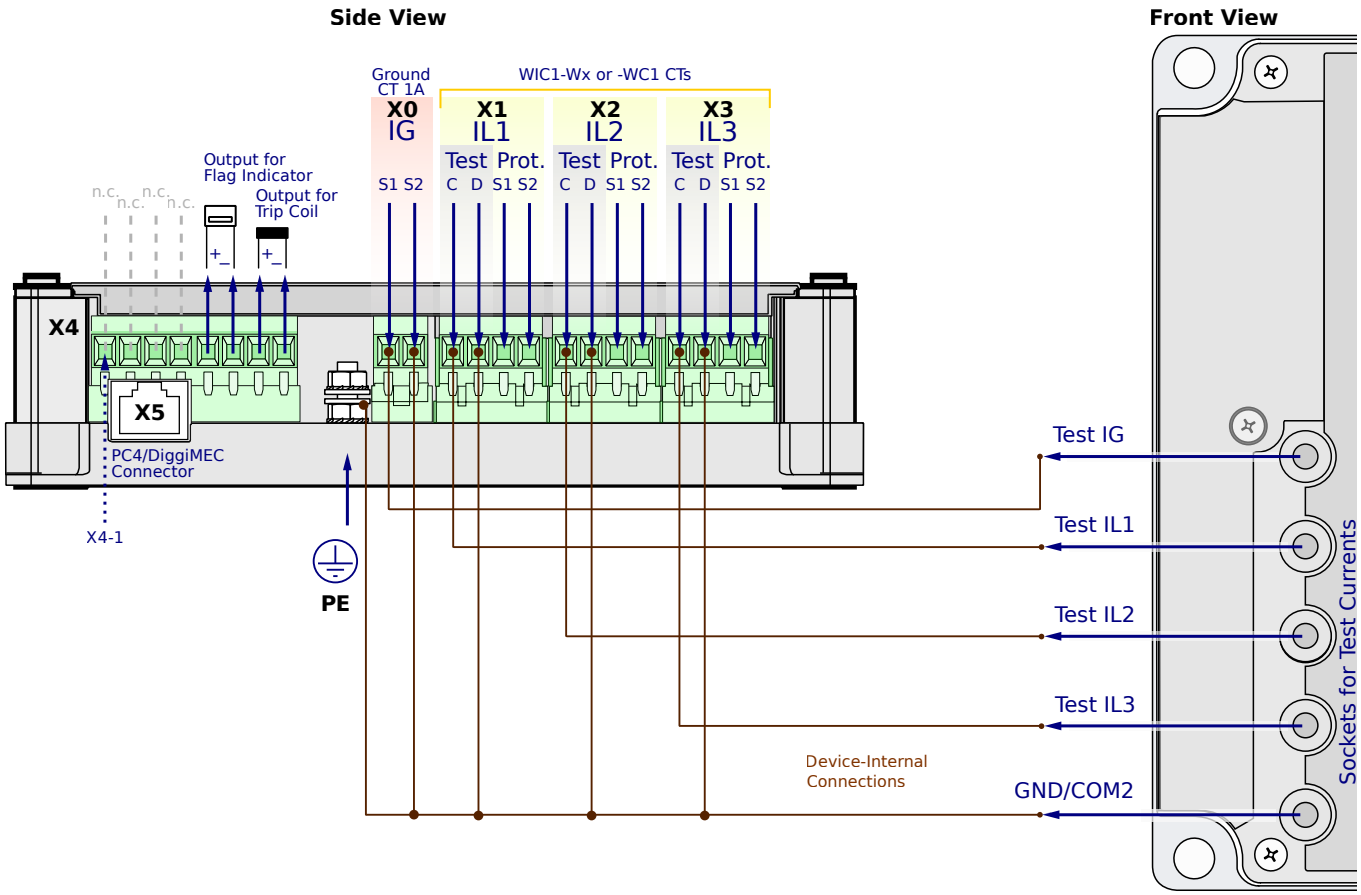


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2AA0

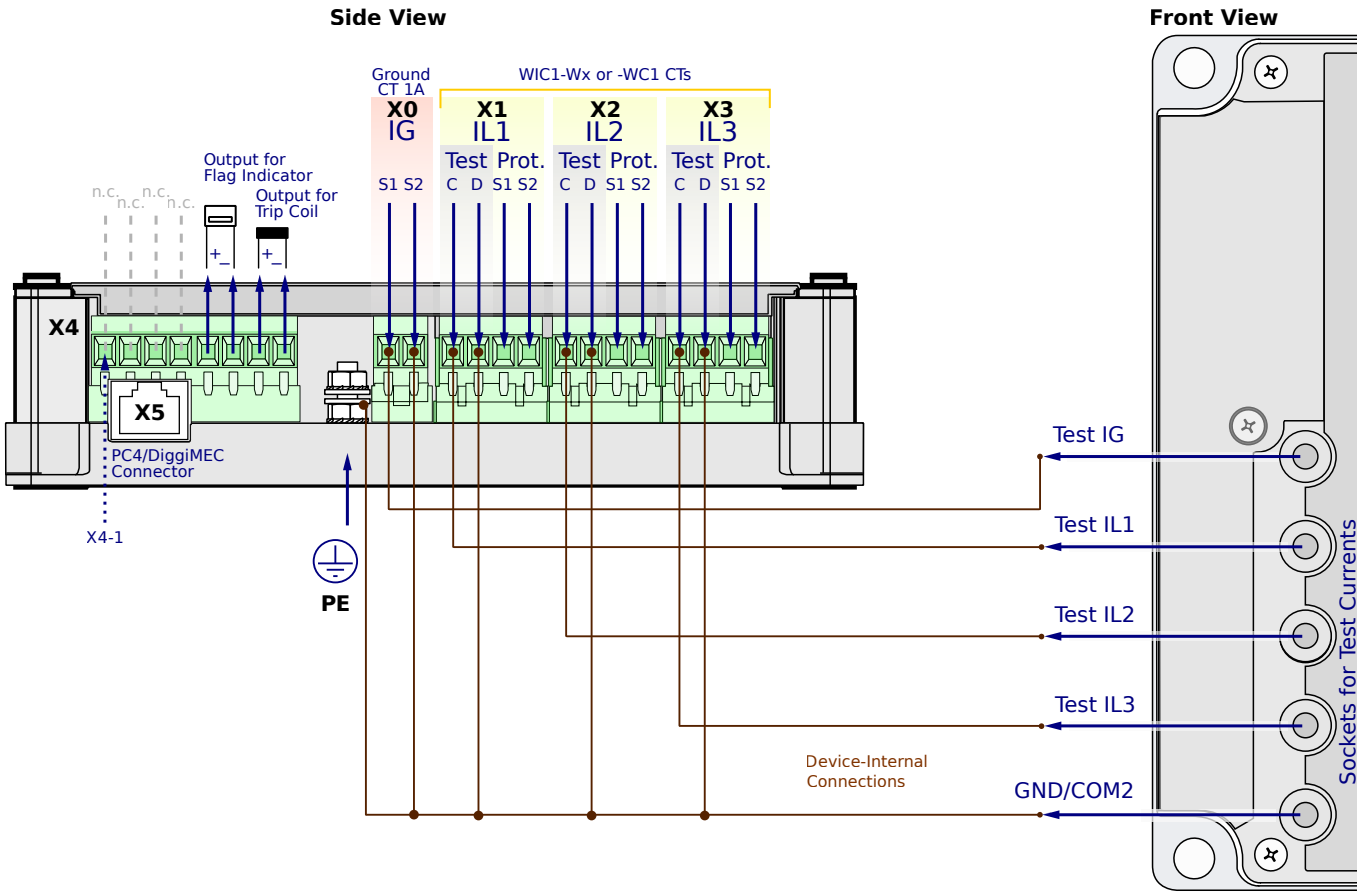


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2AAH

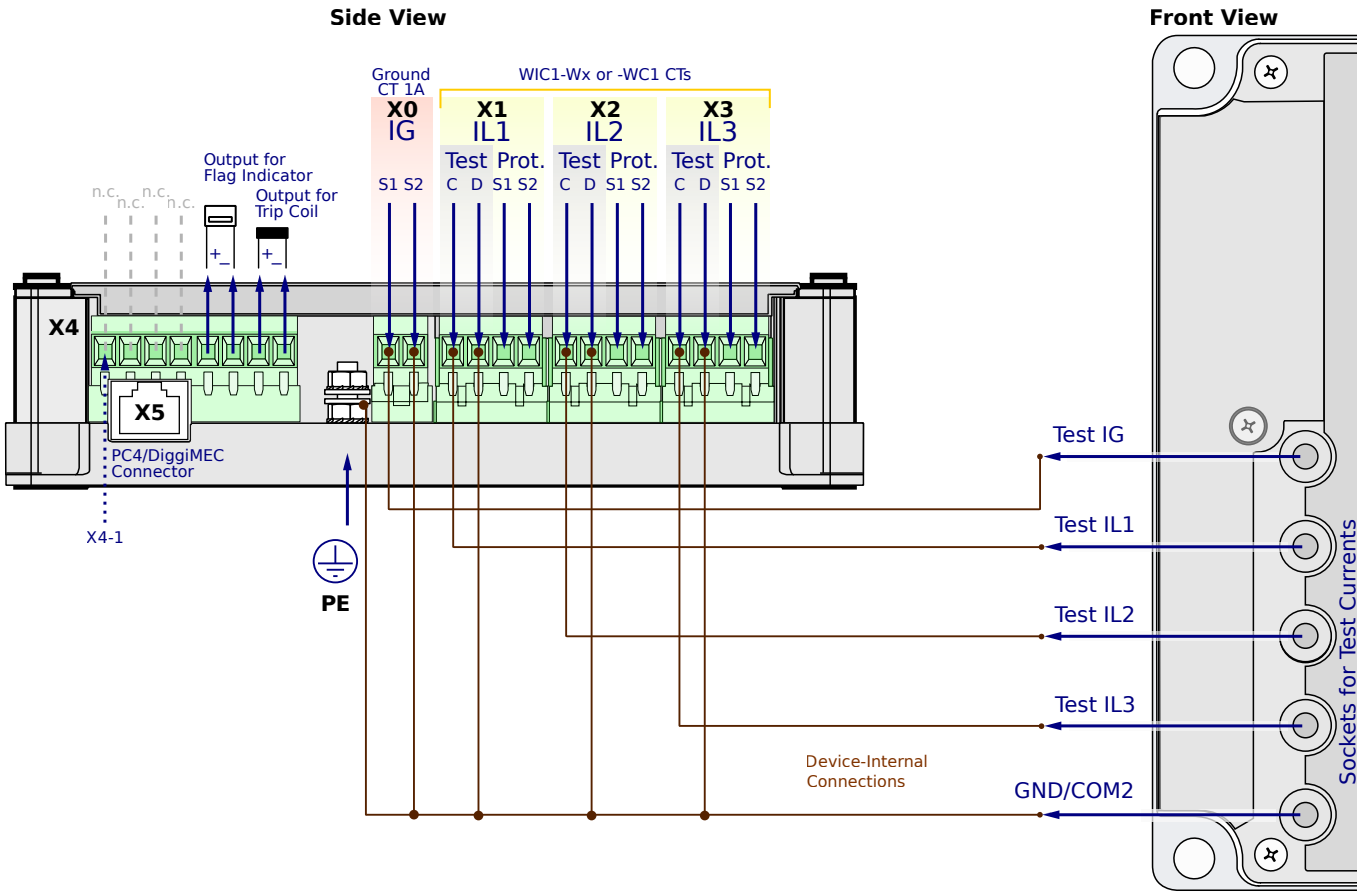


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2PA0

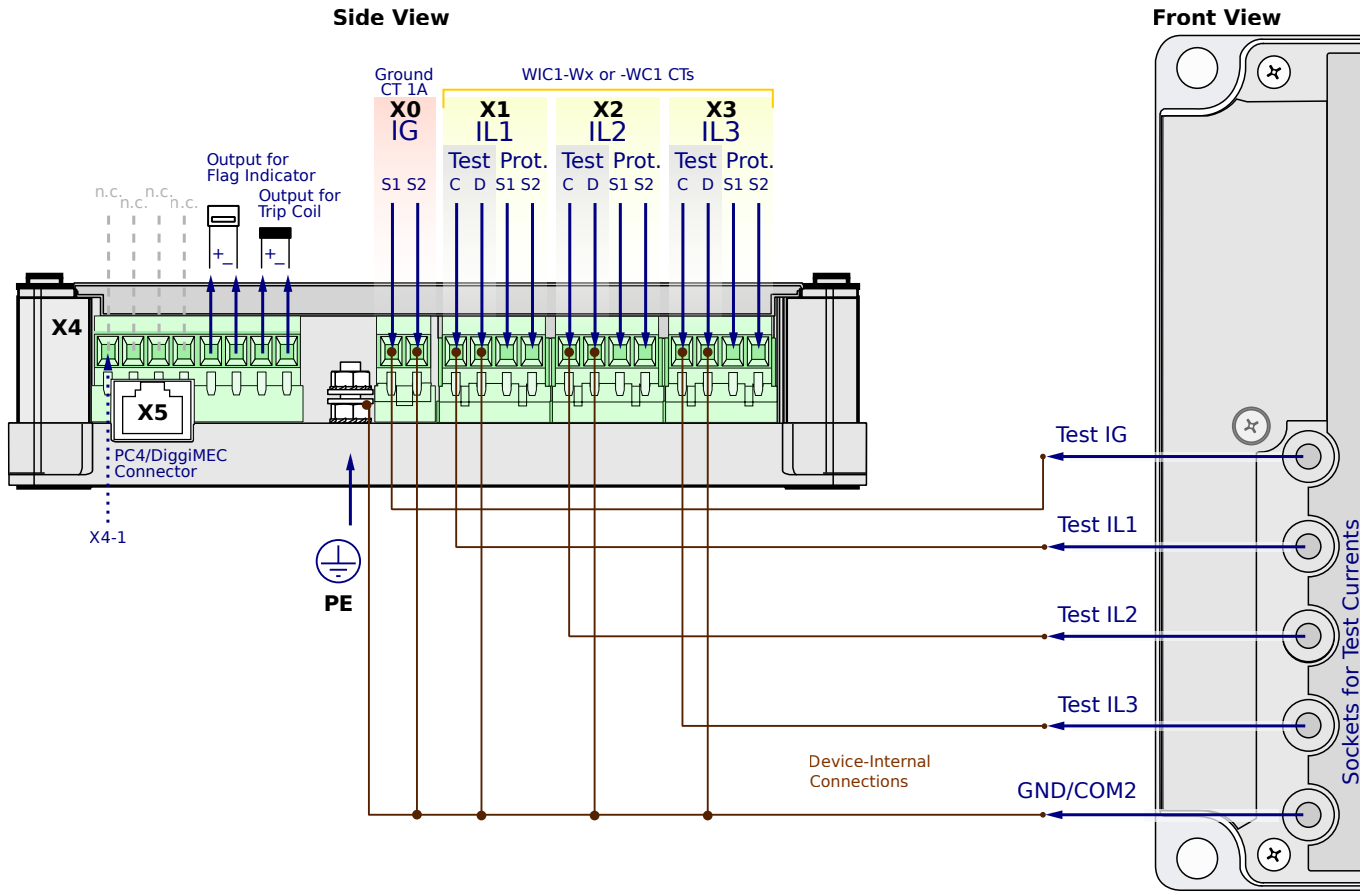


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CN2PAH

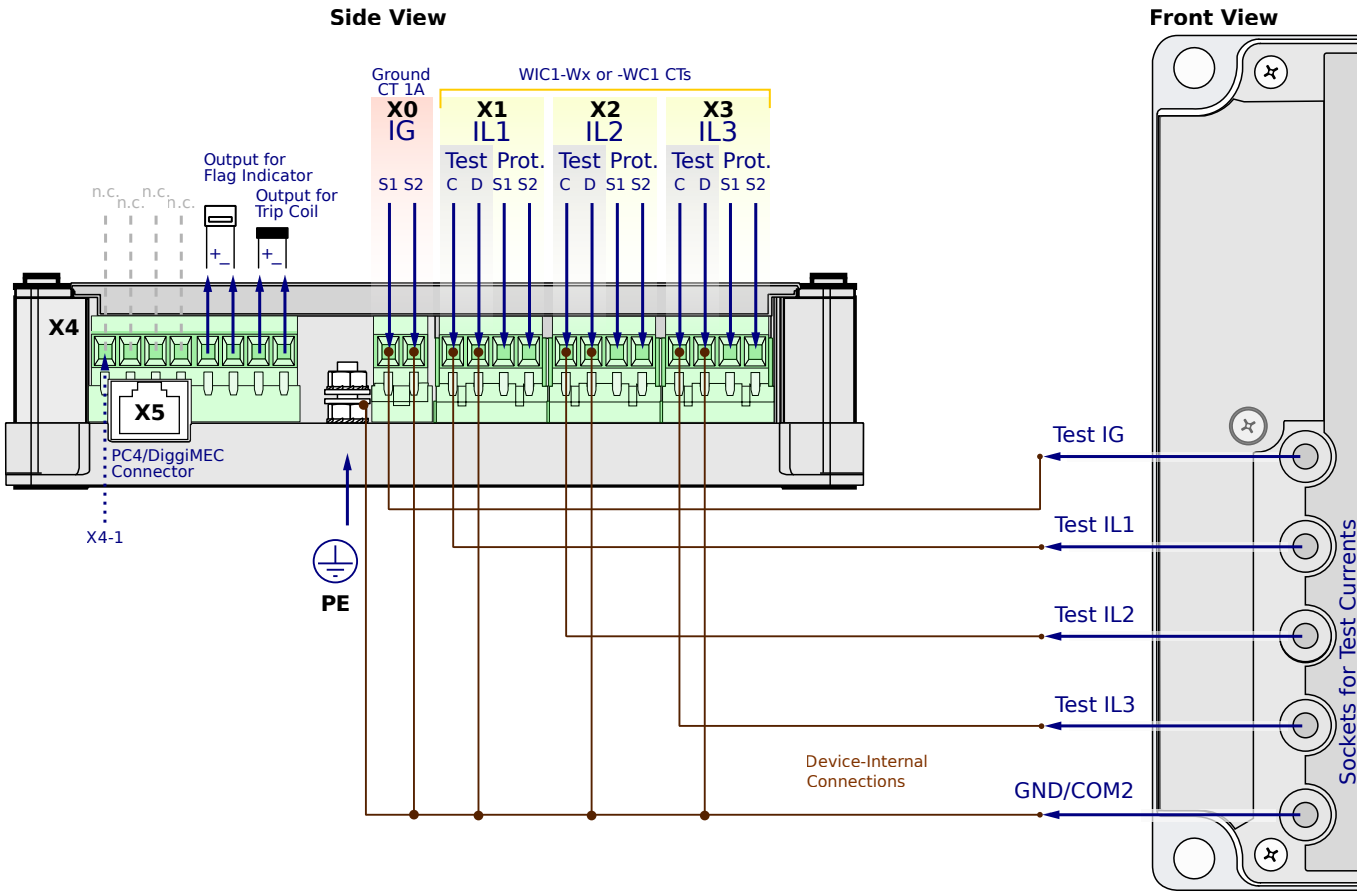


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1SA0

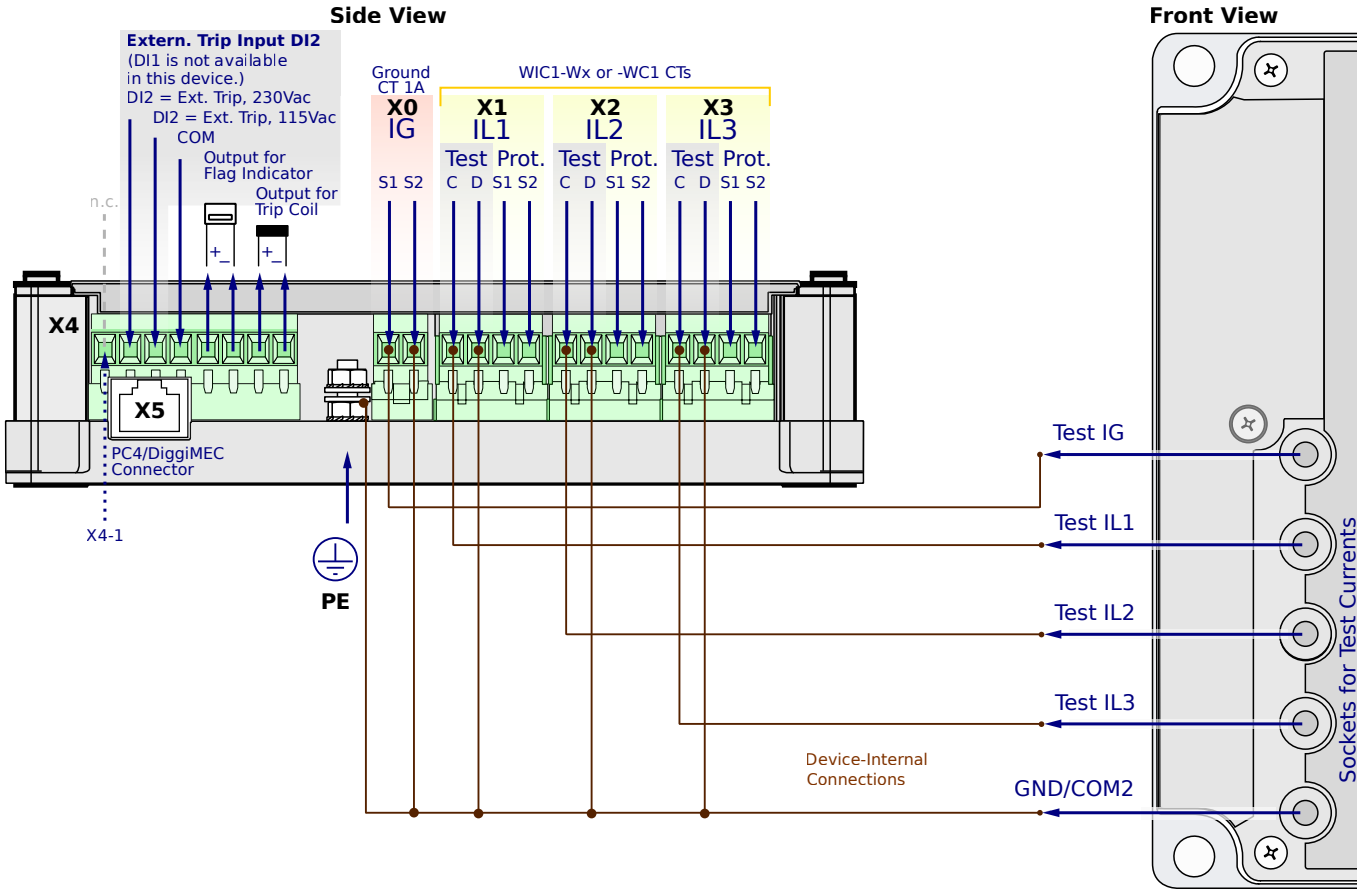


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1SAH

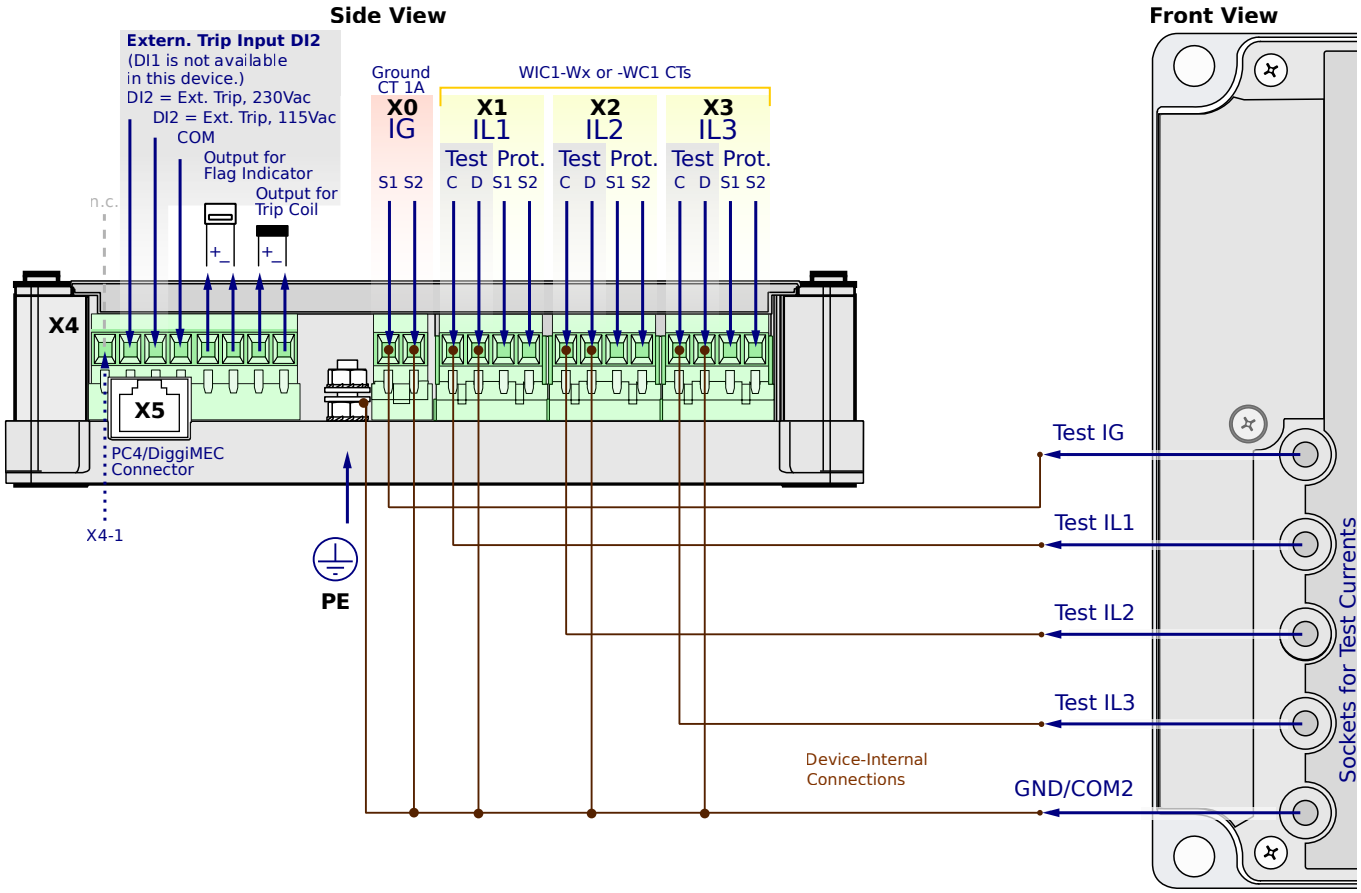


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1AA0

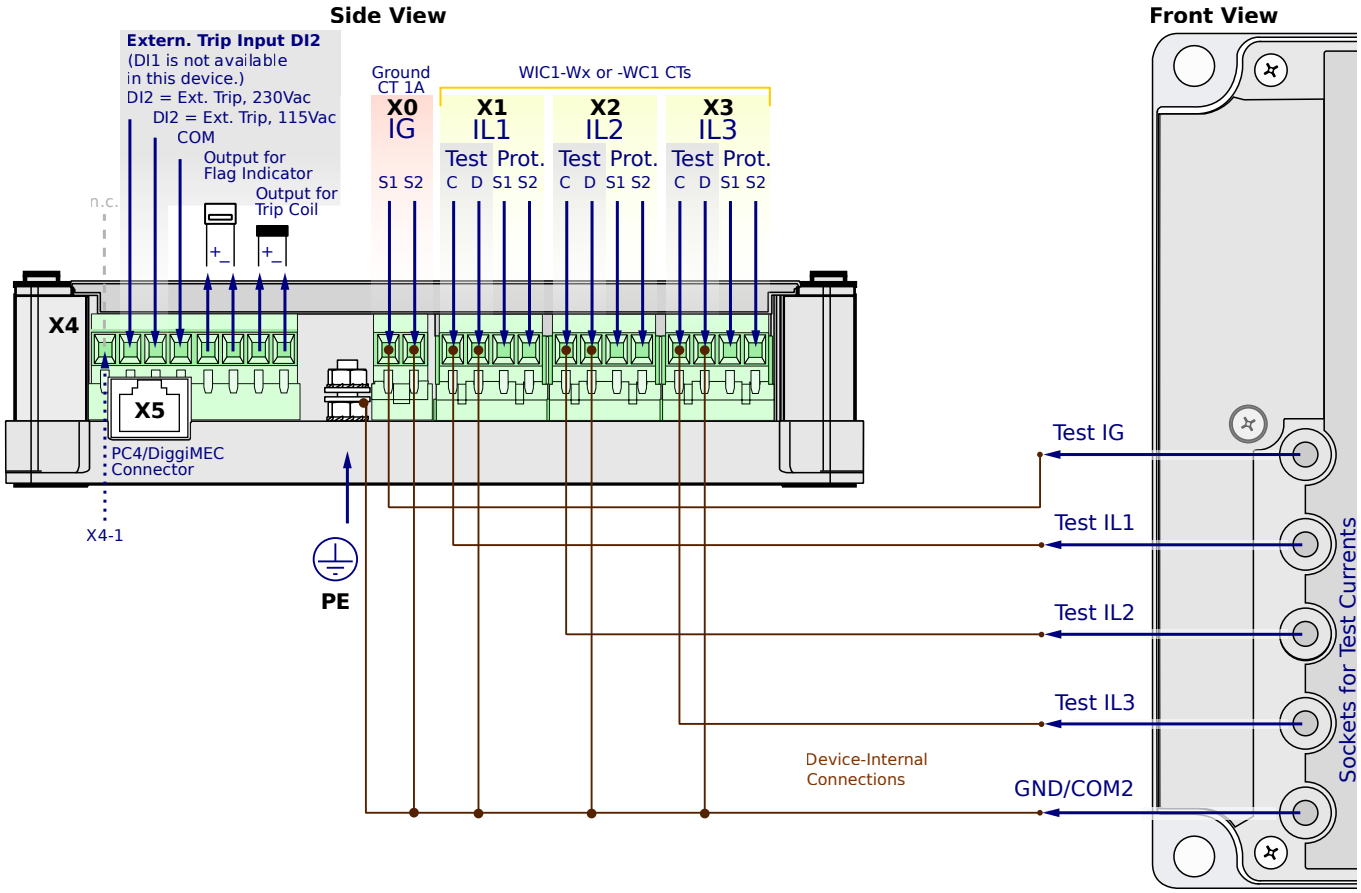


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1AAH

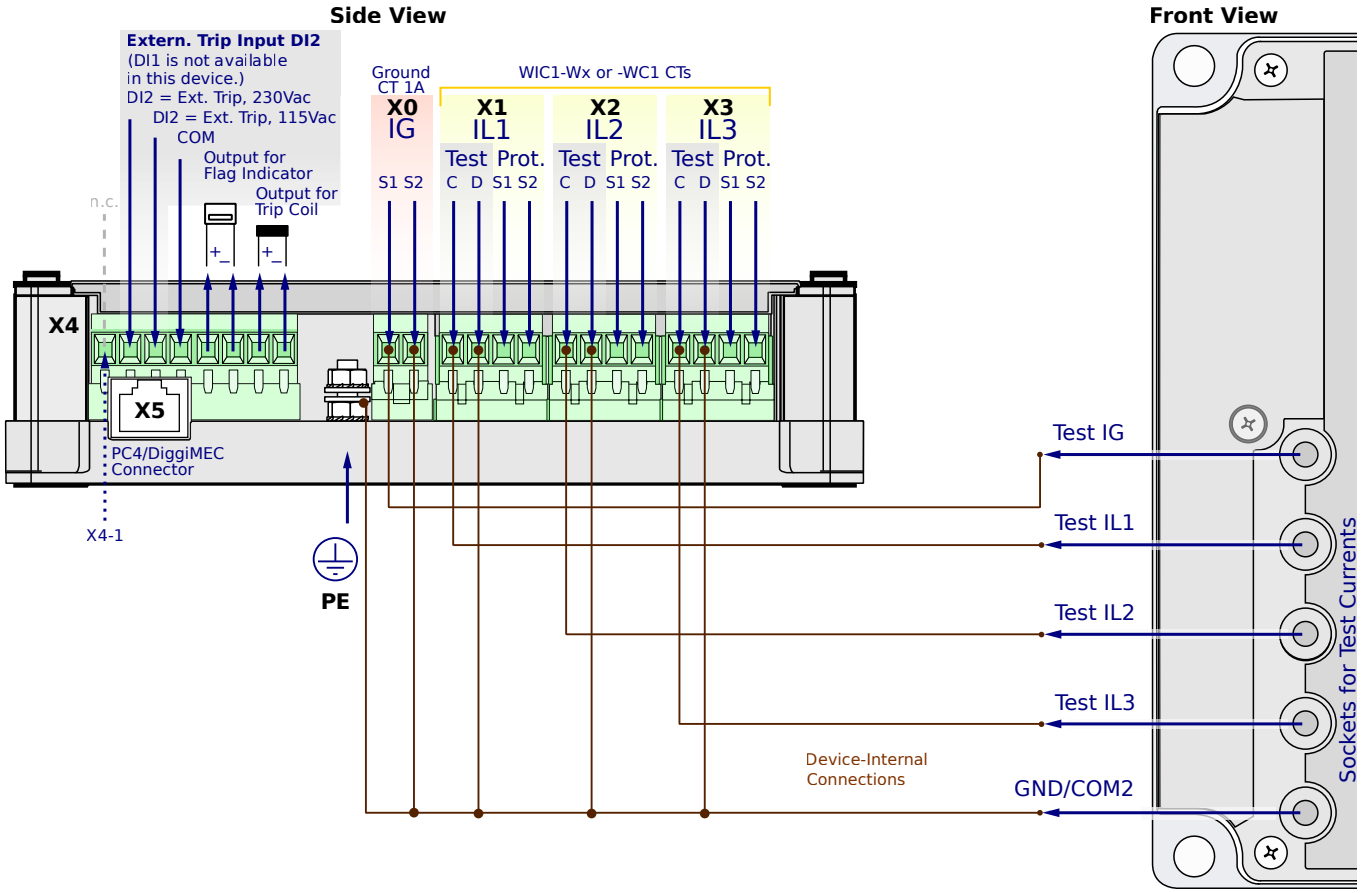


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1PA0

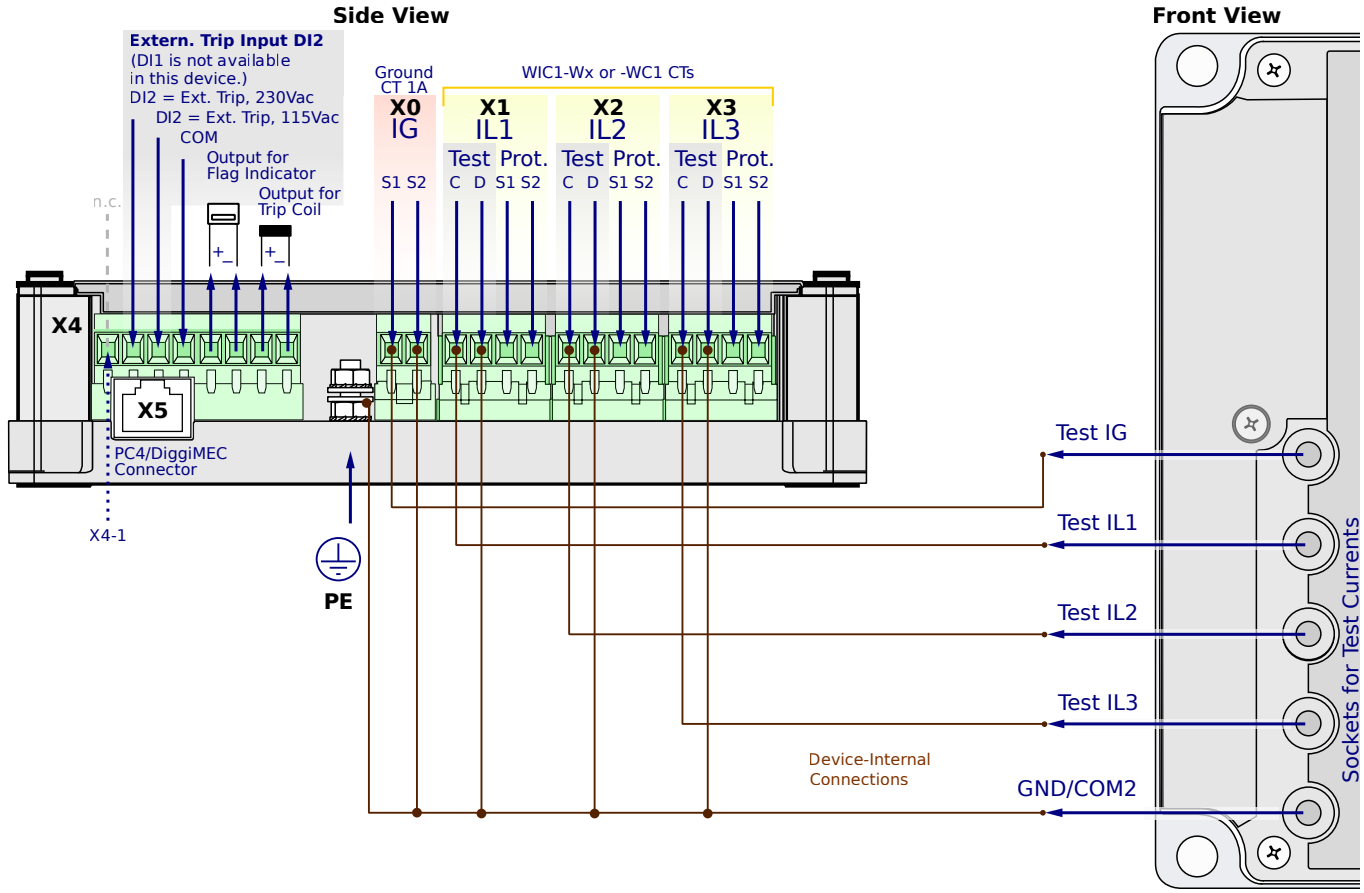


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF1PAH

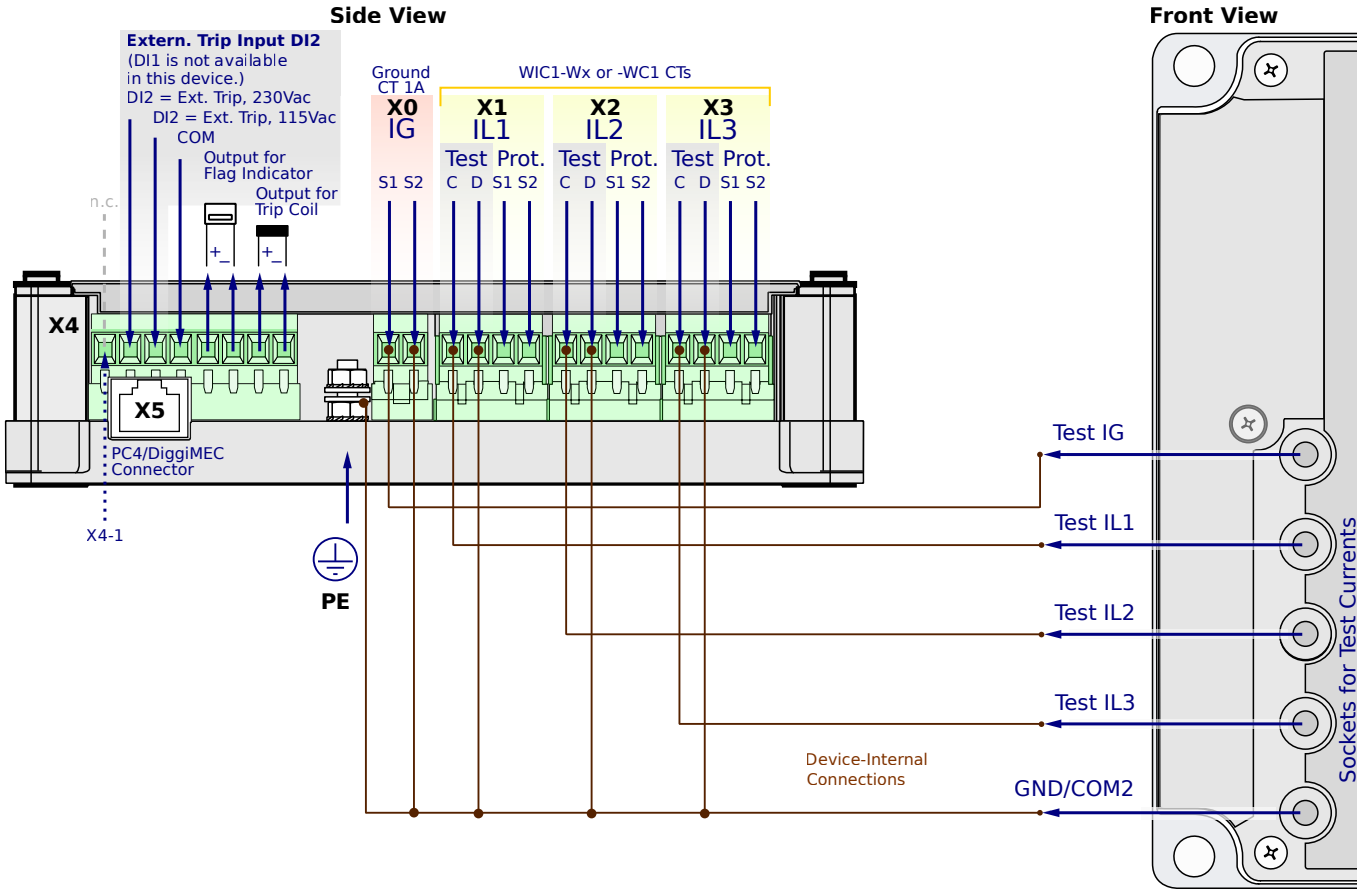


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2SA0

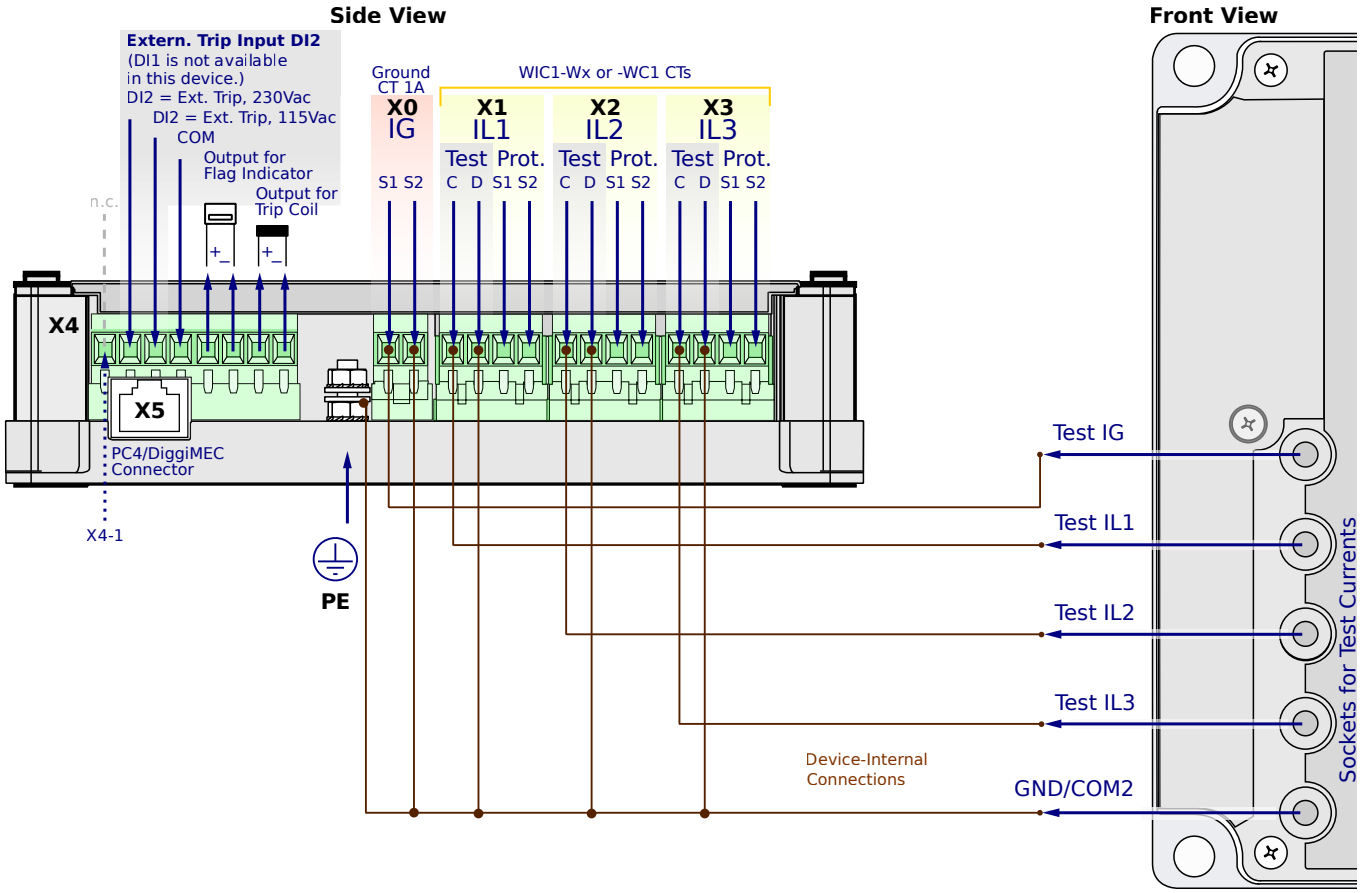


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2SAH

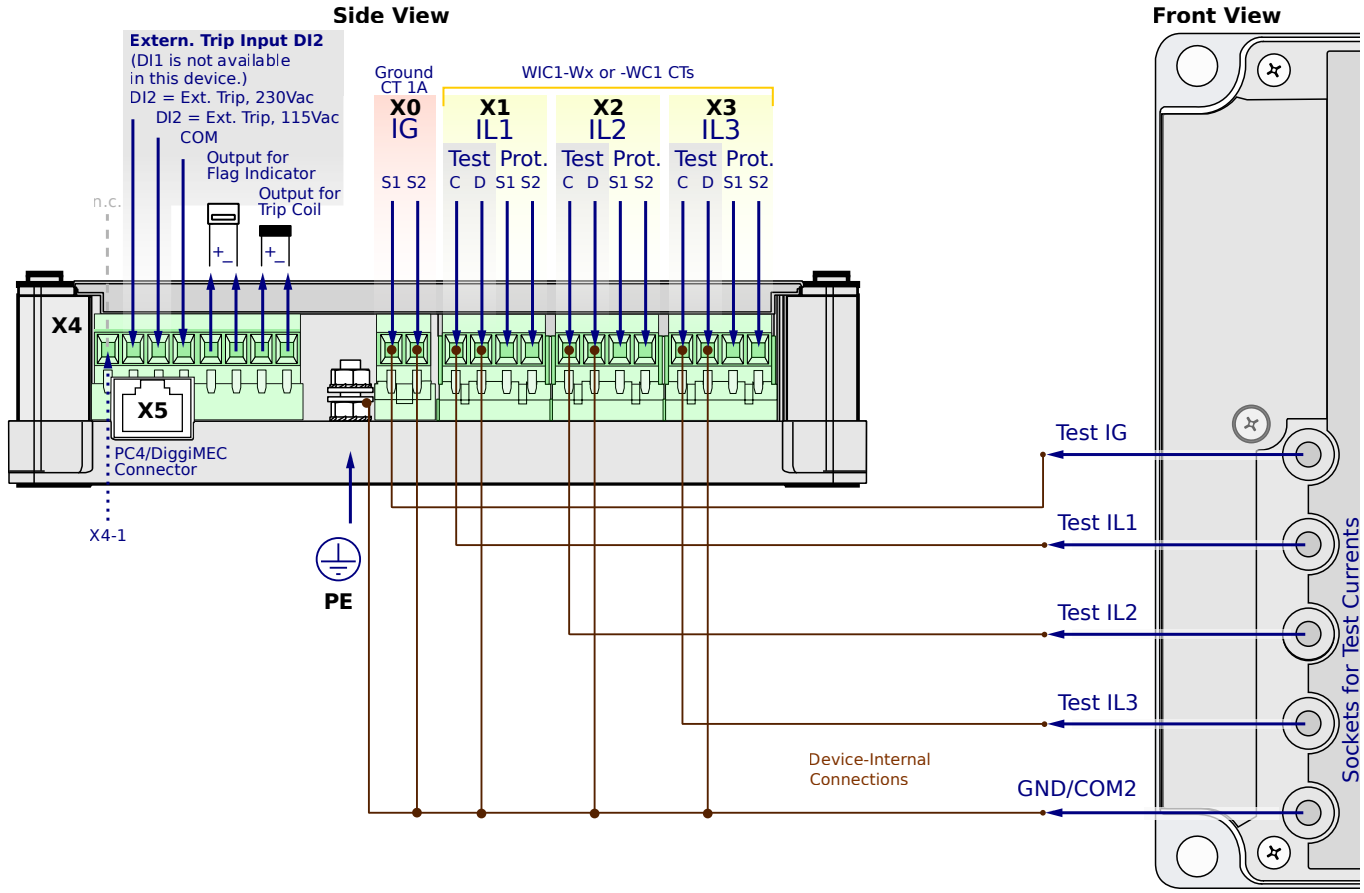


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2AA0

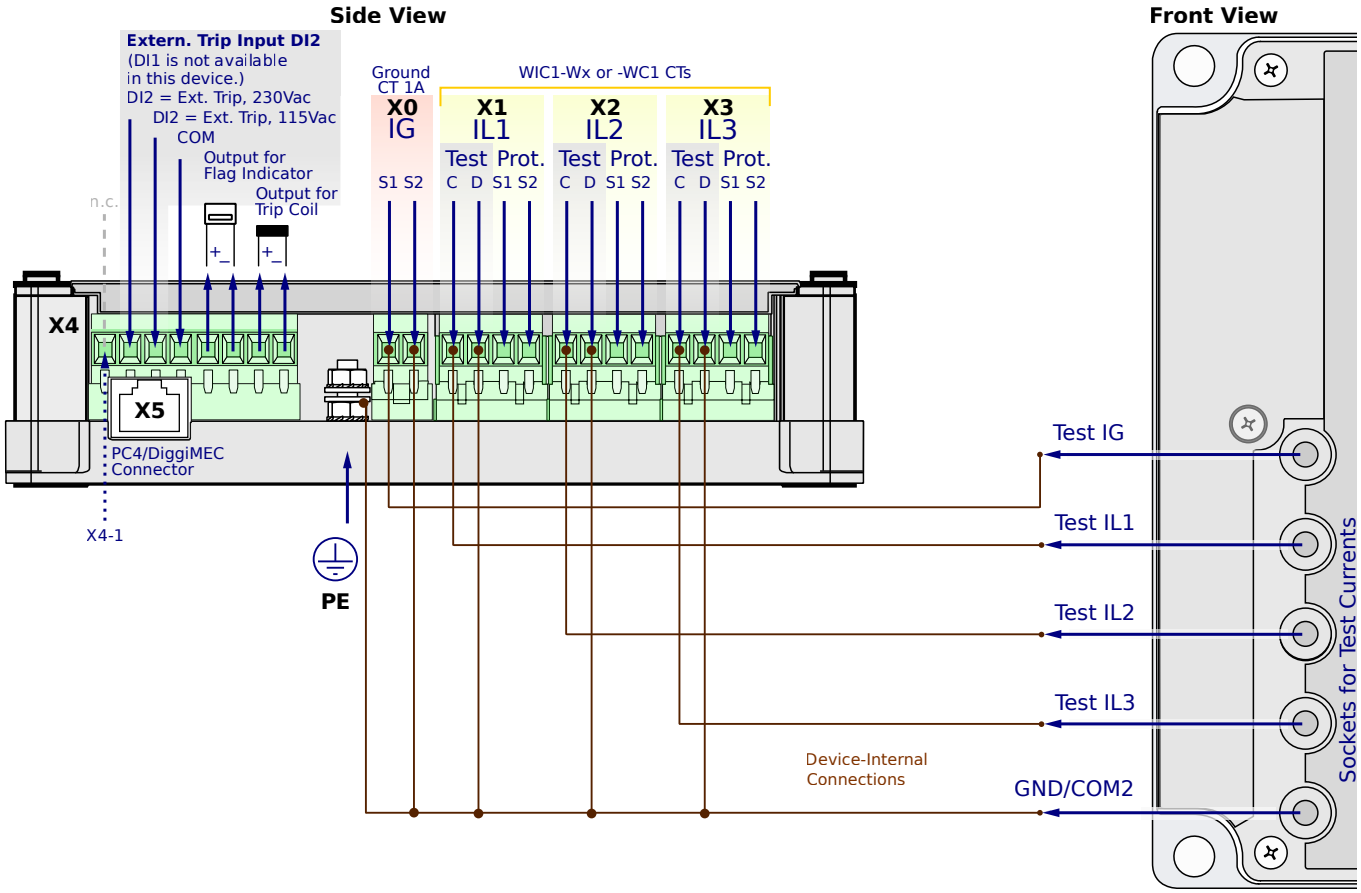


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2AAH

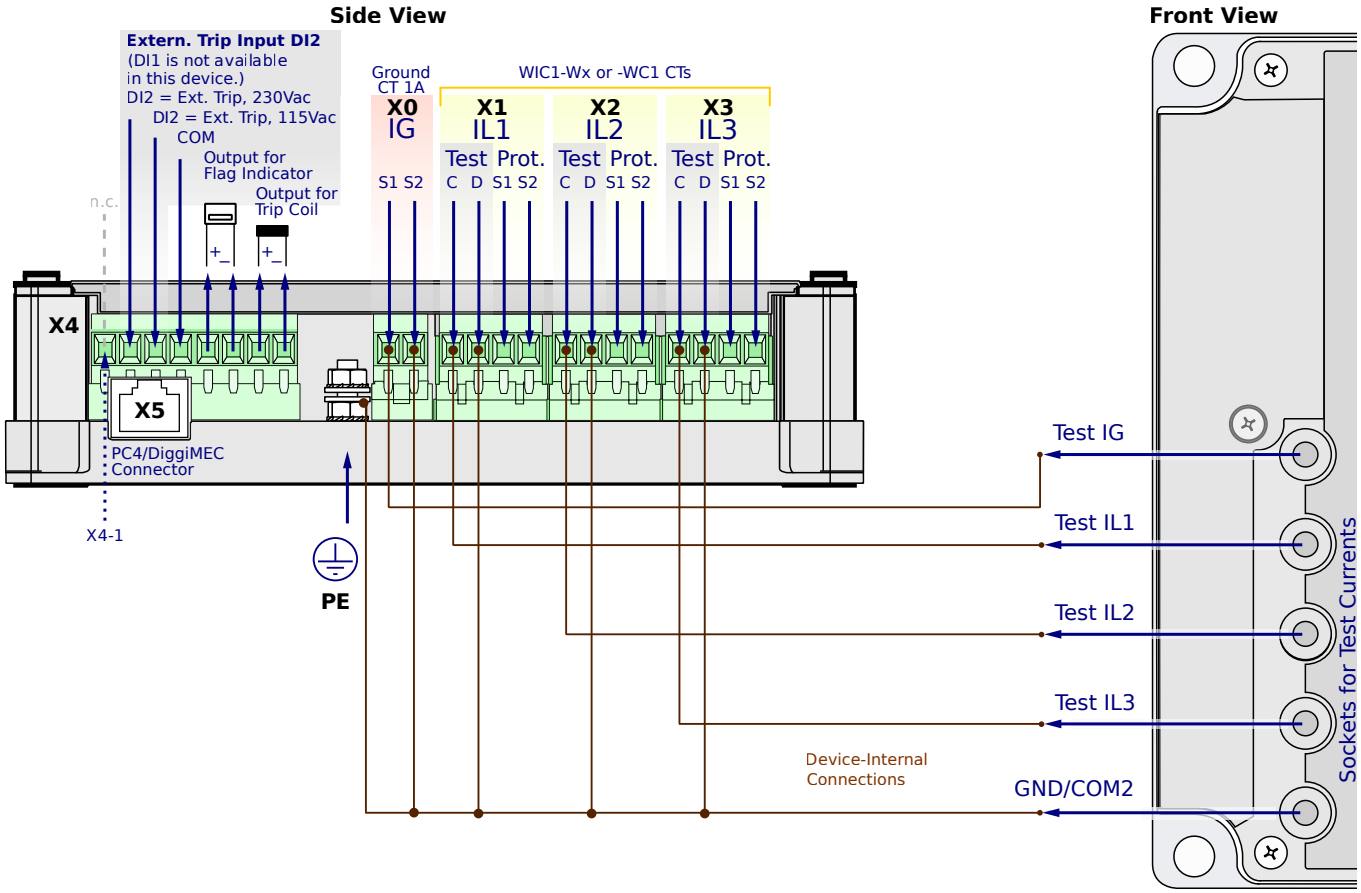


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2PA0

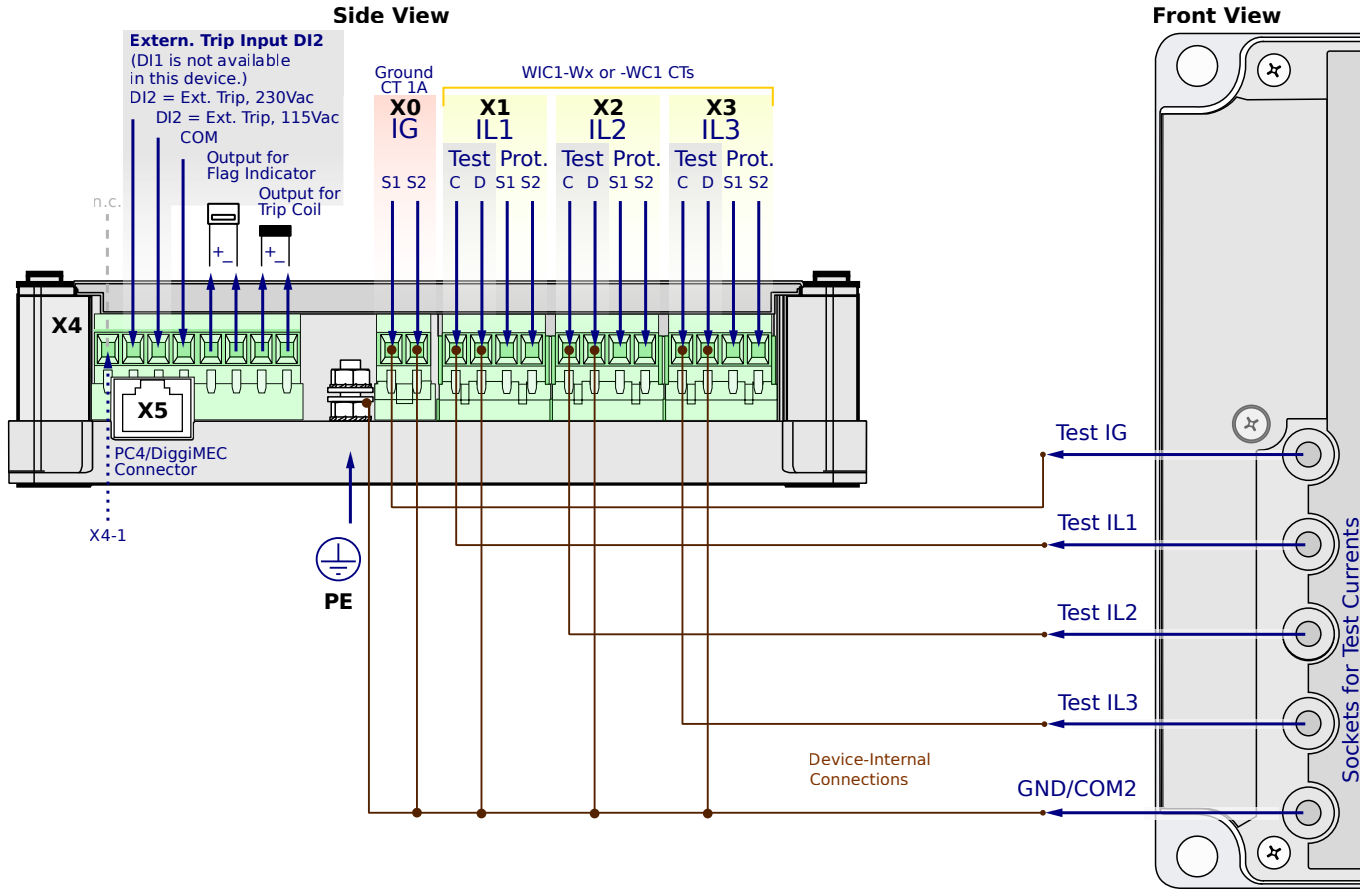


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CF2PAH

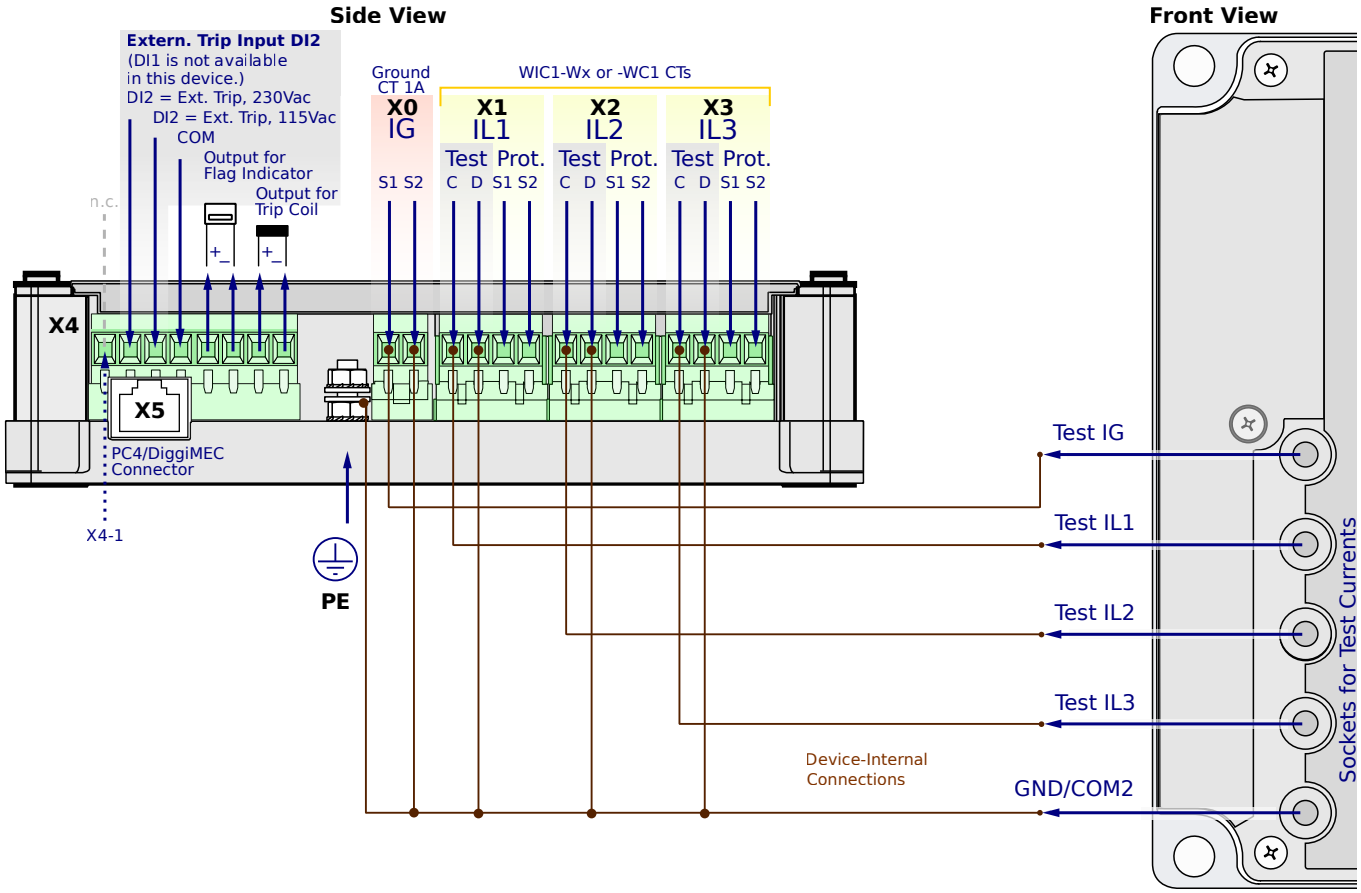


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1SA0

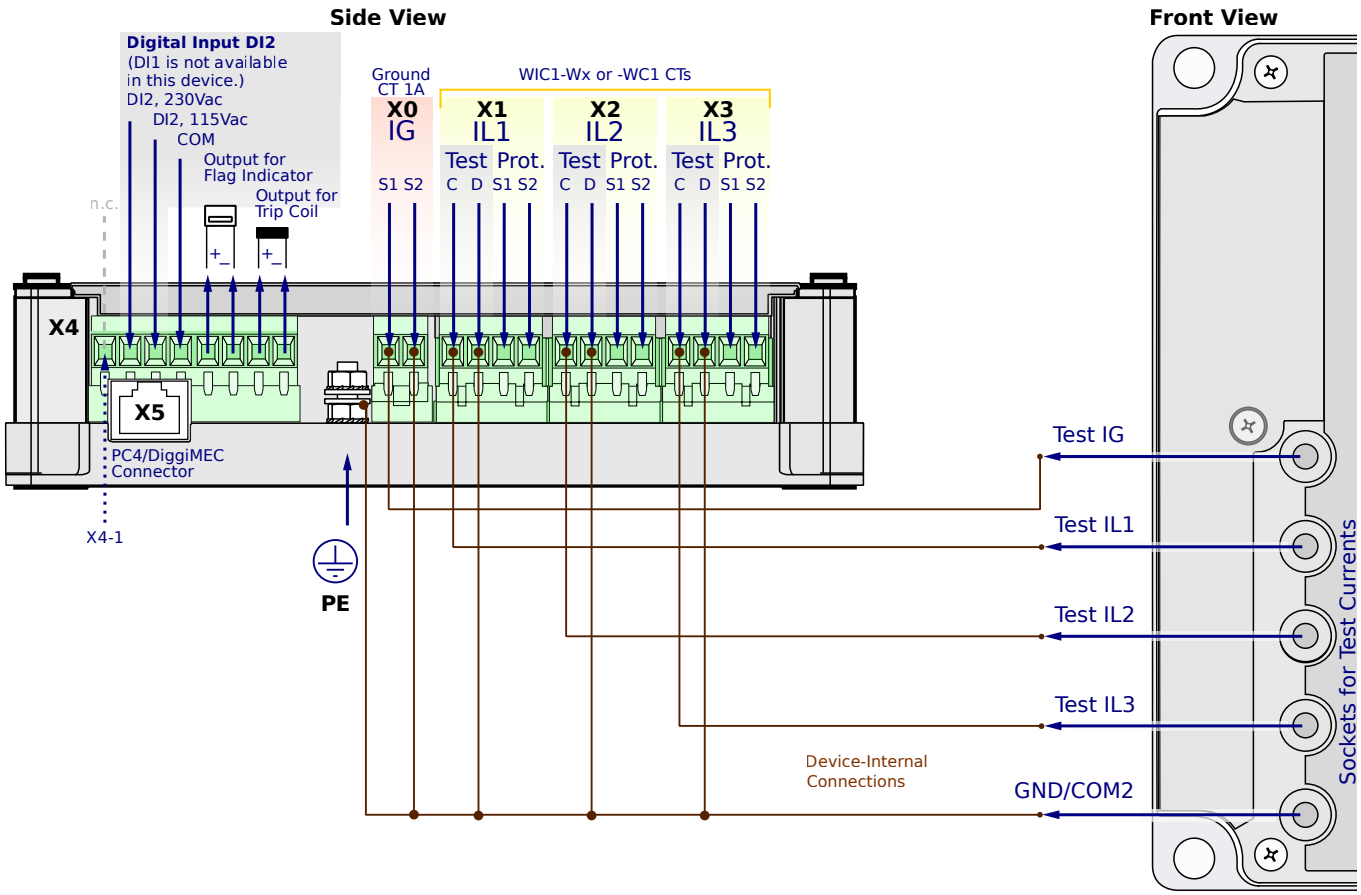


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1SAH

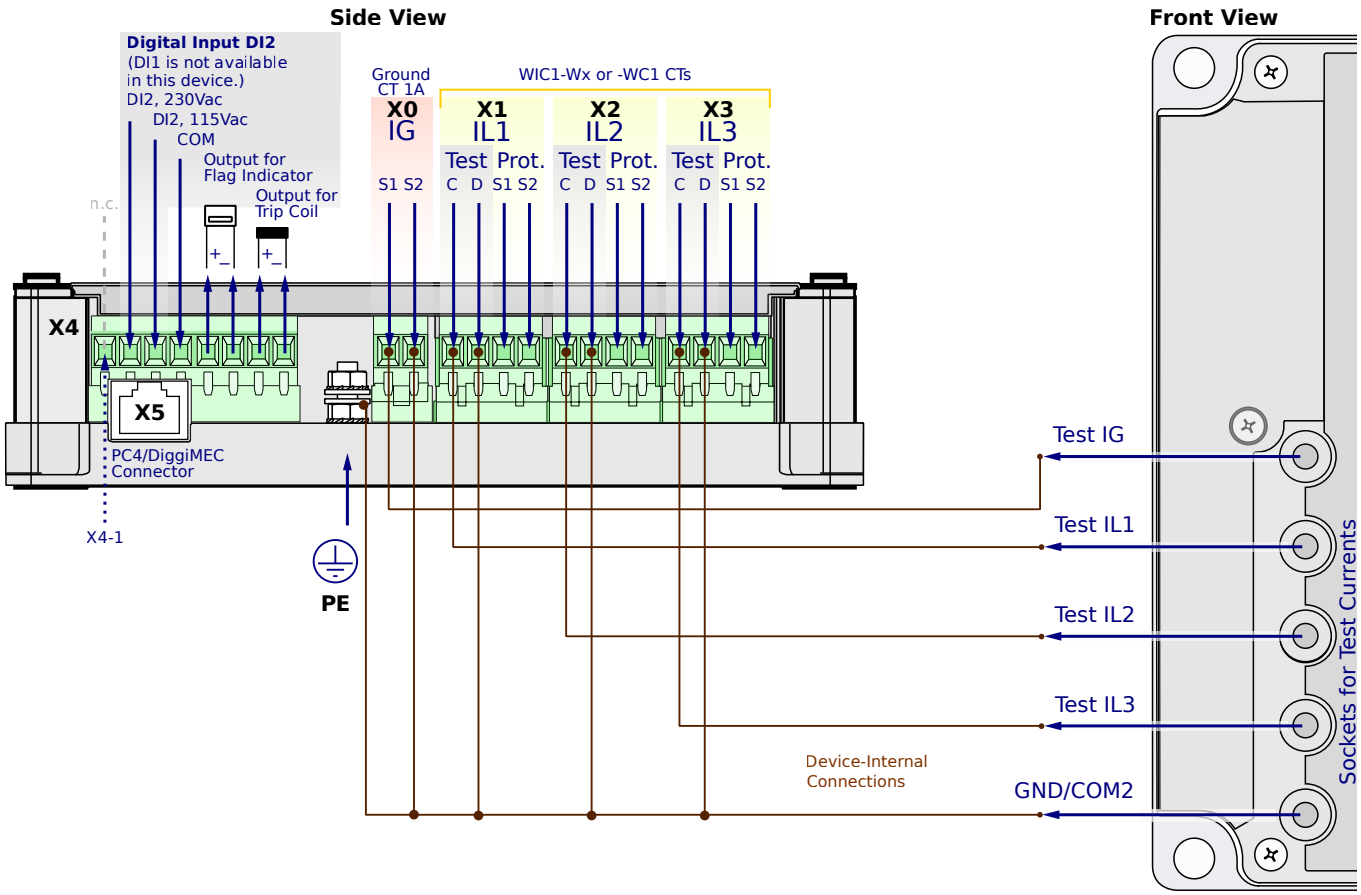


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1AA0

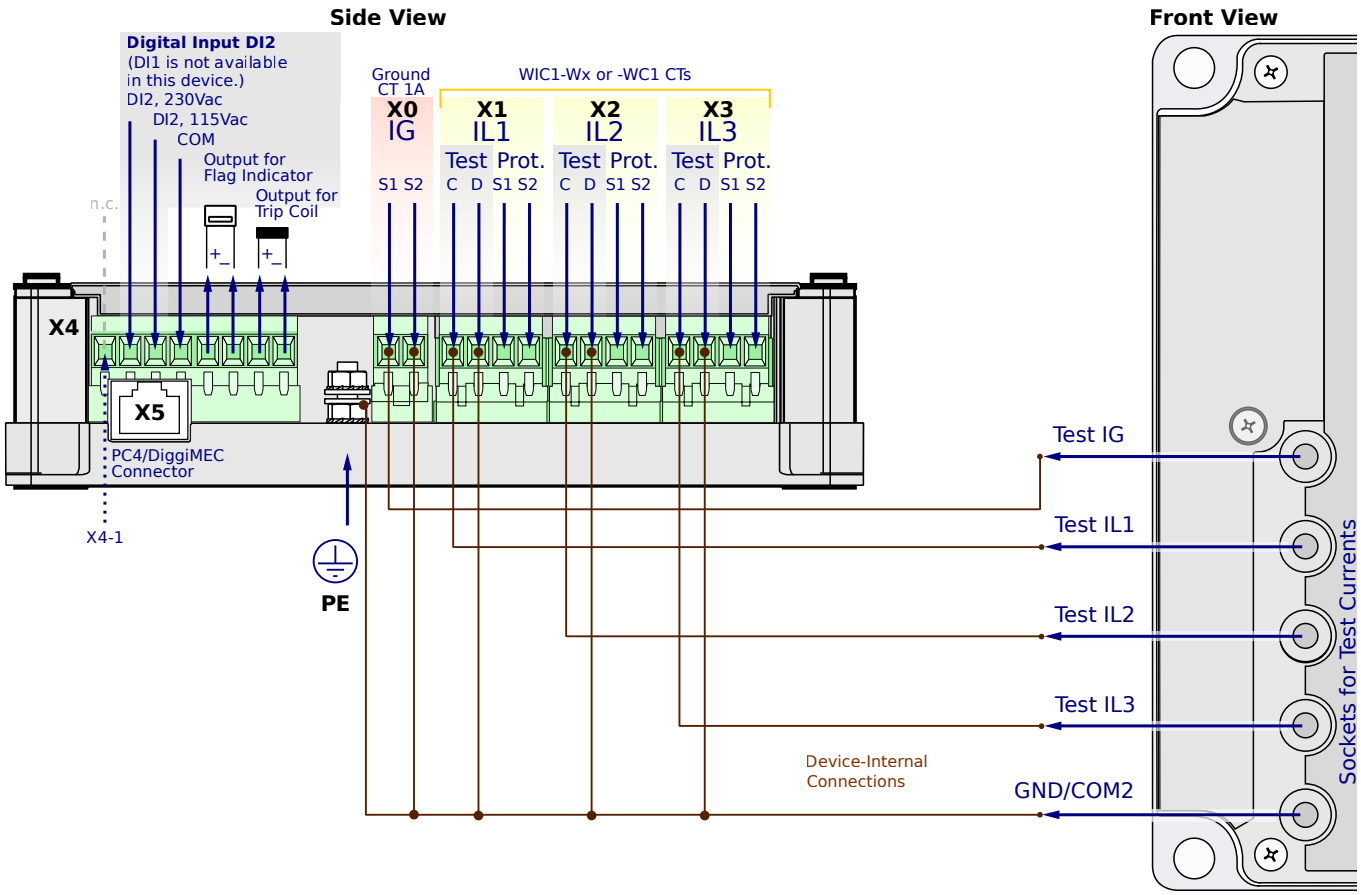


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1AAH

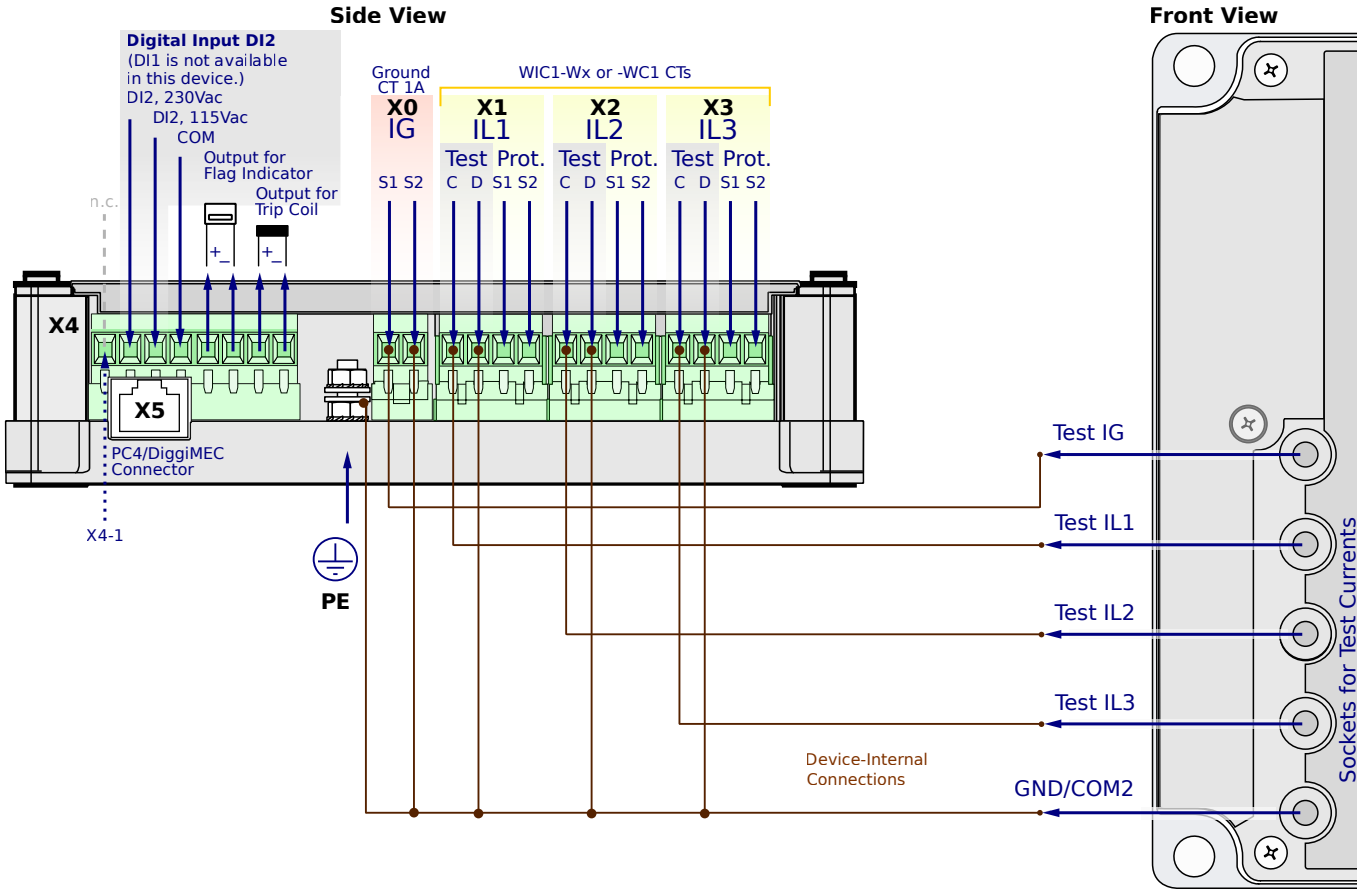


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1PA0

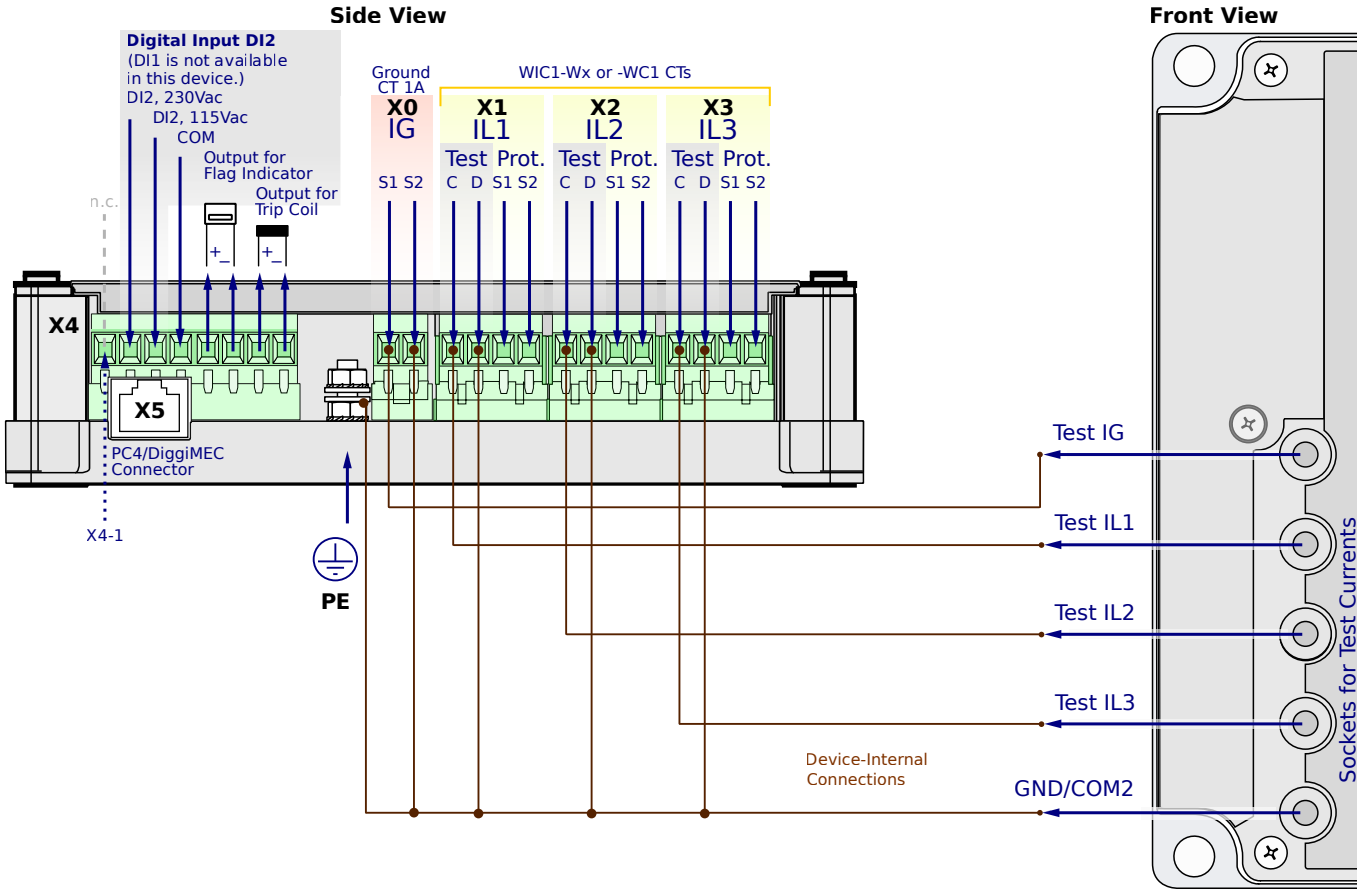


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC1PAH

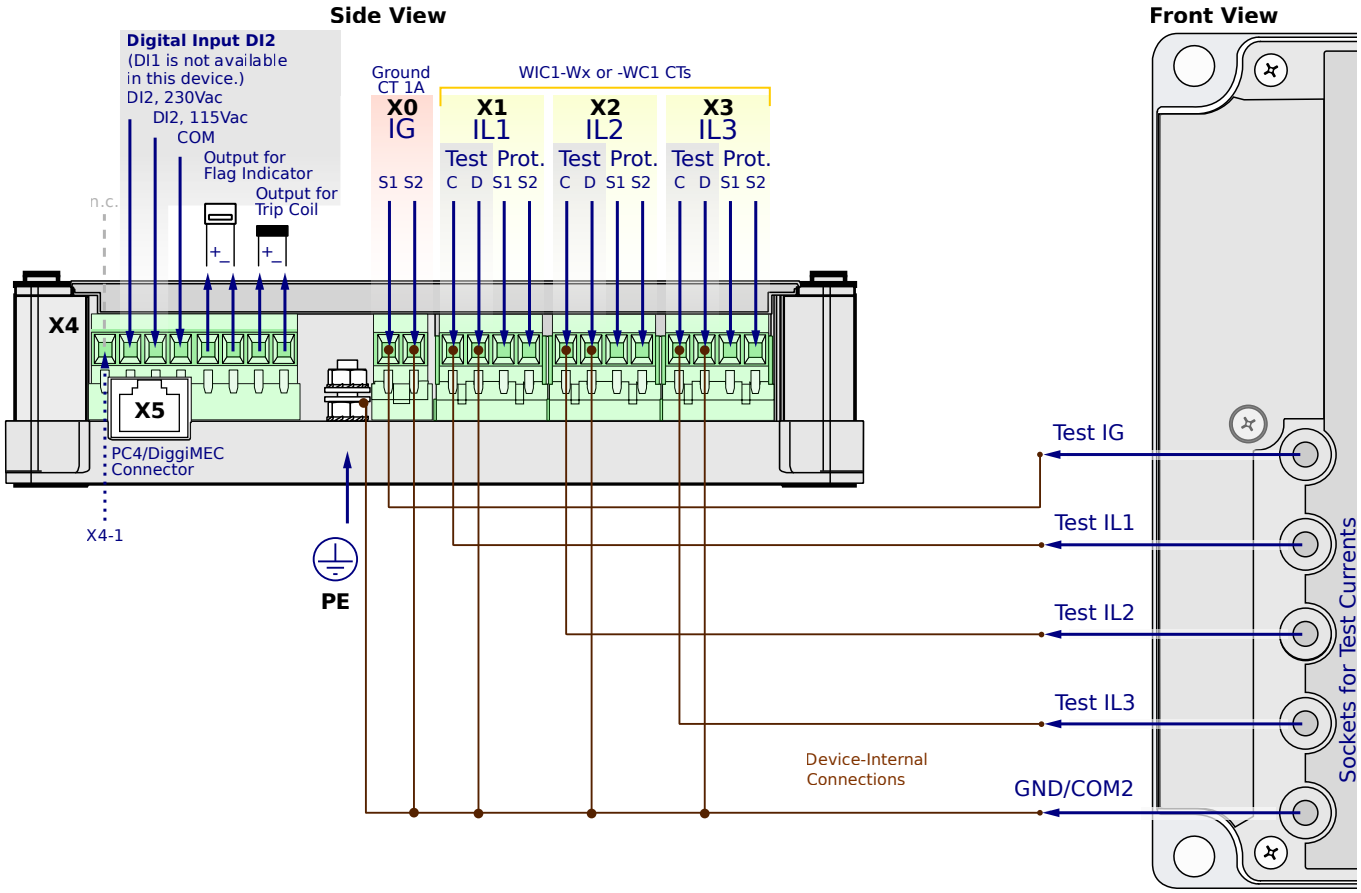


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2SA0

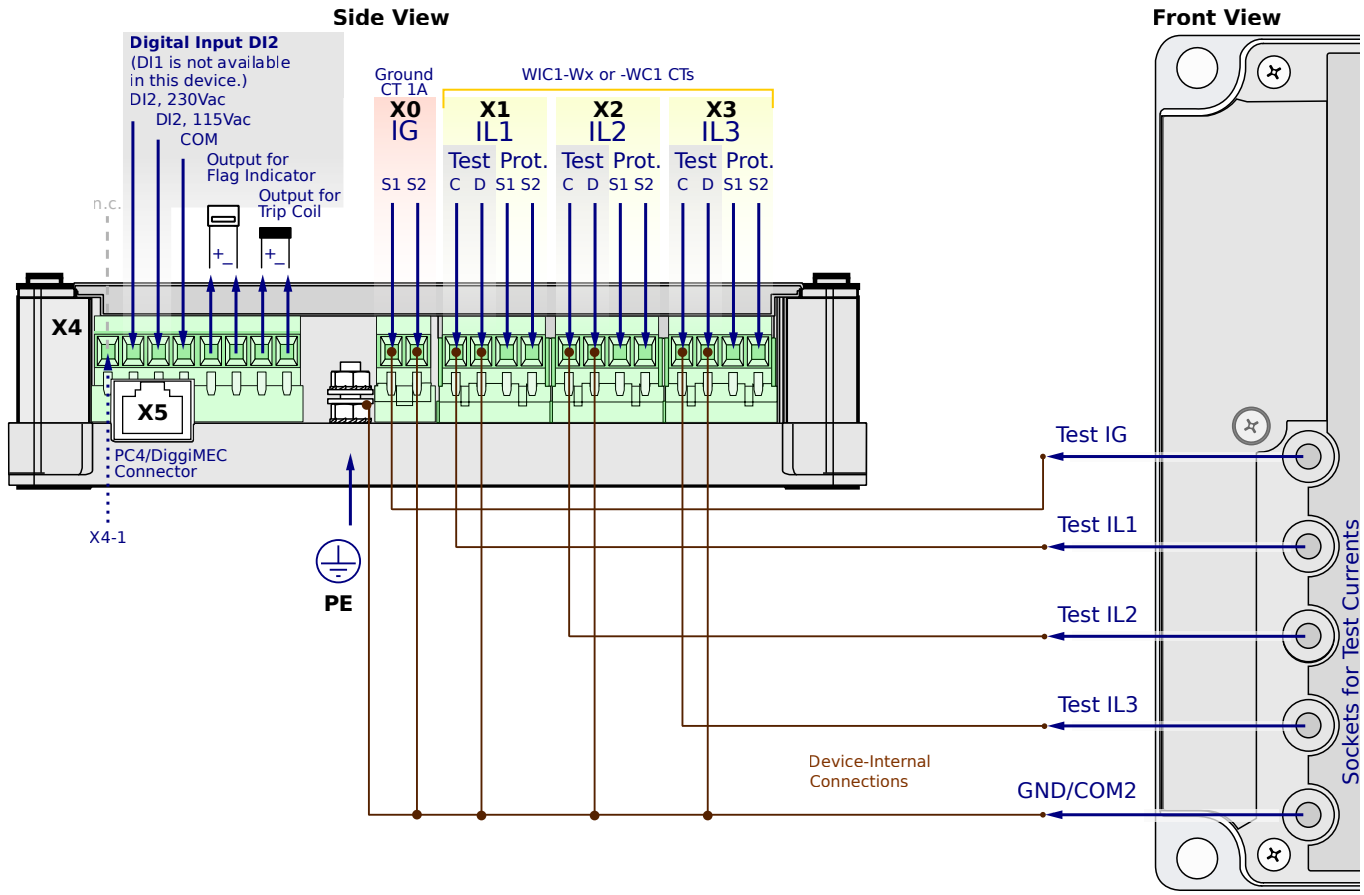


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2SAH

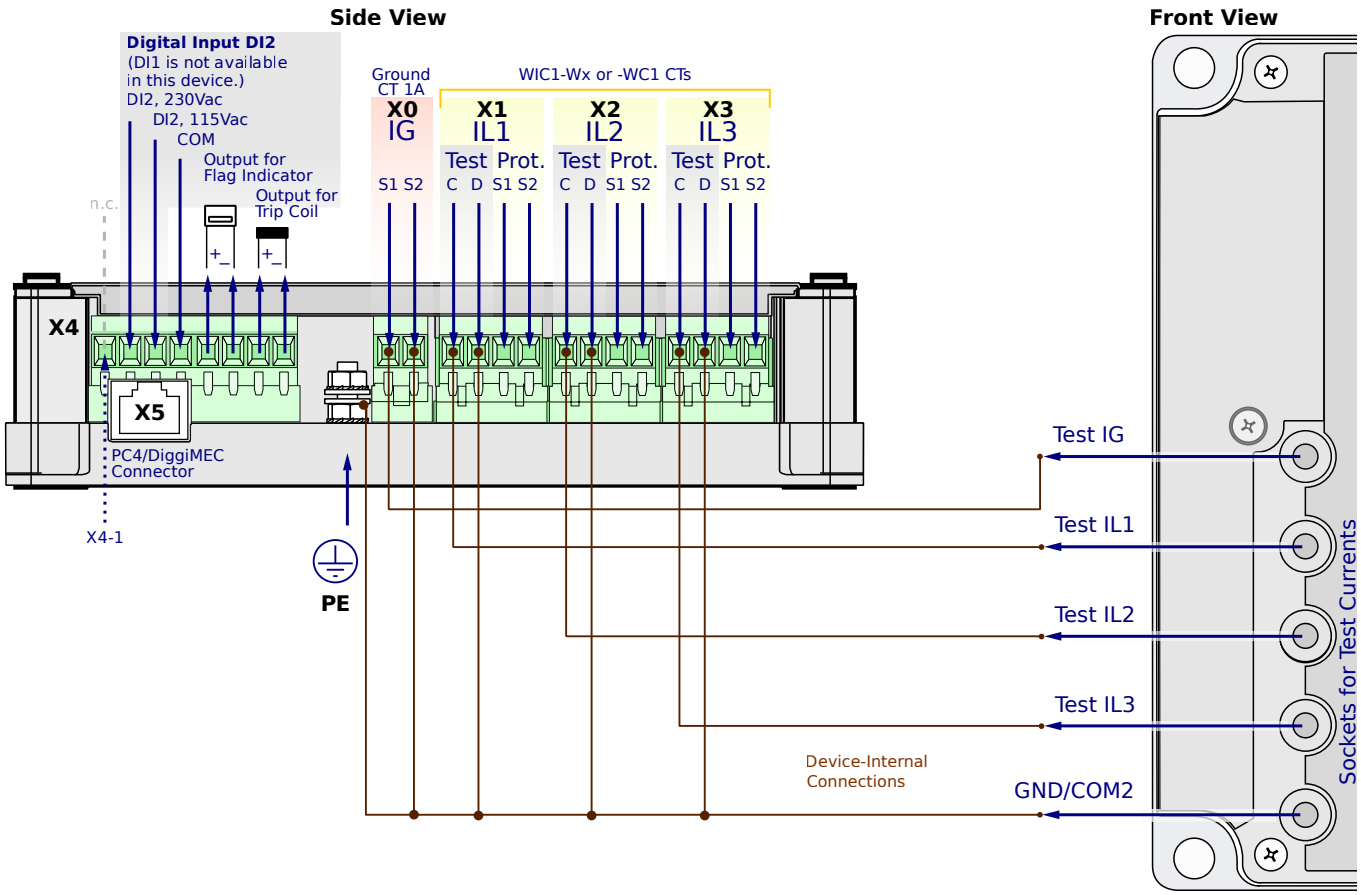


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2AA0

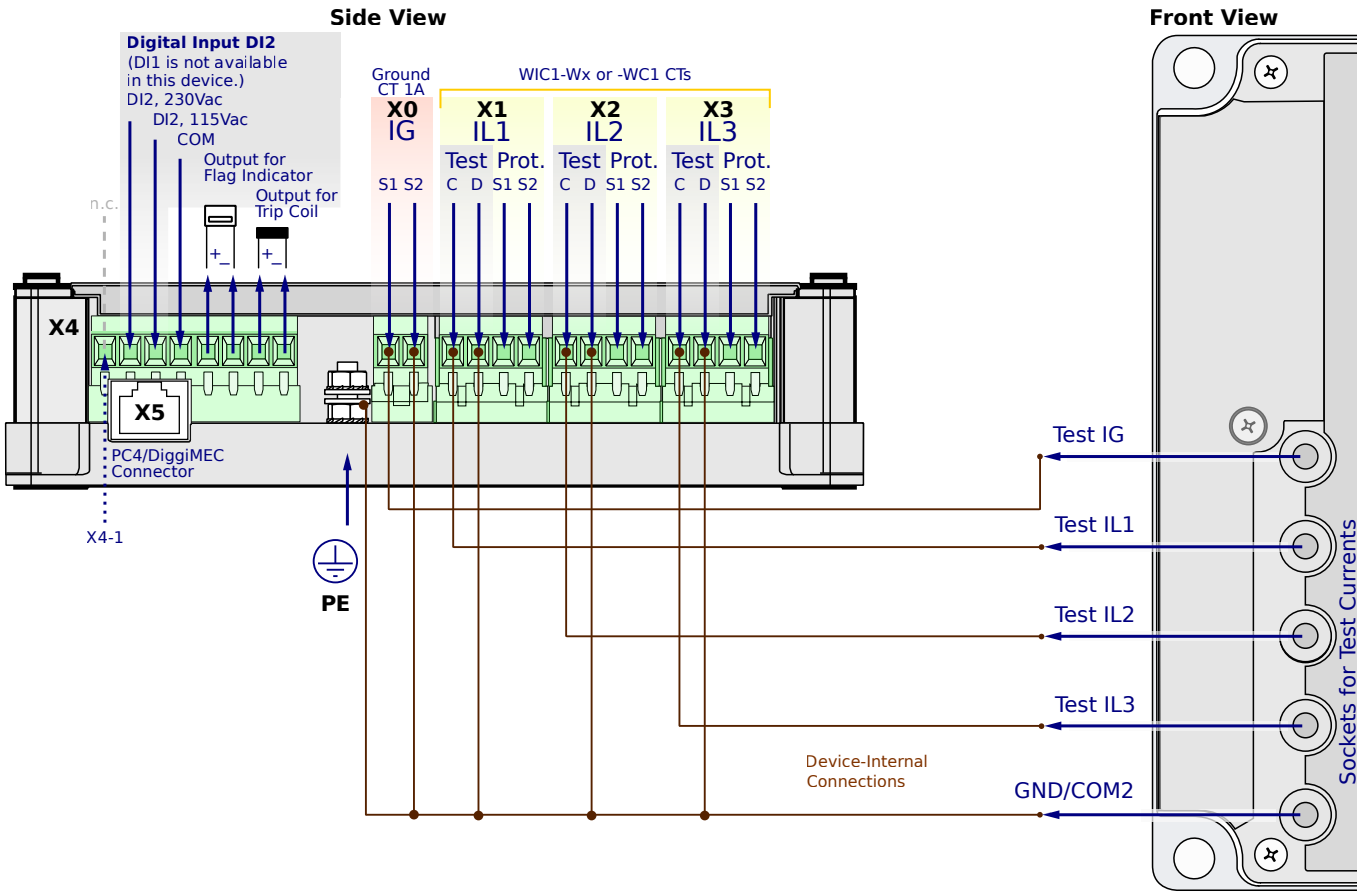


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2AAH

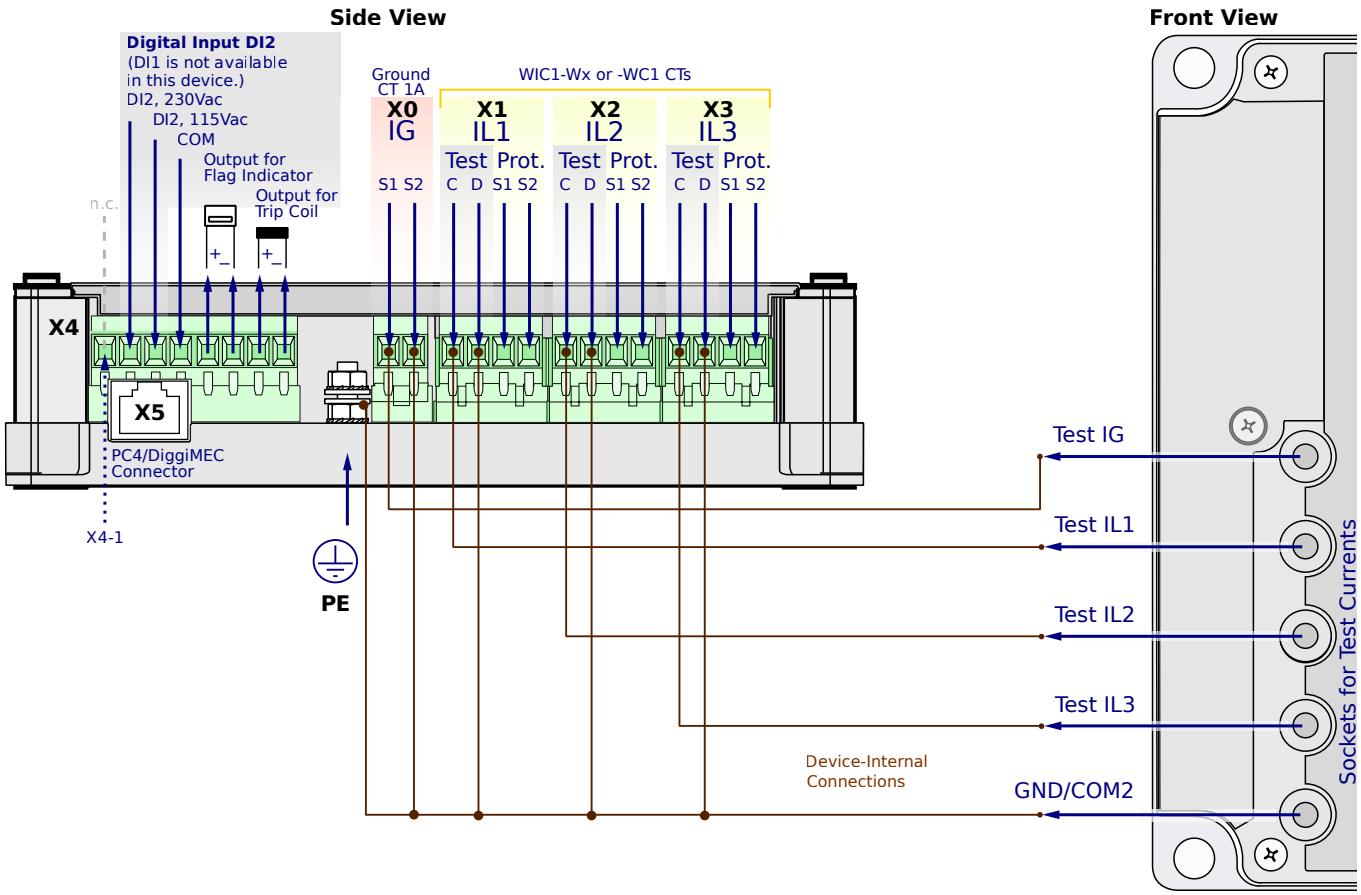


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2PA0

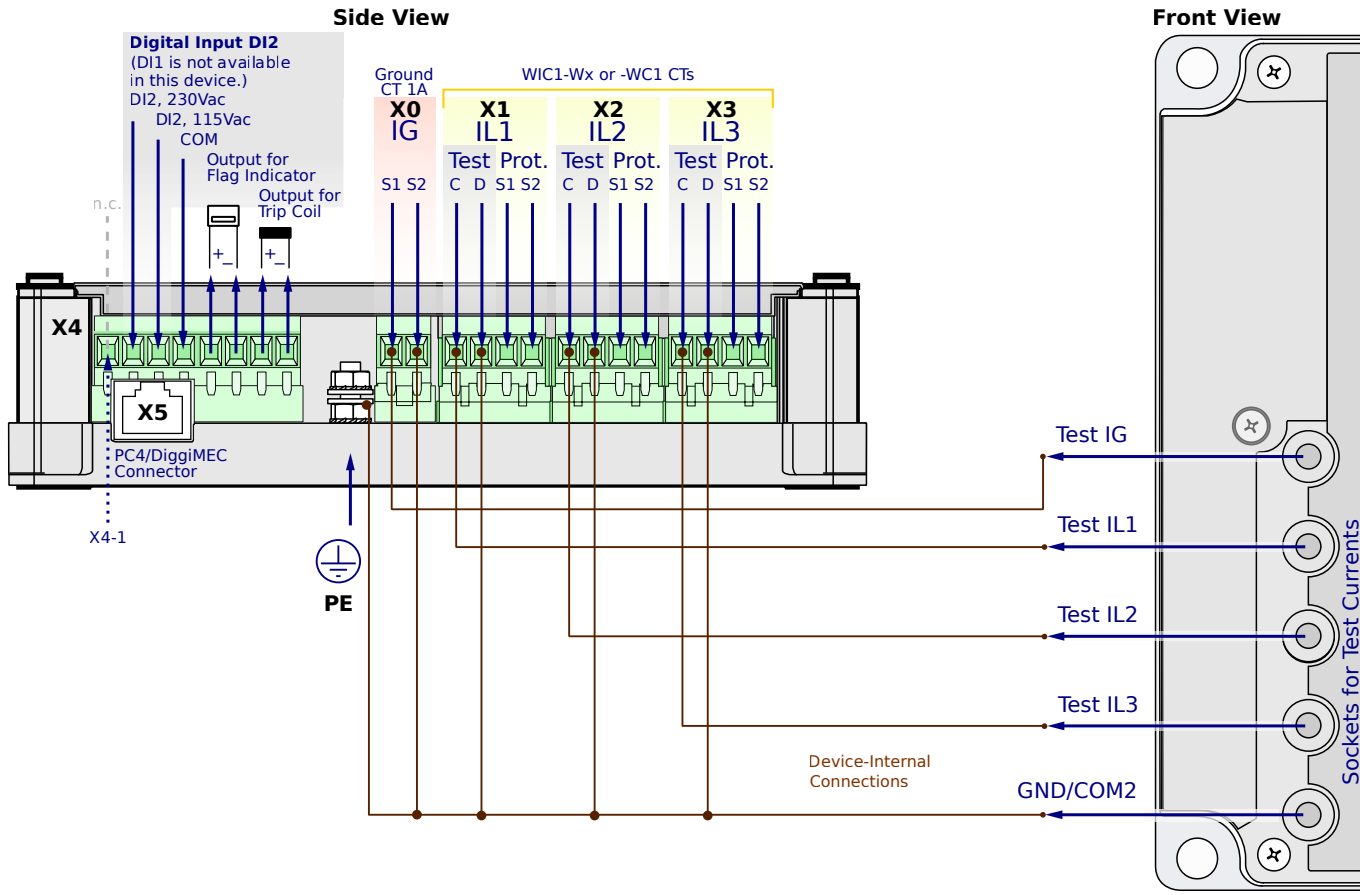


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG5CC2PAH

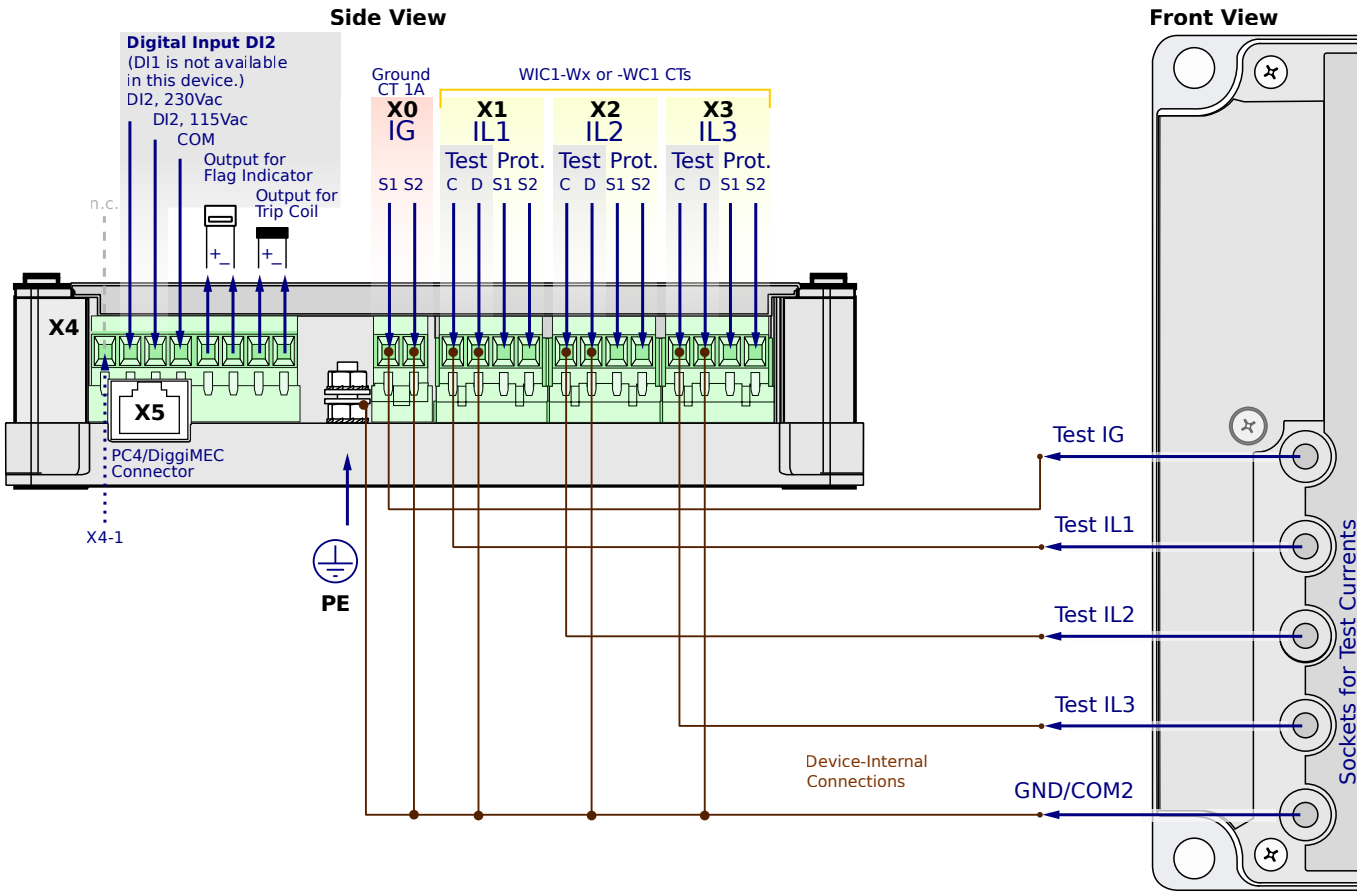


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0SA0

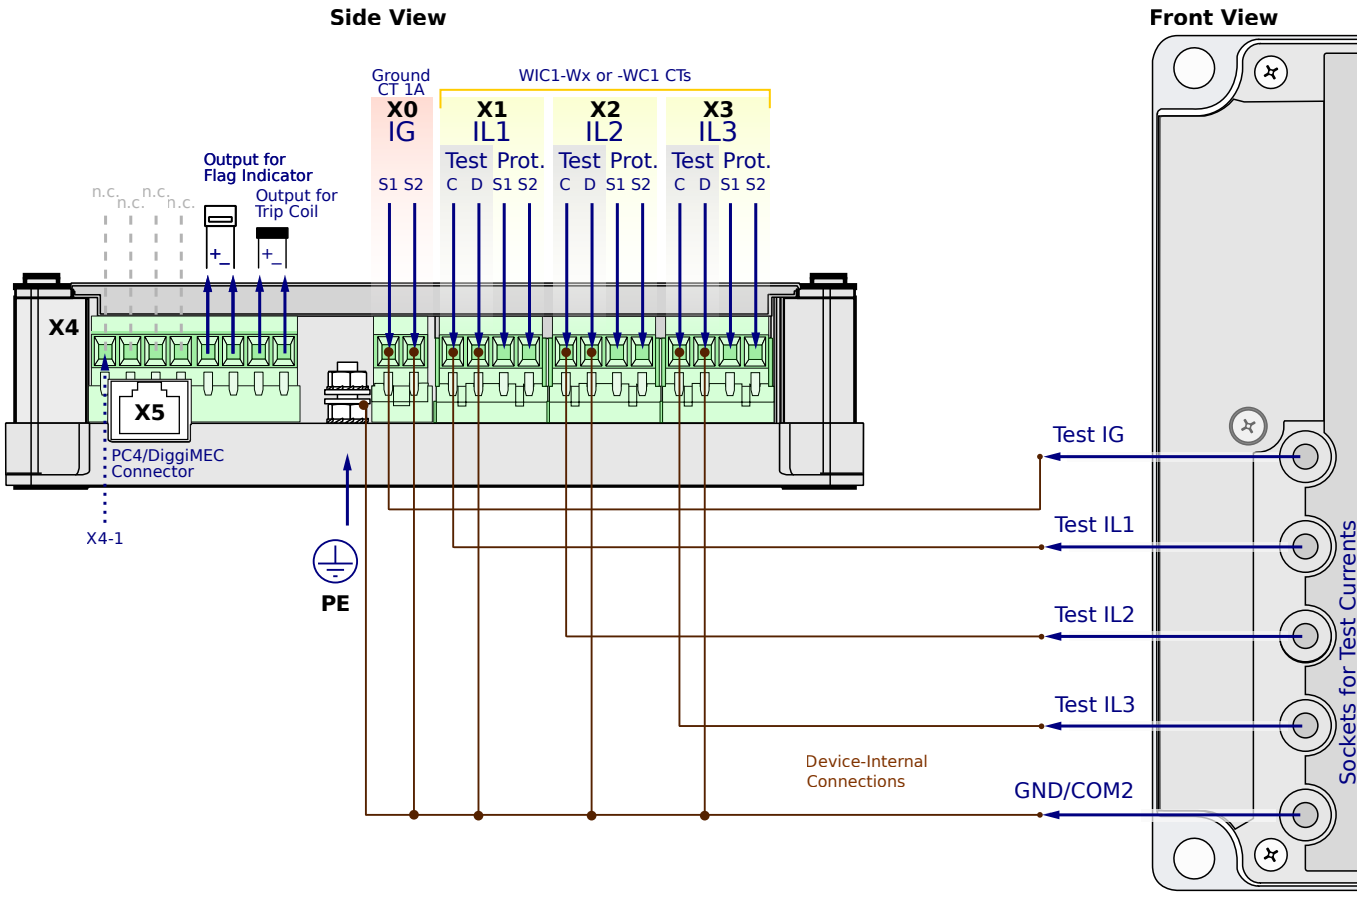


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0SAH

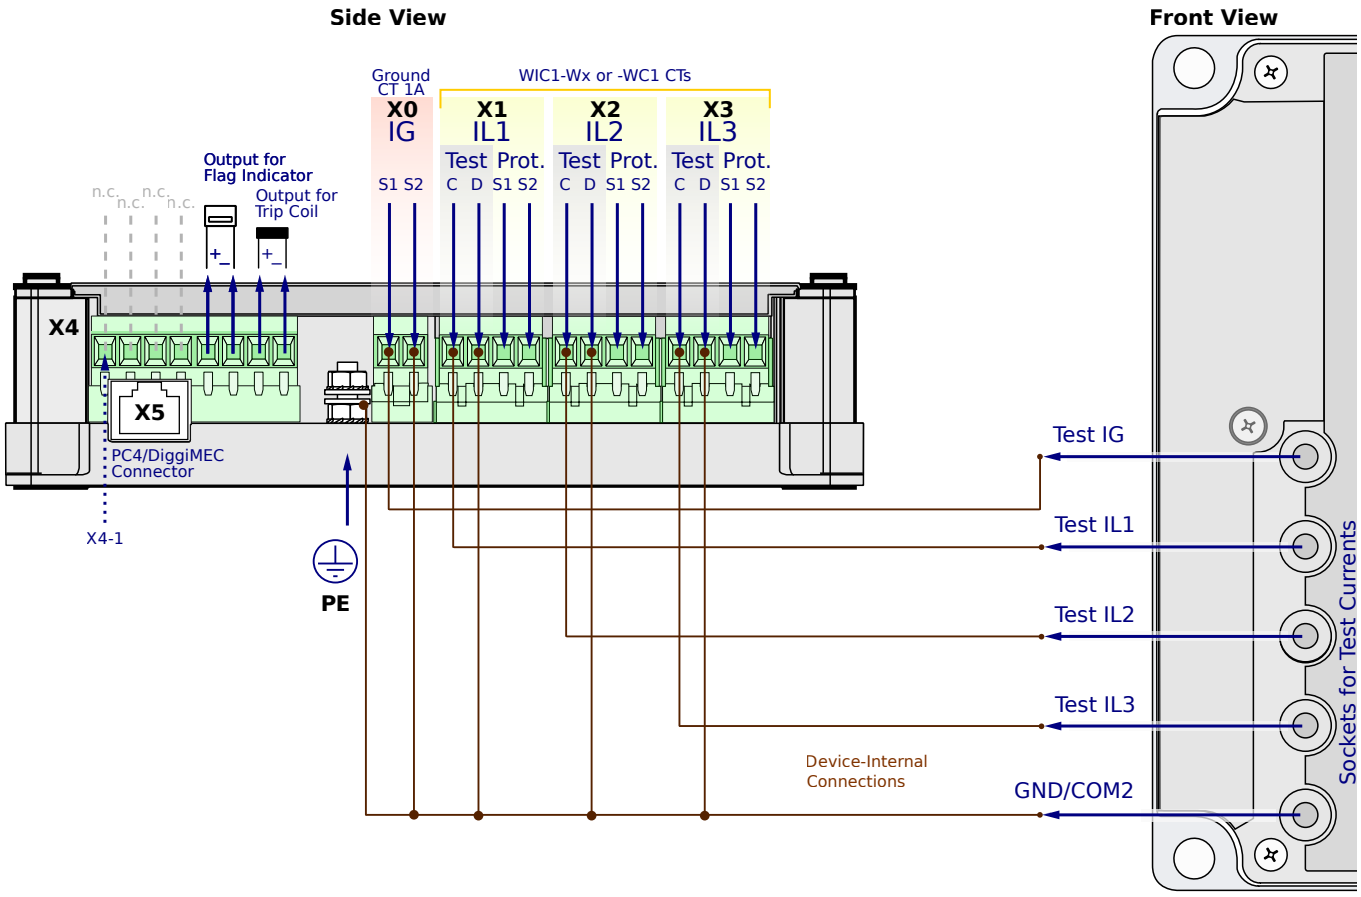


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0AA0

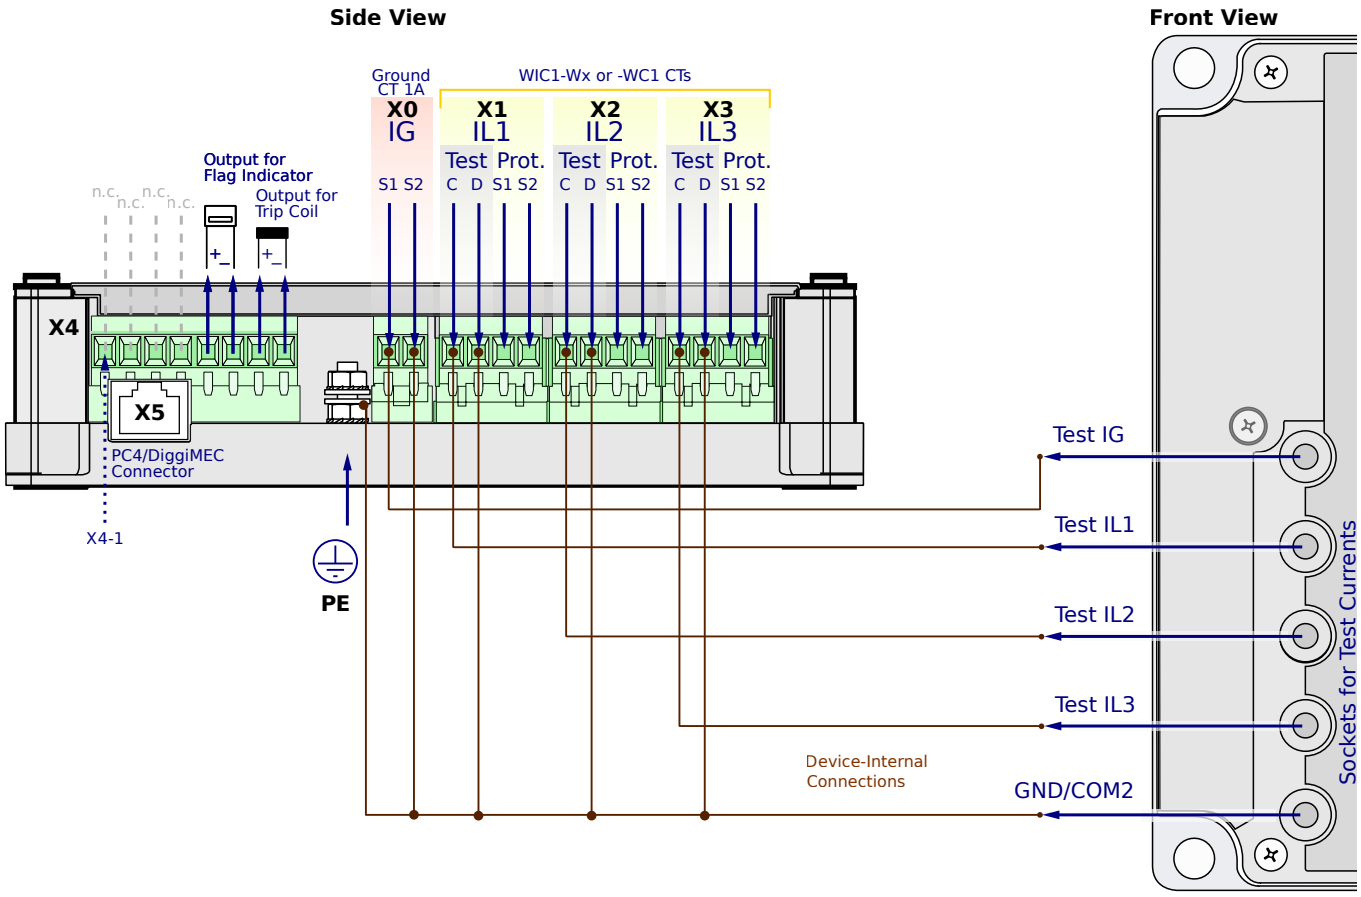


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0AAH

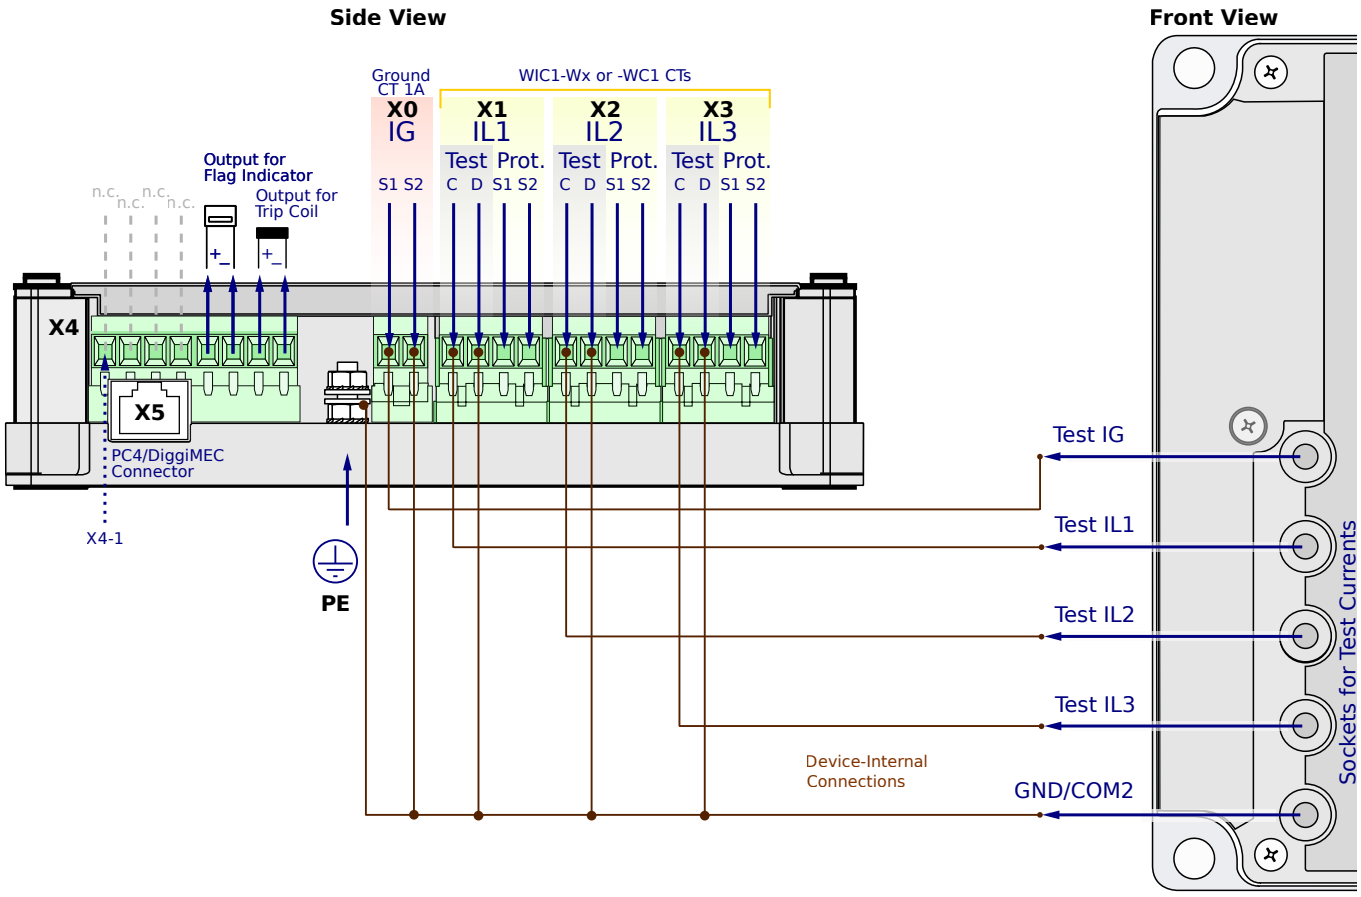


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0PA0

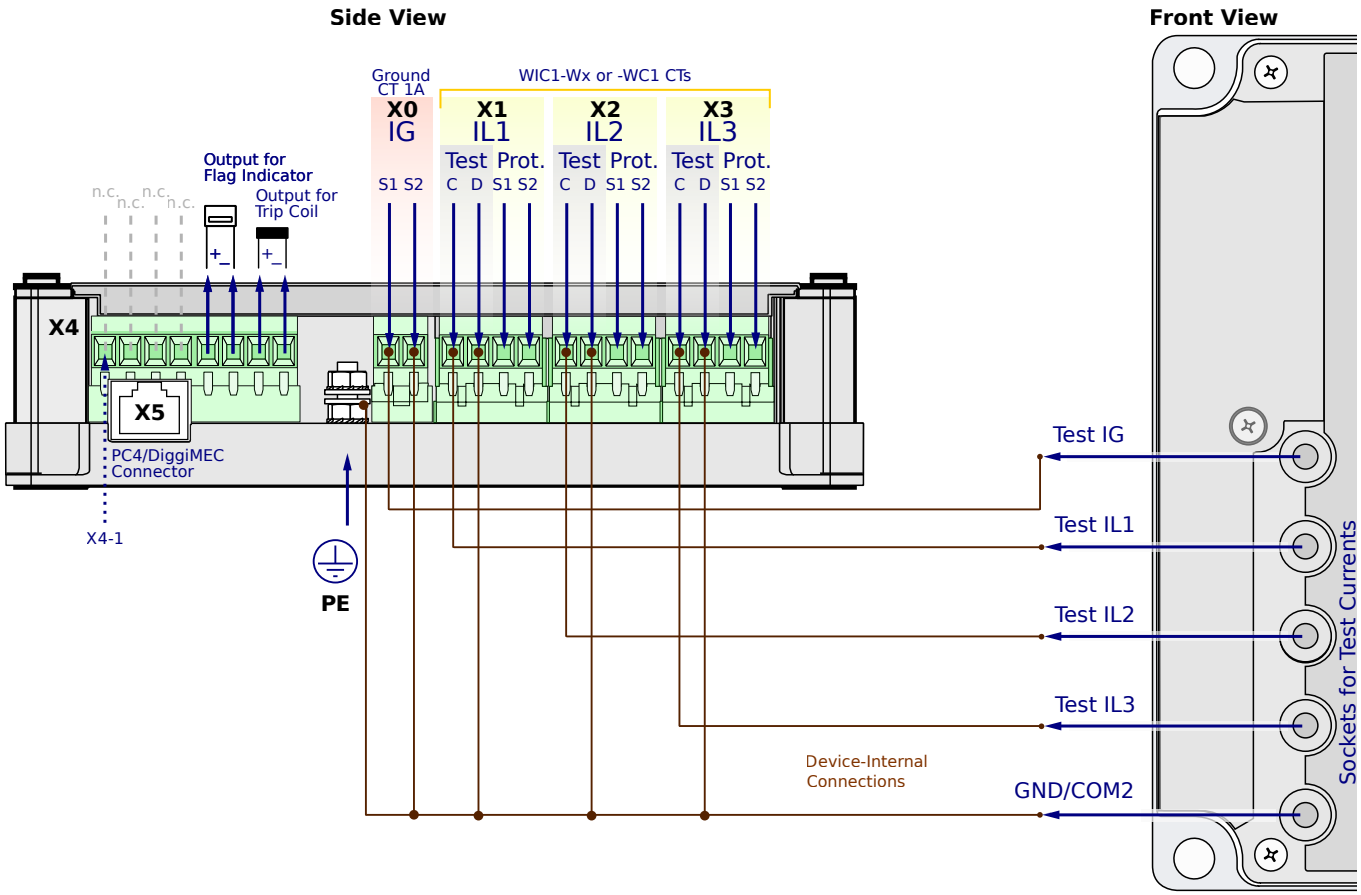


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN0PAH

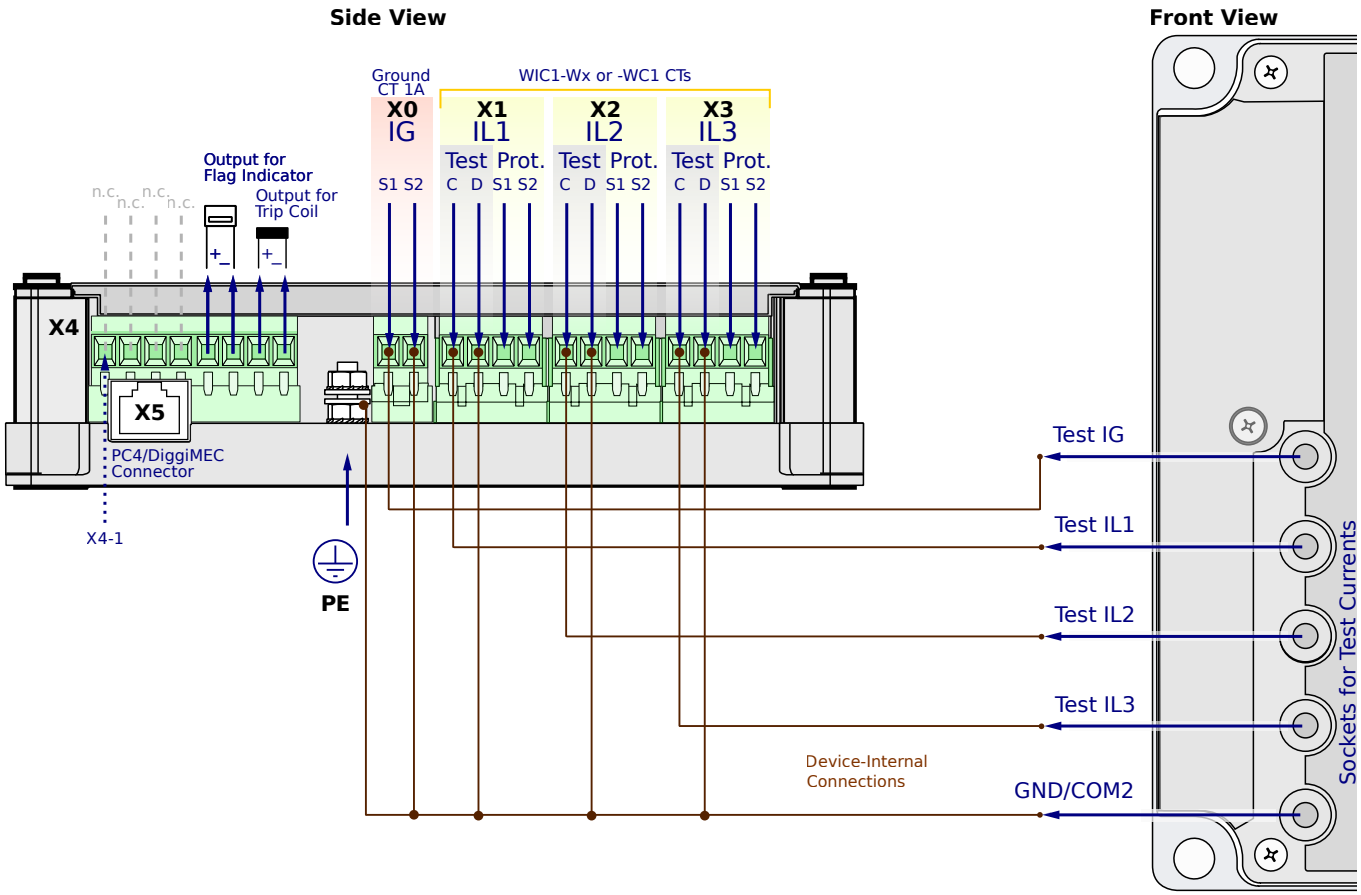


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1SA0

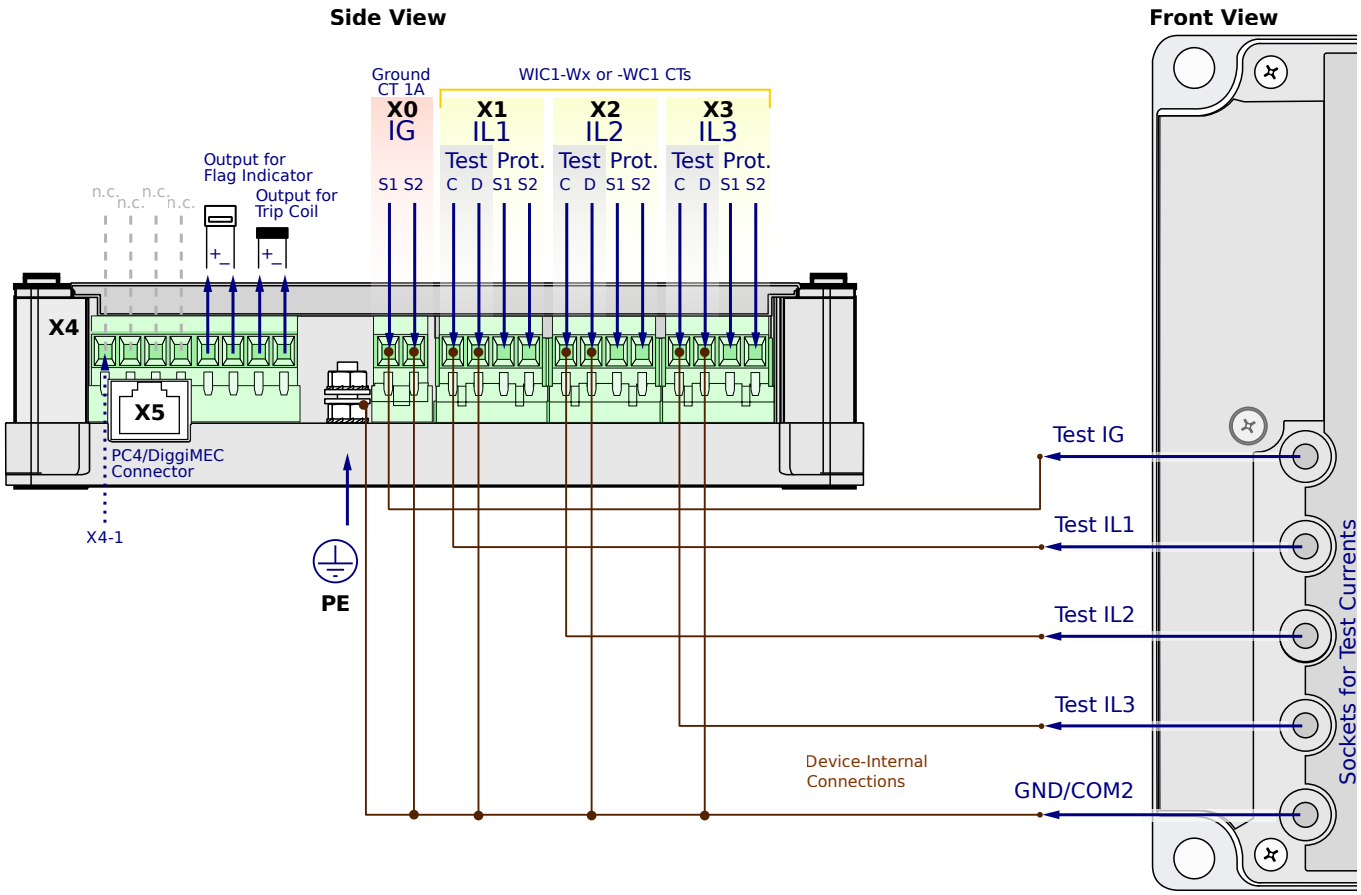


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1SAH

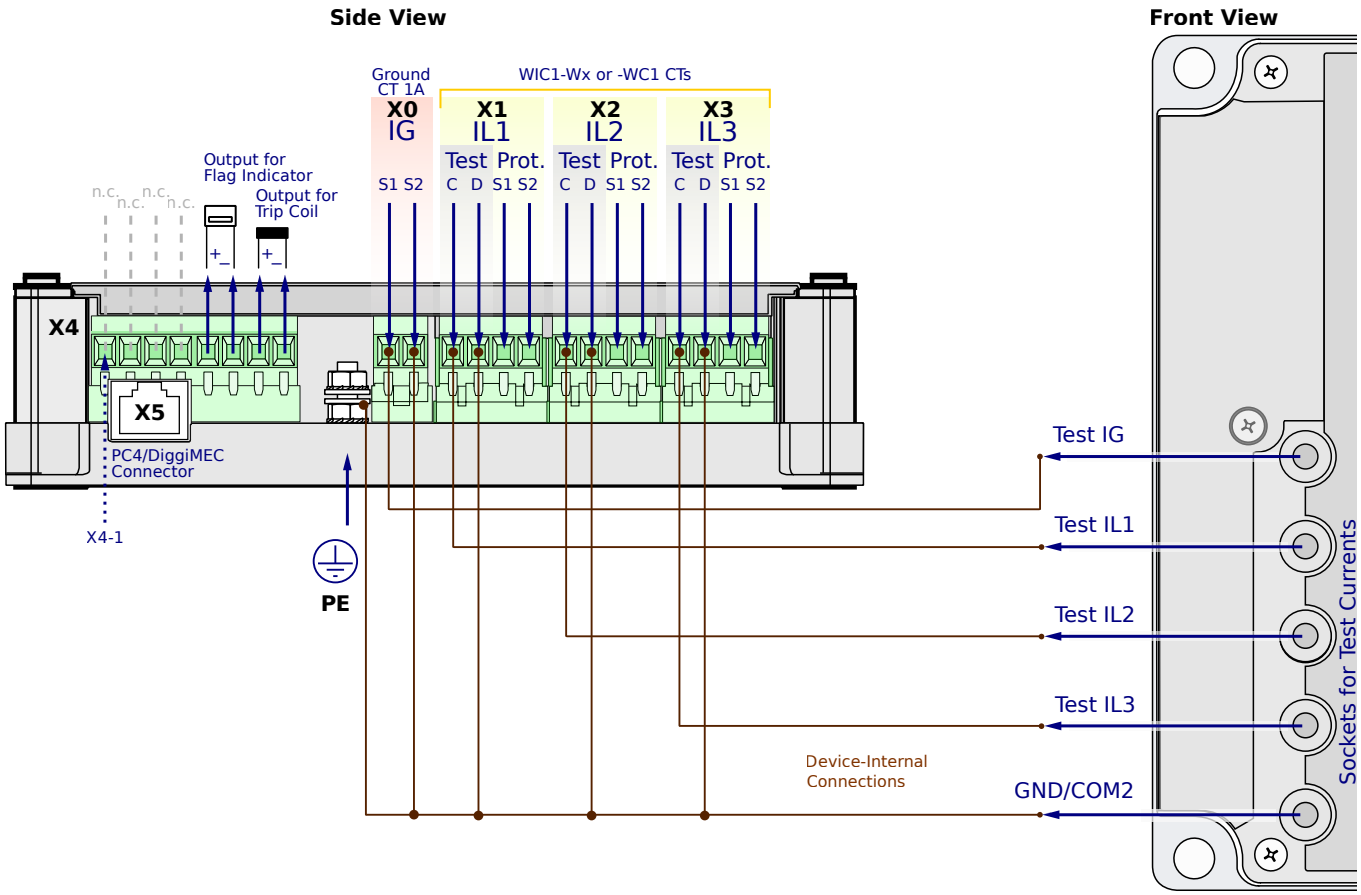


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1AA0

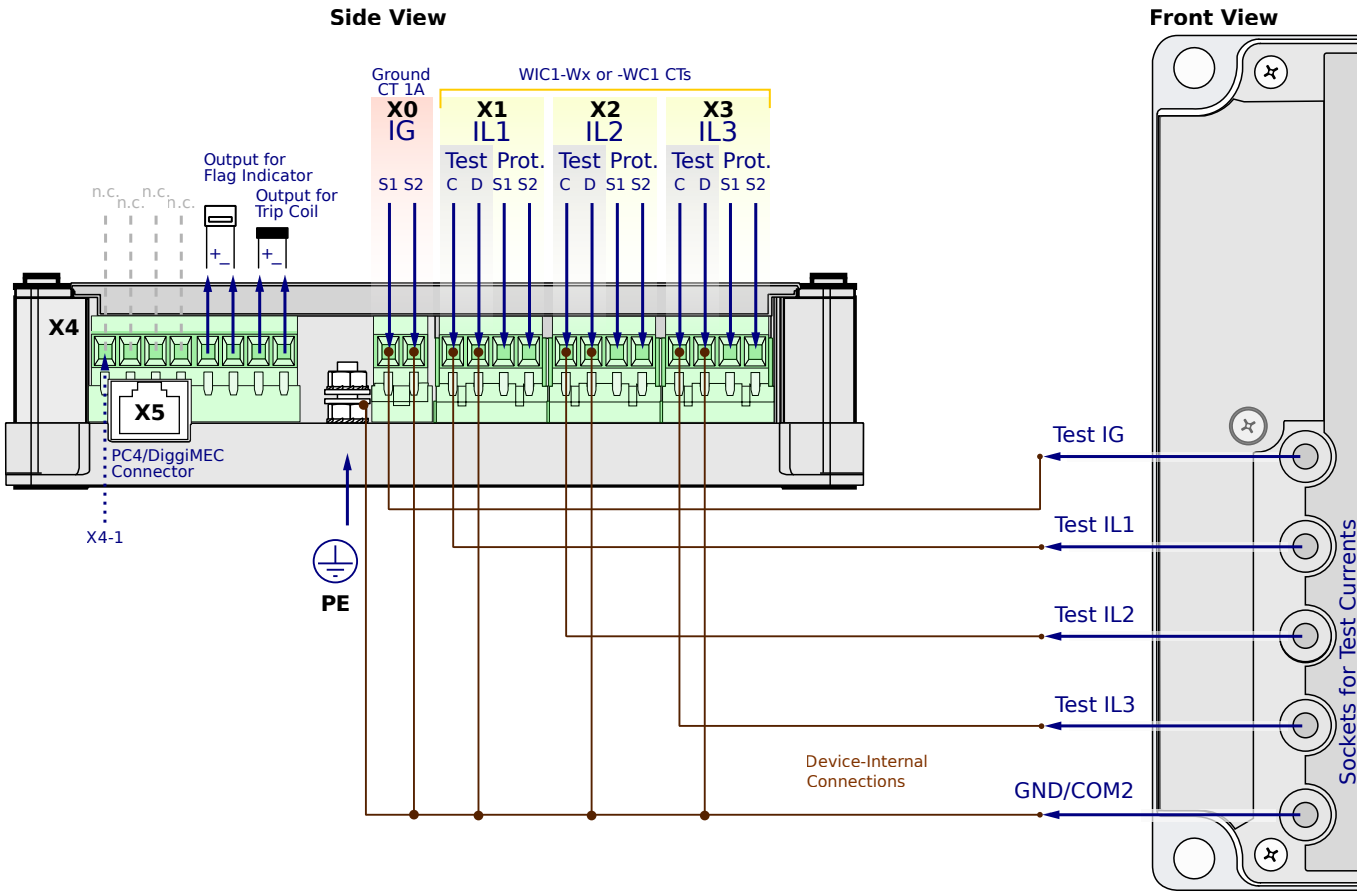


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1AAH

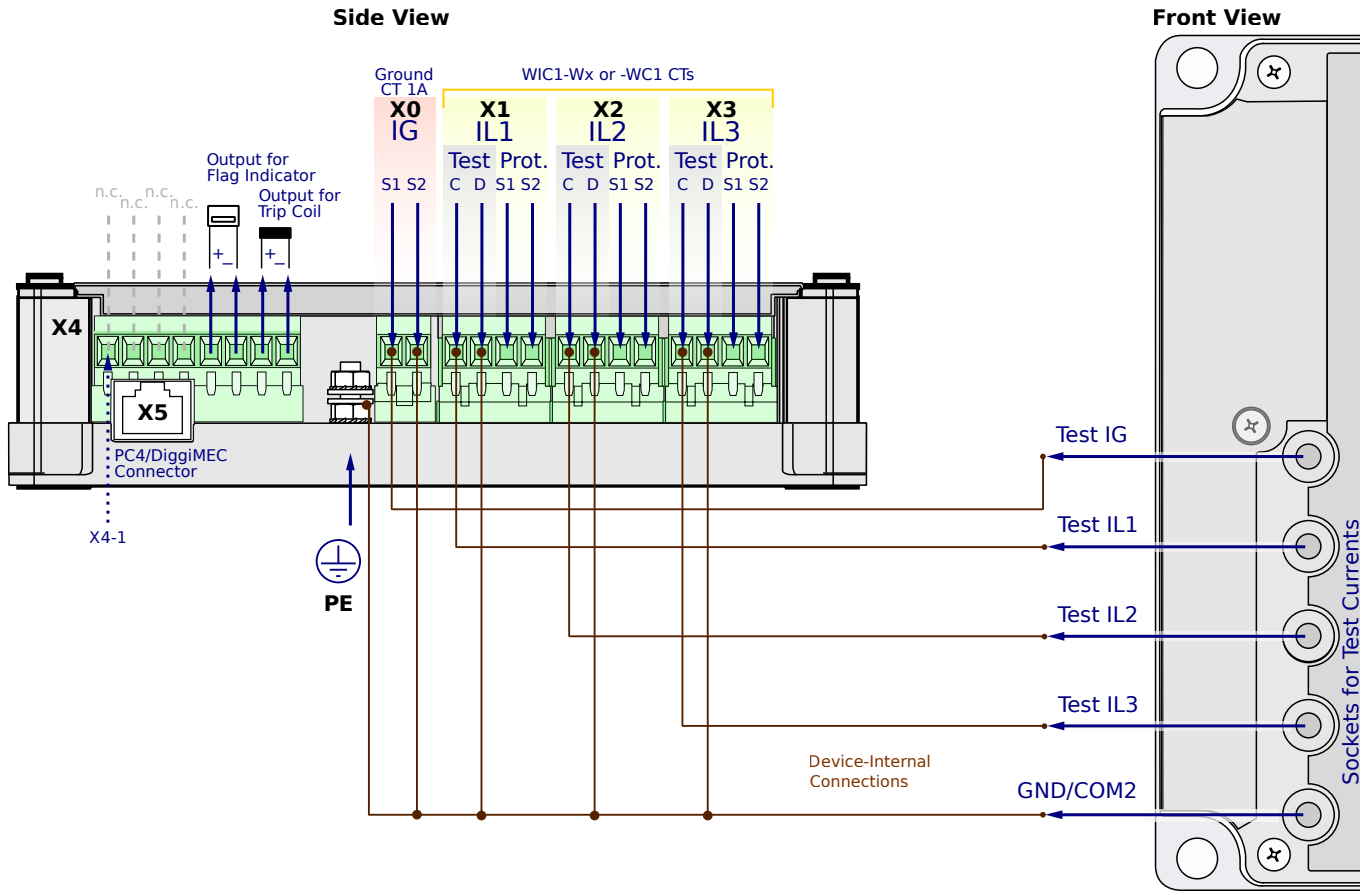


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1PA0

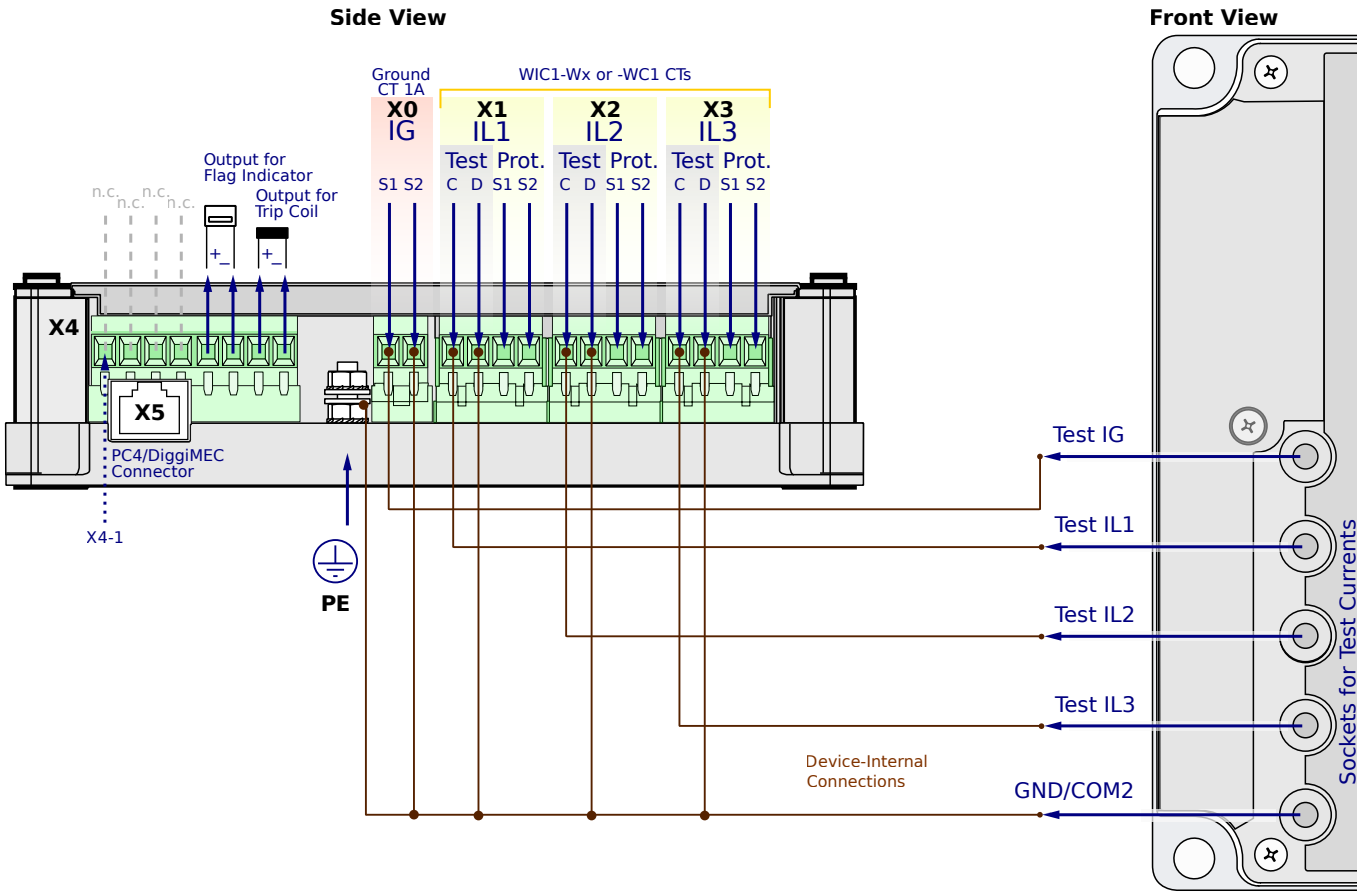


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN1PAH

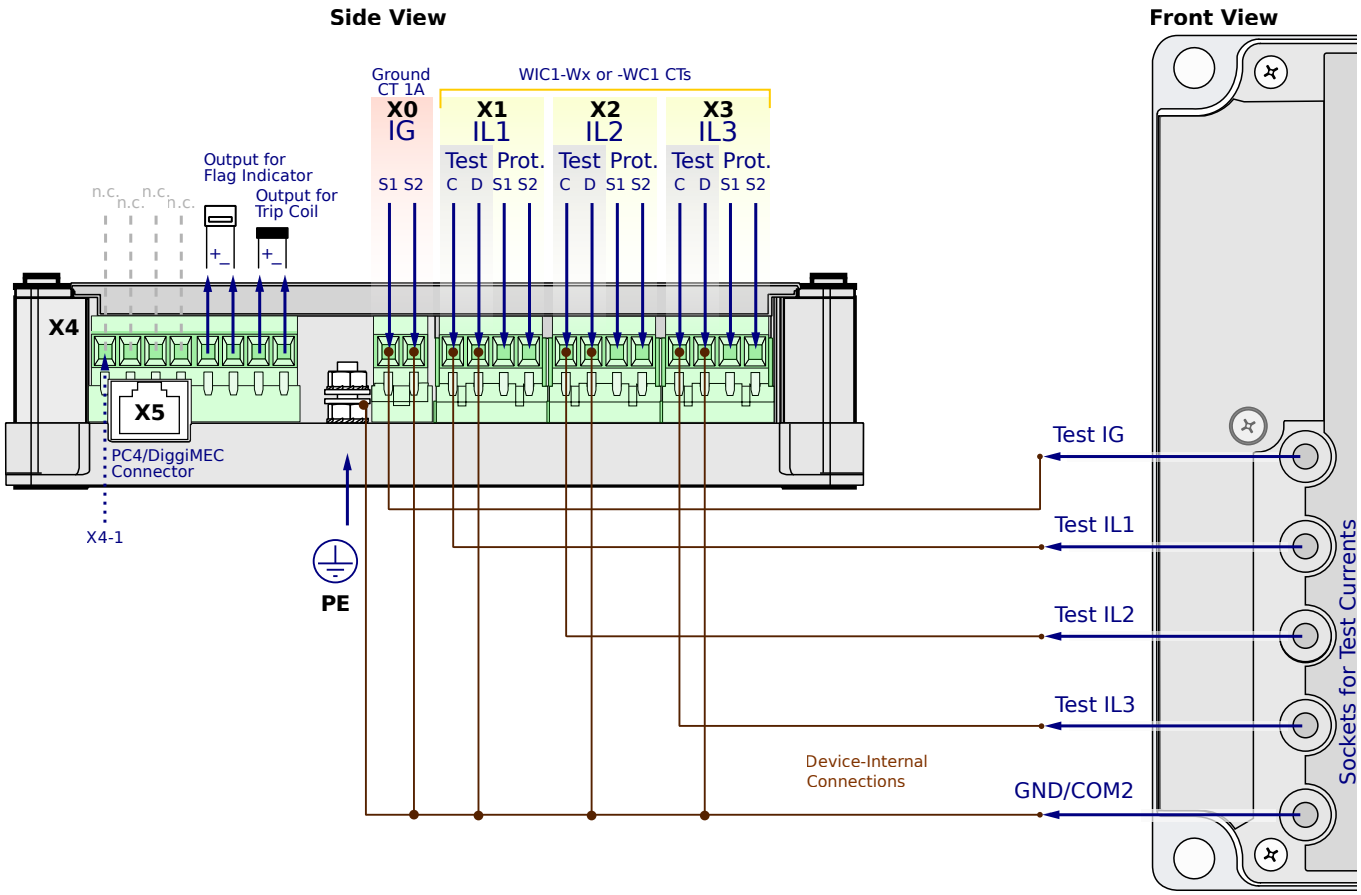


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2SA0

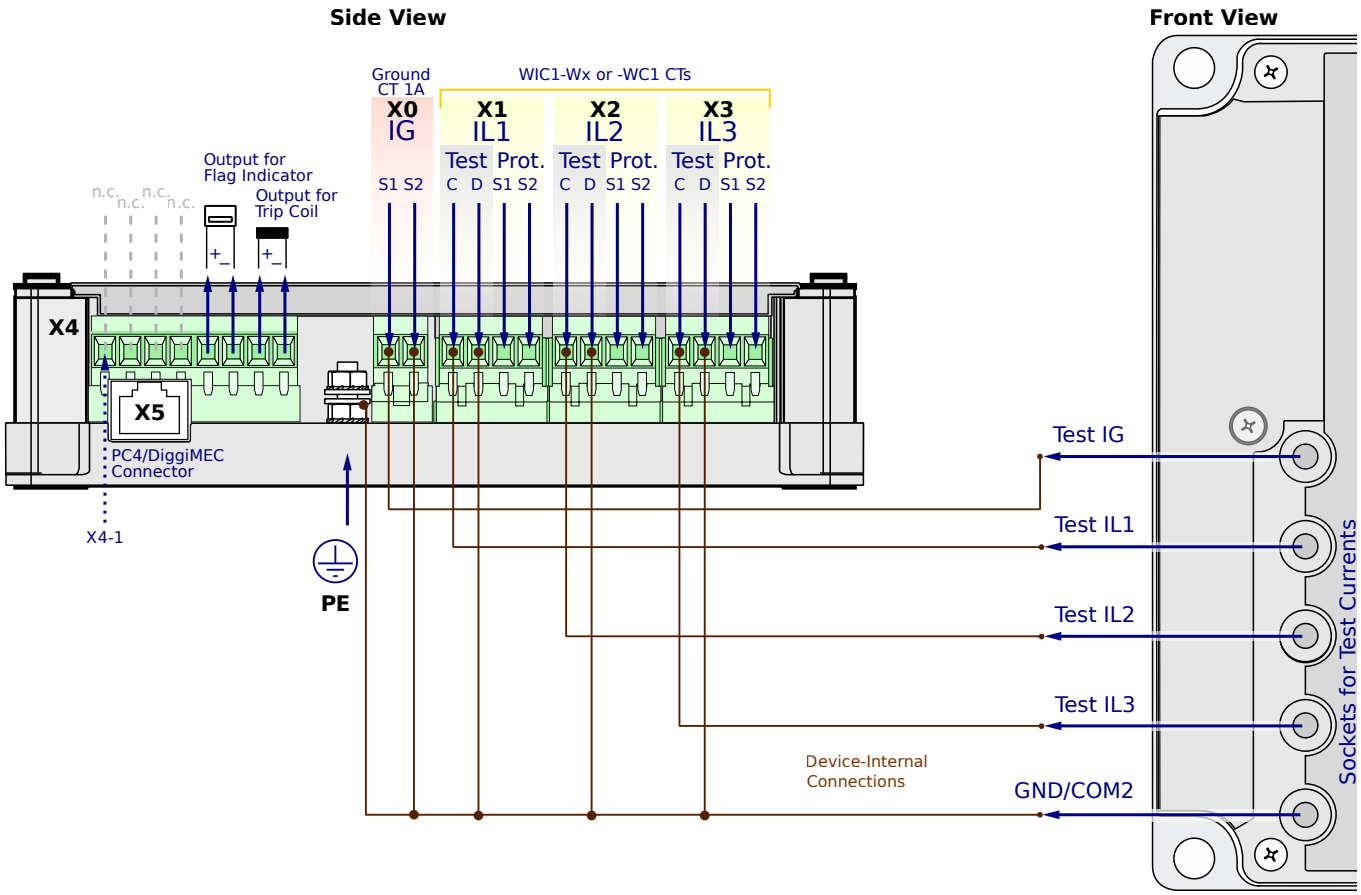


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2SAH

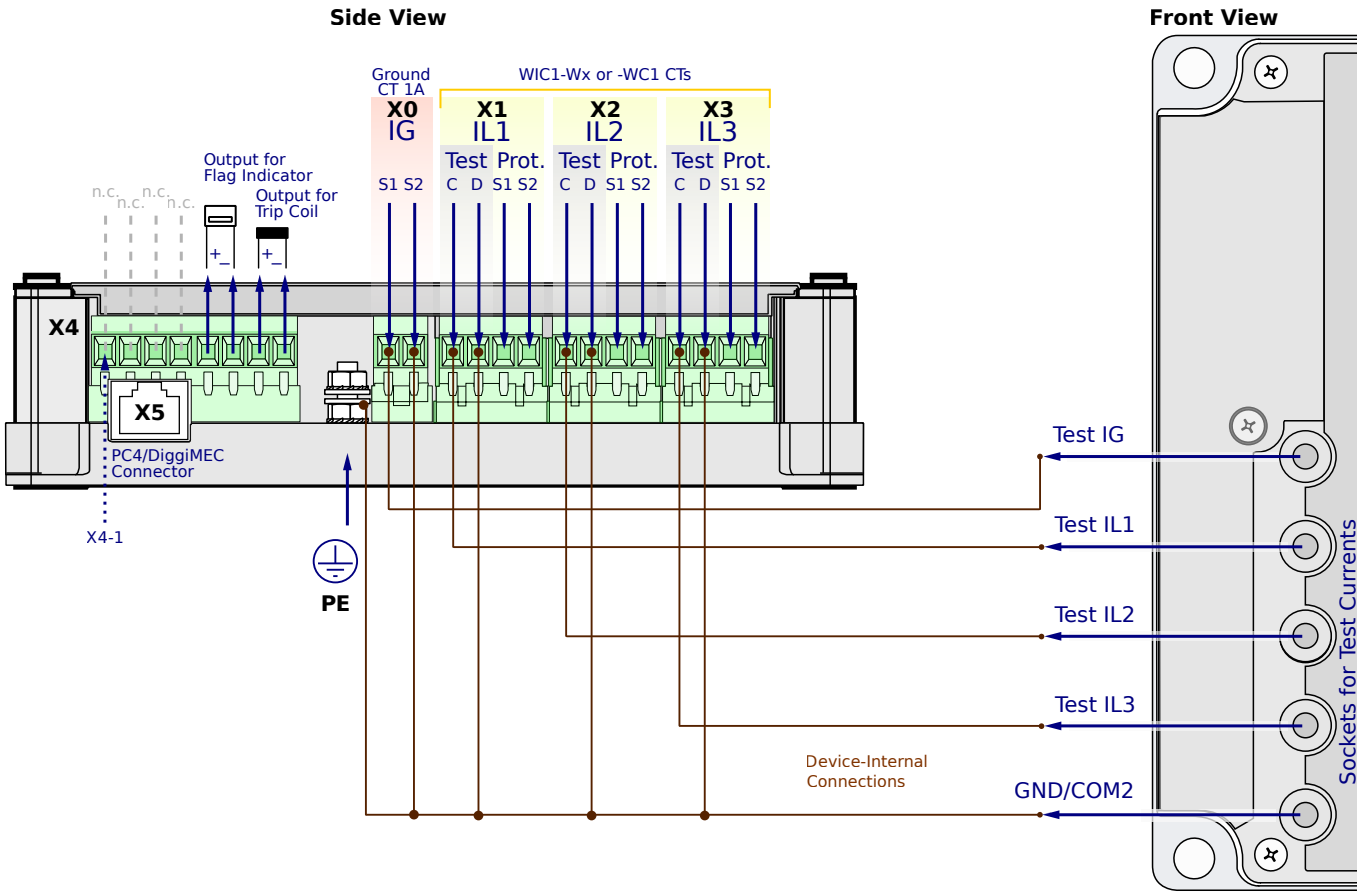


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2AA0

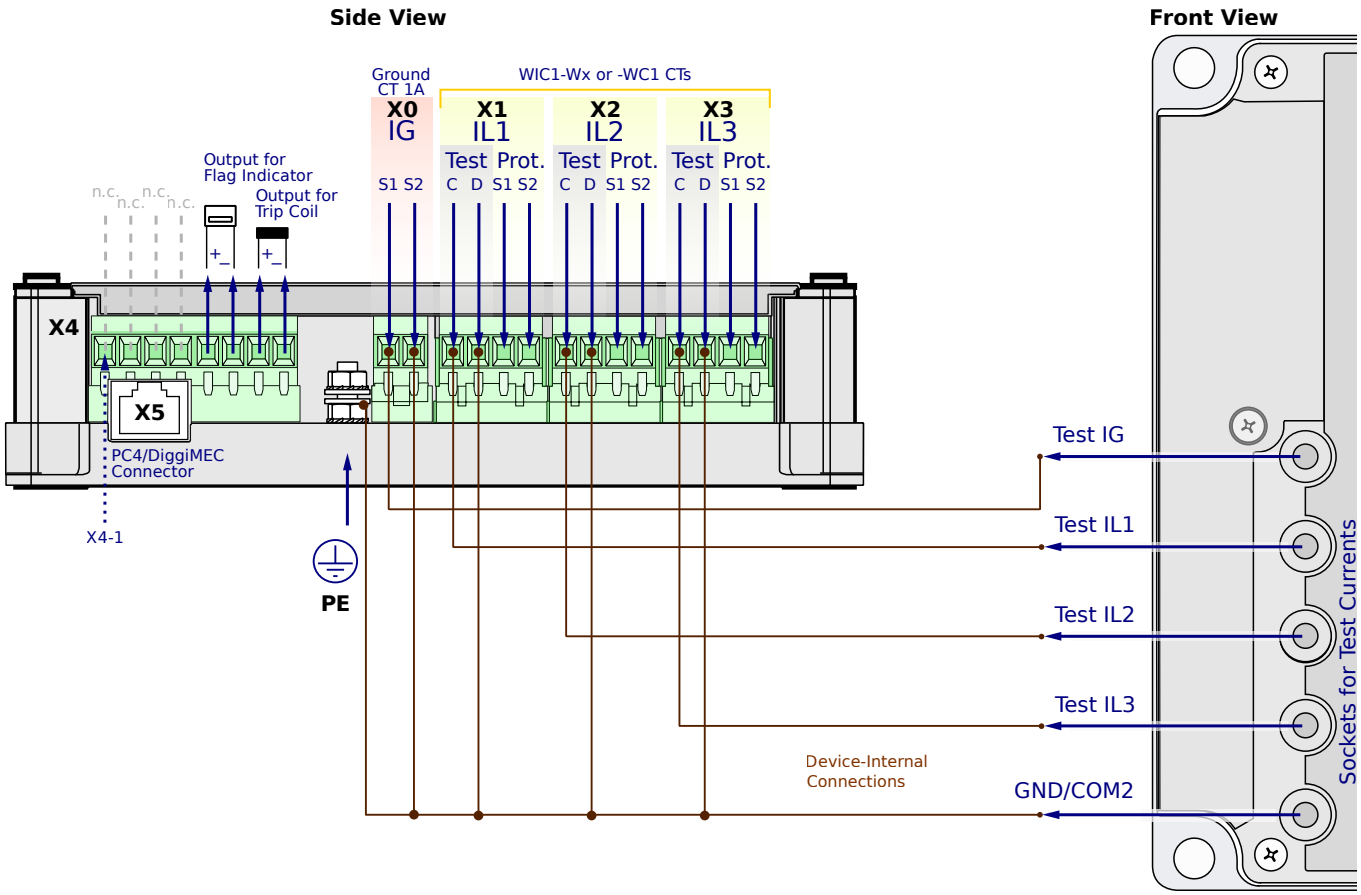


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2AAH

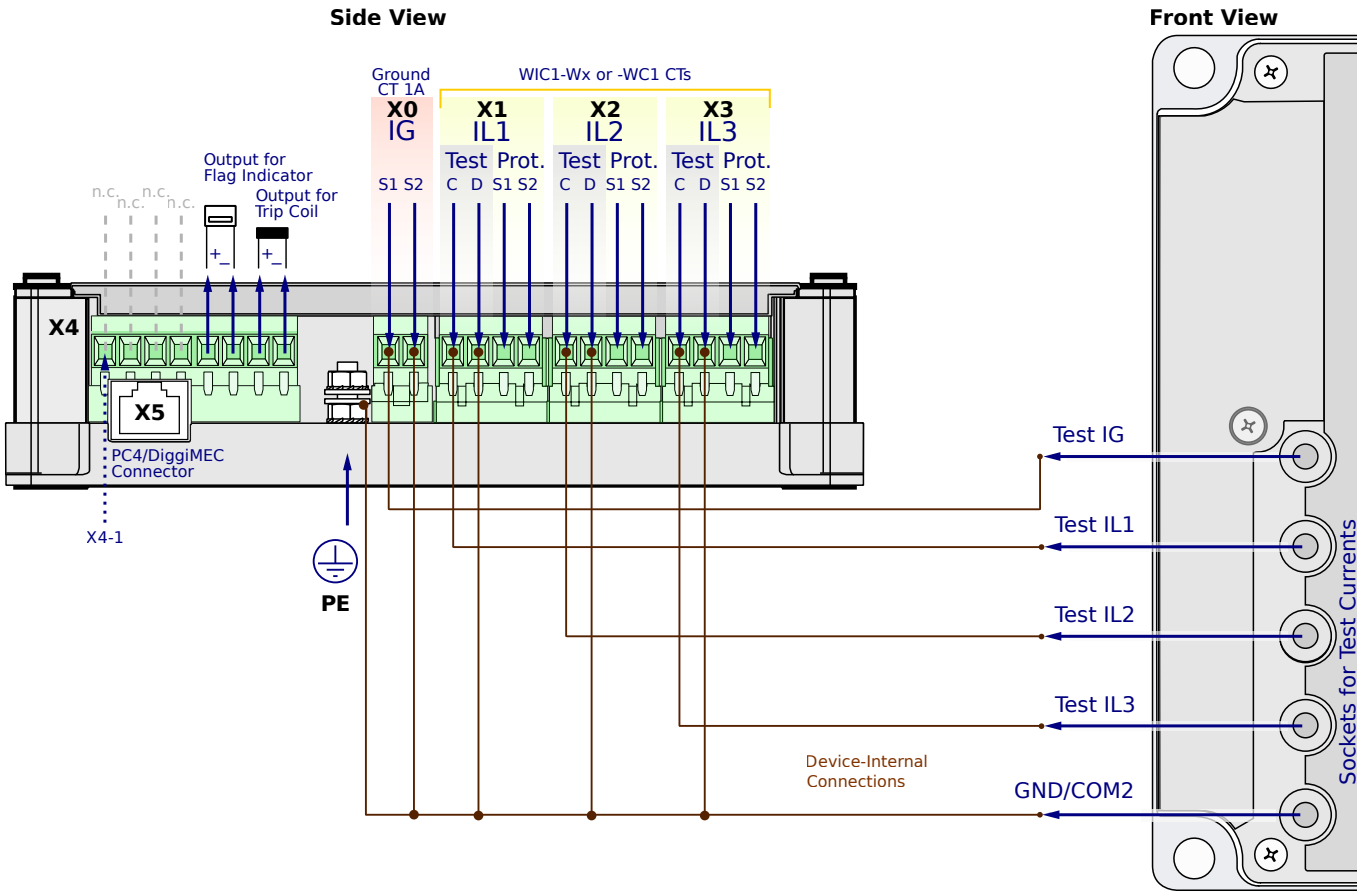


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2PA0

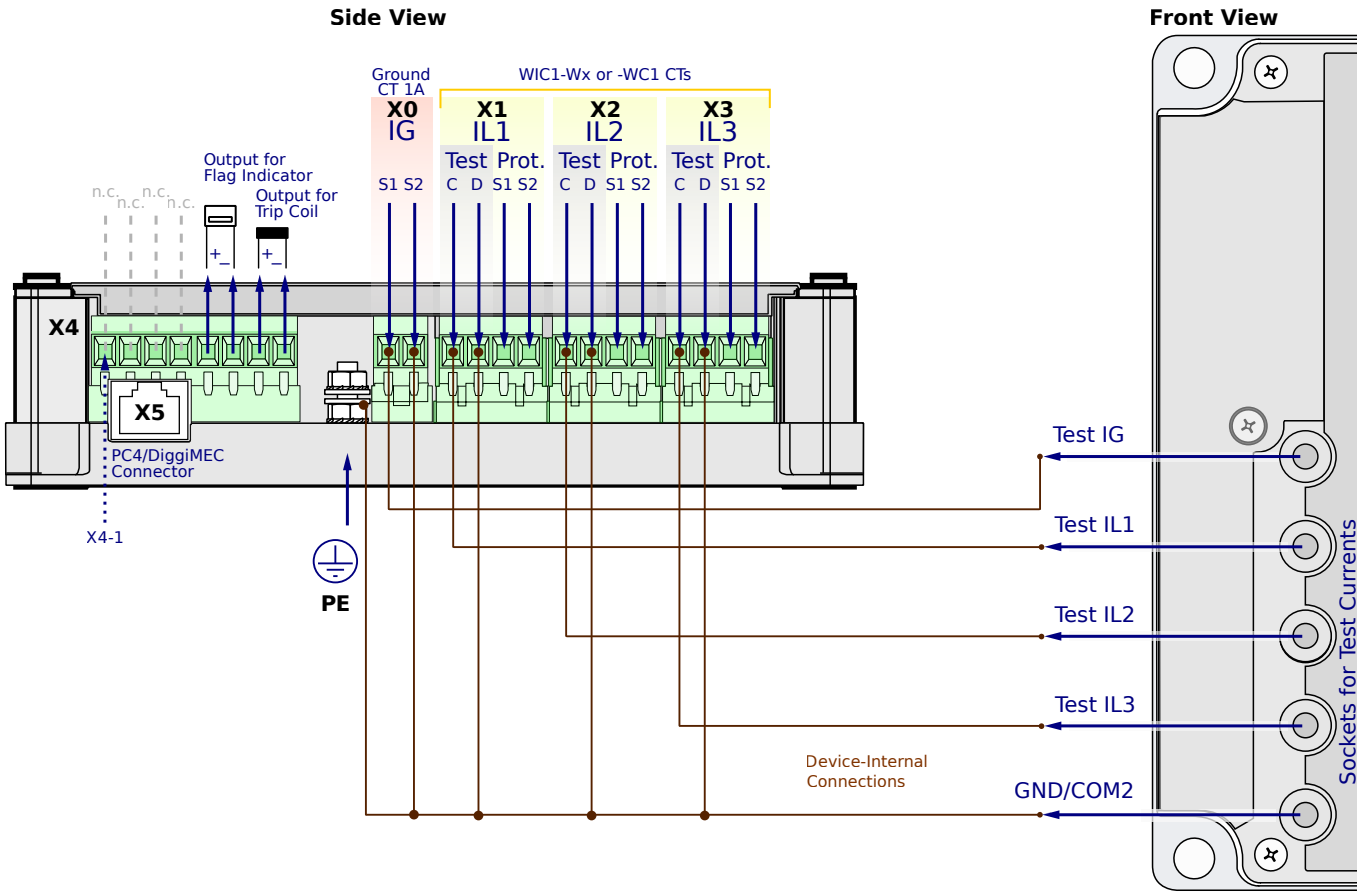


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NN2PAH

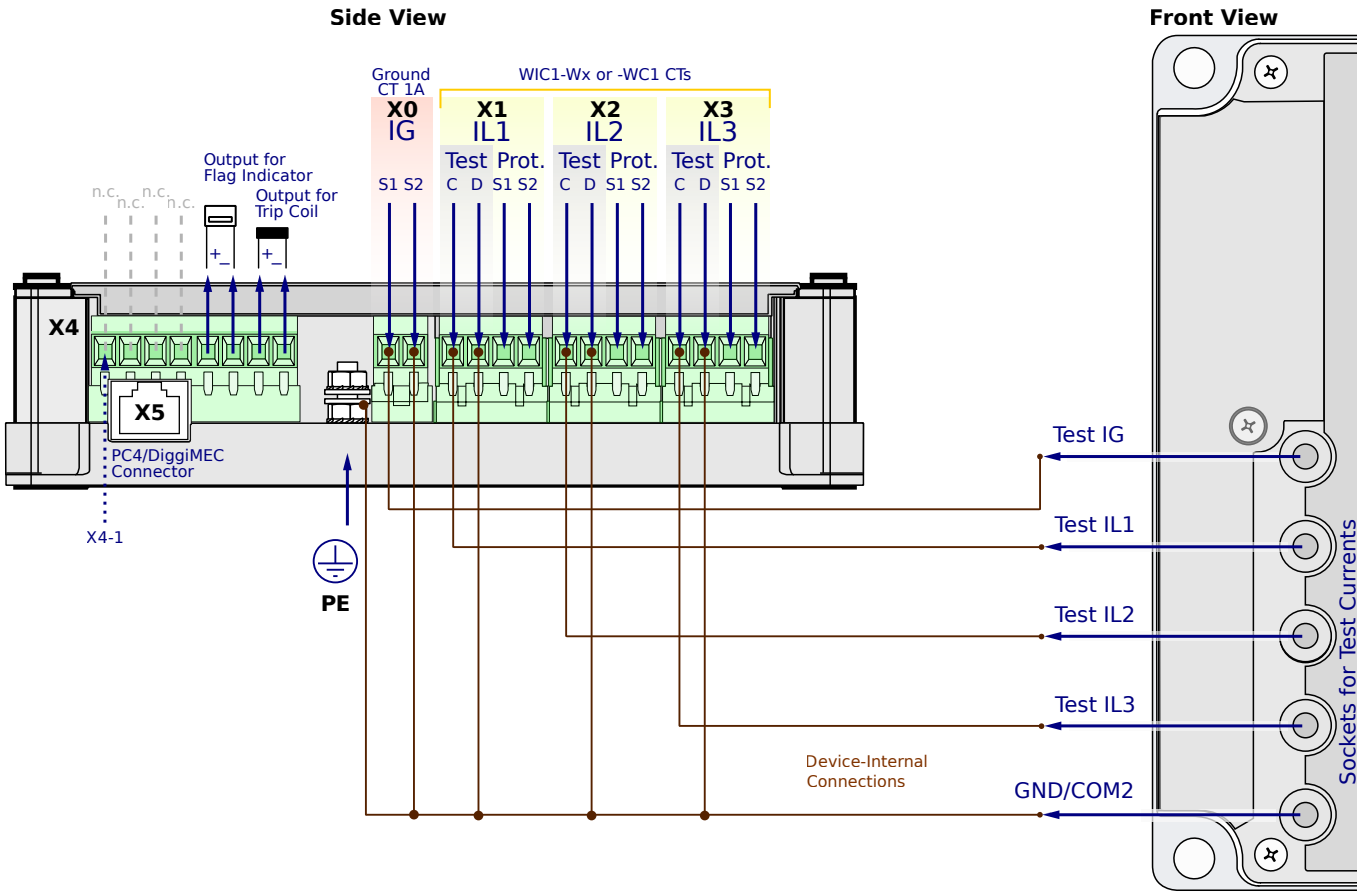


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0SA0

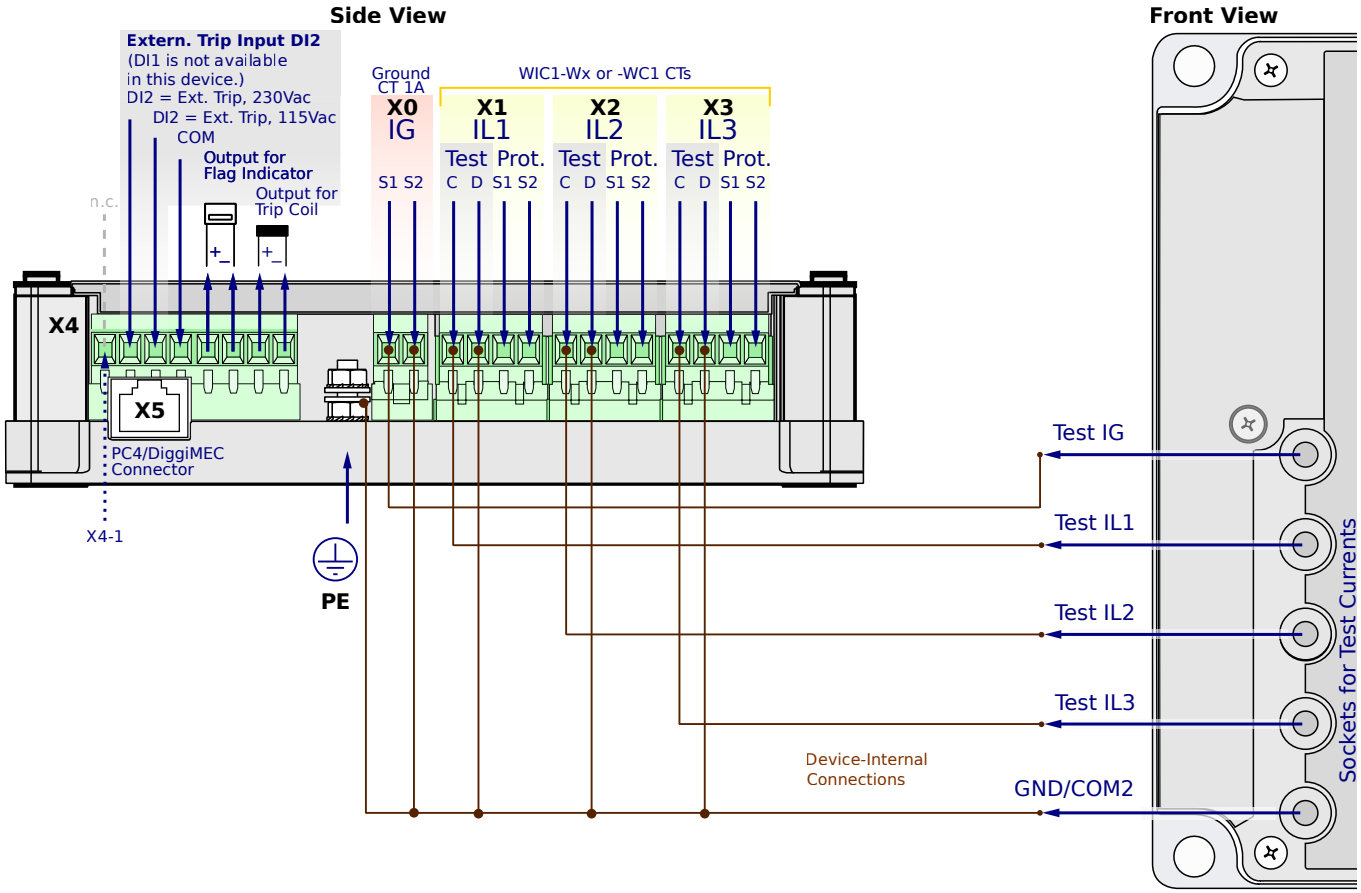


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0SAH

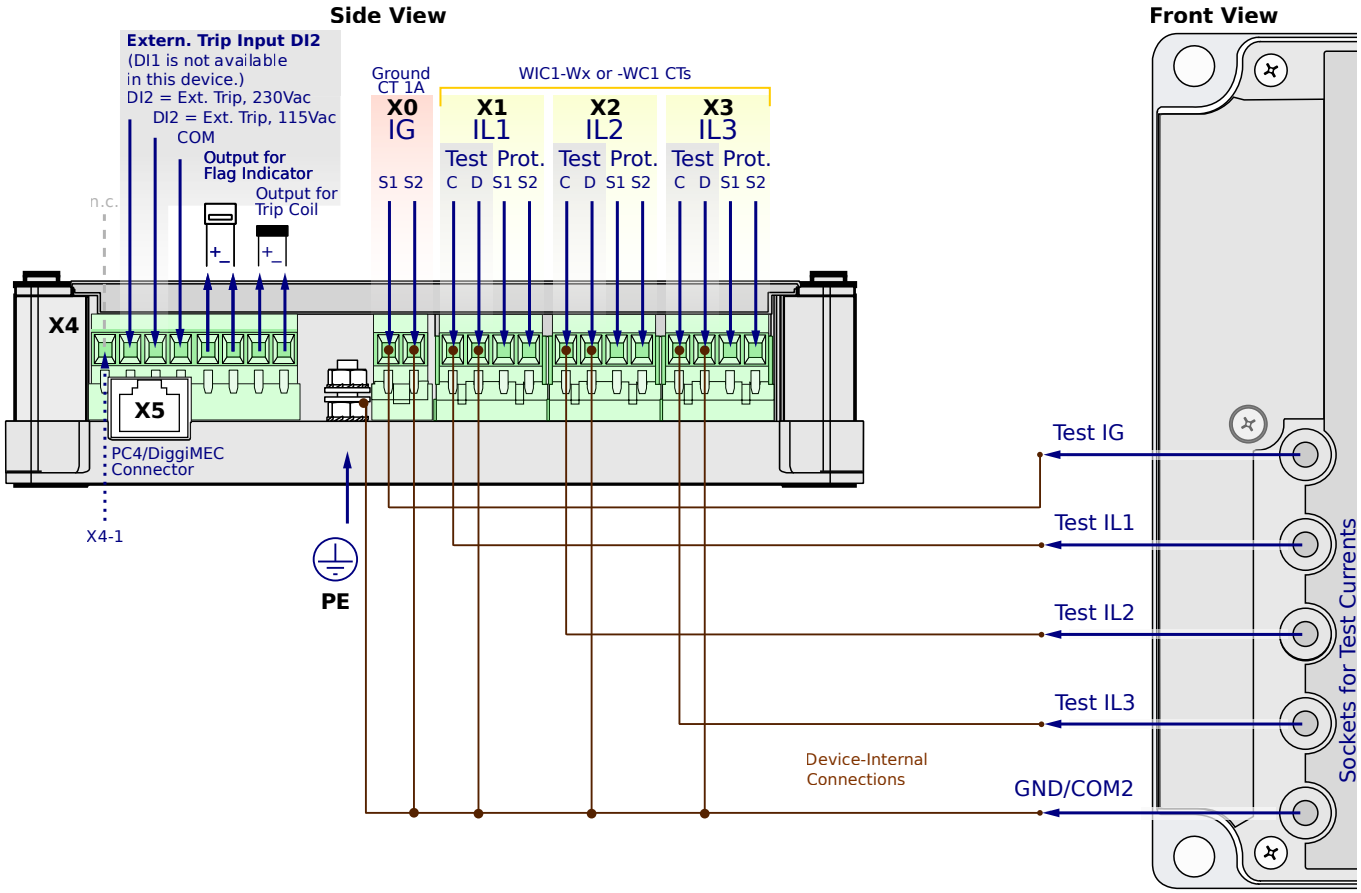


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0AA0

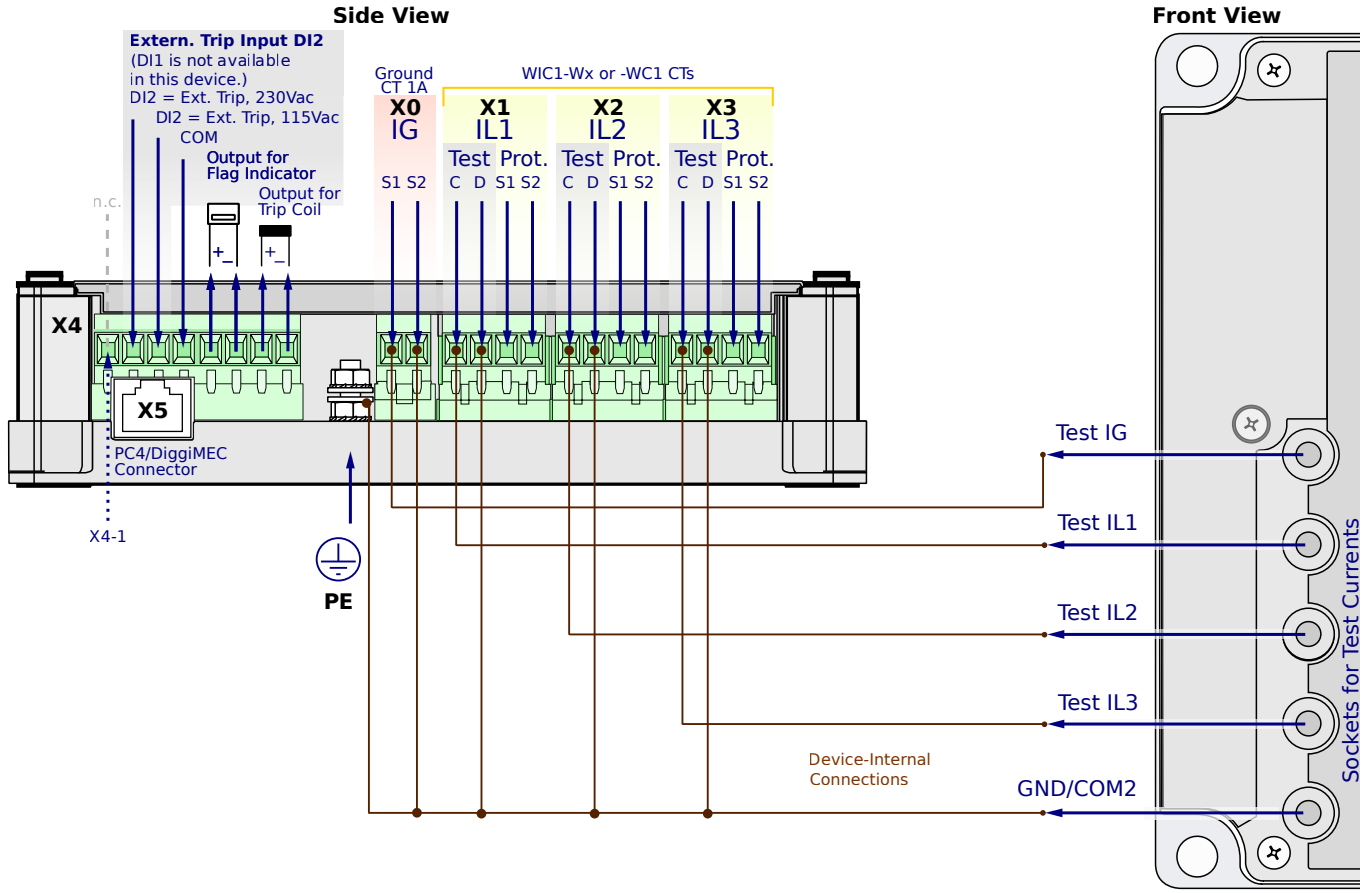


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0AAH

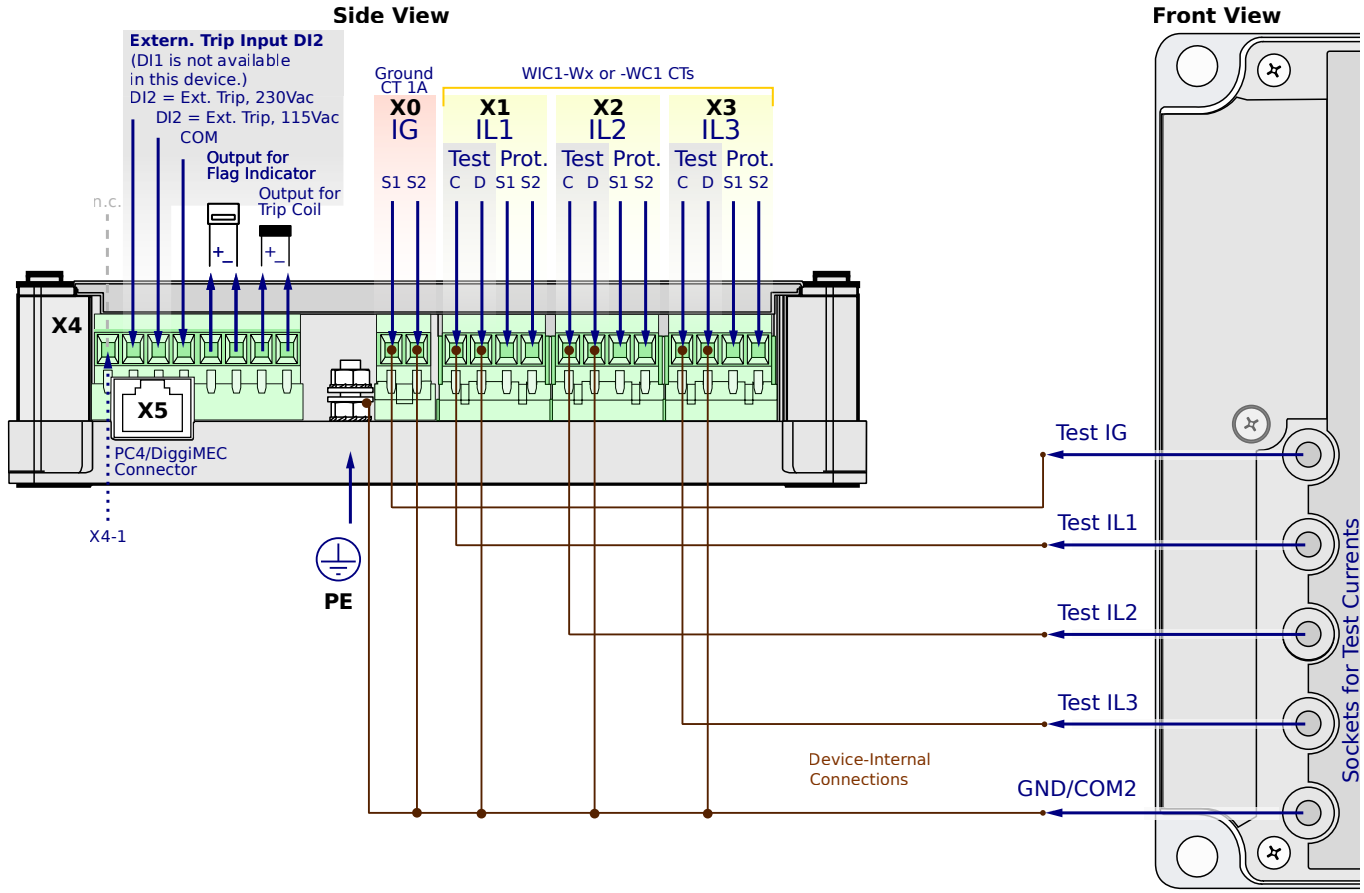


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0PA0

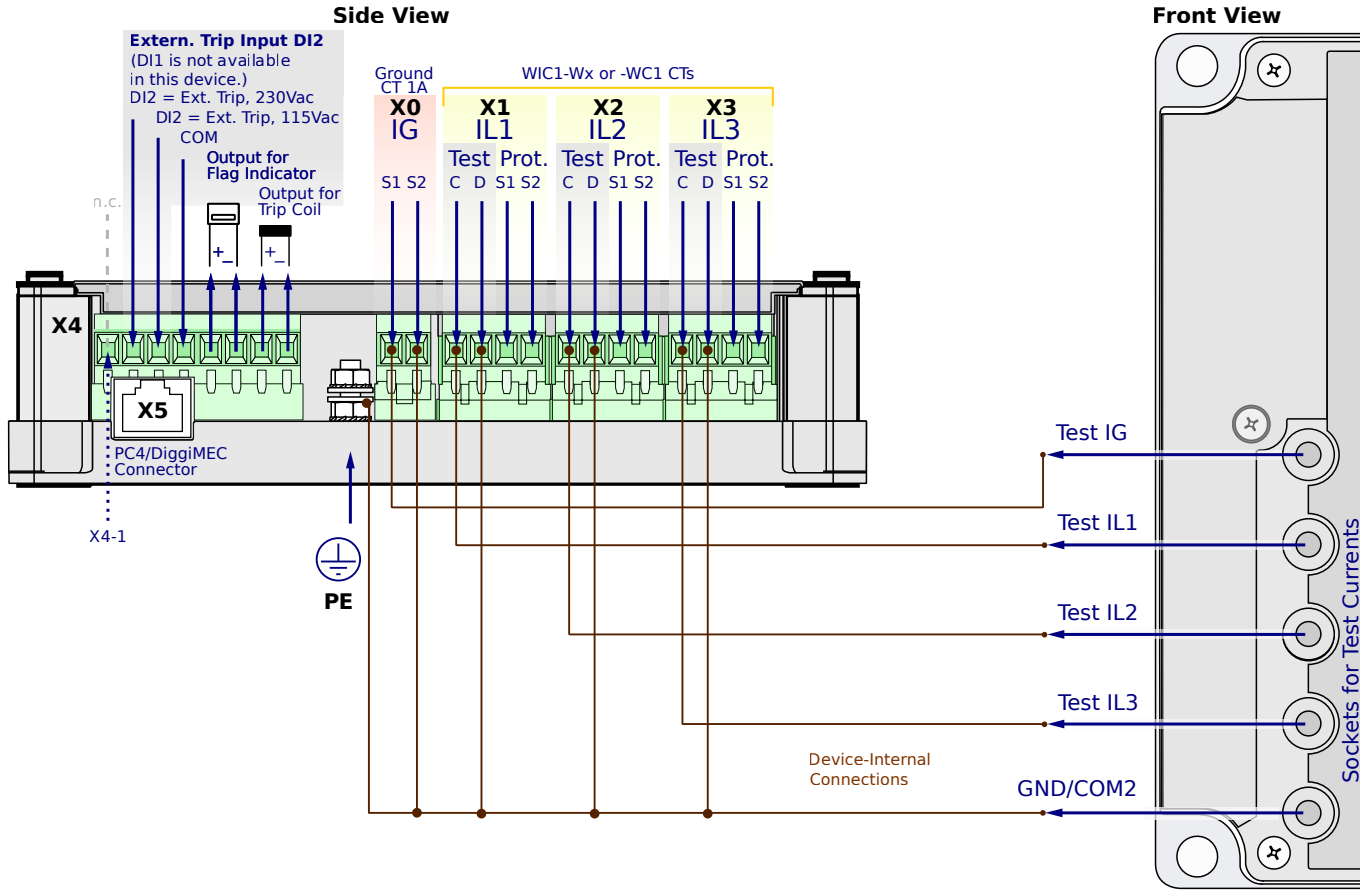


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF0PAH

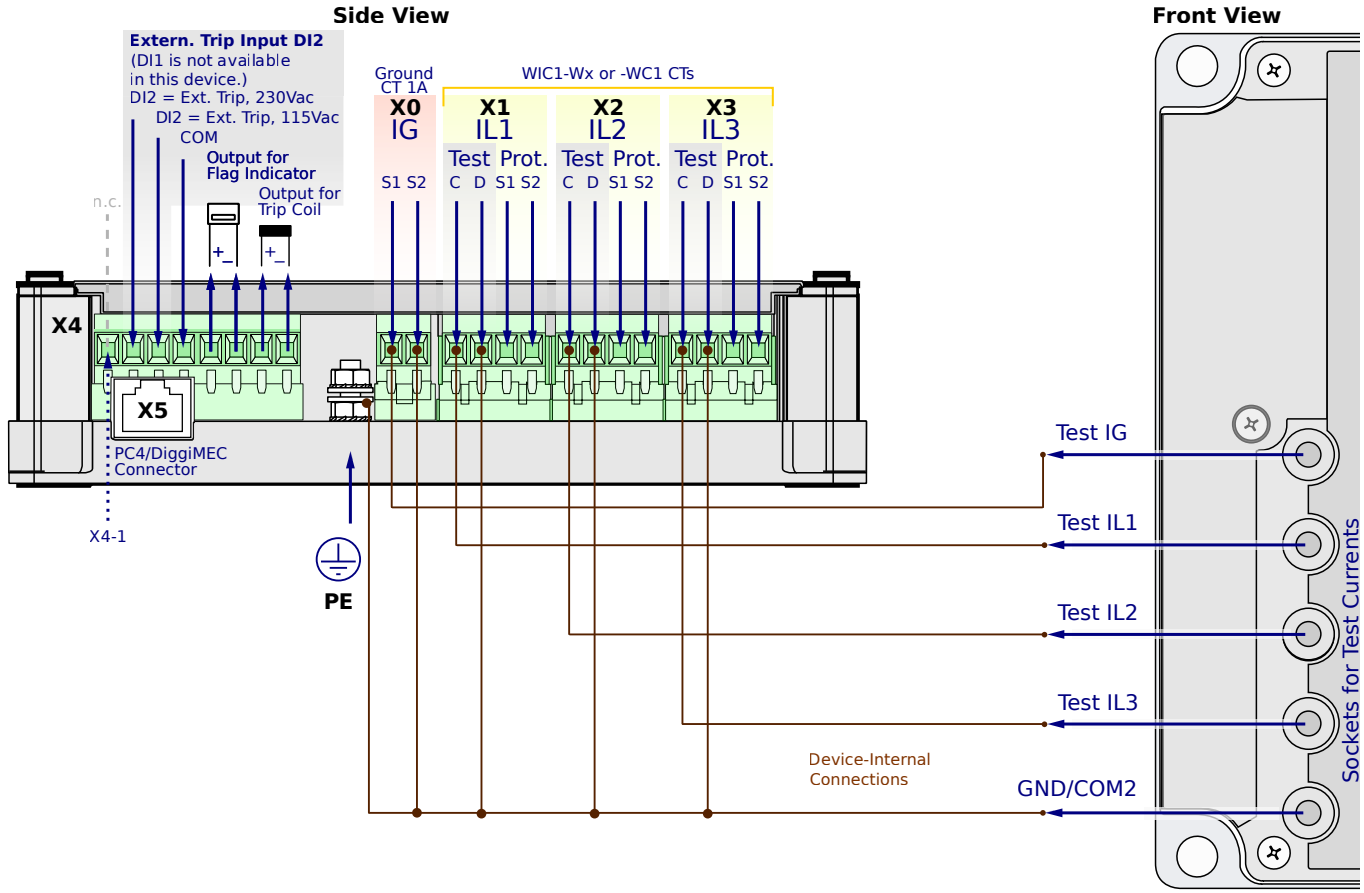


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1SA0

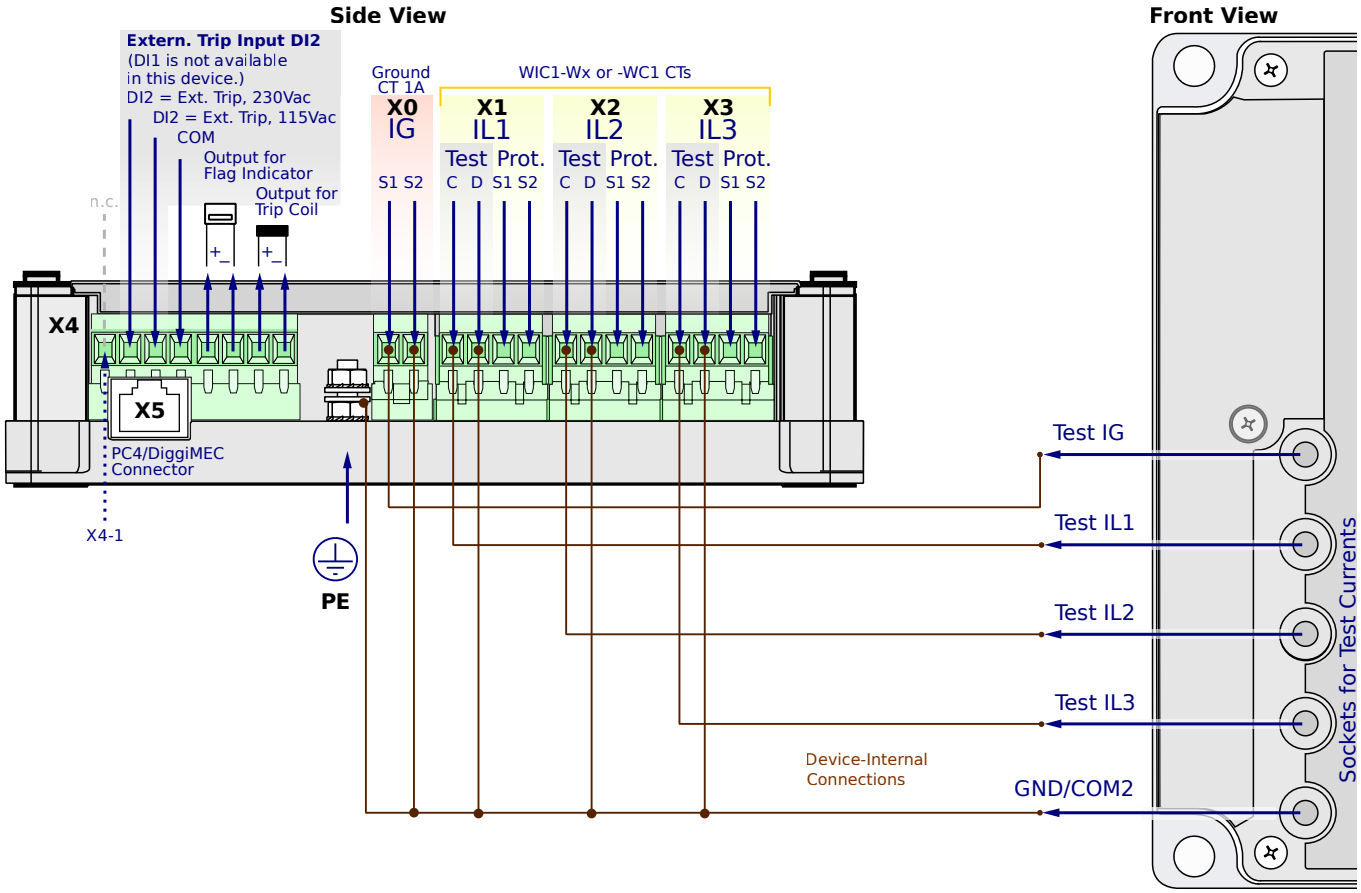


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1SAH

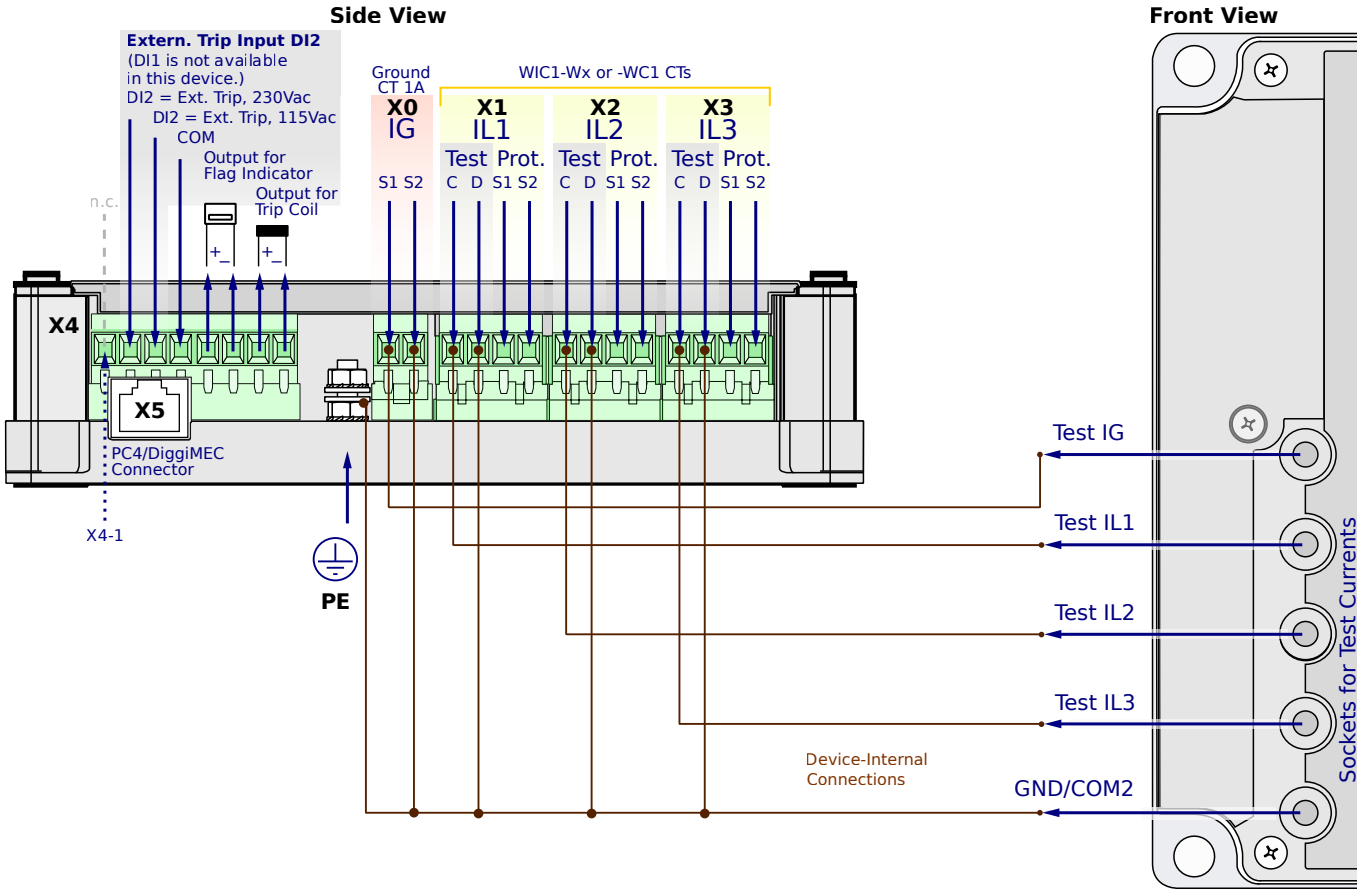


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1AA0

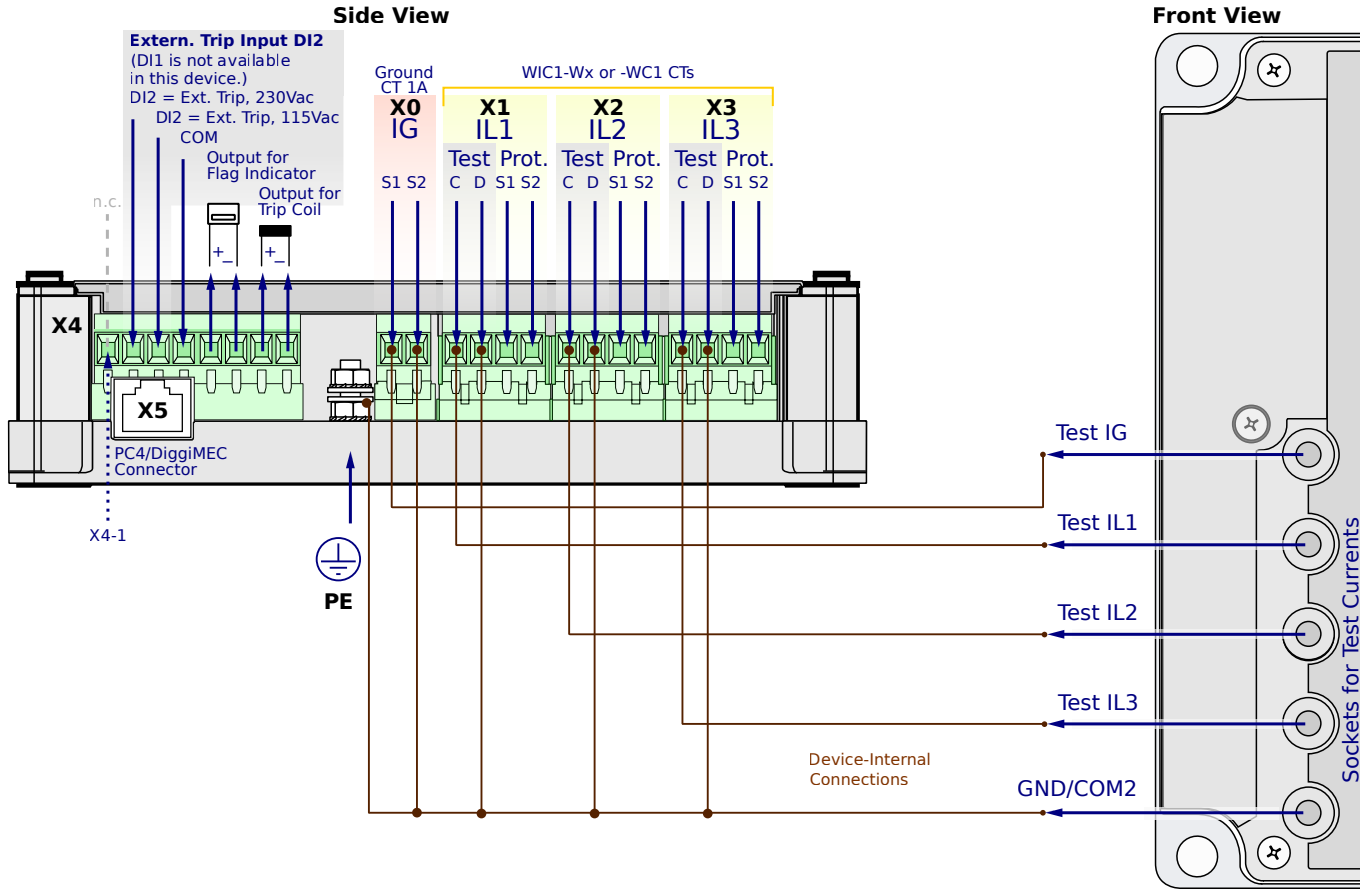


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1AAH

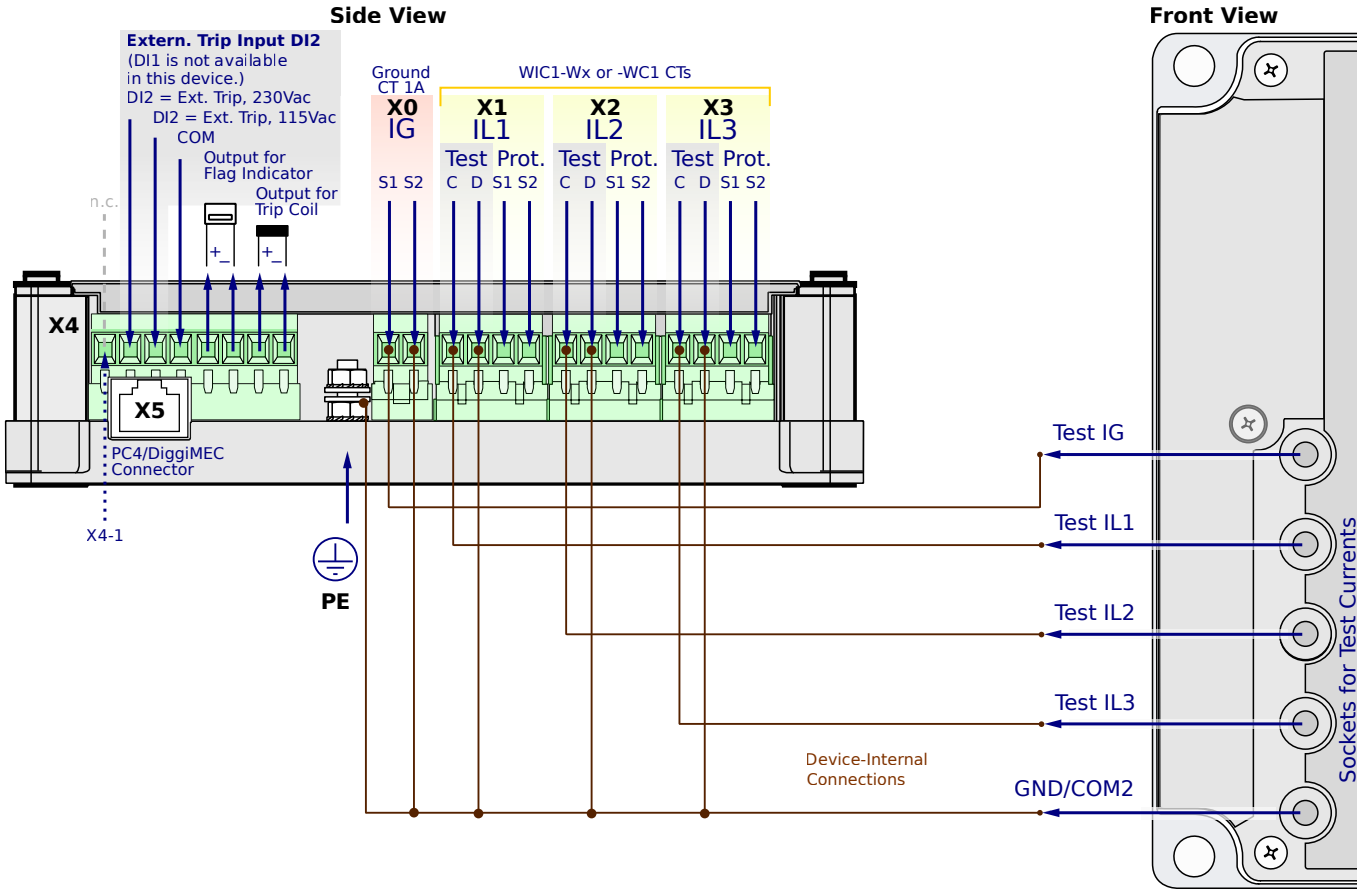


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1PA0

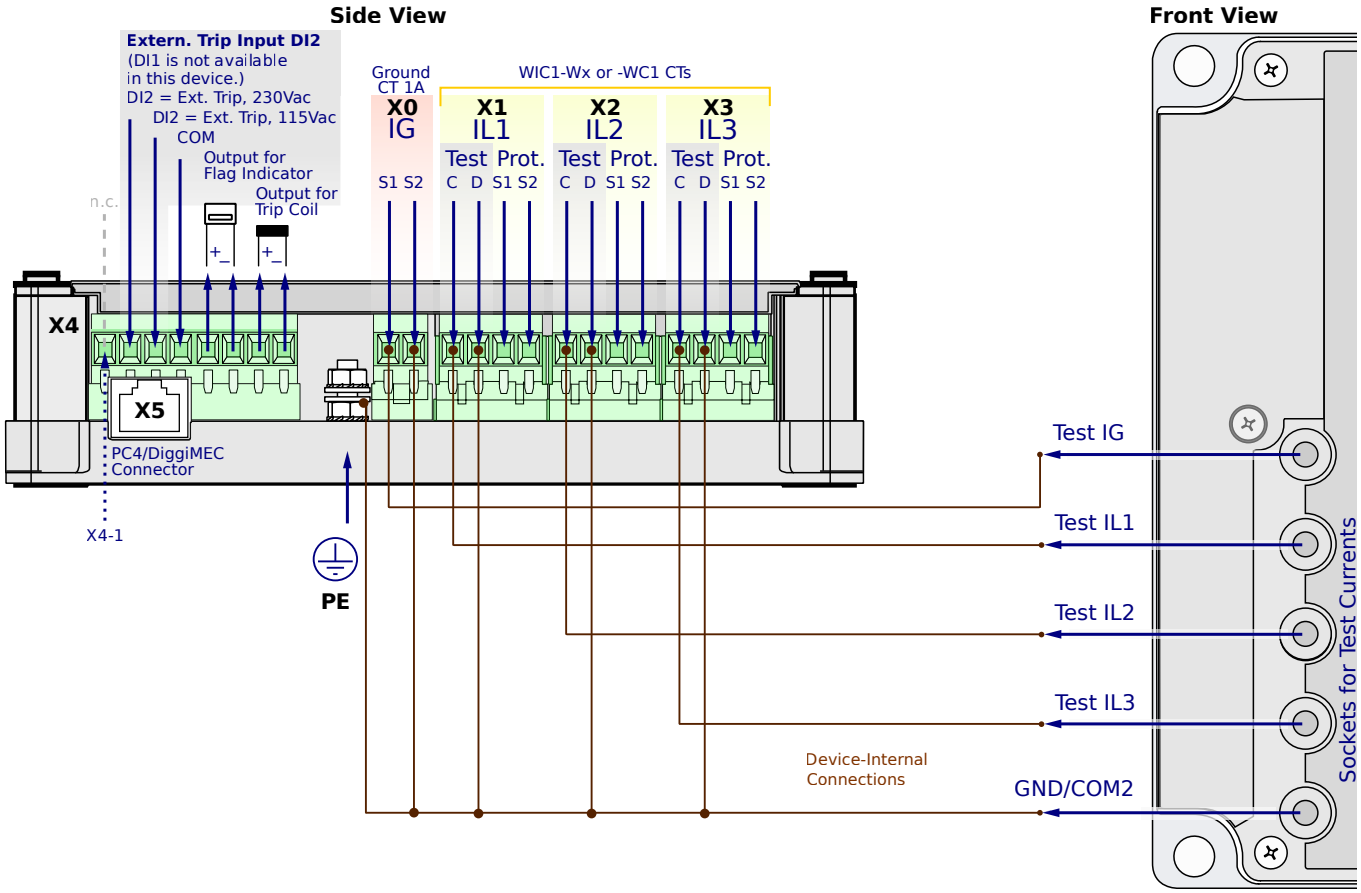


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF1PAH

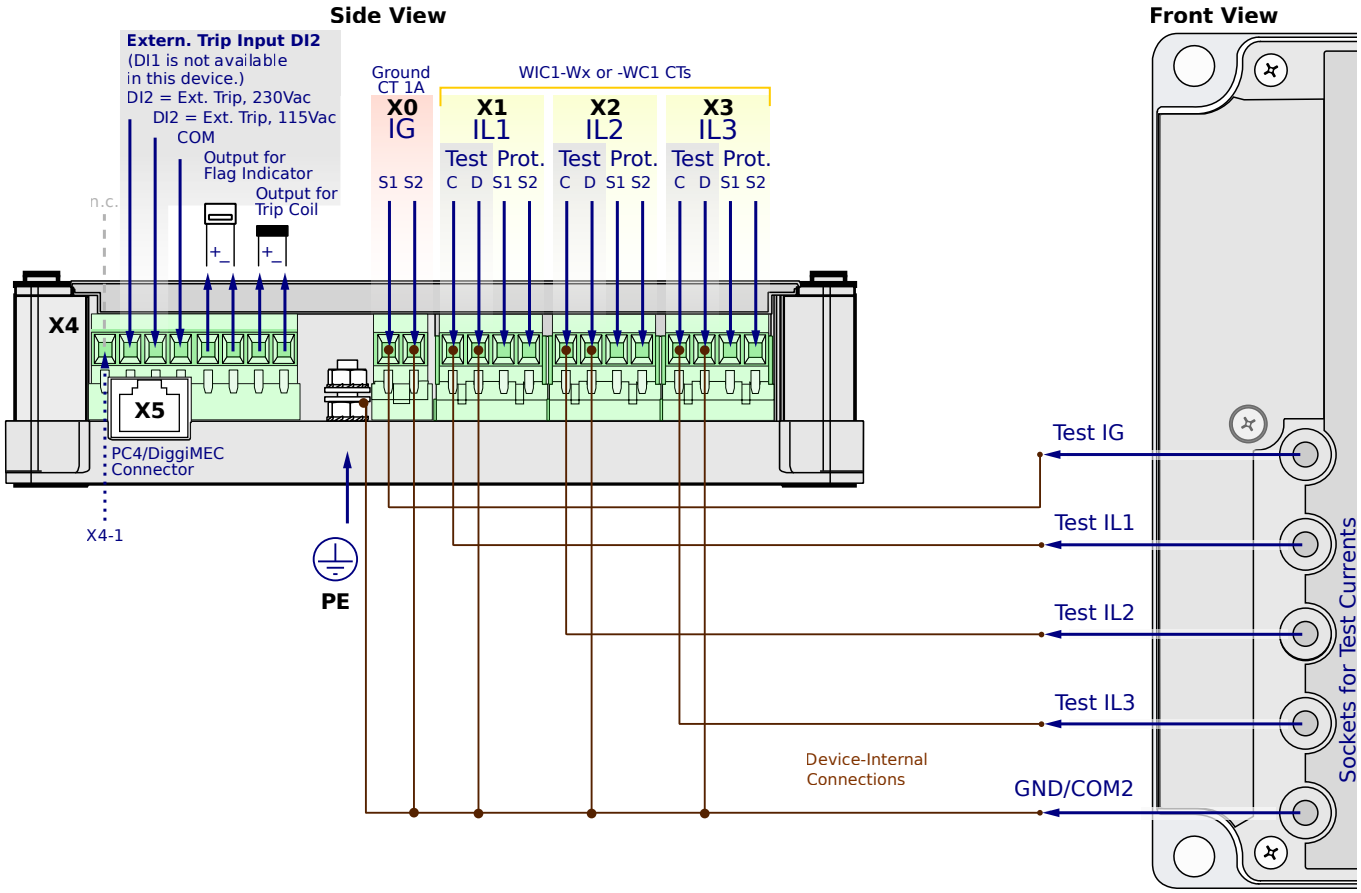


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2SA0

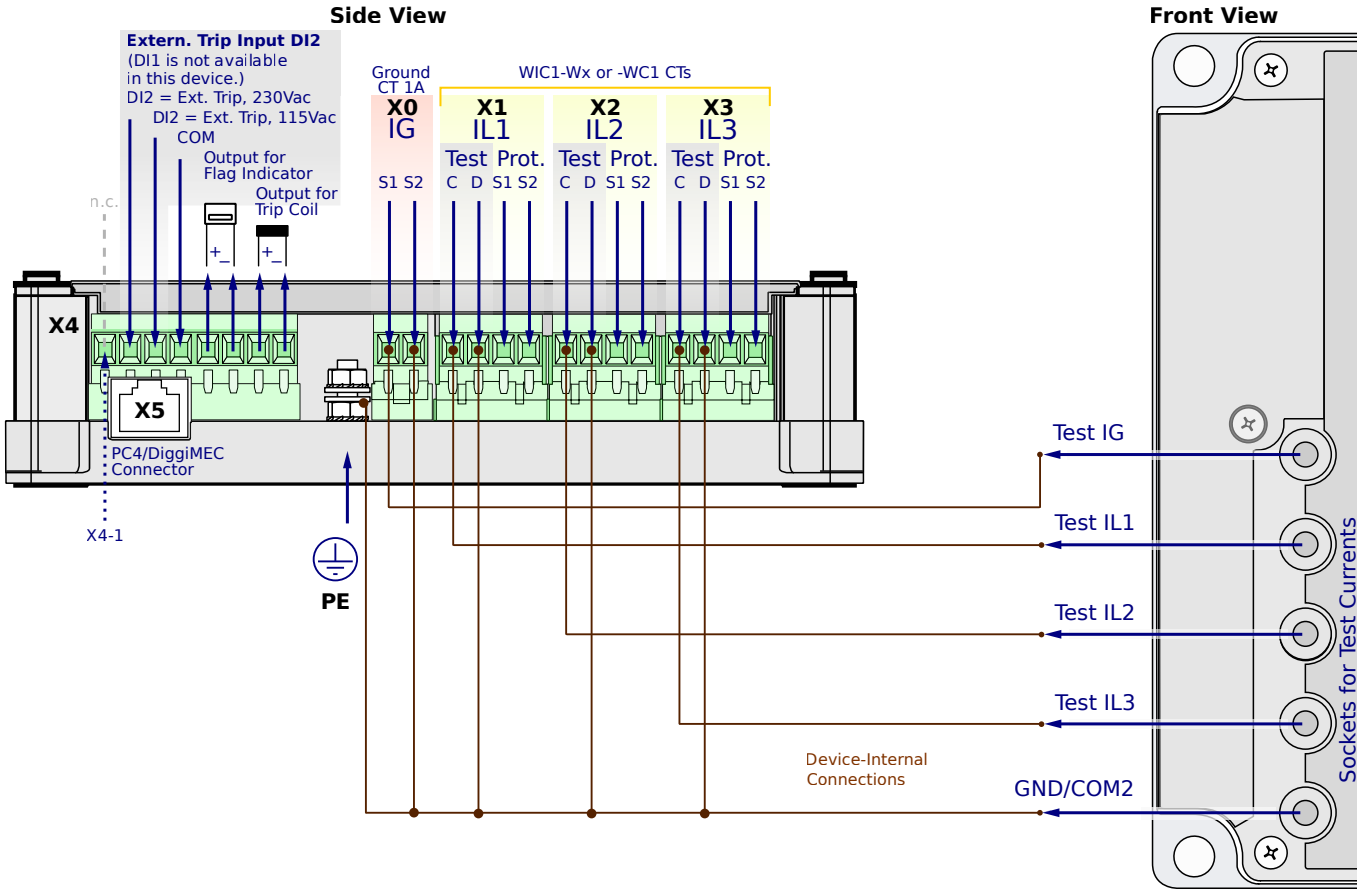


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2SAH

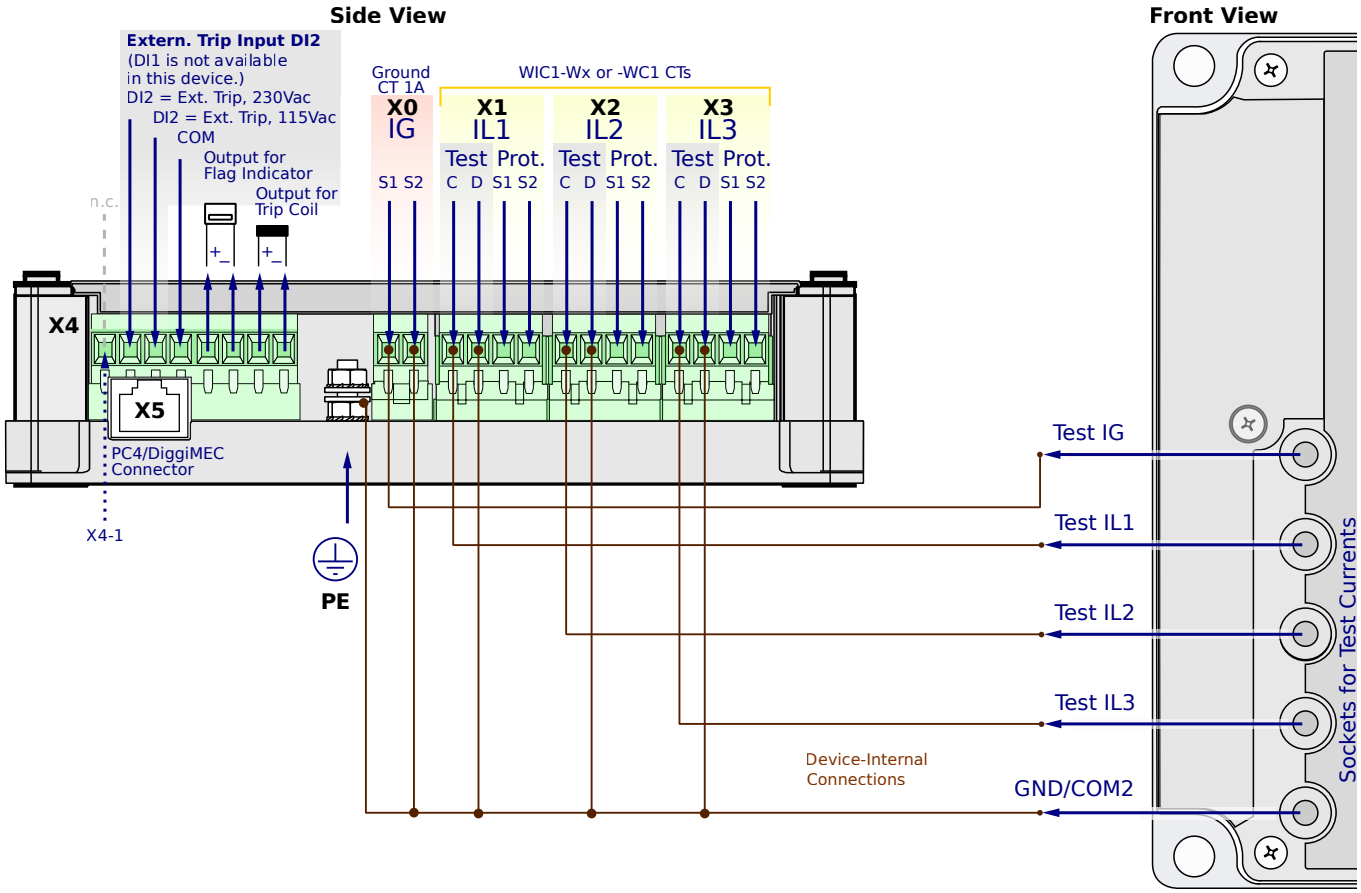


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2AA0

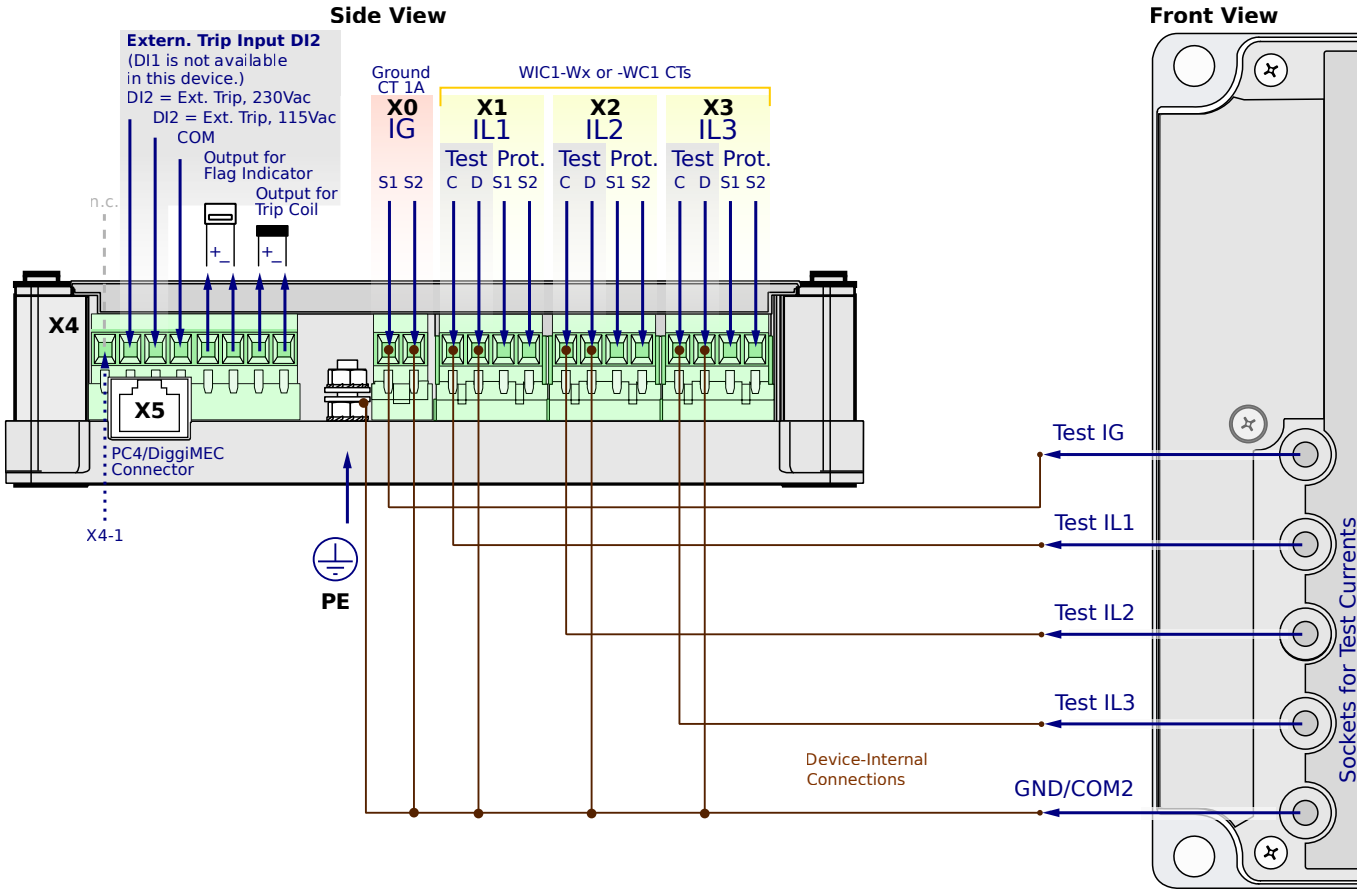


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2AAH

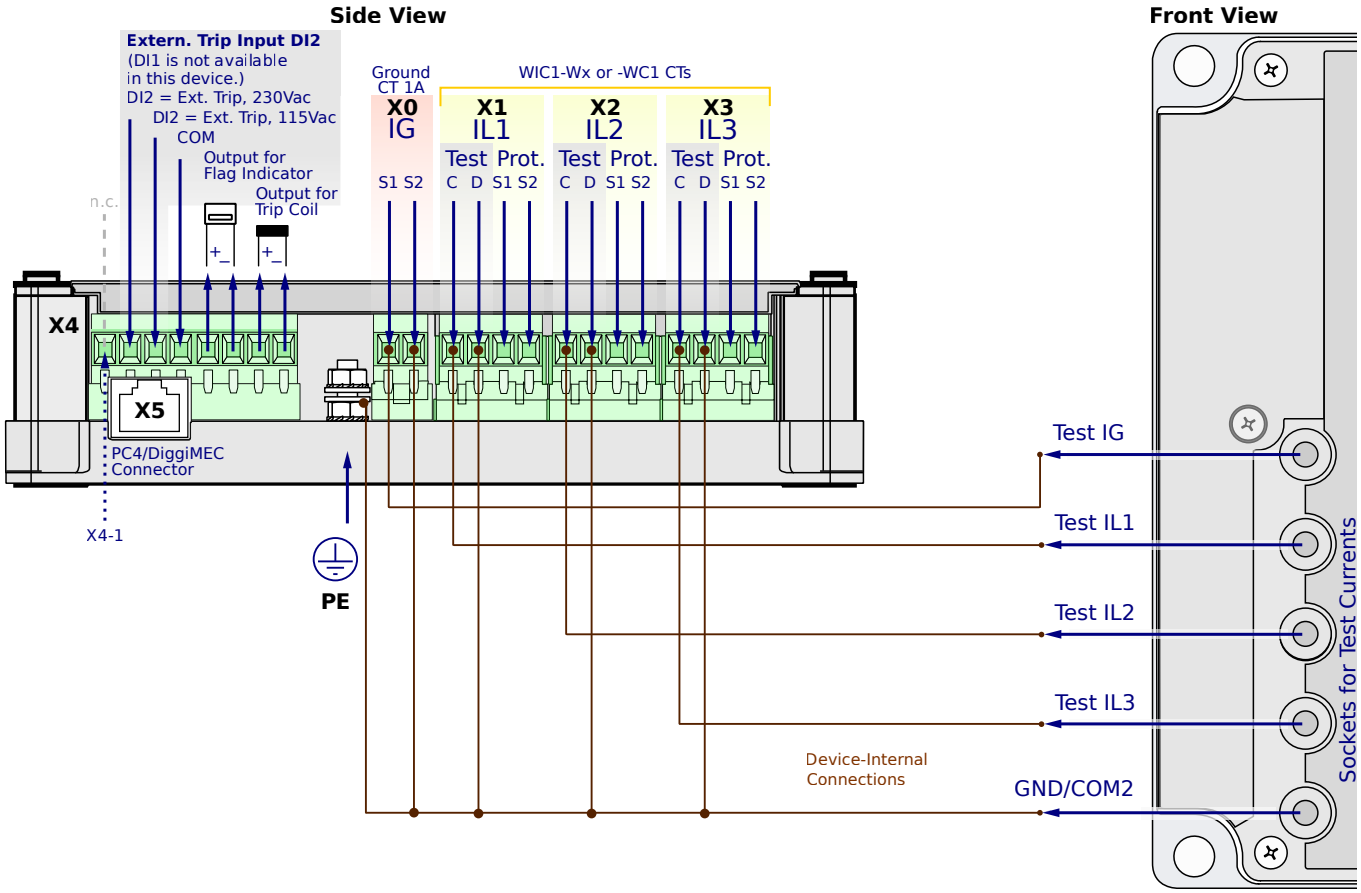


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2PA0

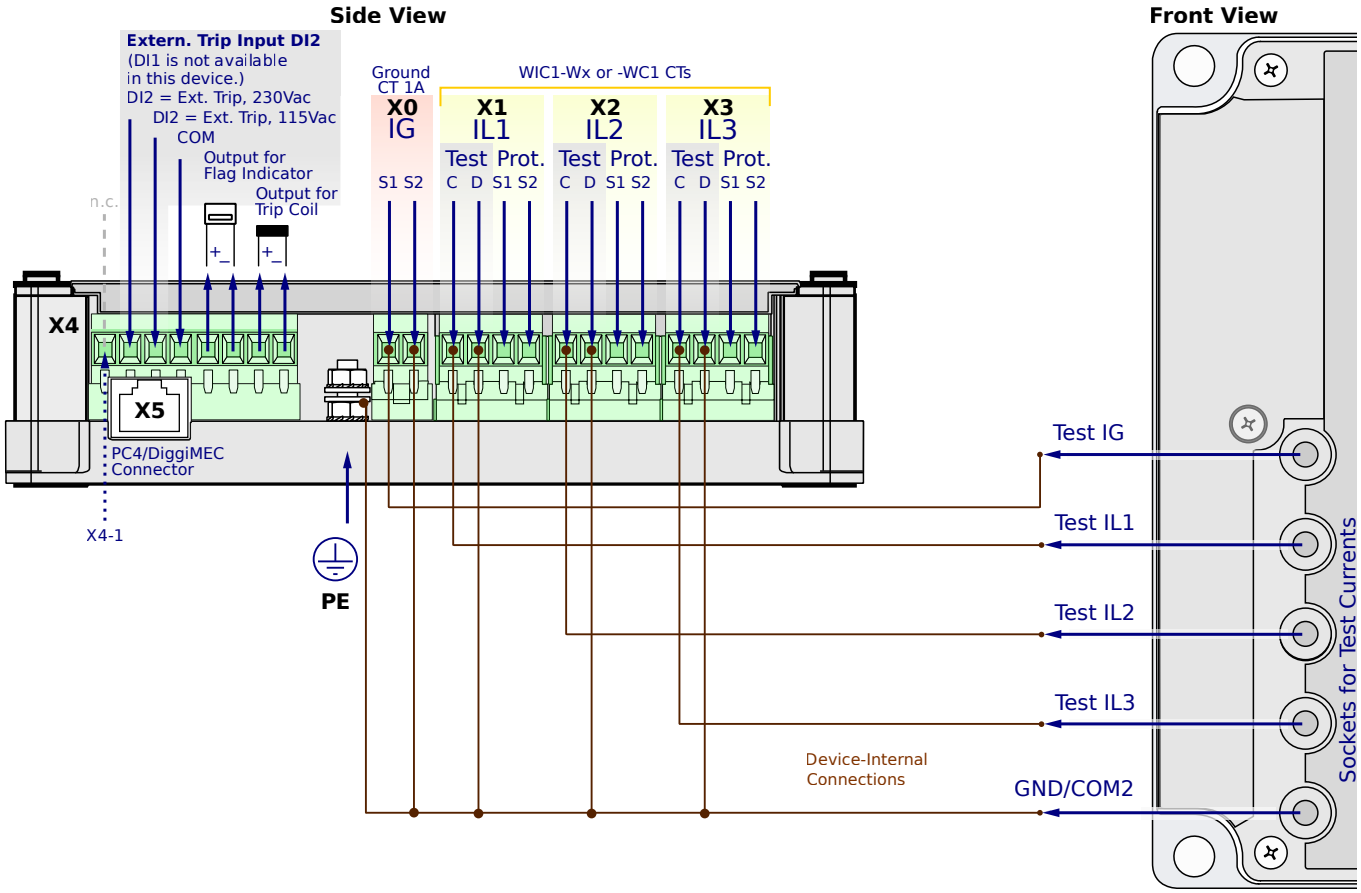


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NF2PAH

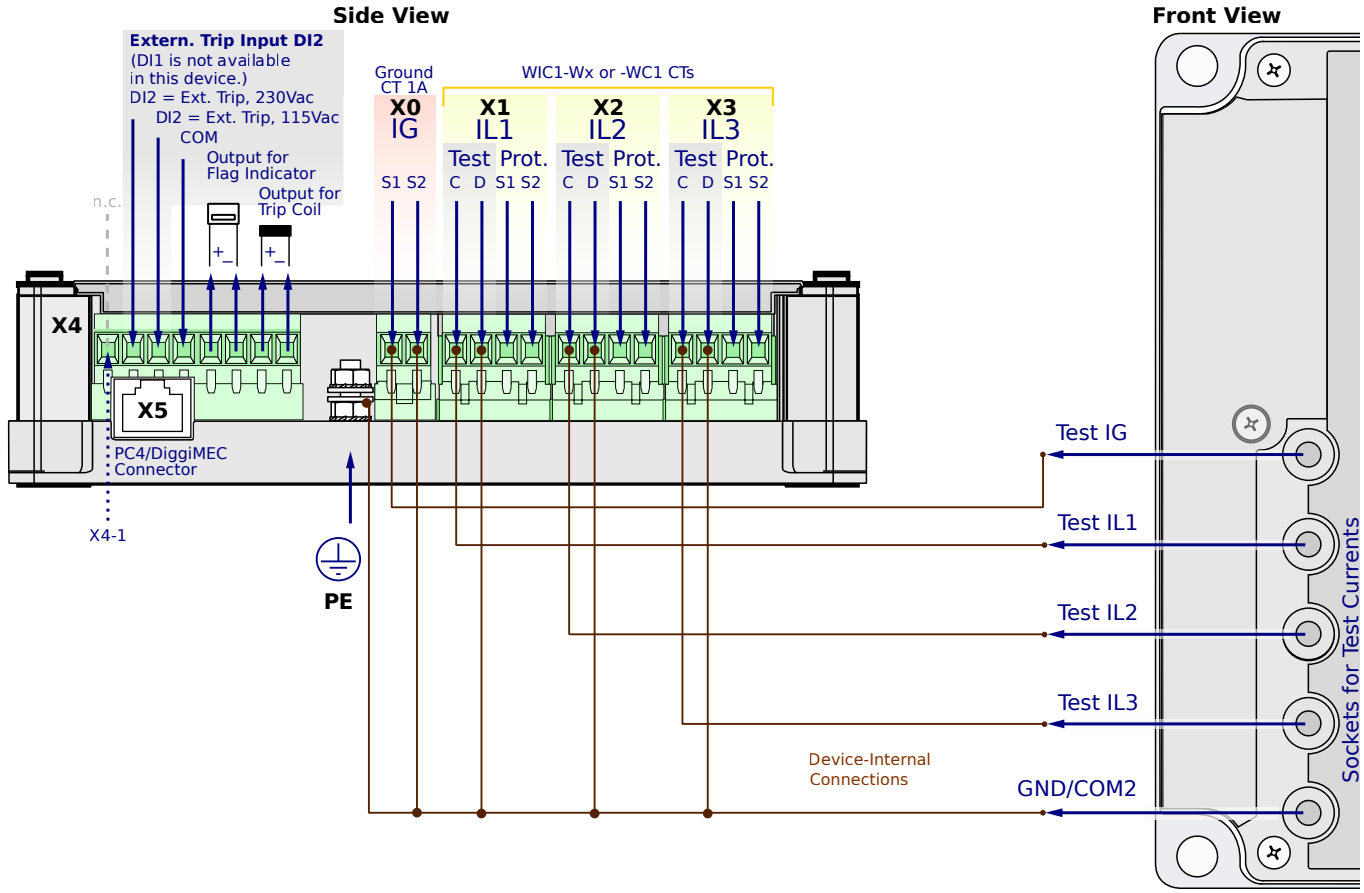


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0SA0

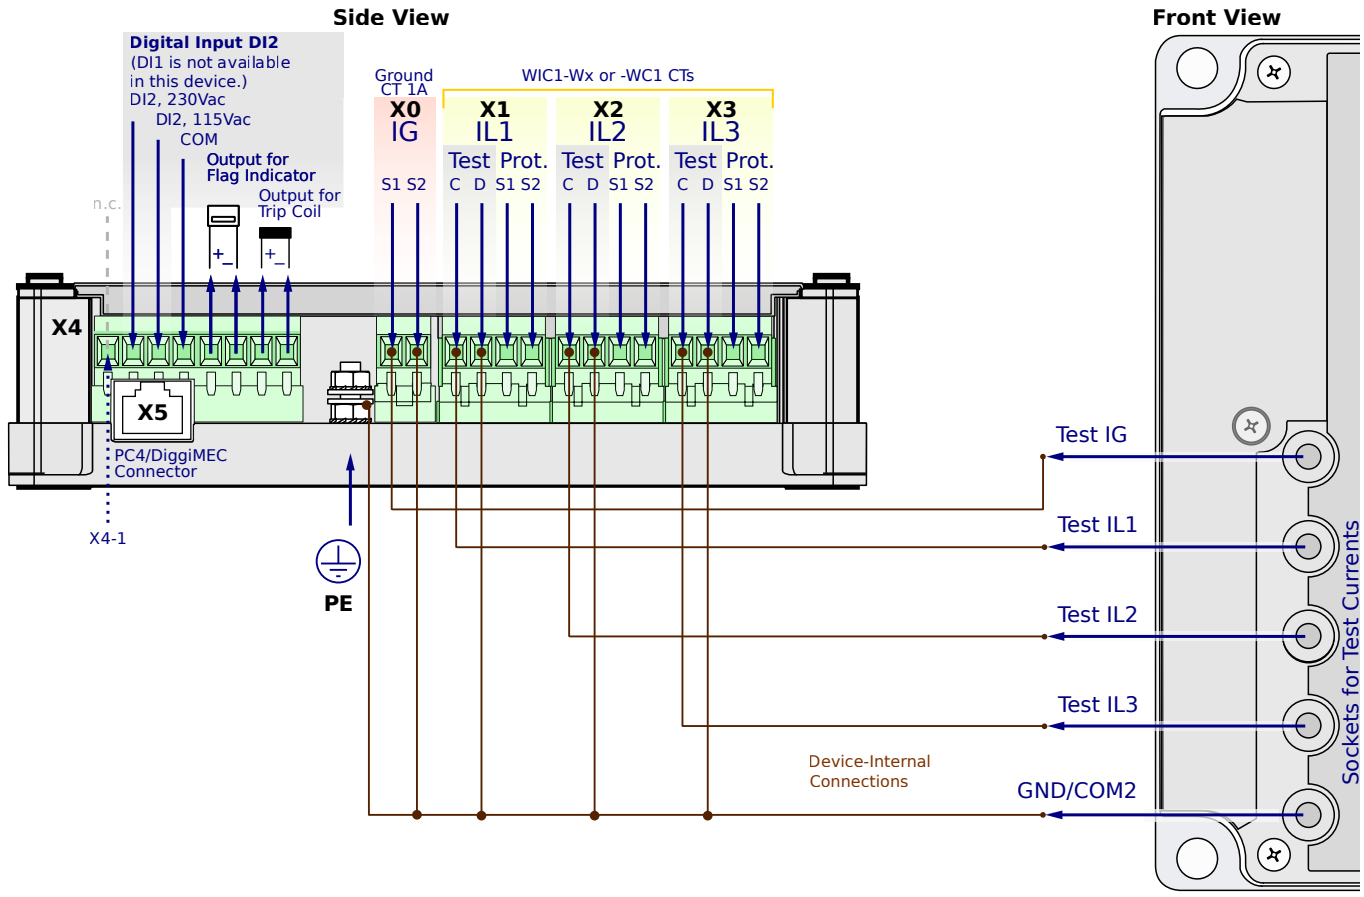


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0SAH

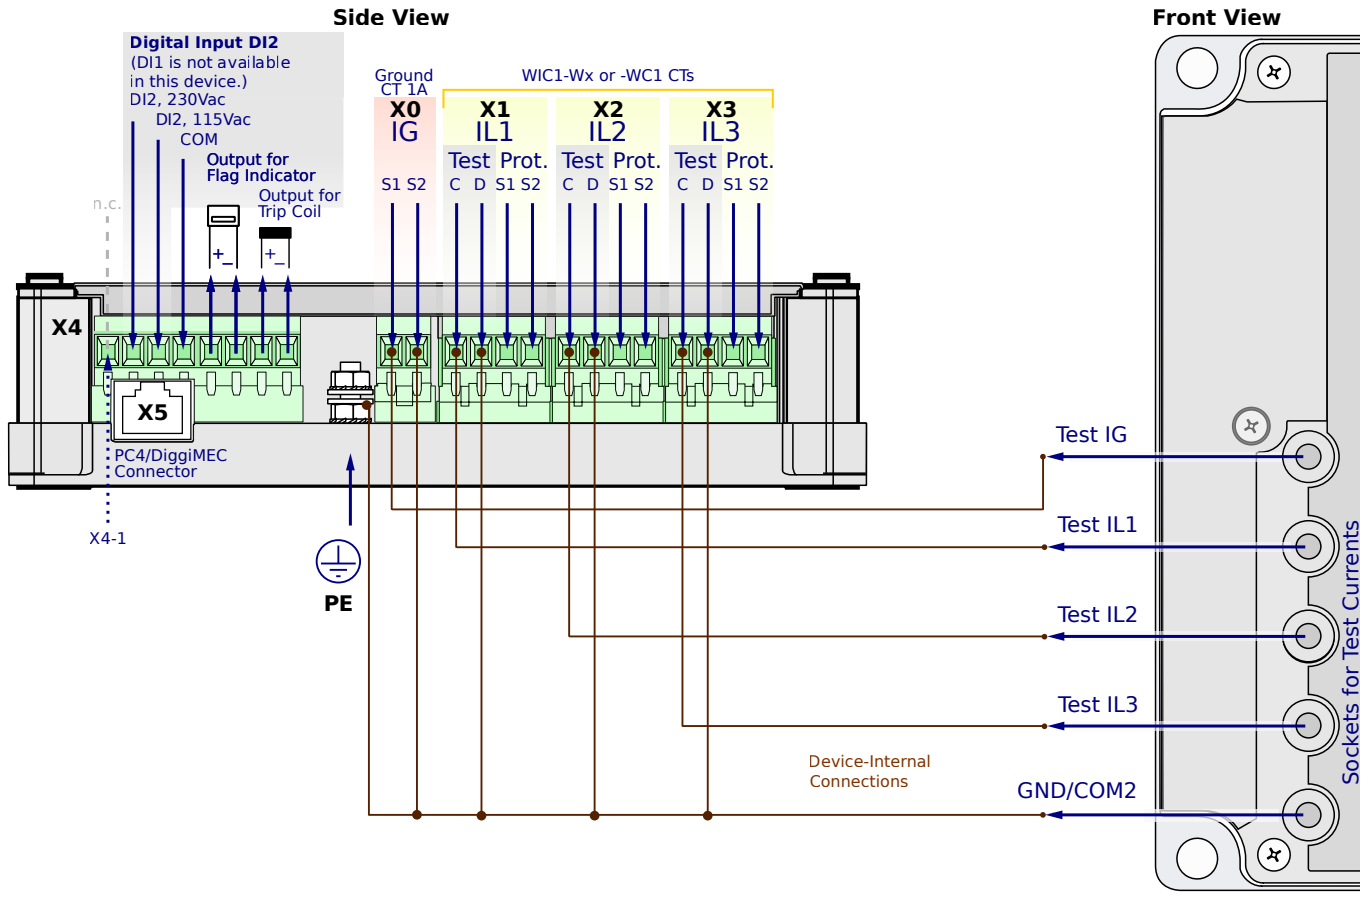


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0AA0

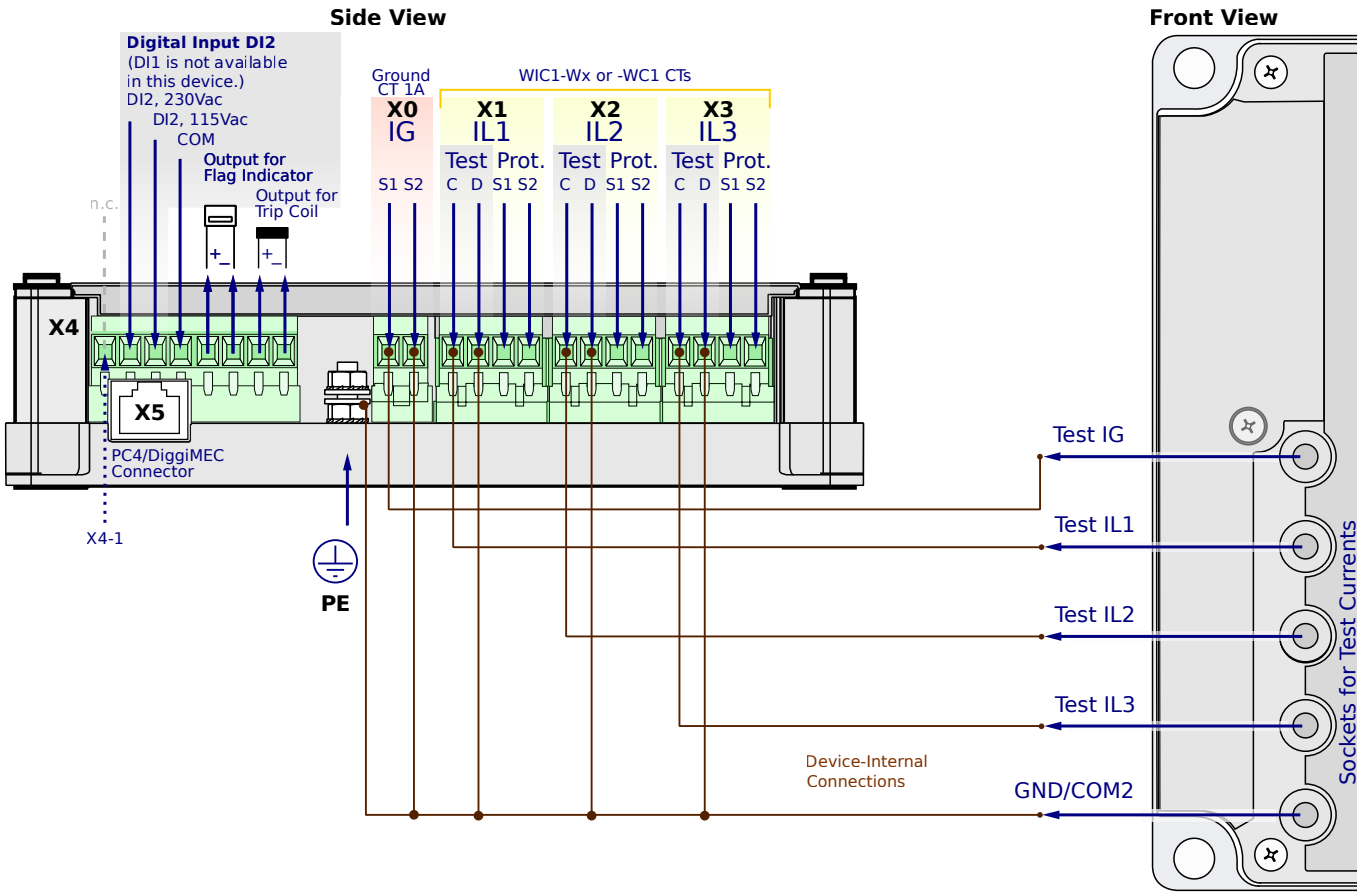


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0AAH

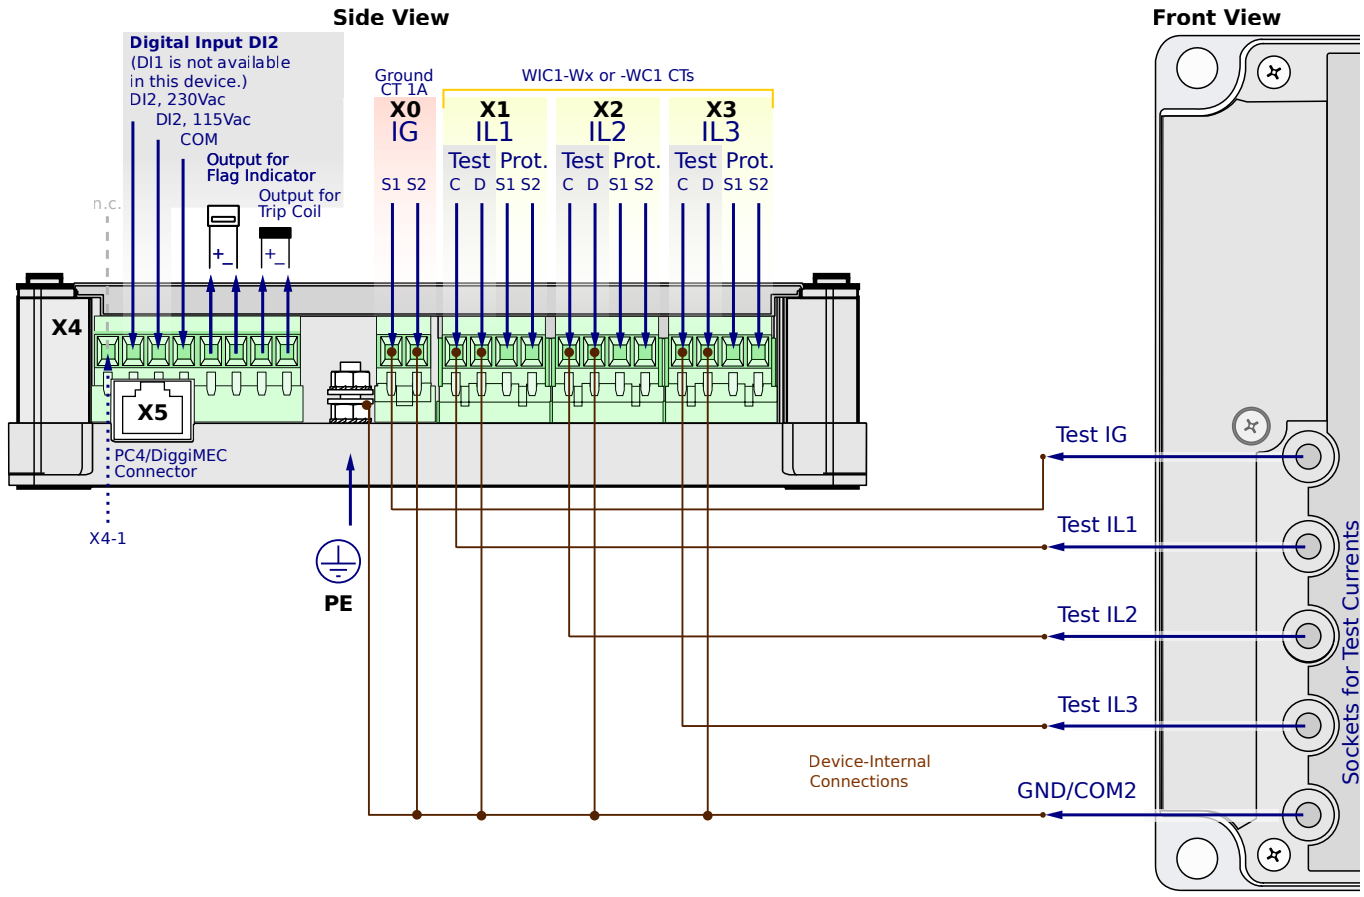


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0PA0

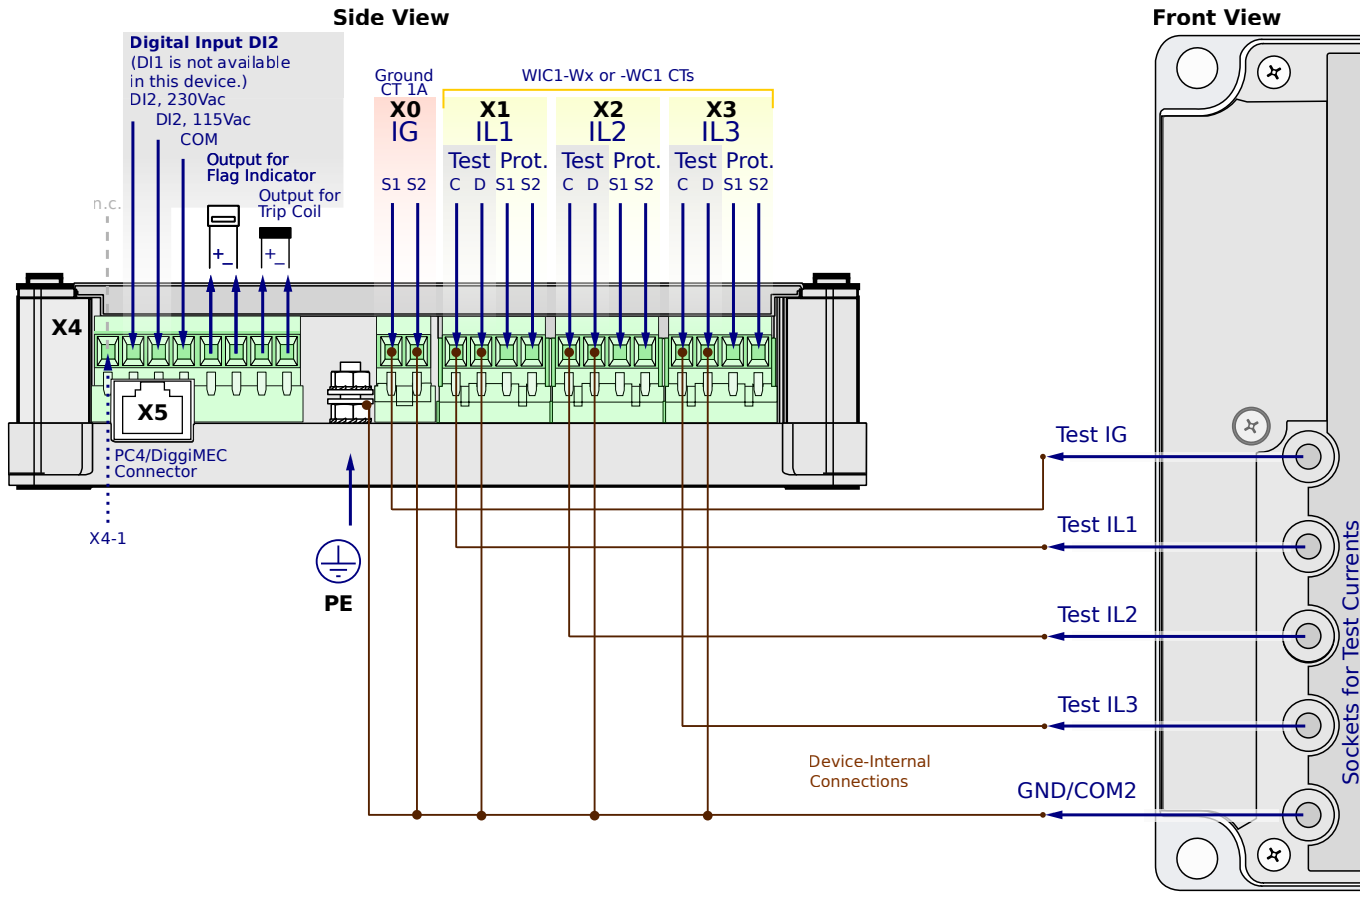


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC0PAH

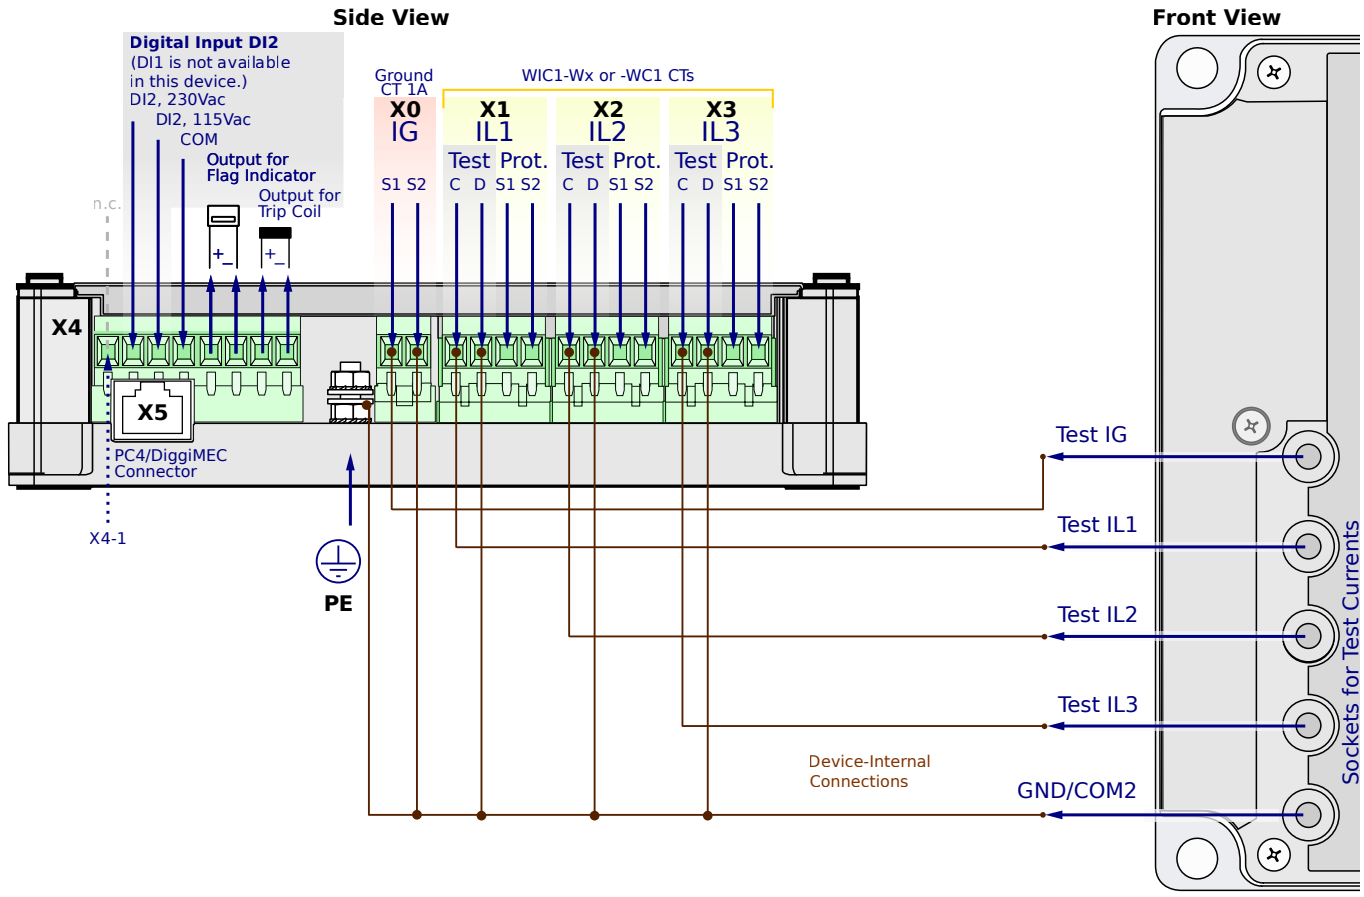


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1SA0

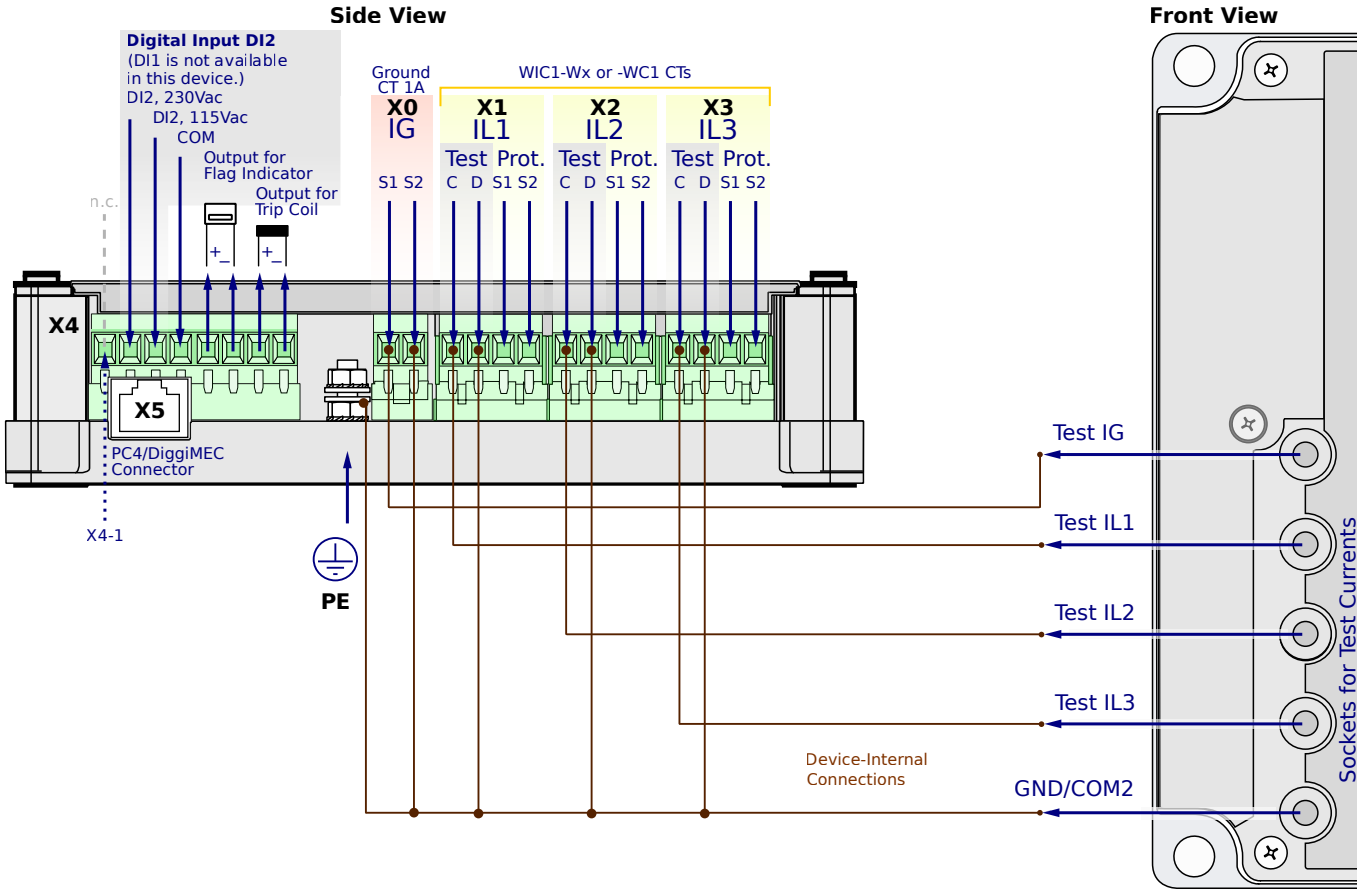


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1SAH

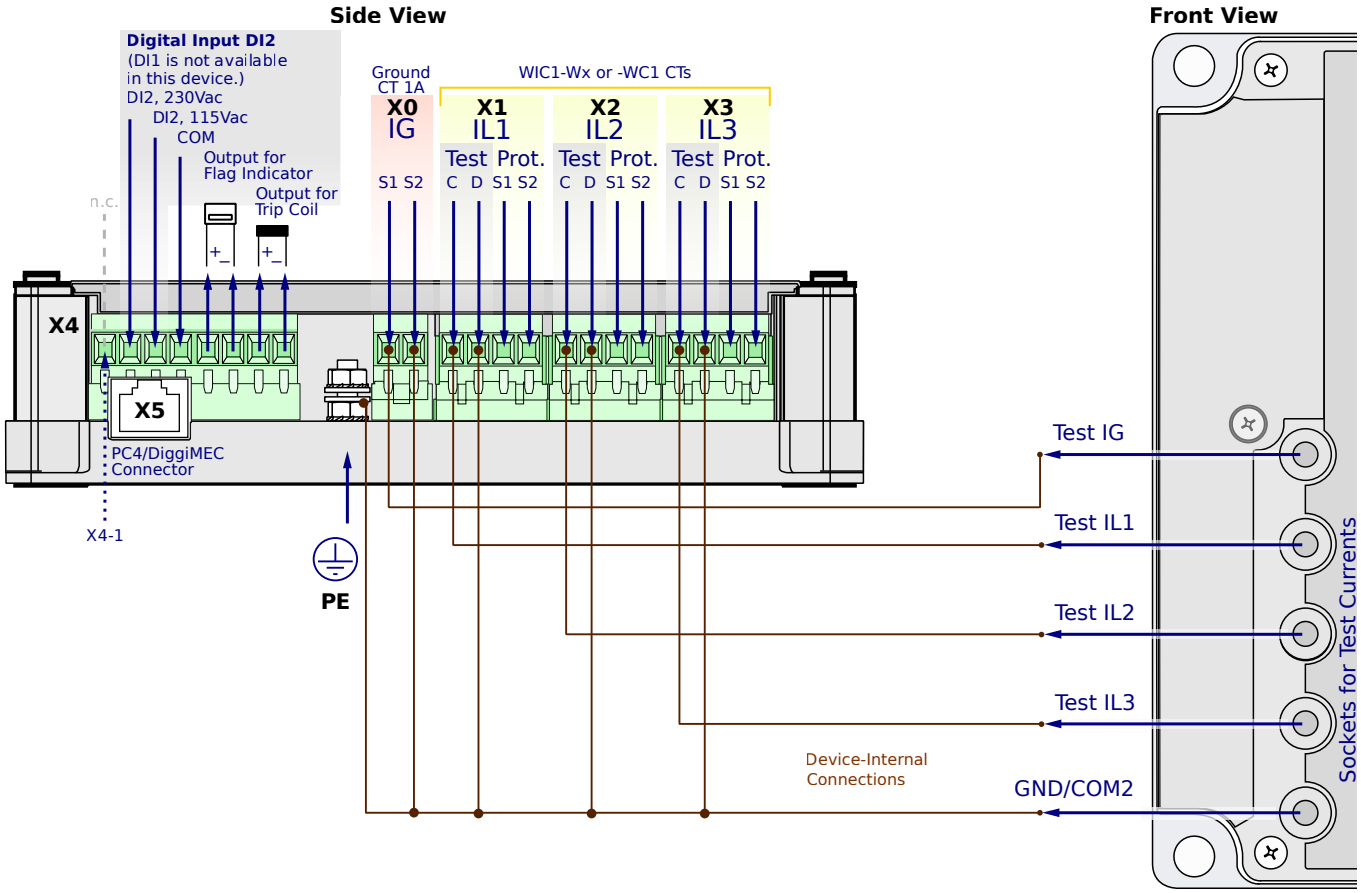


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1AA0

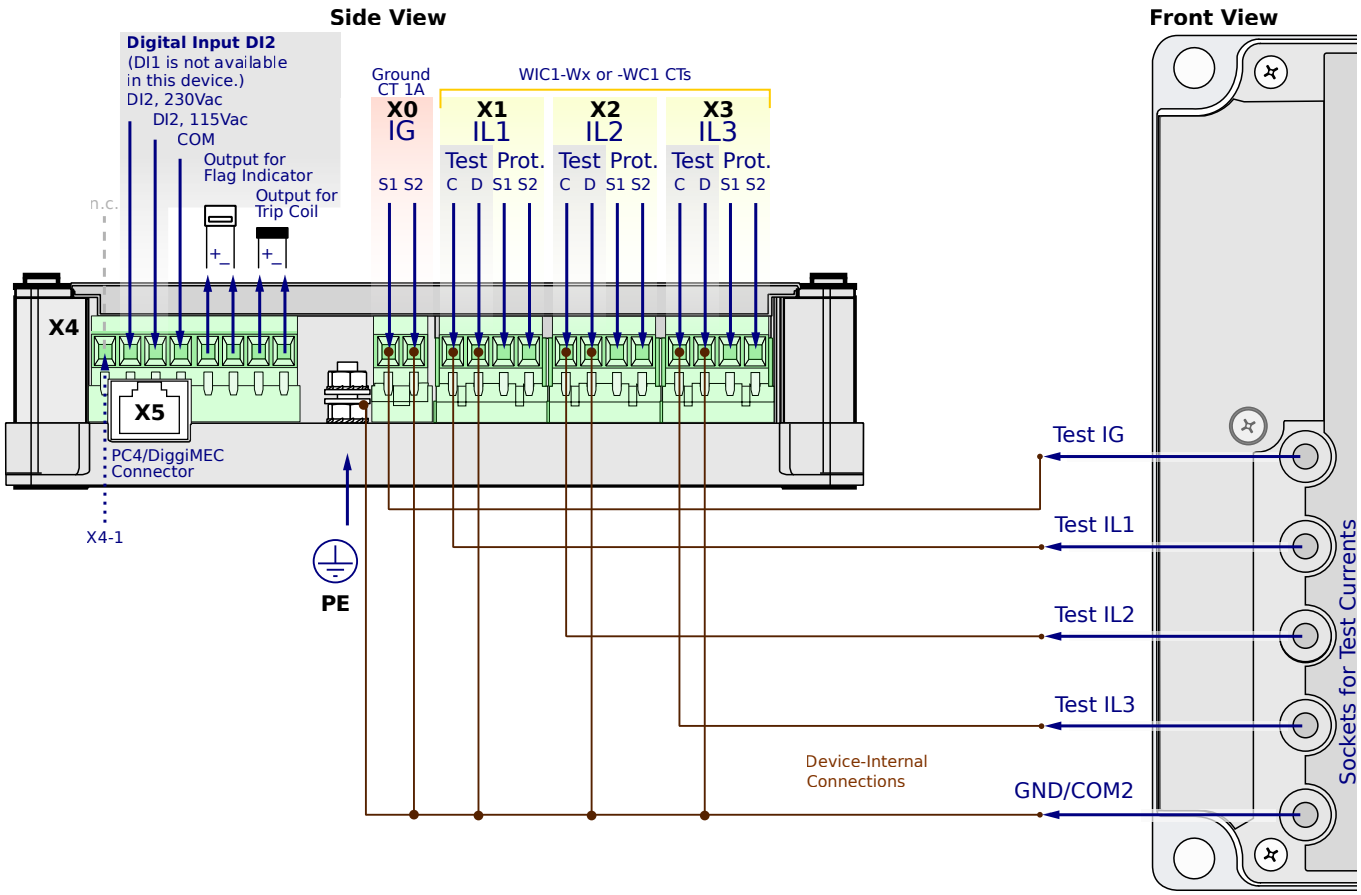


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1AAH

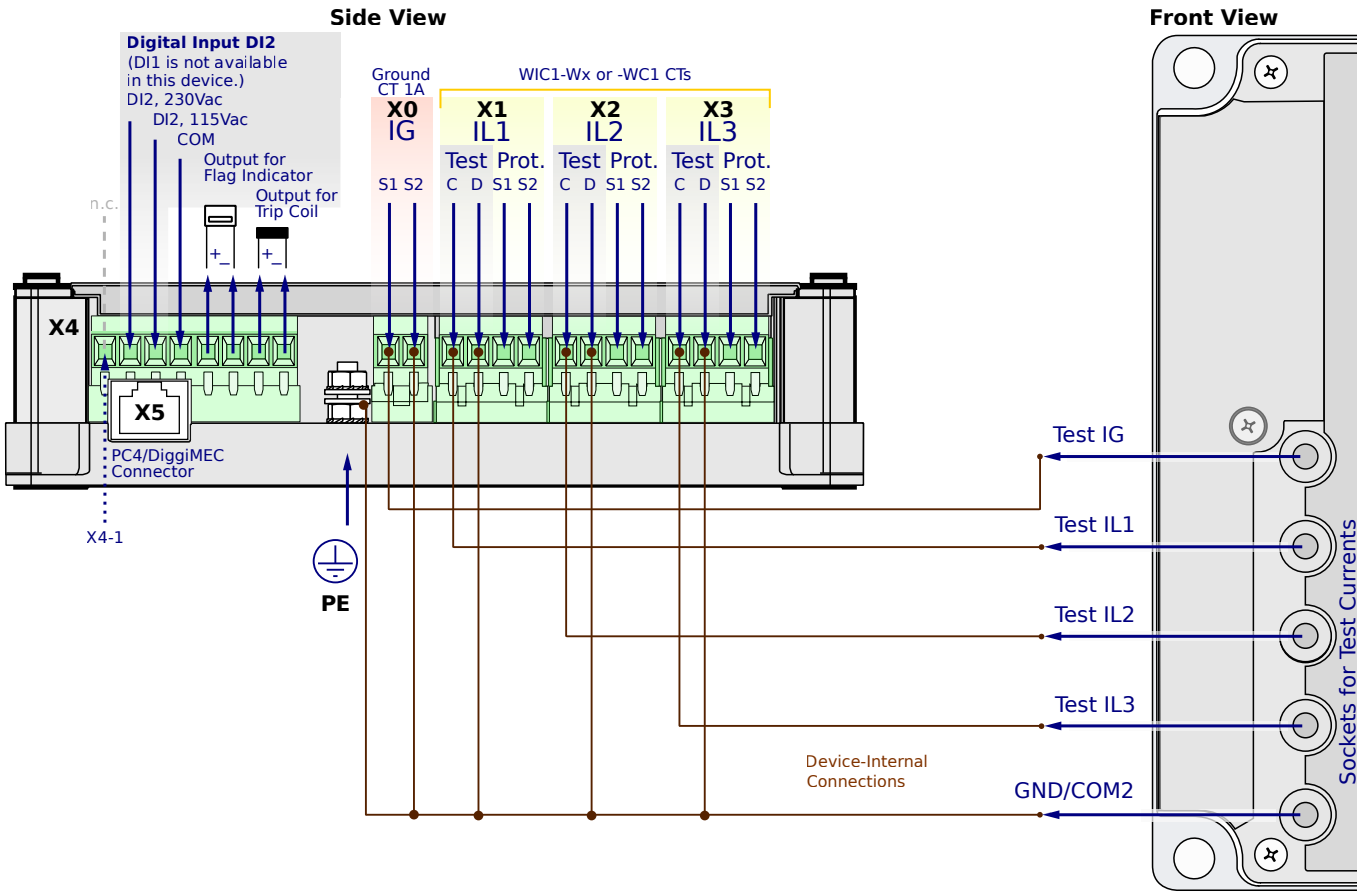


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1PA0

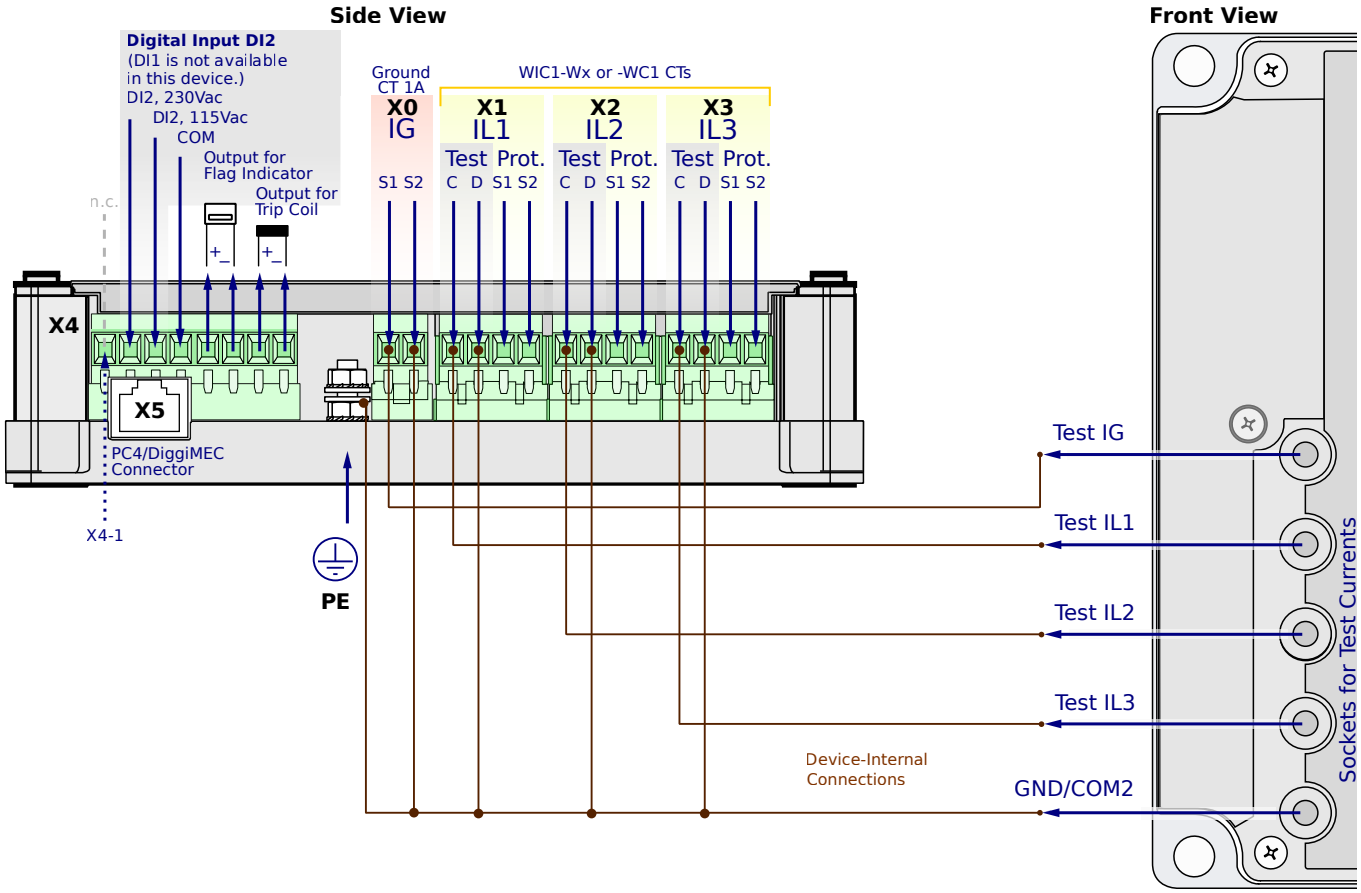


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC1PAH

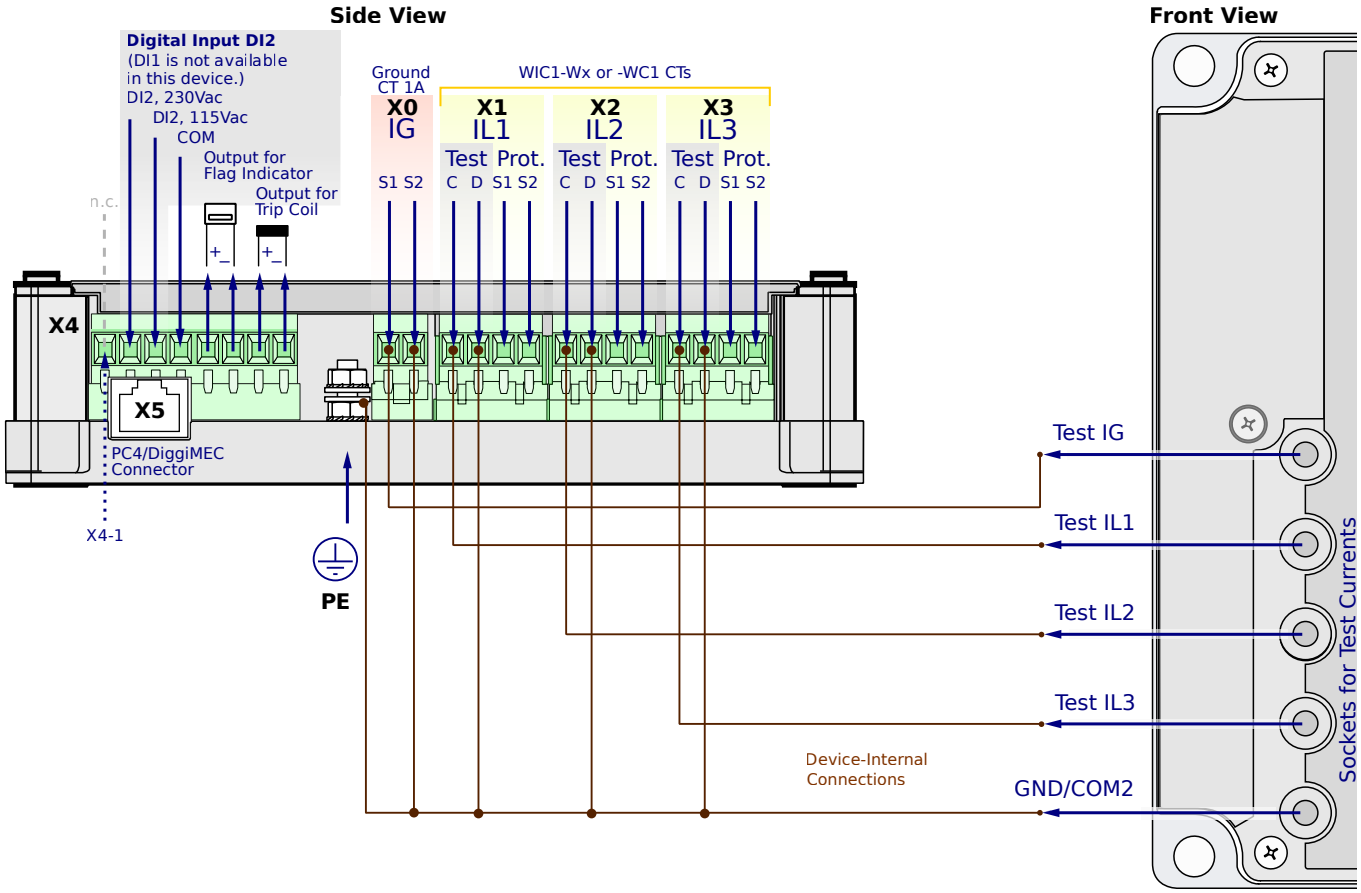


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2SA0

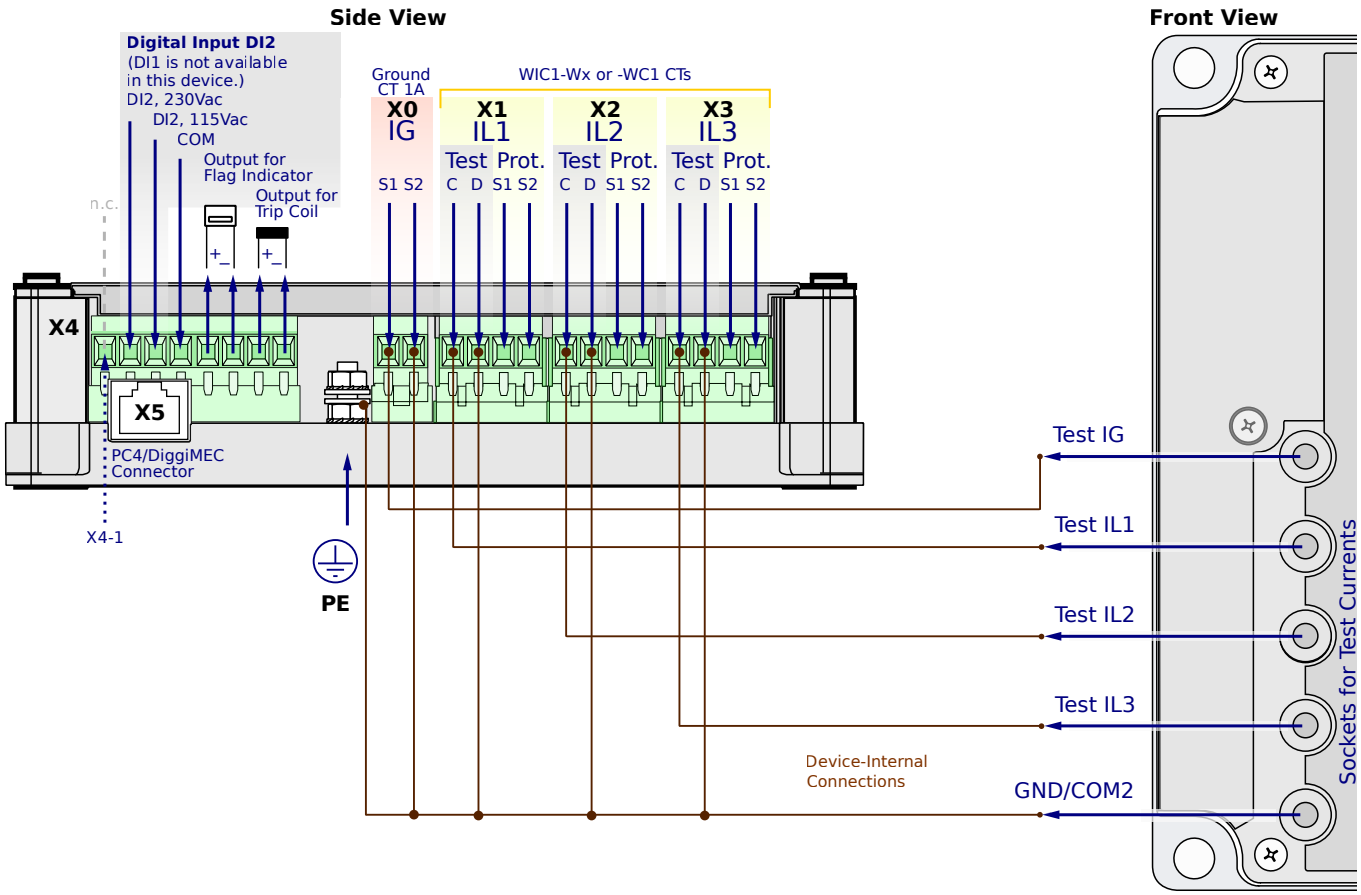


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2SAH

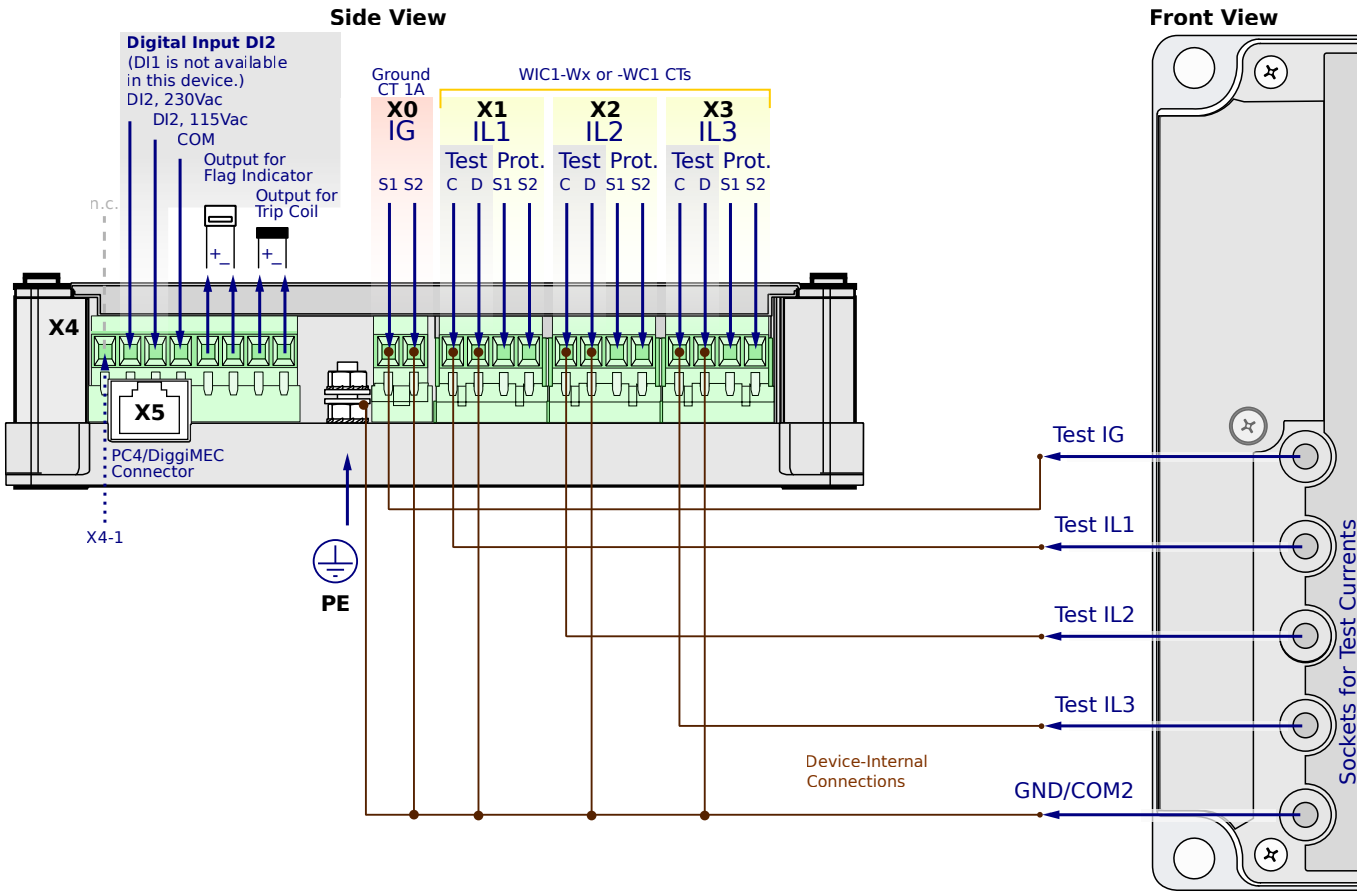


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2AA0

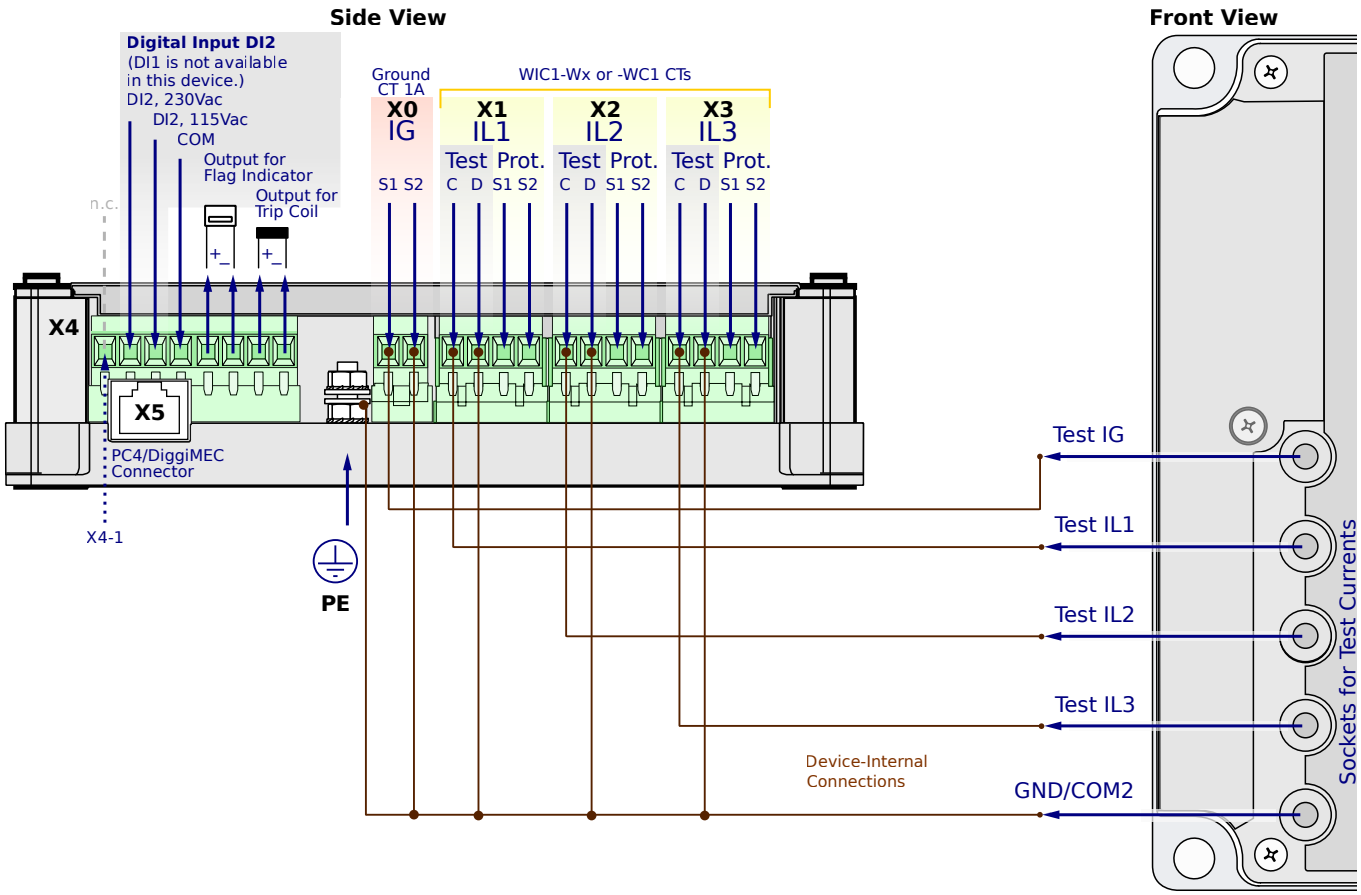


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2AAH

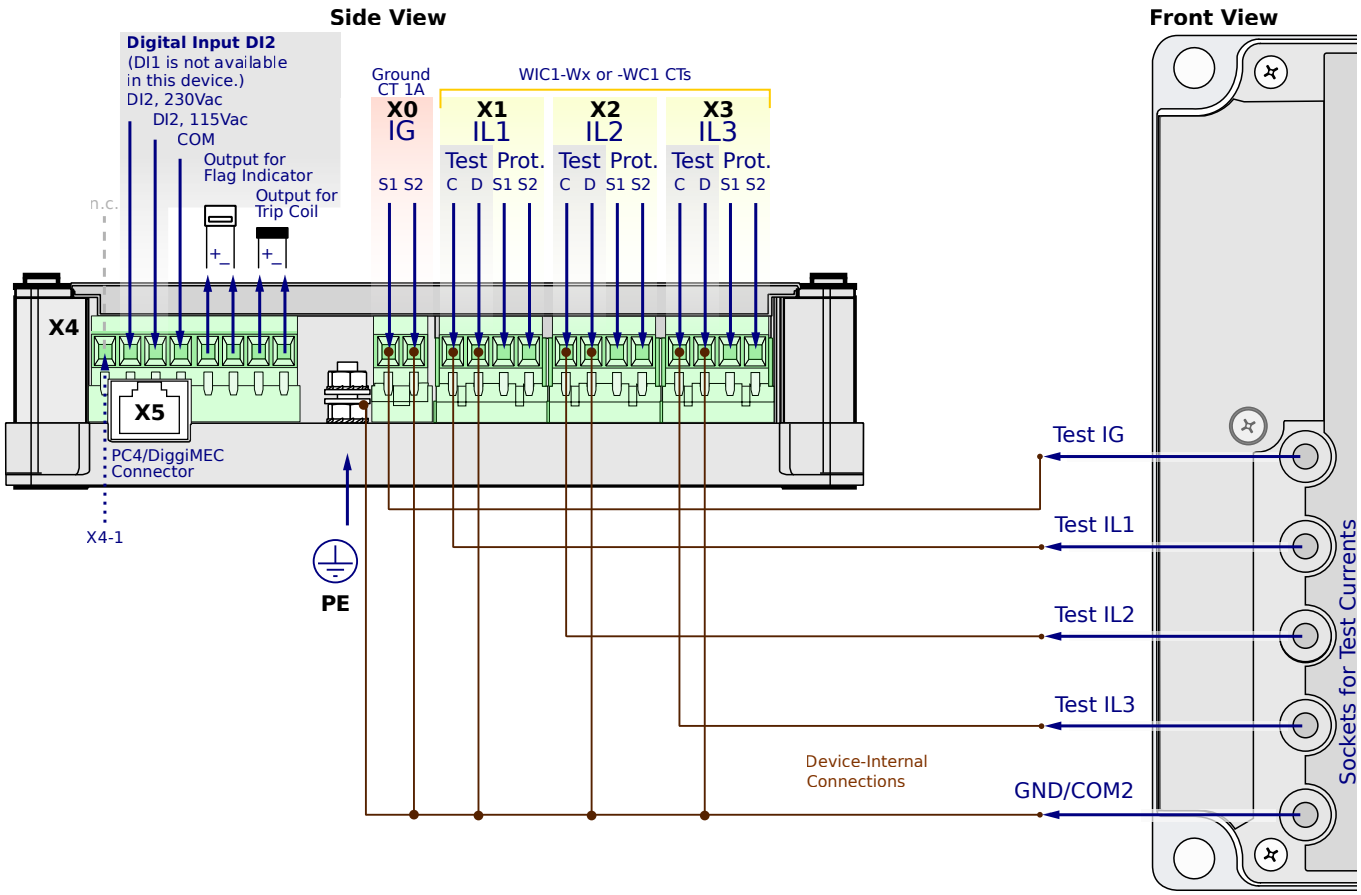


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2PA0

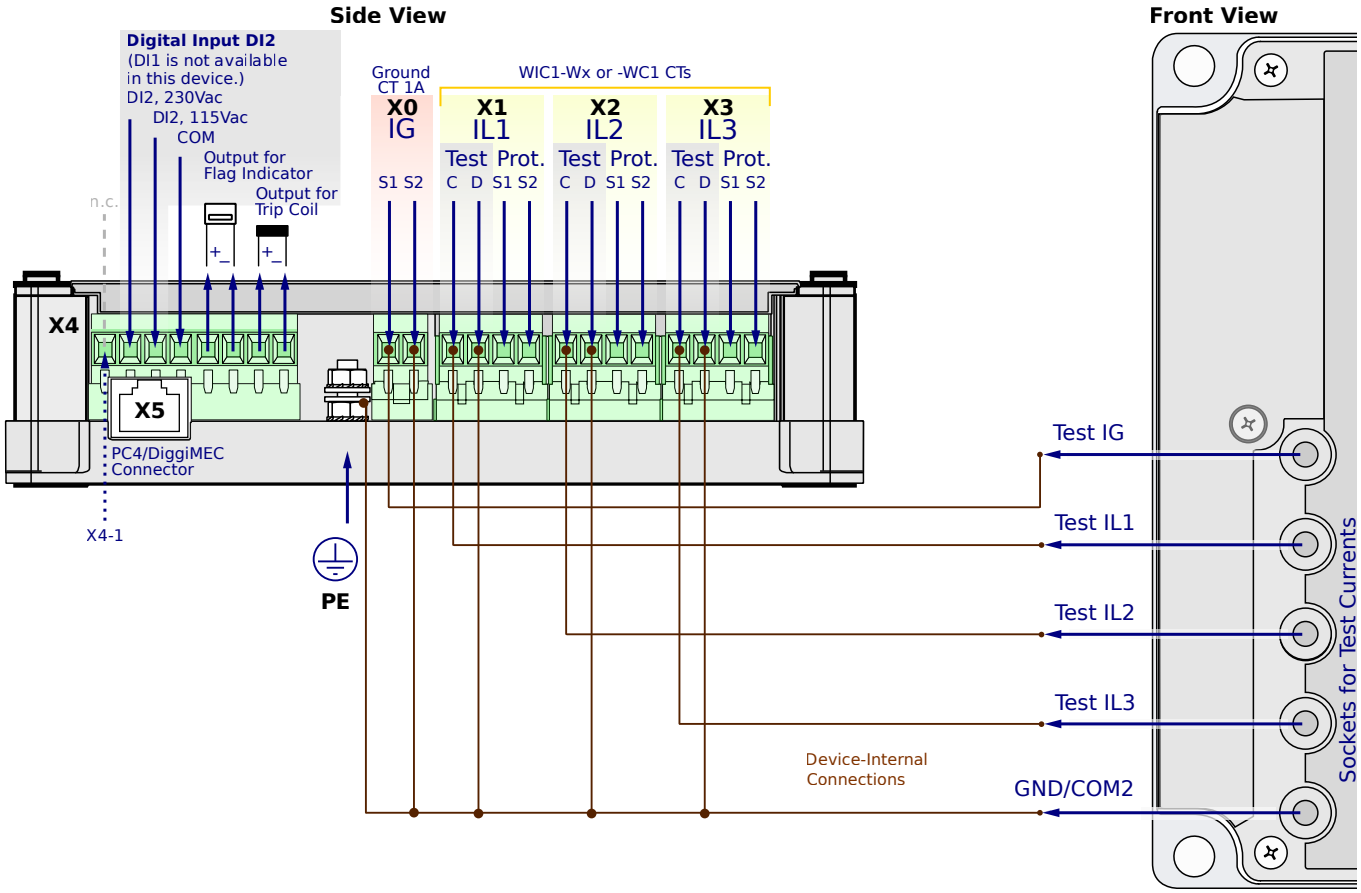


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6NC2PAH

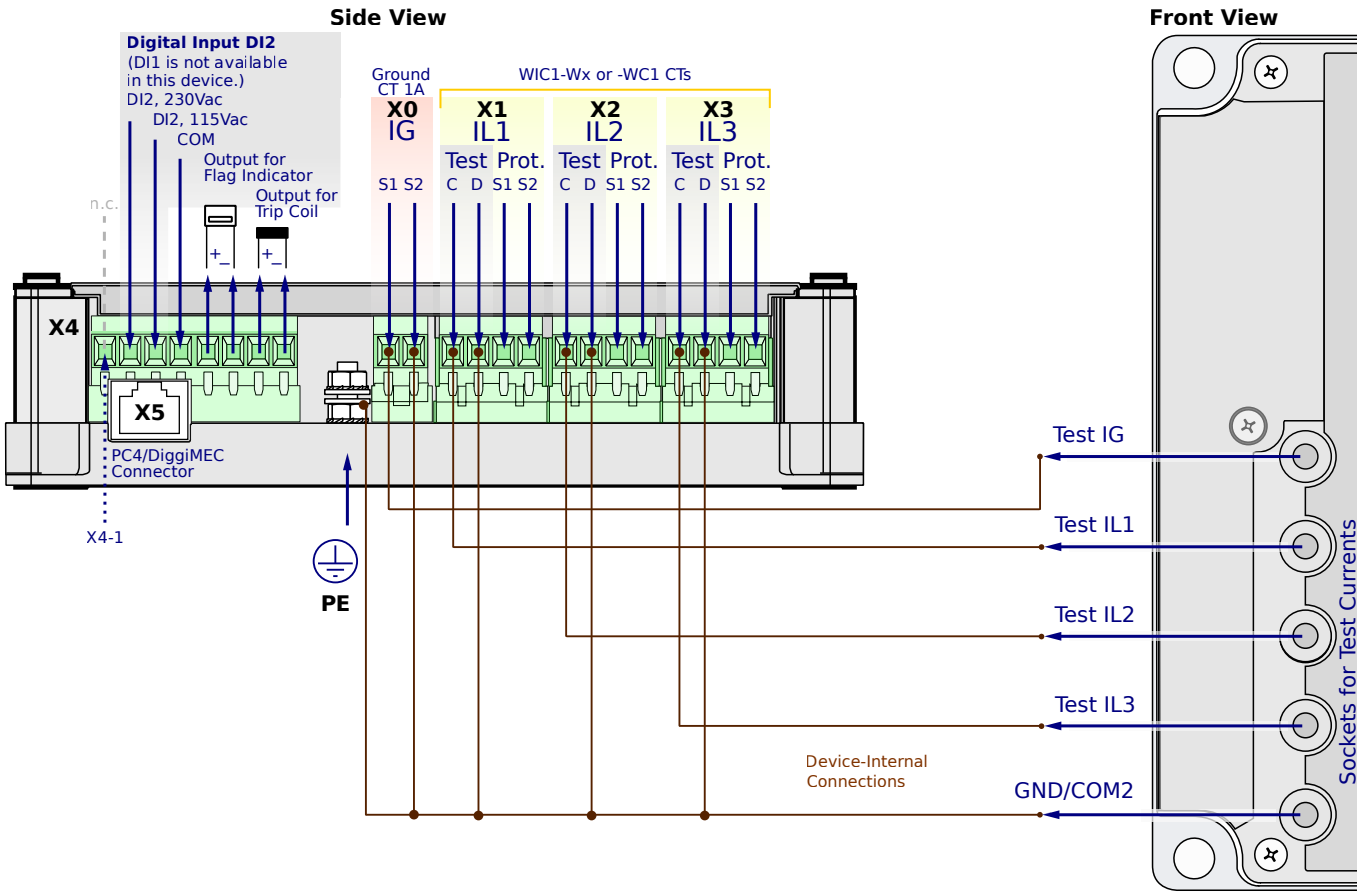


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1SA0

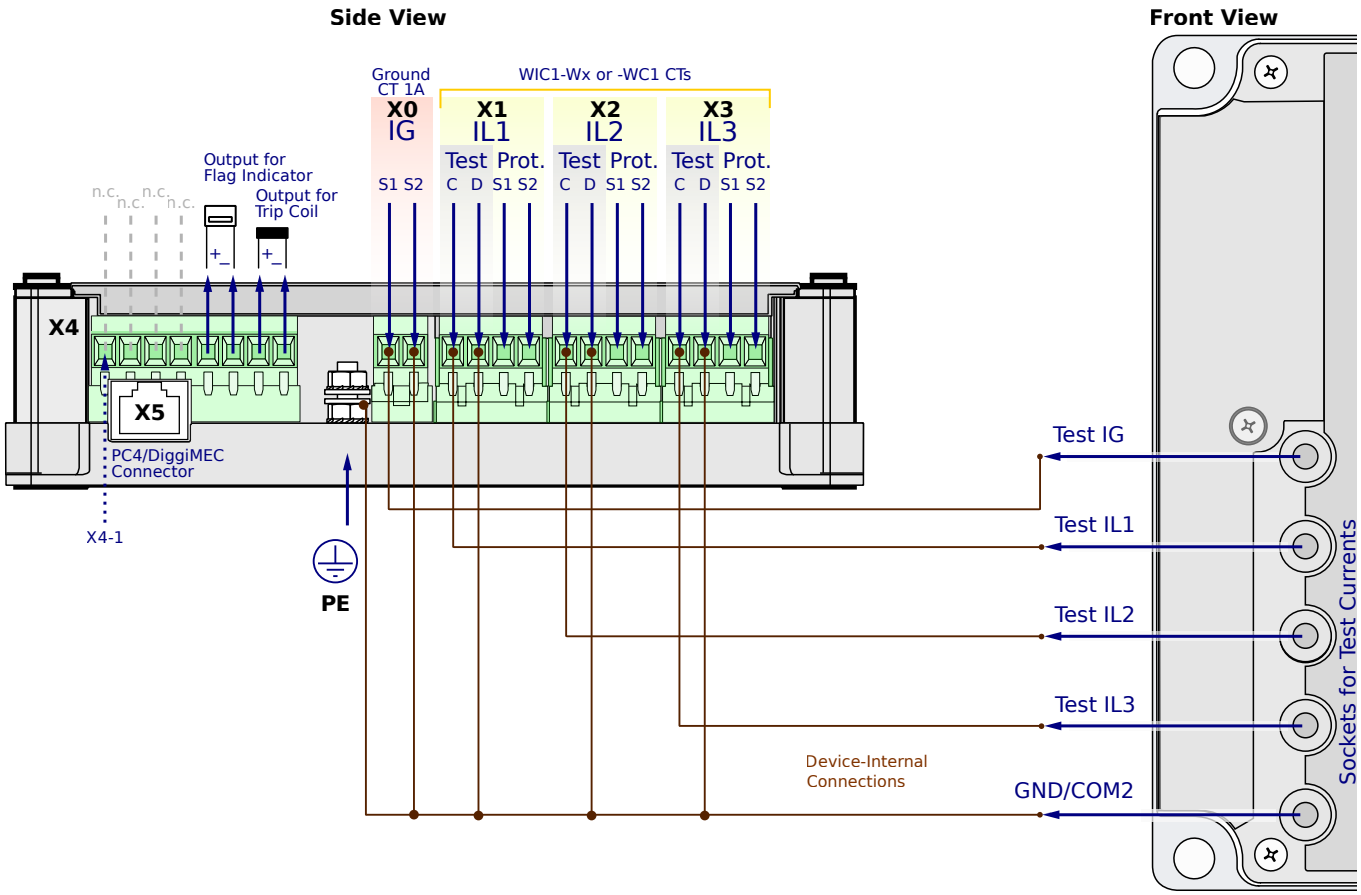


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1SAH

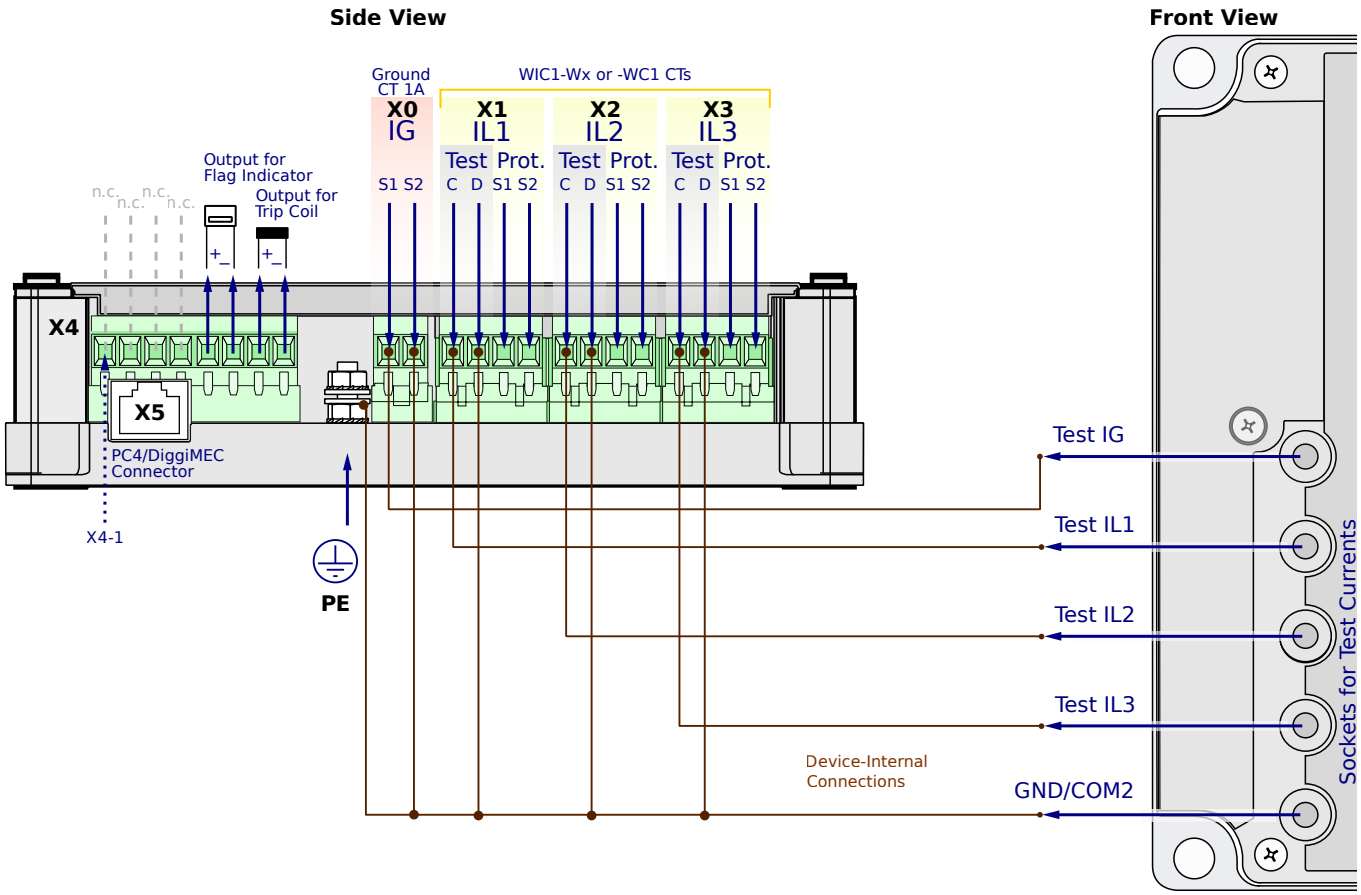


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1AA0

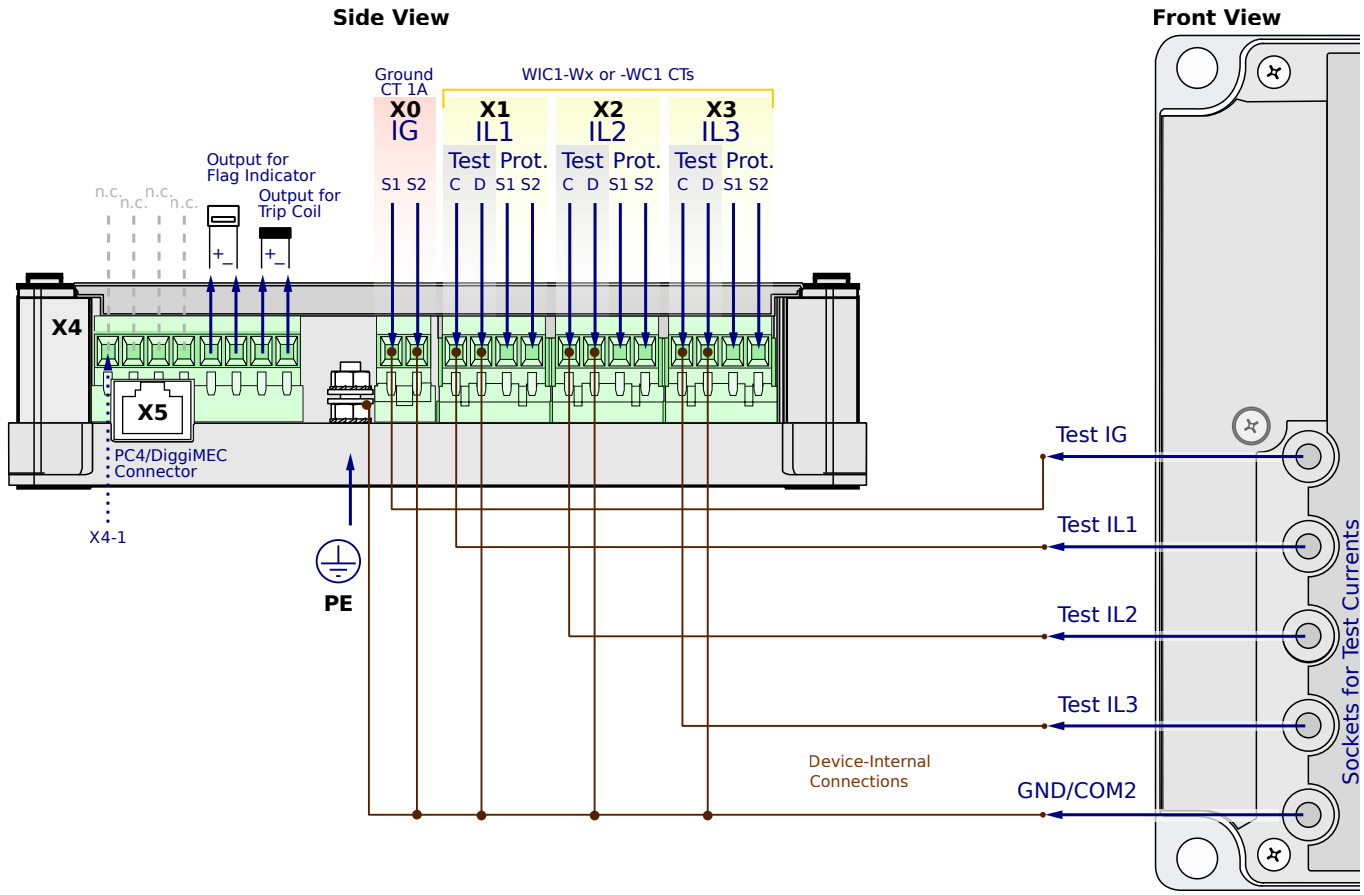


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1AAH

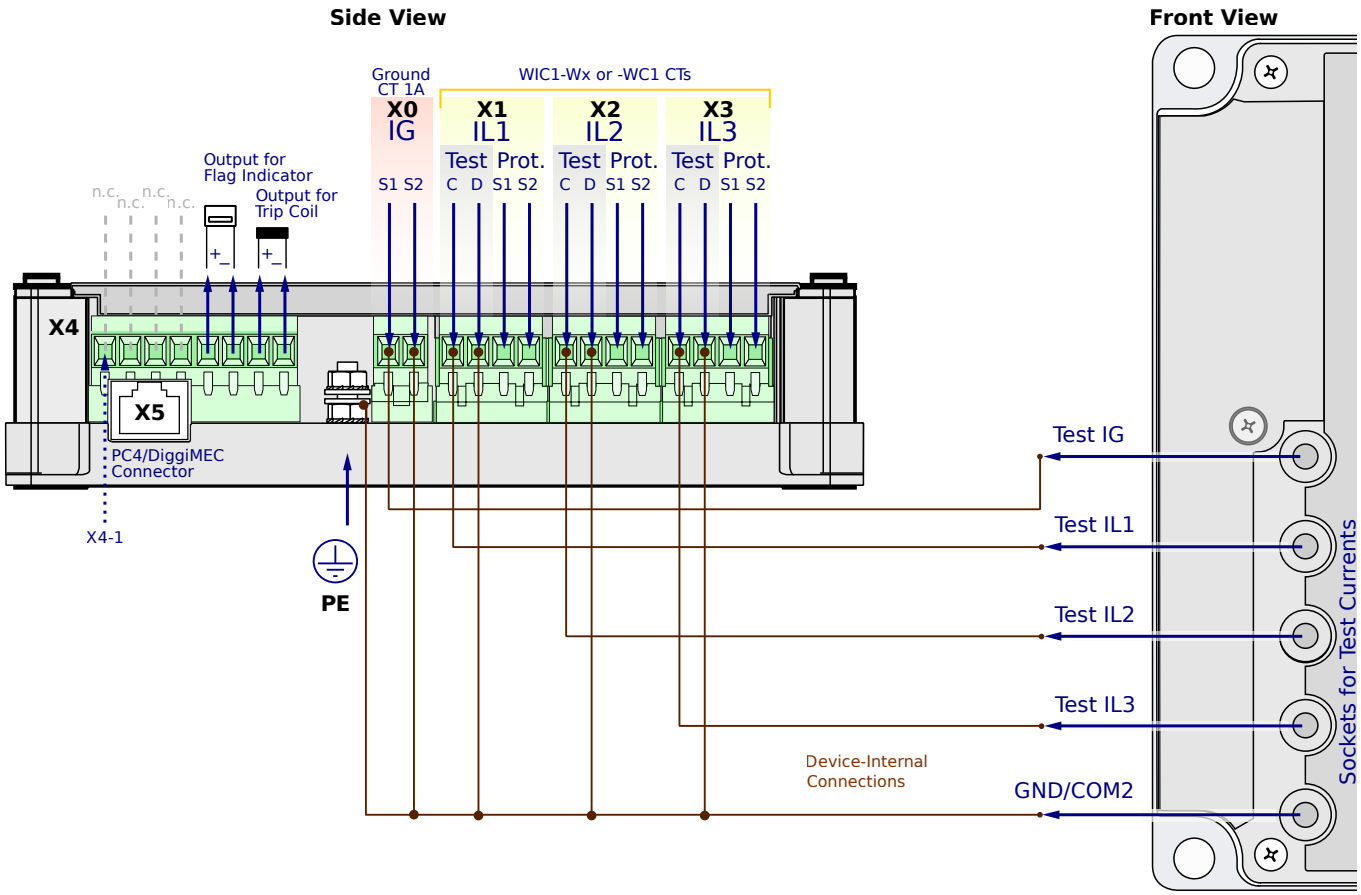


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1PA0

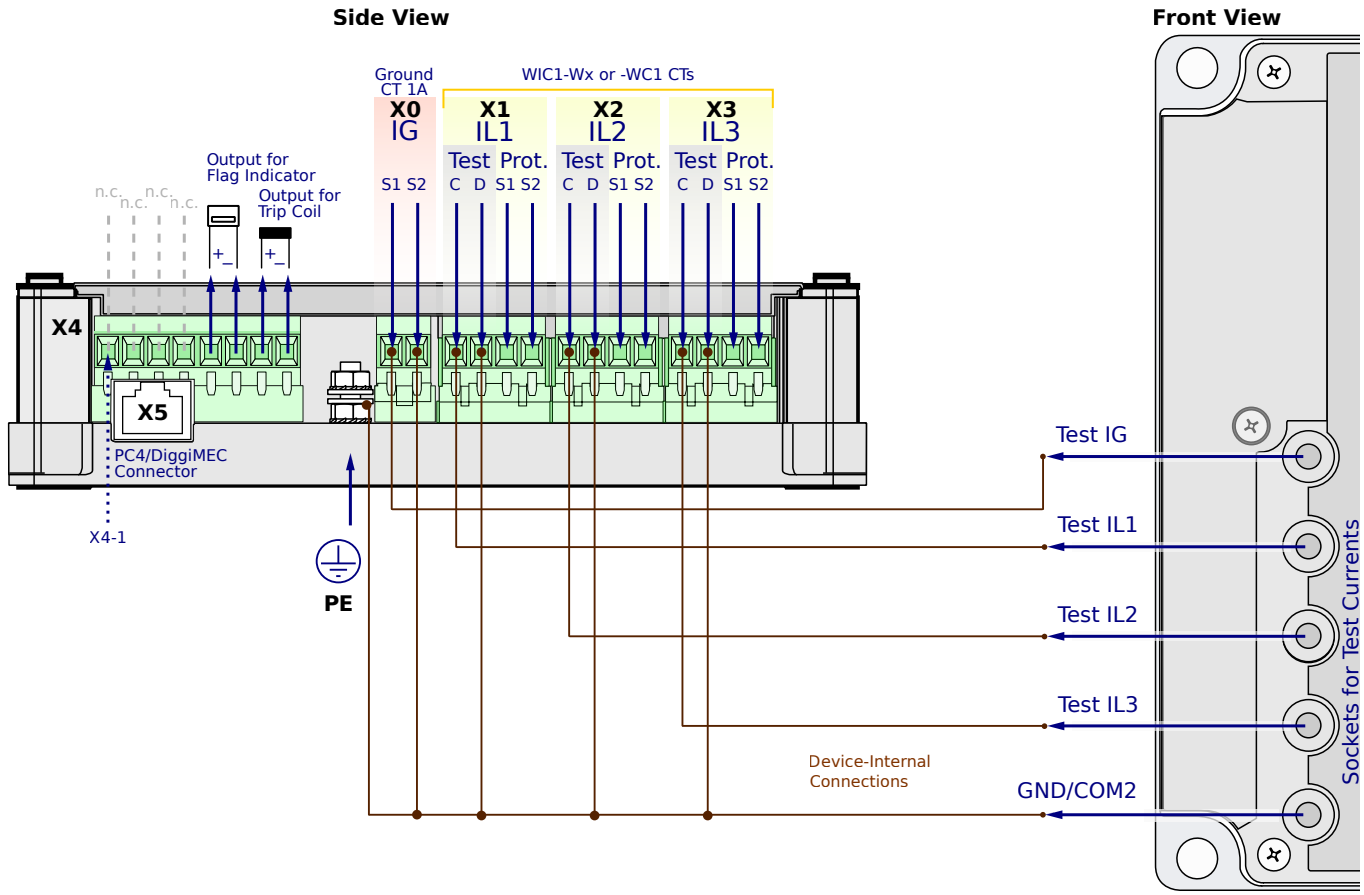


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN1PAH

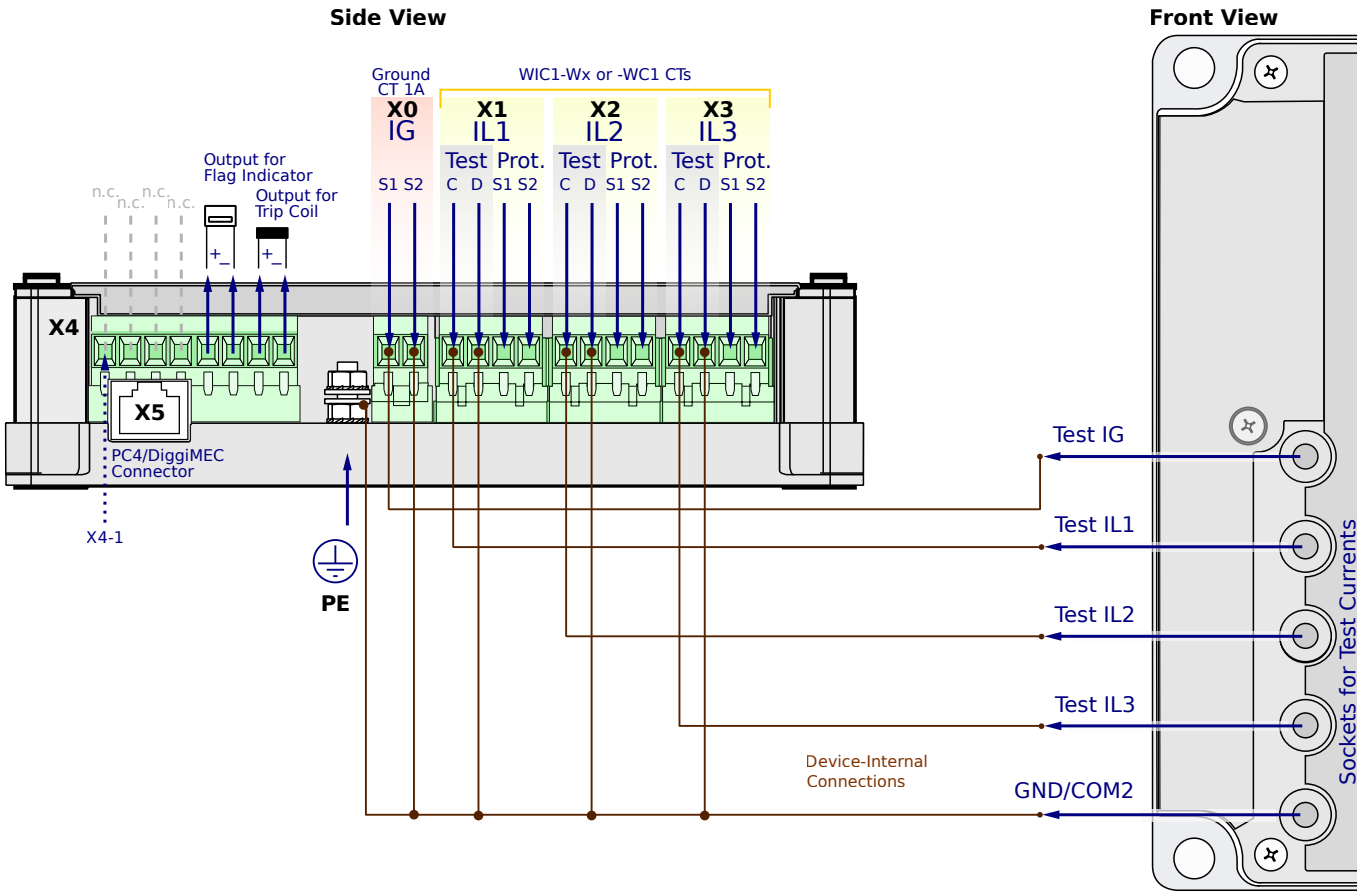


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2SA0

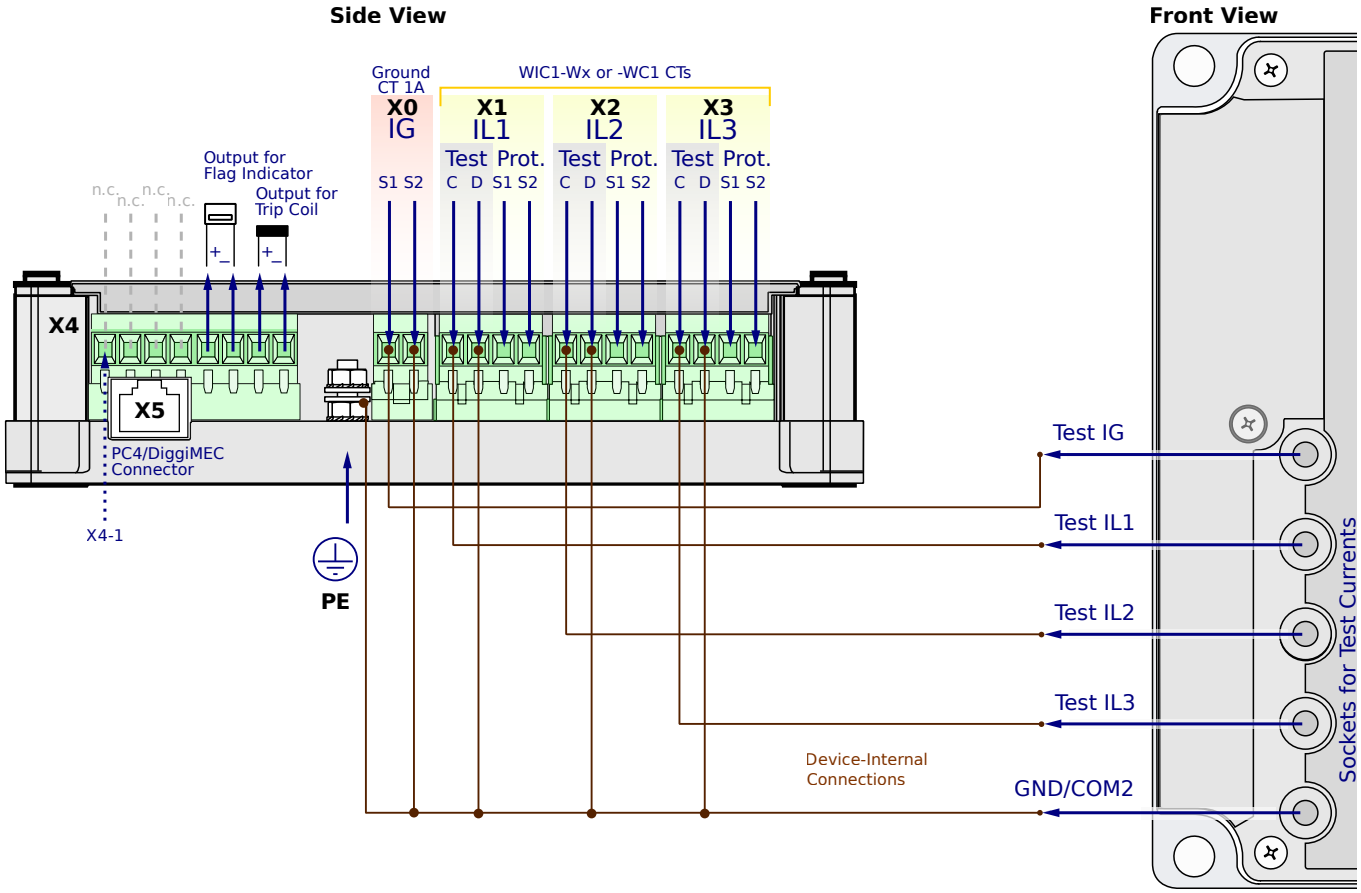


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2SAH

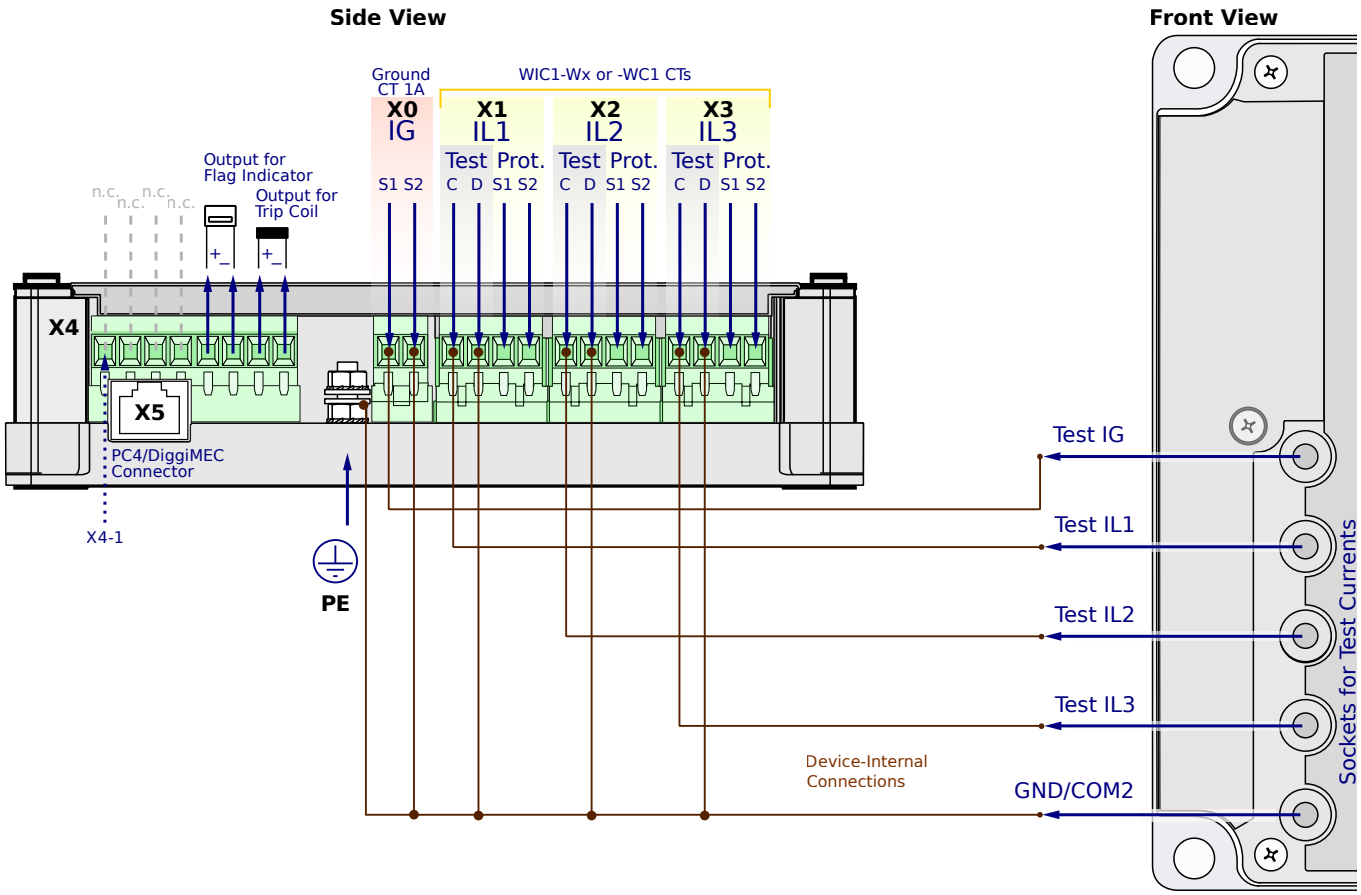


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2AA0

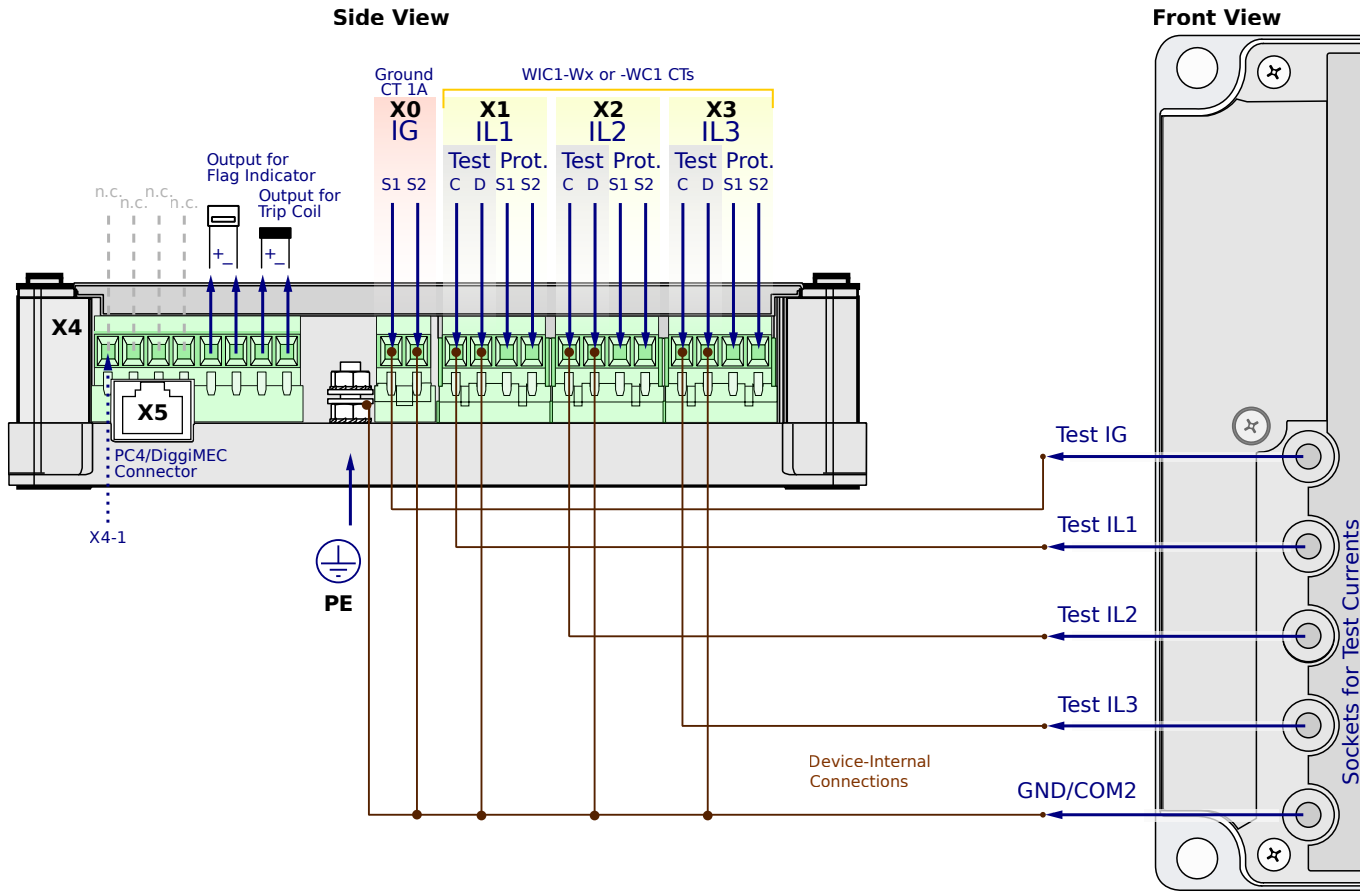


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2AAH

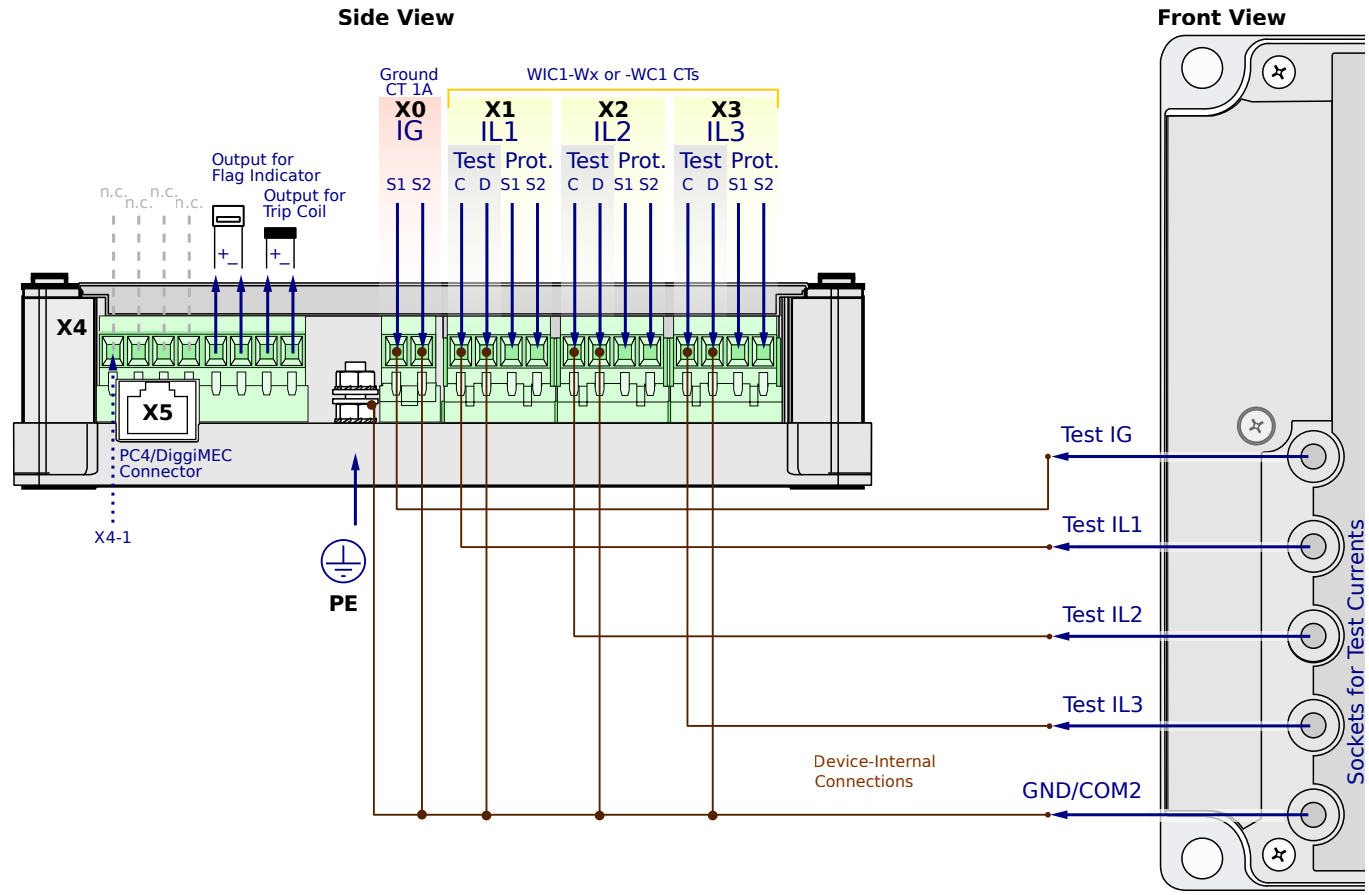


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2PA0

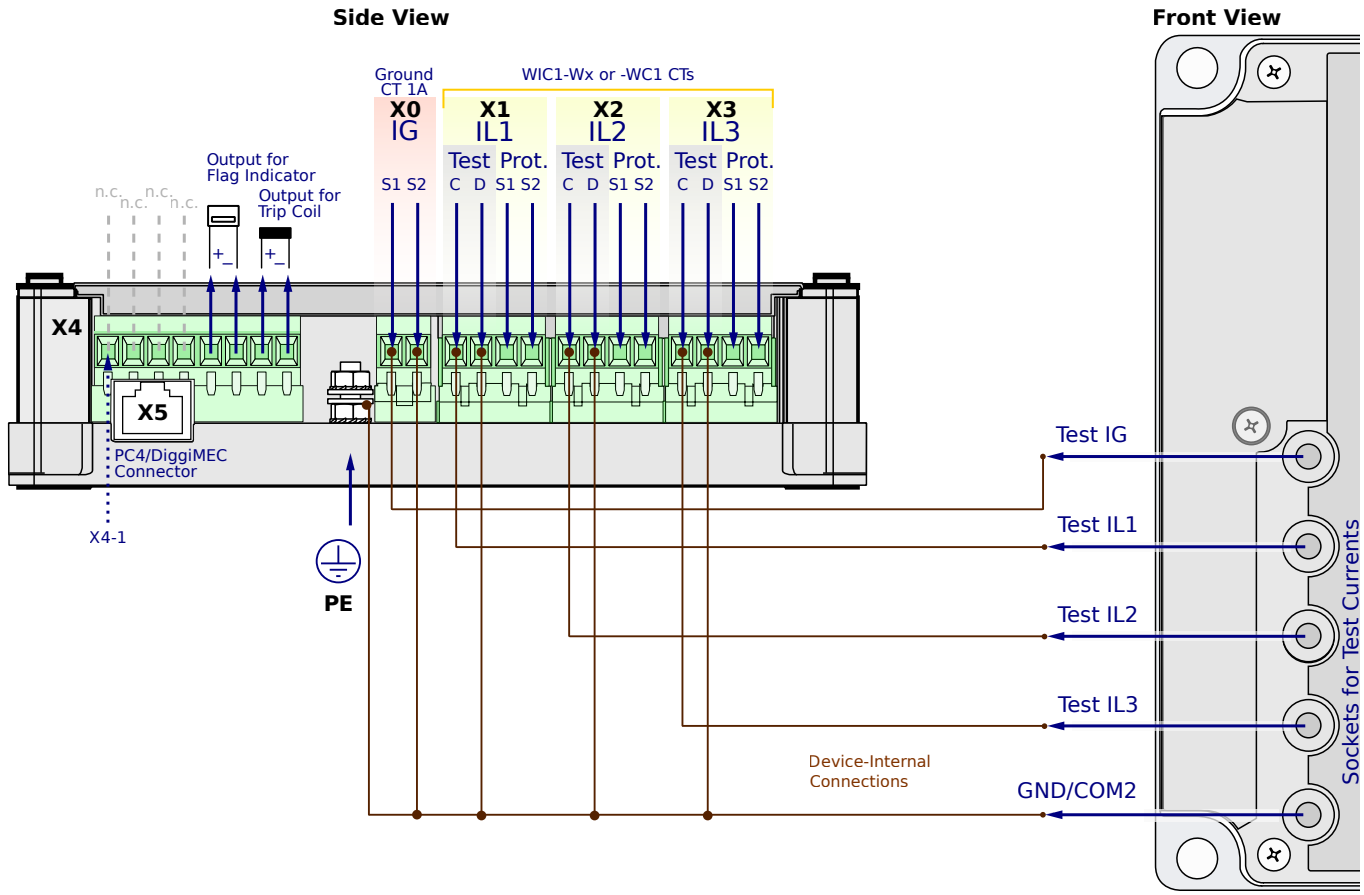


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FN2PAH

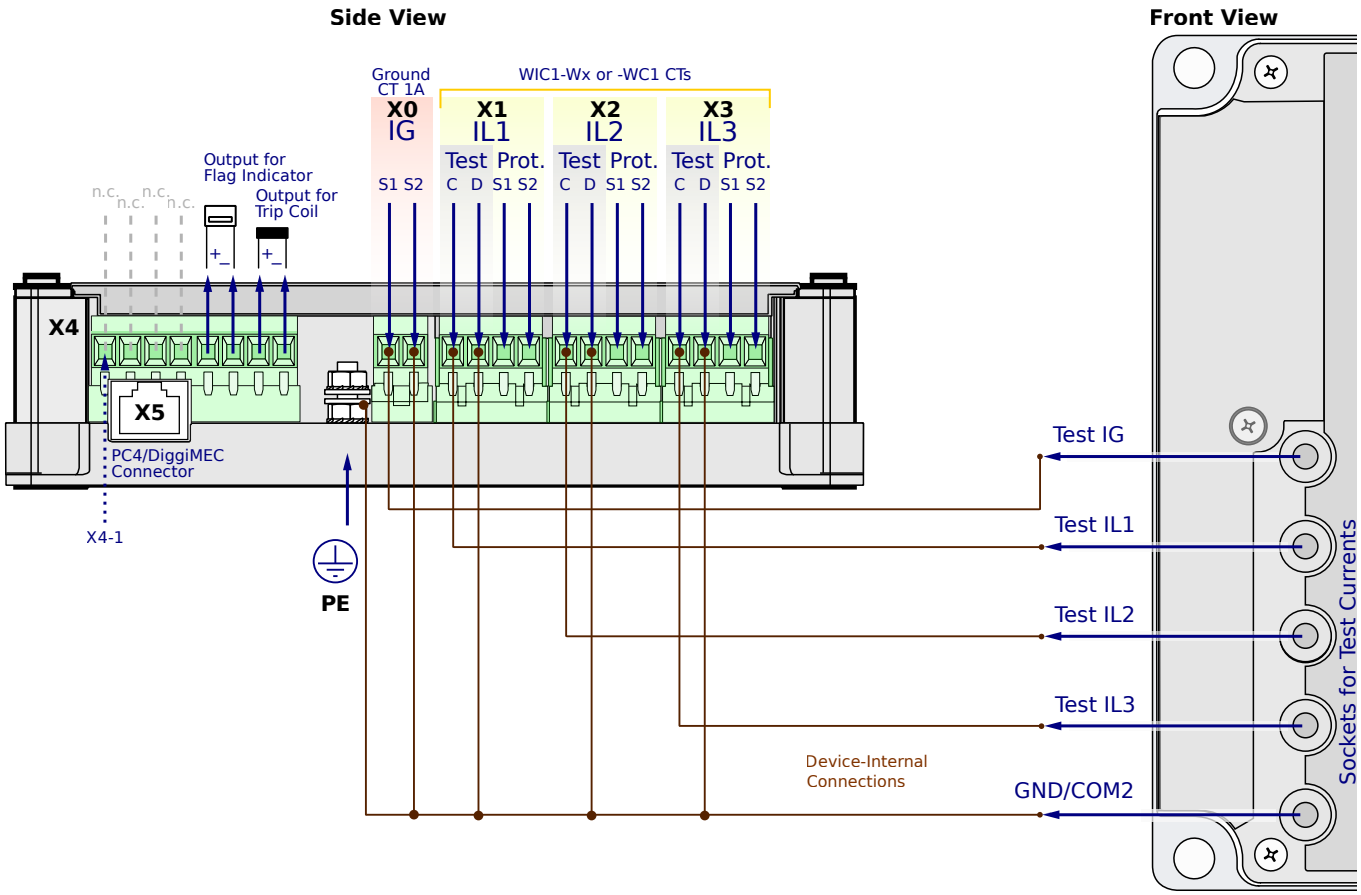


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1SA0

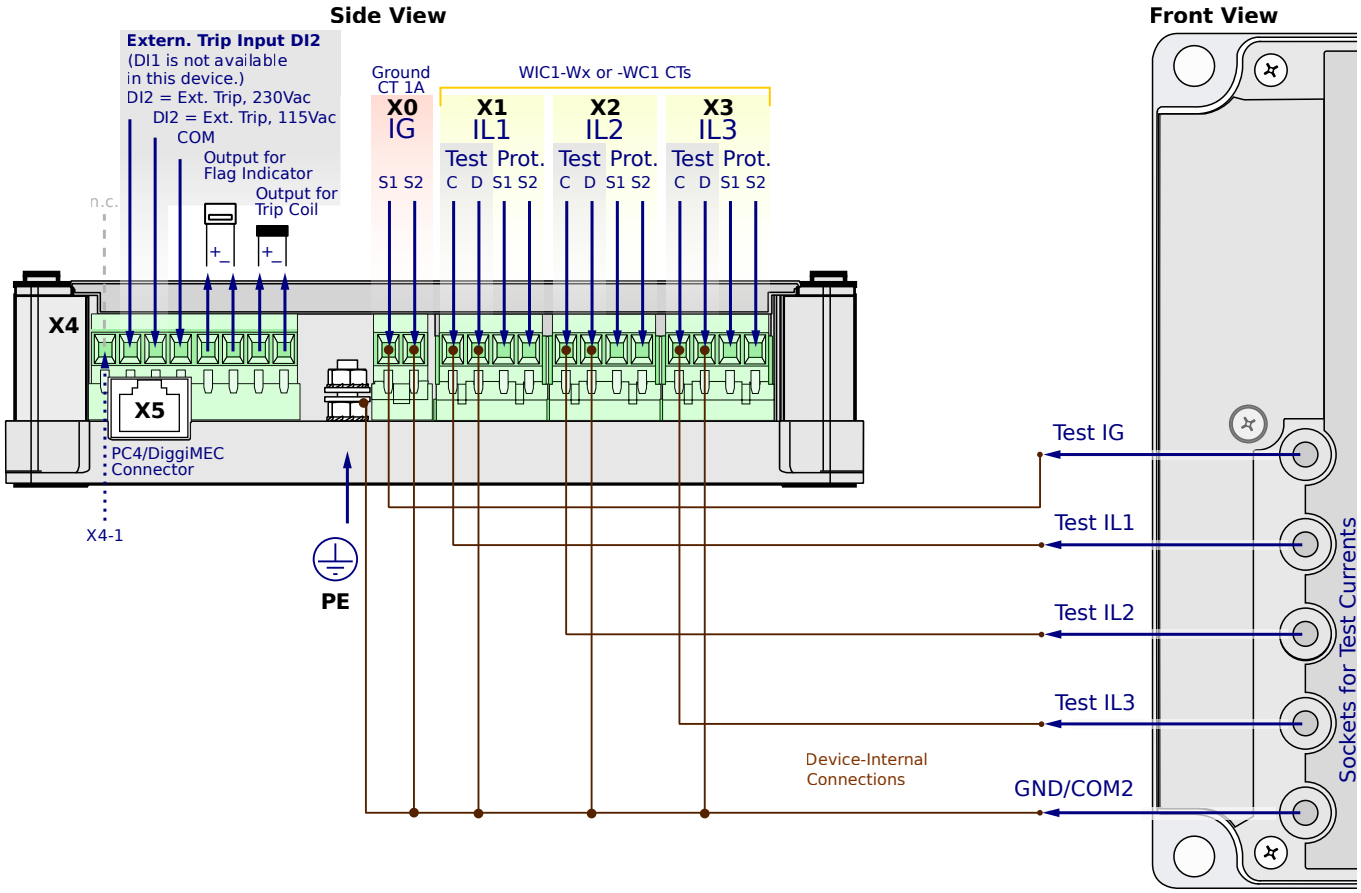


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1SAH

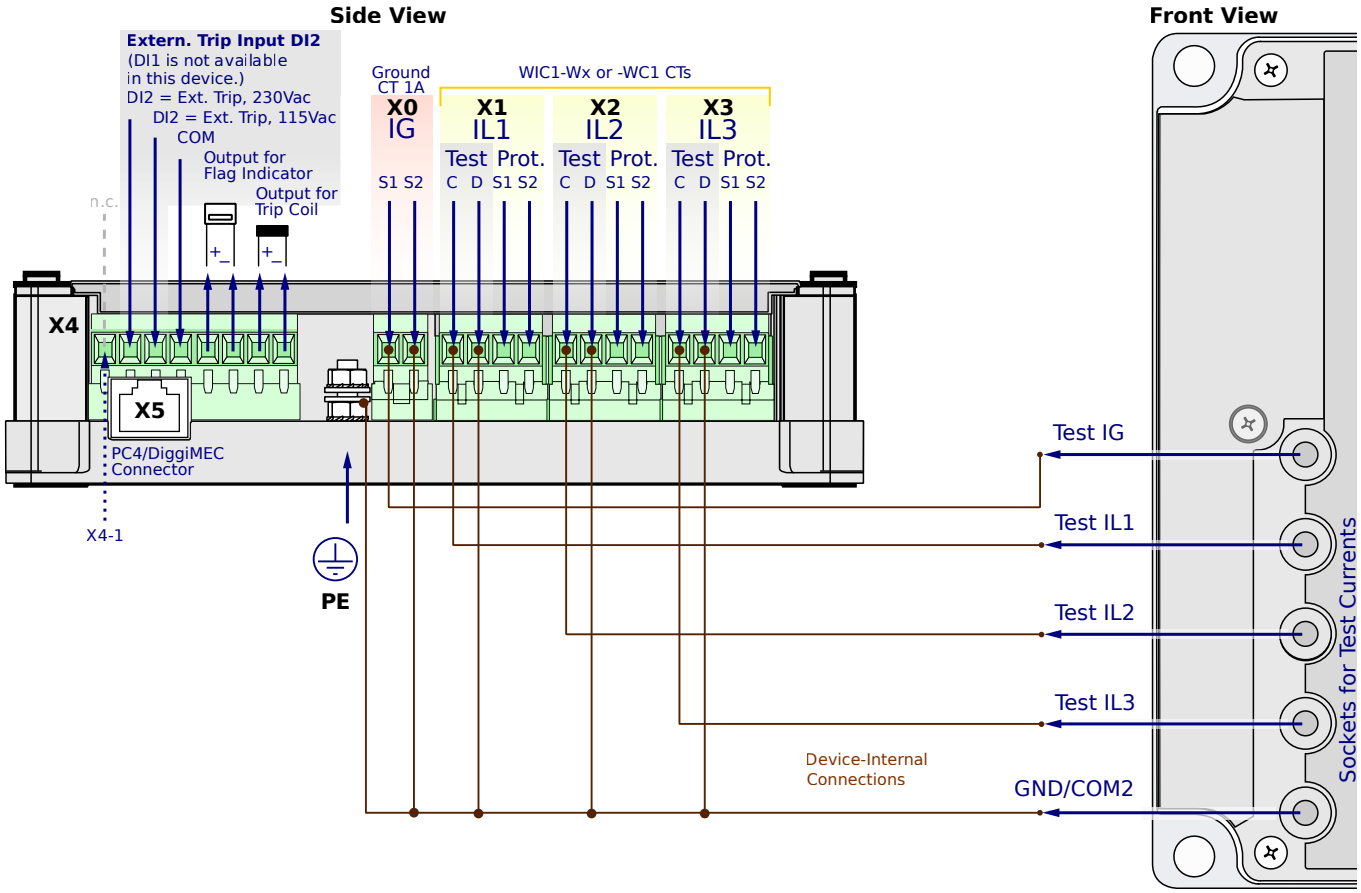


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1AA0

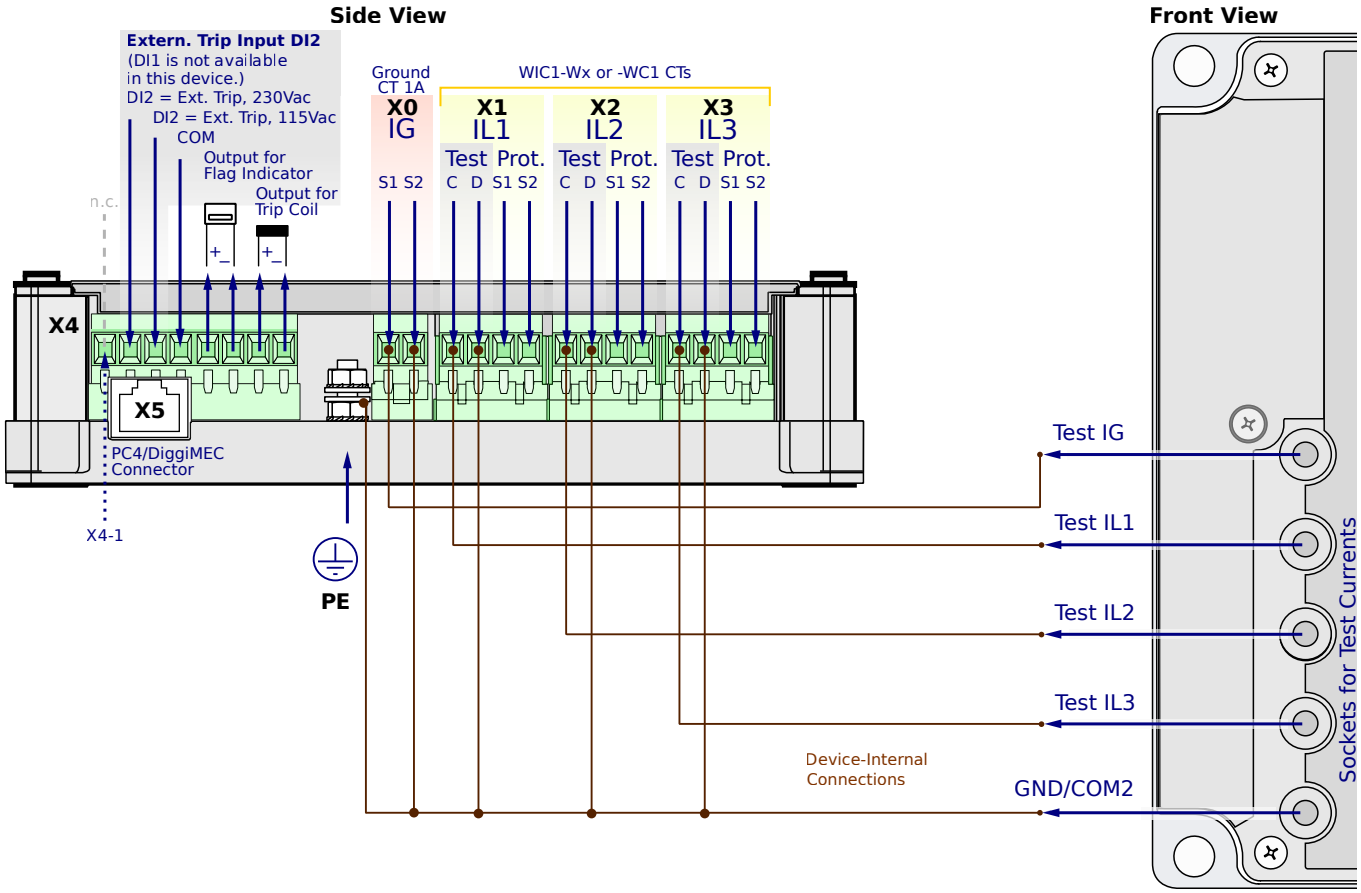


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1AAH

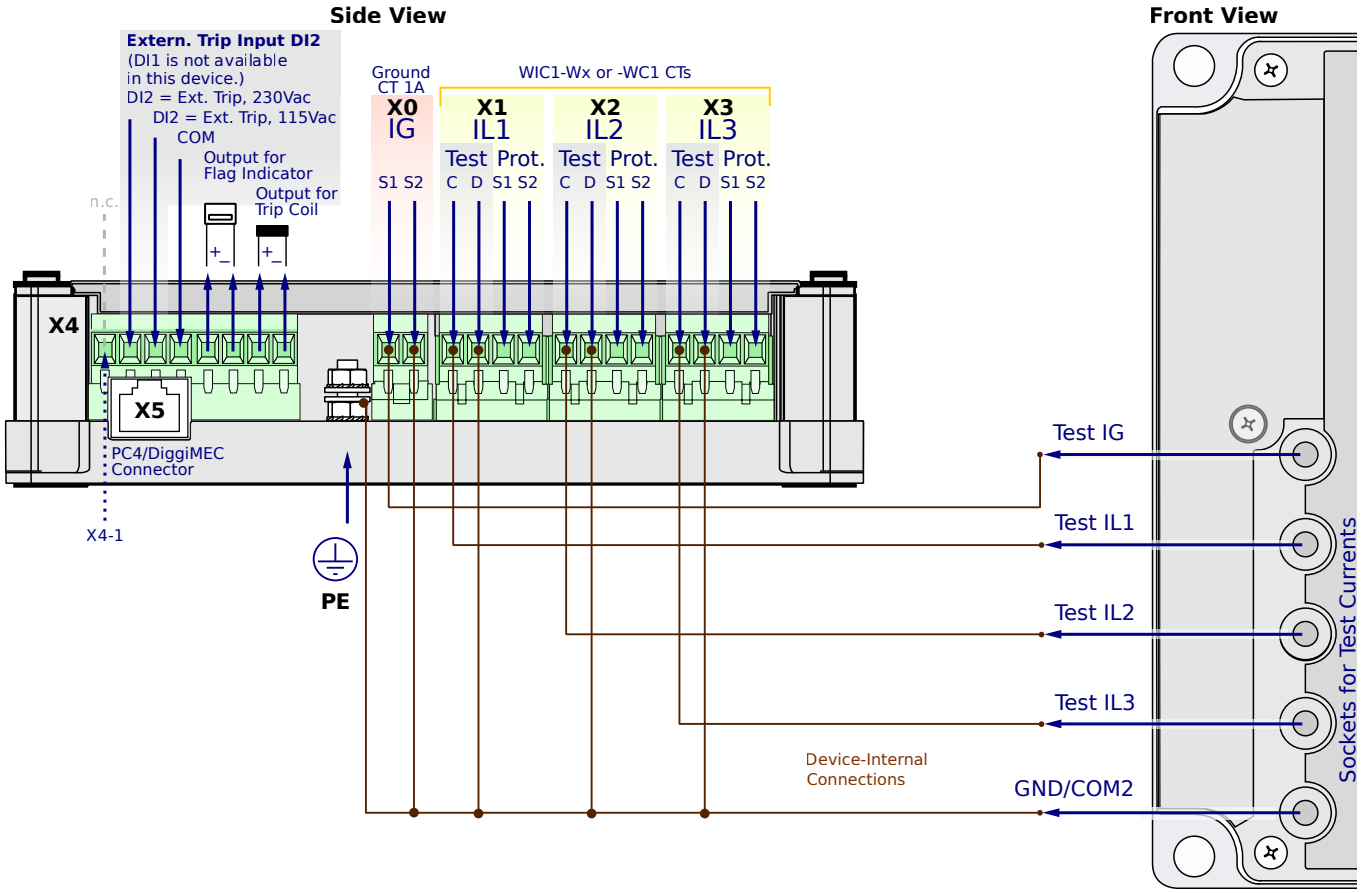


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1PA0

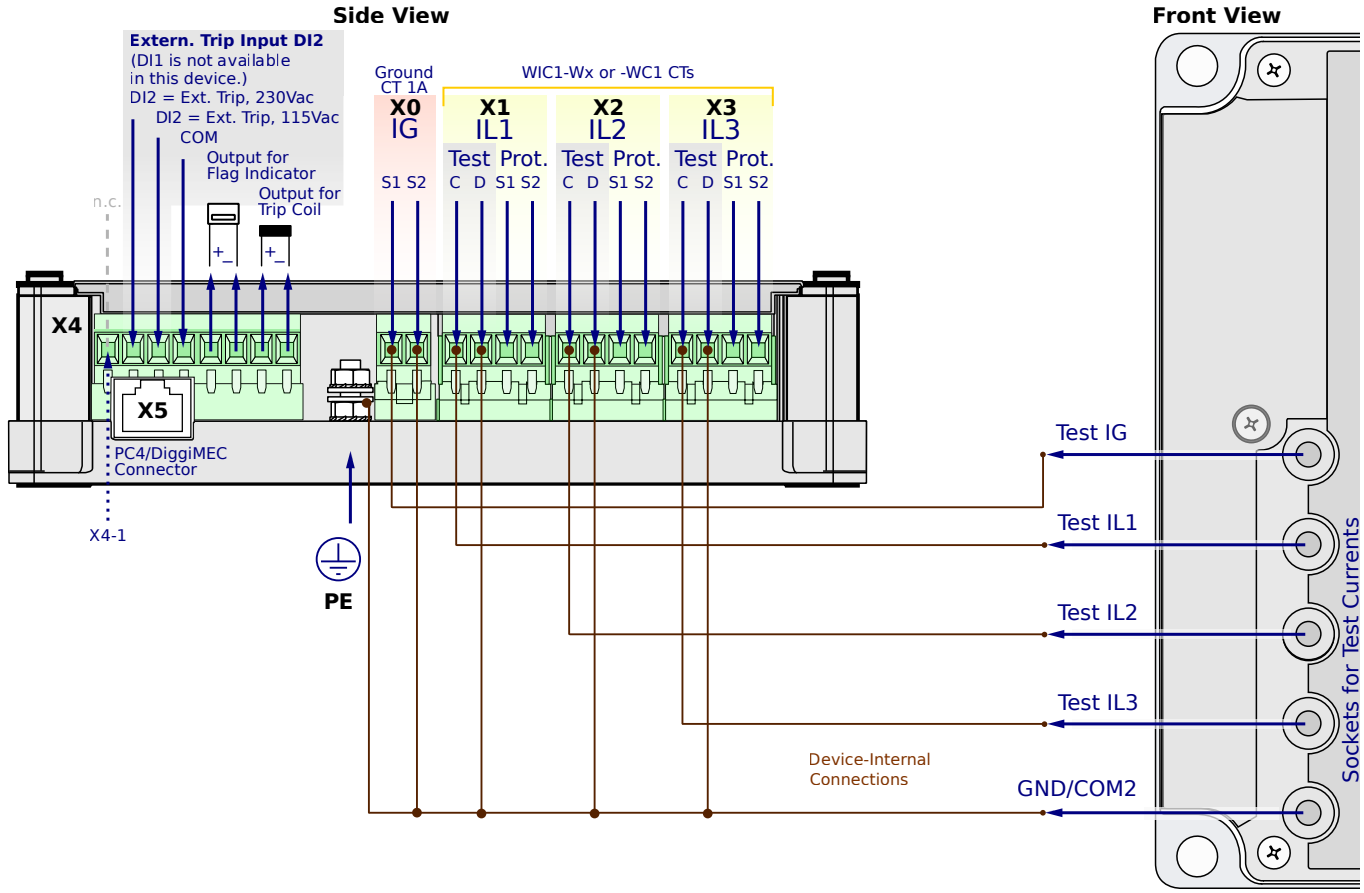


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF1PAH

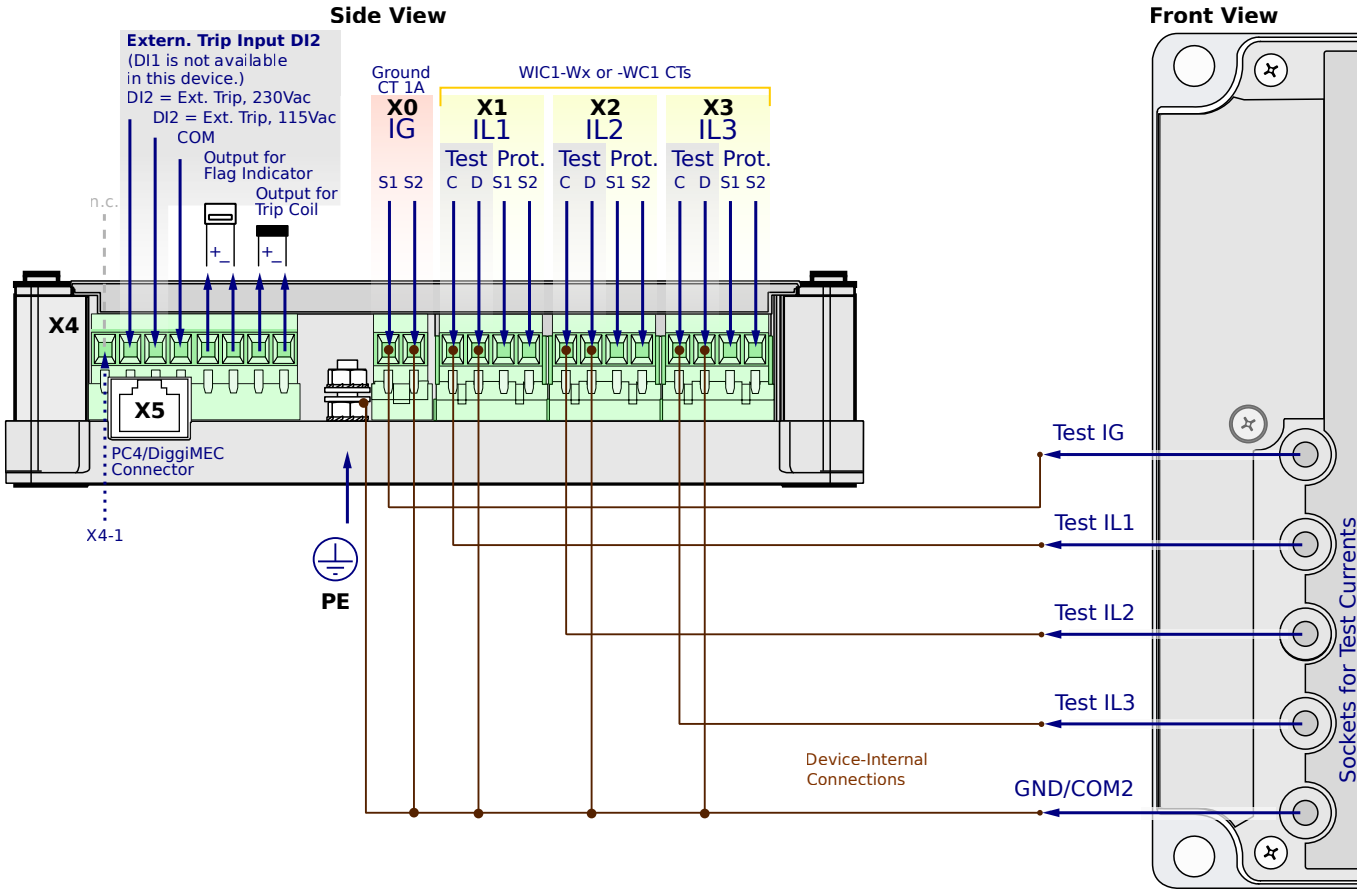


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2SA0

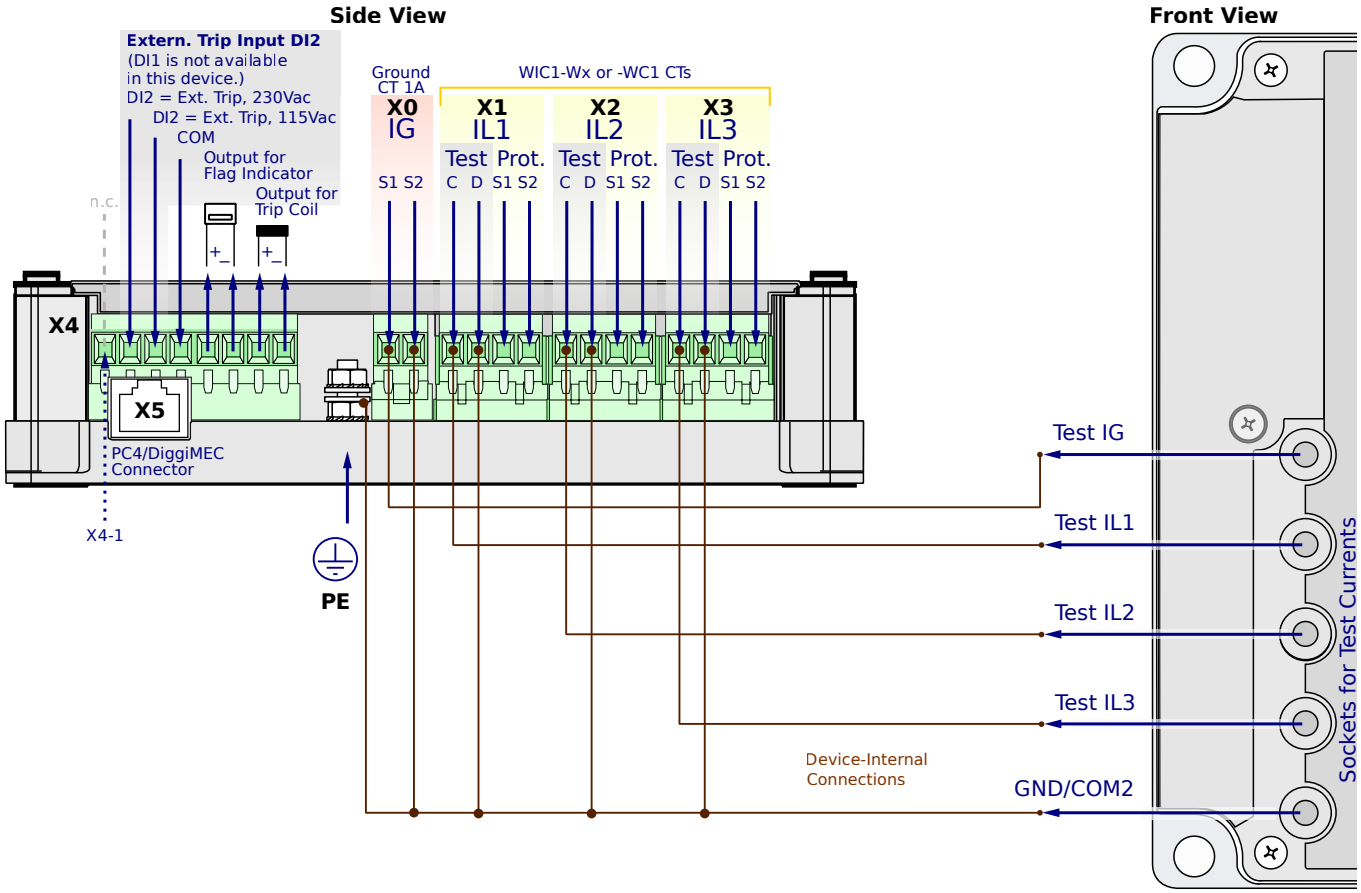


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2SAH

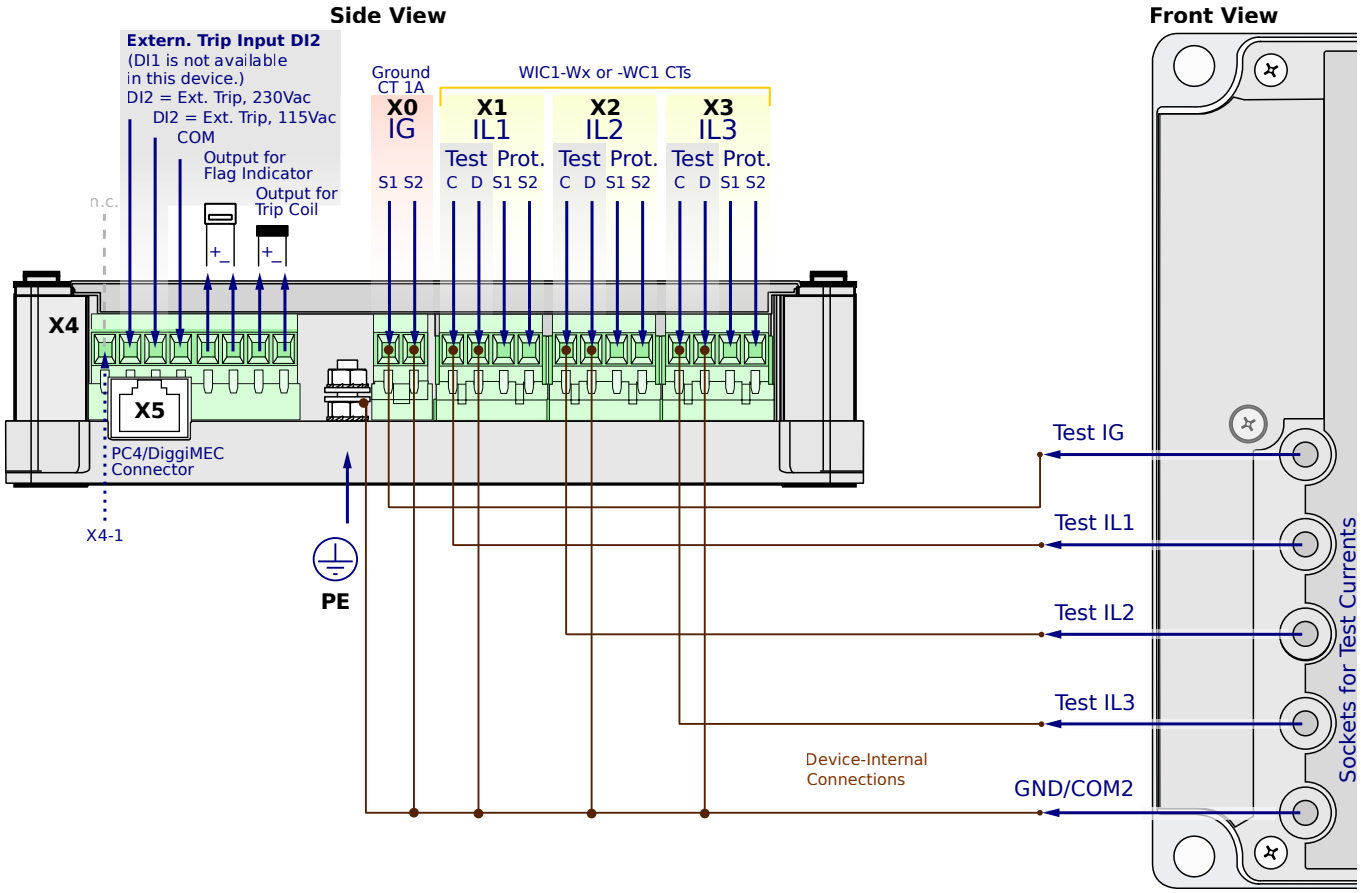


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2AA0

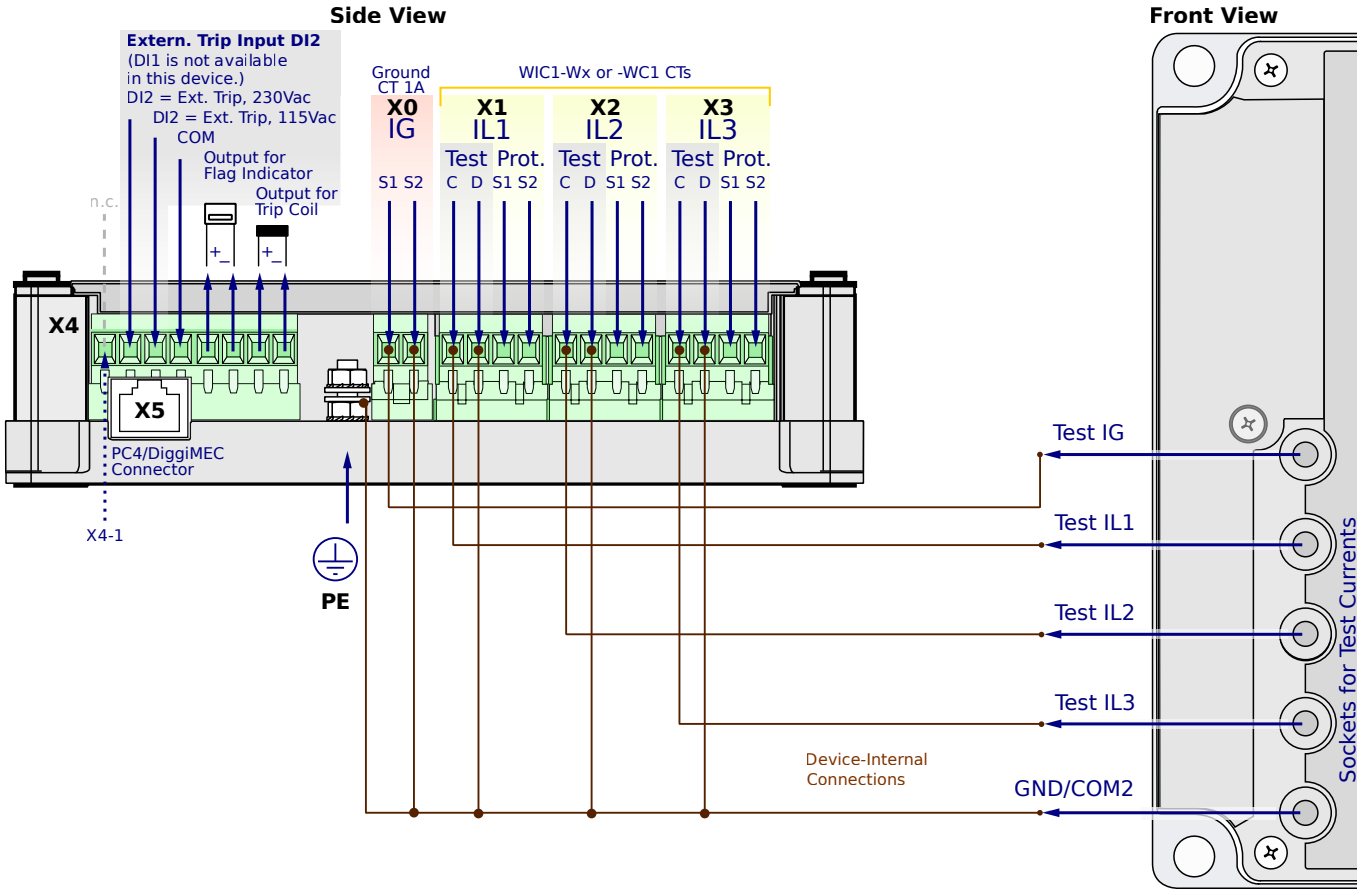


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2AAH

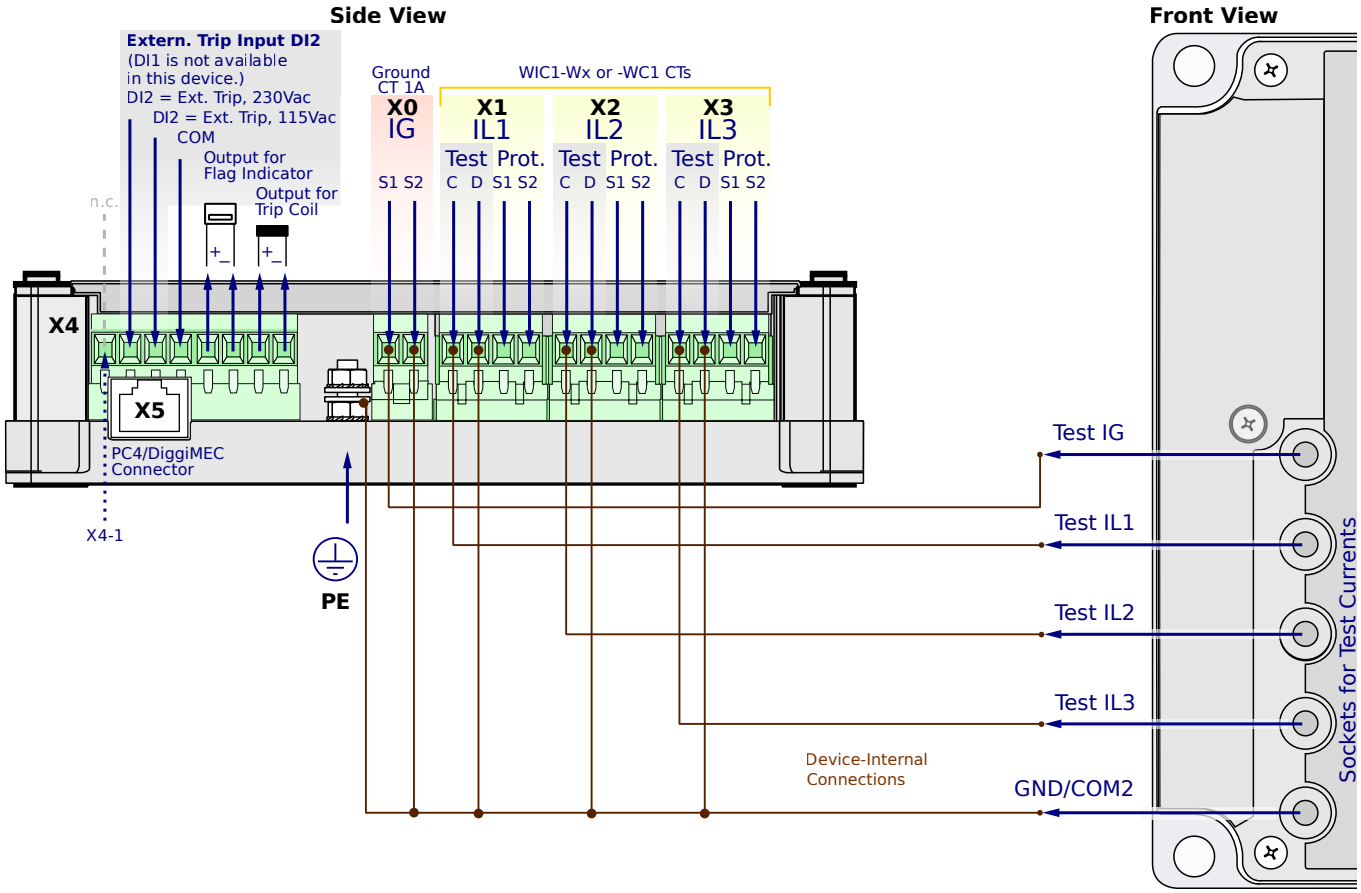


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2PA0

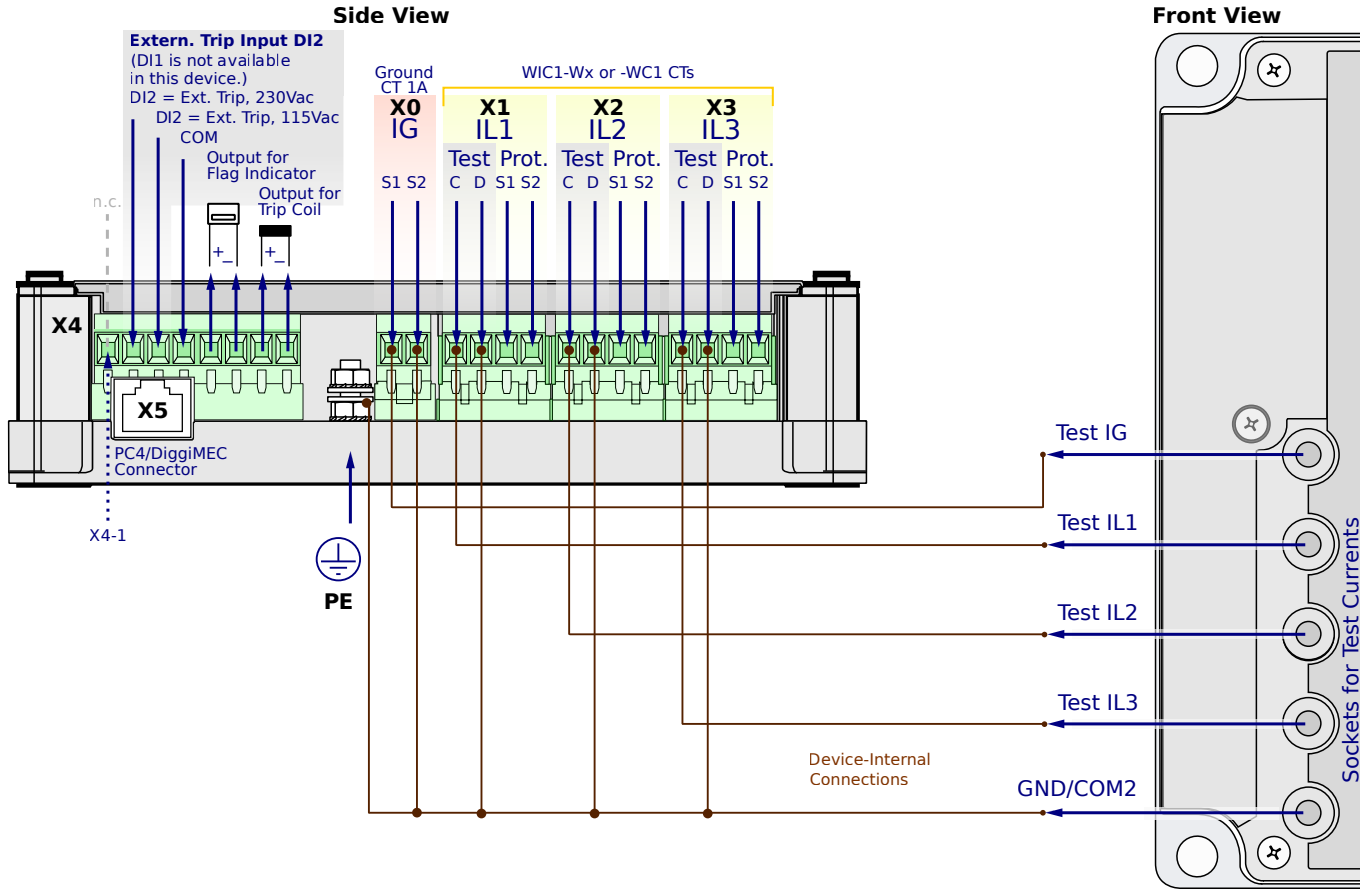


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FF2PAH

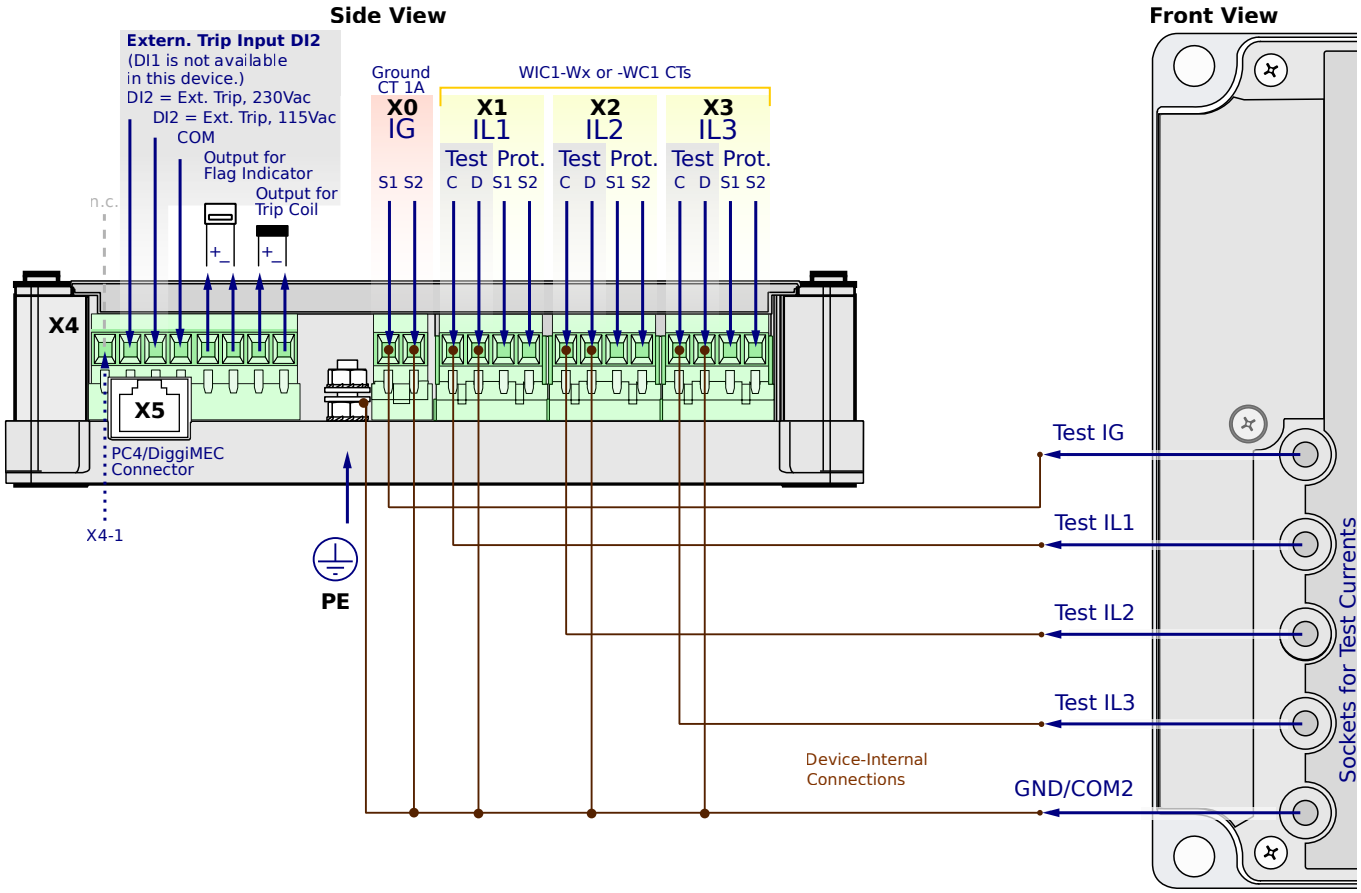


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1SA0

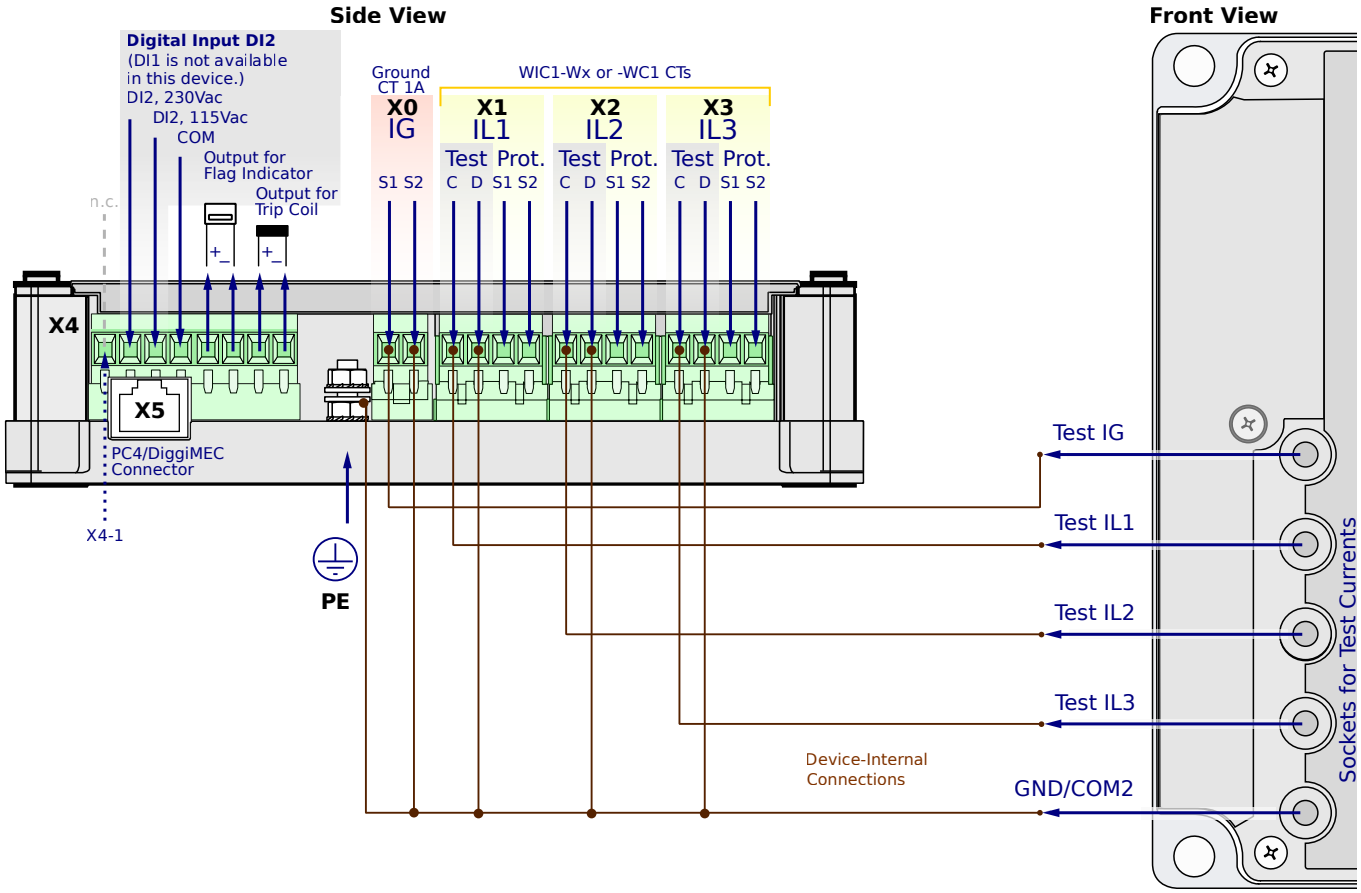


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1SAH

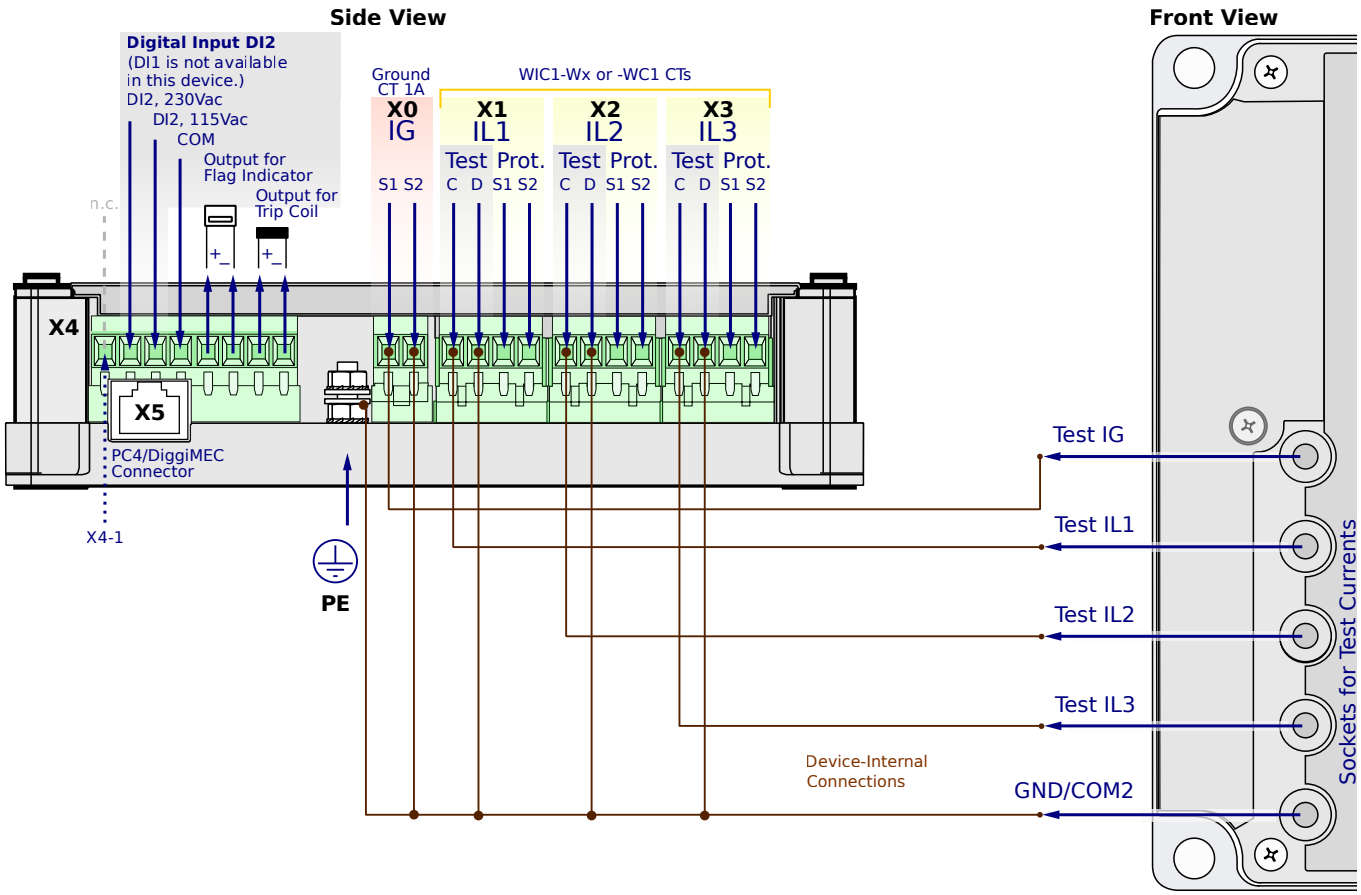


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1AA0

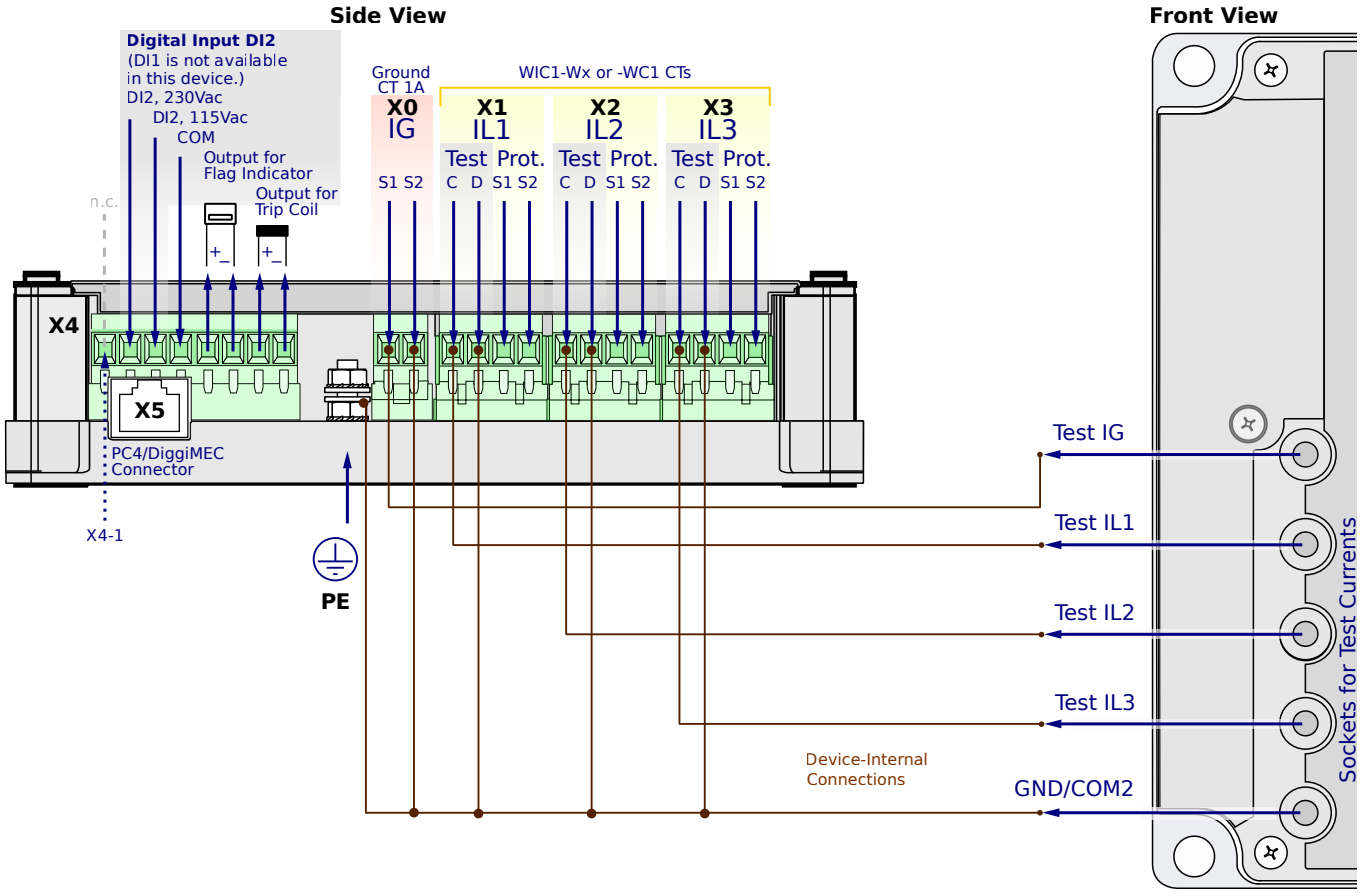


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1AAH

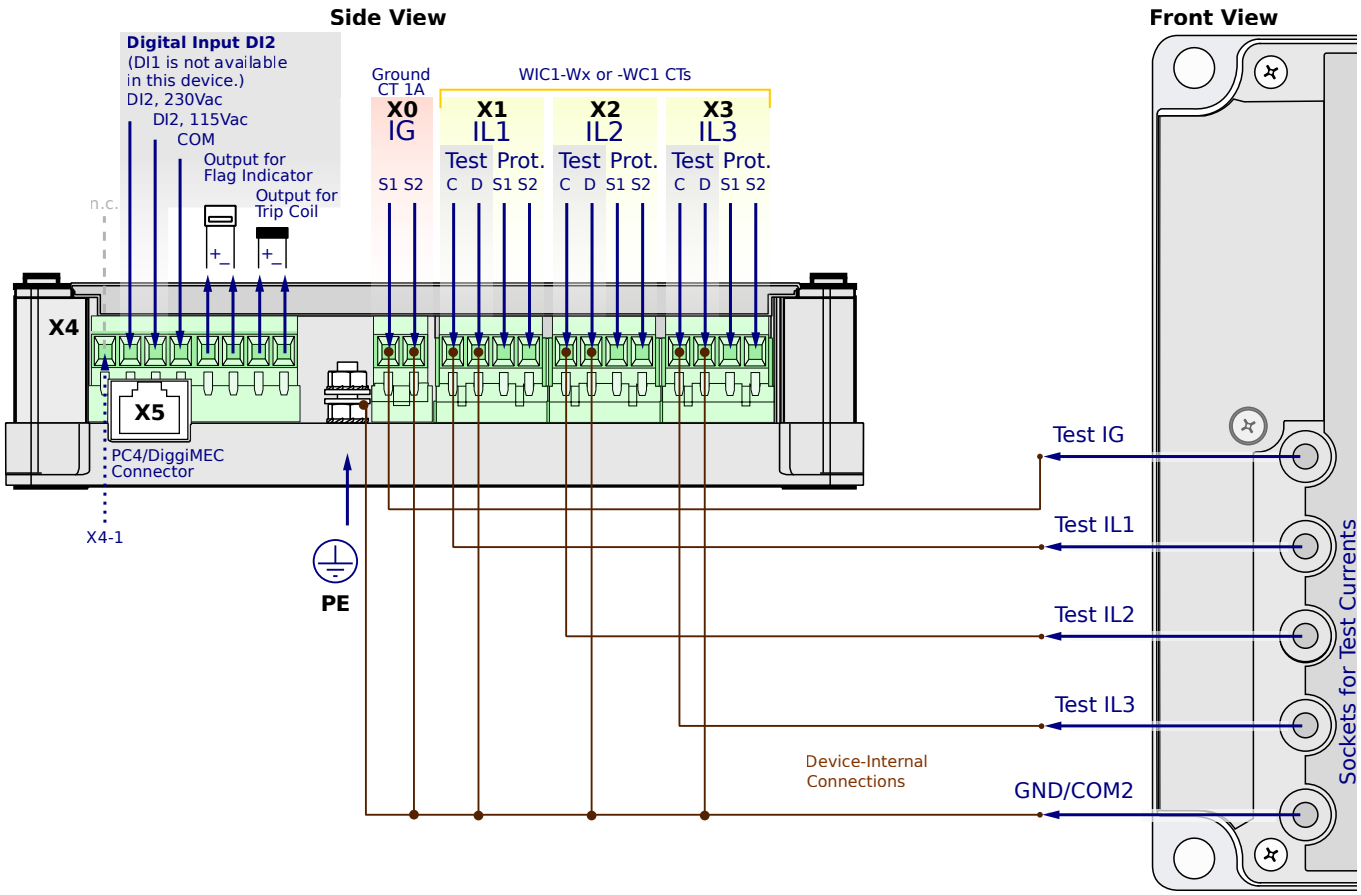


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1PA0

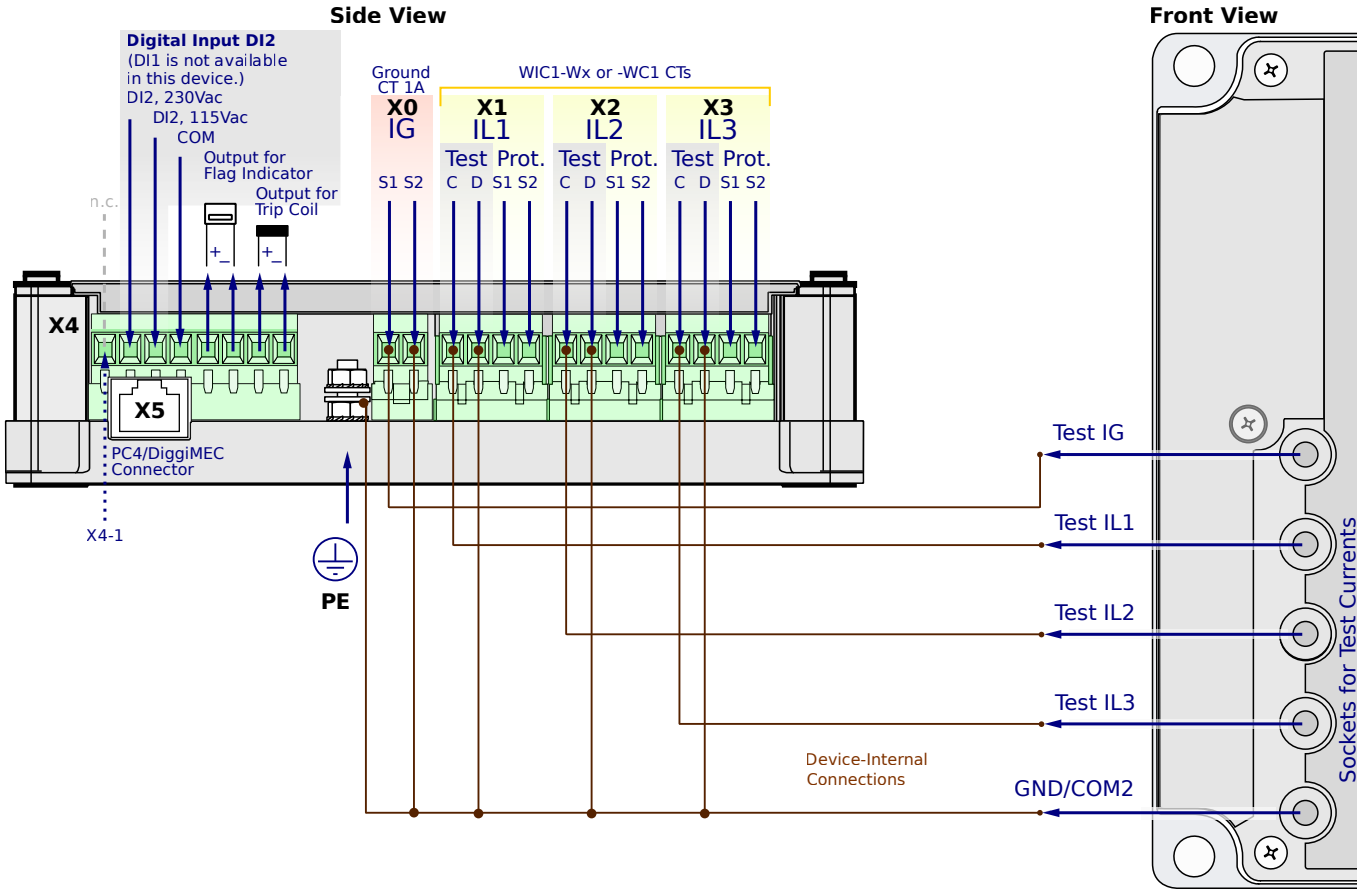


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC1PAH

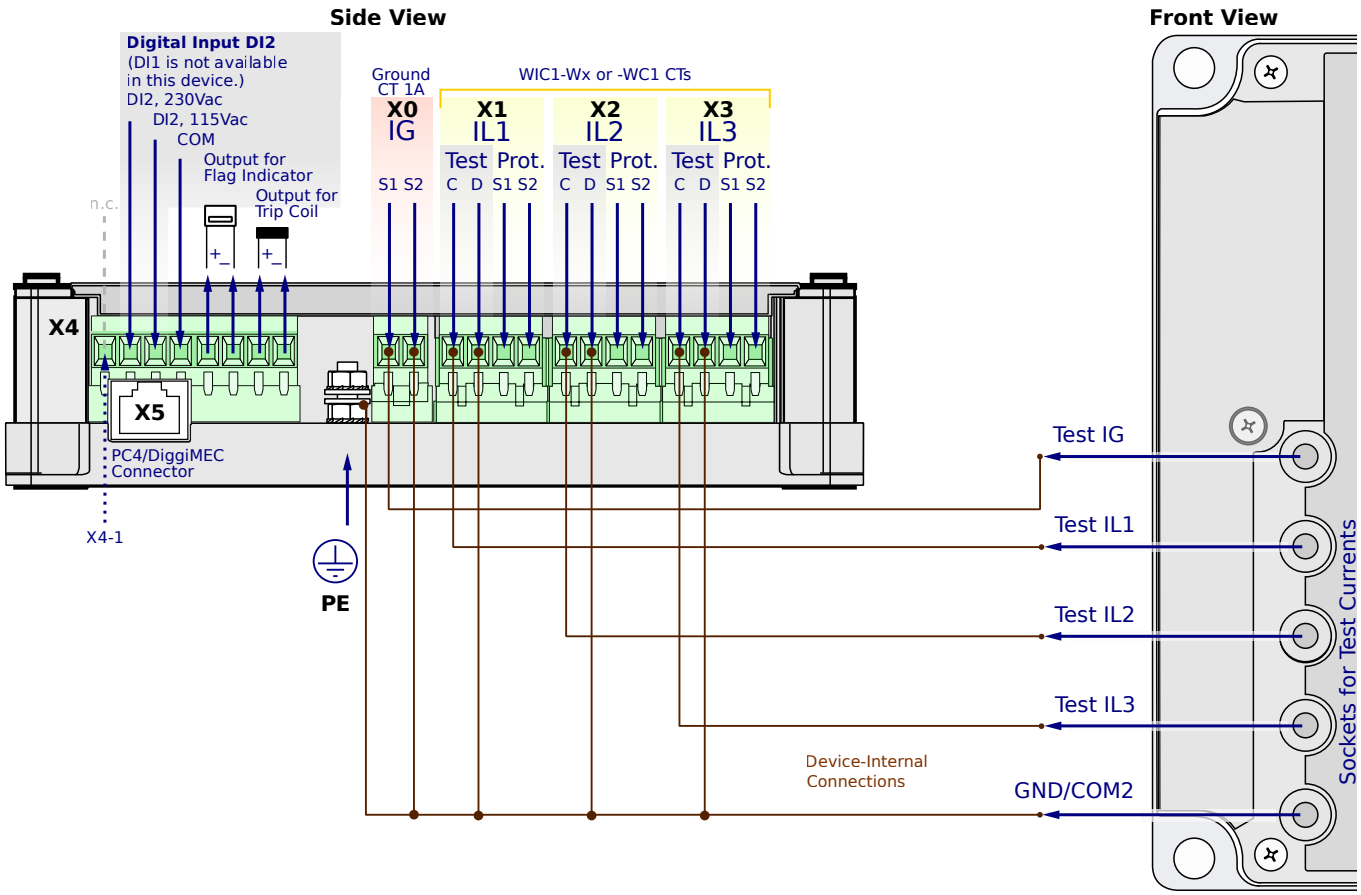


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2SA0

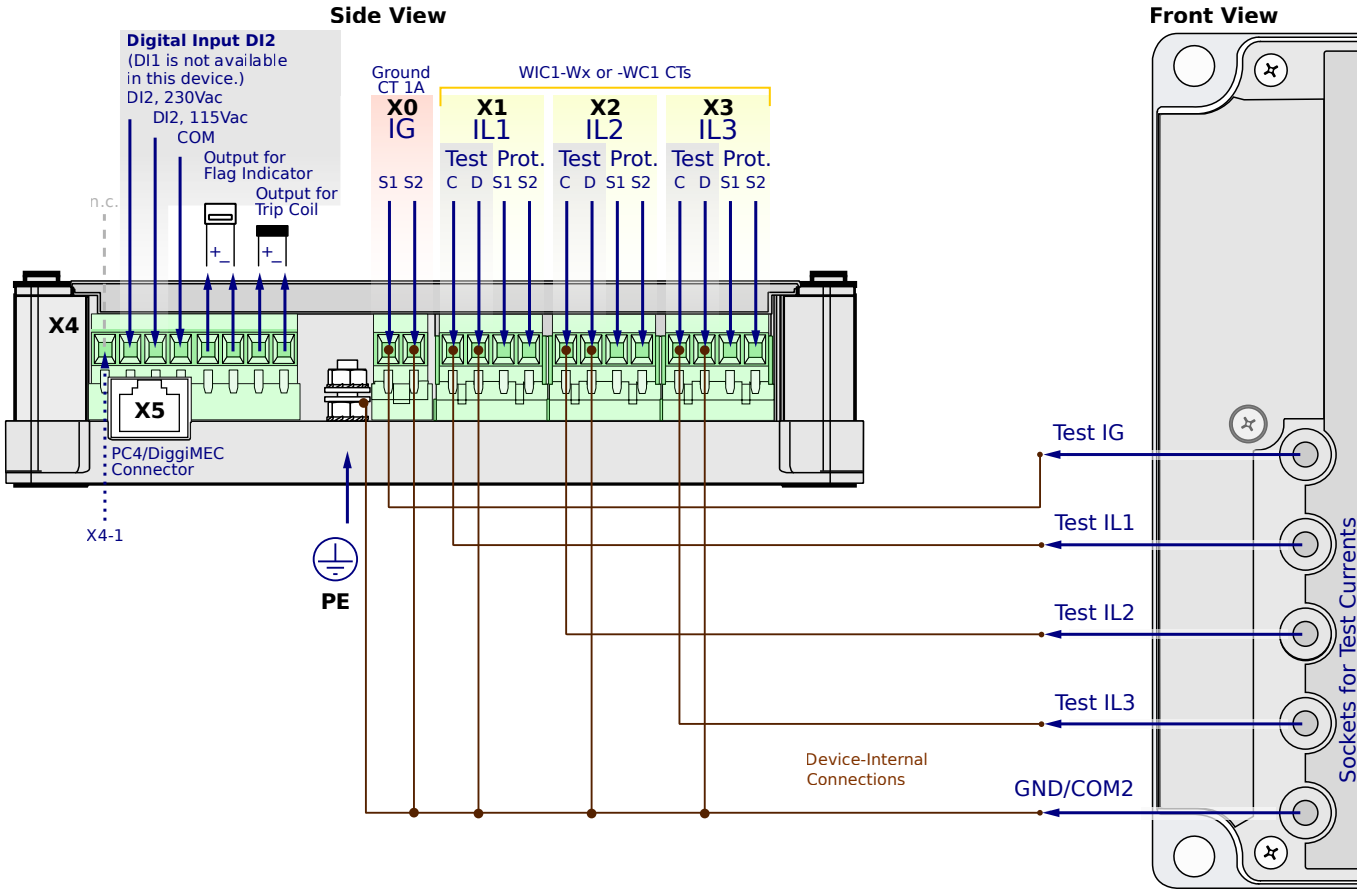


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2SAH

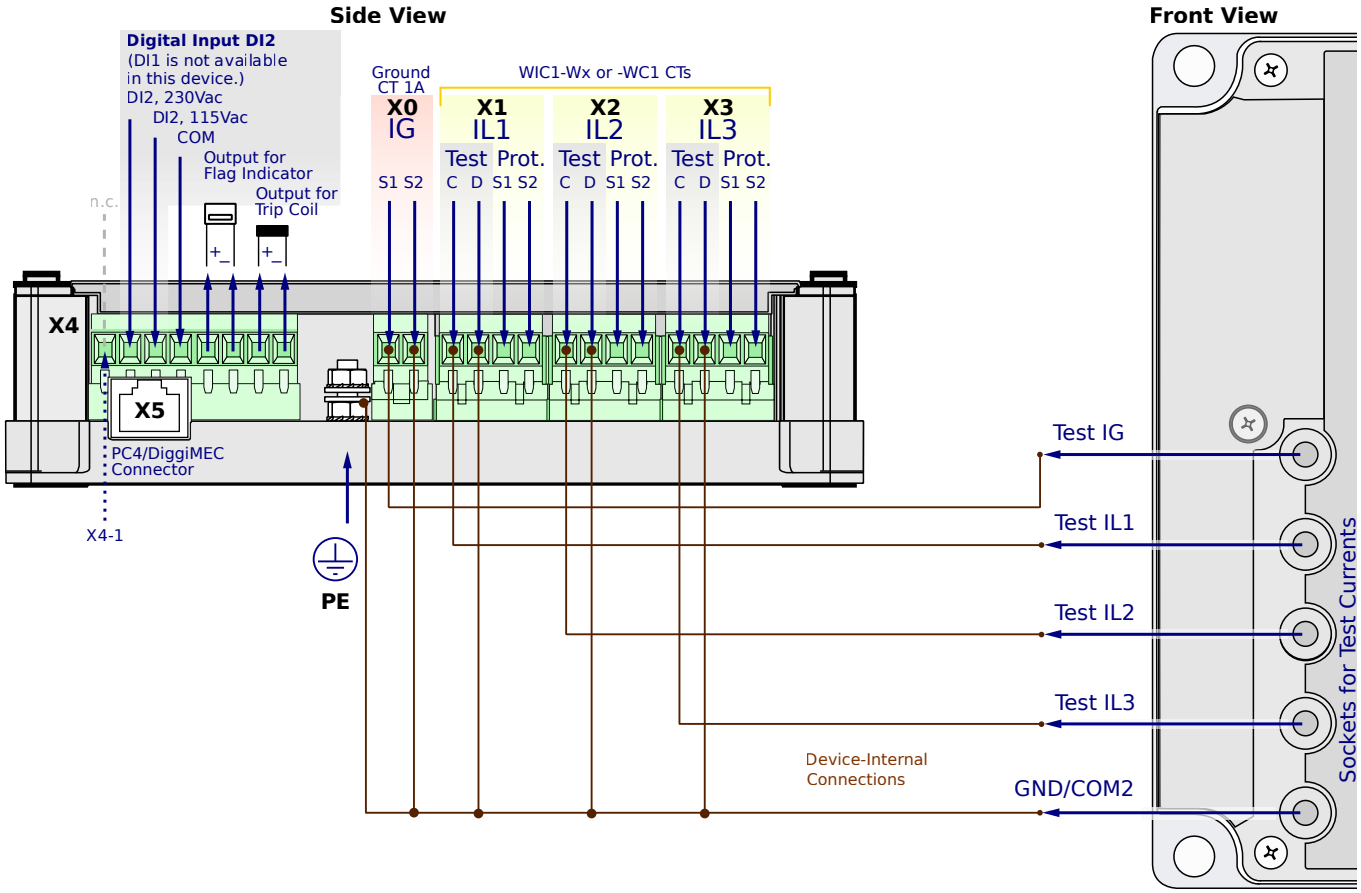


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2AA0

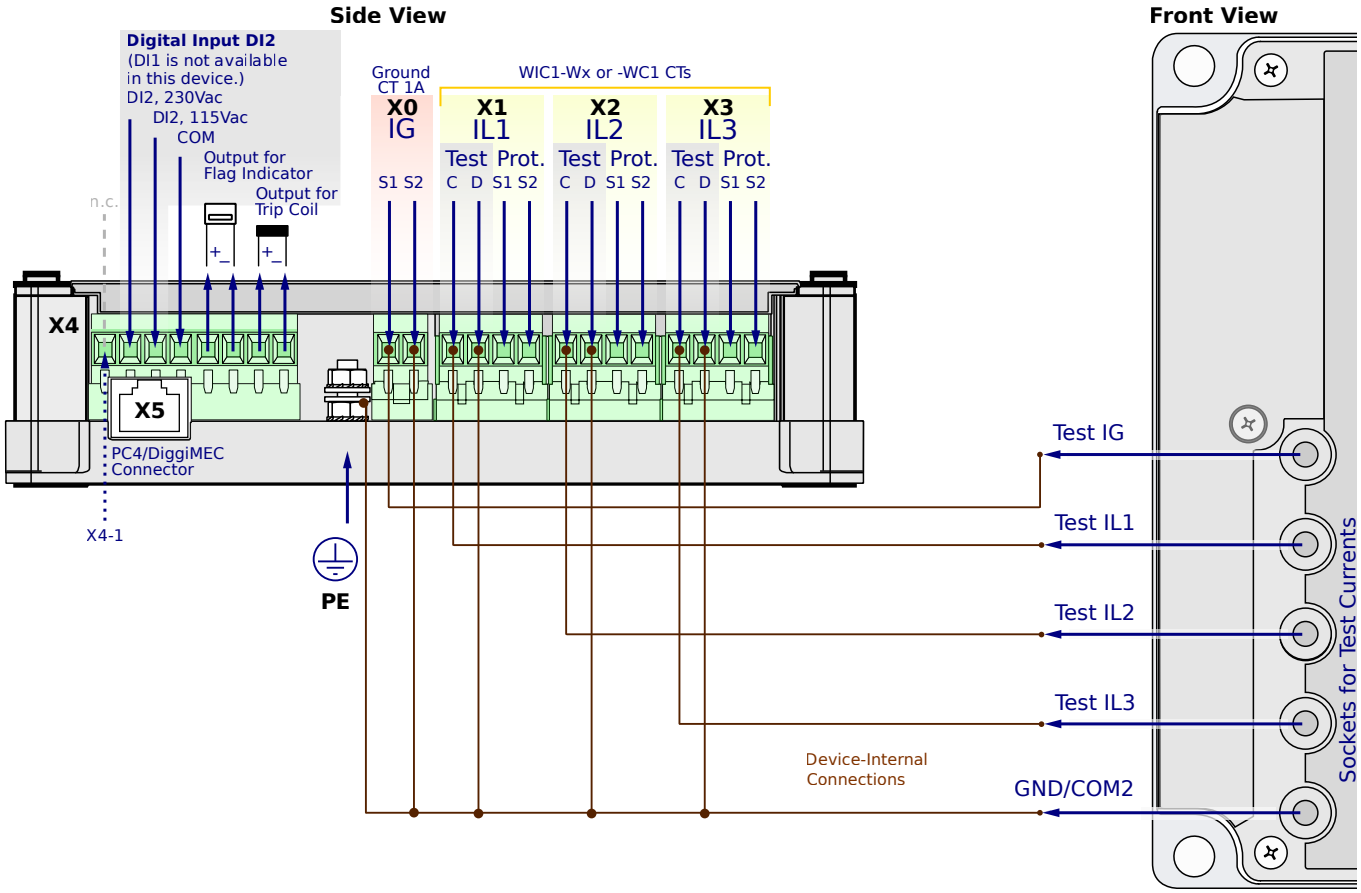


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2AAH

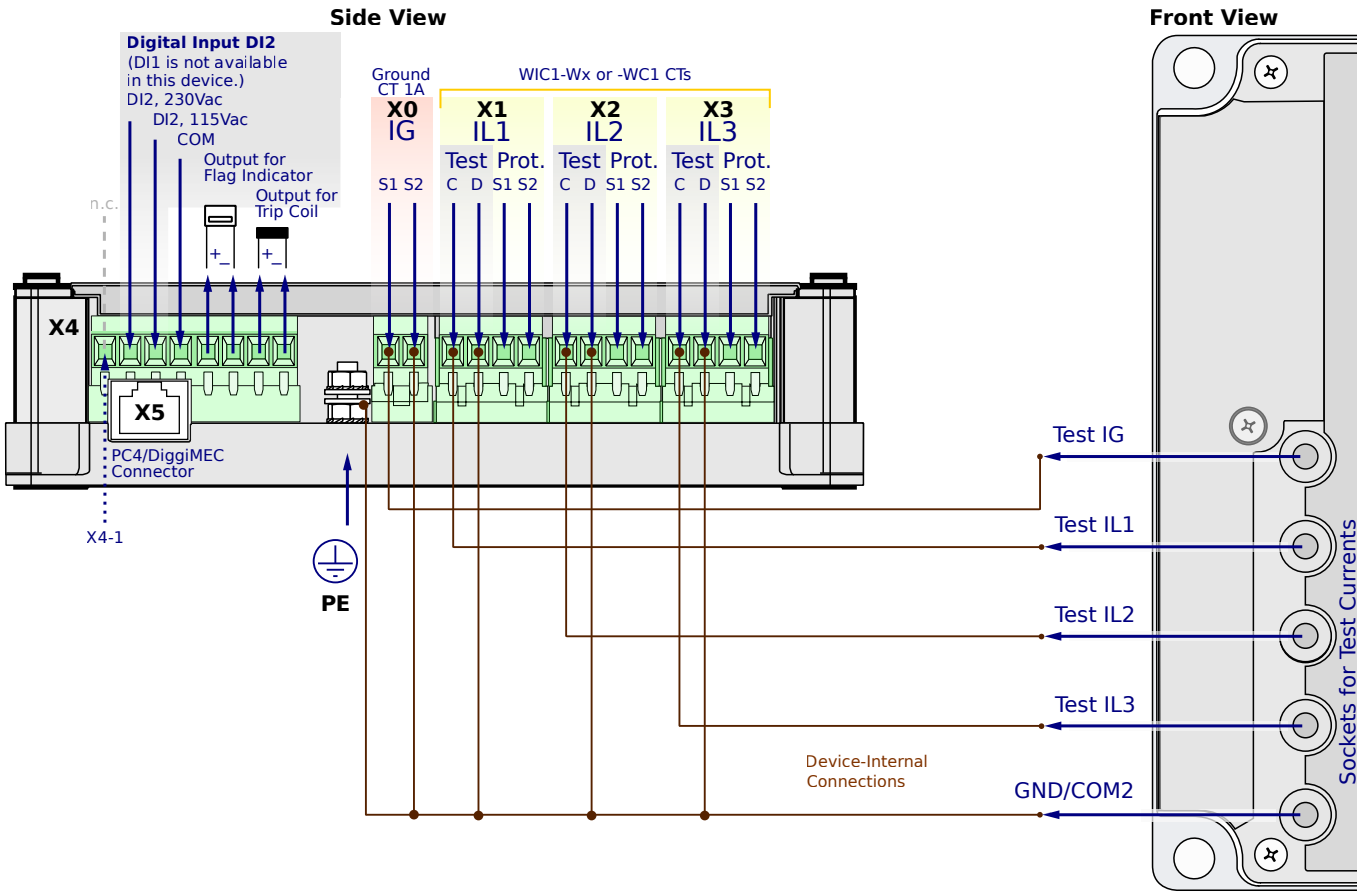


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2PA0

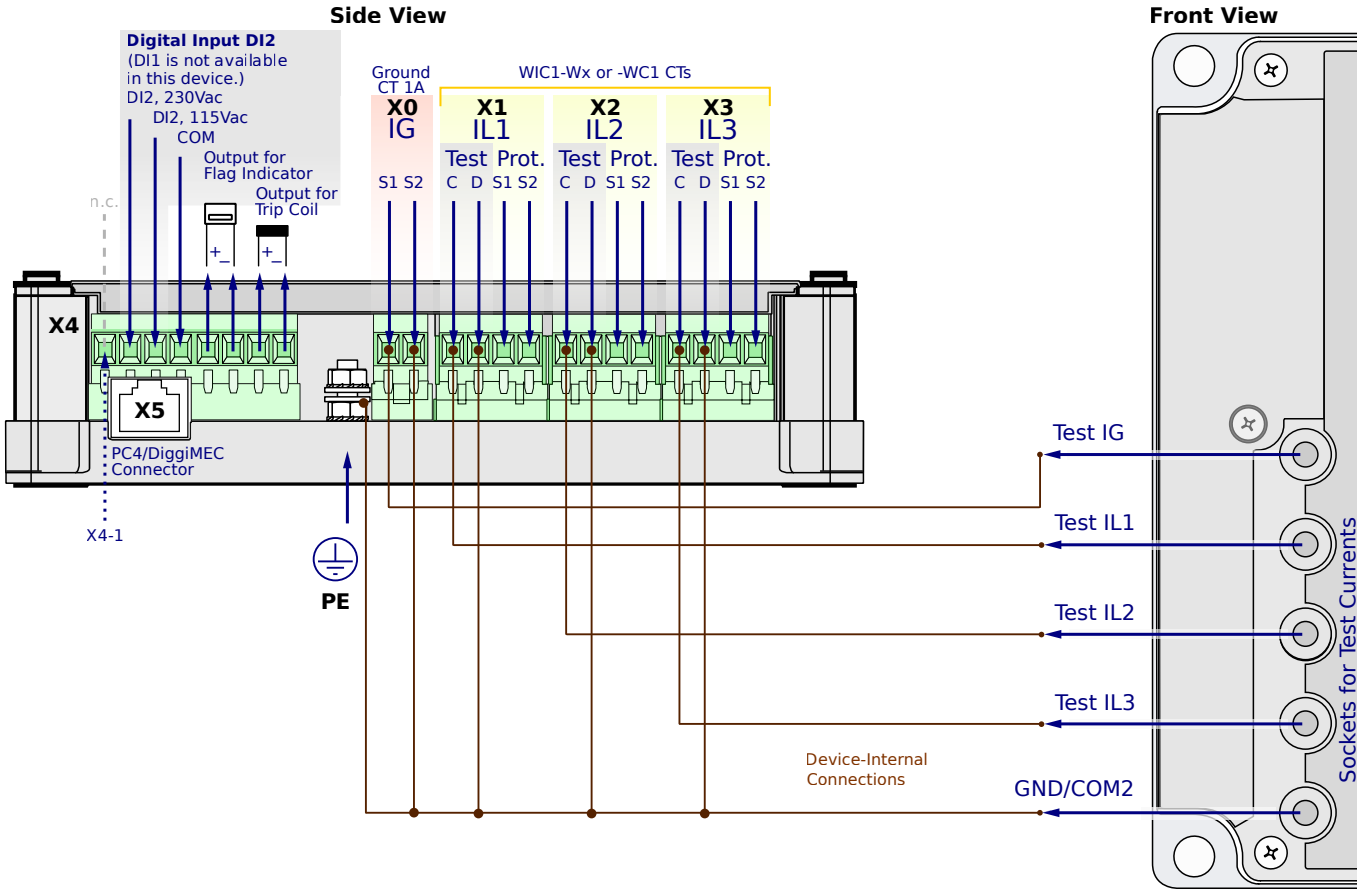


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6FC2PAH

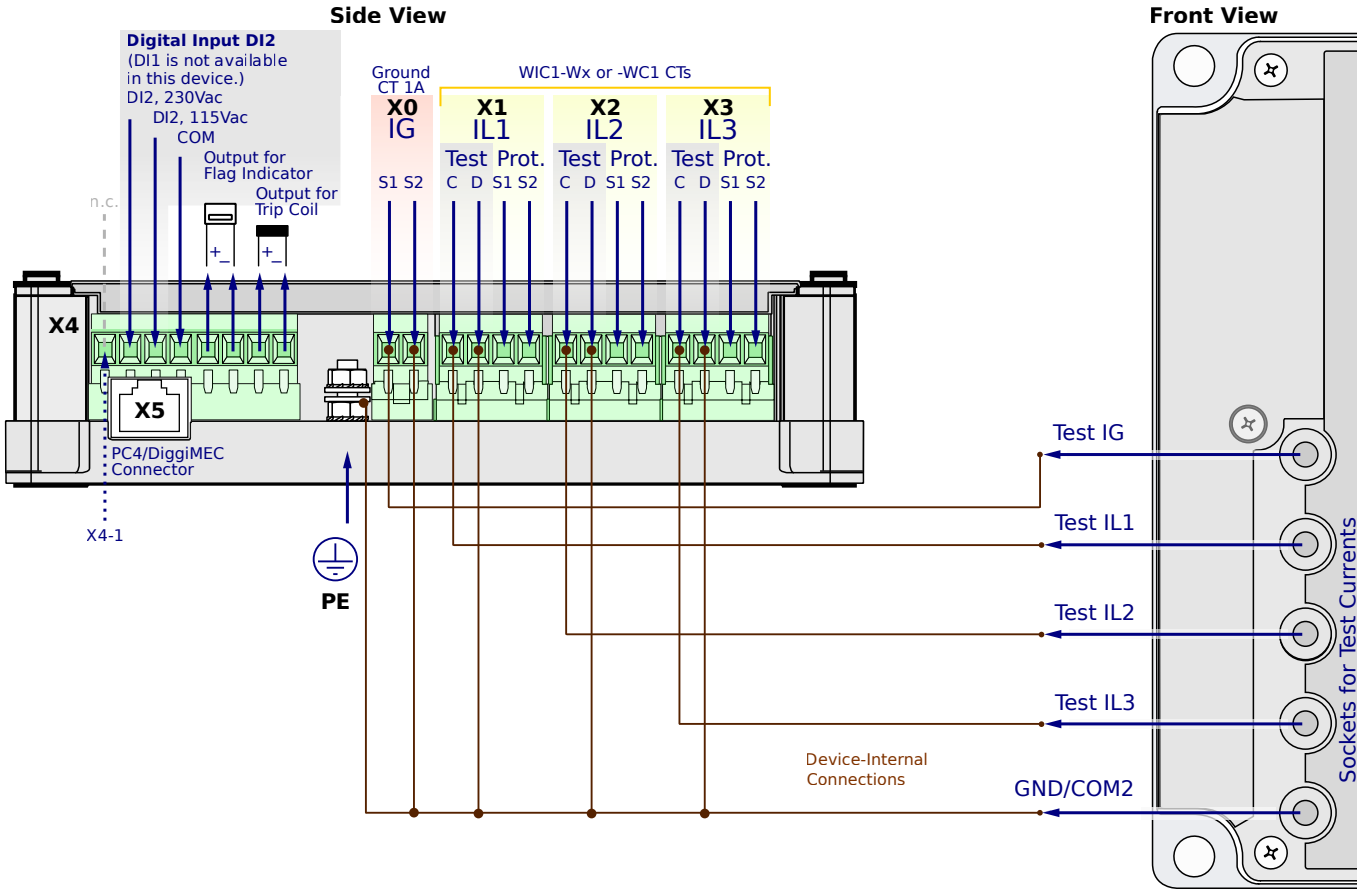


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1SA0

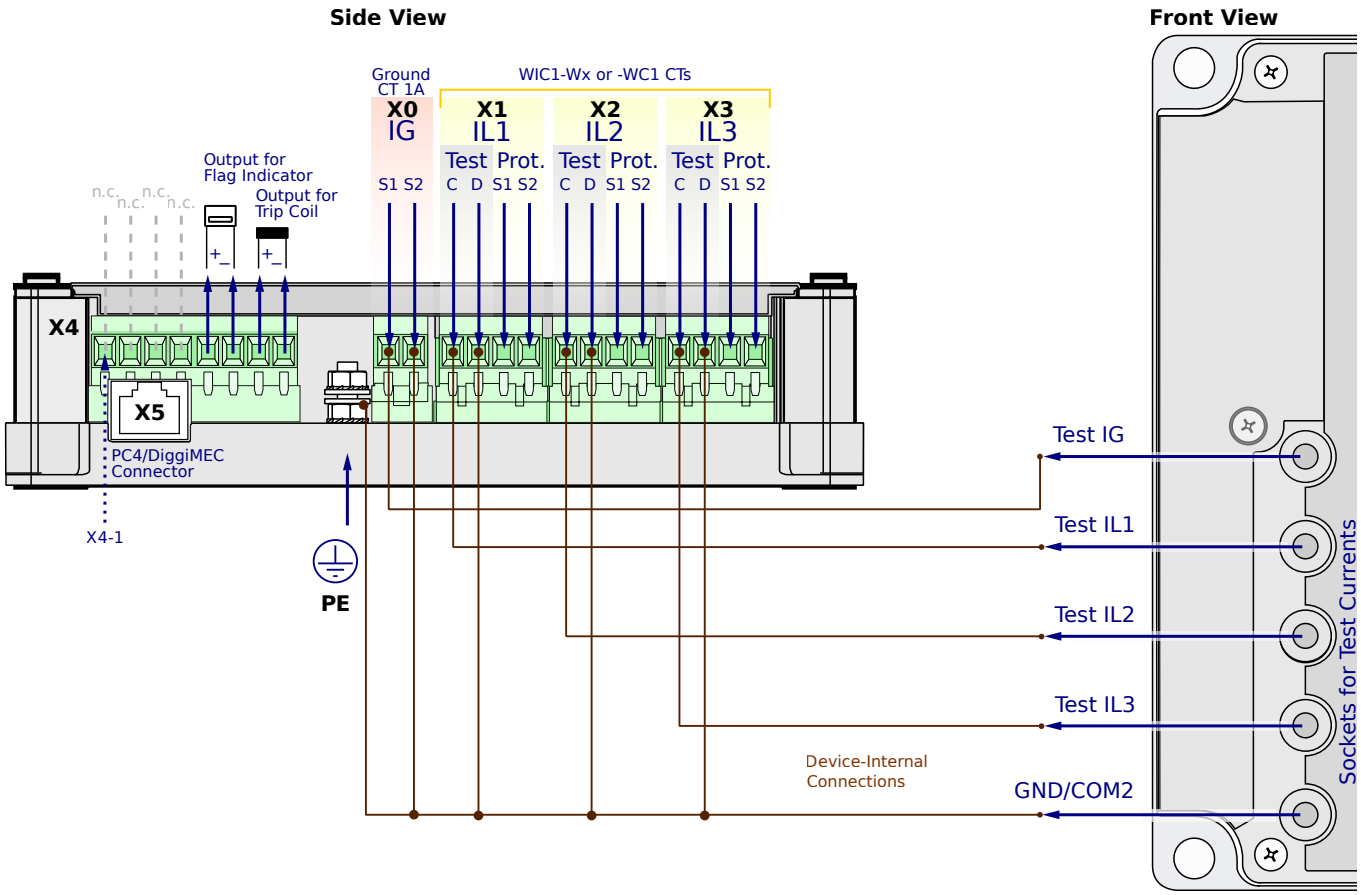


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1SAH

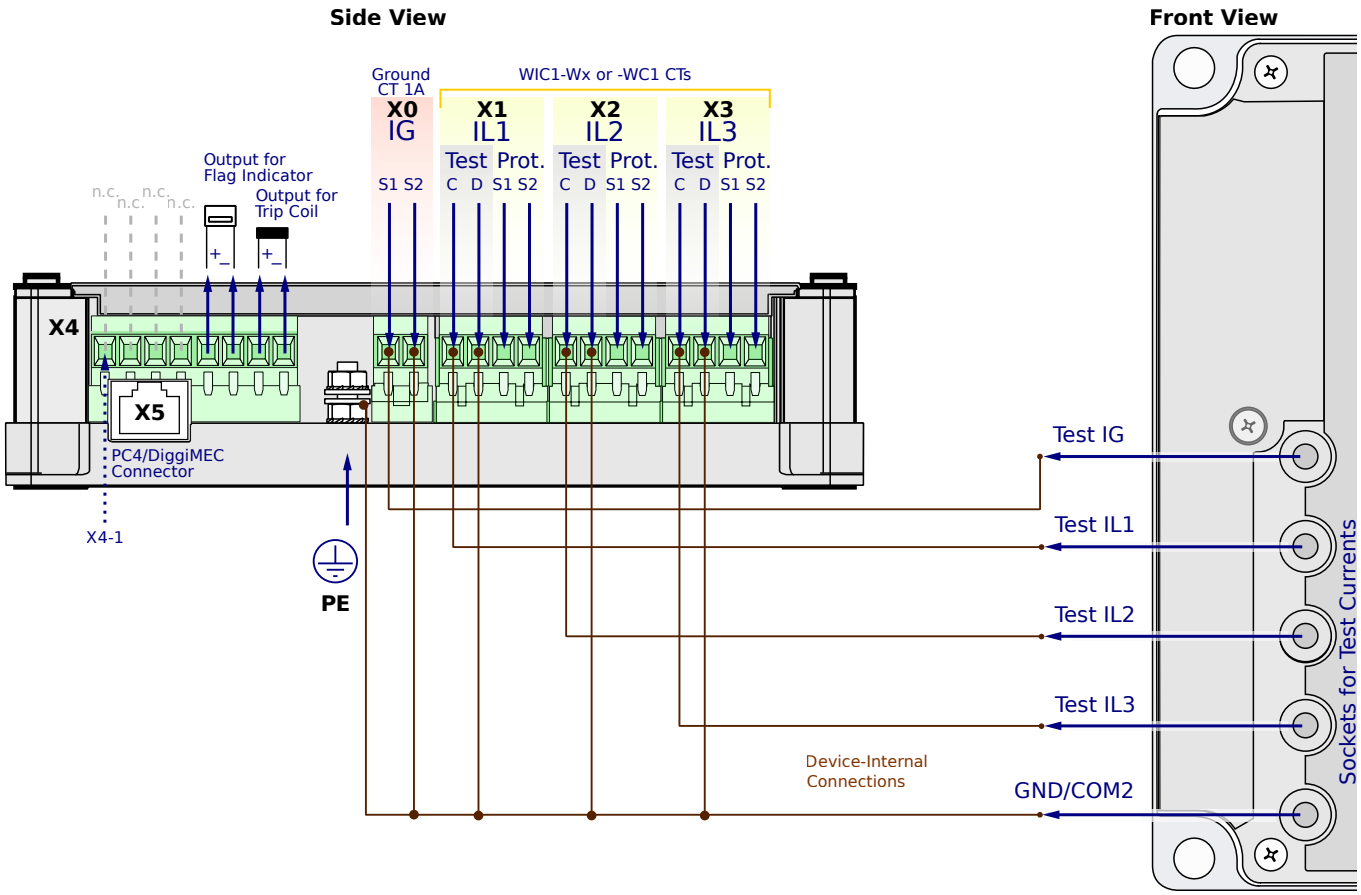


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1AA0

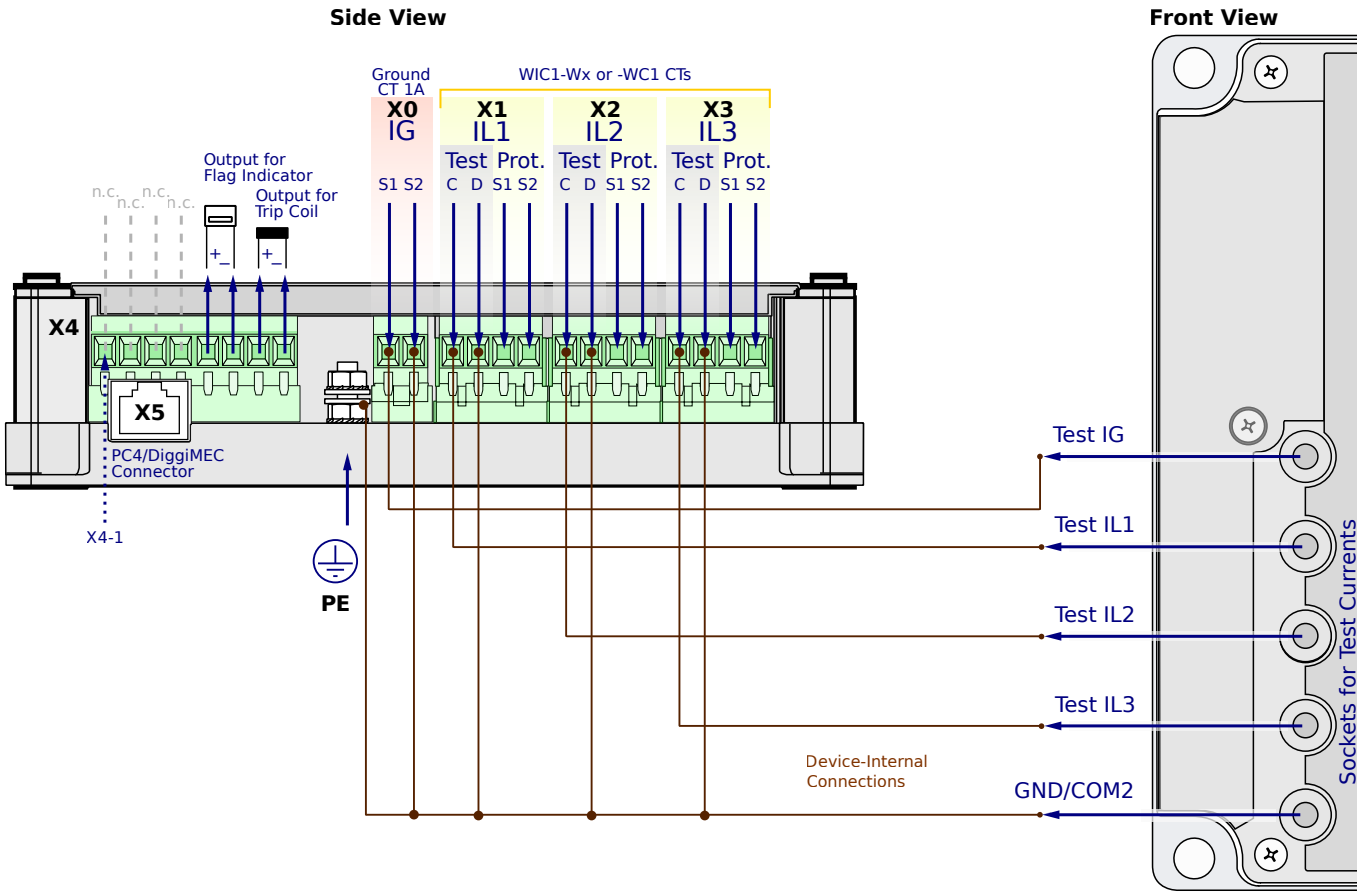


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1AAH

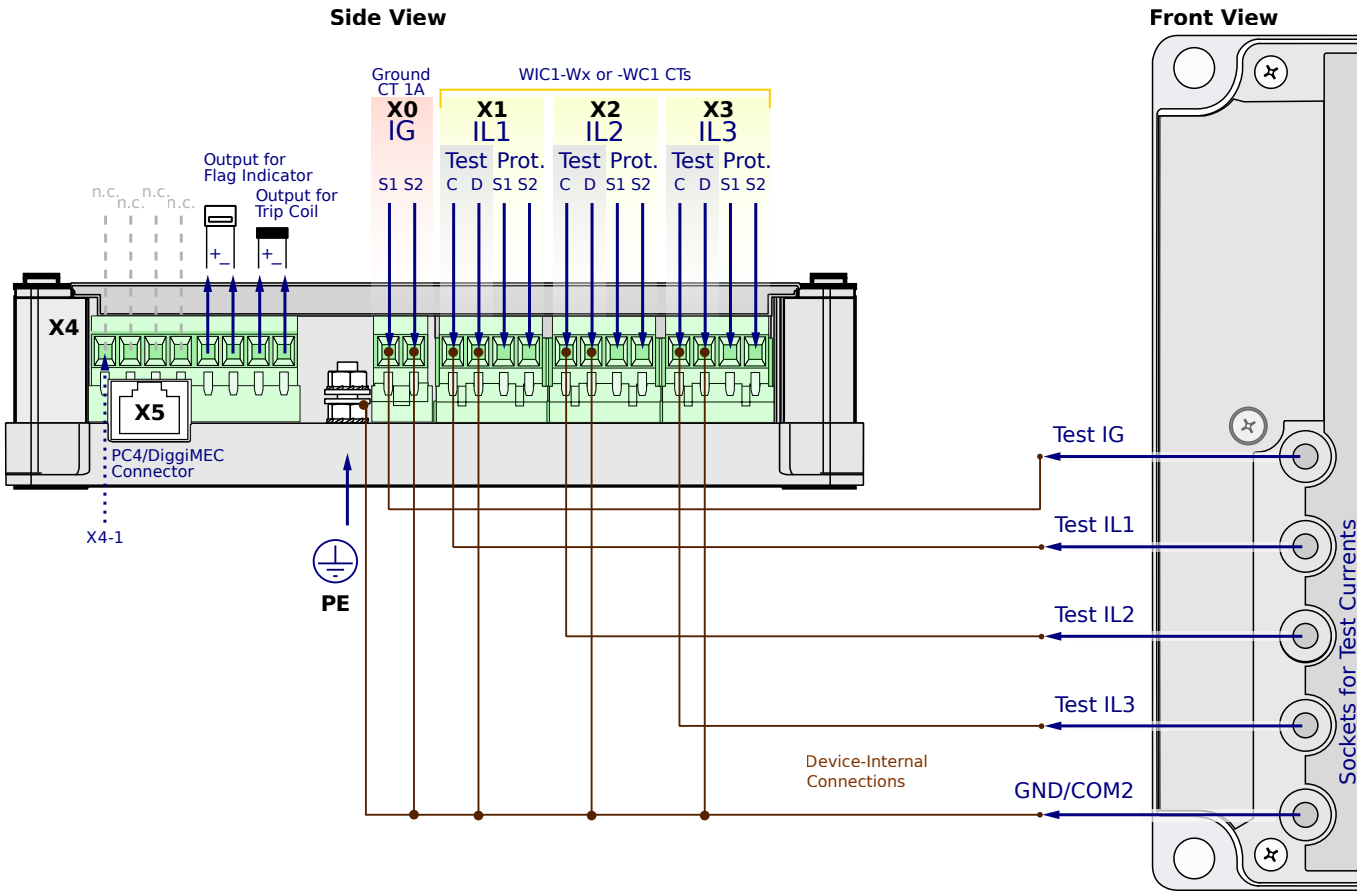


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1PA0

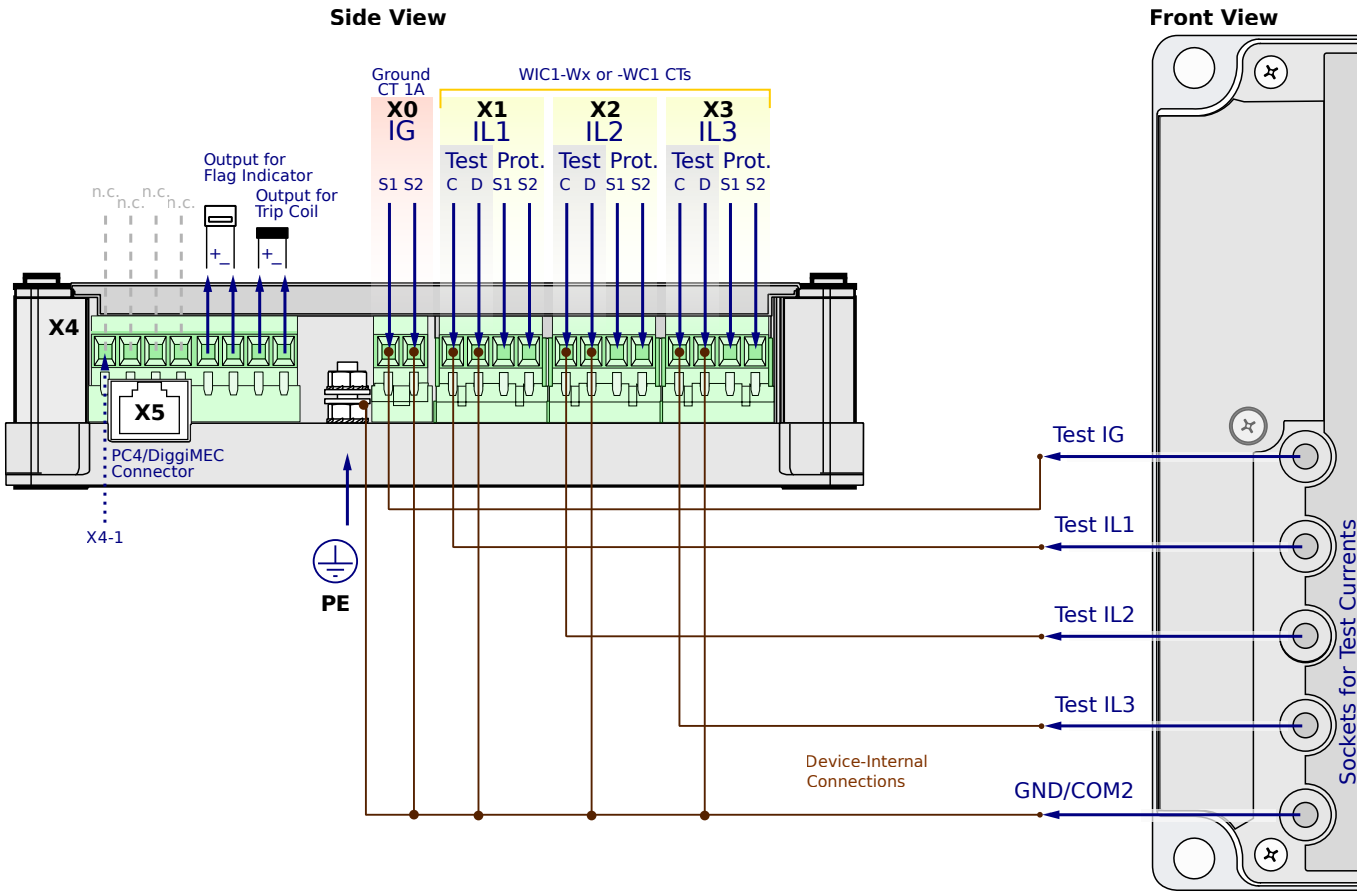


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN1PAH

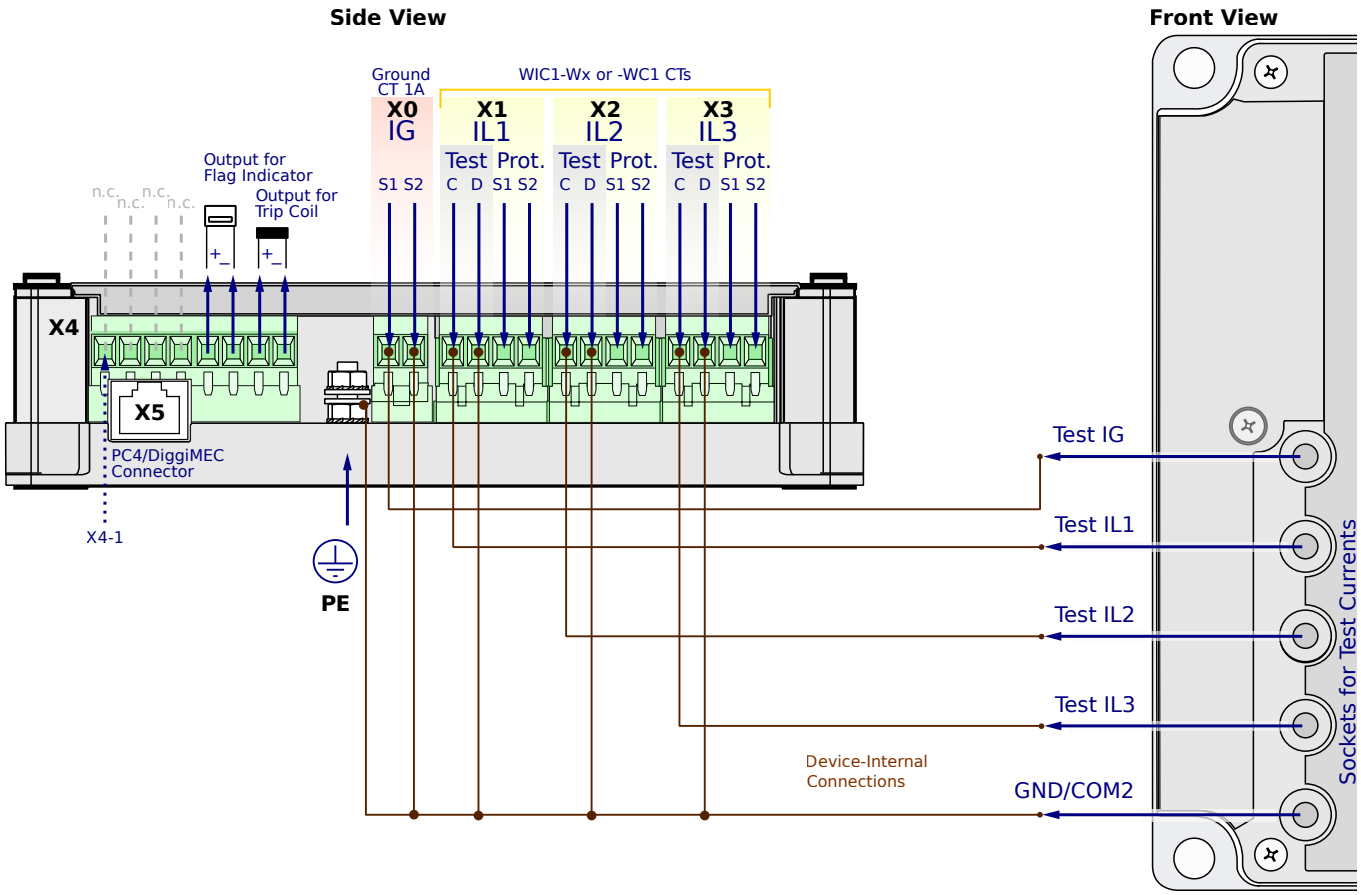


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2SA0

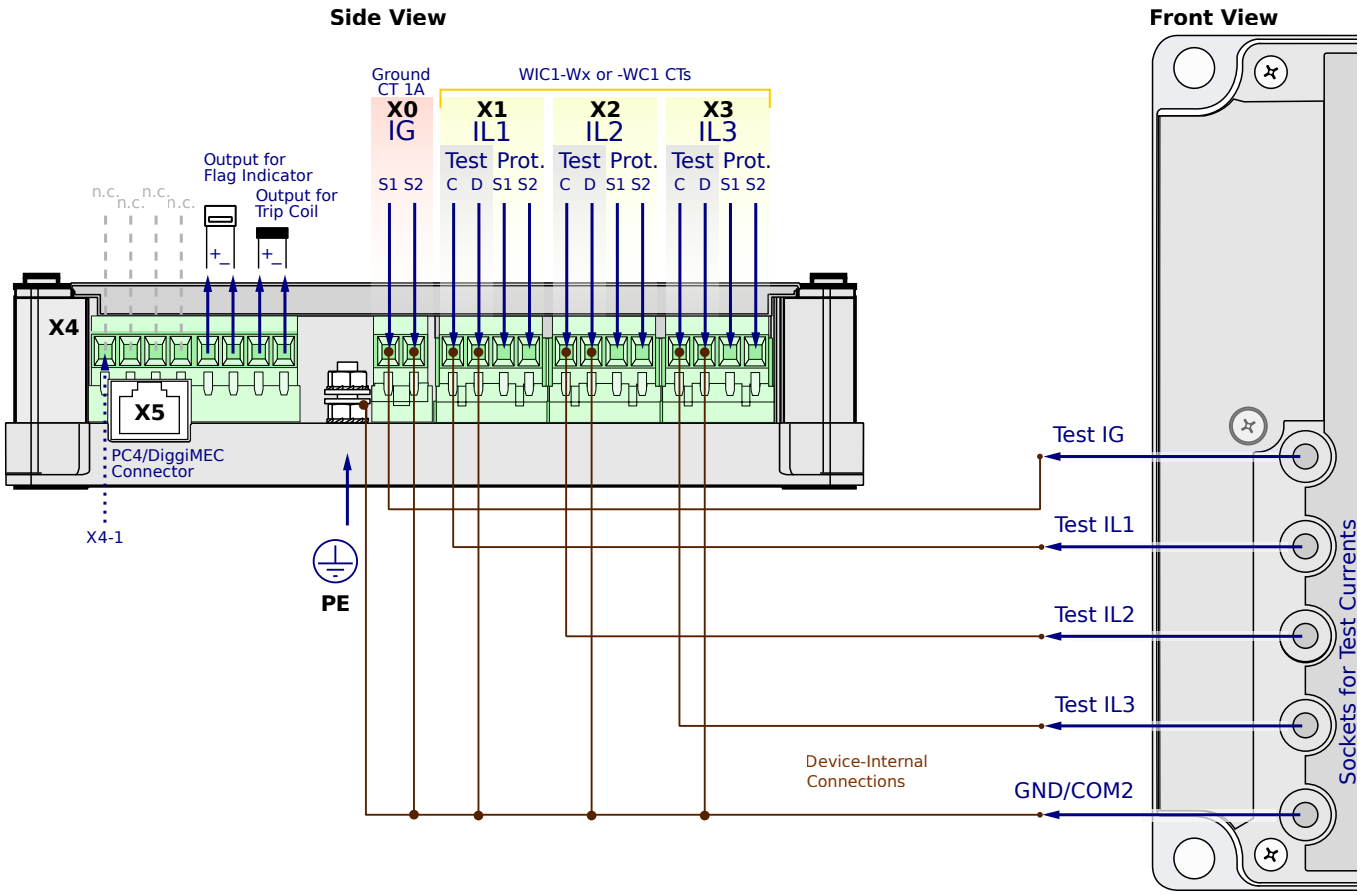


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2SAH

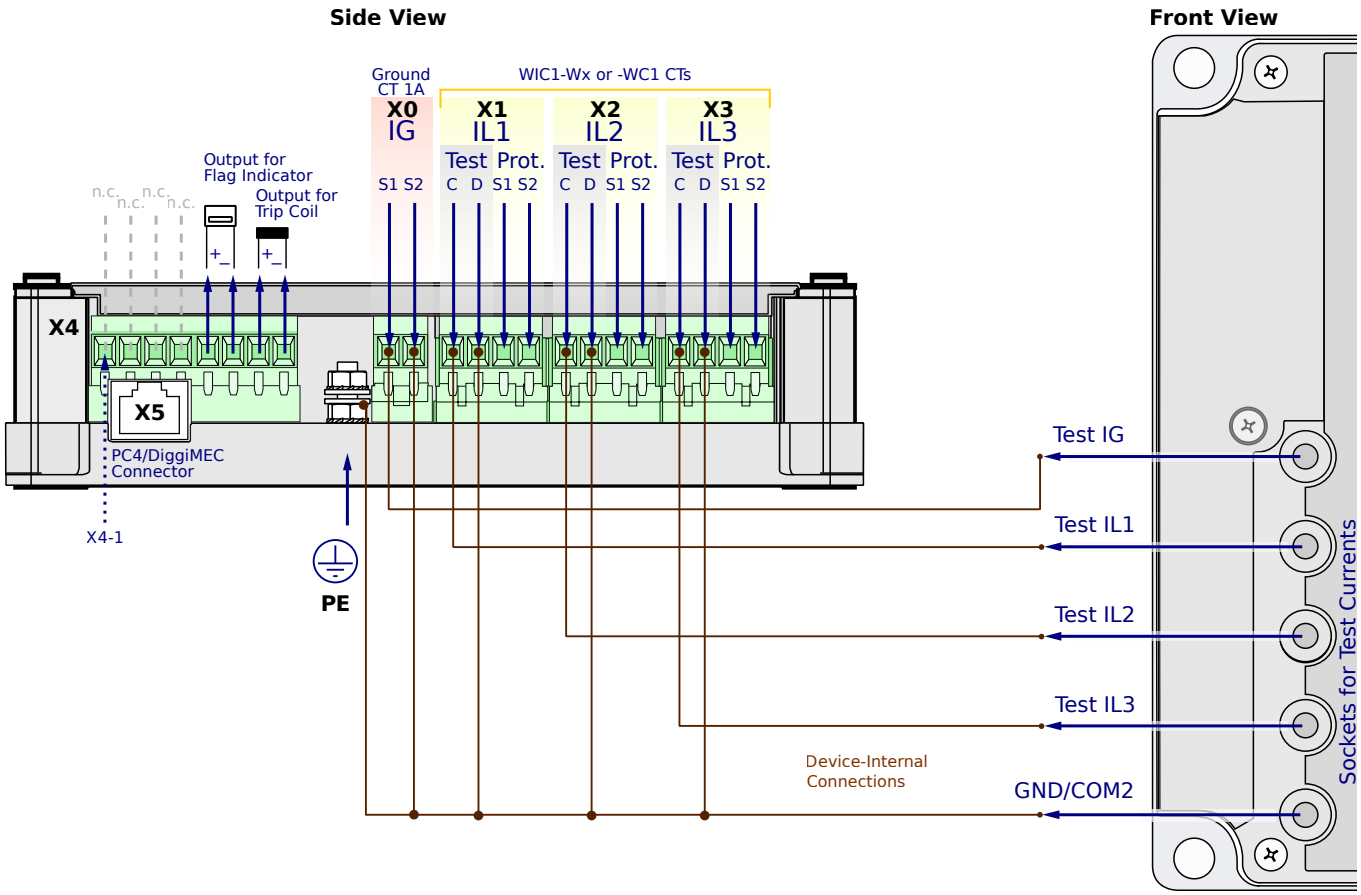


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2AA0

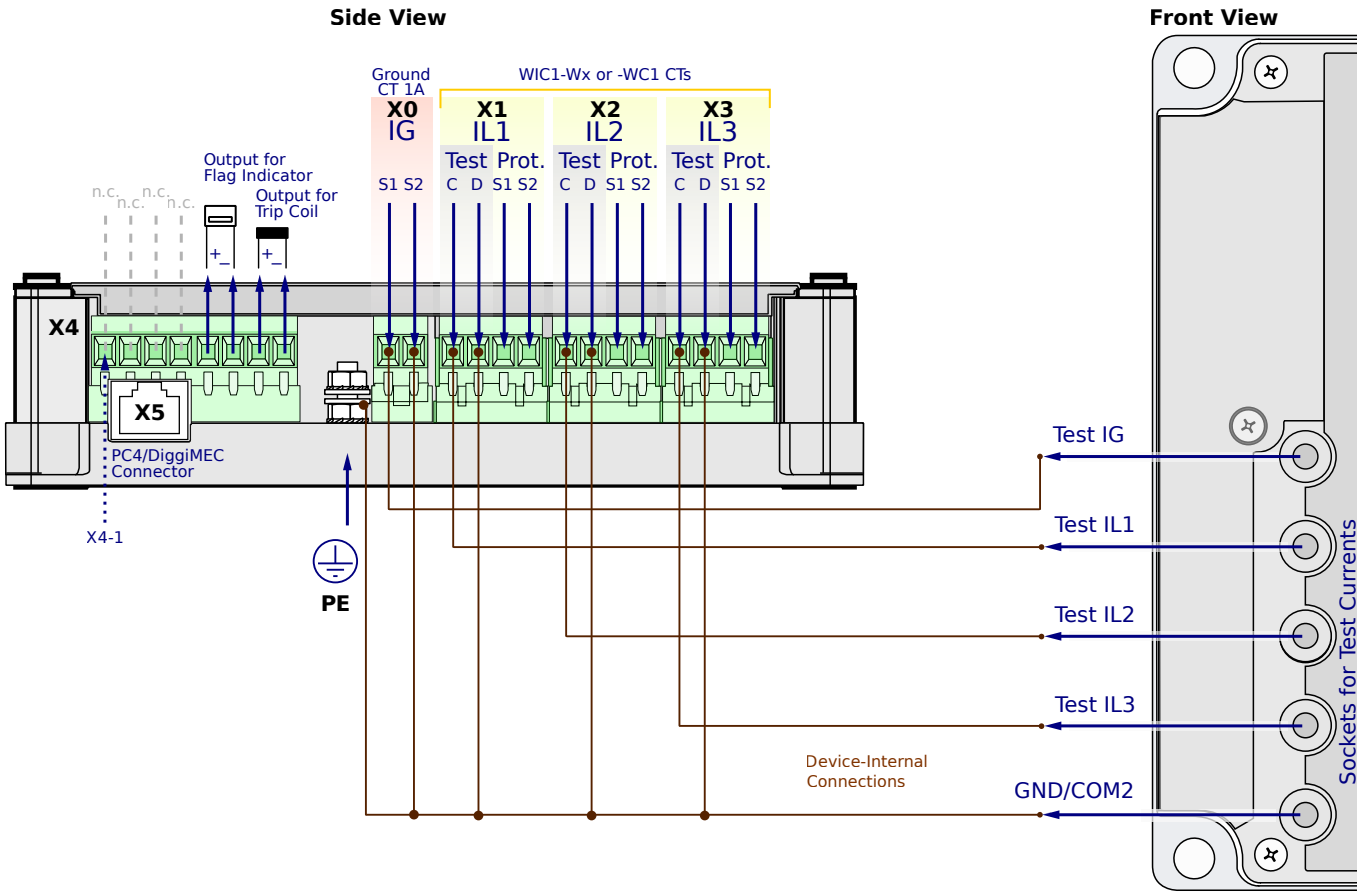


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2AAH

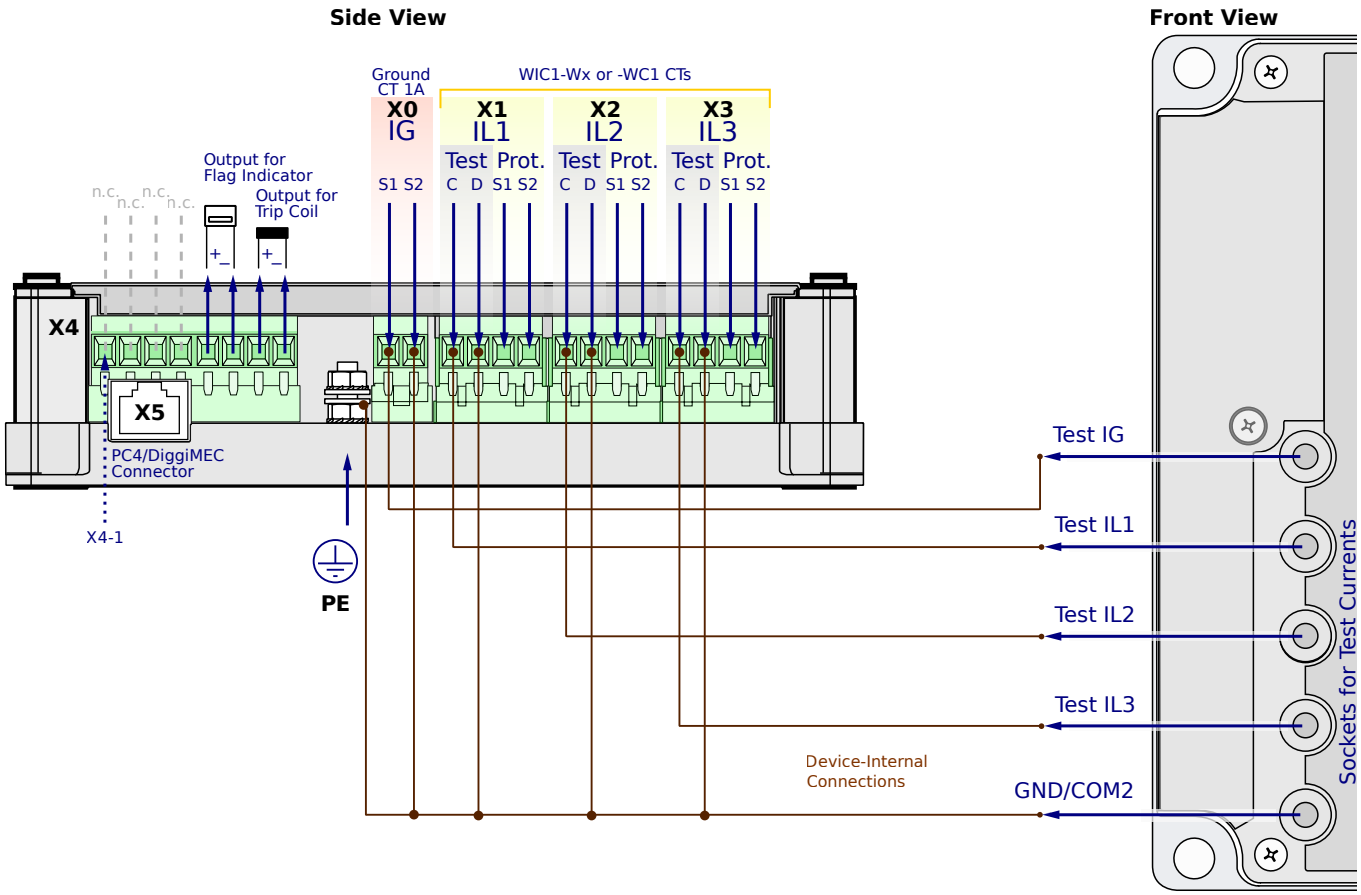


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2PA0

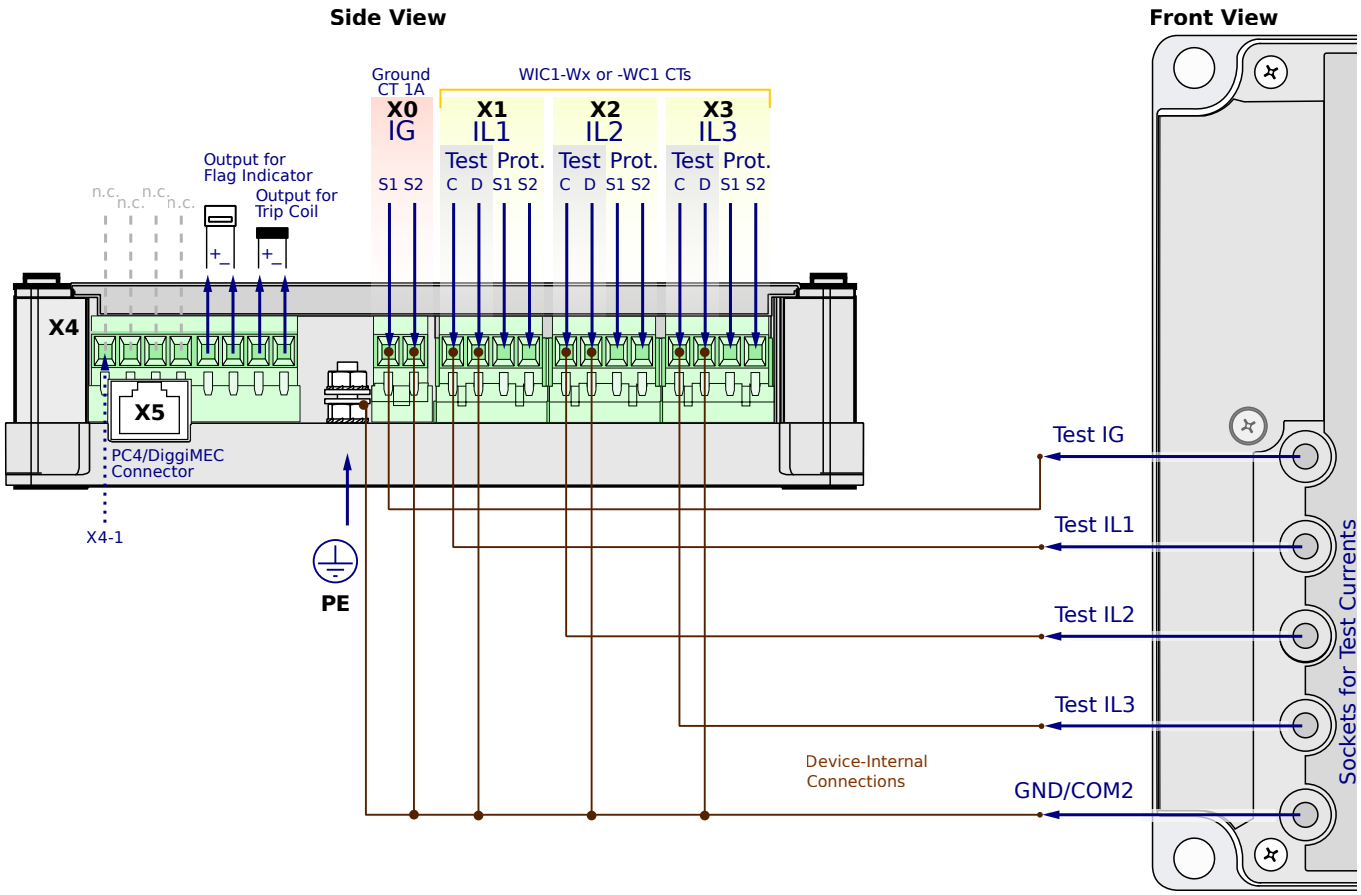


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CN2PAH

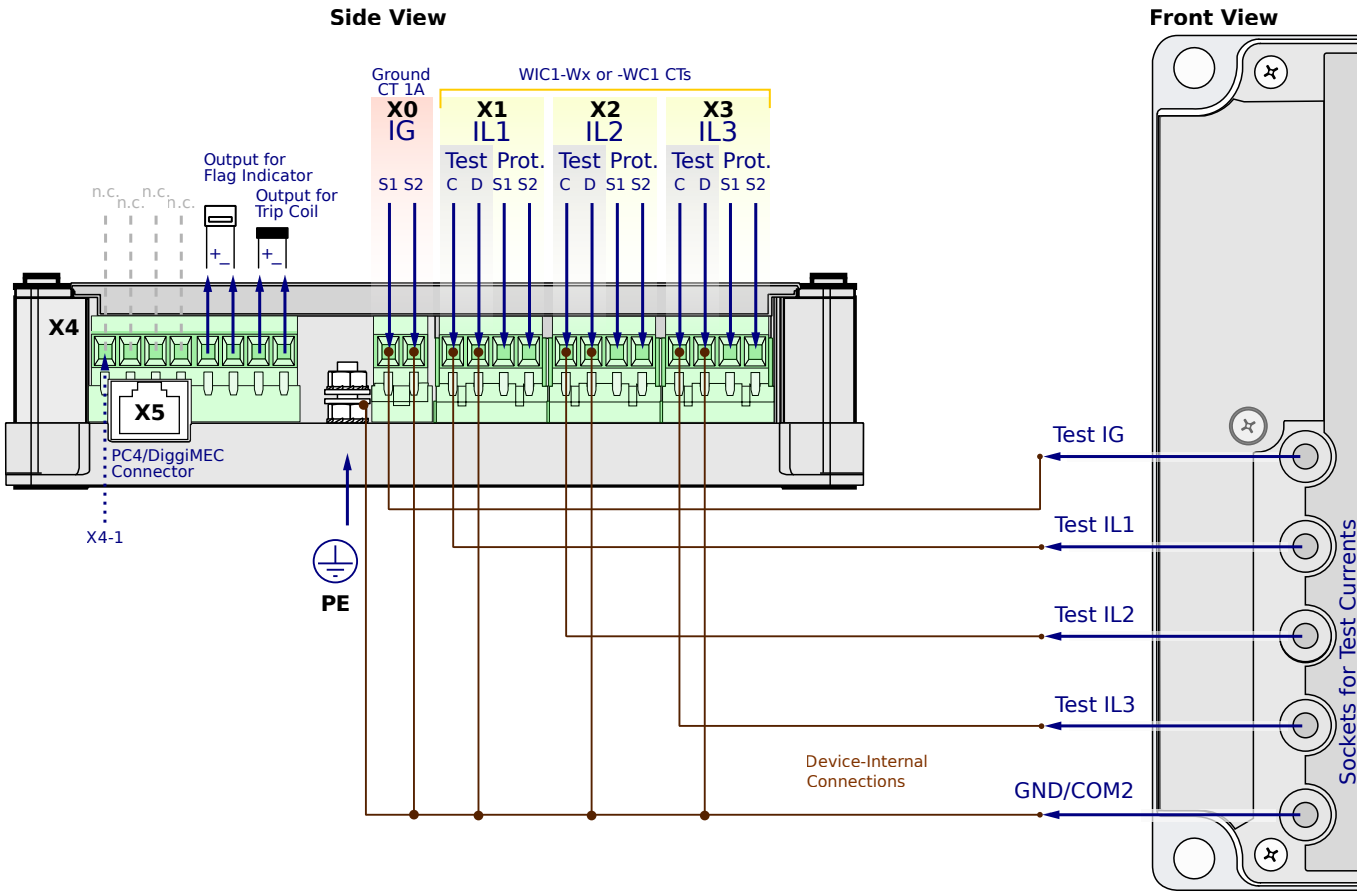


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1SA0

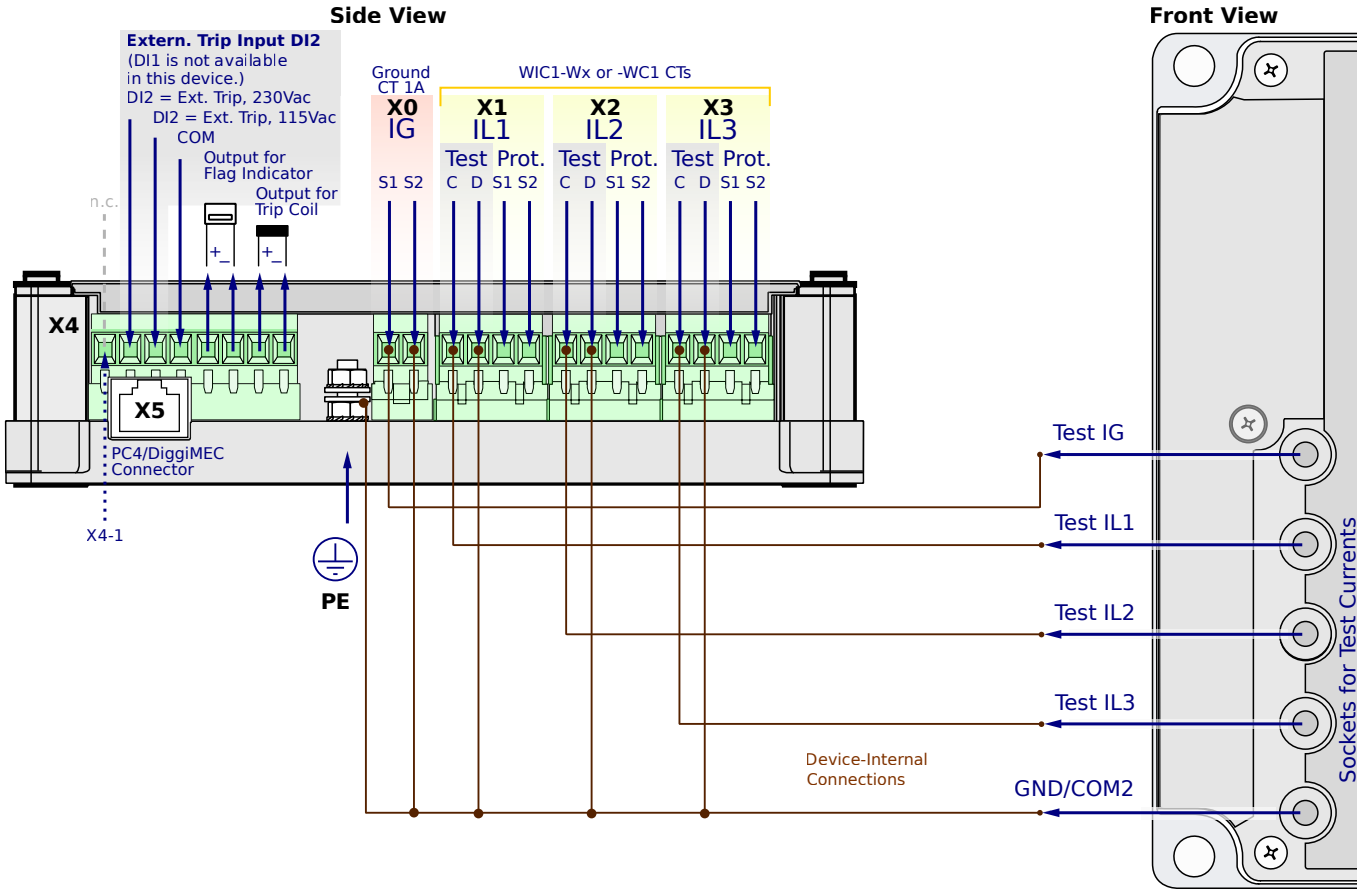


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1SAH

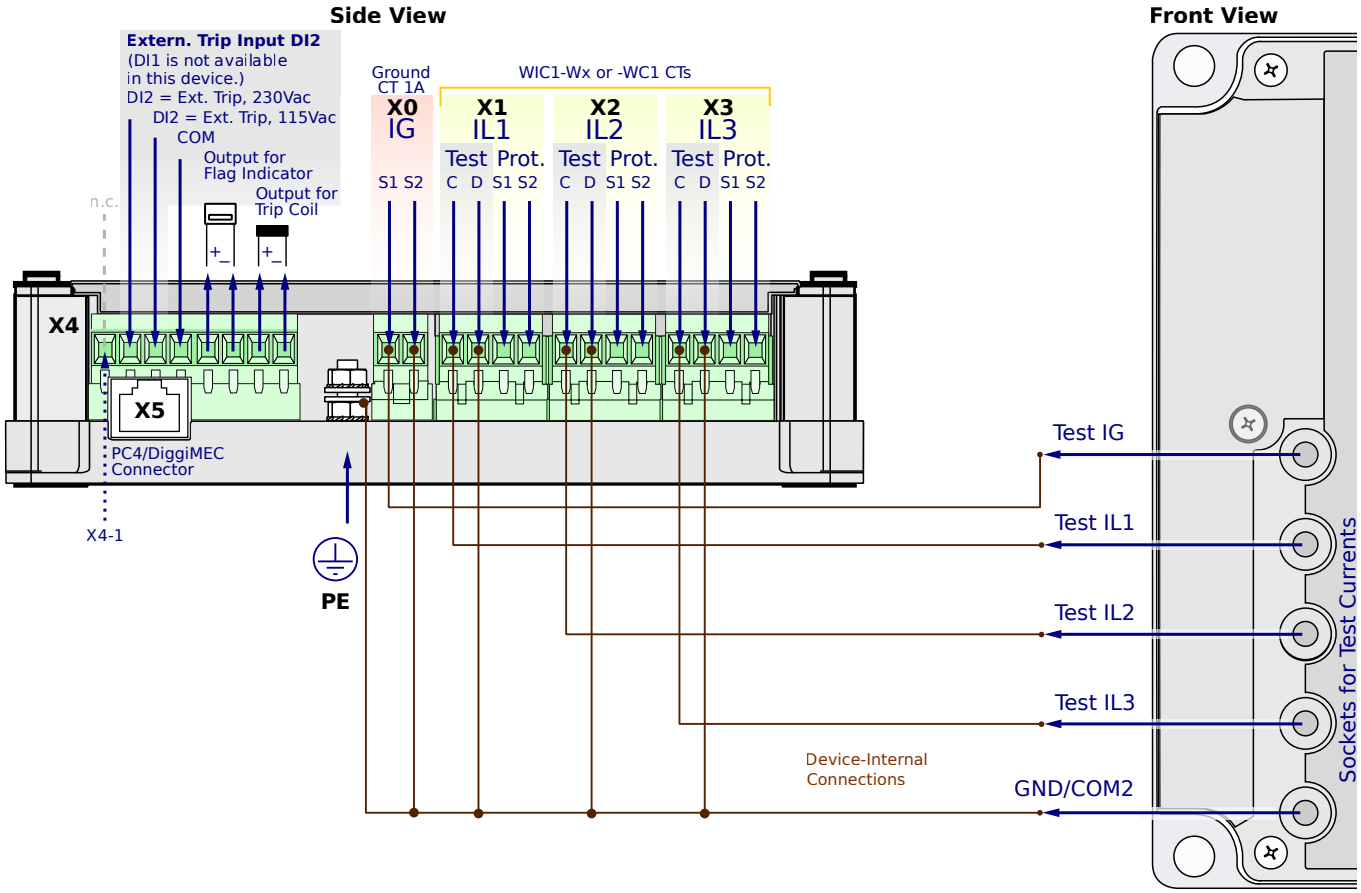


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1AA0

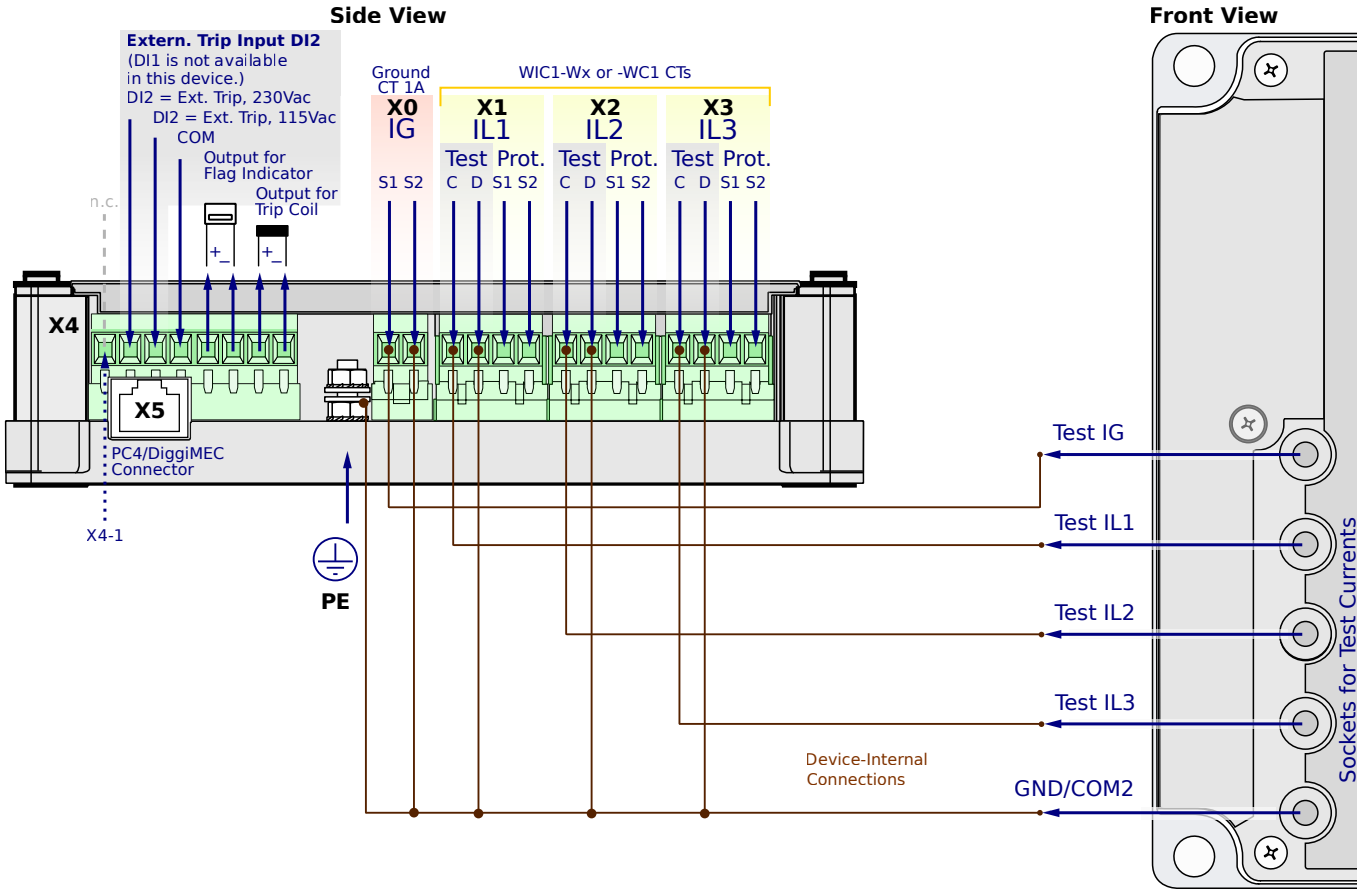


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1AAH

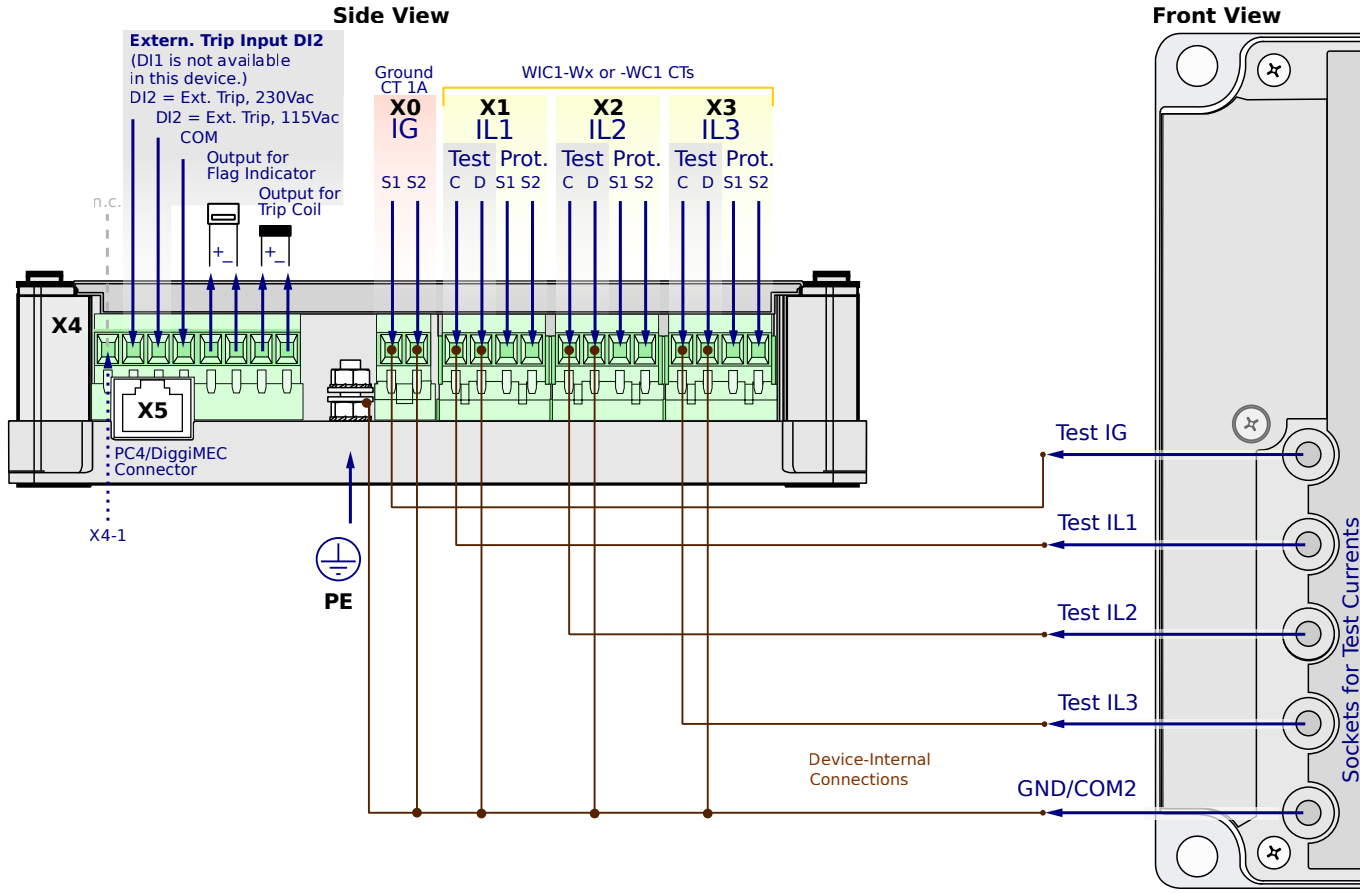


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1PA0

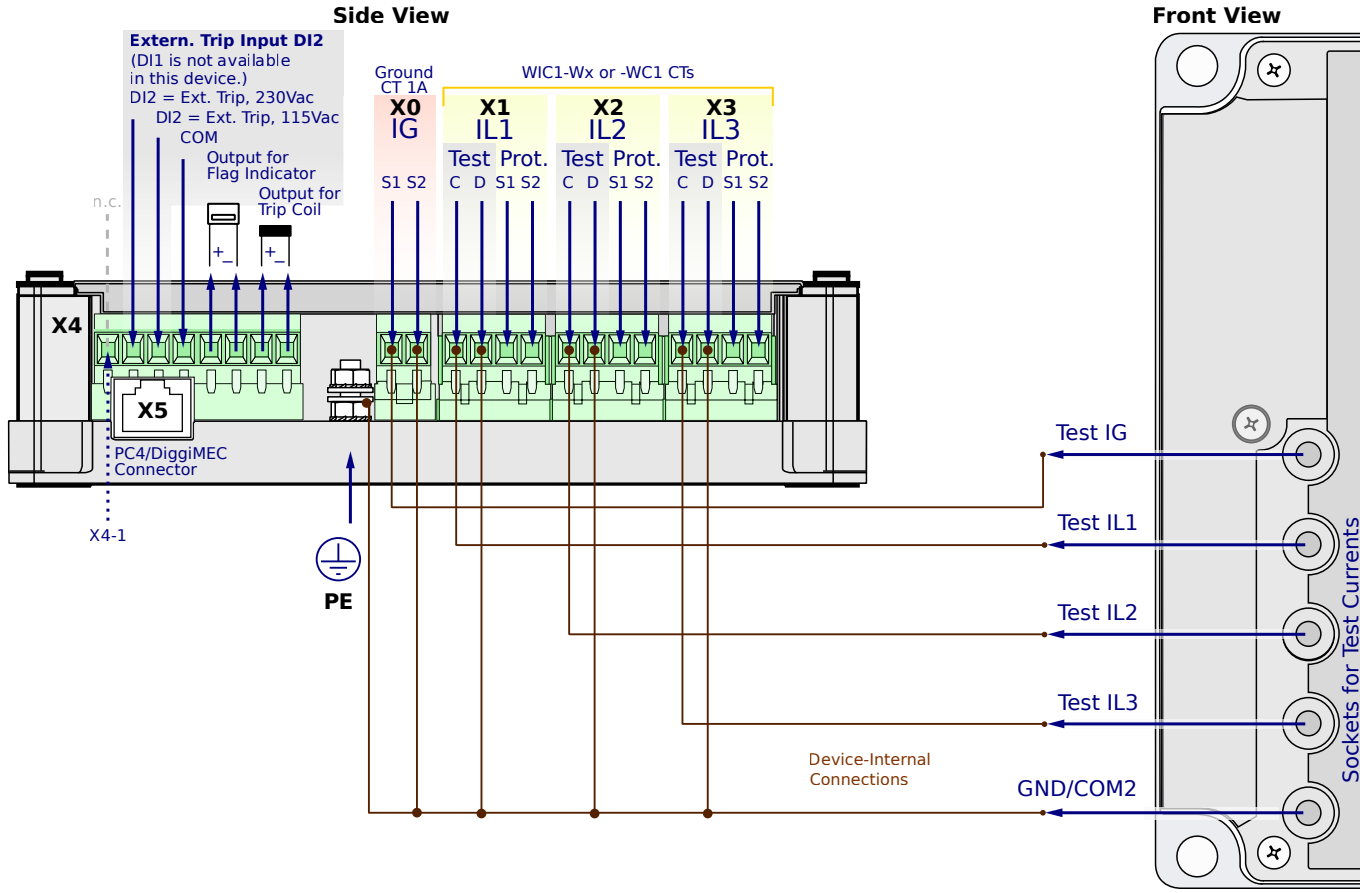


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF1PAH

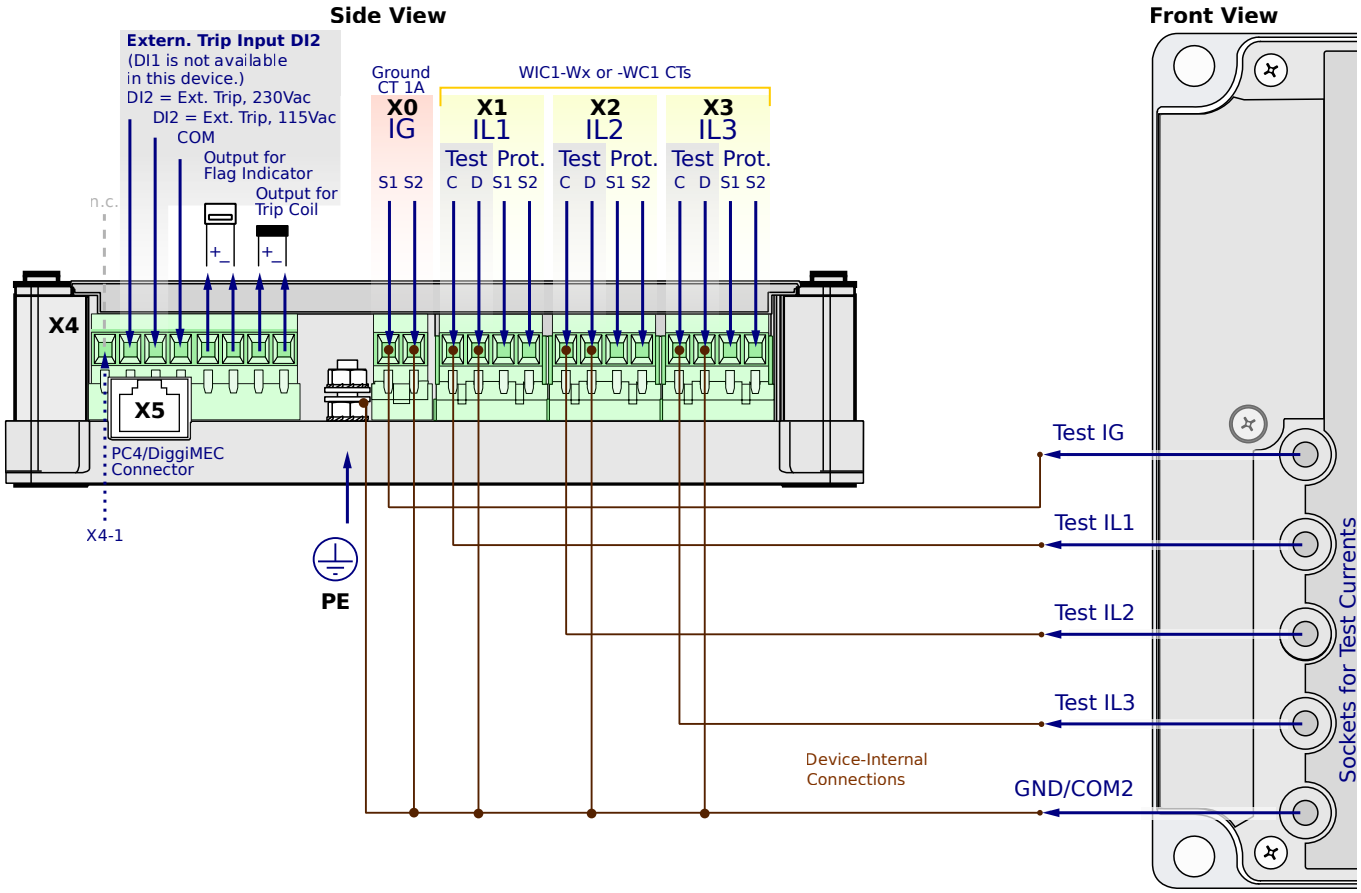


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2SA0

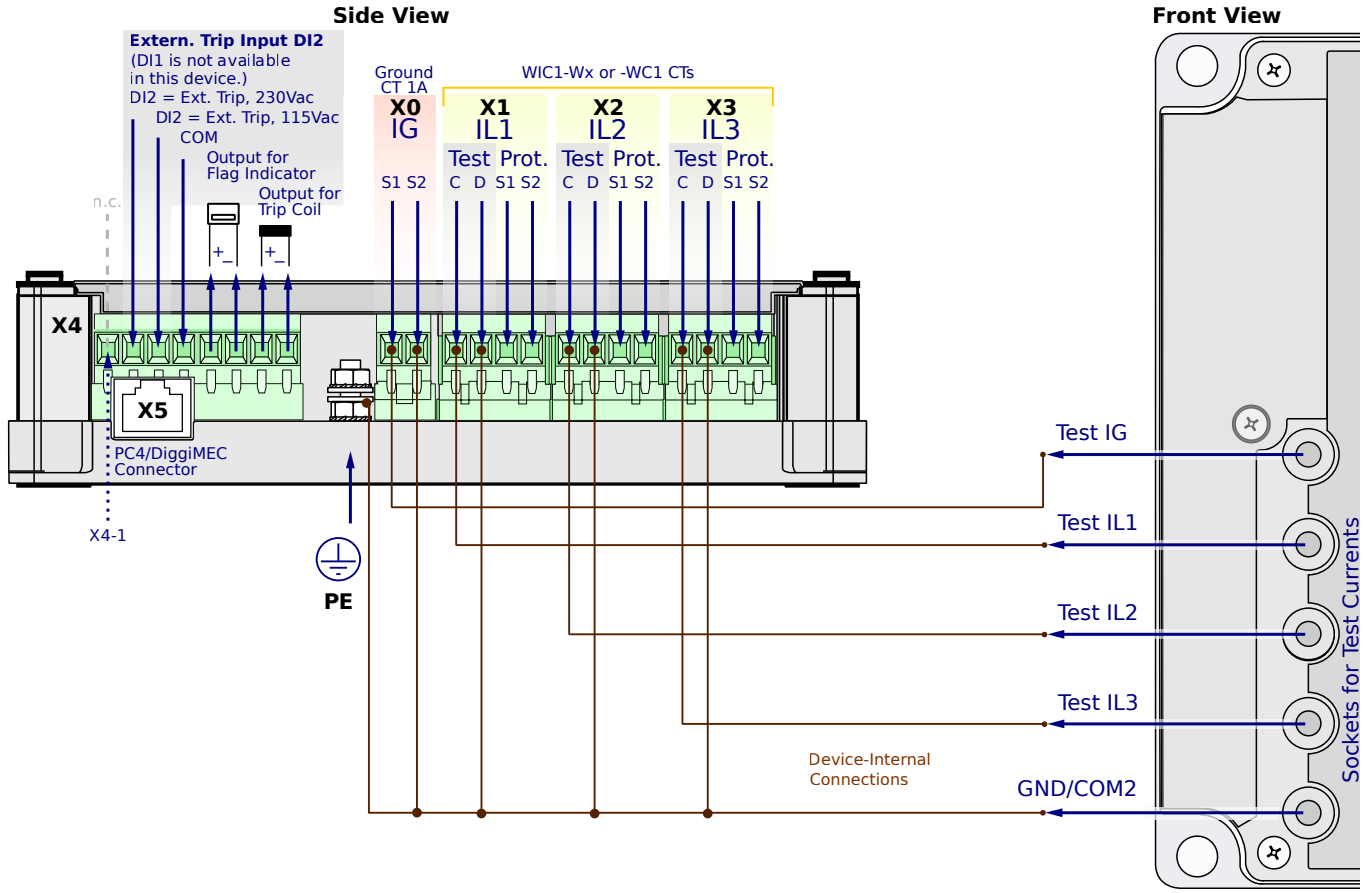


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2SAH

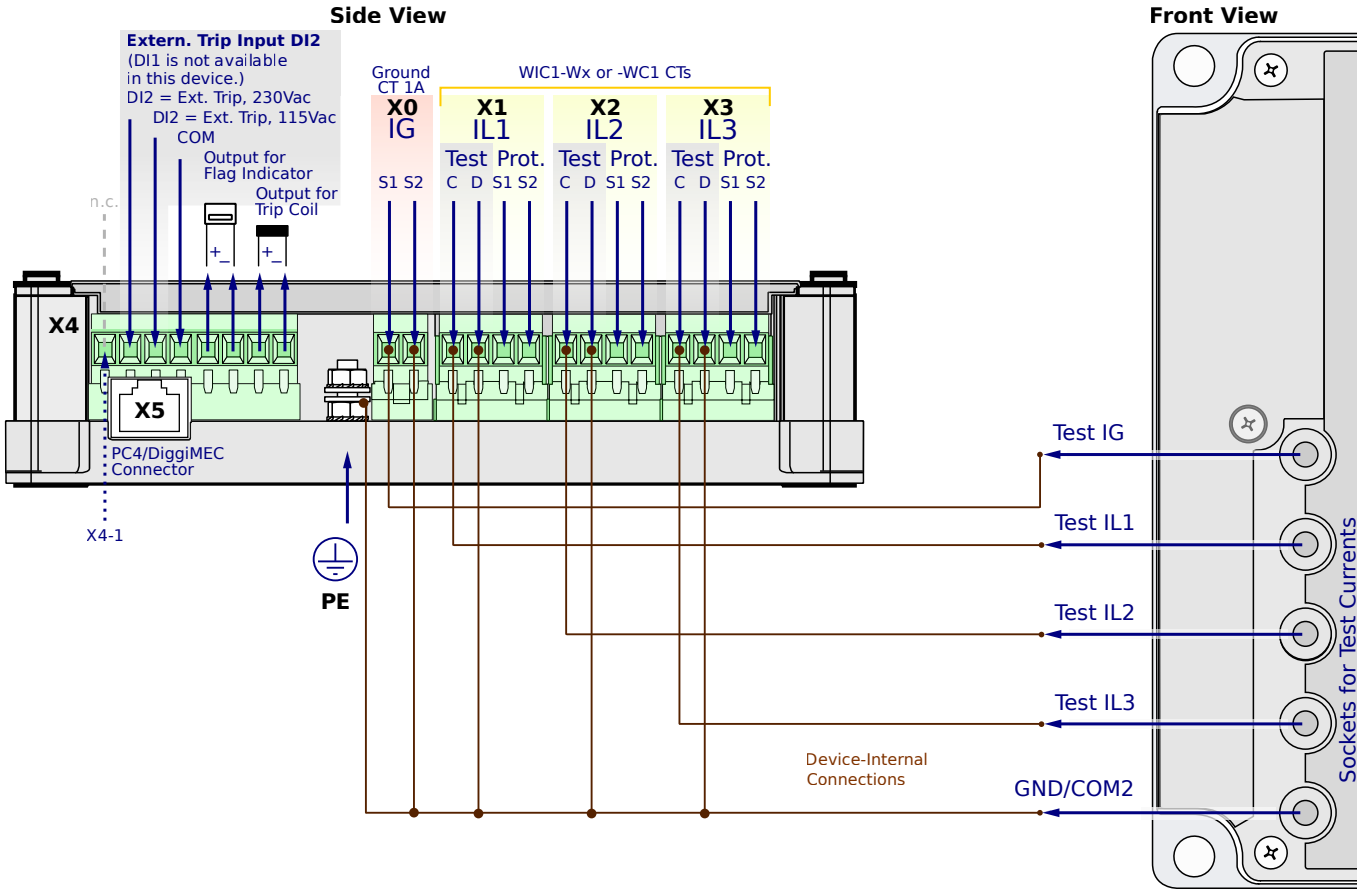


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2AA0

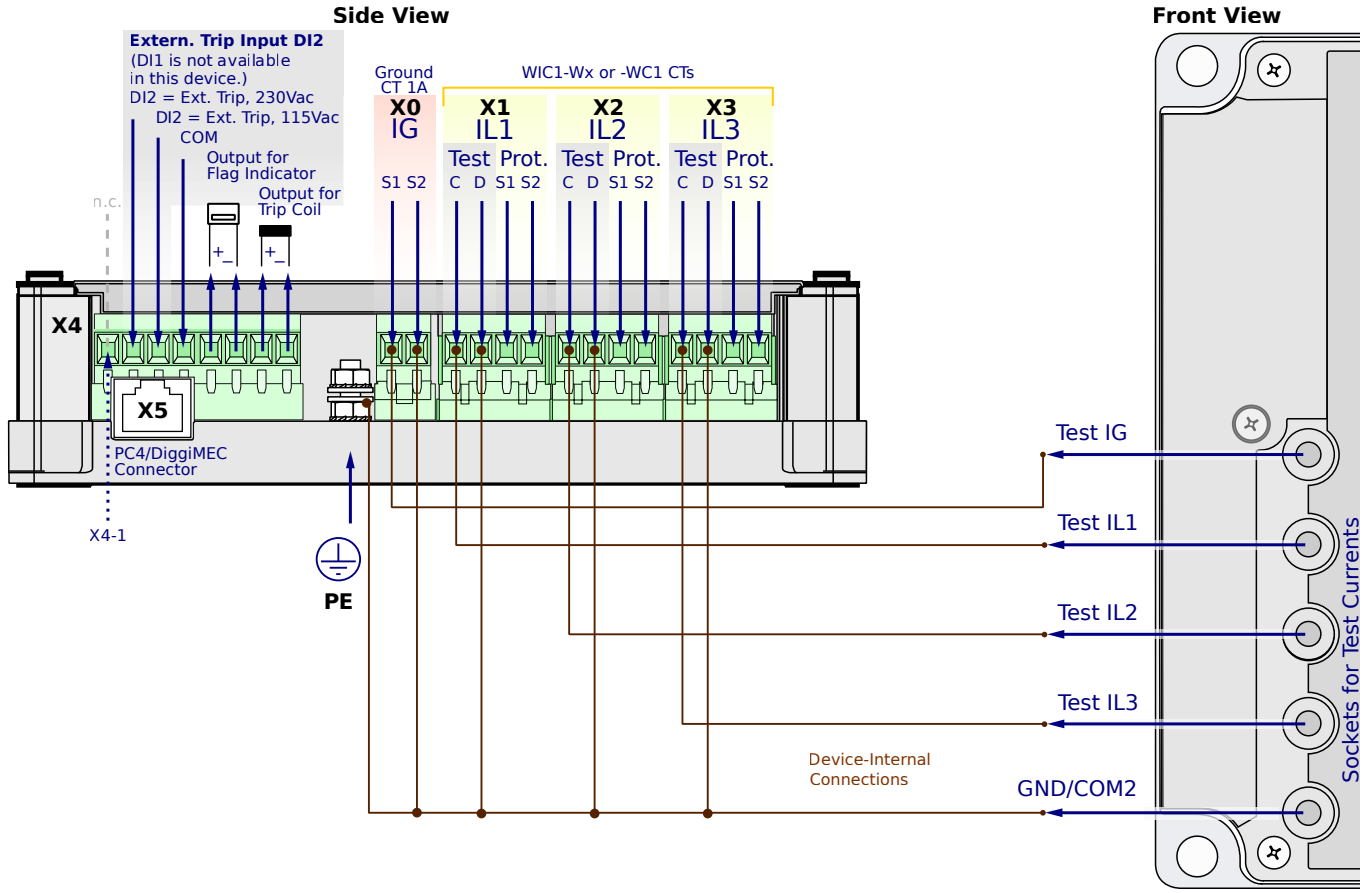


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2AAH

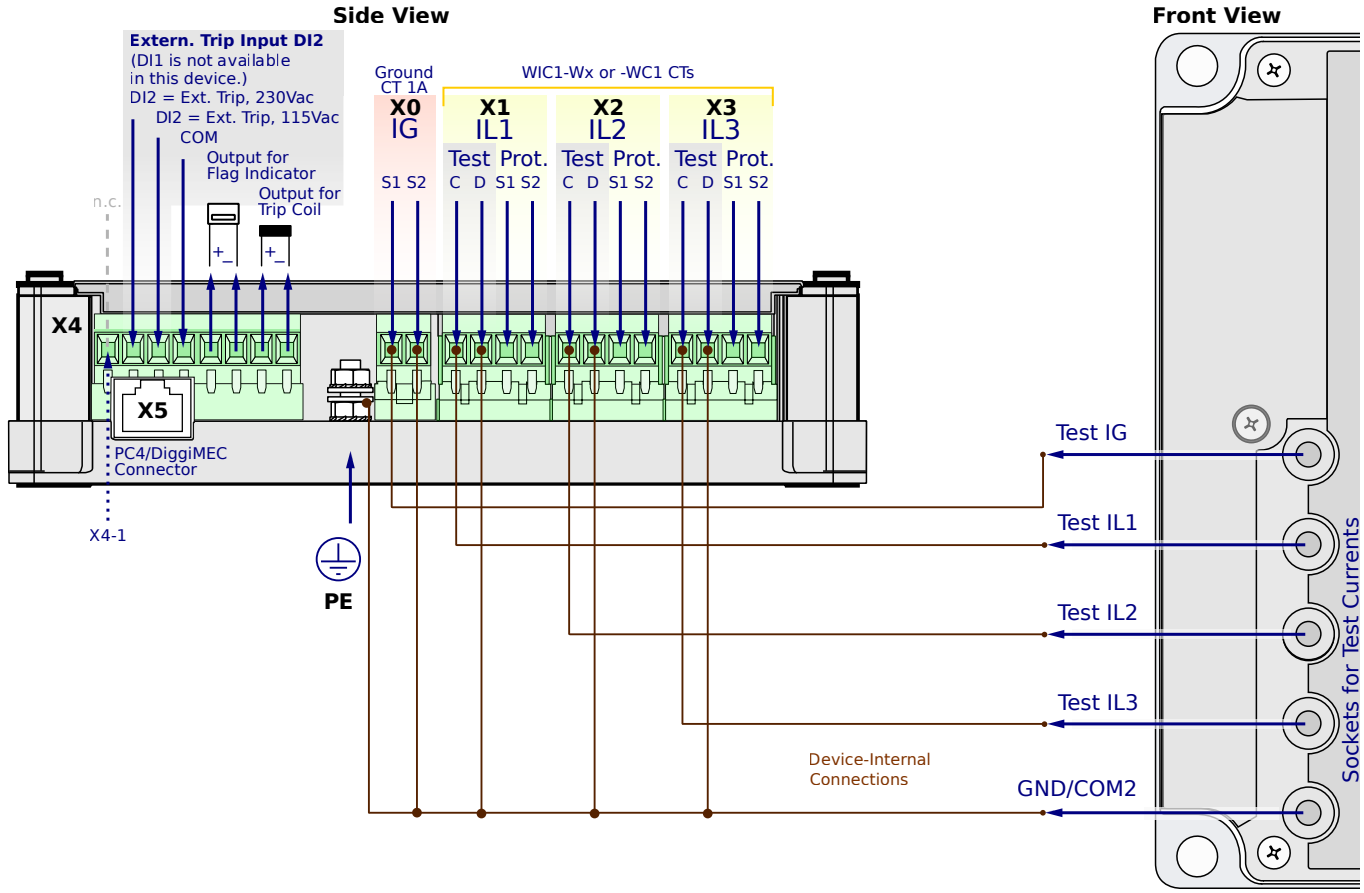


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2PA0

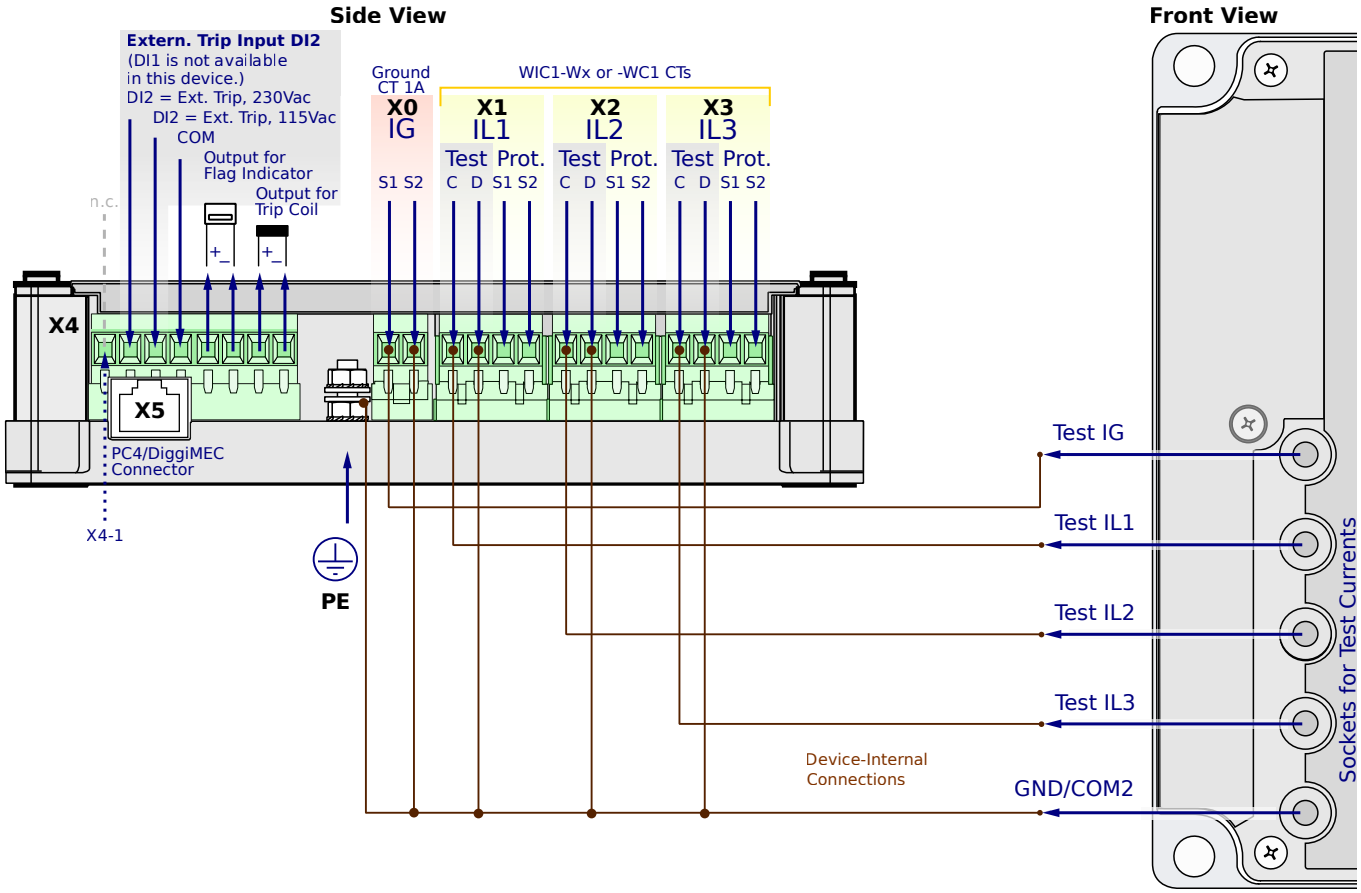


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CF2PAH

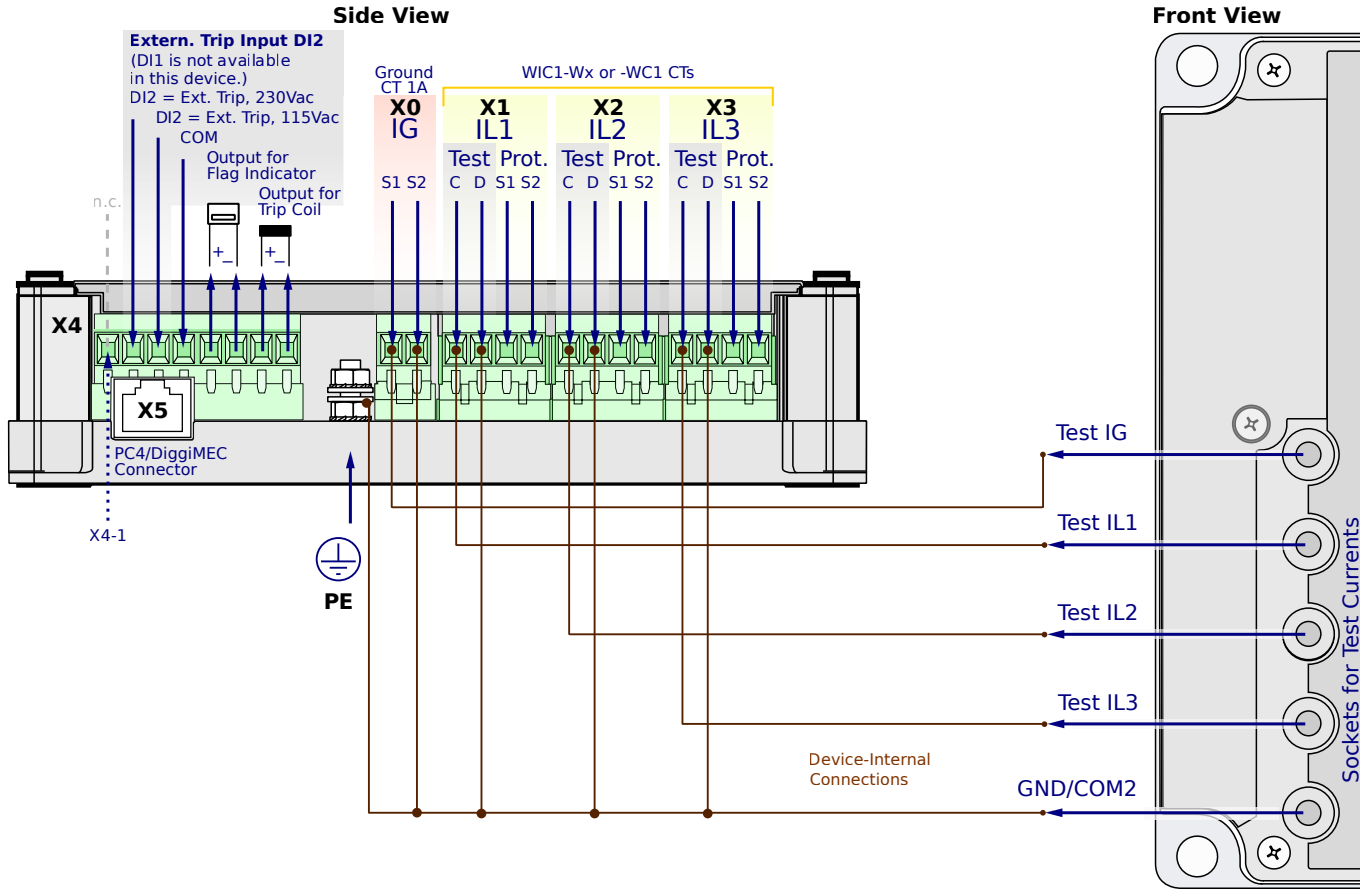


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1SA0

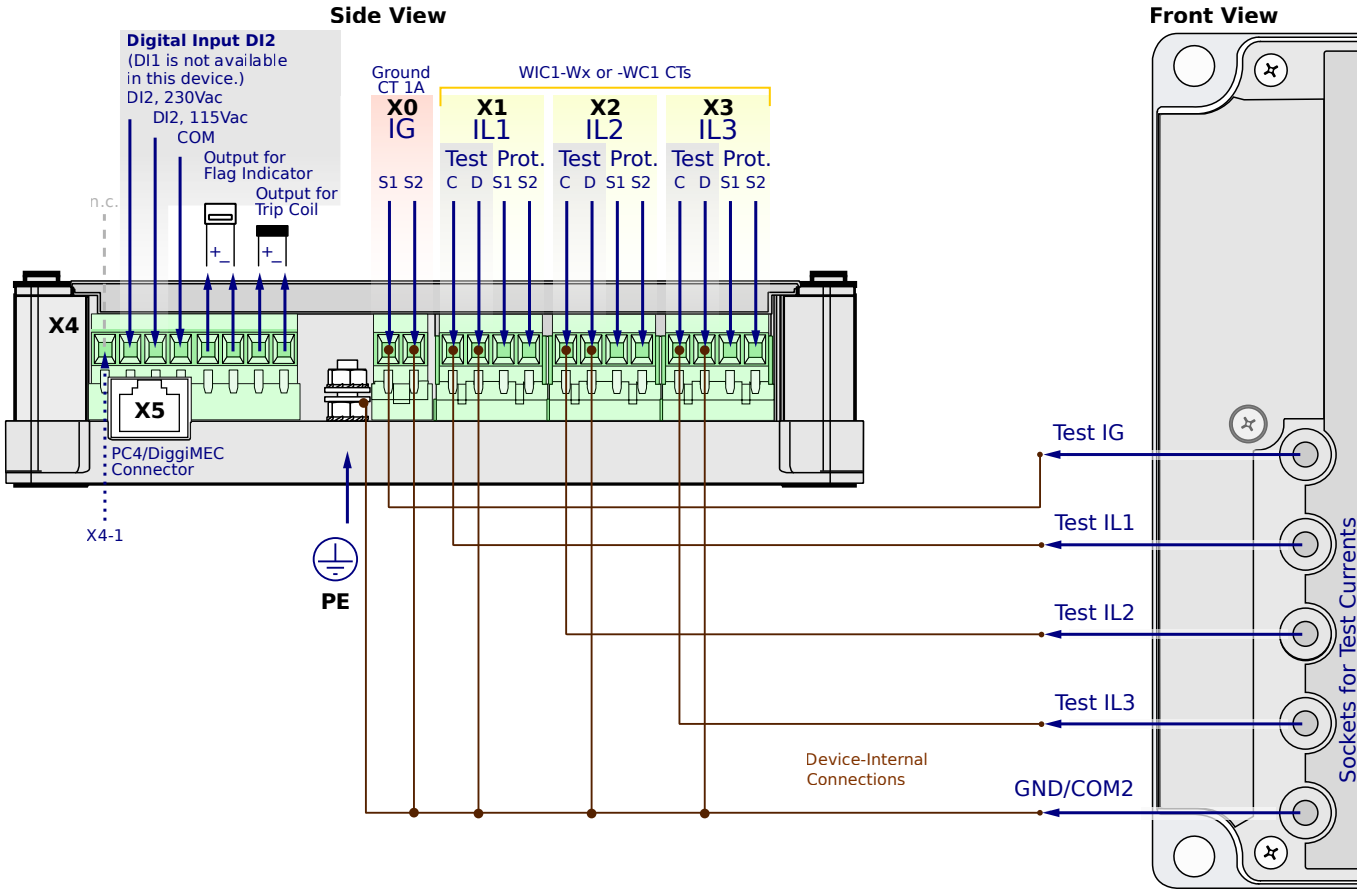


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1SAH

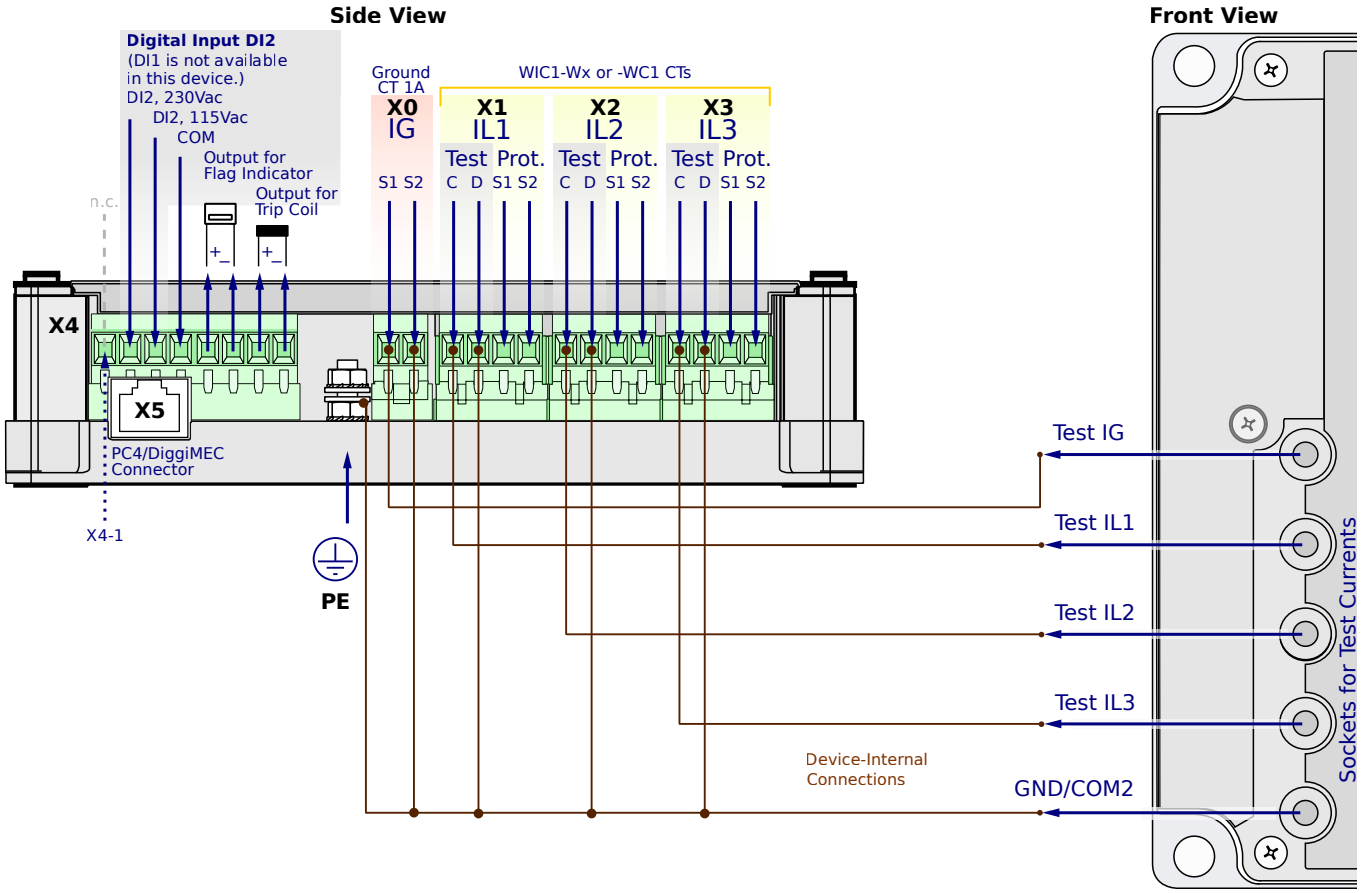


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1AA0

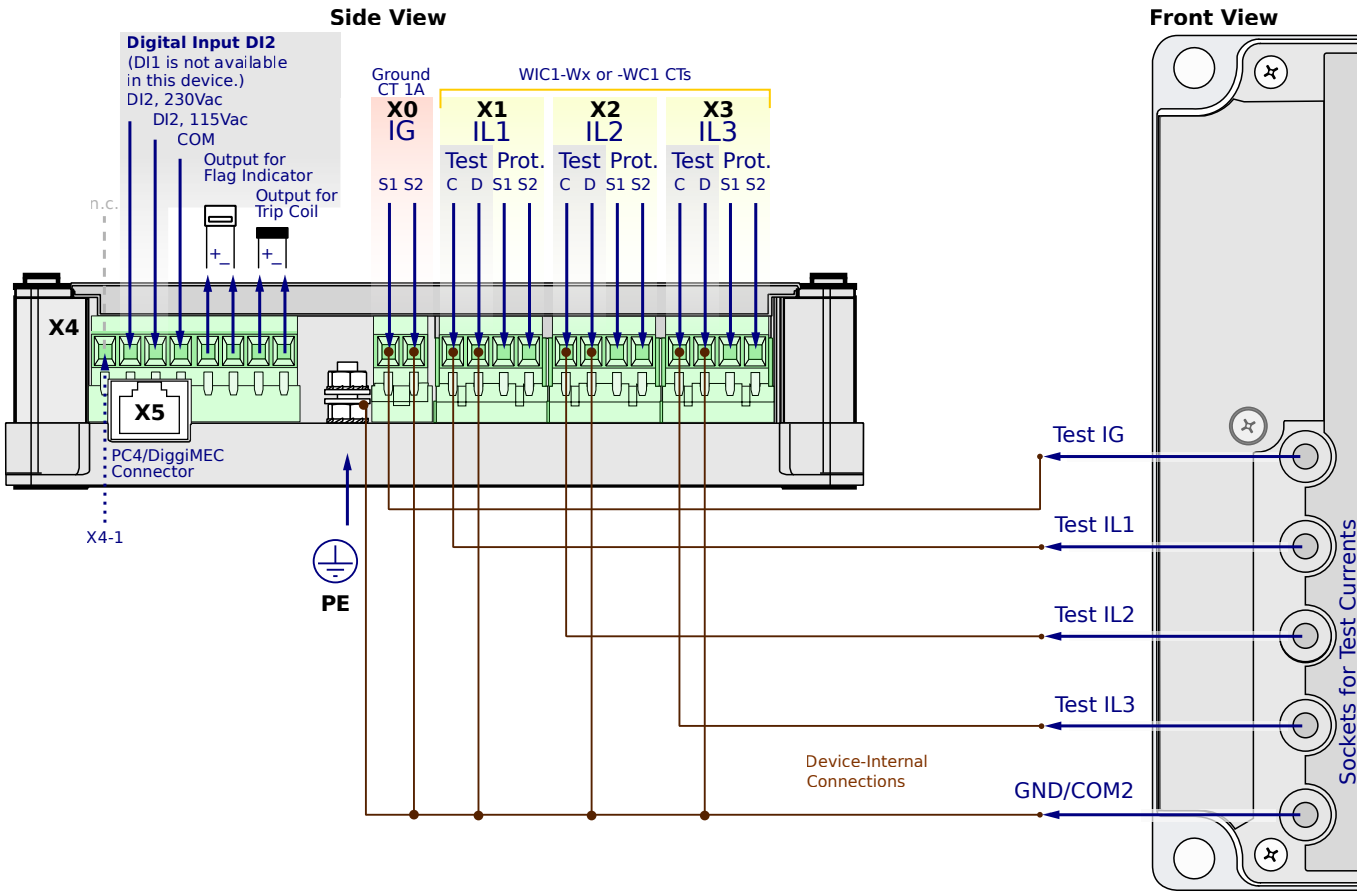


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1AAH

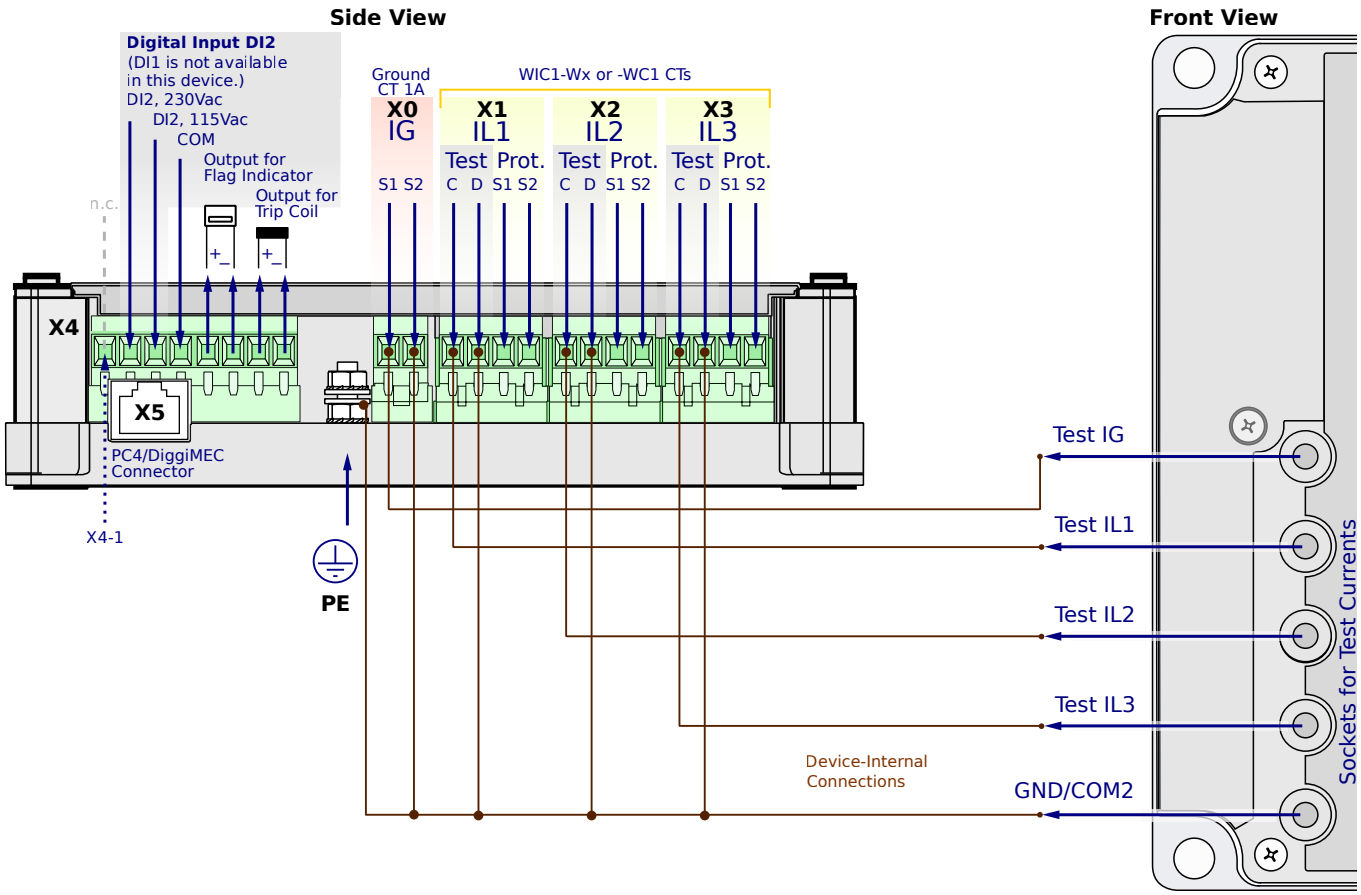


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1PA0

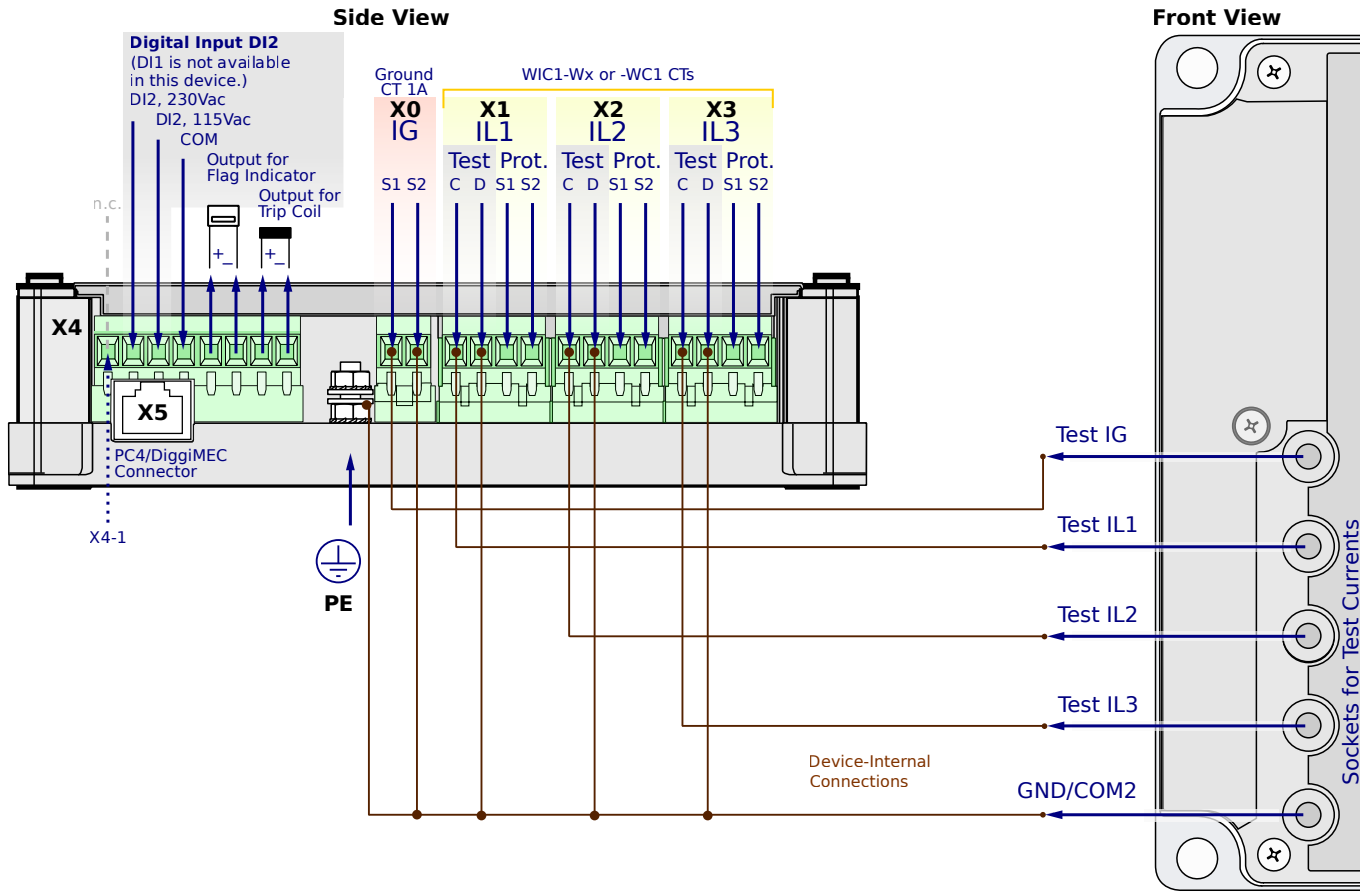


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC1PAH

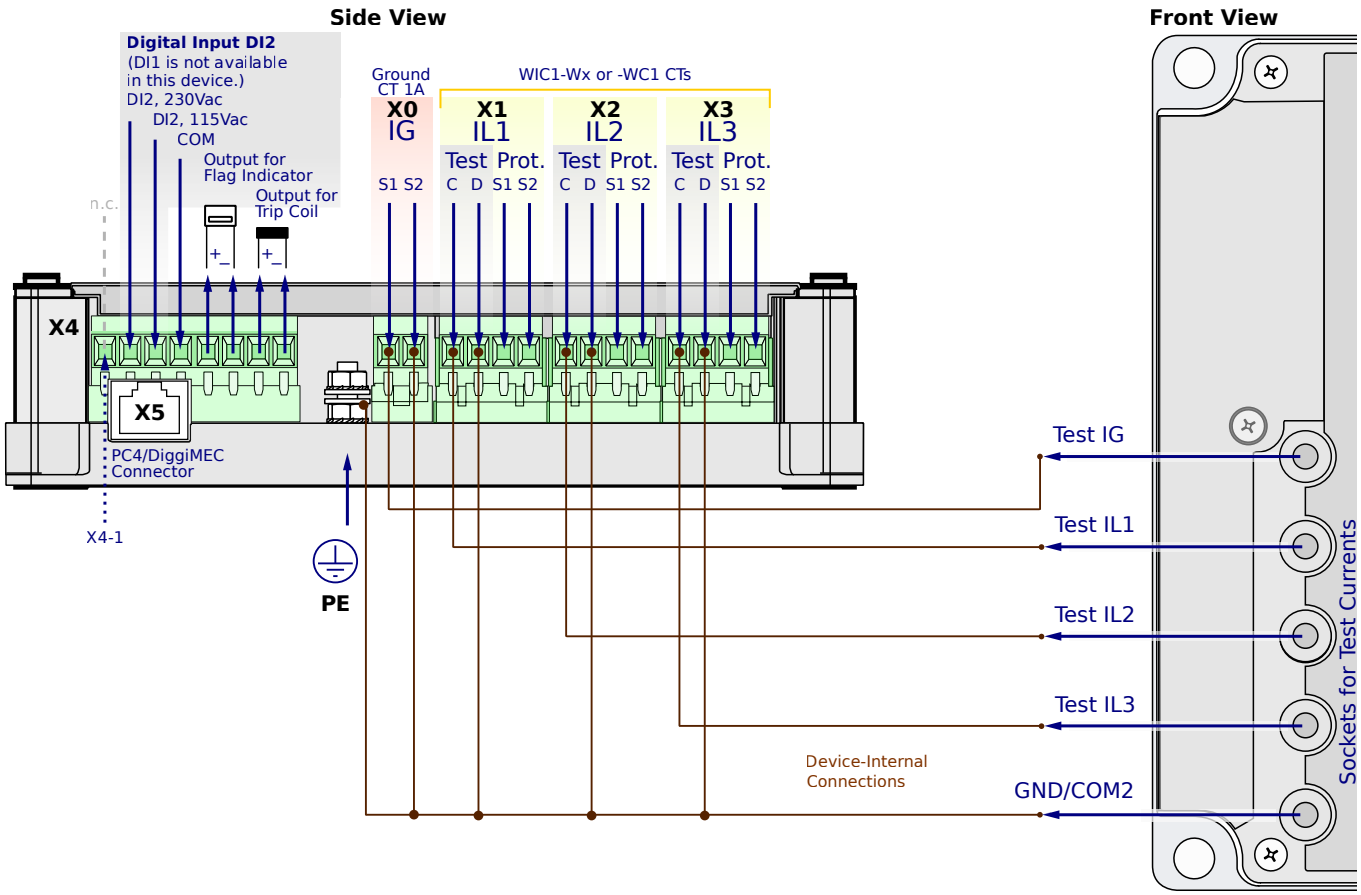


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2SA0

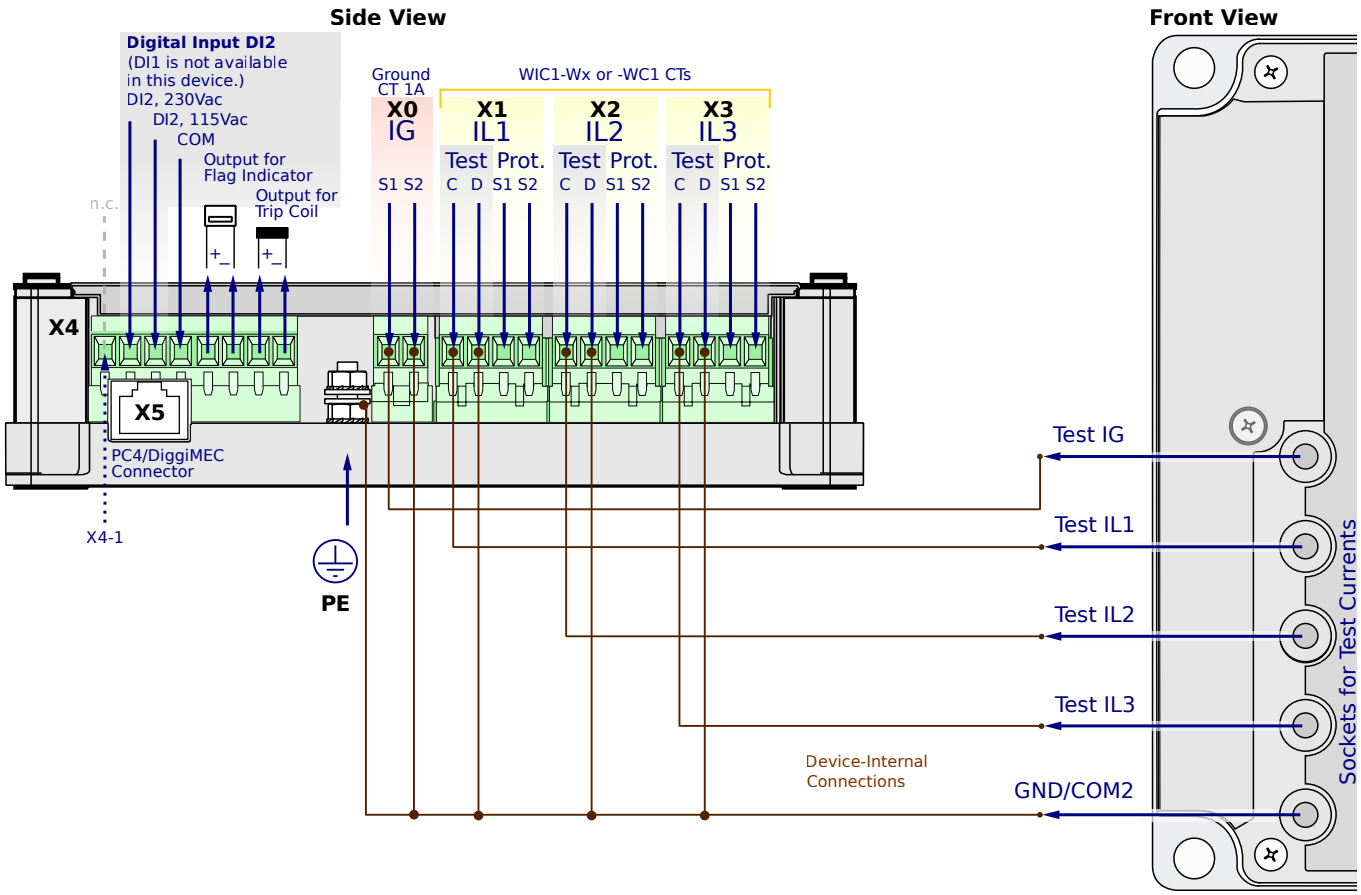


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2SAH

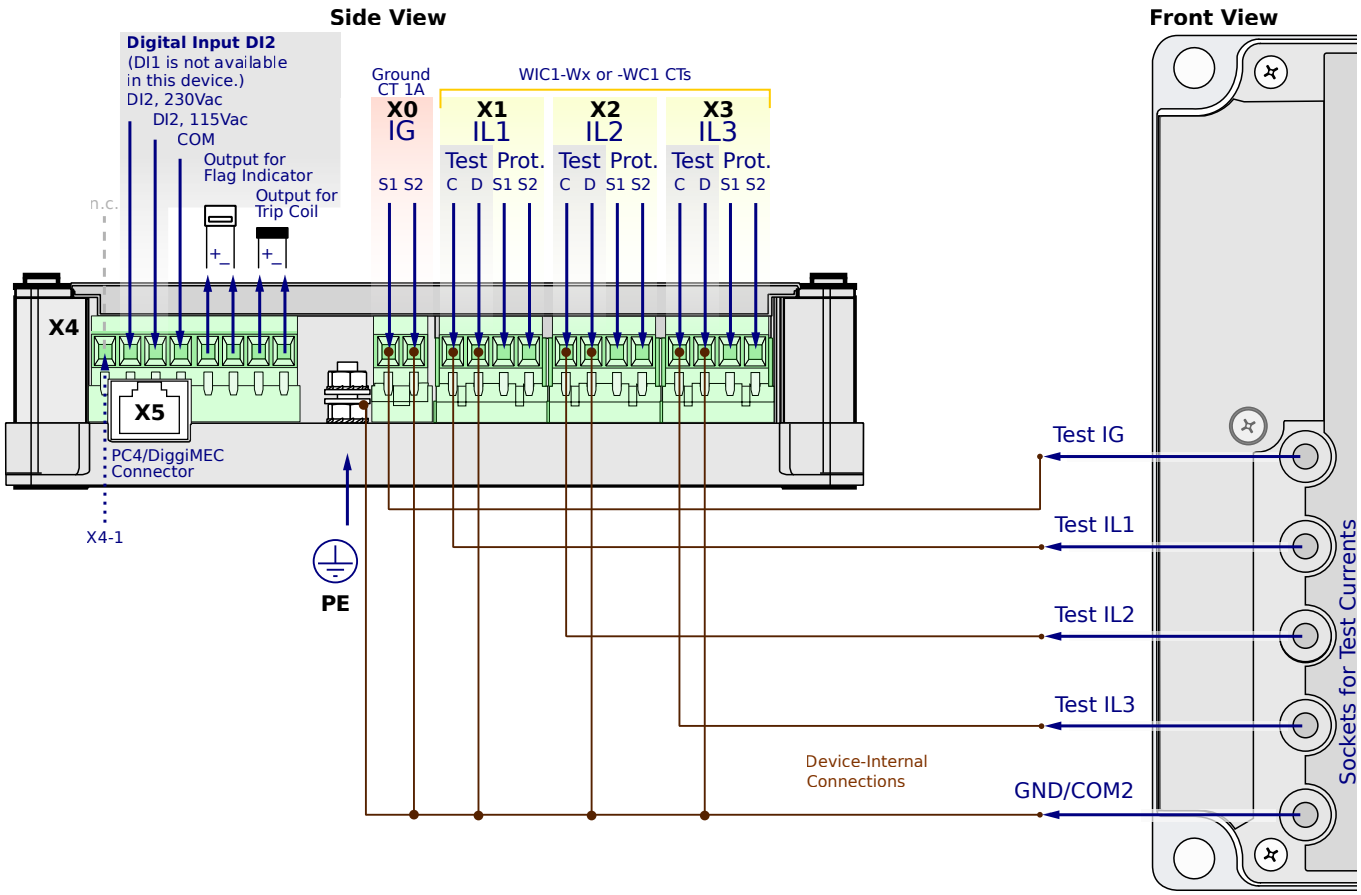


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2AA0

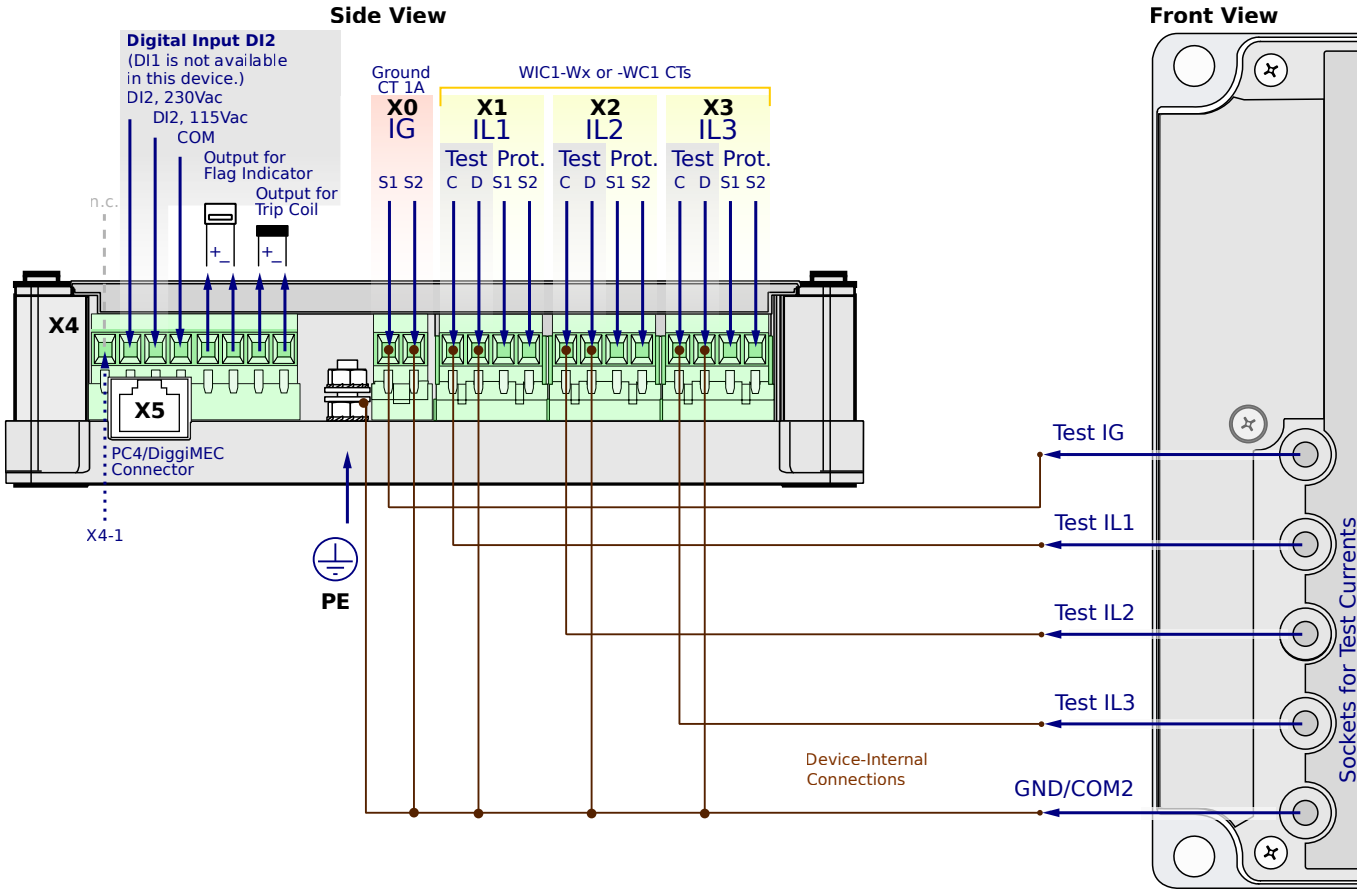


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2AAH

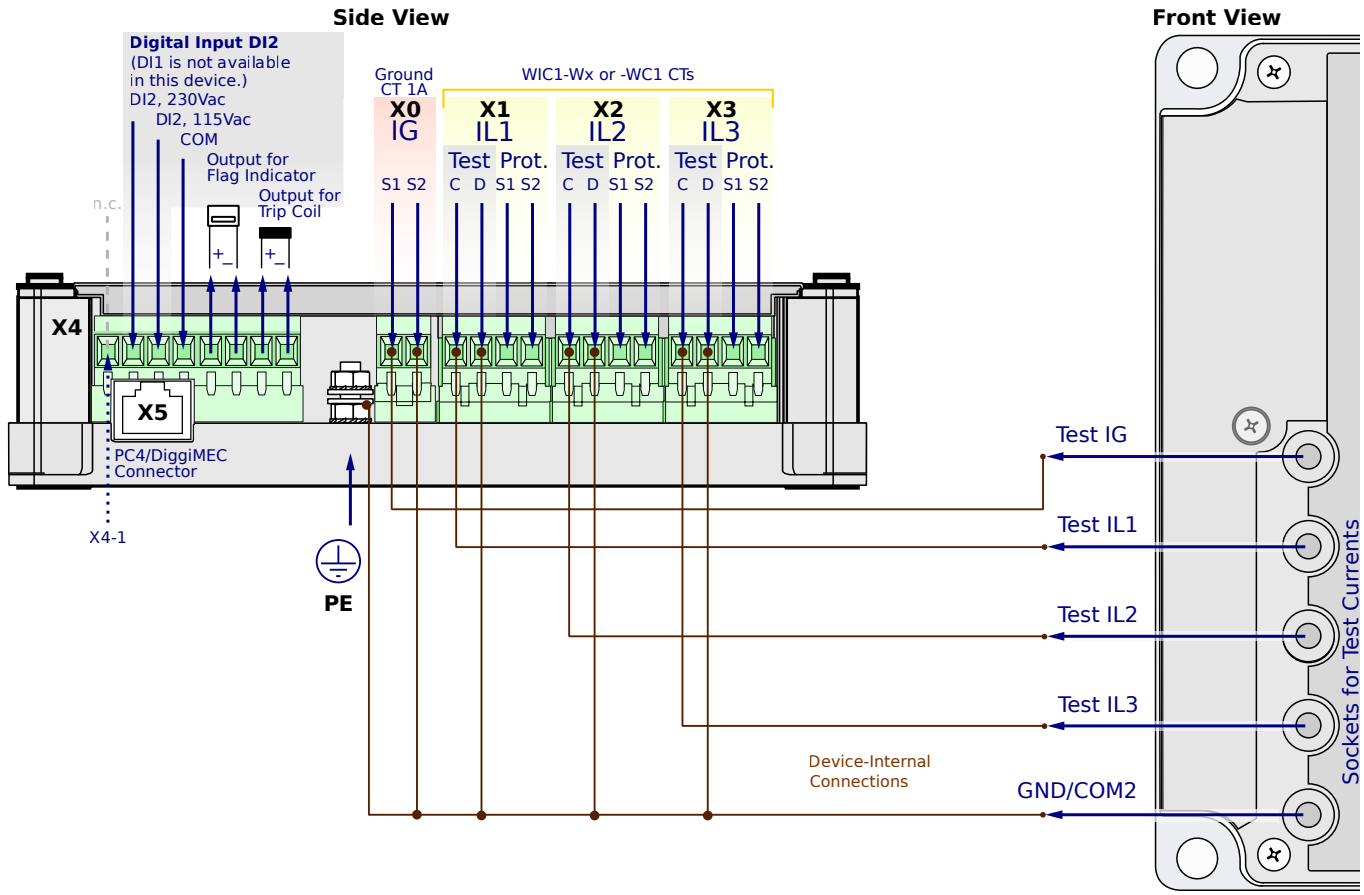


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2PA0

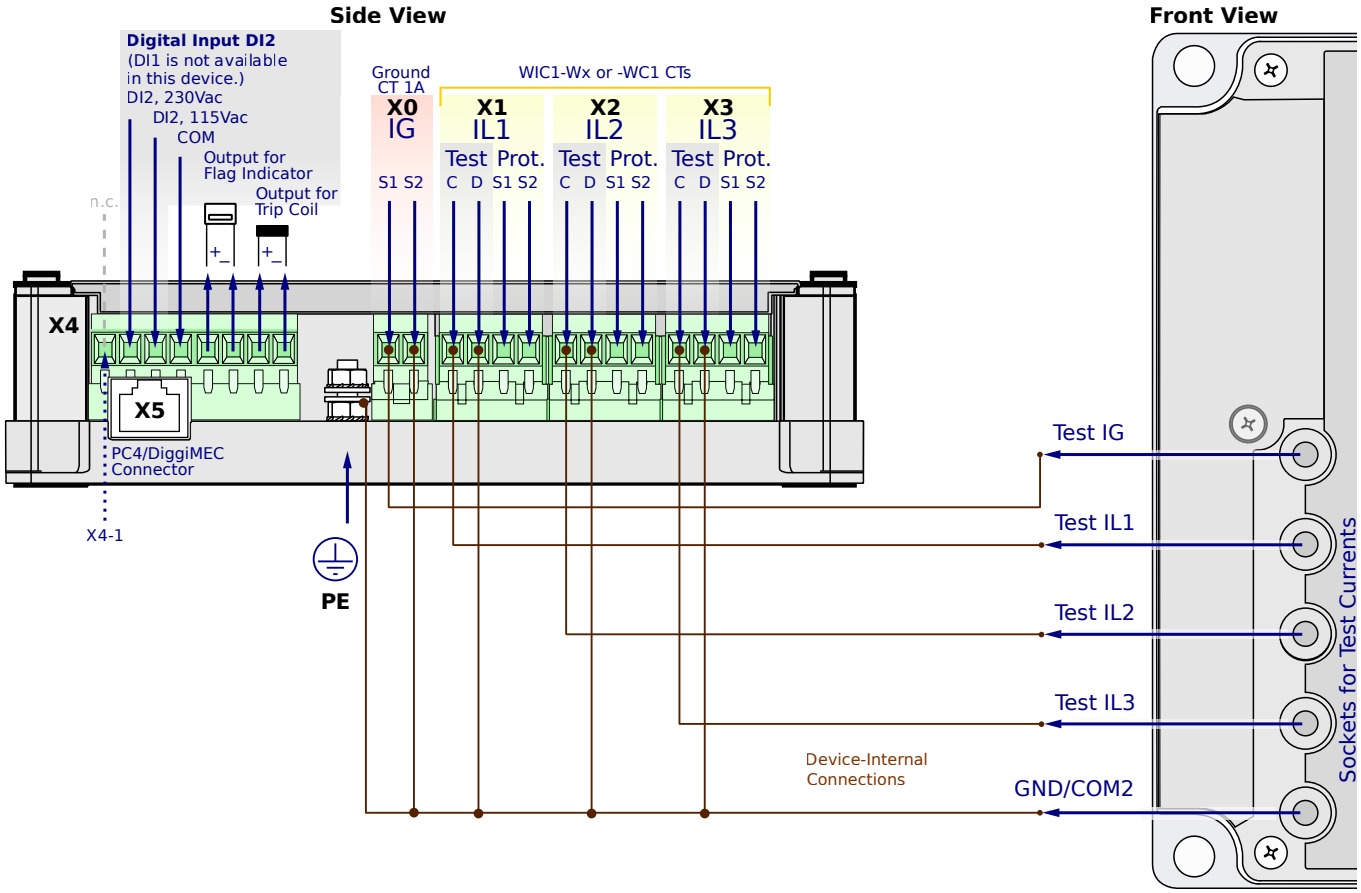


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SG6CC2PAH

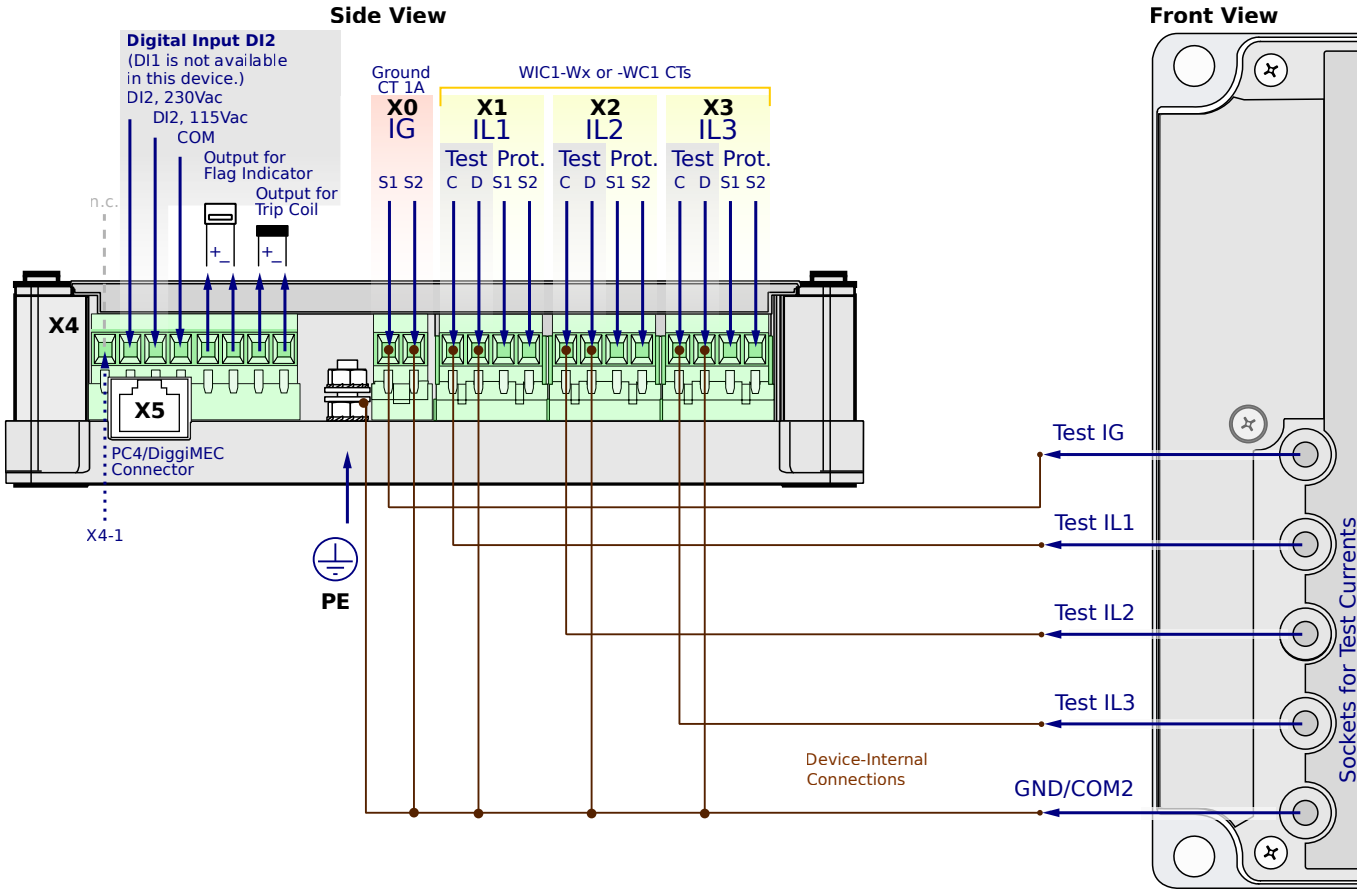


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0SA0

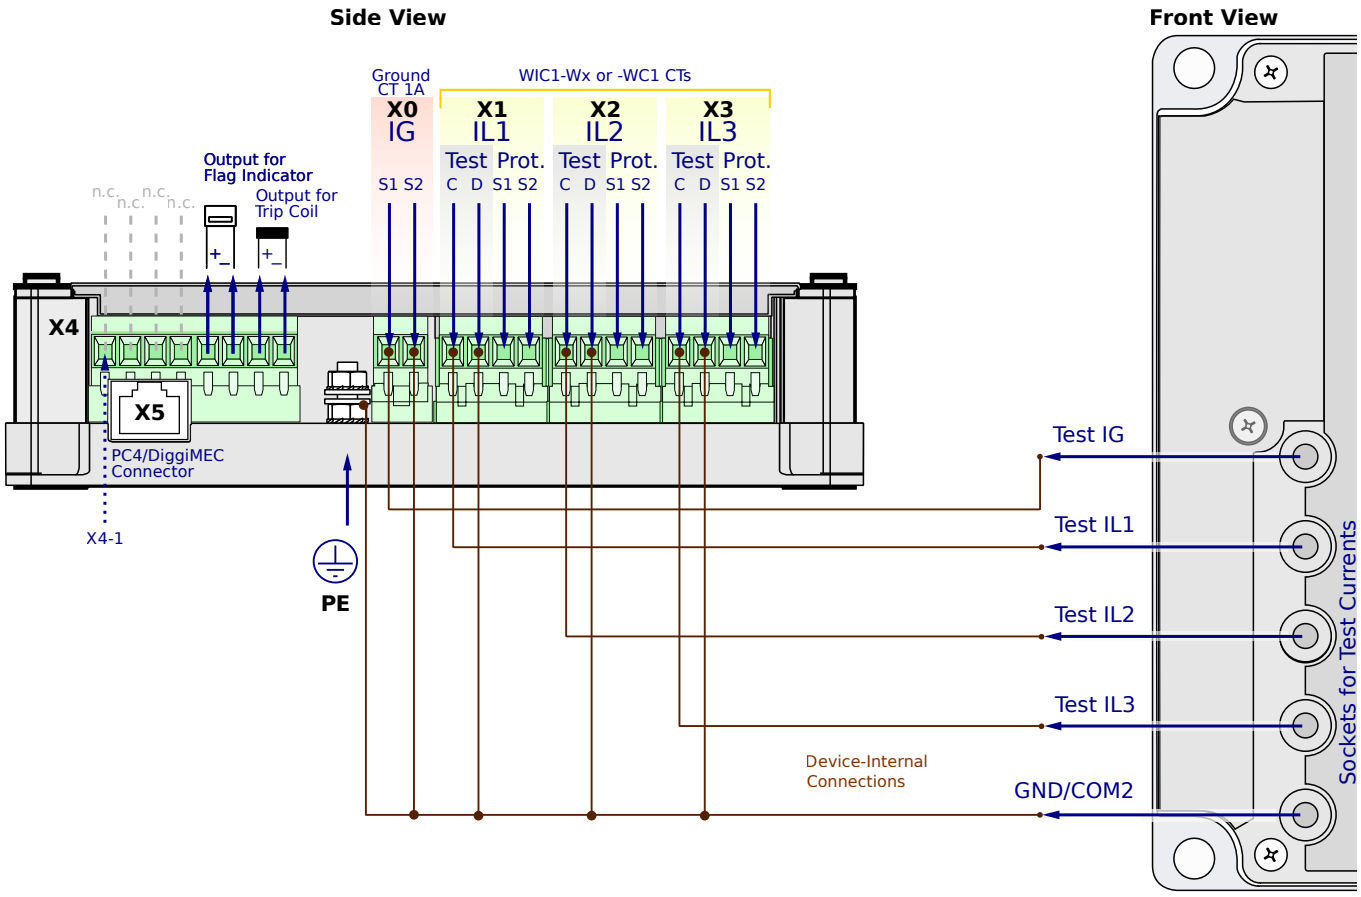


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0SAH

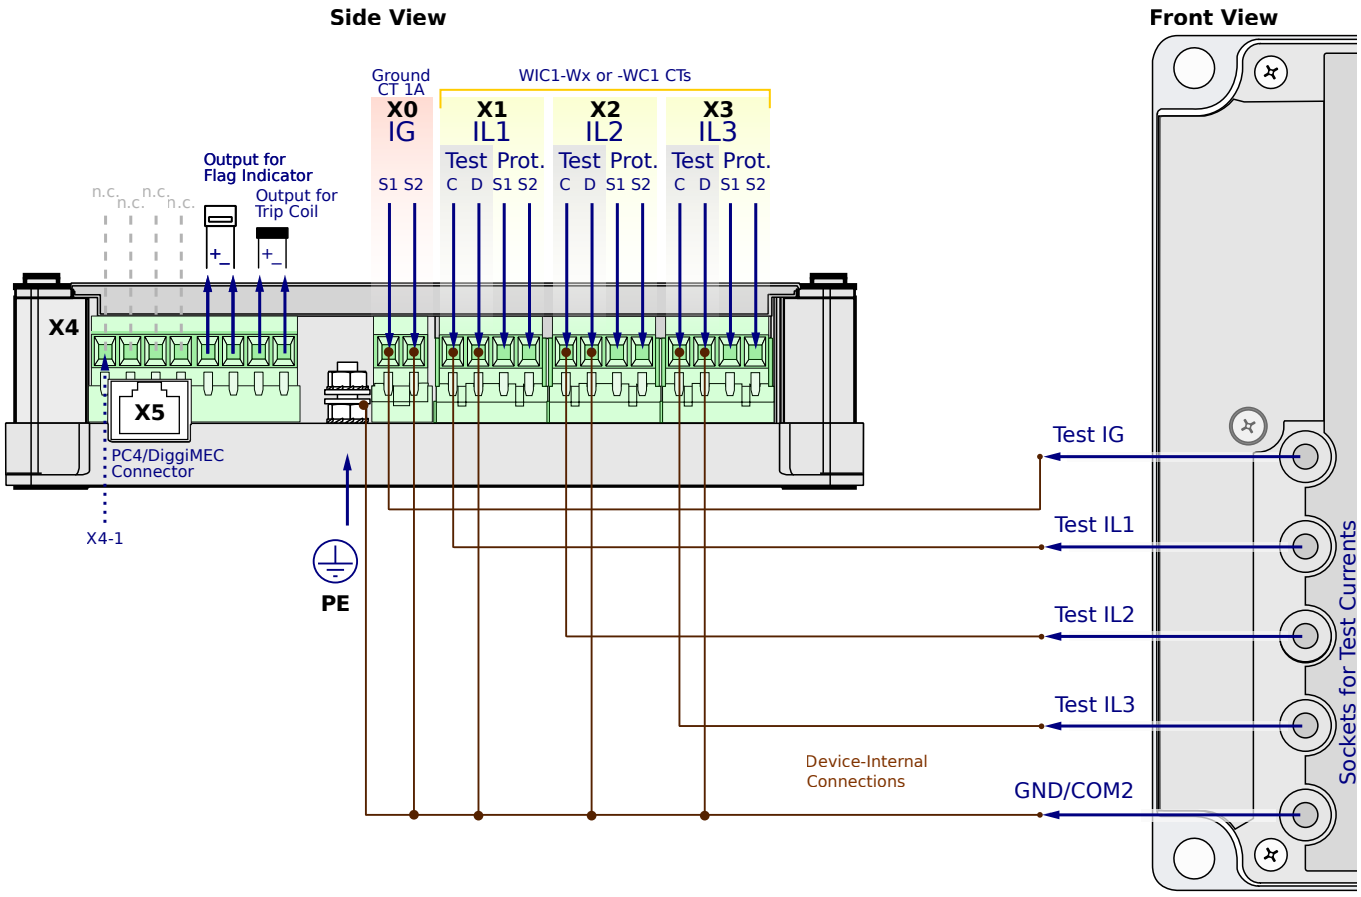


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0AA0

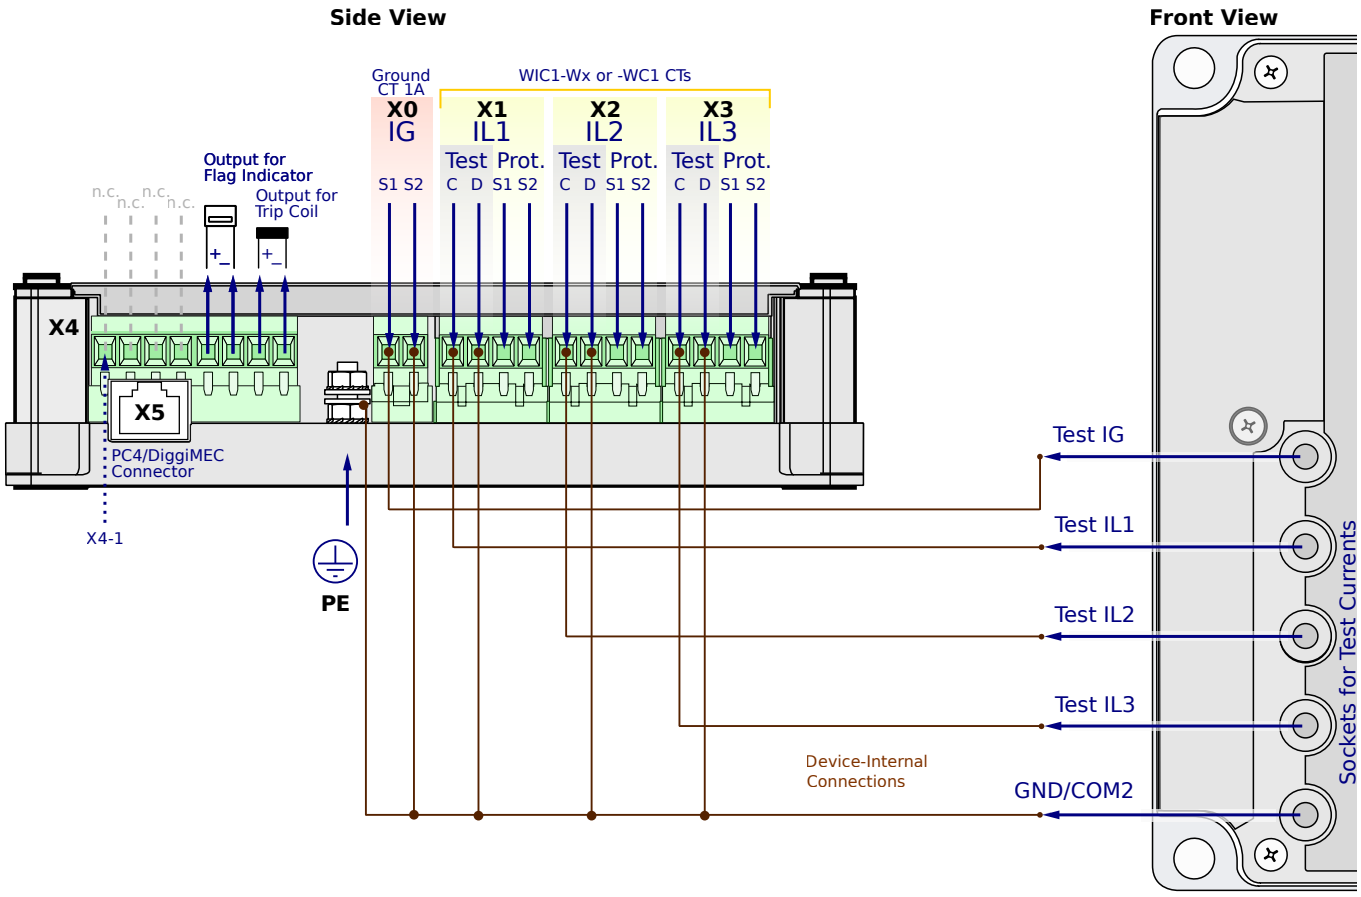


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0AAH

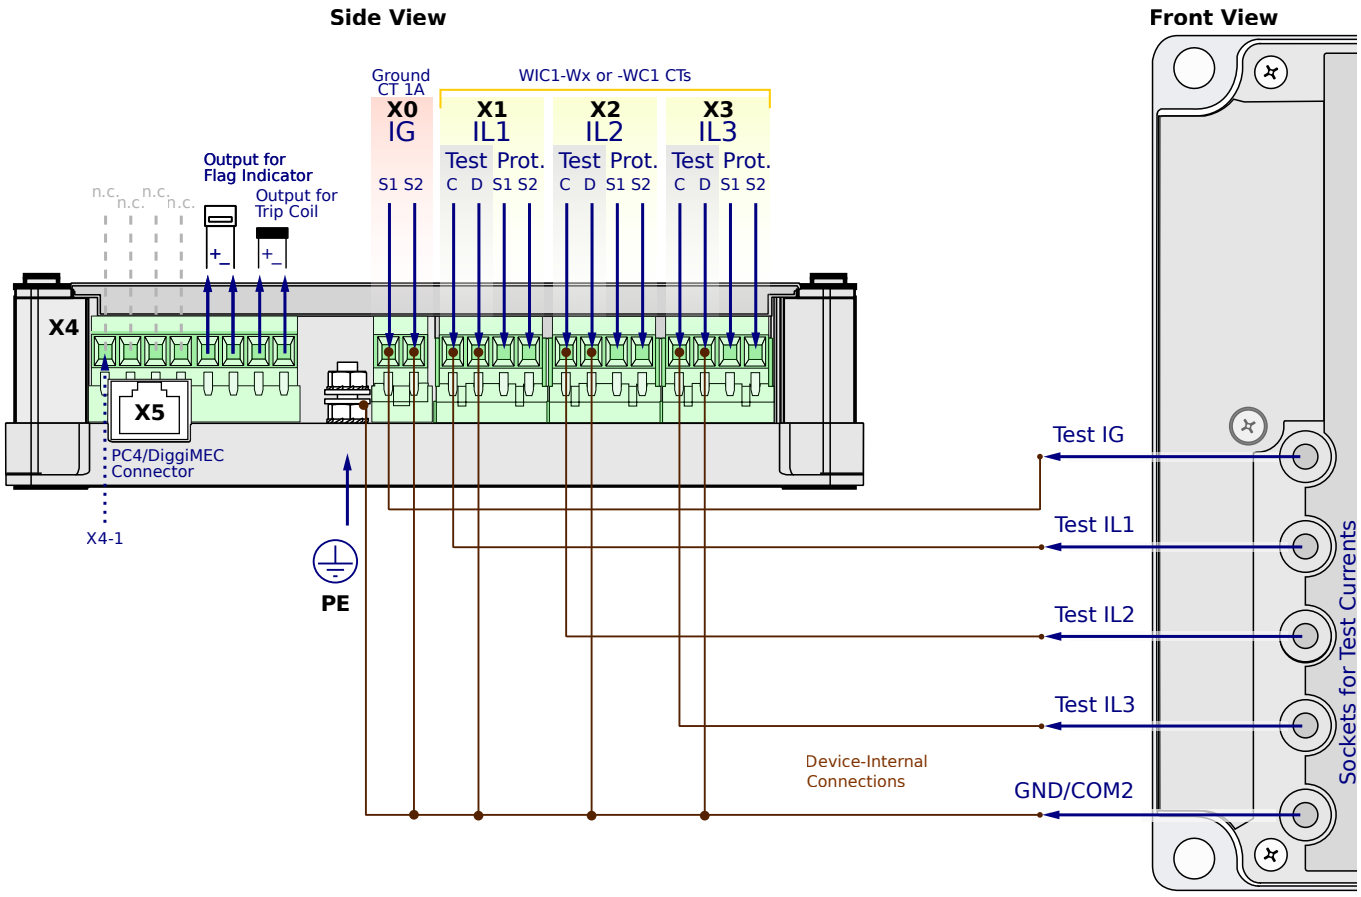


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0PA0

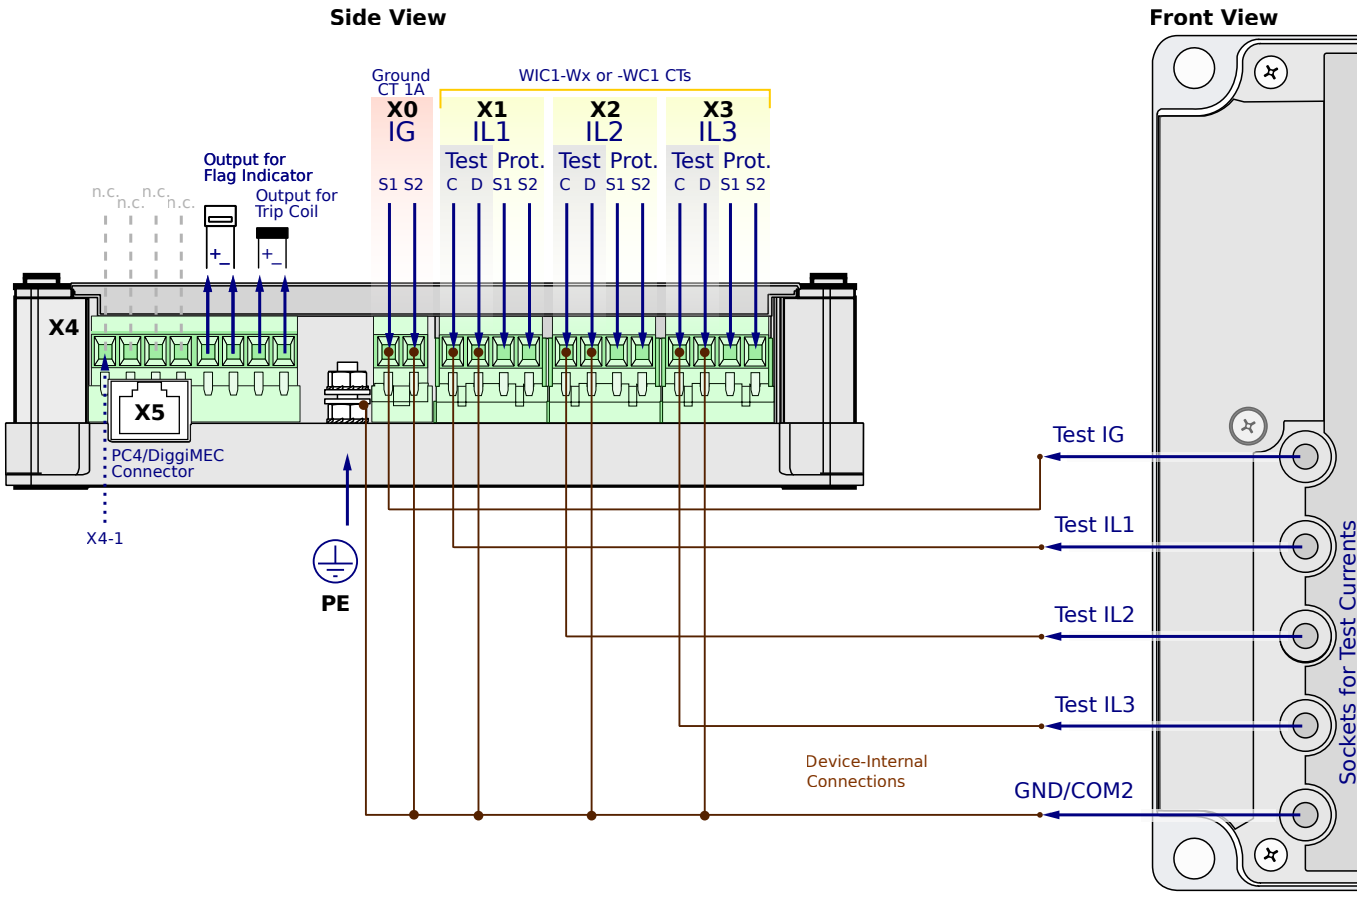


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN0PAH

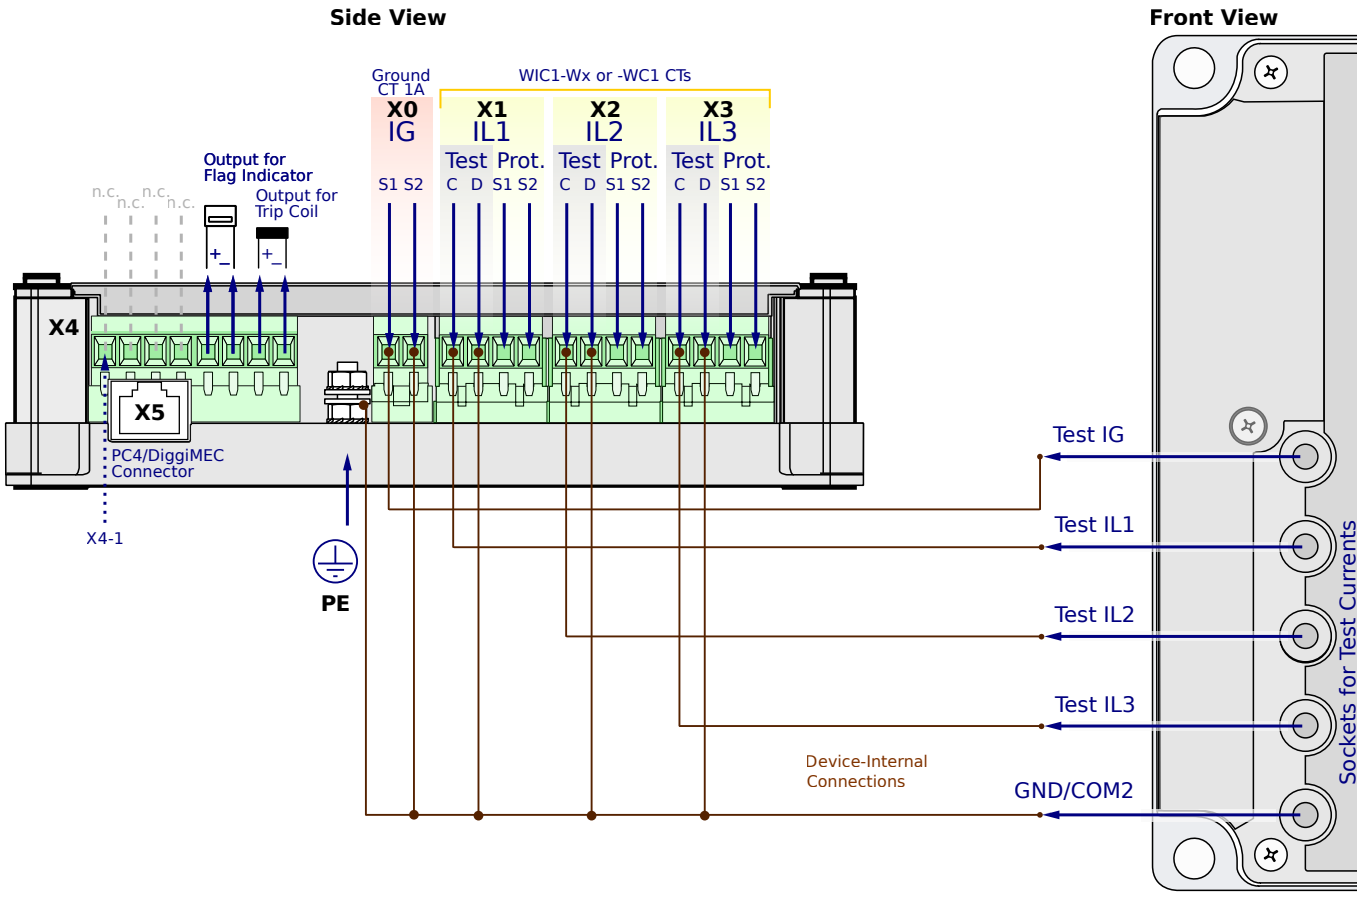


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1SA0

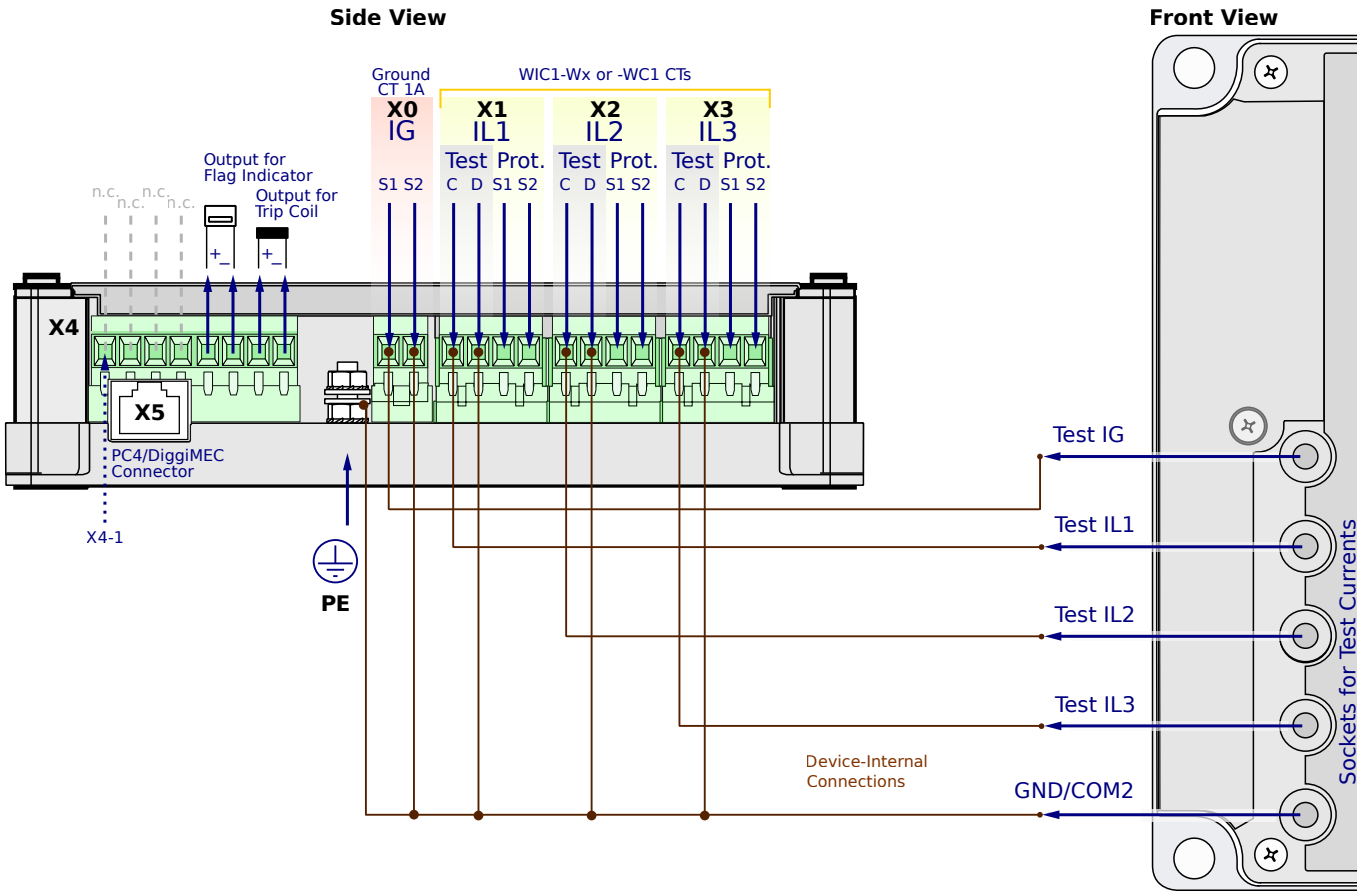


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1SAH

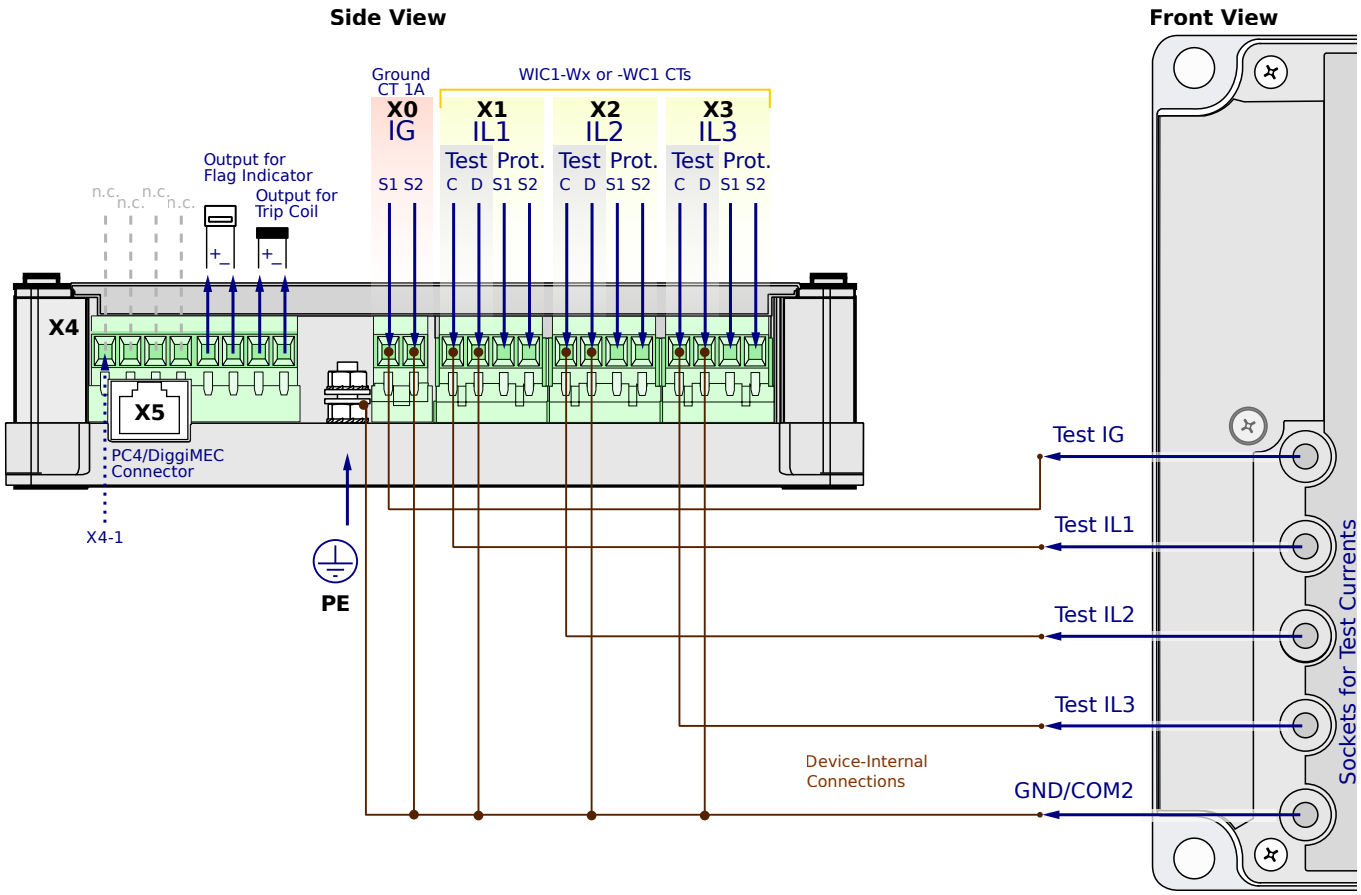


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1AA0

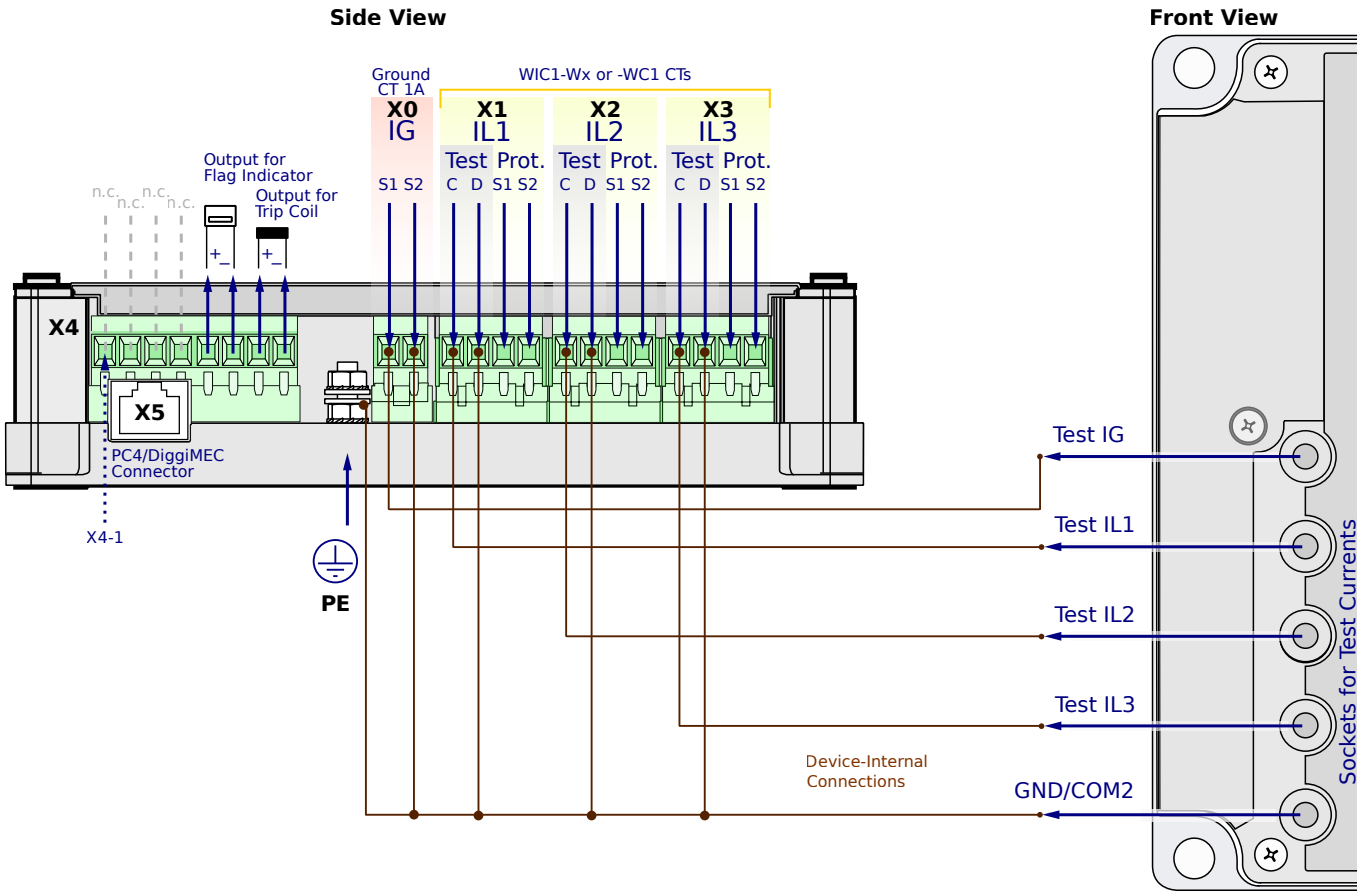


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1AAH

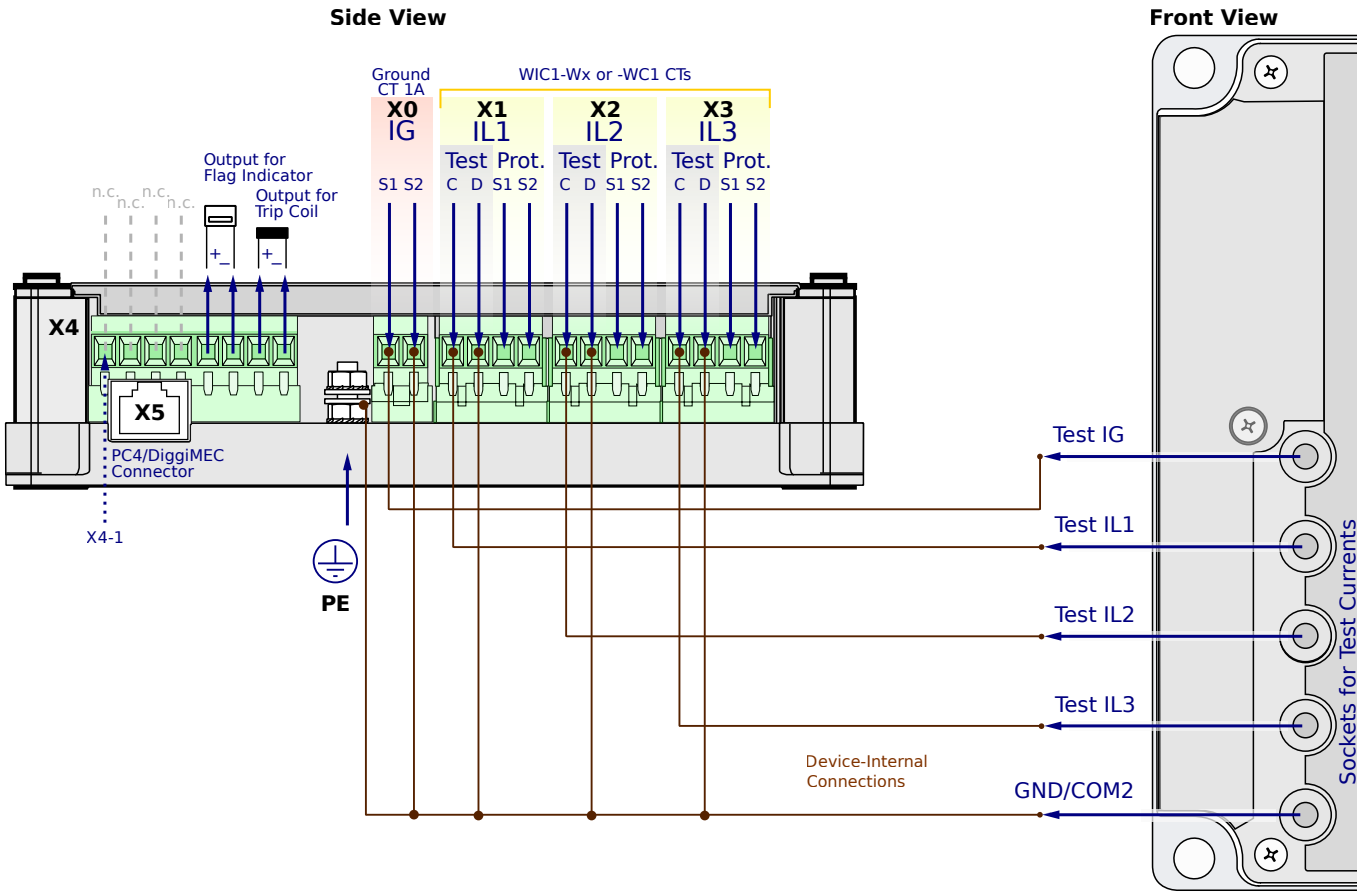


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1PA0

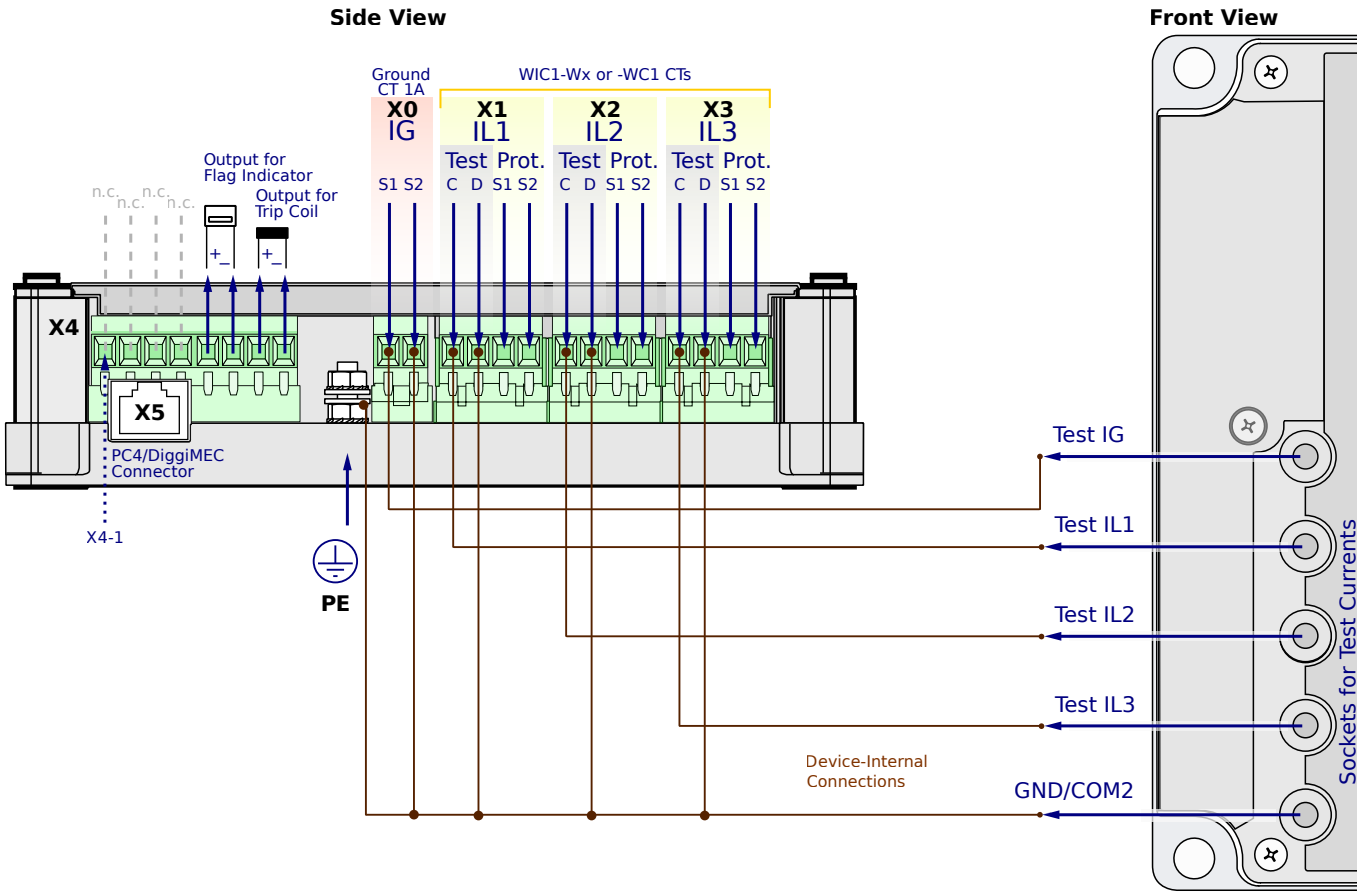


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN1PAH

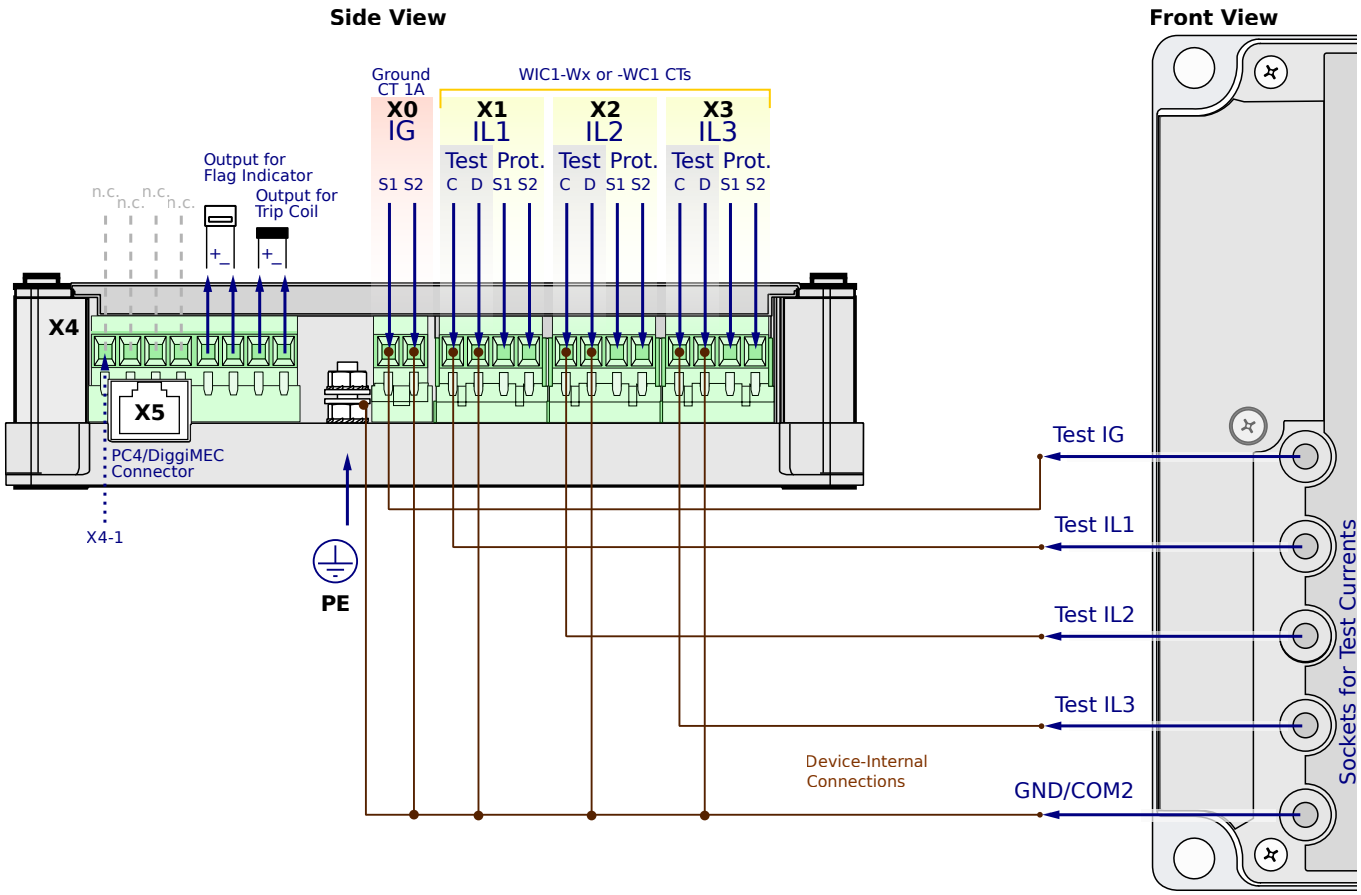


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2SA0

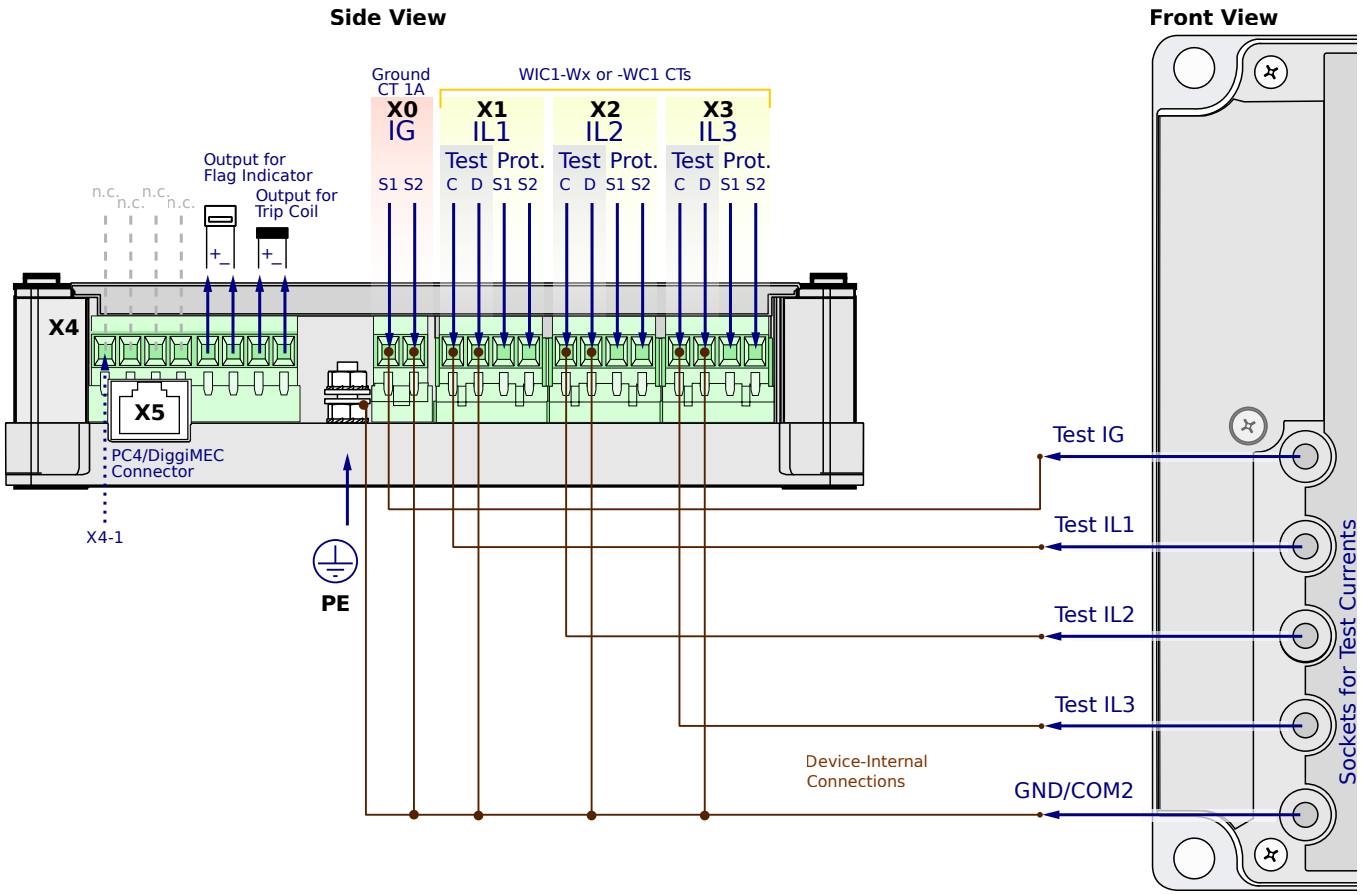


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2SAH

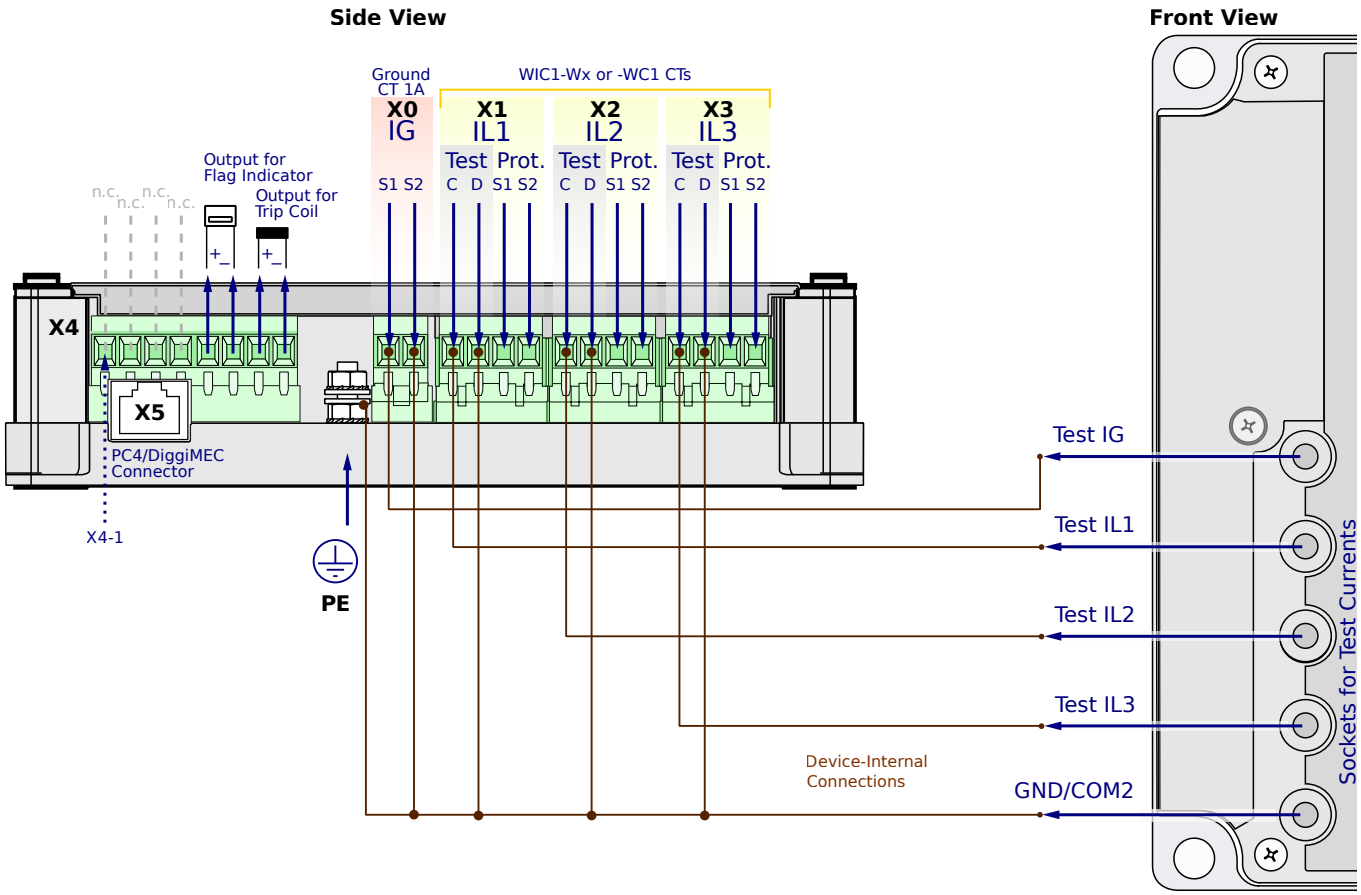


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2AA0

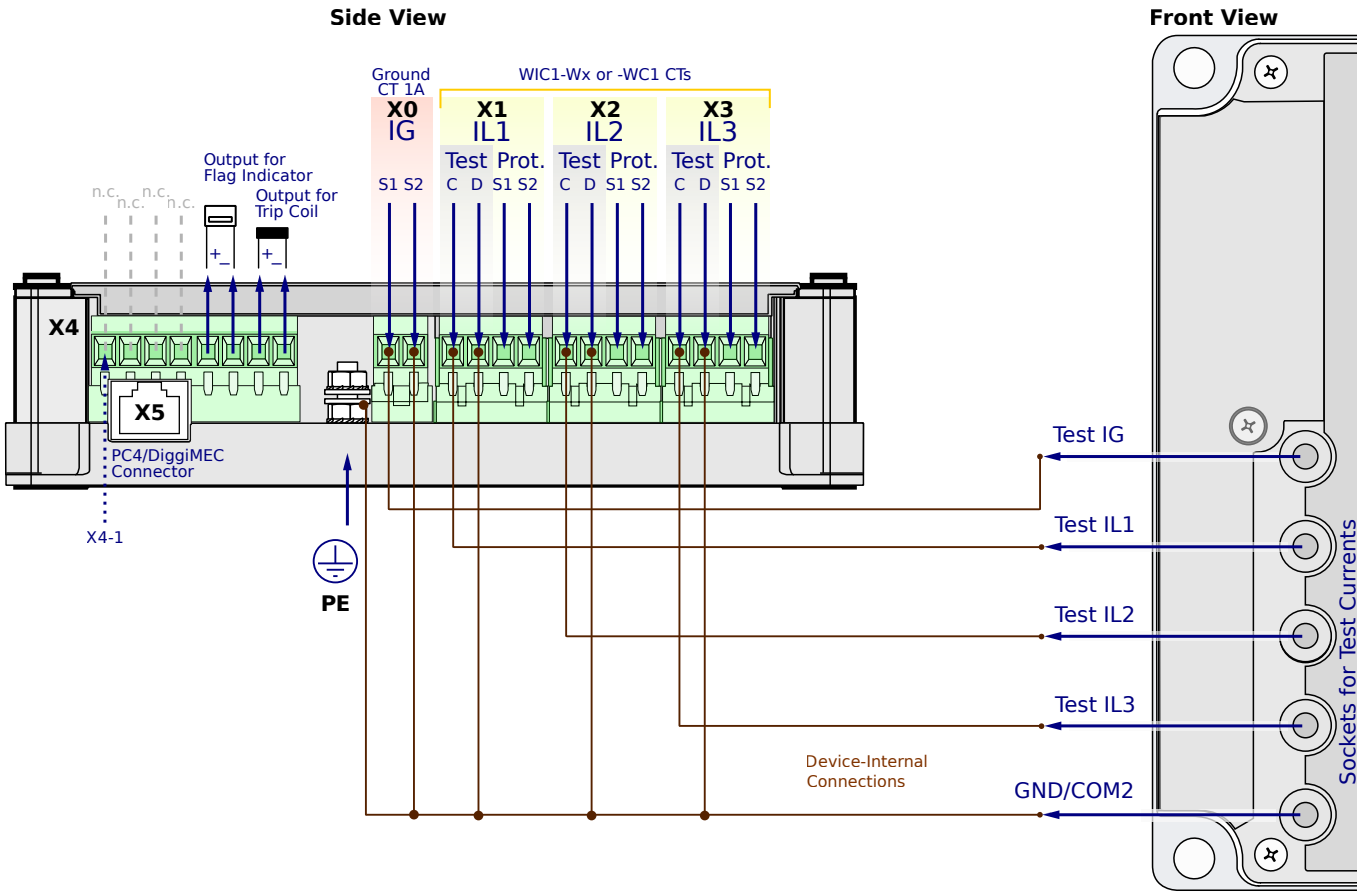


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2AAH

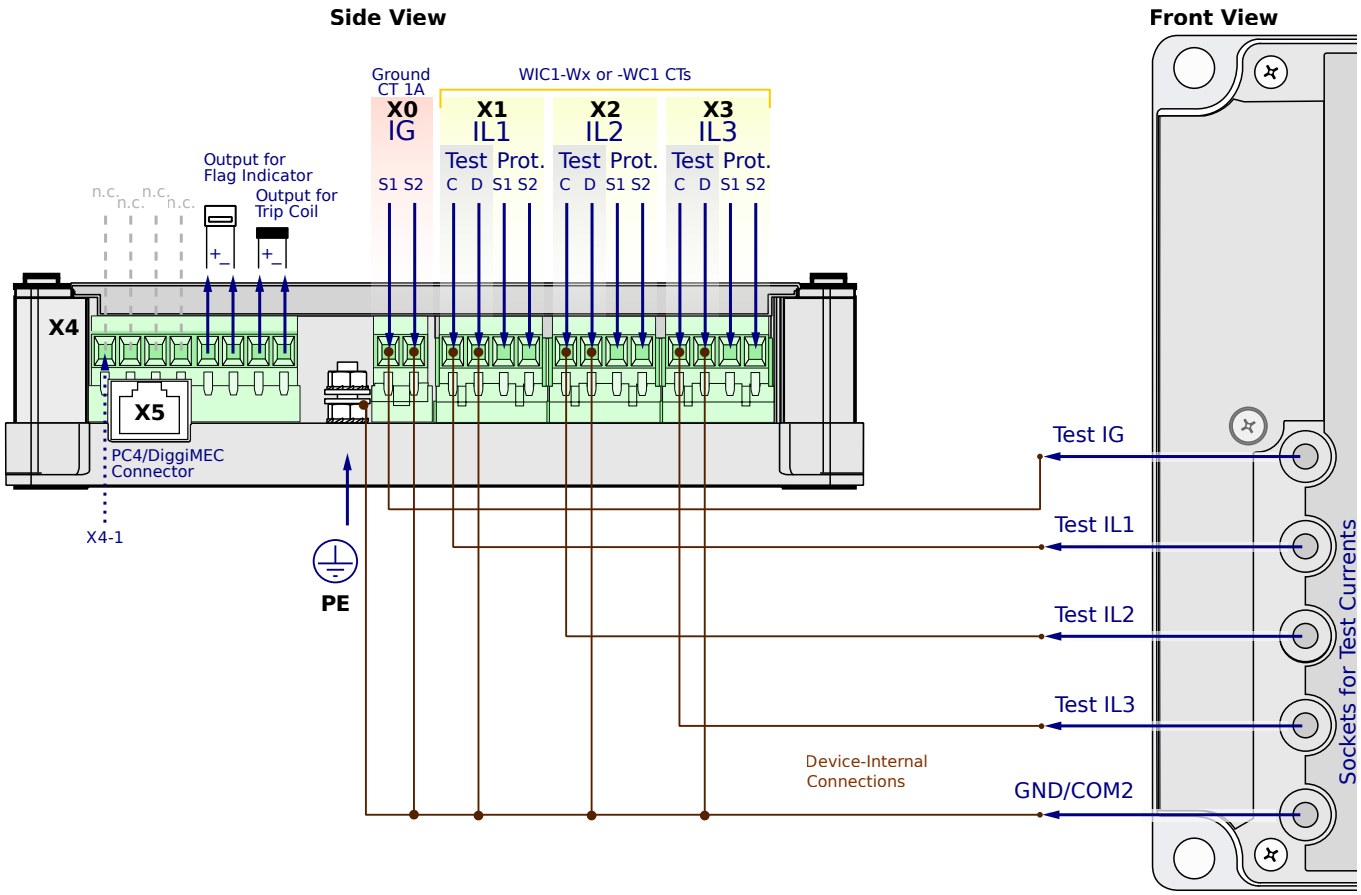


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2PA0

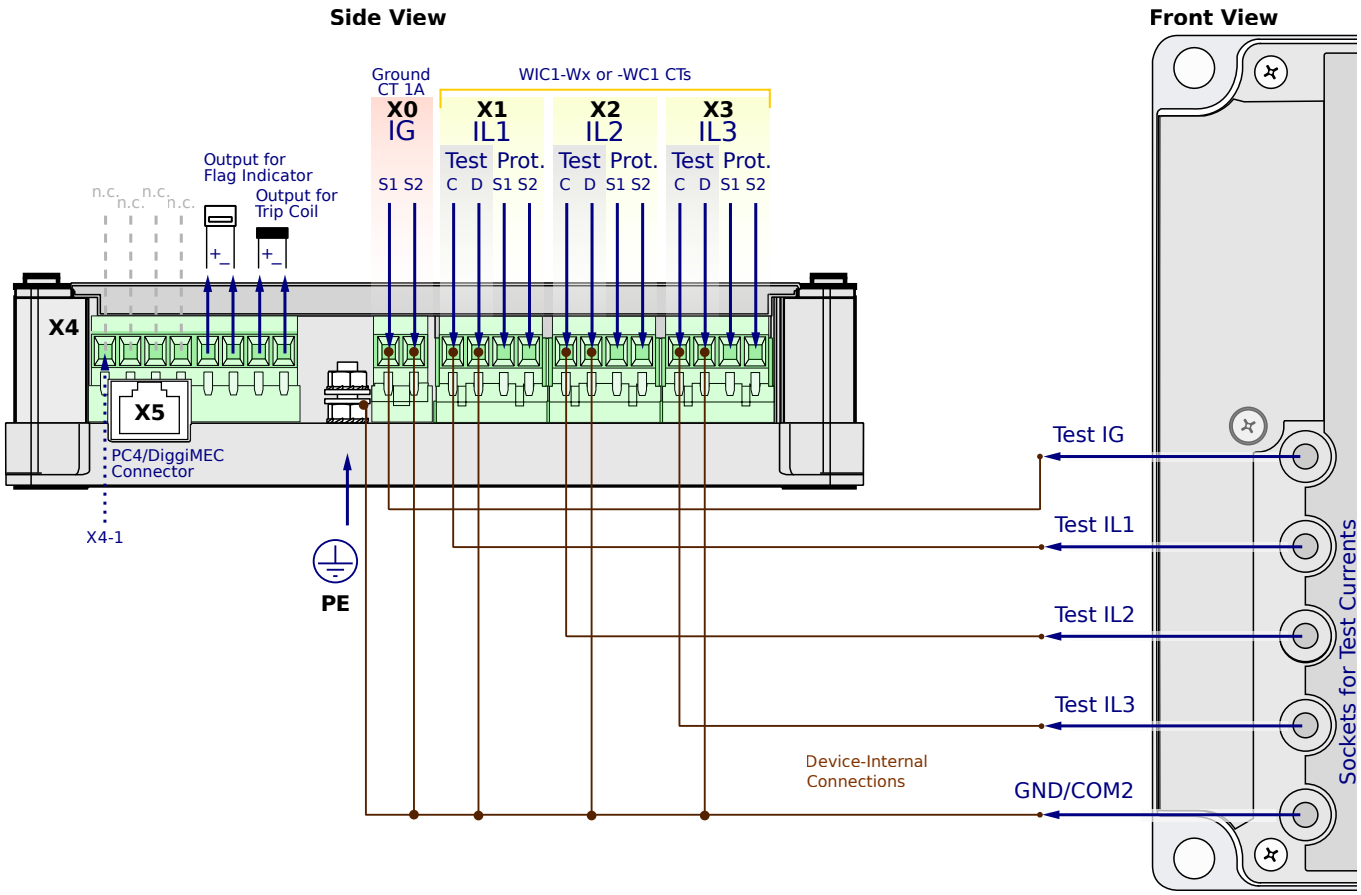


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NN2PAH

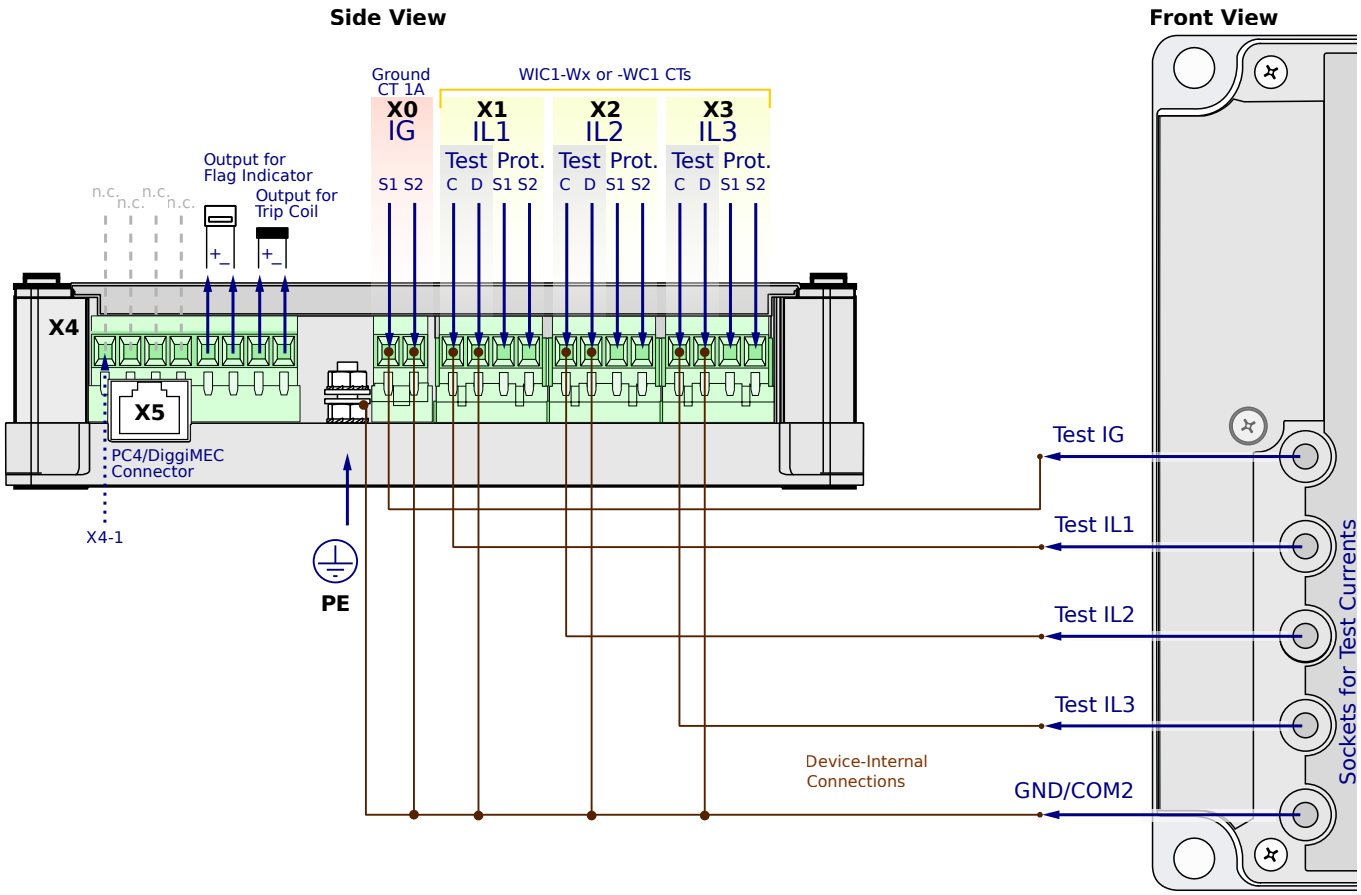


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0SA0

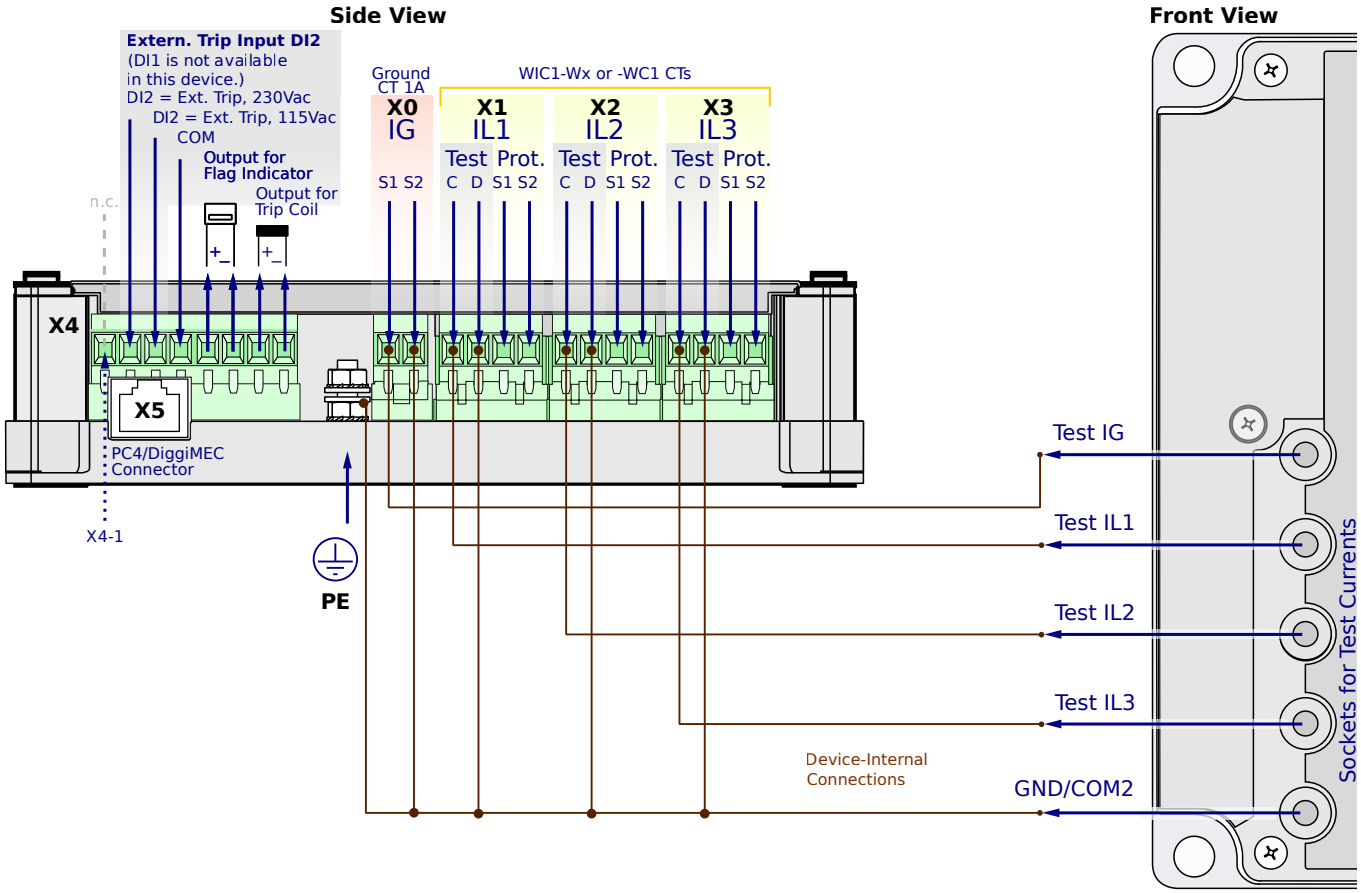


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0SAH

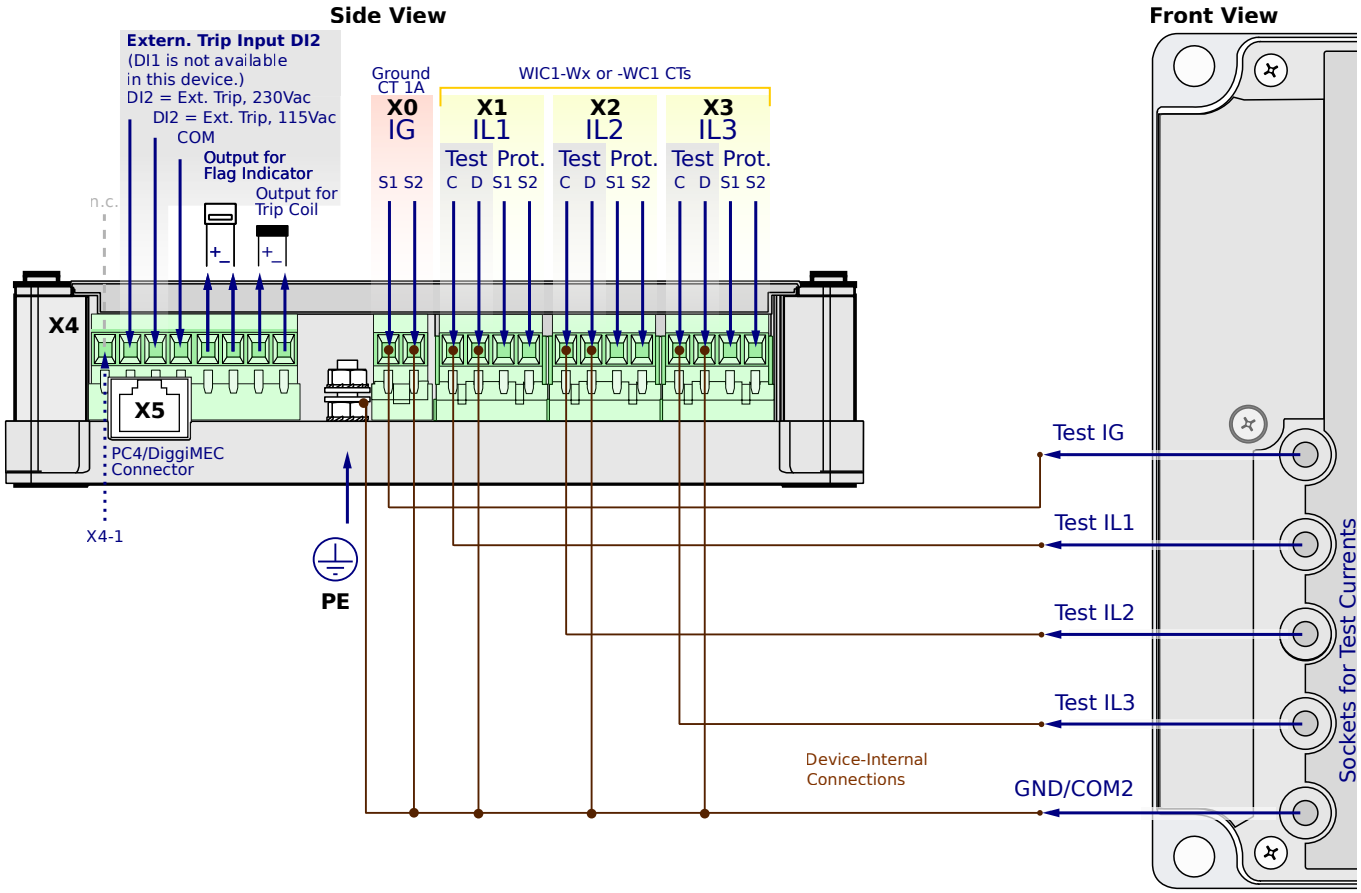


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0AA0

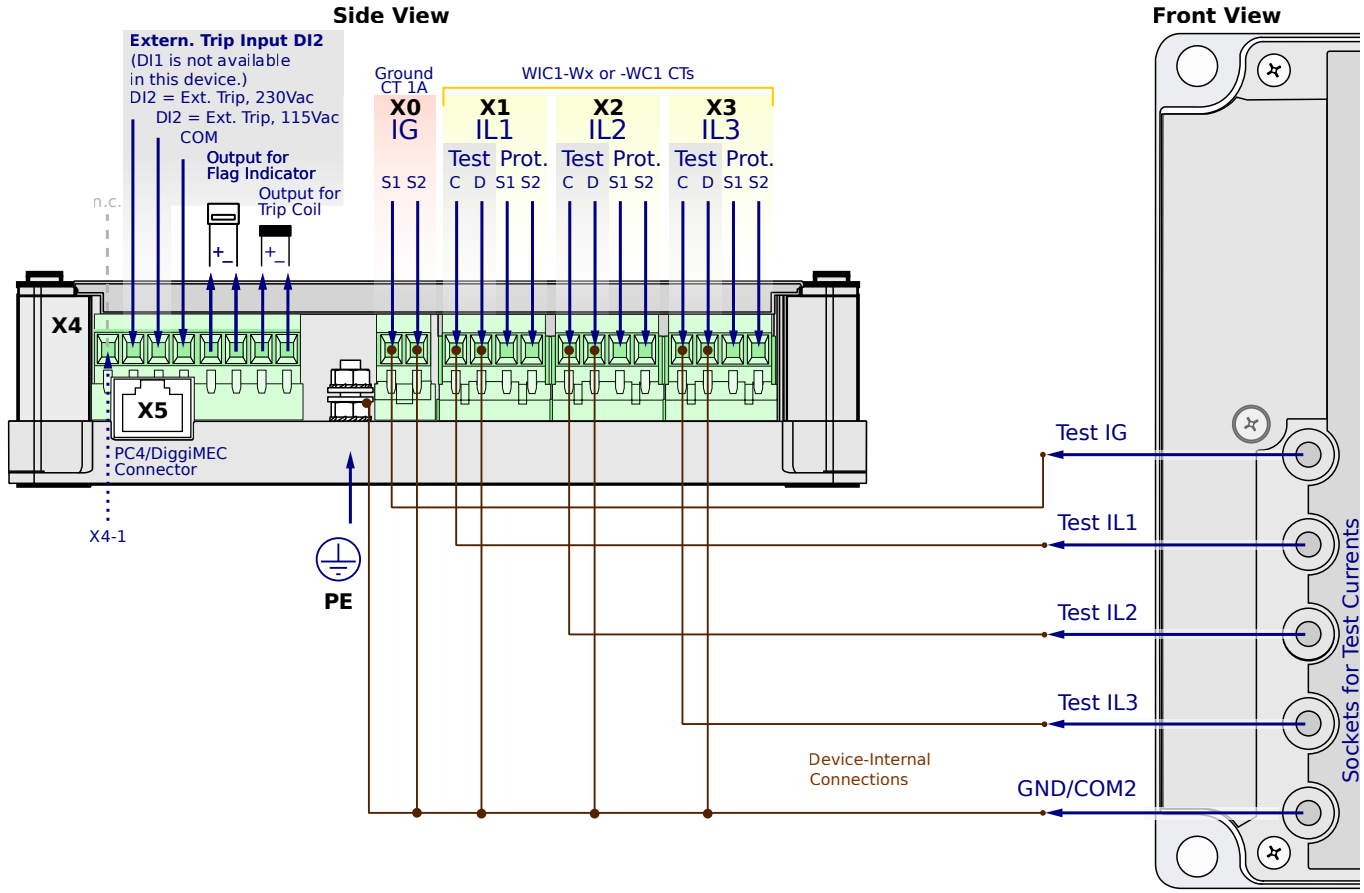


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0AAH

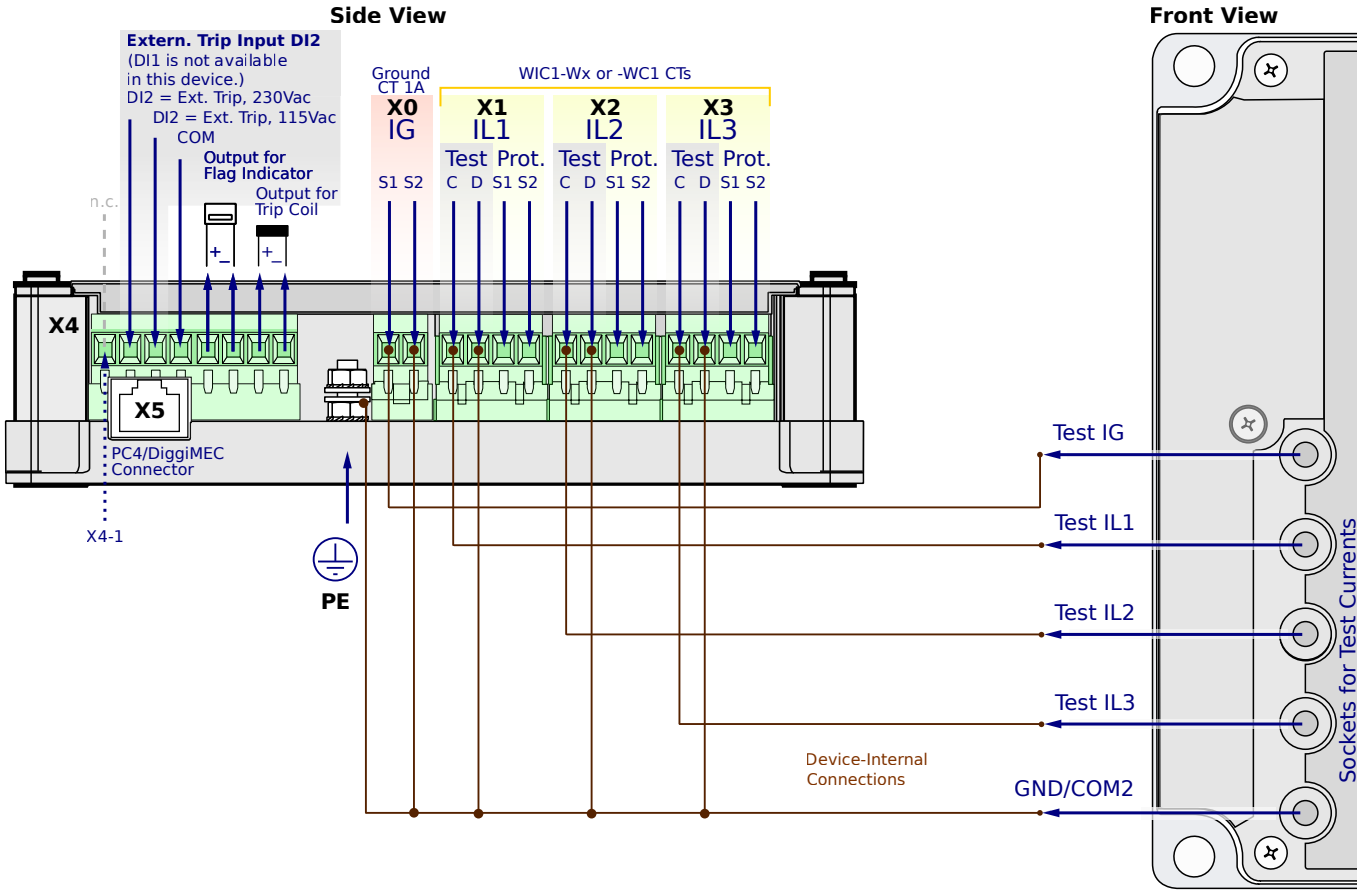


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0PA0

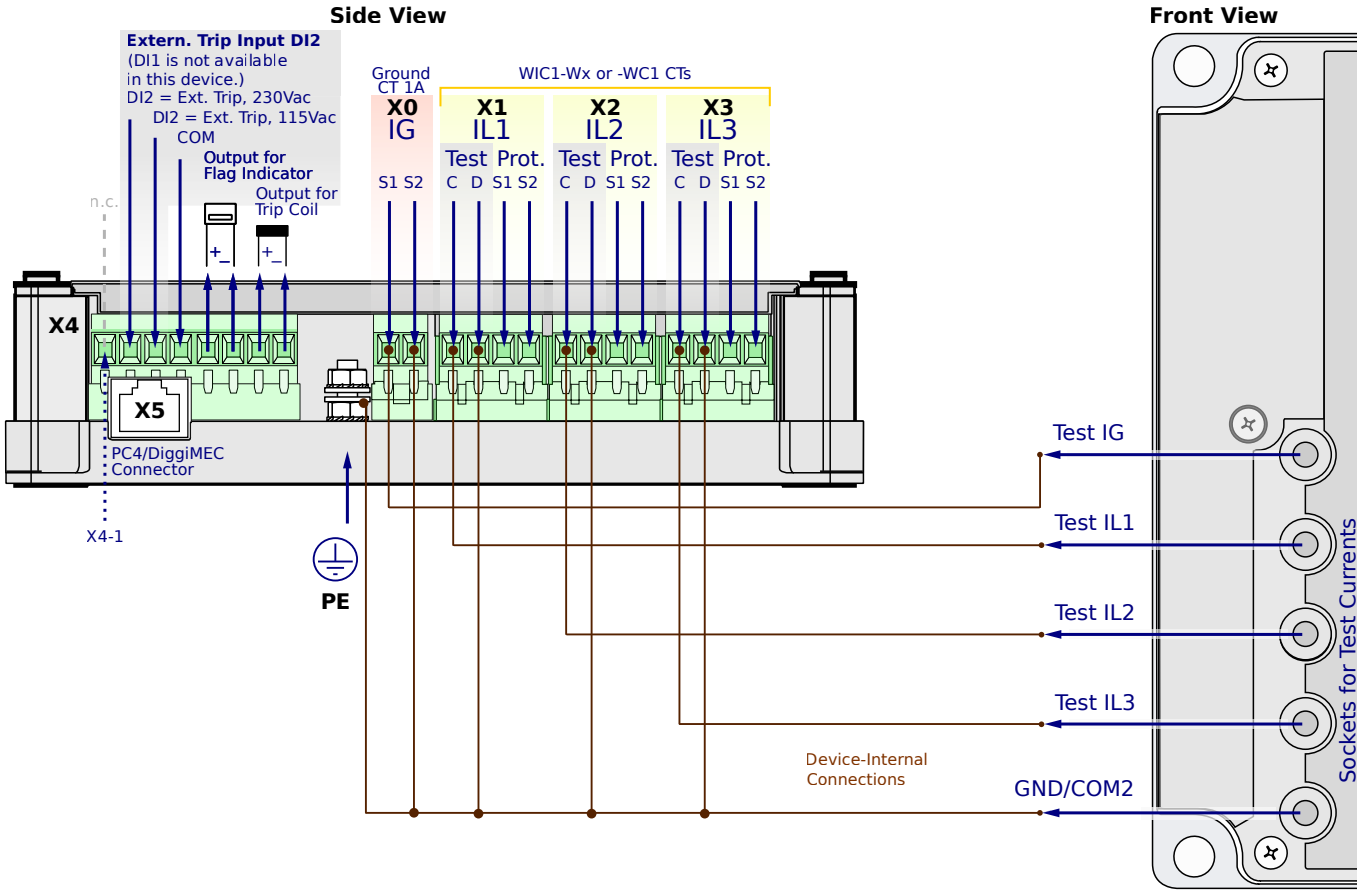


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF0PAH

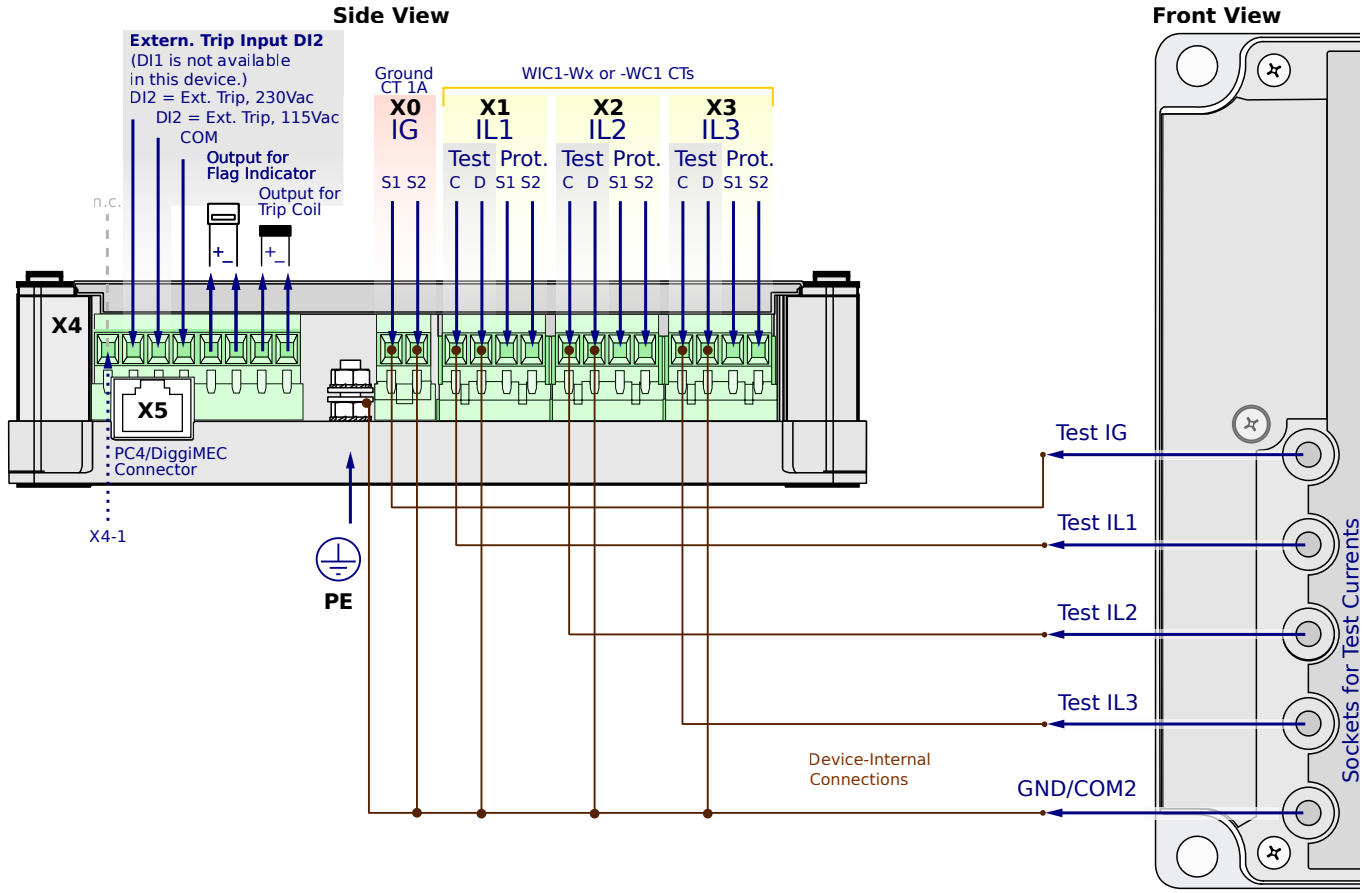


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1SA0

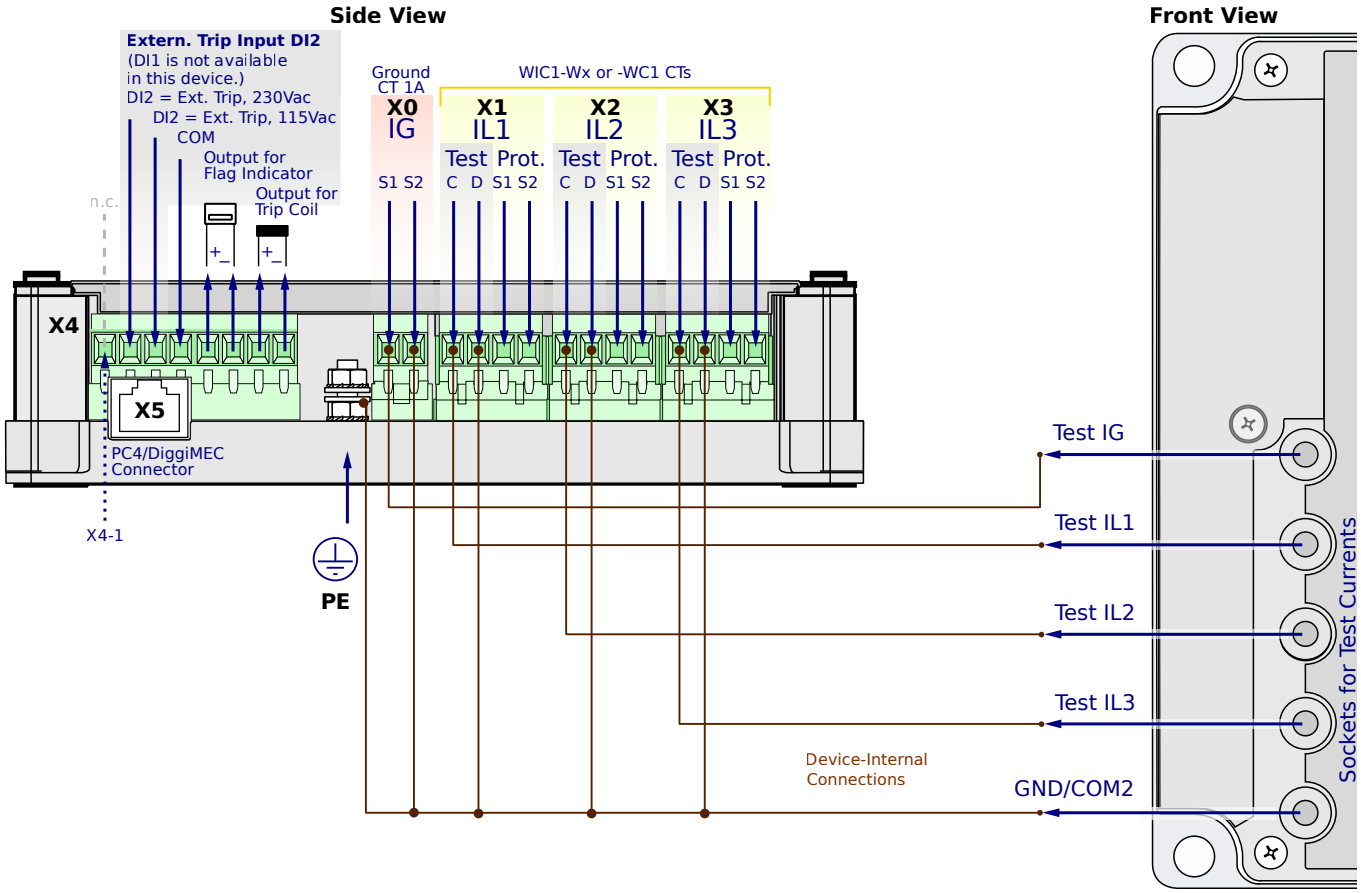


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1SAH

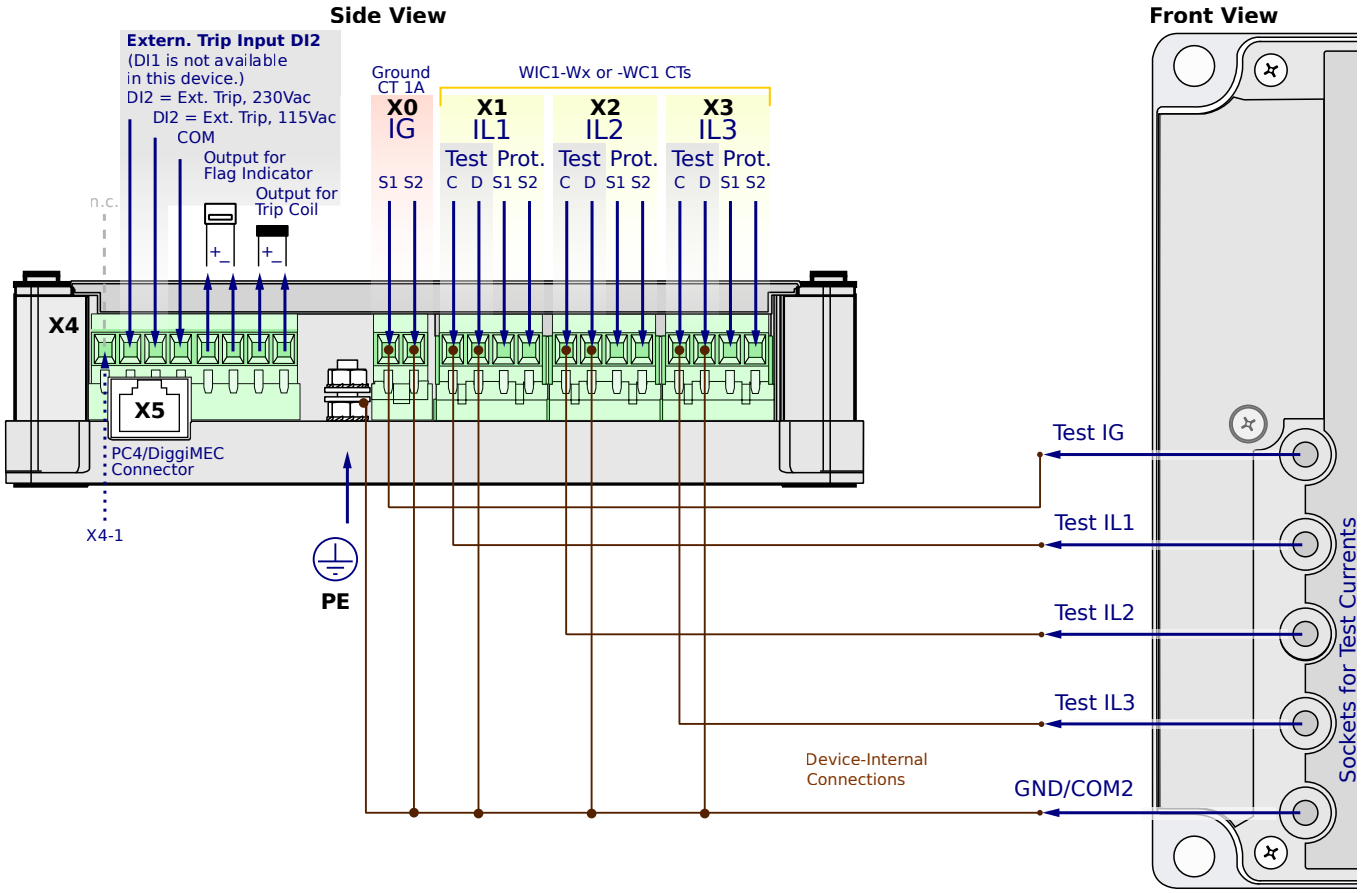


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1AA0

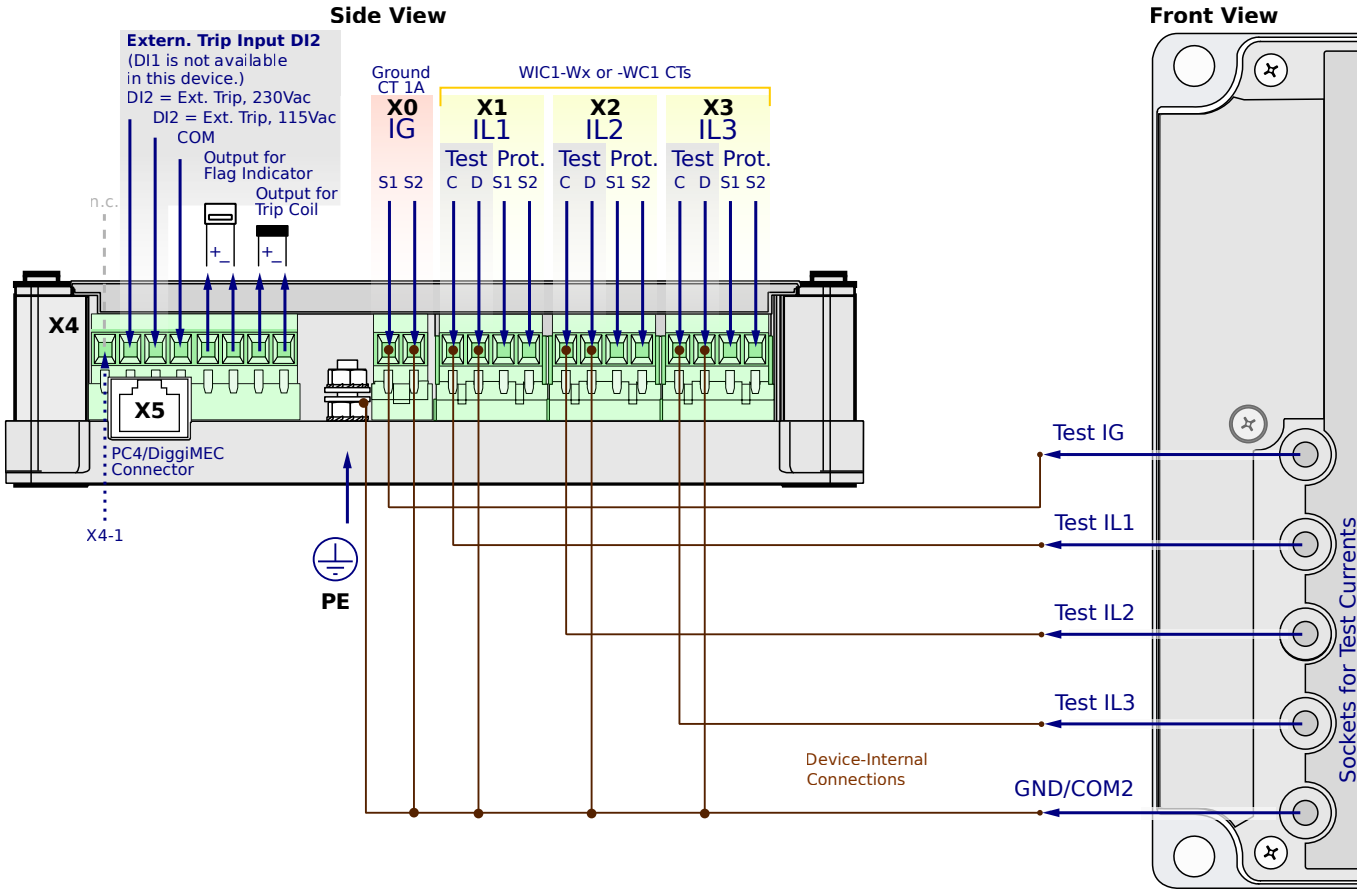


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1AAH

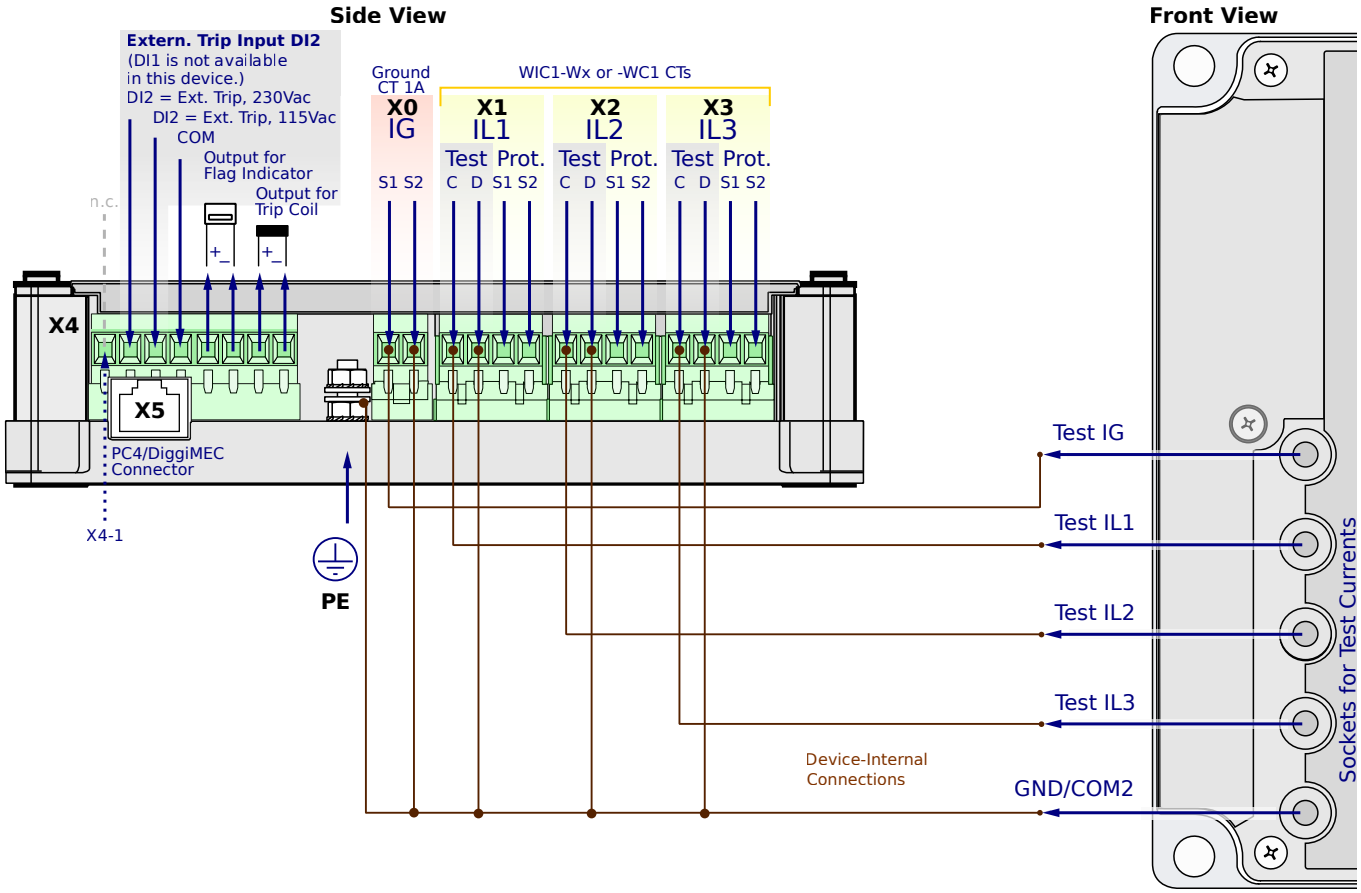


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1PA0

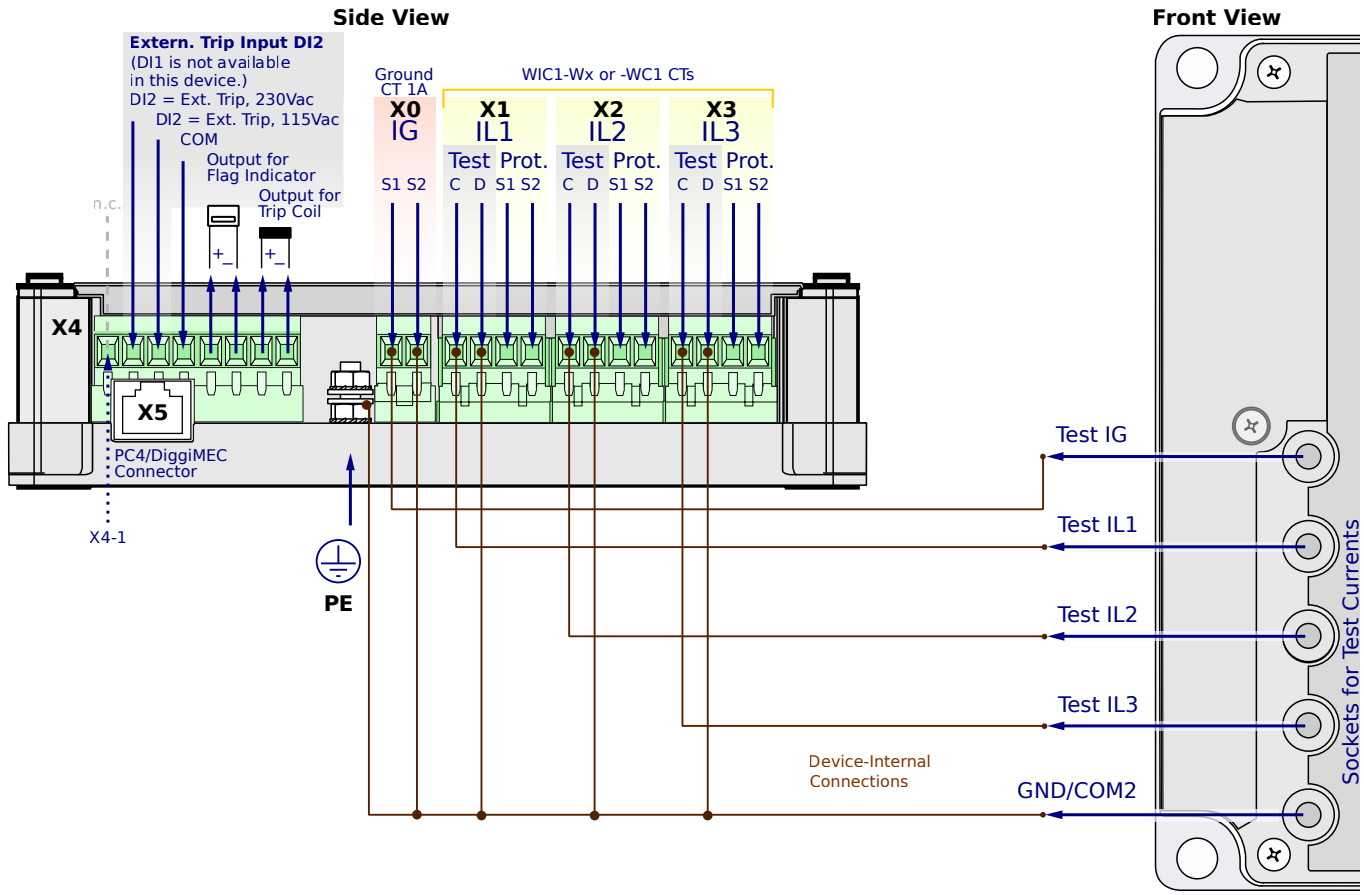


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF1PAH

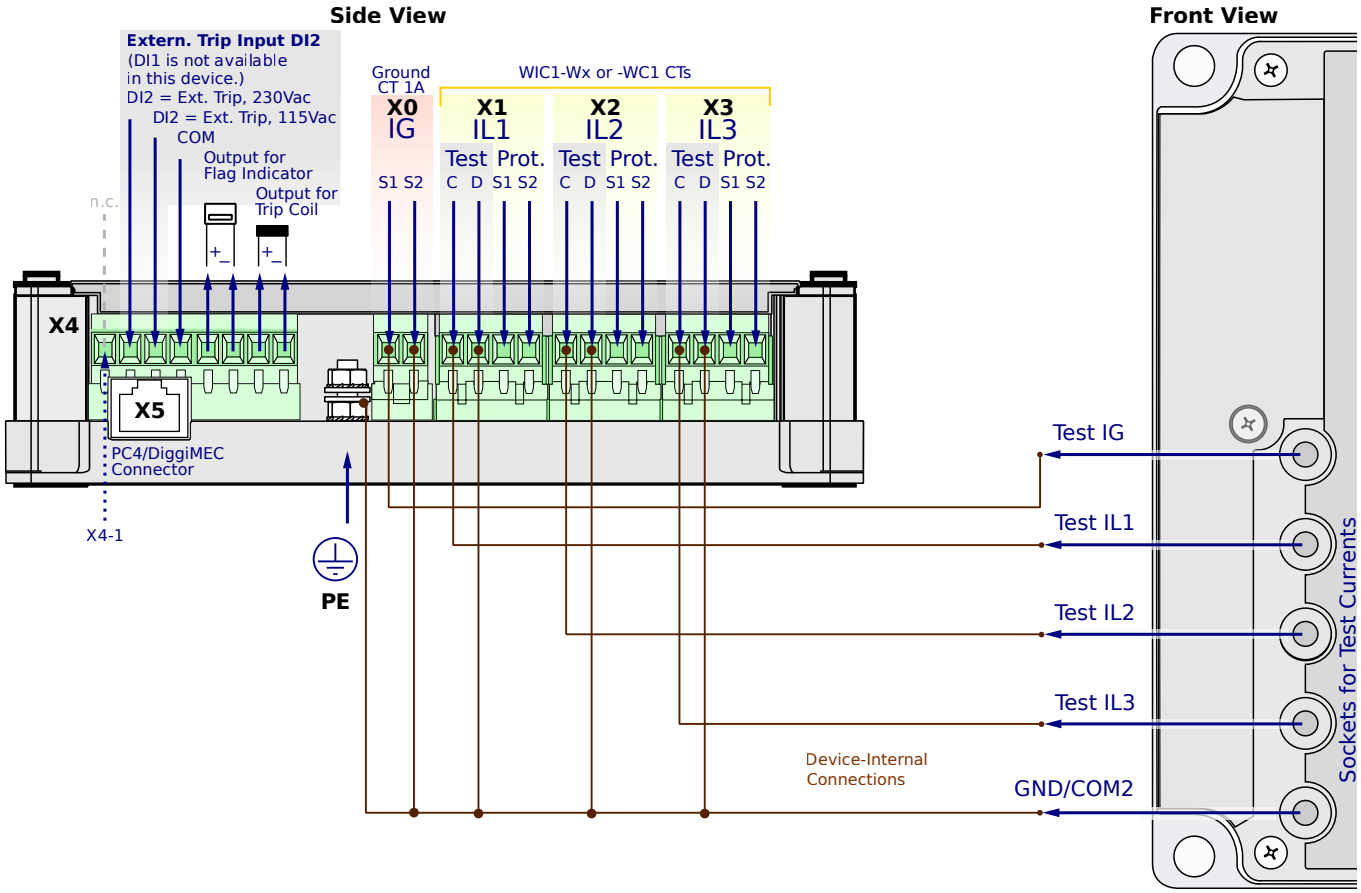


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2SA0

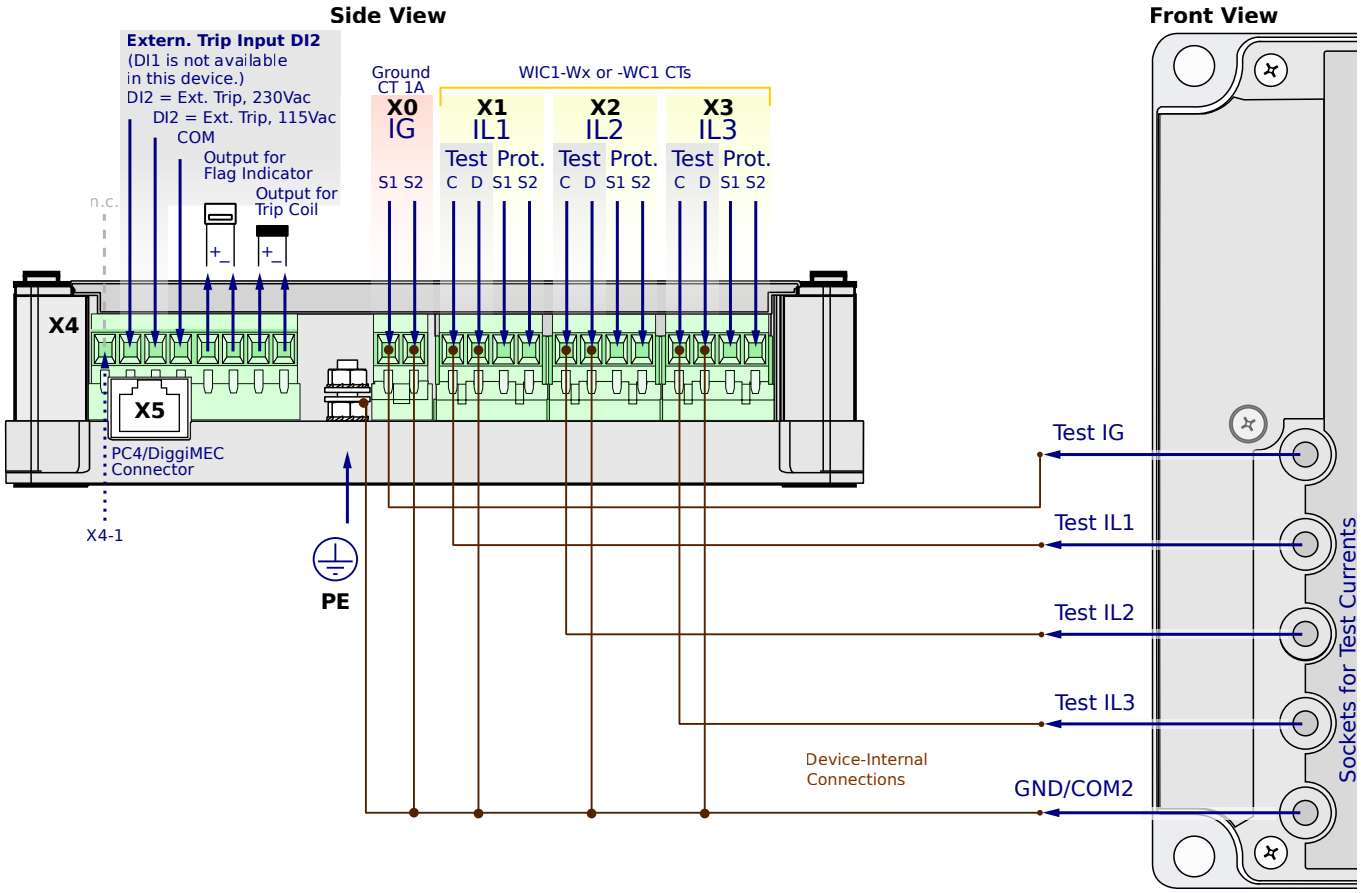


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2SAH

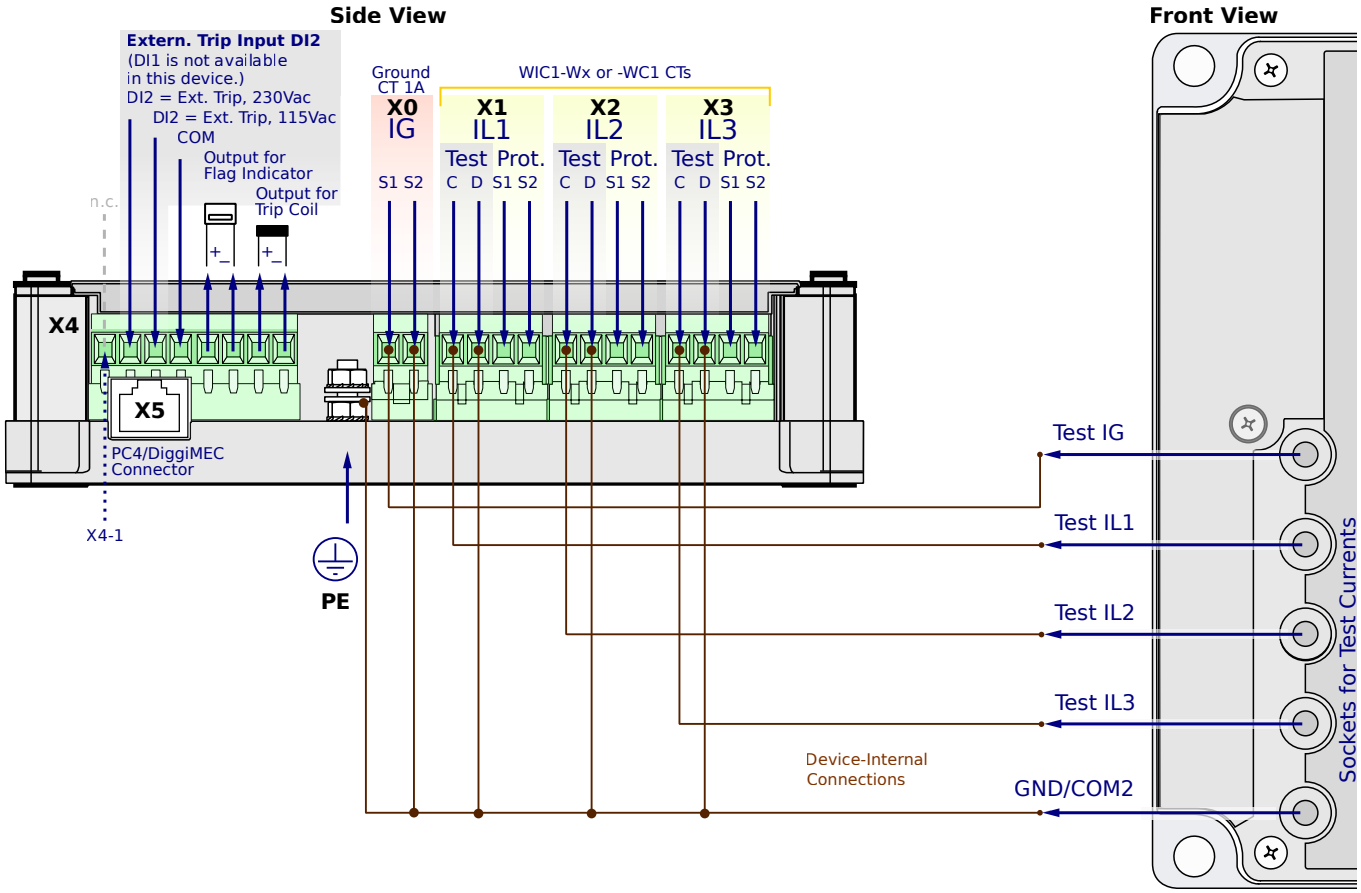


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2AA0

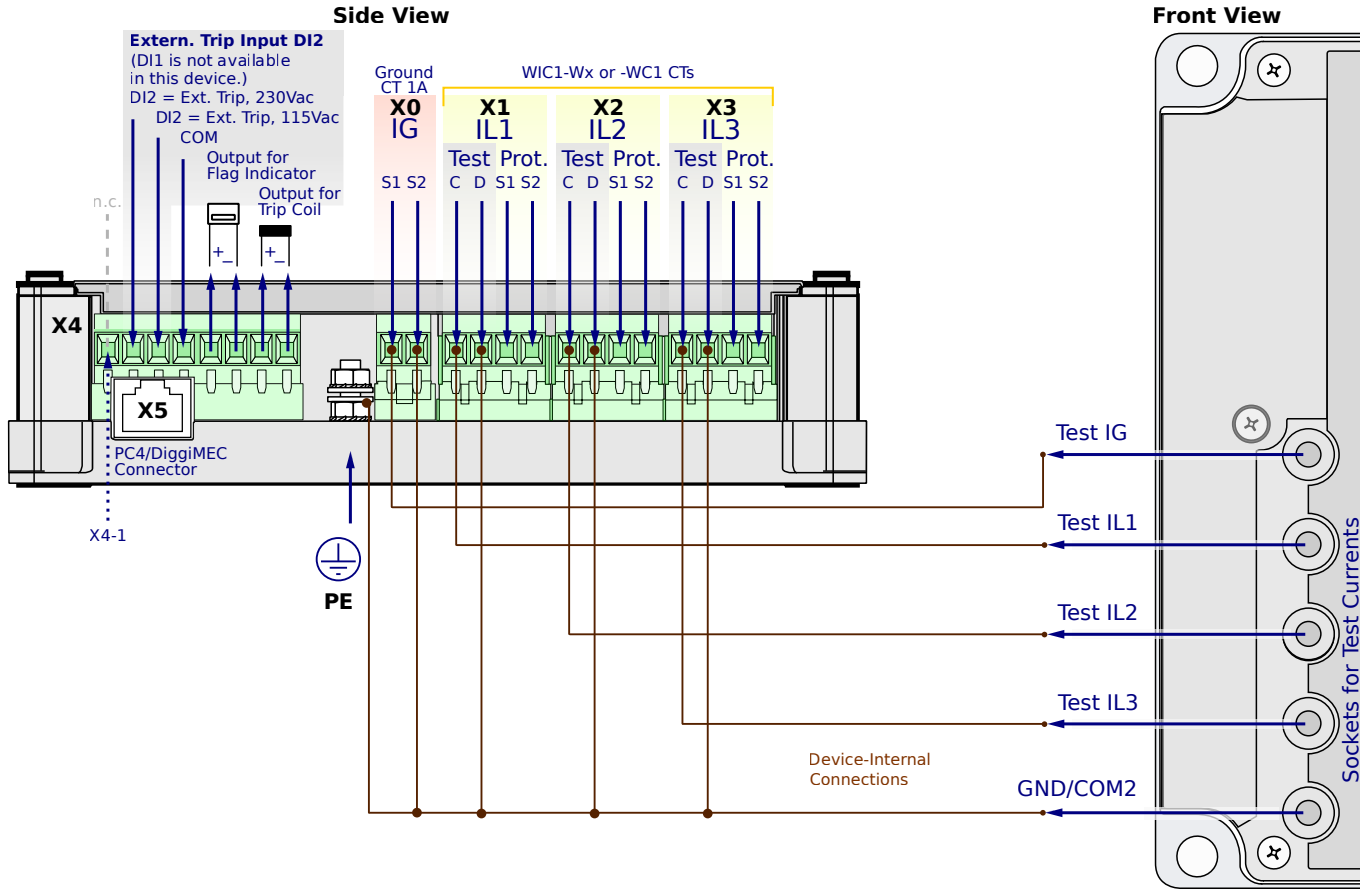


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2AAH

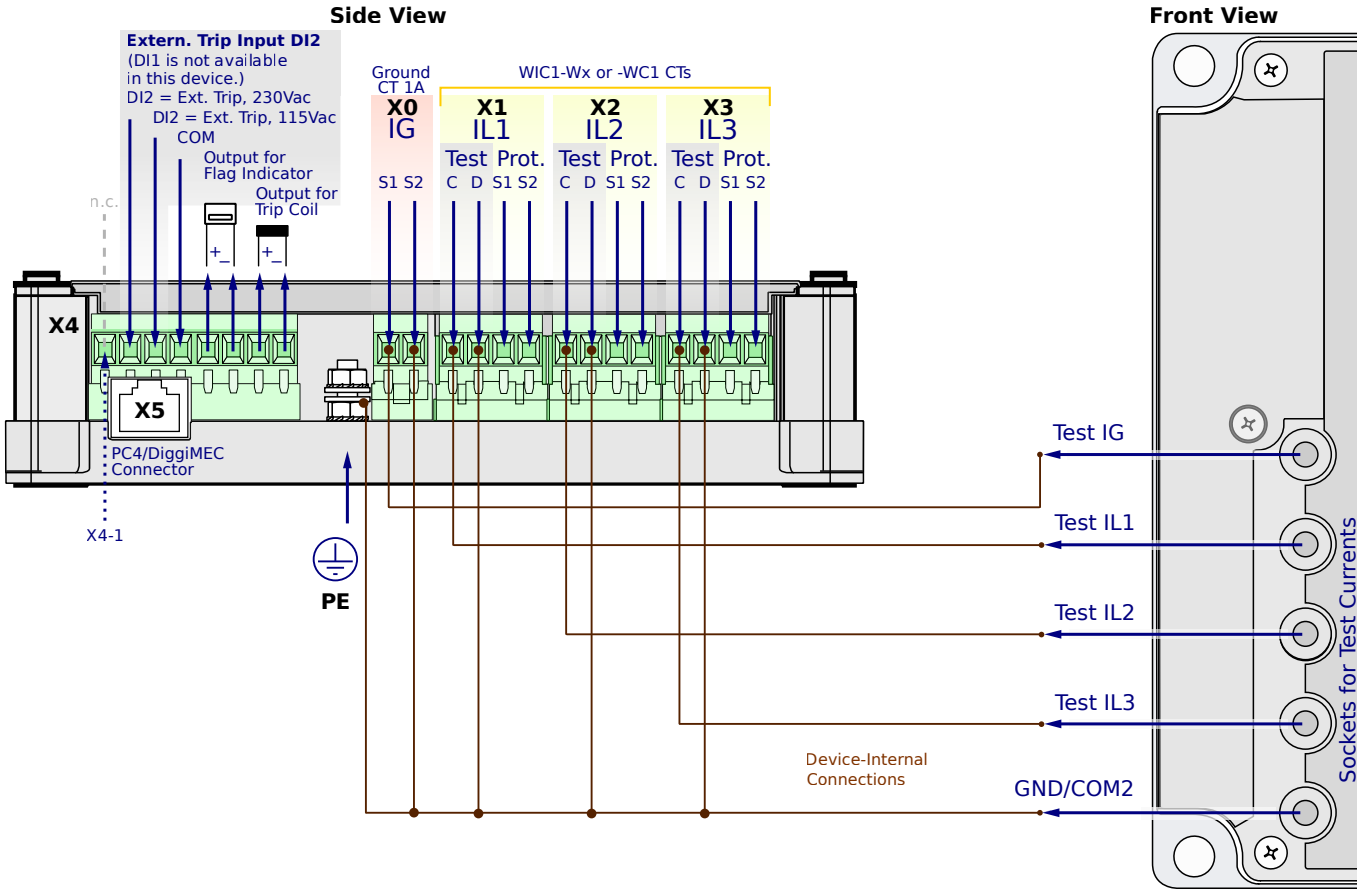


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2PA0

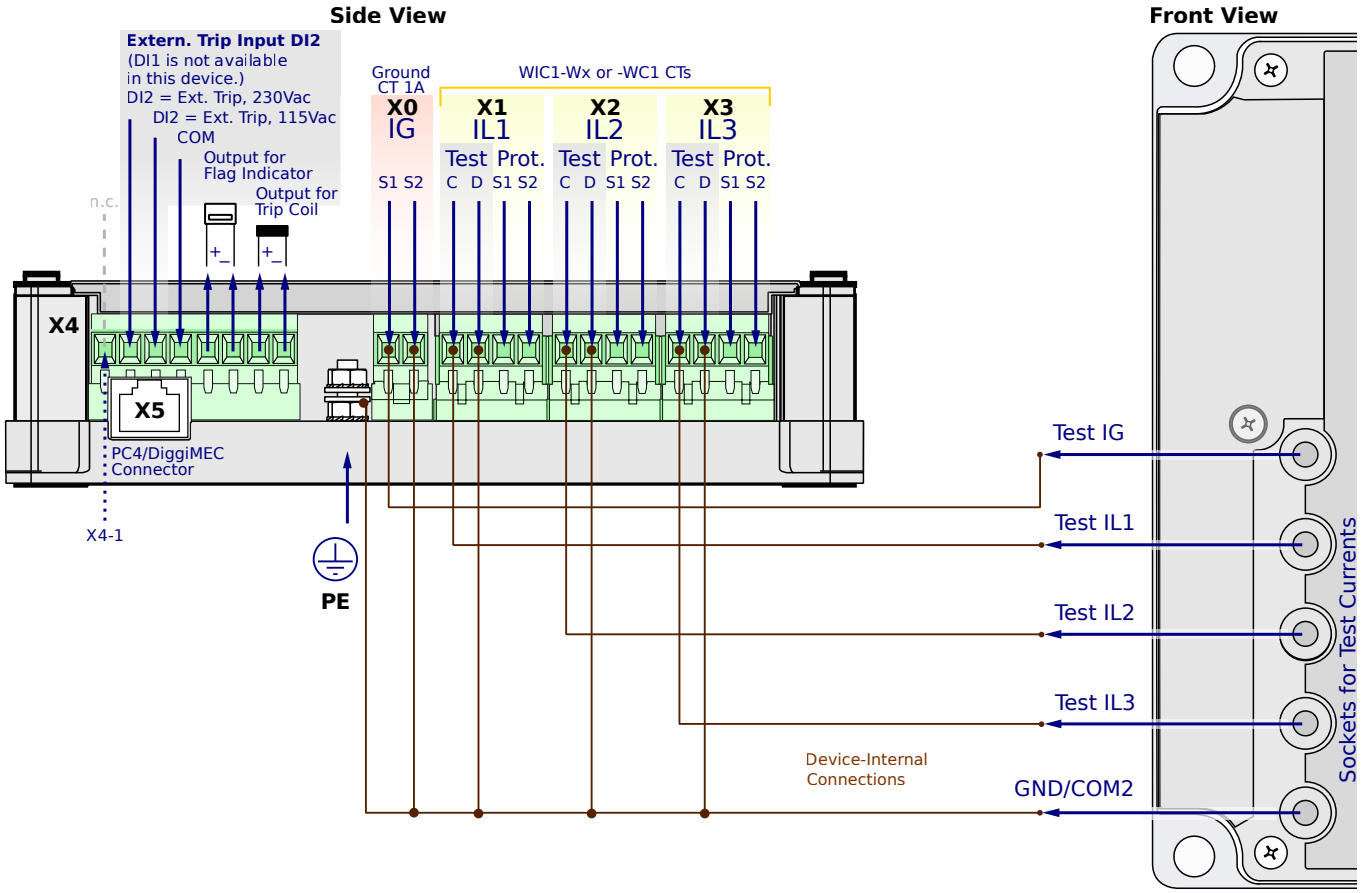


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NF2PAH

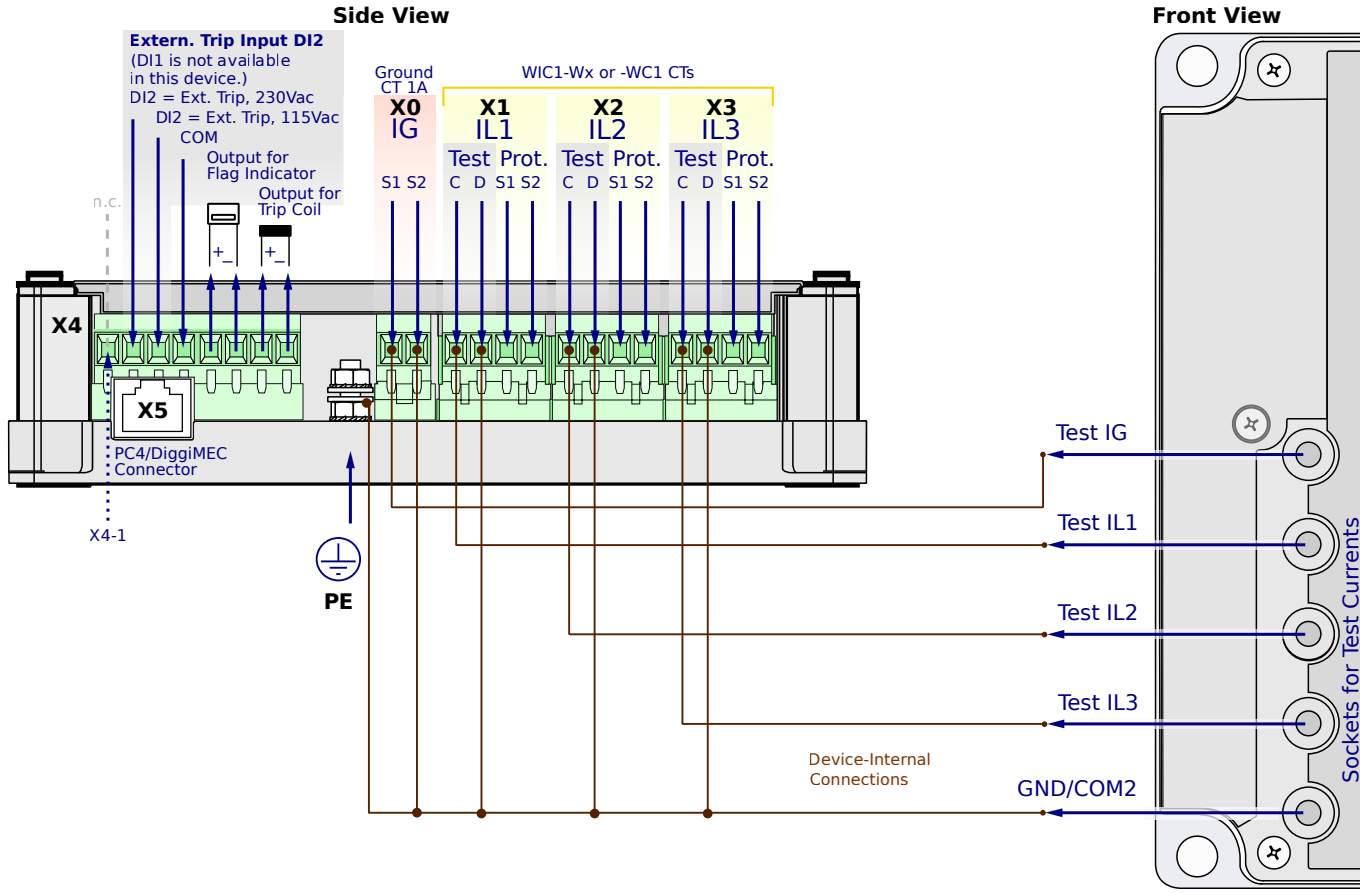


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0SA0

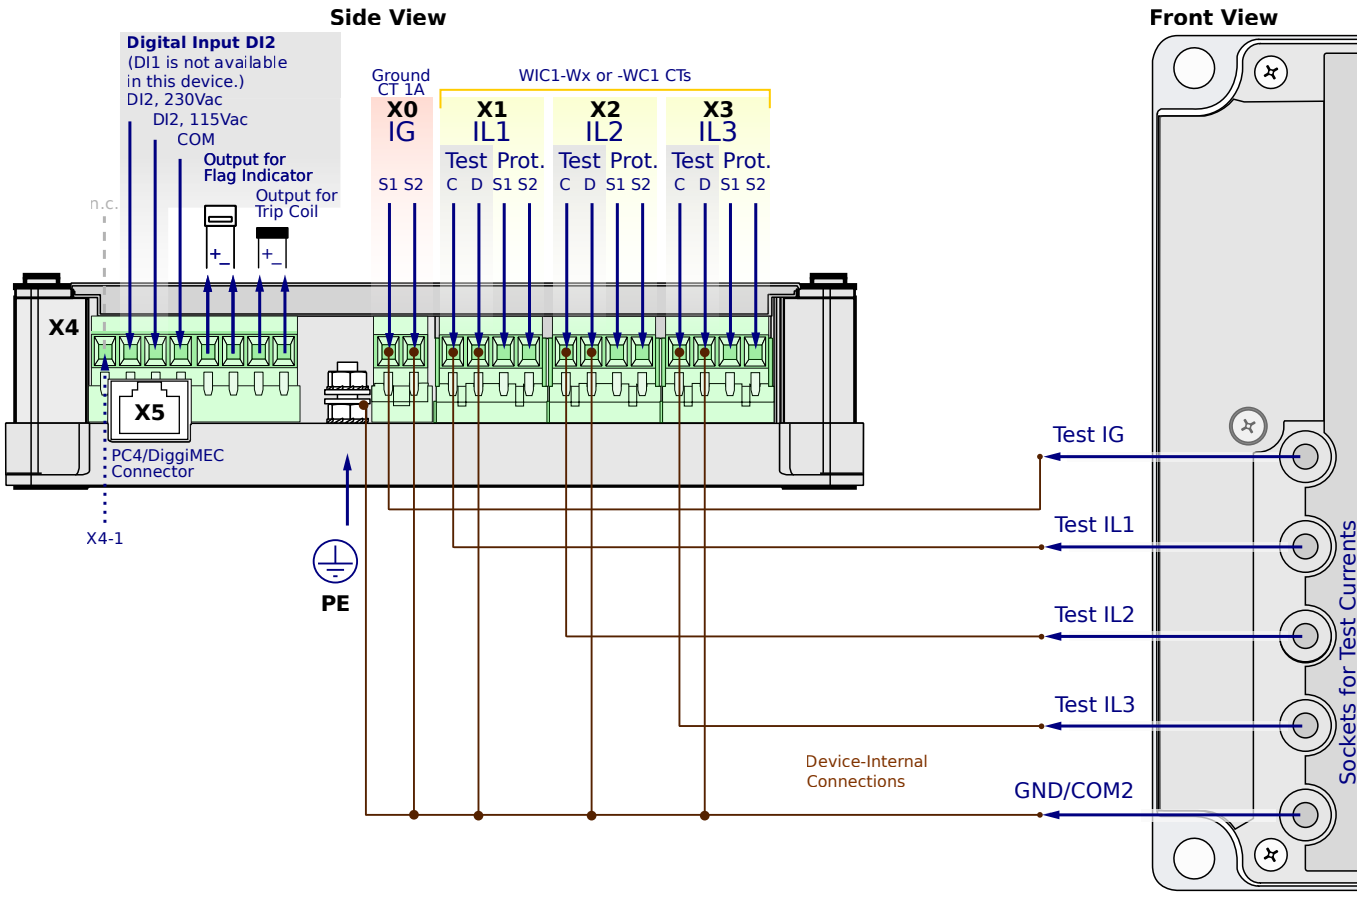


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0SAH

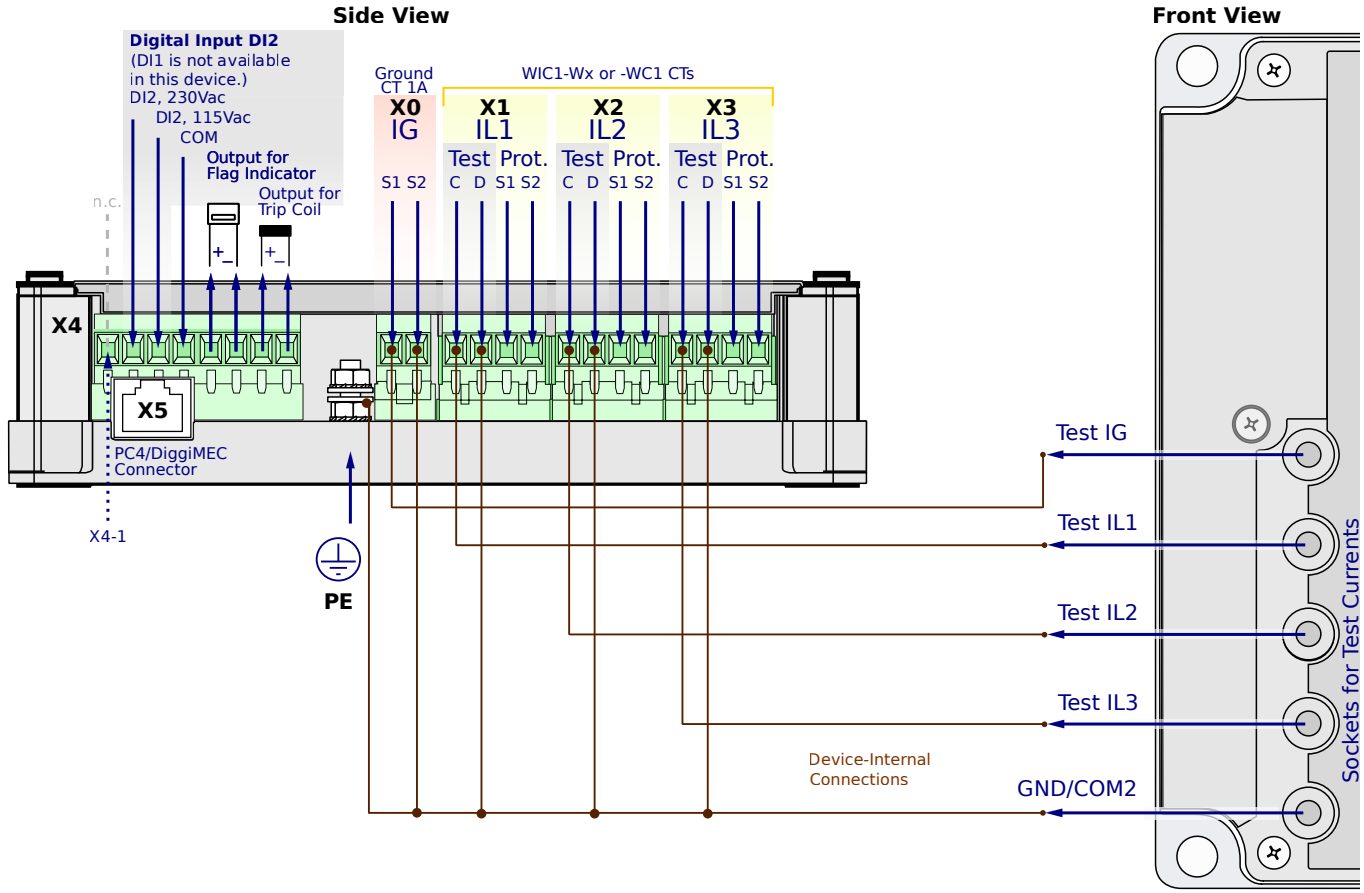


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0AA0

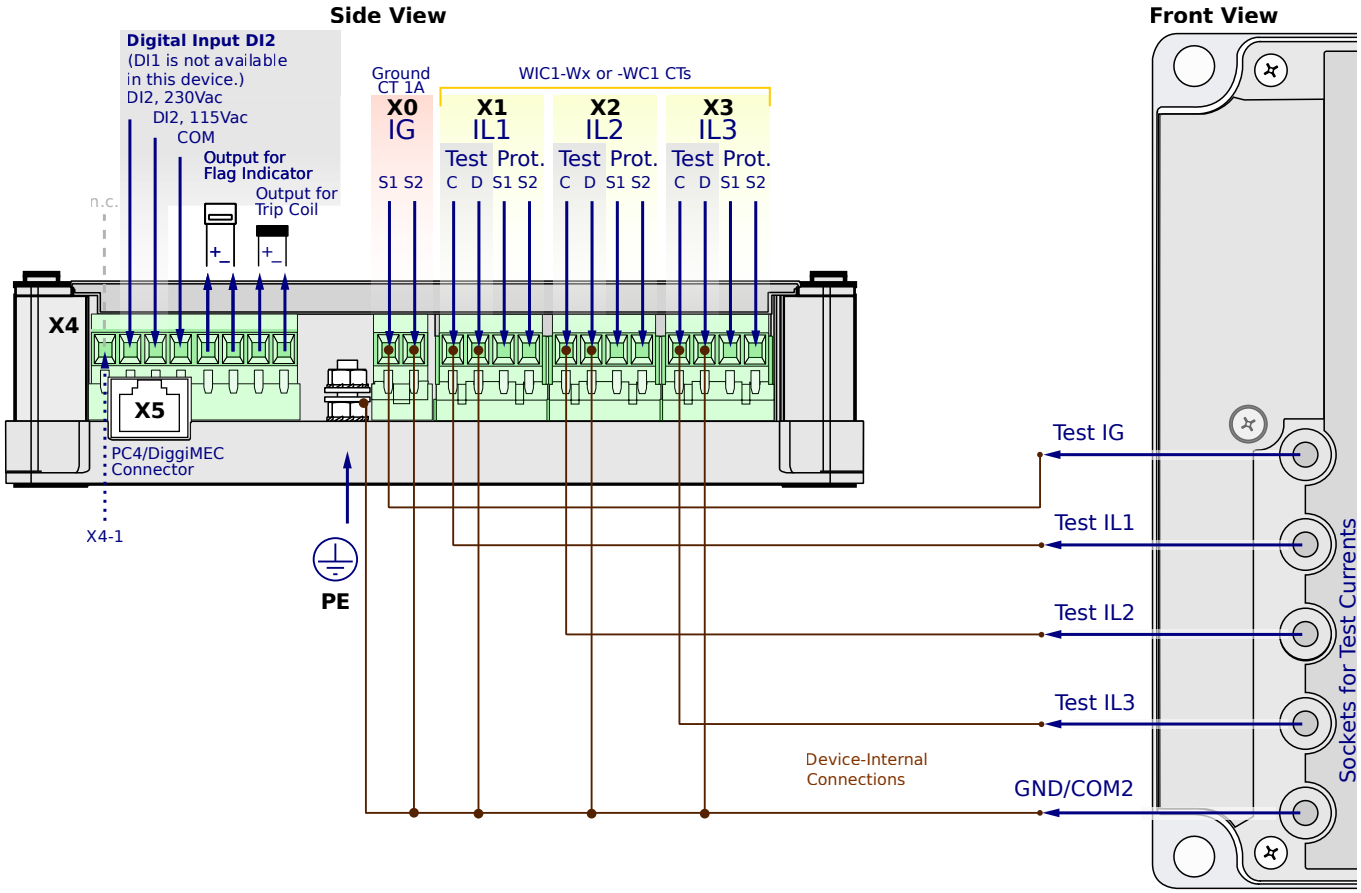


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0AAH

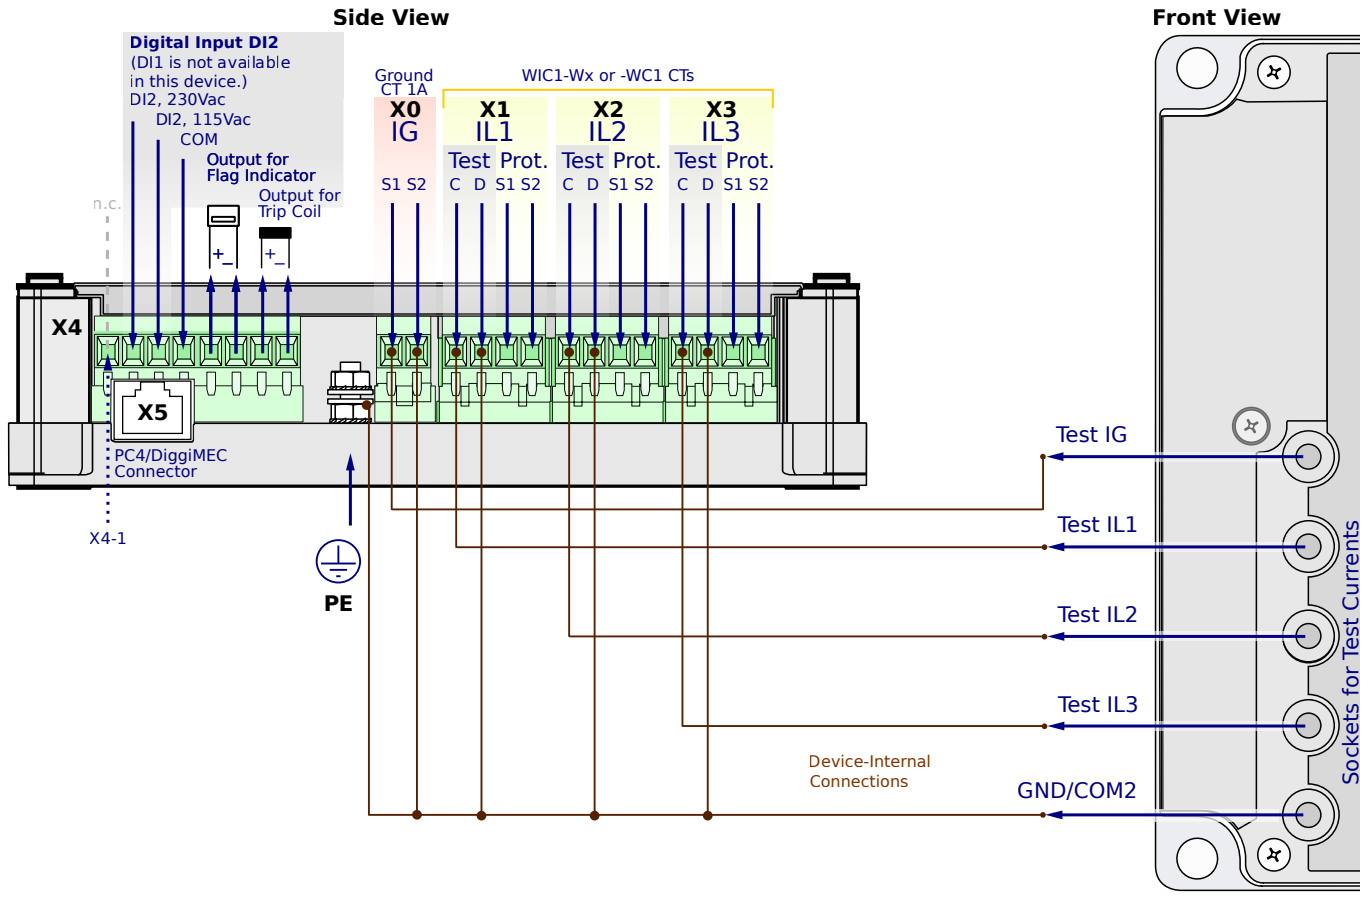


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0PA0

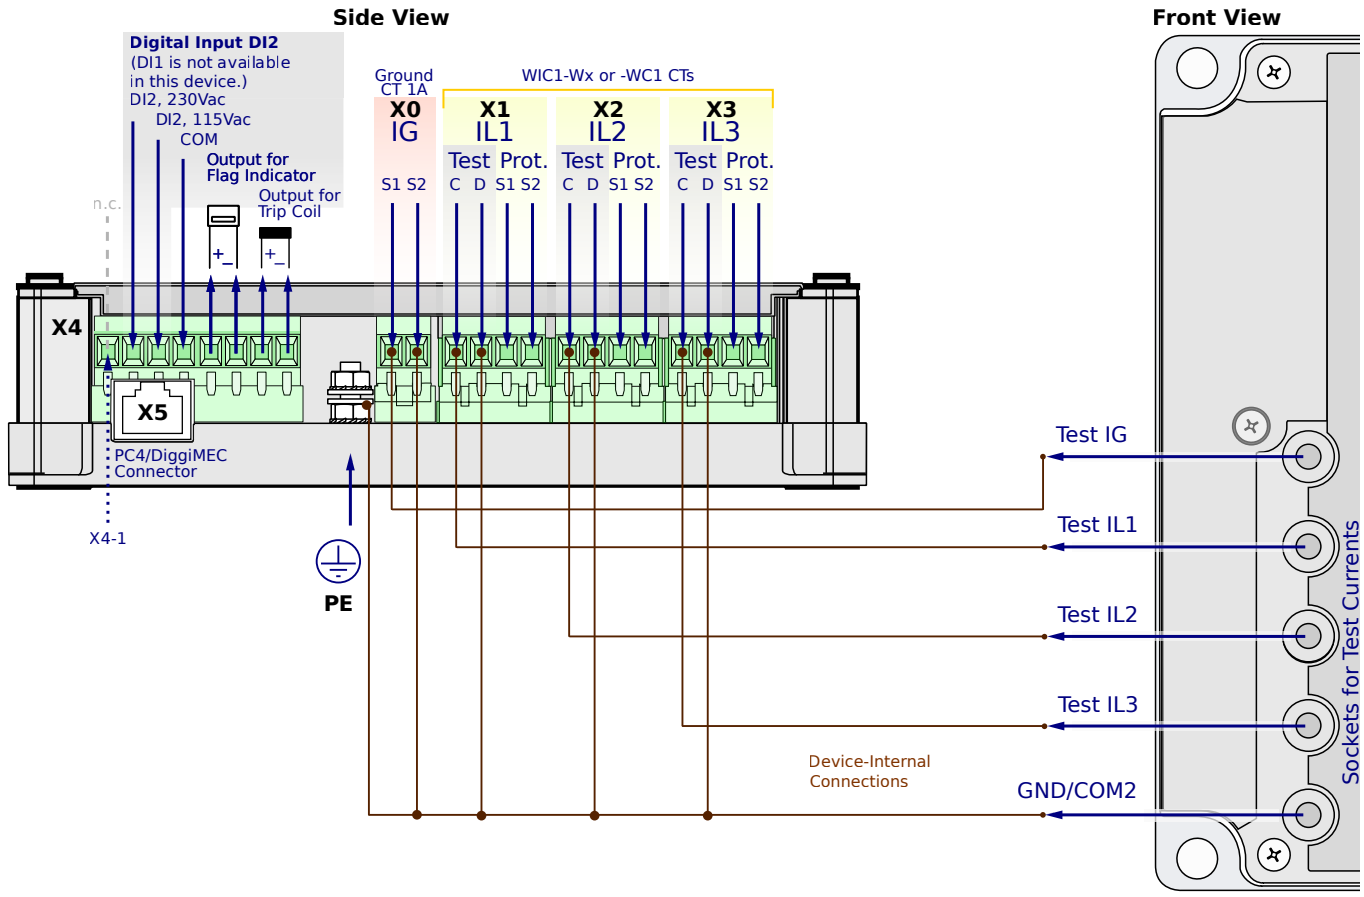


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC0PAH

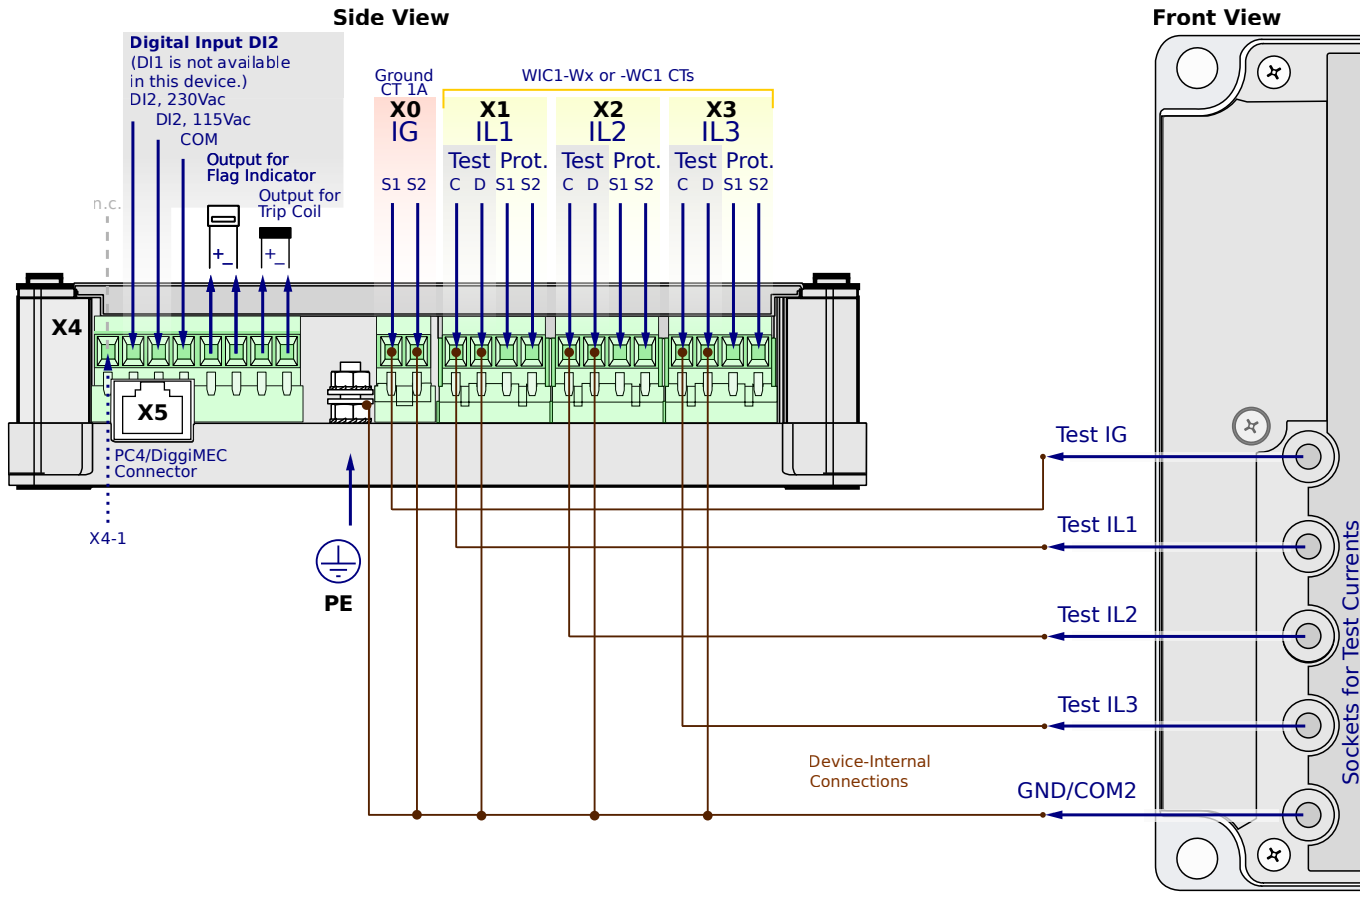


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1SA0

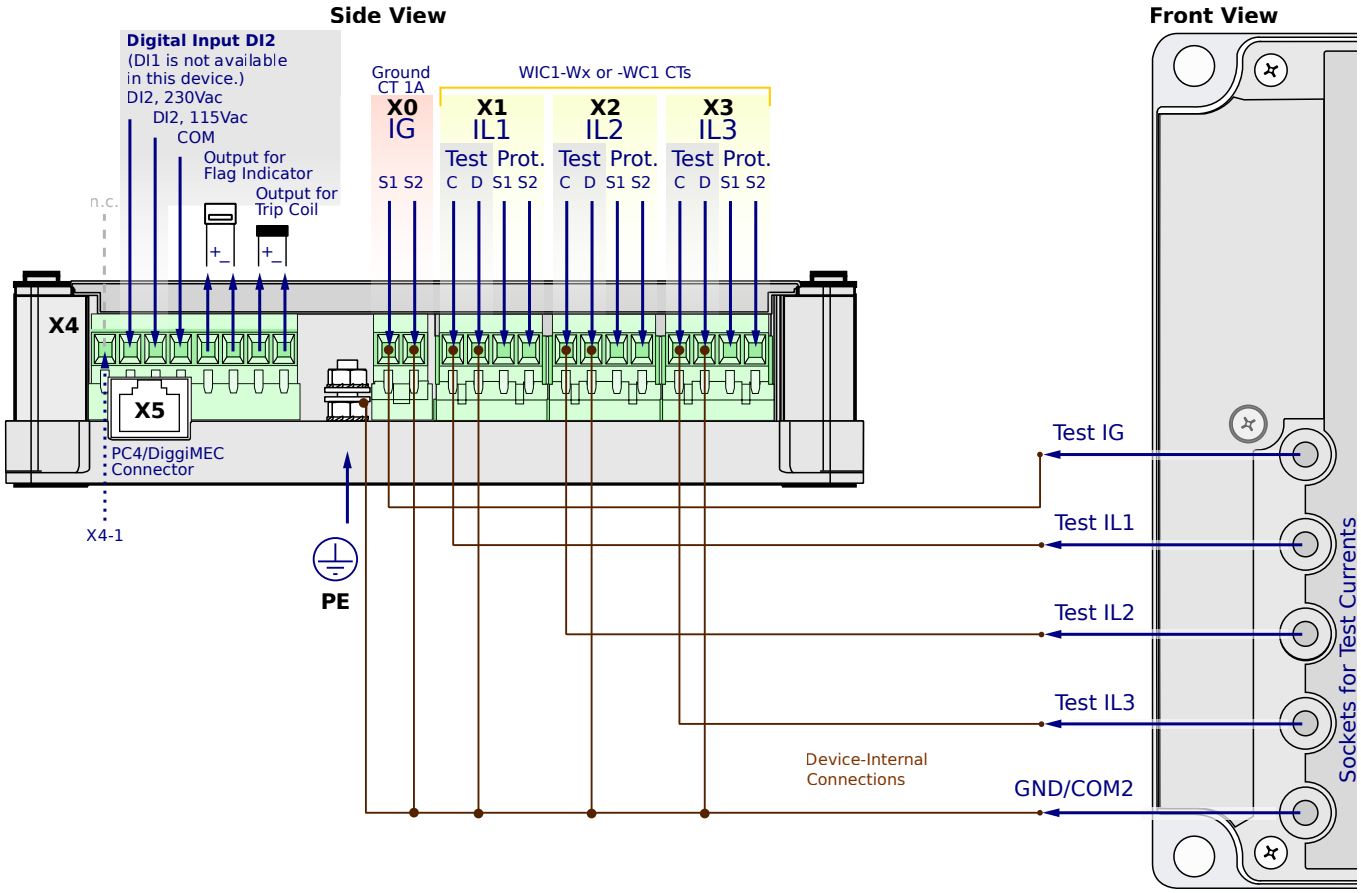


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1SAH

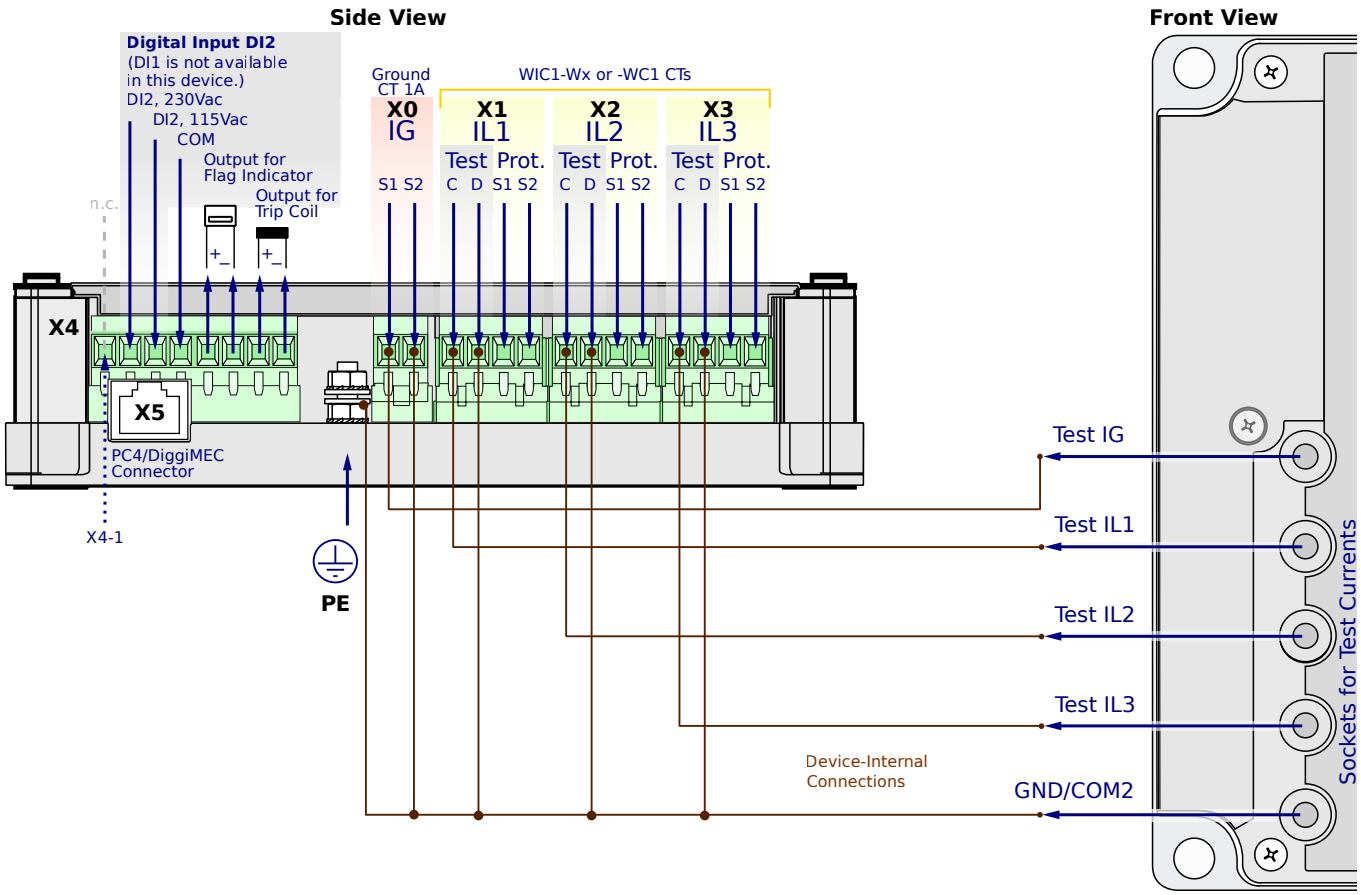


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1AA0

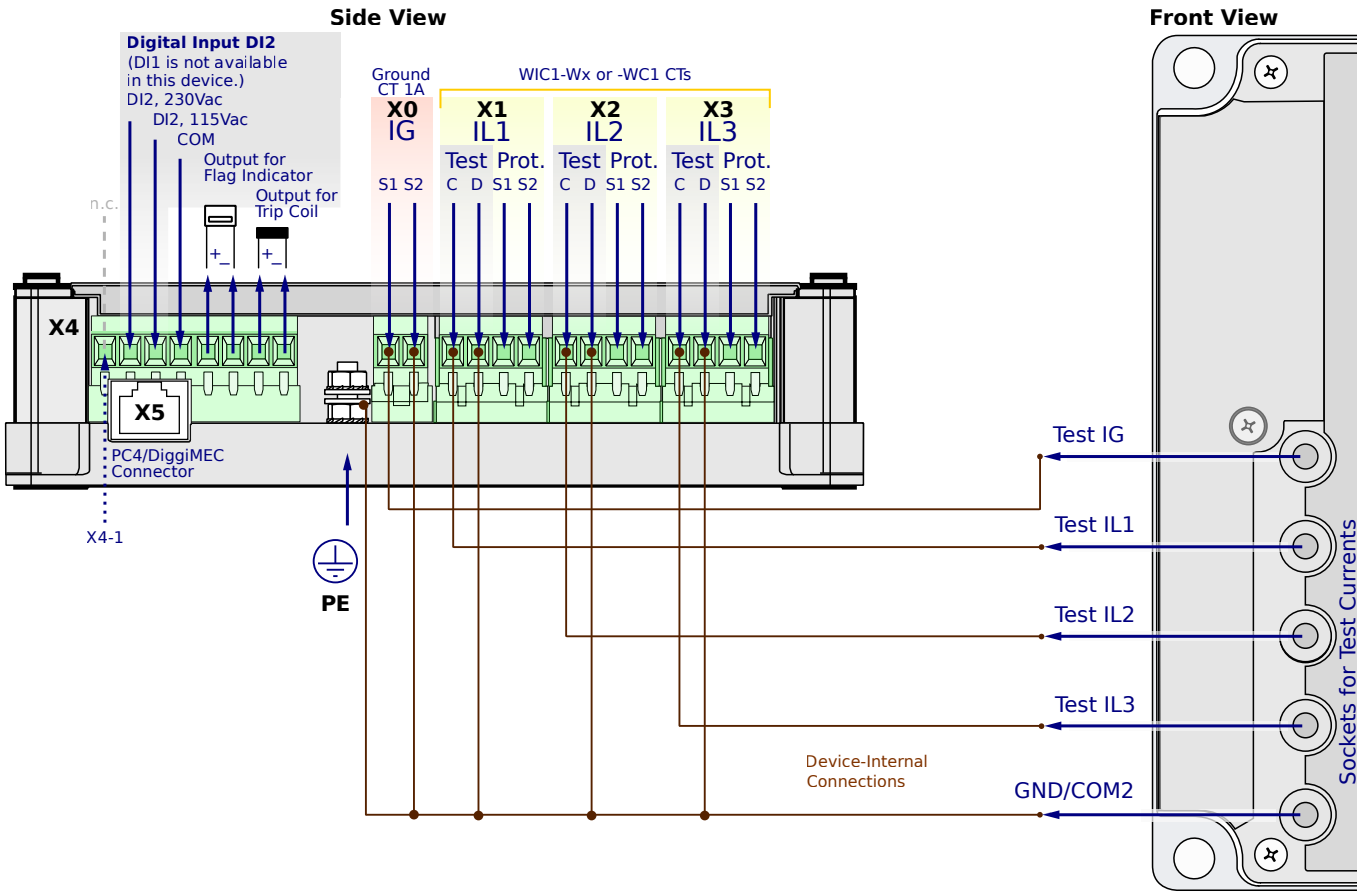


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1AAH

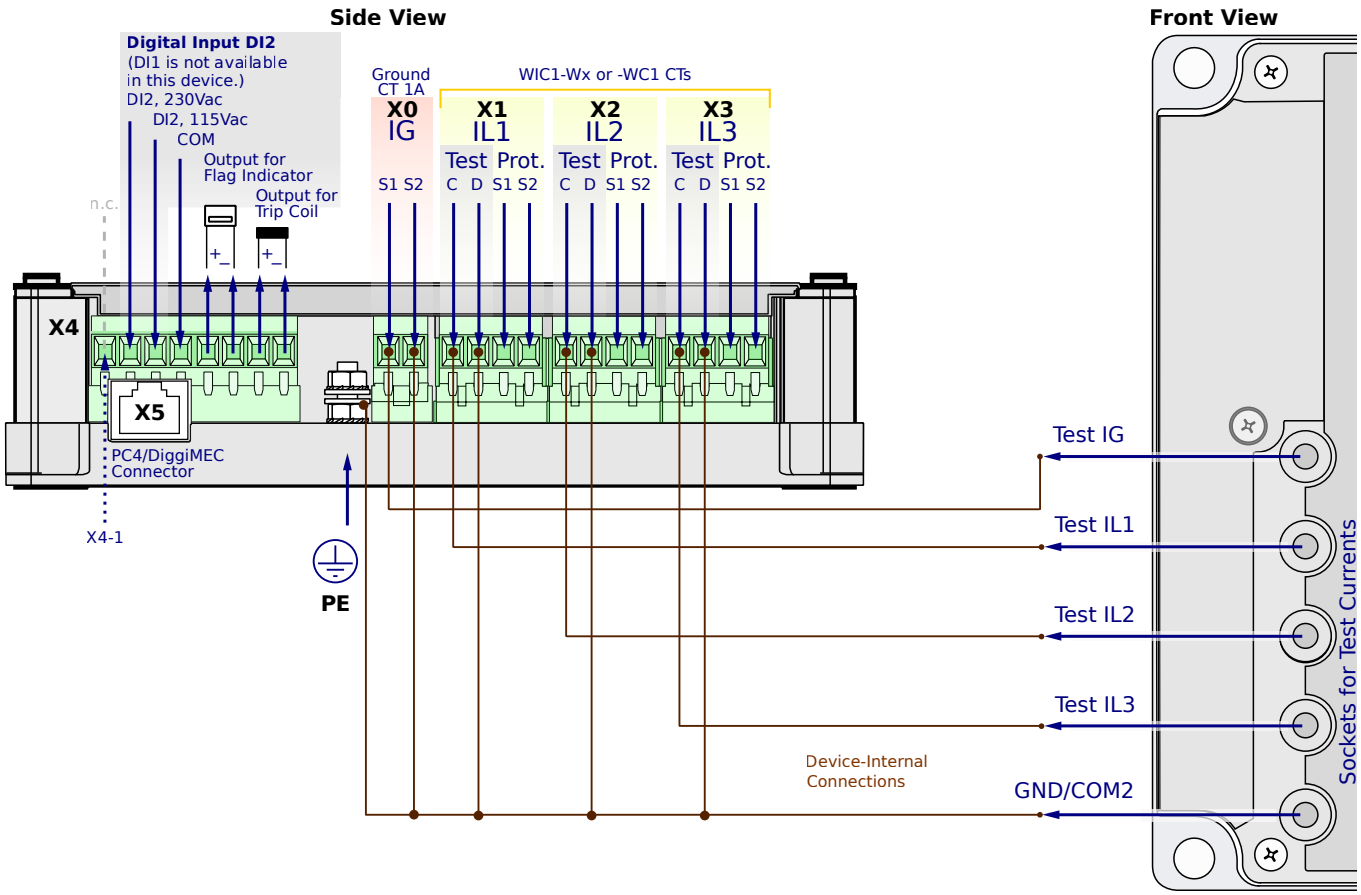


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1PA0

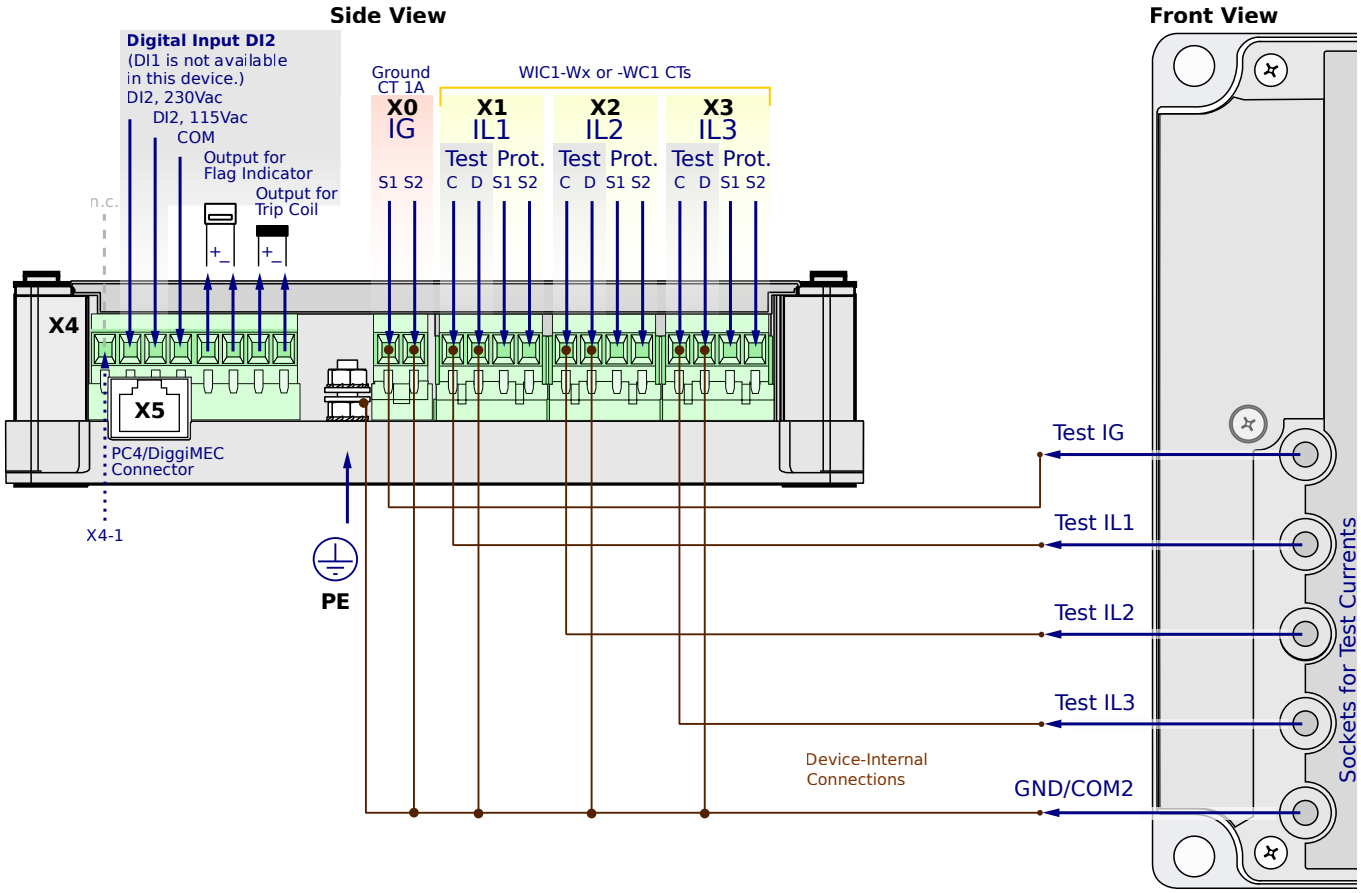


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC1PAH

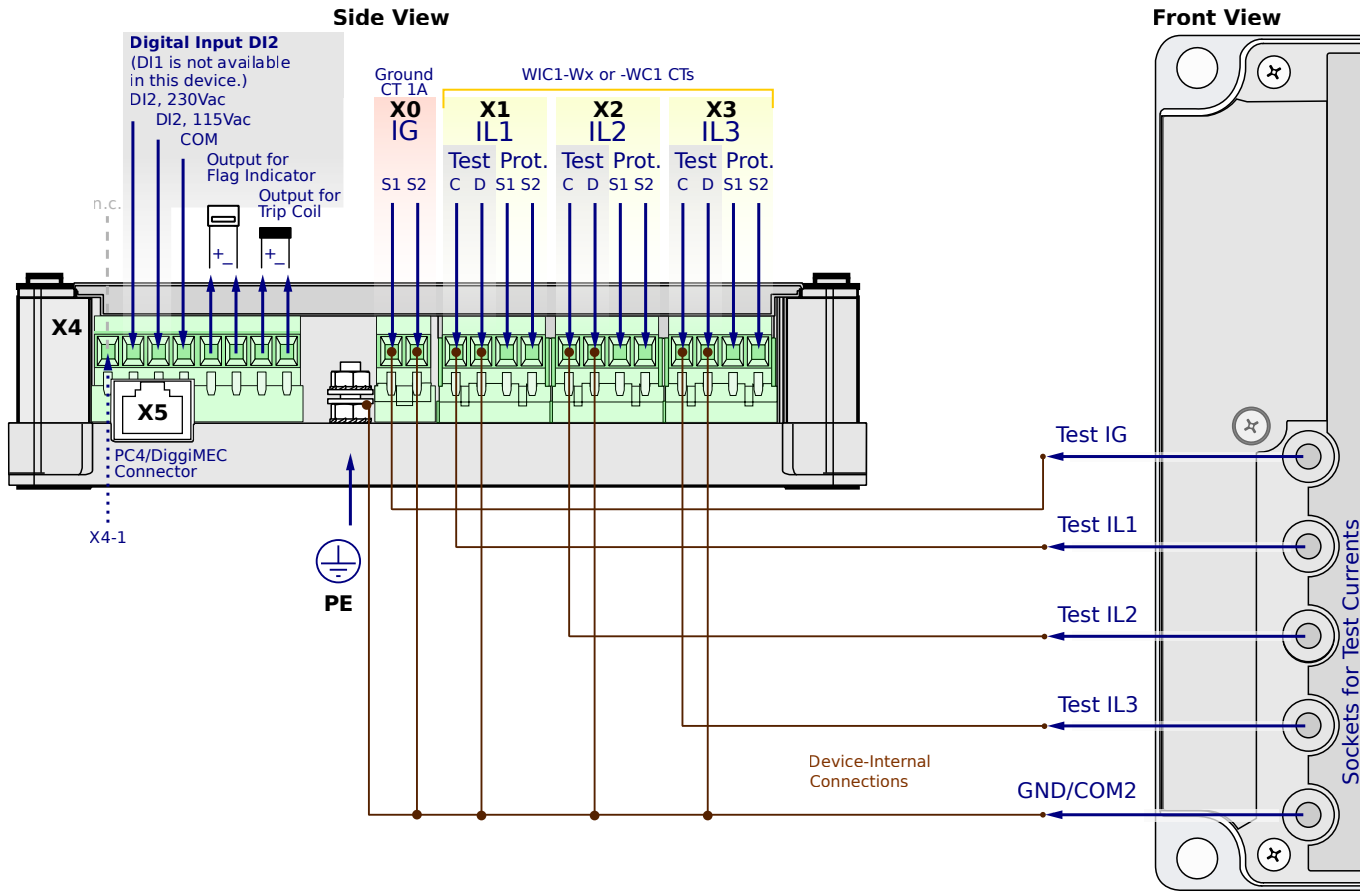


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2SA0

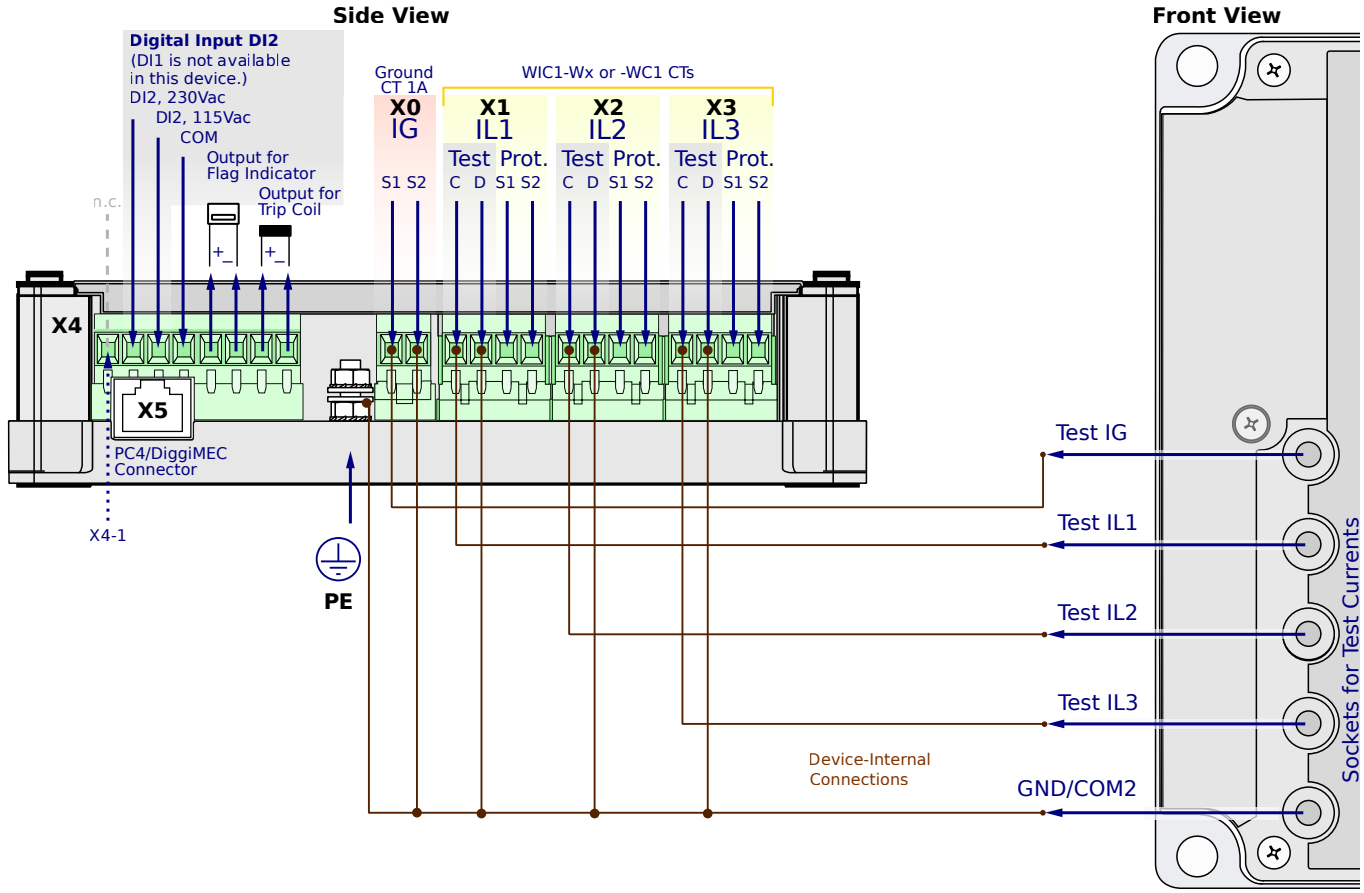


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2SAH

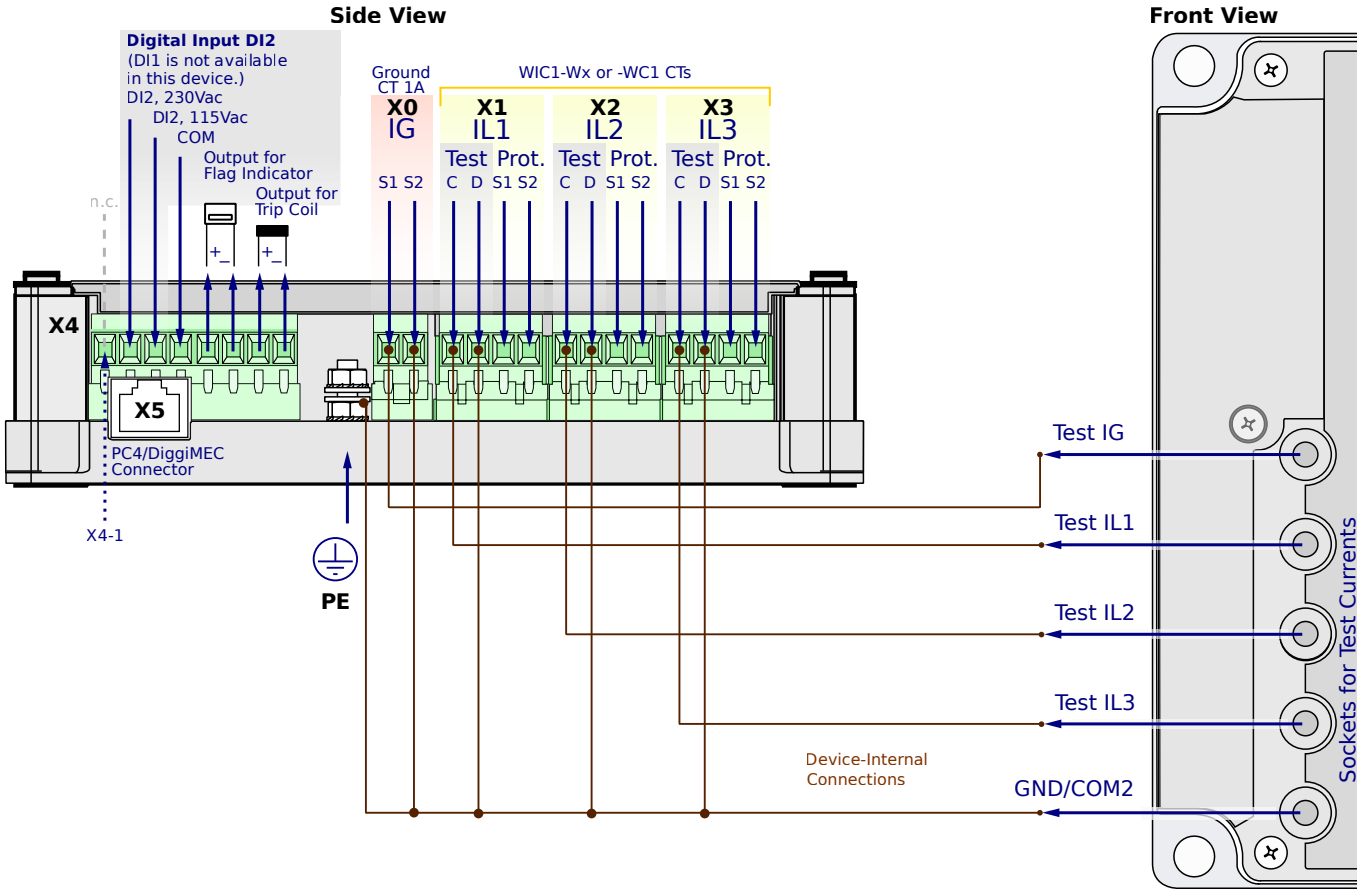


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2AA0

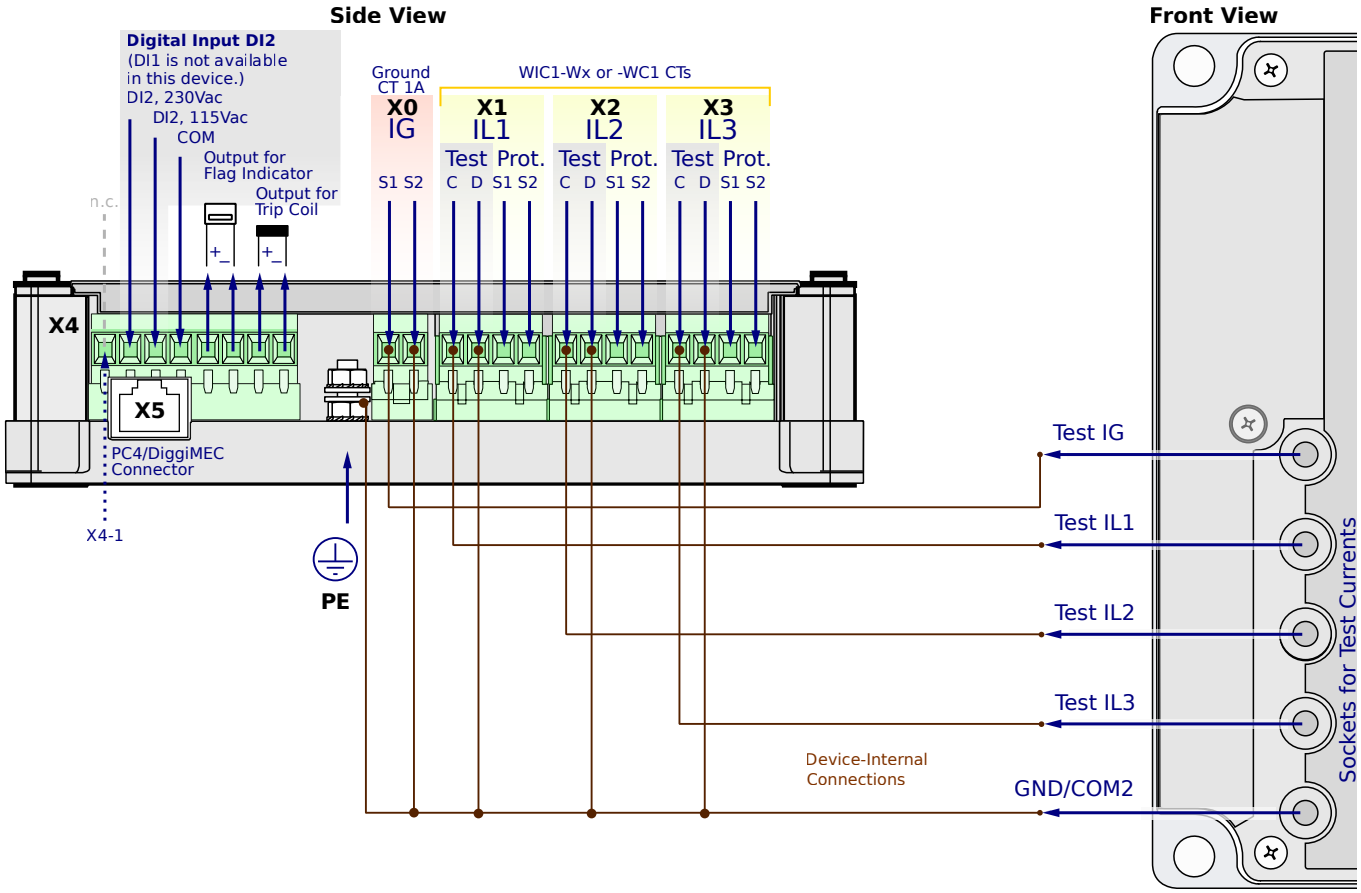


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2AAH

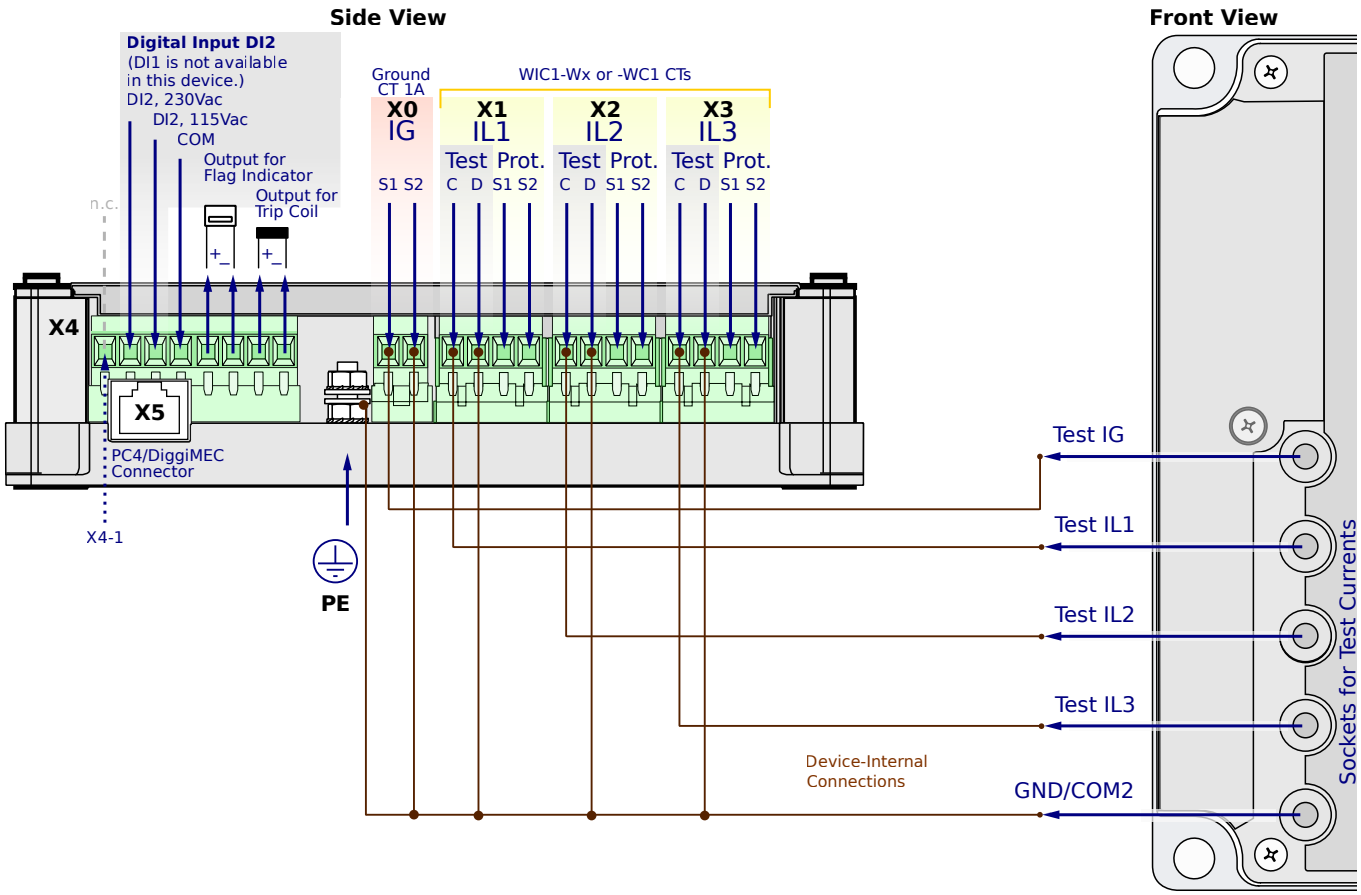


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2PA0

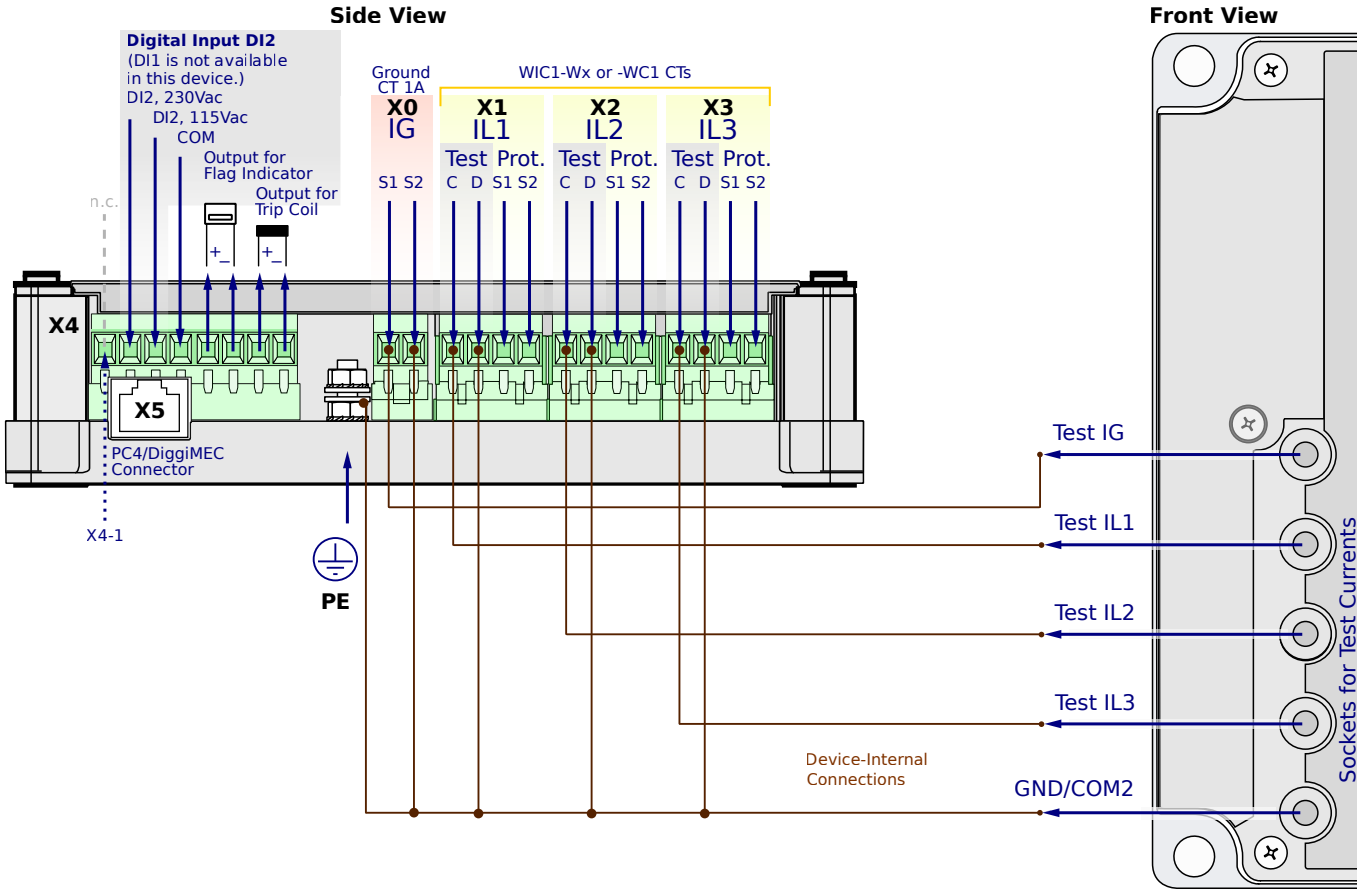


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5NC2PAH

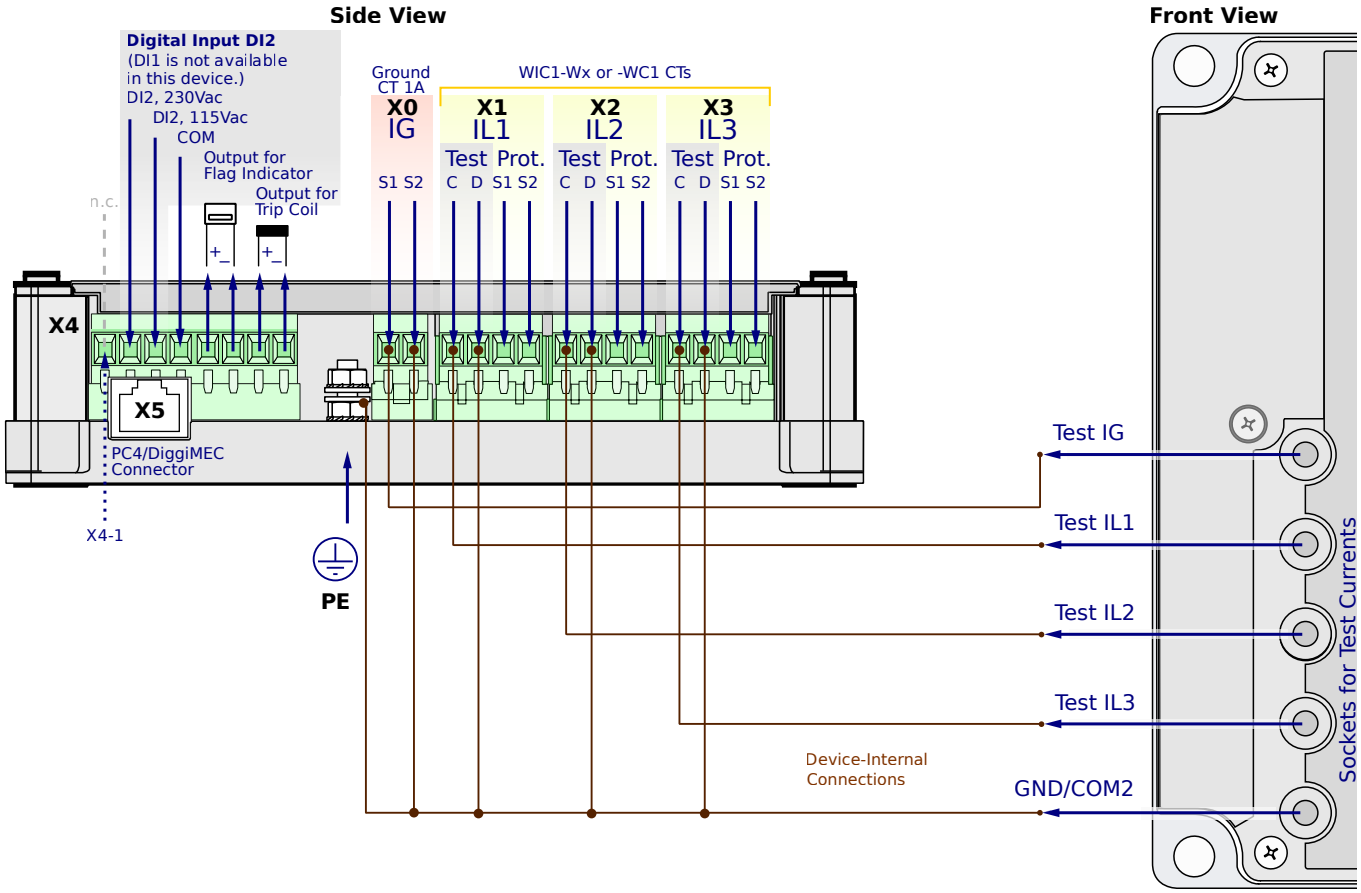


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1SA0

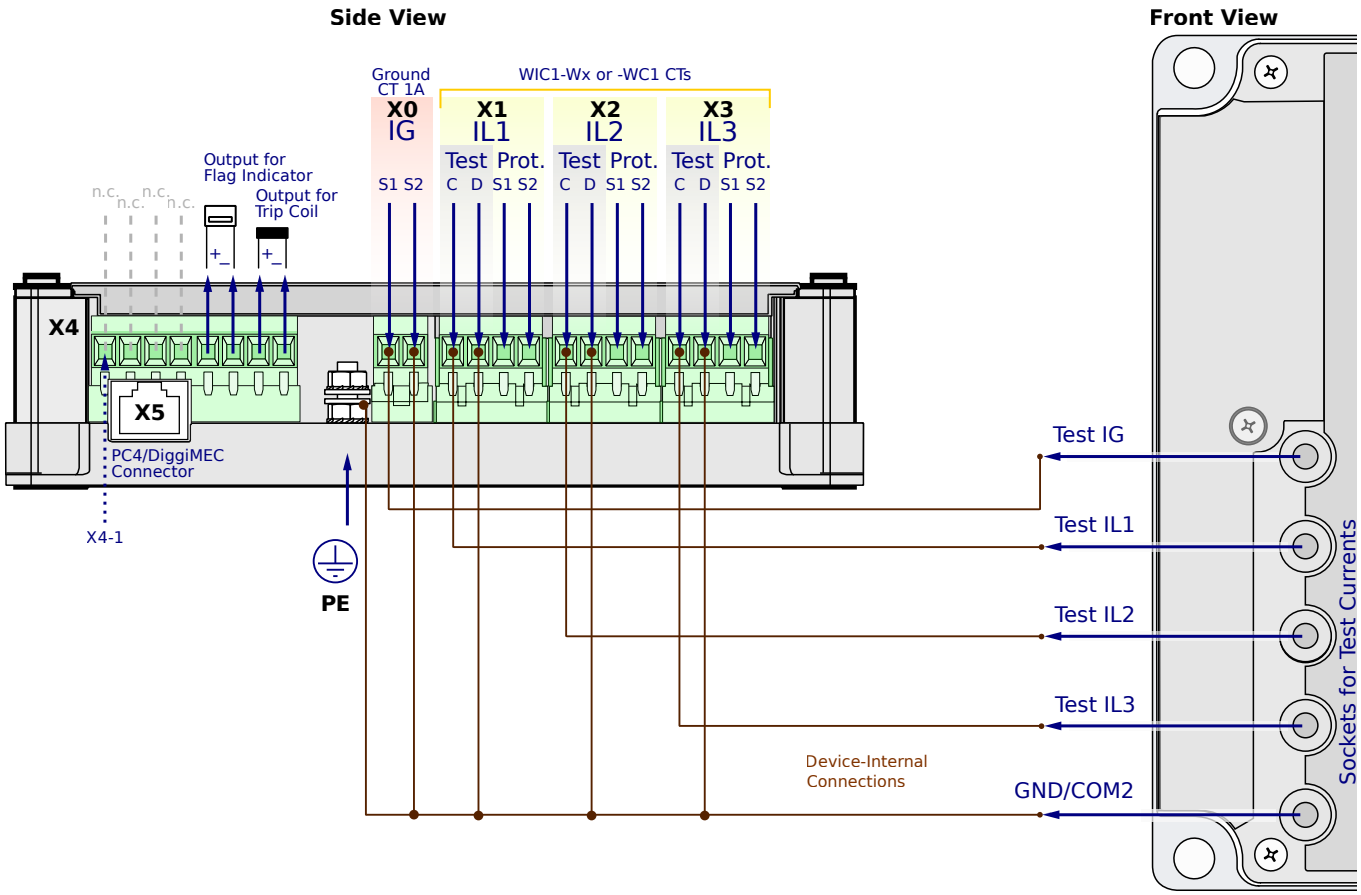


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1SAH

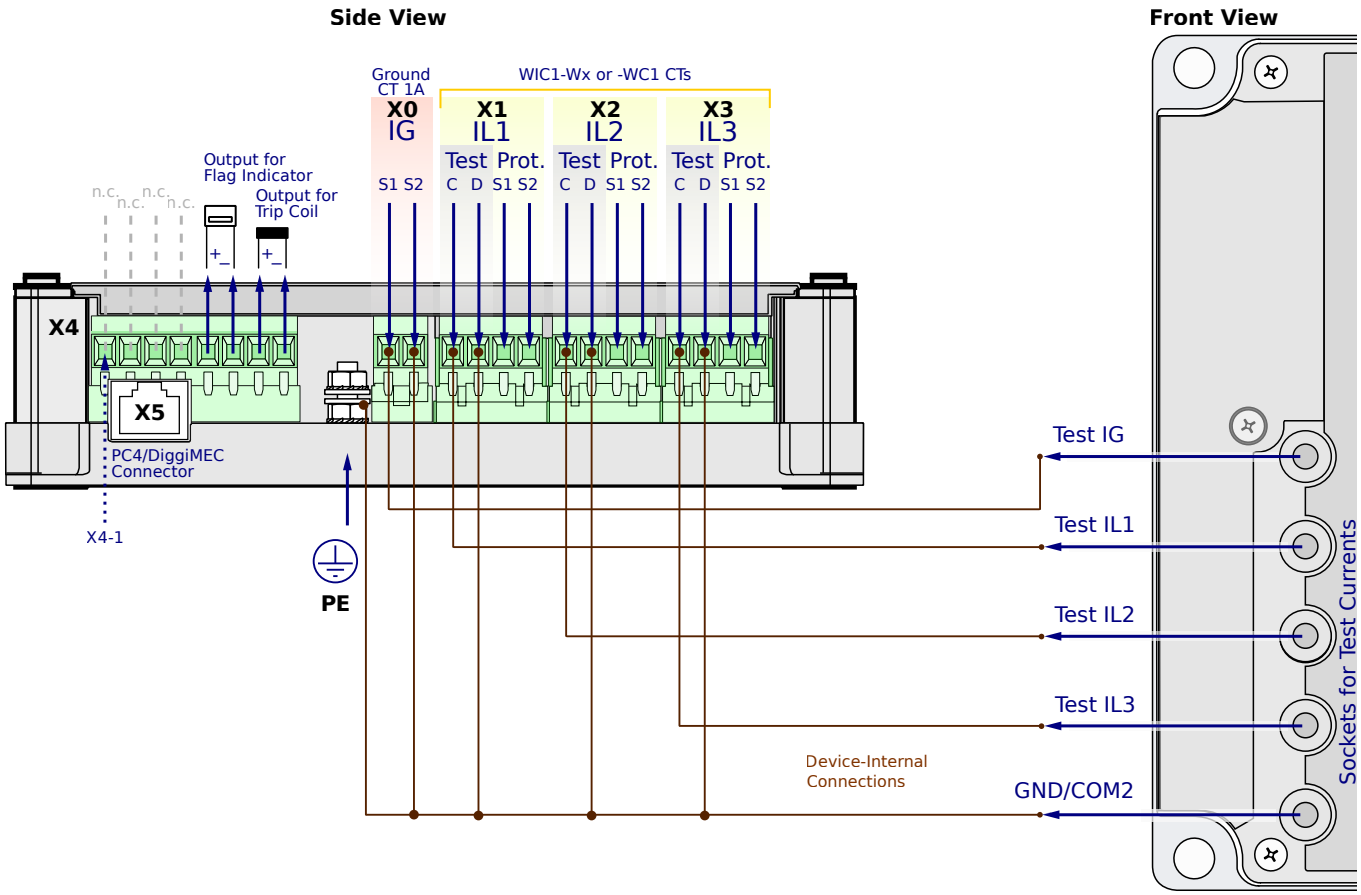


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1AA0

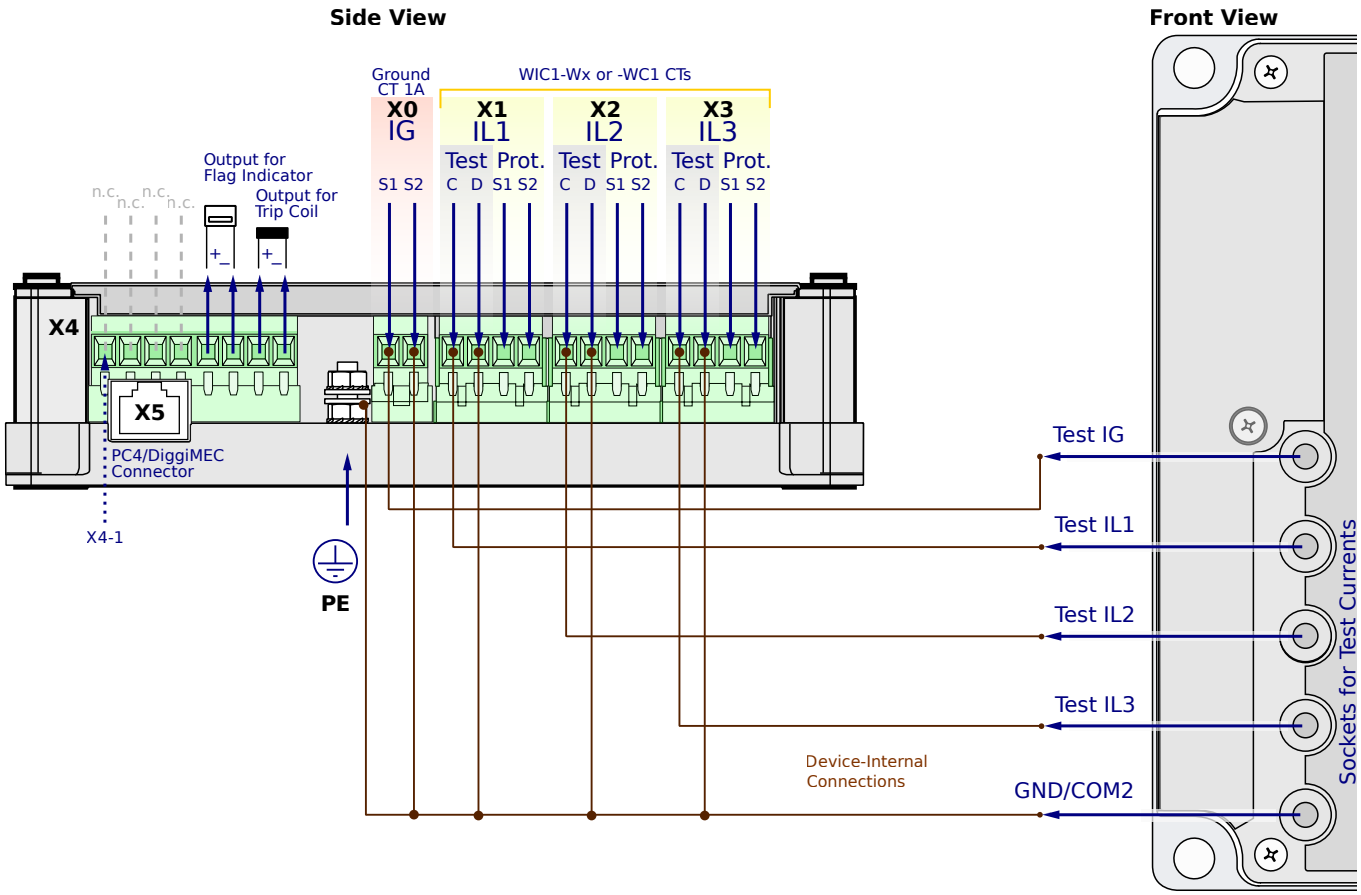


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1AAH

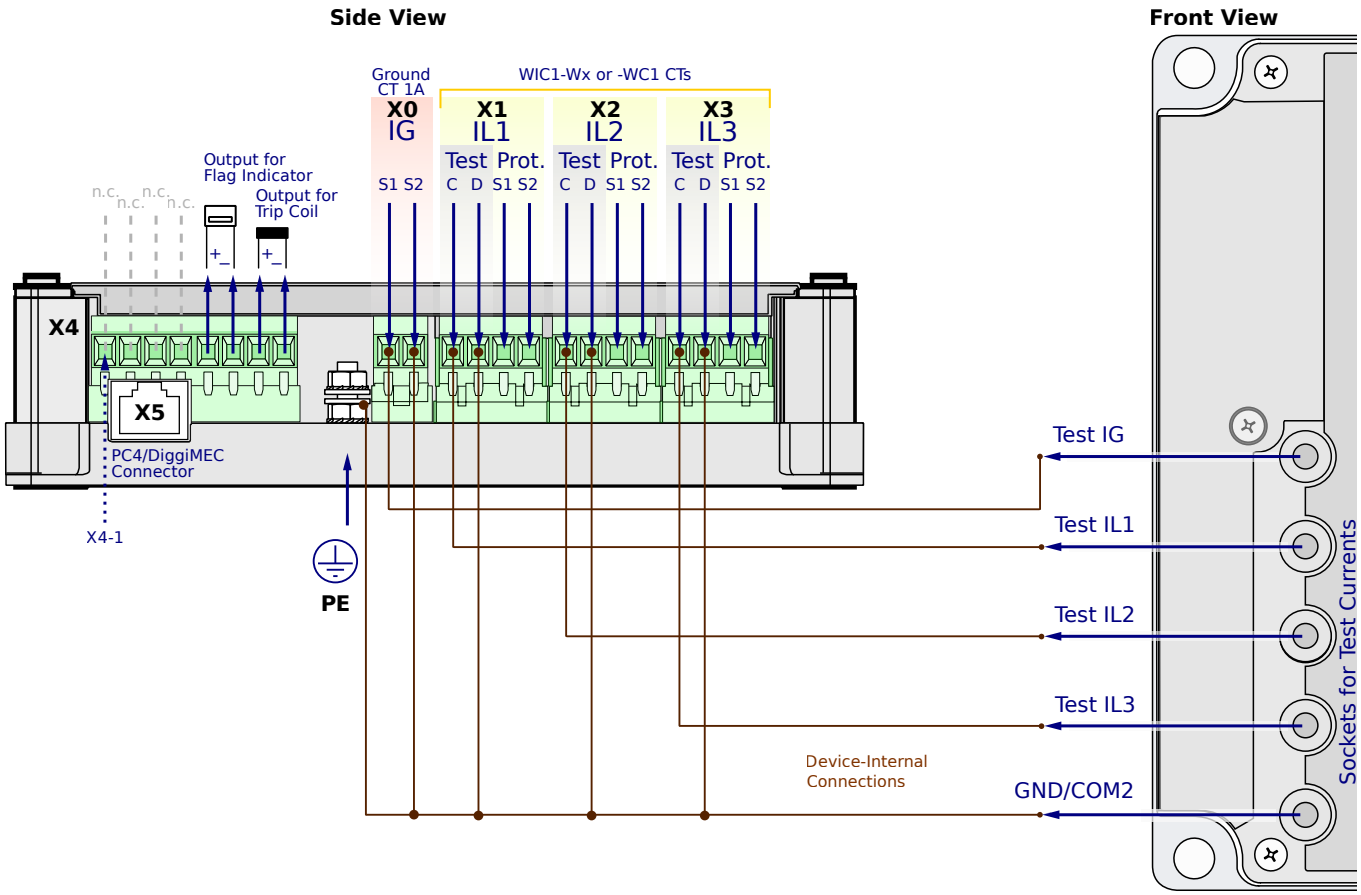


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1PA0

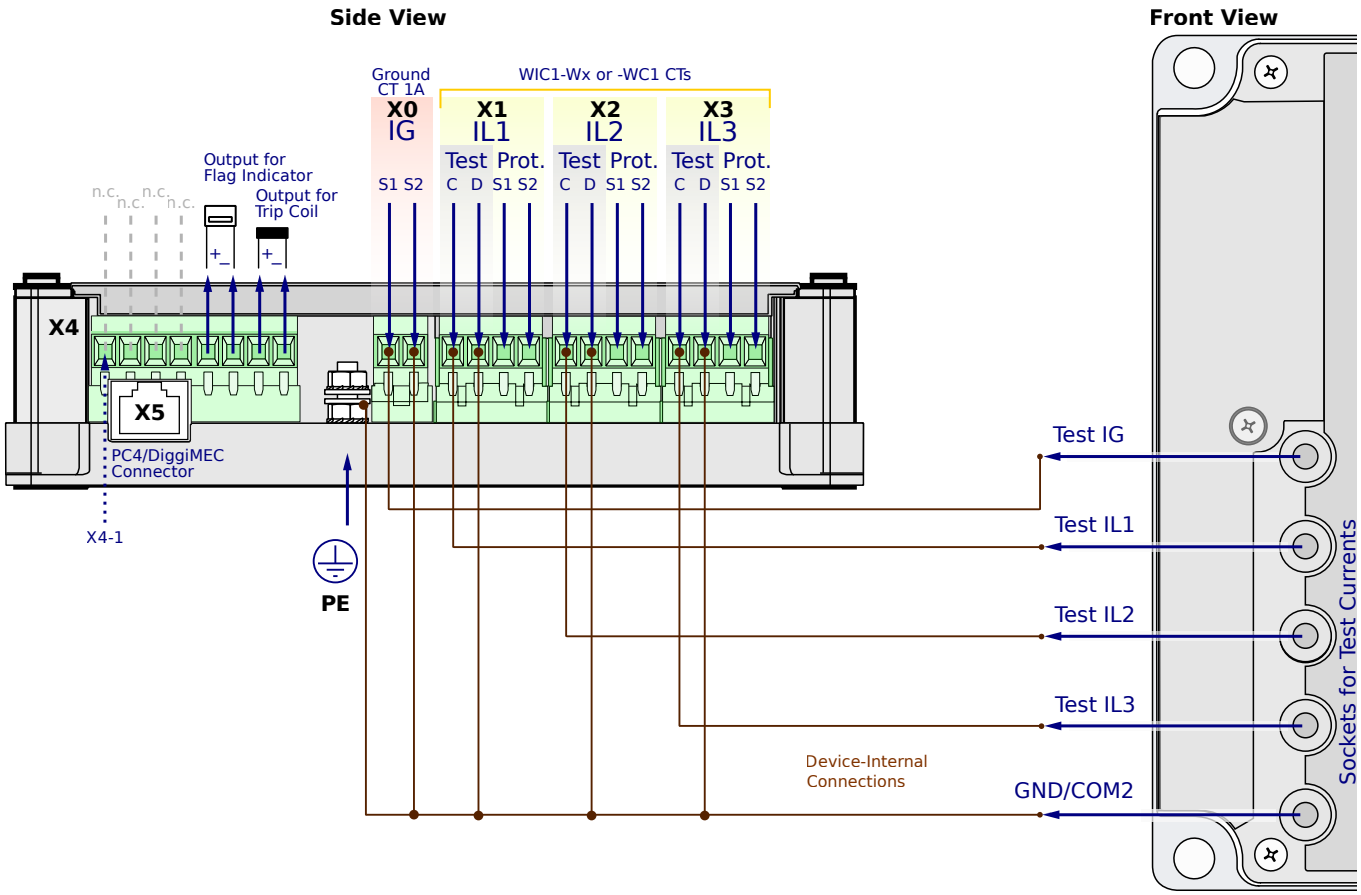


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN1PAH

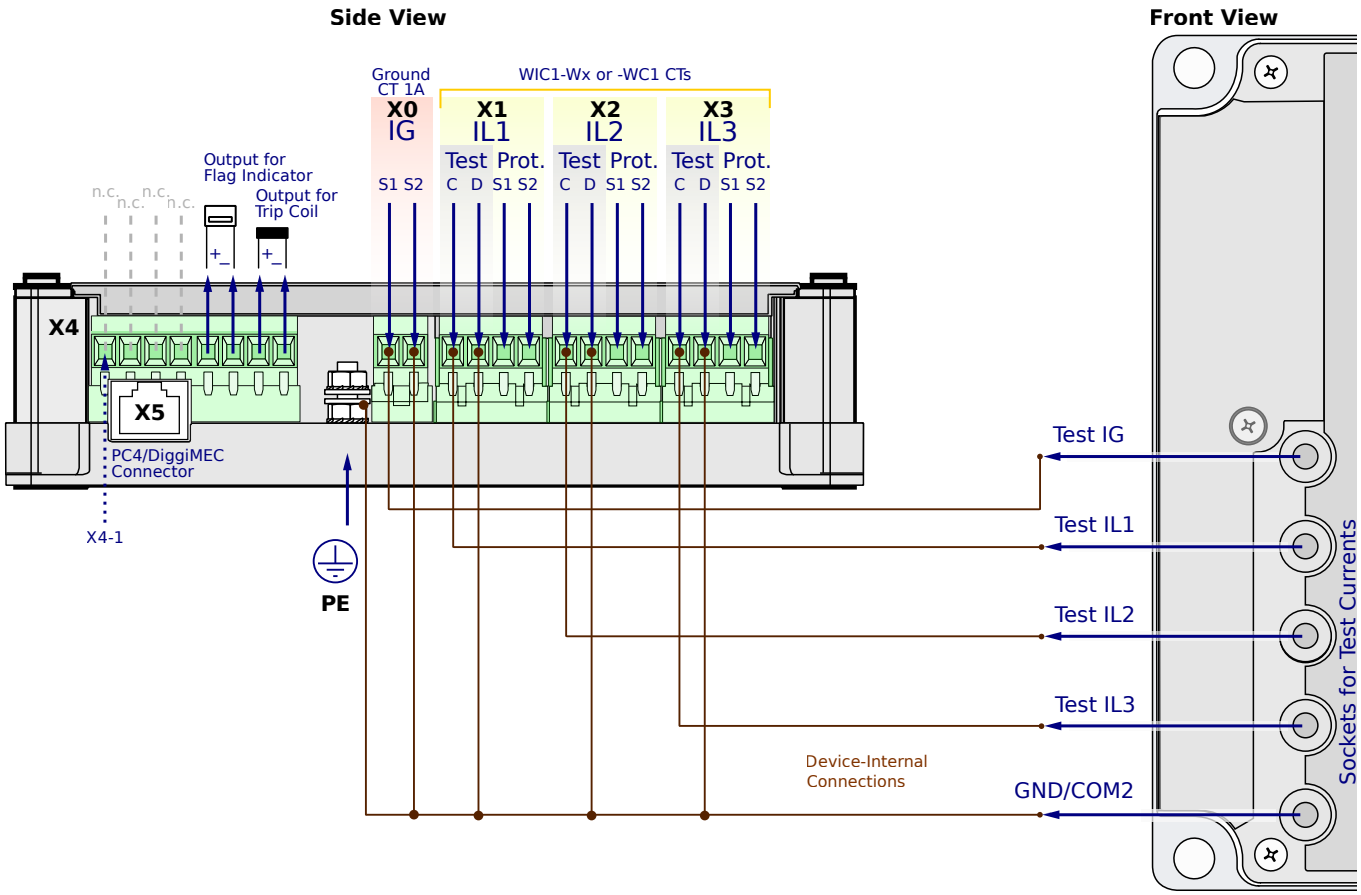


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2SA0

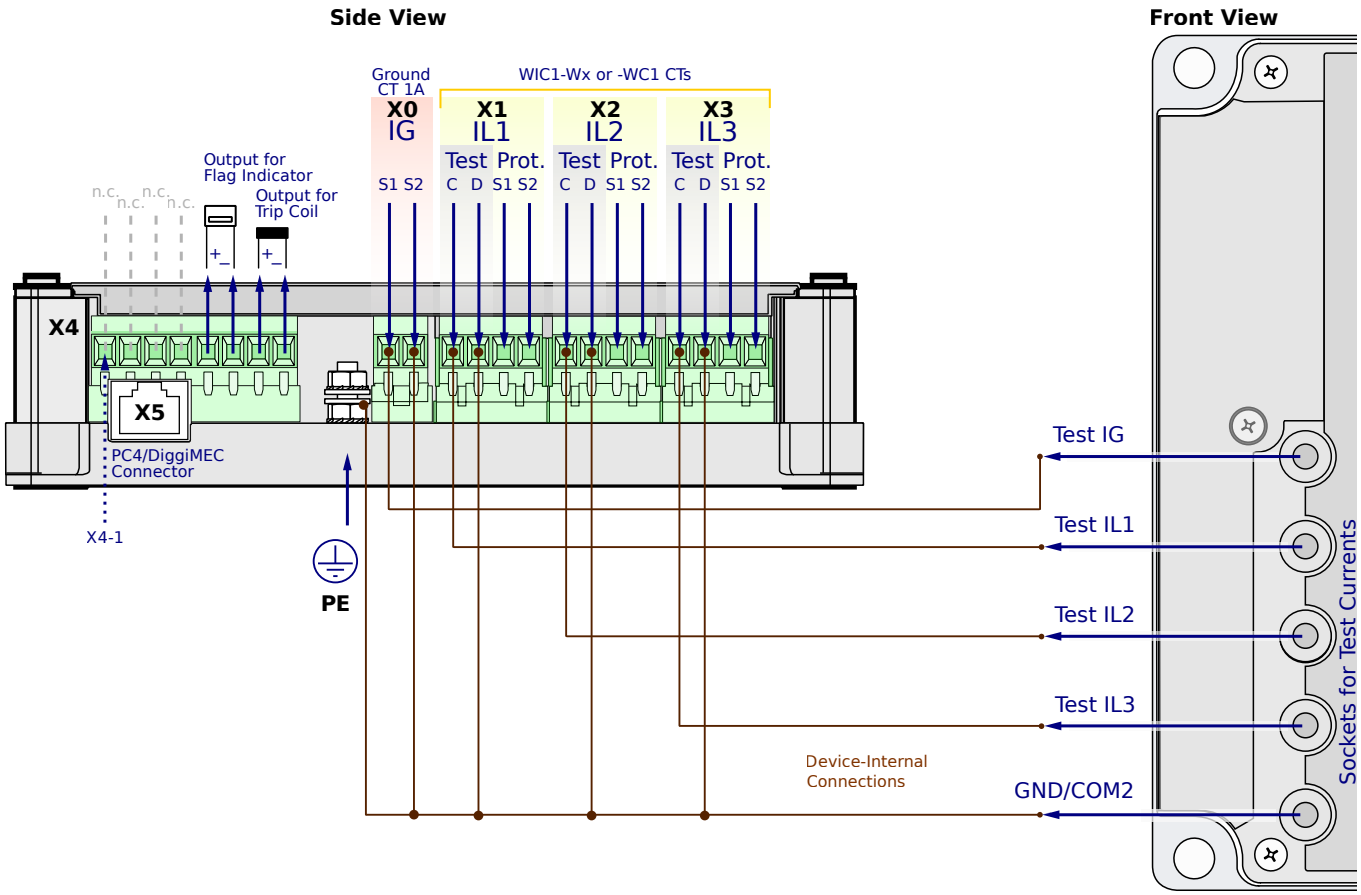


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2SAH

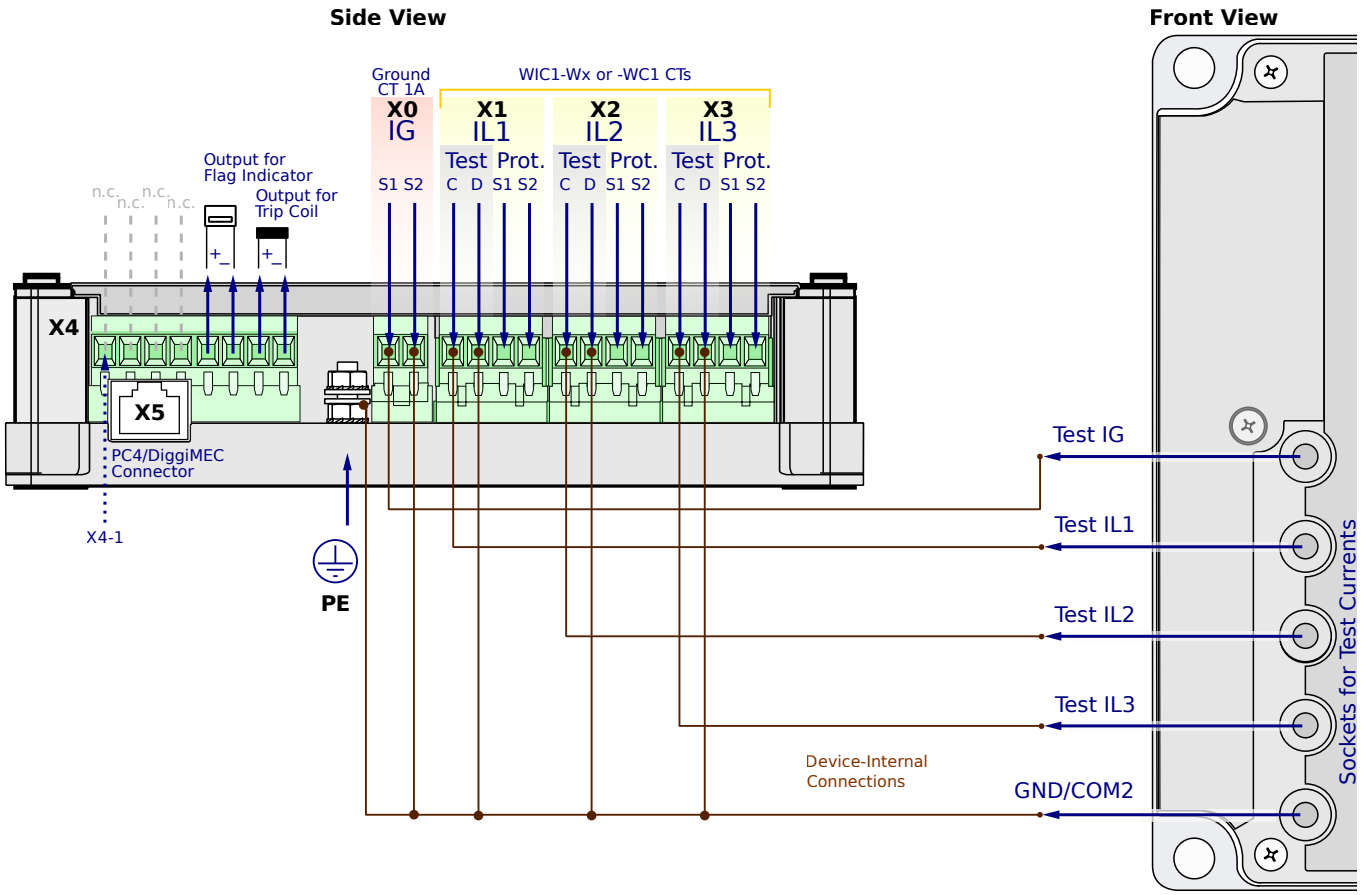


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2AA0

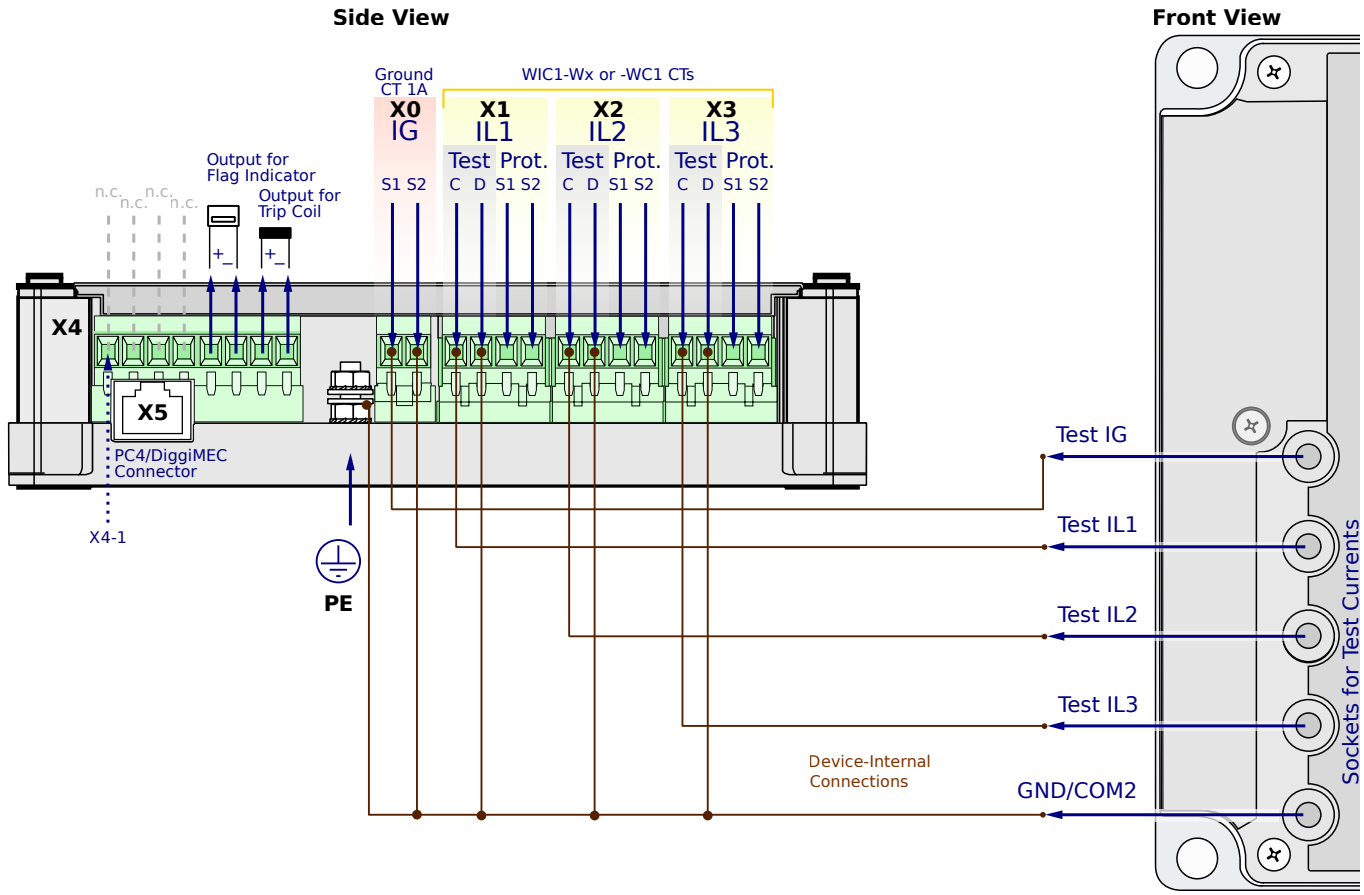


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2AAH

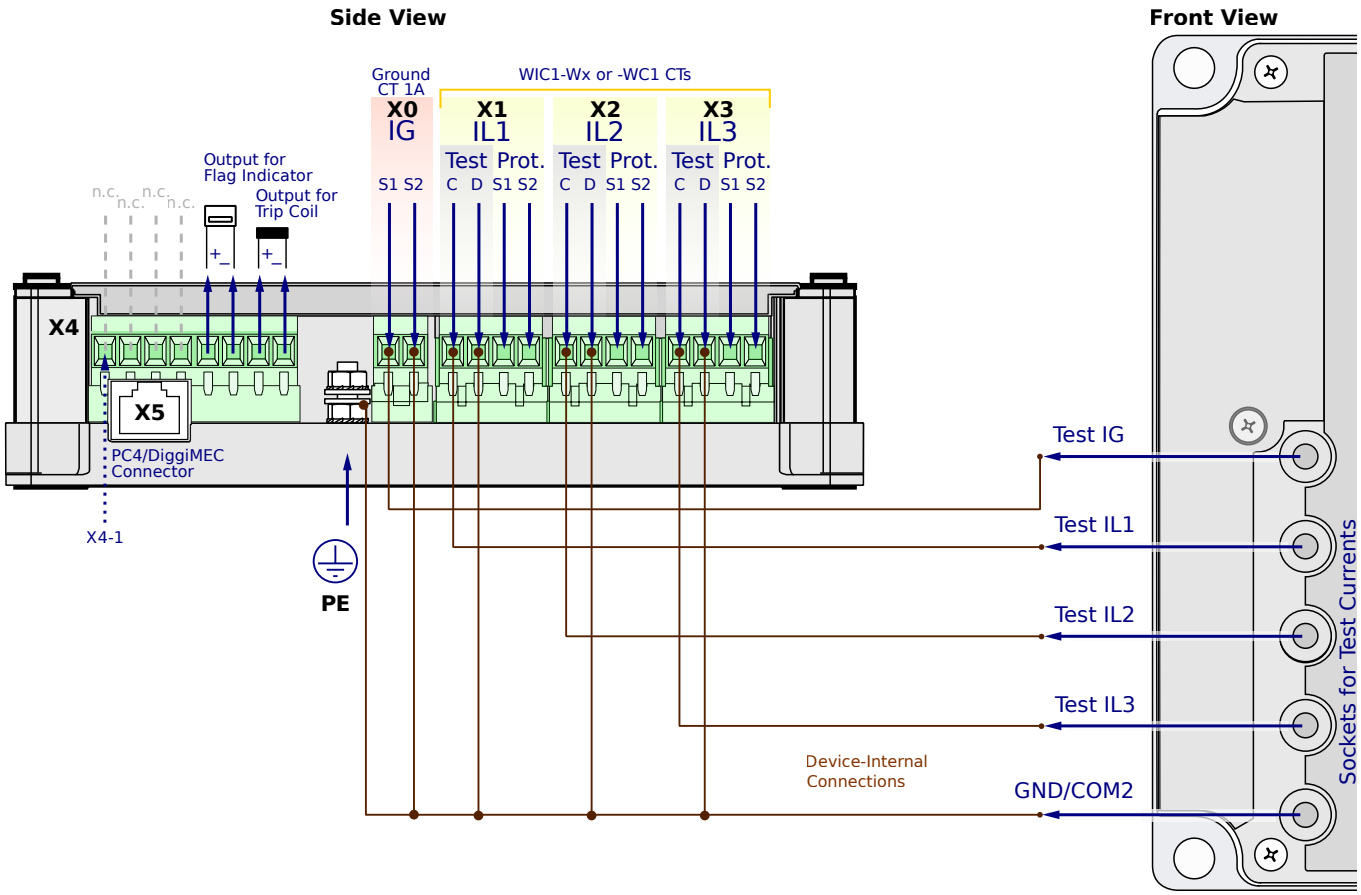


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2PA0

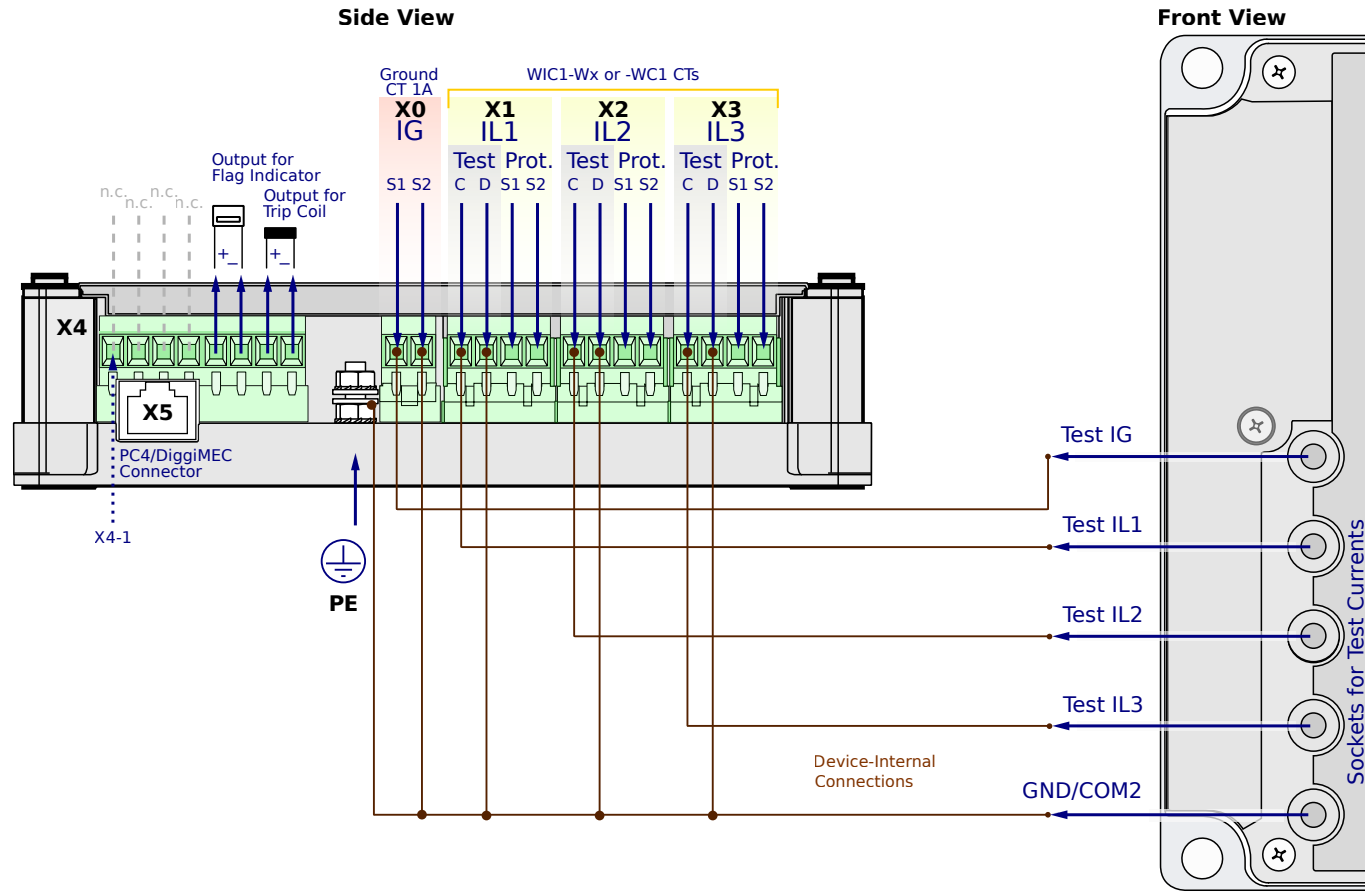


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FN2PAH

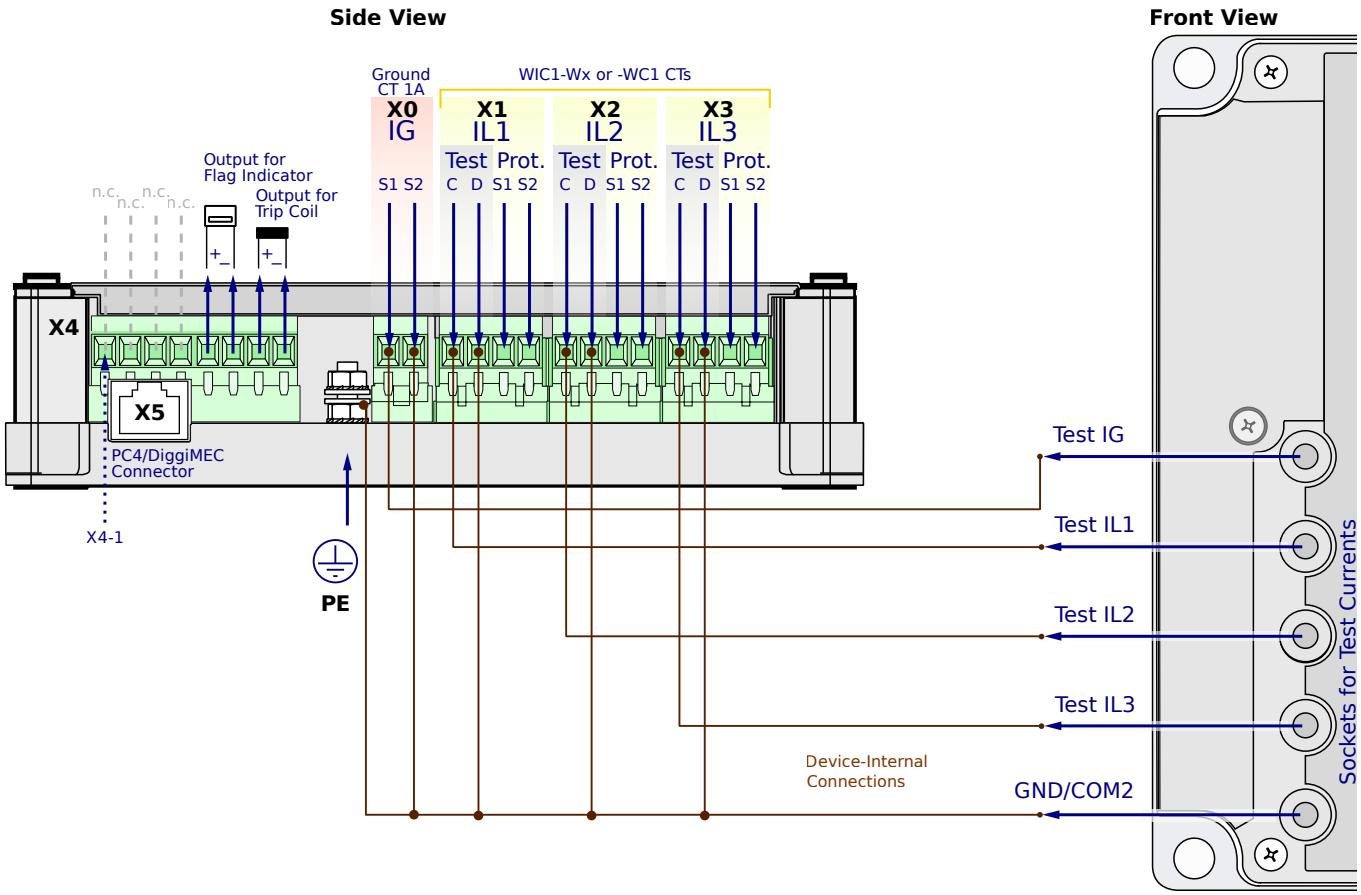


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1SA0

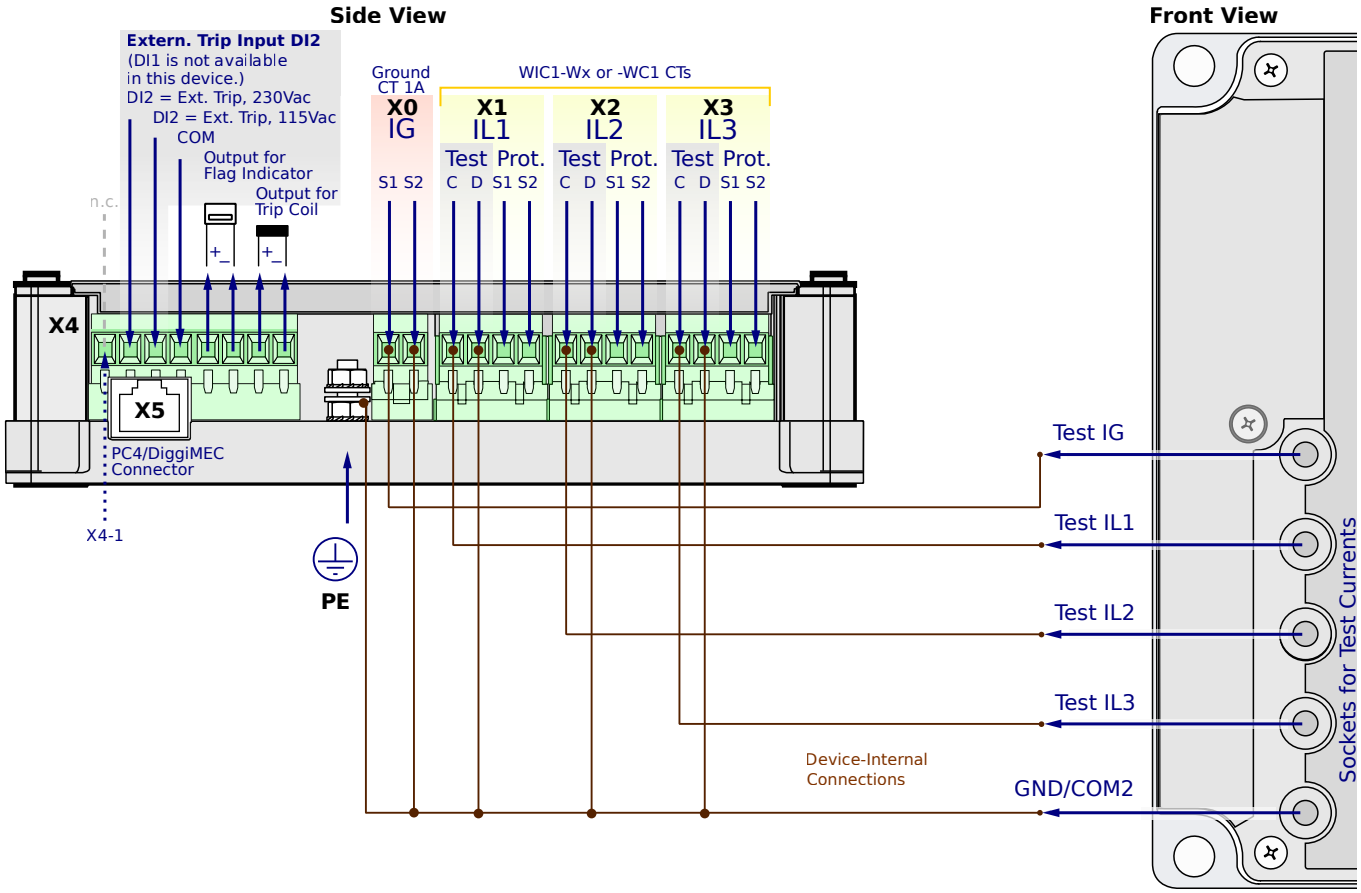


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1SAH

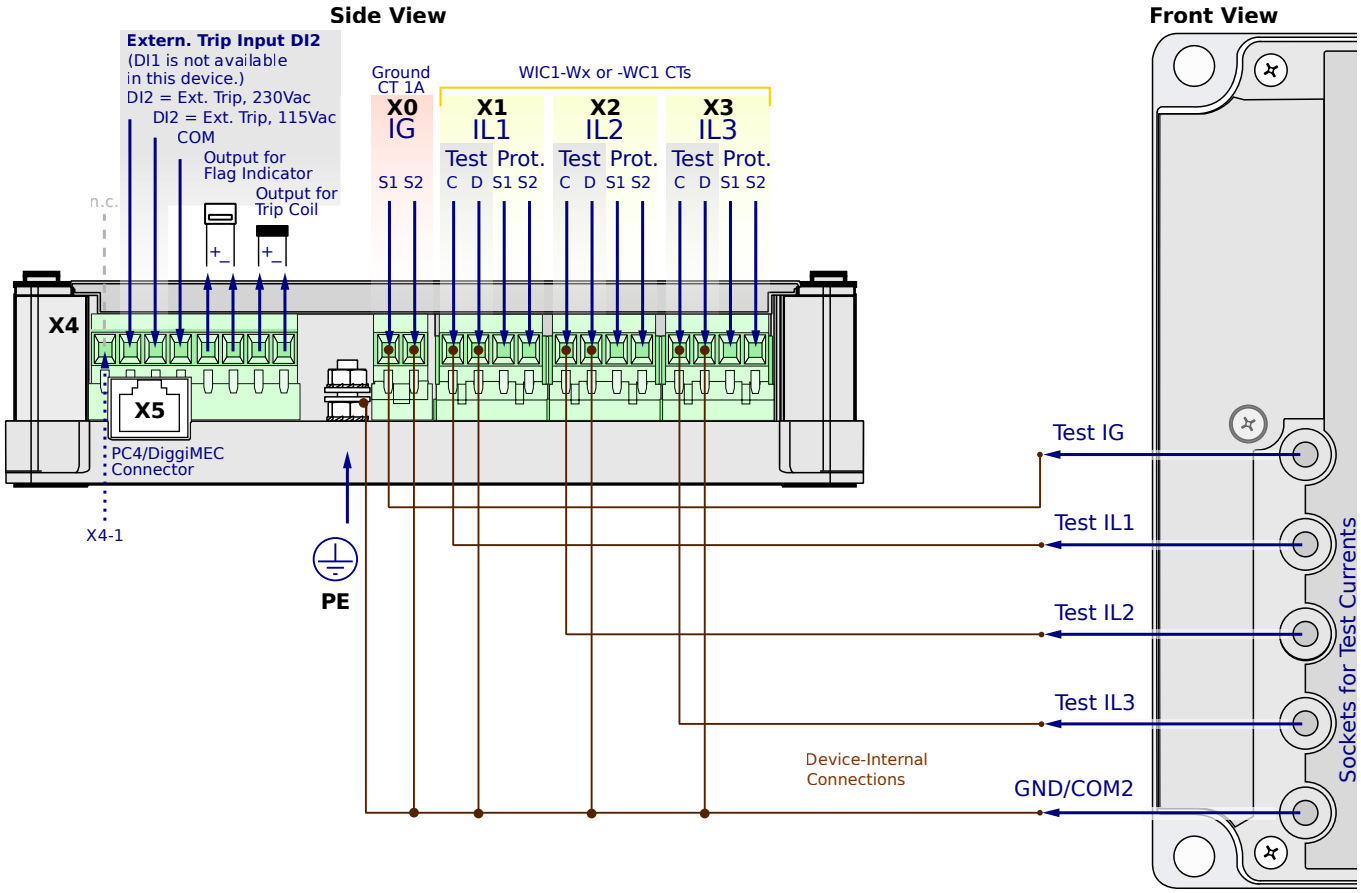


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1AA0

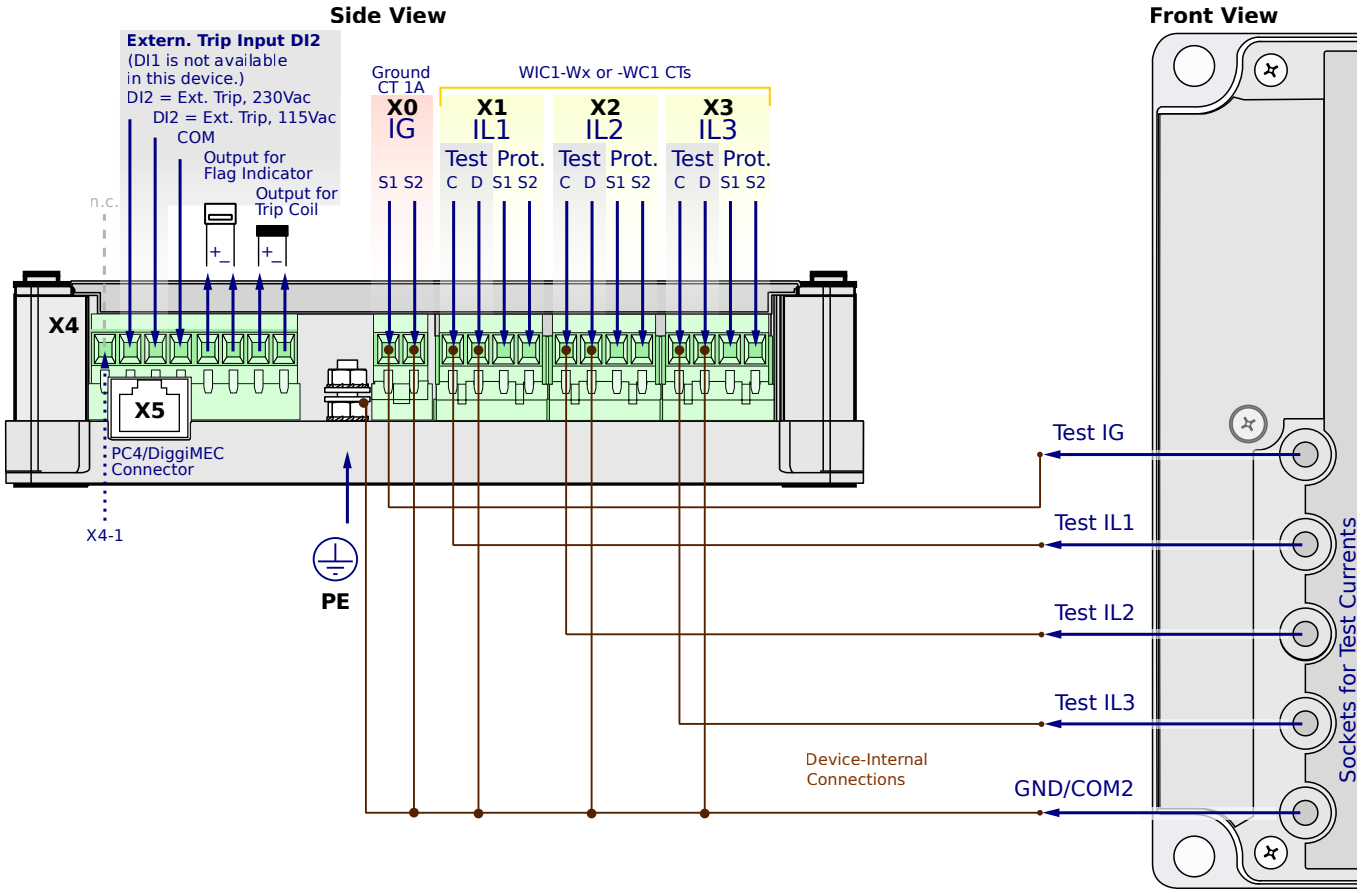


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1AAH

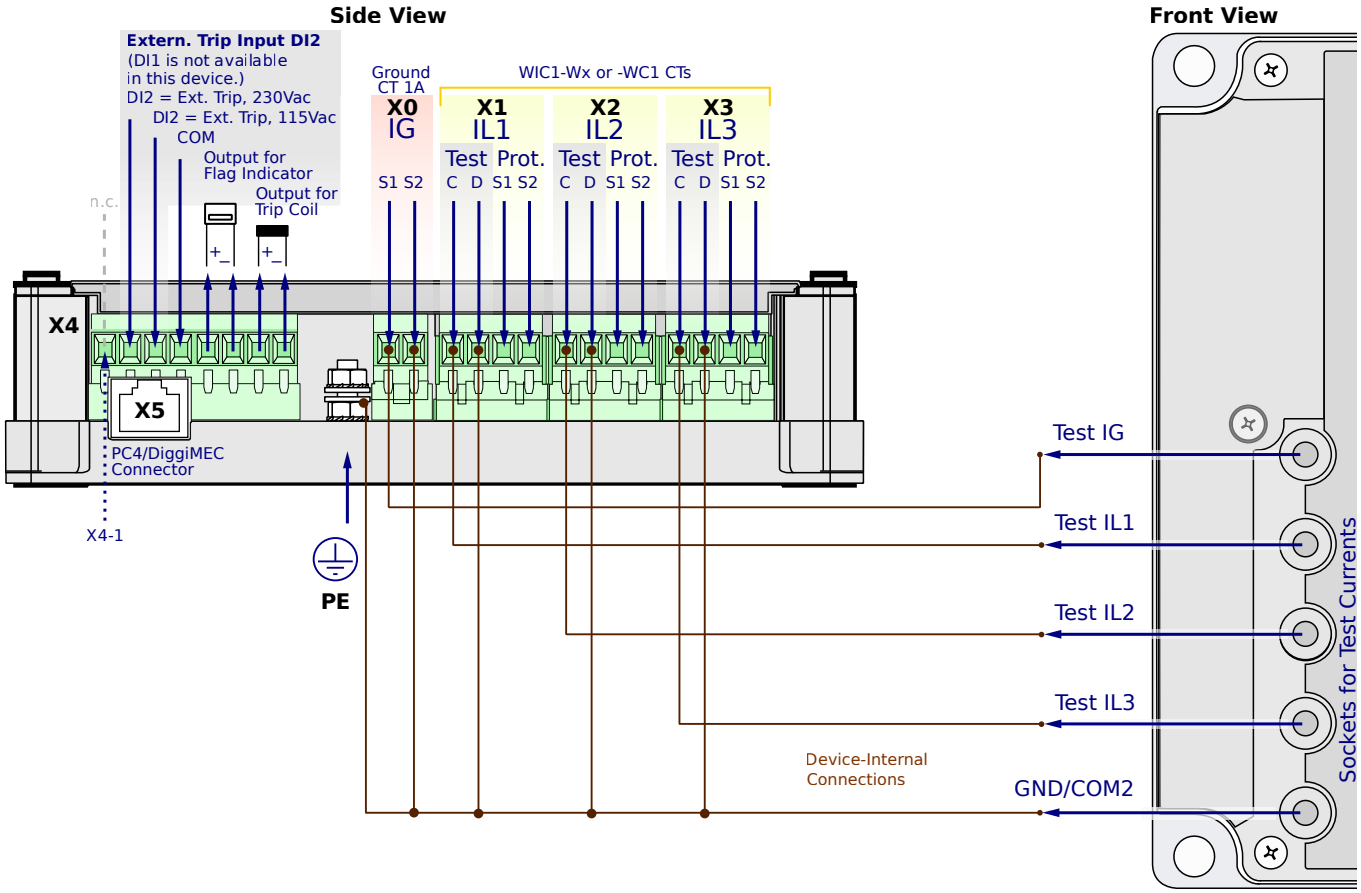


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1PA0

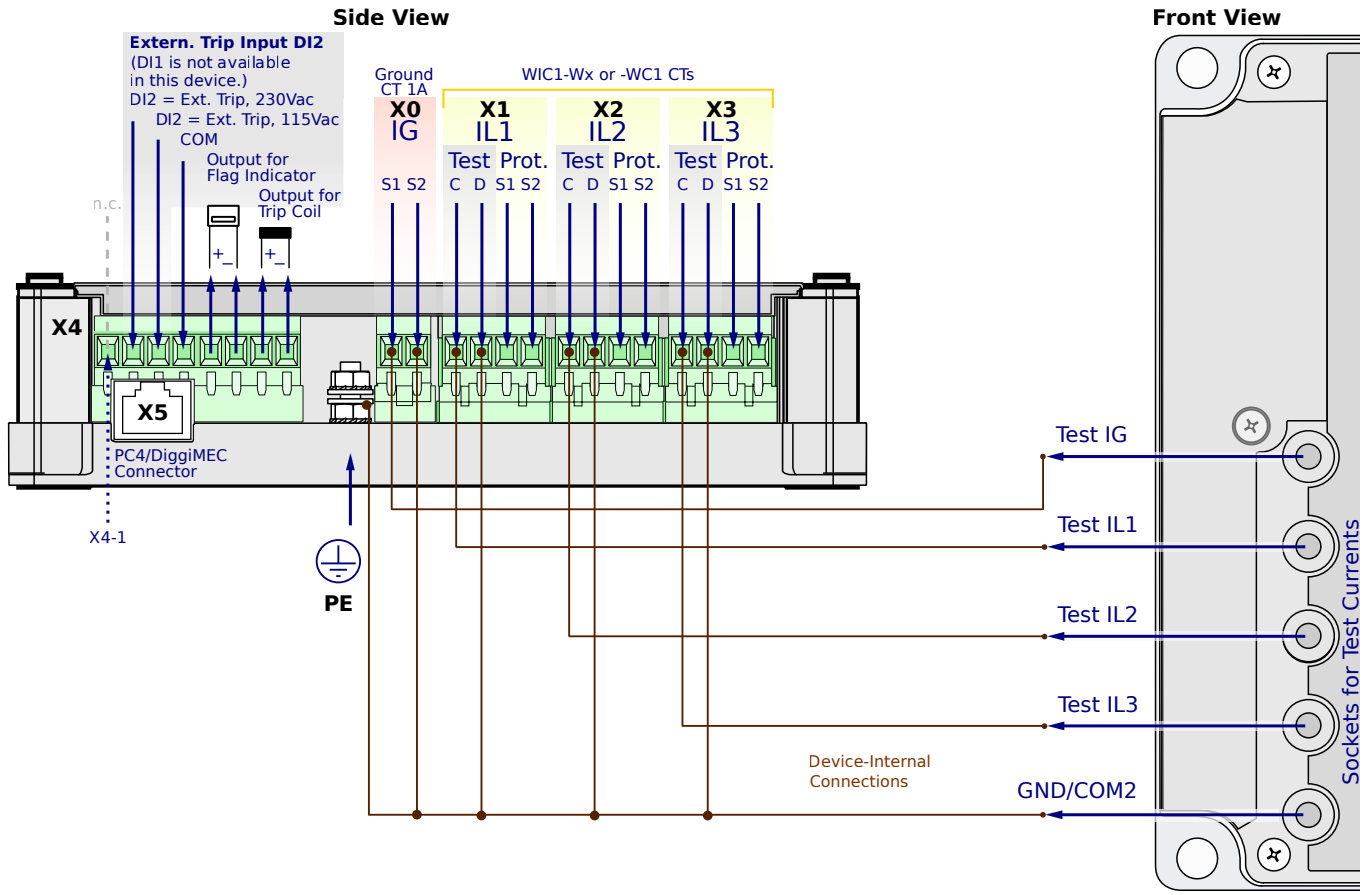


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF1PAH

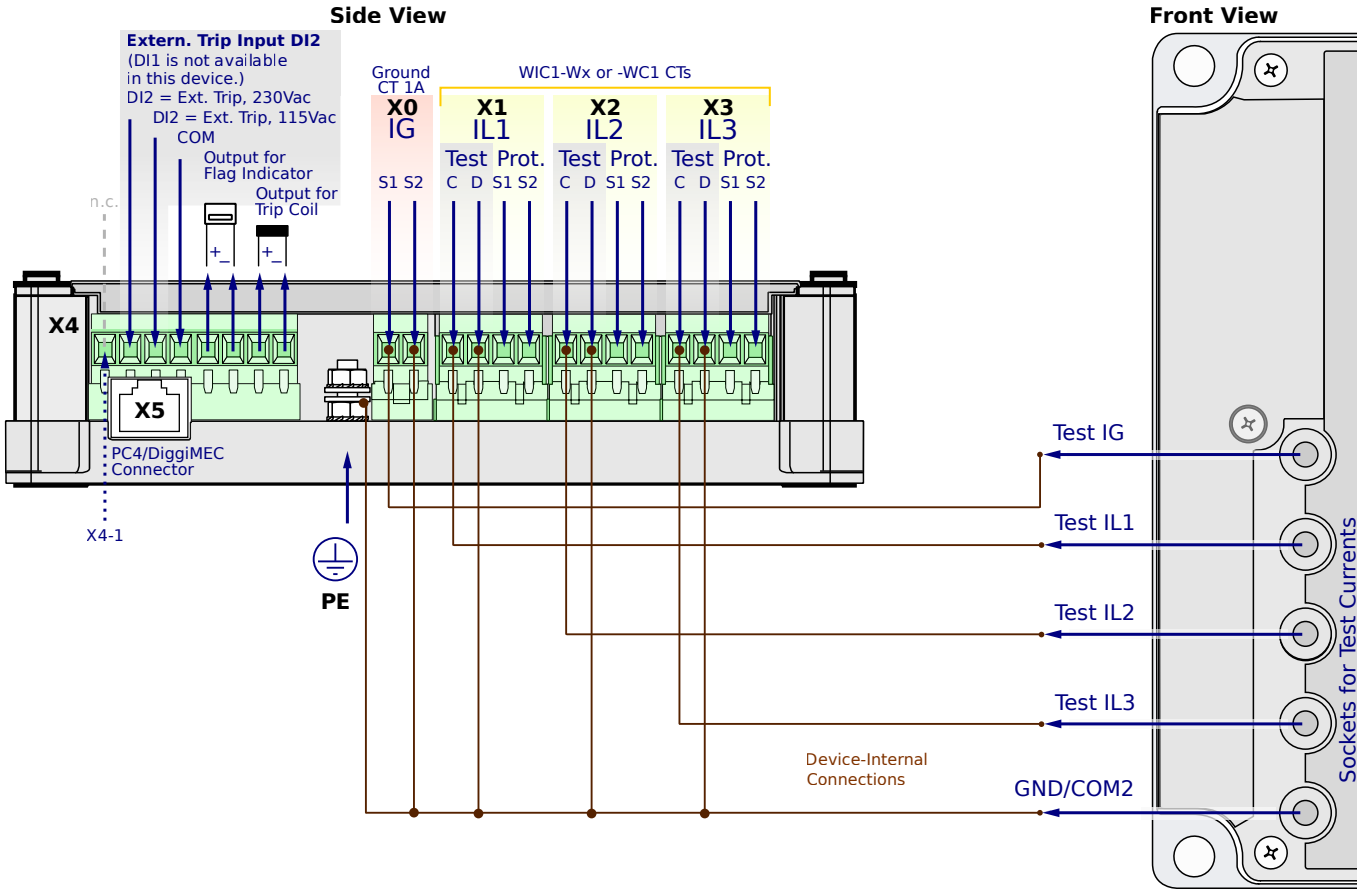


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2SA0

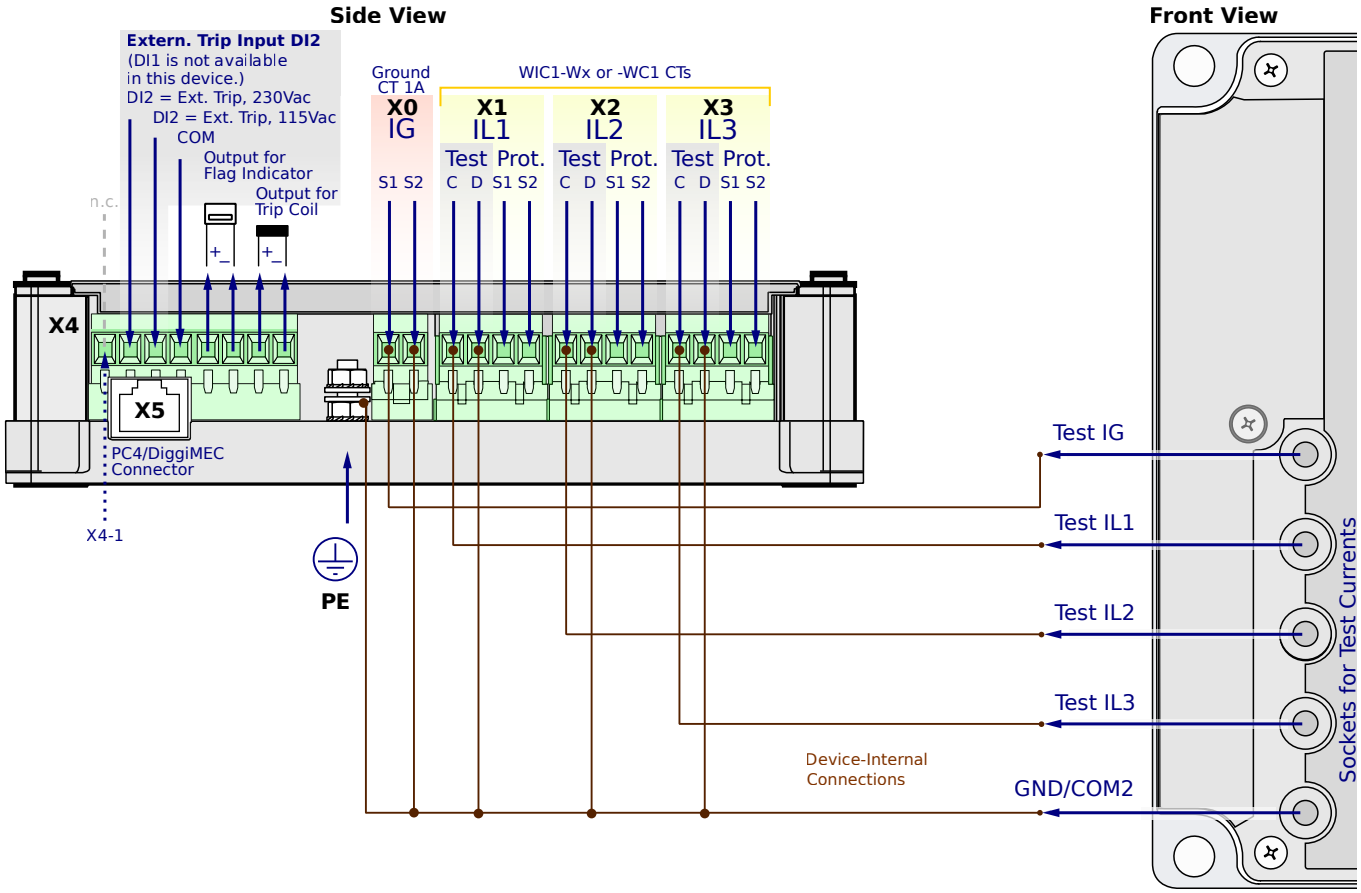


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2SAH

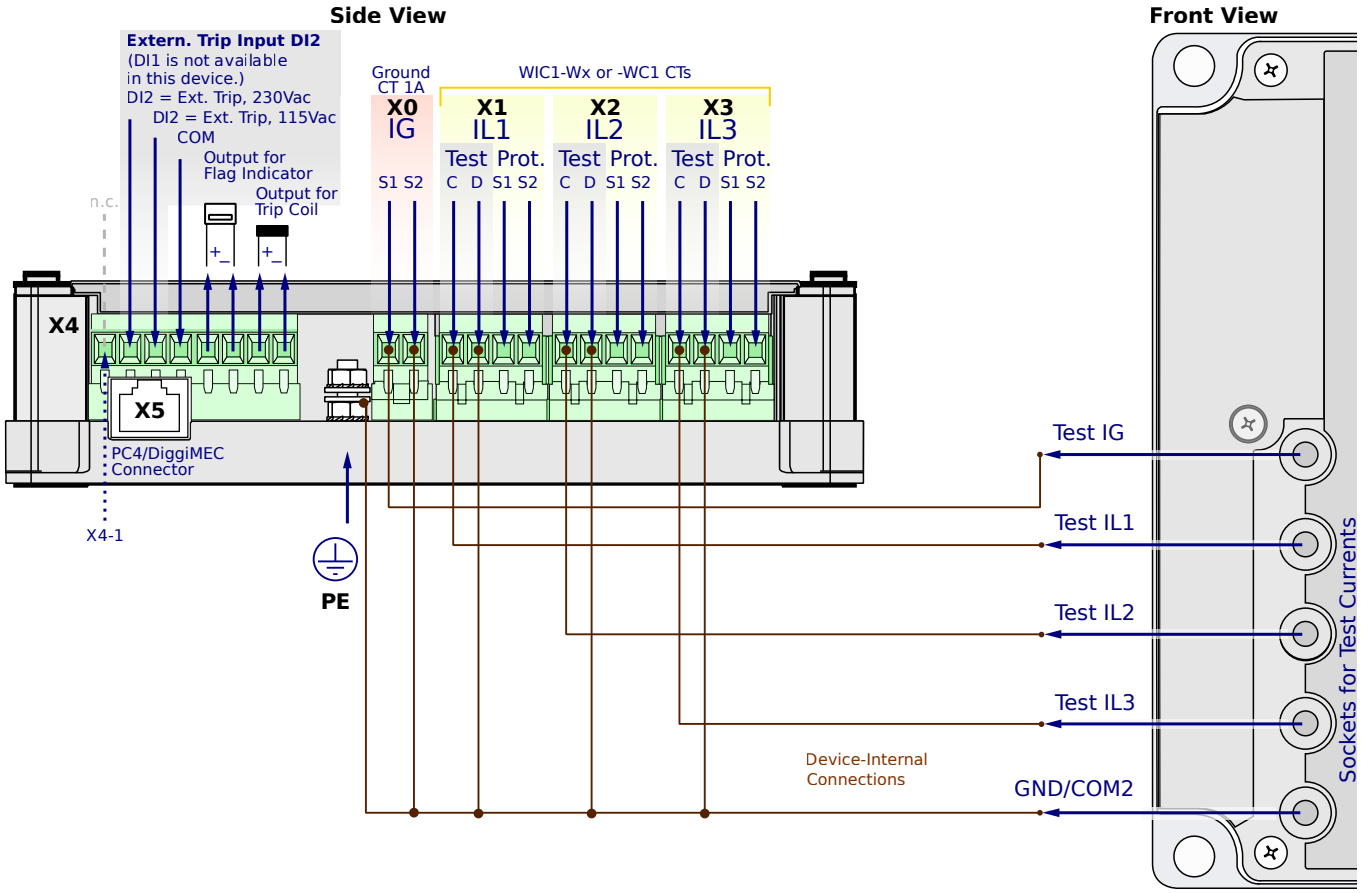


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2AA0

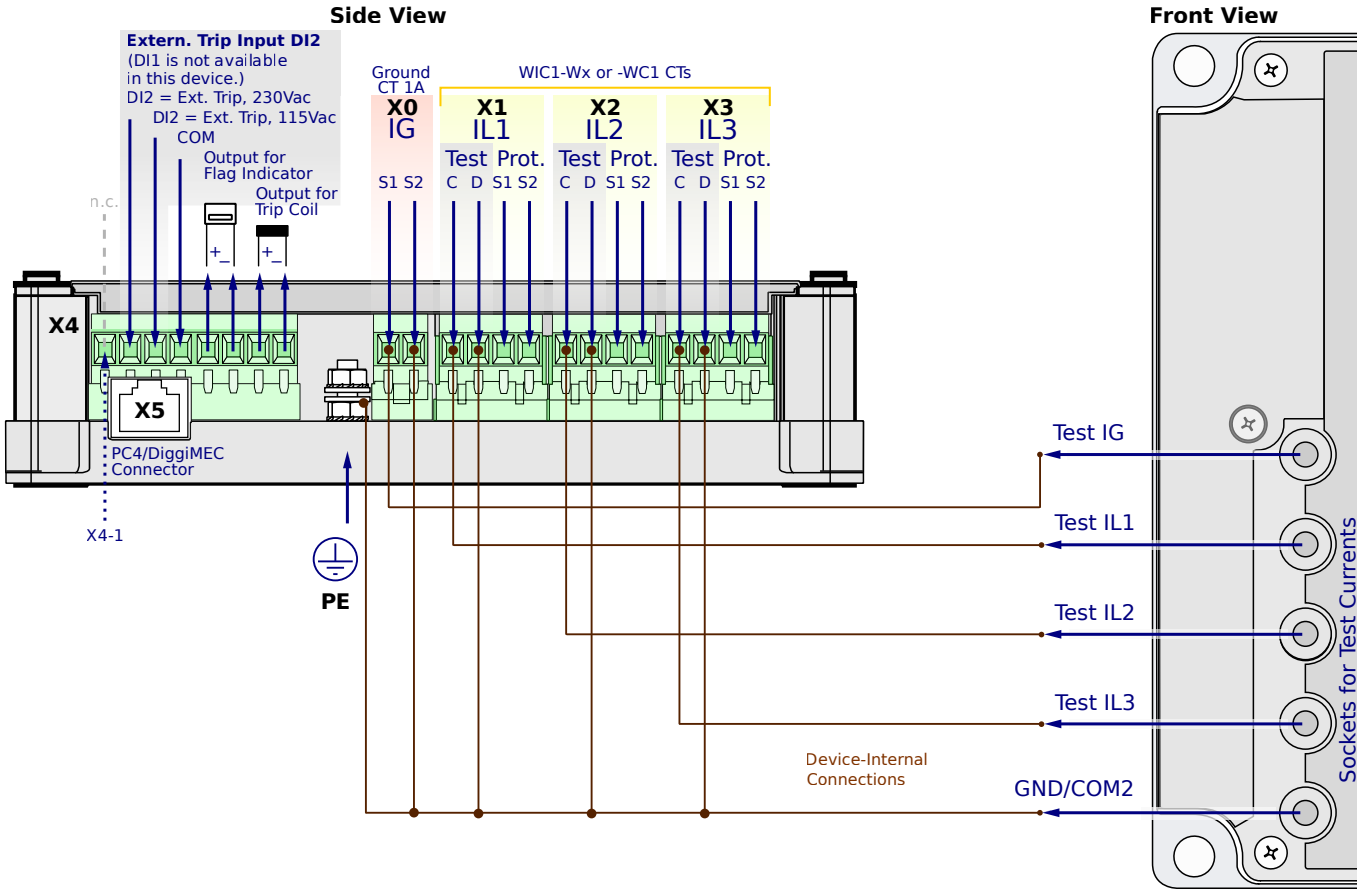


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2AAH

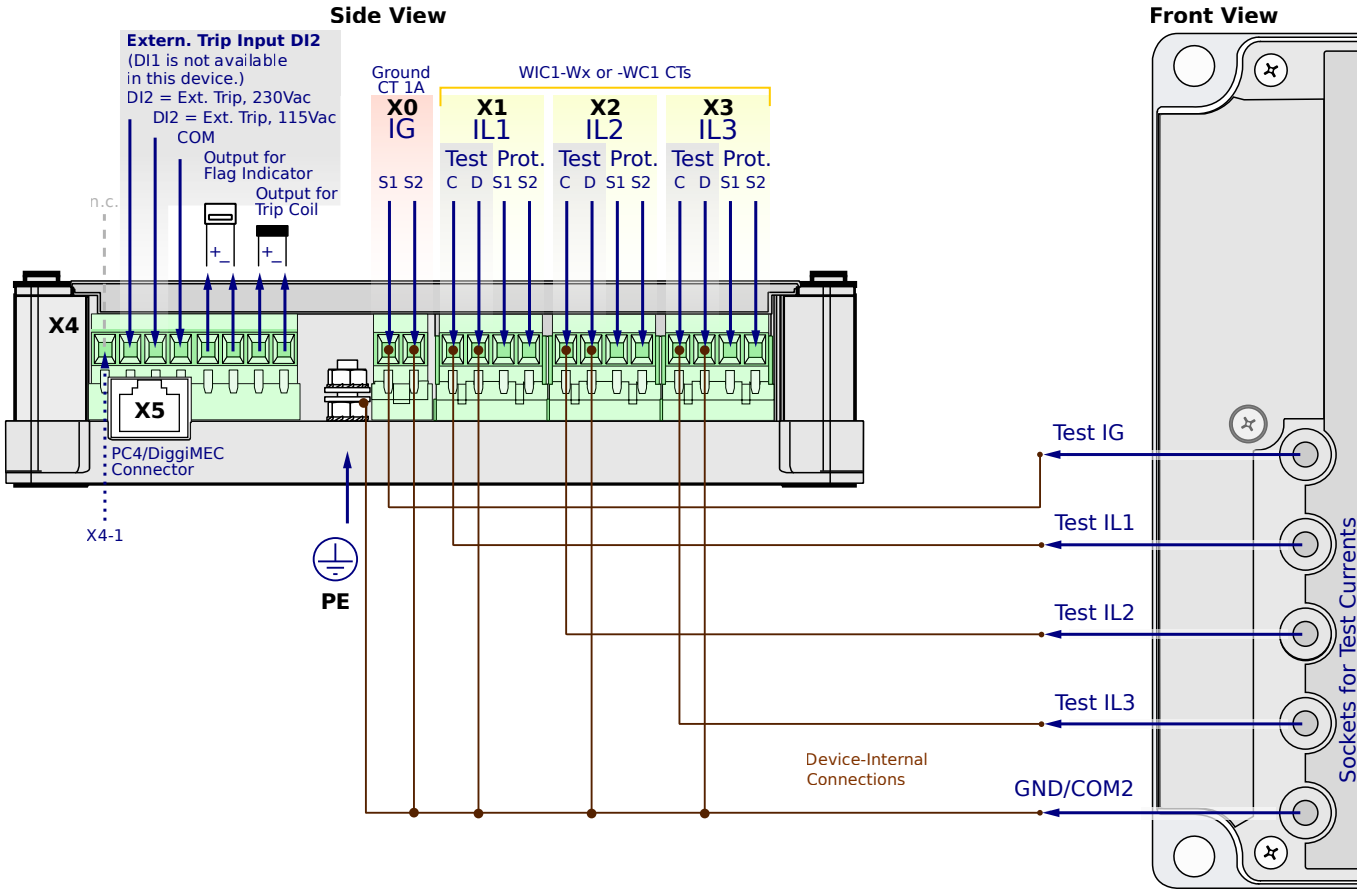


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2PA0

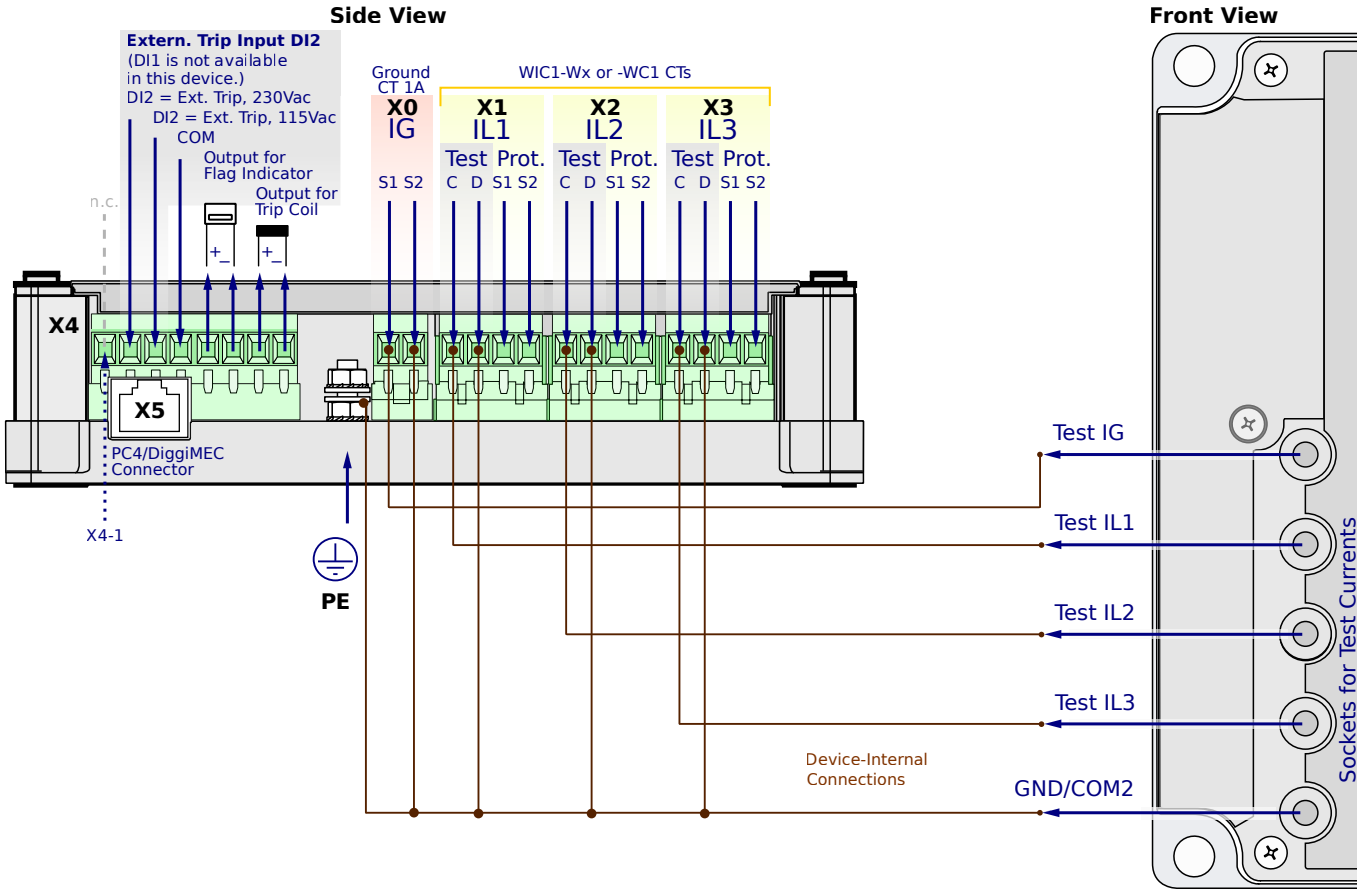


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FF2PAH

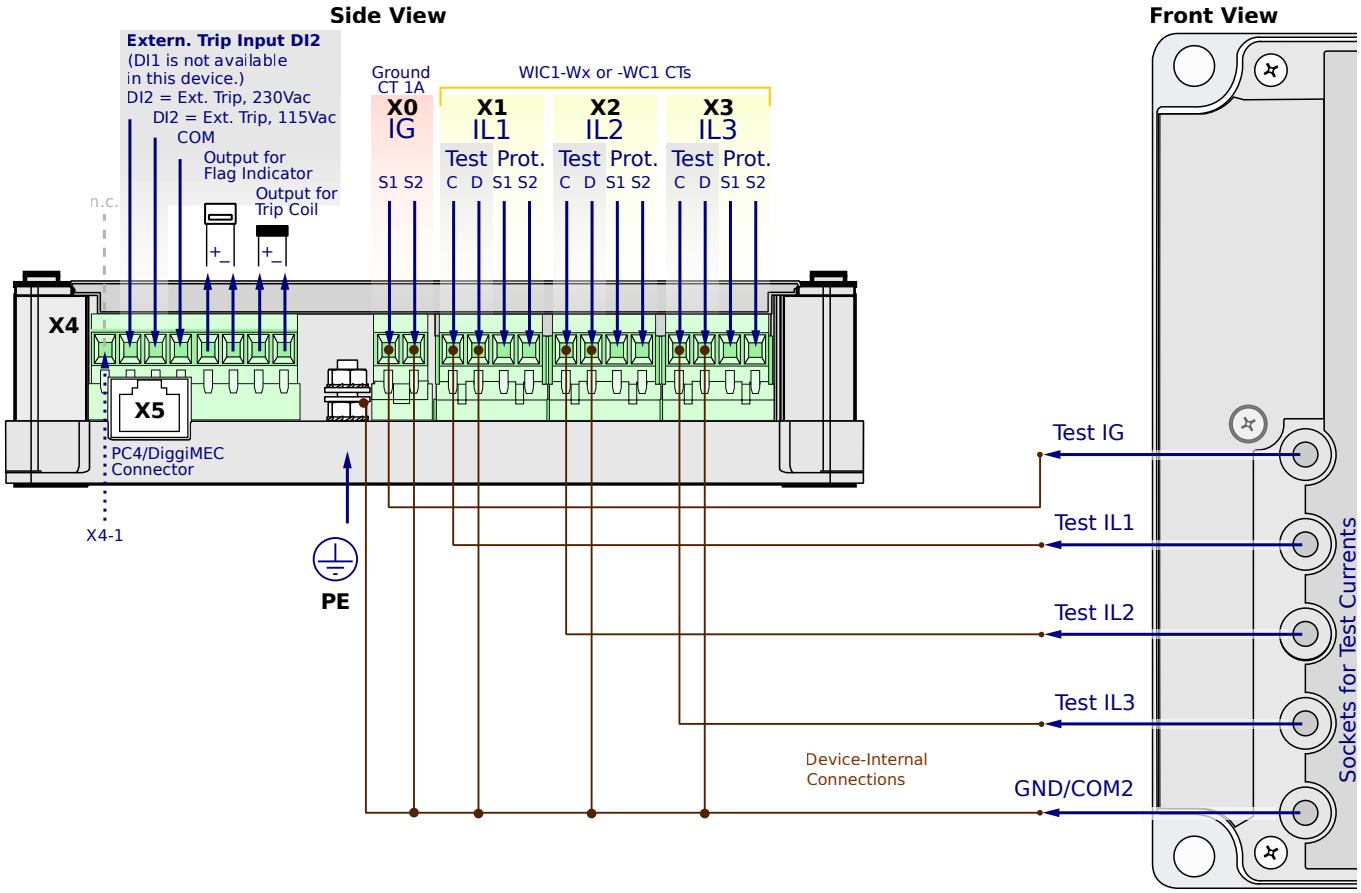


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1SA0

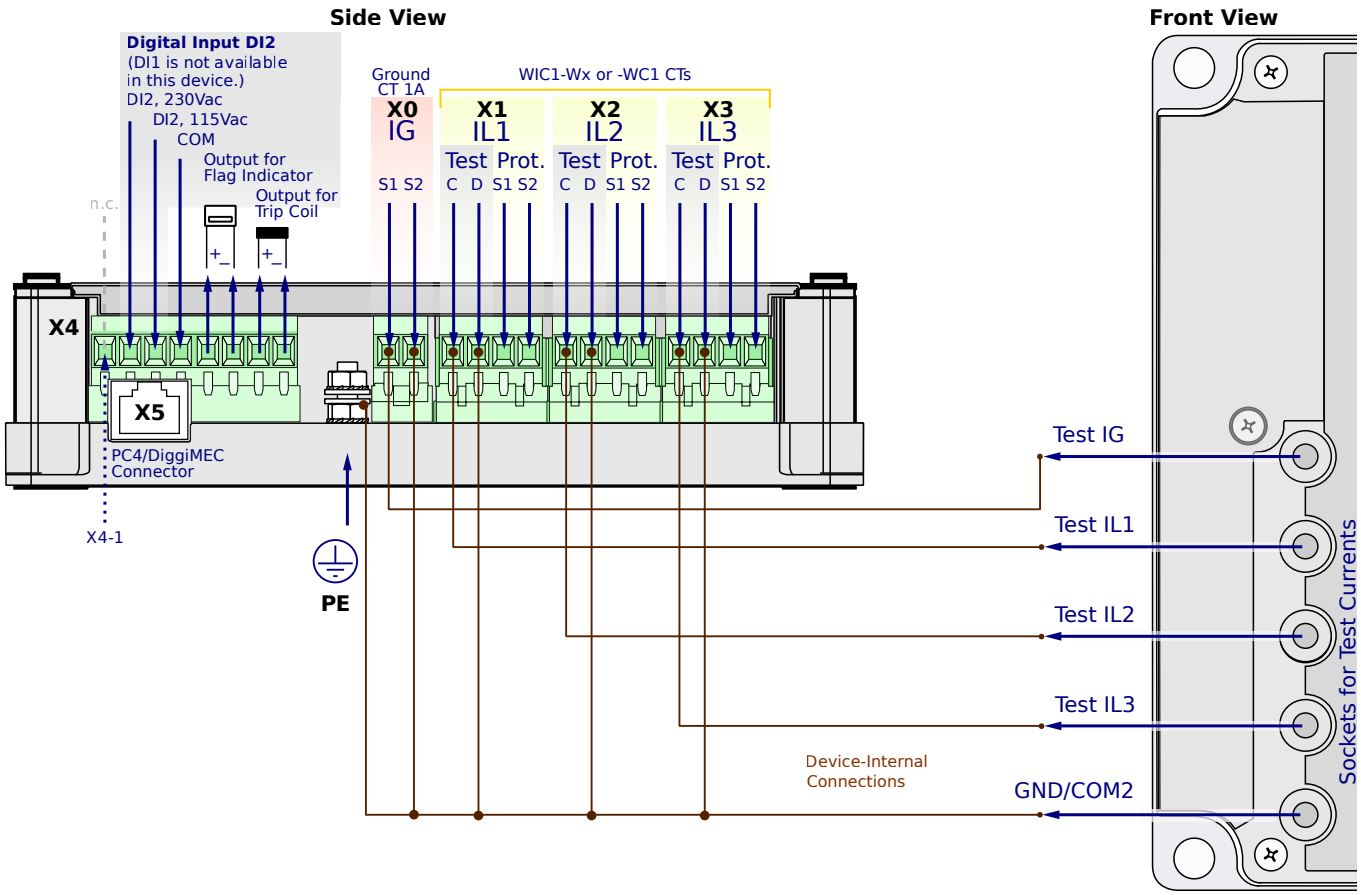


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1SAH

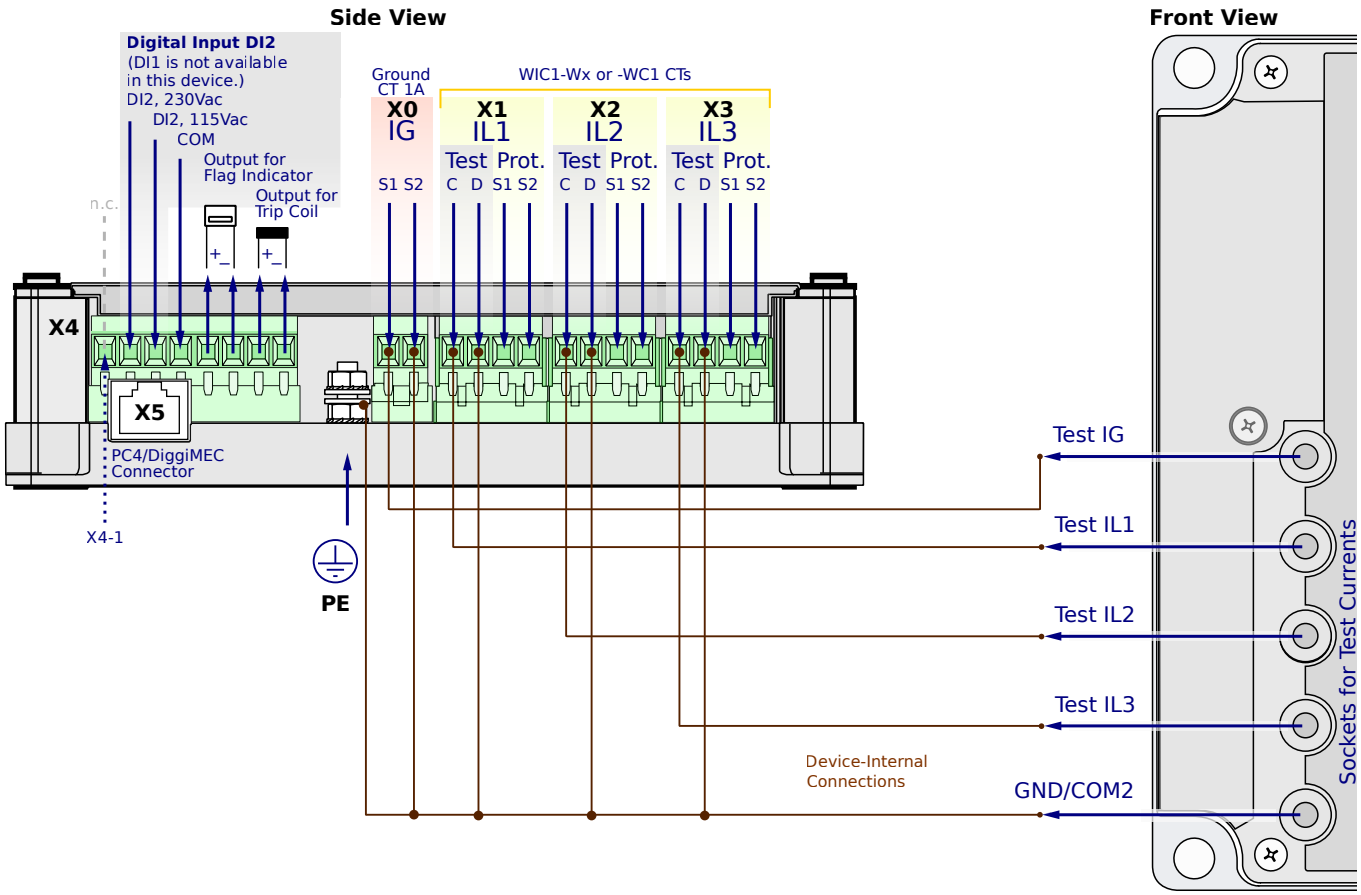


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1AA0

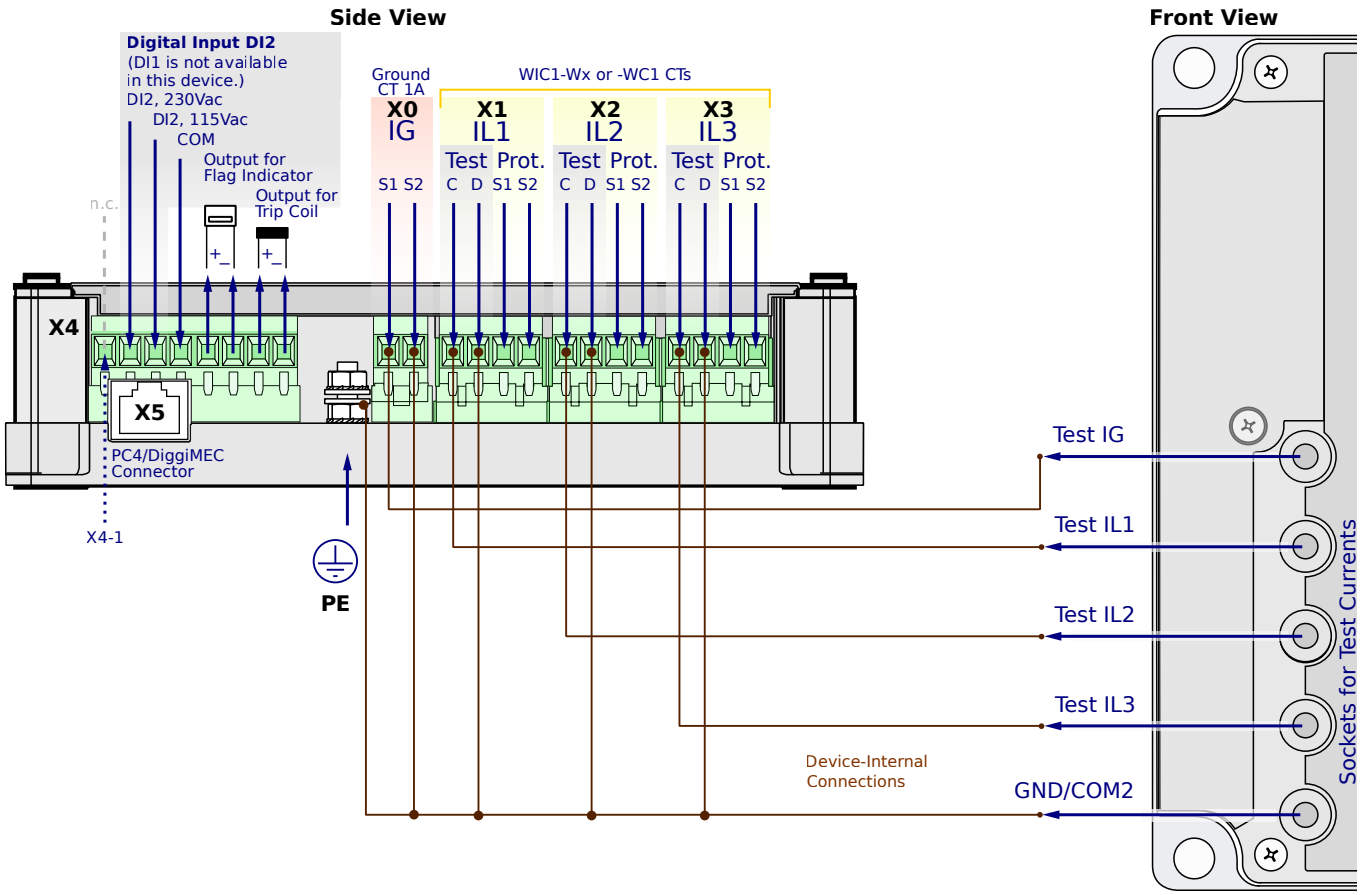


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1AAH

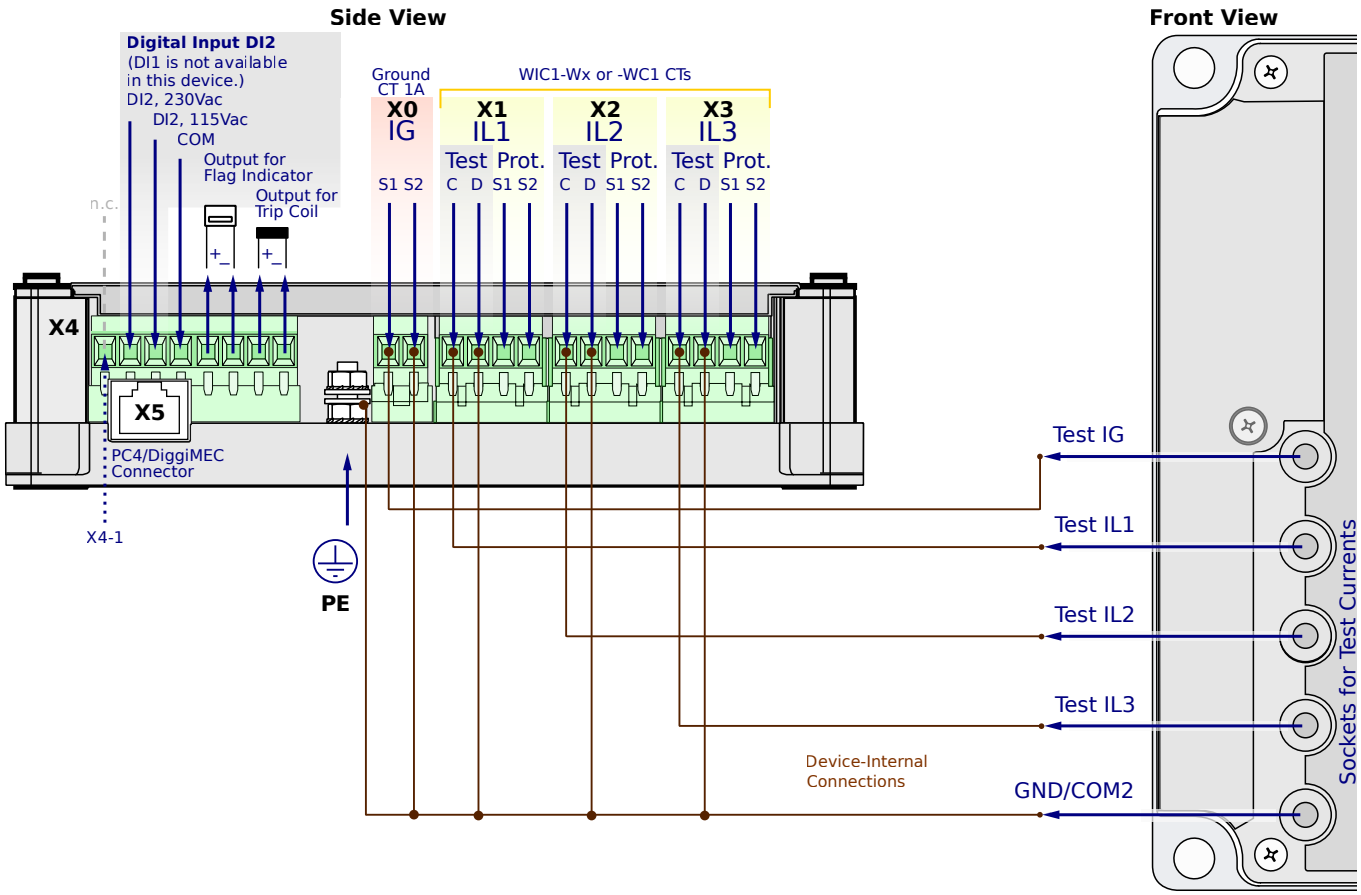


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1PA0

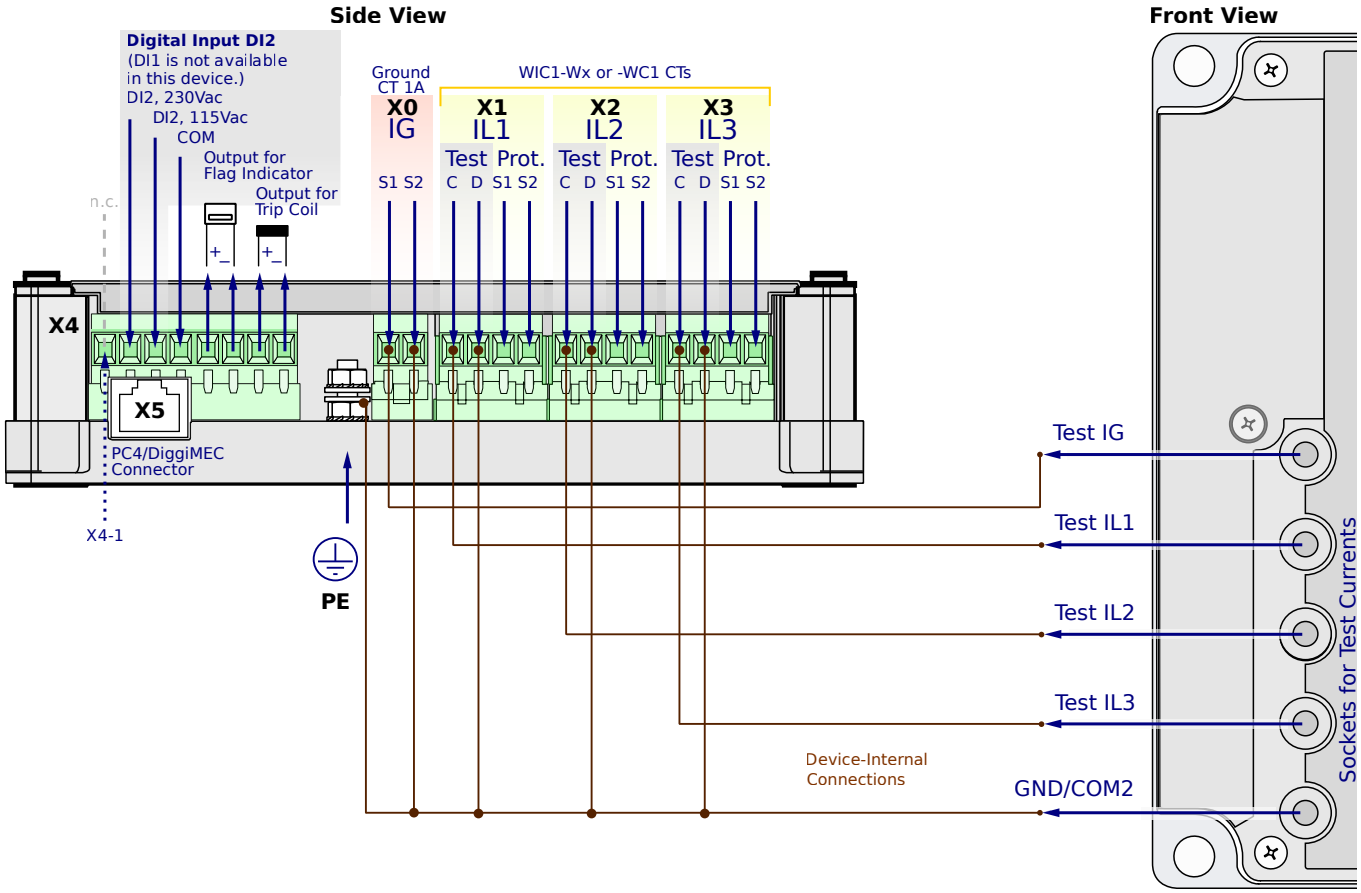


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC1PAH

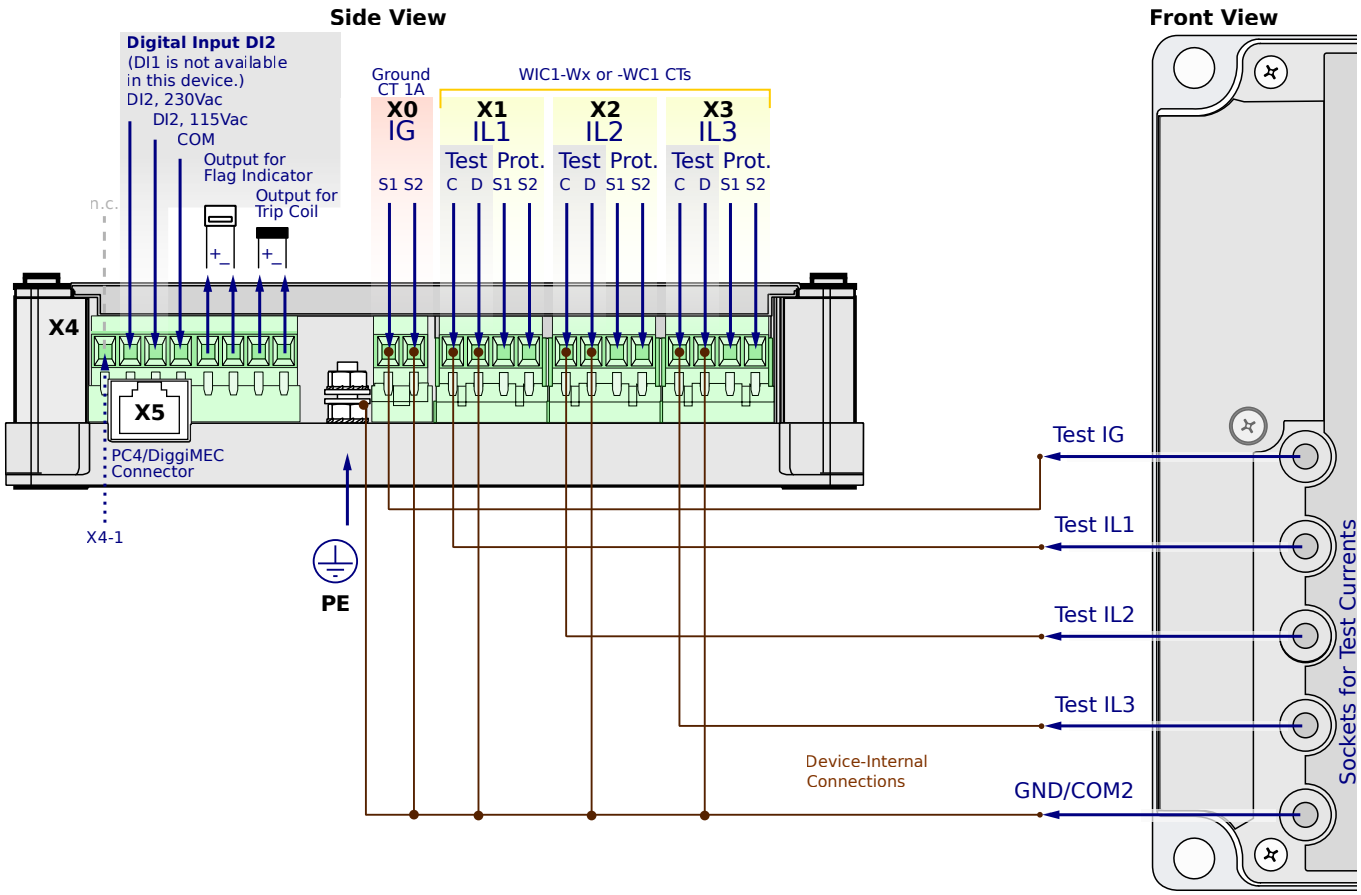


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2SA0

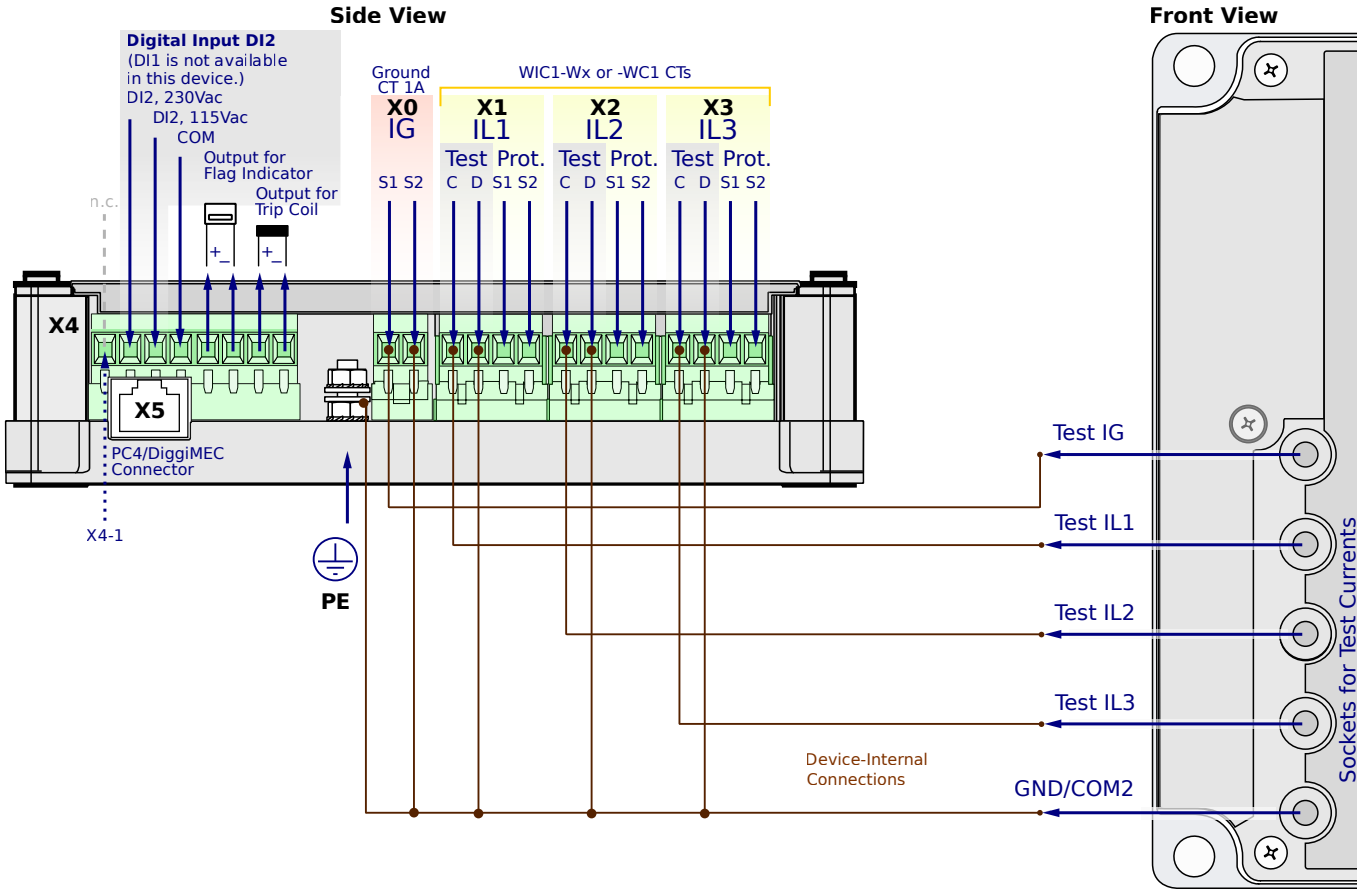


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2SAH

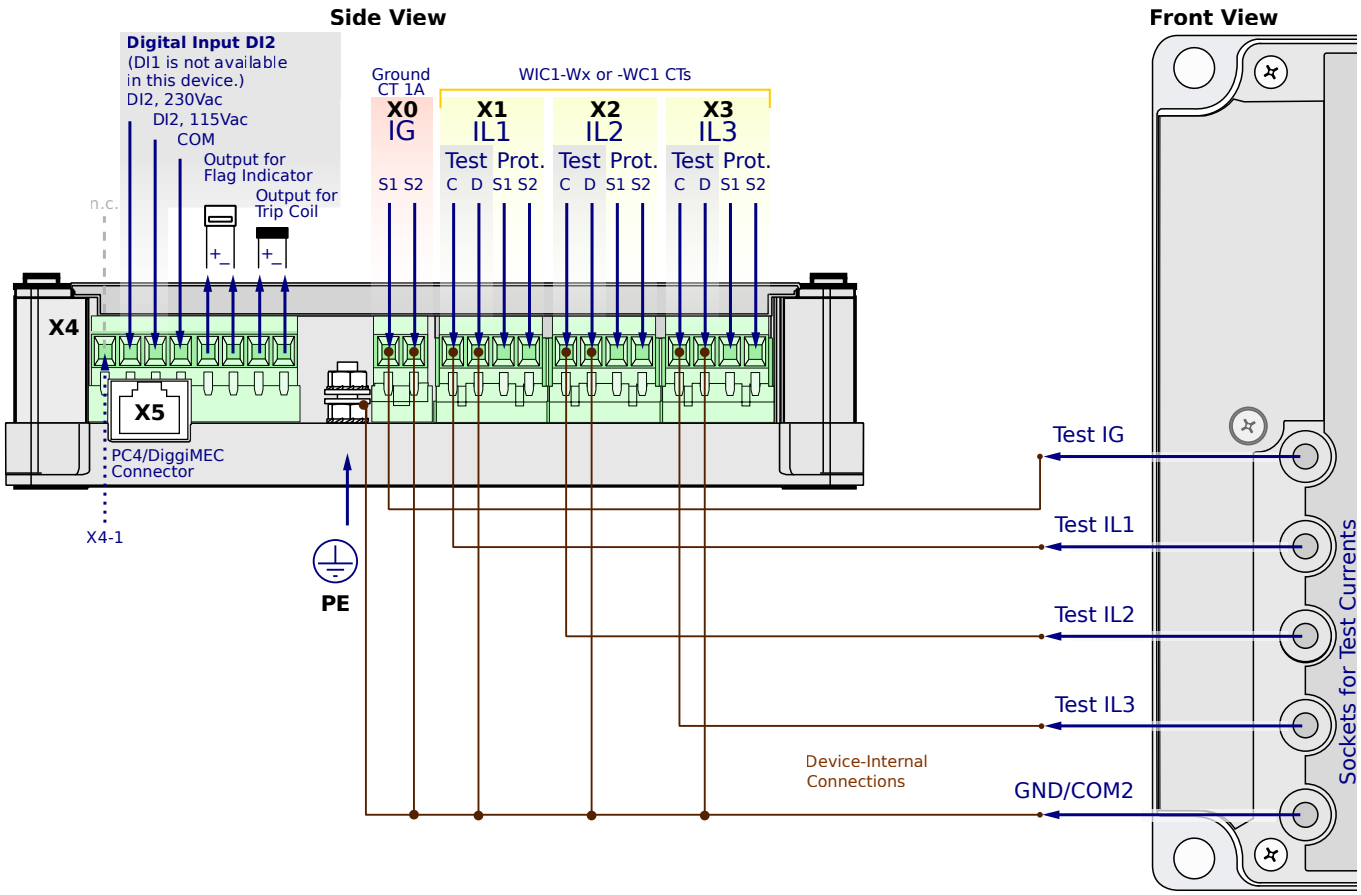


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2AA0

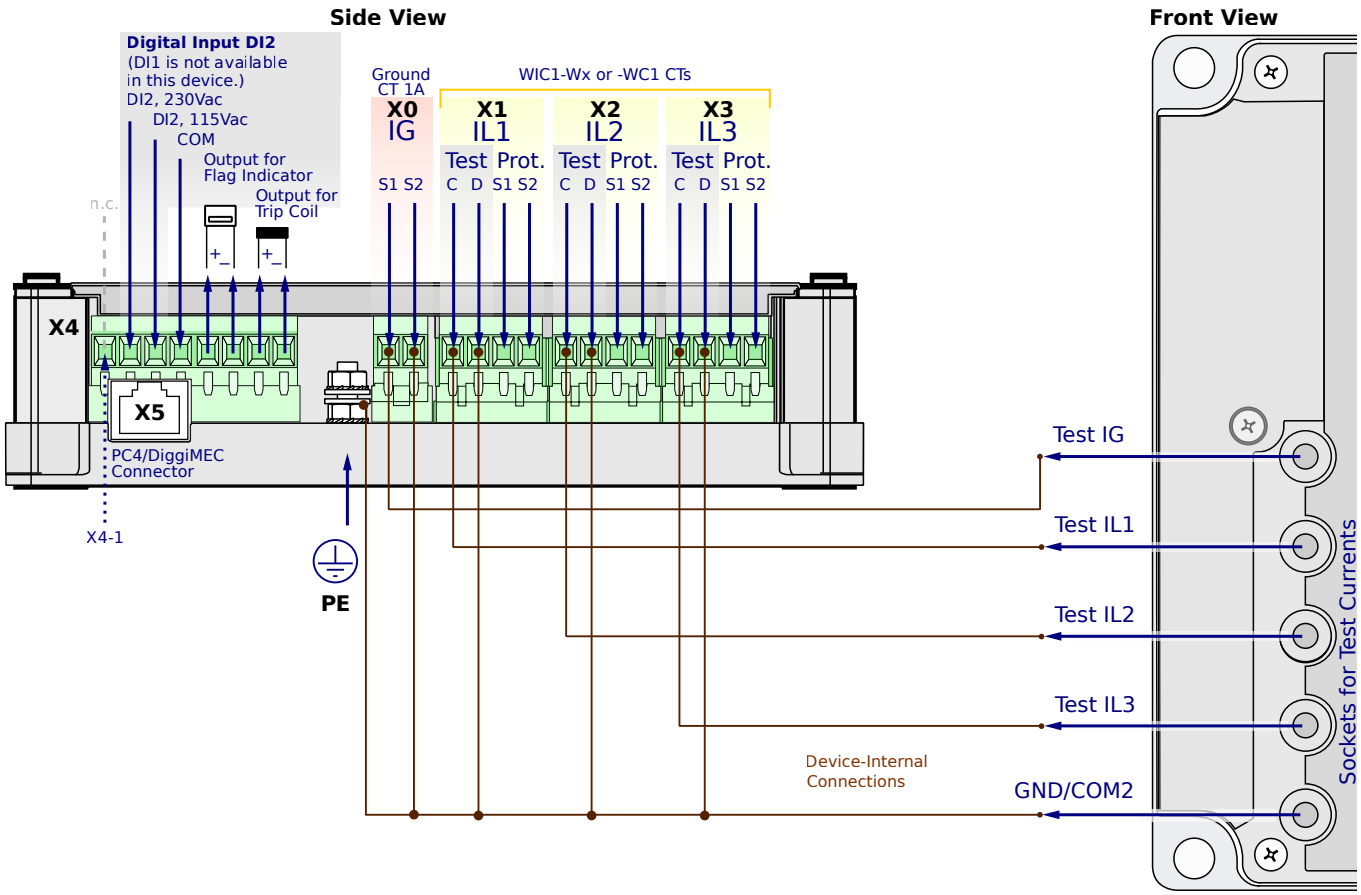


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2AAH

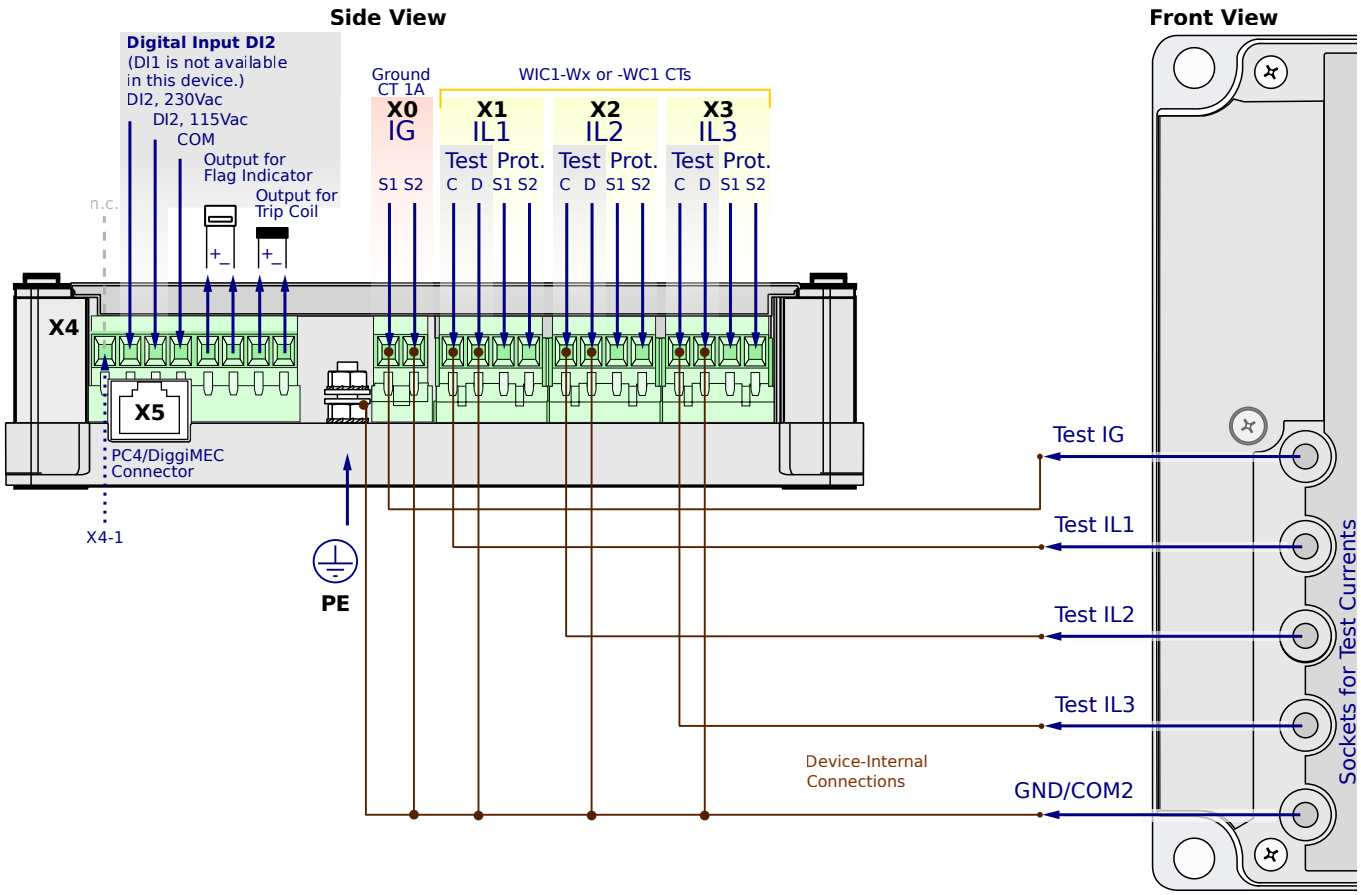


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2PA0

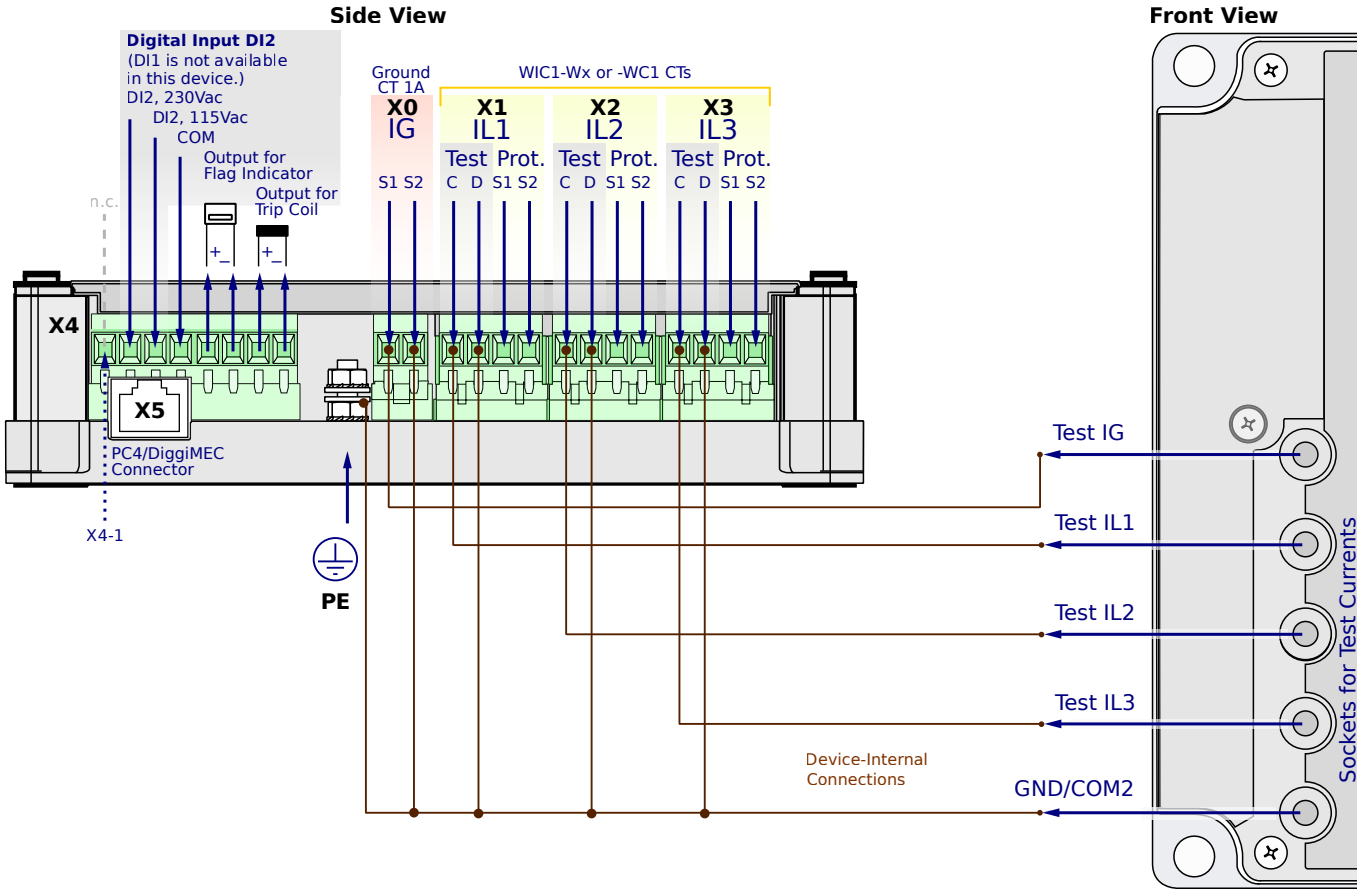


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5FC2PAH

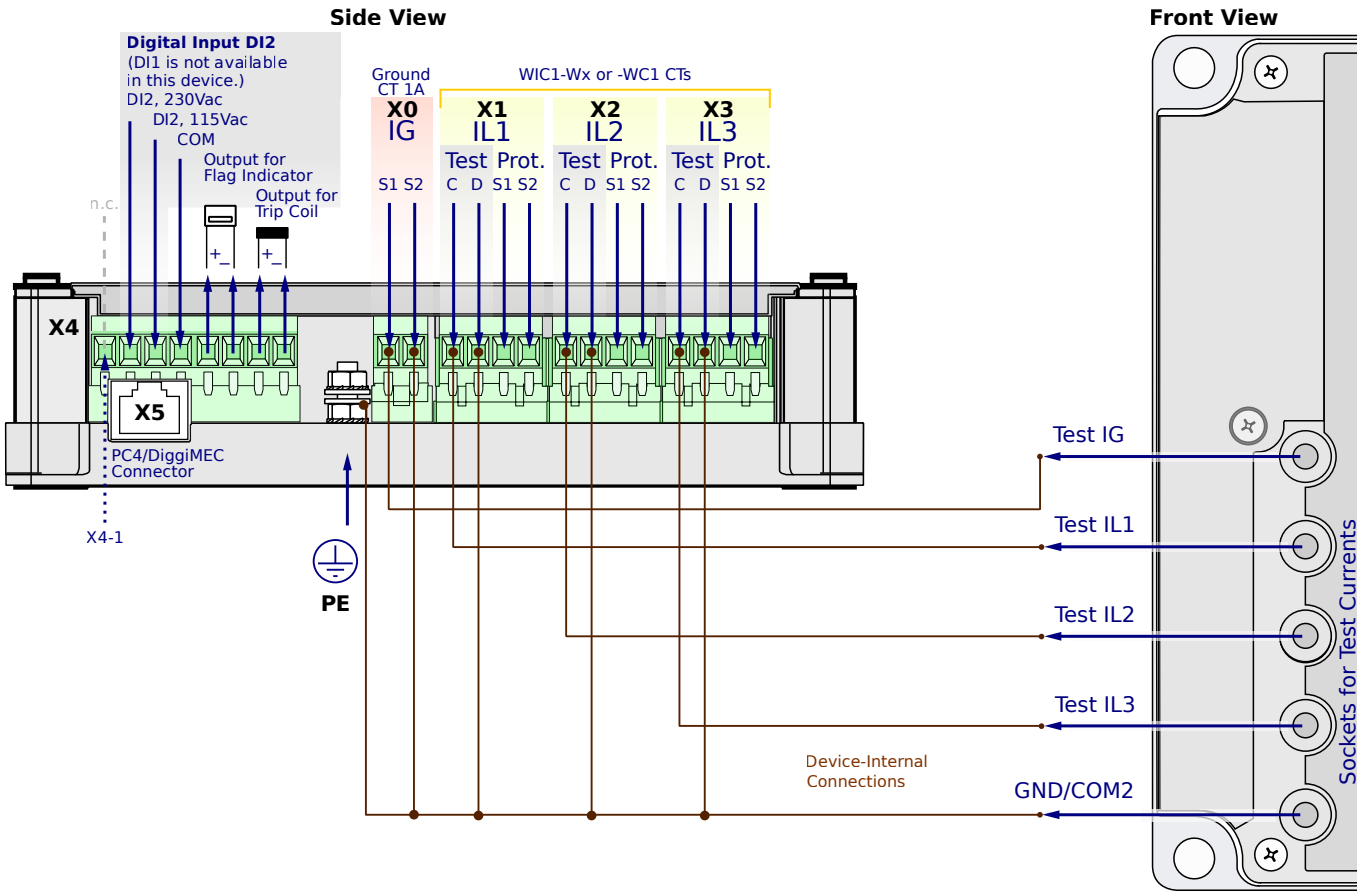


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1SA0

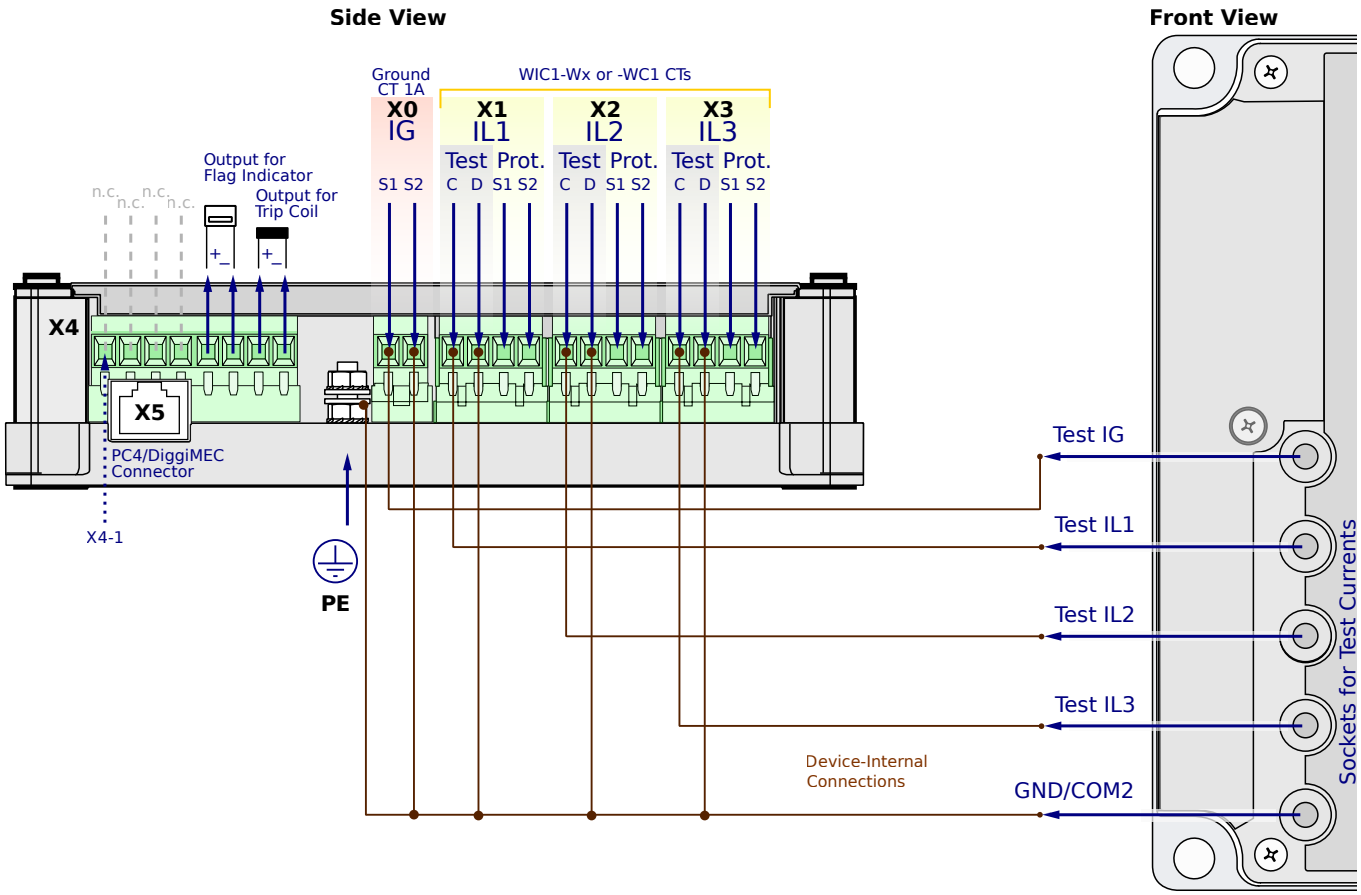


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1SAH

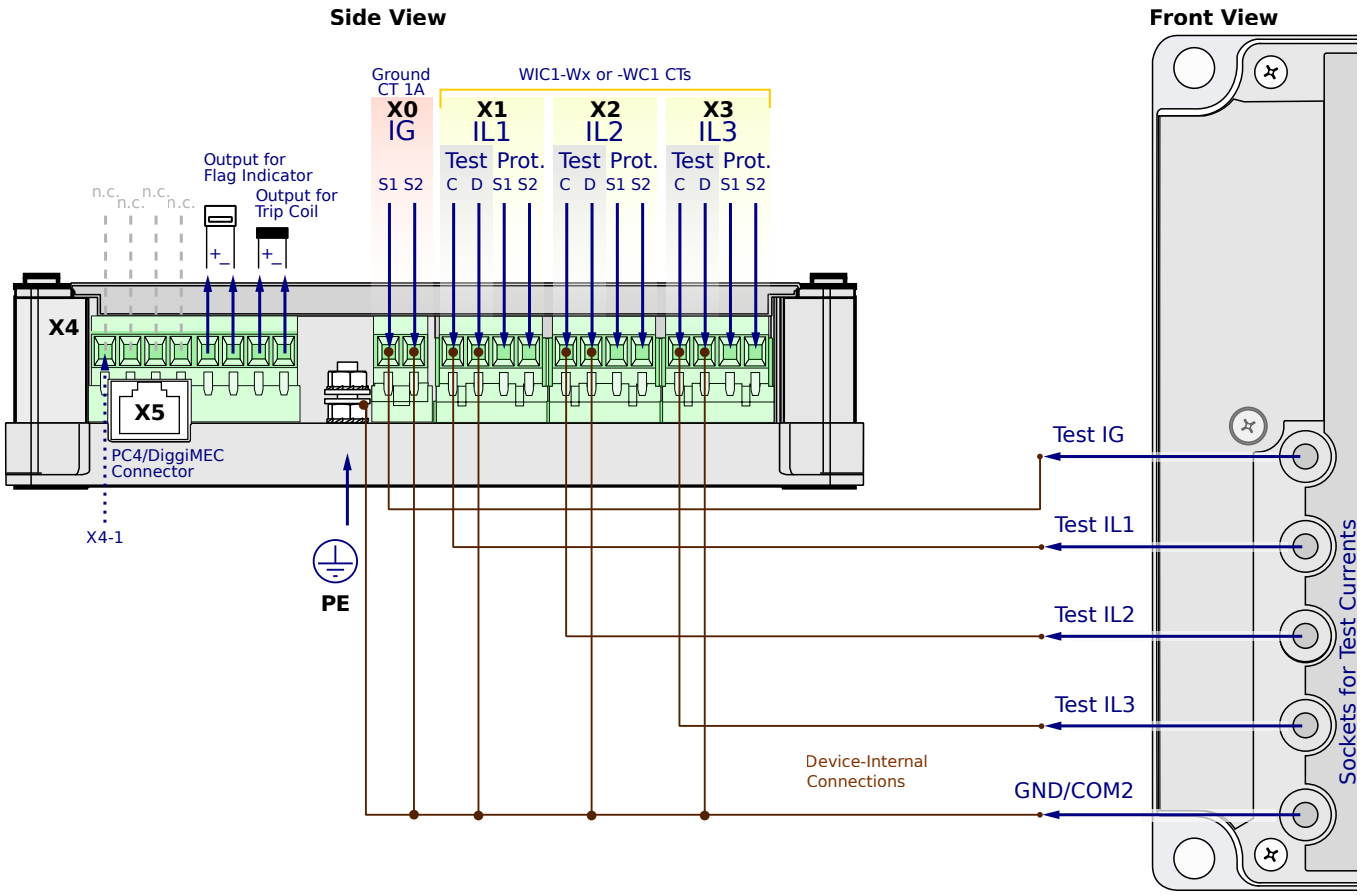


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1AA0

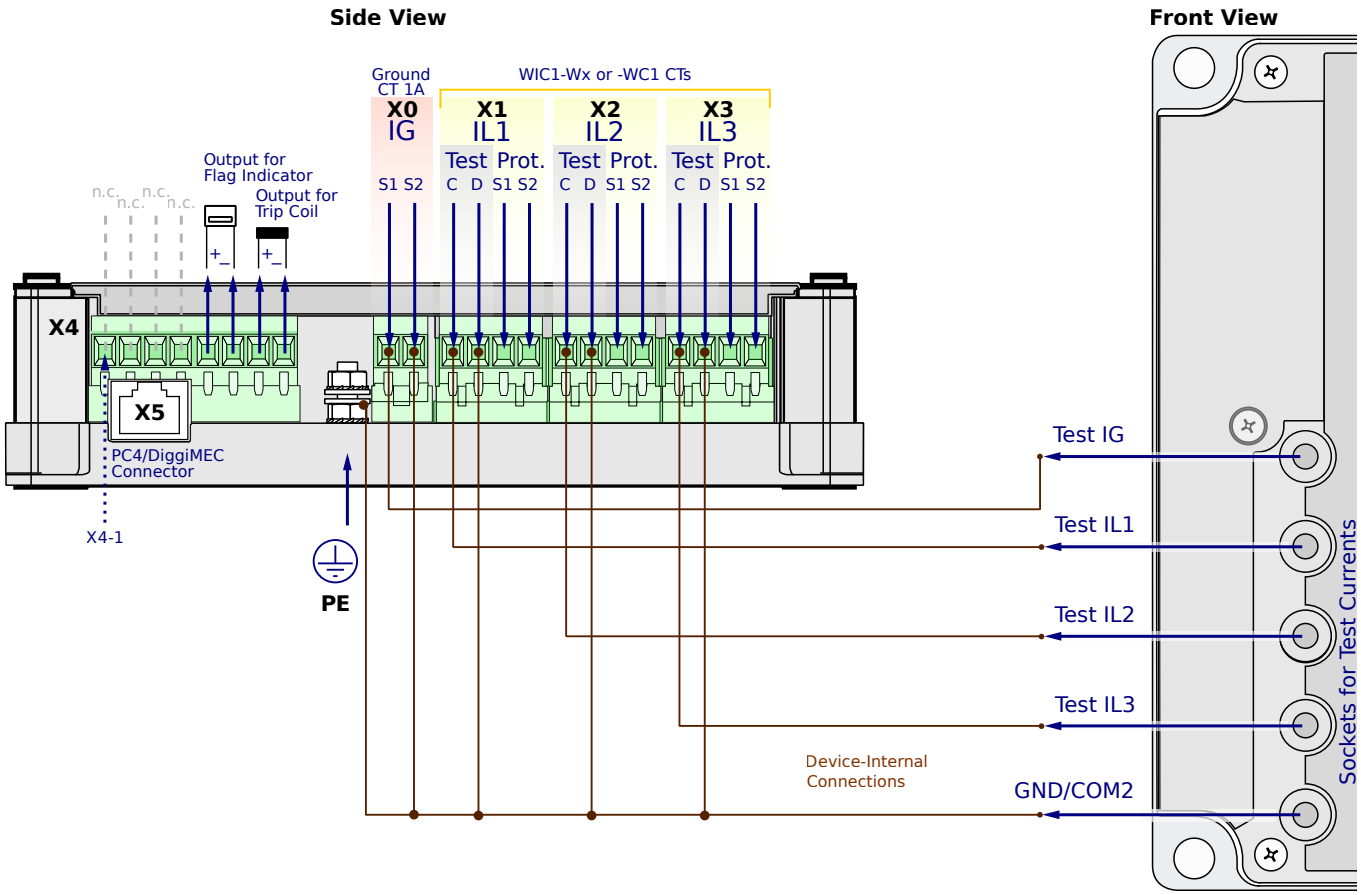


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1AAH

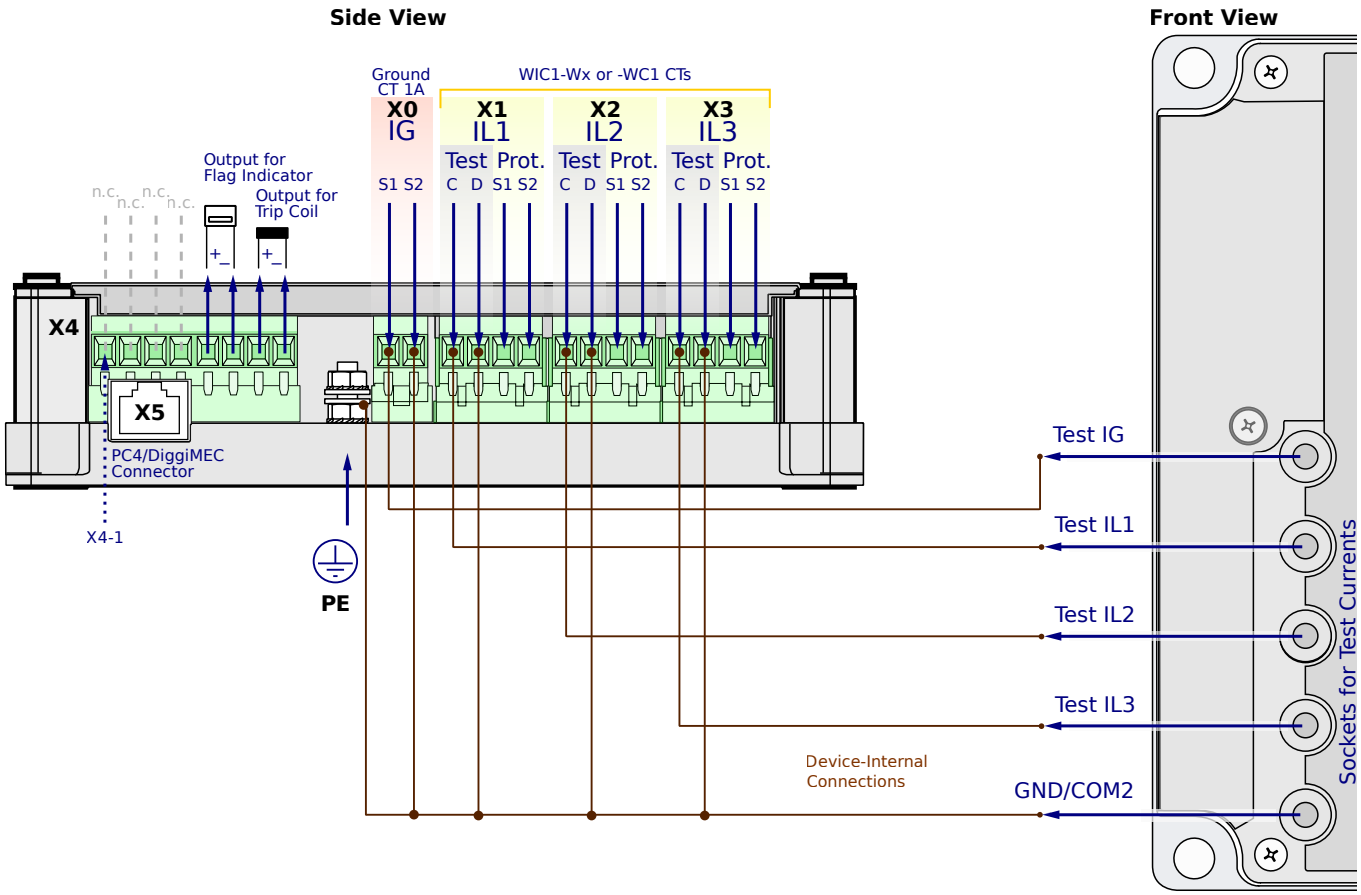


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1PA0

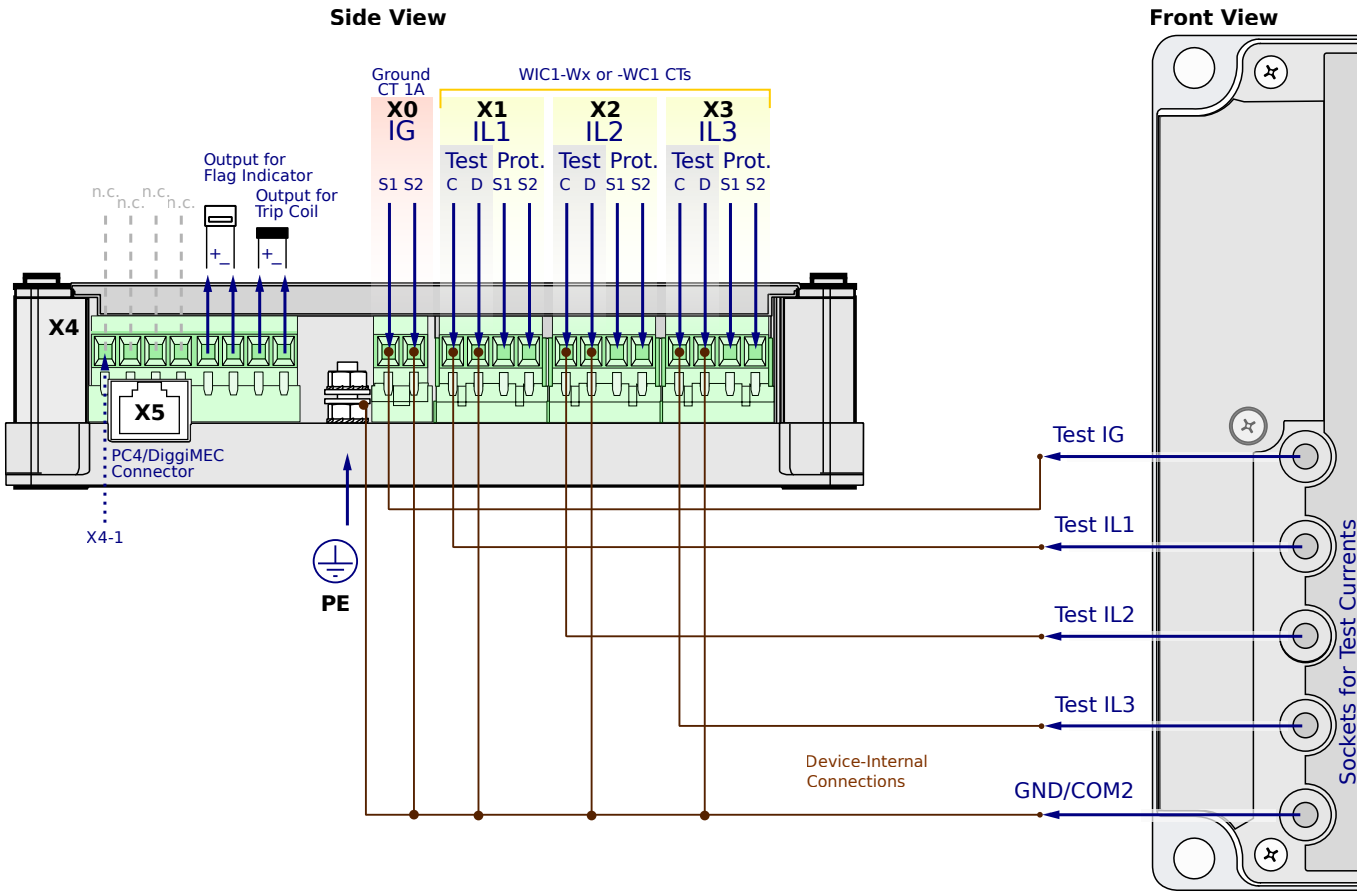


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN1PAH

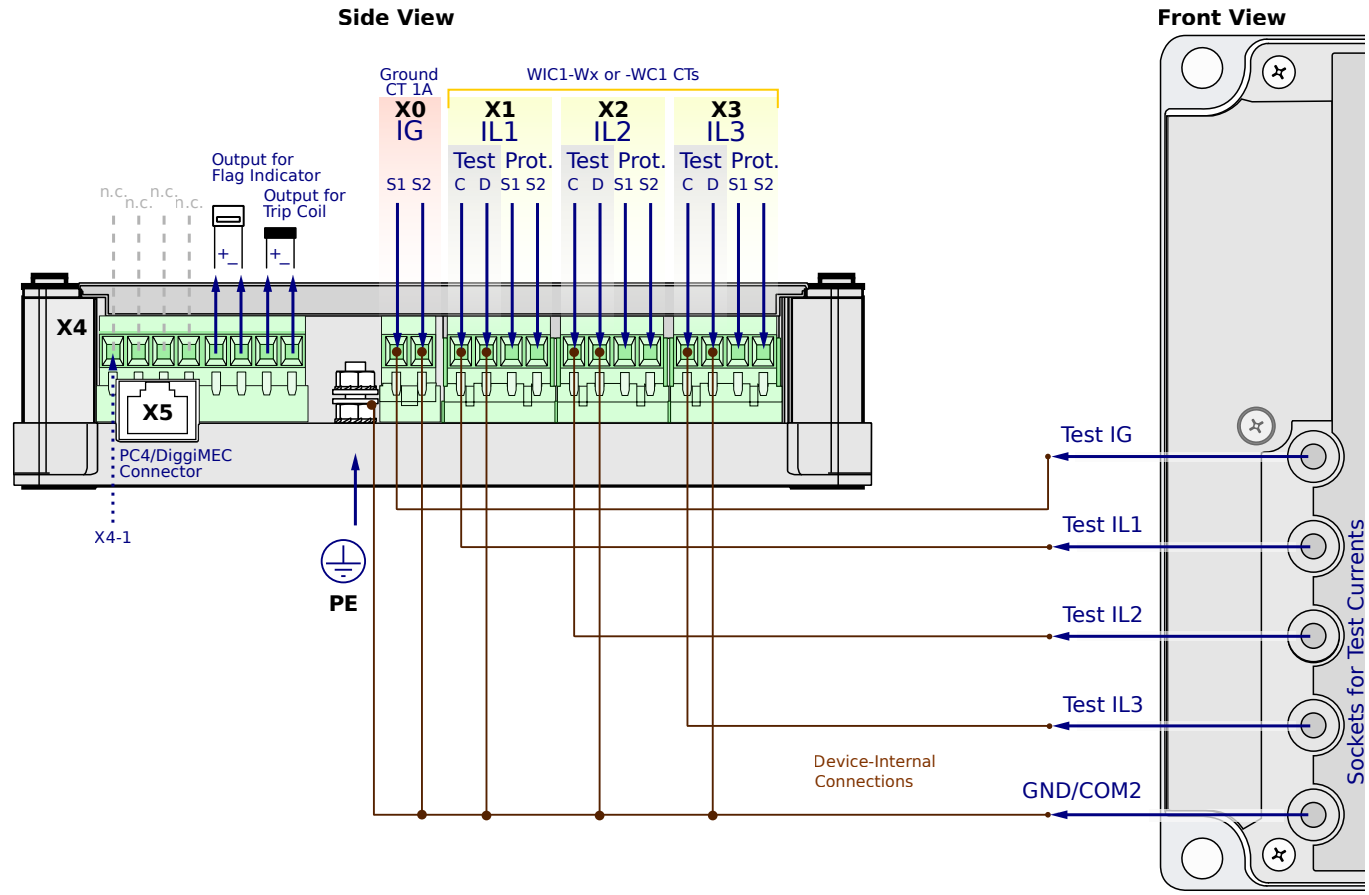


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2SA0

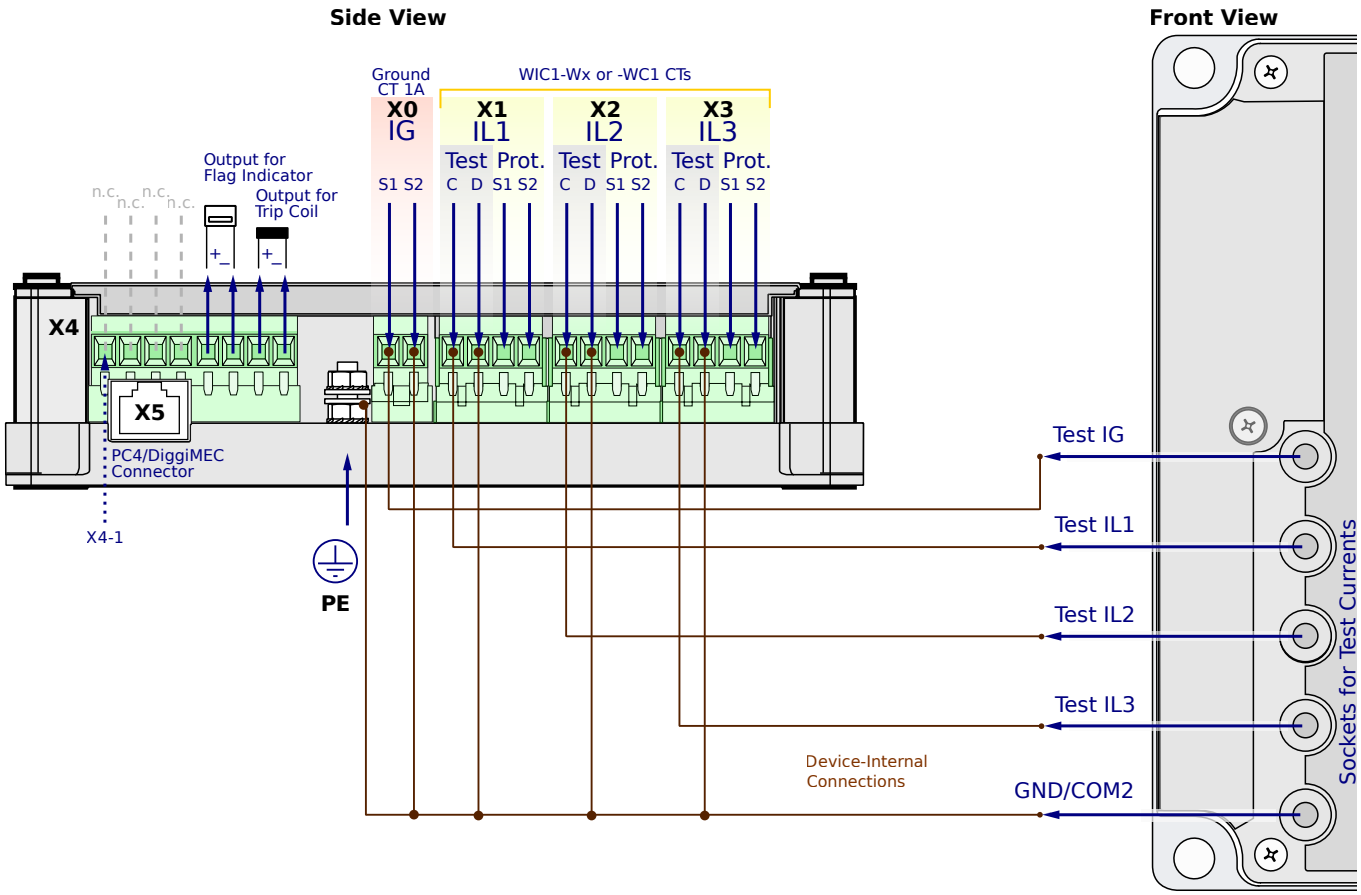


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2SAH

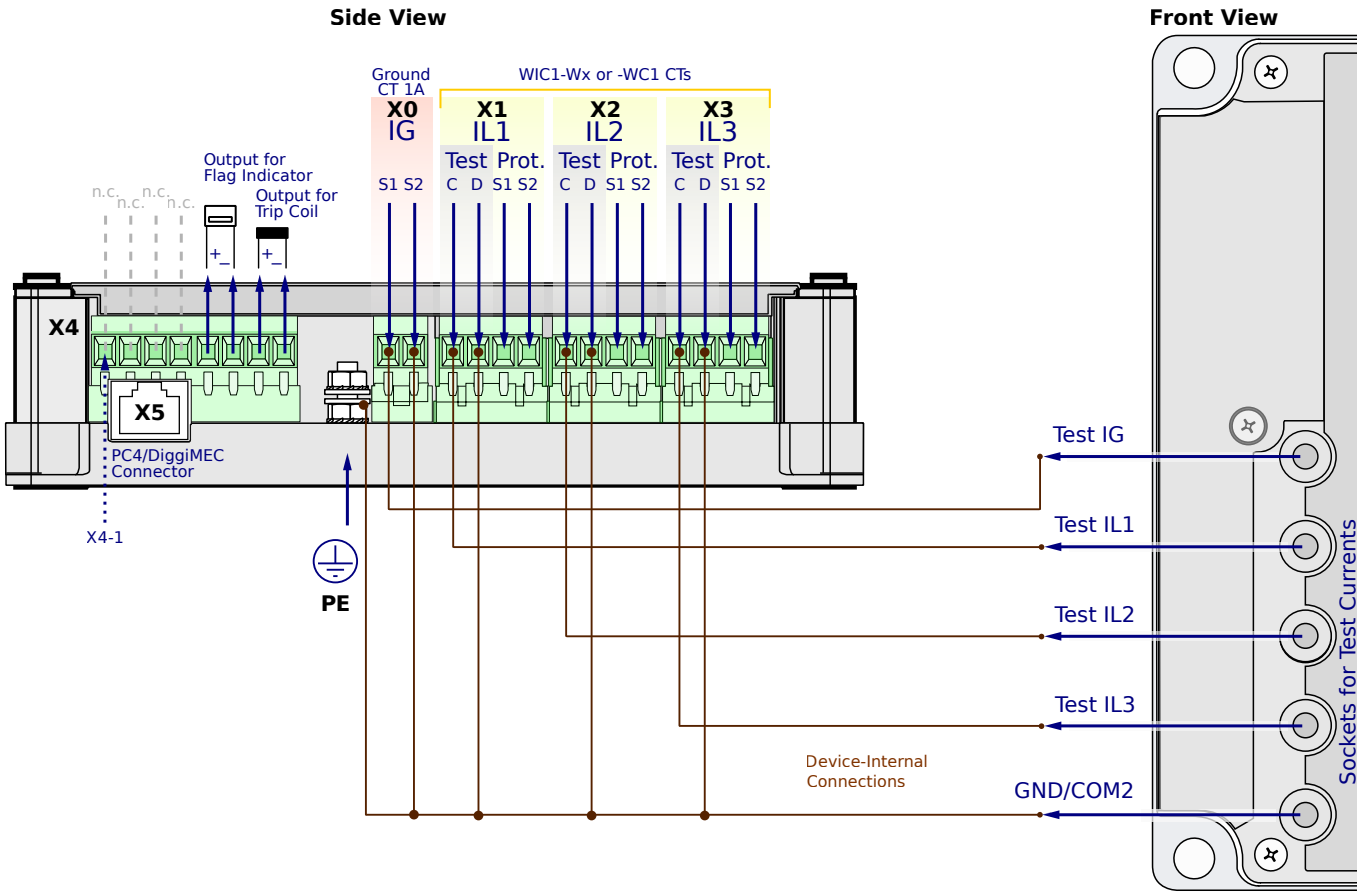


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2AA0

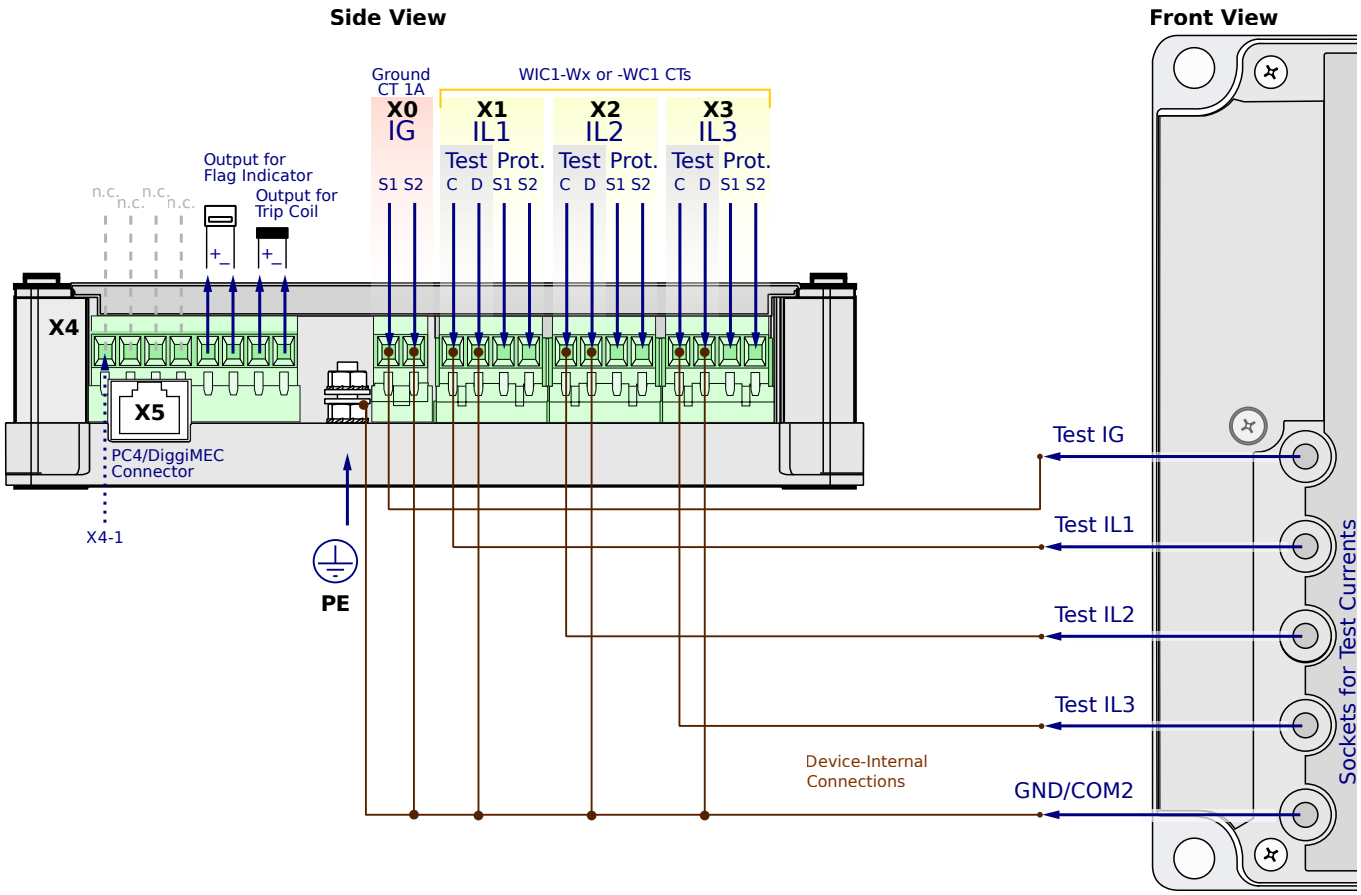


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2AAH

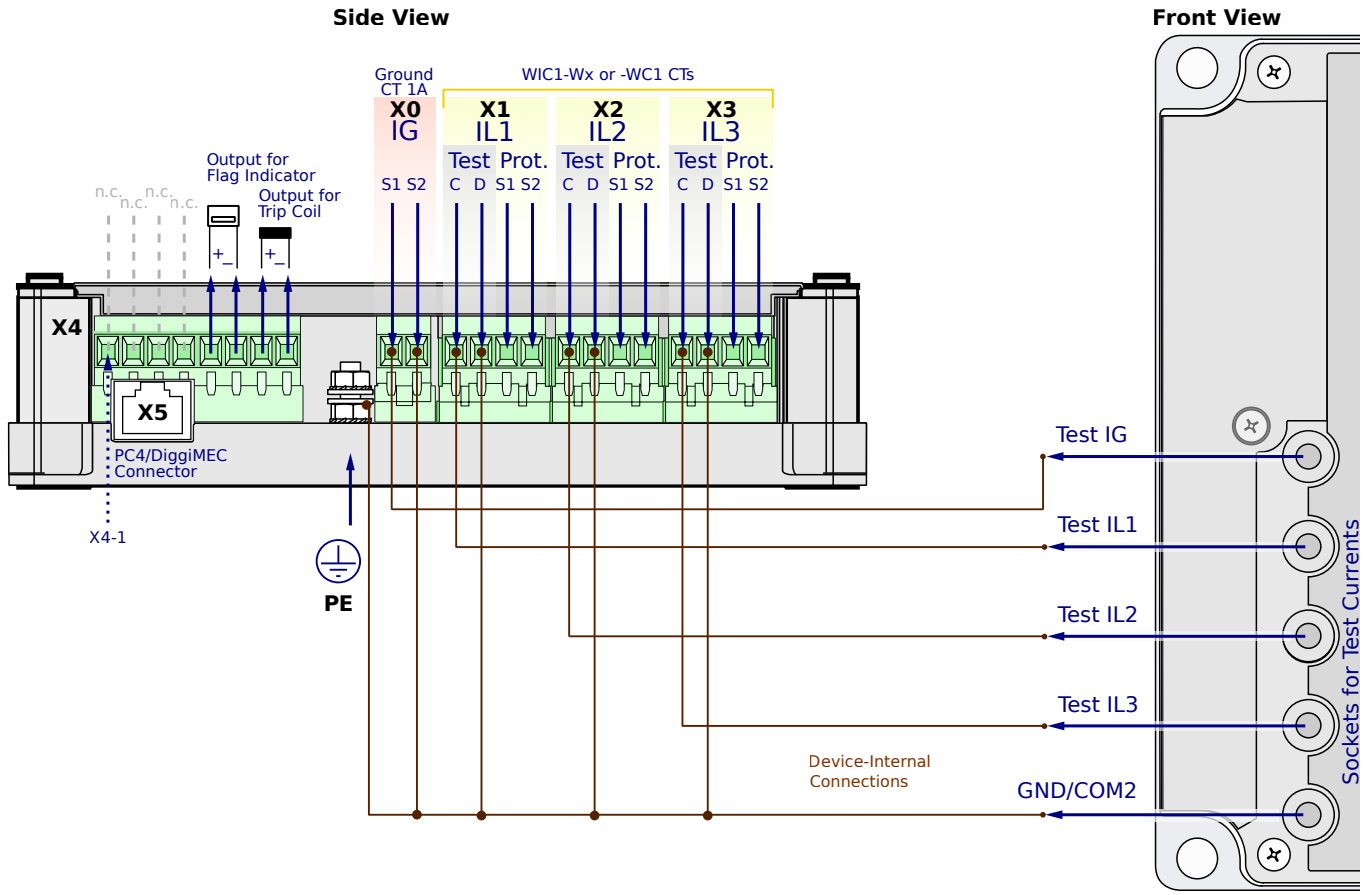


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2PA0

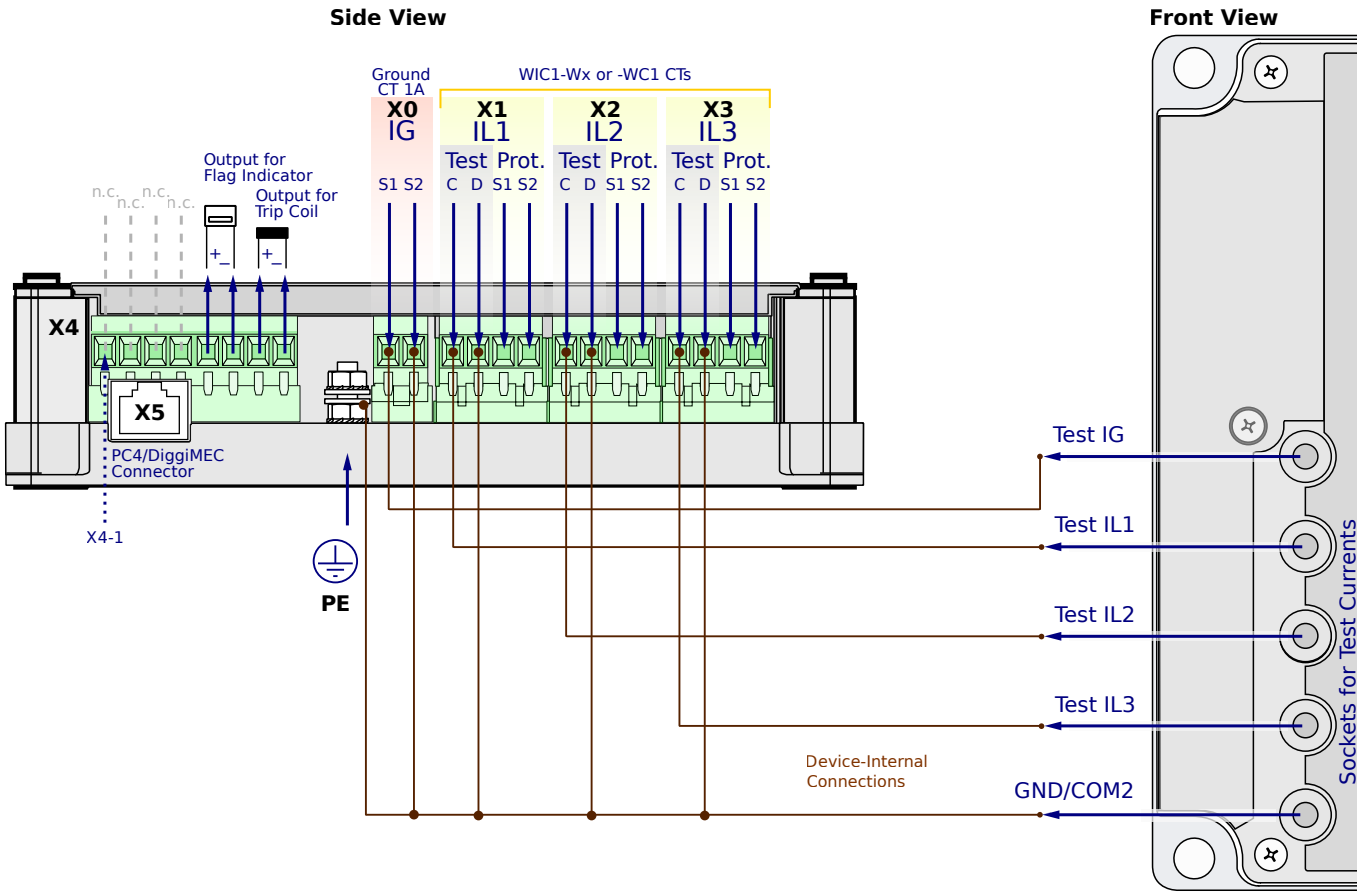


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CN2PAH

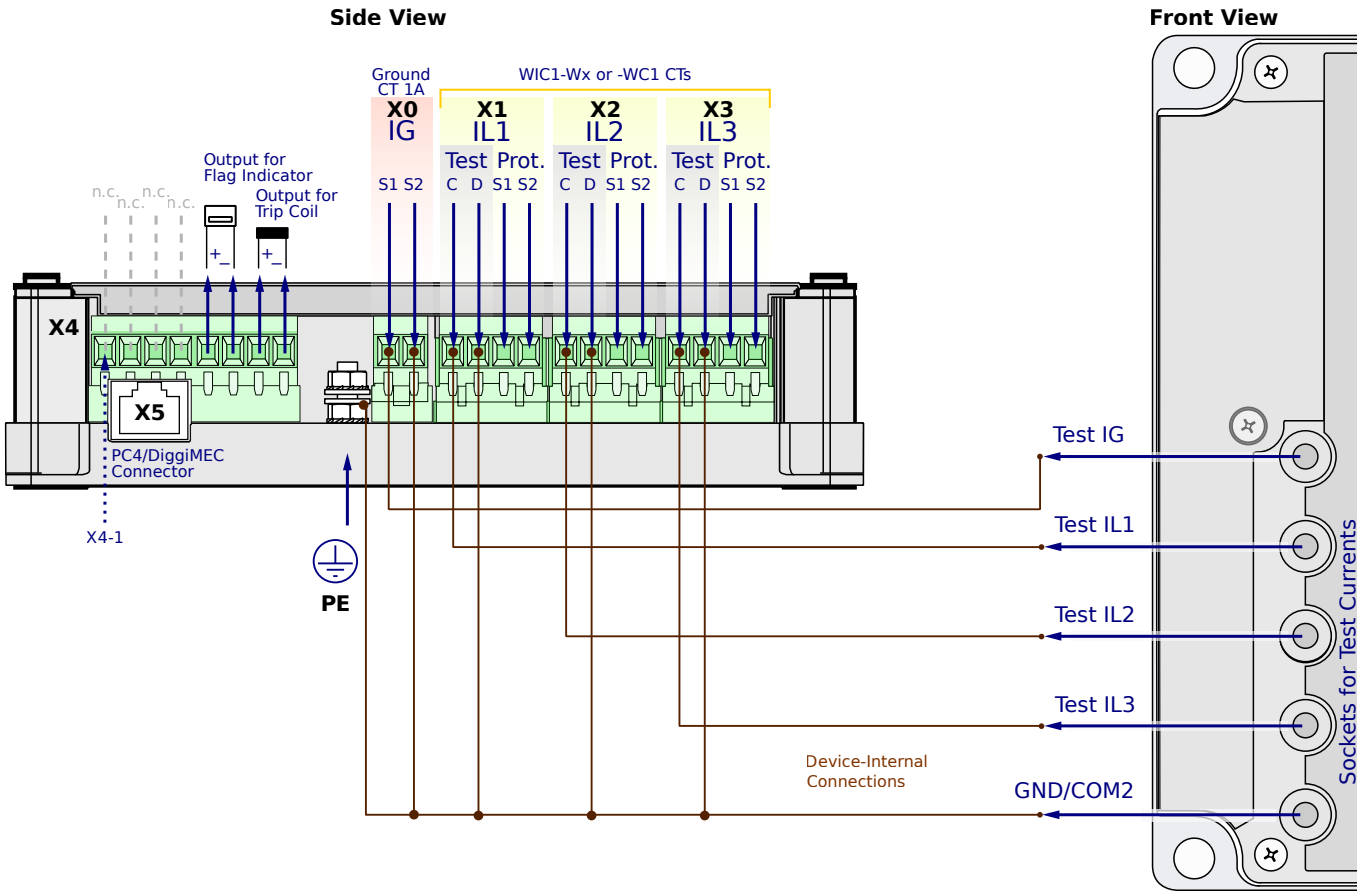


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1SA0

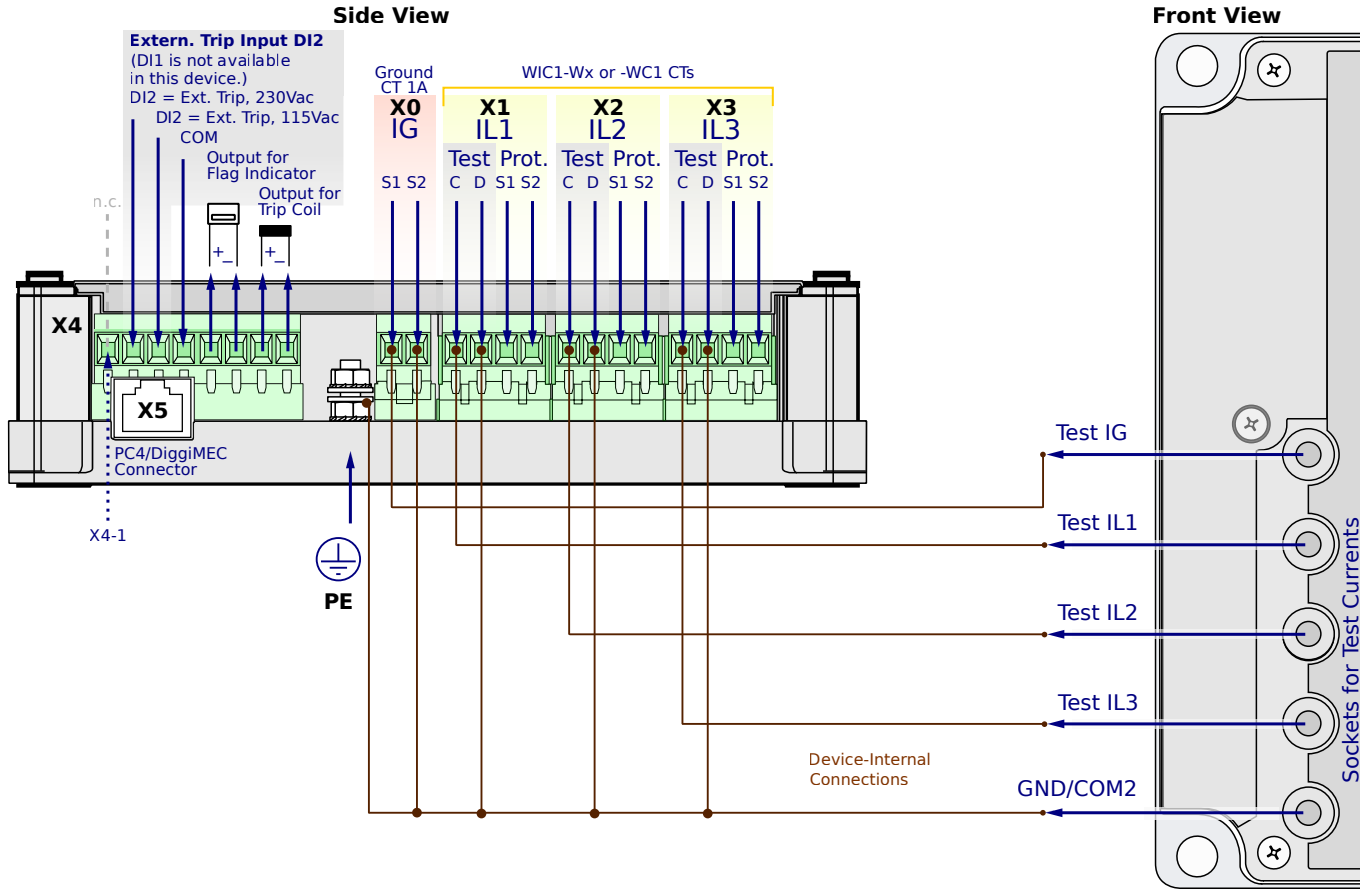


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1SAH

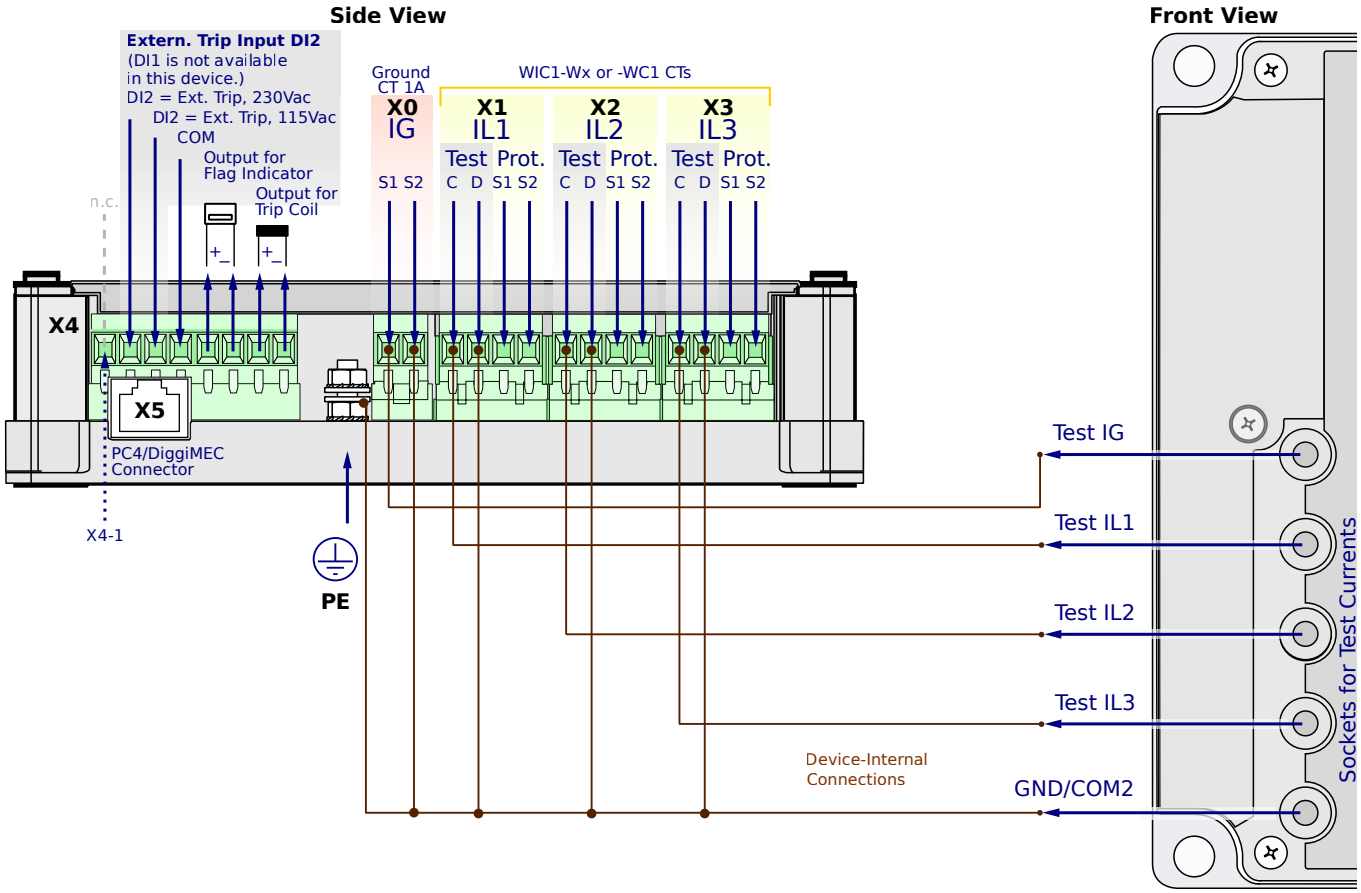


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1AA0

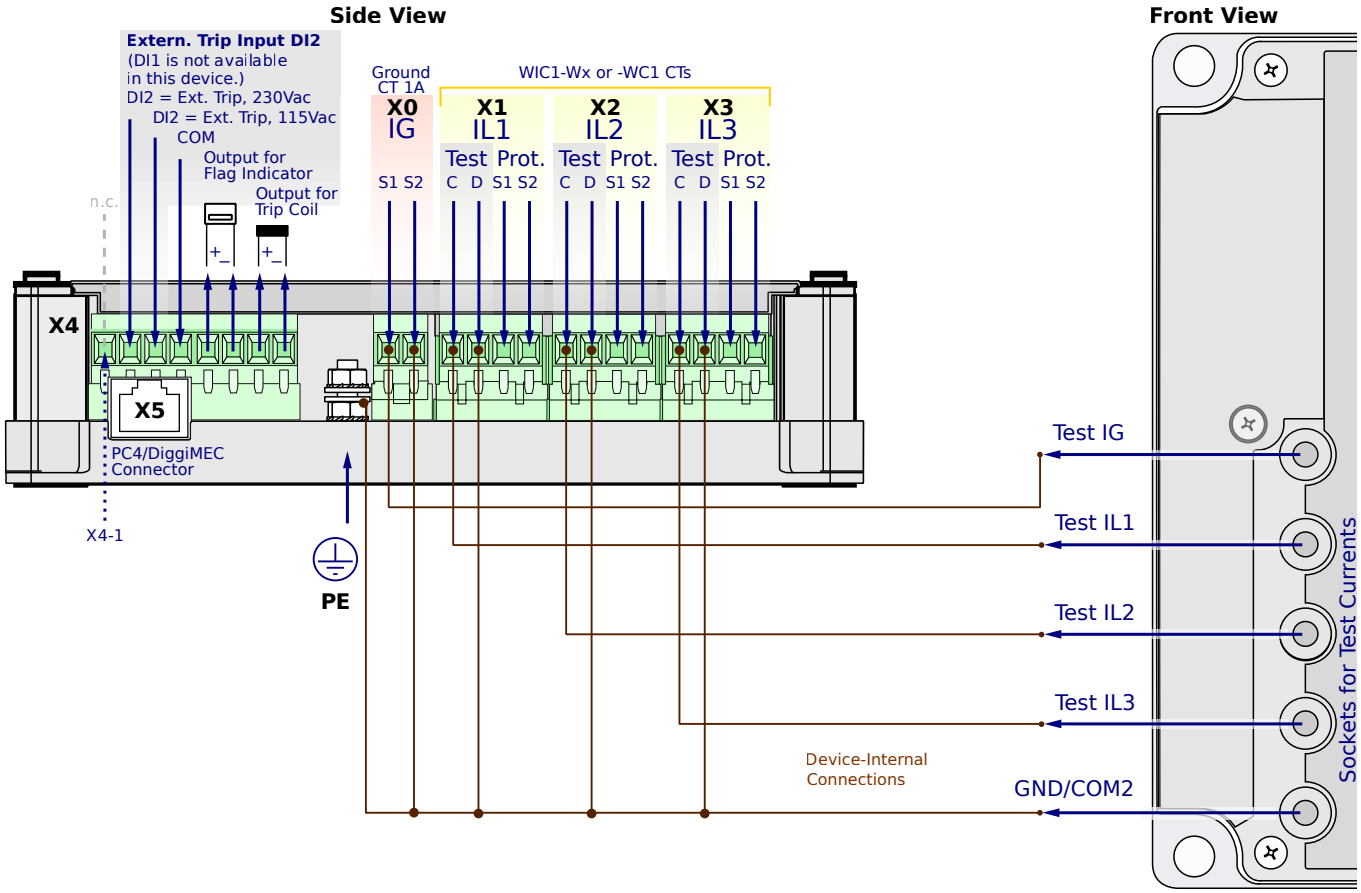


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1AAH

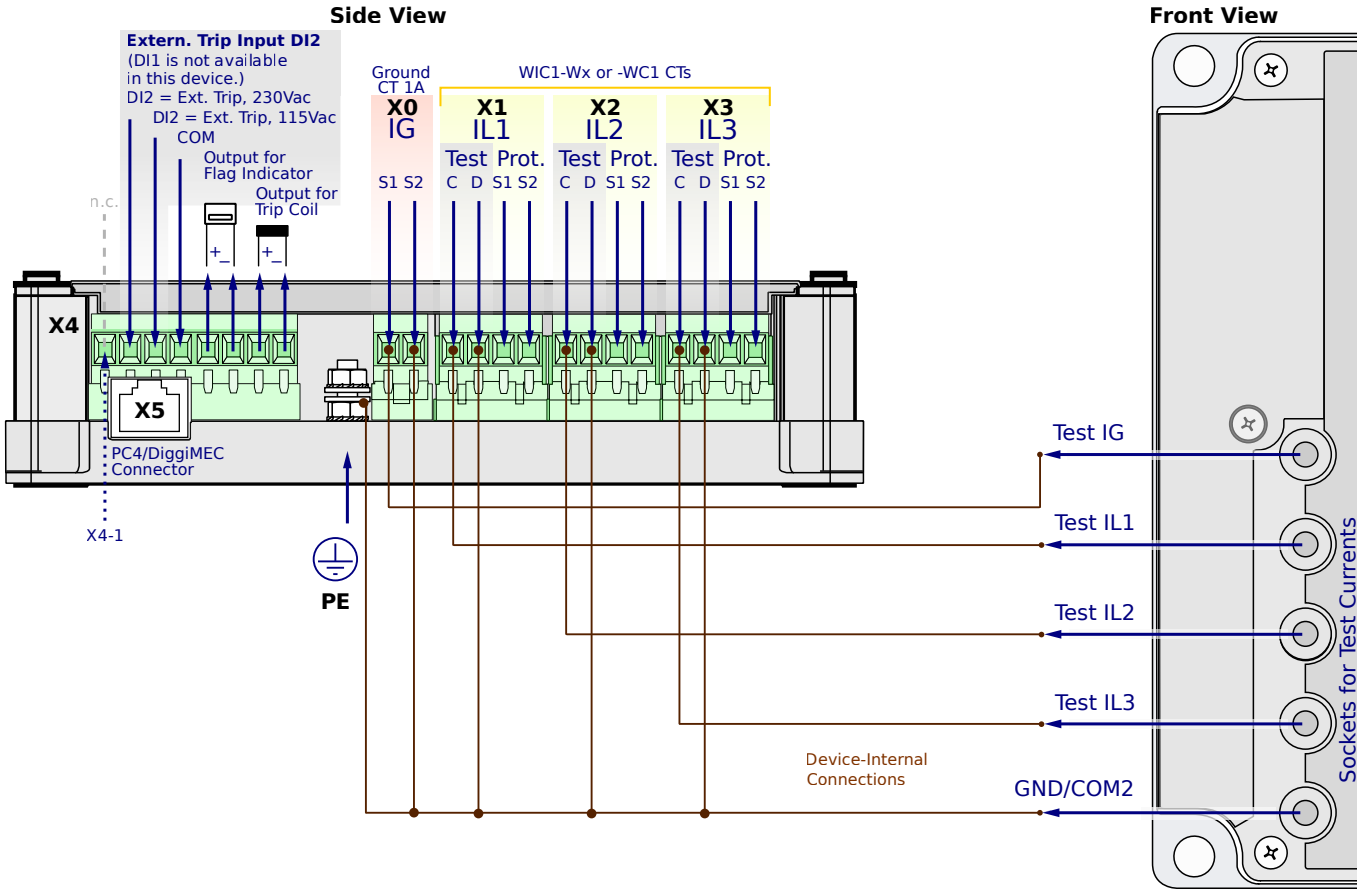


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1PA0

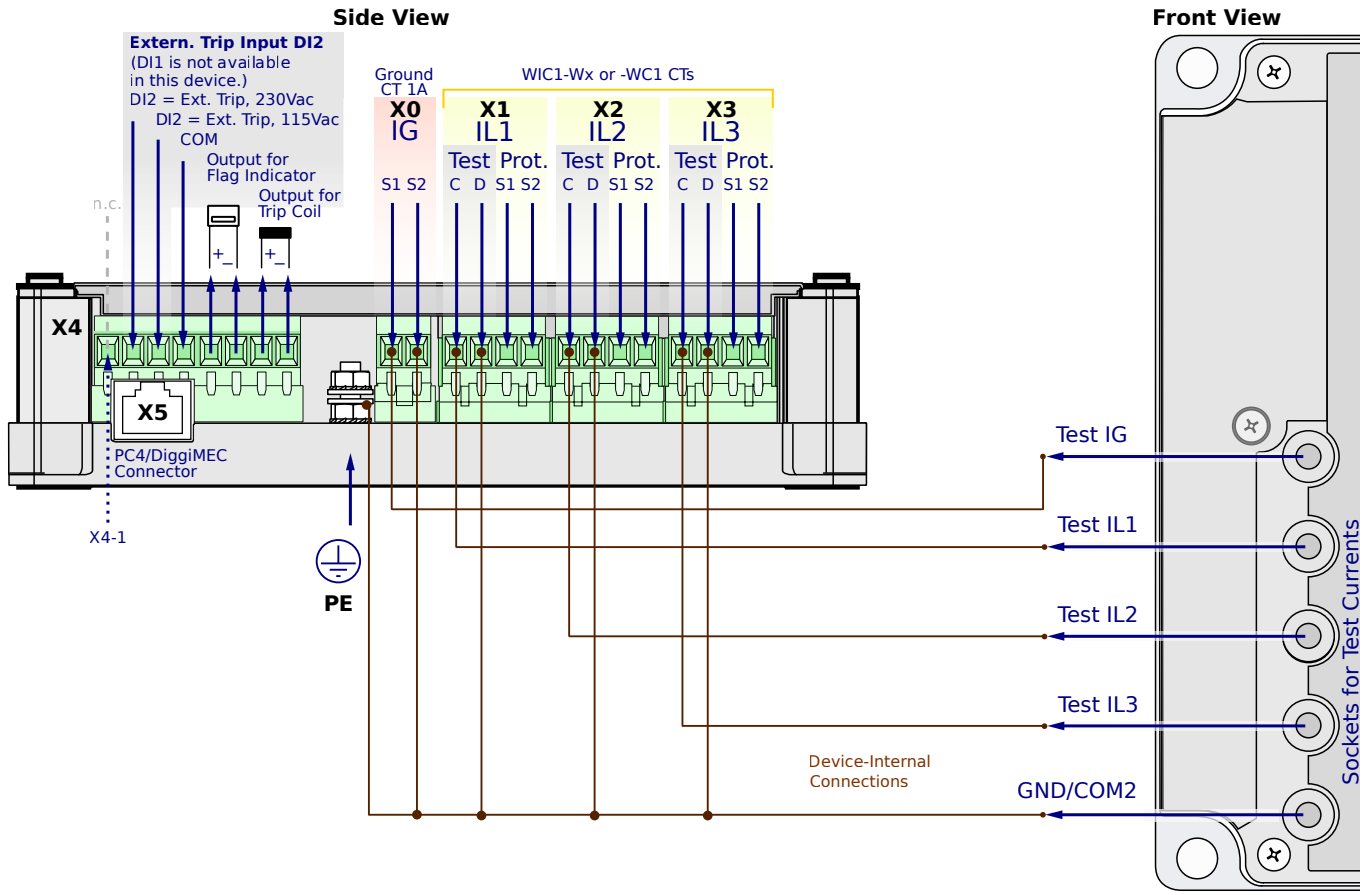


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF1PAH

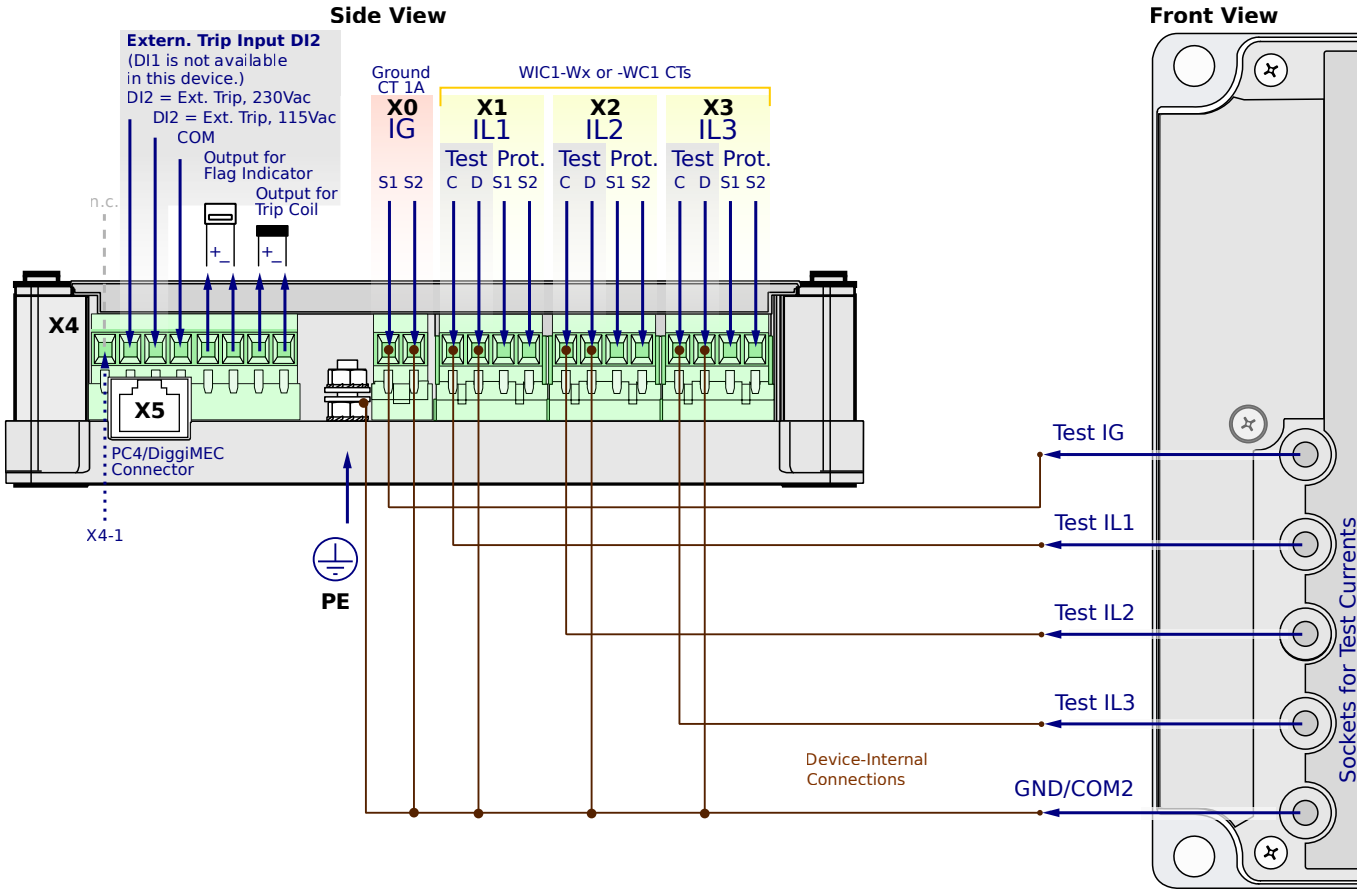


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2SA0

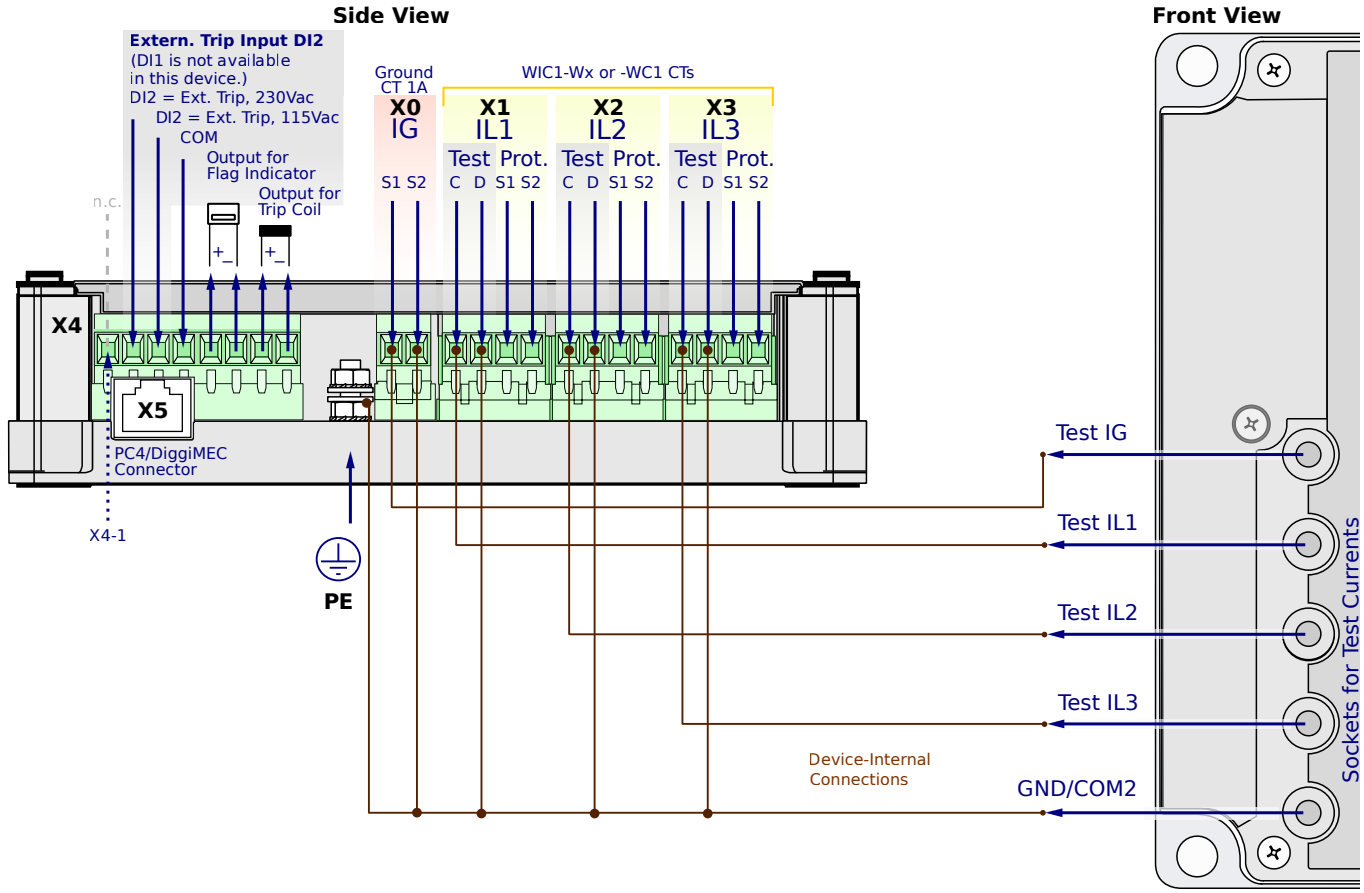


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2SAH

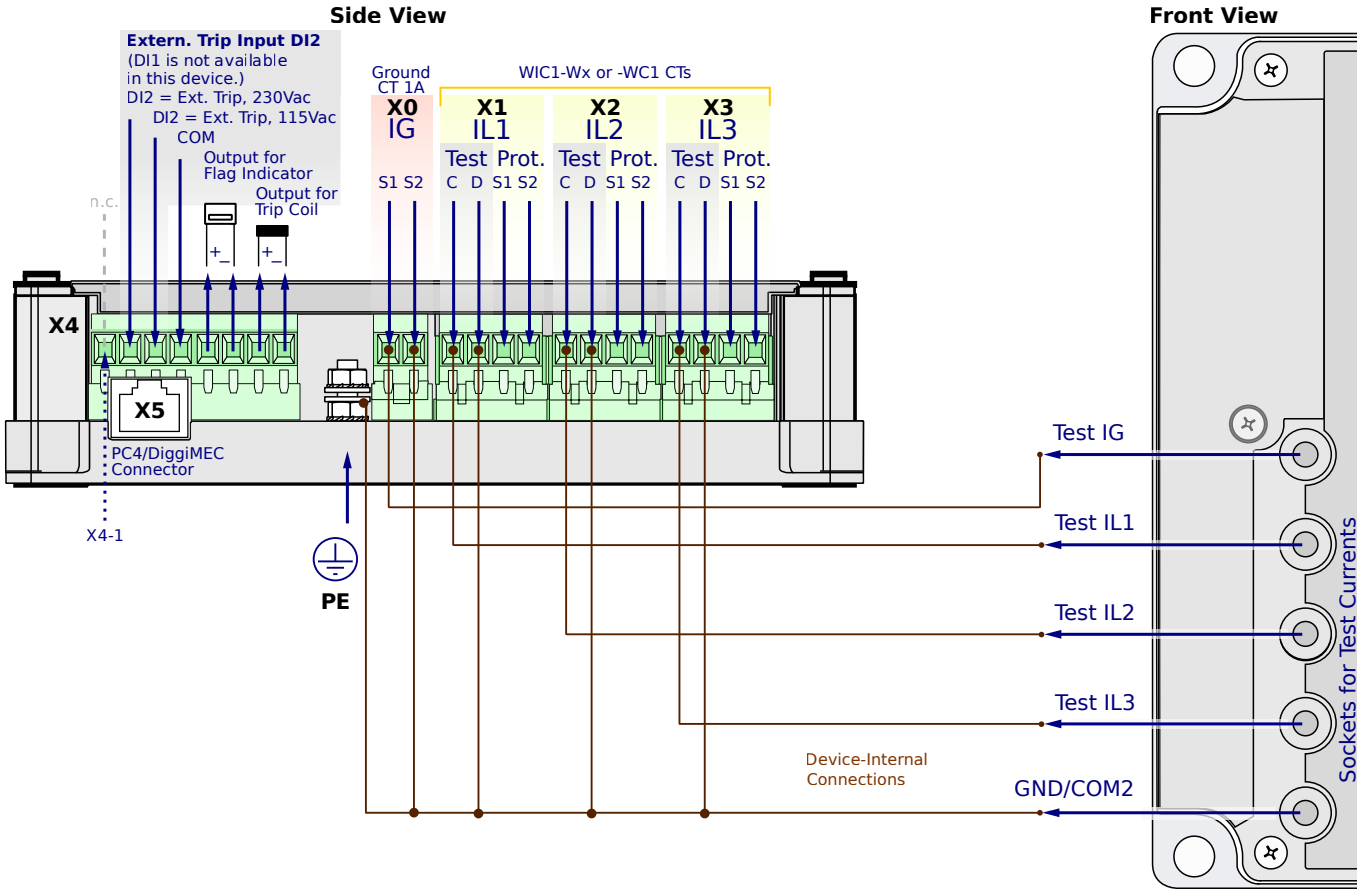


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2AA0

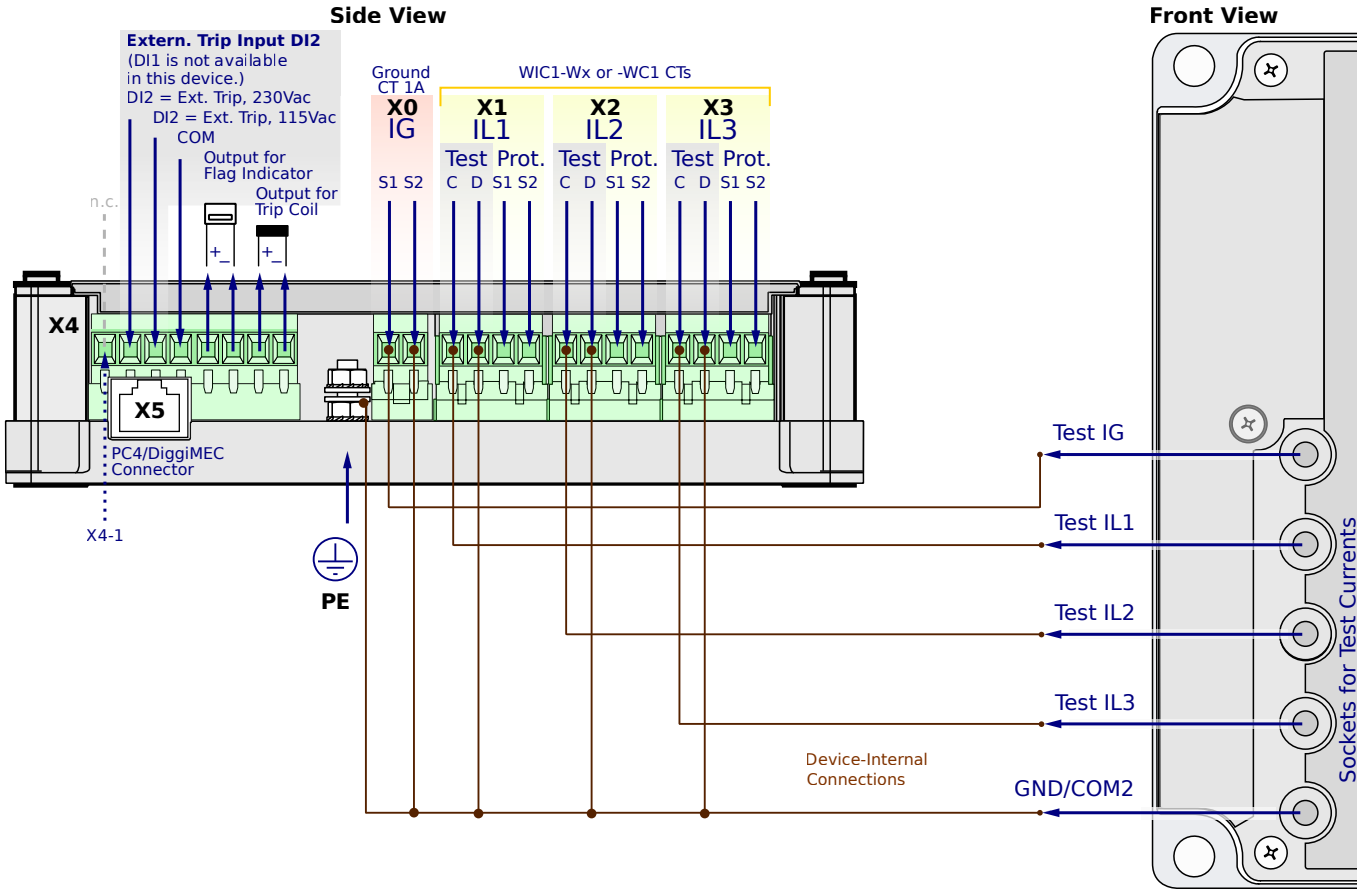


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2AAH

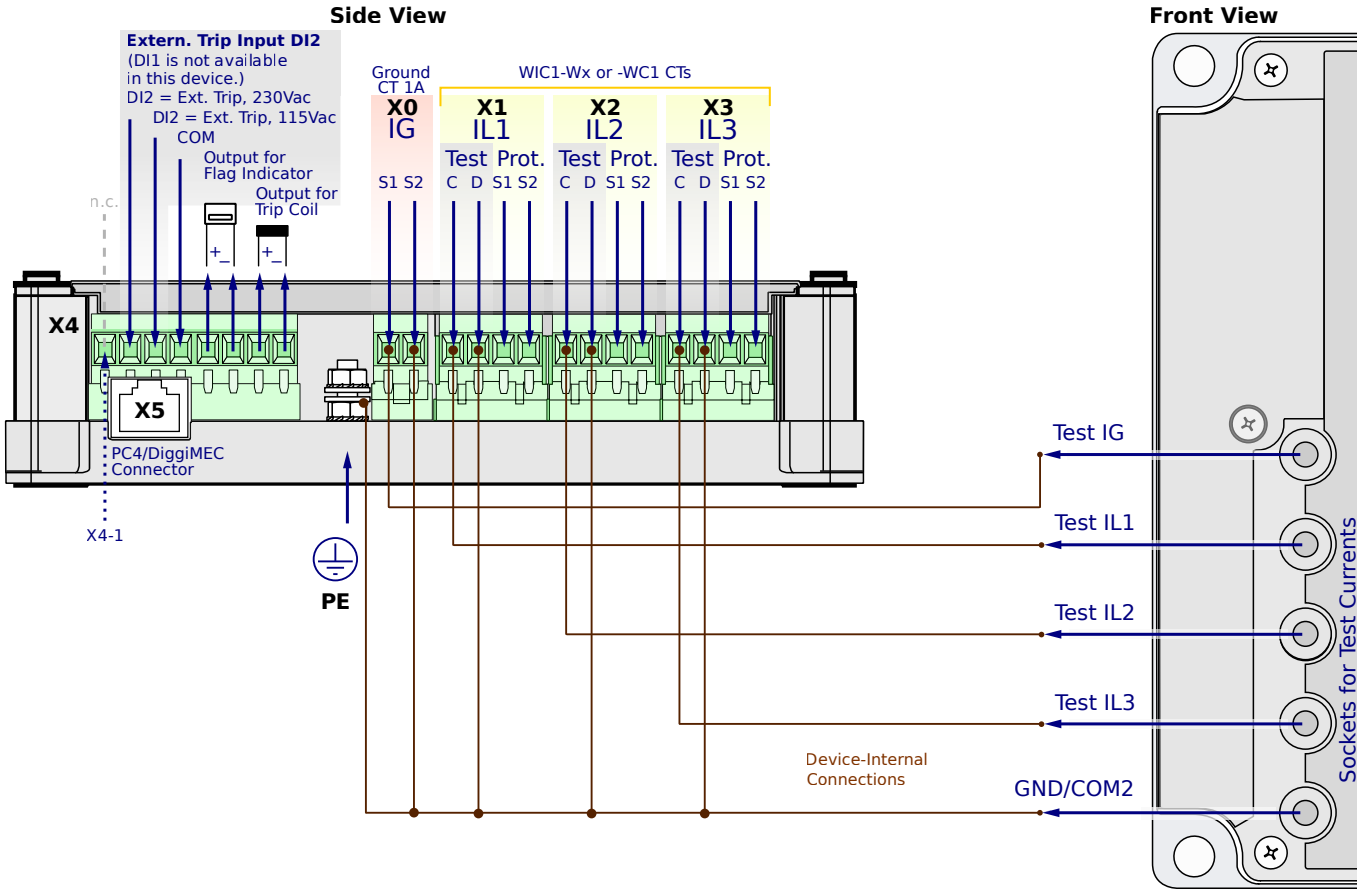


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2PA0

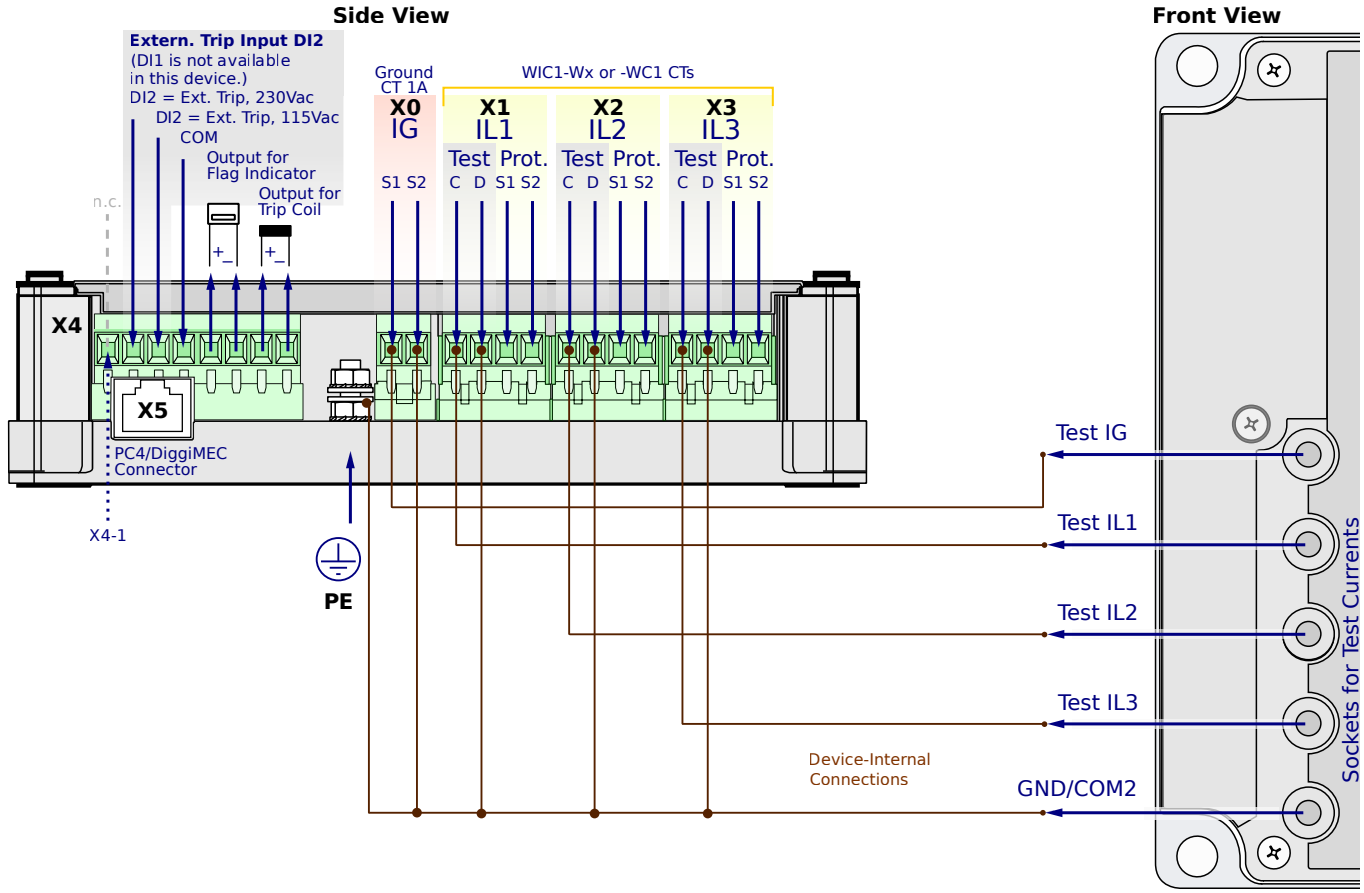


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CF2PAH

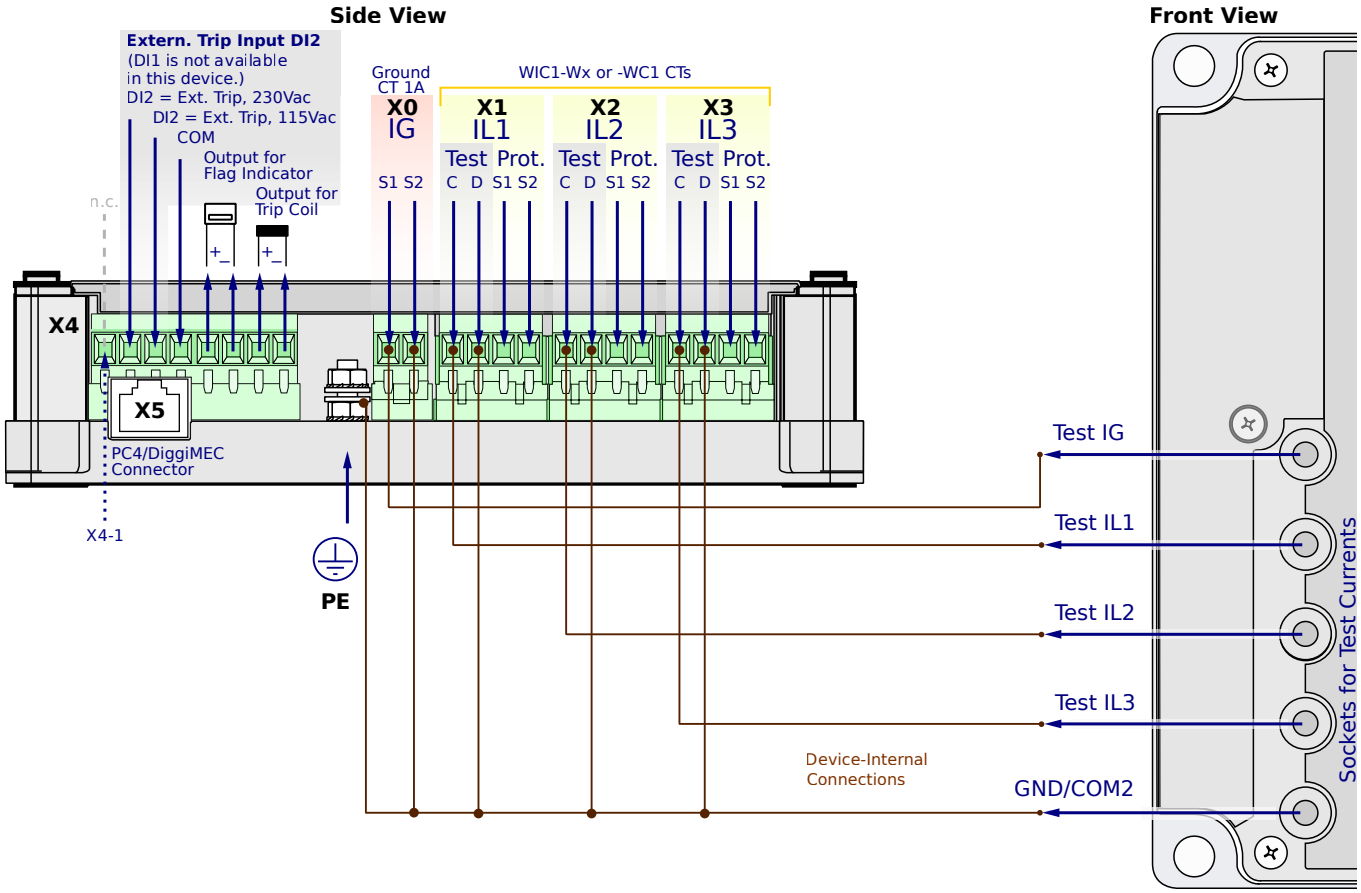


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1SA0

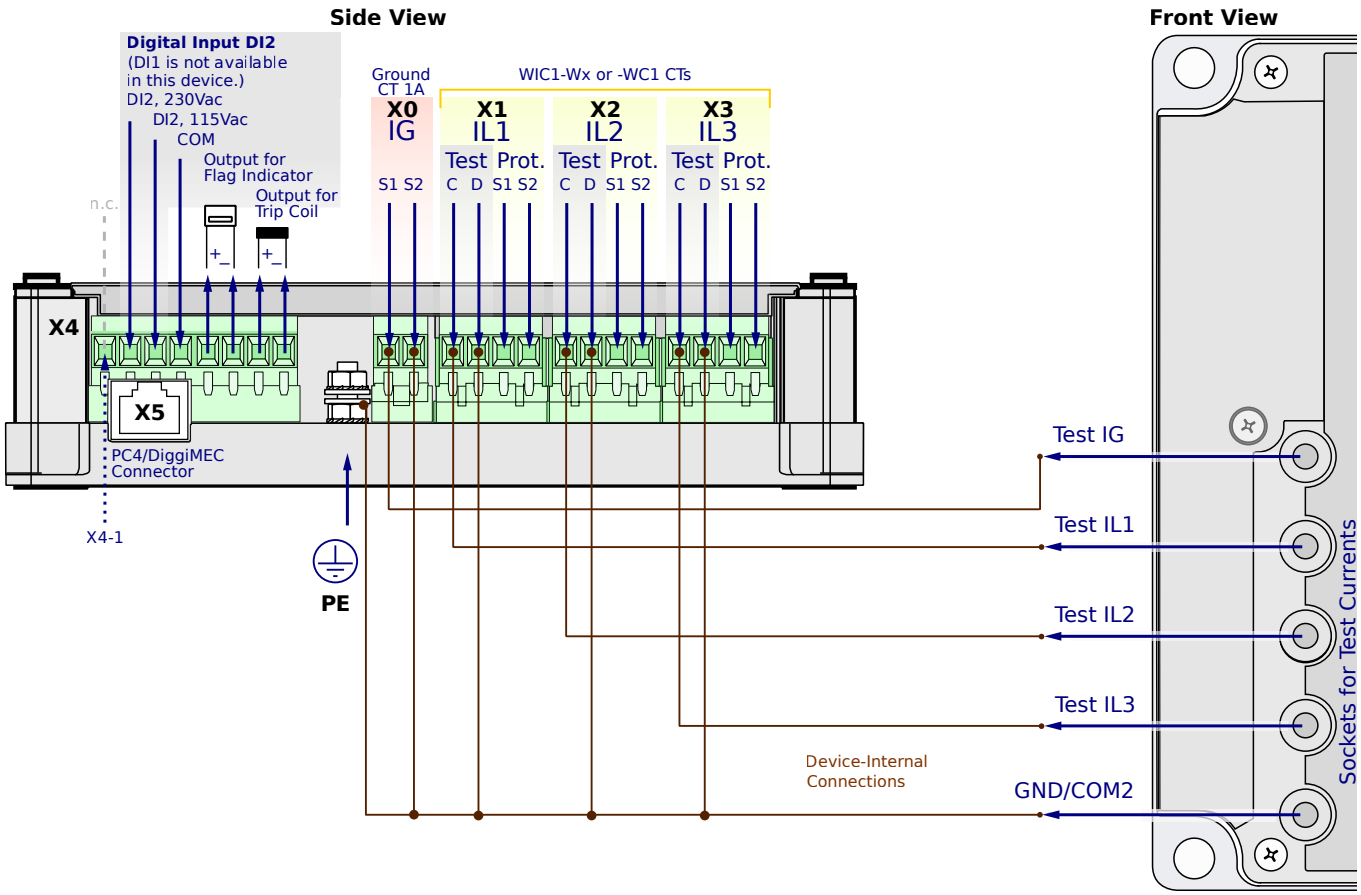


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1SAH

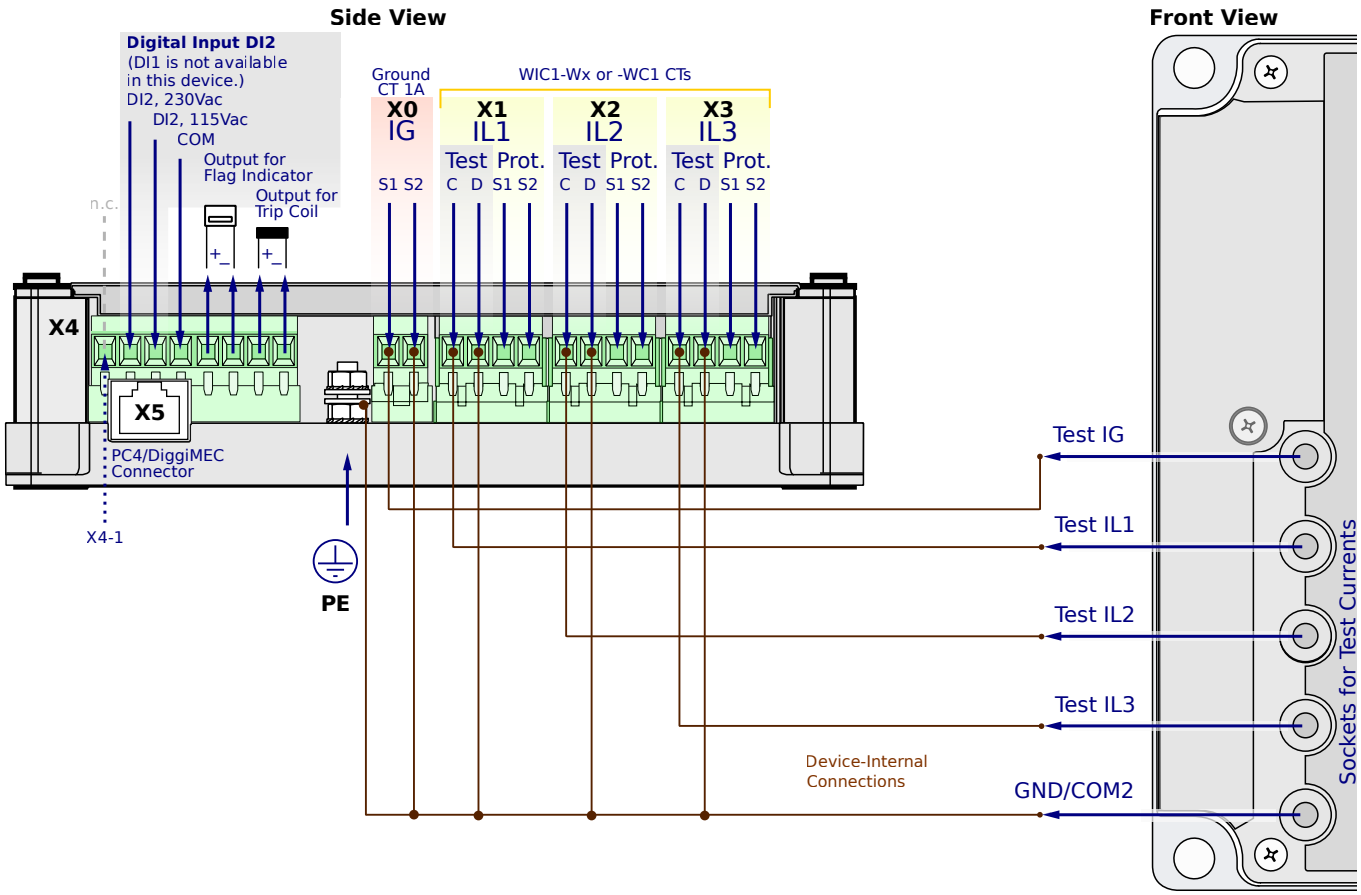


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1AA0

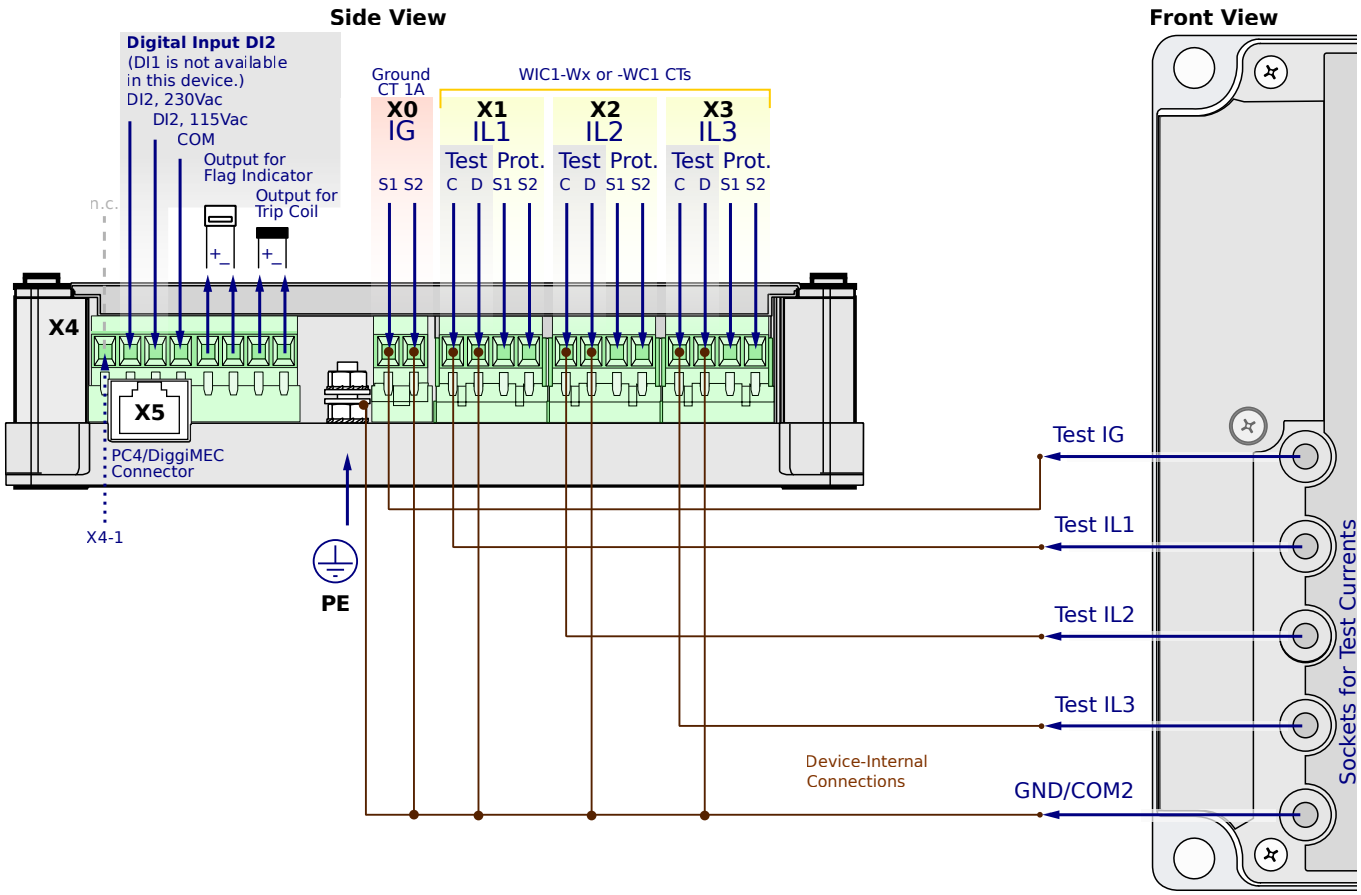


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1AAH

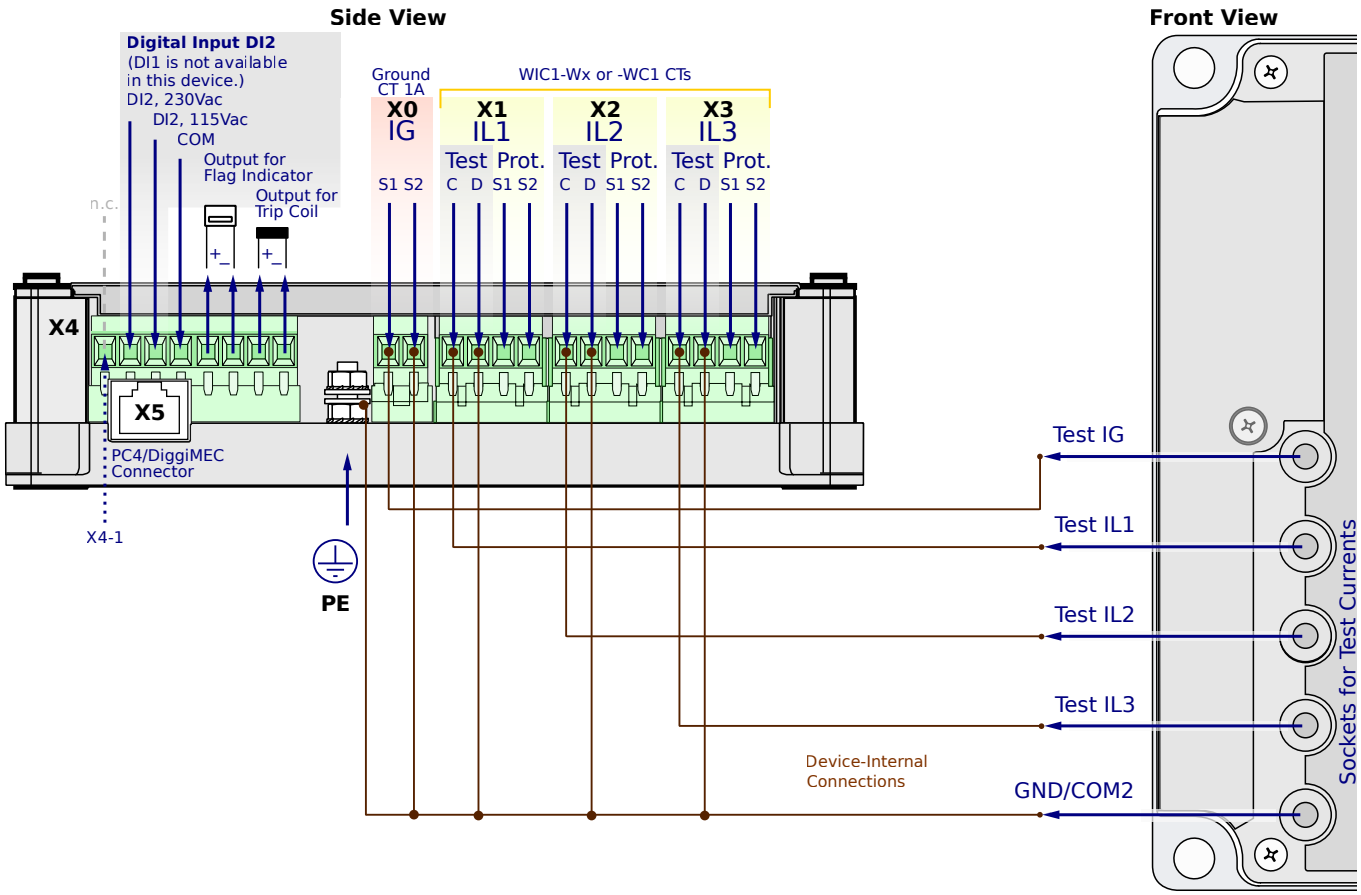


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1PA0

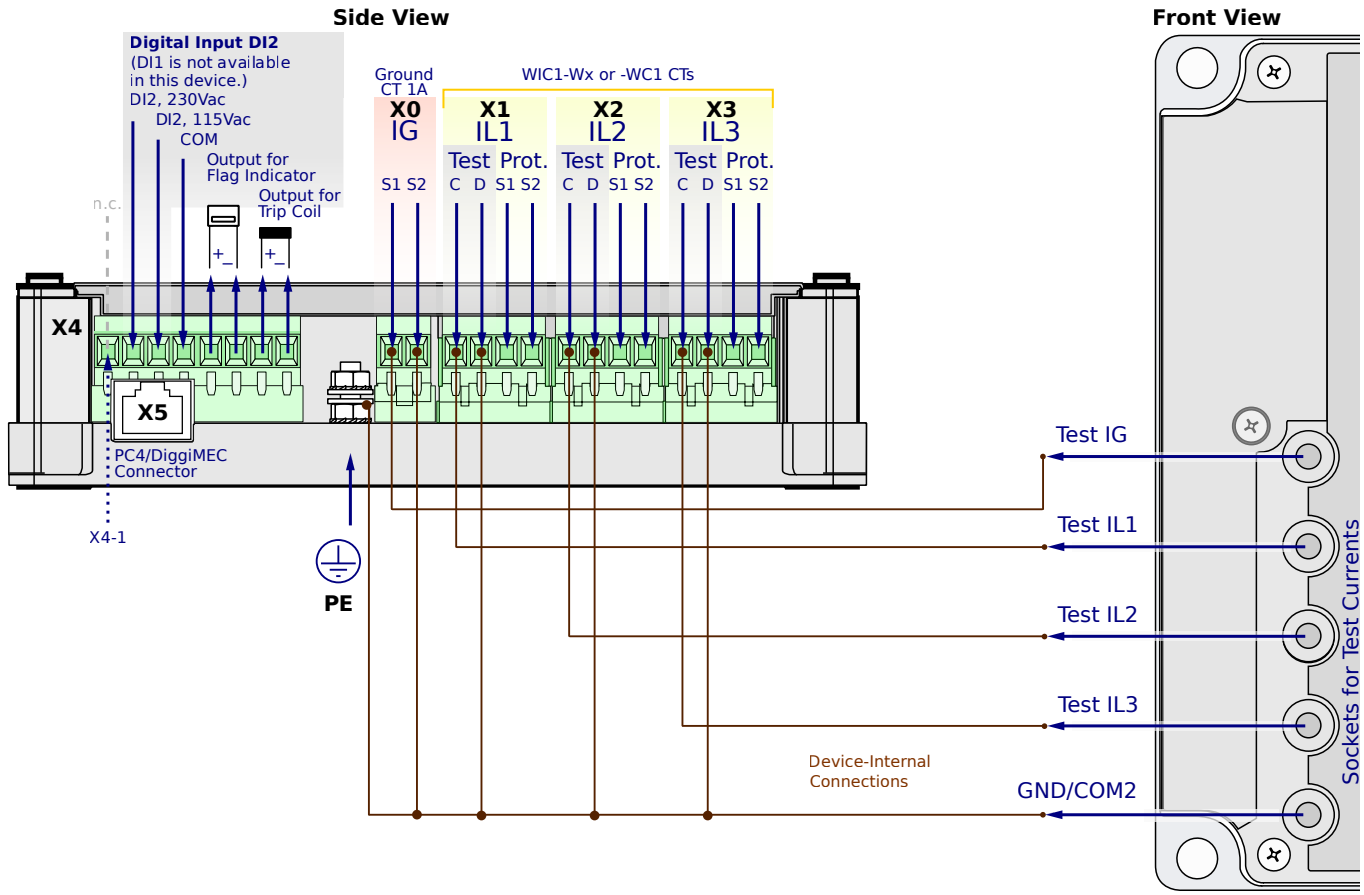


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC1PAH

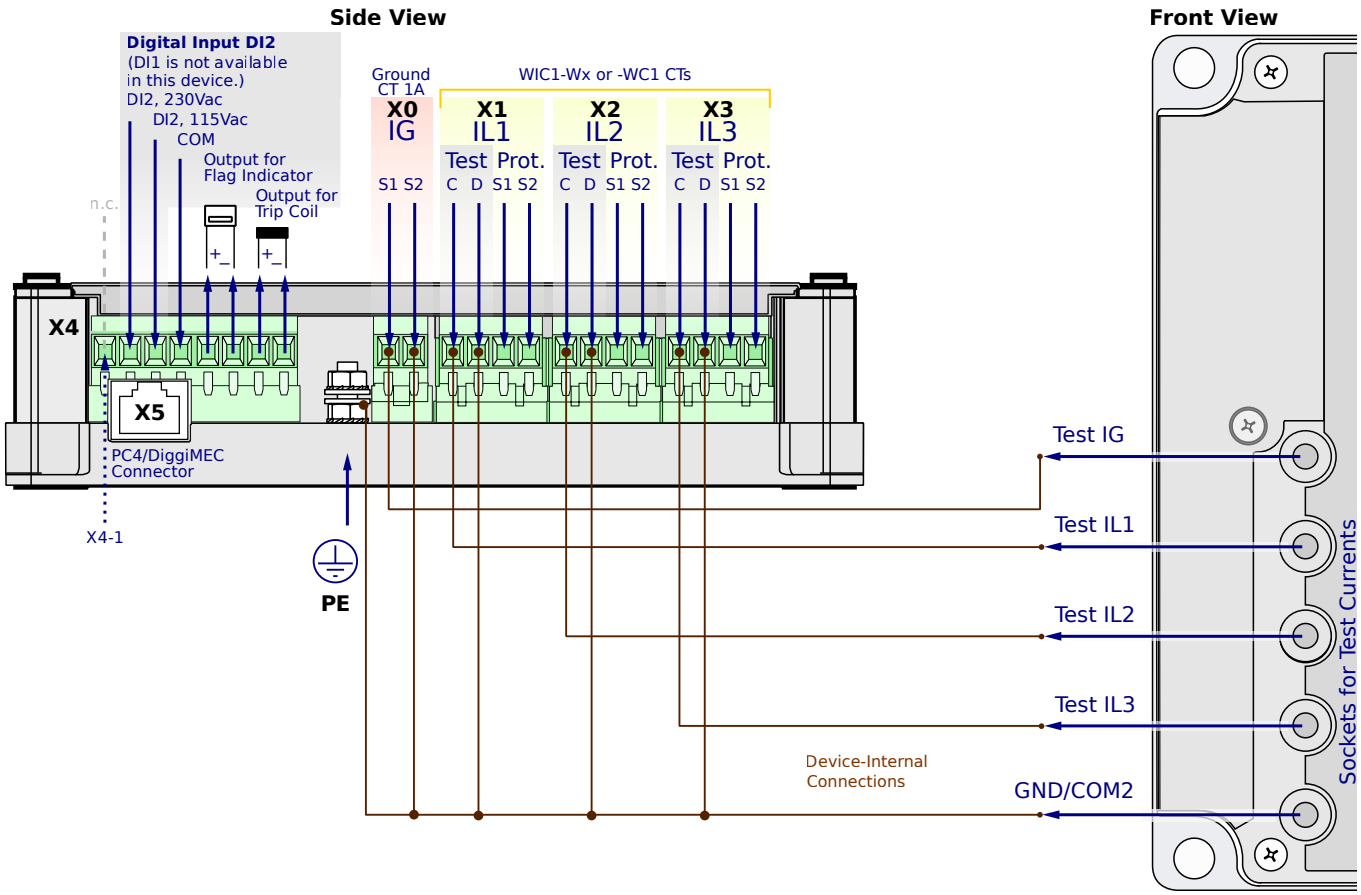


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2SA0

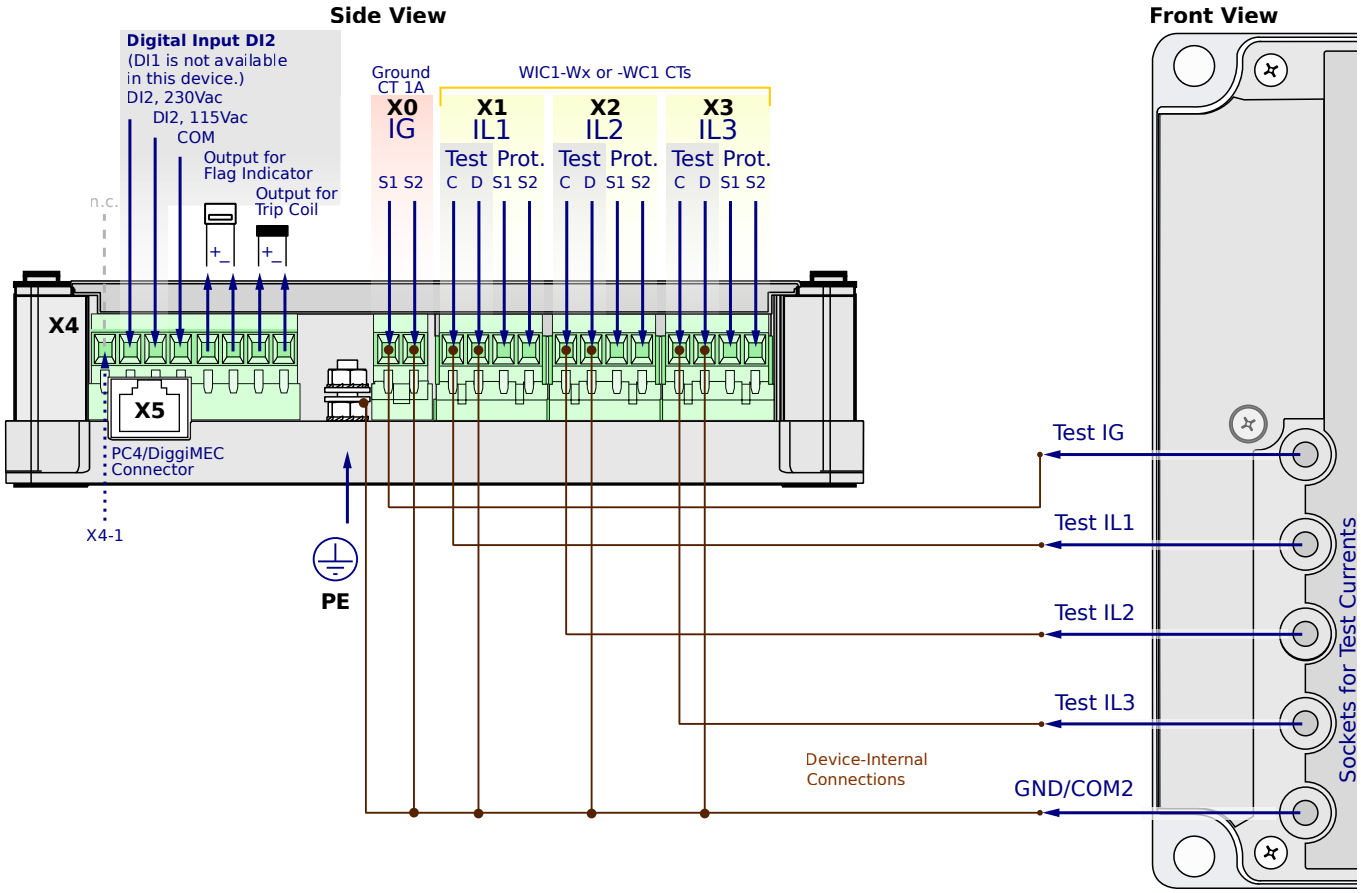


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2SAH

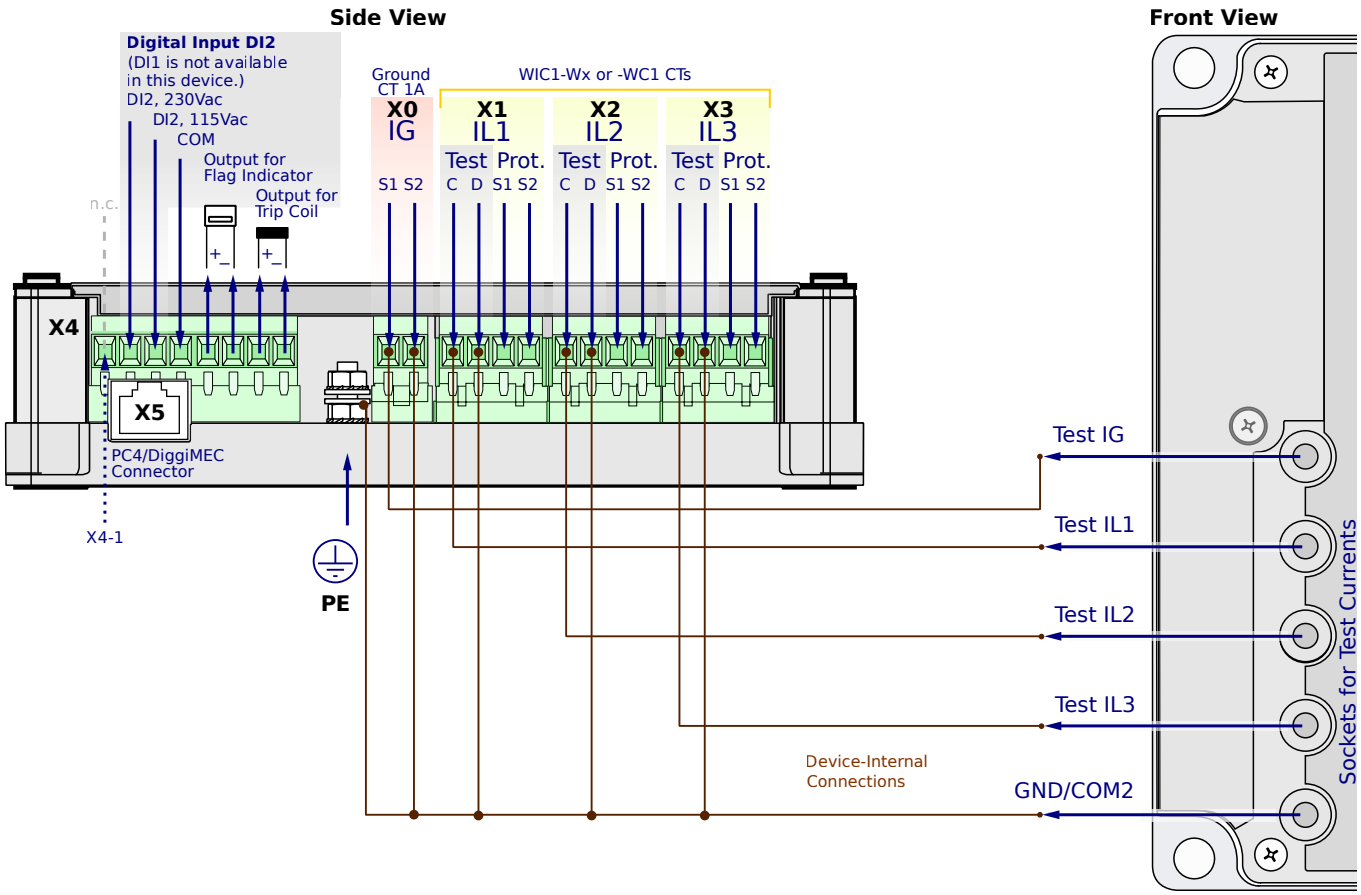


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2AA0

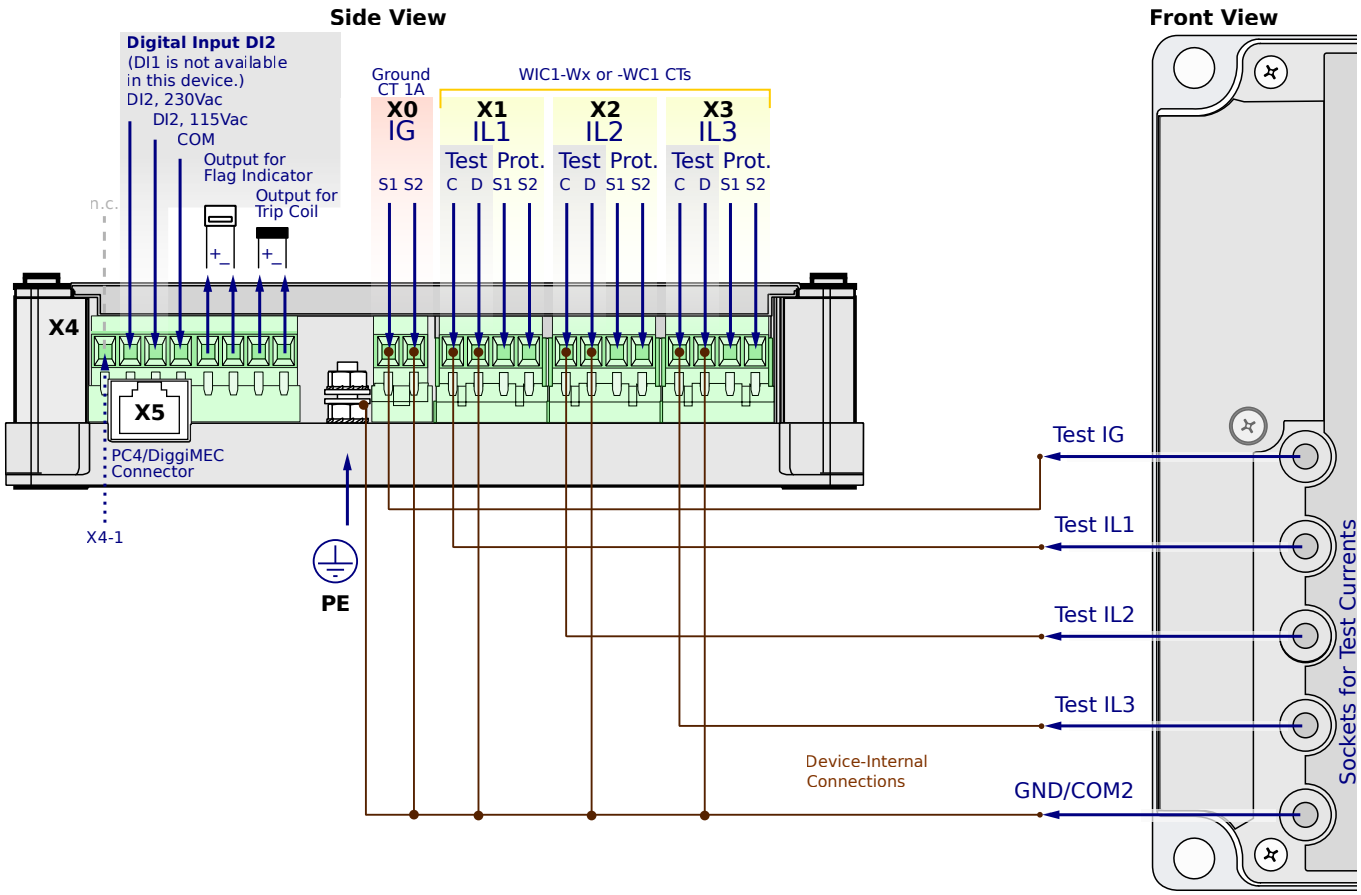


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2AAH

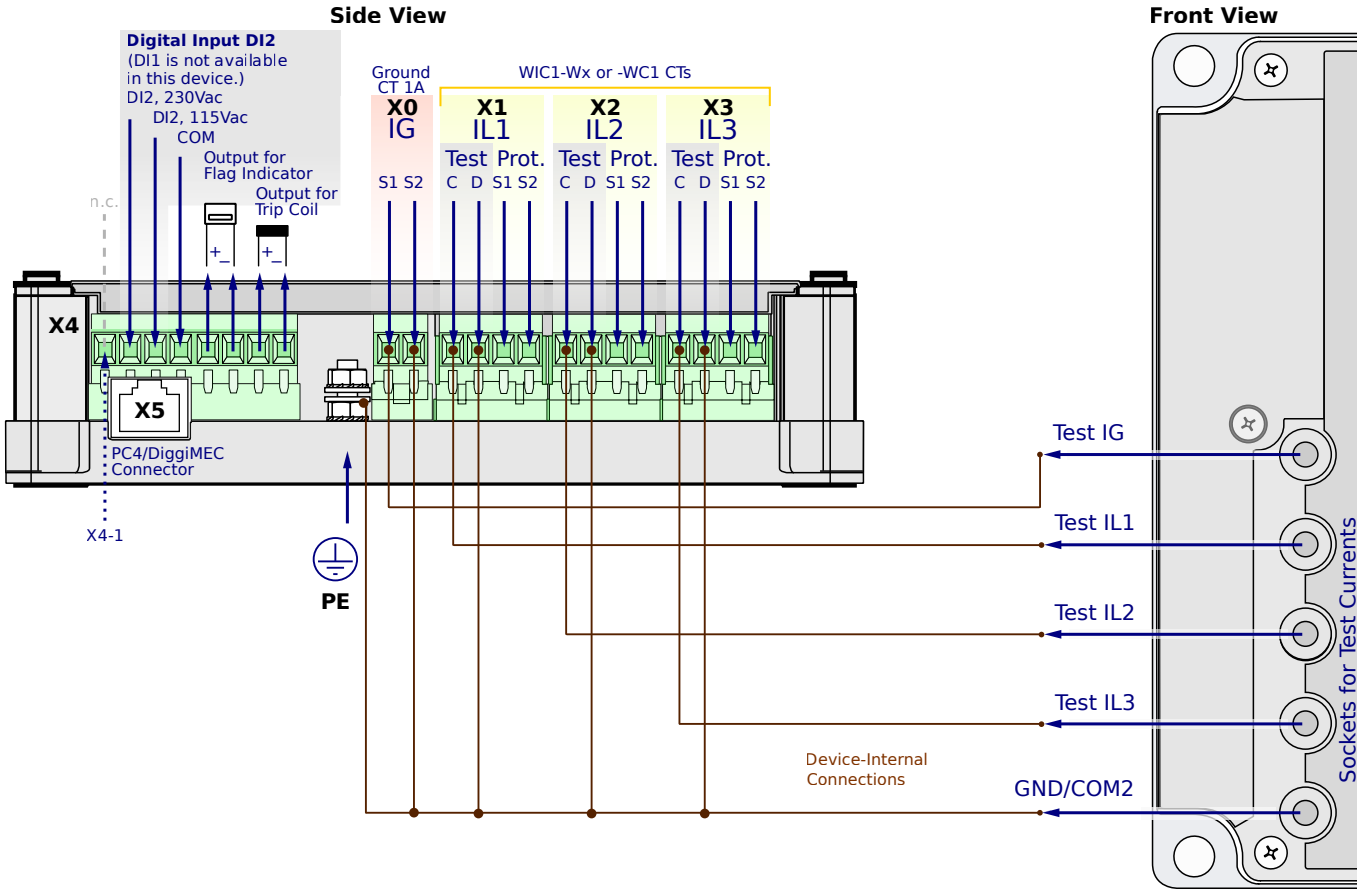


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2PA0

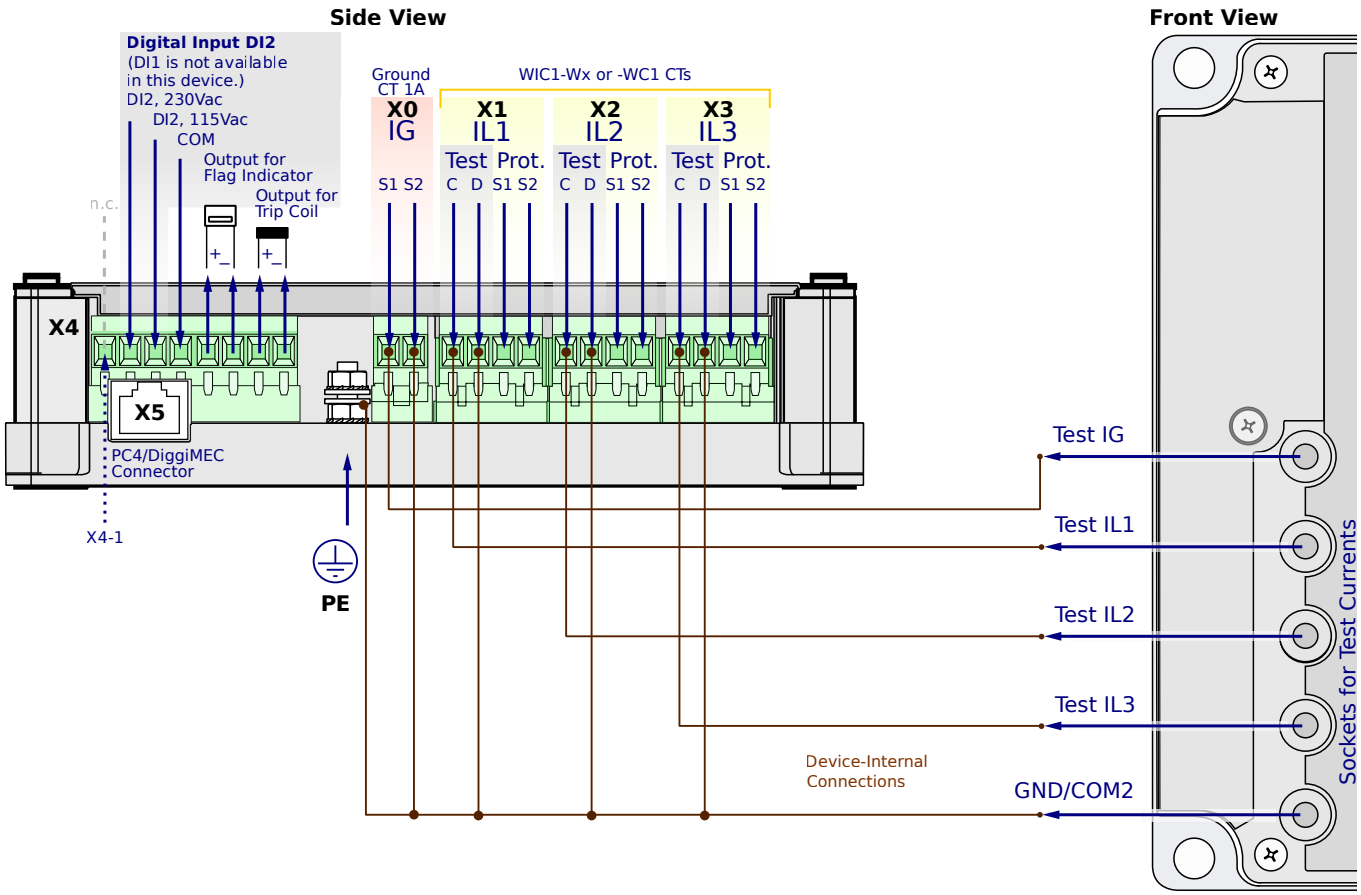


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB5CC2PAH

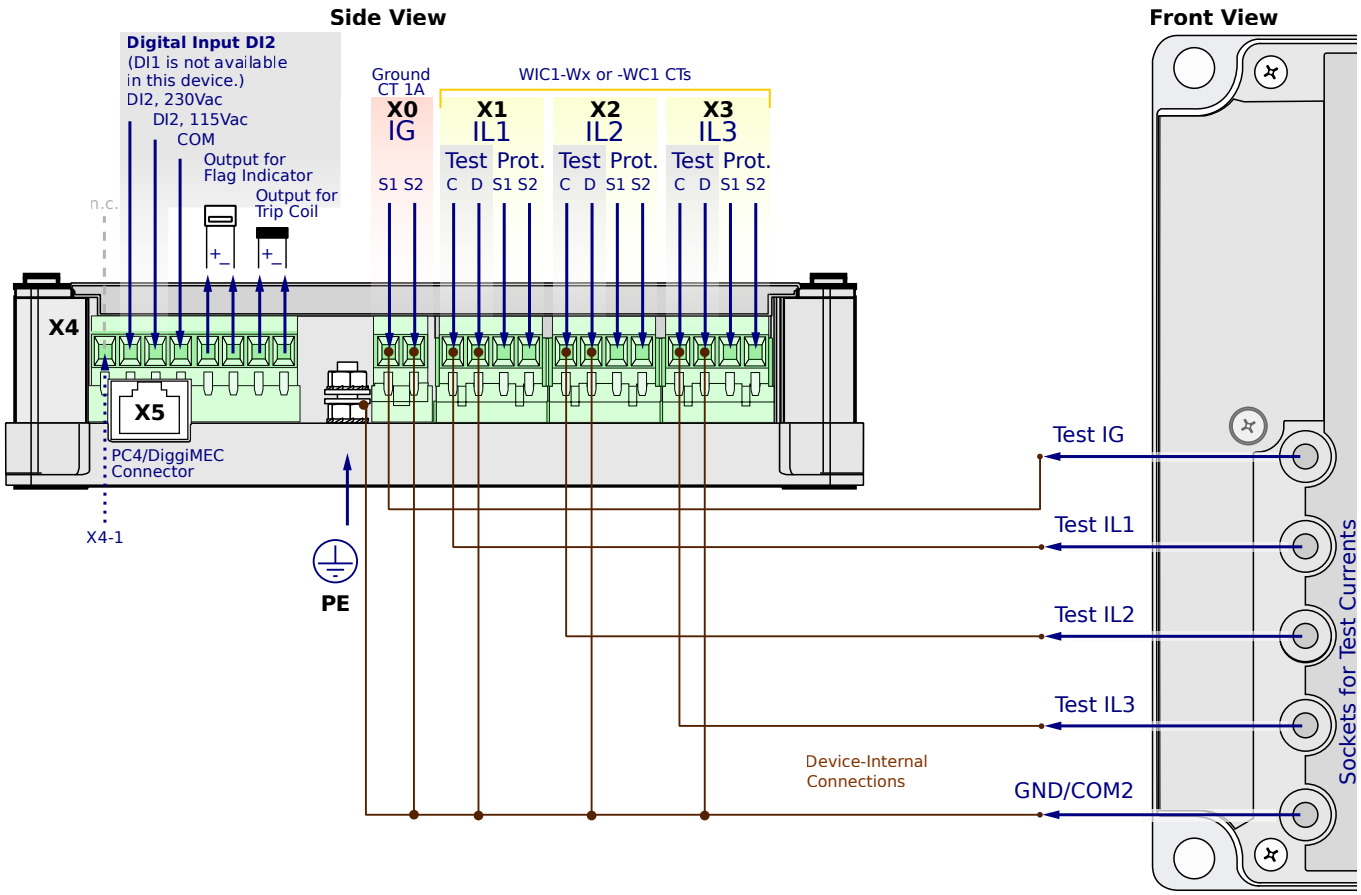


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0SA0

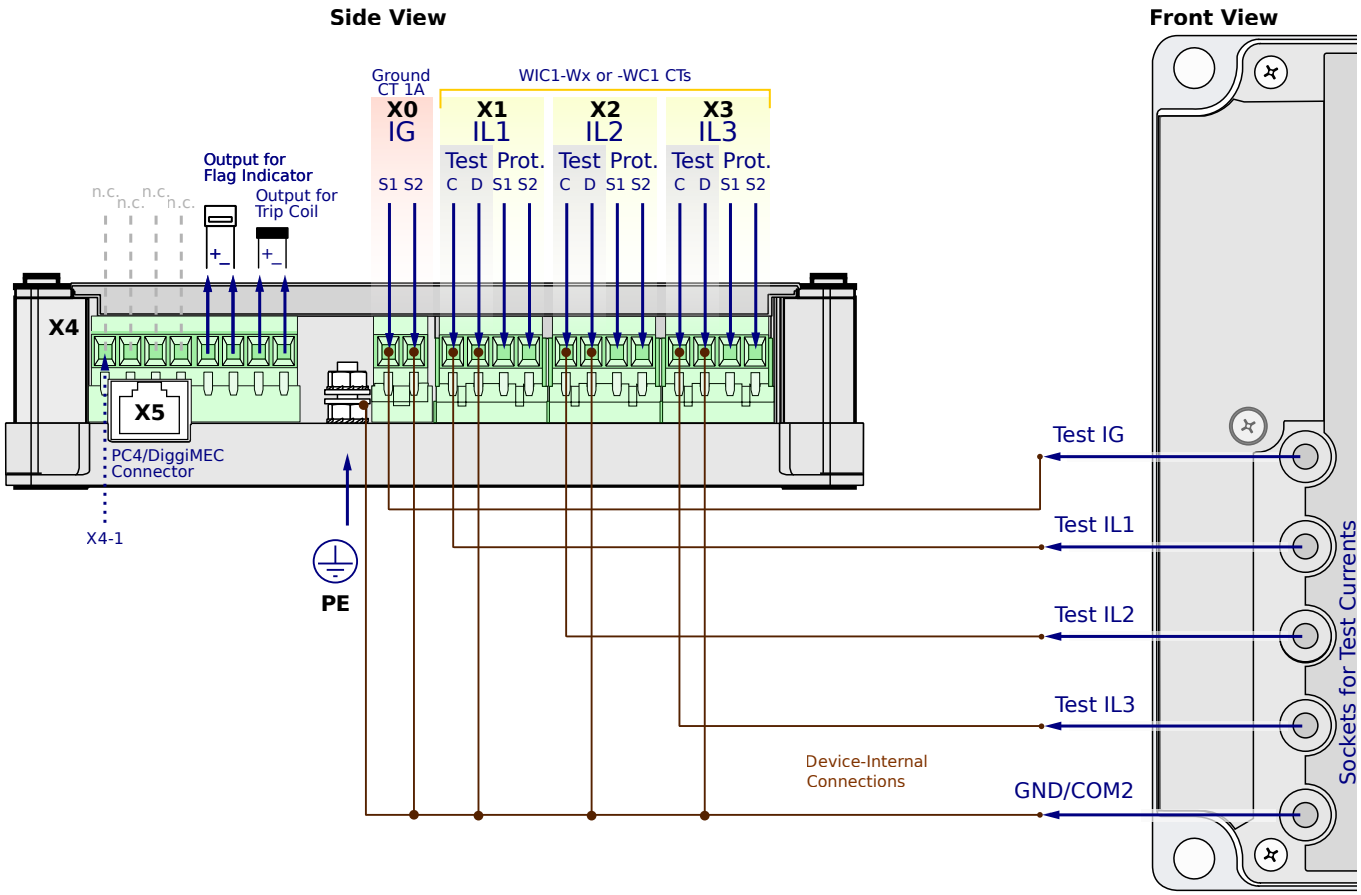


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0SAH

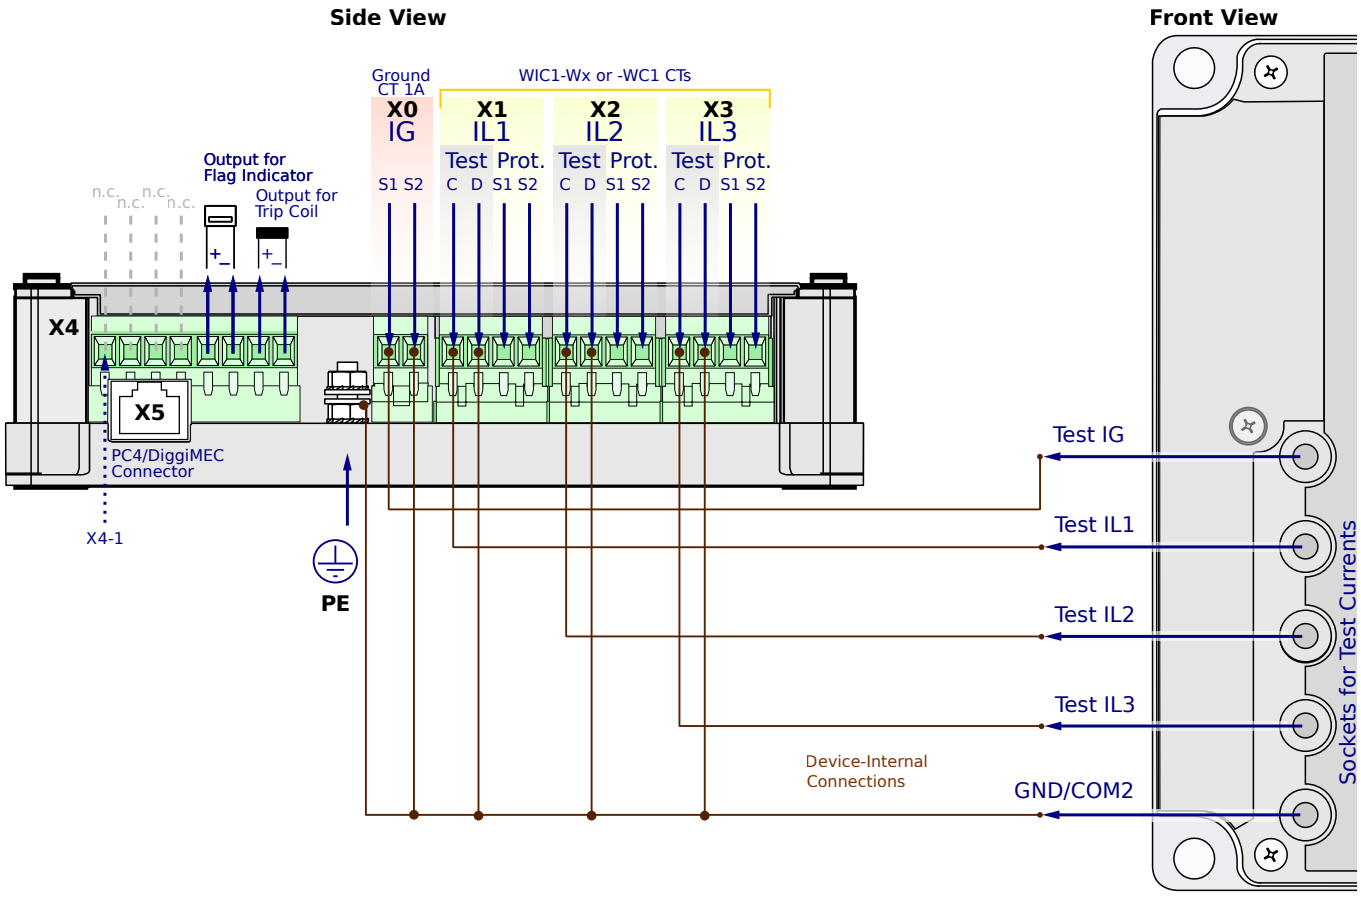


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0AA0

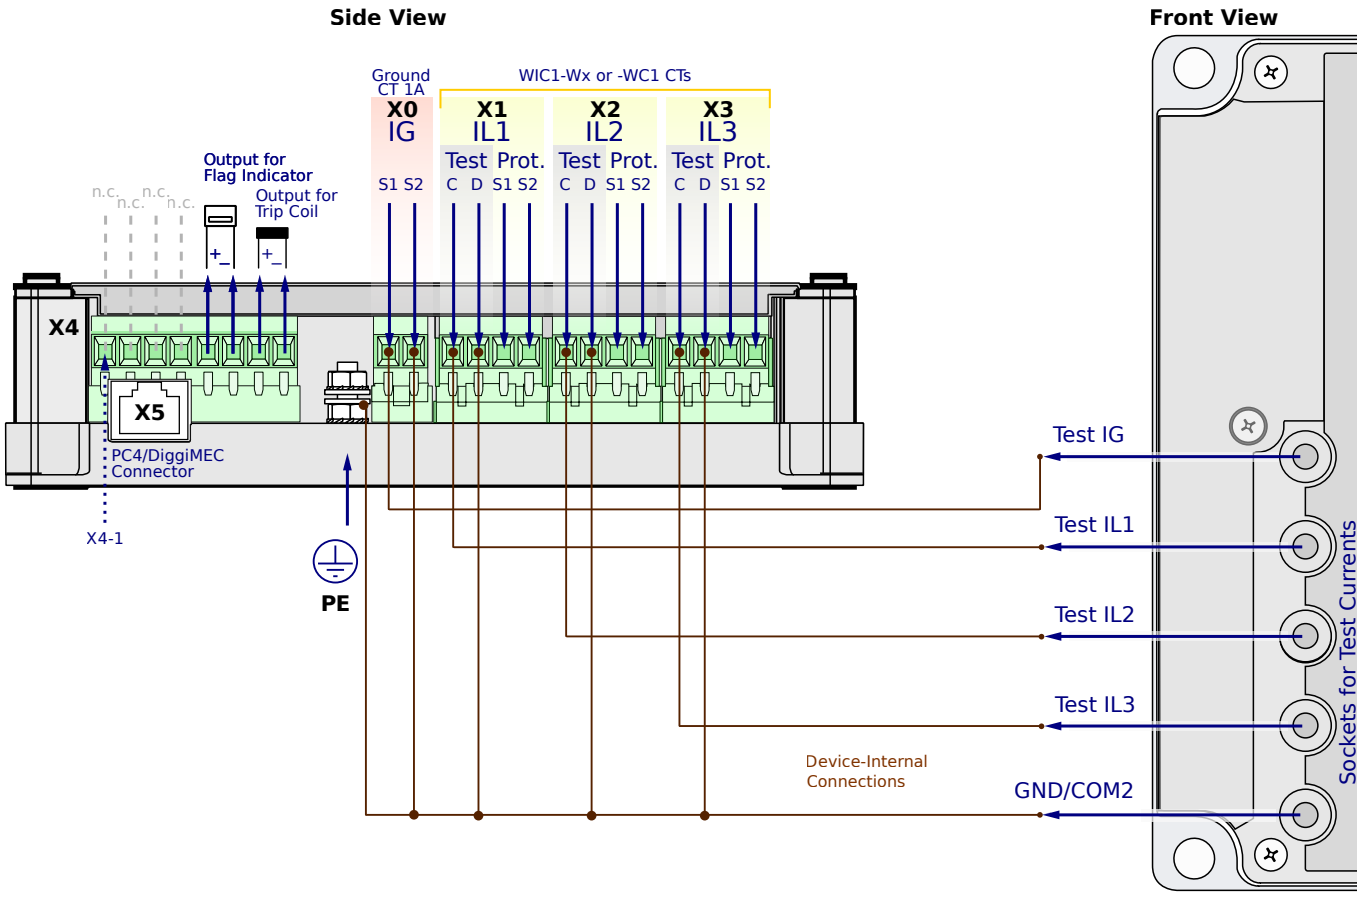


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0AAH

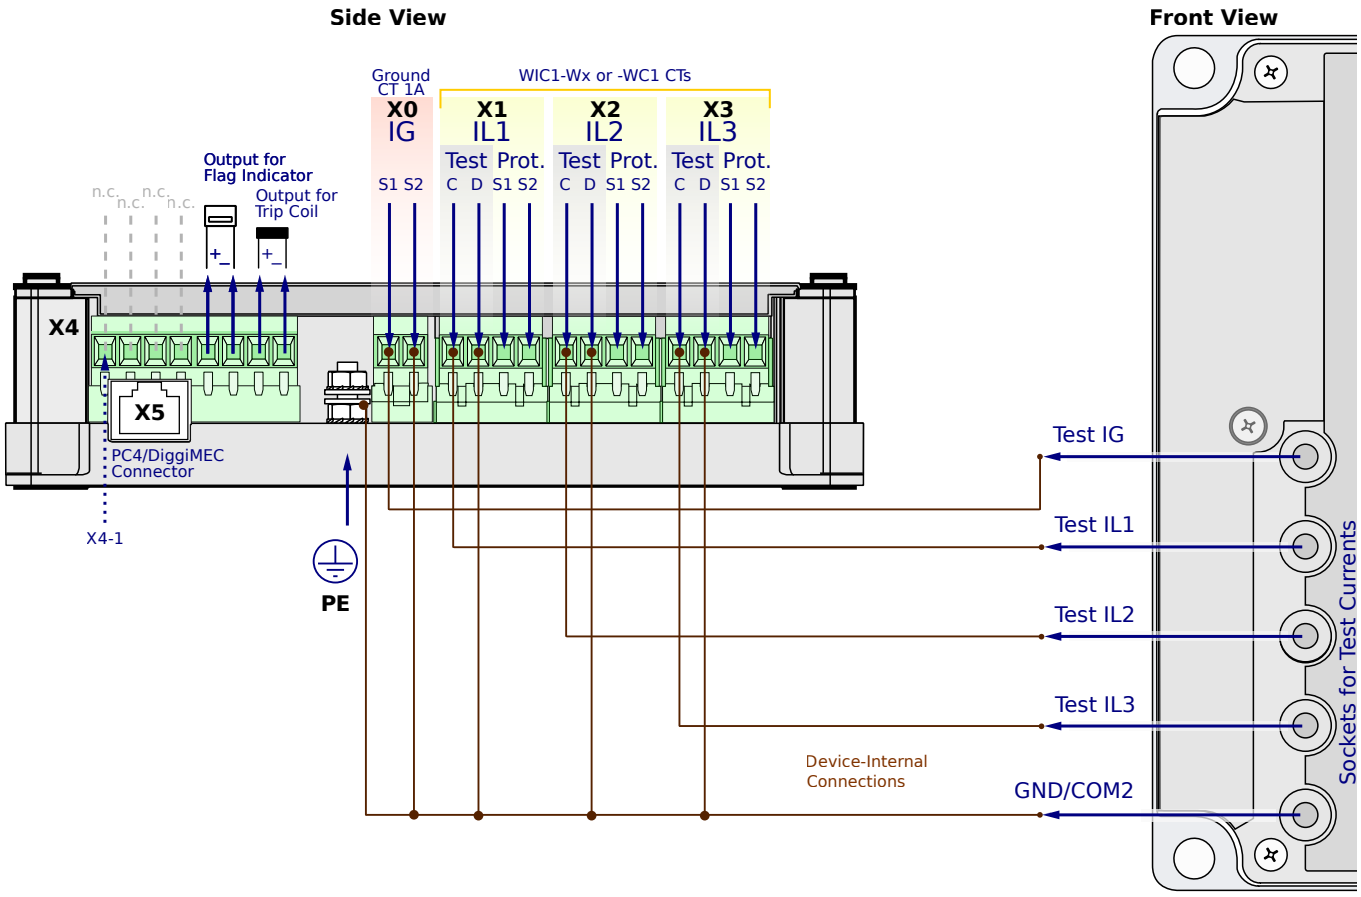


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0PA0

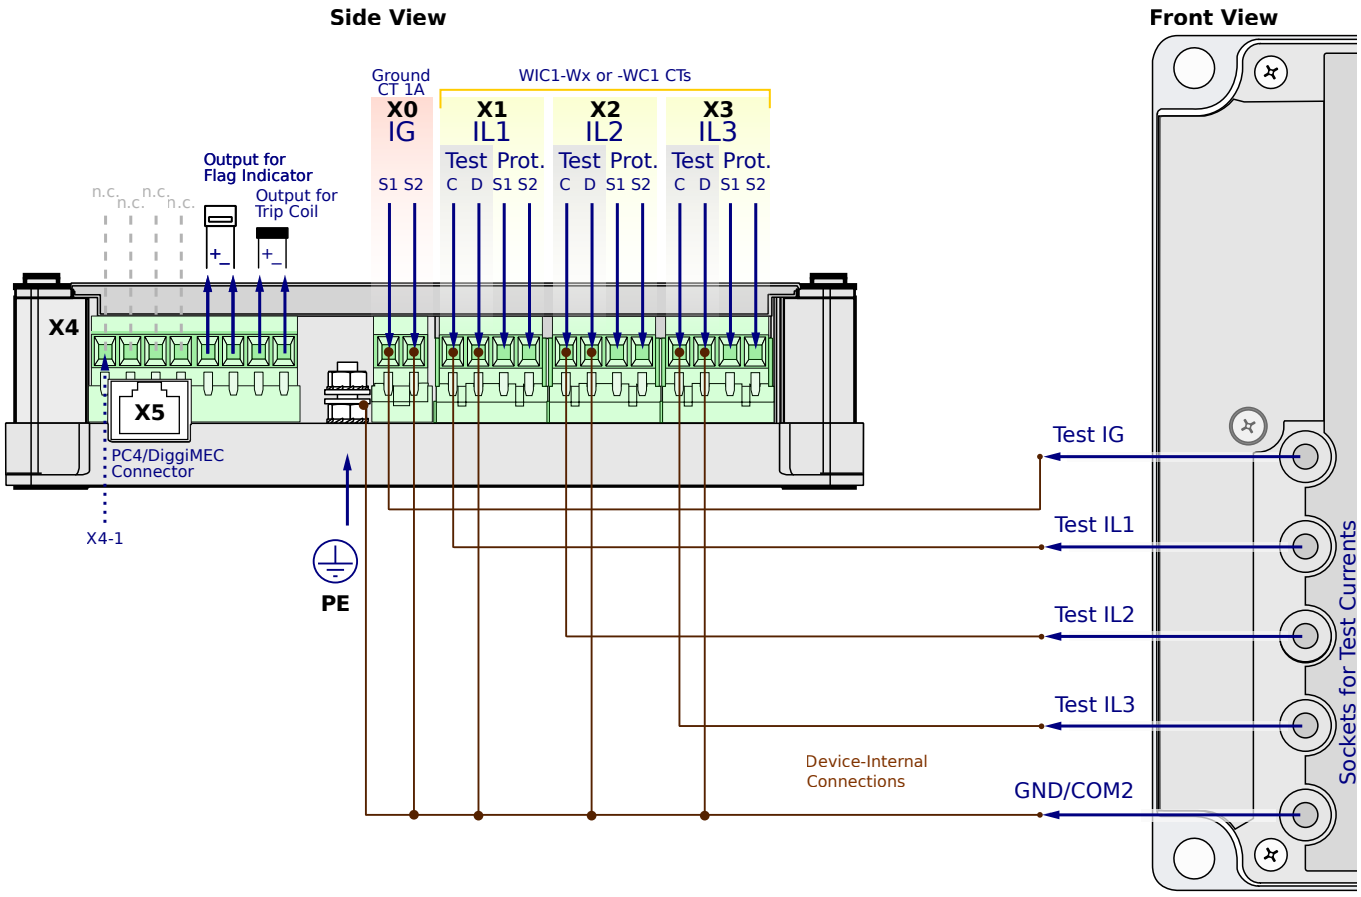


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN0PAH

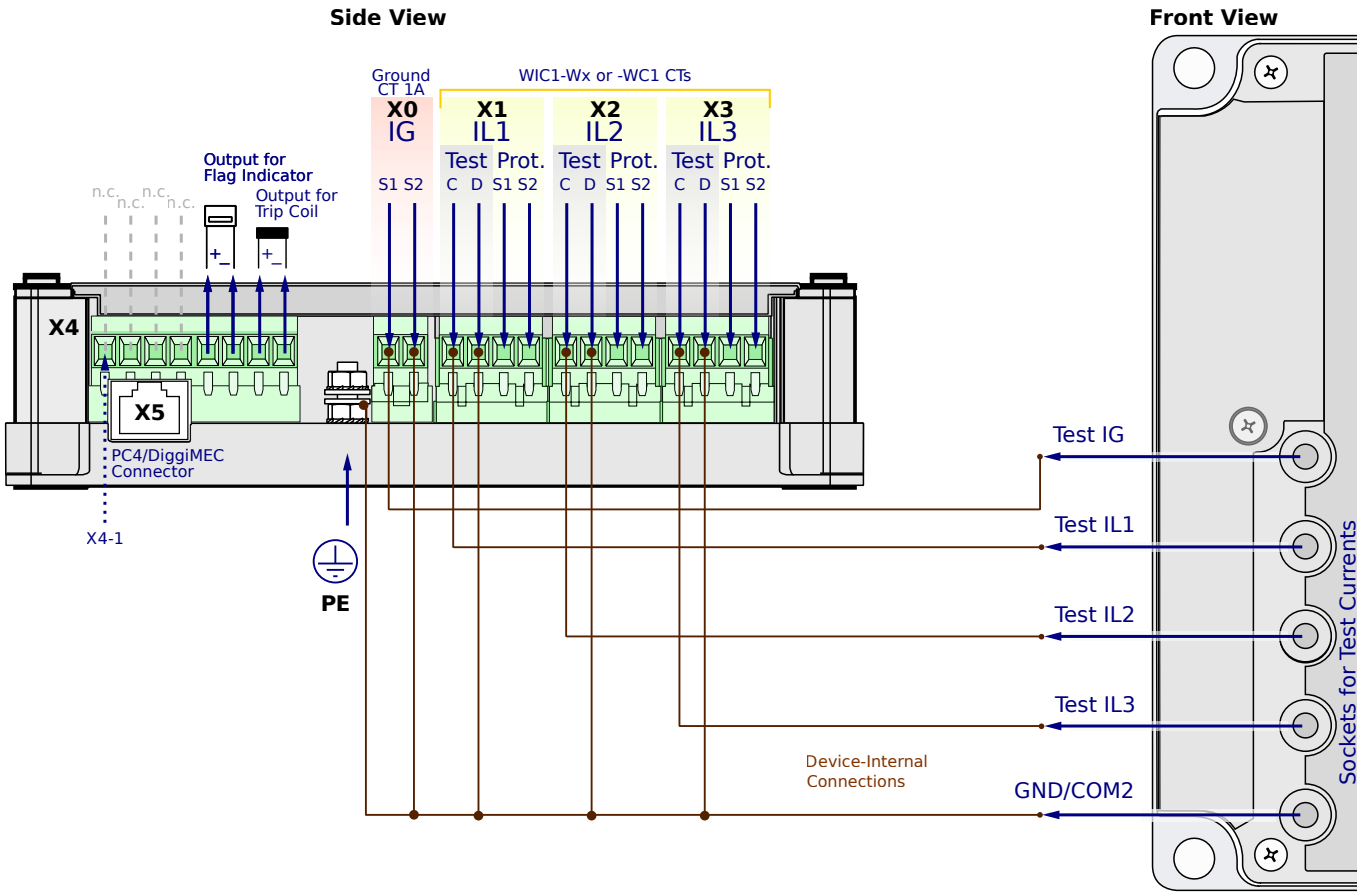


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1SA0

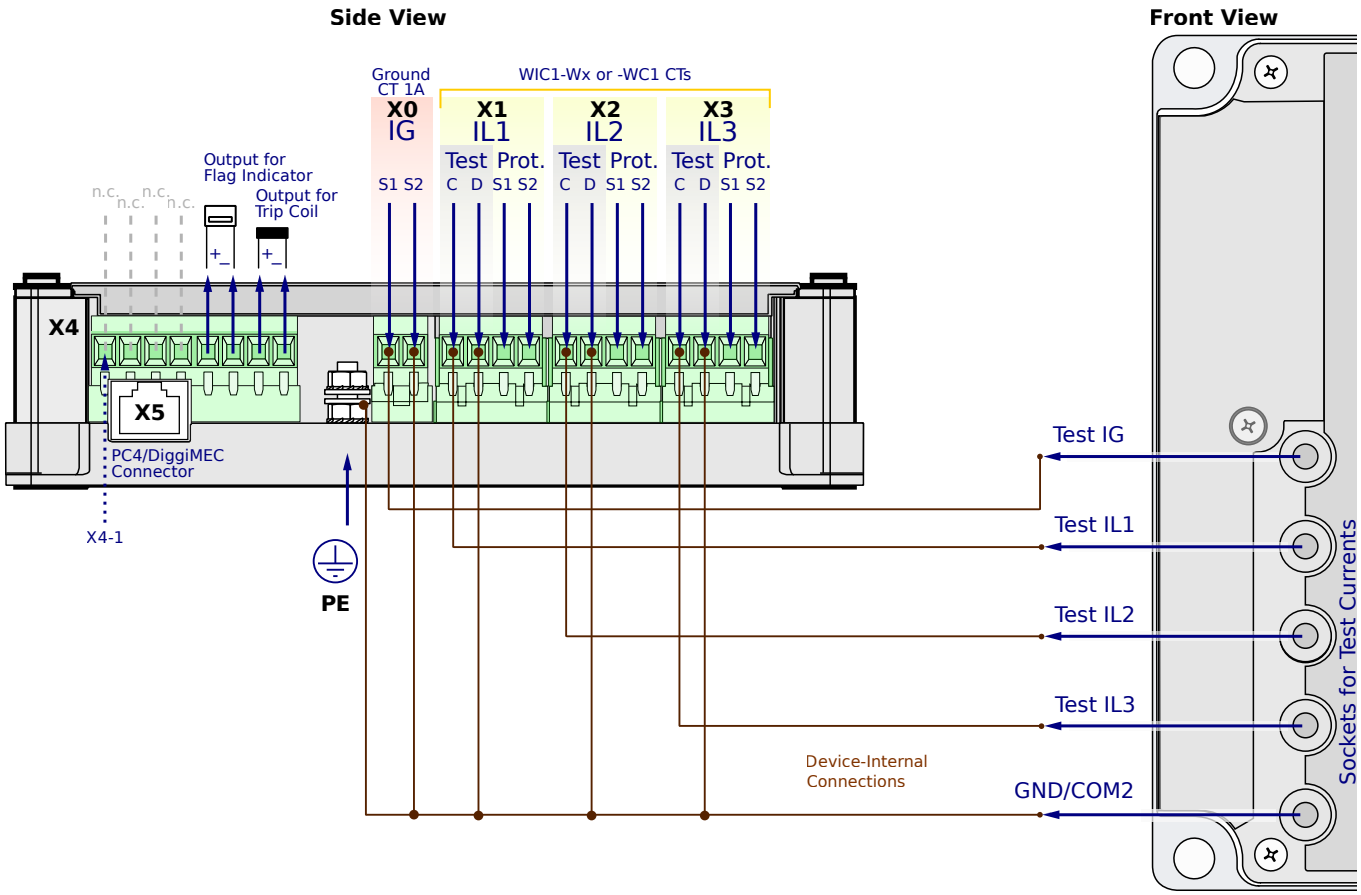


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1SAH

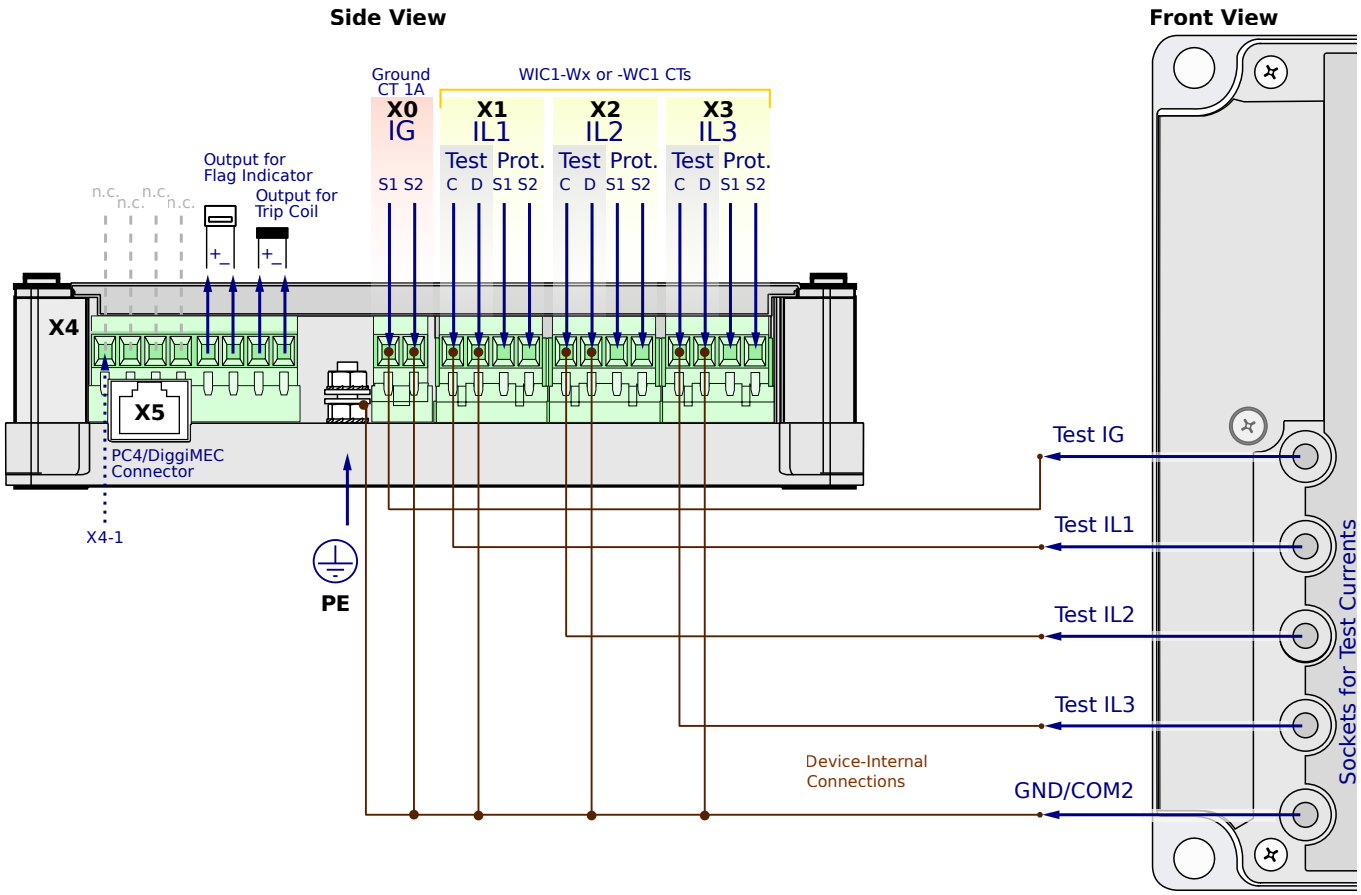


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1AA0

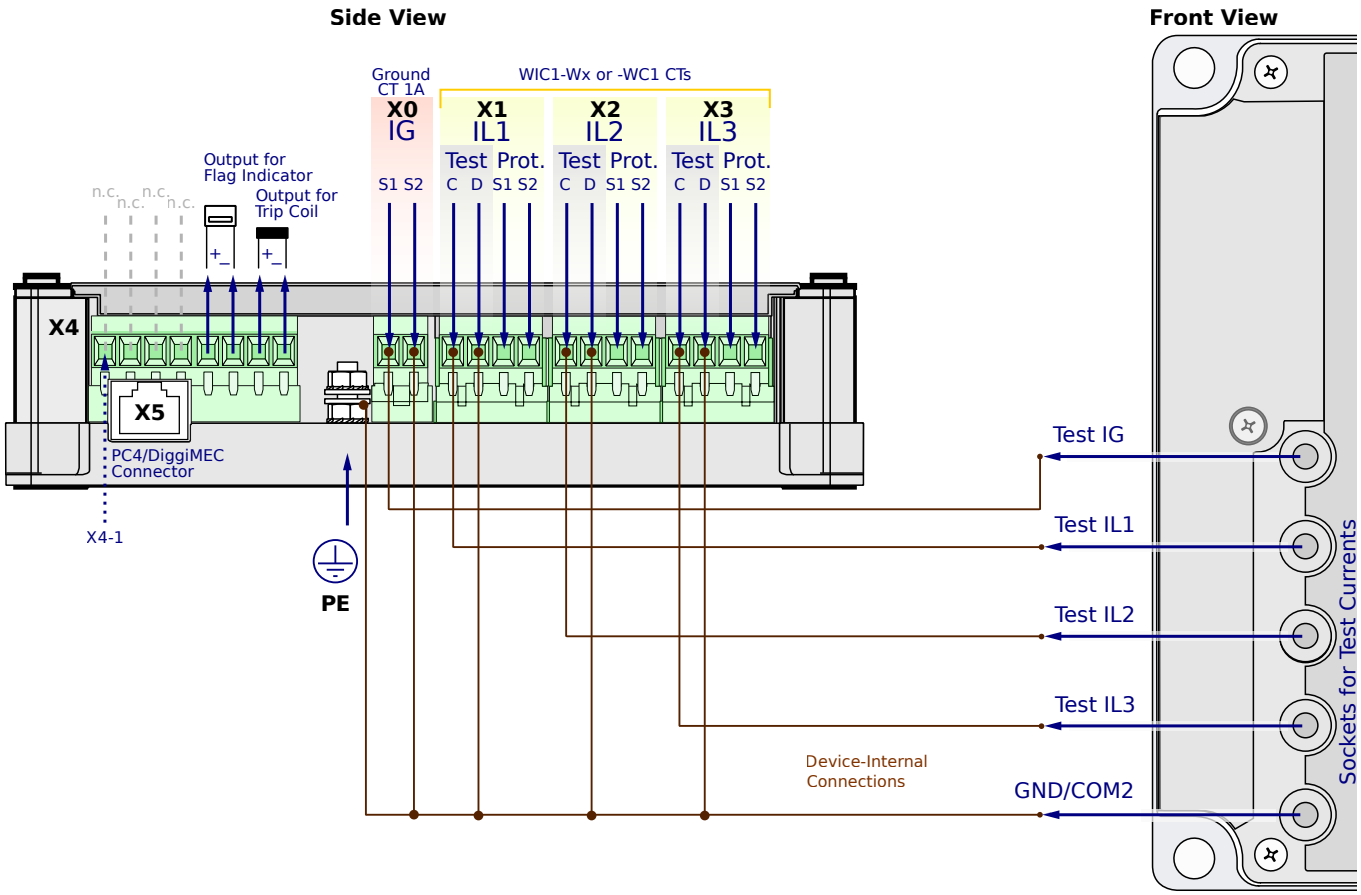


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1AAH

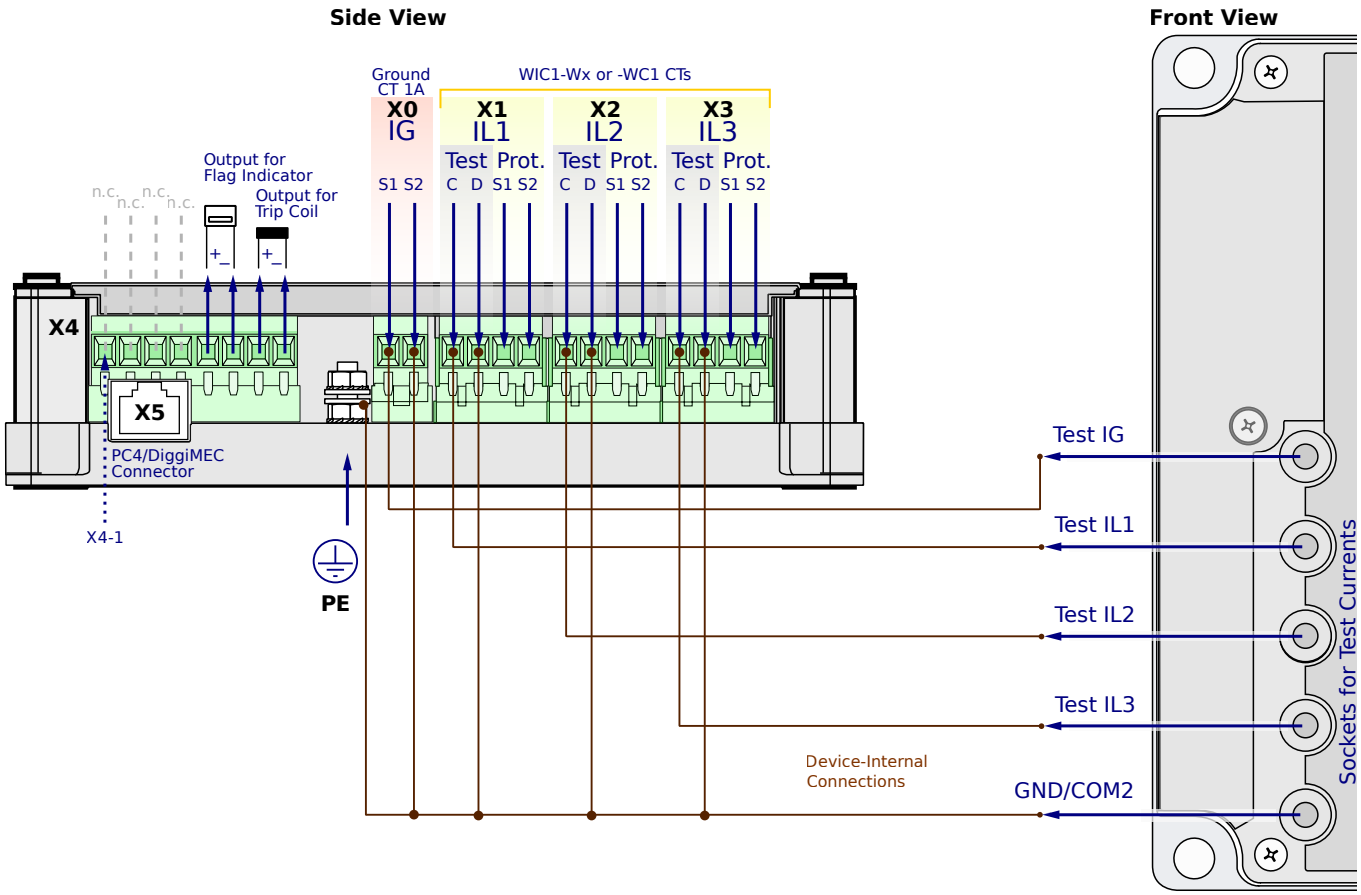


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1PA0

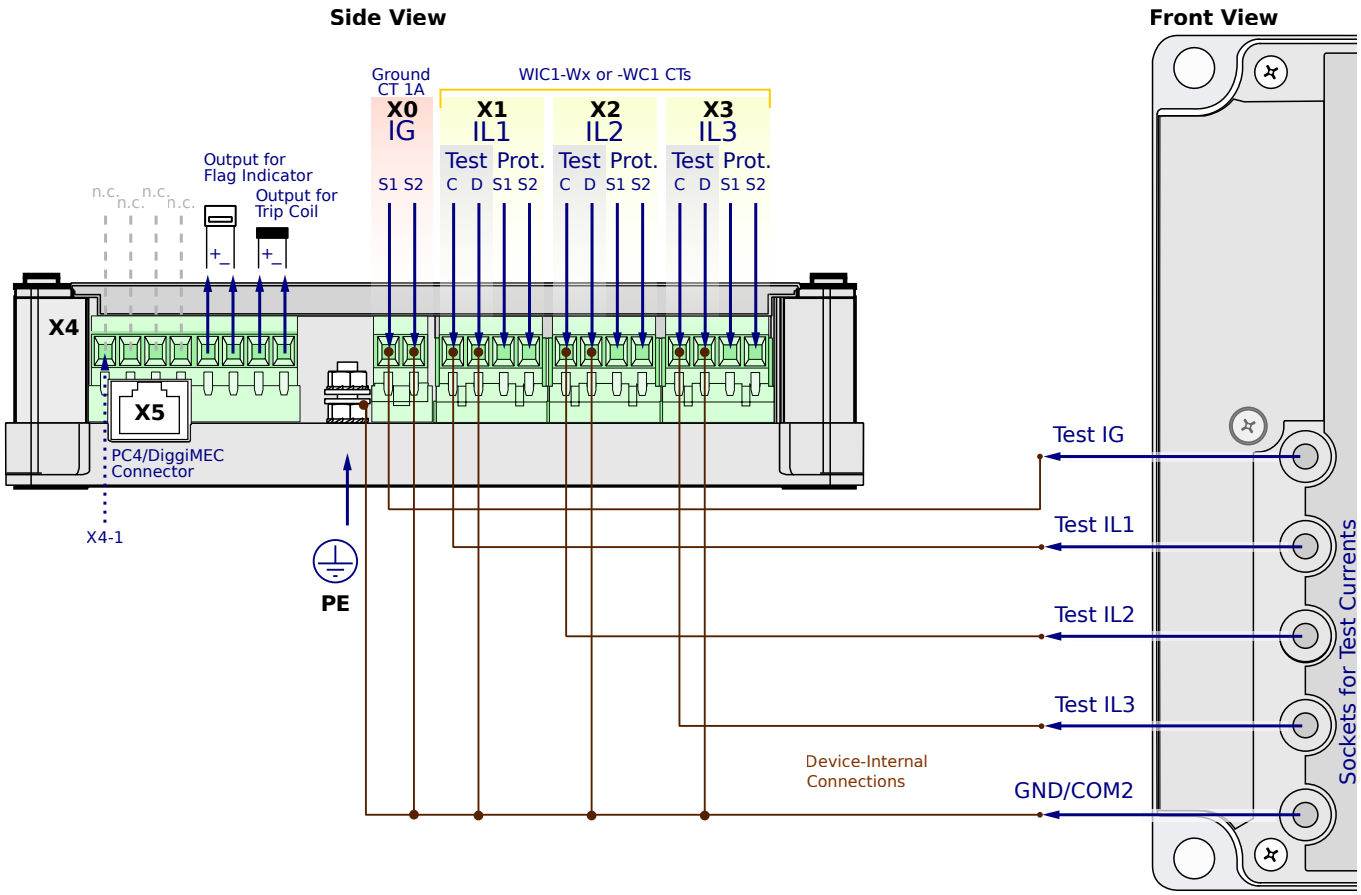


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN1PAH

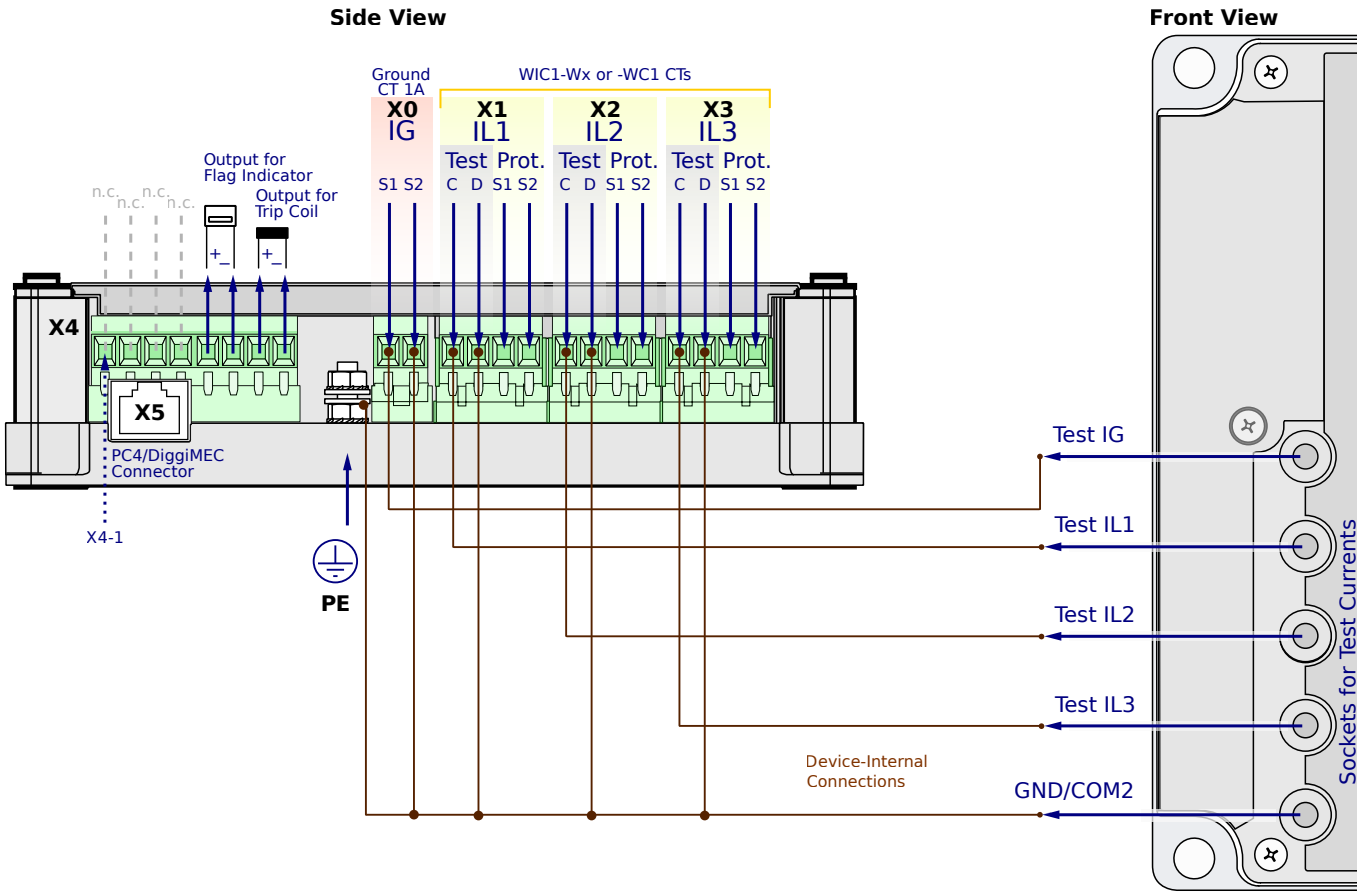


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2SA0

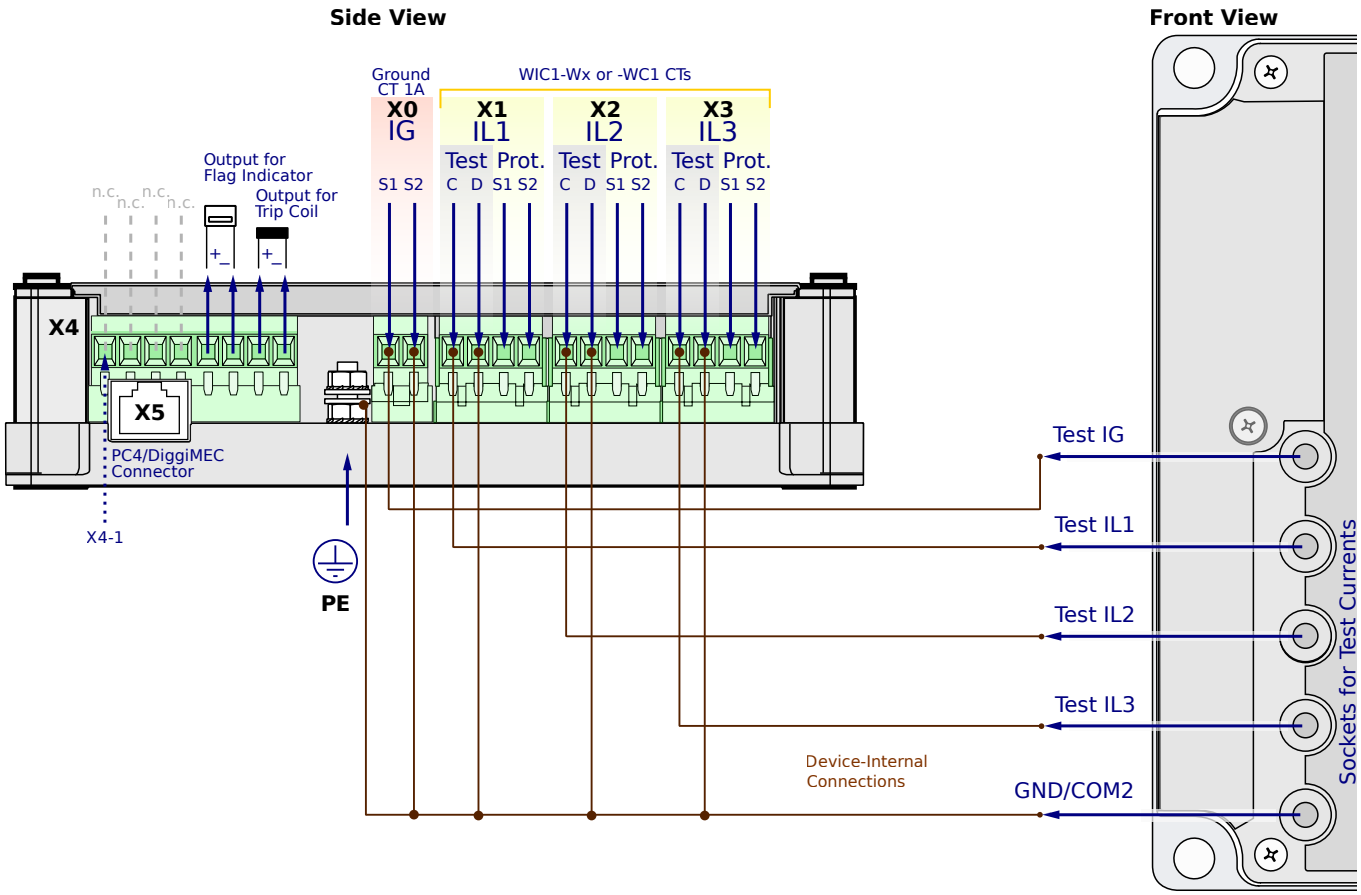


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2SAH

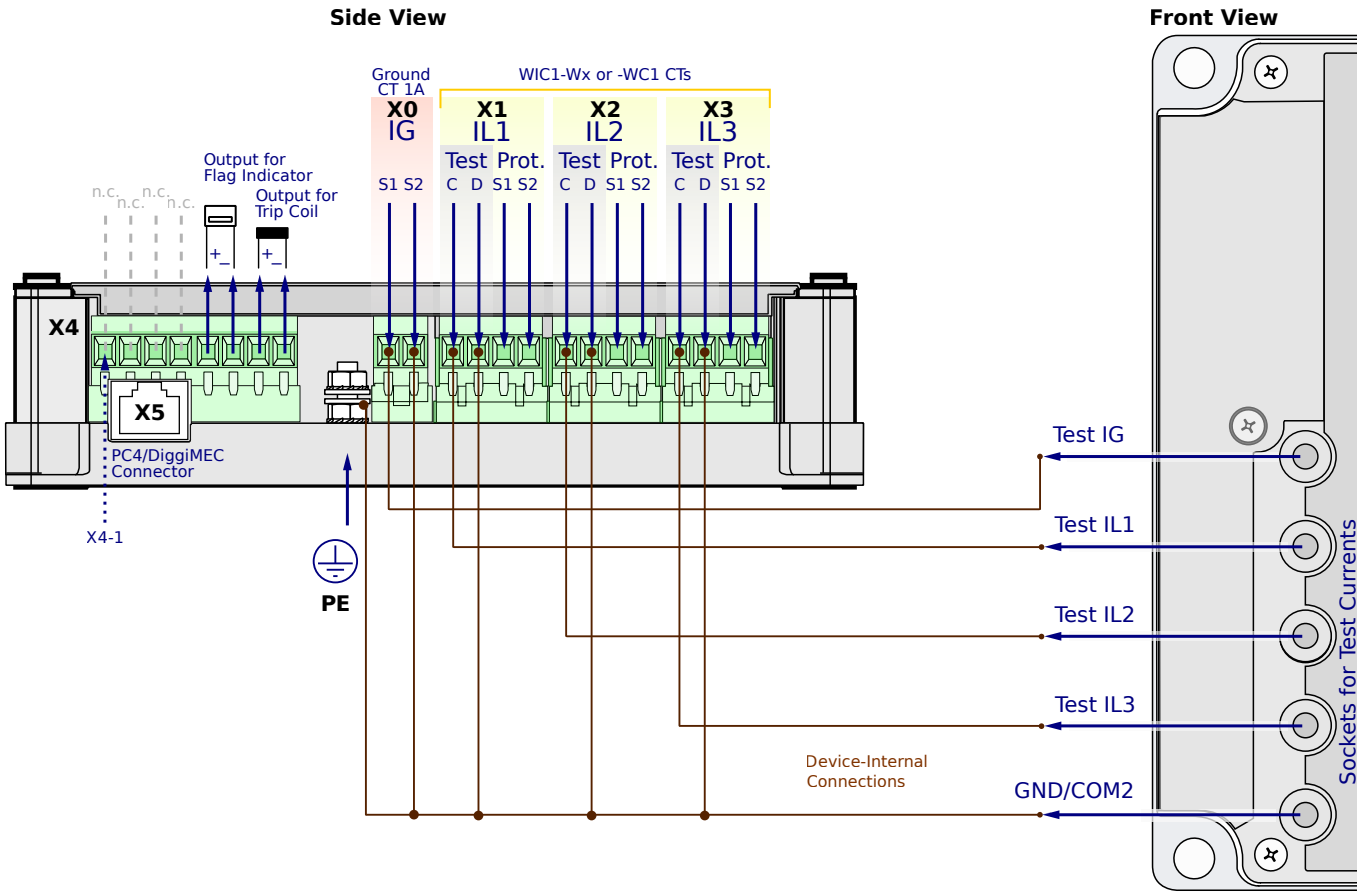


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2AA0

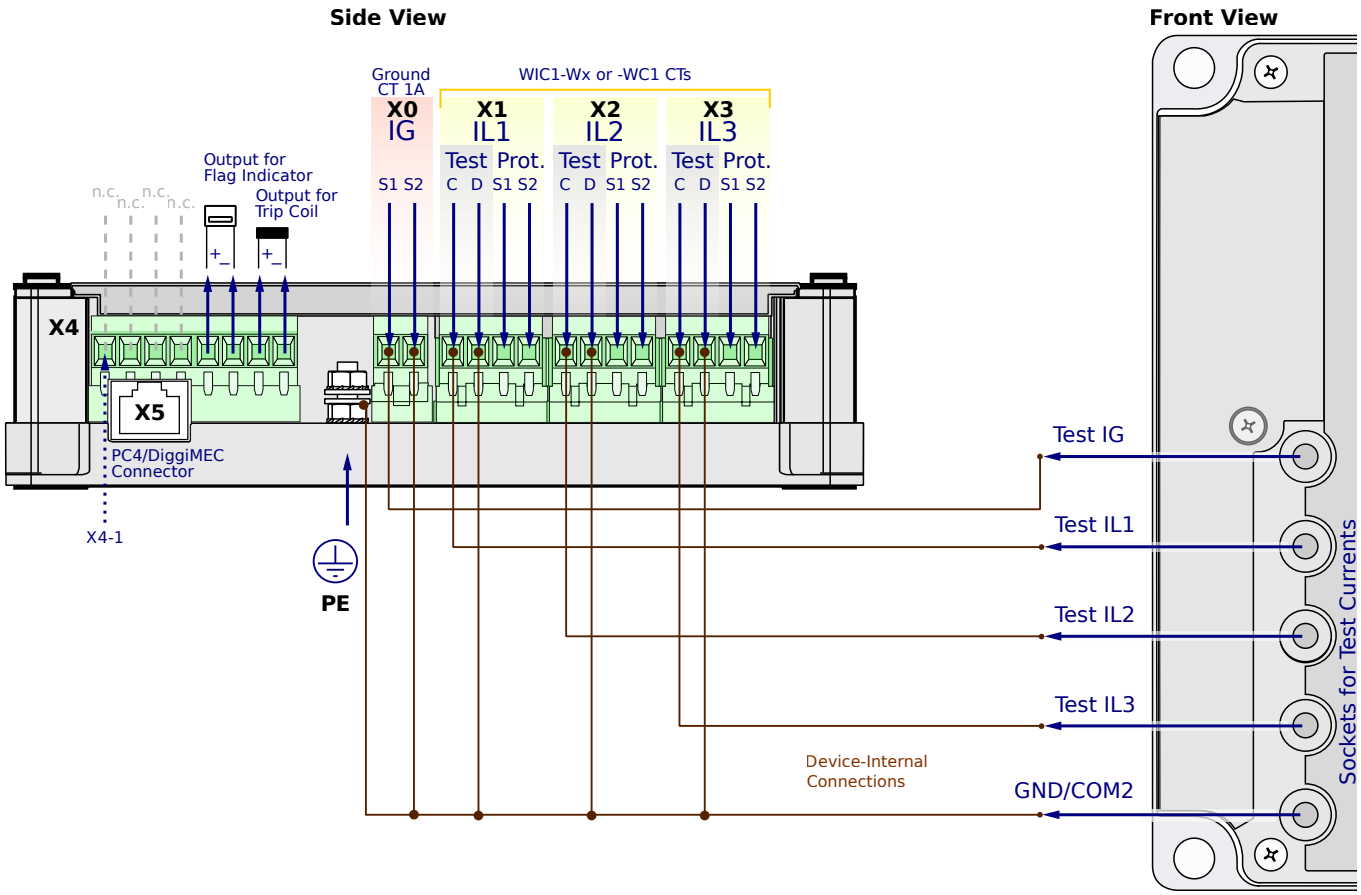


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2AAH

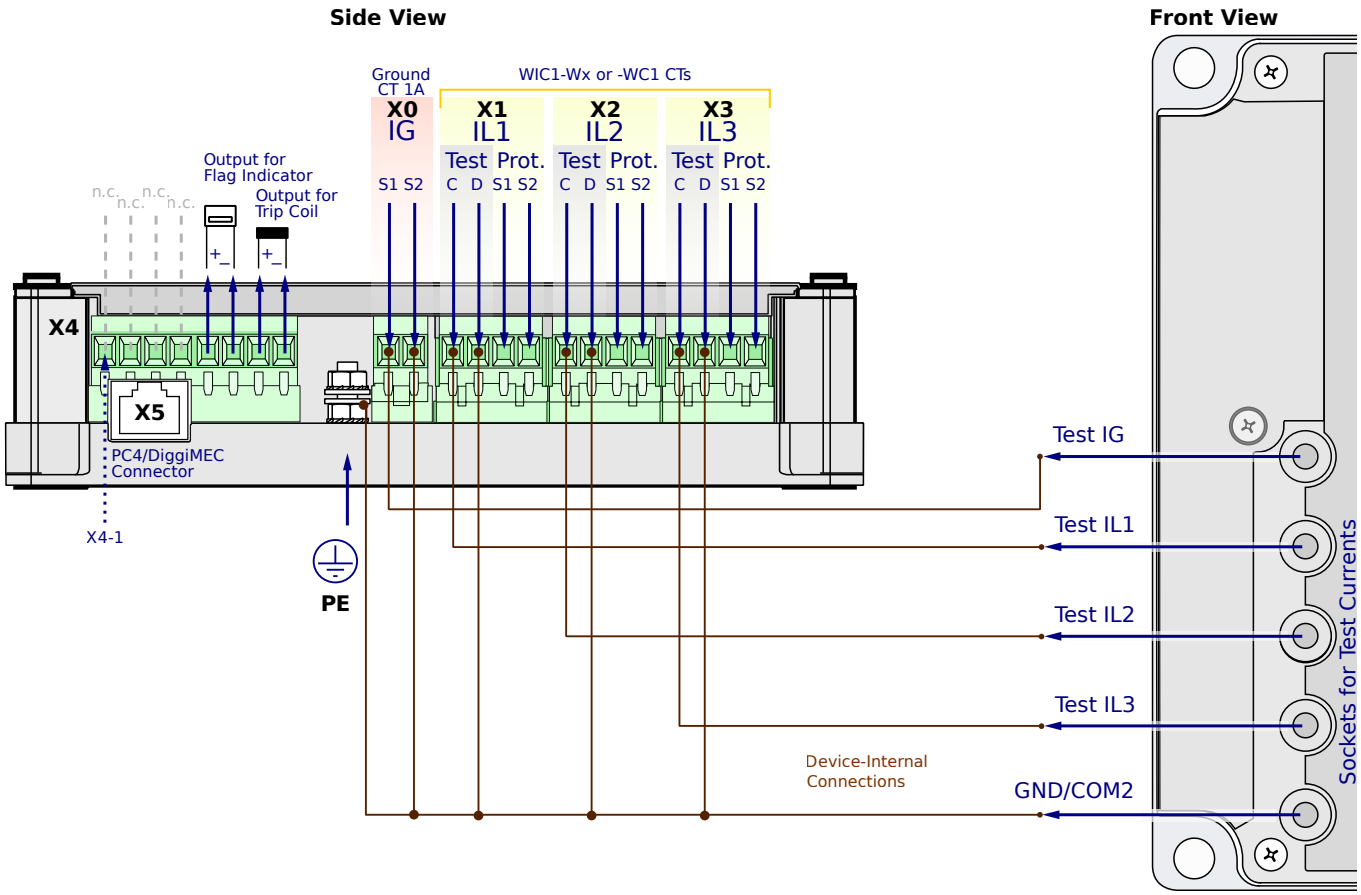


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2PA0

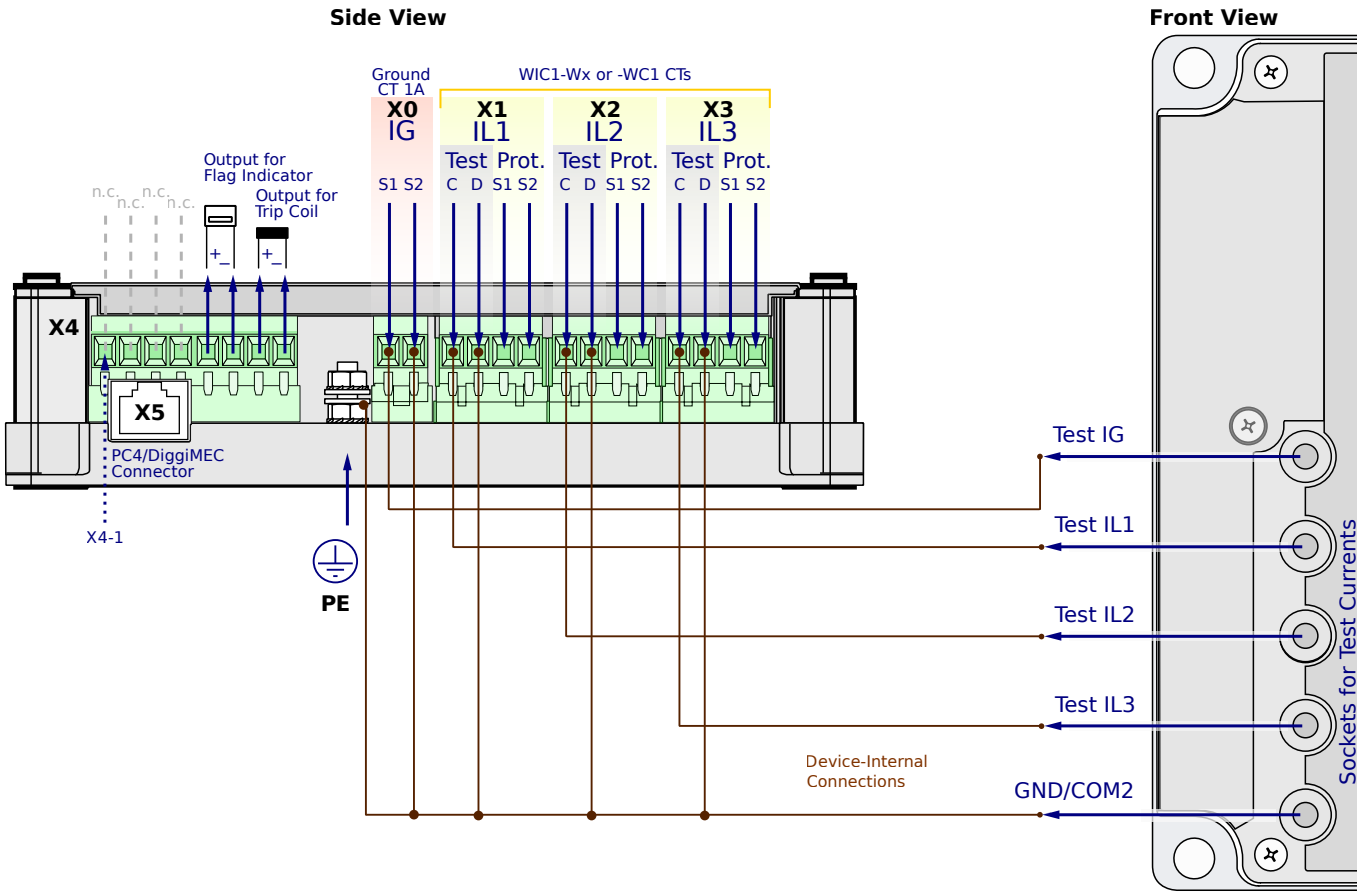


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NN2PAH

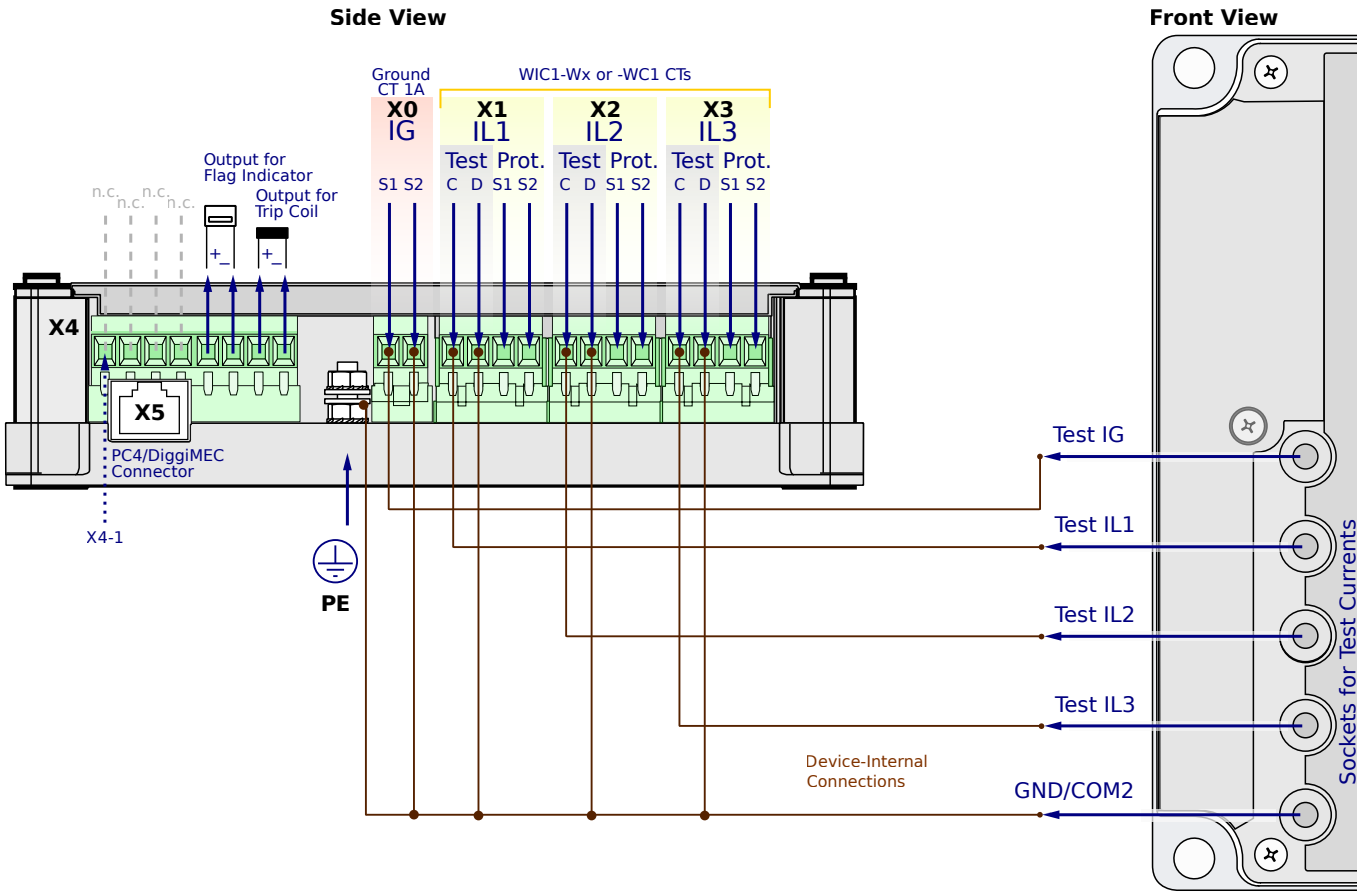


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0SA0

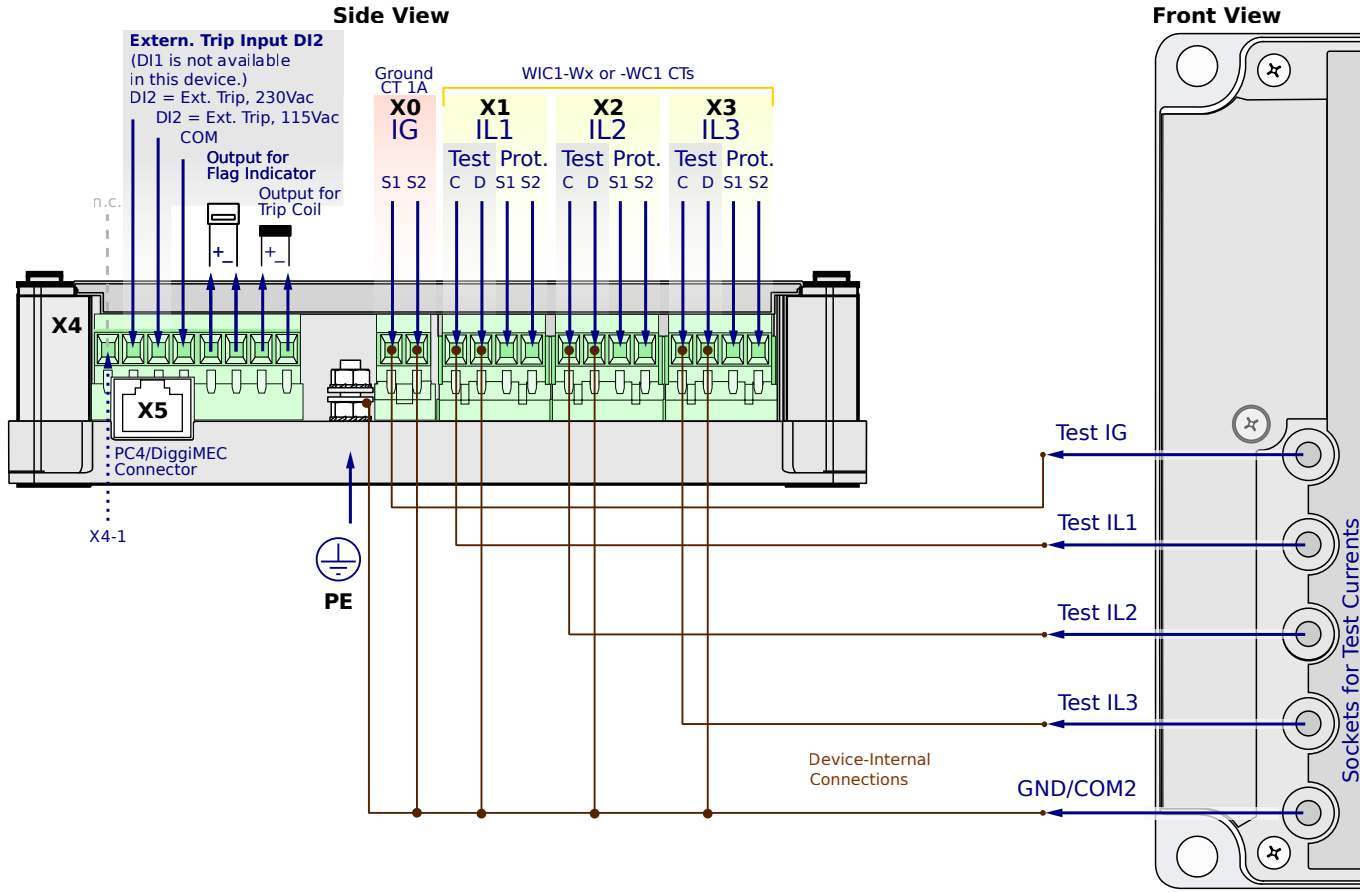


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0SAH

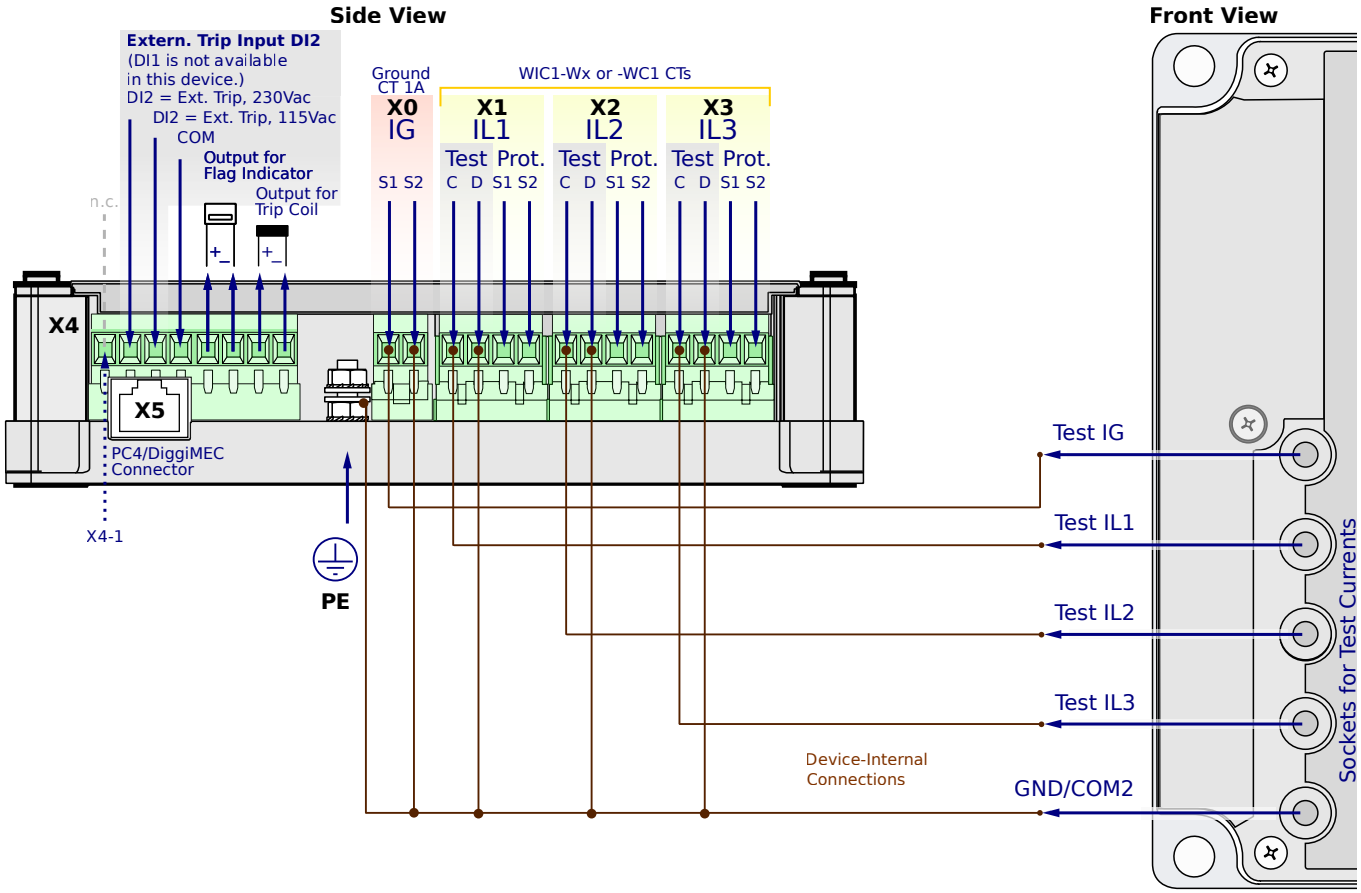


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0AA0

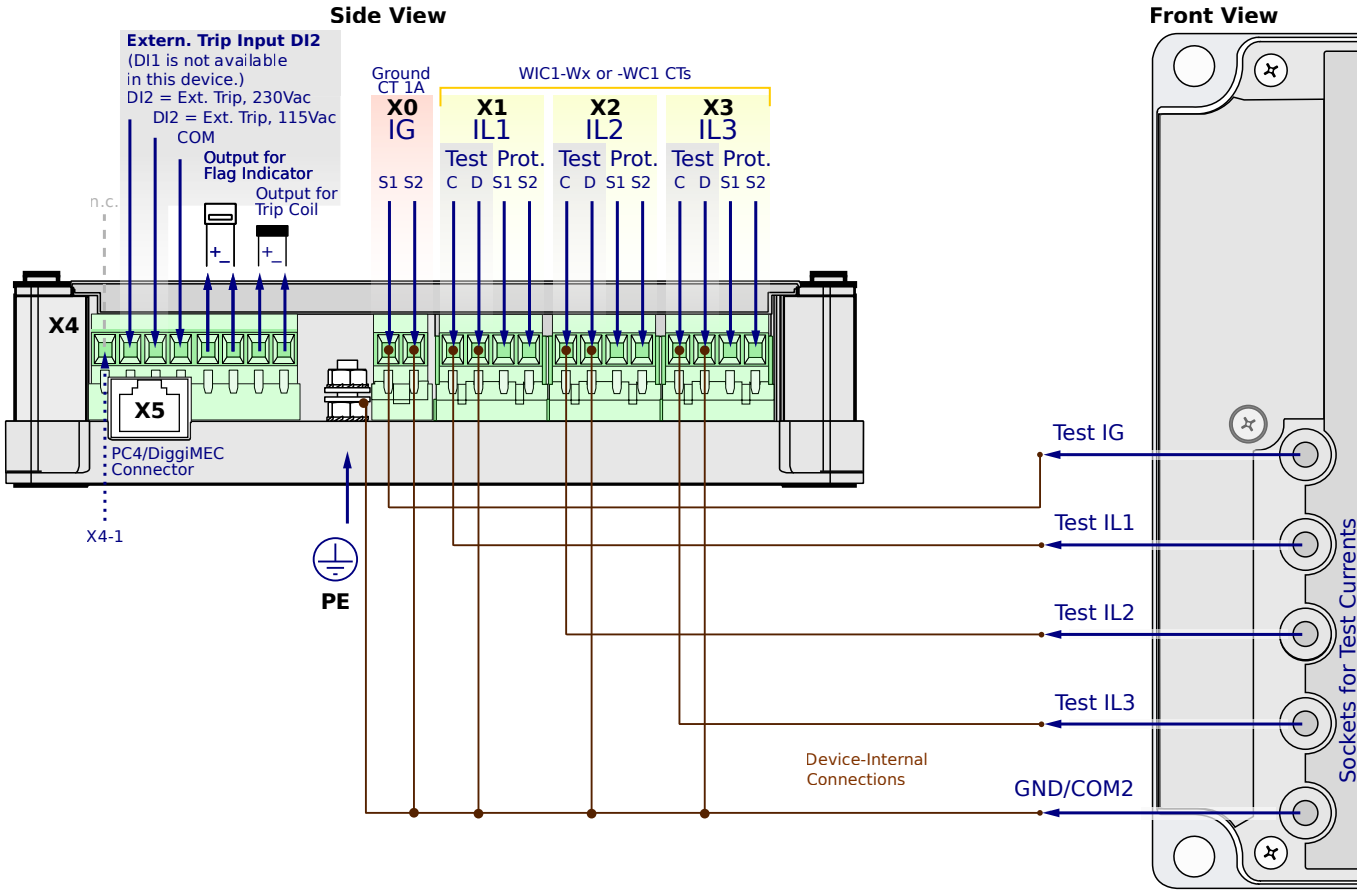


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0AAH

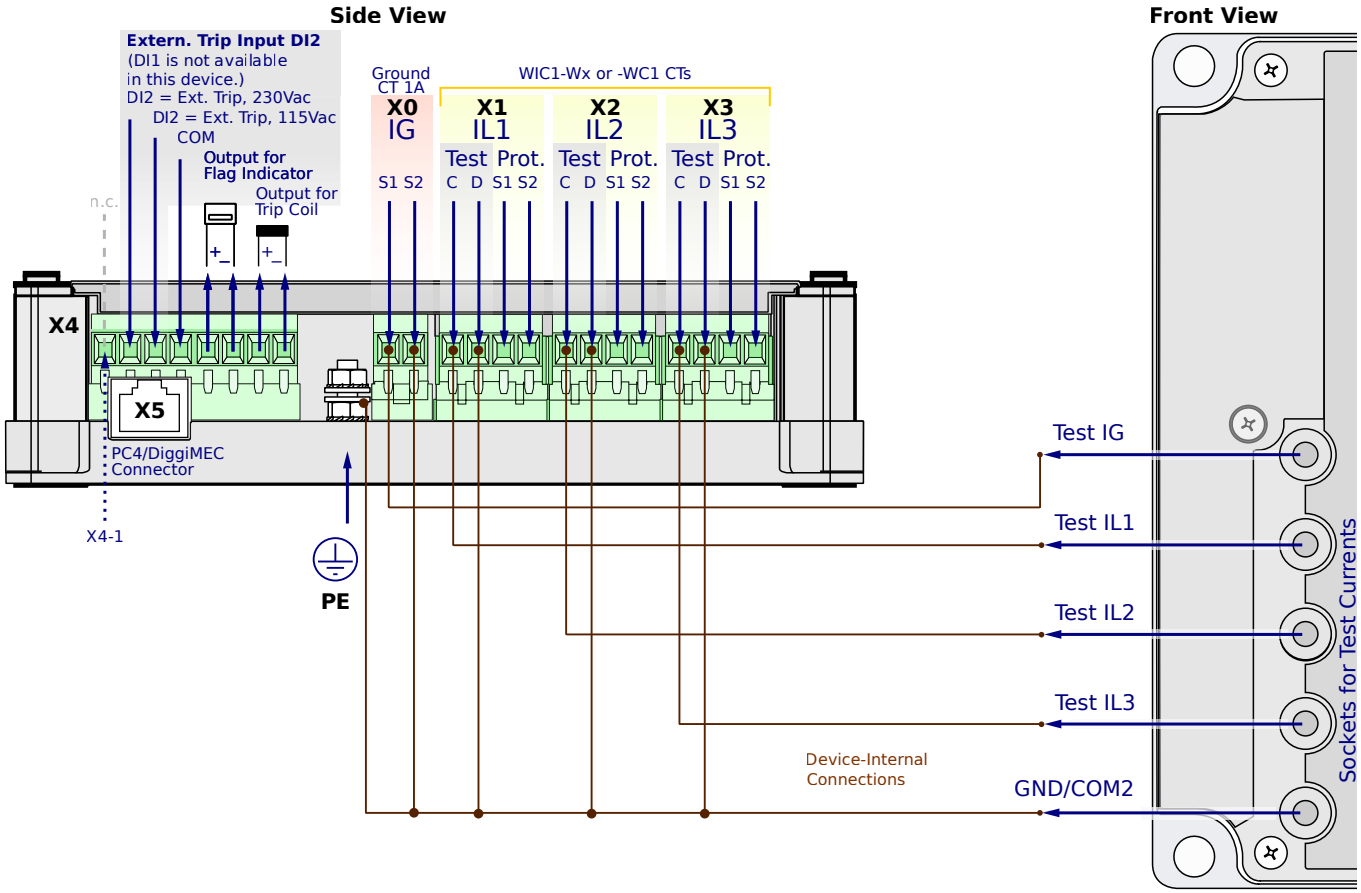


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0PA0

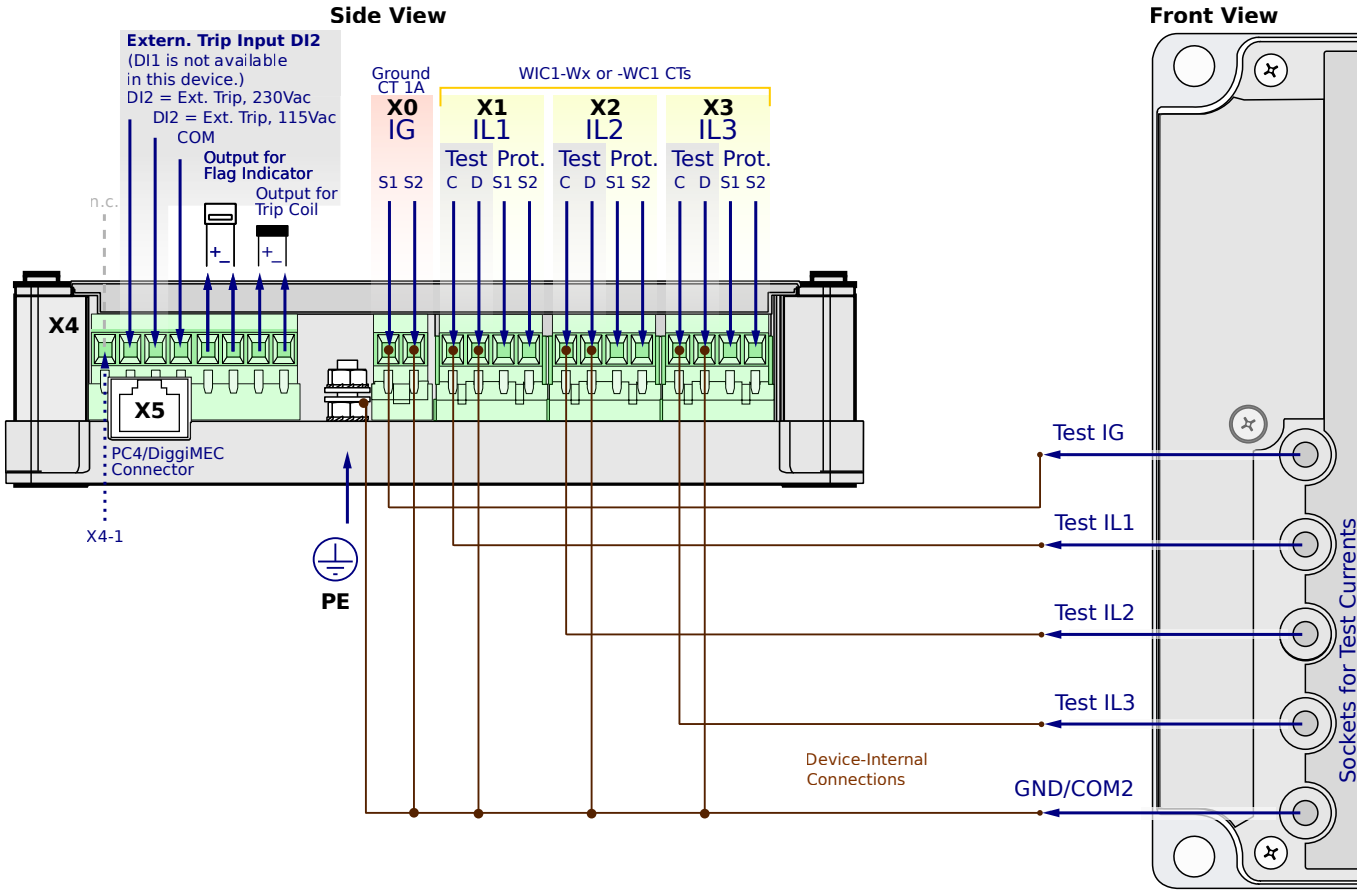


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF0PAH

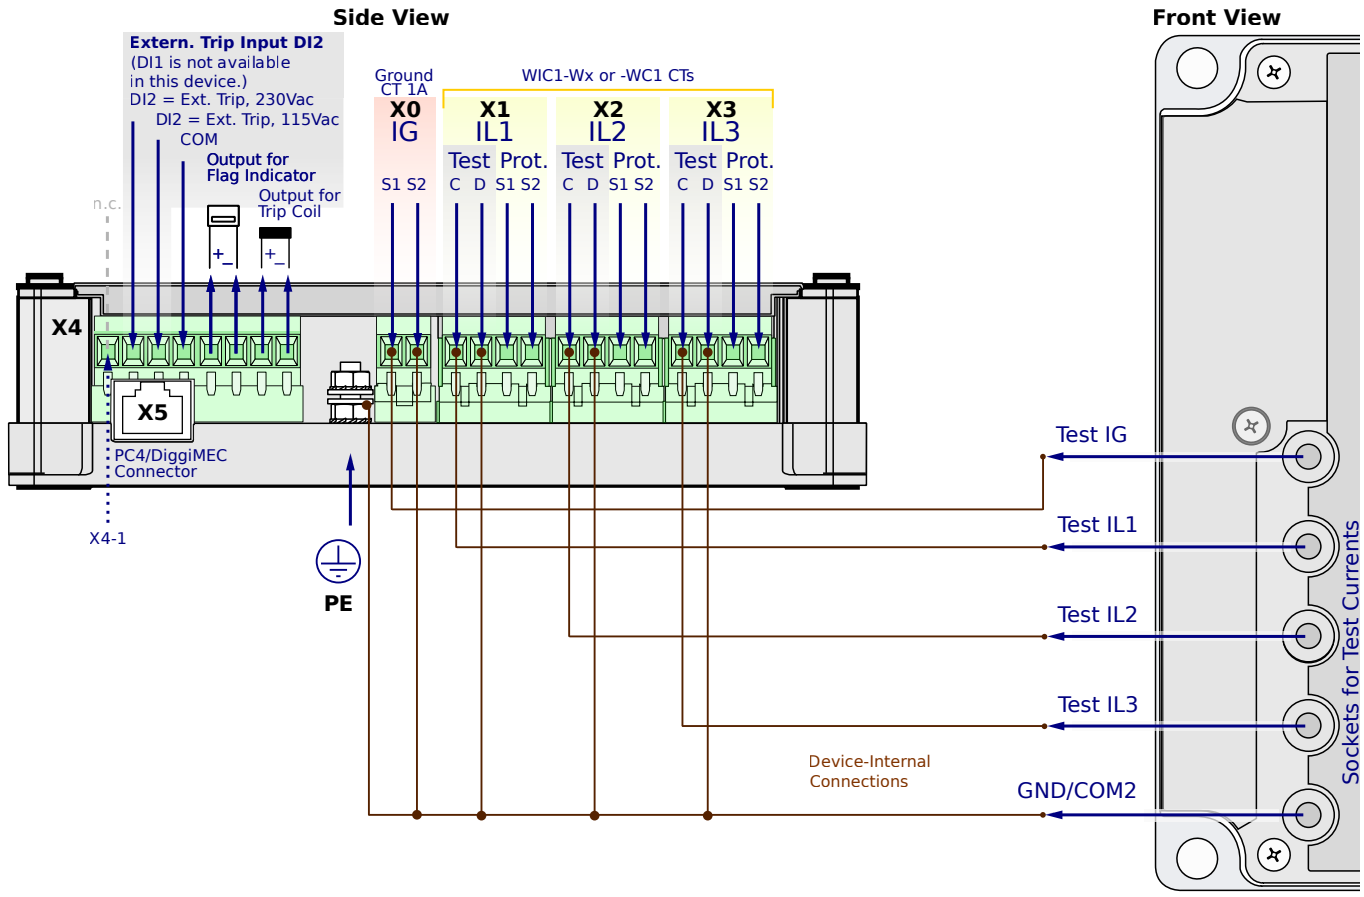


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1SA0

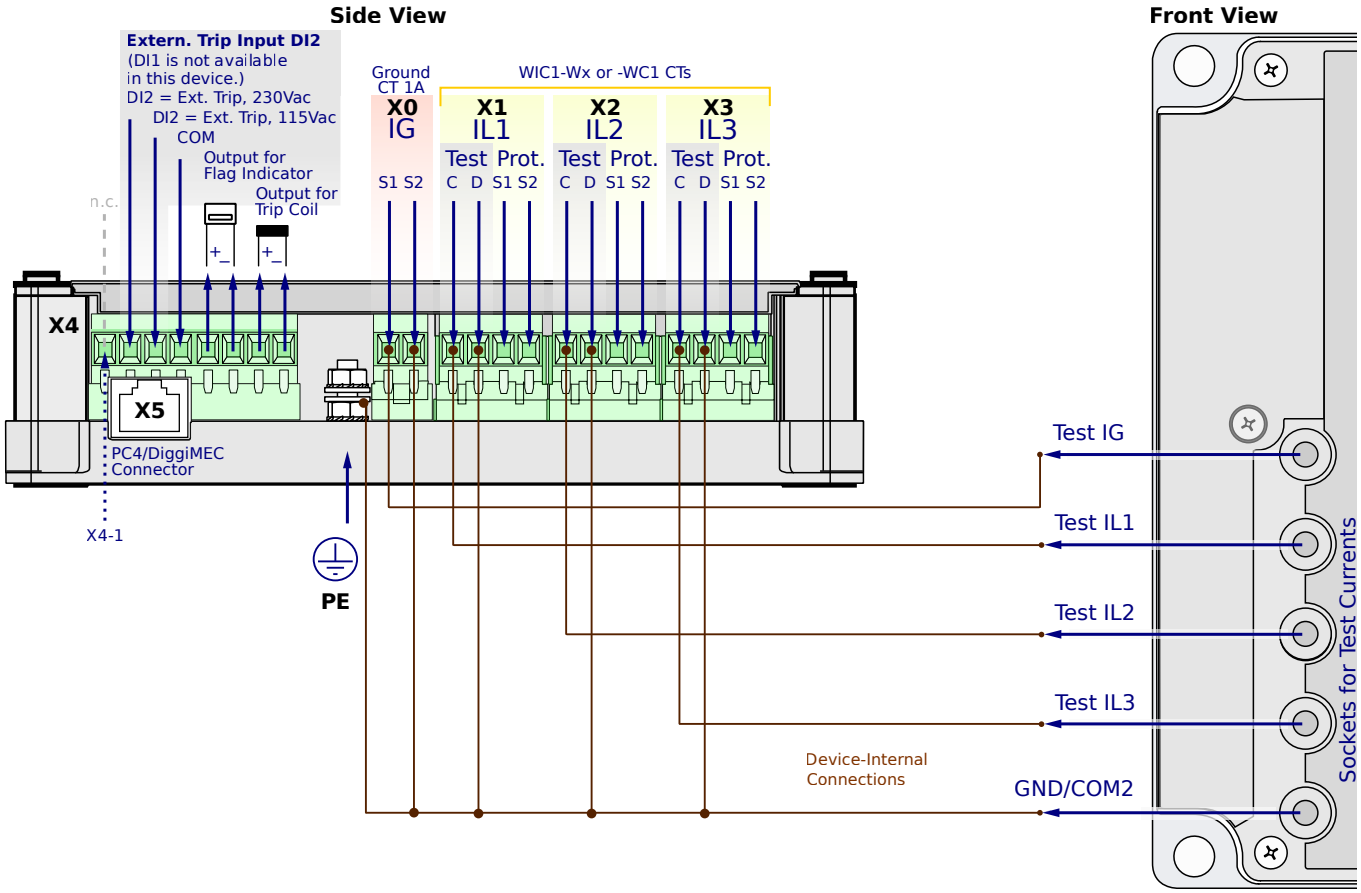


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1SAH

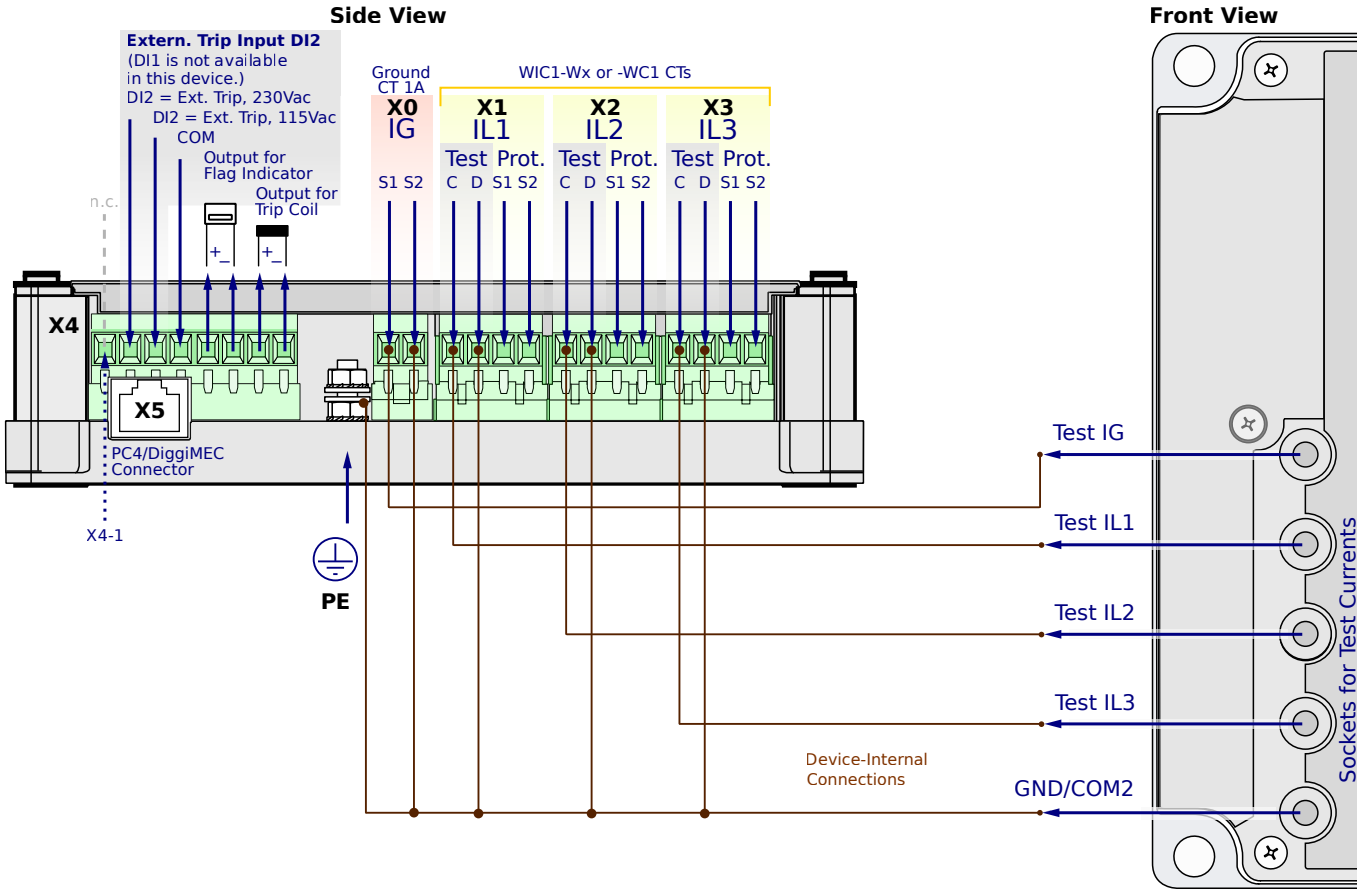


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1AA0

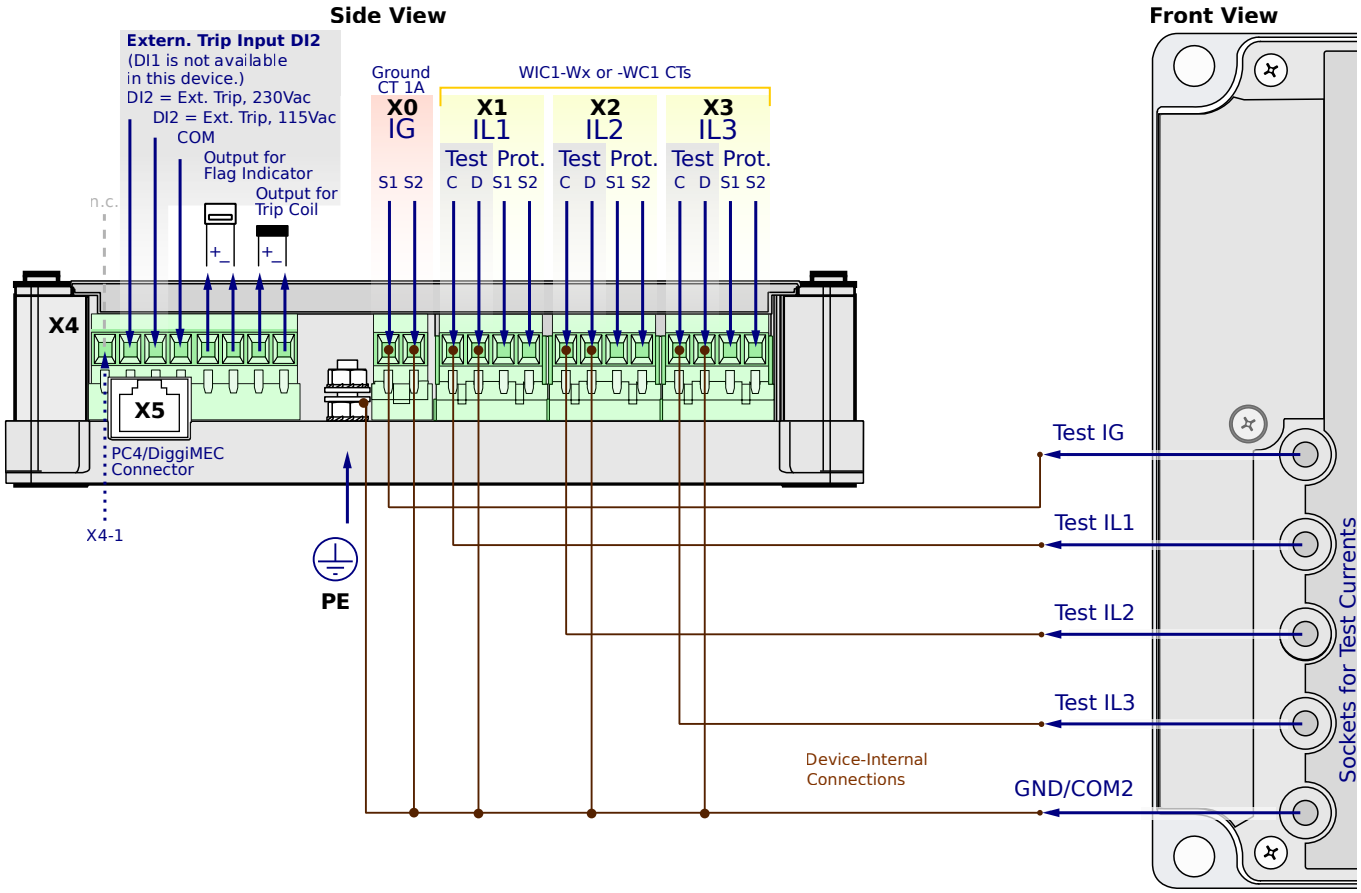


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1AAH

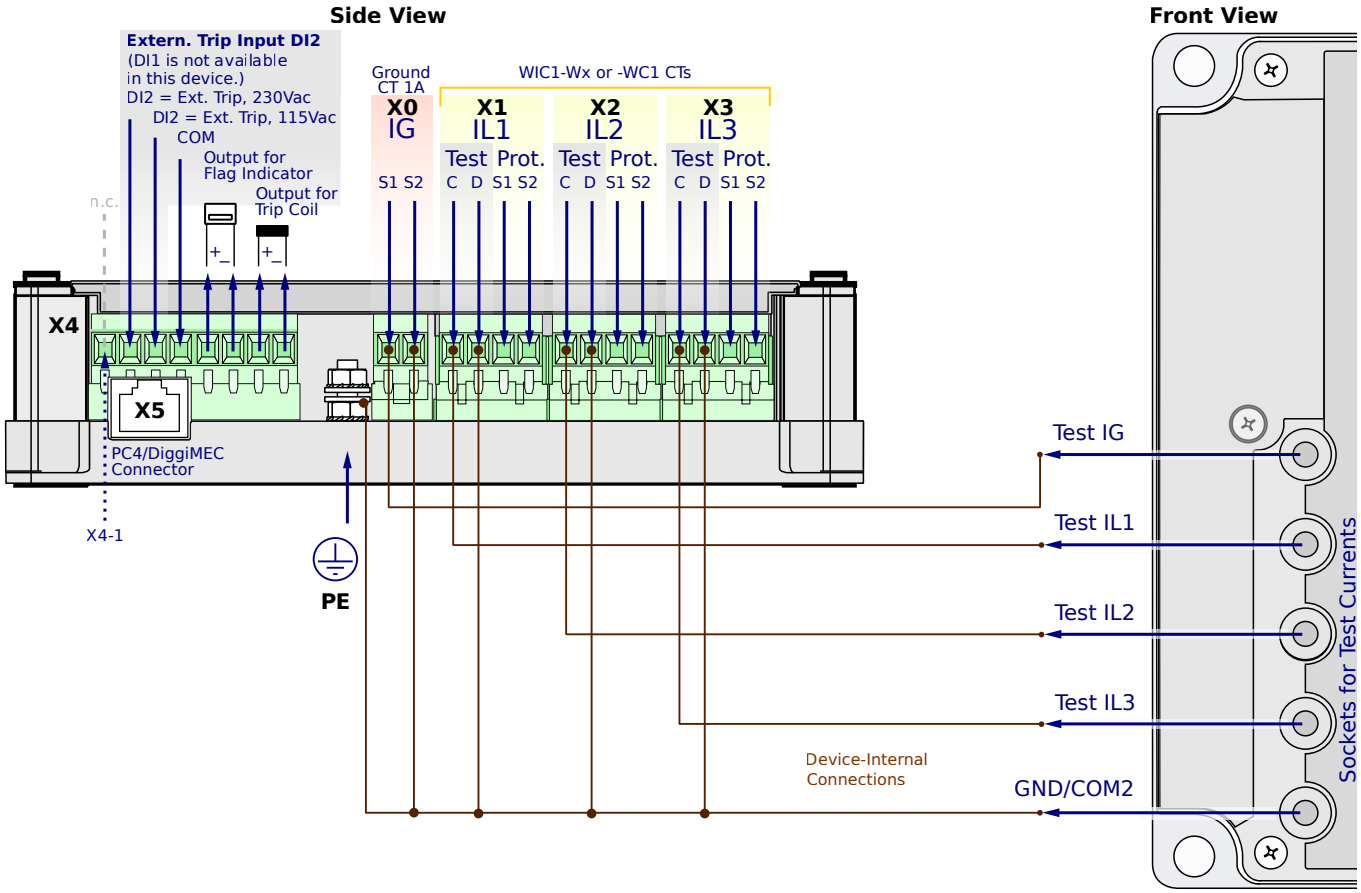


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1PA0

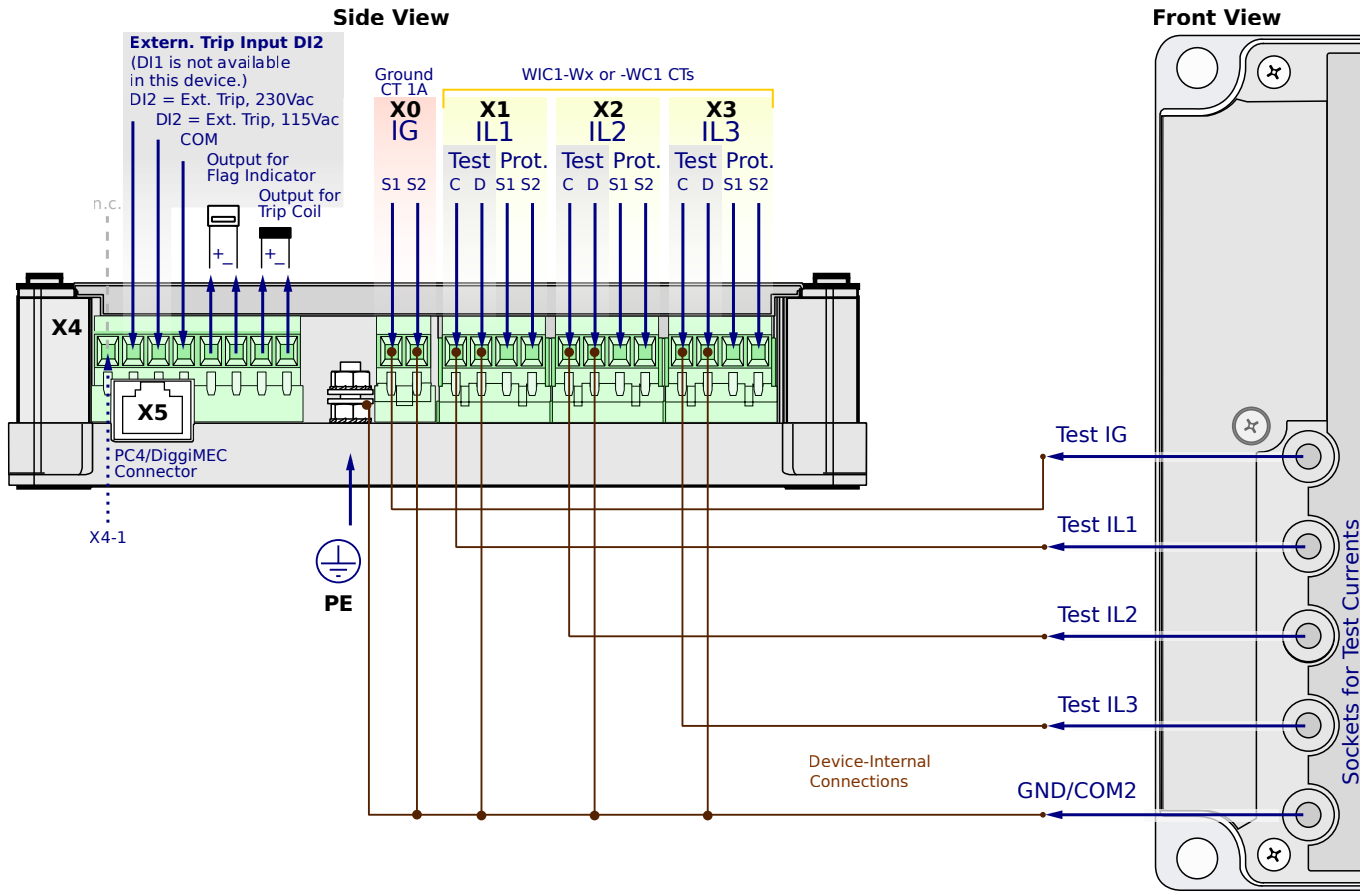


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF1PAH

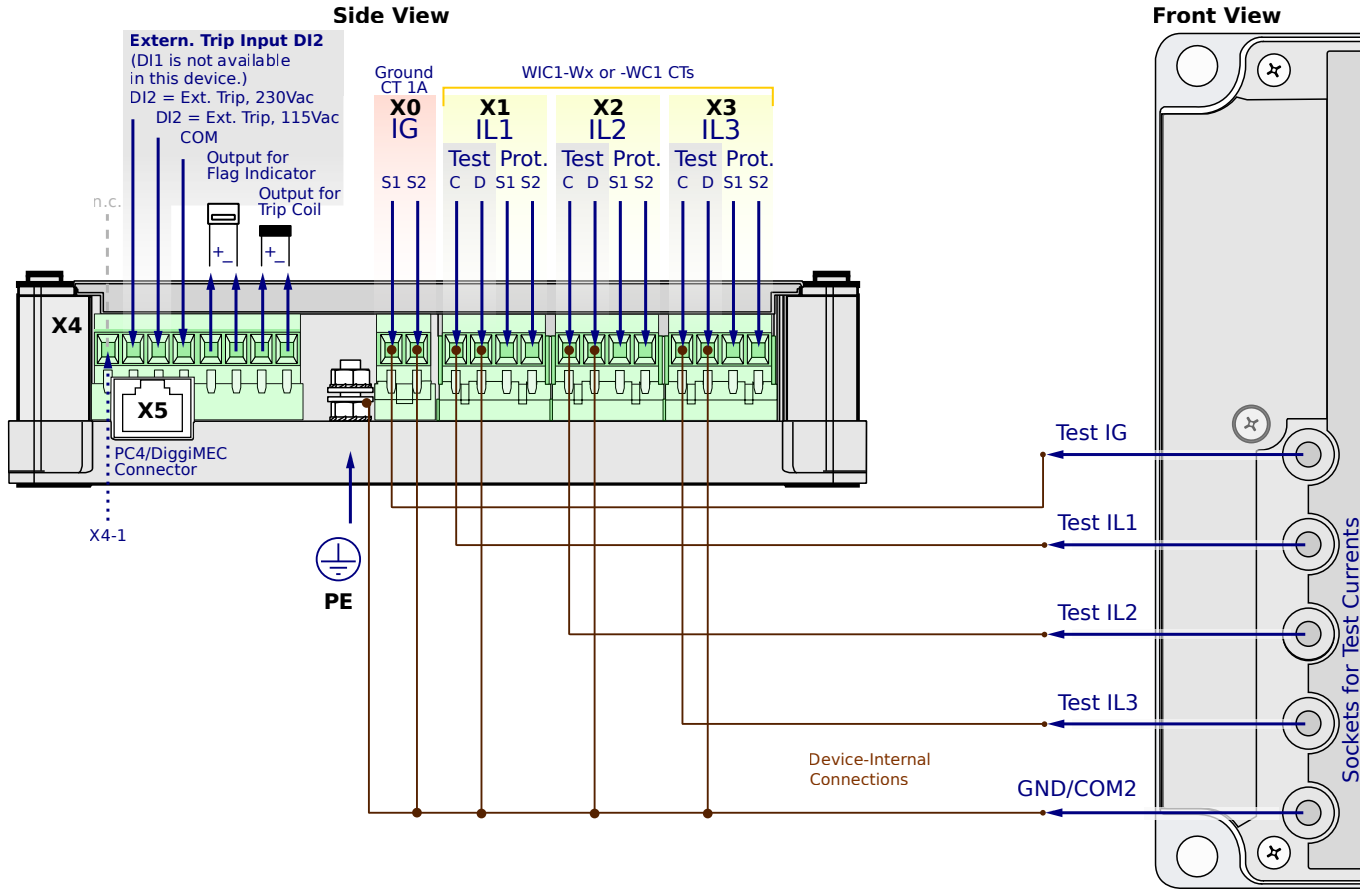


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2SA0

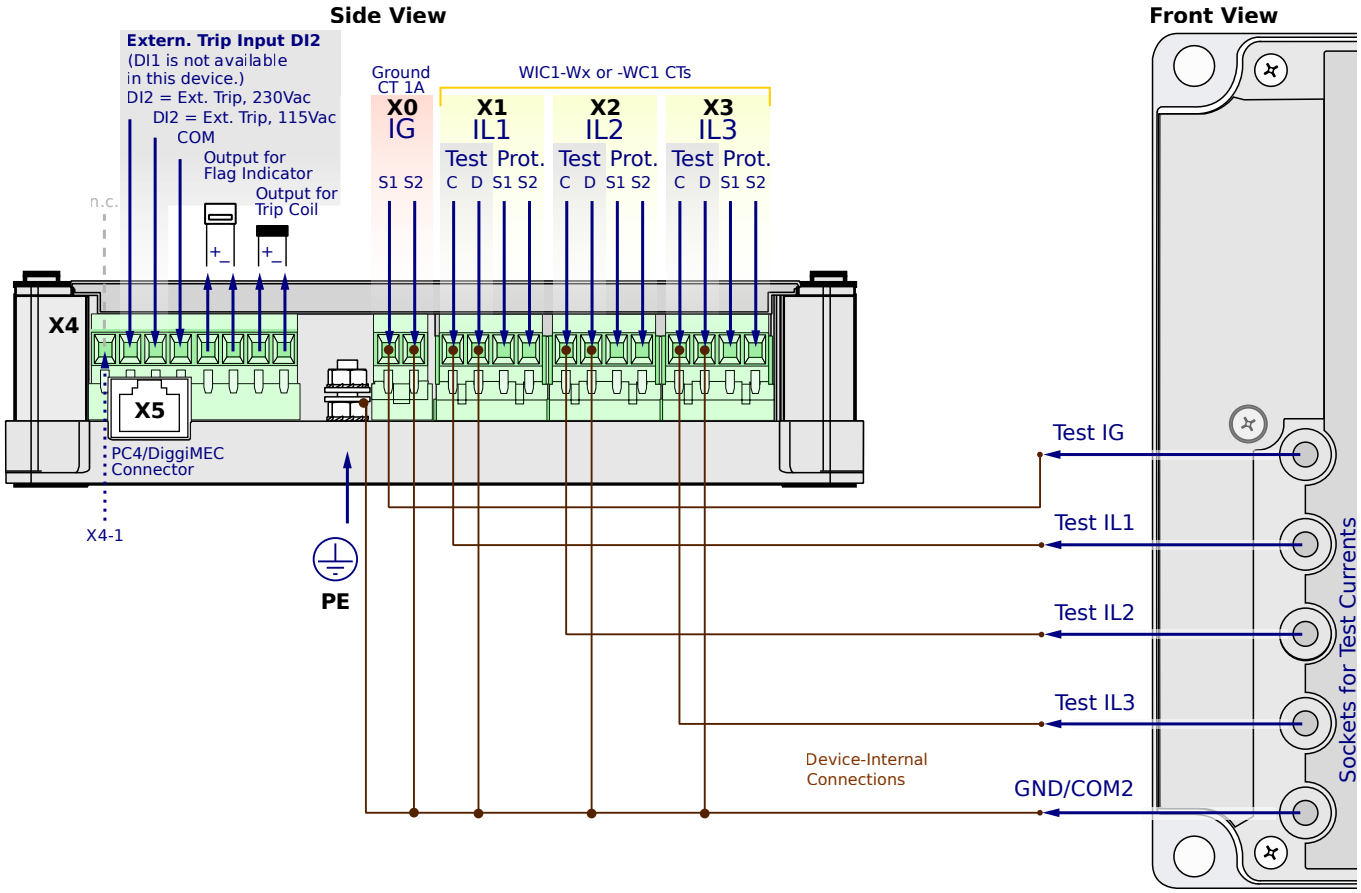


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2SAH

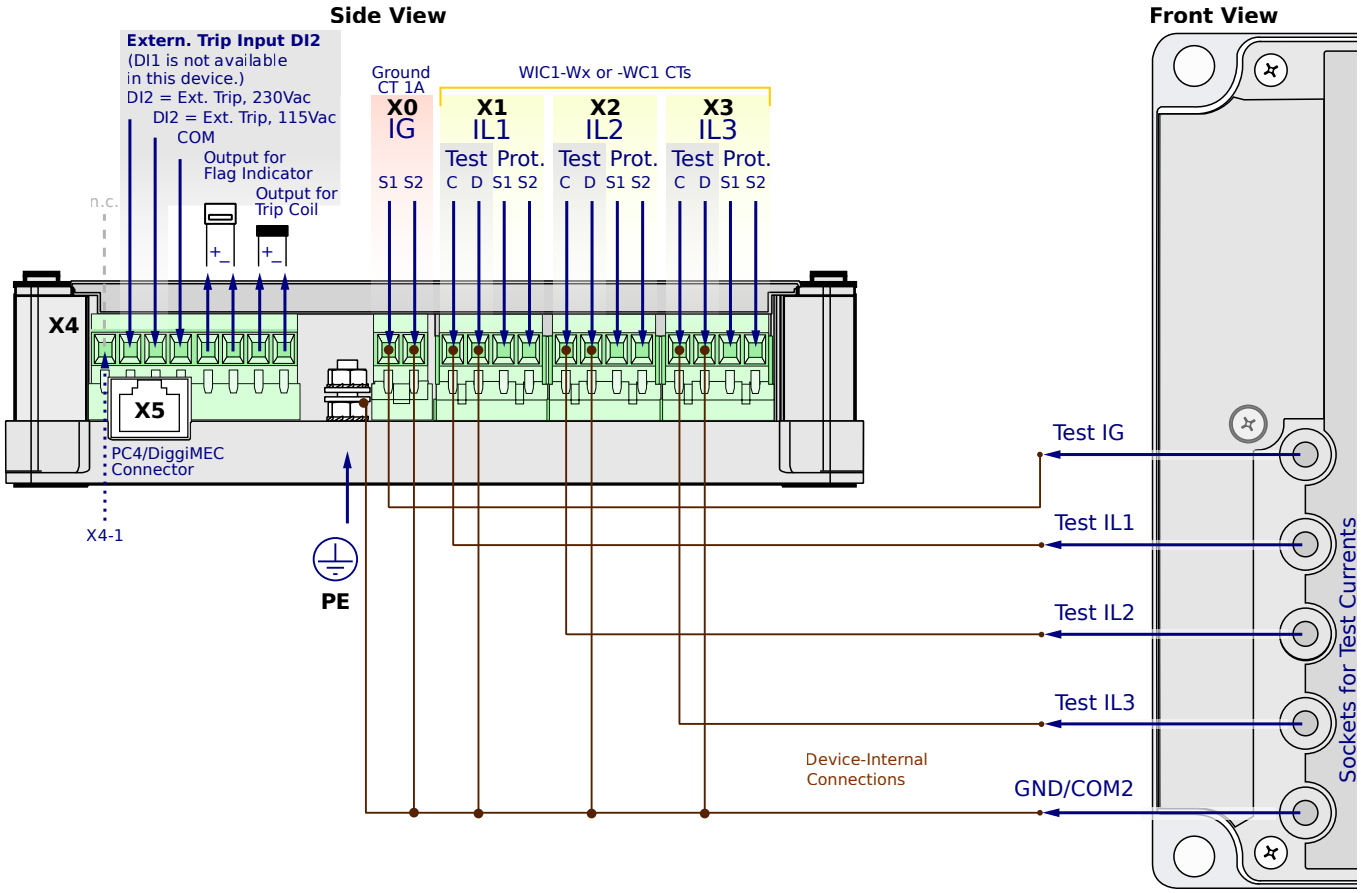


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2AA0

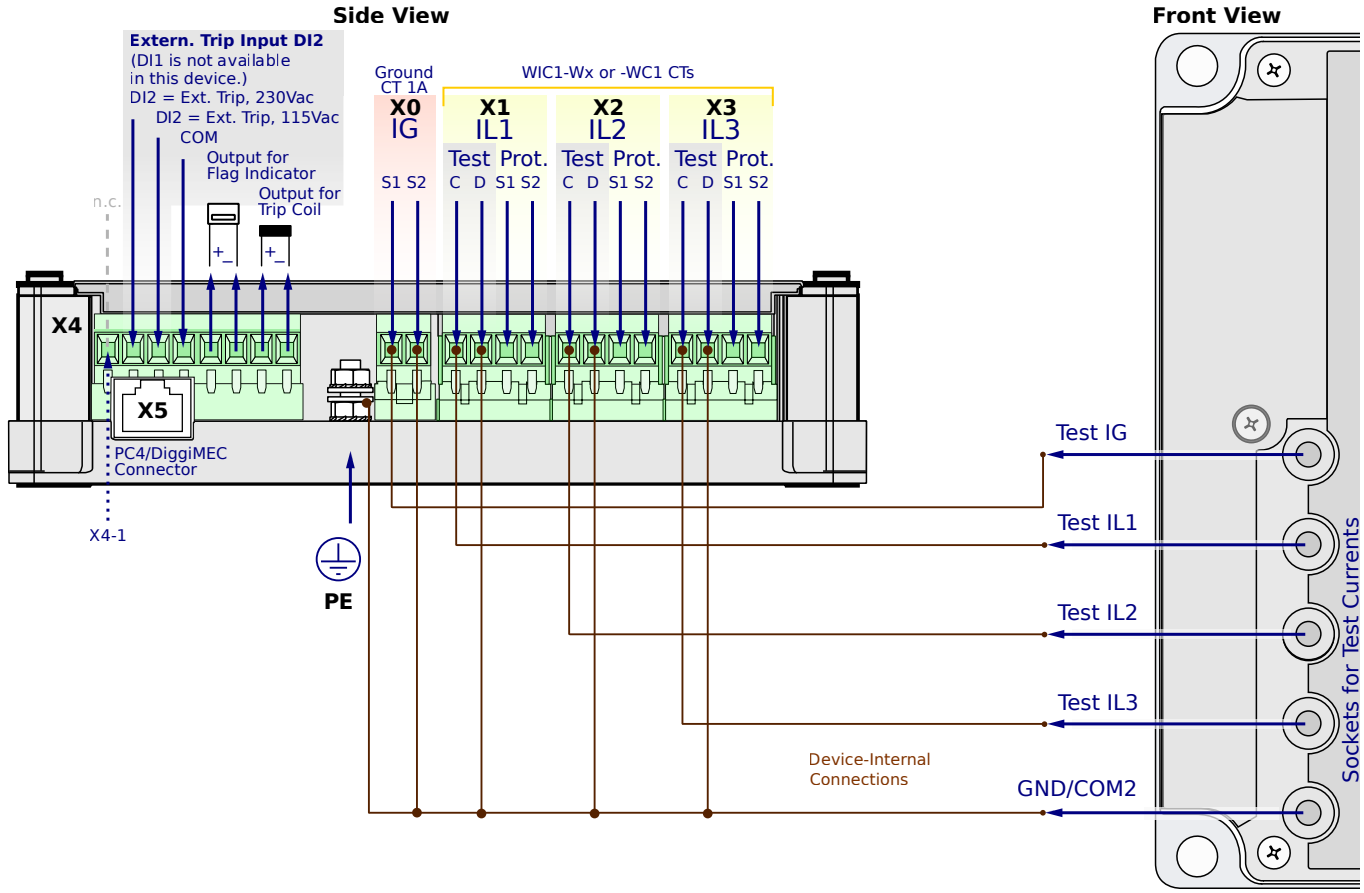


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2AAH

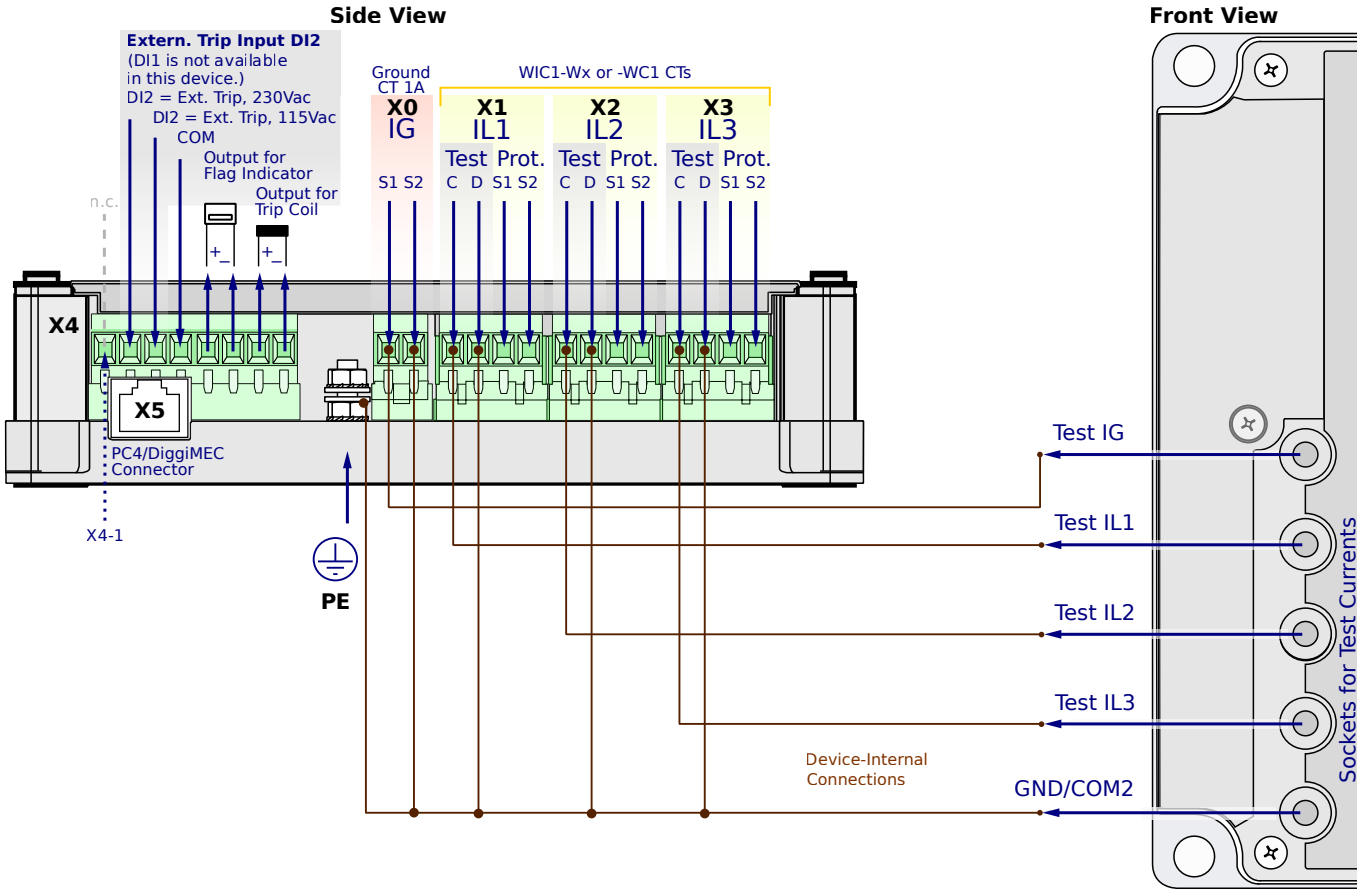


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2PA0

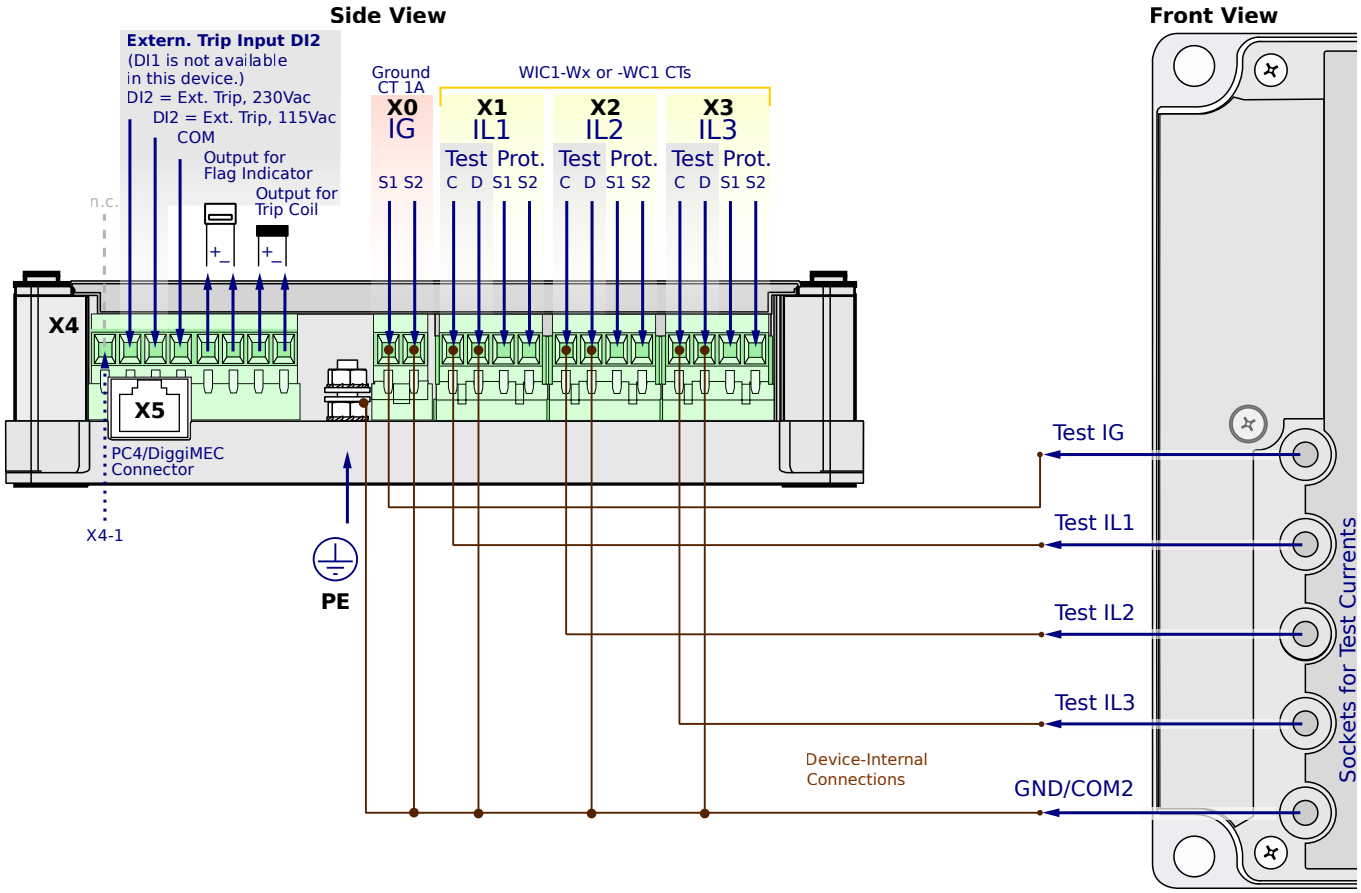


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NF2PAH

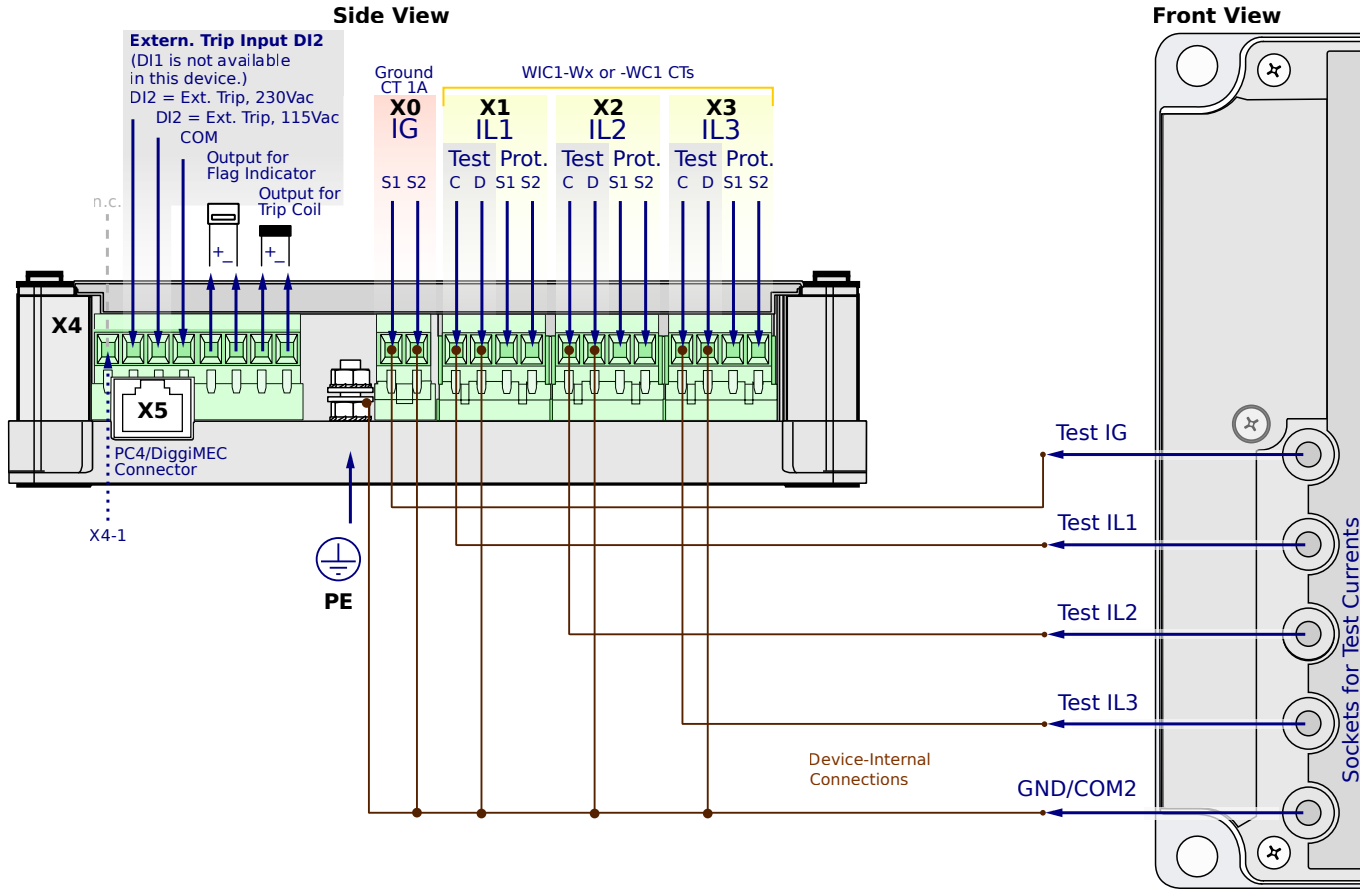


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0SA0

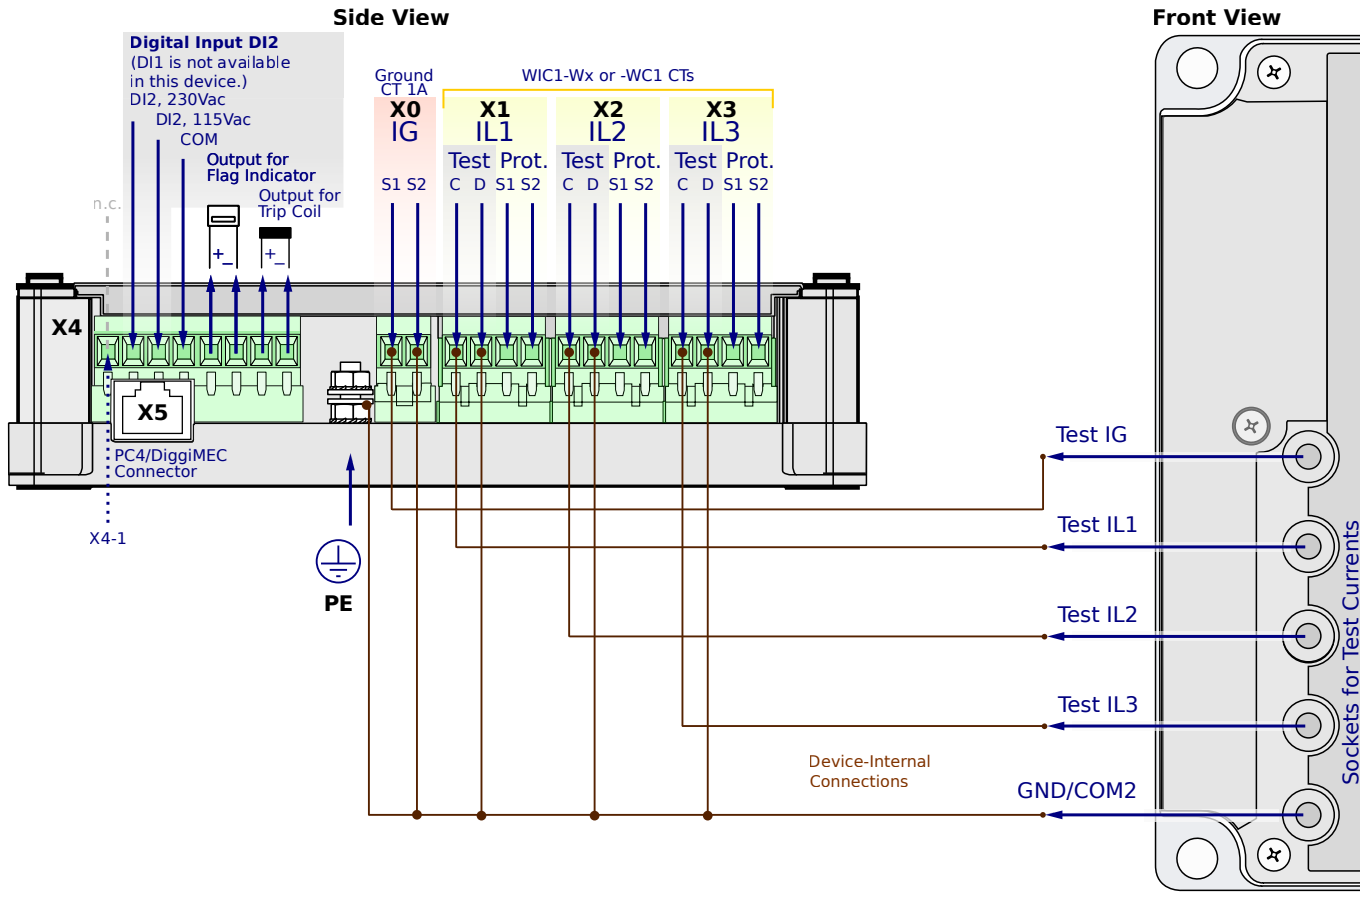


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0SAH

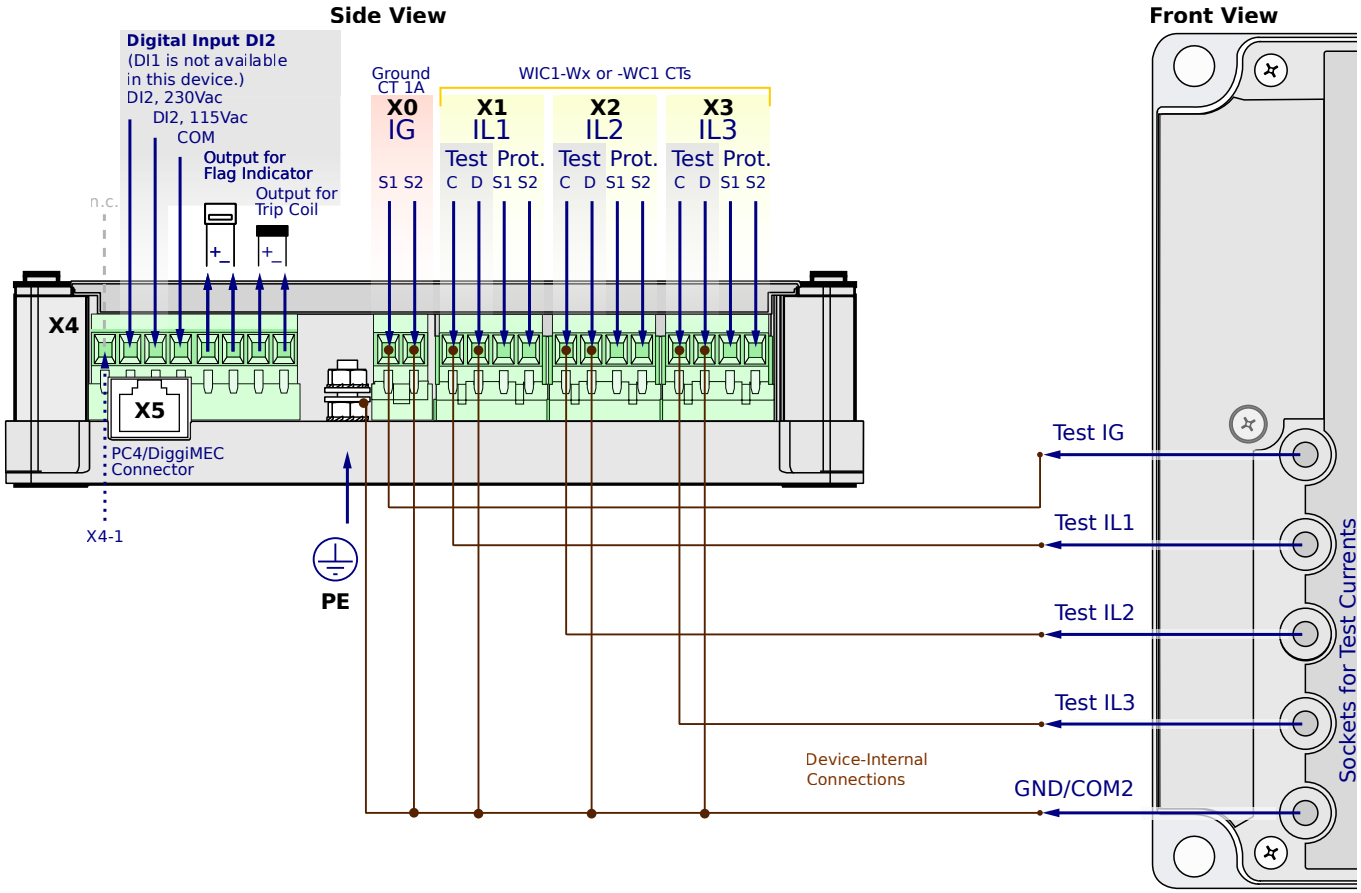


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0AA0

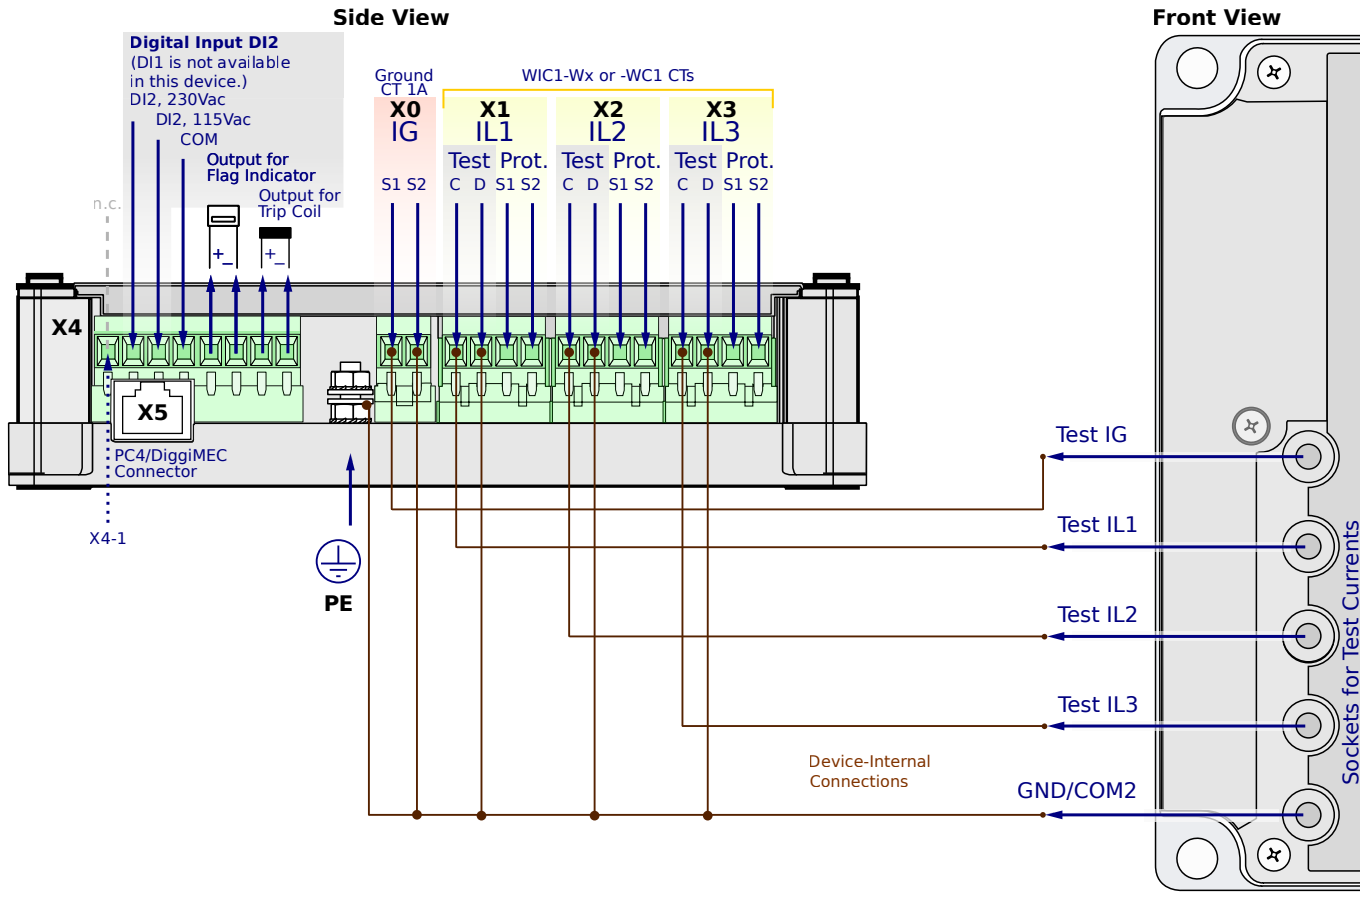


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0AAH

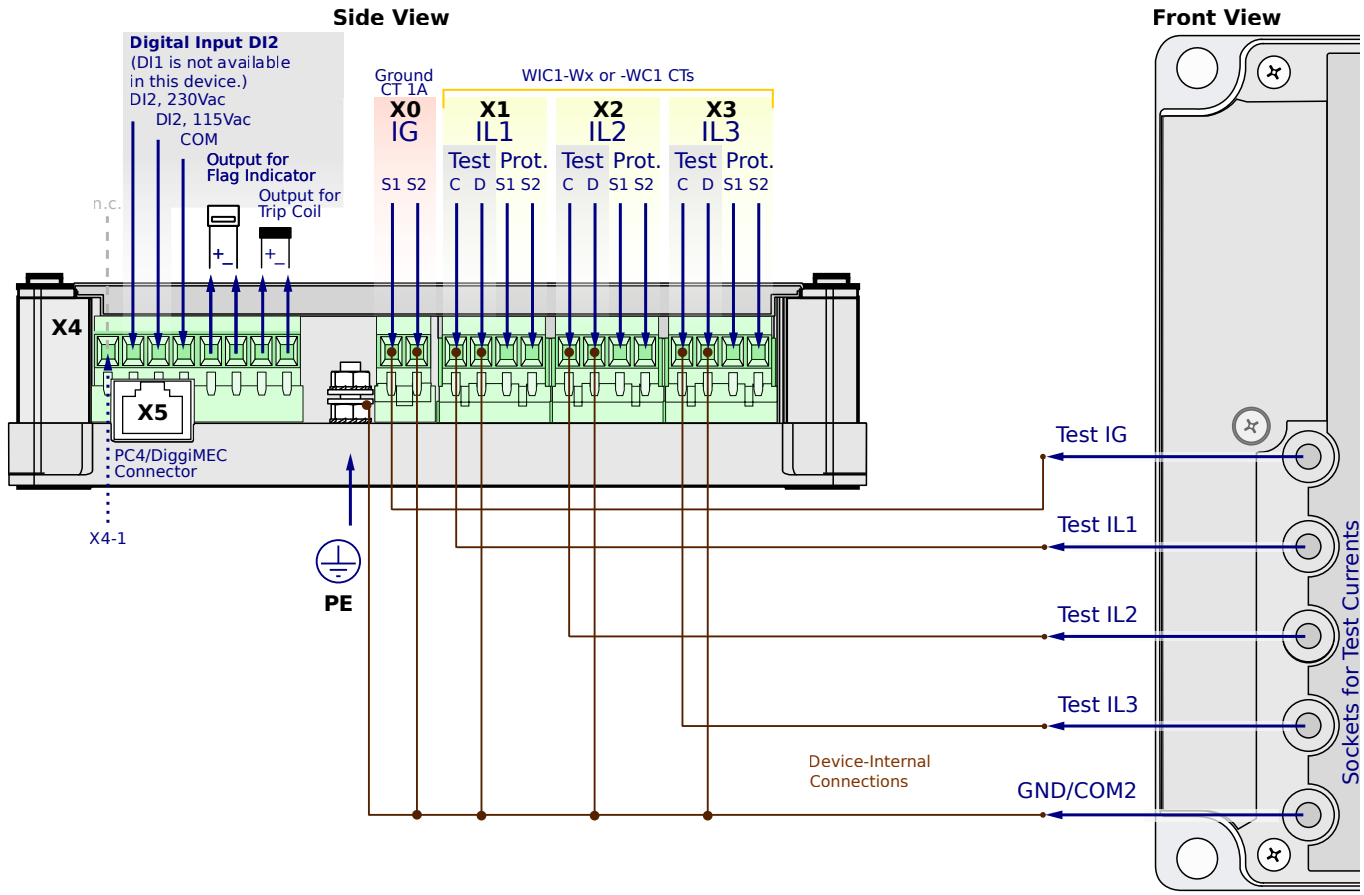


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0PA0

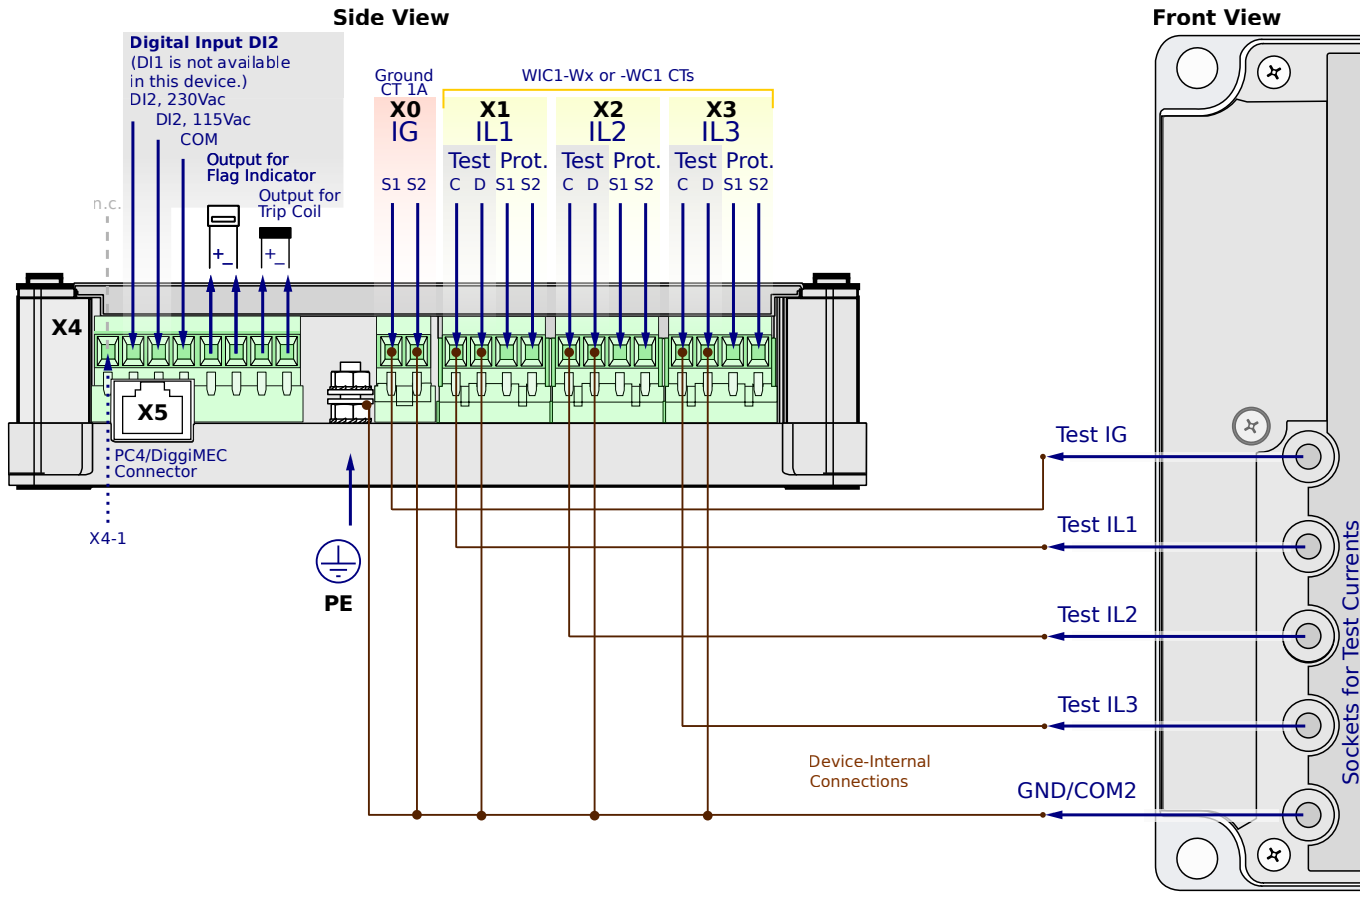


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC0PAH

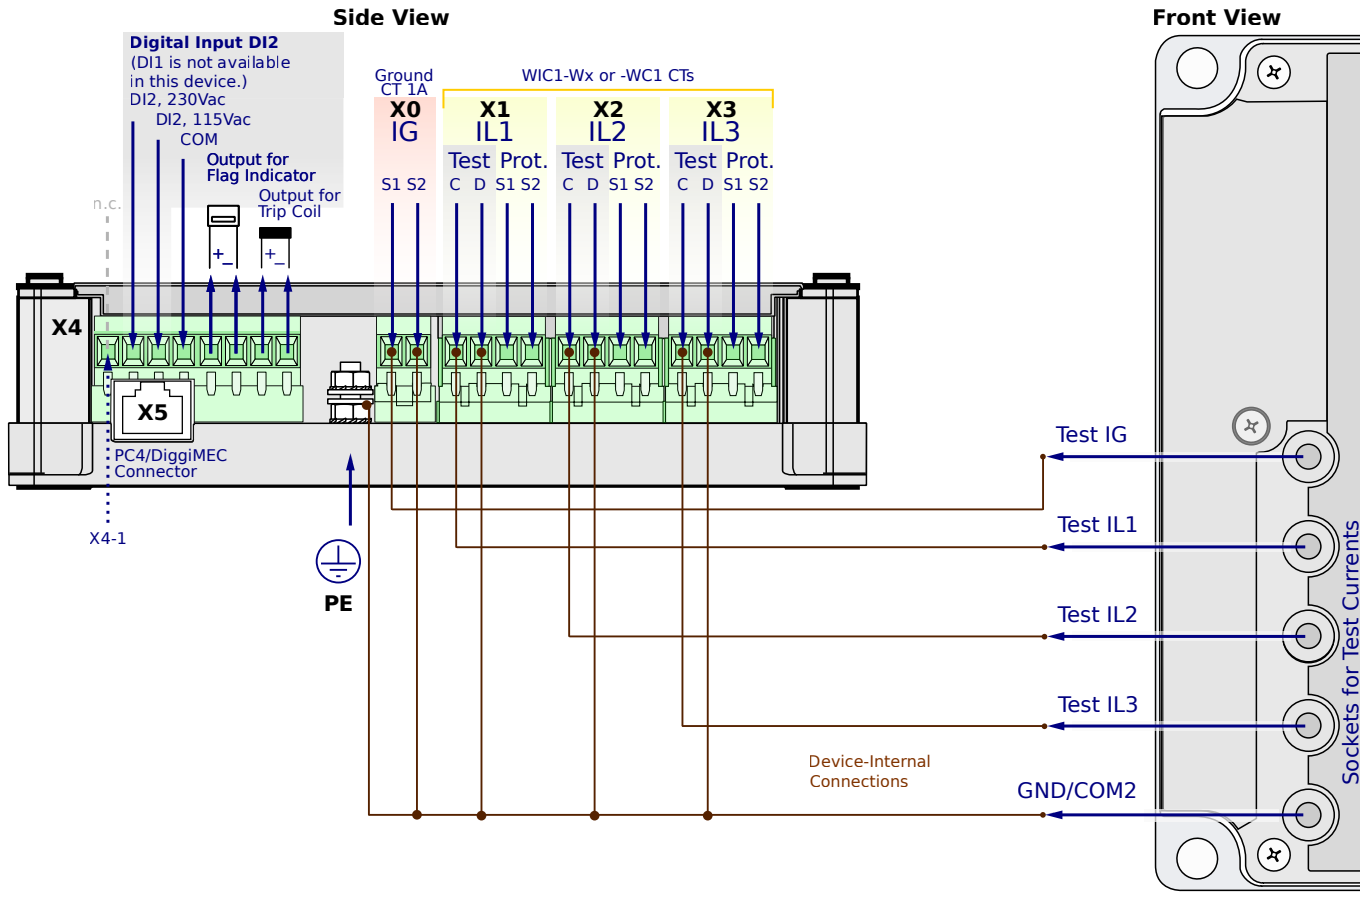


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1SA0

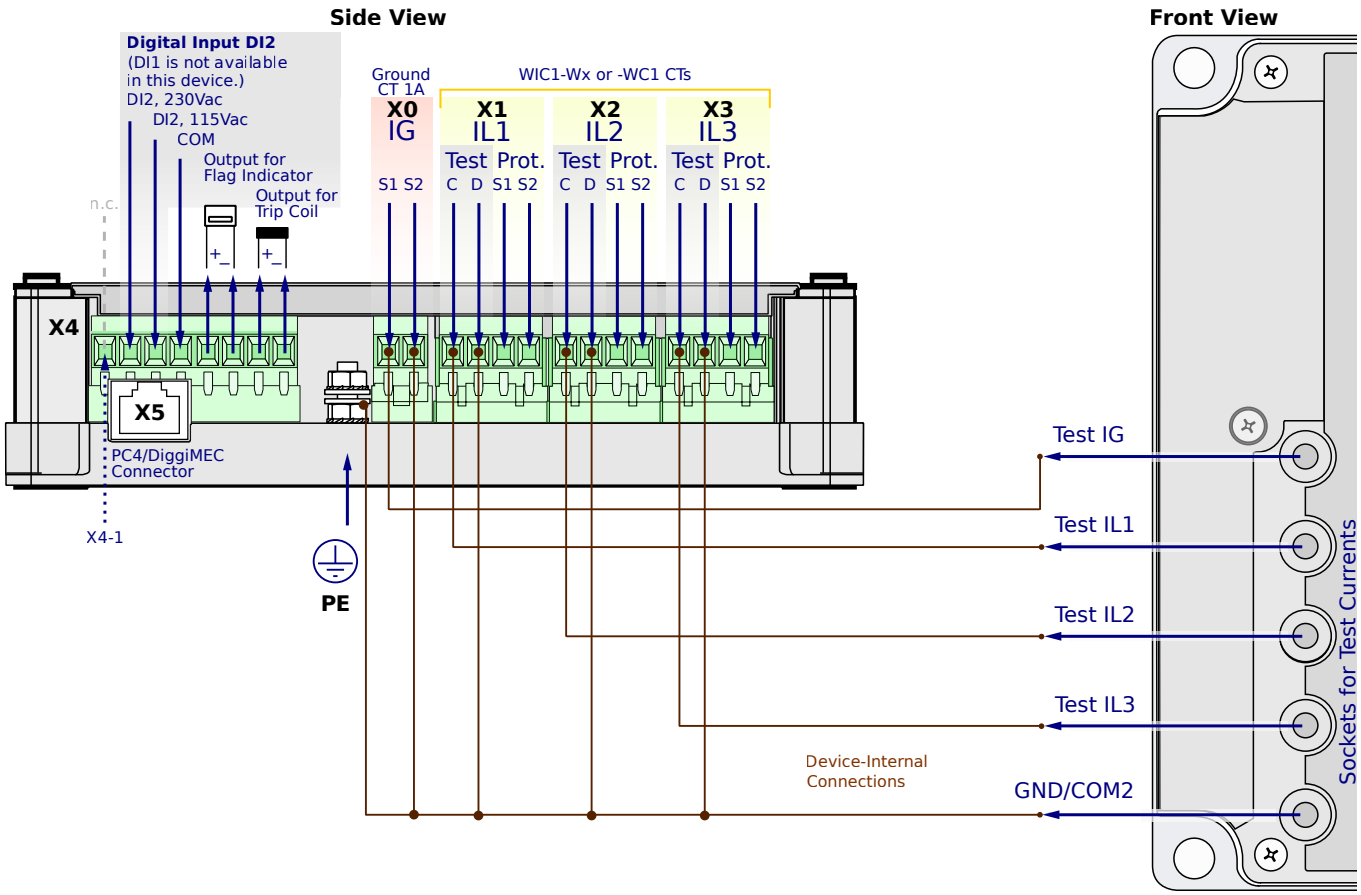


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1SAH

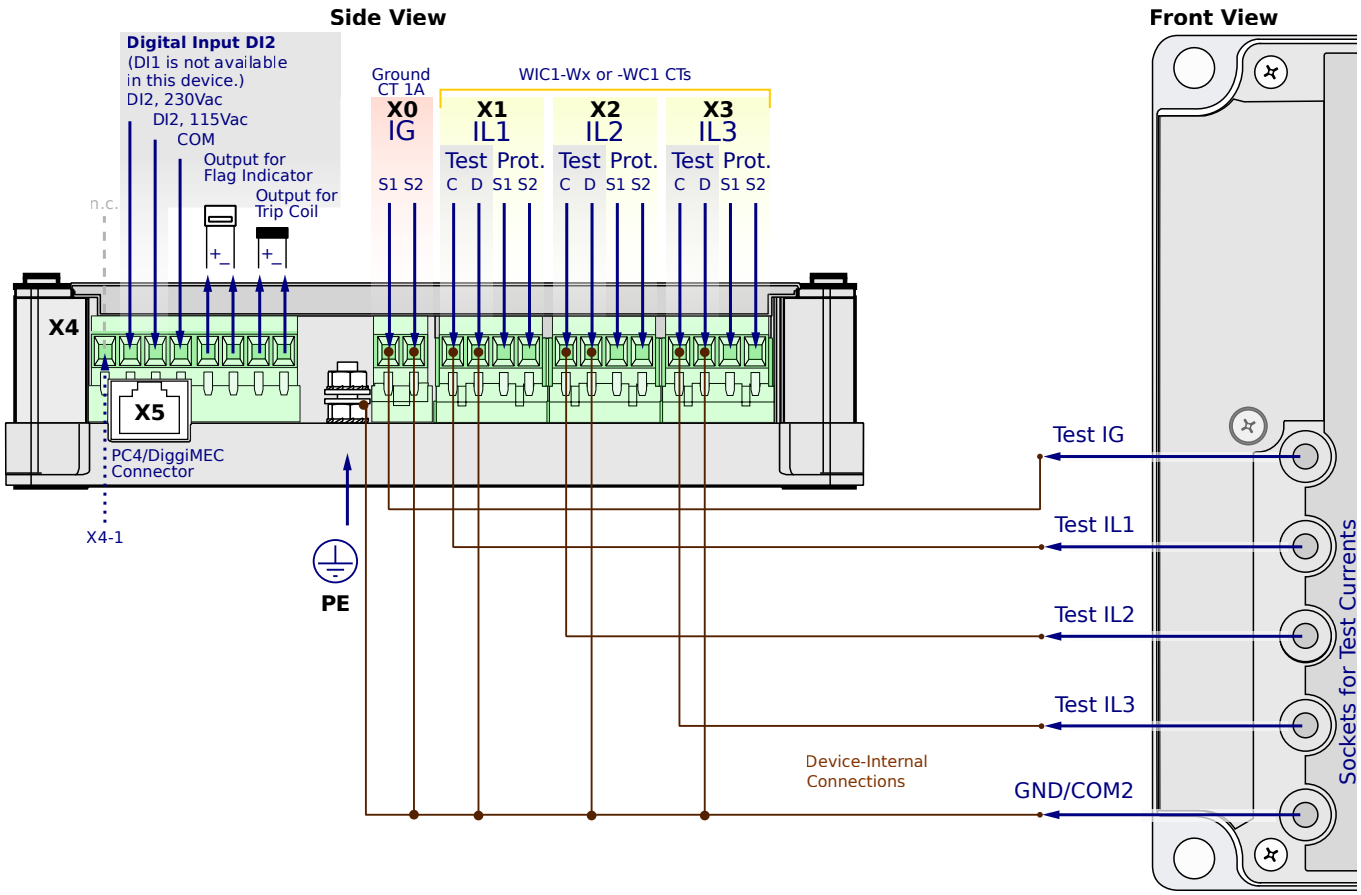


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1AA0

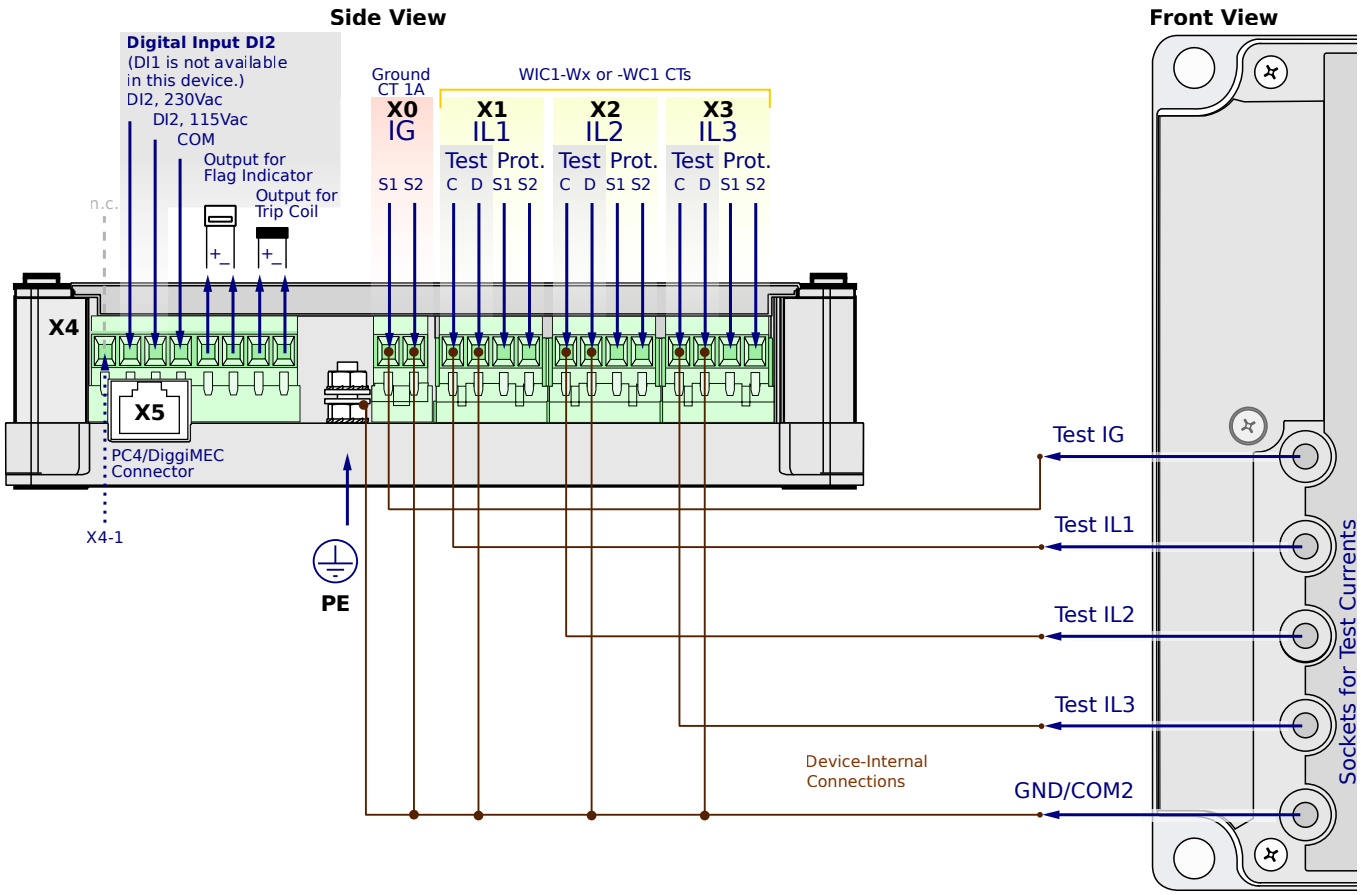


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1AAH

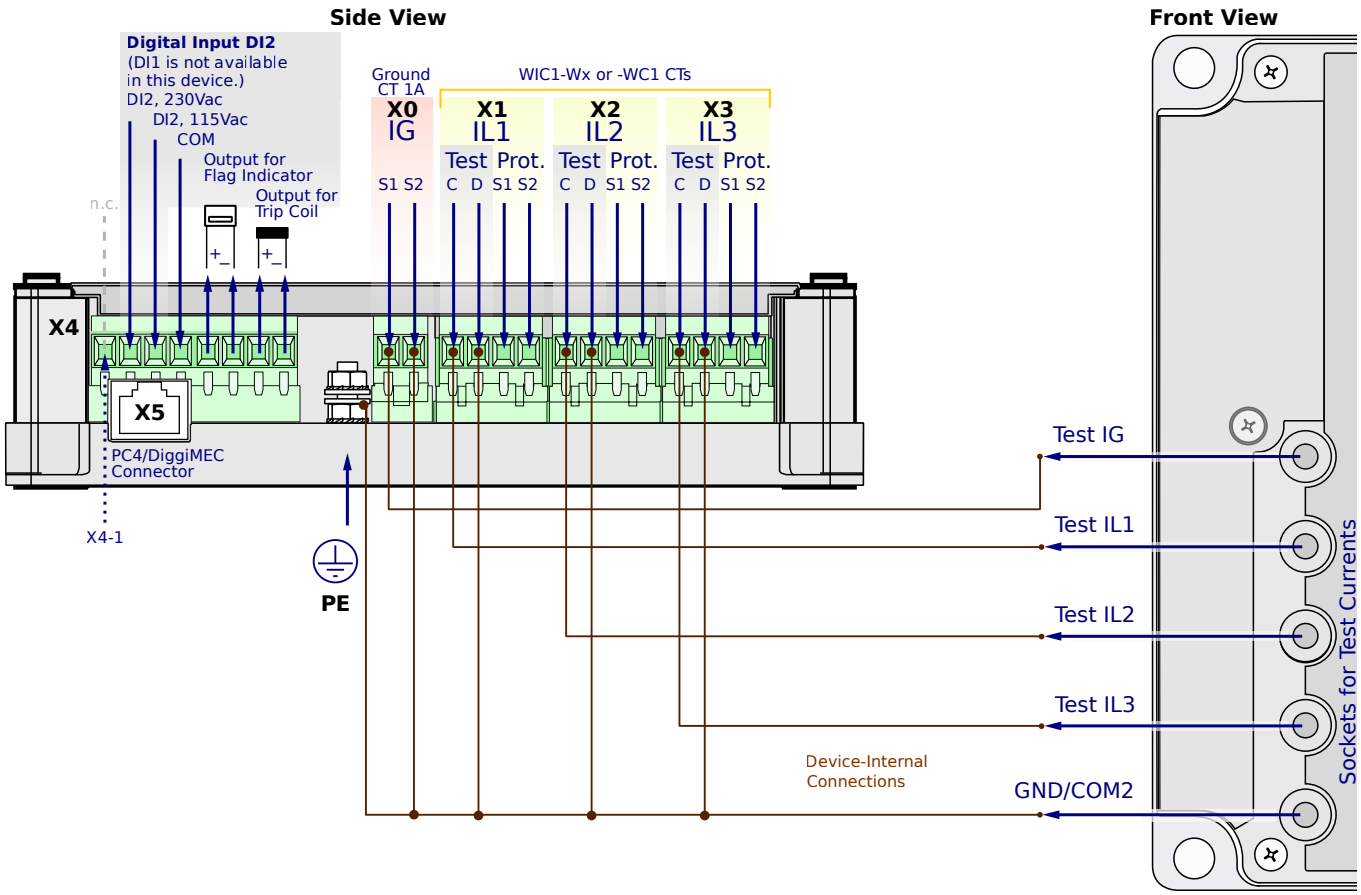


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1PA0

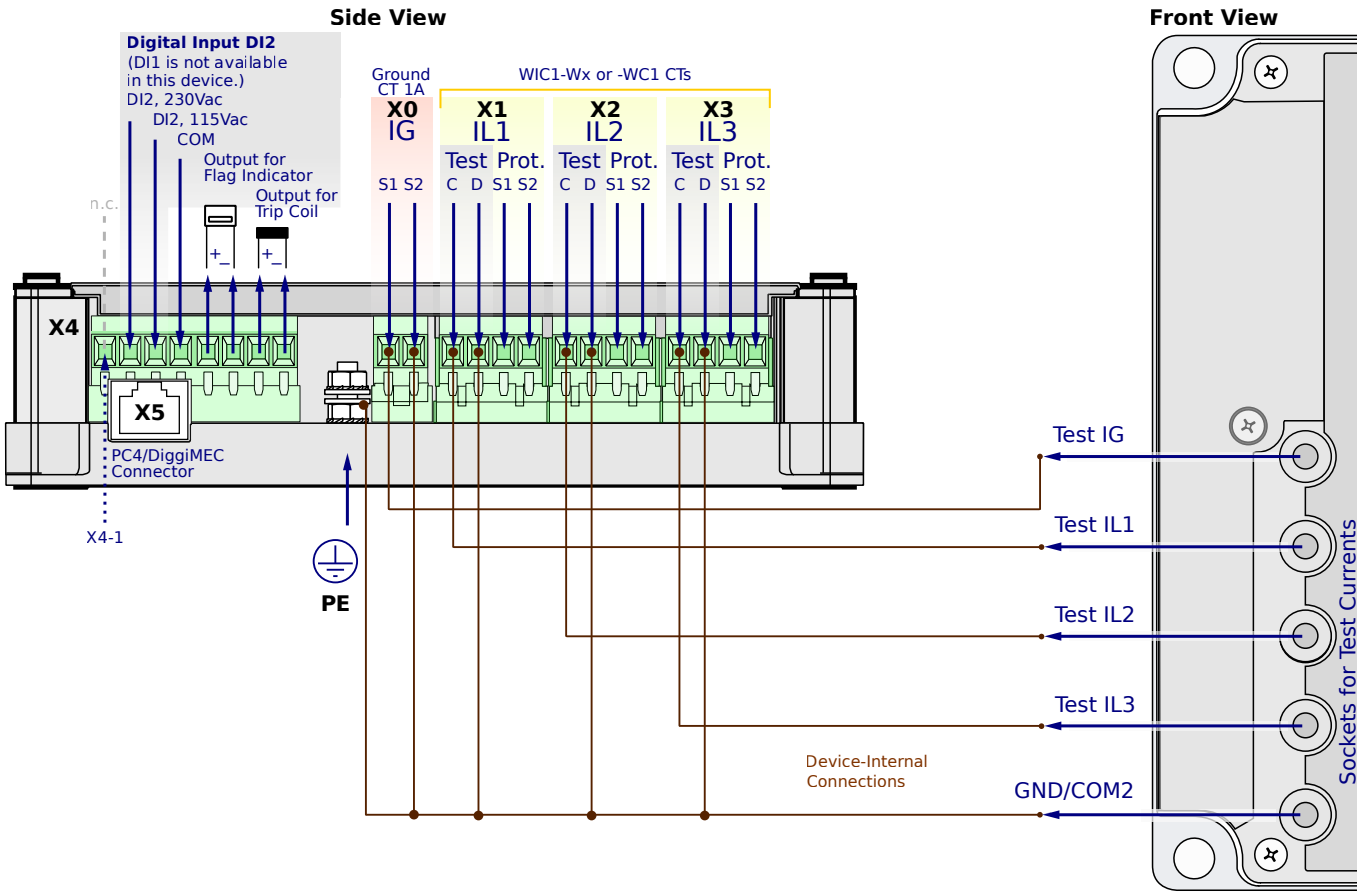


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC1PAH

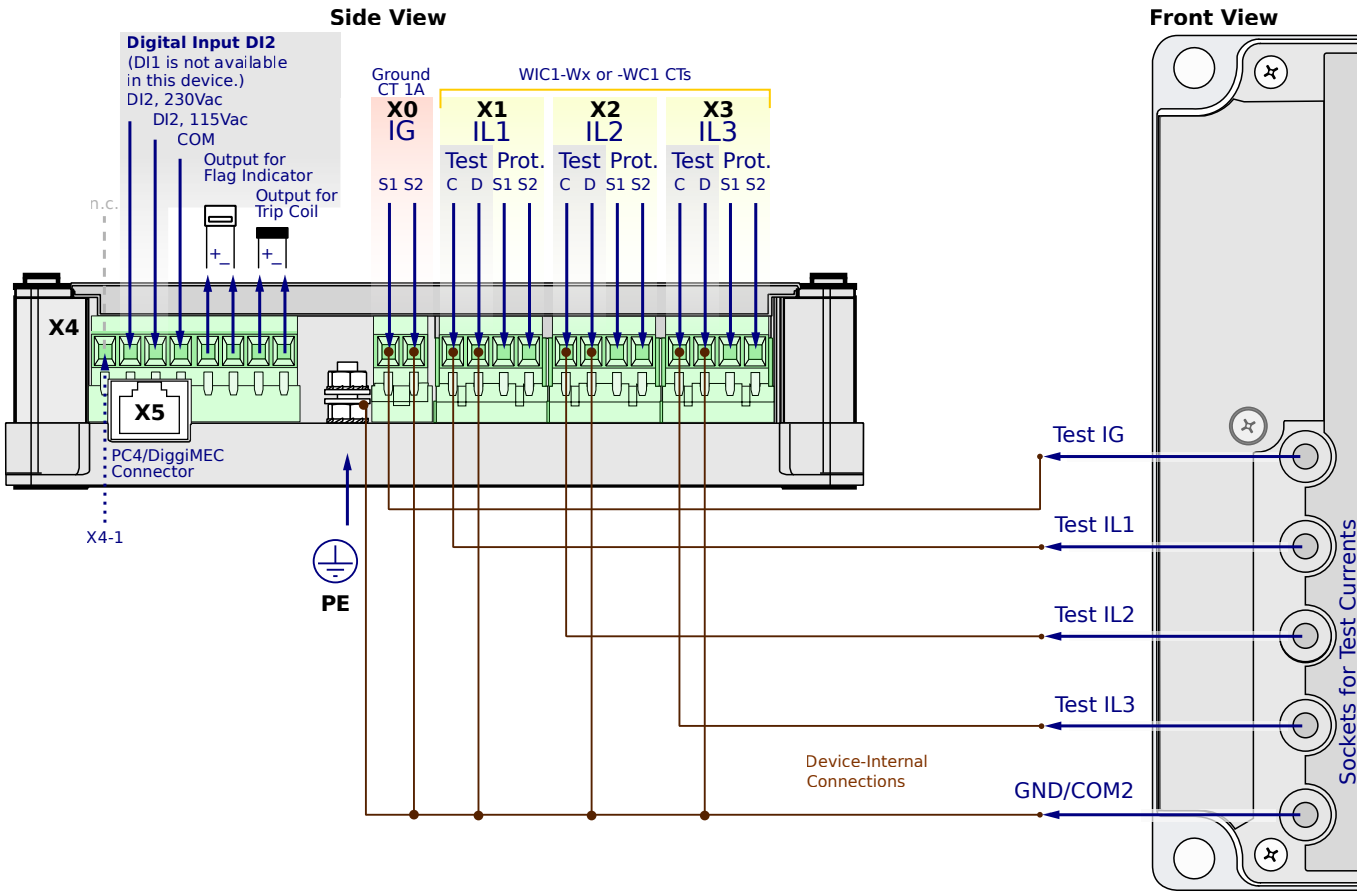


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2SA0

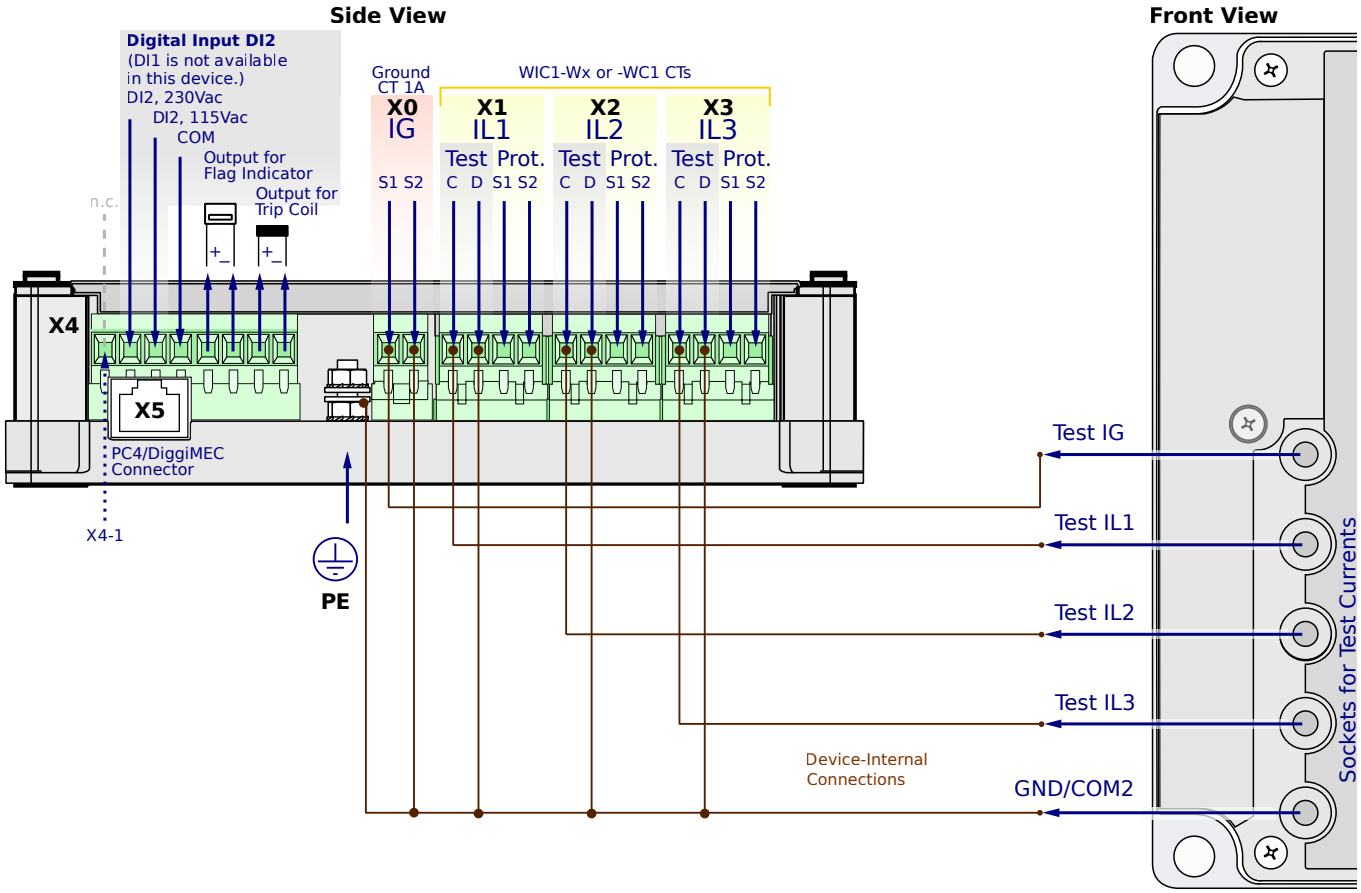


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2SAH

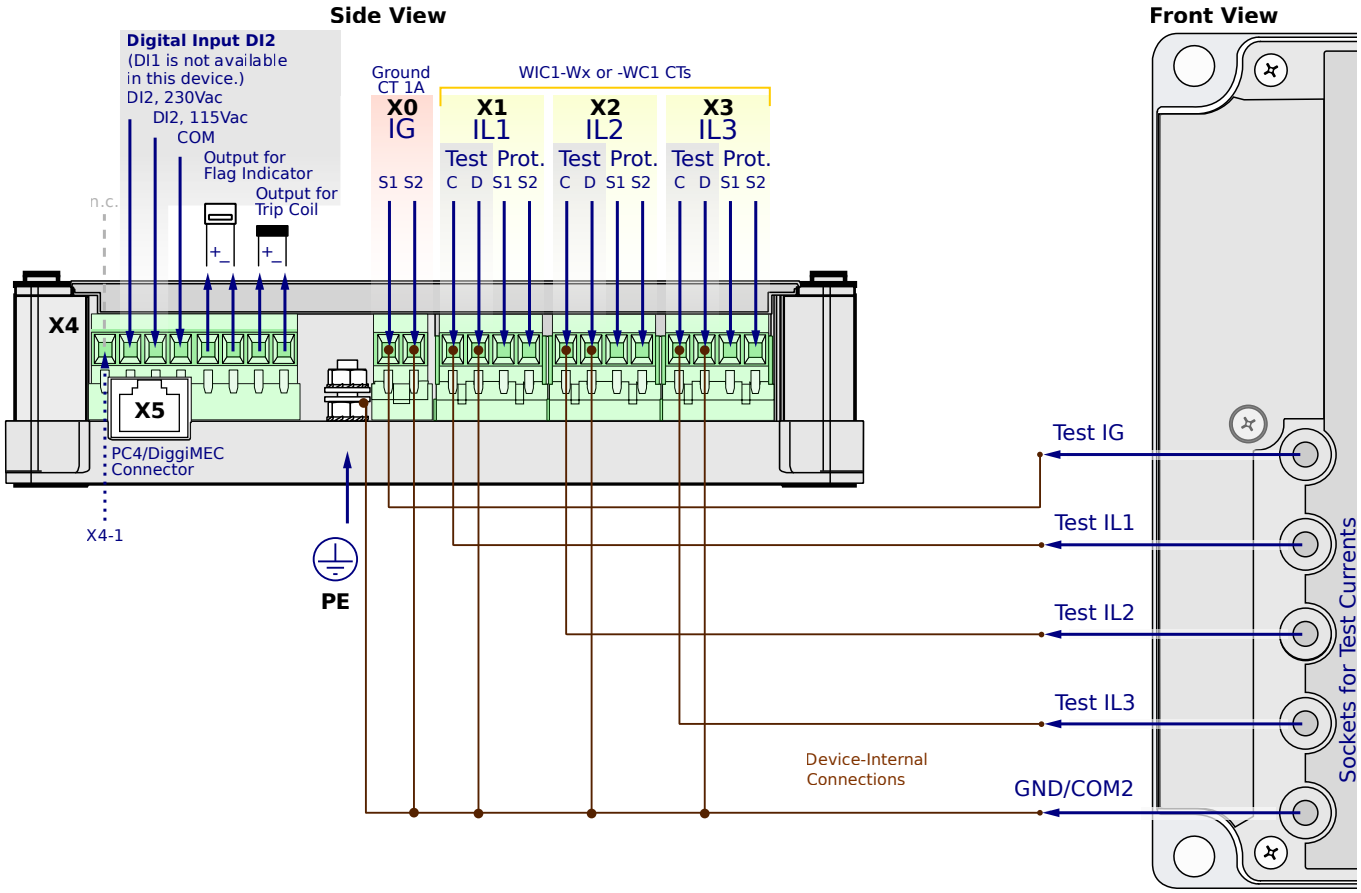


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2AA0

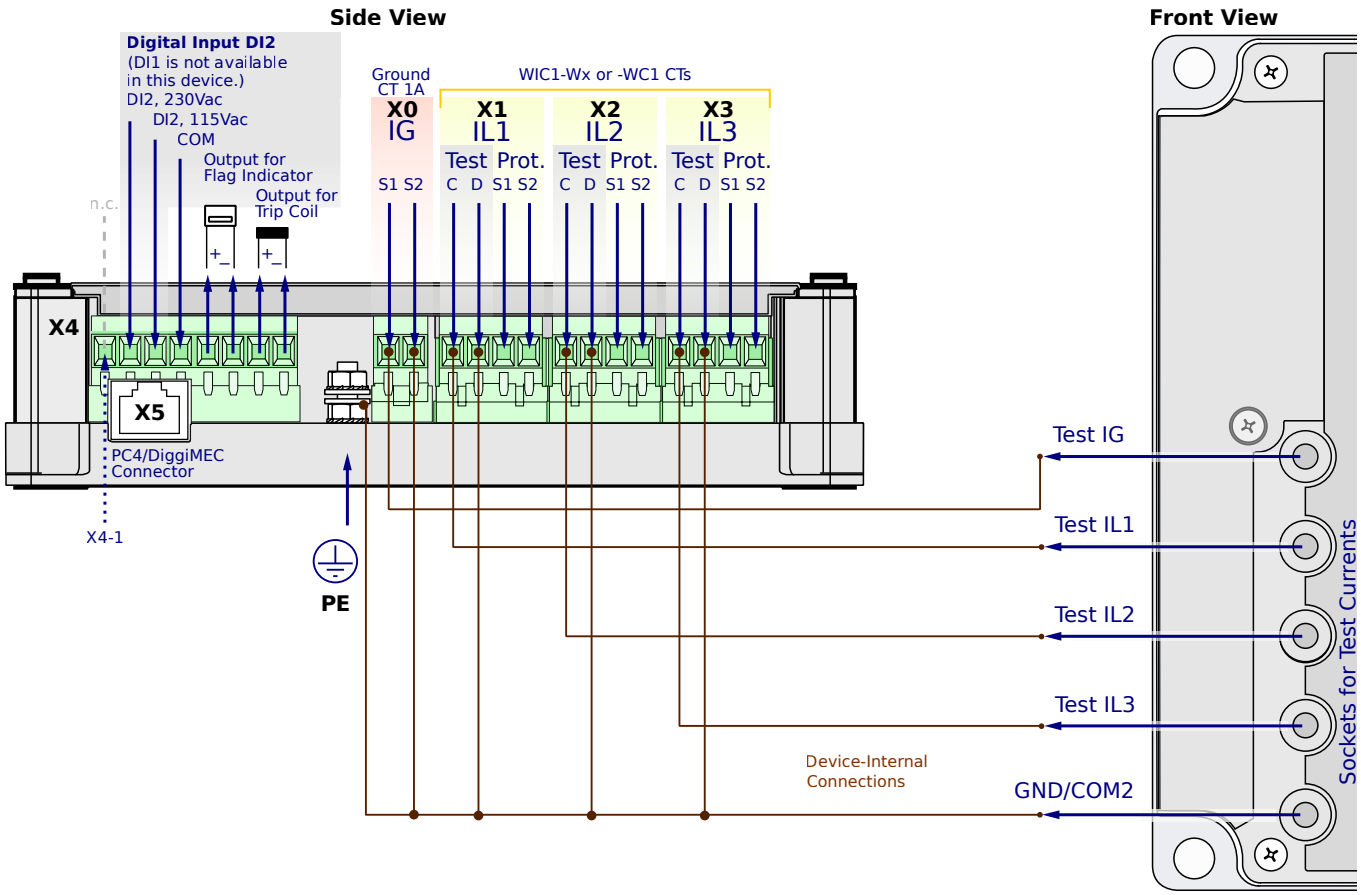


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2AAH

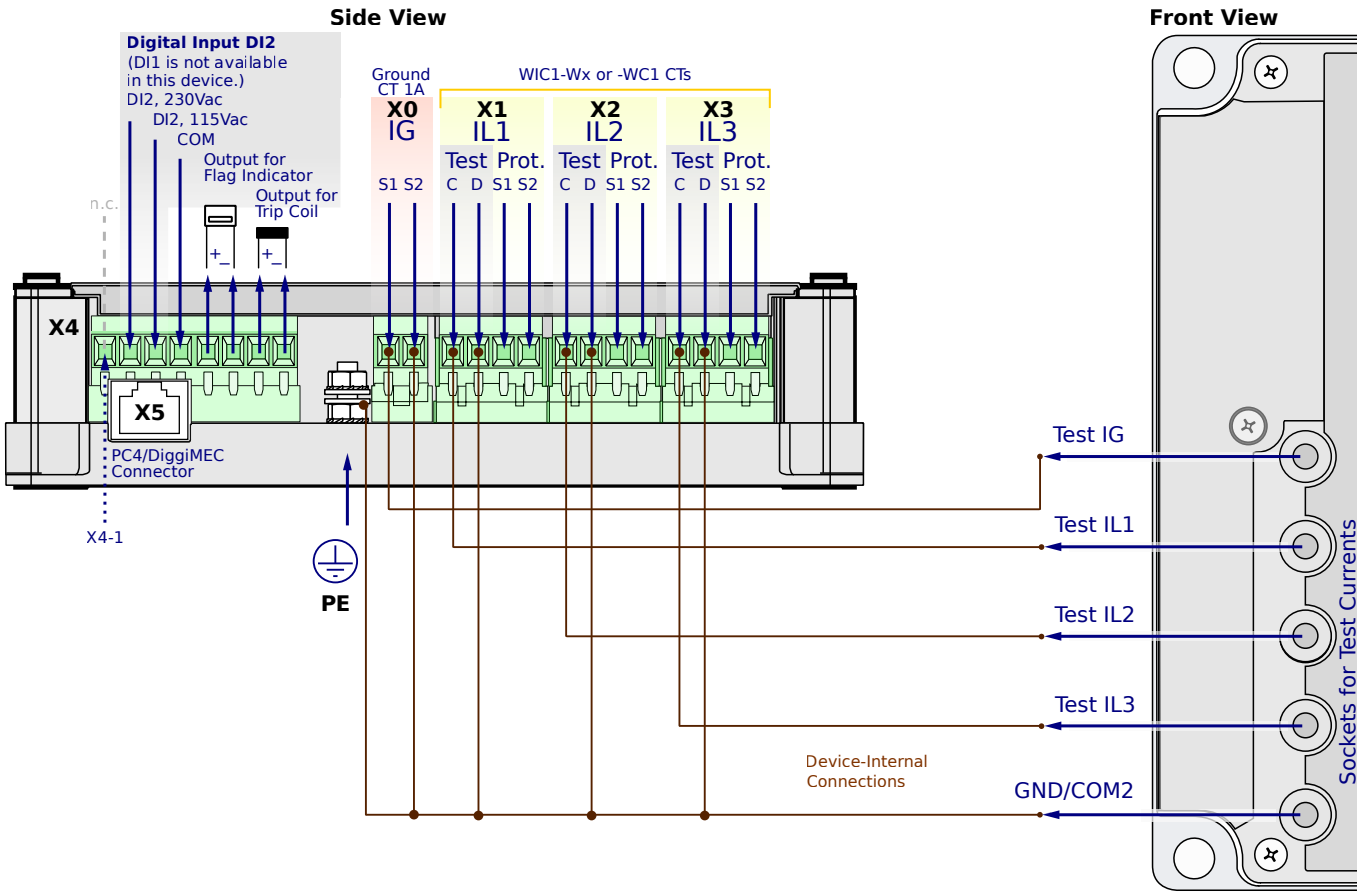


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2PA0

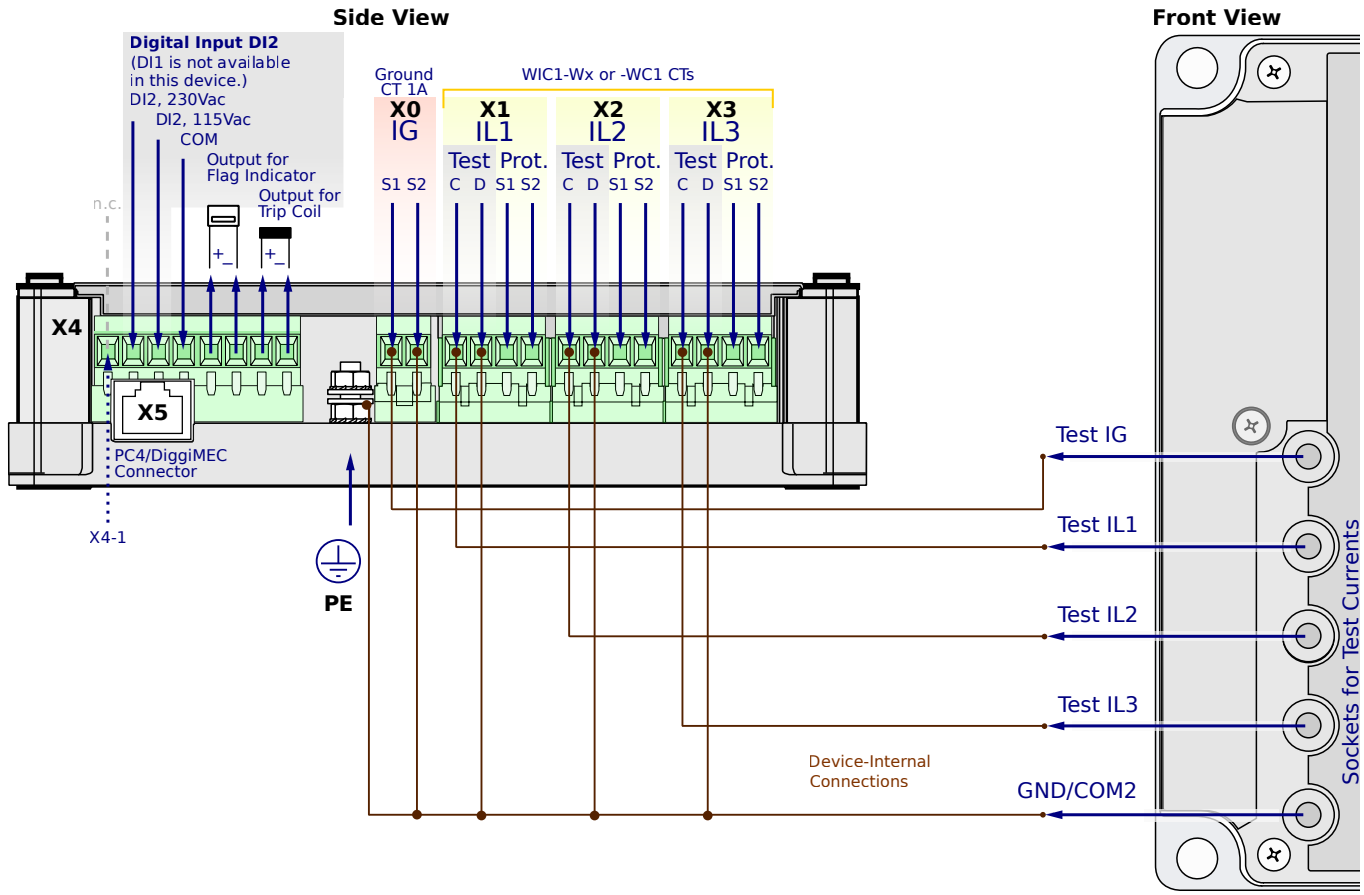


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6NC2PAH

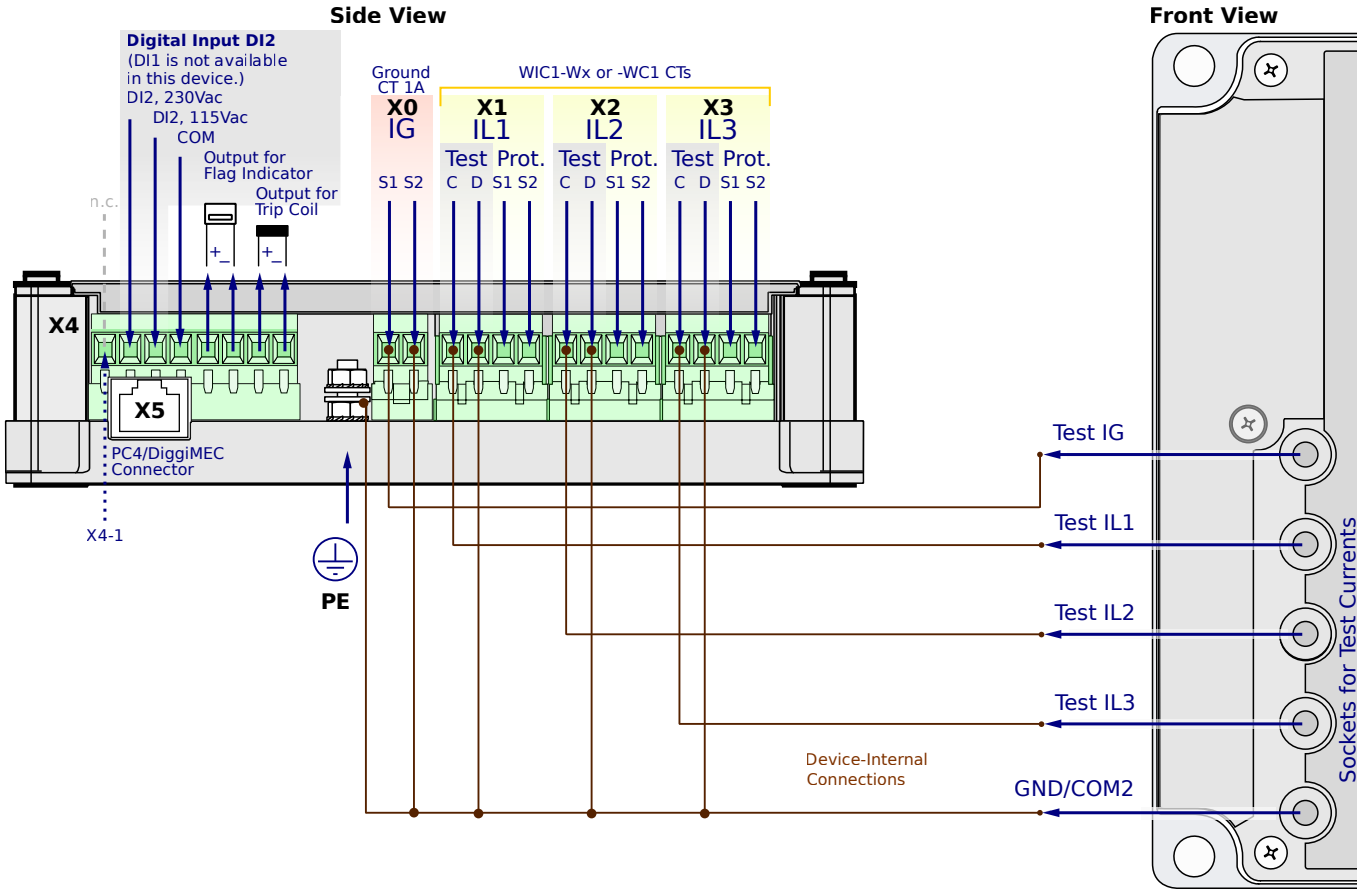


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1SA0

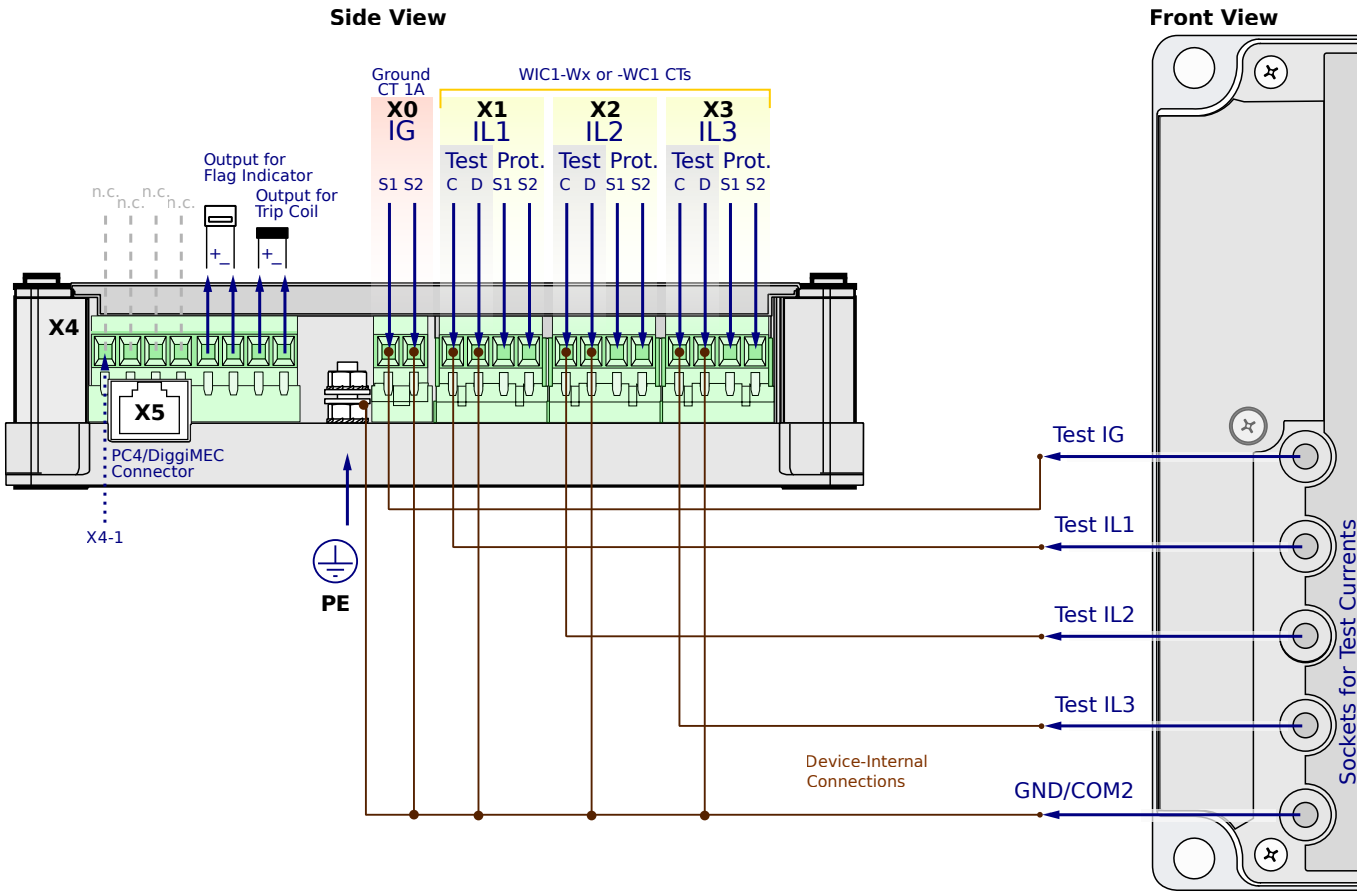


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1SAH

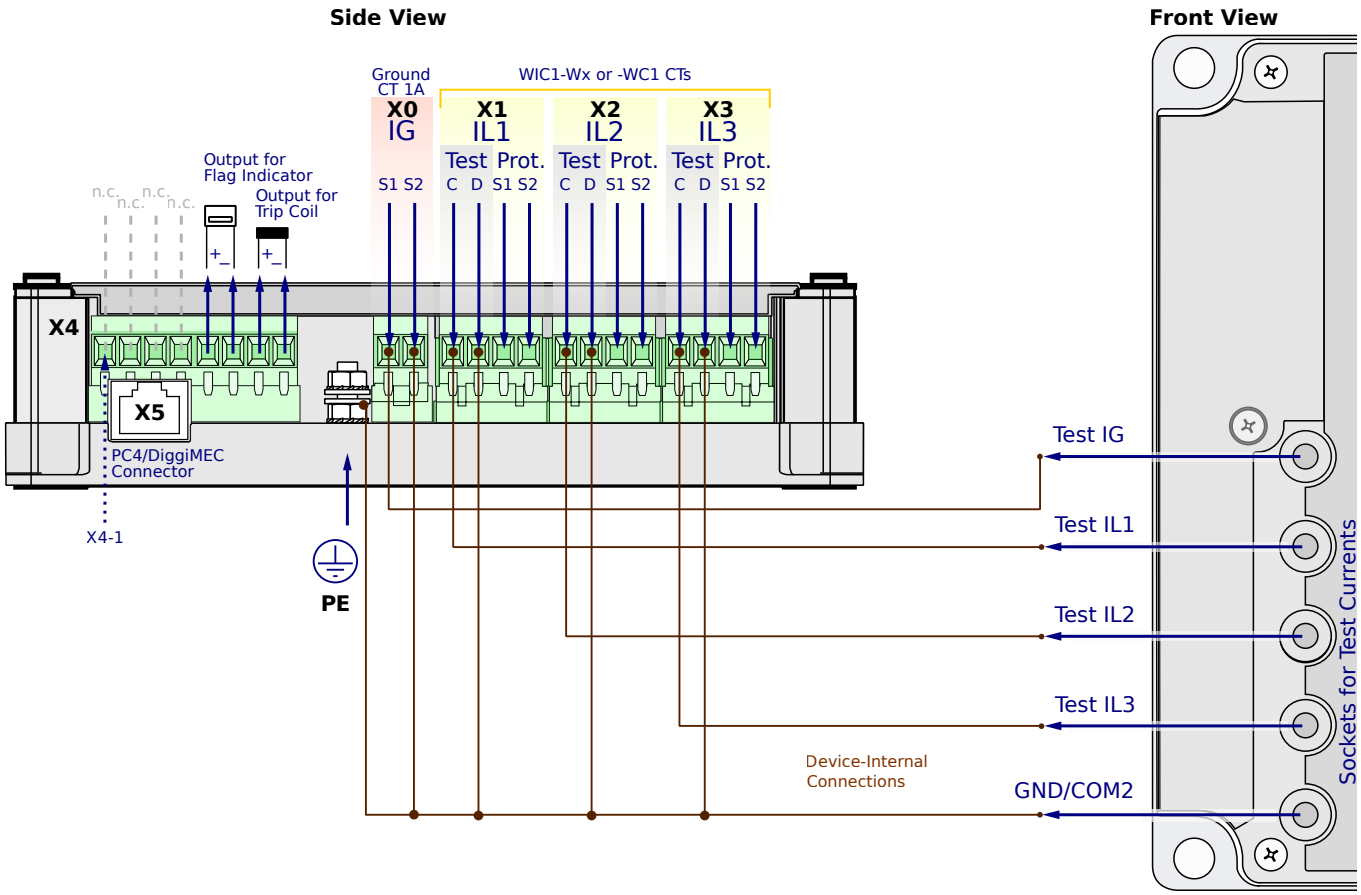


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1AA0

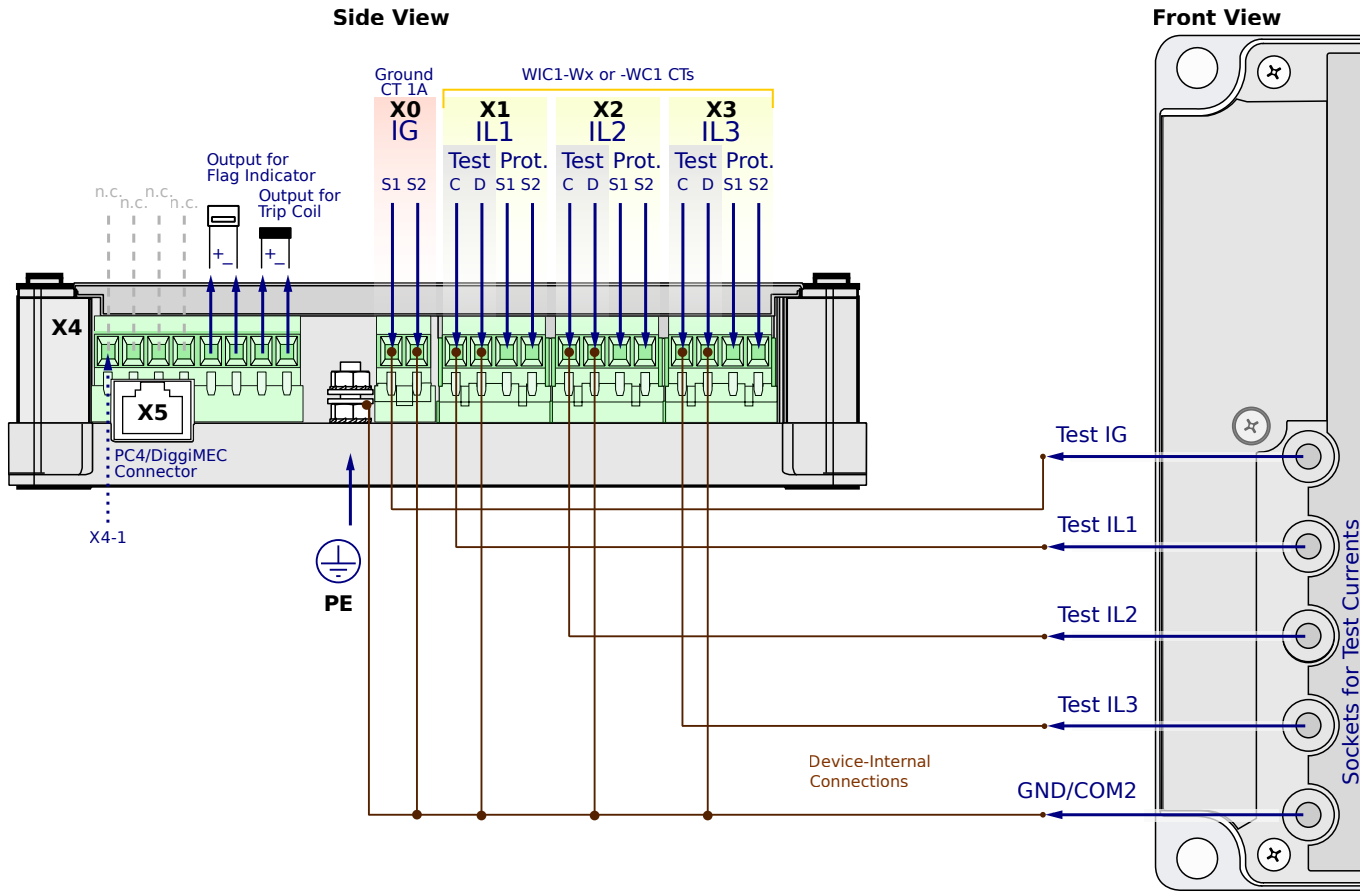


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1AAH

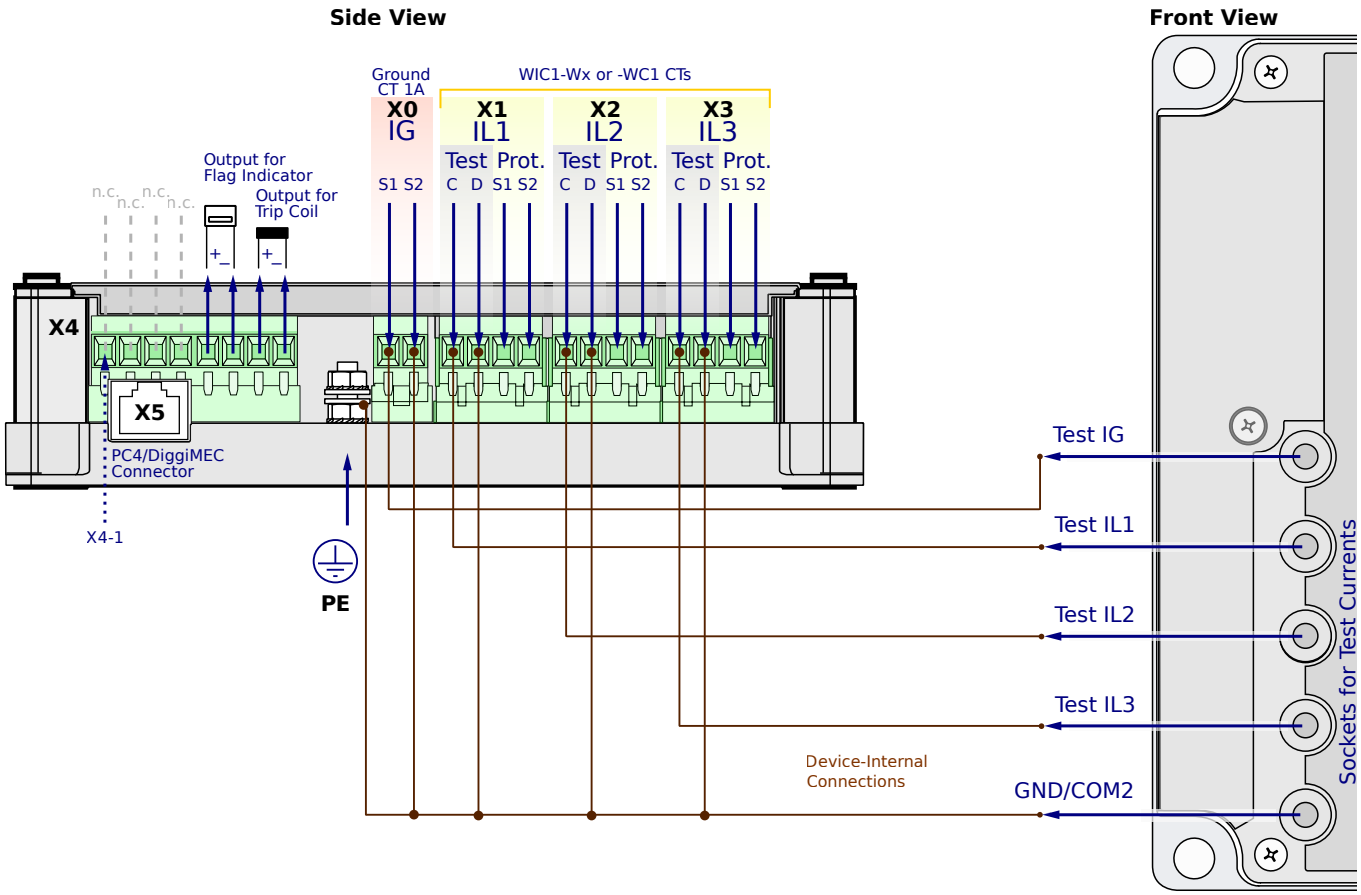


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1PA0

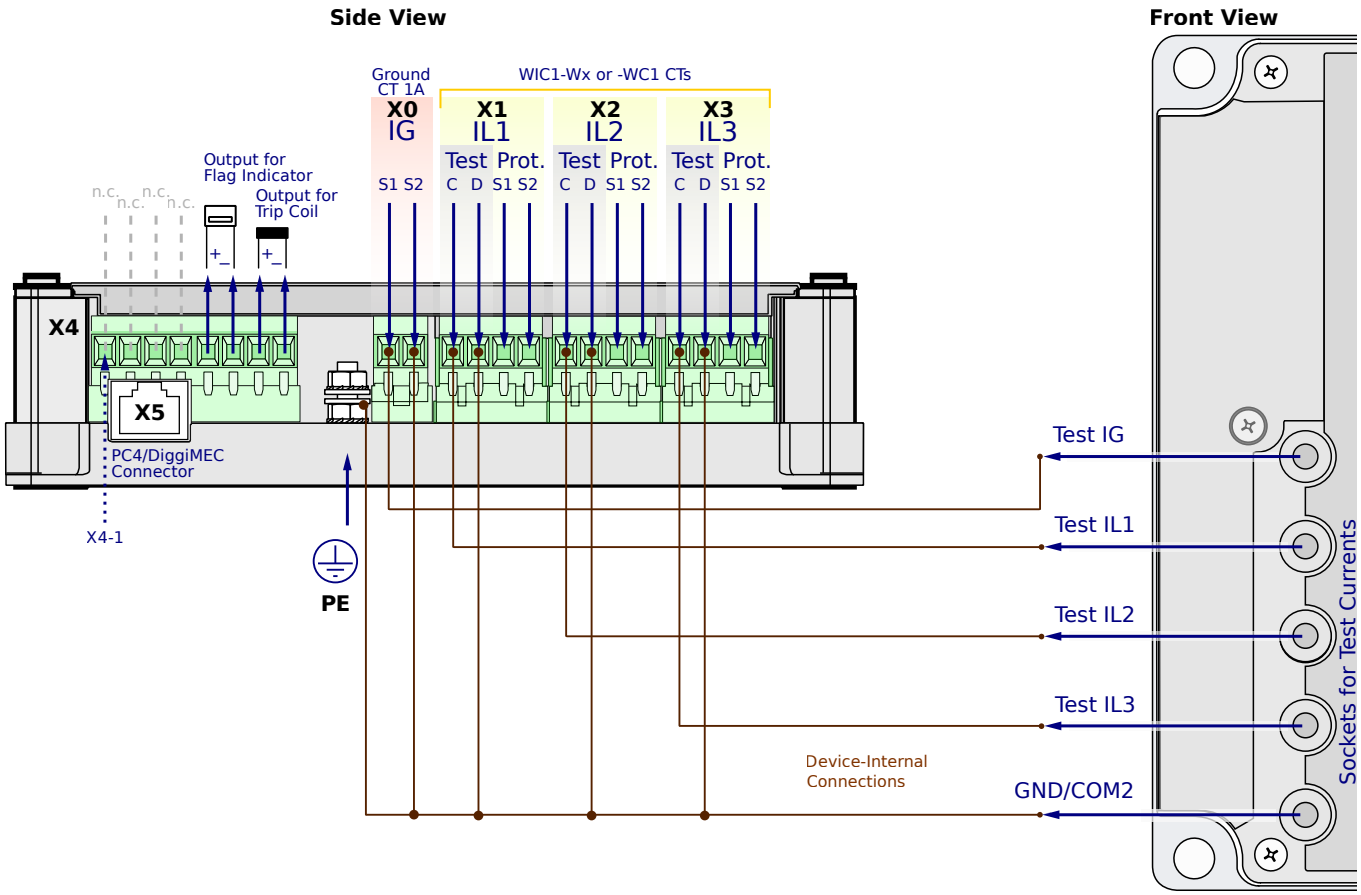


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN1PAH

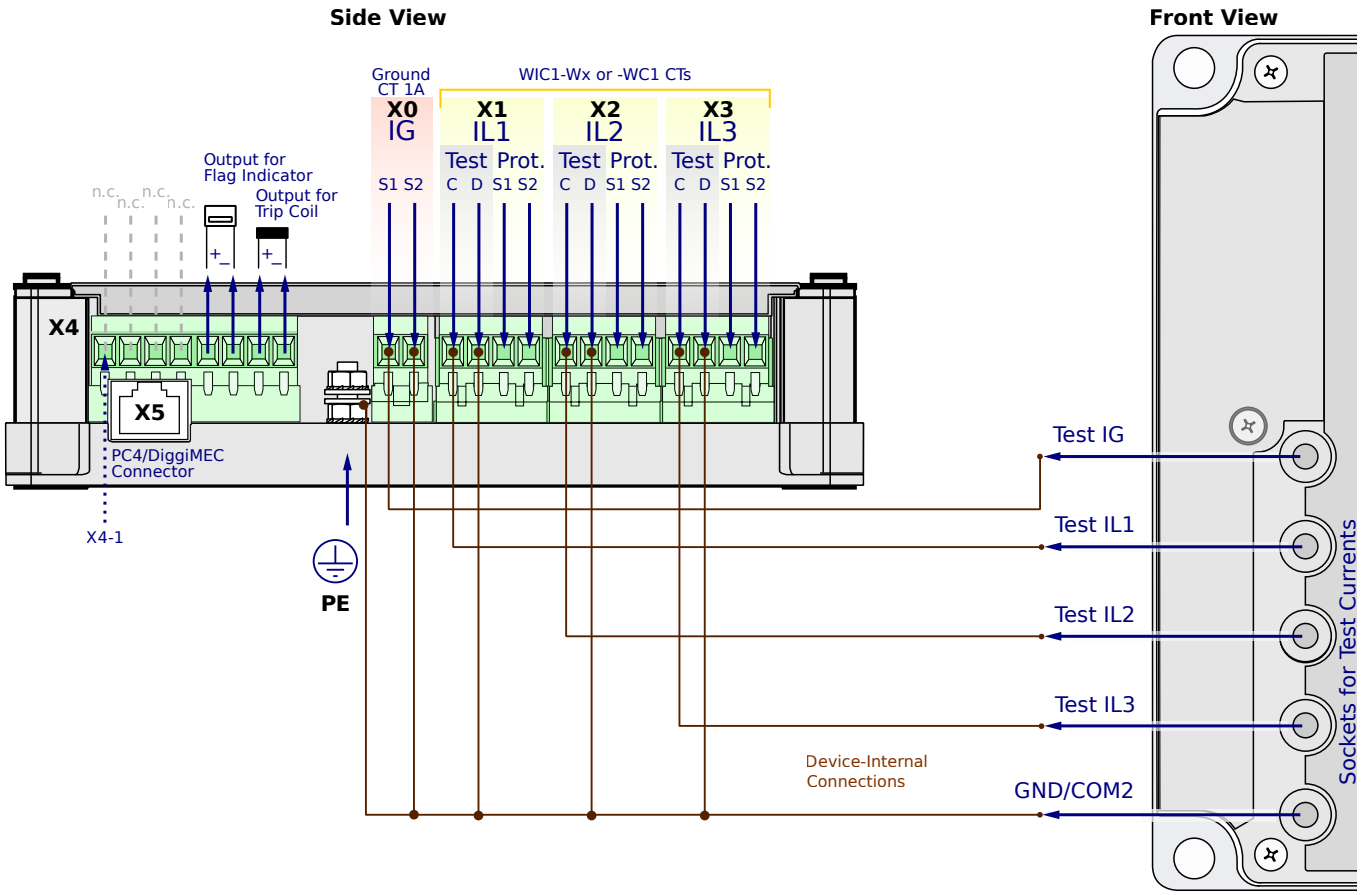


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2SA0

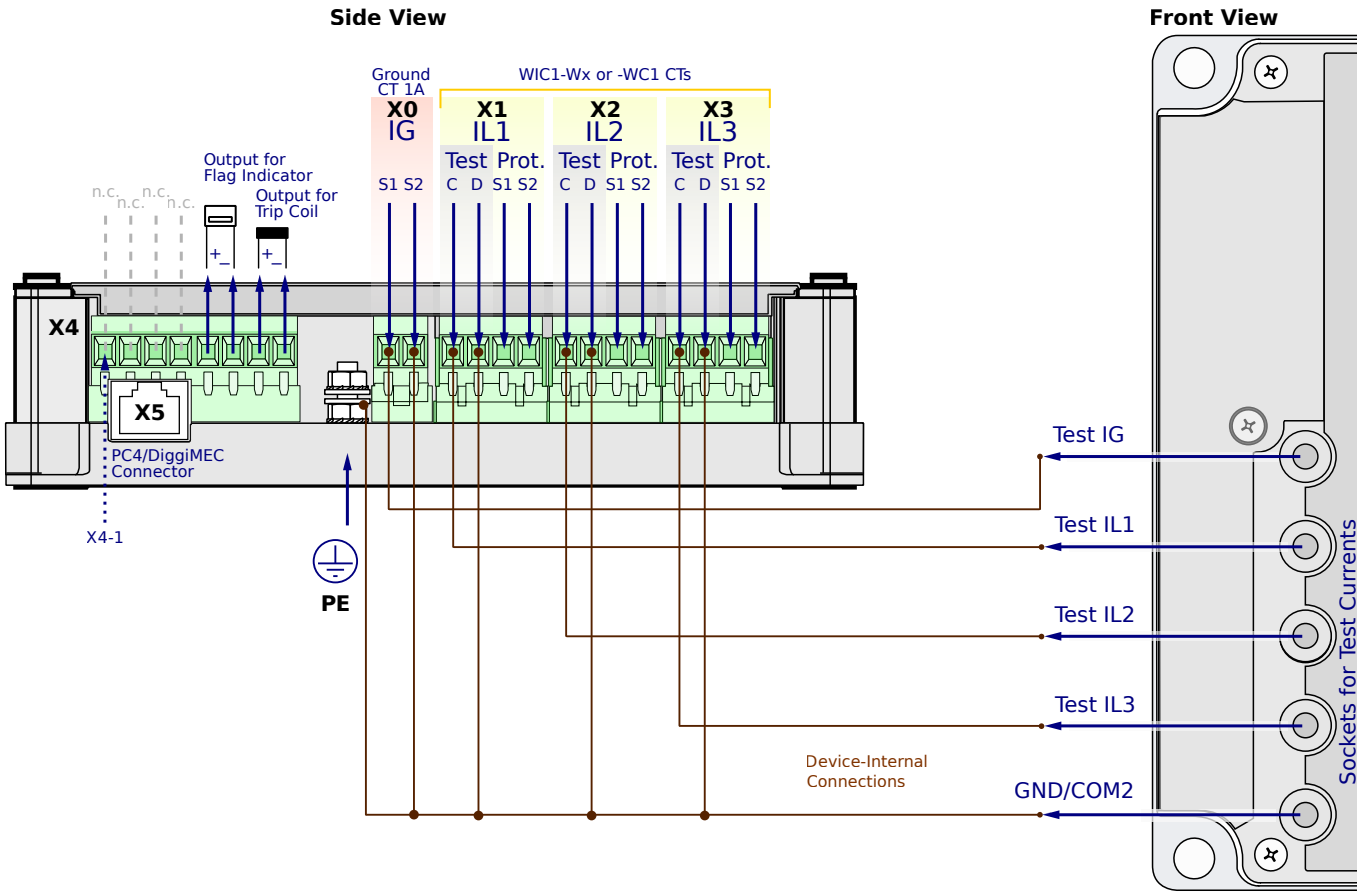


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2SAH

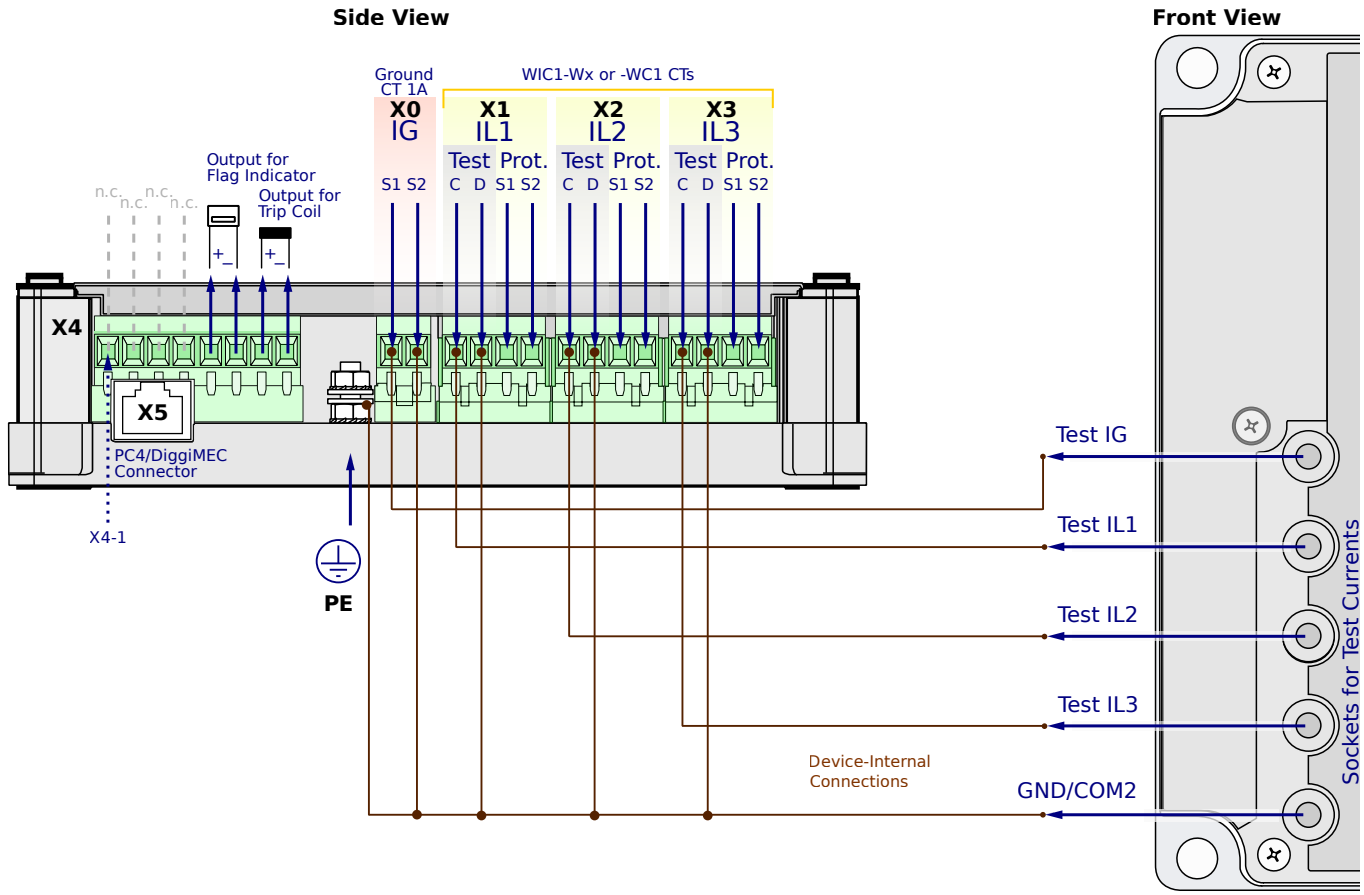


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2AA0

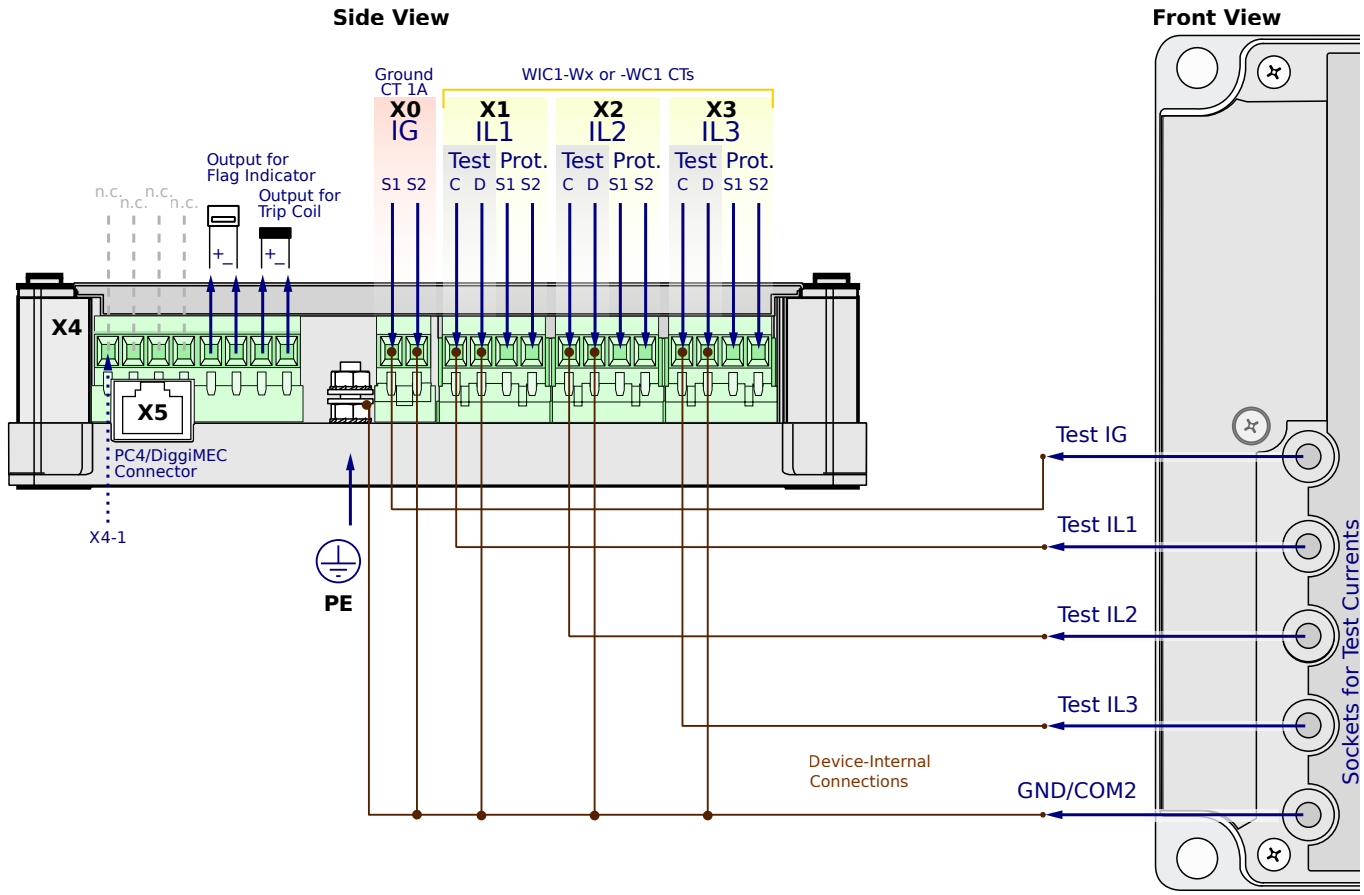


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2AAH

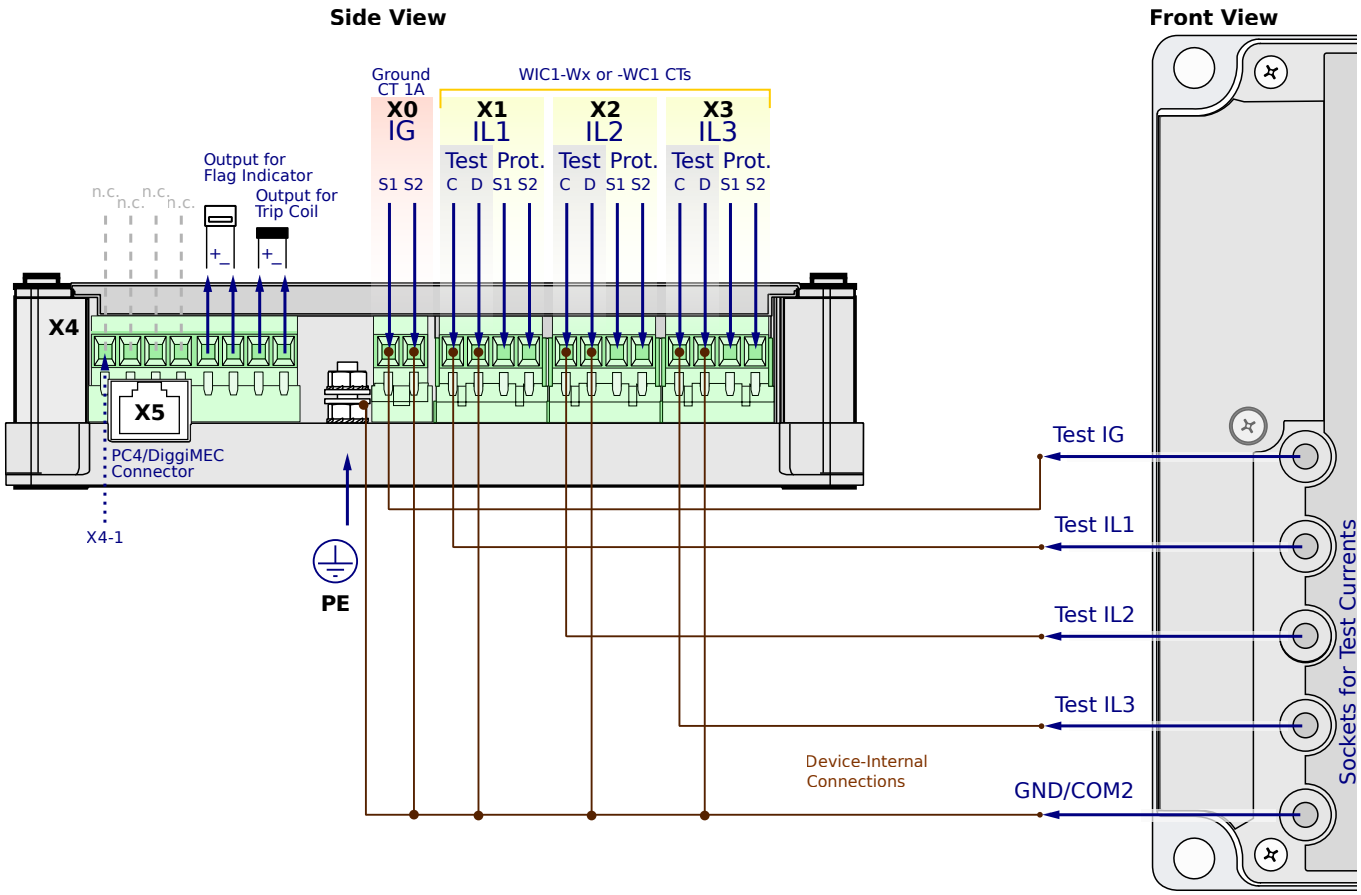


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2PA0

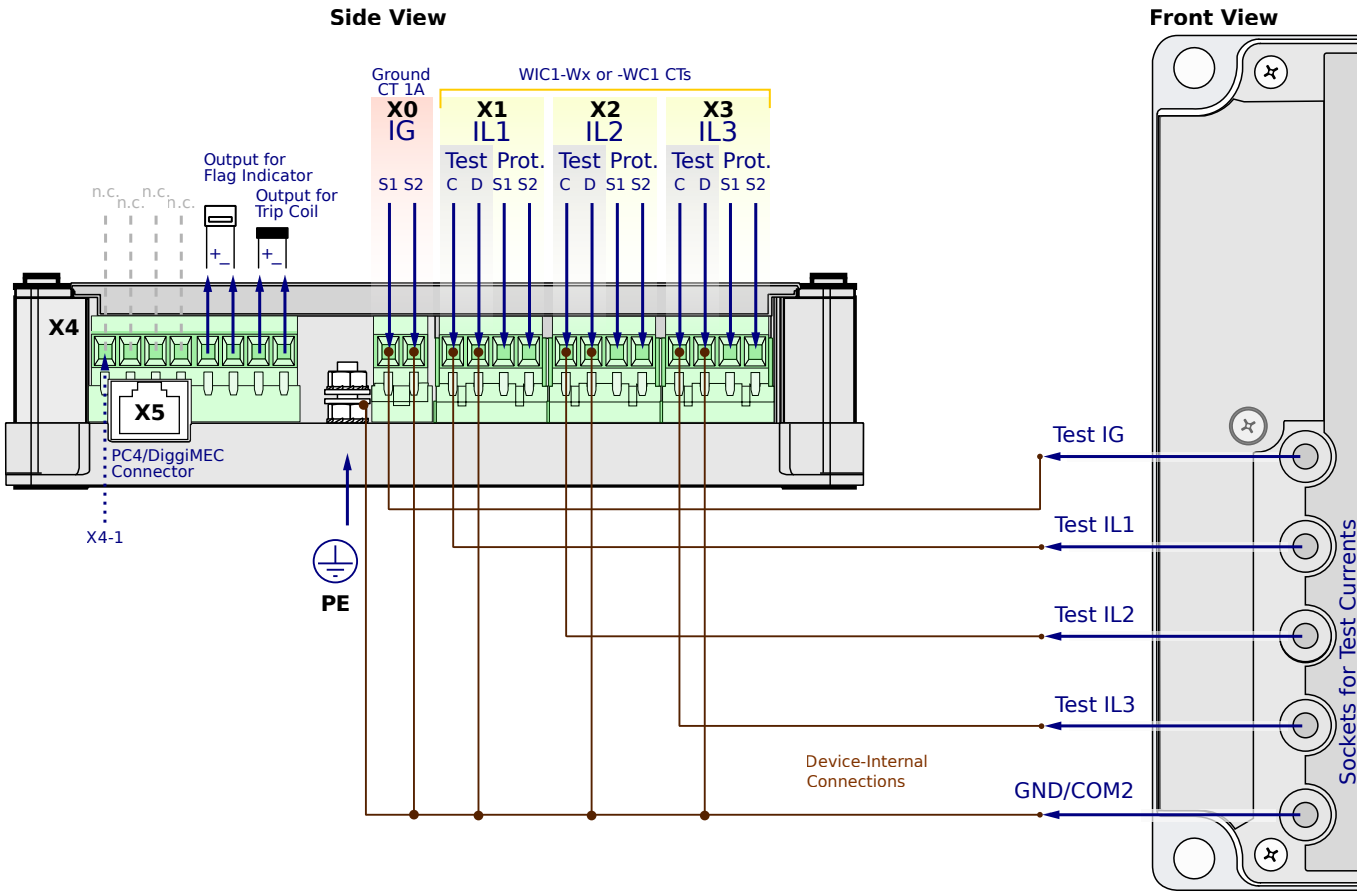


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FN2PAH

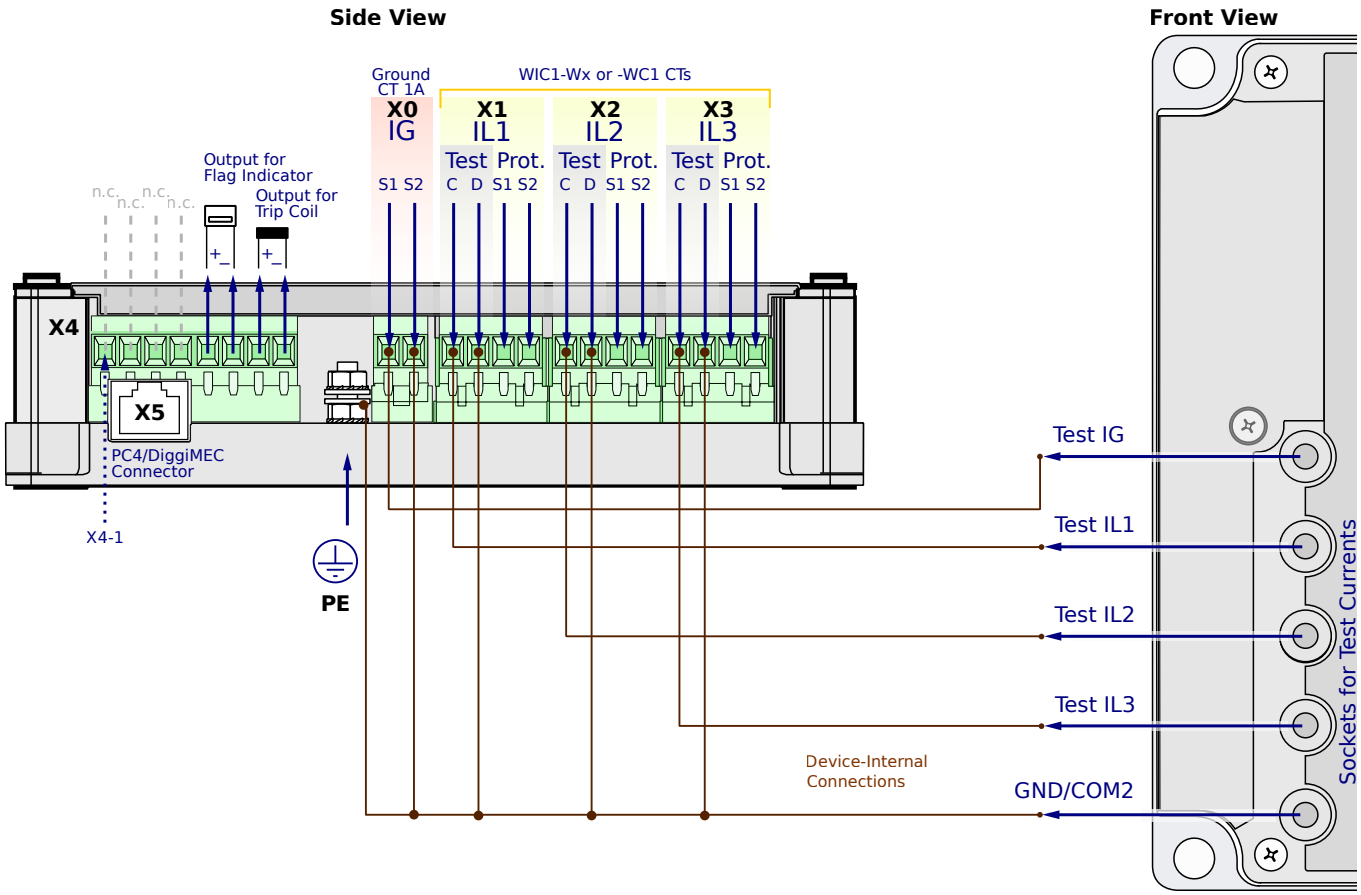


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1SA0

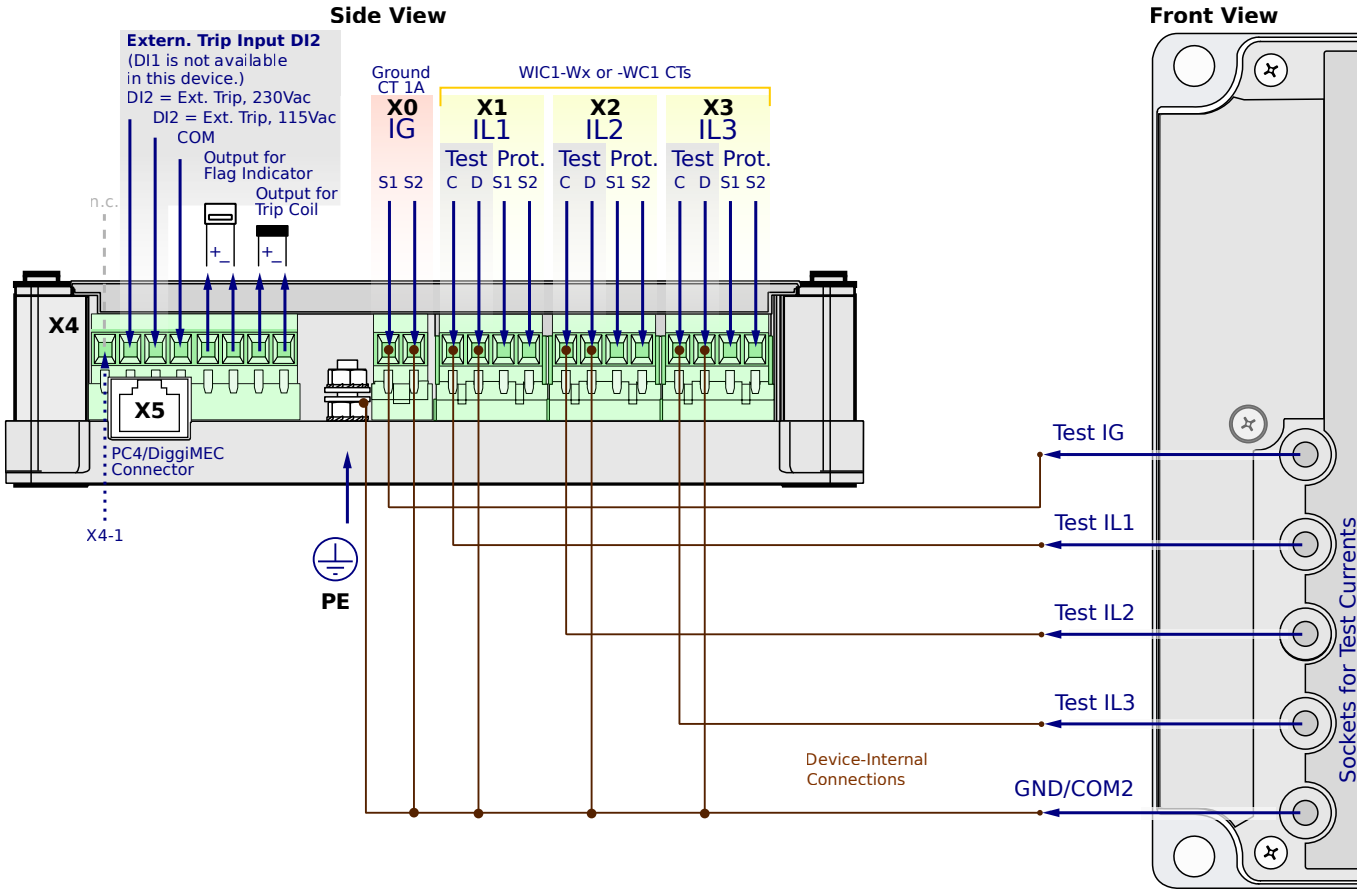


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1SAH

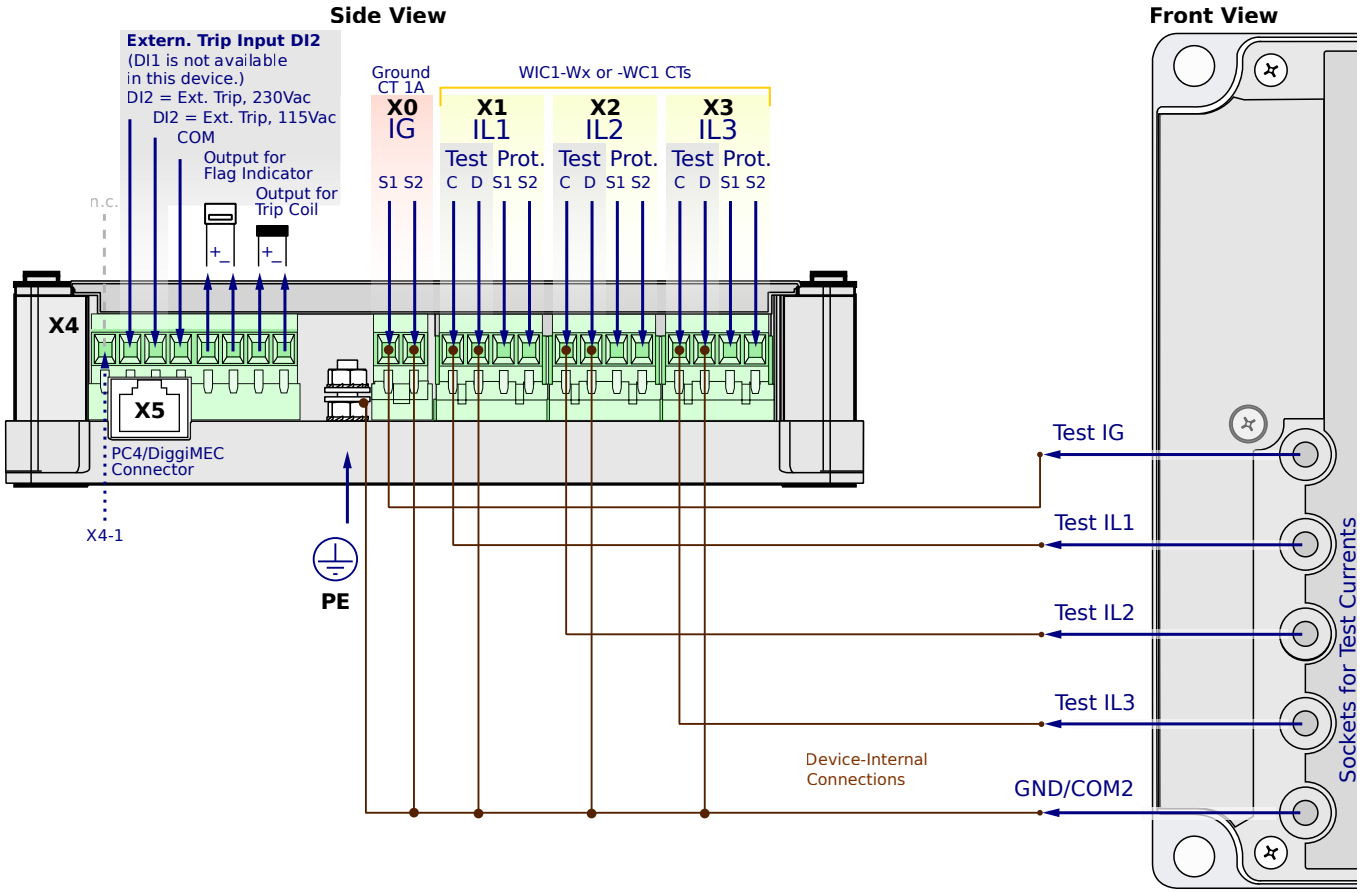


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1AA0

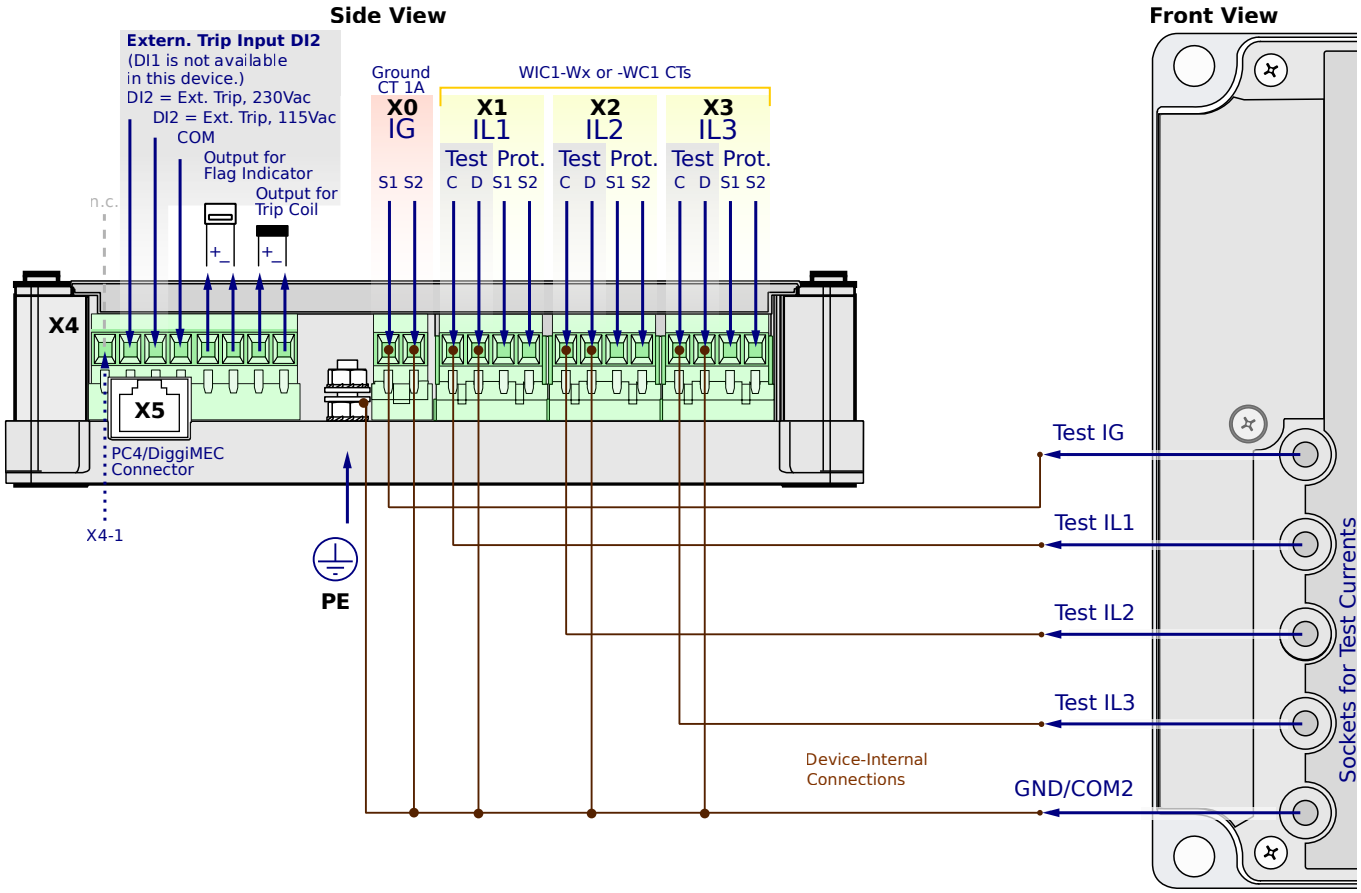


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1AAH

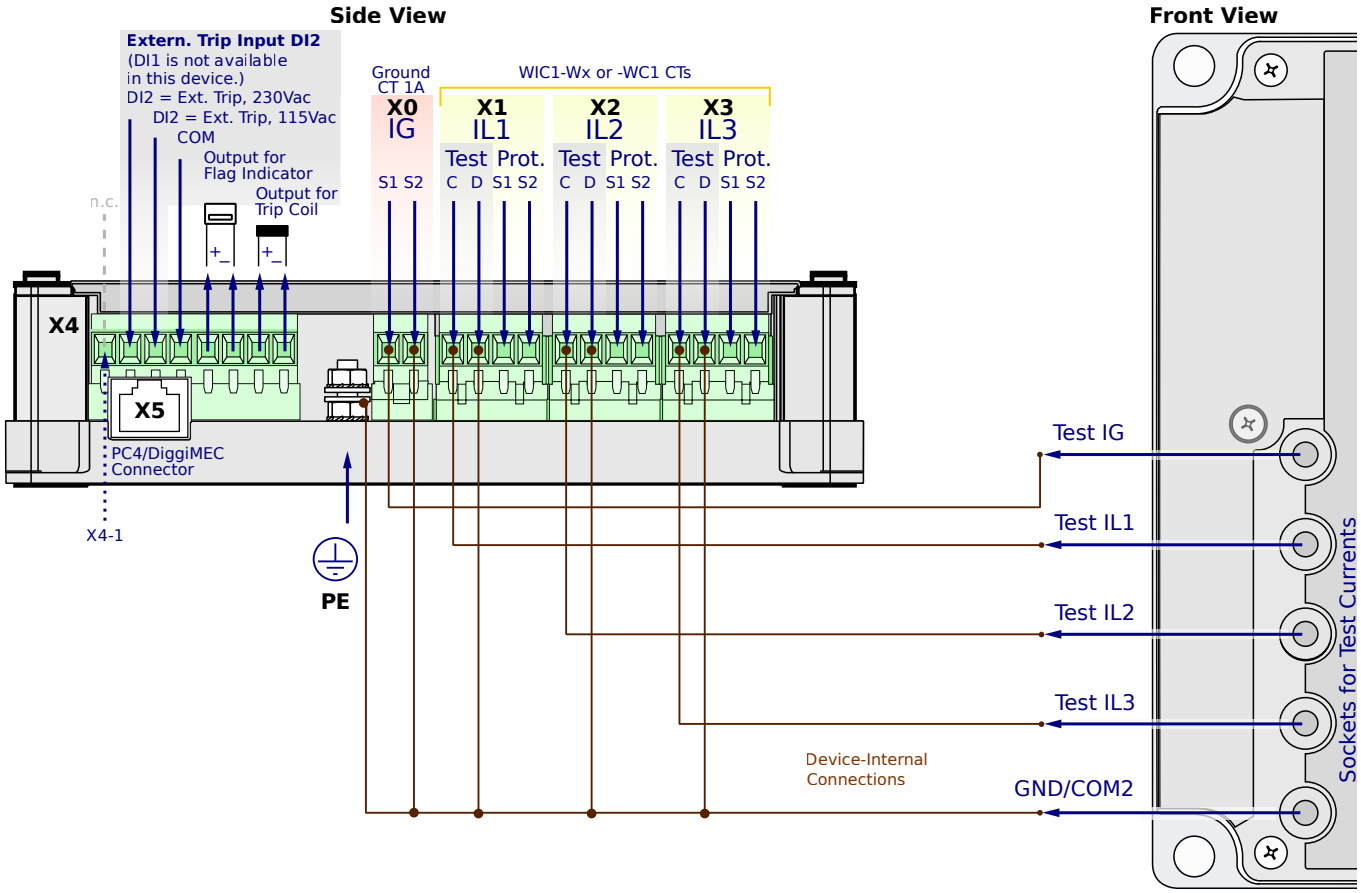


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1PA0

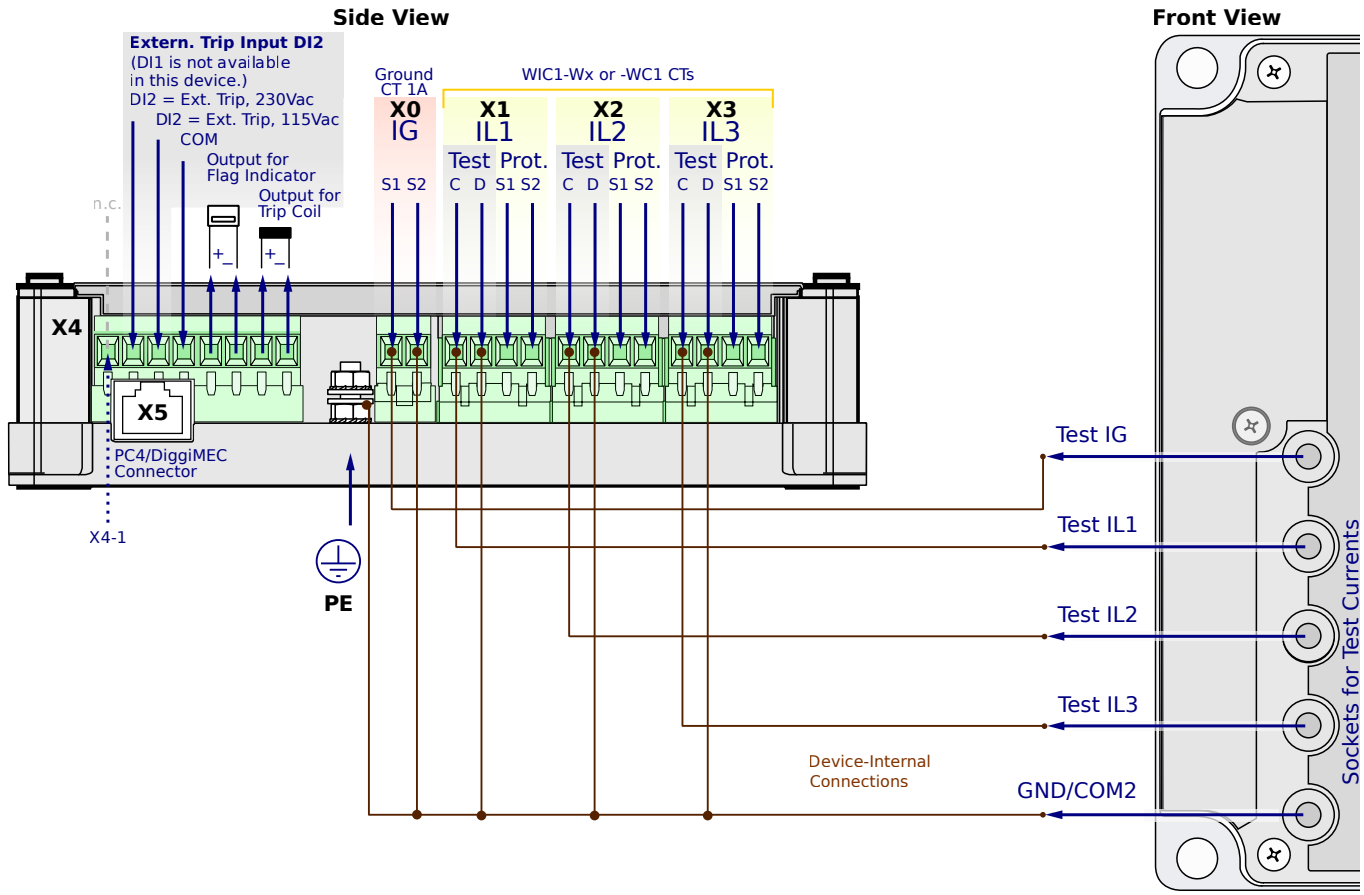


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF1PAH

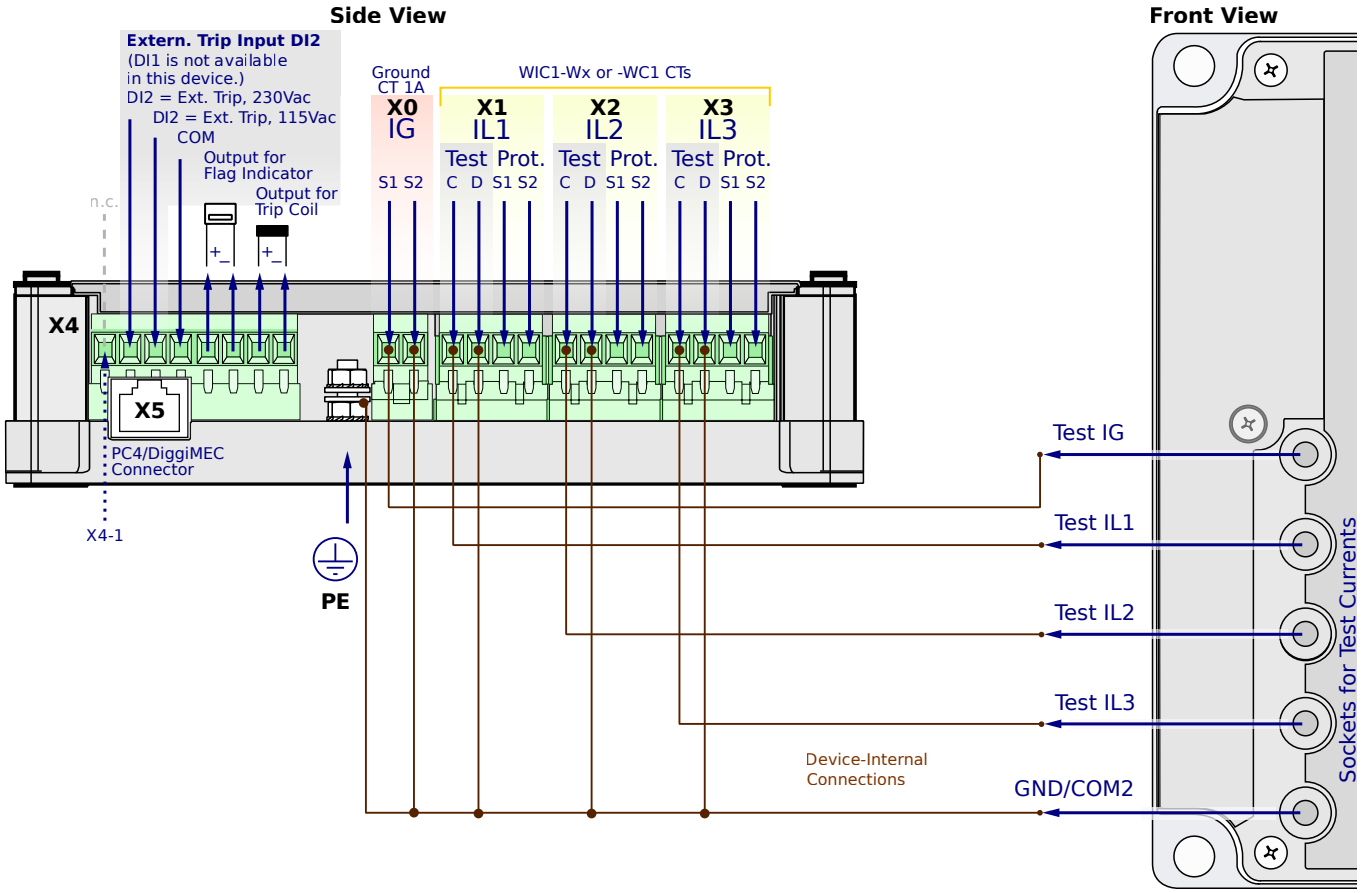


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2SA0

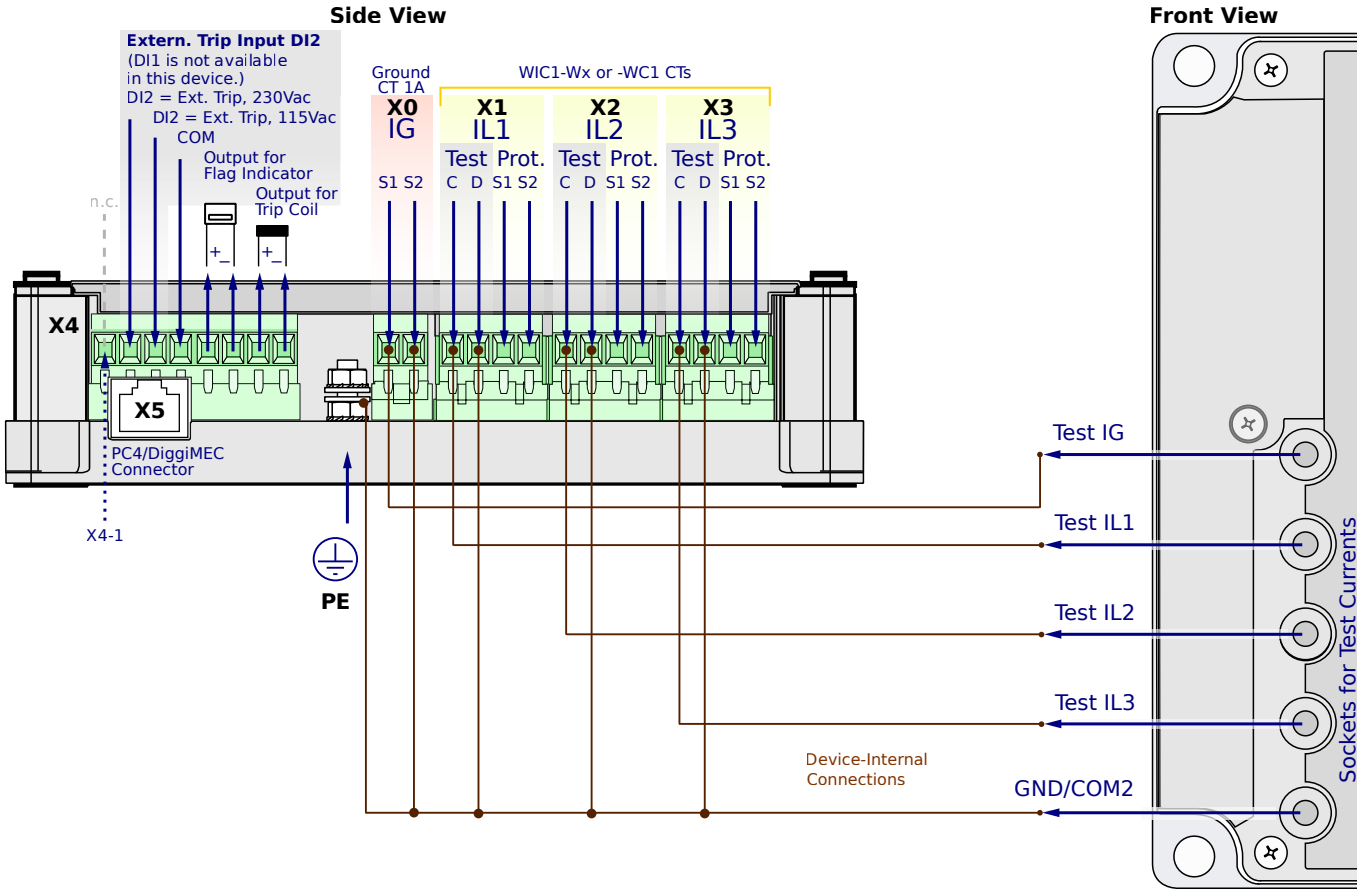


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2SAH

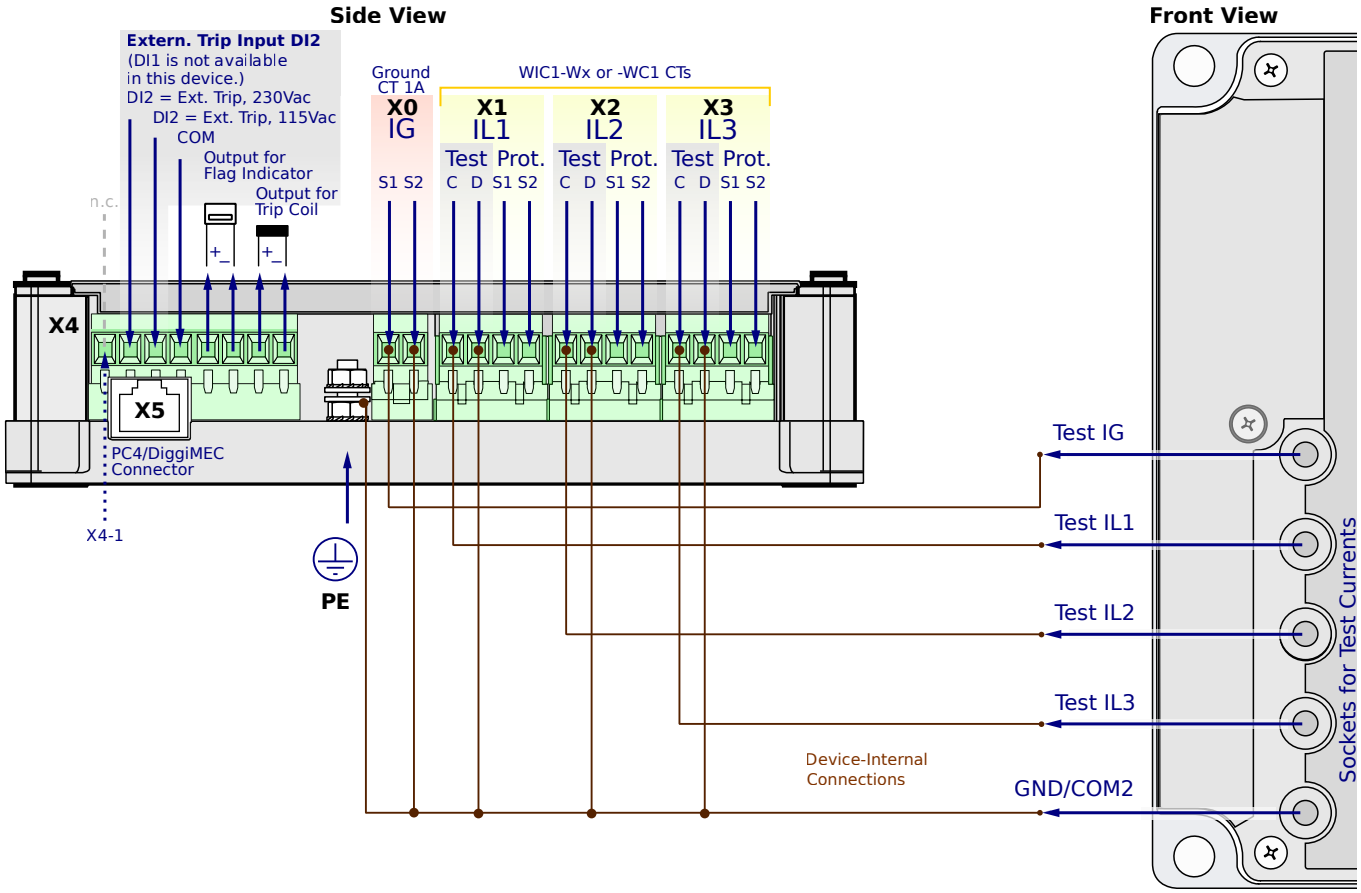


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2AA0

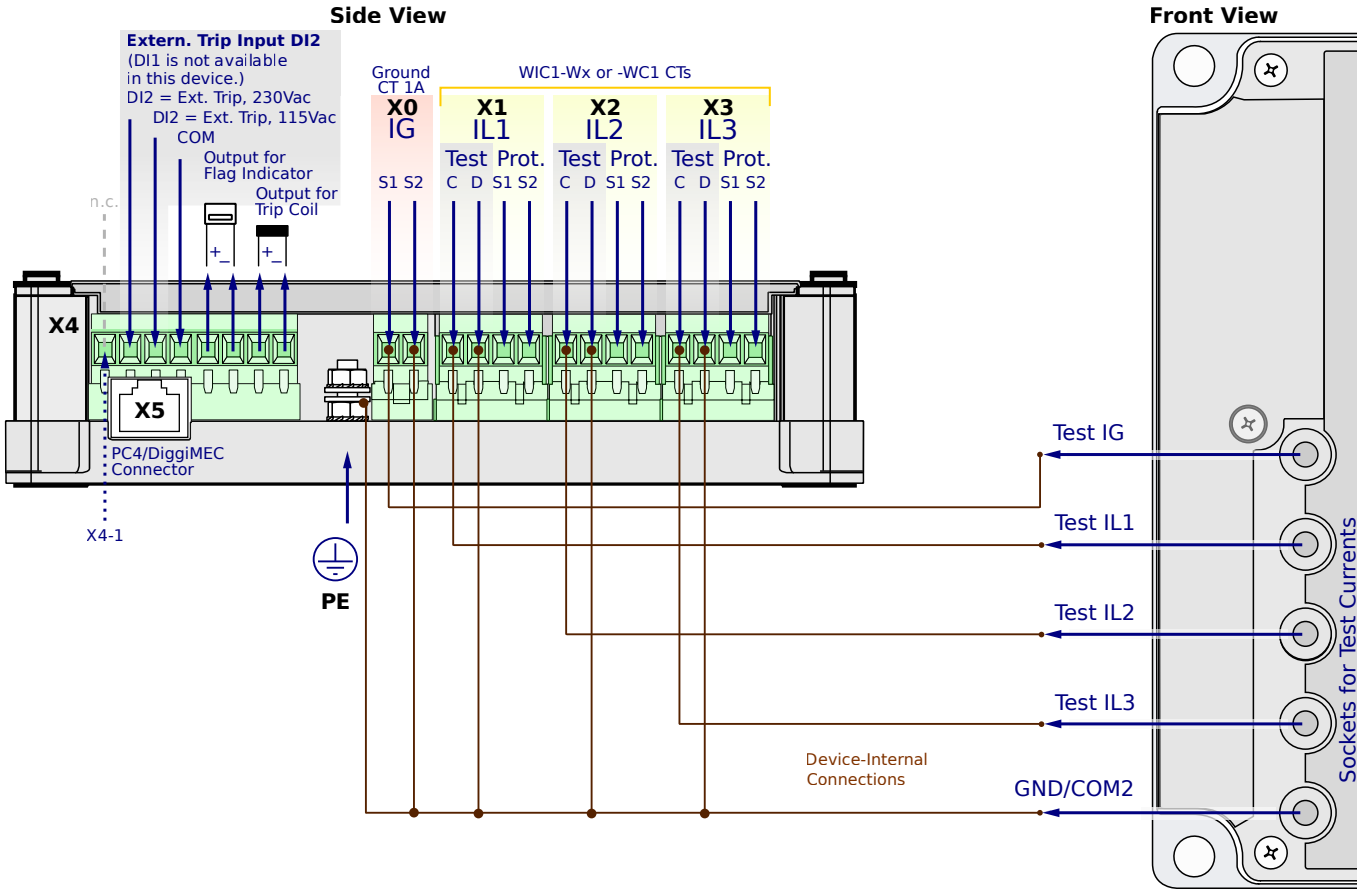


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2AAH

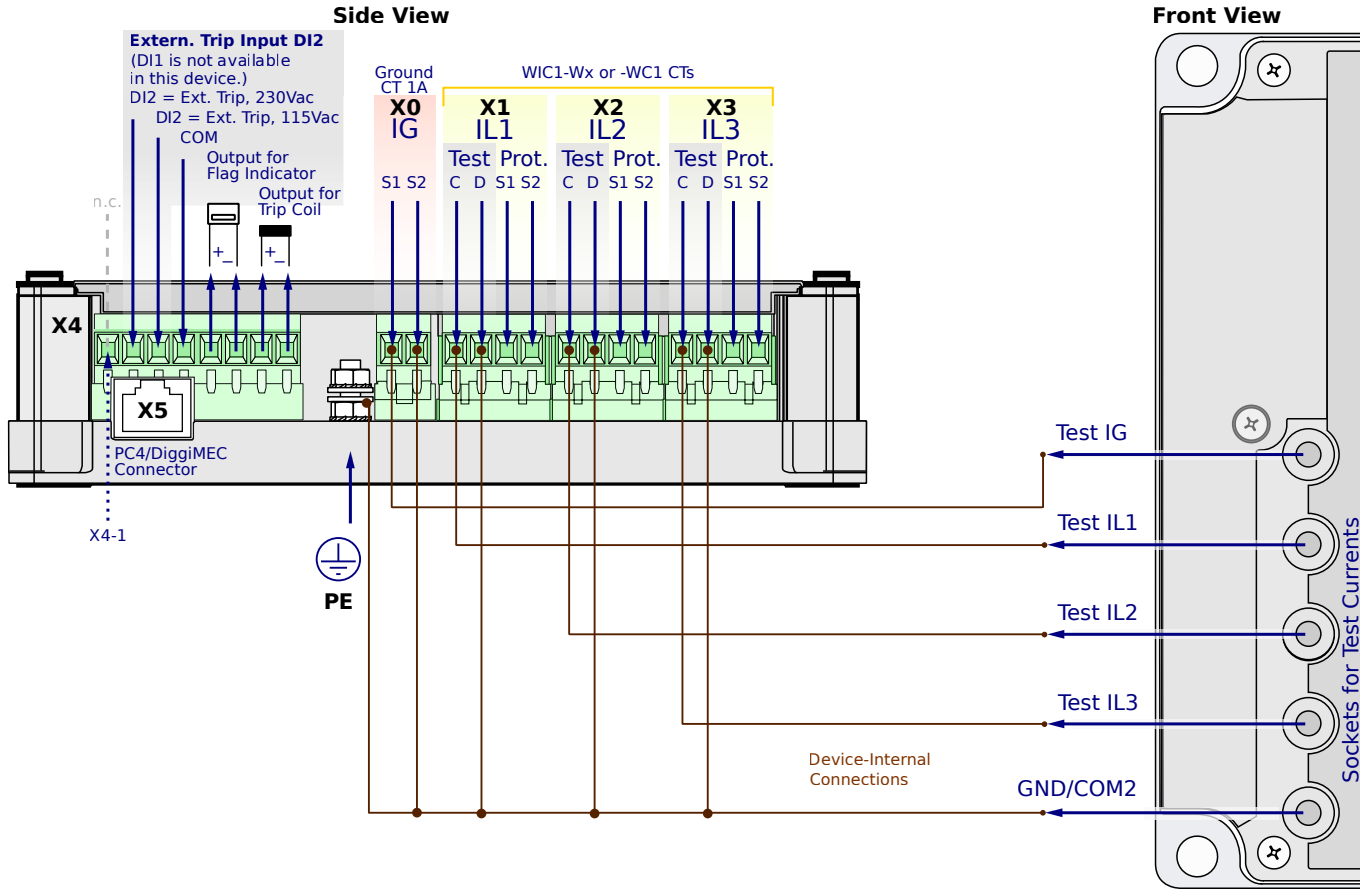


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2PA0

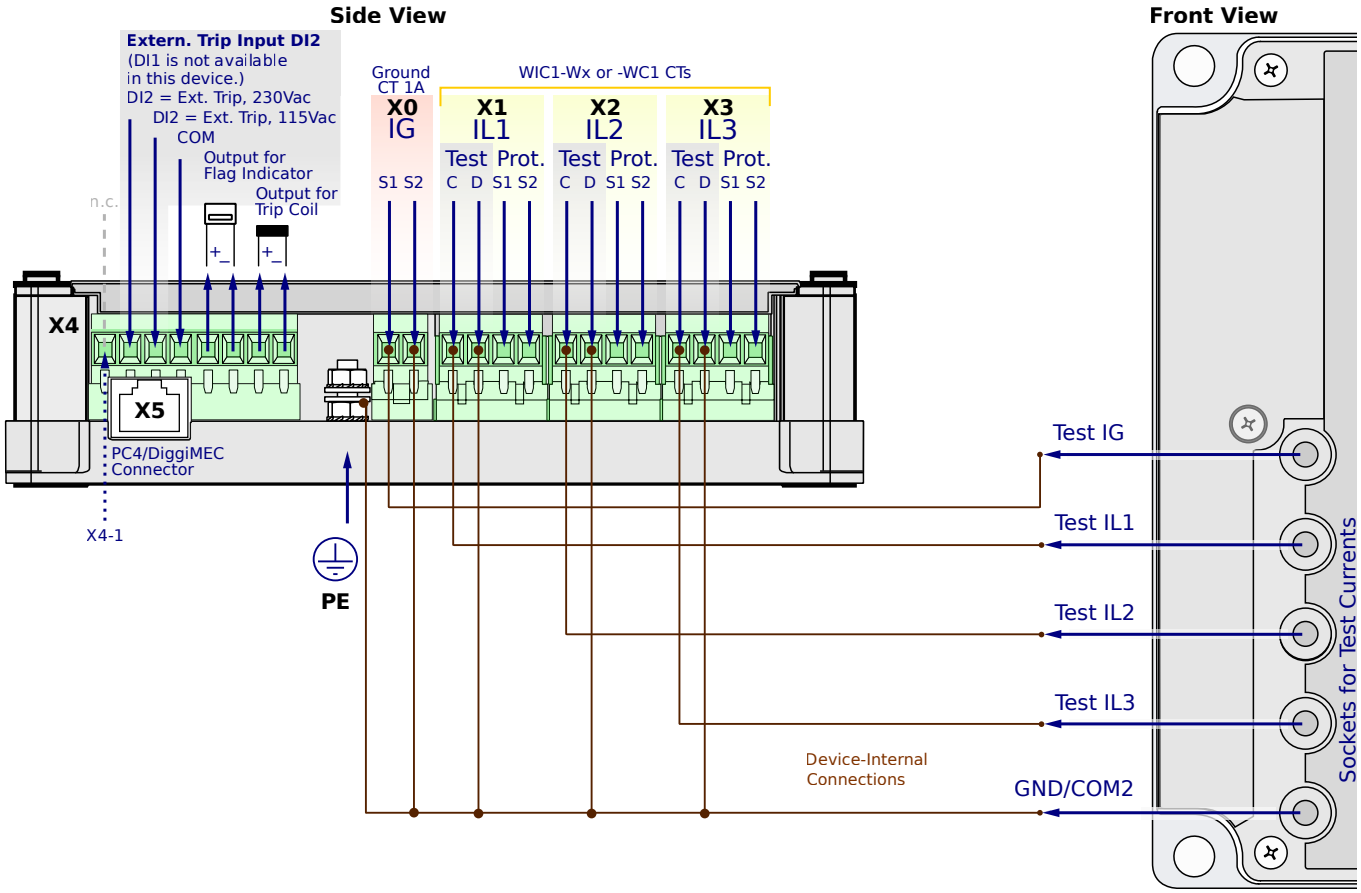


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FF2PAH

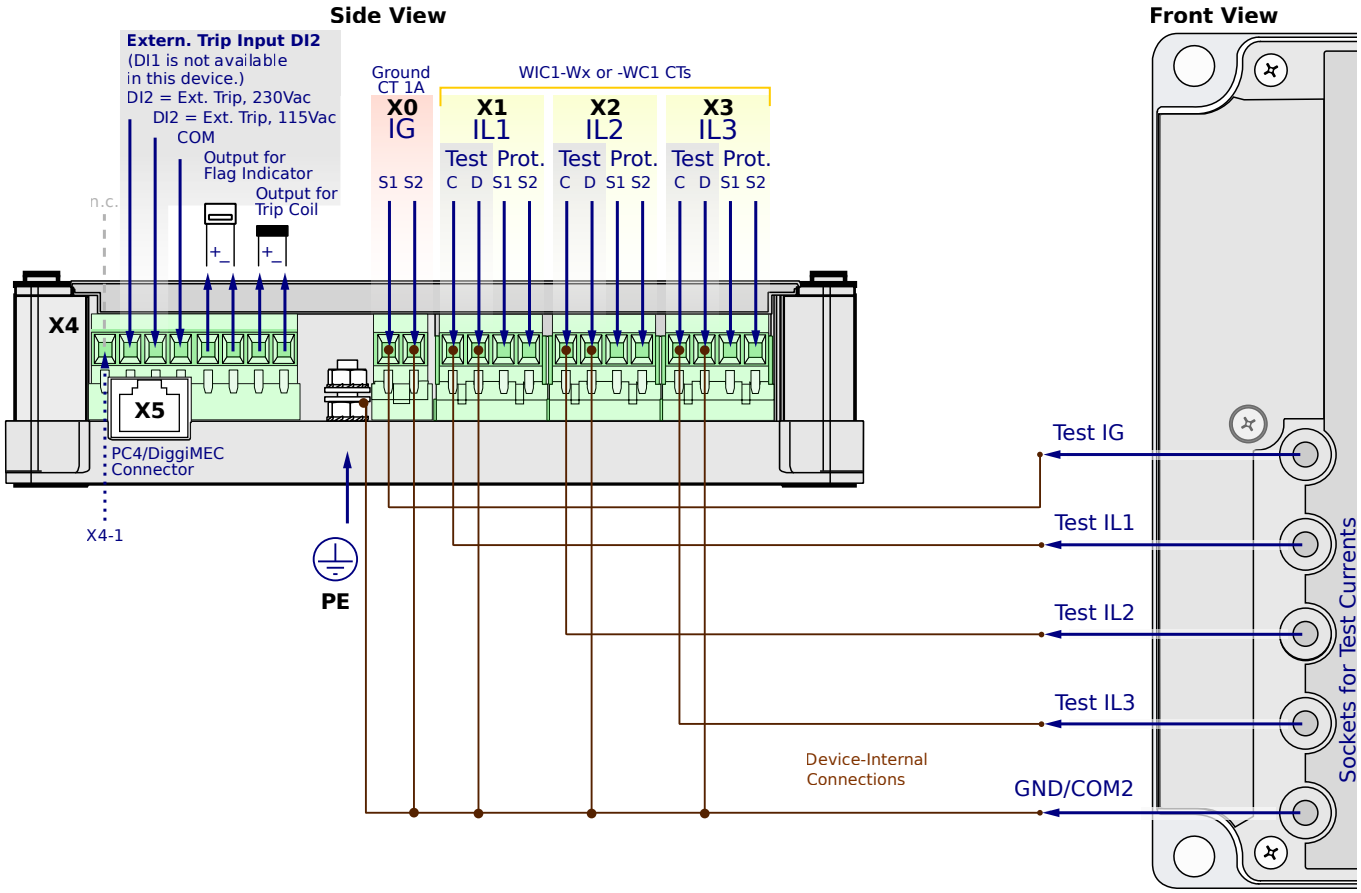


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1SA0

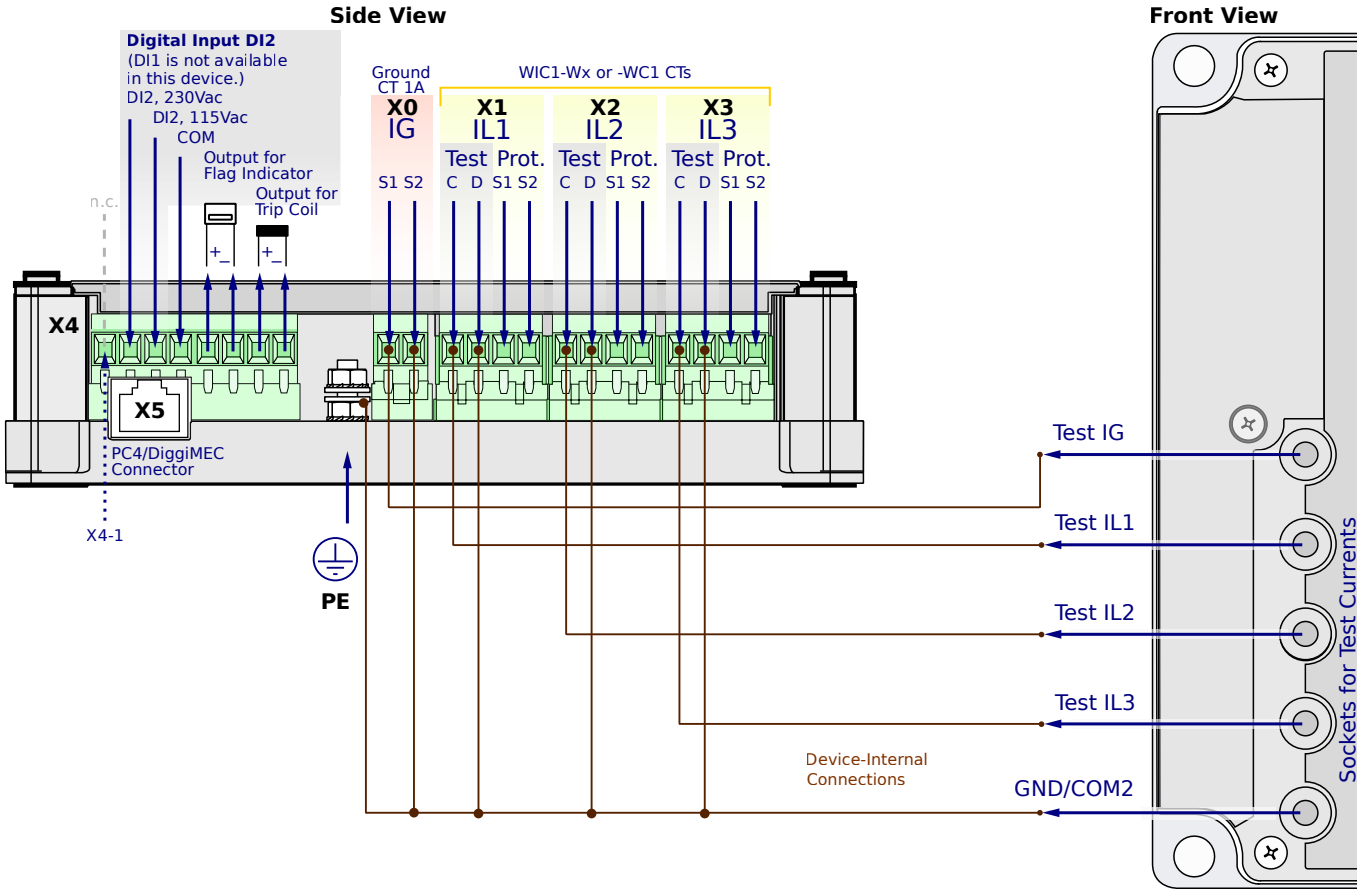


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1SAH

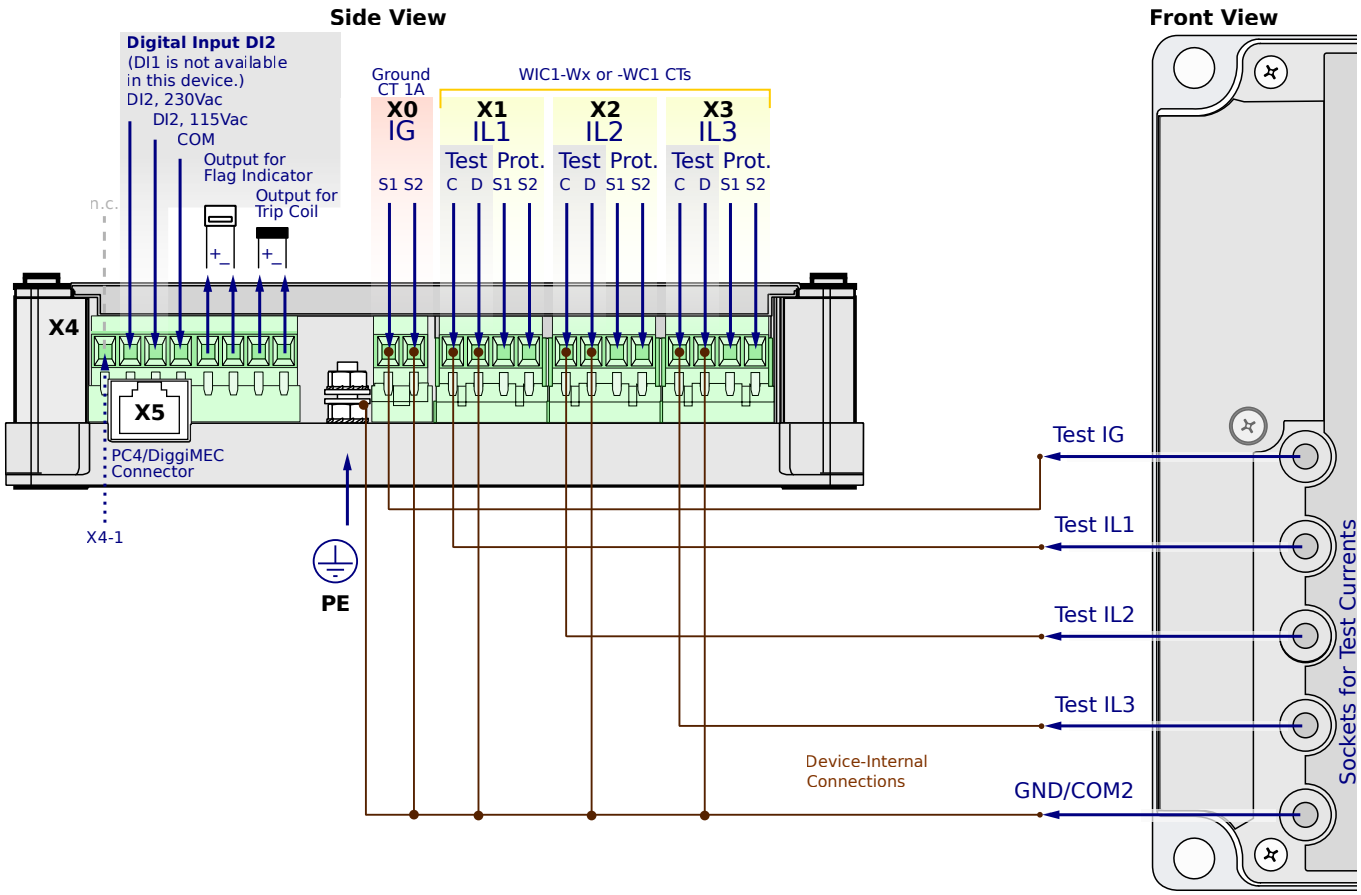


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1AA0

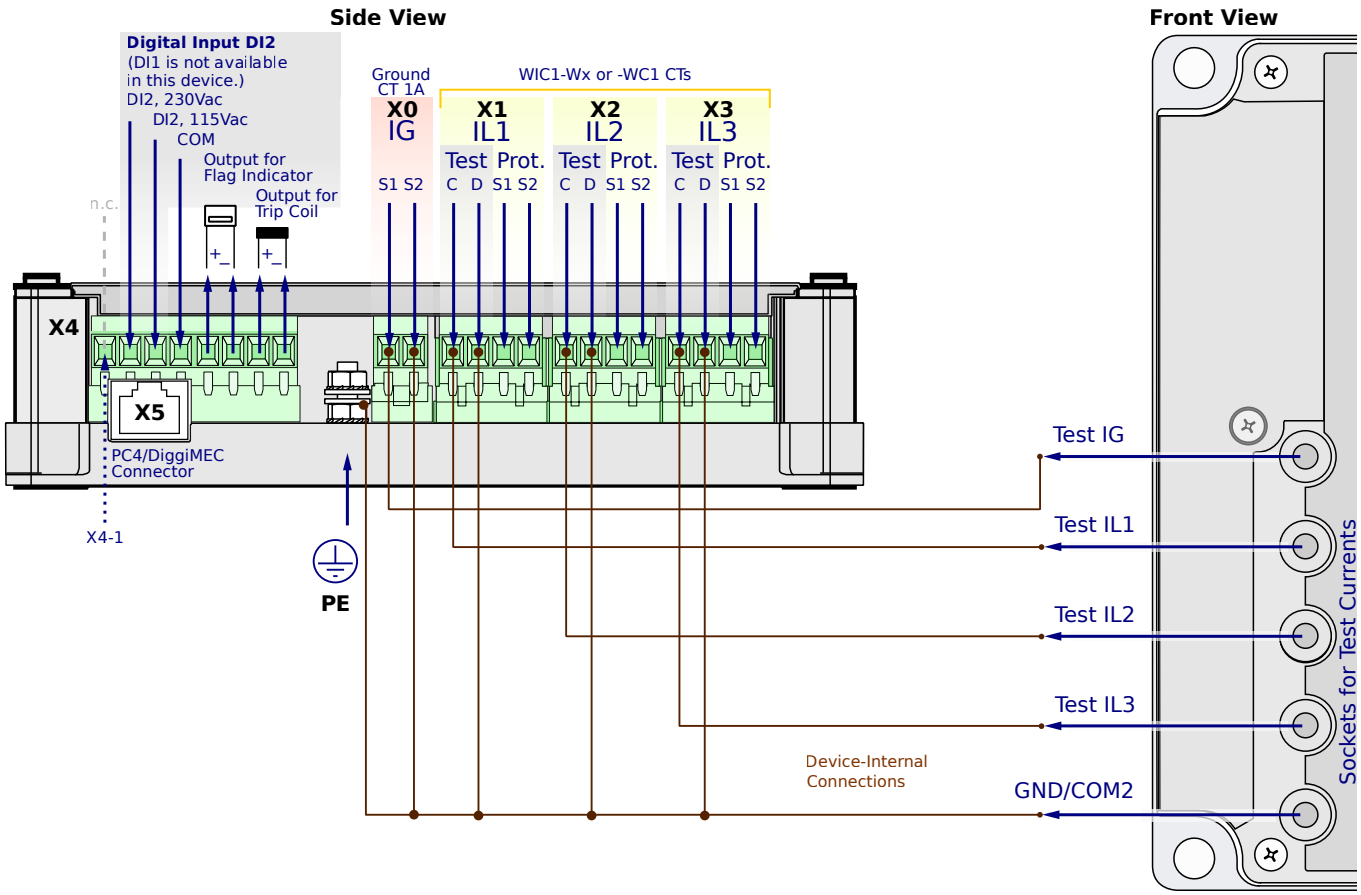


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1AAH

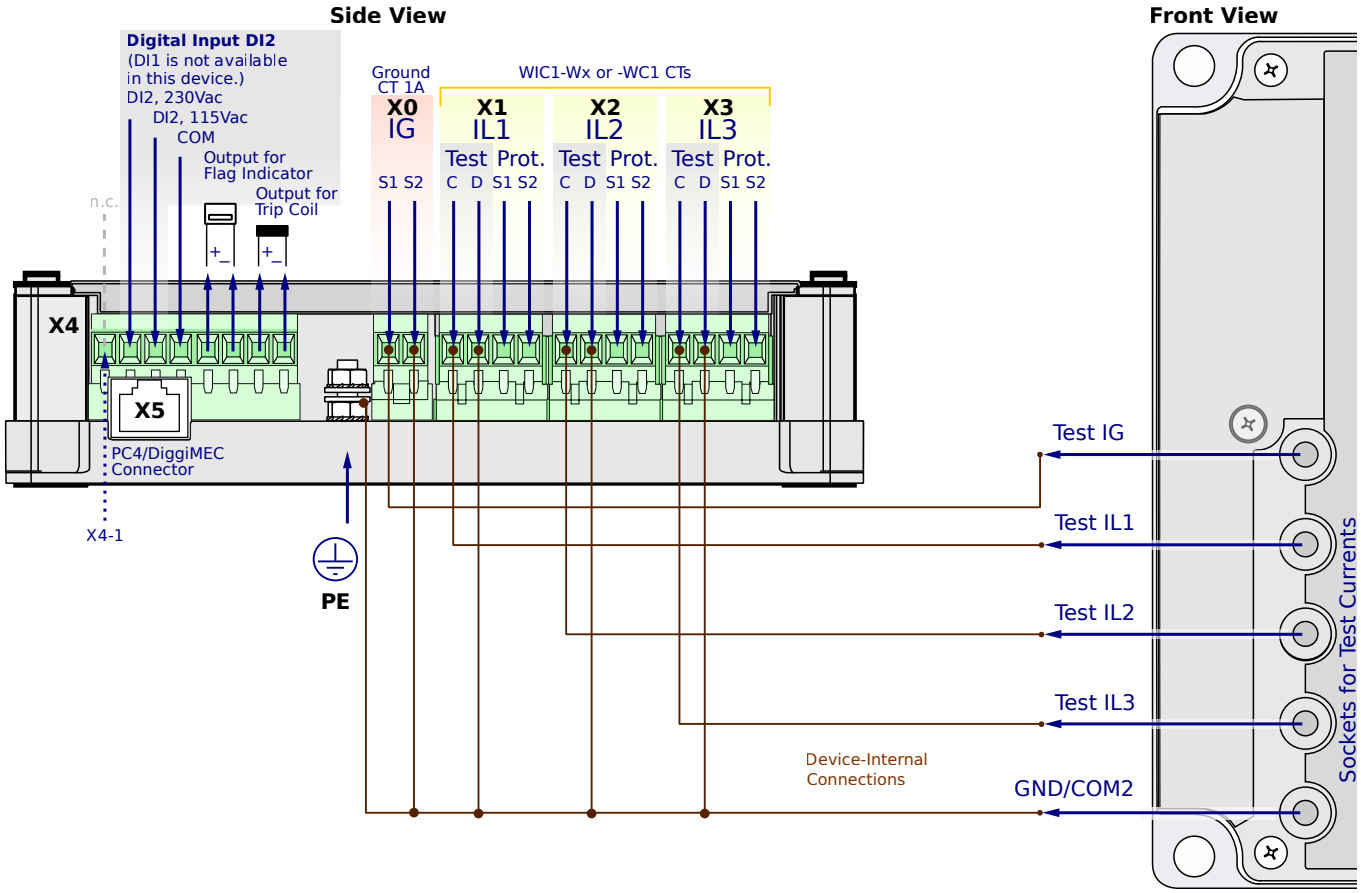


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1PA0

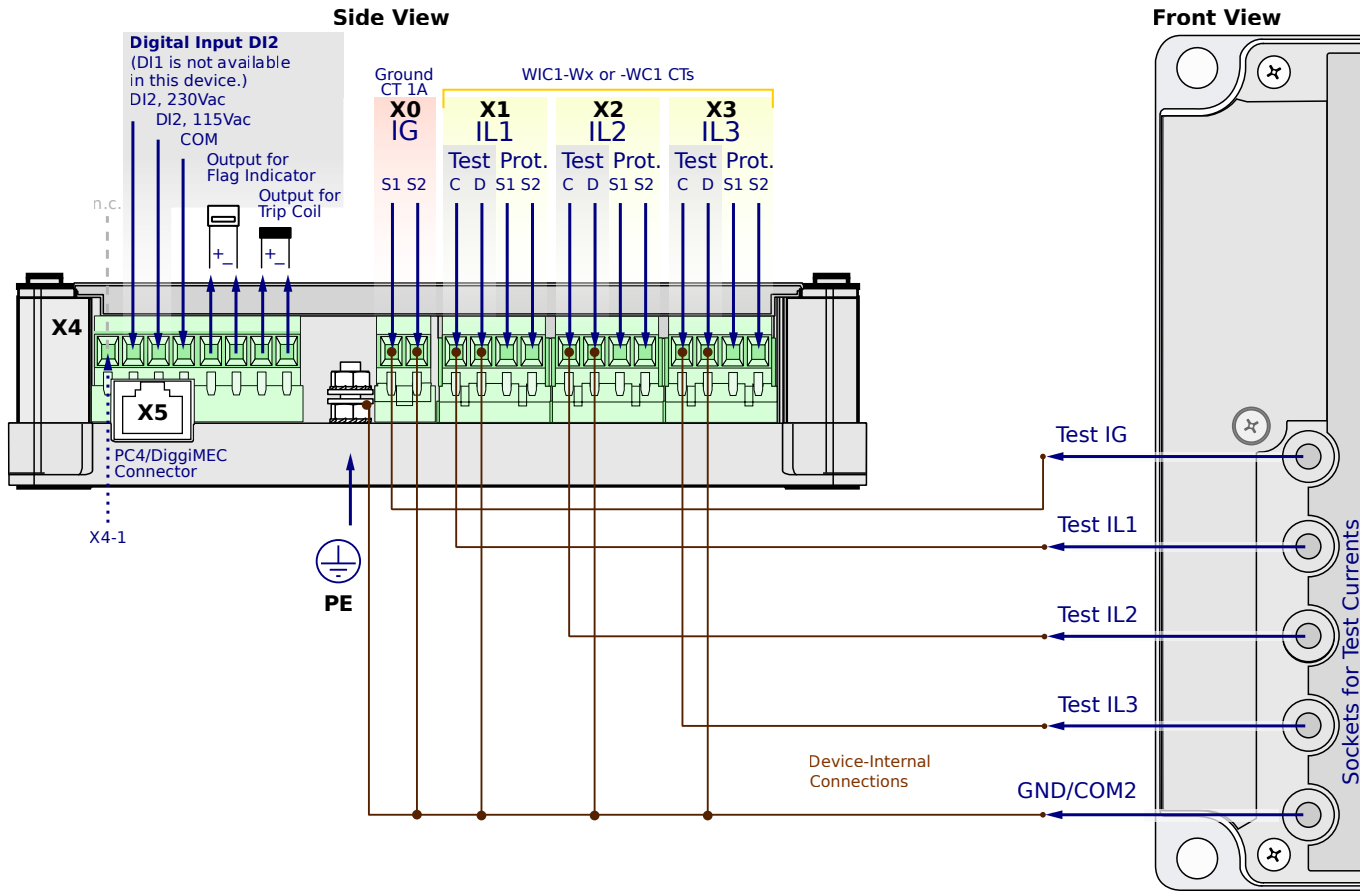


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC1PAH

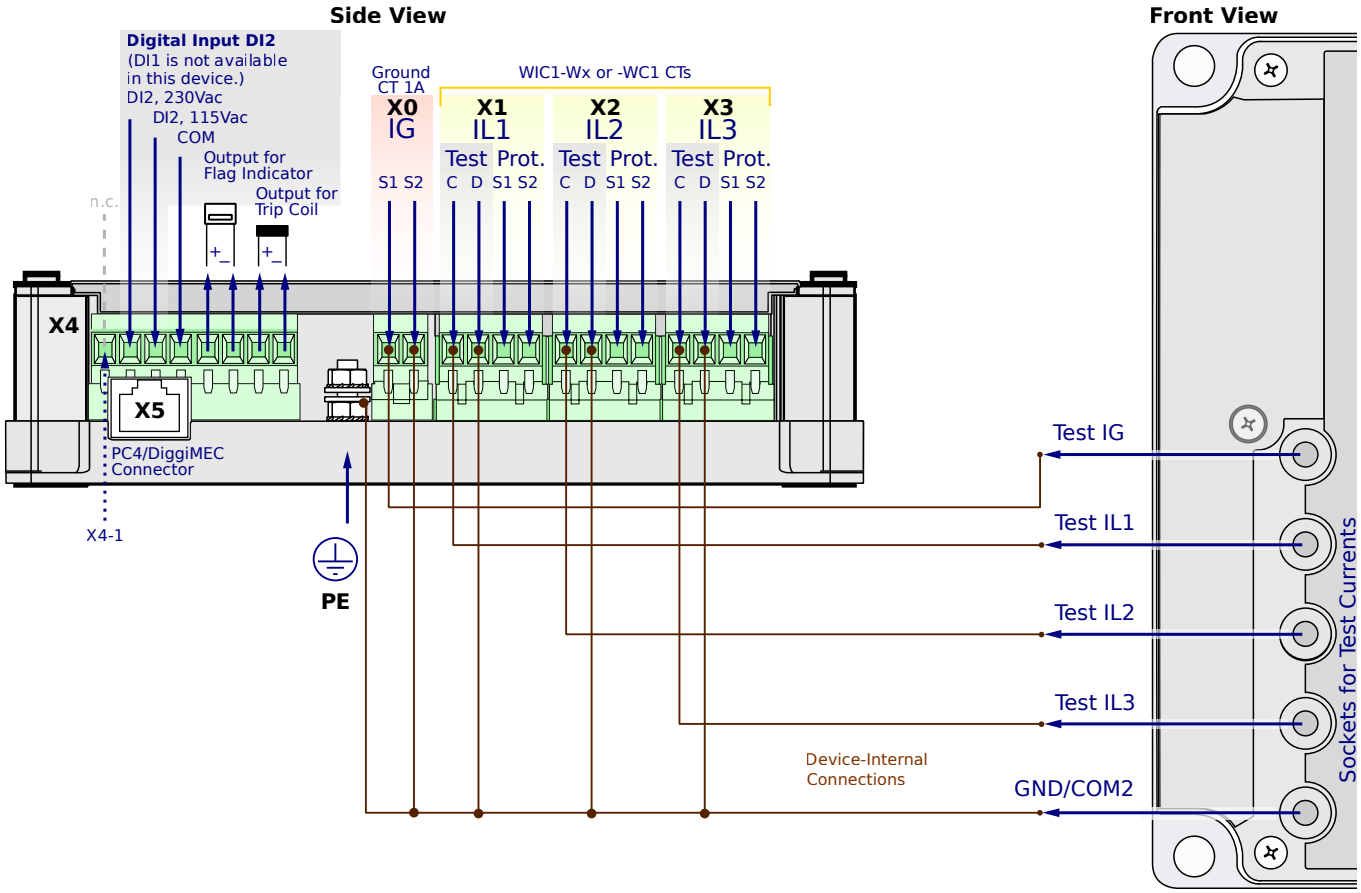


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2SA0

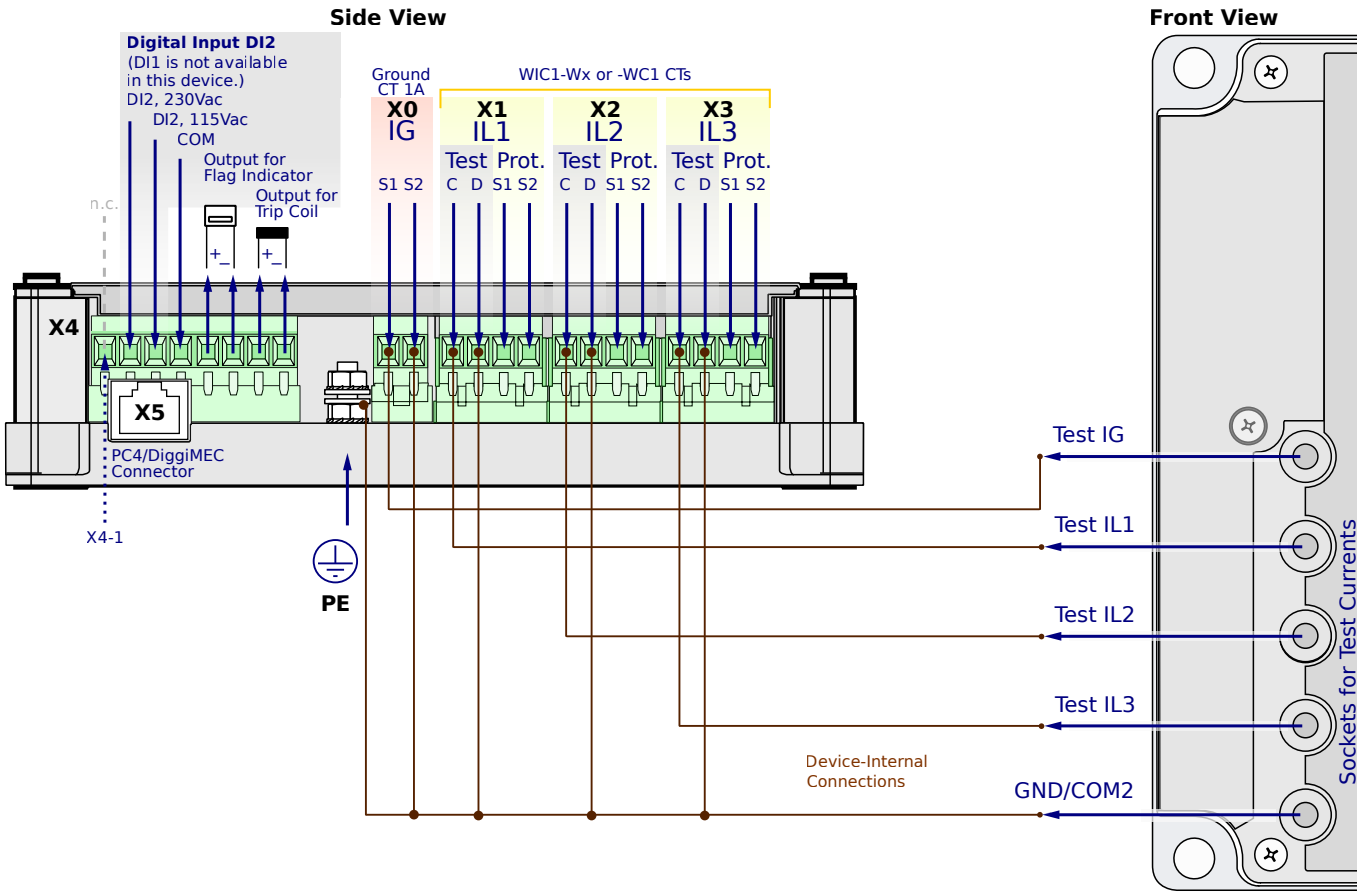


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2SAH

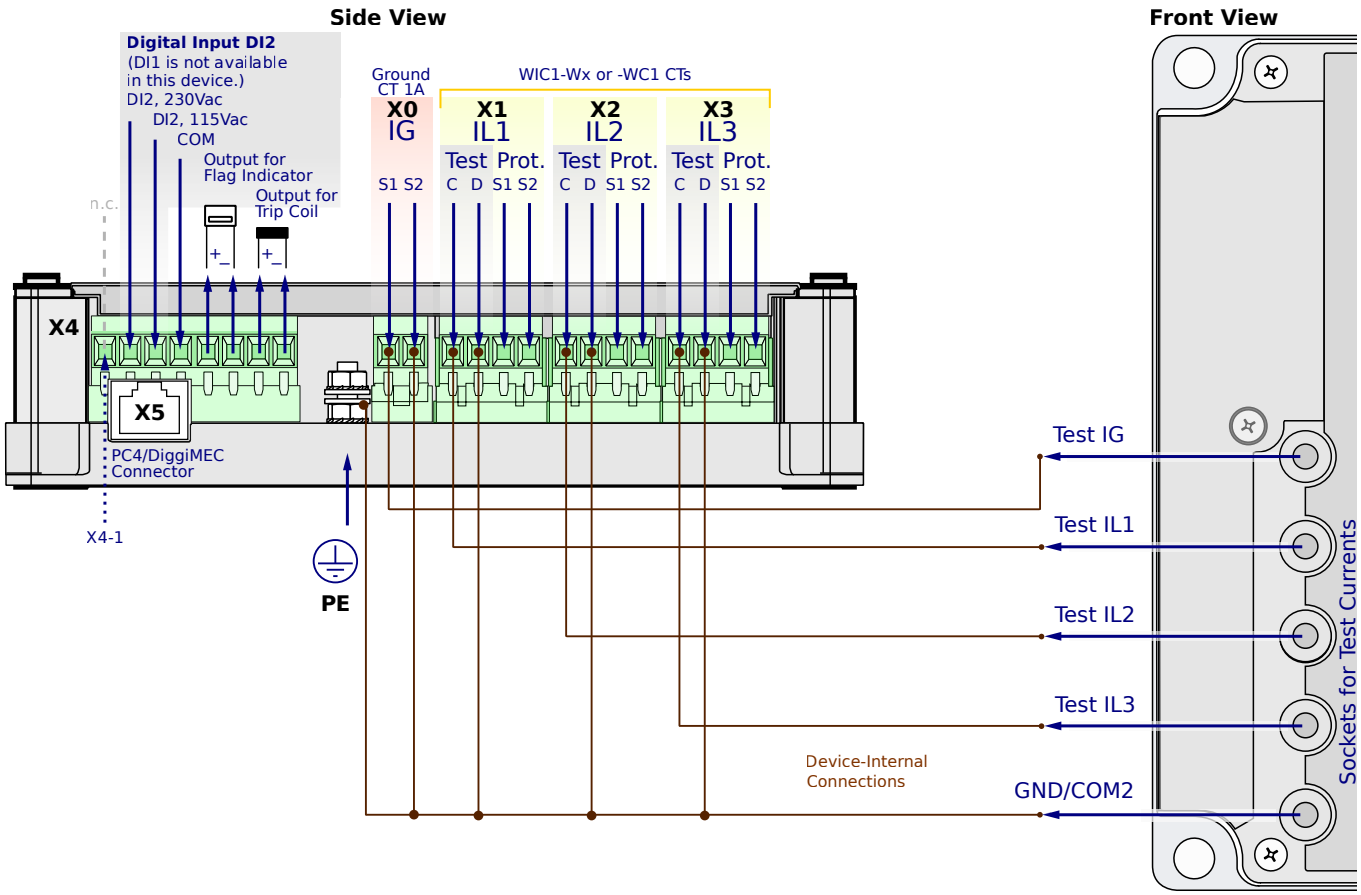


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2AA0

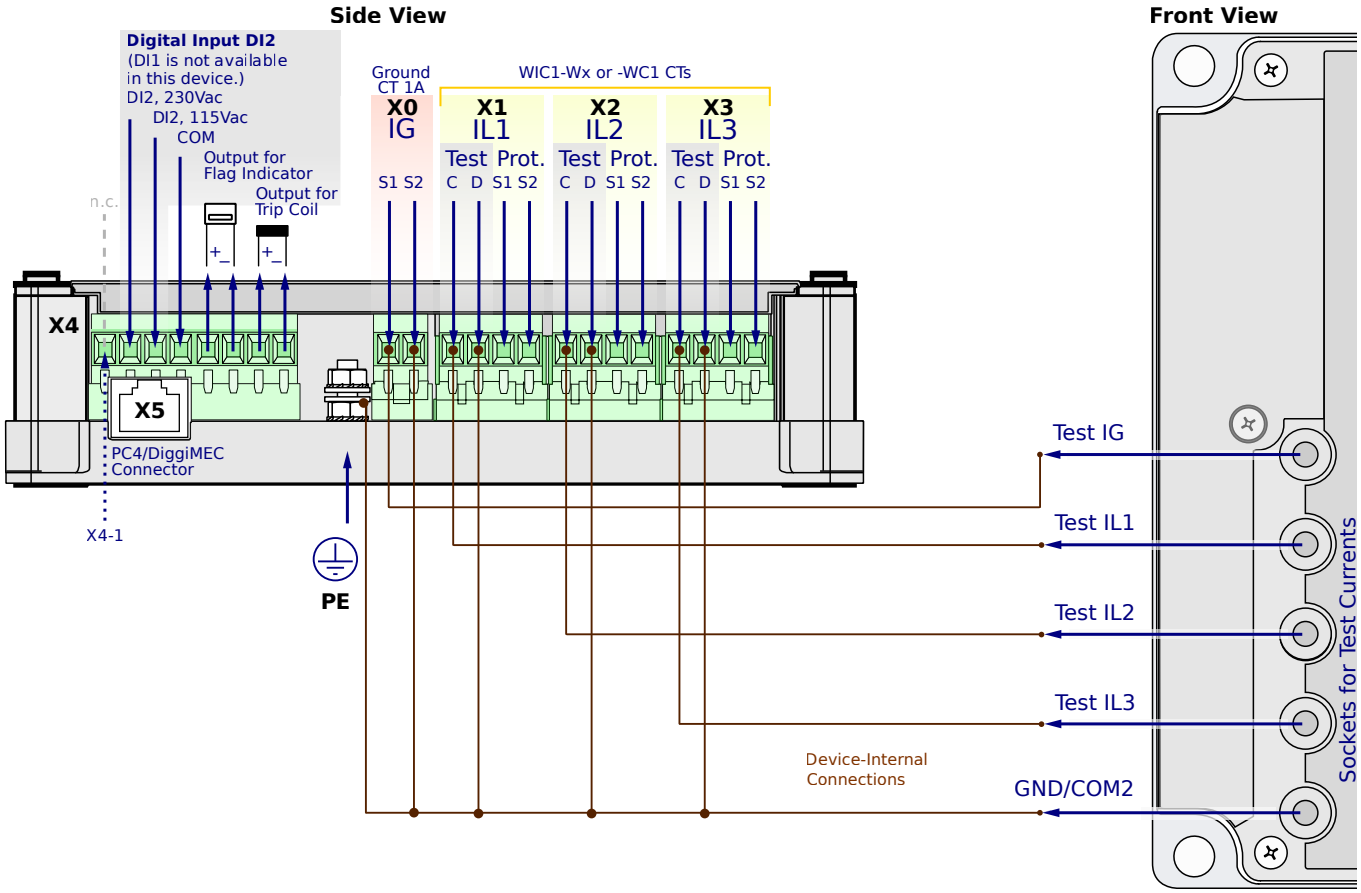


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2AAH

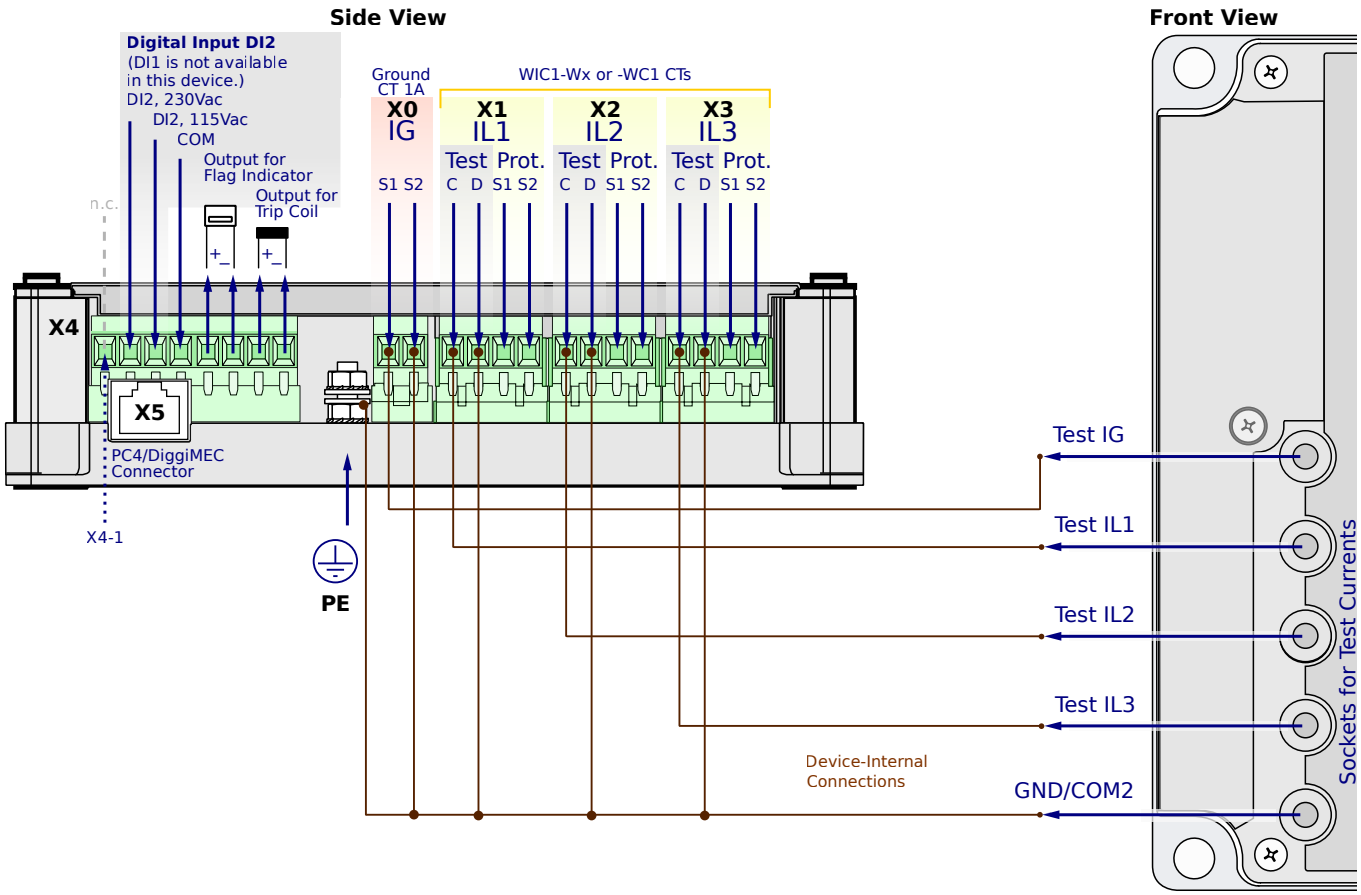


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2PA0

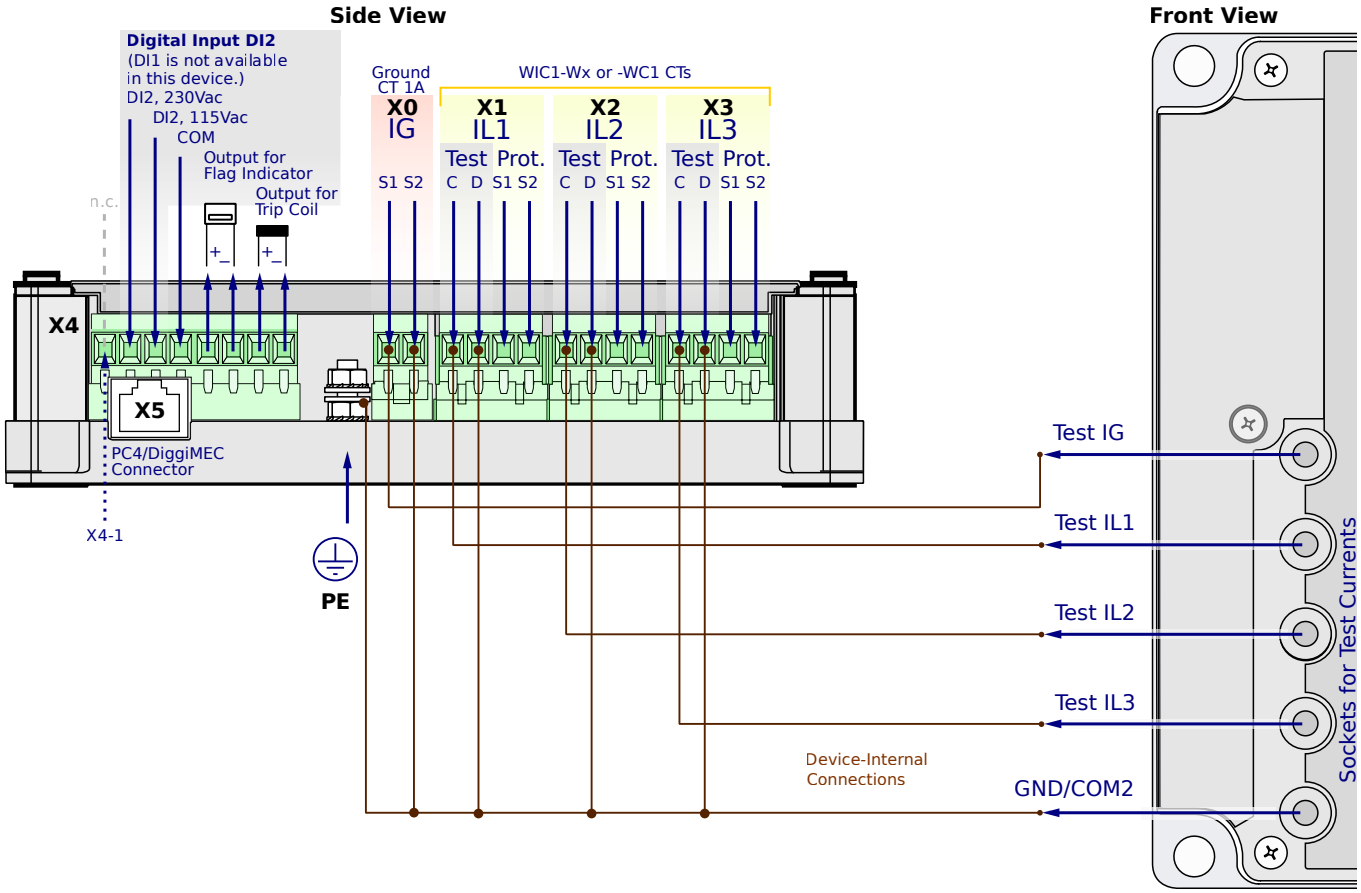


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6FC2PAH

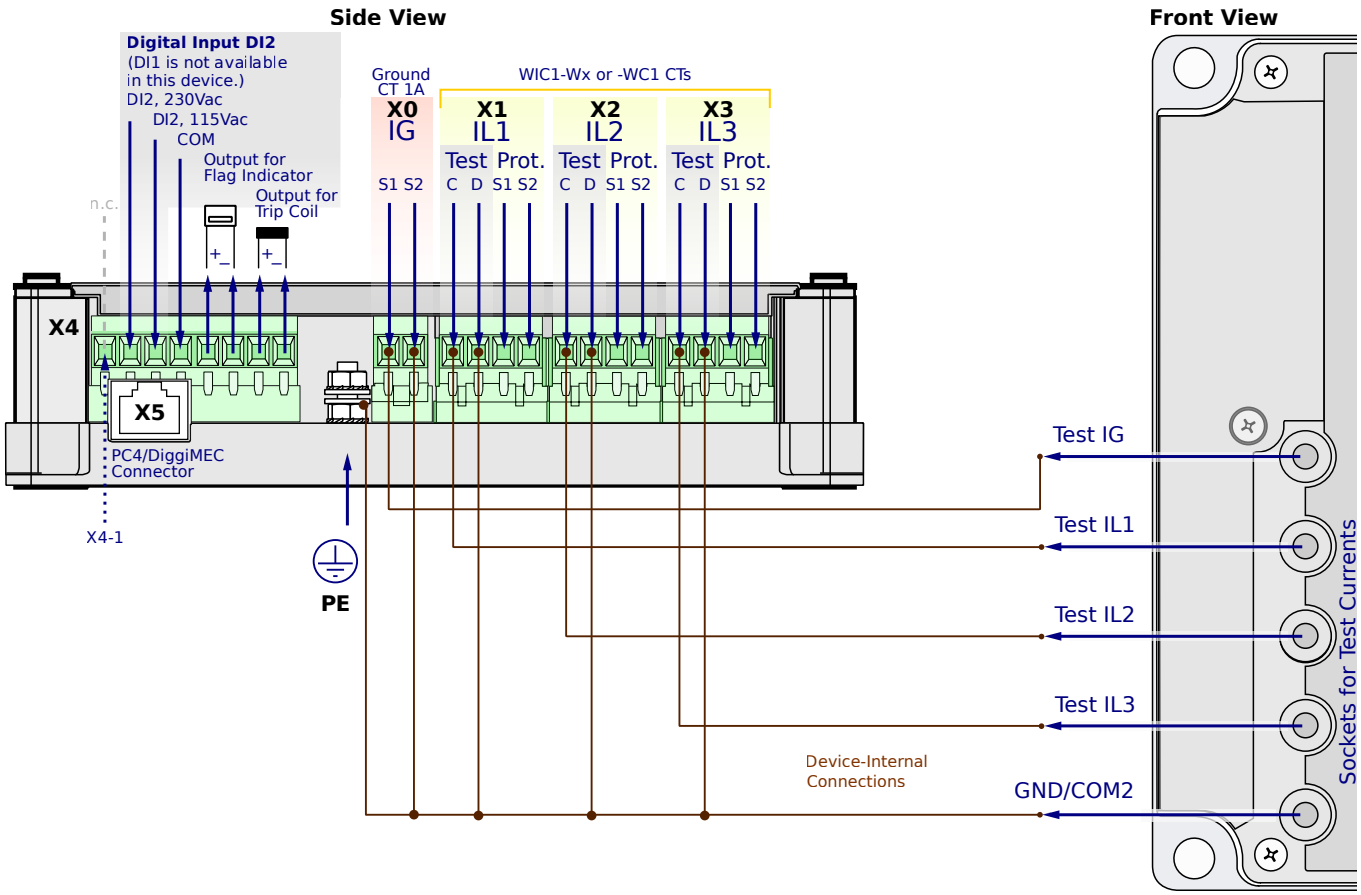


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1SA0

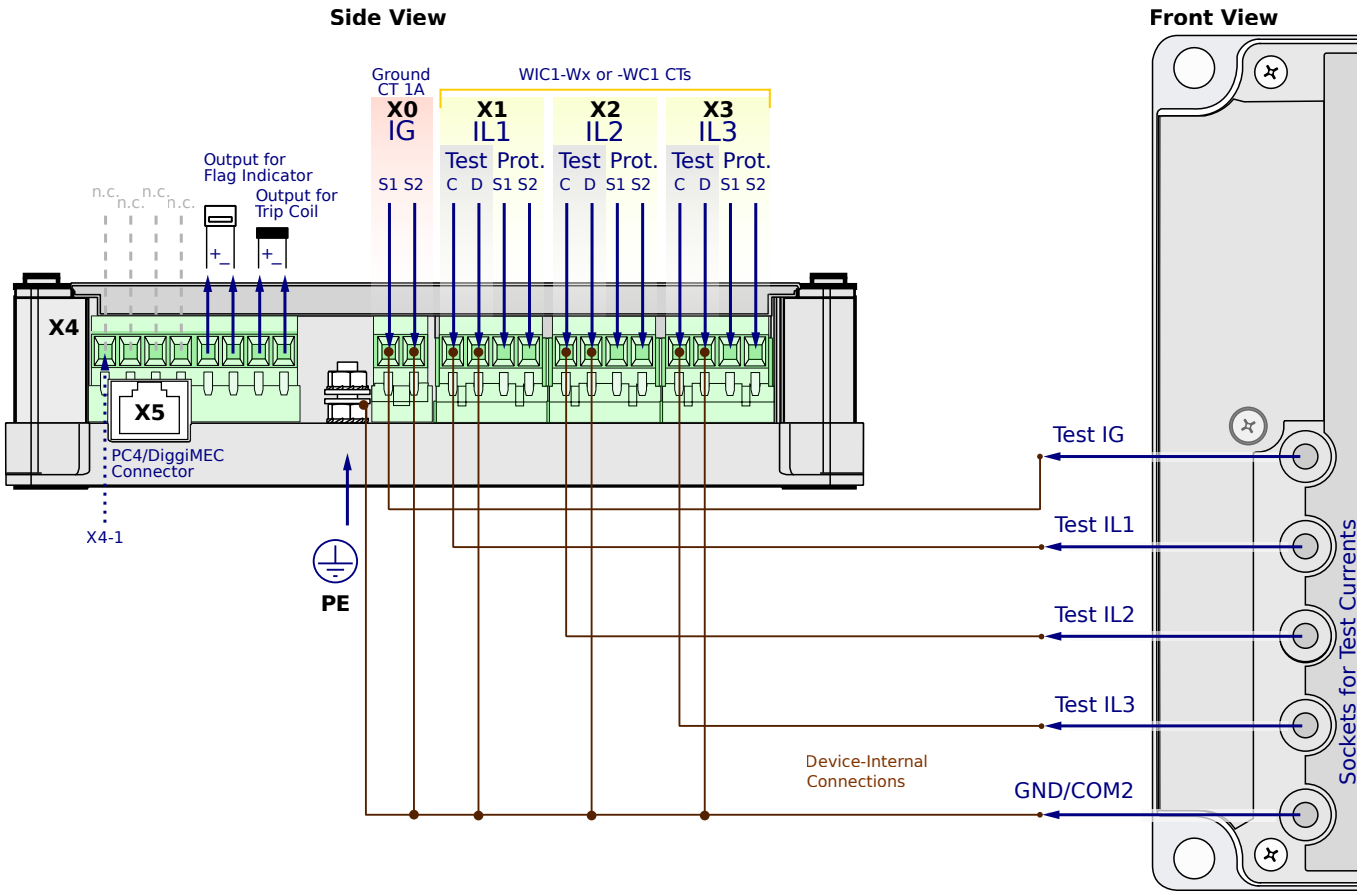


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1SAH

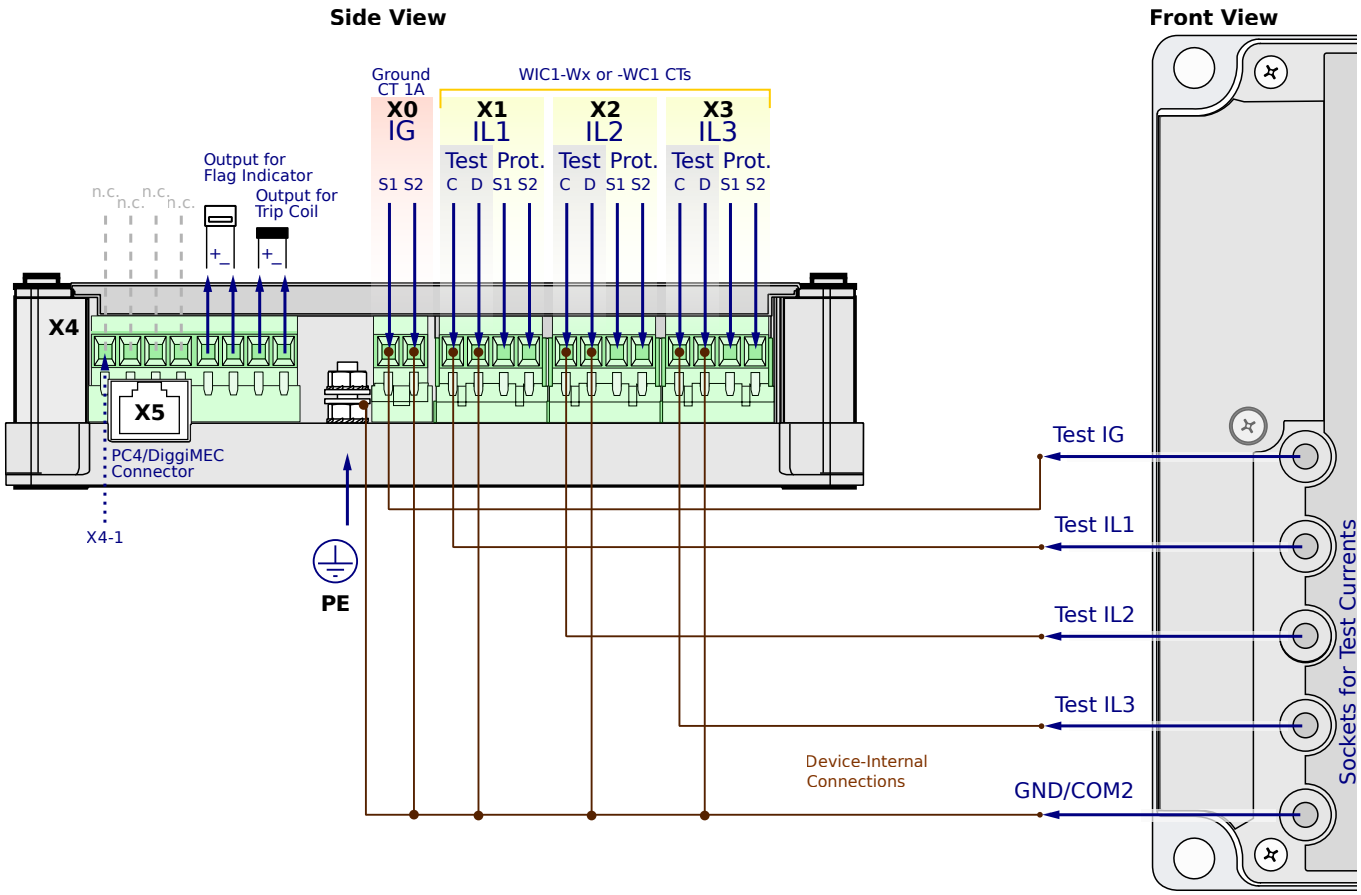


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1AA0

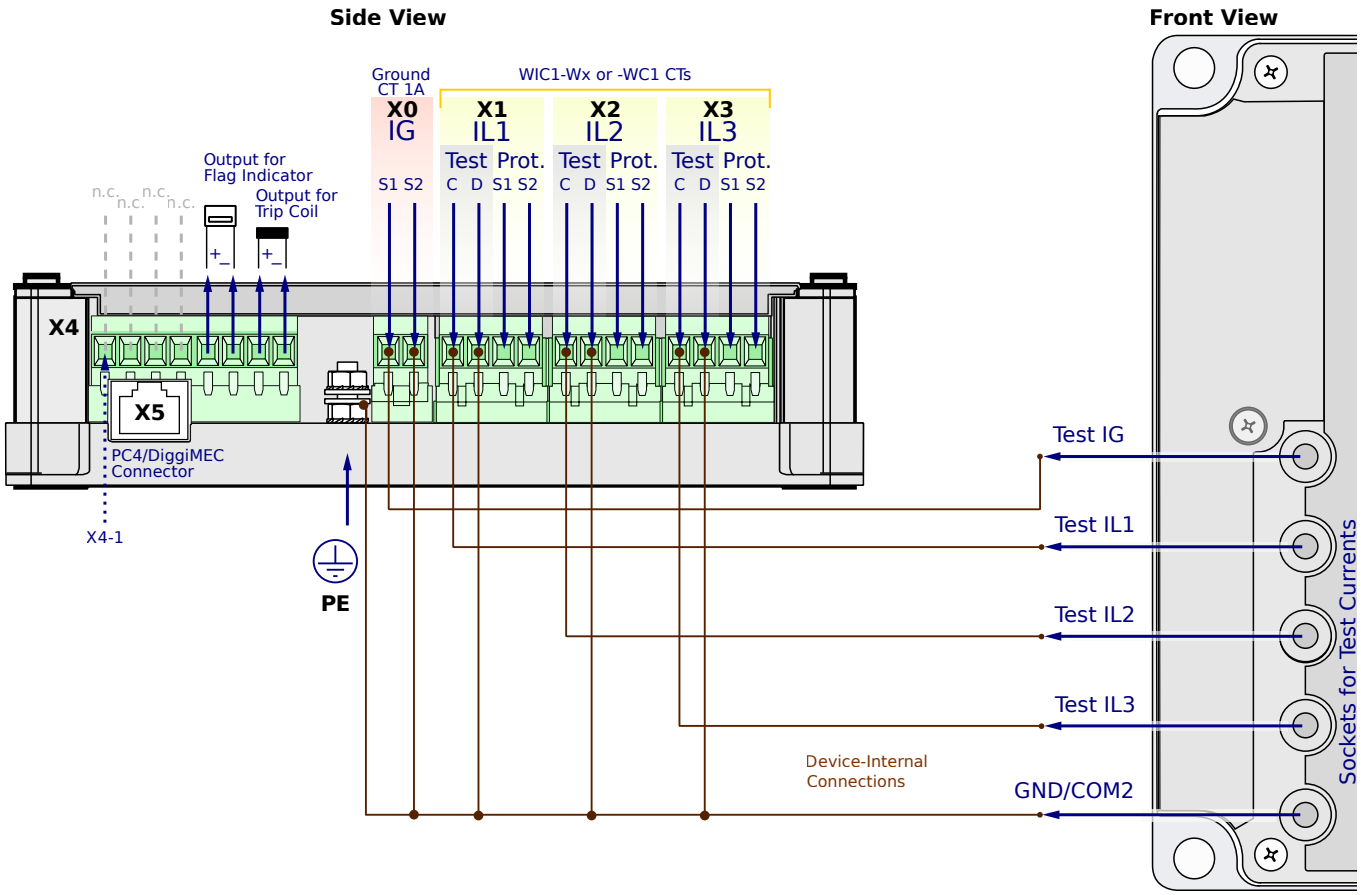


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1AAH

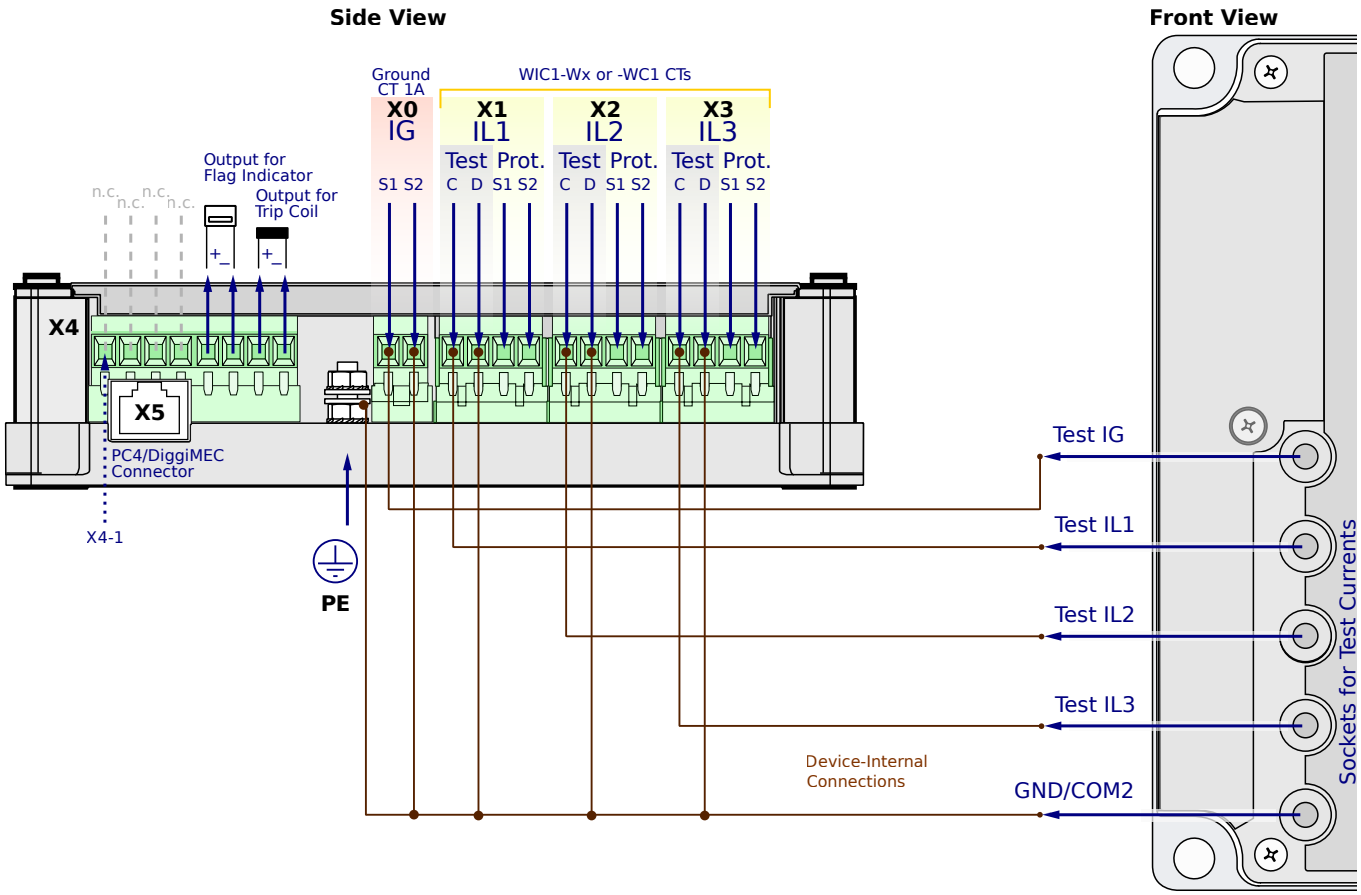


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1PA0

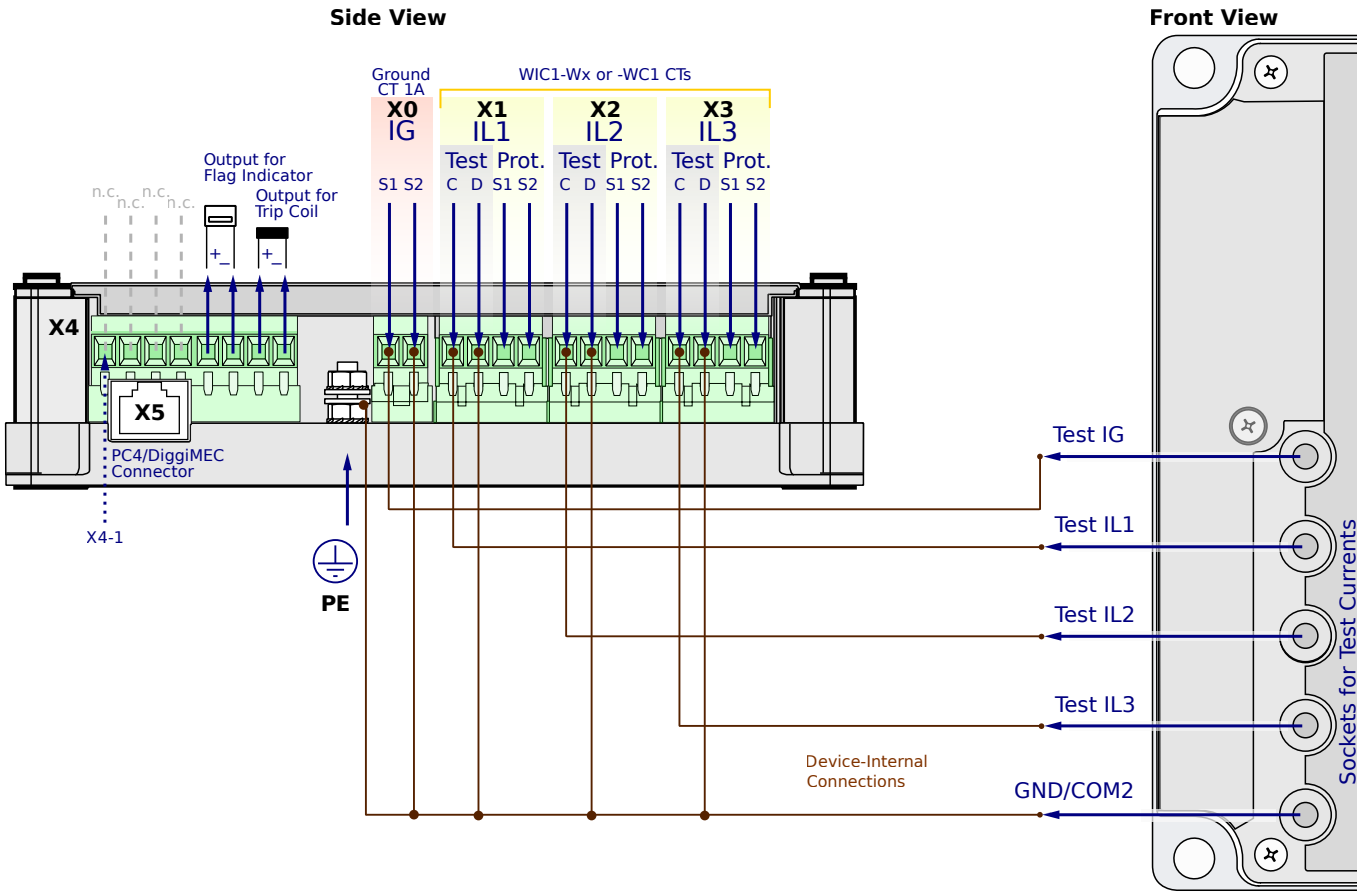


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN1PAH

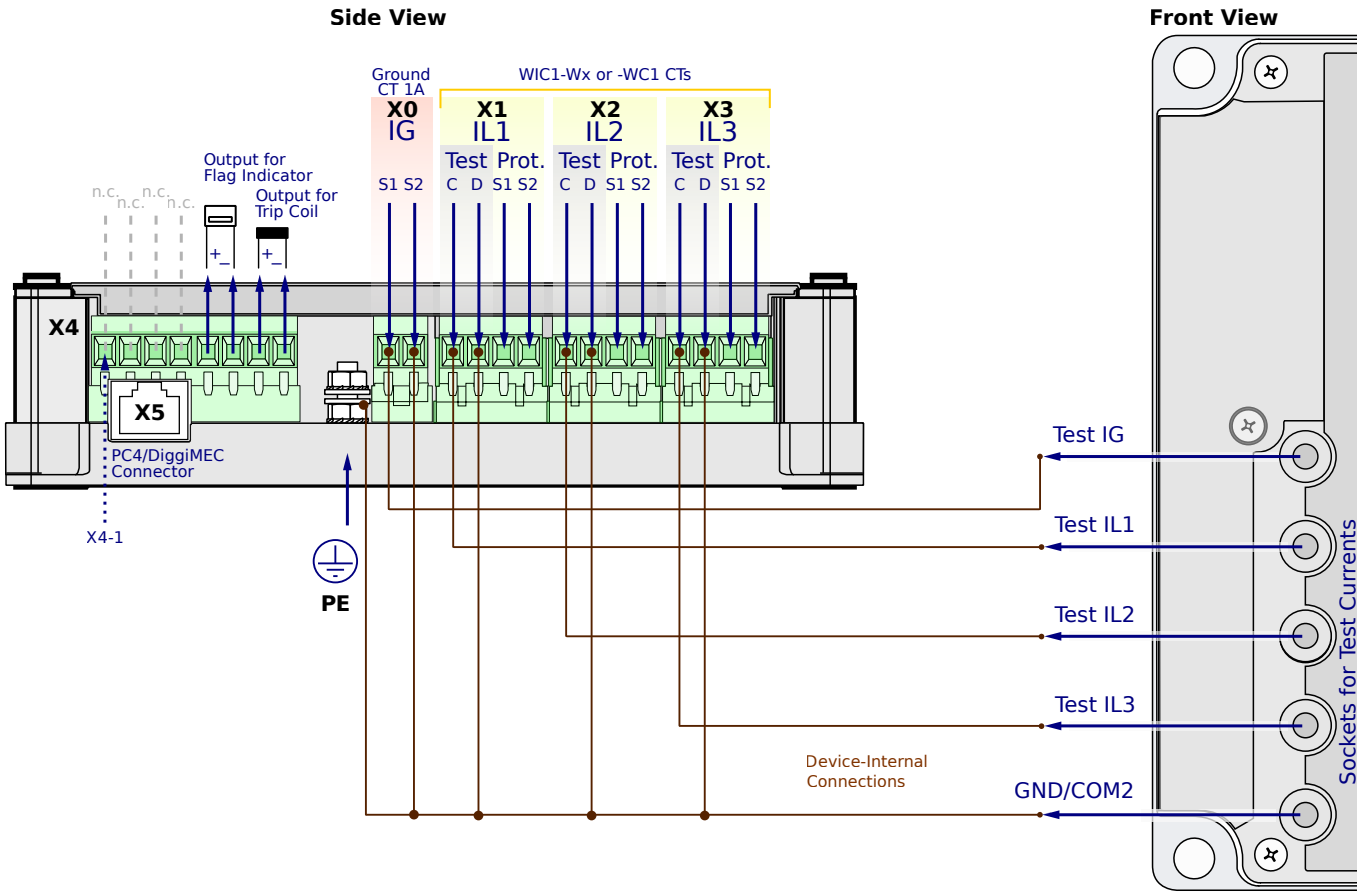


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2SA0

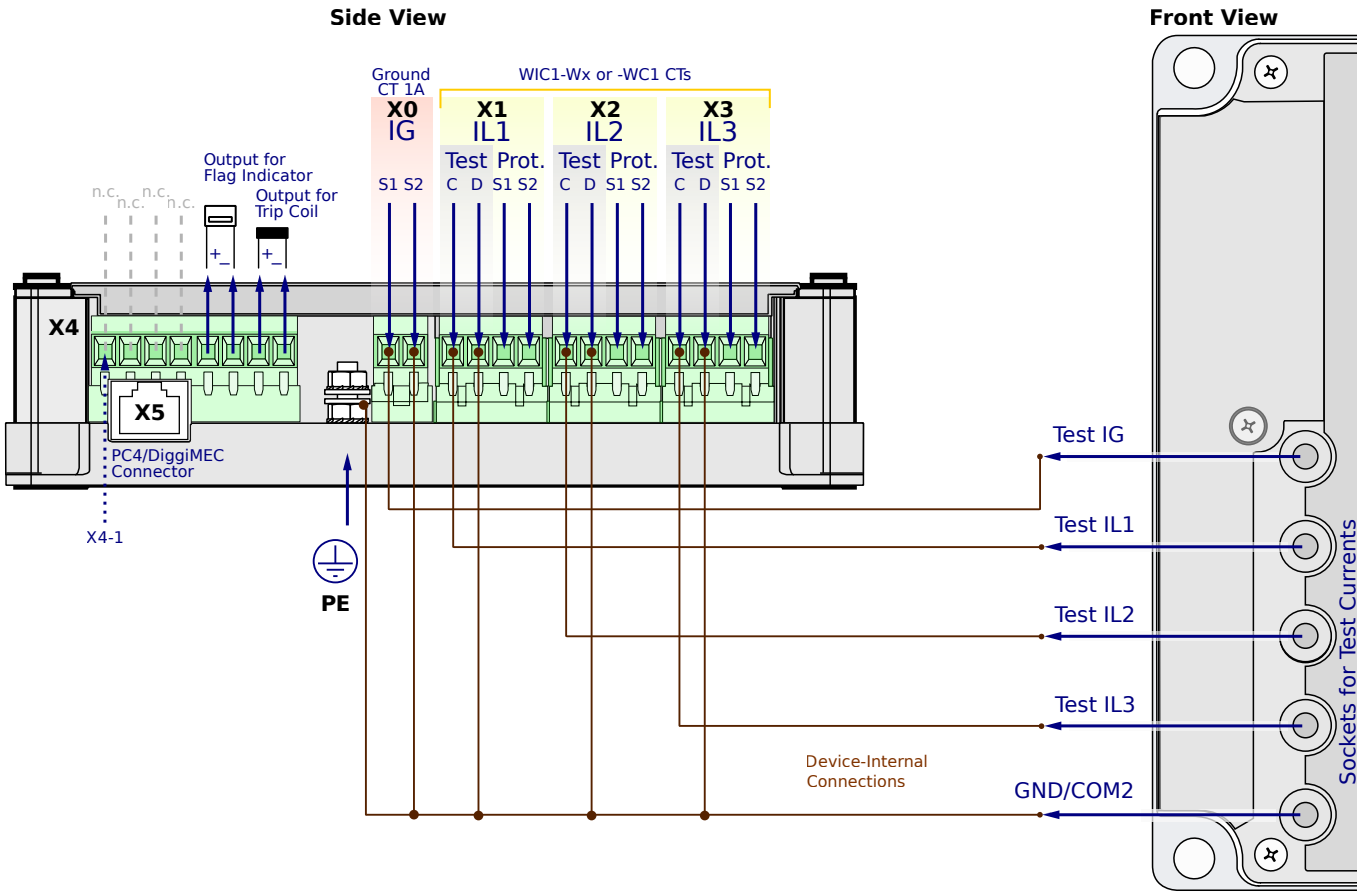


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2SAH

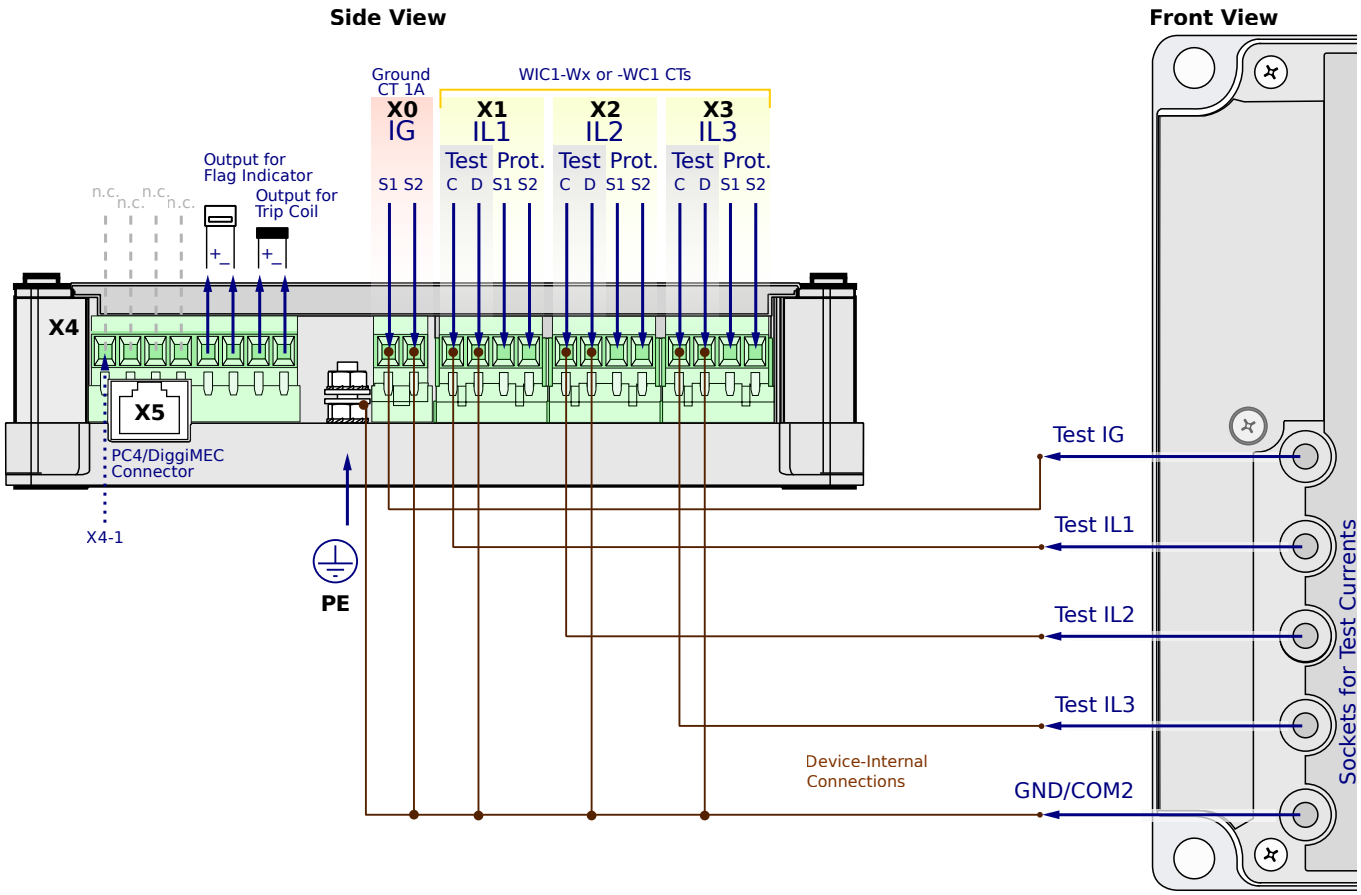


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2AA0

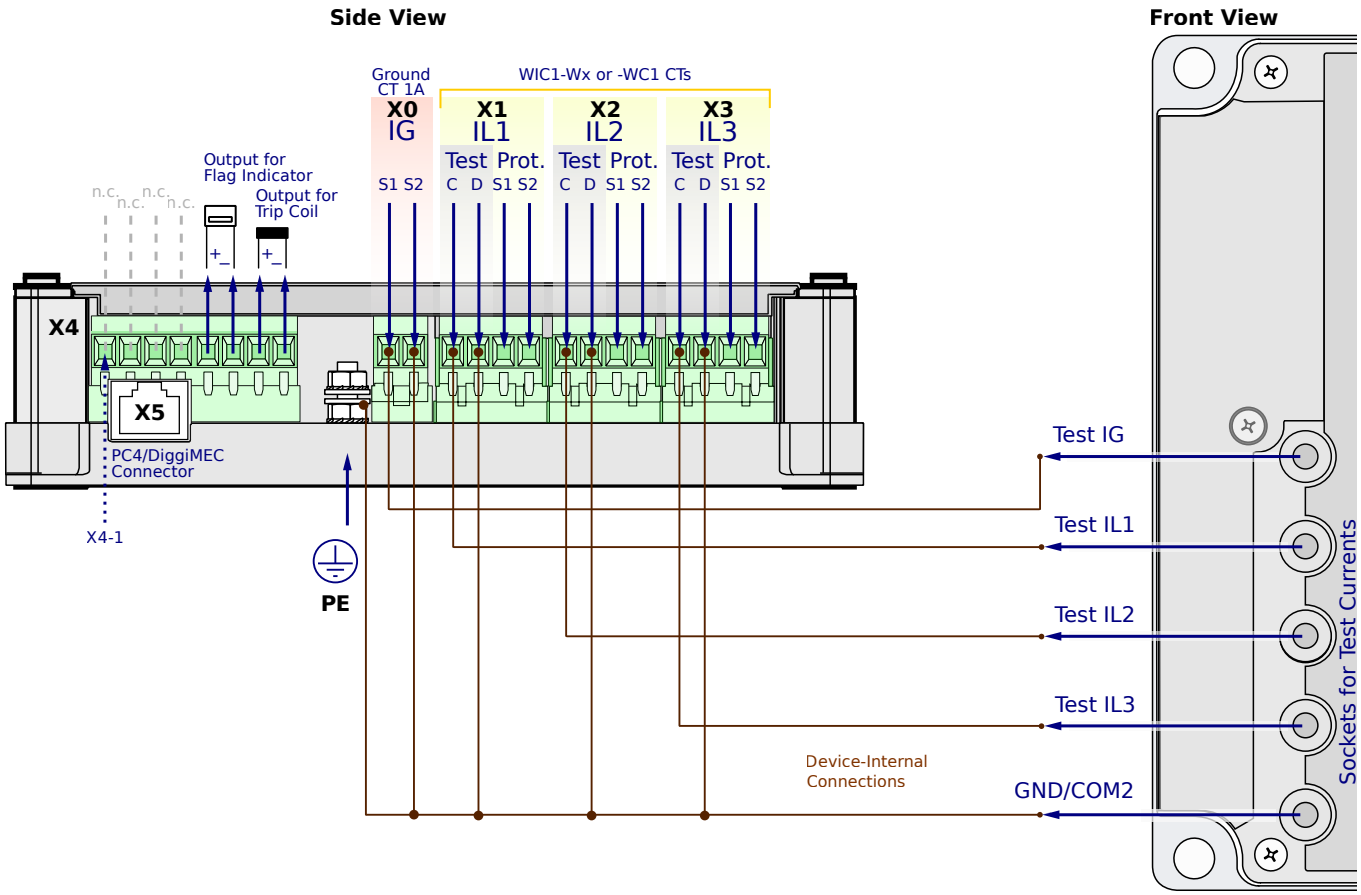


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2AAH

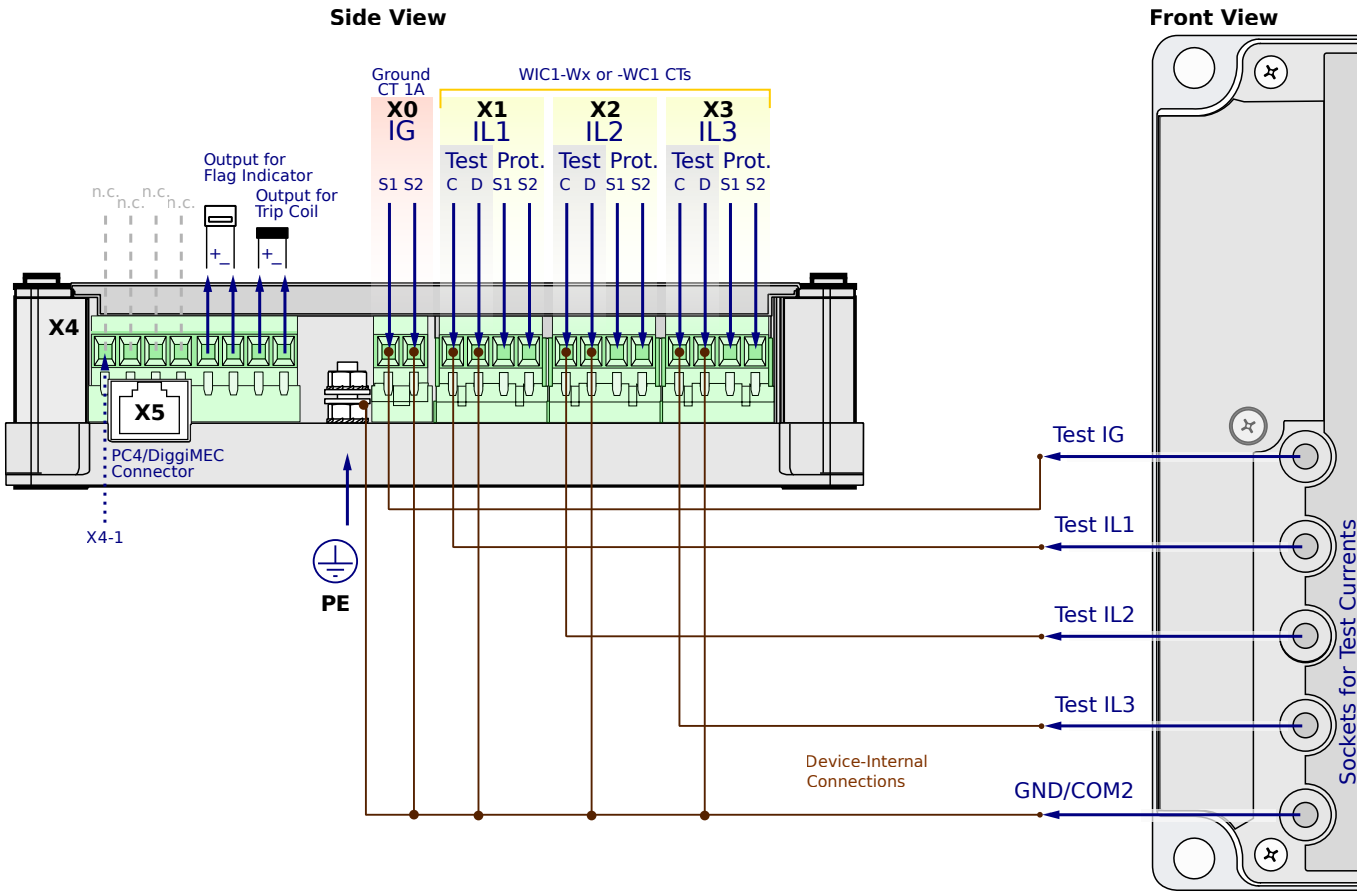


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2PA0

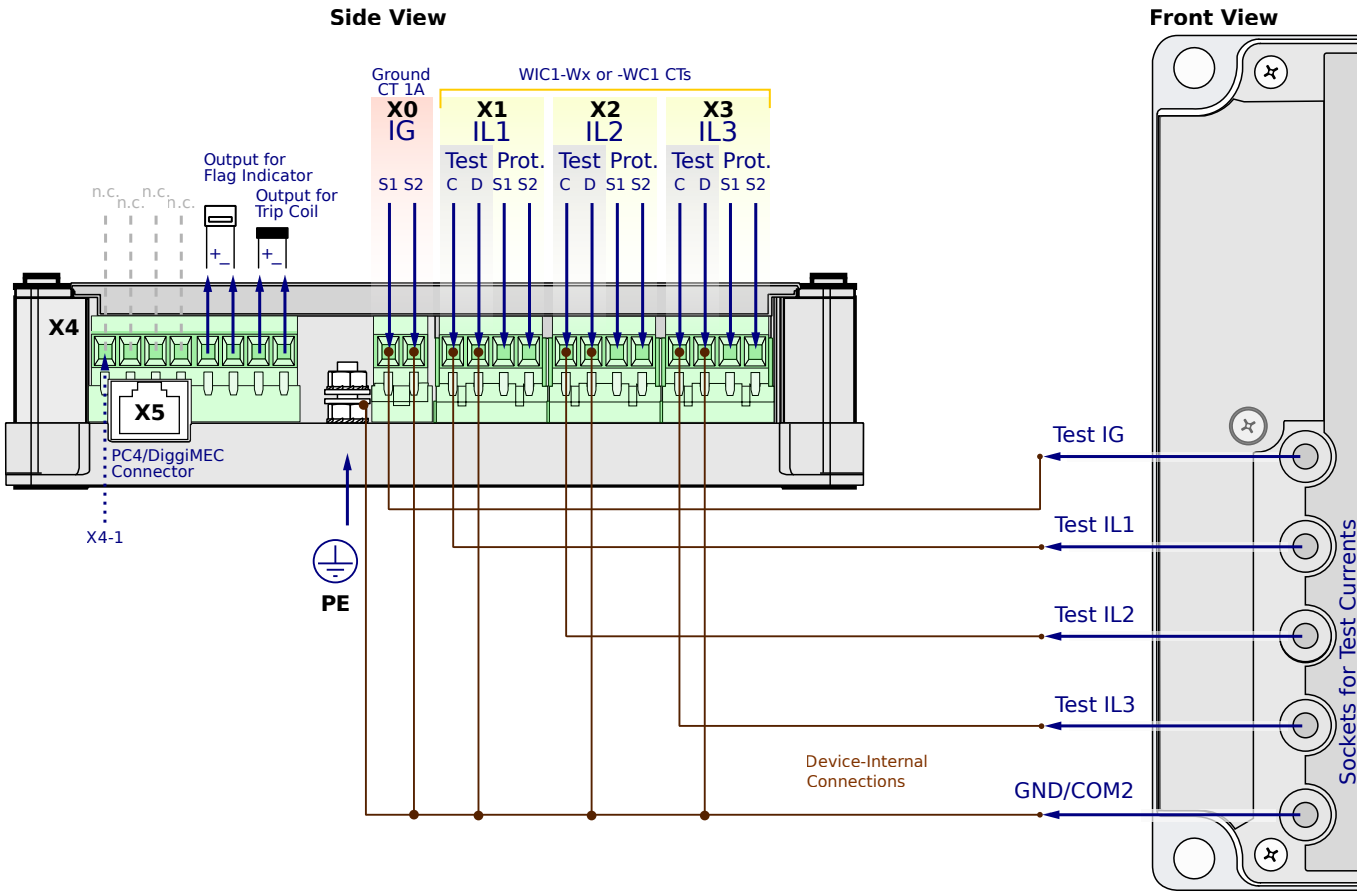


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CN2PAH

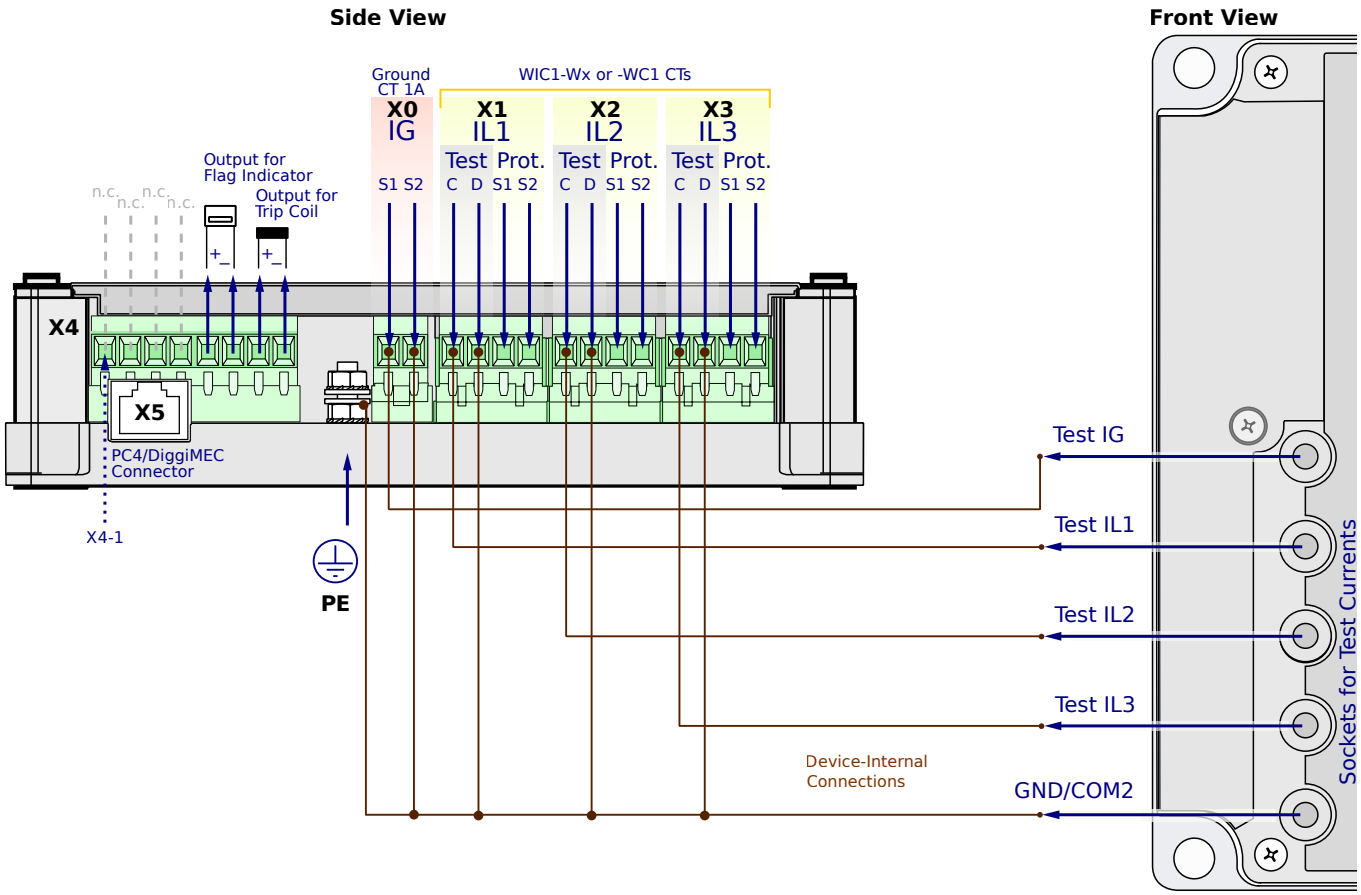


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1SA0

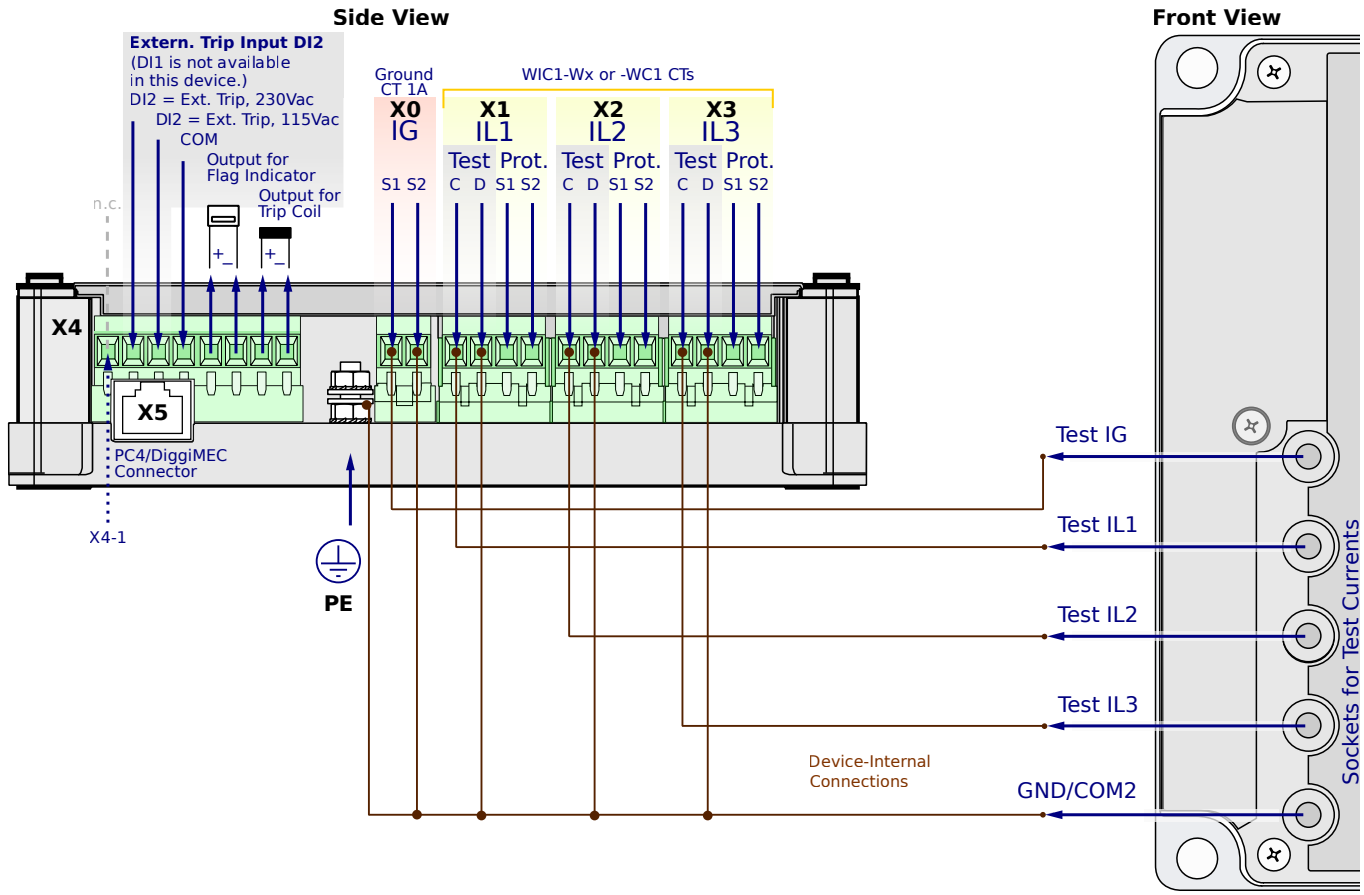


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1SAH

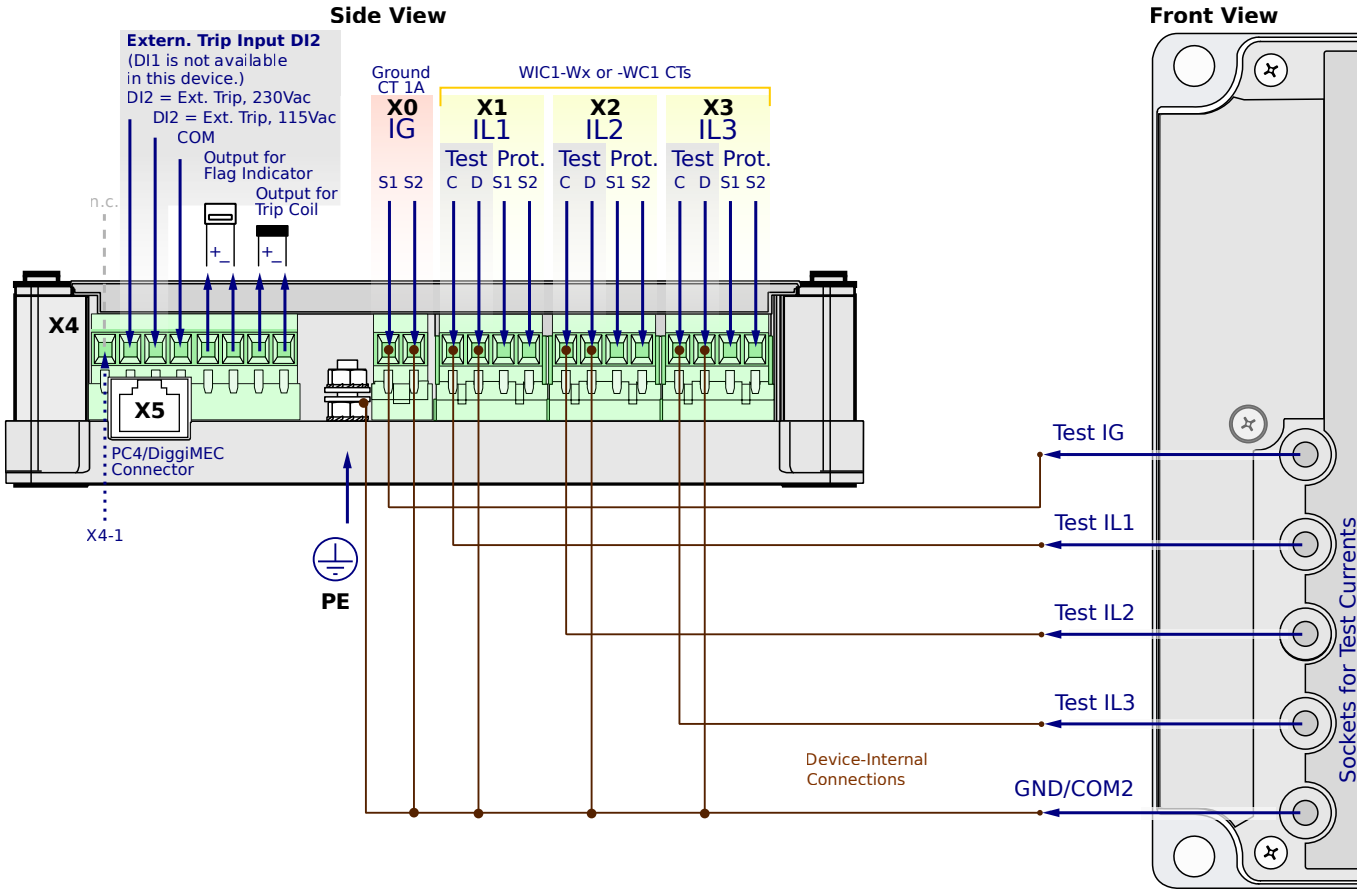


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1AA0

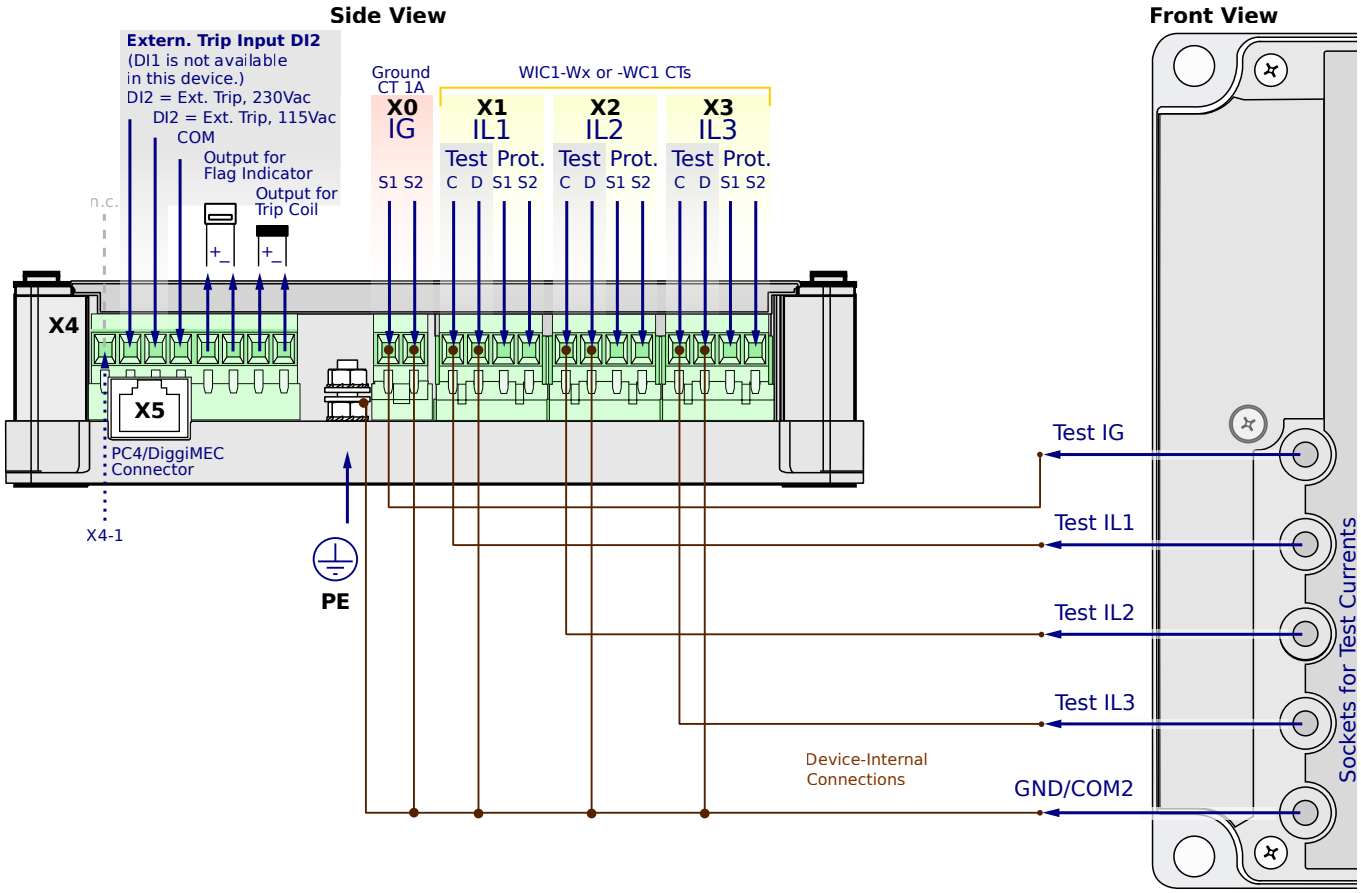


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1AAH

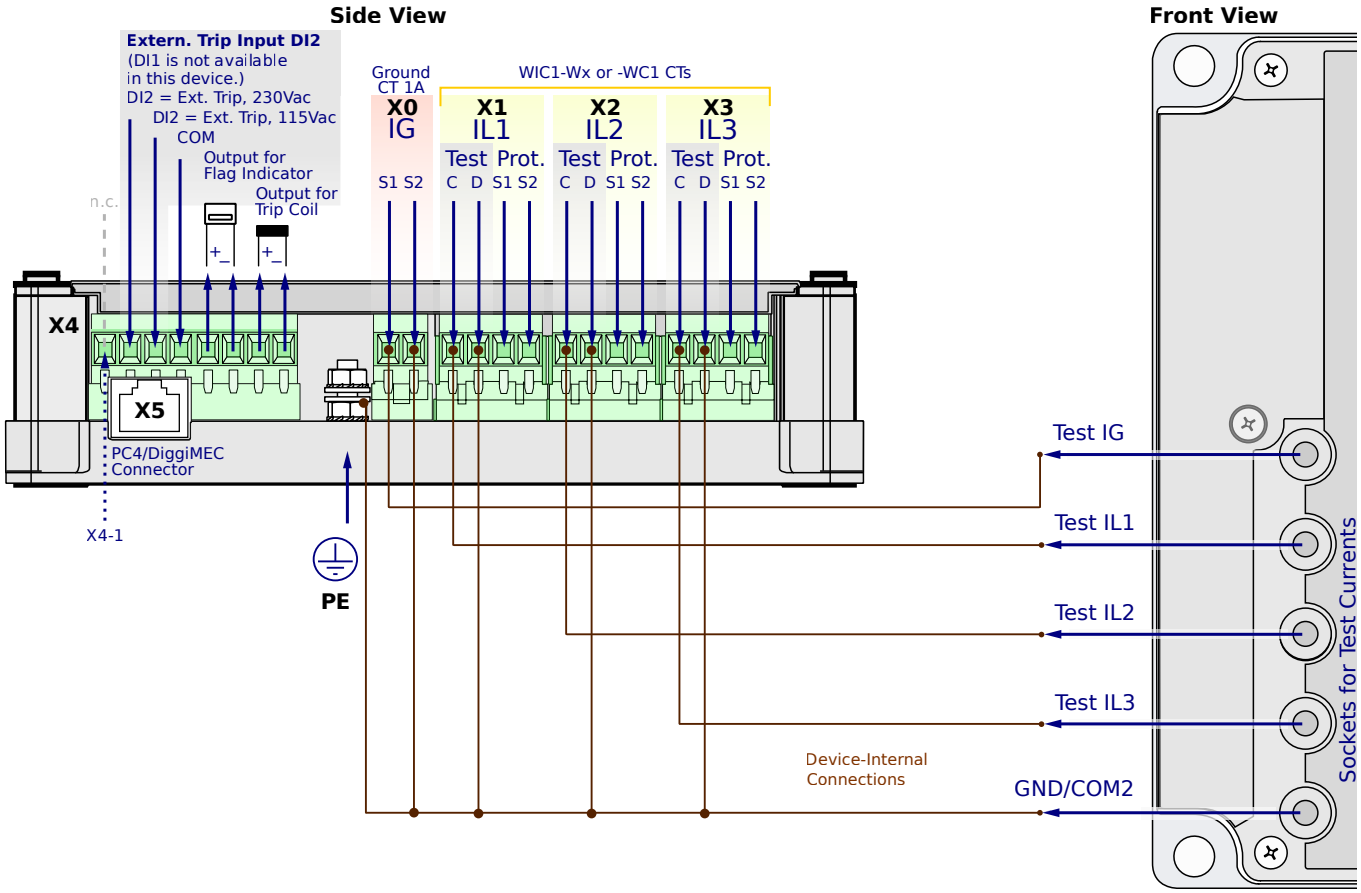


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1PA0

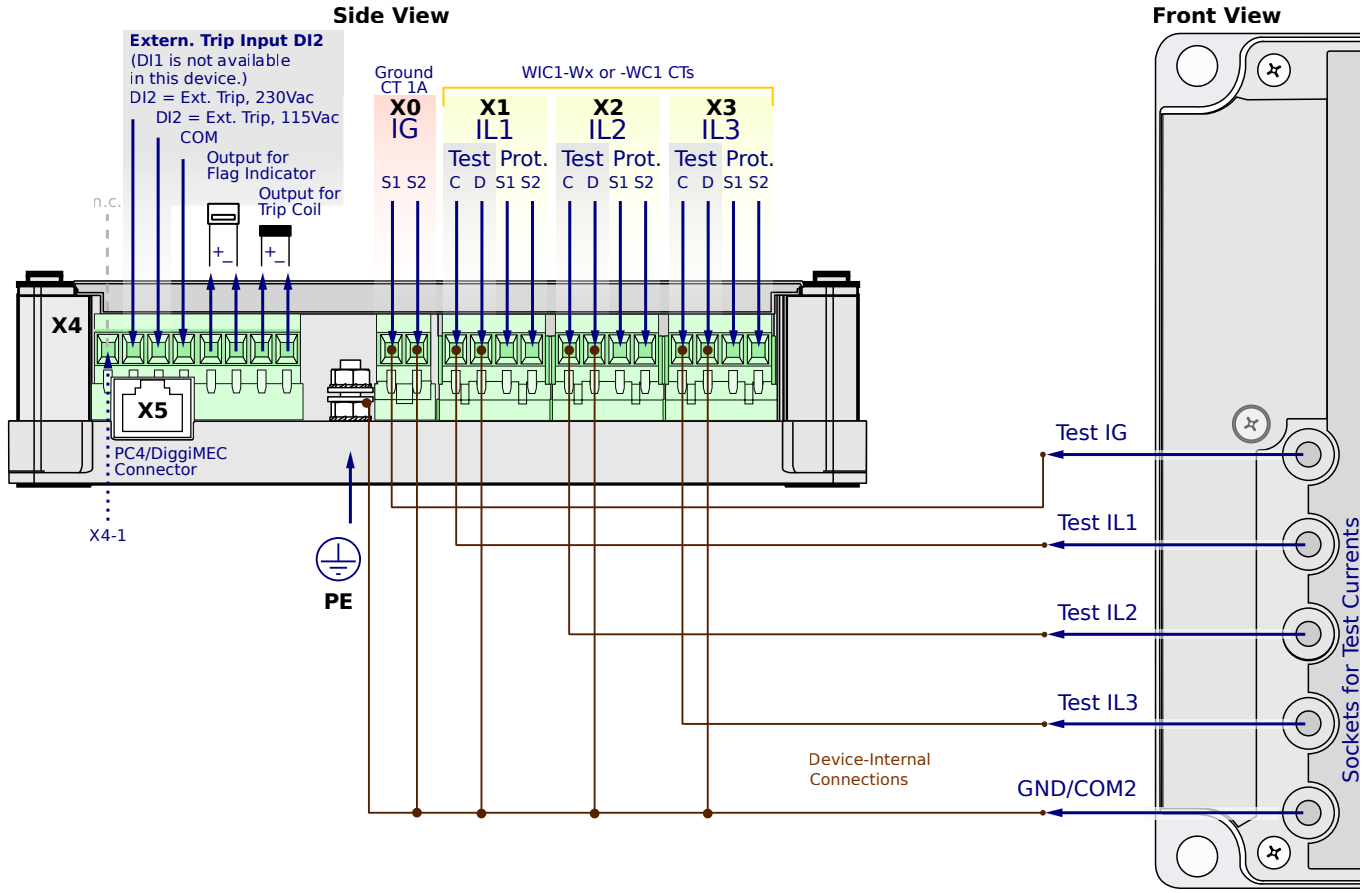


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF1PAH

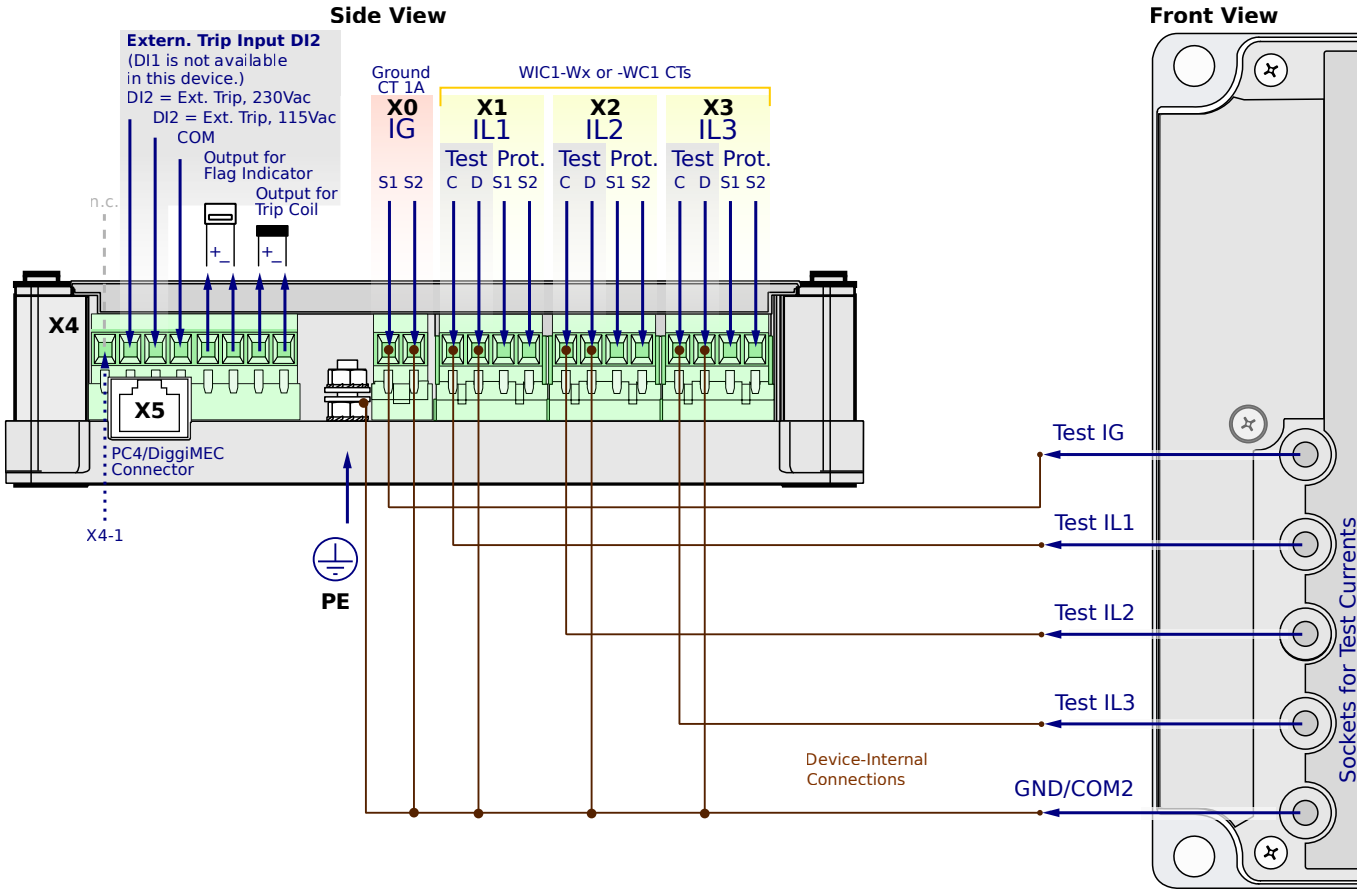


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2SA0

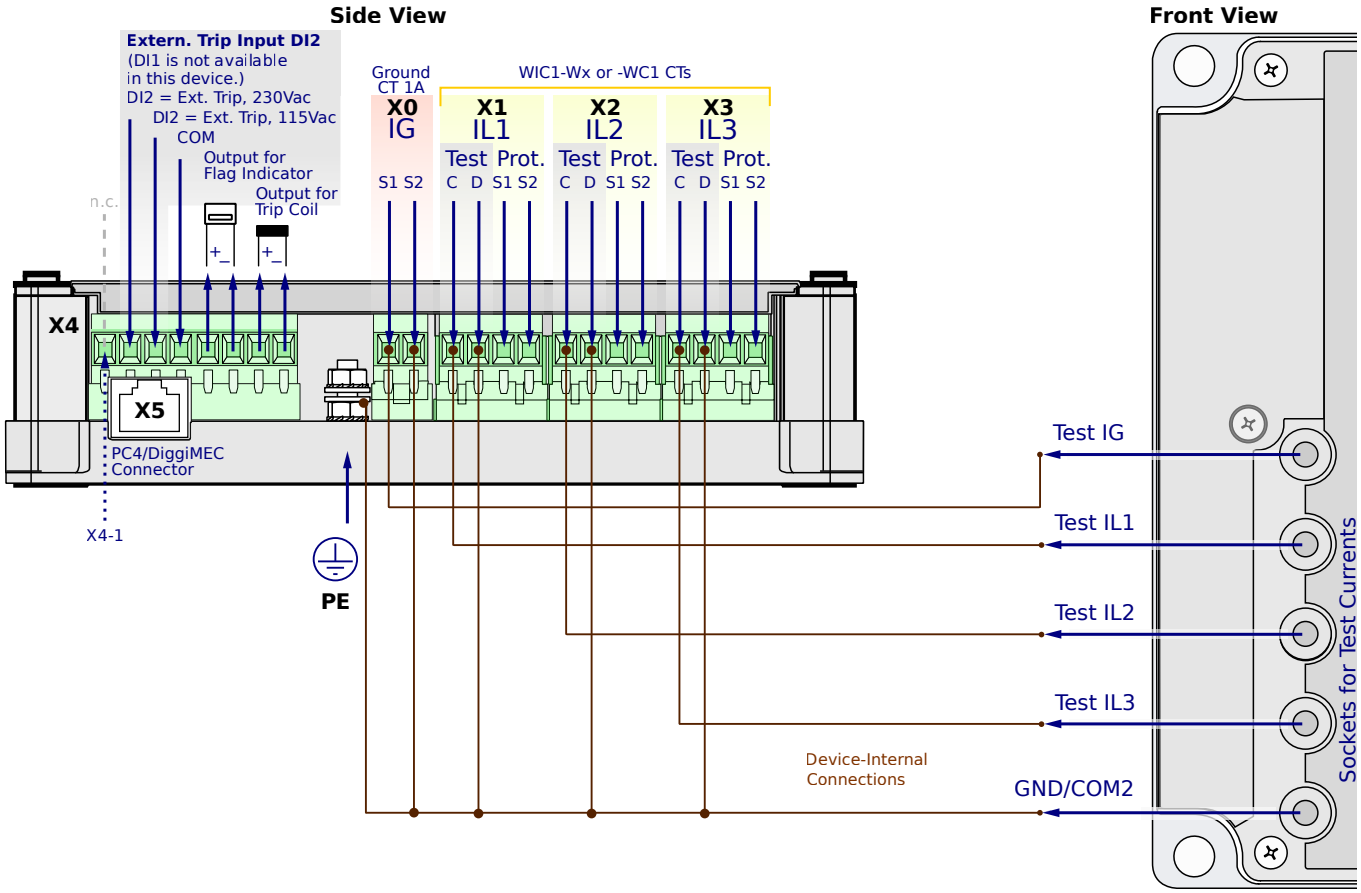


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2SAH

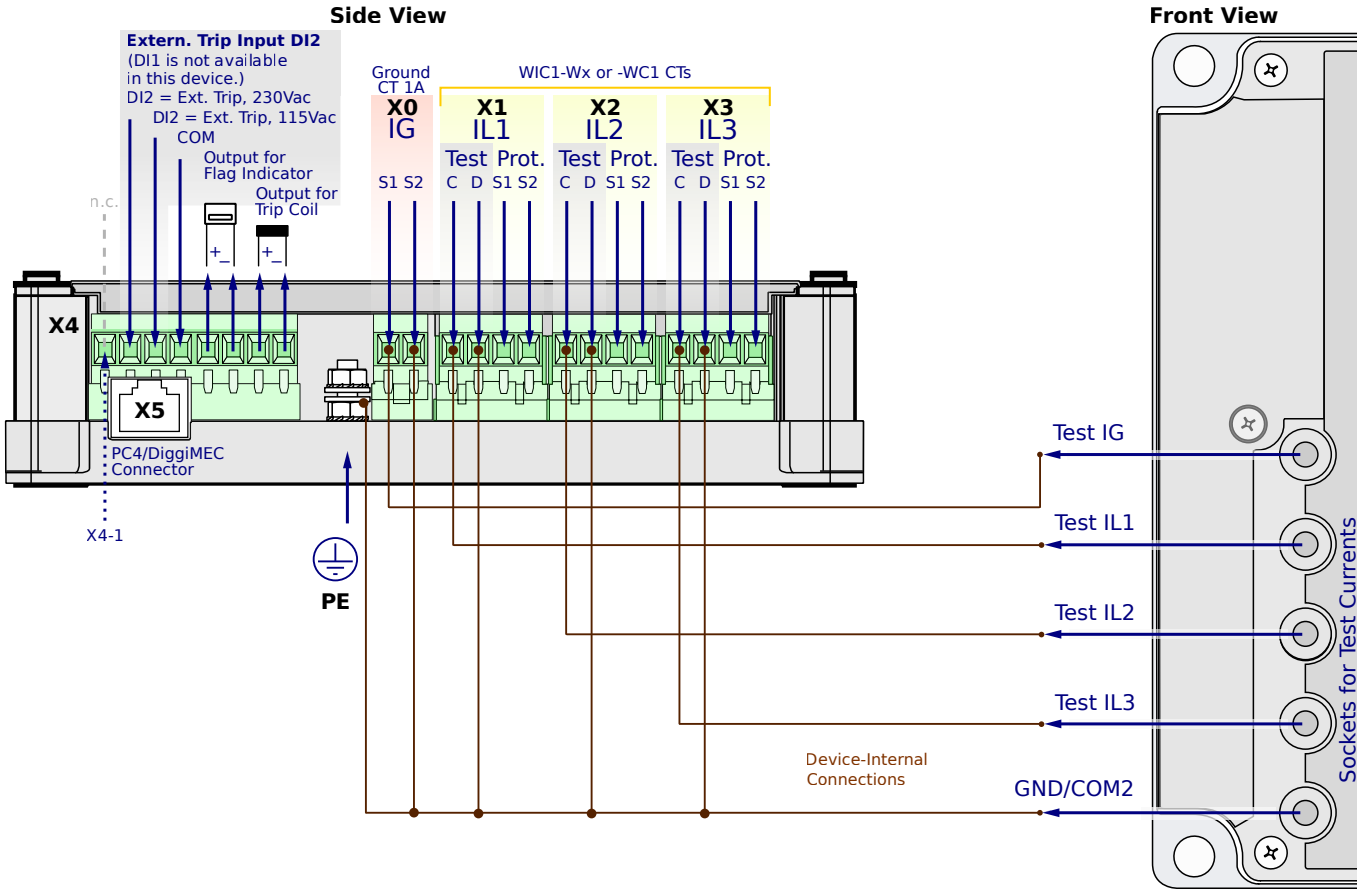


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2AA0

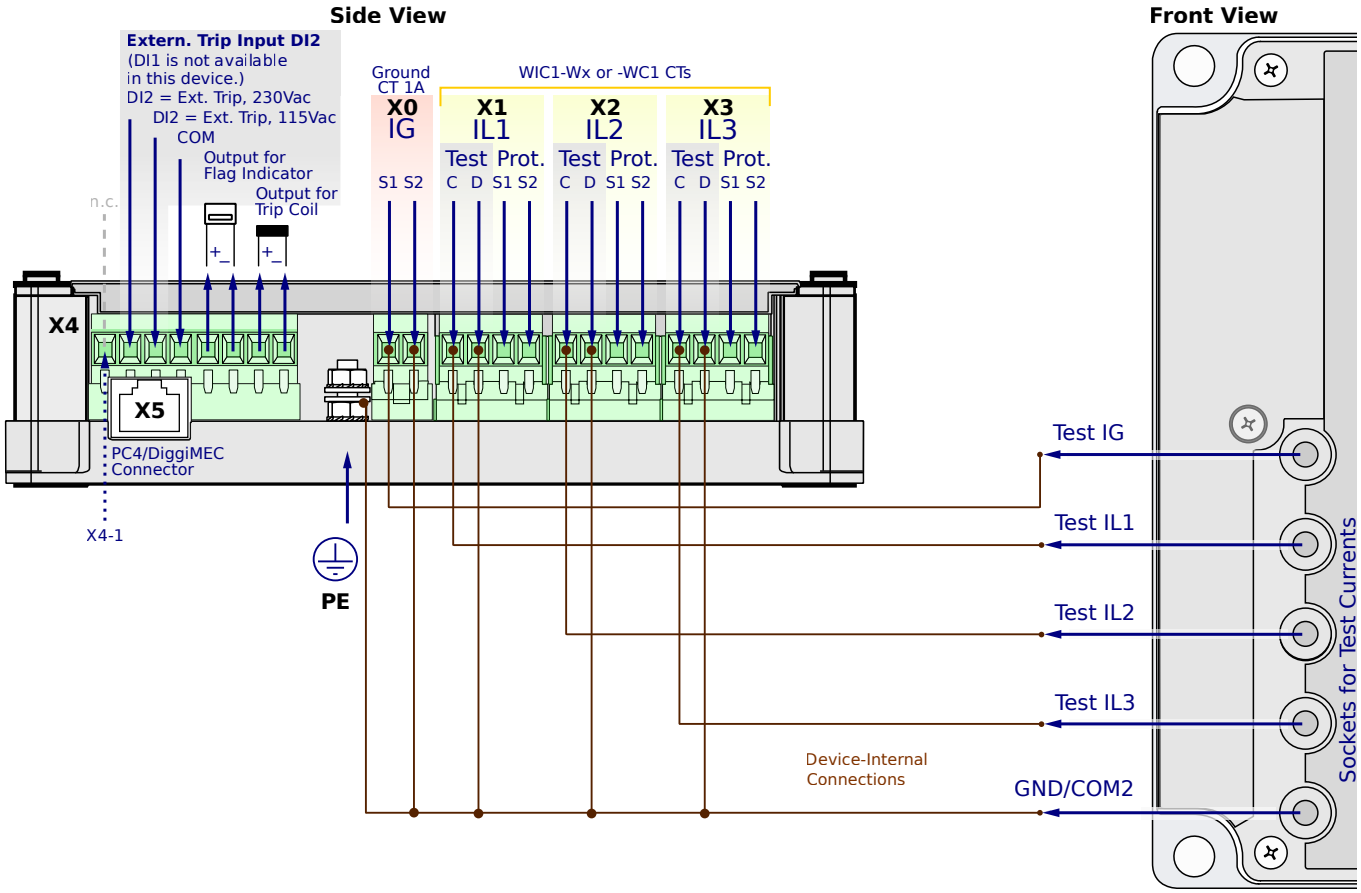


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2AAH

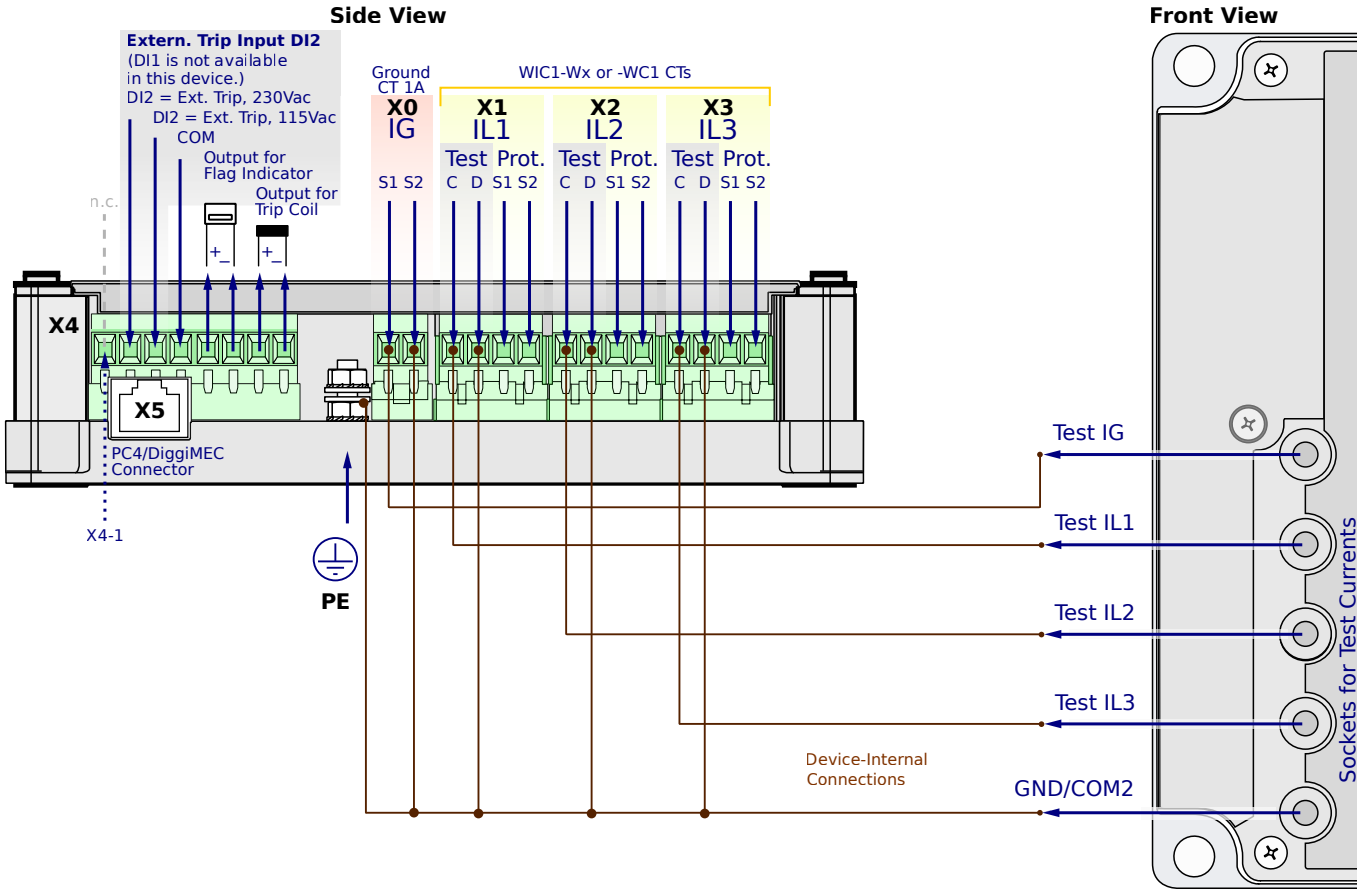


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2PA0

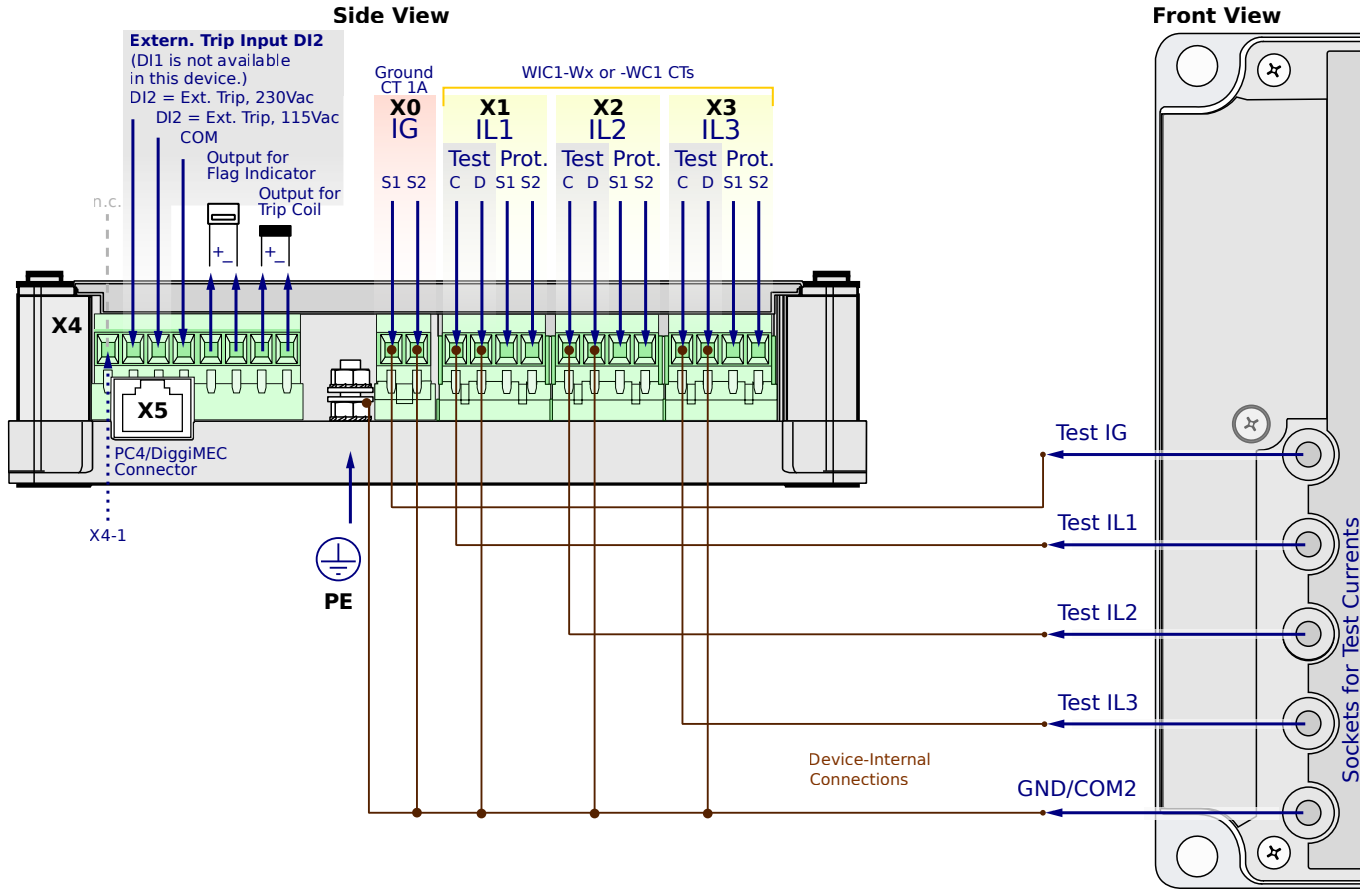


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CF2PAH

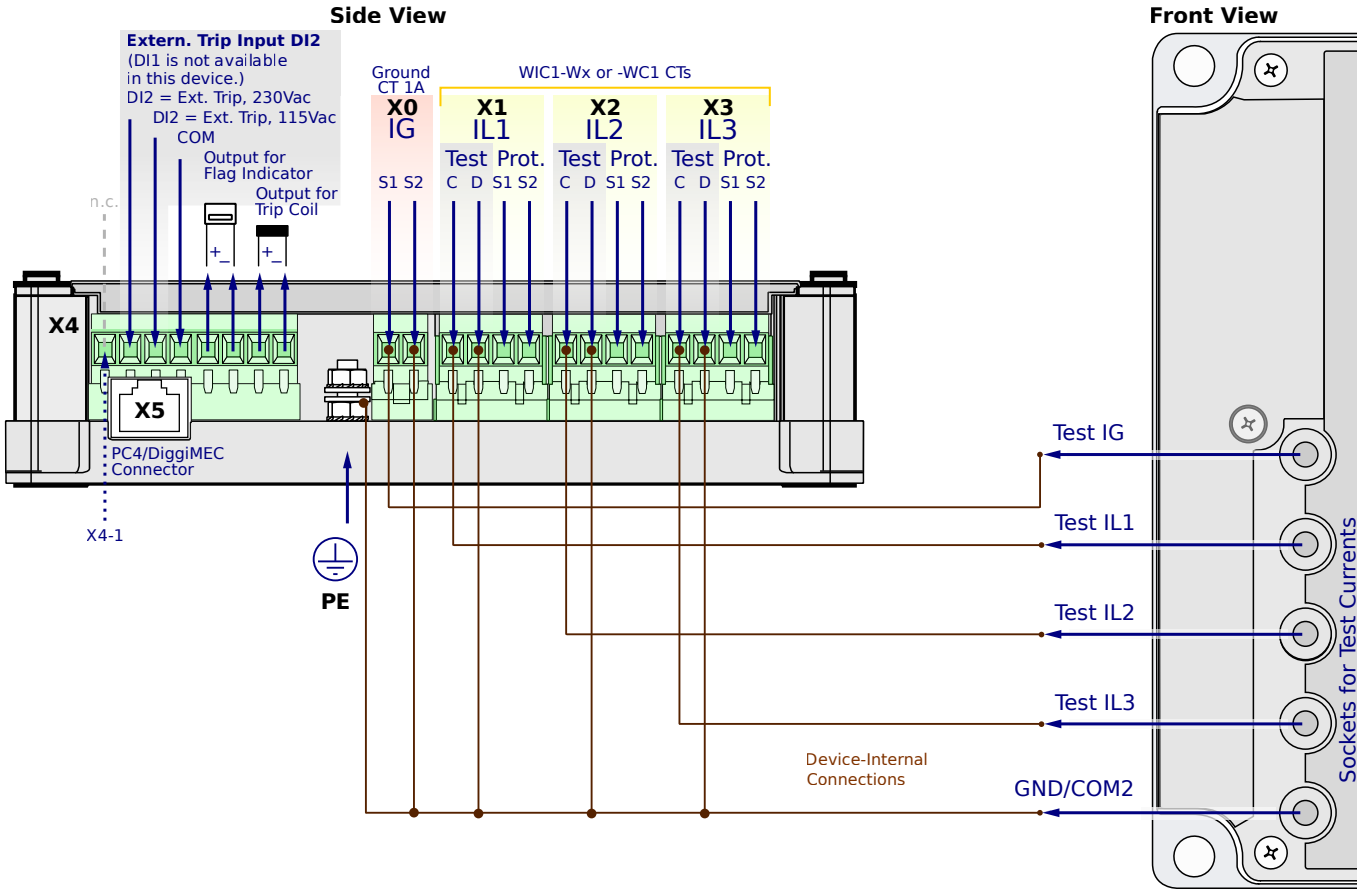


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1SA0

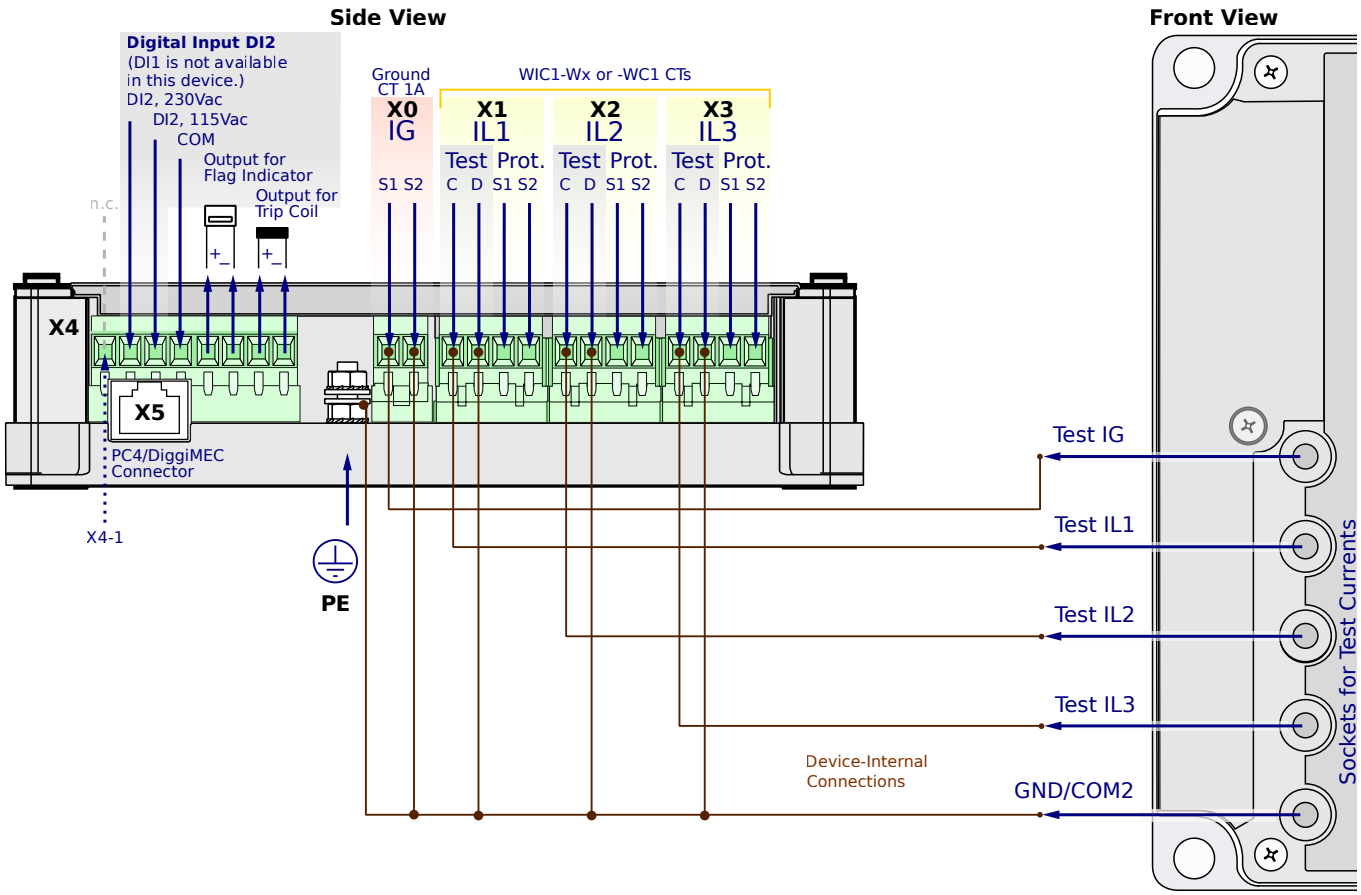


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1SAH

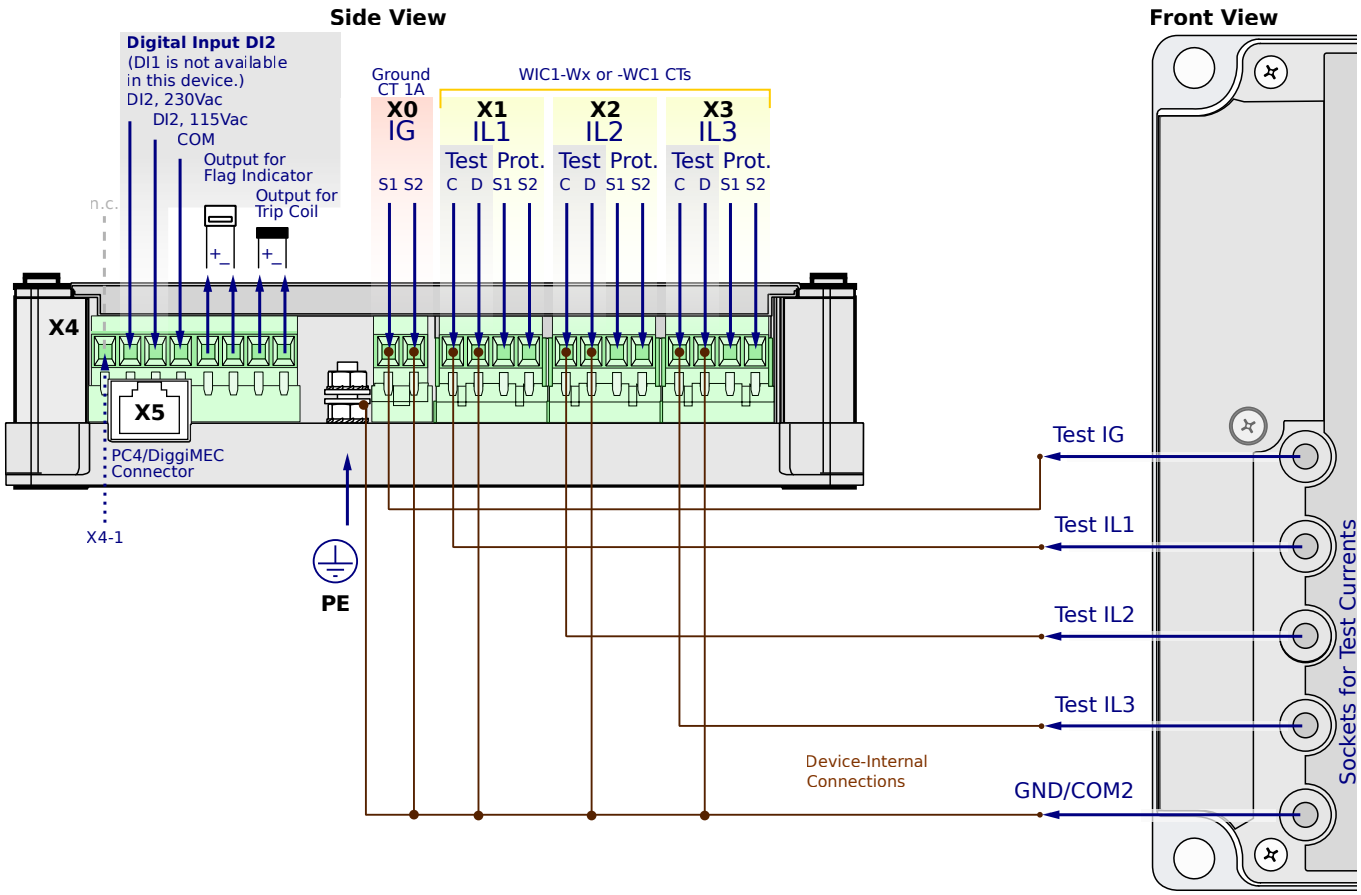


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1AA0

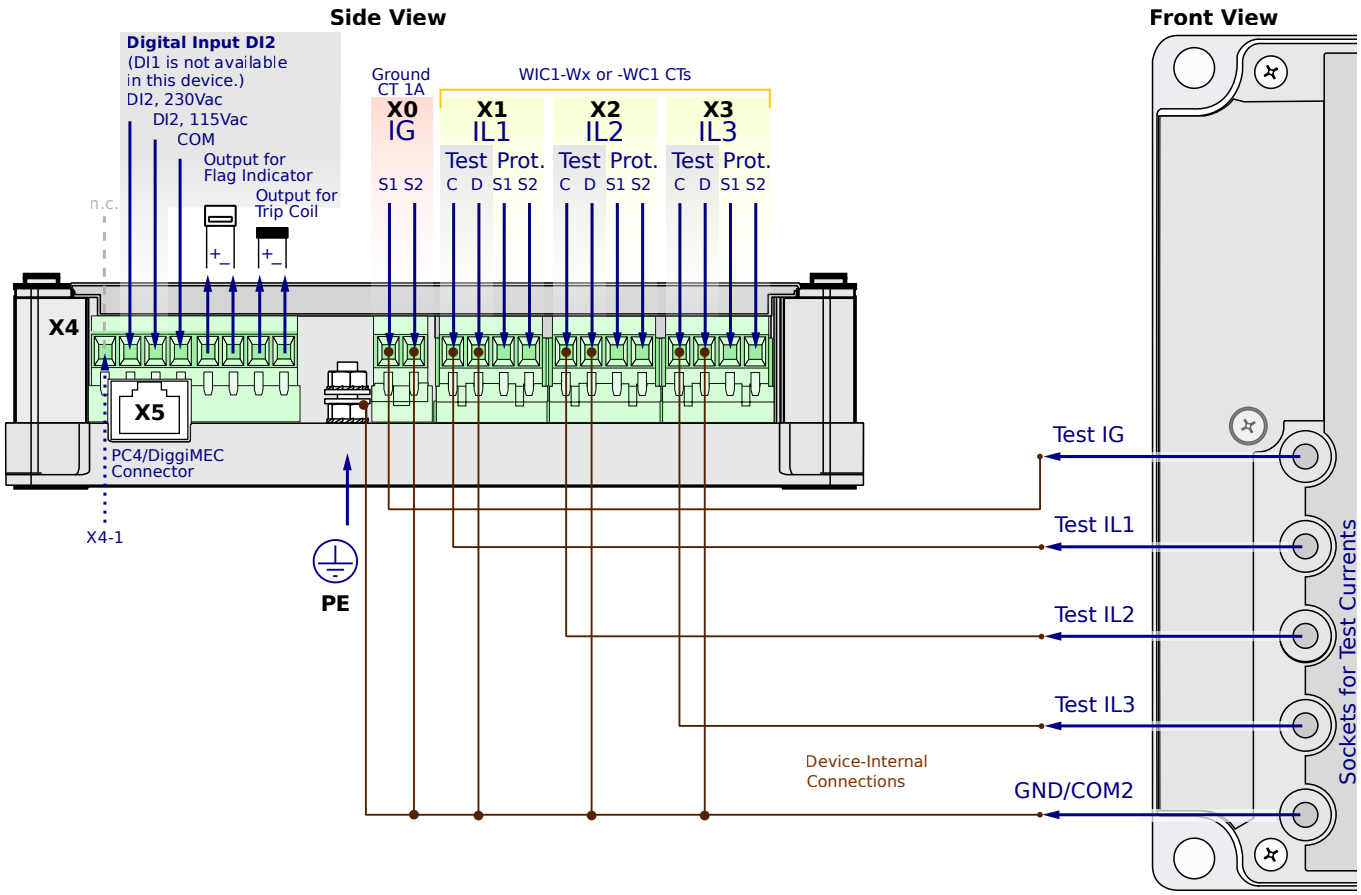


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1AAH

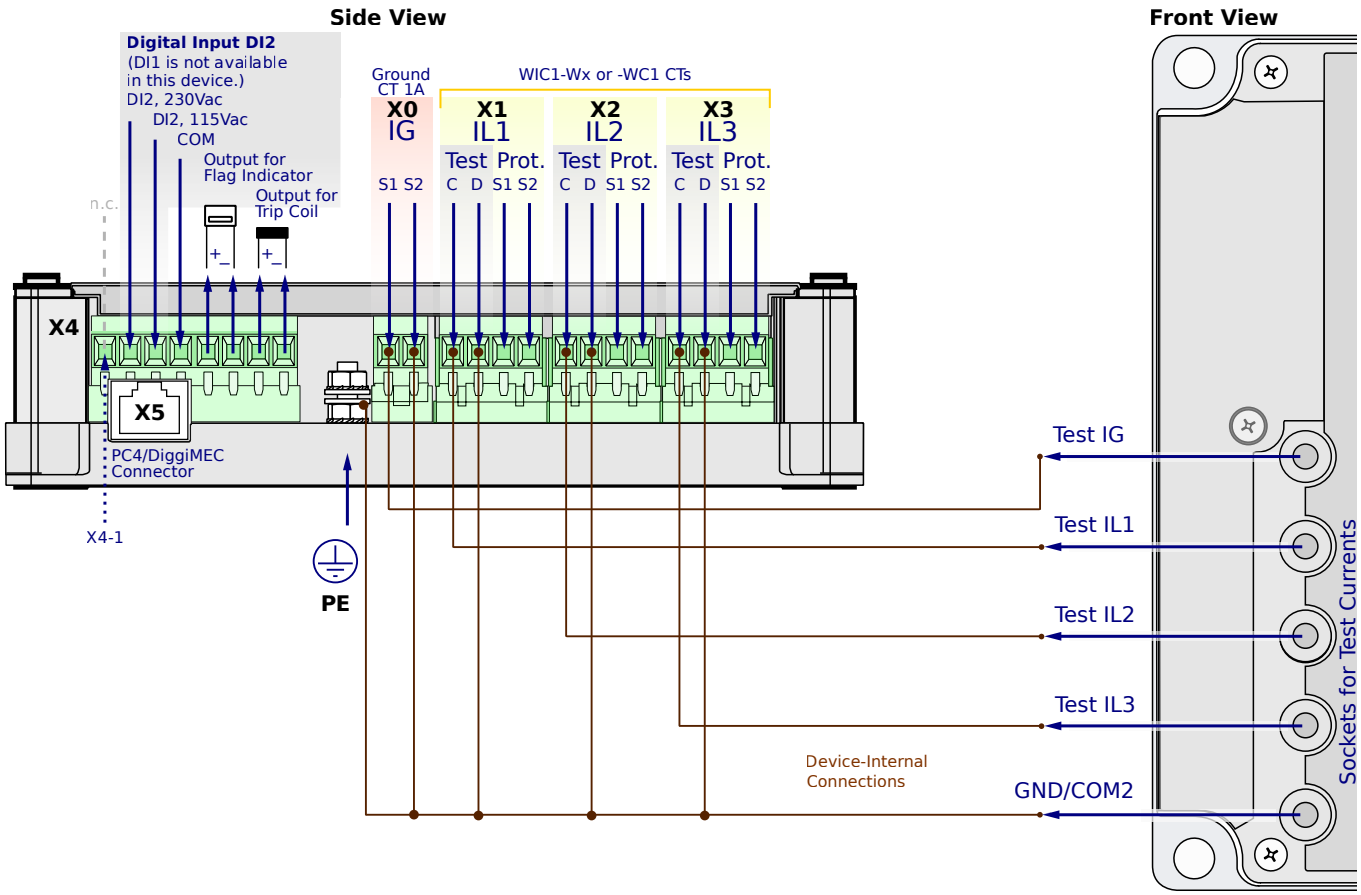


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1PA0

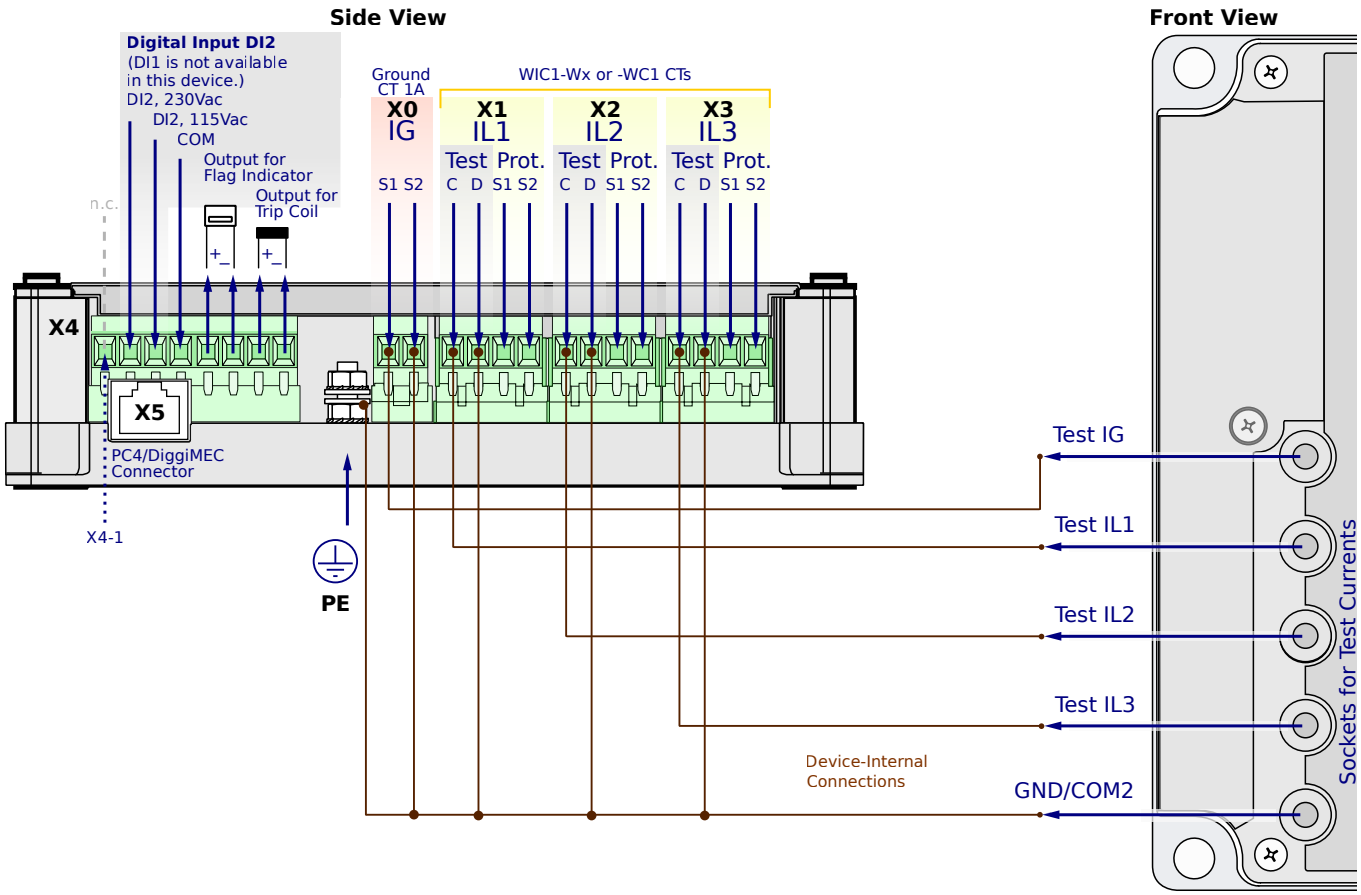


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC1PAH

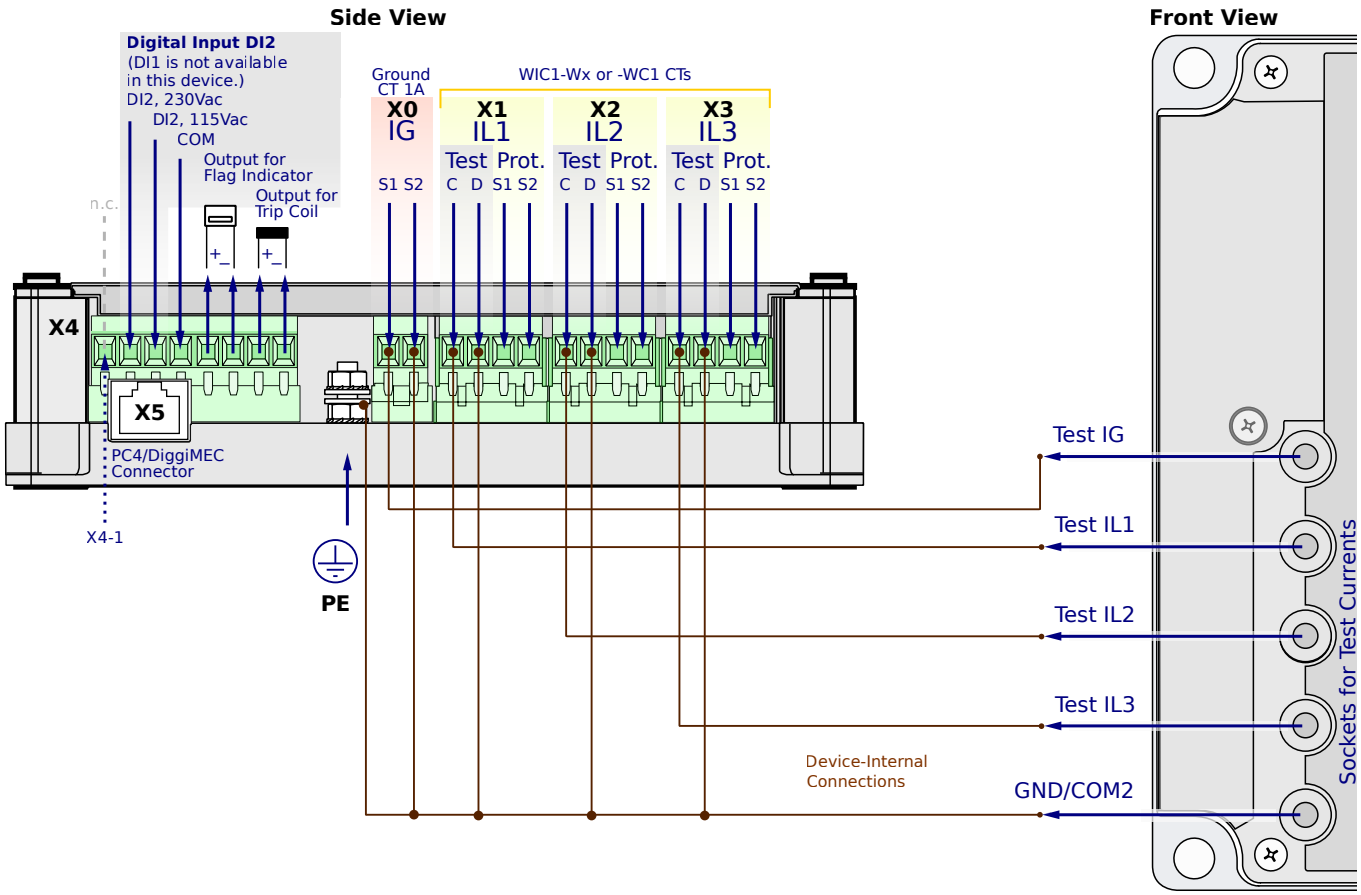


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2SA0

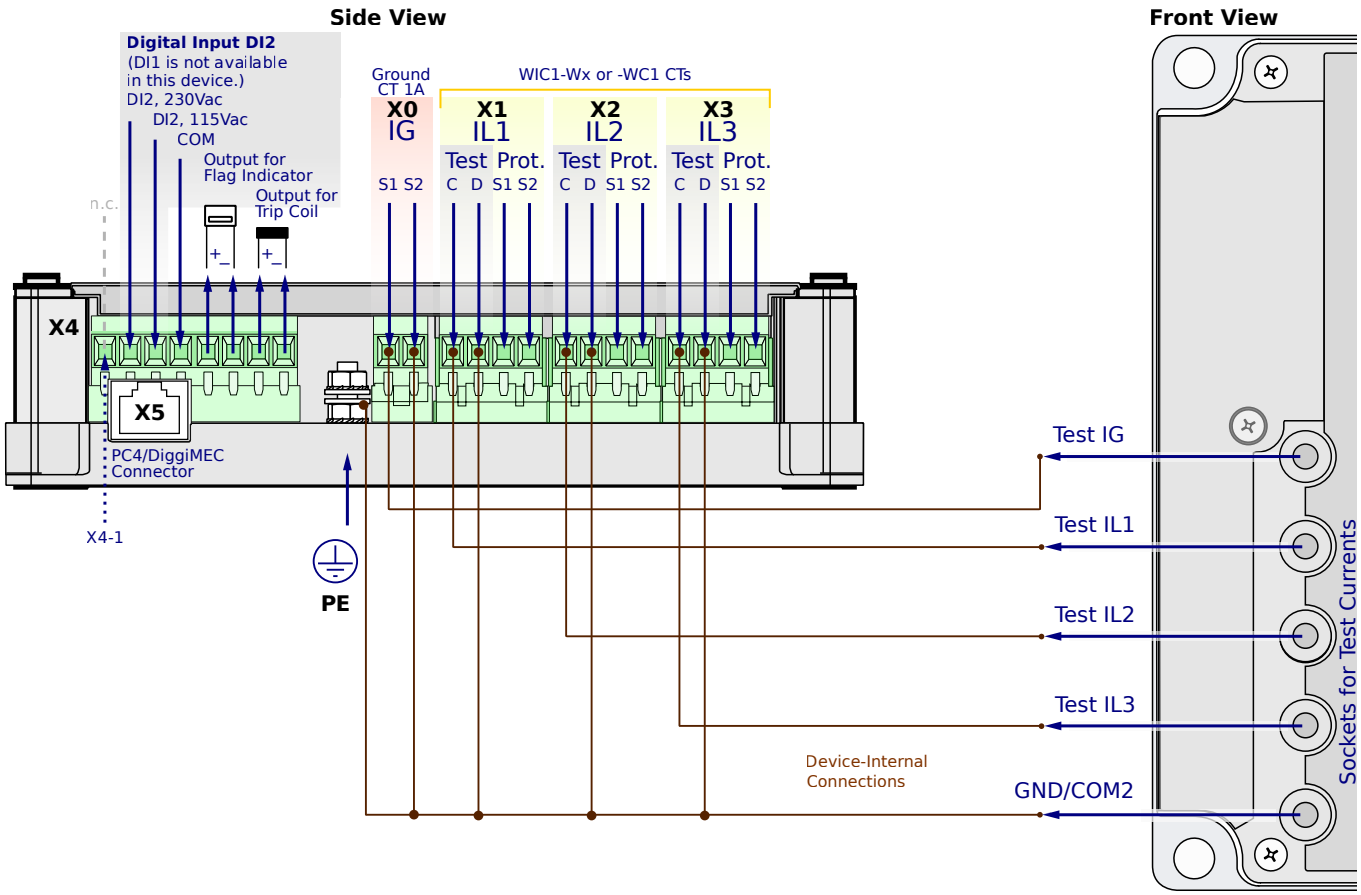


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2SAH

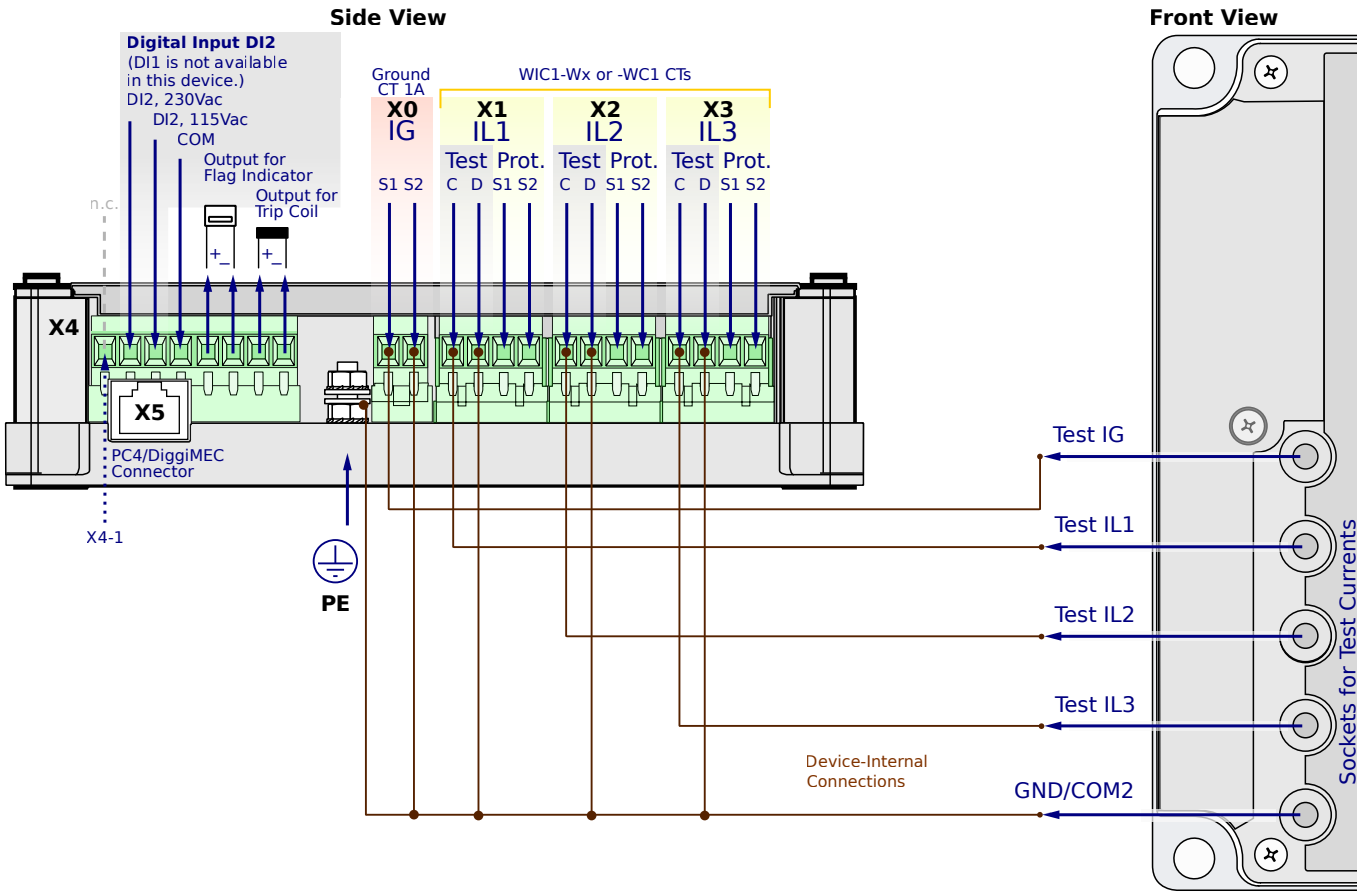


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2AA0

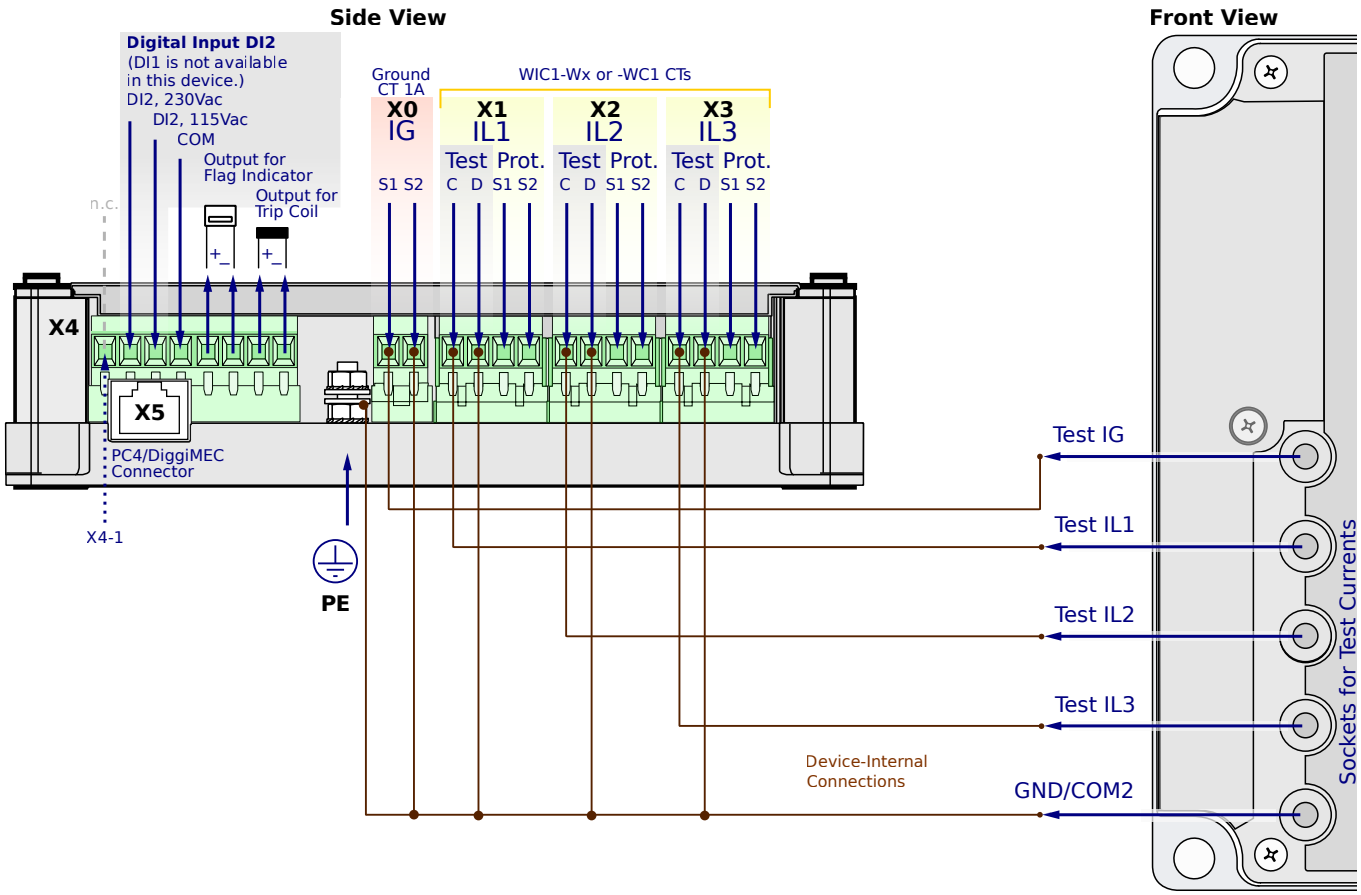


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2AAH

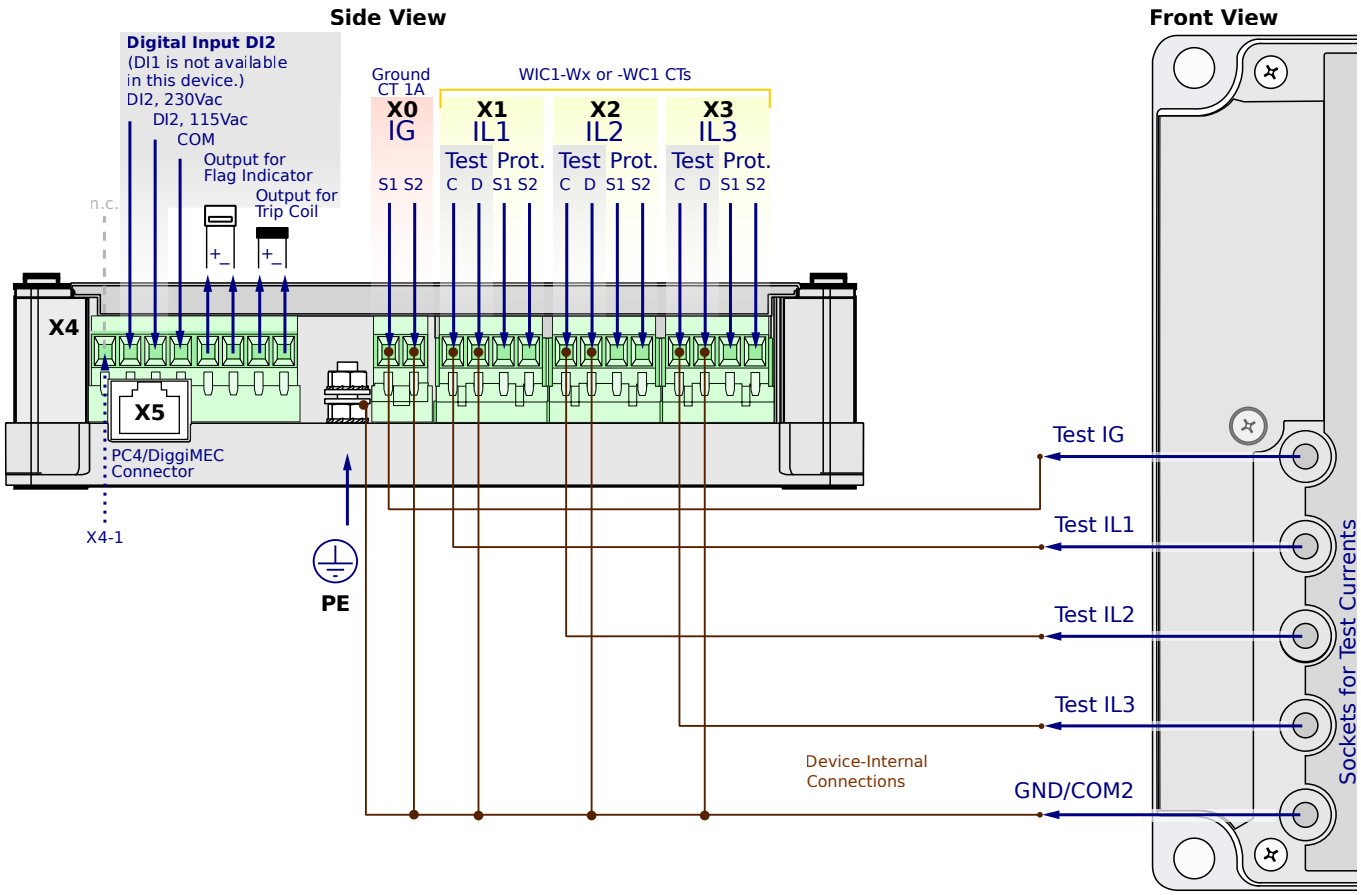


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2PA0

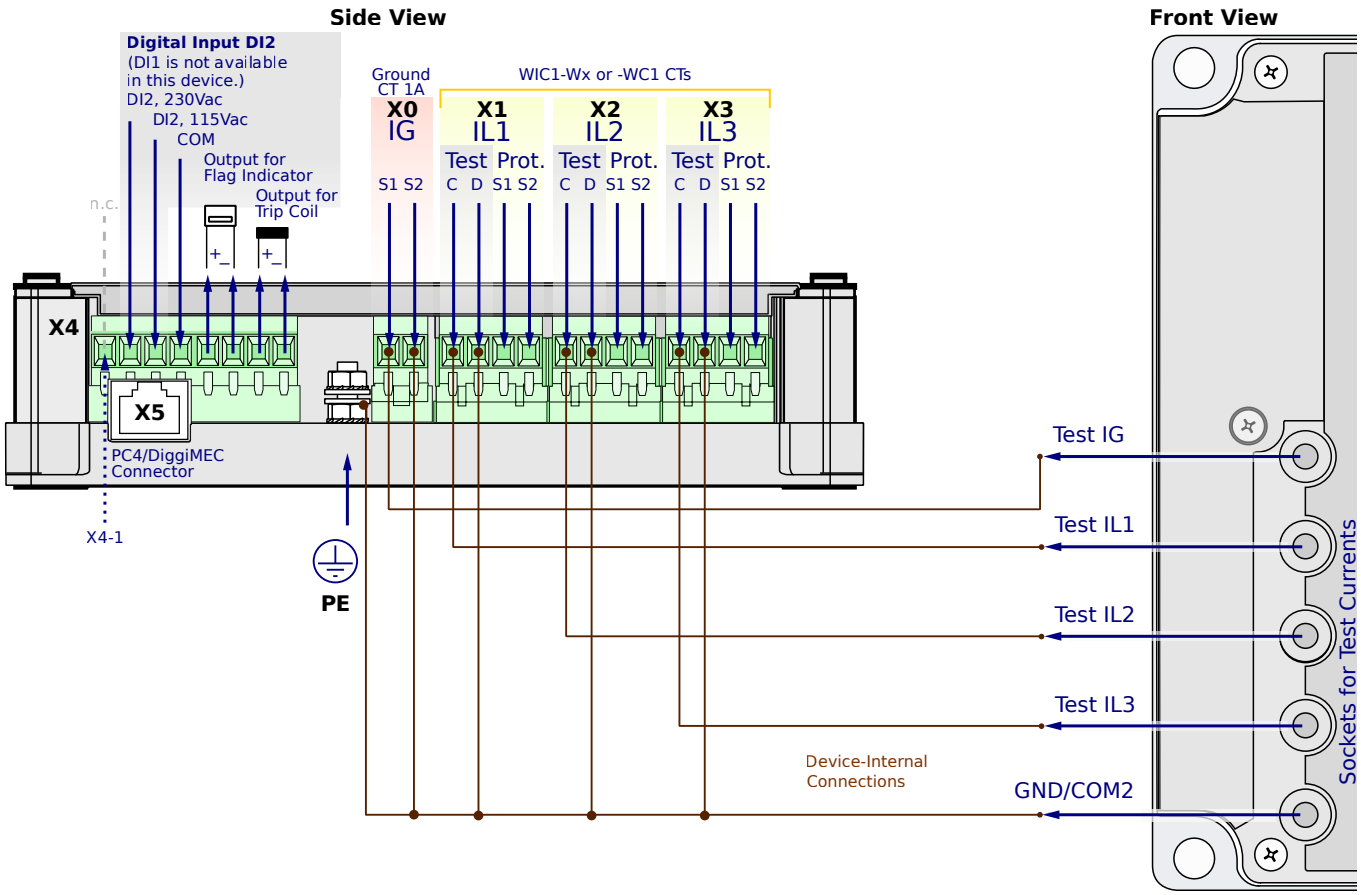


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2SB6CC2PAH

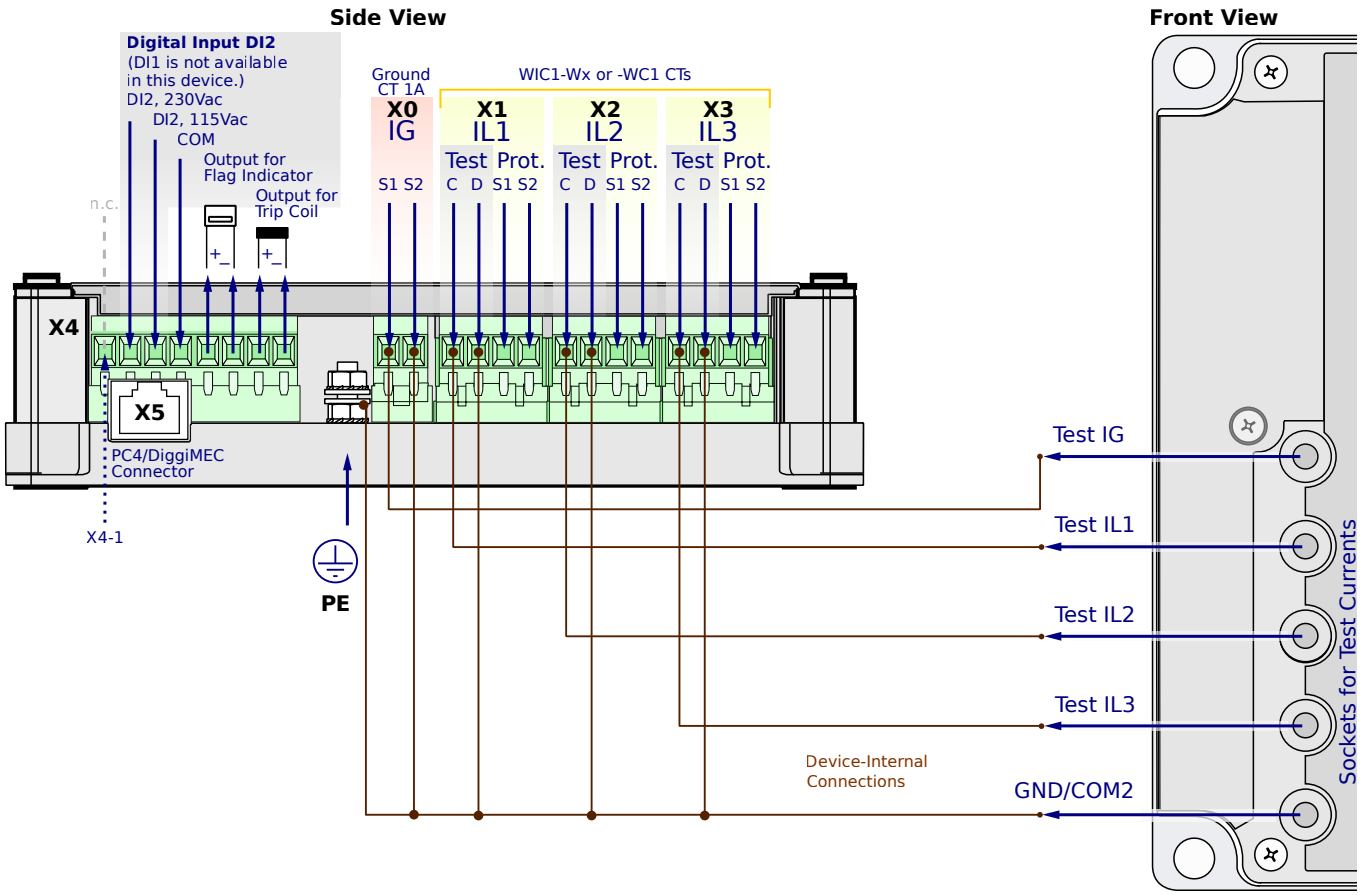


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0SA0

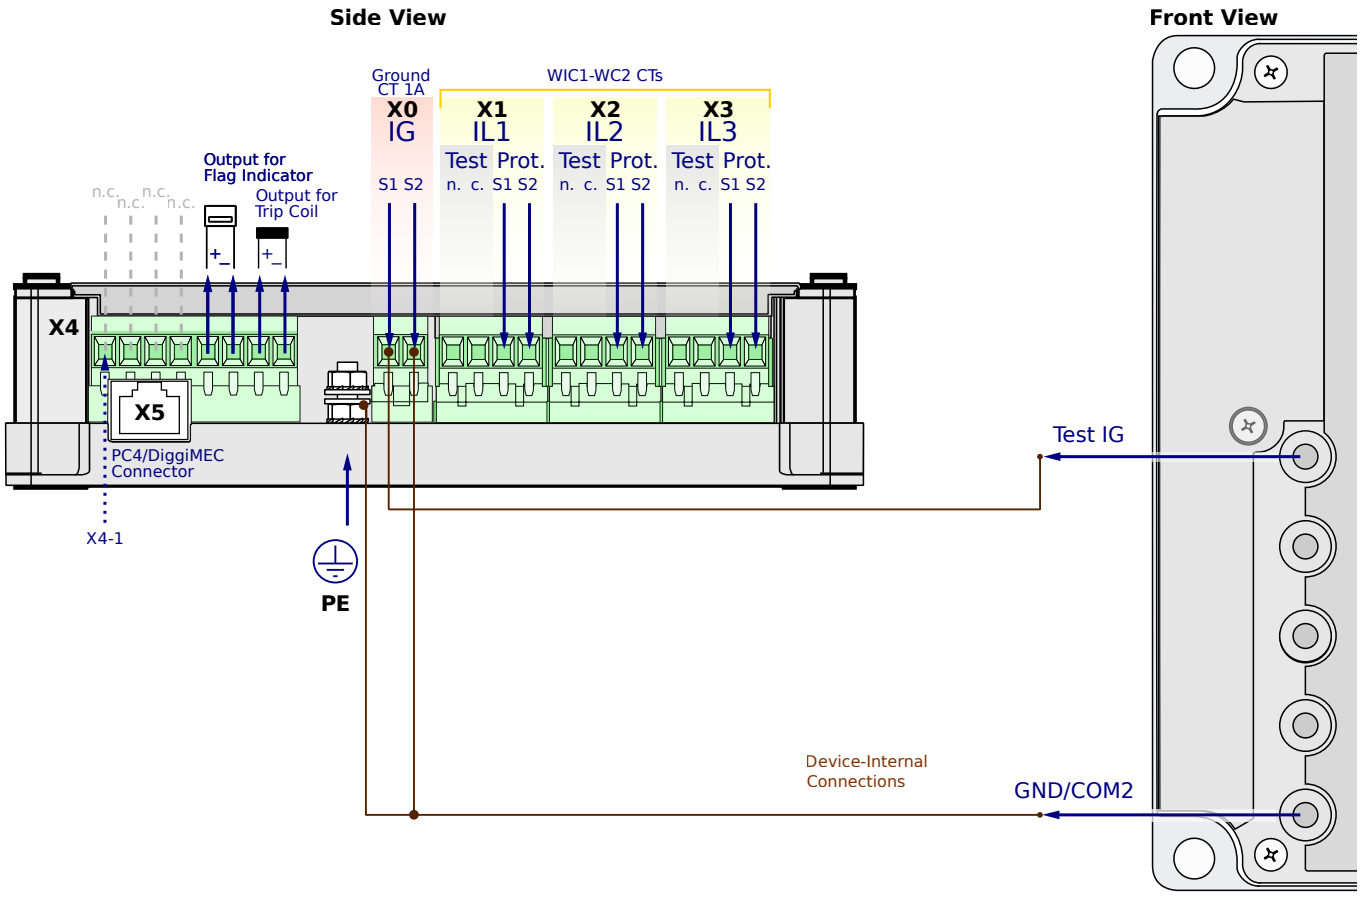


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0SAH

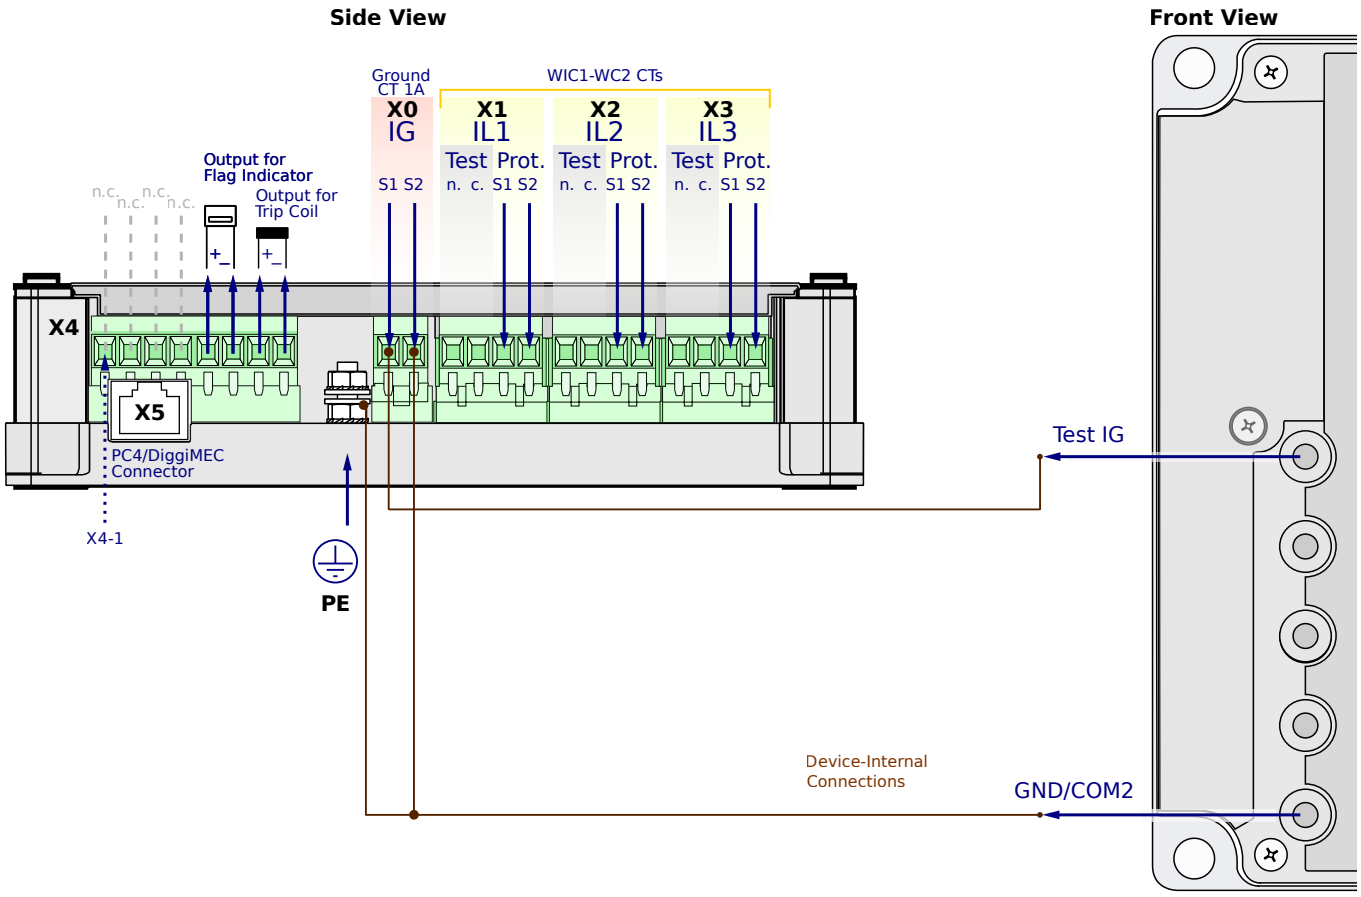


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0AA0

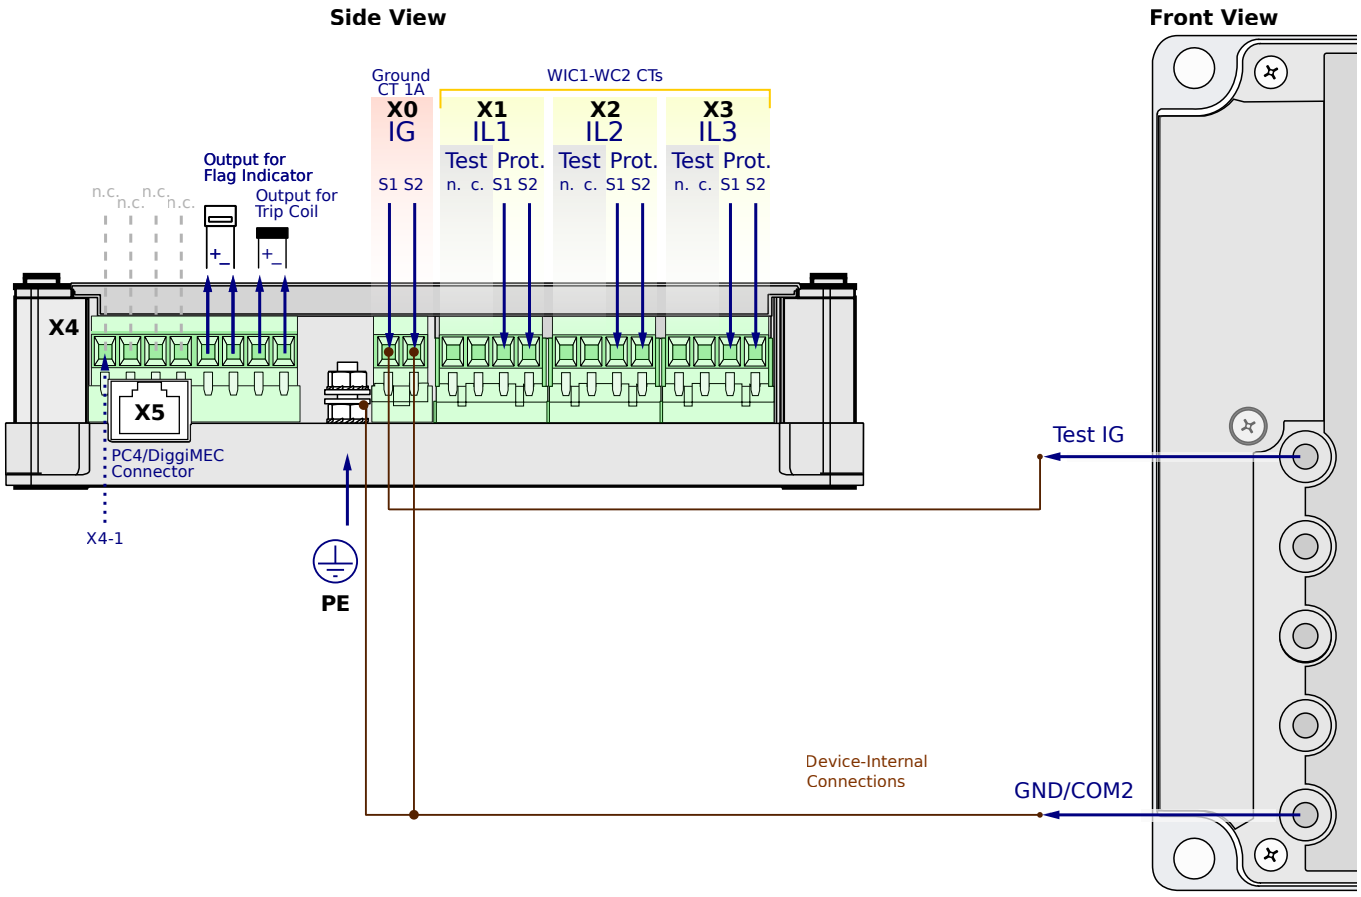


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0AAH

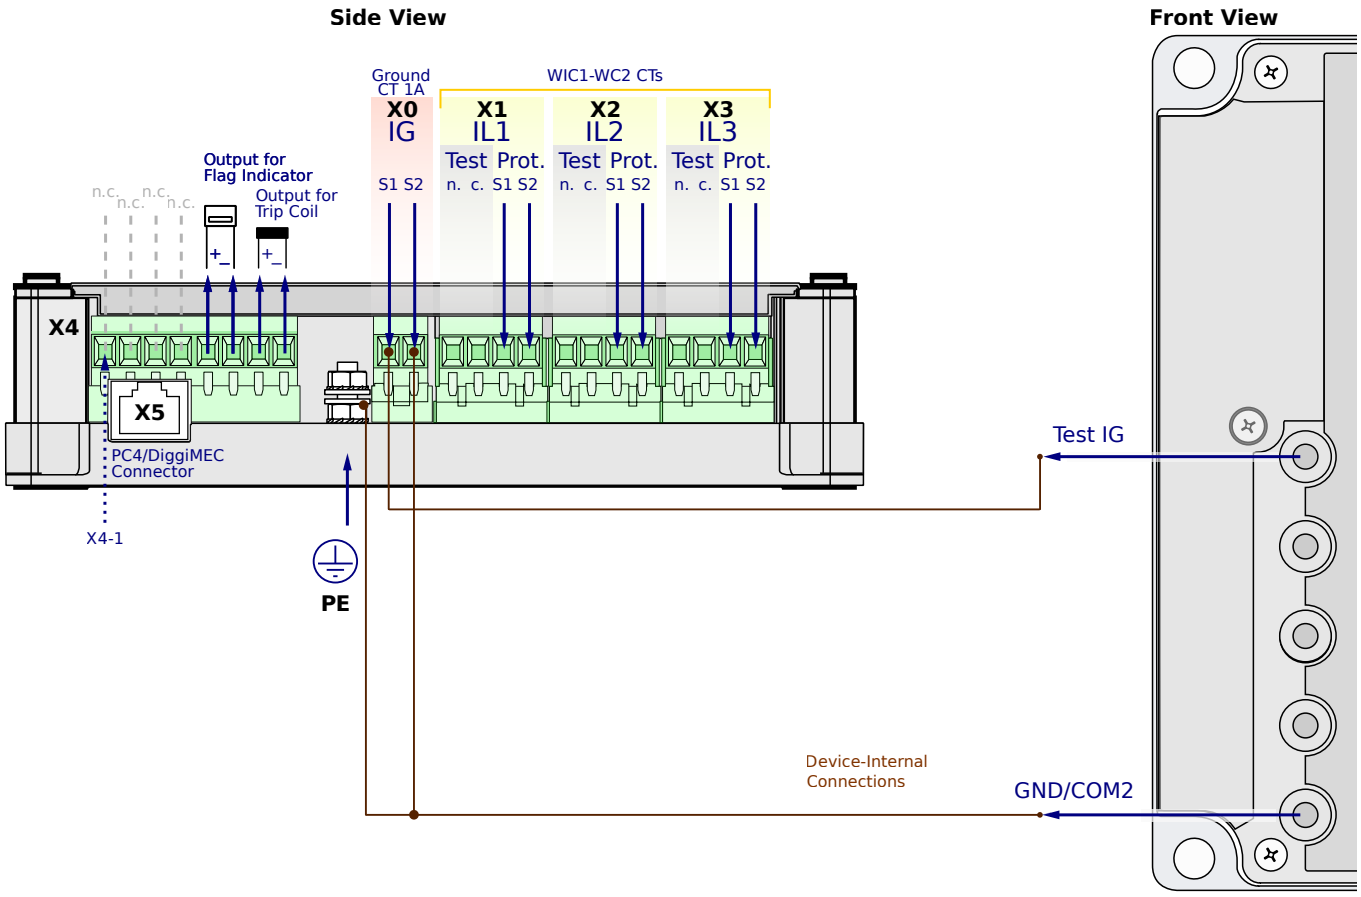


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0PA0

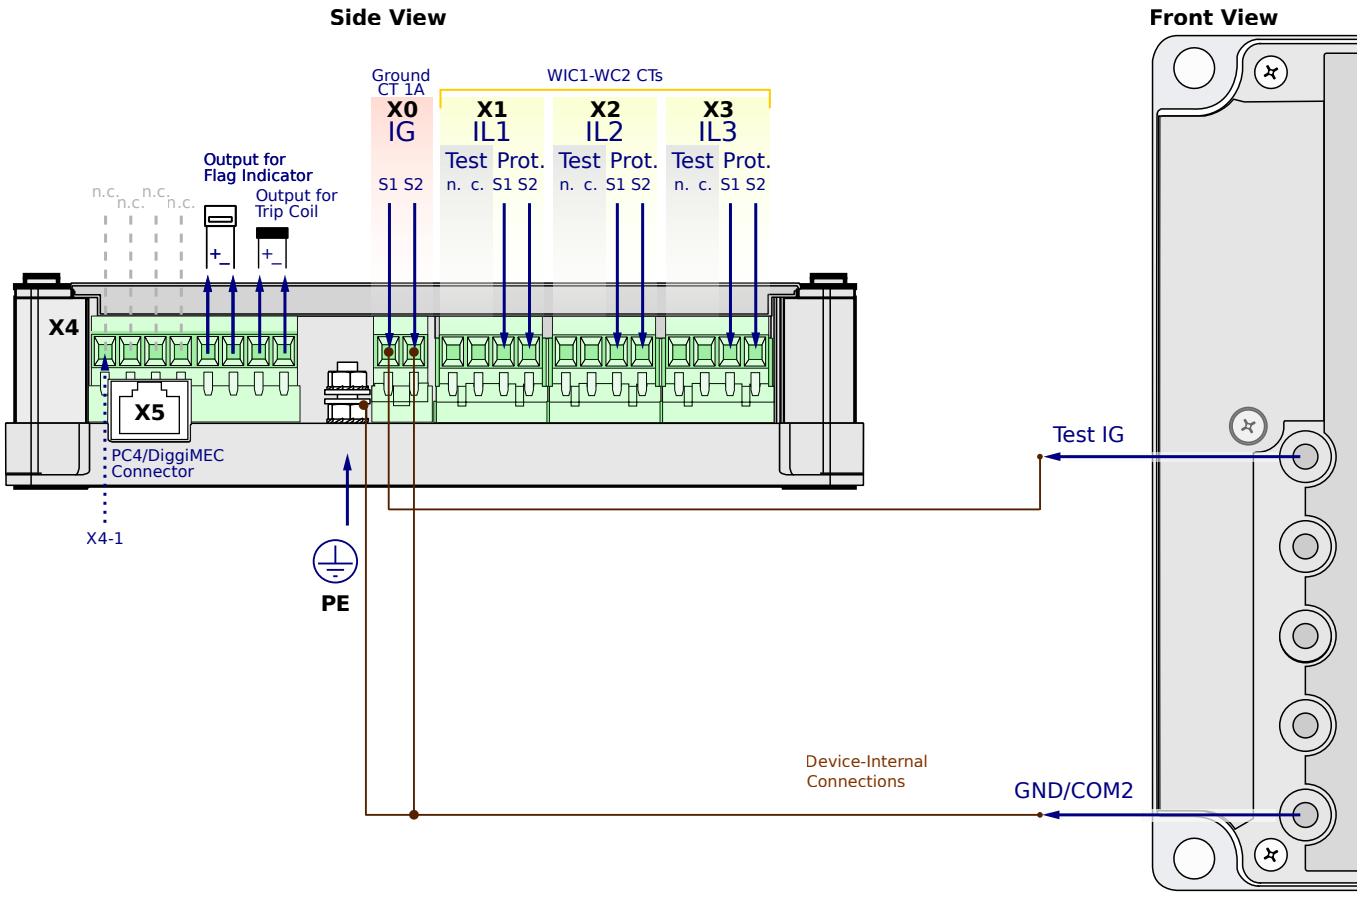


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN0PAH

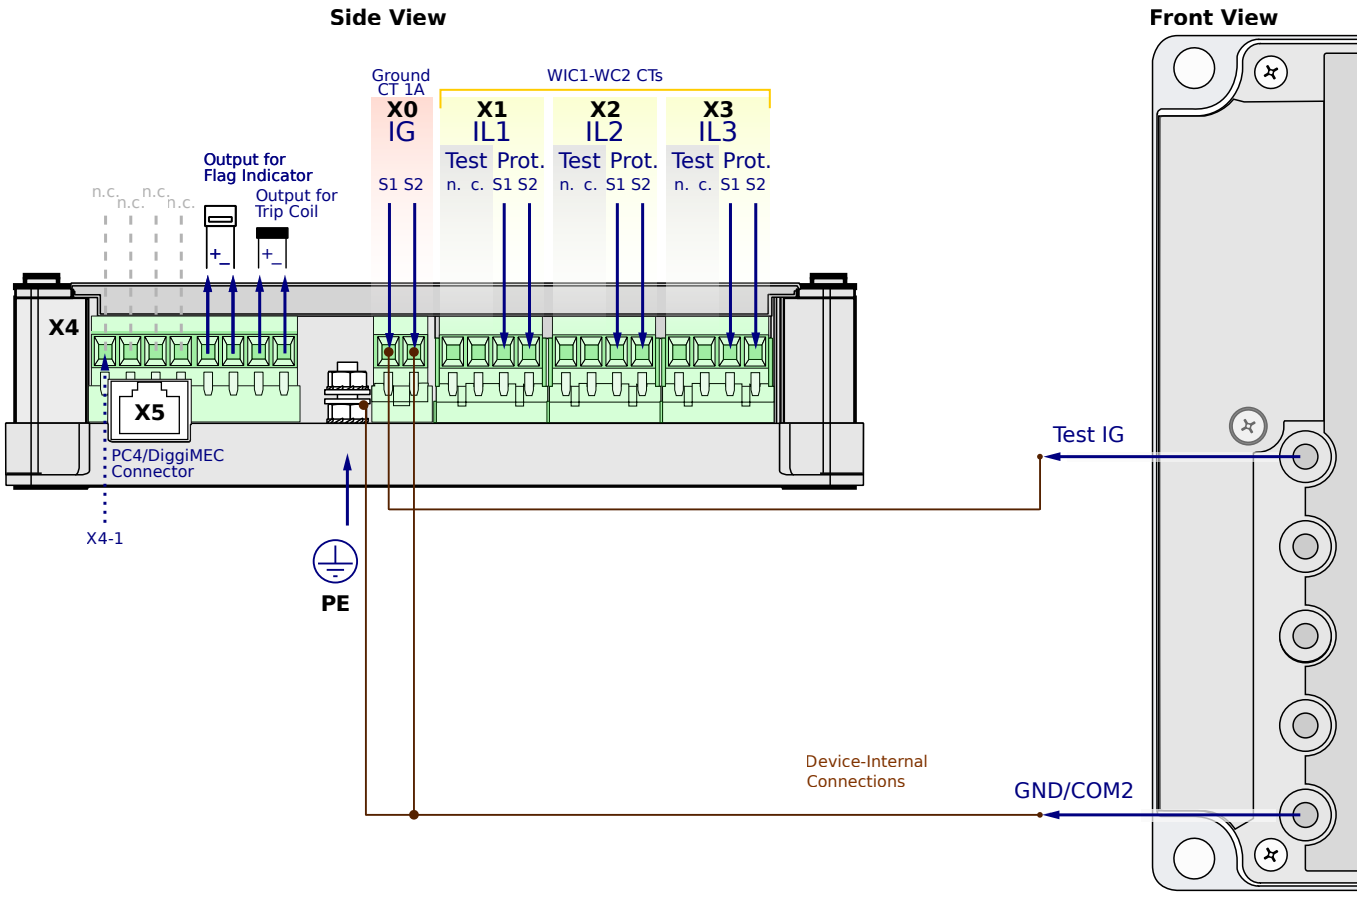


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1SA0

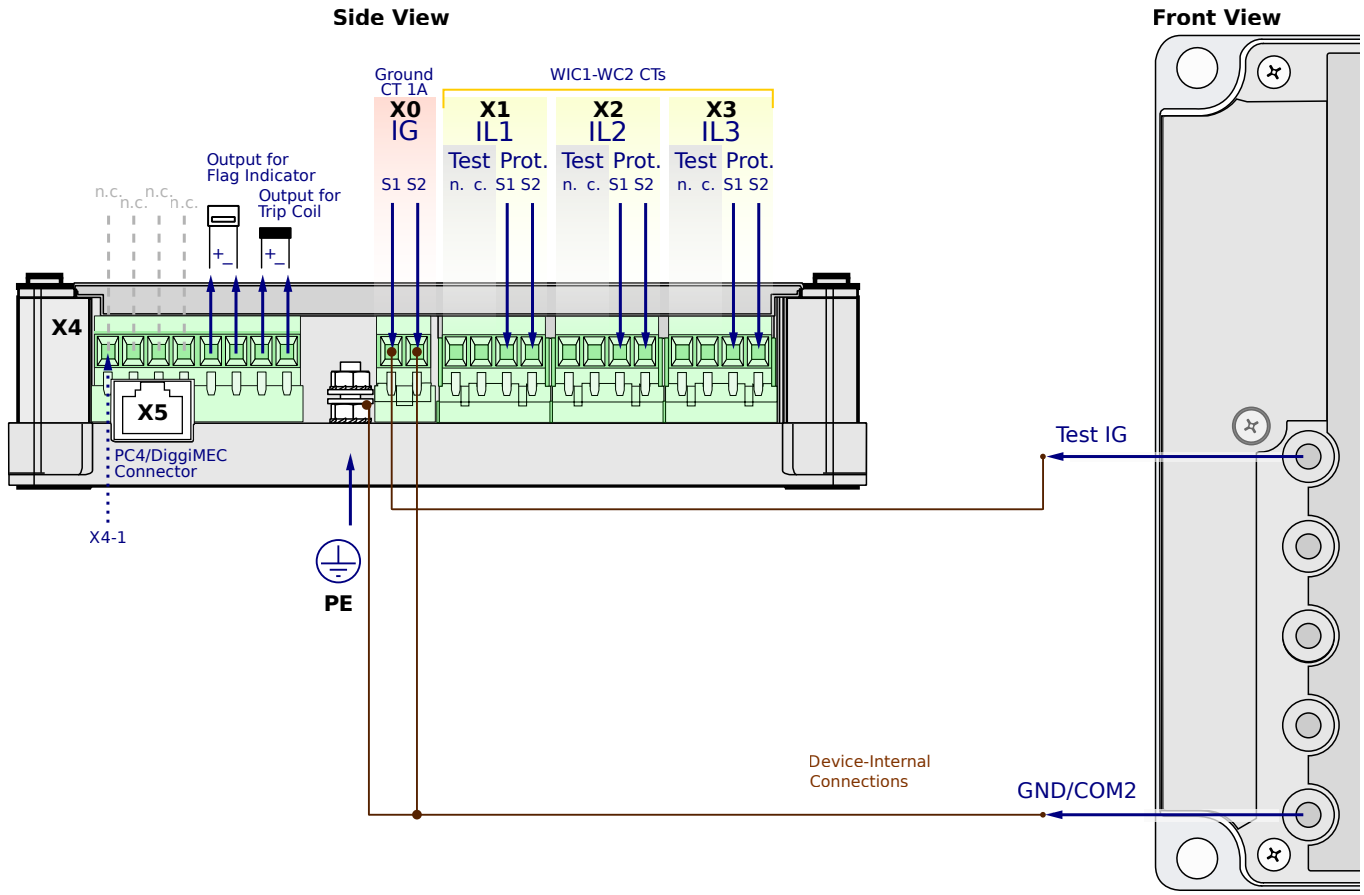


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1SAH

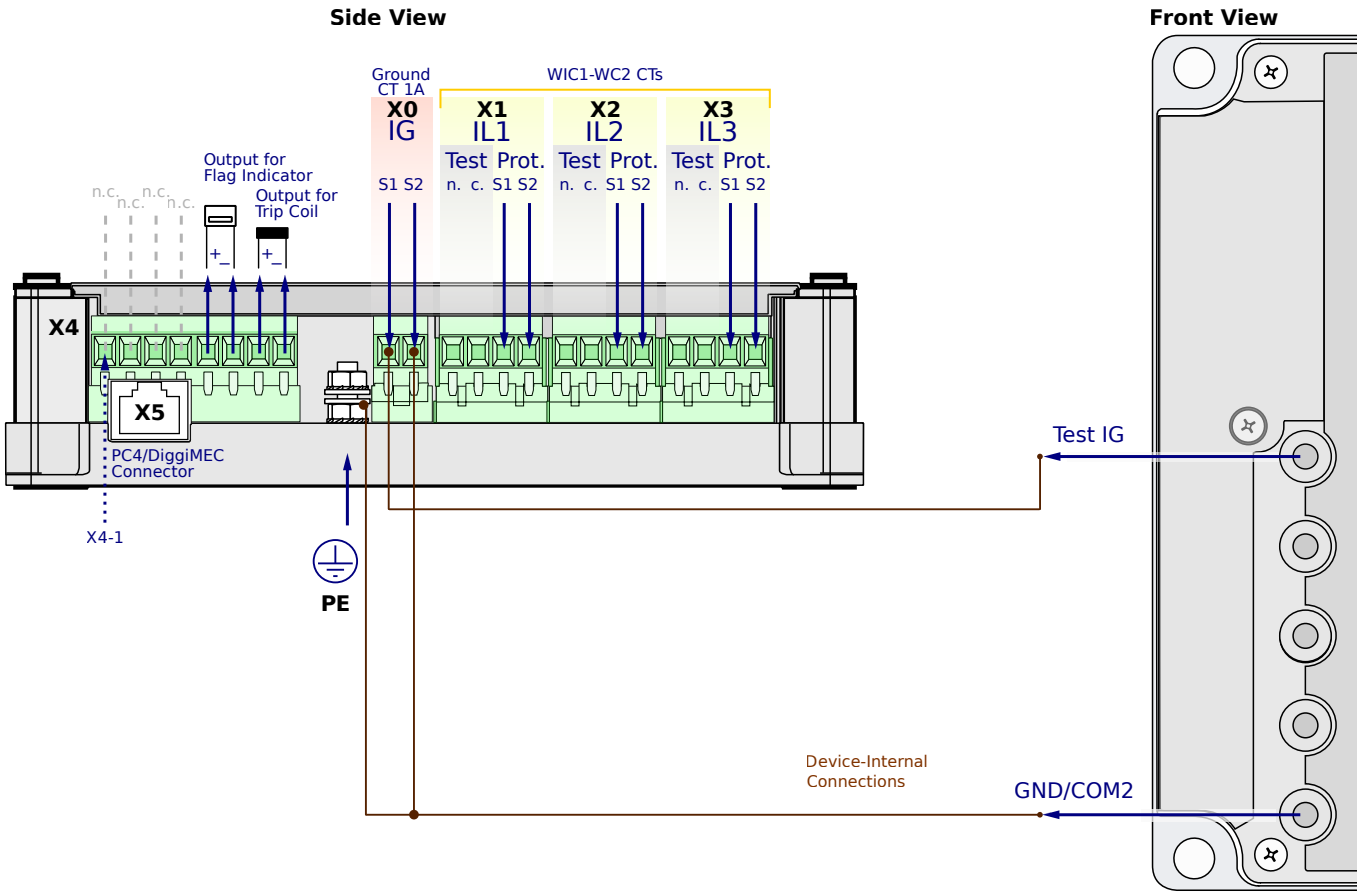


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1AA0

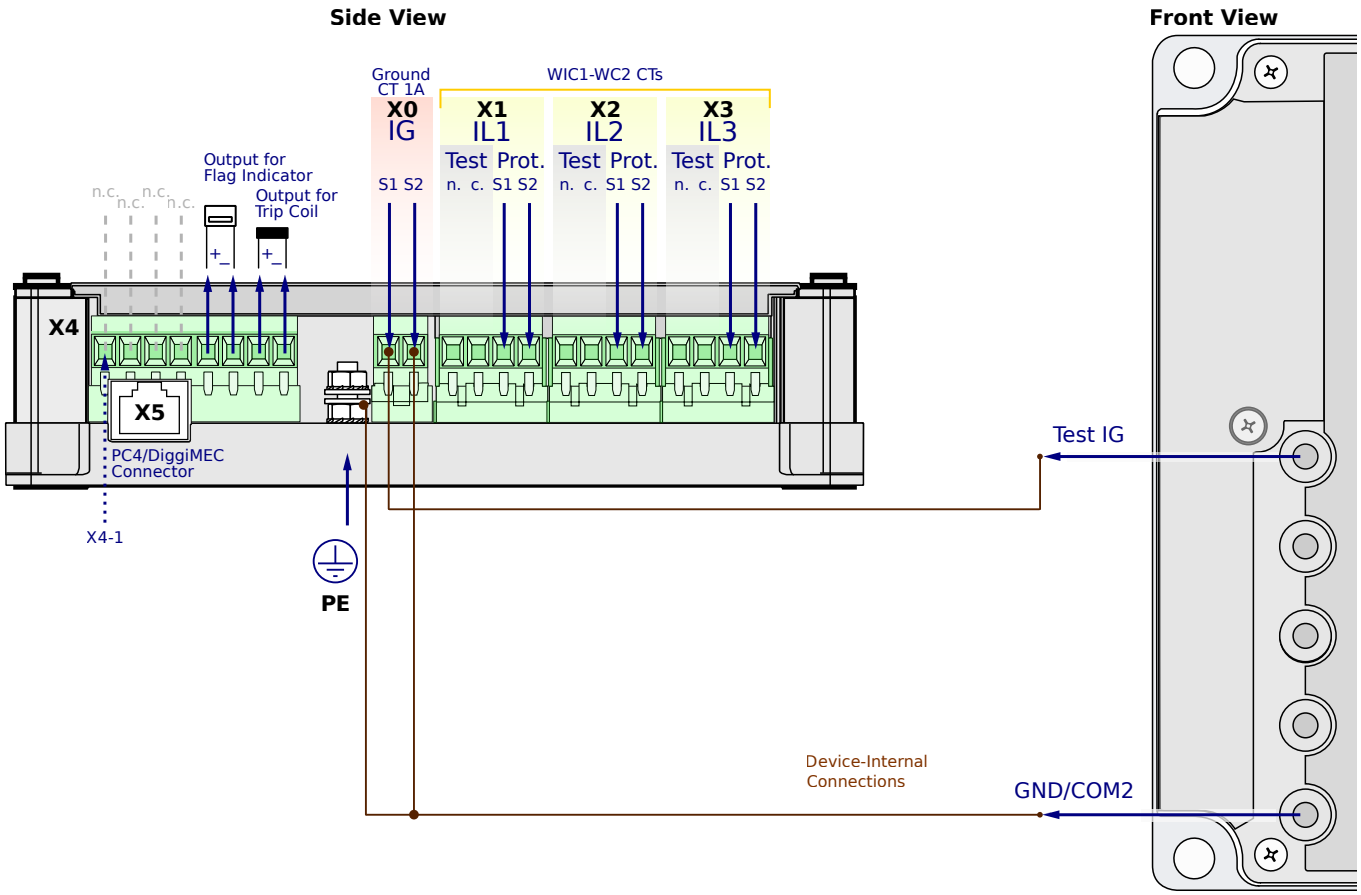


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1AAH

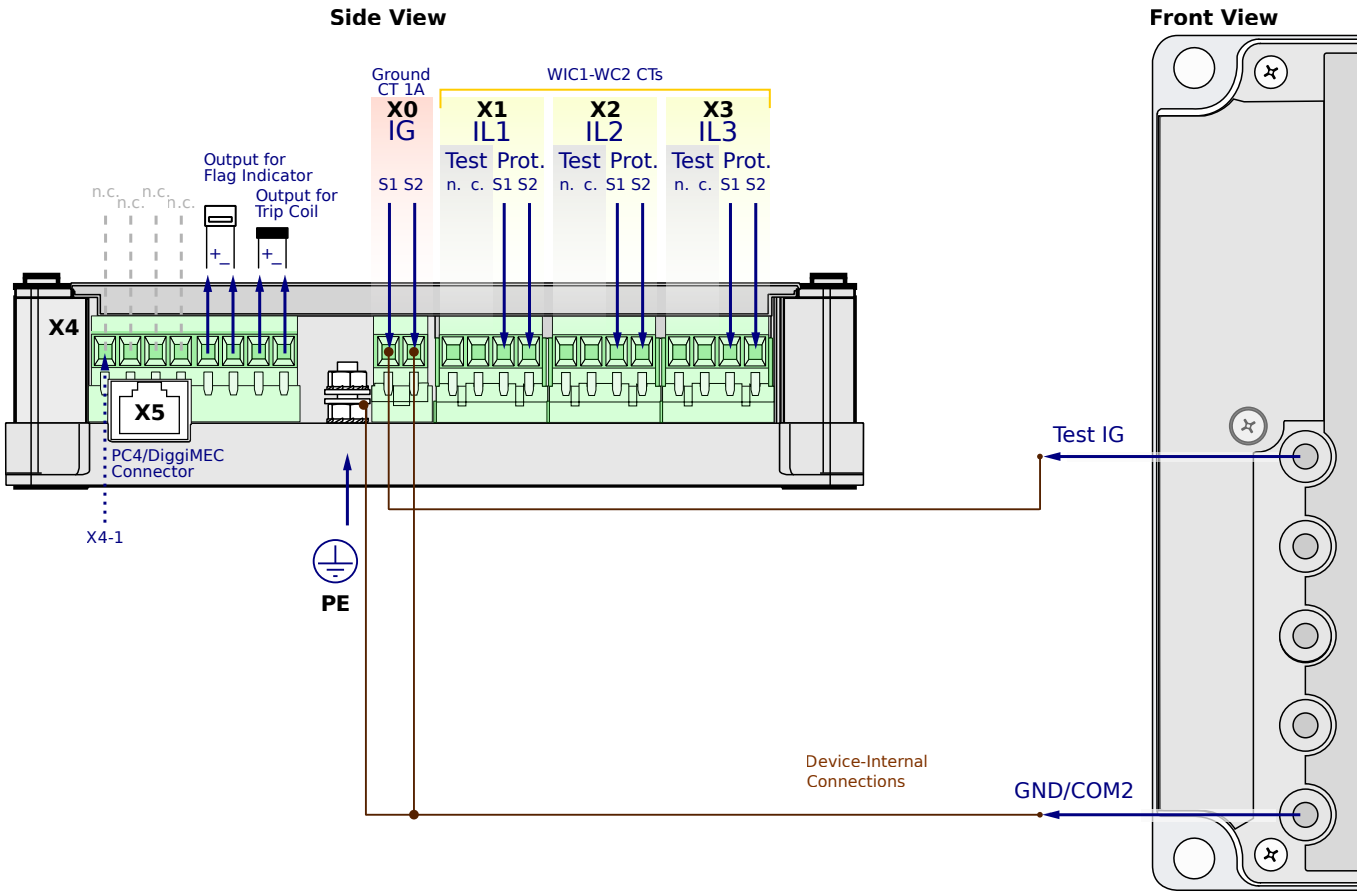


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1PA0

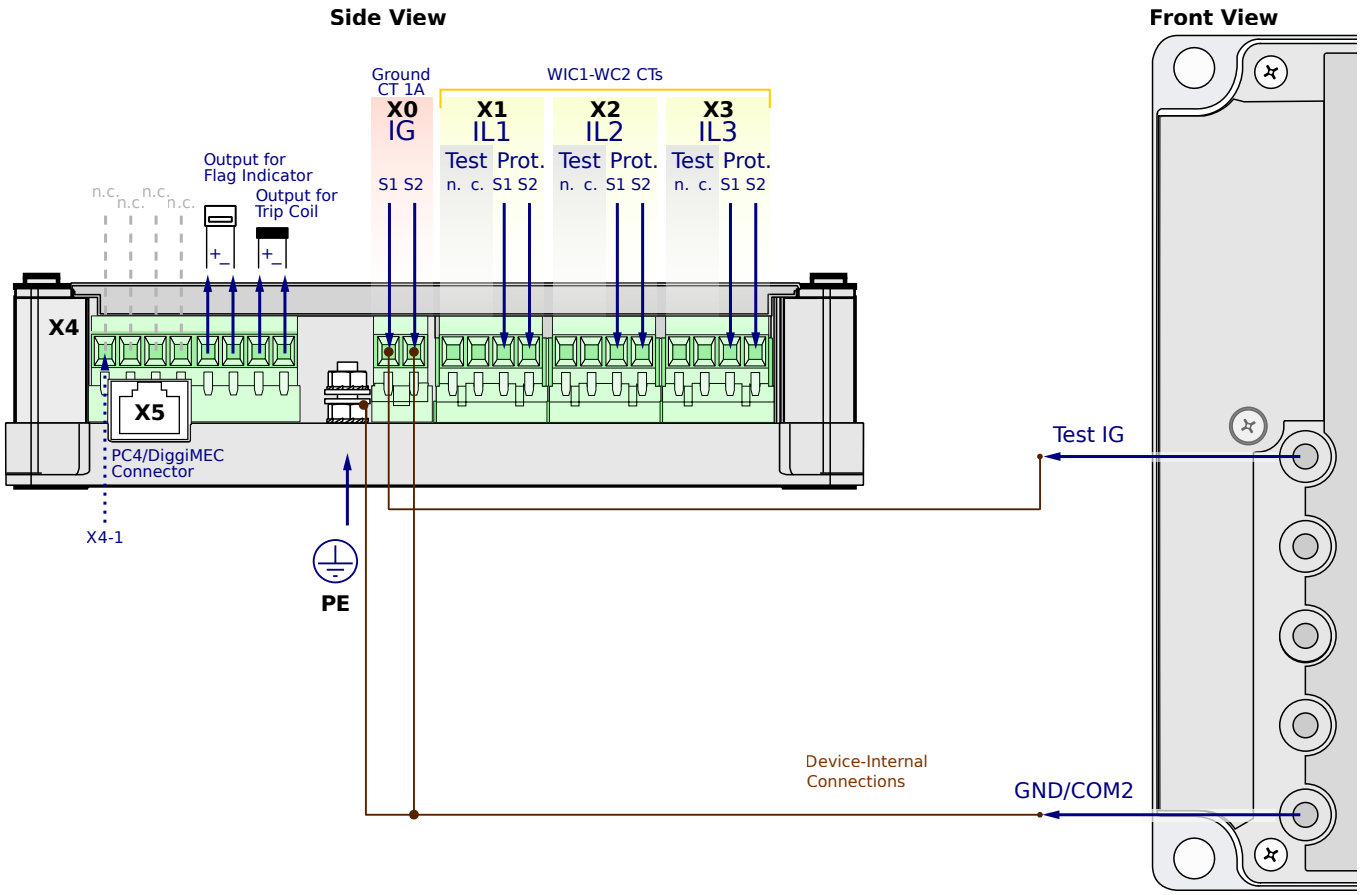


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN1PAH

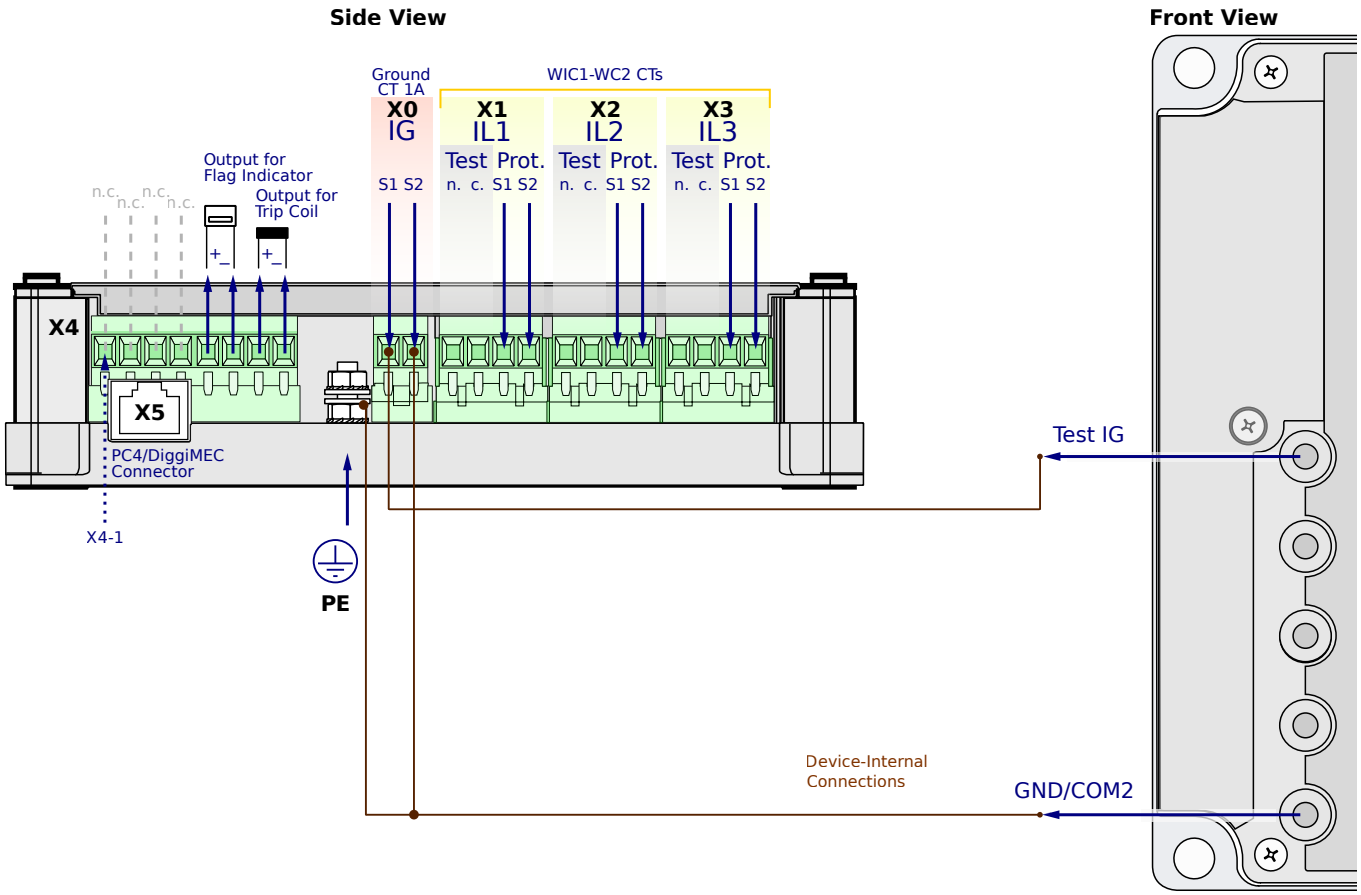


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2SA0

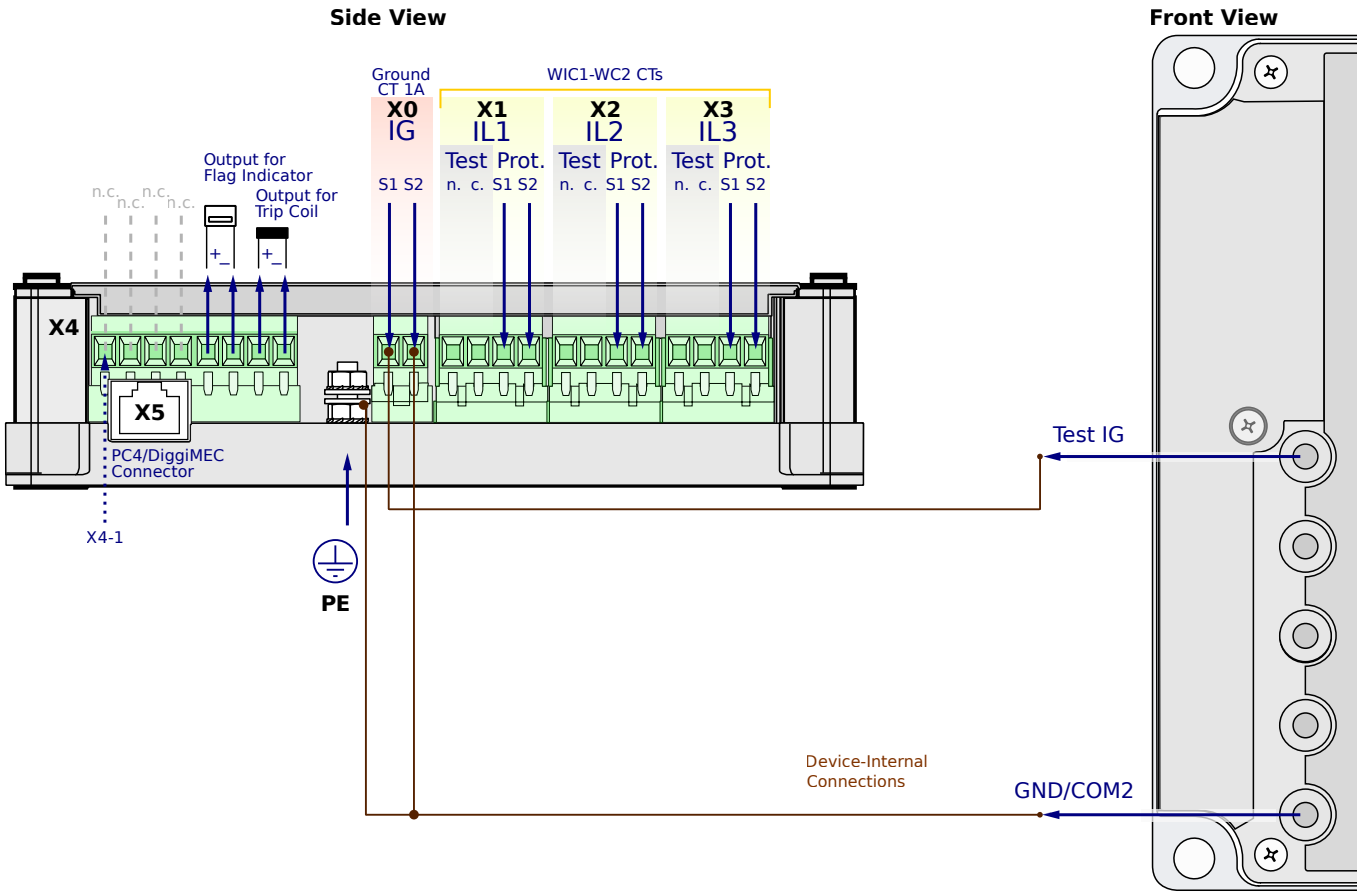


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2SAH

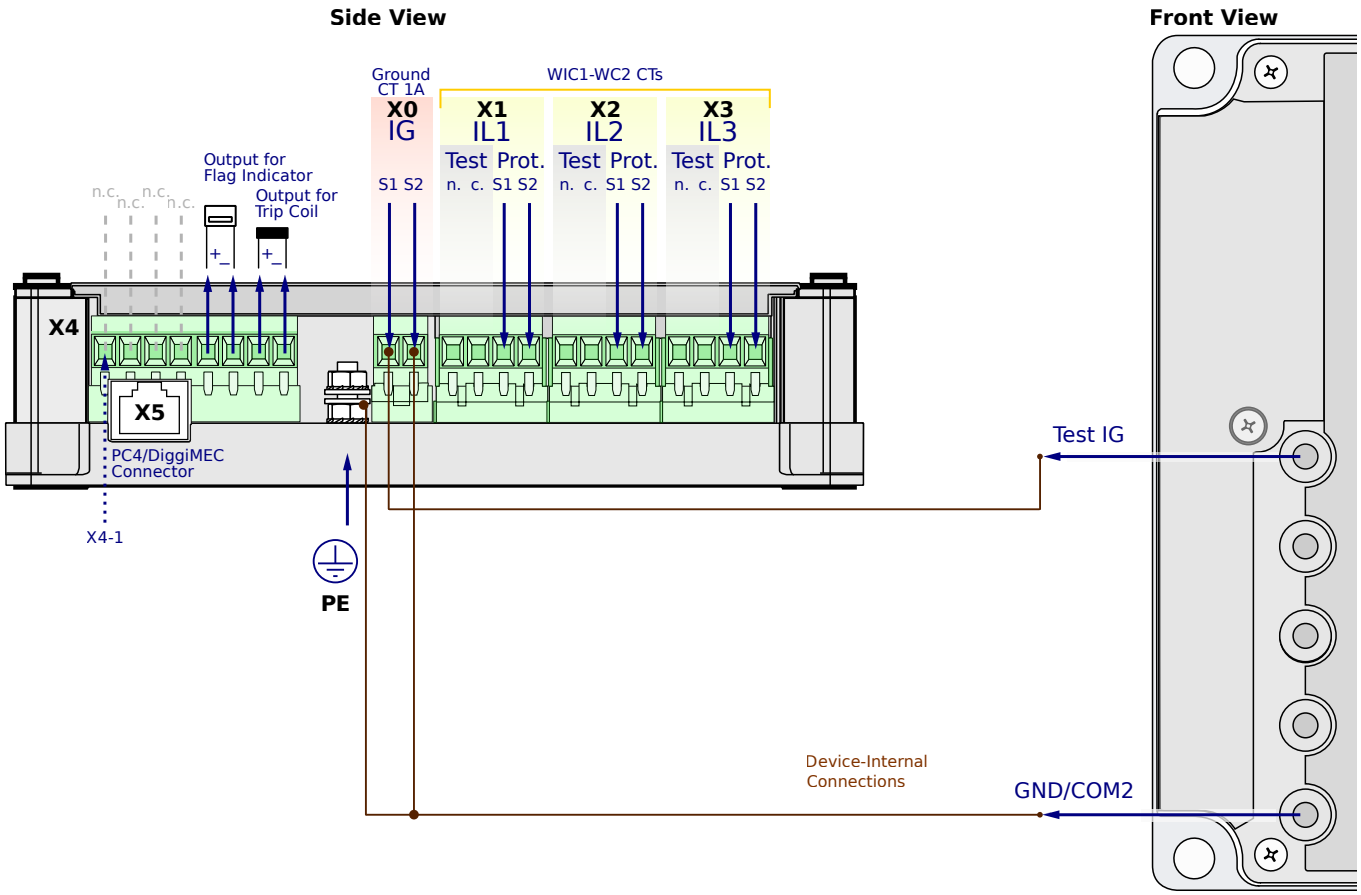


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2AA0

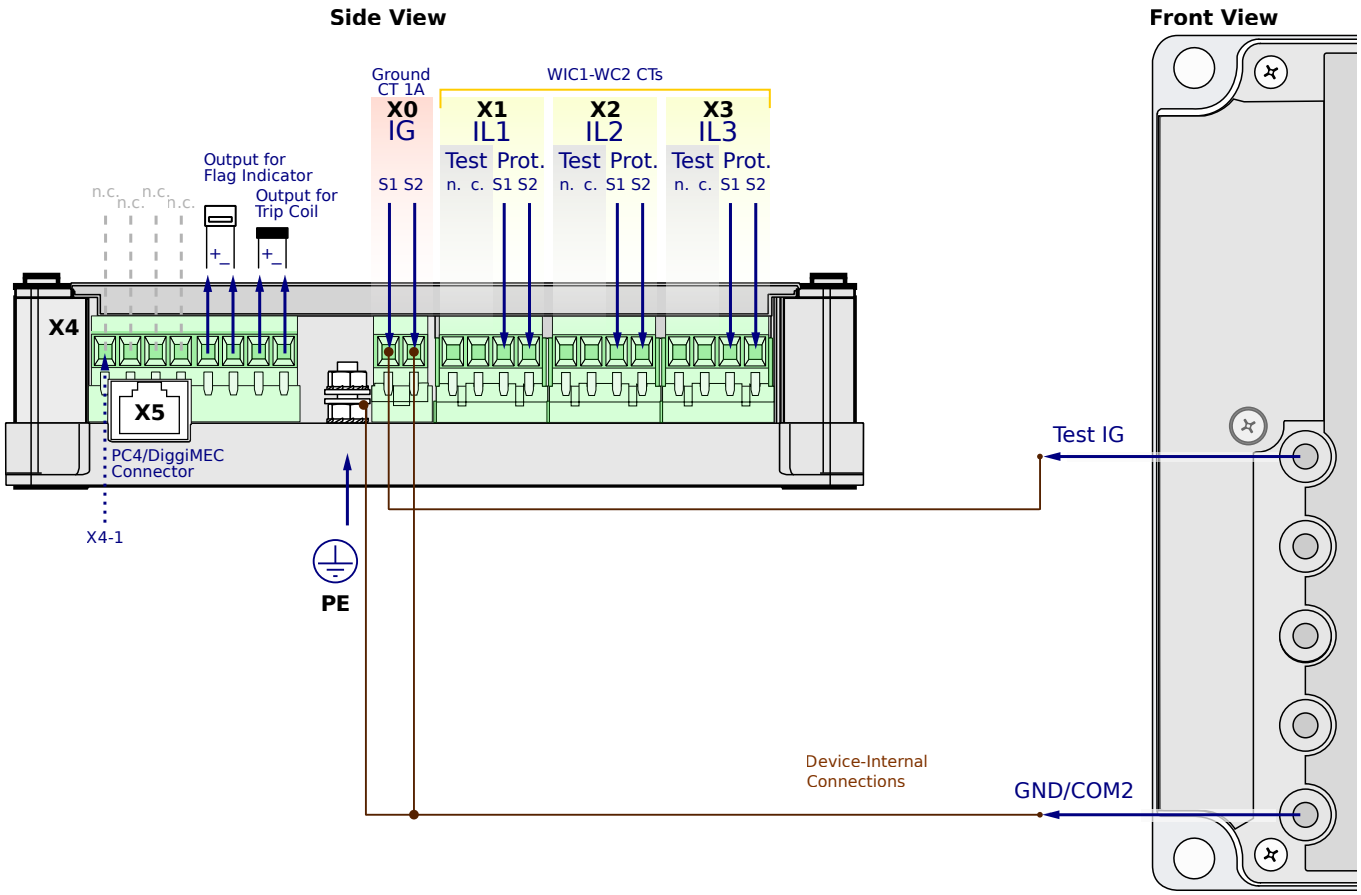


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2AAH

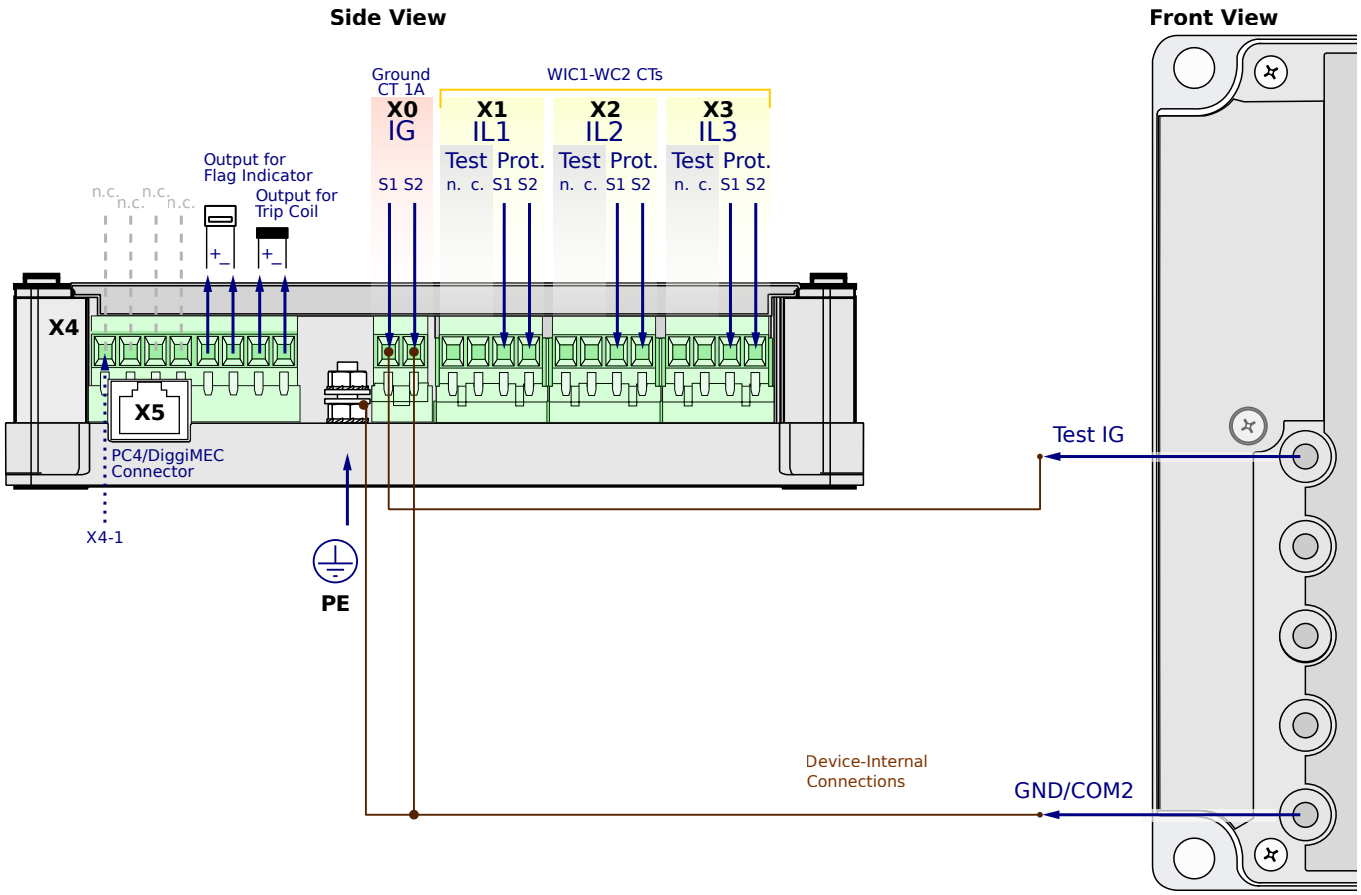


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2PA0

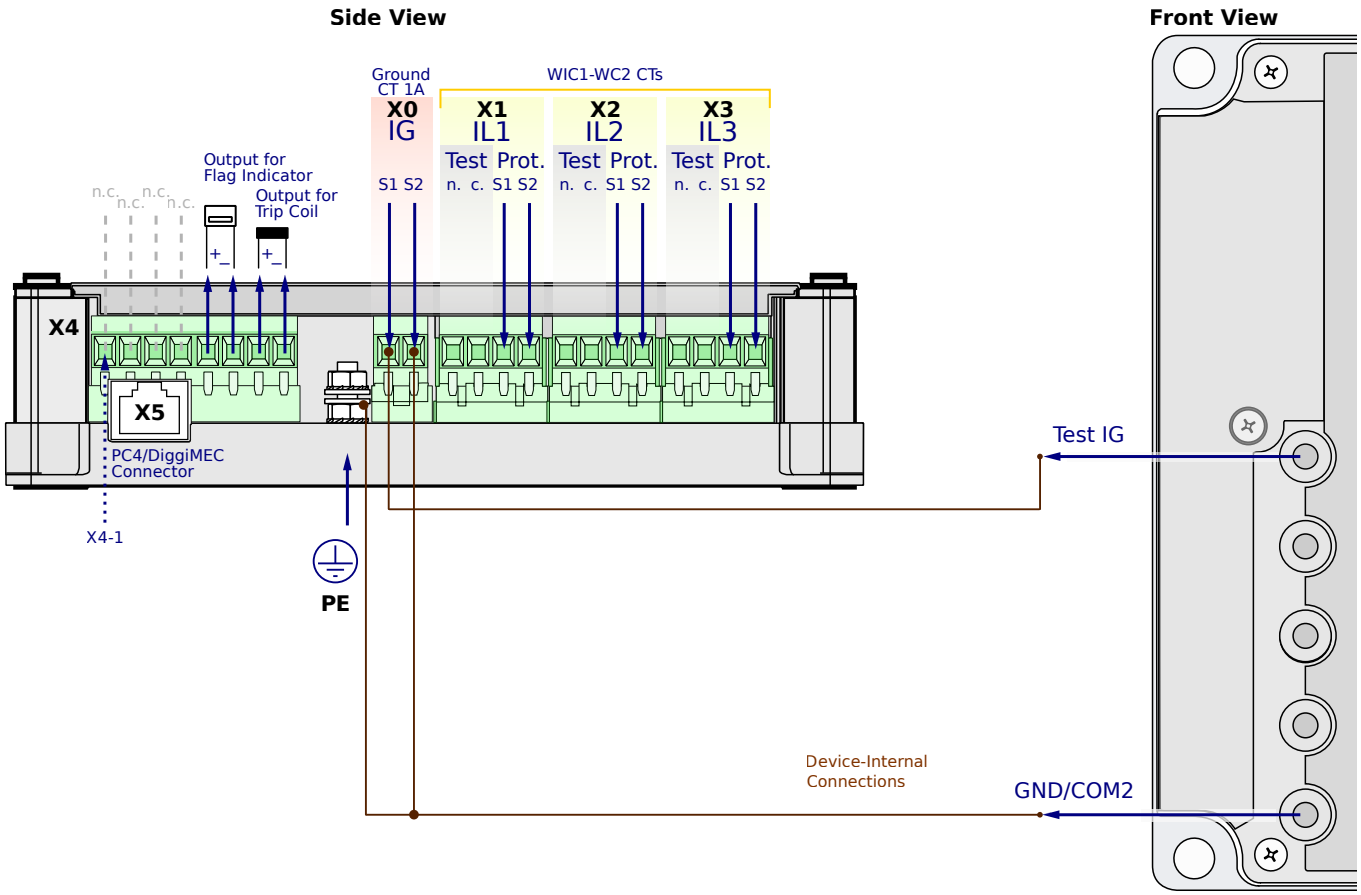


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NN2PAH

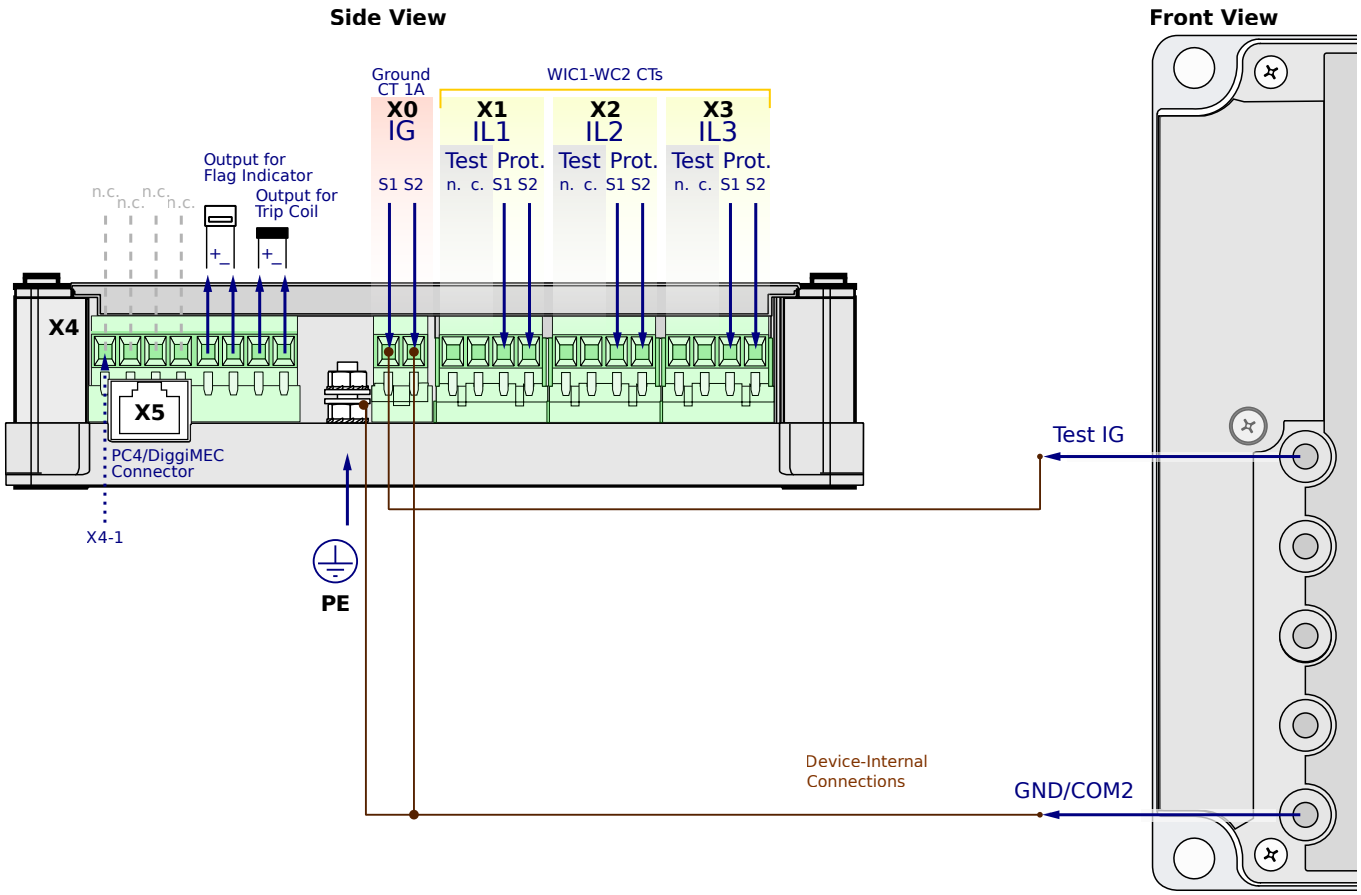


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0SA0

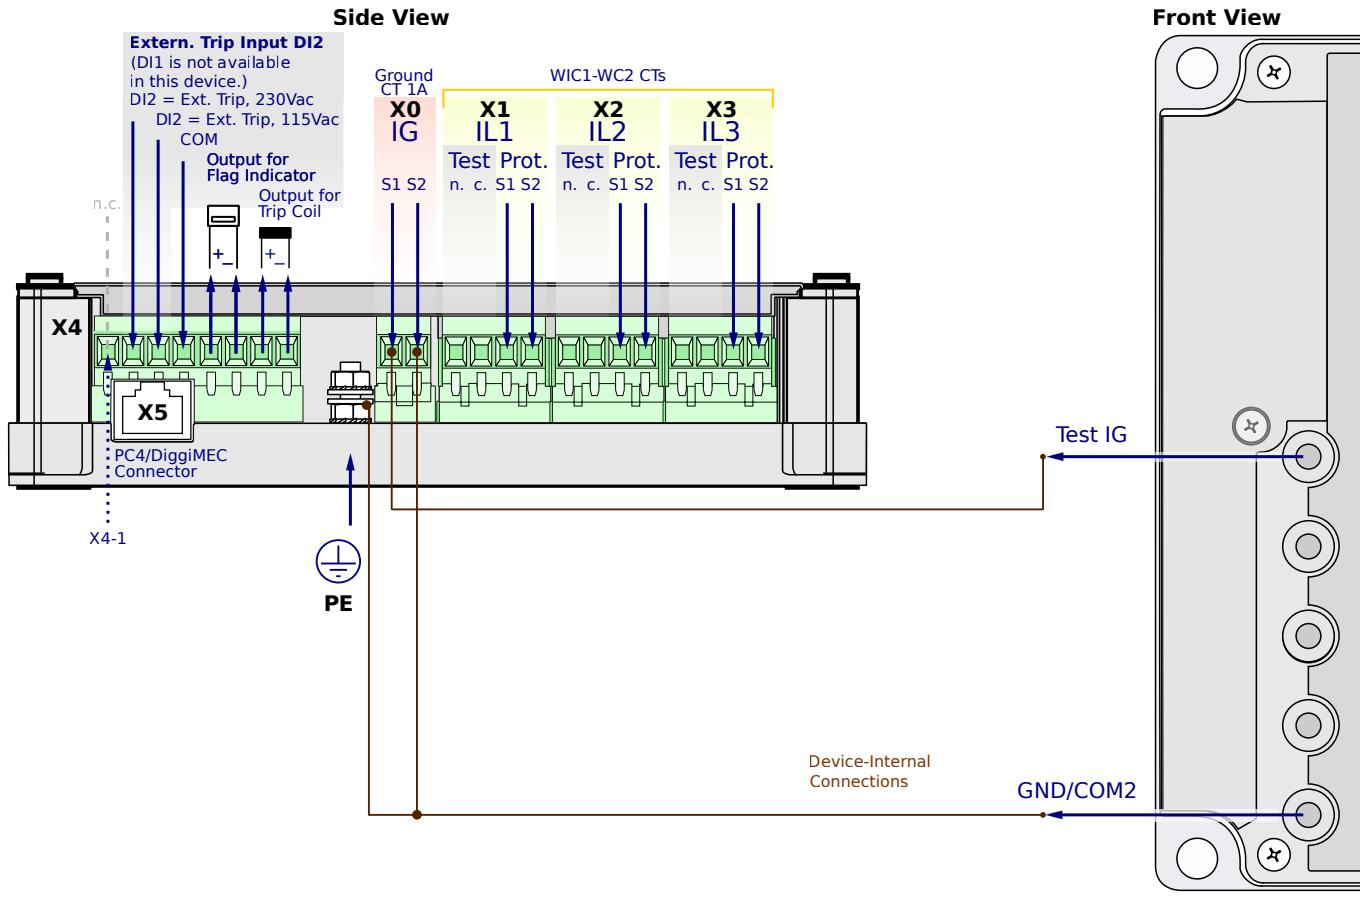


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0SAH

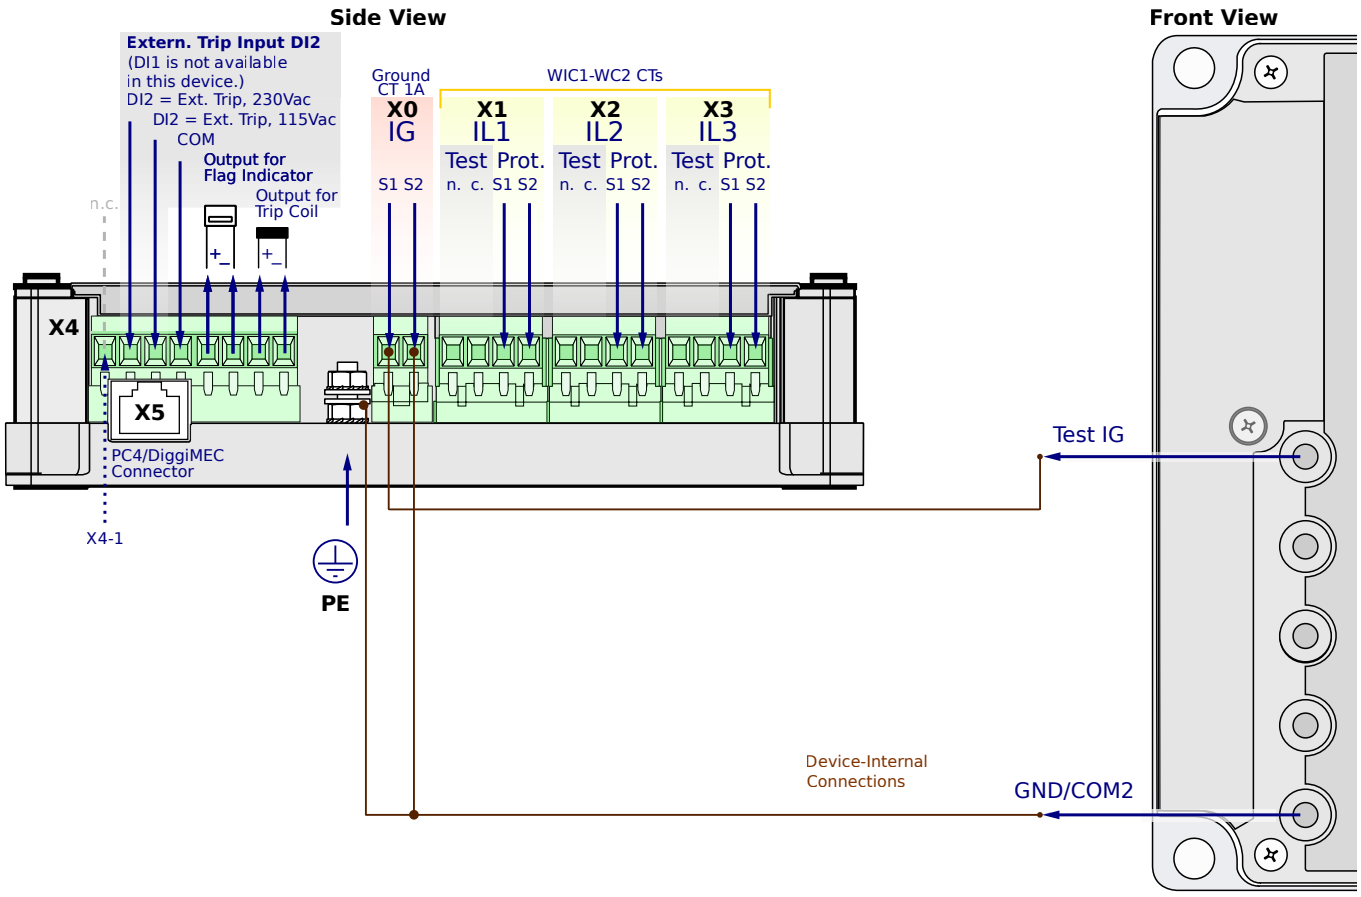


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0AA0

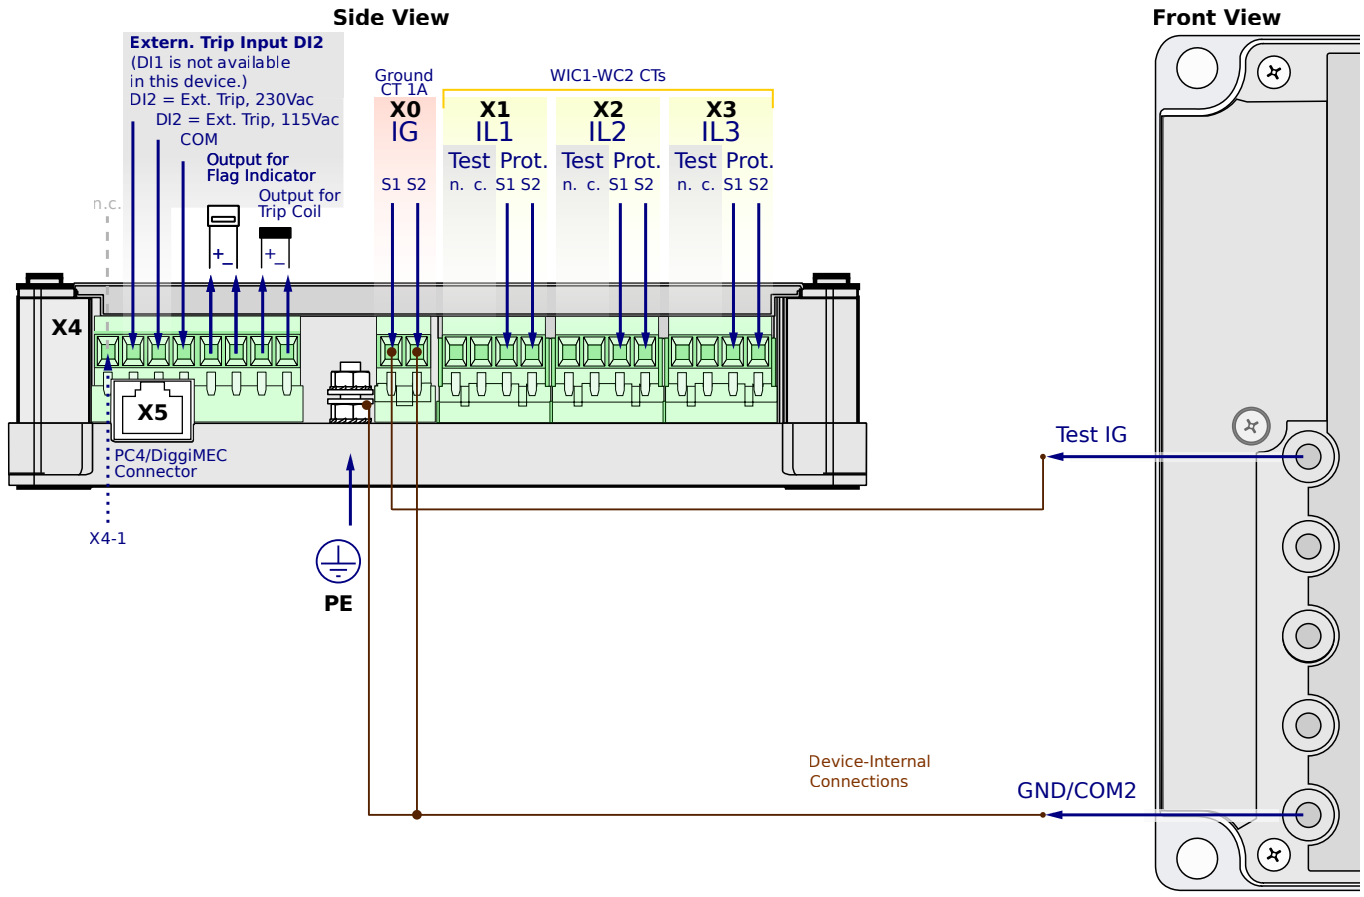


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0AAH

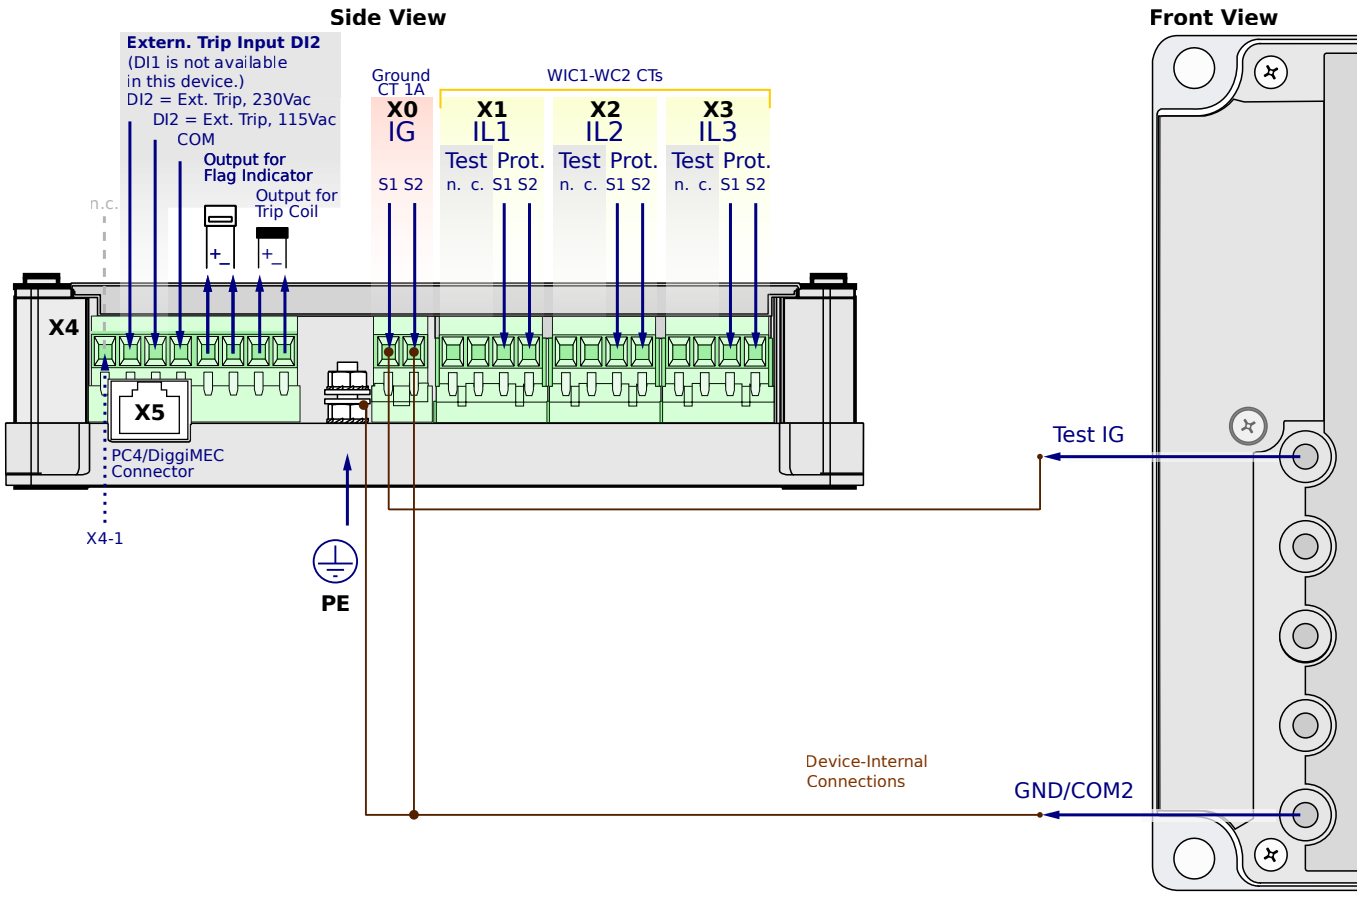


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0PA0

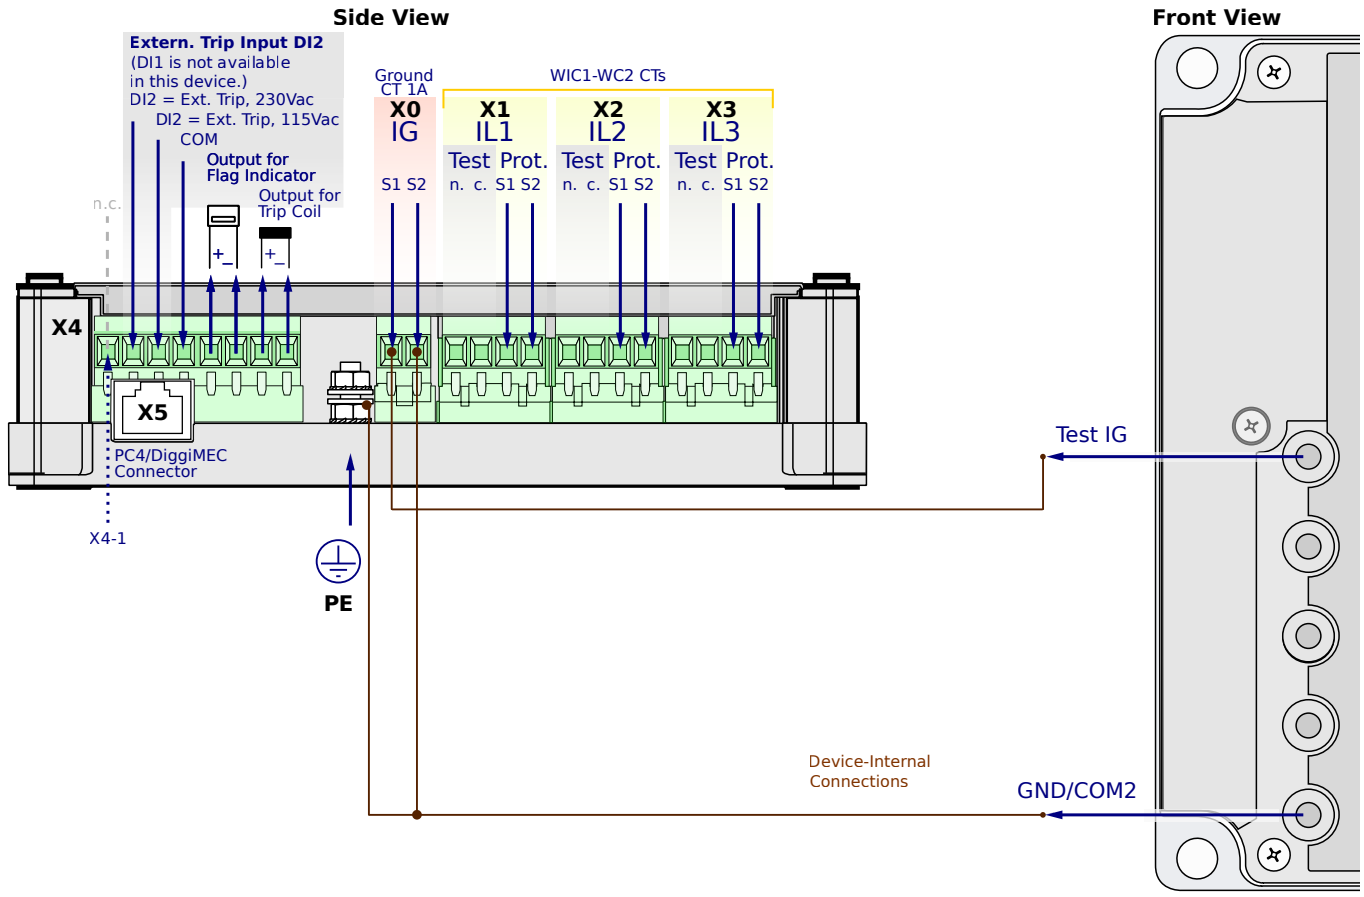


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF0PAH

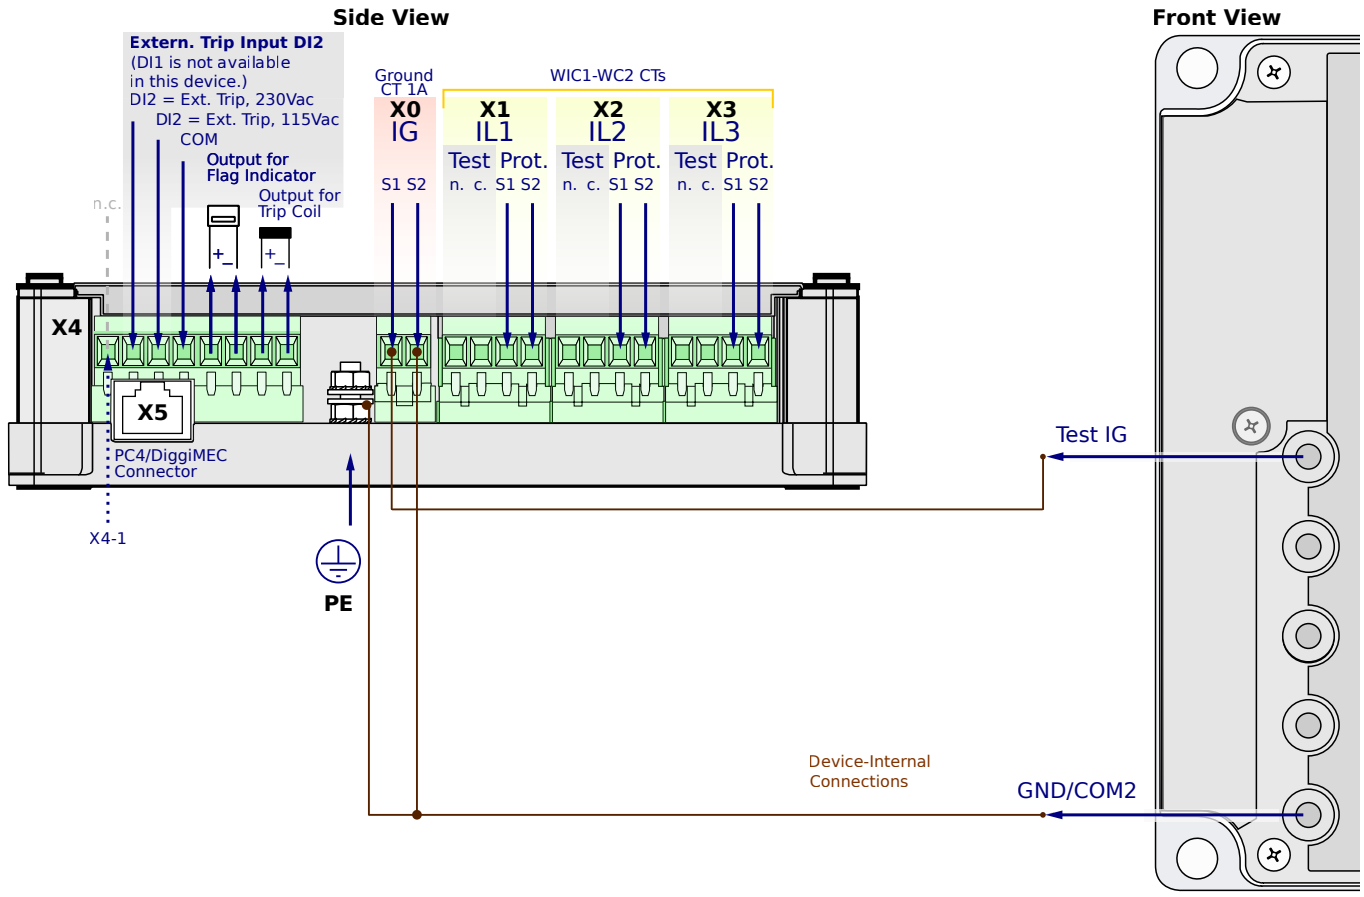


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1SA0

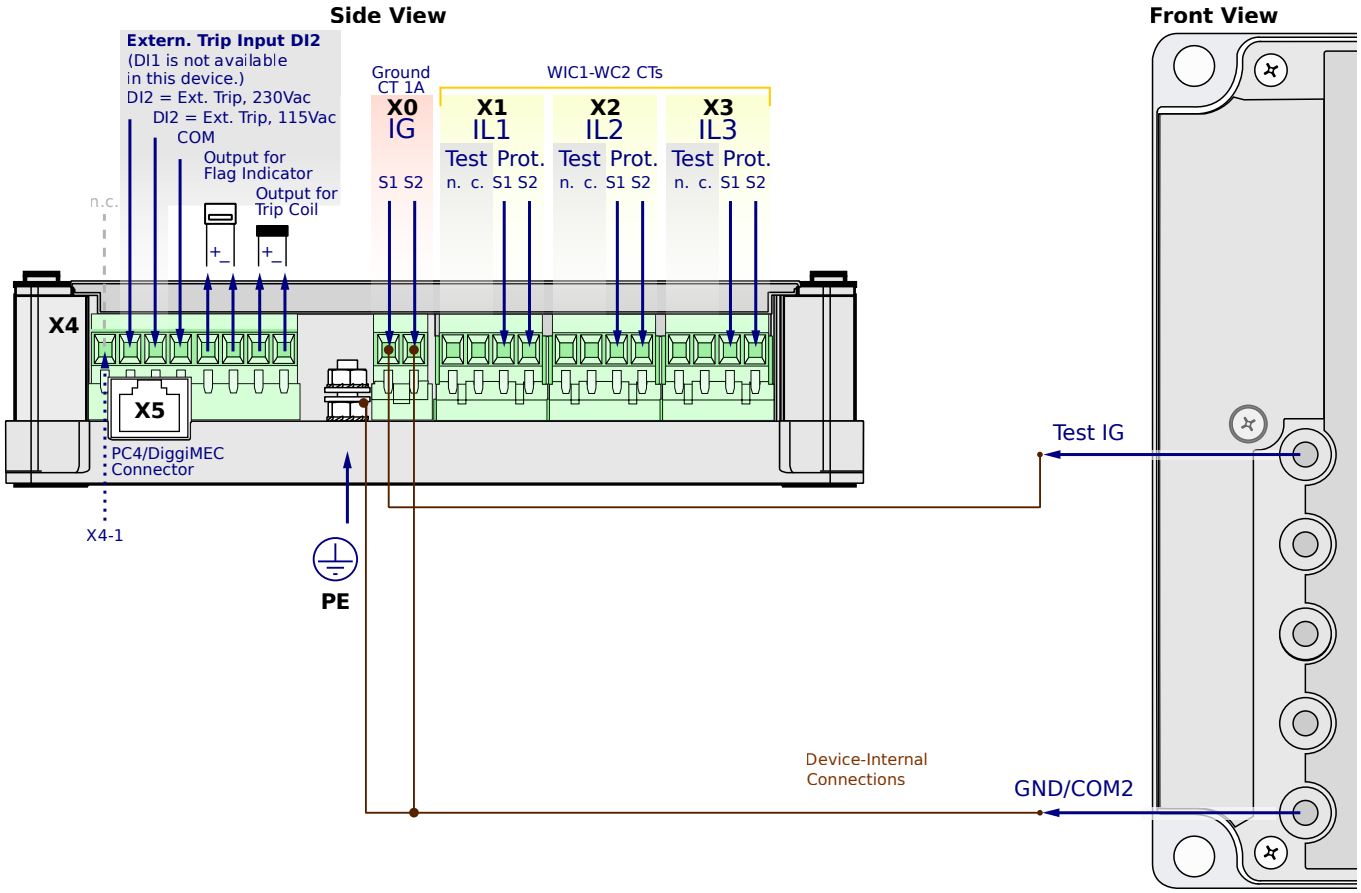


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1SAH

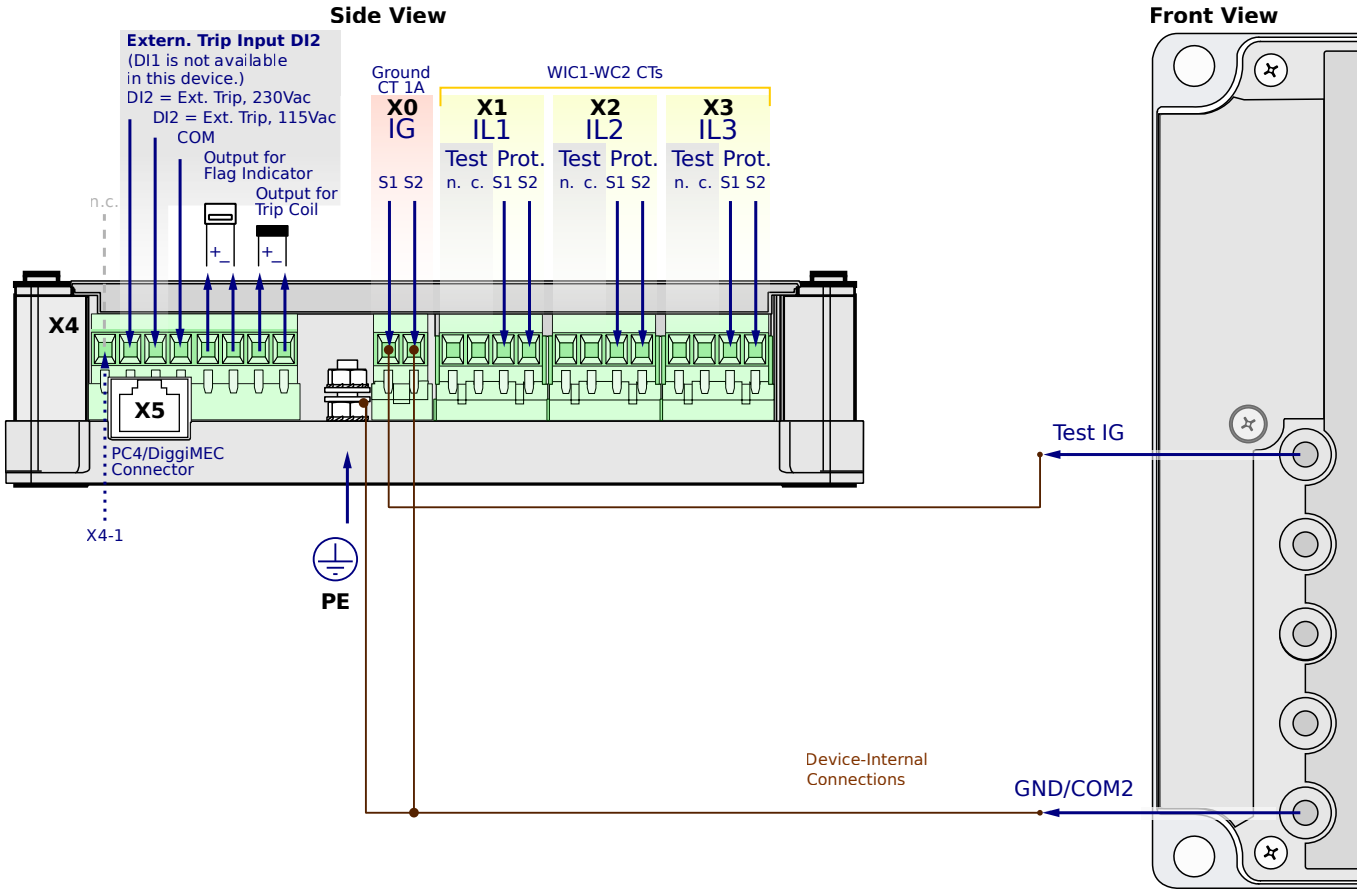


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1AA0

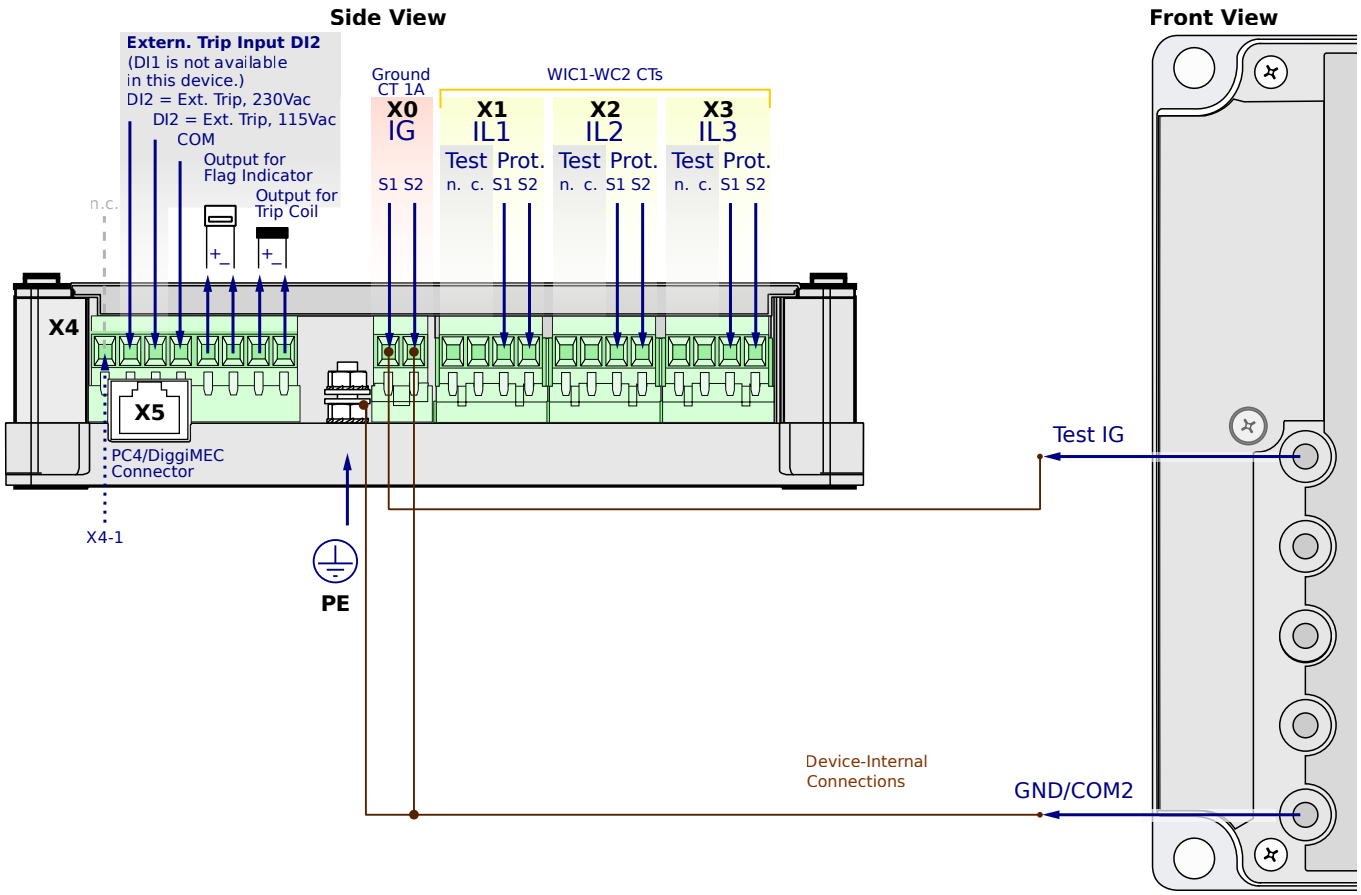


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1AAH

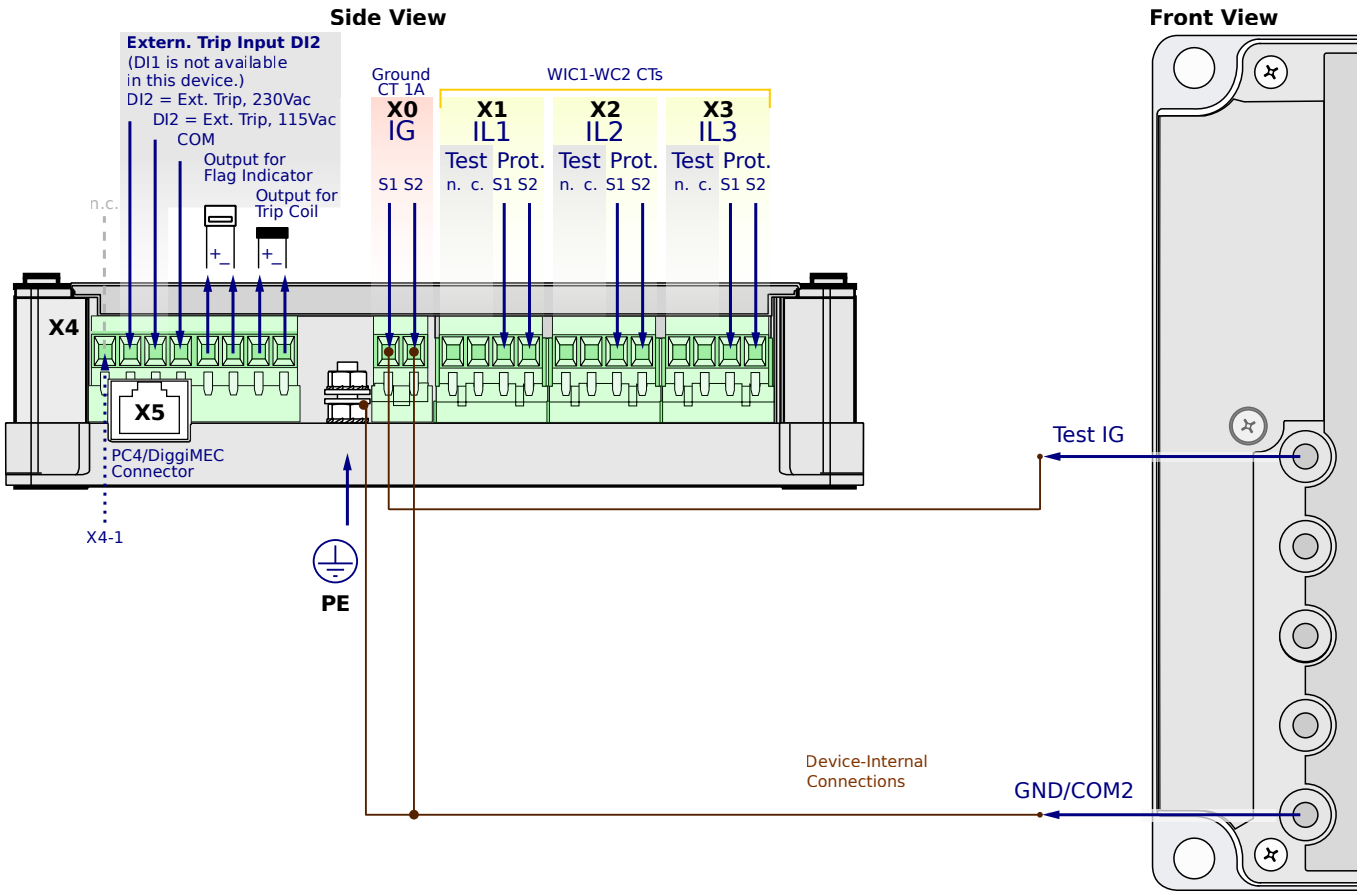


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1PA0

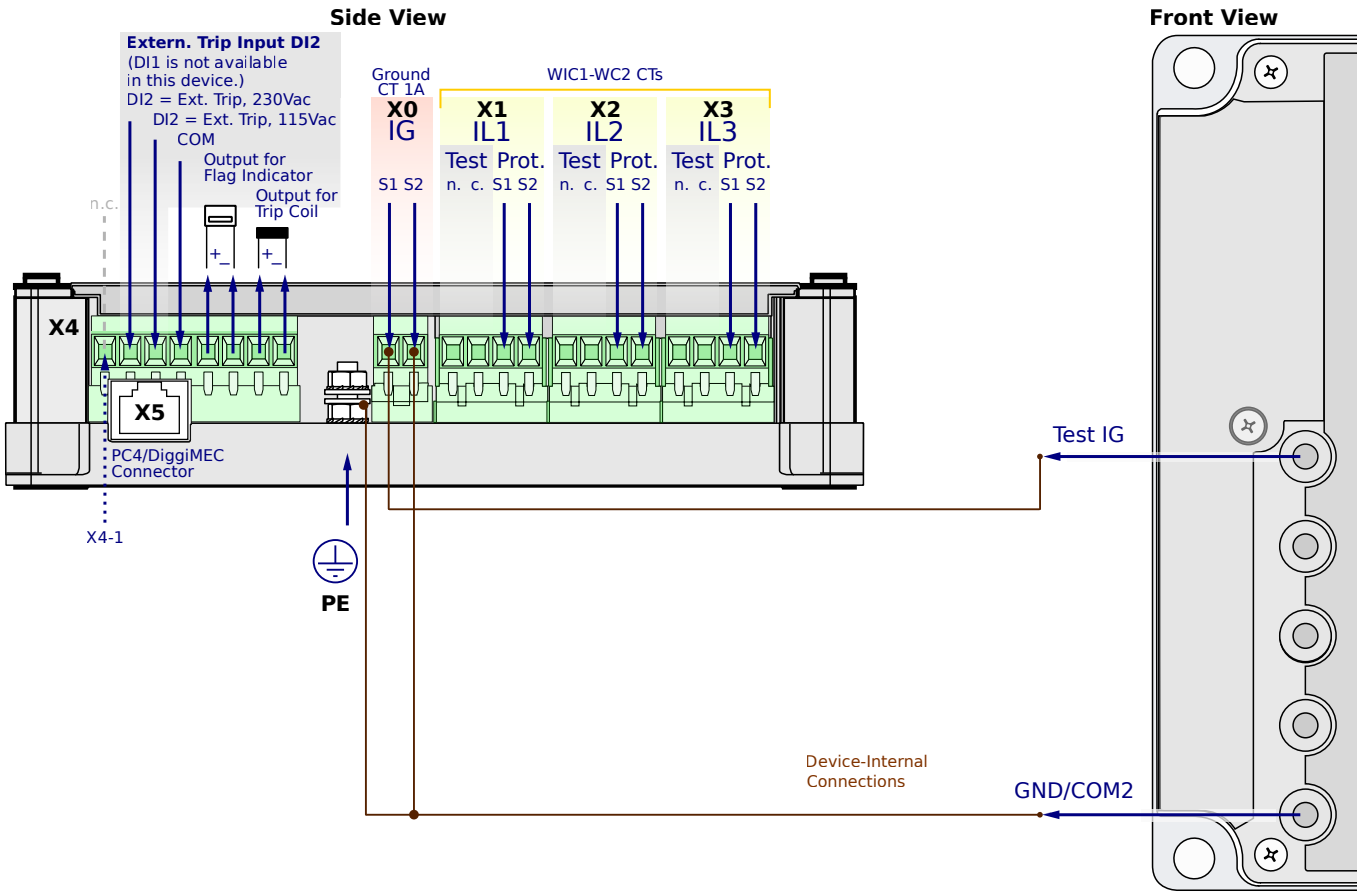


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF1PAH

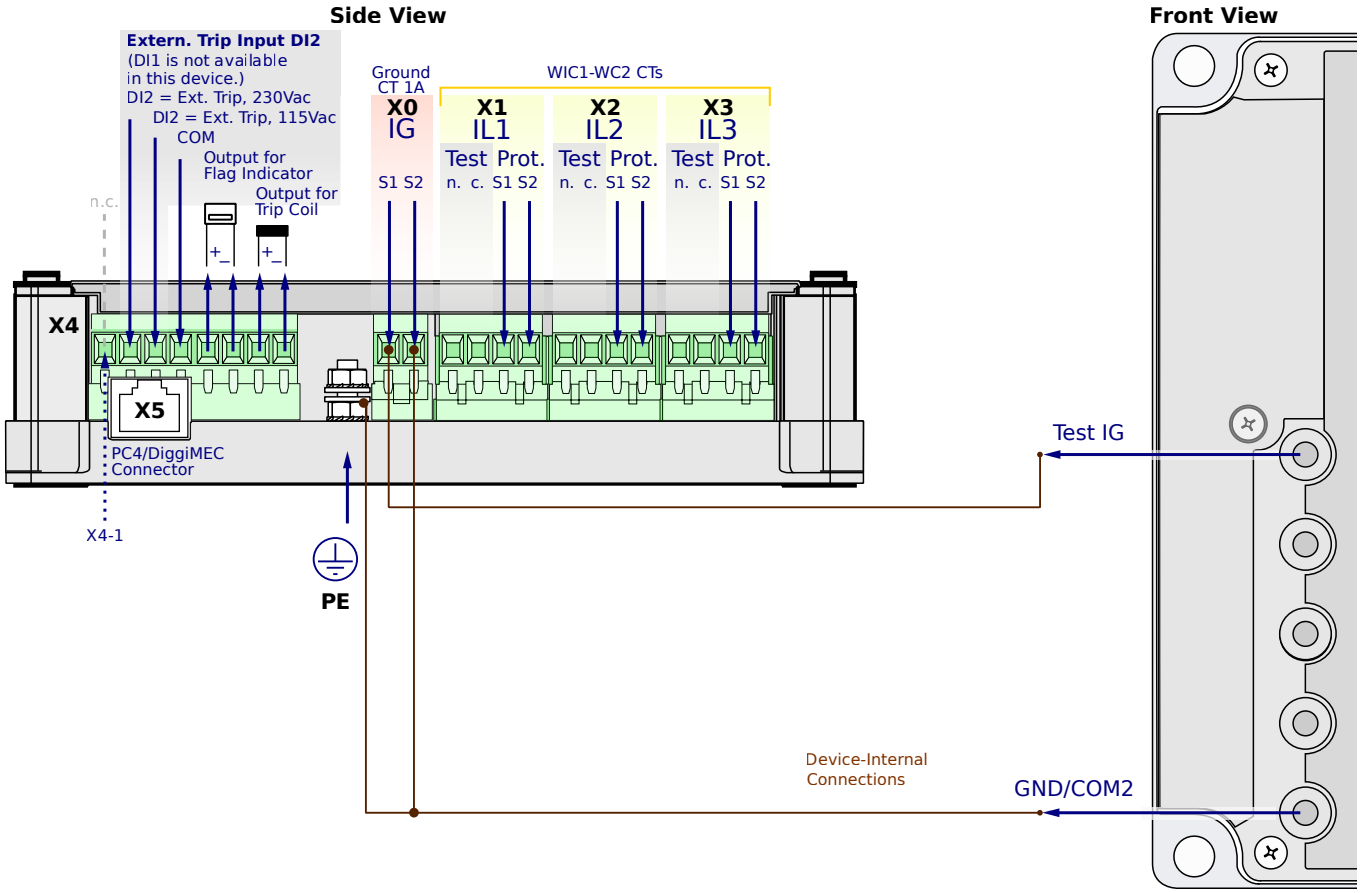


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2SA0

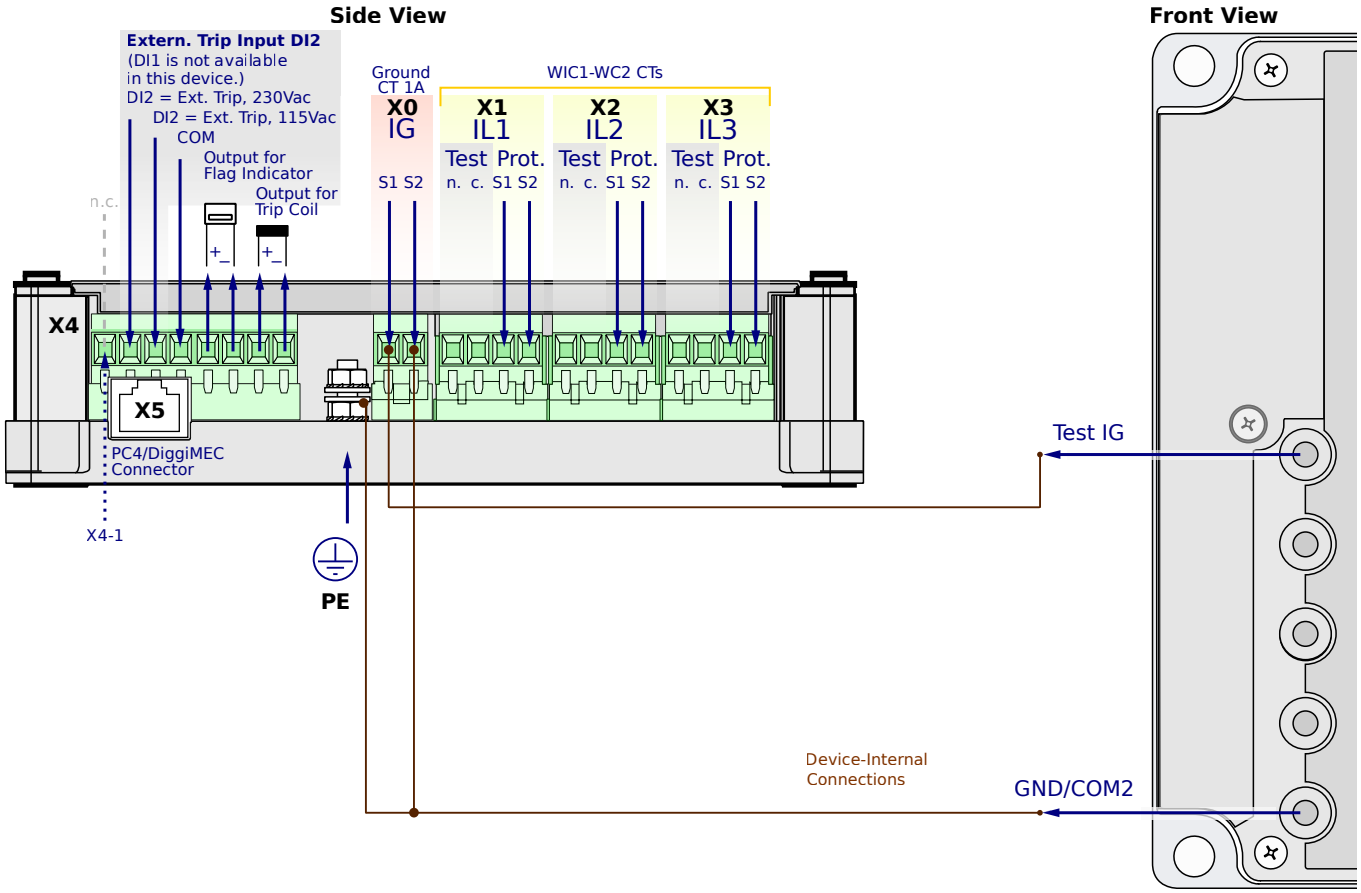


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2SAH

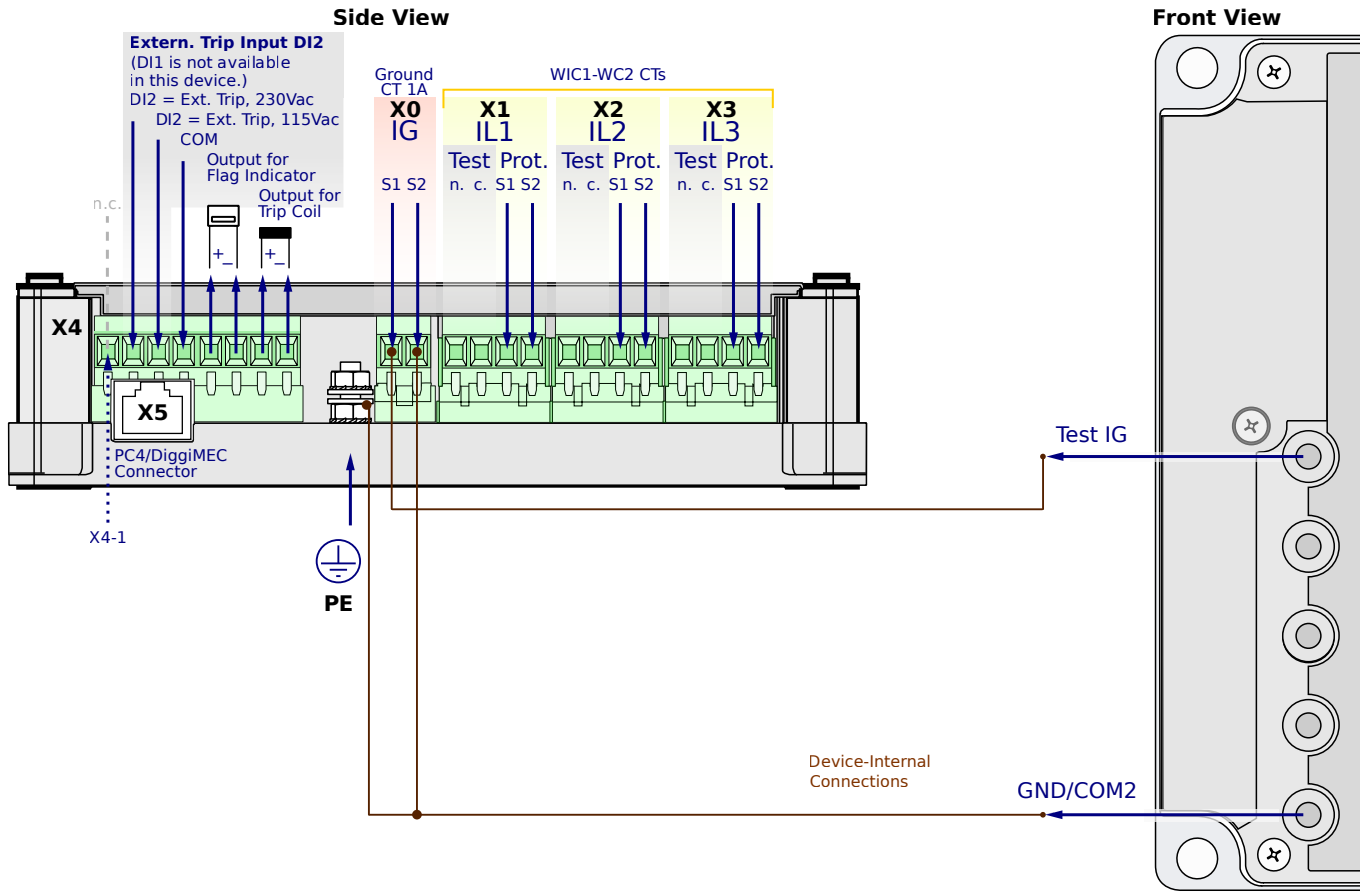


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2AA0

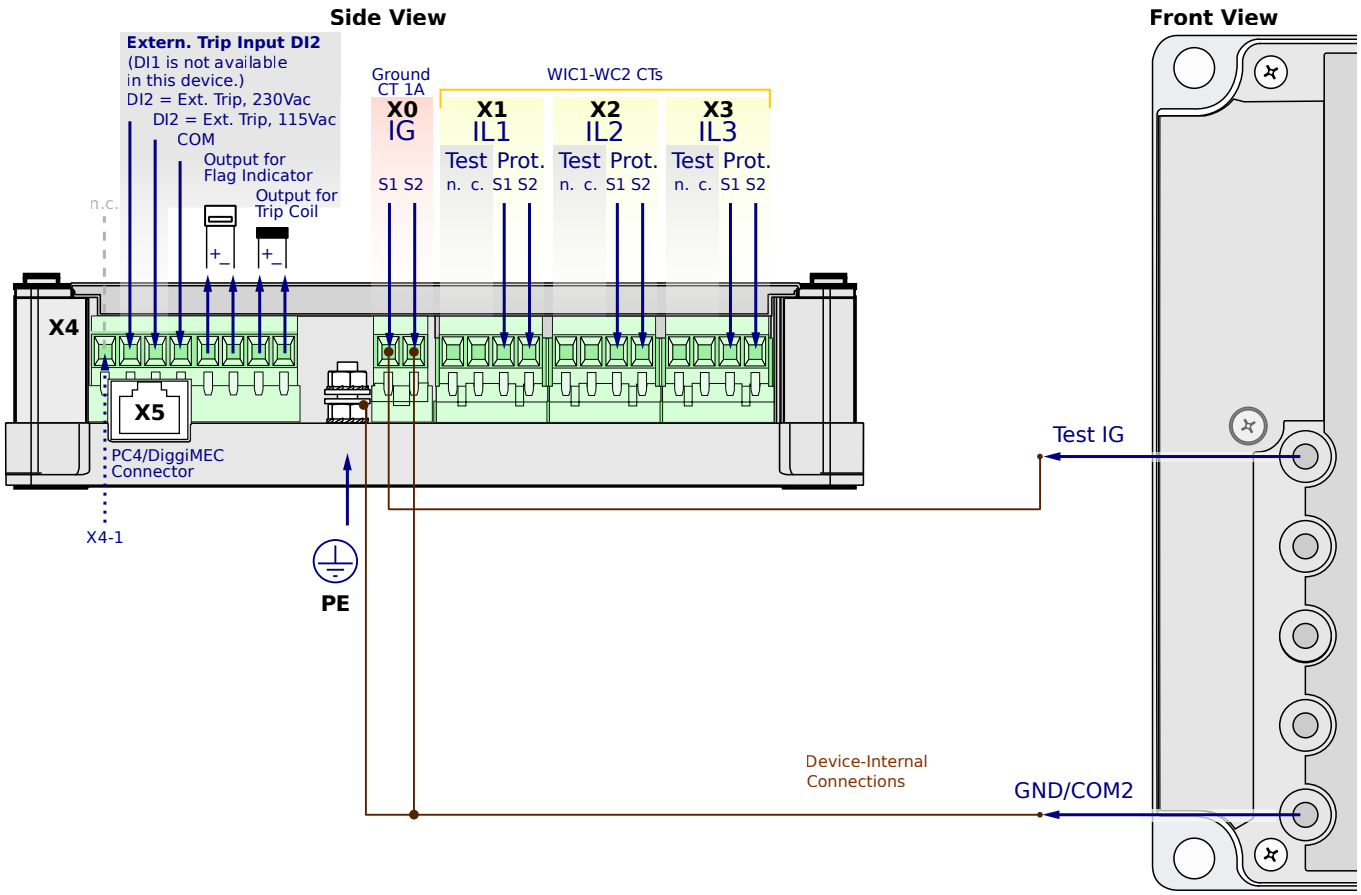


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2AAH

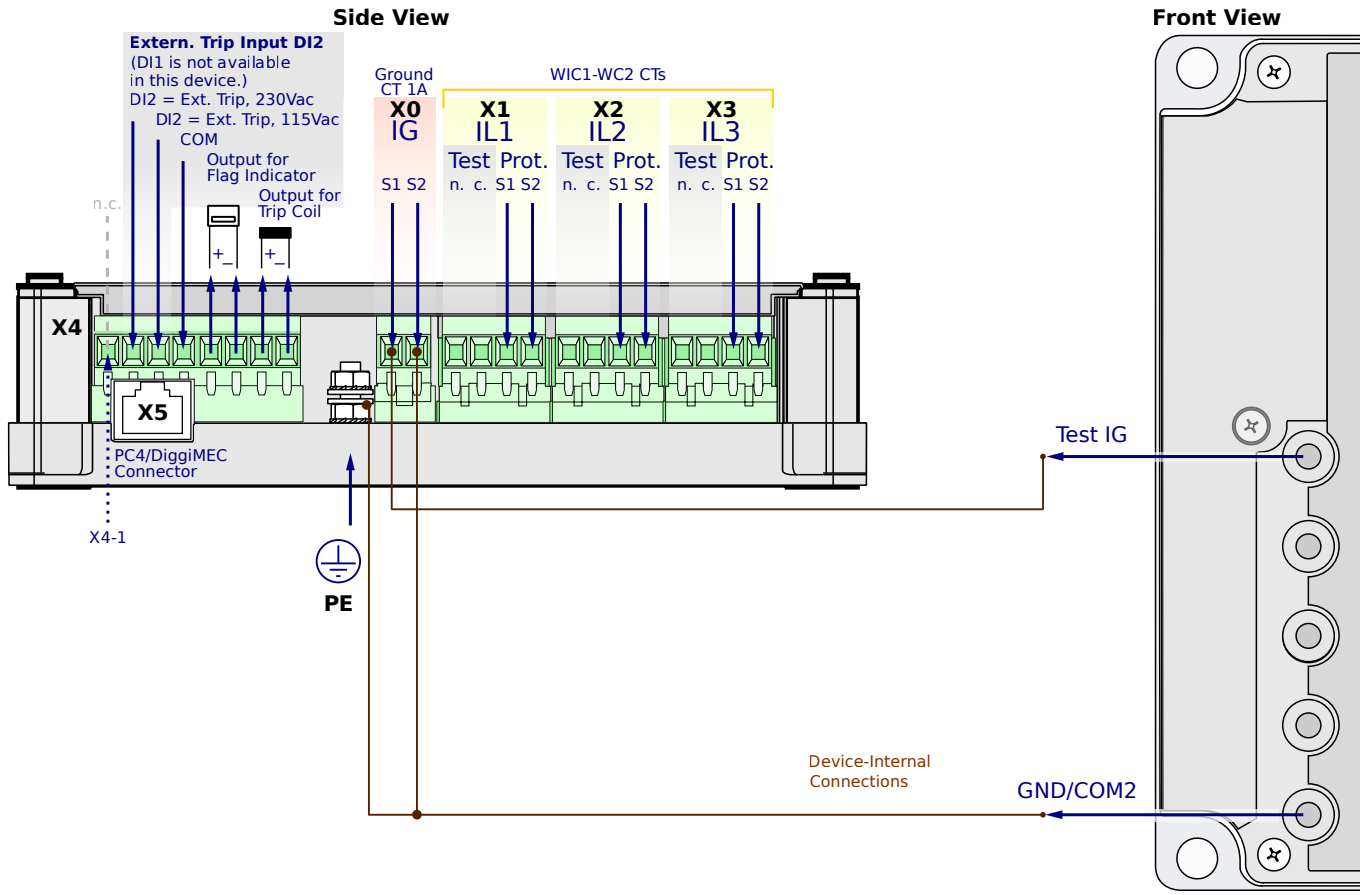


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2PA0

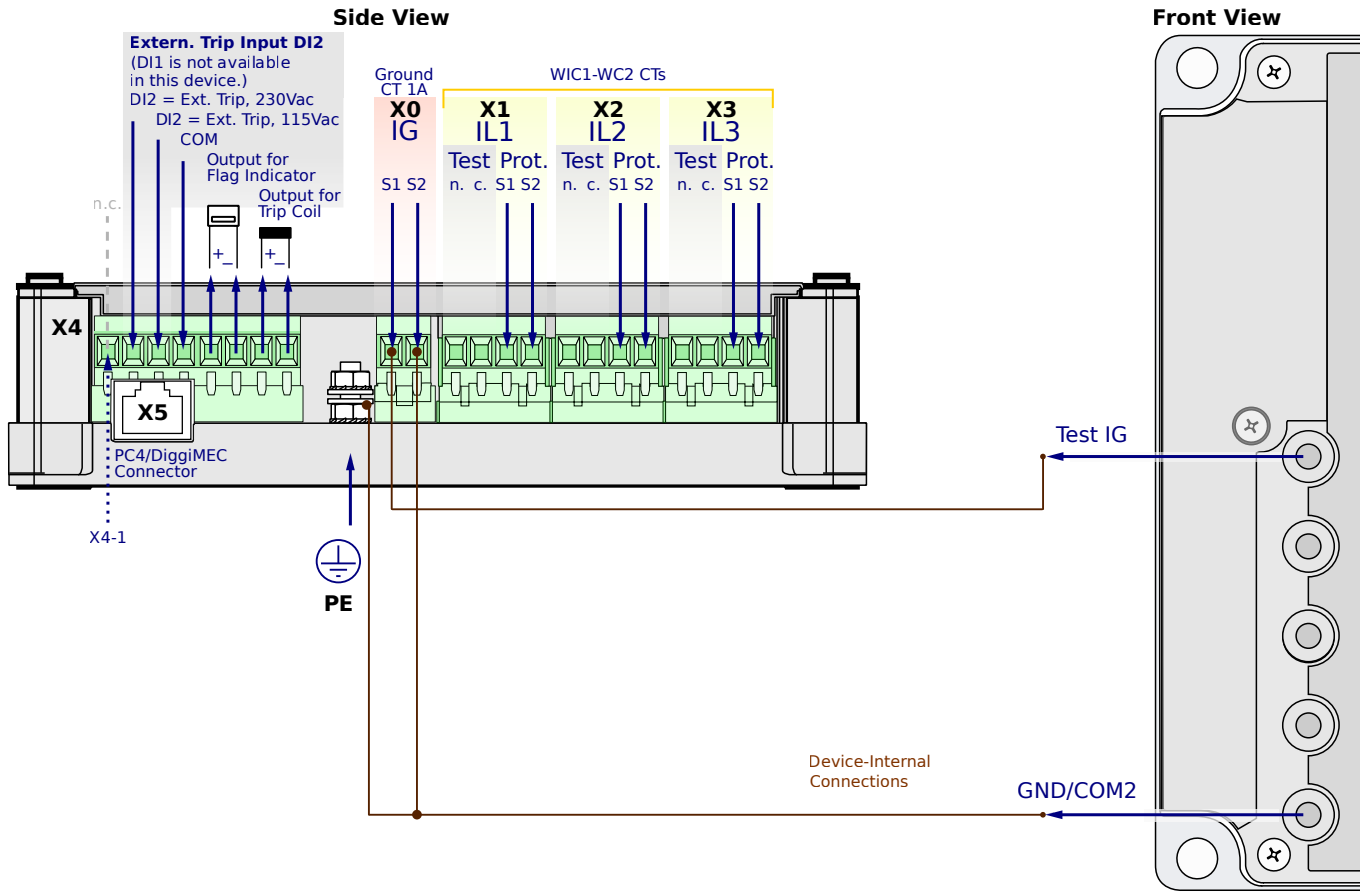


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NF2PAH

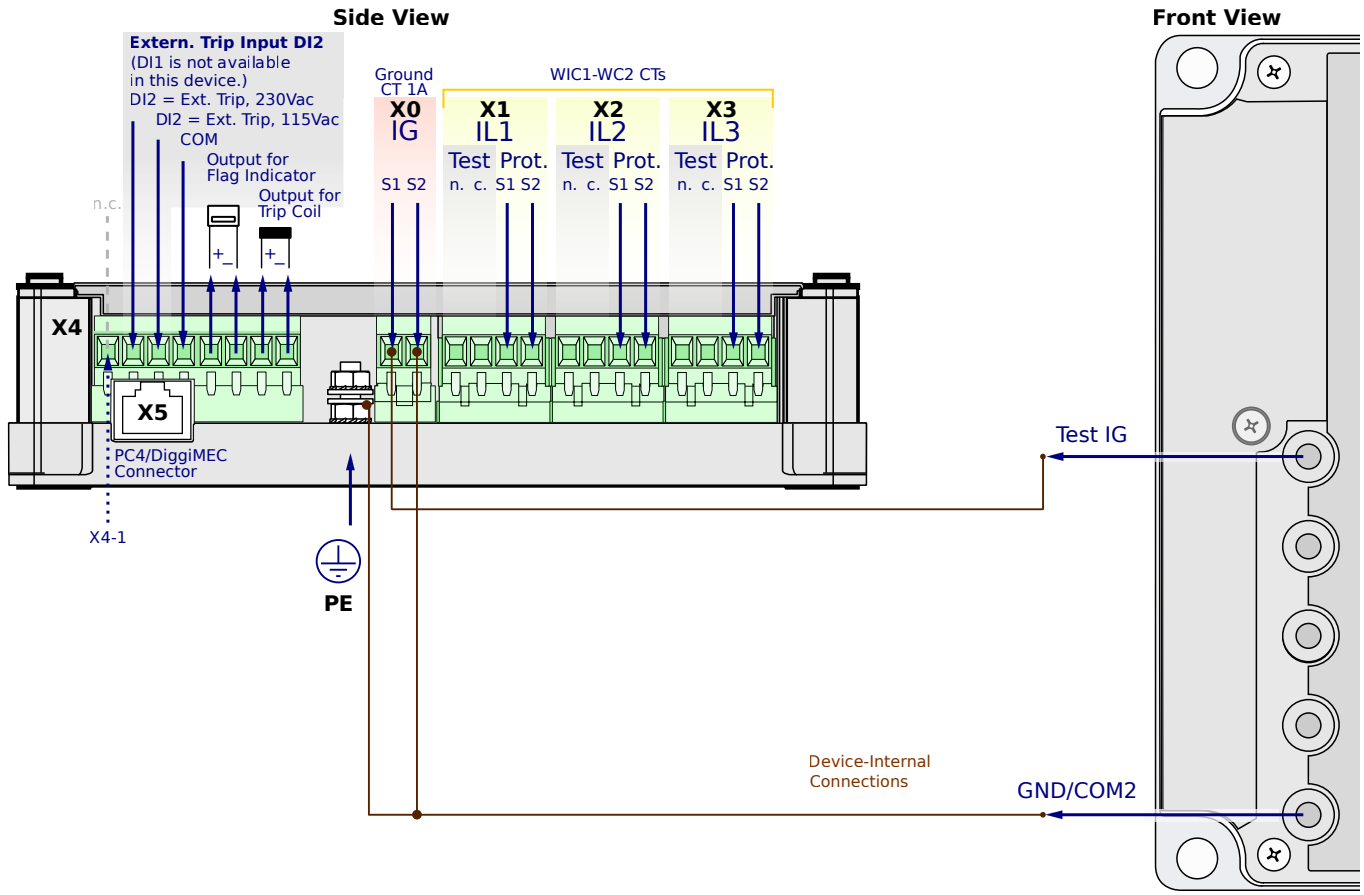


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0SA0

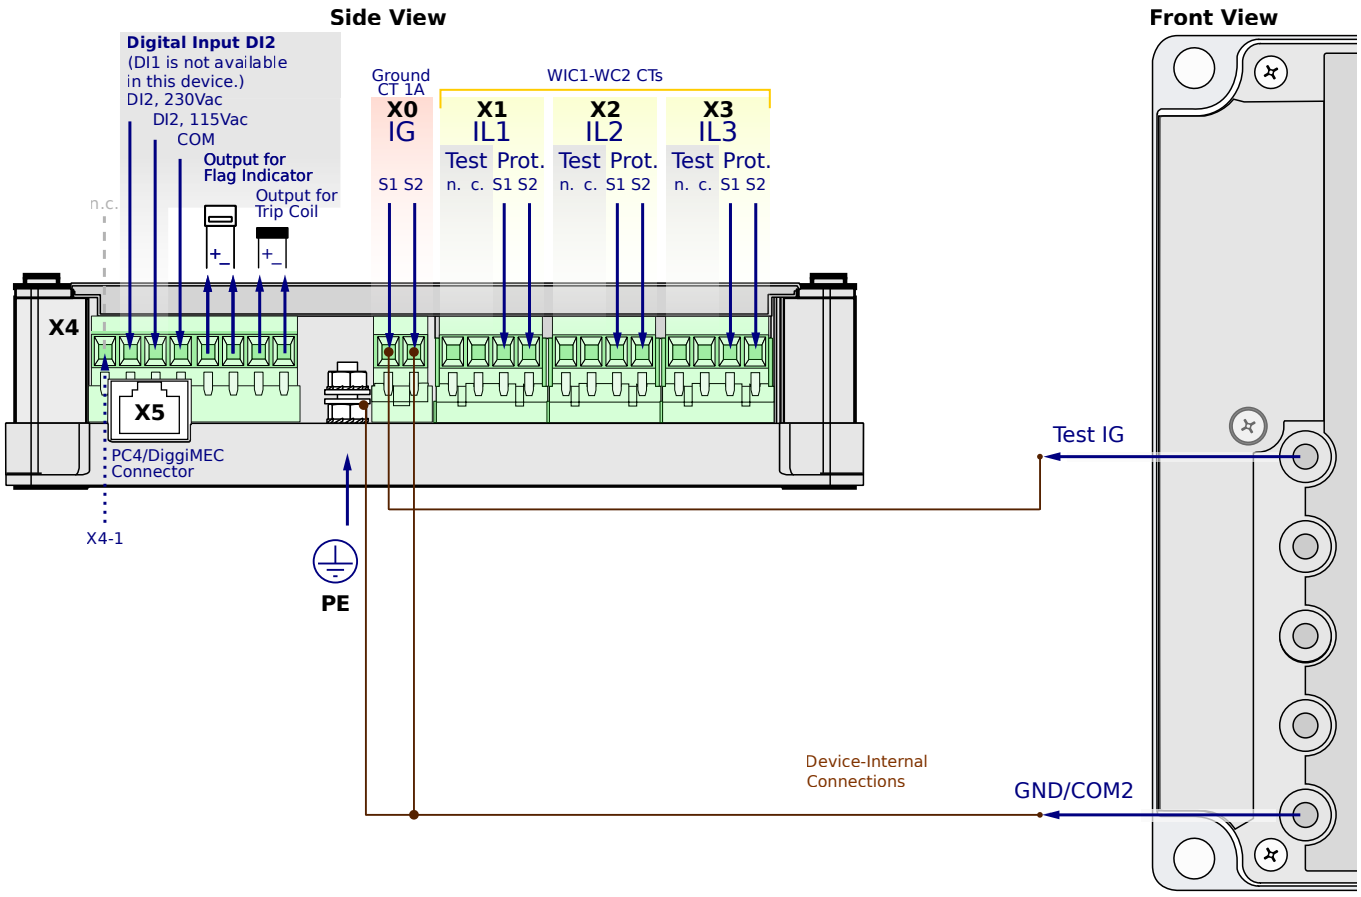


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0SAH

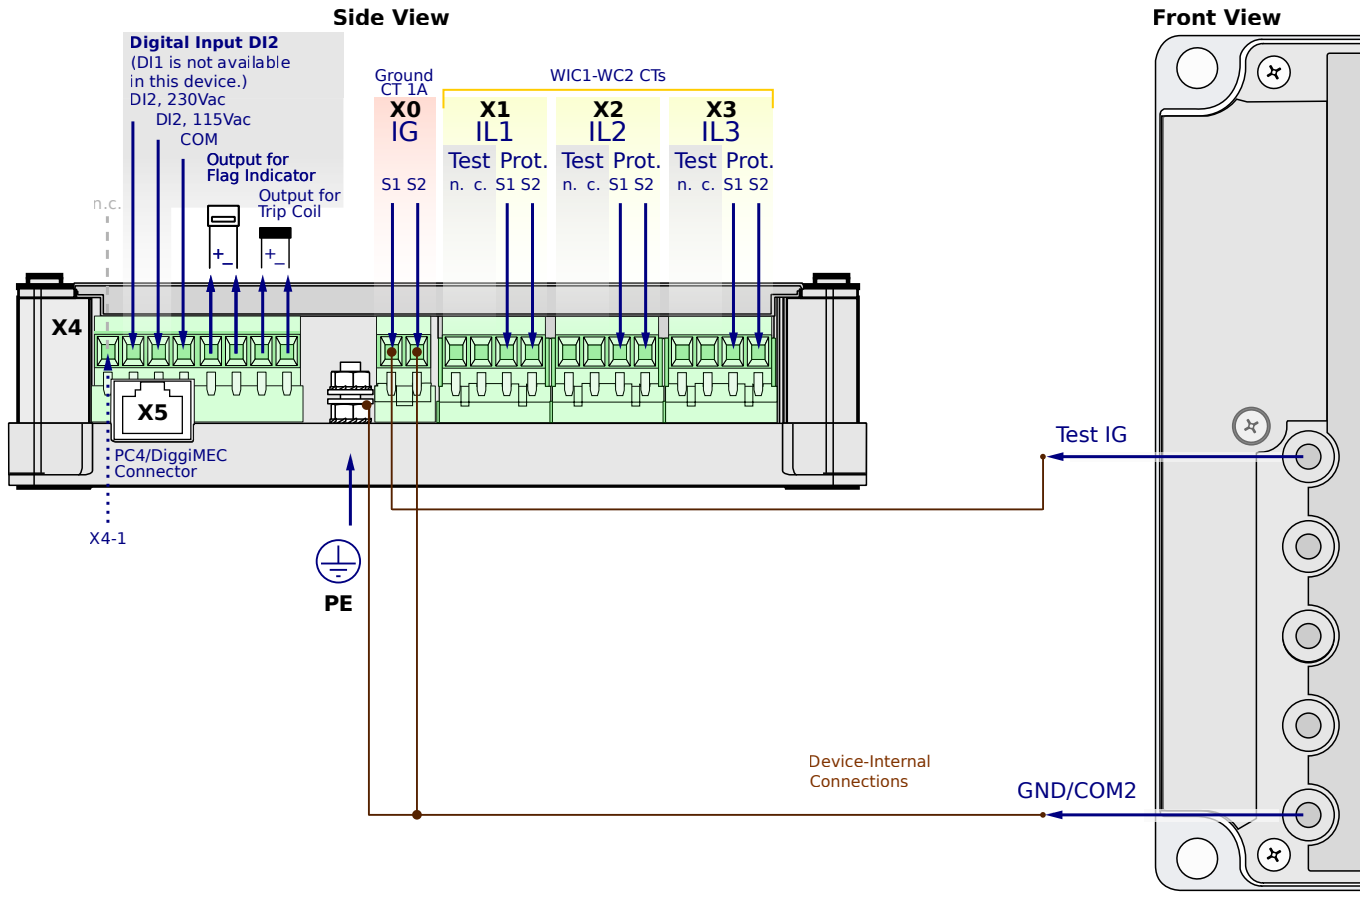


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0AA0

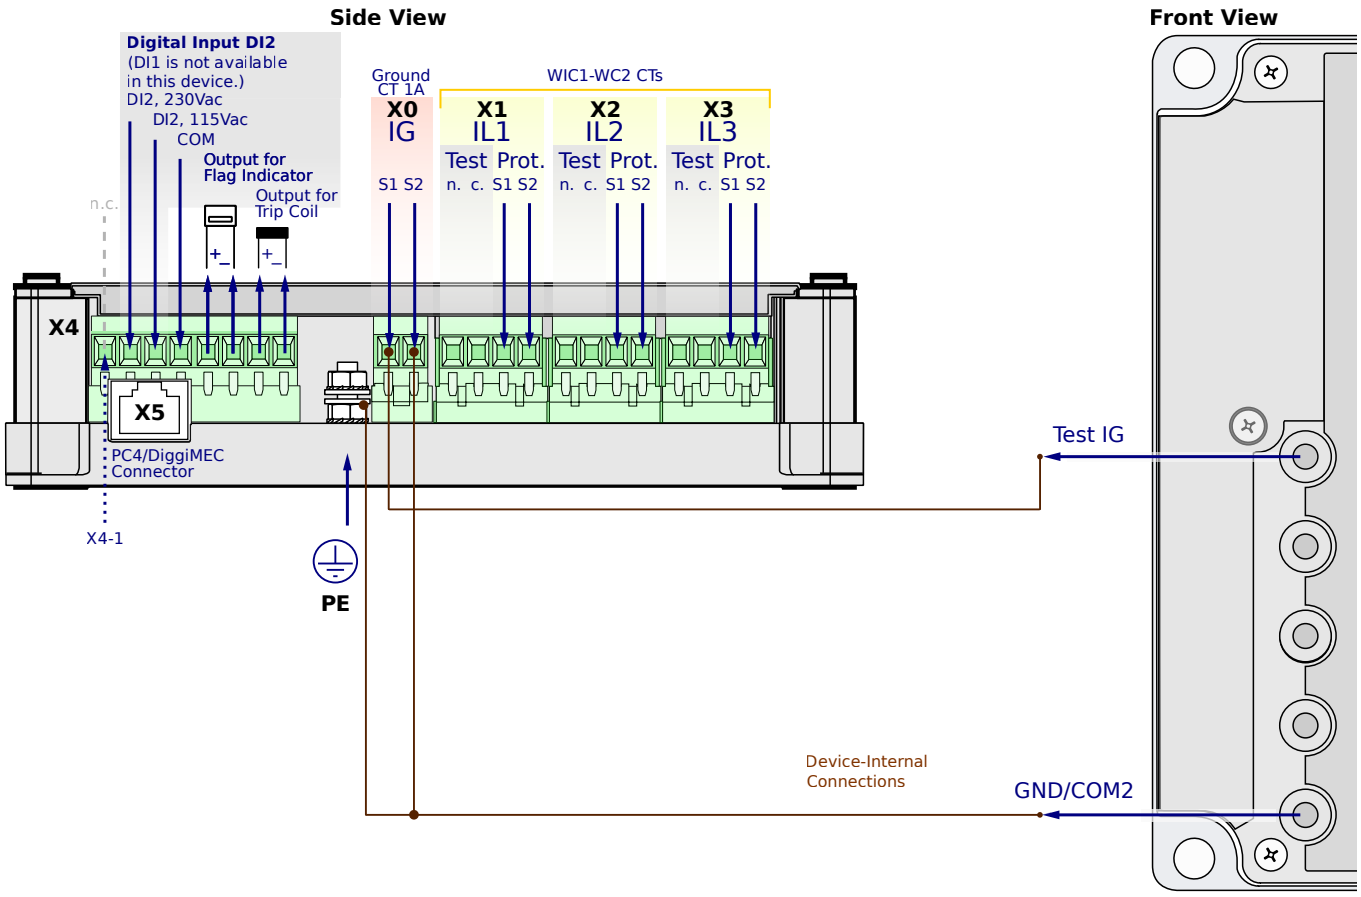


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0AAH

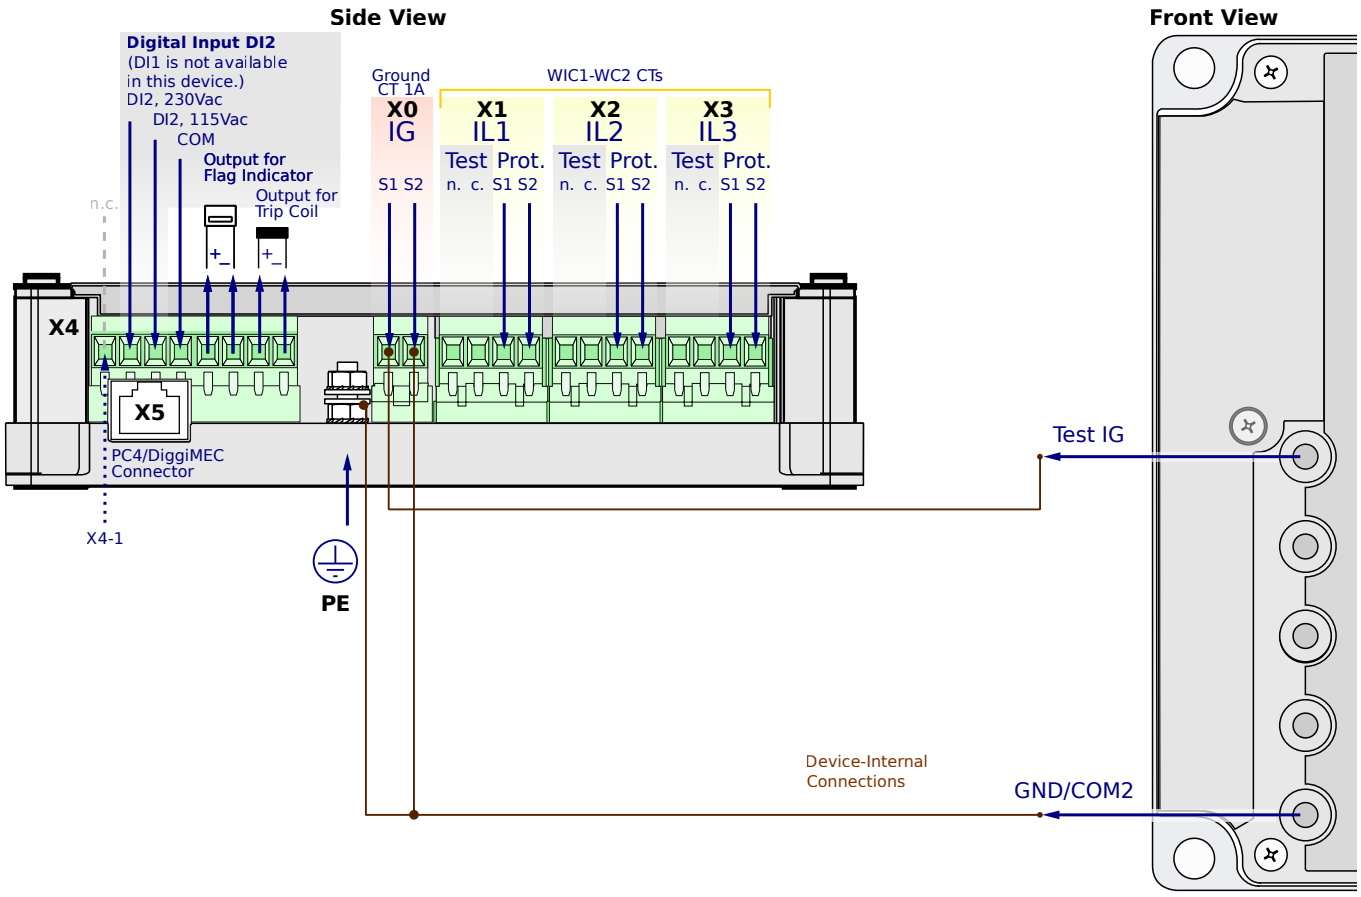


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0PA0

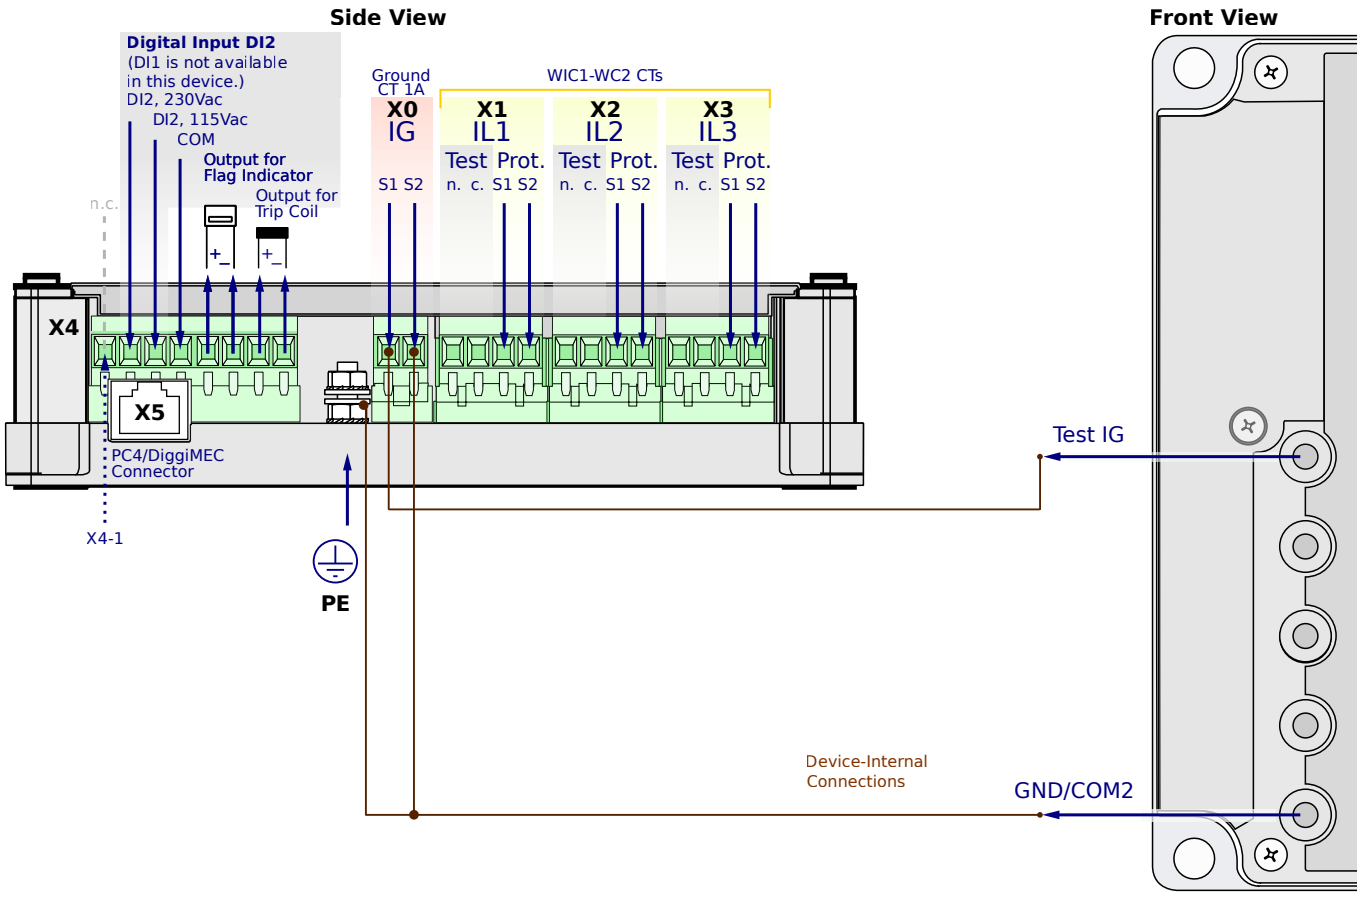


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC0PAH

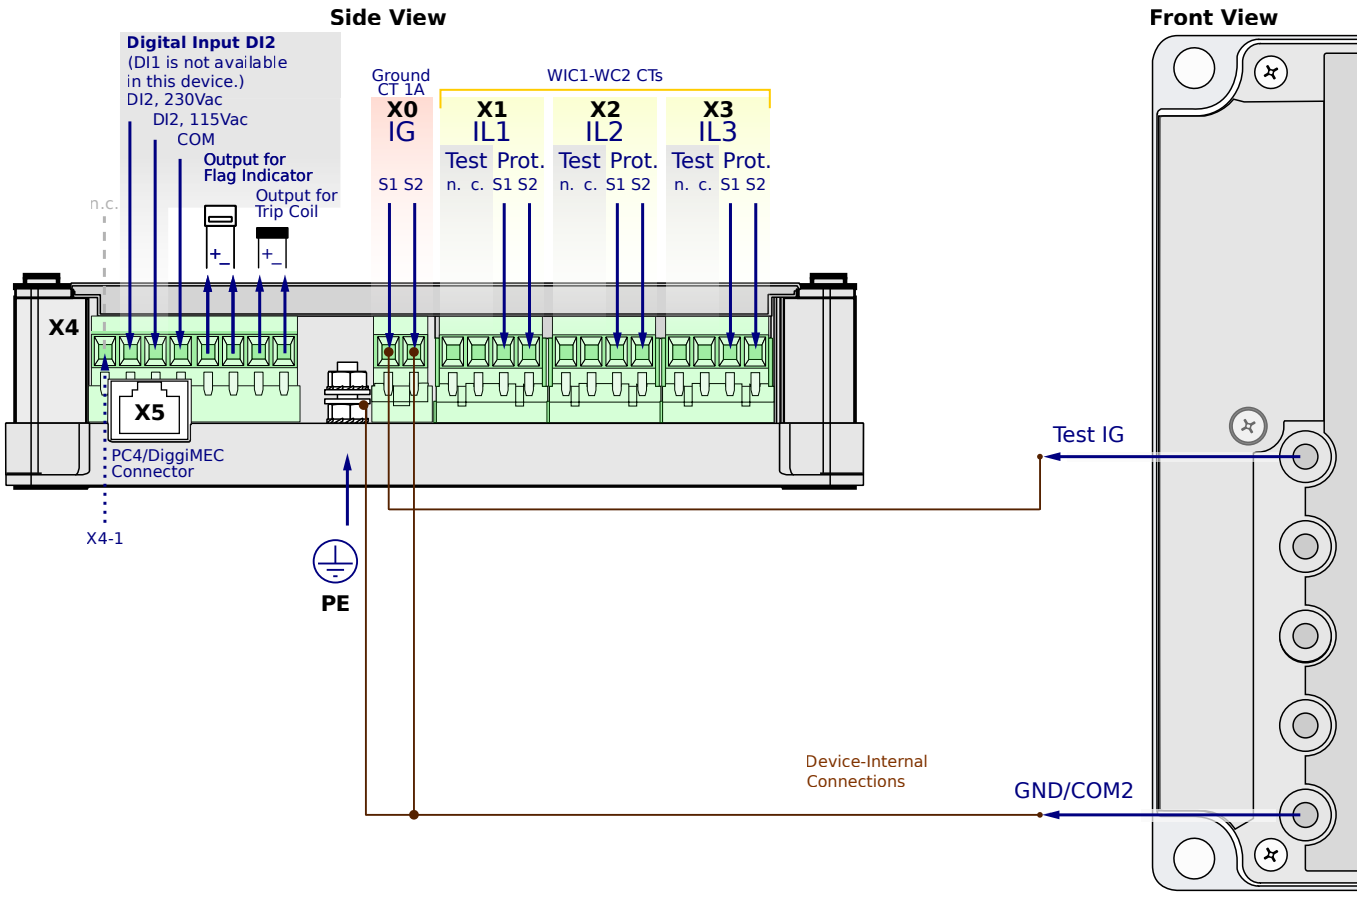


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1SA0

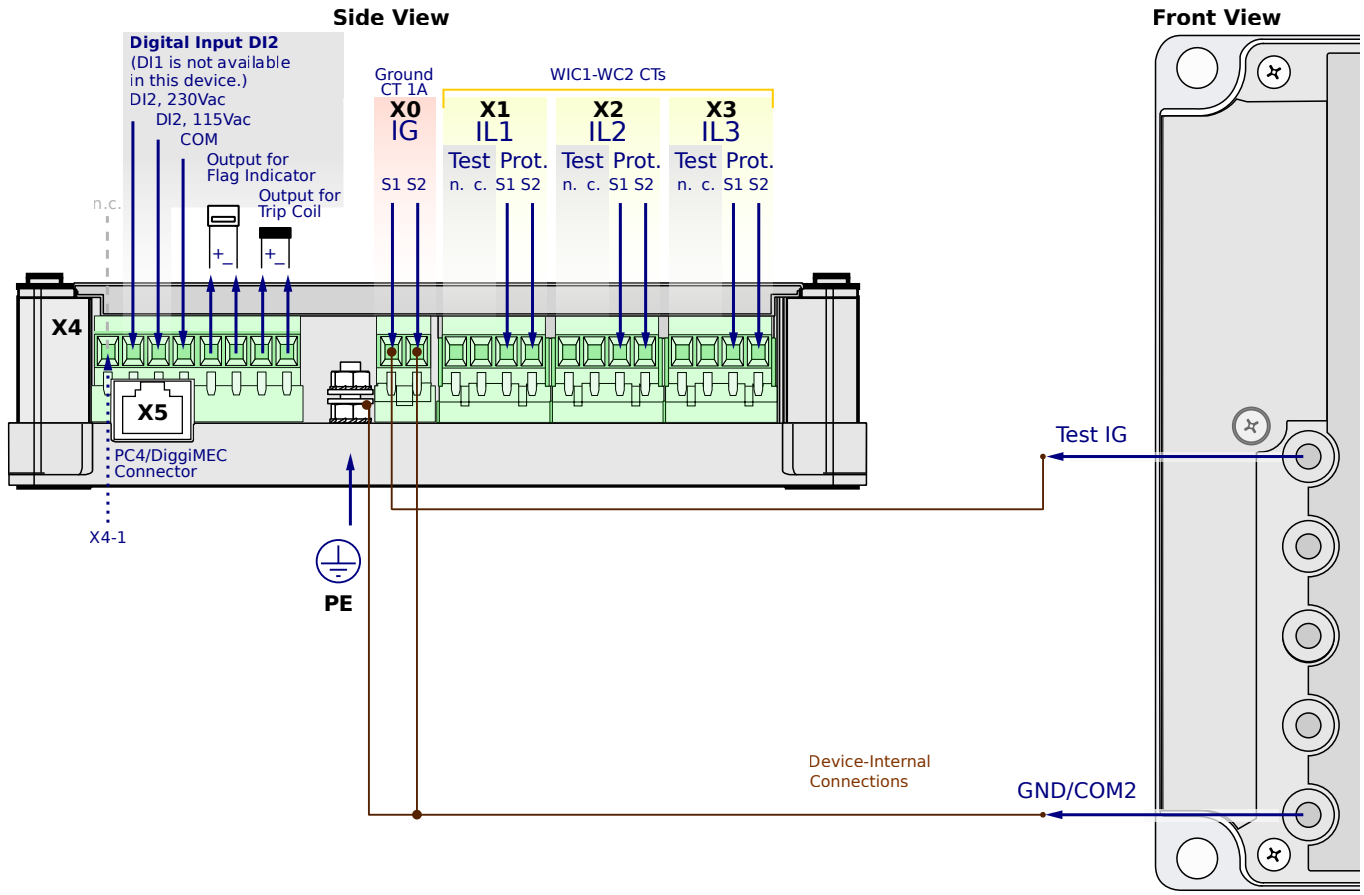


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1SAH

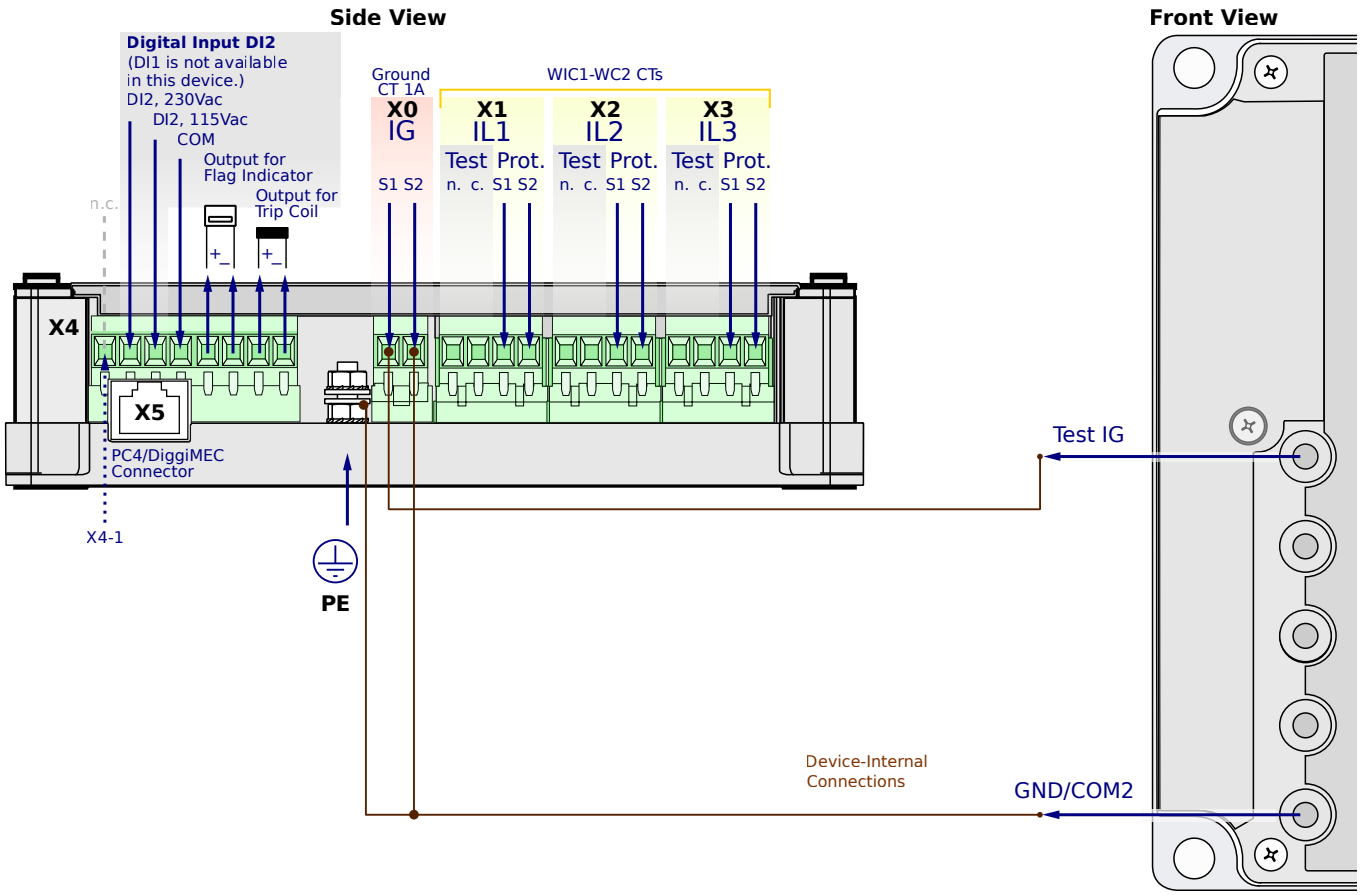


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1AA0

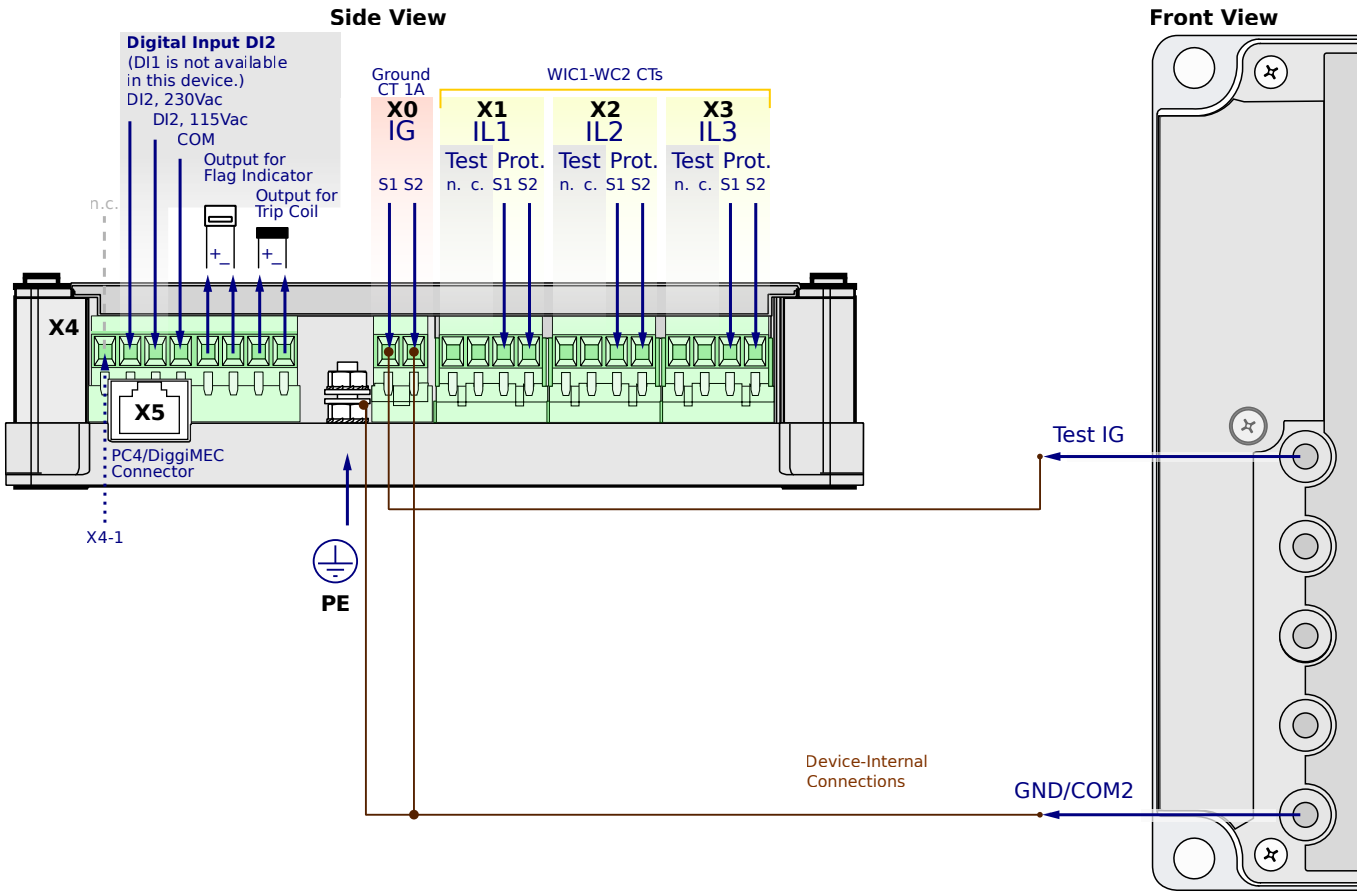


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1AAH

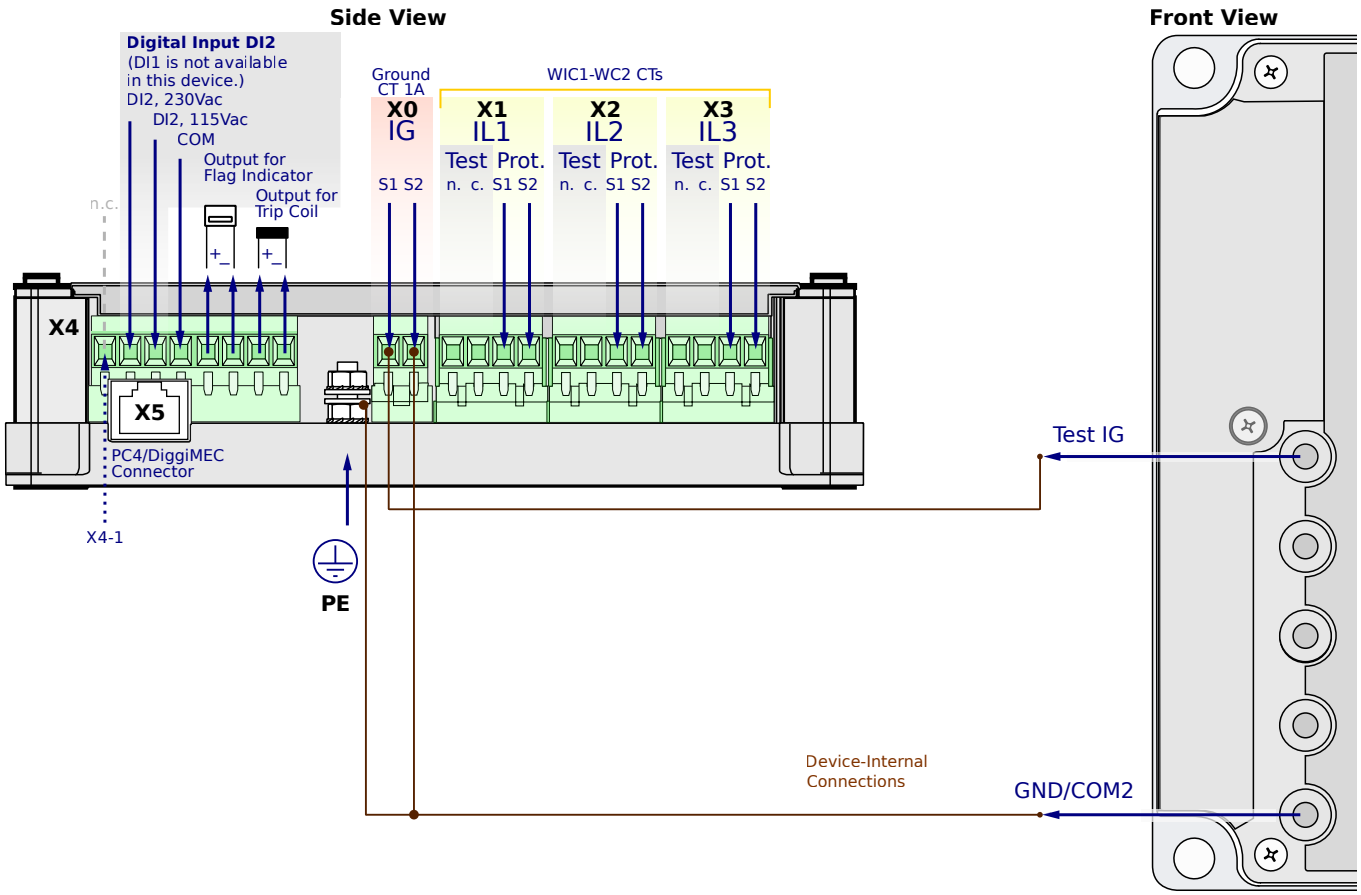


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1PA0

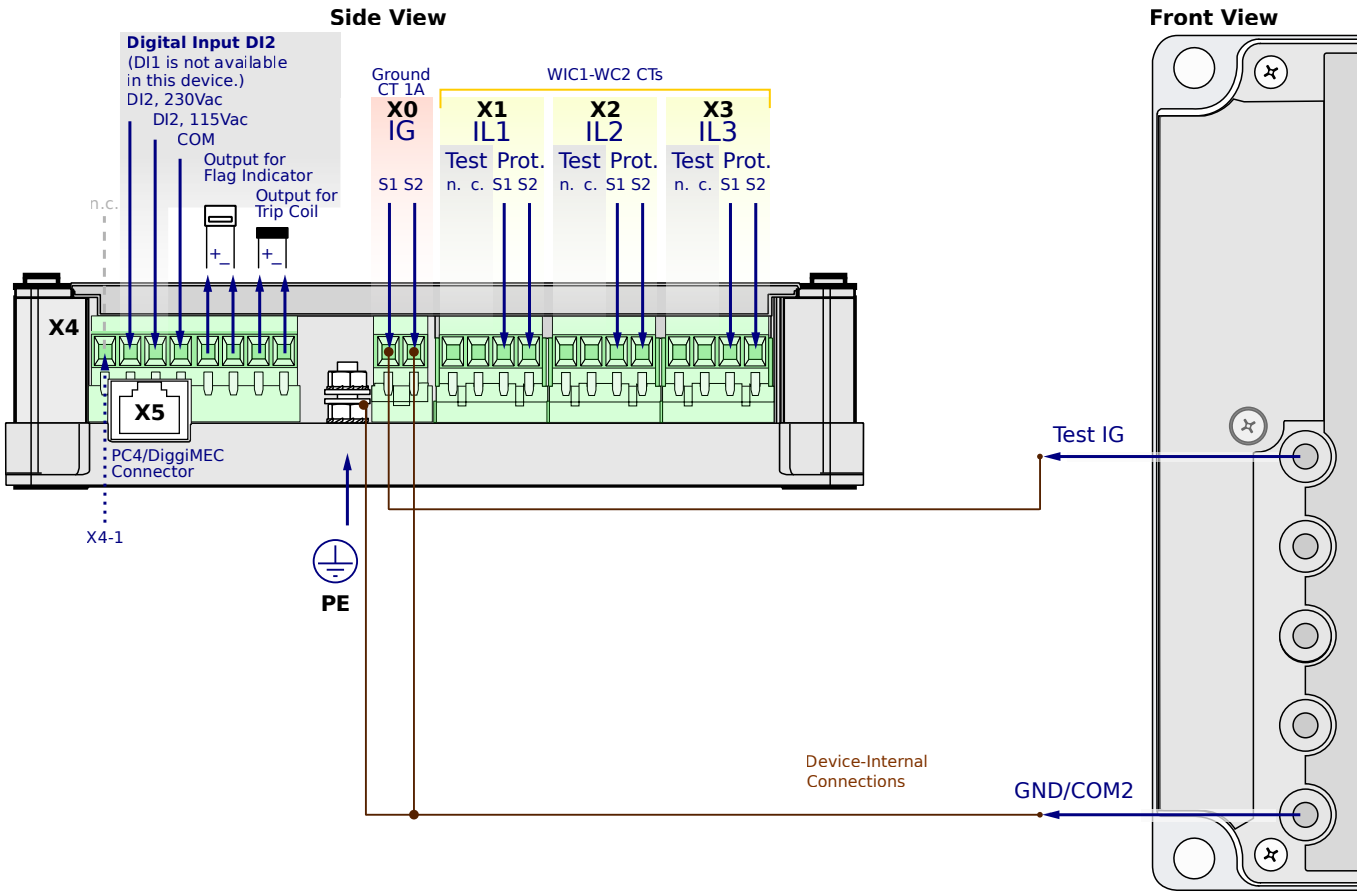


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC1PAH

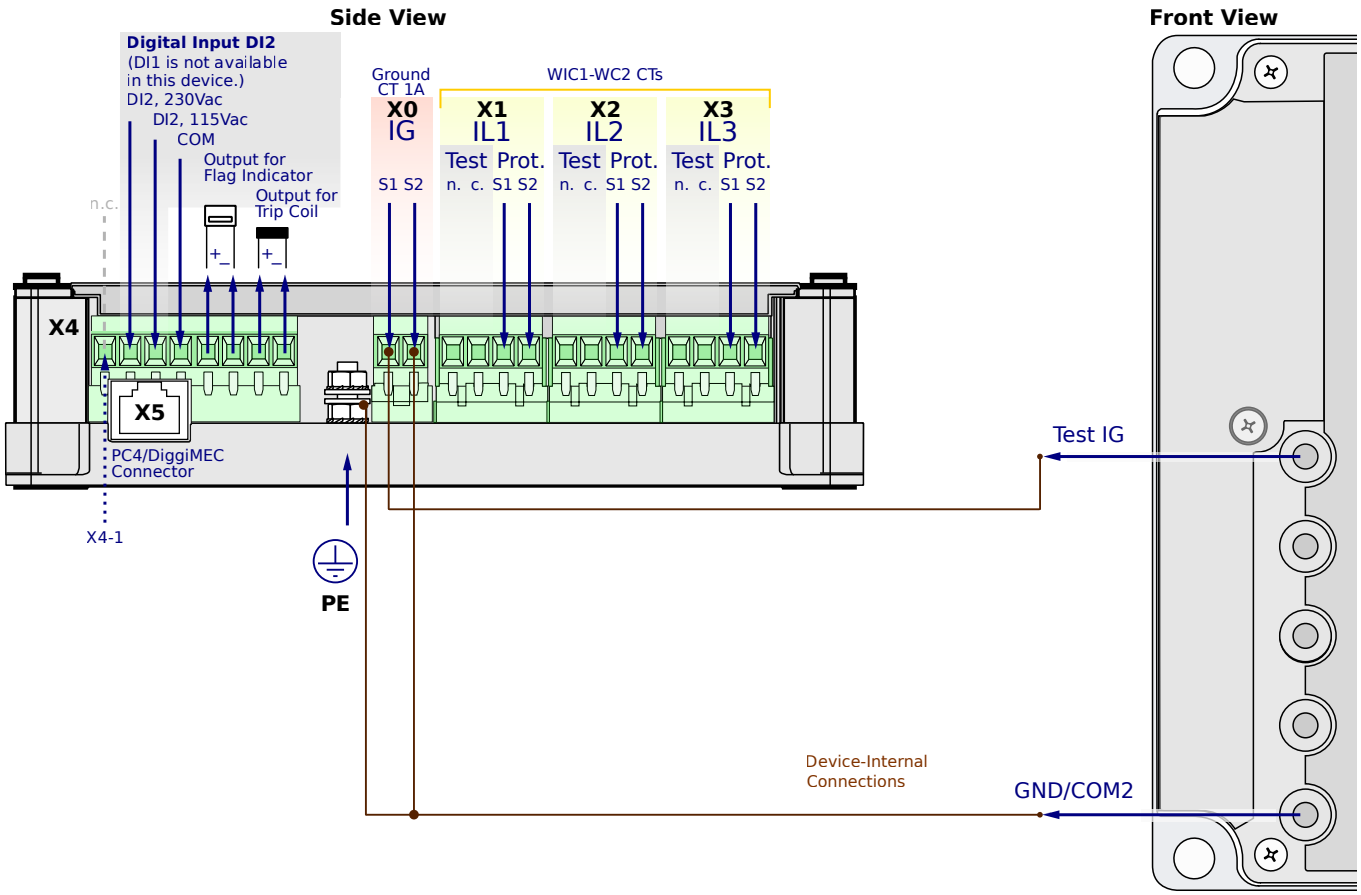


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2SA0

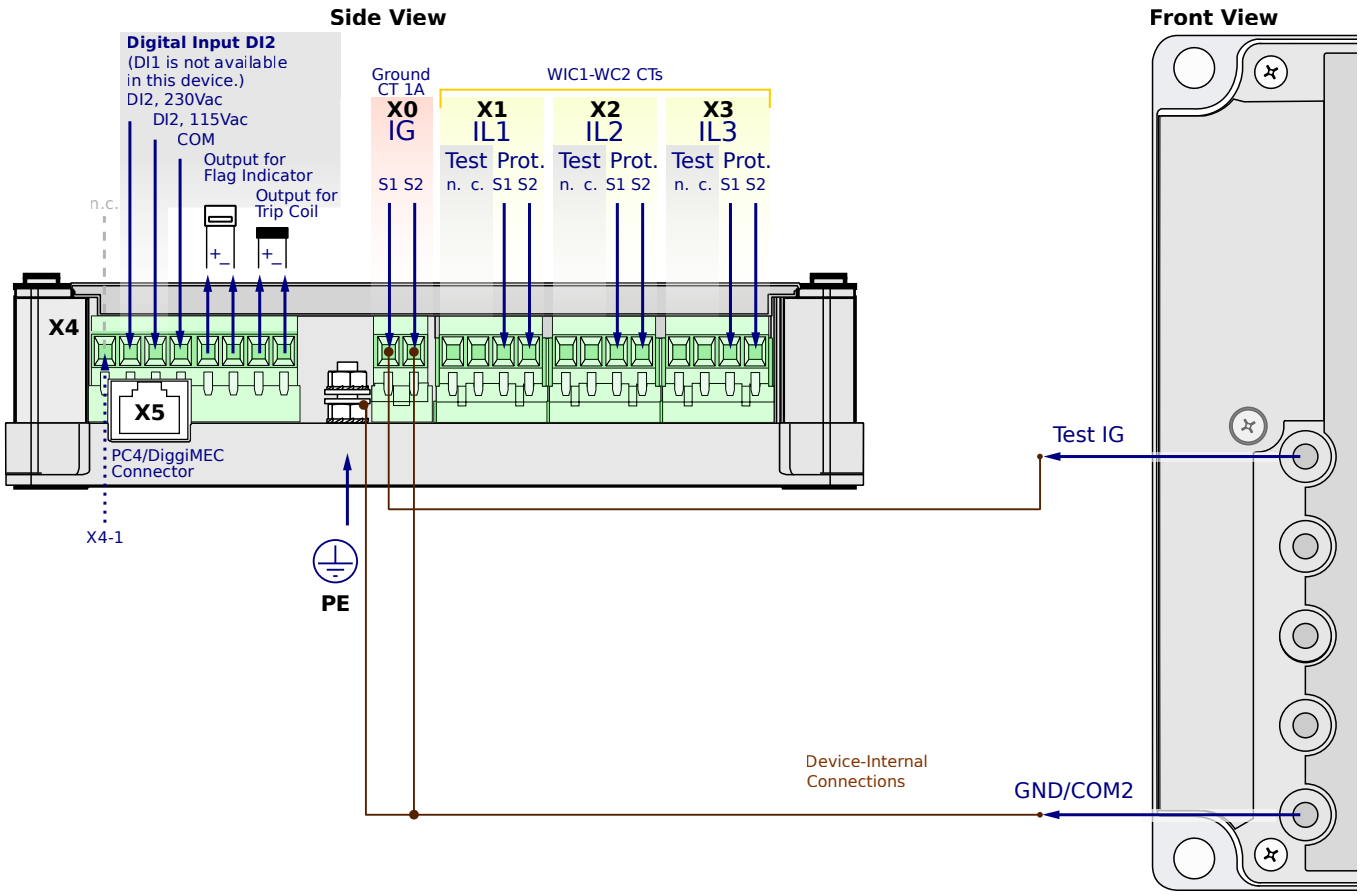


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2SAH

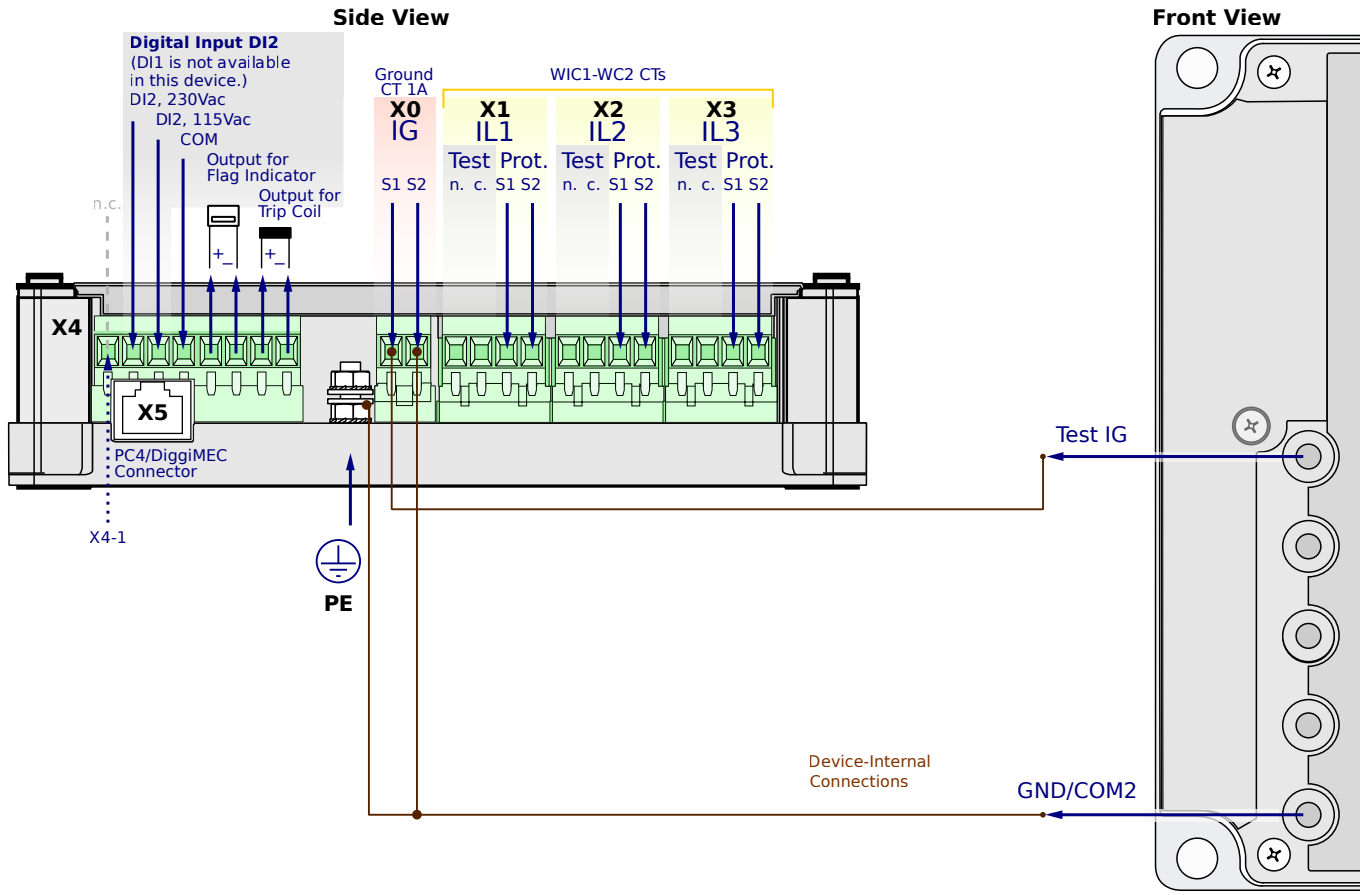


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2AA0

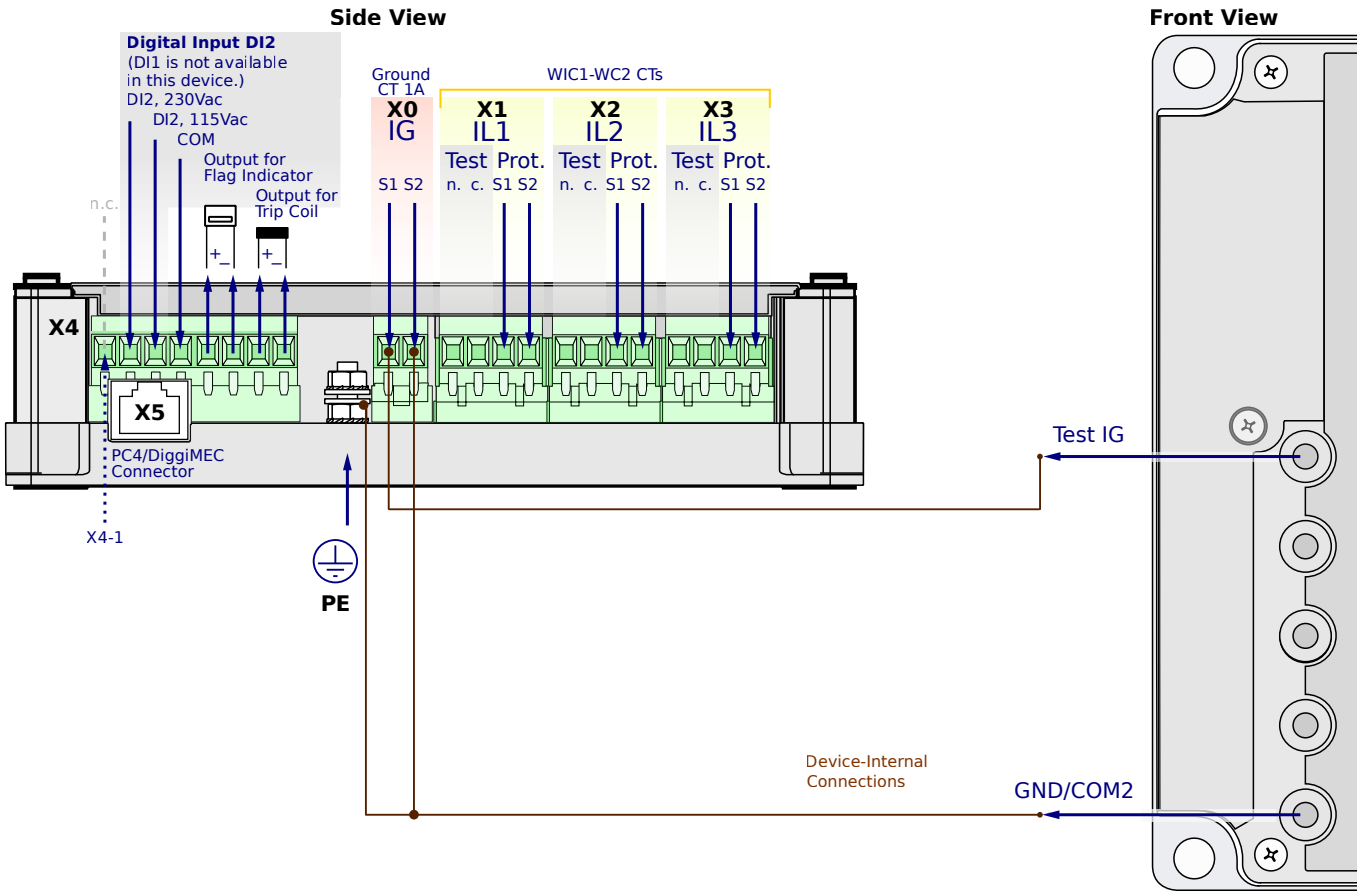


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2AAH

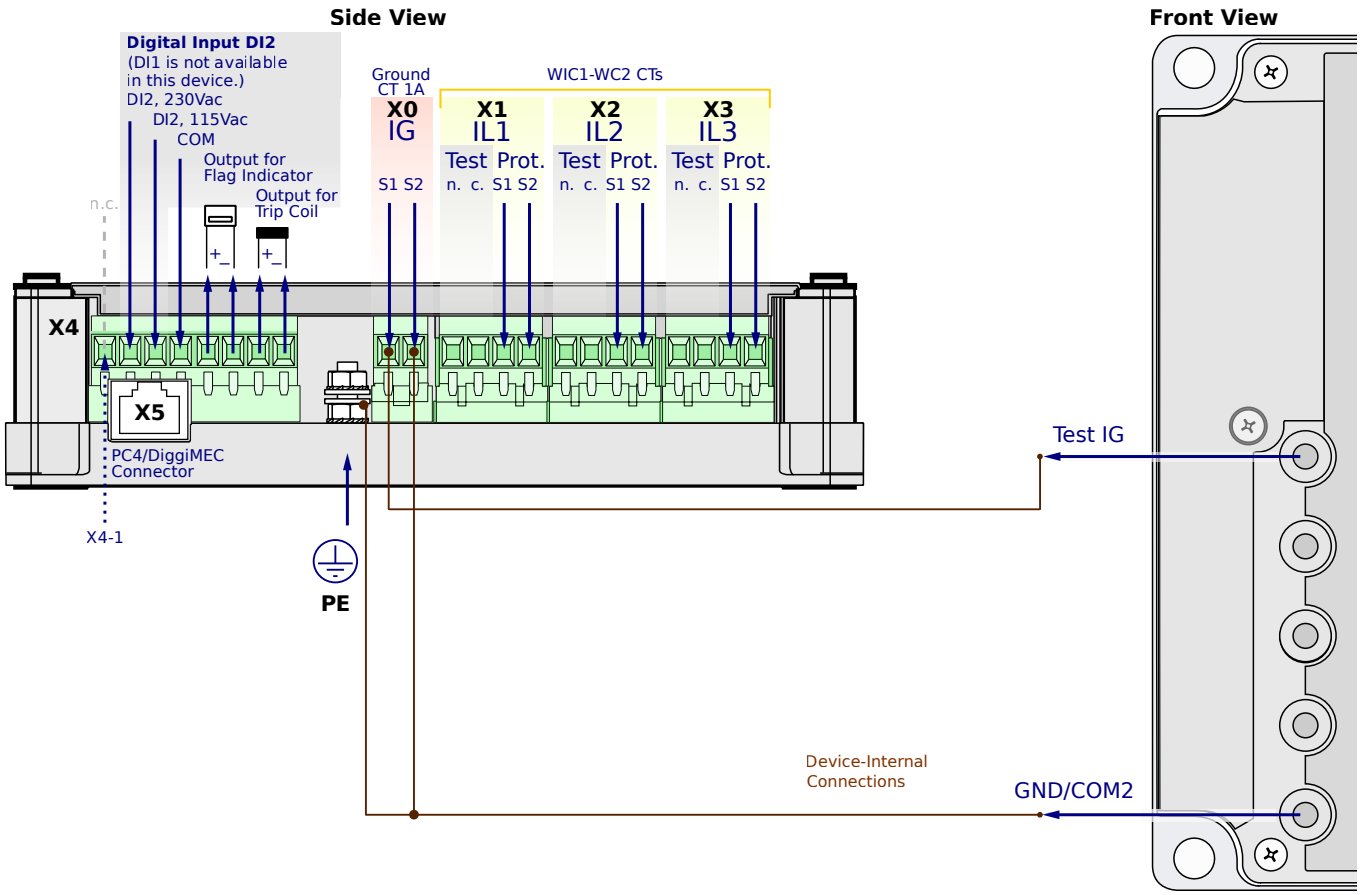


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2PA0

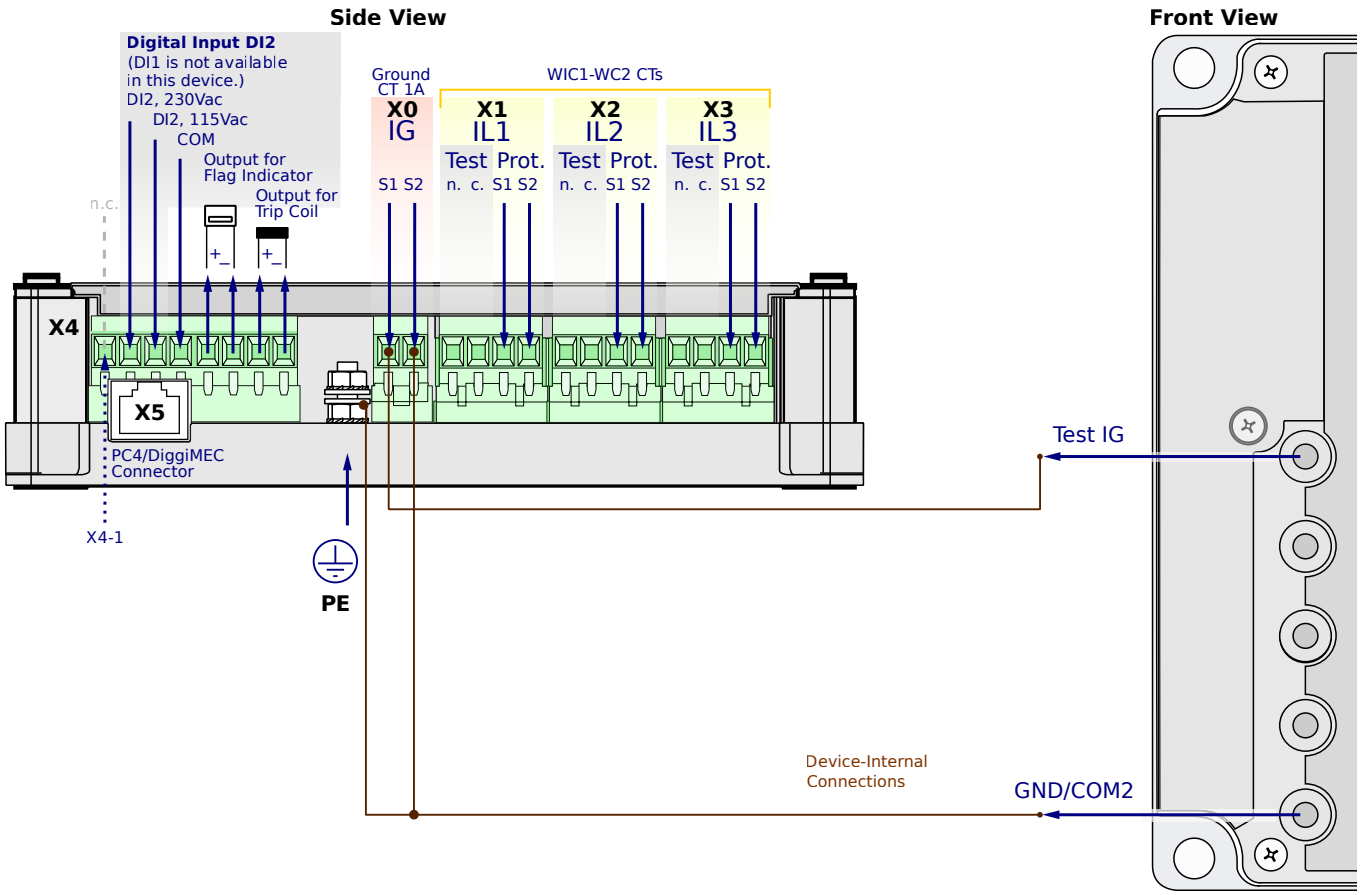


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5NC2PAH

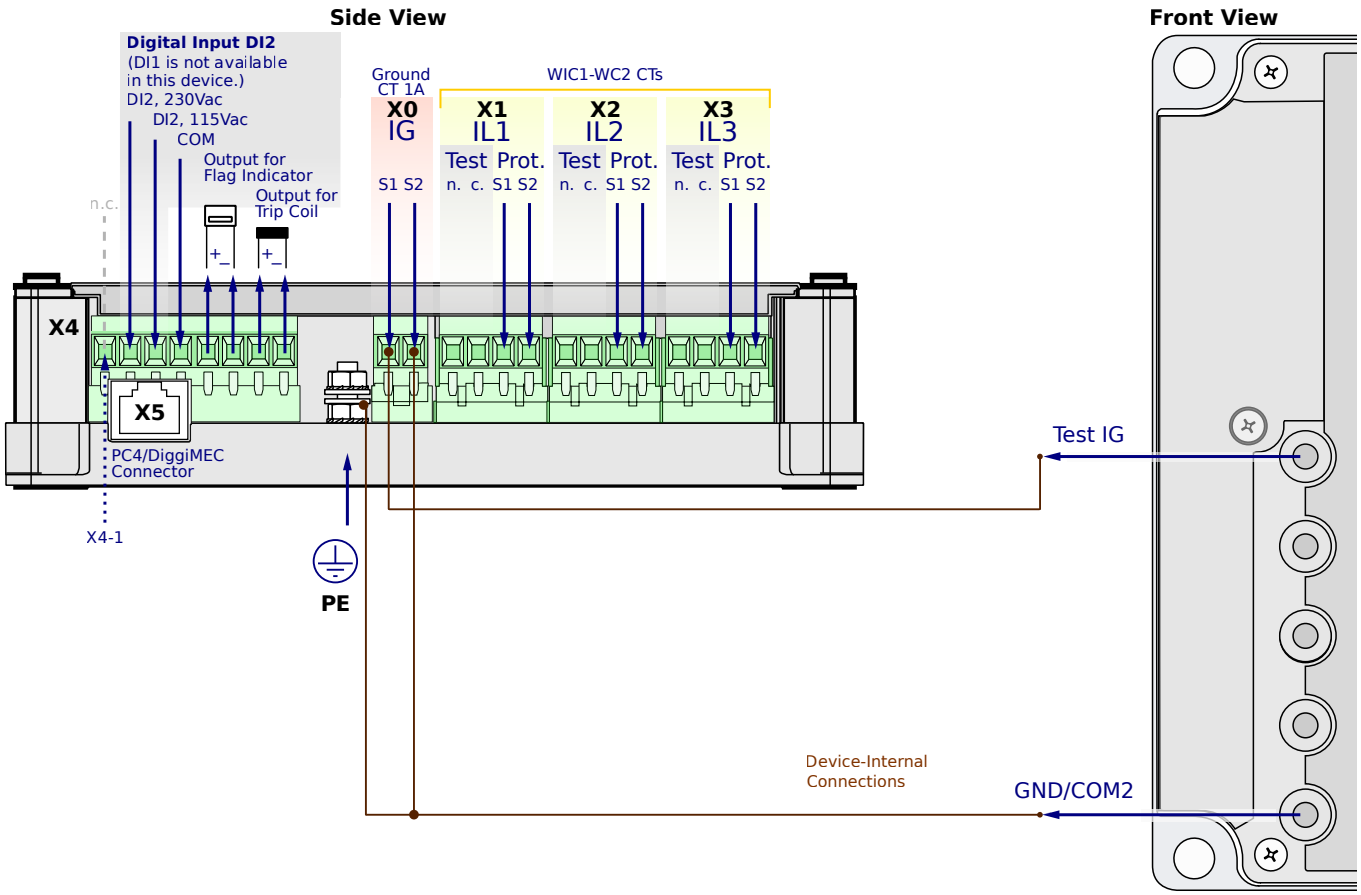


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1SA0

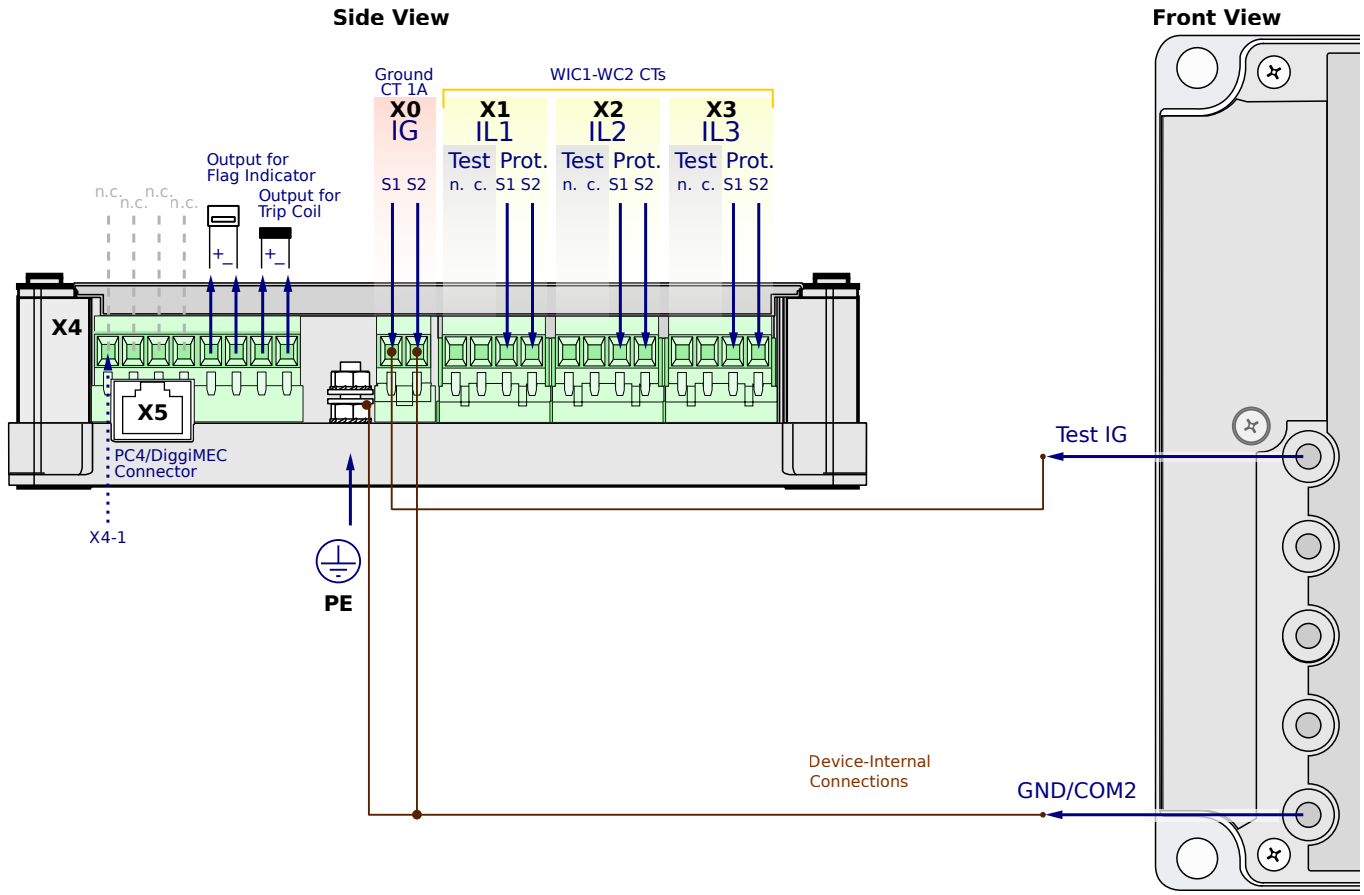


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1SAH

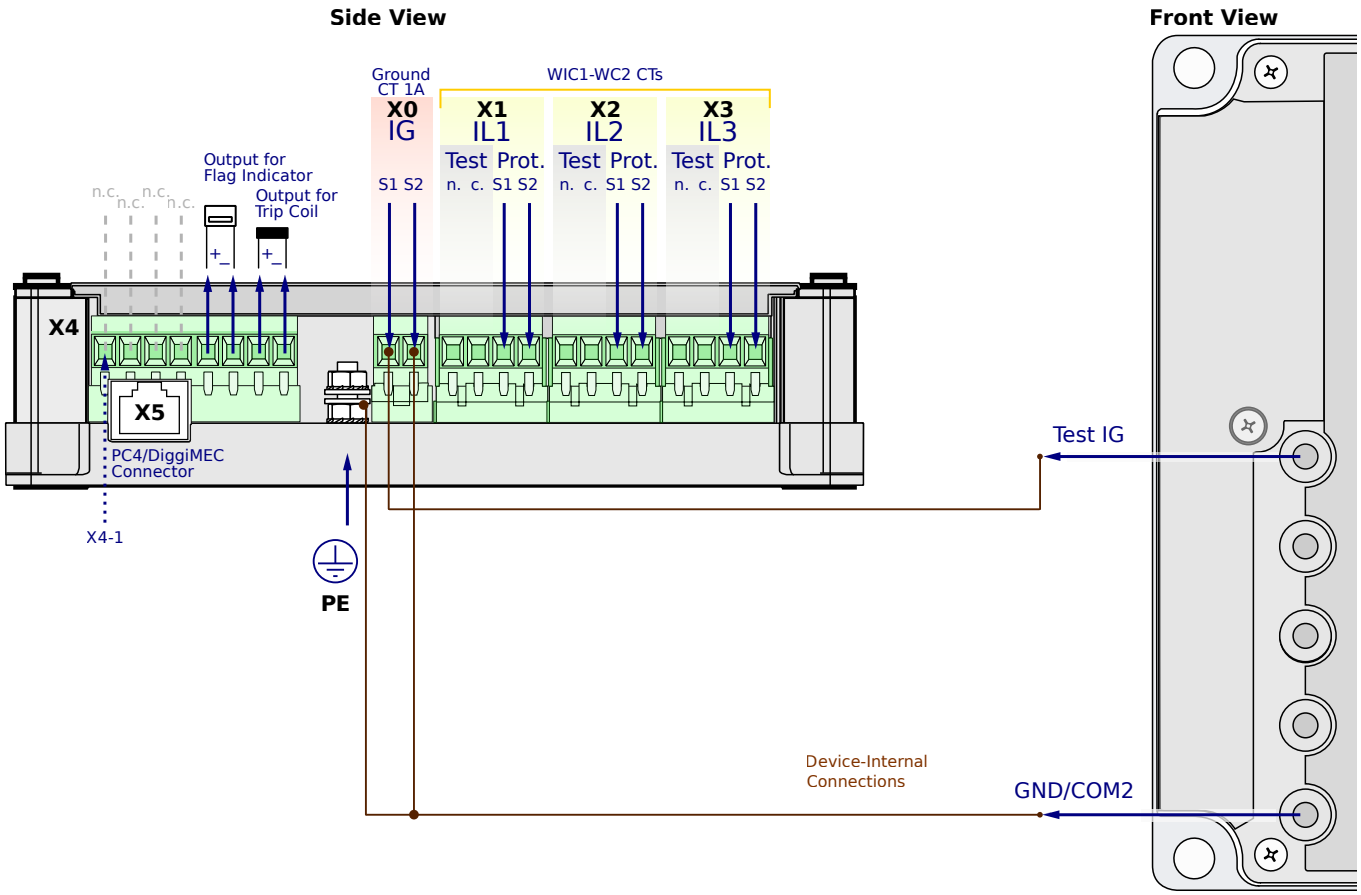


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1AA0

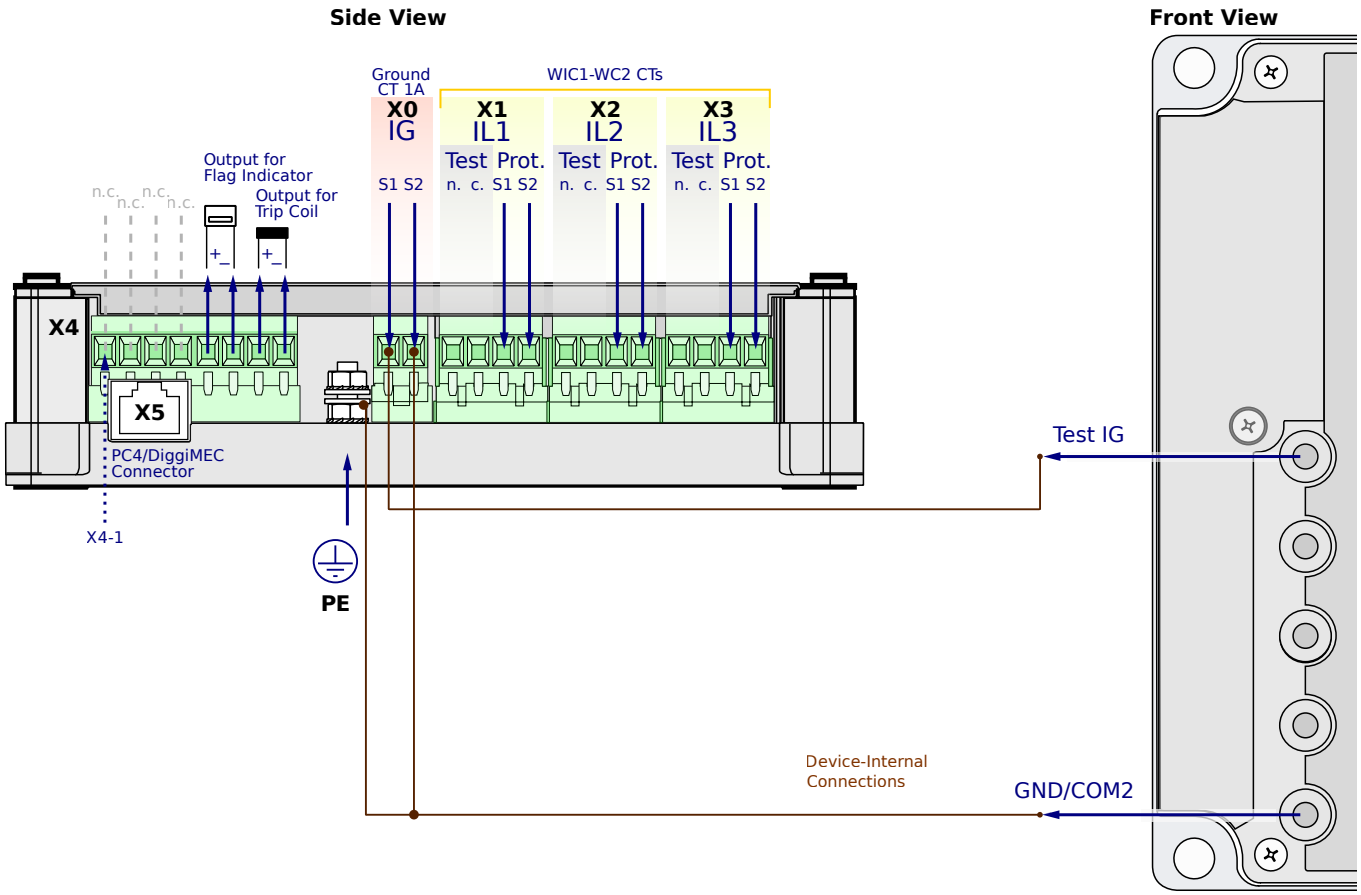


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1AAH

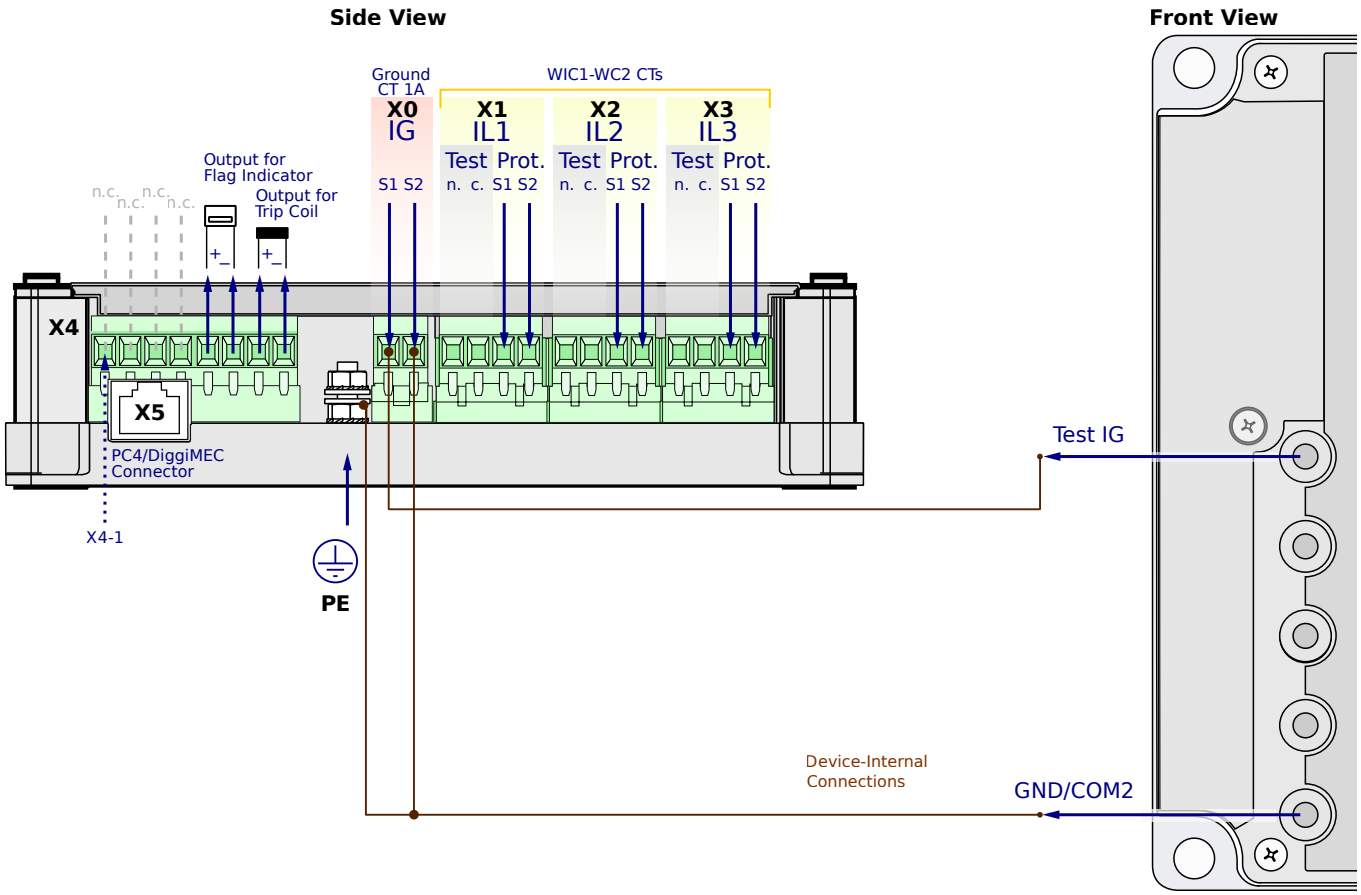


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1PA0

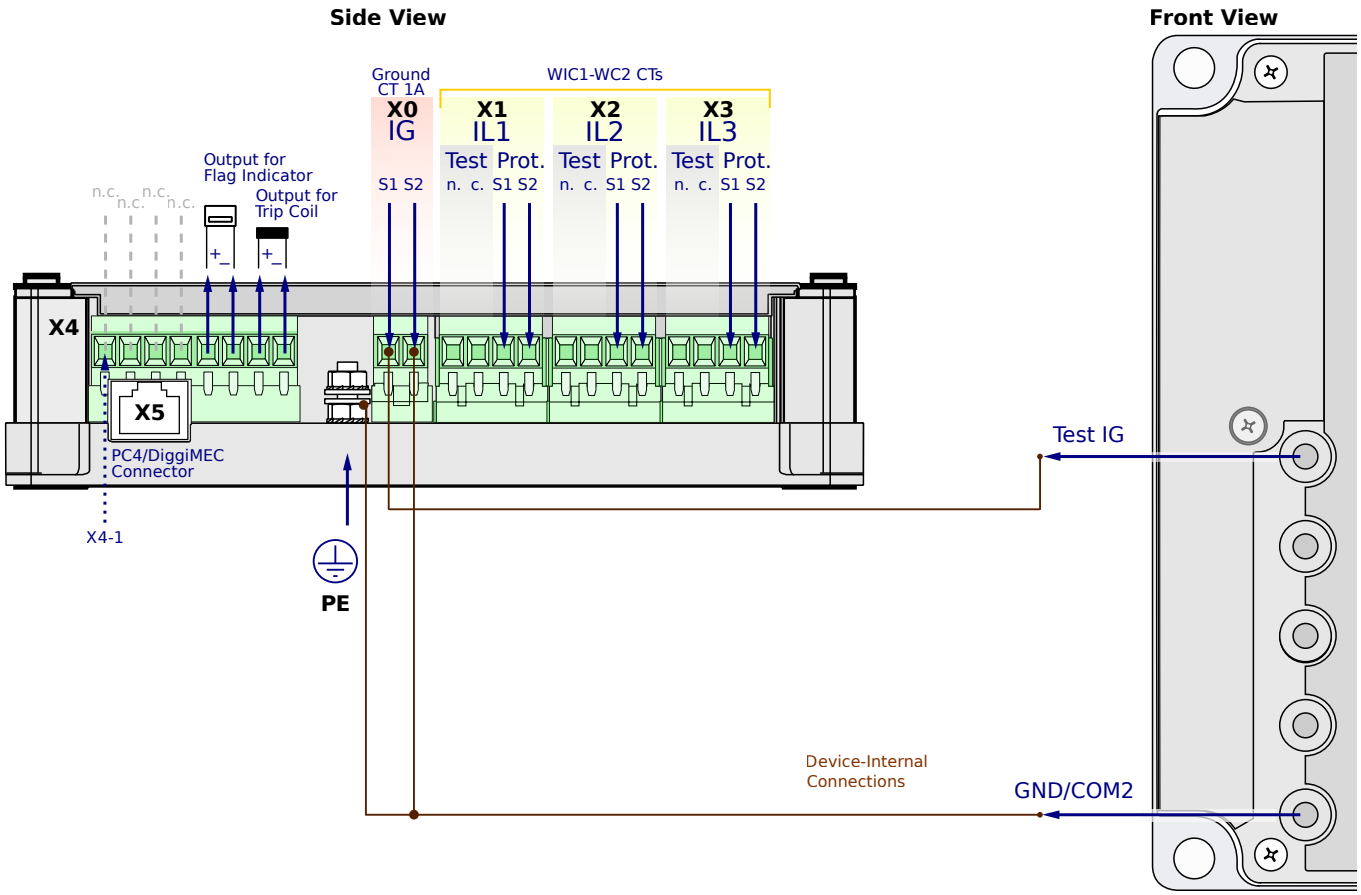


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN1PAH

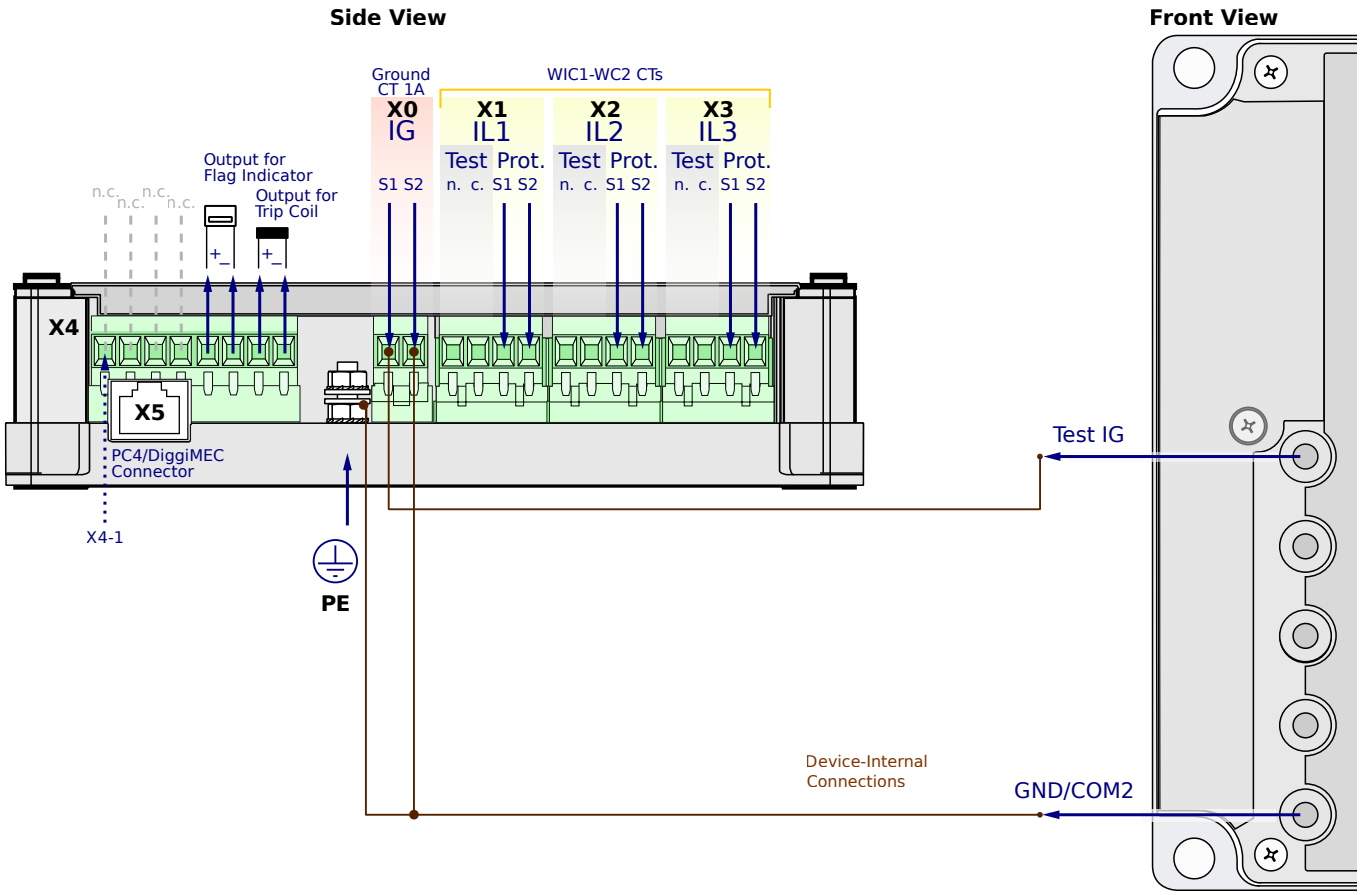


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2SA0

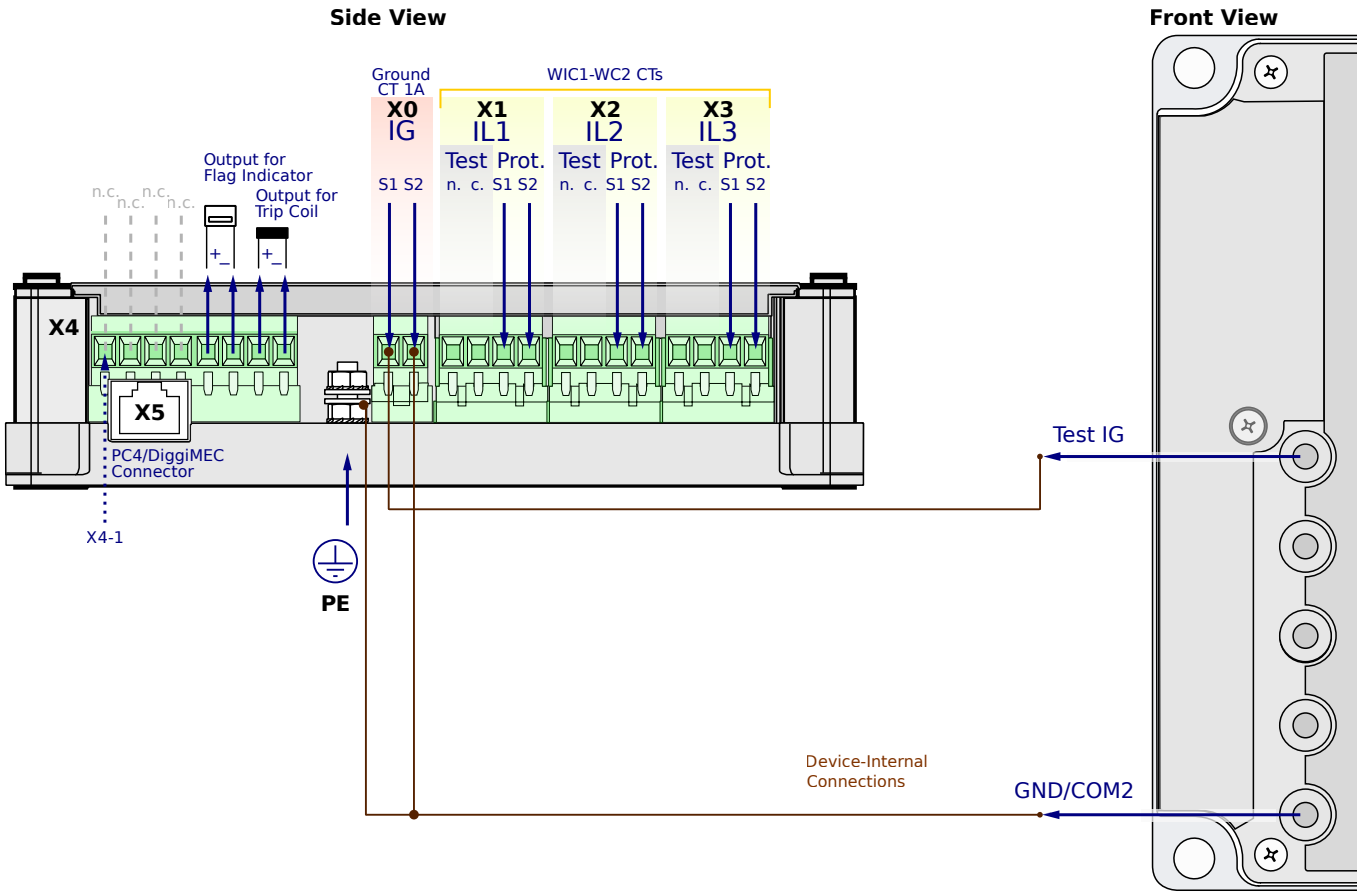


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2SAH

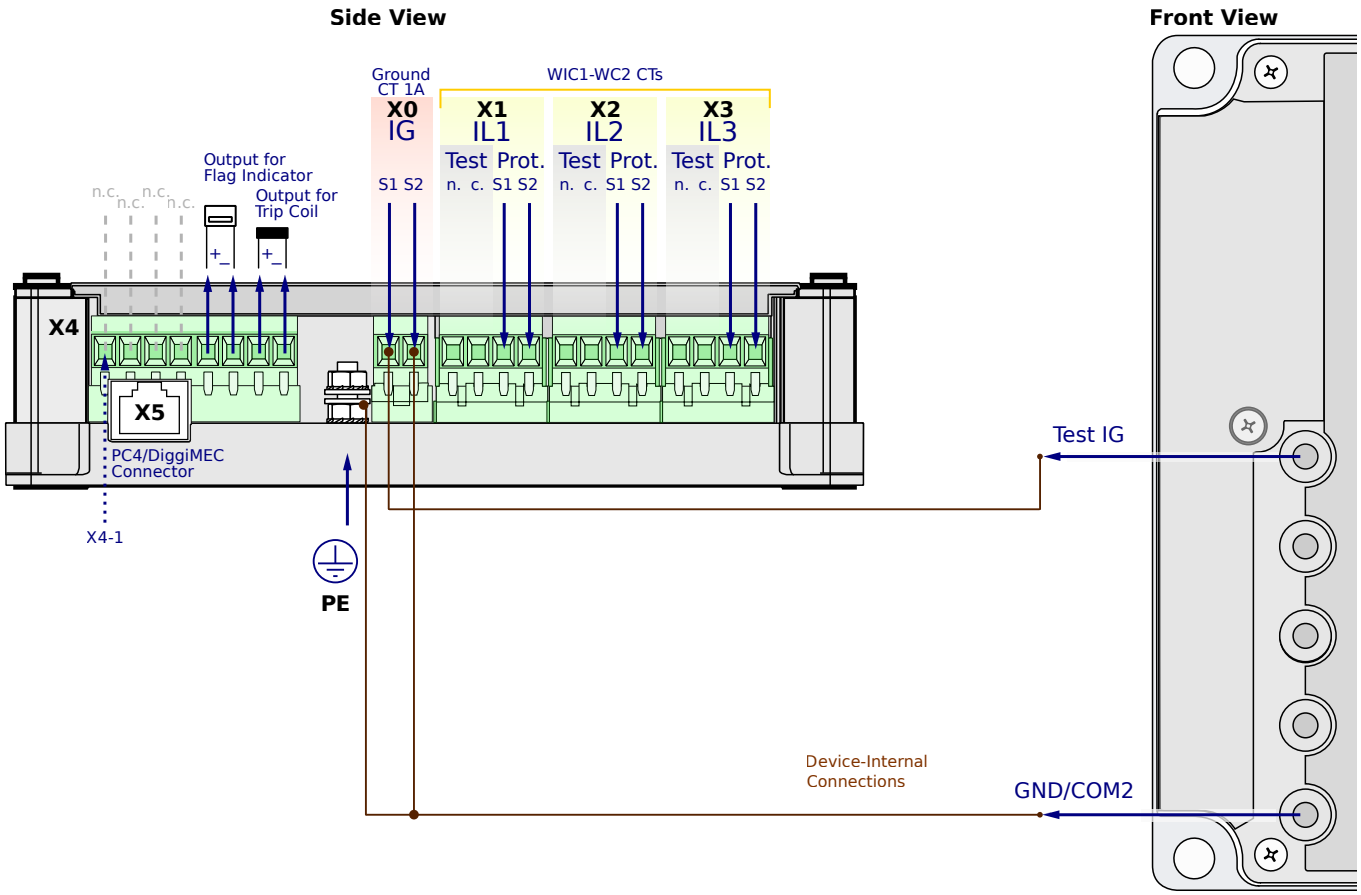


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2AA0

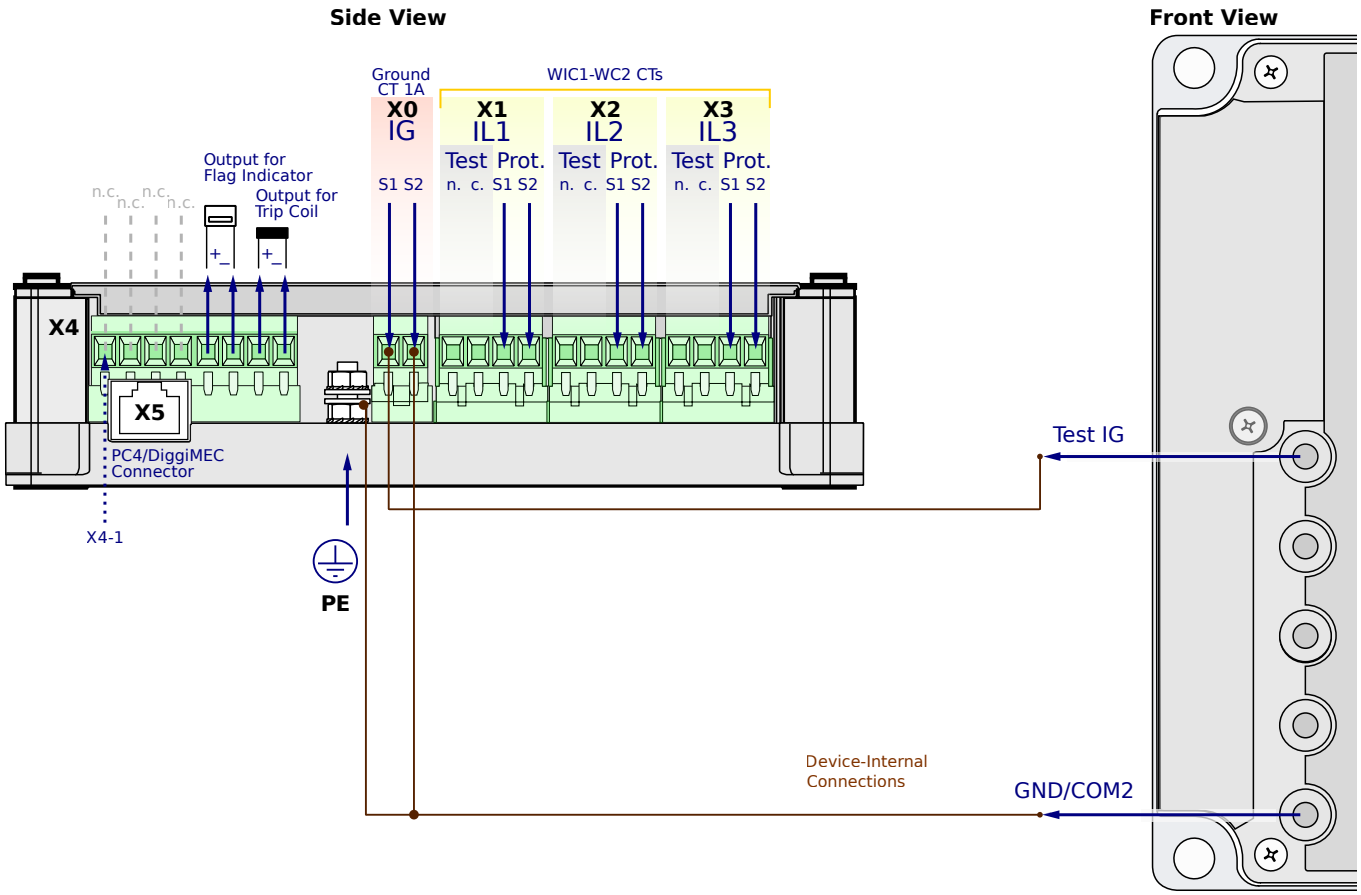


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2AAH

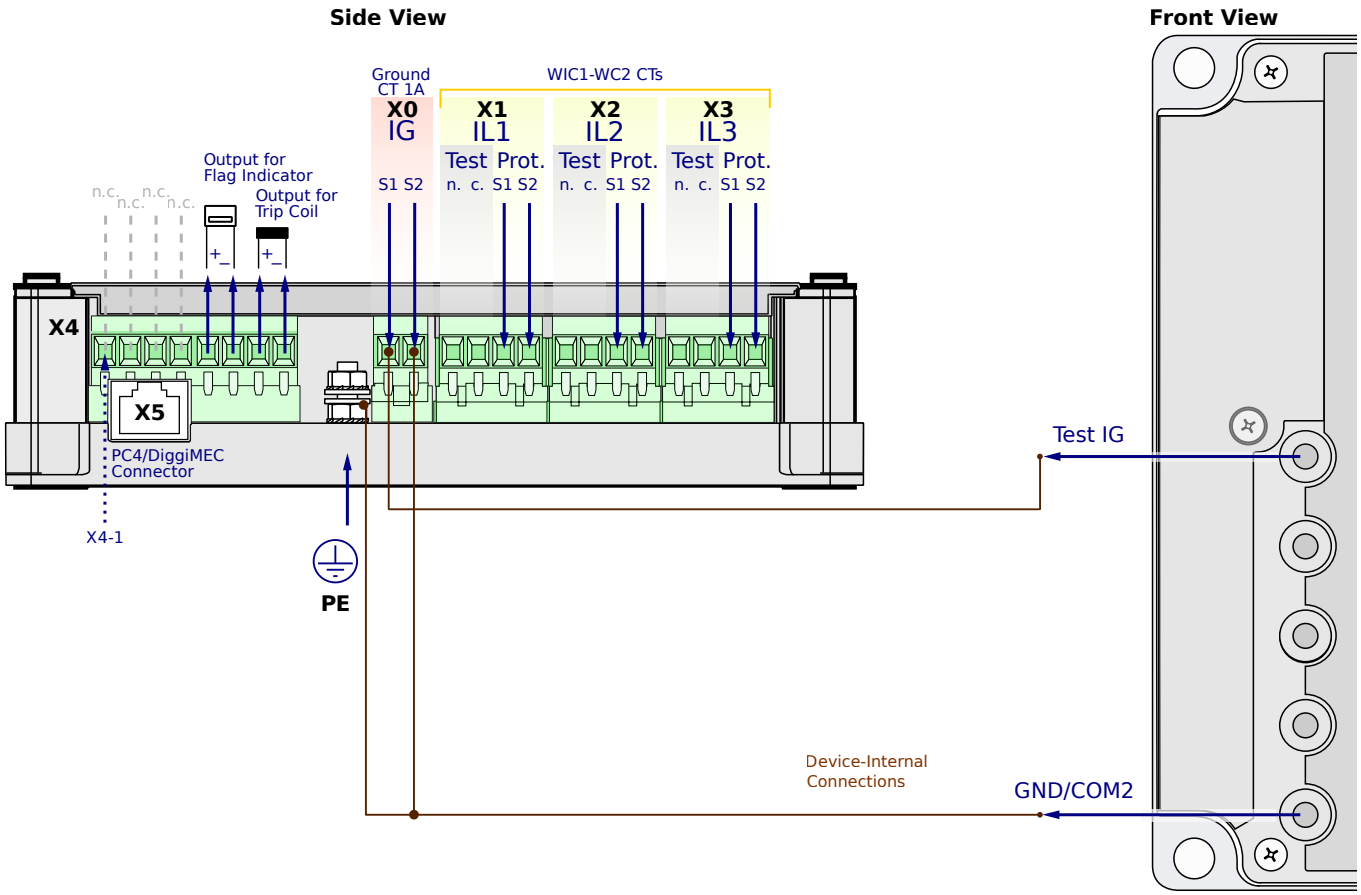


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2PA0

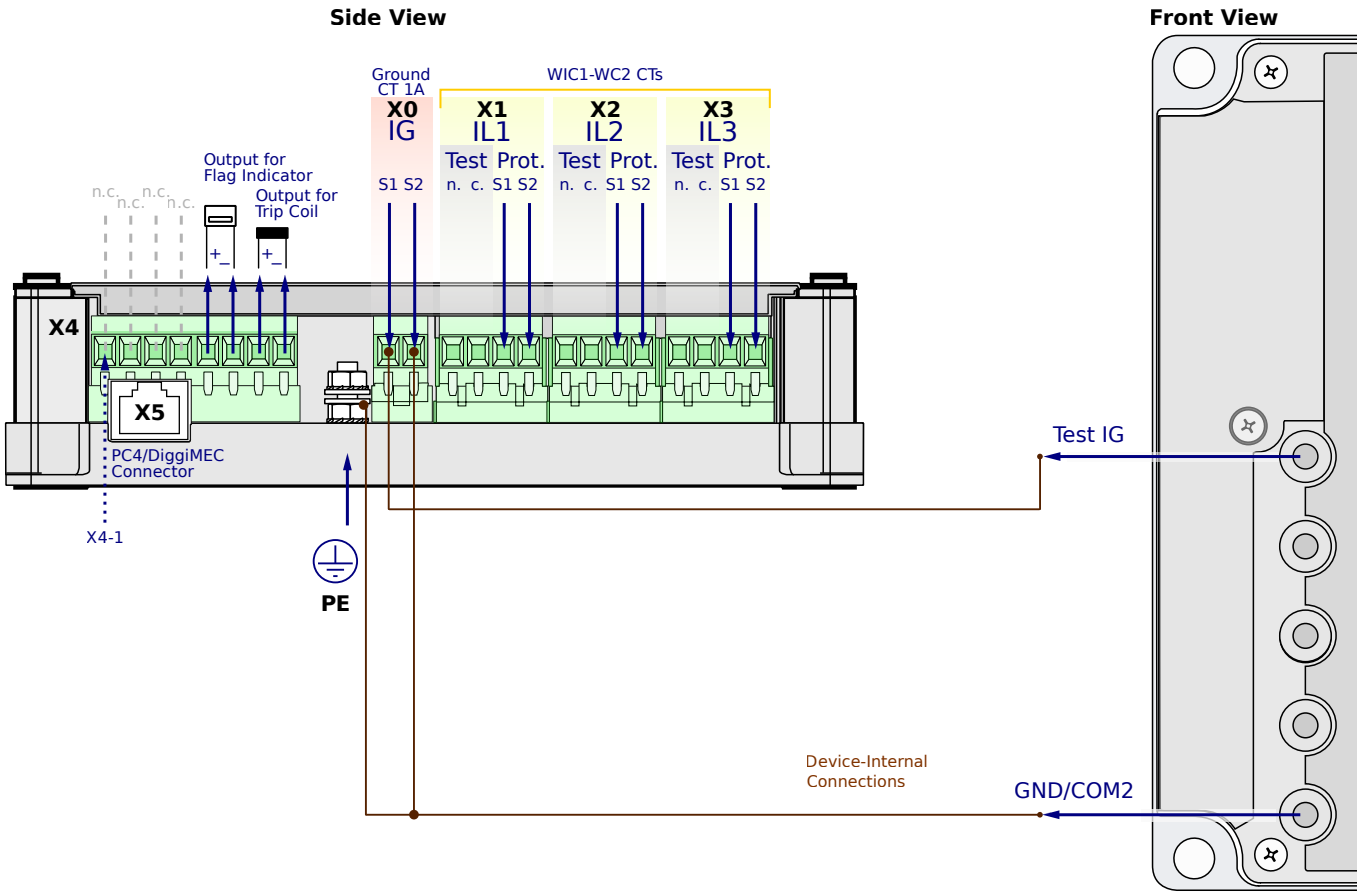


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FN2PAH

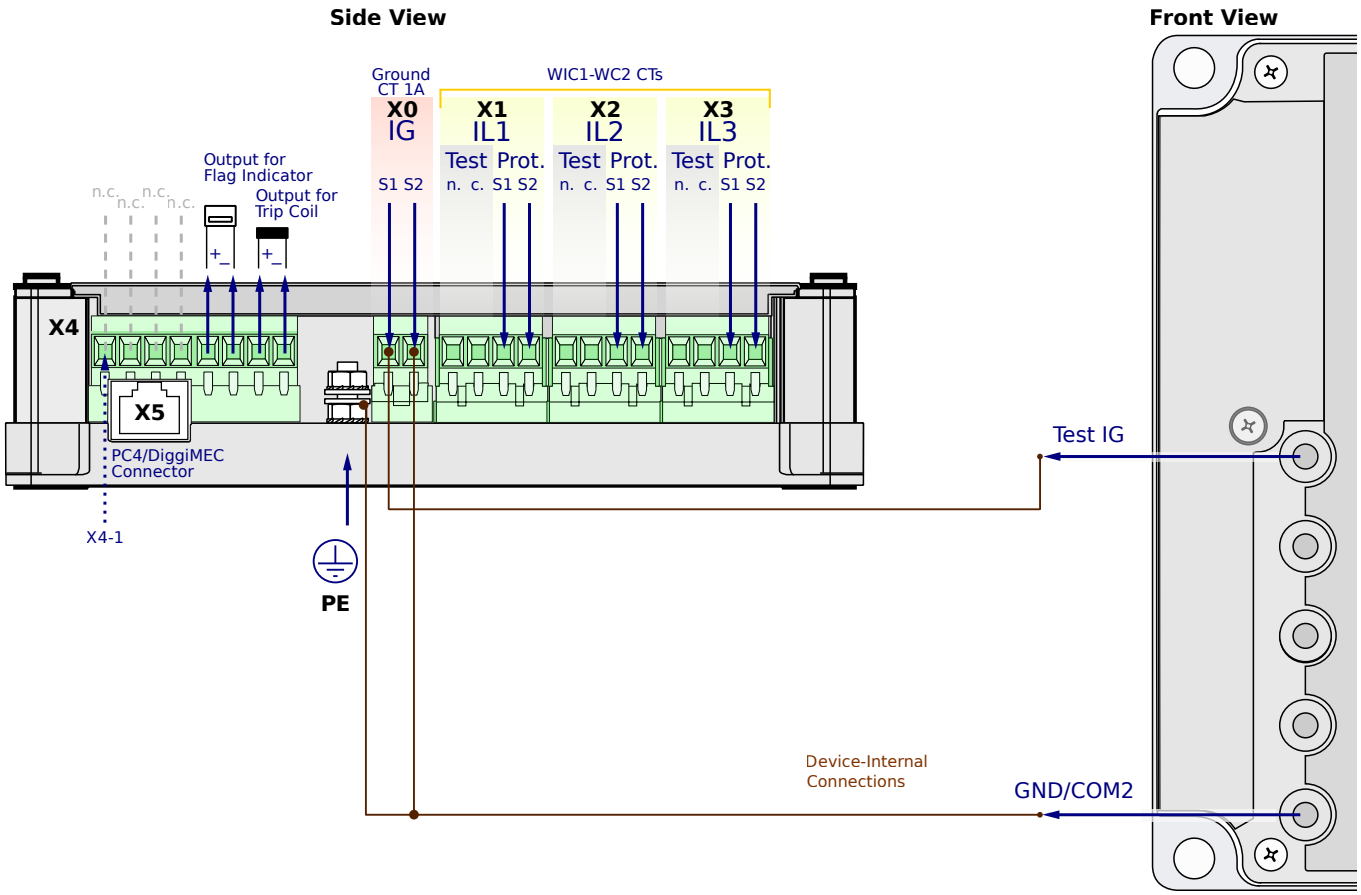


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1SA0

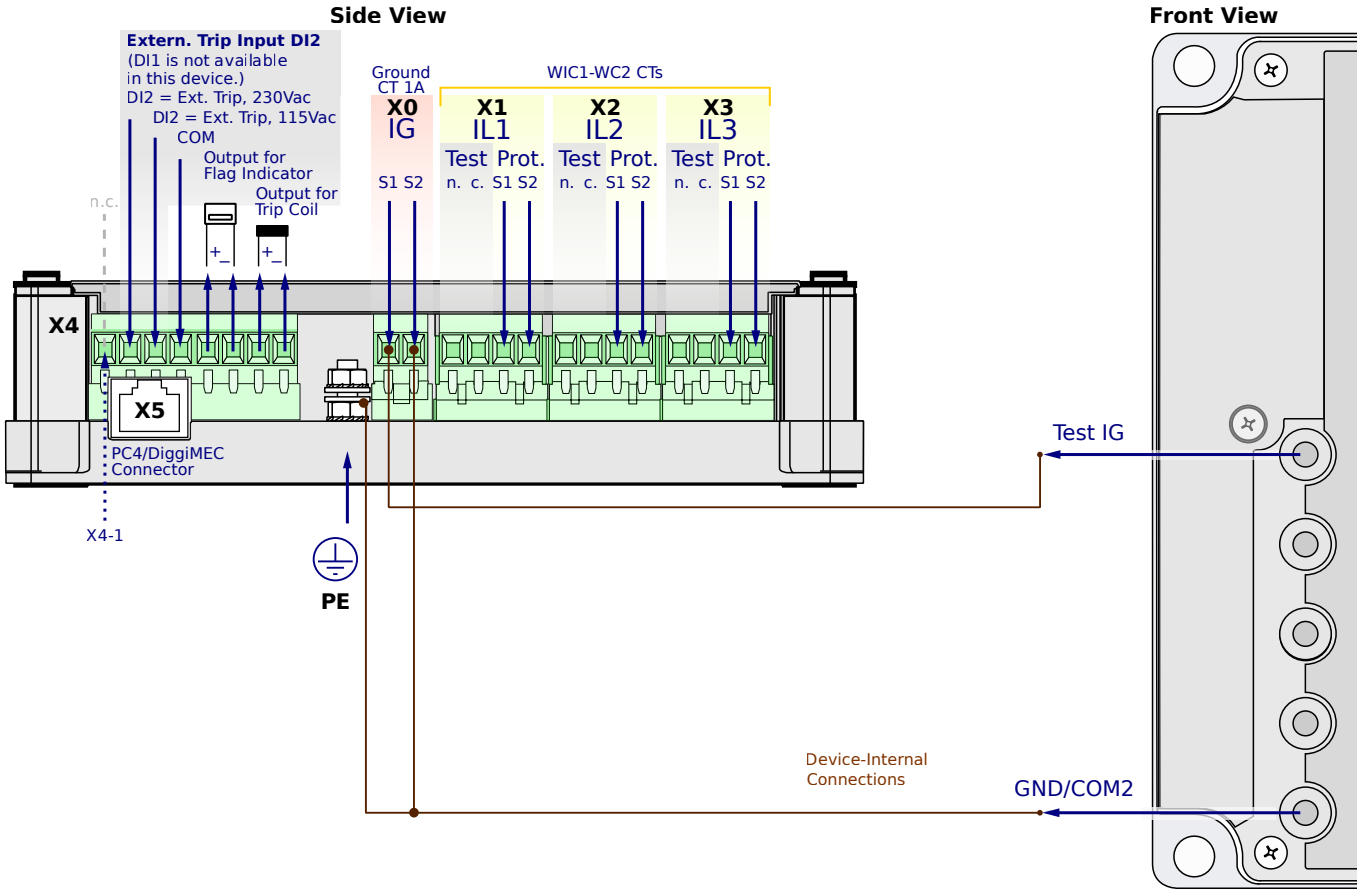


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1SAH

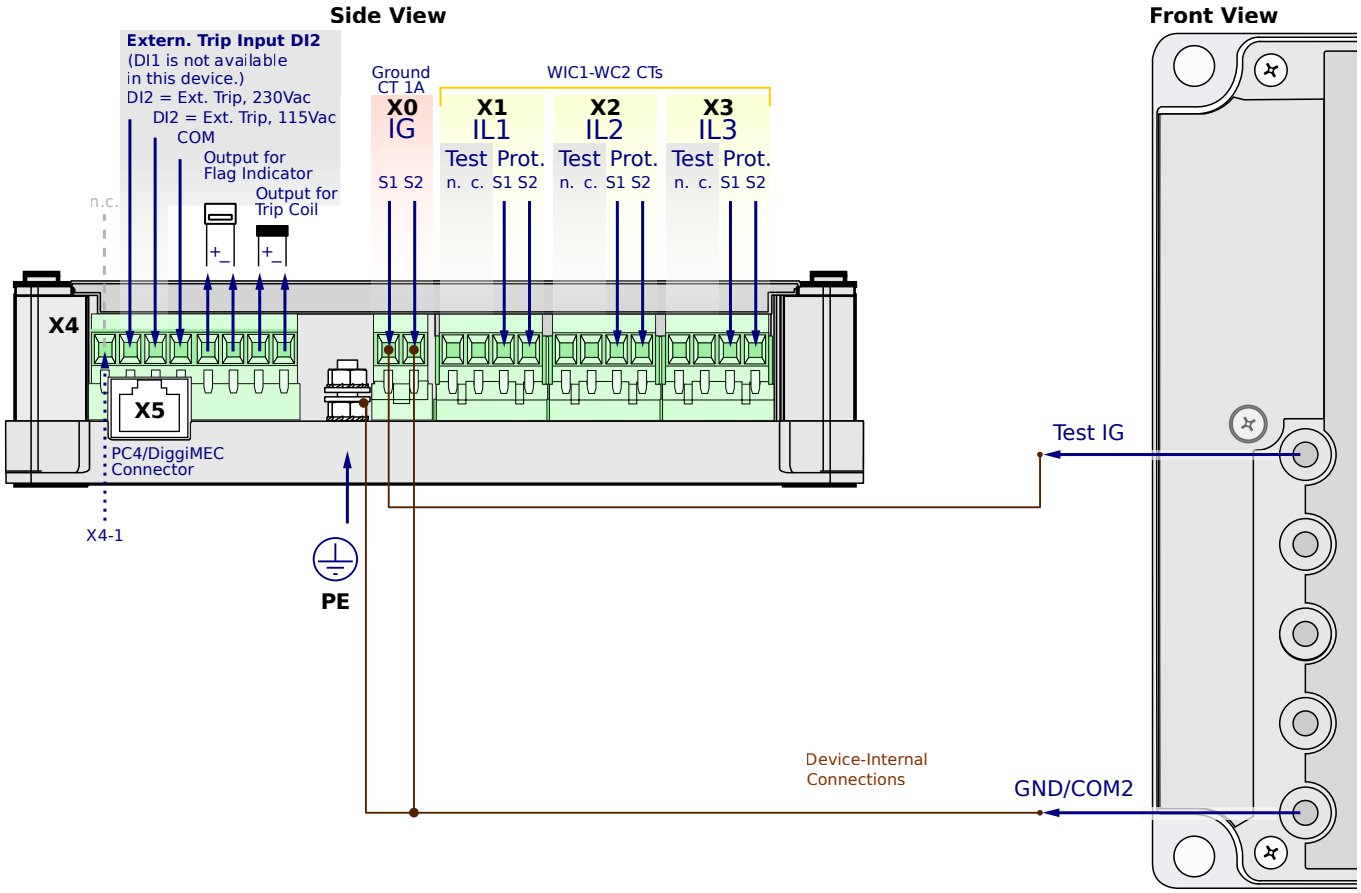


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1AA0

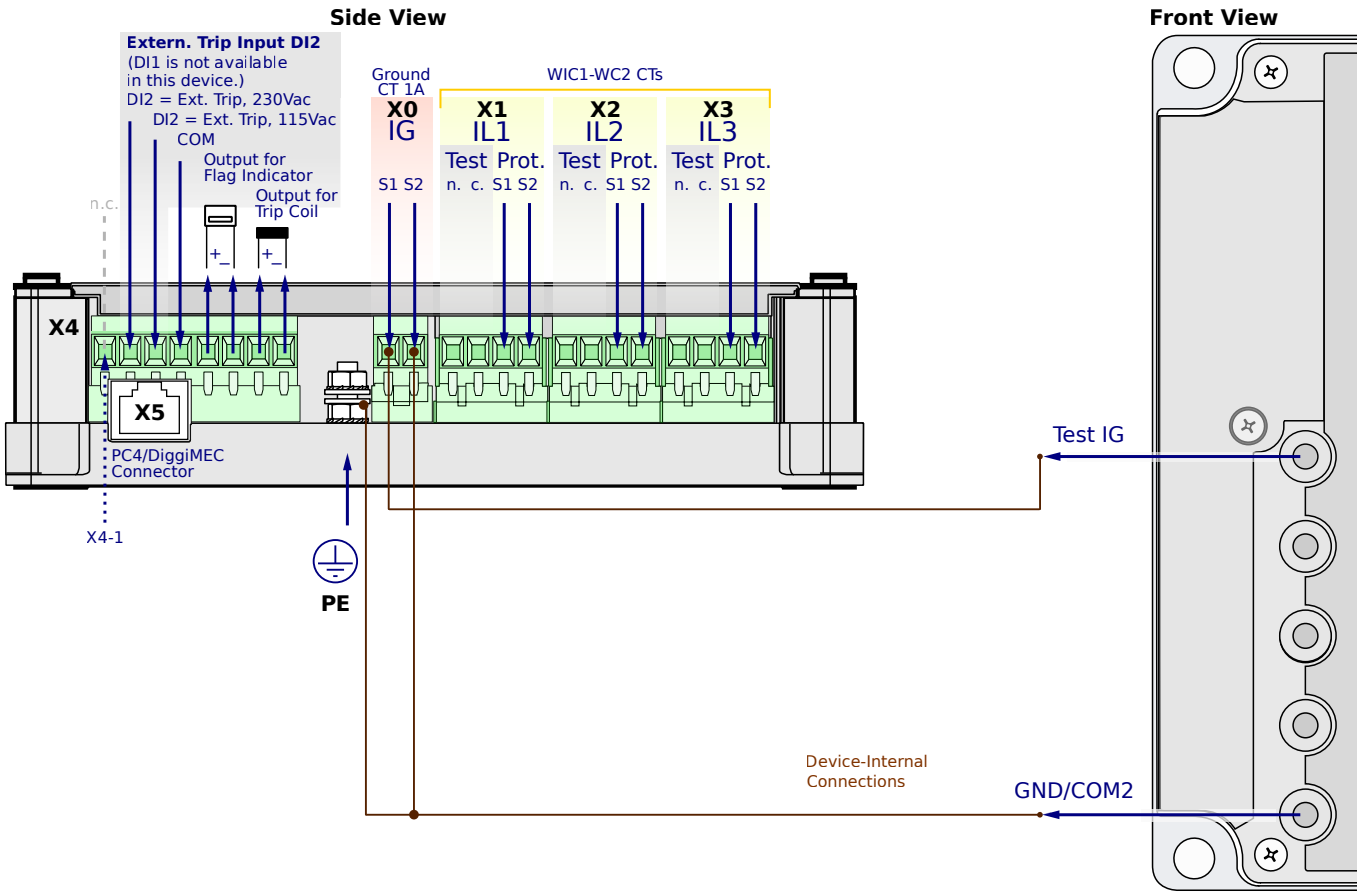


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1AAH

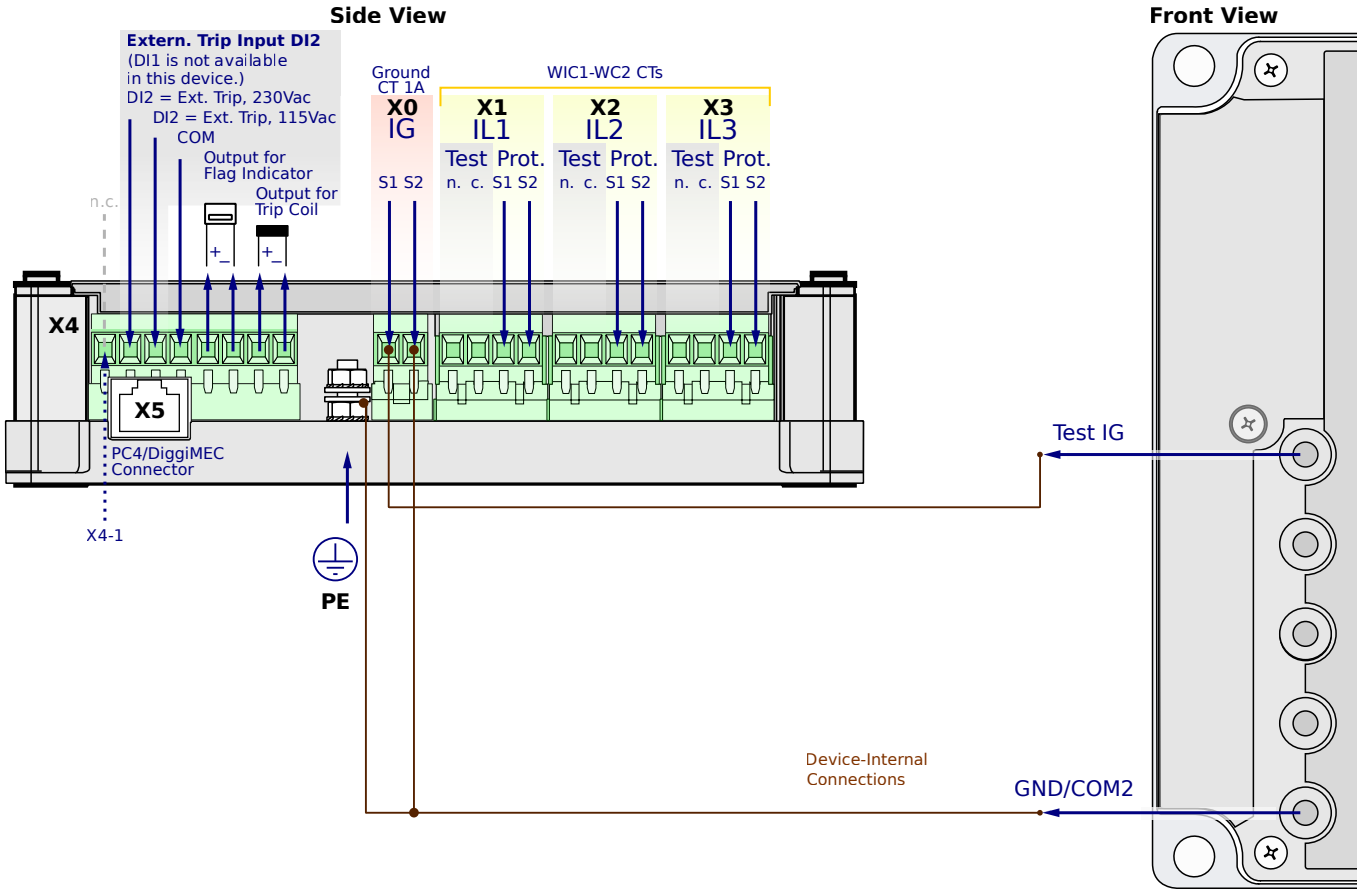


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1PA0

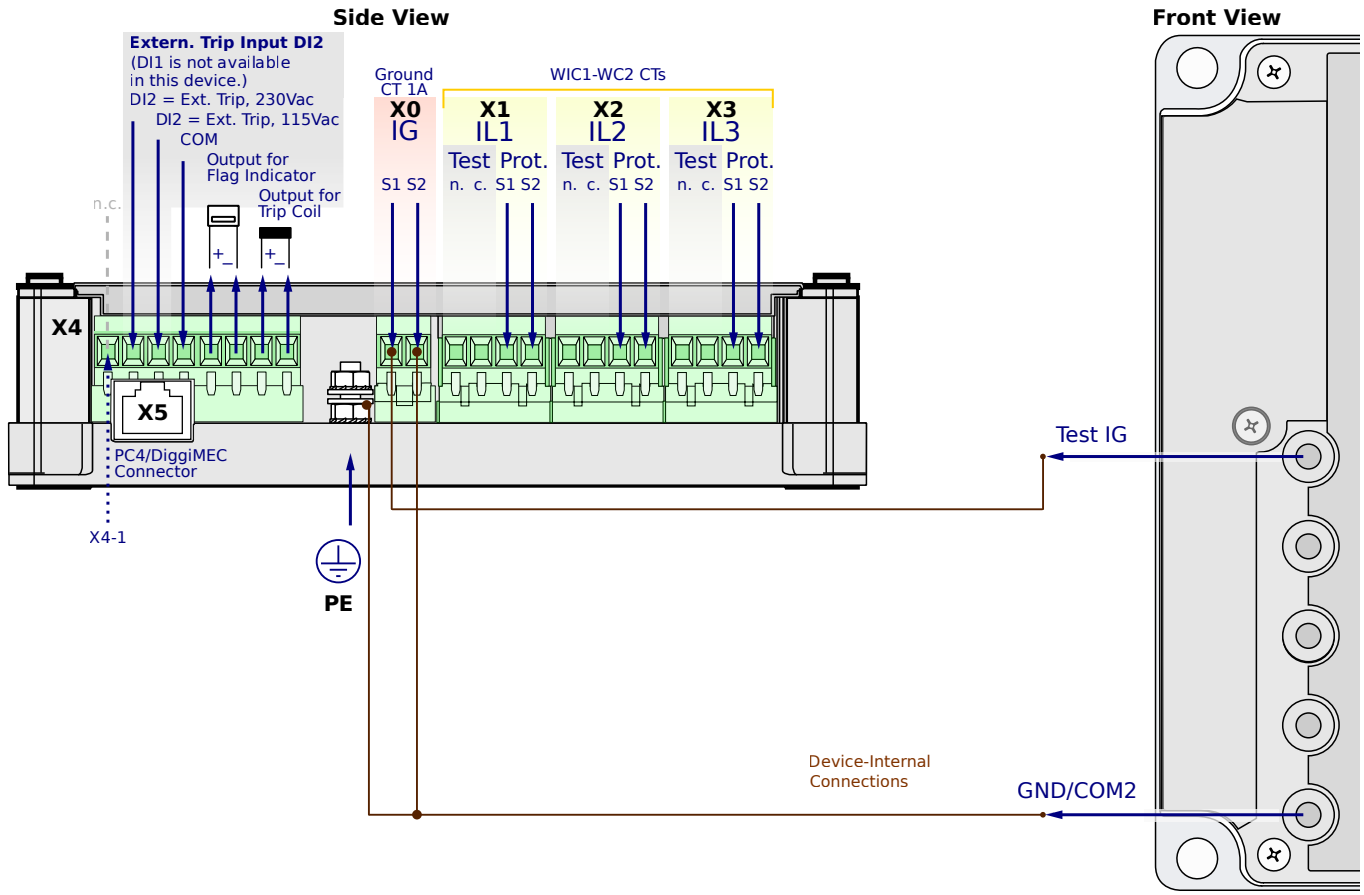


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF1PAH

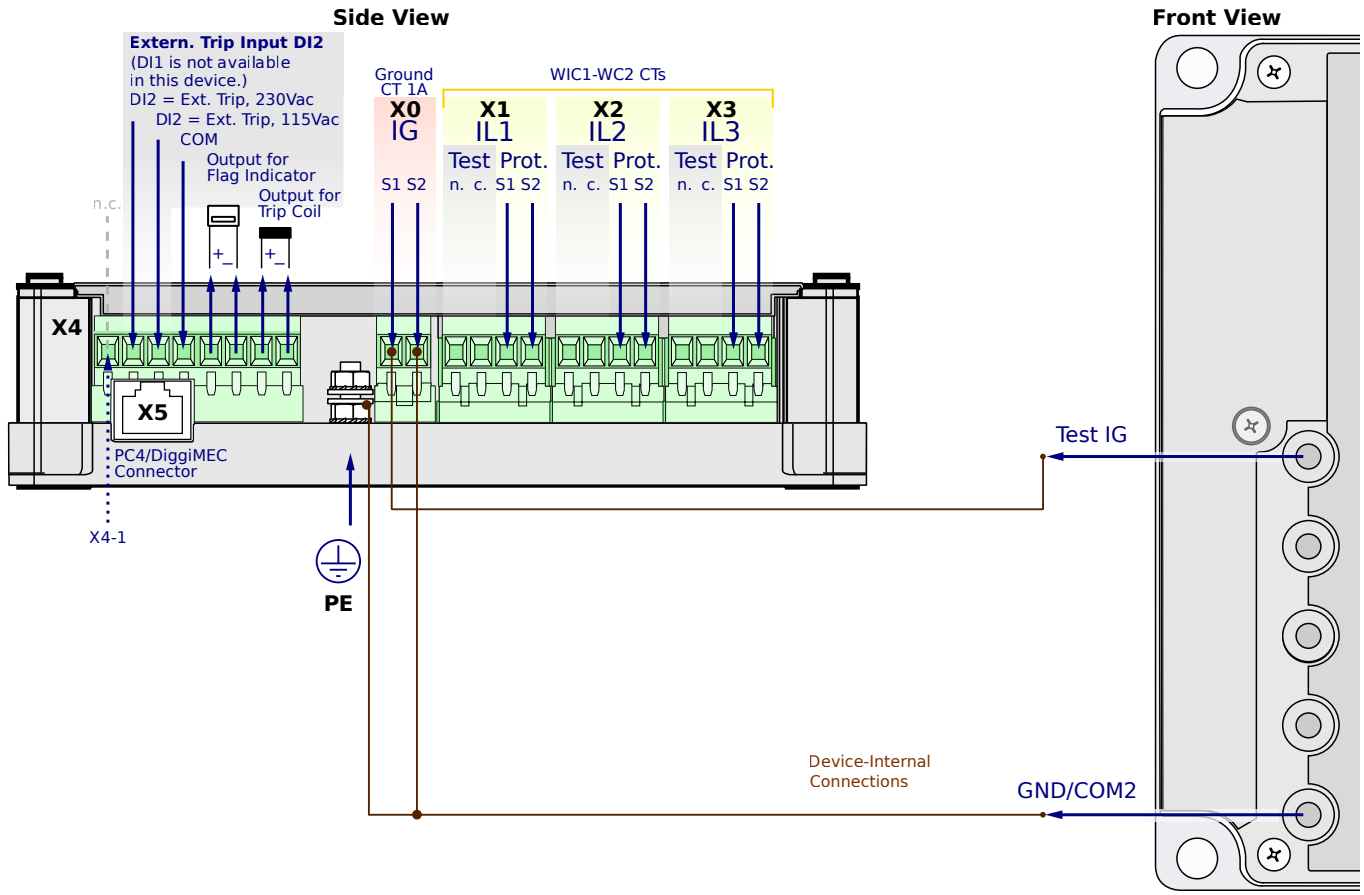


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2SA0

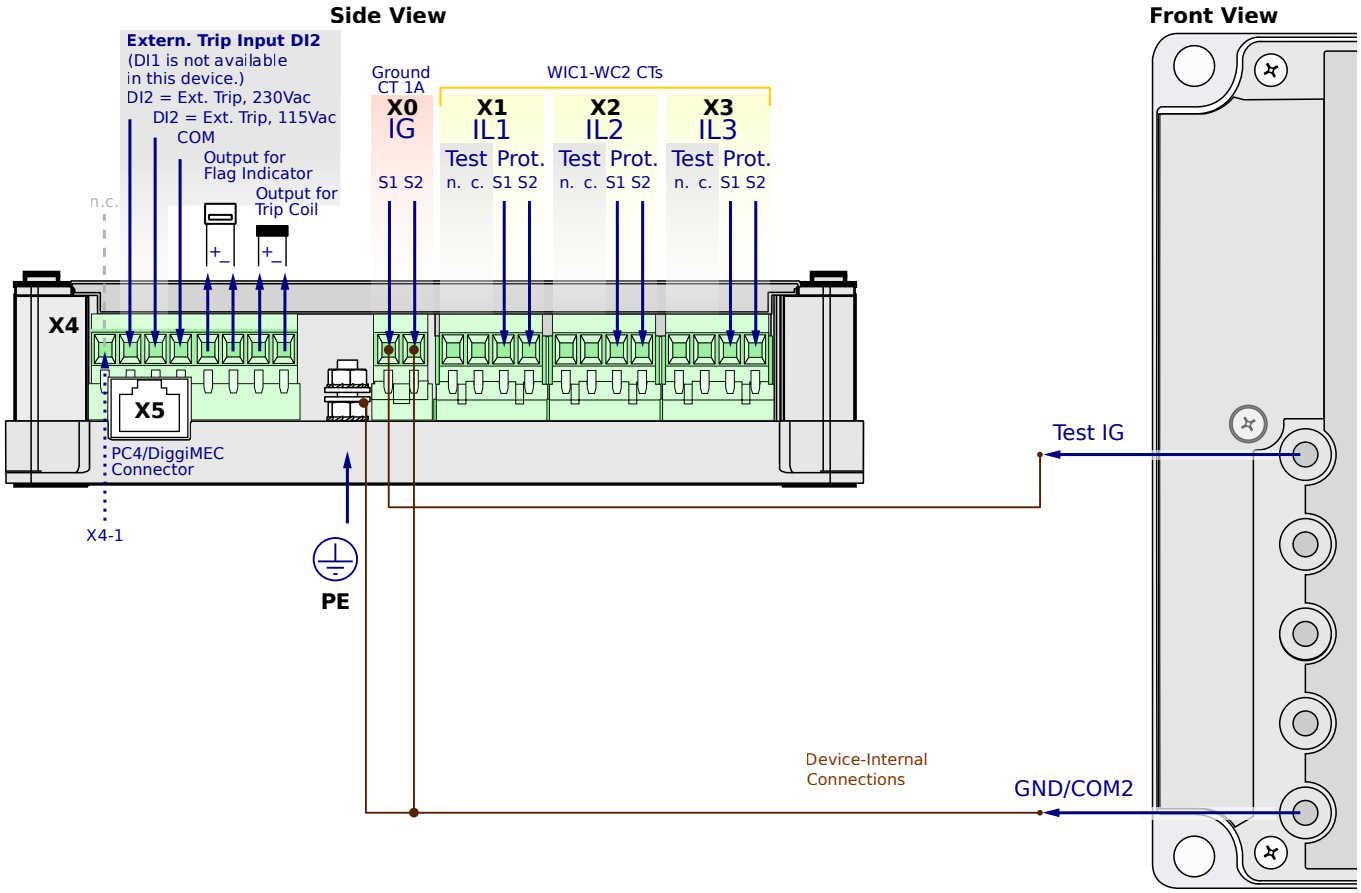


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2SAH

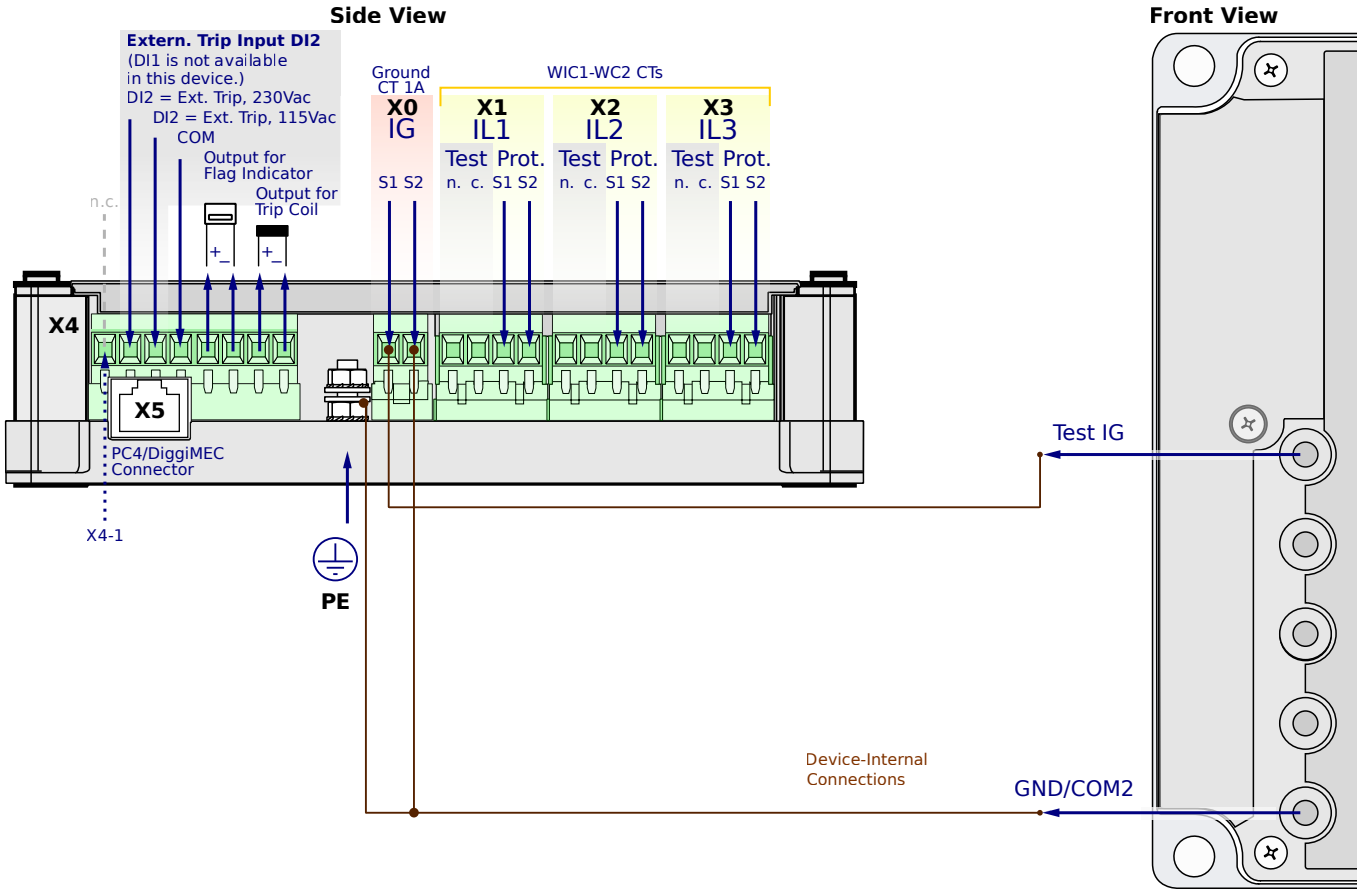


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2AA0

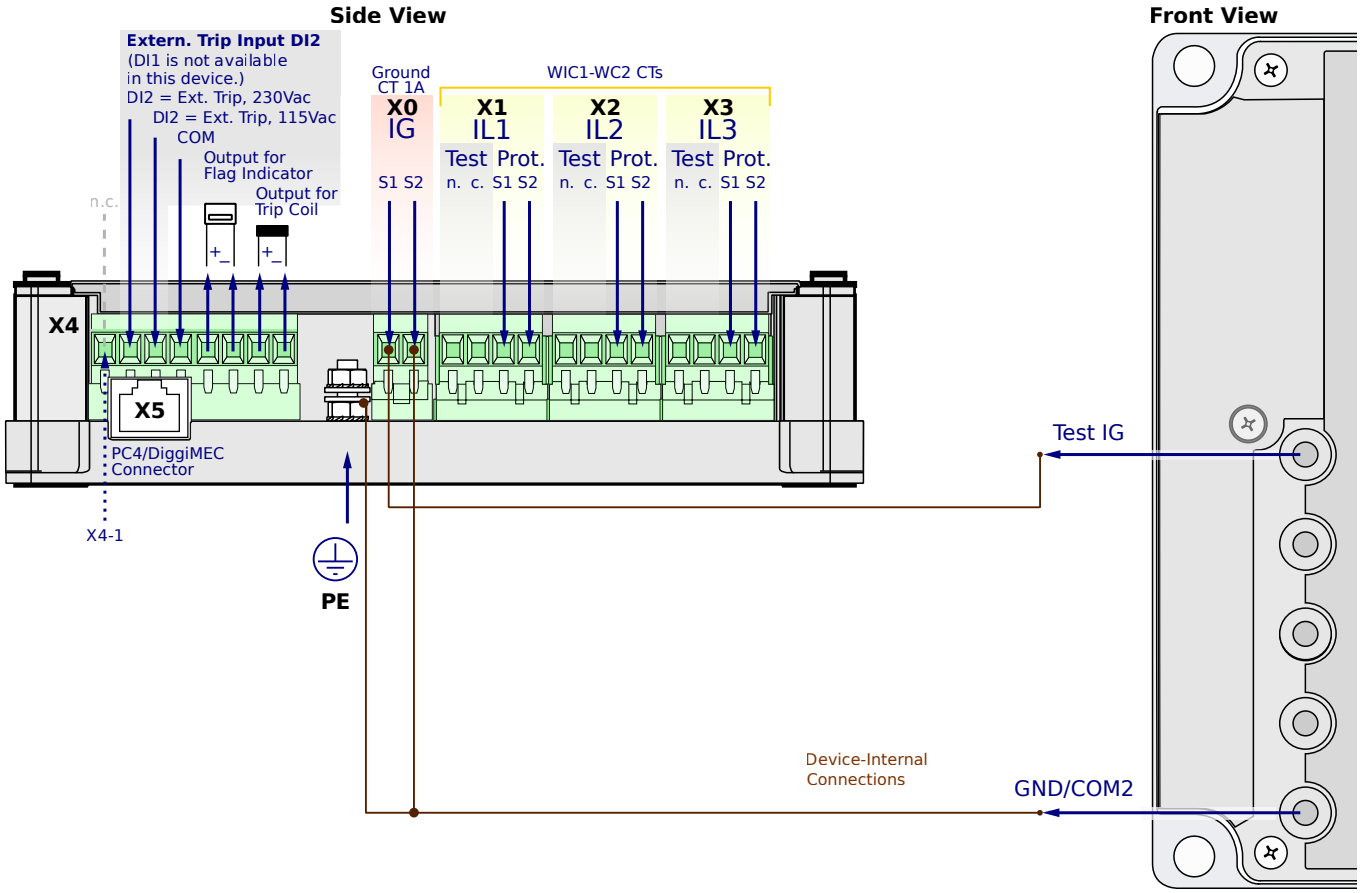


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2AAH

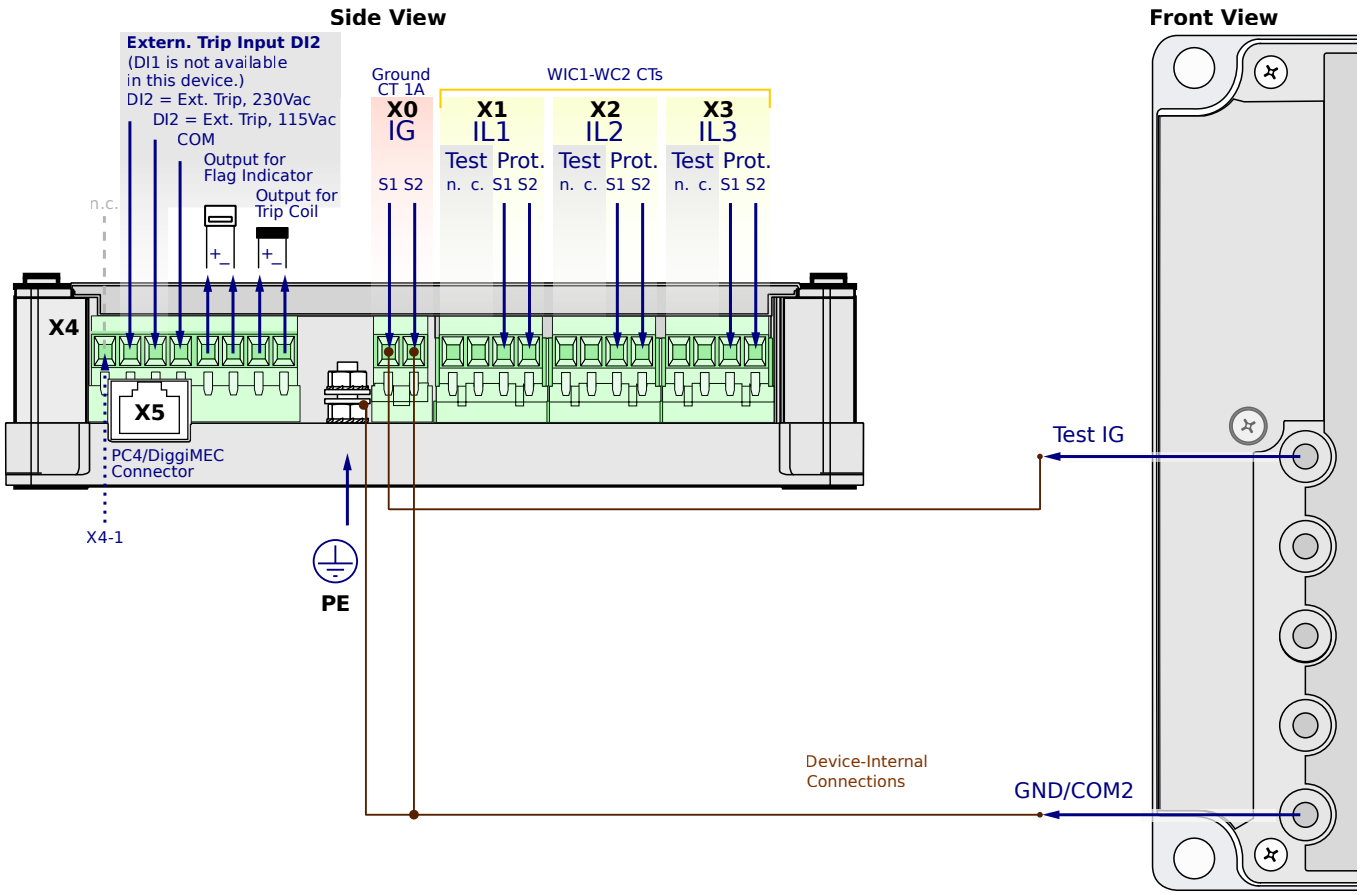


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2PA0

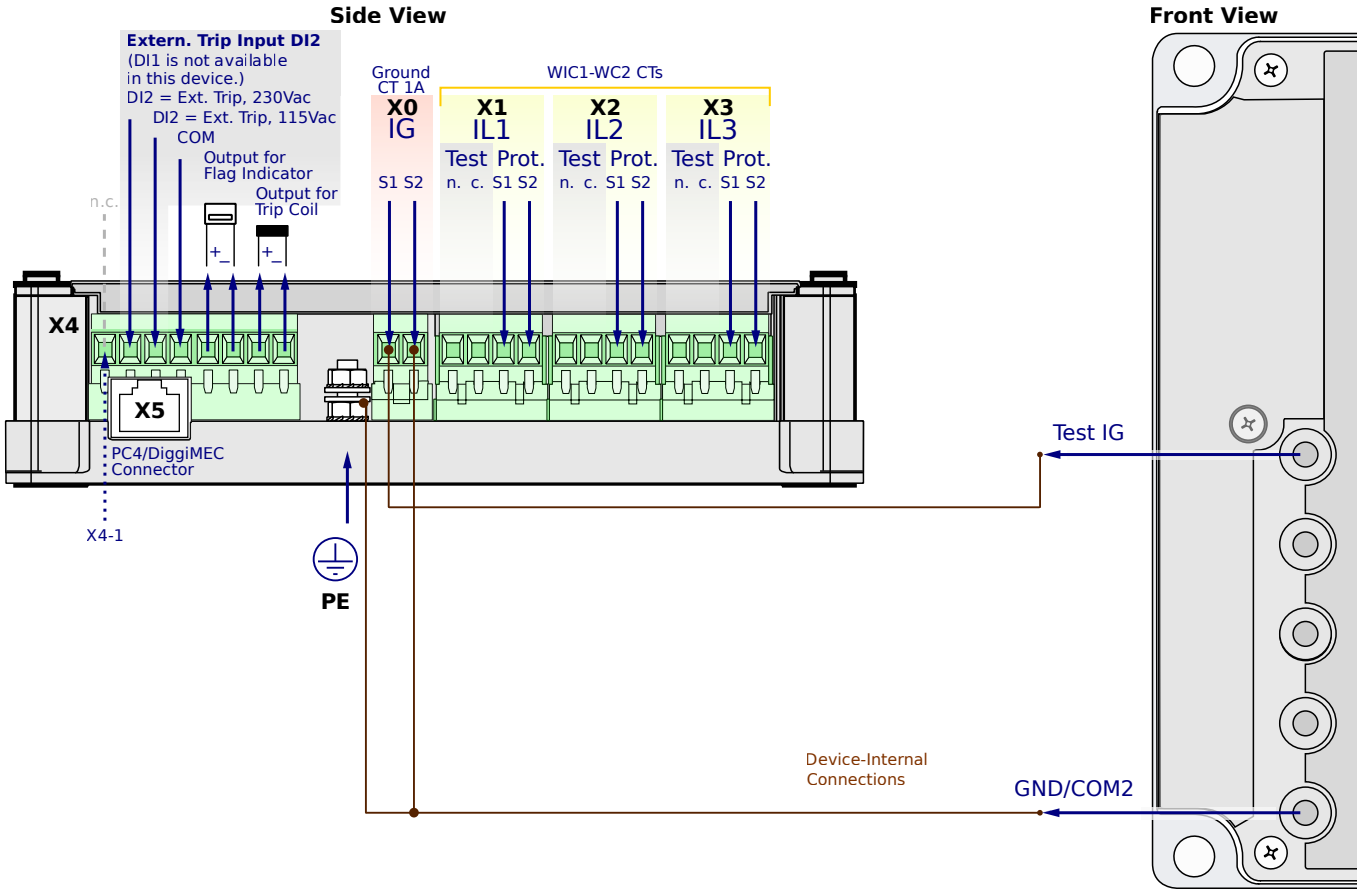


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FF2PAH

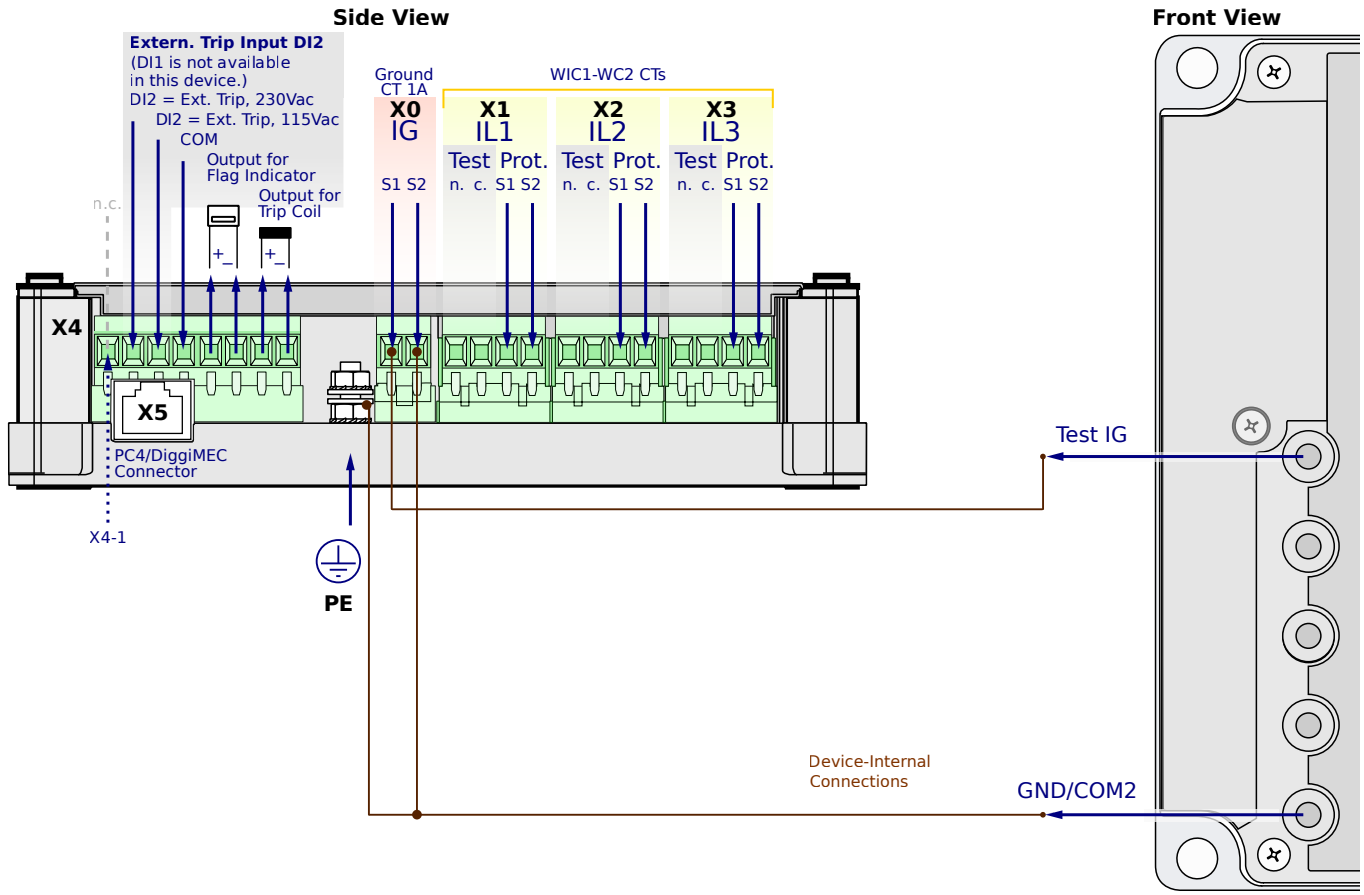


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1SA0

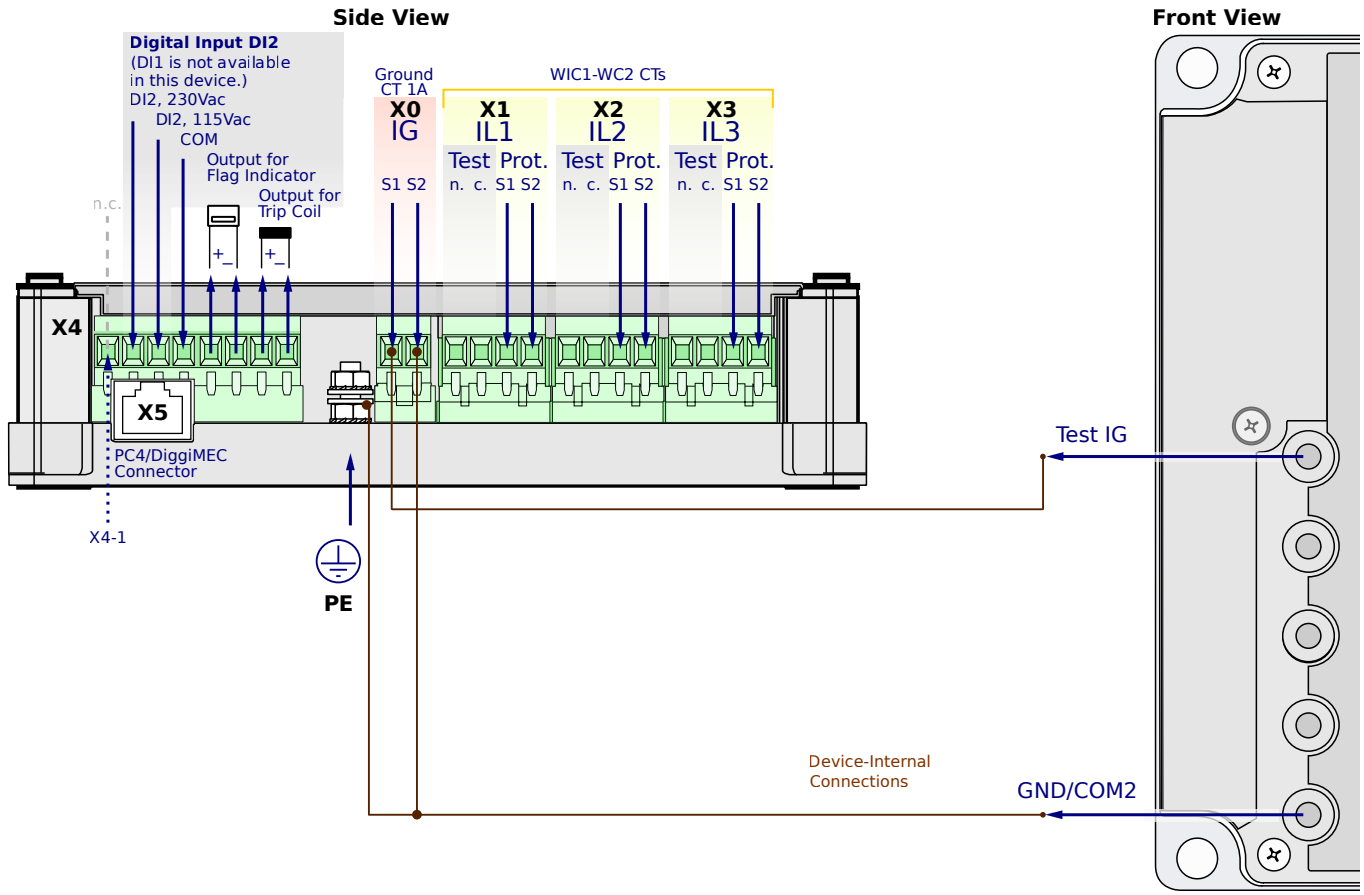


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1SAH

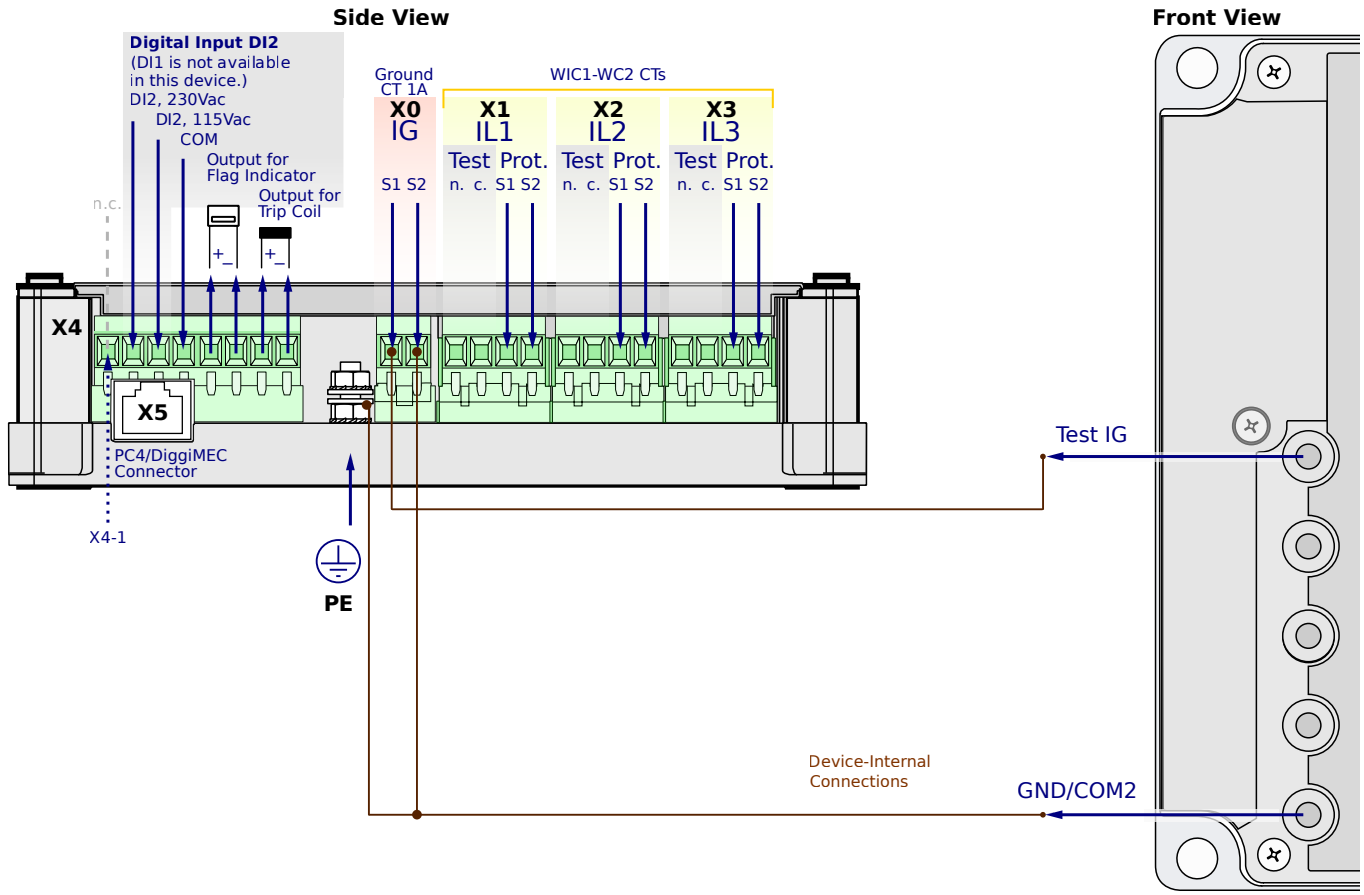


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1AA0

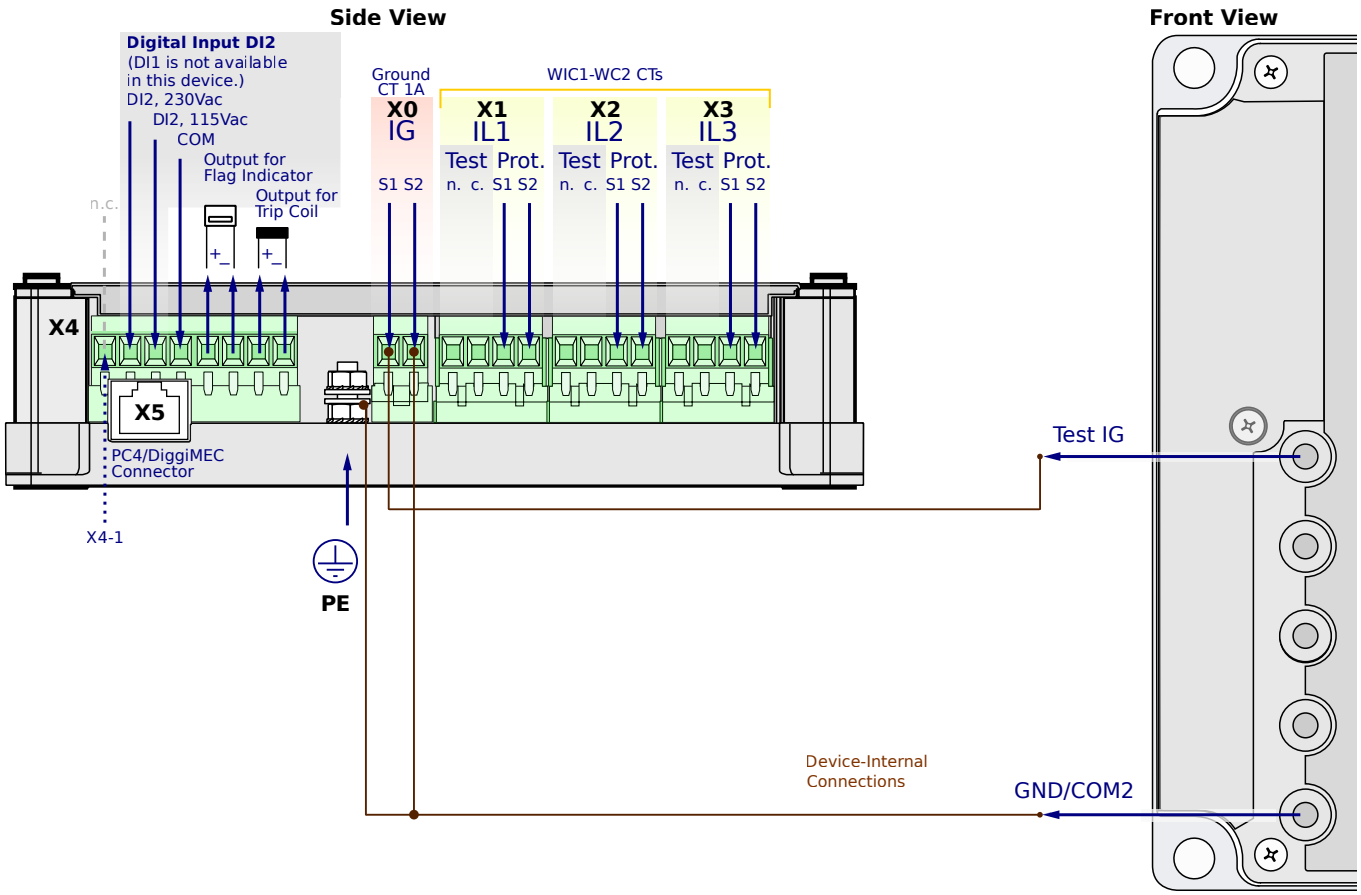


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1AAH

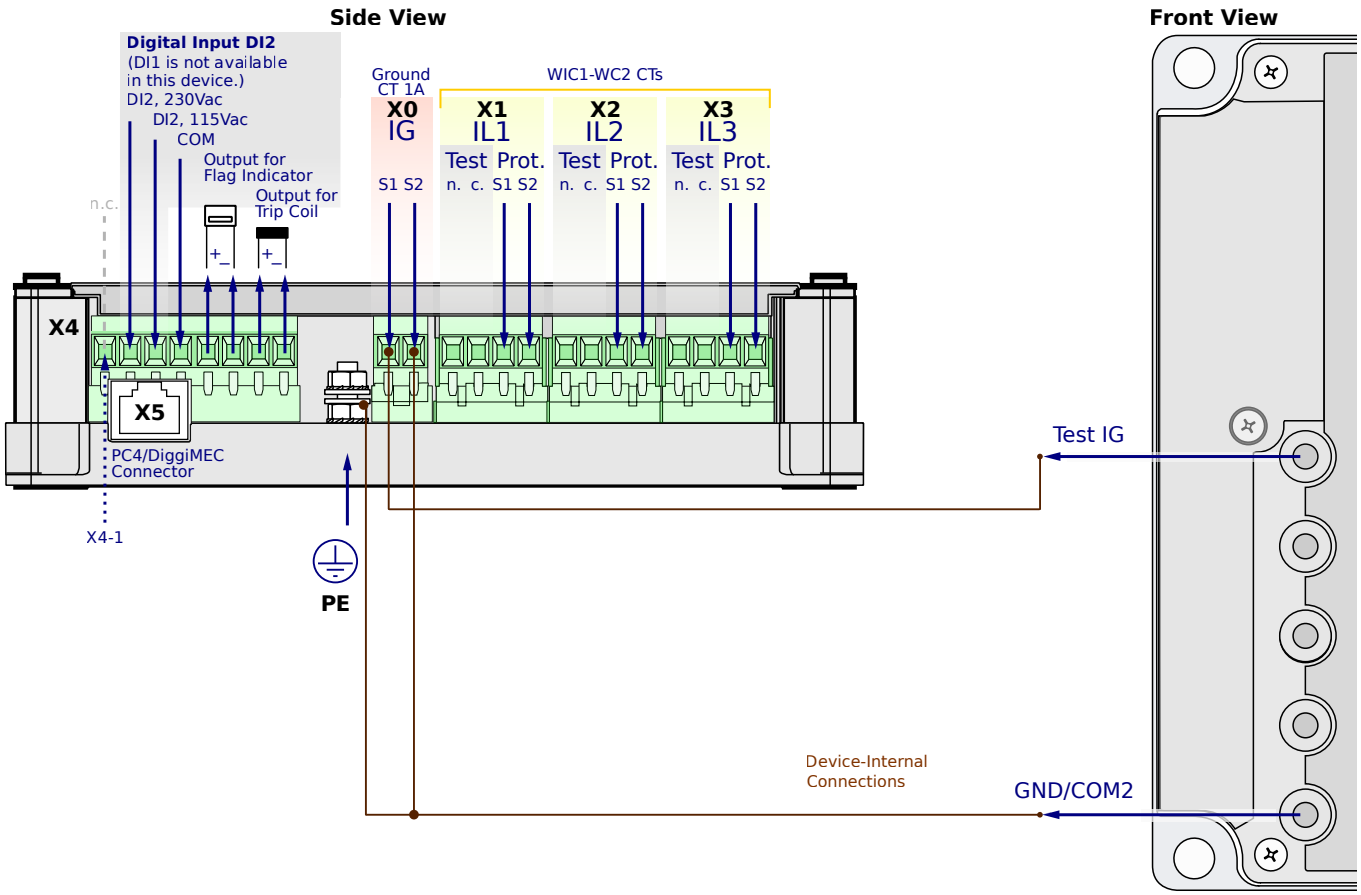


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1PA0

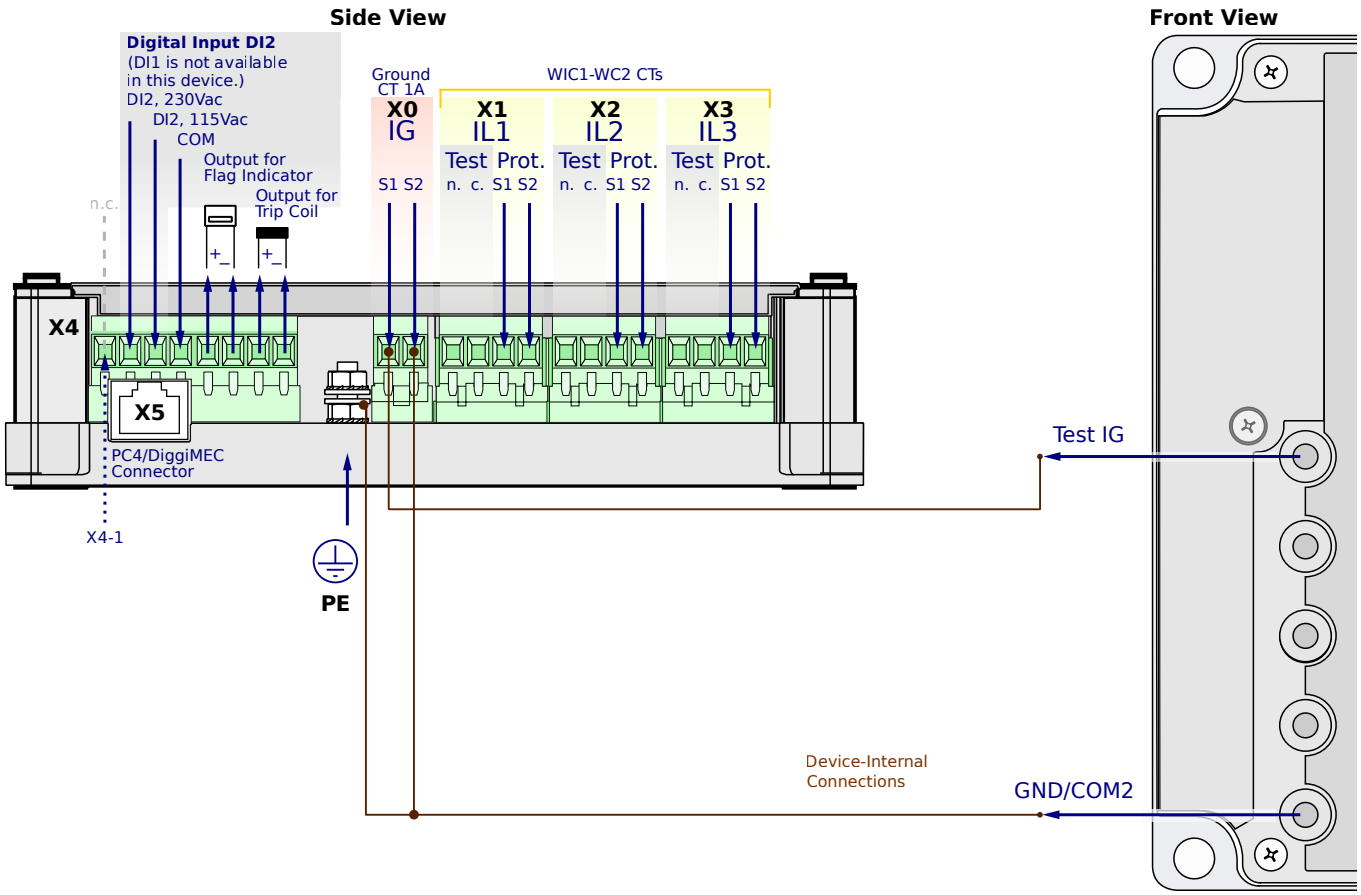


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC1PAH

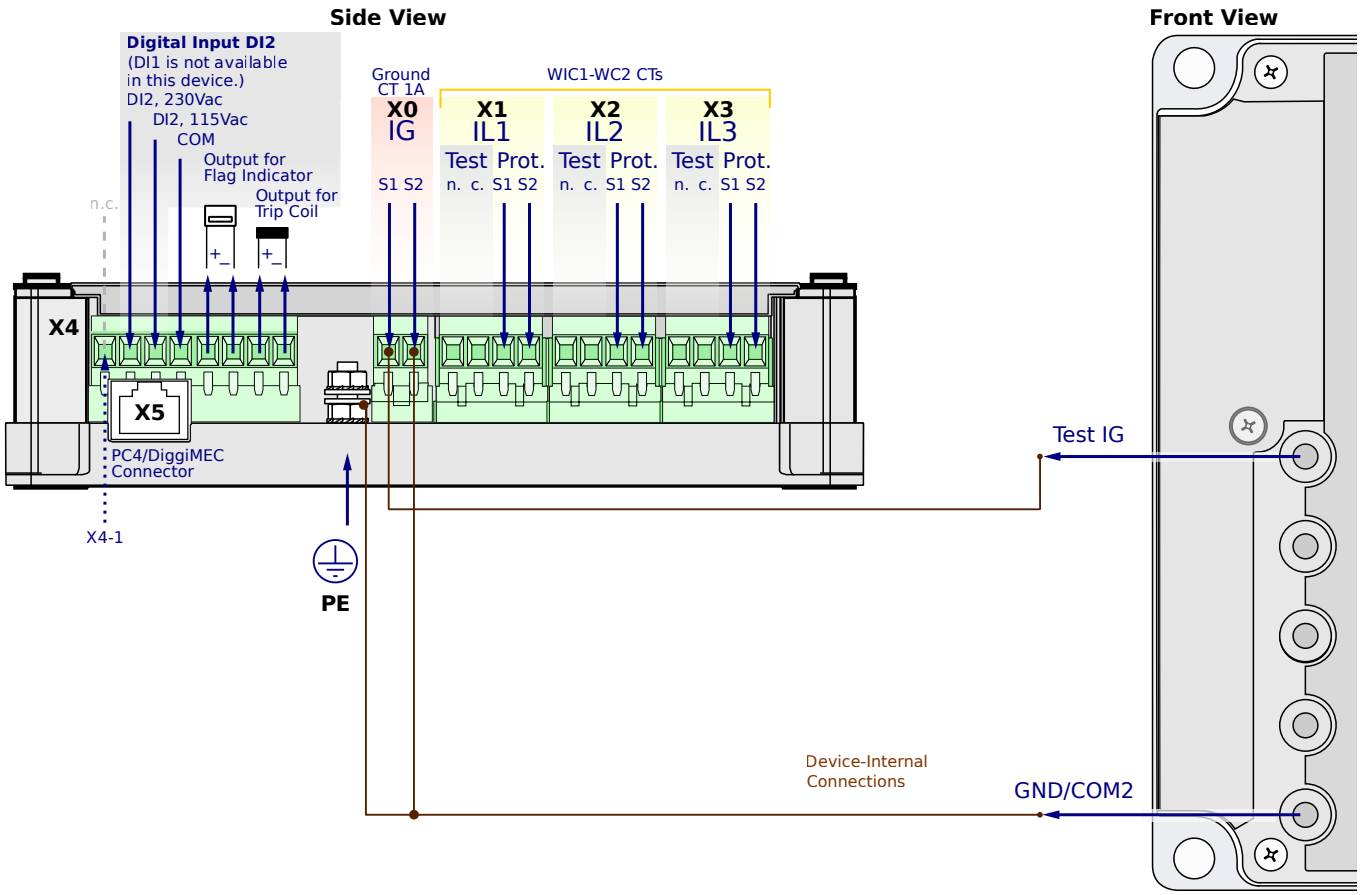


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2SA0

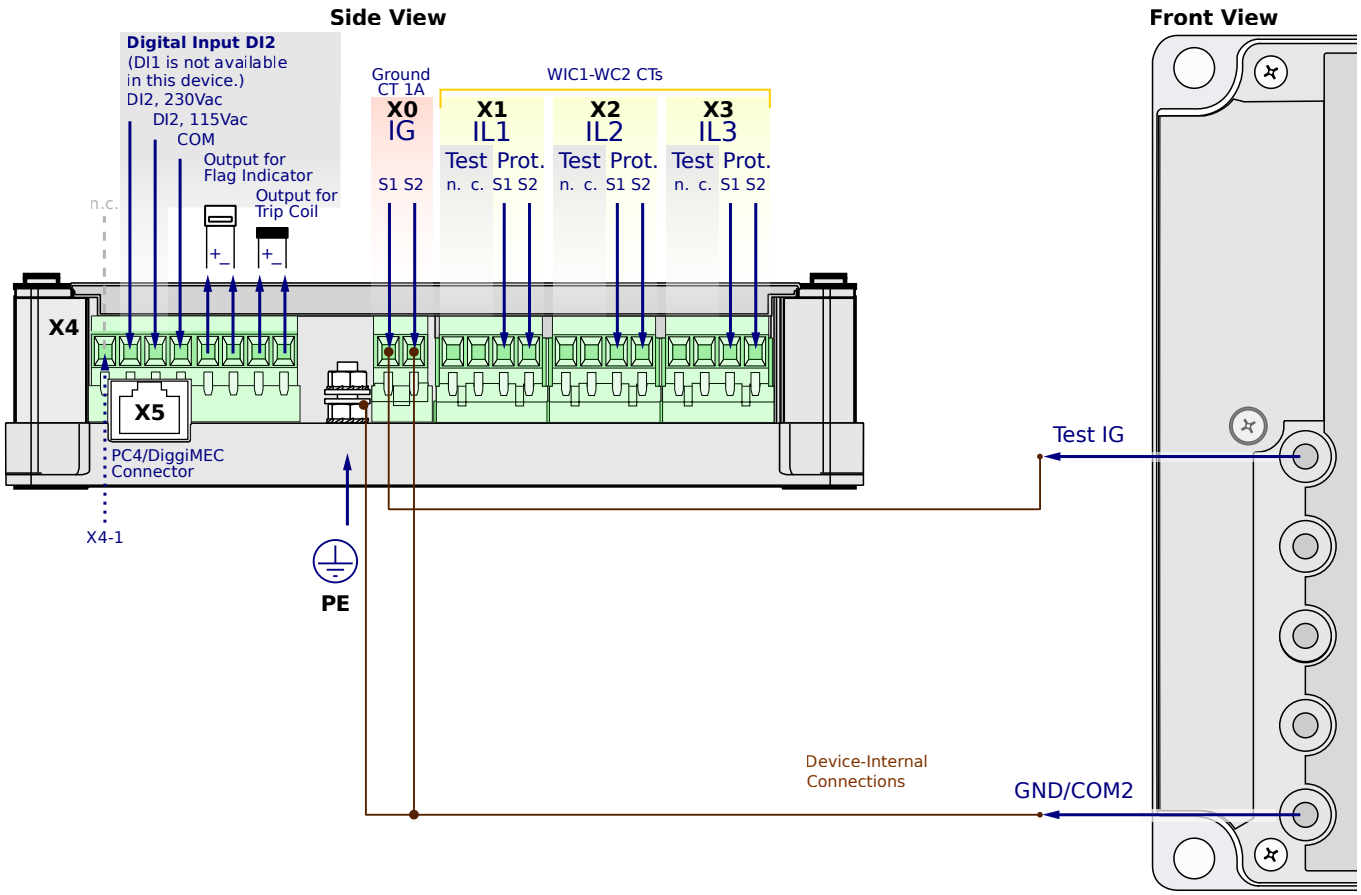


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2SAH

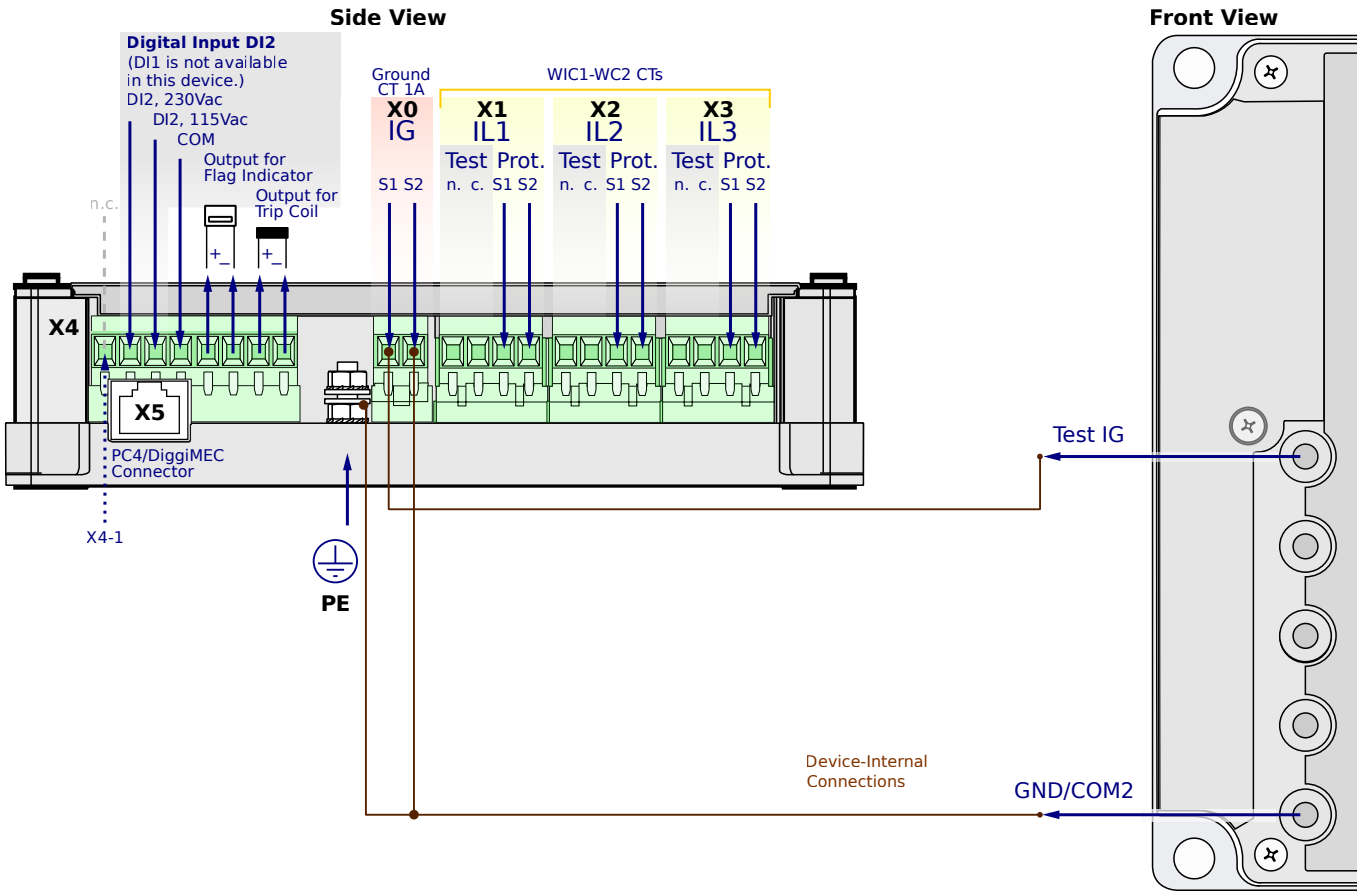


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2AA0

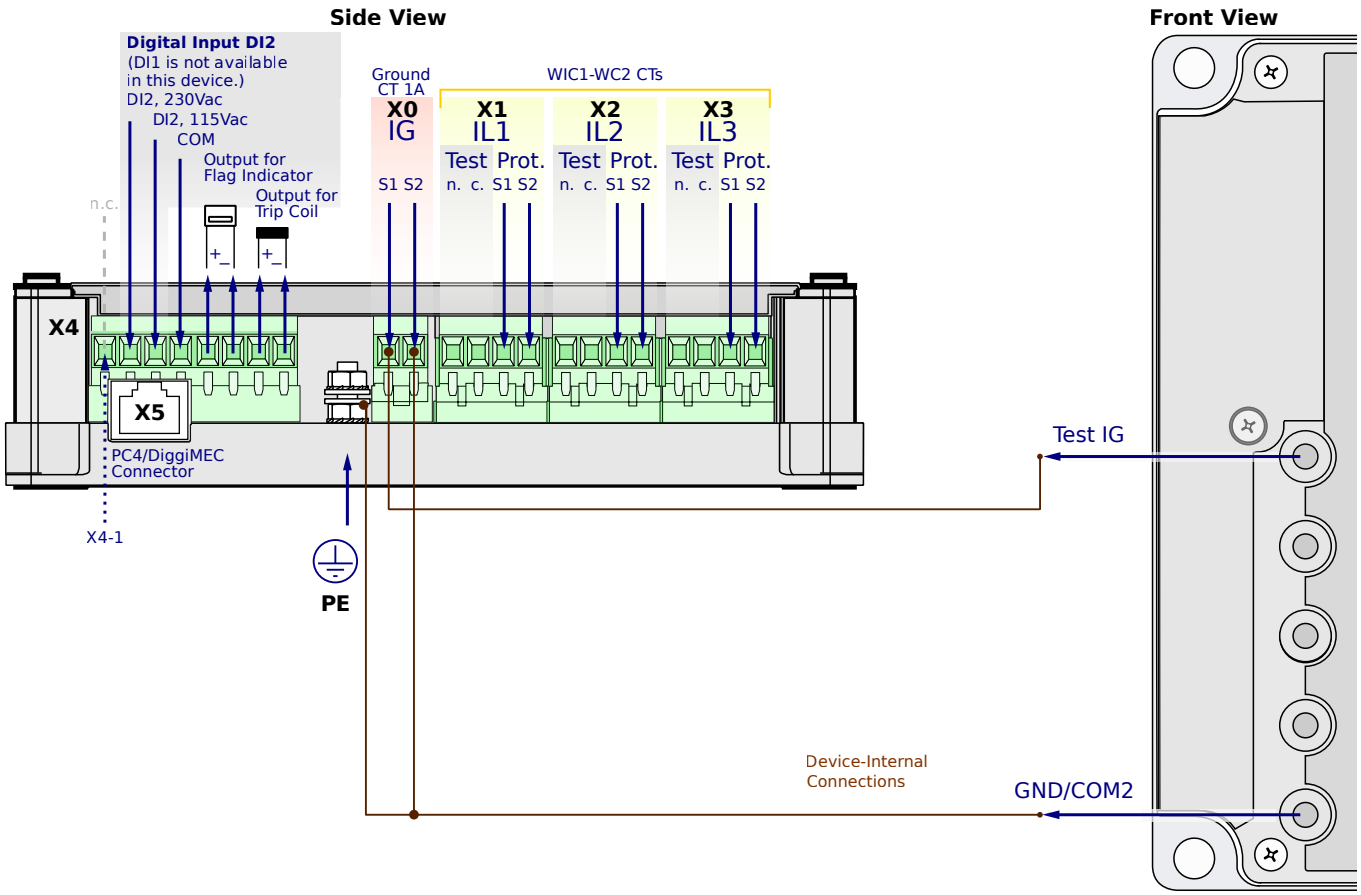


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2AAH

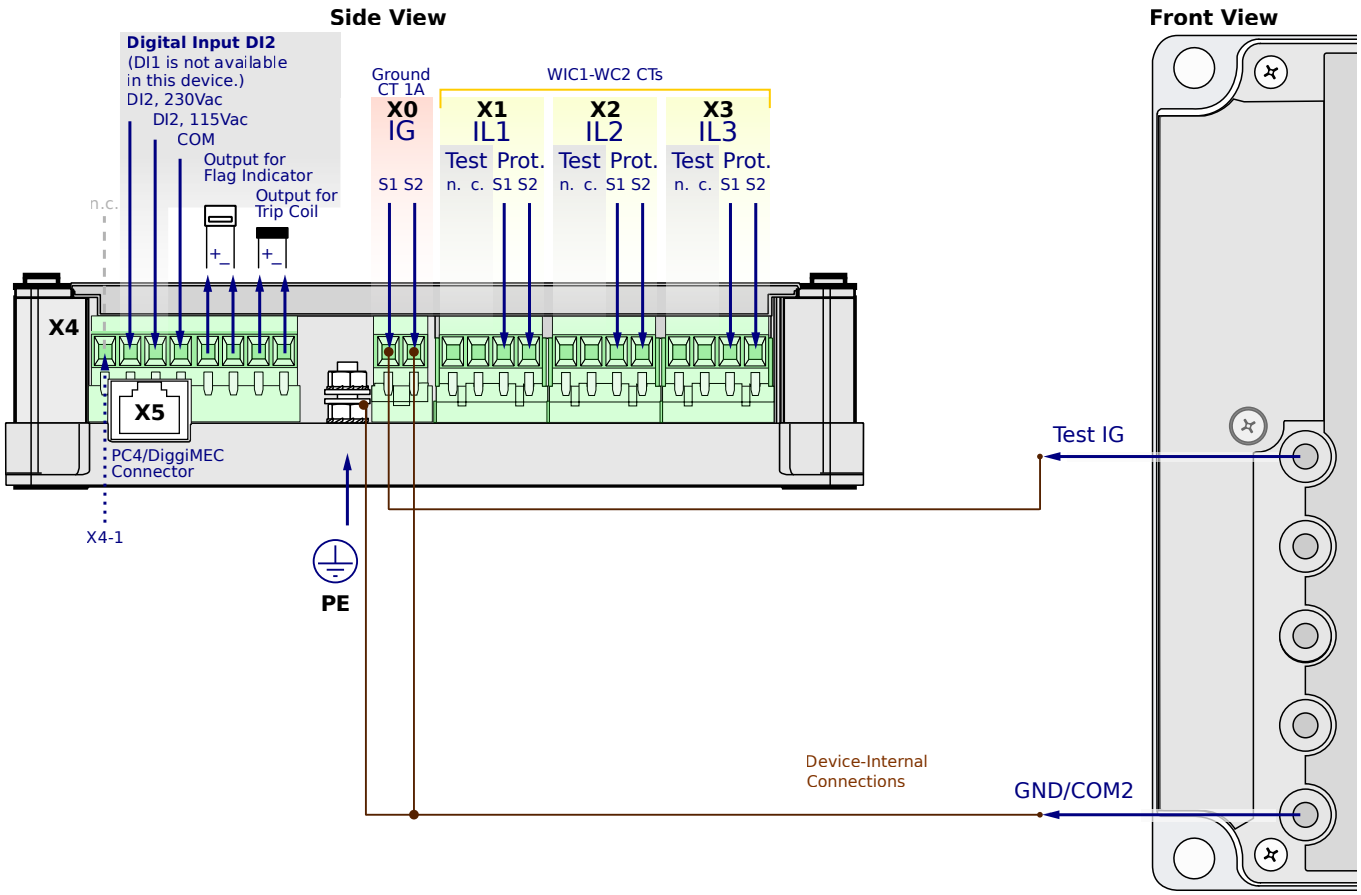


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2PA0

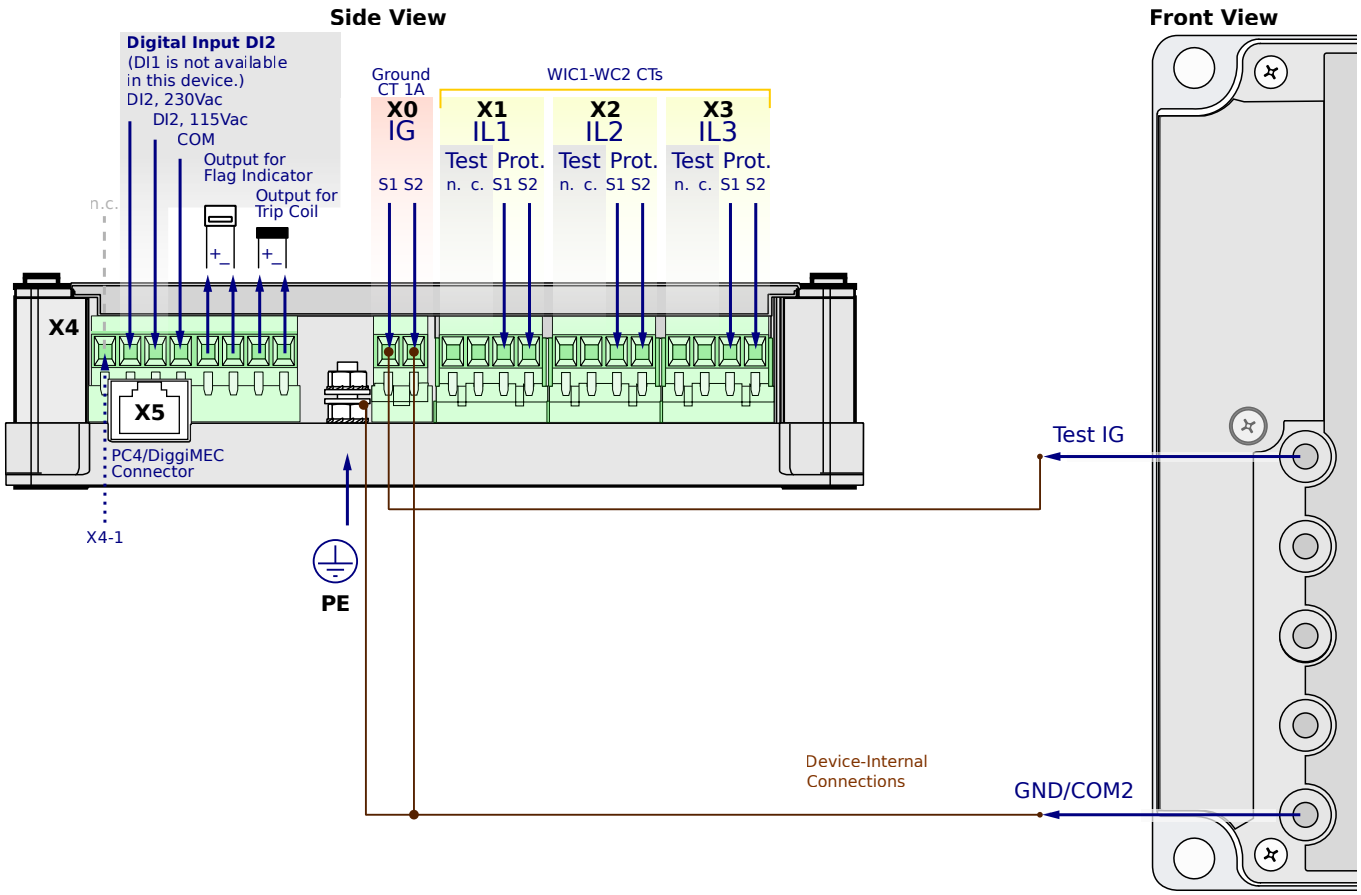


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5FC2PAH

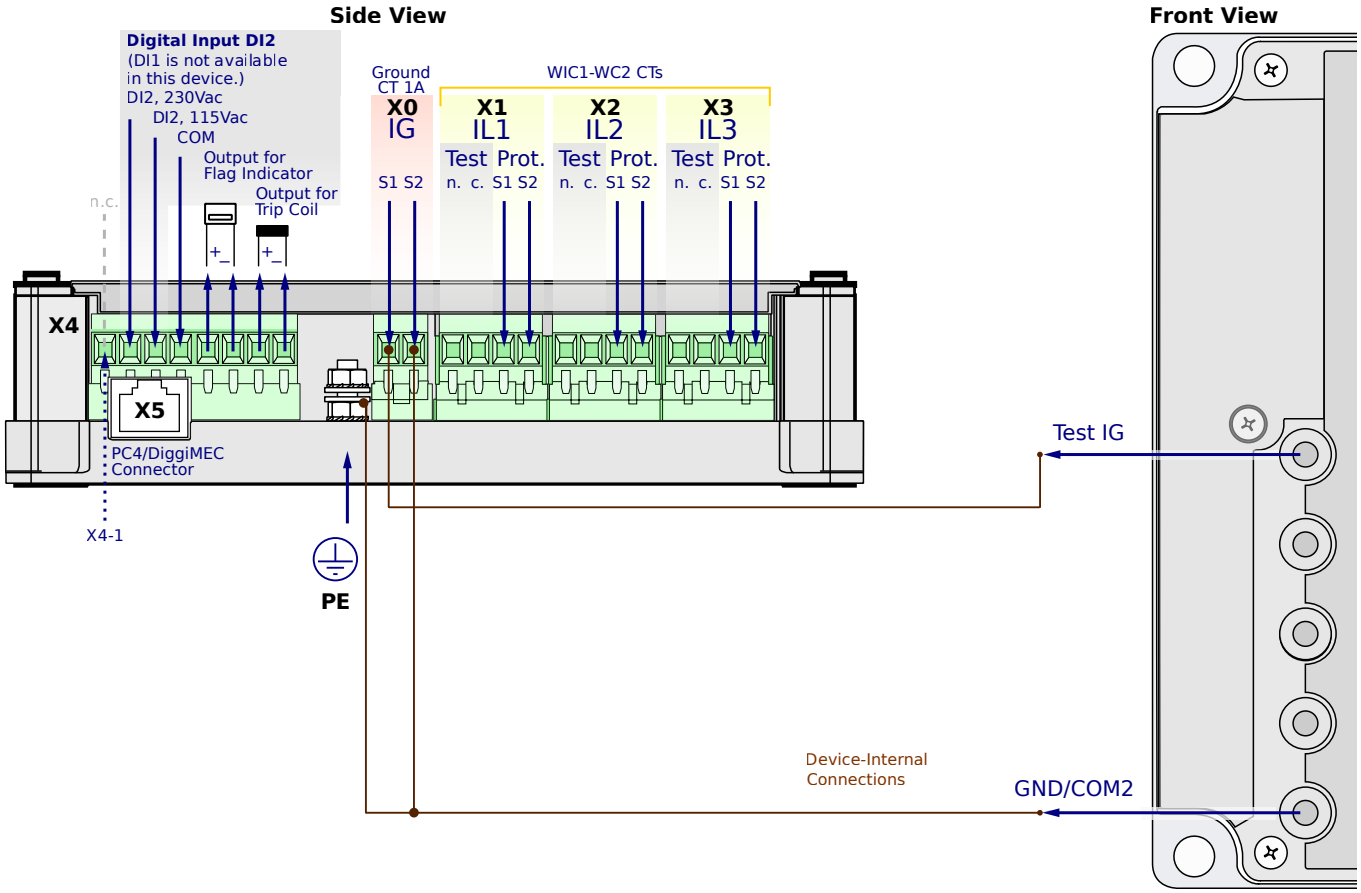


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1SA0

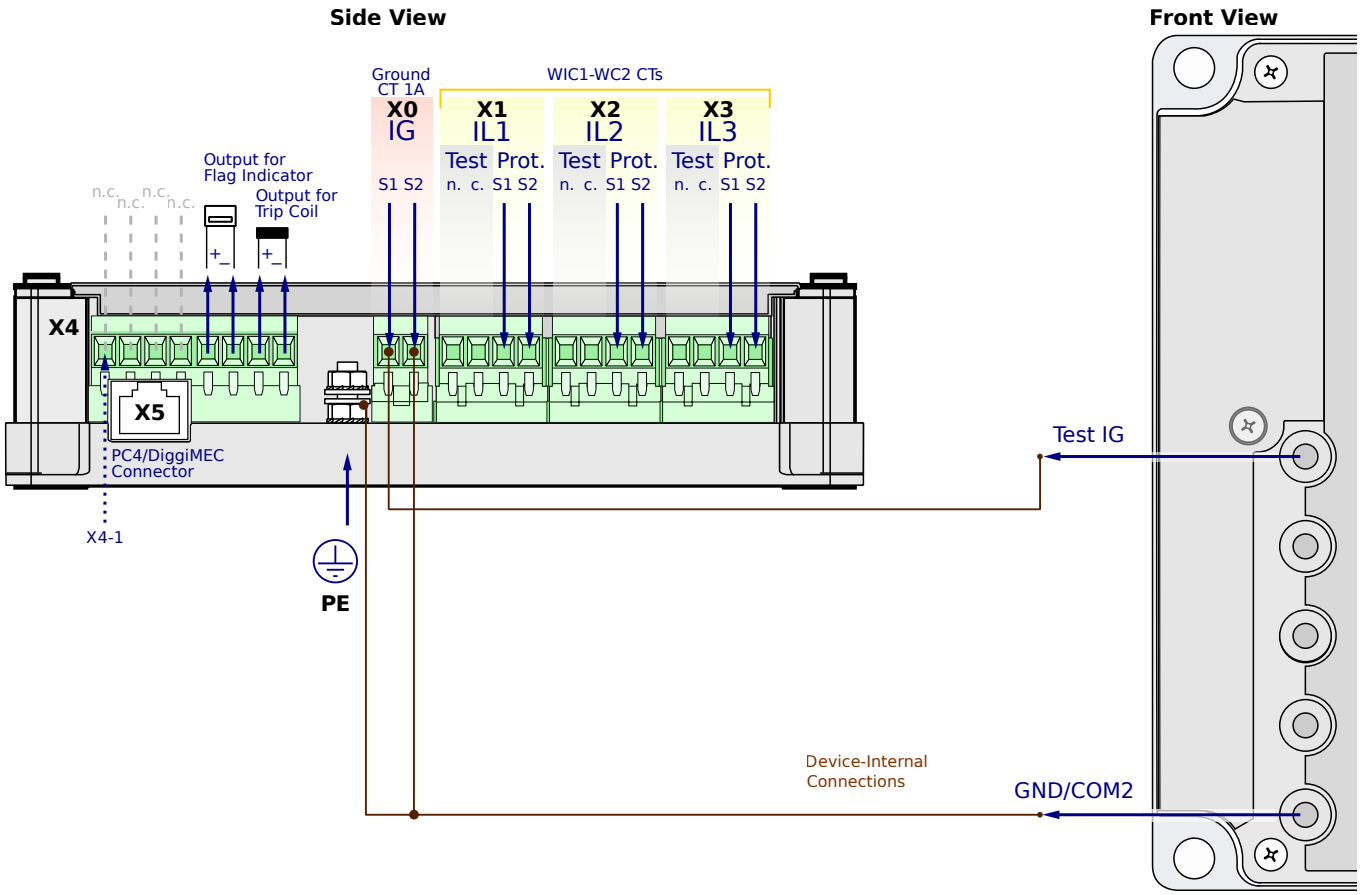


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1SAH

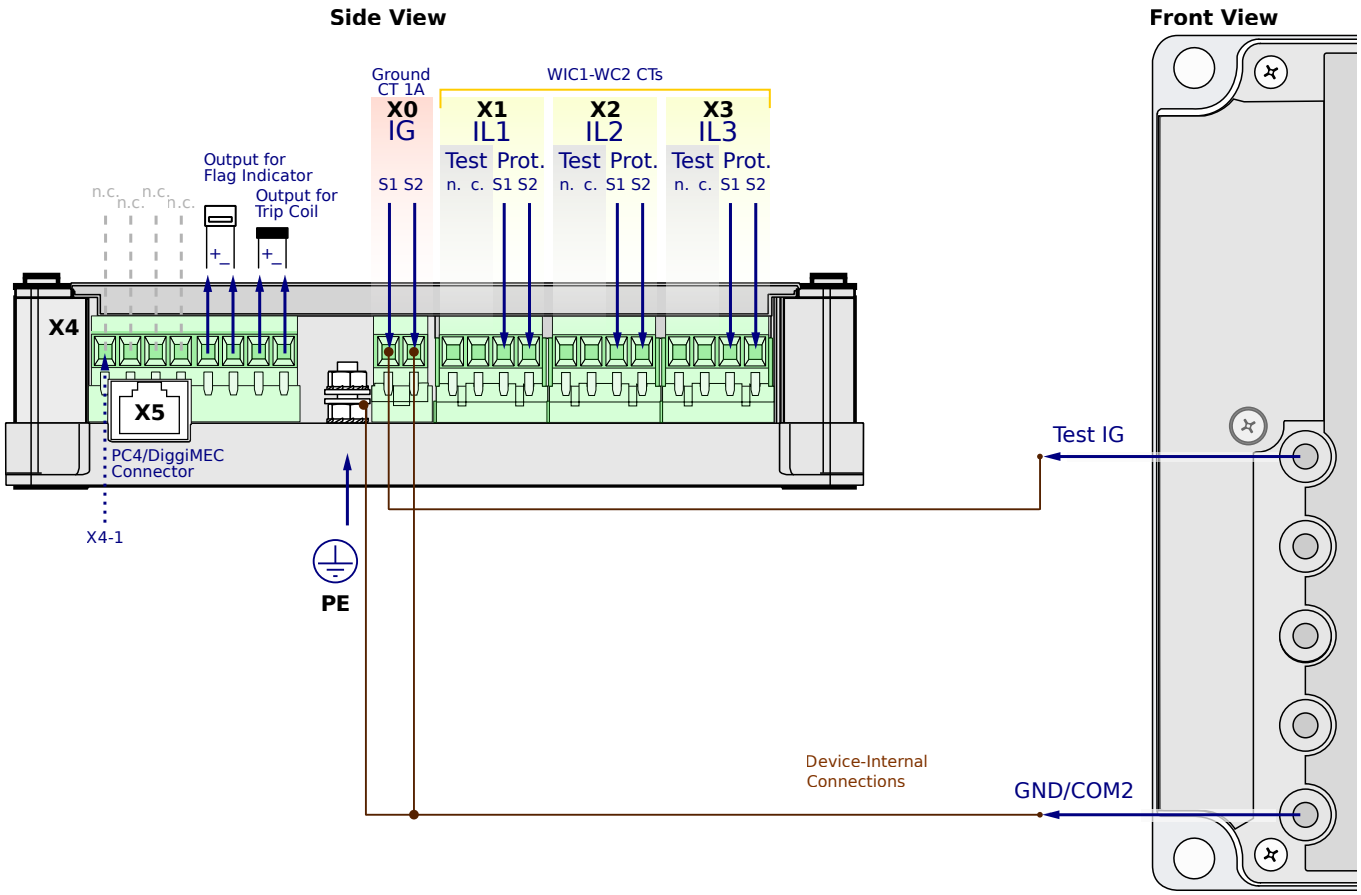


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1AA0

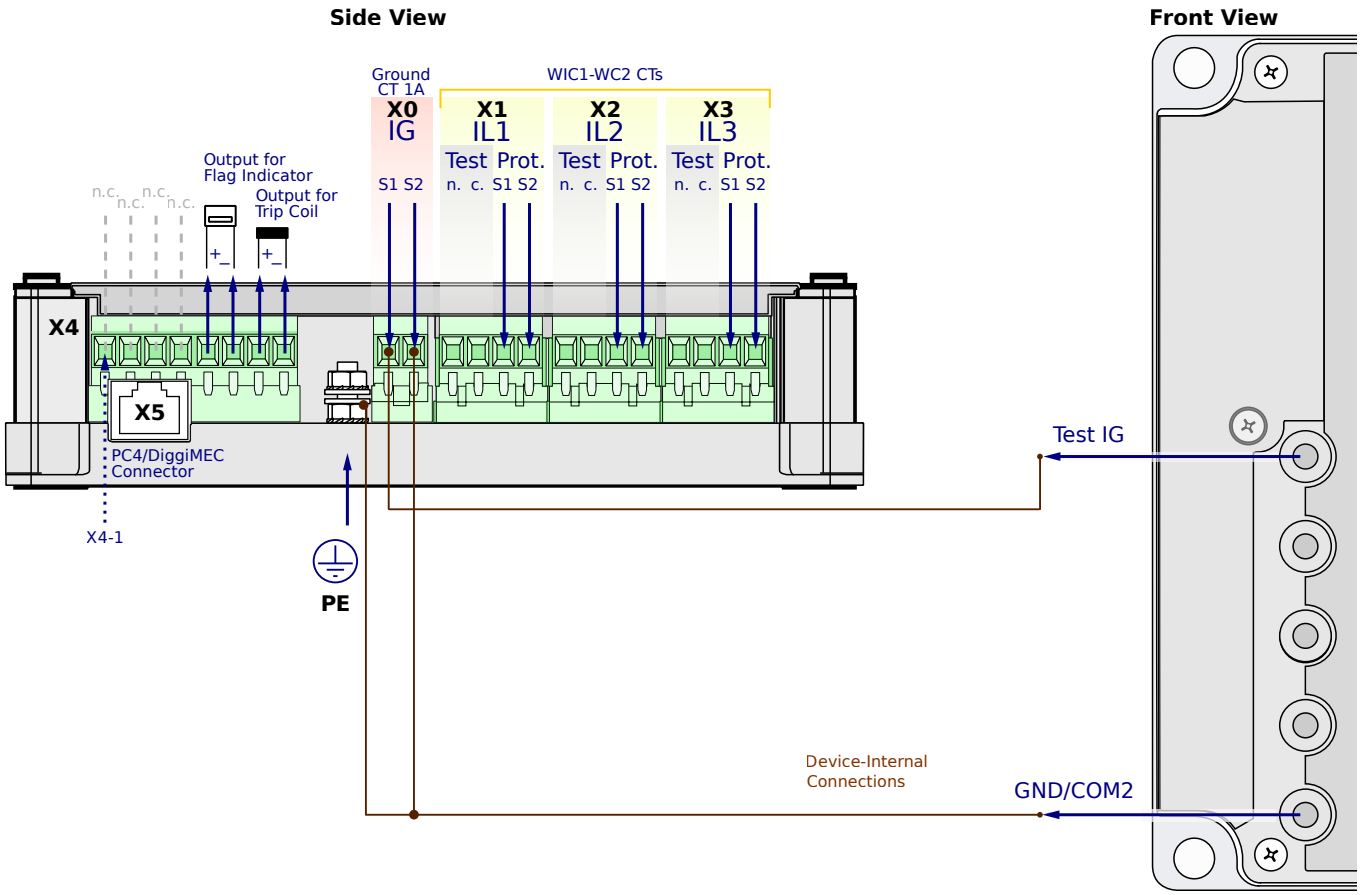


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1AAH

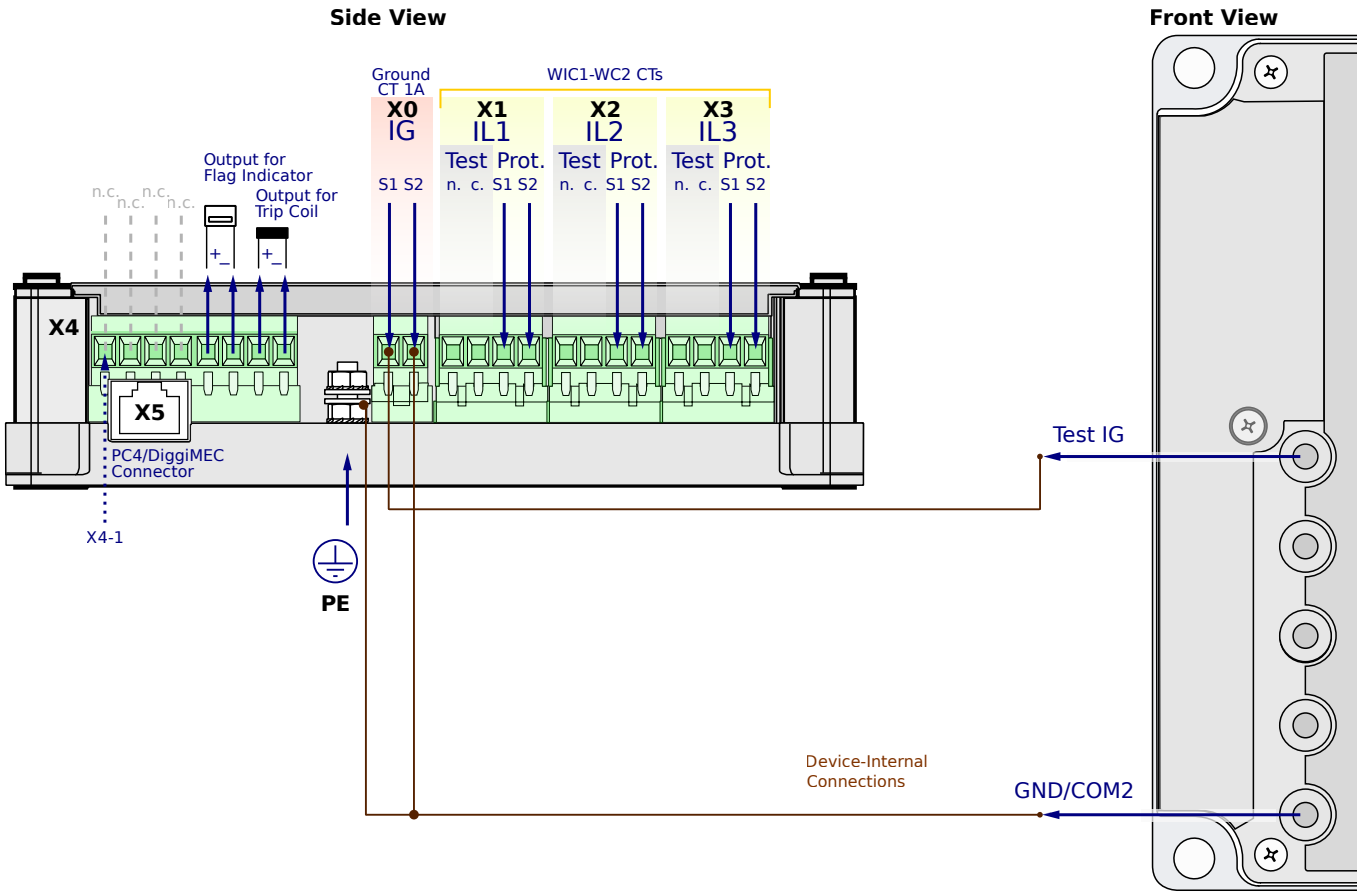


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1PA0

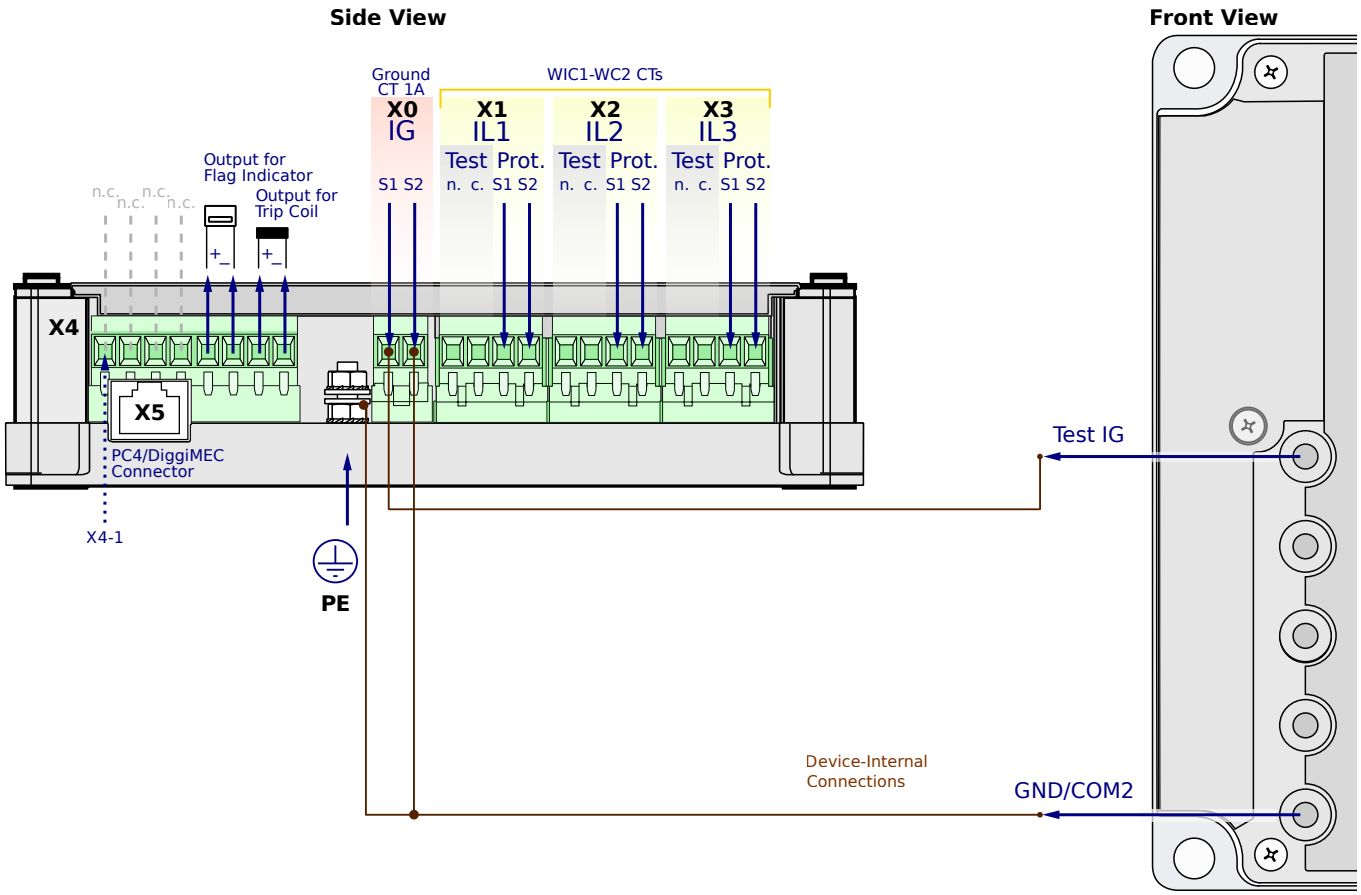


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN1PAH

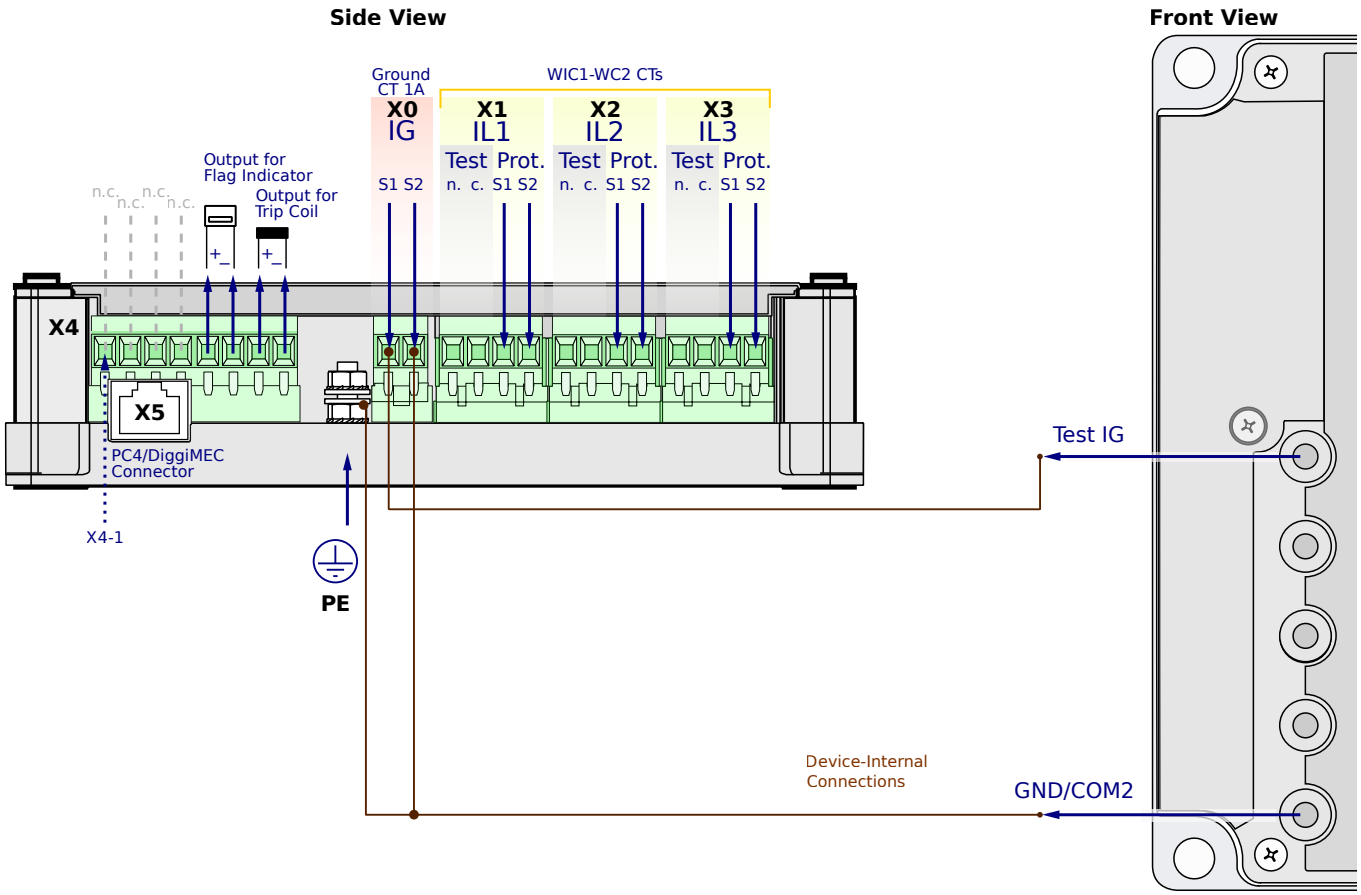


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2SA0

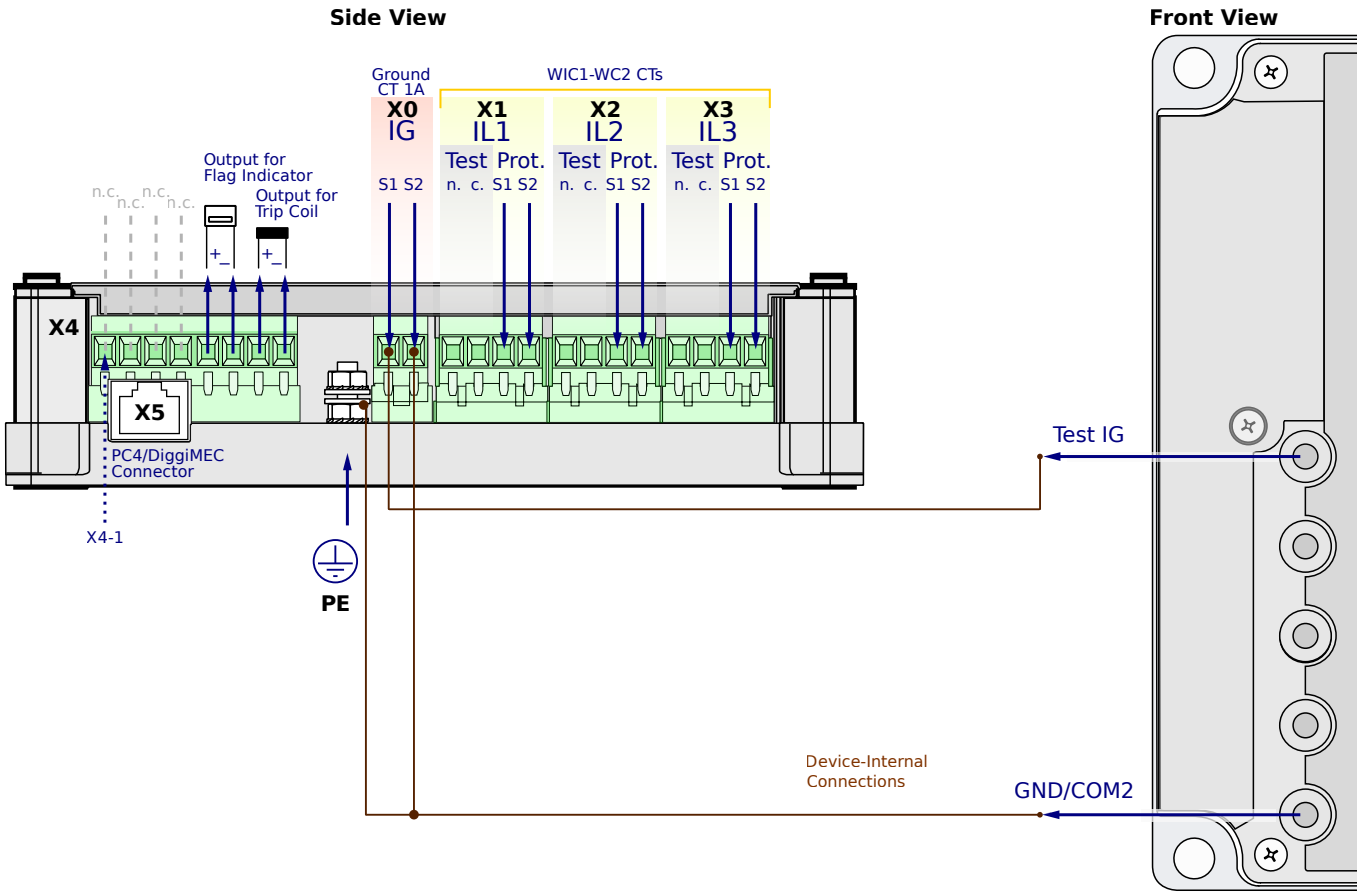


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2SAH

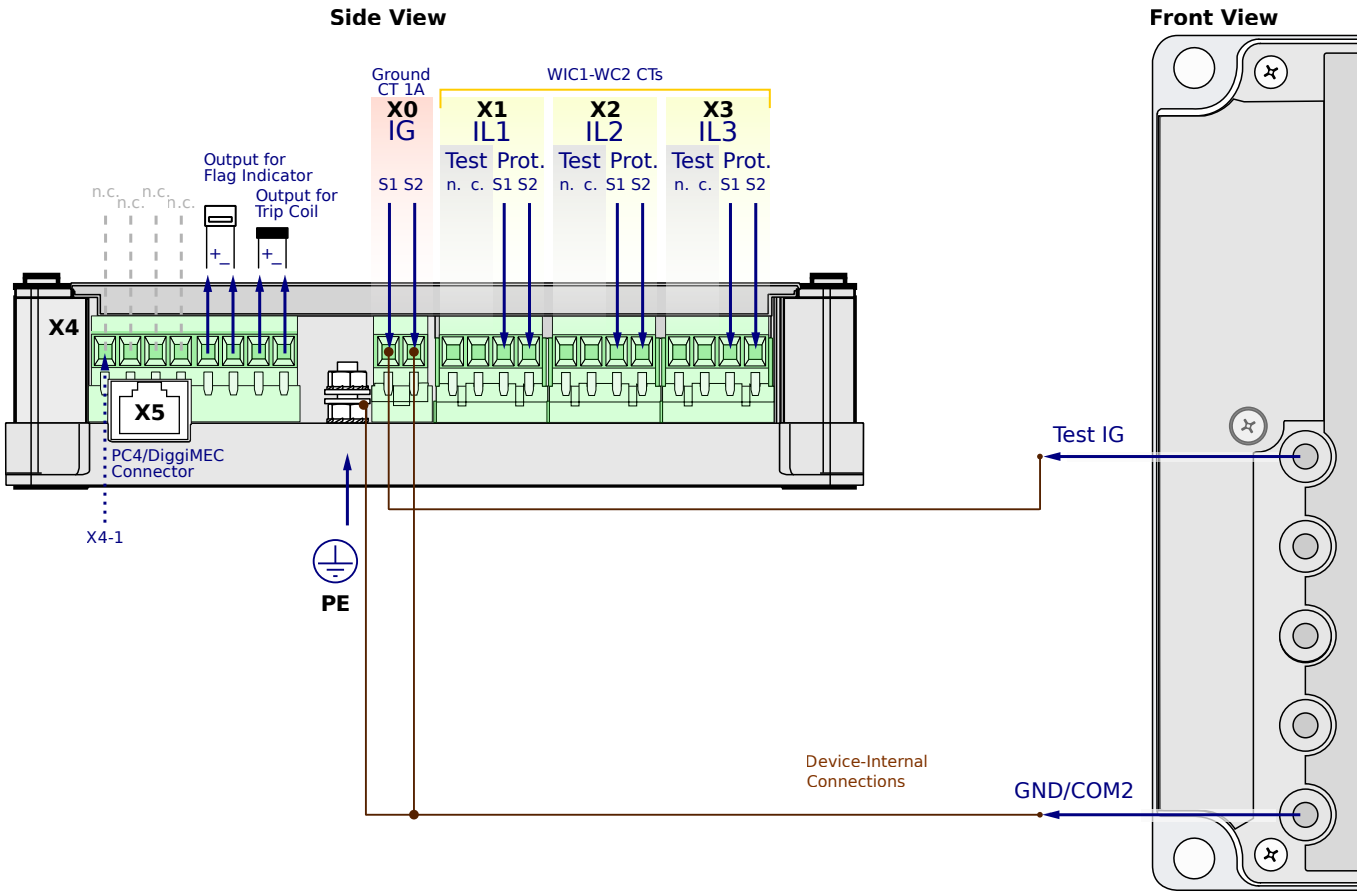


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2AA0

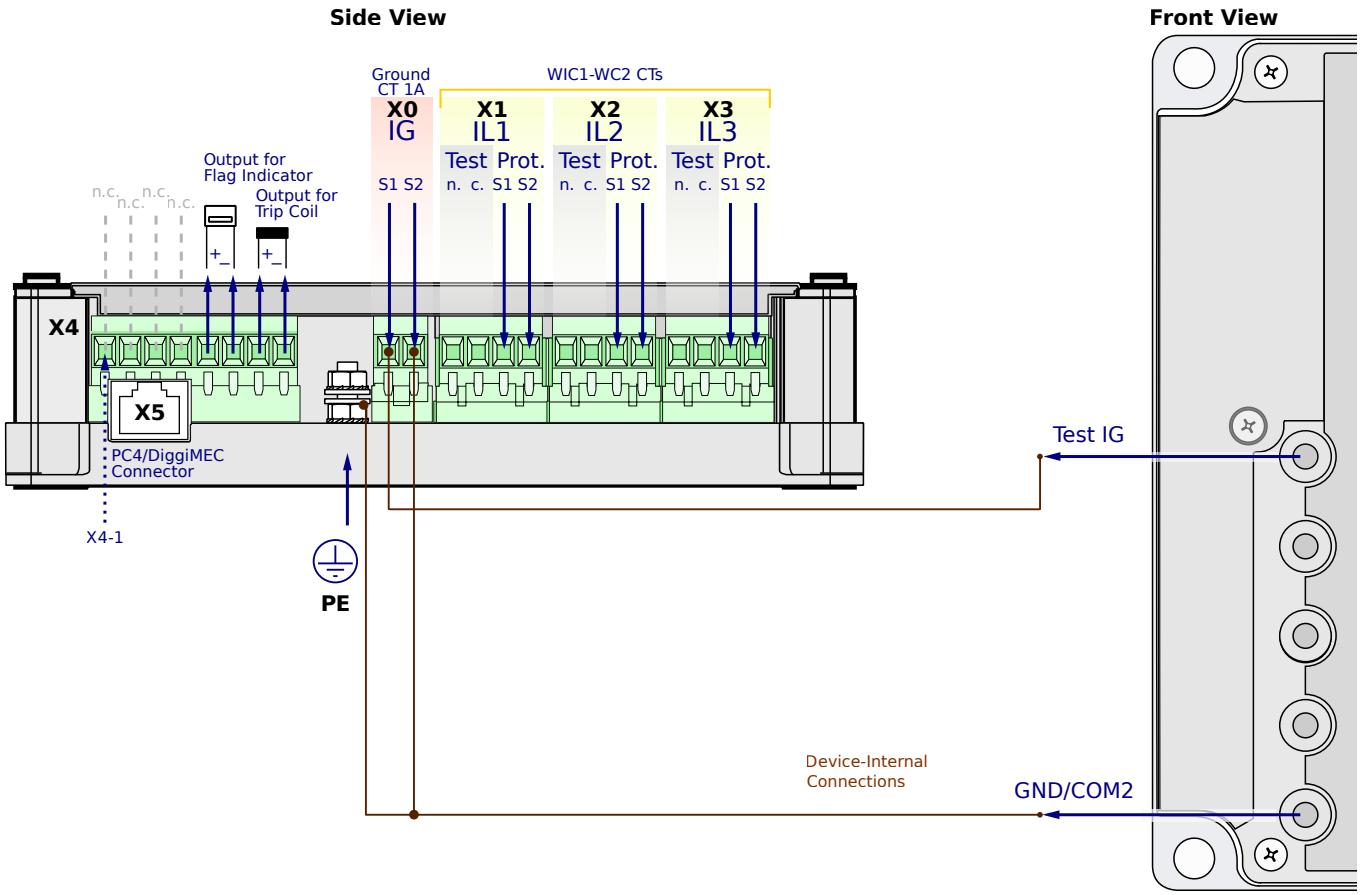


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2AAH

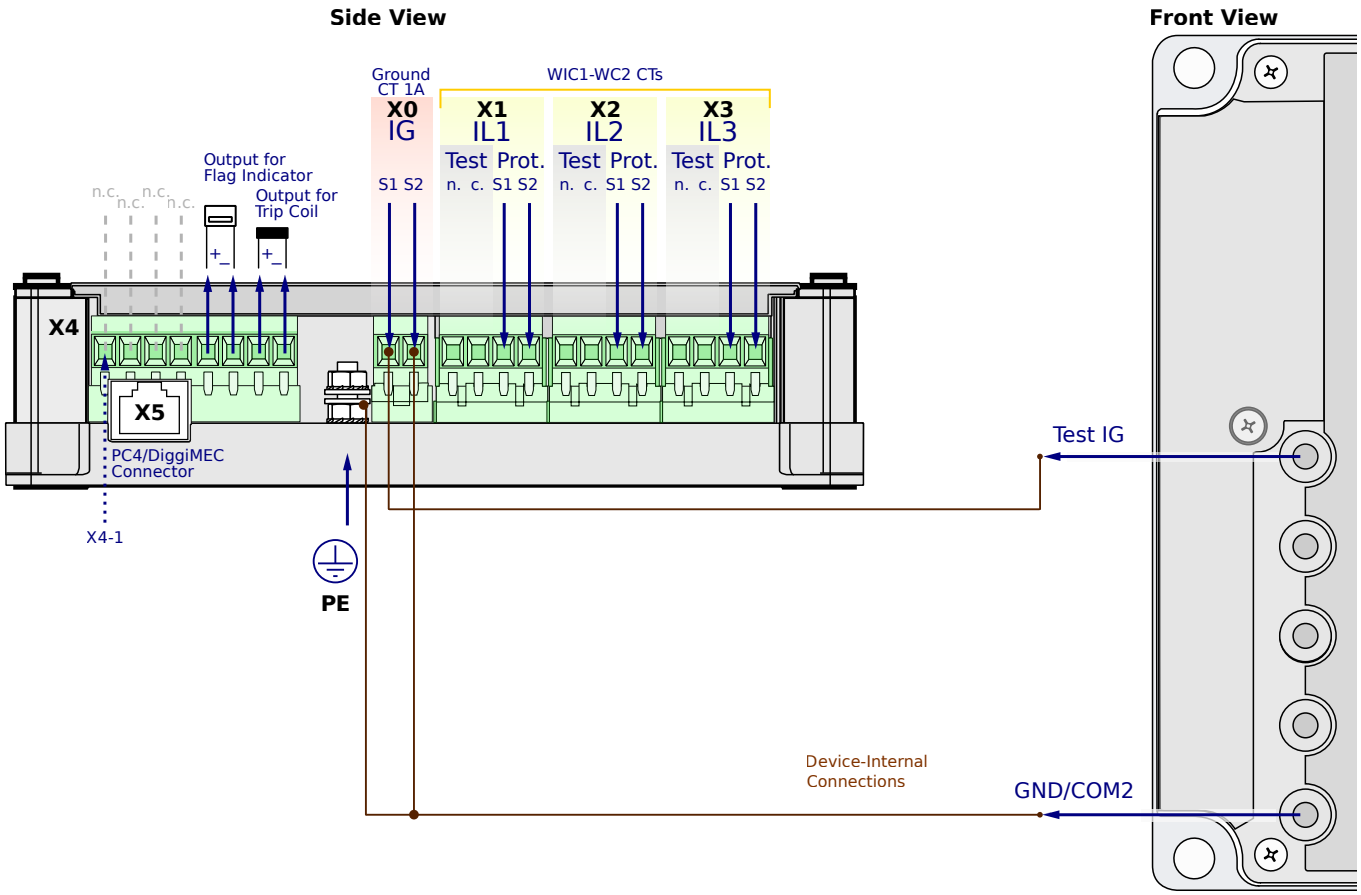


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2PA0

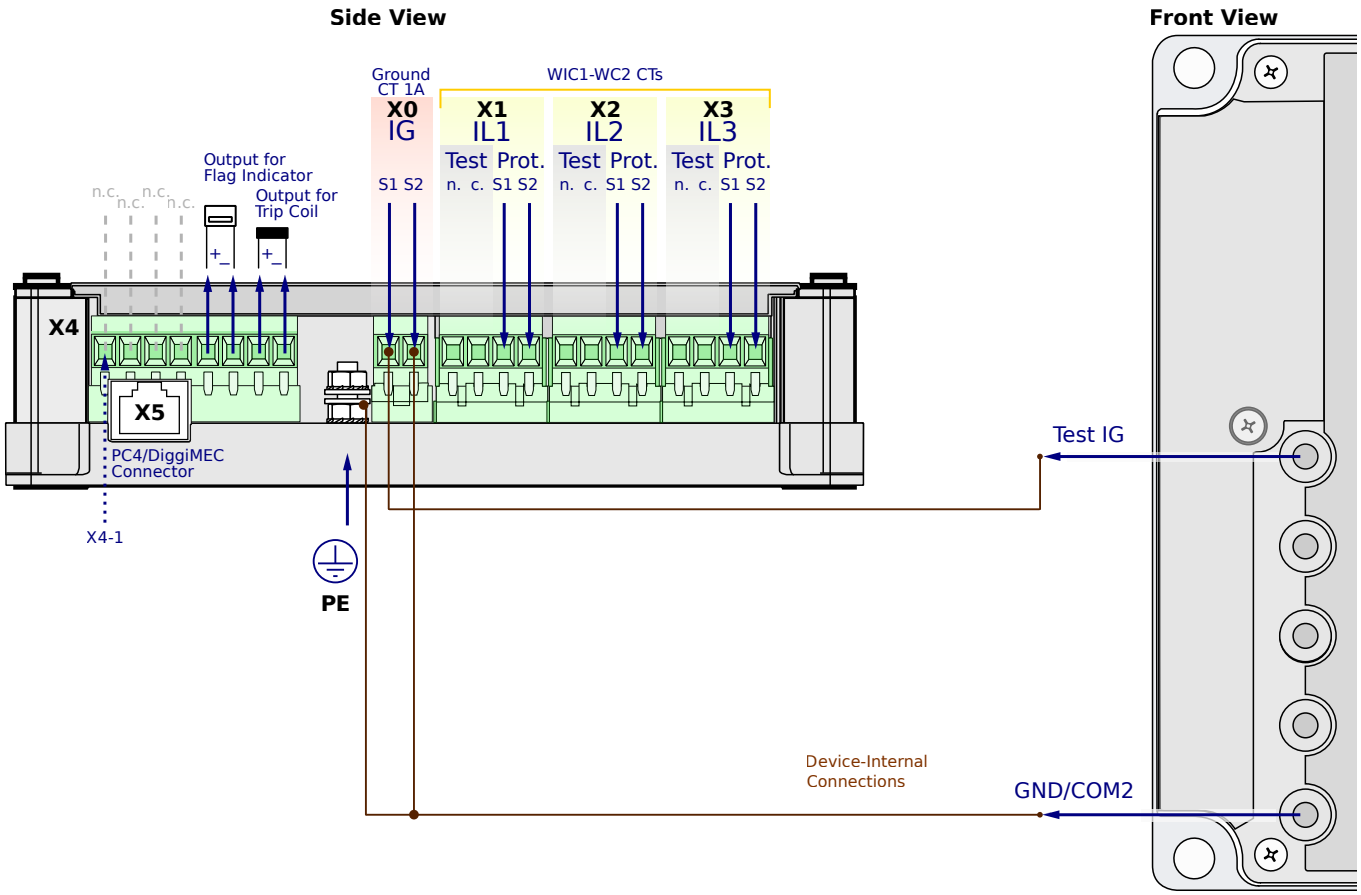


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CN2PAH

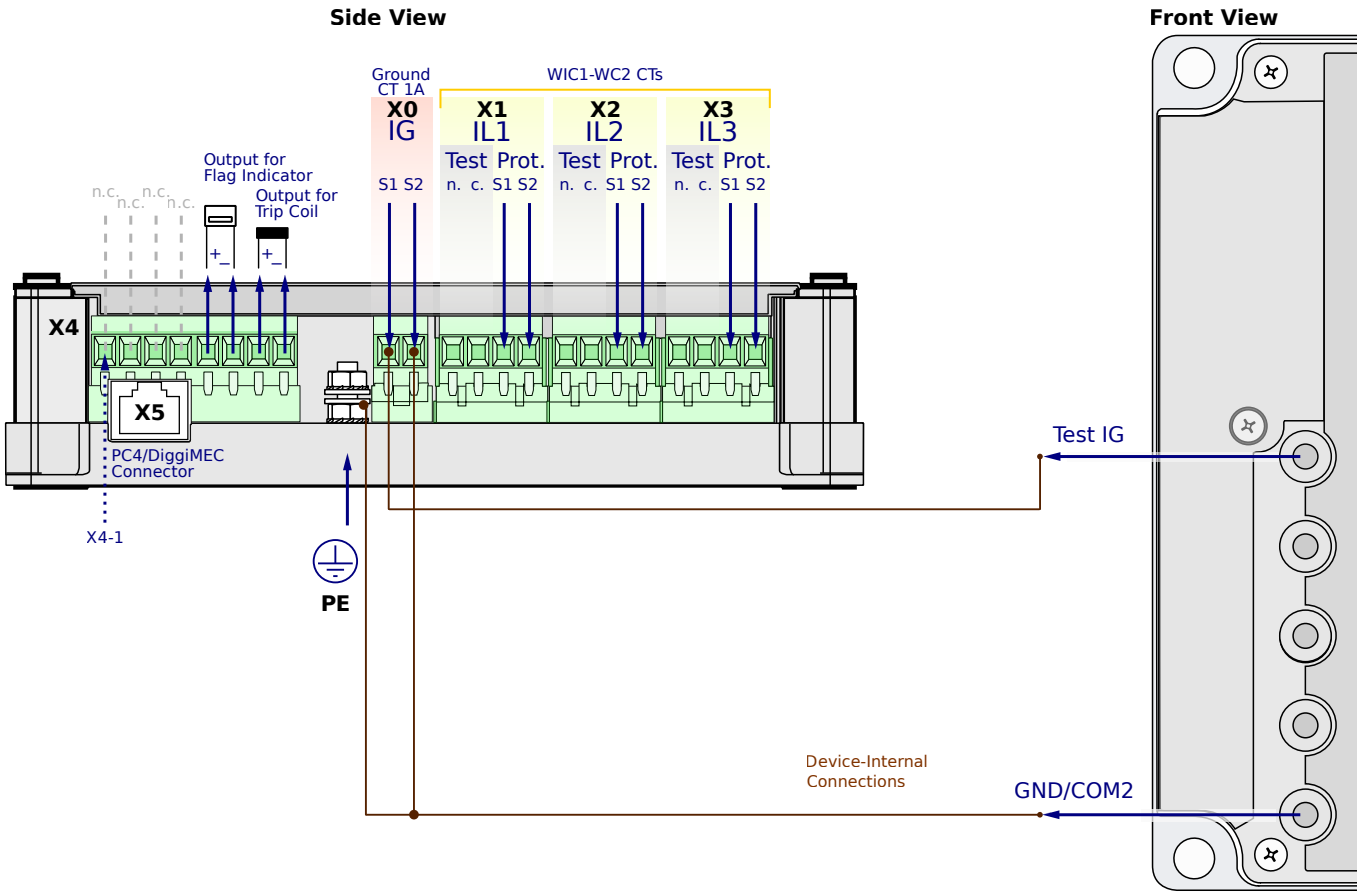


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1SA0

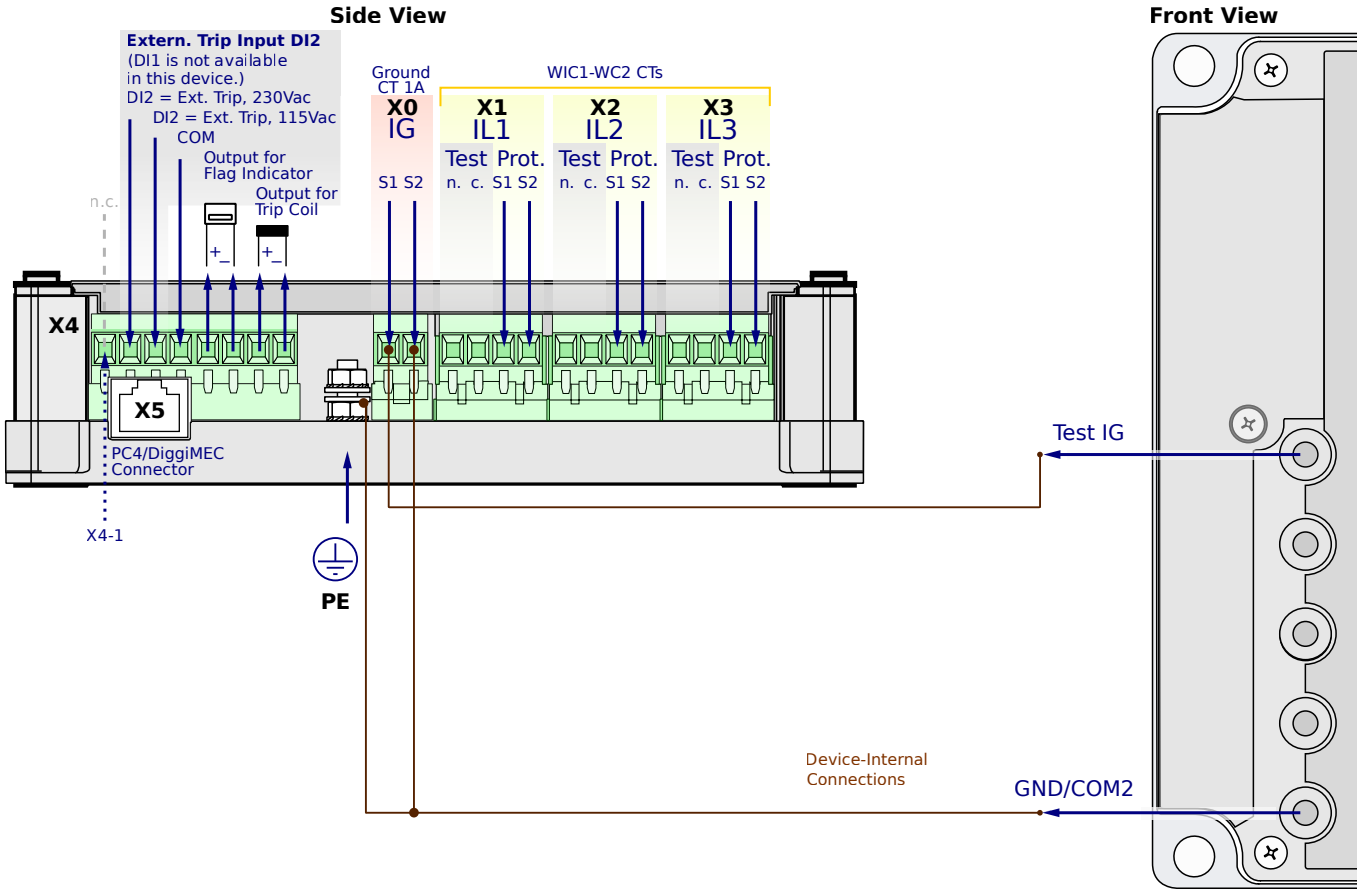


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1SAH

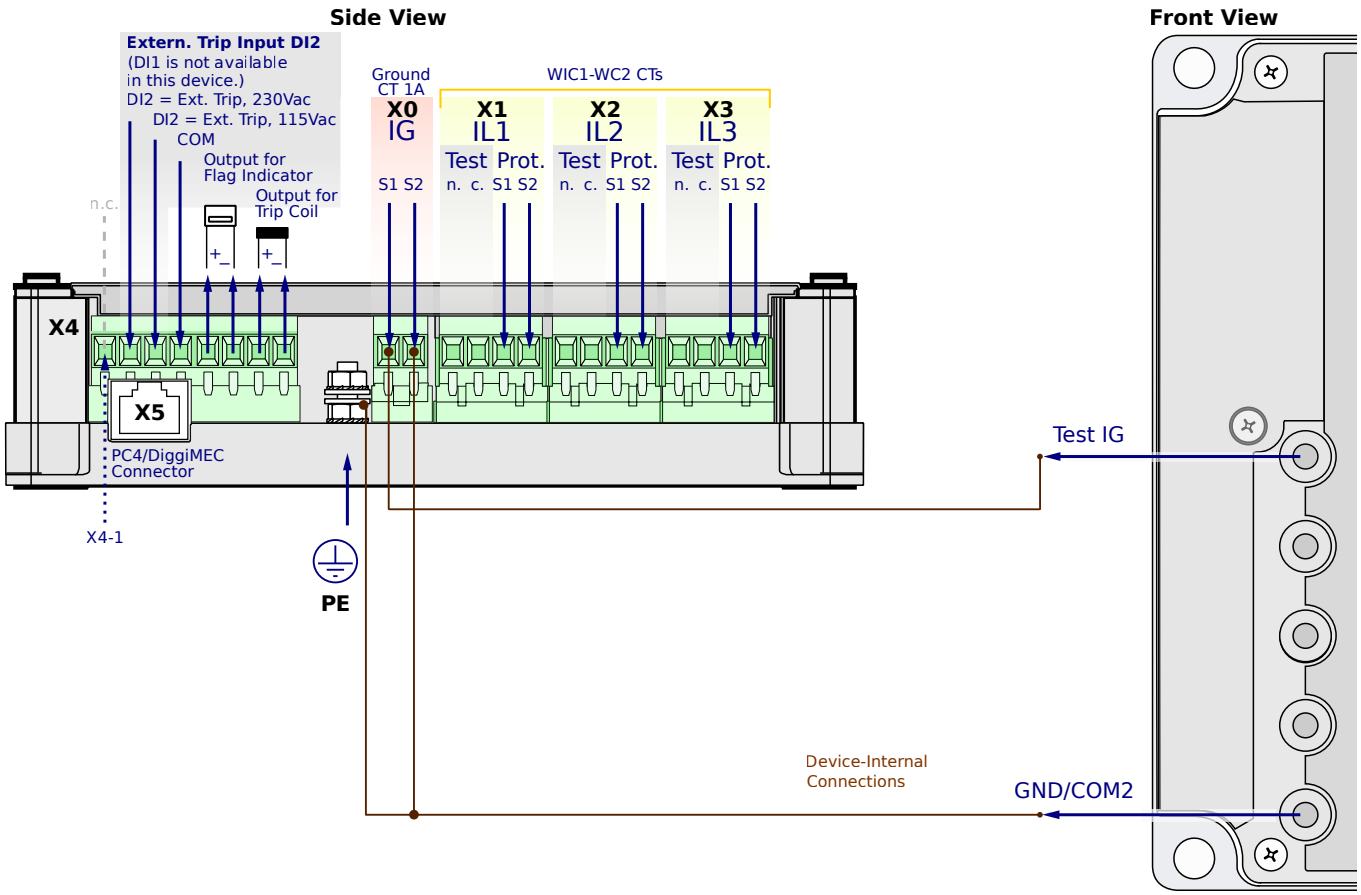


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1AA0

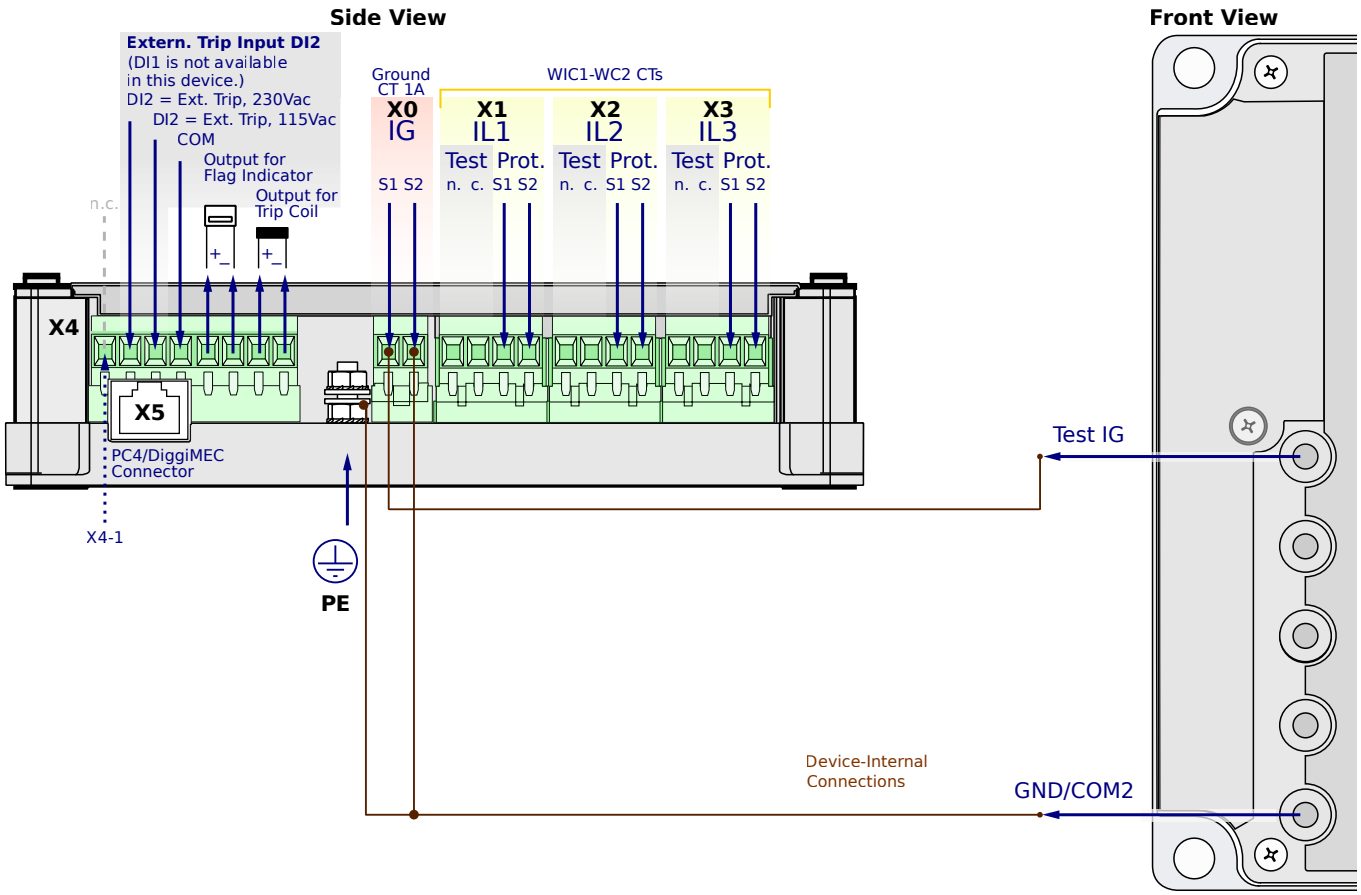


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1AAH

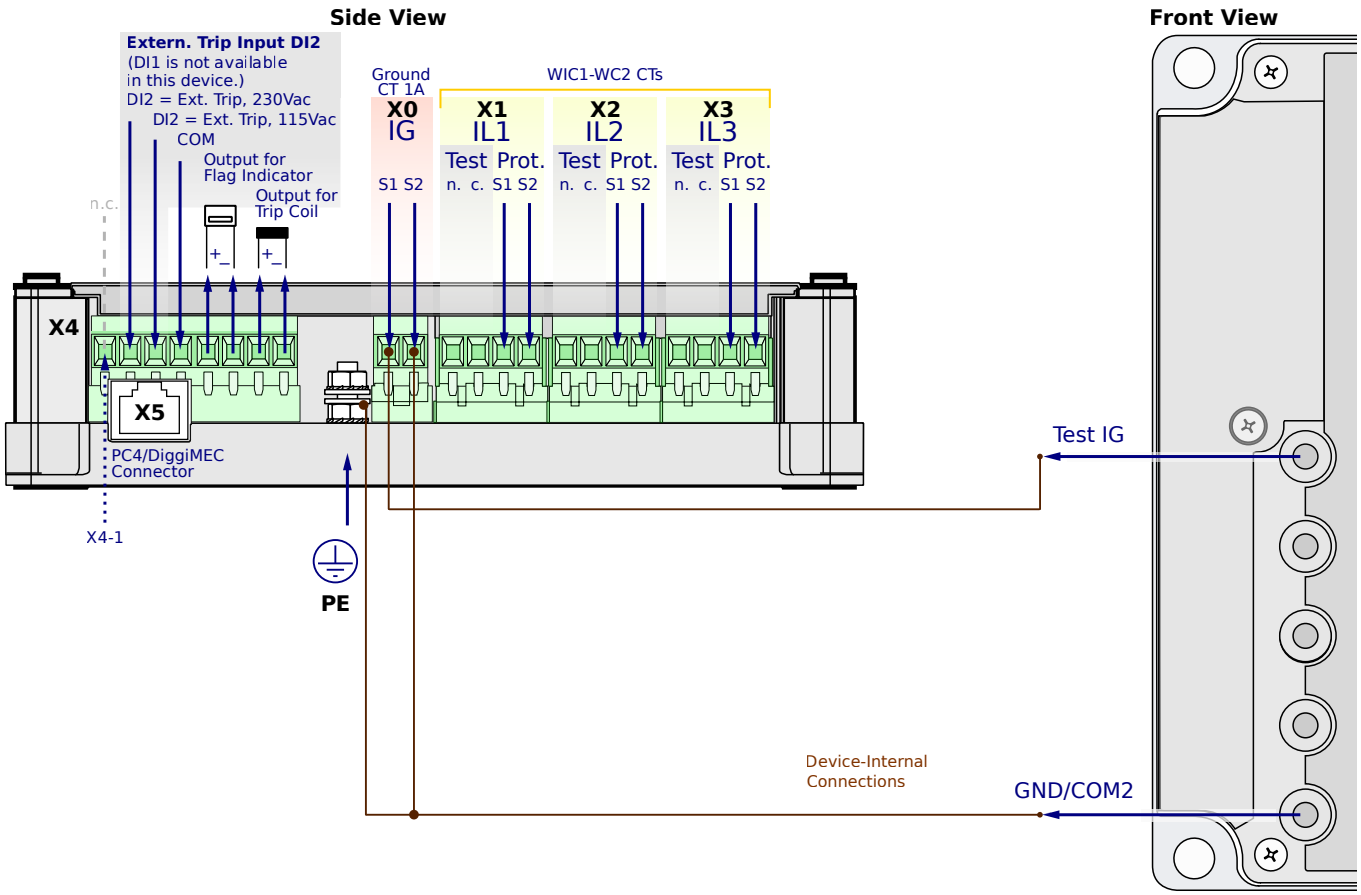


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1PA0

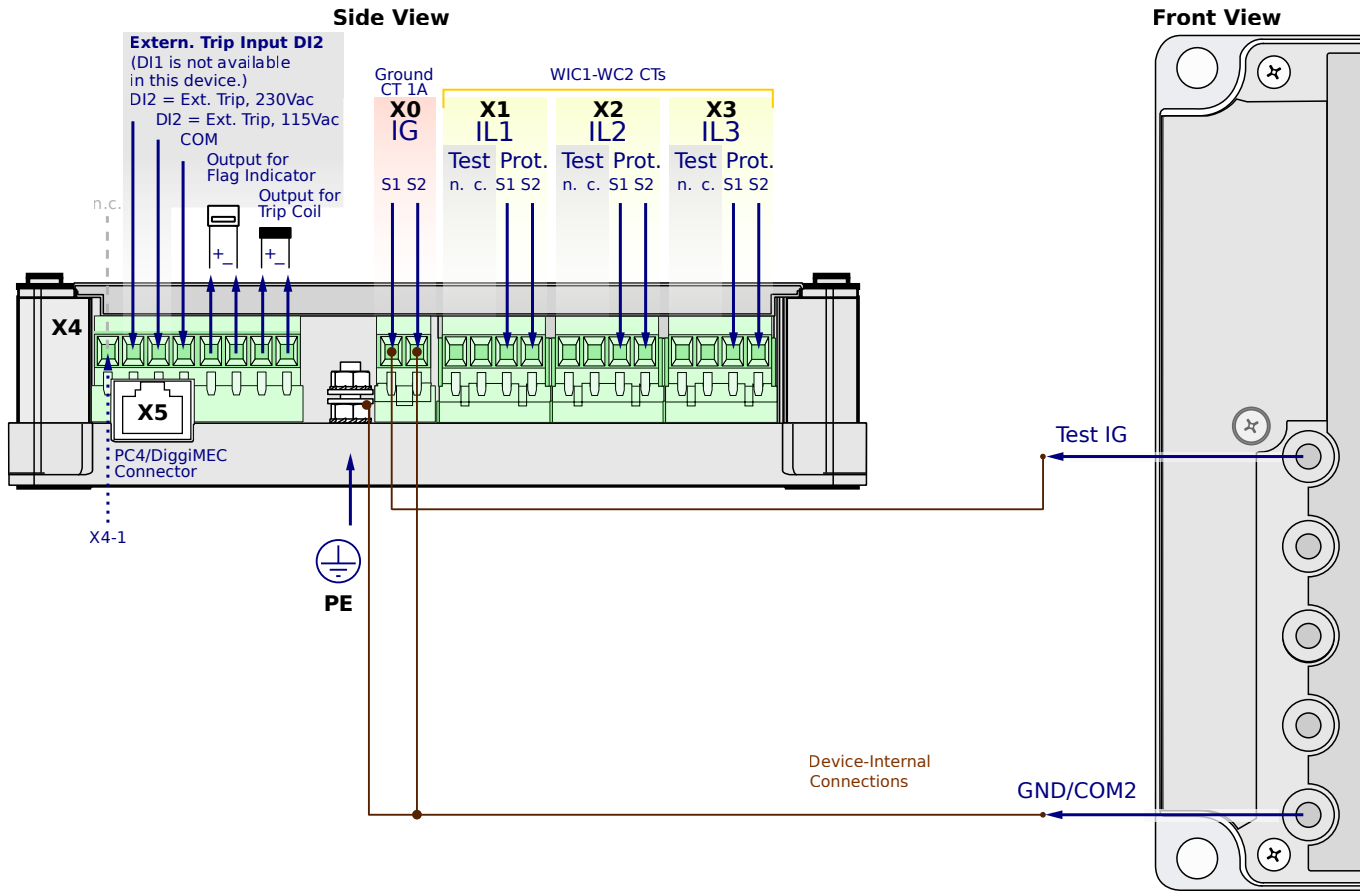


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF1PAH

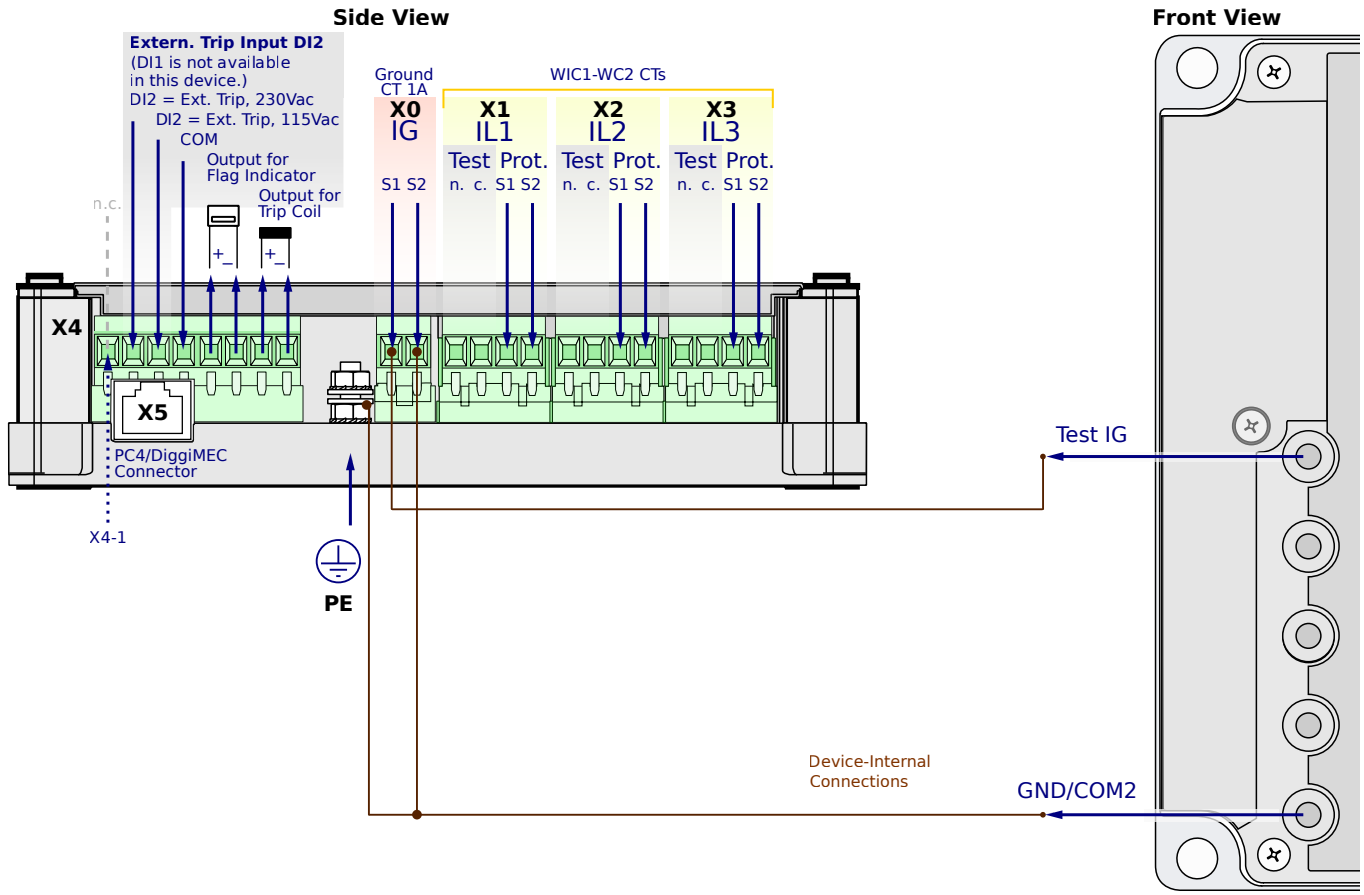


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2SA0

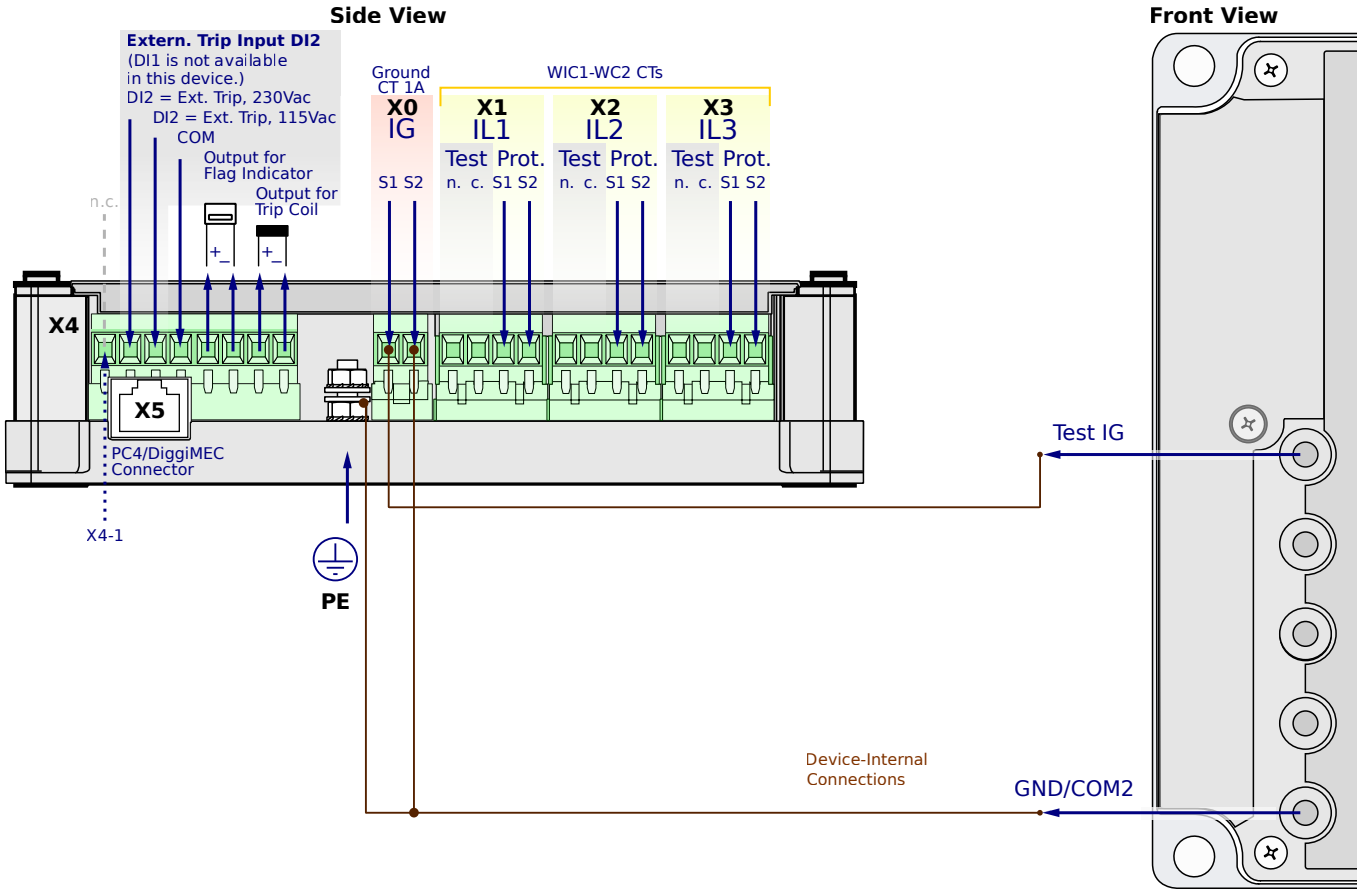


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2SAH

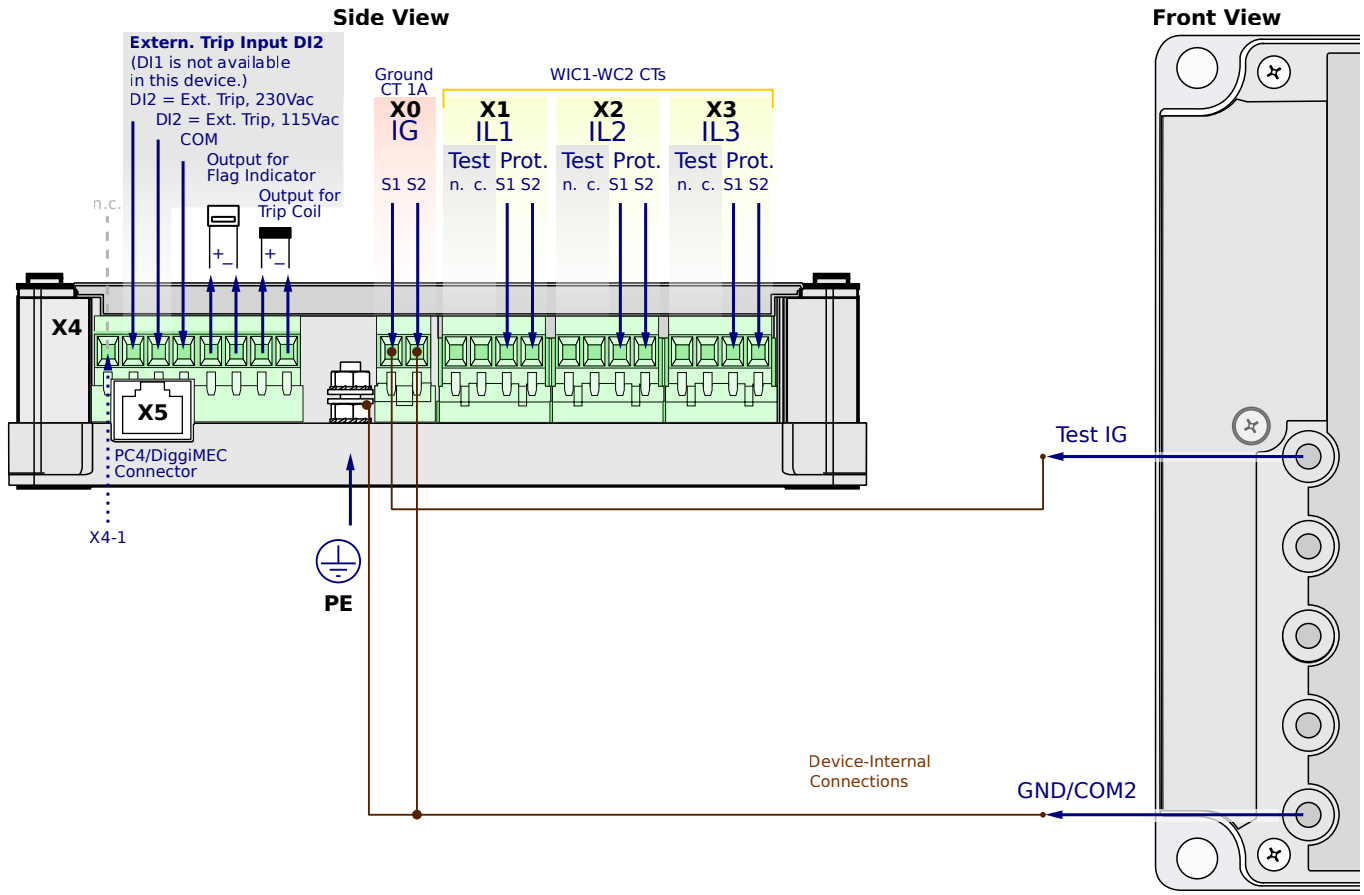


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2AA0

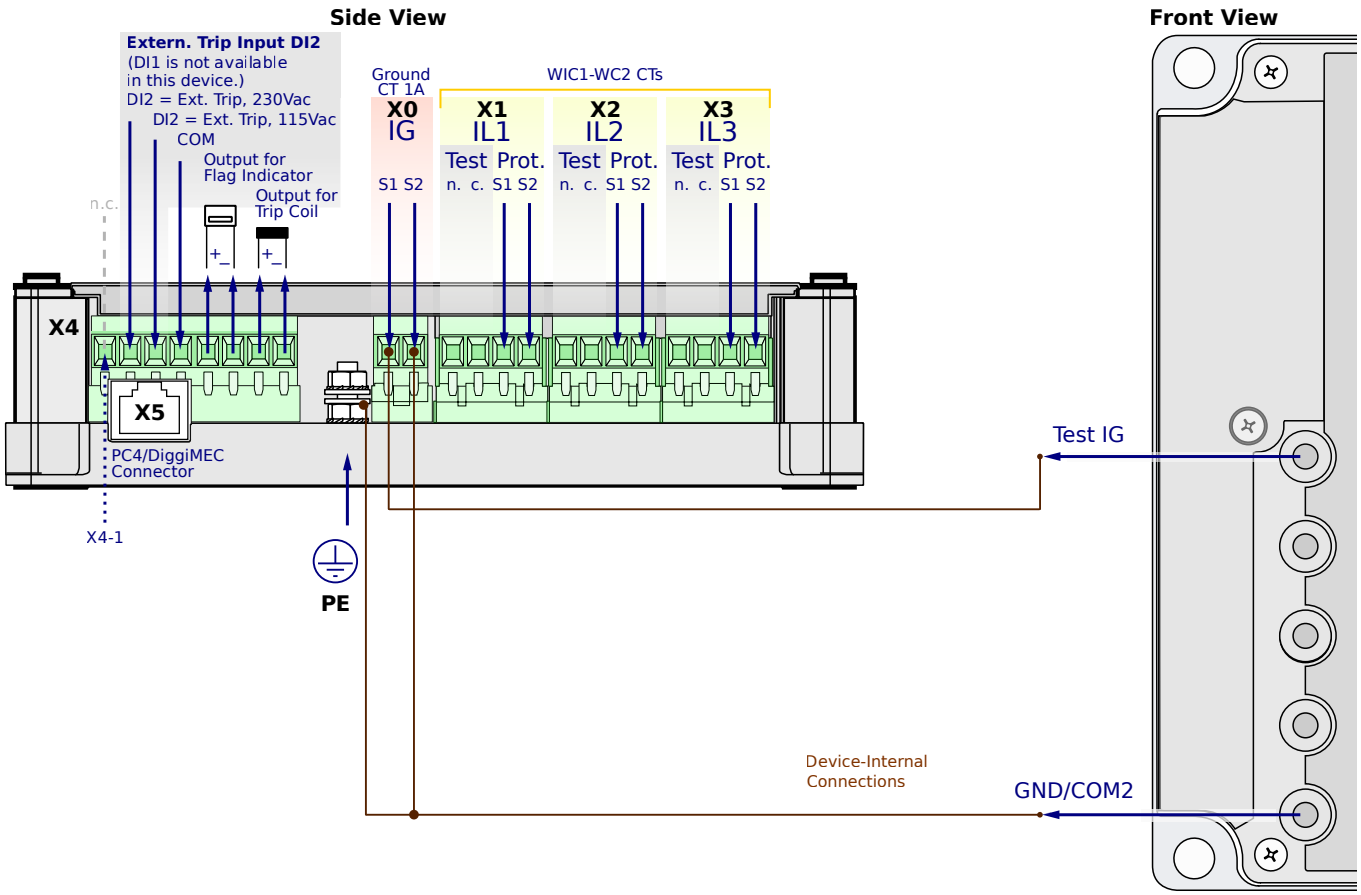


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2AAH

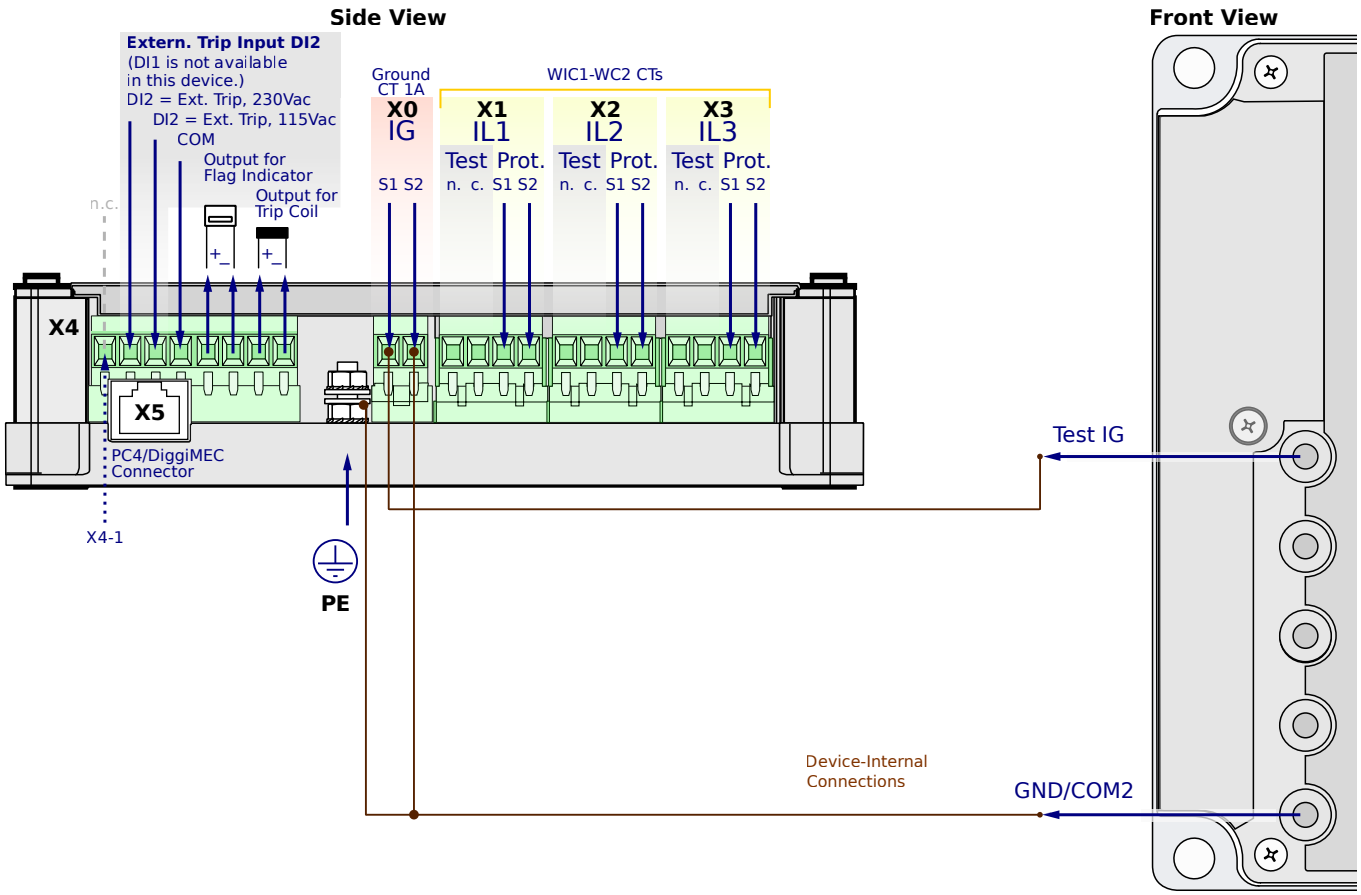


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2PA0

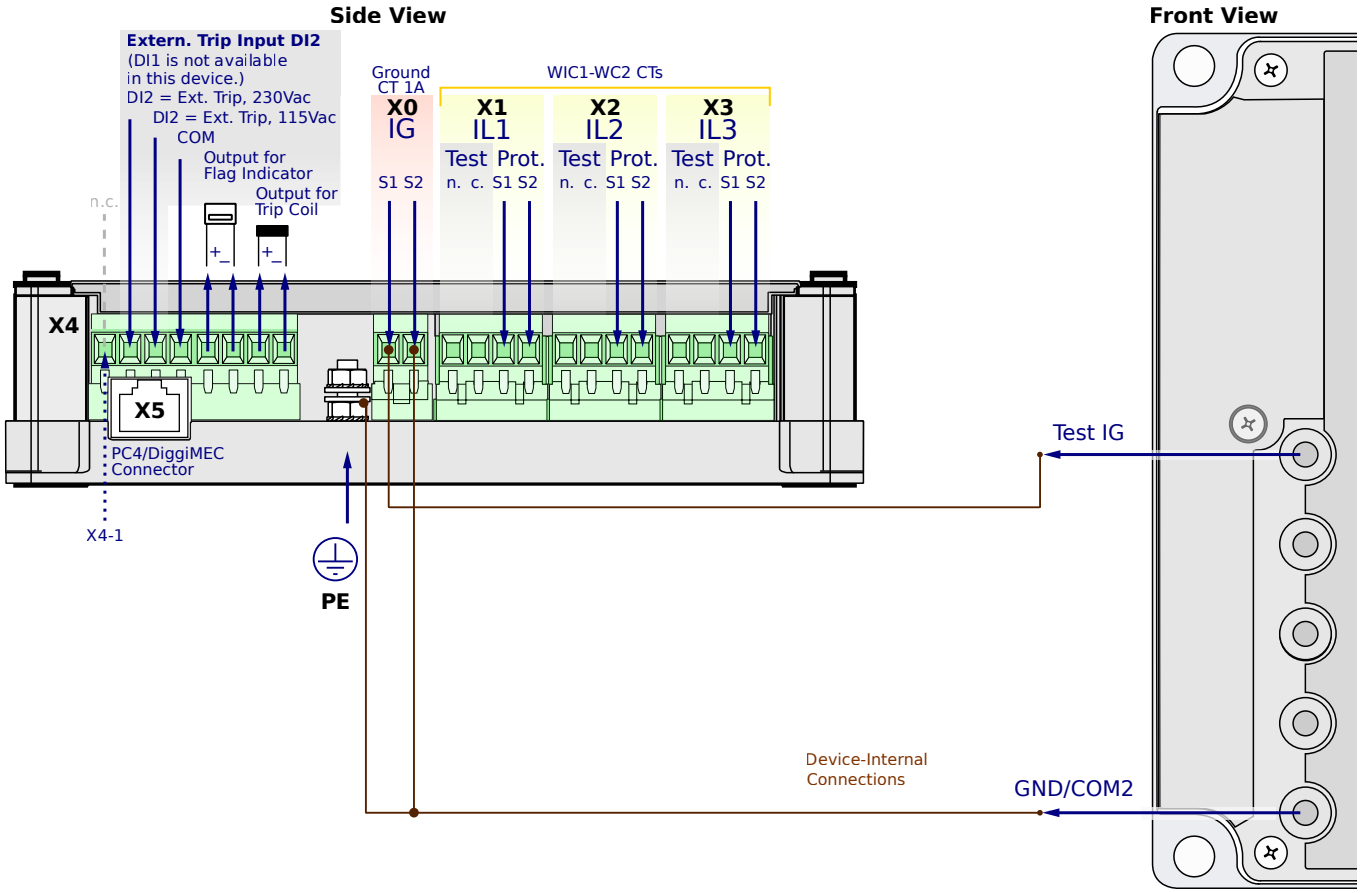


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CF2PAH

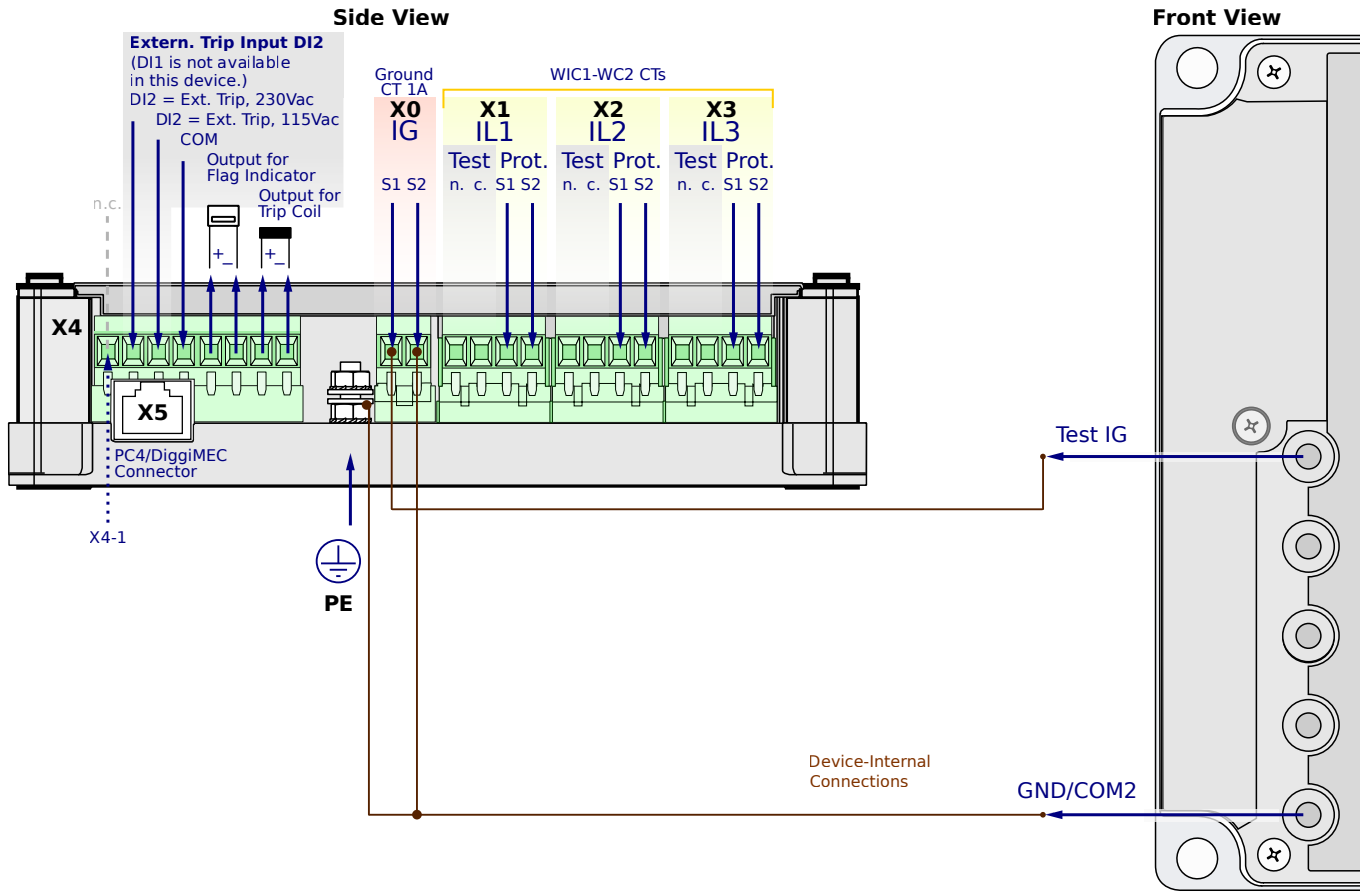


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1SA0

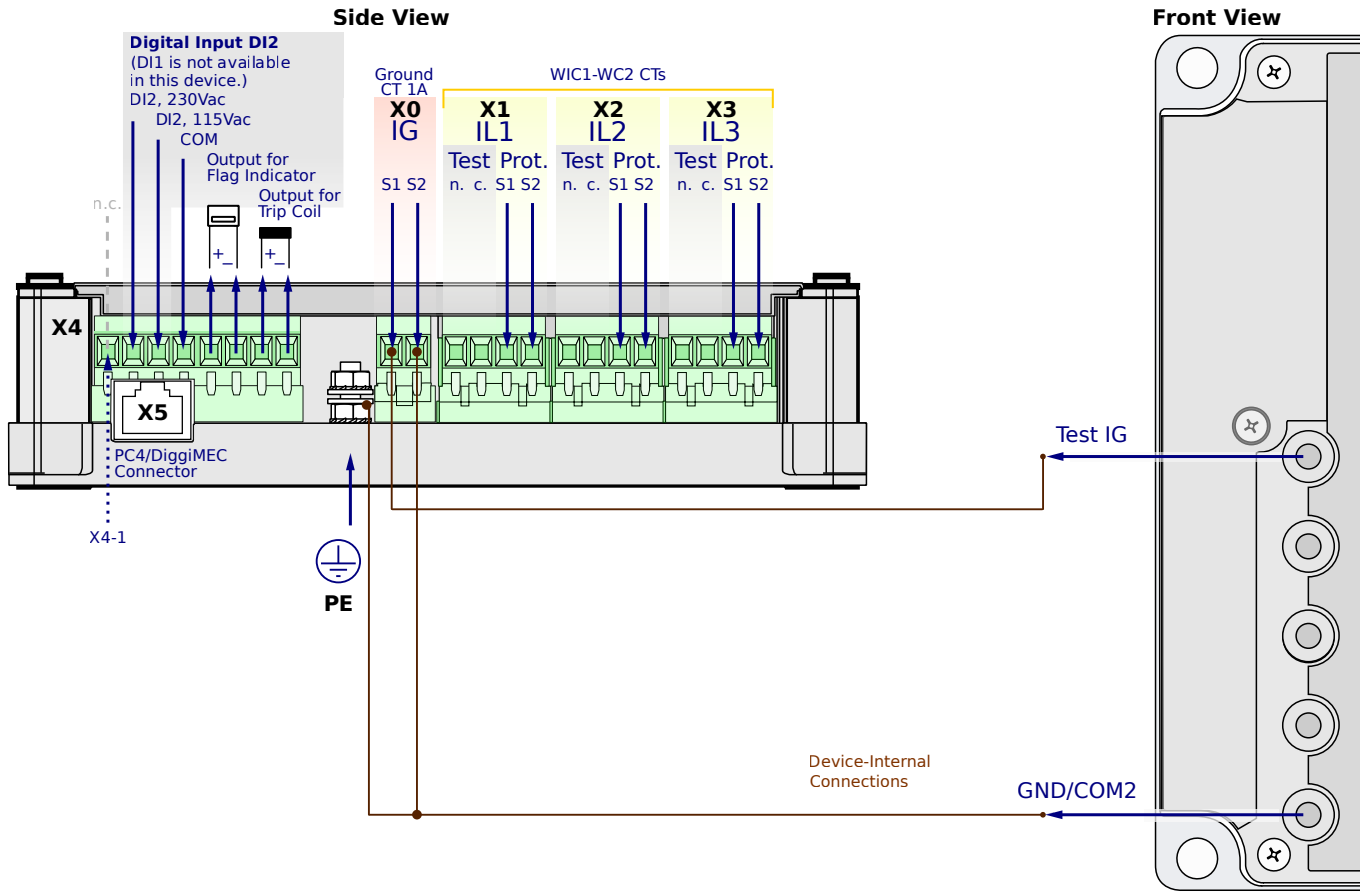


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1SAH

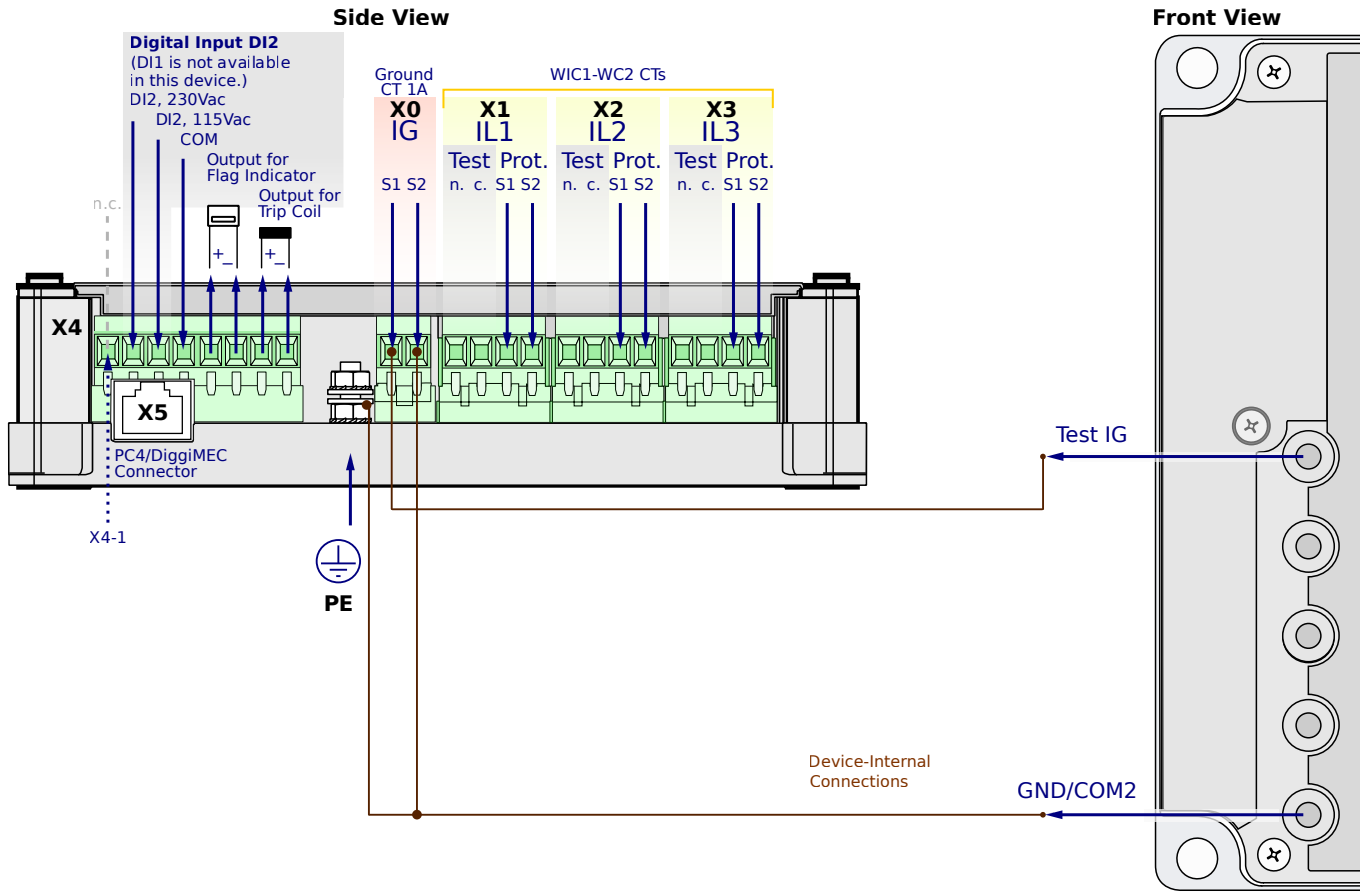


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1AA0

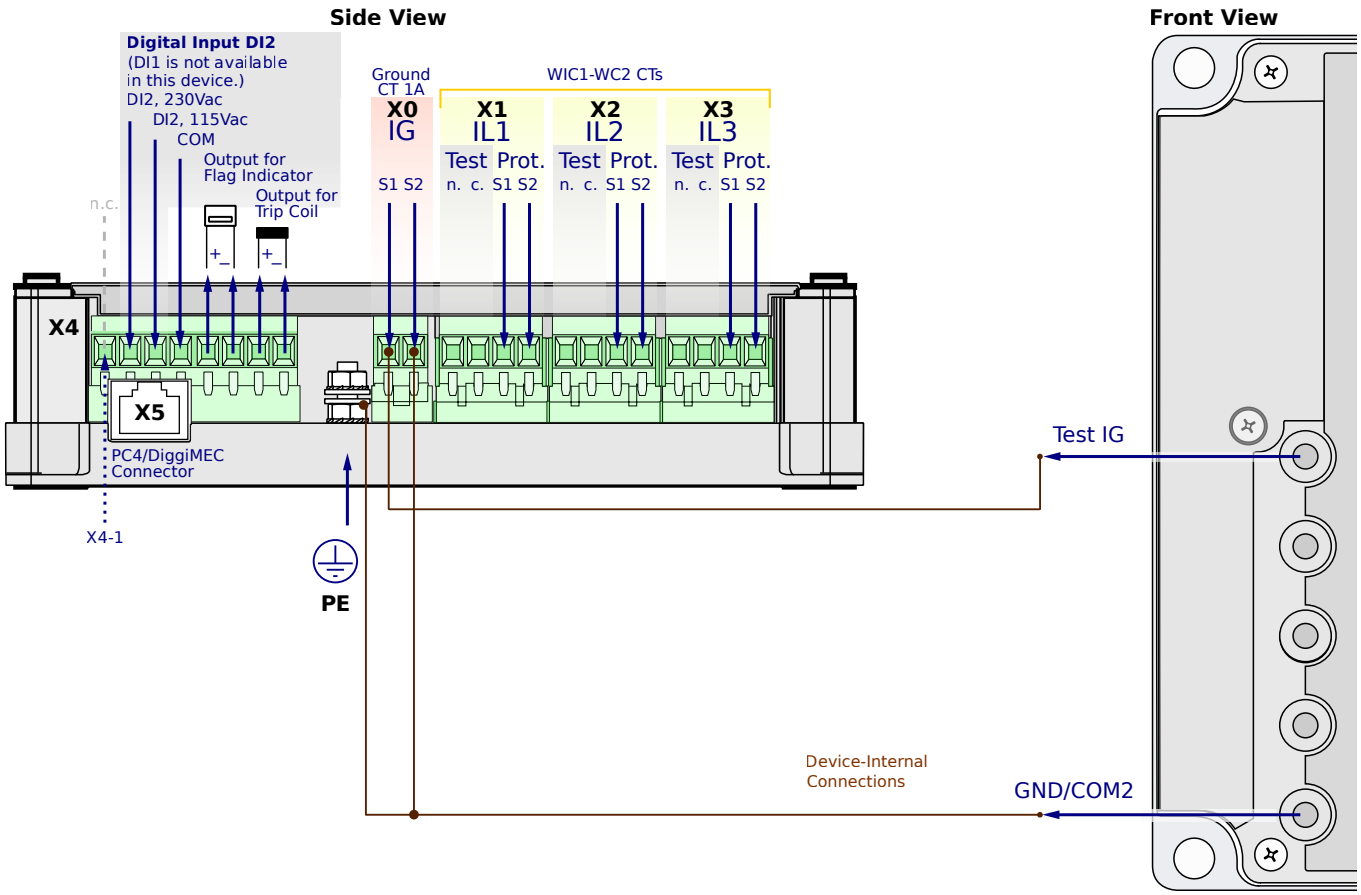


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1AAH

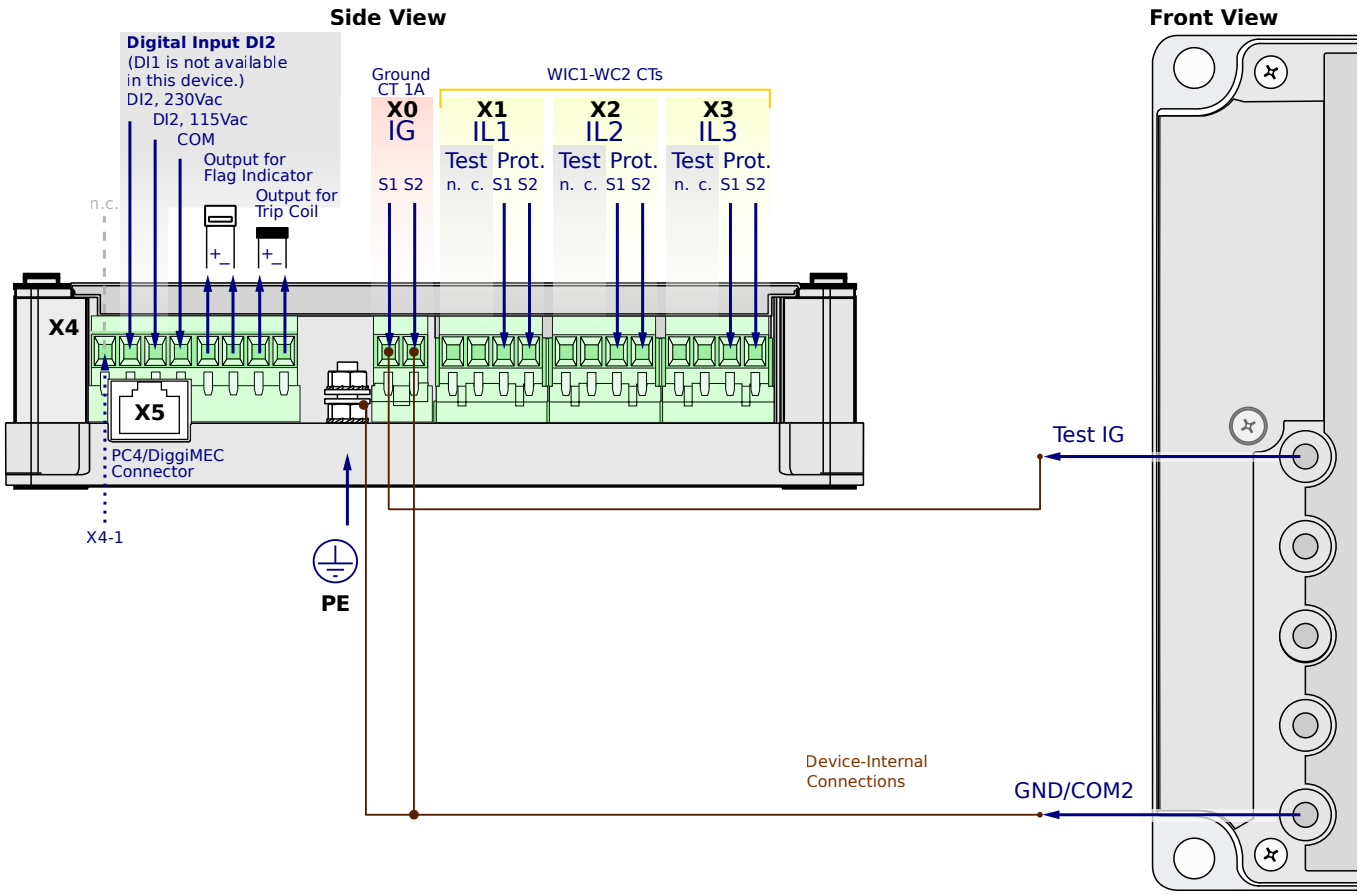


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1PA0

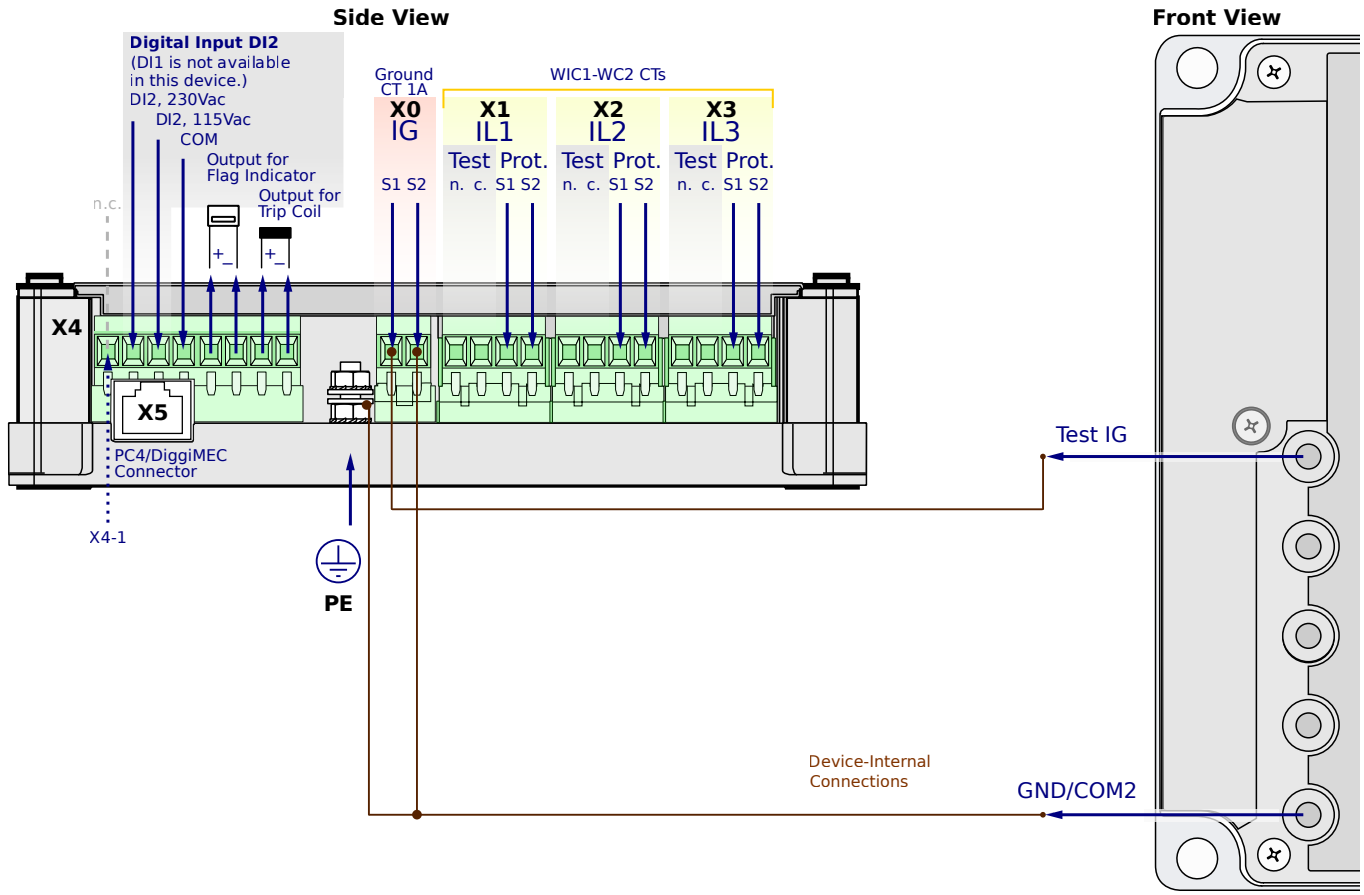


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC1PAH

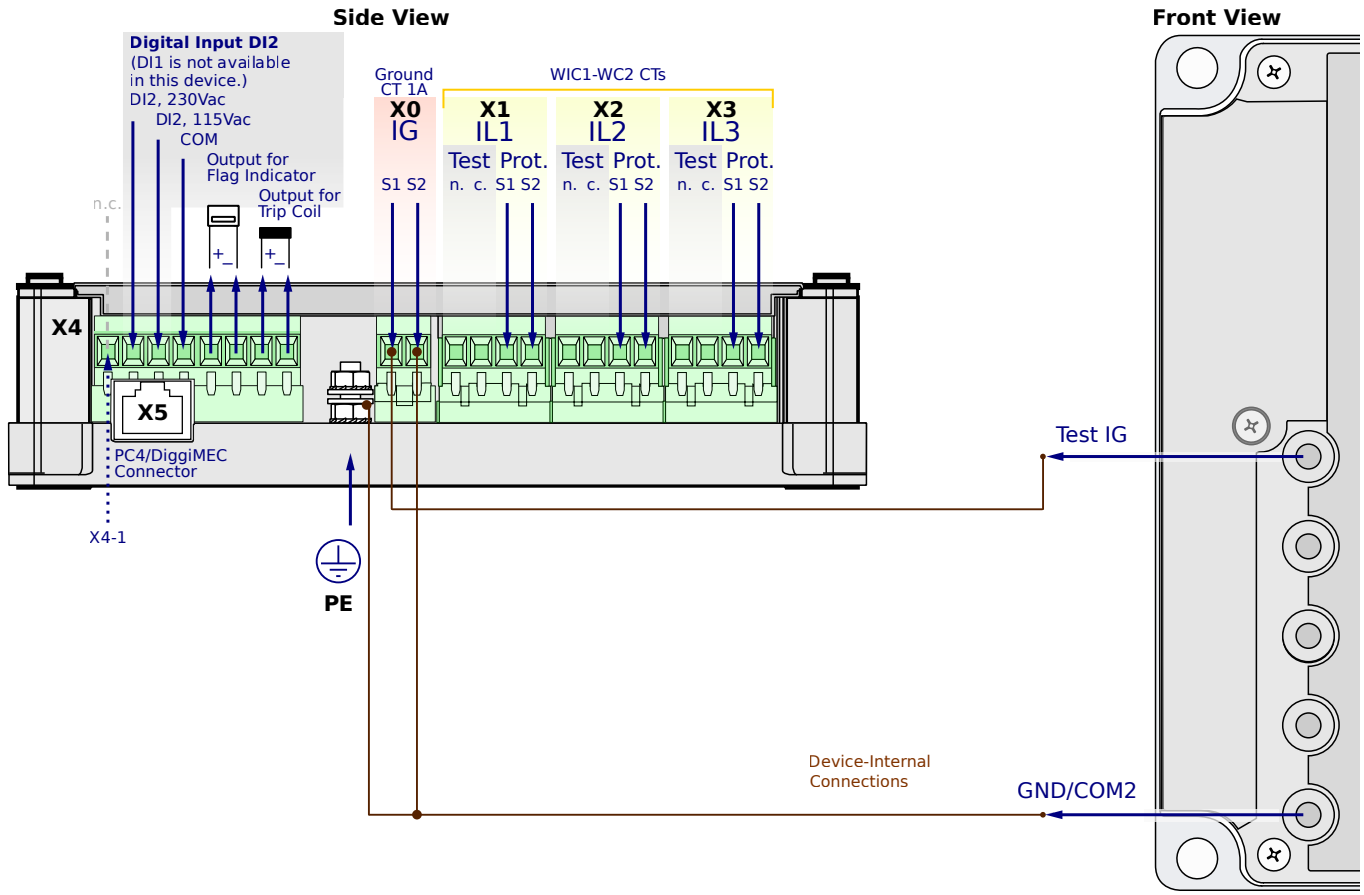


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2SA0

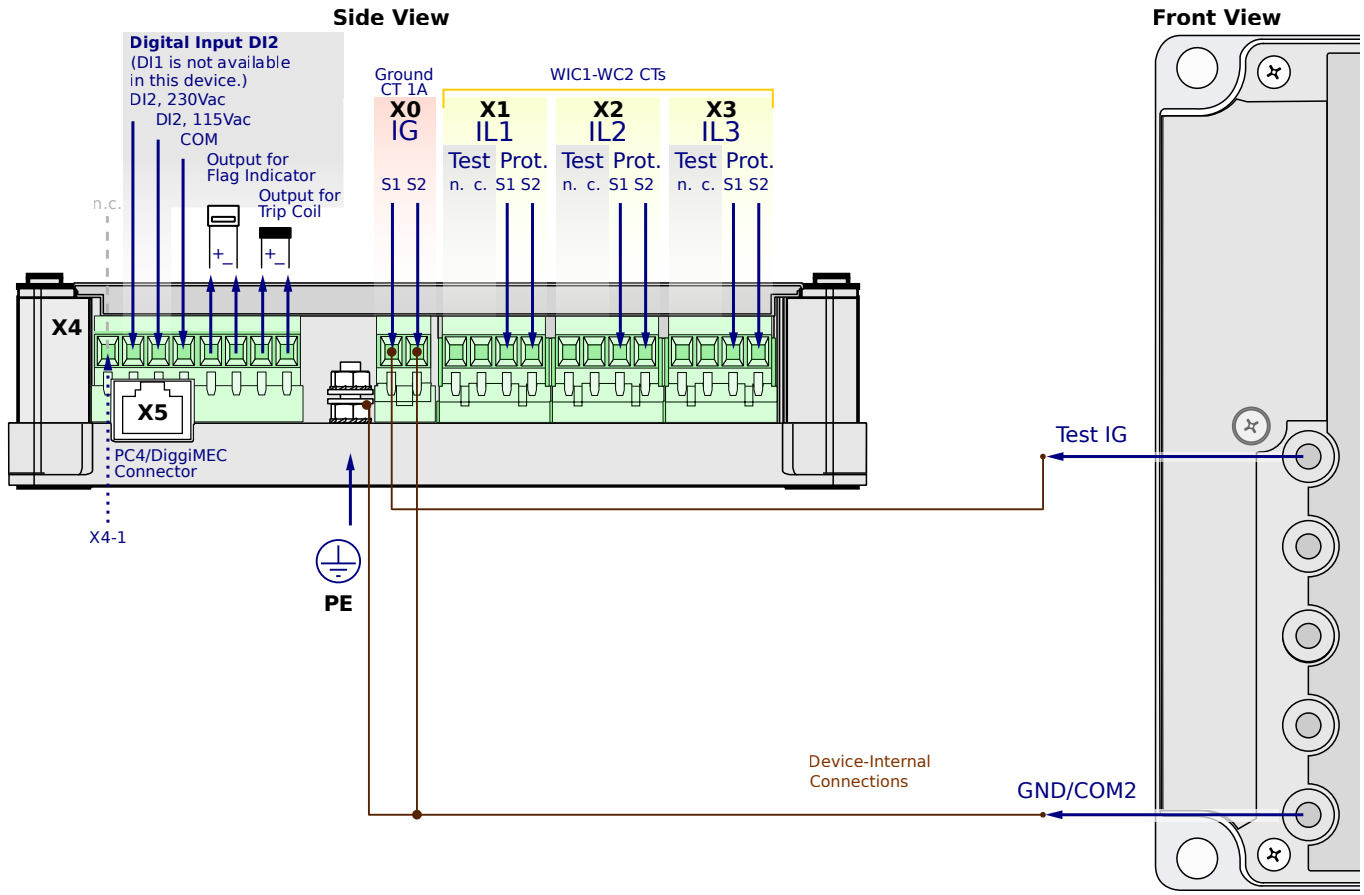


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2SAH

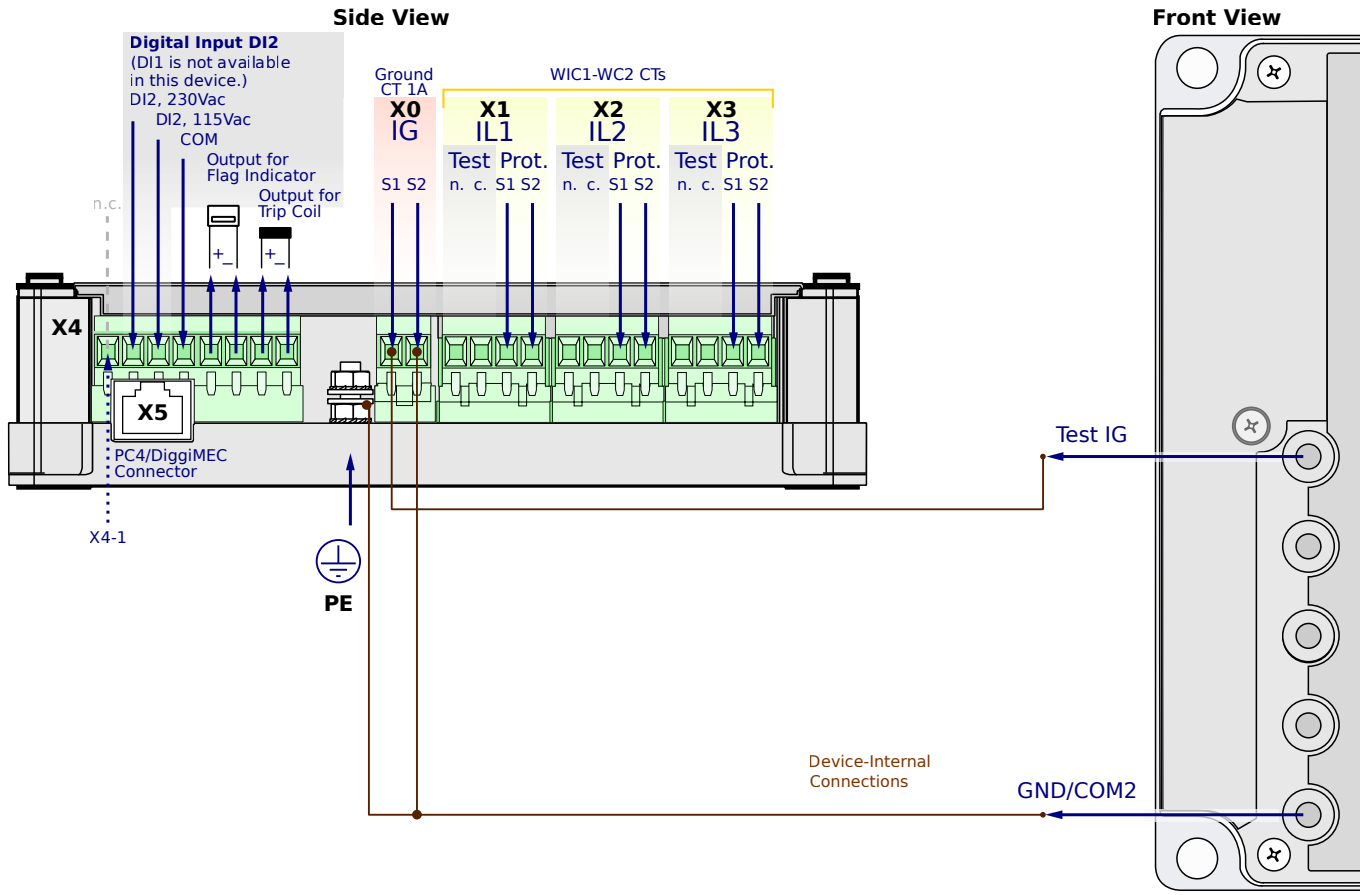


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2AA0

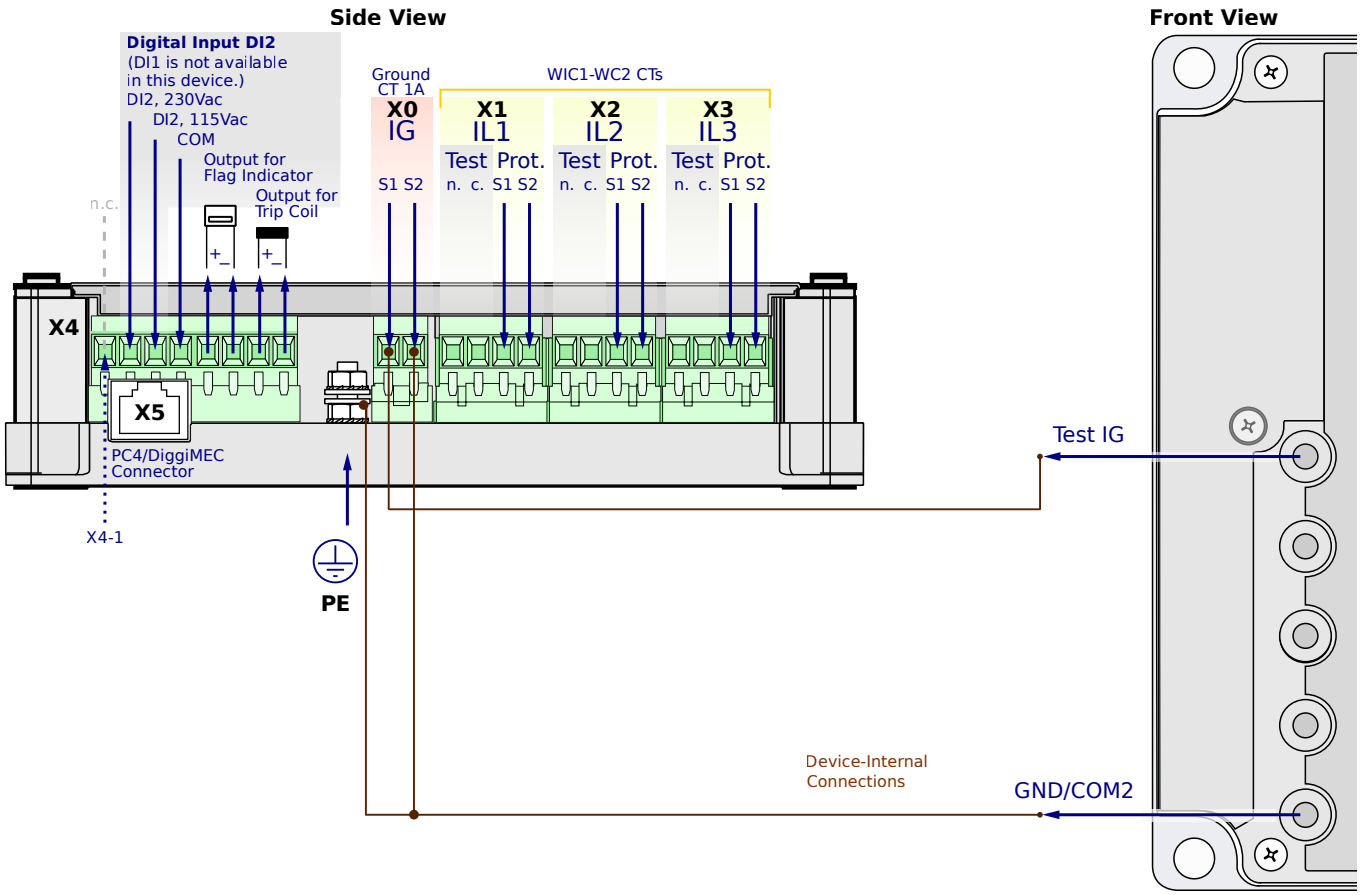


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2AAH

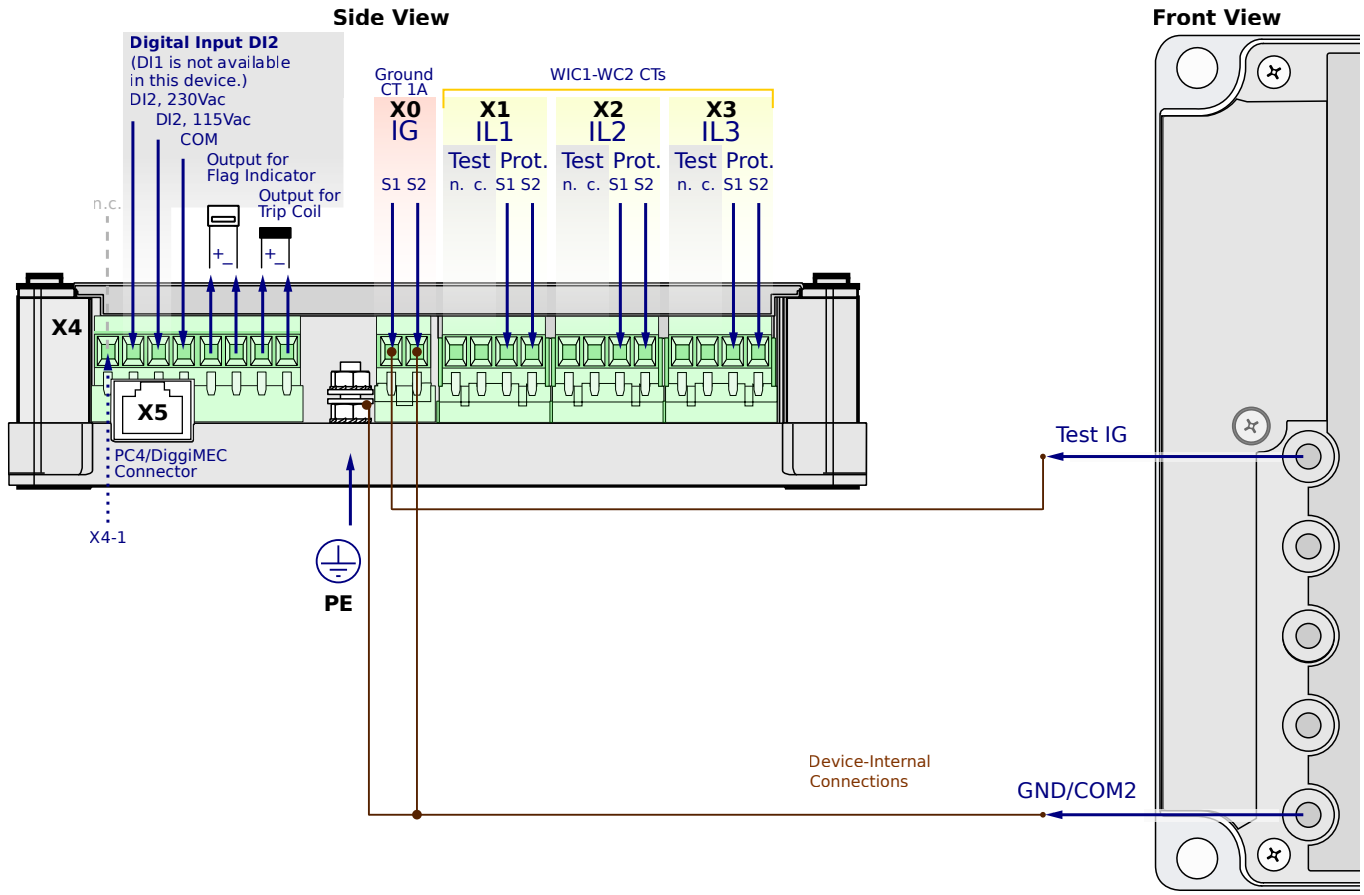


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2PA0

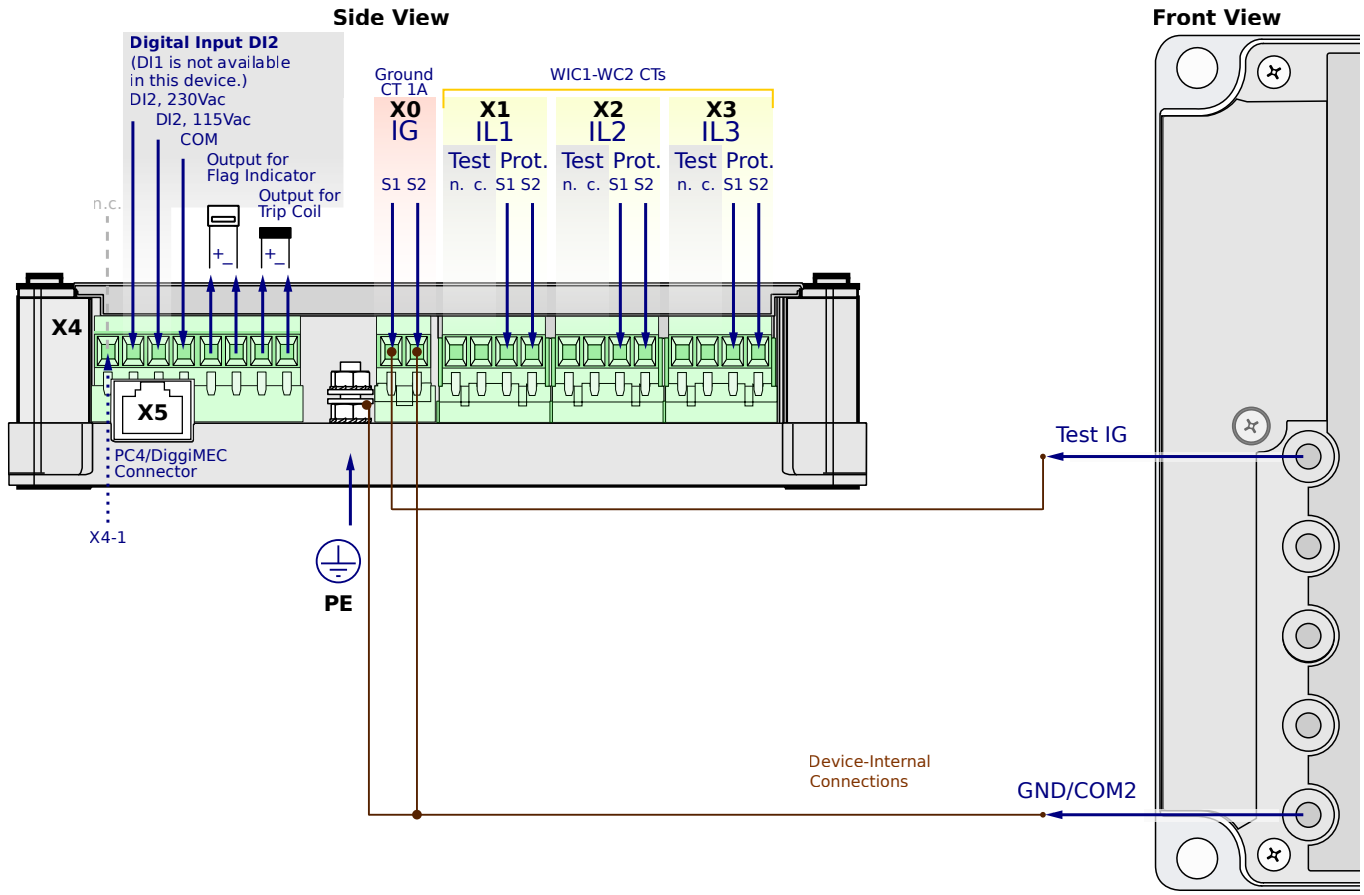


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG5CC2PAH

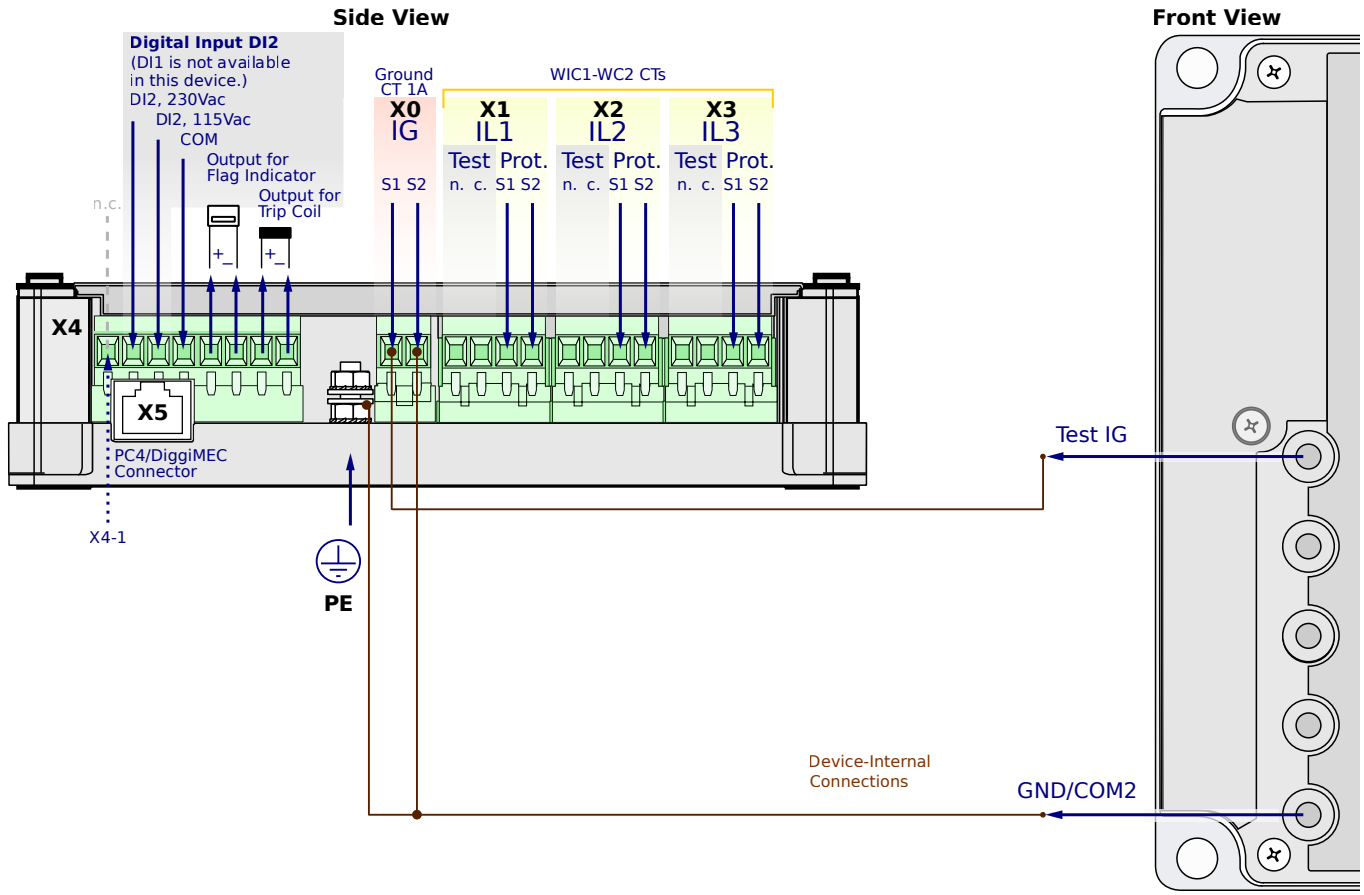


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0SA0

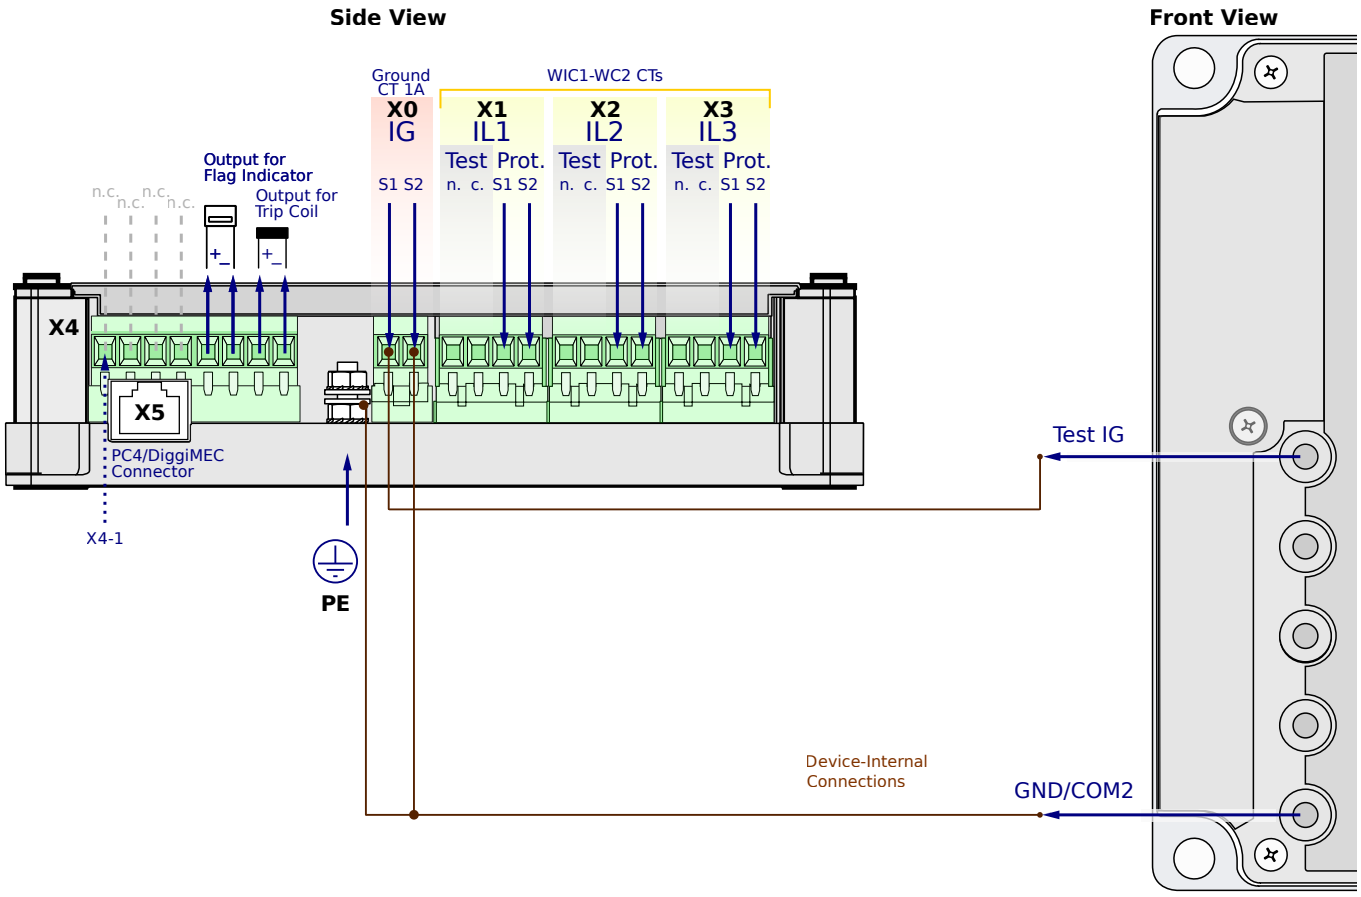


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0SAH

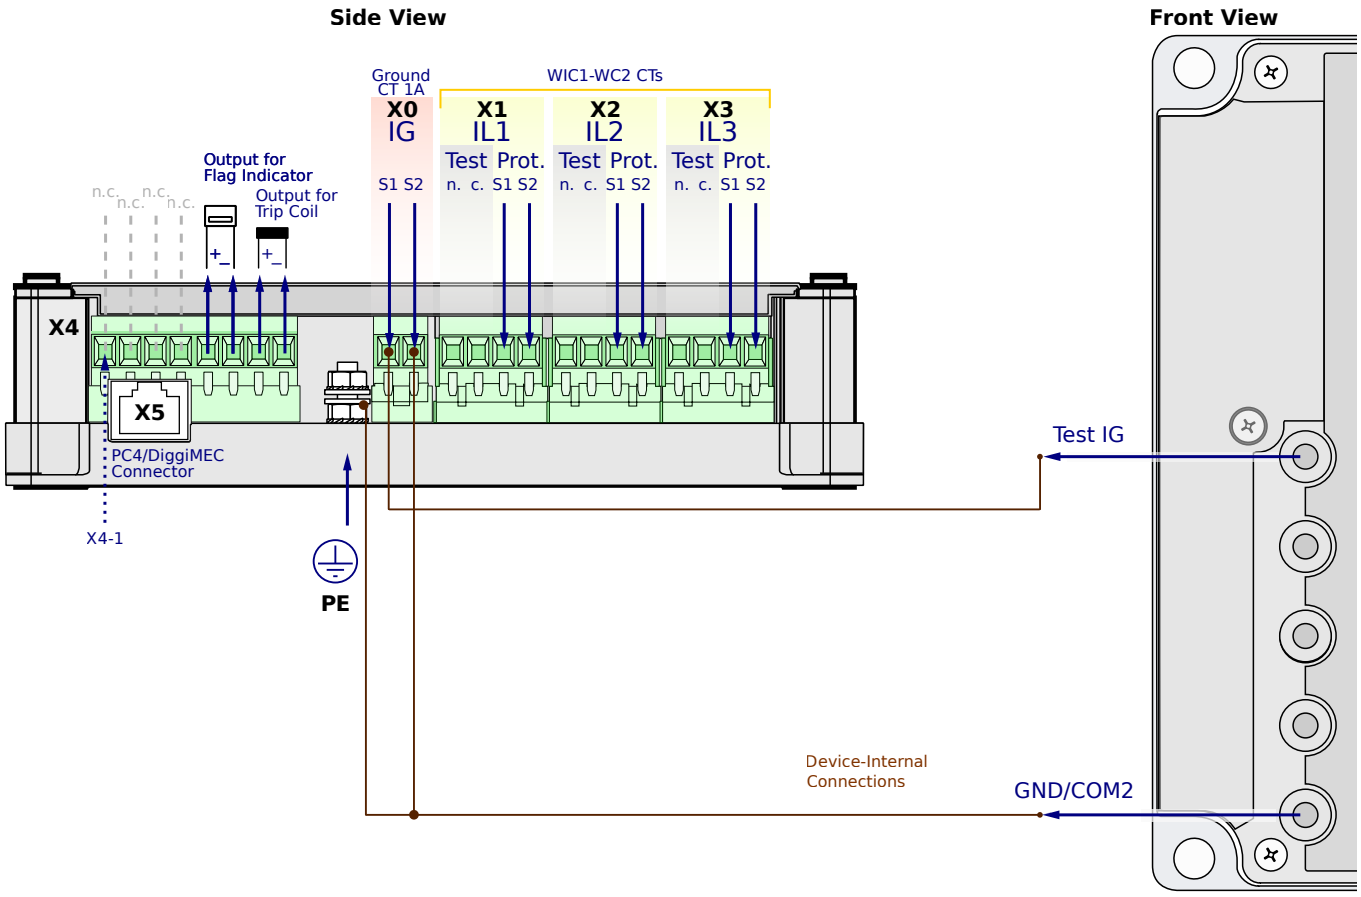


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0AA0

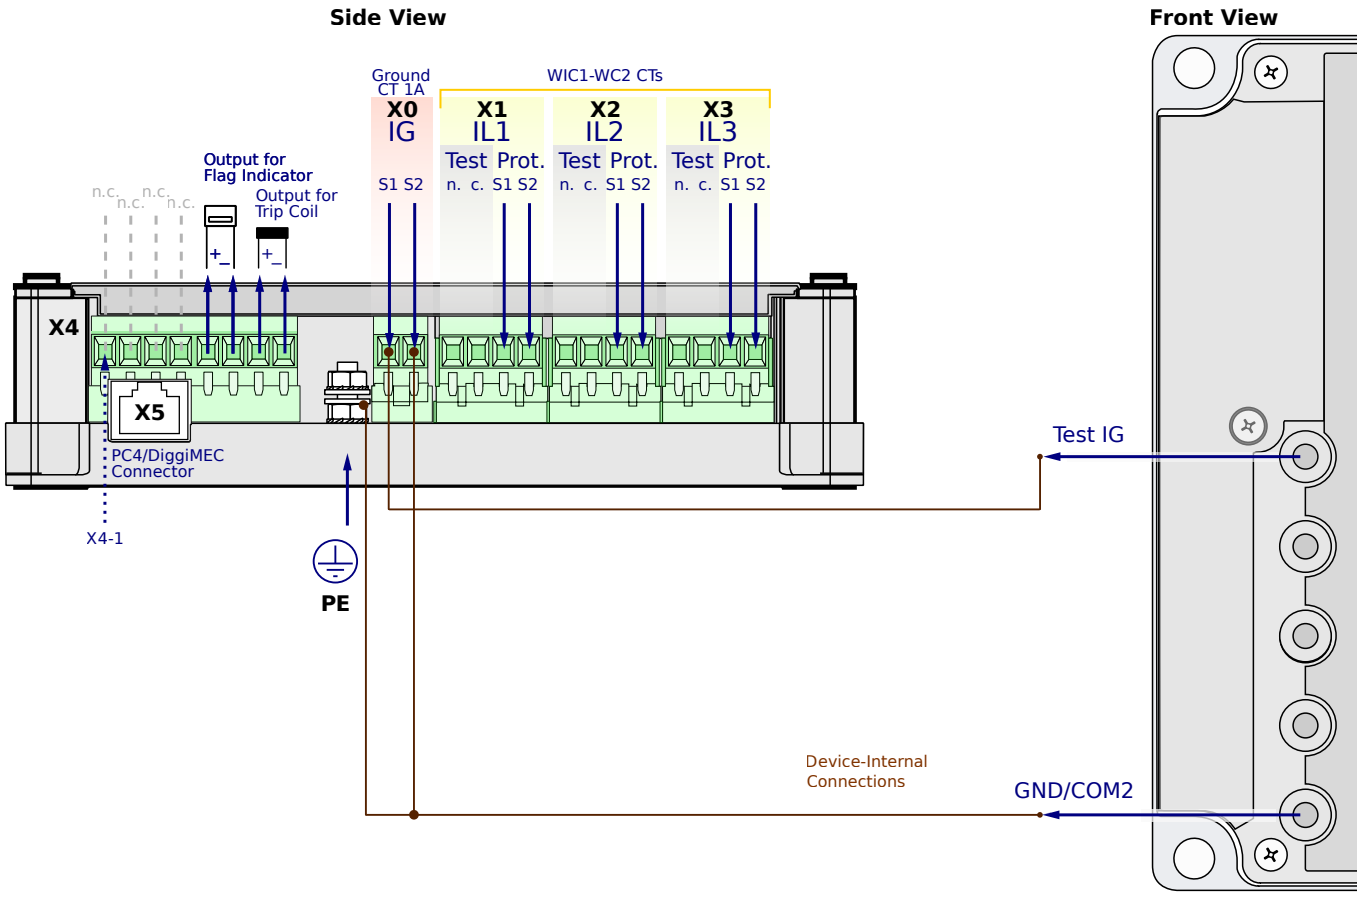


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0AAH

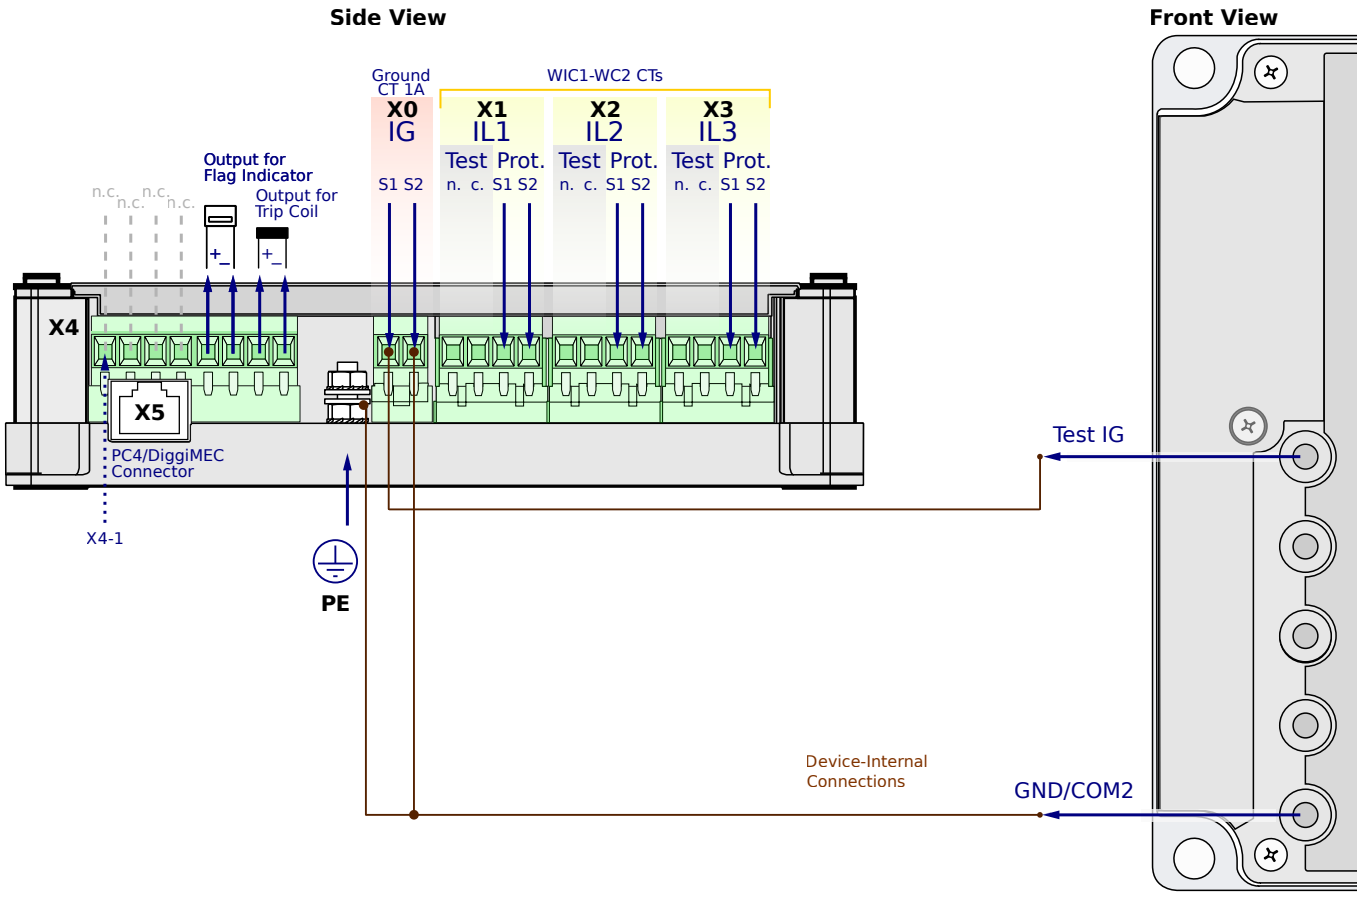


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0PA0

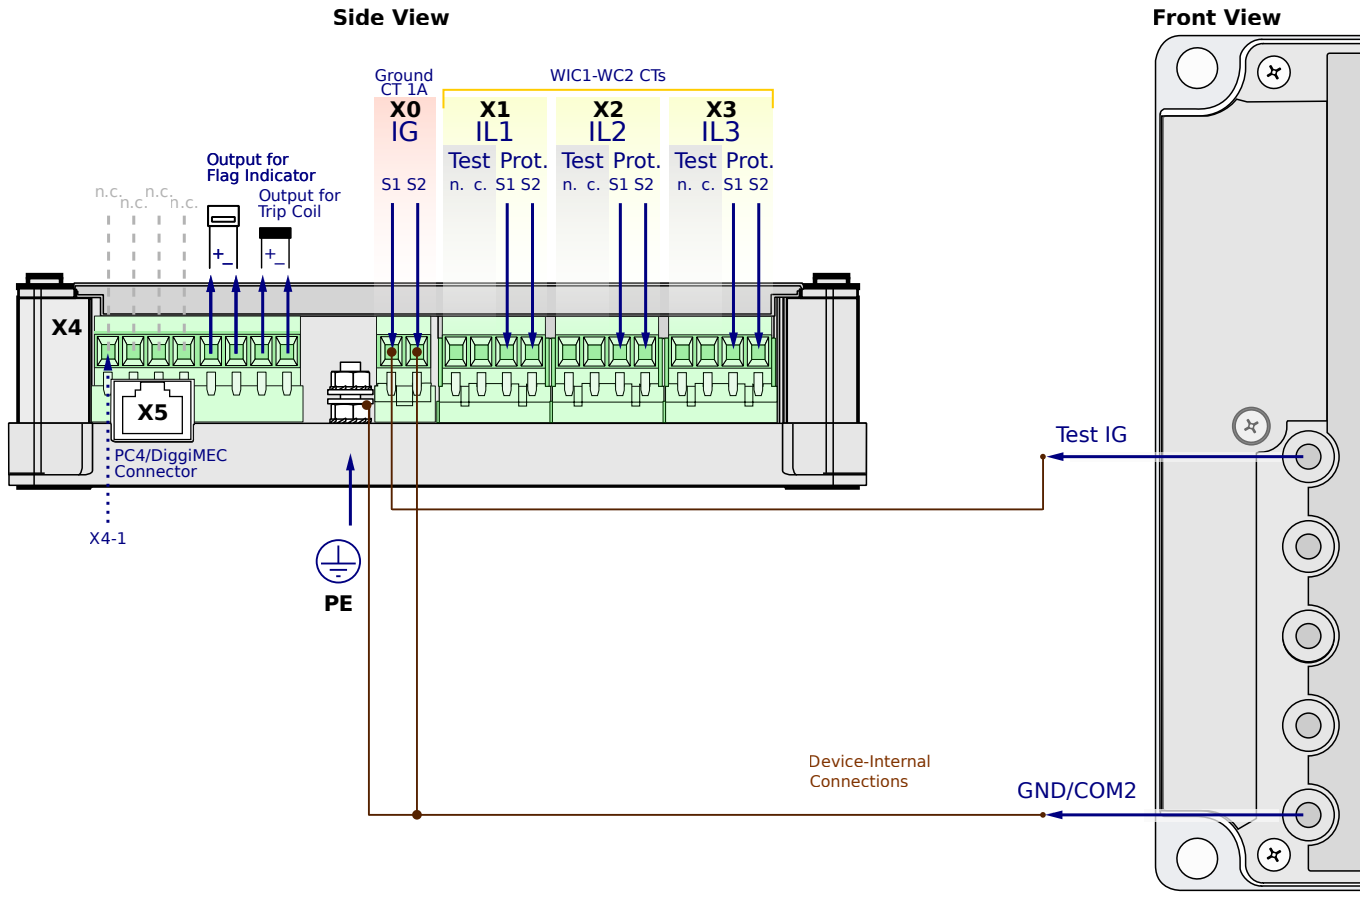


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN0PAH

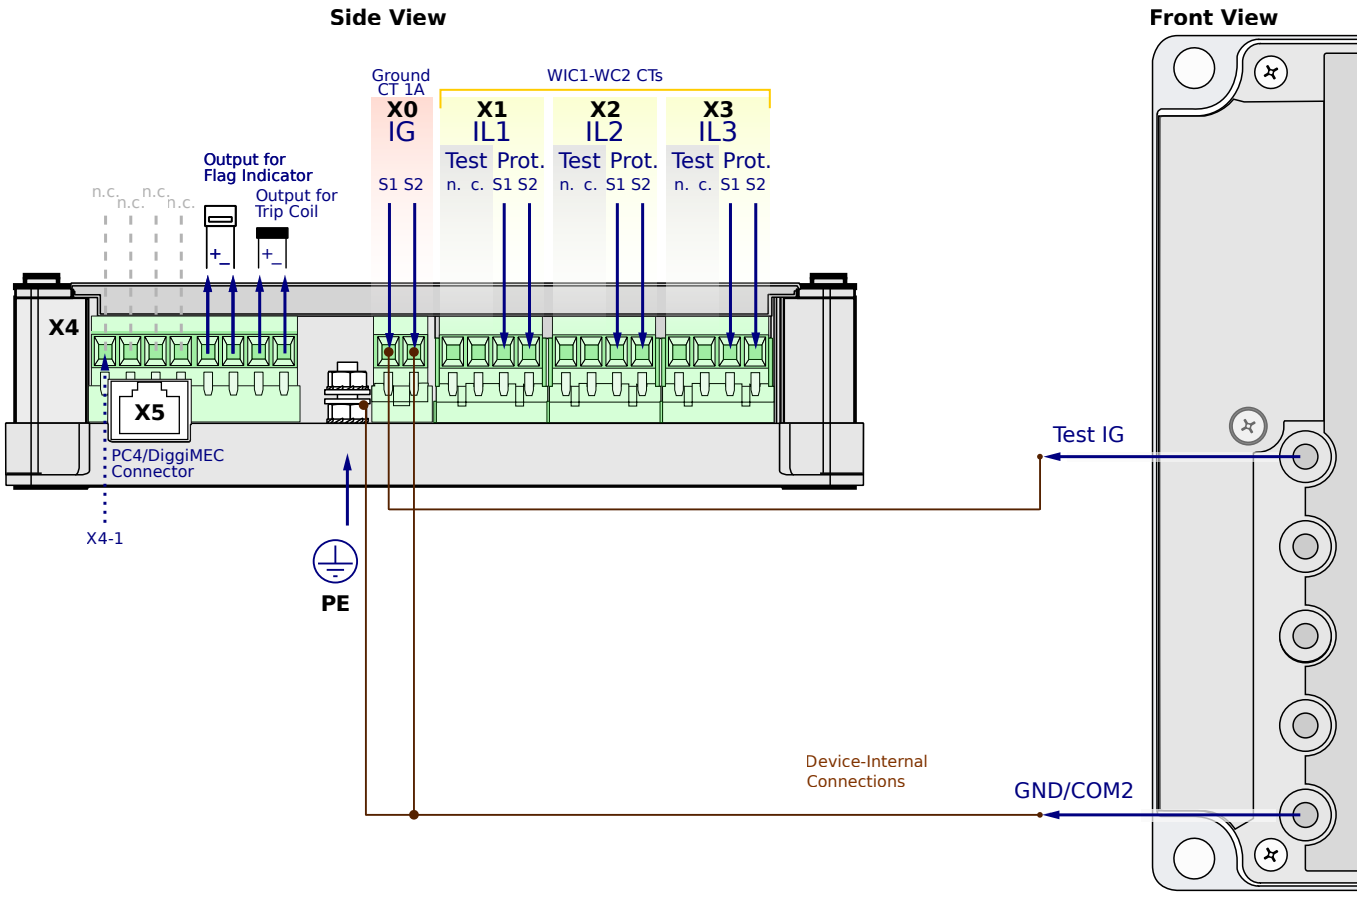


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1SA0

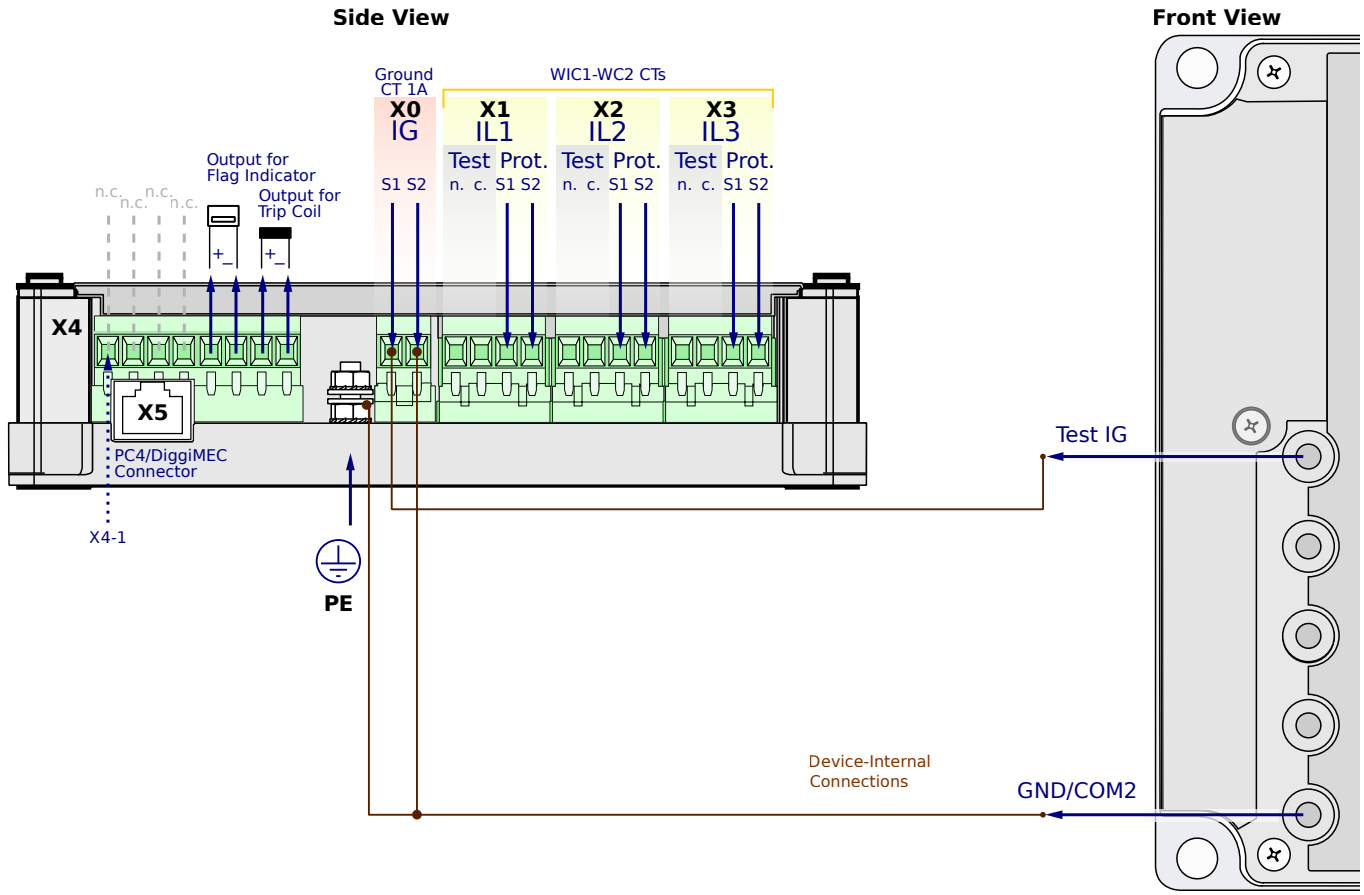


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1SAH

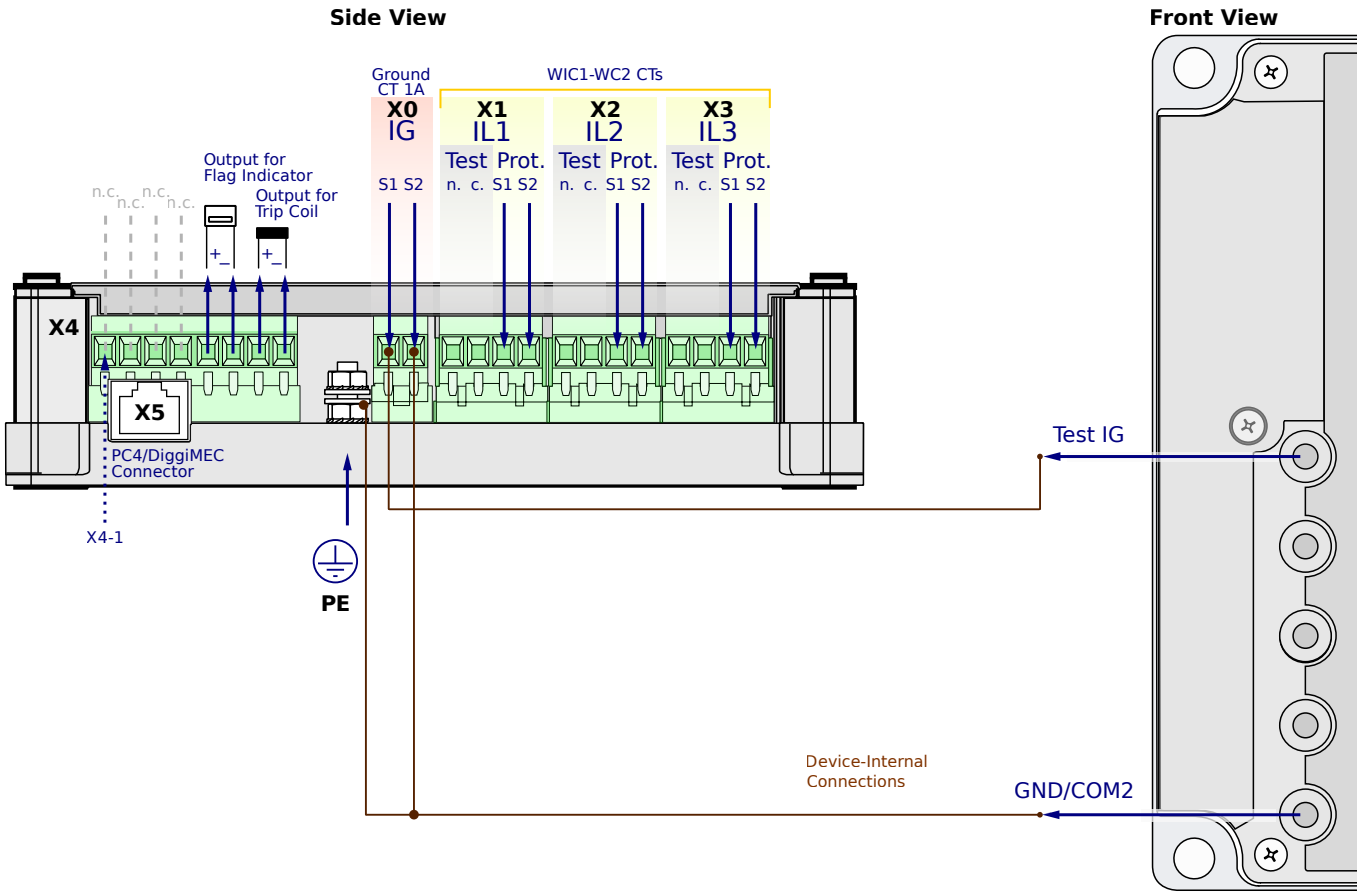


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1AA0

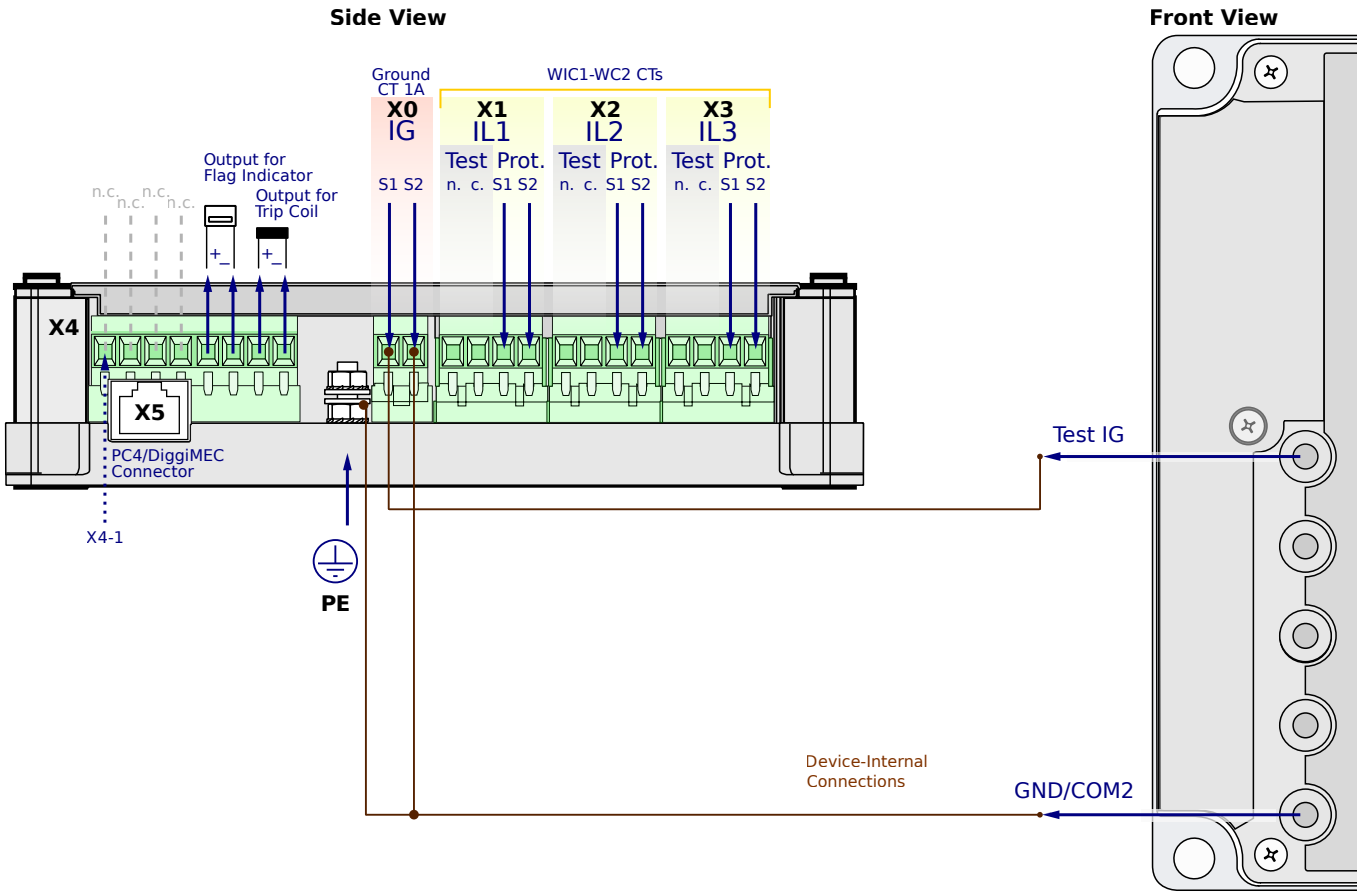


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1AAH

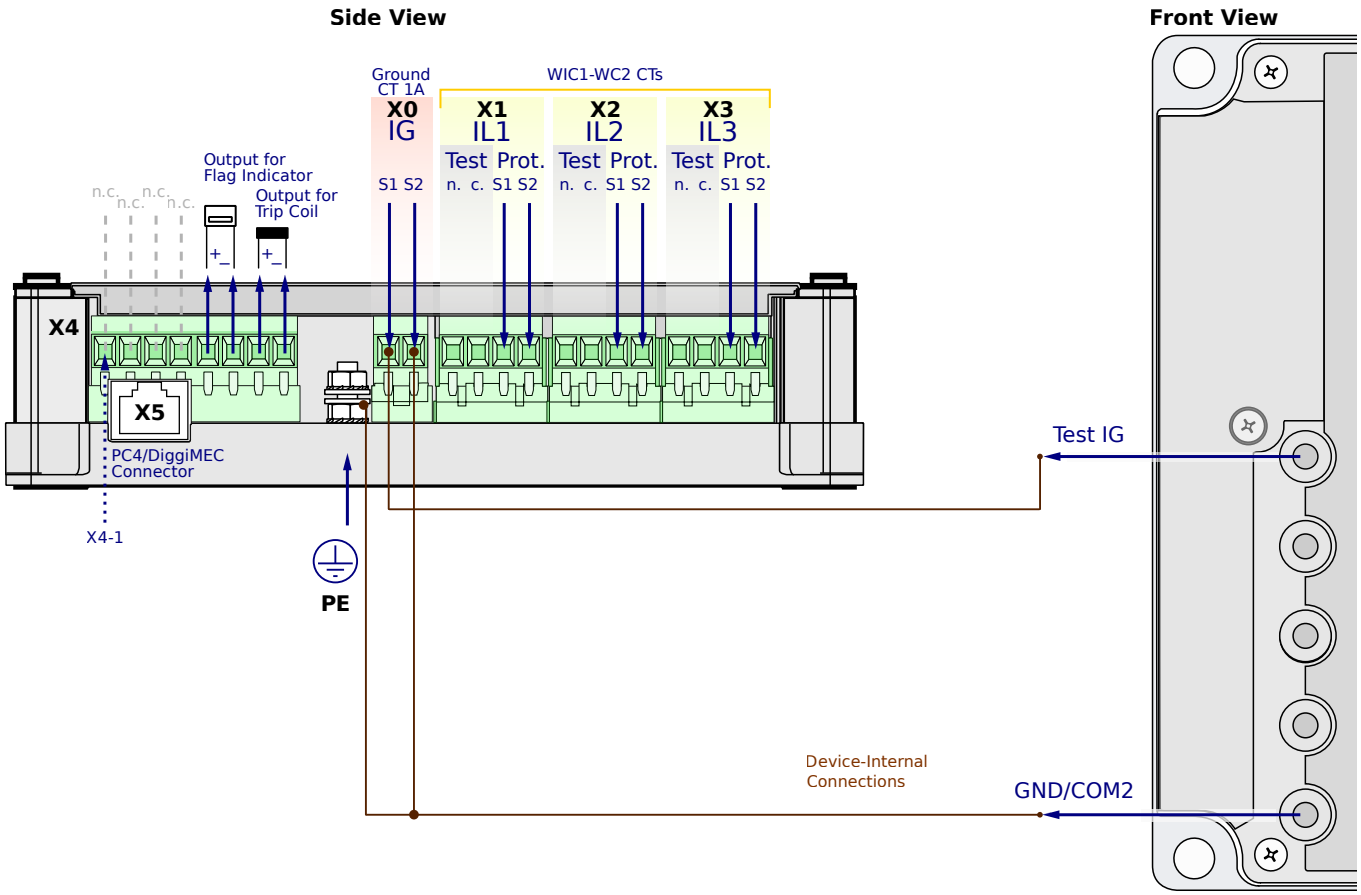


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1PA0

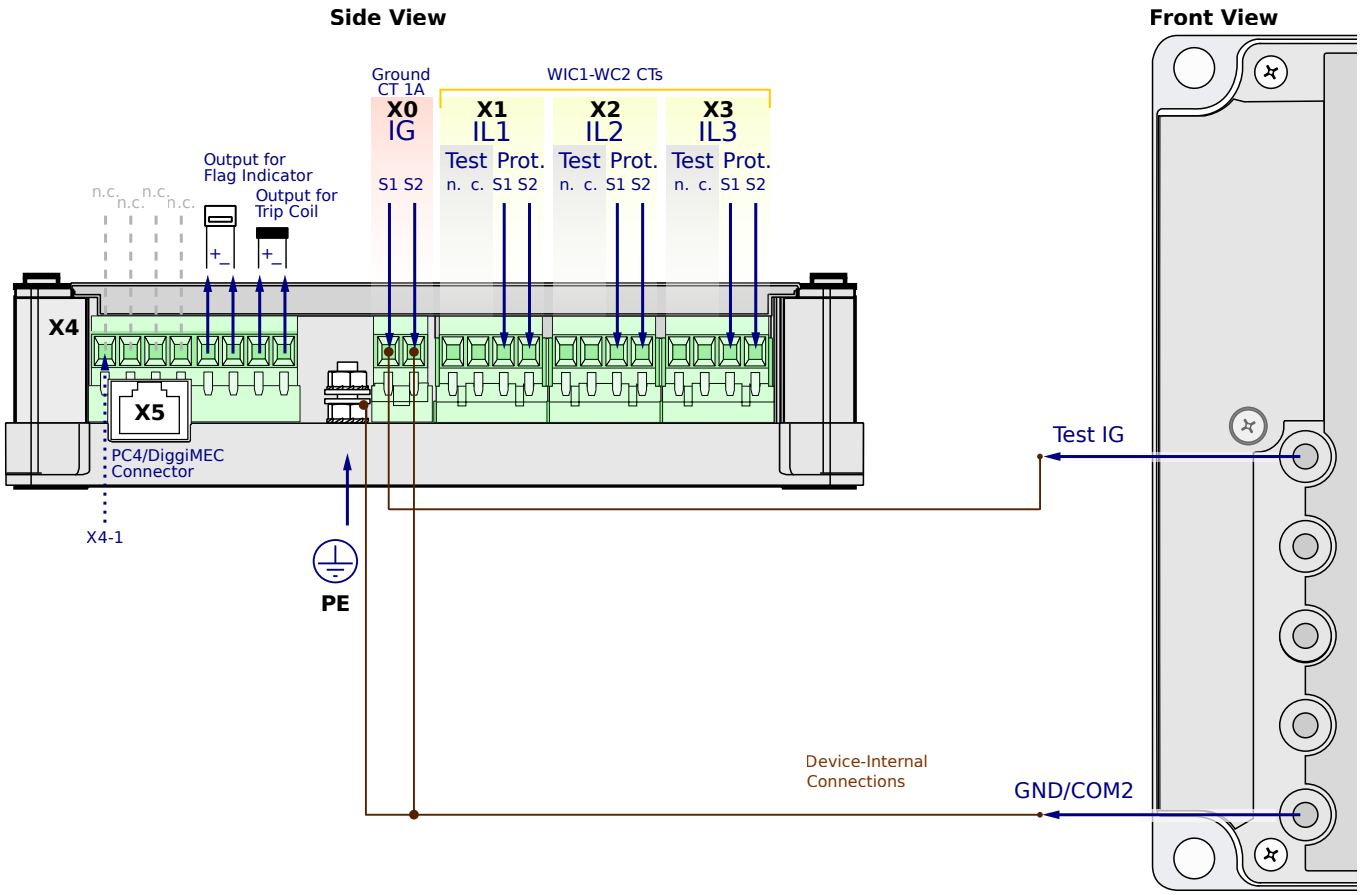


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN1PAH

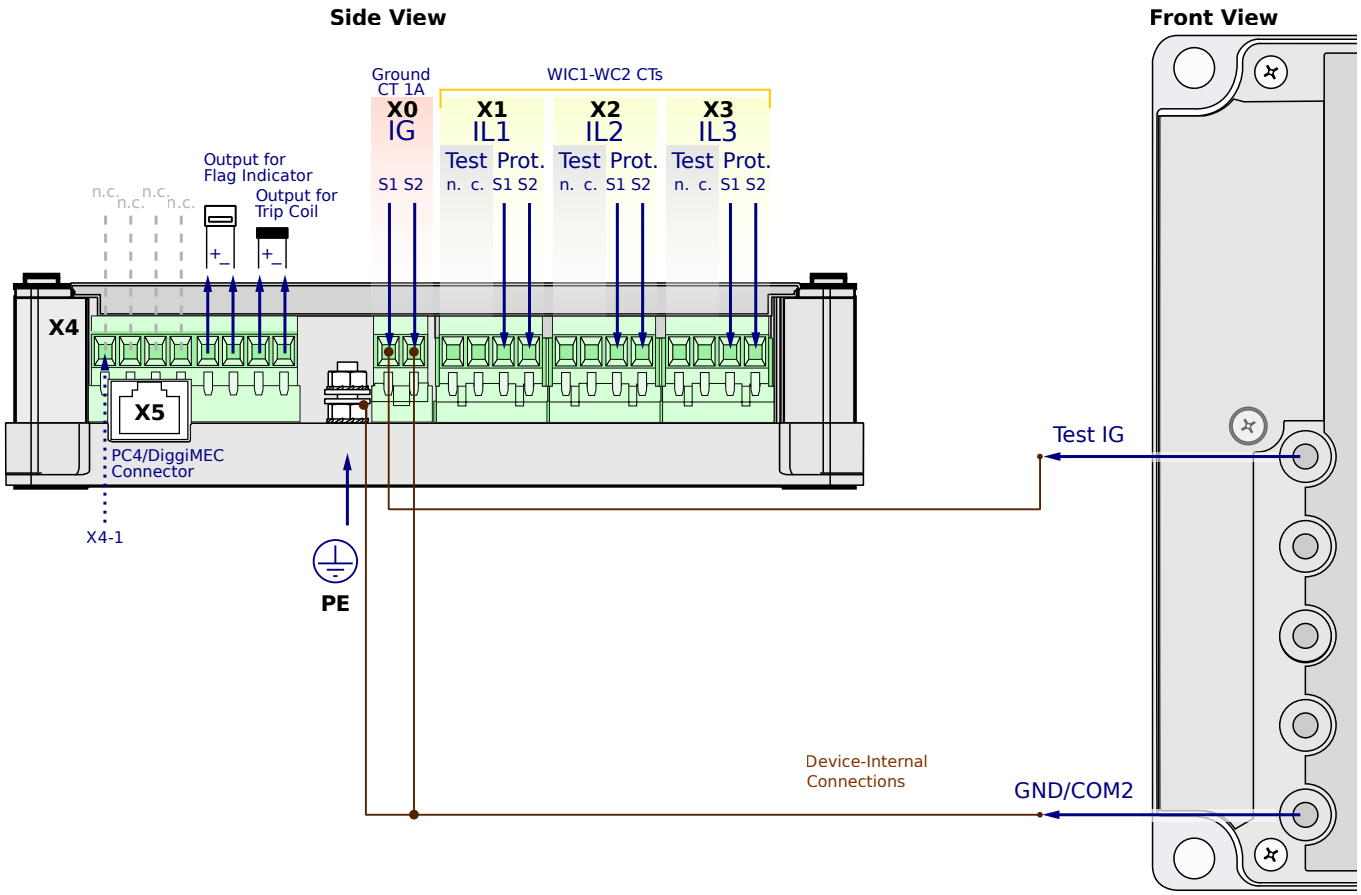


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2SA0

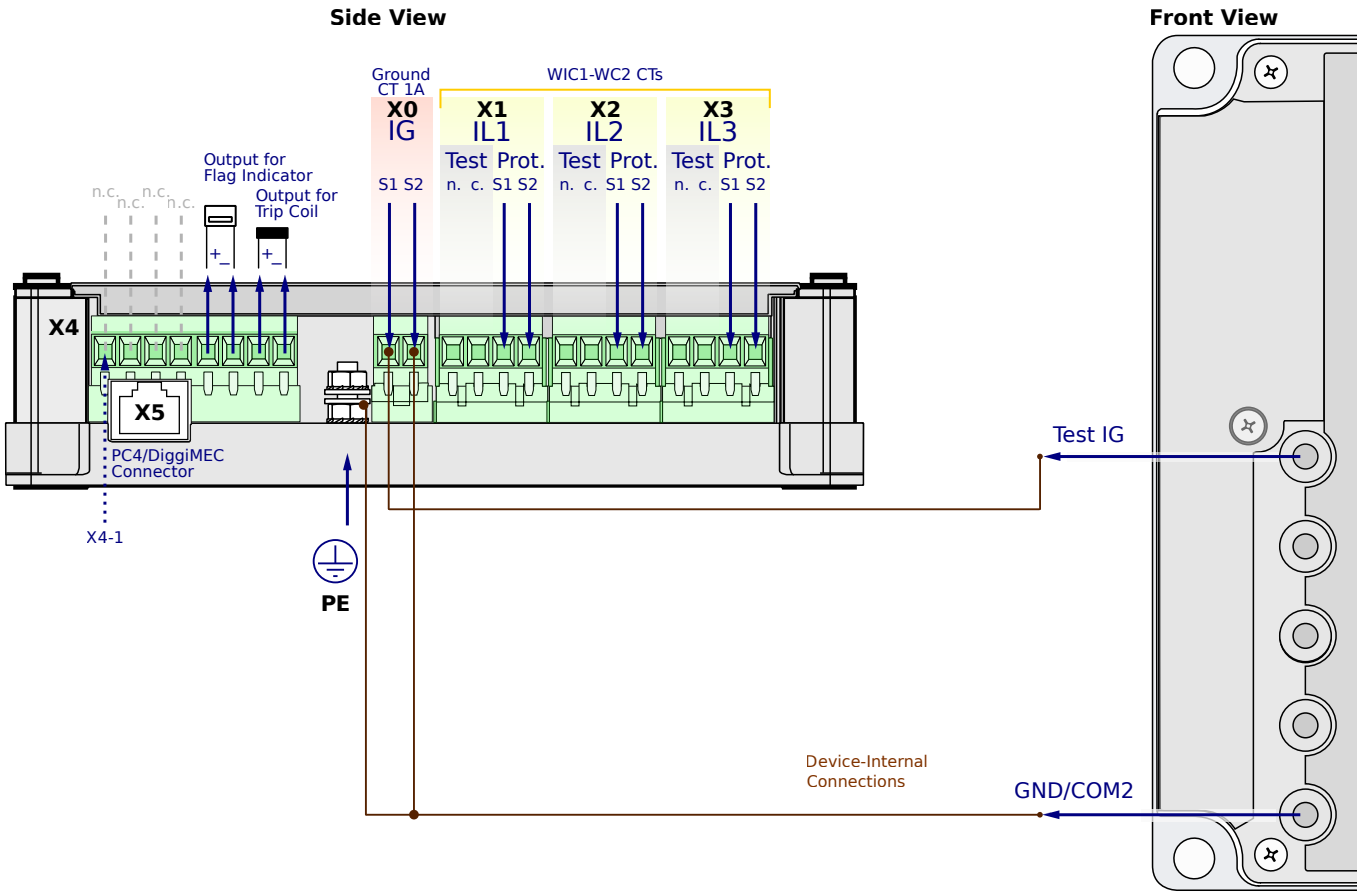


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2SAH

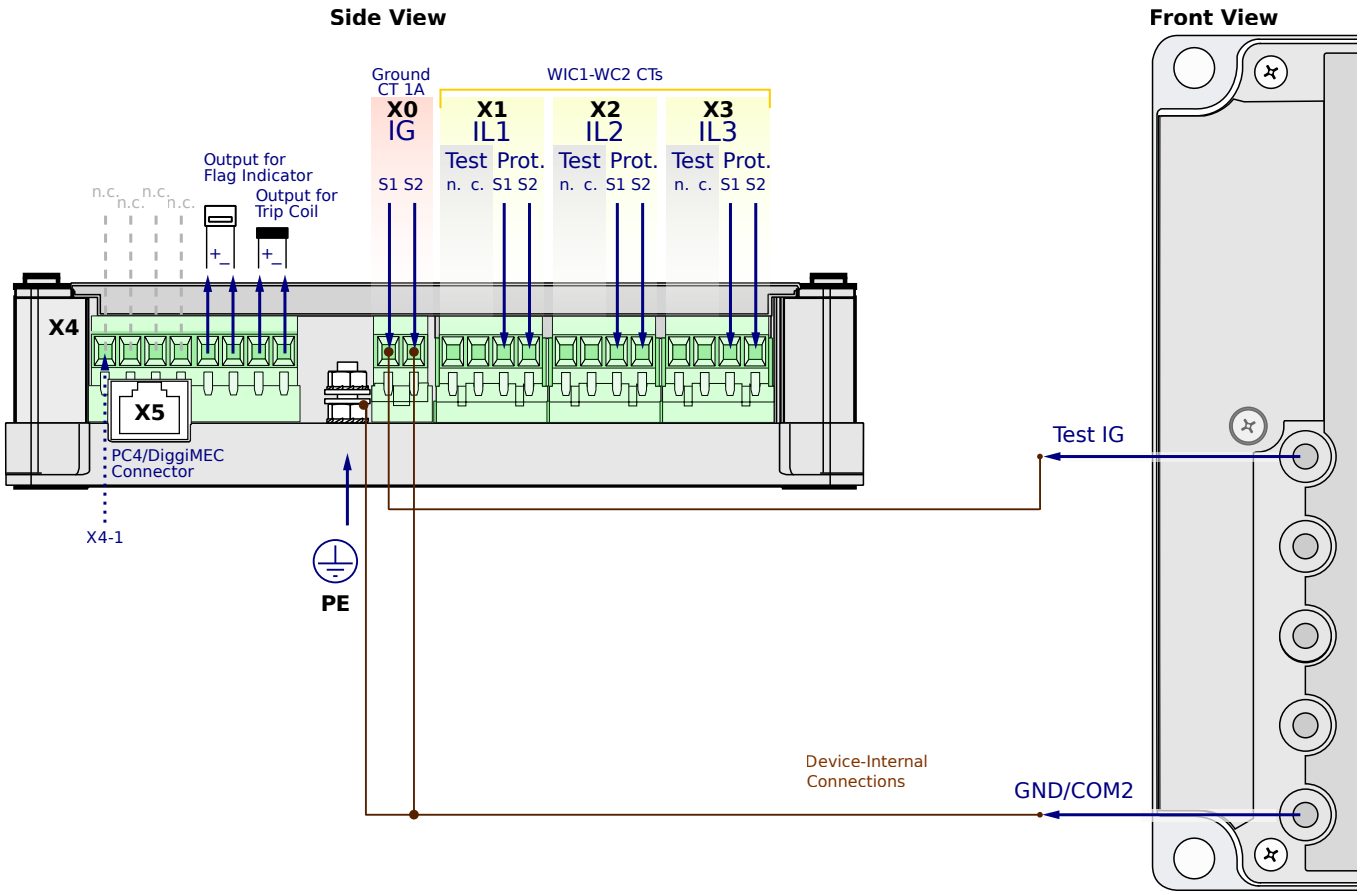


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2AA0

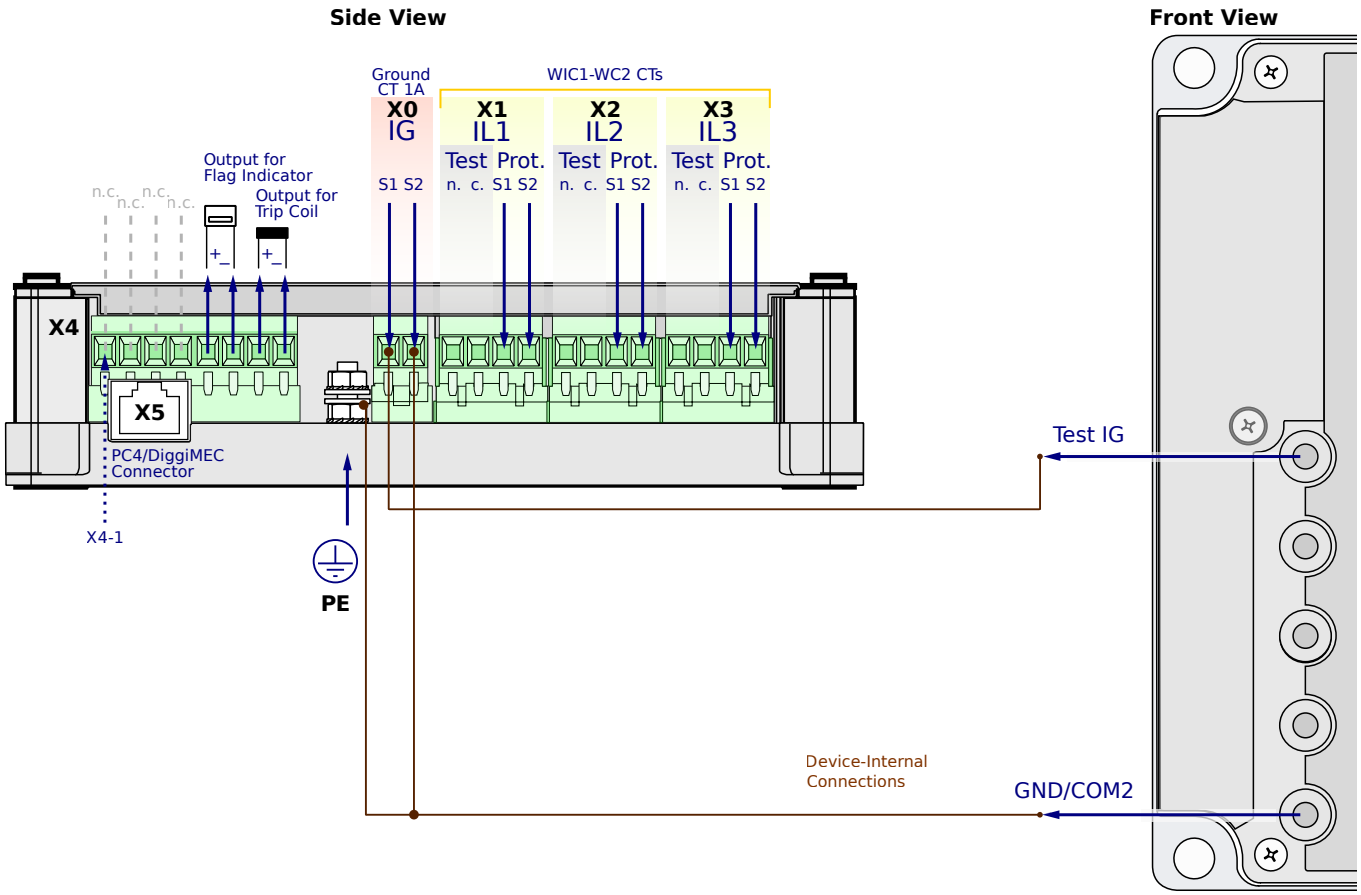


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2AAH

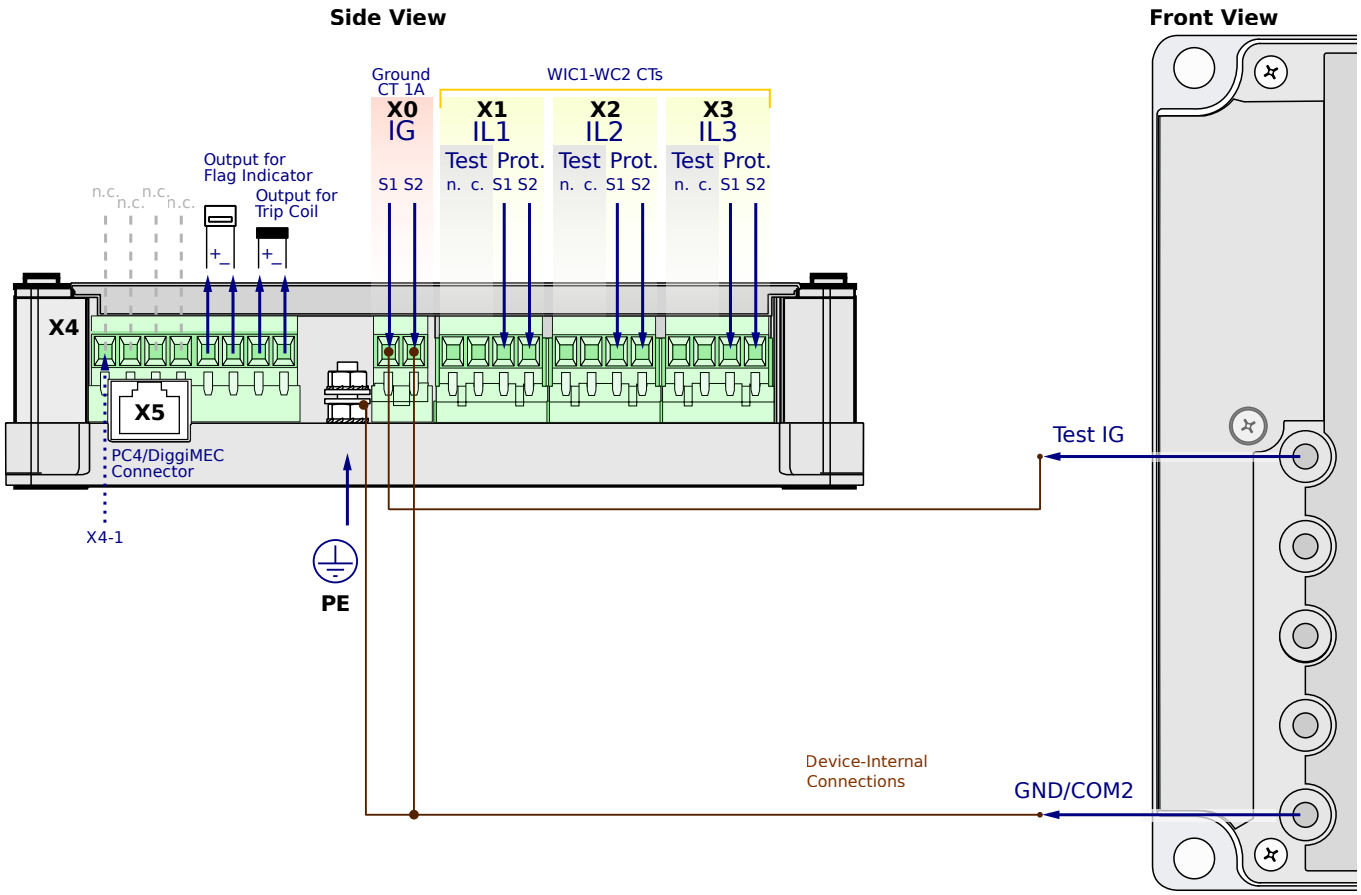


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2PA0

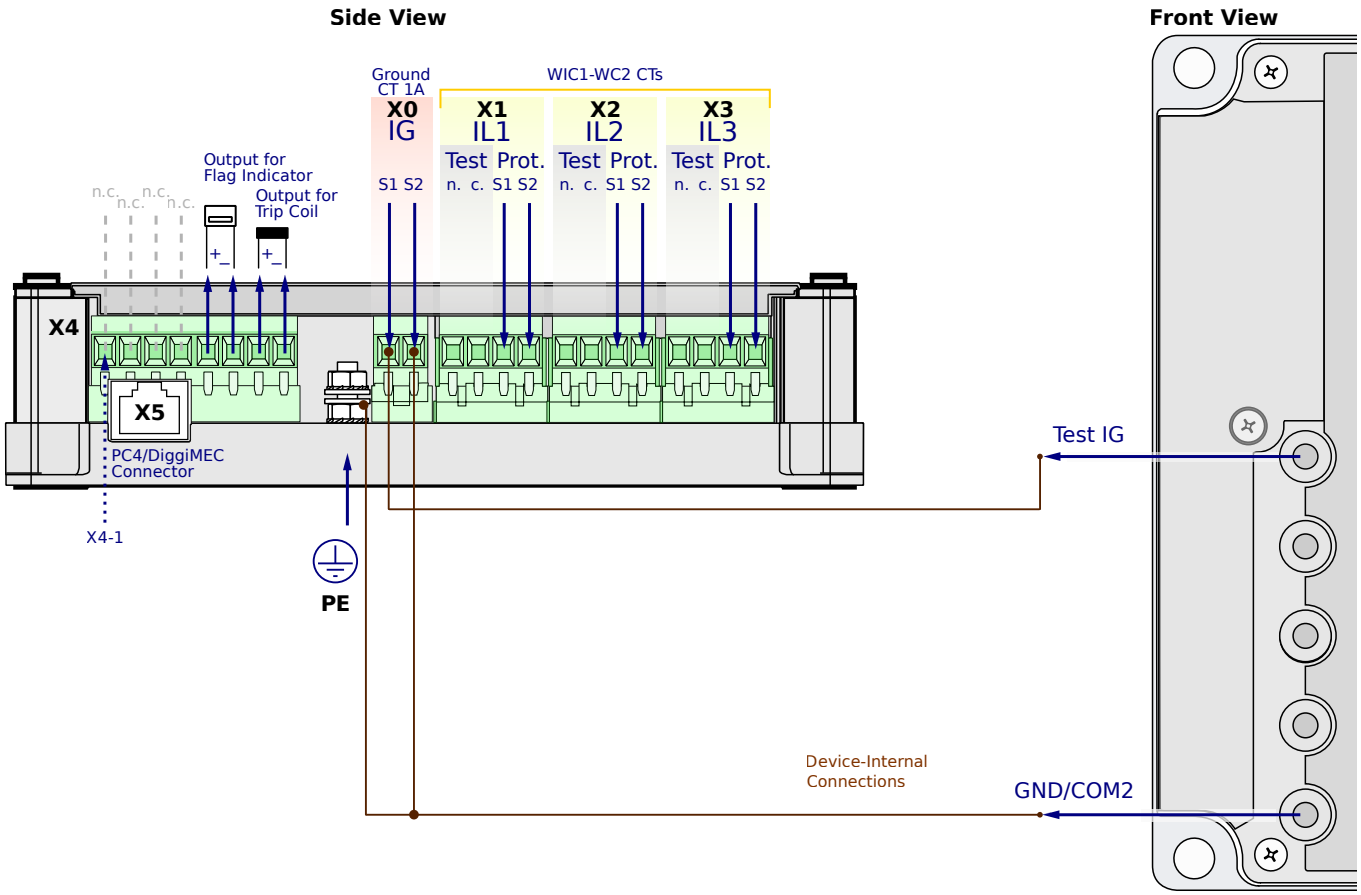


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NN2PAH

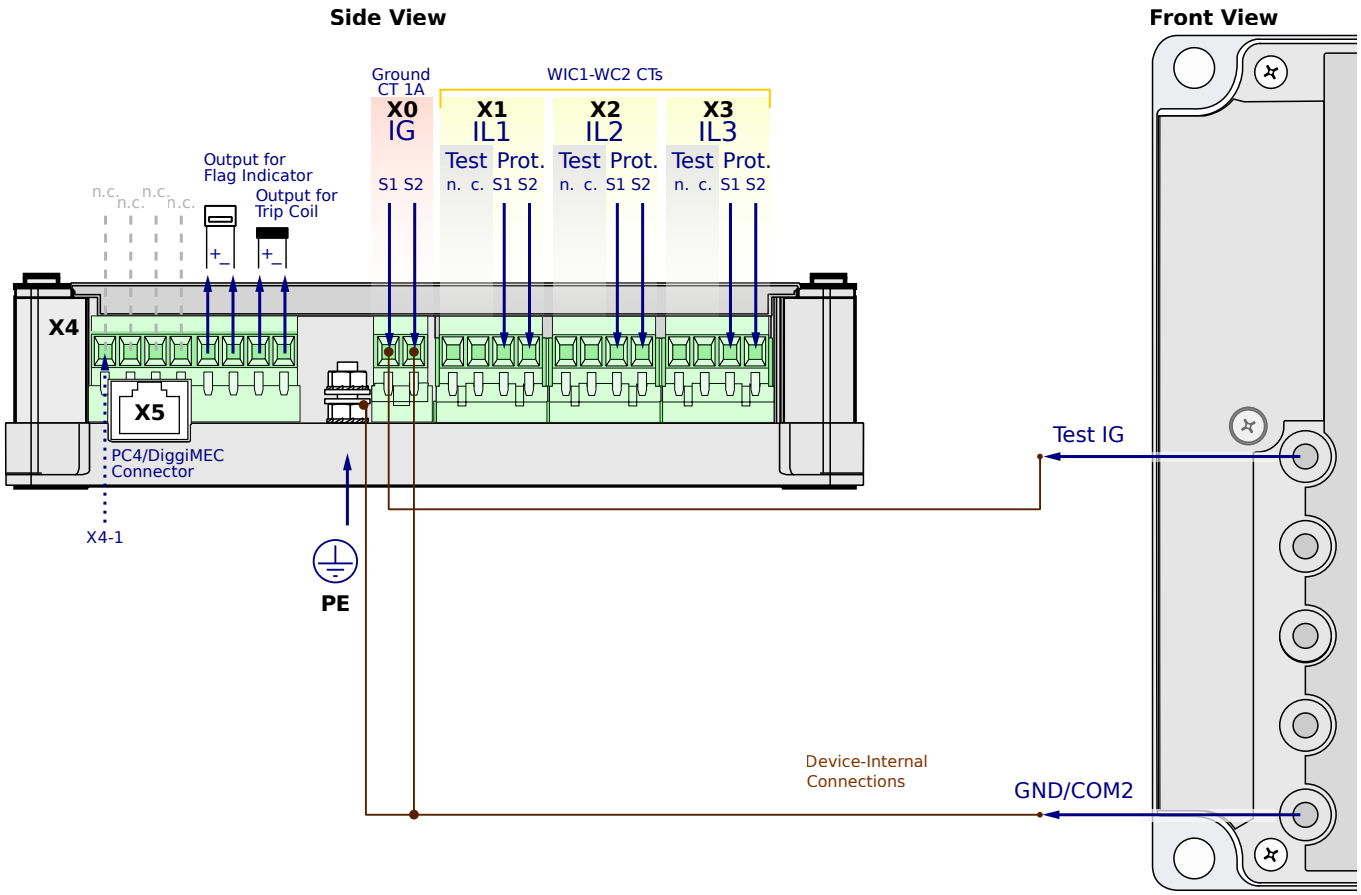


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0SA0

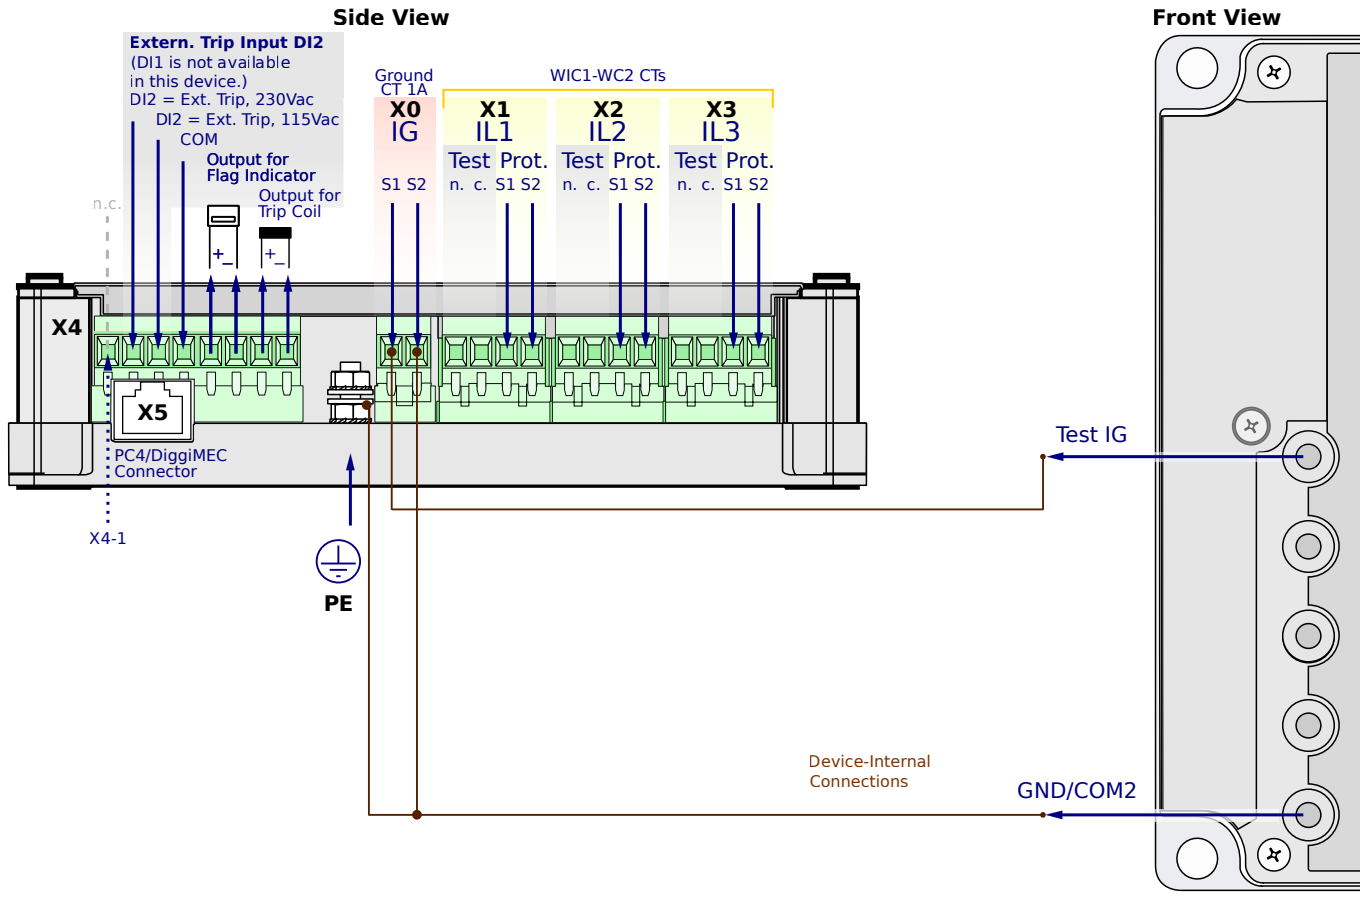


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0SAH

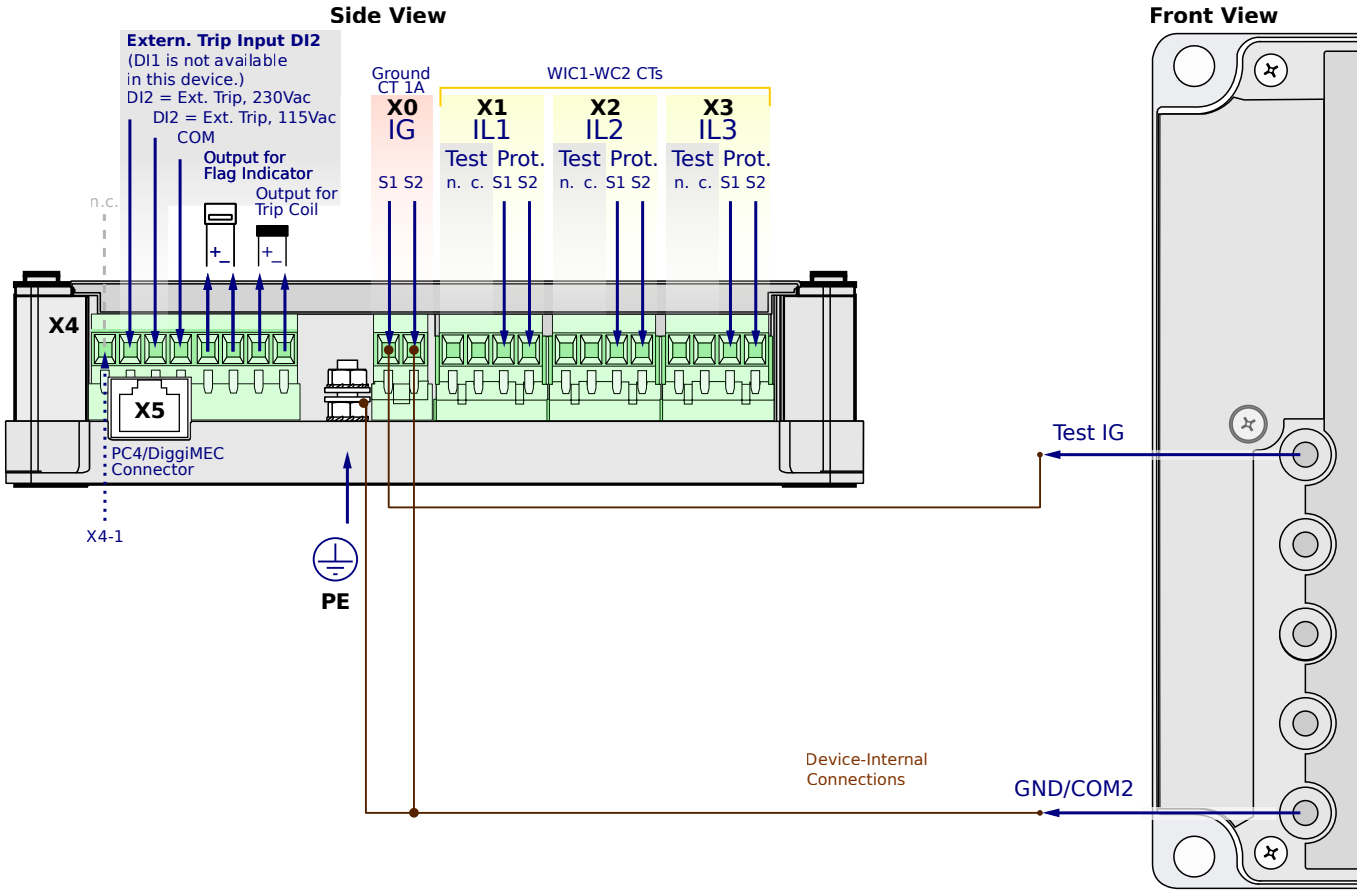


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0AA0

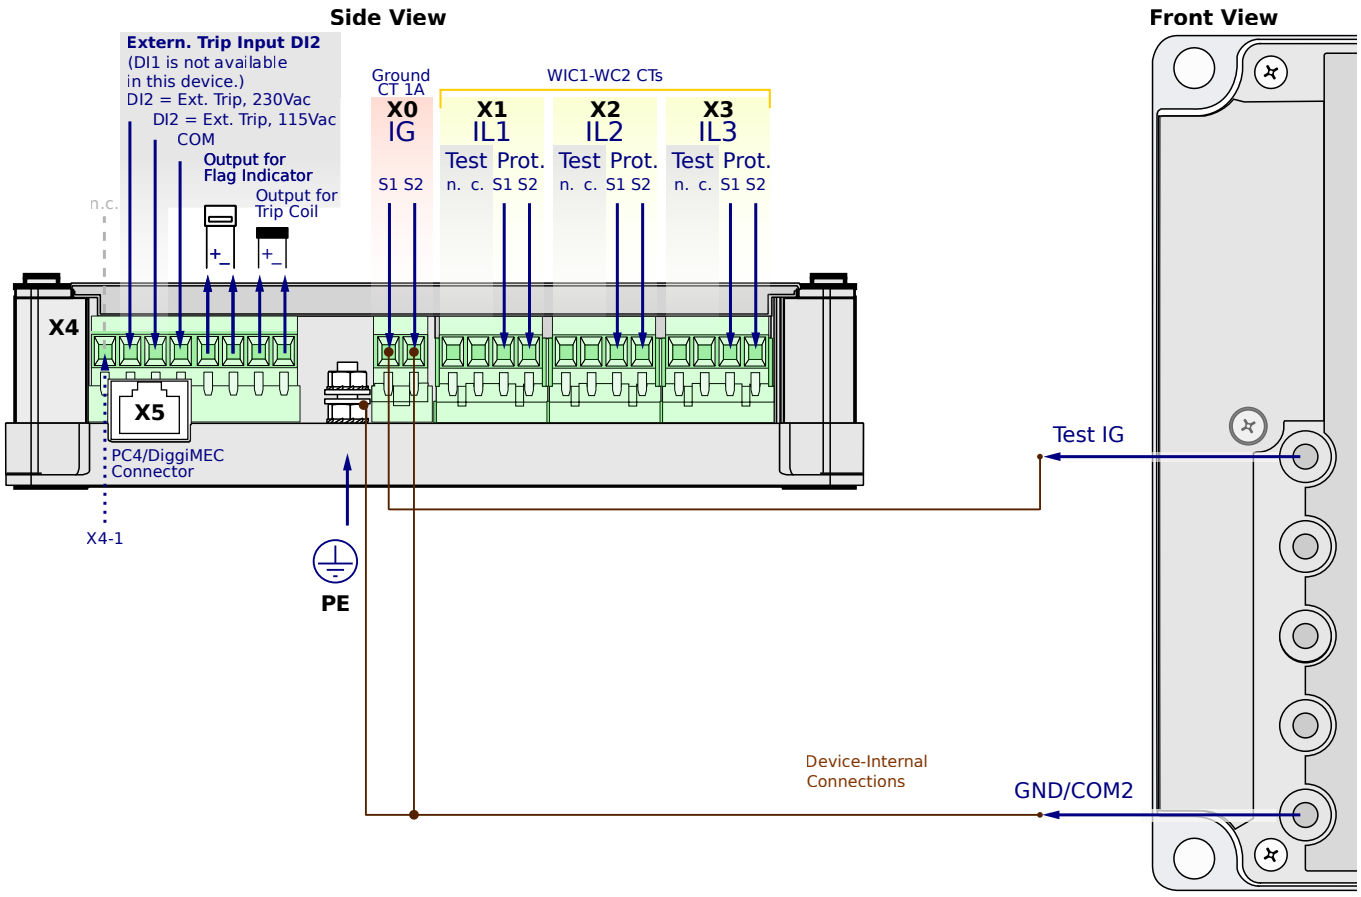


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0AAH

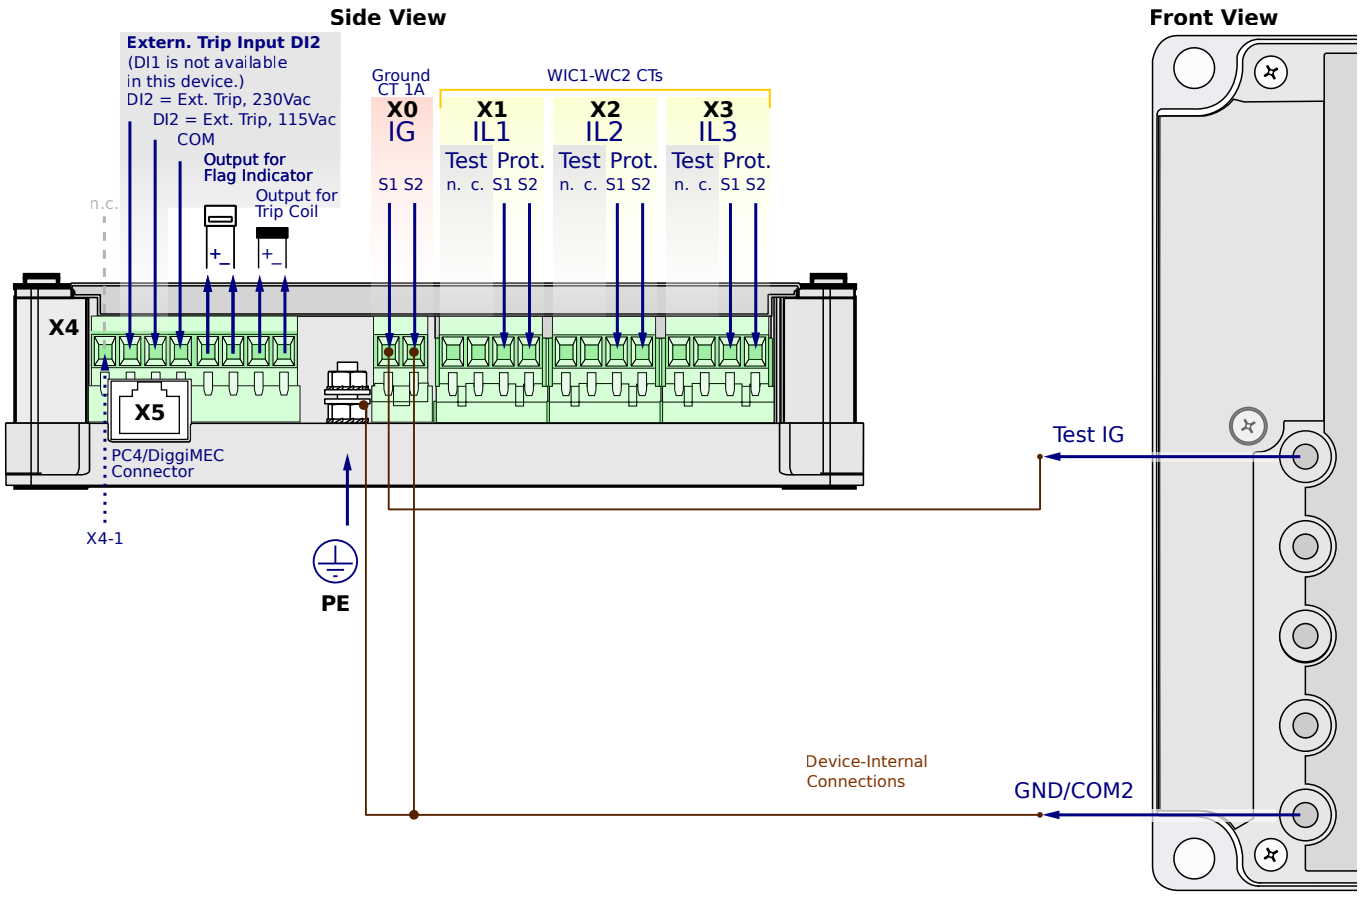


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0PA0

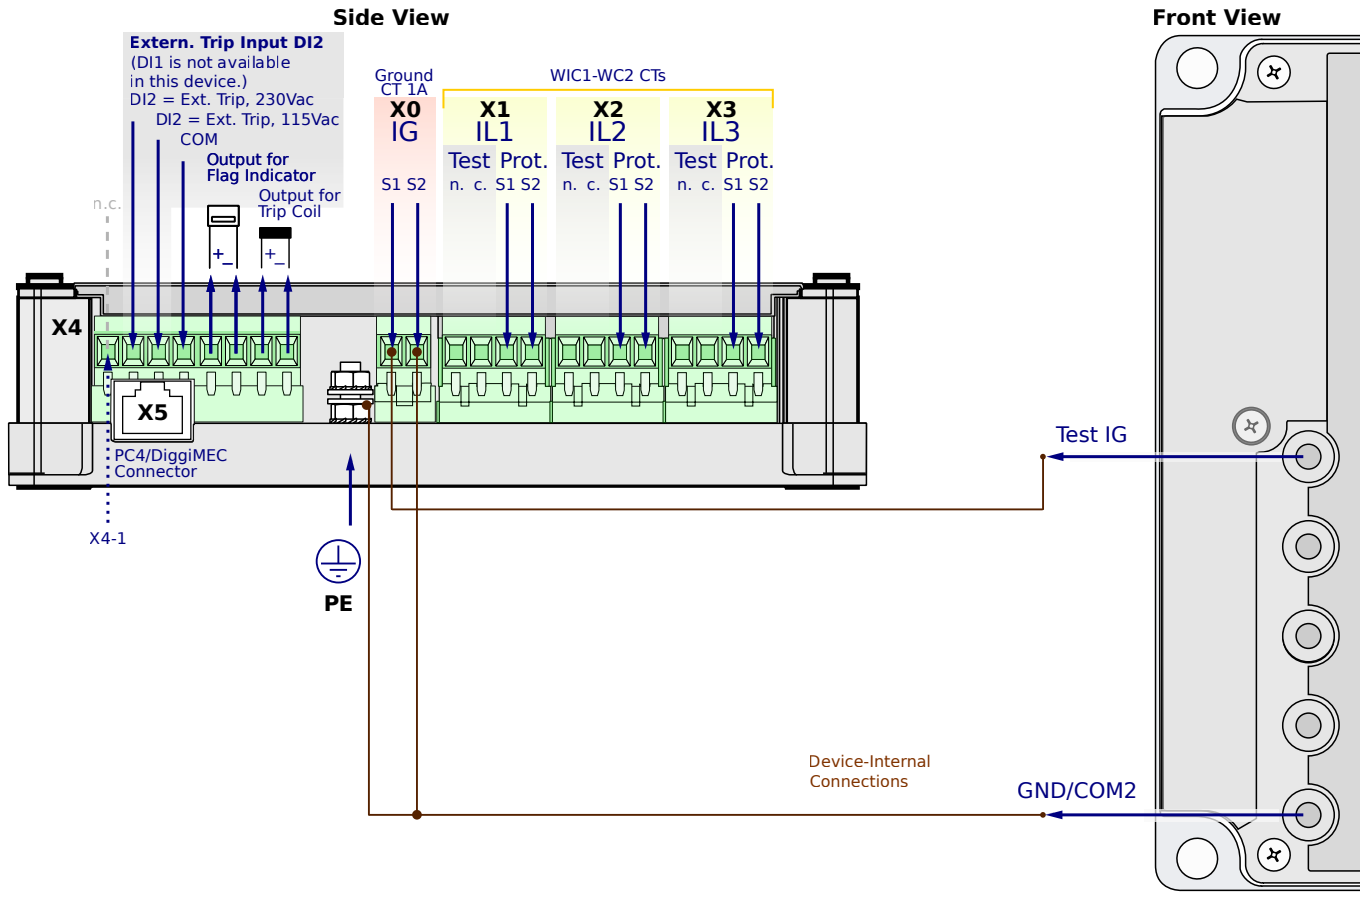


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF0PAH

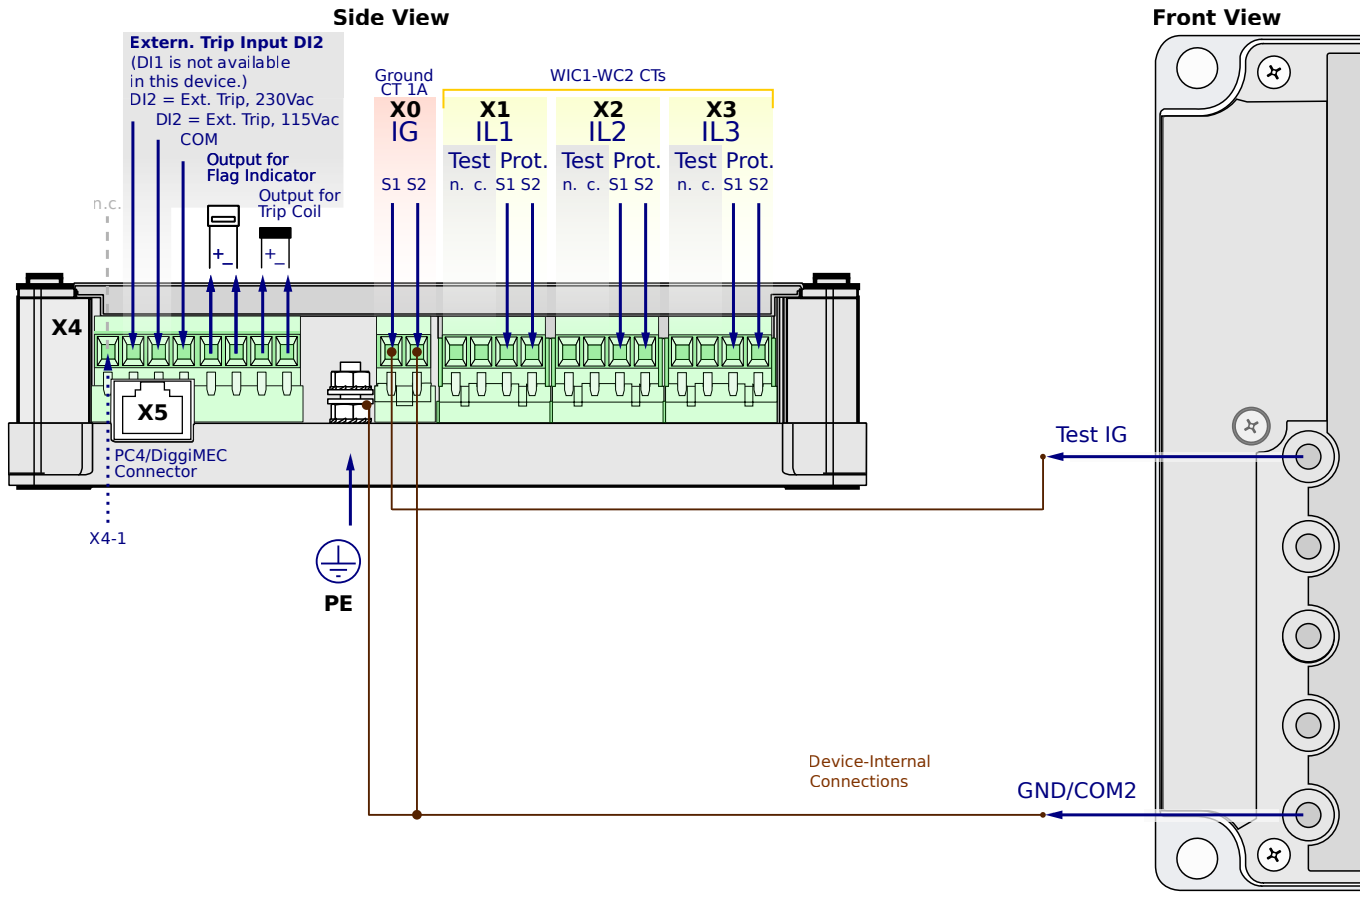


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1SA0

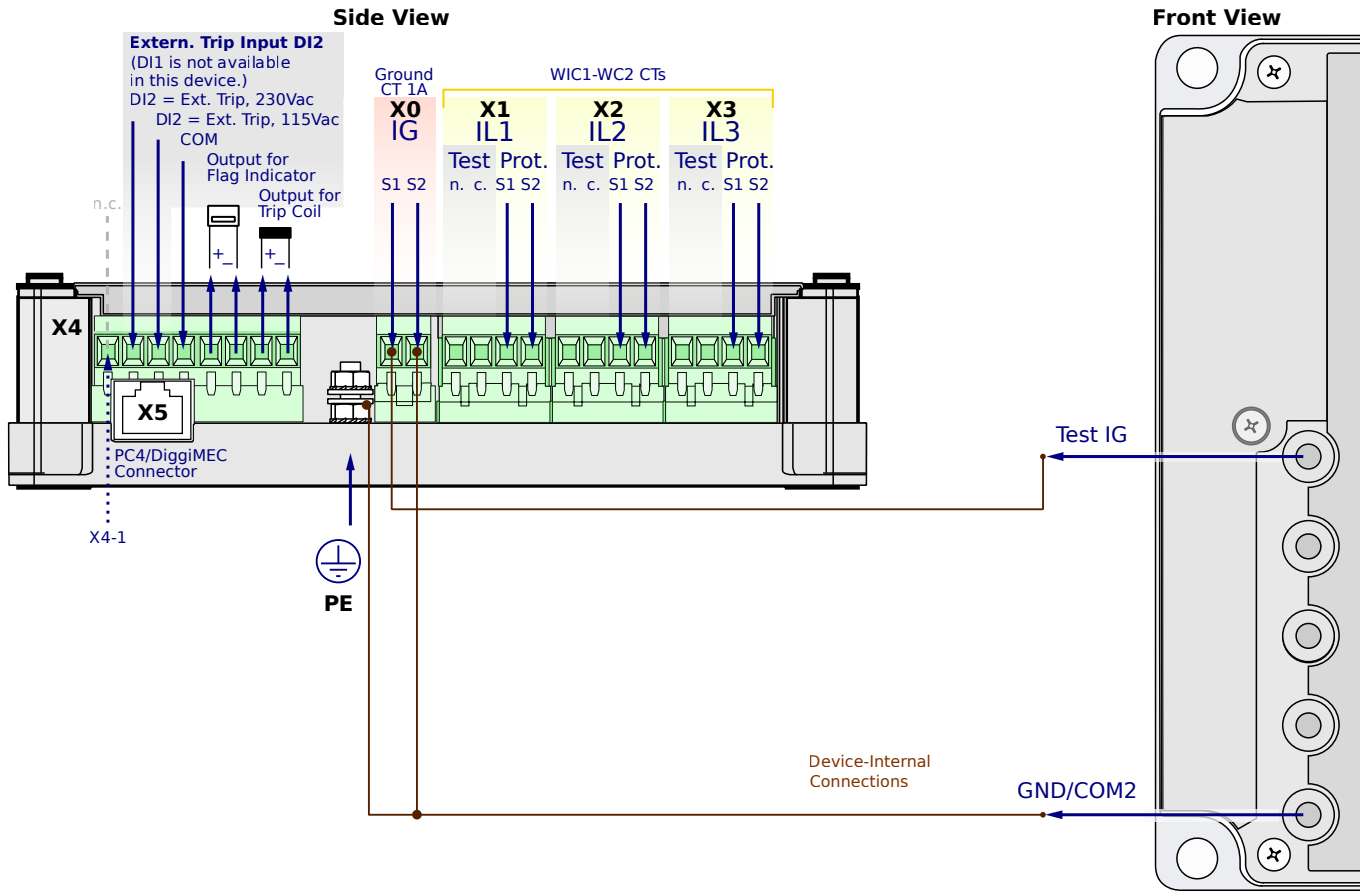


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1SAH

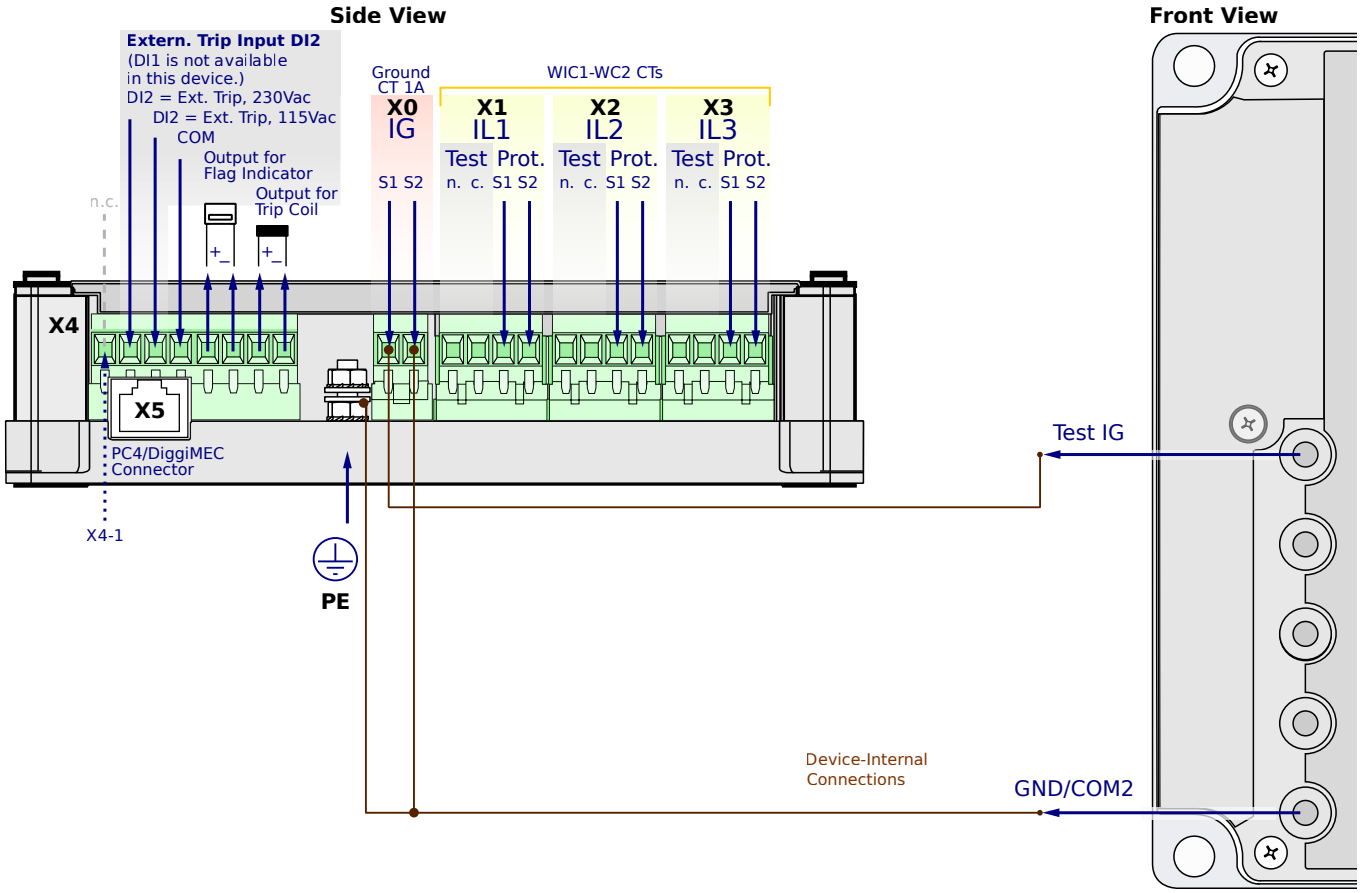


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1AA0

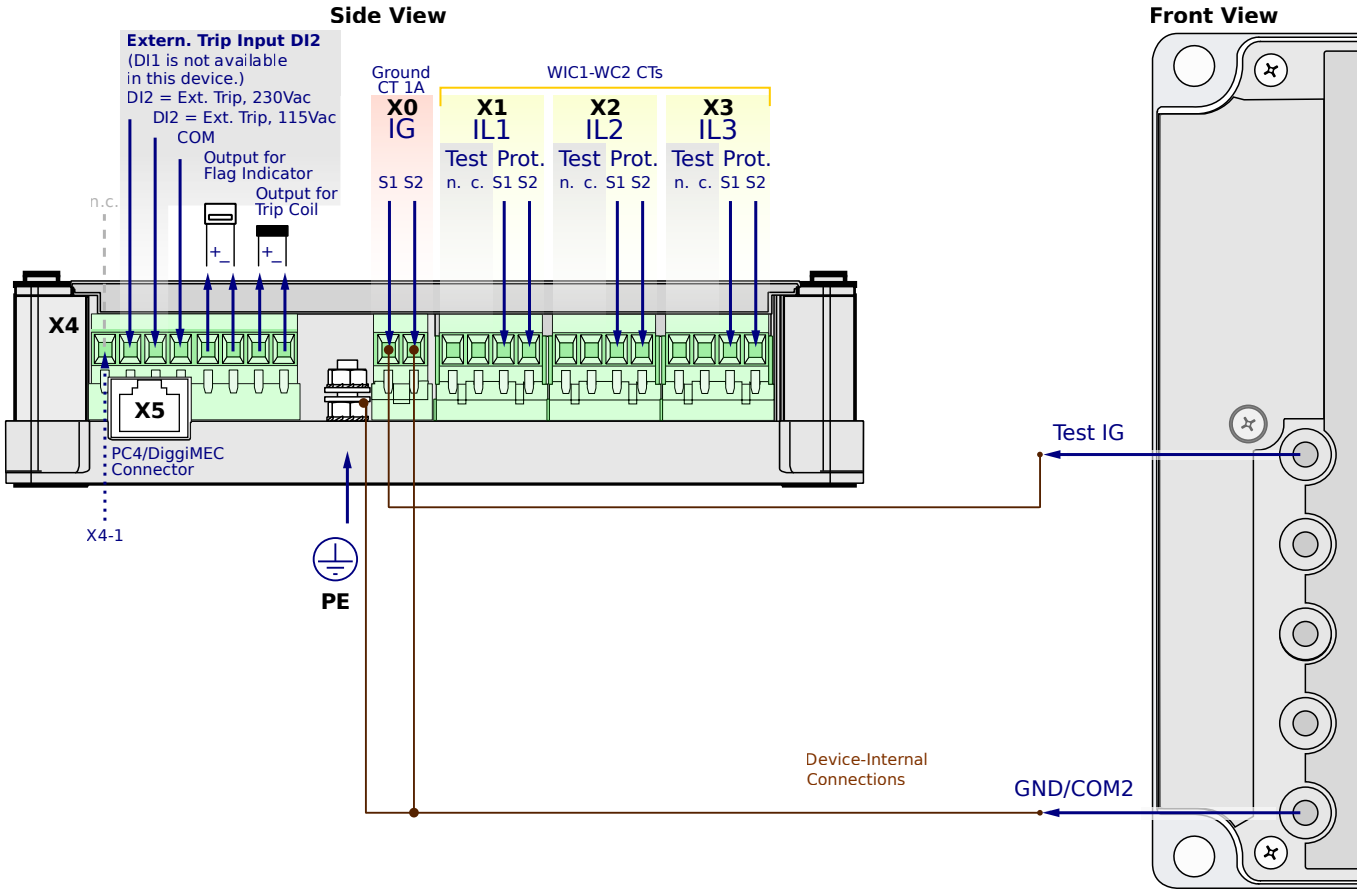


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1AAH

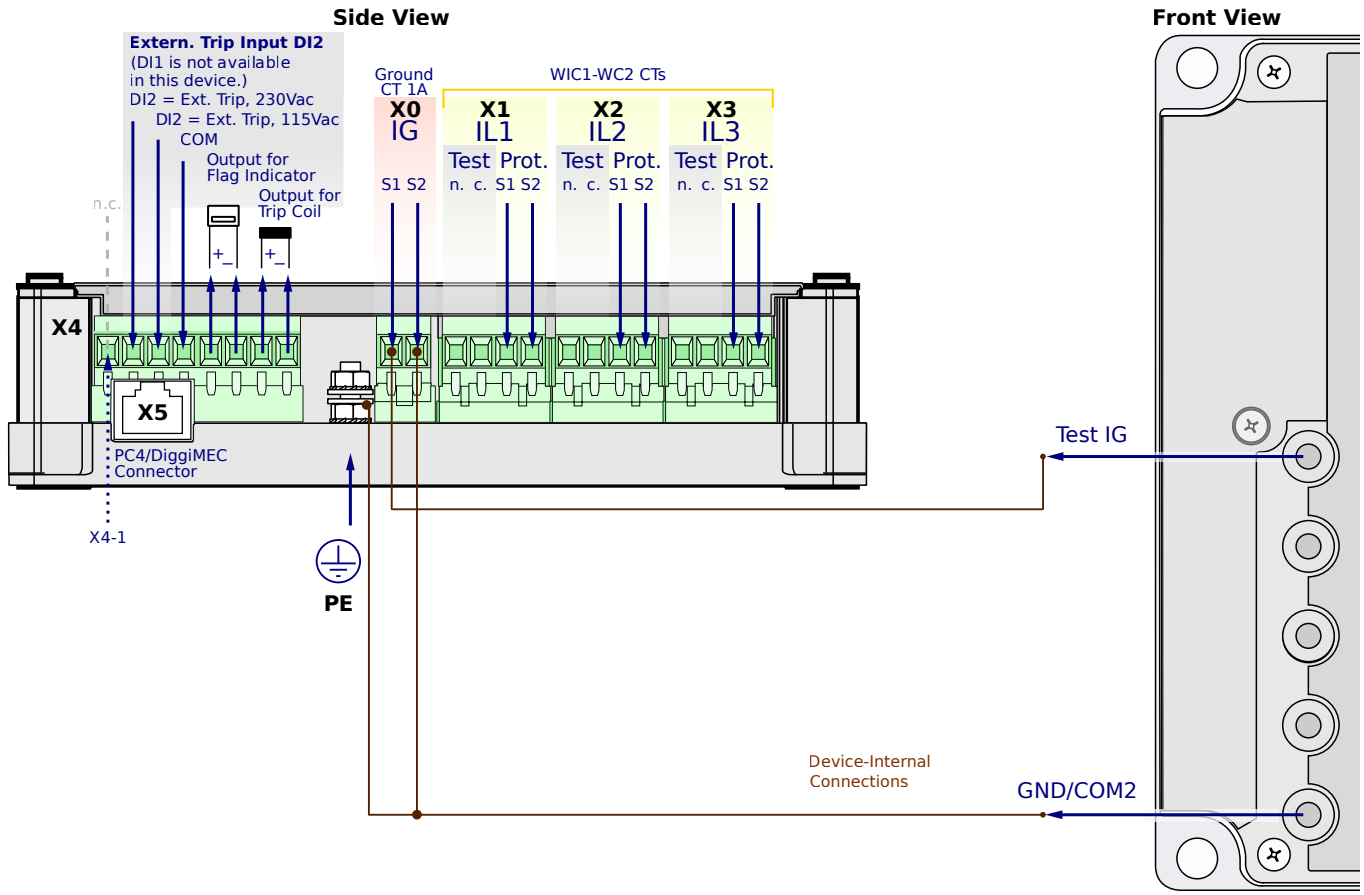


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1PA0

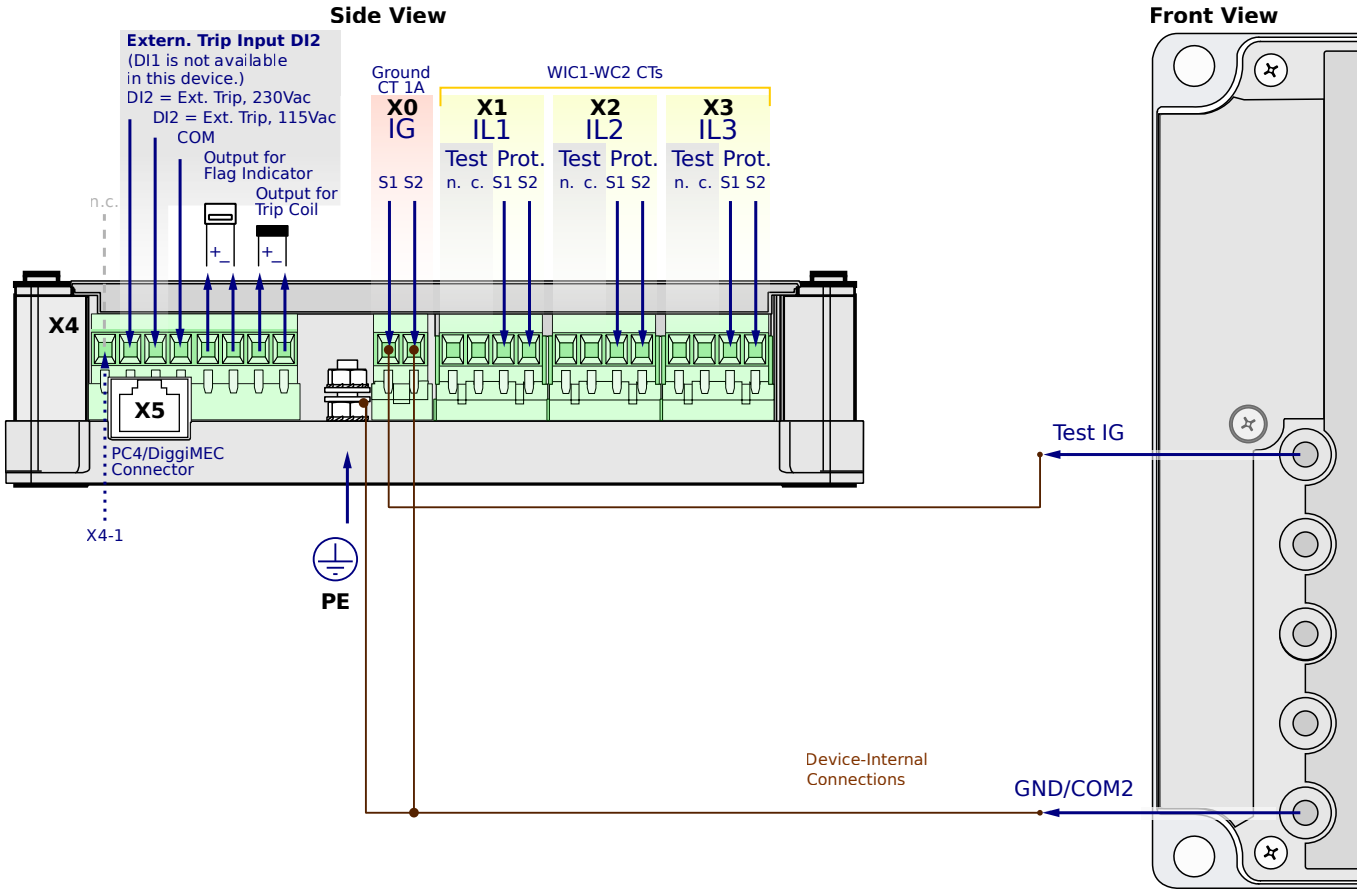


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF1PAH

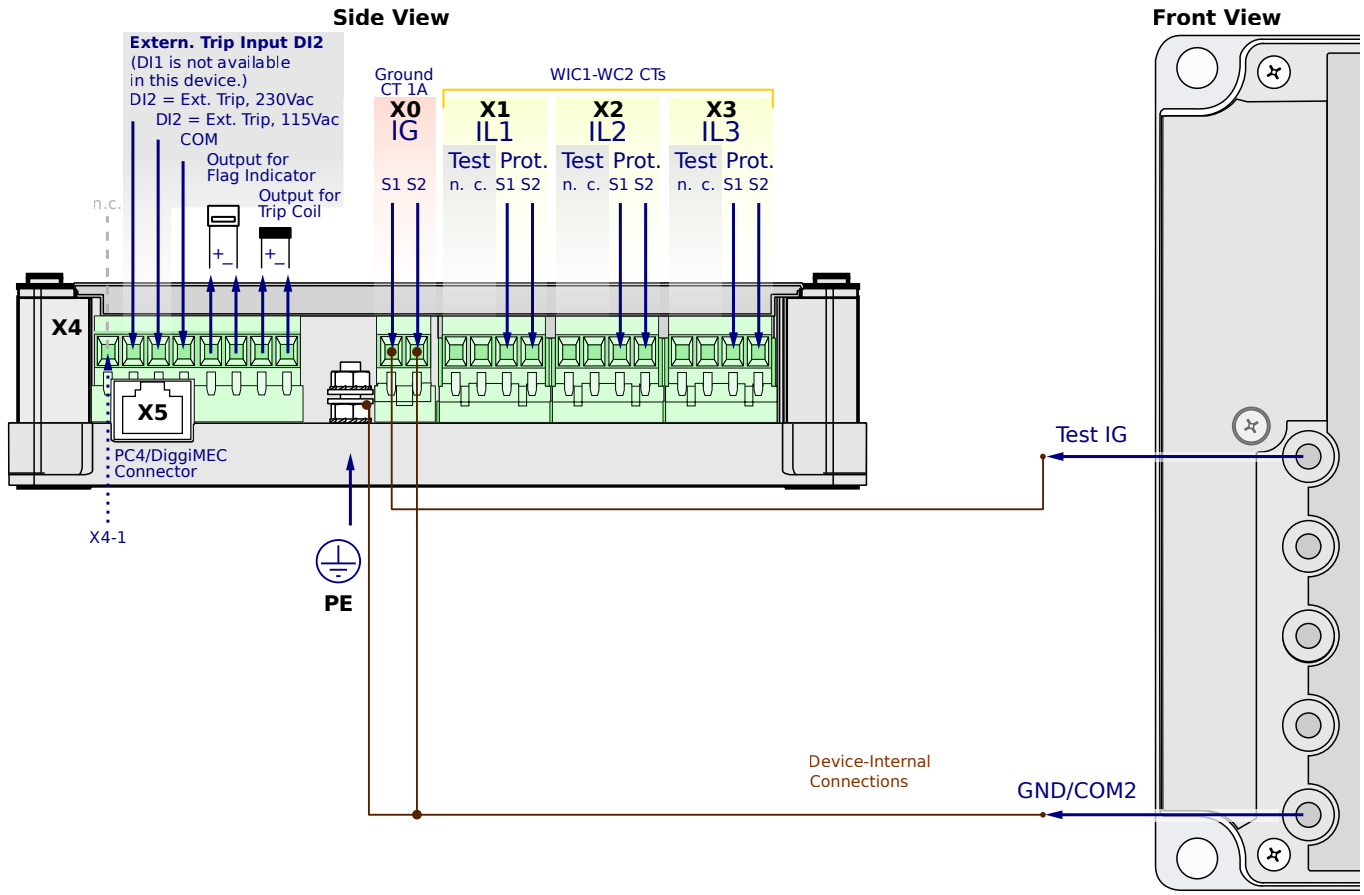


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2SA0

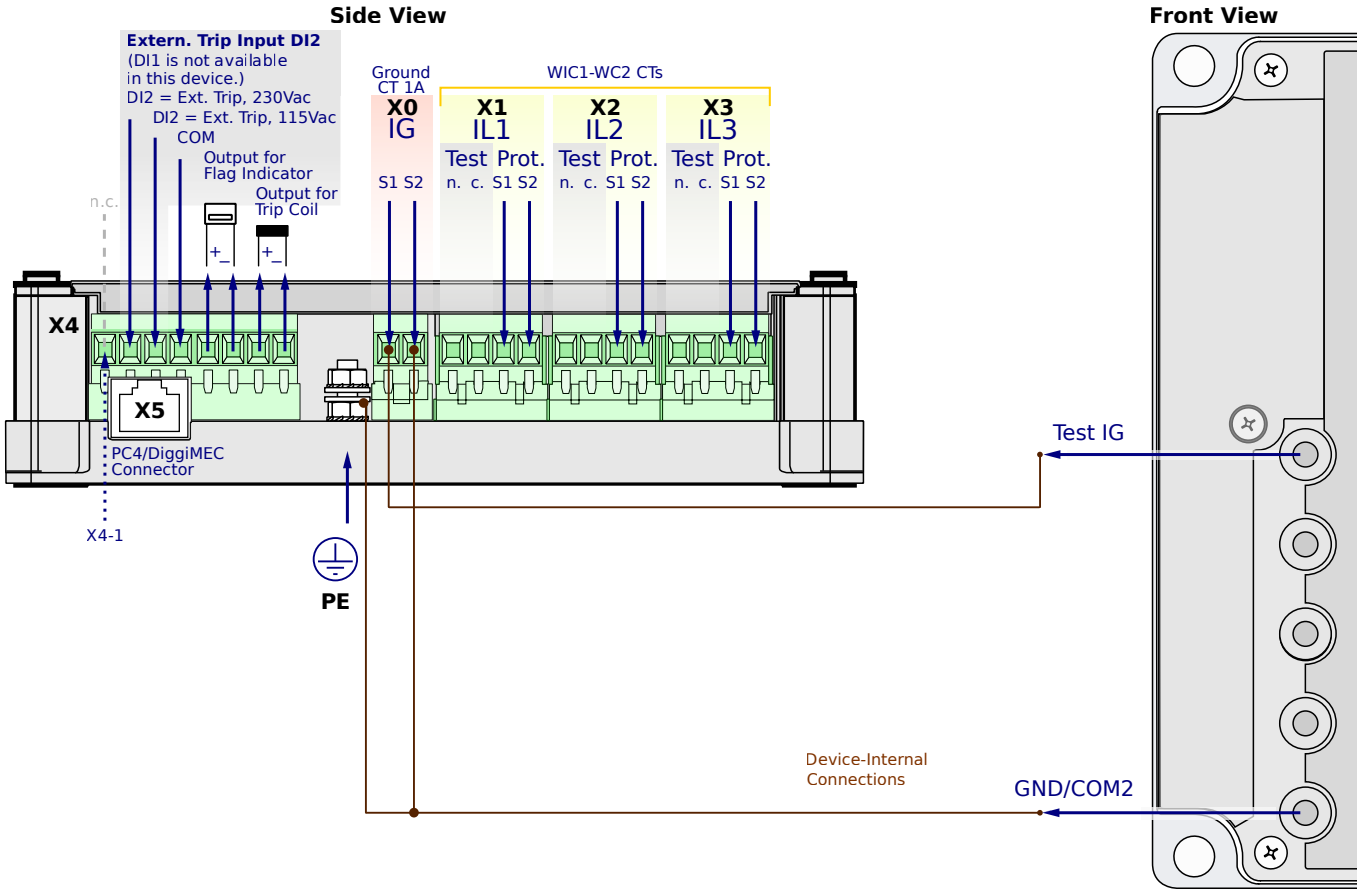


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2SAH

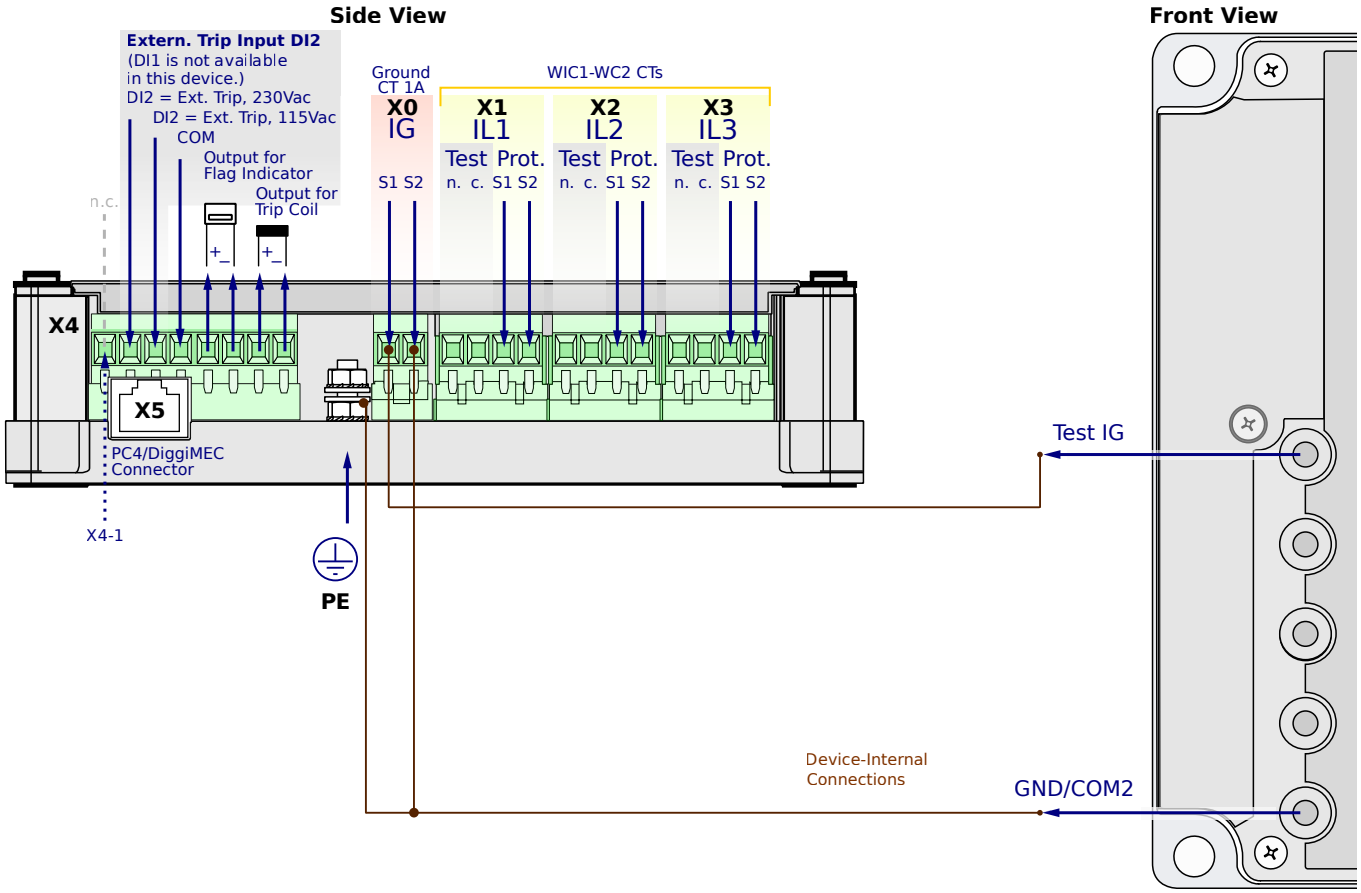


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2AA0

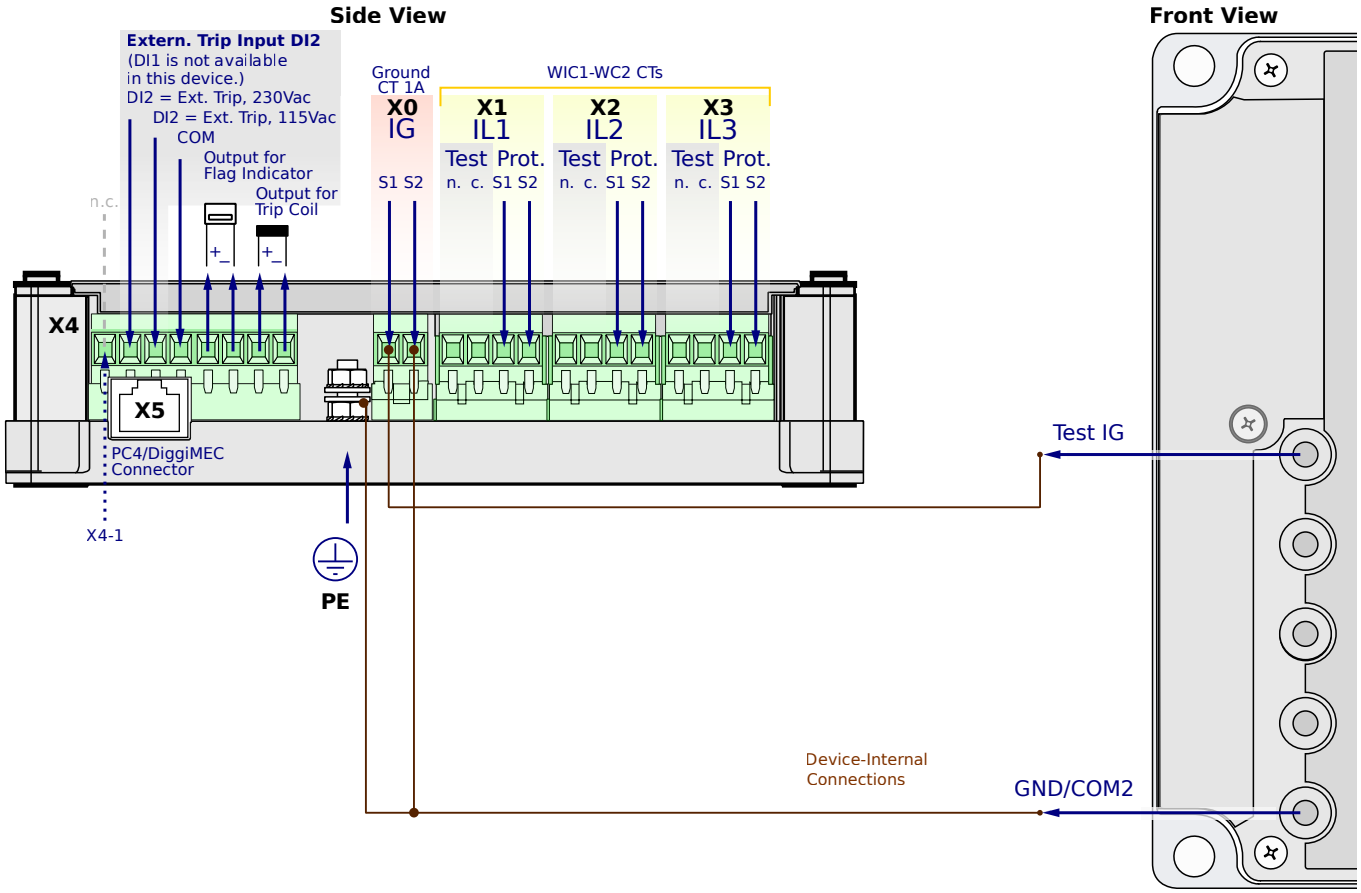


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2AAH

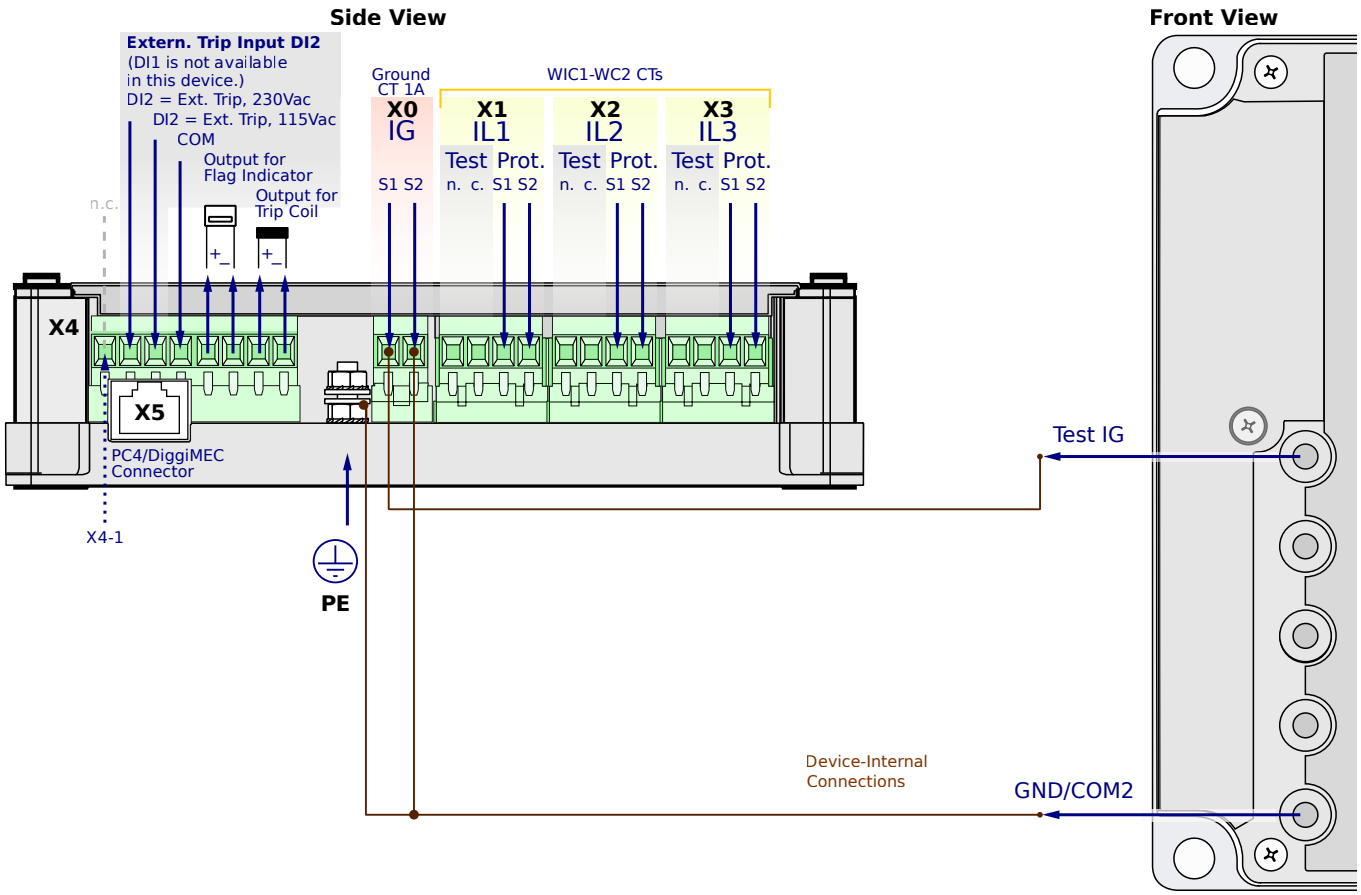


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2PA0

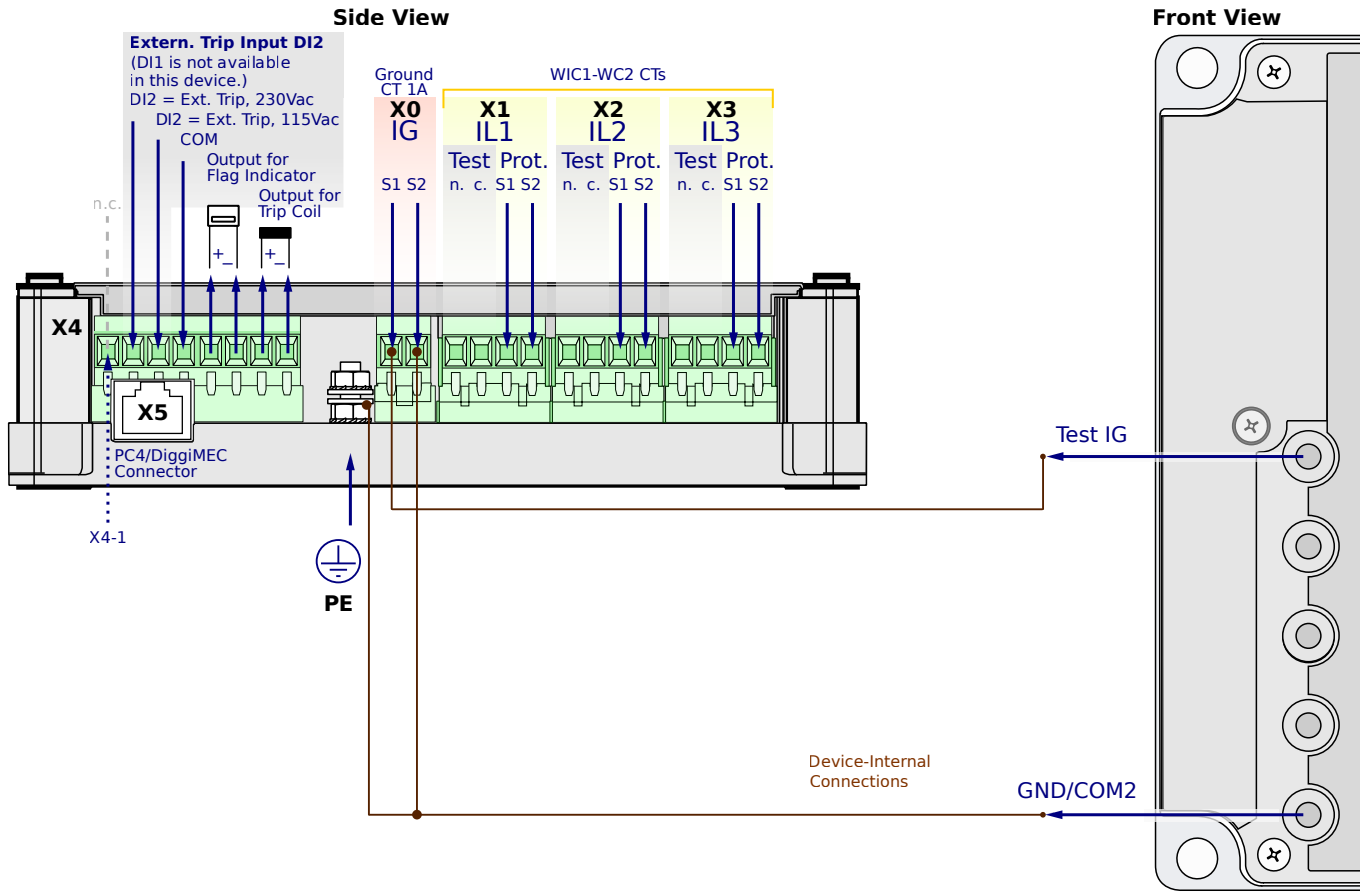


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NF2PAH

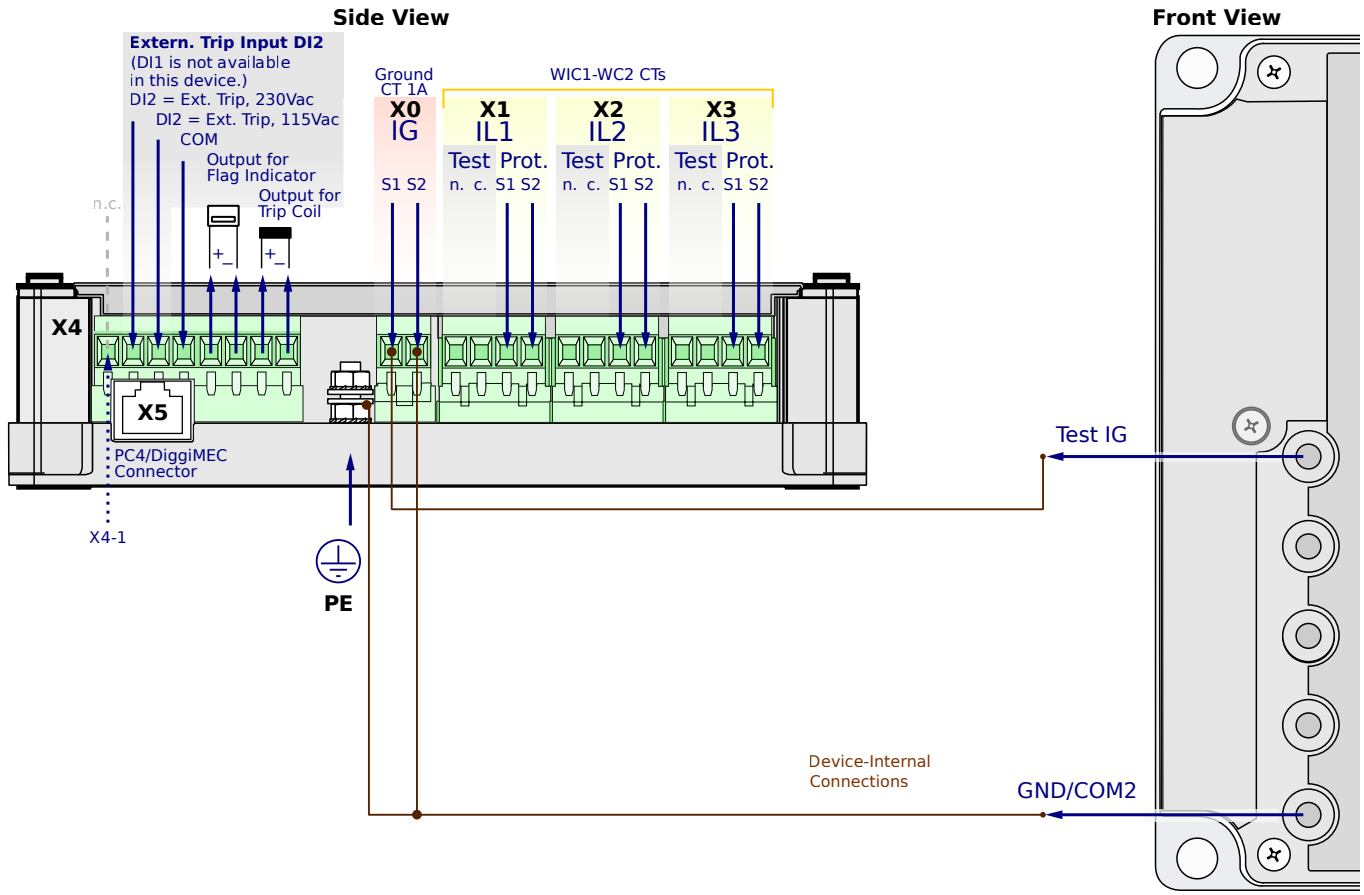


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0SA0

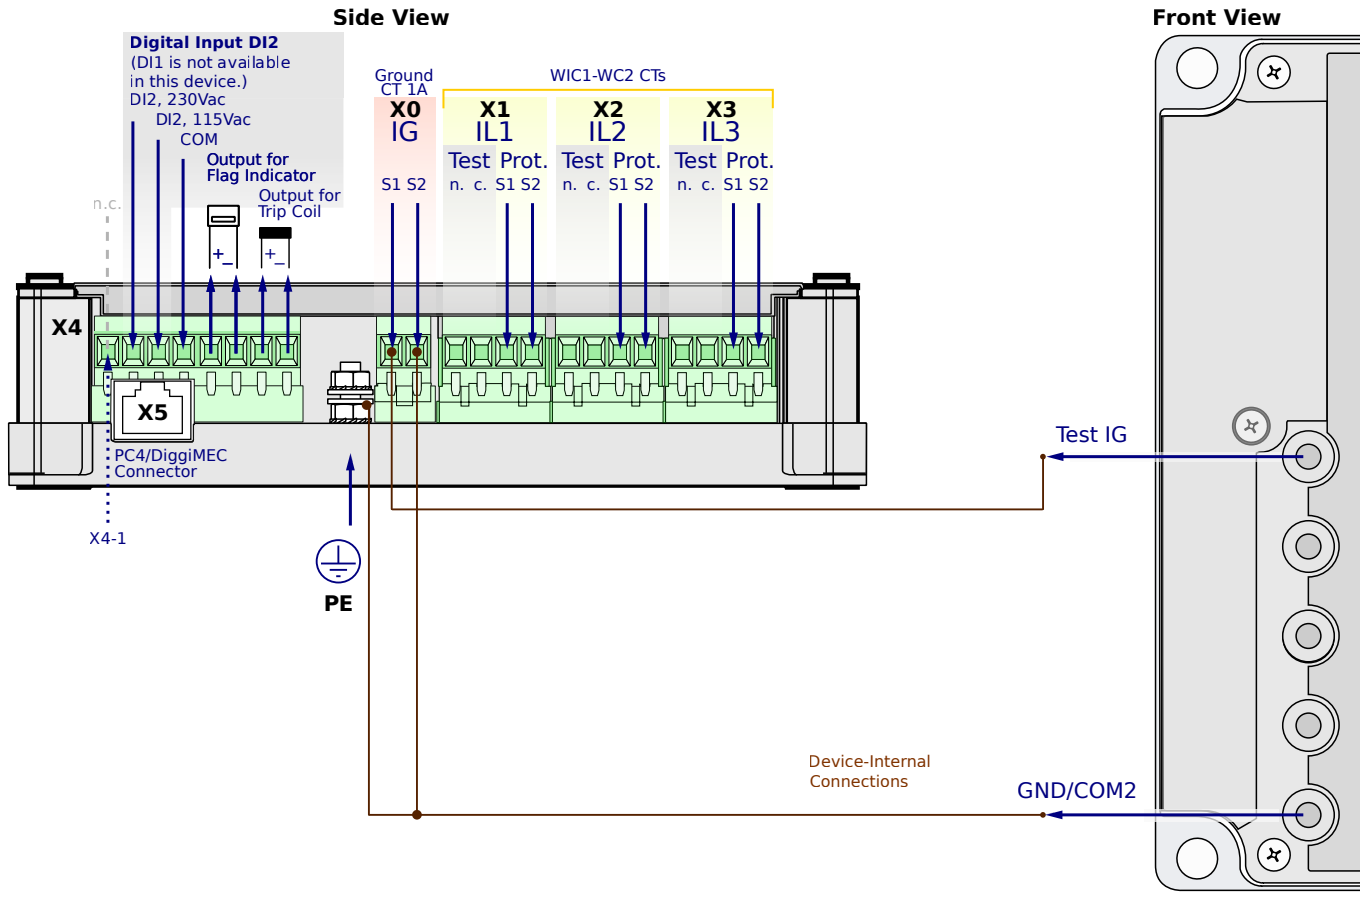


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0SAH

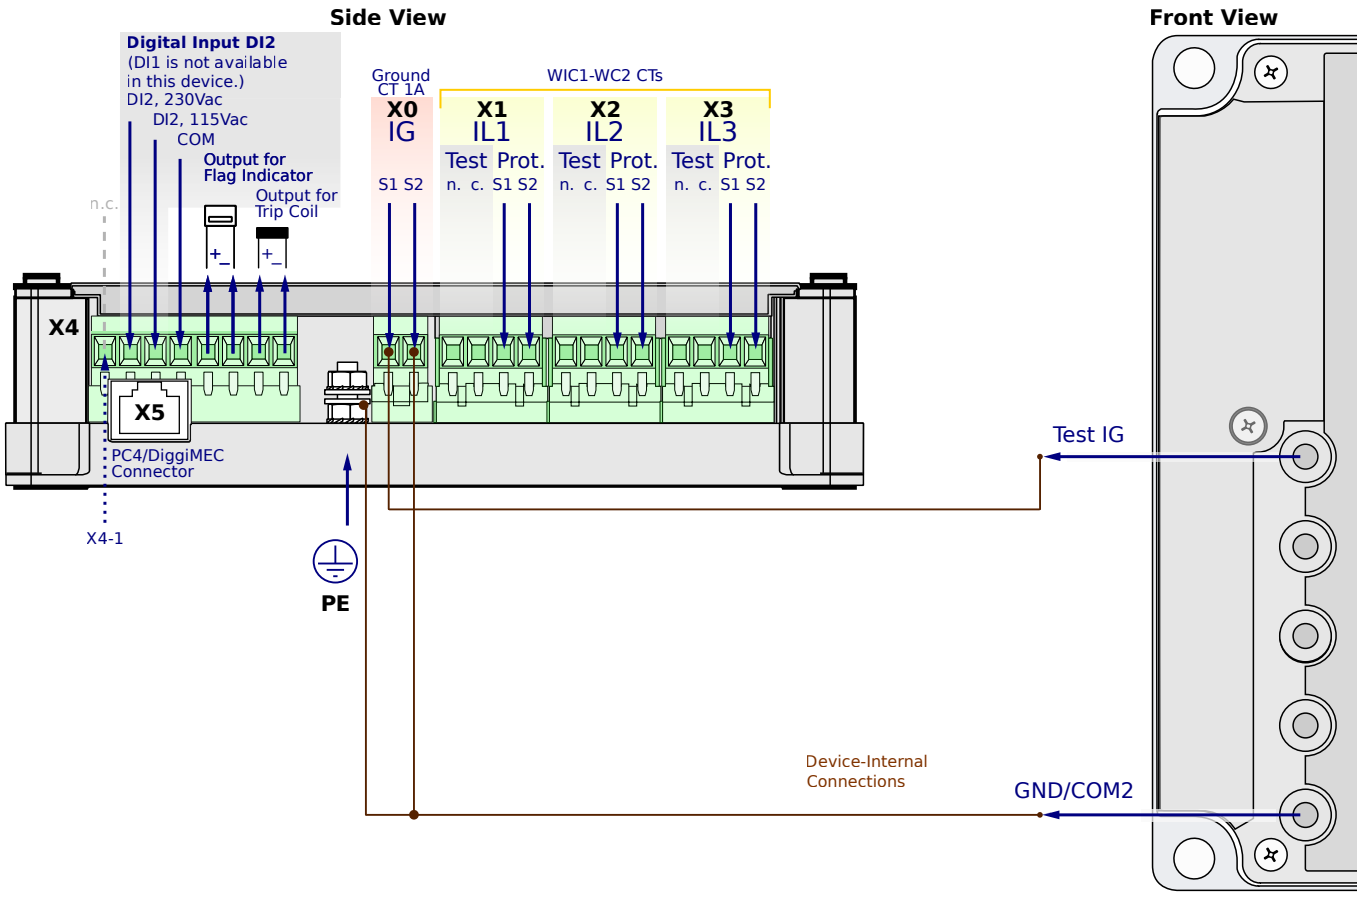


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0AA0

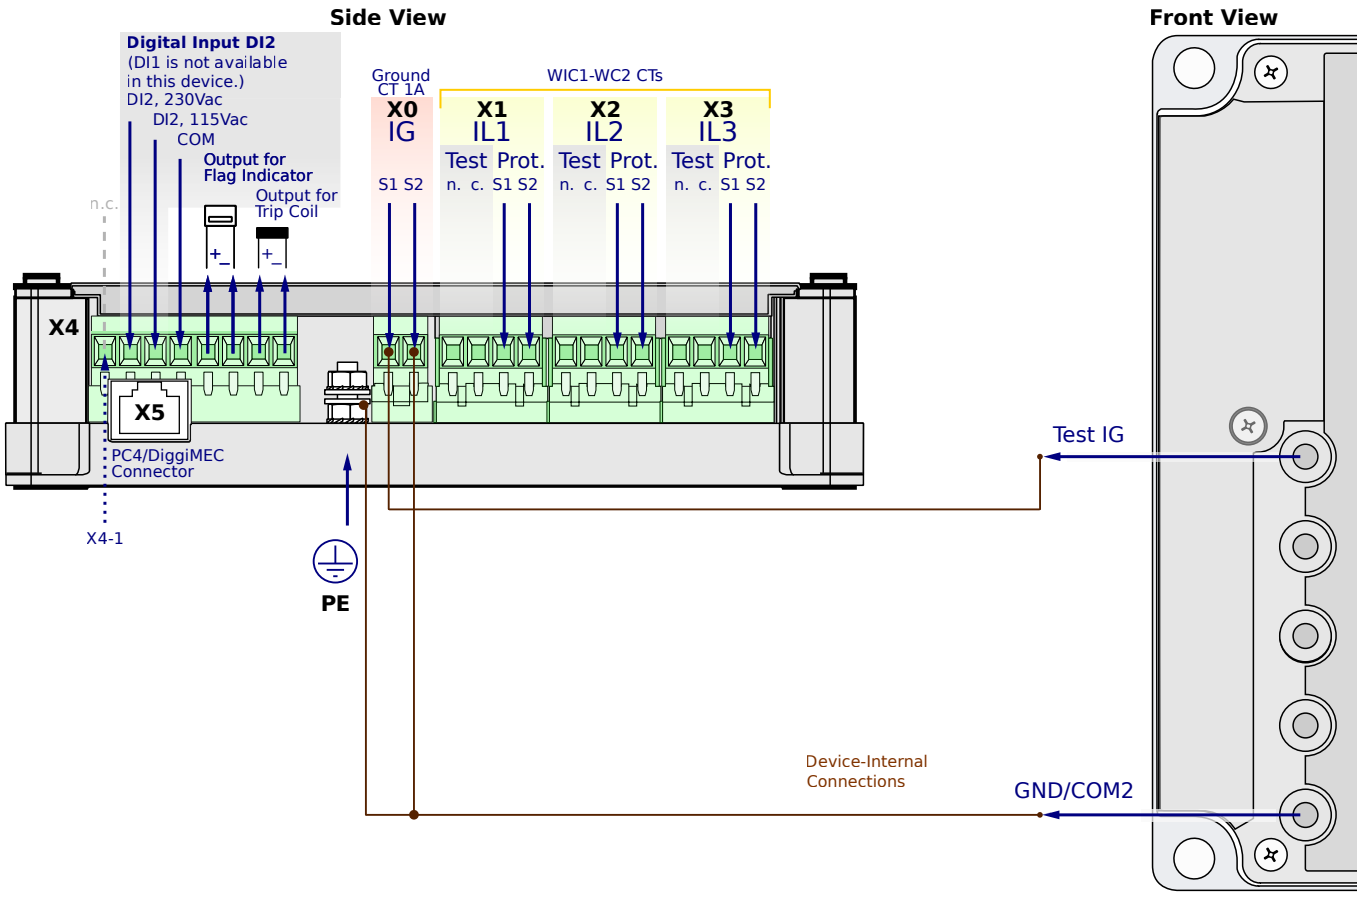


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0AAH

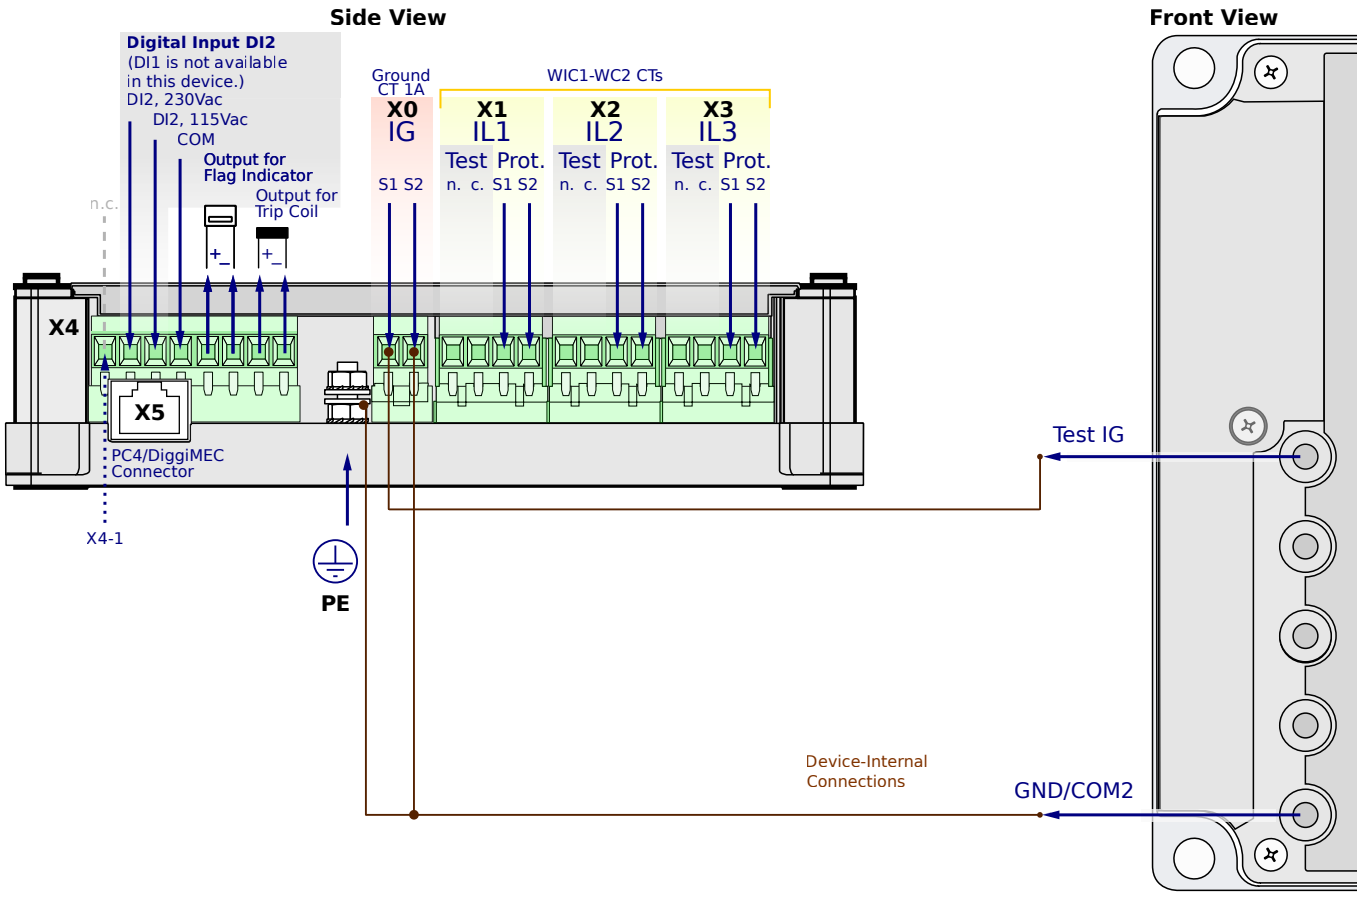


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0PA0

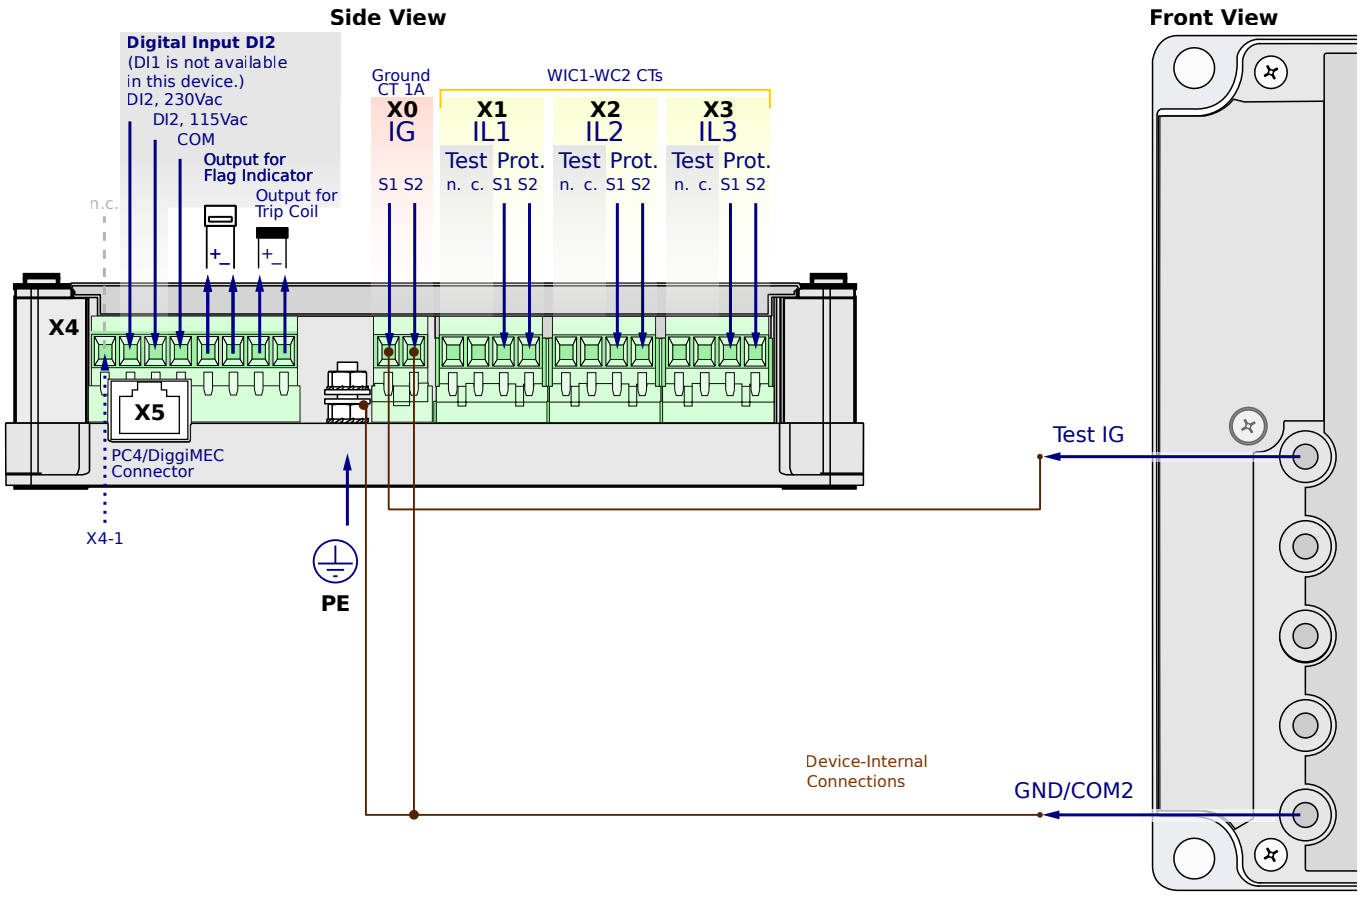


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC0PAH

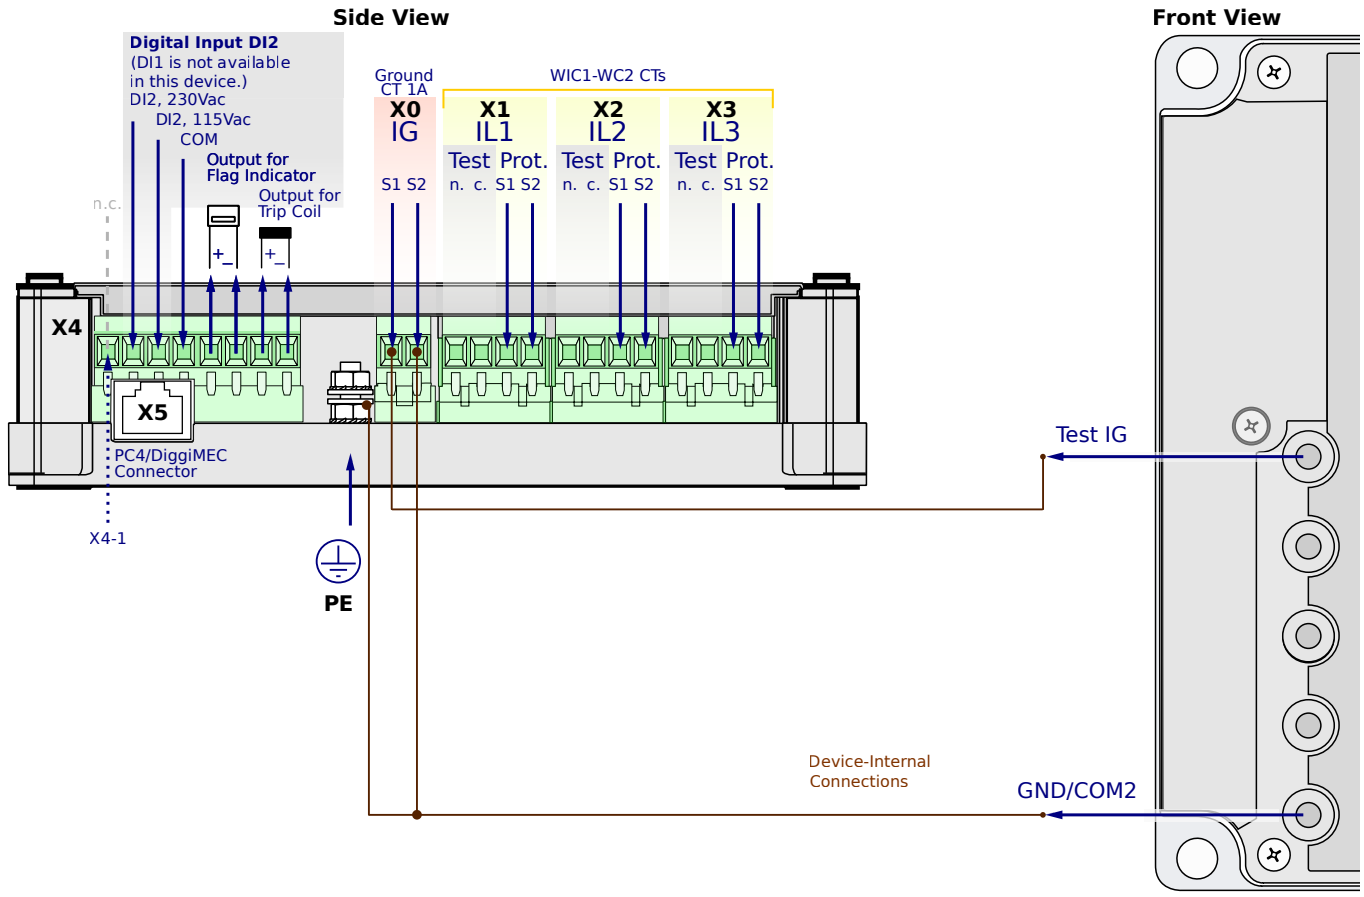


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1SA0

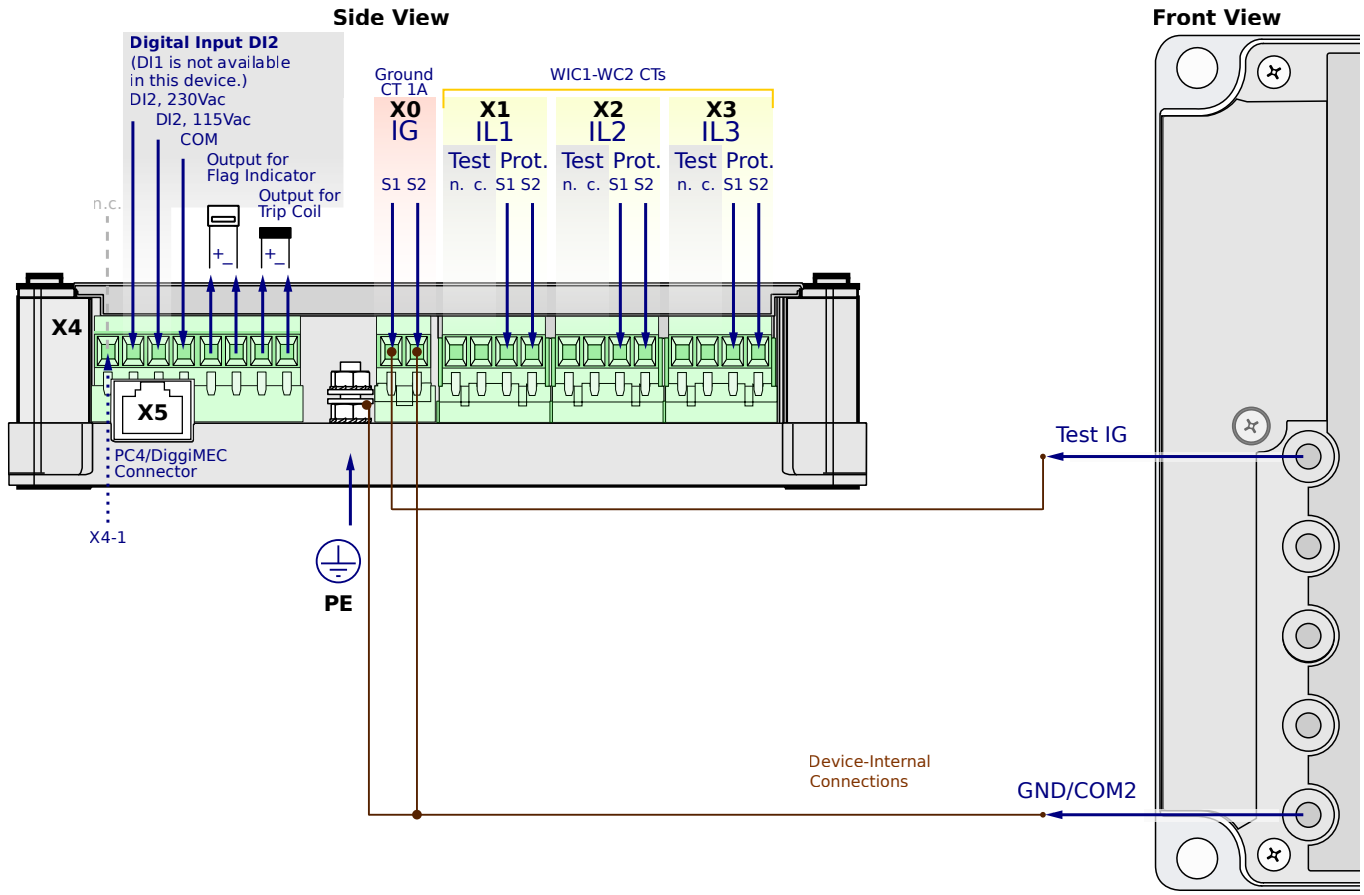


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1SAH

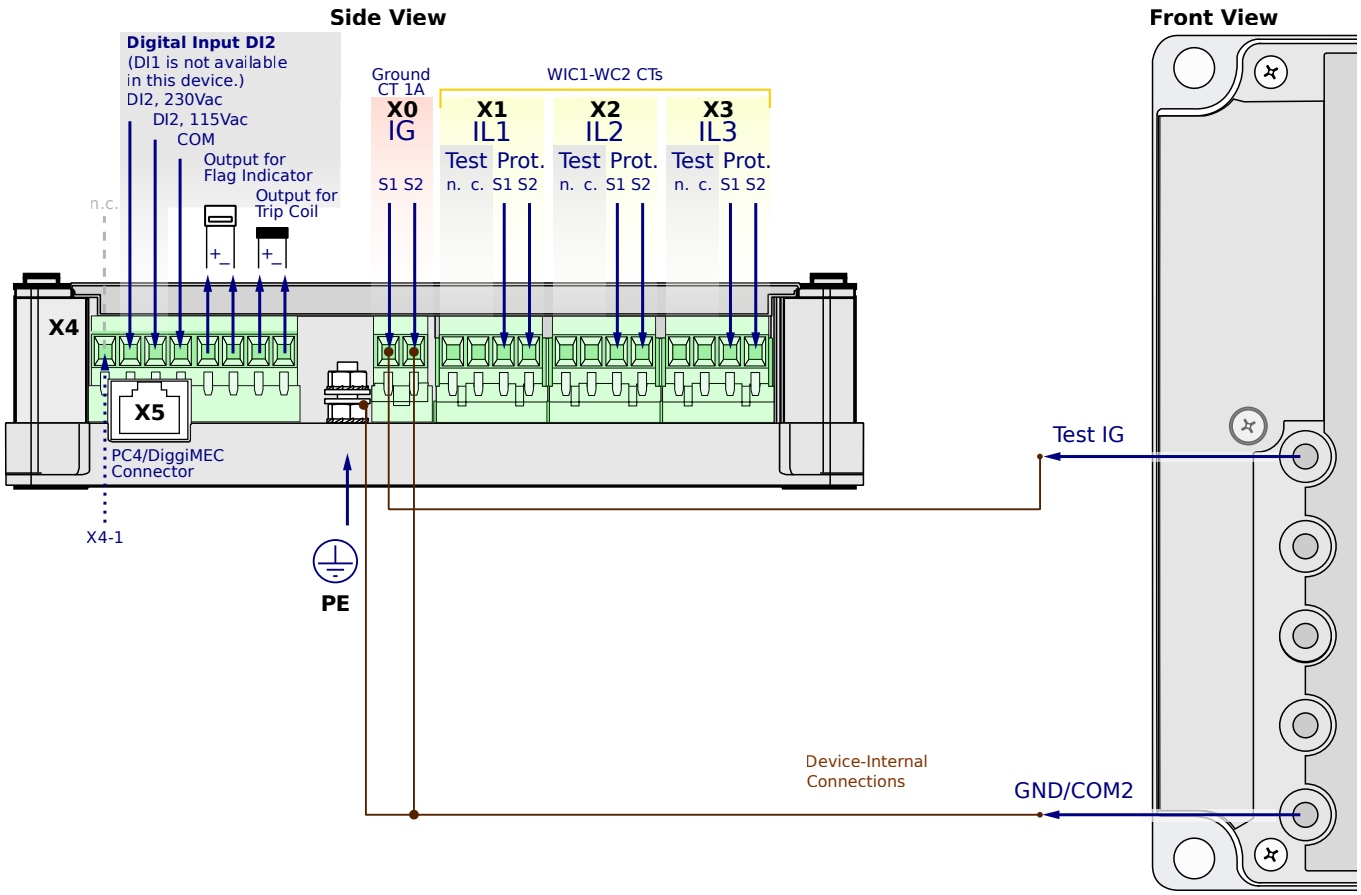


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1AA0

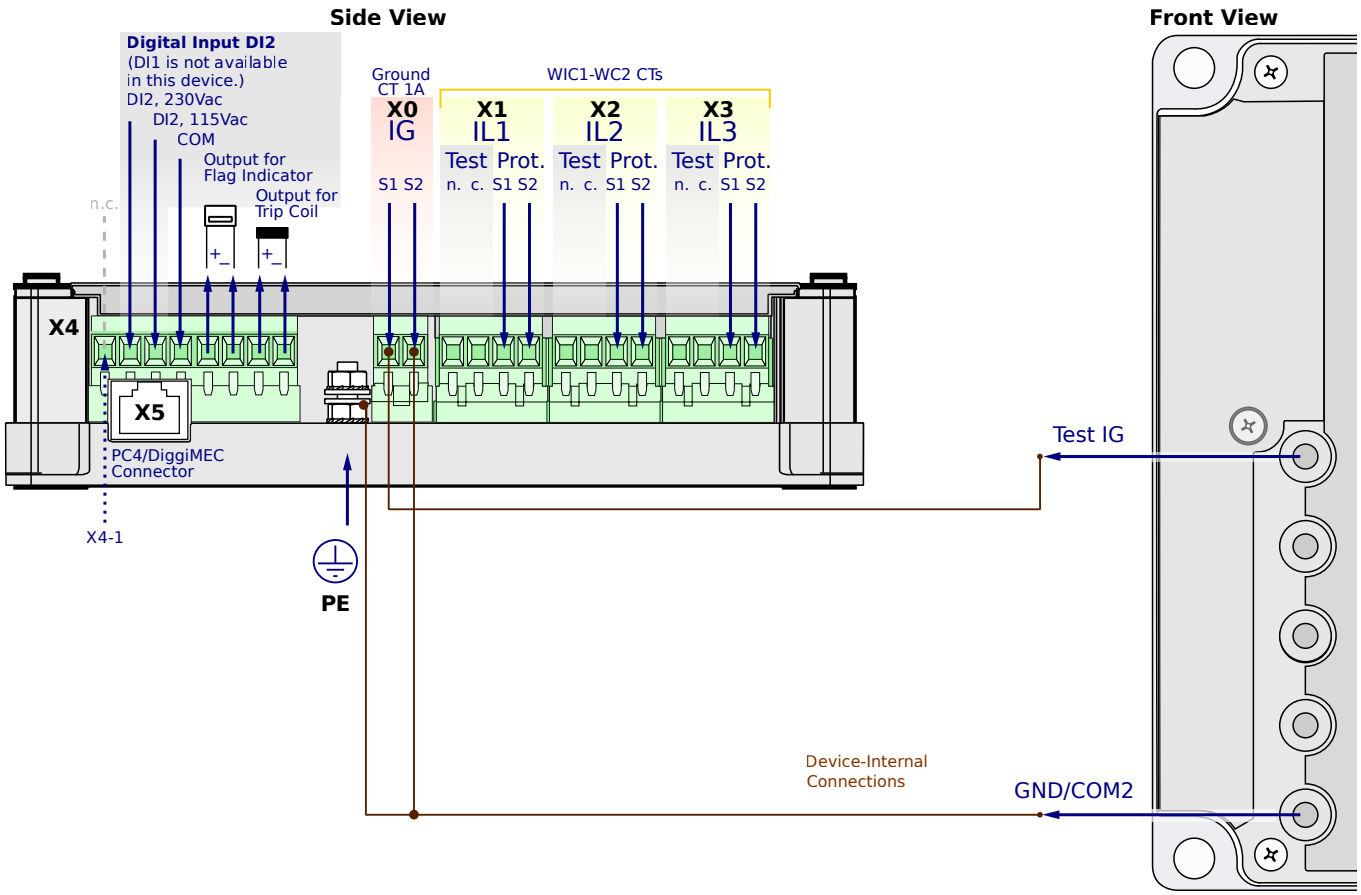


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1AAH

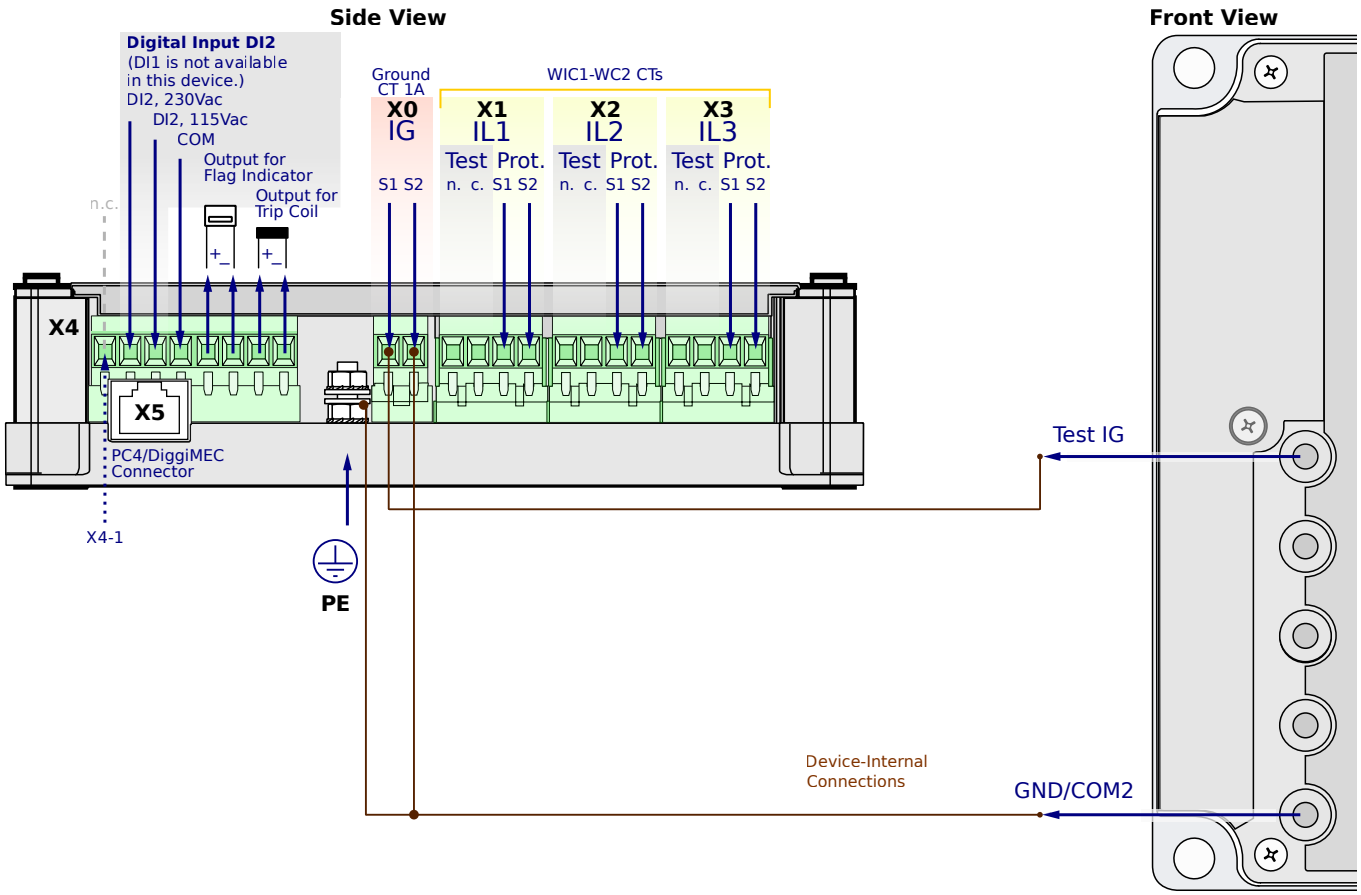


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1PA0

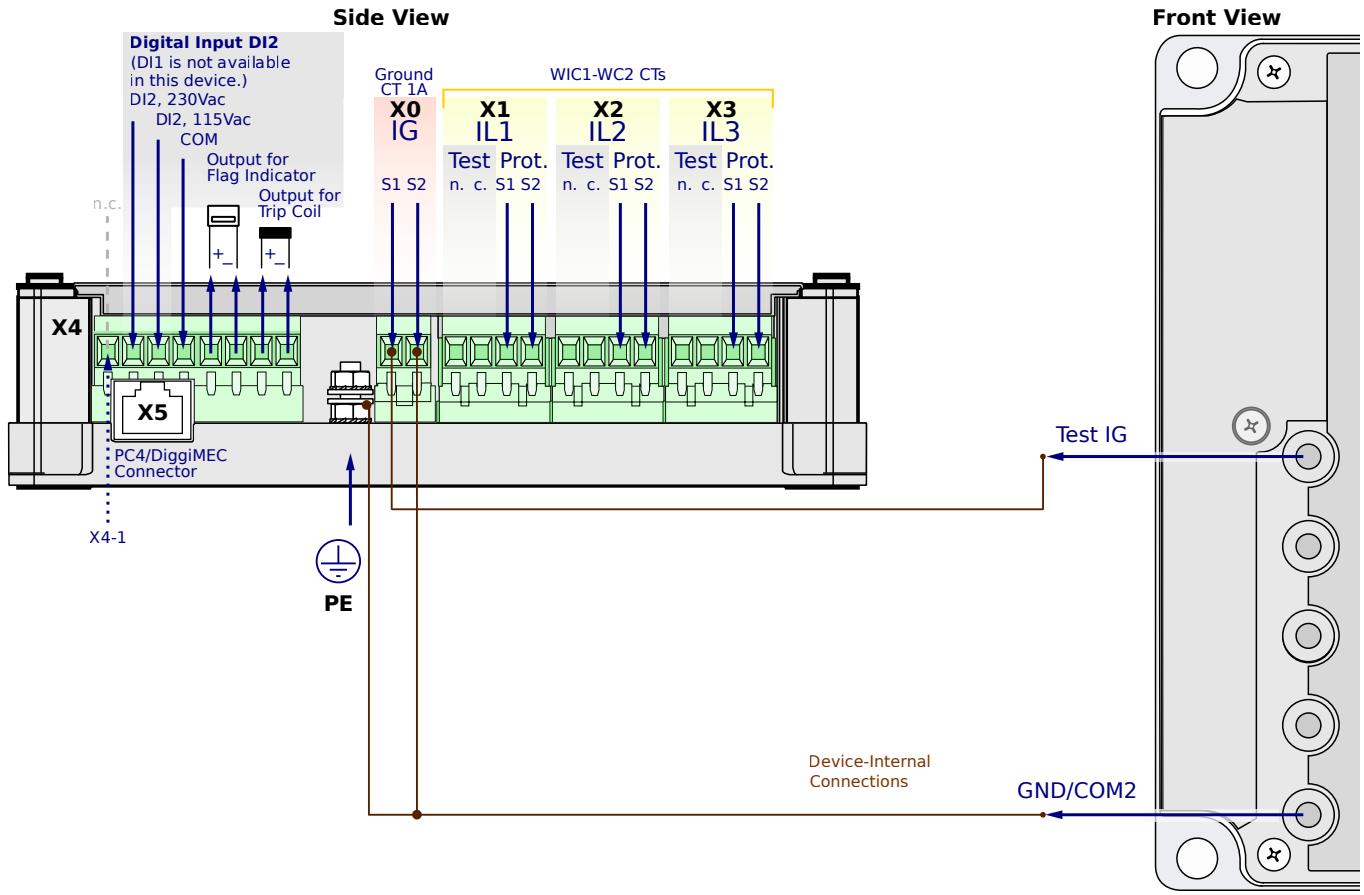


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC1PAH

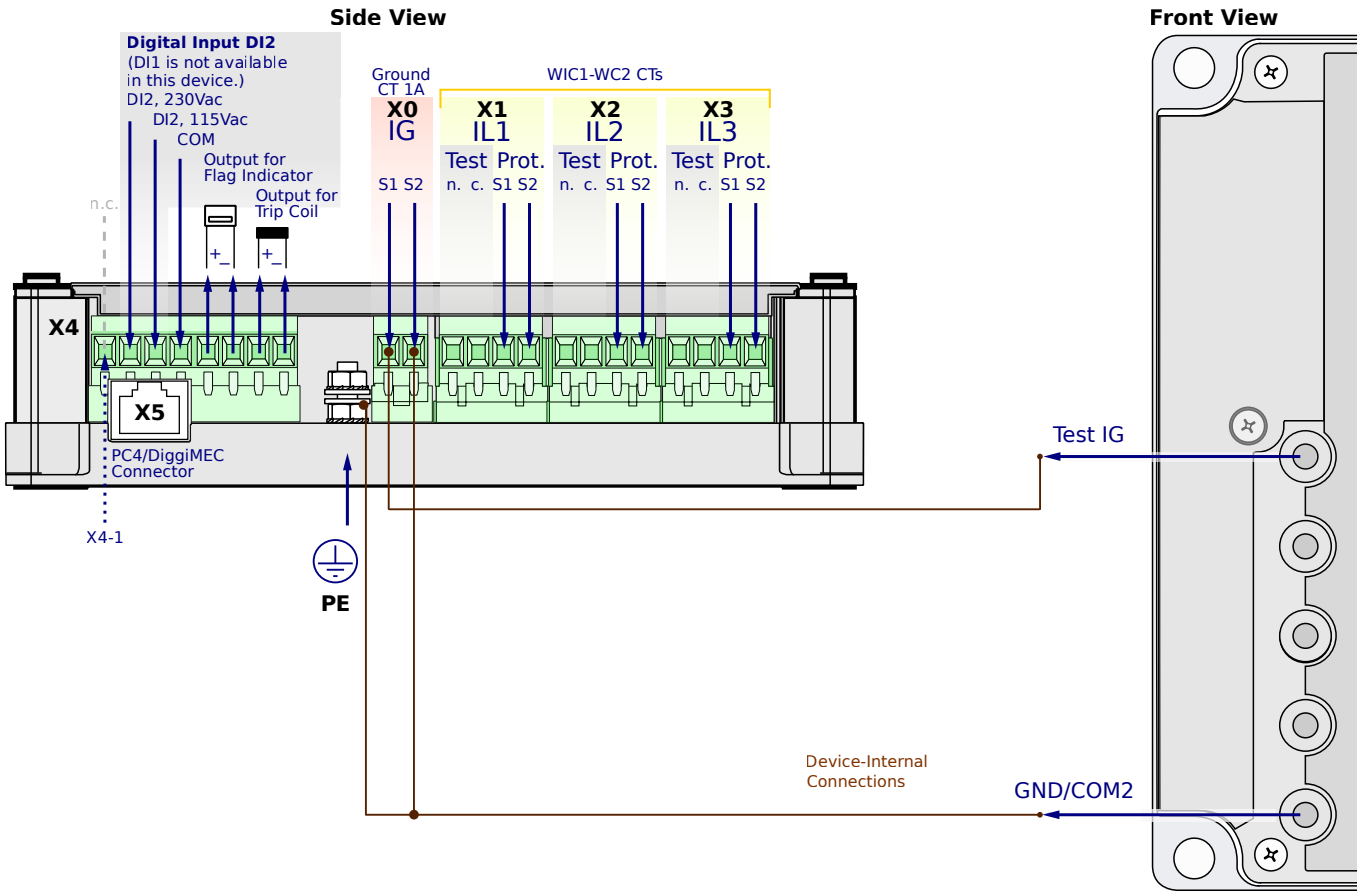


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2SA0

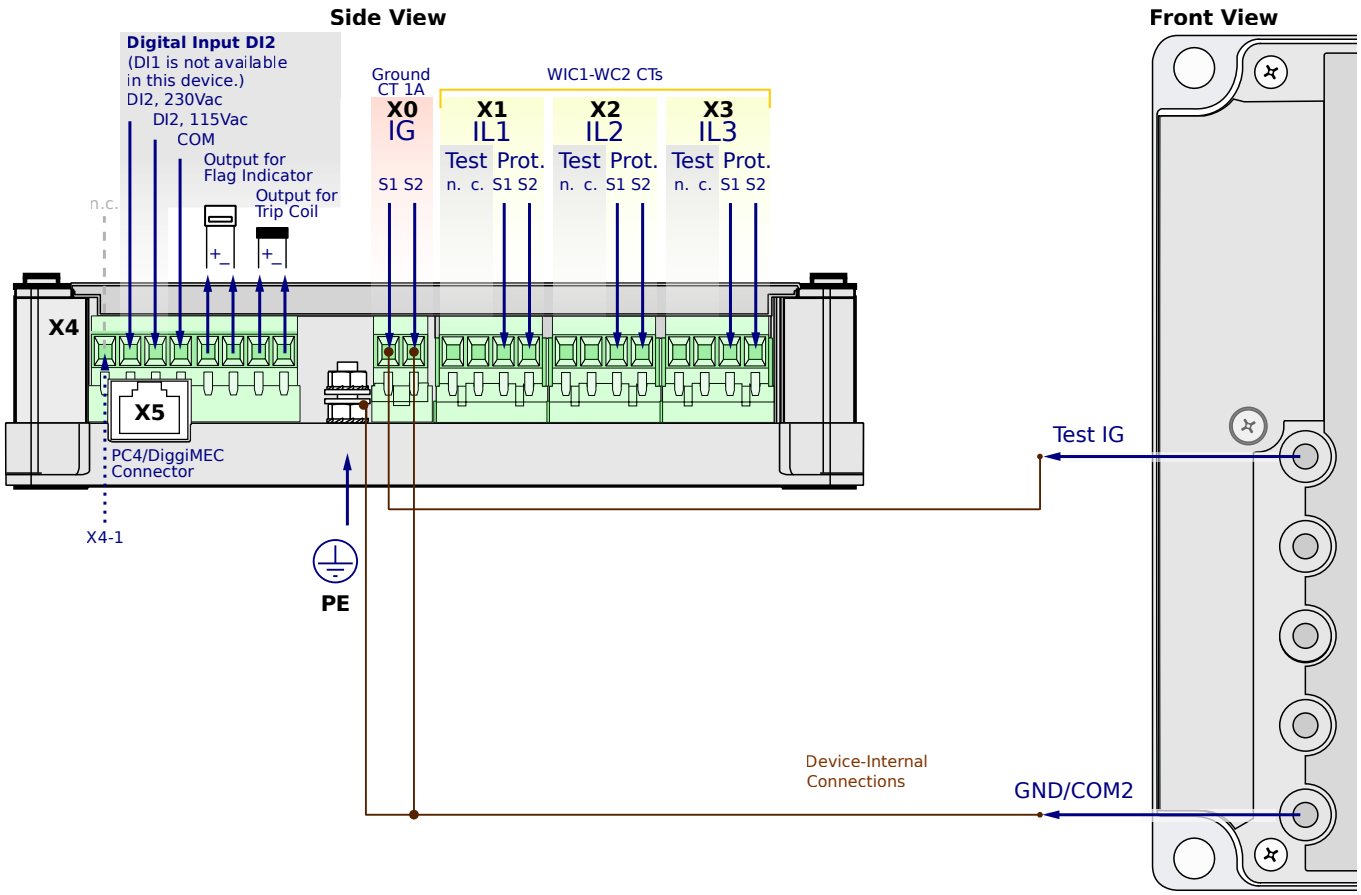


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2SAH

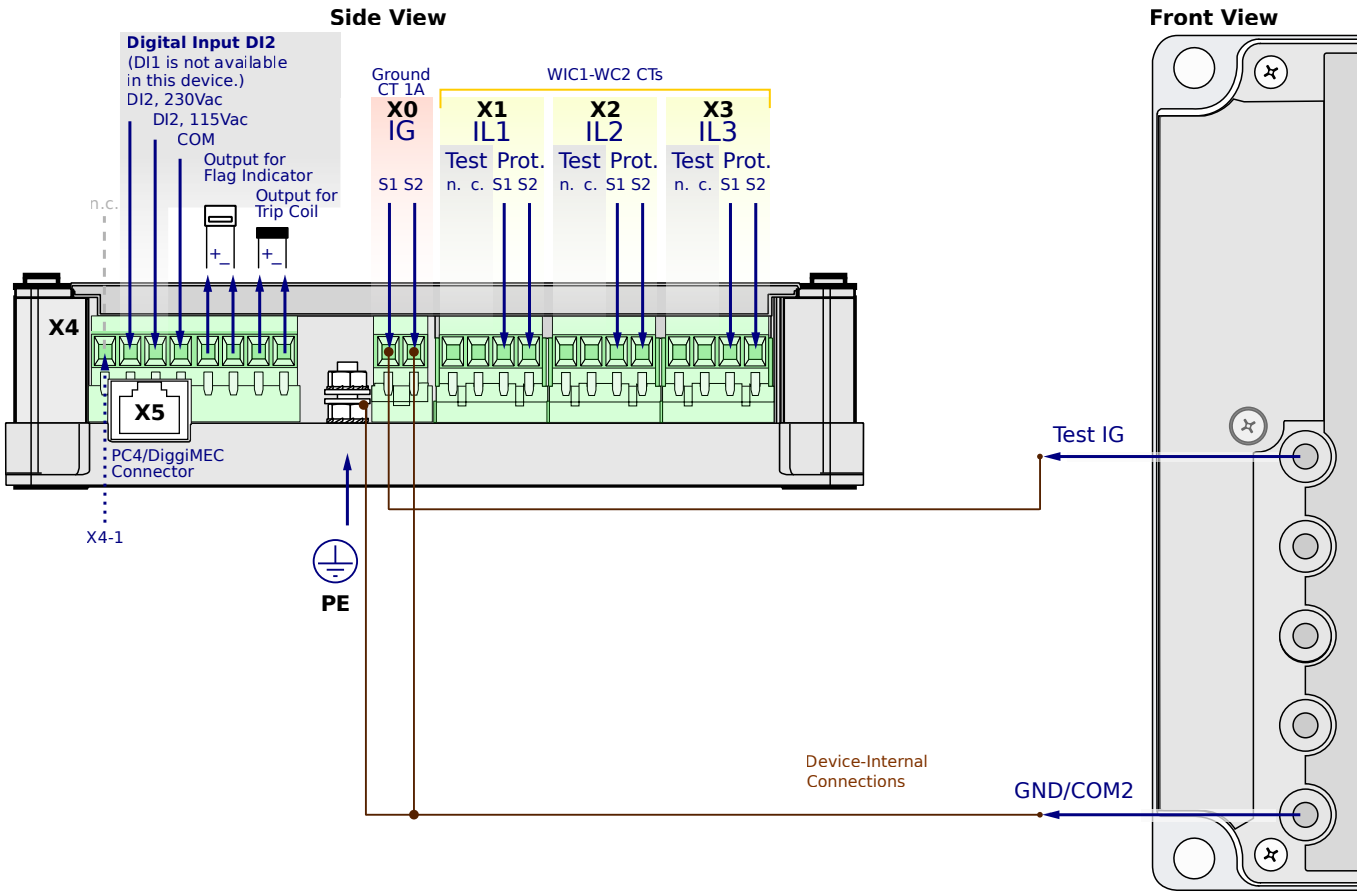


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2AA0

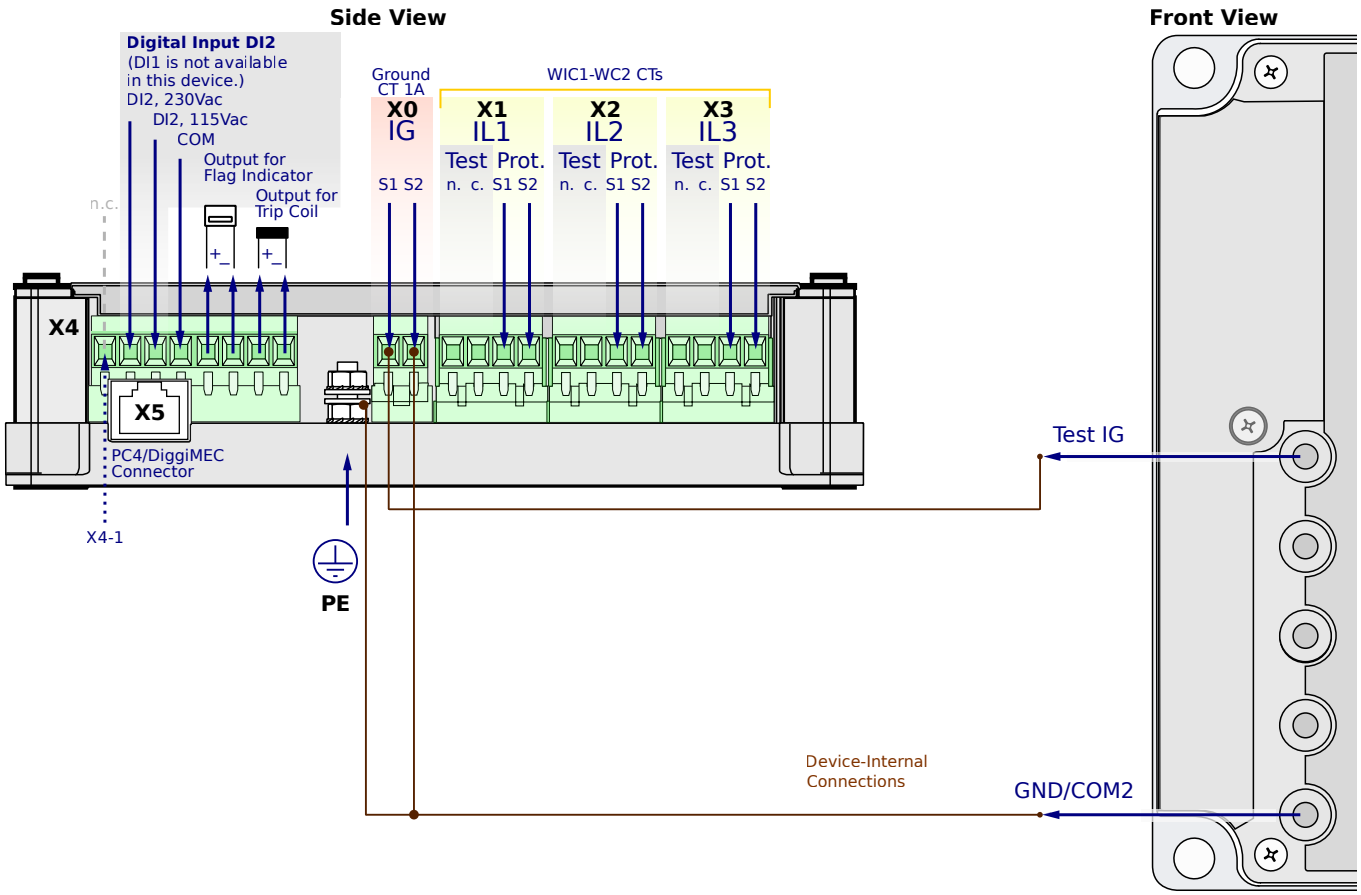


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2AAH

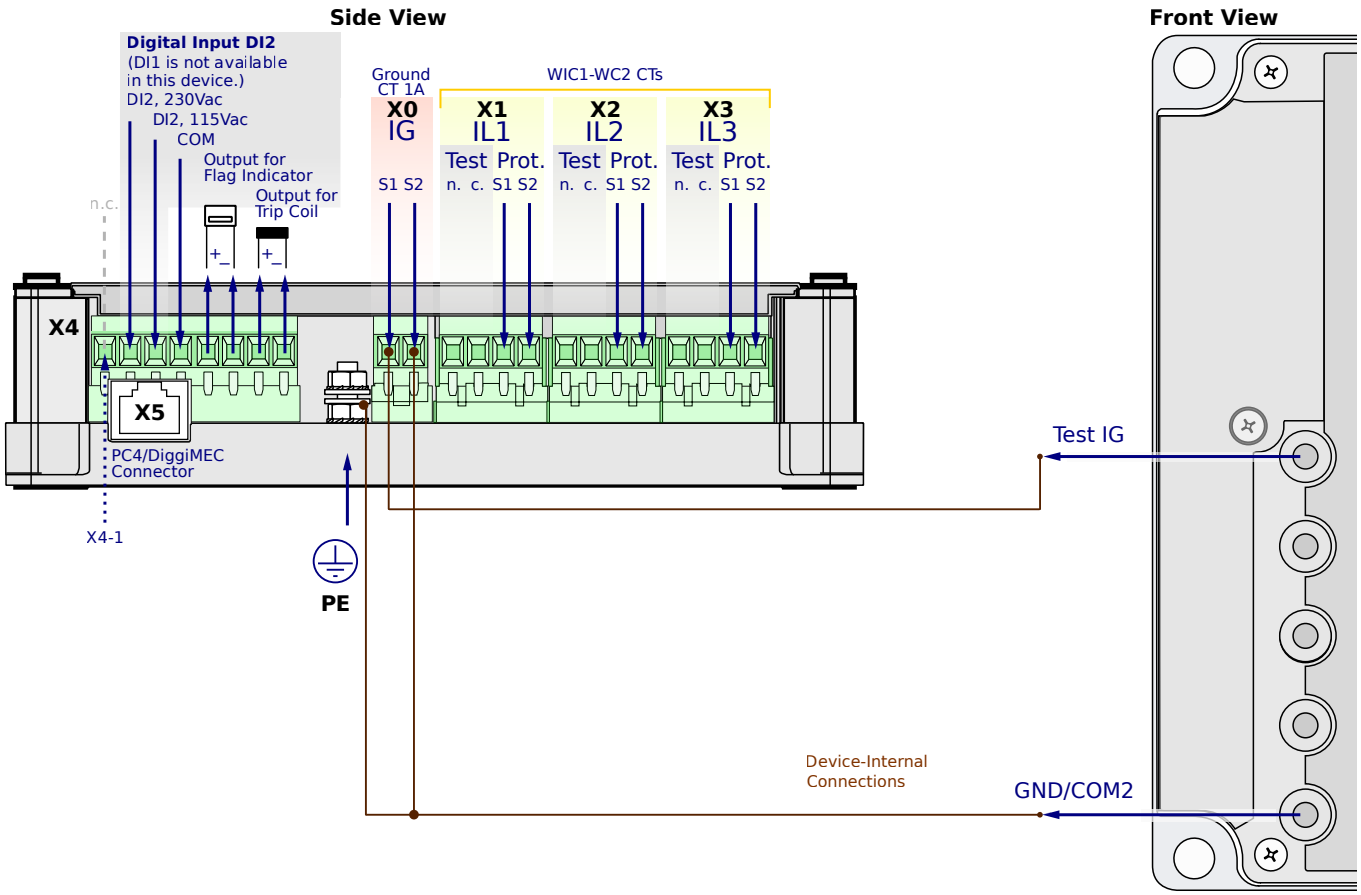


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2PA0

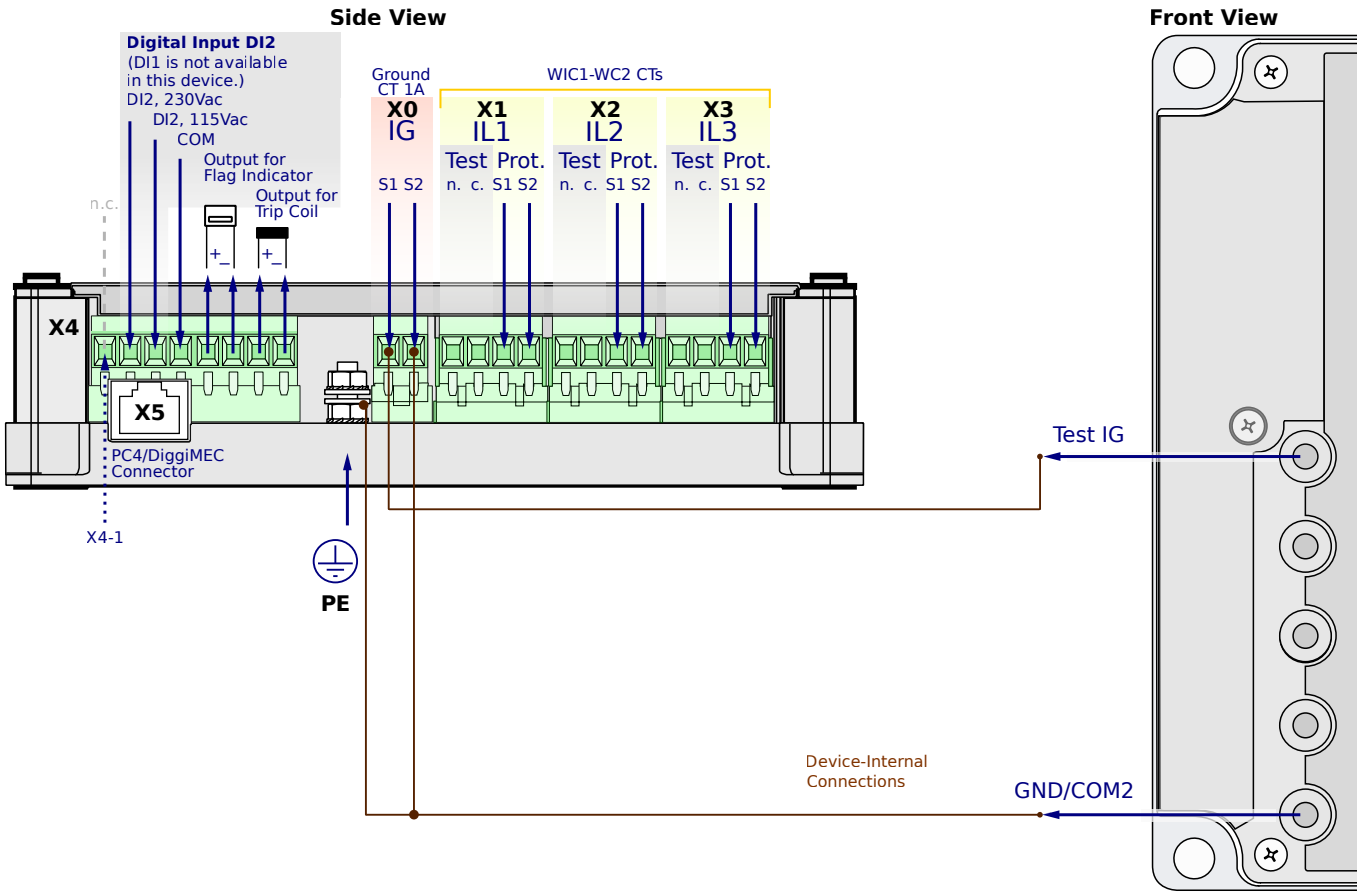


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6NC2PAH

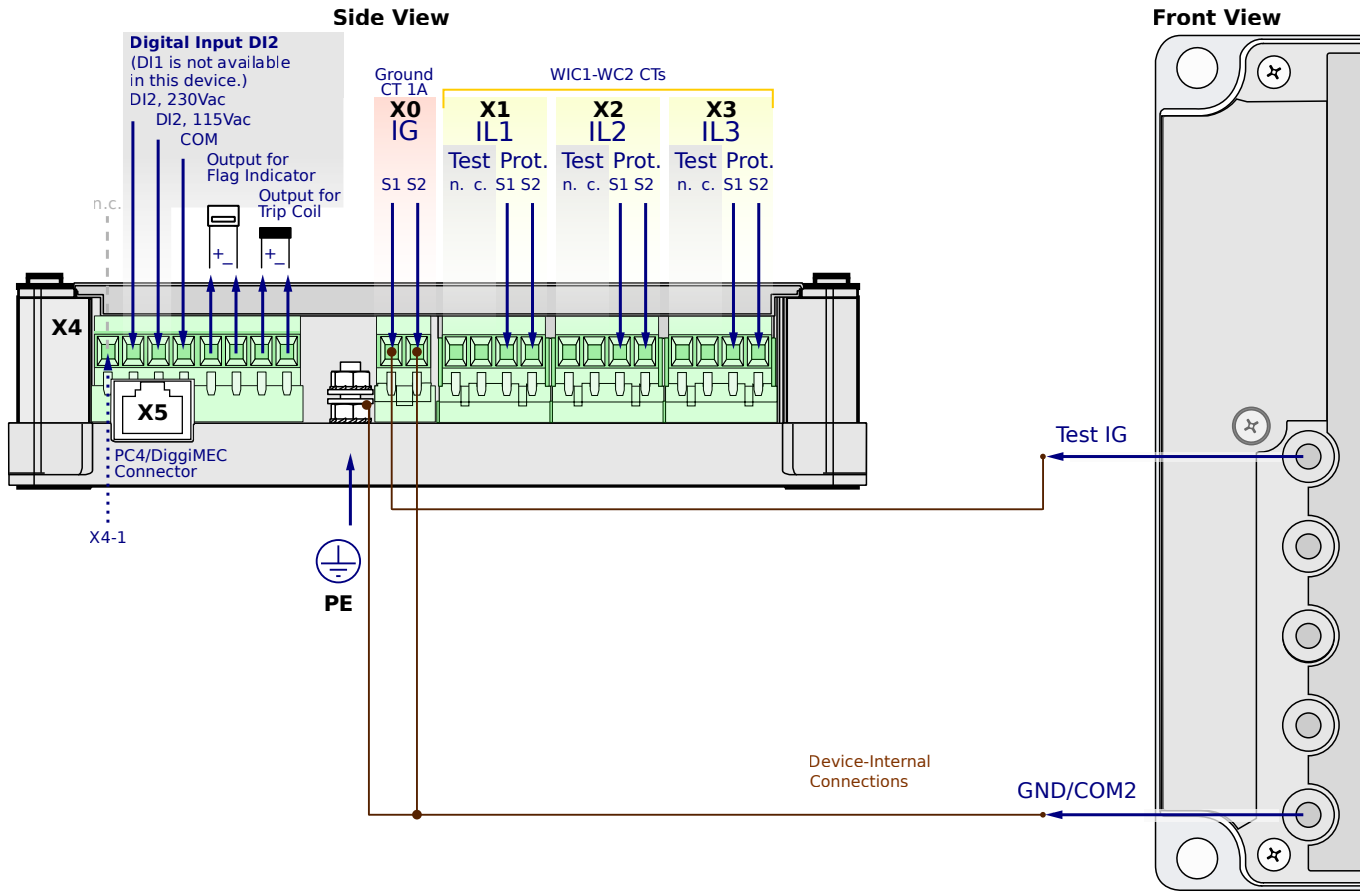


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1SA0

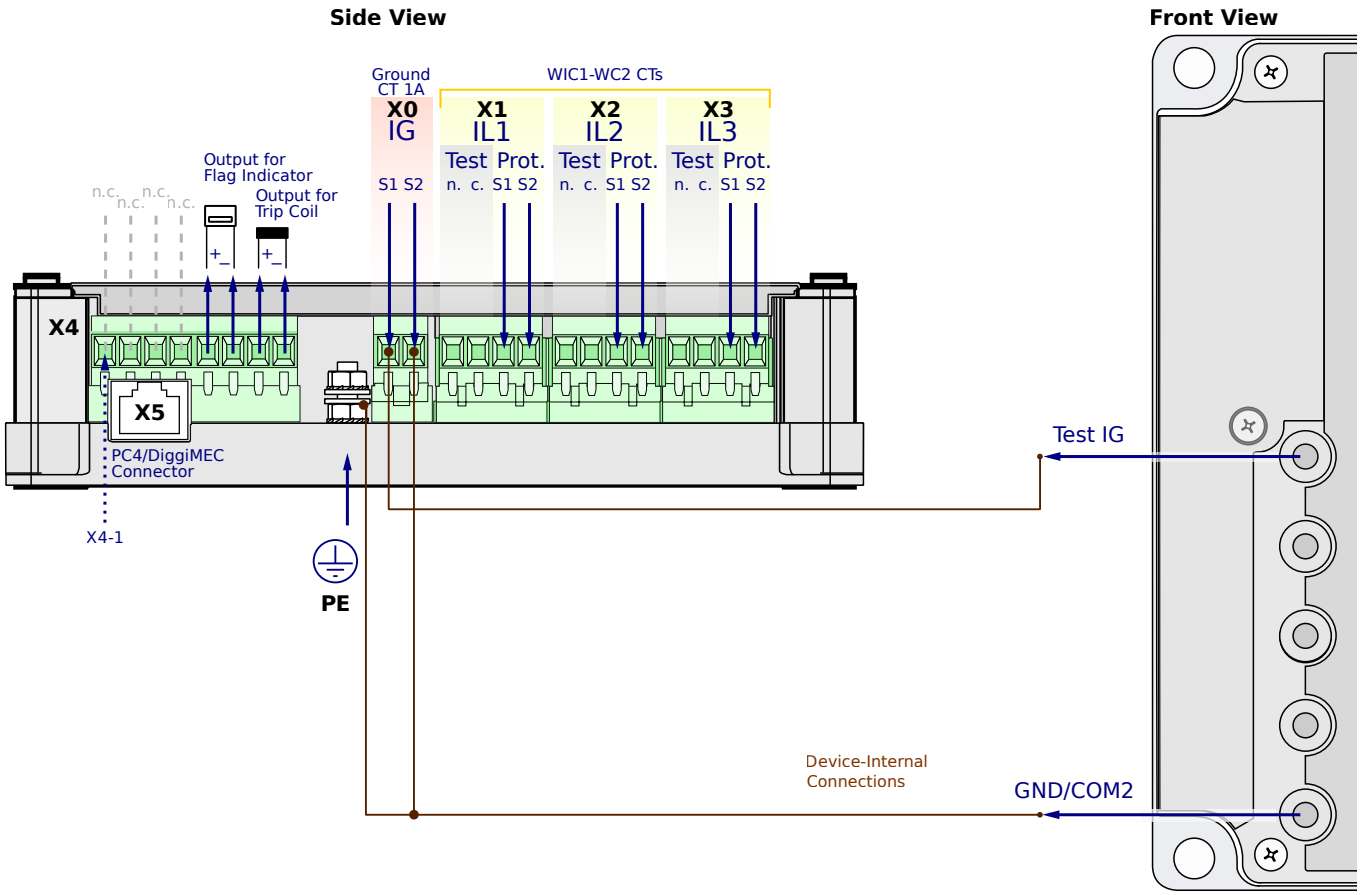


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1SAH

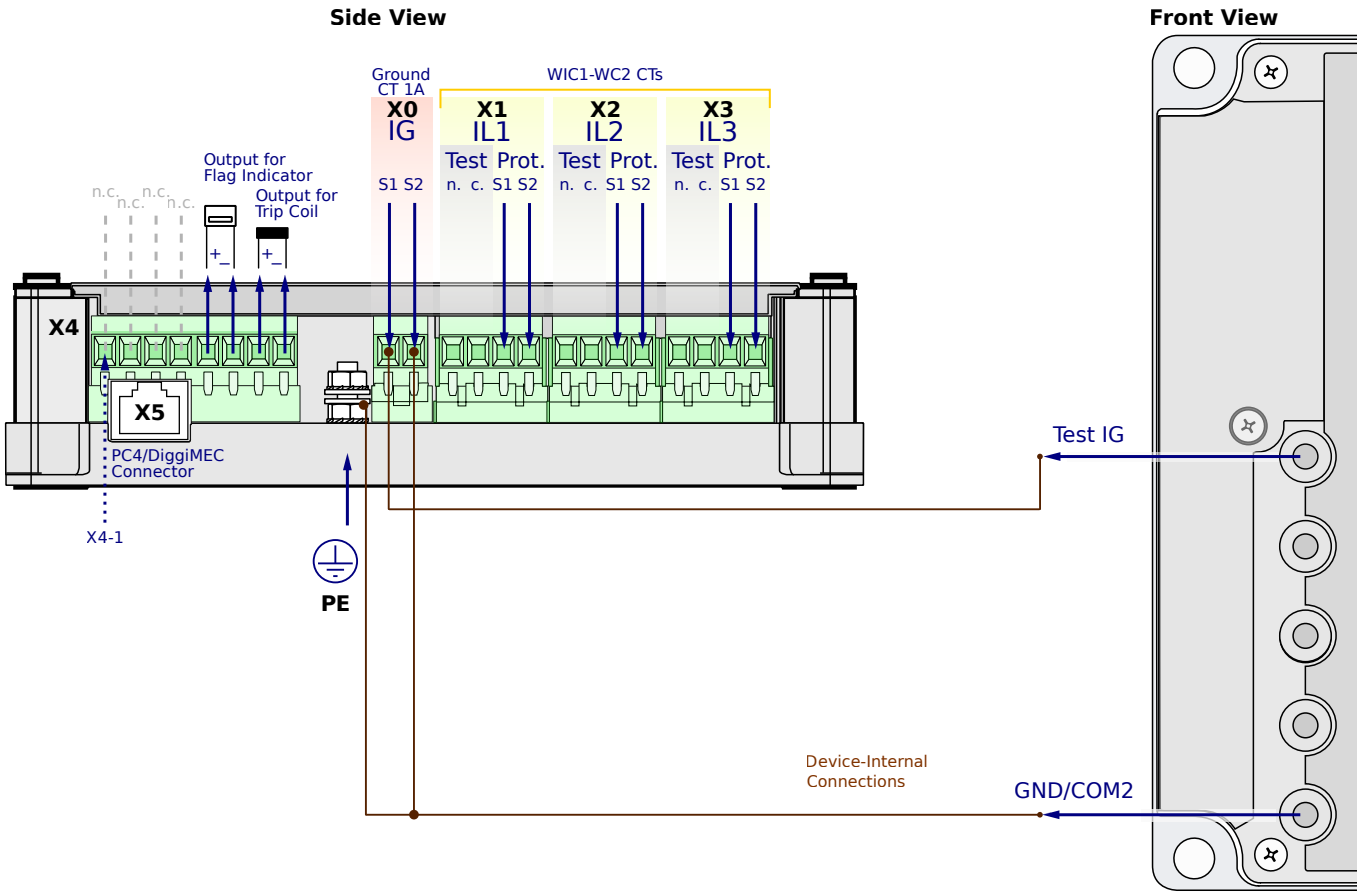


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1AA0

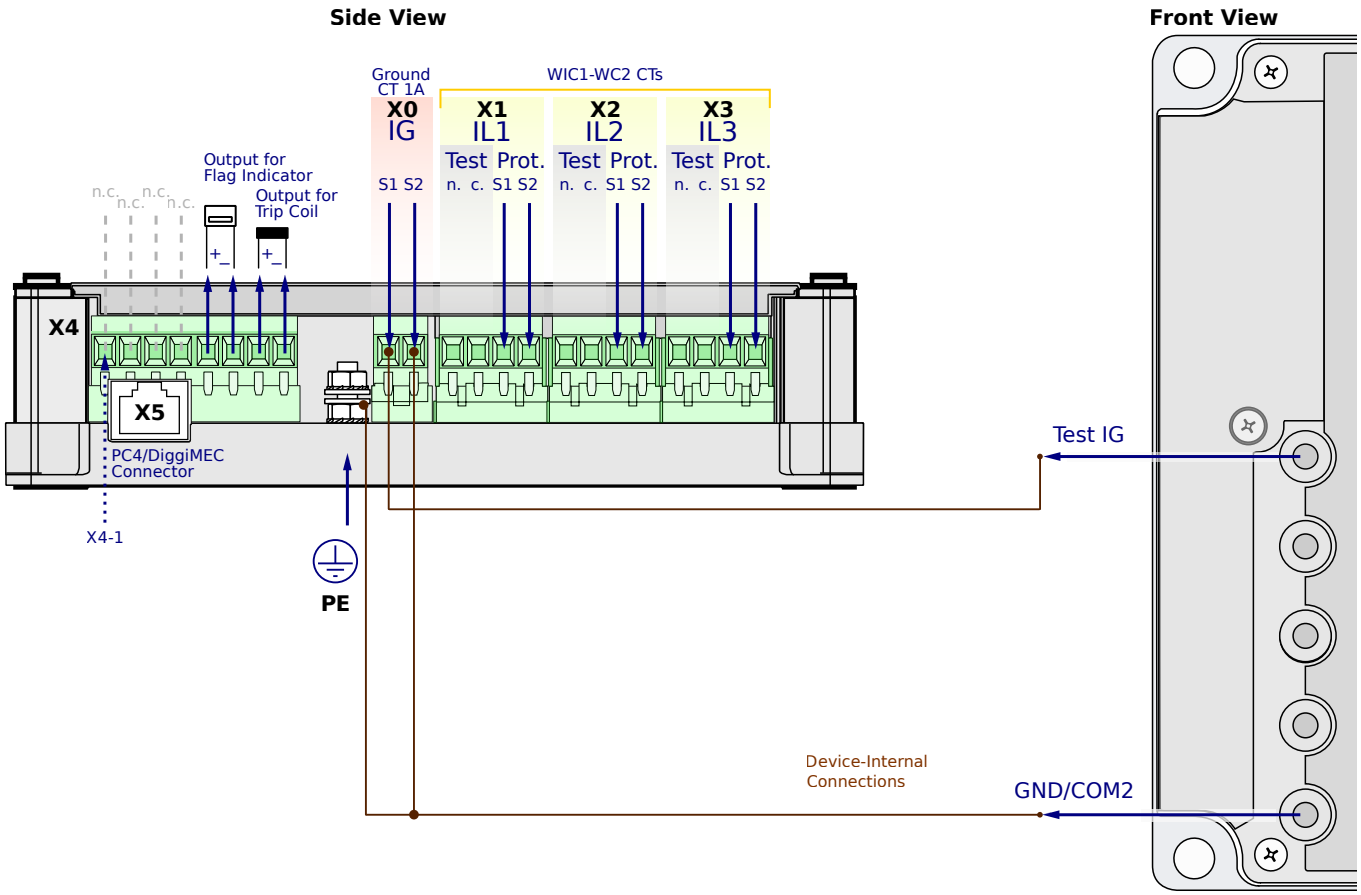


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1AAH

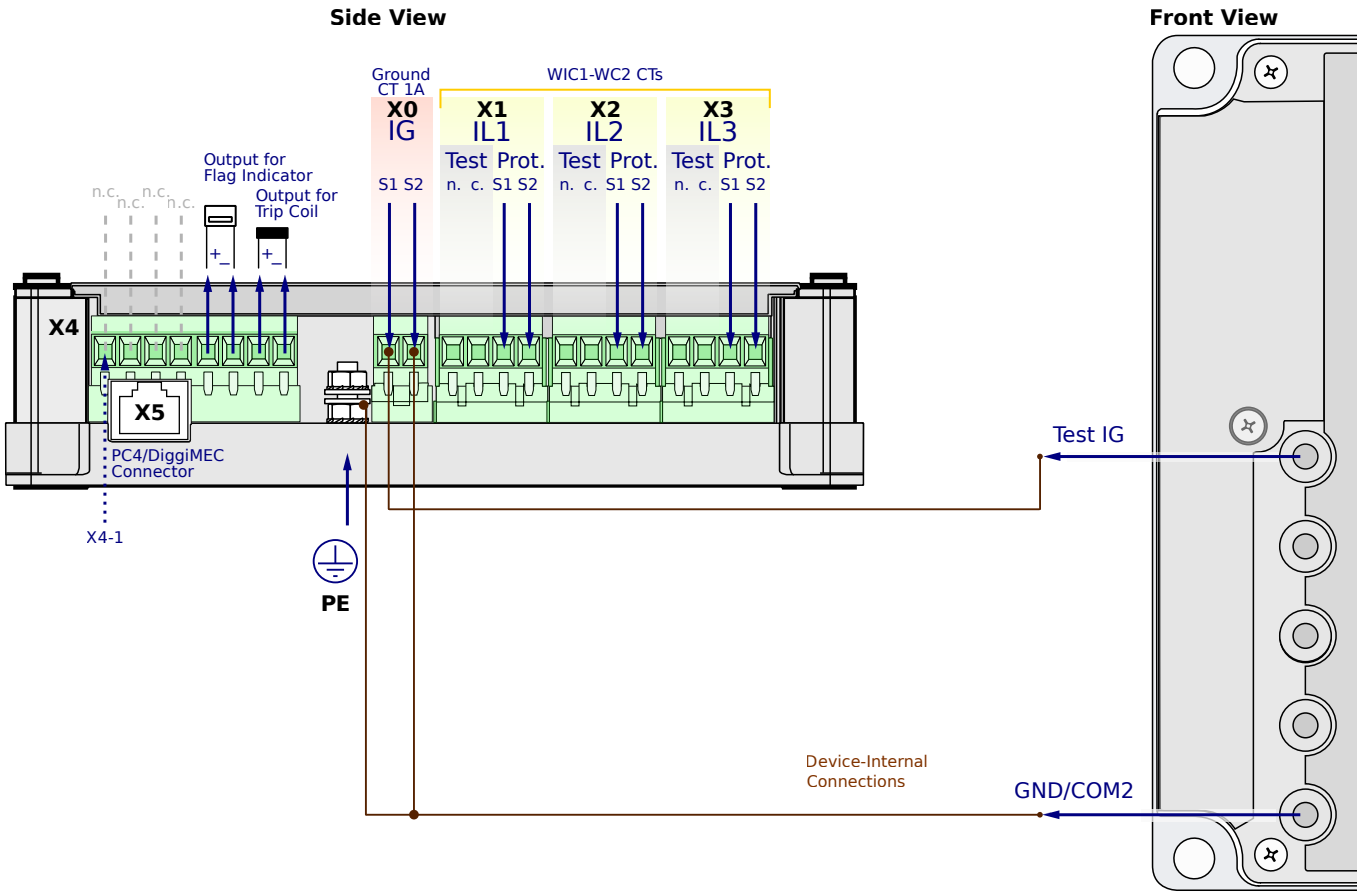


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1PA0

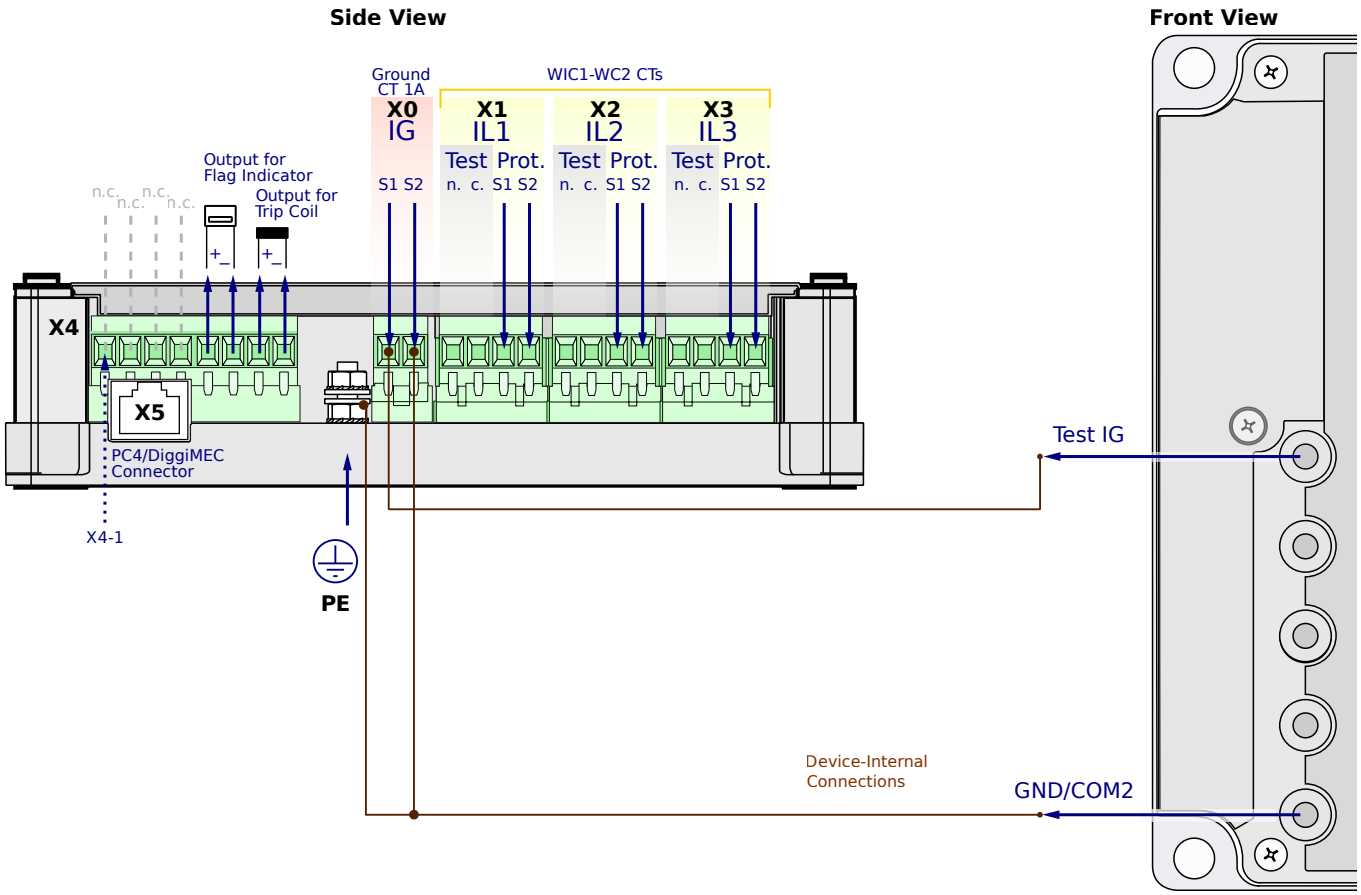


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN1PAH

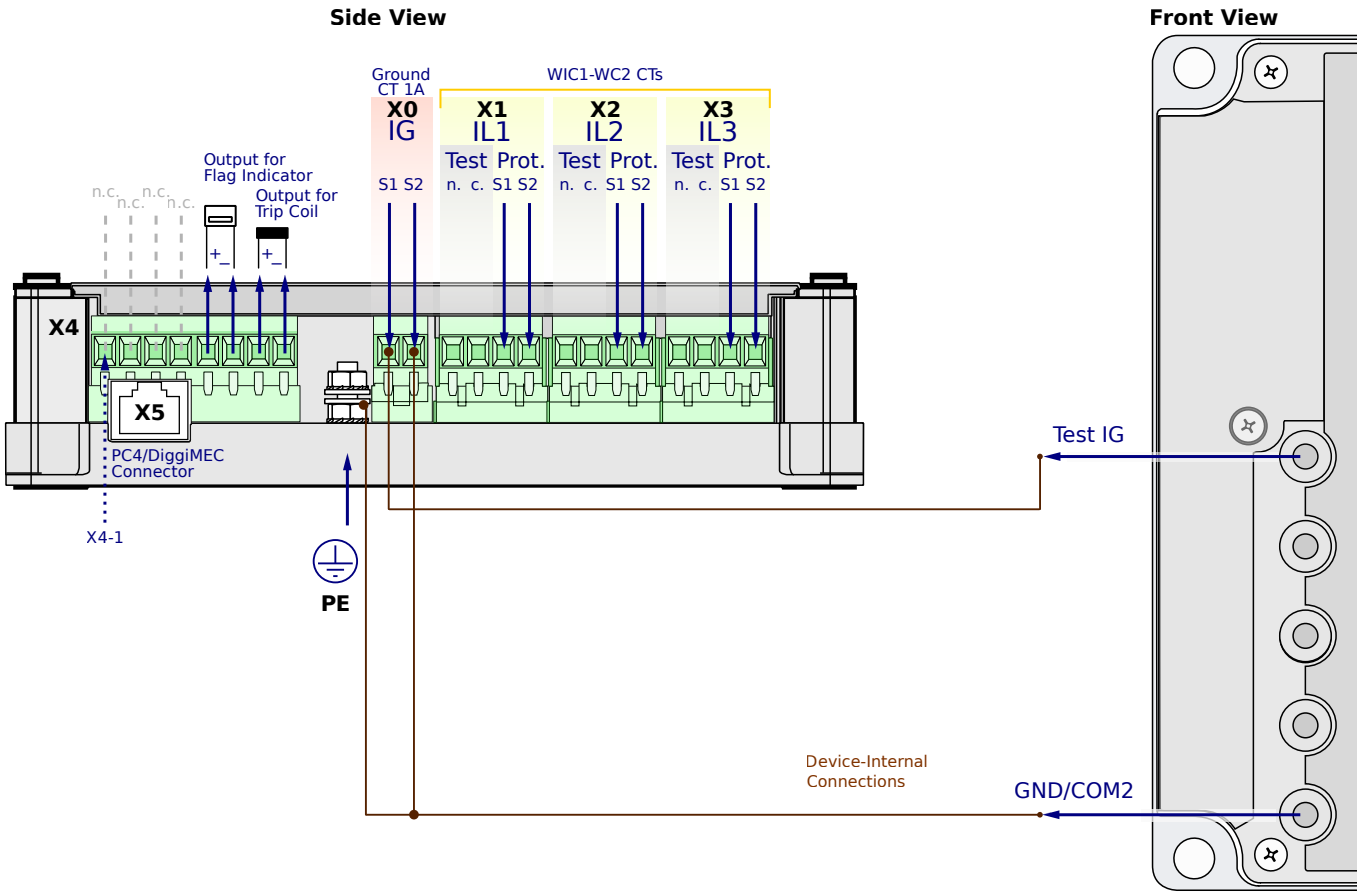


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2SA0

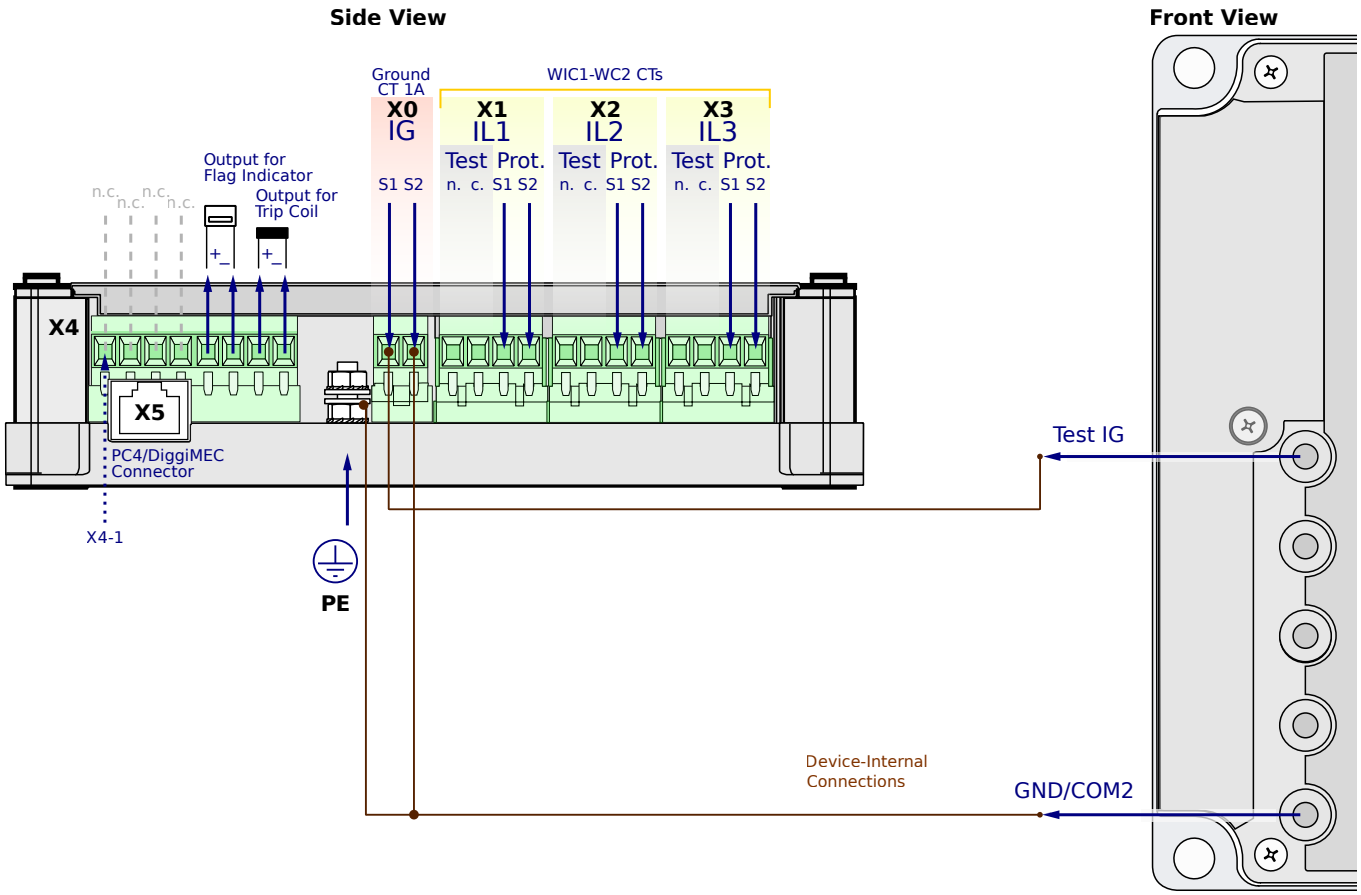


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2SAH

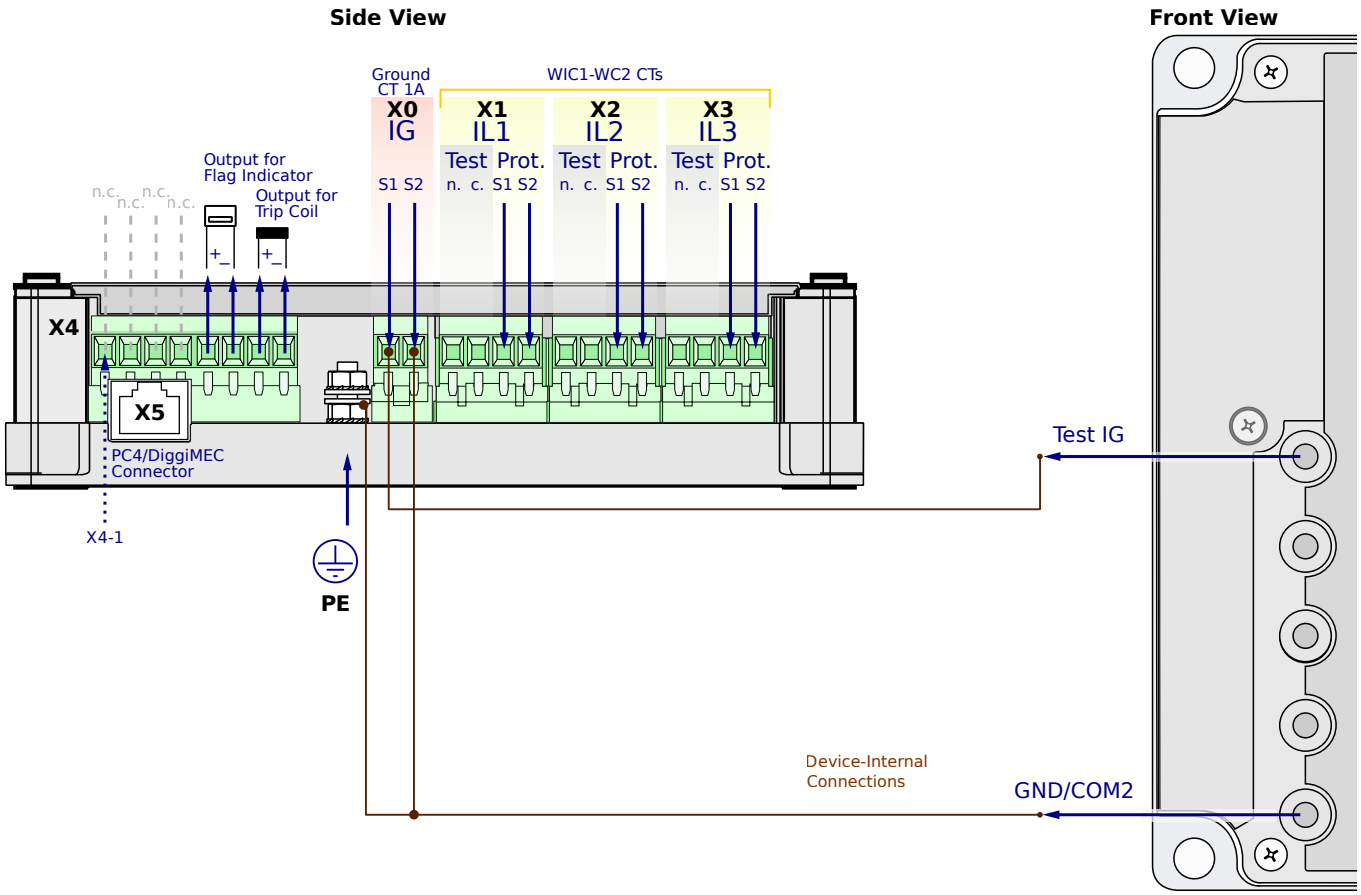


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2AA0

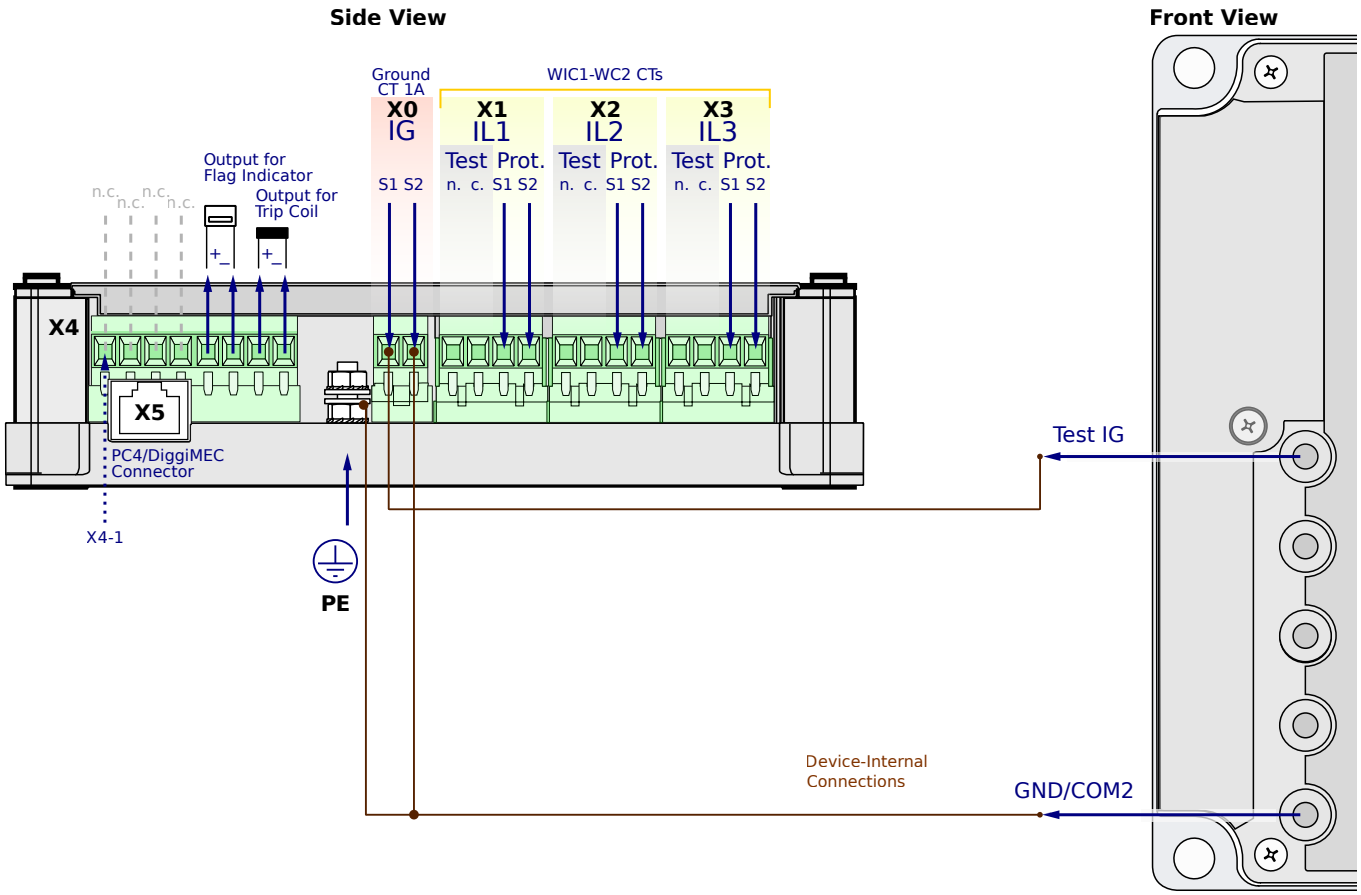


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2AAH

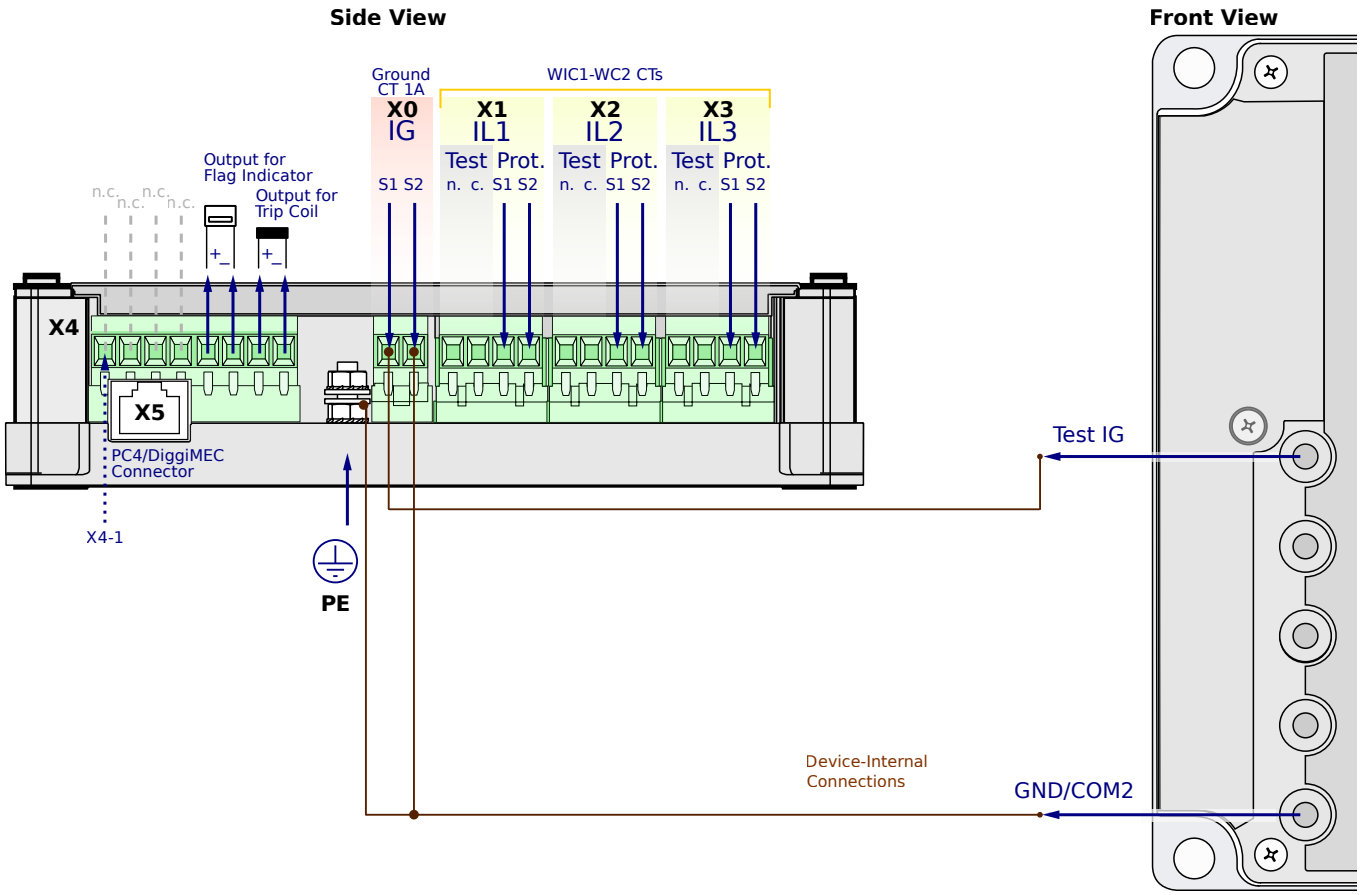


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2PA0

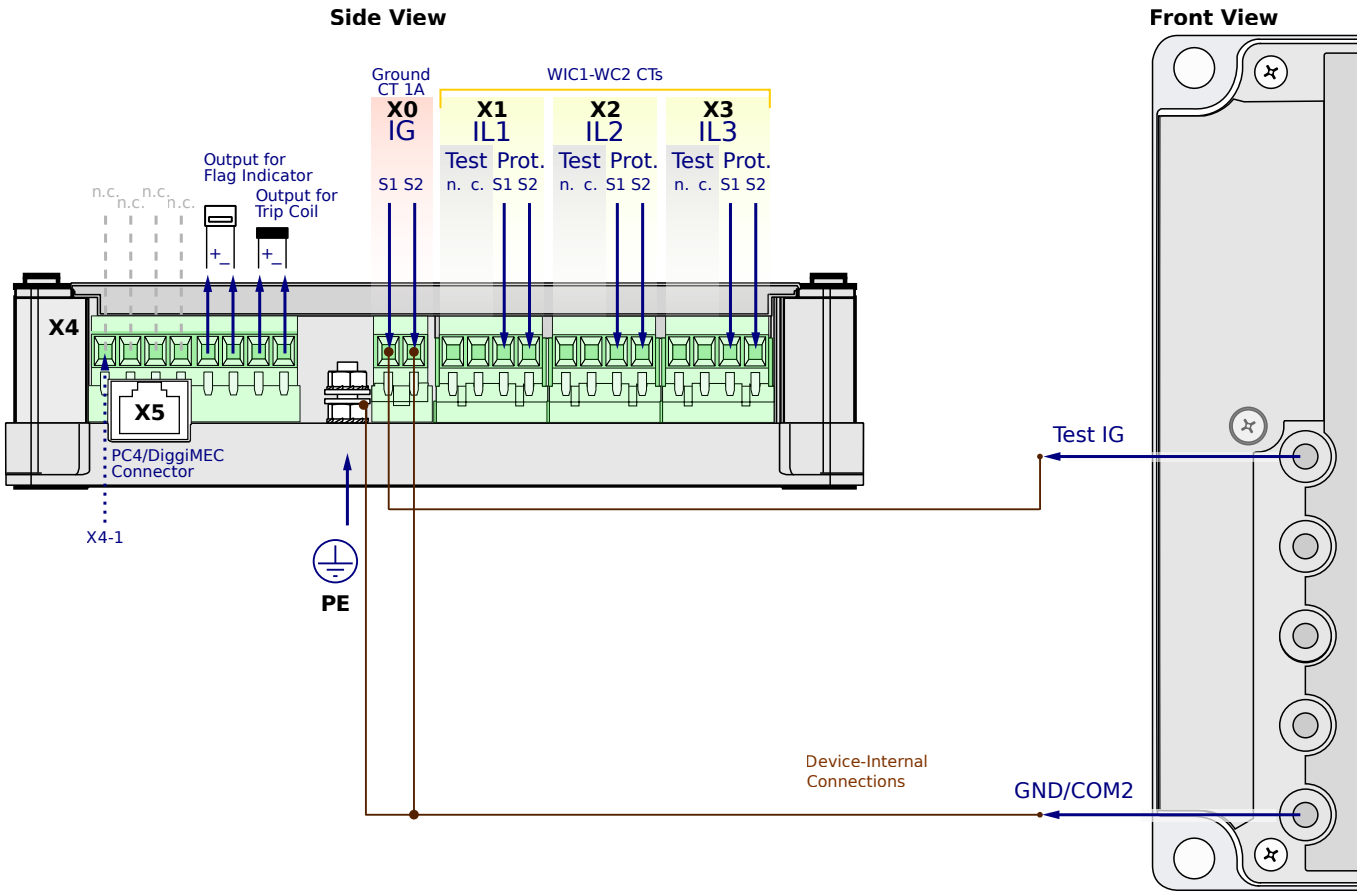


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FN2PAH

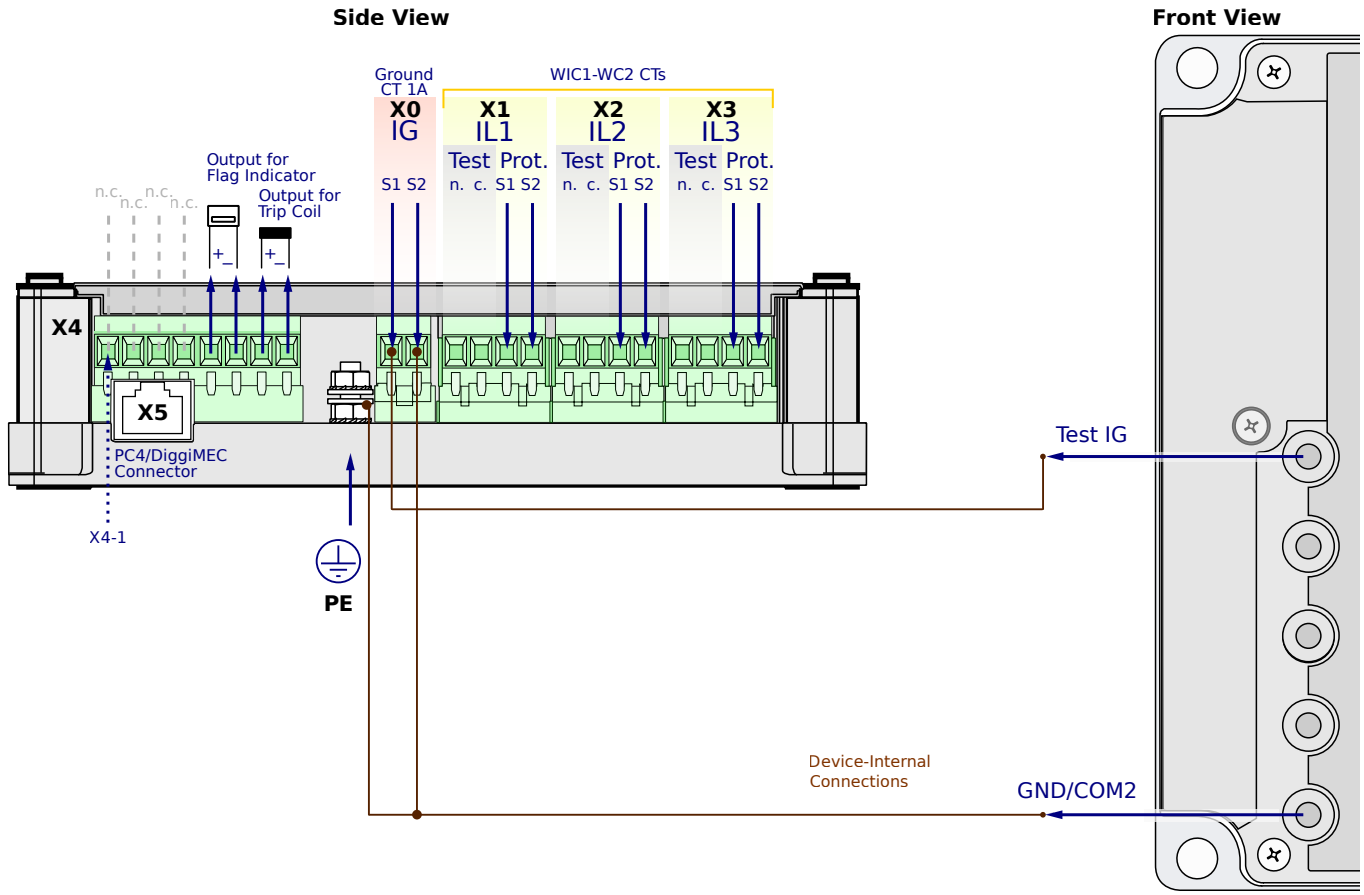


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1SA0

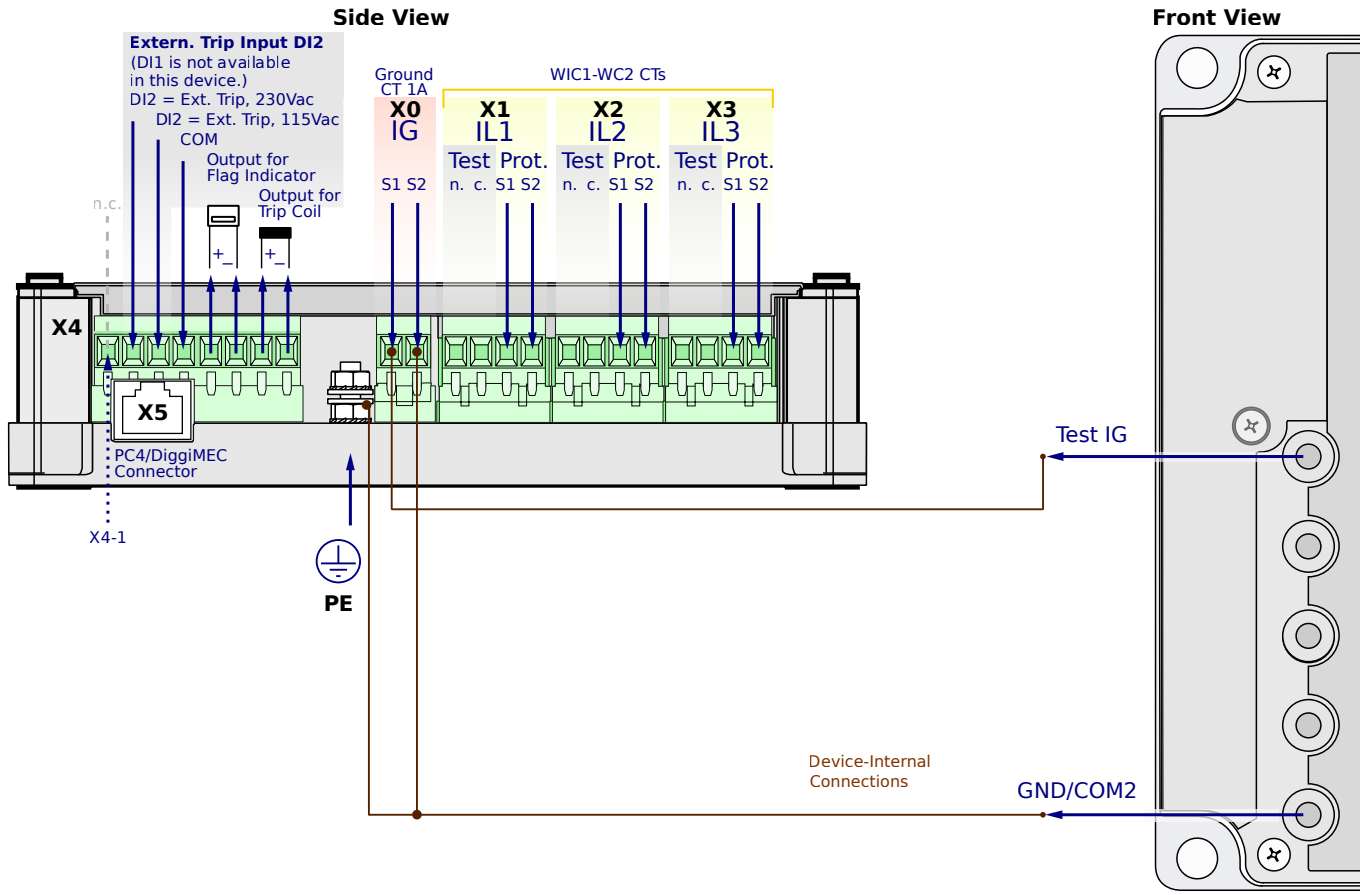


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1SAH

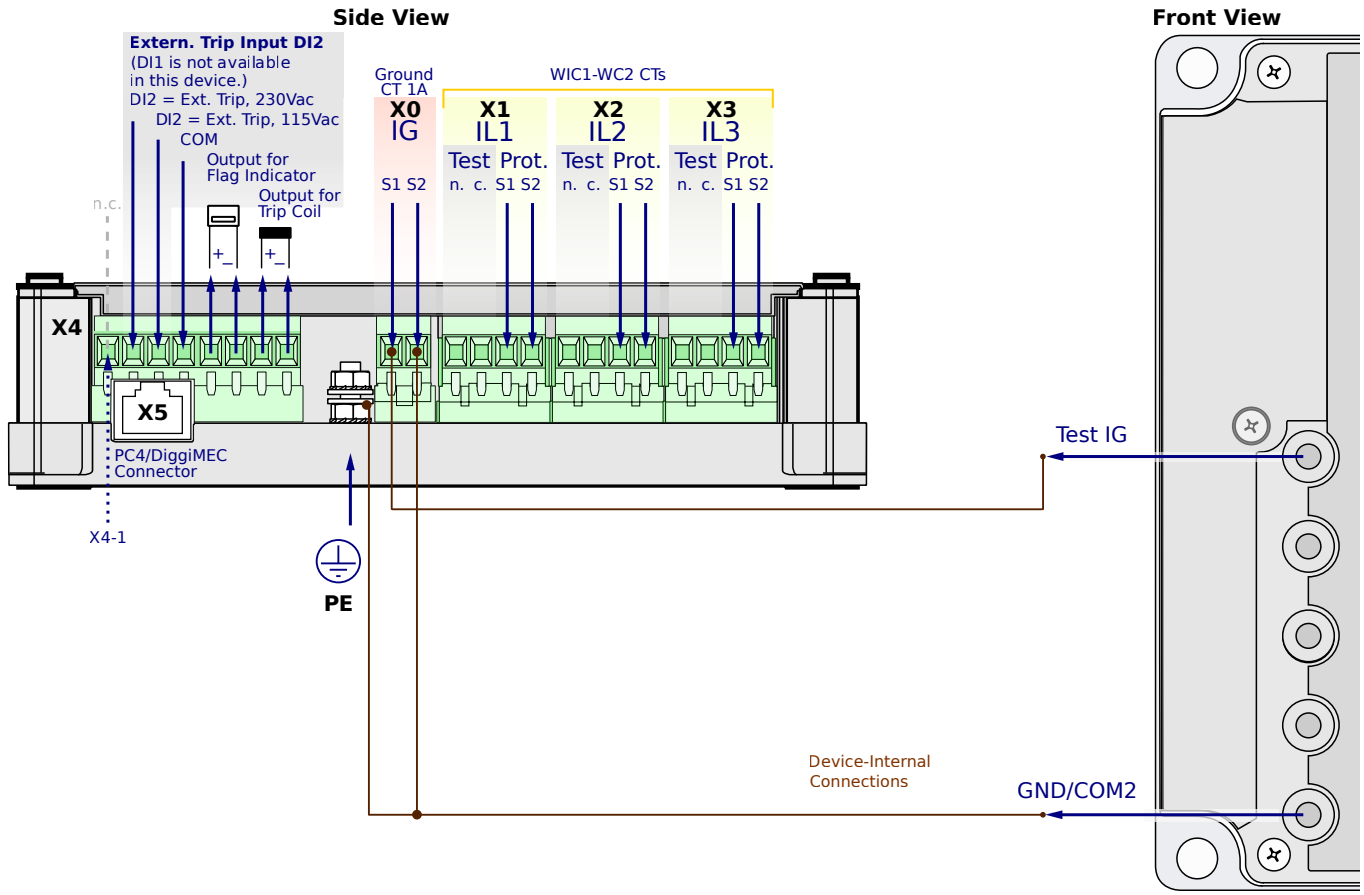


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1AA0

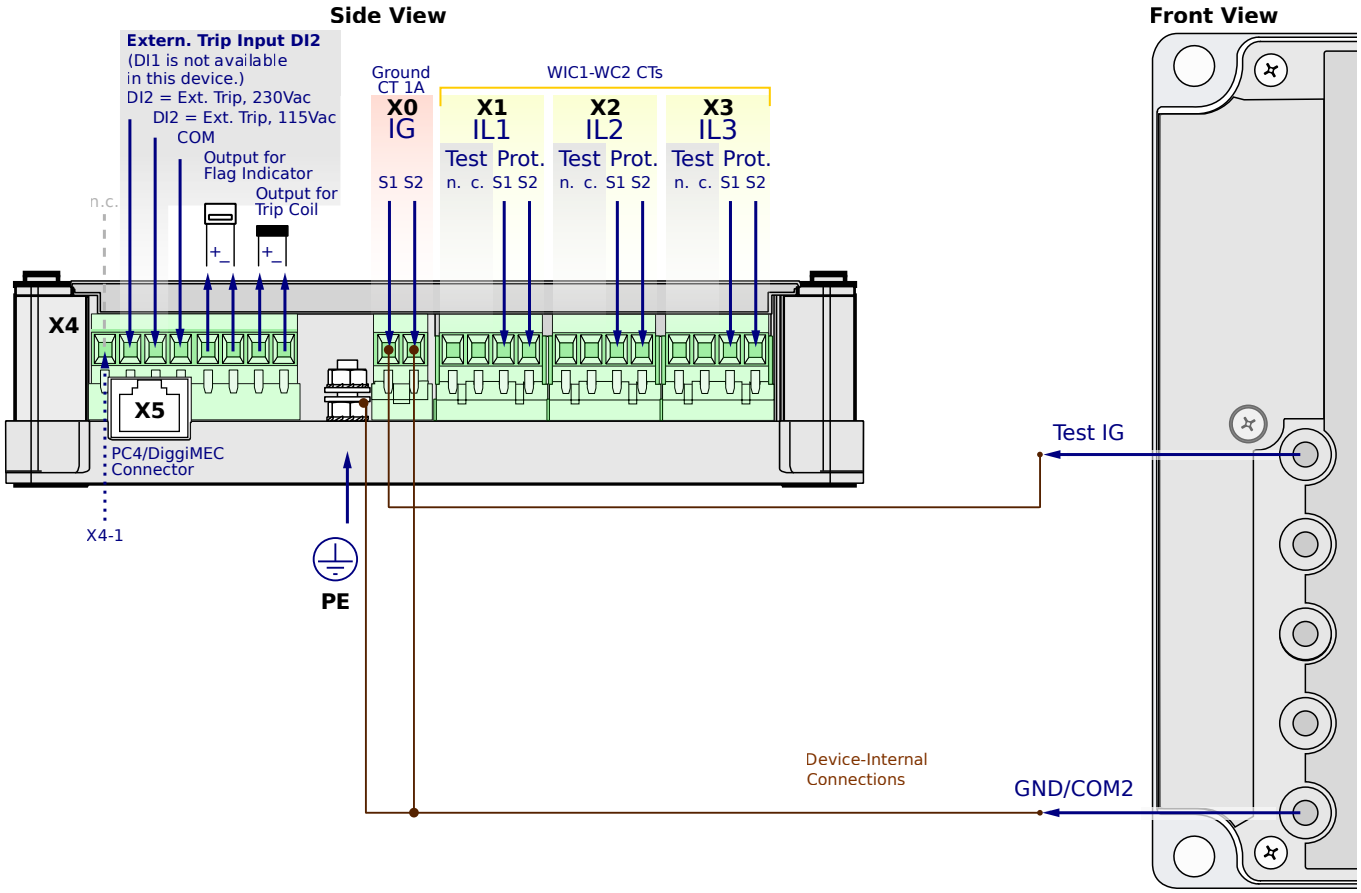


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1AAH

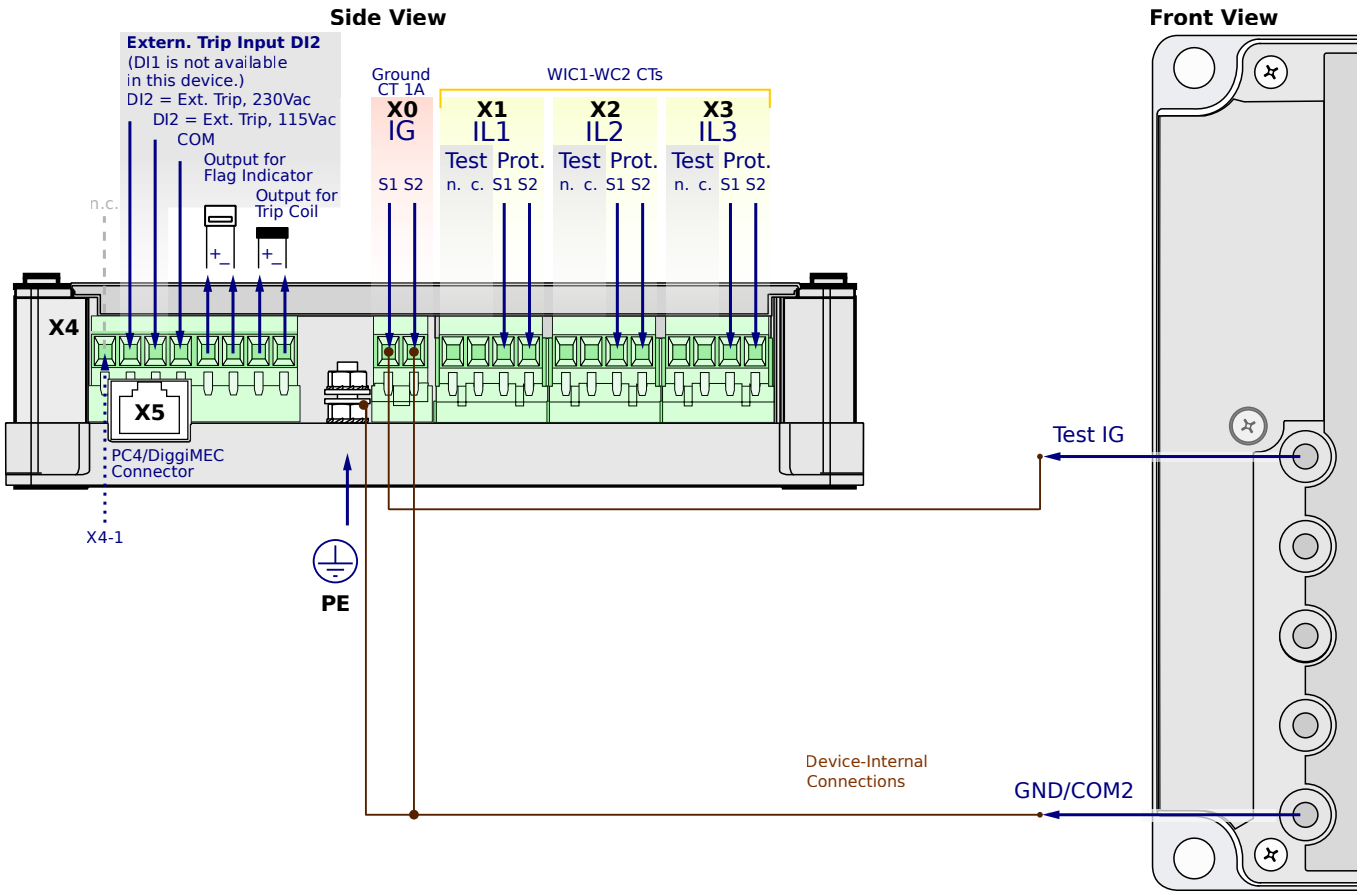


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1PA0

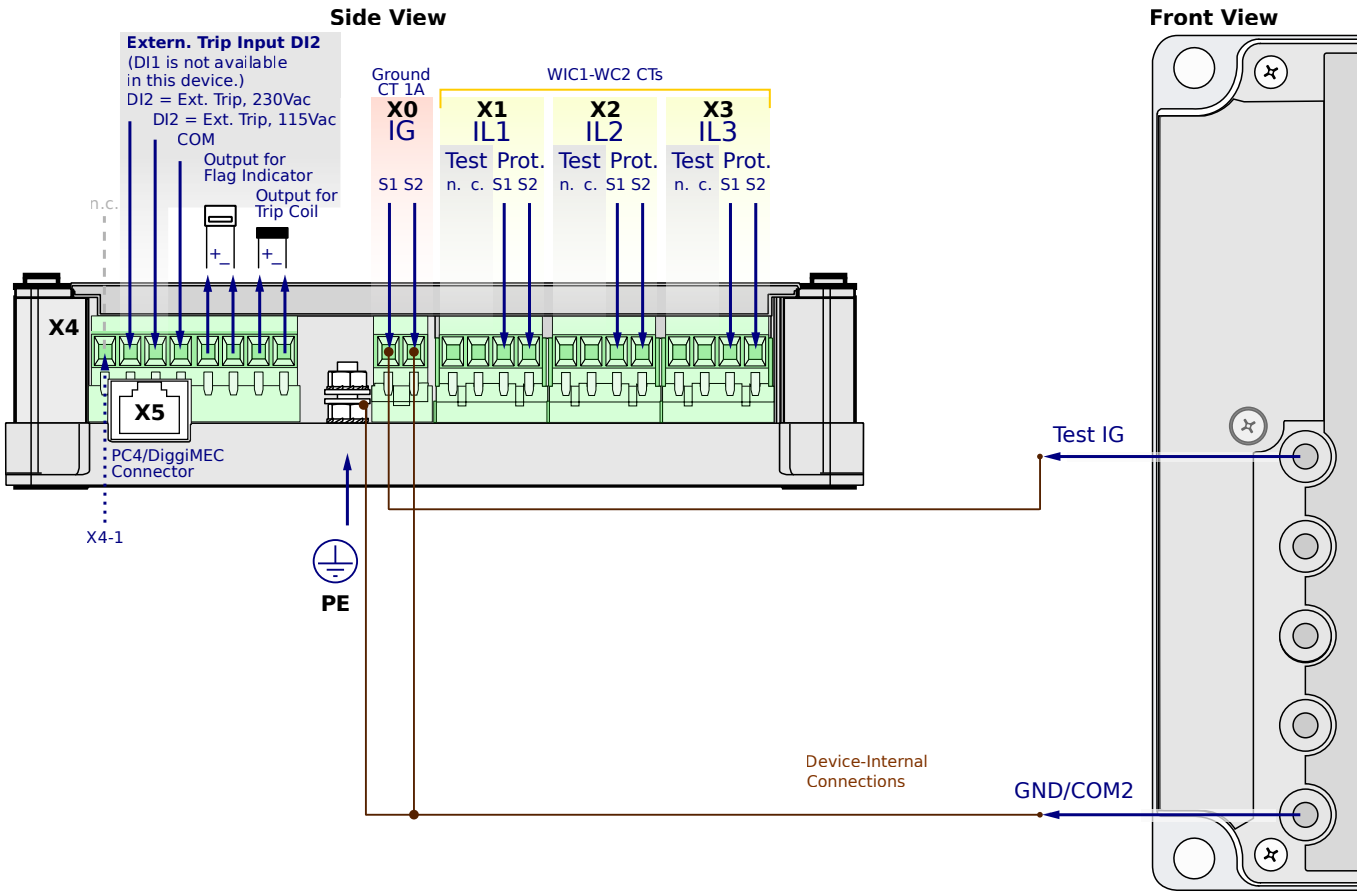


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF1PAH

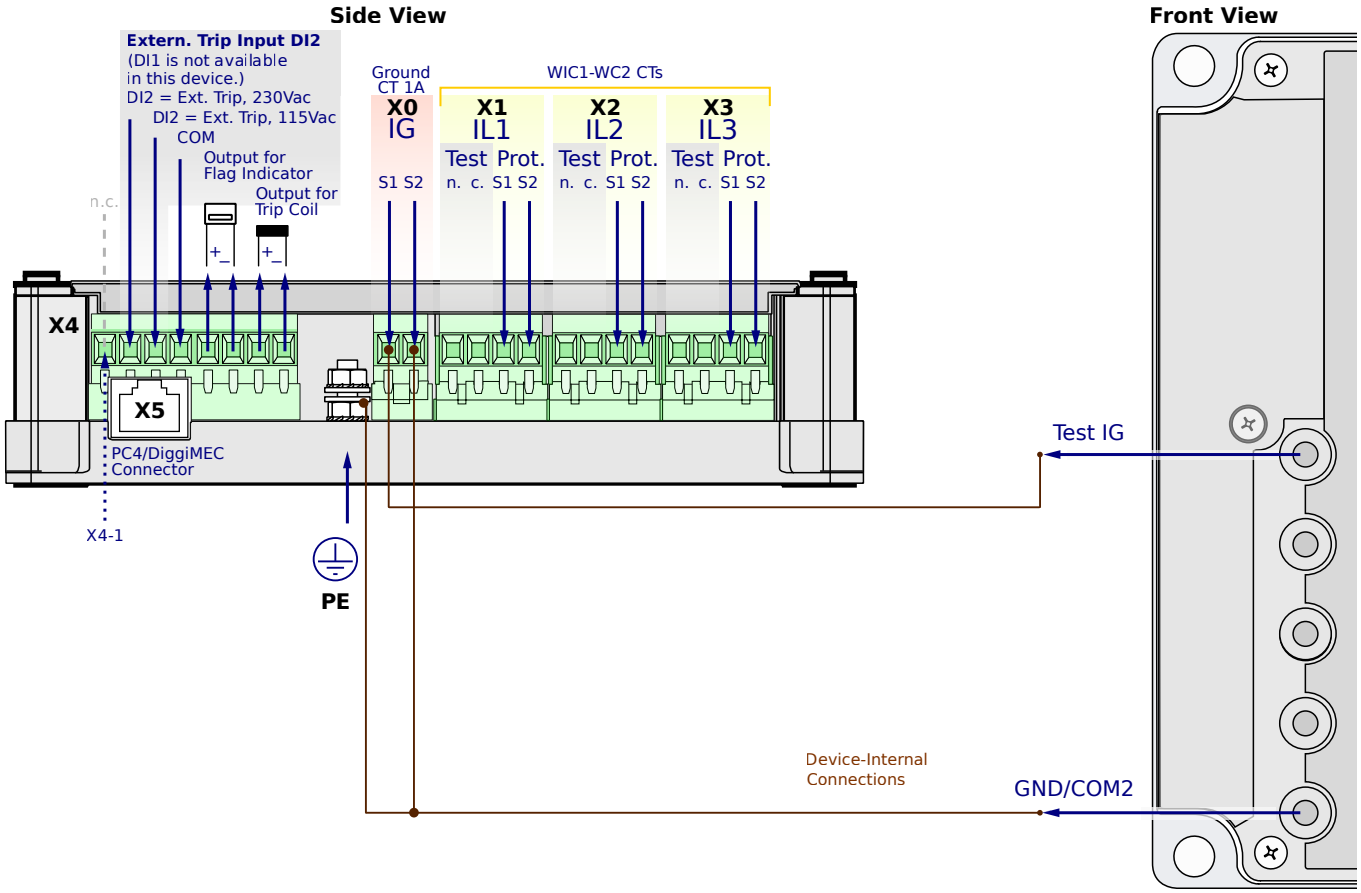


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2SA0

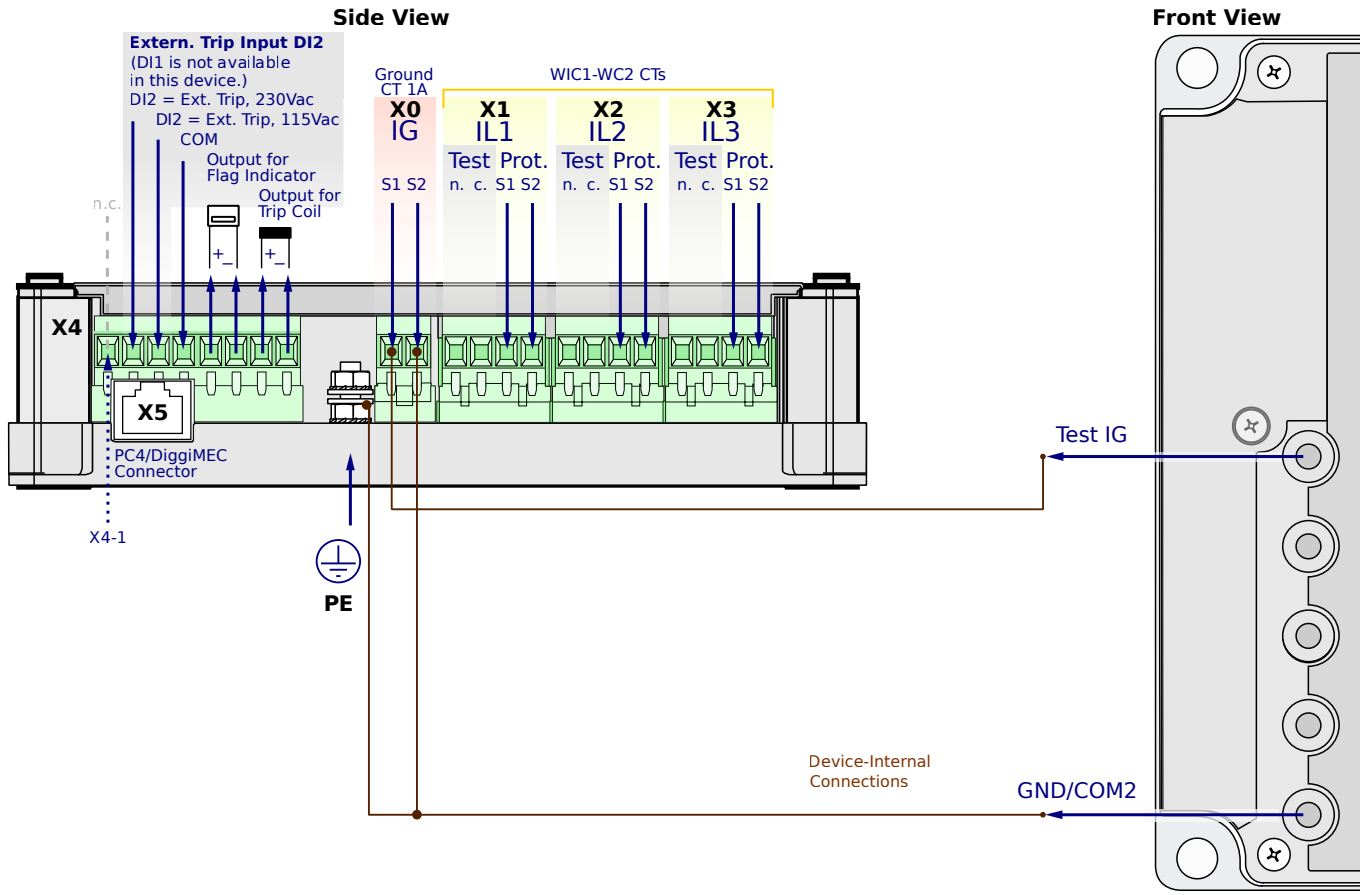


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2SAH

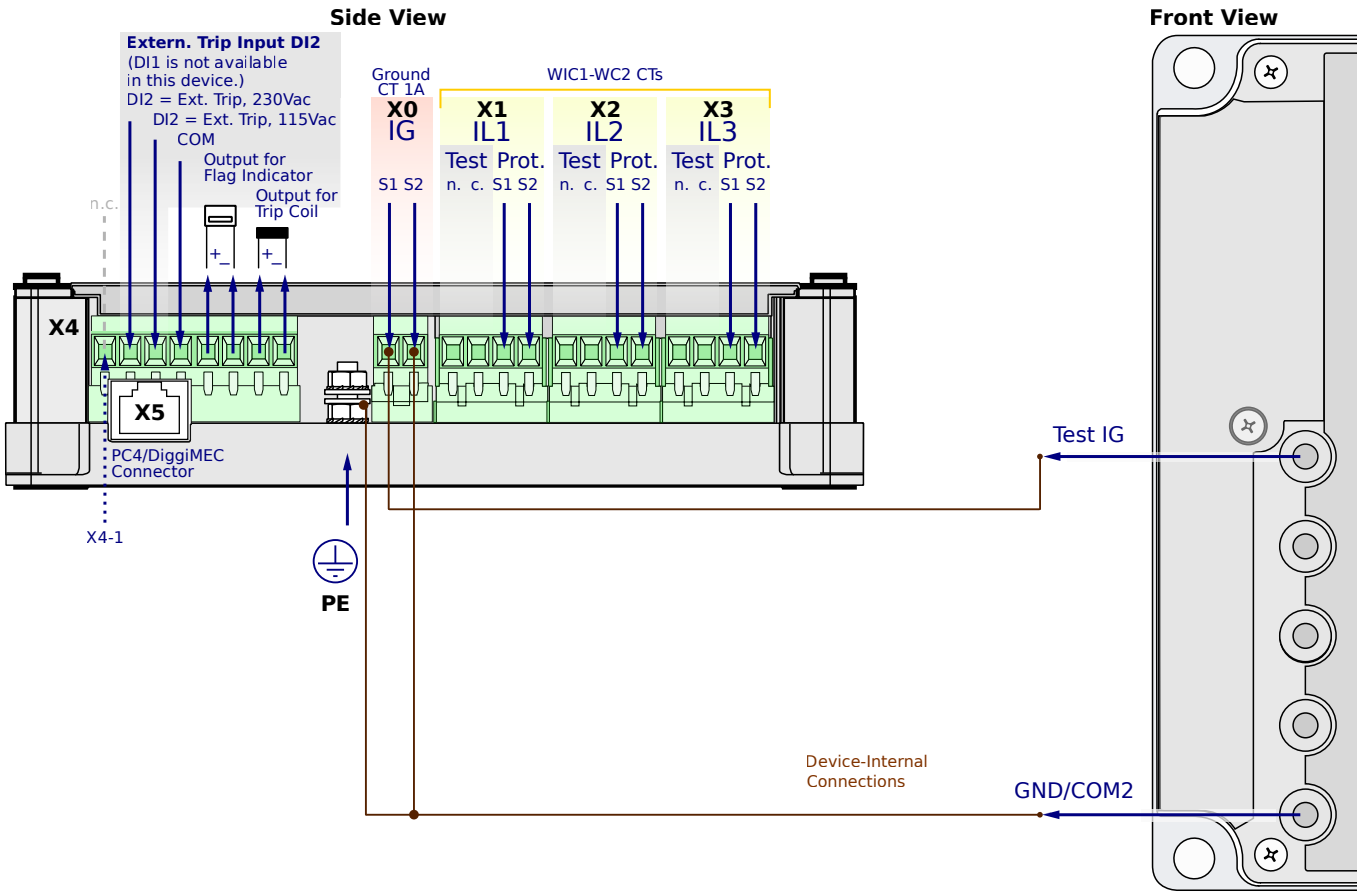


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2AA0

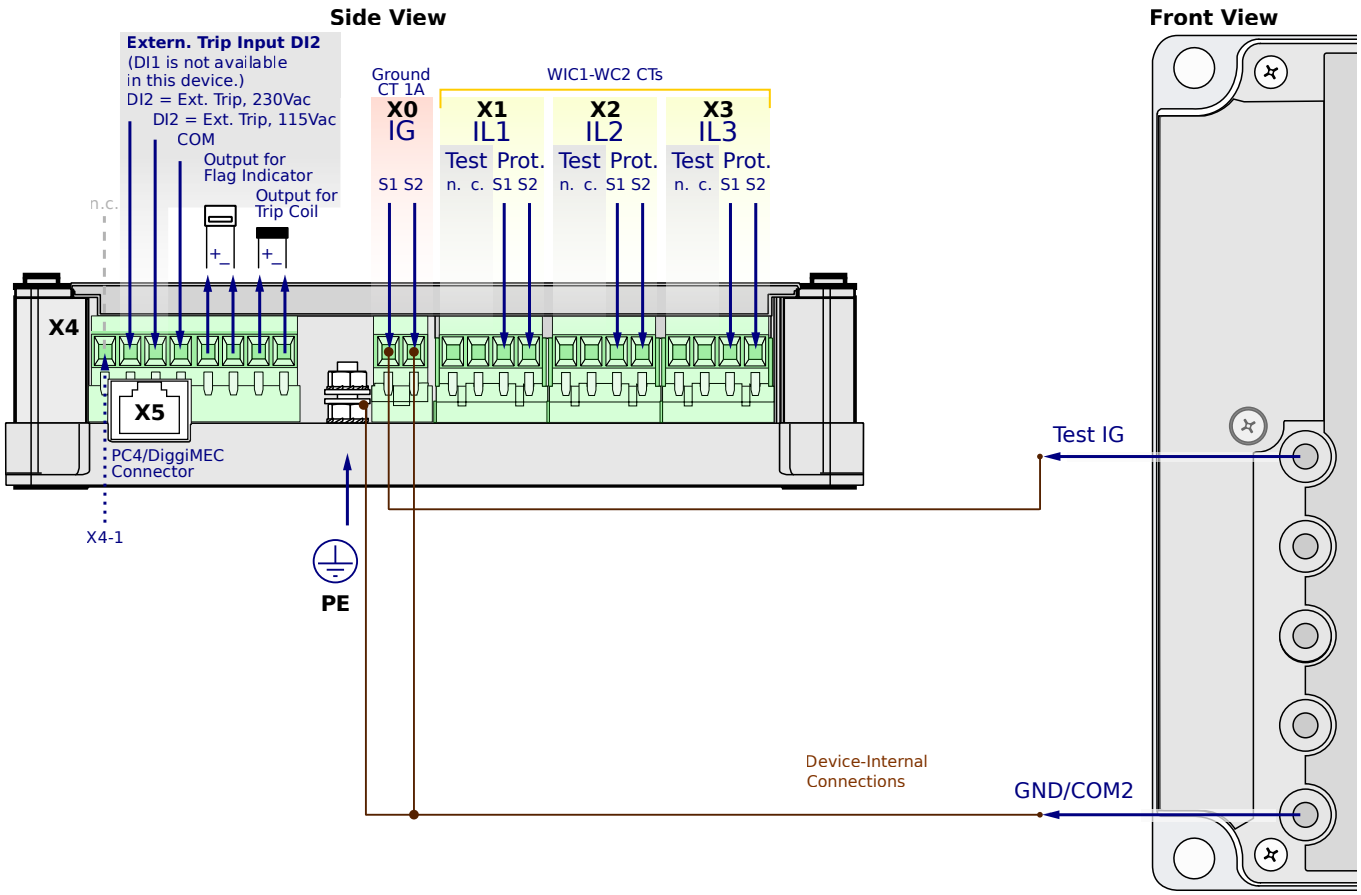


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2AAH

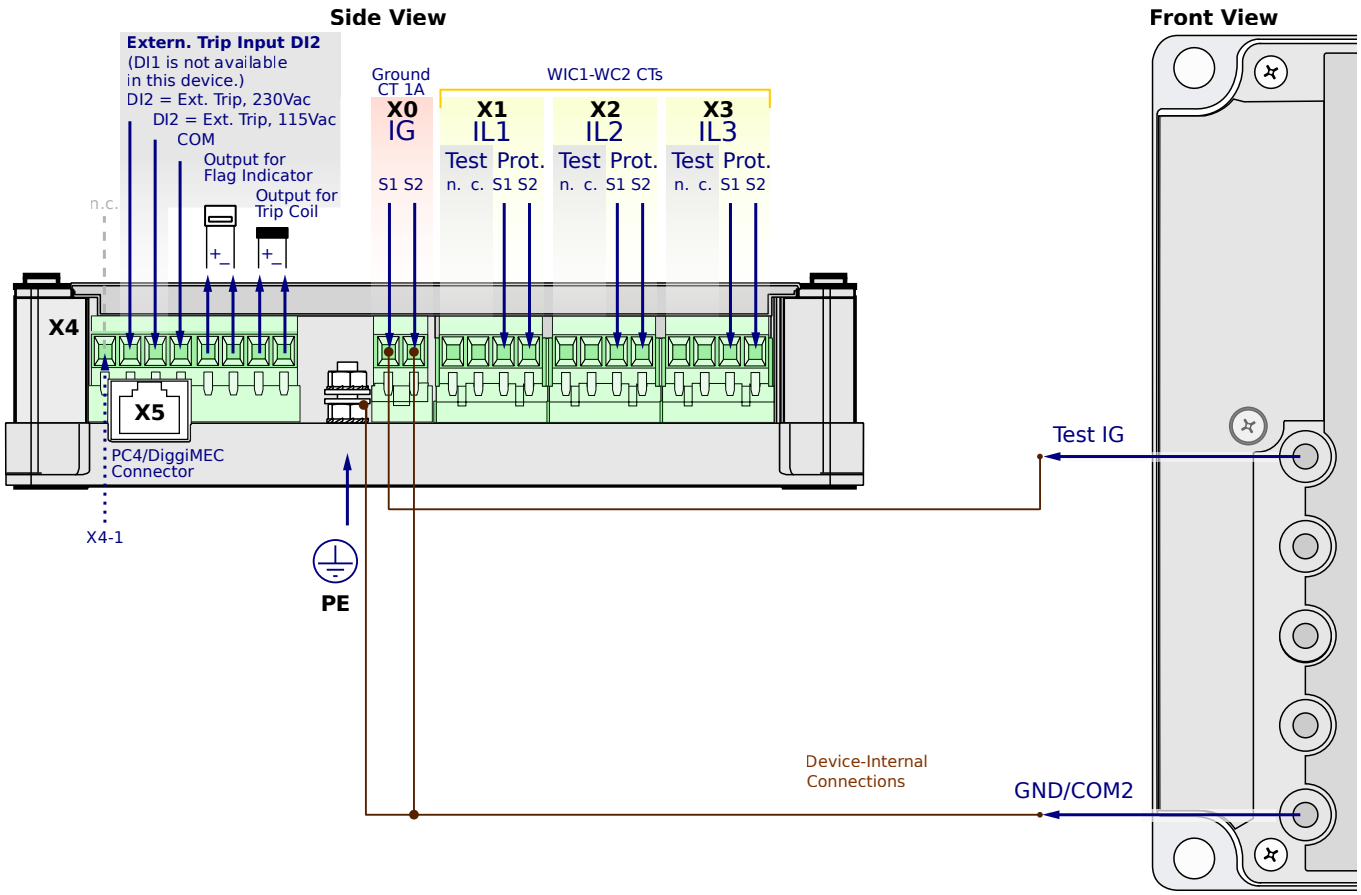


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2PA0

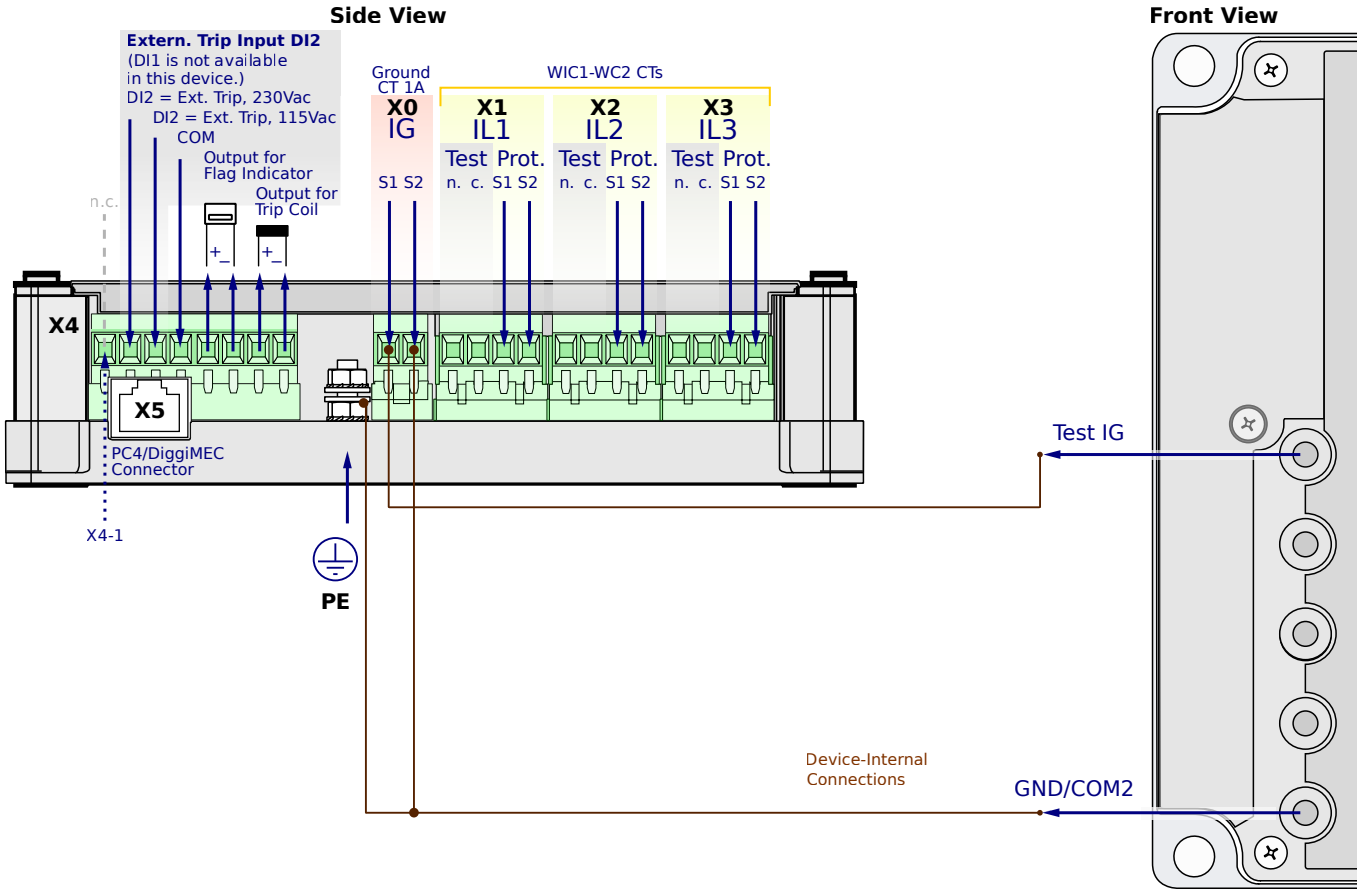


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FF2PAH

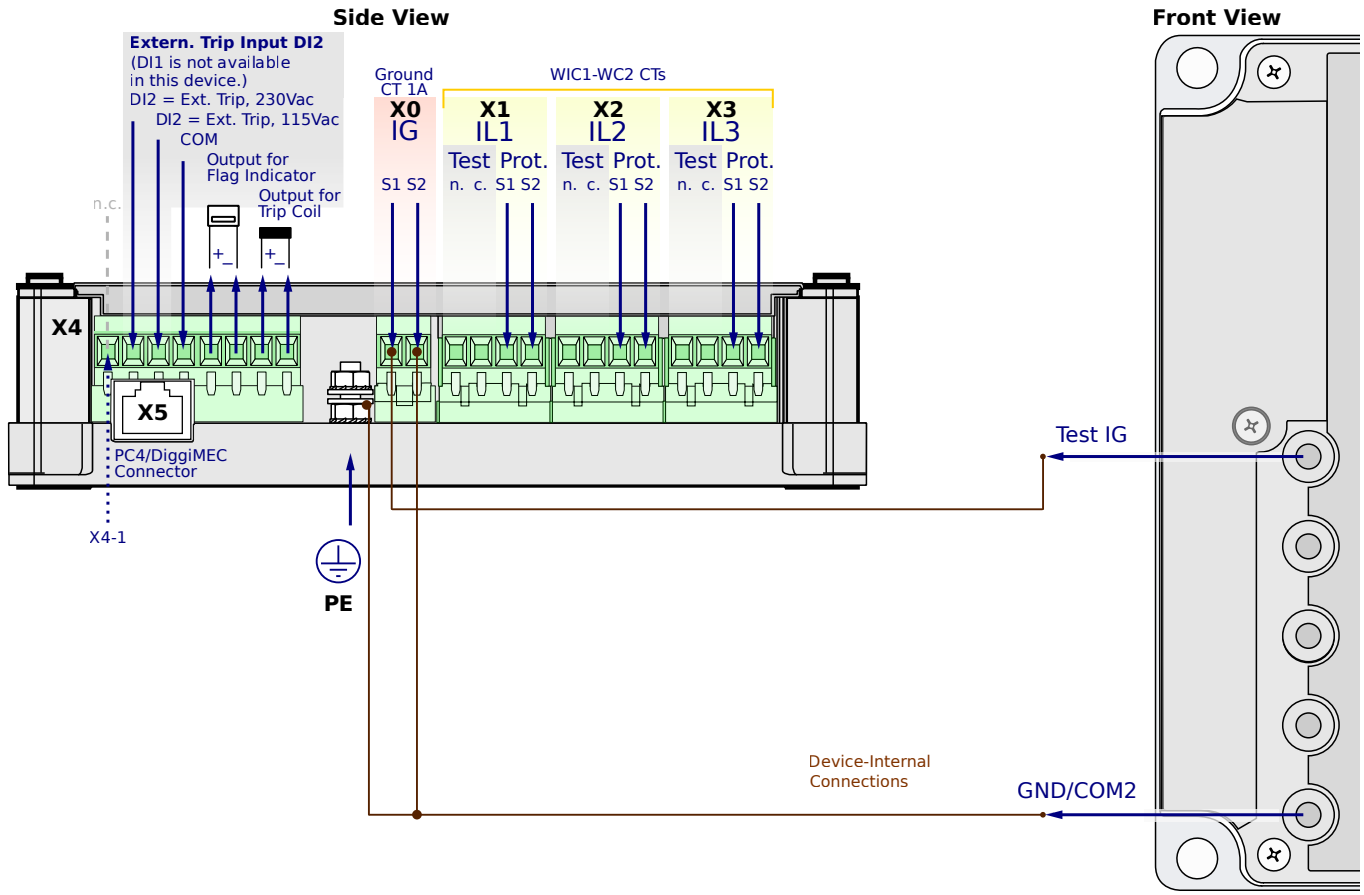


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1SA0

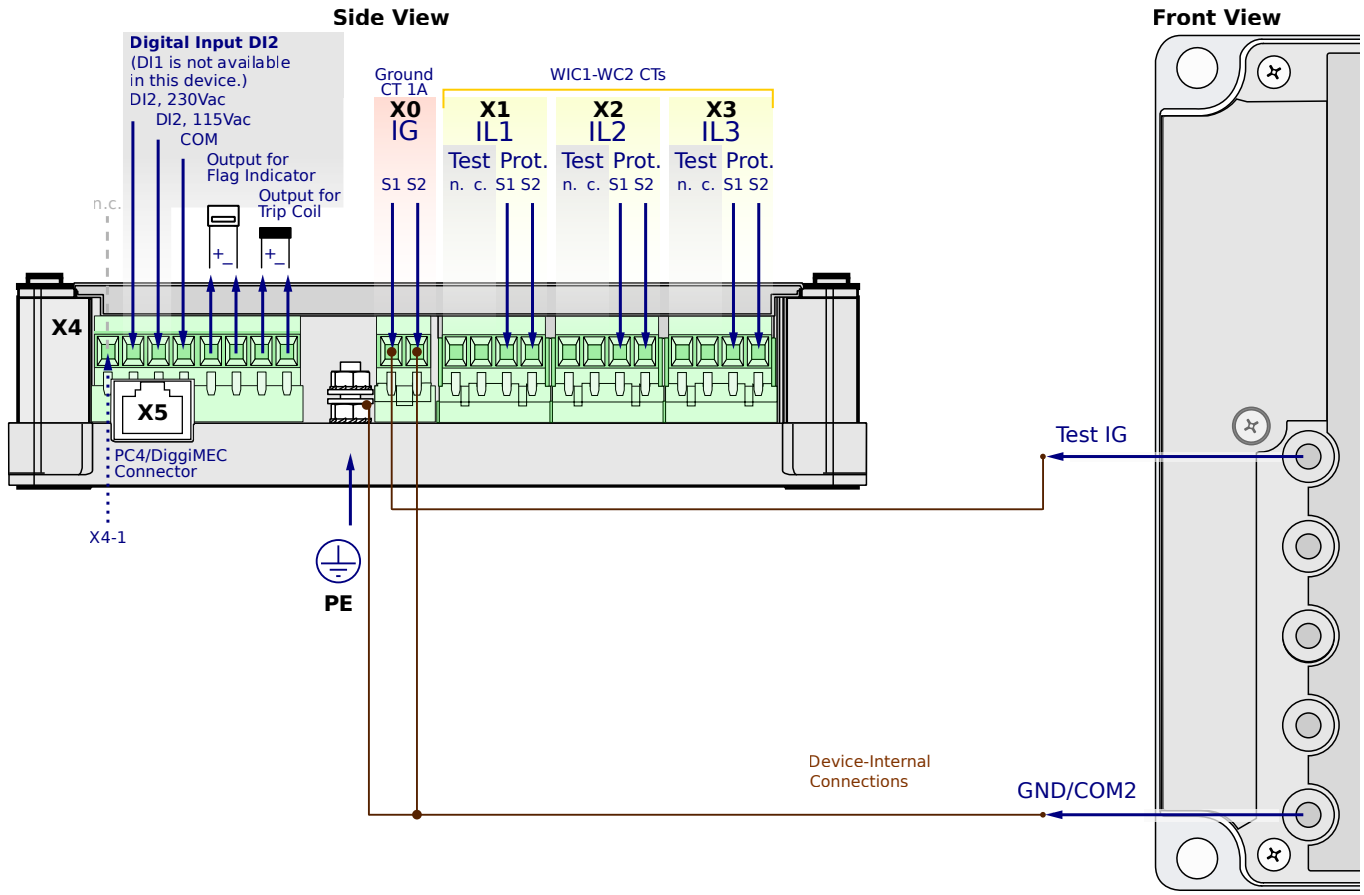


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1SAH

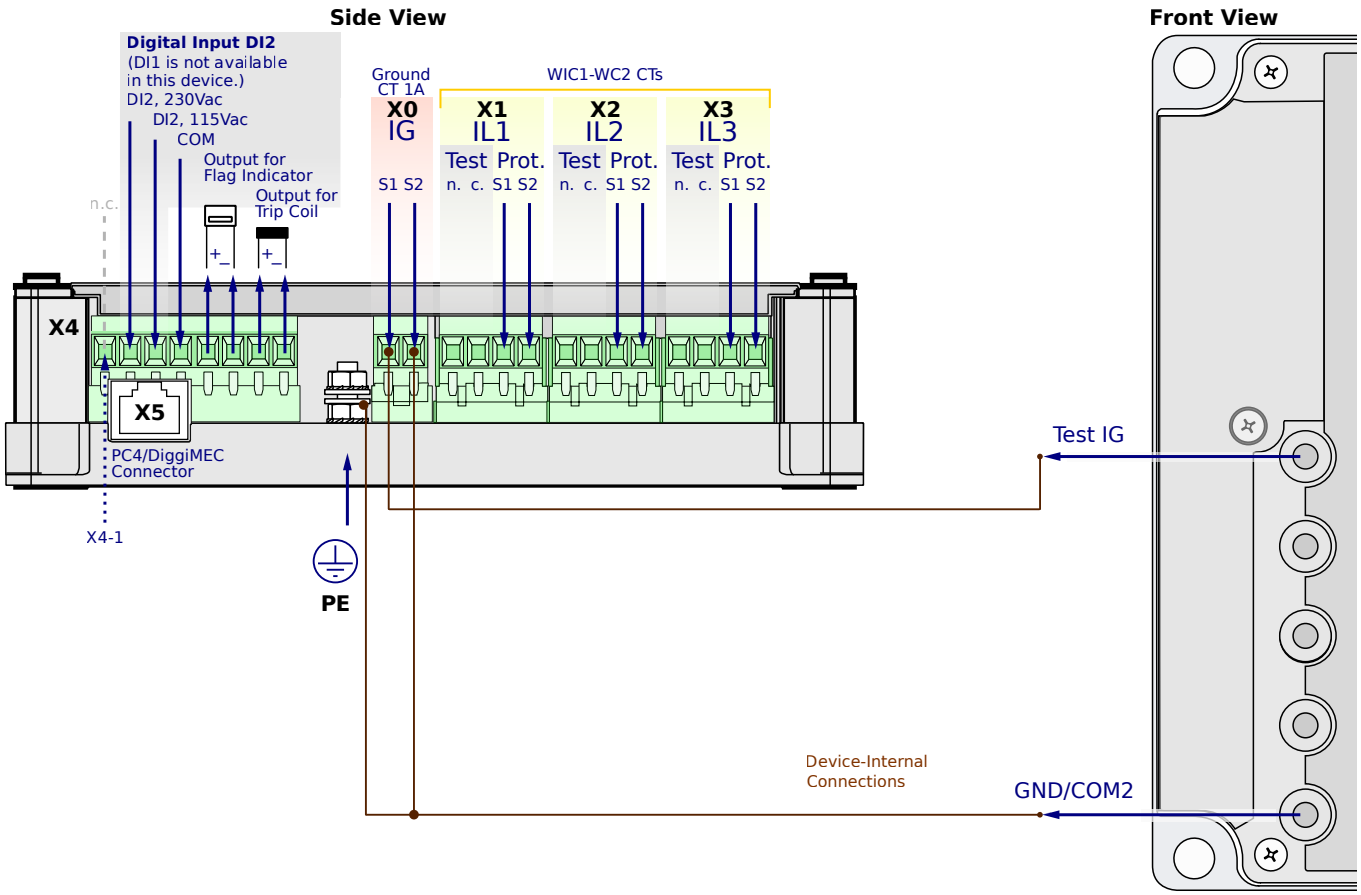


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1AA0

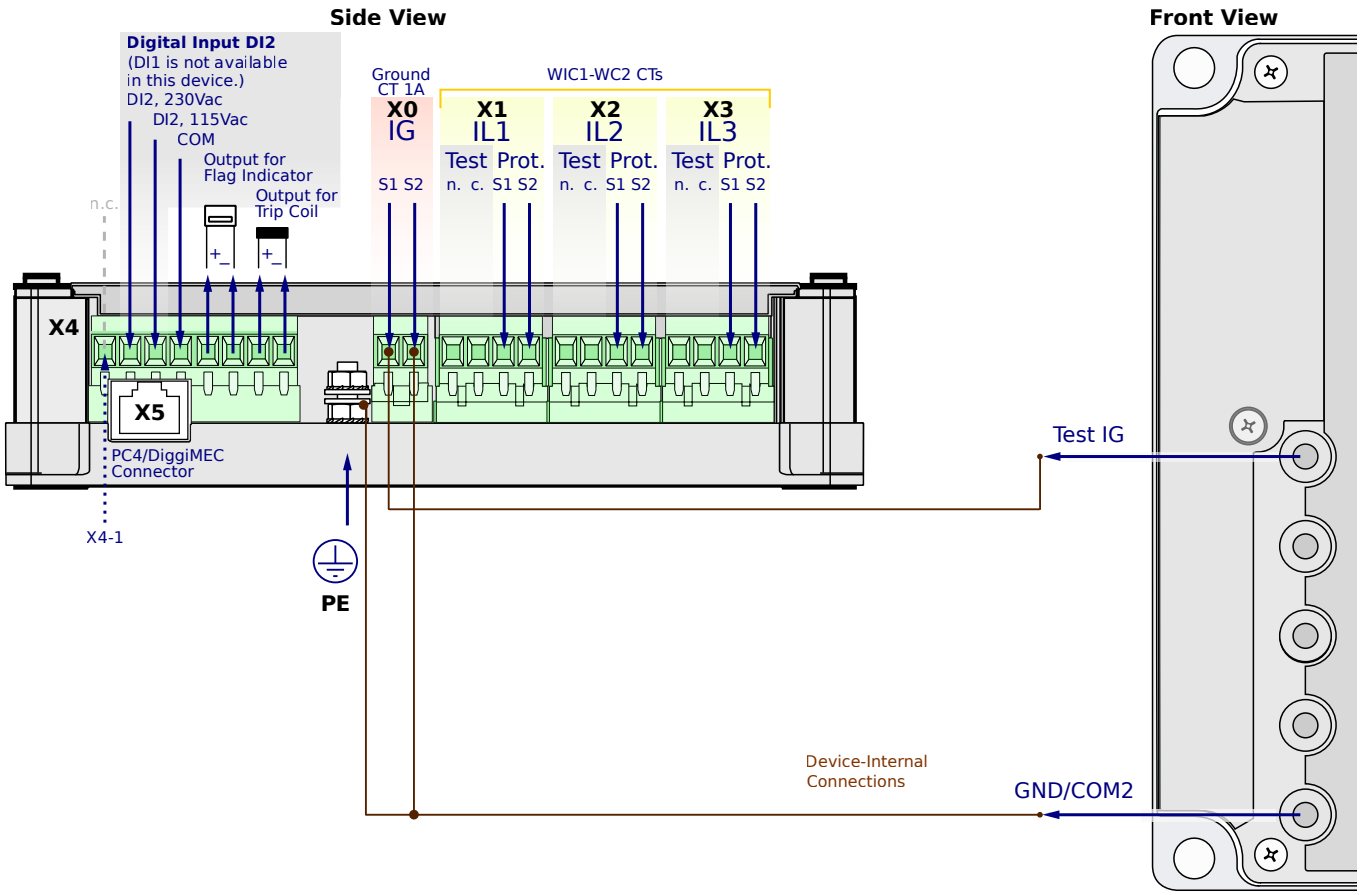


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1AAH

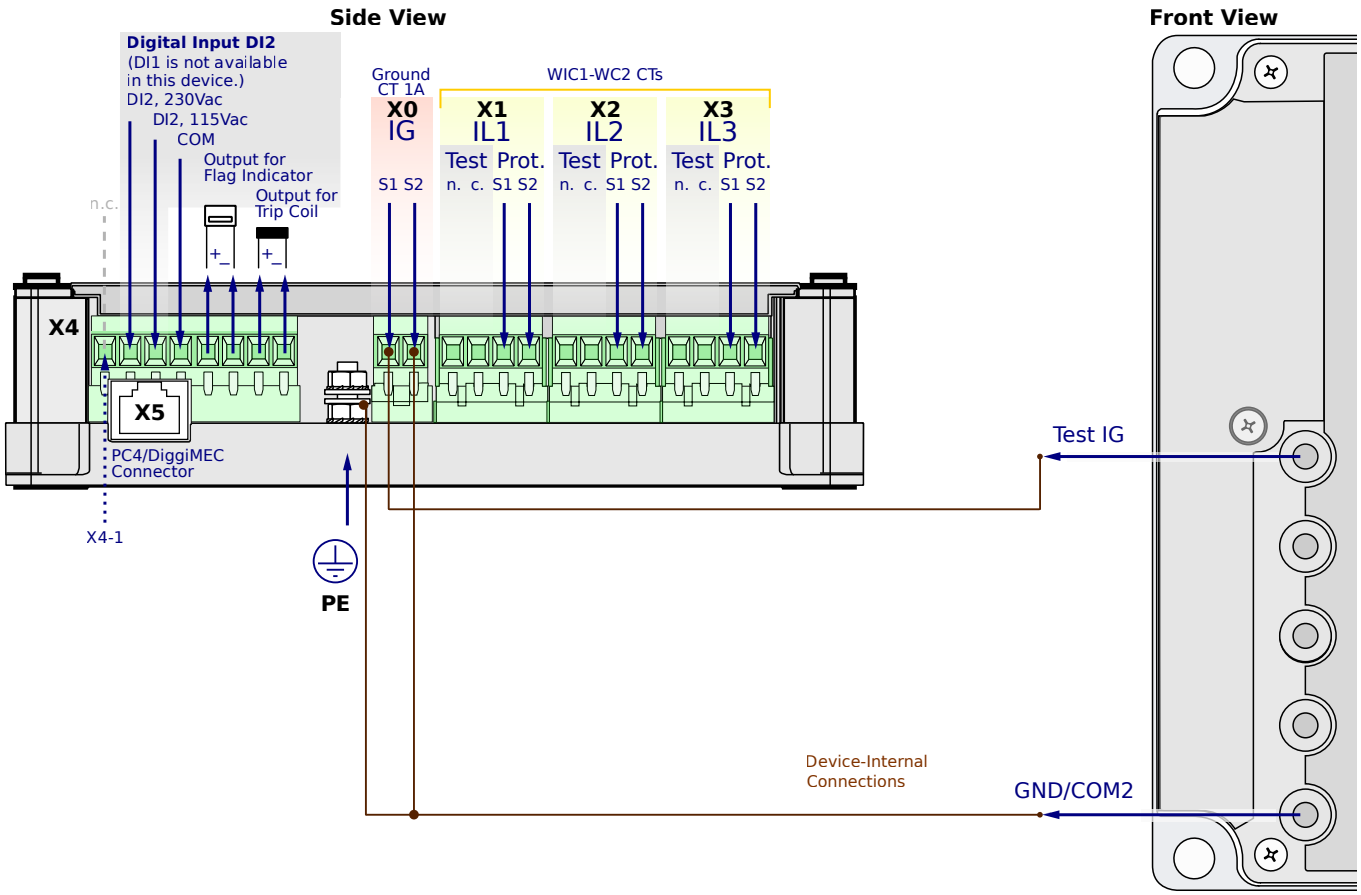


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1PA0

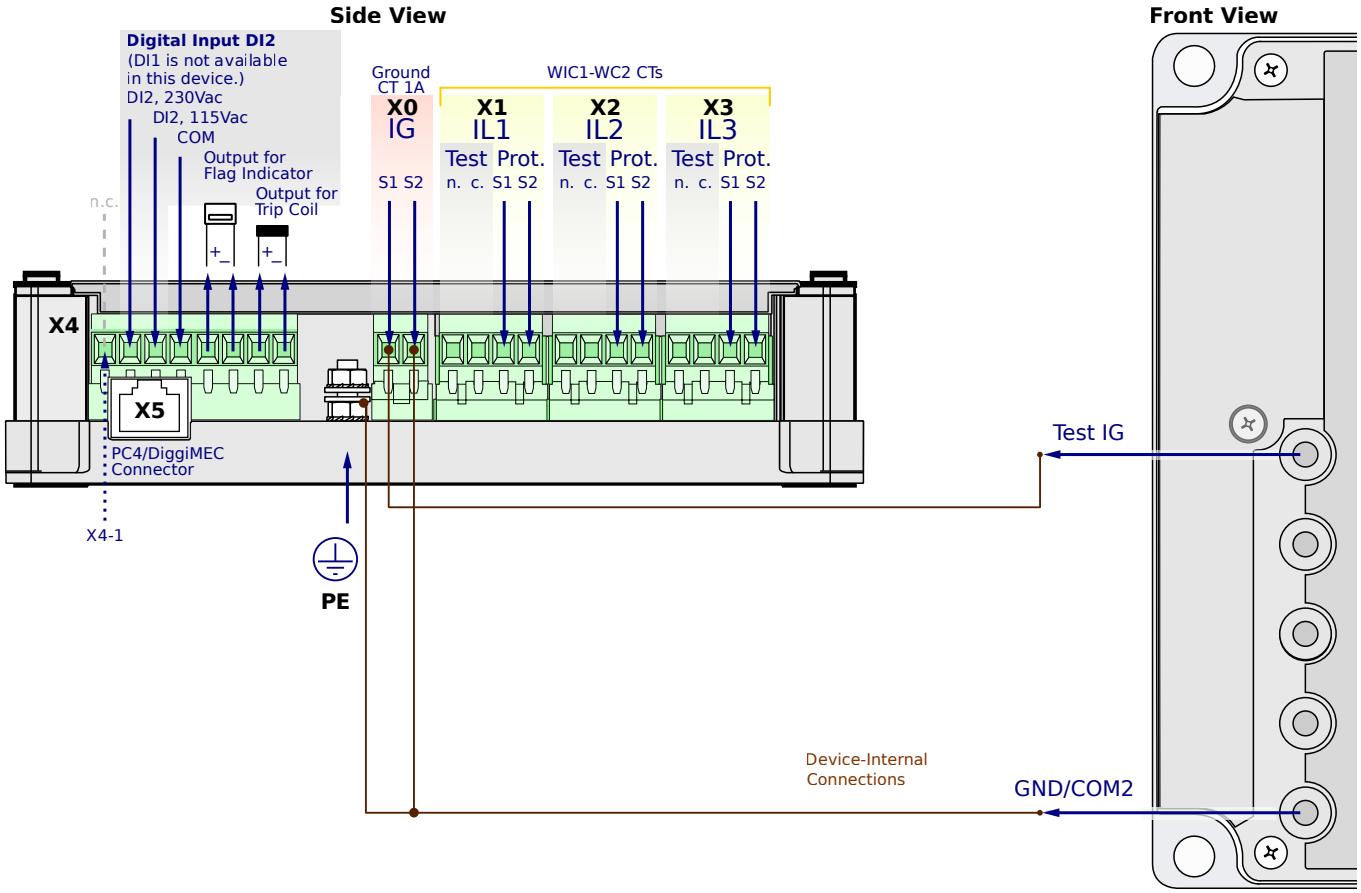


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC1PAH

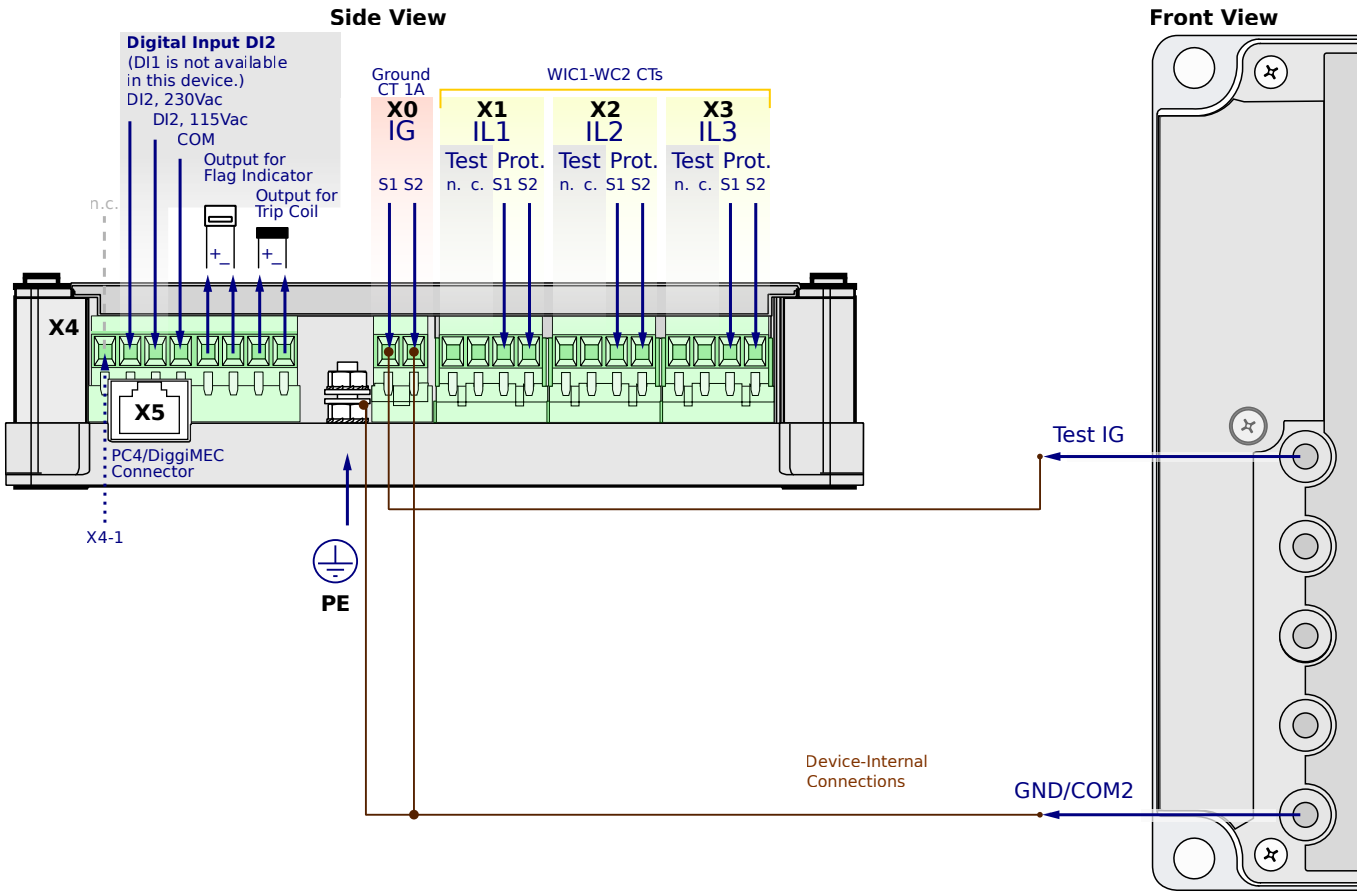


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2SA0

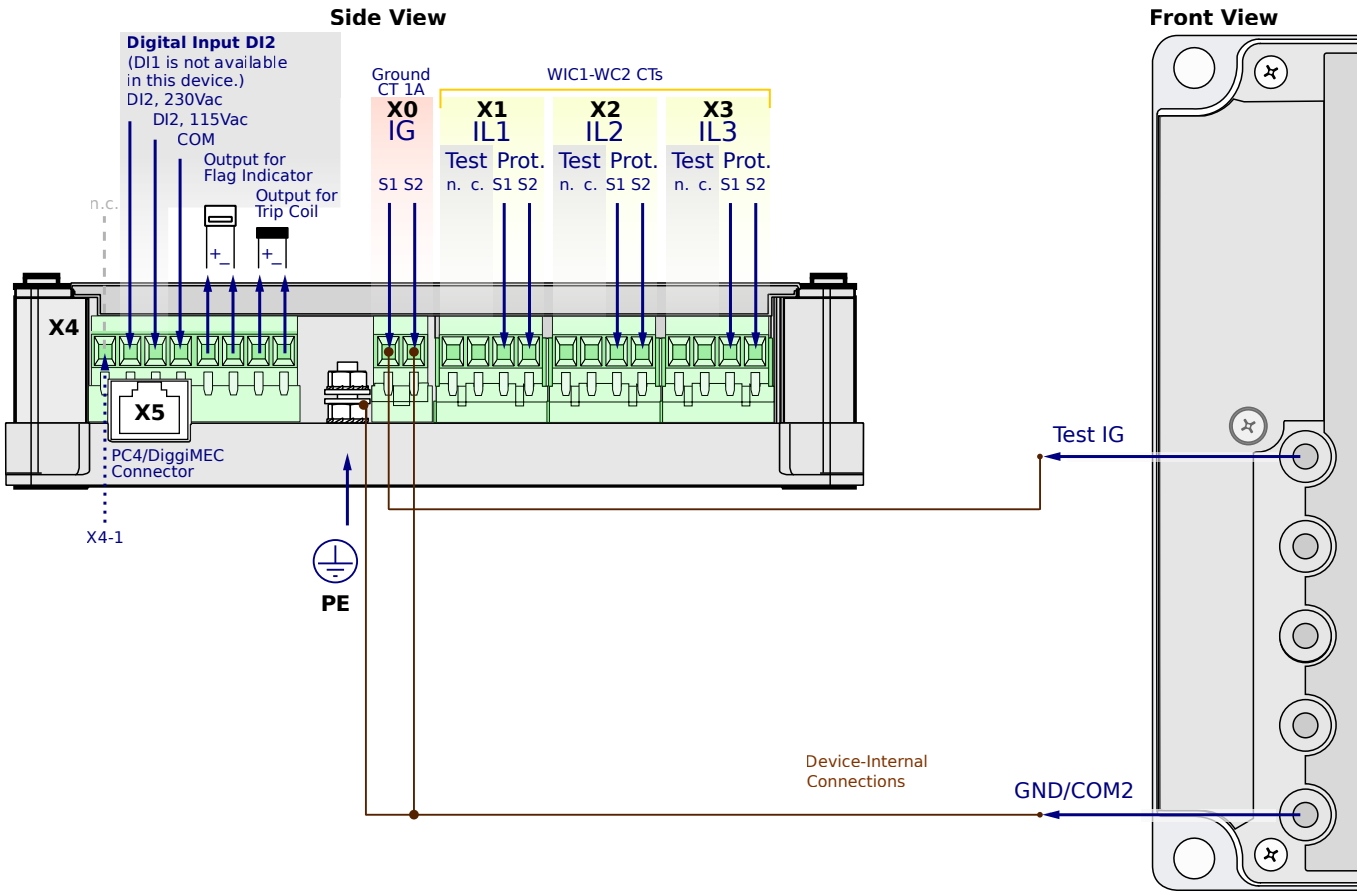


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2SAH

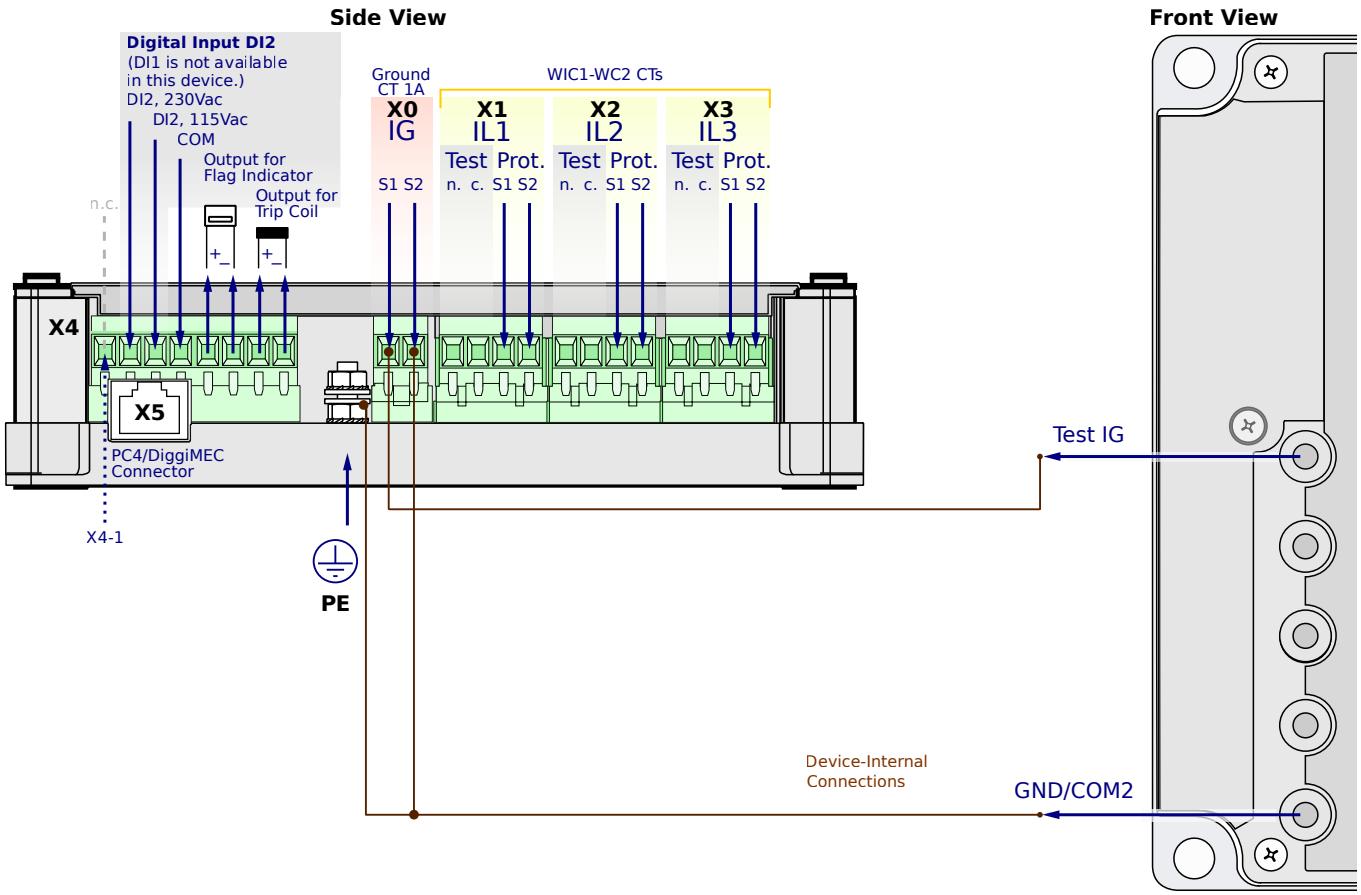


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2AA0

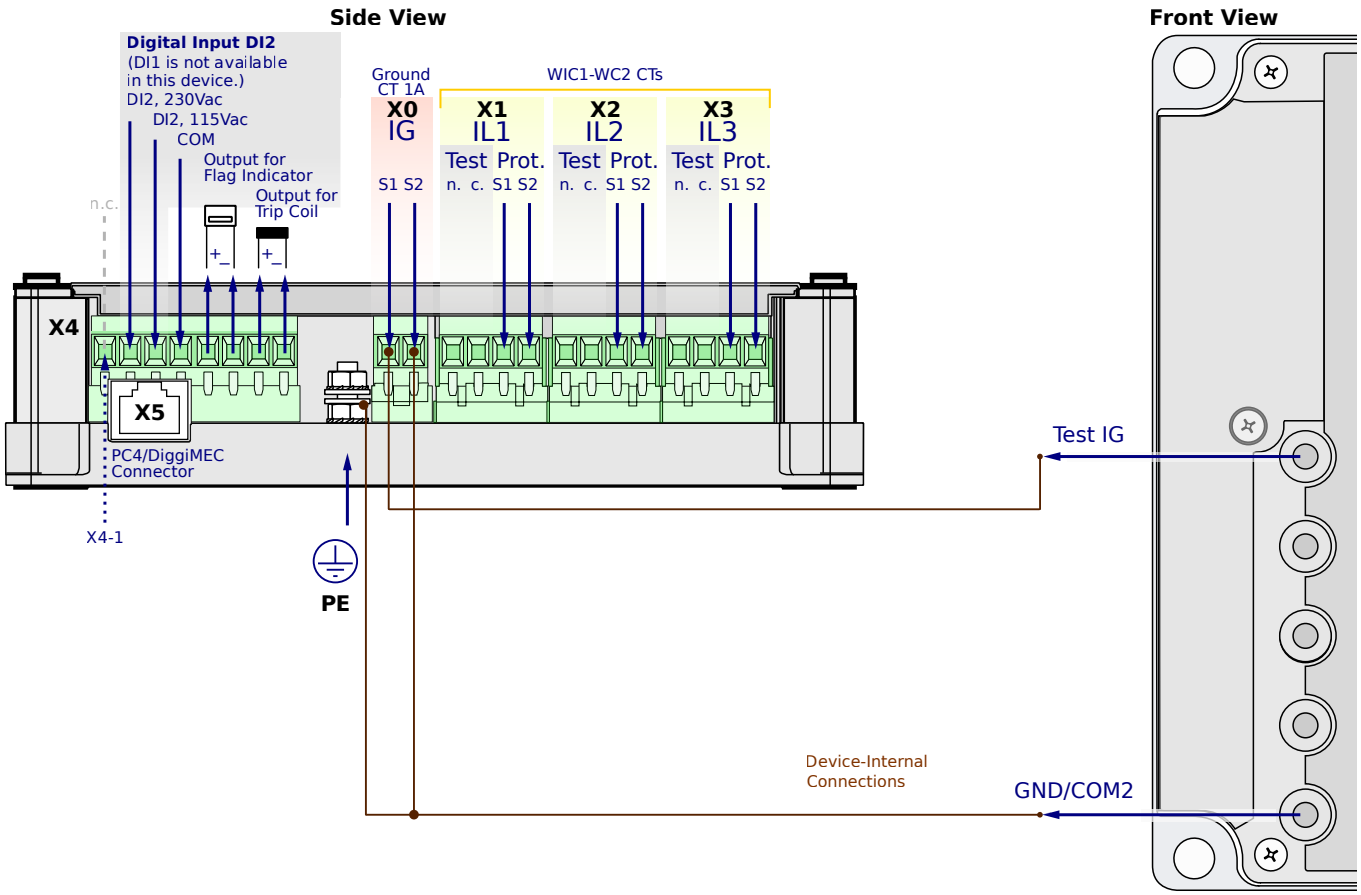


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2AAH

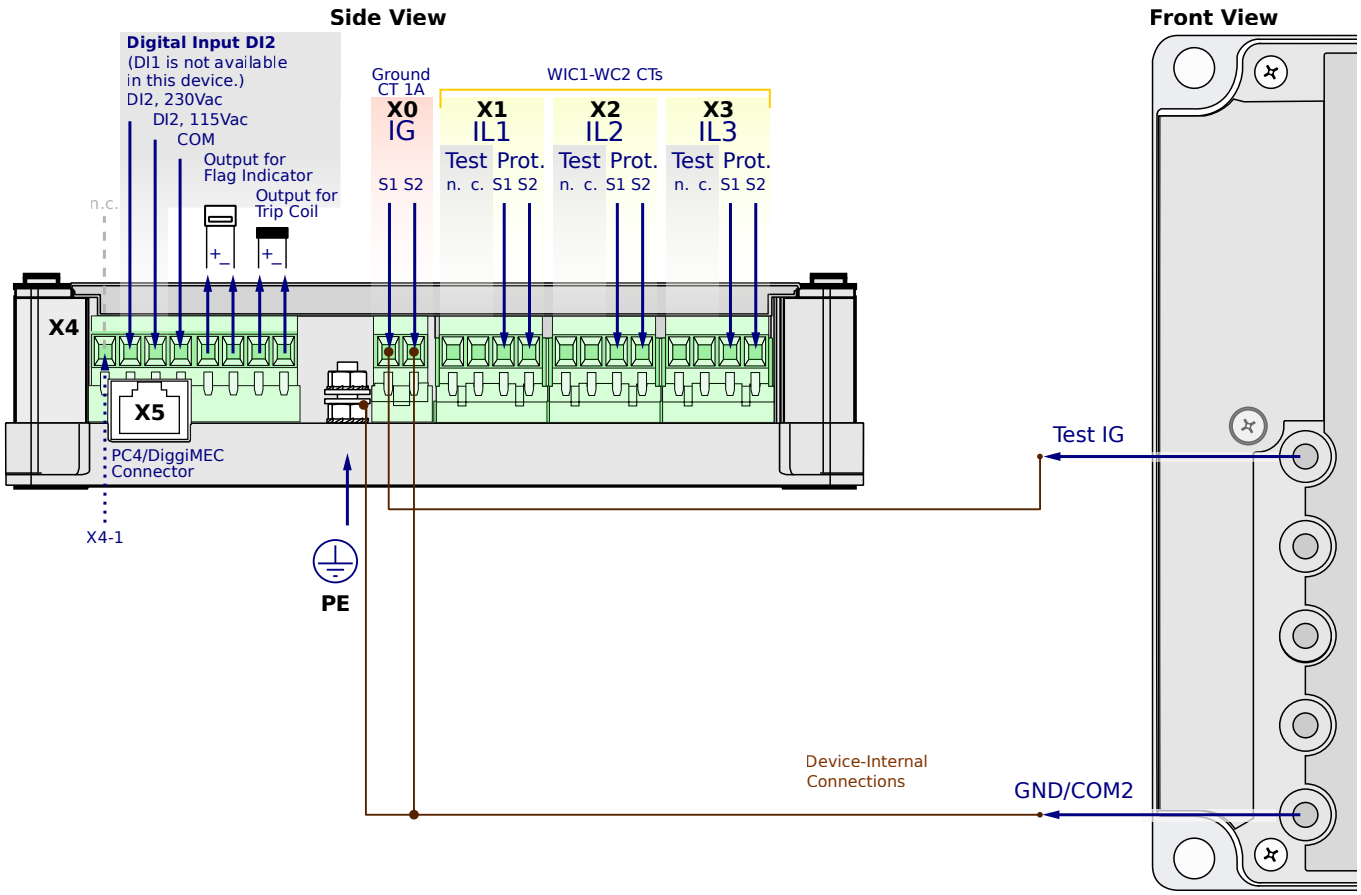


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2PA0

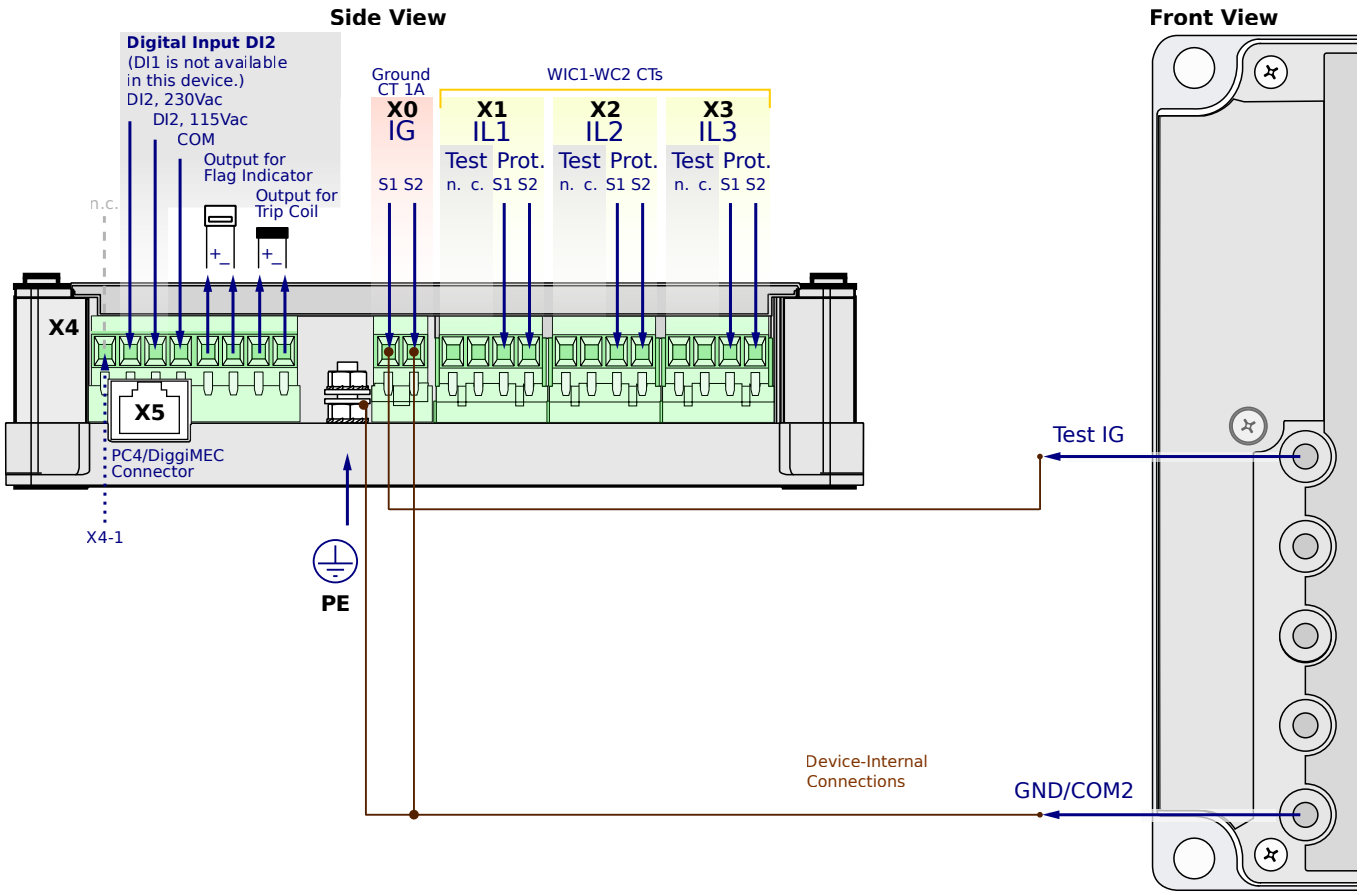


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6FC2PAH

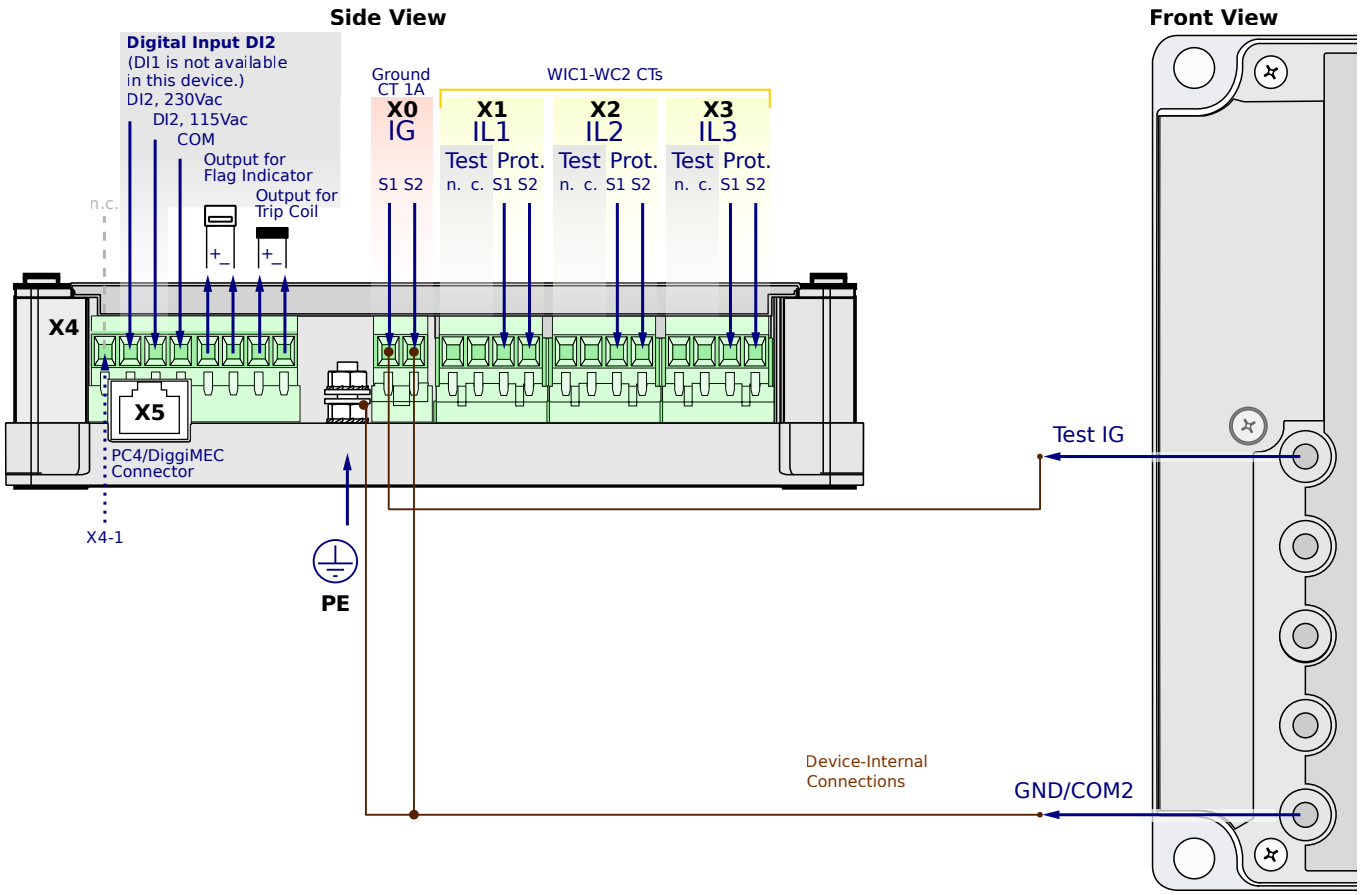


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1SA0

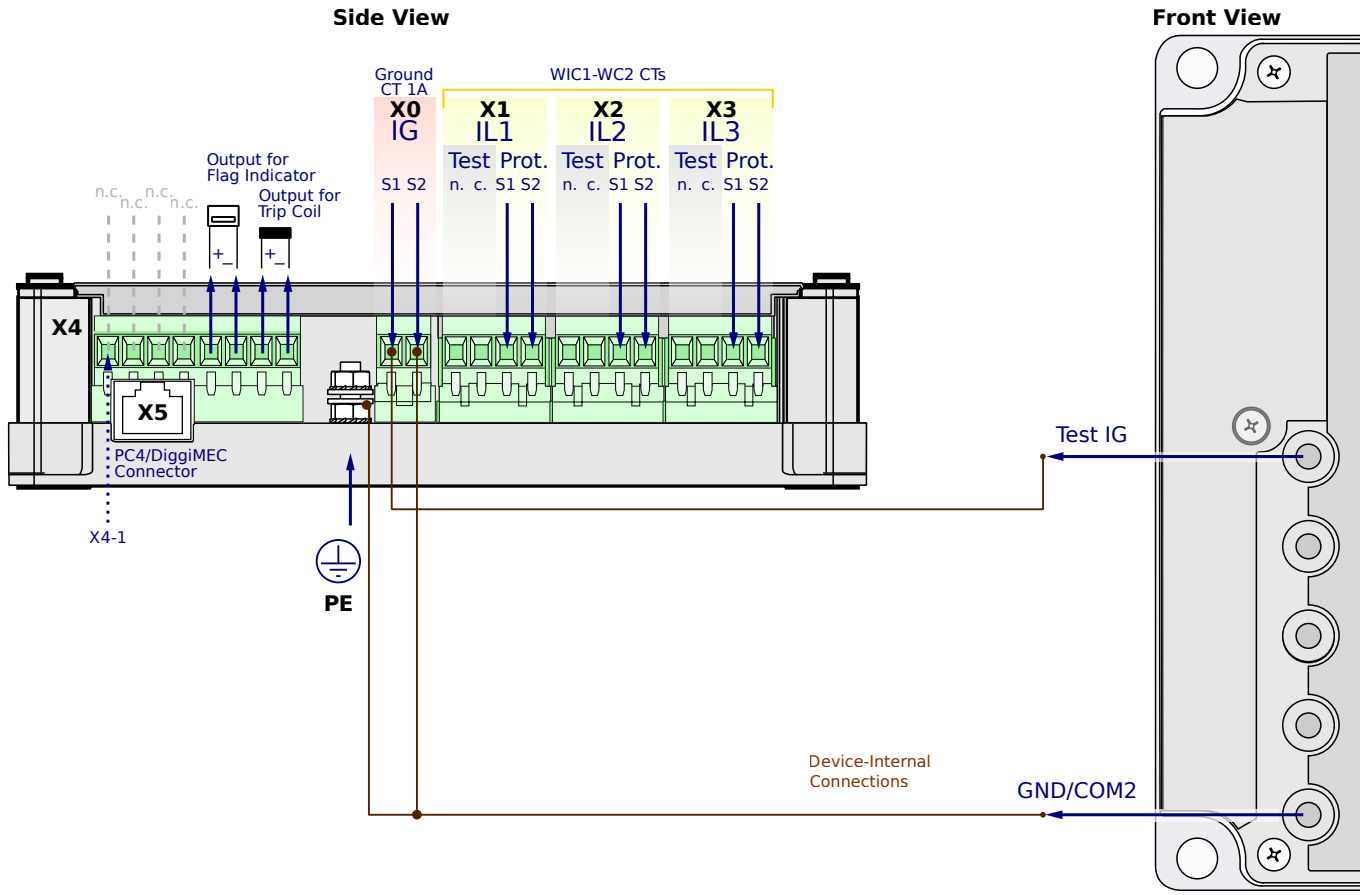


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1SAH

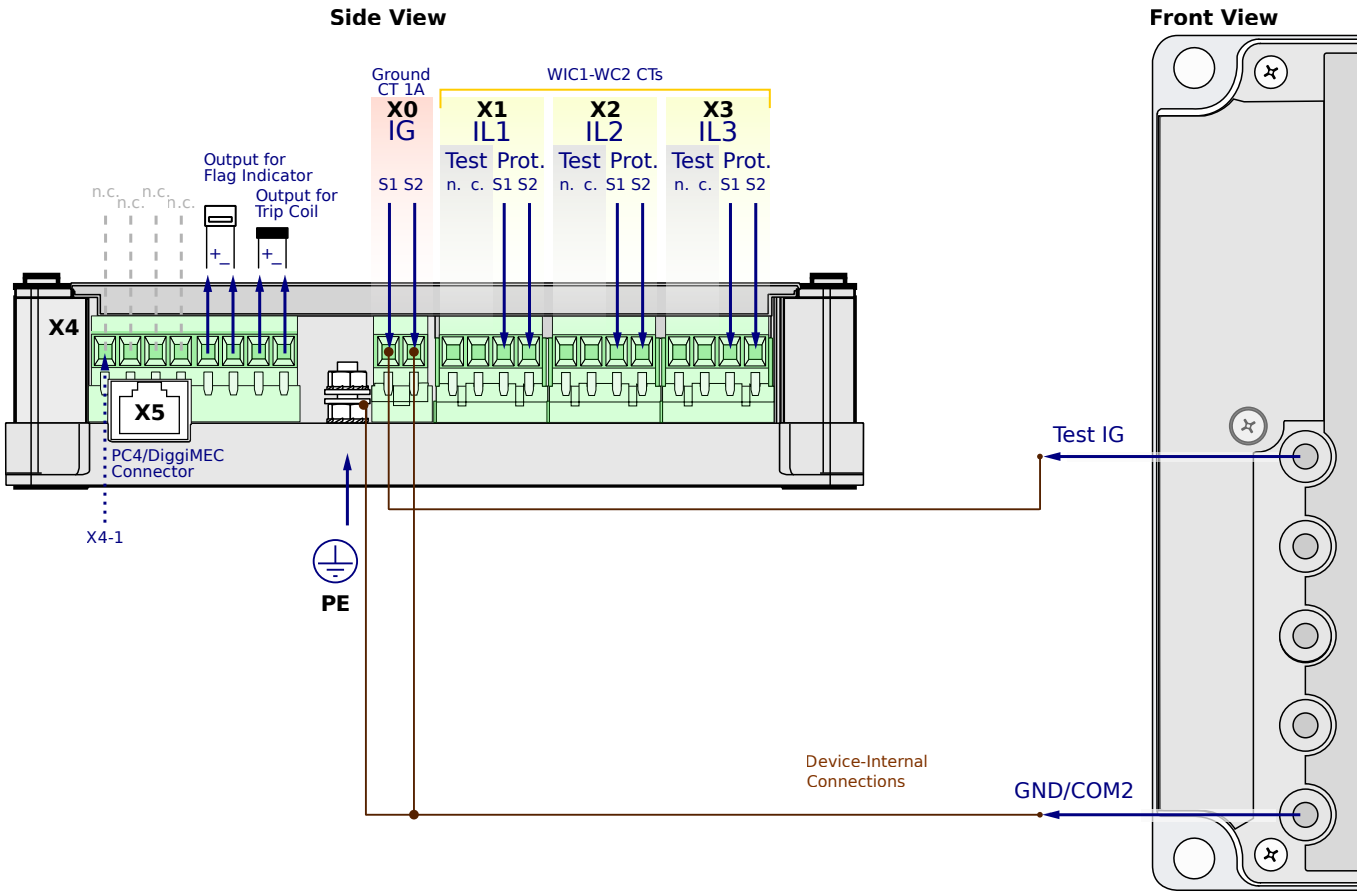


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1AA0

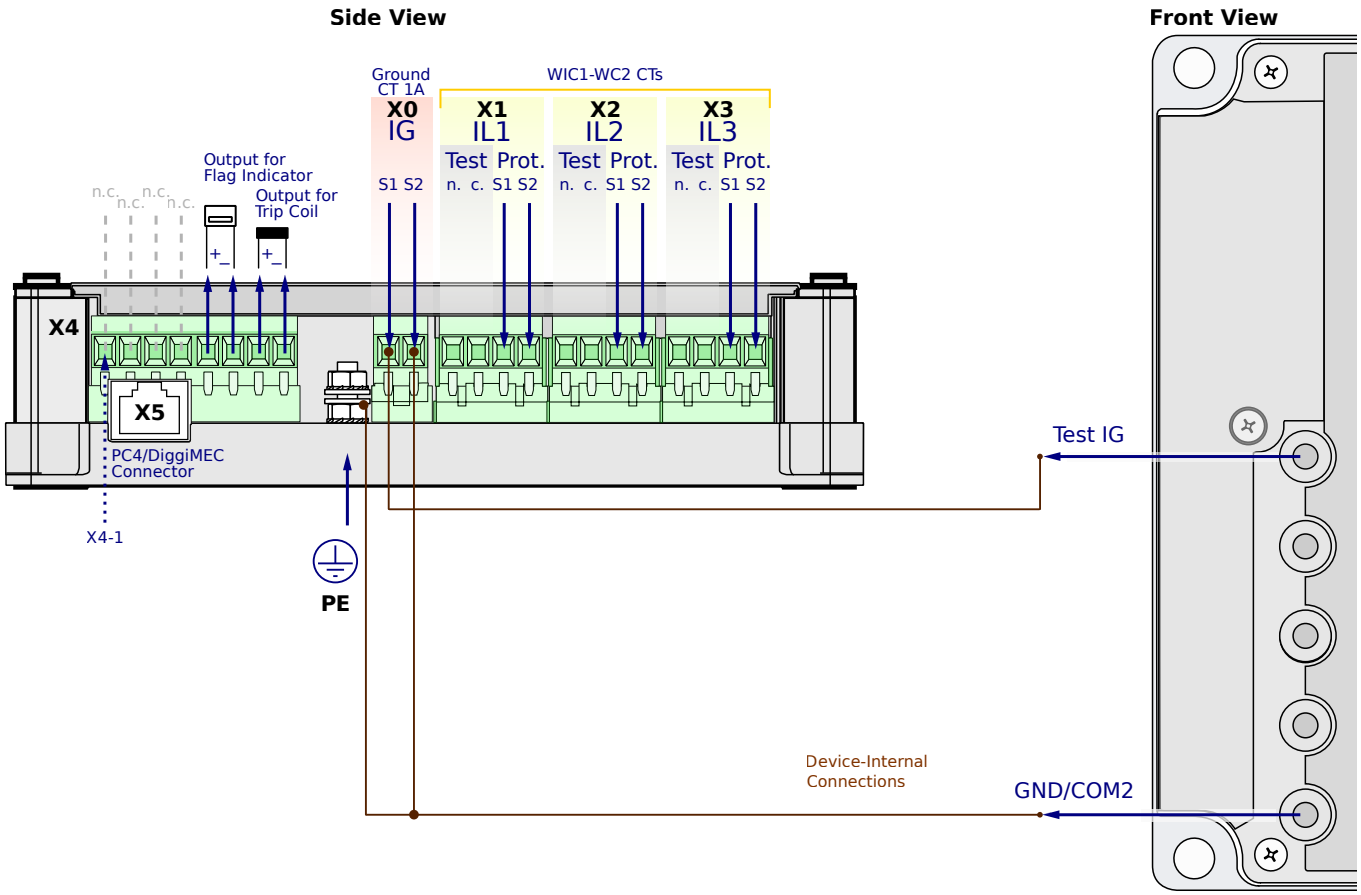


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1AAH

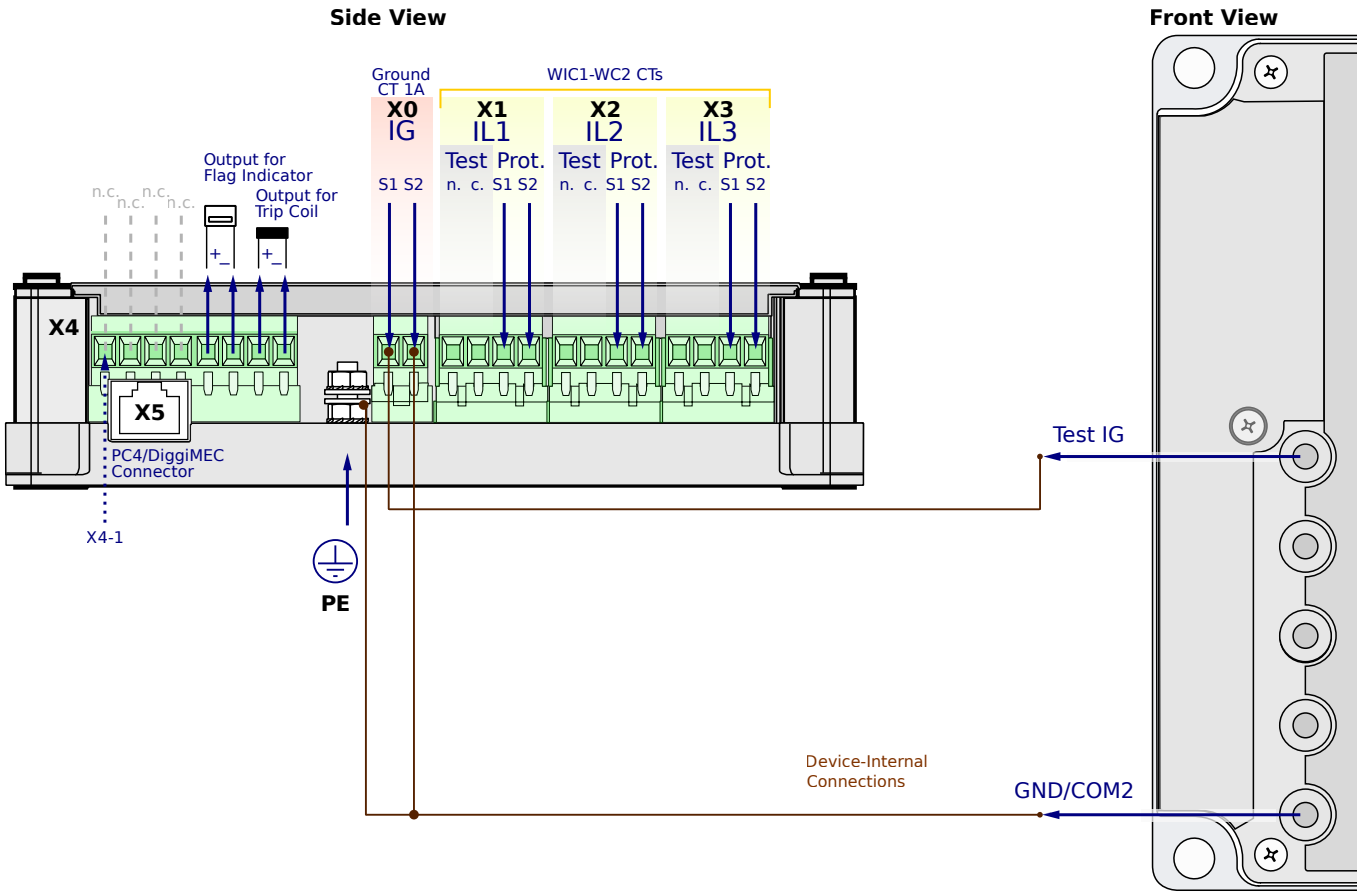


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1PA0

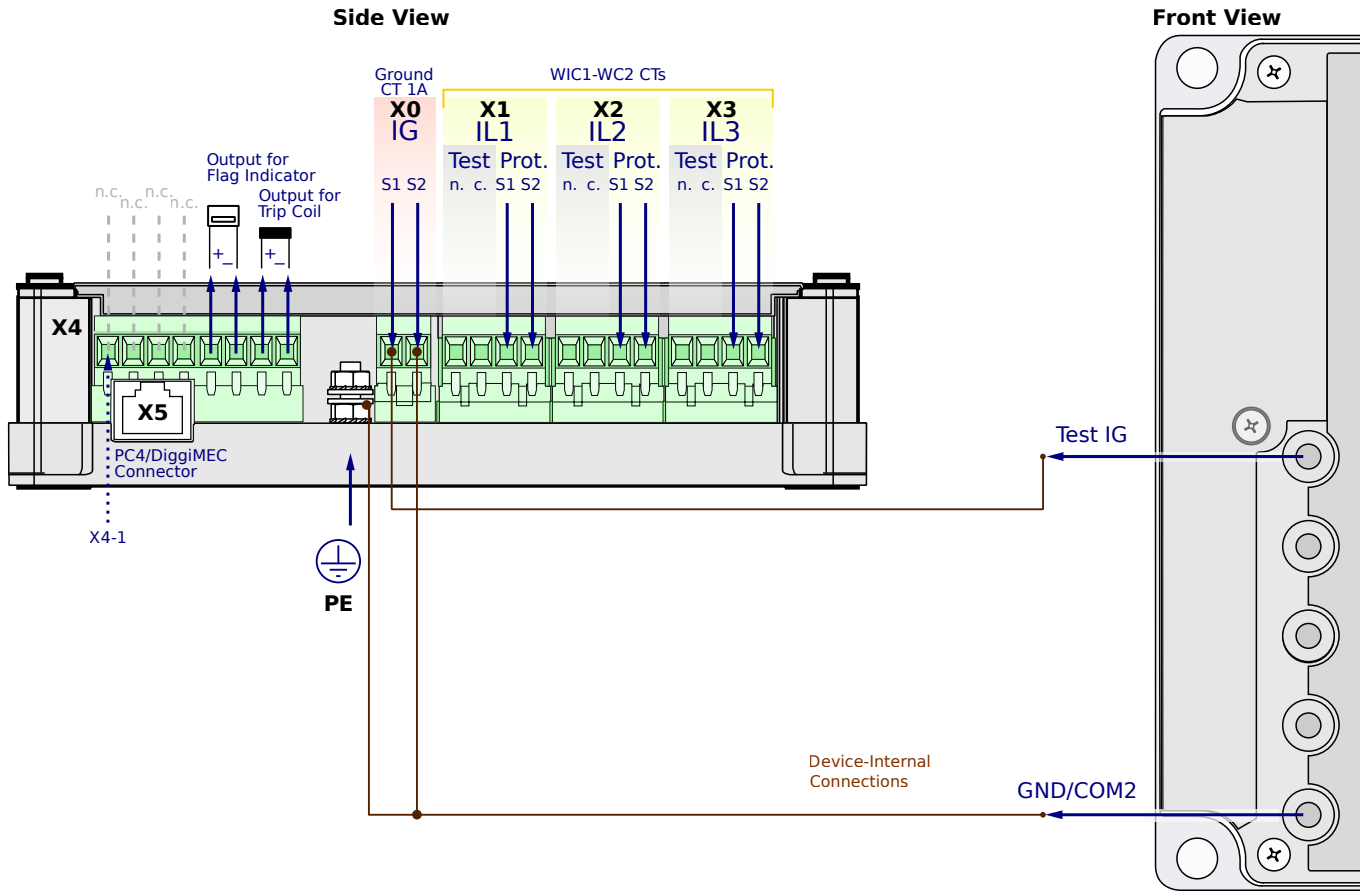


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN1PAH

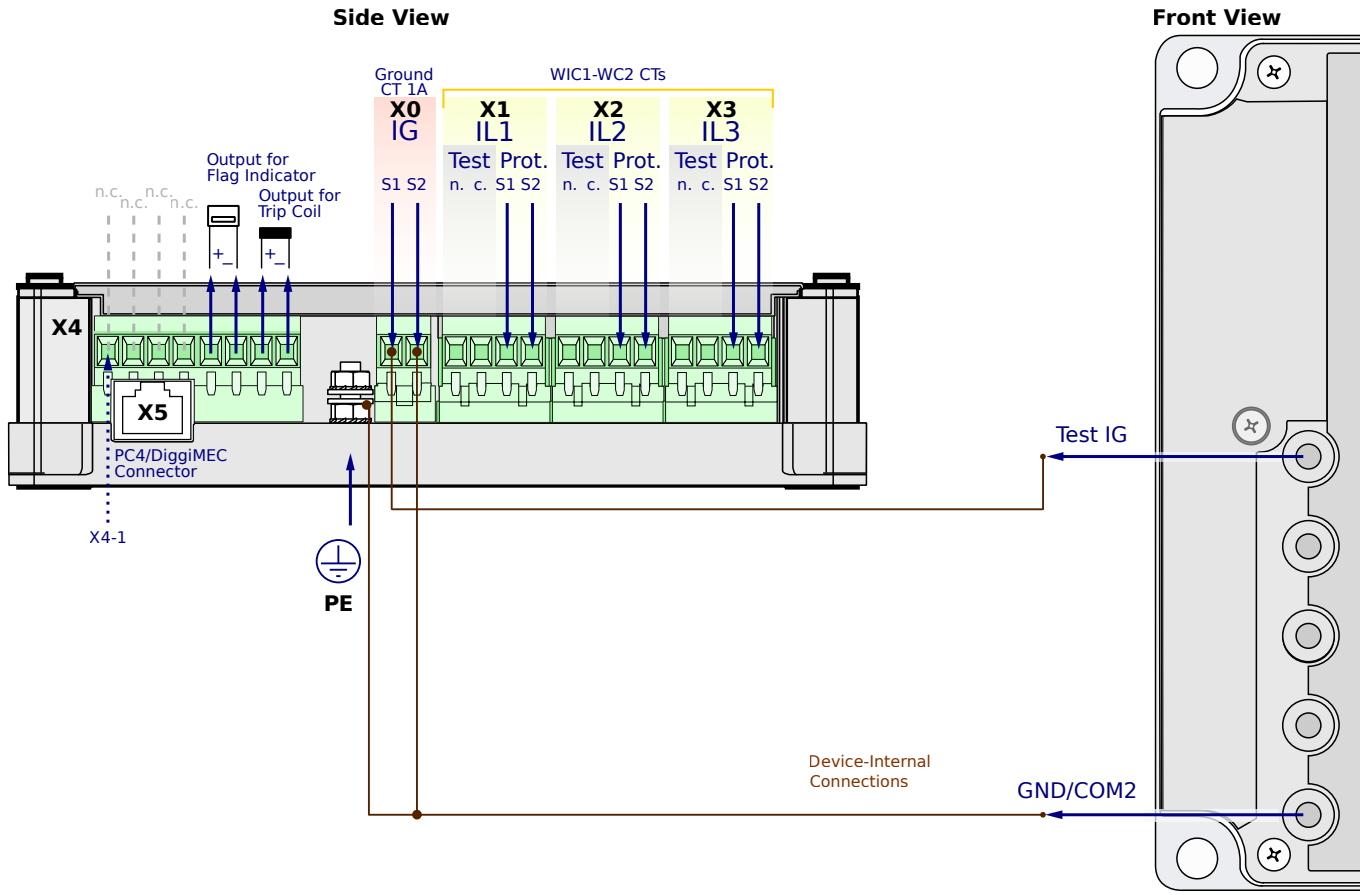


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2SA0

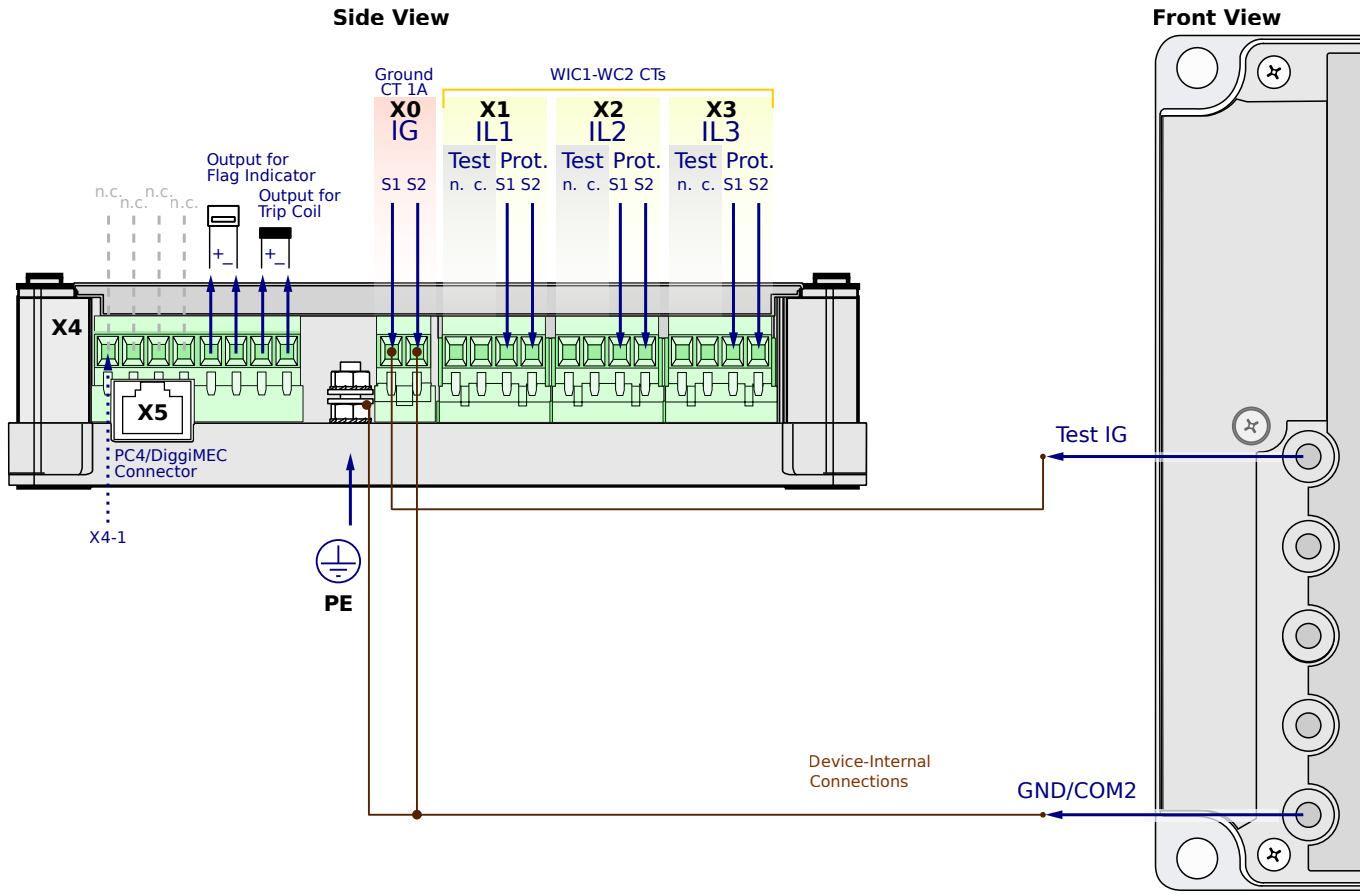


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2SAH

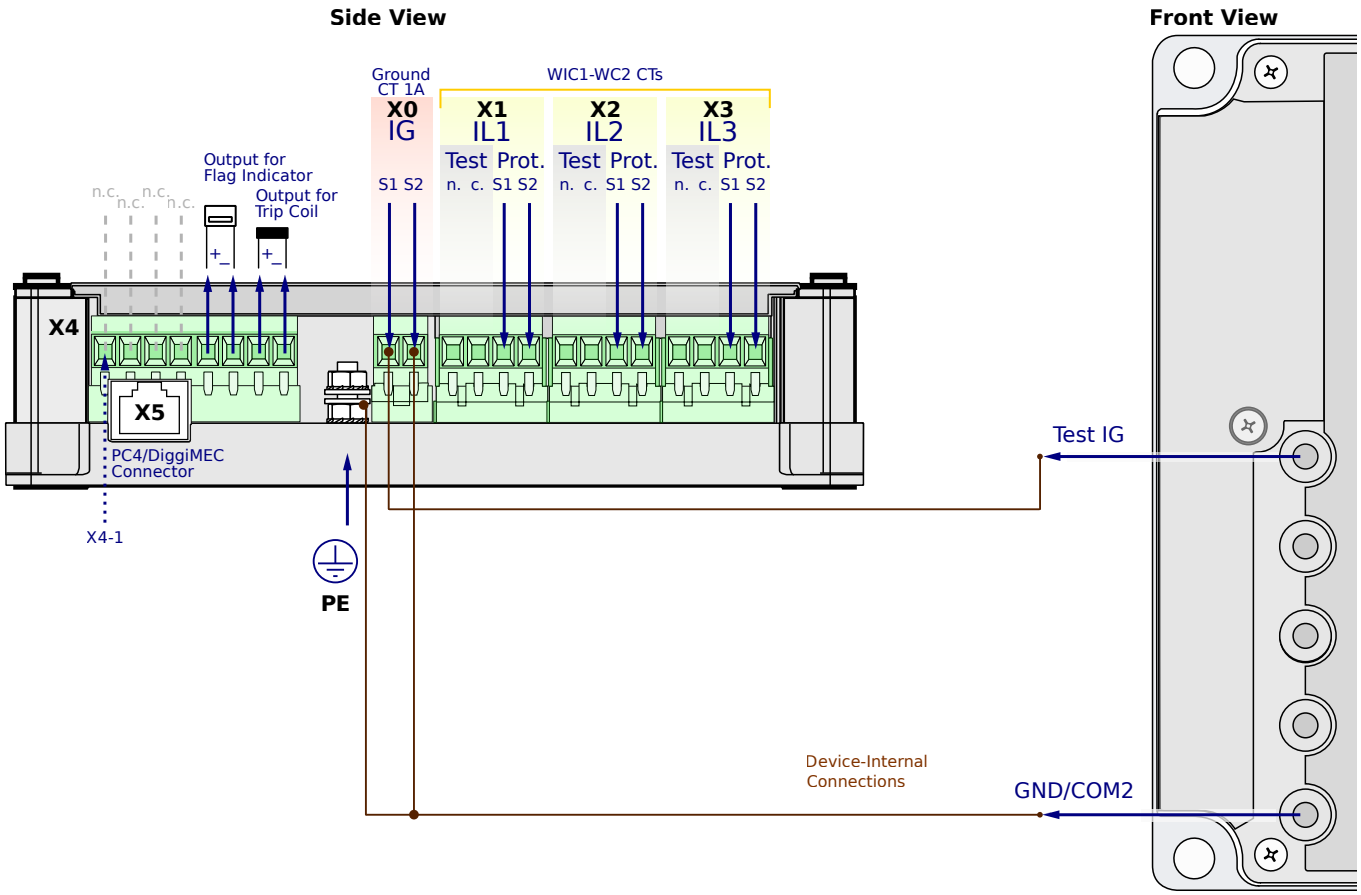


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2AA0

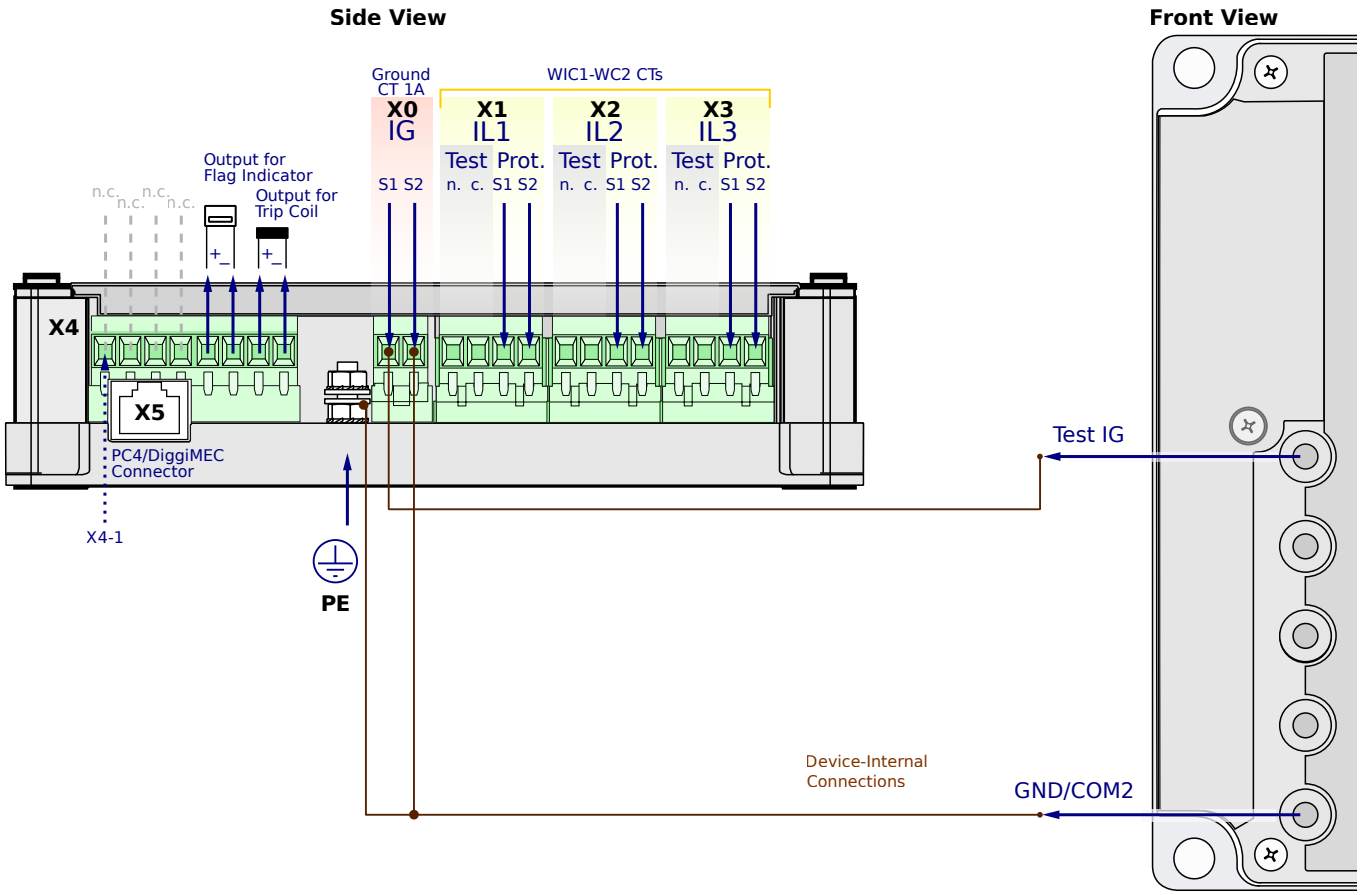


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2AAH

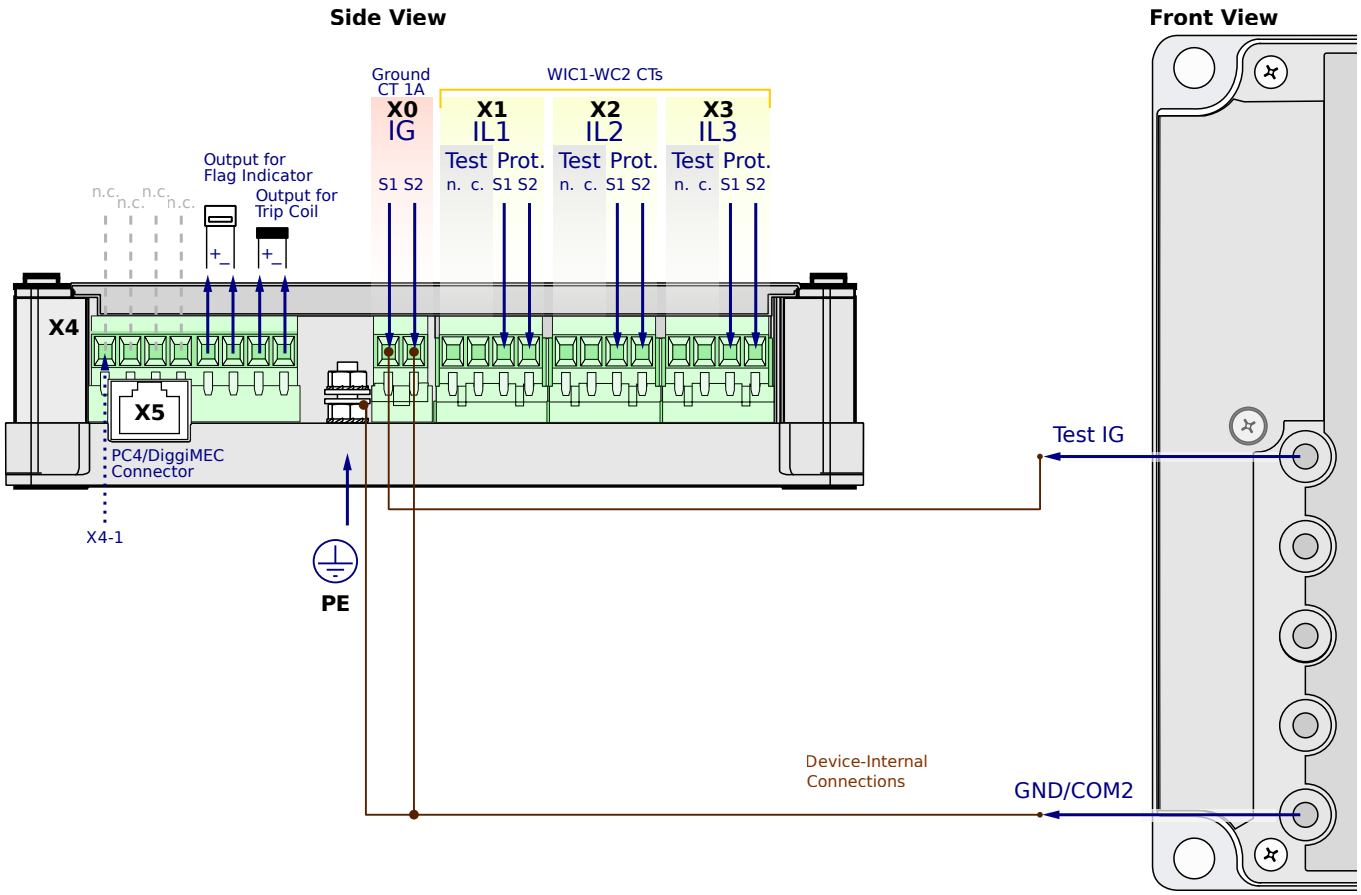


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2PA0

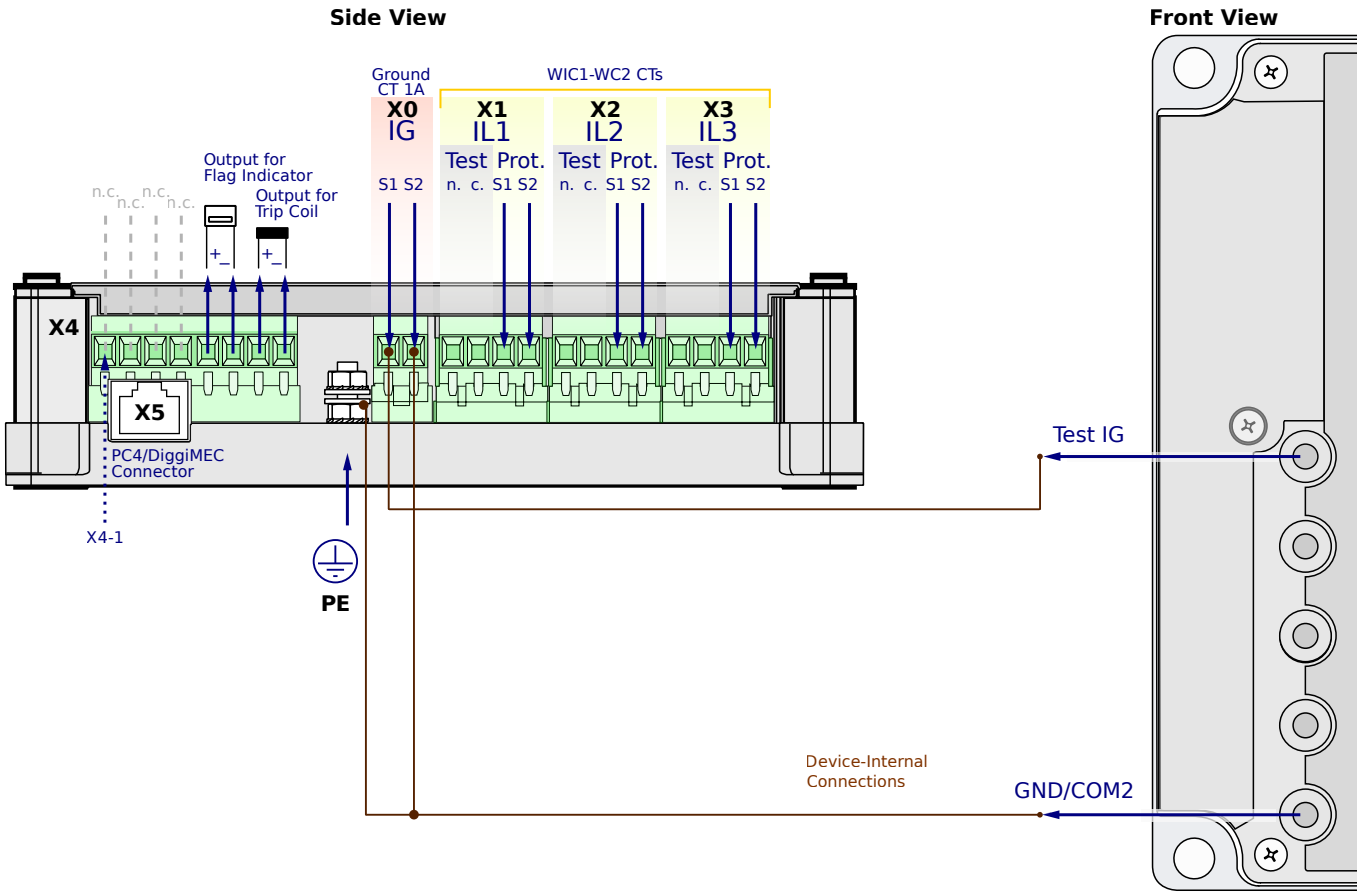


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CN2PAH

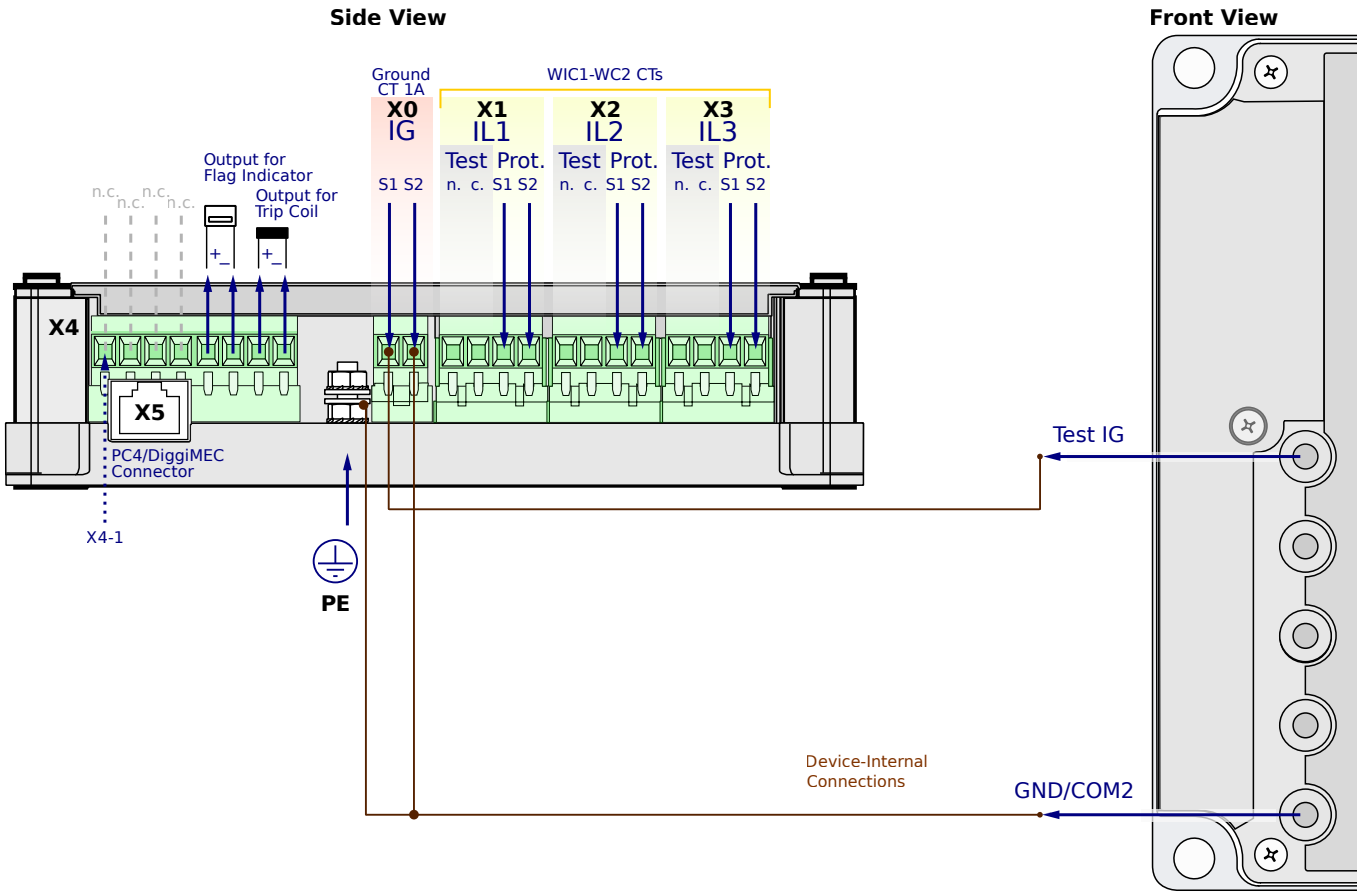


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1SA0

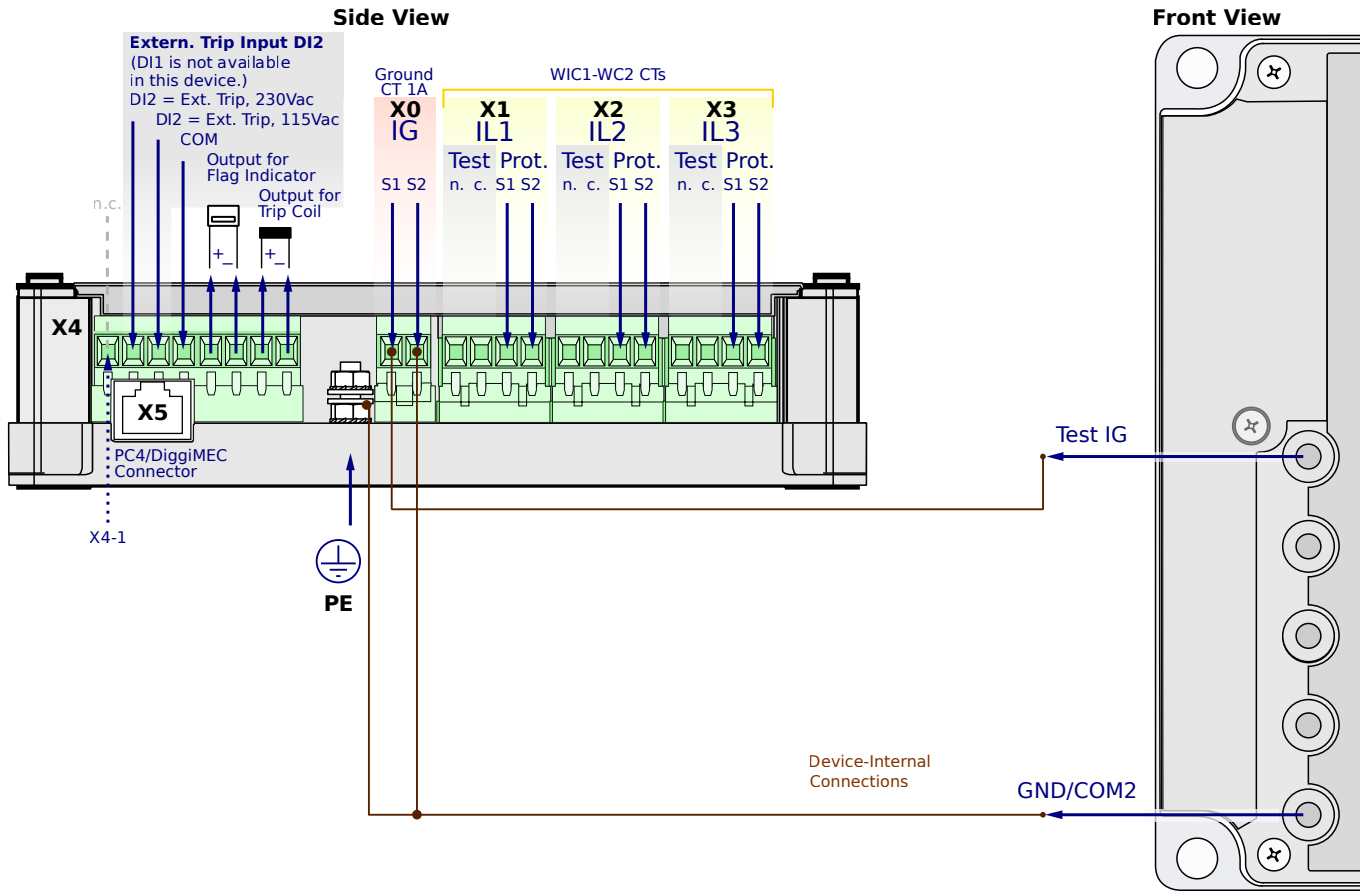


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1SAH

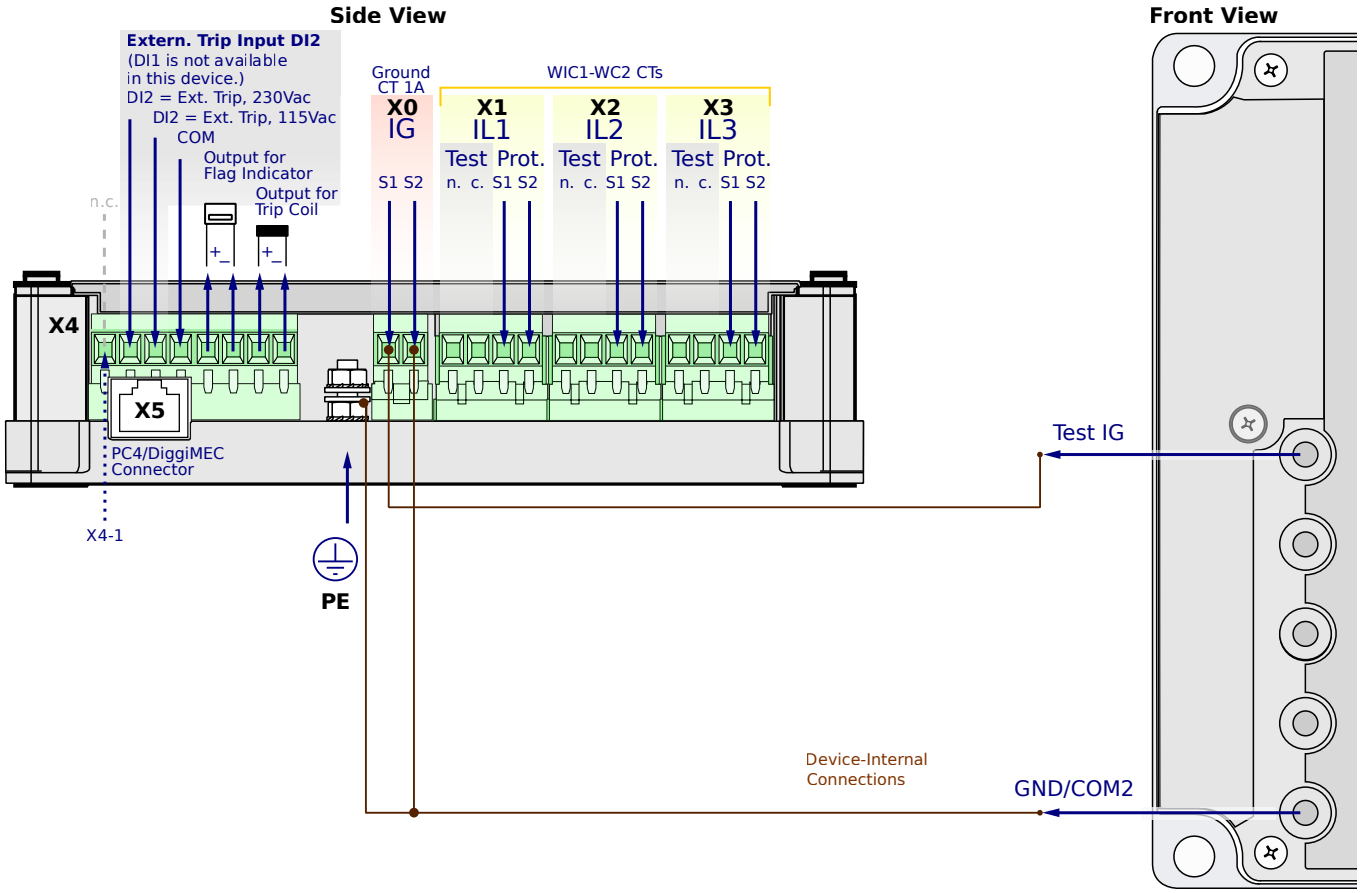


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1AA0

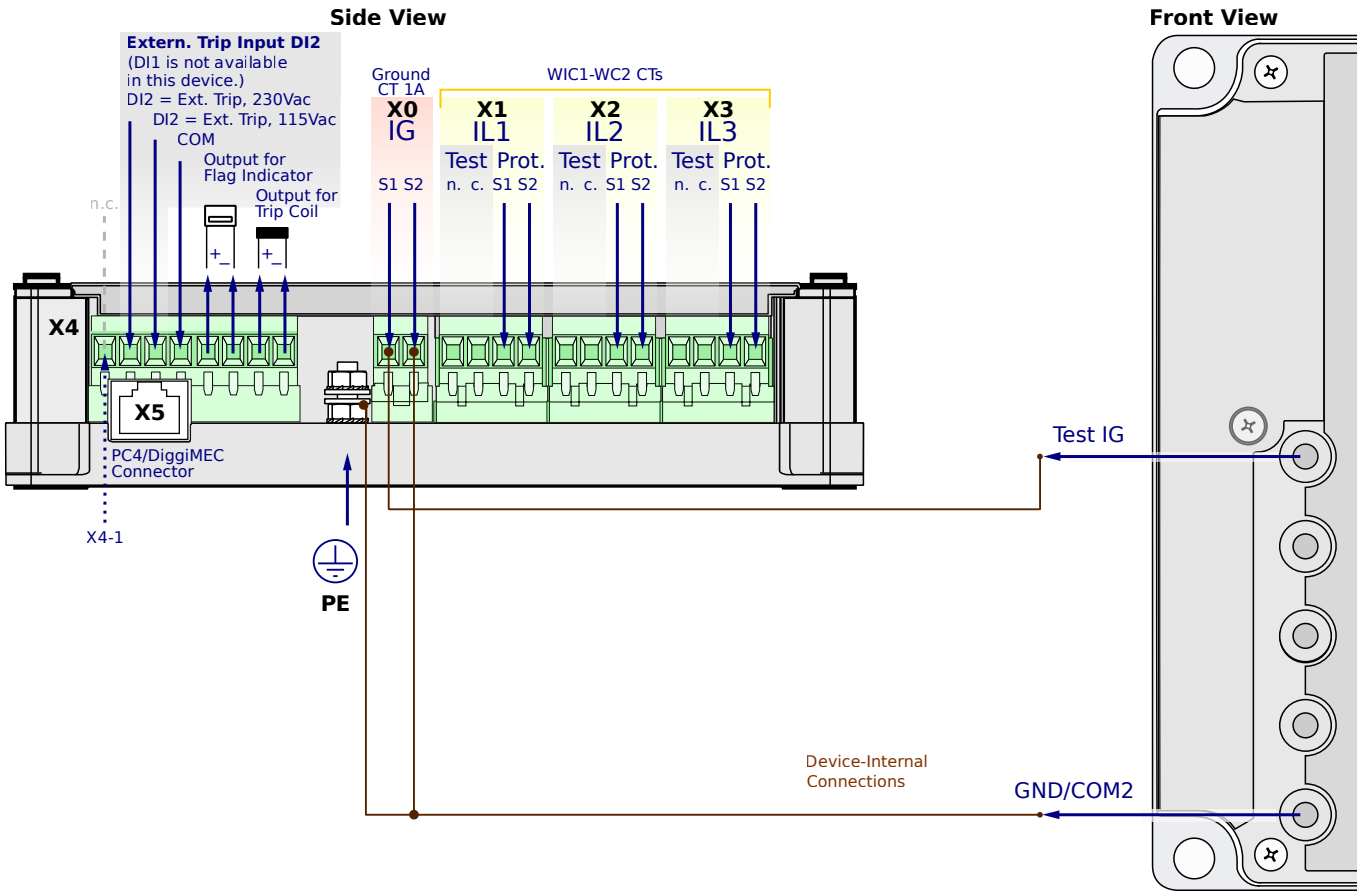


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1AAH

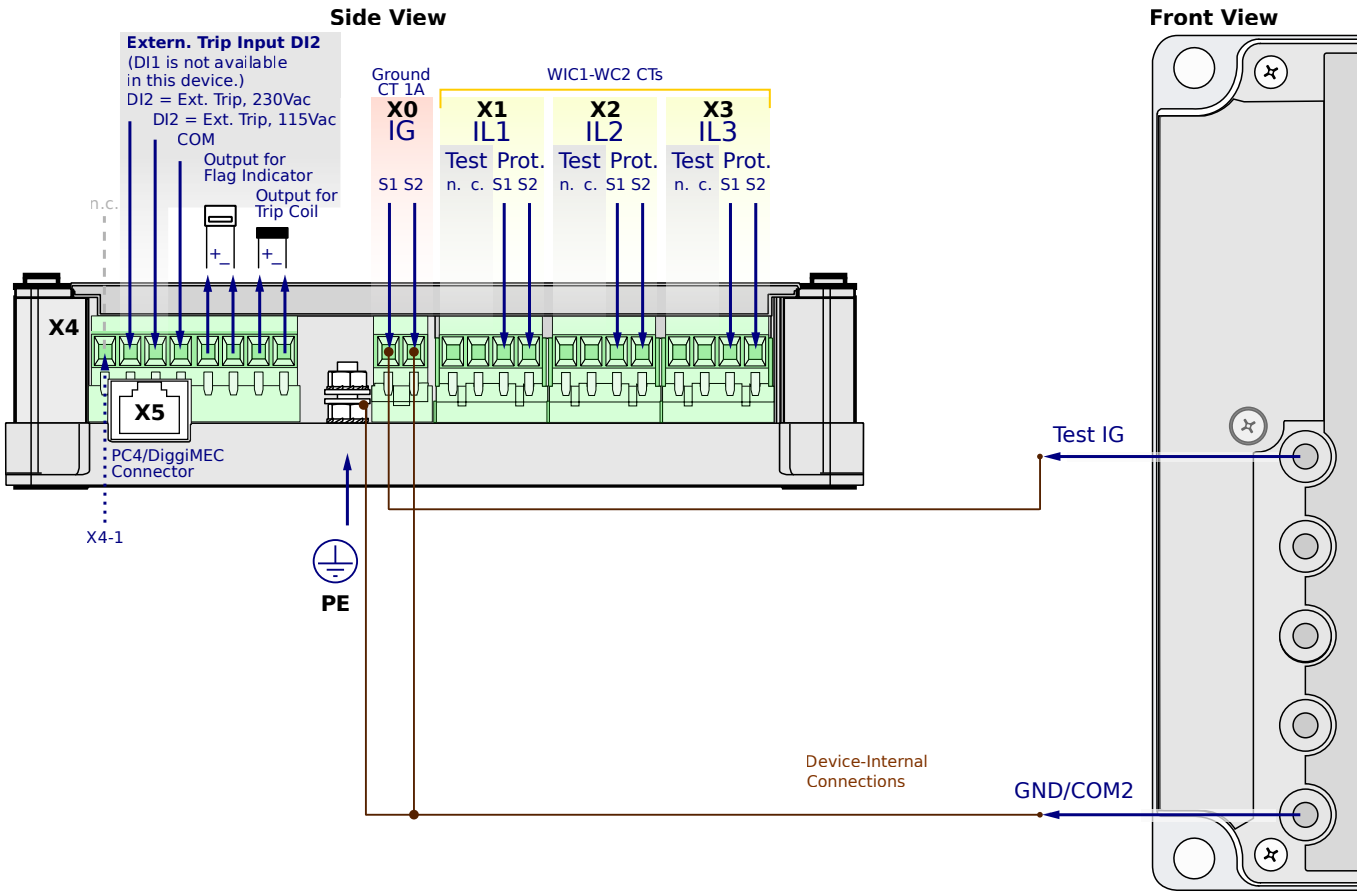


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1PA0

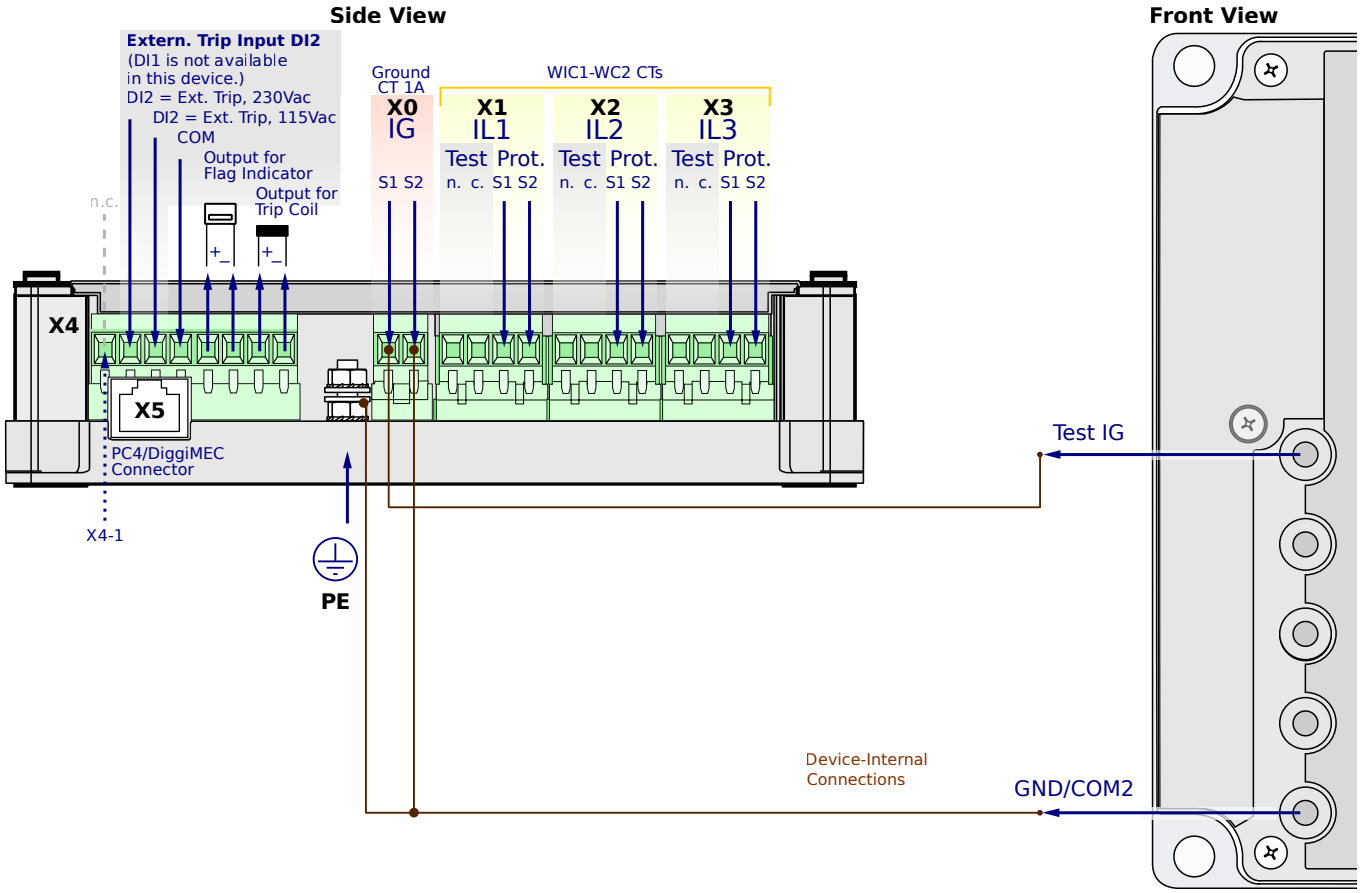


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF1PAH

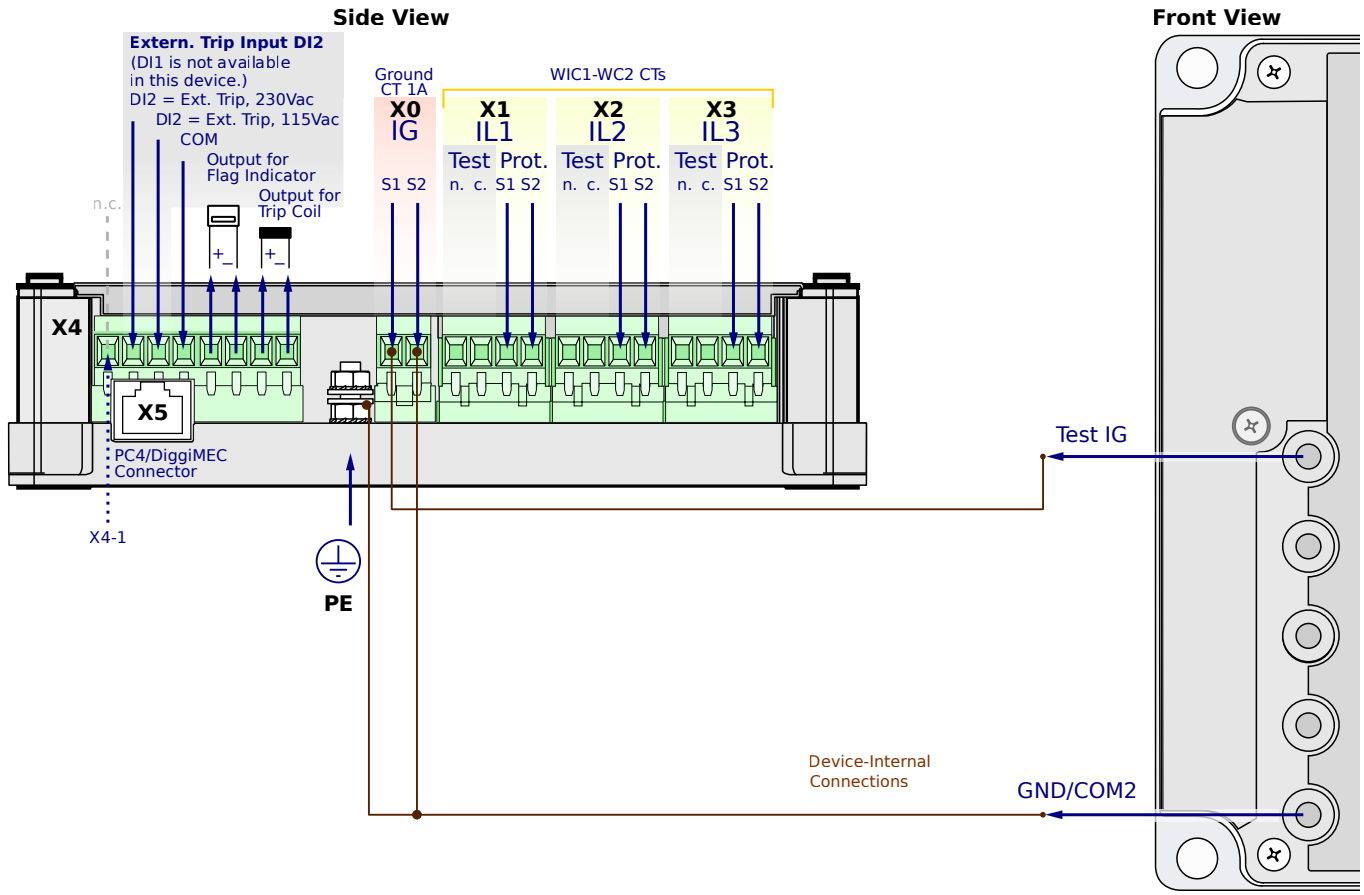


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2SA0

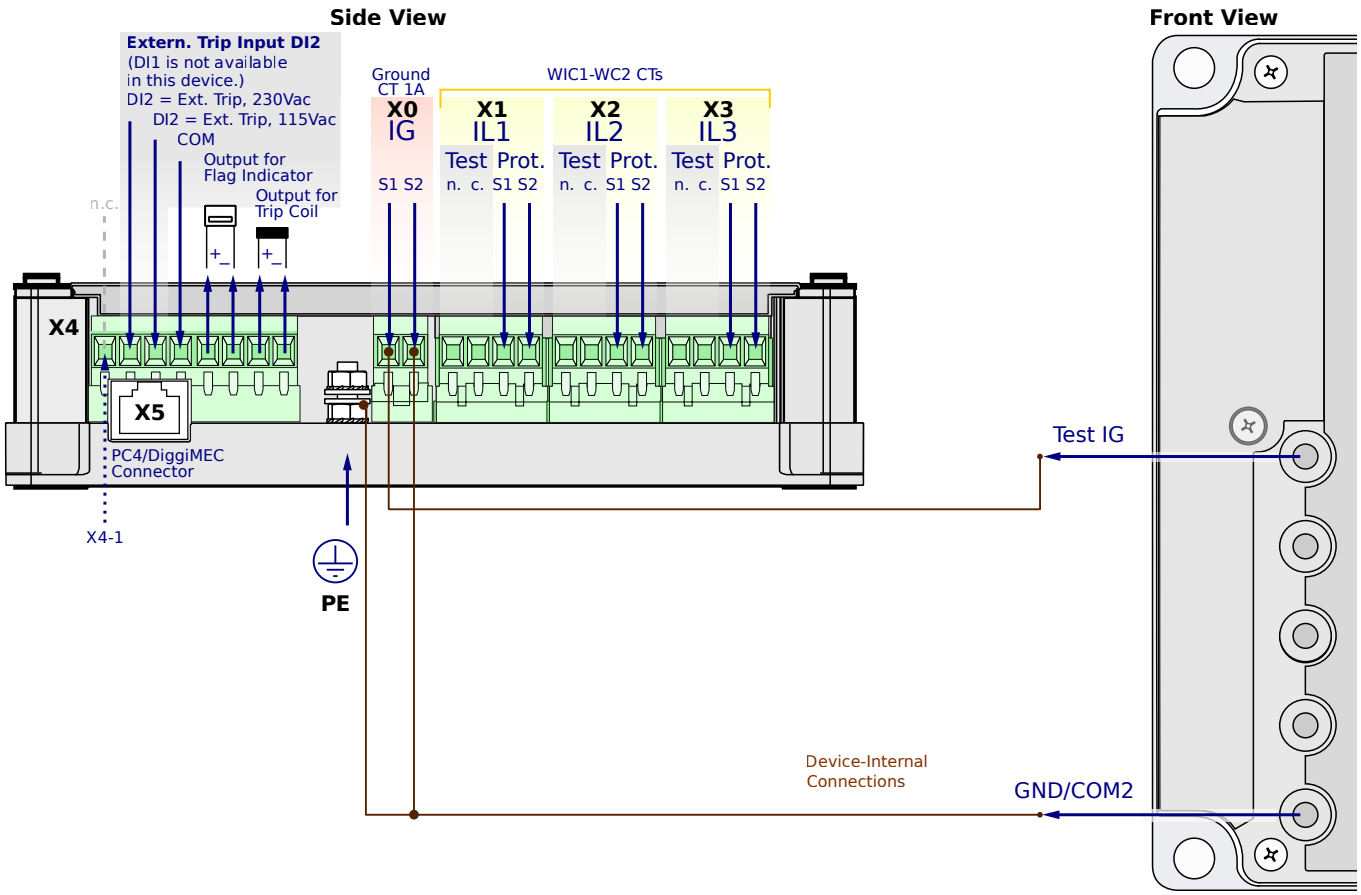


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2SAH

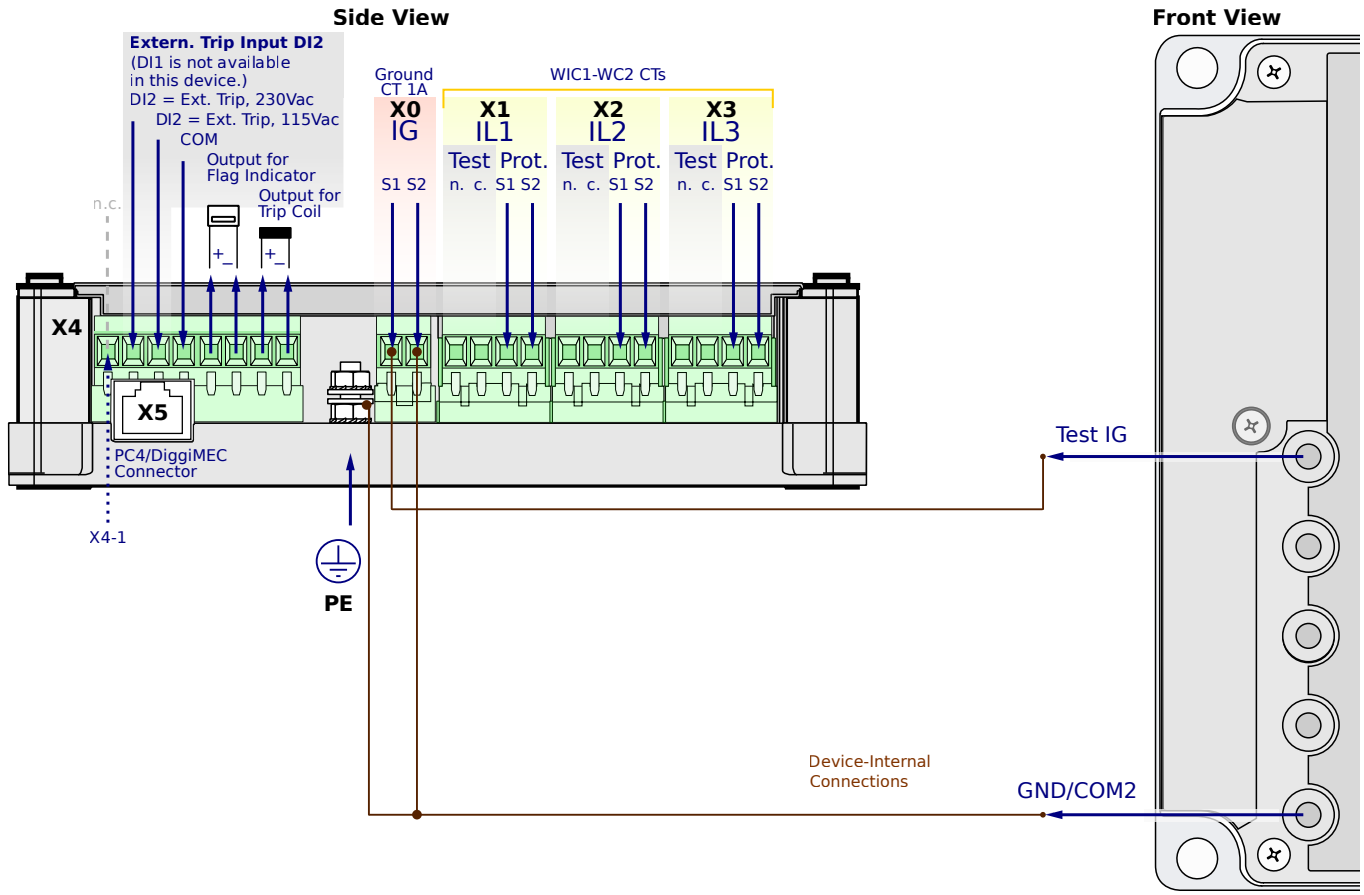


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2AA0

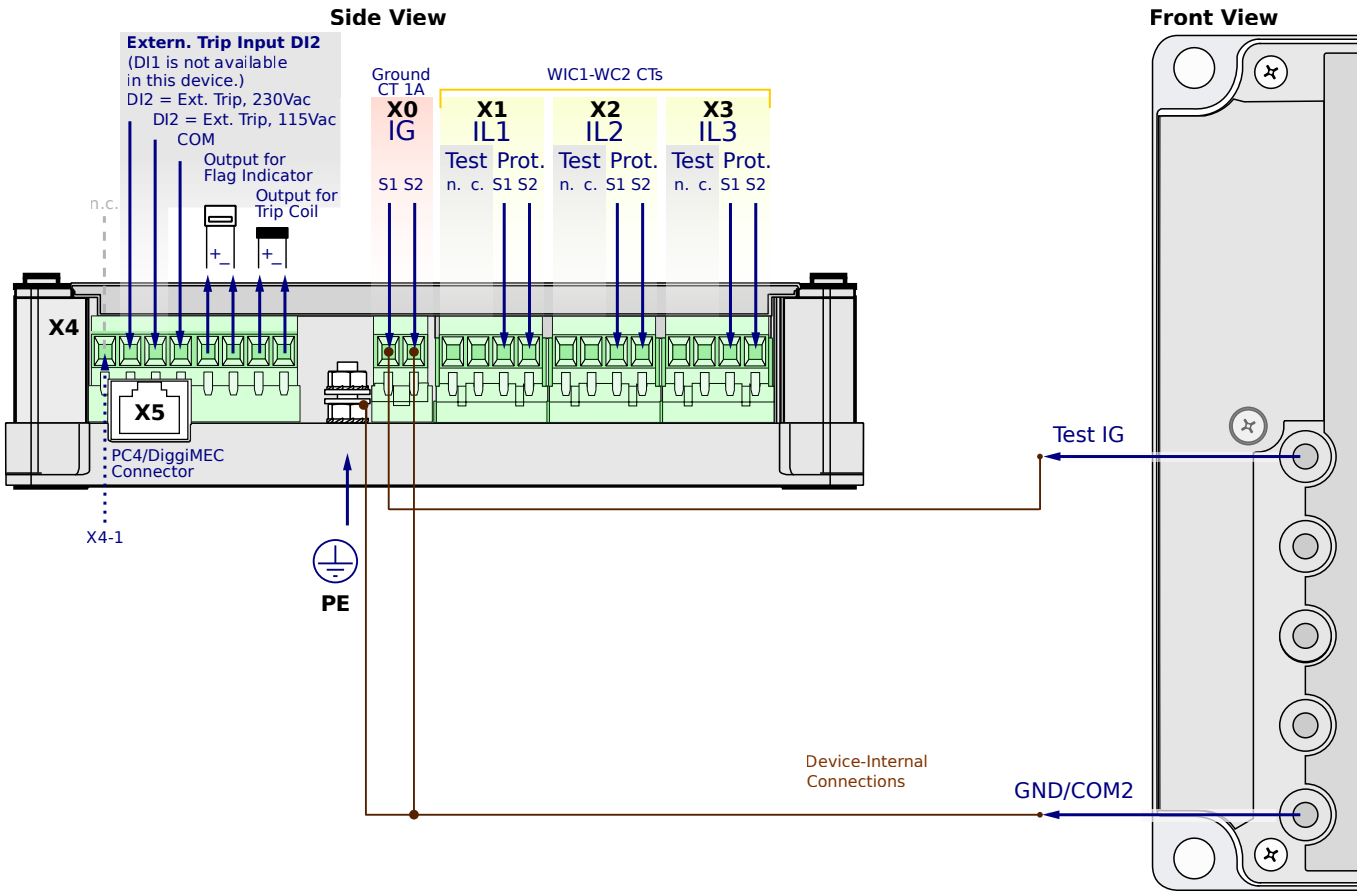


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2AAH

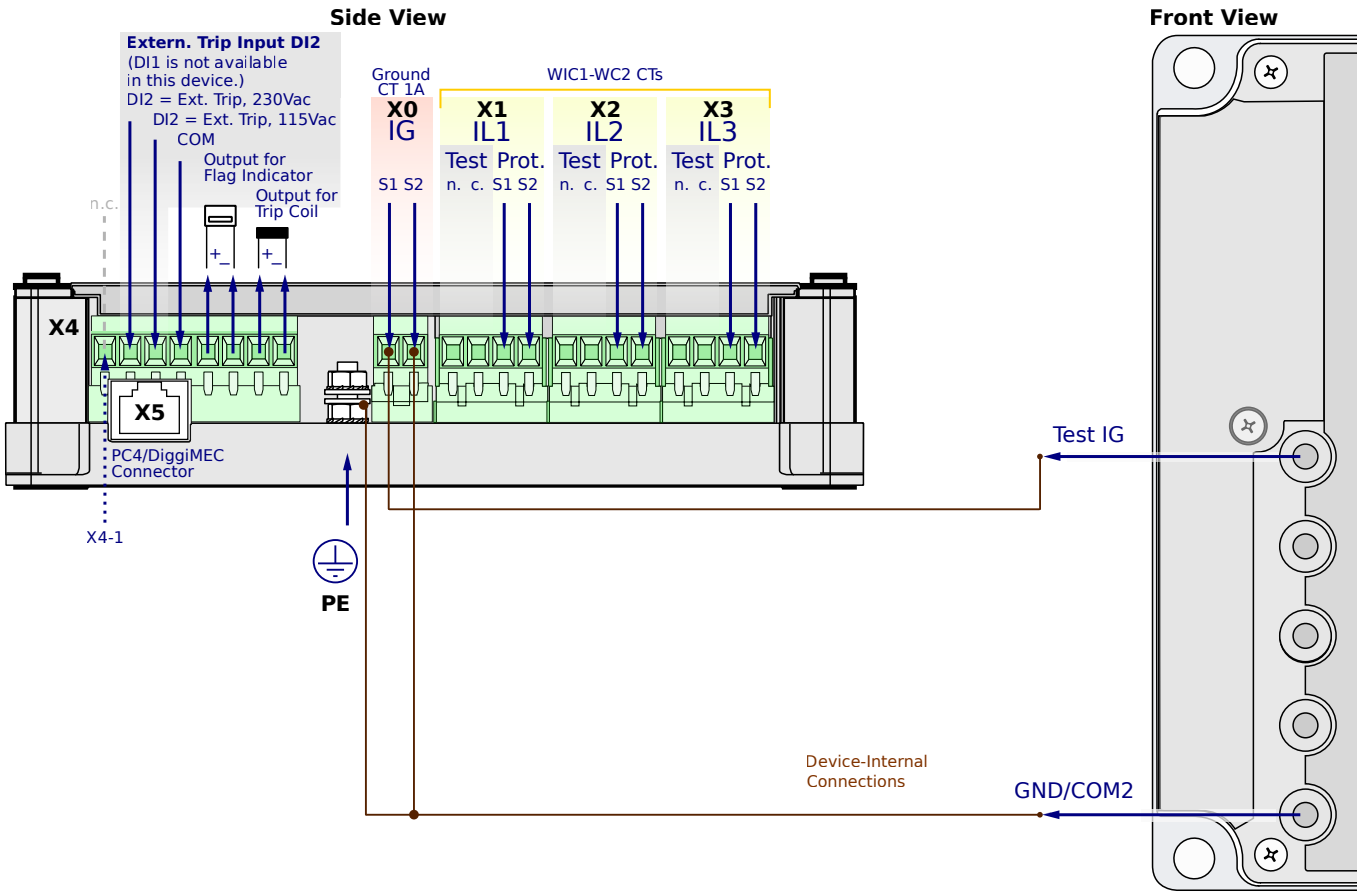


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2PA0

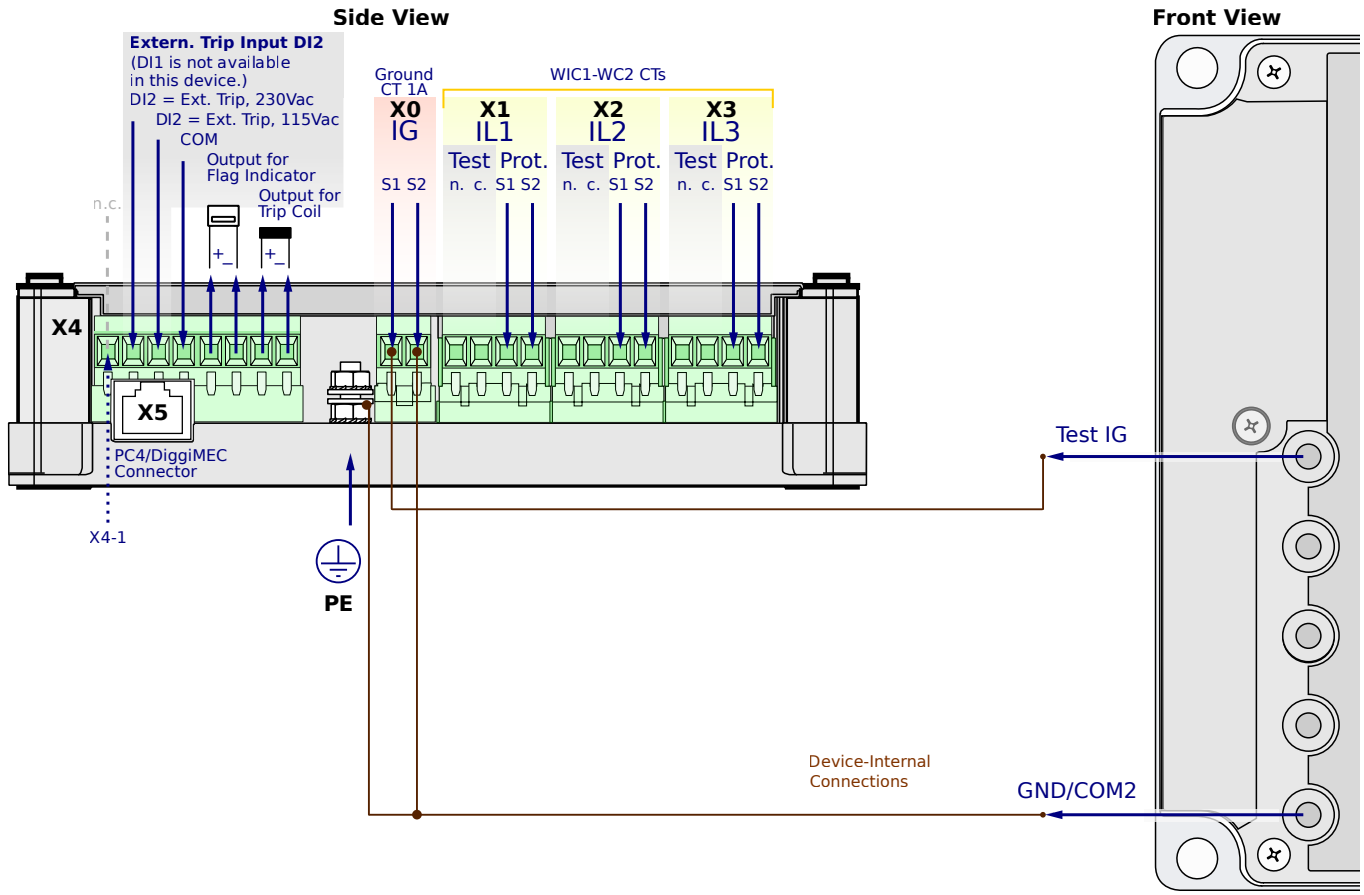


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CF2PAH

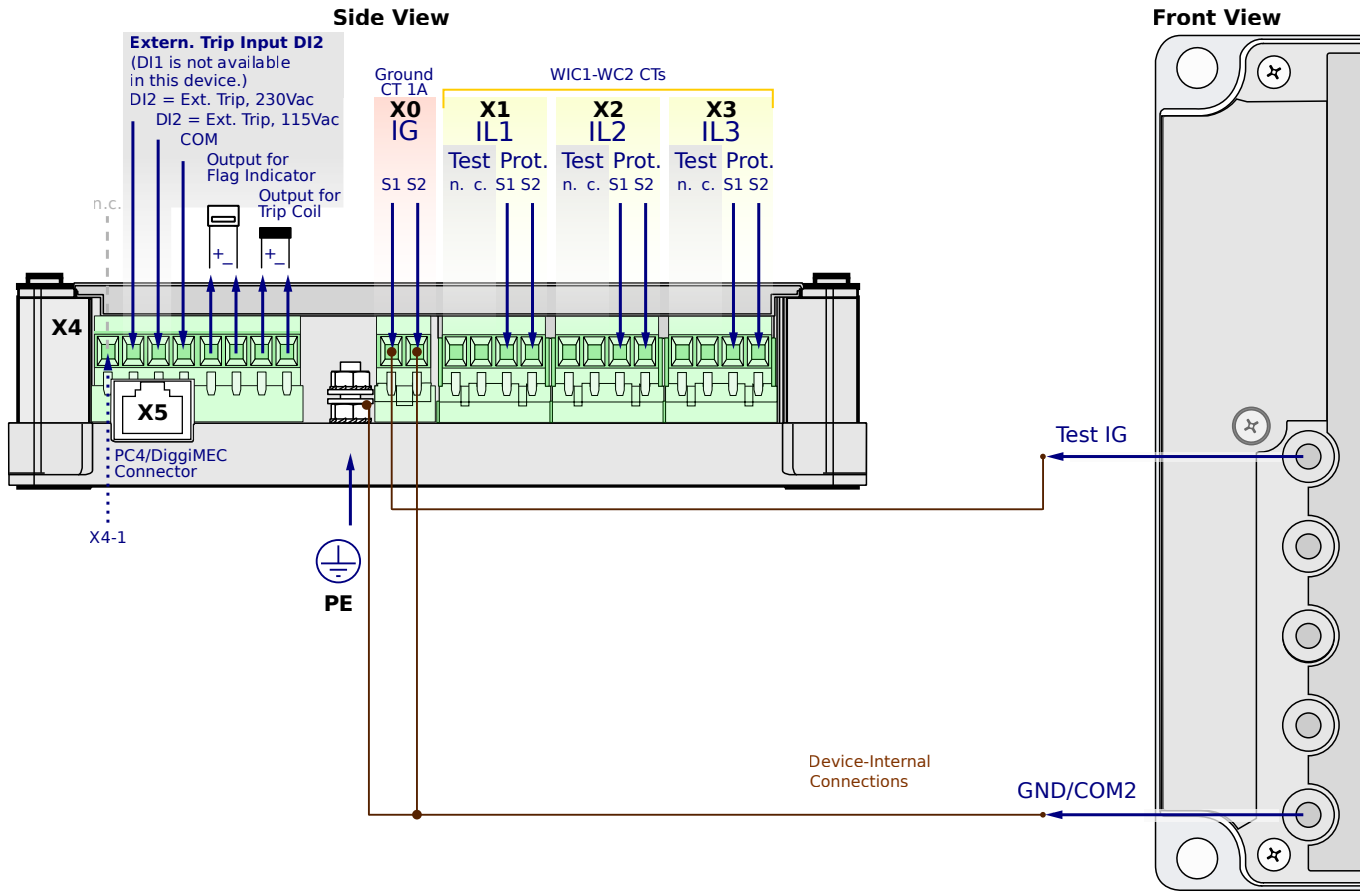


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1SA0

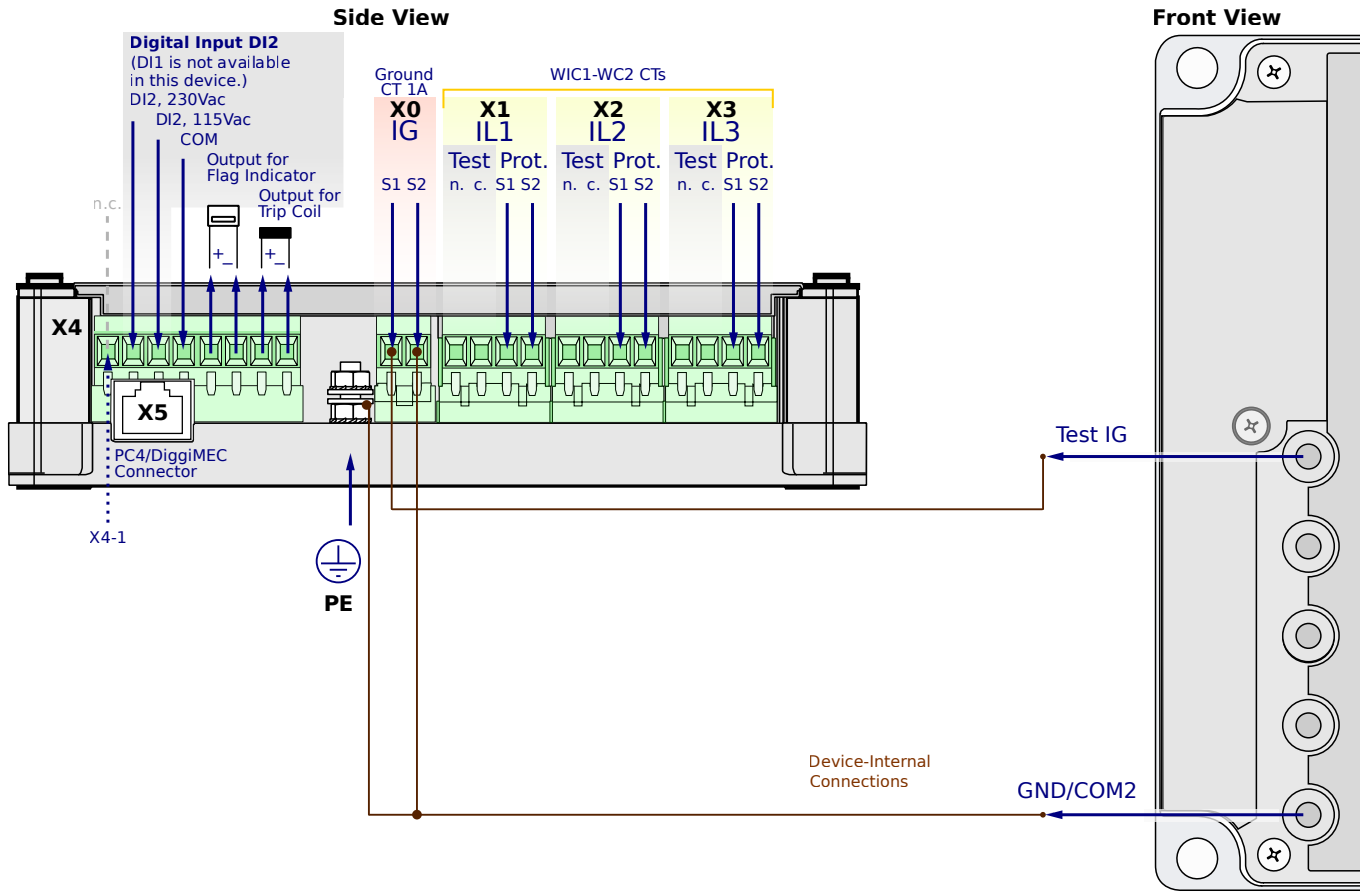


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1SAH

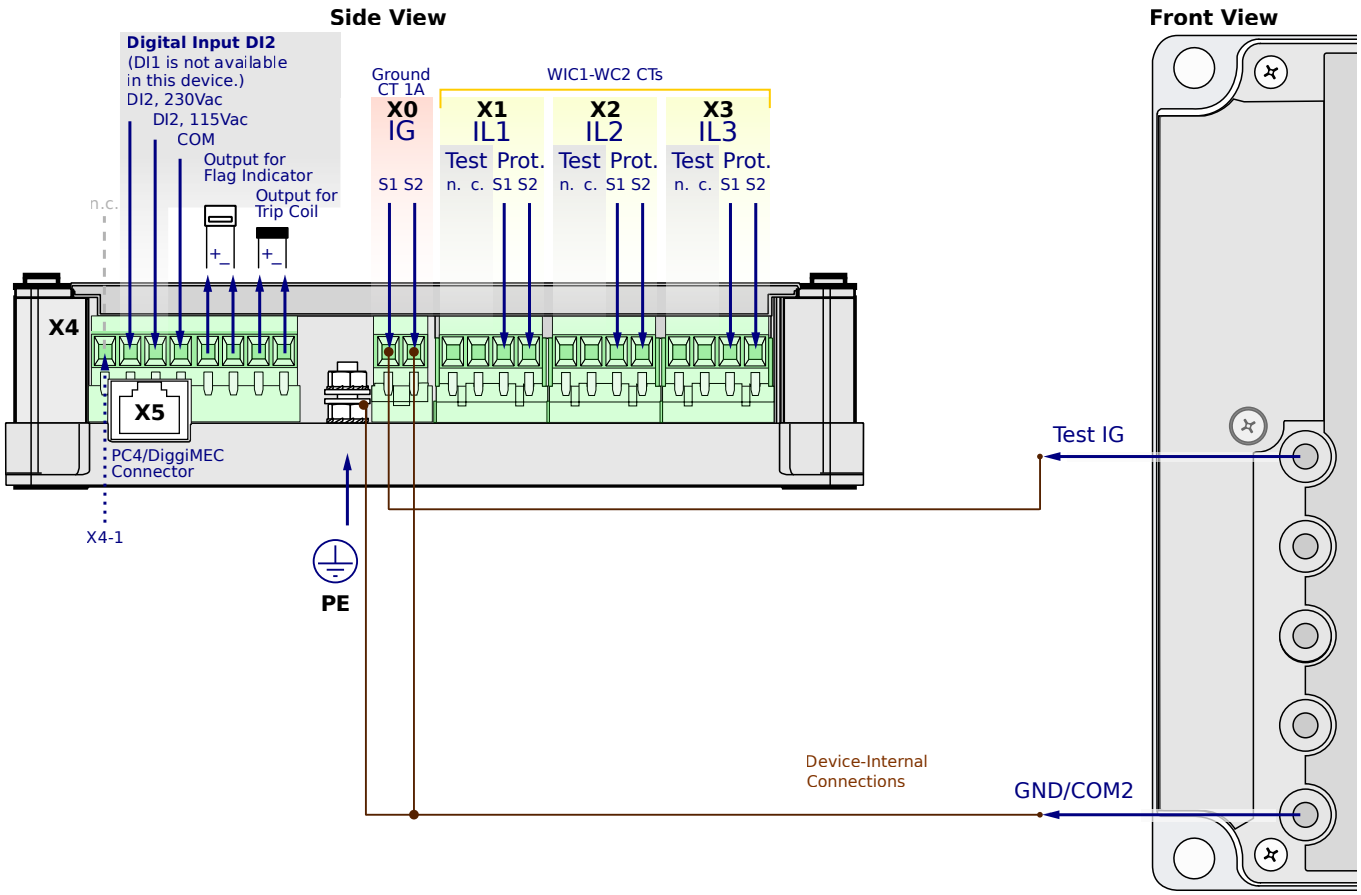


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1AA0

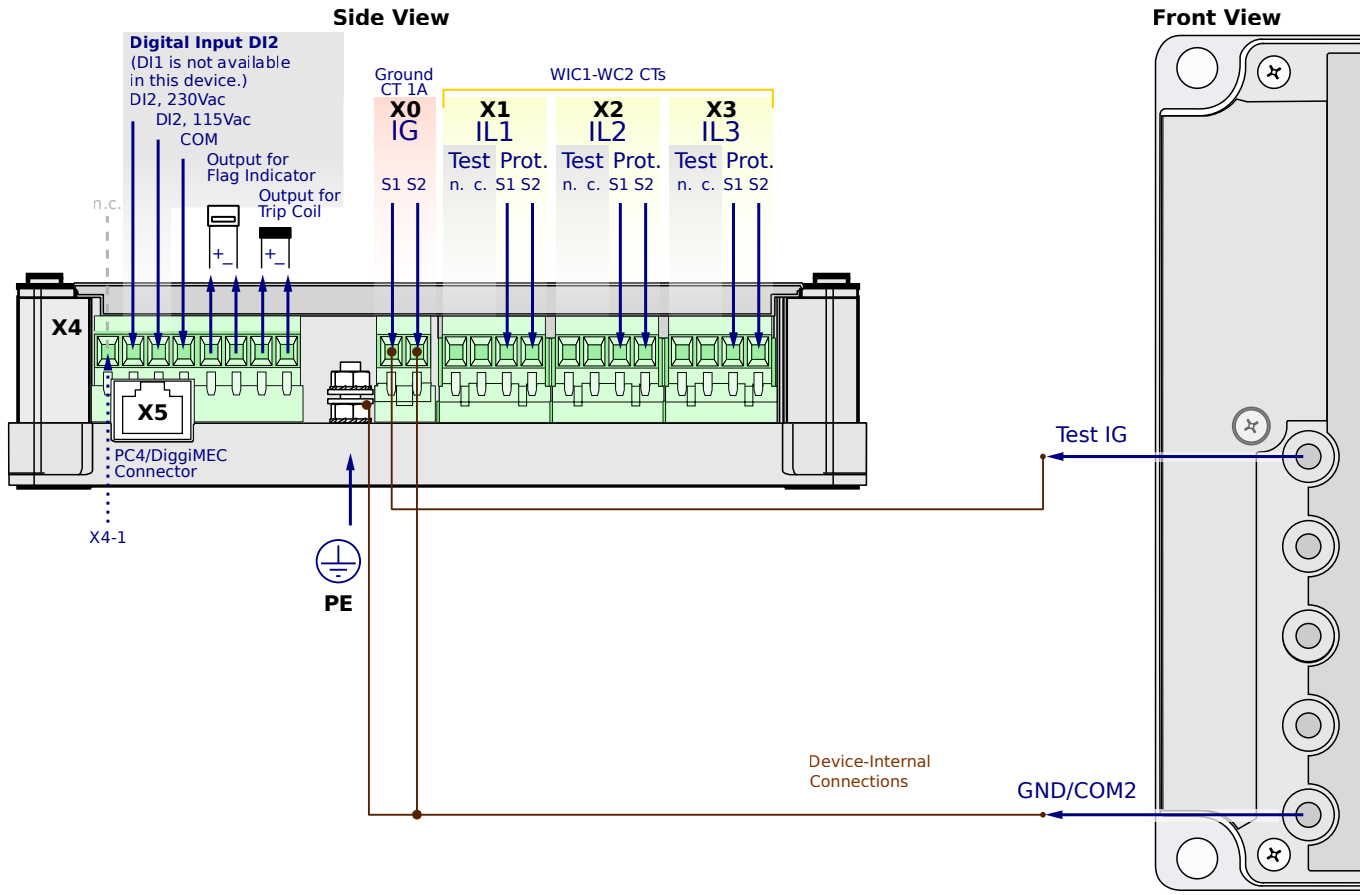


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1AAH

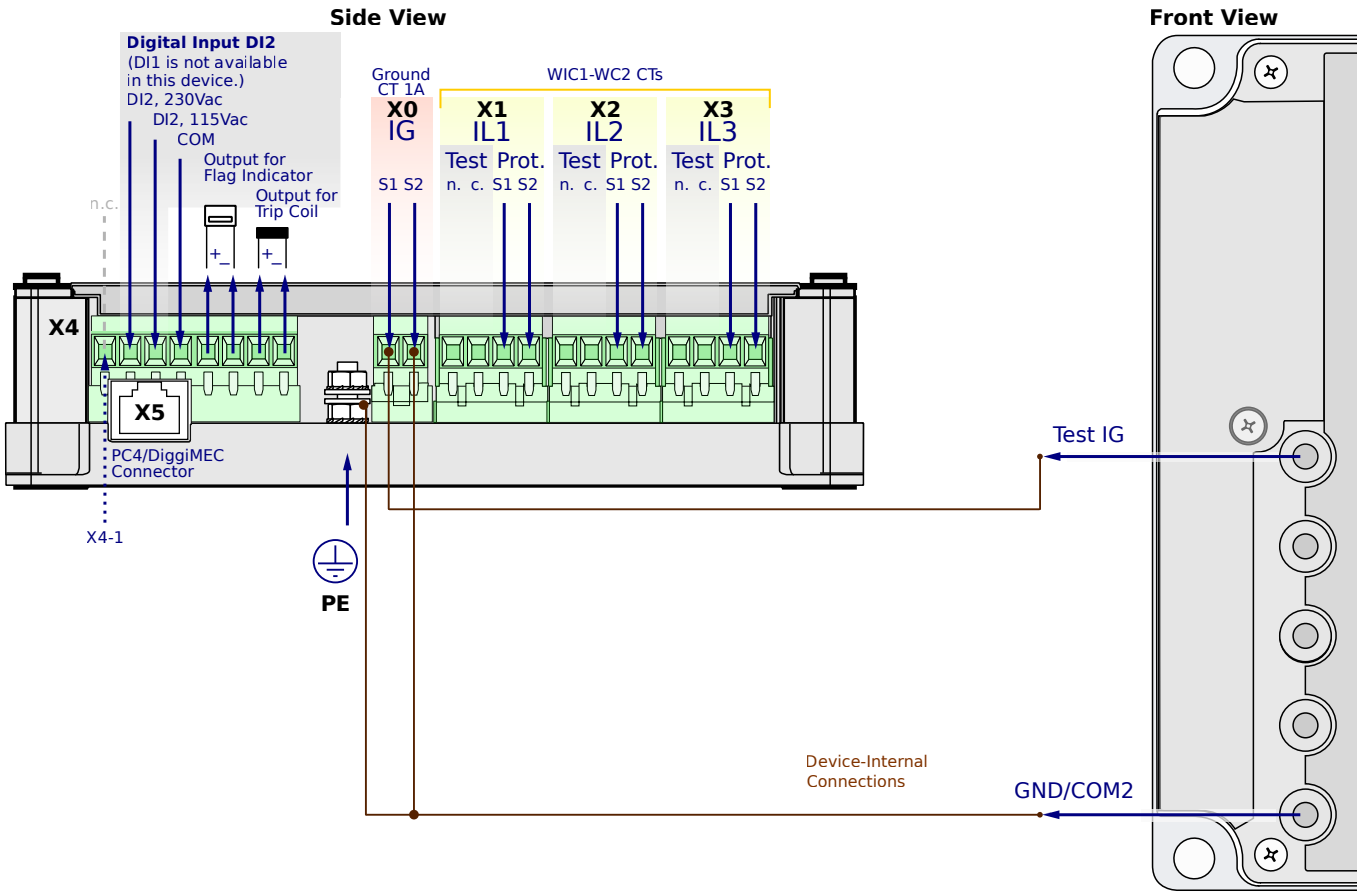


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1PA0

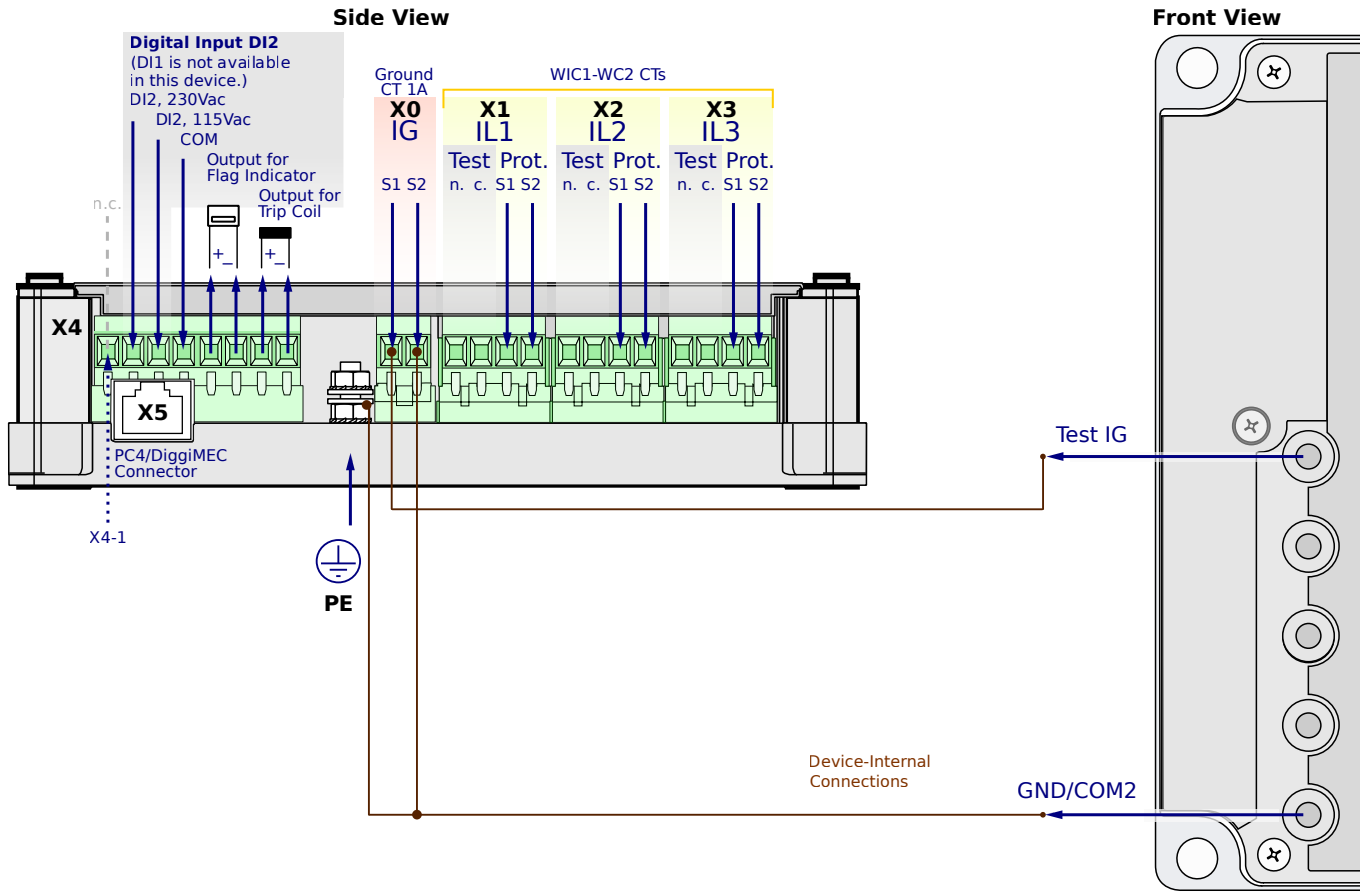


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC1PAH

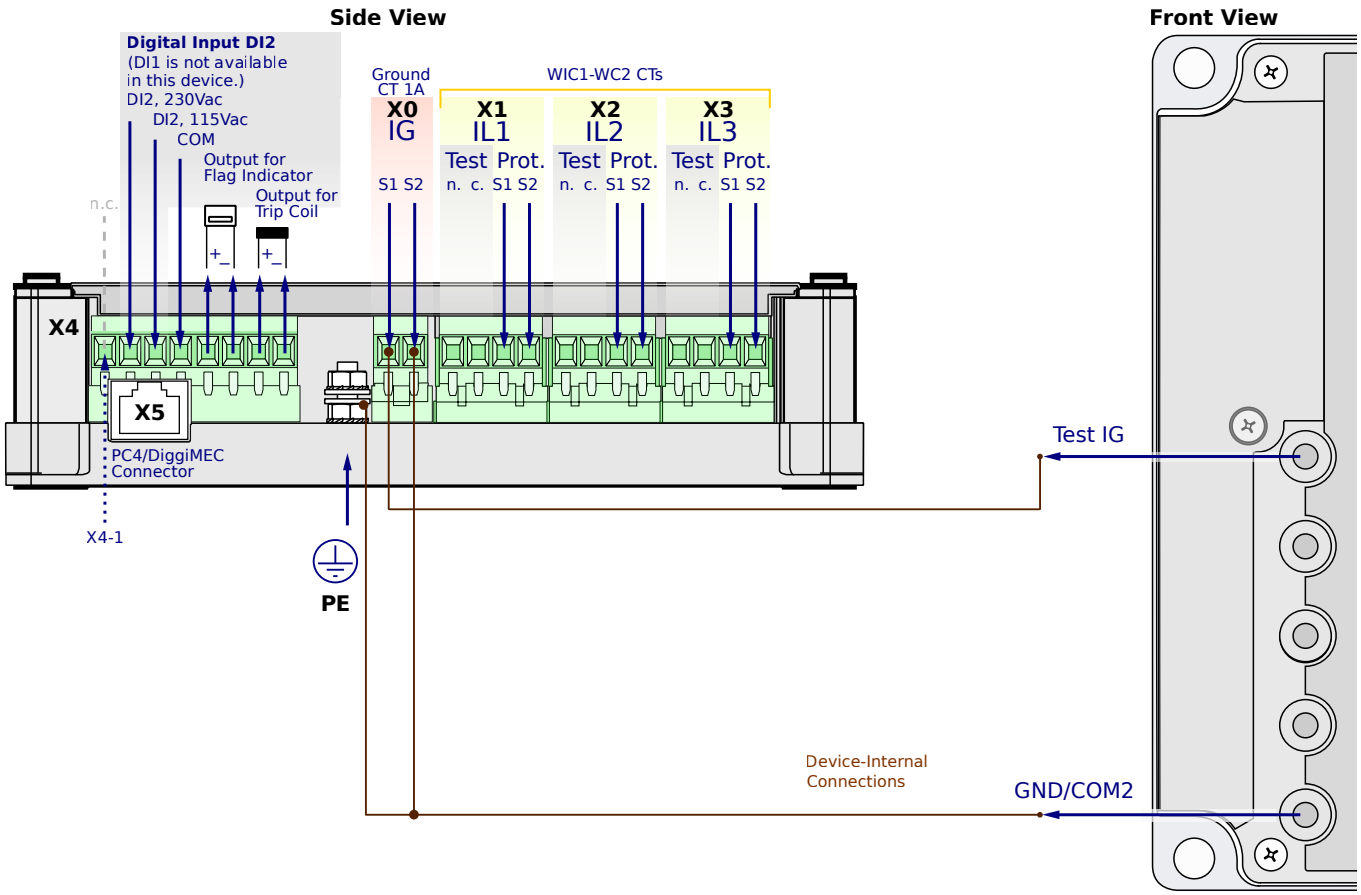


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2SA0

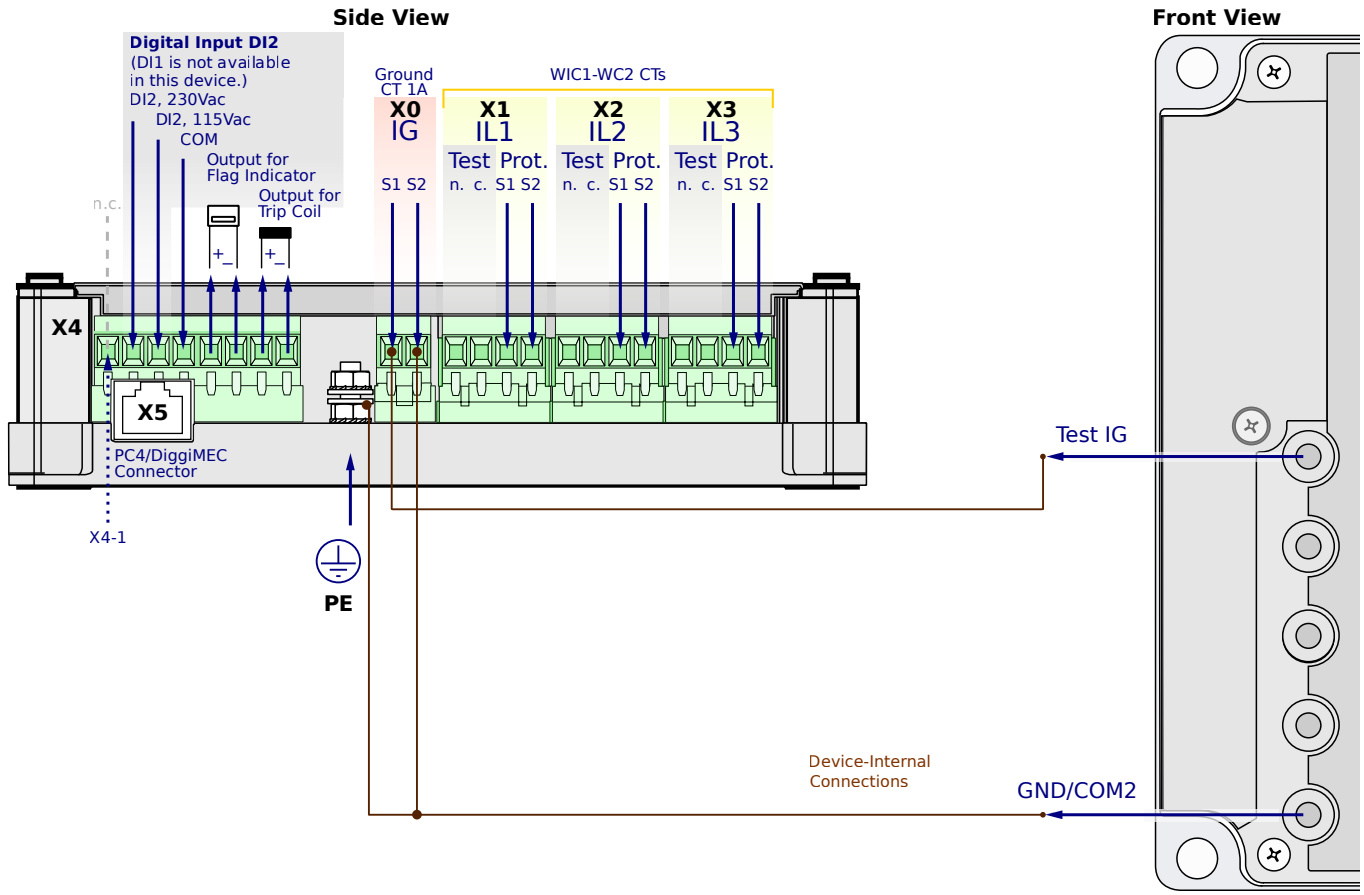


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2SAH

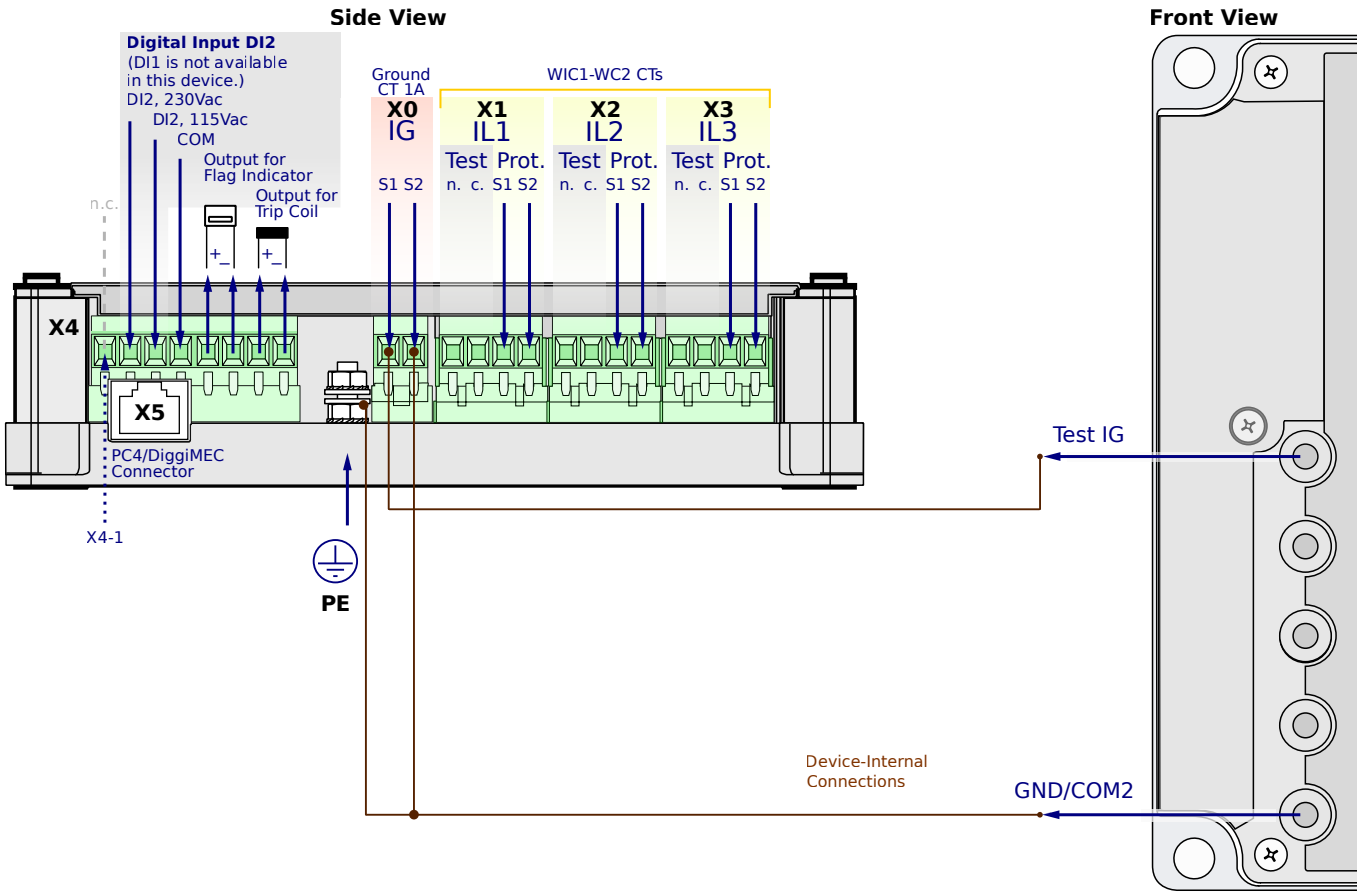


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2AA0

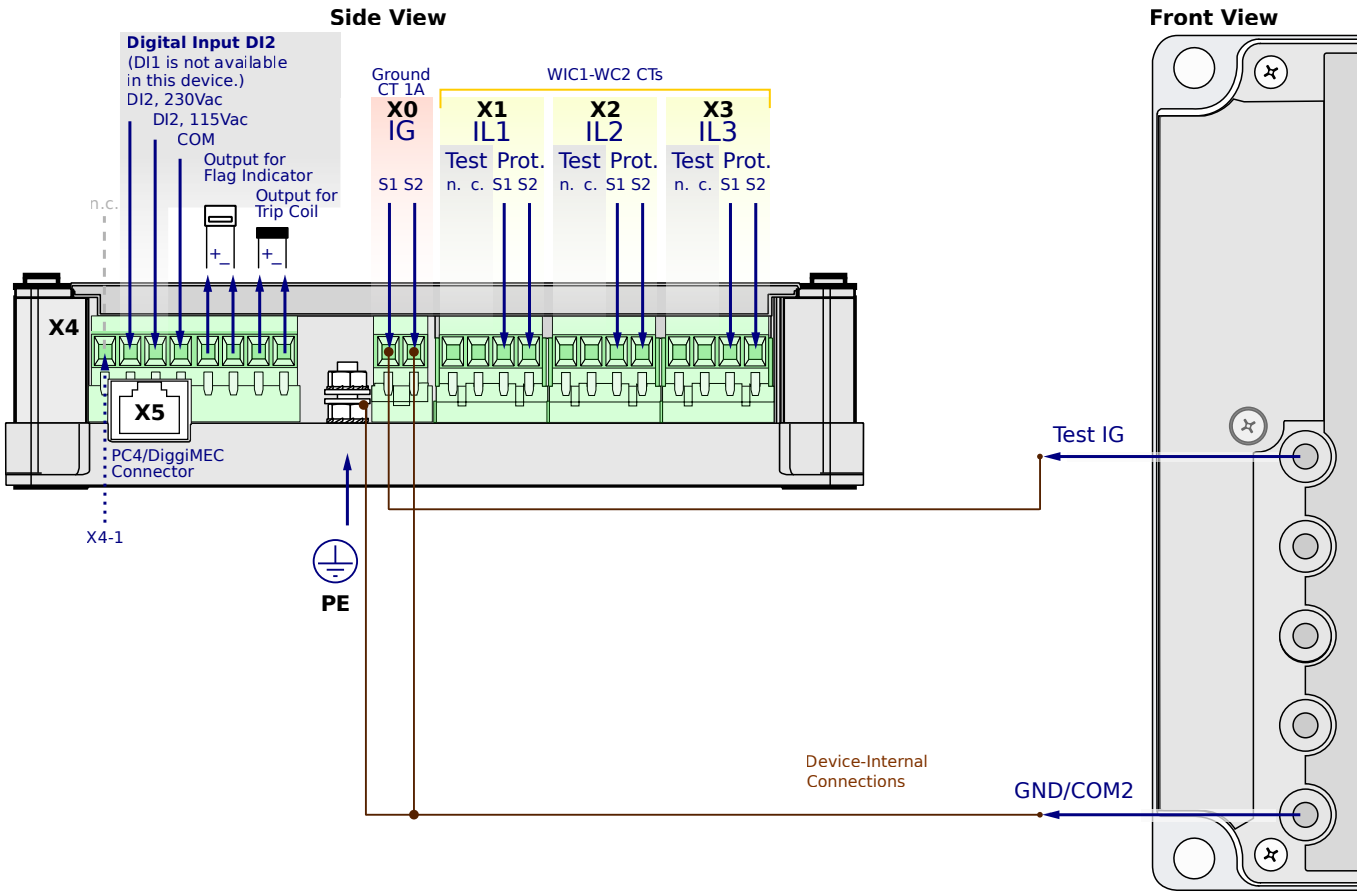


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2AAH

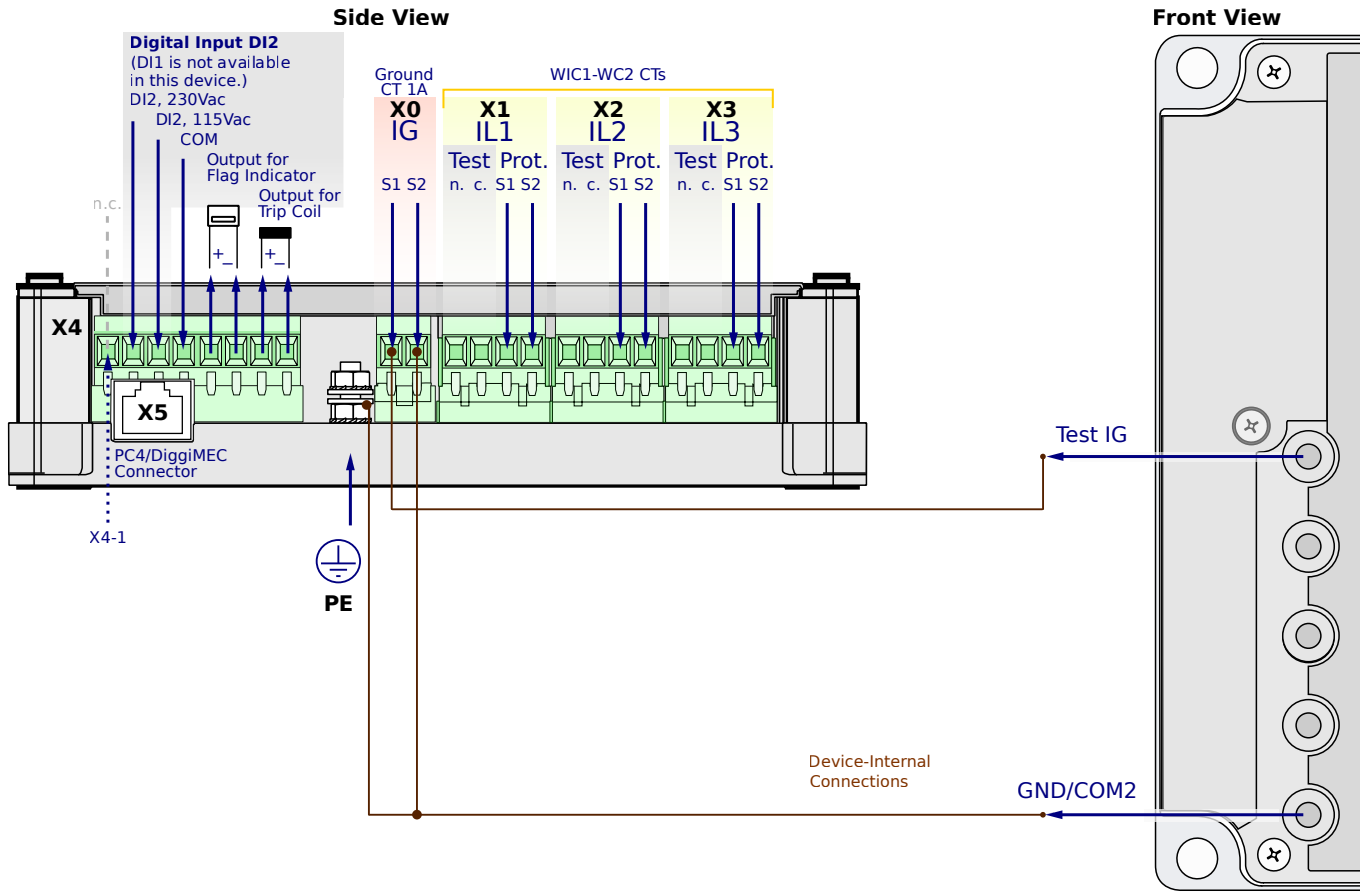


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2PA0

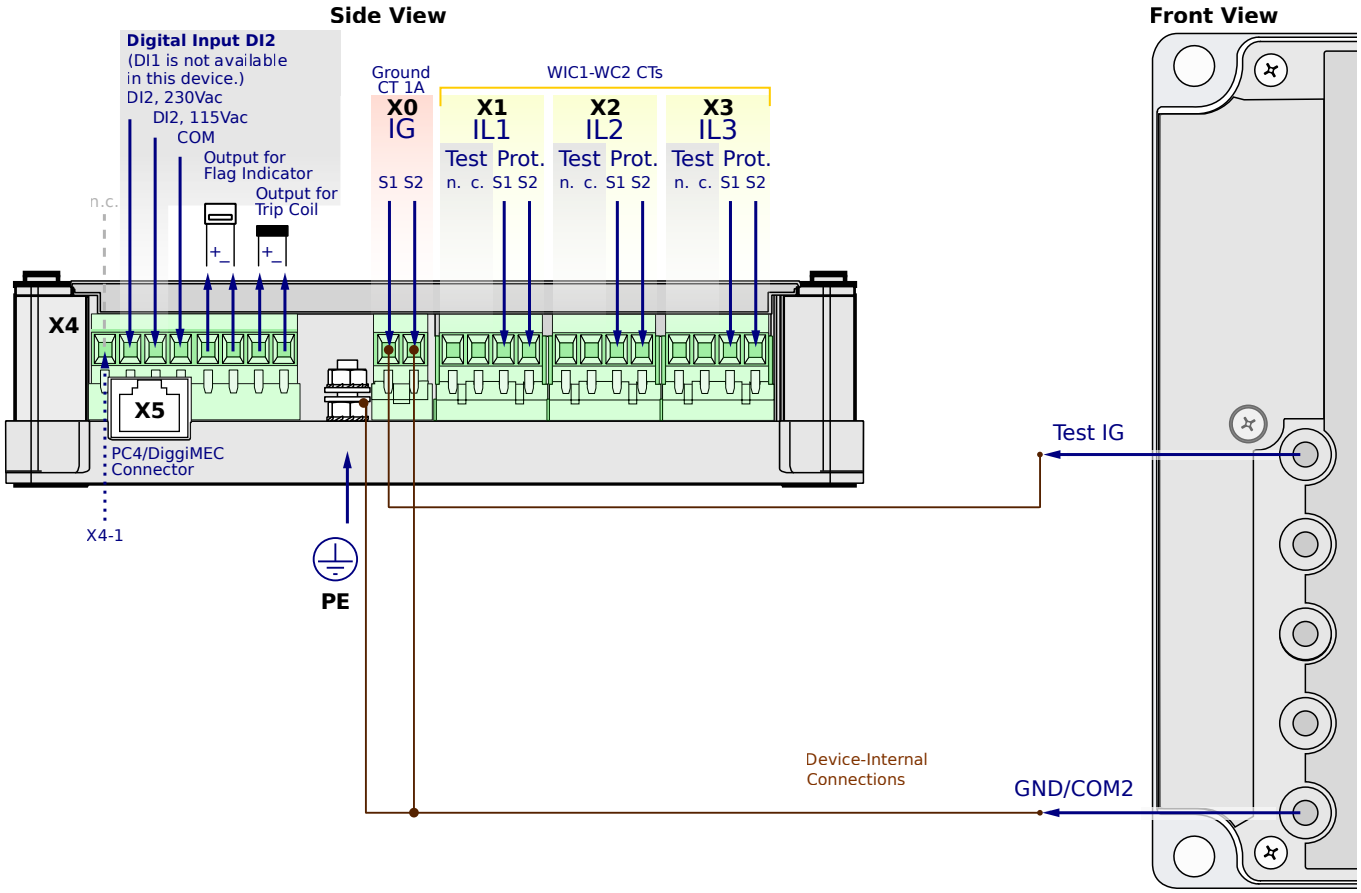


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-2DG6CC2PAH

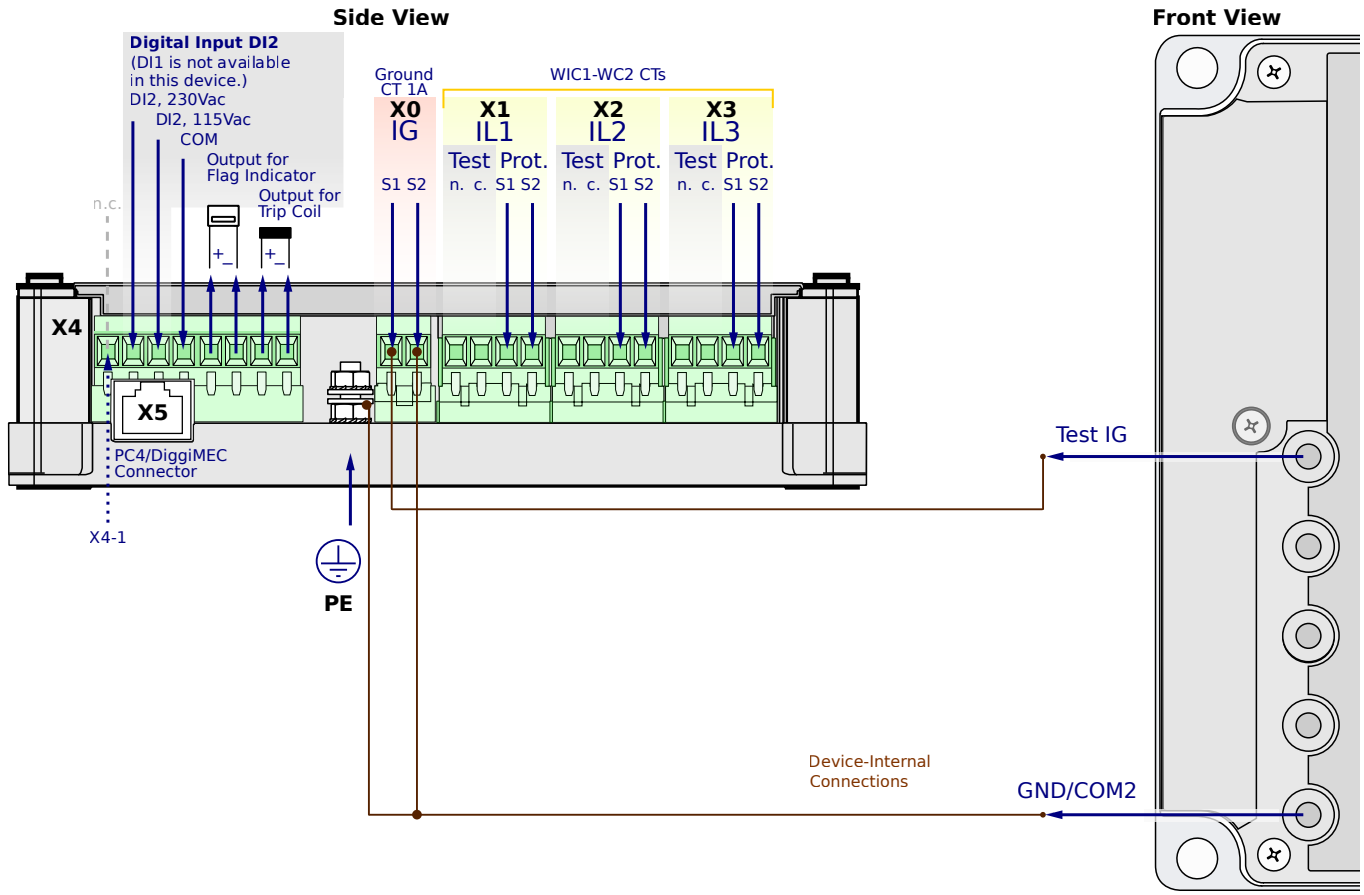


CT-Powered Protection Device, configuration via DIP switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0SA0

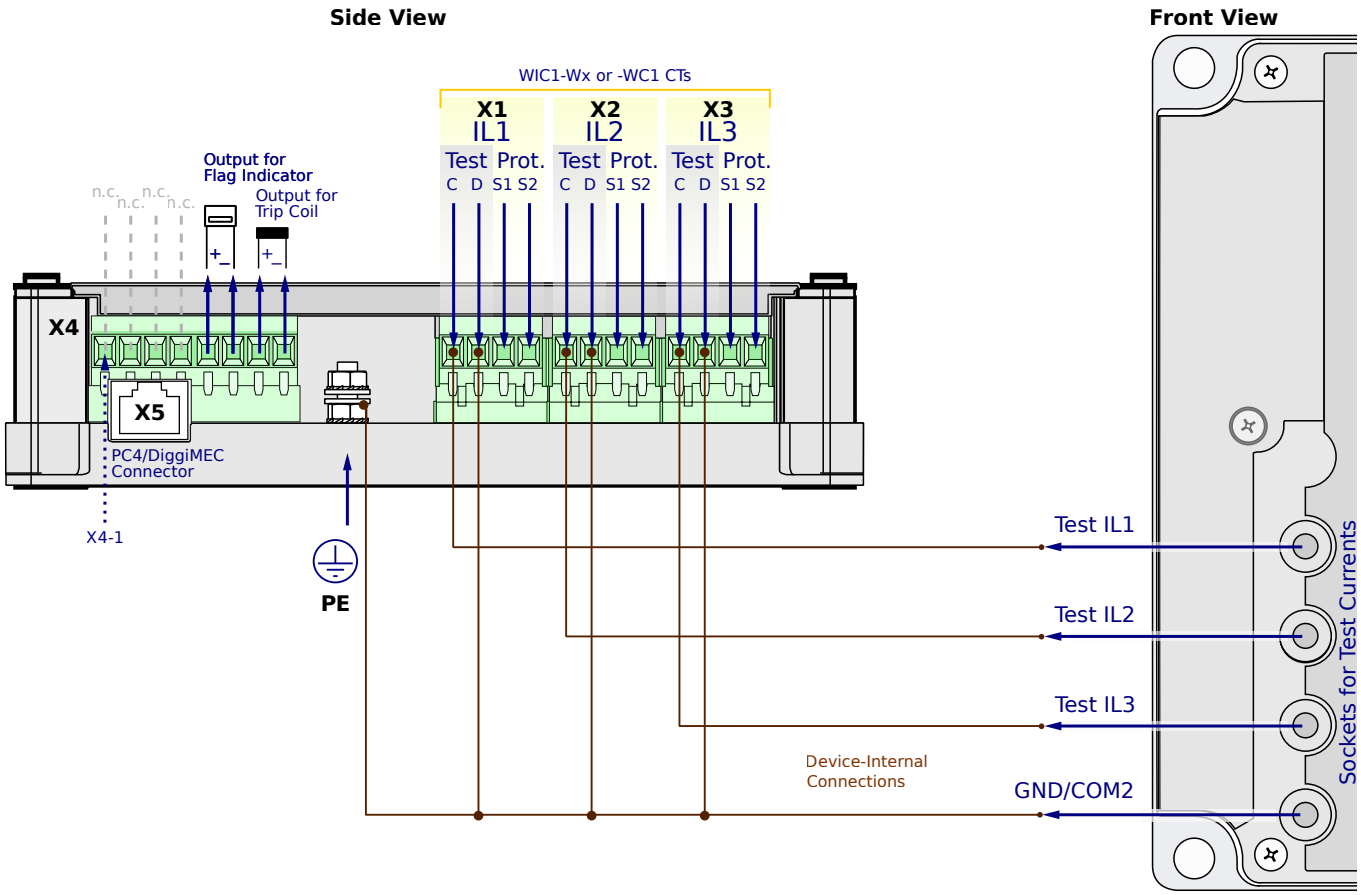


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0SAH

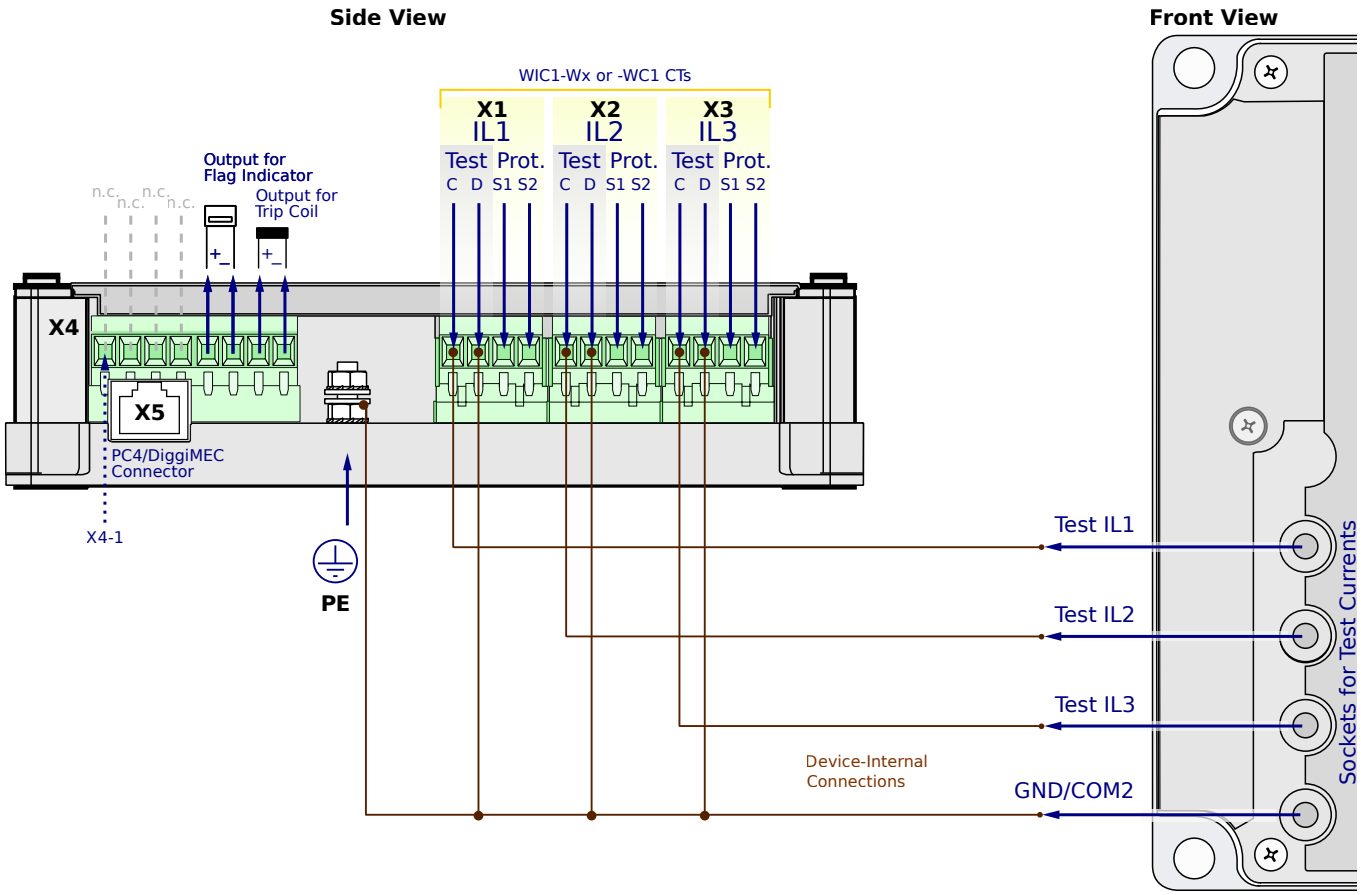


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0AA0

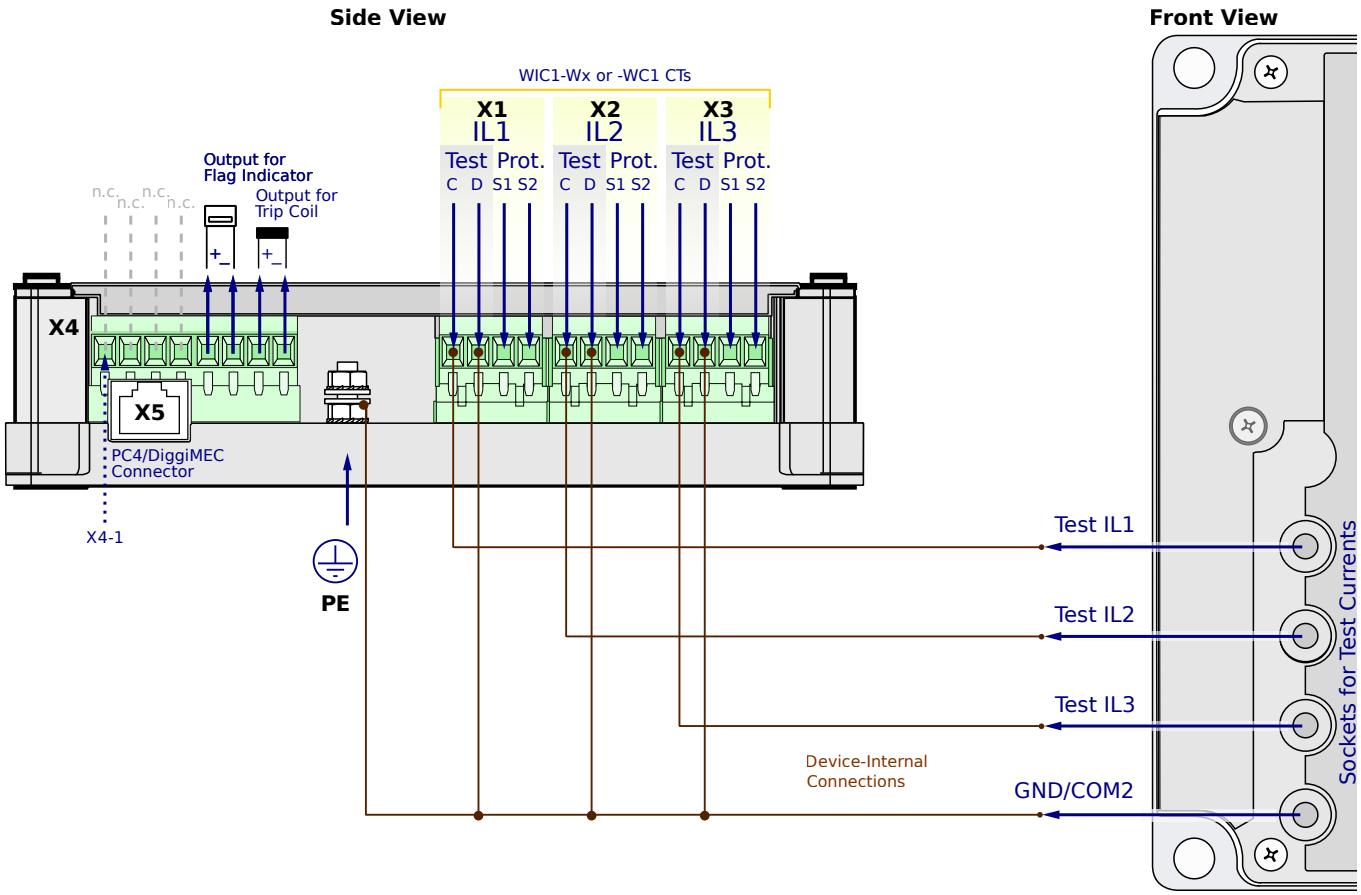


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0AAH

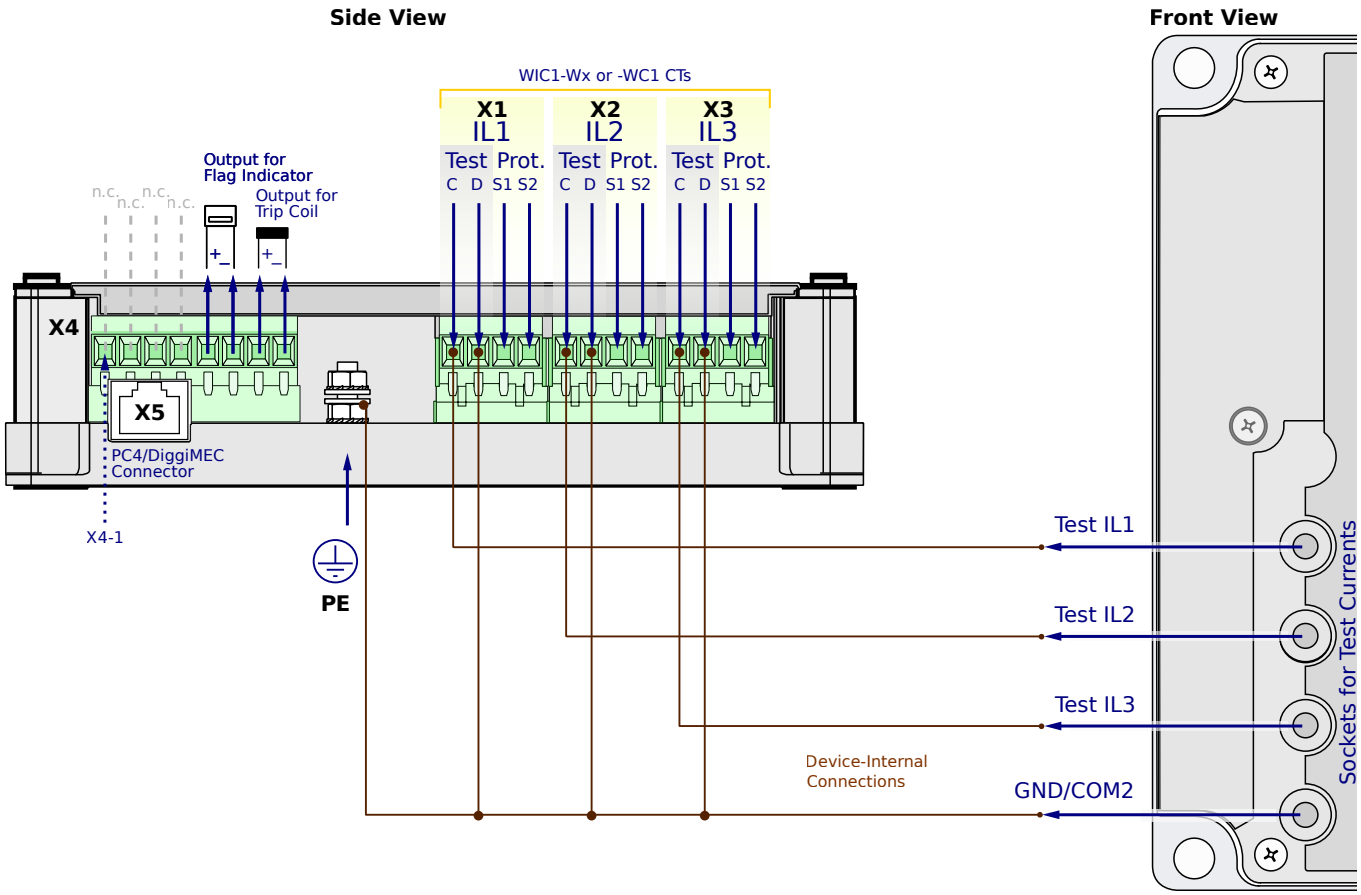


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0PA0

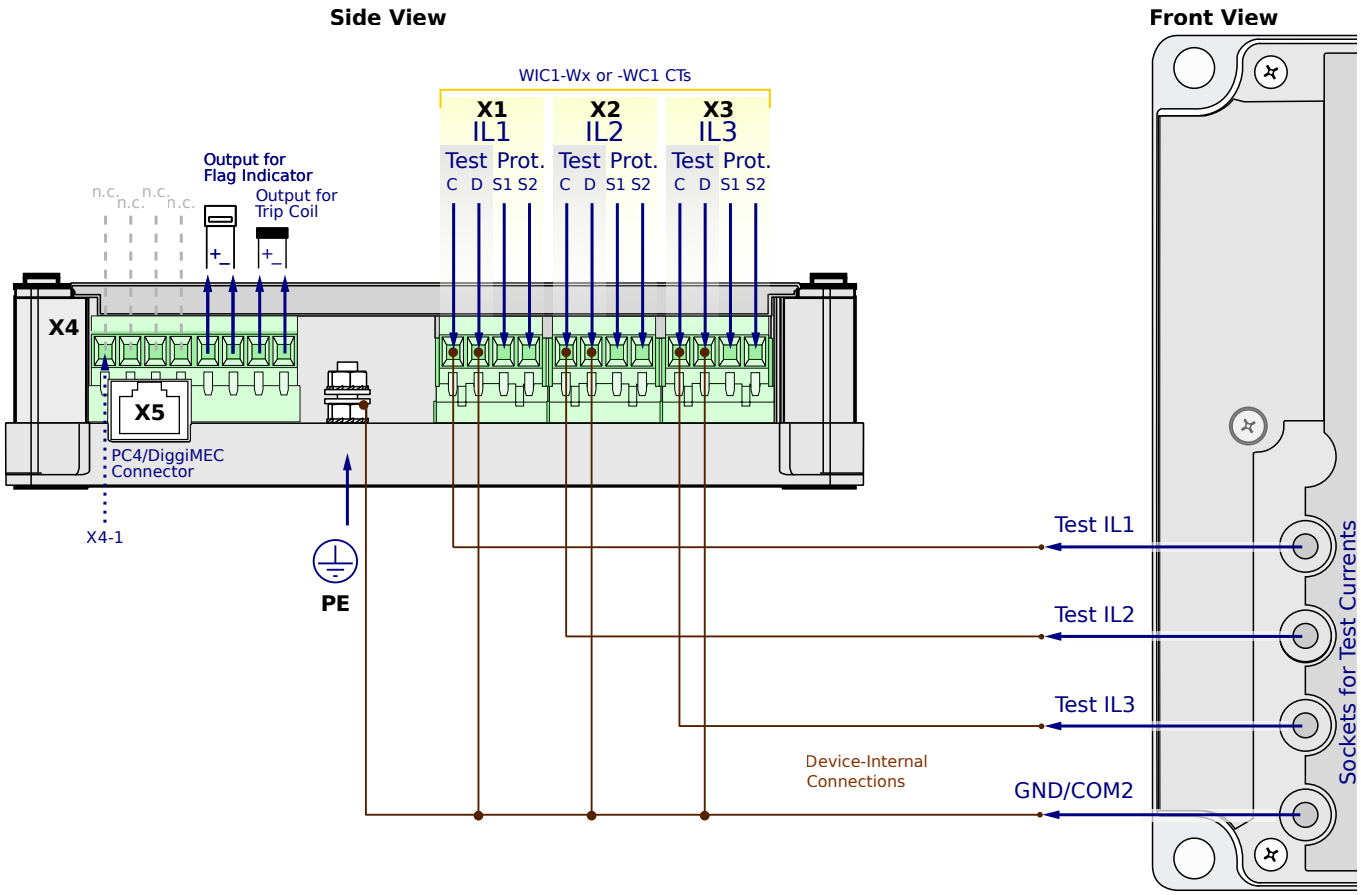


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN0PAH

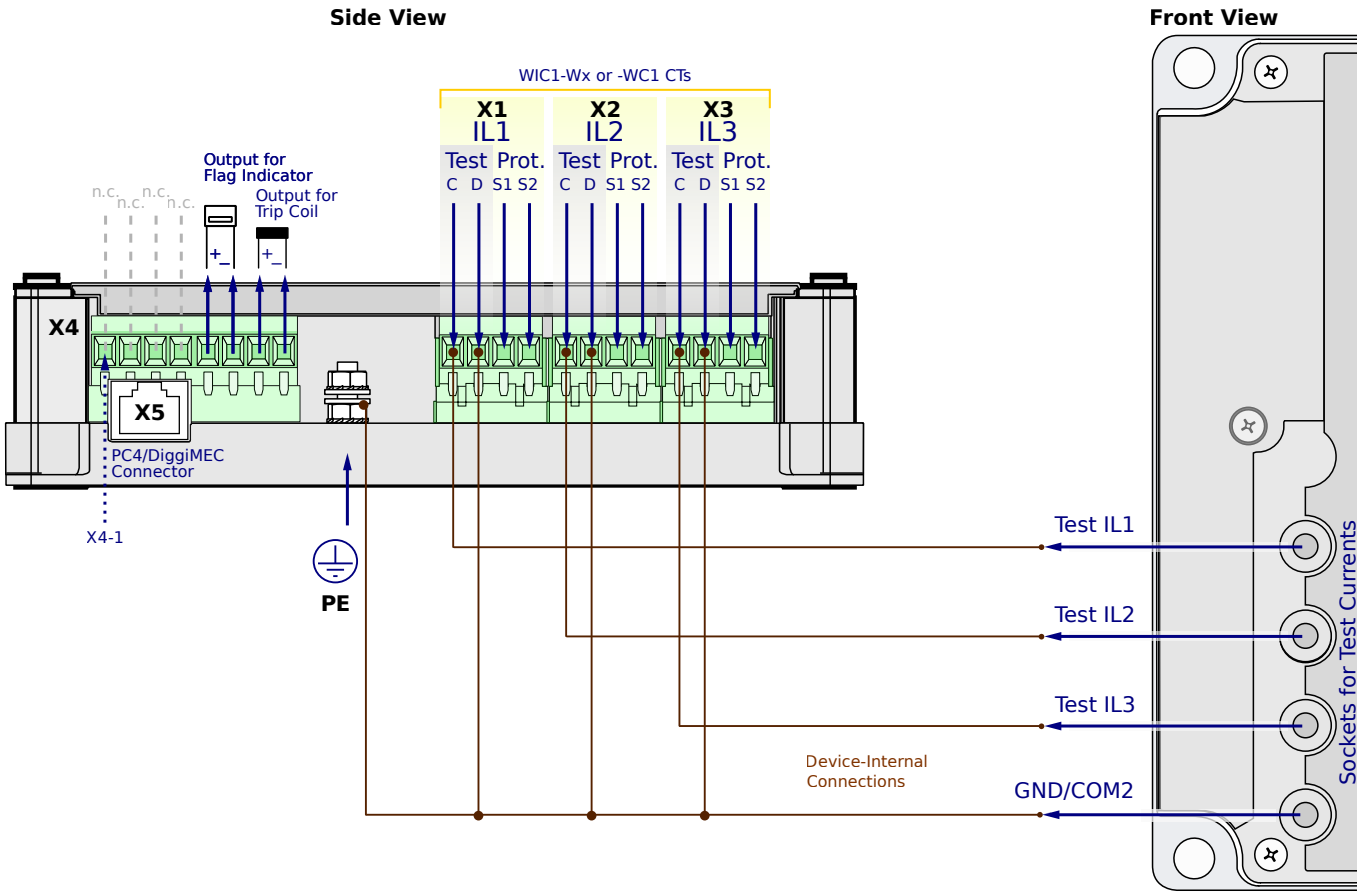


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1SA0

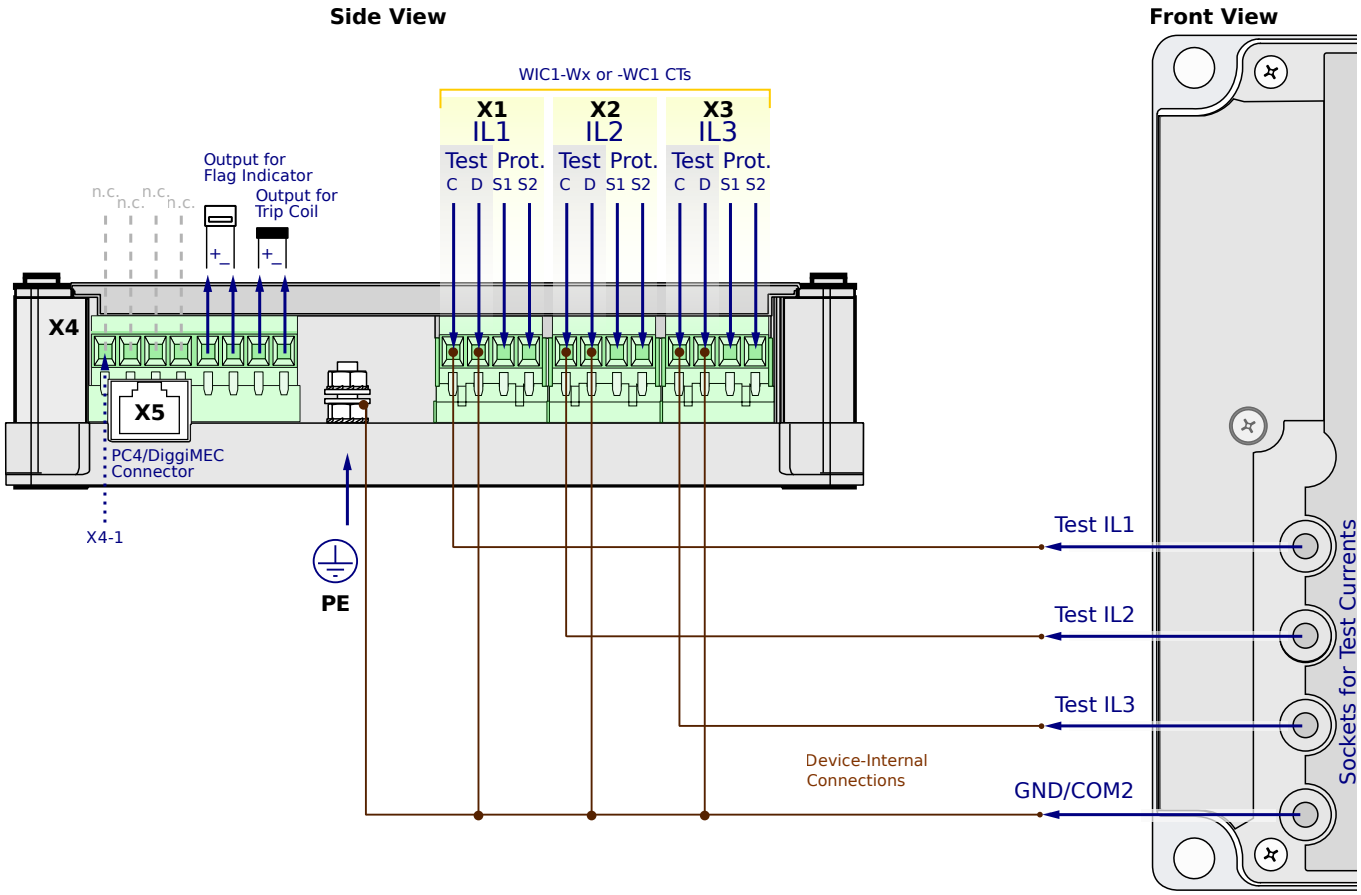


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1SAH

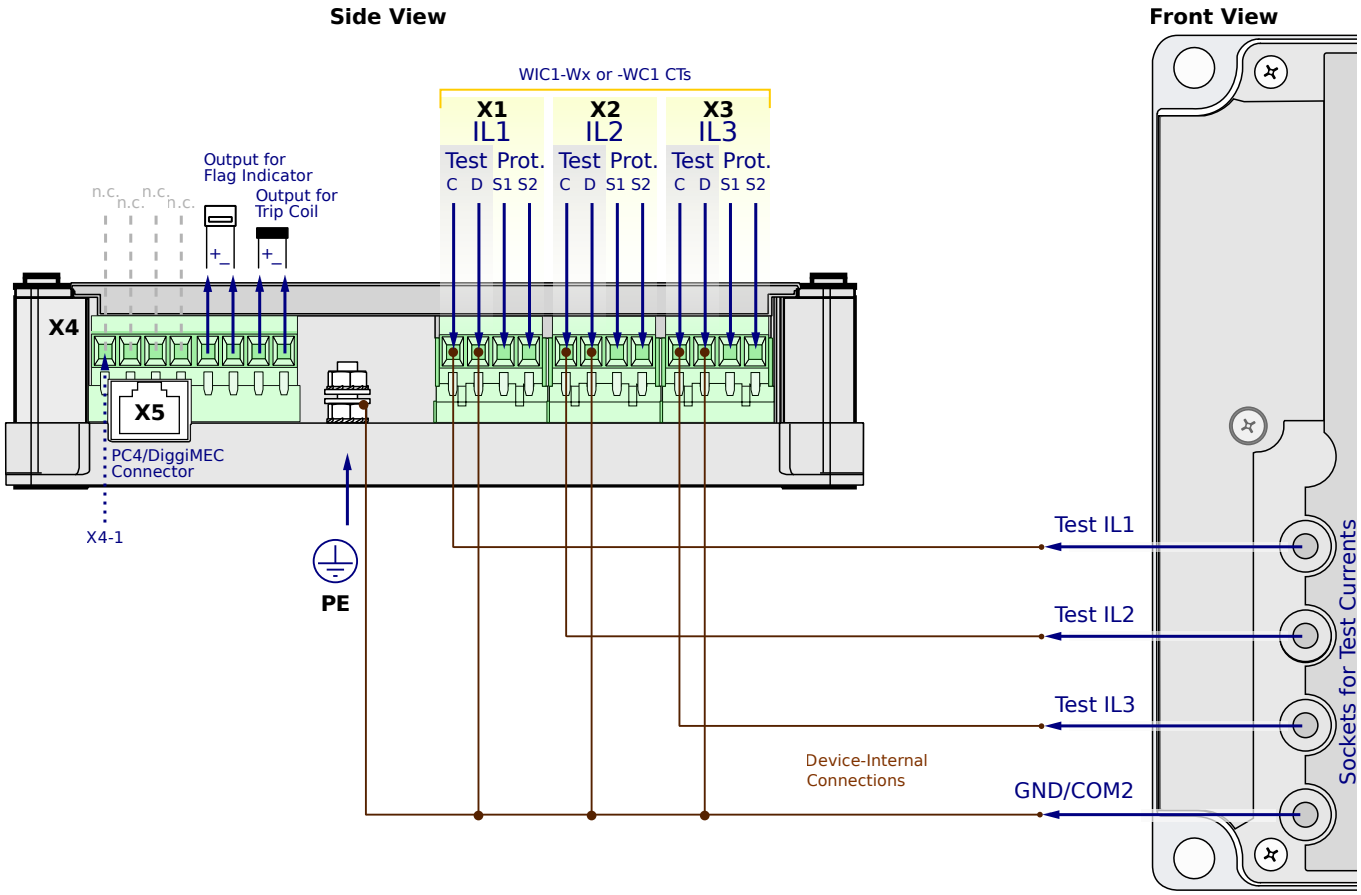


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1AA0

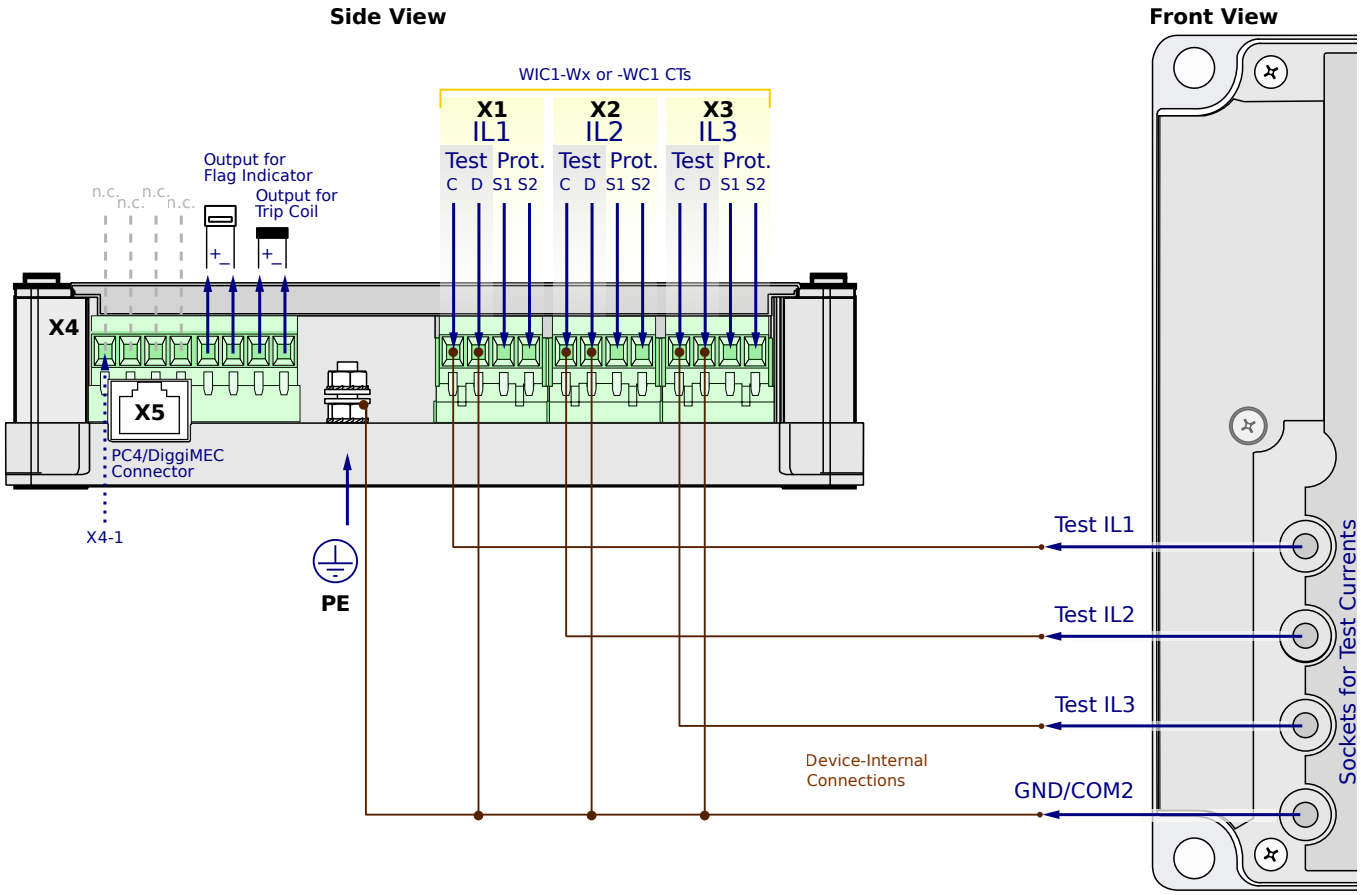


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1AAH

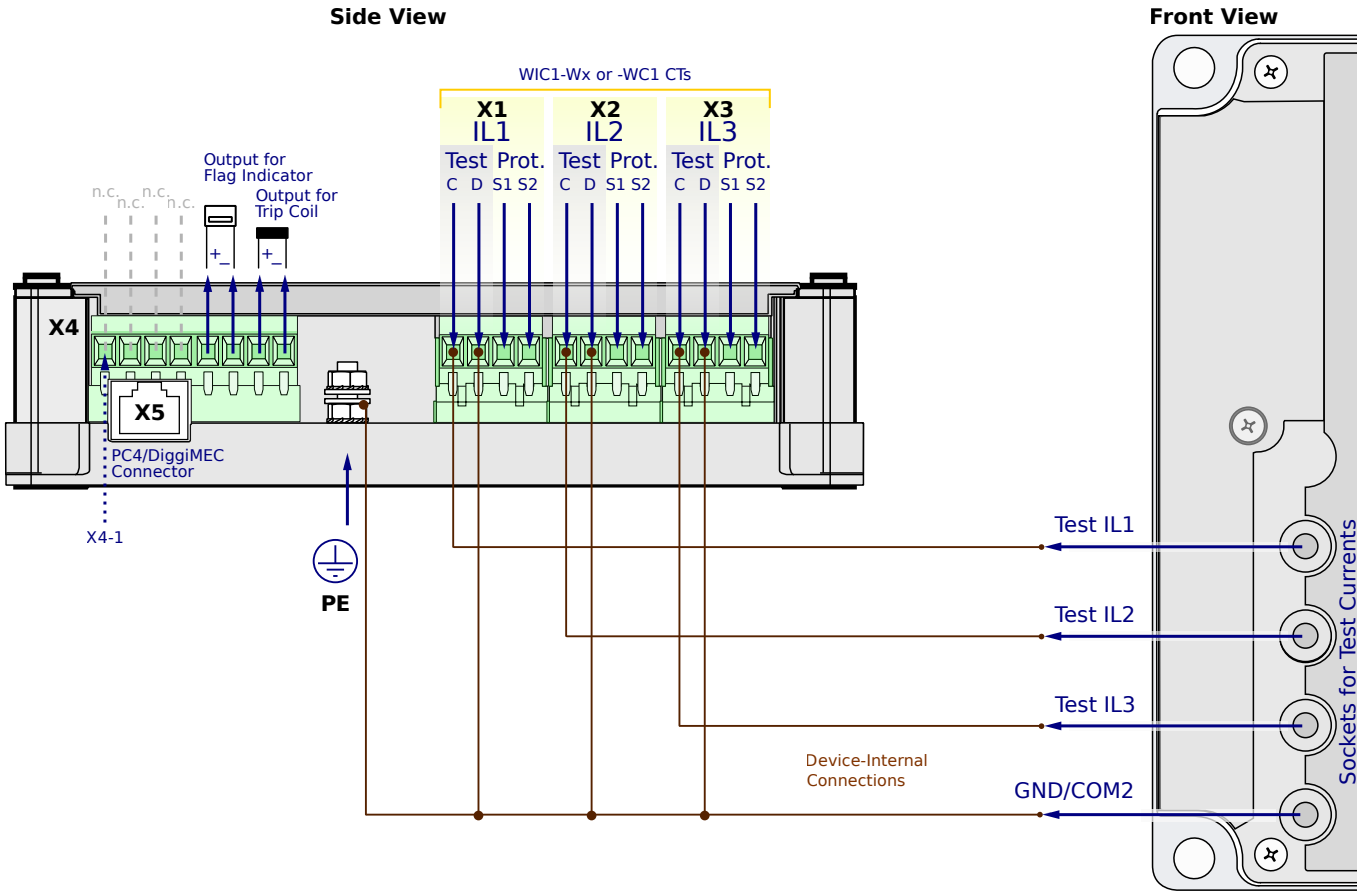


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1PA0

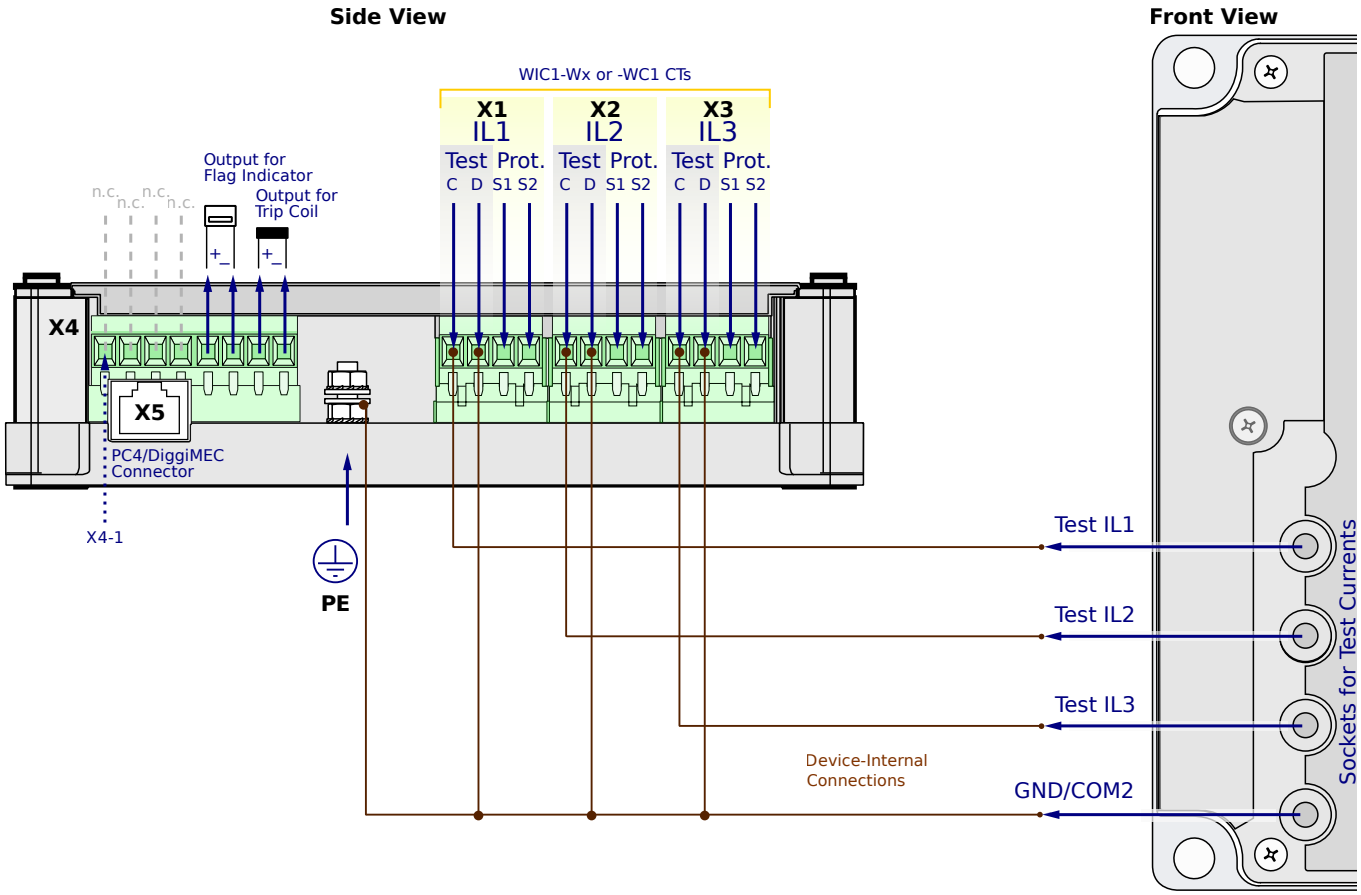


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN1PAH

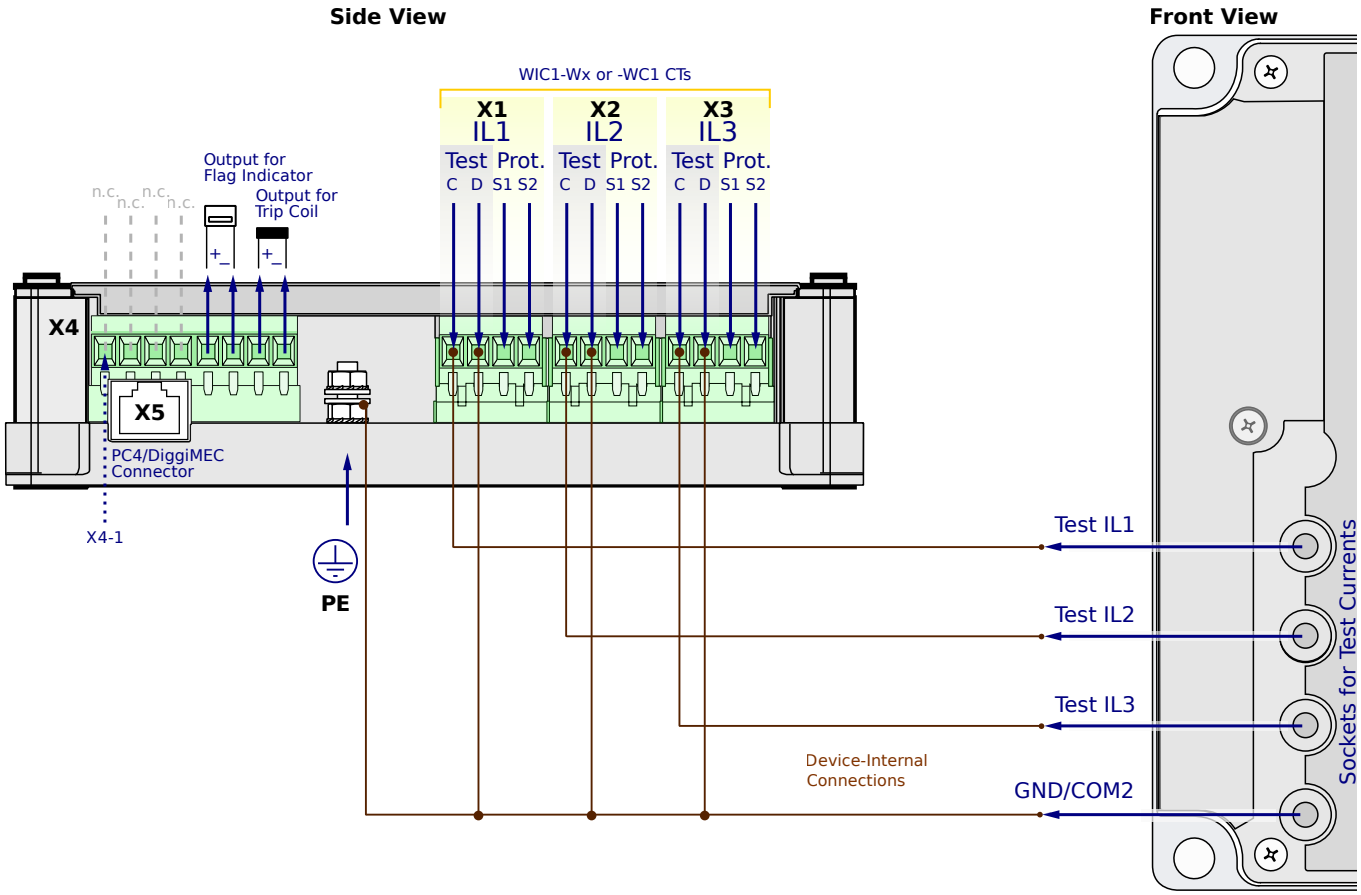


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2SA0

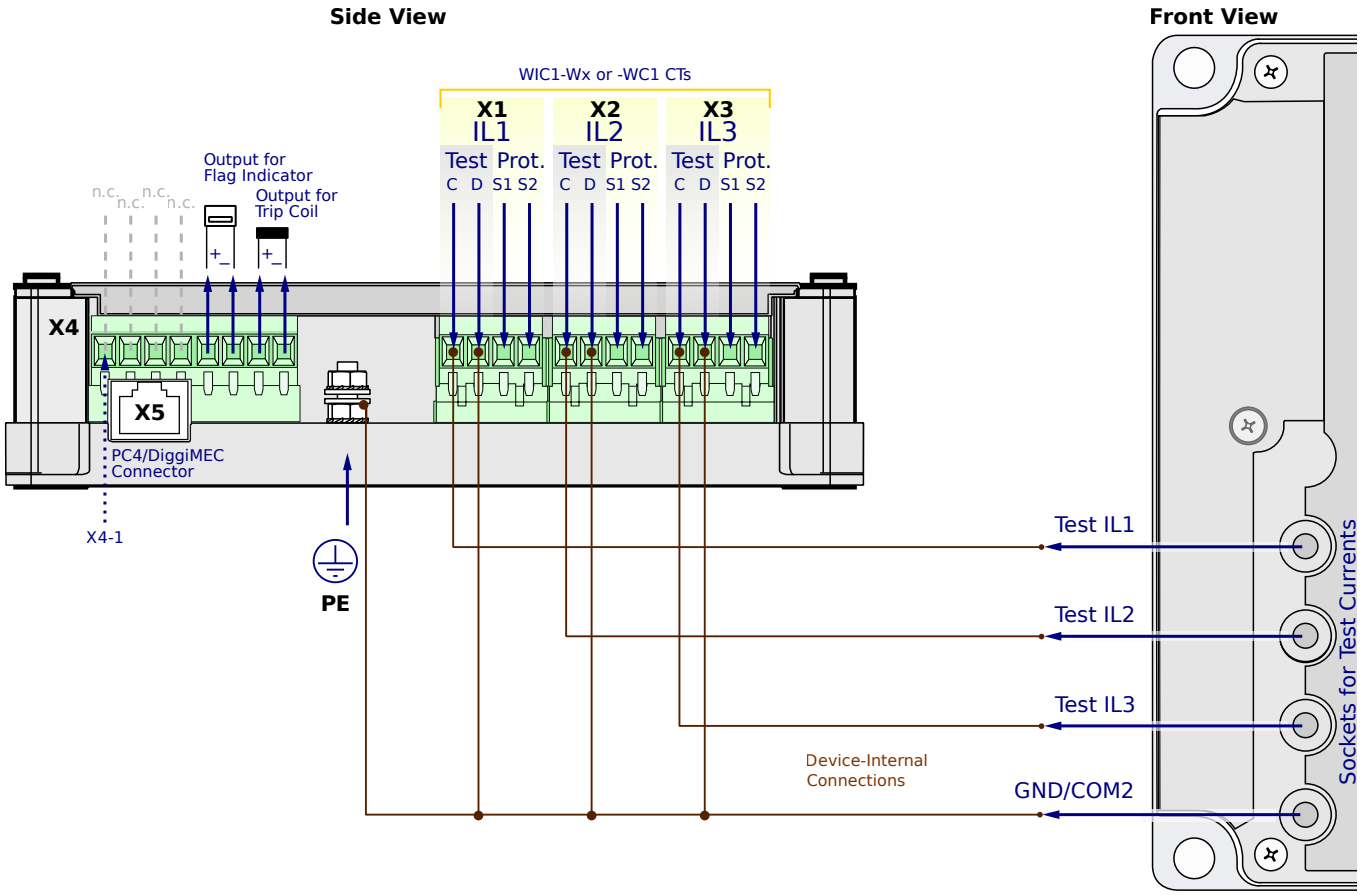


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2SAH

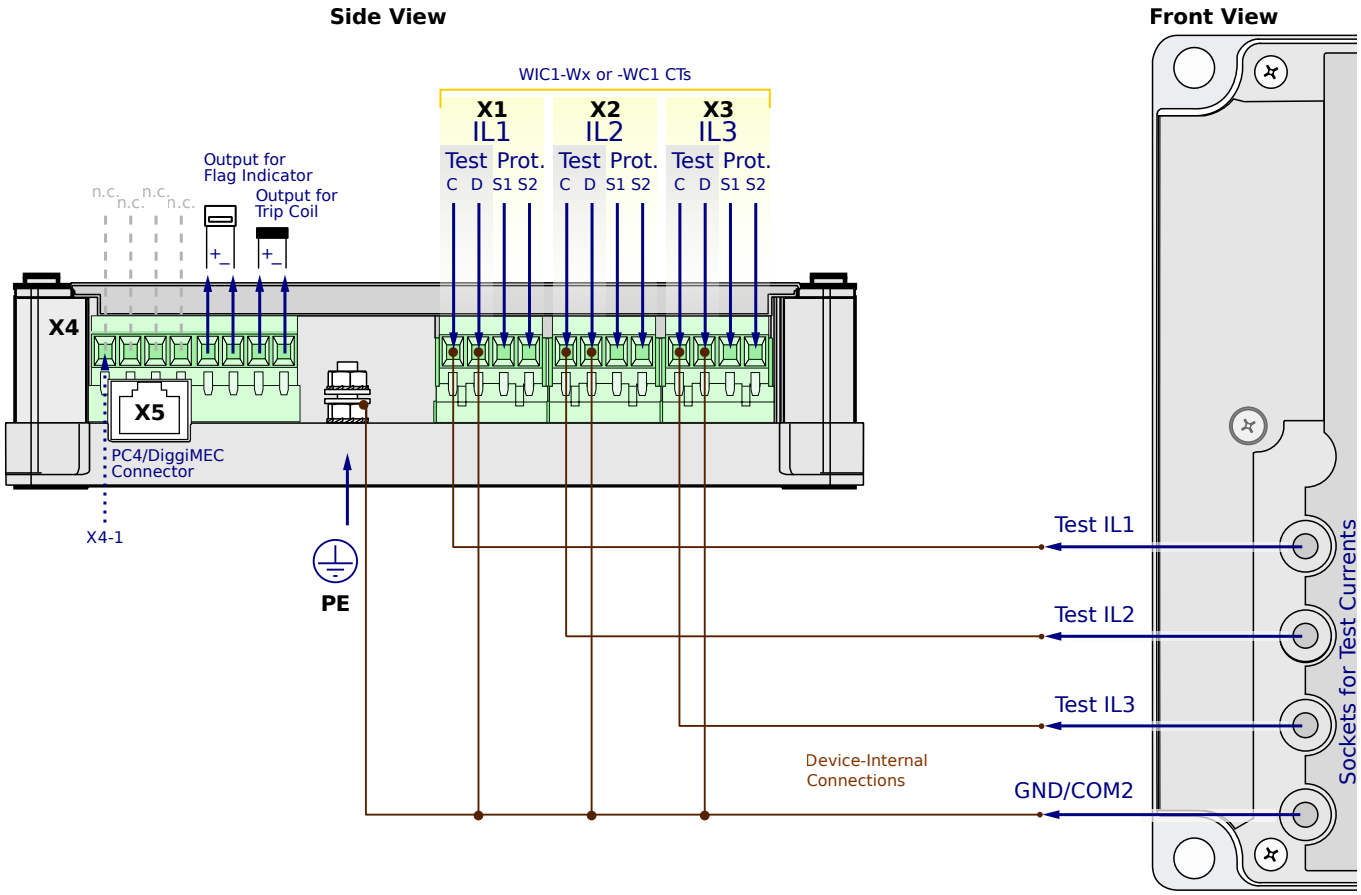


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2AA0

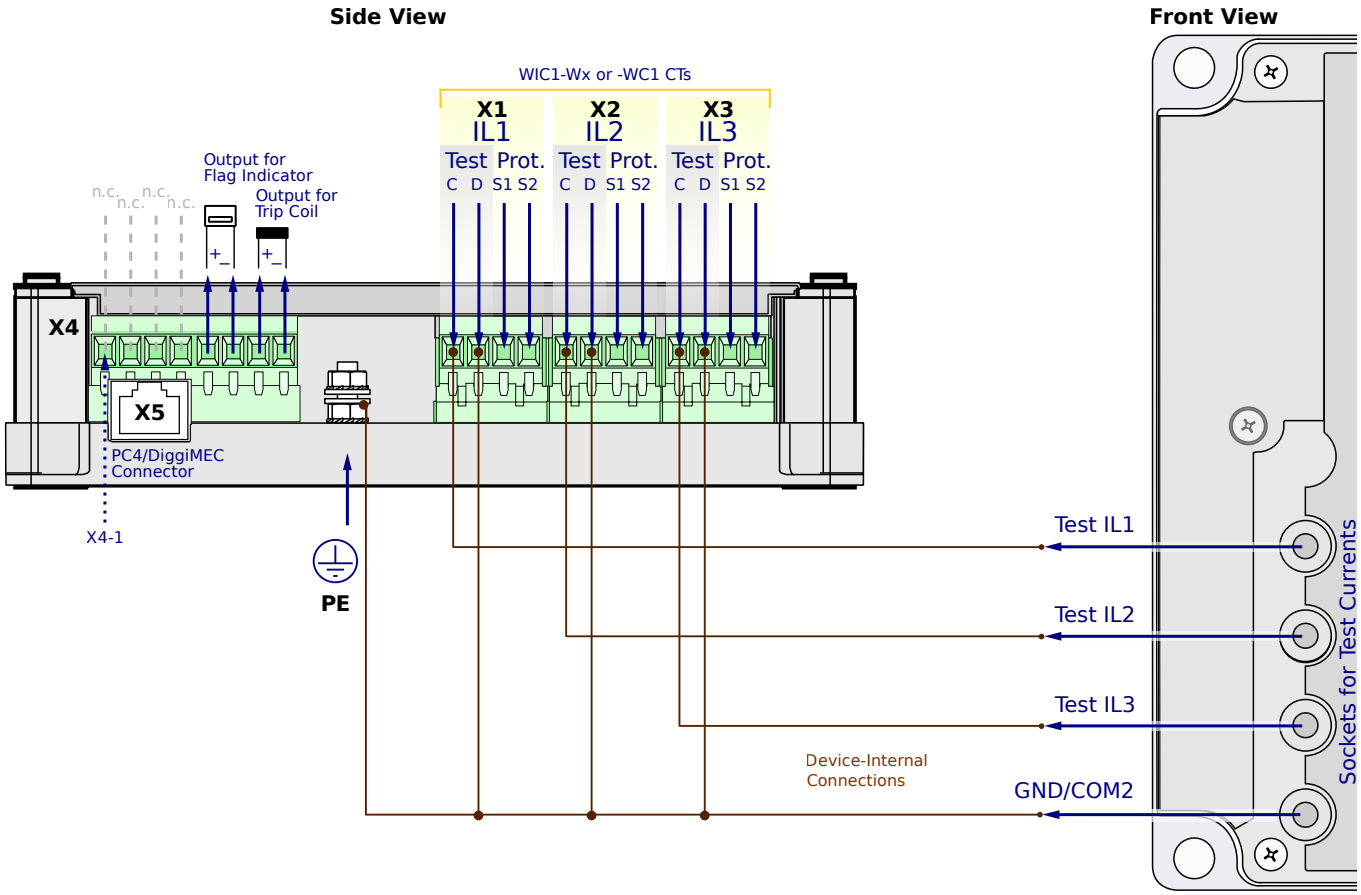


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2AAH

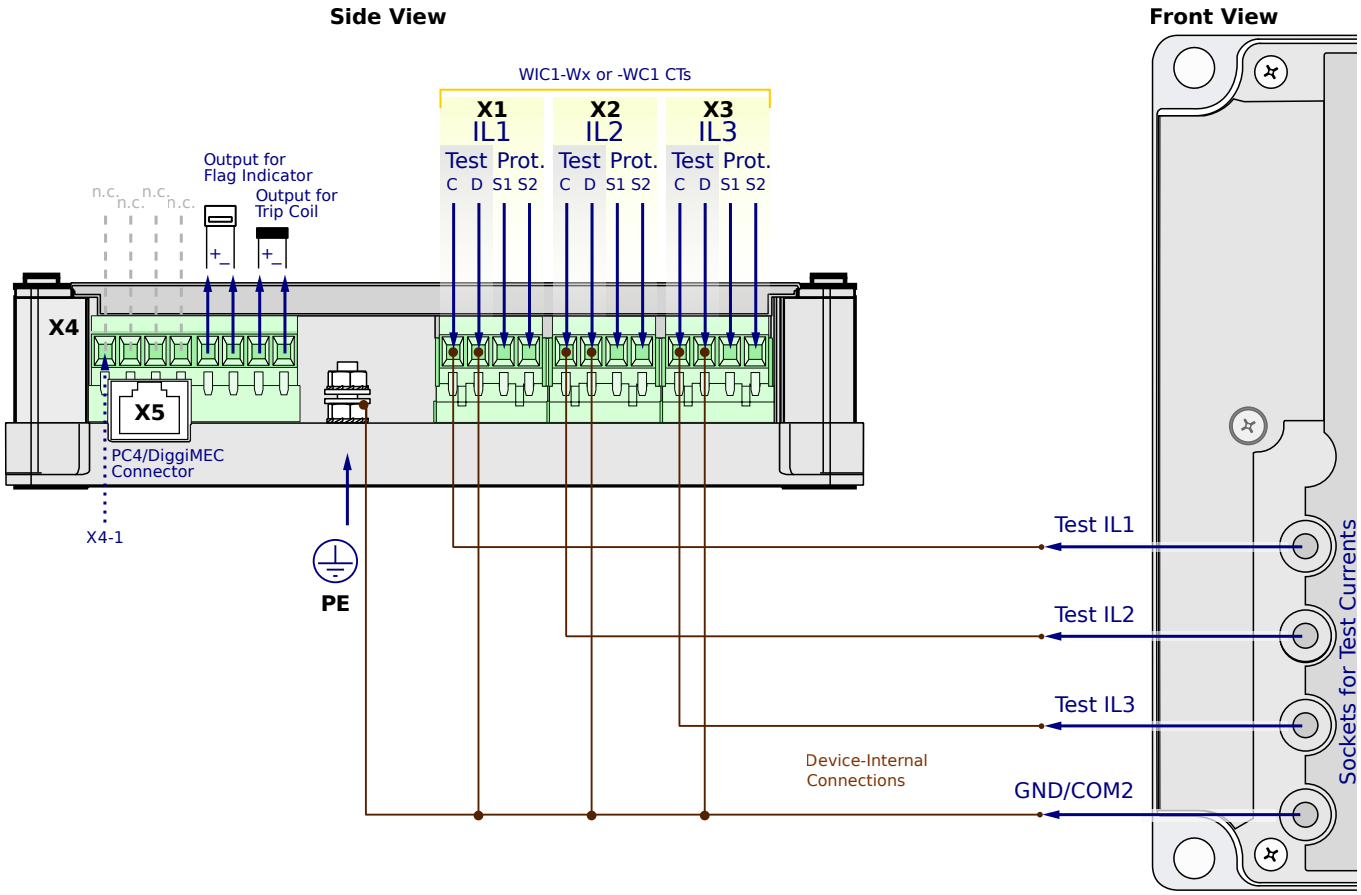


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2PA0

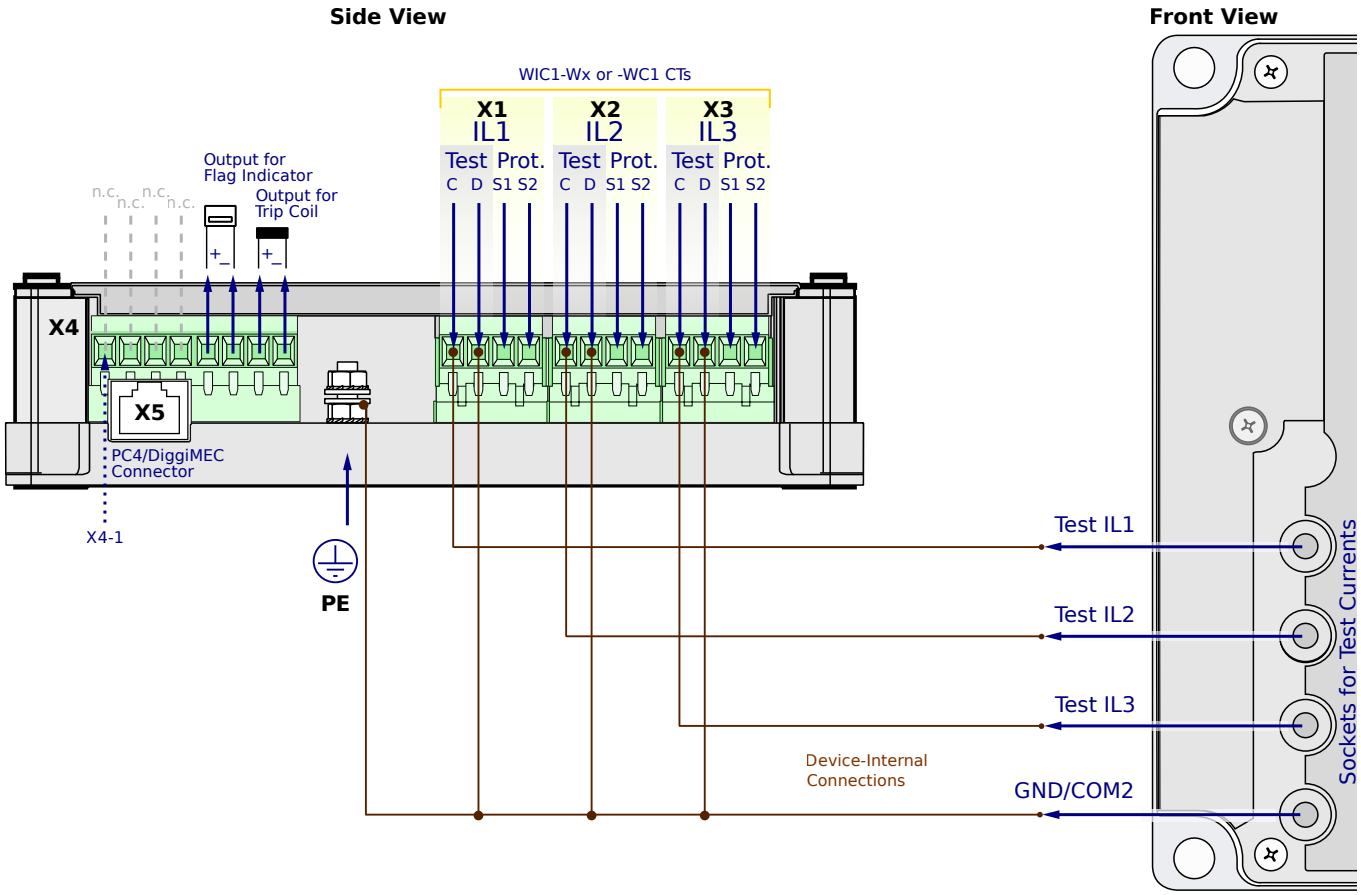


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NN2PAH

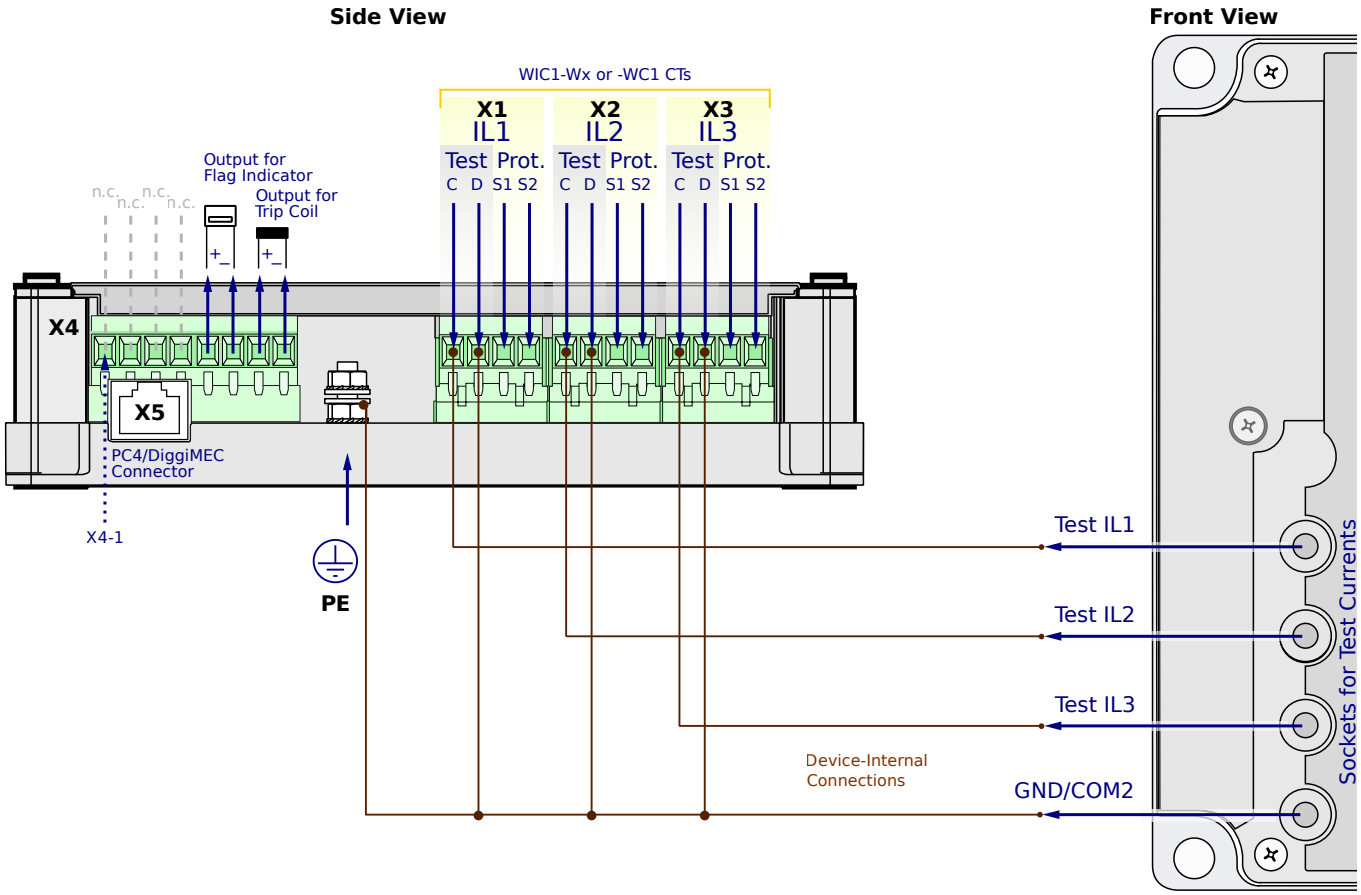


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0SA0

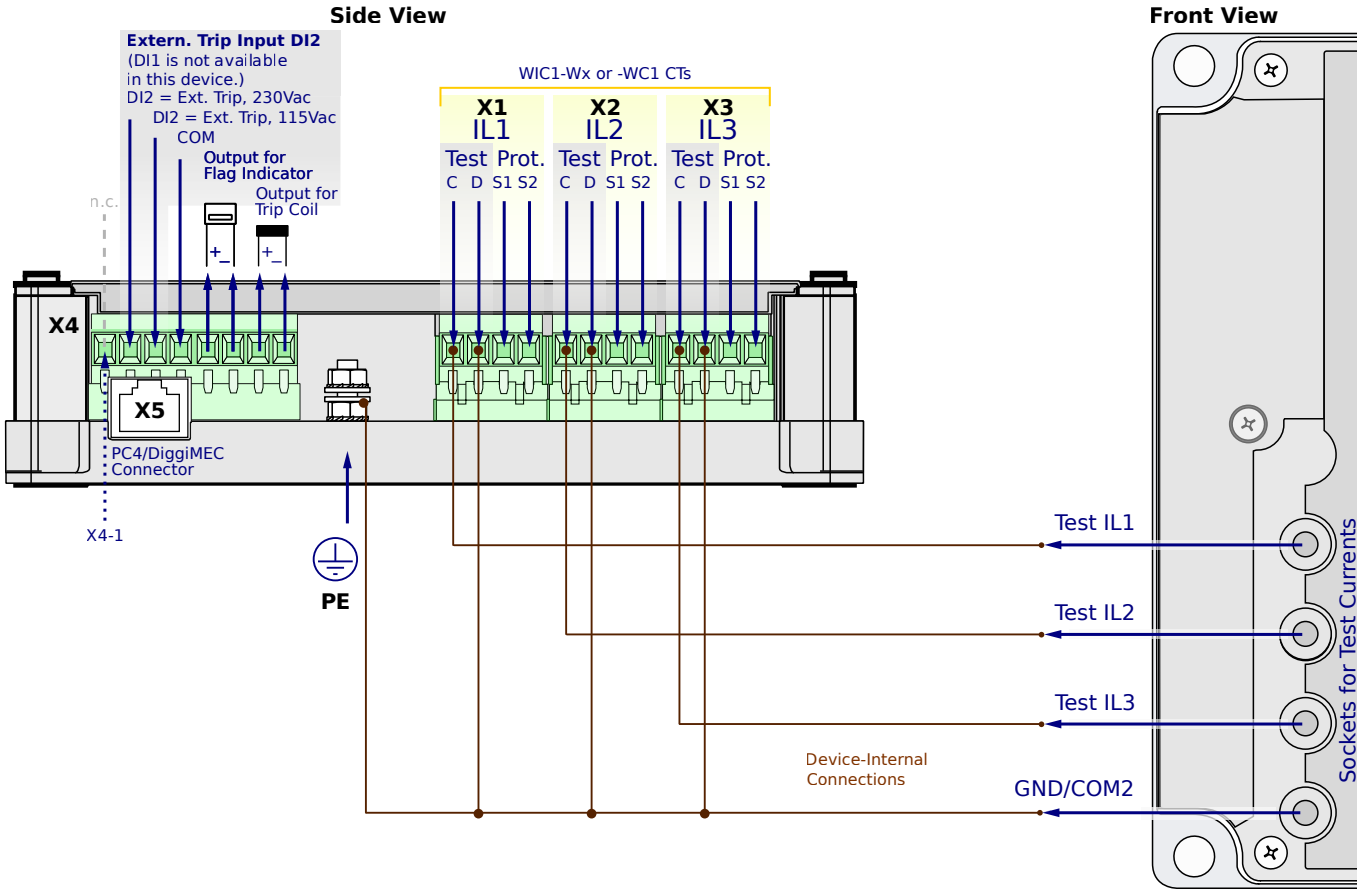


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0SAH

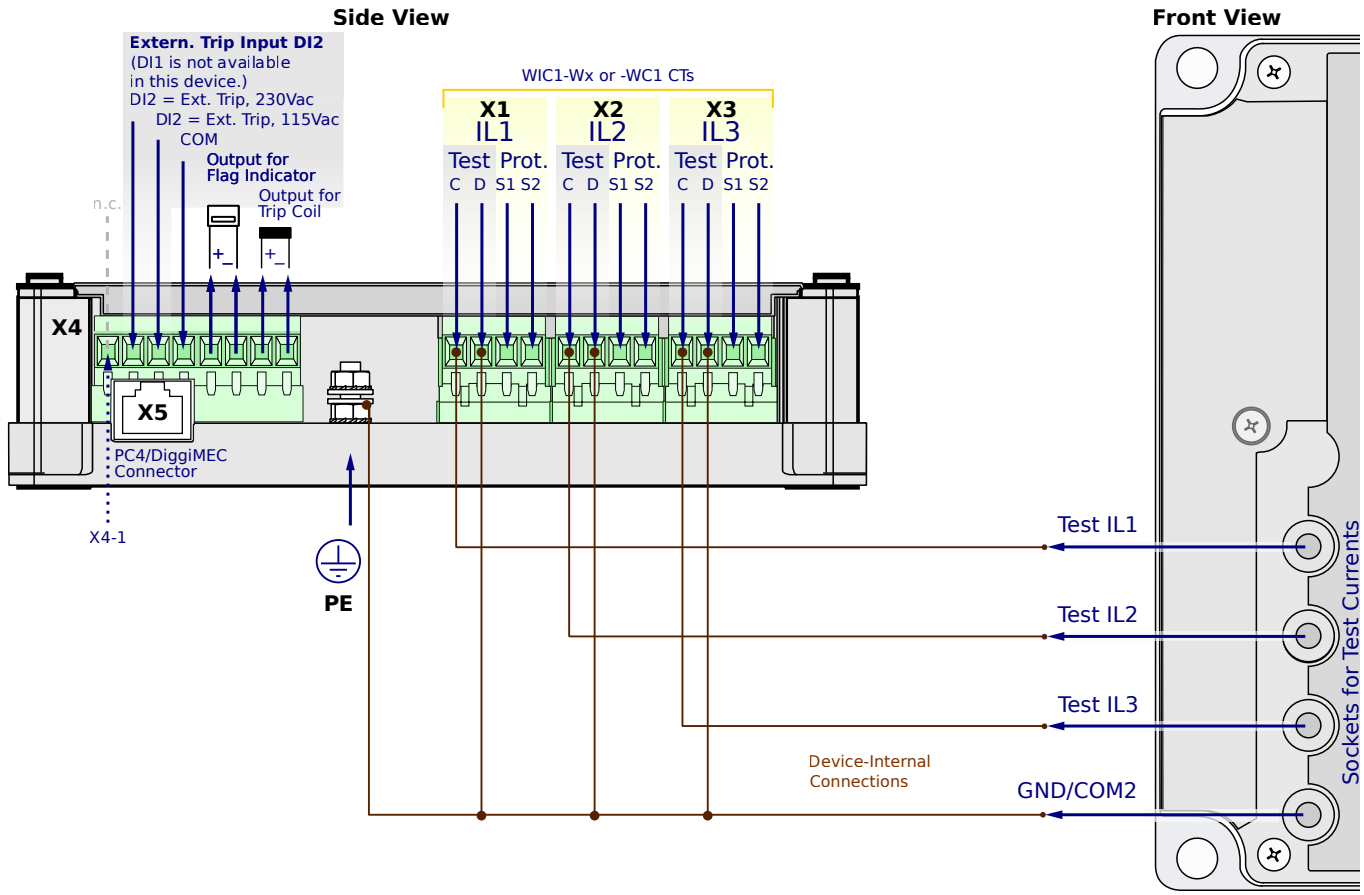


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0AA0

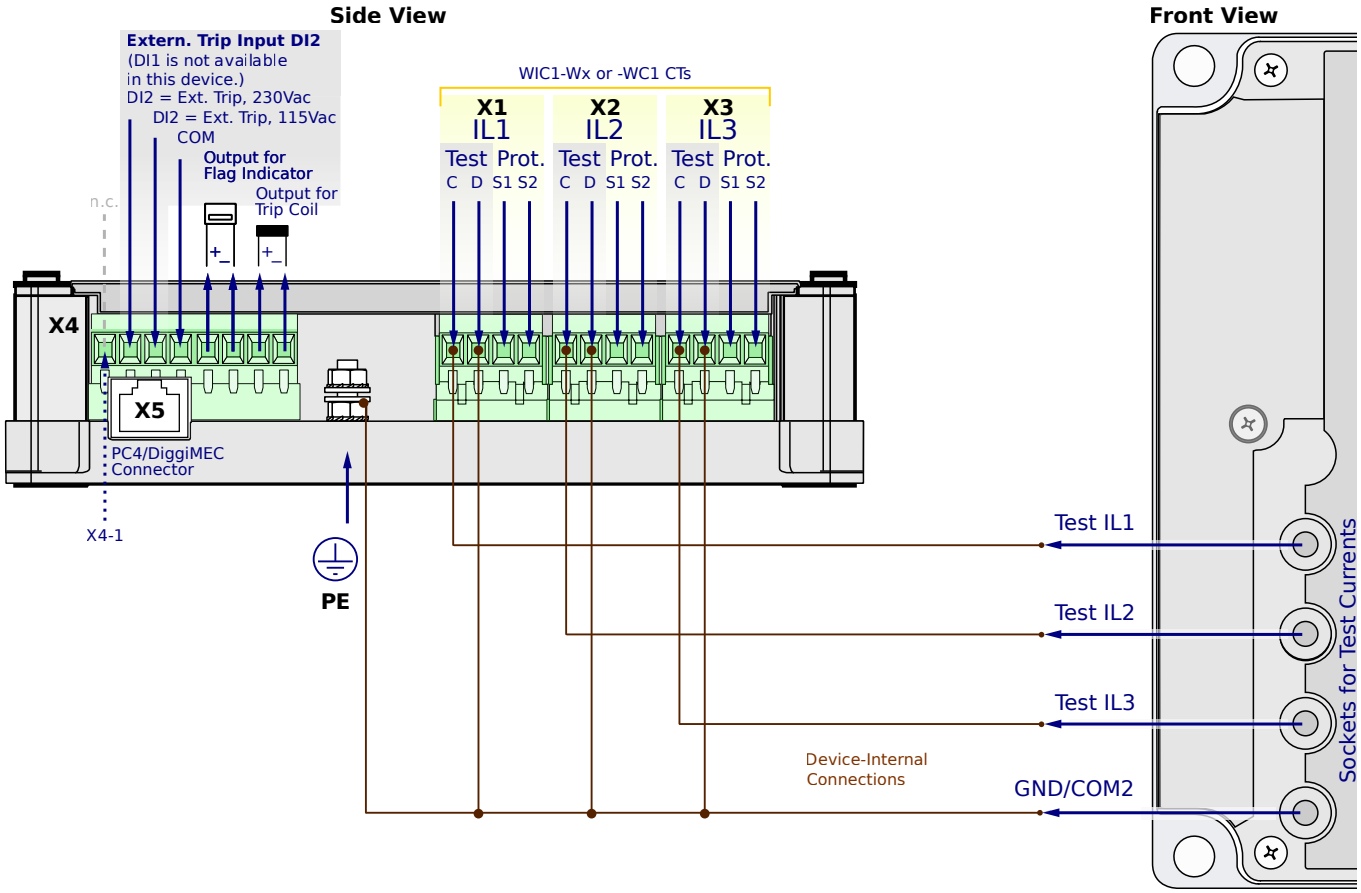


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0AAH

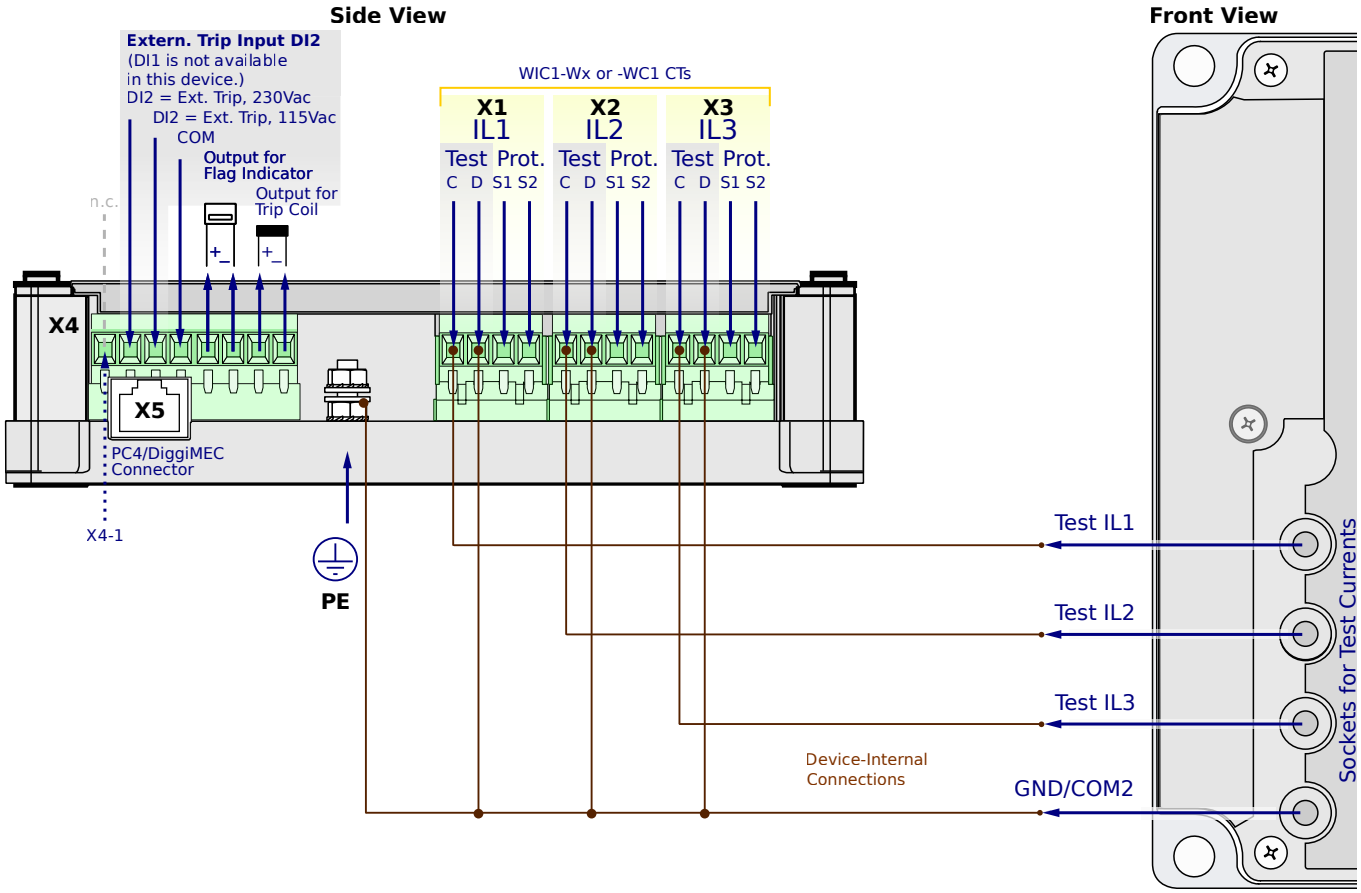


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0PA0

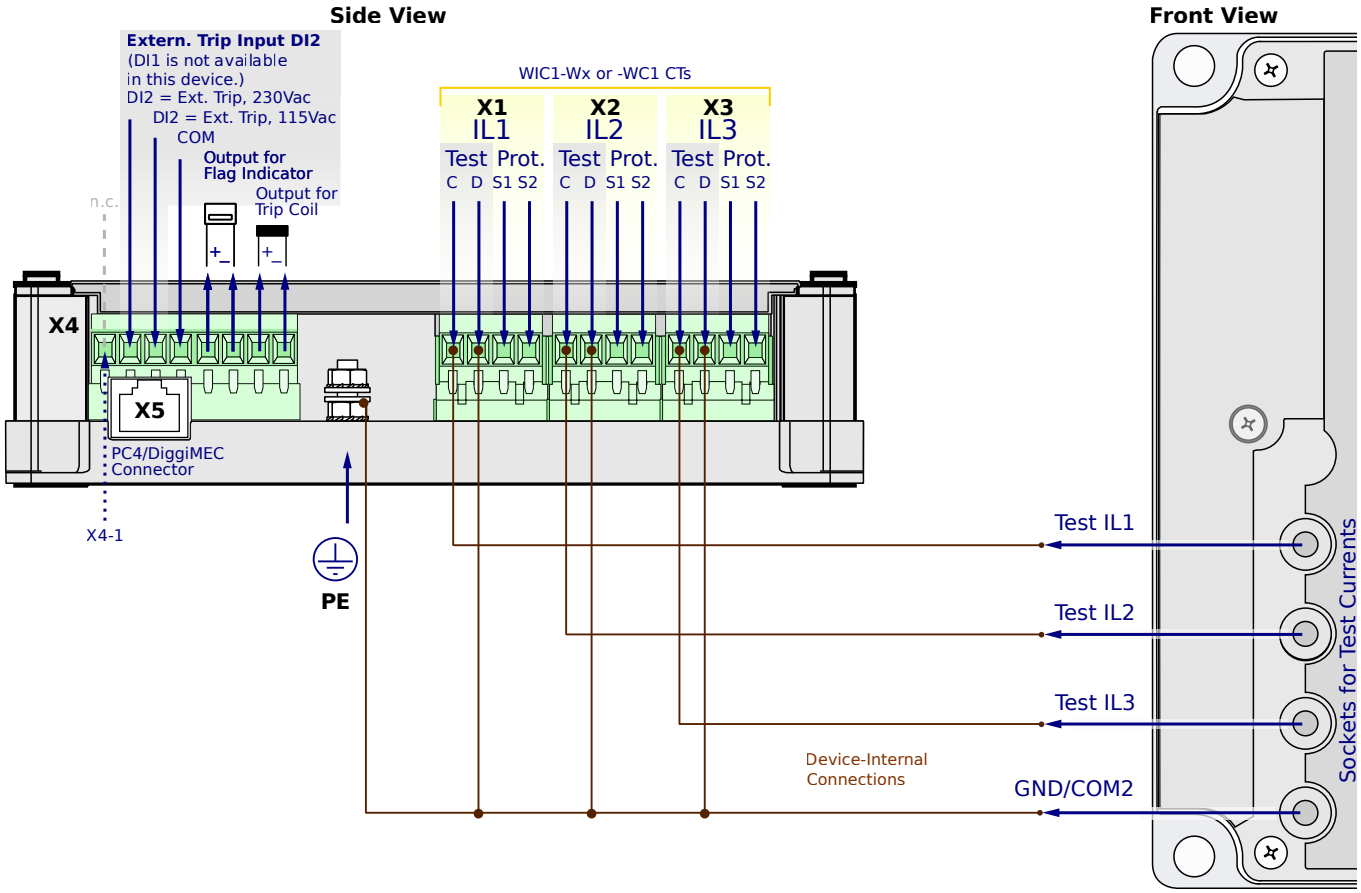


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF0PAH

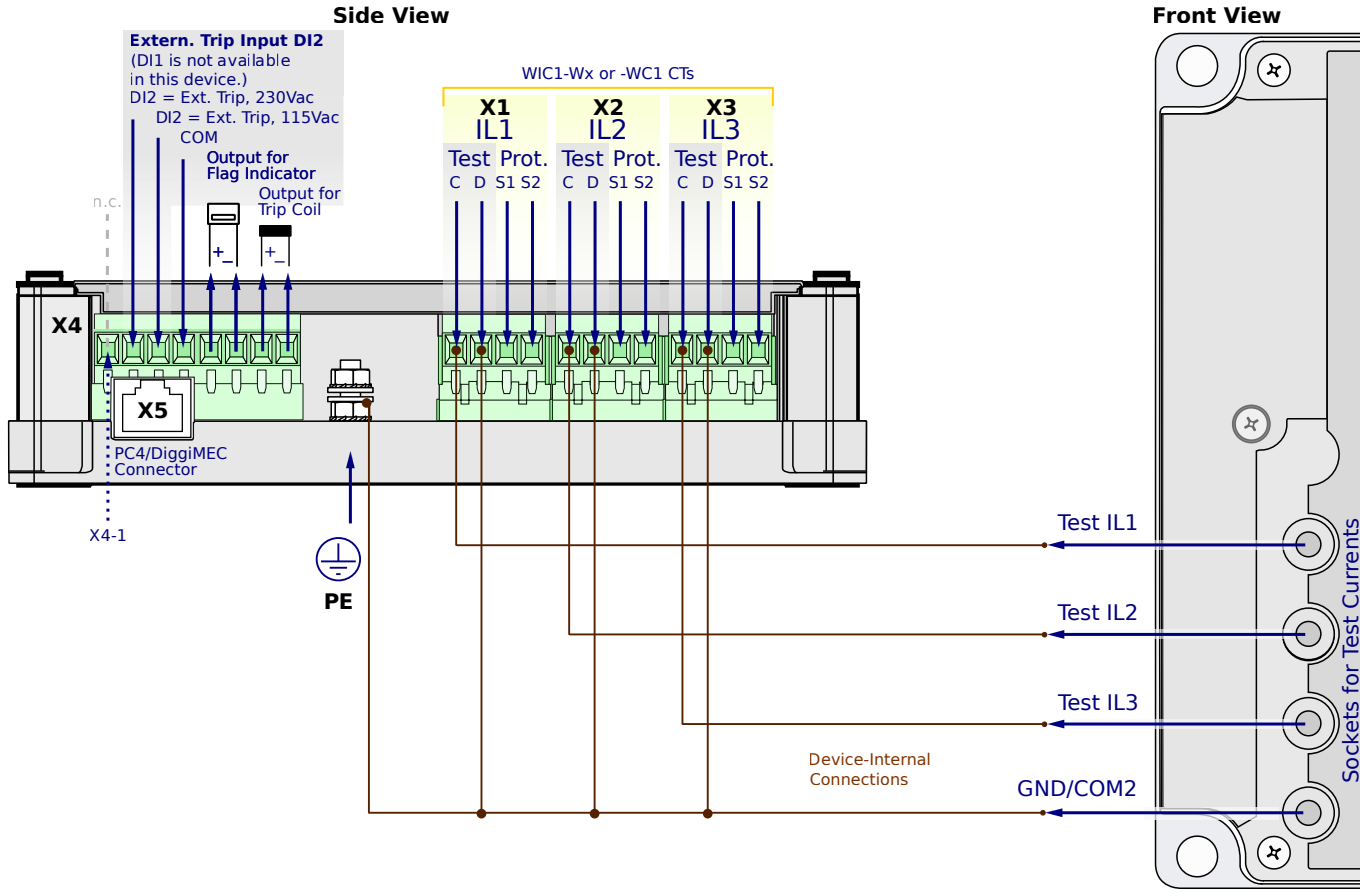


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1SA0

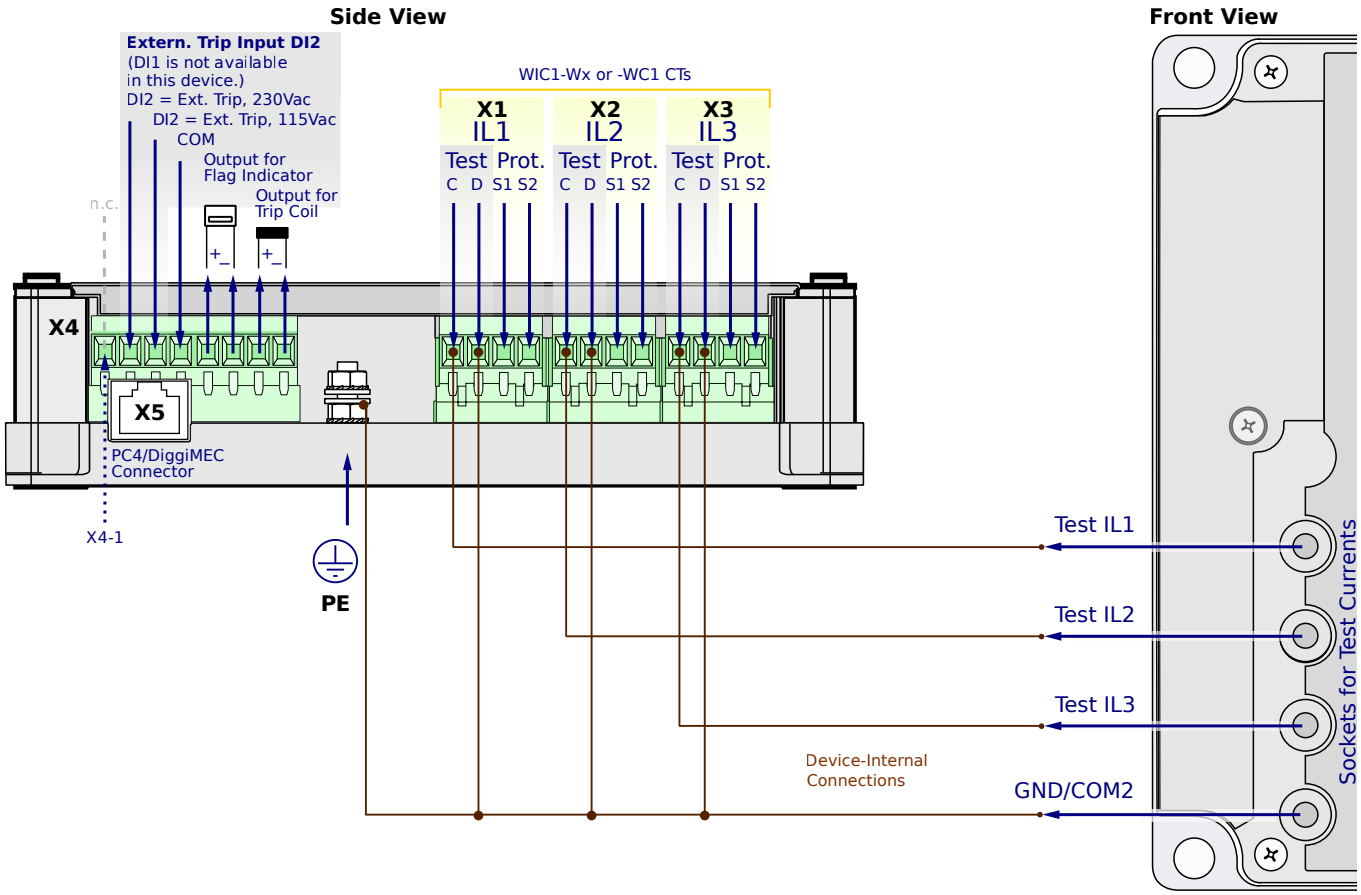


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1SAH

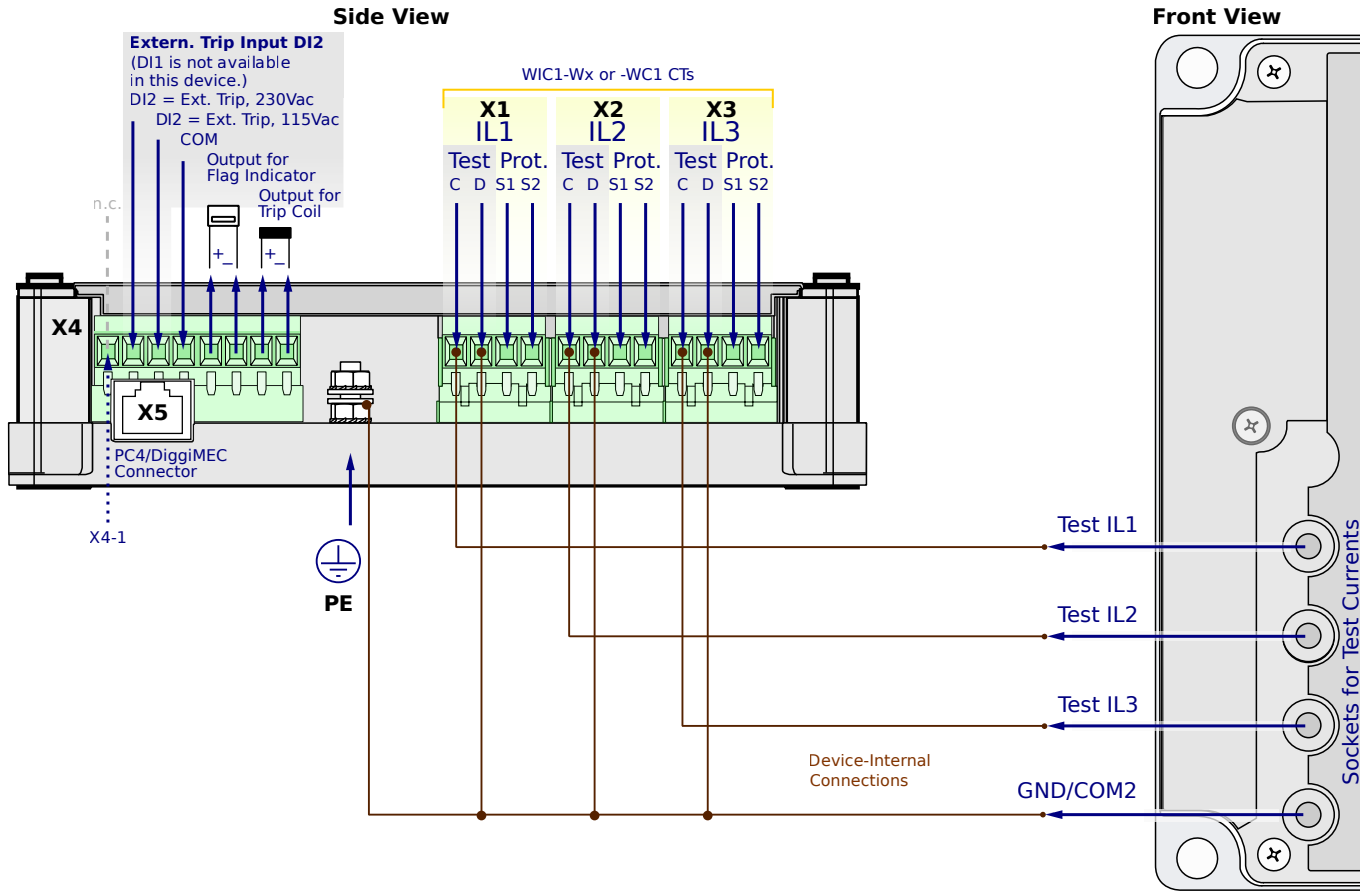


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1AA0

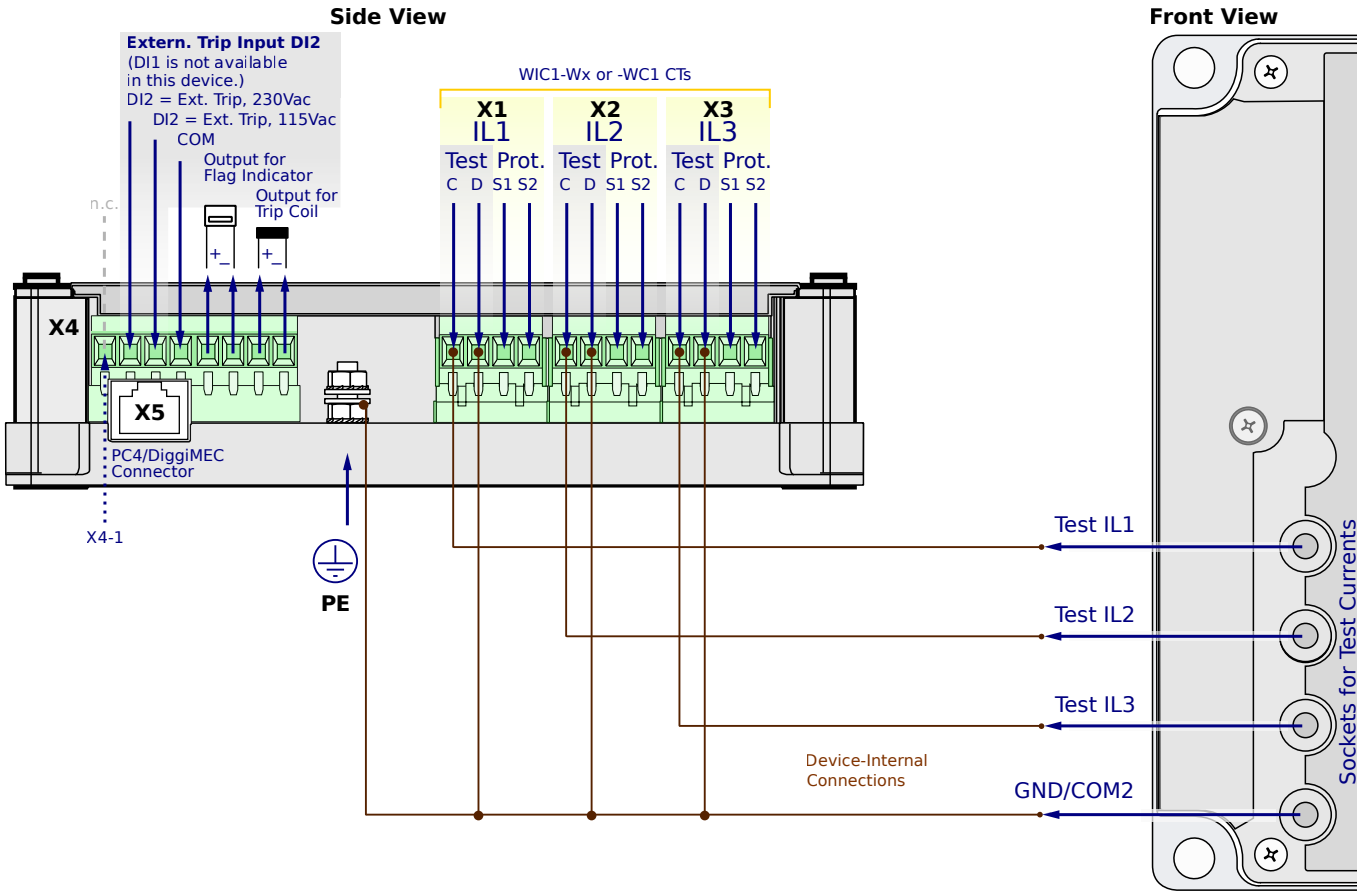


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1AAH

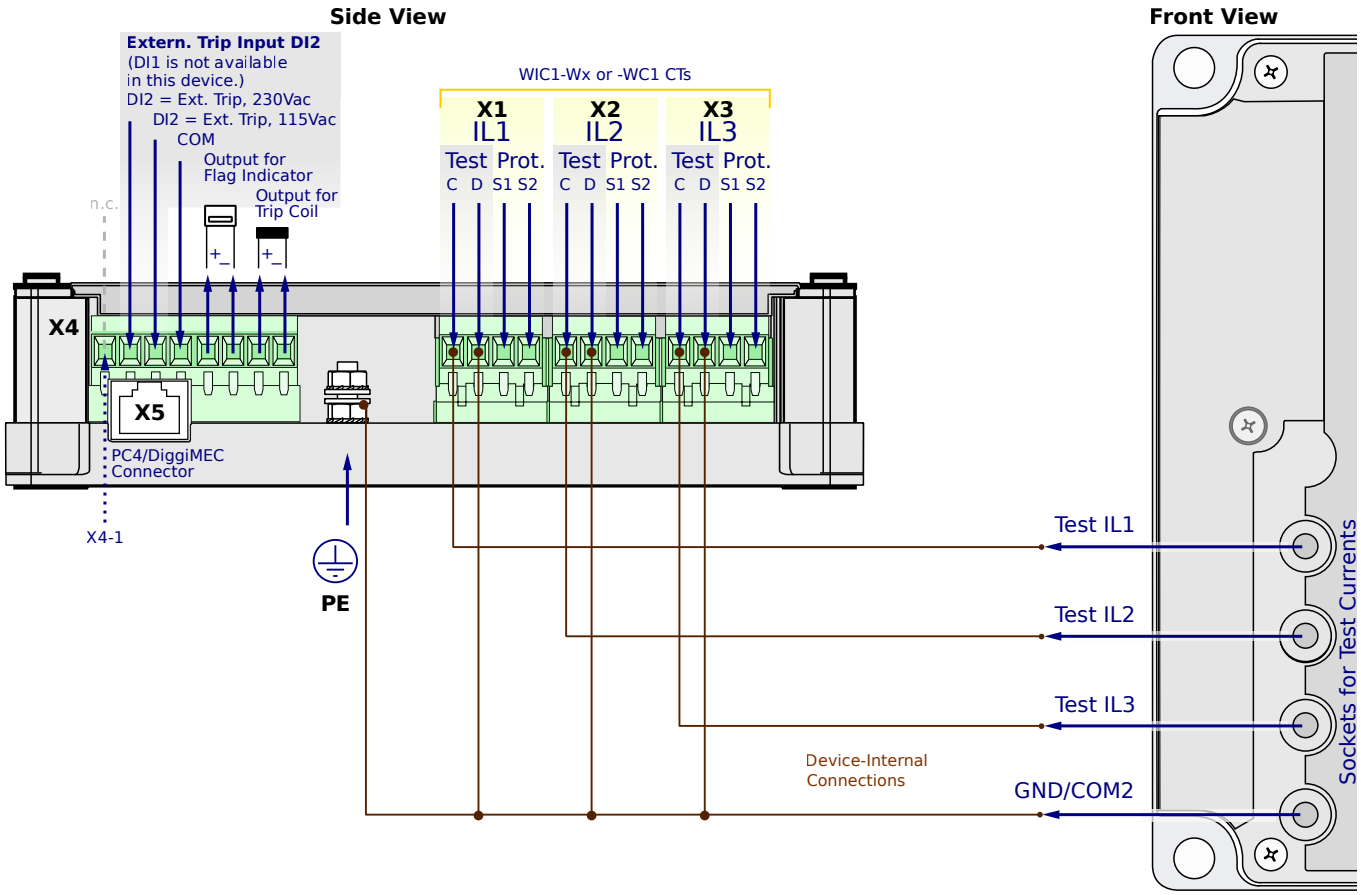


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1PA0

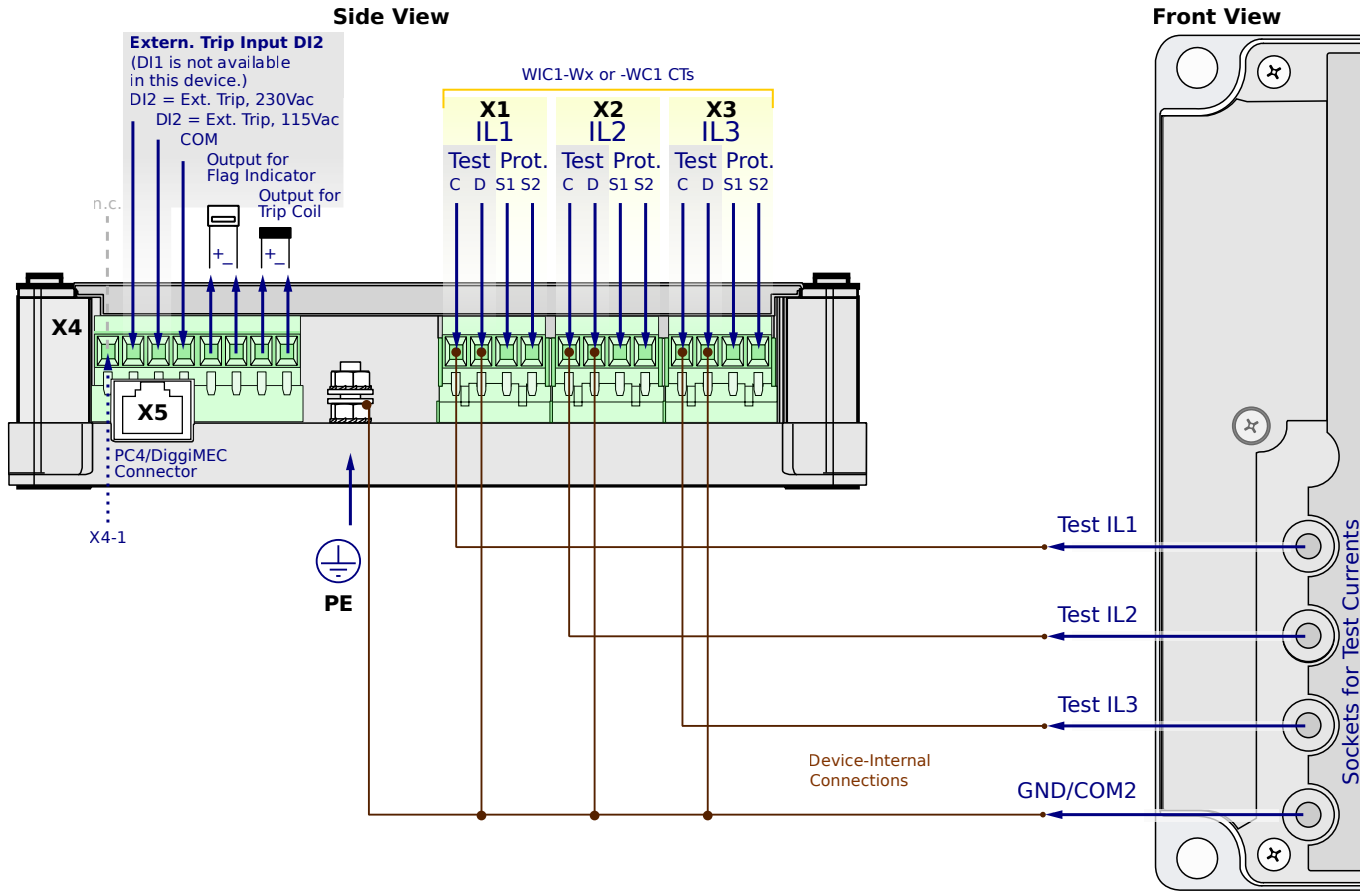


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF1PAH

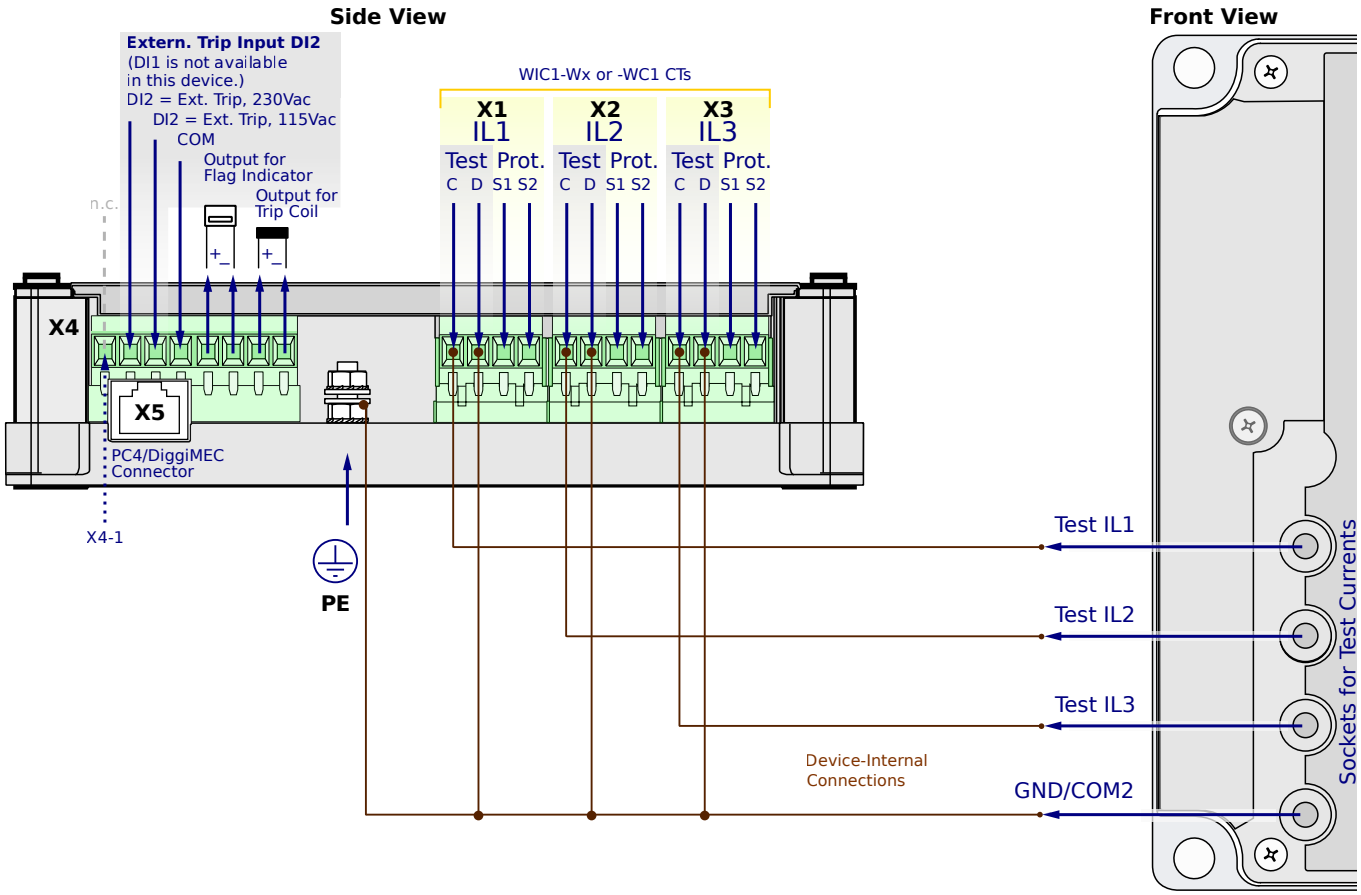


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2SA0

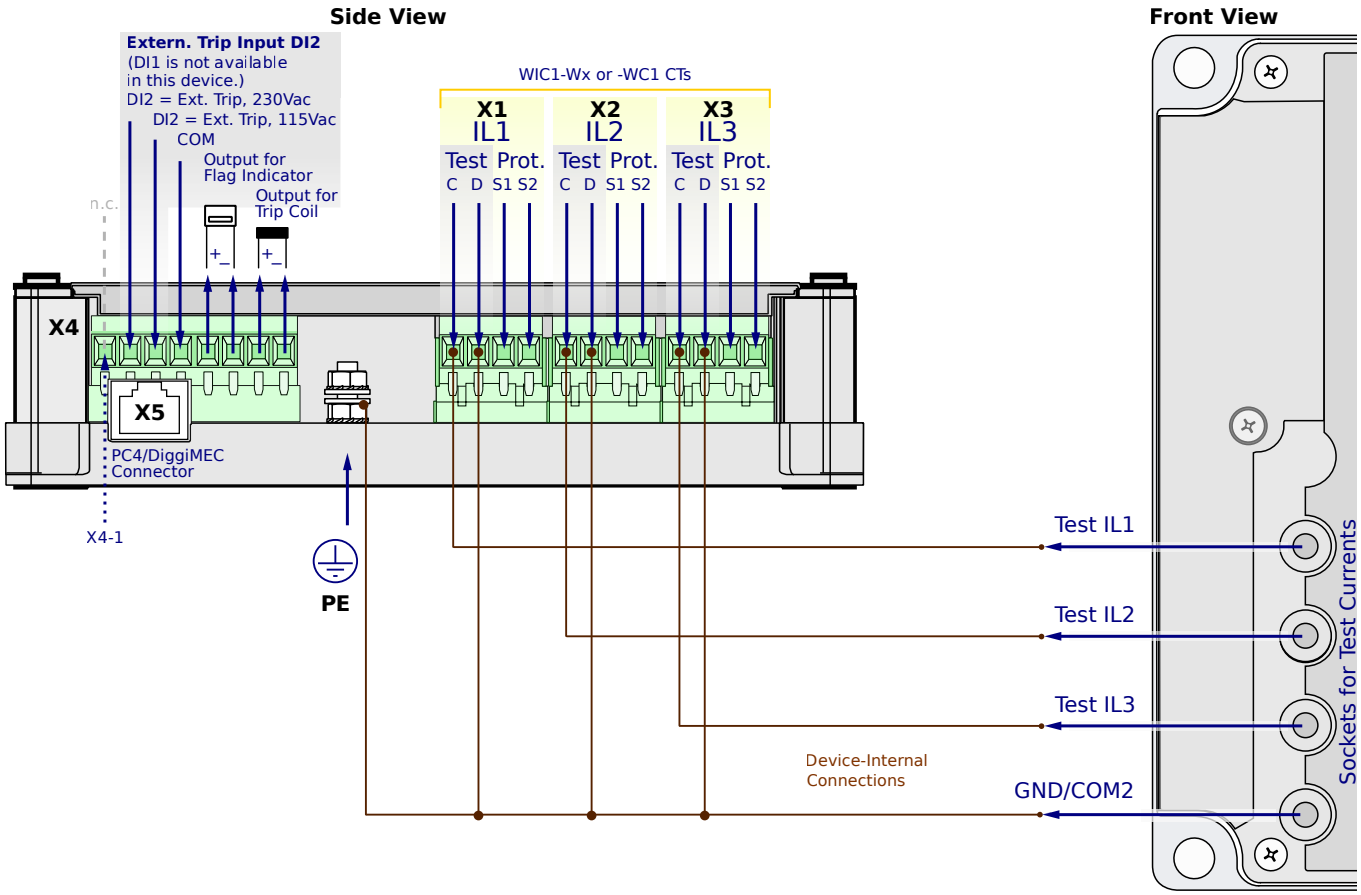


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2SAH

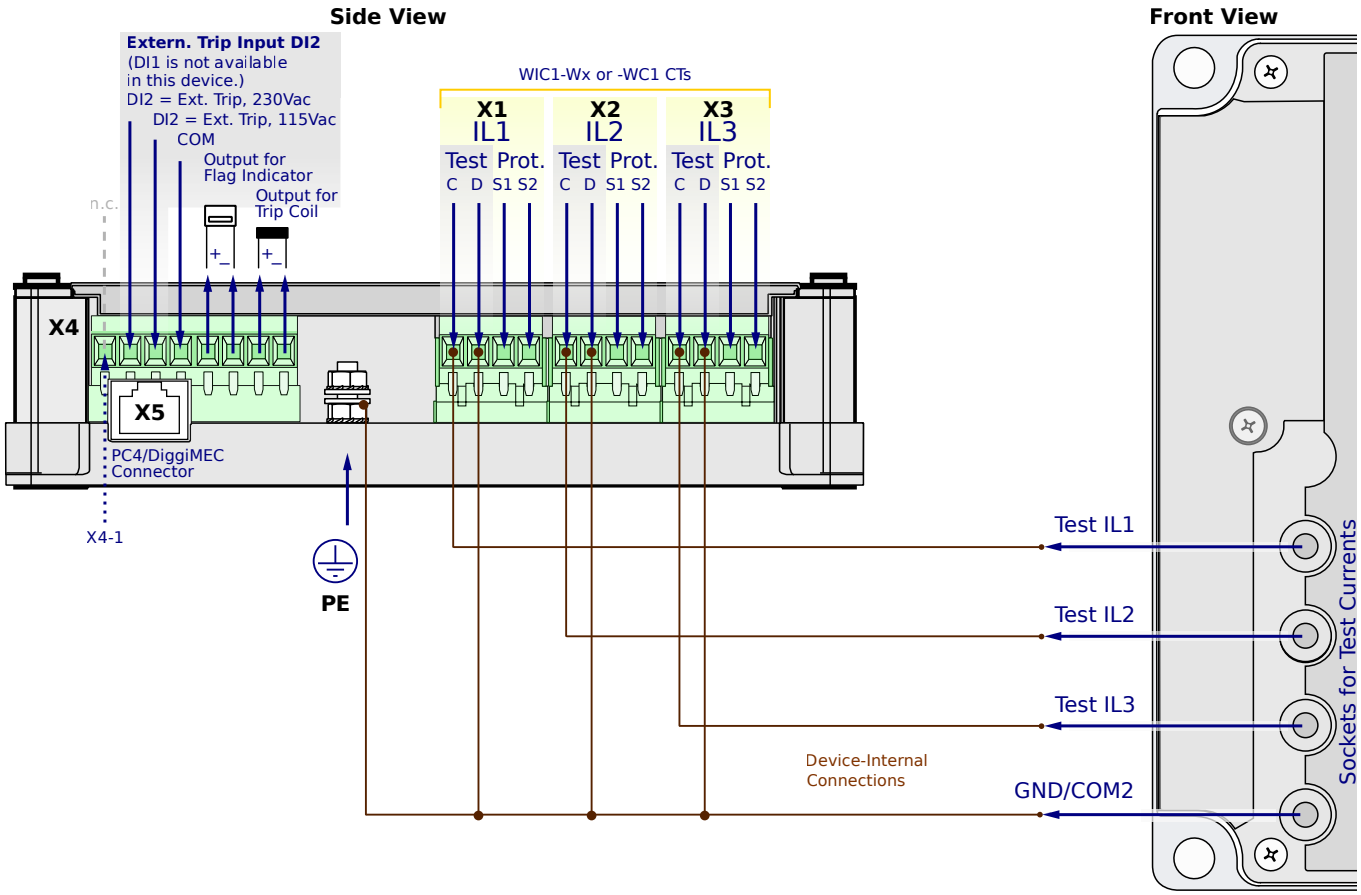


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2AA0

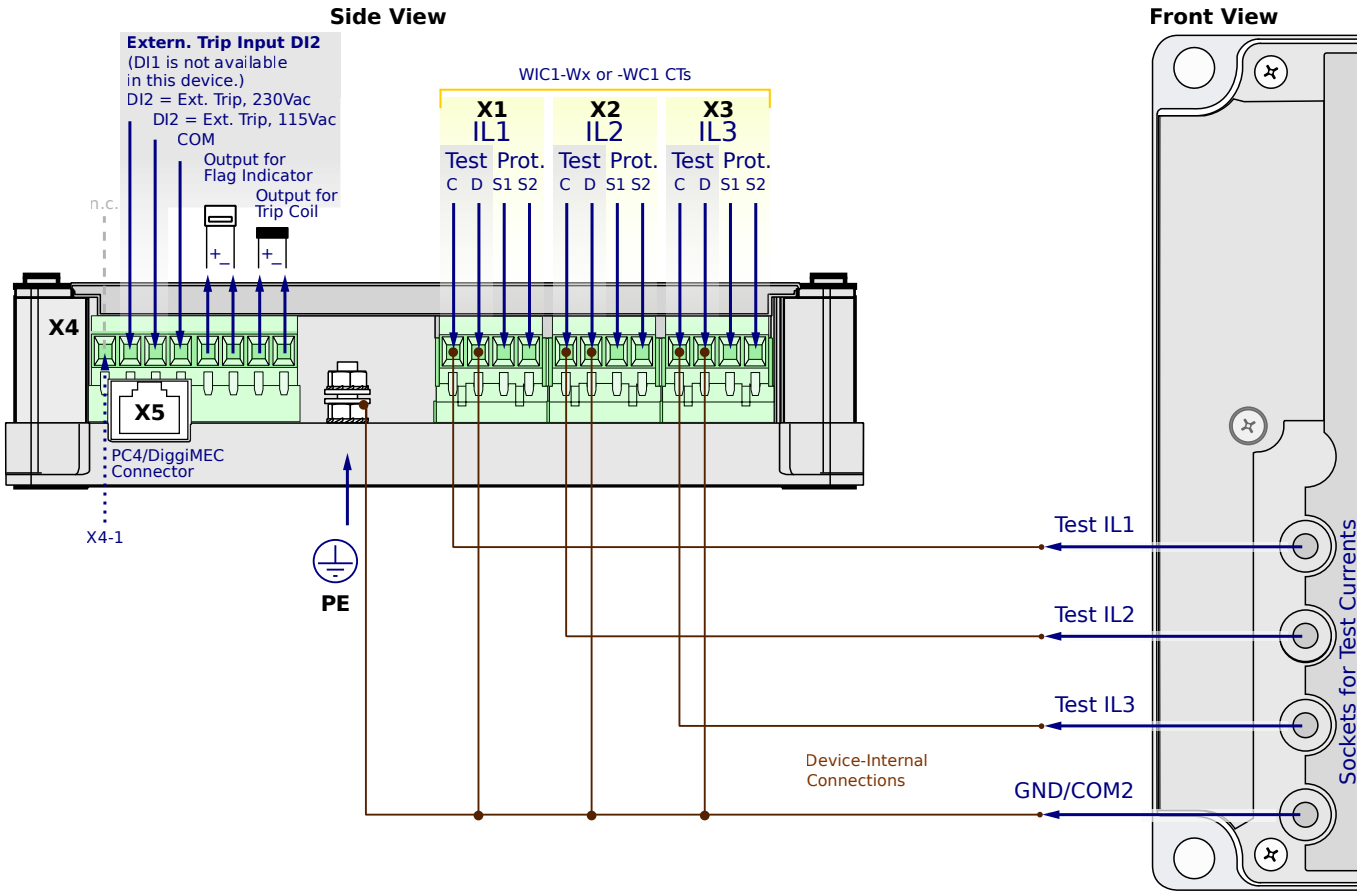


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2AAH

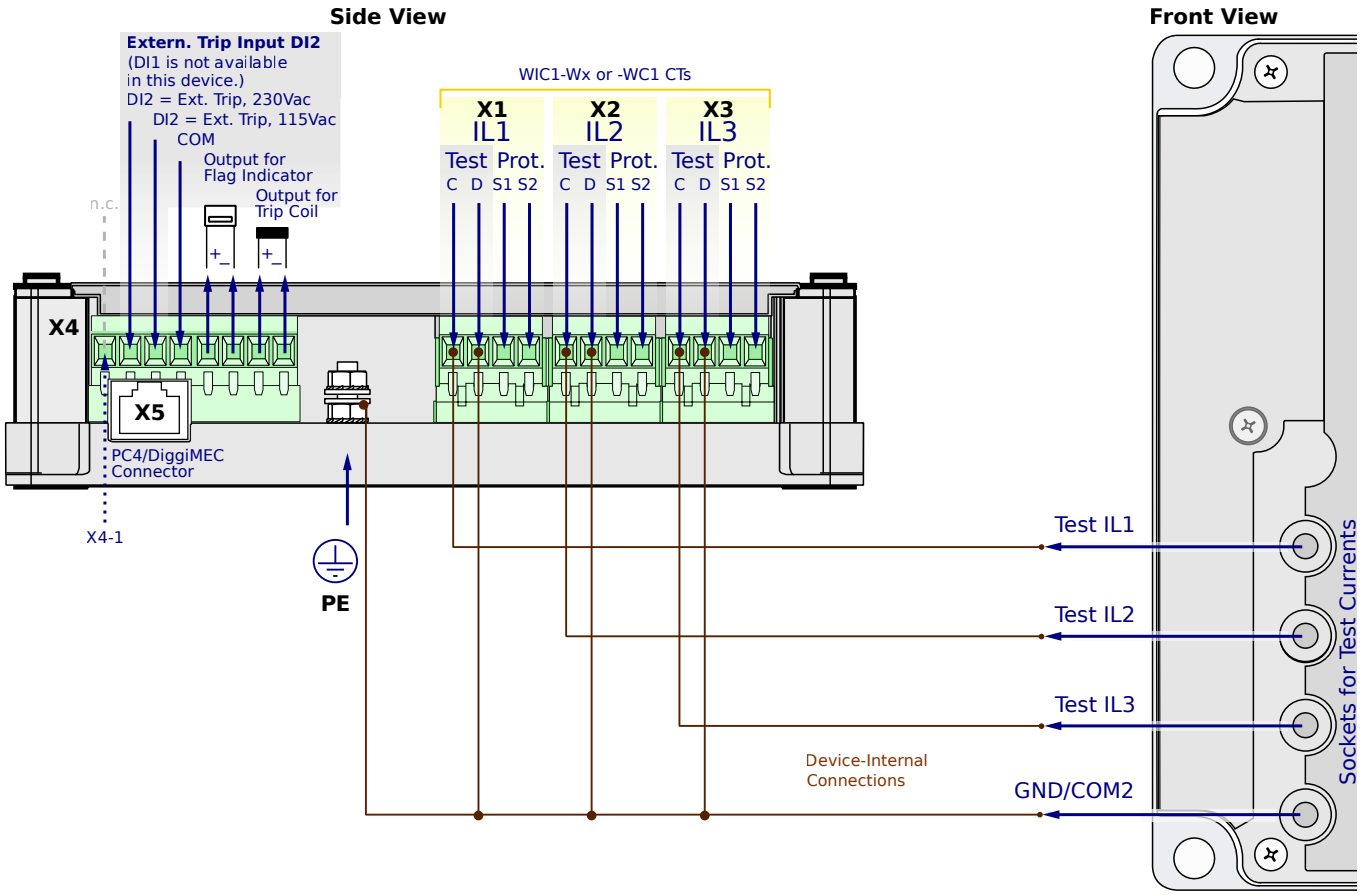


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2PA0

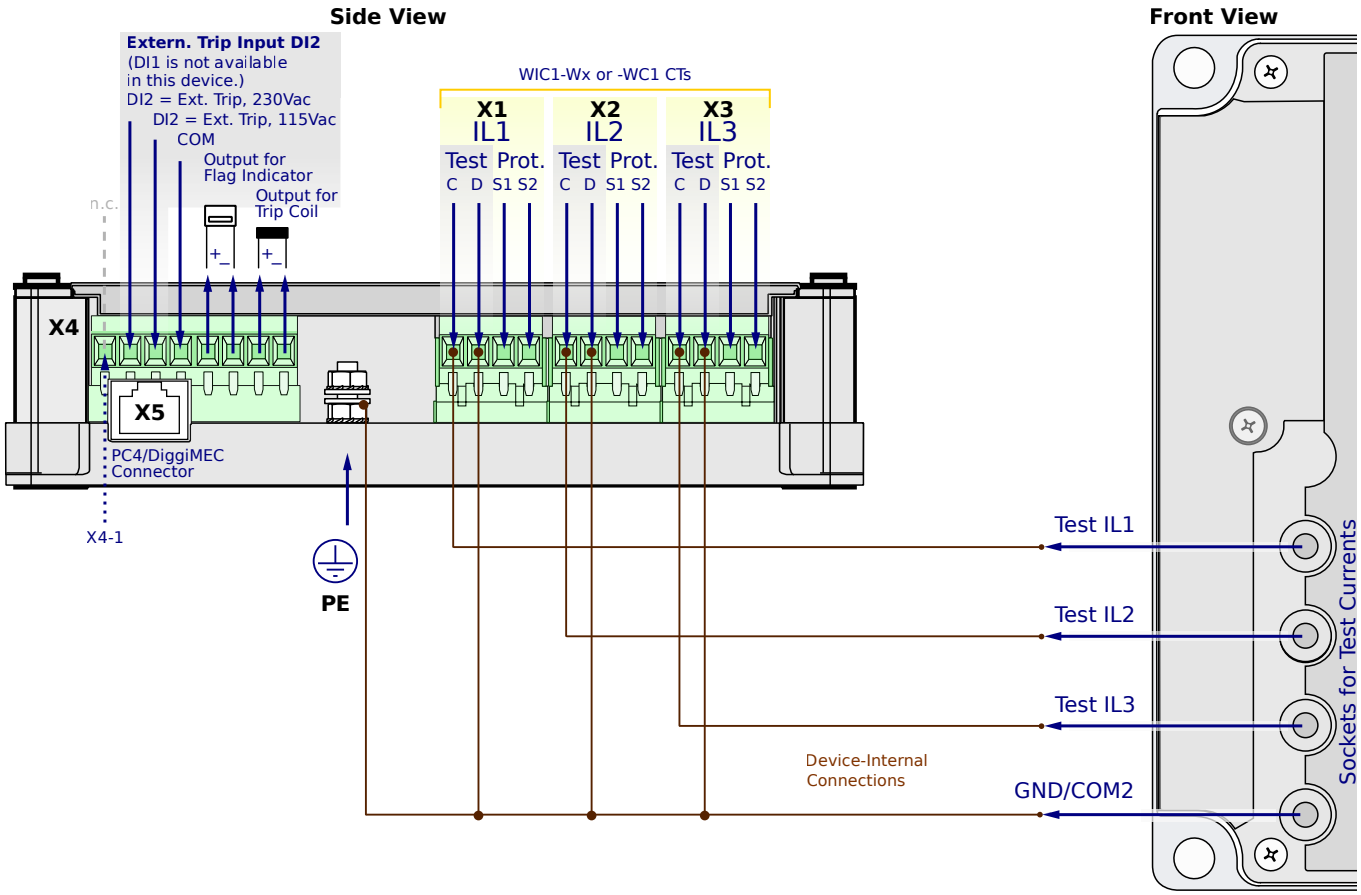


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NF2PAH

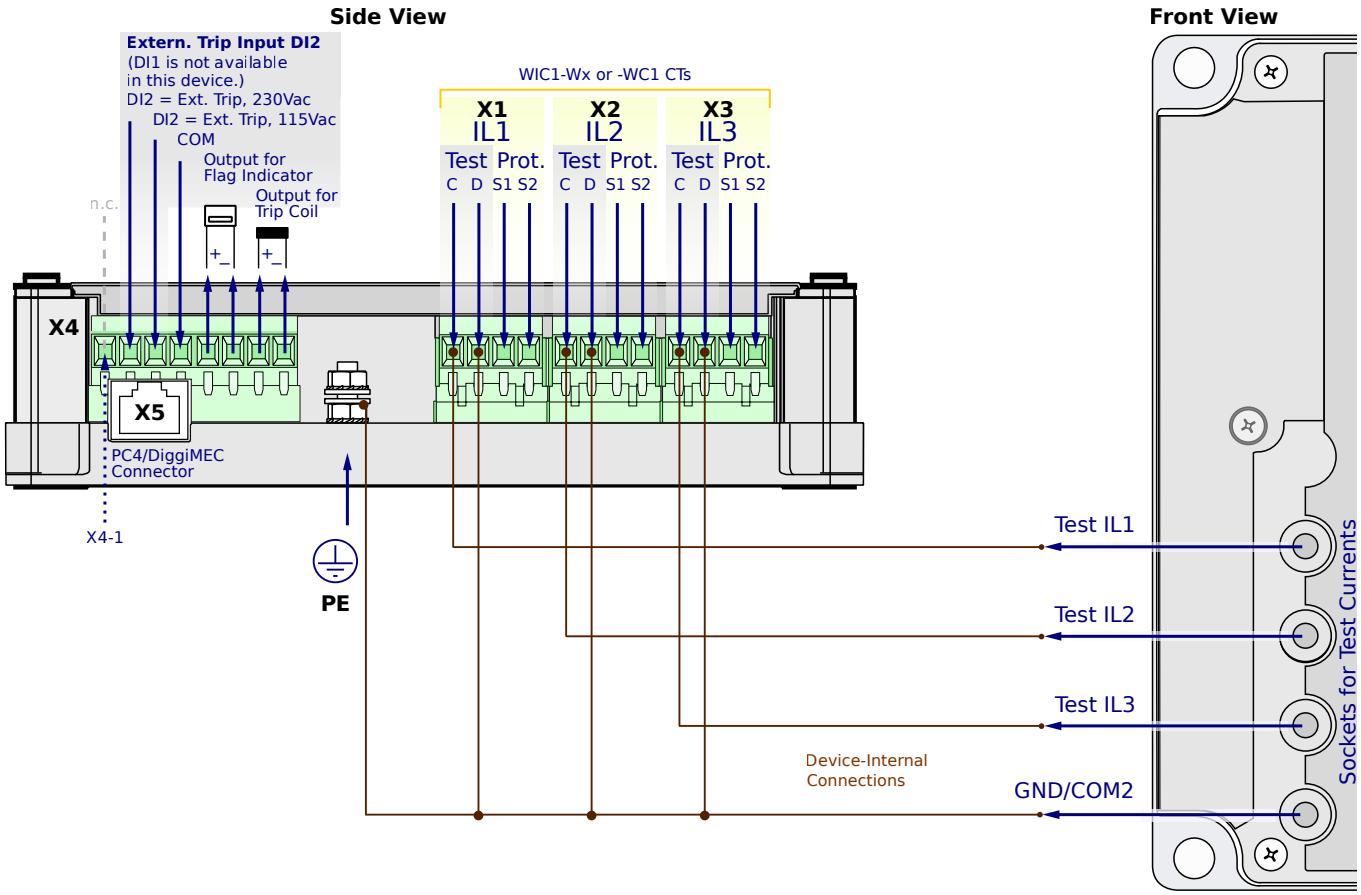


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0SA0

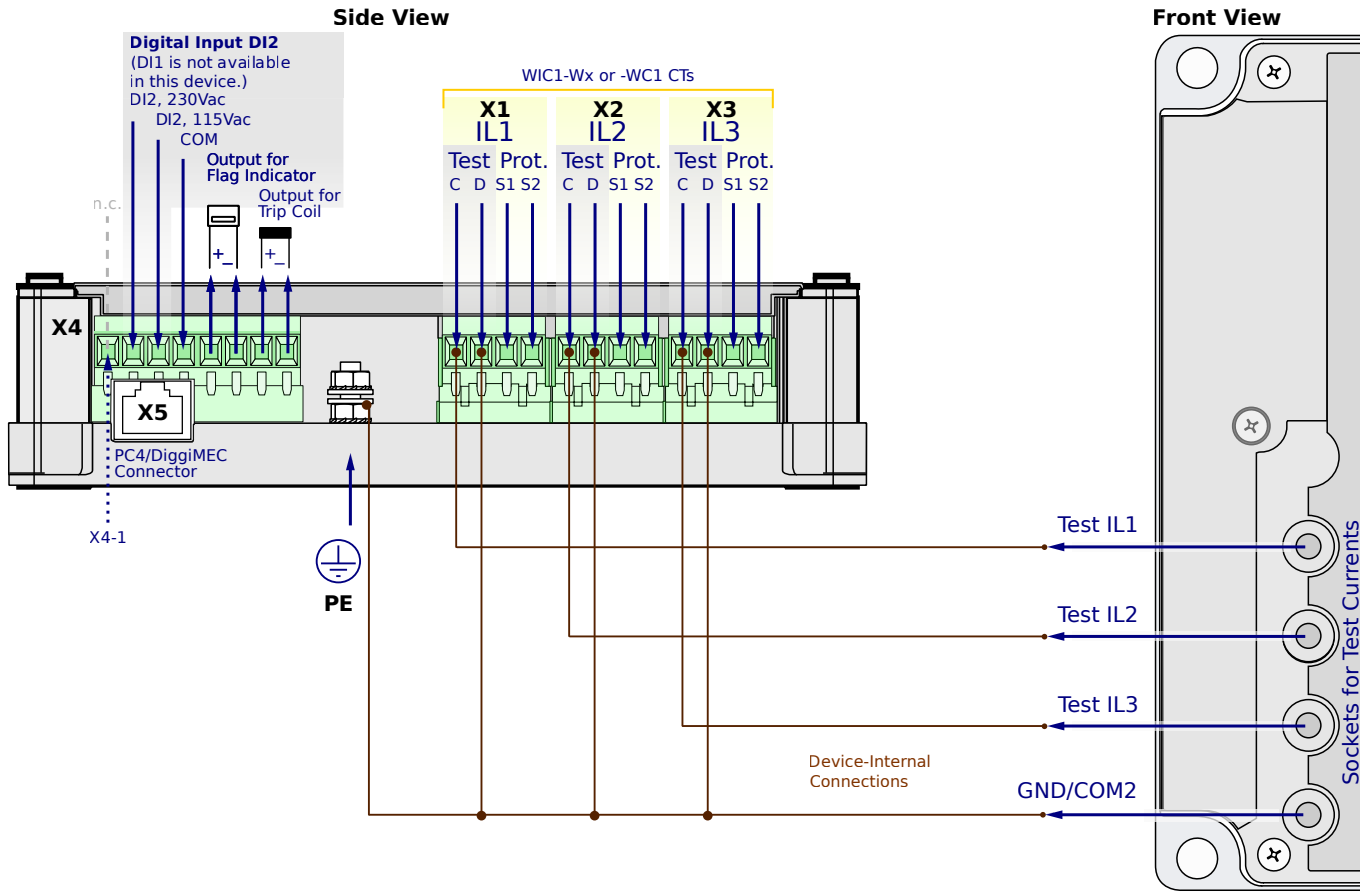


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0SAH

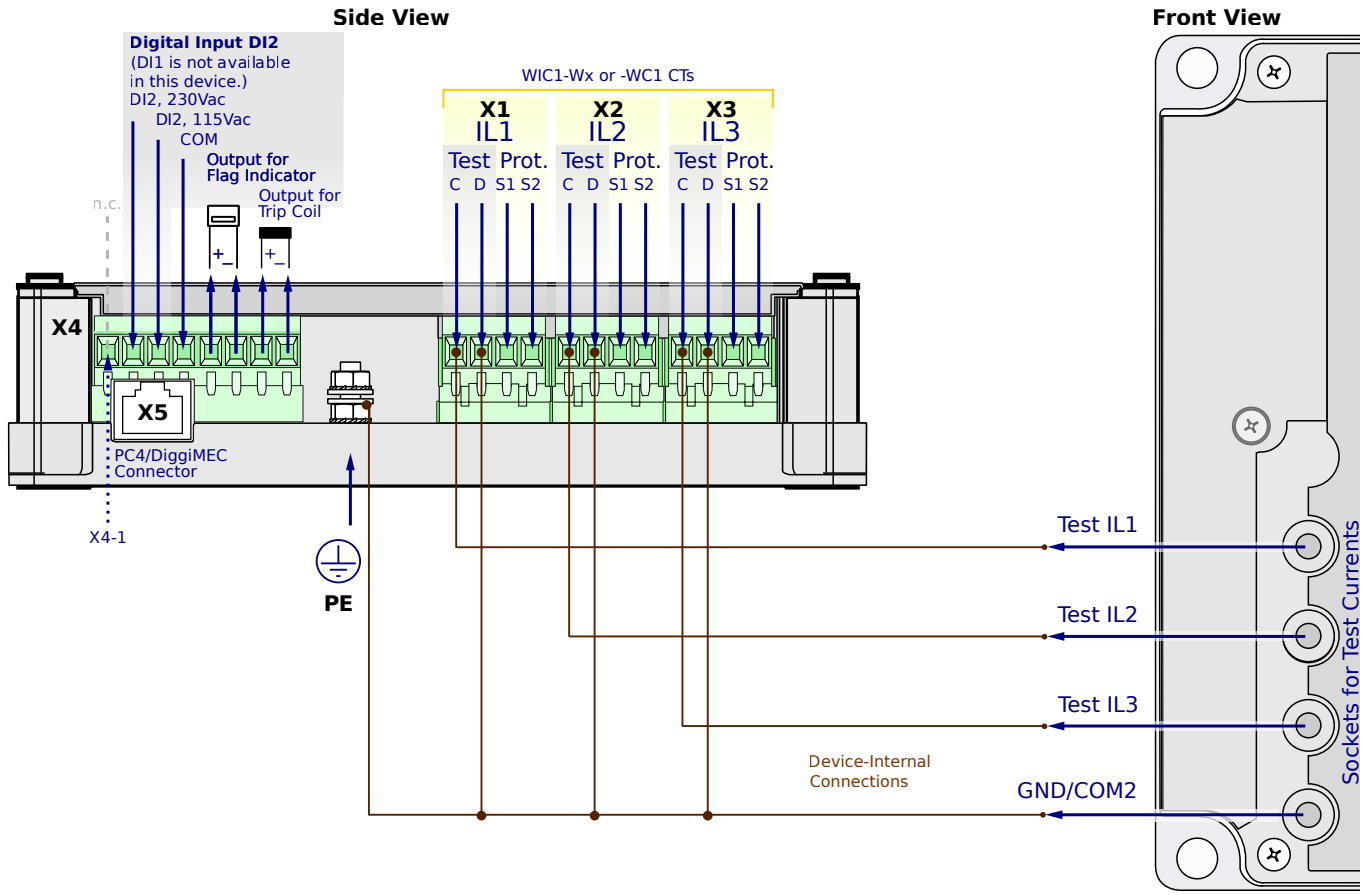


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0AA0

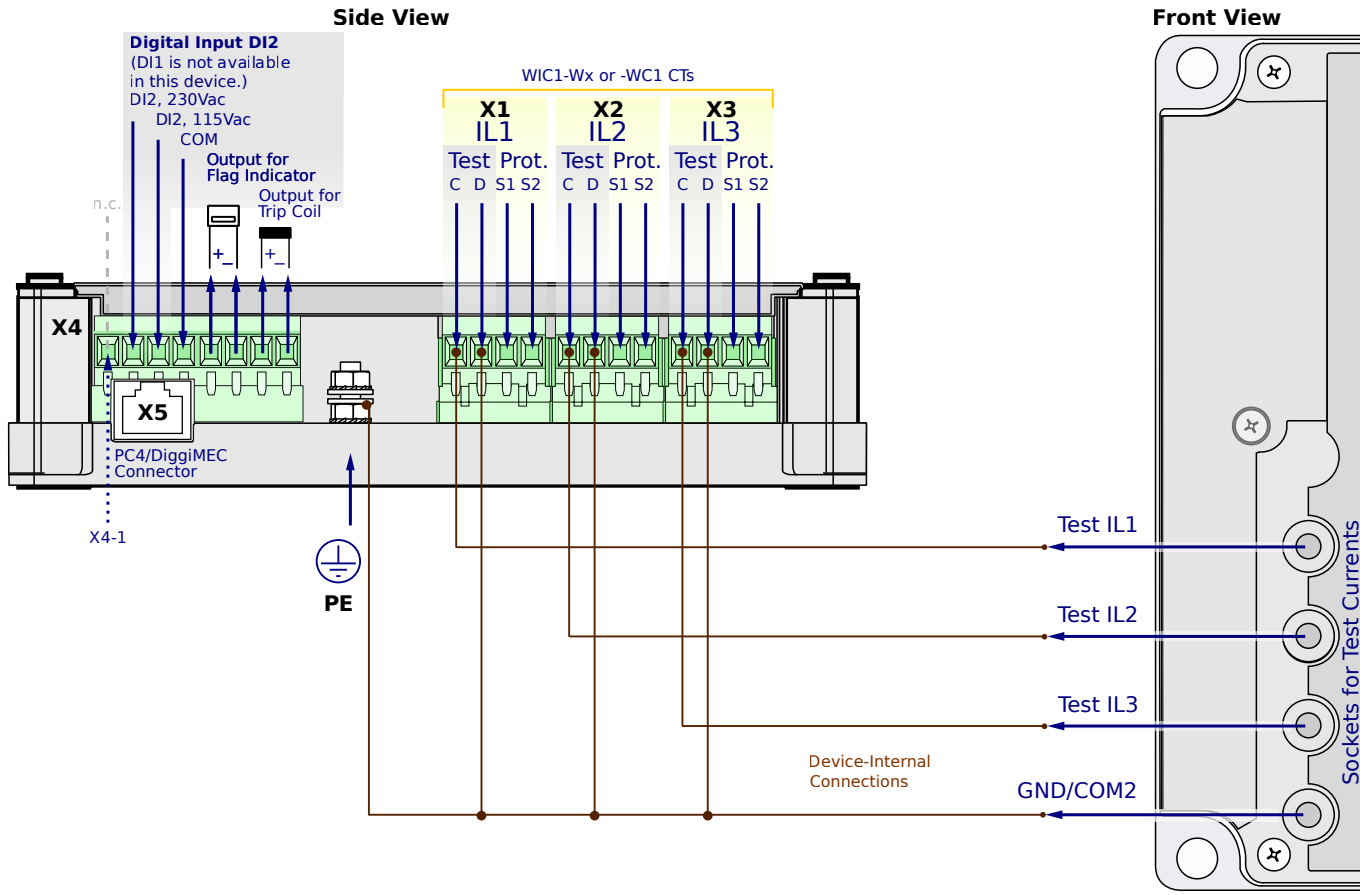


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0AAH

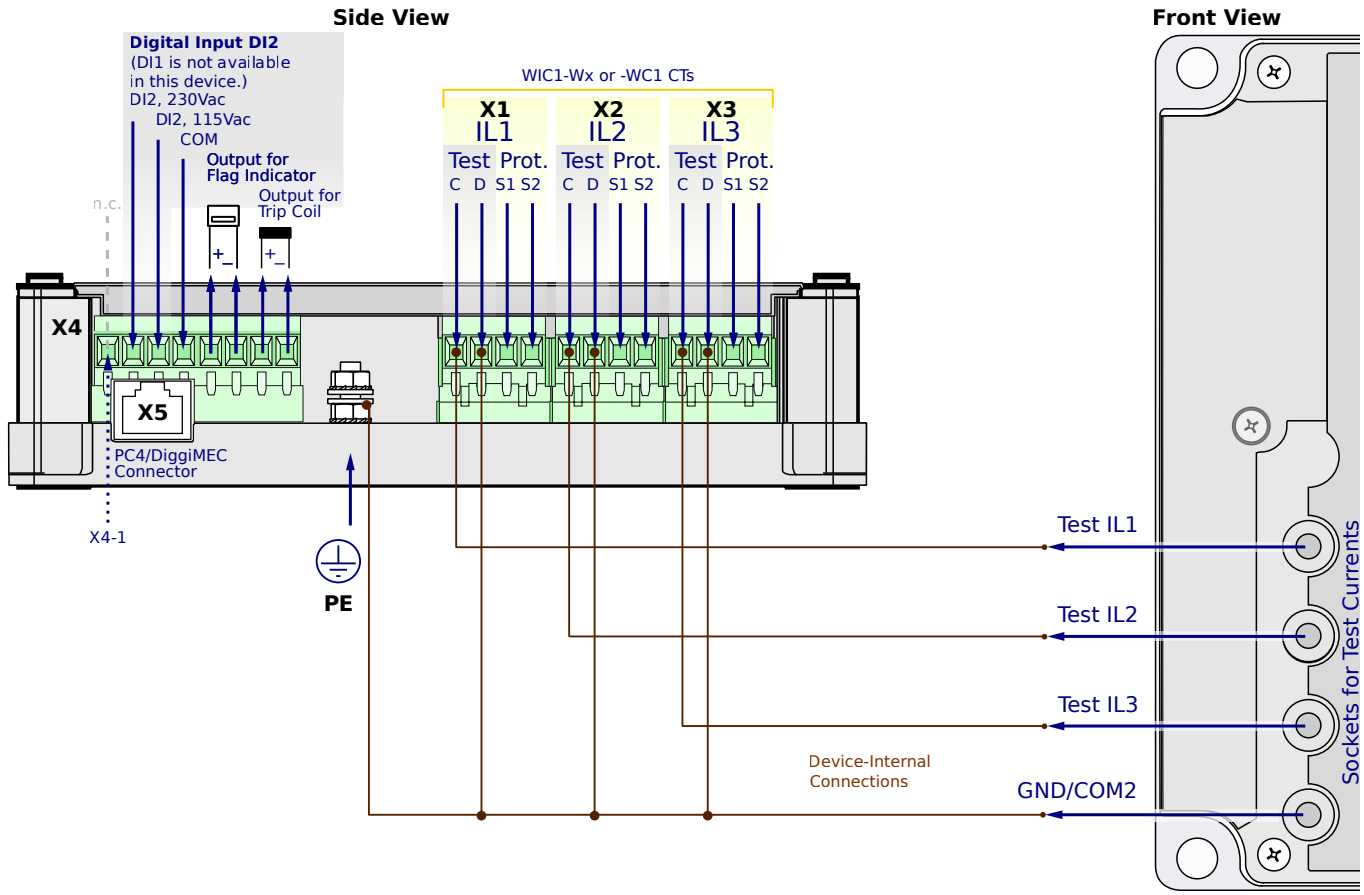


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0PA0

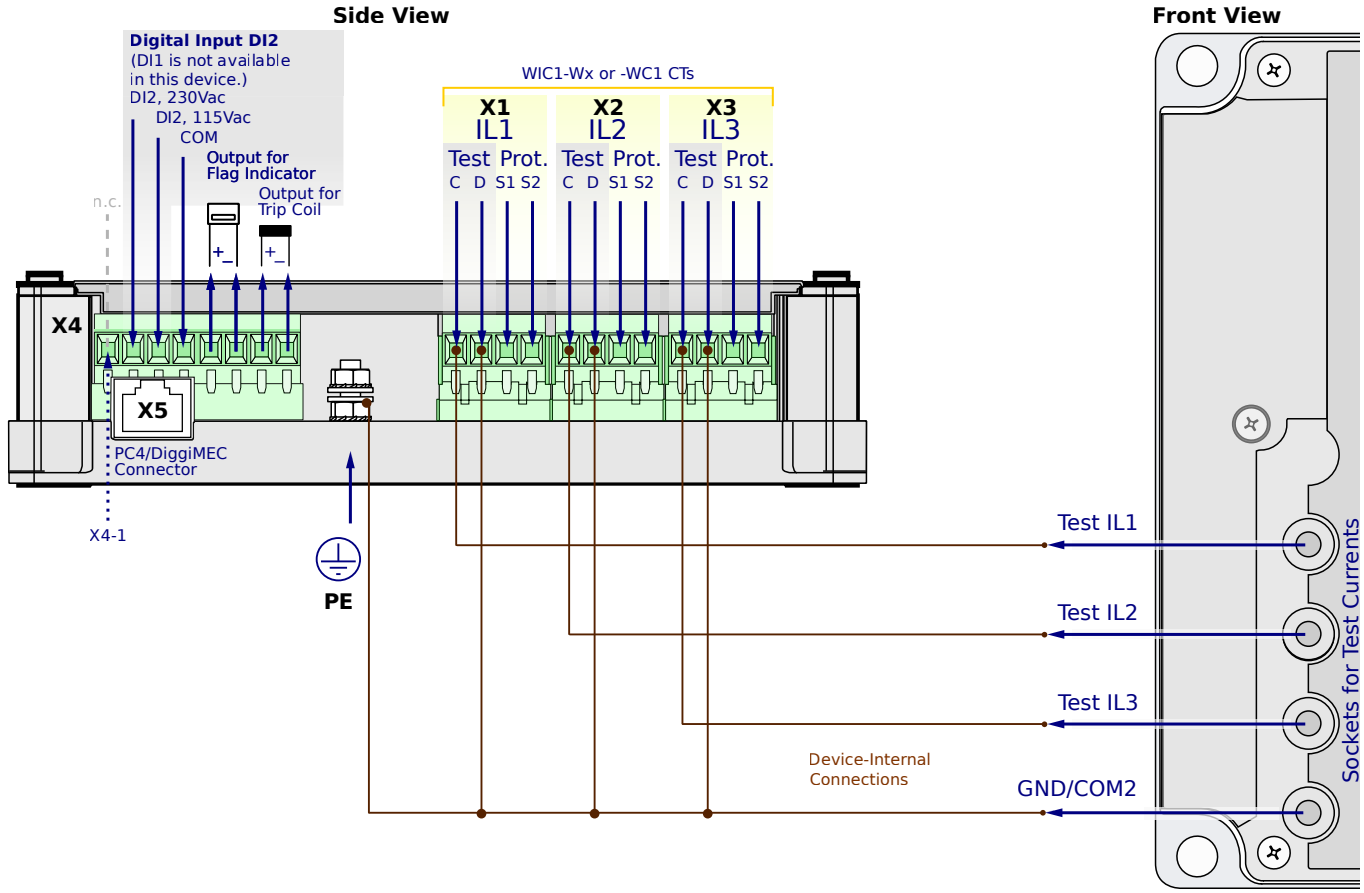


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC0PAH

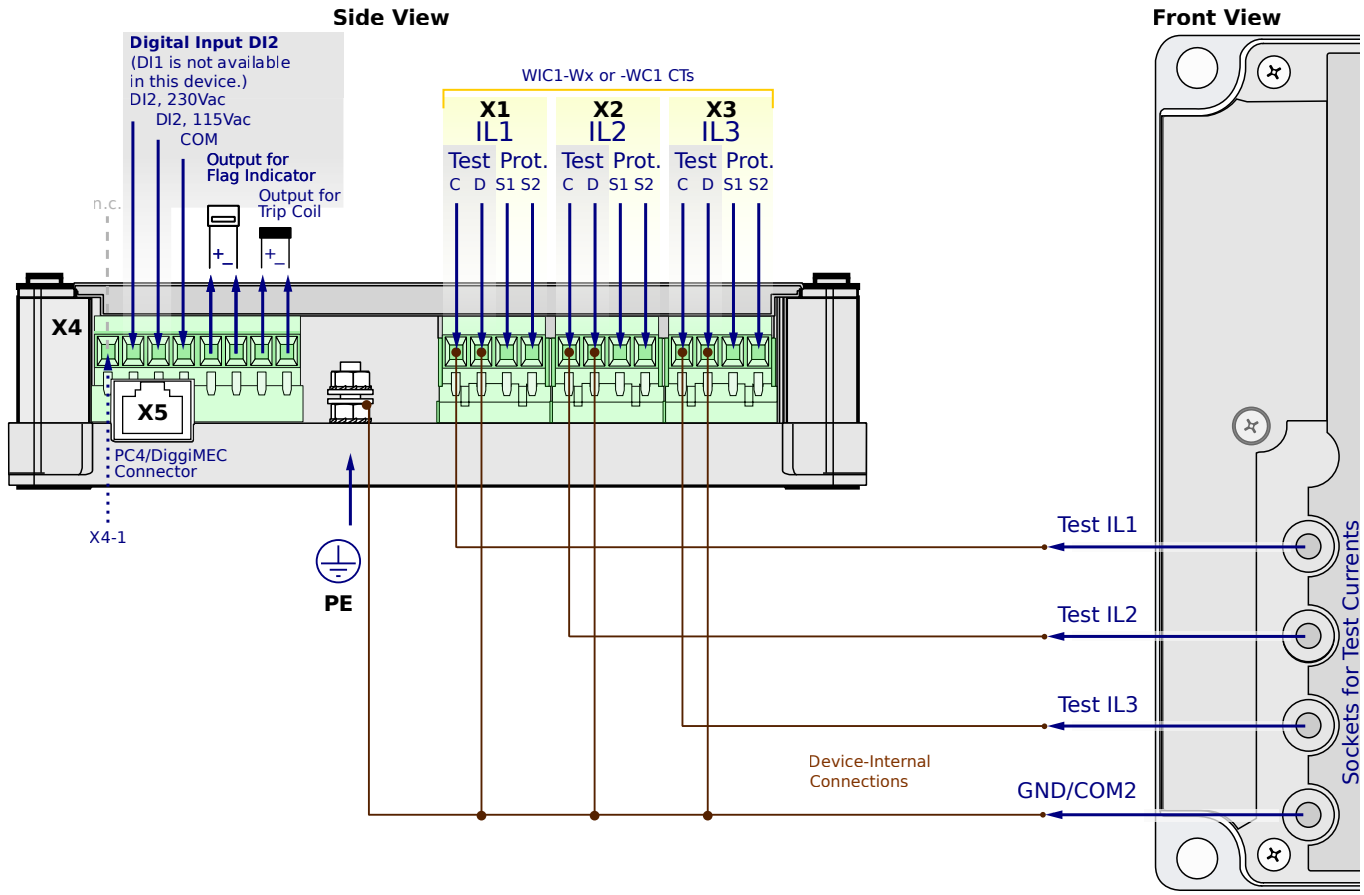


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1SA0

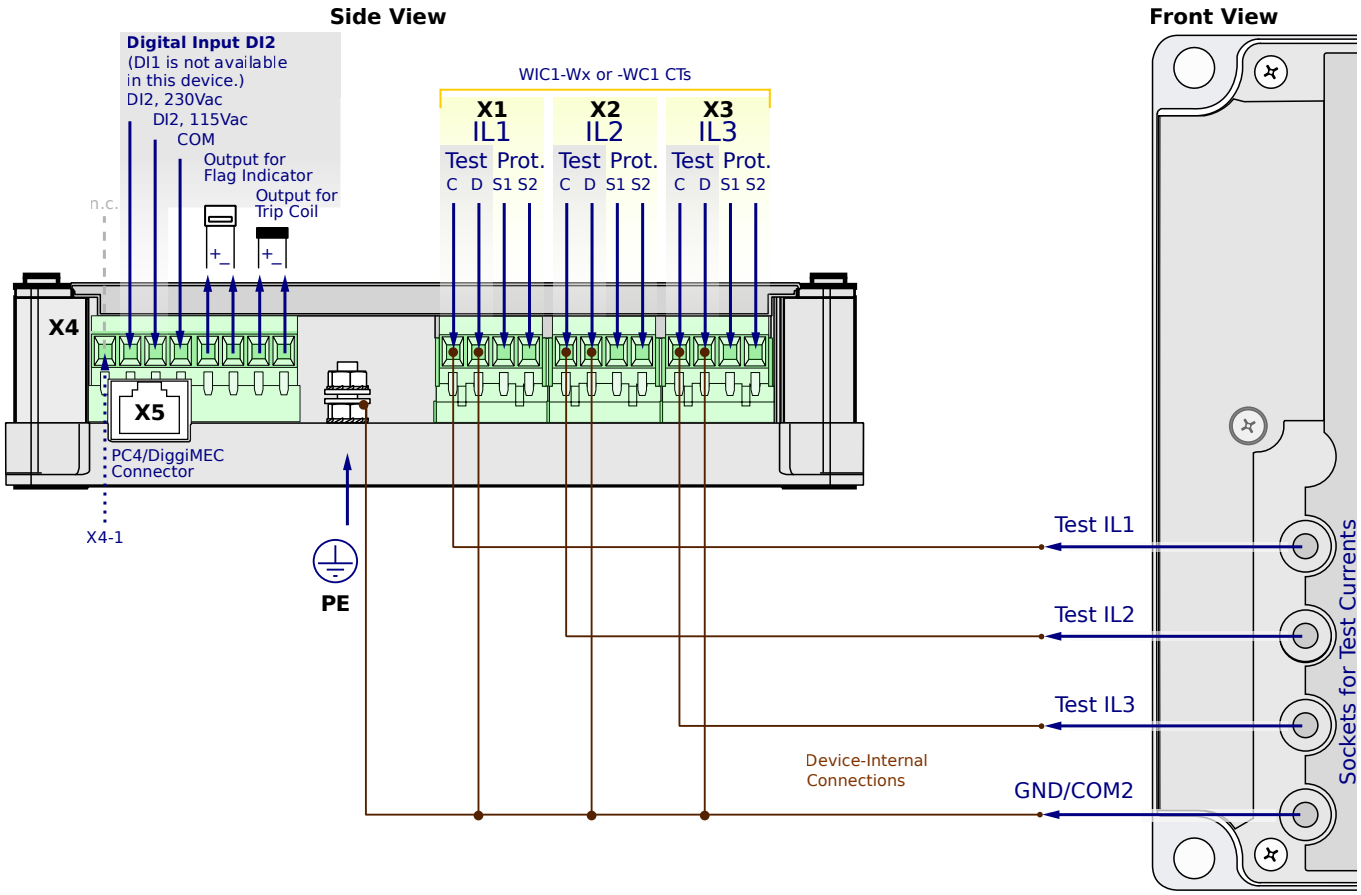


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1SAH

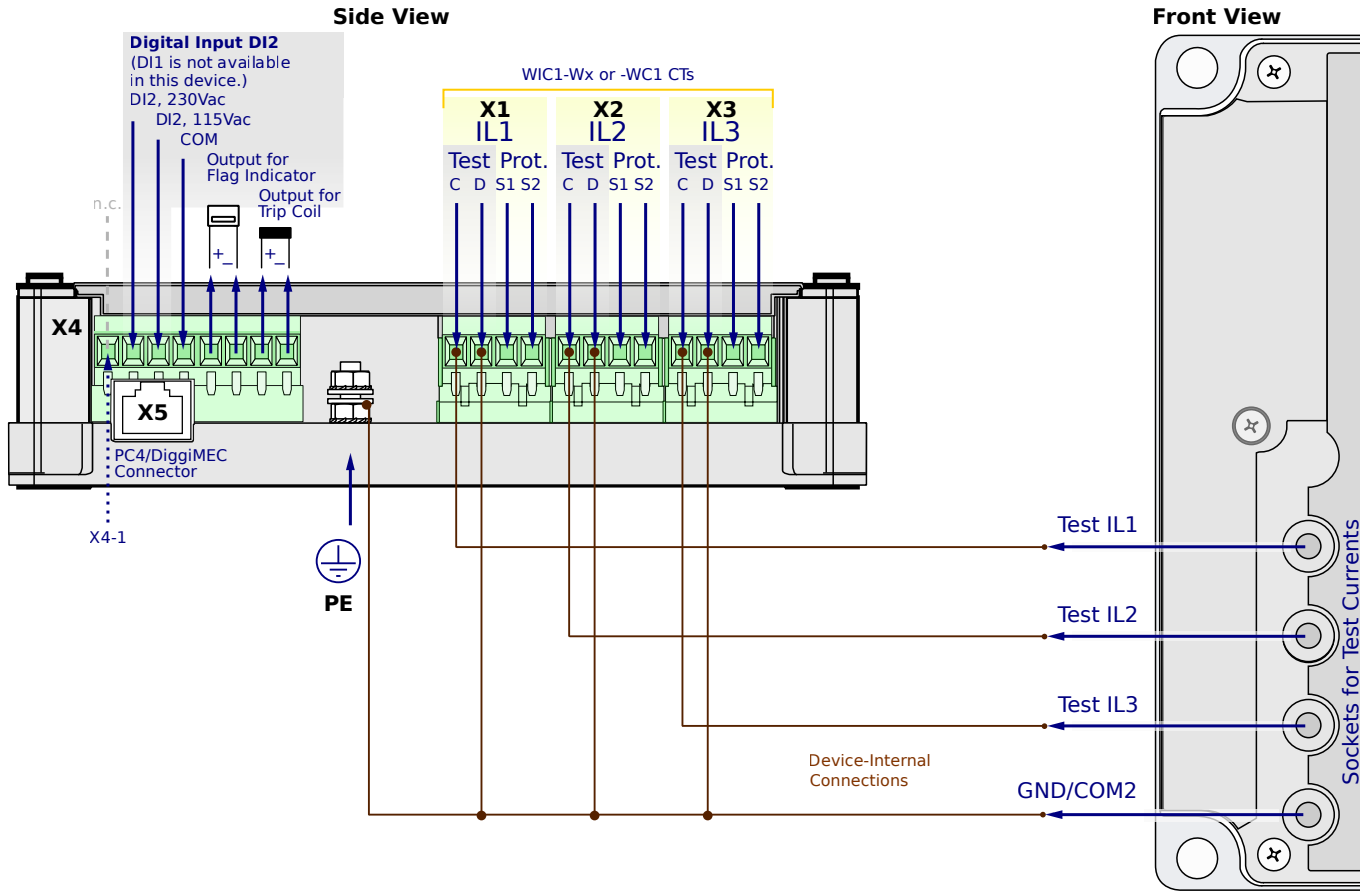


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1AA0

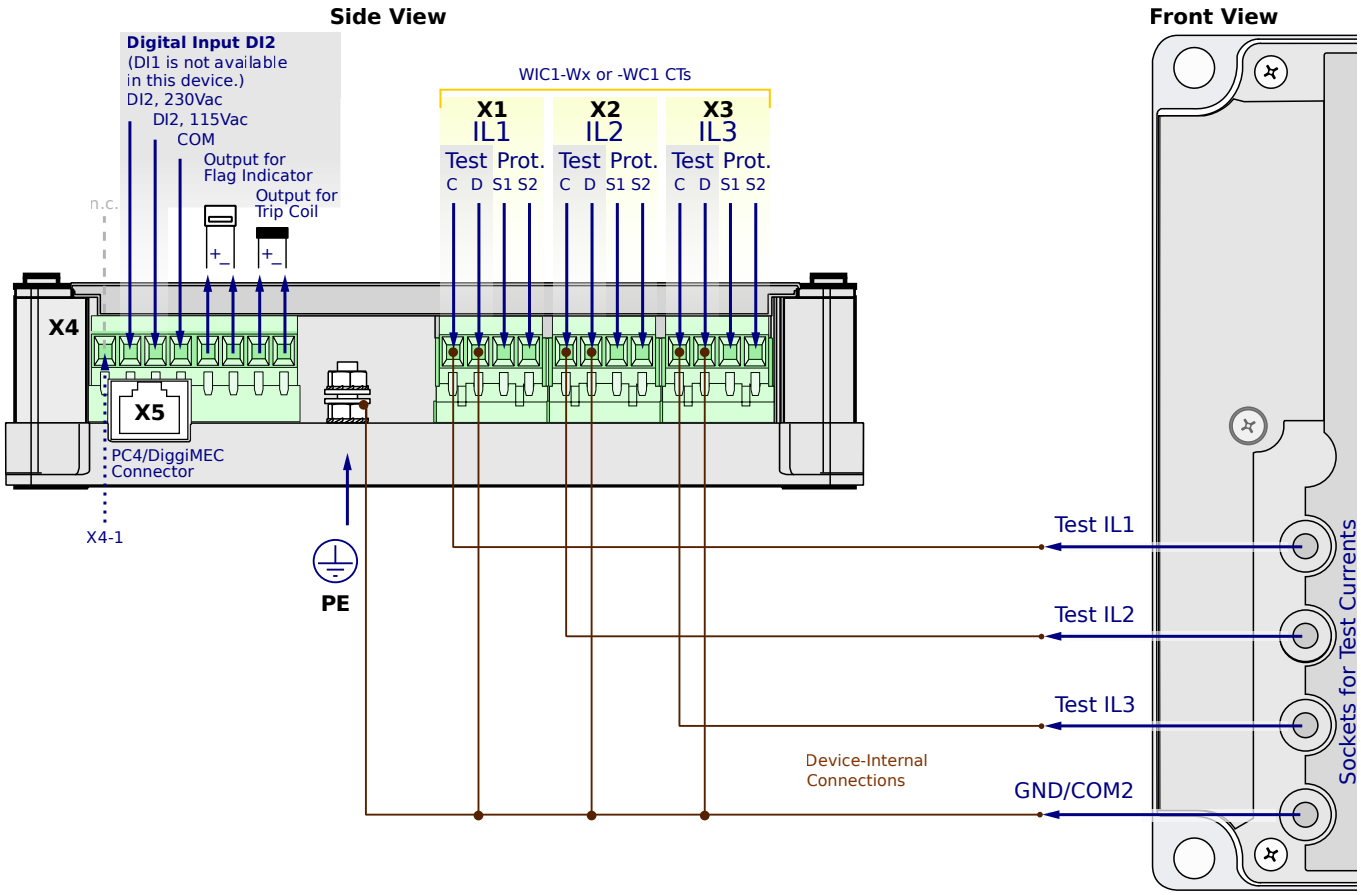


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1AAH

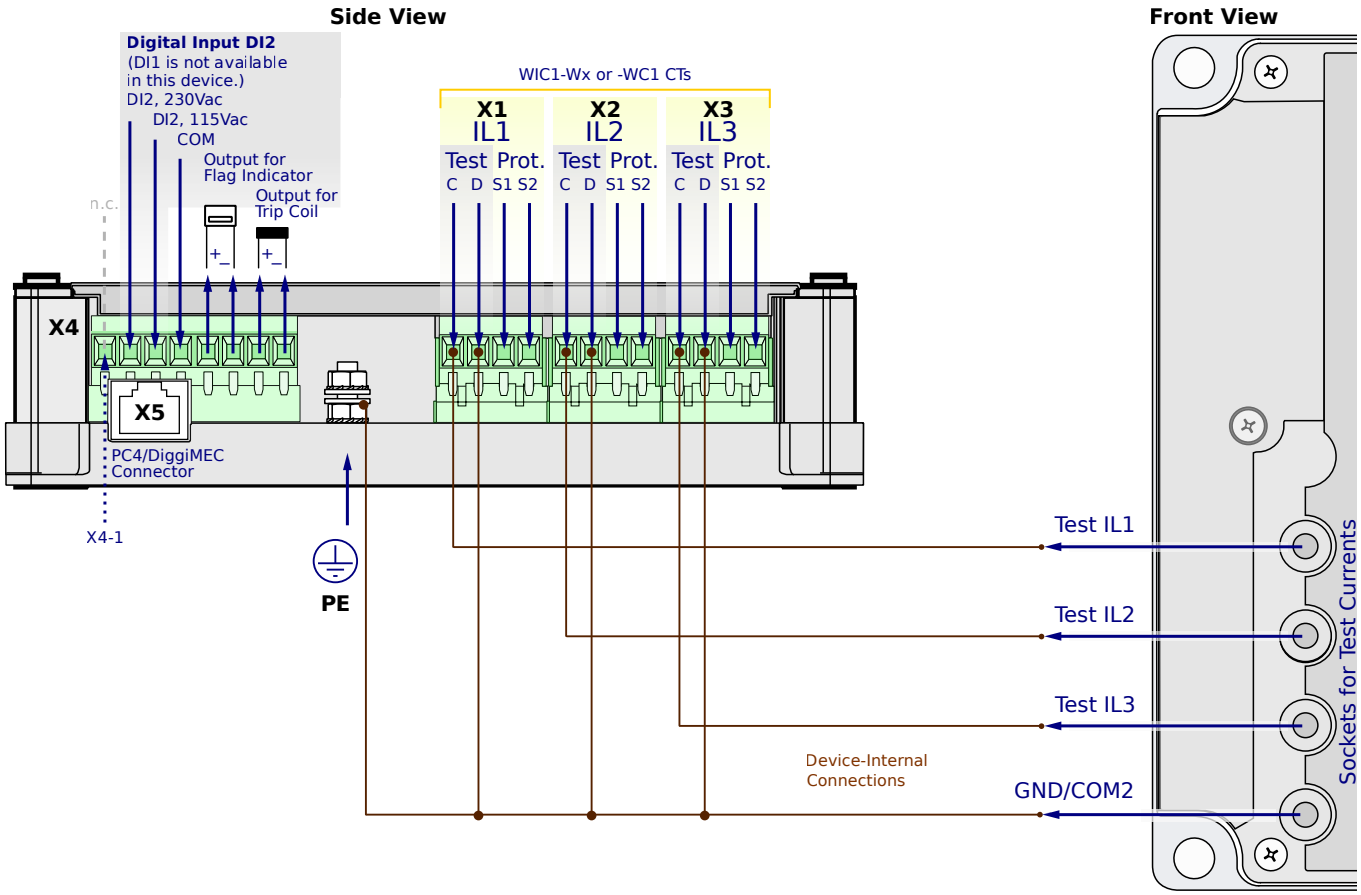


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1PA0

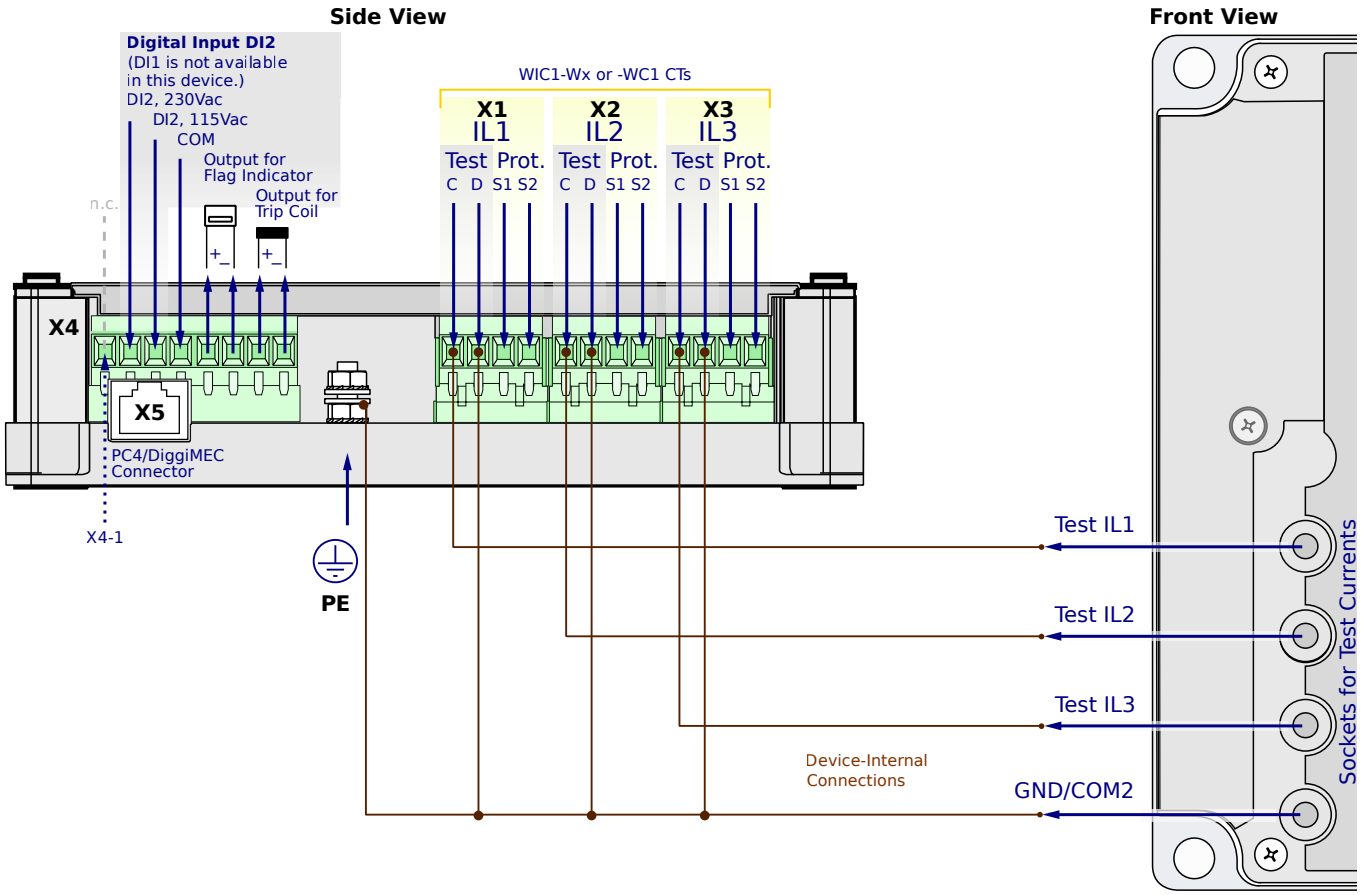


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC1PAH

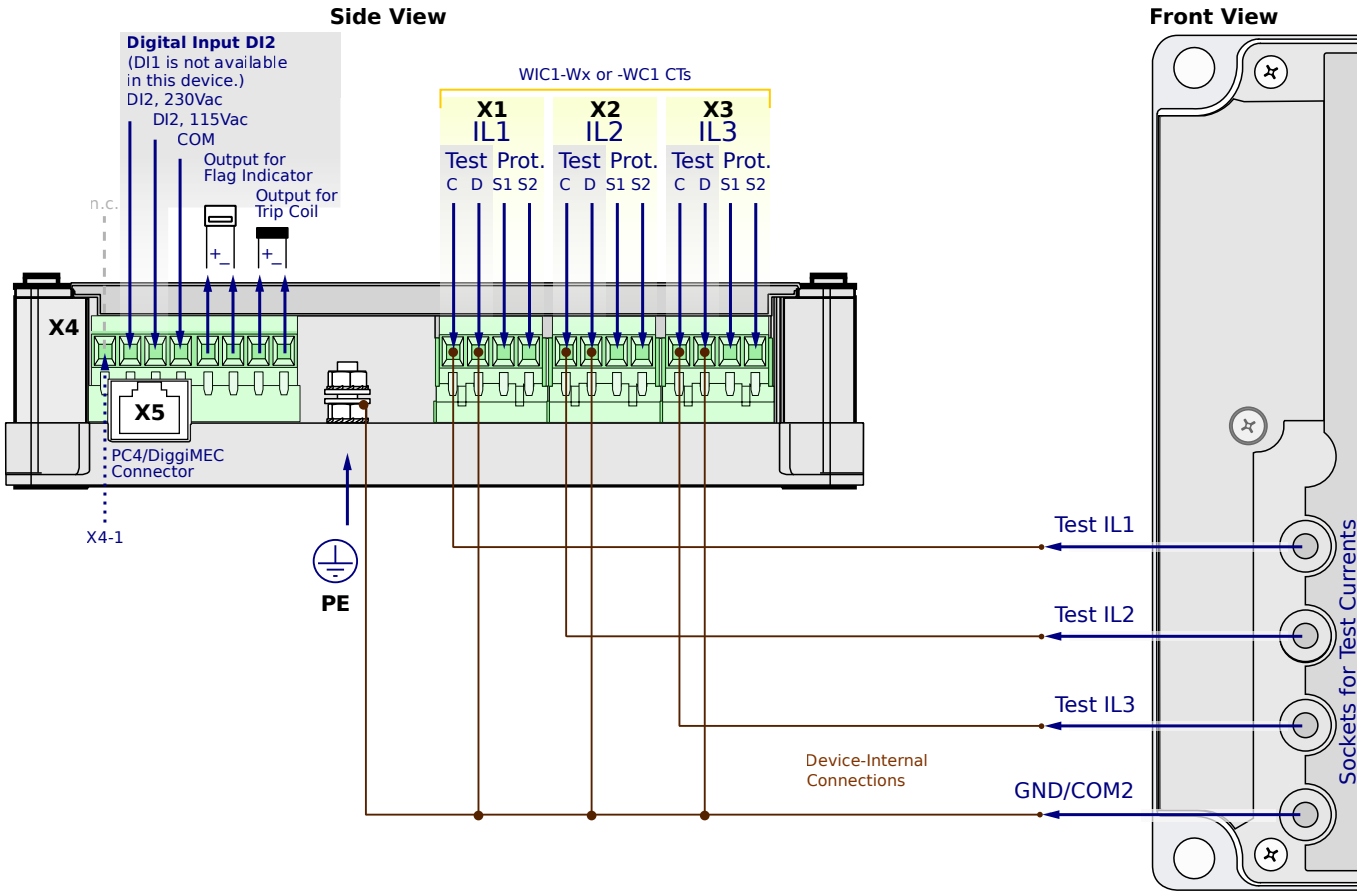


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2SA0

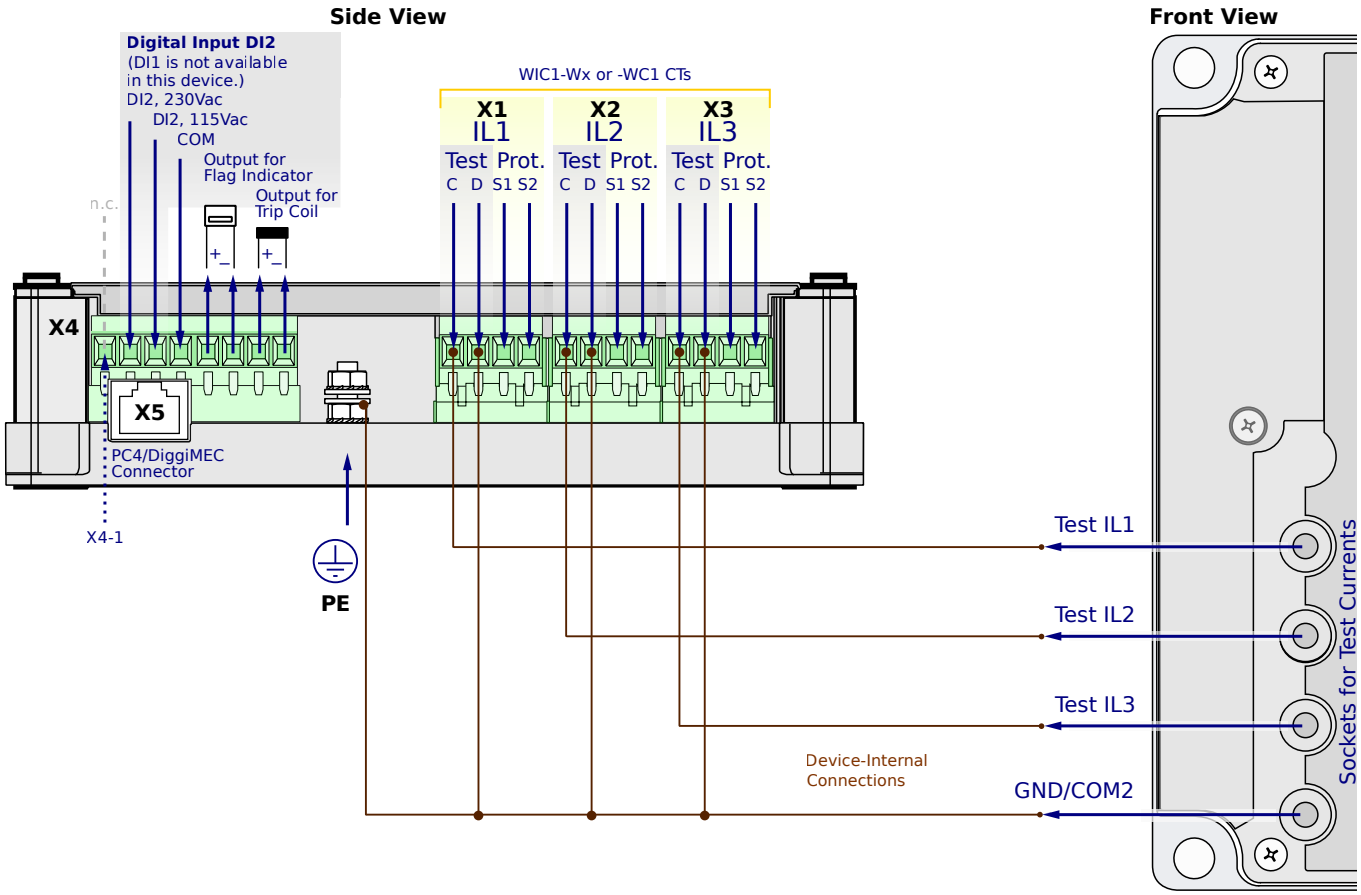


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2SAH

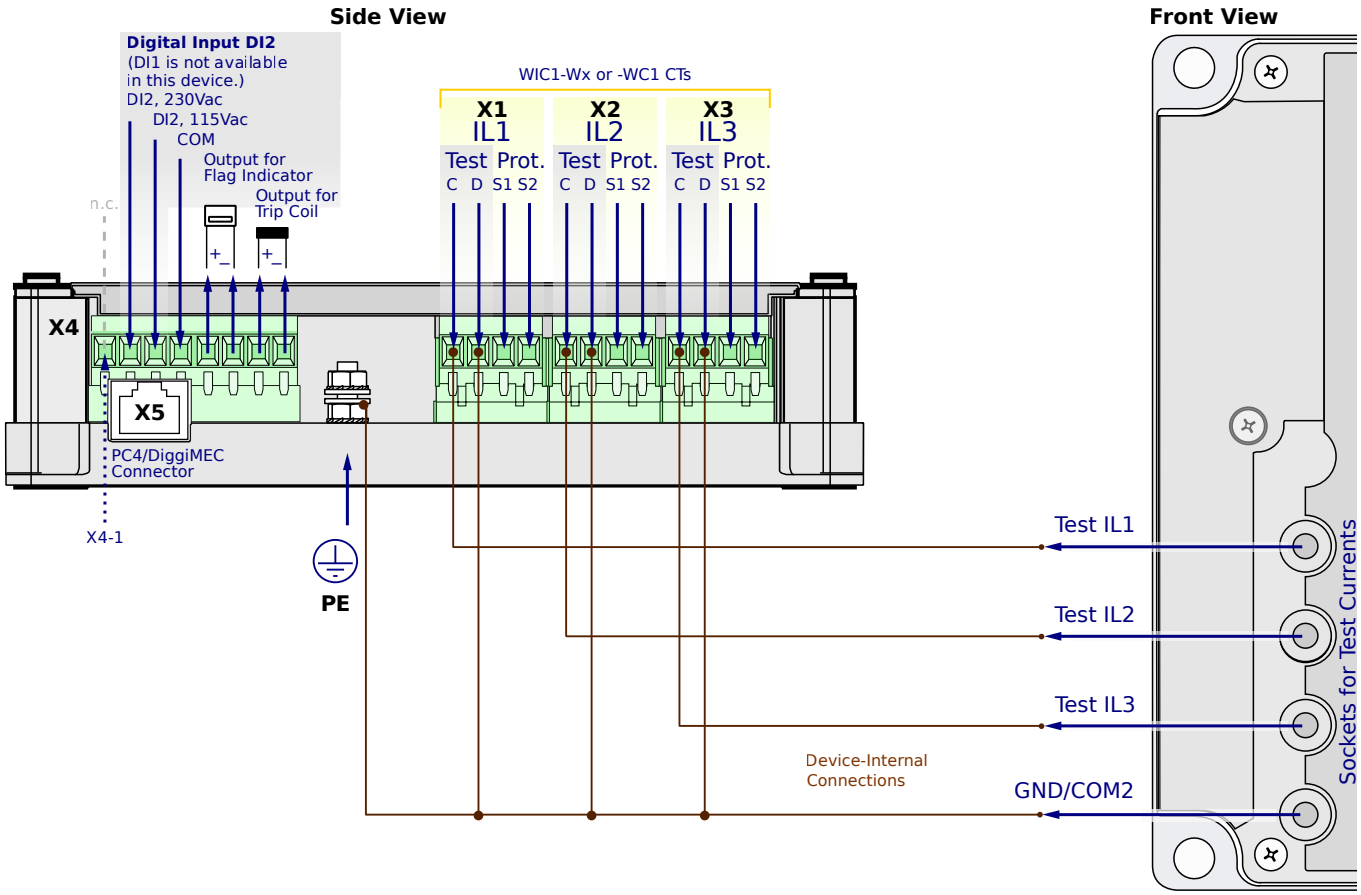


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2AA0

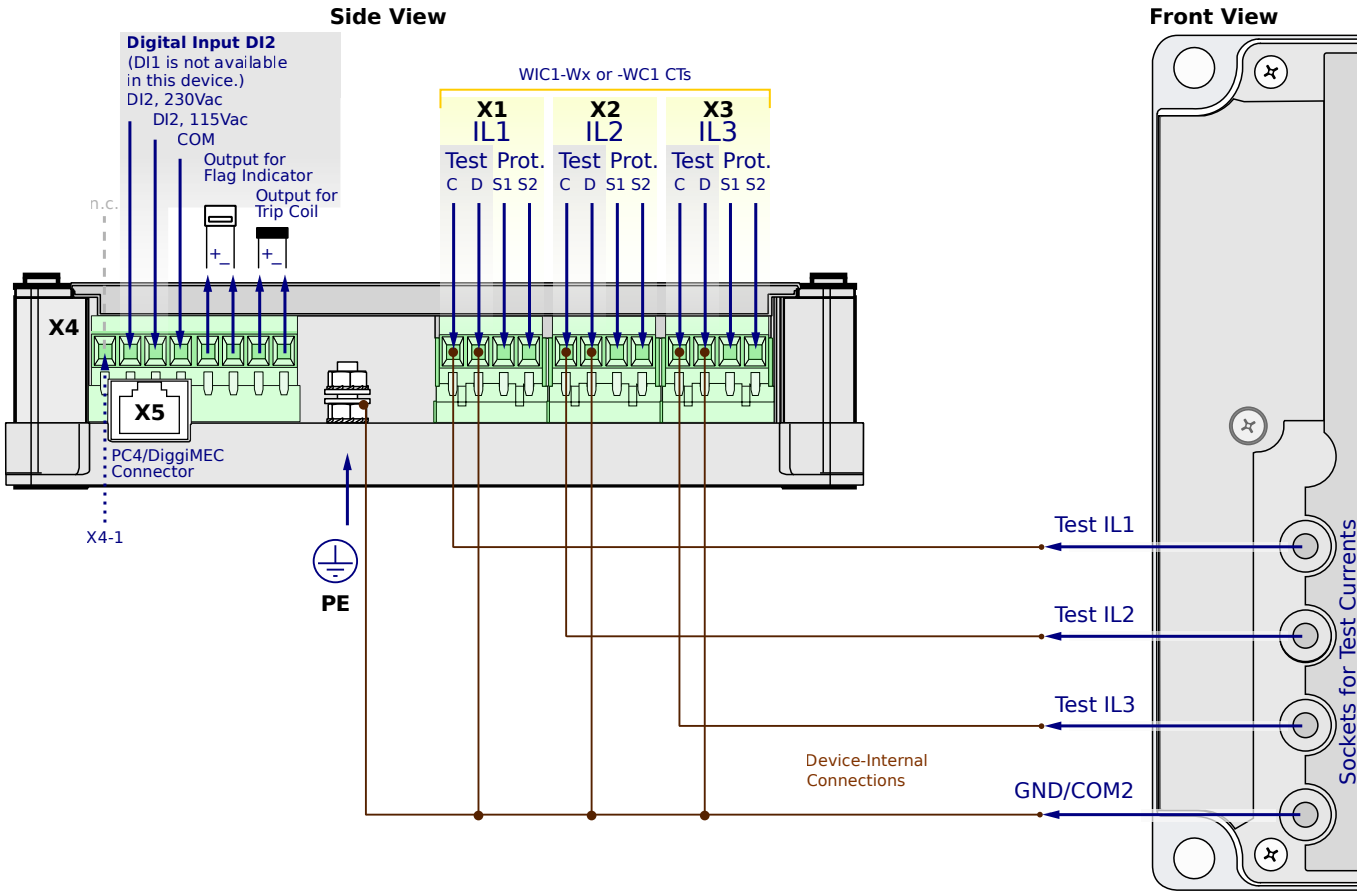


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2AAH

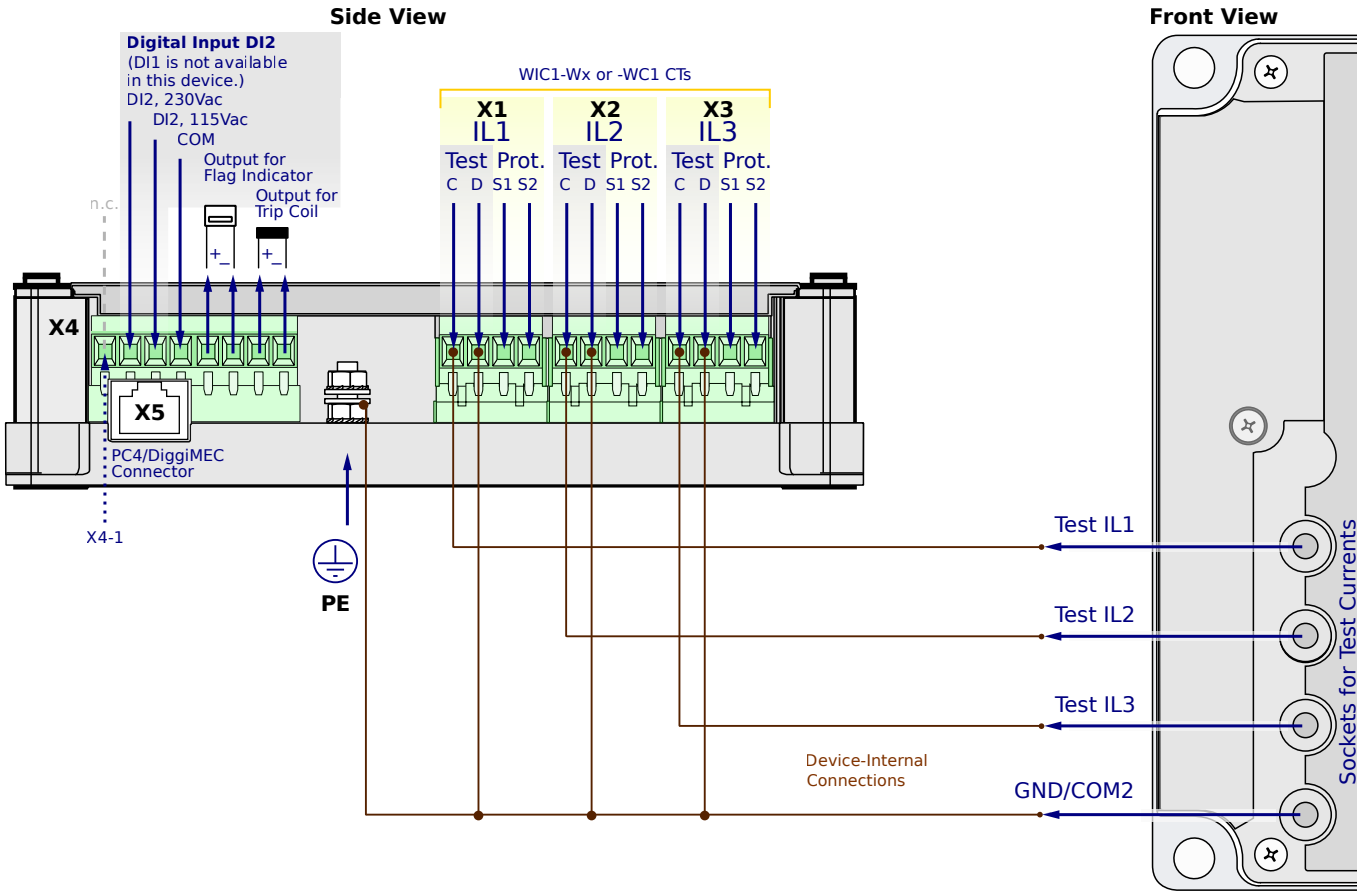


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2PA0

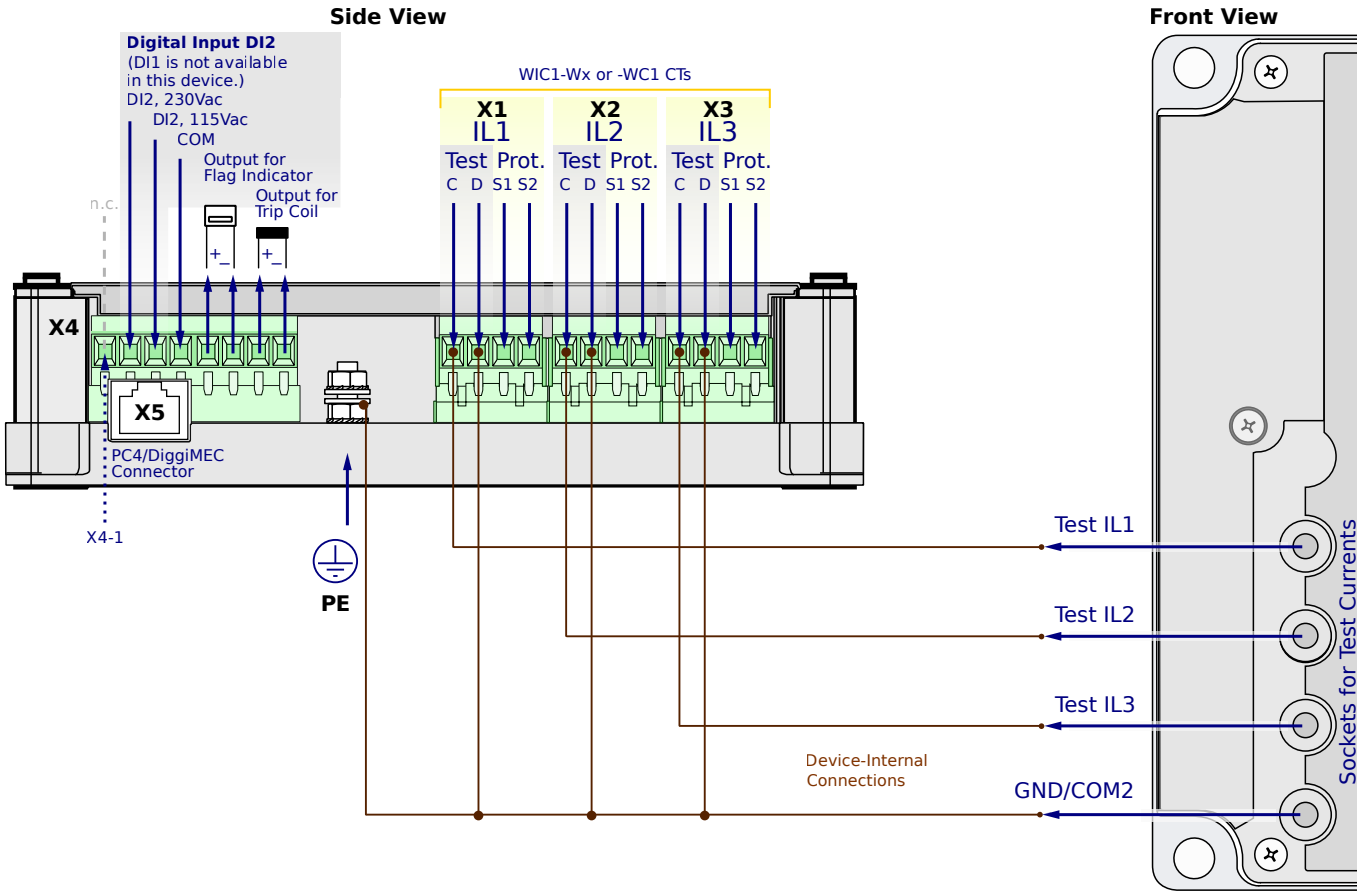


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5NC2PAH

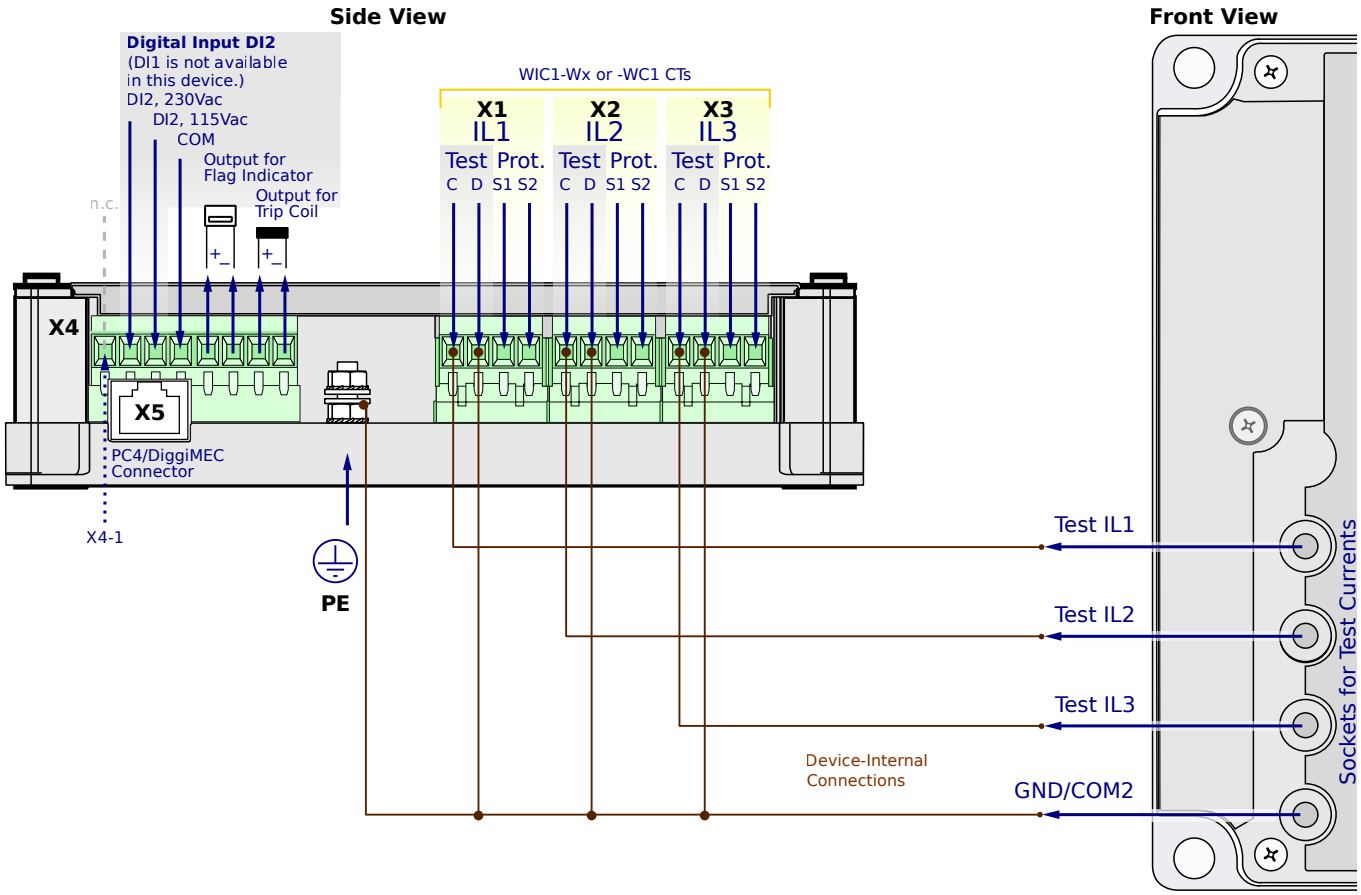


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1SA0

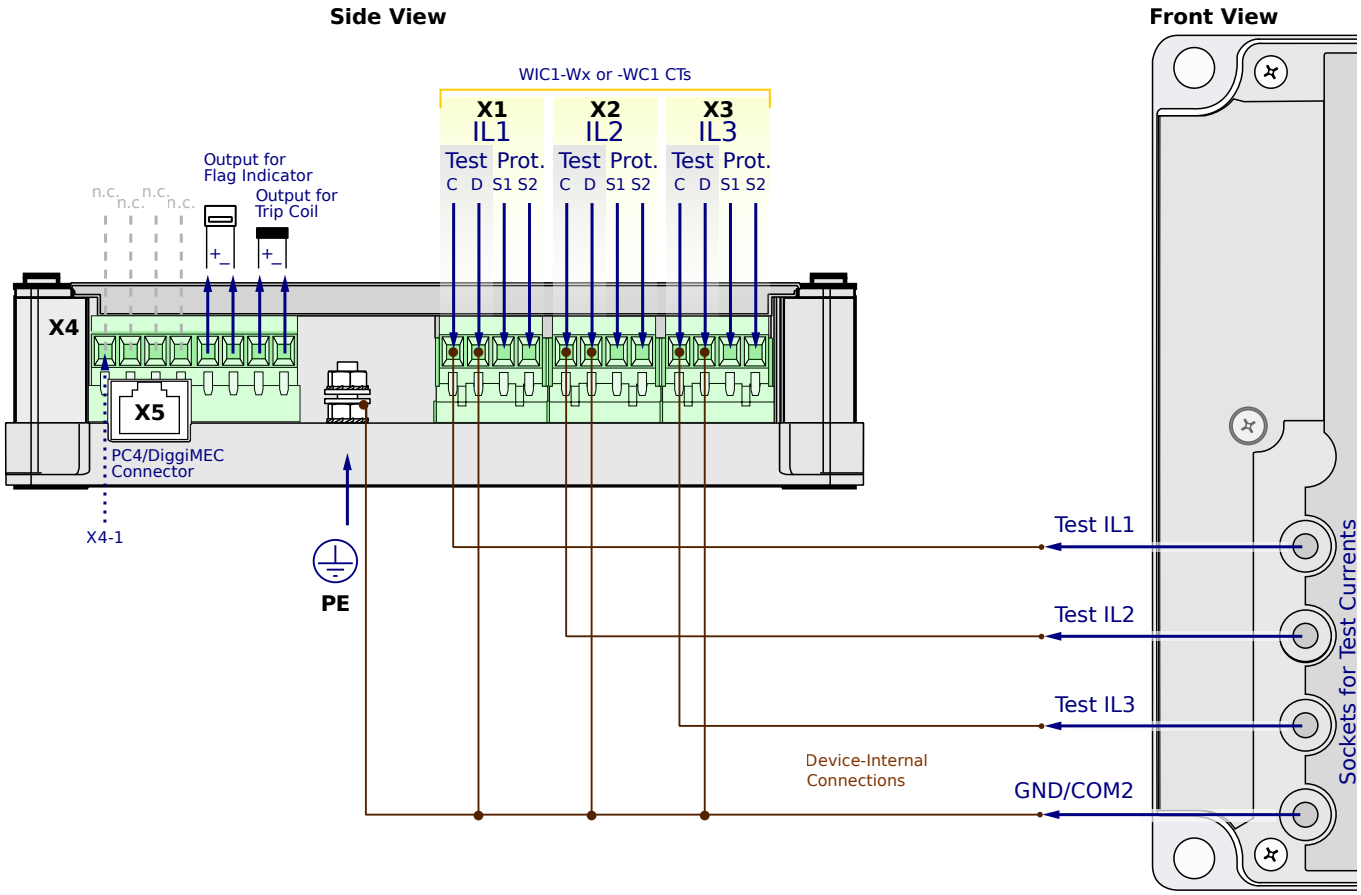


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1SAH

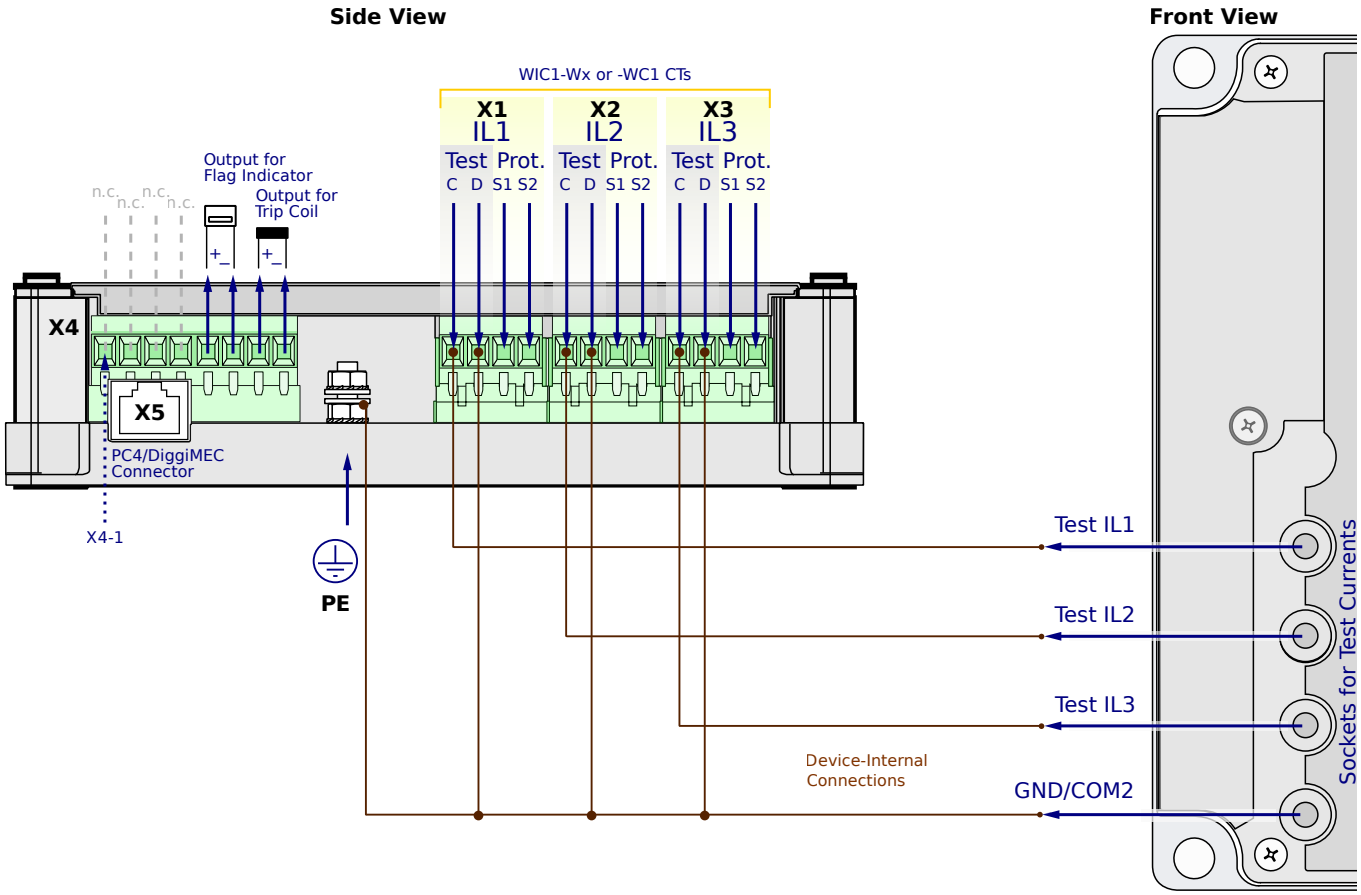


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1AA0

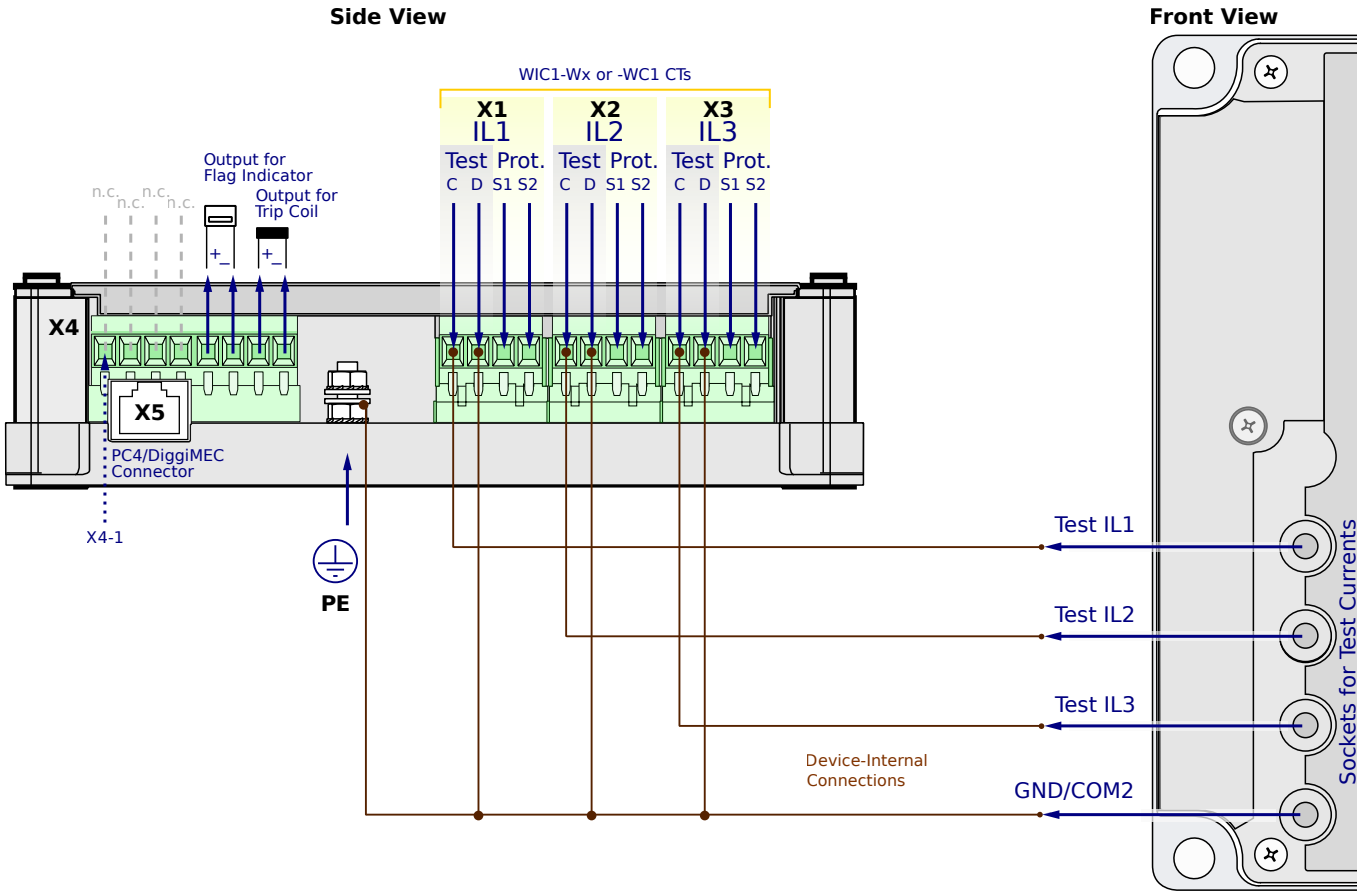


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1AAH

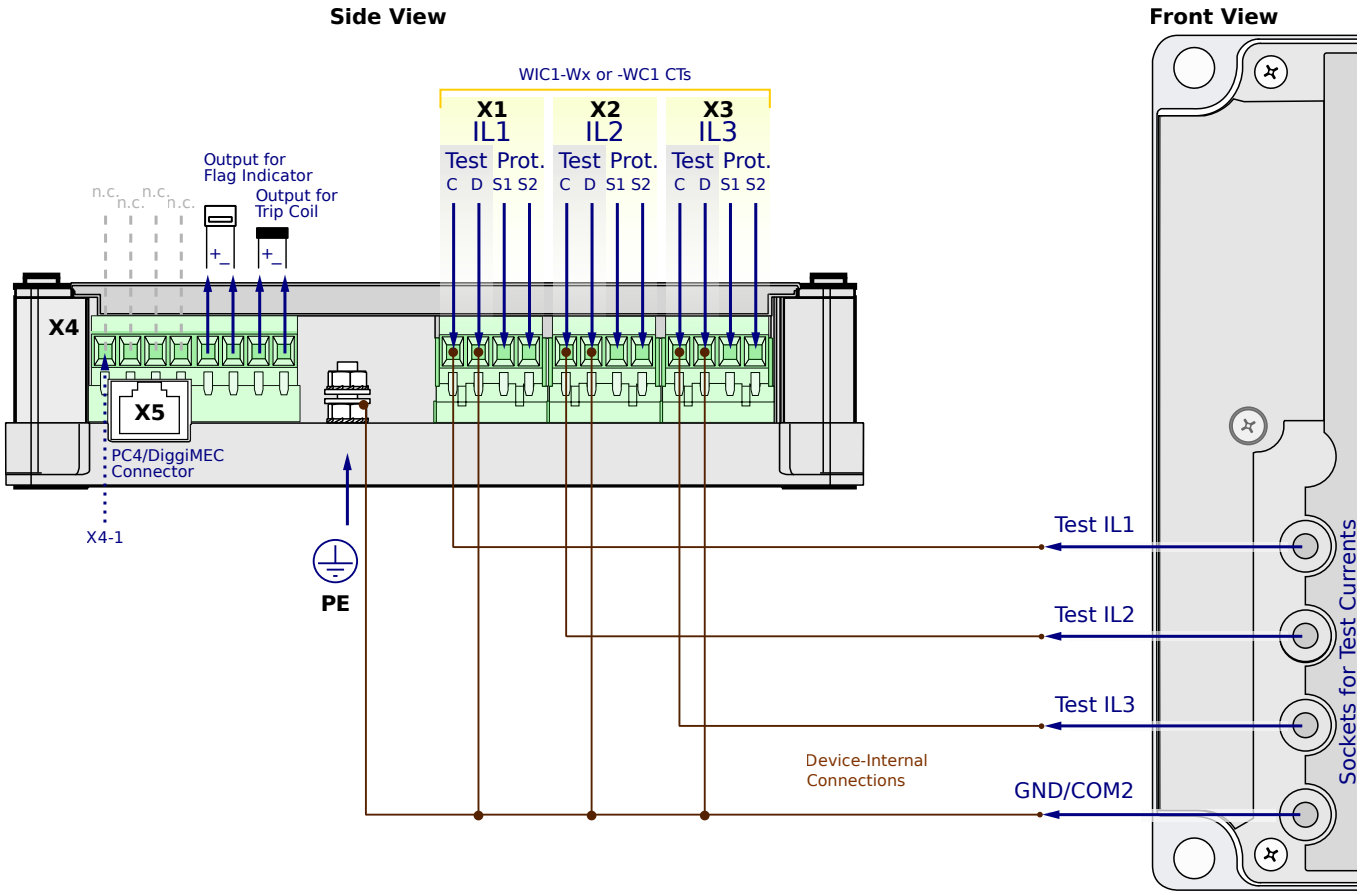


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1PA0

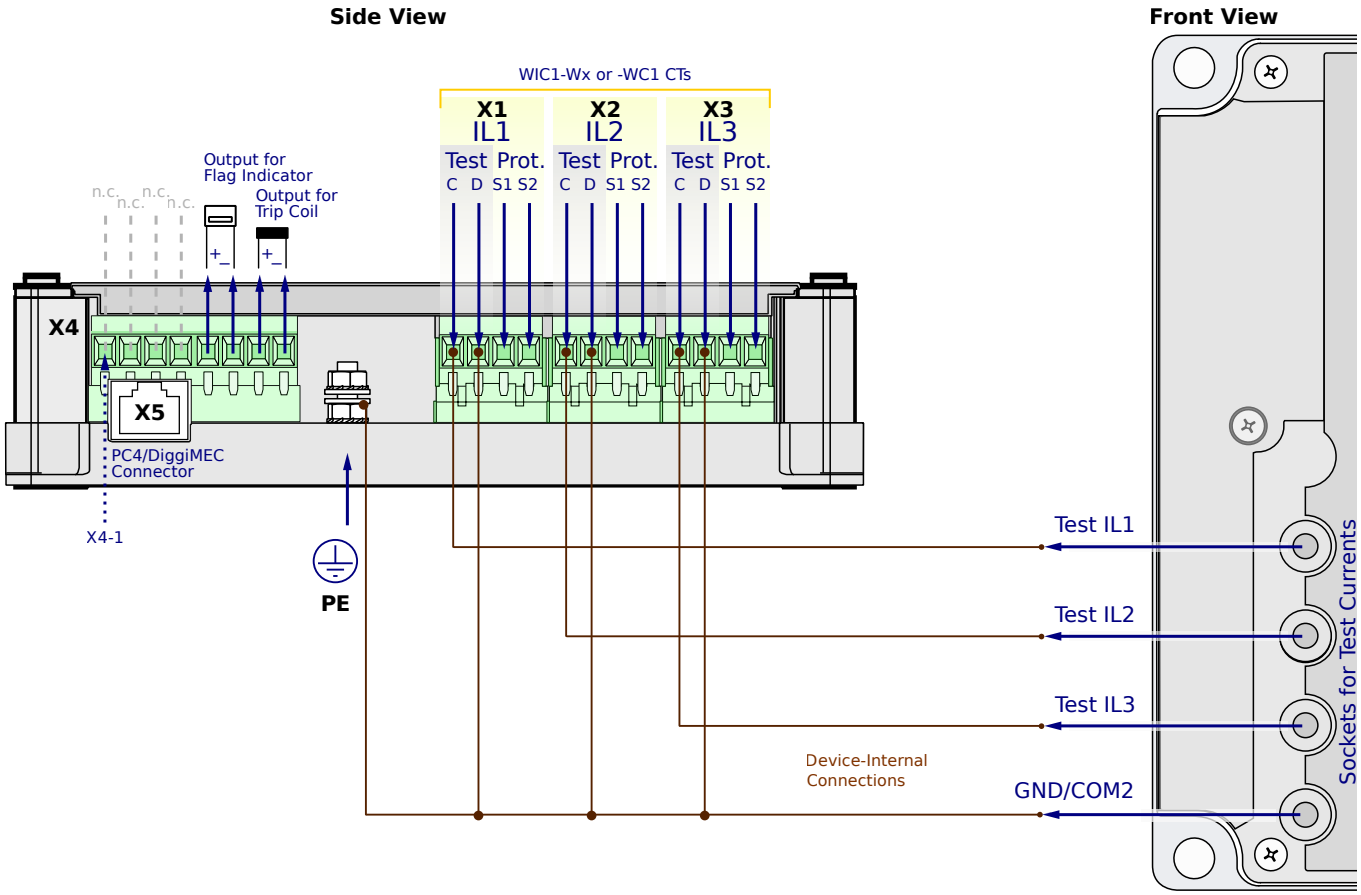


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN1PAH

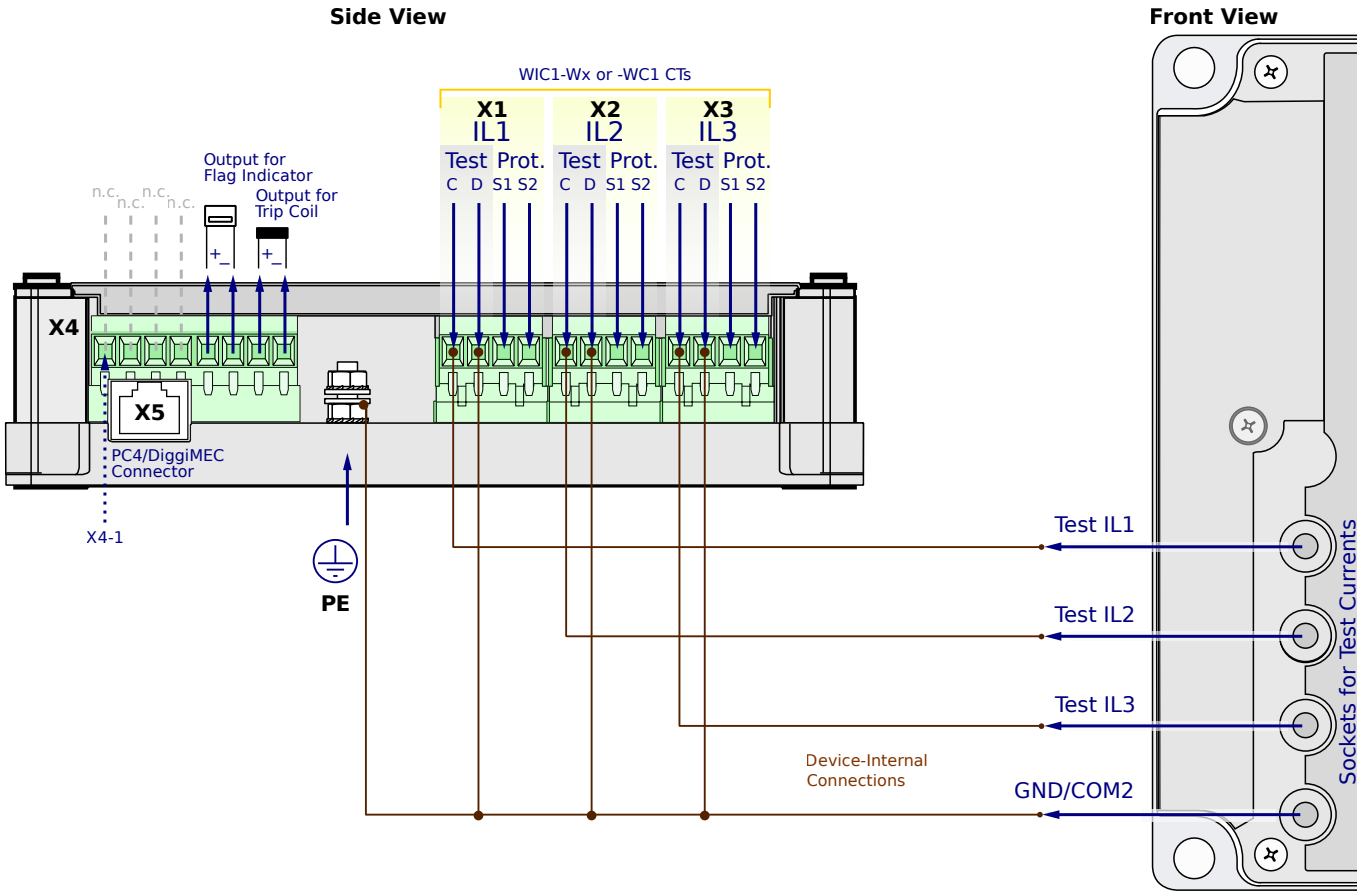


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2SA0

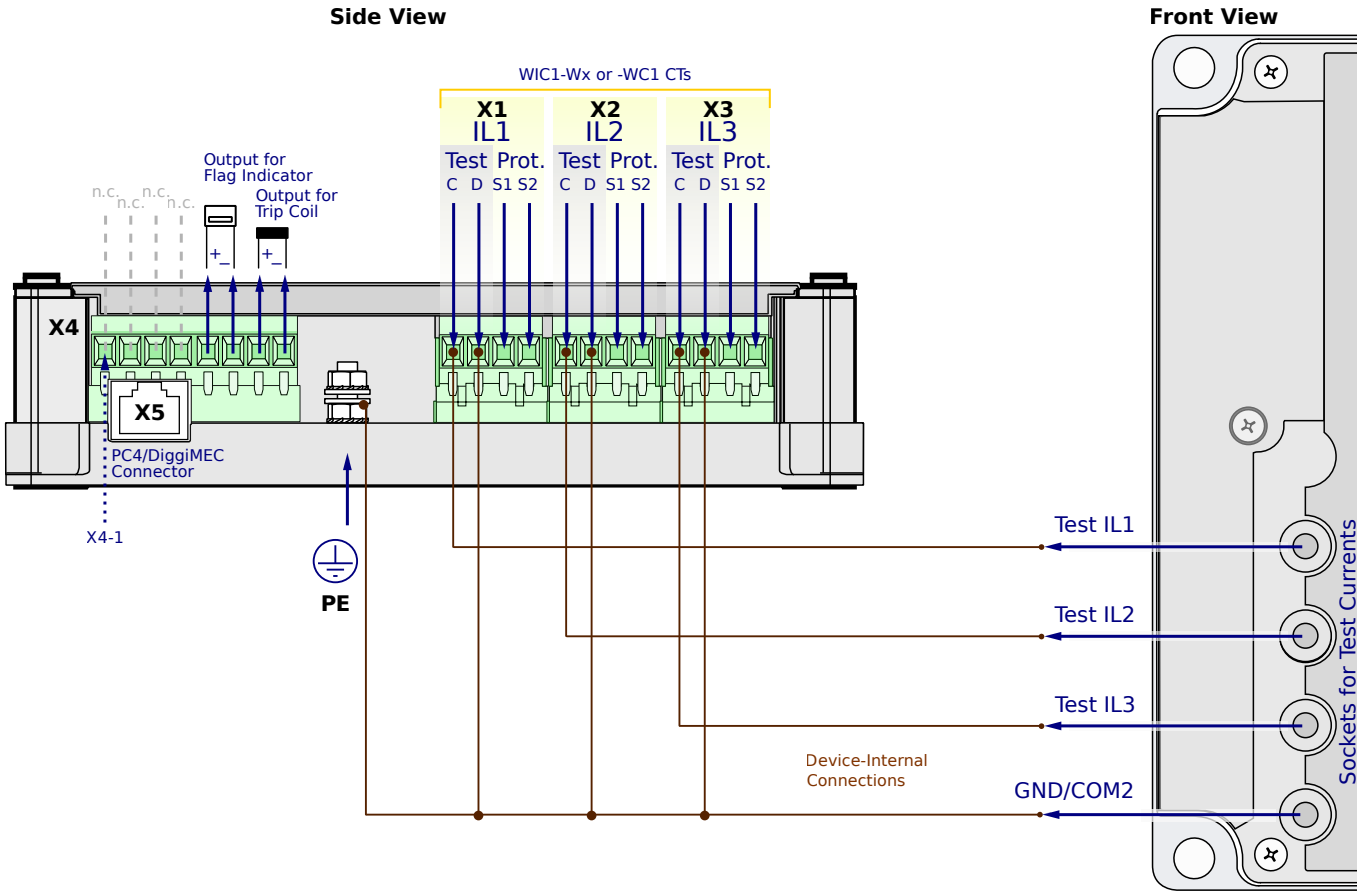


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2SAH

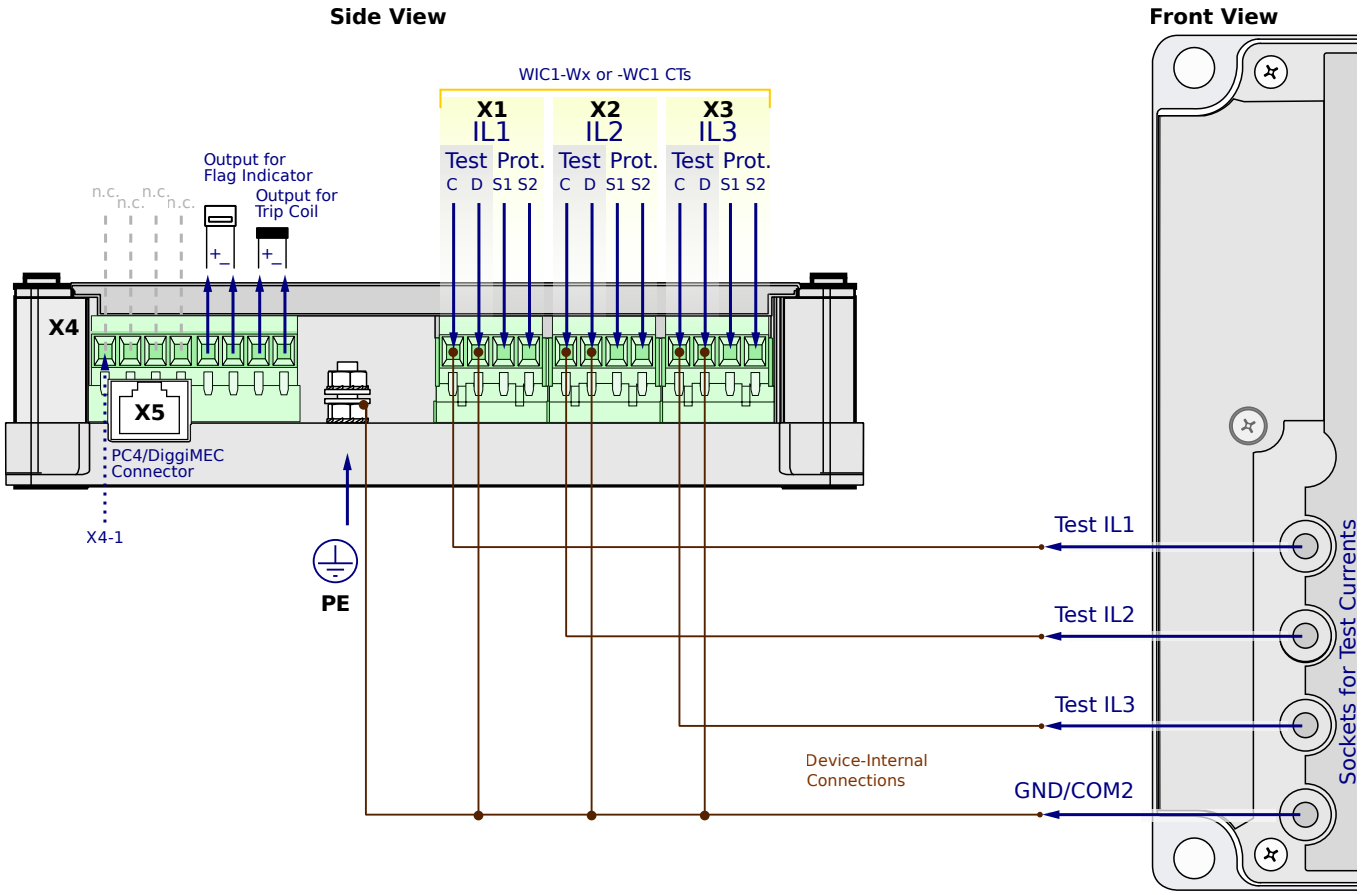


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2AA0

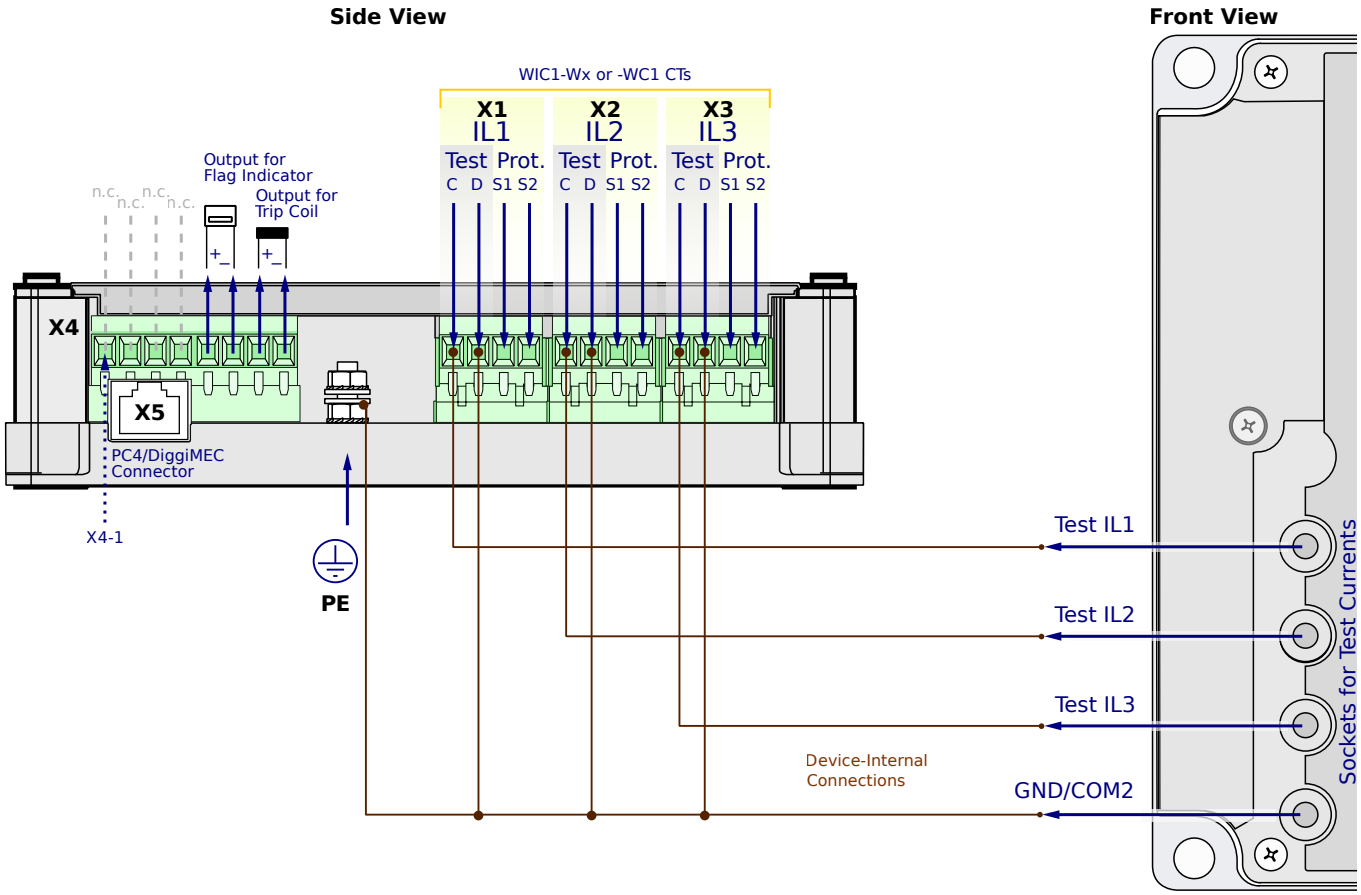


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2AAH

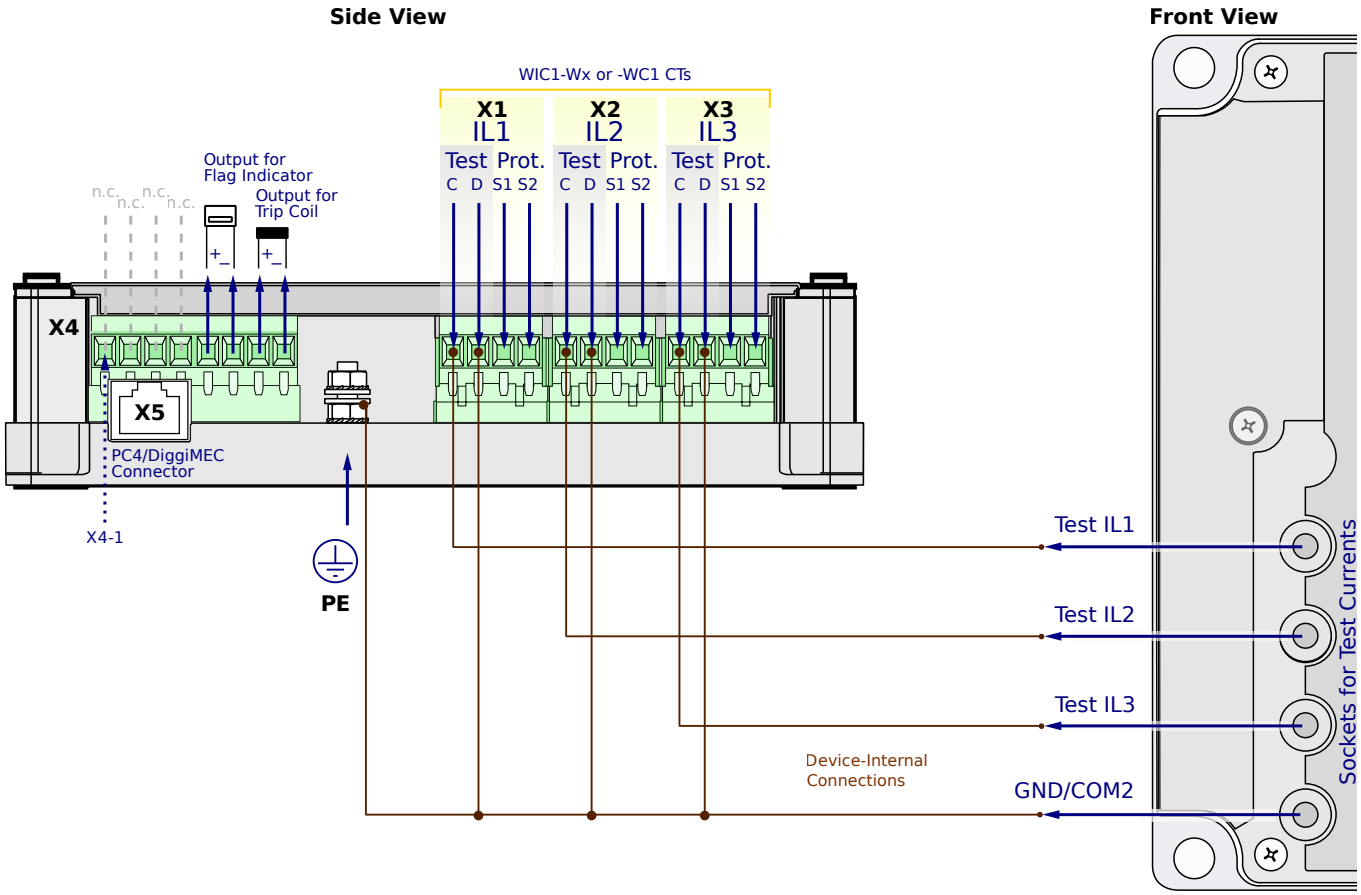


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2PA0

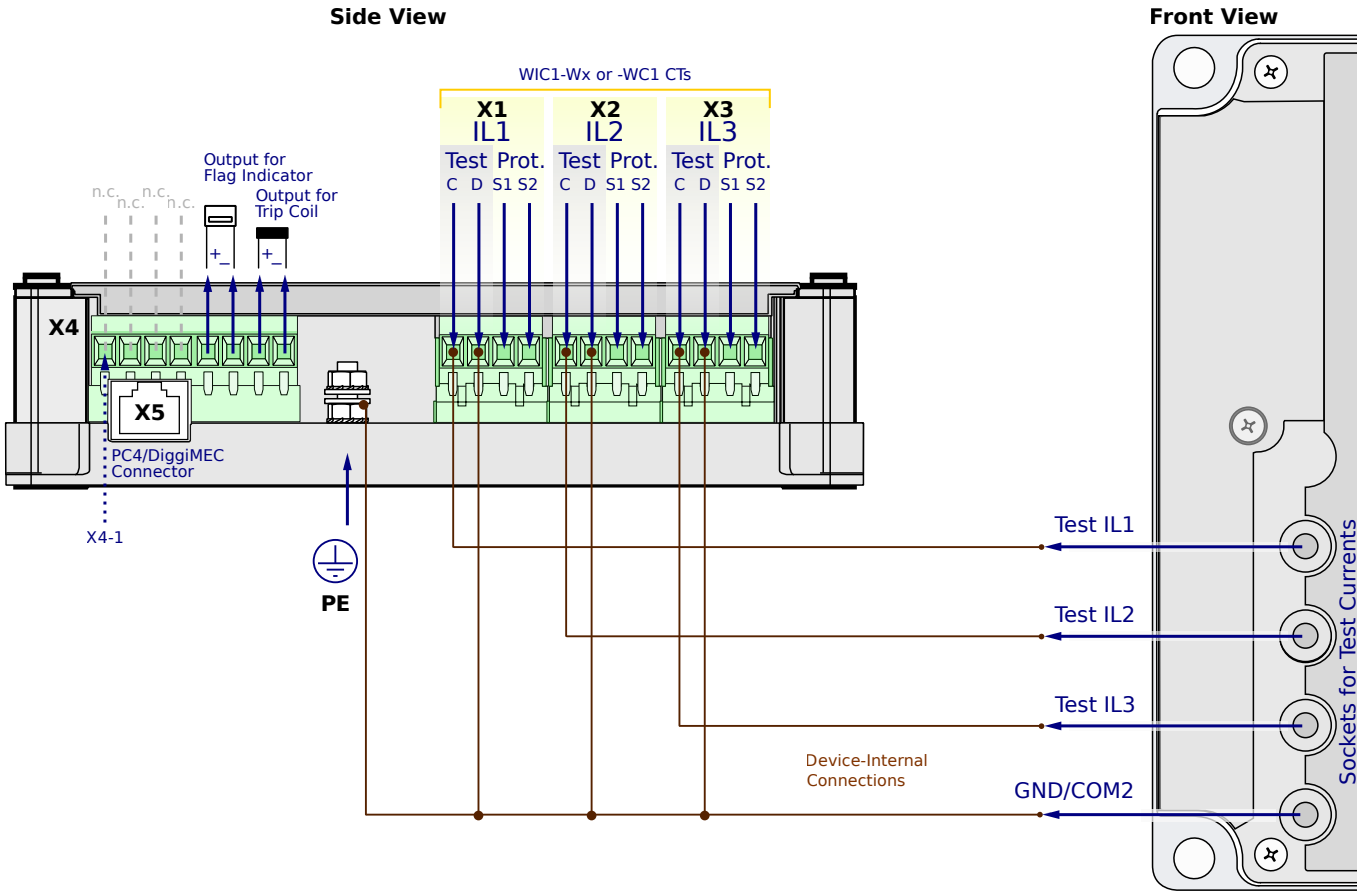


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FN2PAH

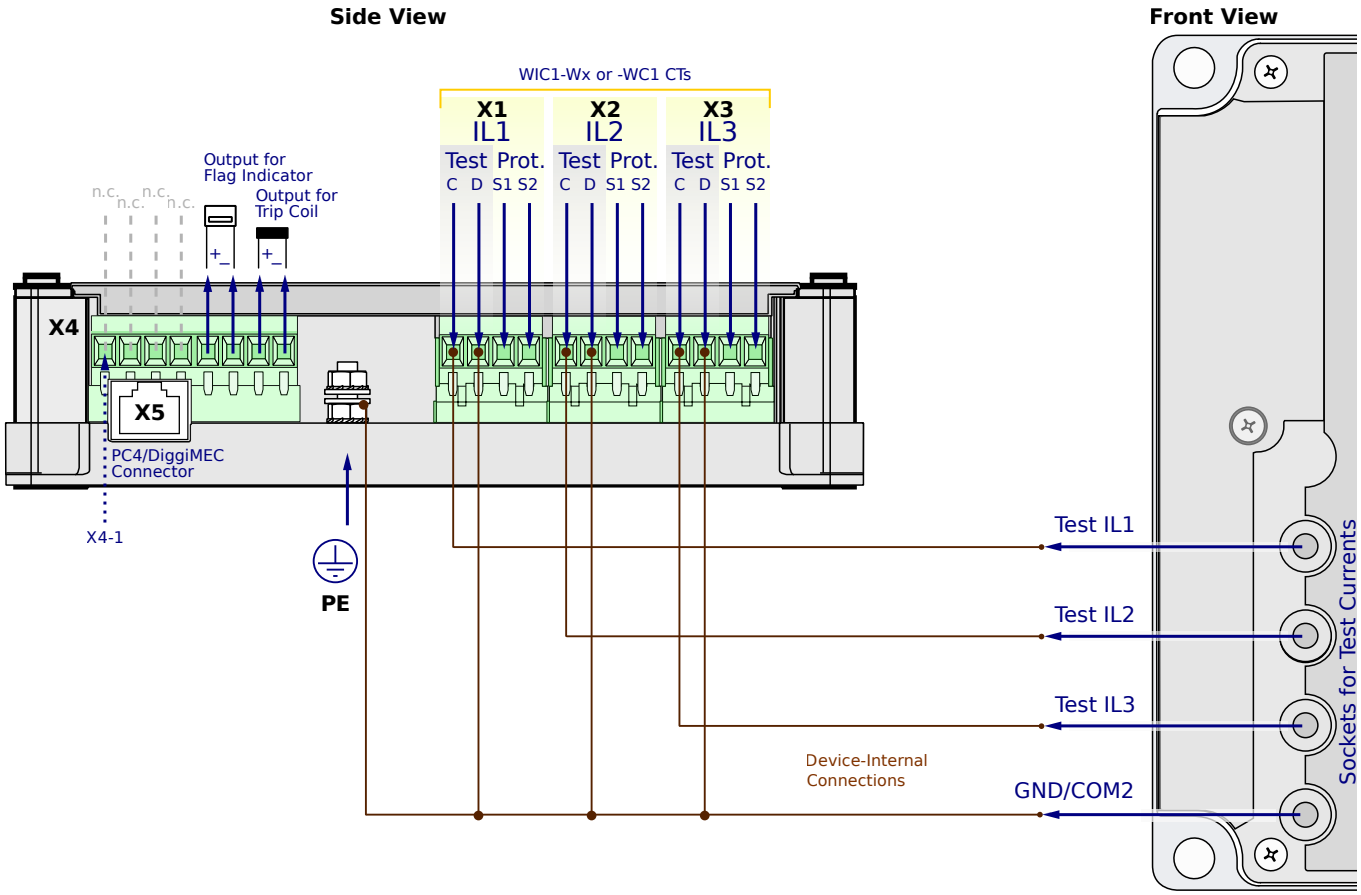


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1SA0

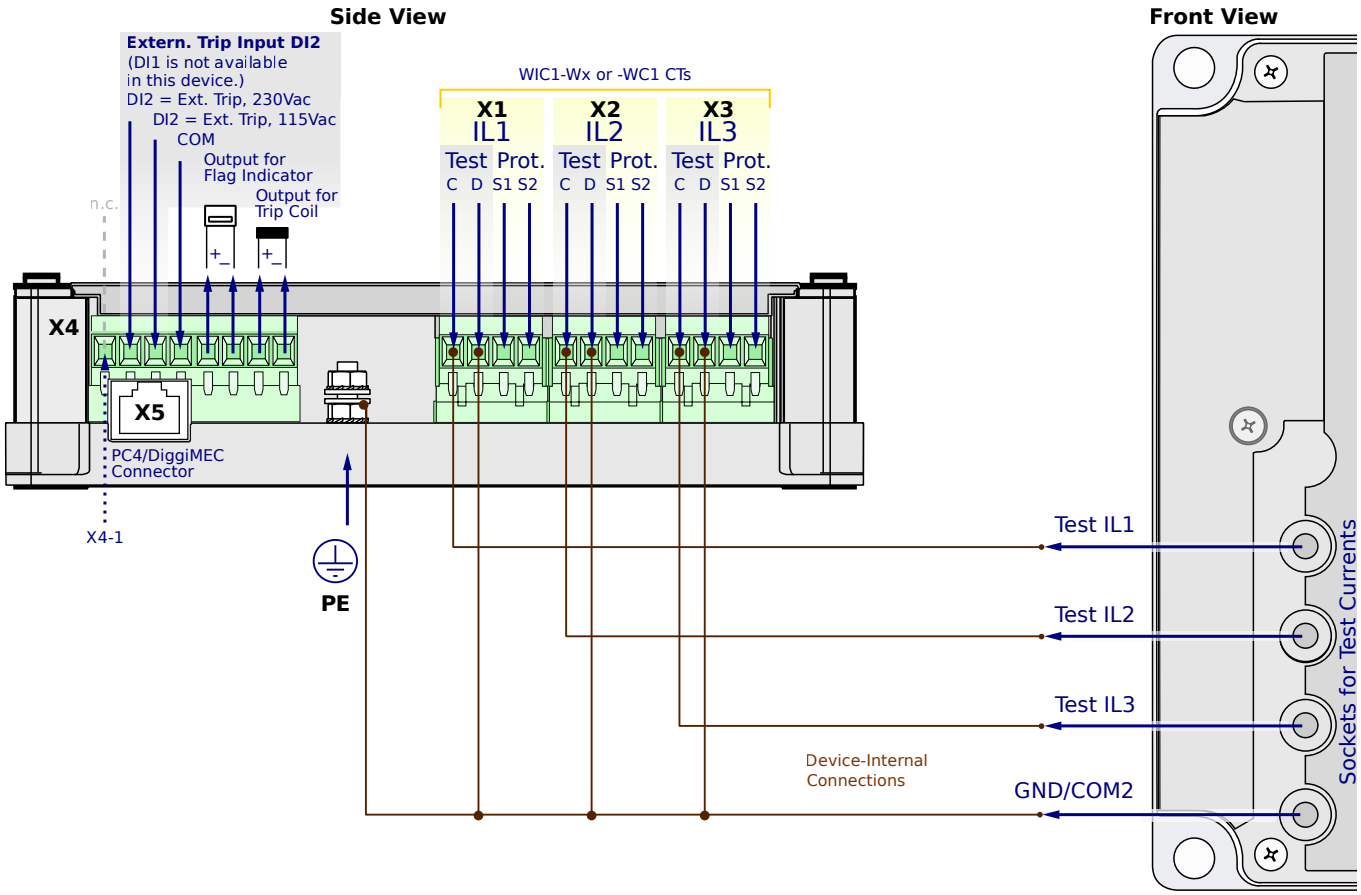


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1SAH

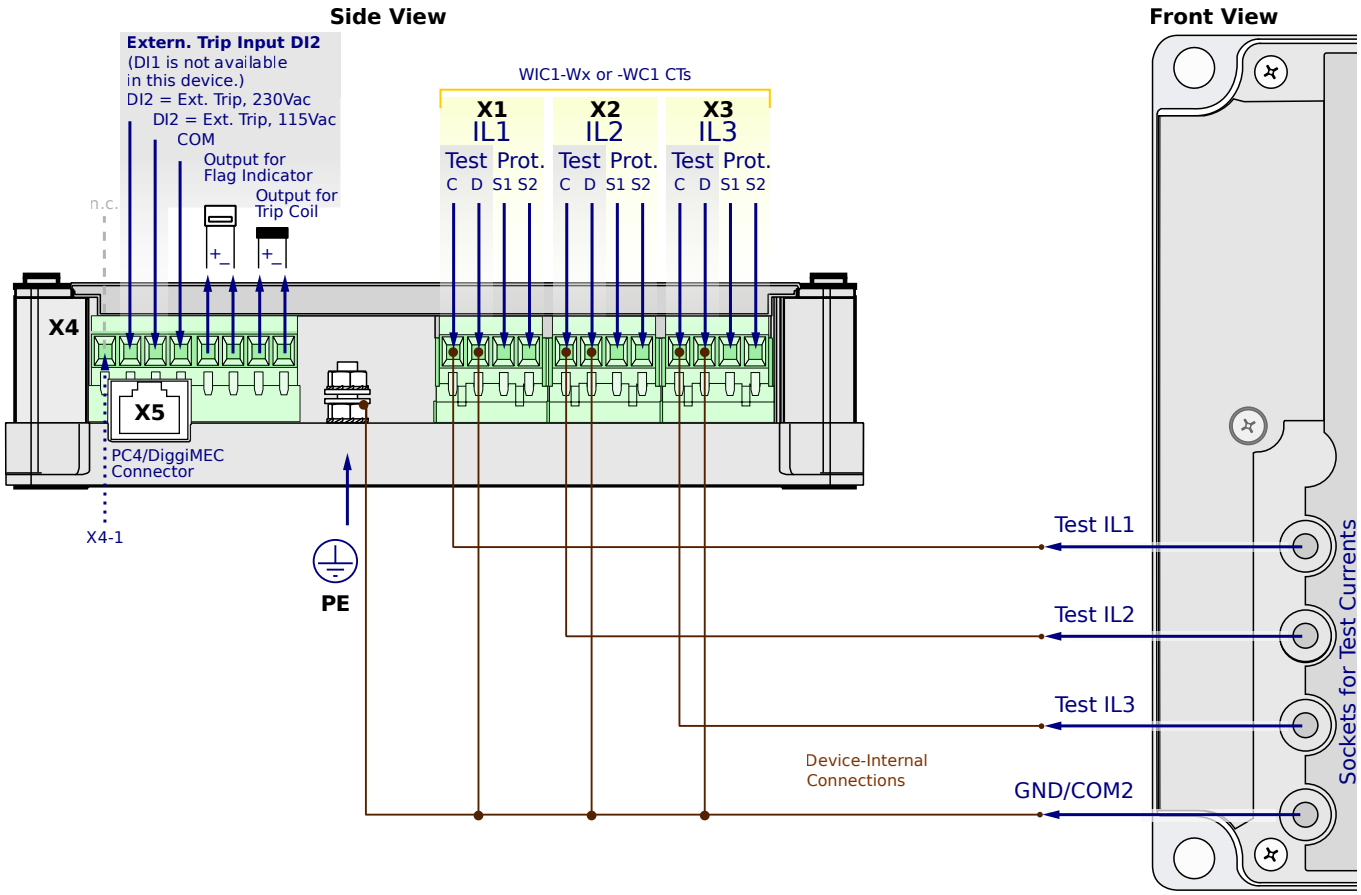


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1AA0

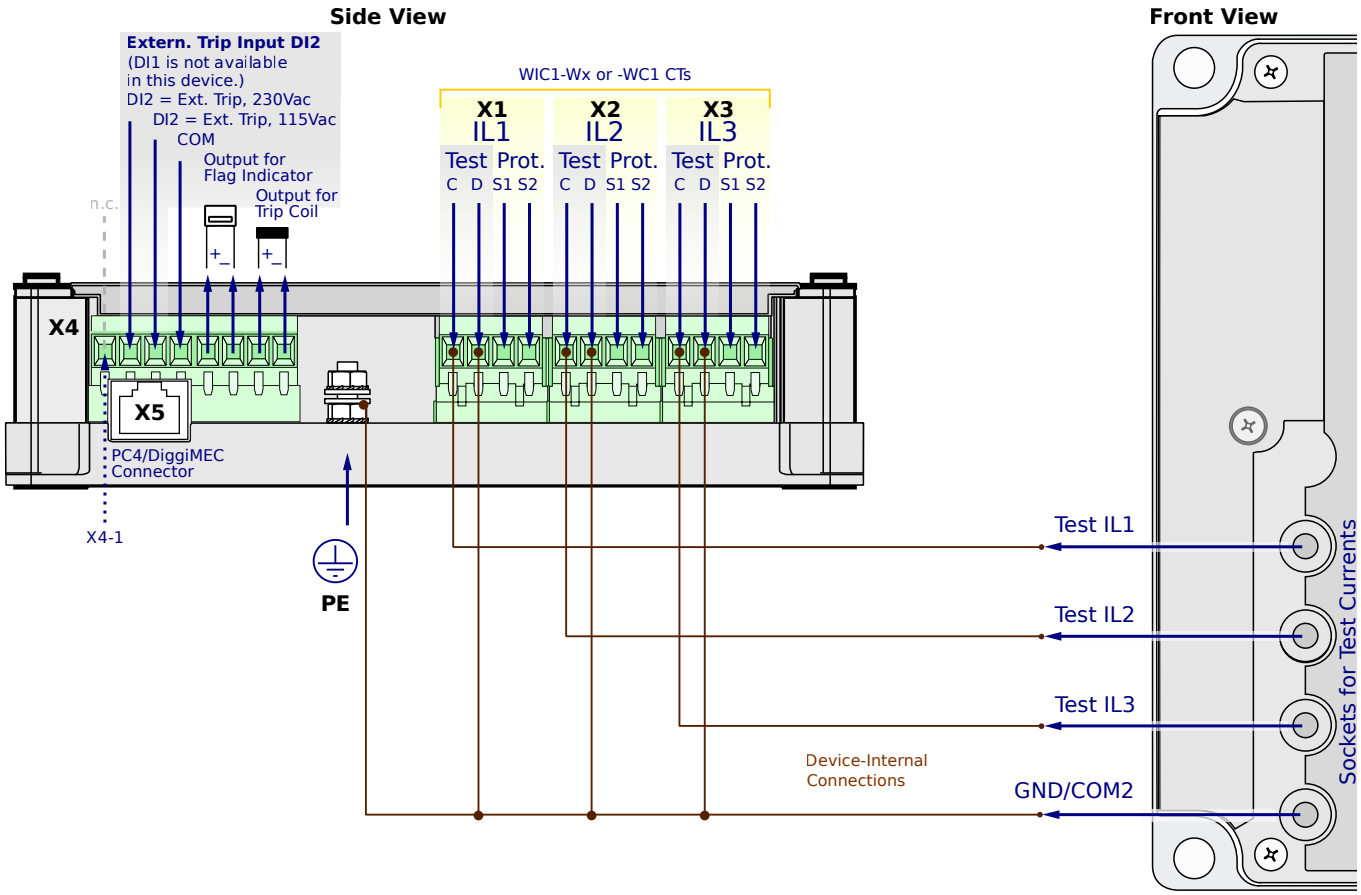


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1AAH

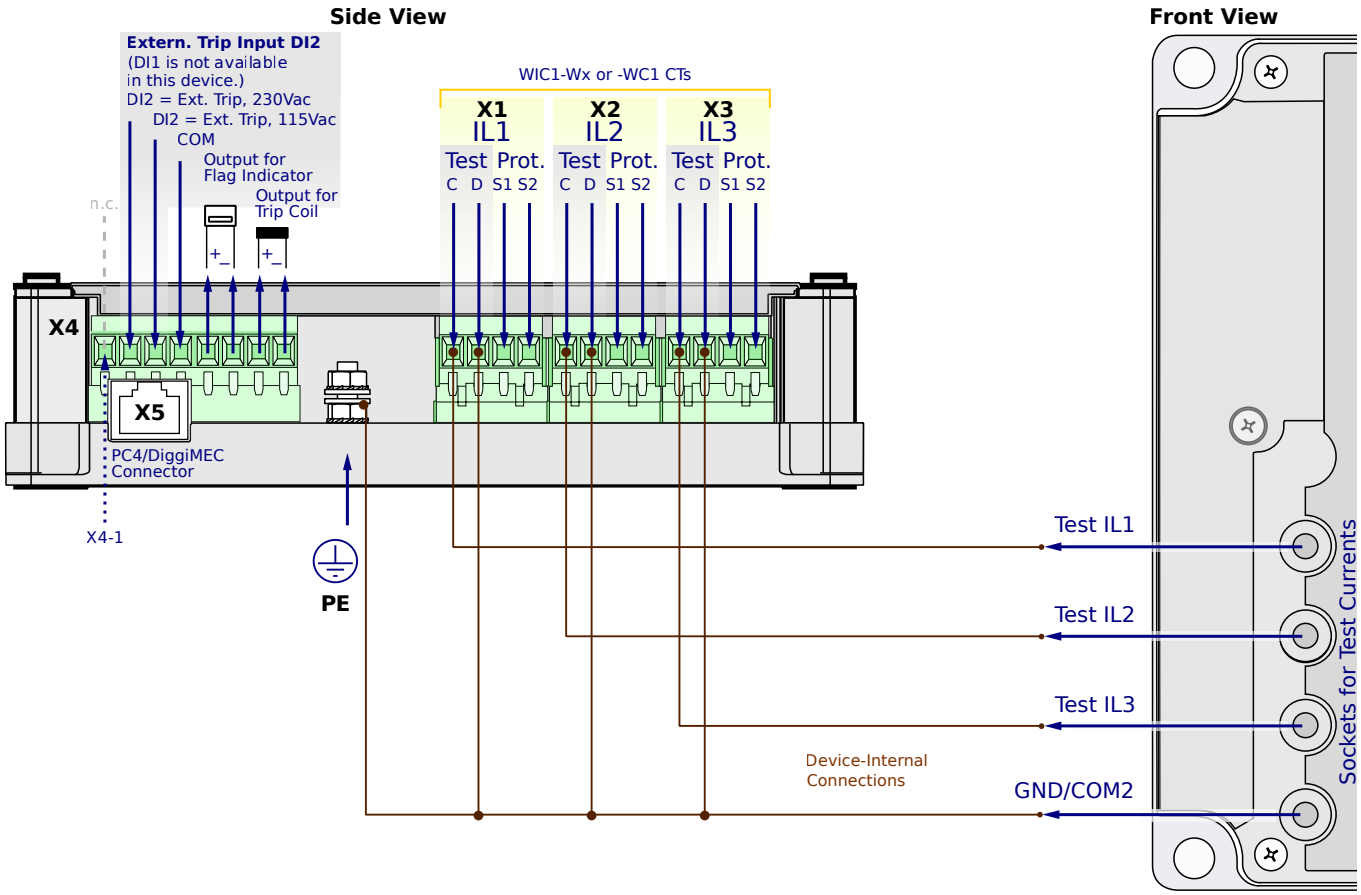


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1PA0

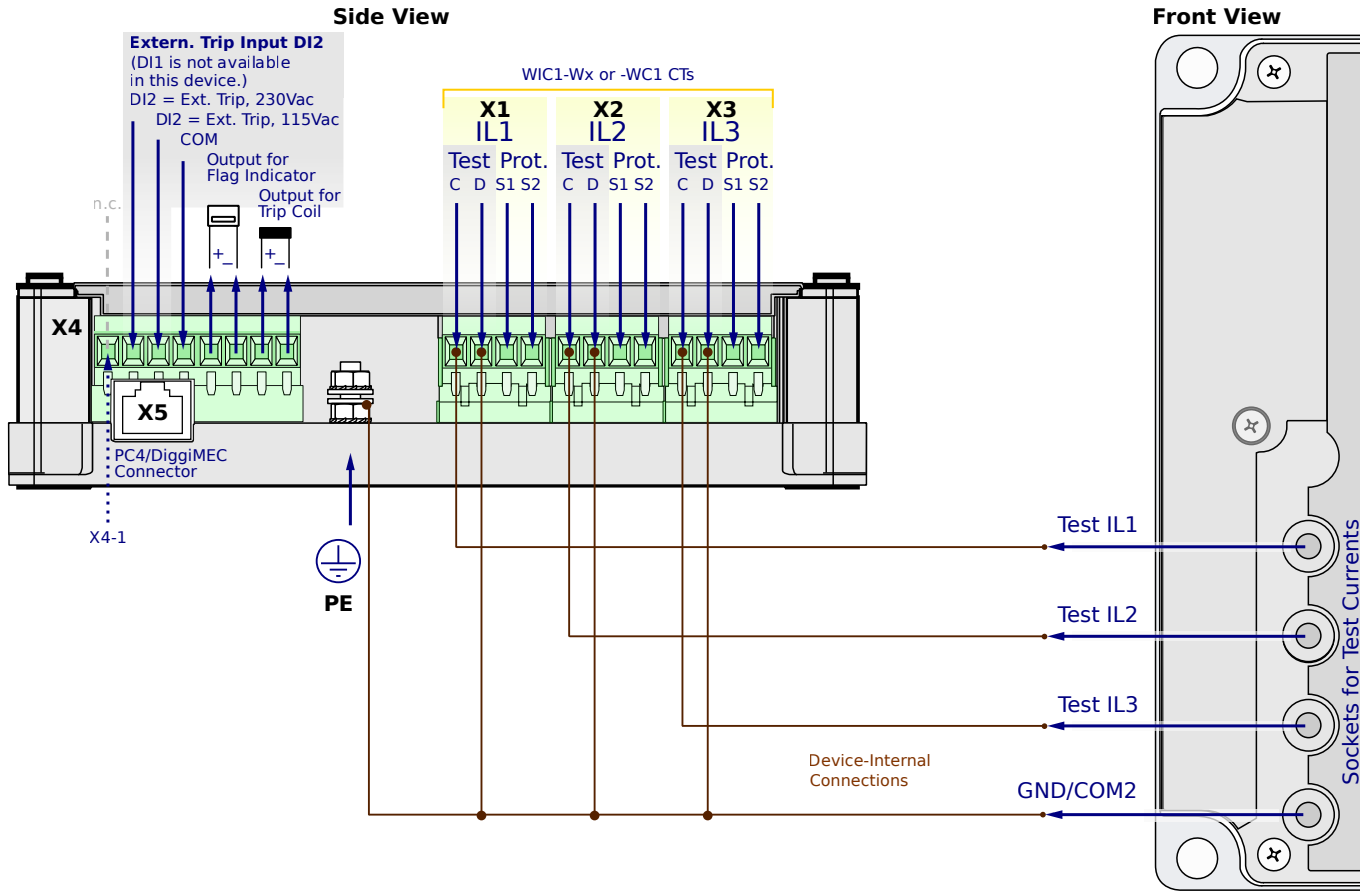


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF1PAH

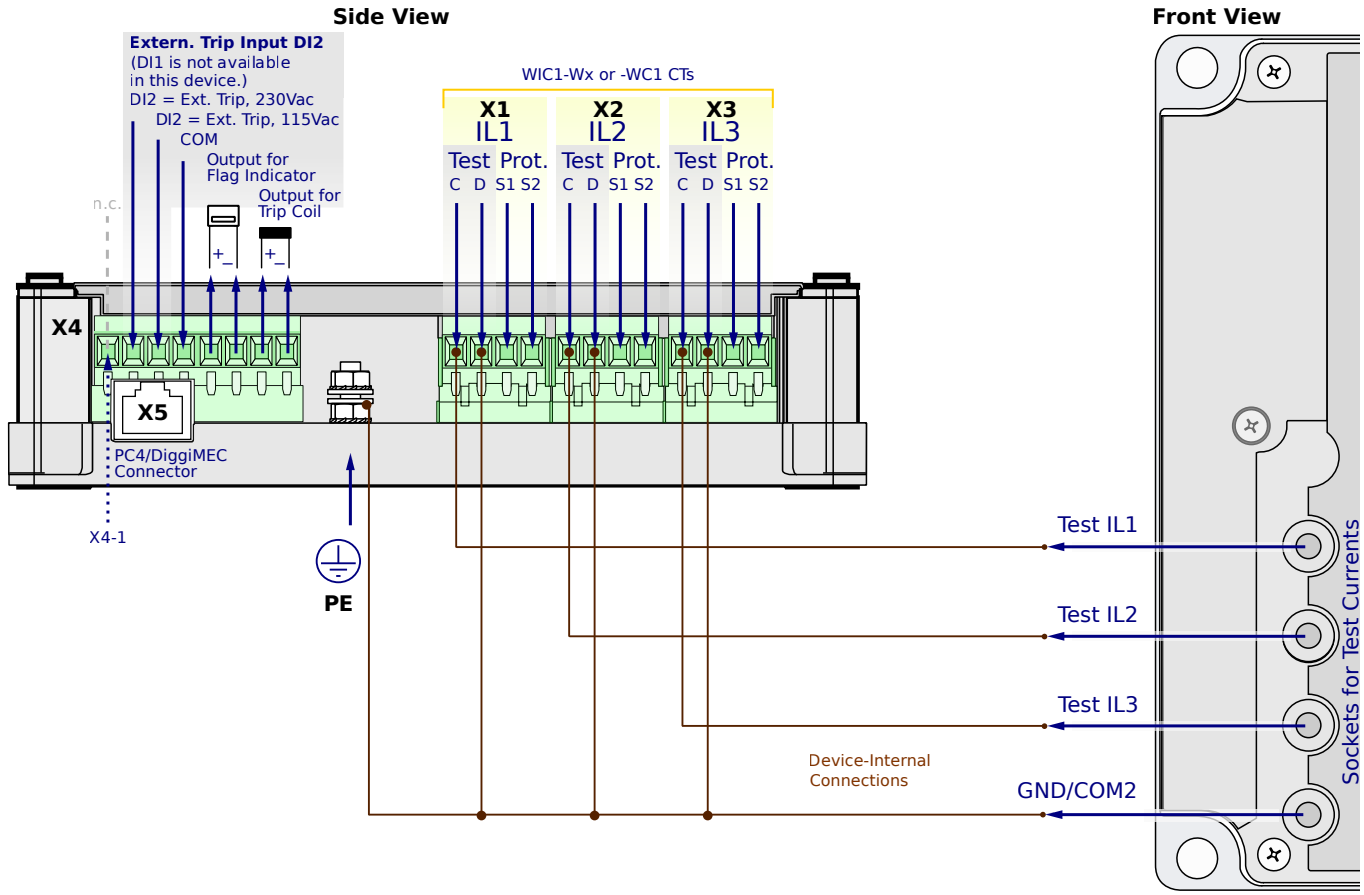


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2SA0

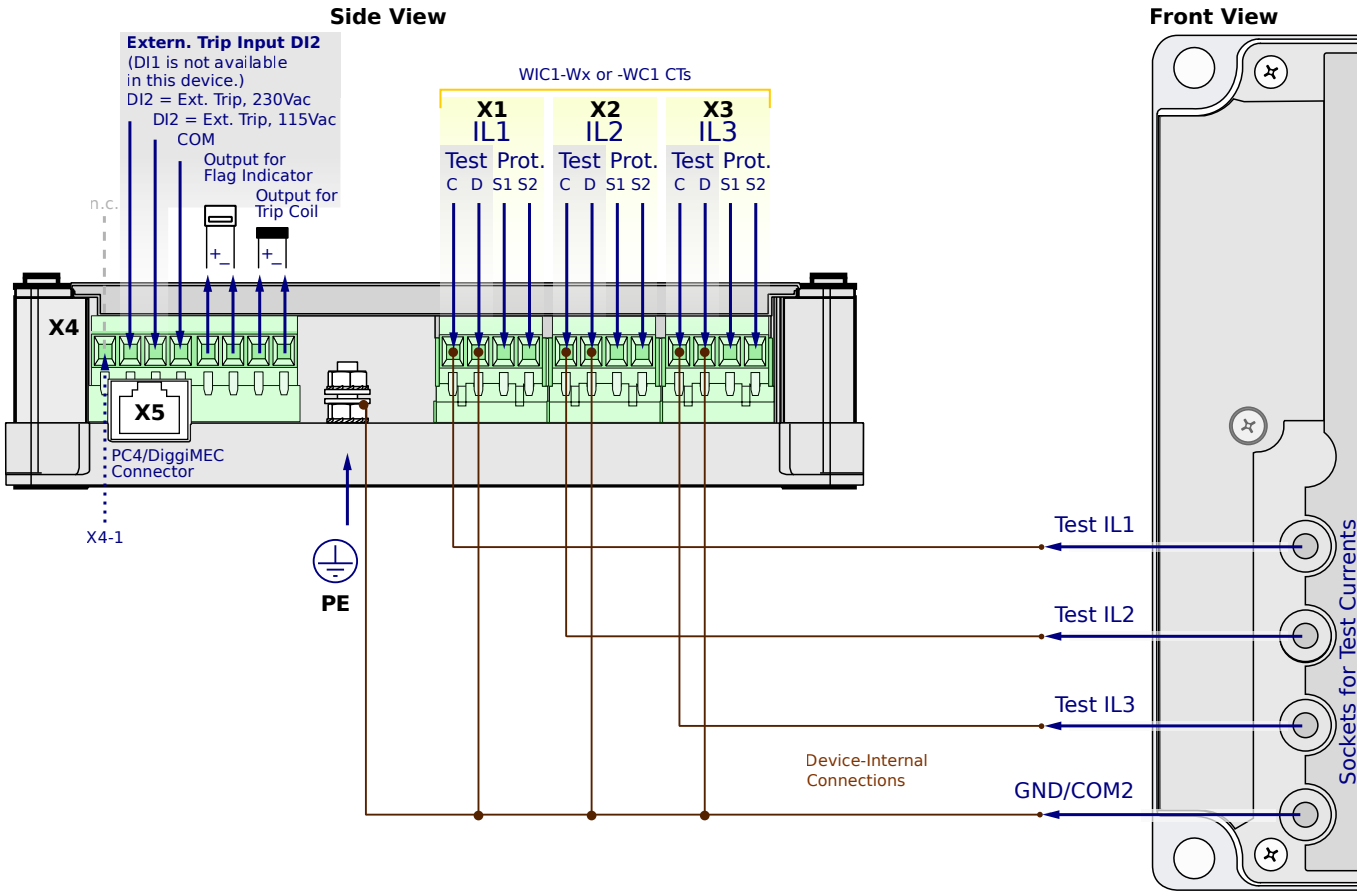


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2SAH

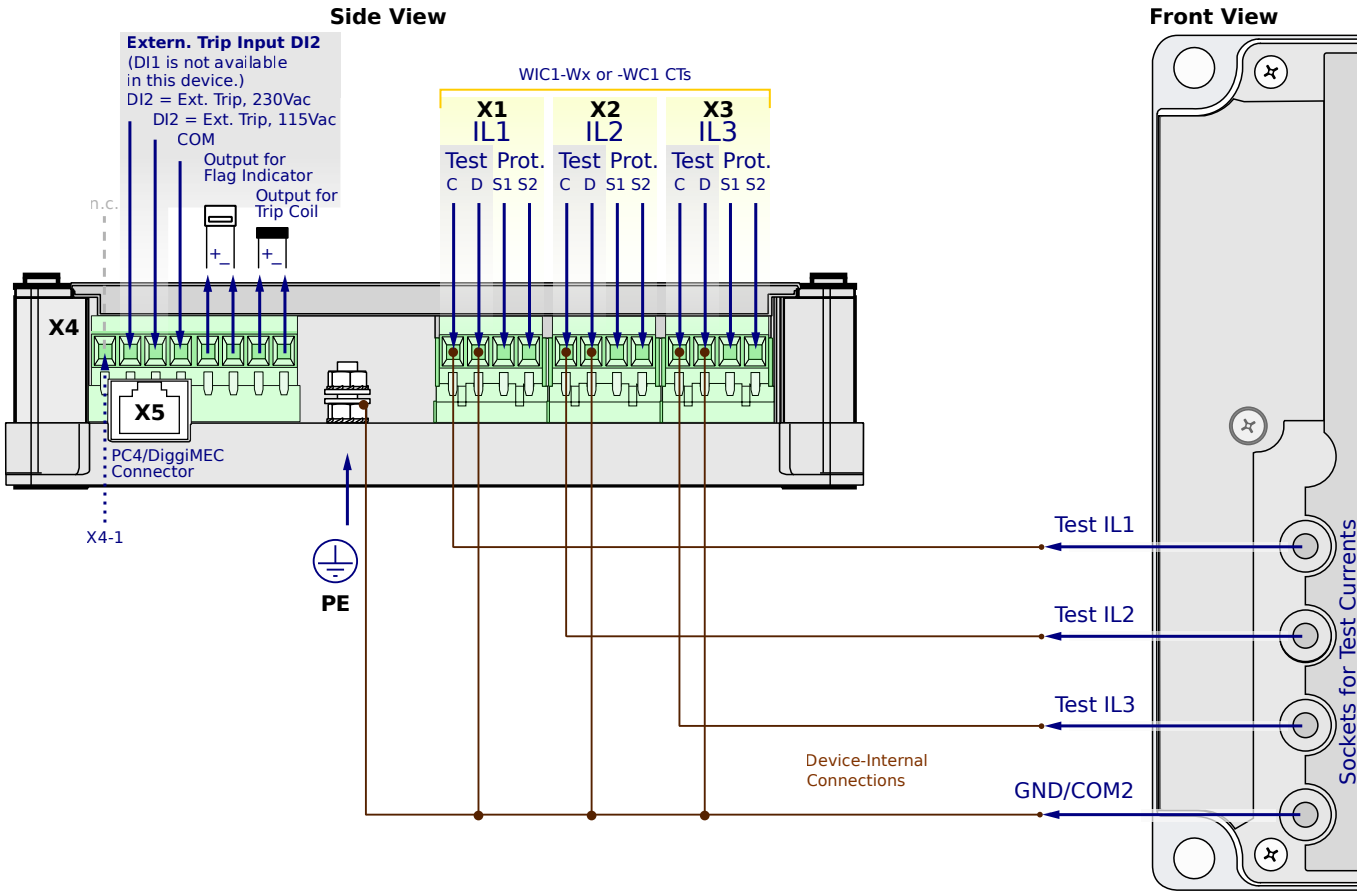


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2AA0

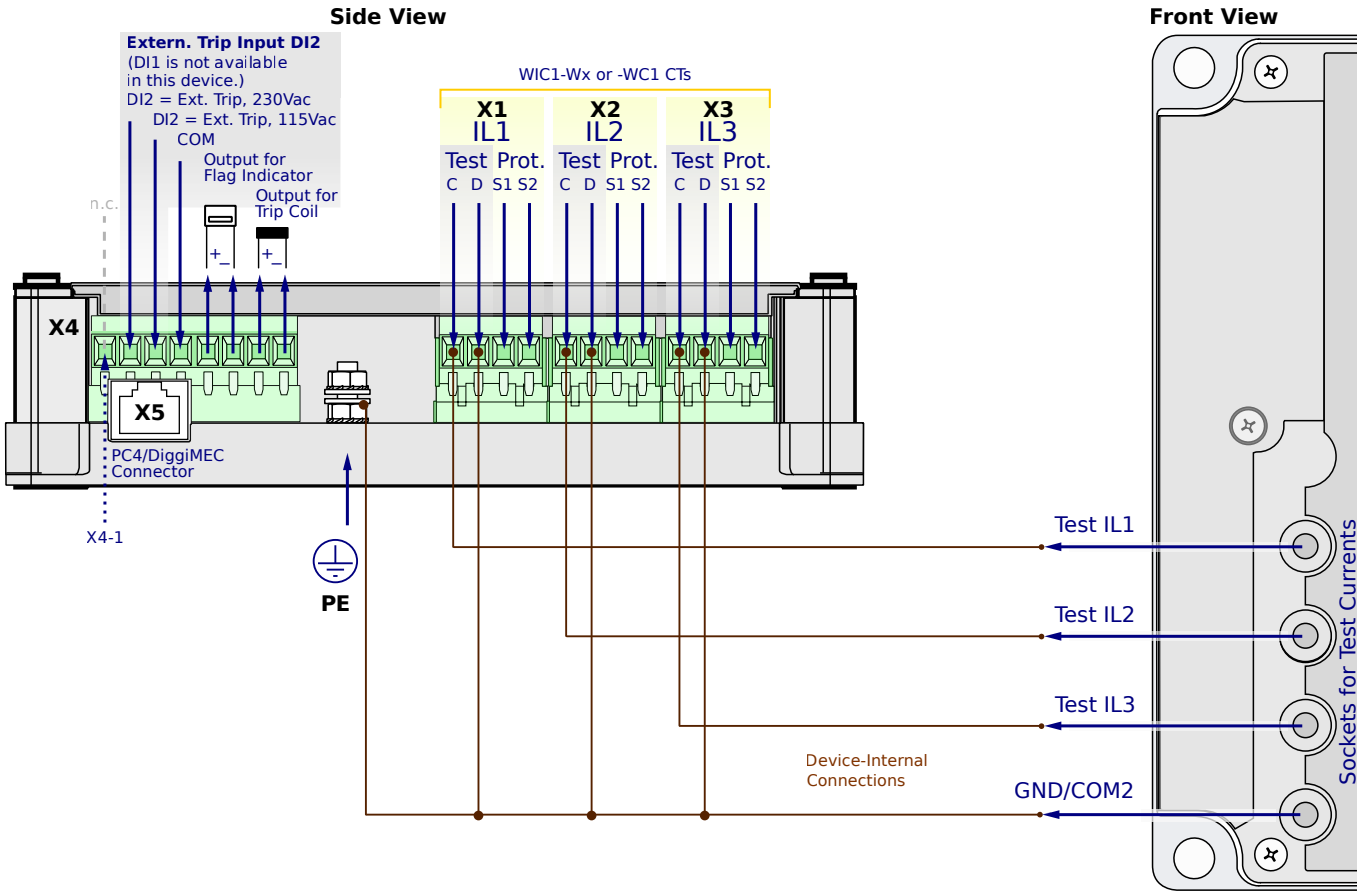


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2AAH

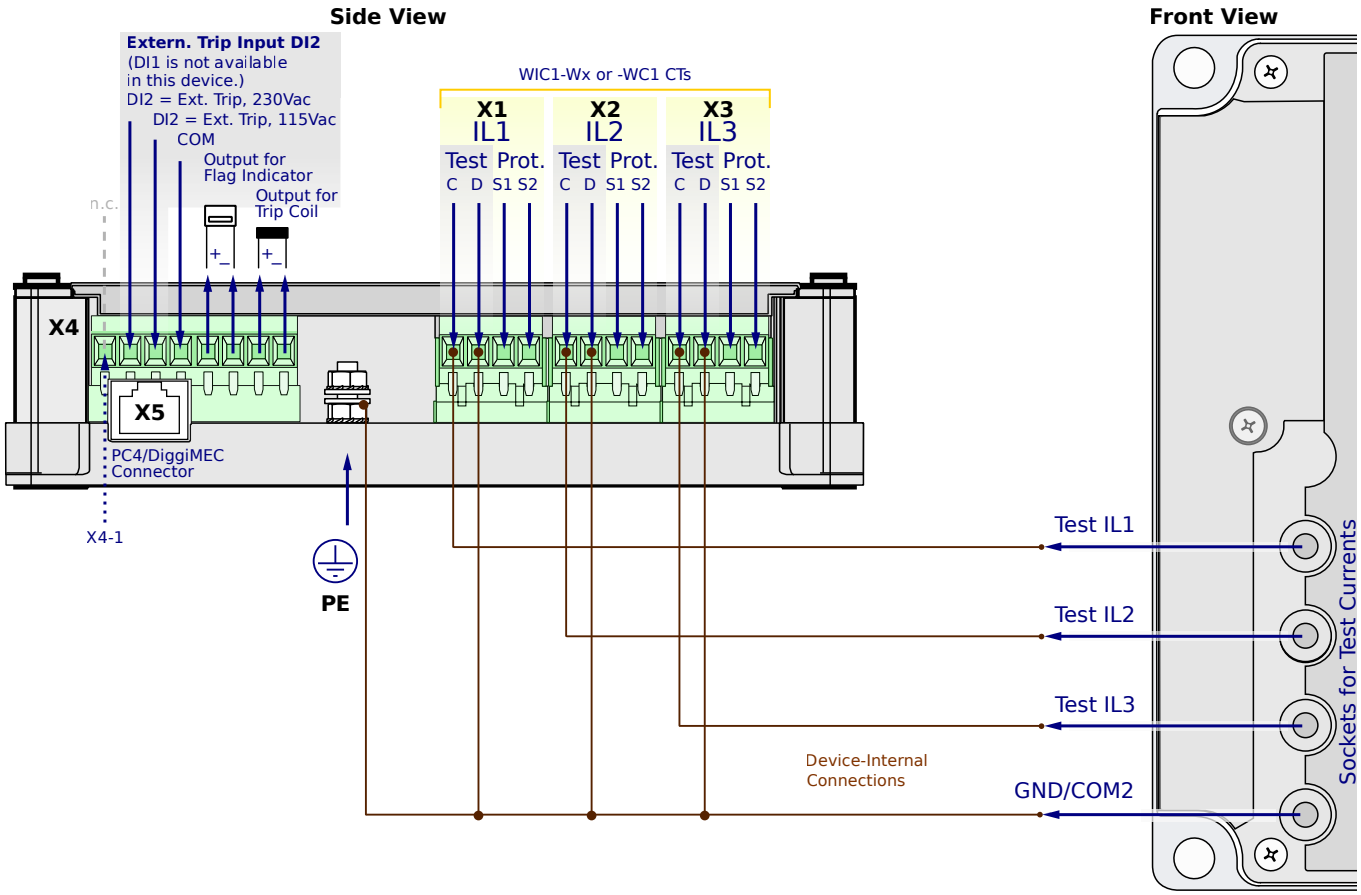


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2PA0

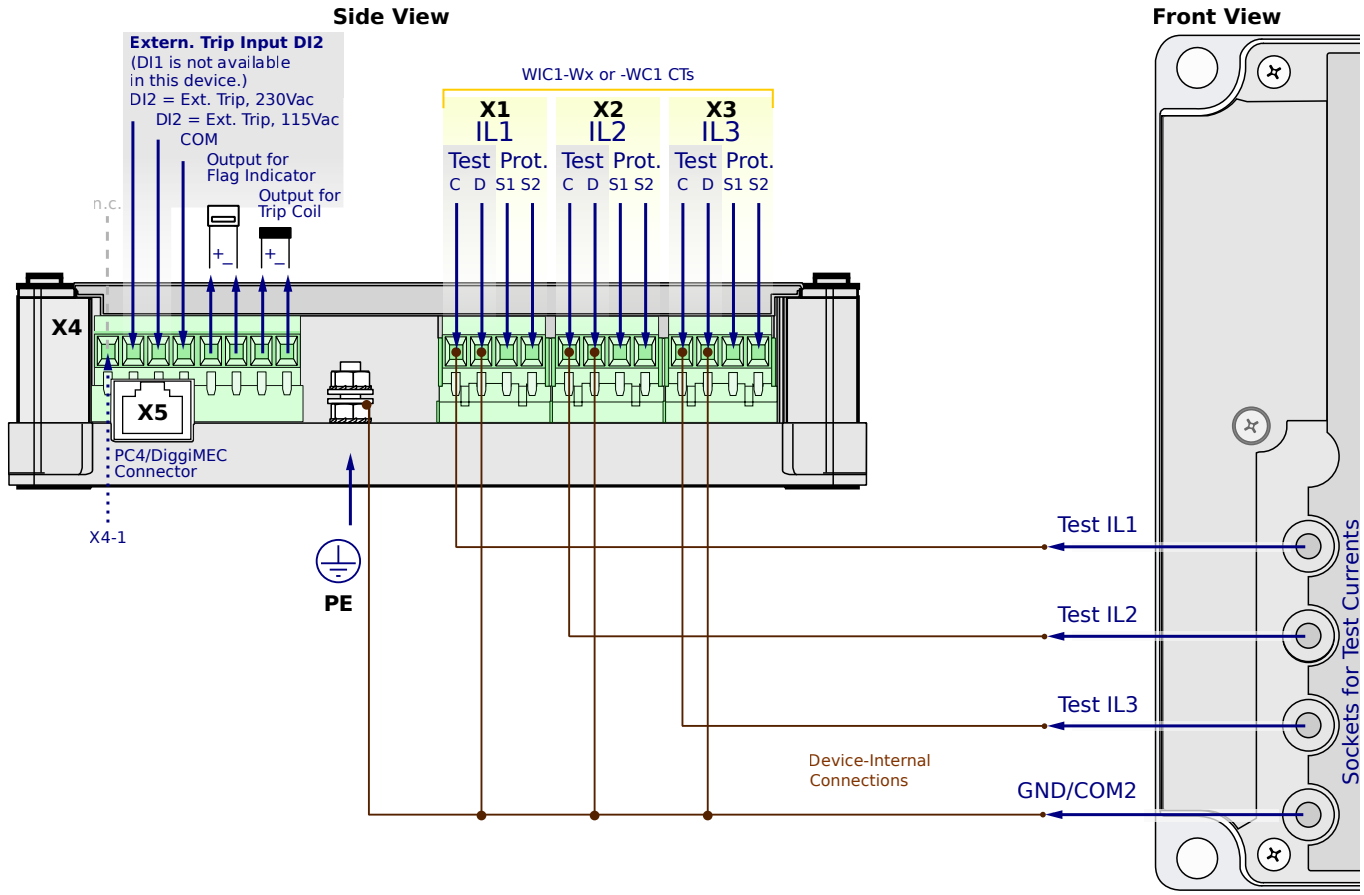


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FF2PAH

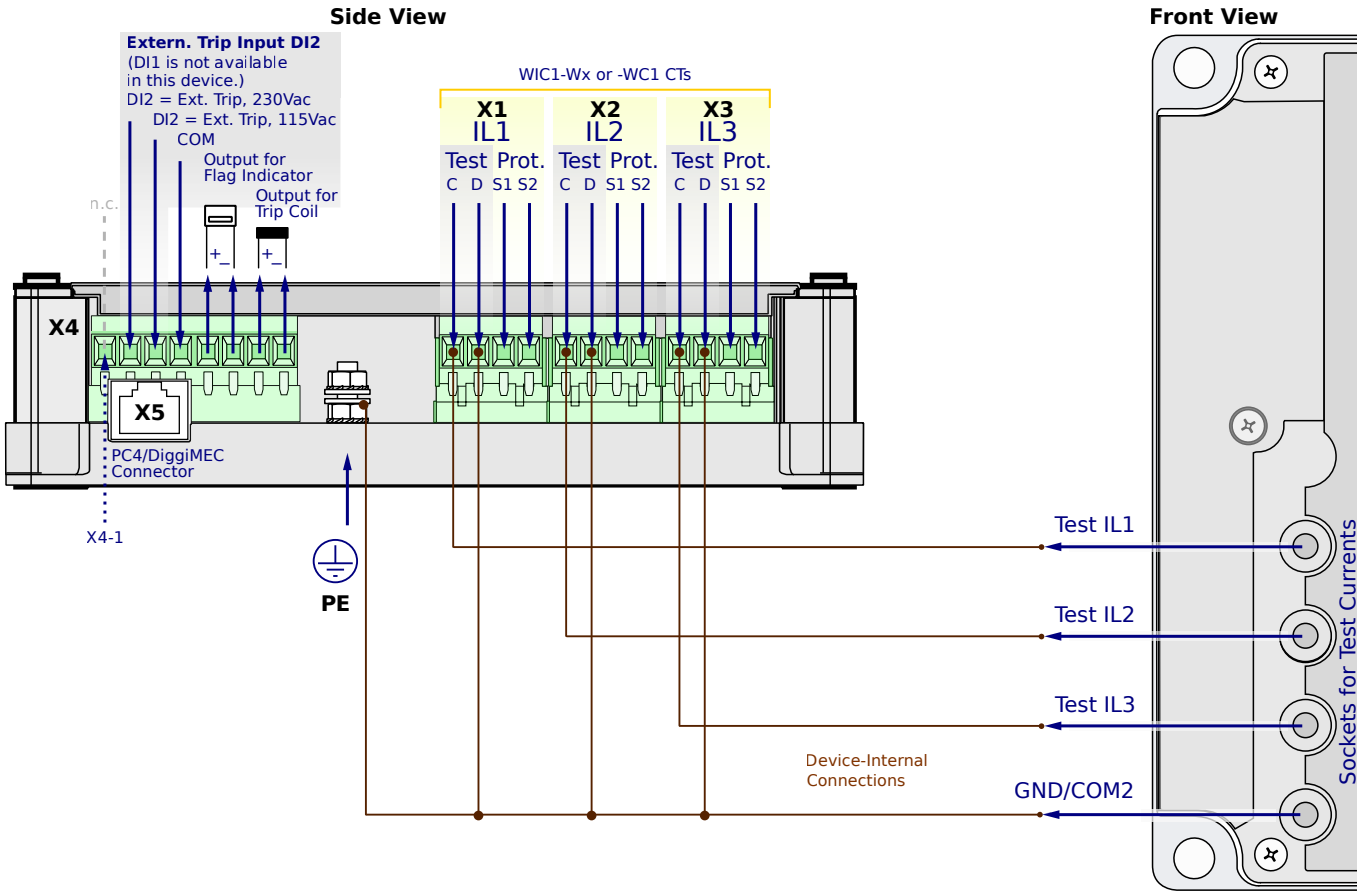


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1SA0

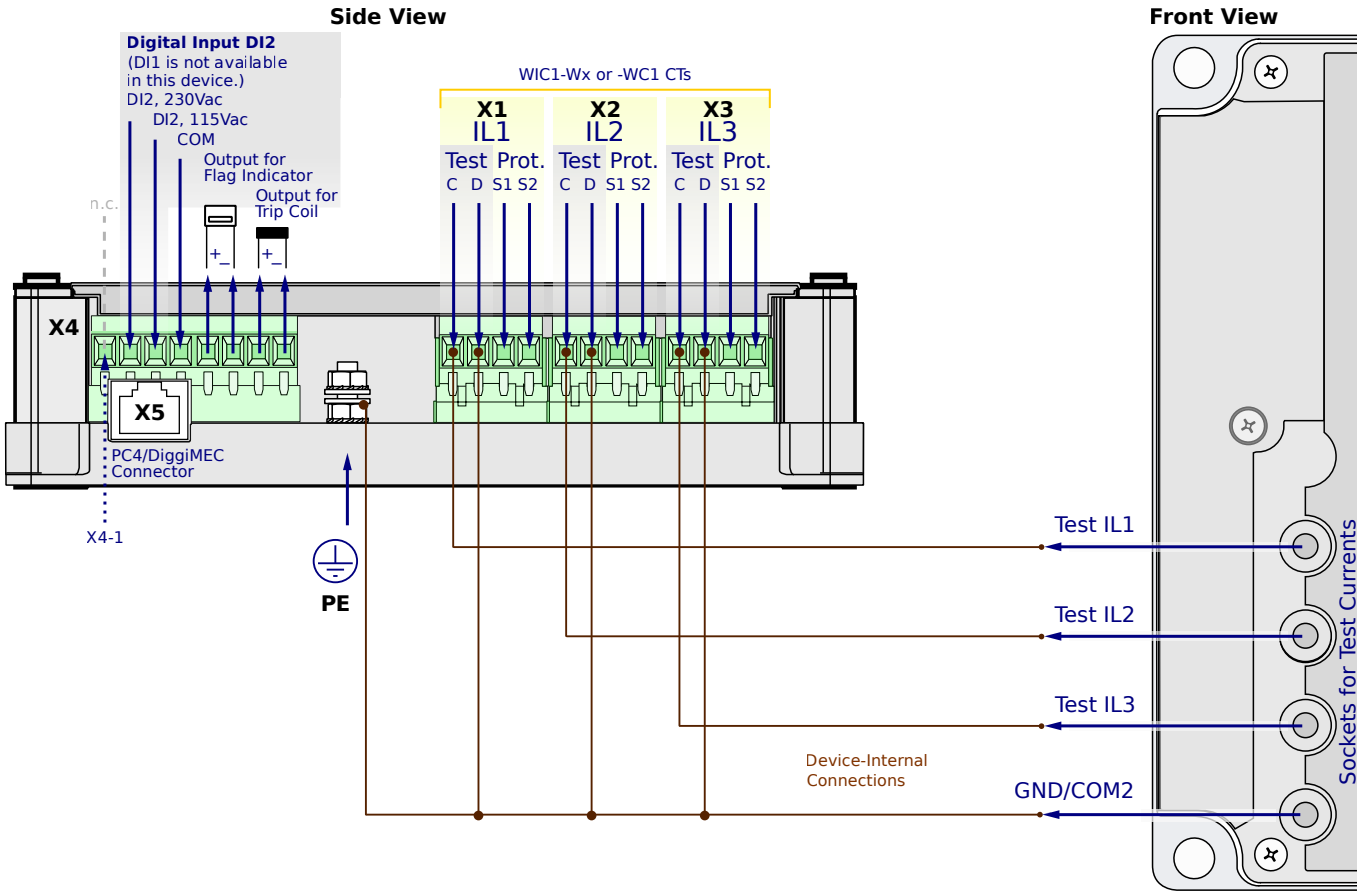


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1SAH

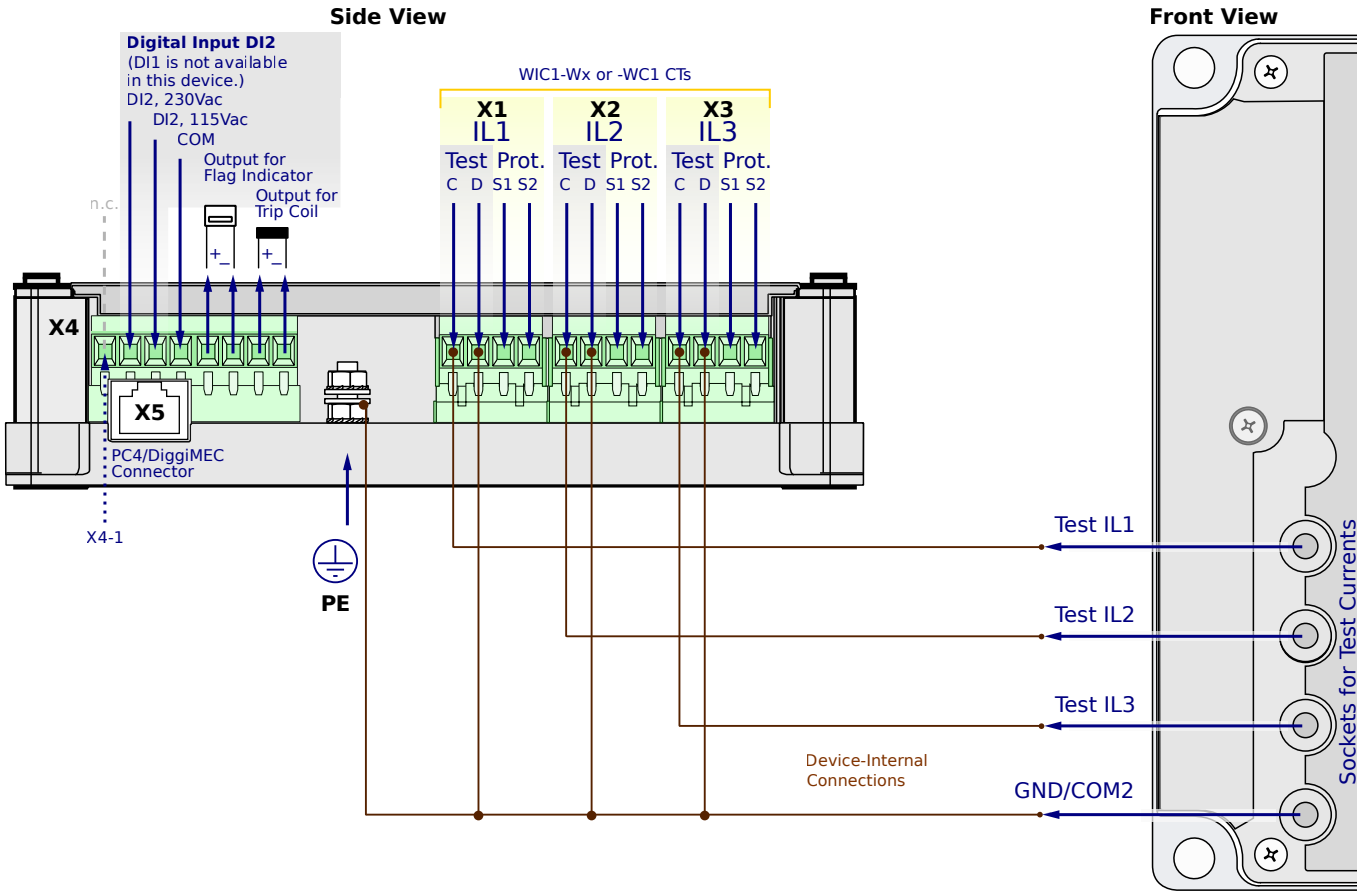


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1AA0

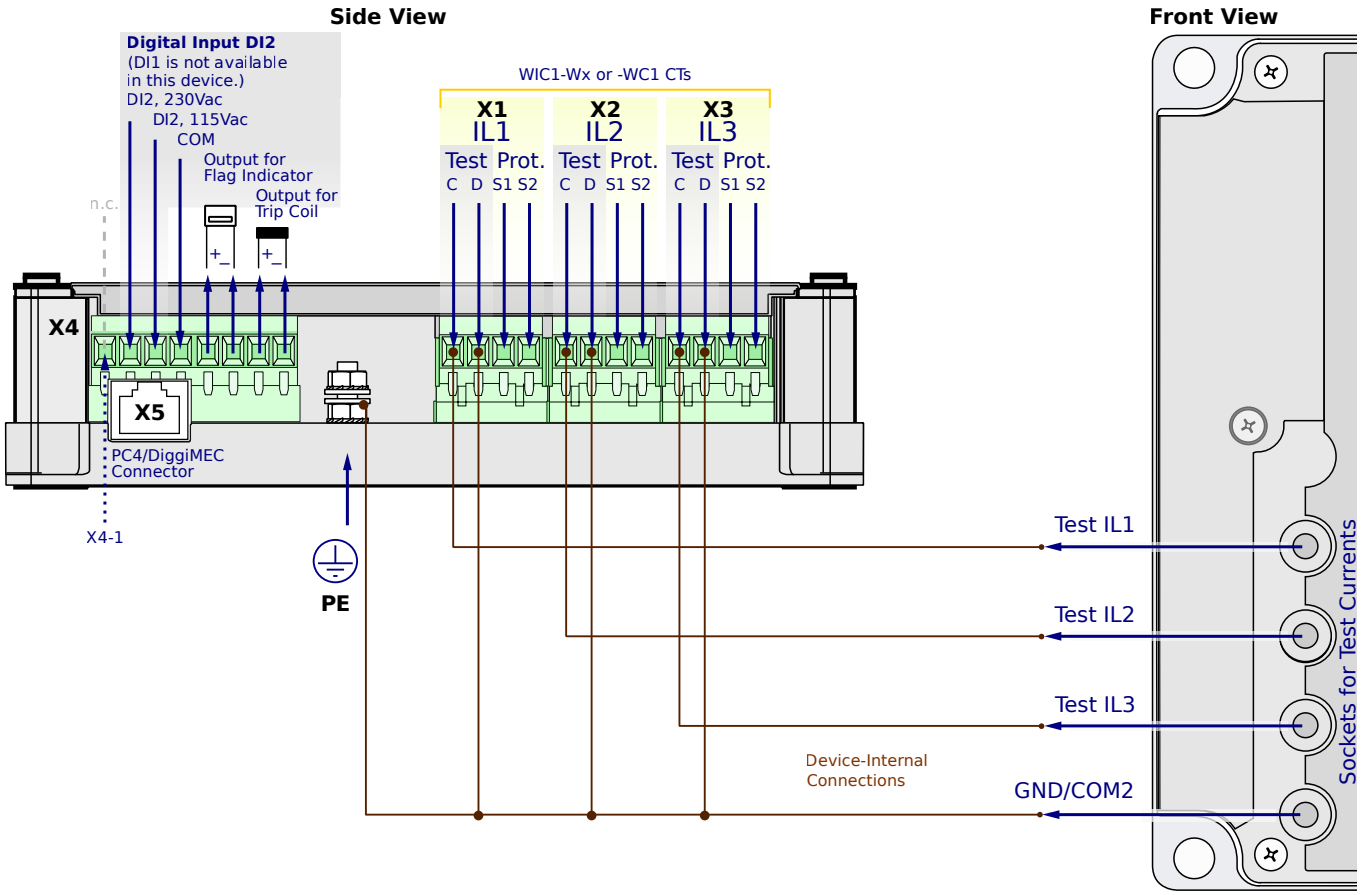


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1AAH

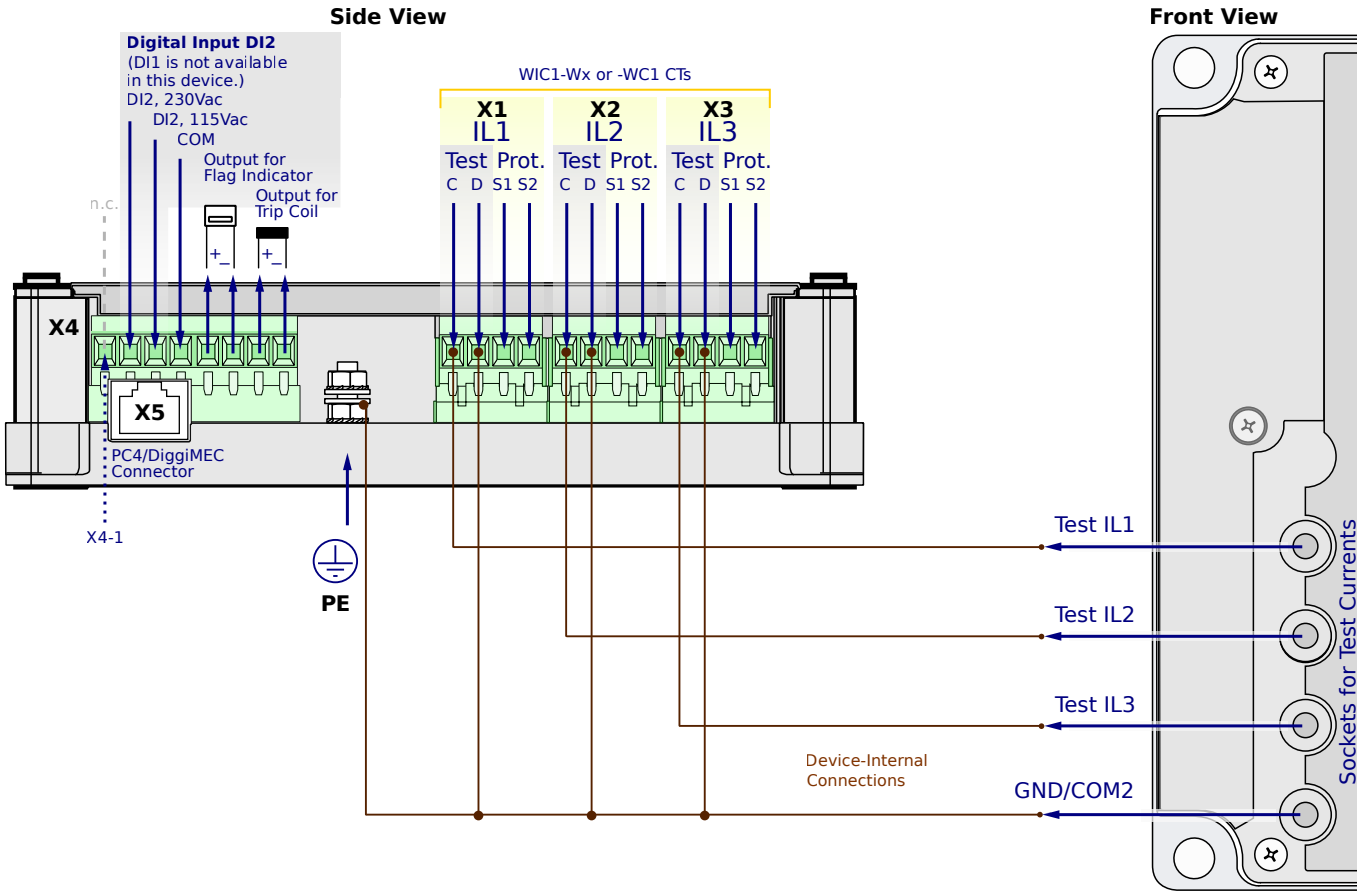


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1PA0

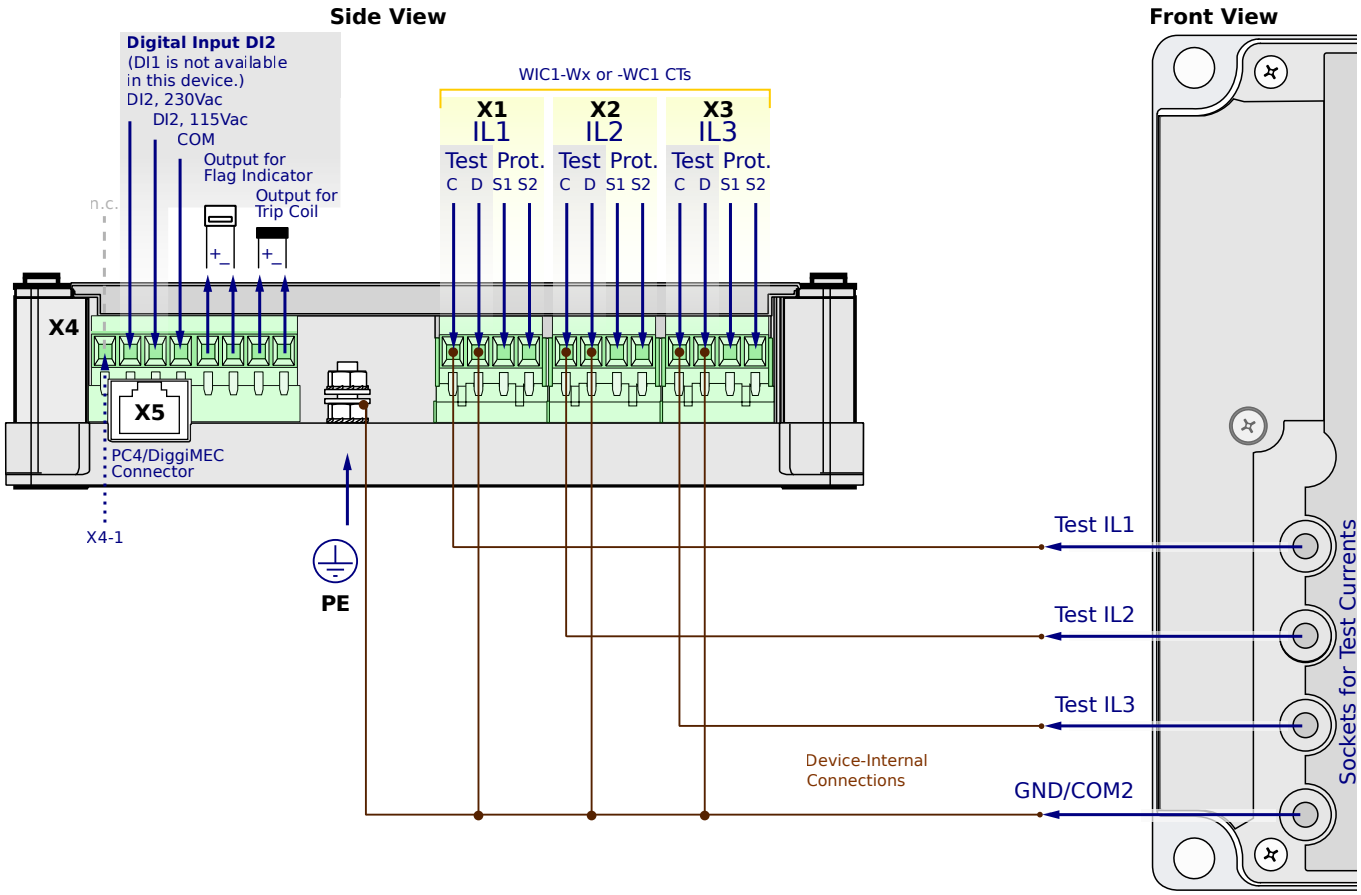


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC1PAH

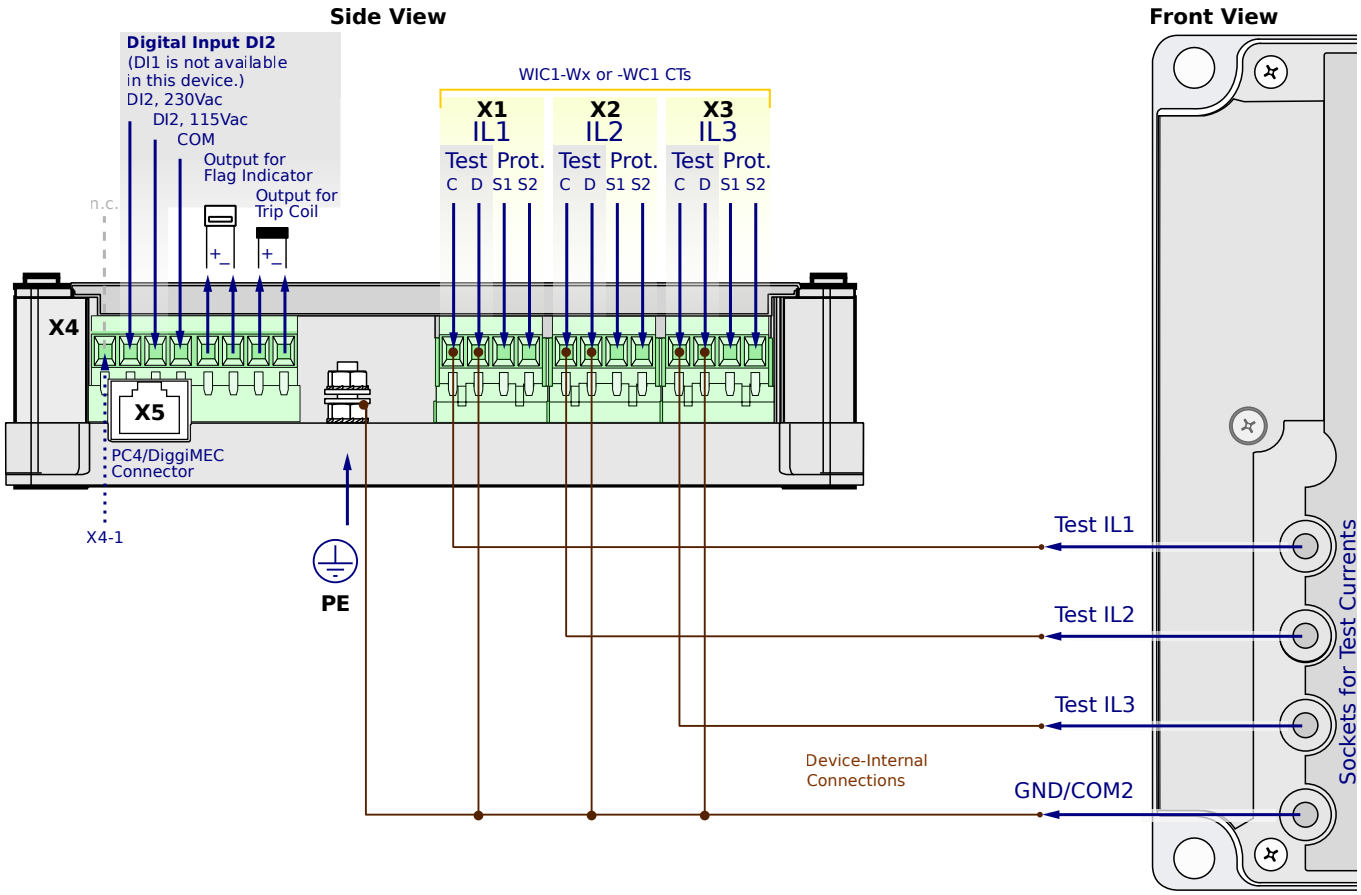


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2SA0

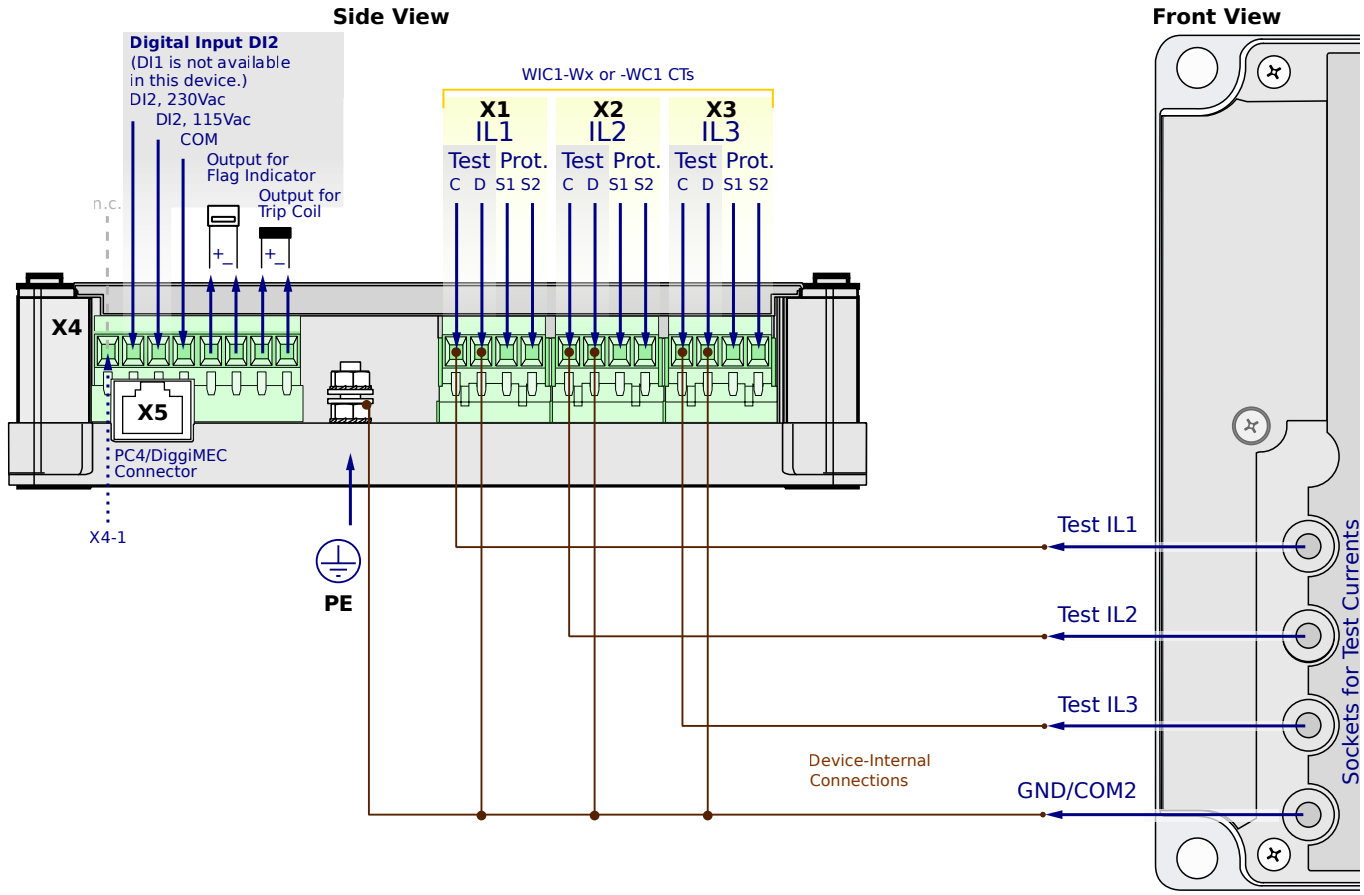


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2SAH

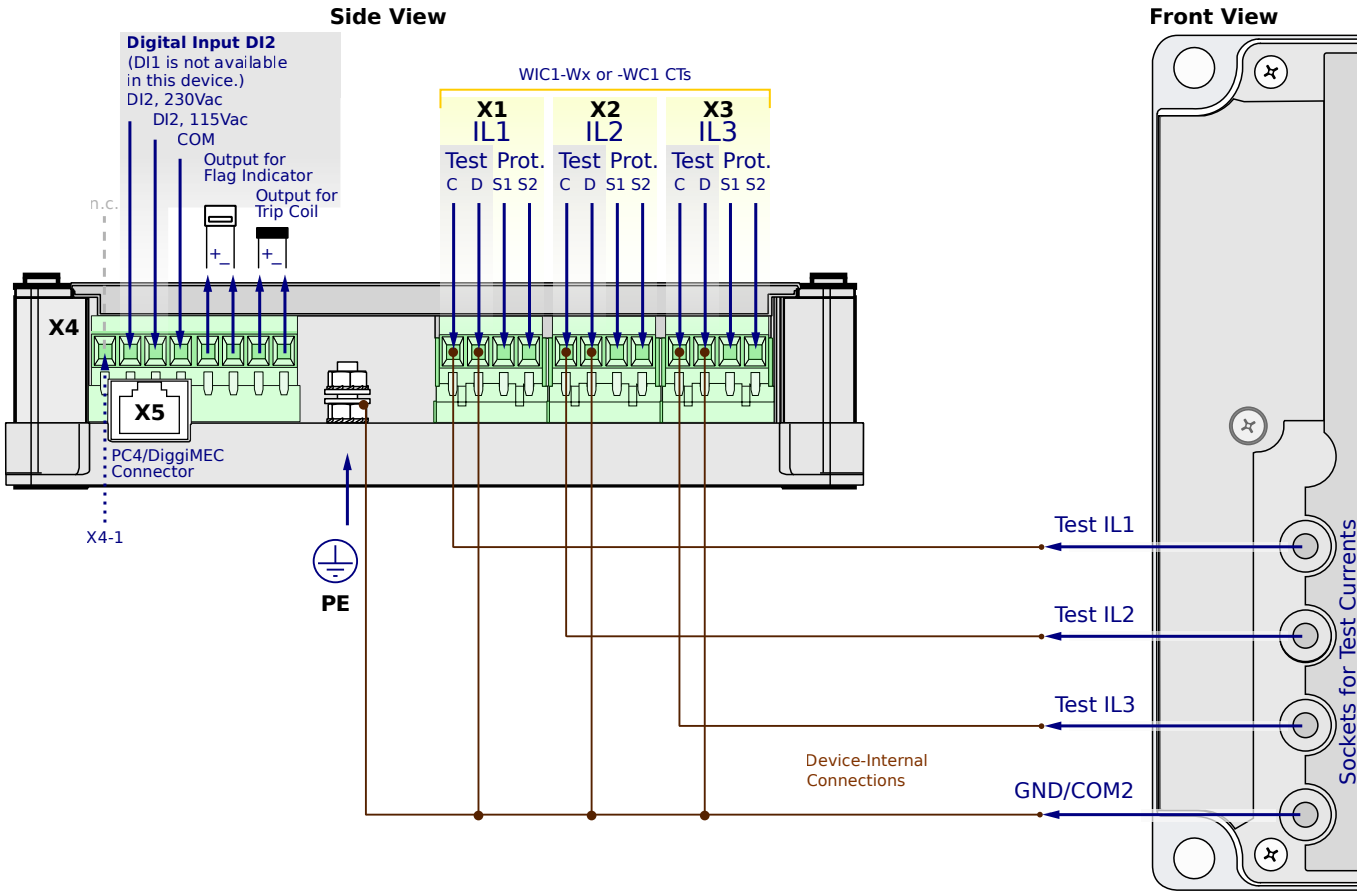


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2AA0

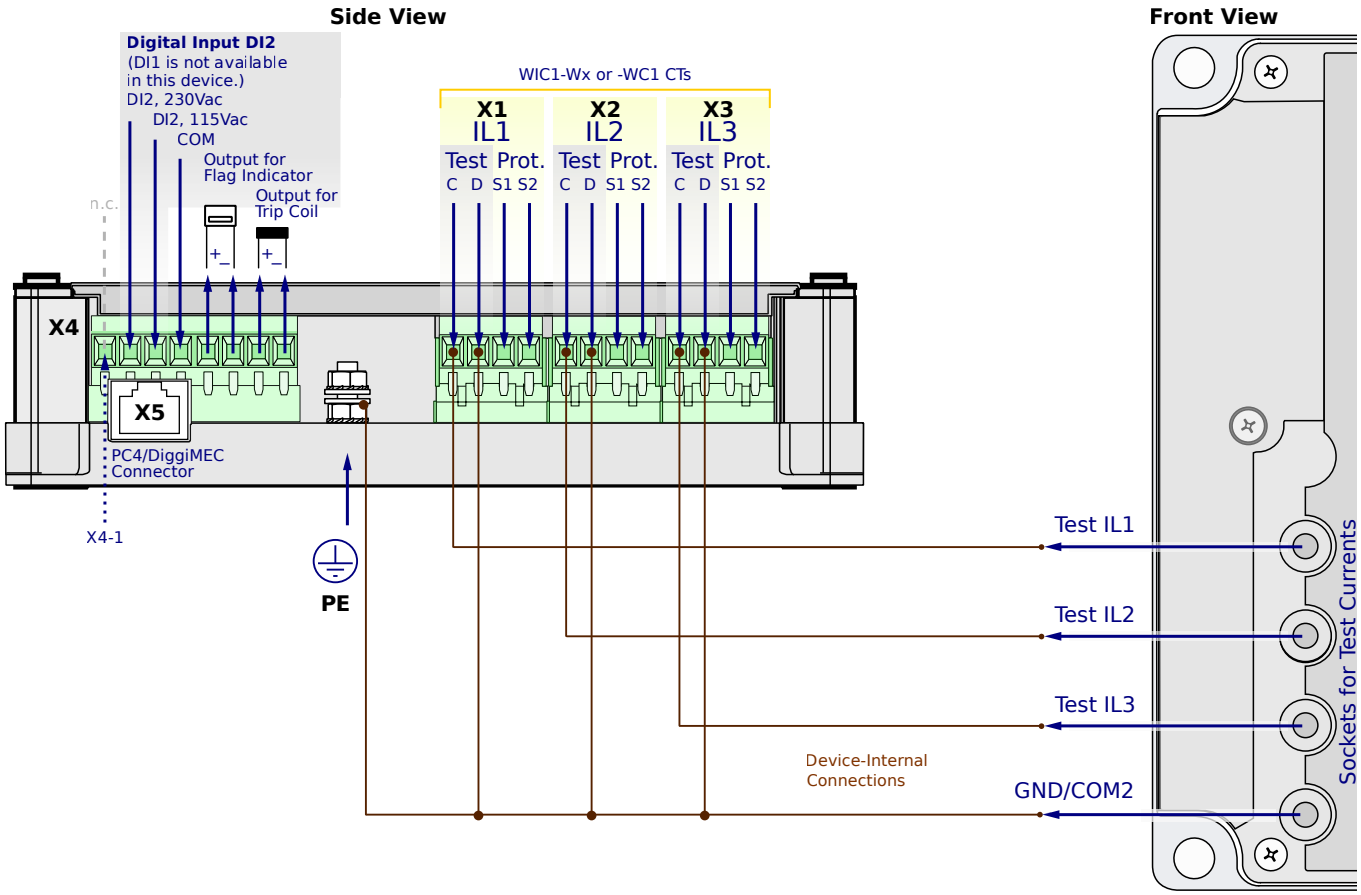


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2AAH

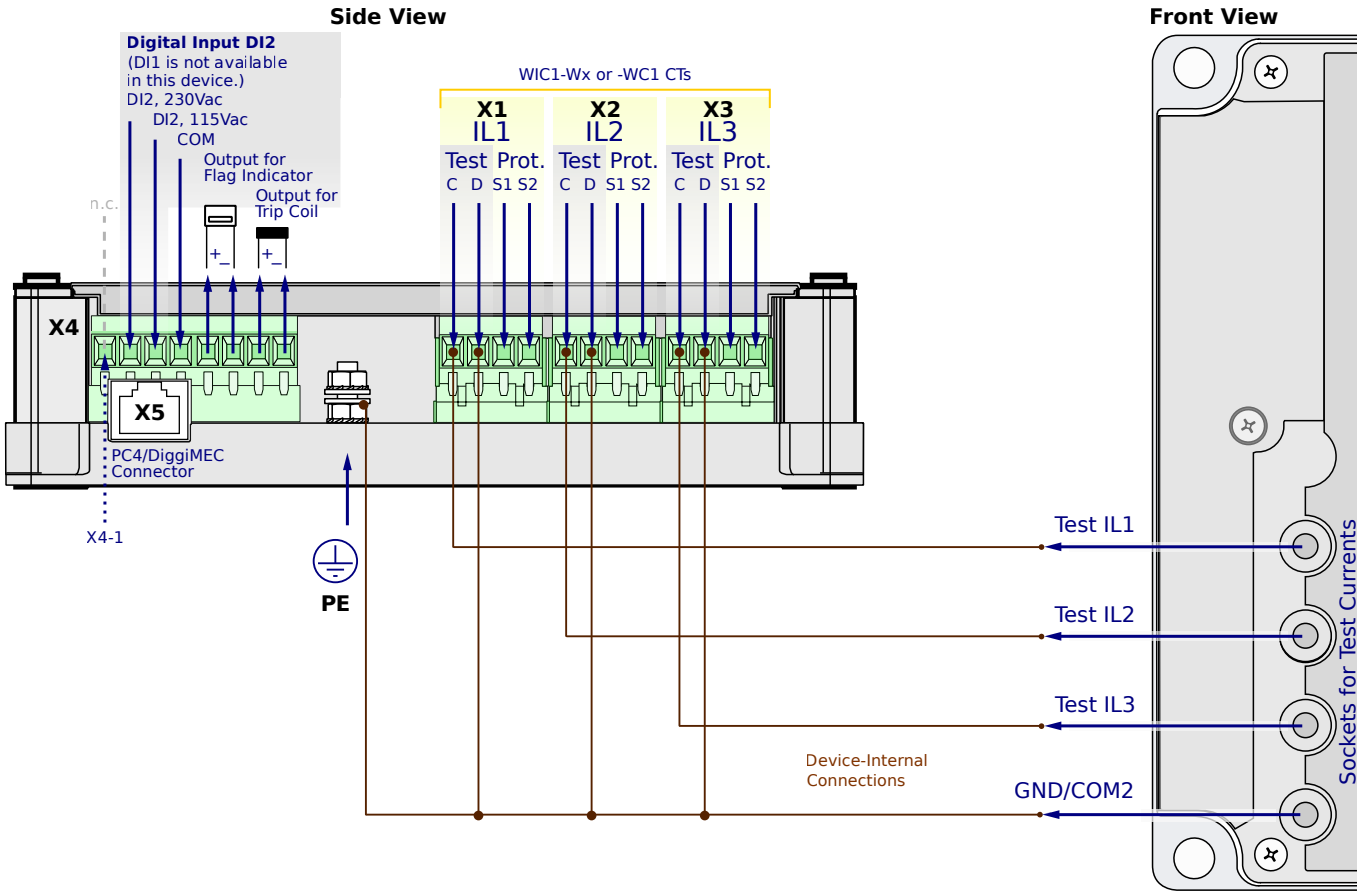


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2PA0

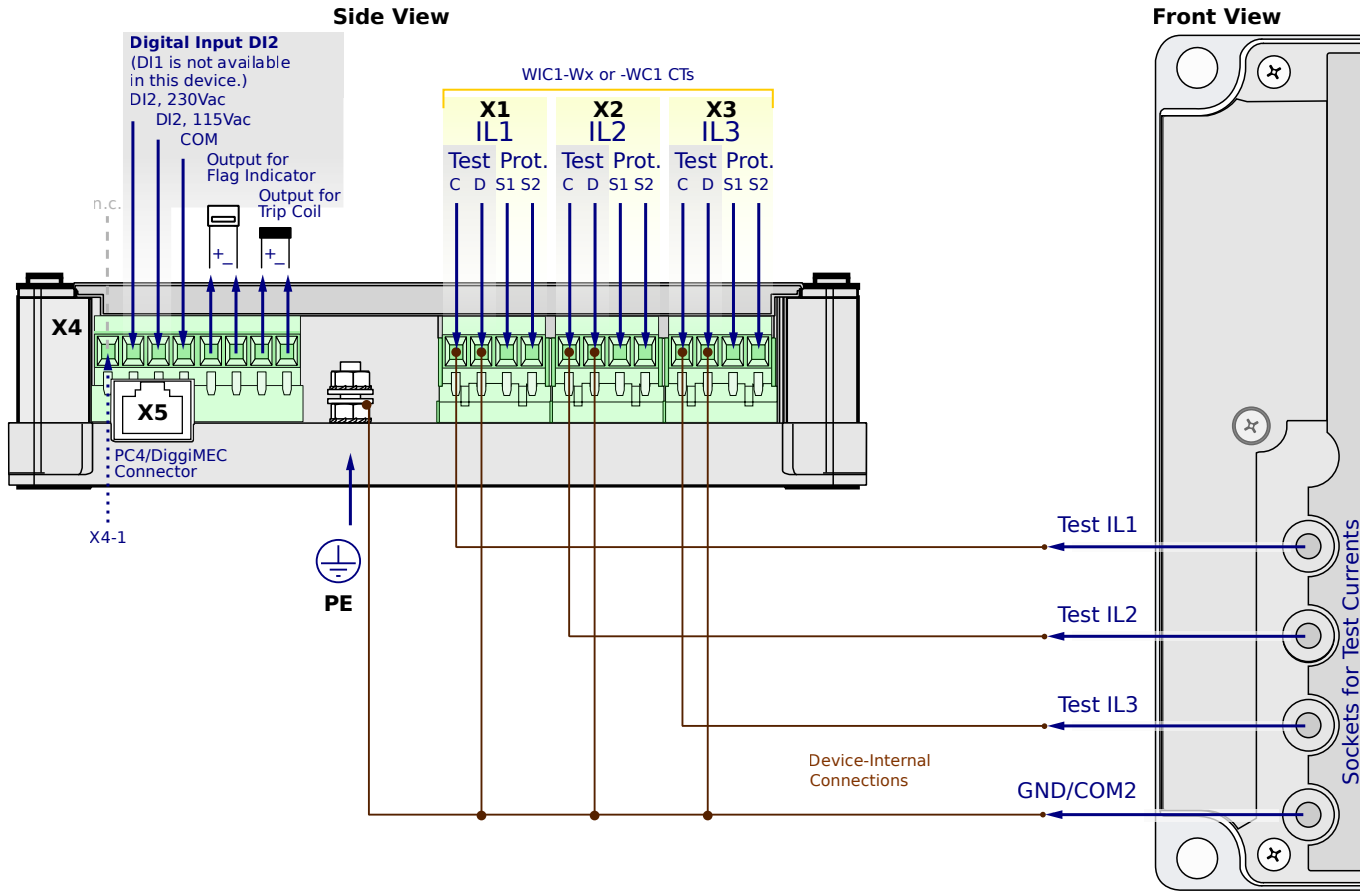


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5FC2PAH

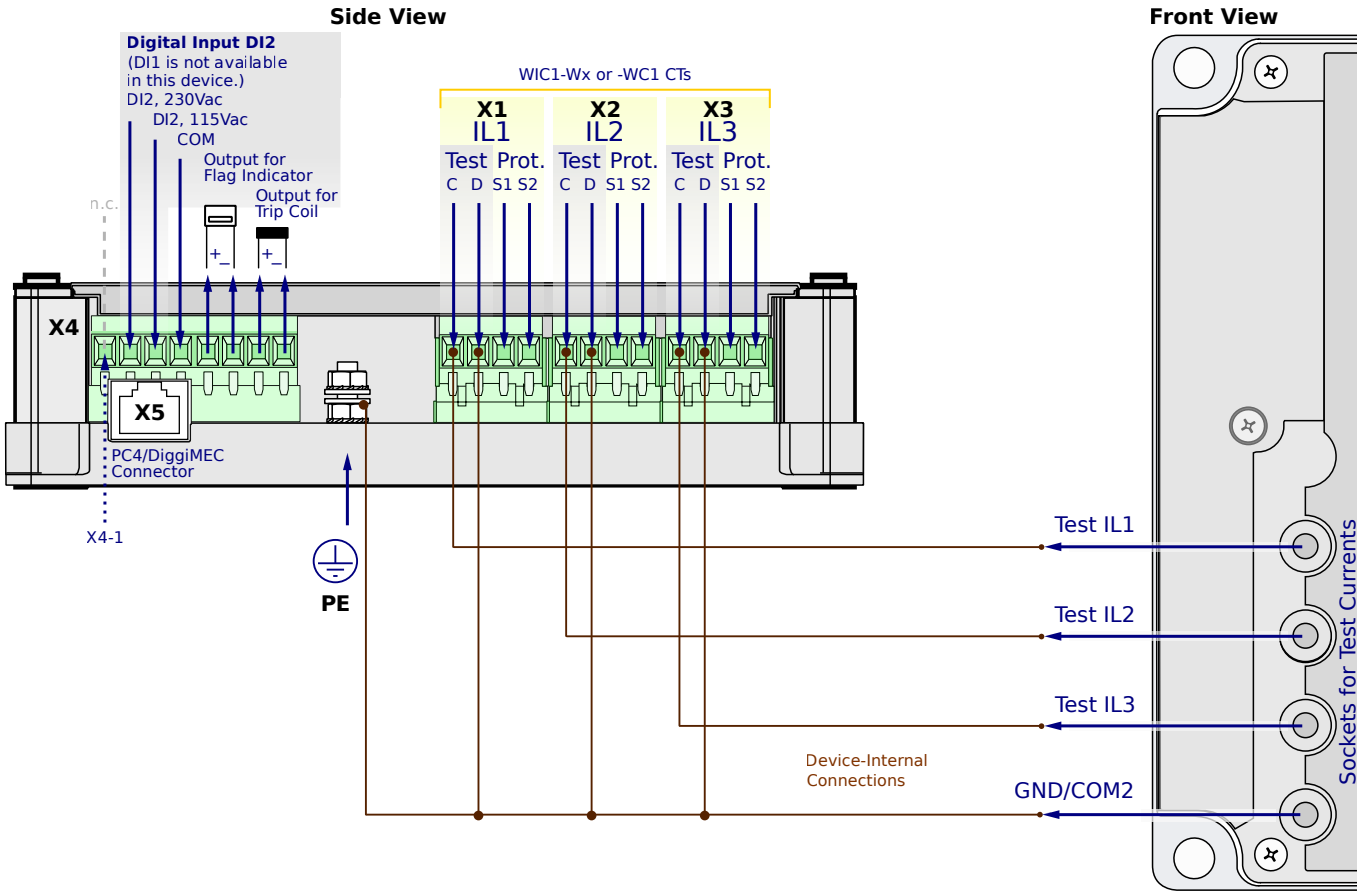


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1SA0

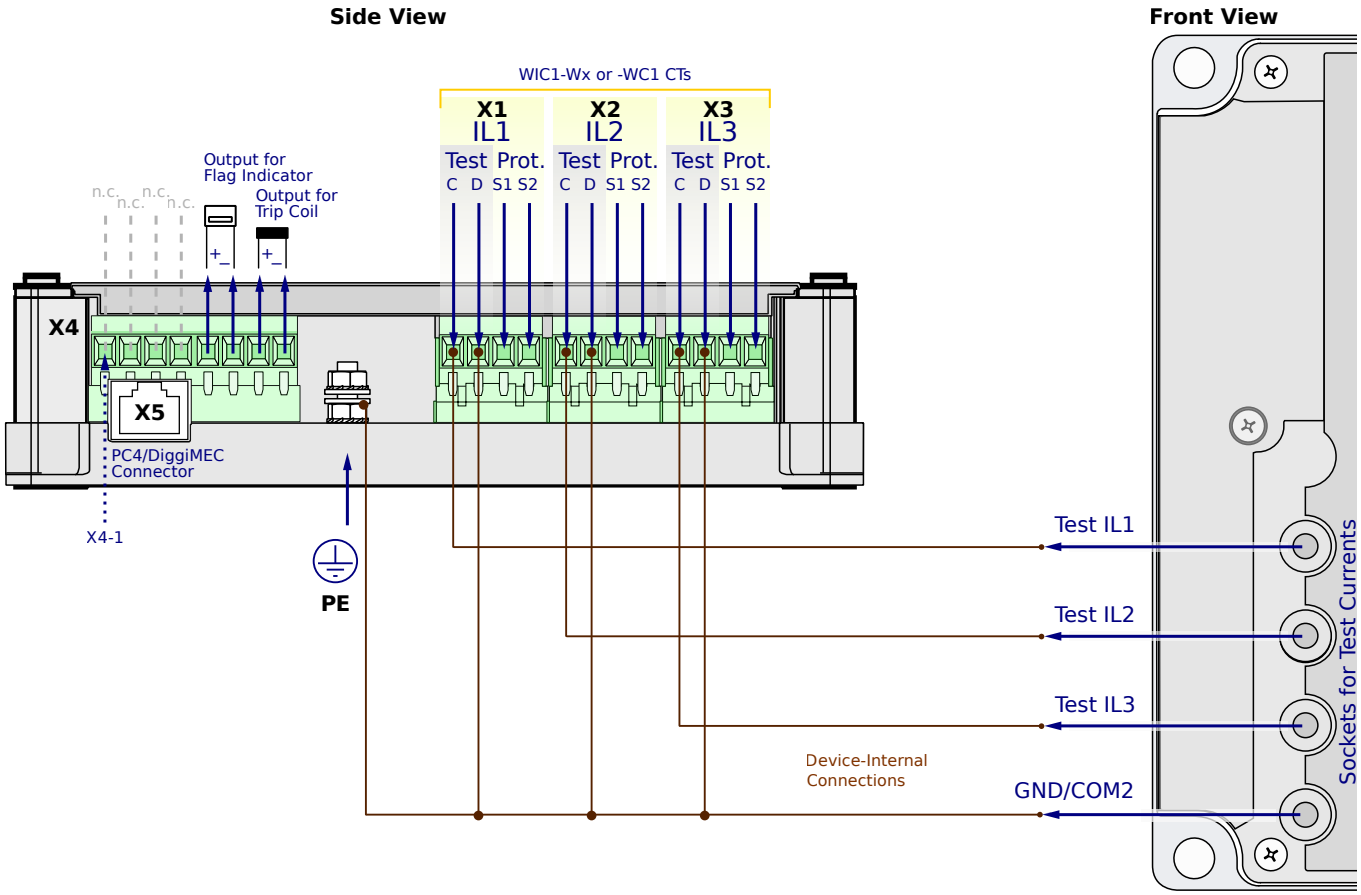


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1SAH

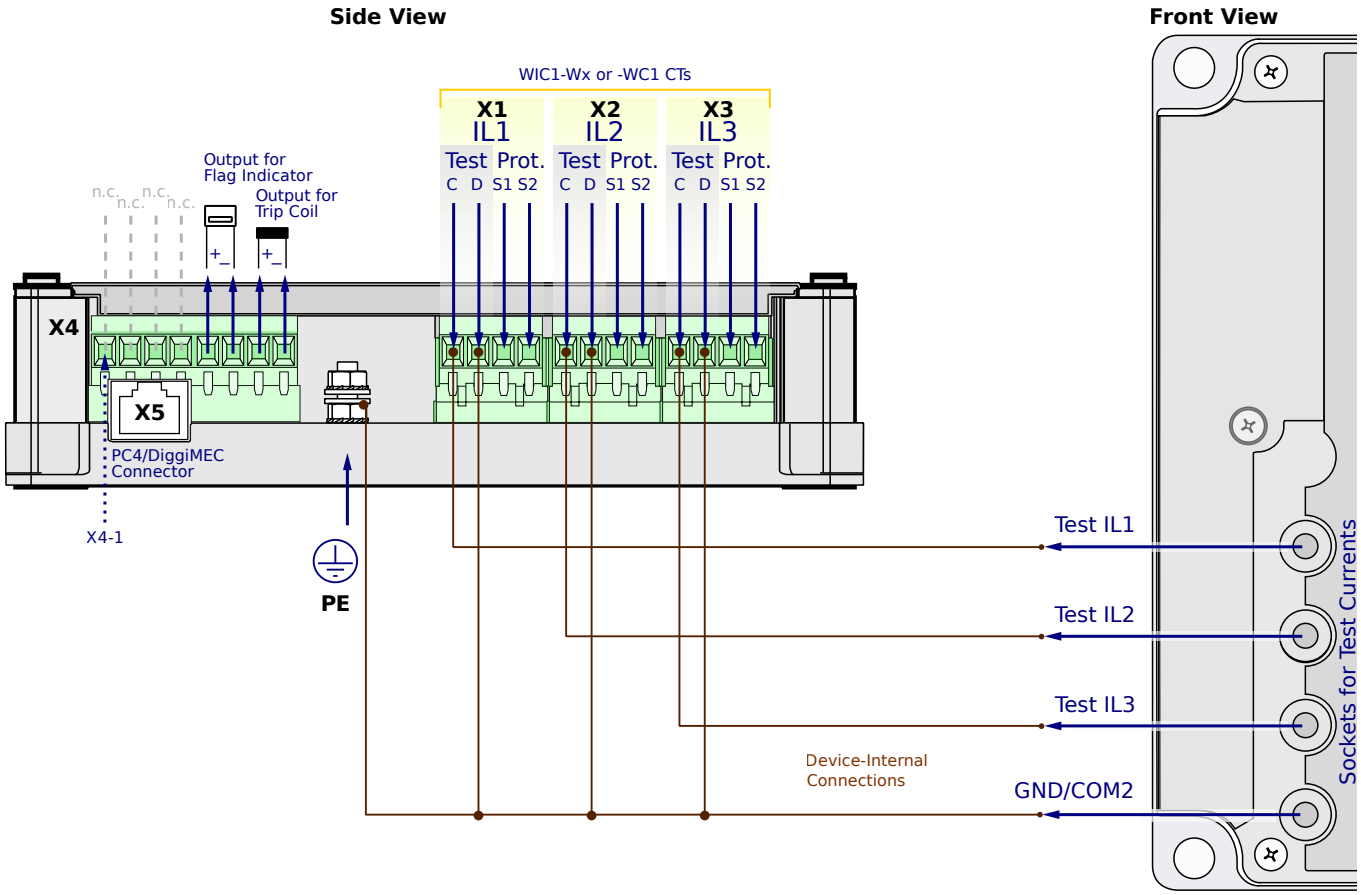


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1AA0

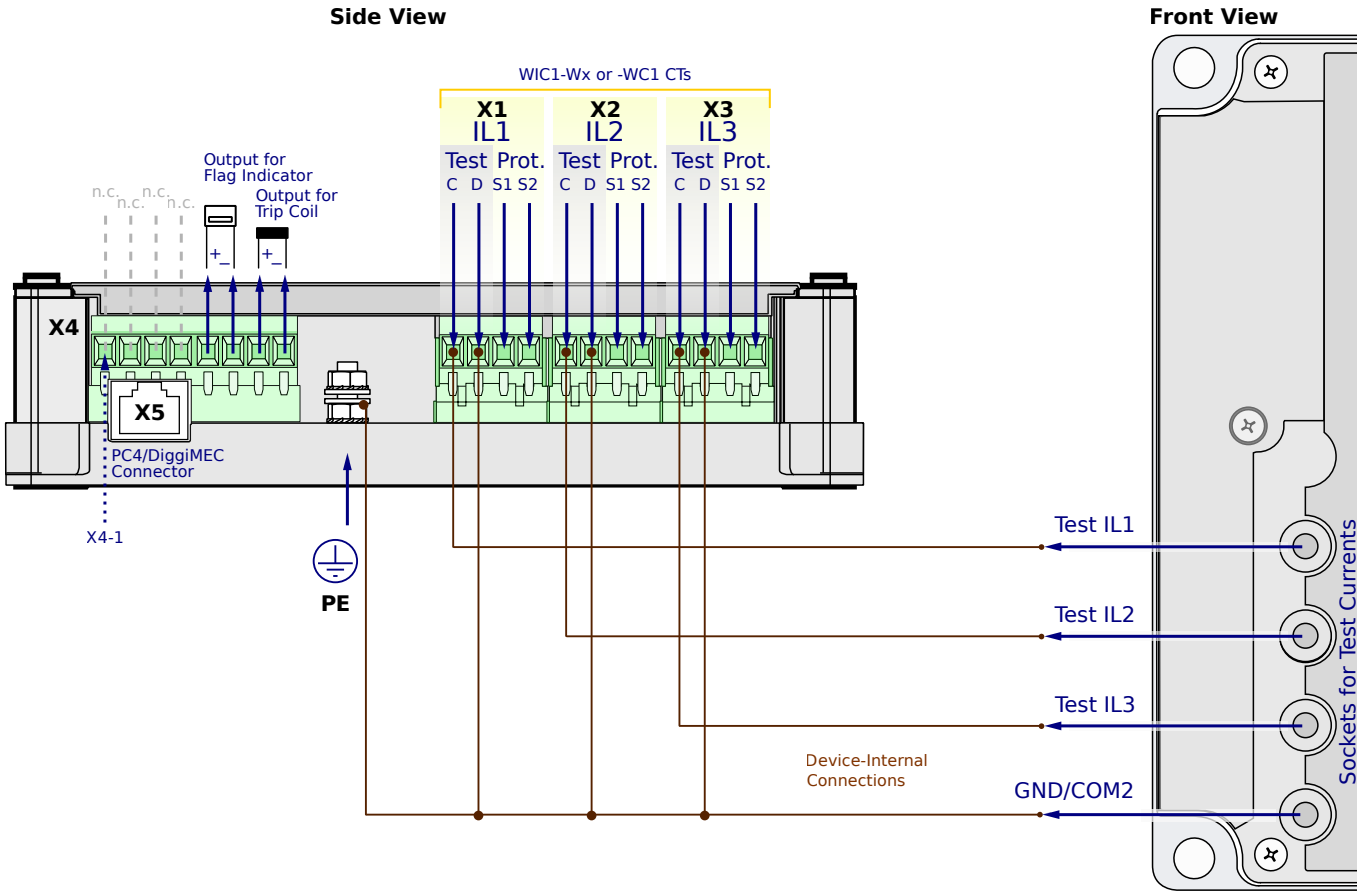


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1AAH

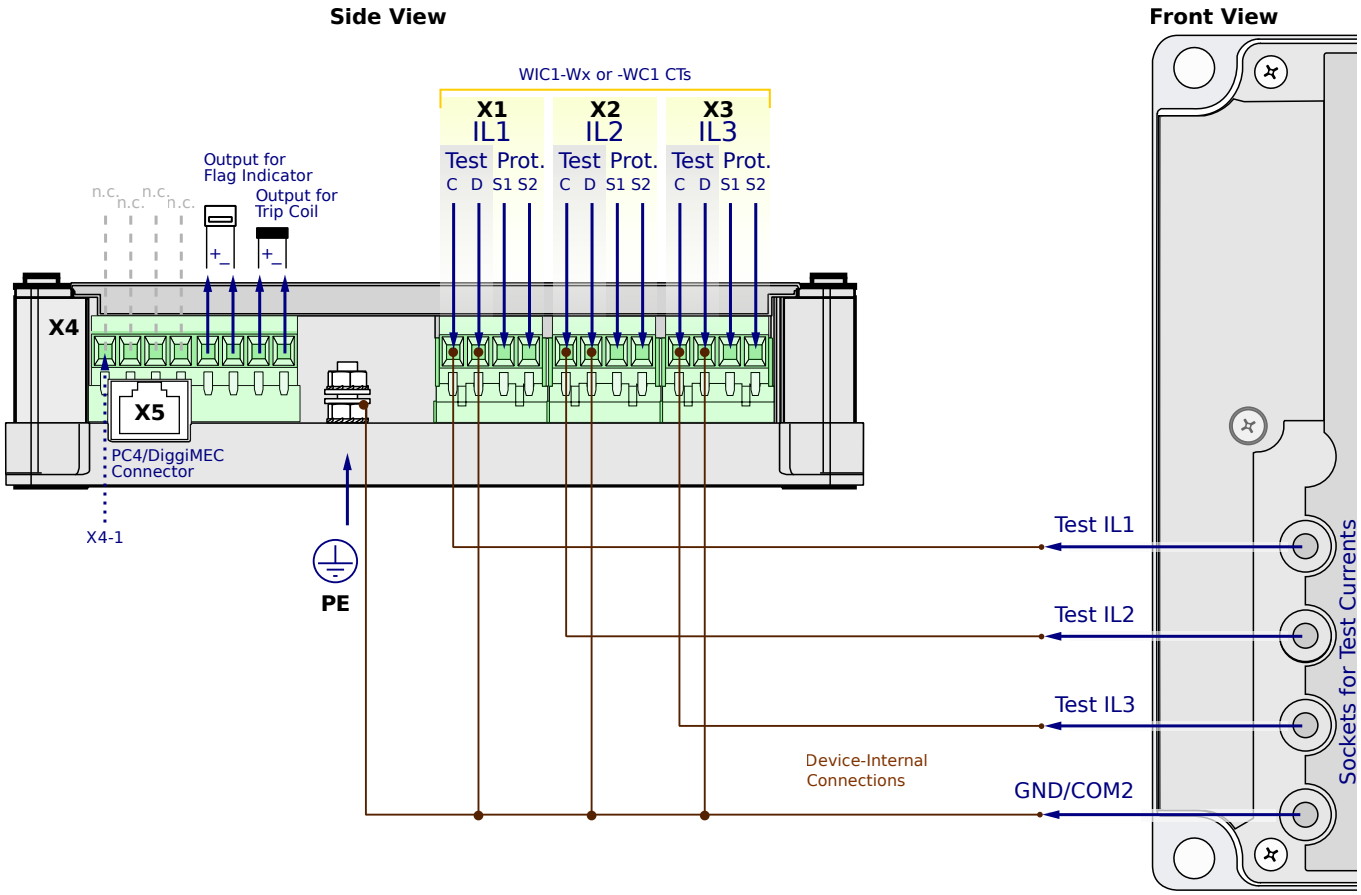


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1PA0

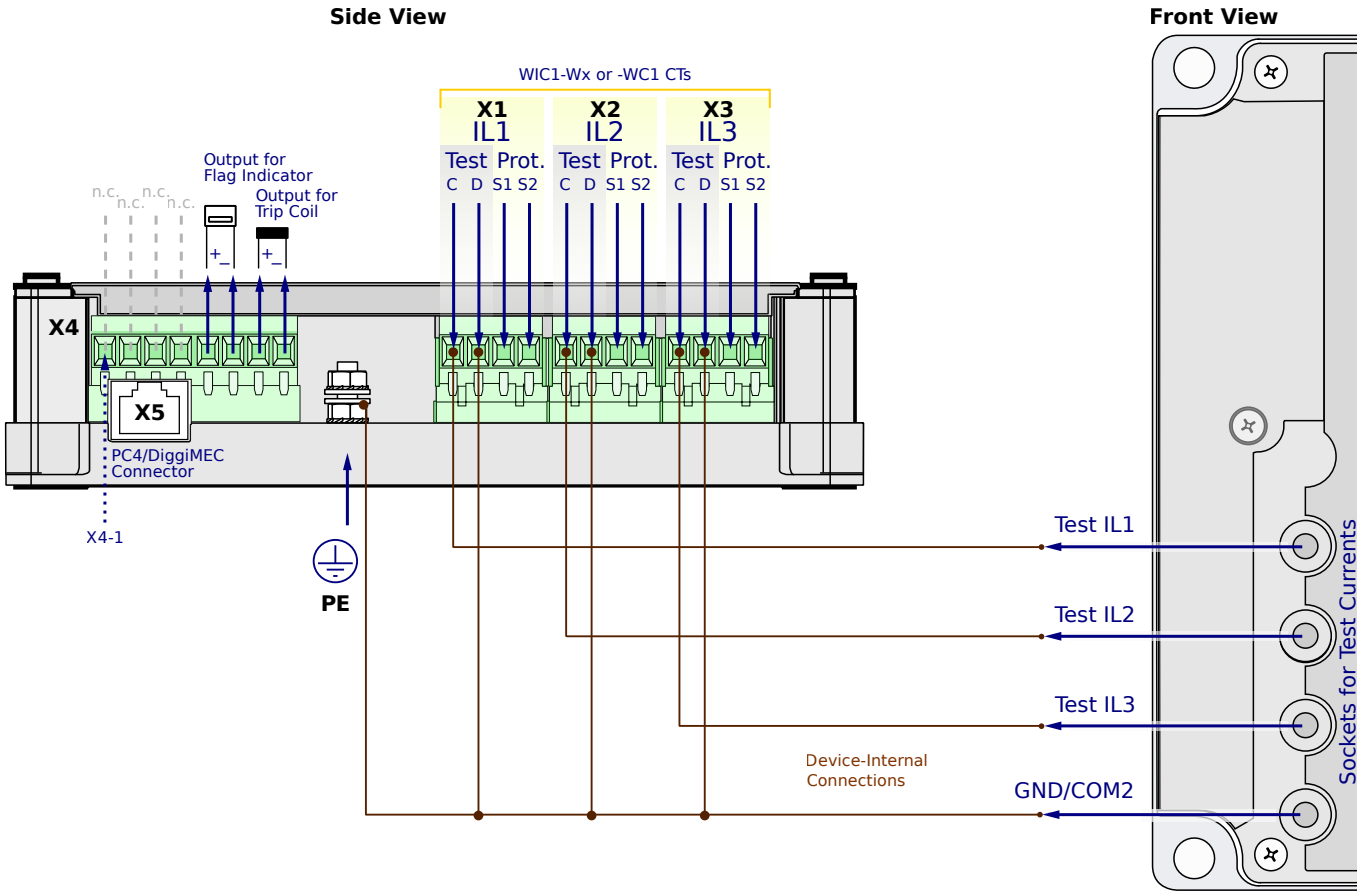


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN1PAH

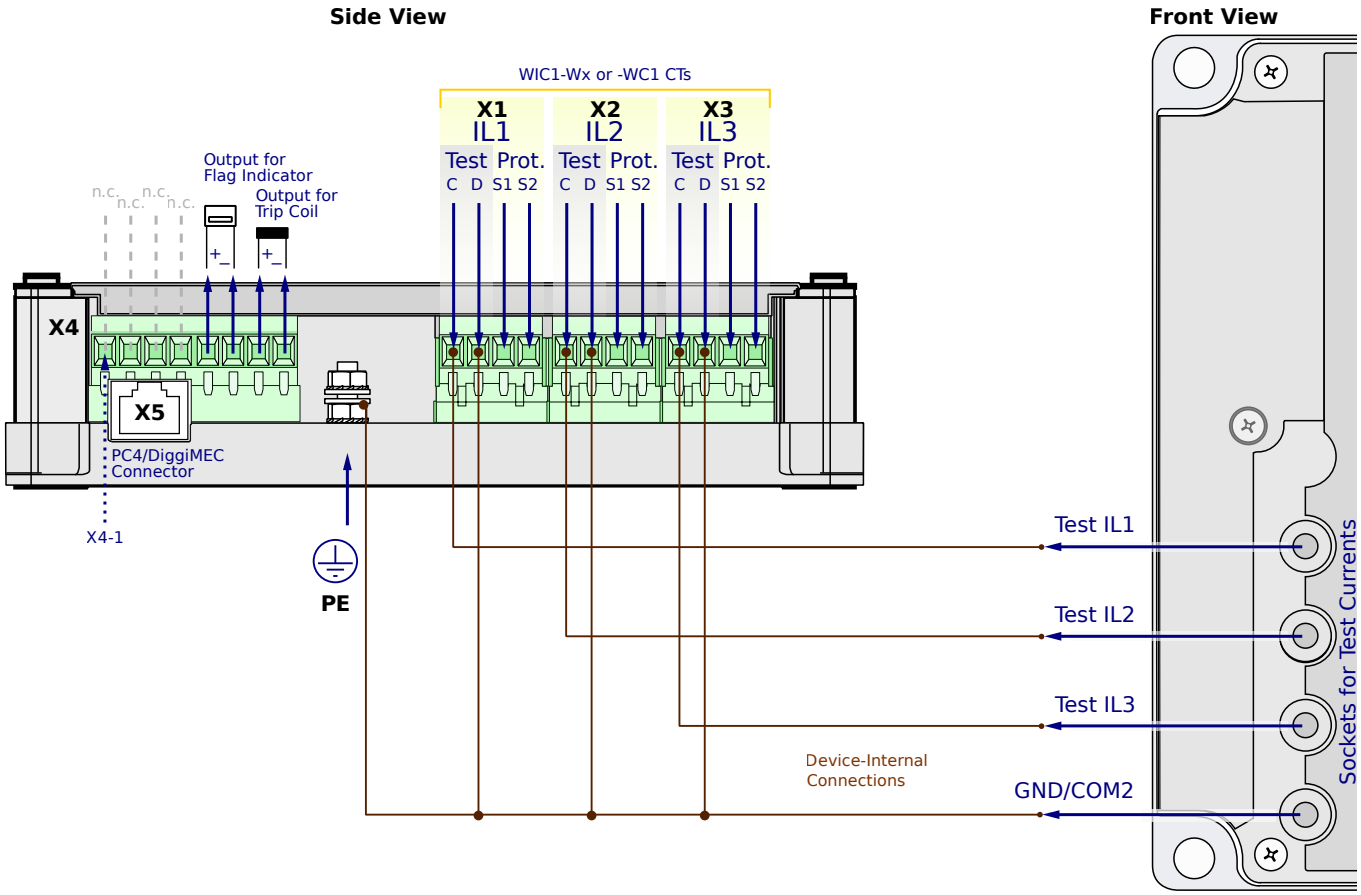


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2SA0

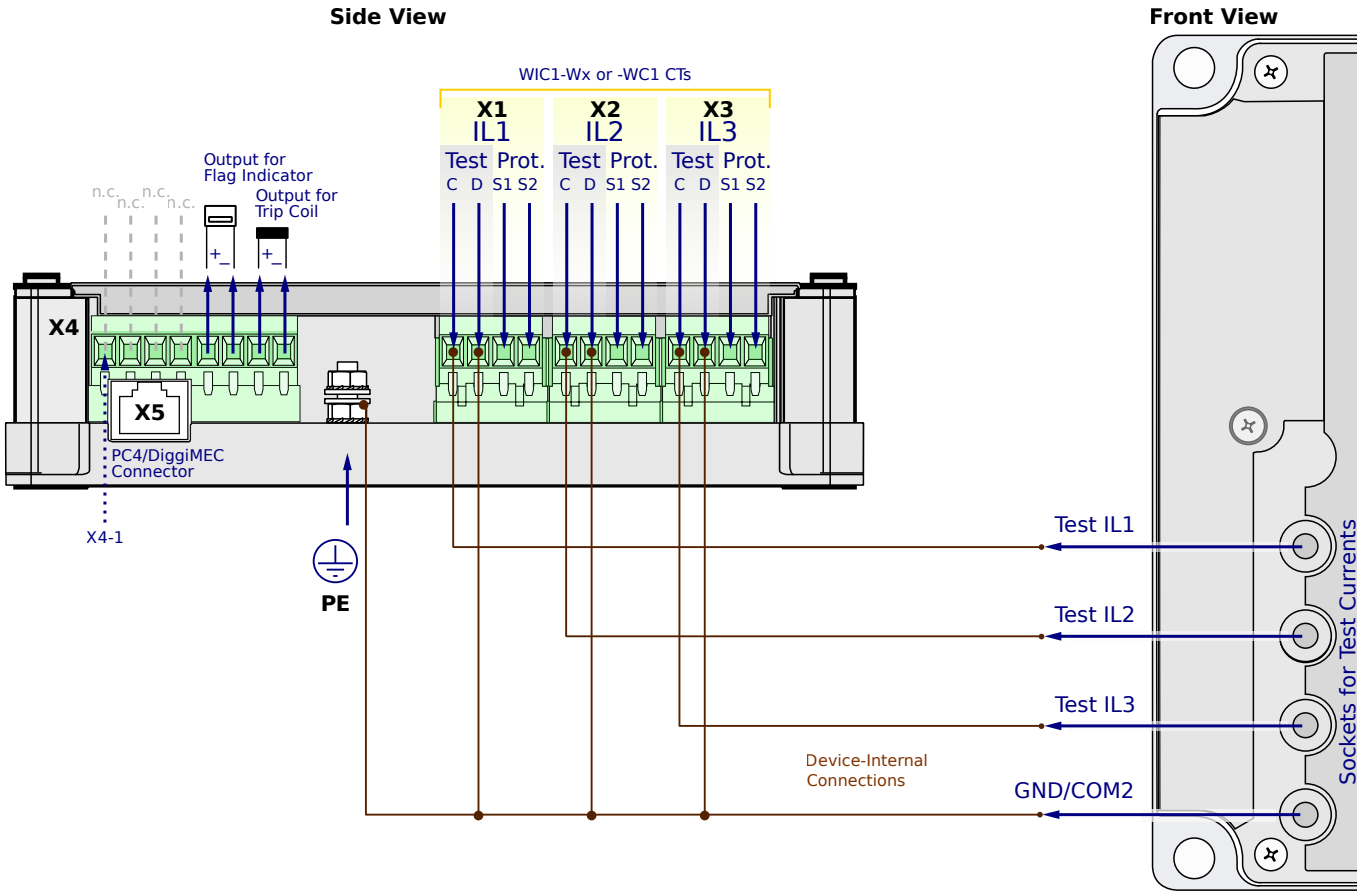


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2SAH

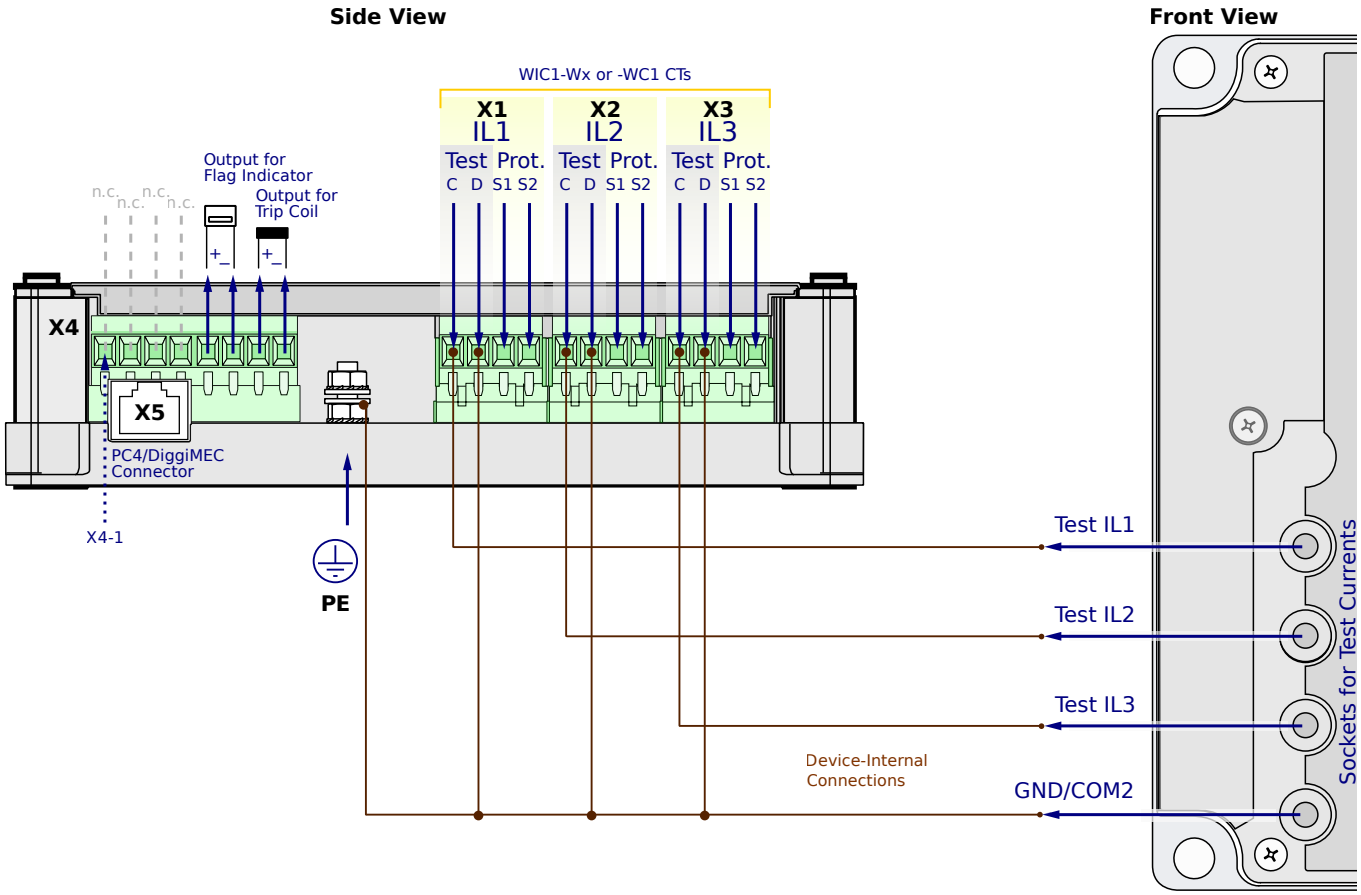


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2AA0

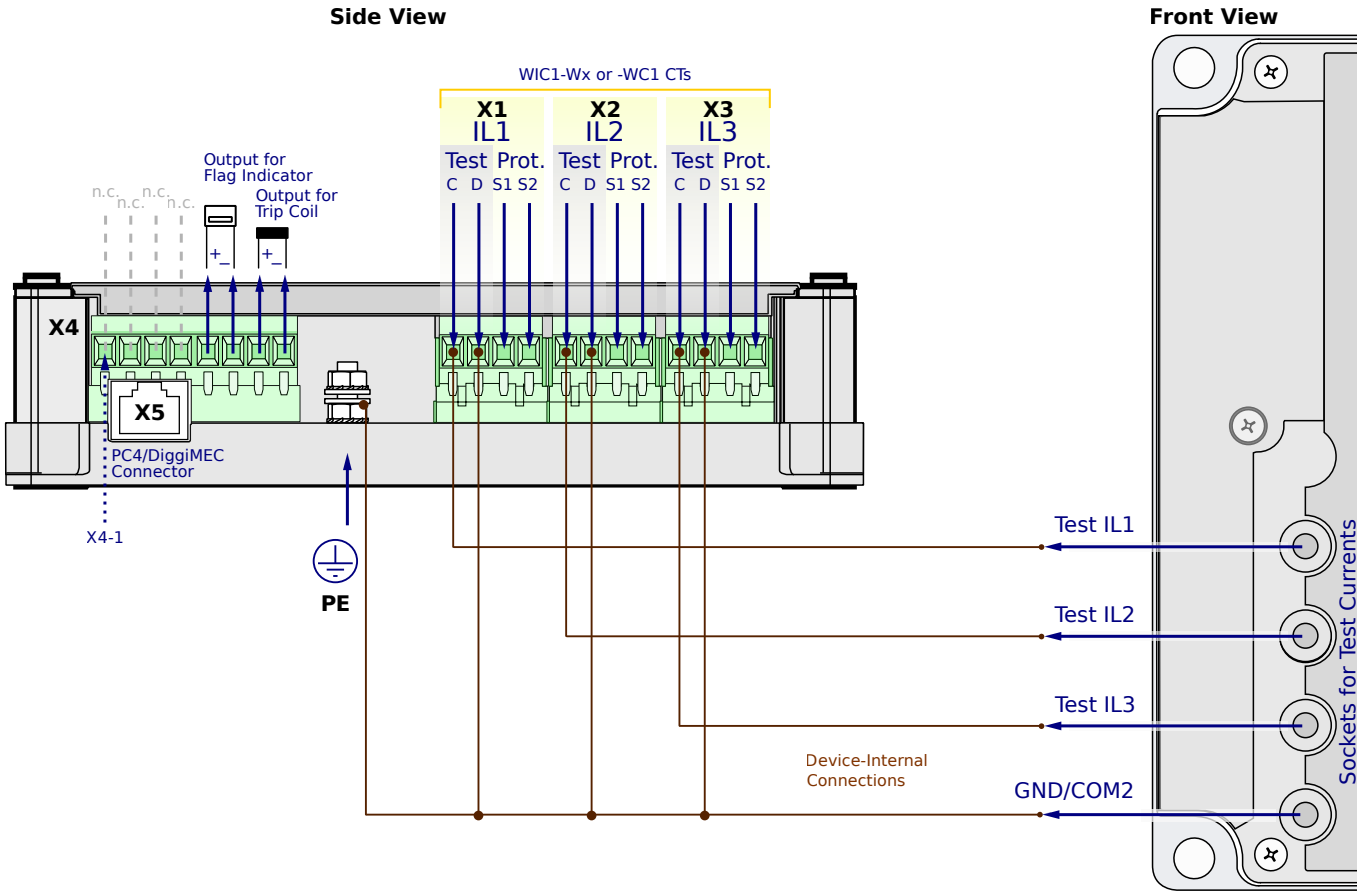


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2AAH

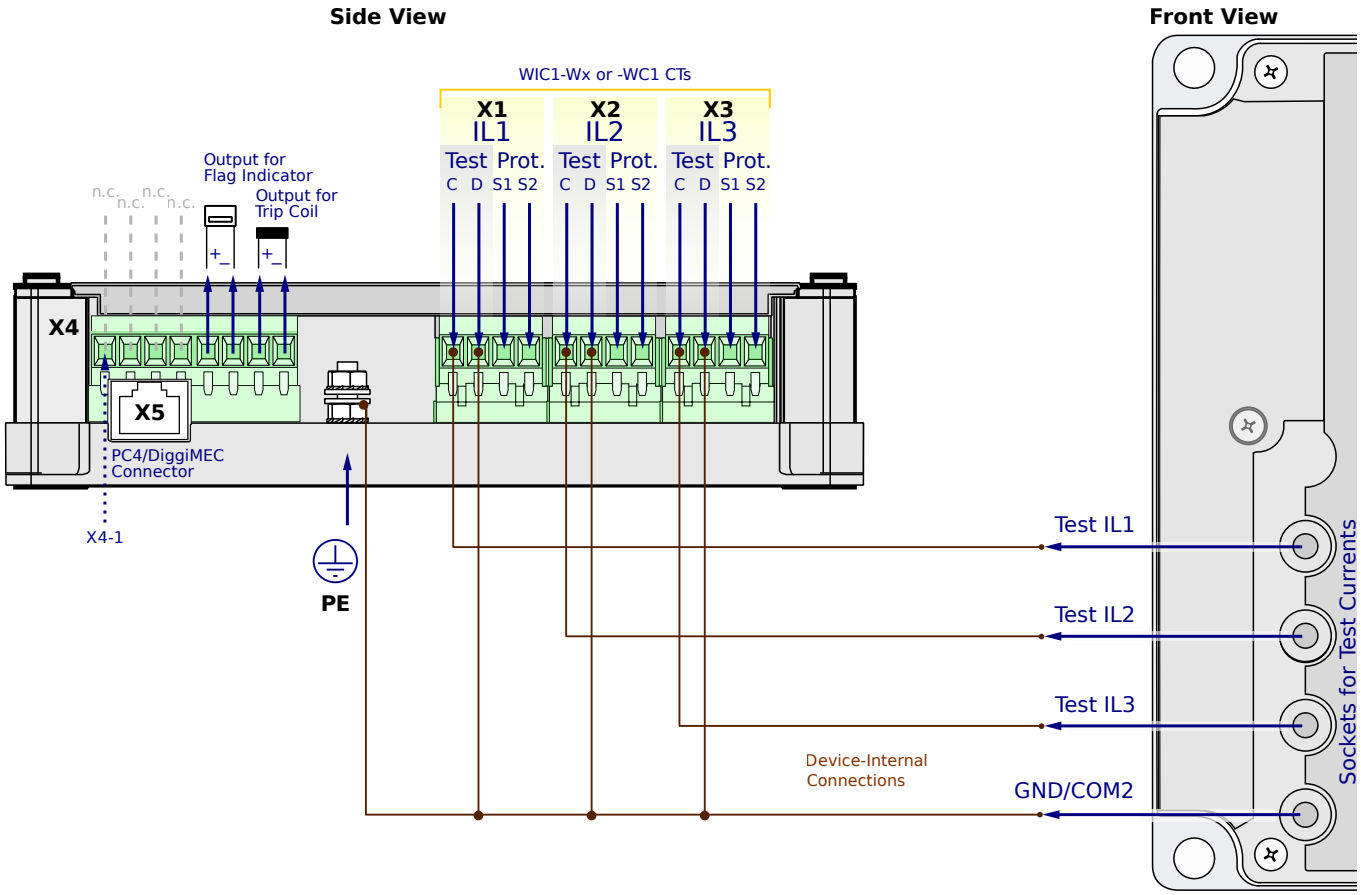


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2PA0

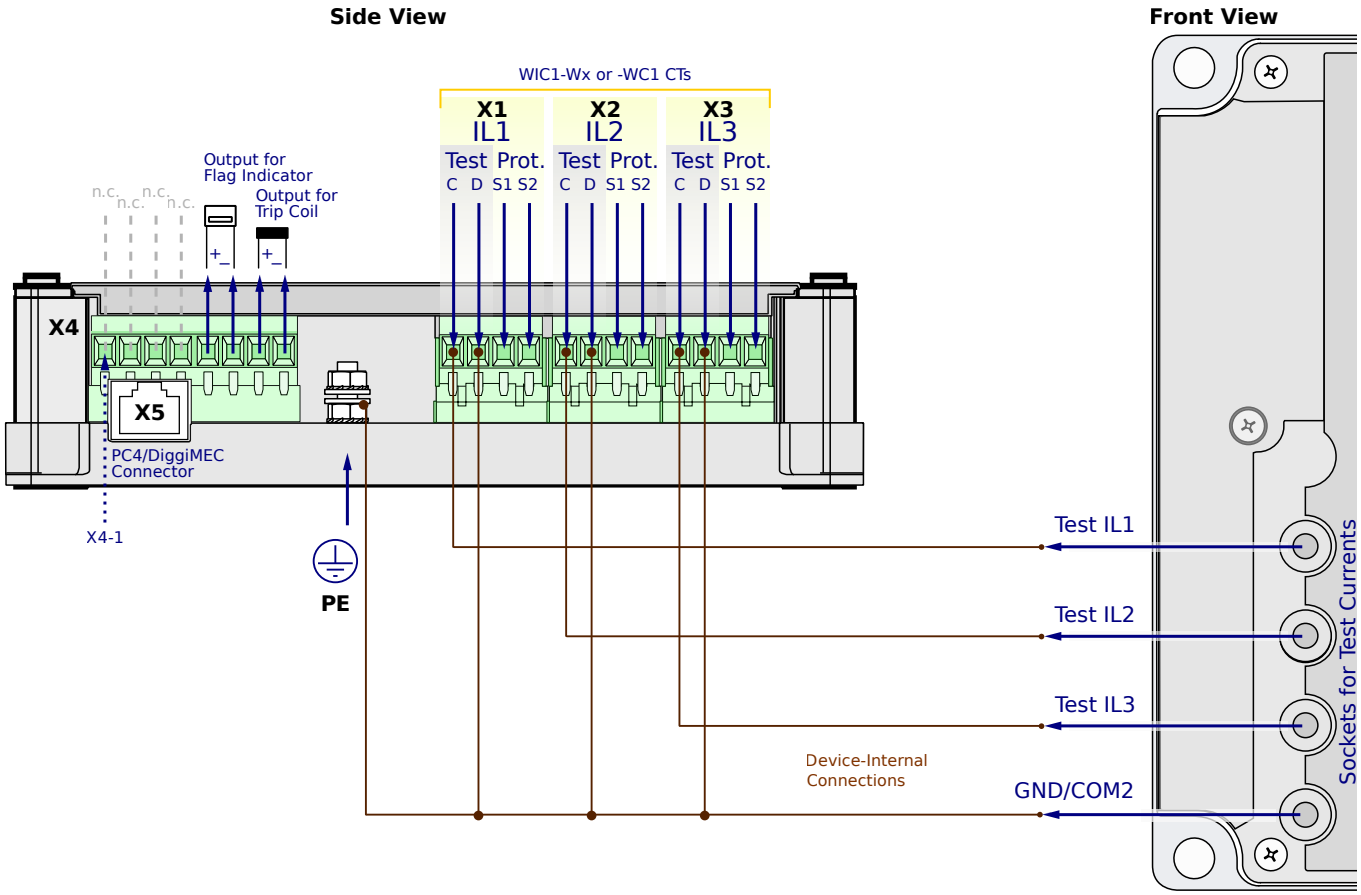


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CN2PAH

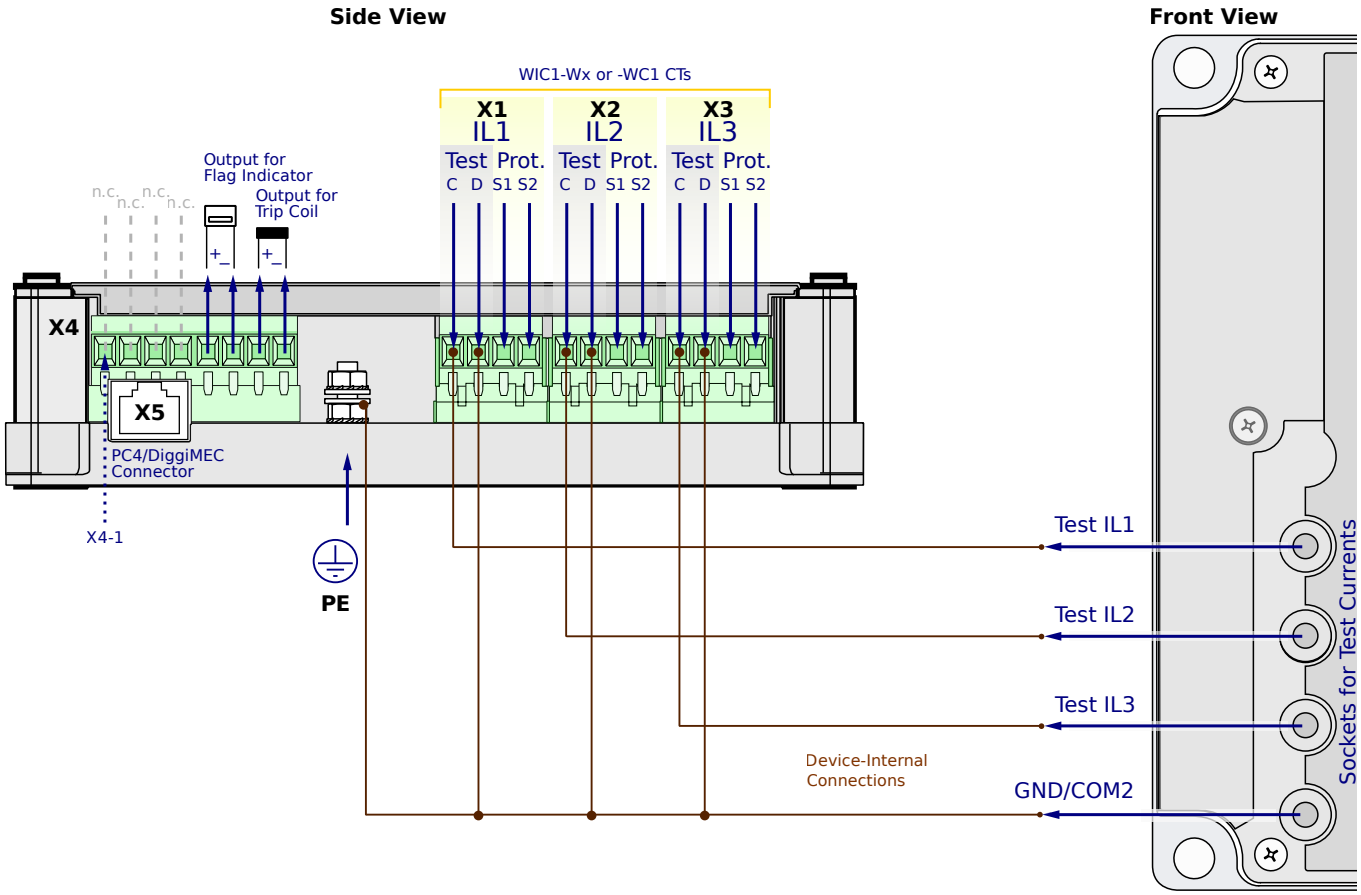


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1SA0

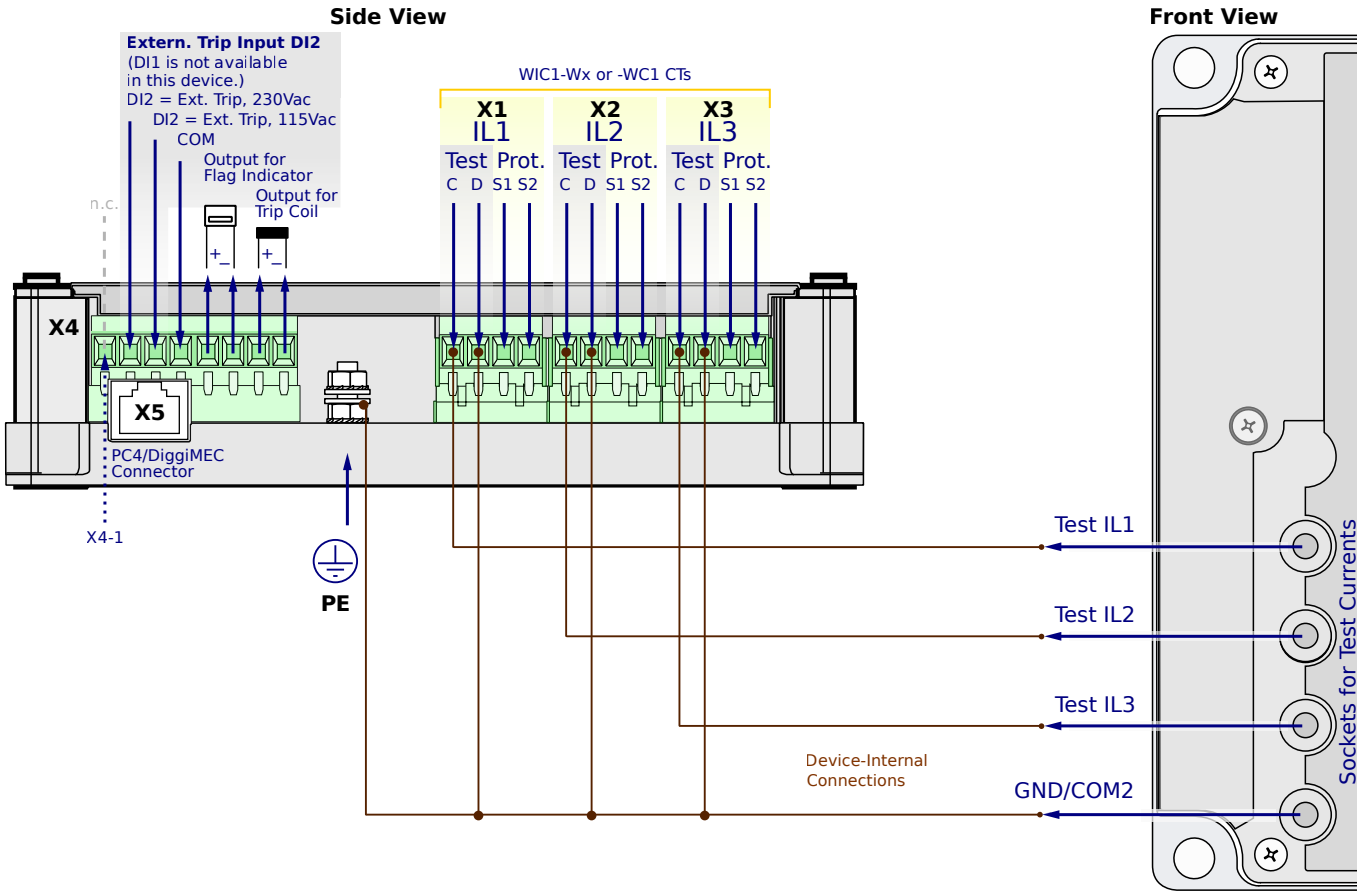


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1SAH

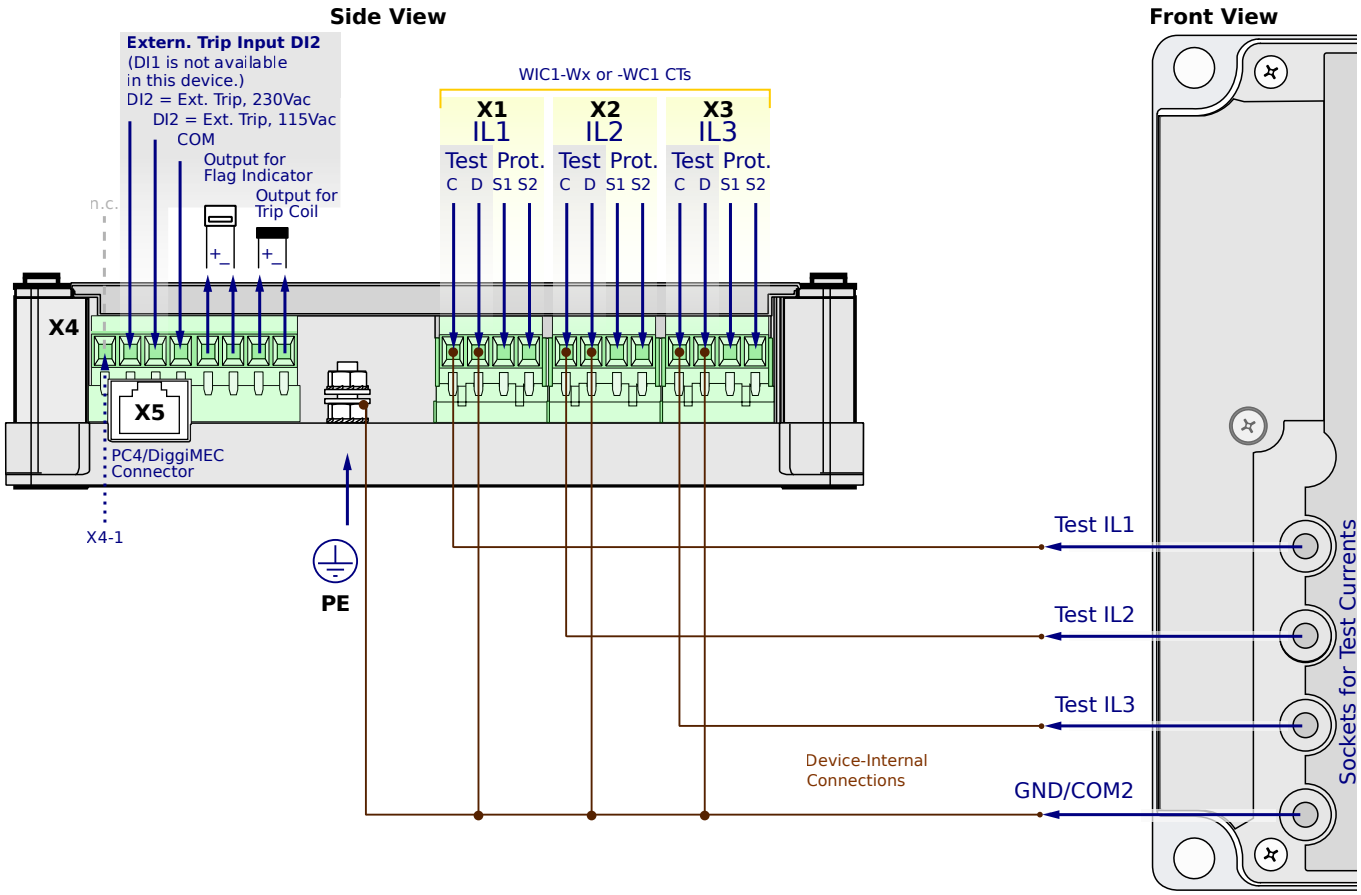


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1AA0

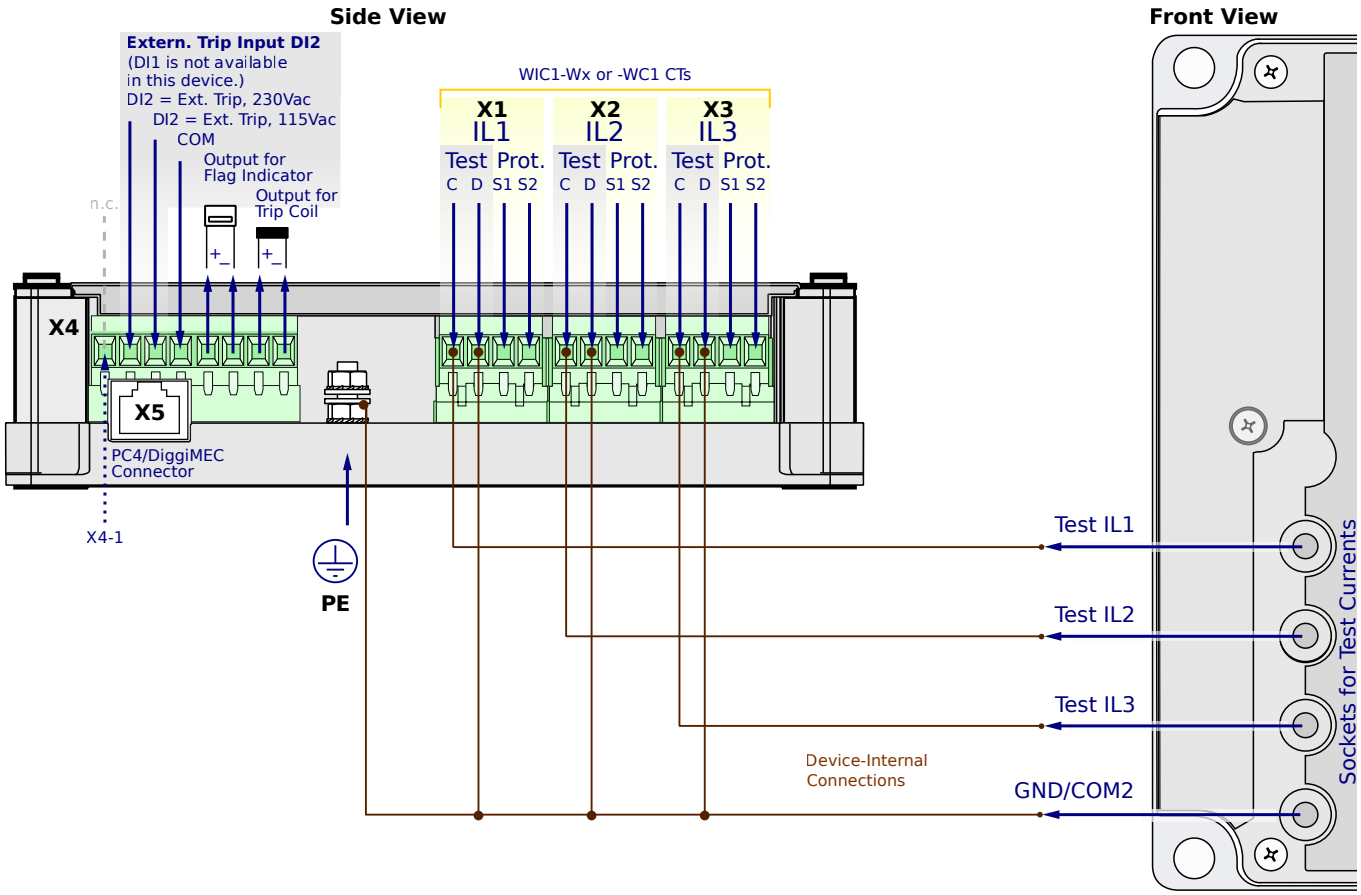


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1AAH

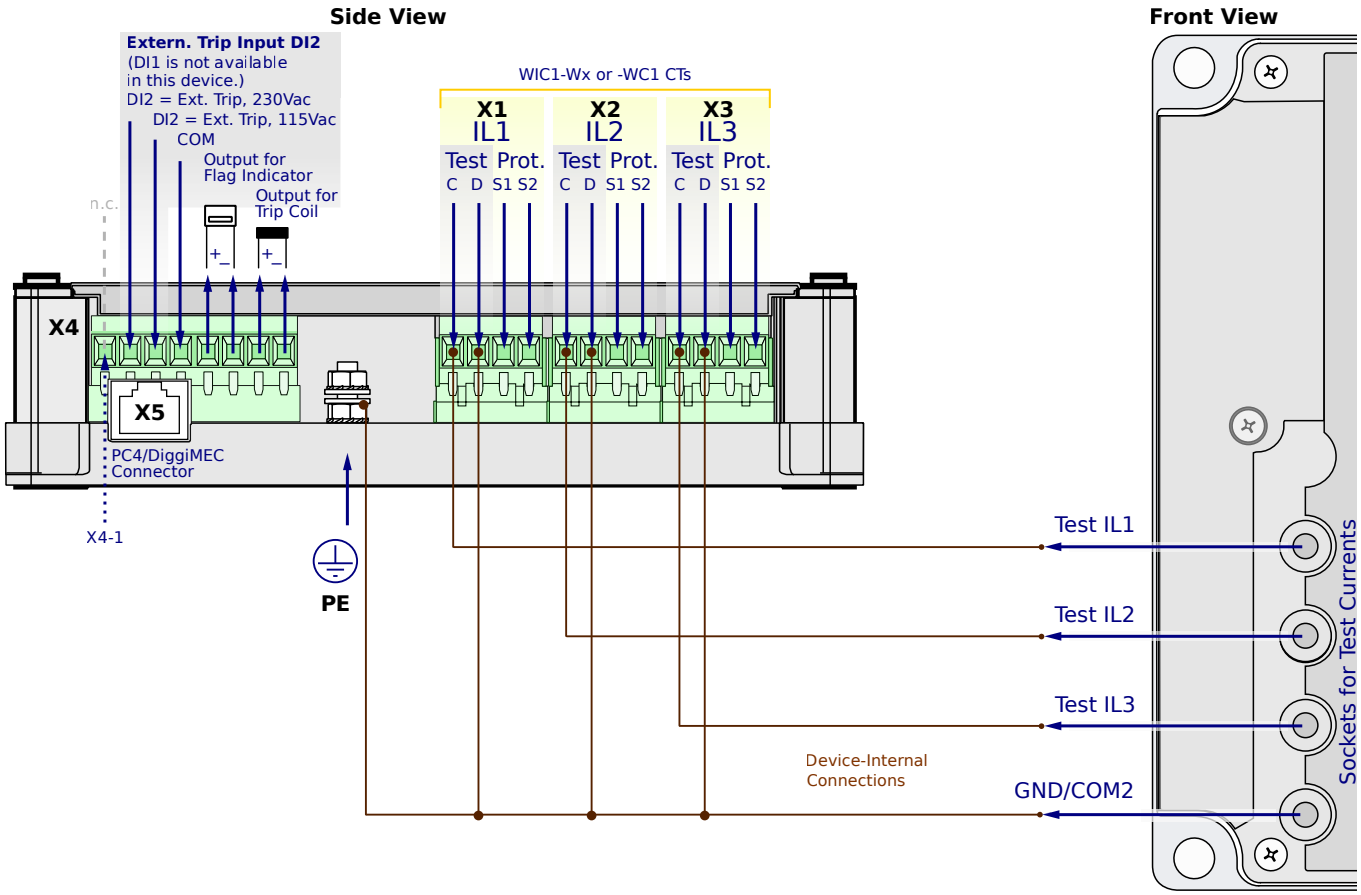


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1PA0

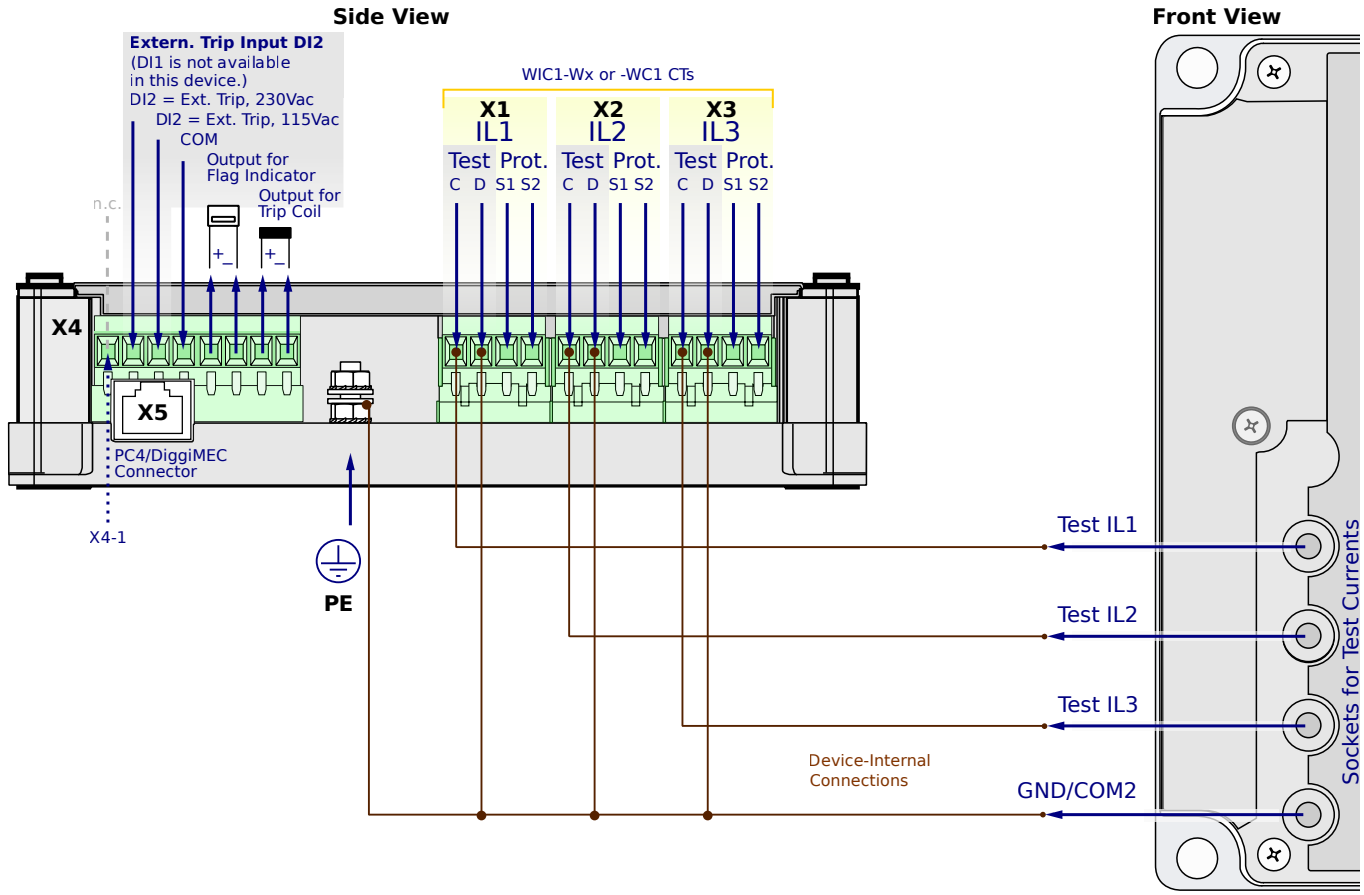


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF1PAH

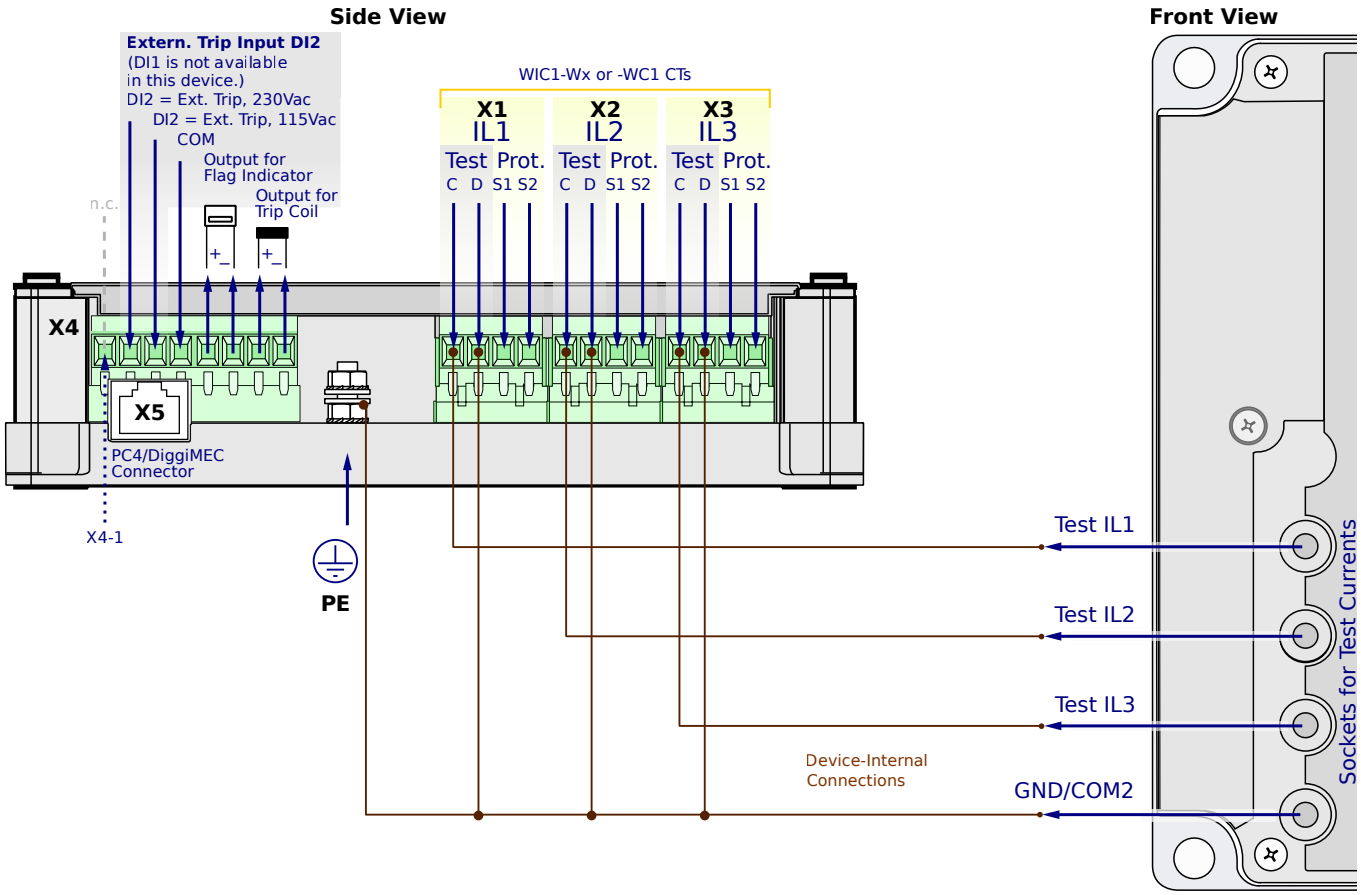


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2SA0

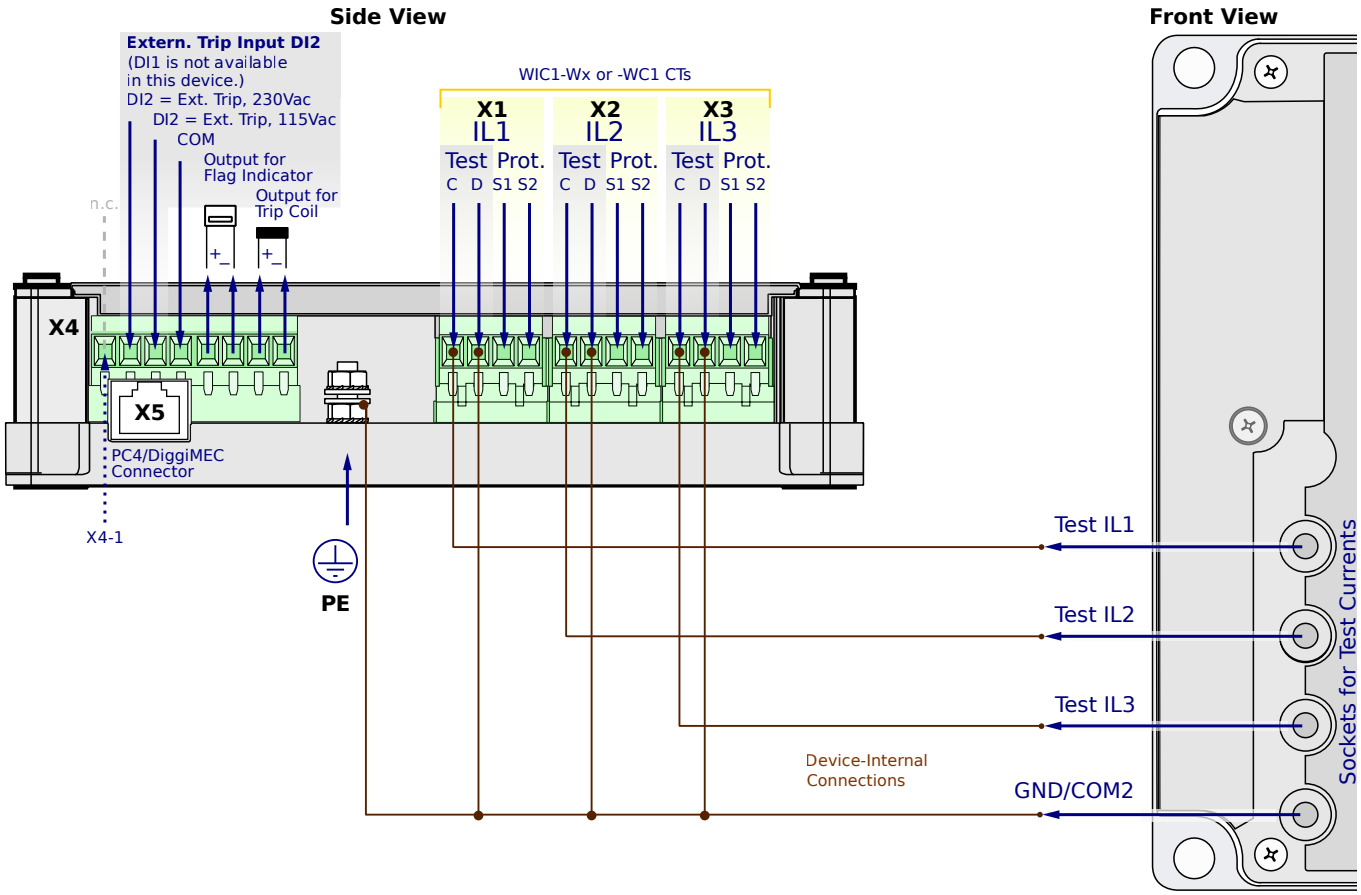


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2SAH

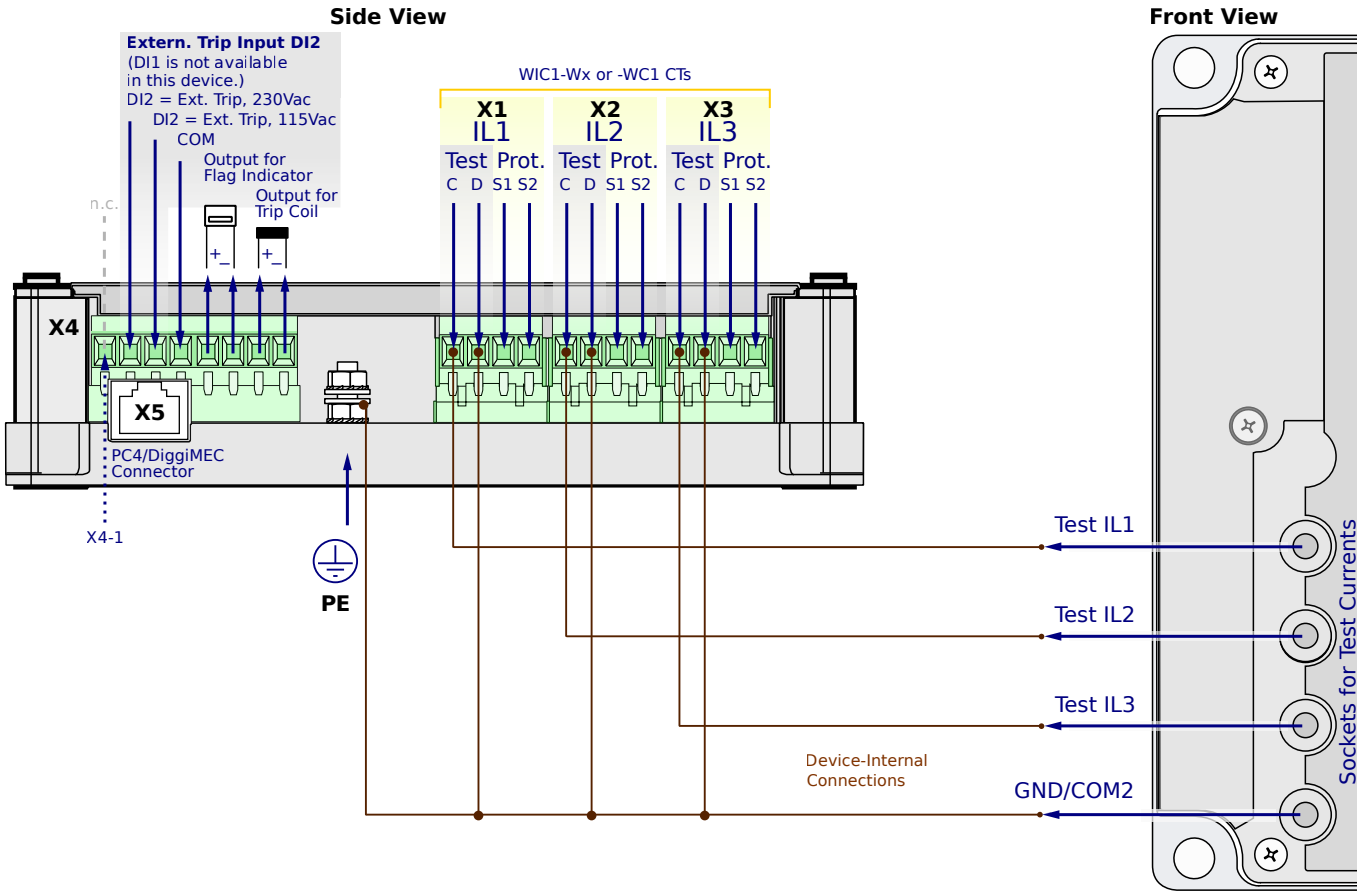


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2AA0

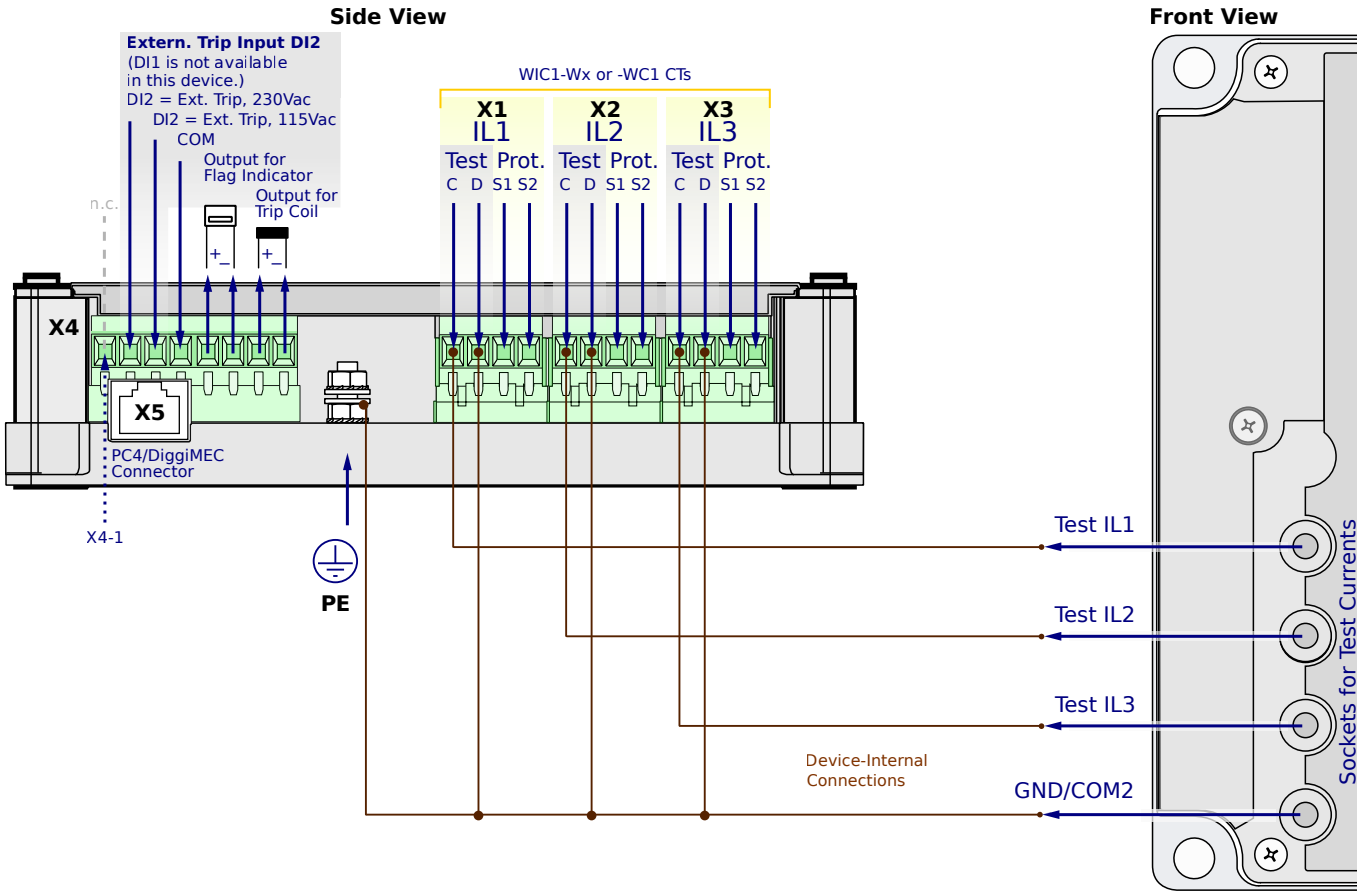


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2AAH

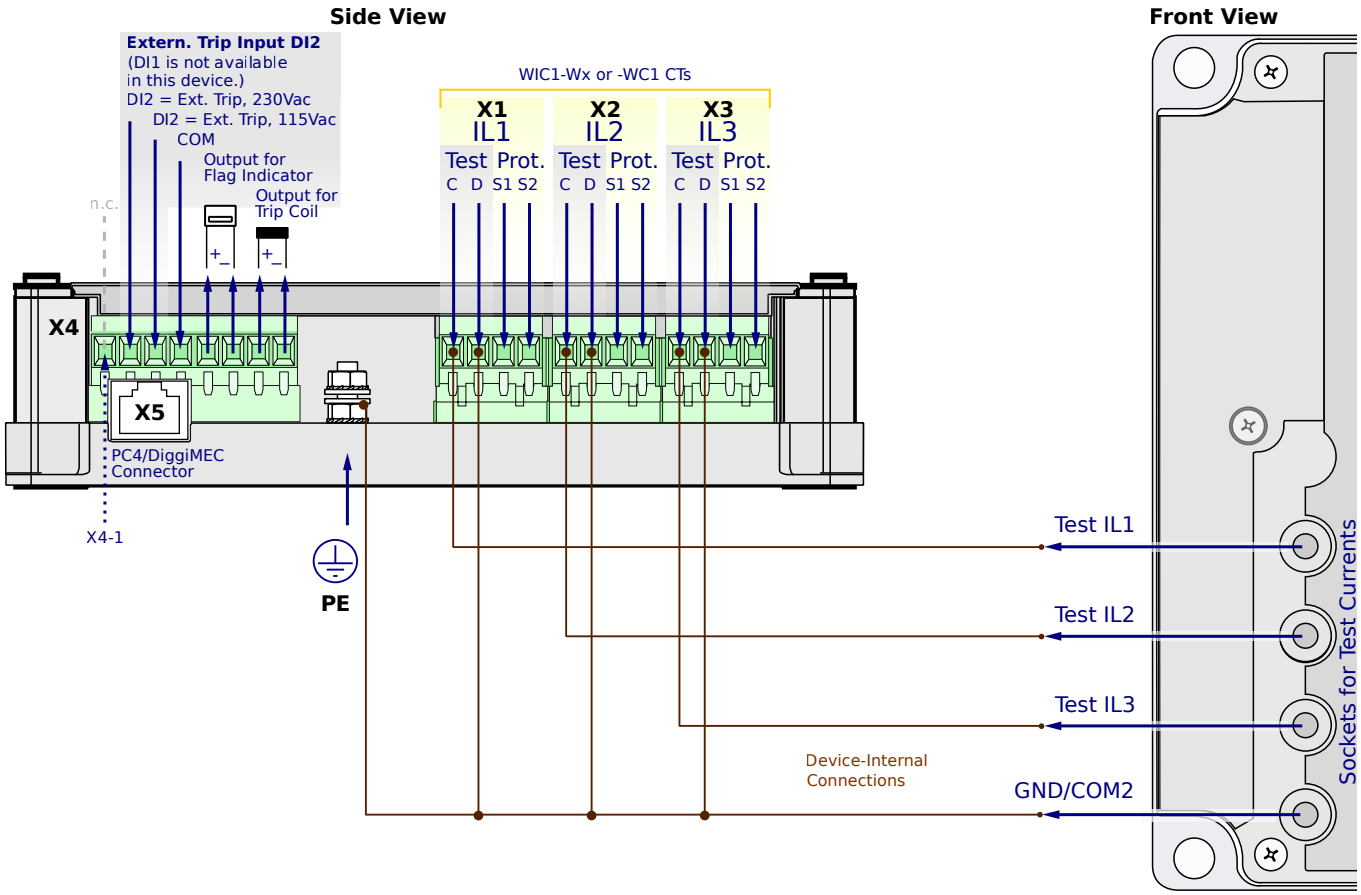


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2PA0

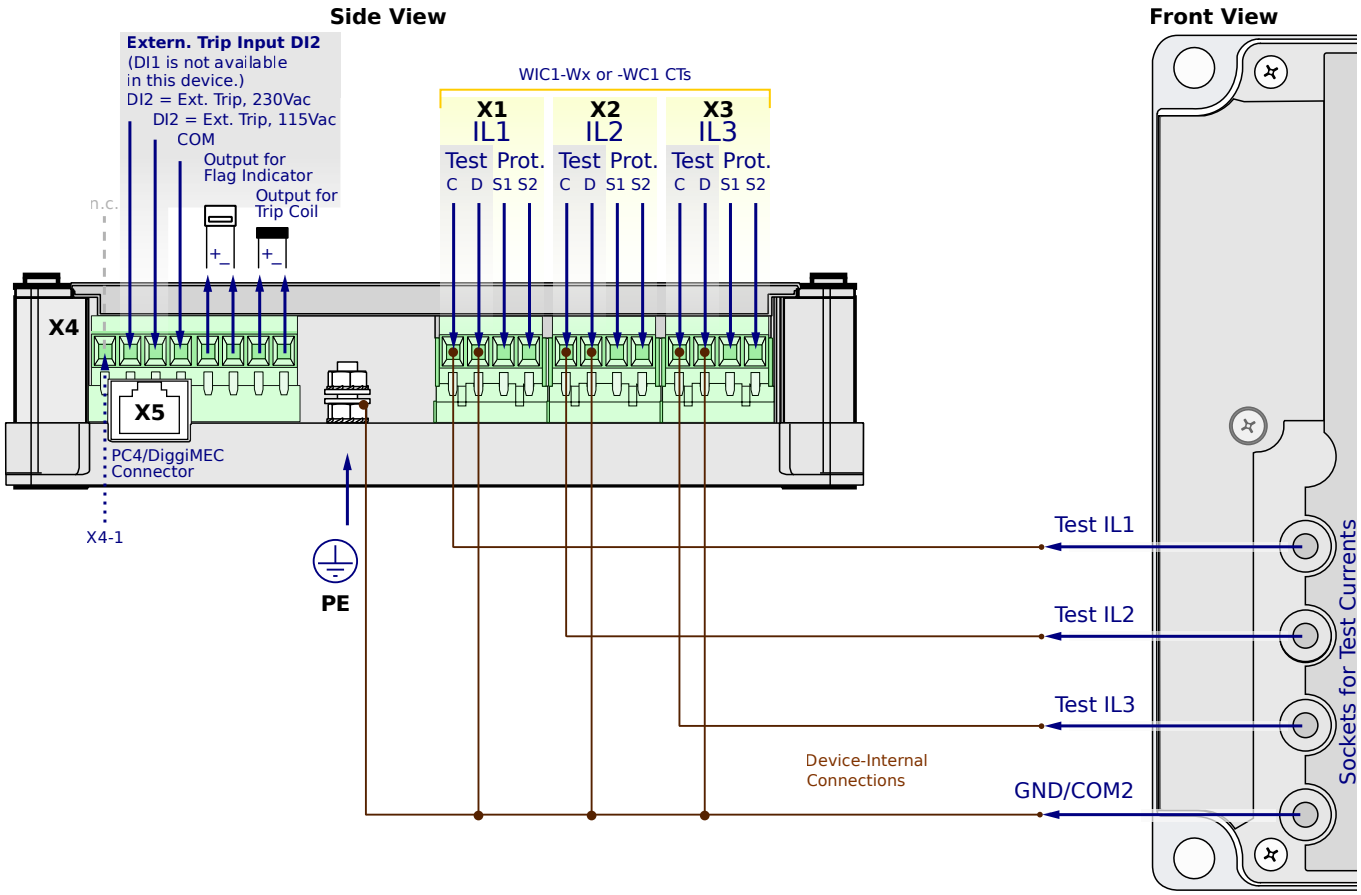


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CF2PAH

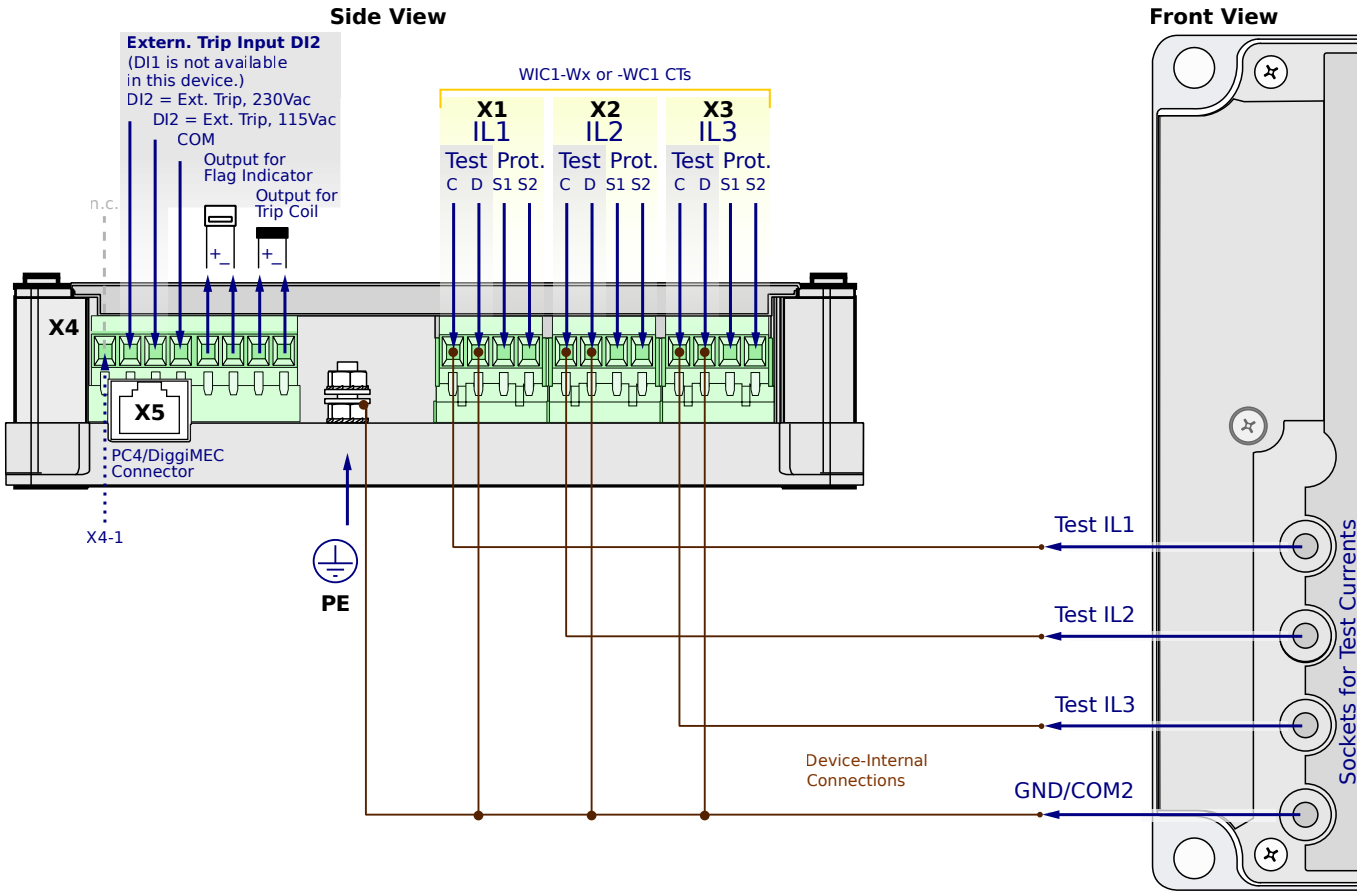


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1SA0

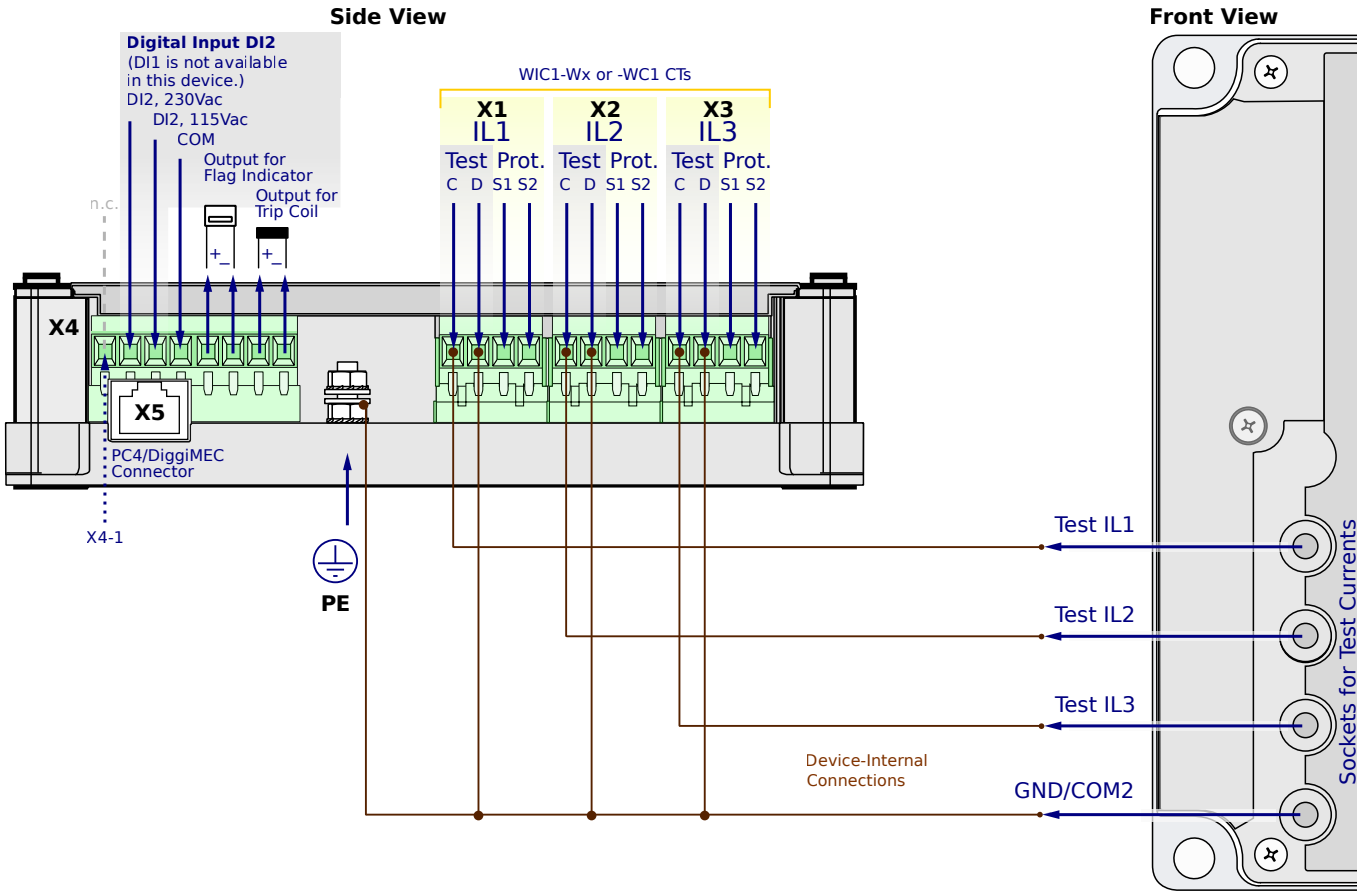


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1SAH

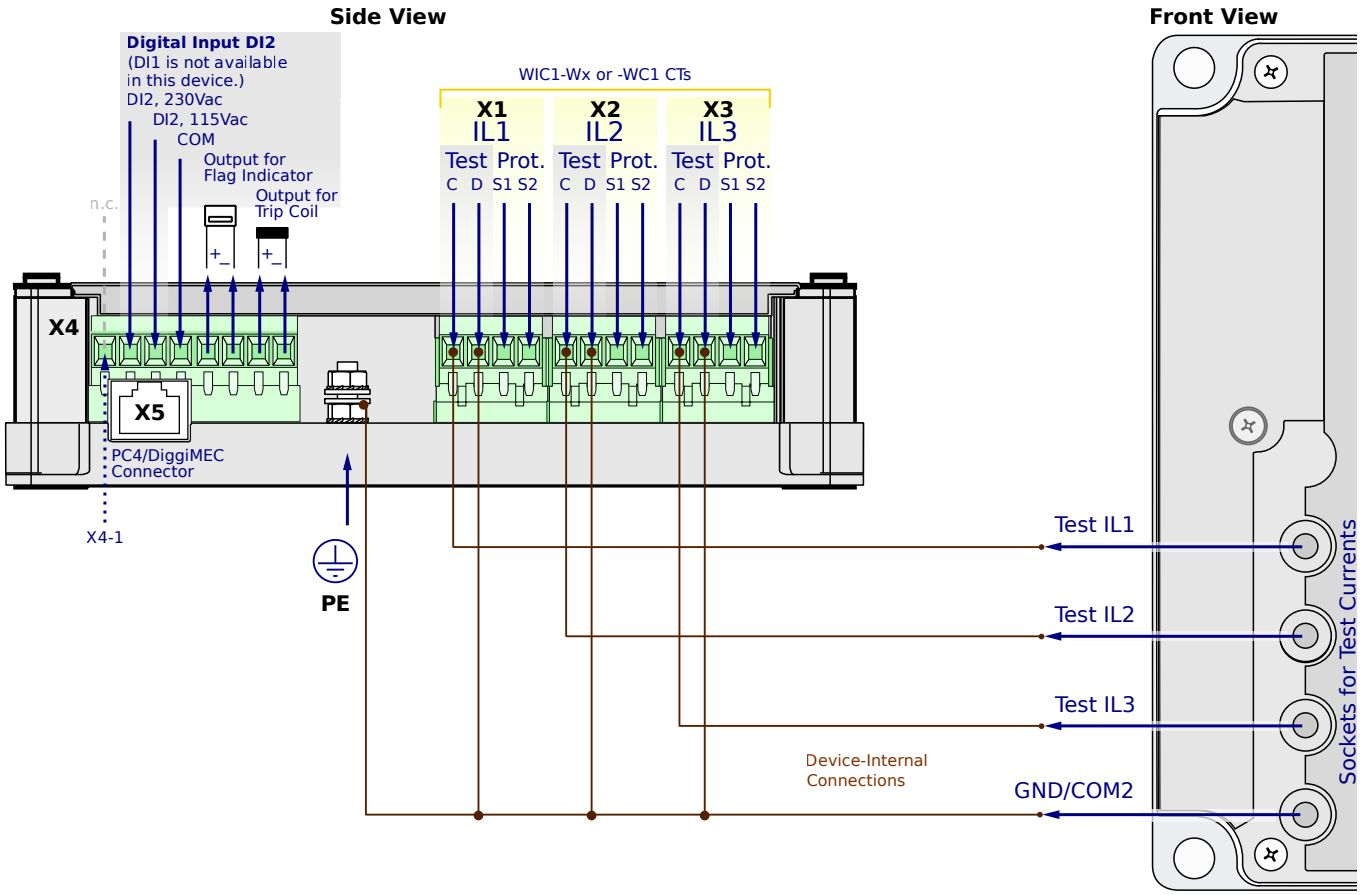


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1AA0

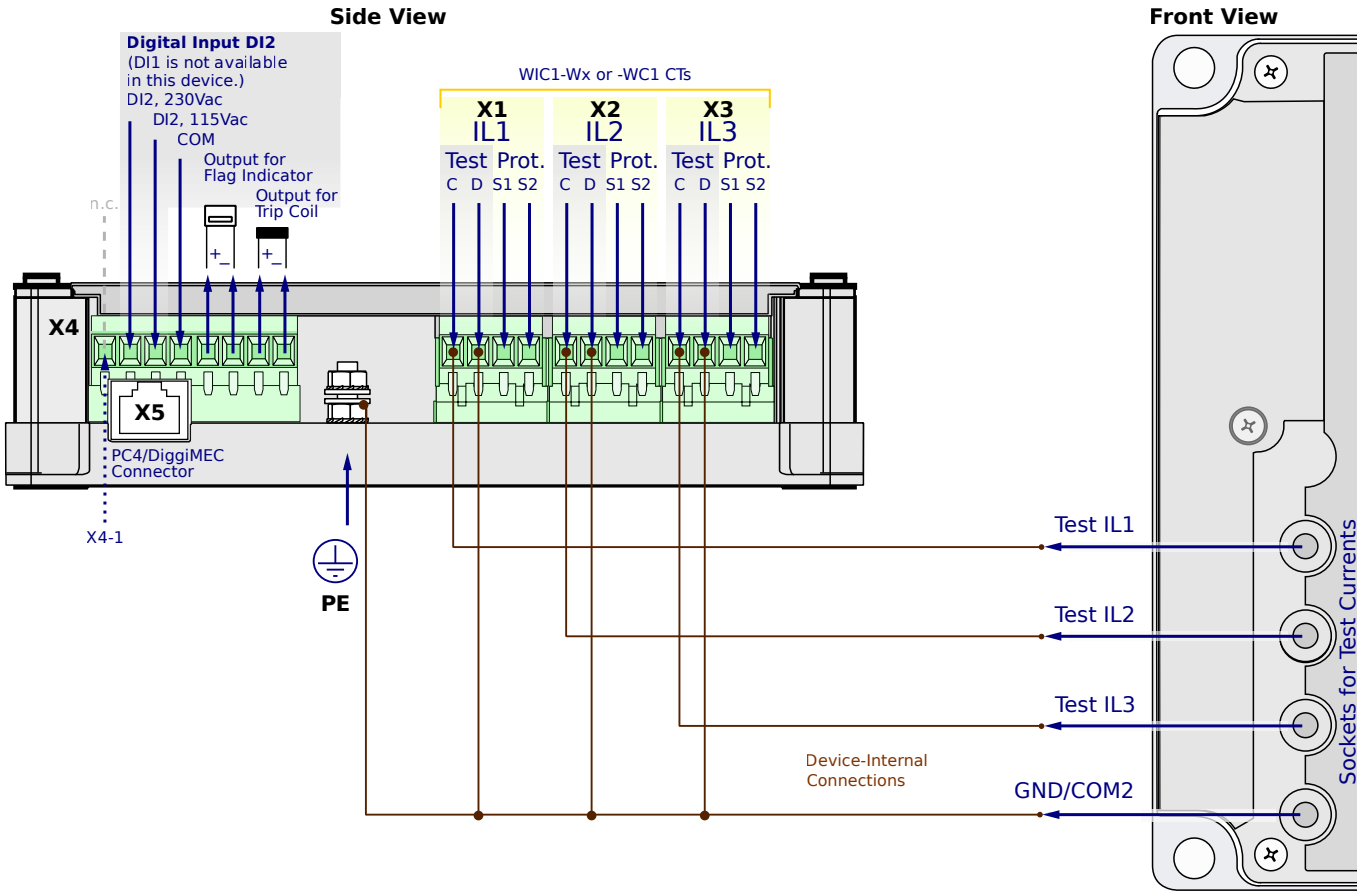


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1AAH

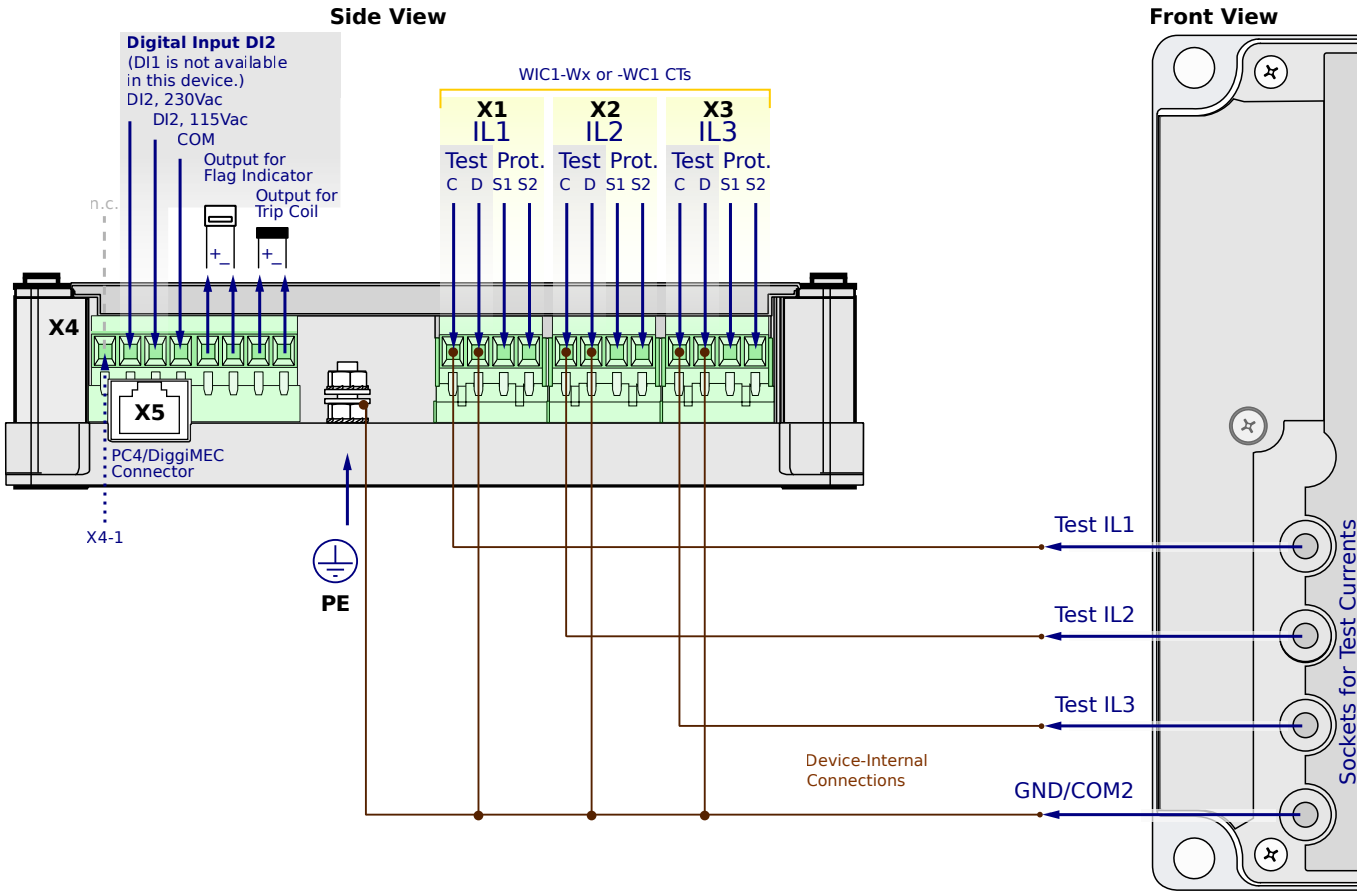


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1PA0

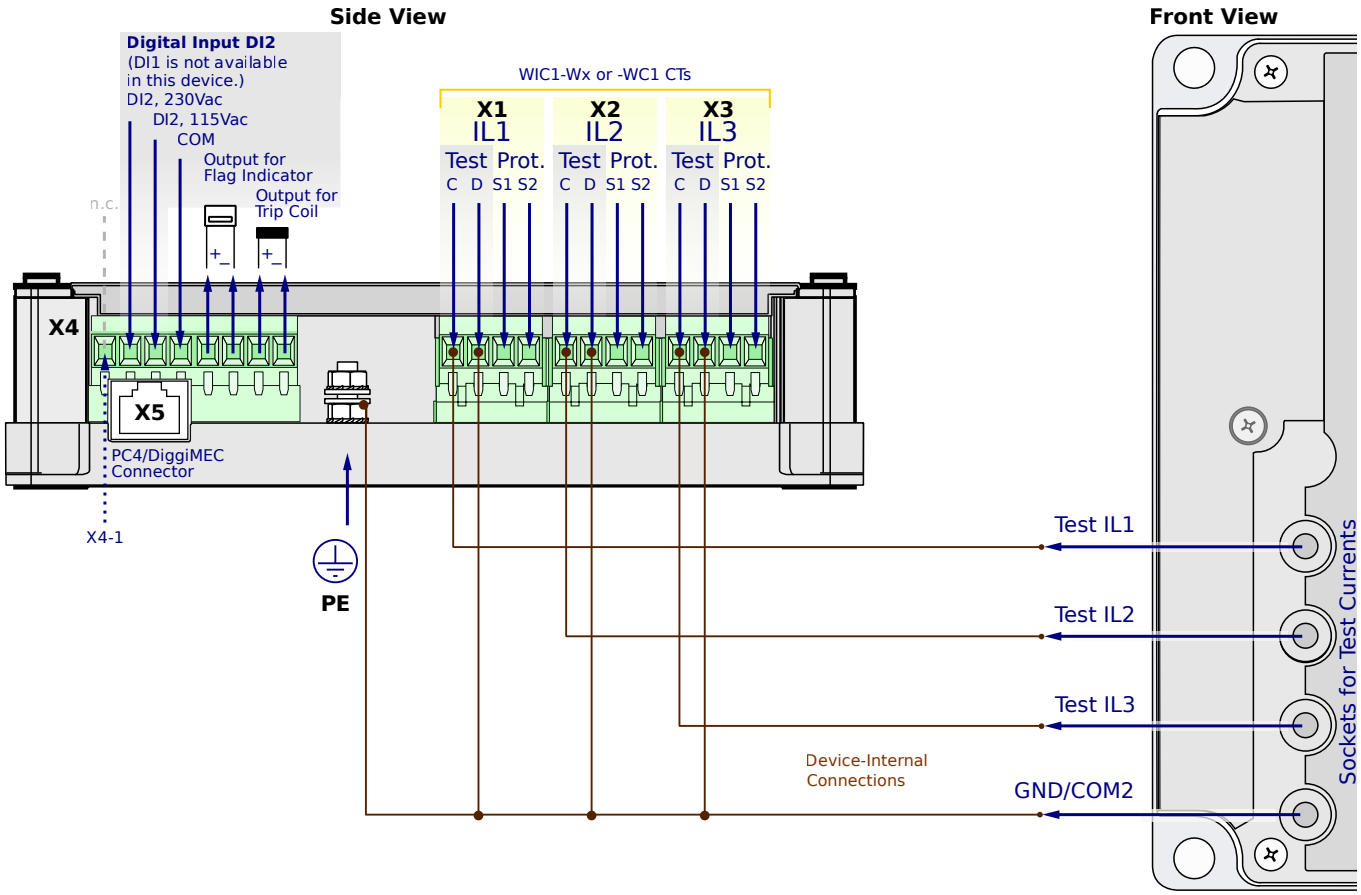


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC1PAH

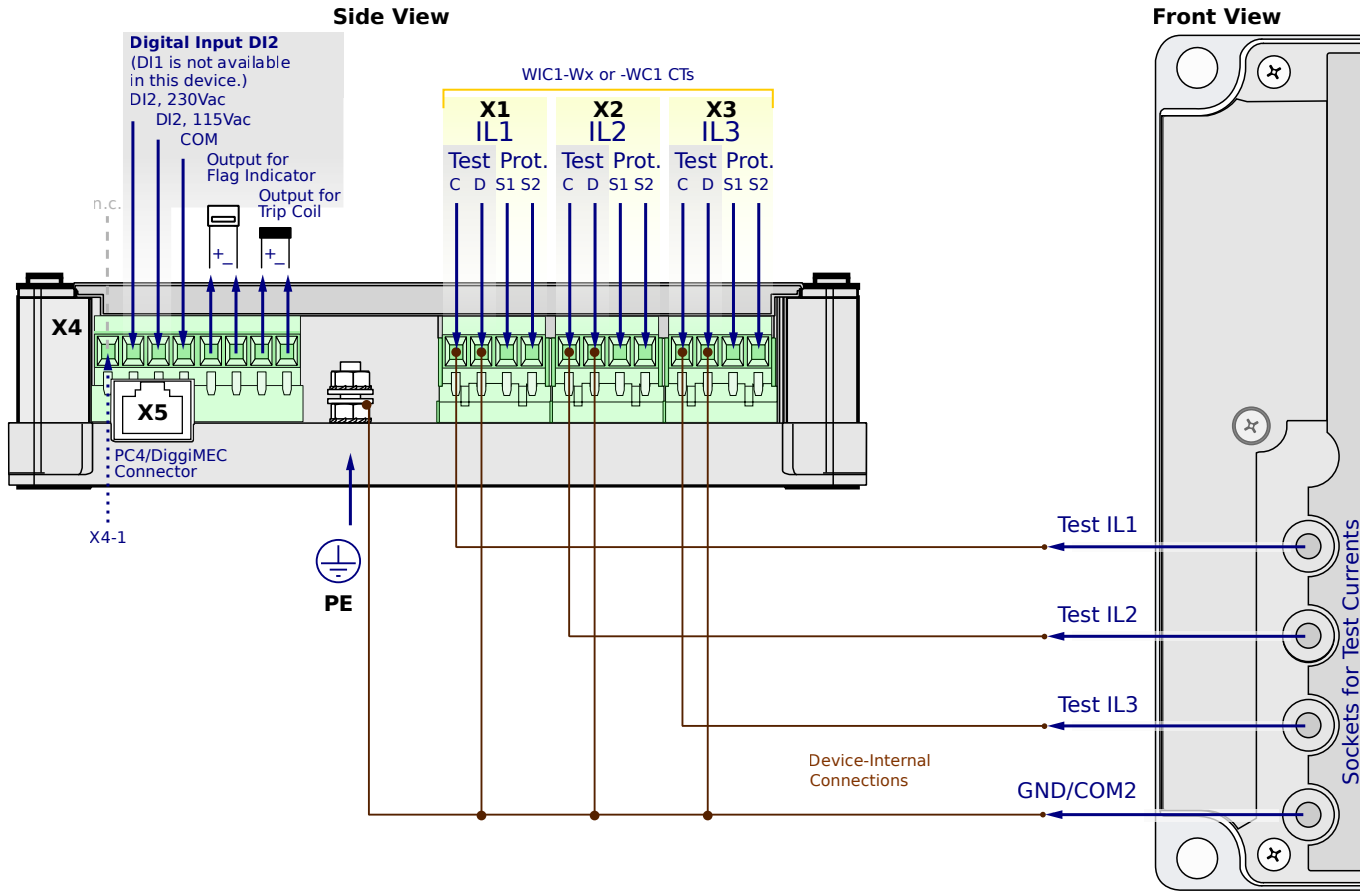


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2SA0

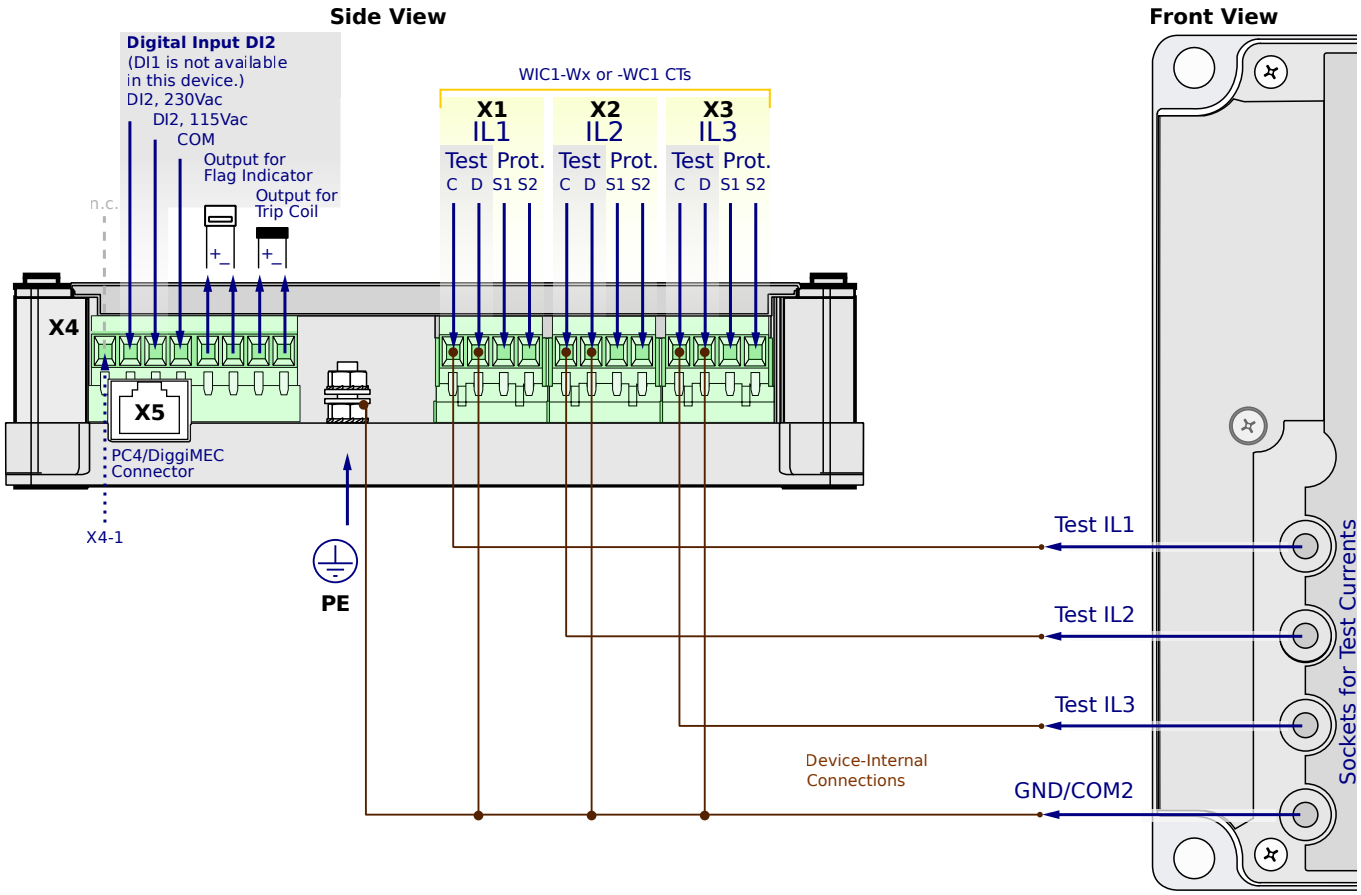


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2SAH

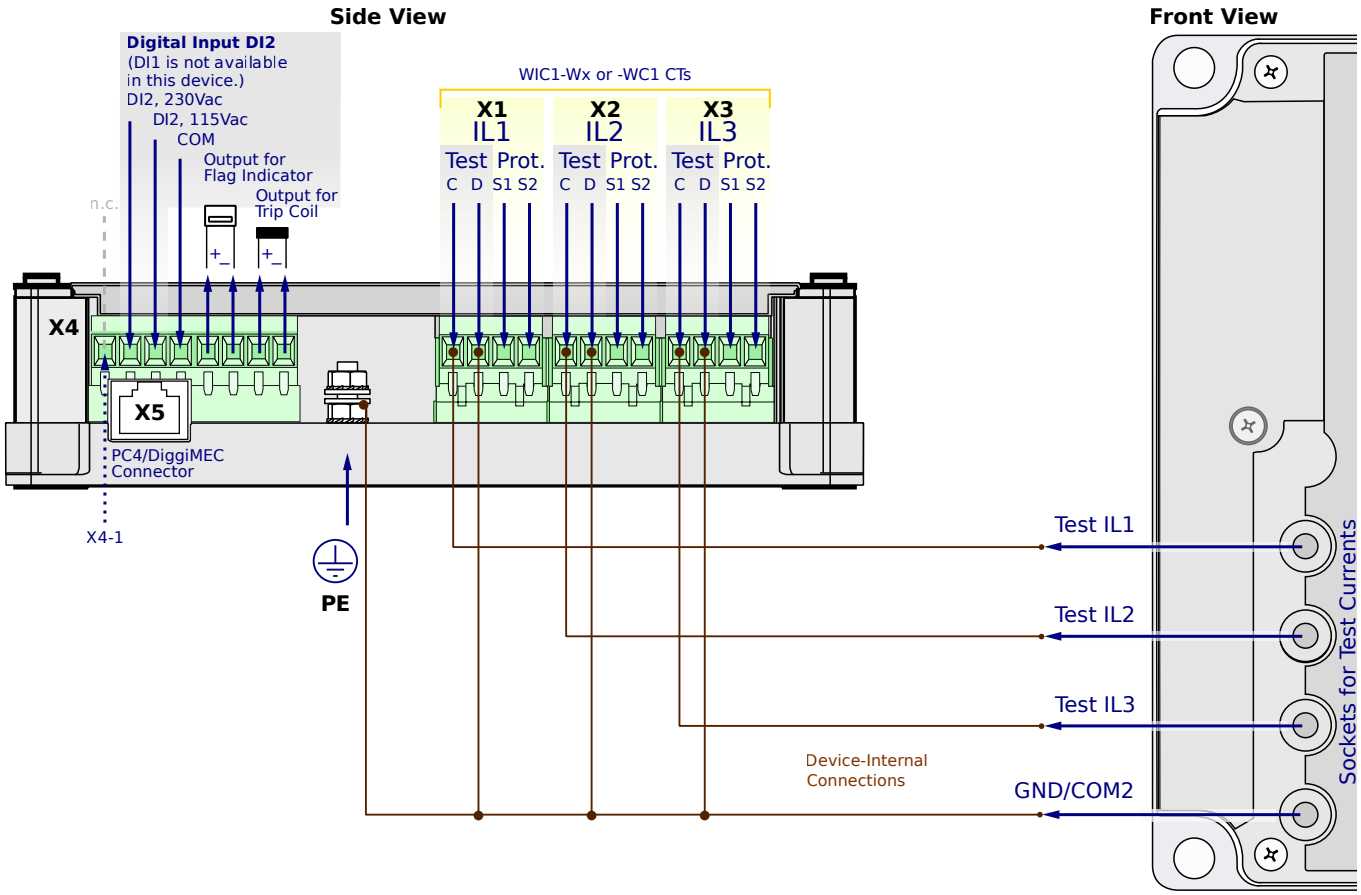


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2AA0

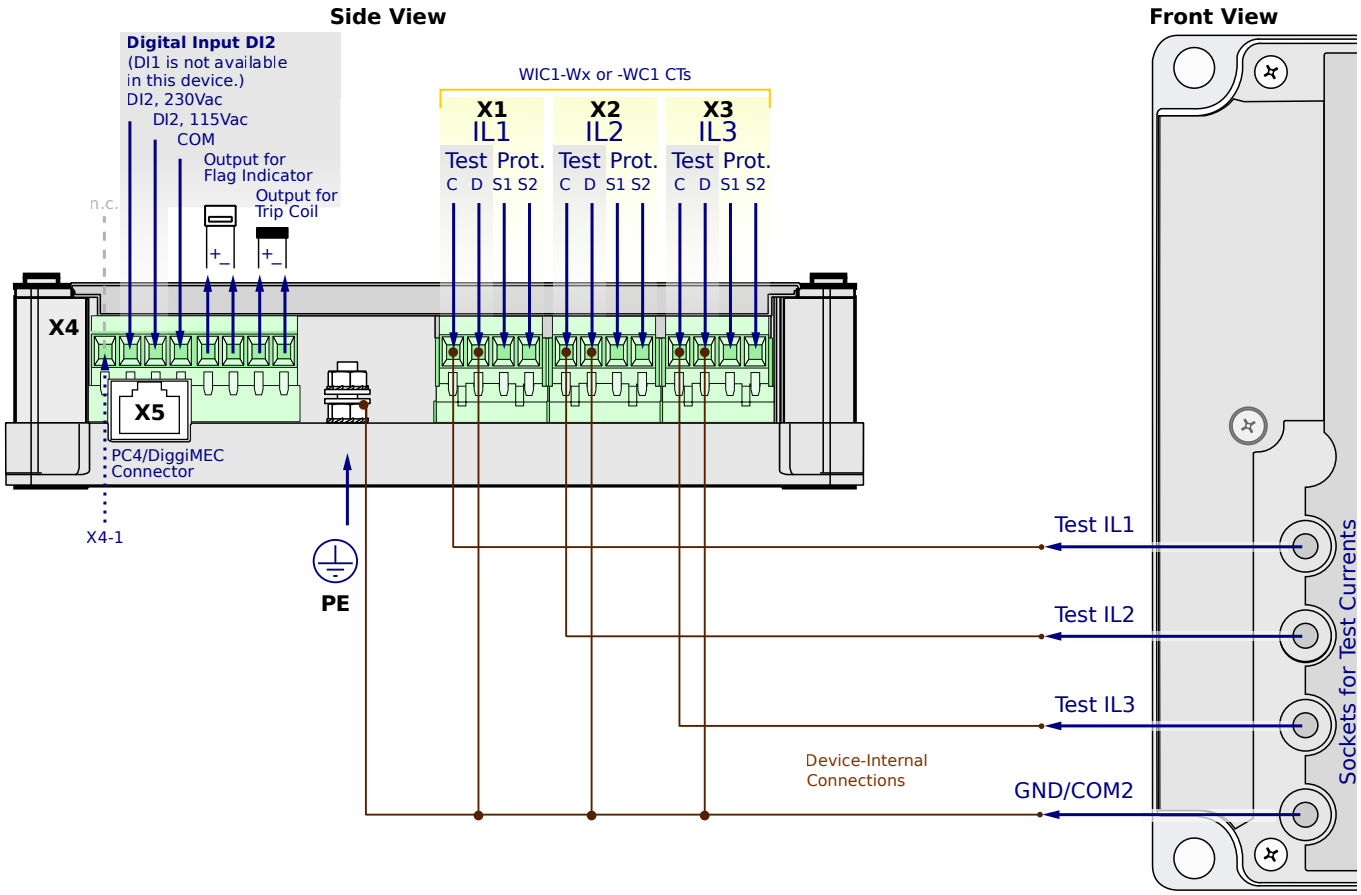


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2AAH

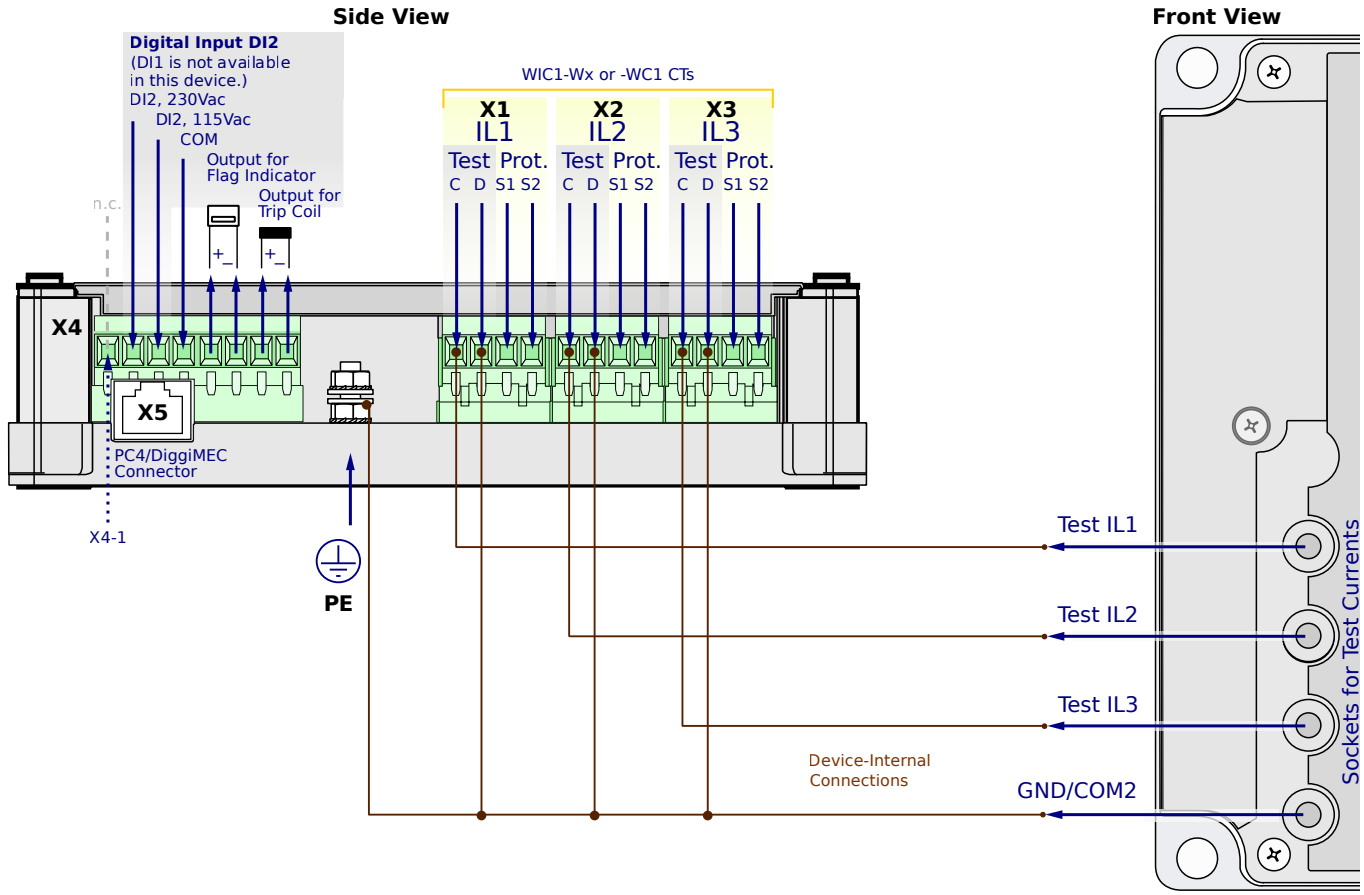


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2PA0

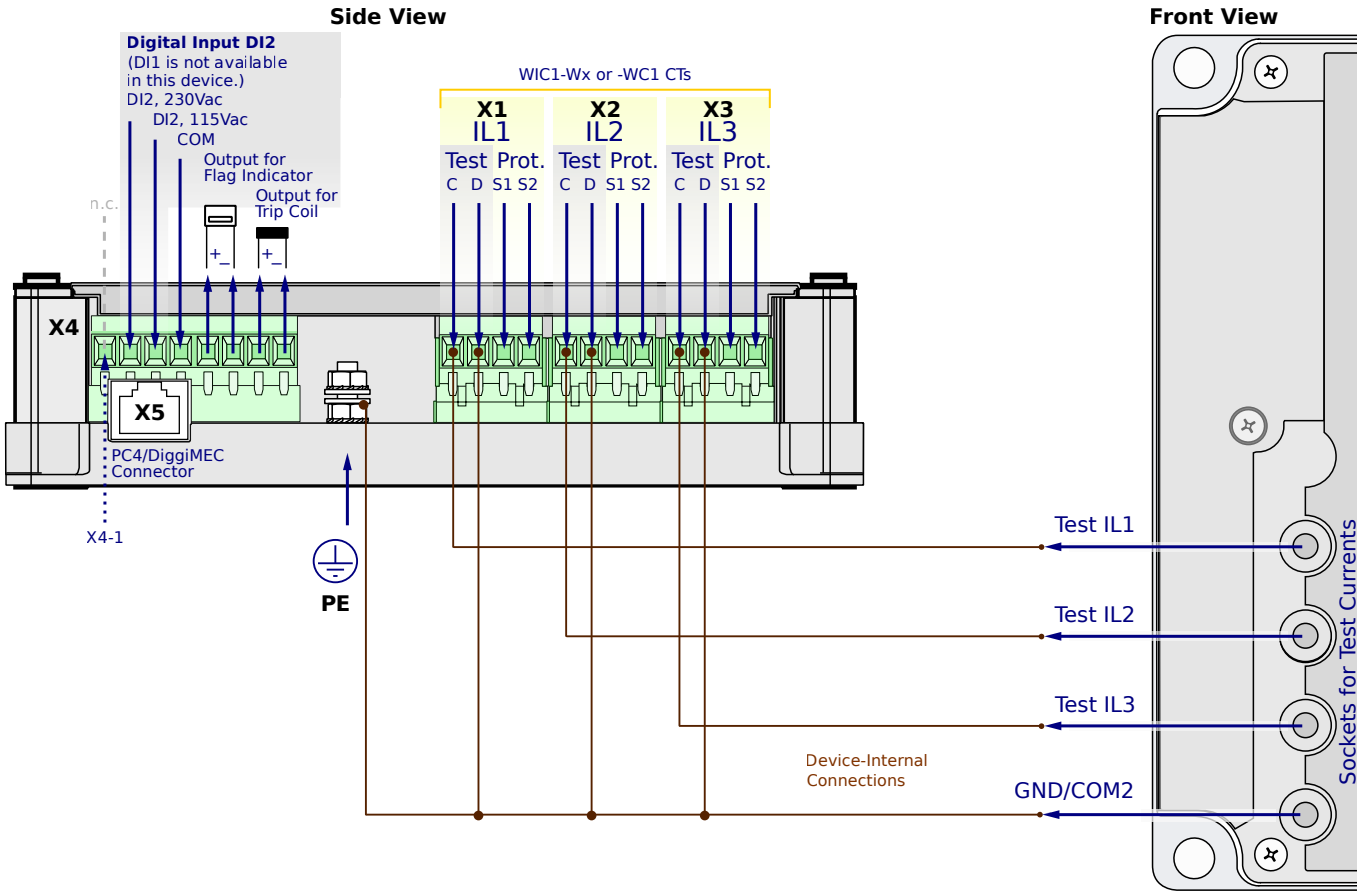


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN5CC2PAH

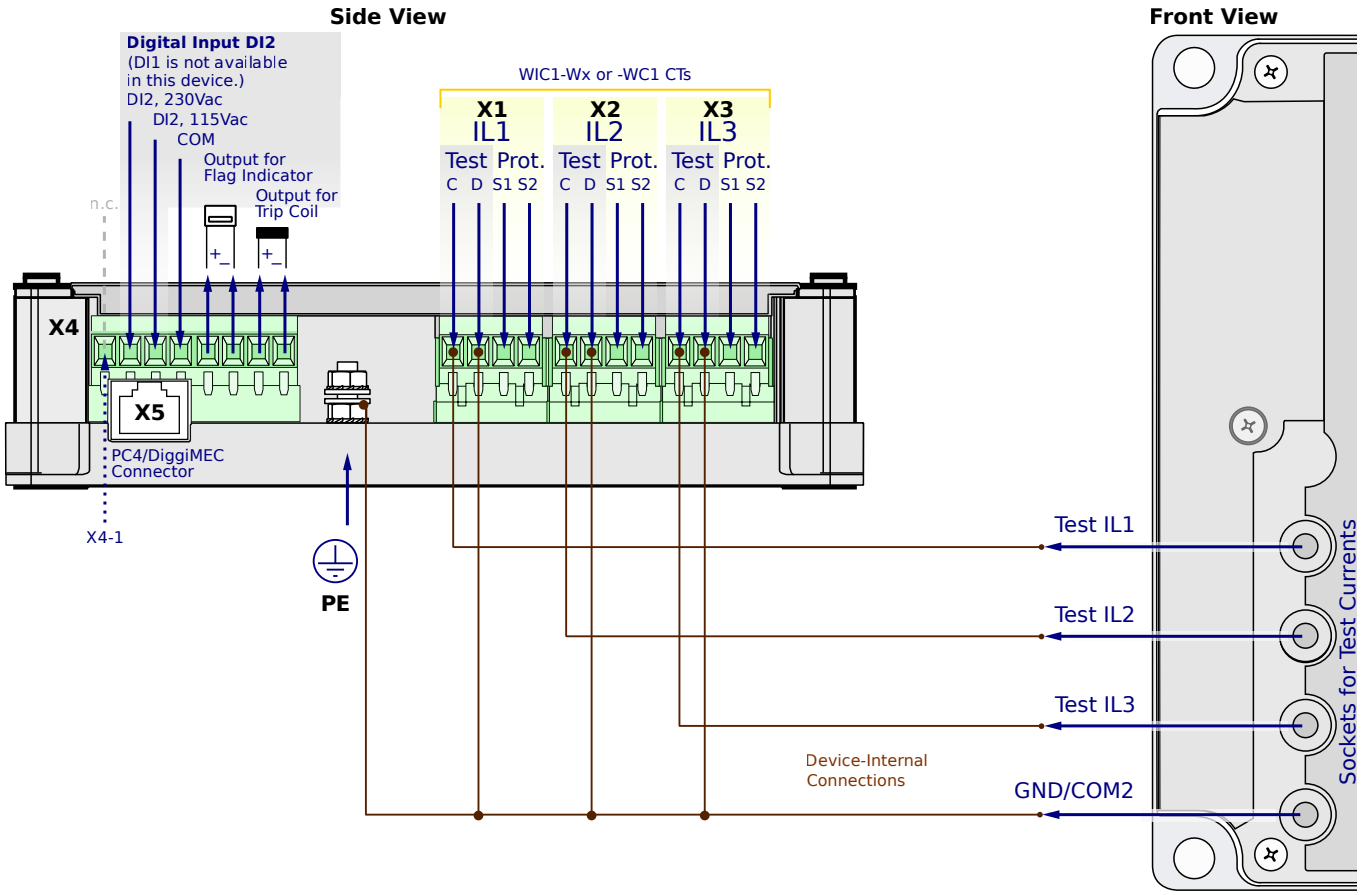


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0SA0

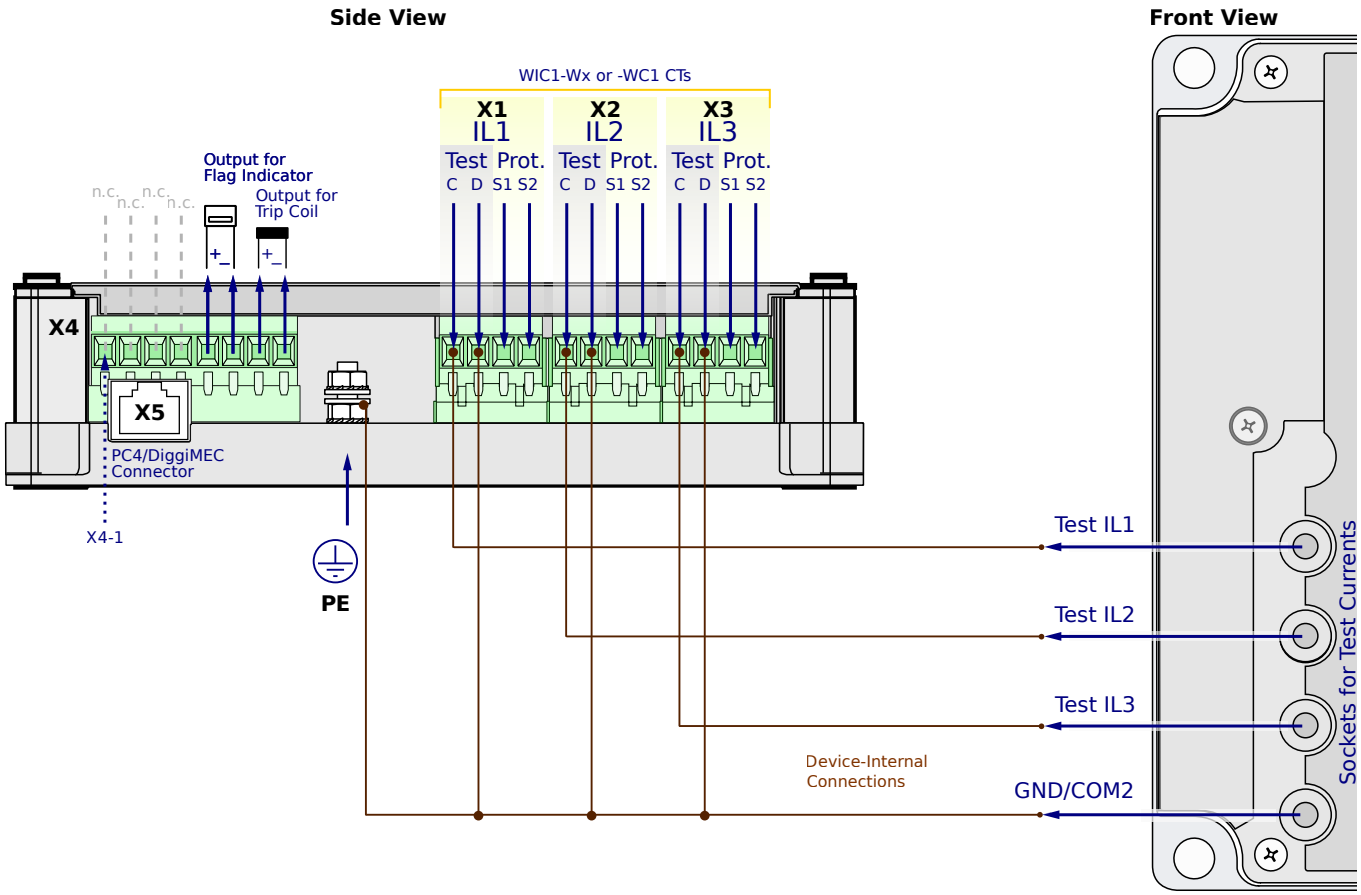


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0SAH

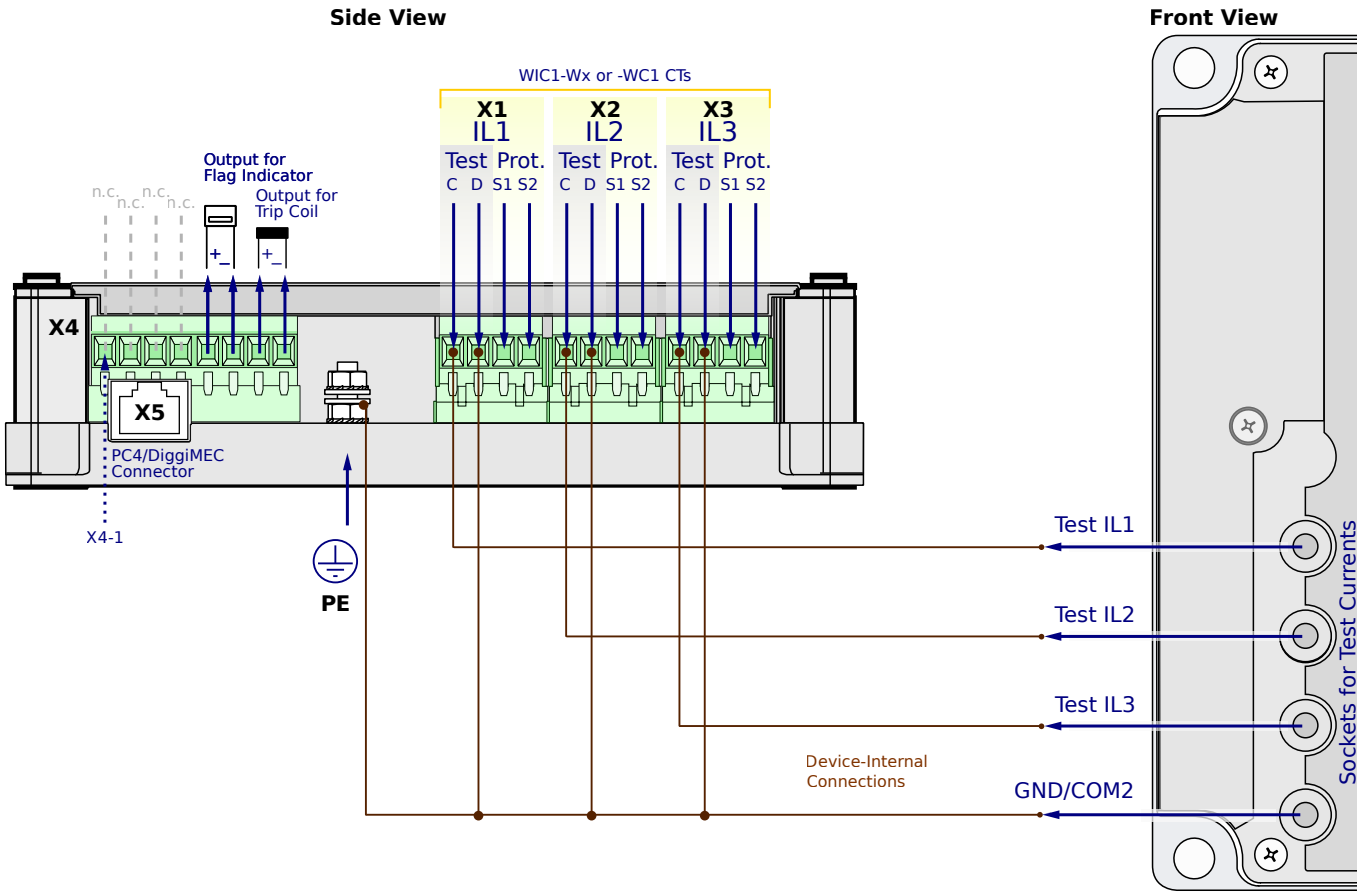


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0AA0

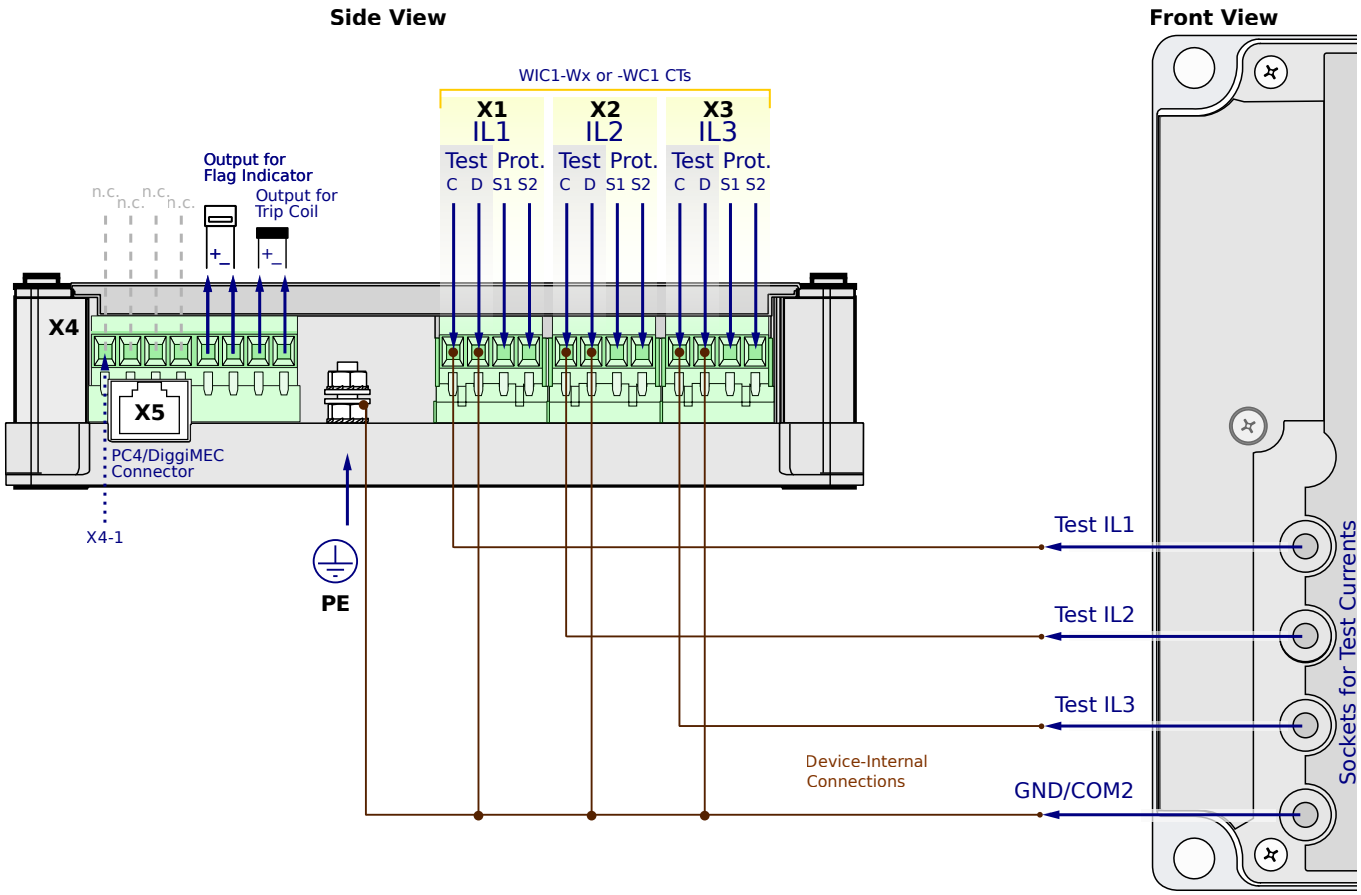


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0AAH

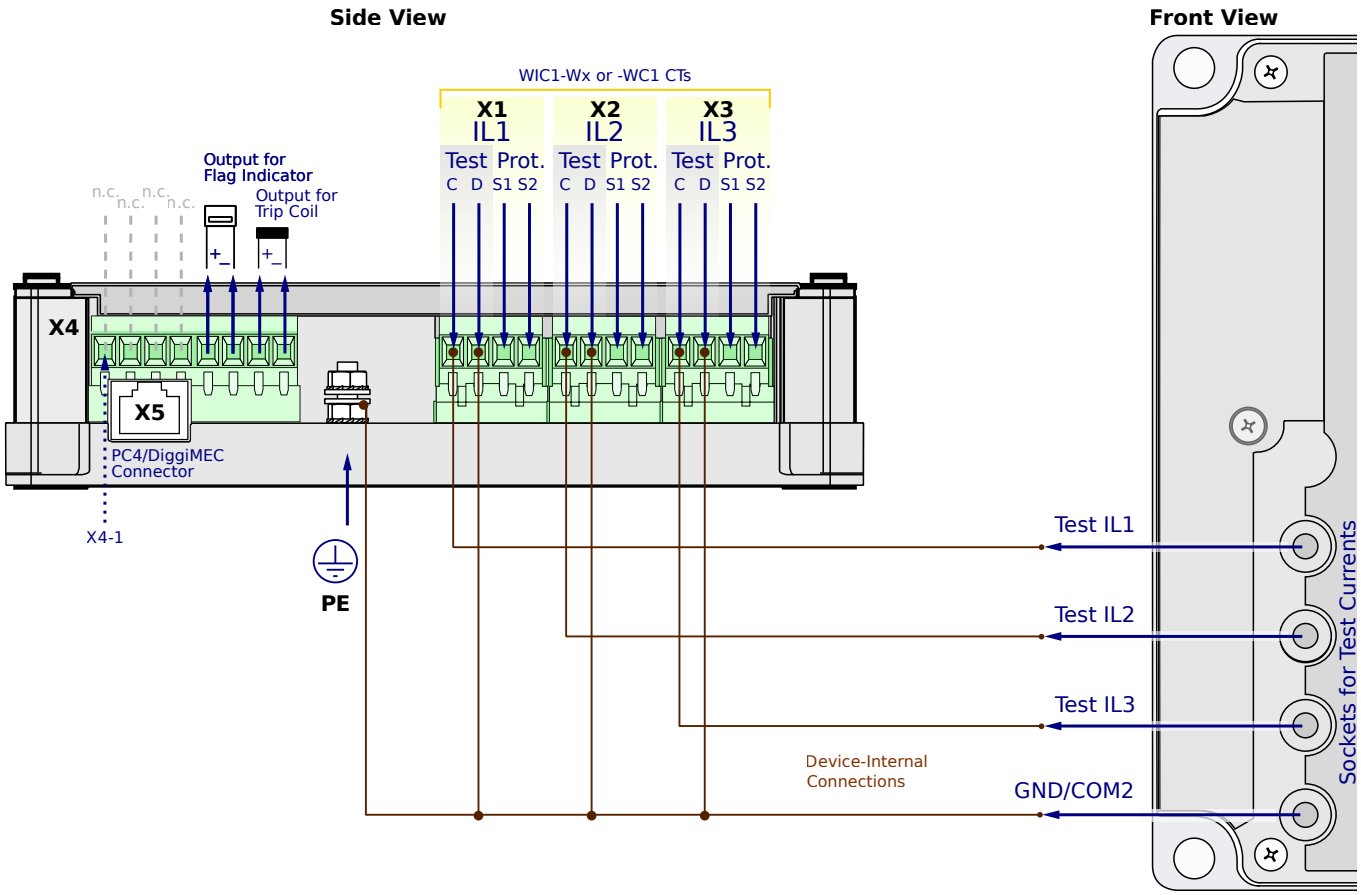


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0PA0

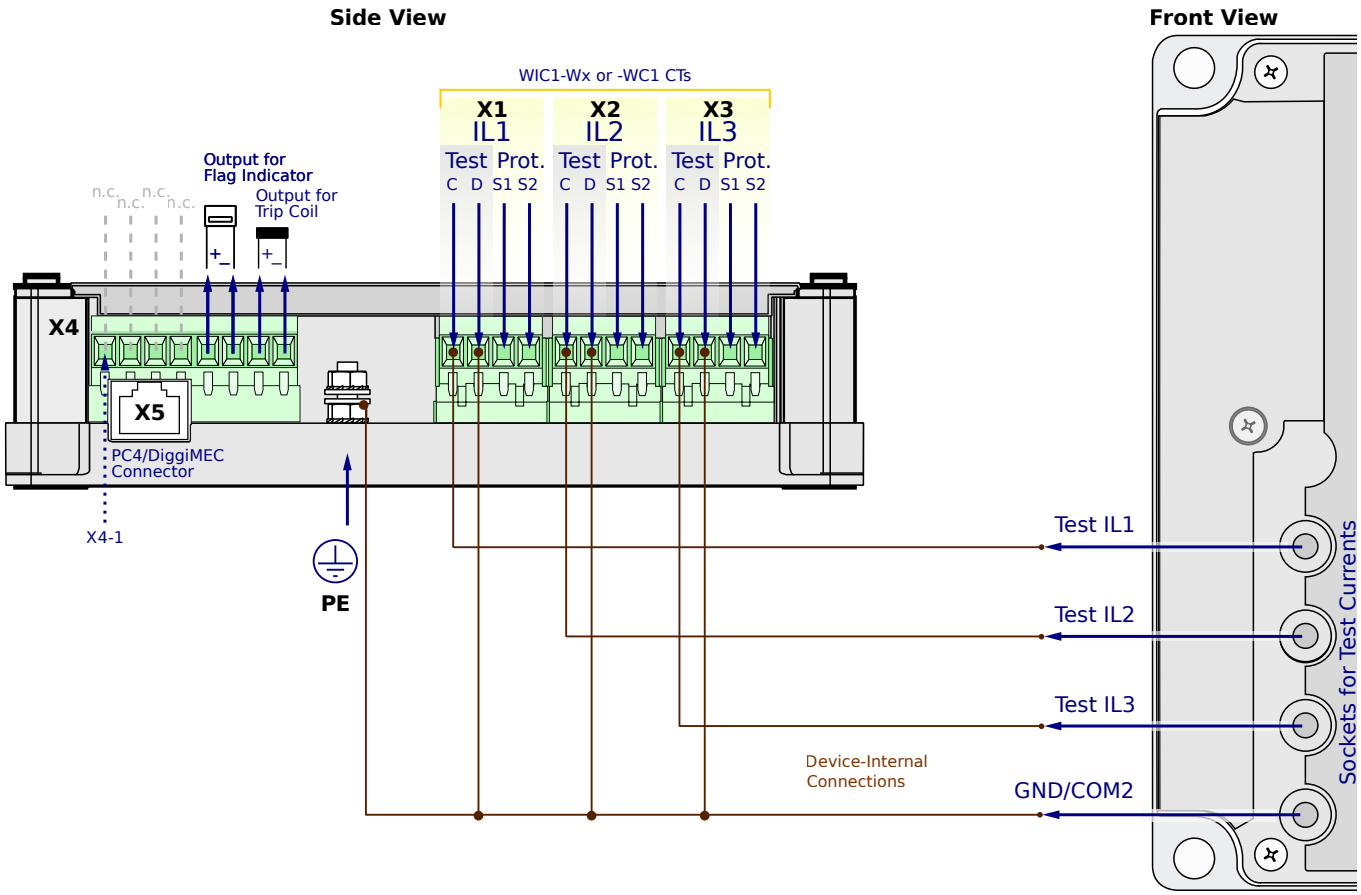


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN0PAH

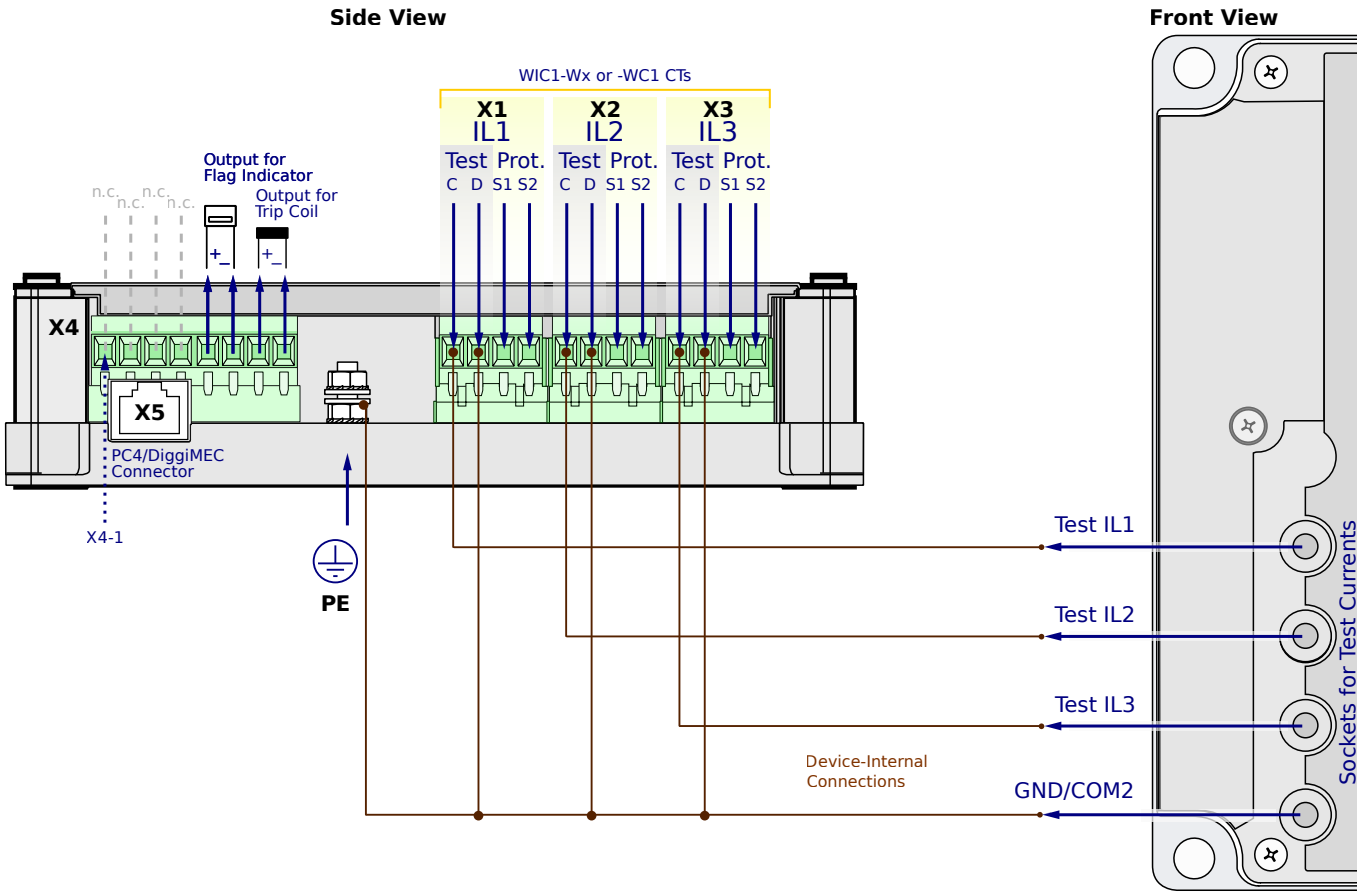


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1SA0

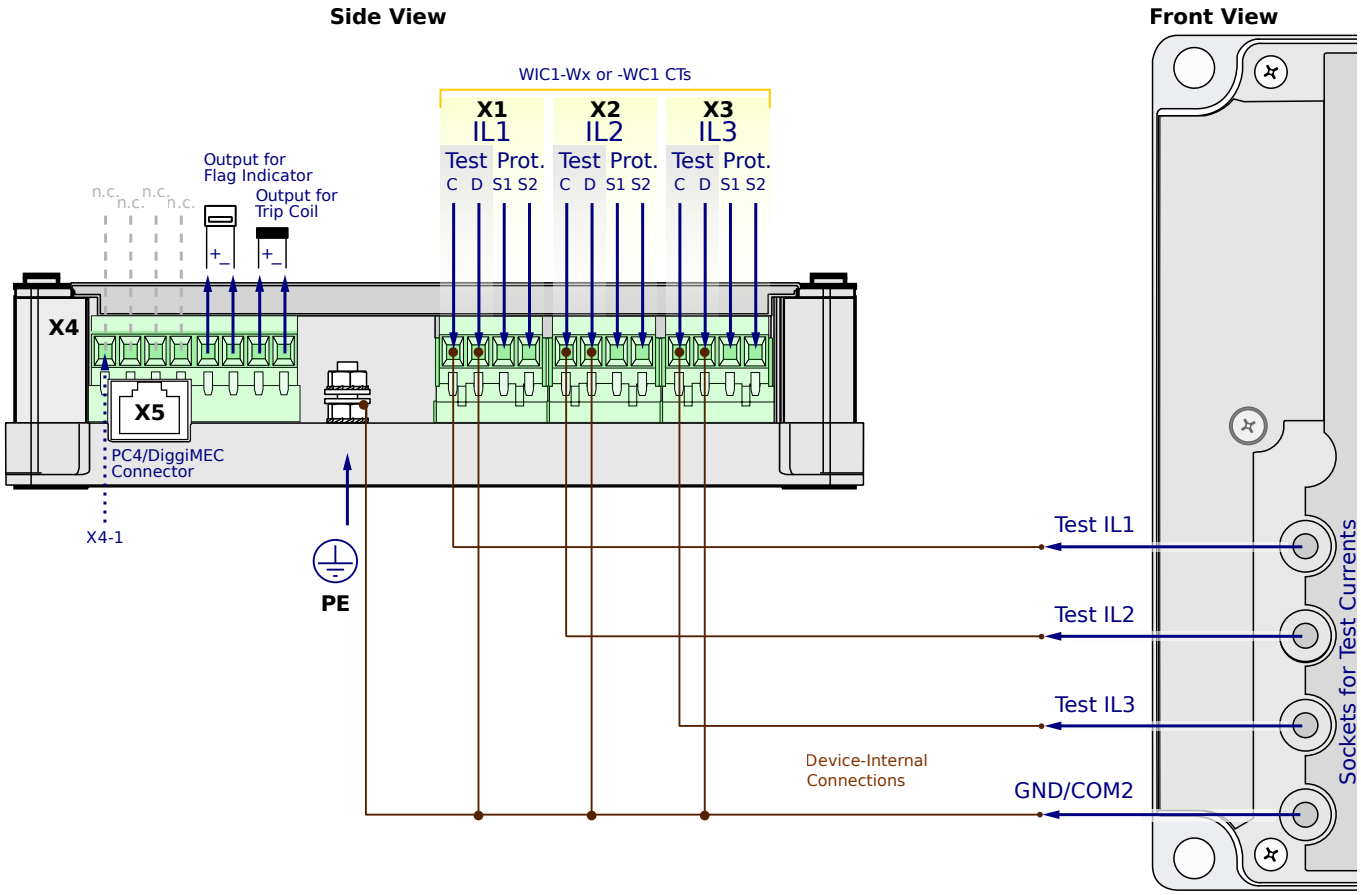


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1SAH

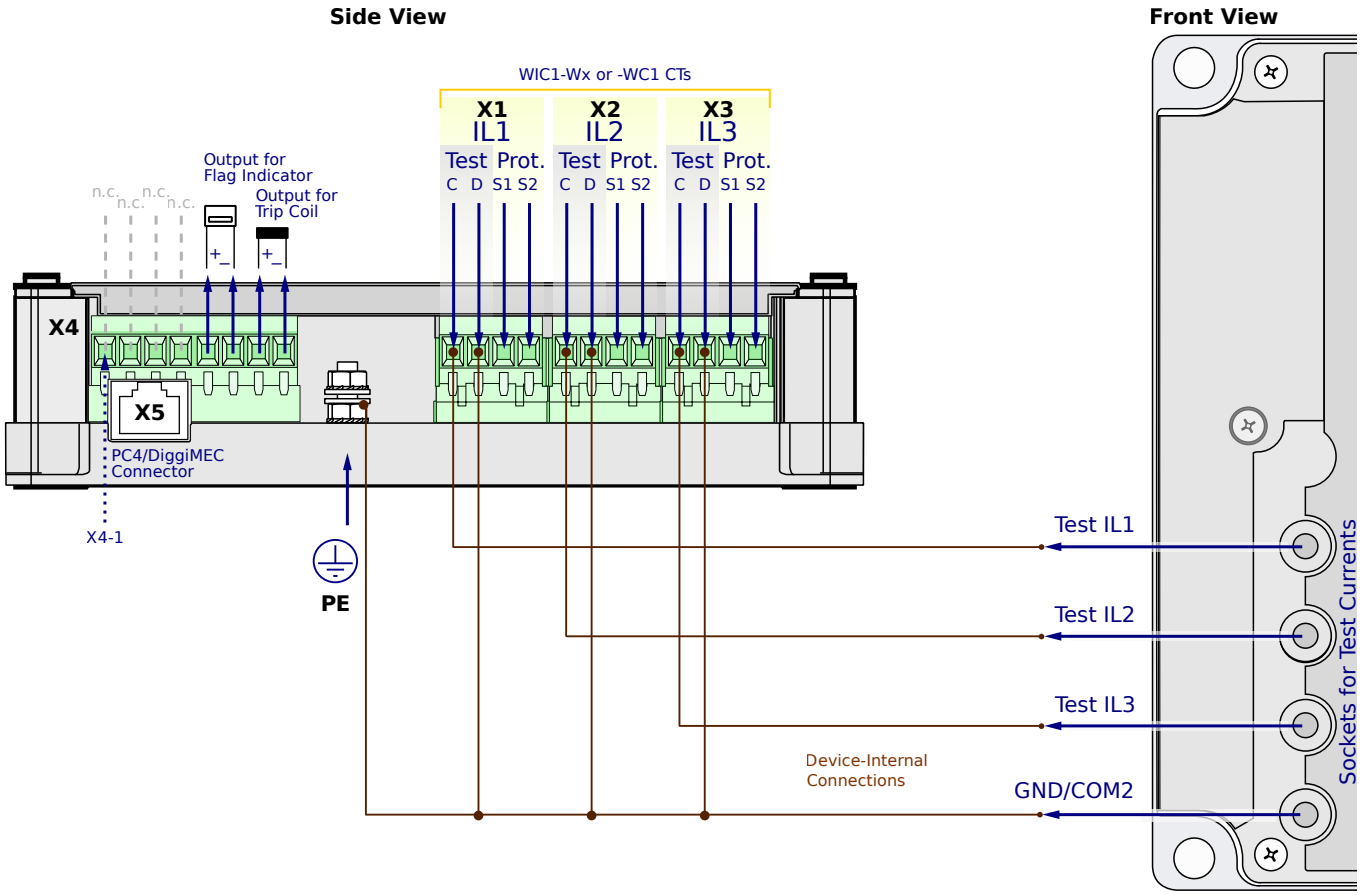


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1AA0

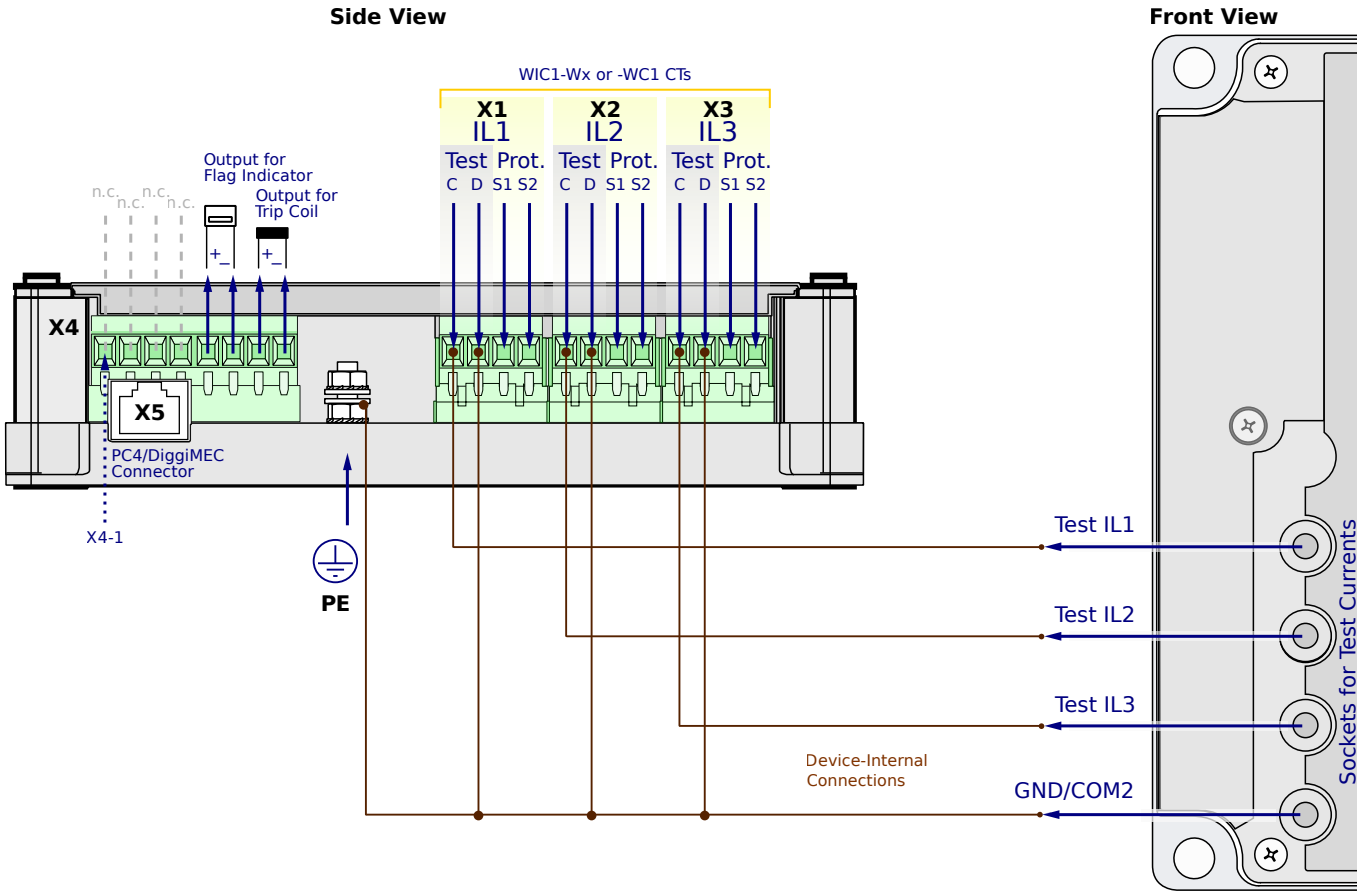


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1AAH

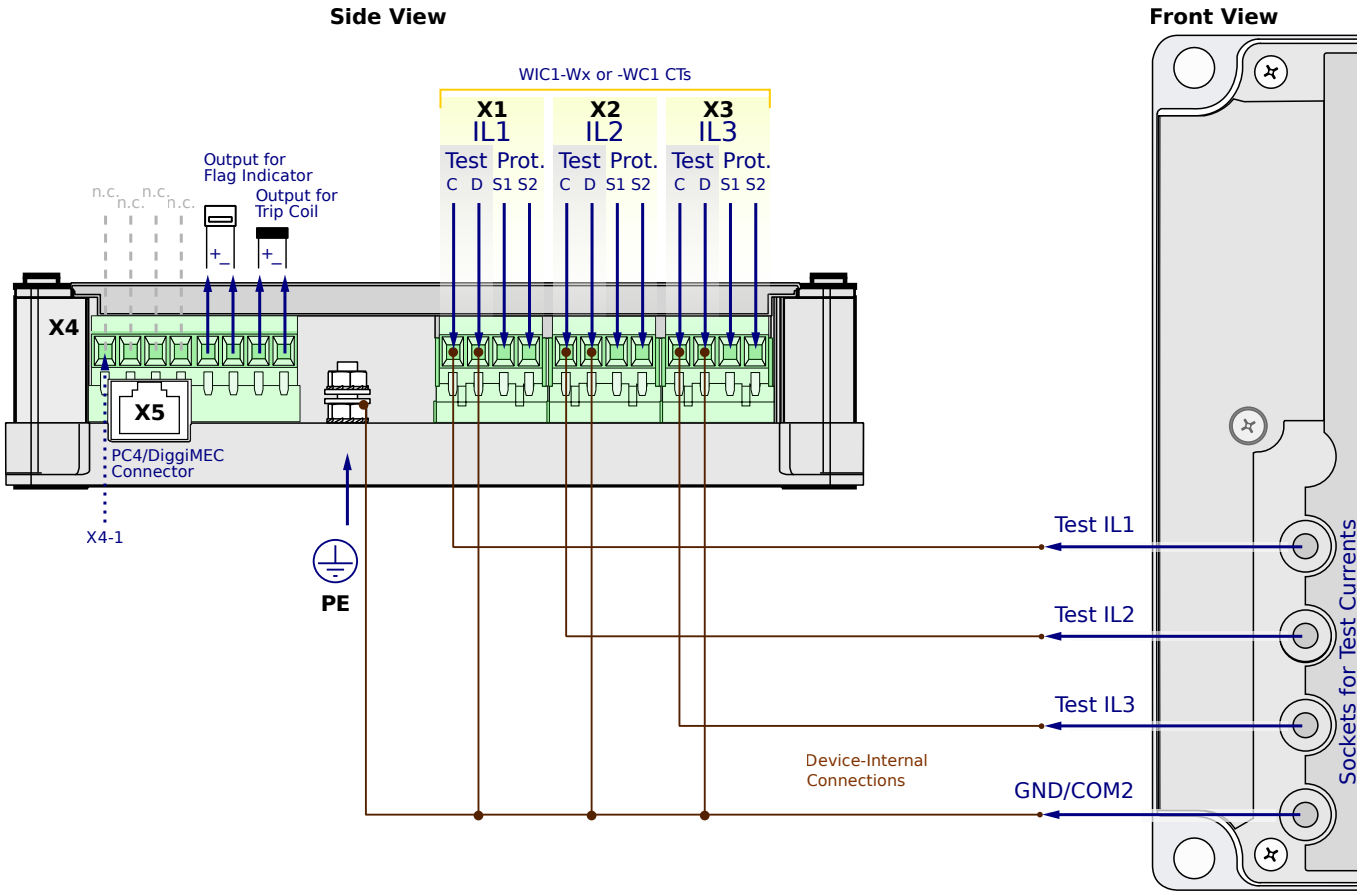


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1PA0

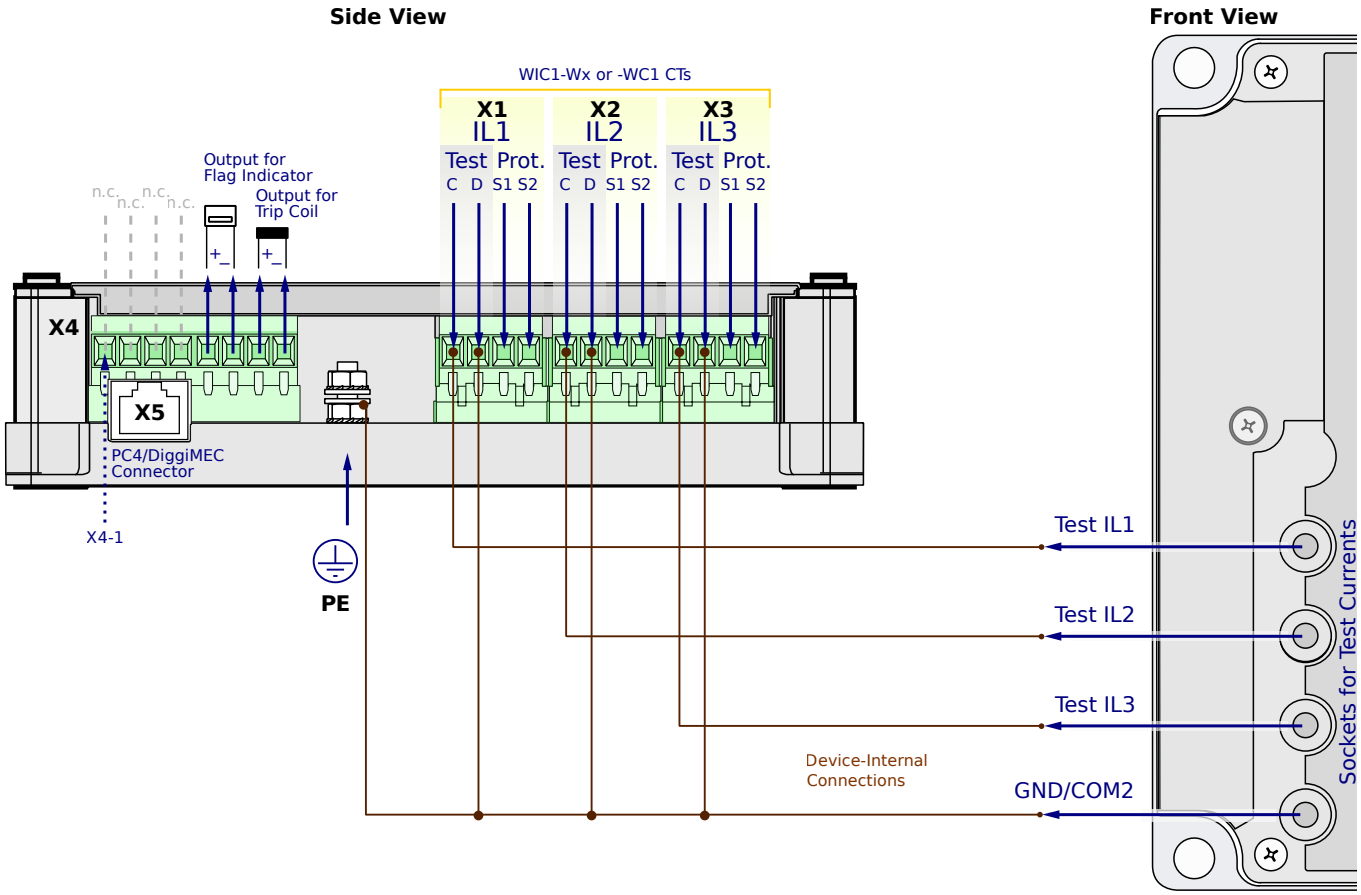


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN1PAH

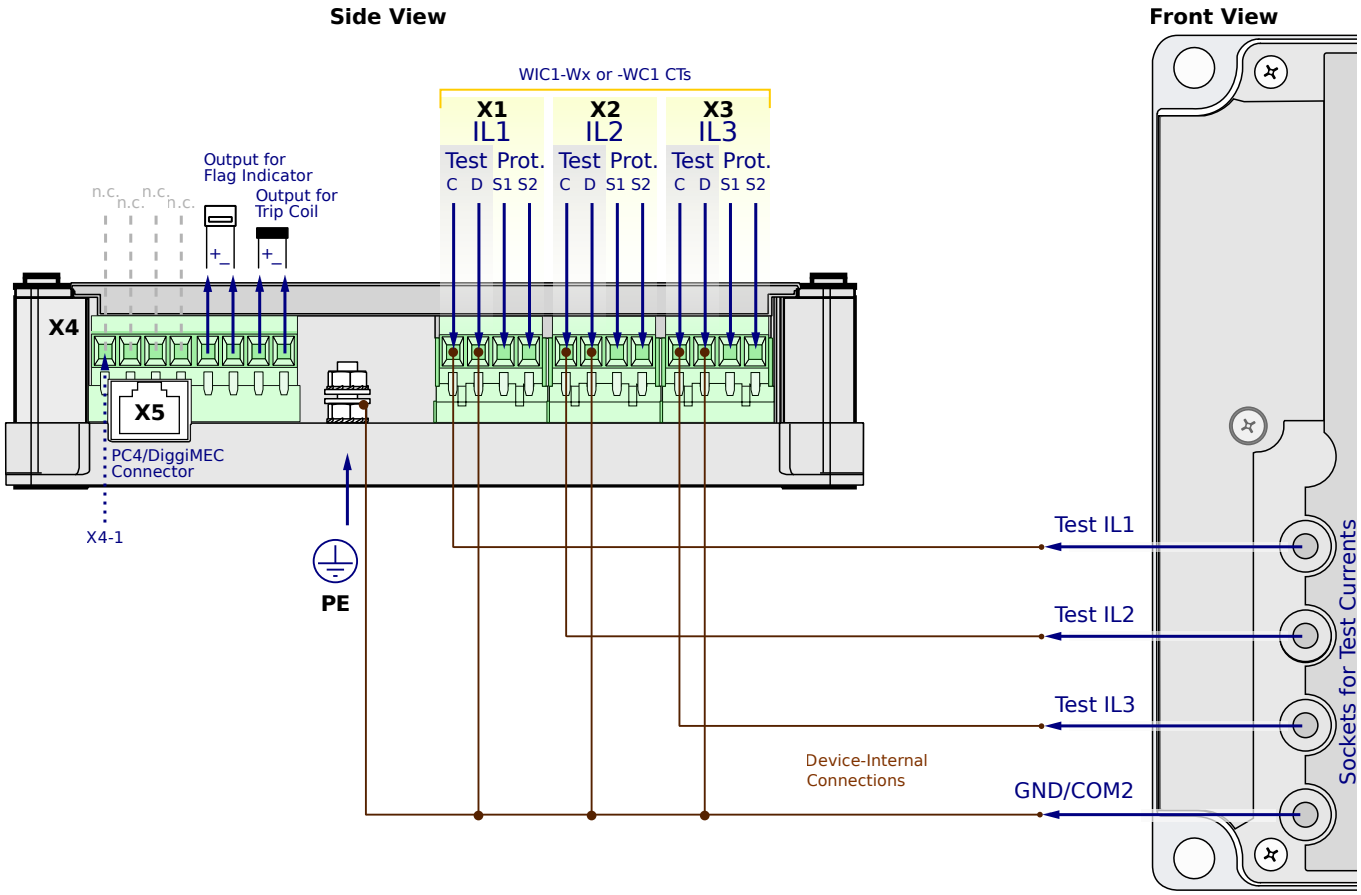


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2SA0

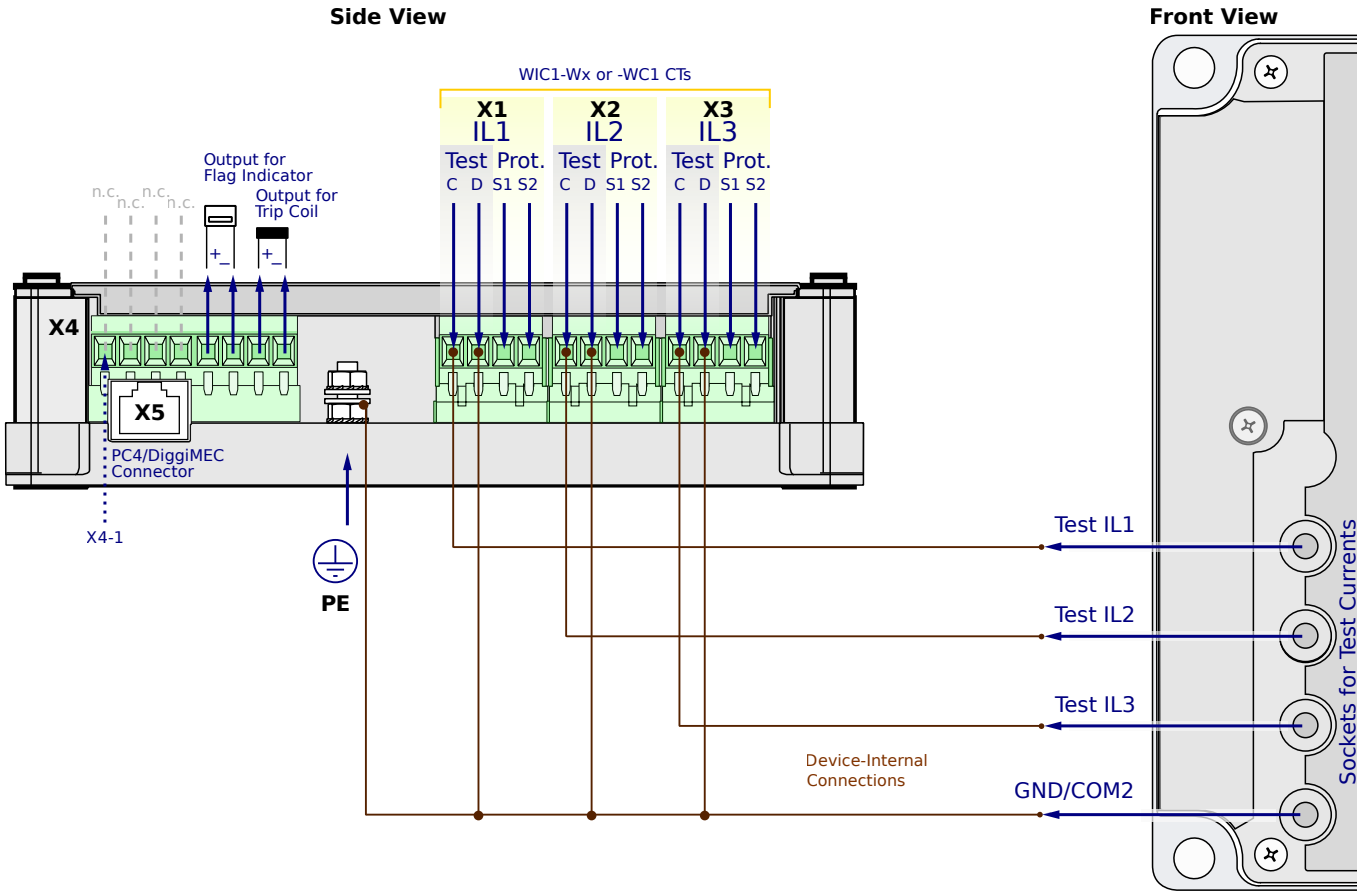


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2SAH

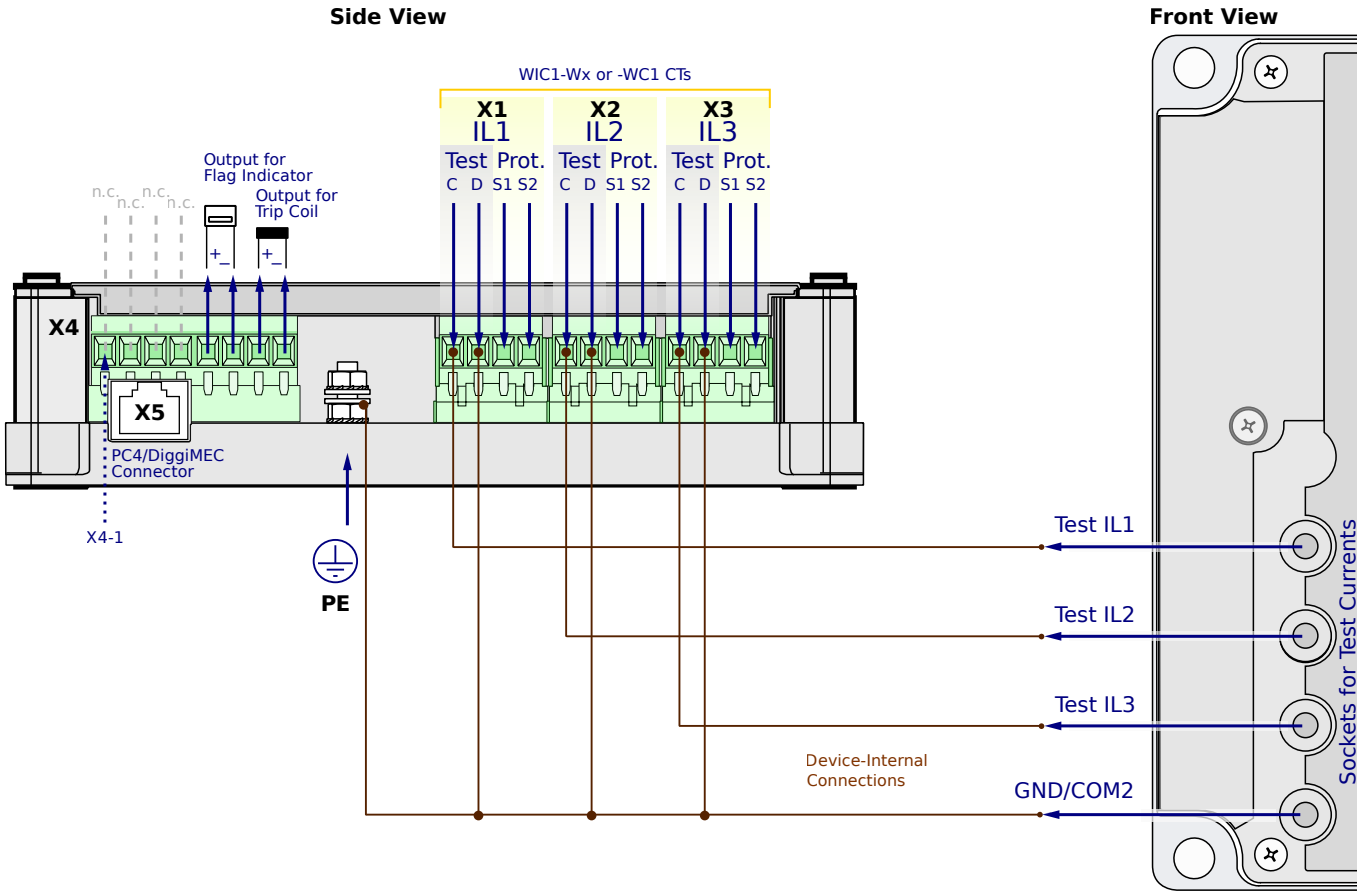


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2AA0

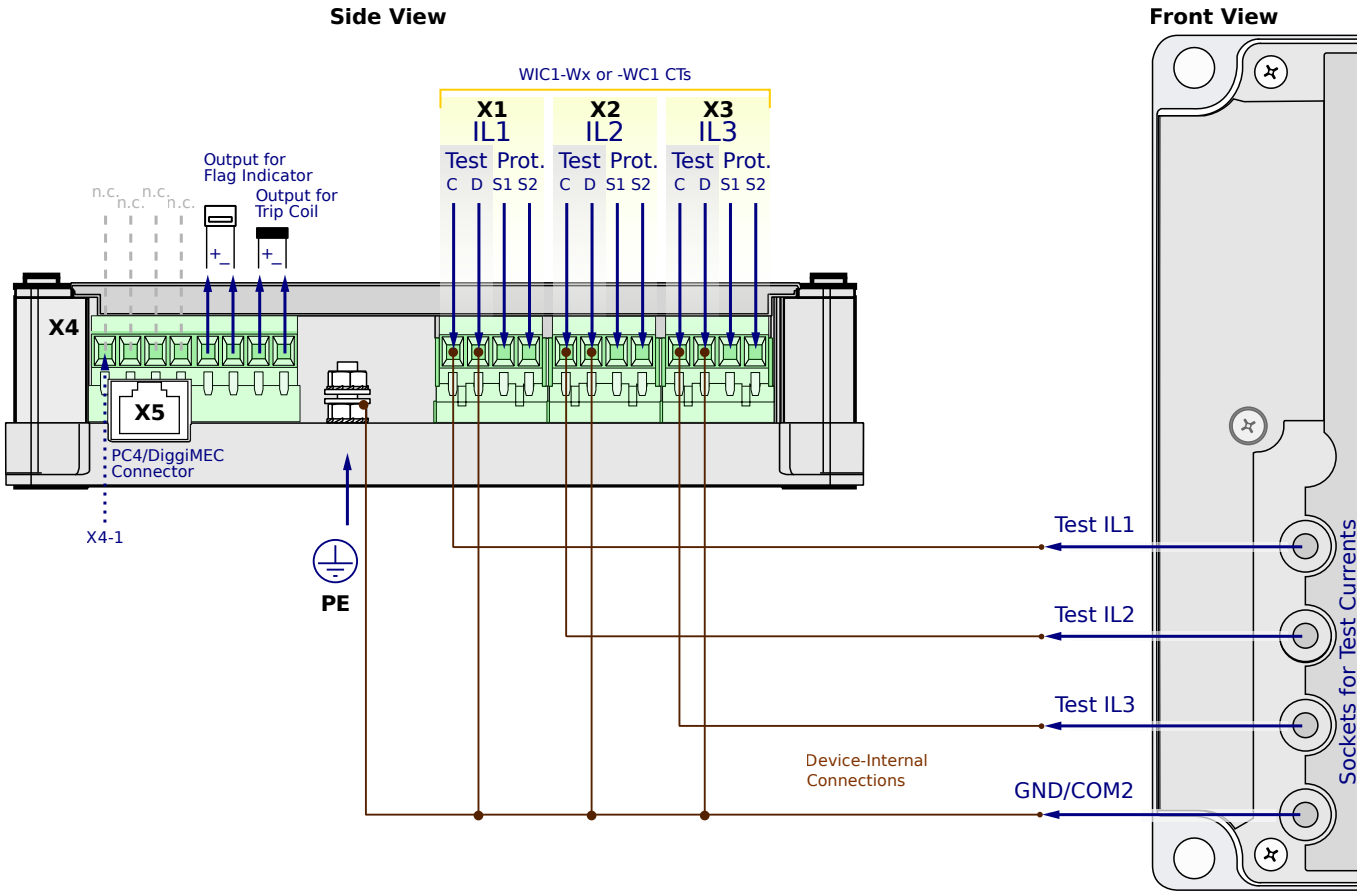


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2AAH

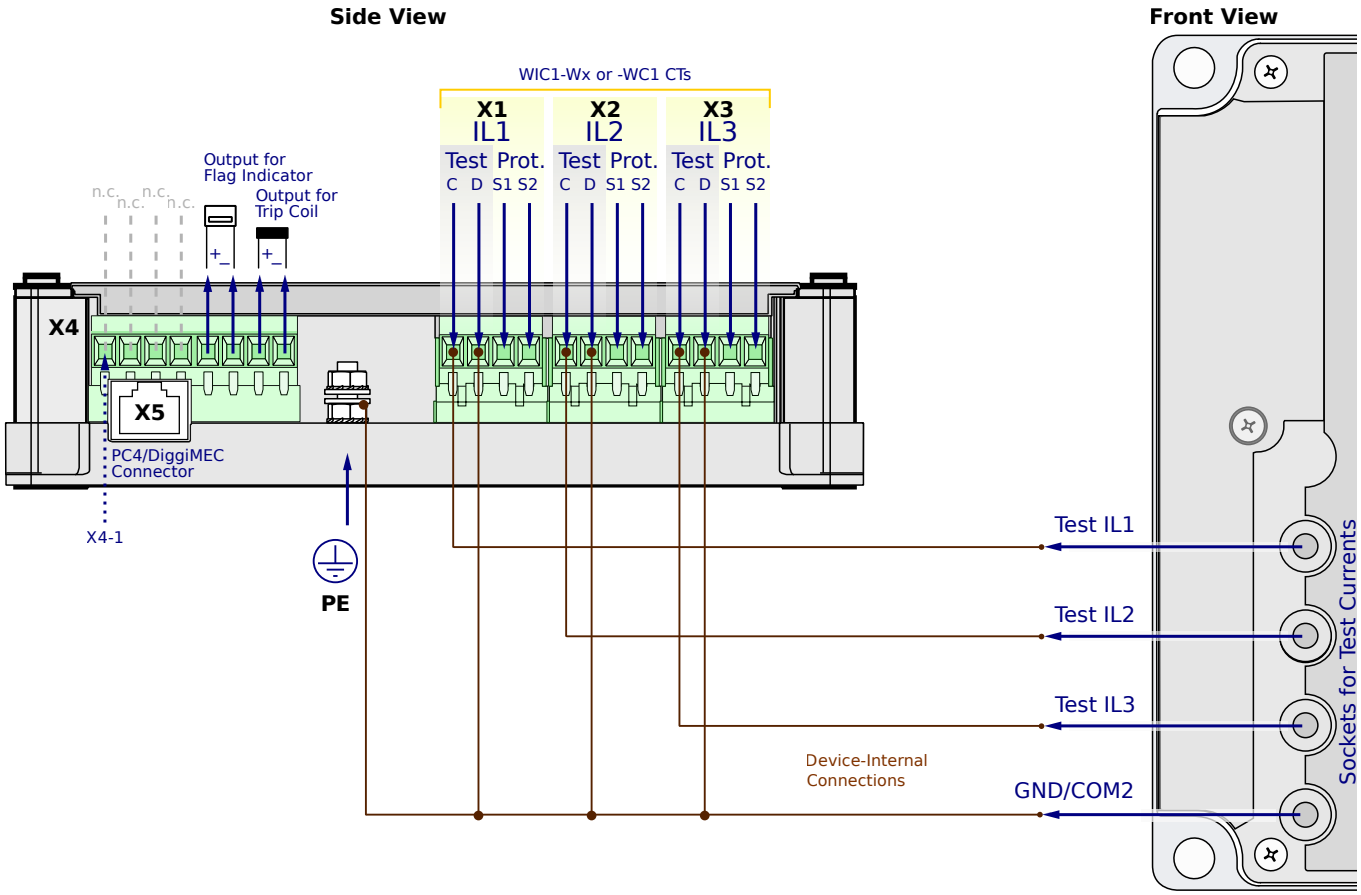


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2PA0

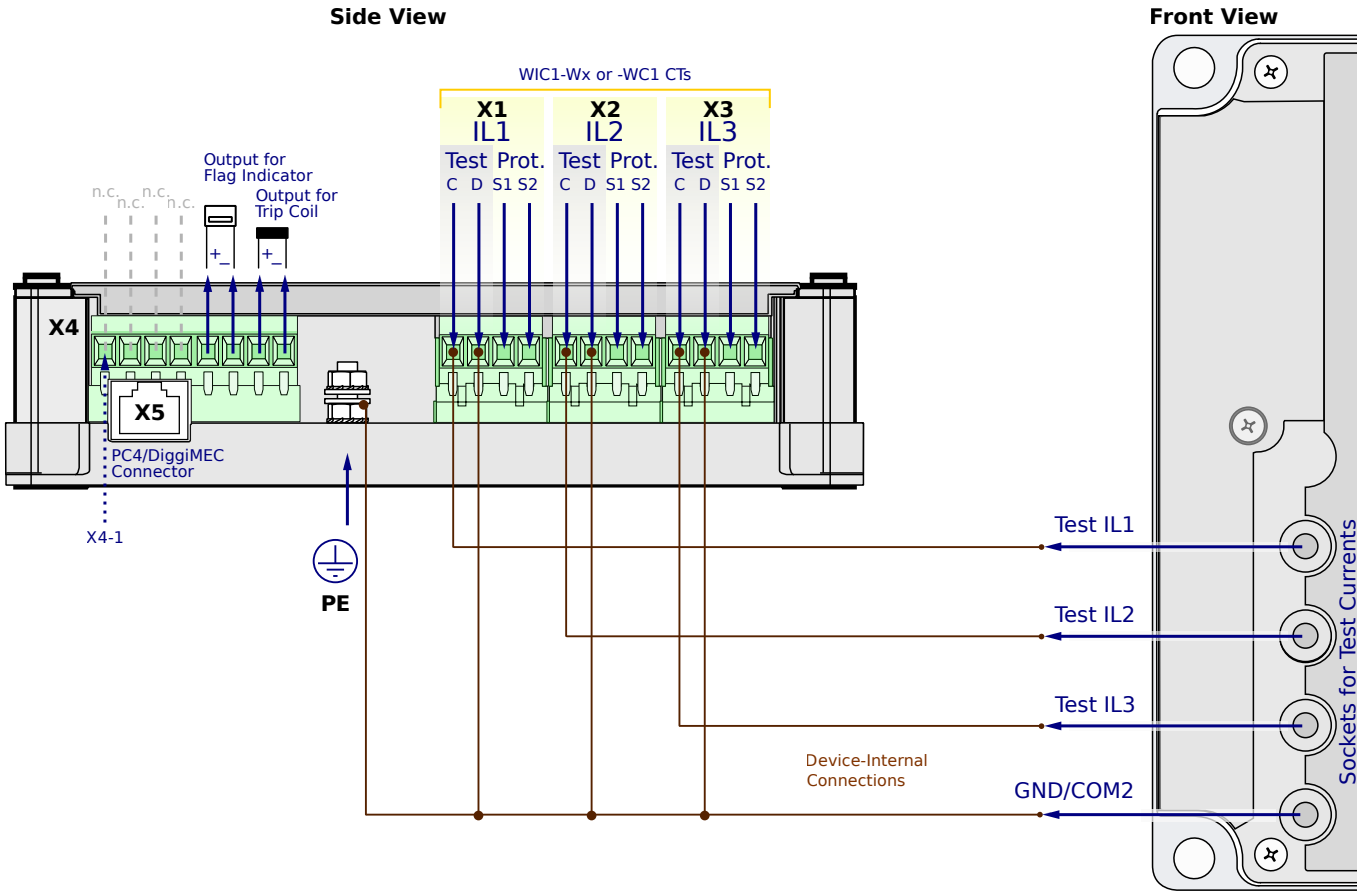


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NN2PAH

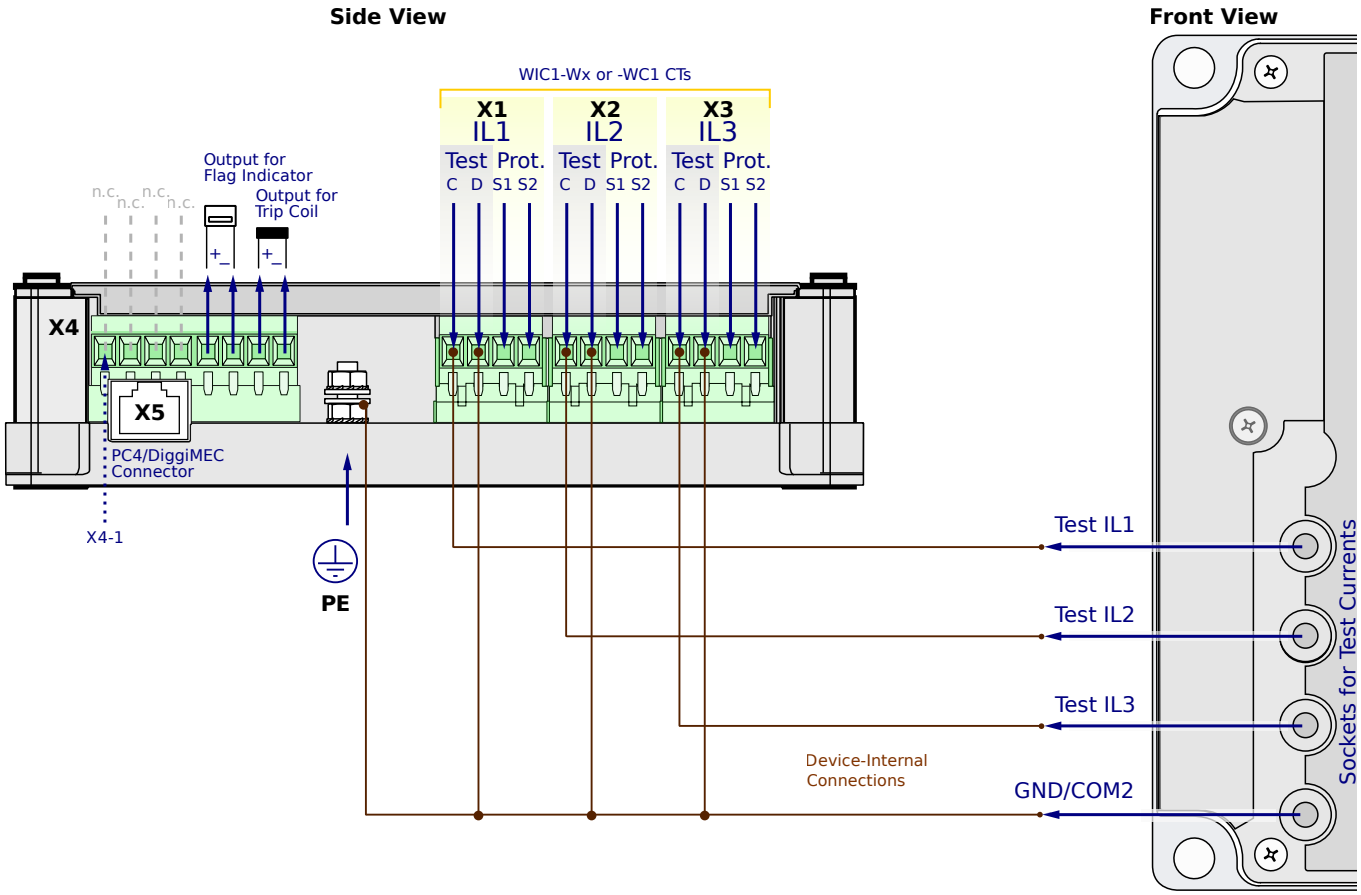


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0SA0

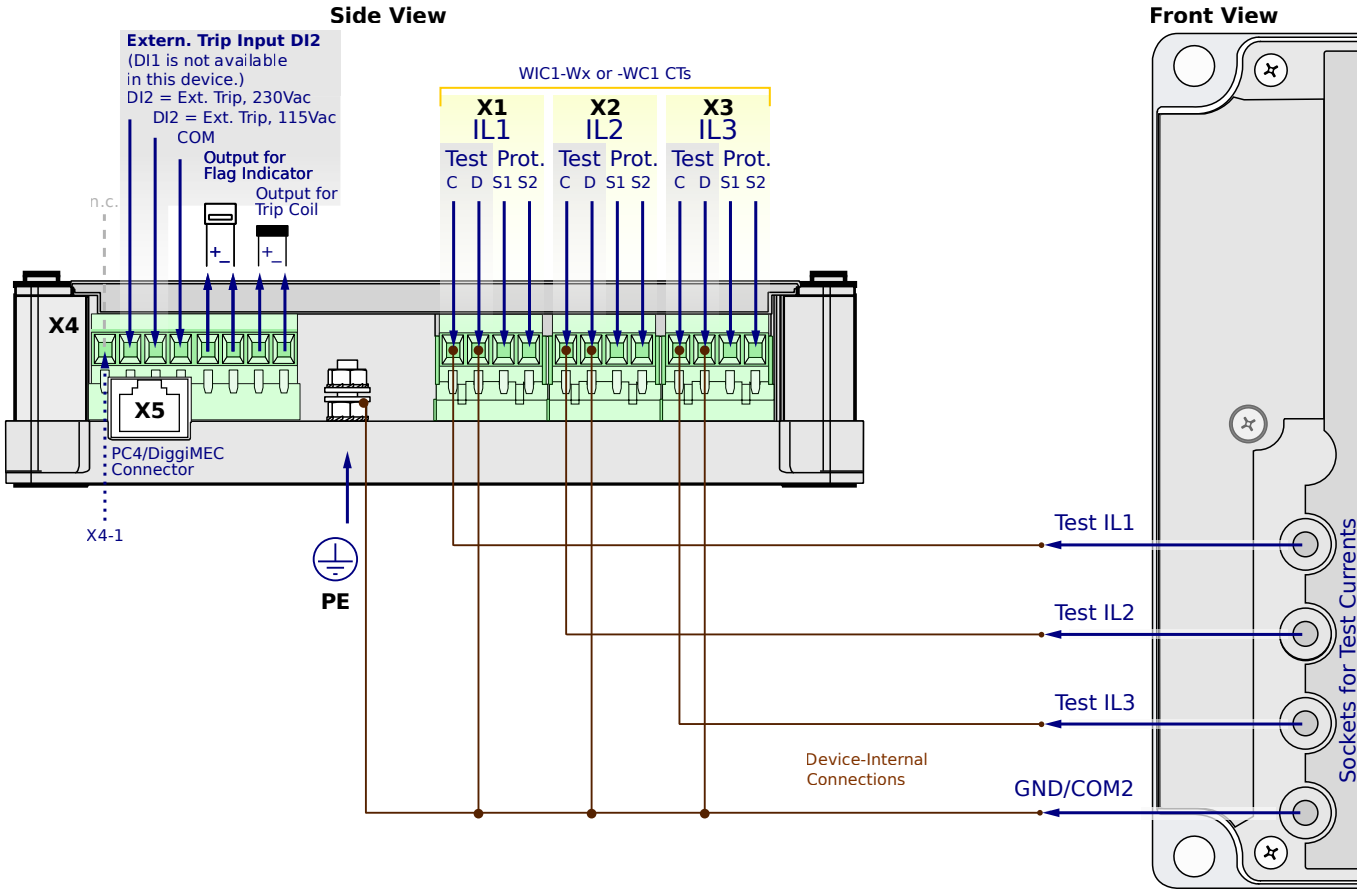


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0SAH

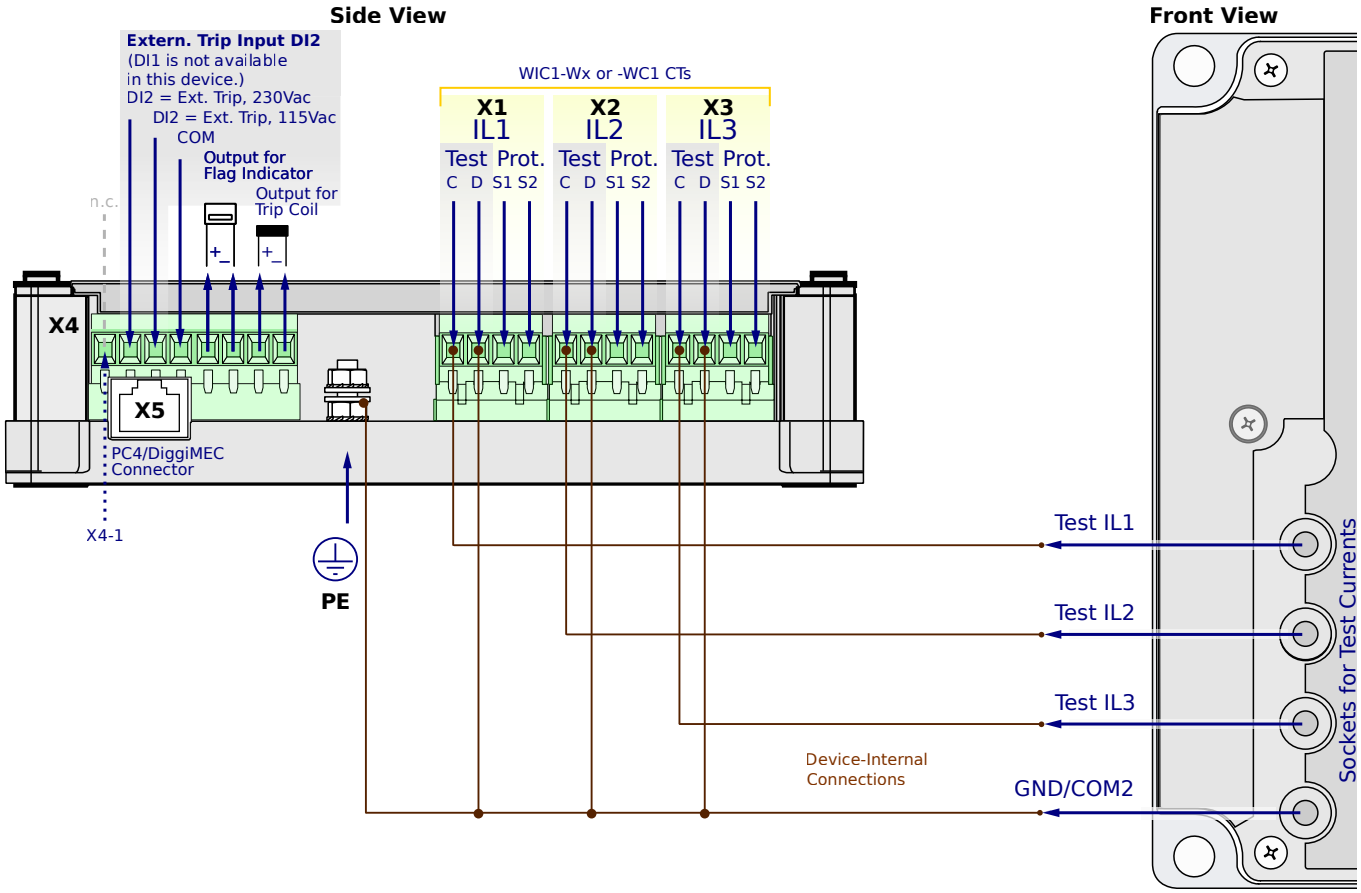


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0AA0

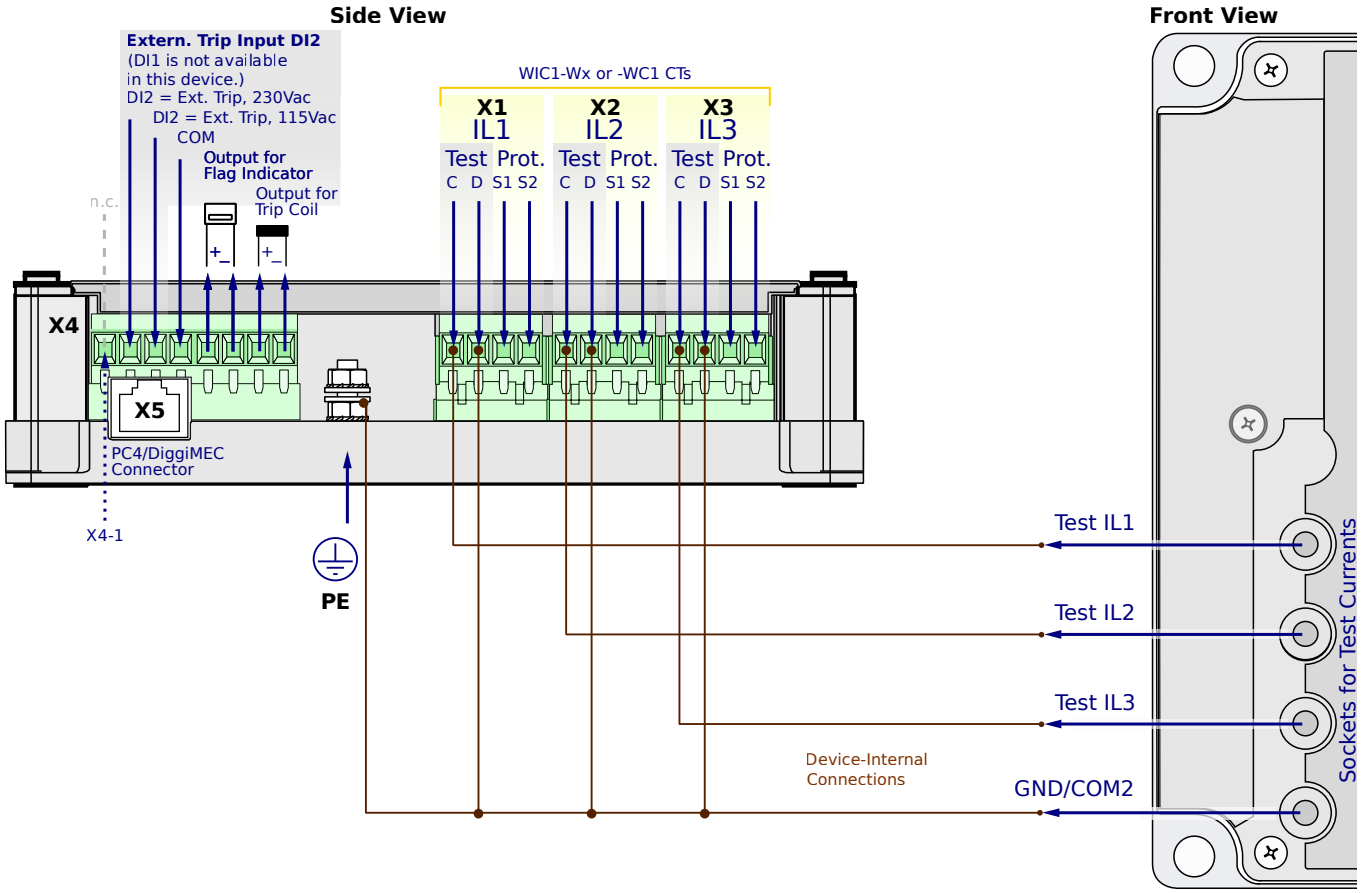


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0AAH

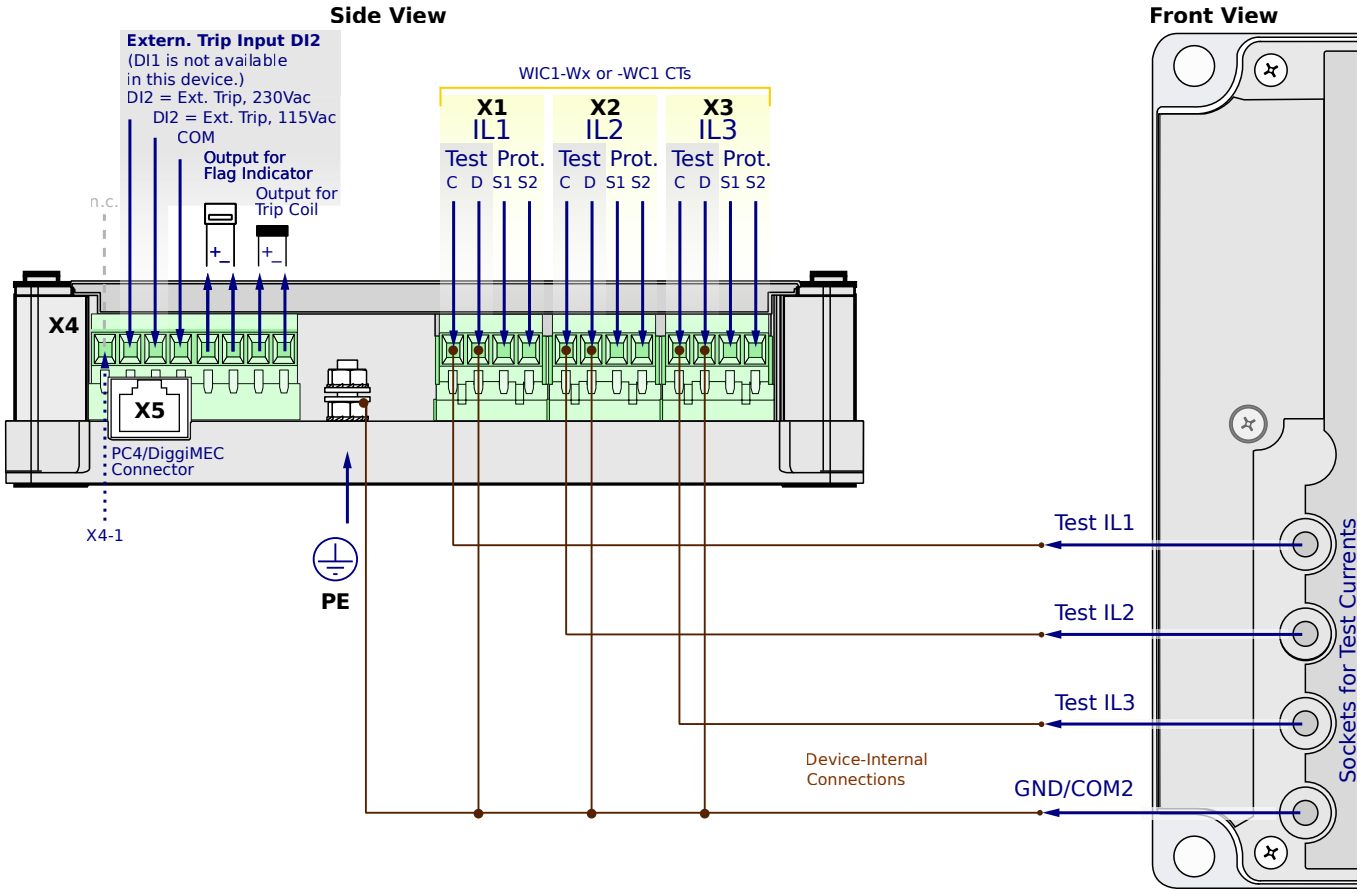


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0PA0

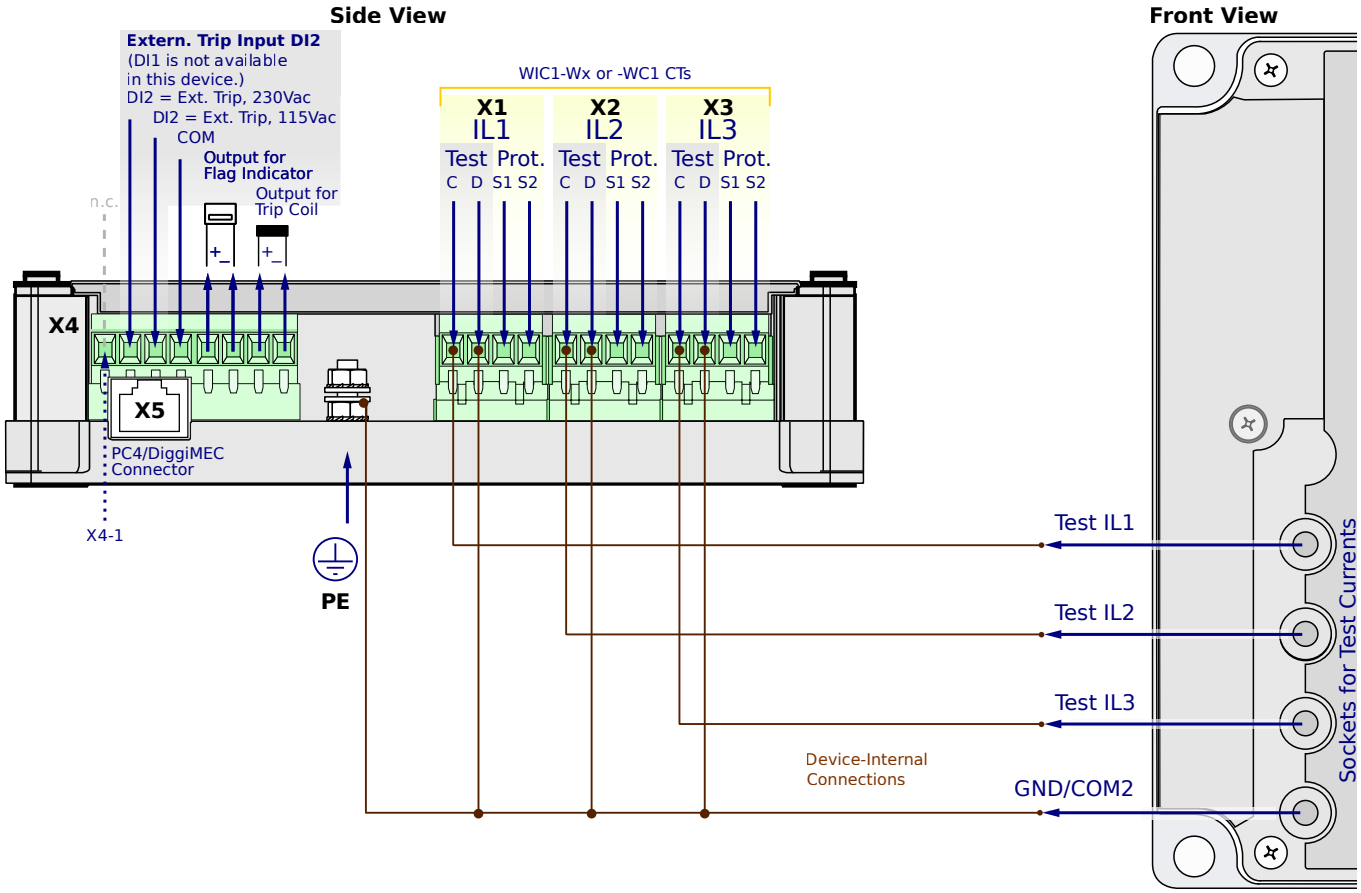


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF0PAH

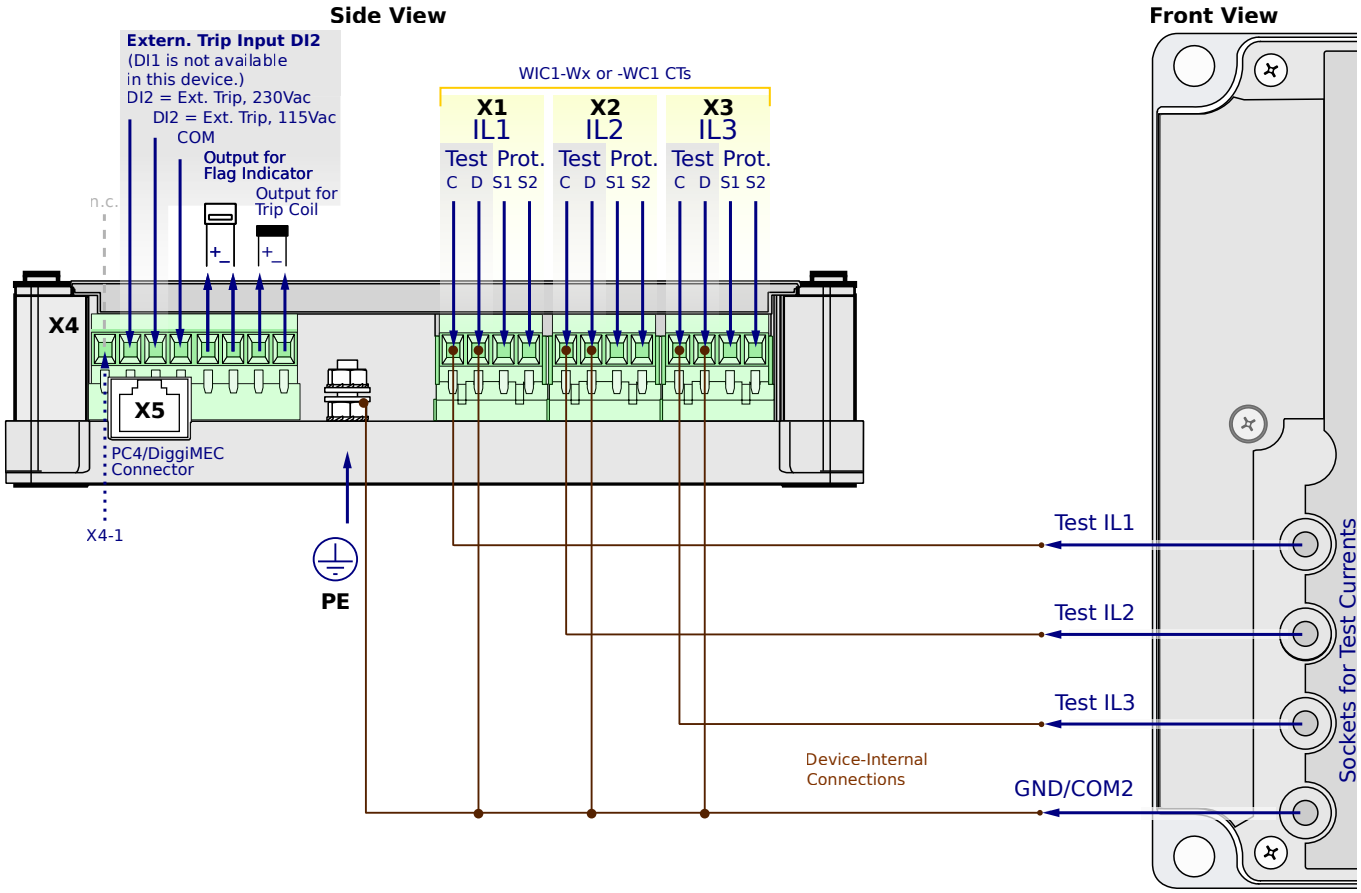


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1SA0

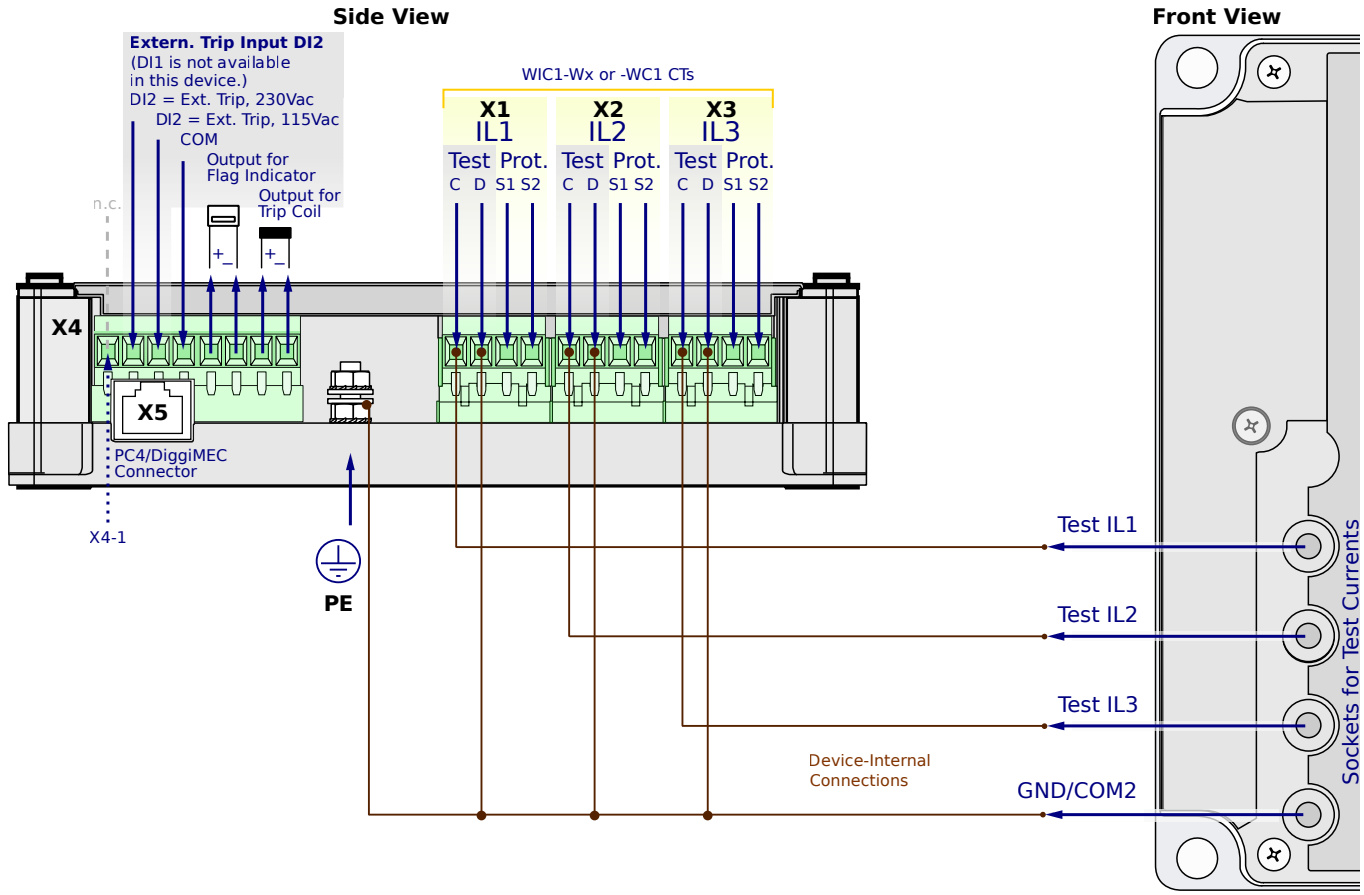


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1SAH

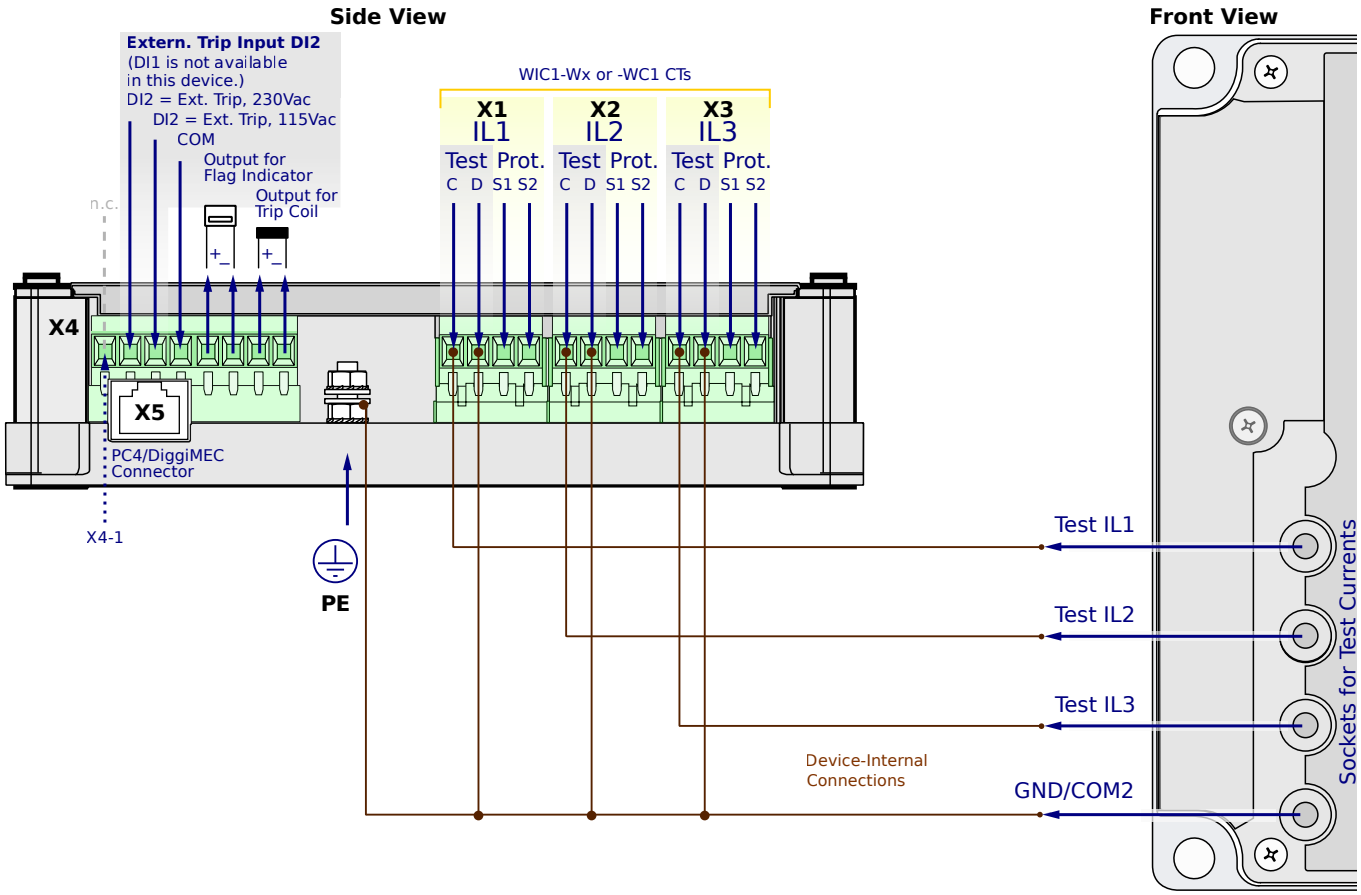


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1AA0

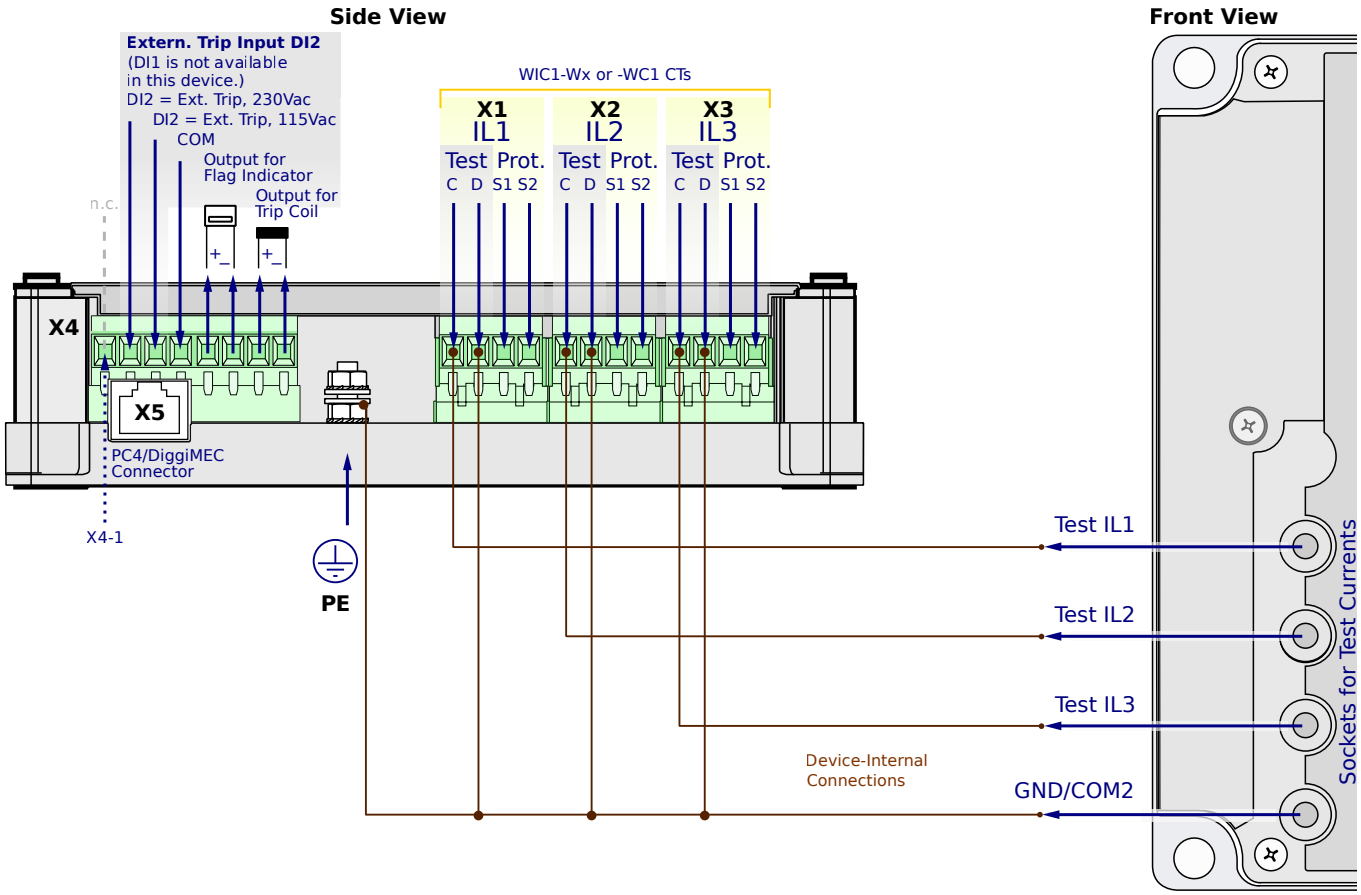


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1AAH

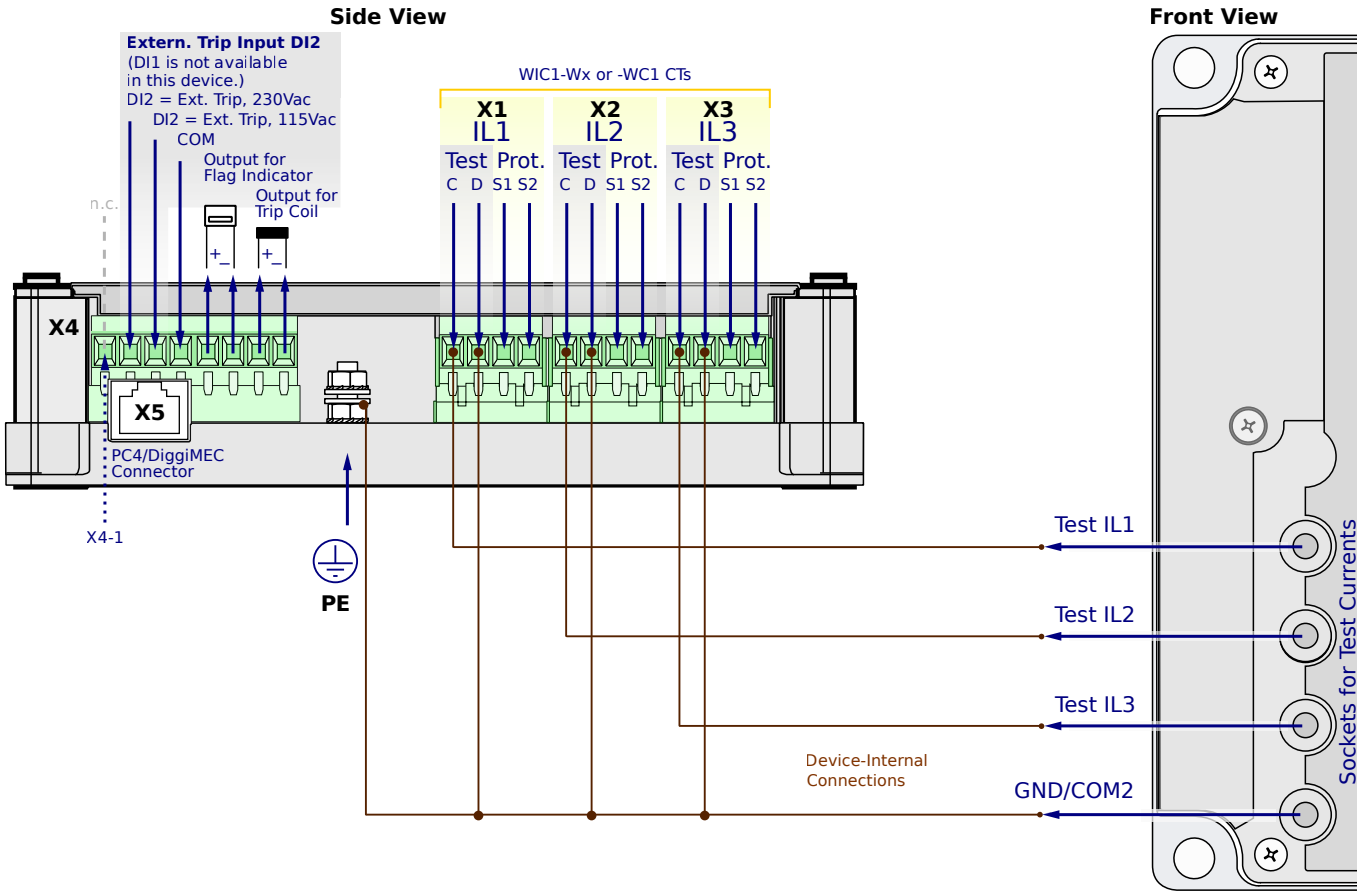


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1PA0

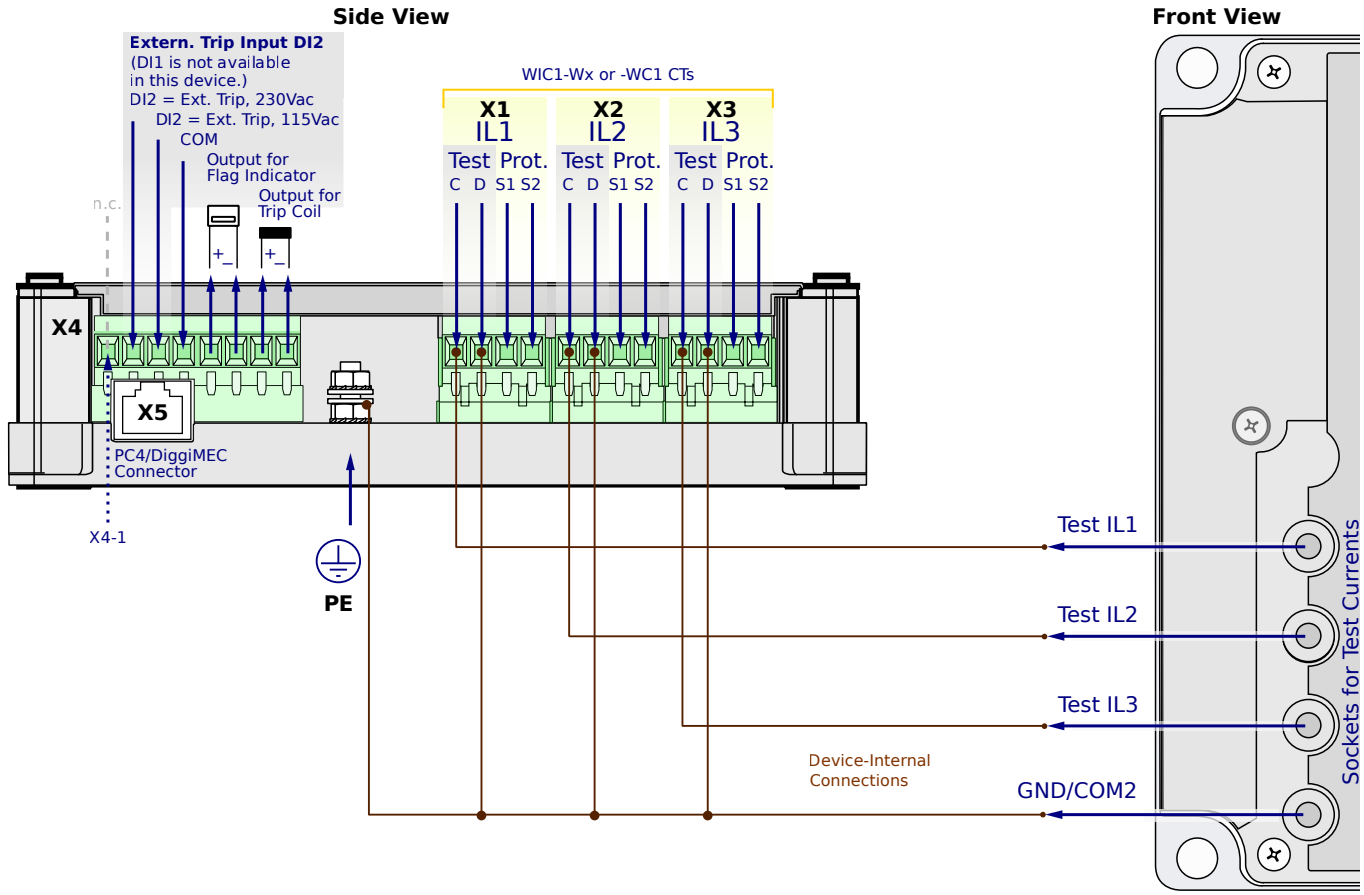


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF1PAH

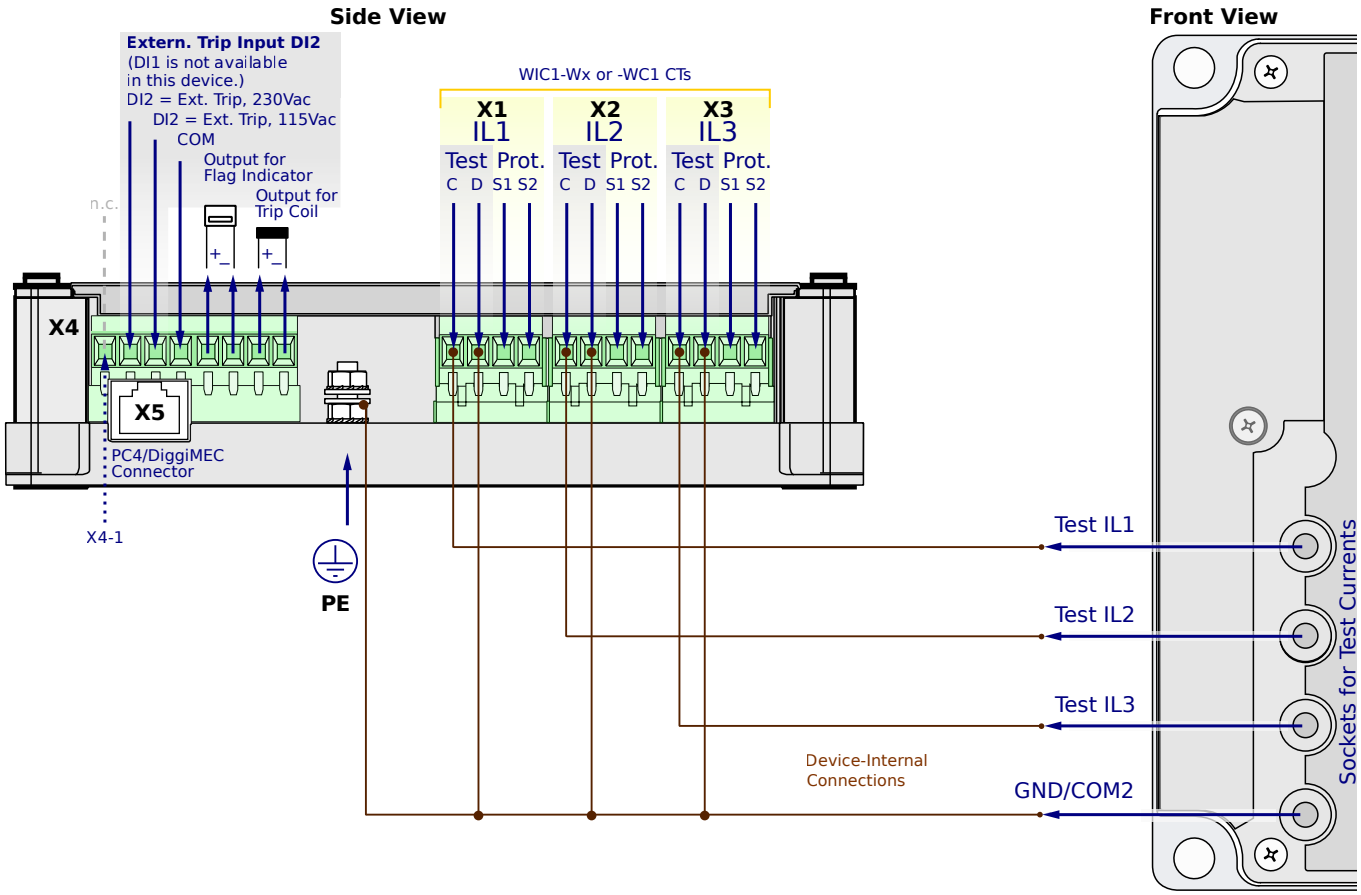


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2SA0

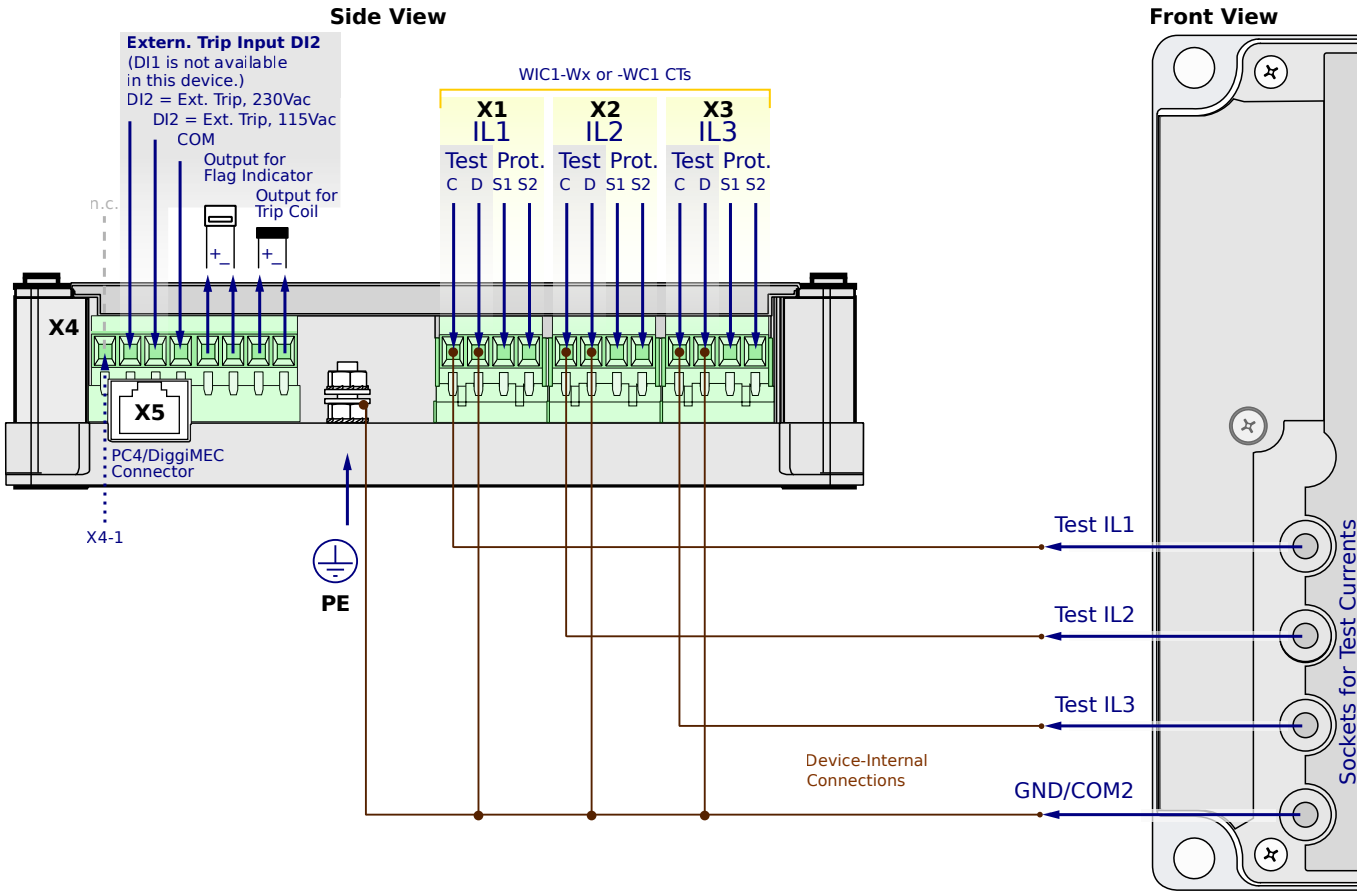


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2SAH

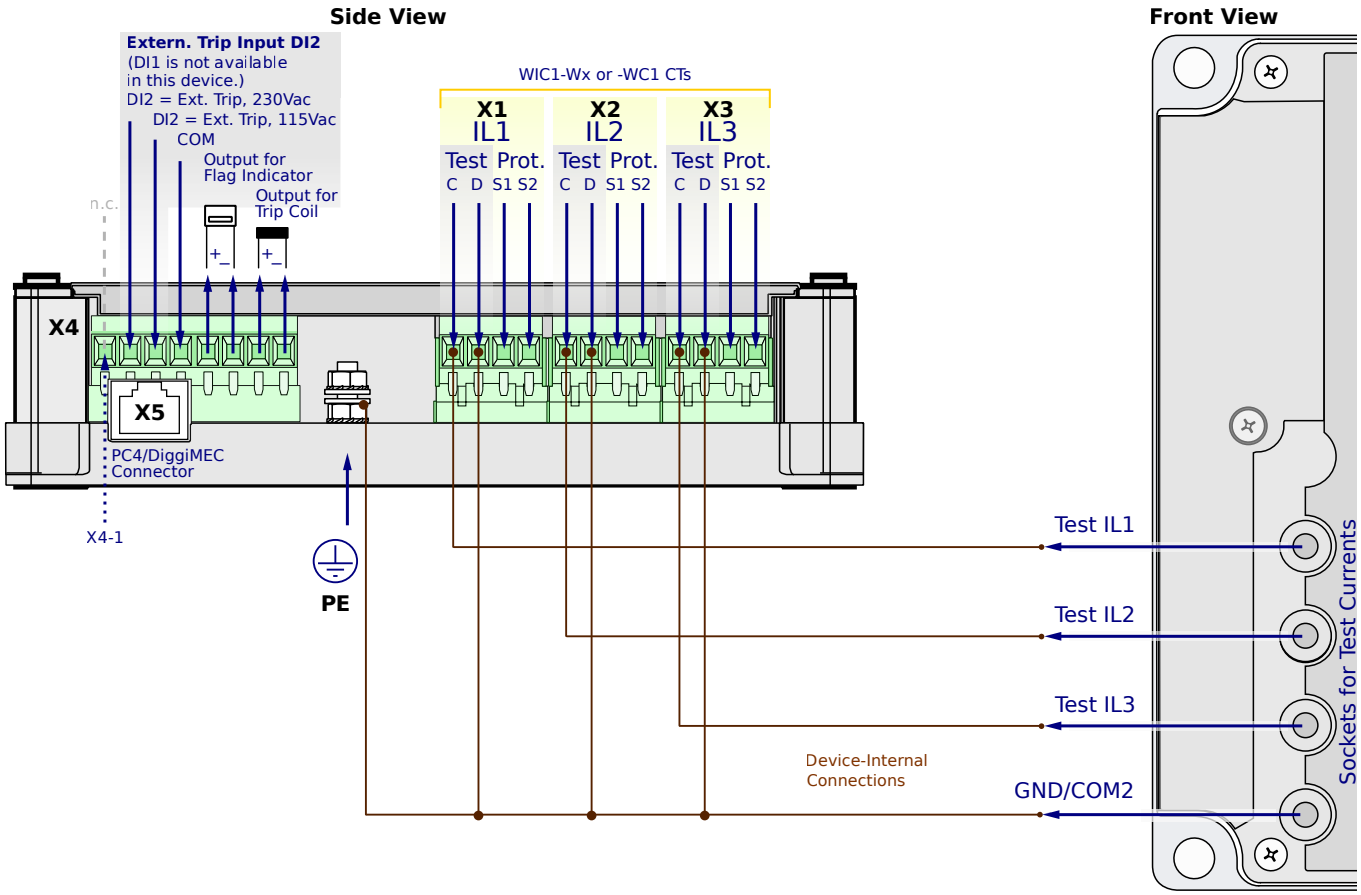


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2AA0

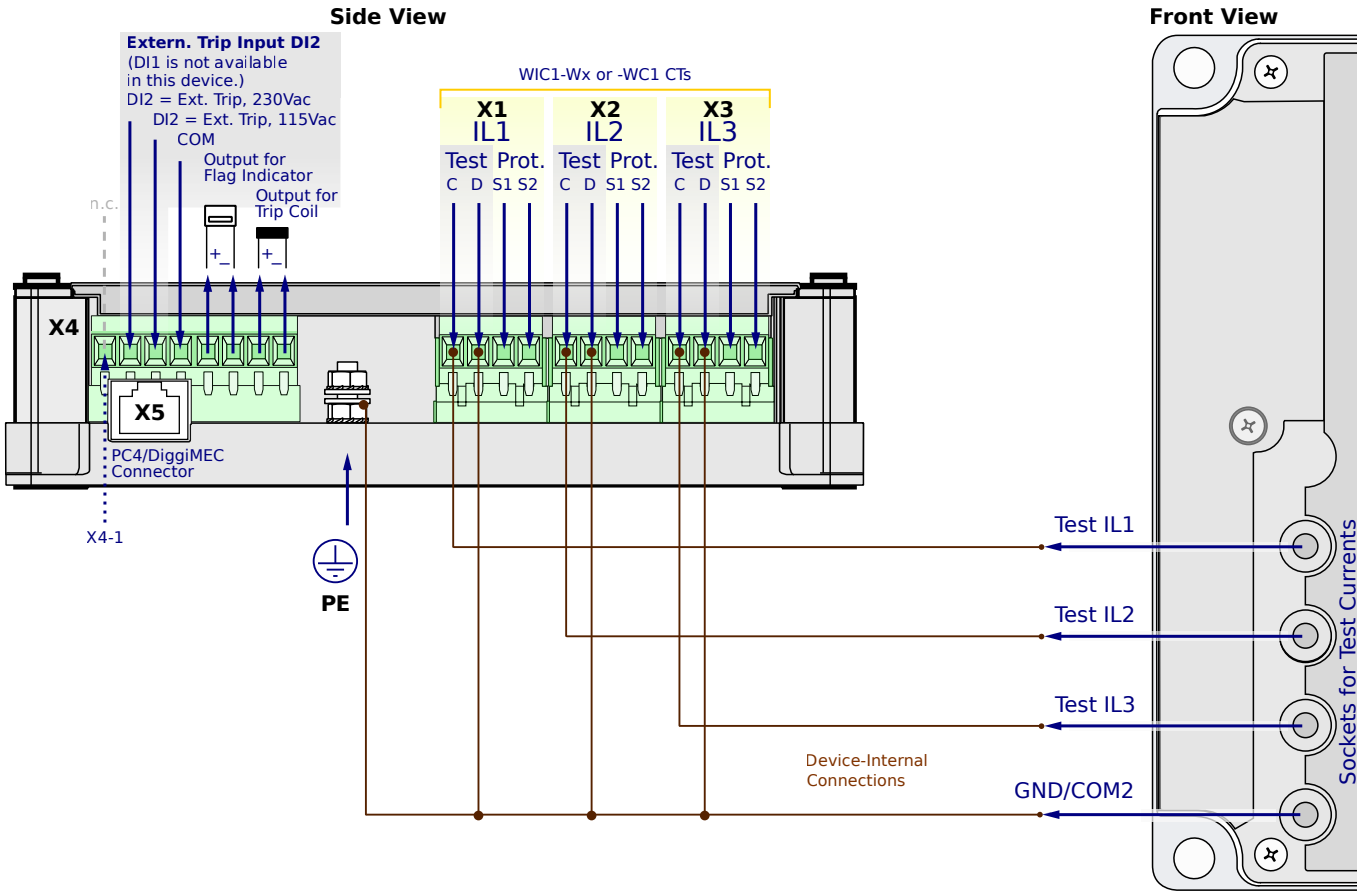


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2AAH

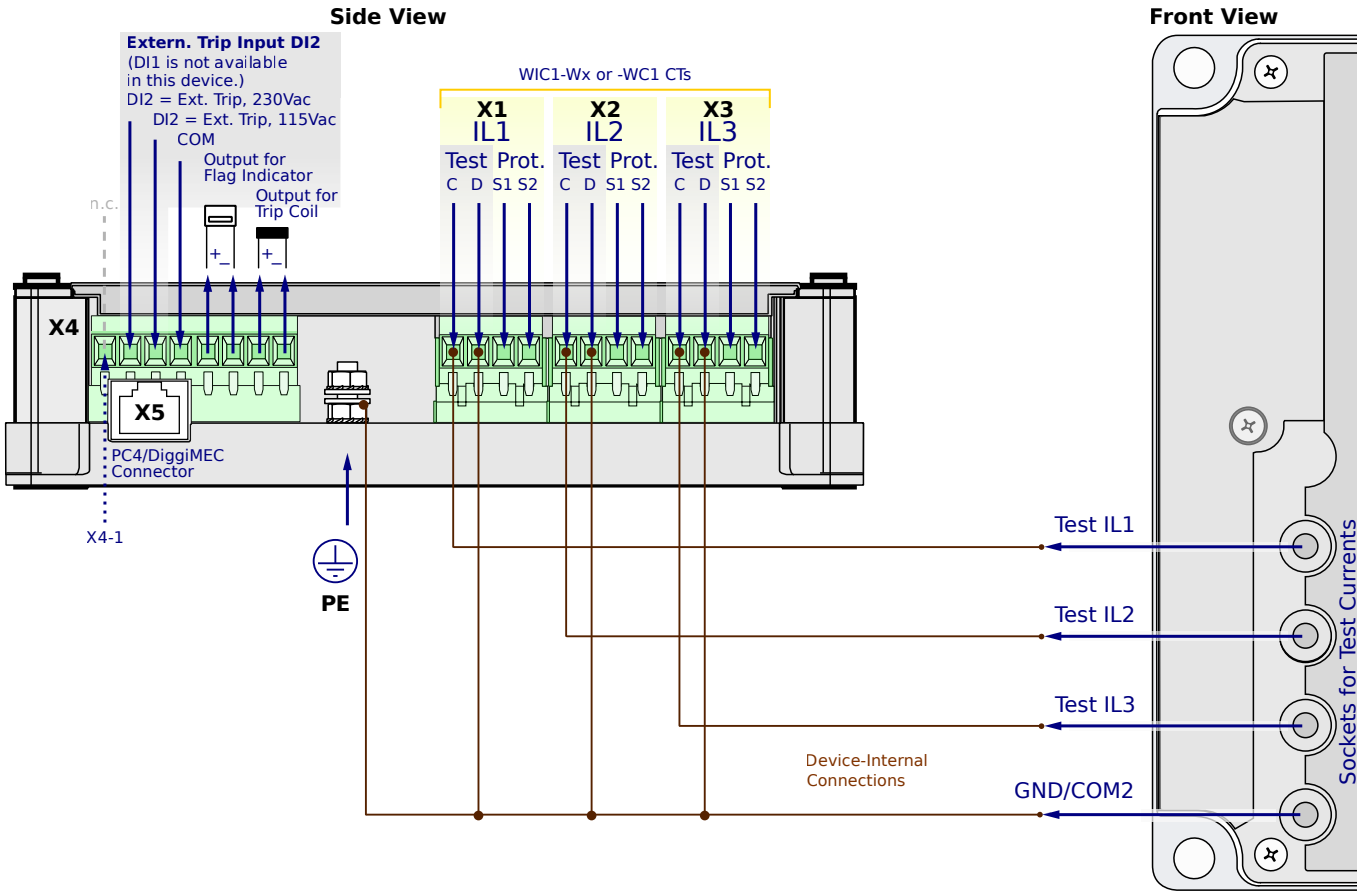


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2PA0

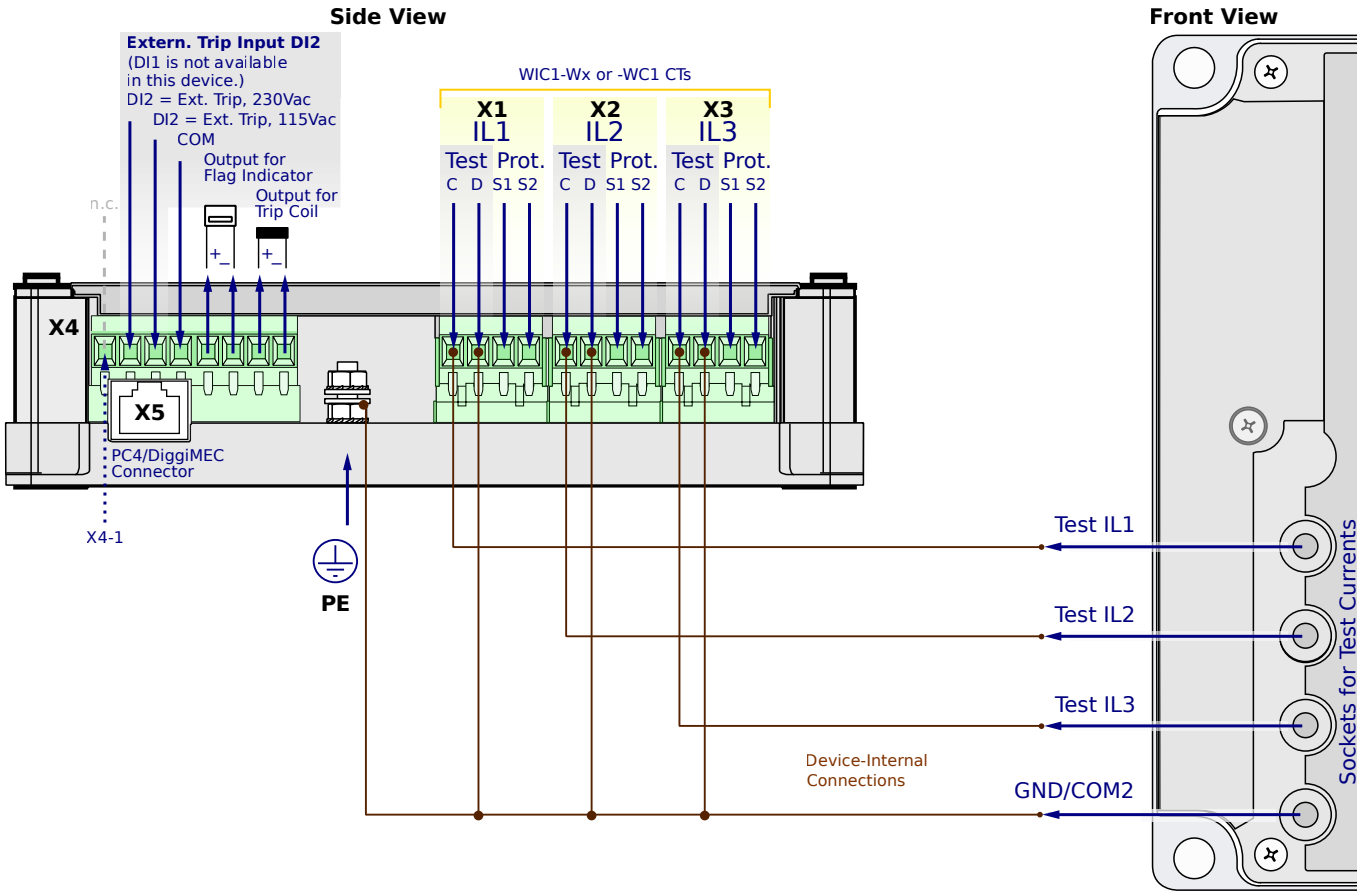


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NF2PAH

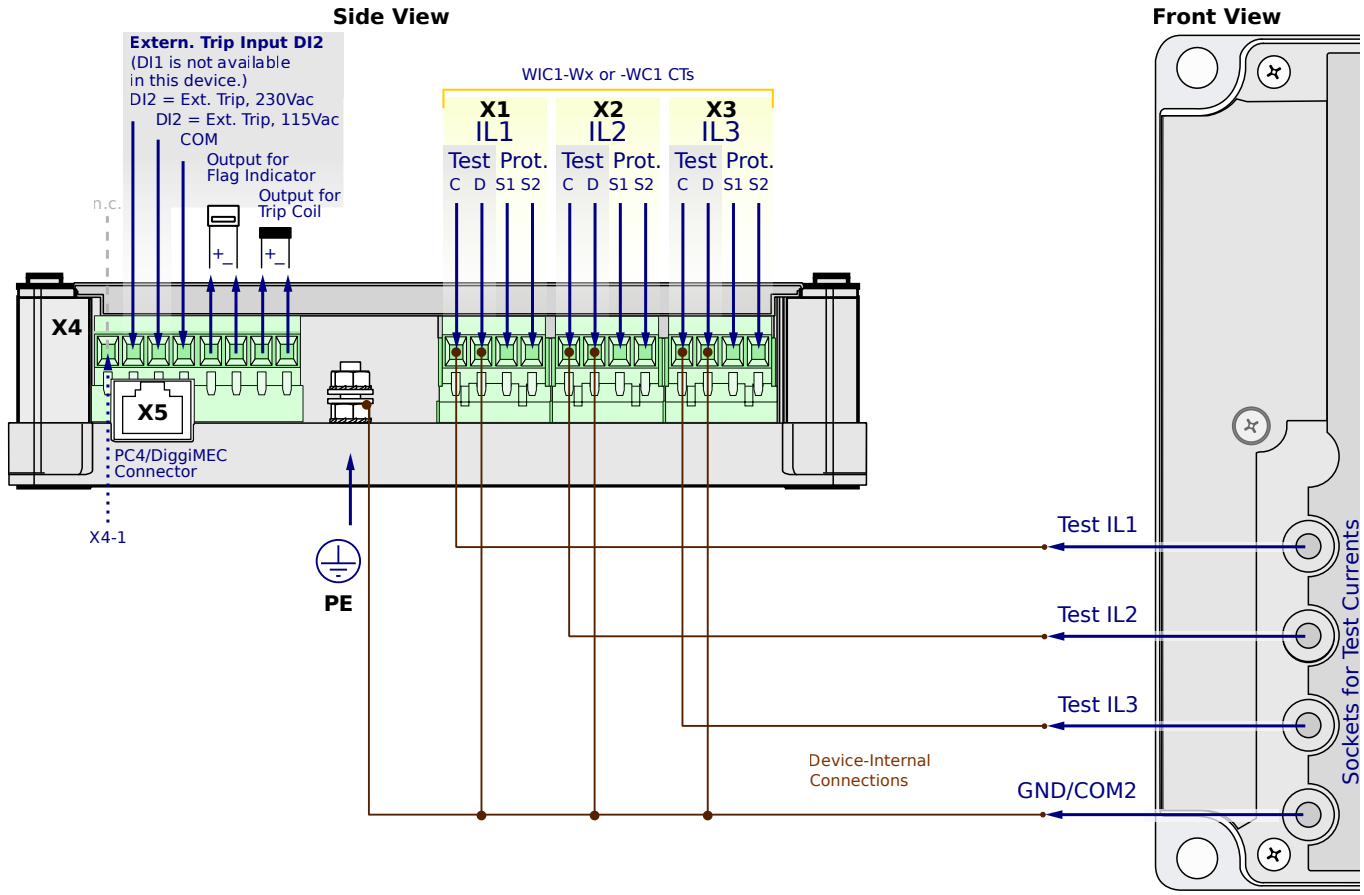


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0SA0

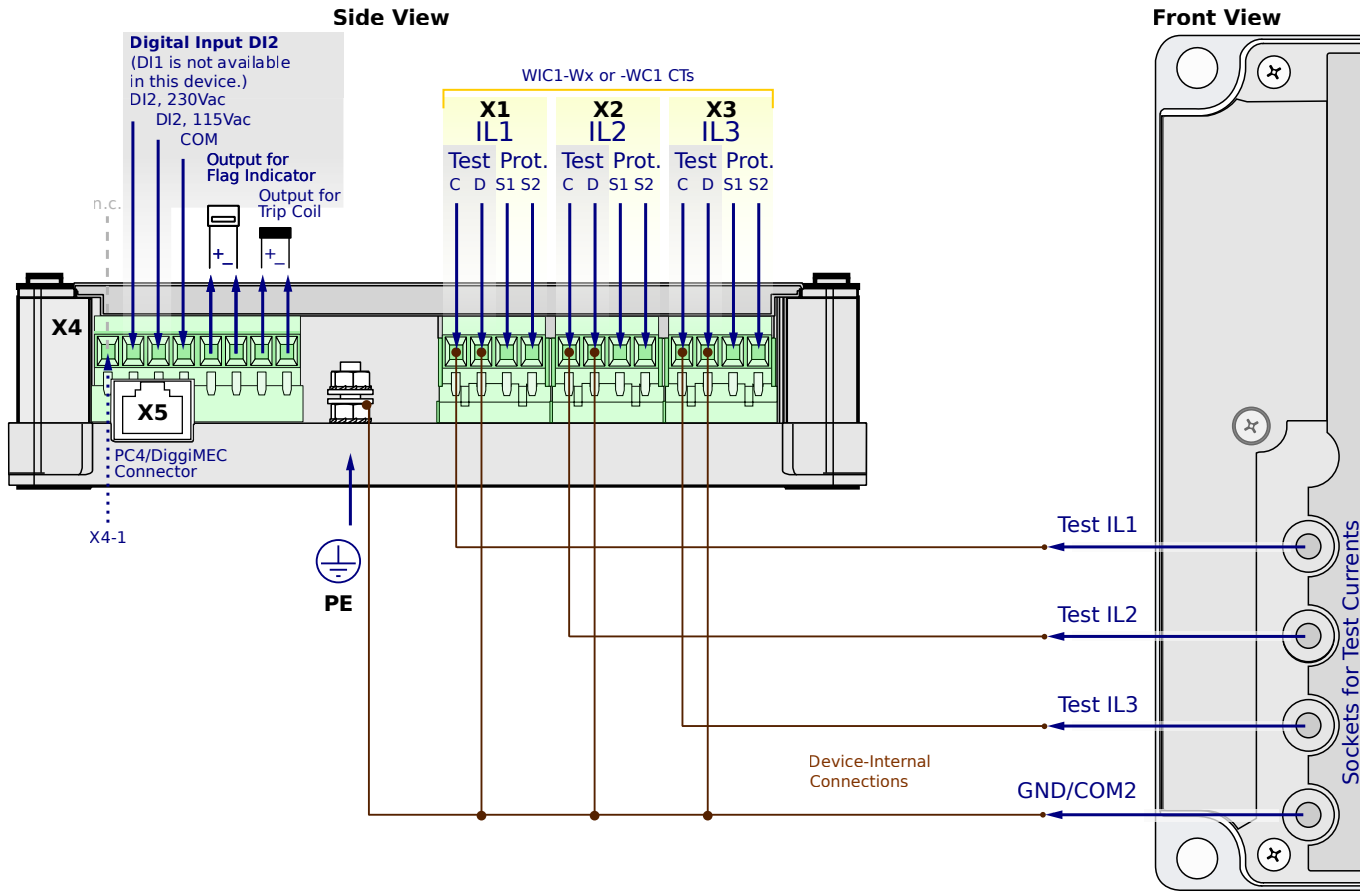


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0SAH

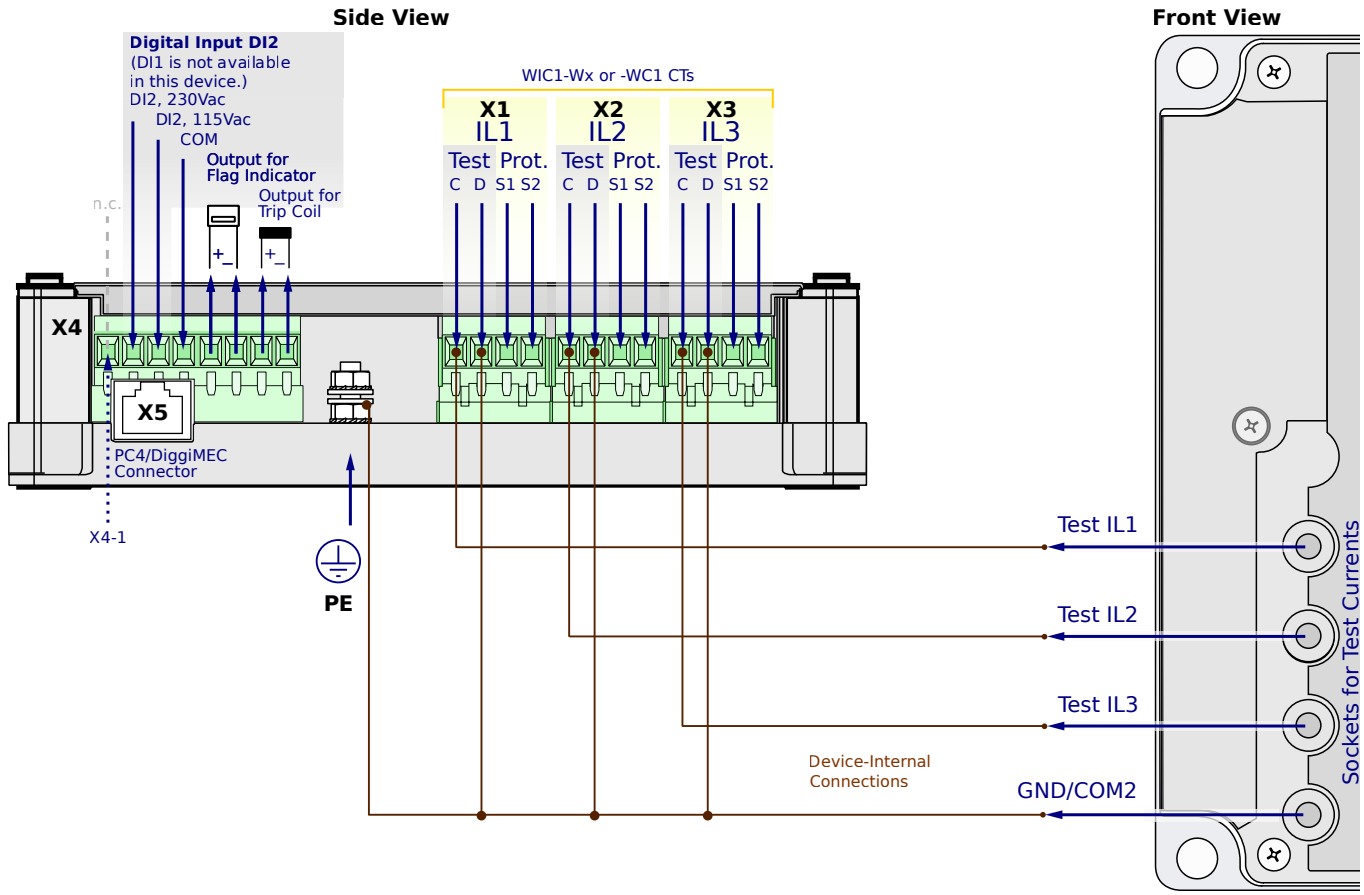


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0AA0

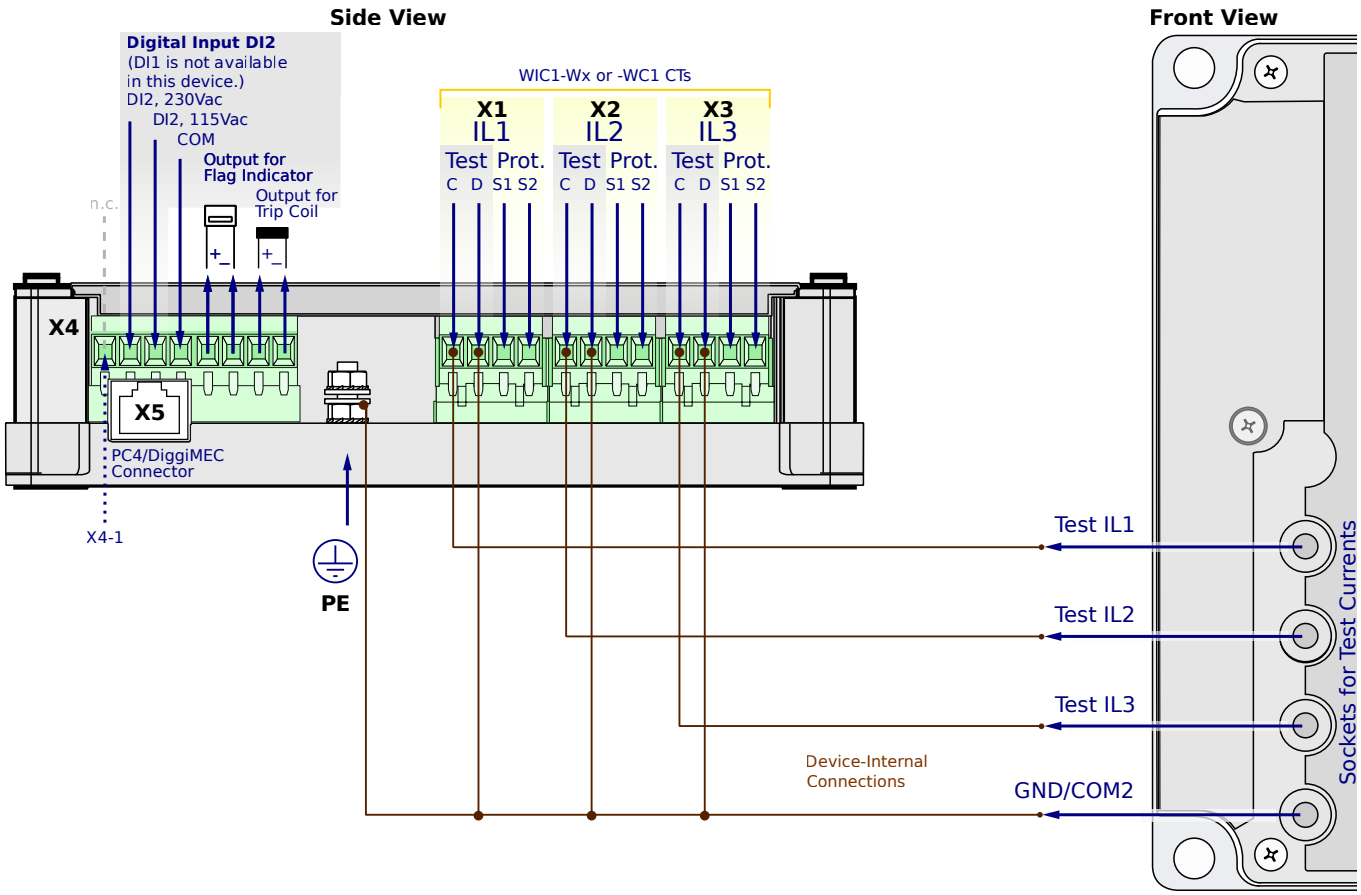


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0AAH

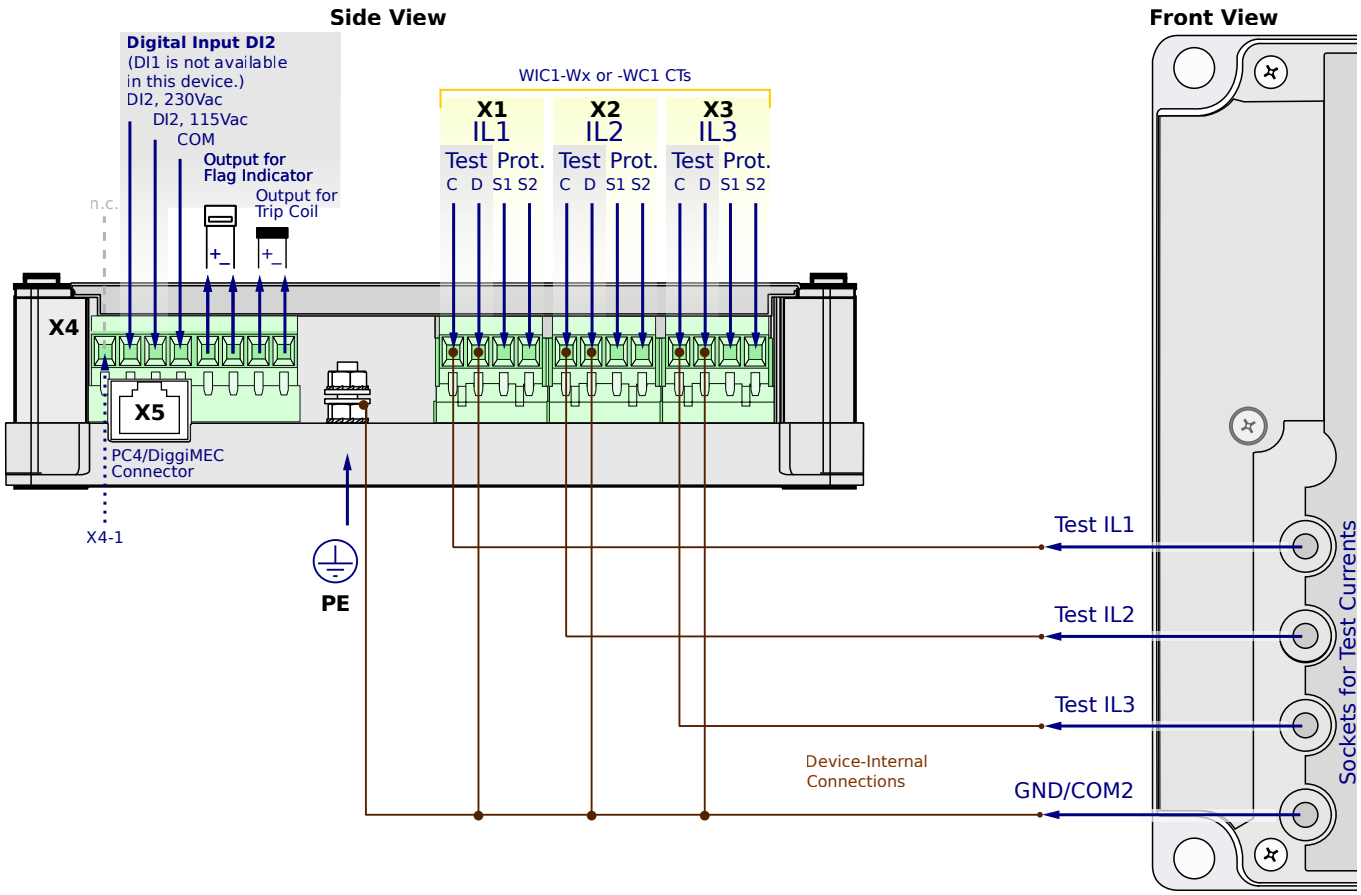


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0PA0

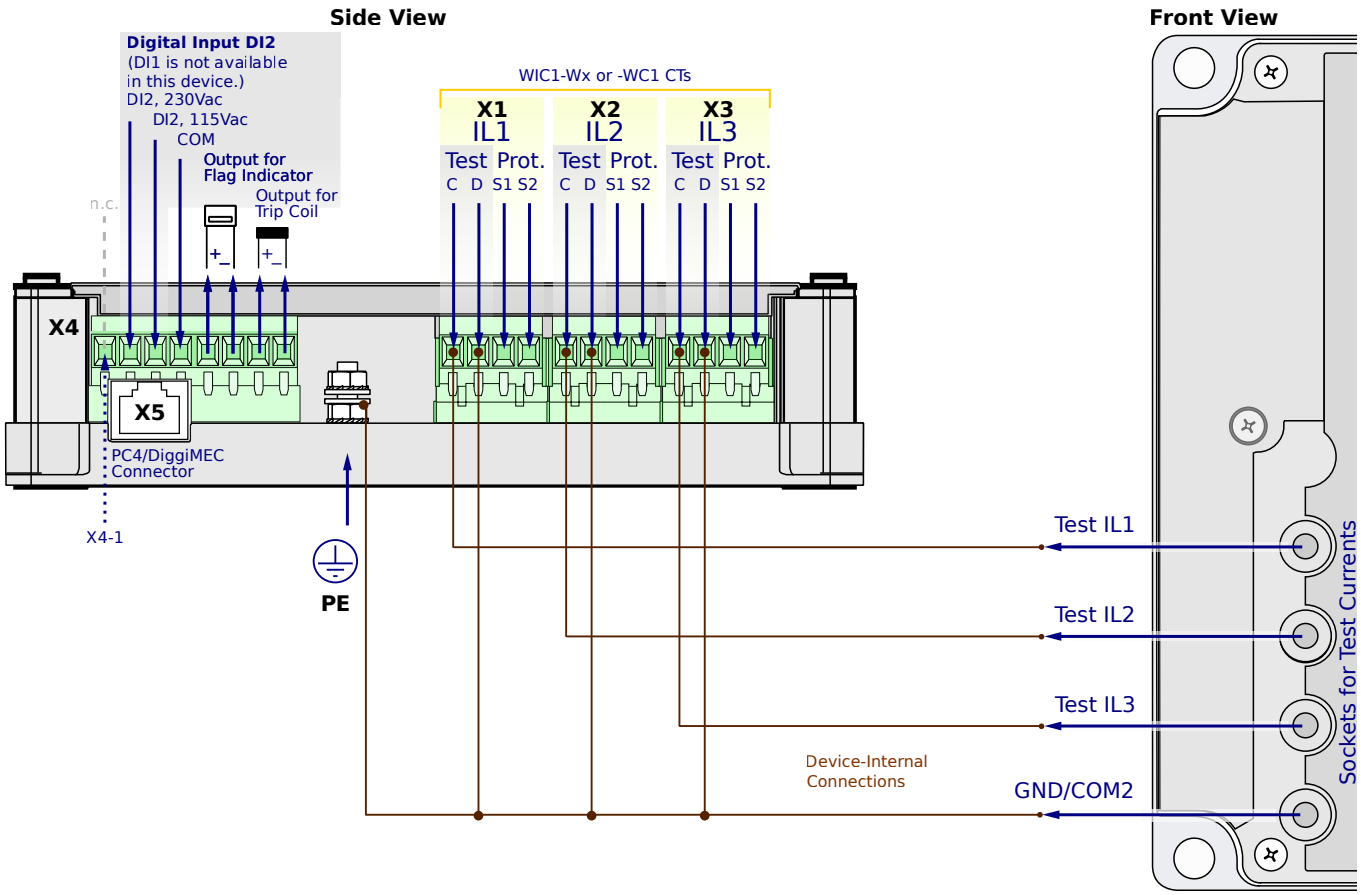


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC0PAH

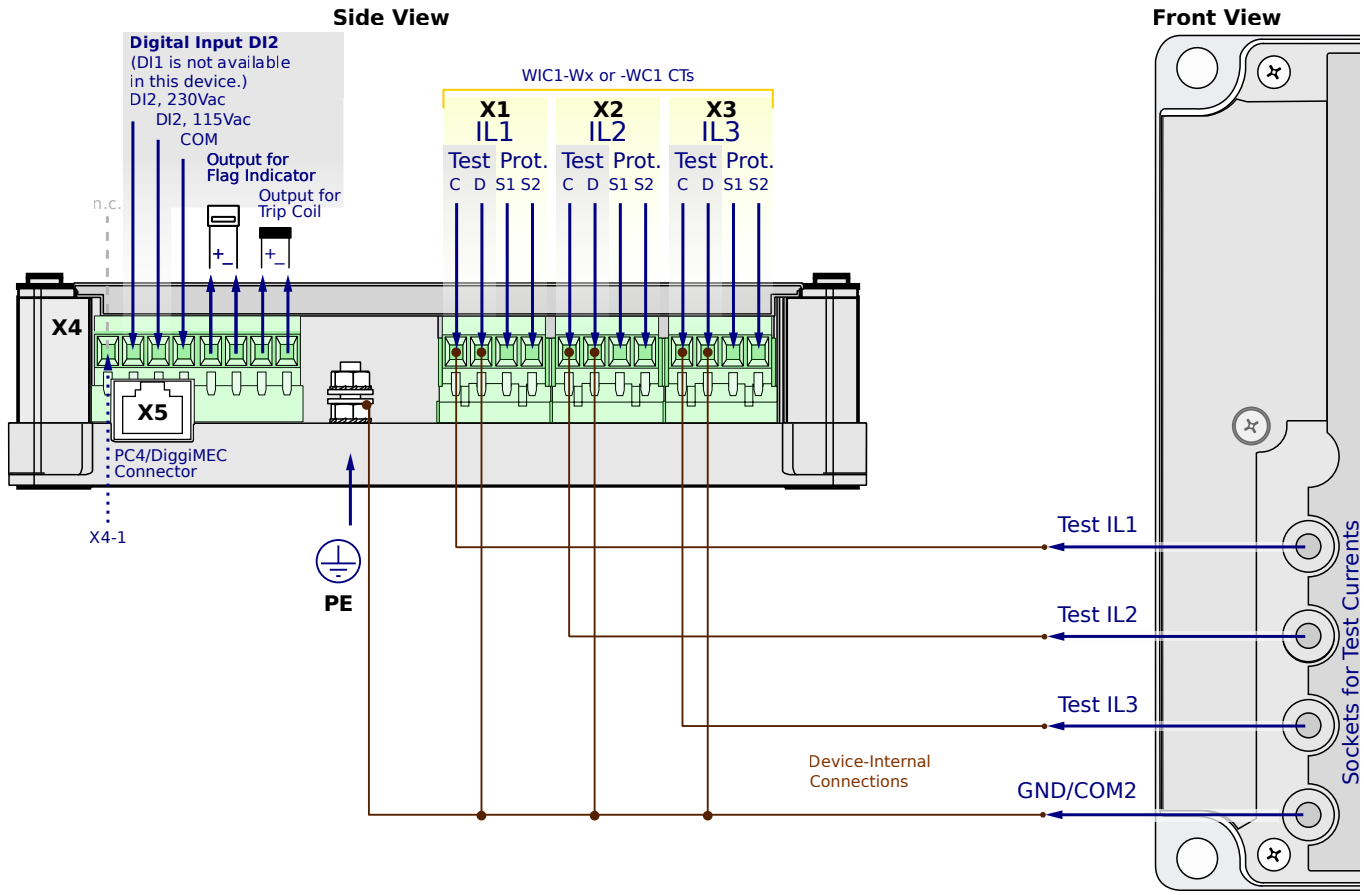


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1SA0

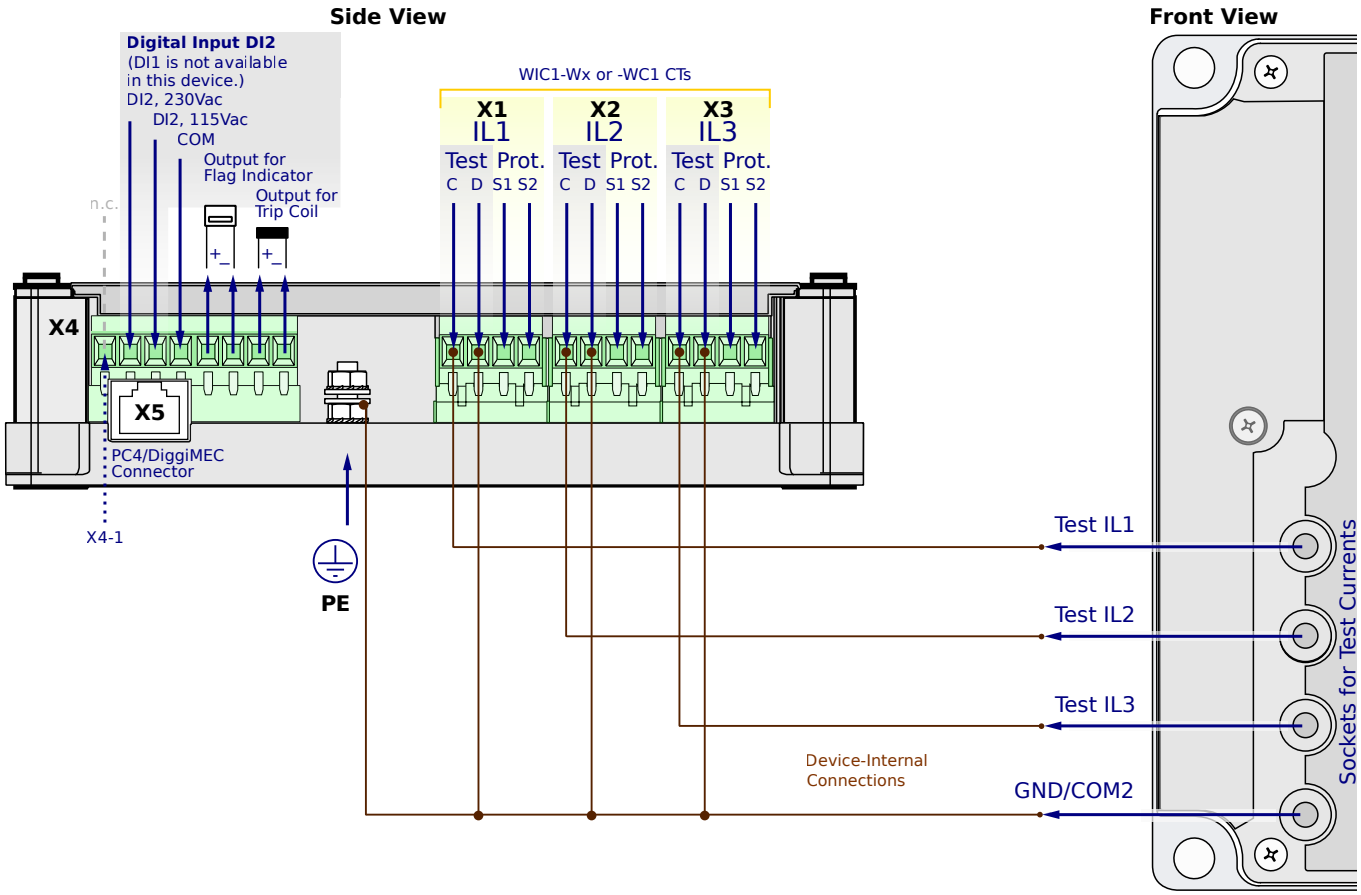


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1SAH

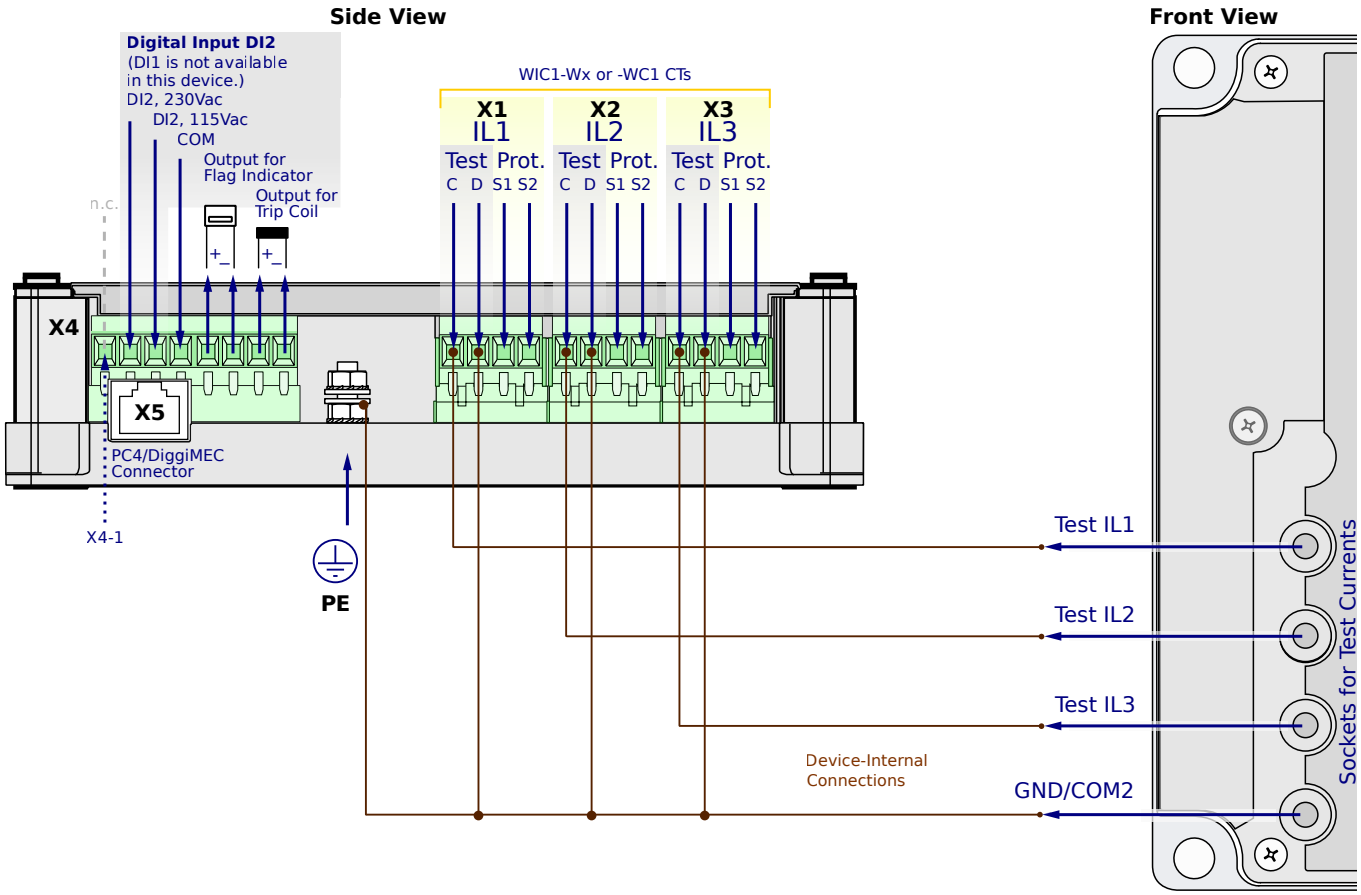


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1AA0

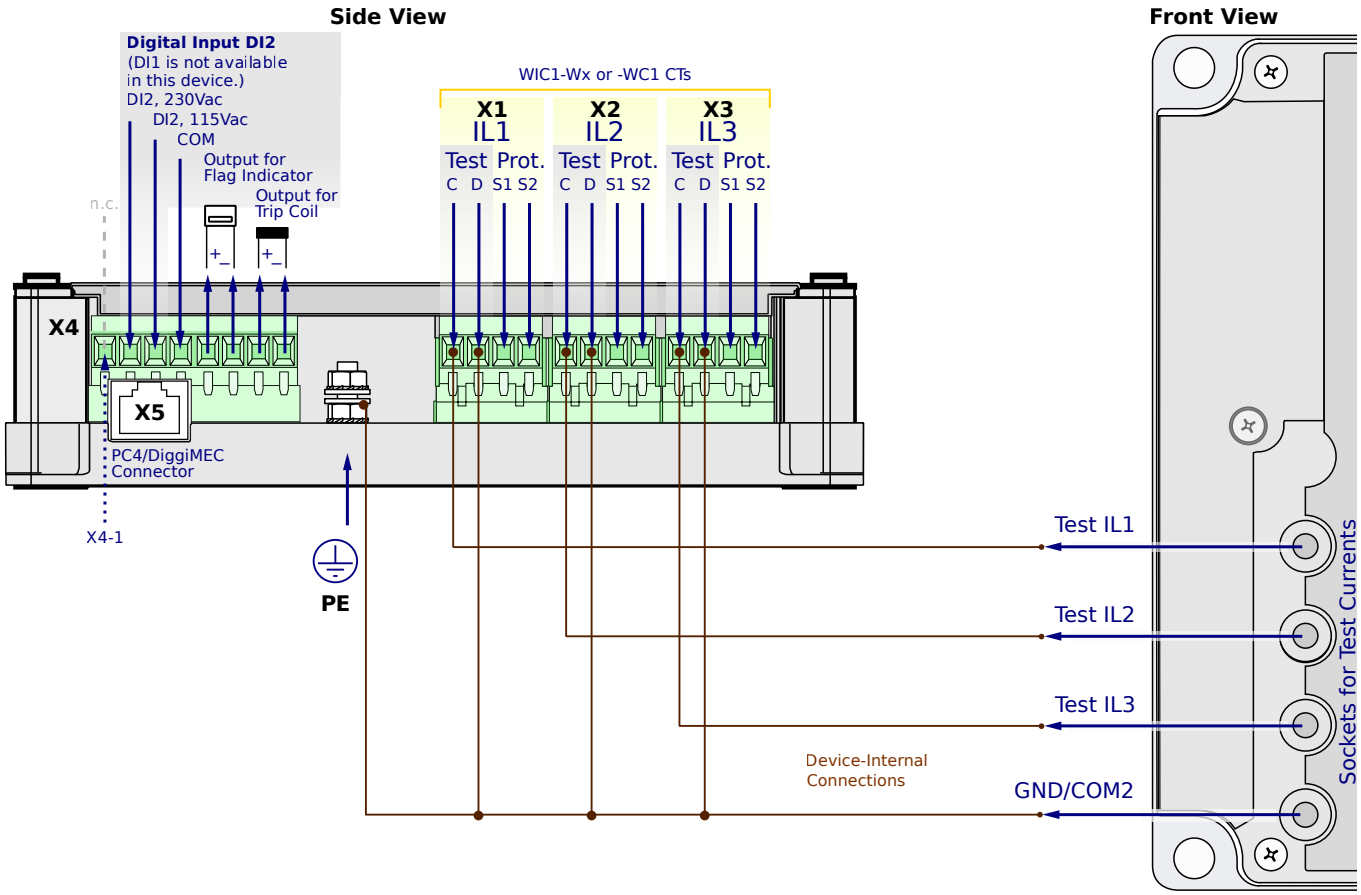


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1AAH

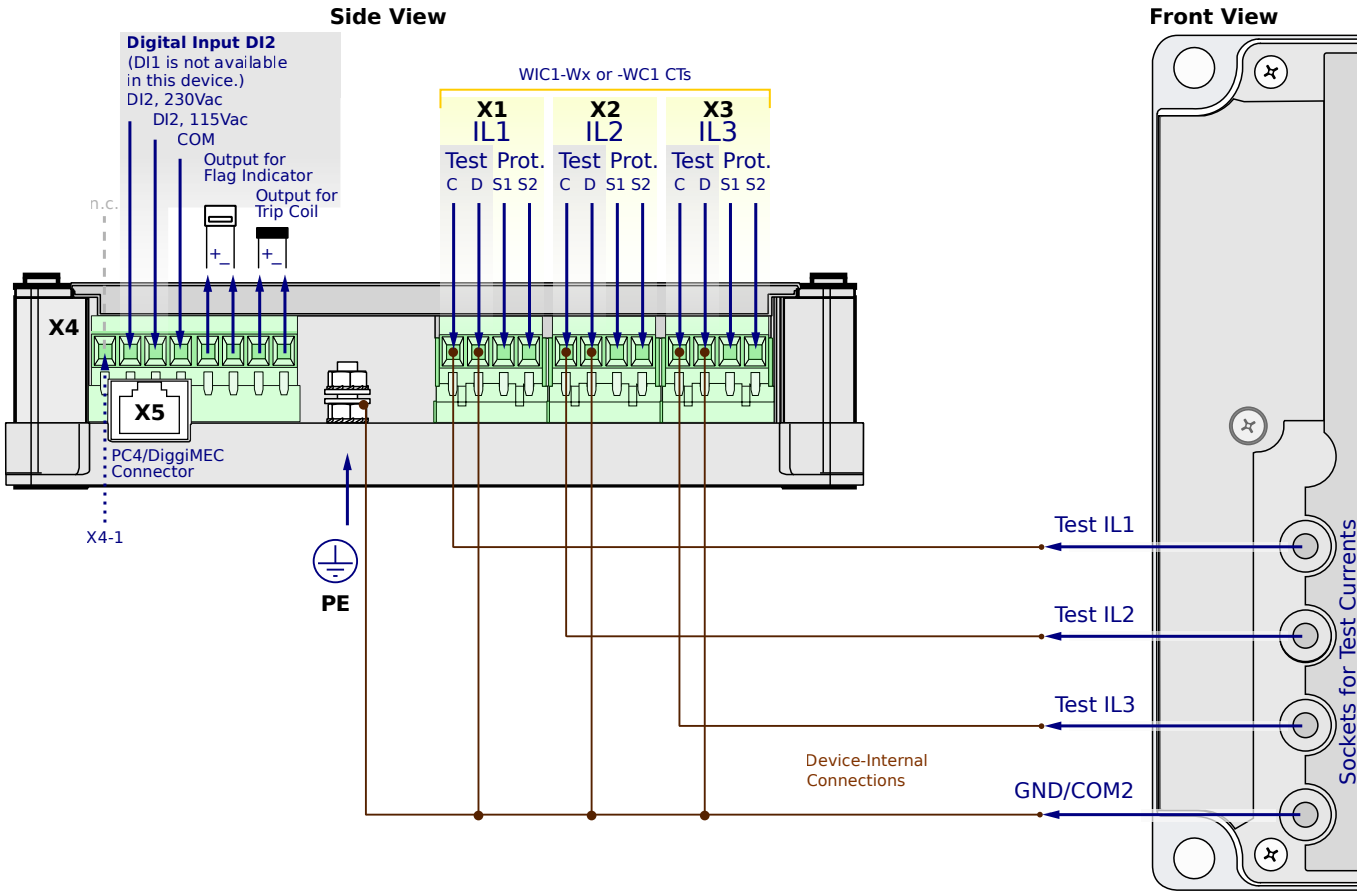


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1PA0

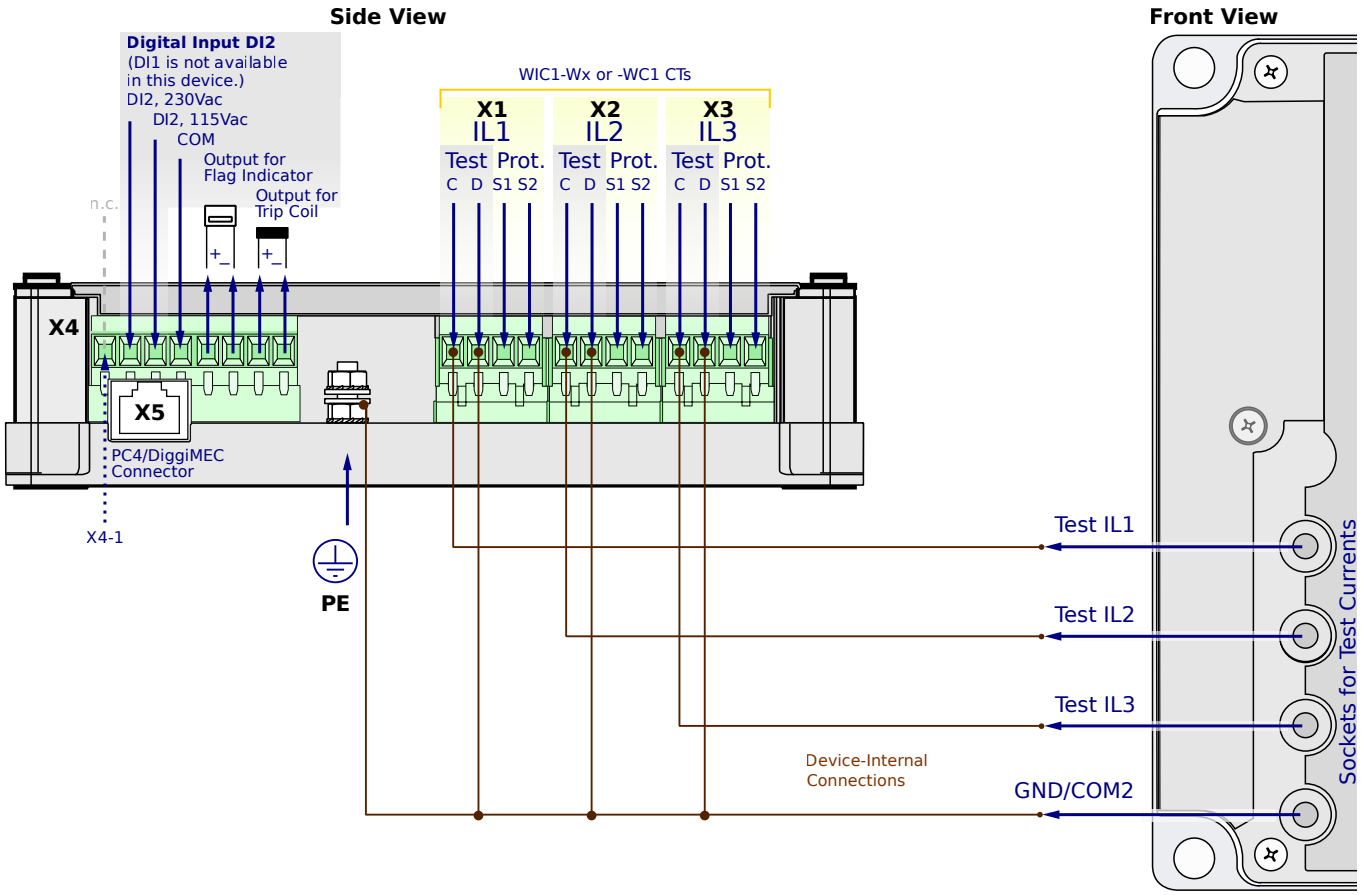


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC1PAH

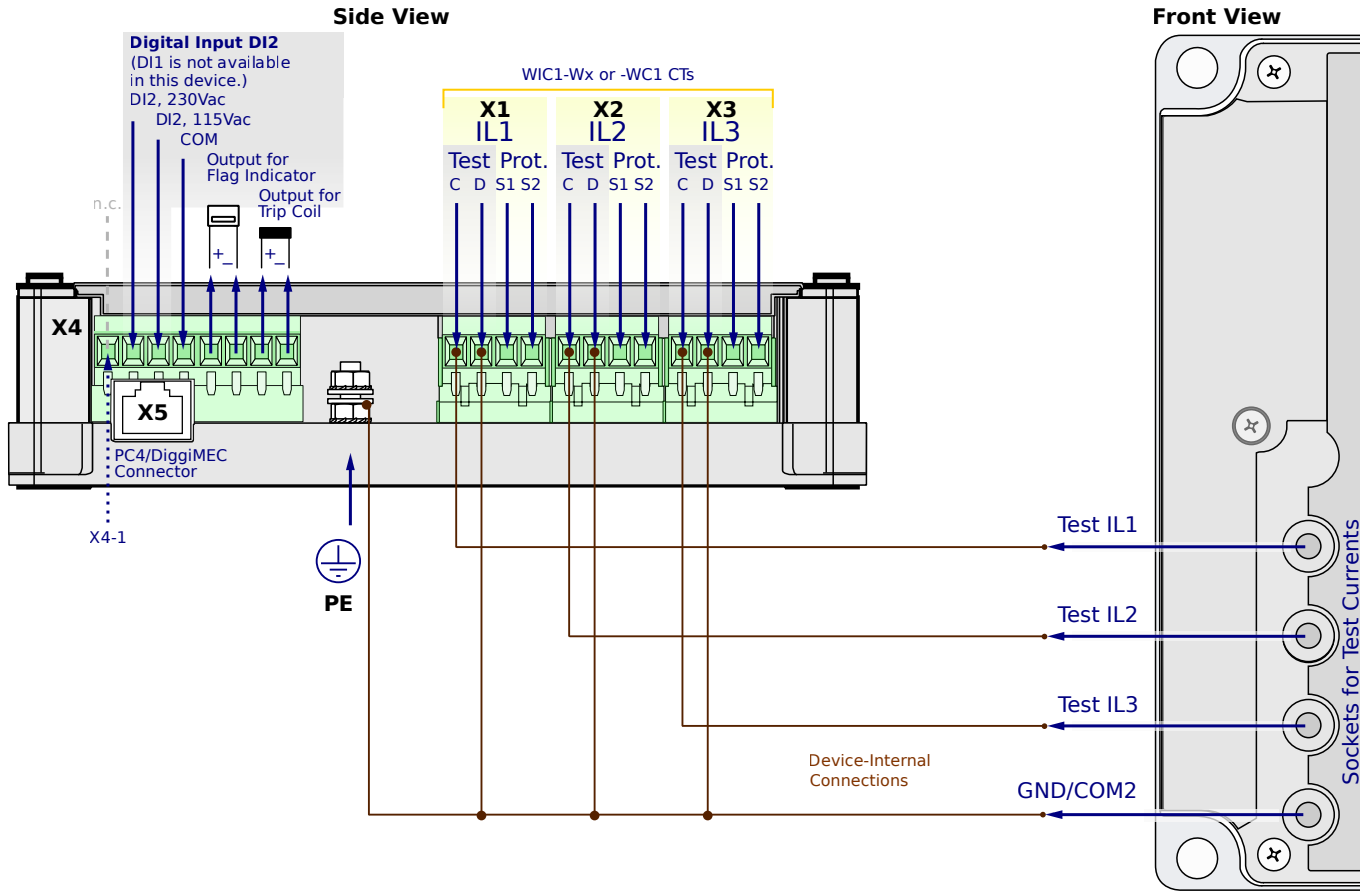


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2SA0

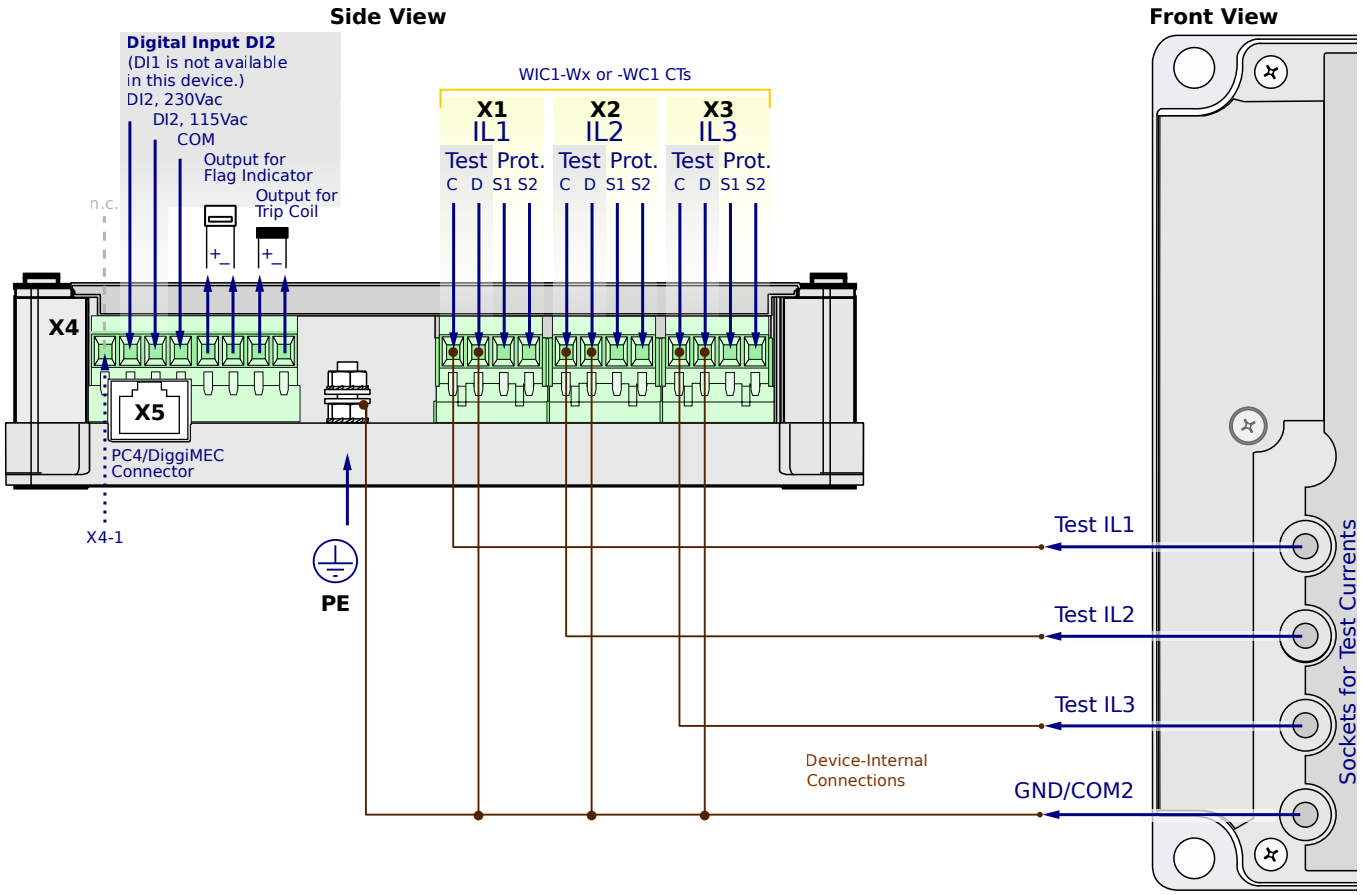


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2SAH

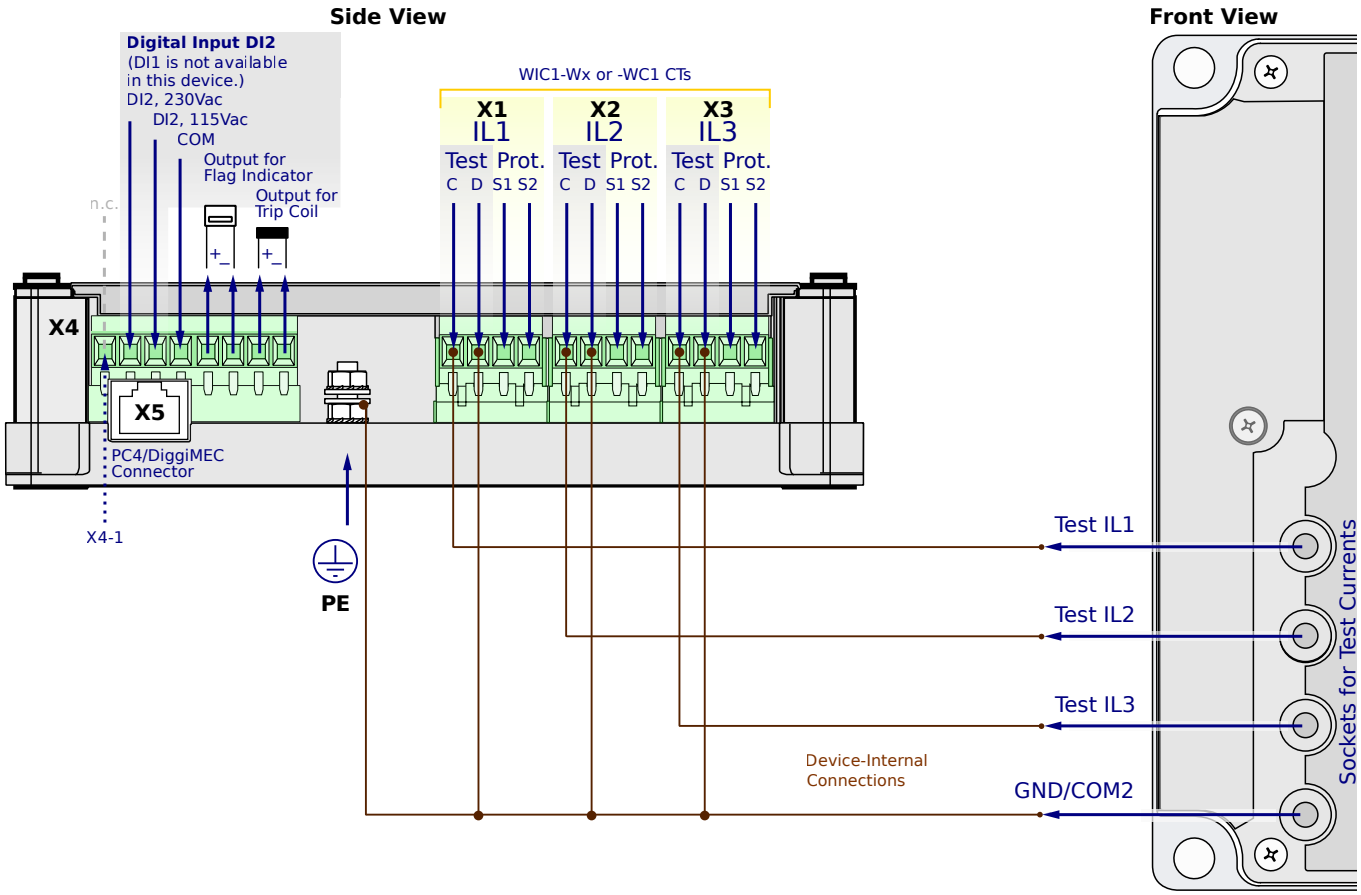


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2AA0

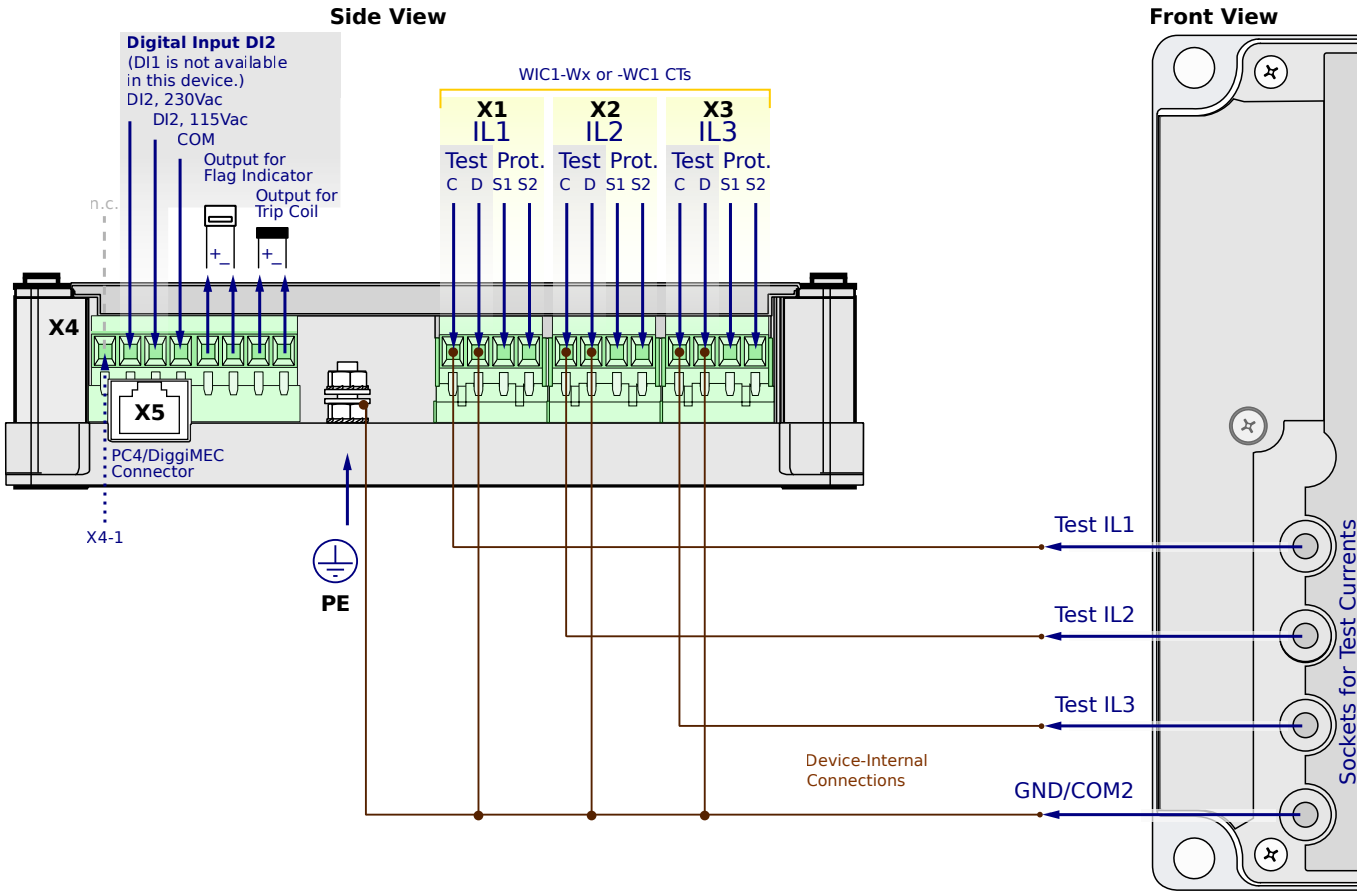


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2AAH

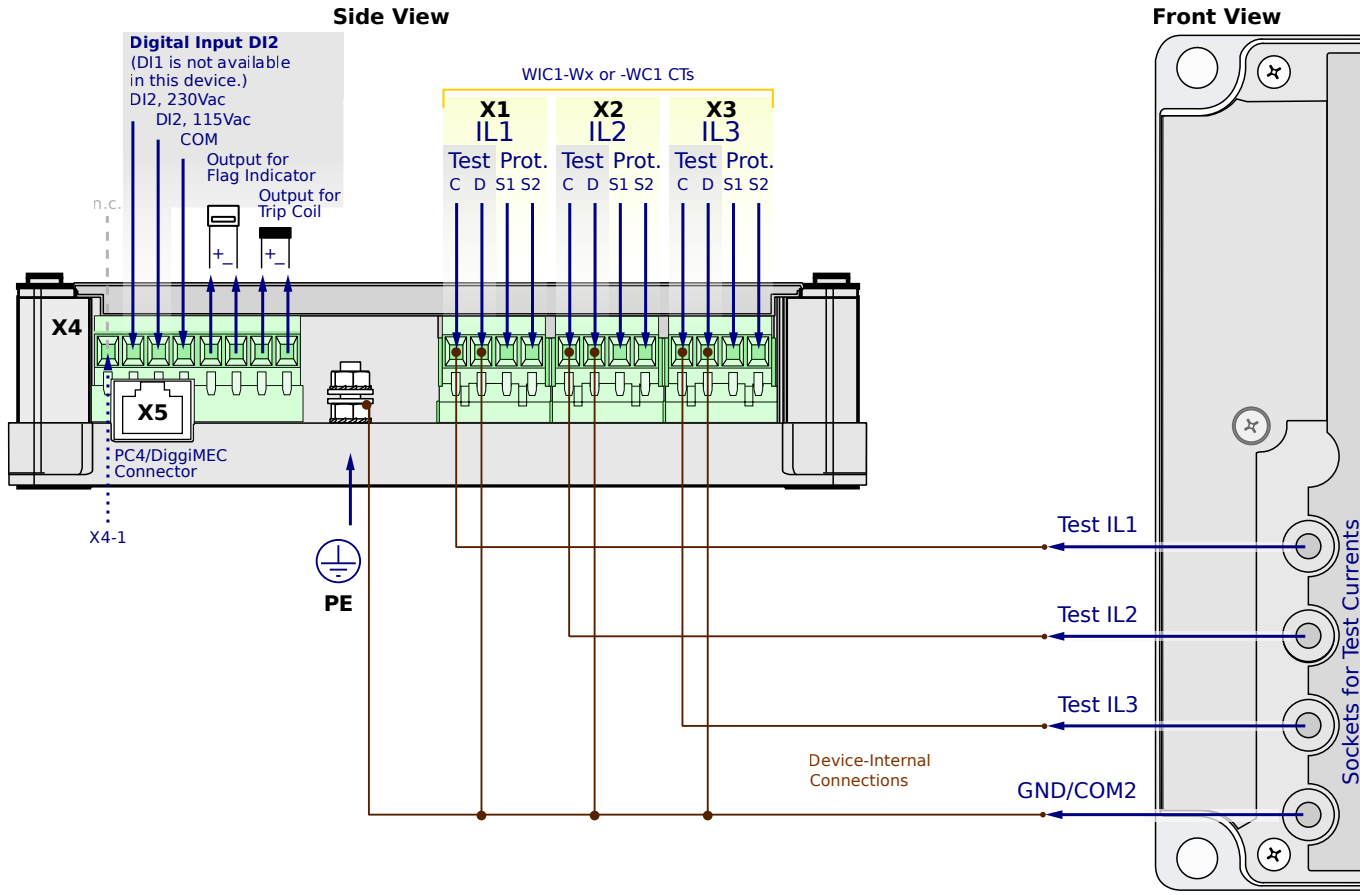


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2PA0

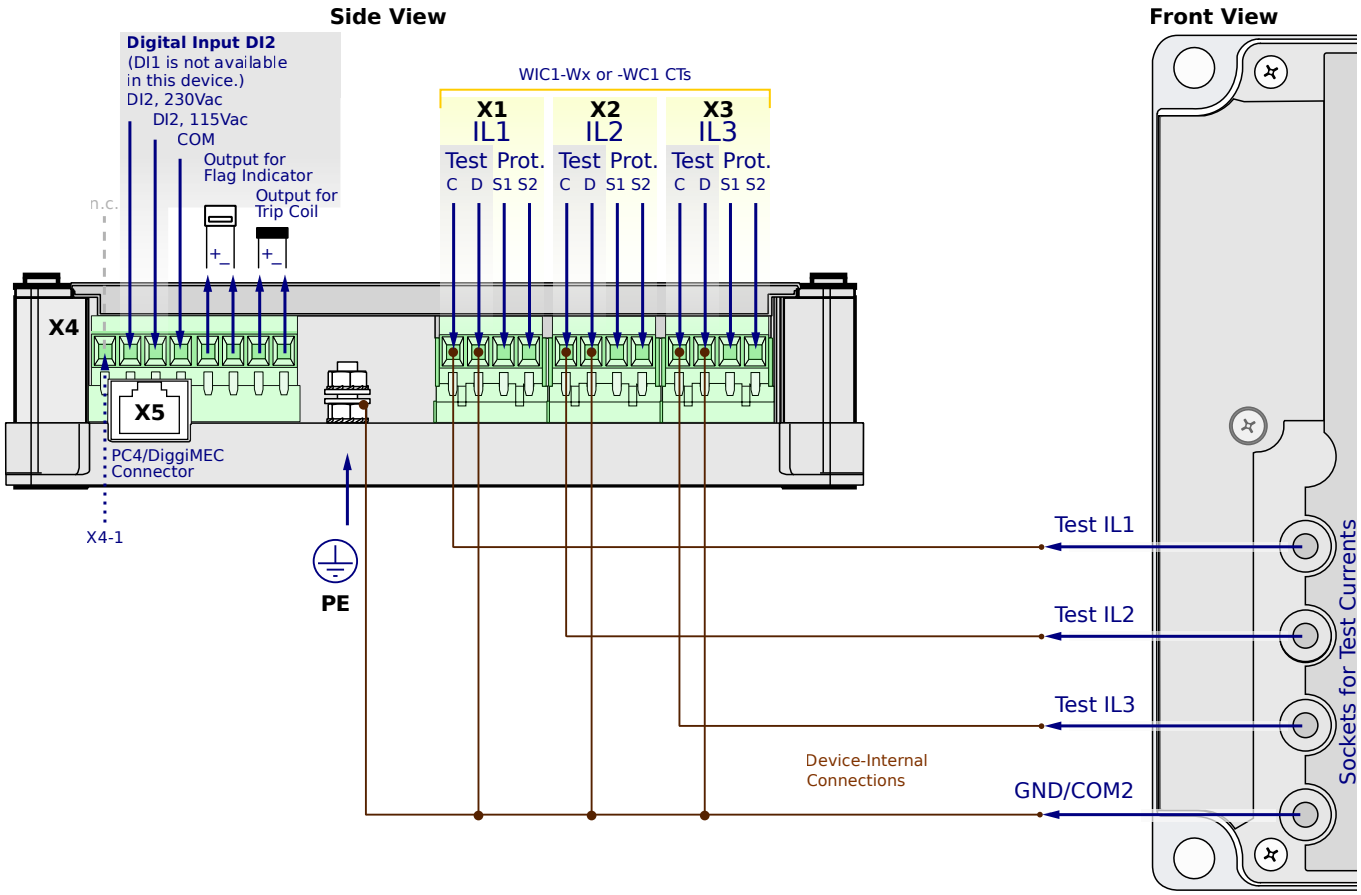


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6NC2PAH

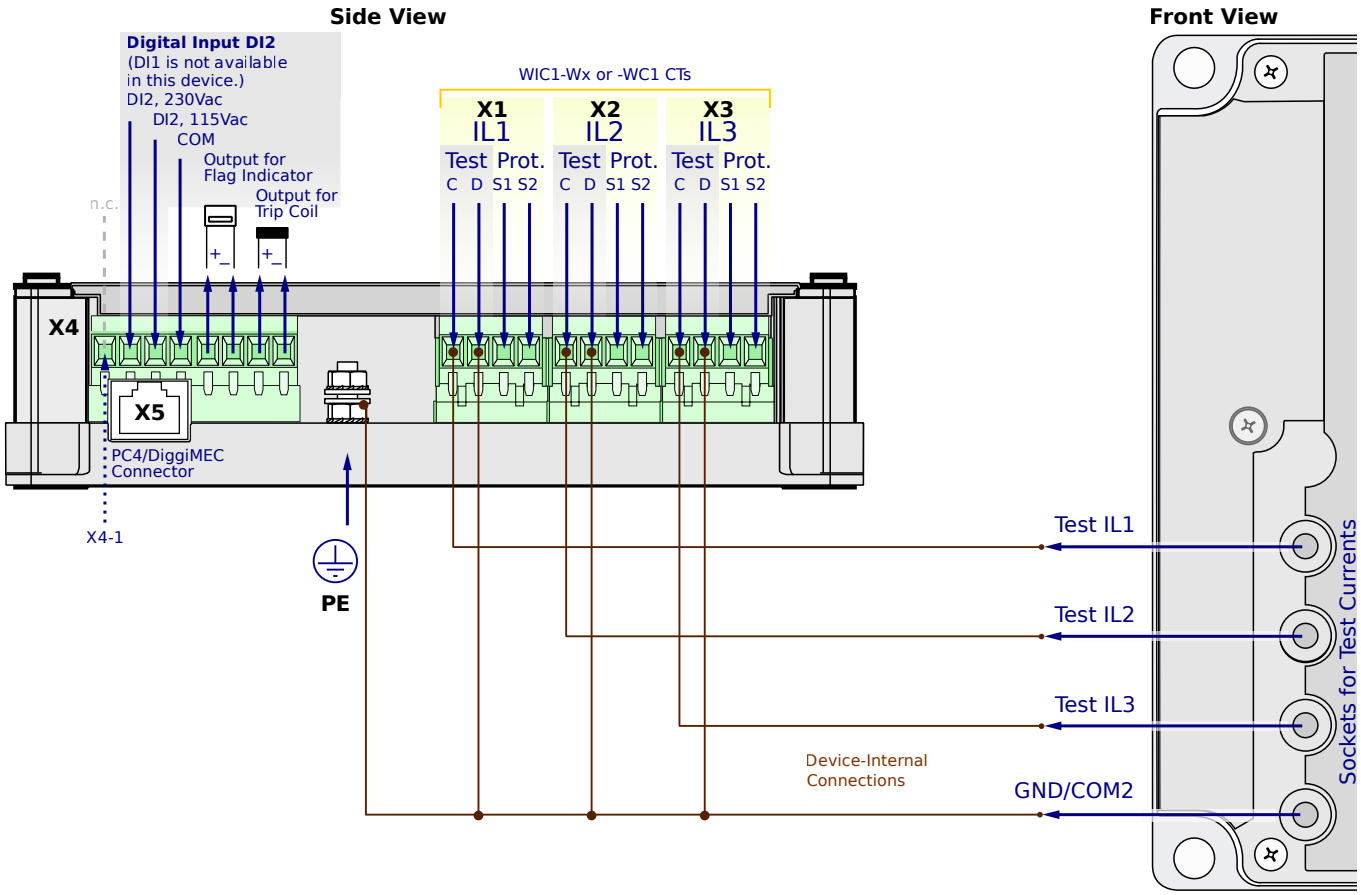


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1SA0

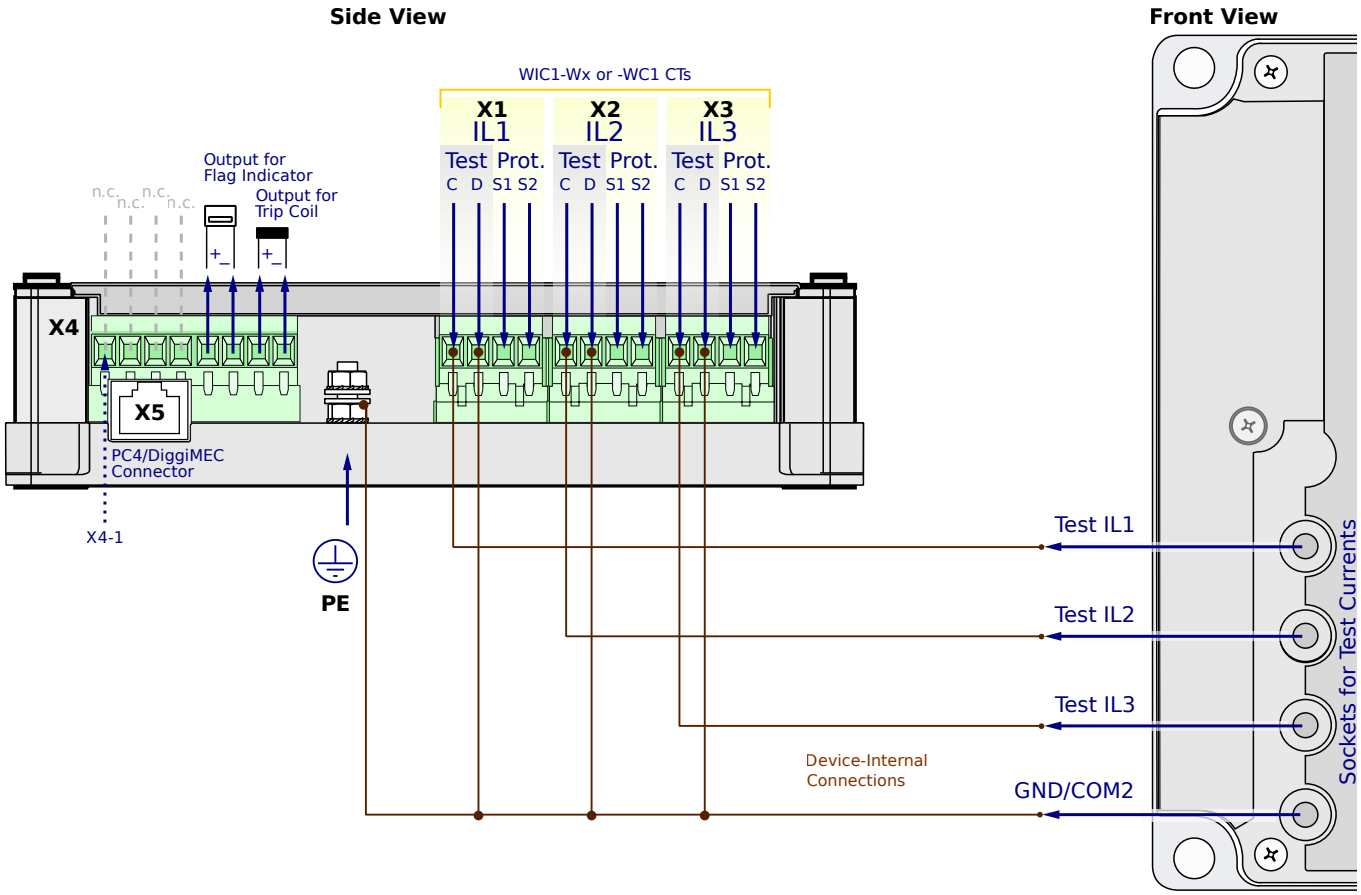


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1SAH

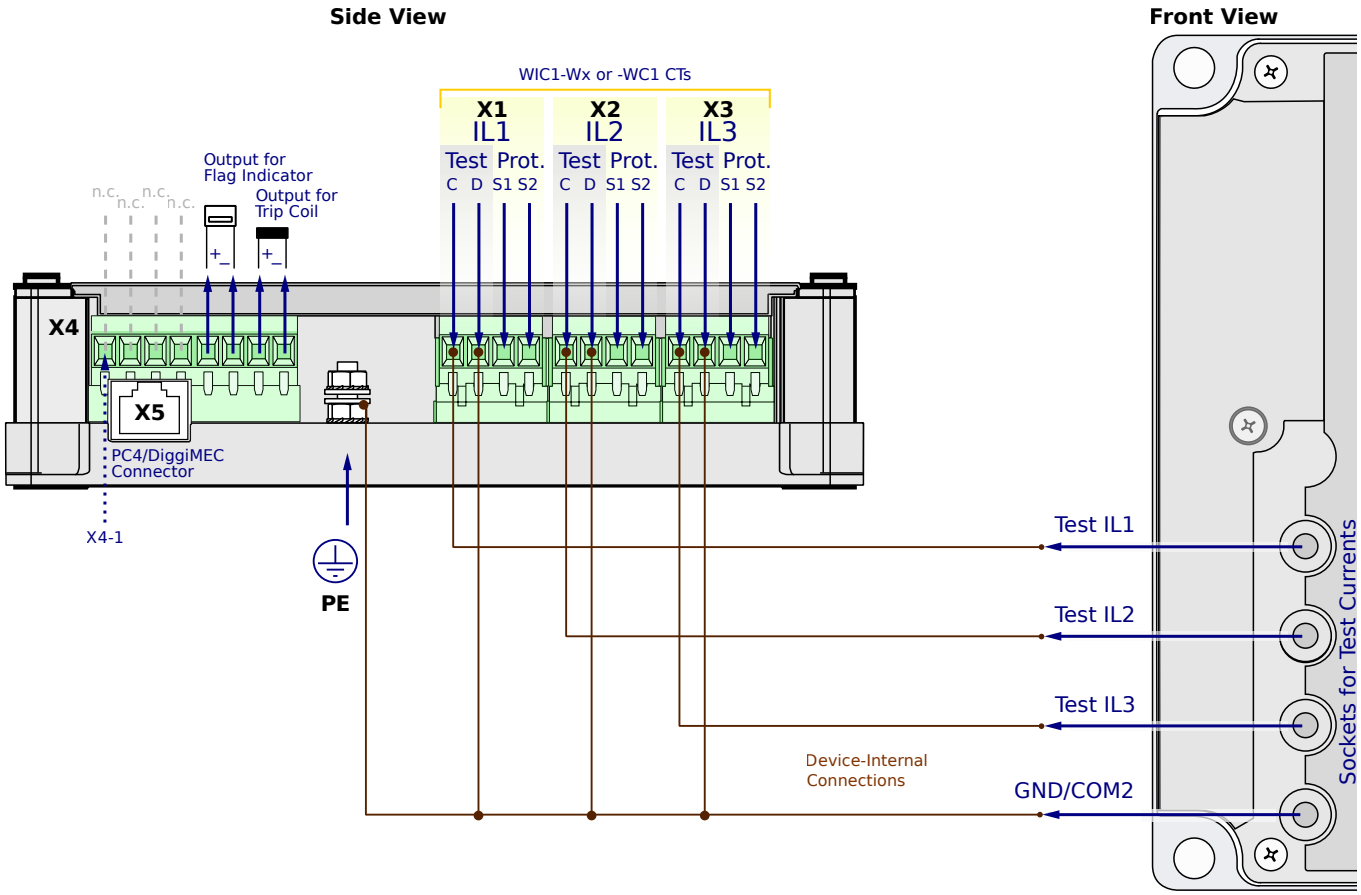


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1AA0

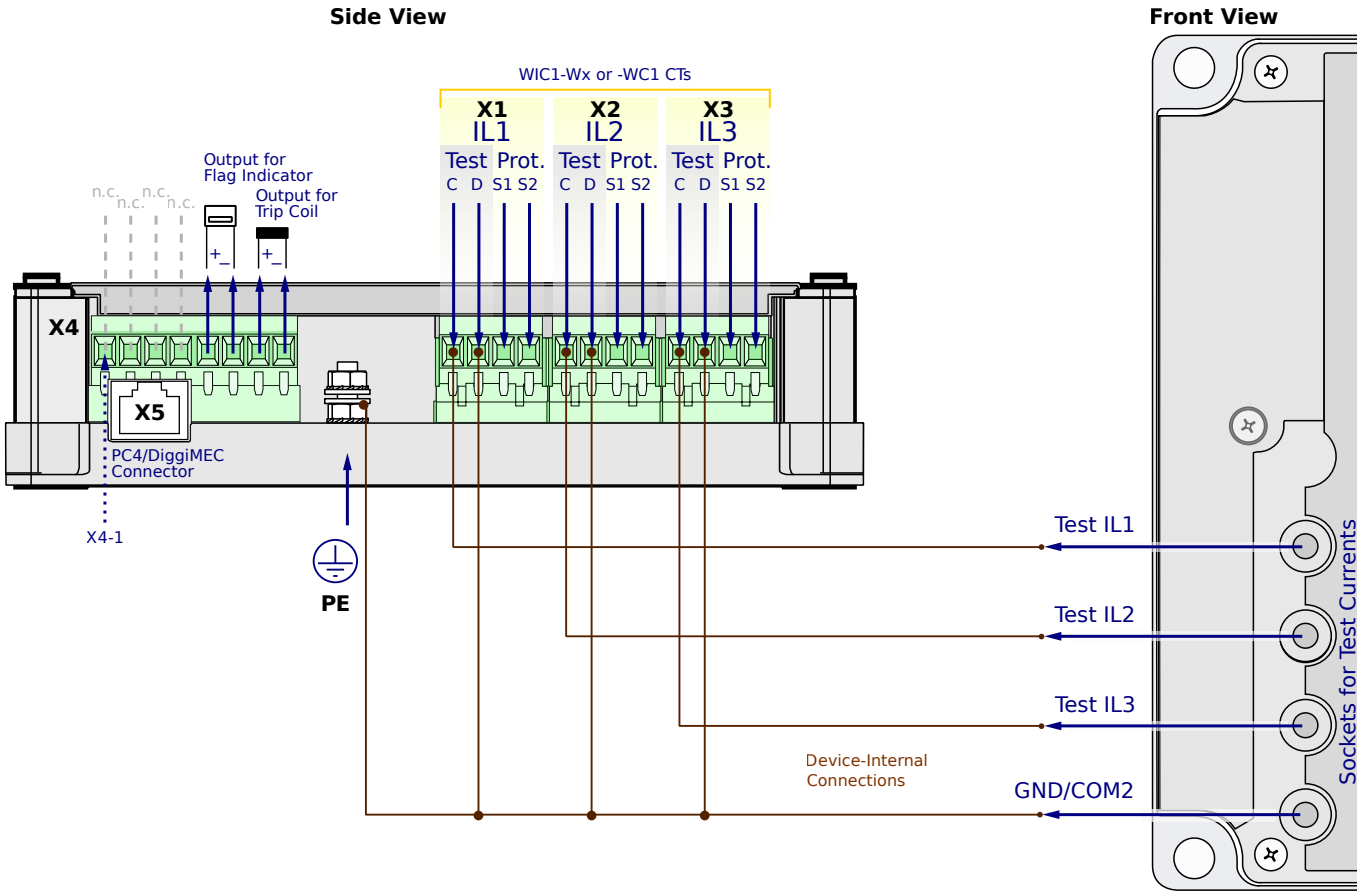


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1AAH

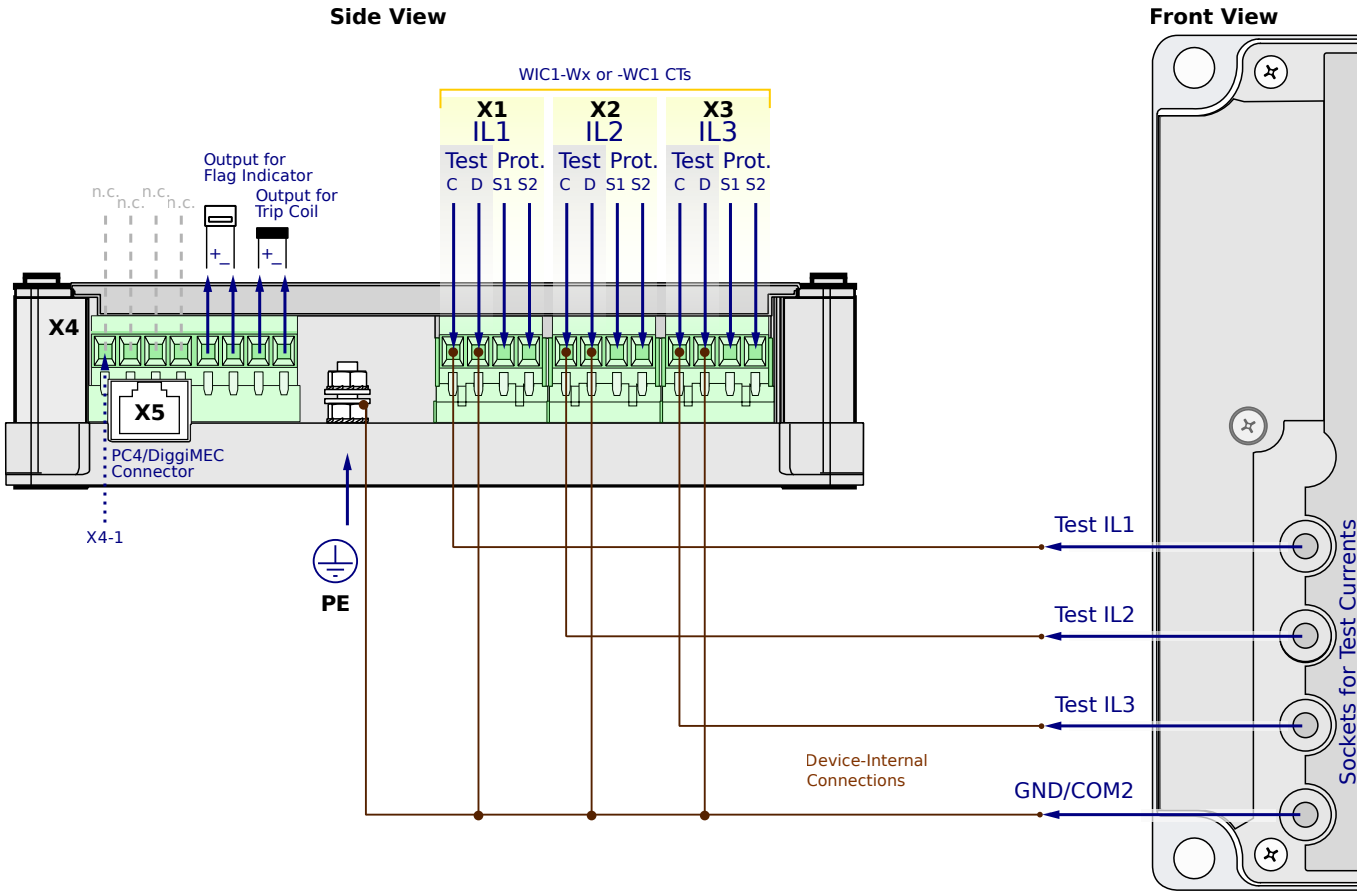


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1PA0

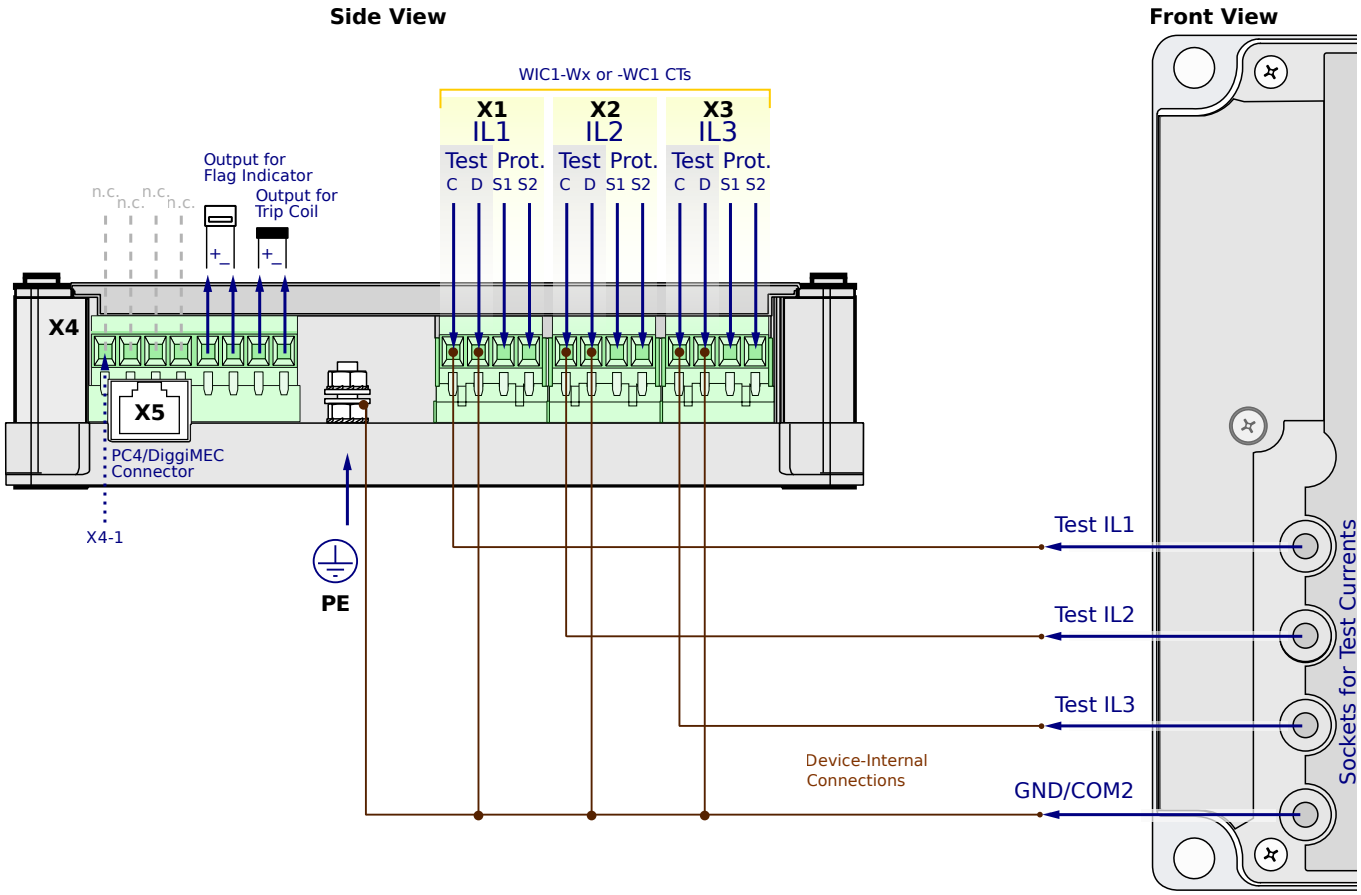


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN1PAH

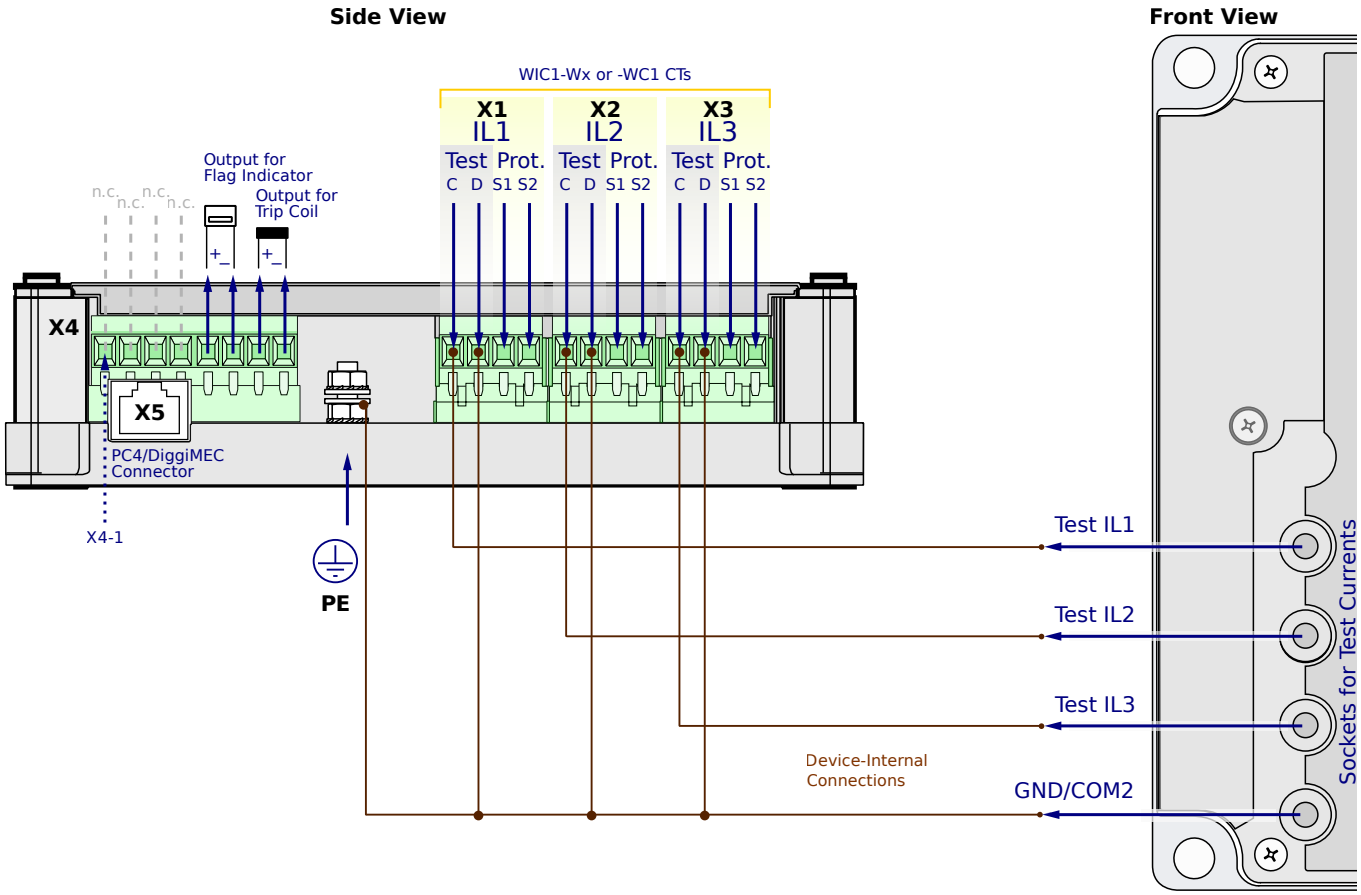


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2SA0

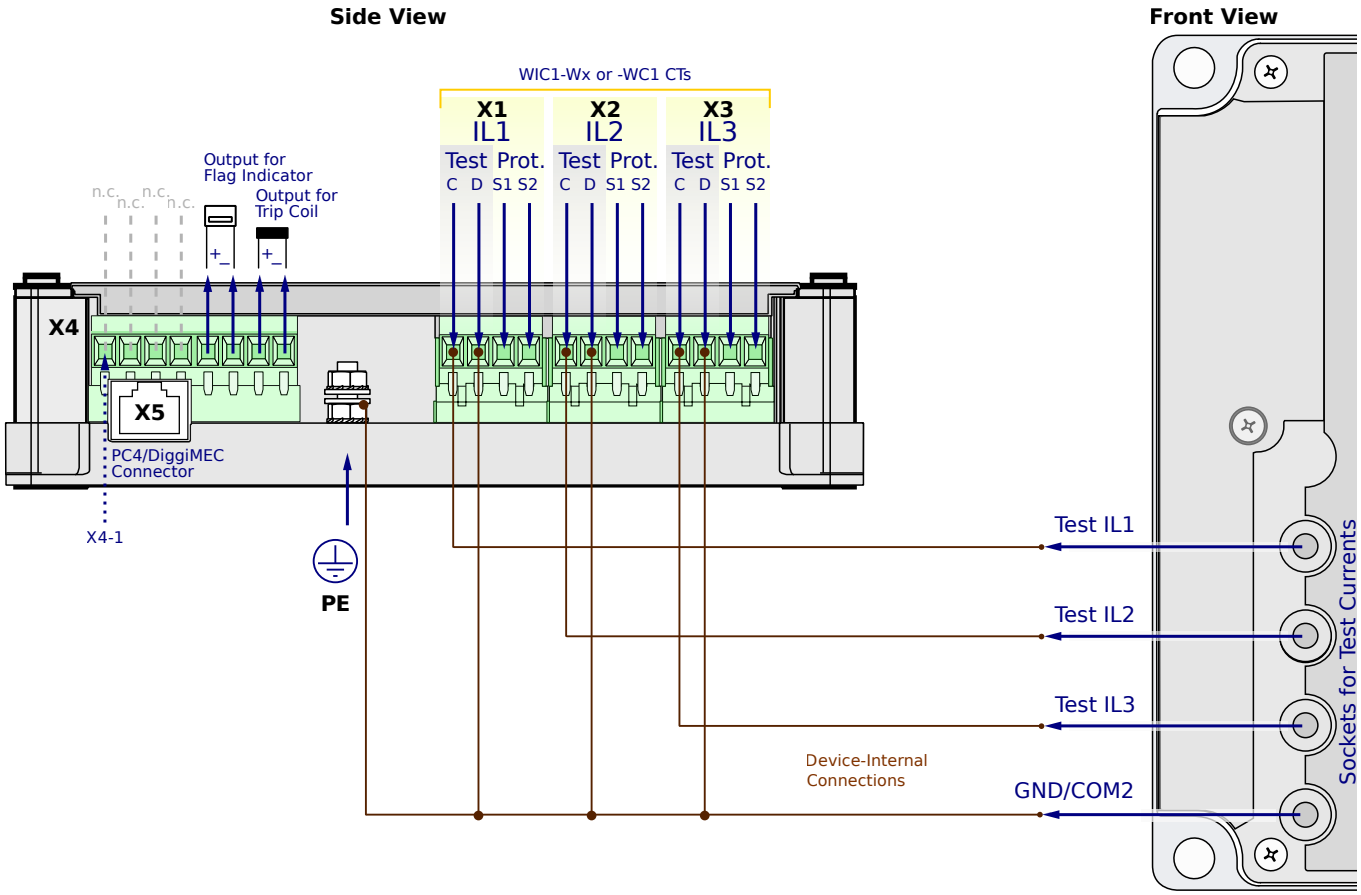


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2SAH

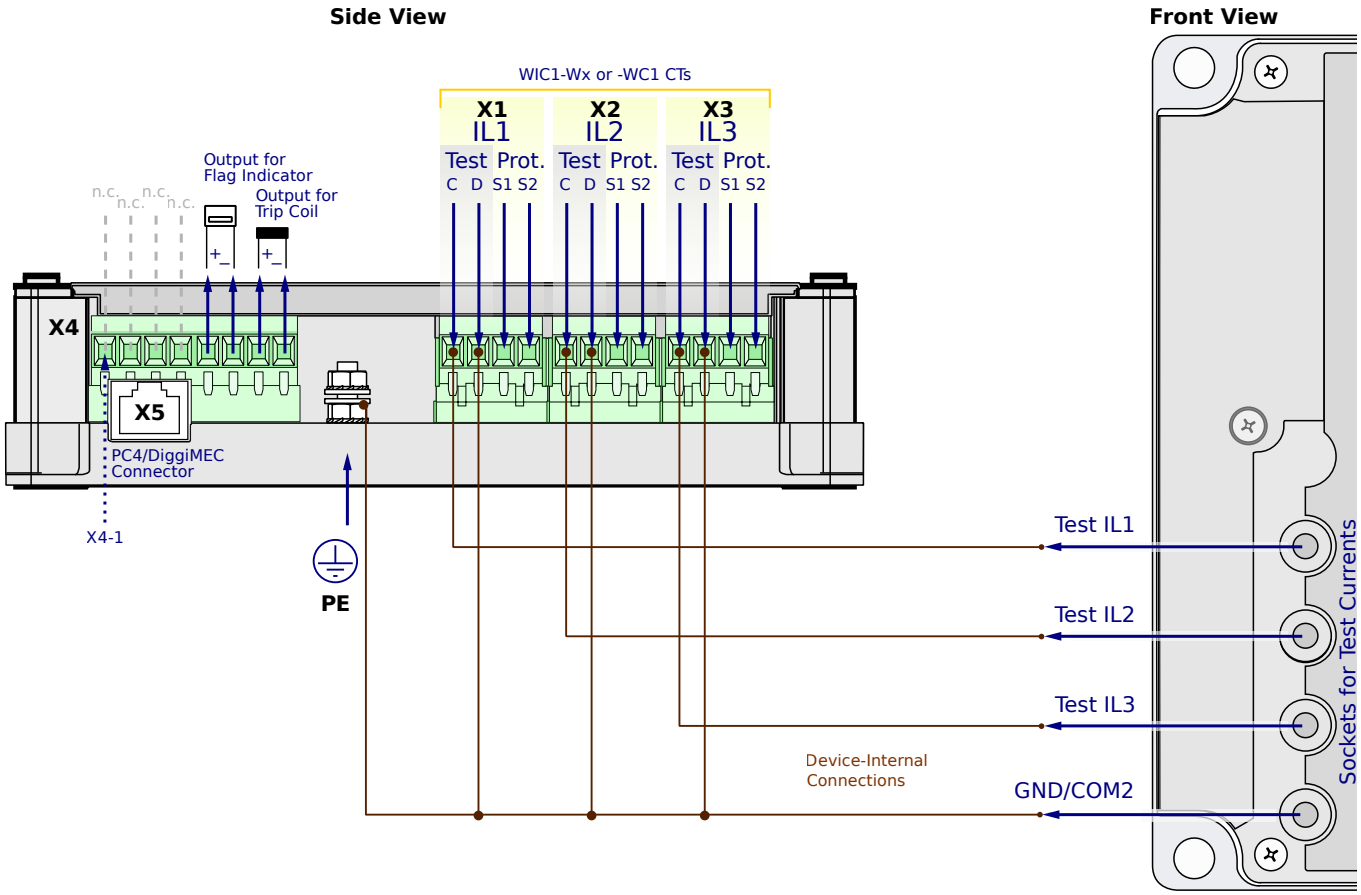


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2AA0

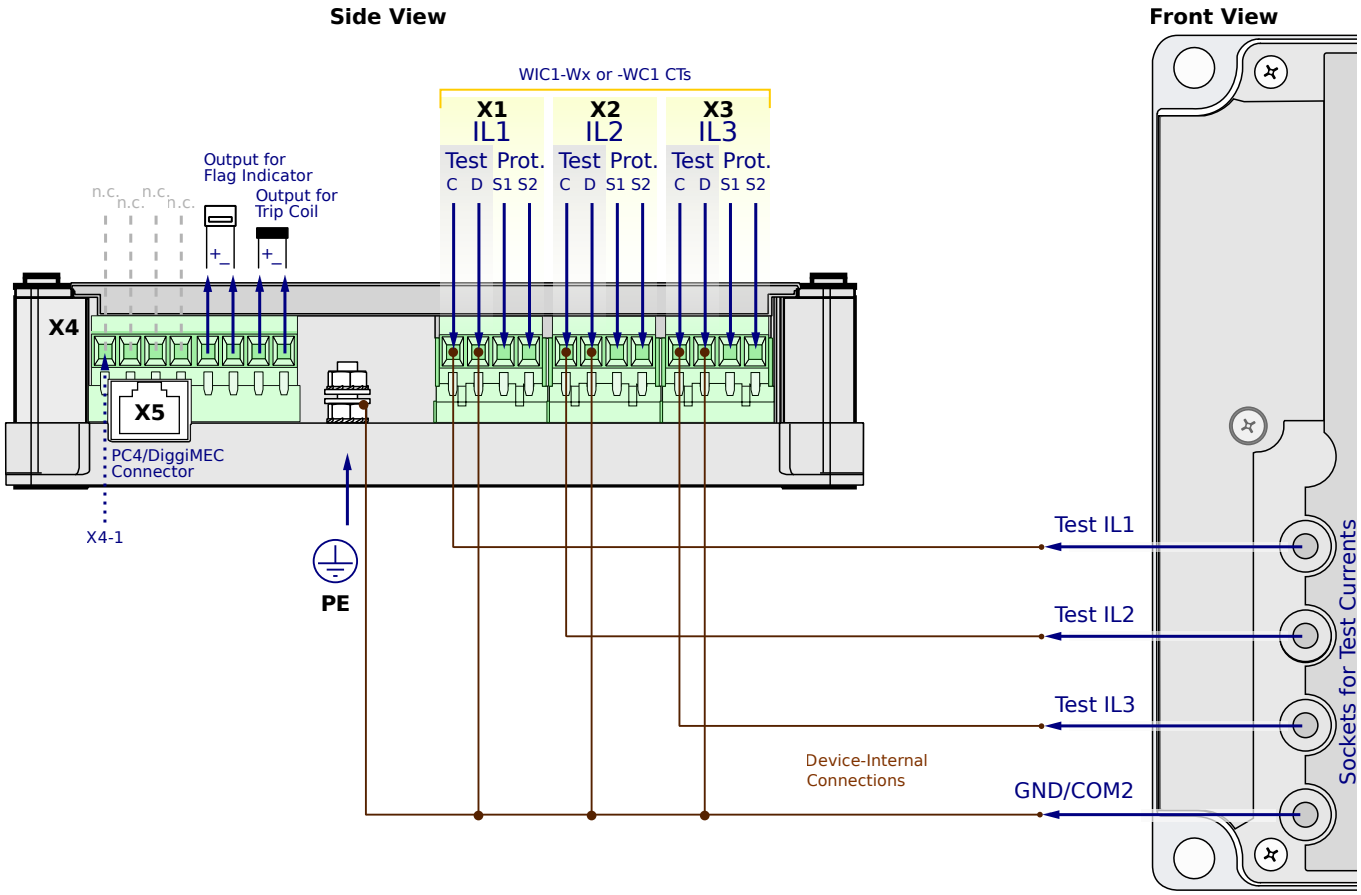


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2AAH

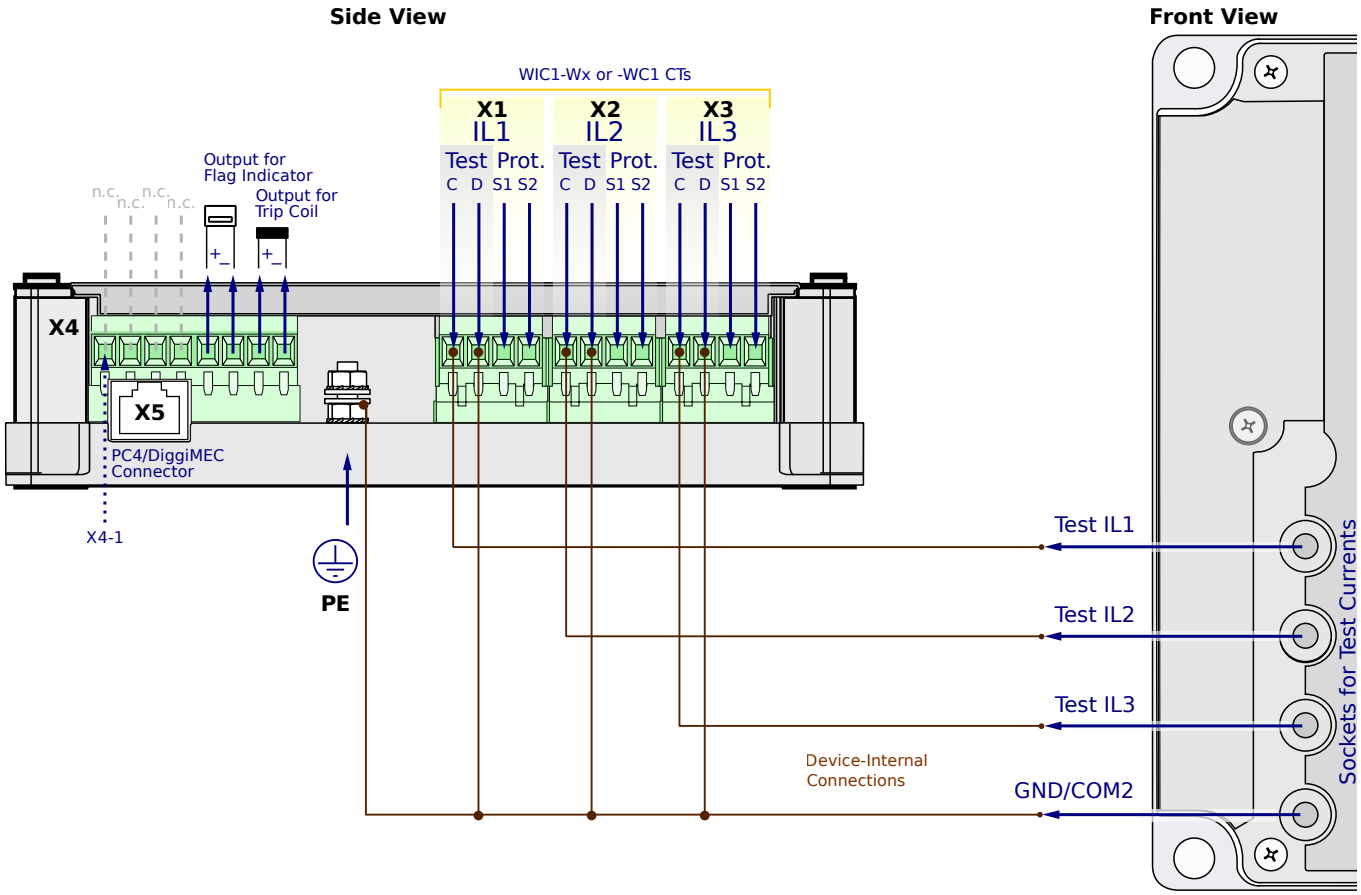


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2PA0

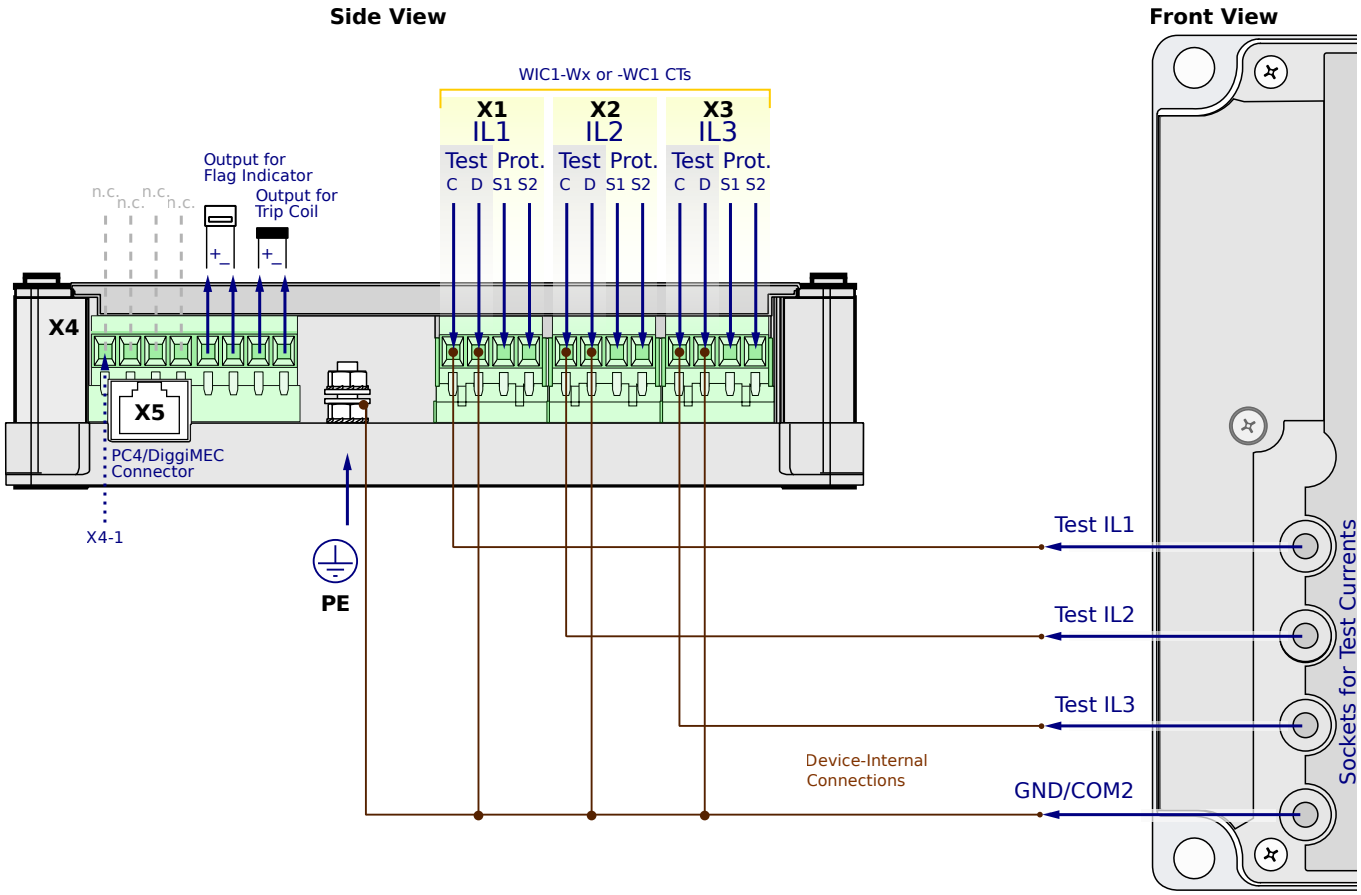


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FN2PAH

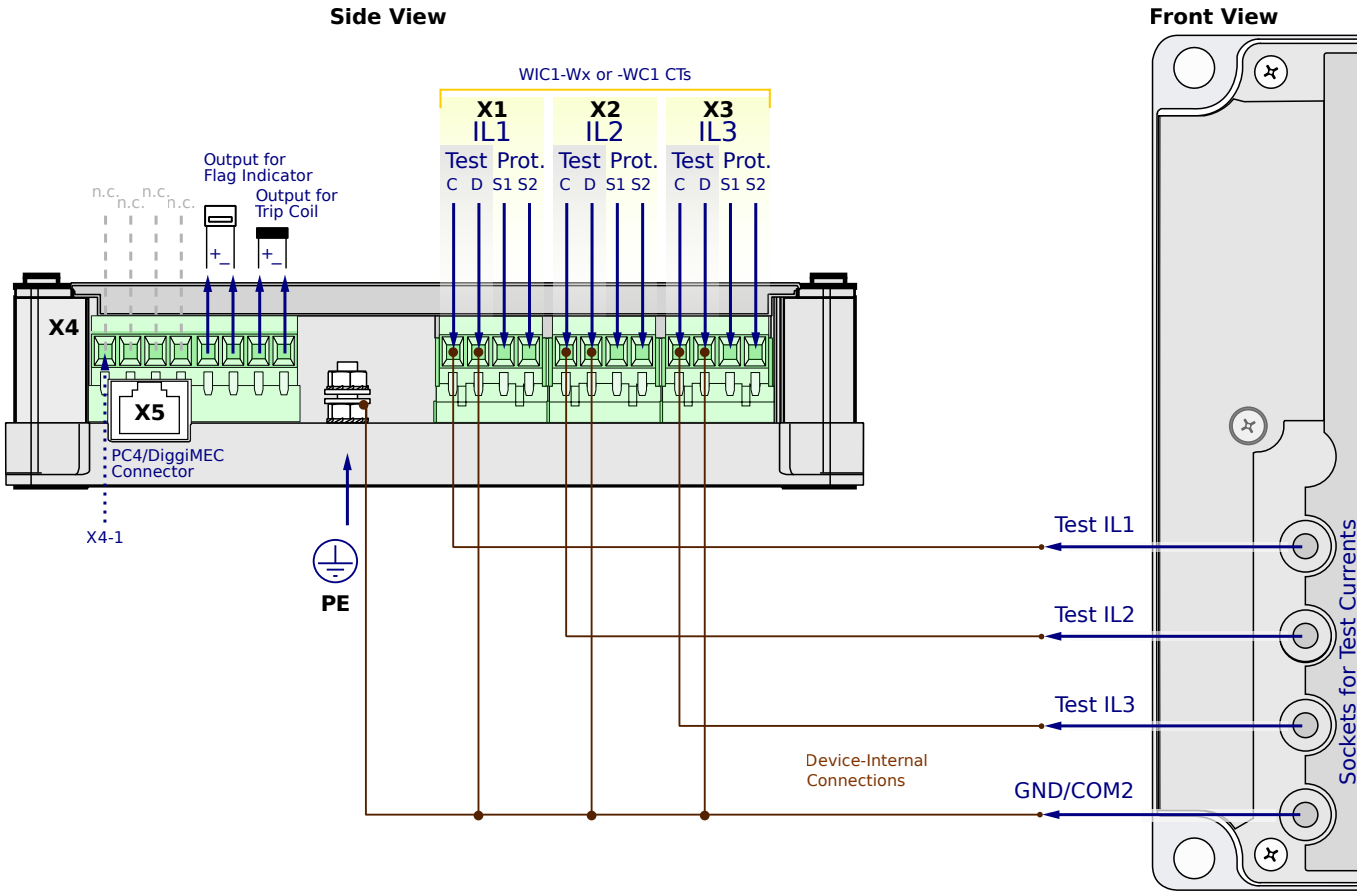


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1SA0

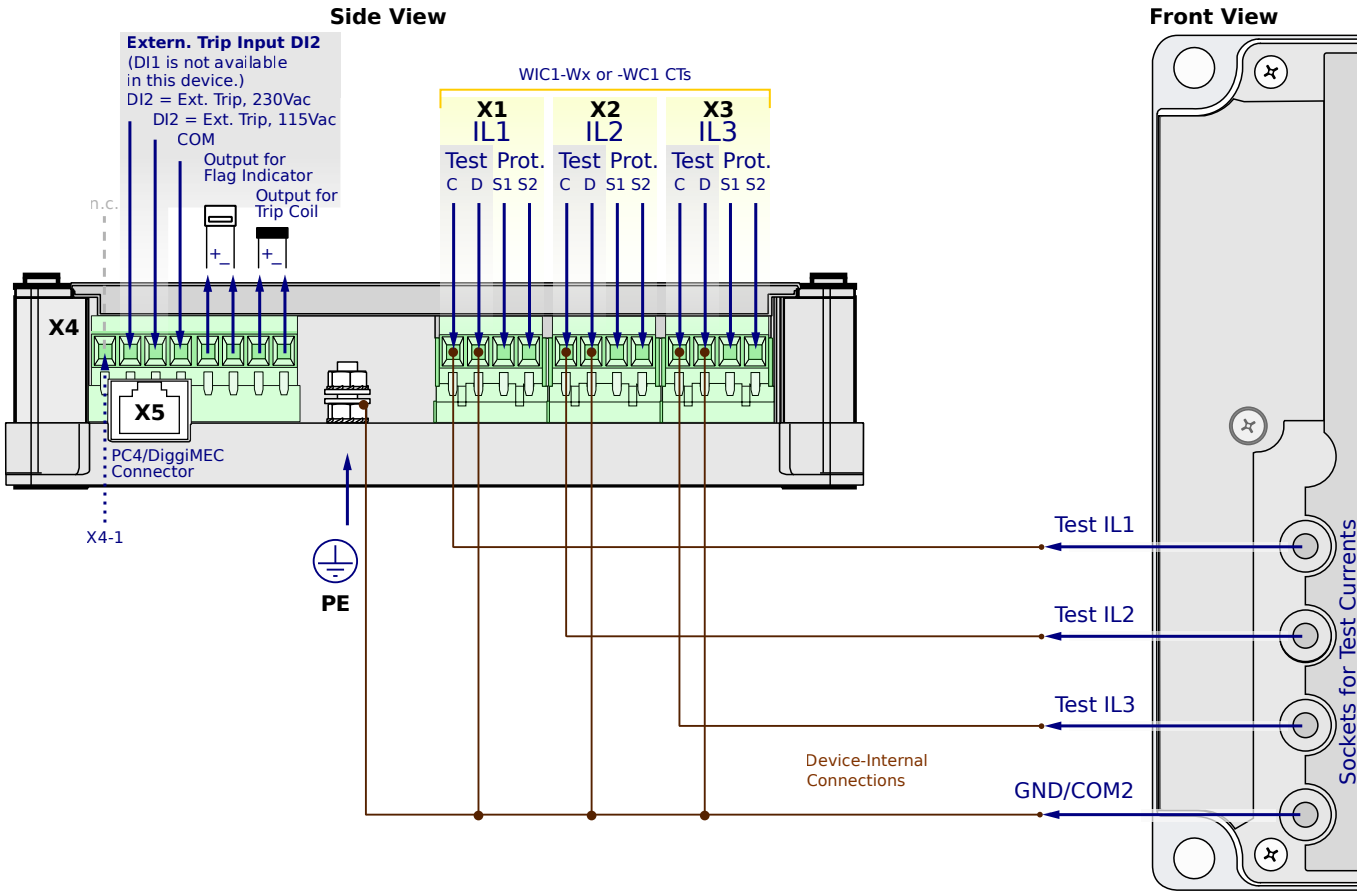


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1SAH

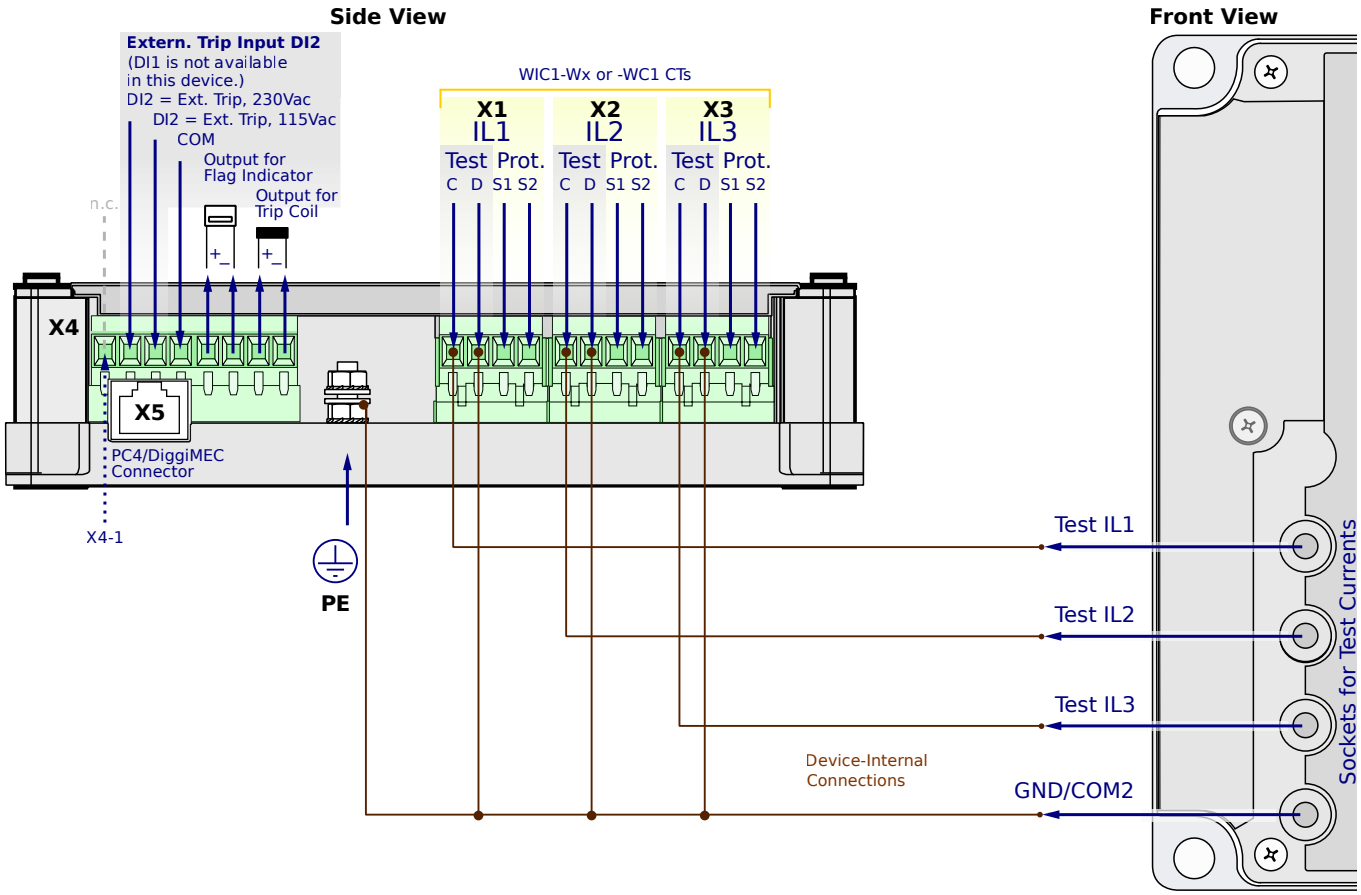


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1AA0

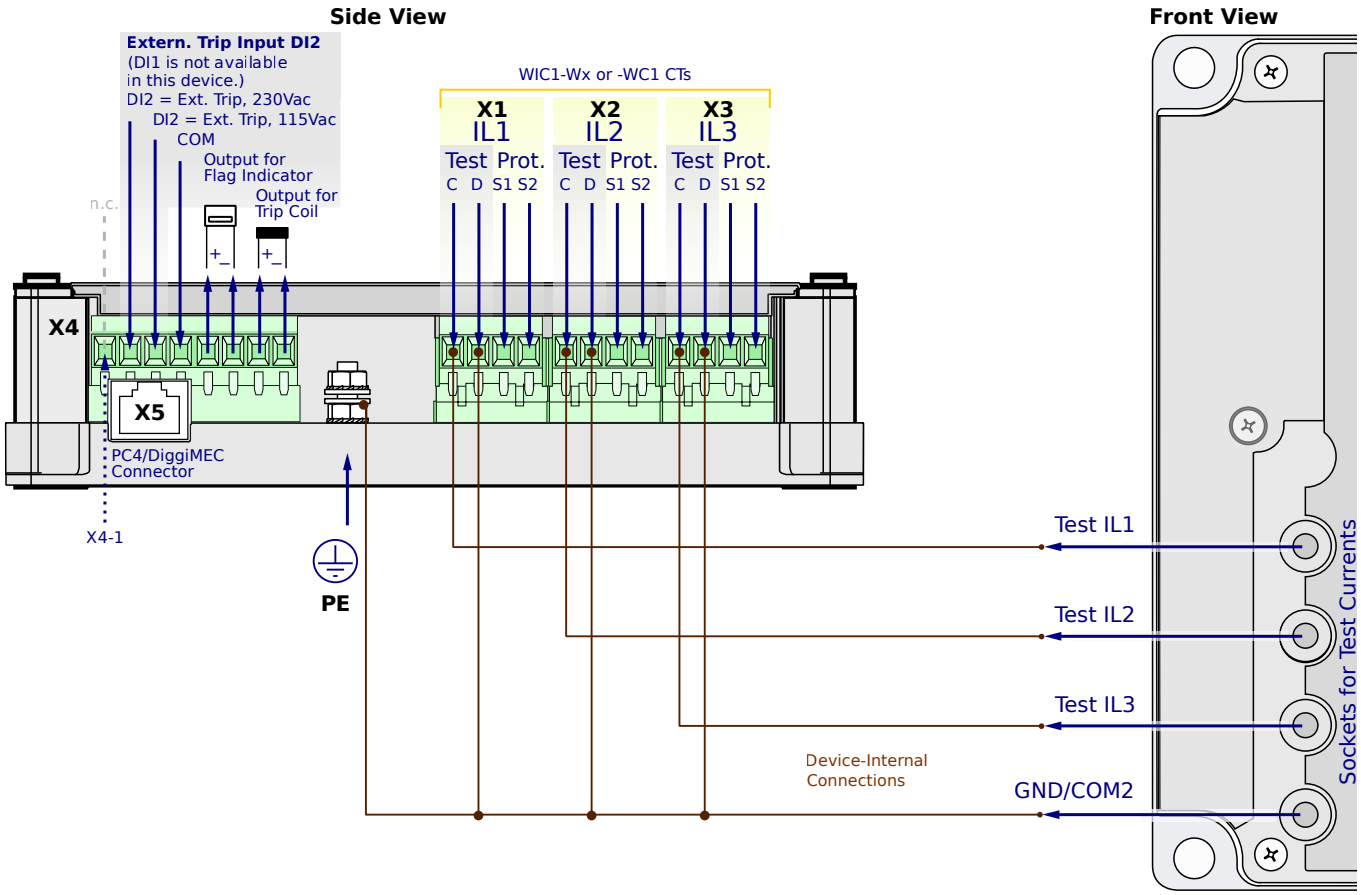


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1AAH

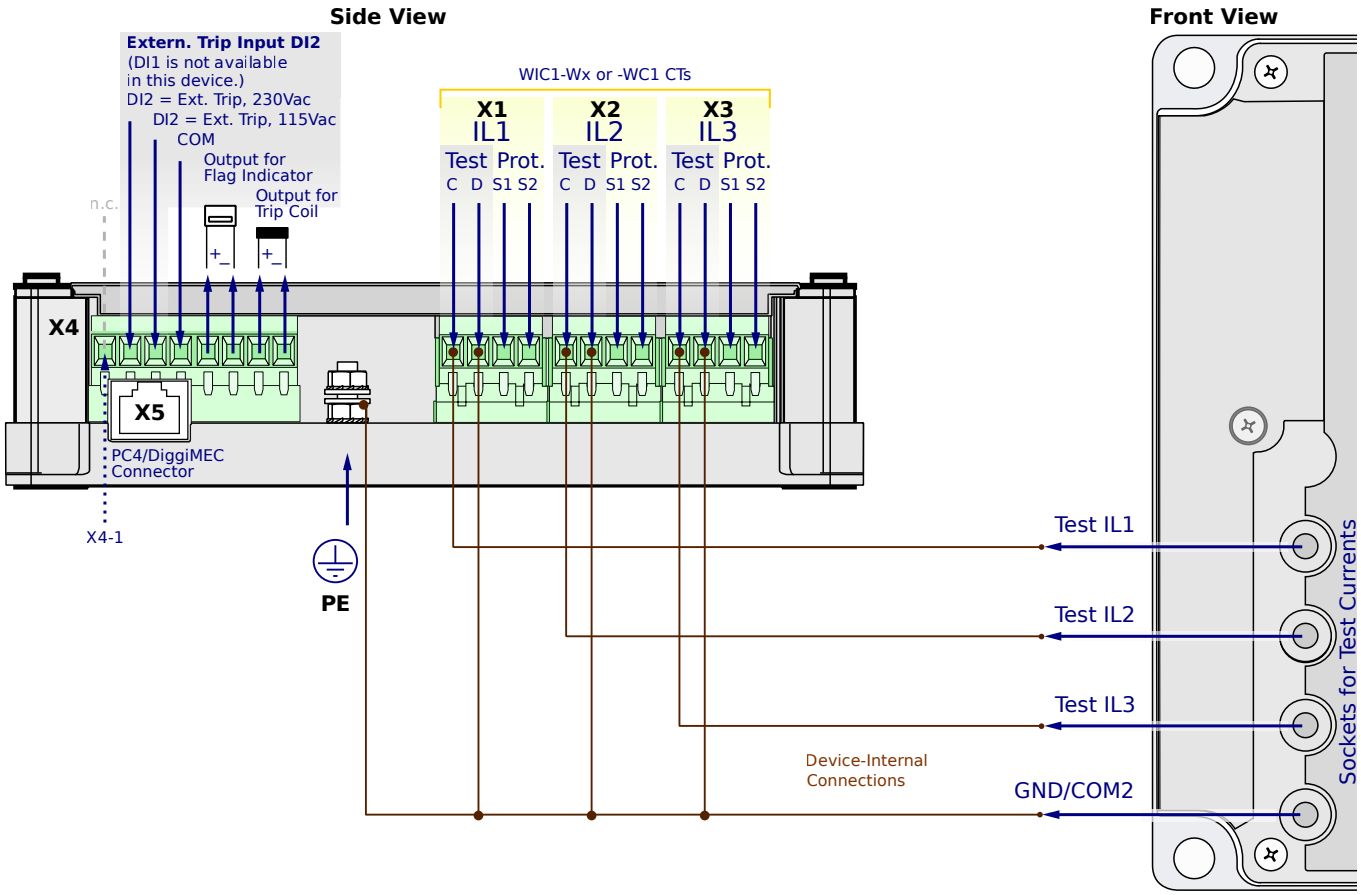


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1PA0

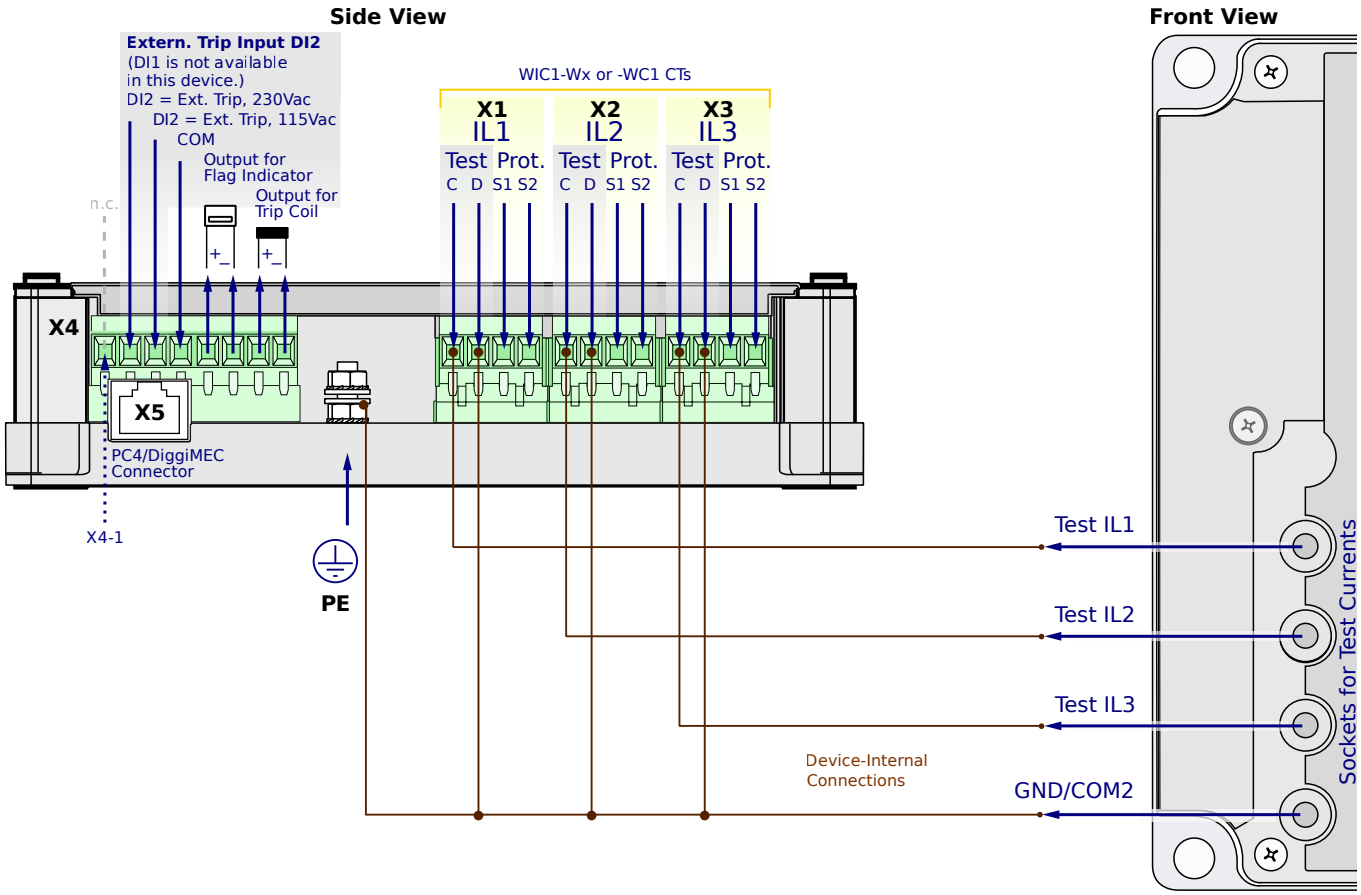


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF1PAH

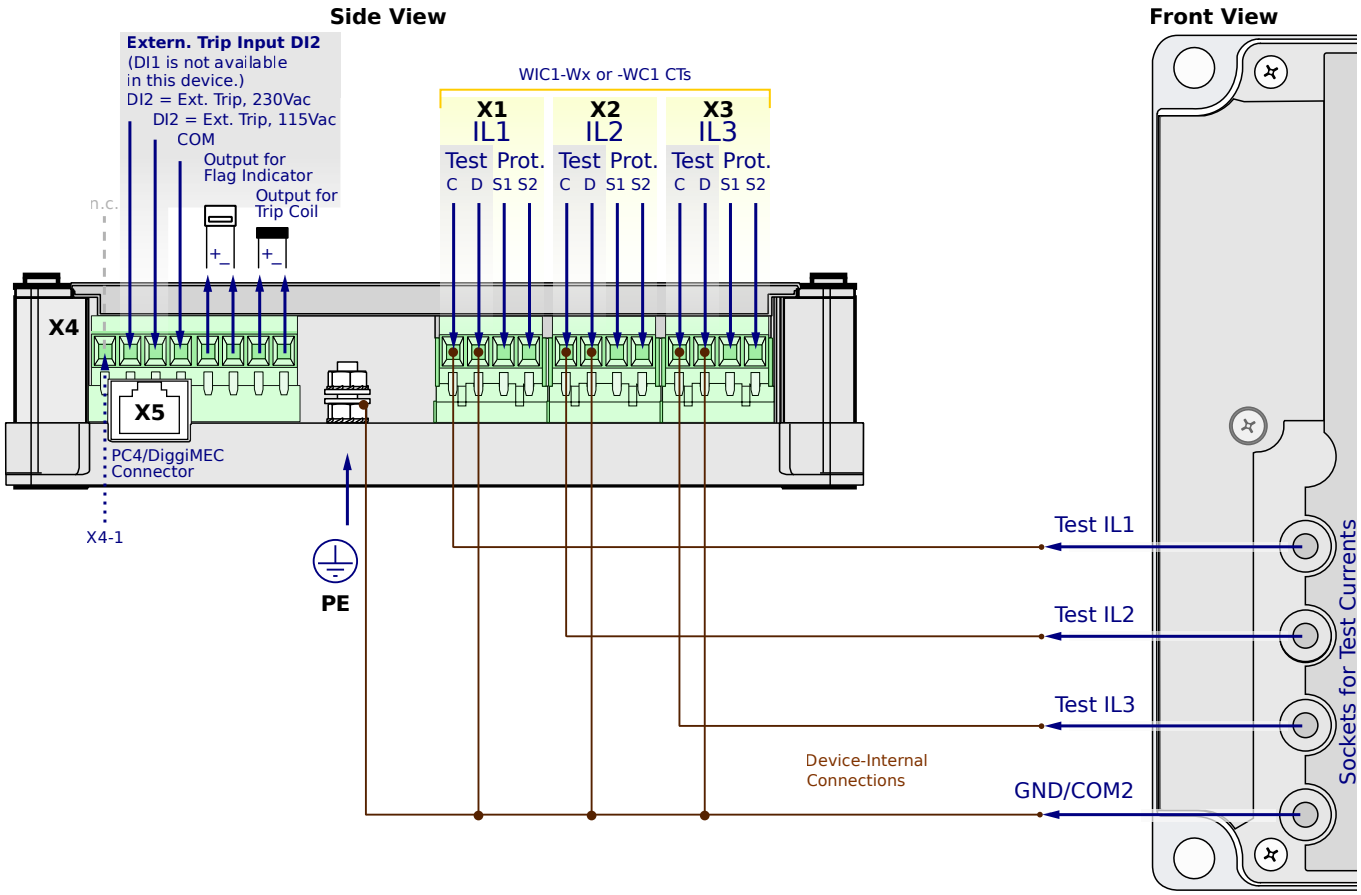


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2SA0

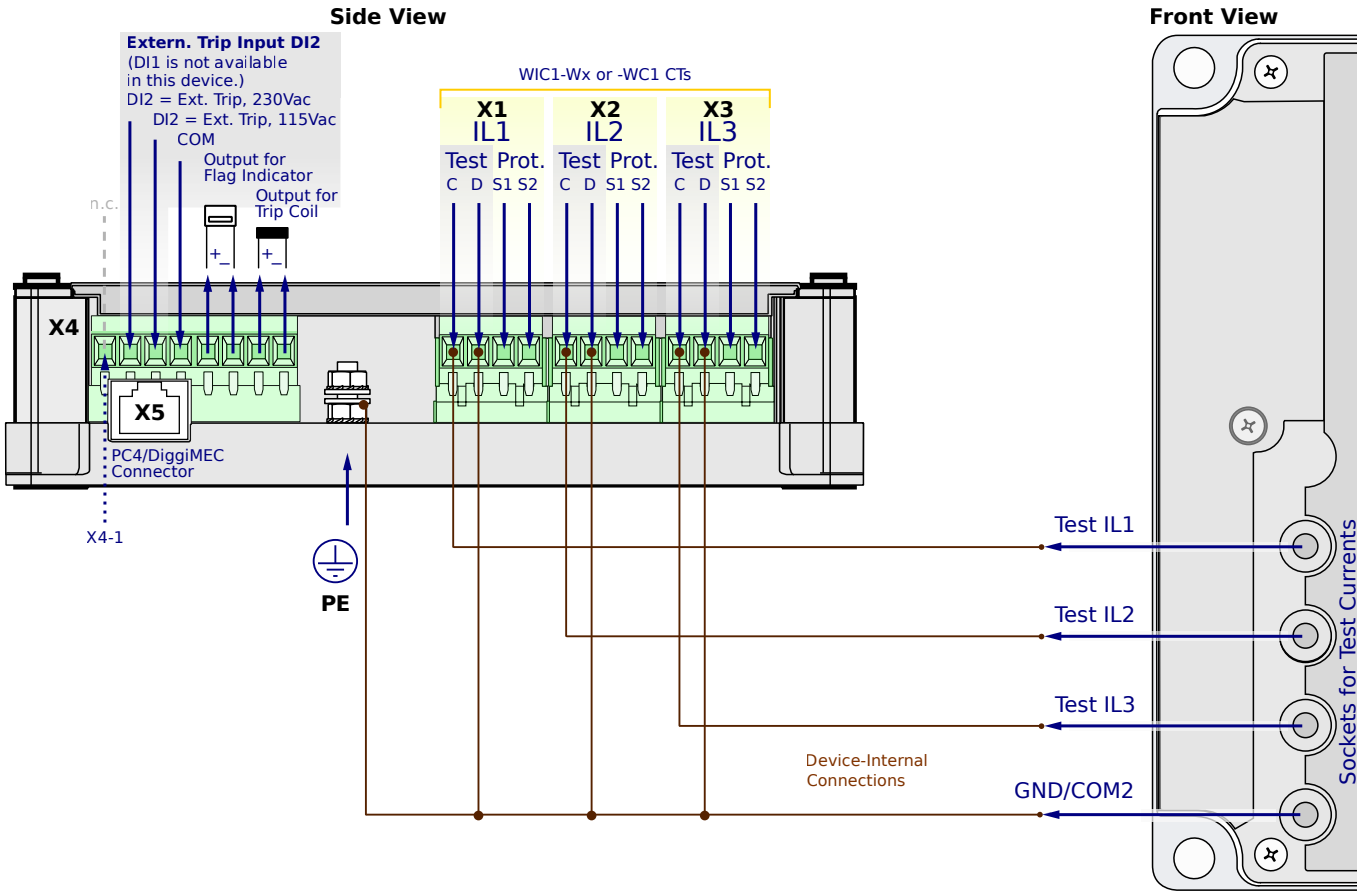


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2SAH

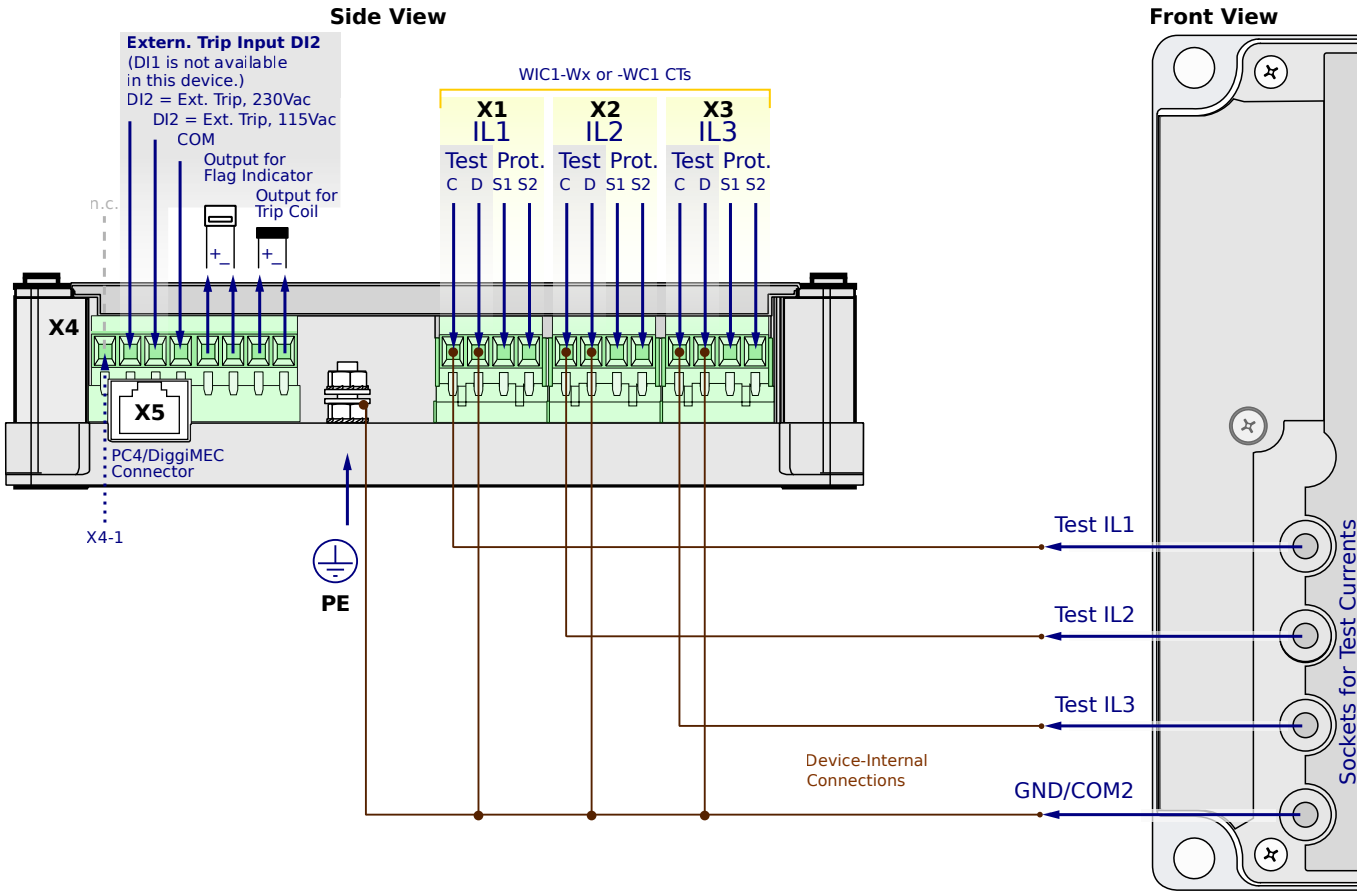


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2AA0

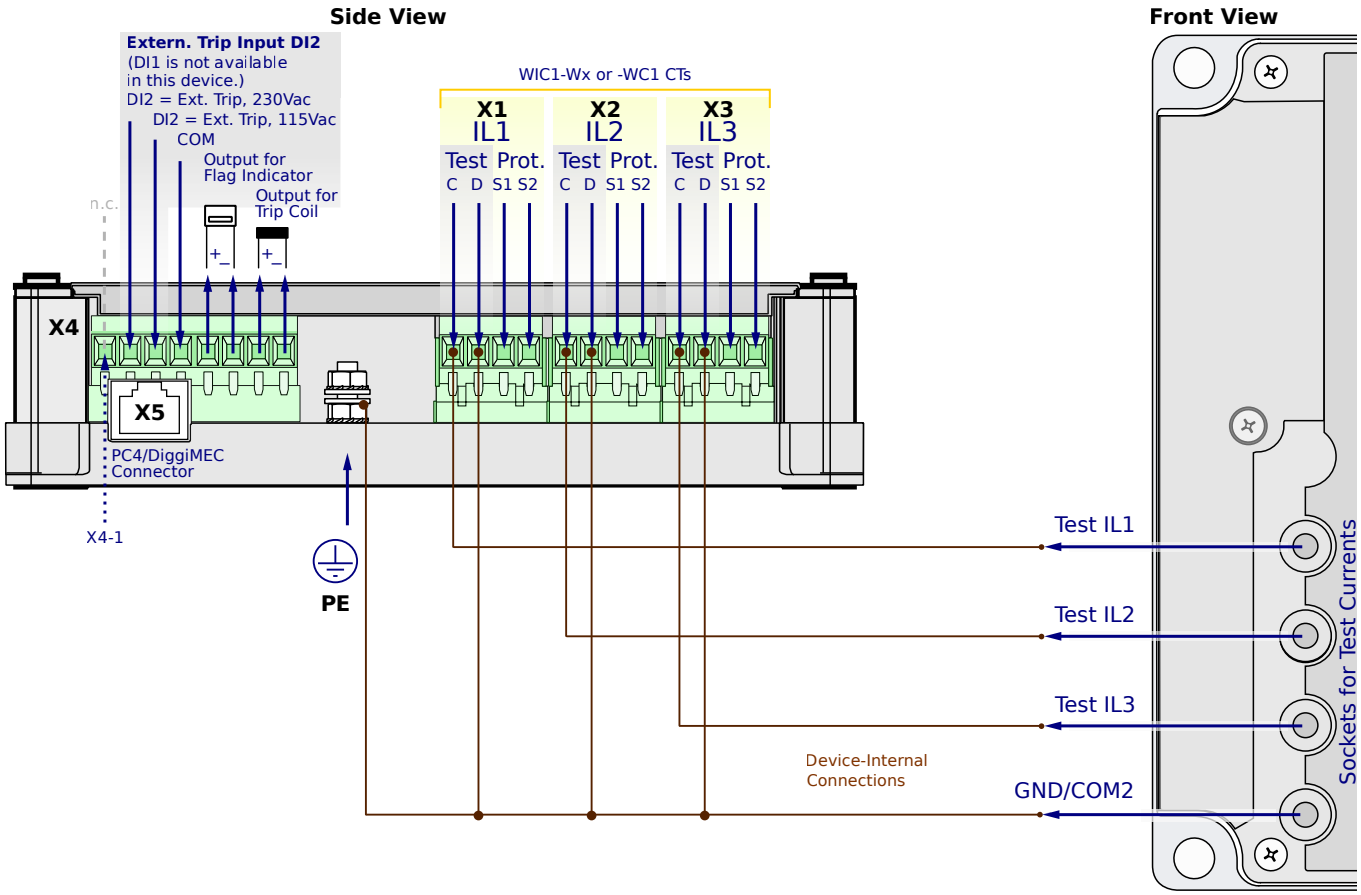


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2AAH

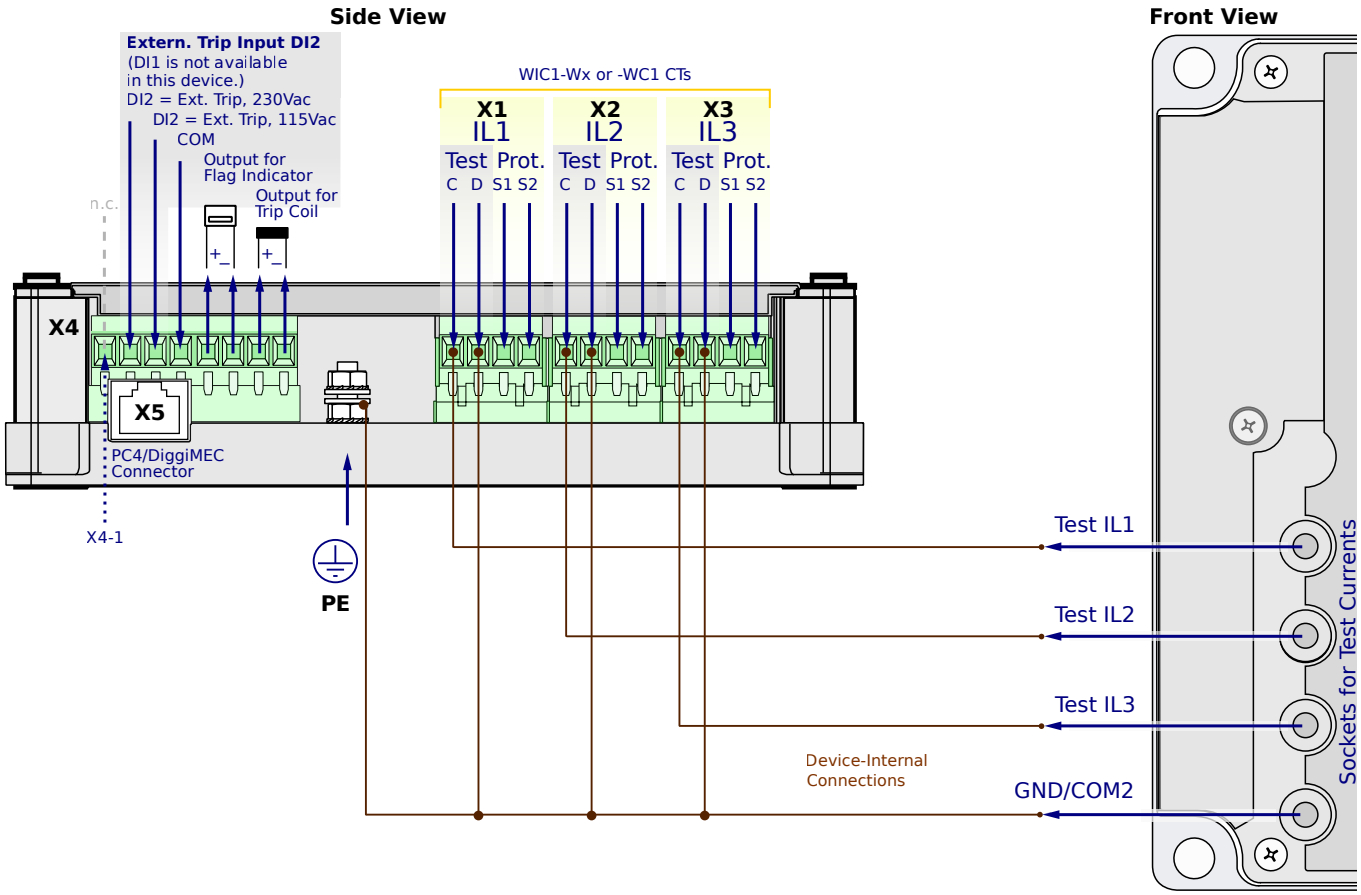


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2PA0

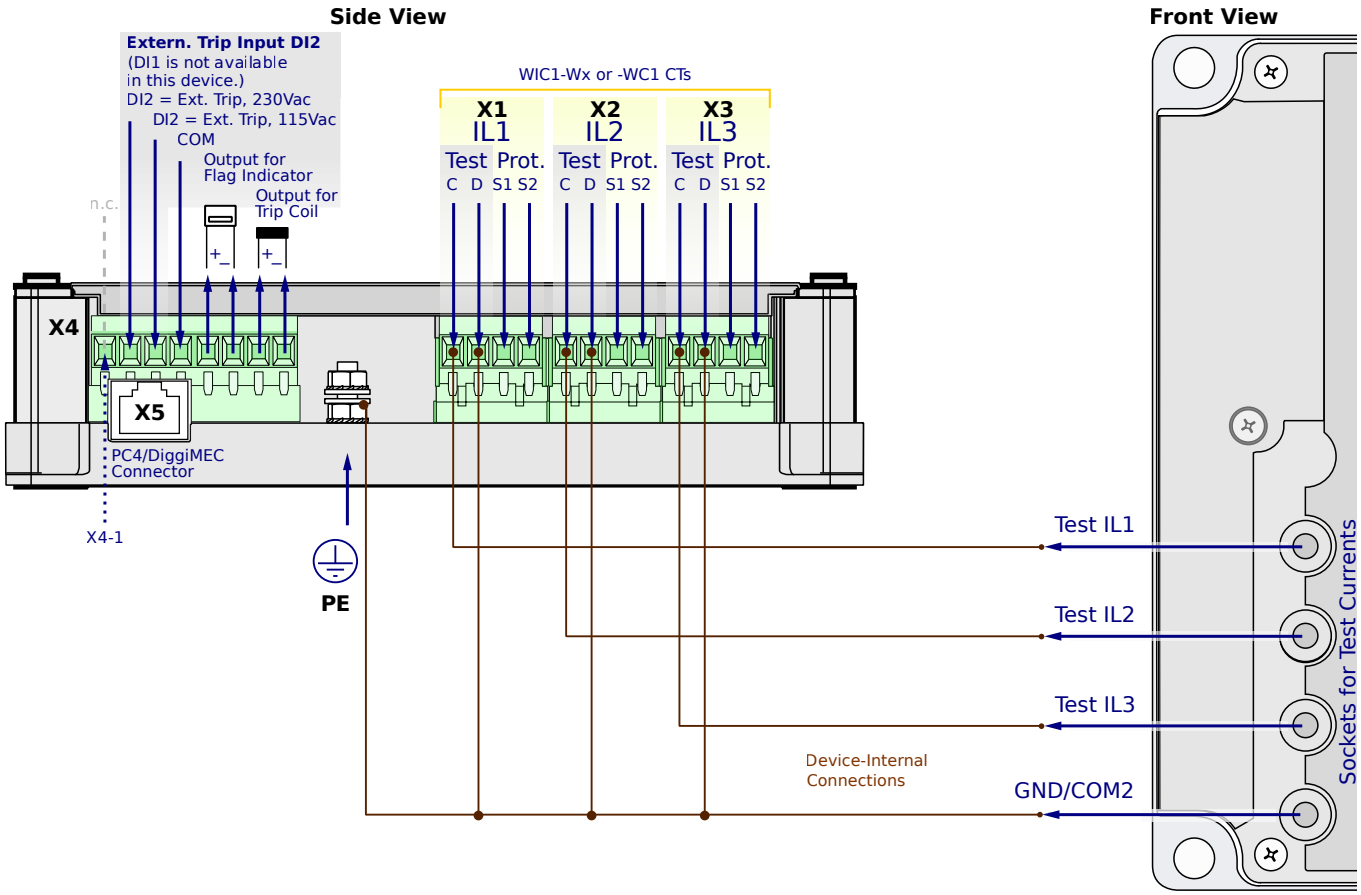


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FF2PAH

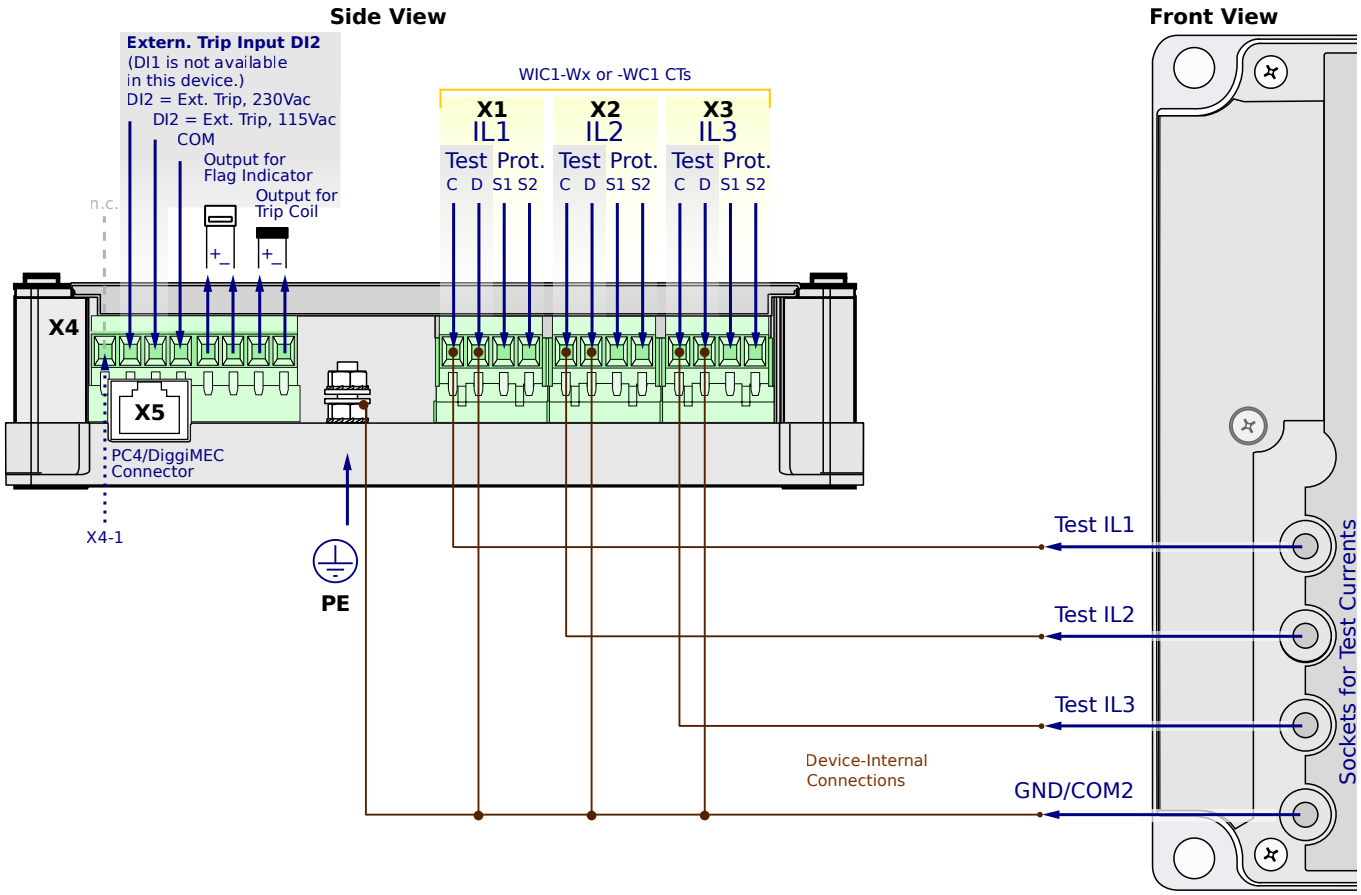


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1SA0

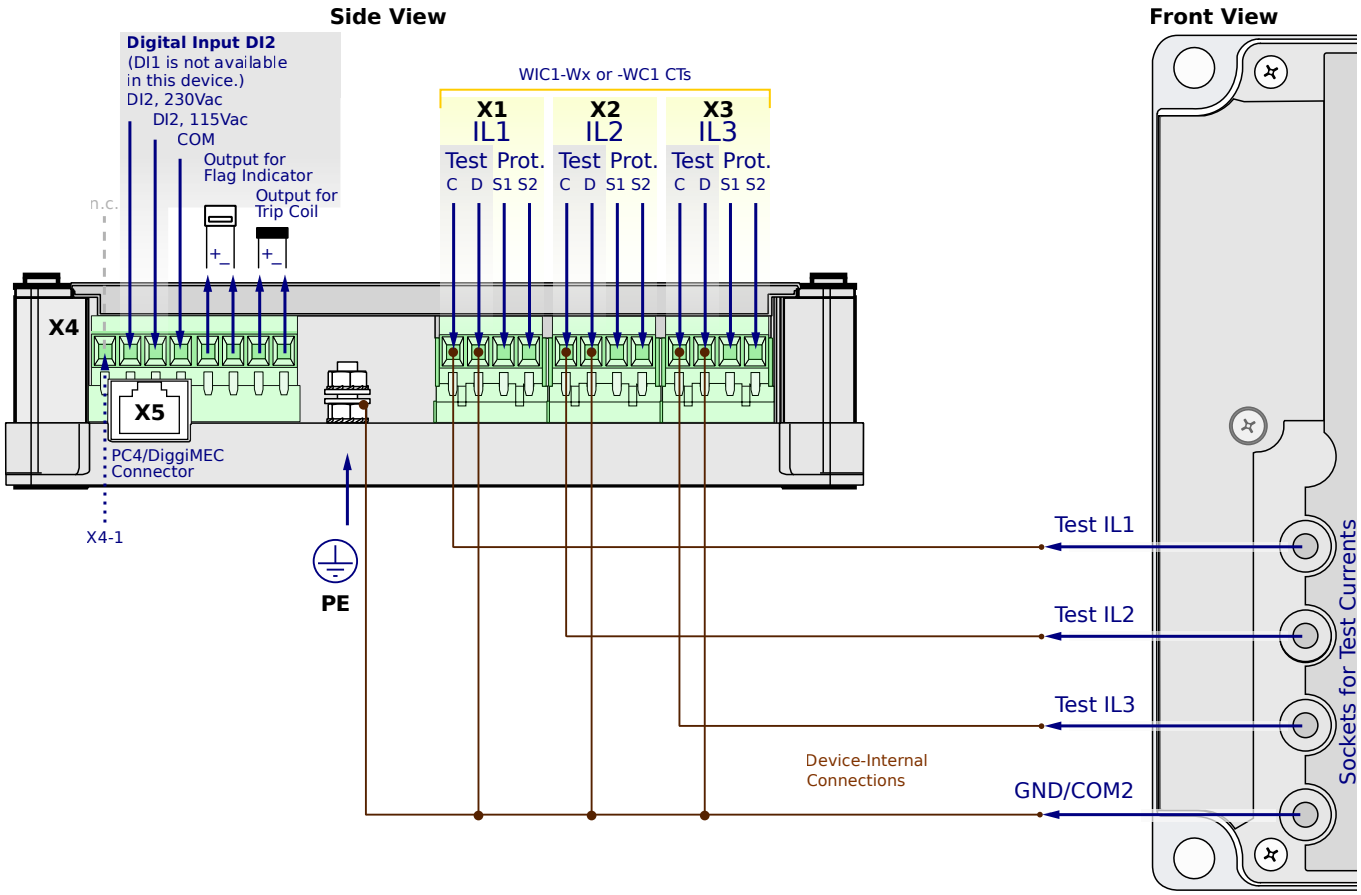


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1SAH

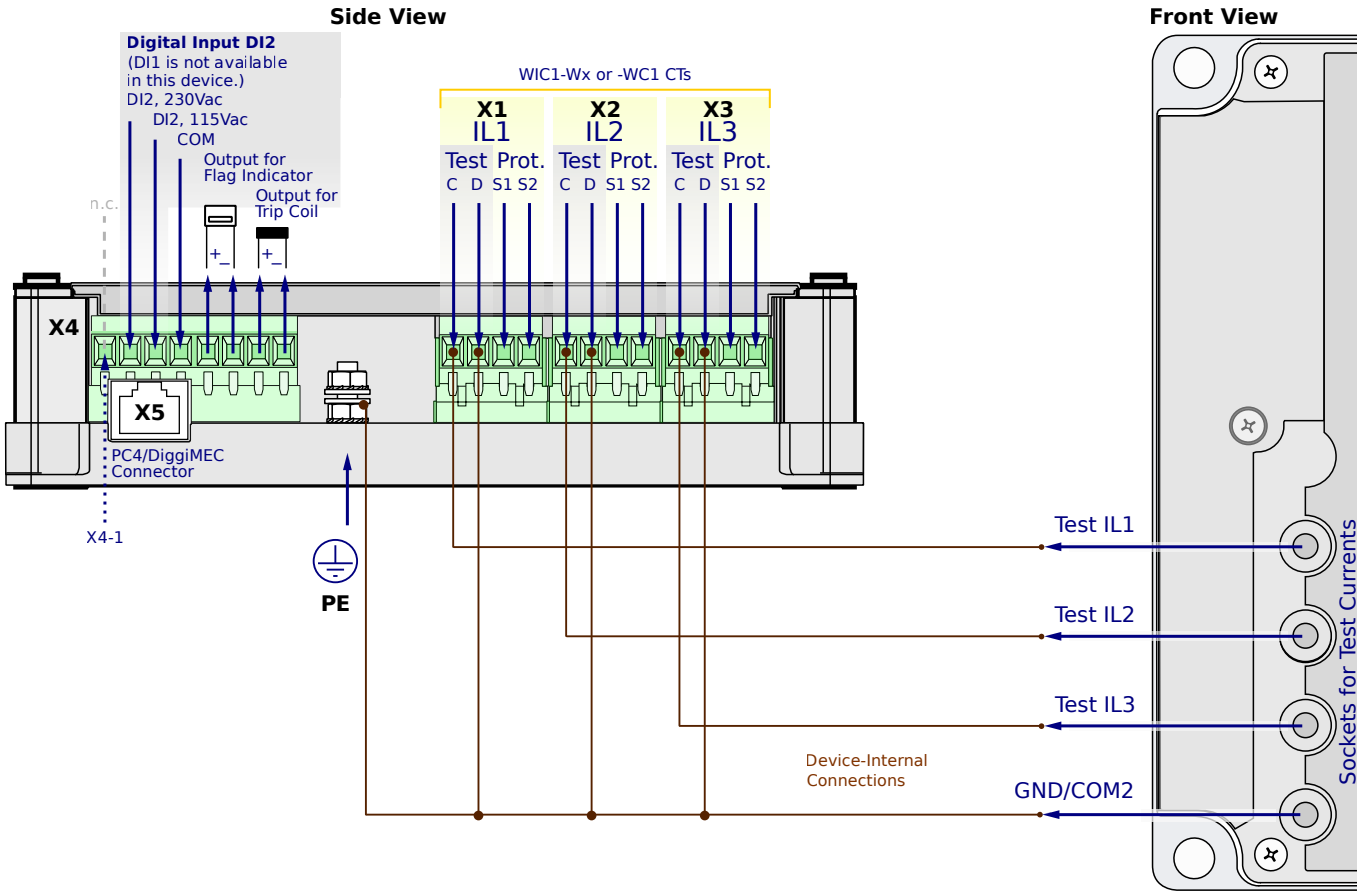


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1AA0

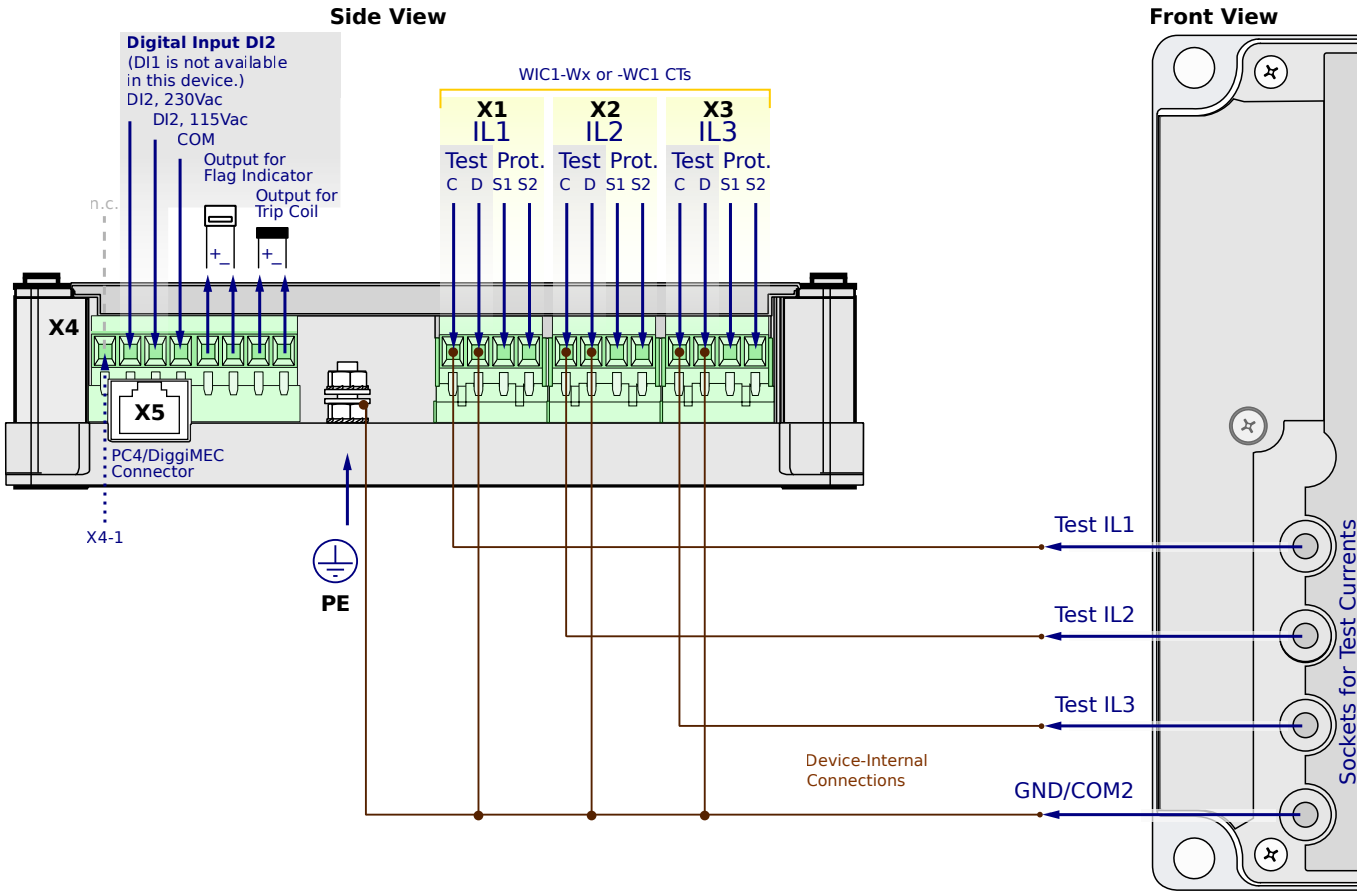


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1AAH

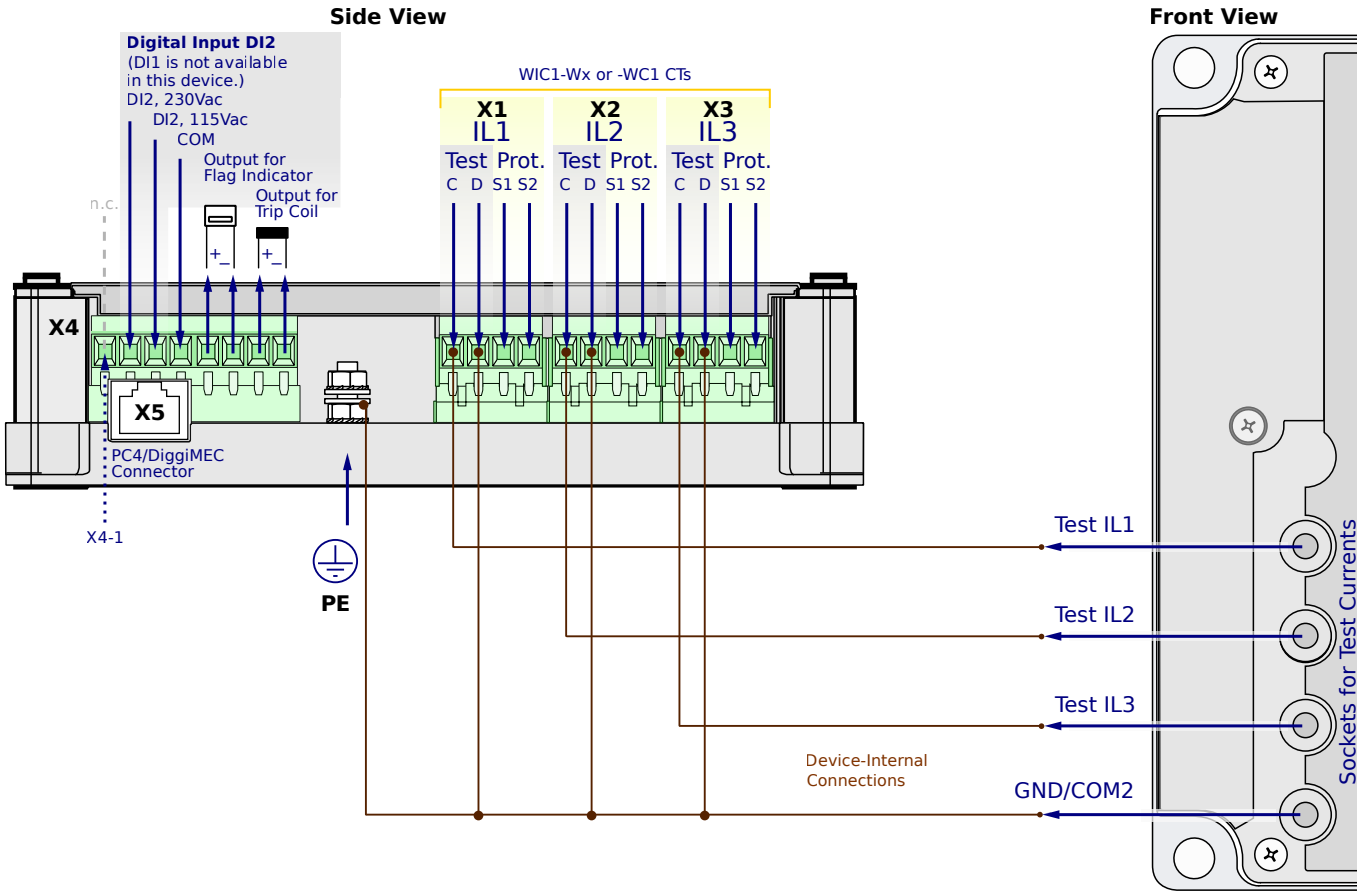


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1PA0

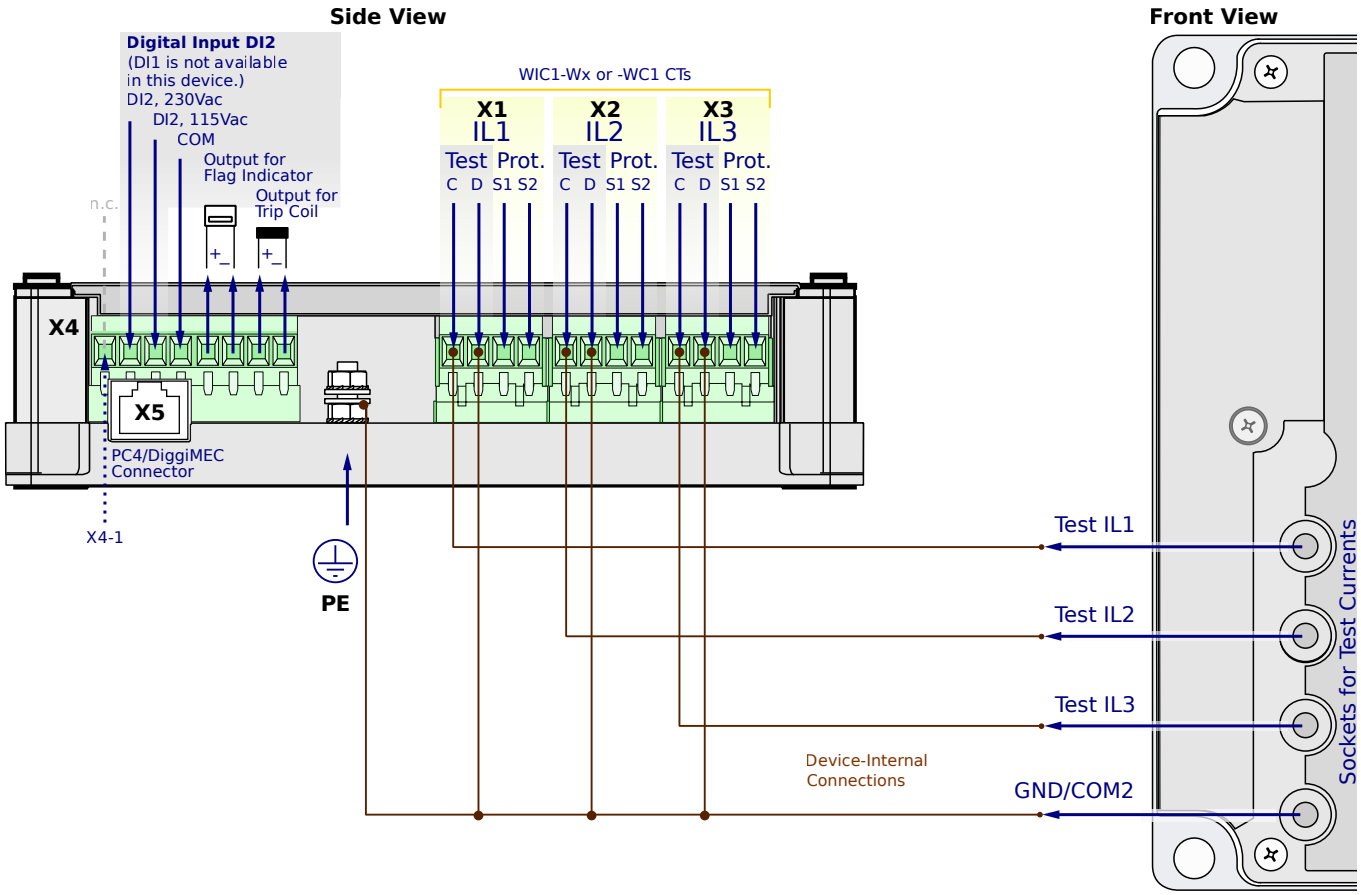


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC1PAH

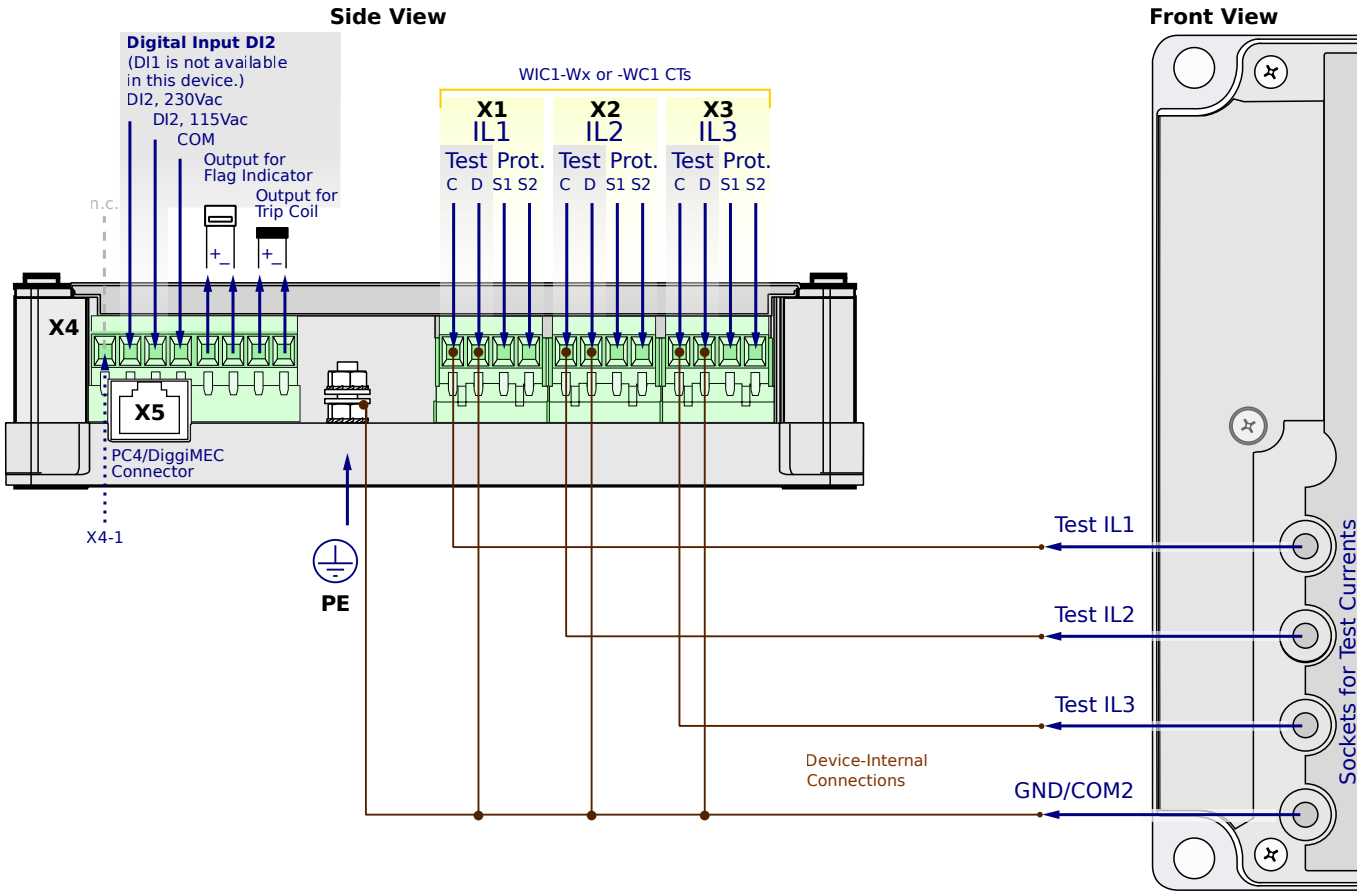


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2SA0

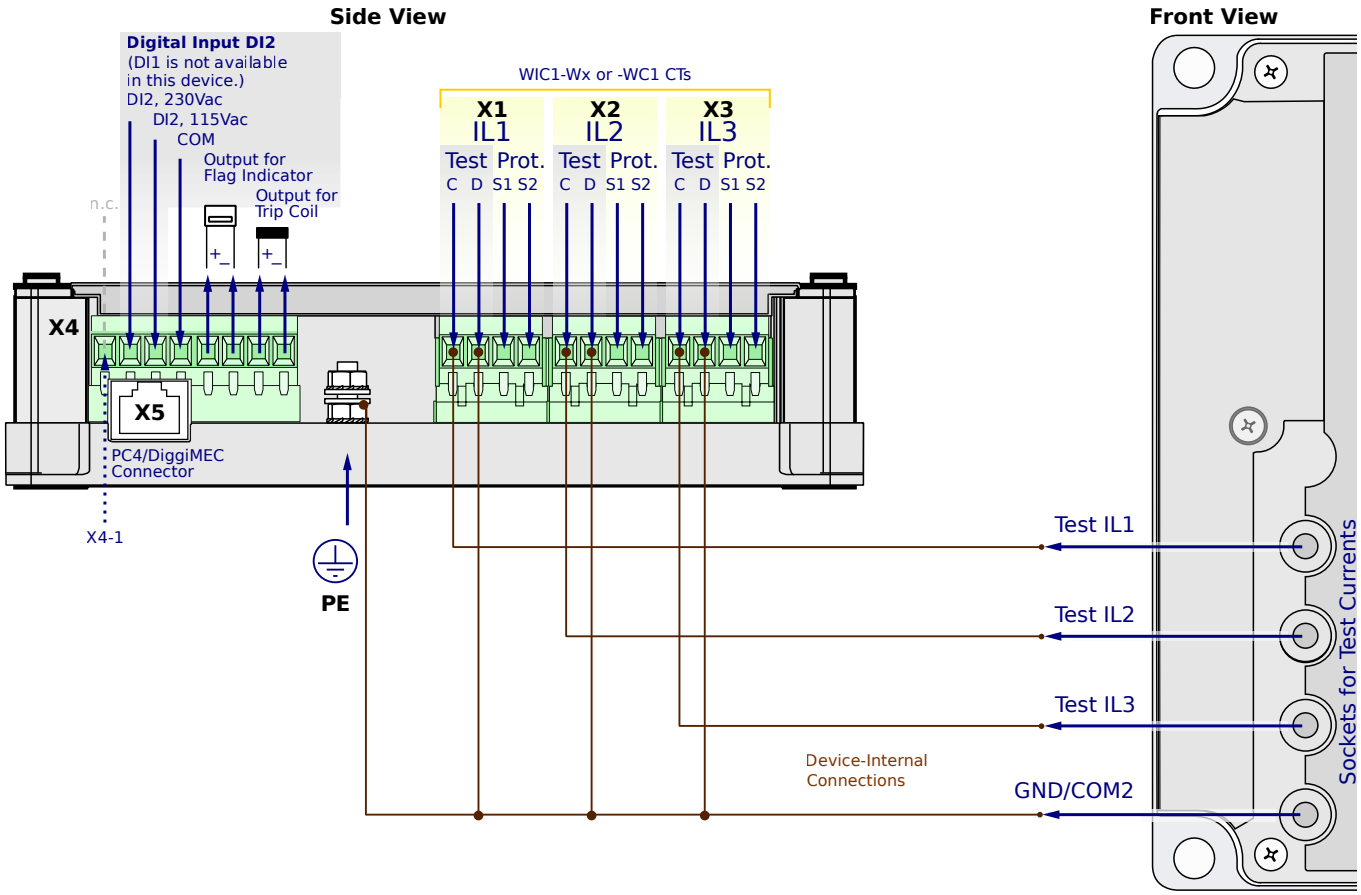


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2SAH

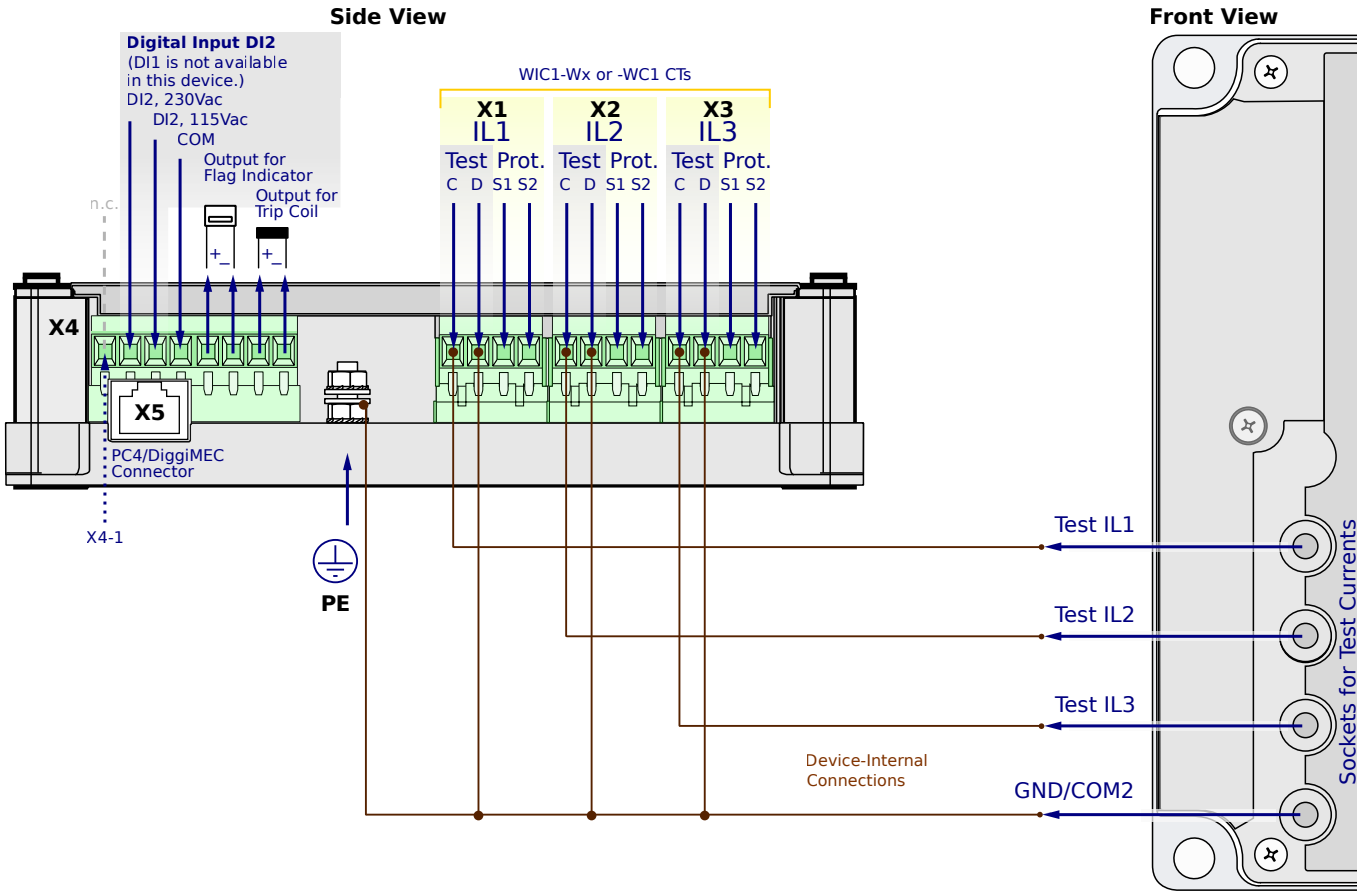


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2AA0

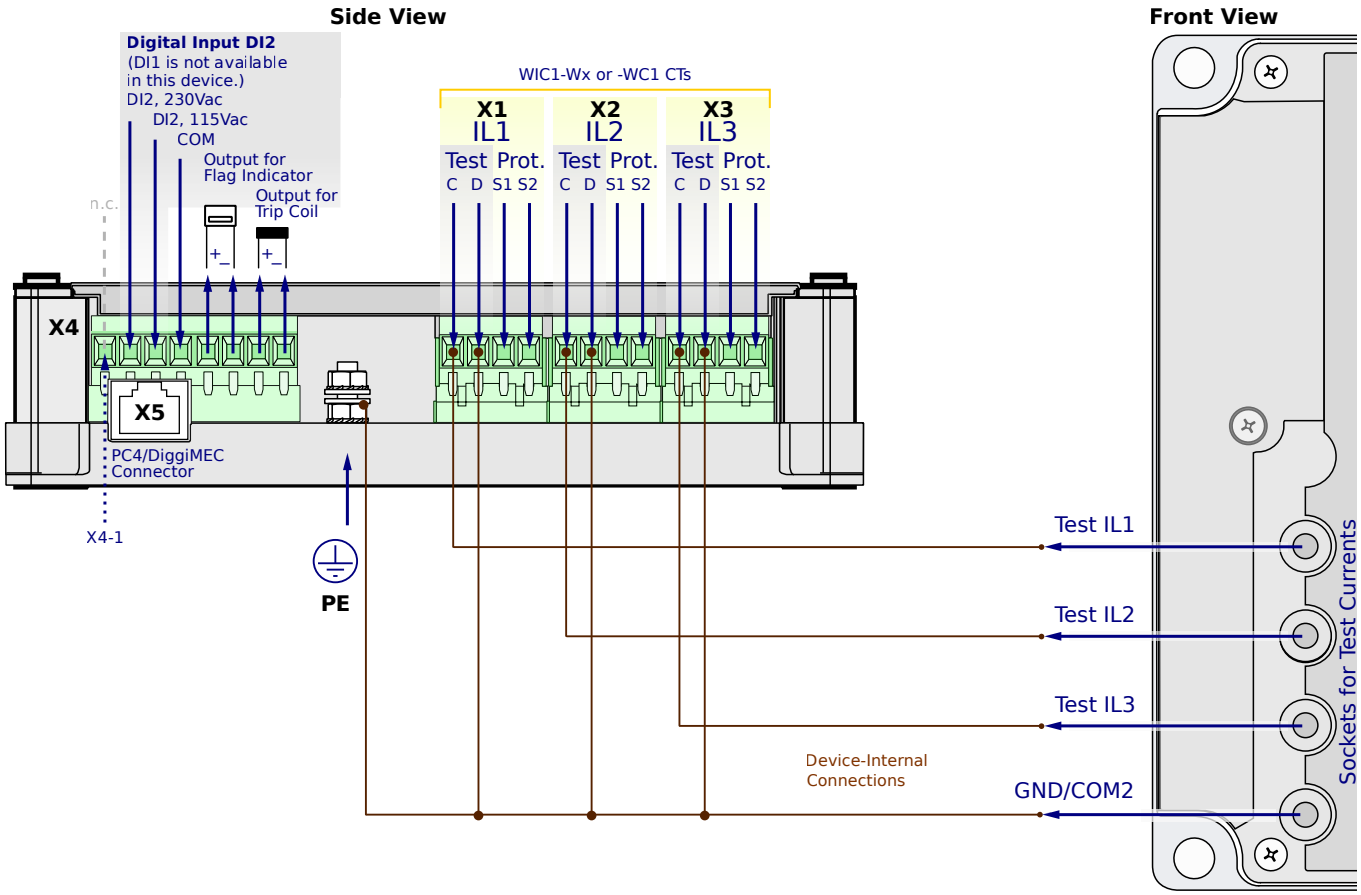


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Calculated ground (earth) current.
– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2AAH

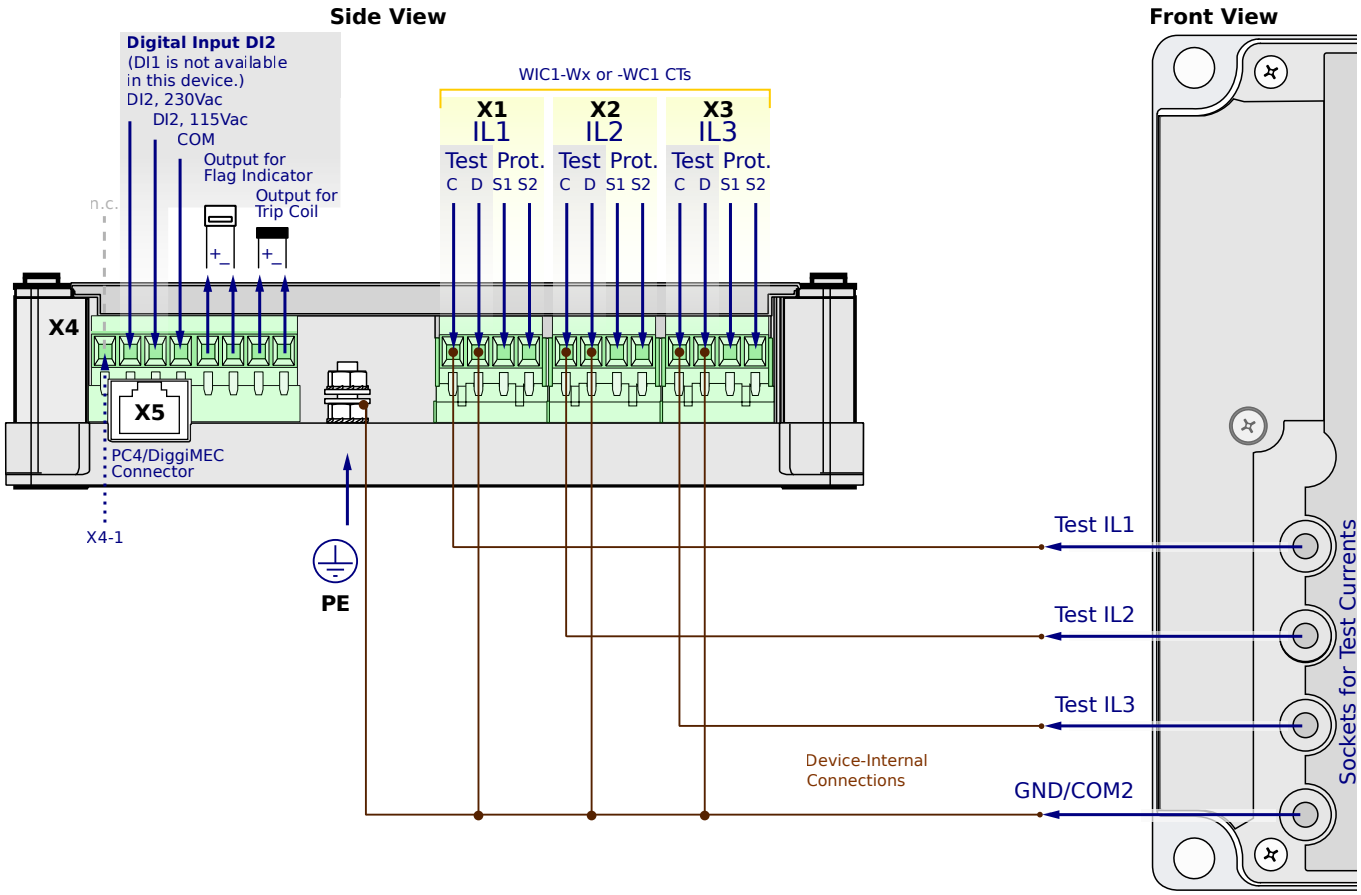


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2PA0

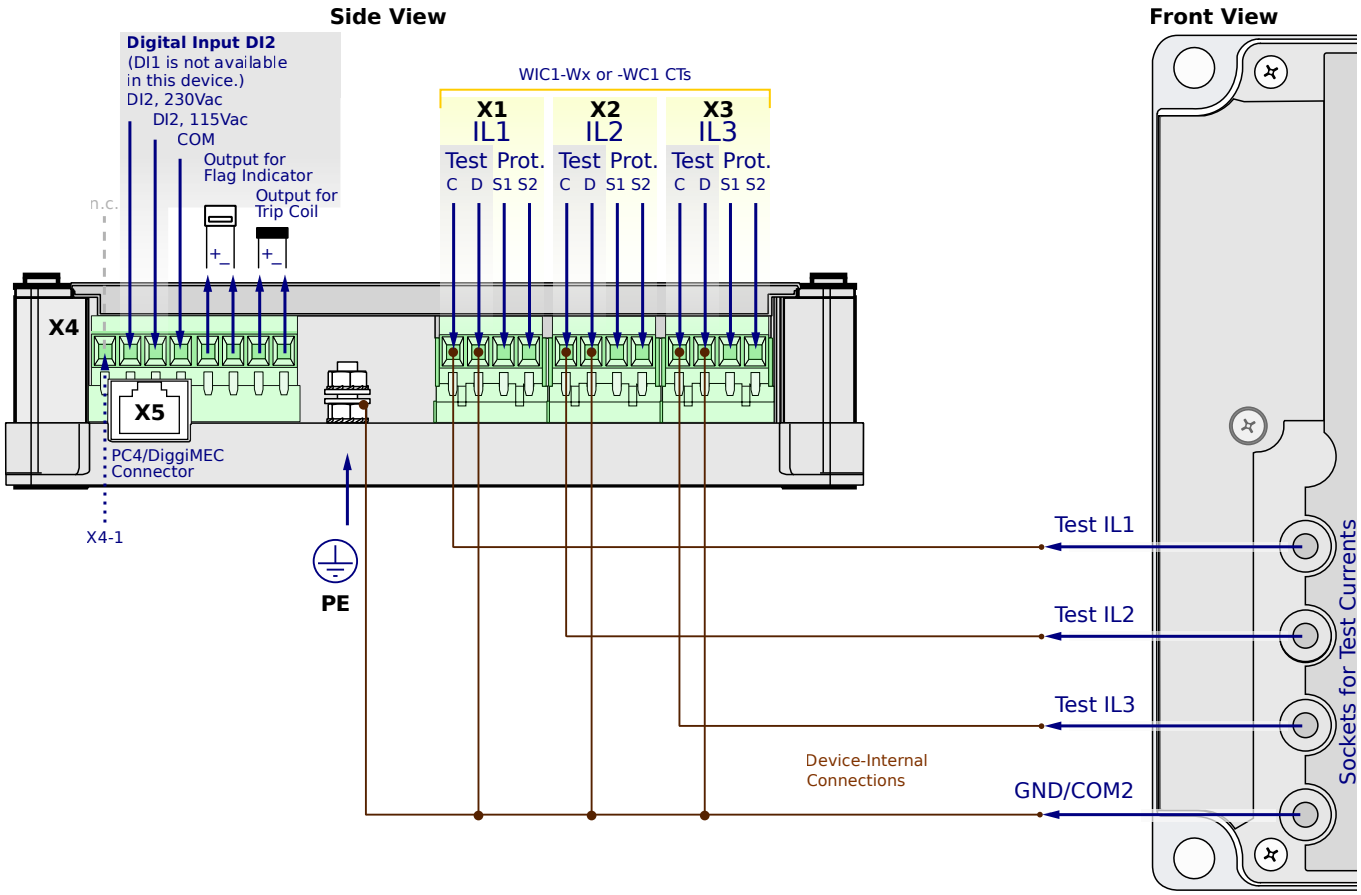


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6FC2PAH

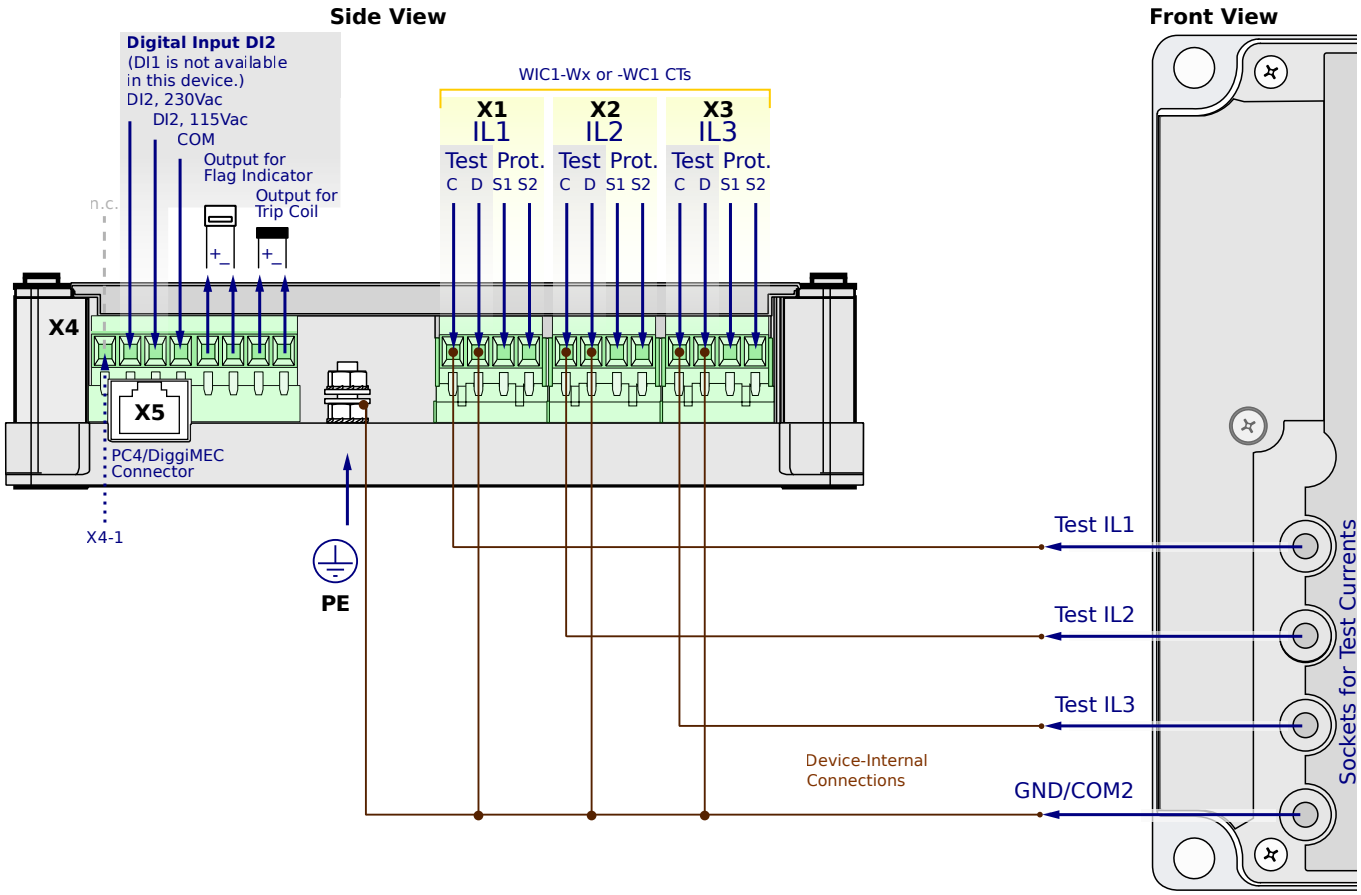


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1SA0

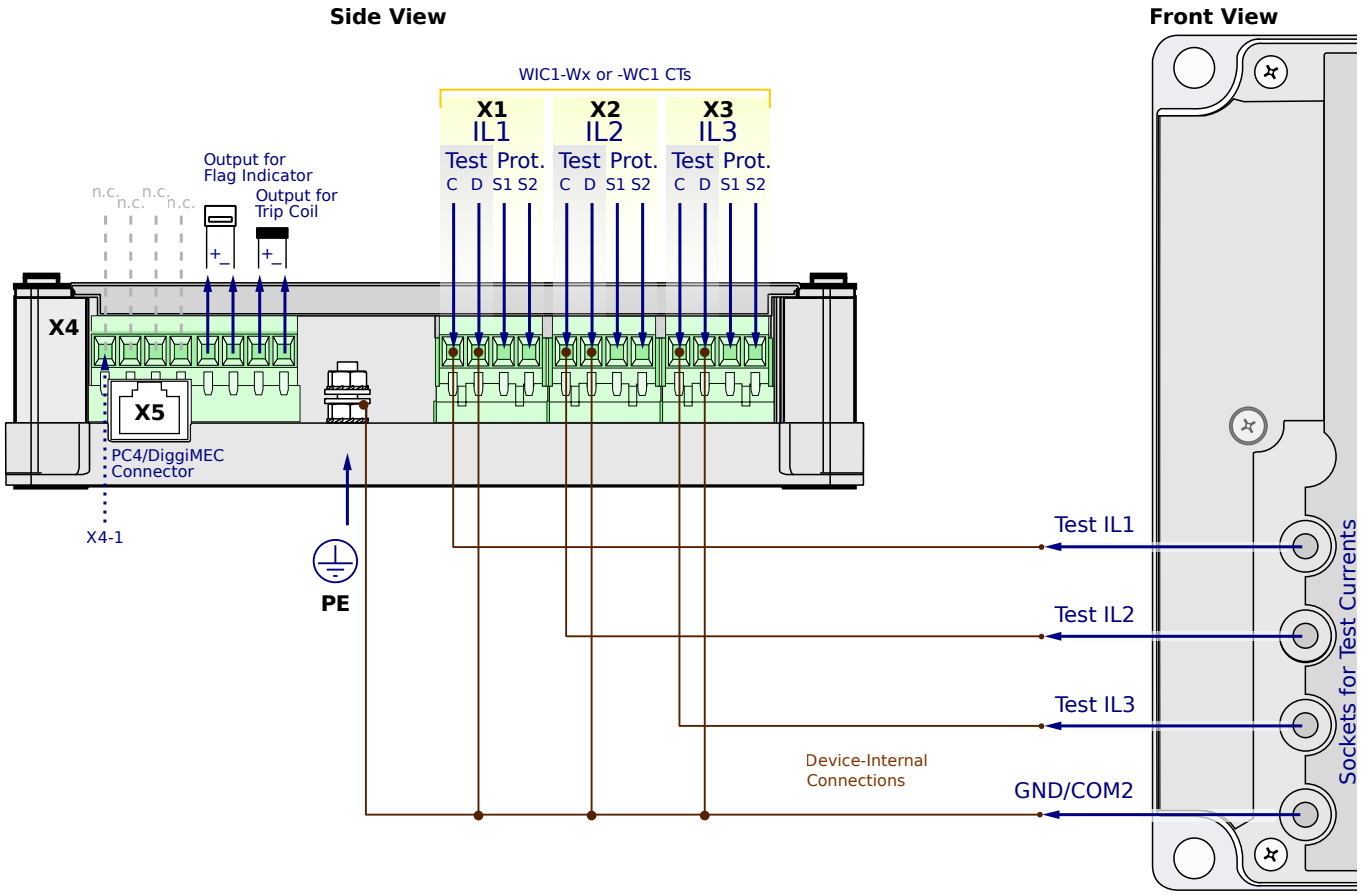


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1SAH

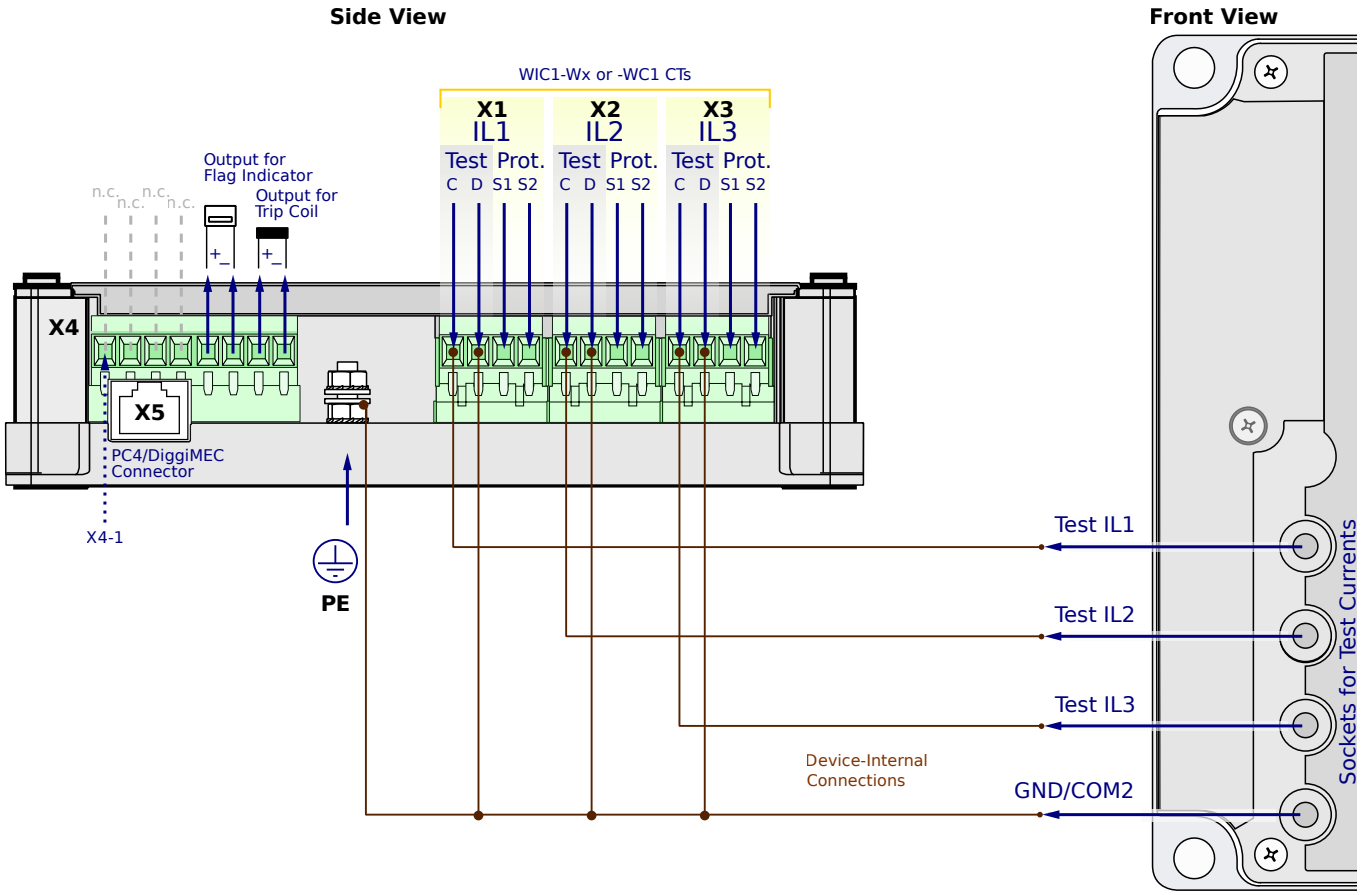


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1AA0

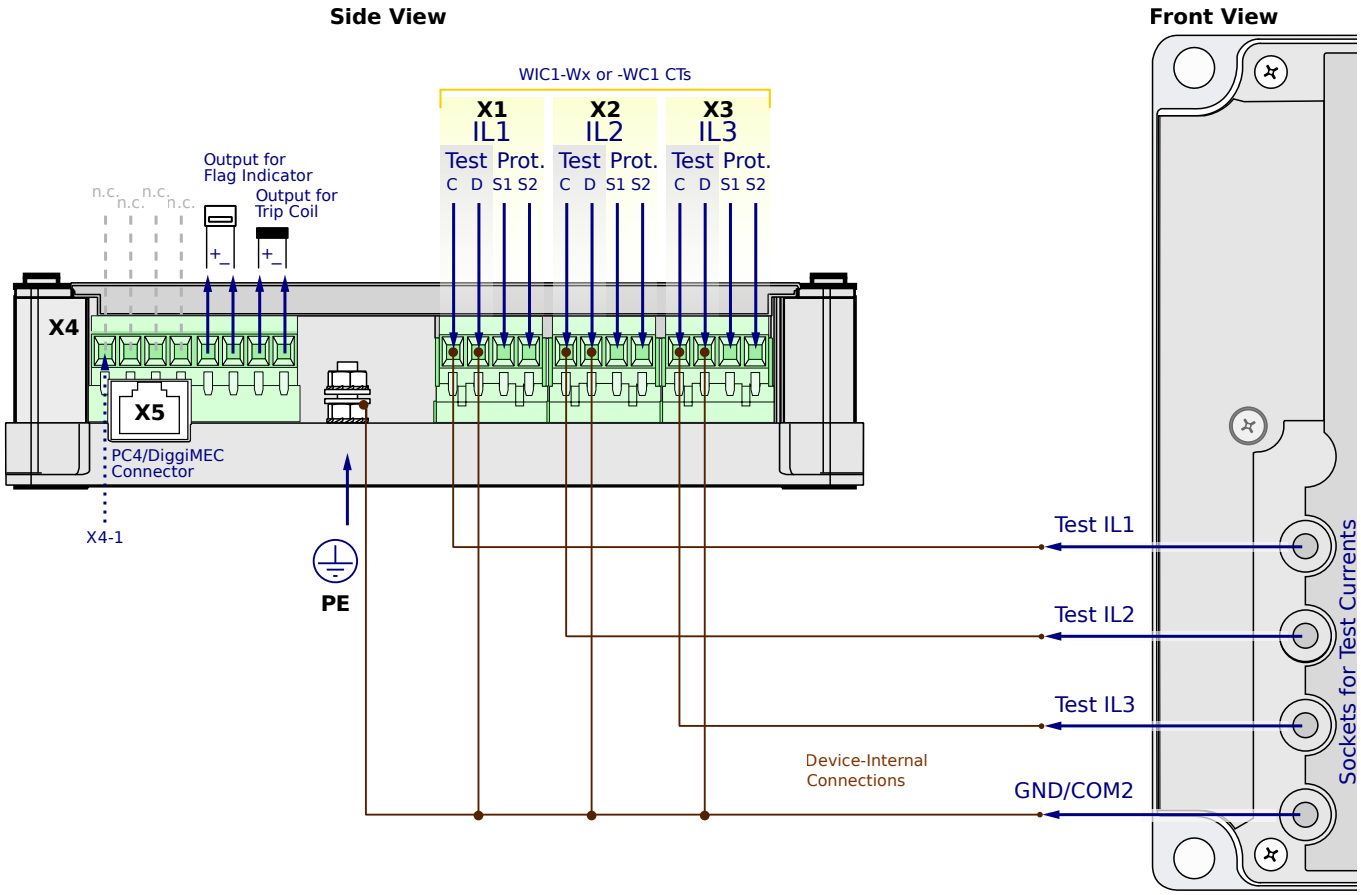


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1AAH

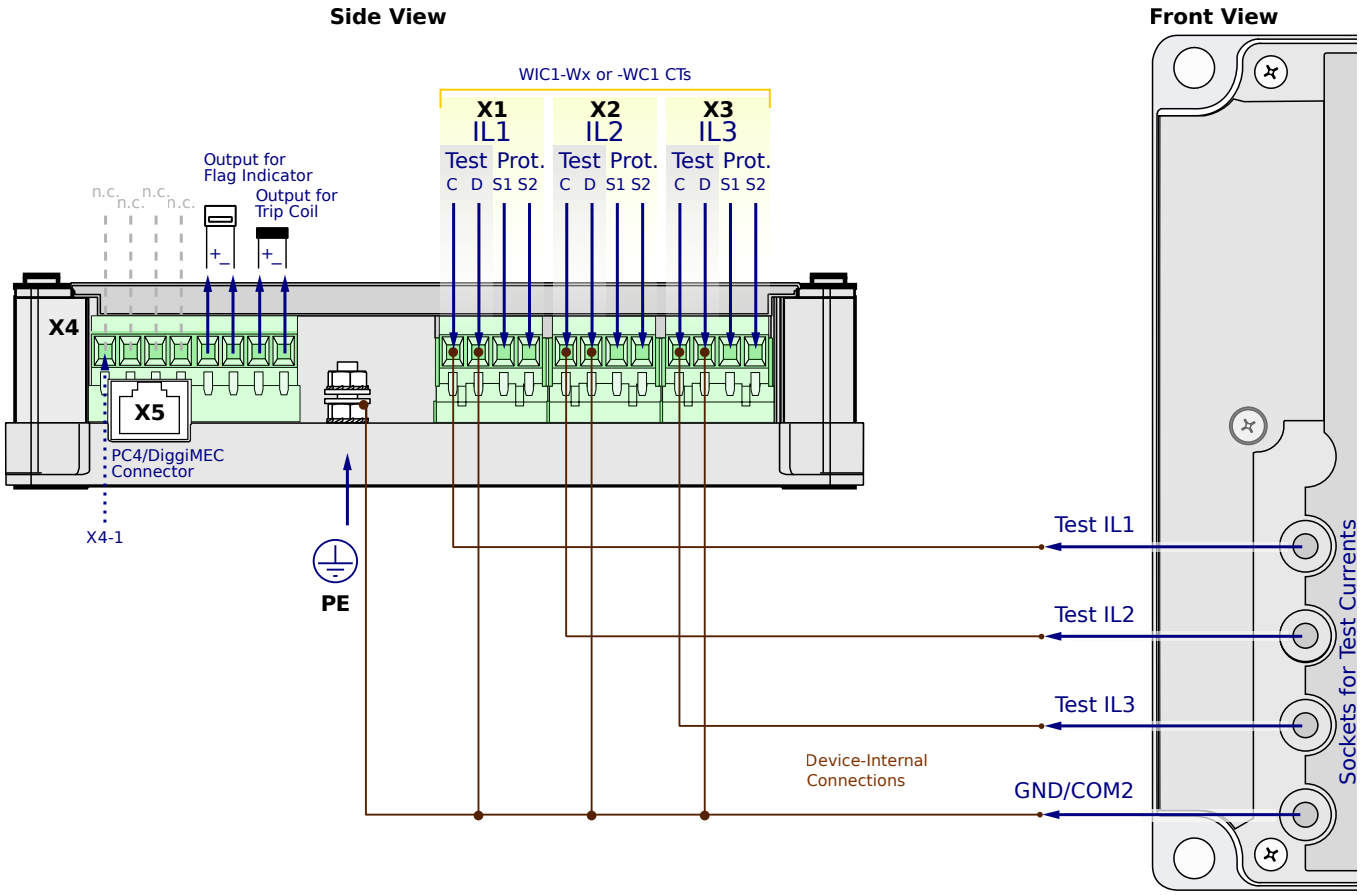


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1PA0

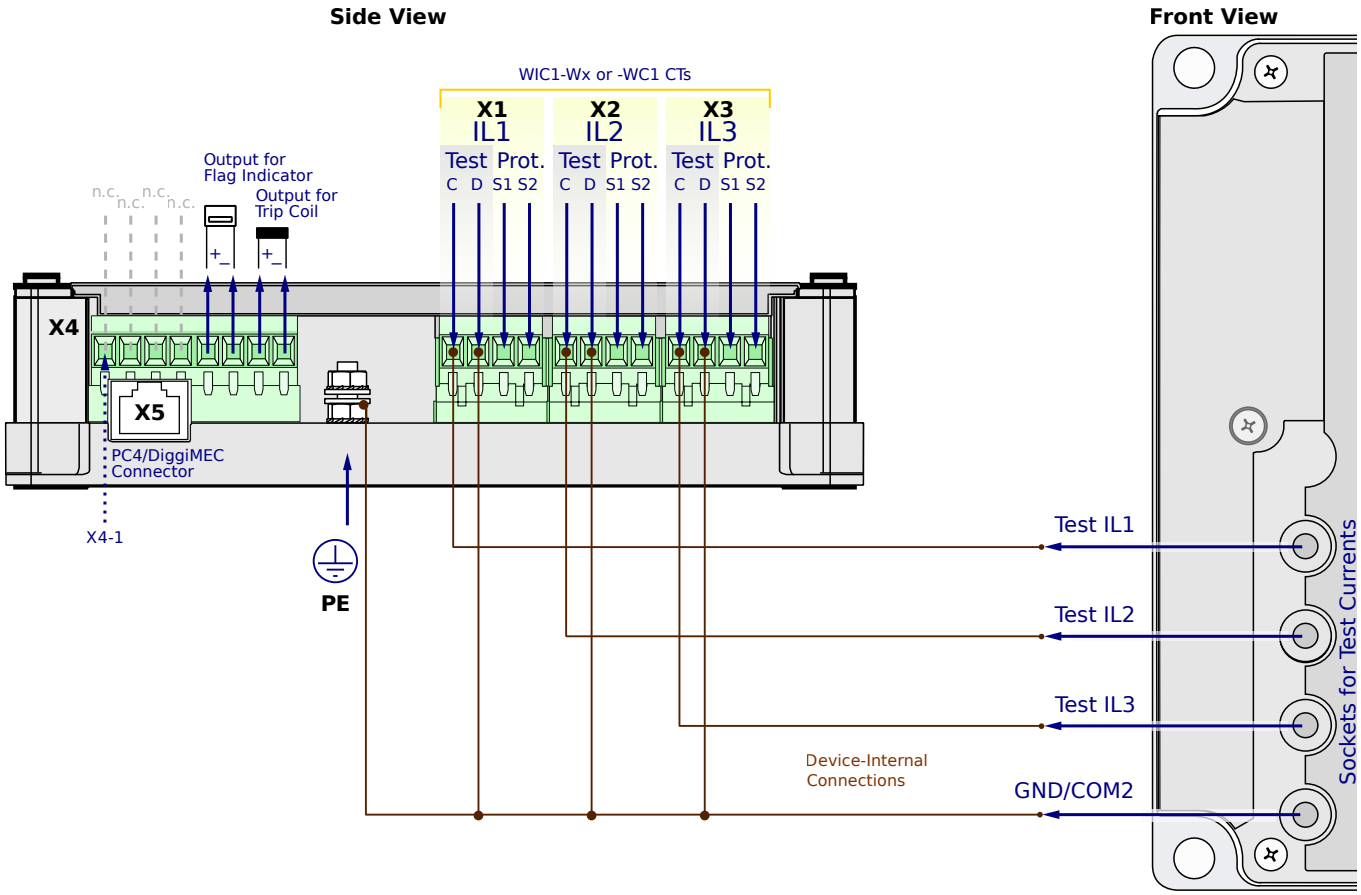


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN1PAH

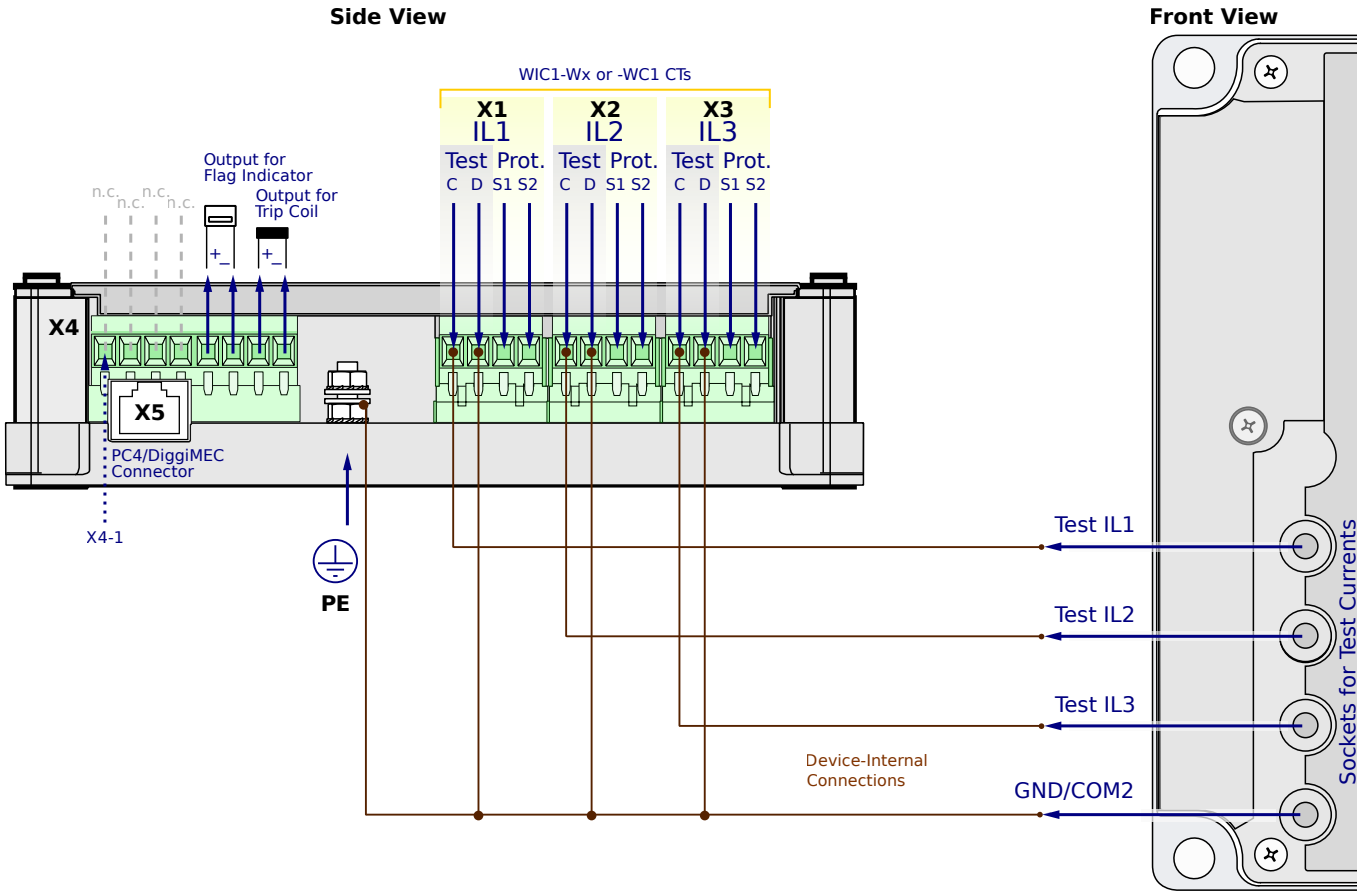


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2SA0

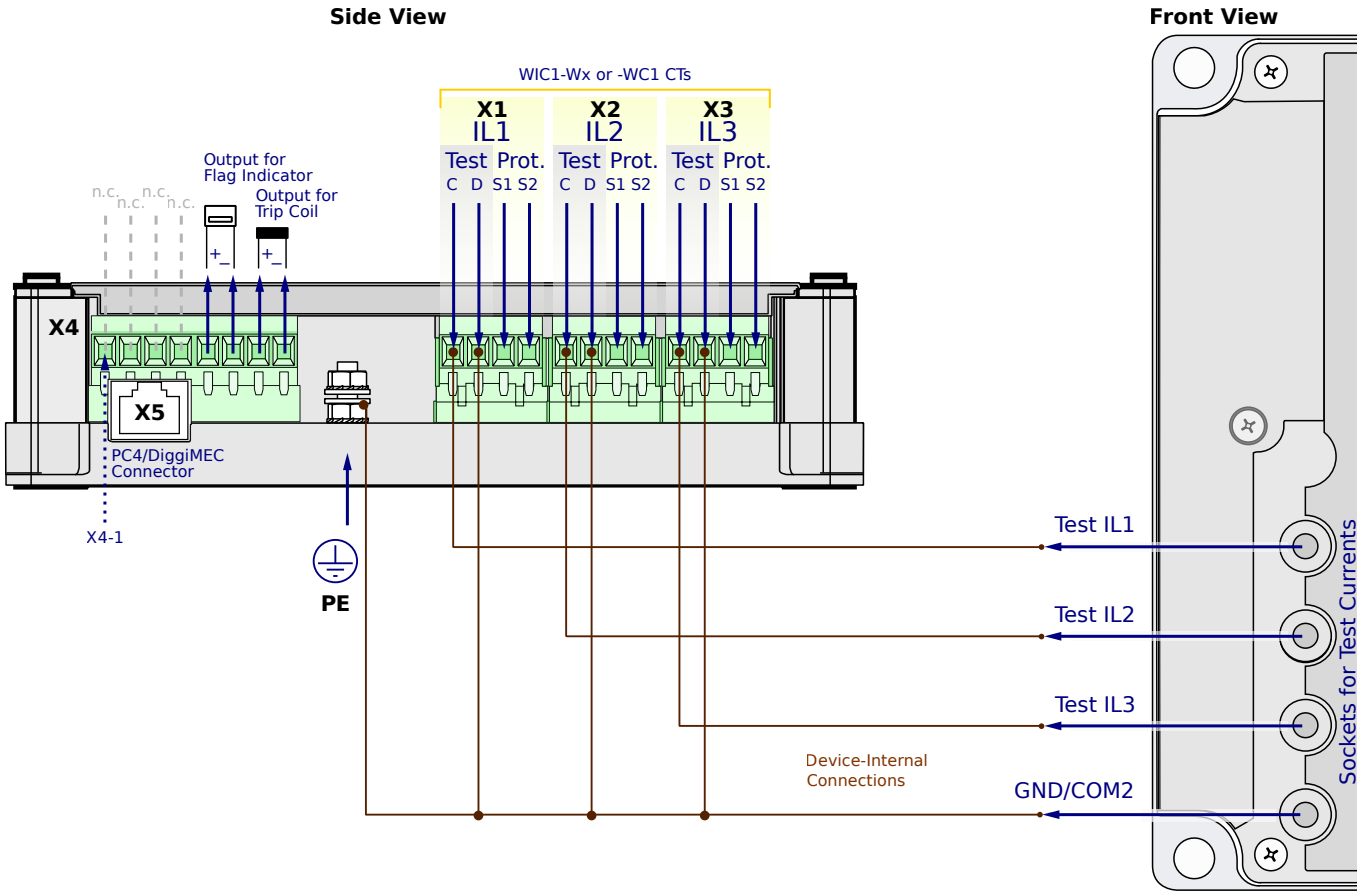


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2SAH

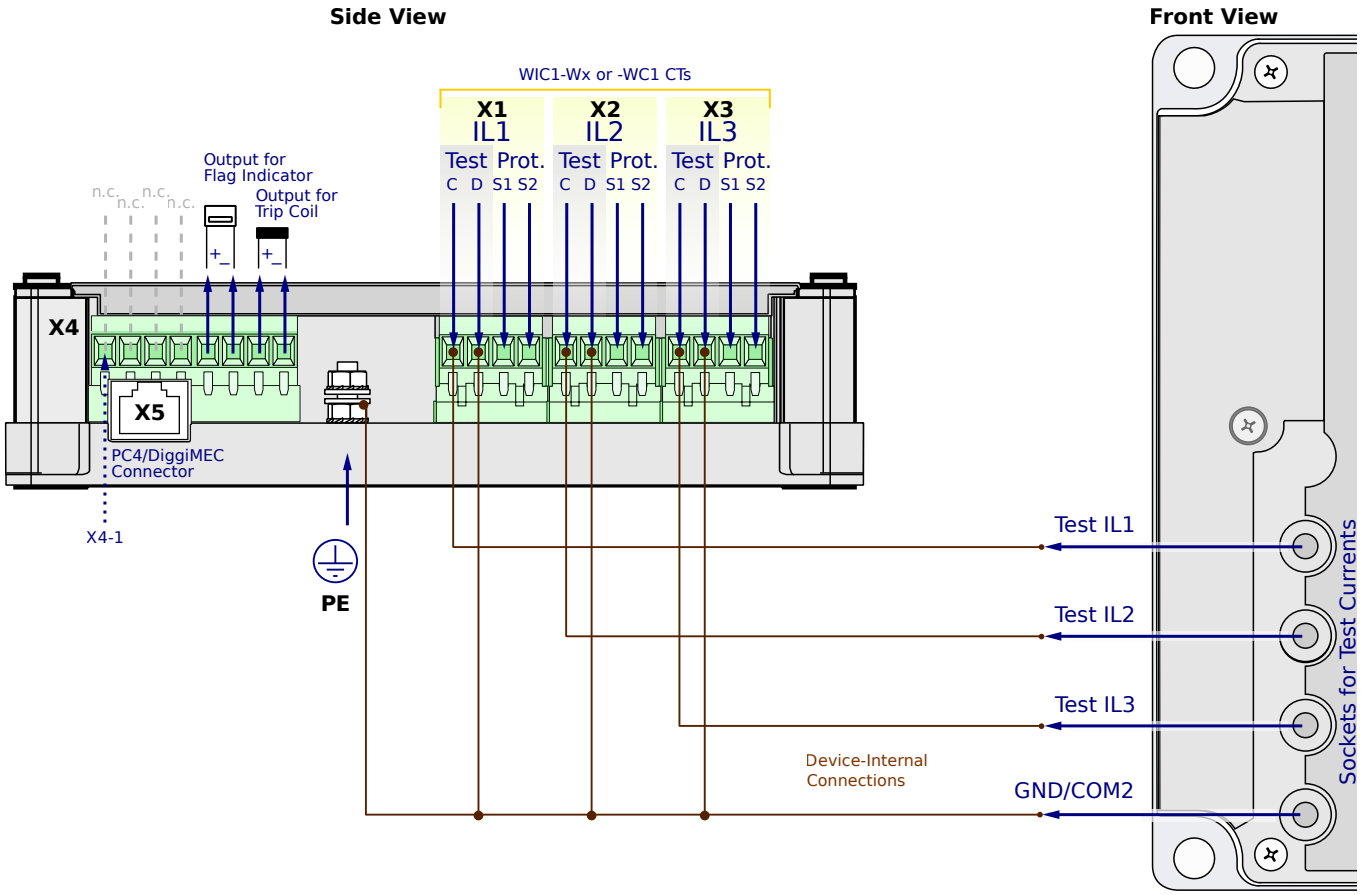


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2AA0

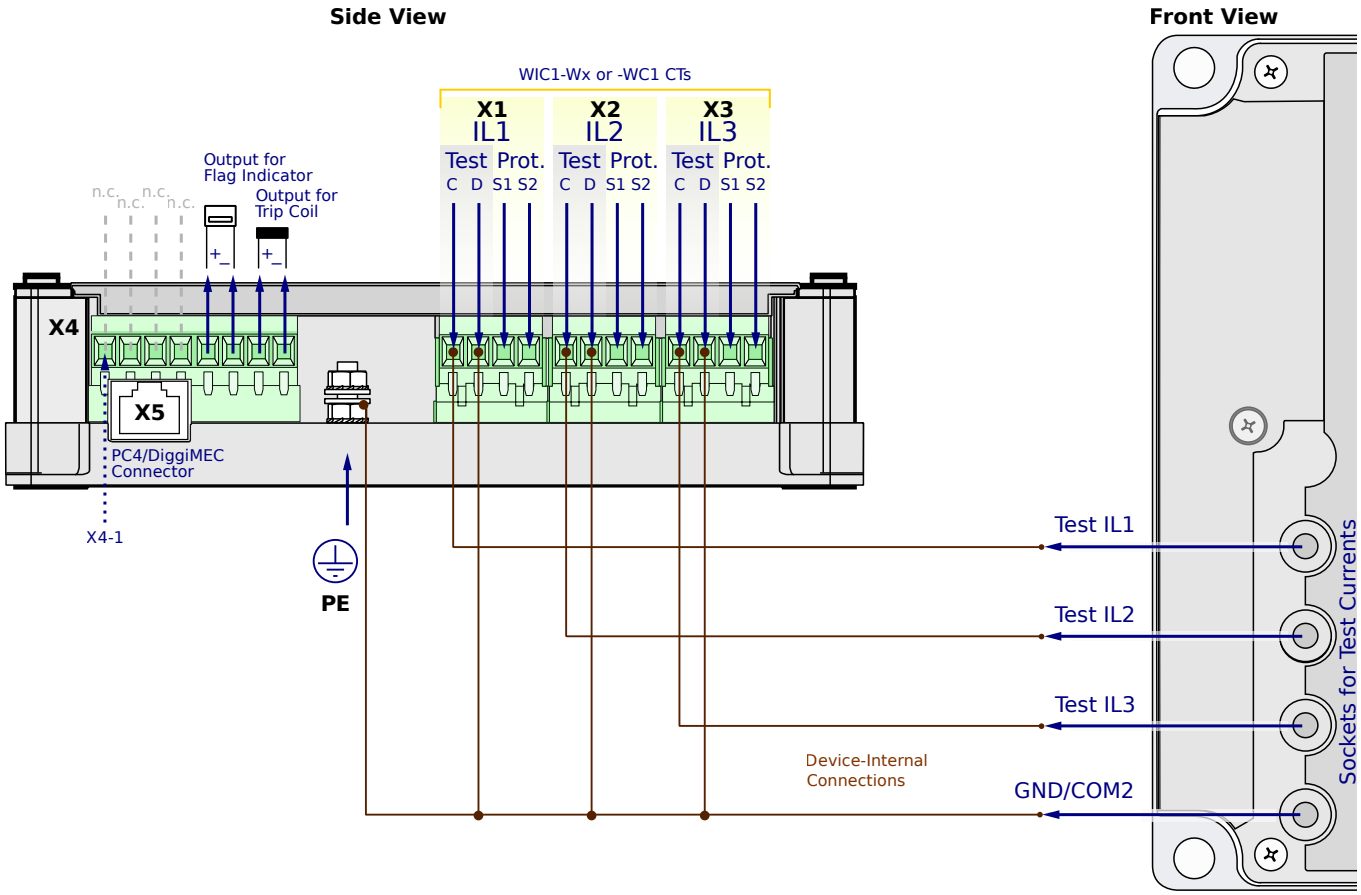


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2AAH

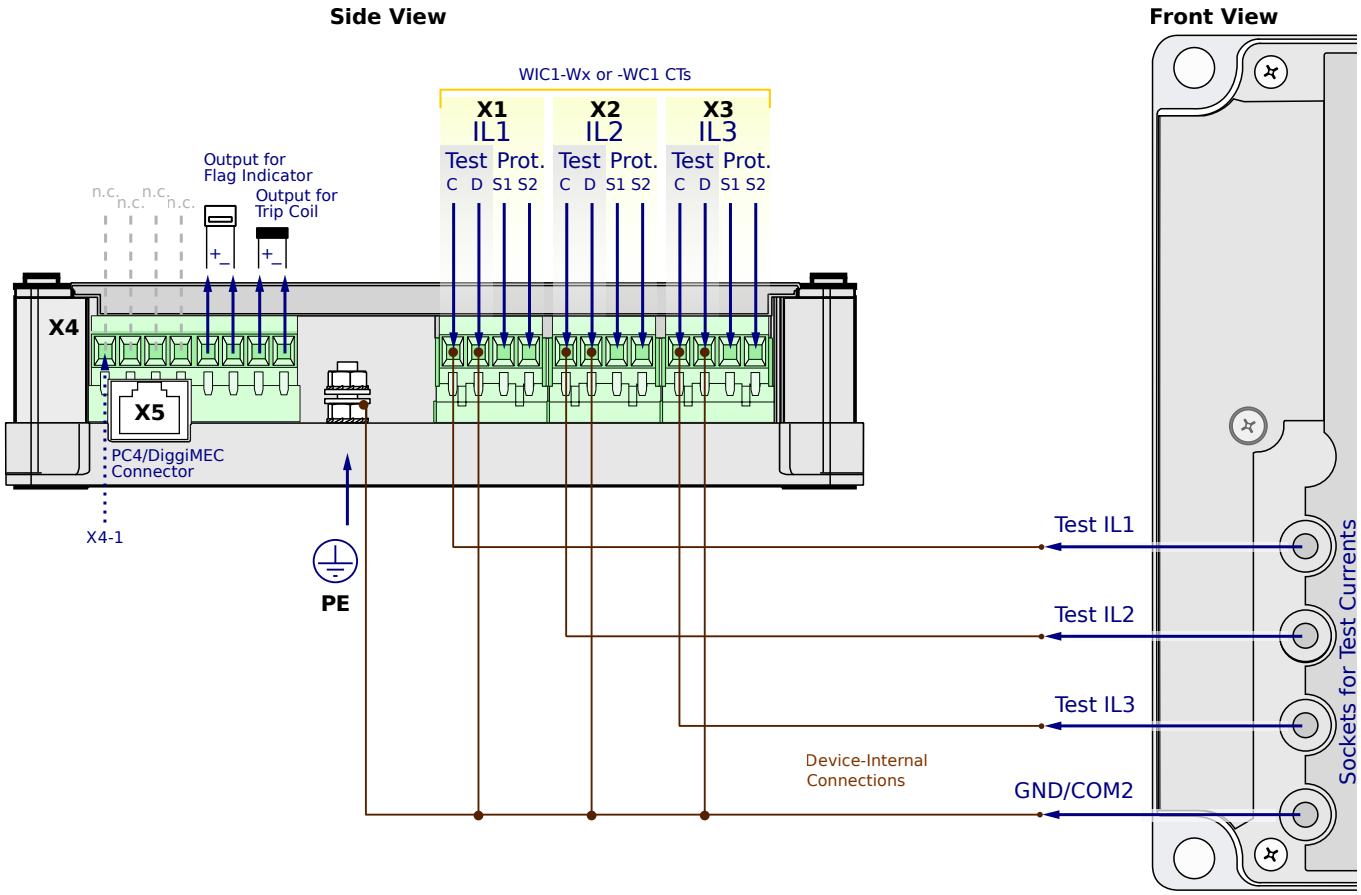


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2PA0

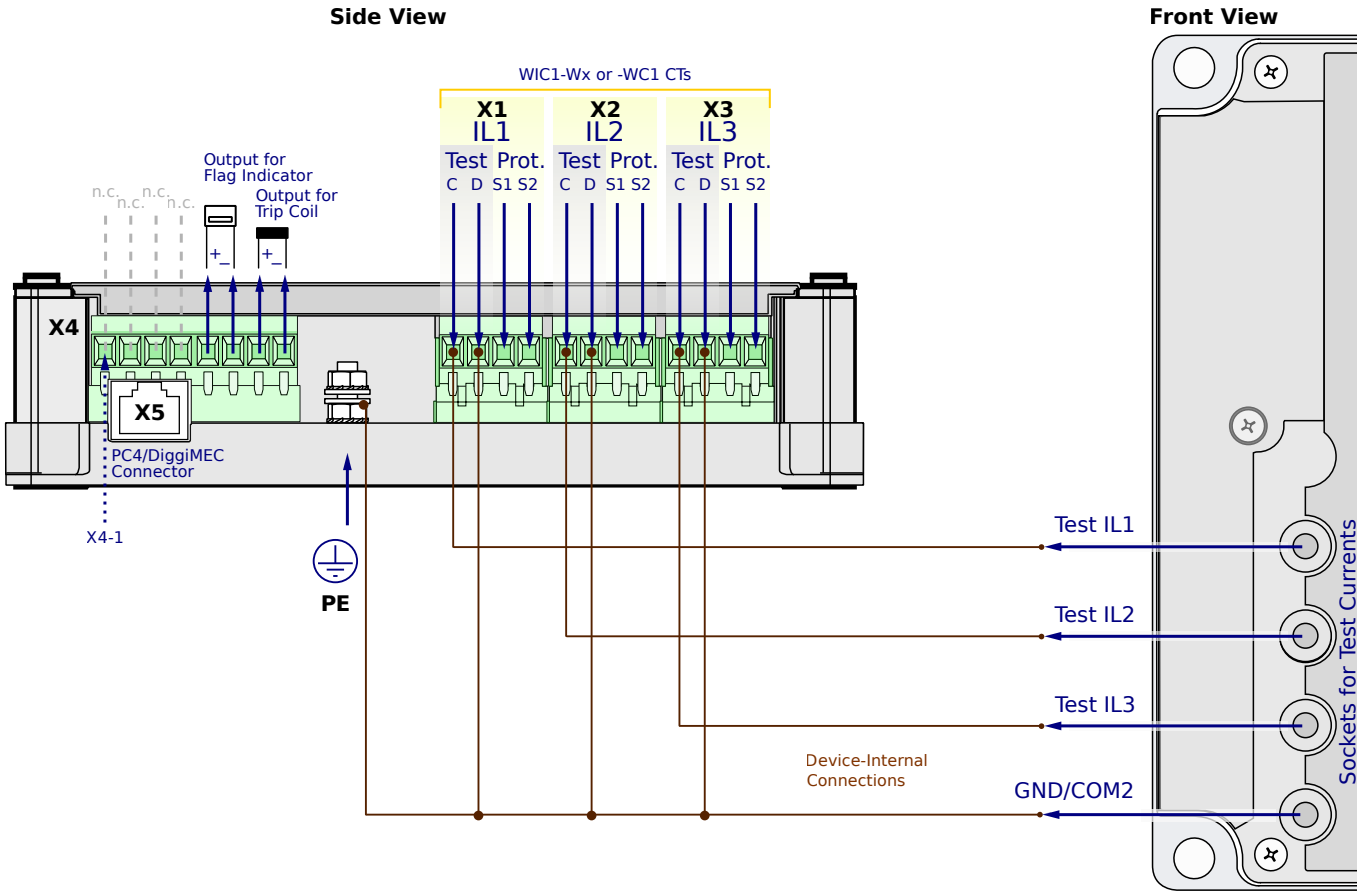


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CN2PAH

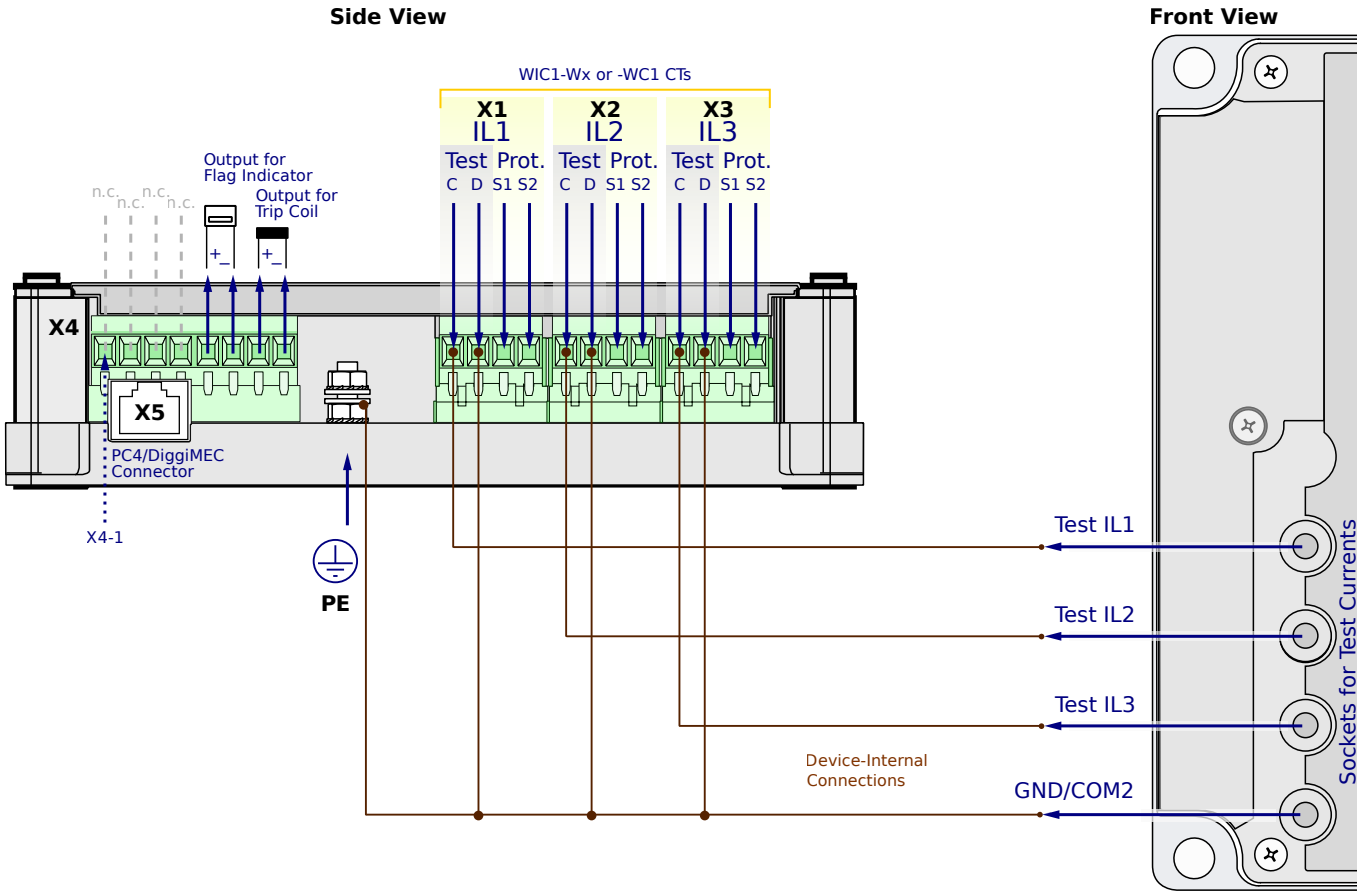


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1SA0

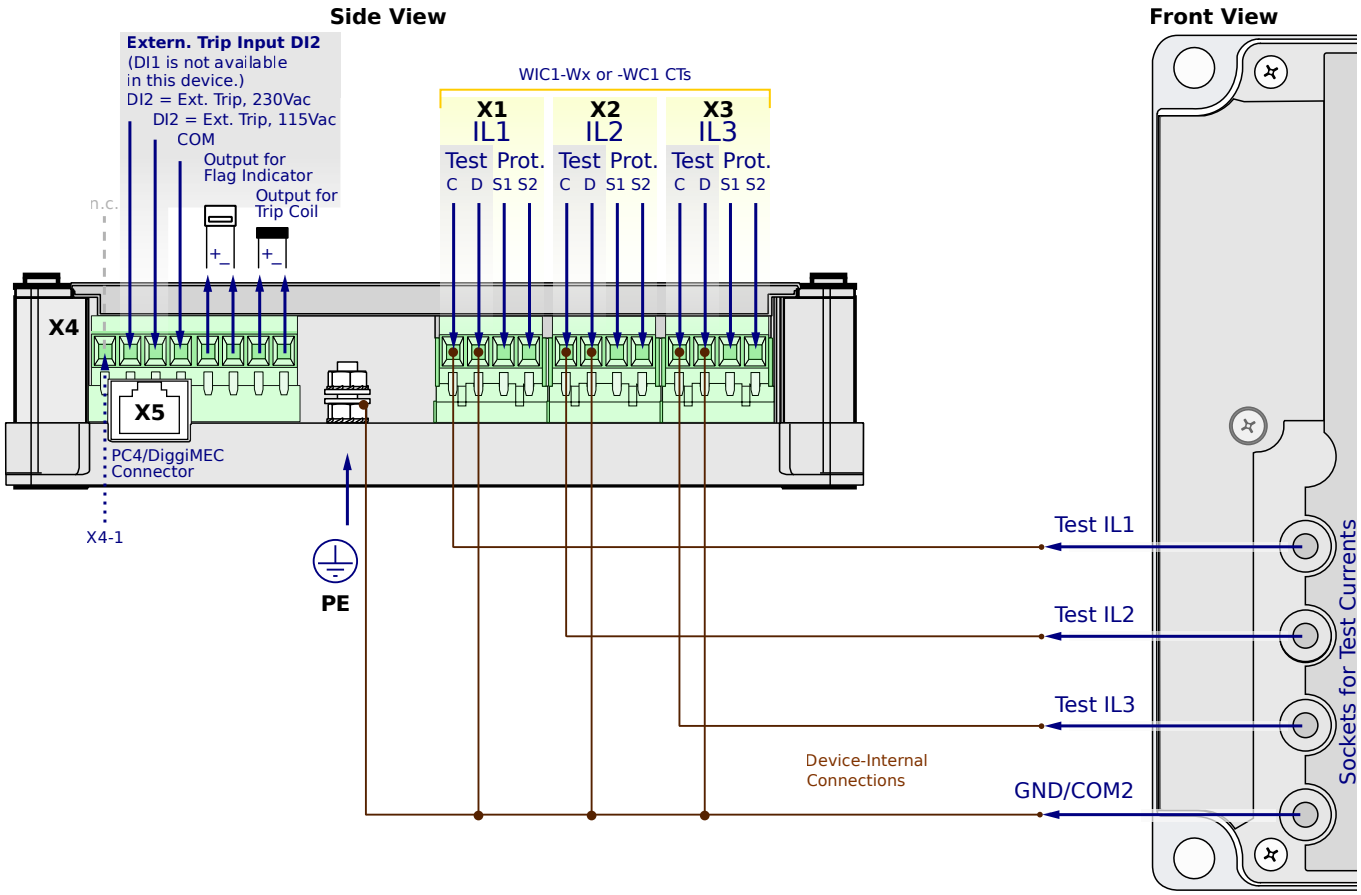


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1SAH

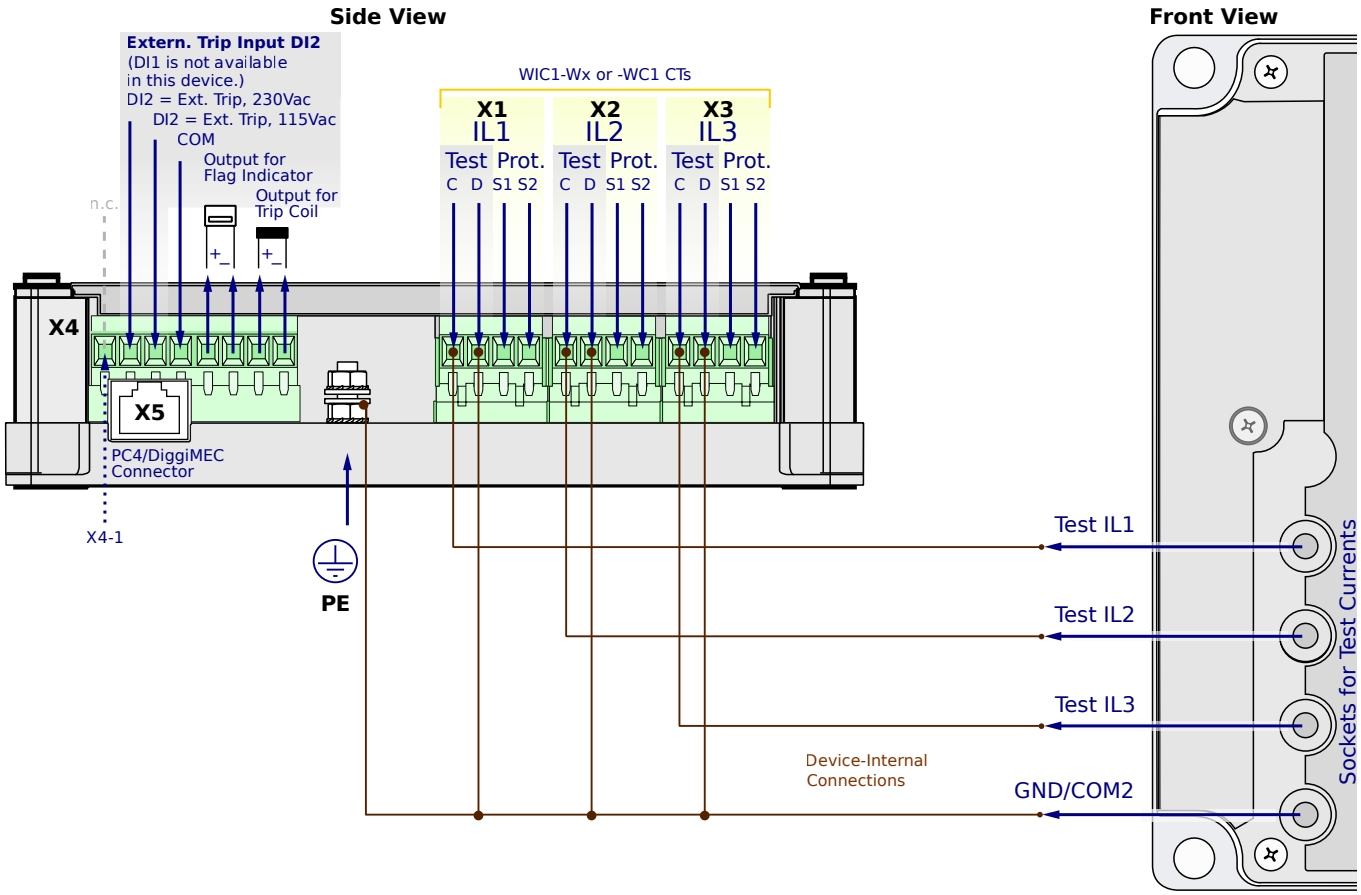


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1AA0

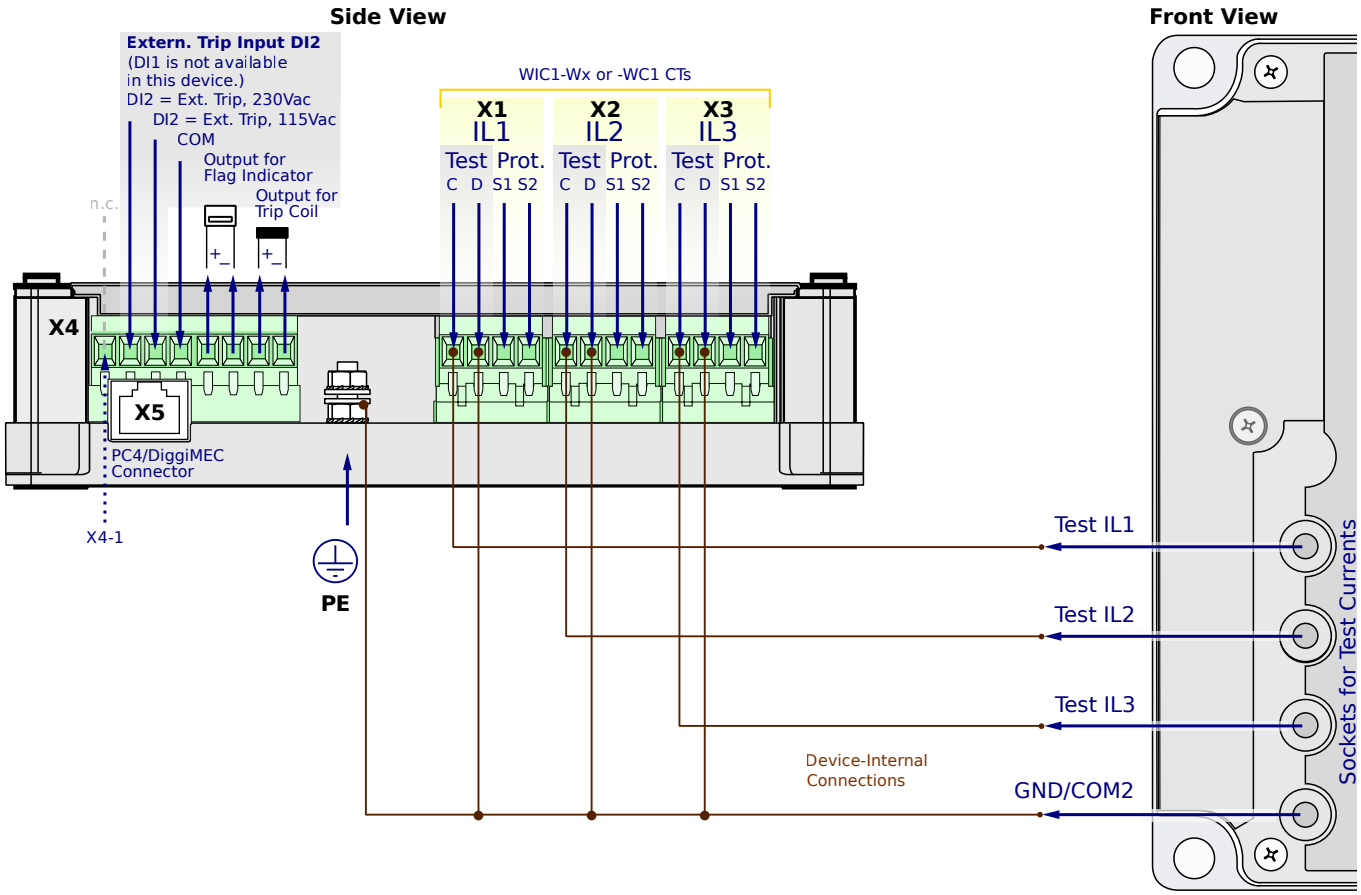


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1AAH

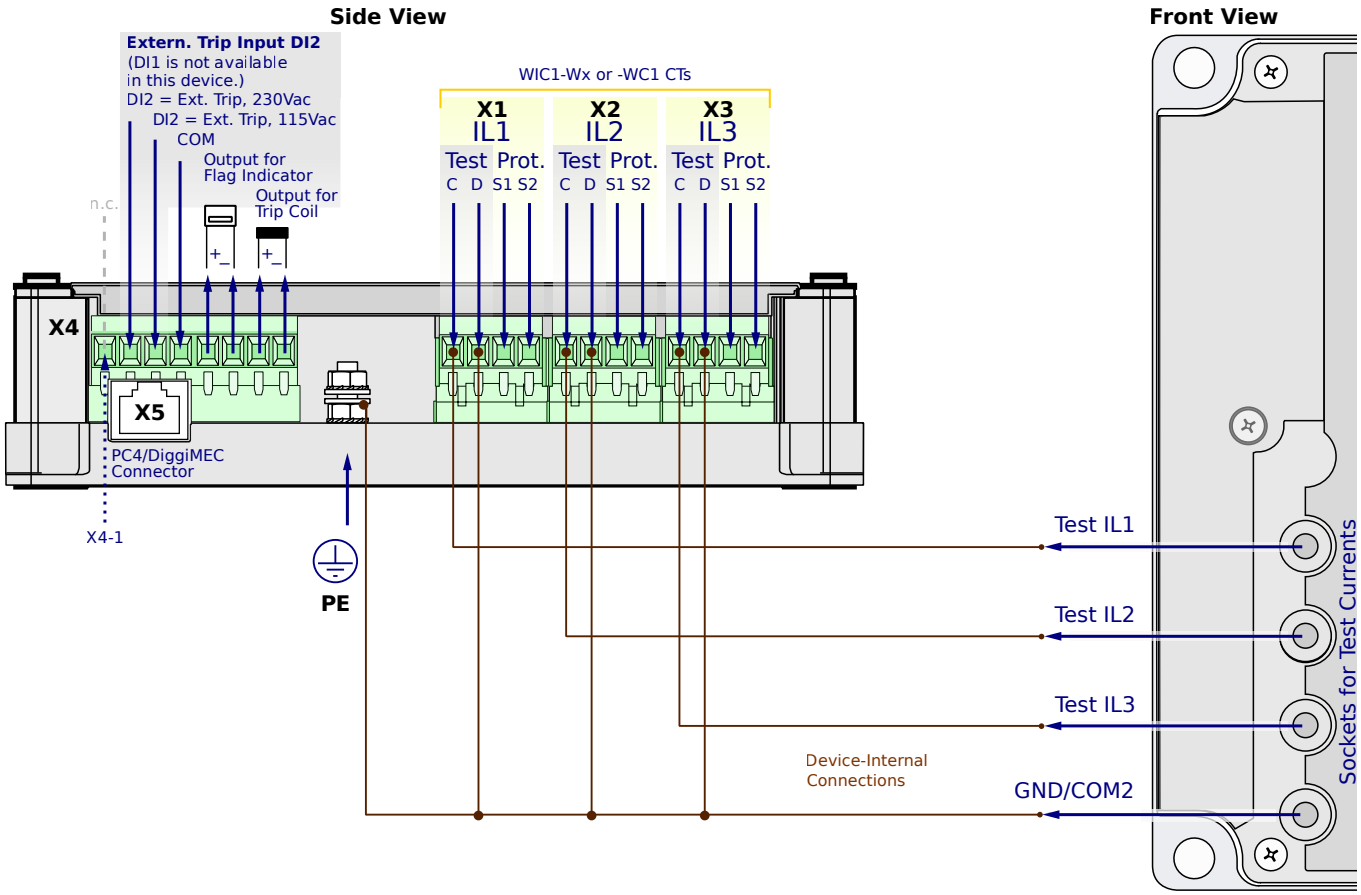


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1PA0

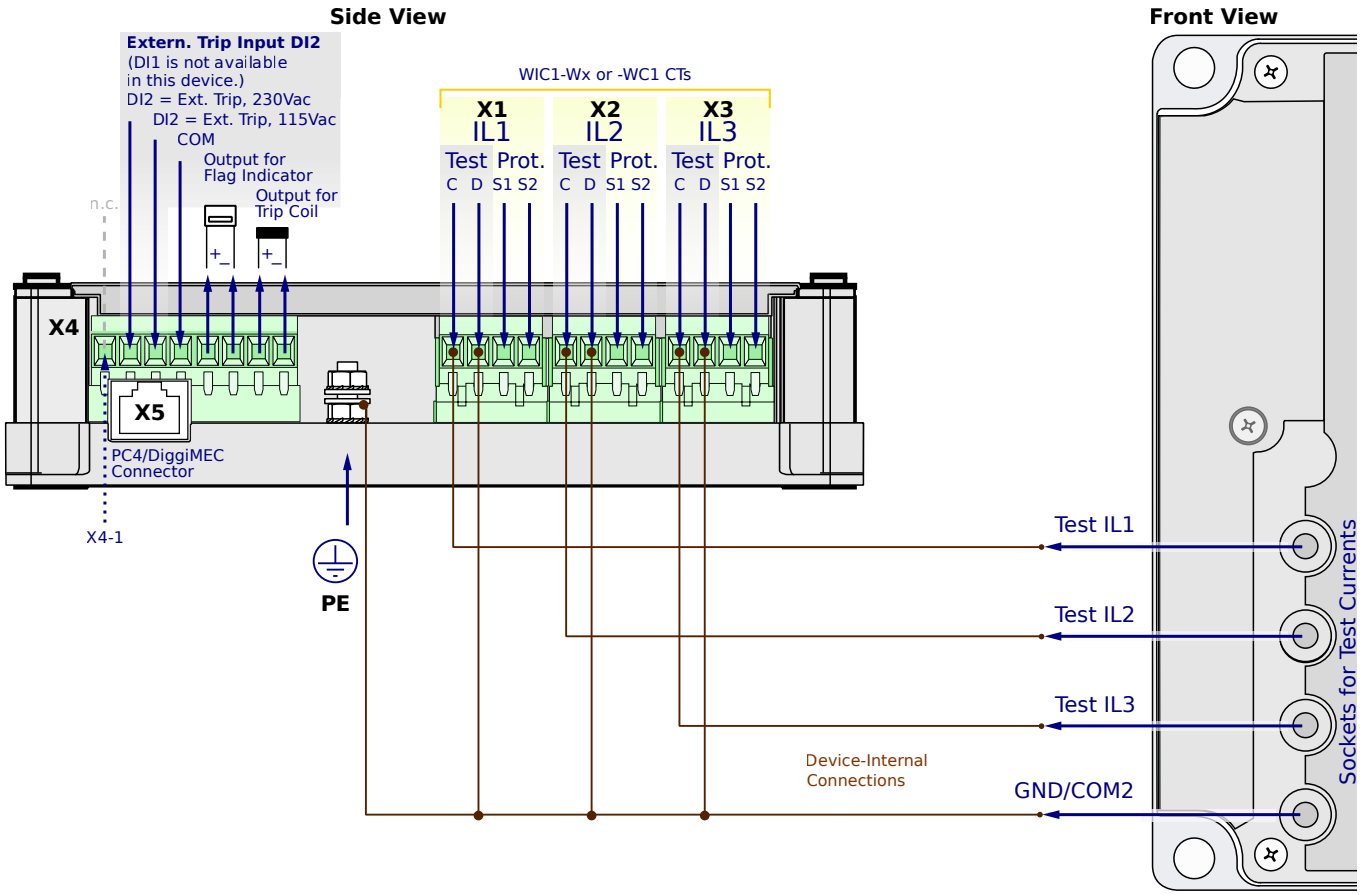


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF1PAH

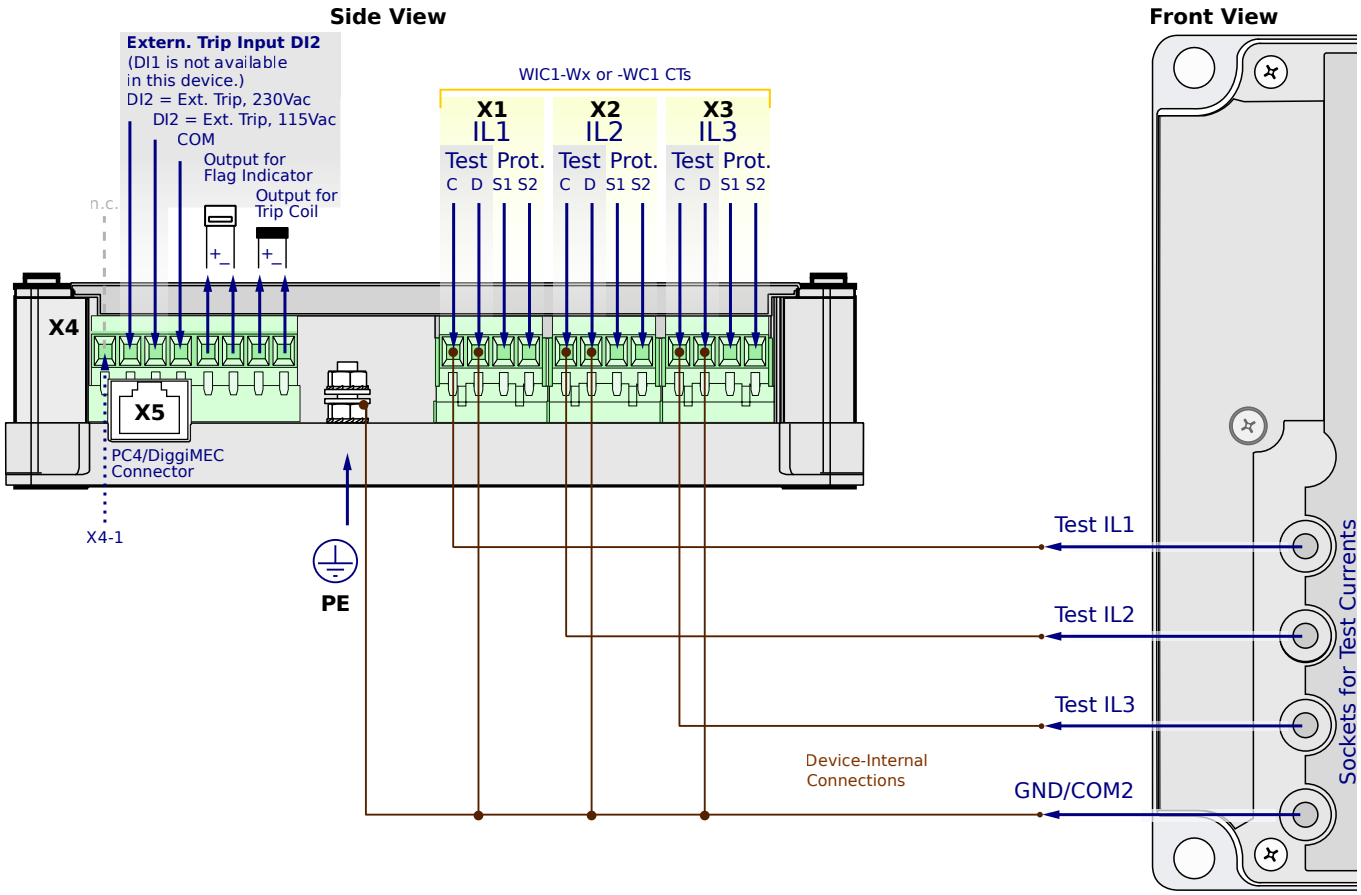


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2SA0

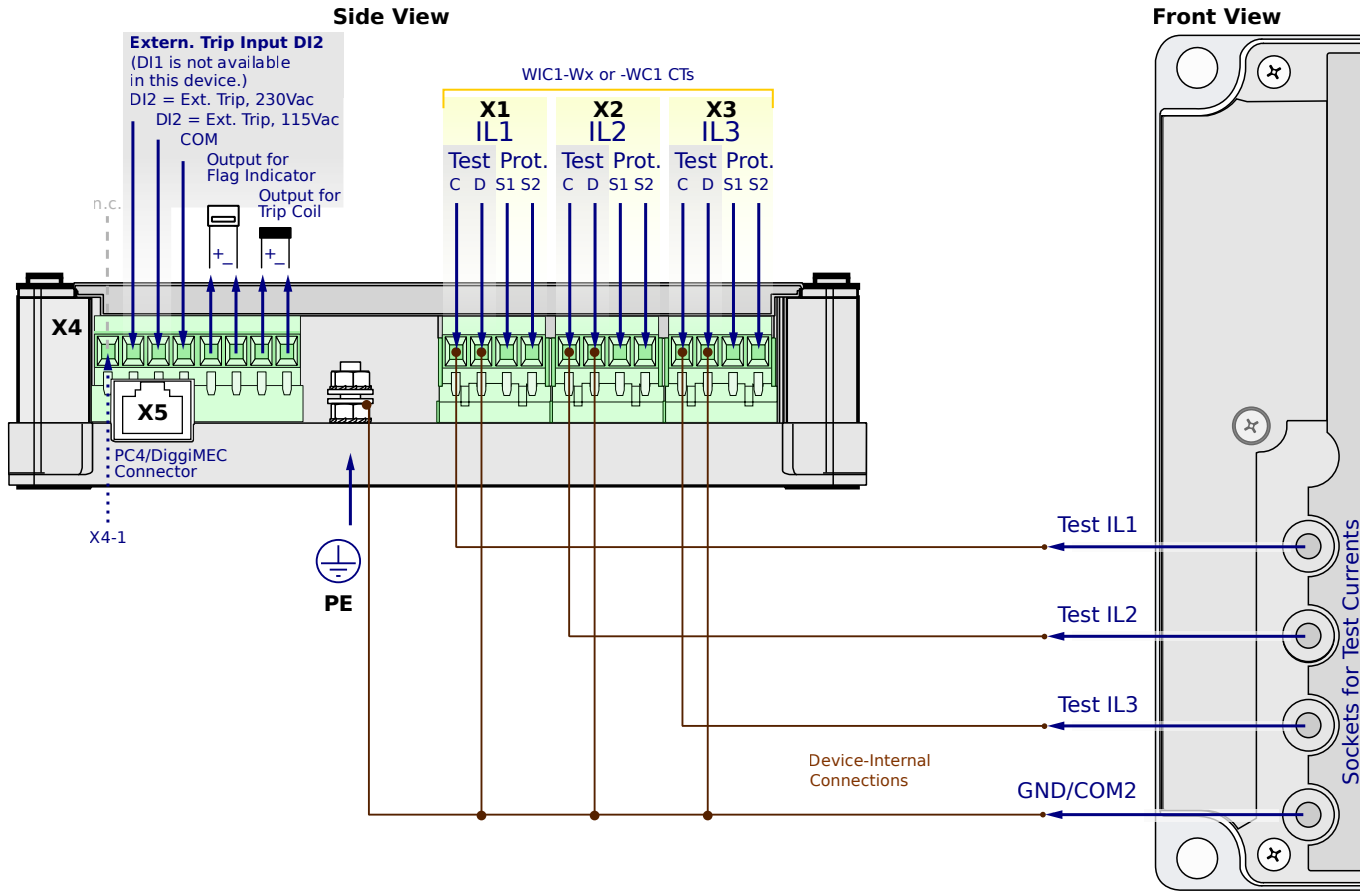


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2SAH

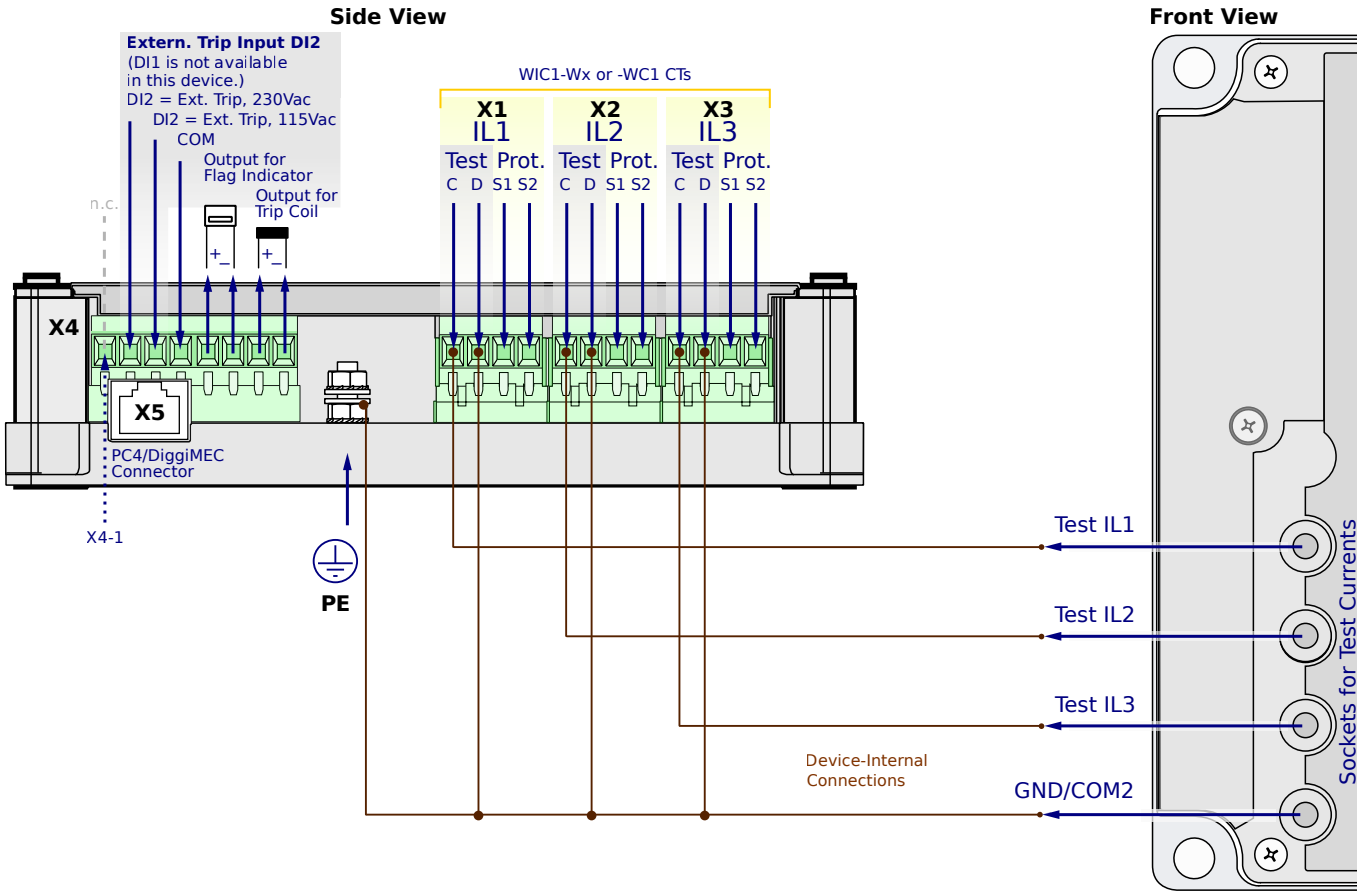


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2AA0

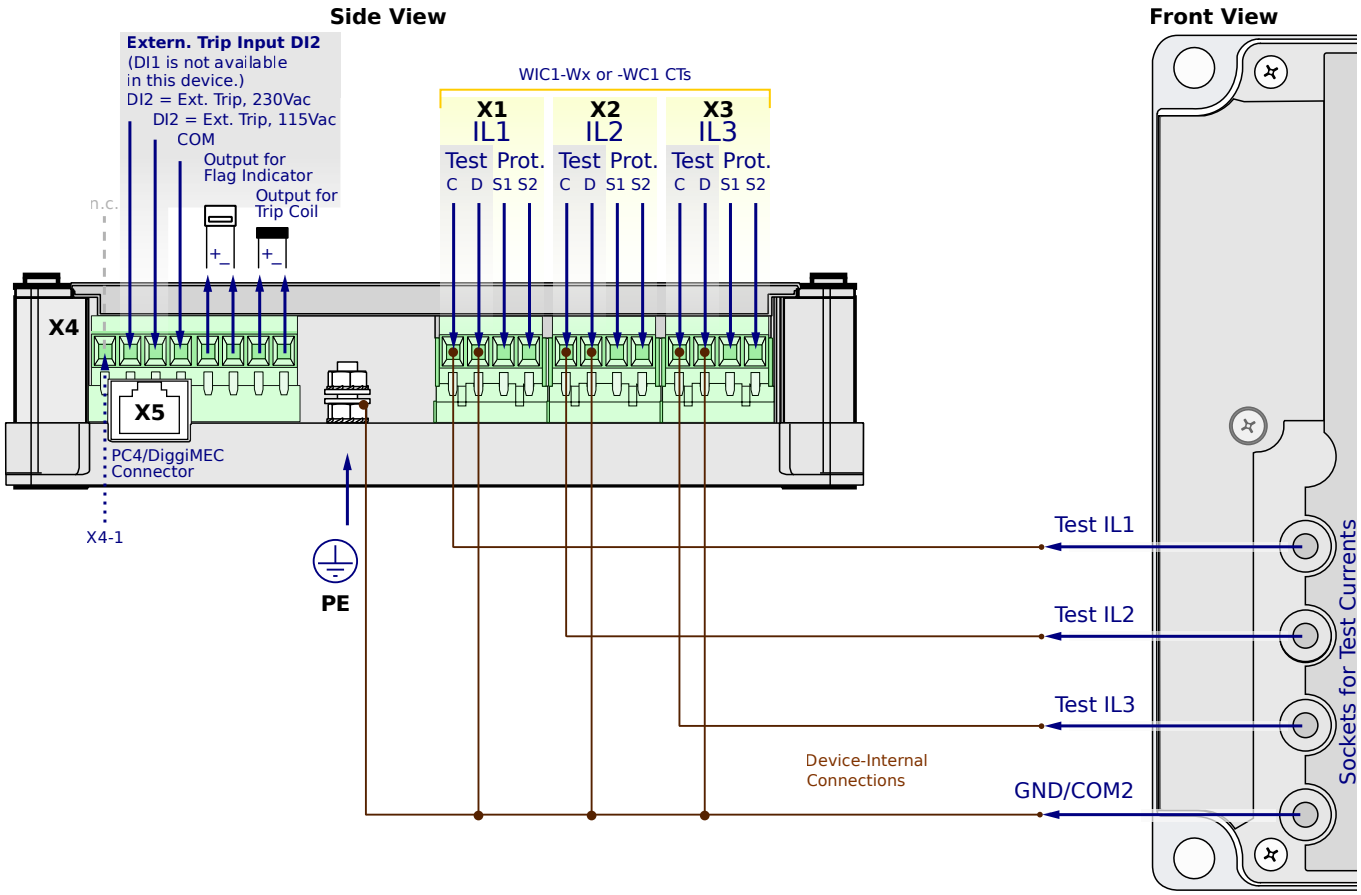


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2AAH

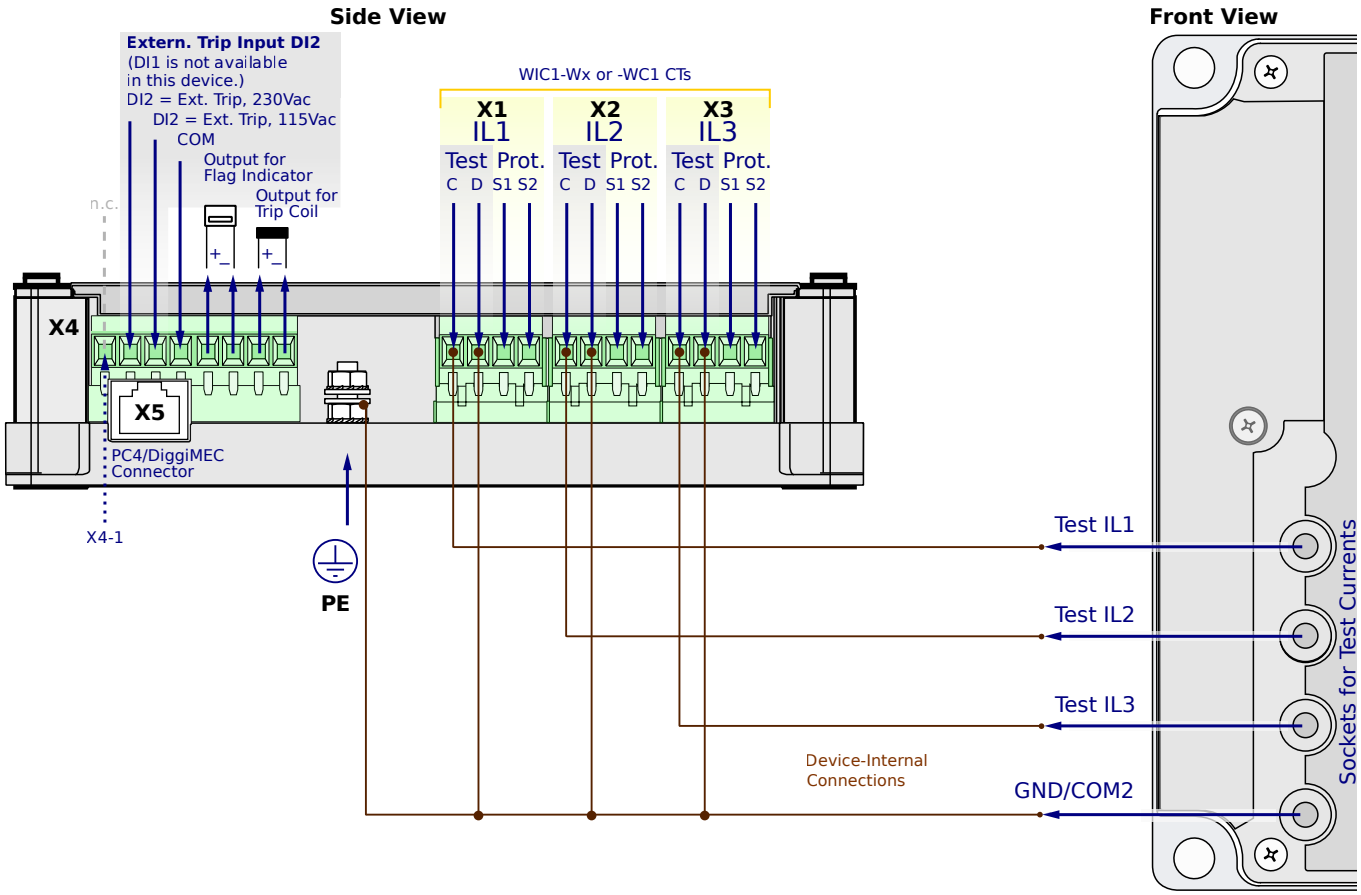


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2PA0

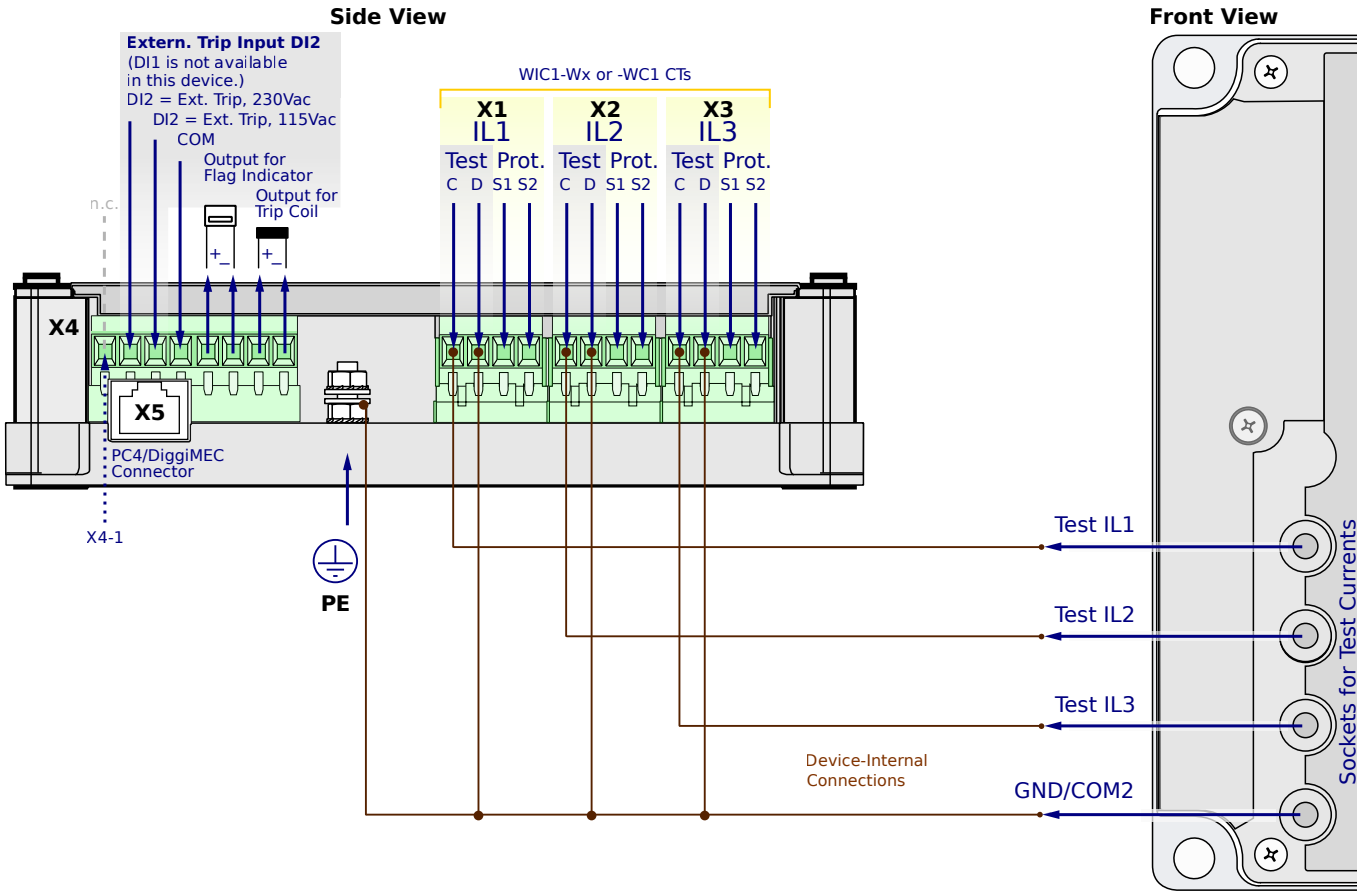


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CF2PAH

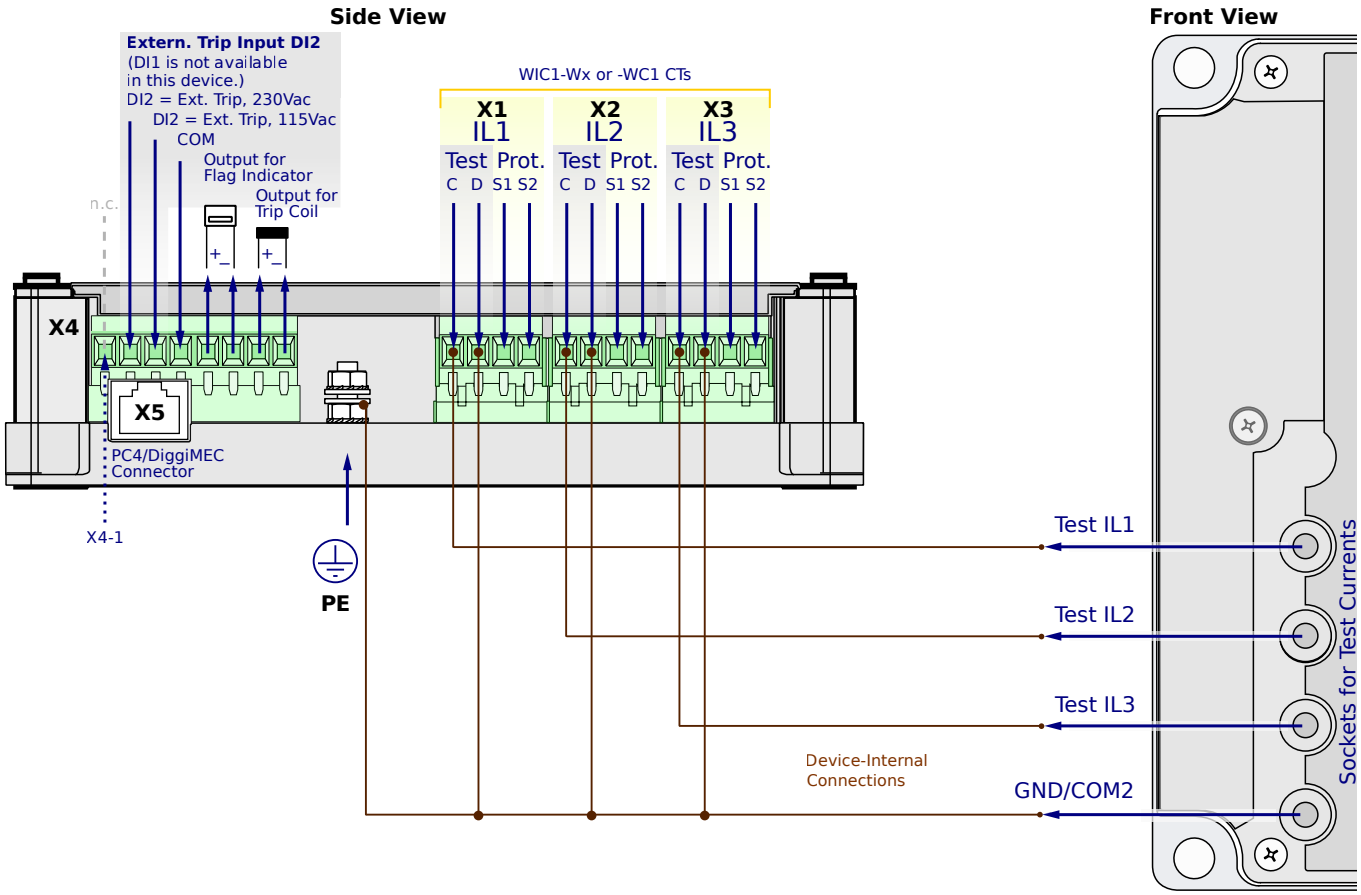


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1SA0

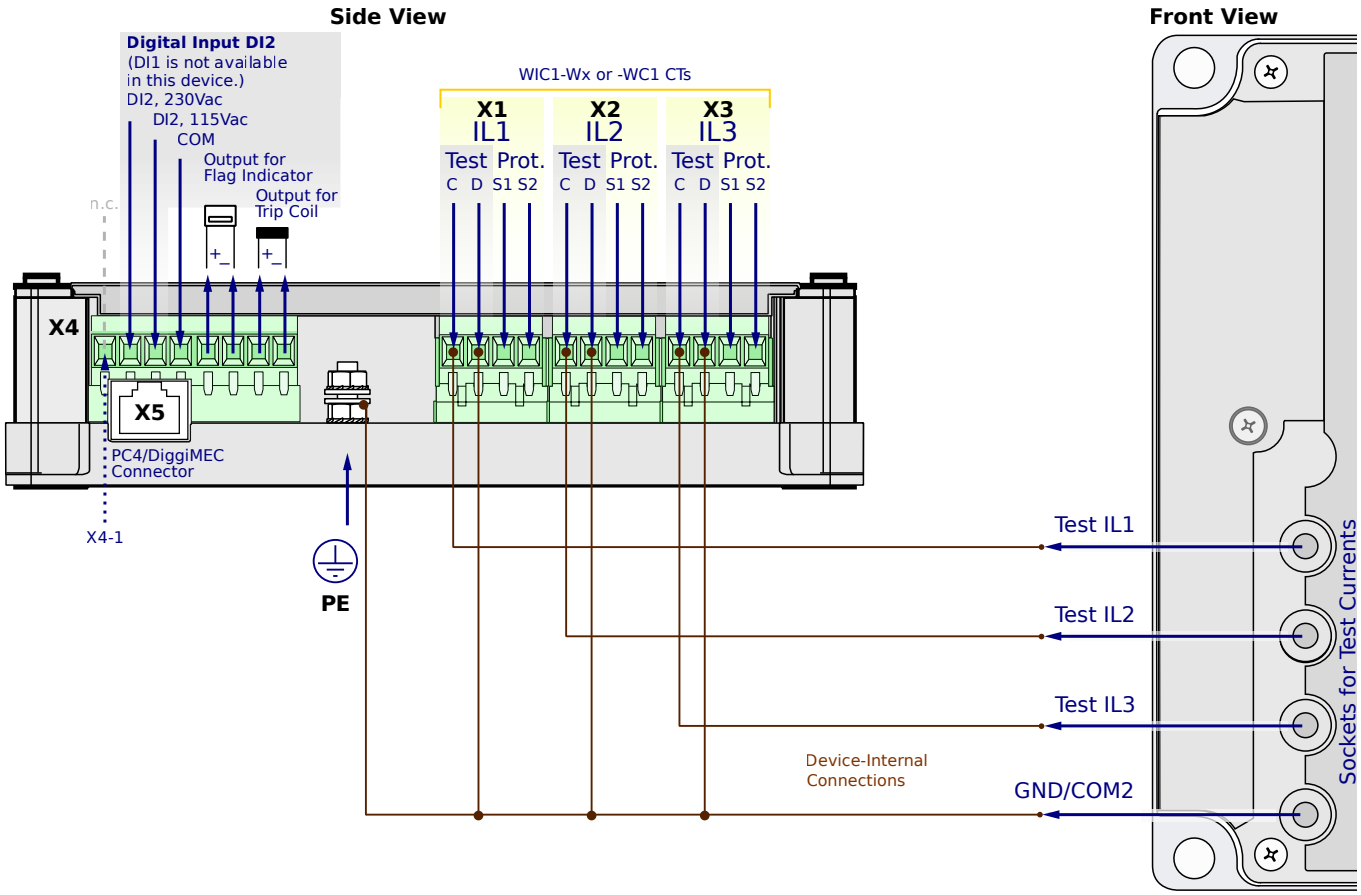


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1SAH

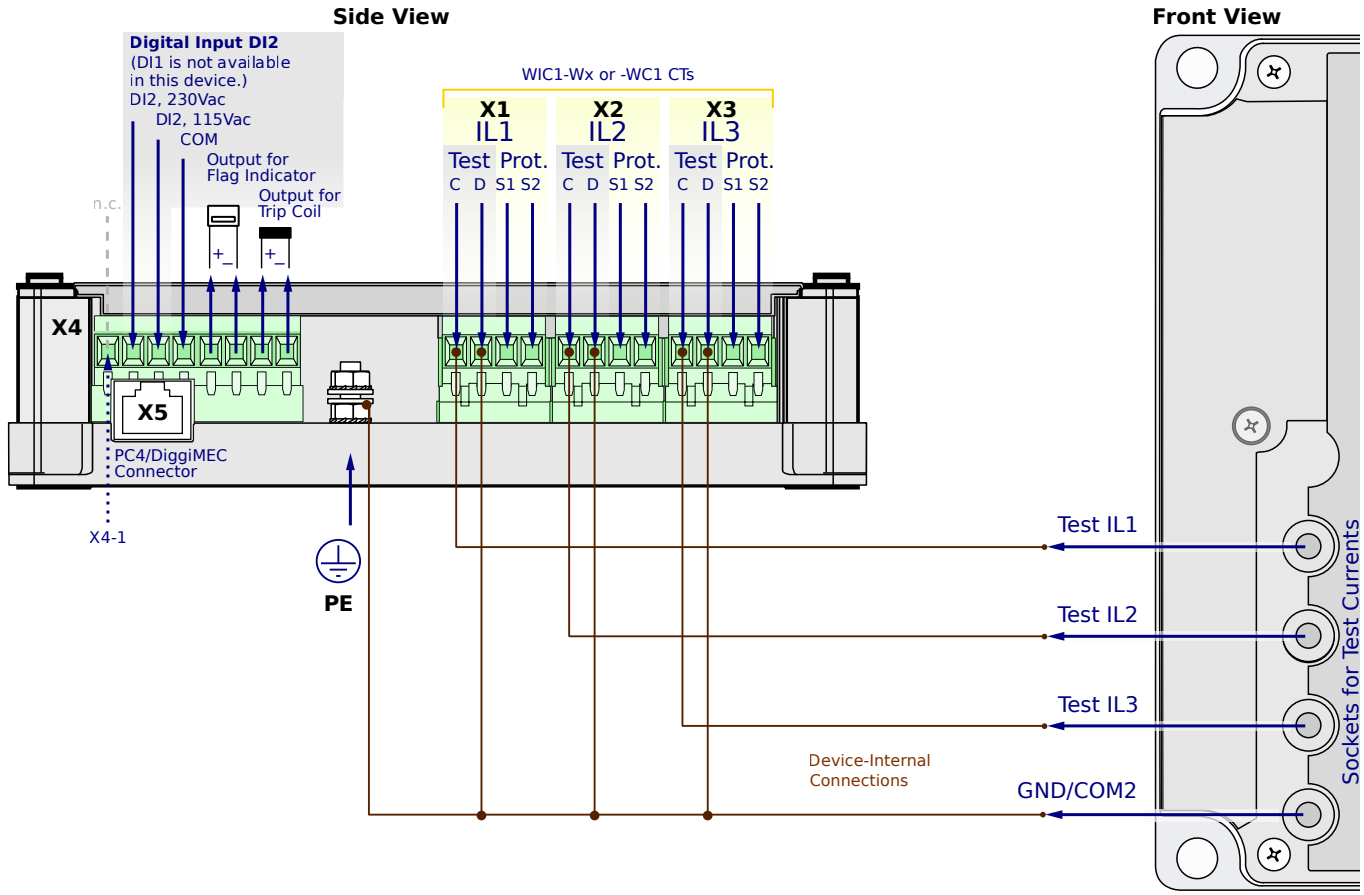


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1AA0

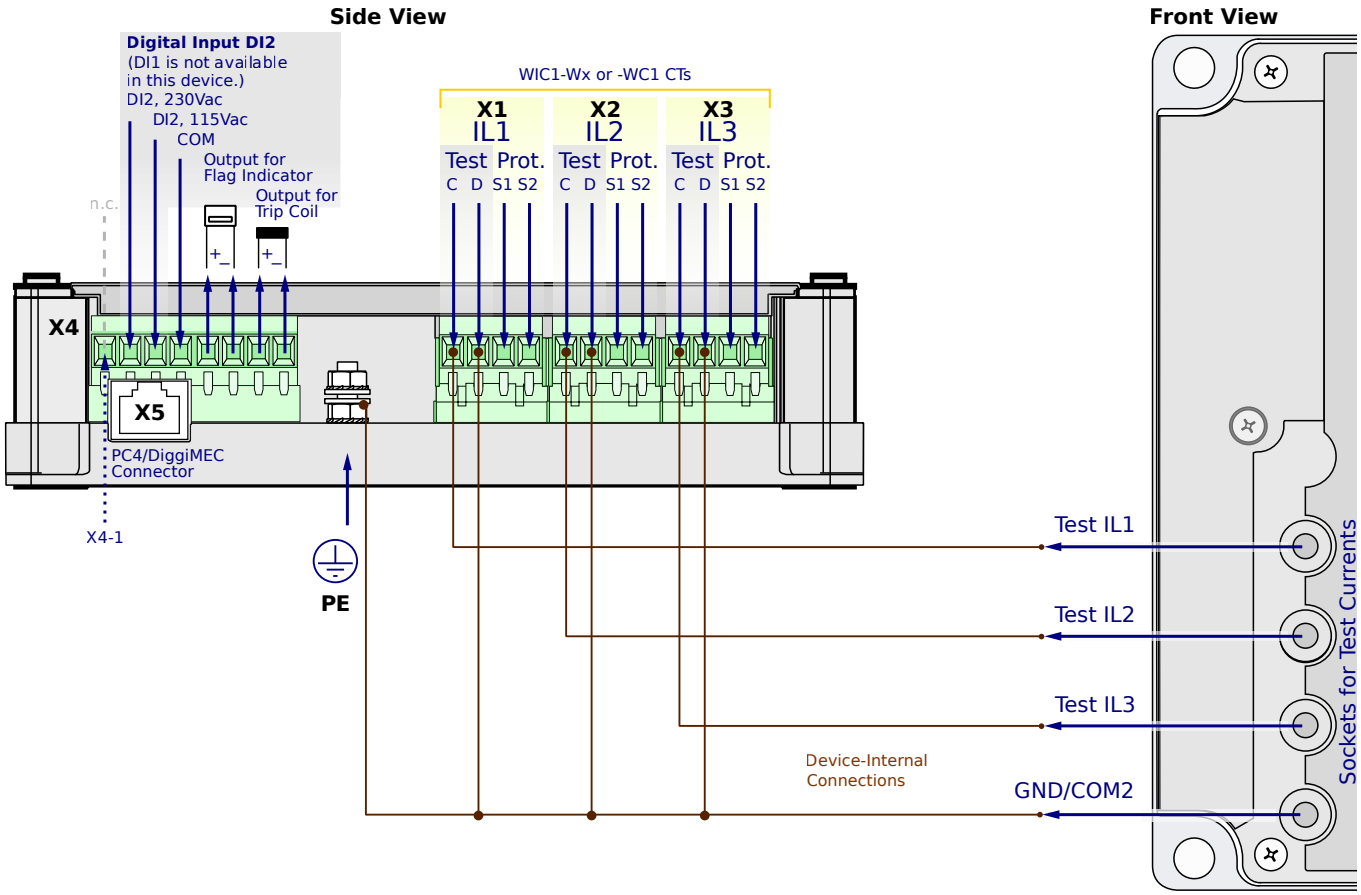


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1AAH

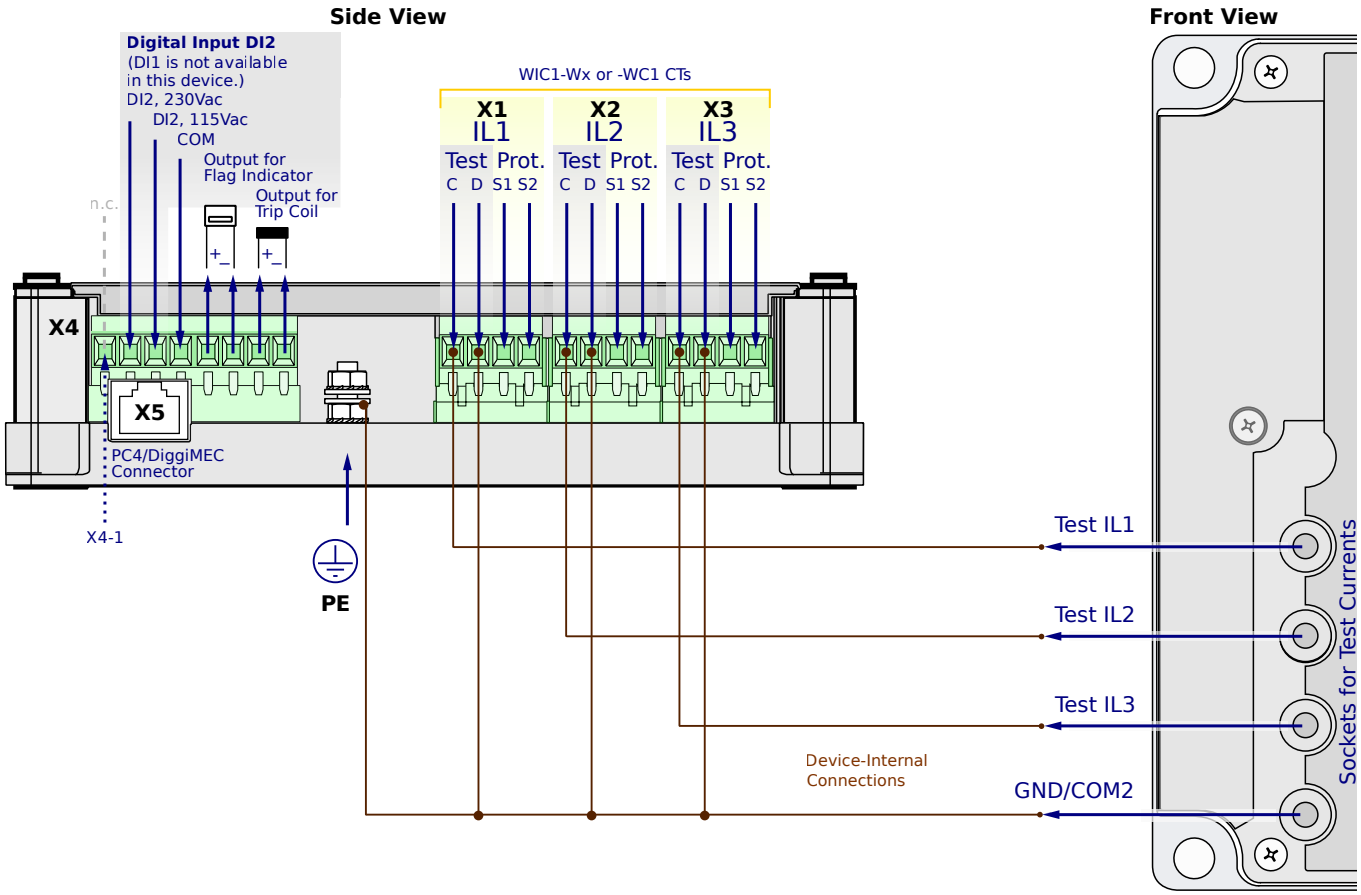


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1PA0

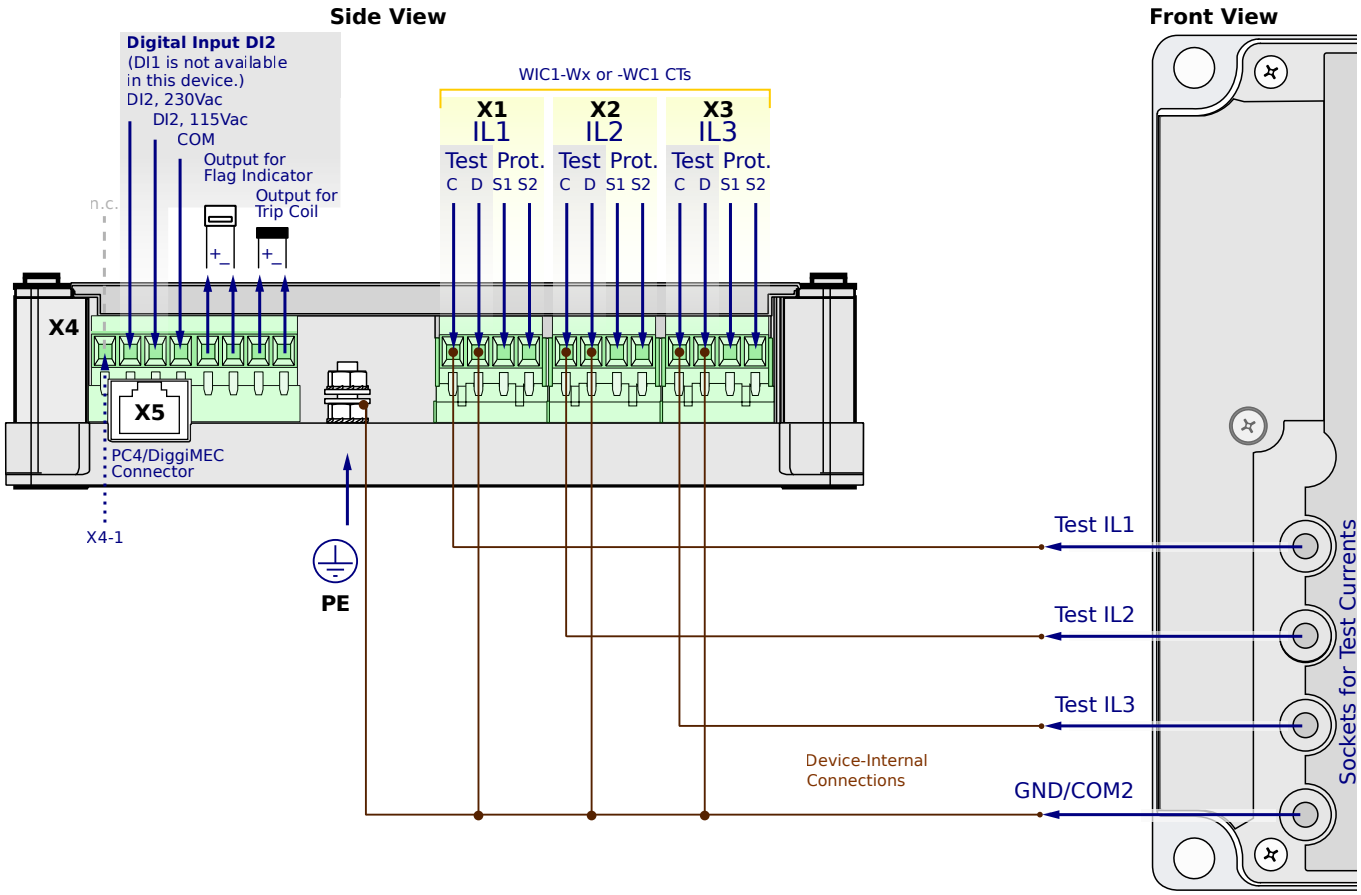


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC1PAH

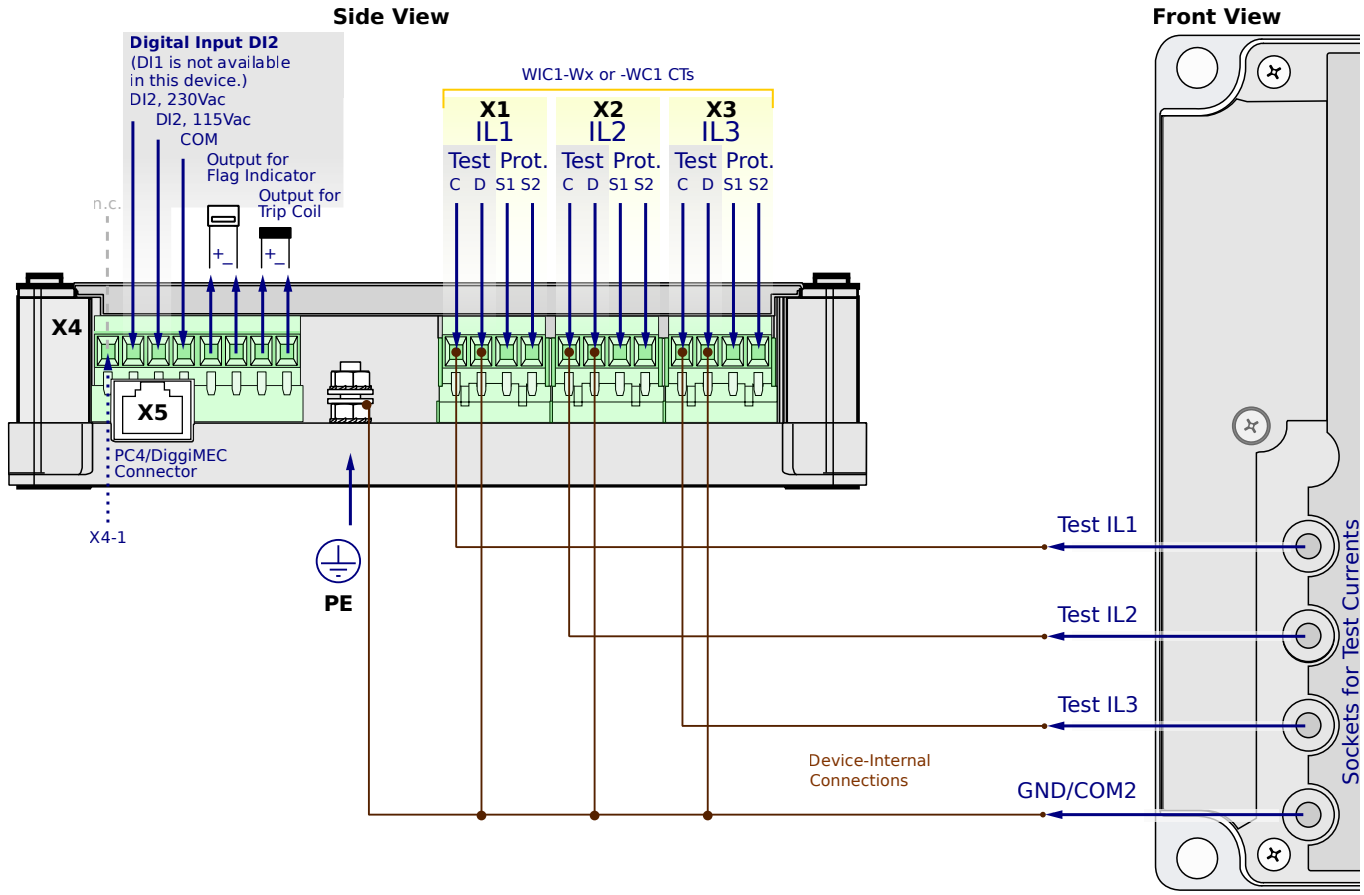


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2SA0

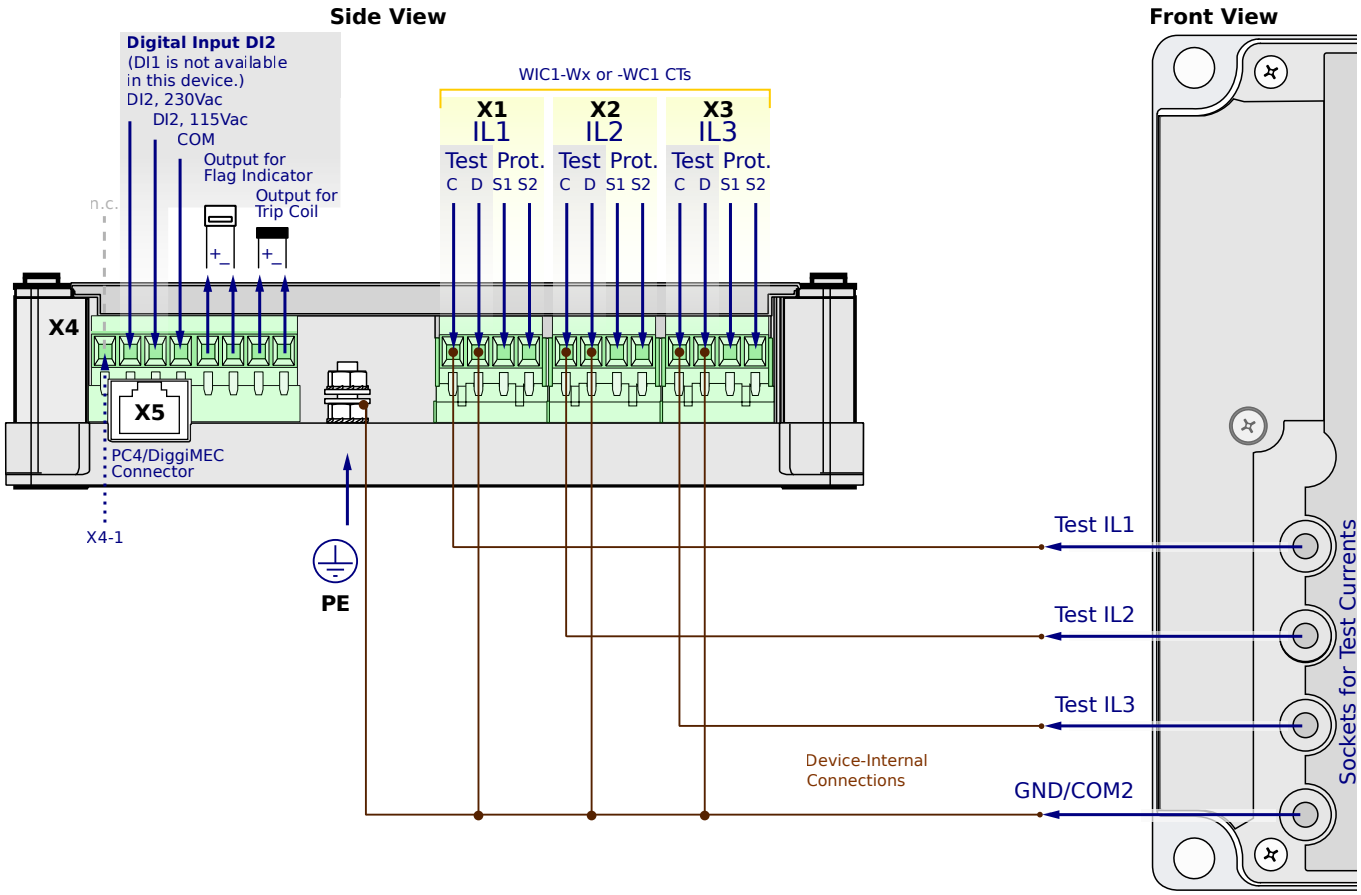


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2SAH

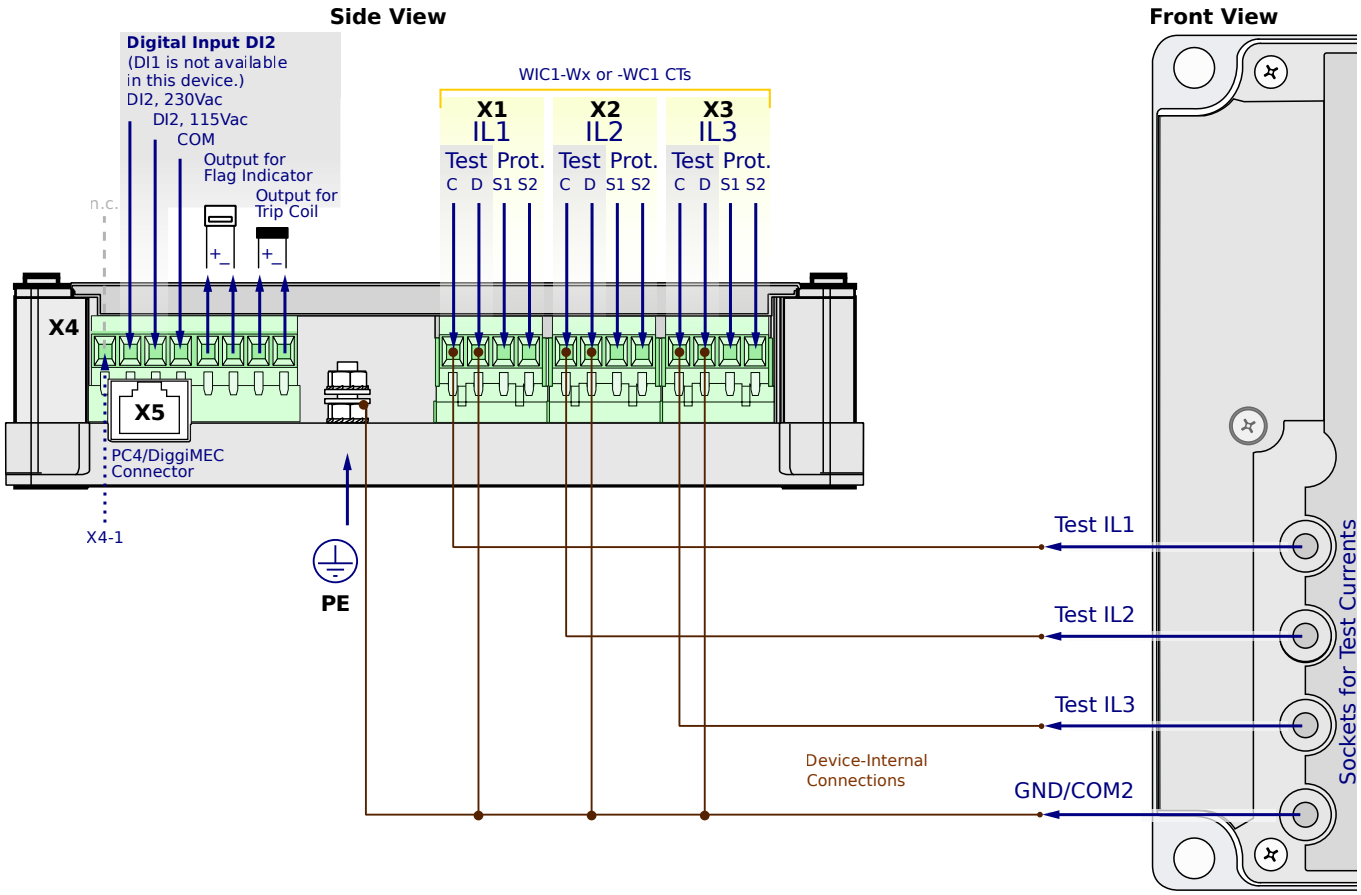


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2AA0

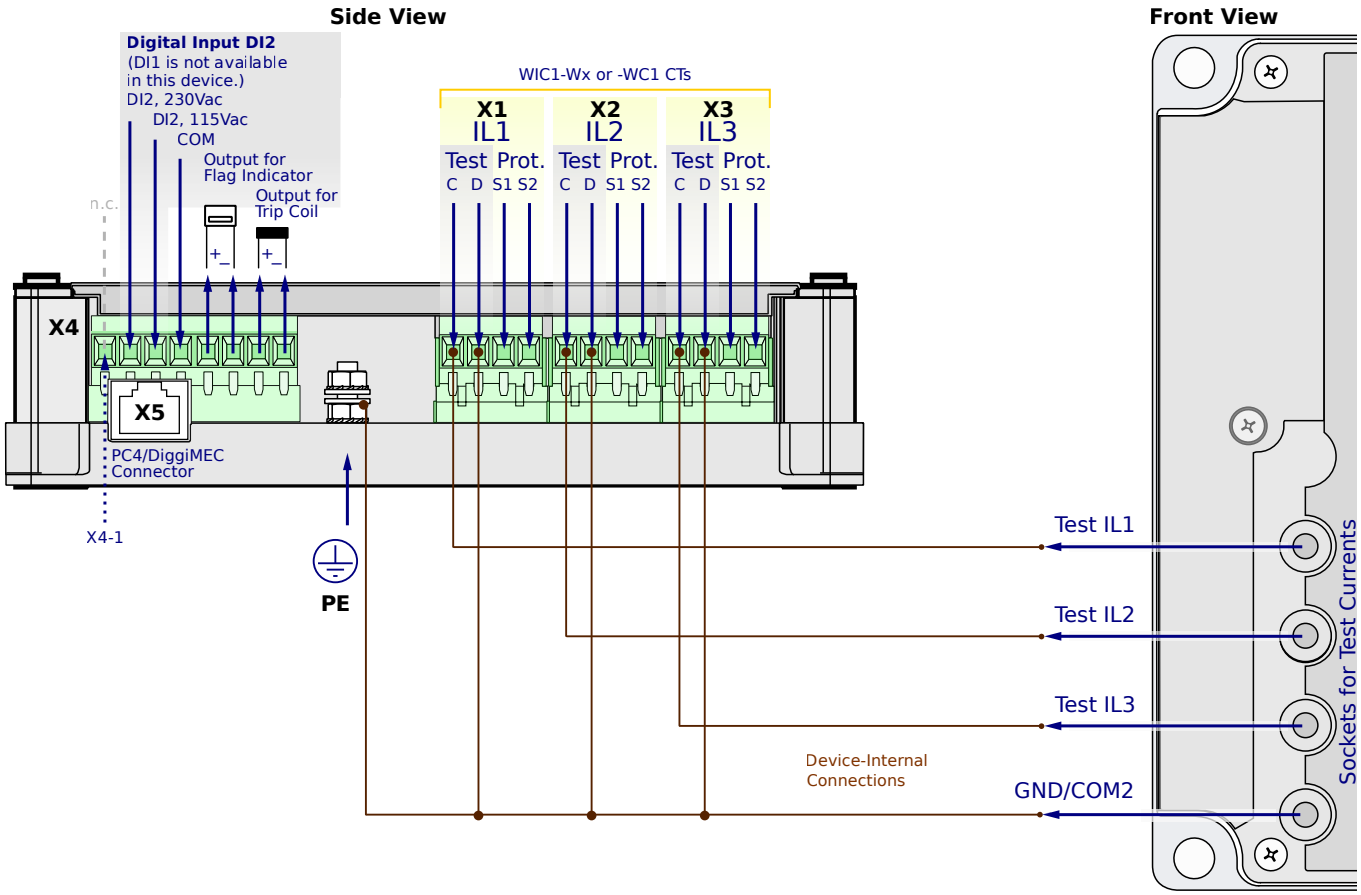


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2AAH

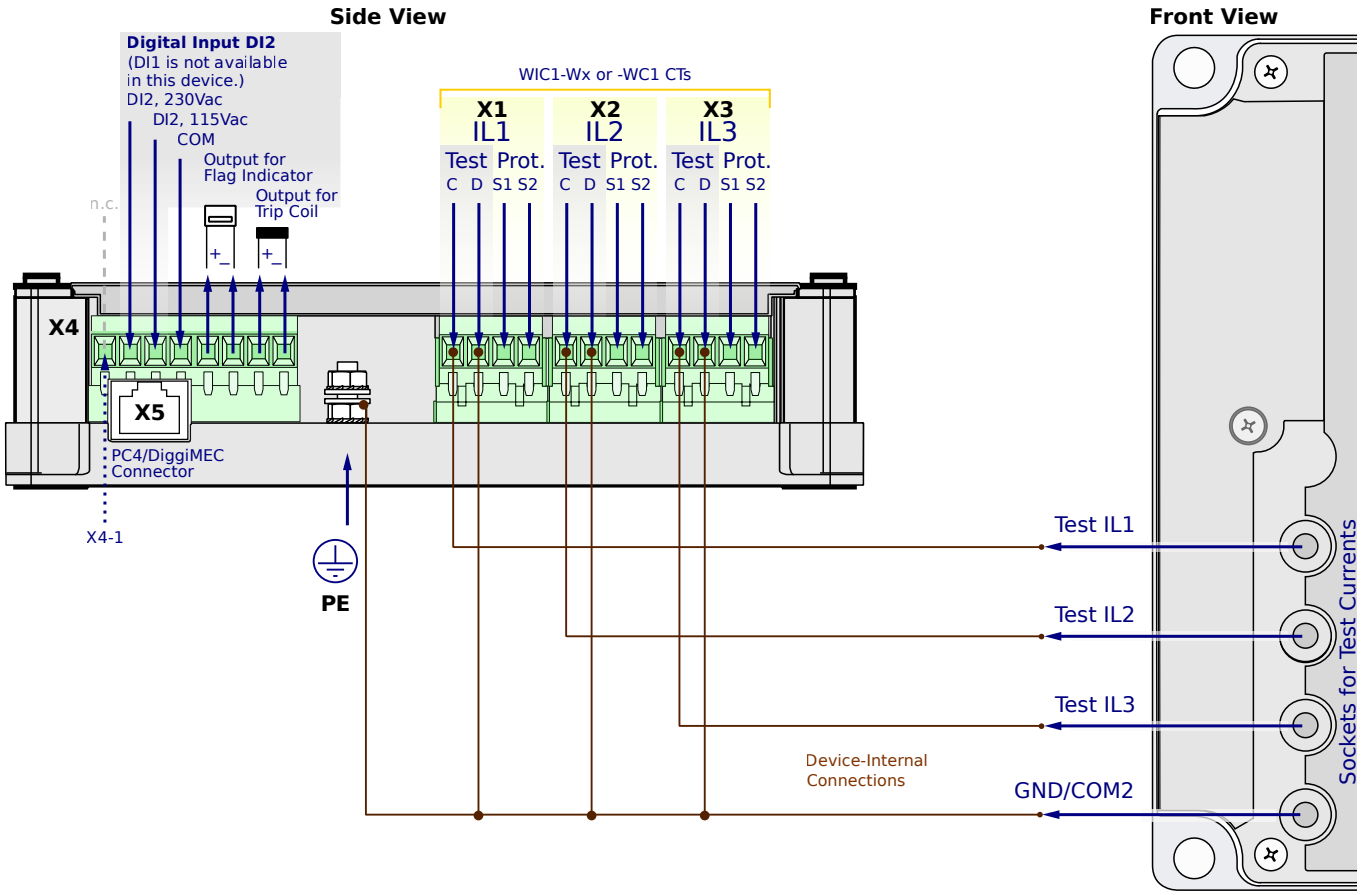


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2PA0

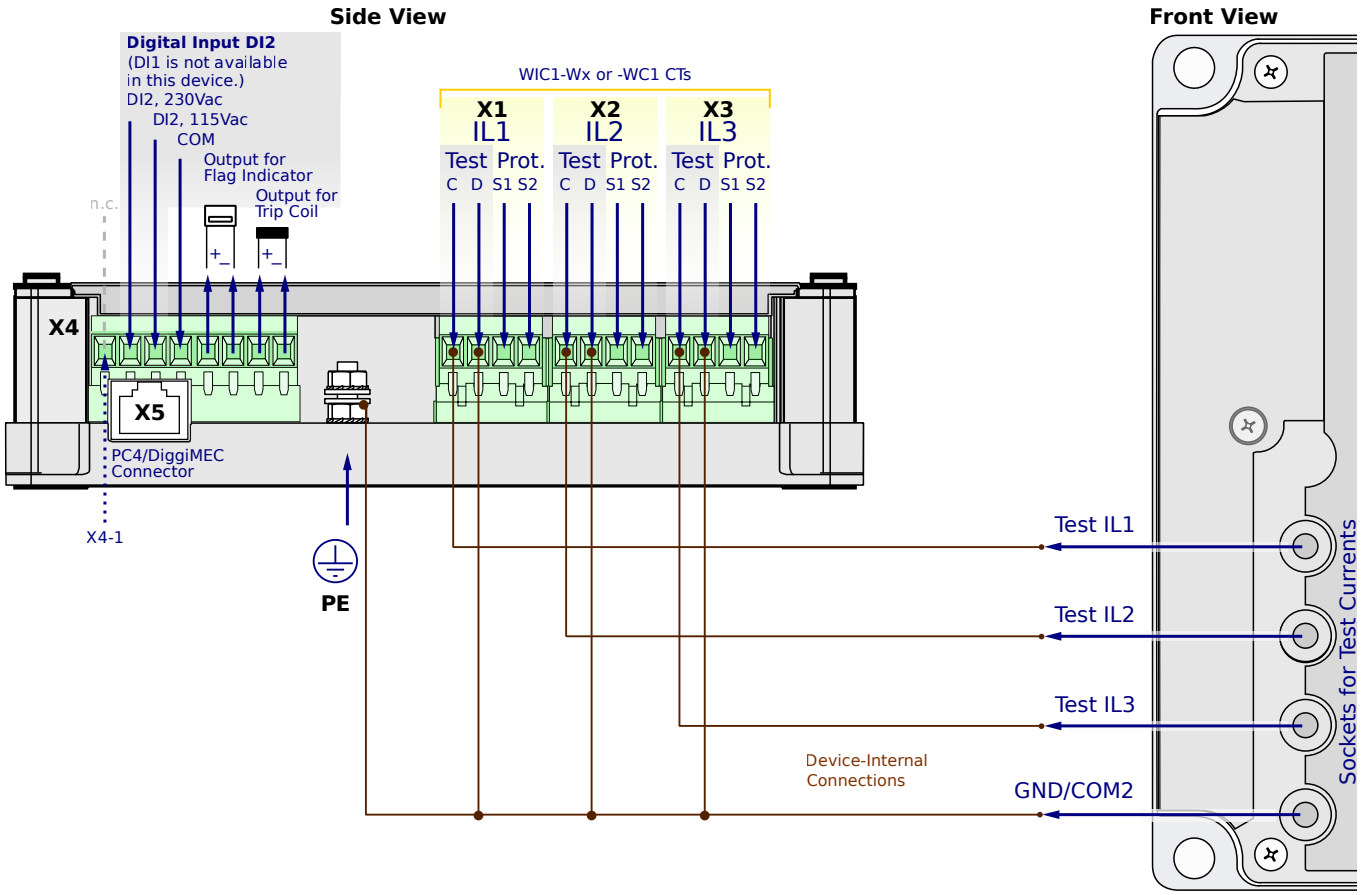


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SN6CC2PAH

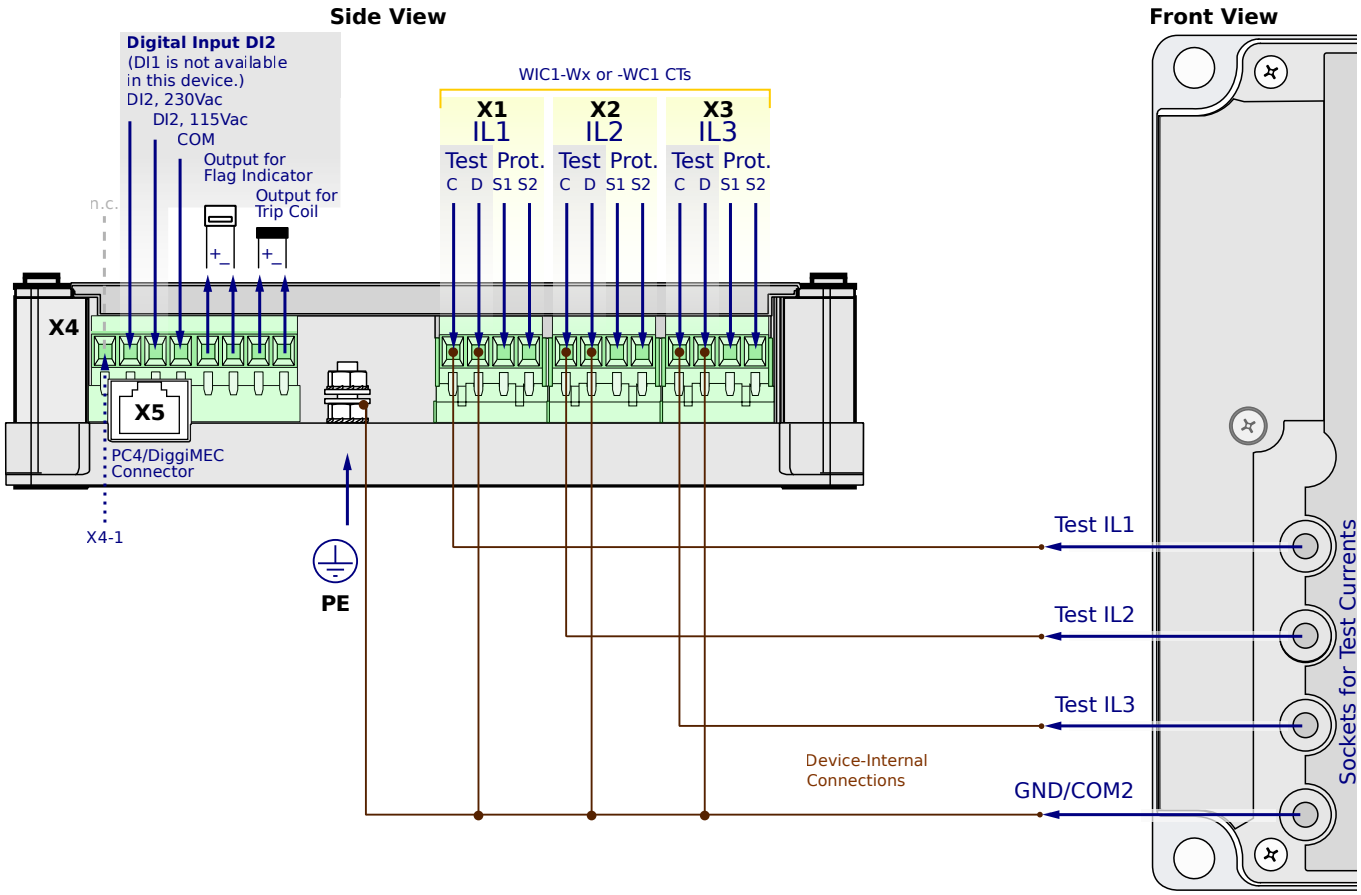


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Calculated ground (earth) current.
- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0SA0

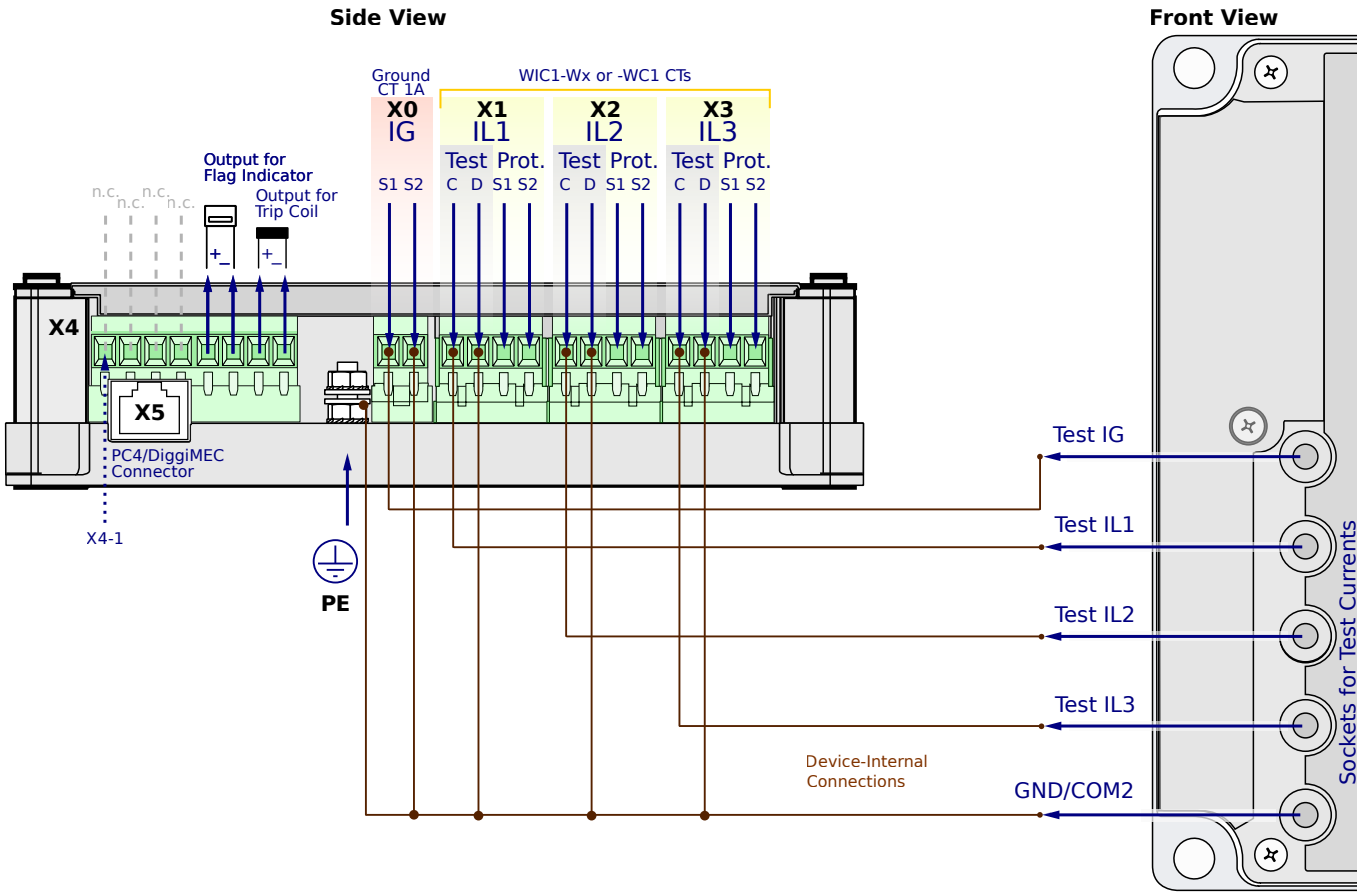


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0SAH

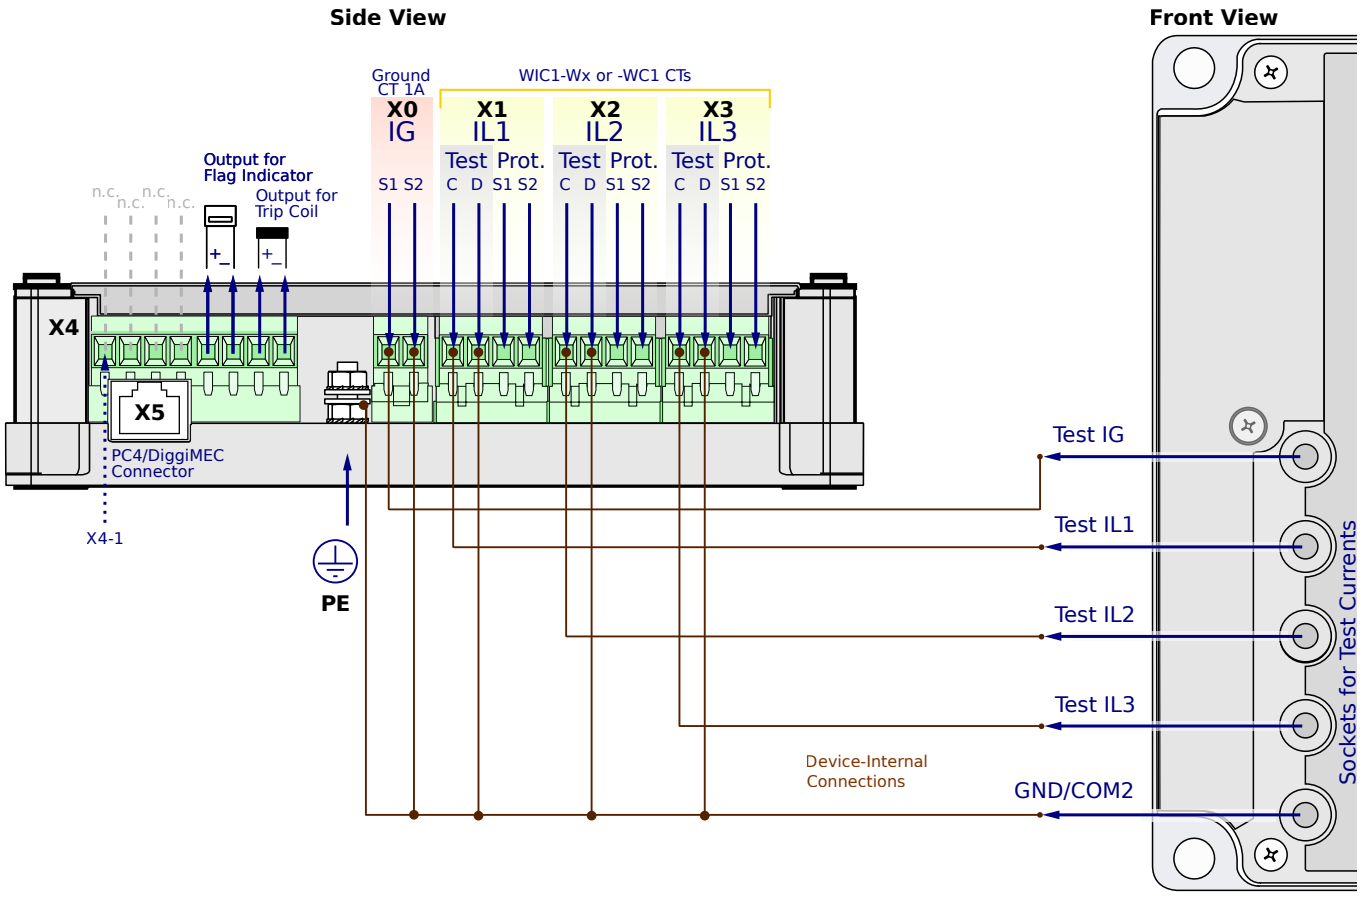


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0AA0

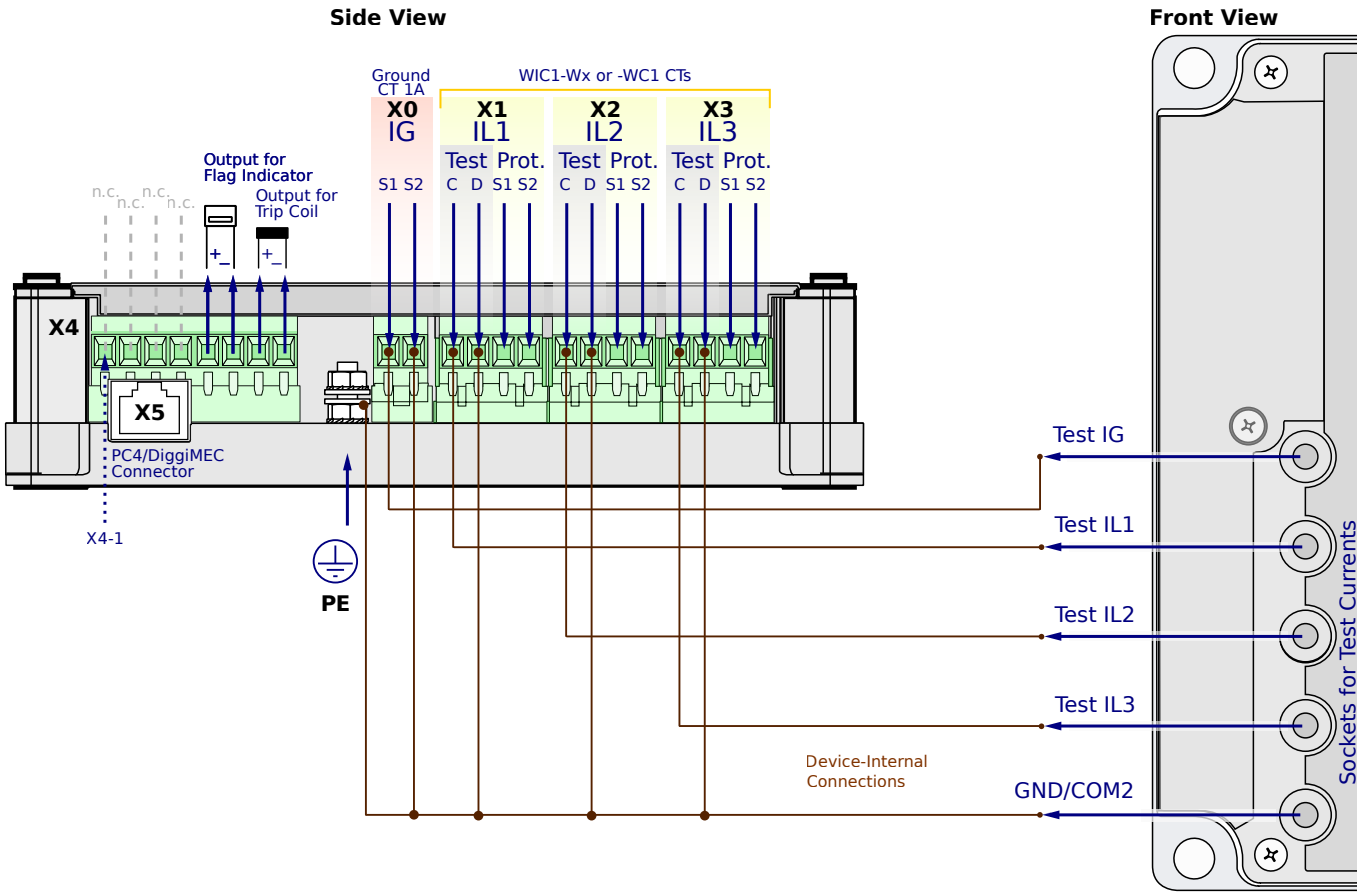


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0AAH

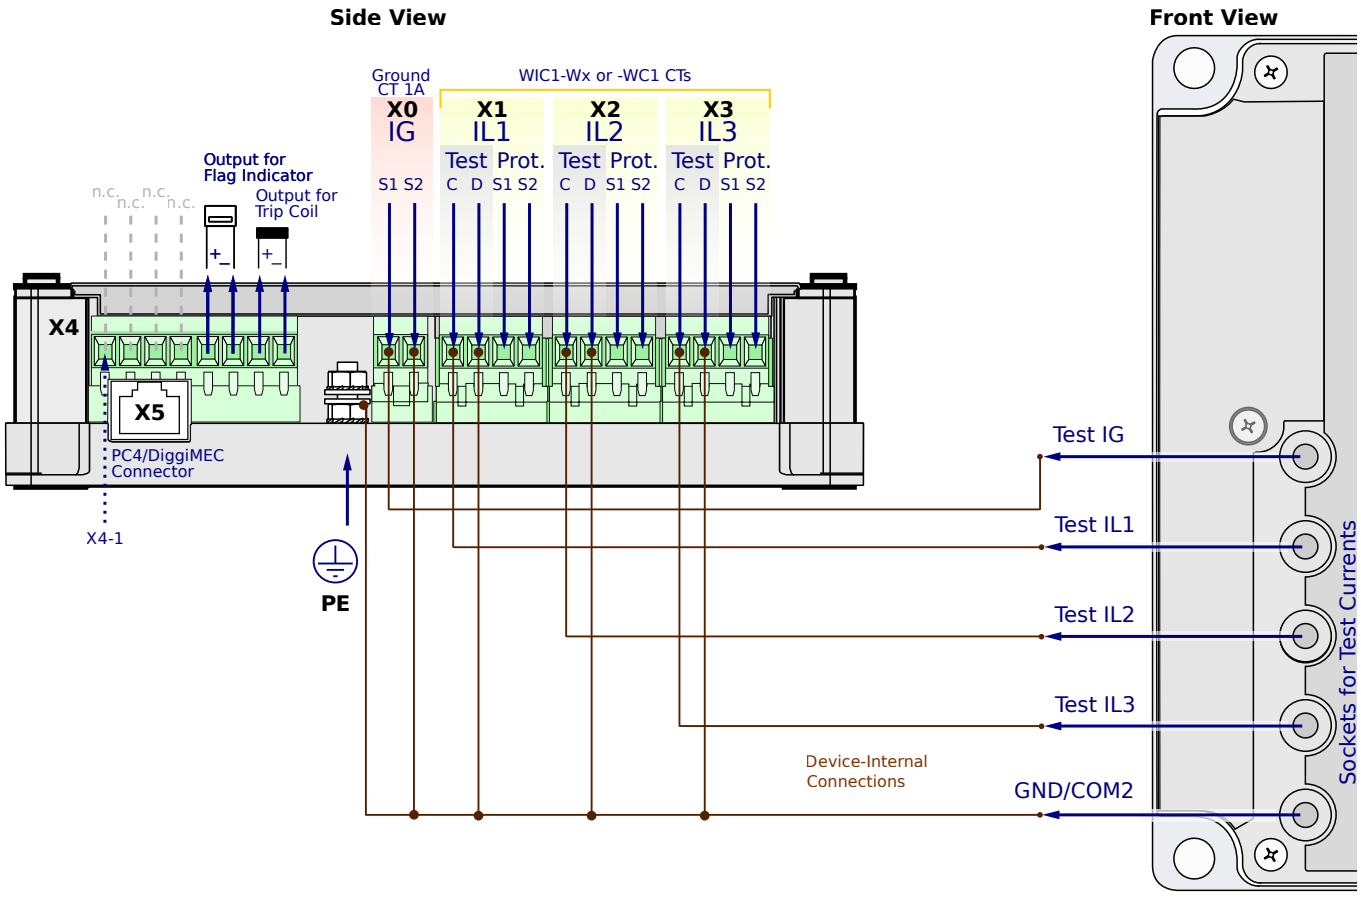


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0PA0

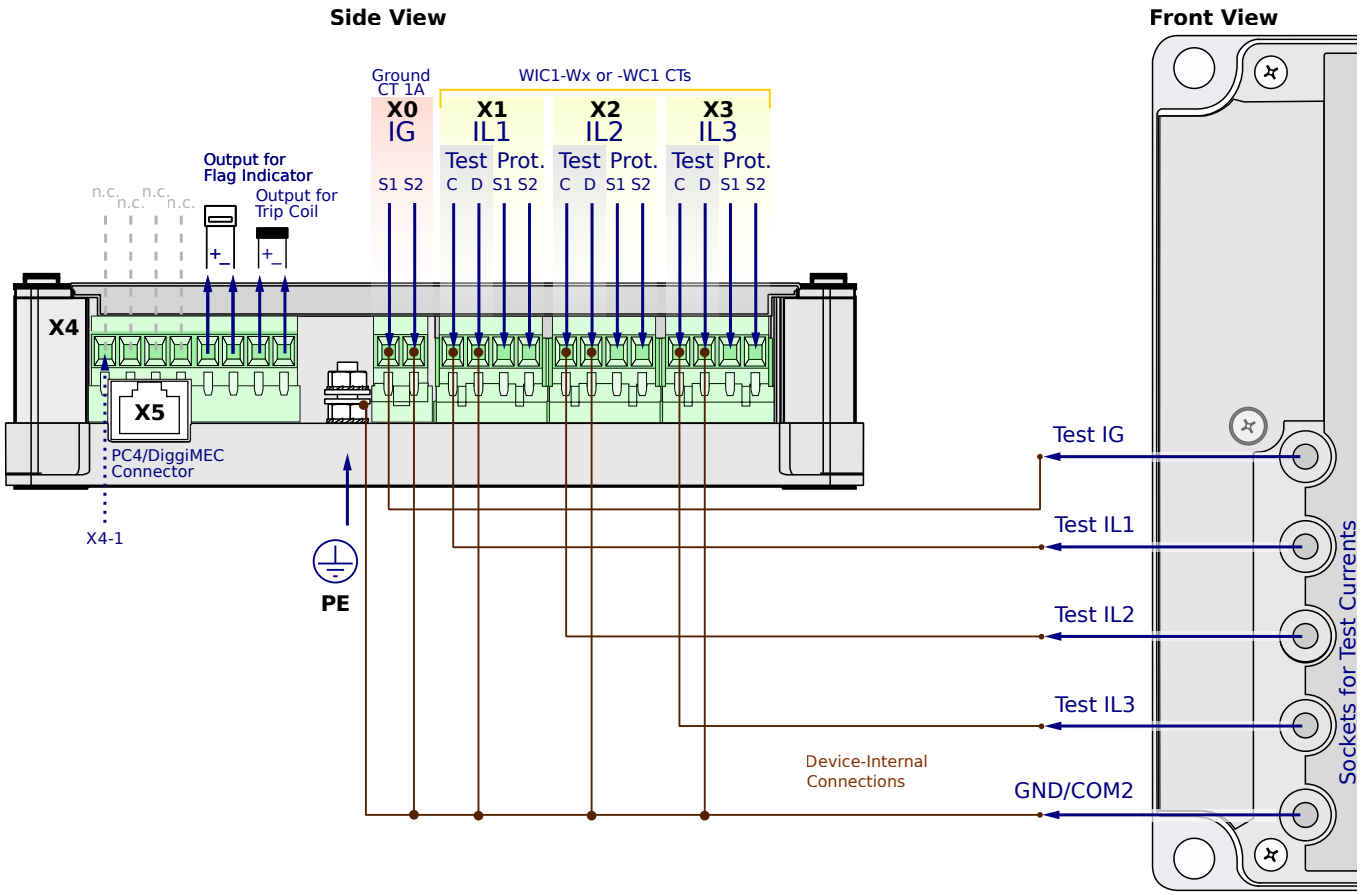


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN0PAH

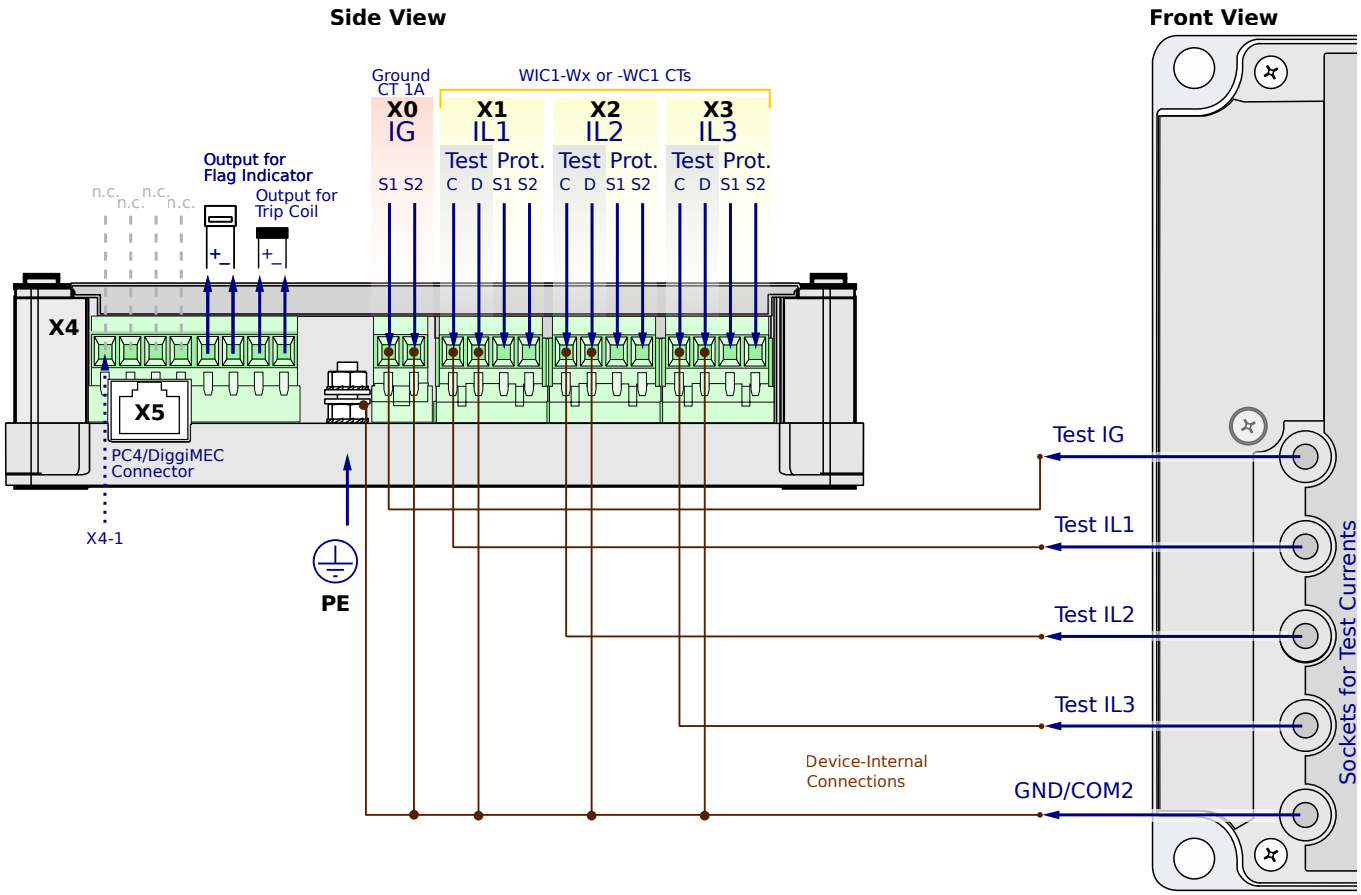


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1SA0

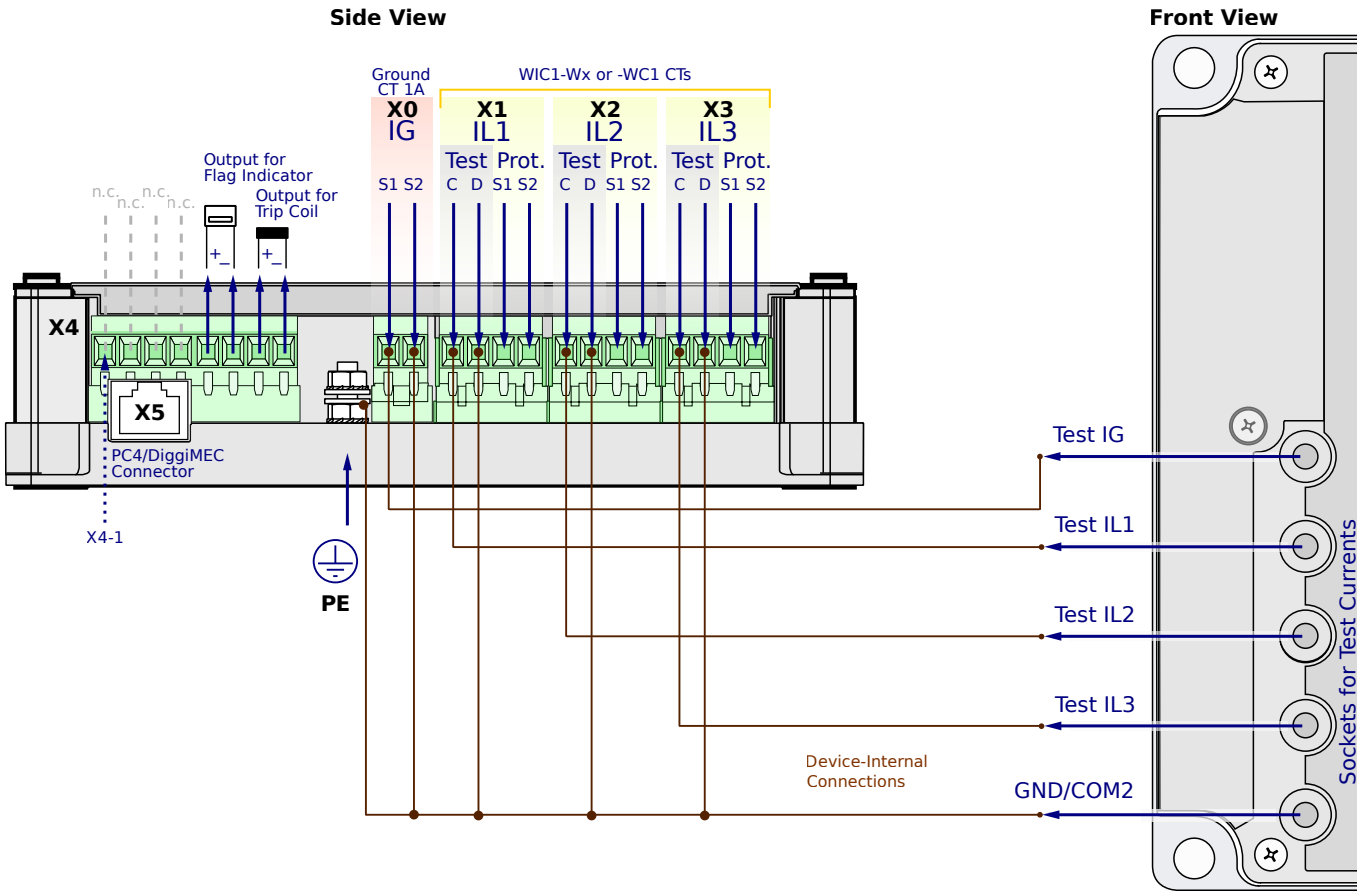


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1SAH

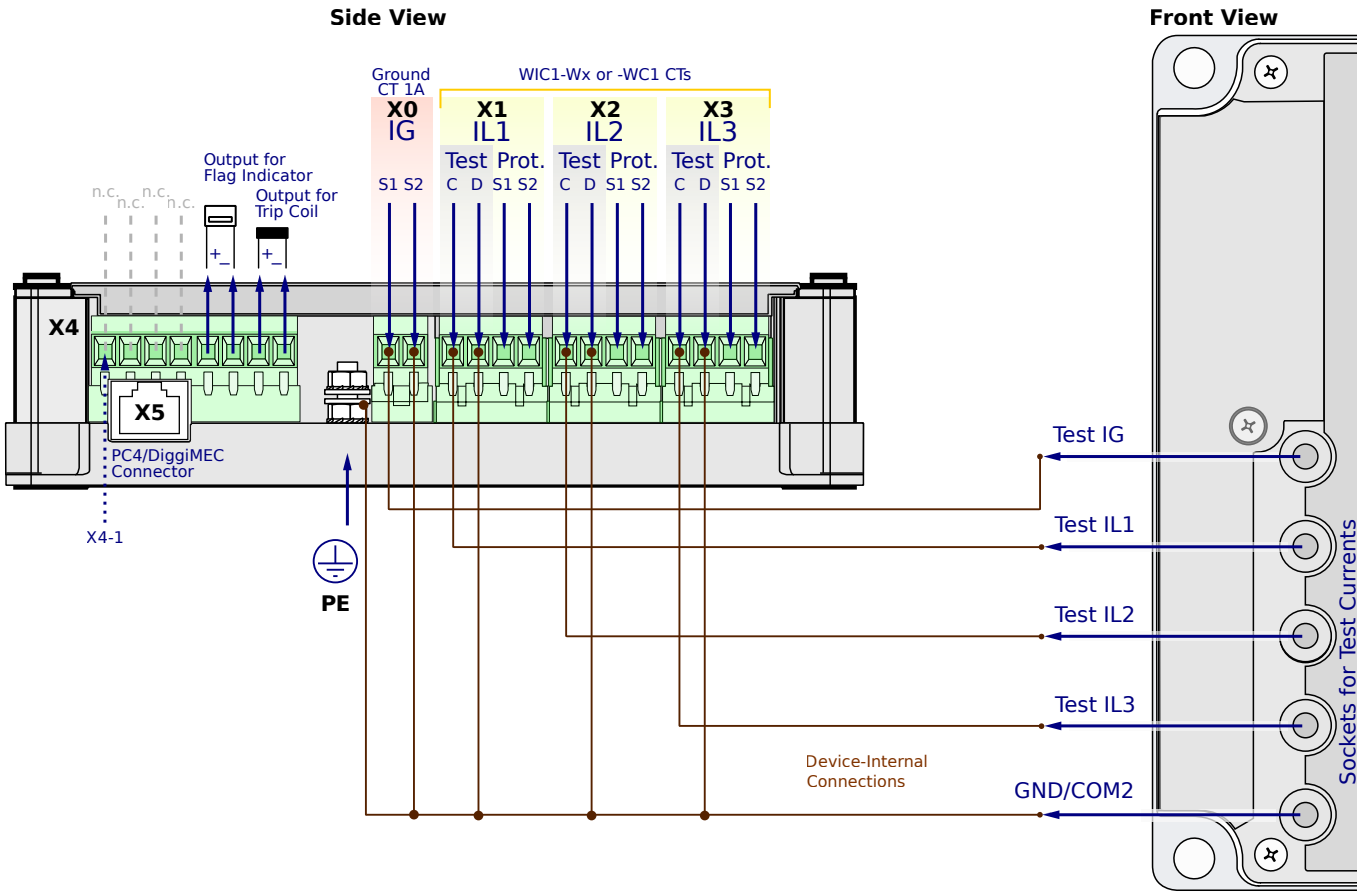


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1AA0

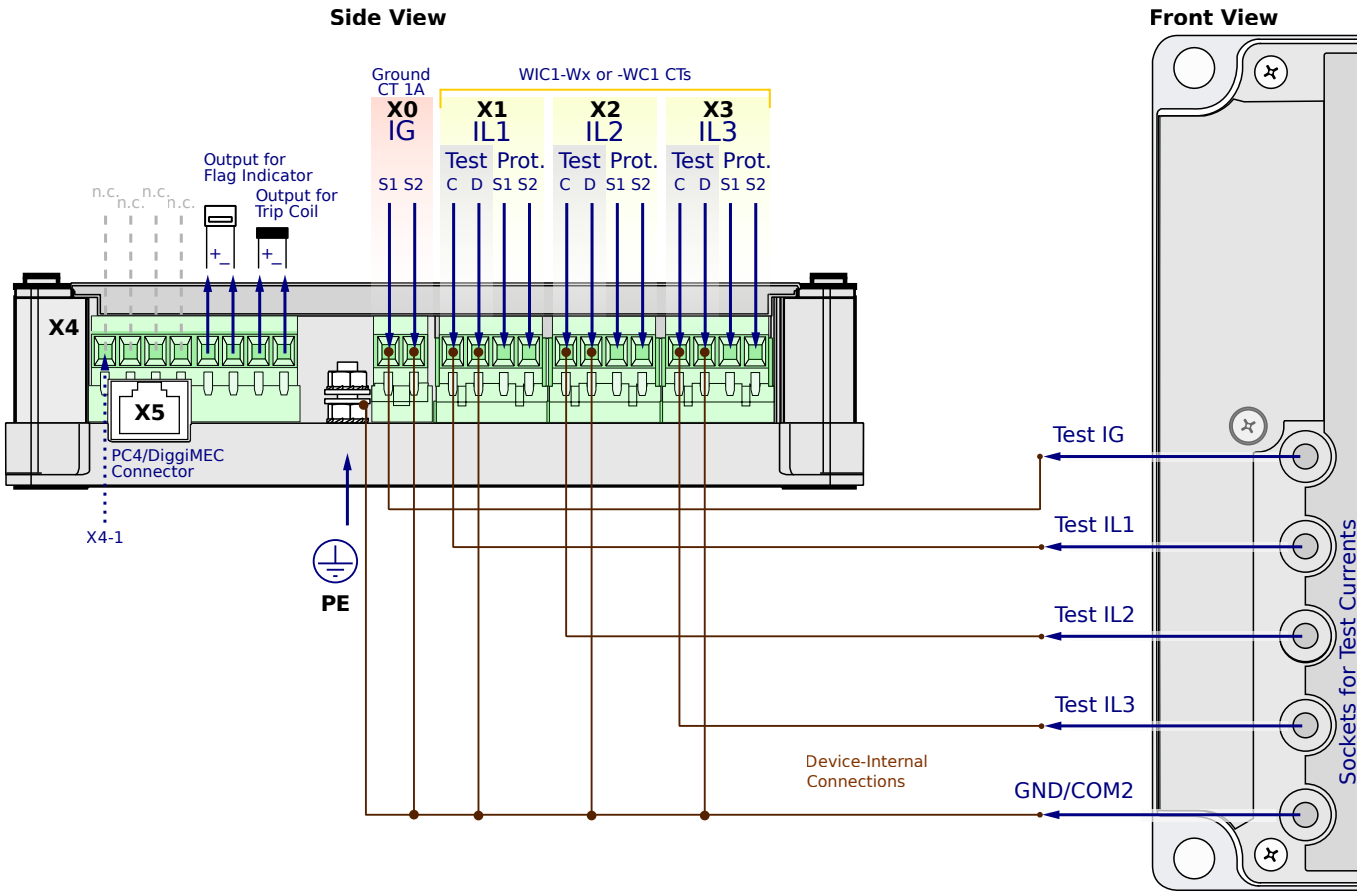


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1AAH

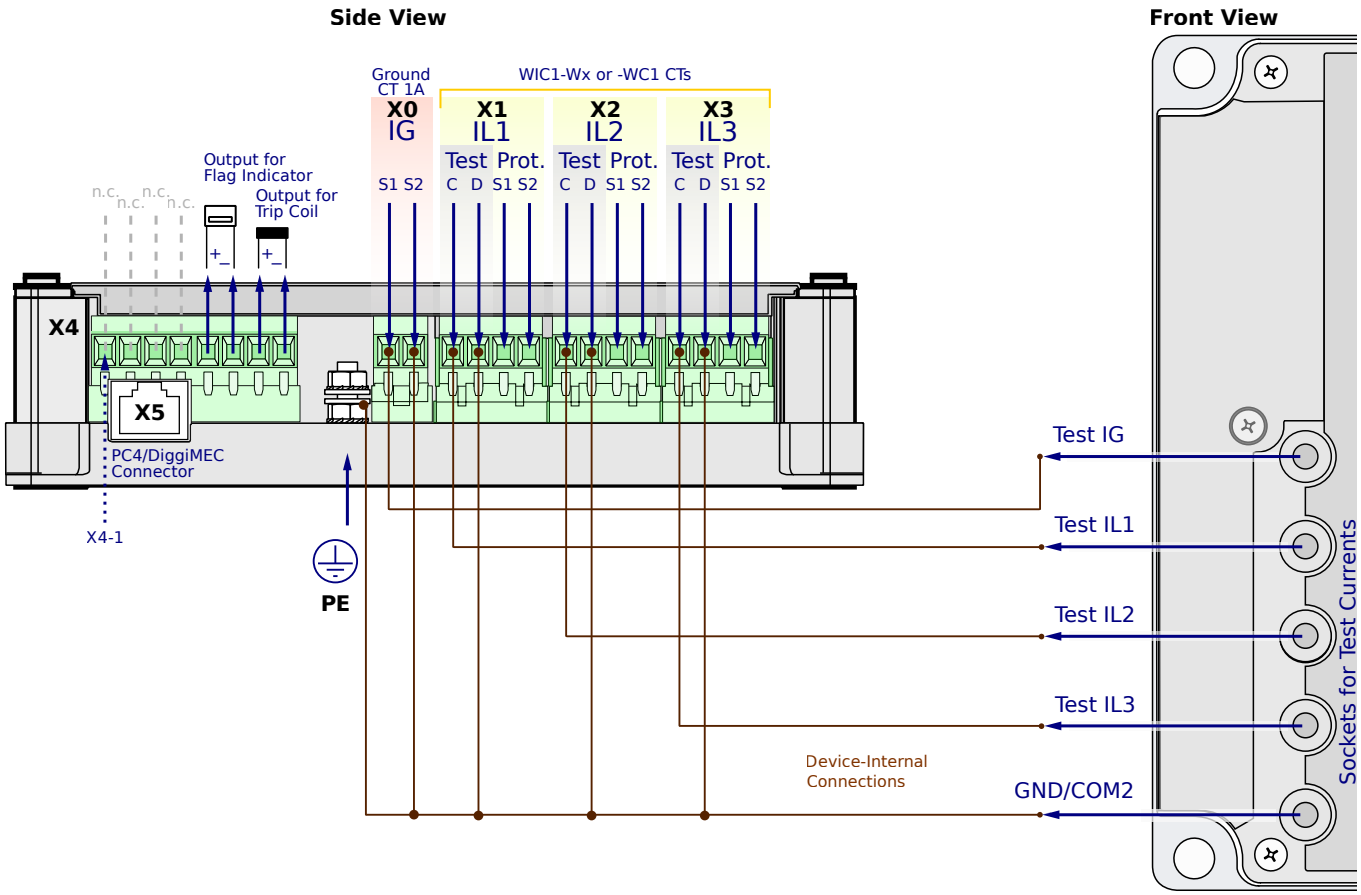


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1PA0

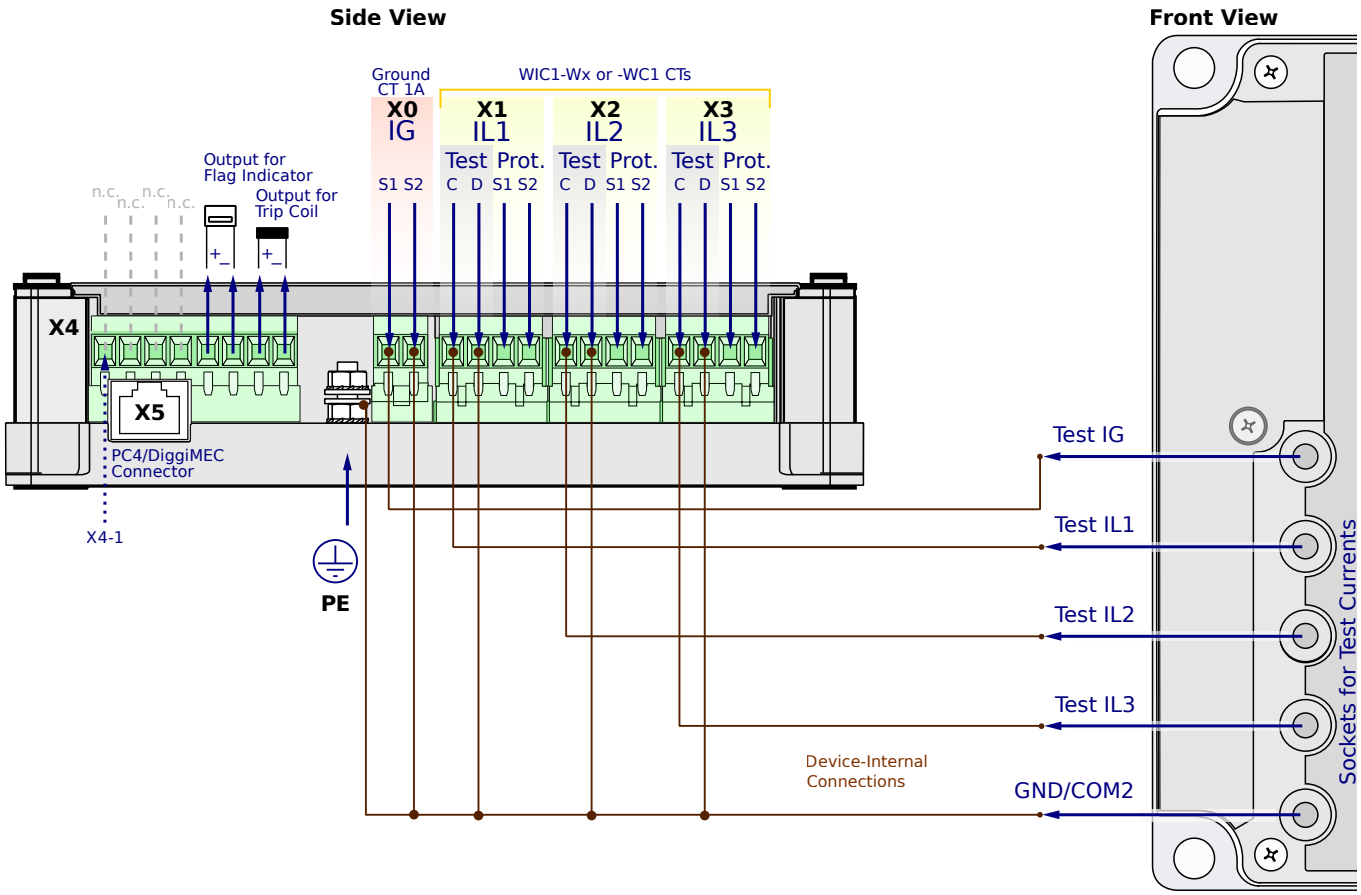


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN1PAH

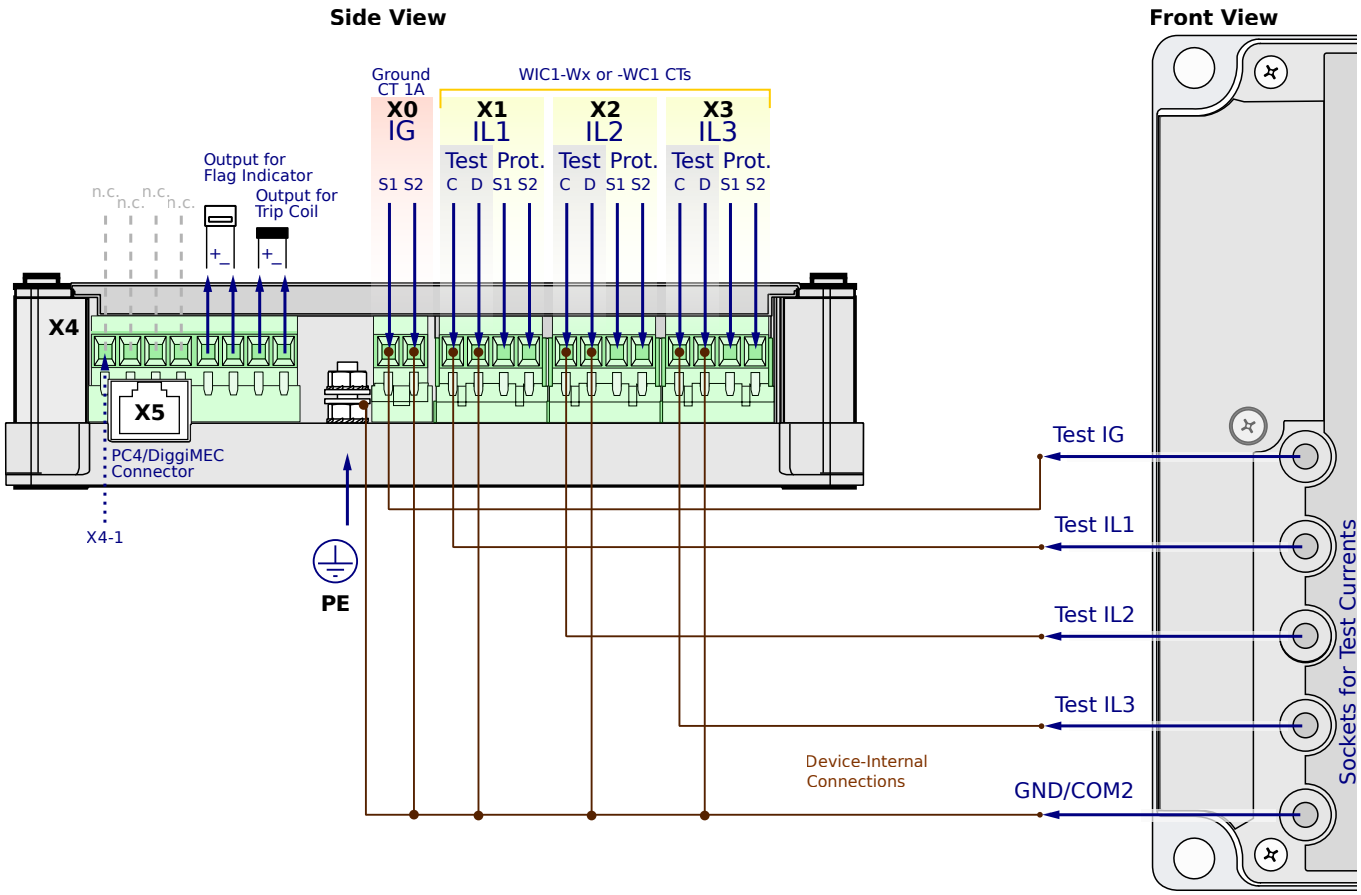


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2SA0

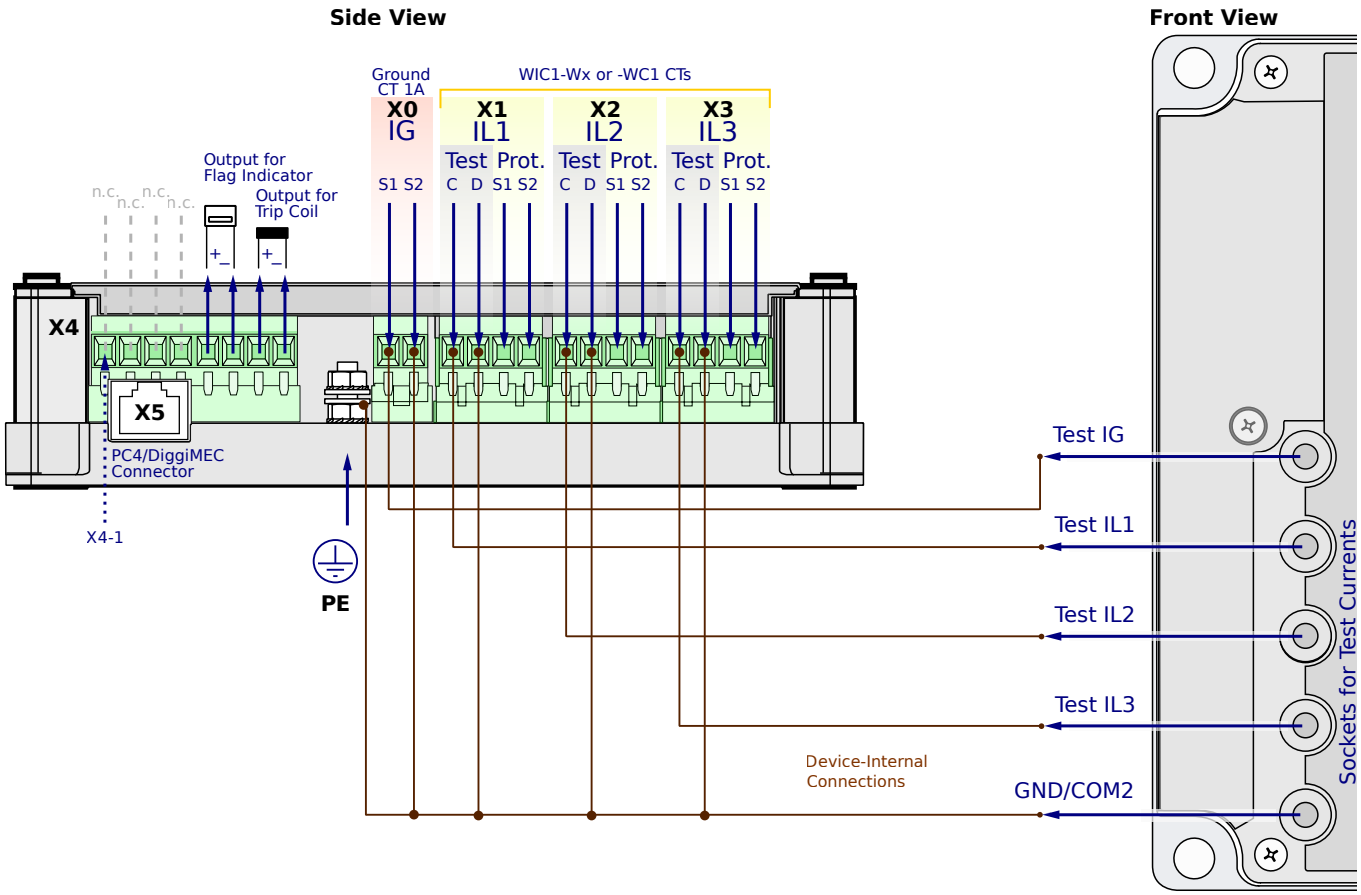


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2SAH

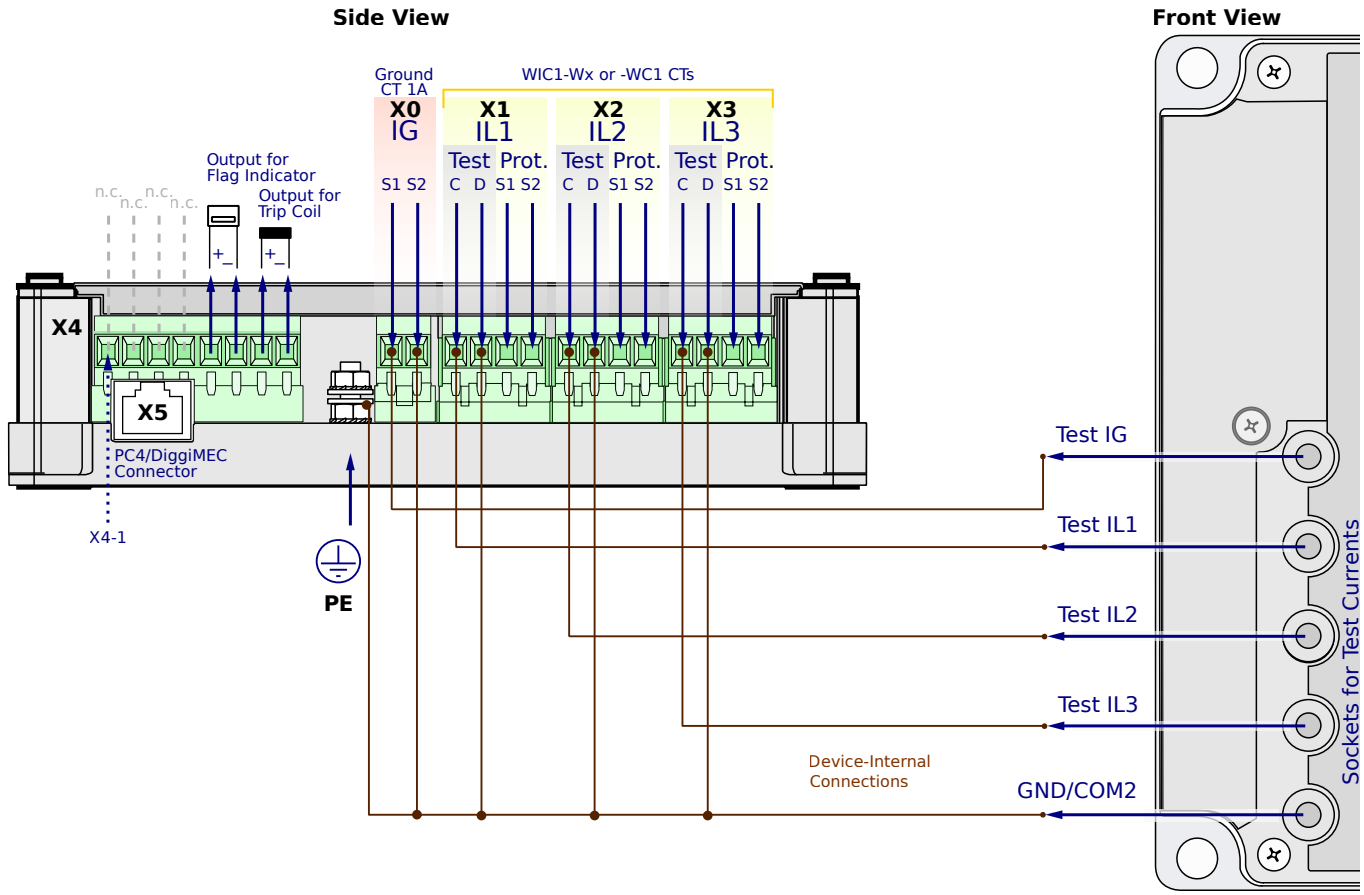


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2AA0

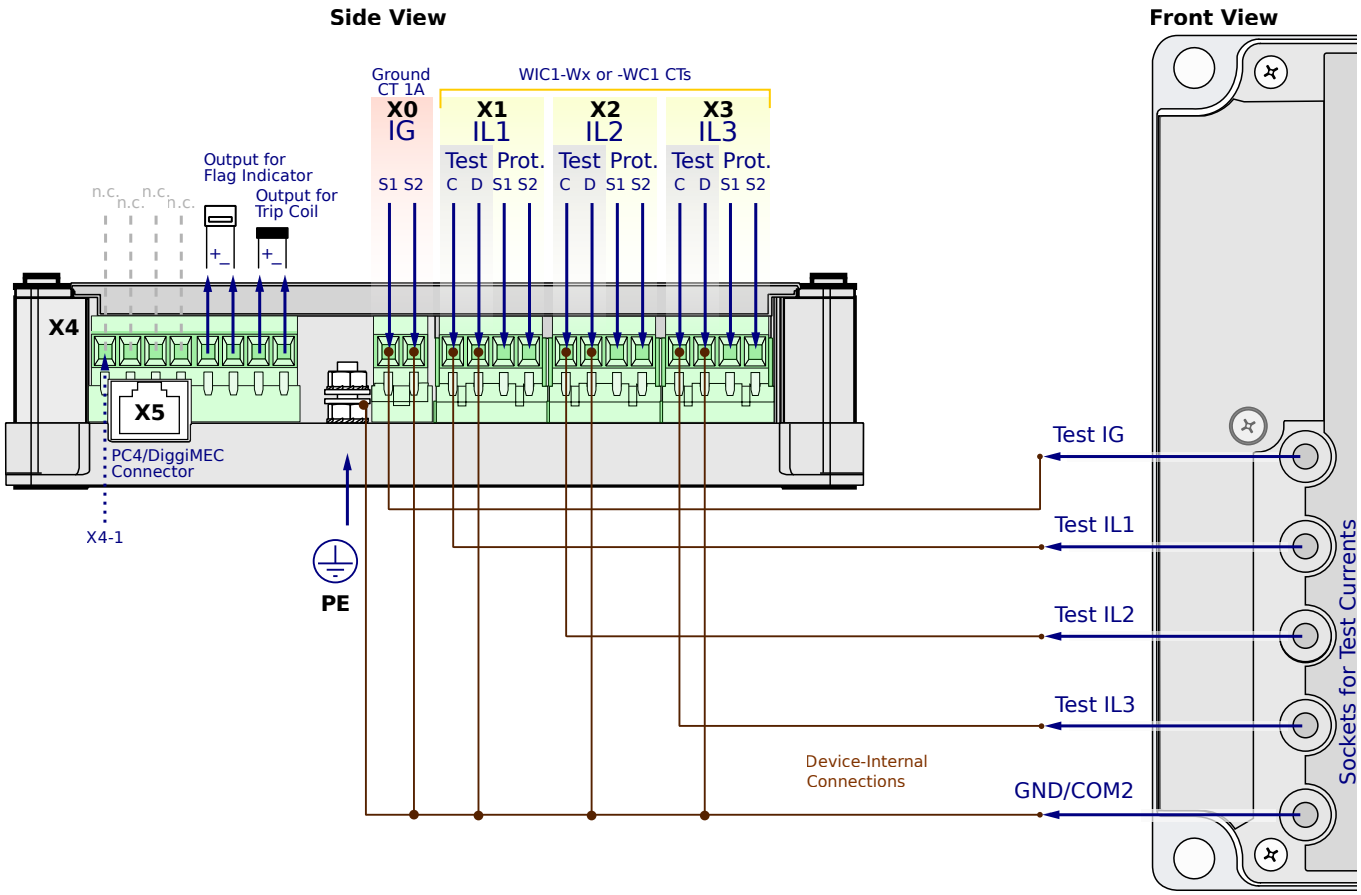


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2AAH

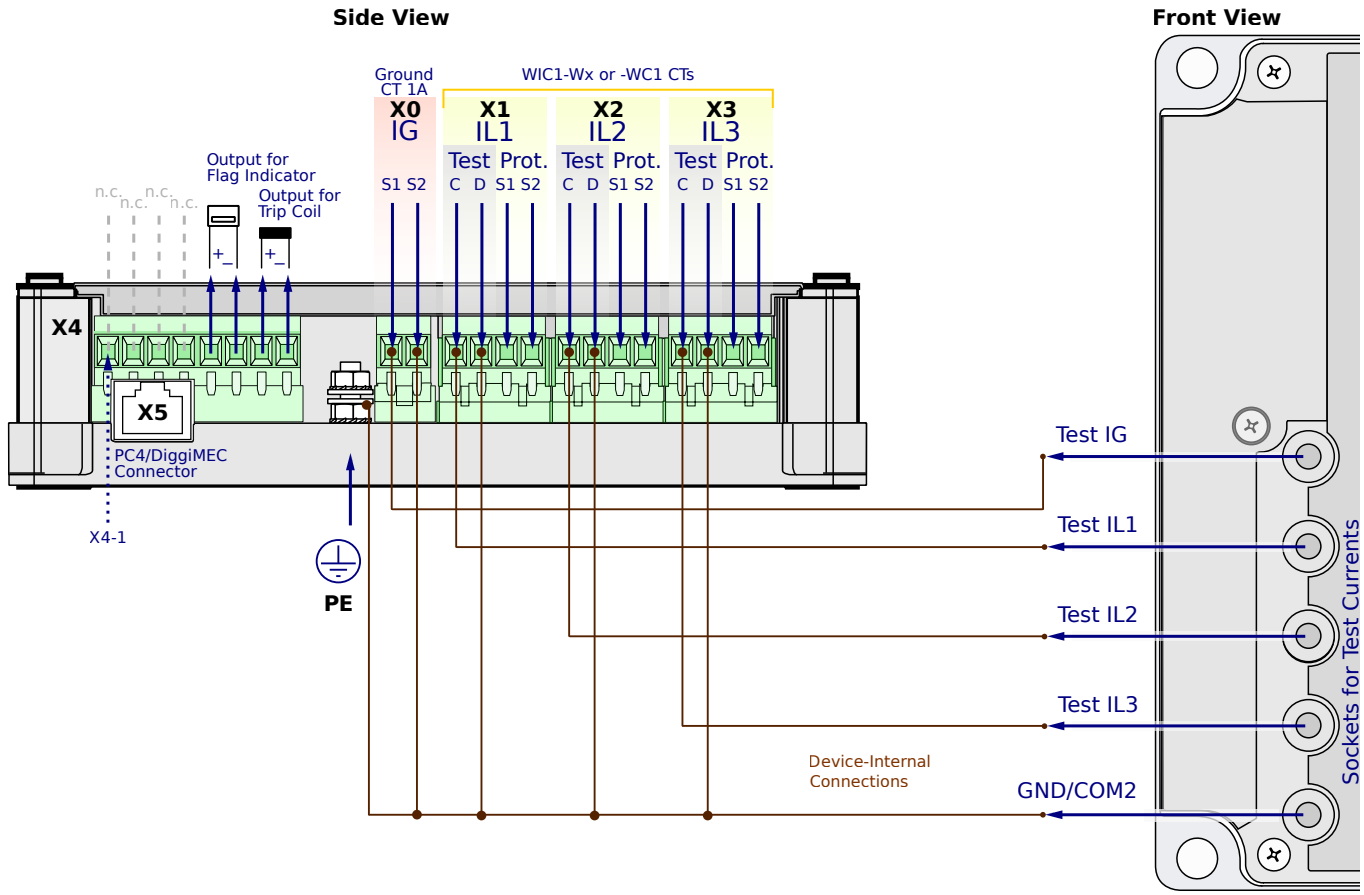


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2PA0

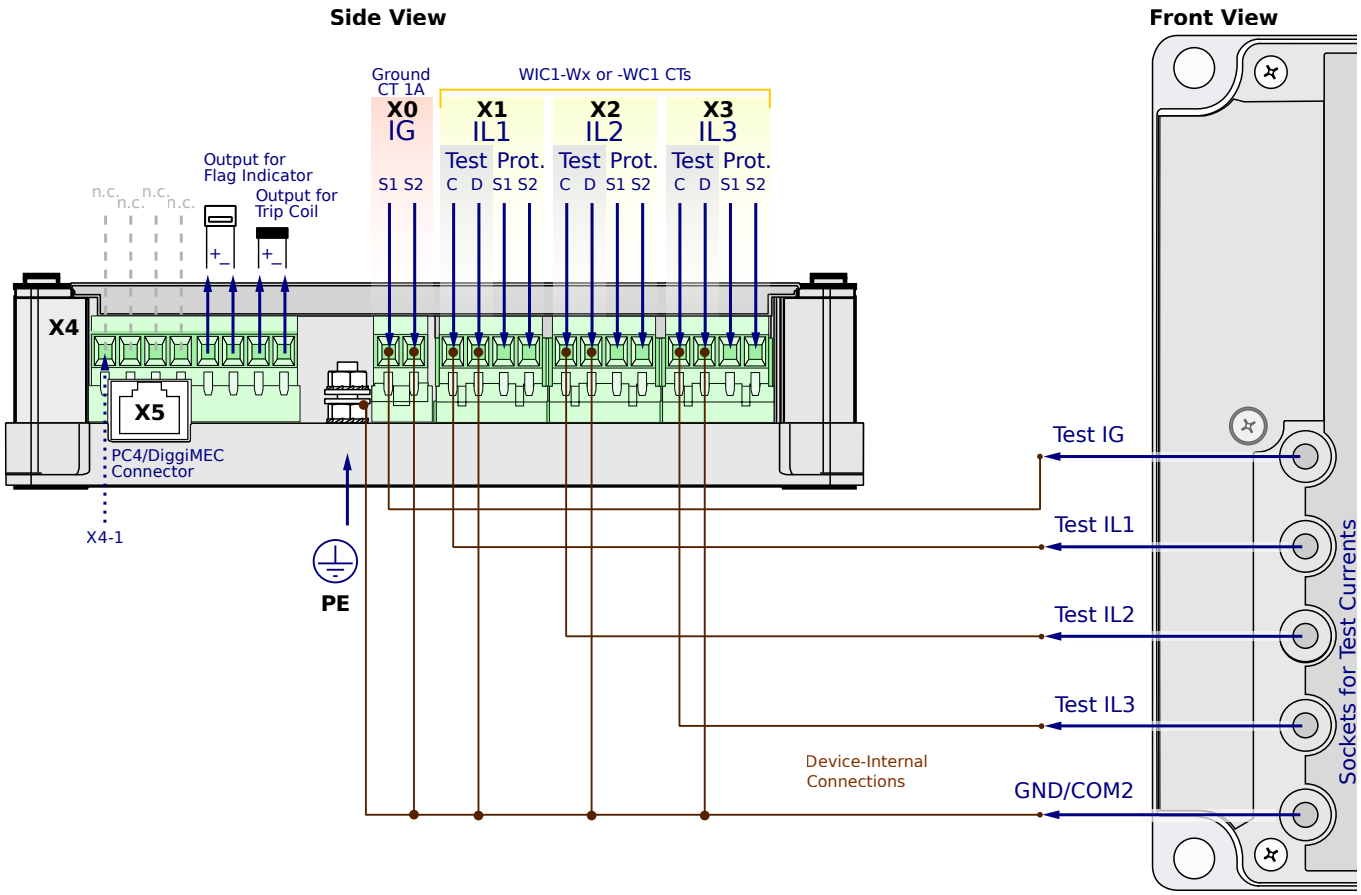


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NN2PAH

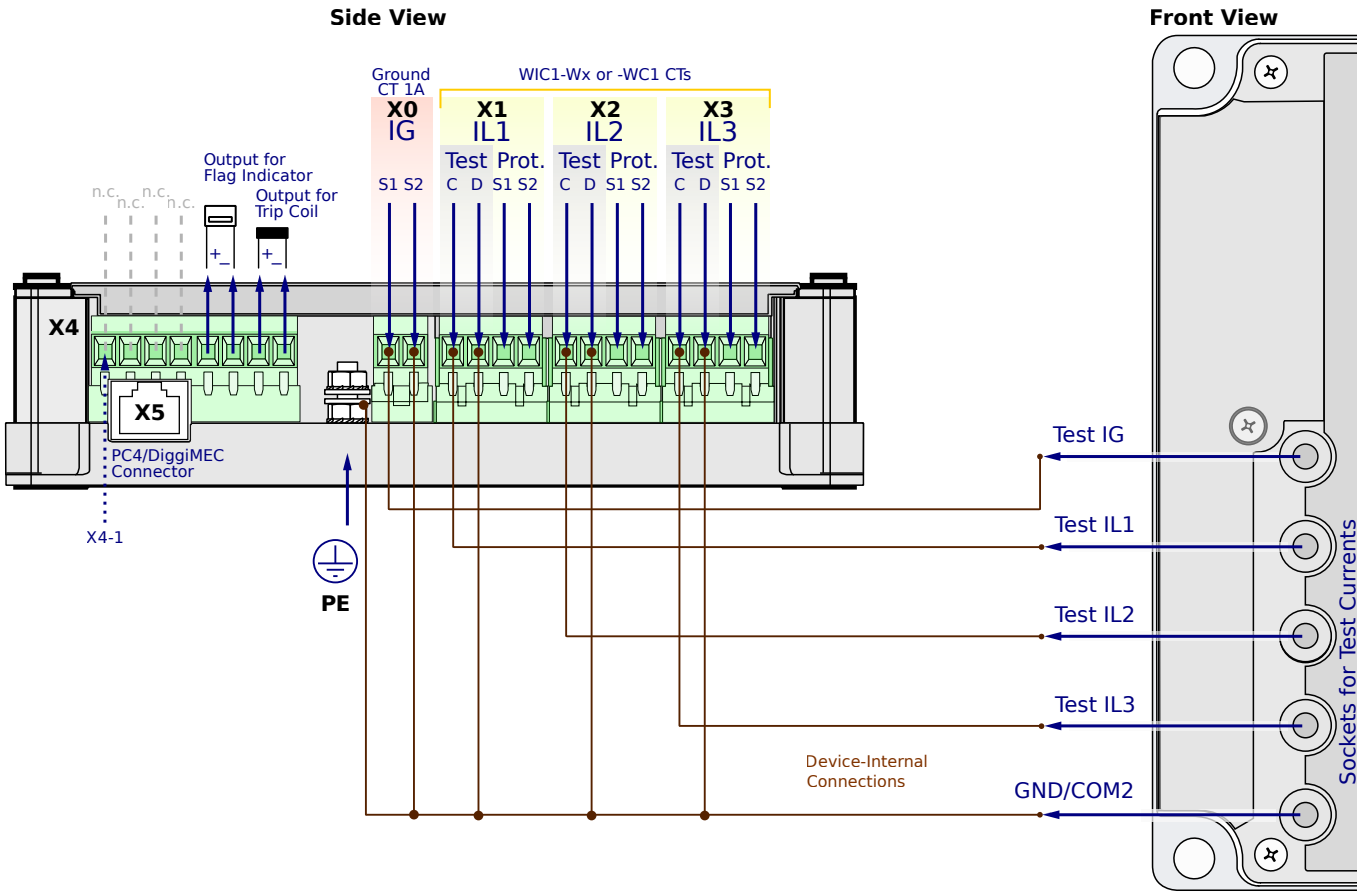


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0SA0

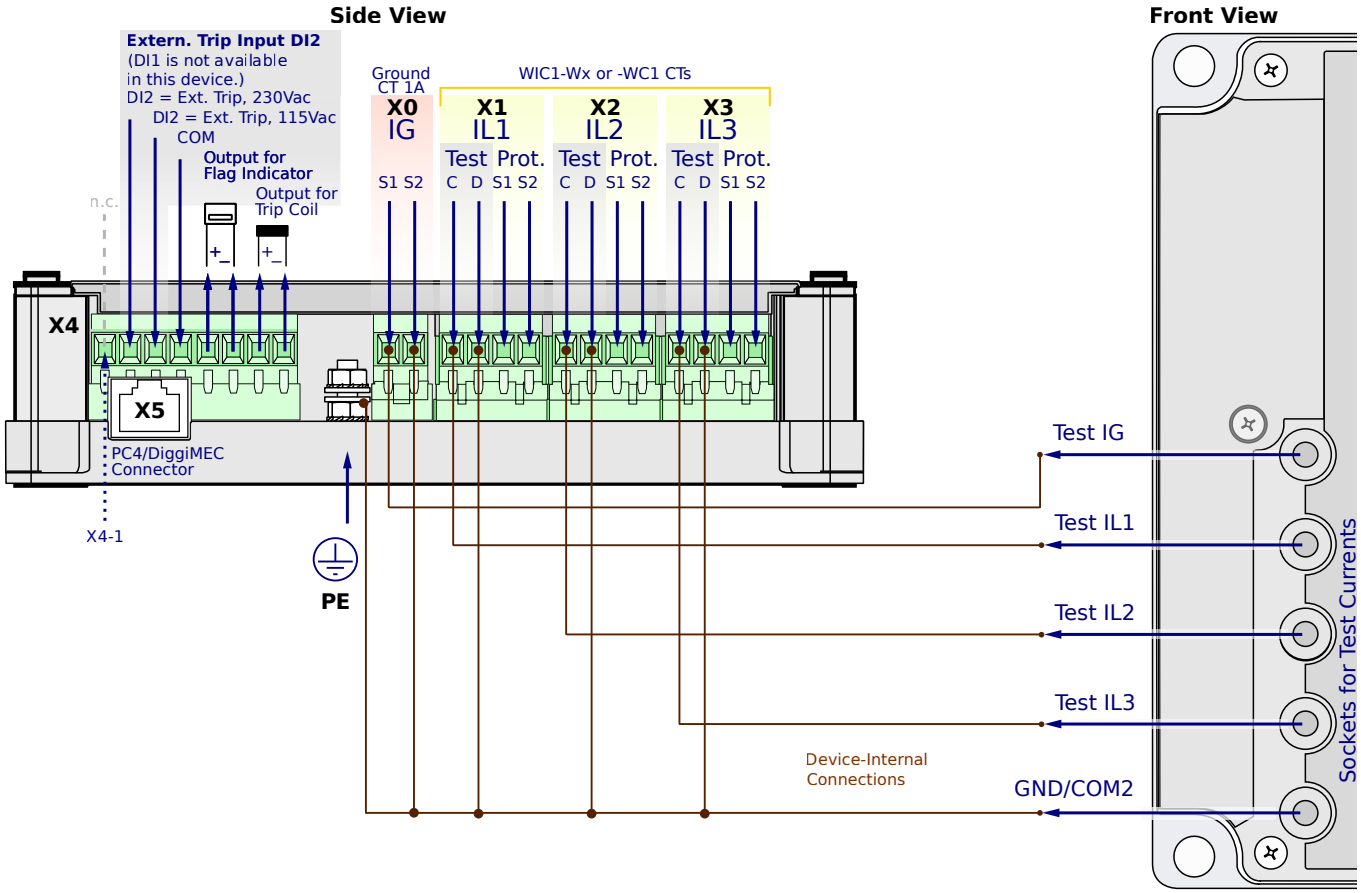


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0SAH

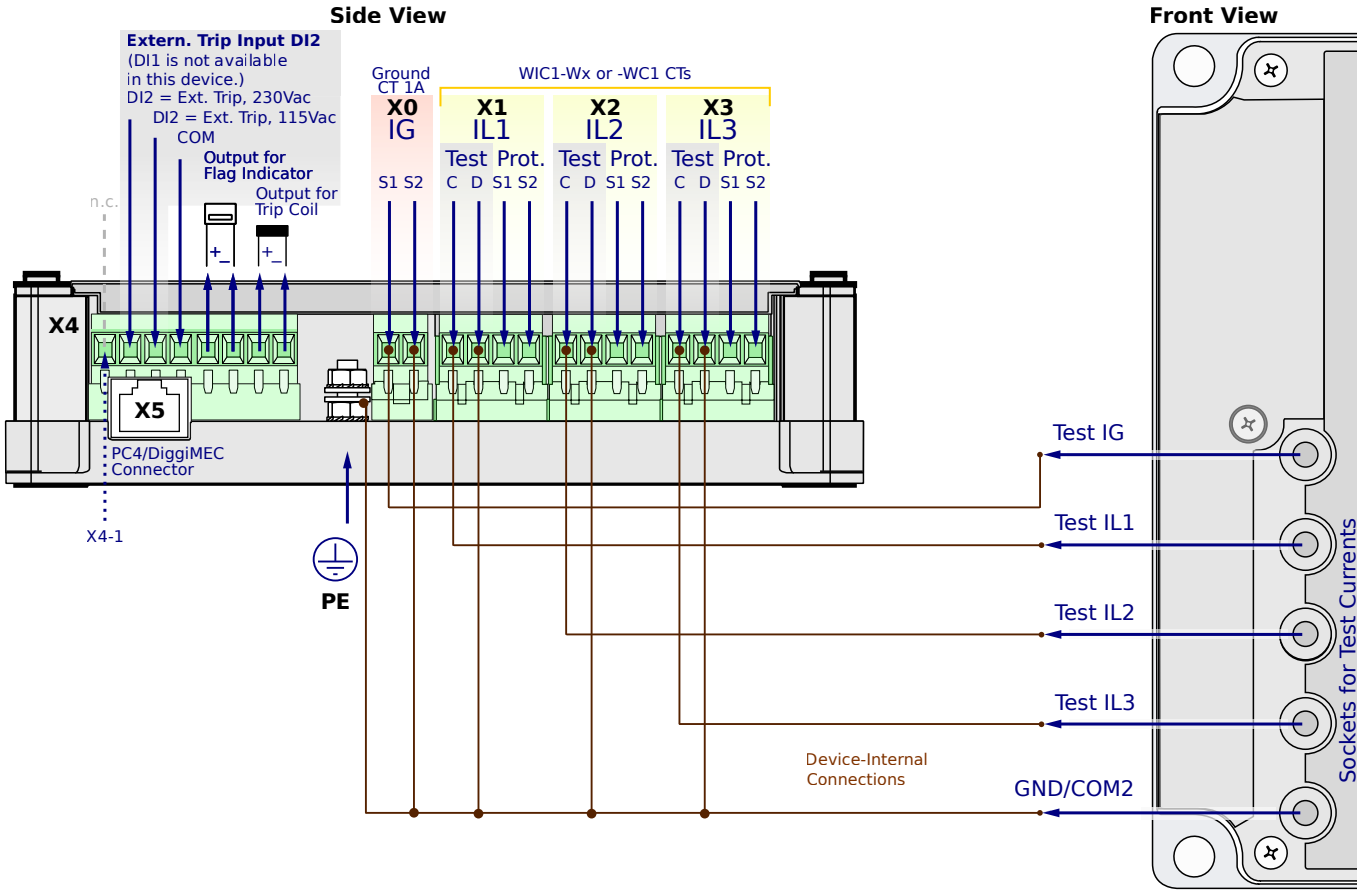


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0AA0

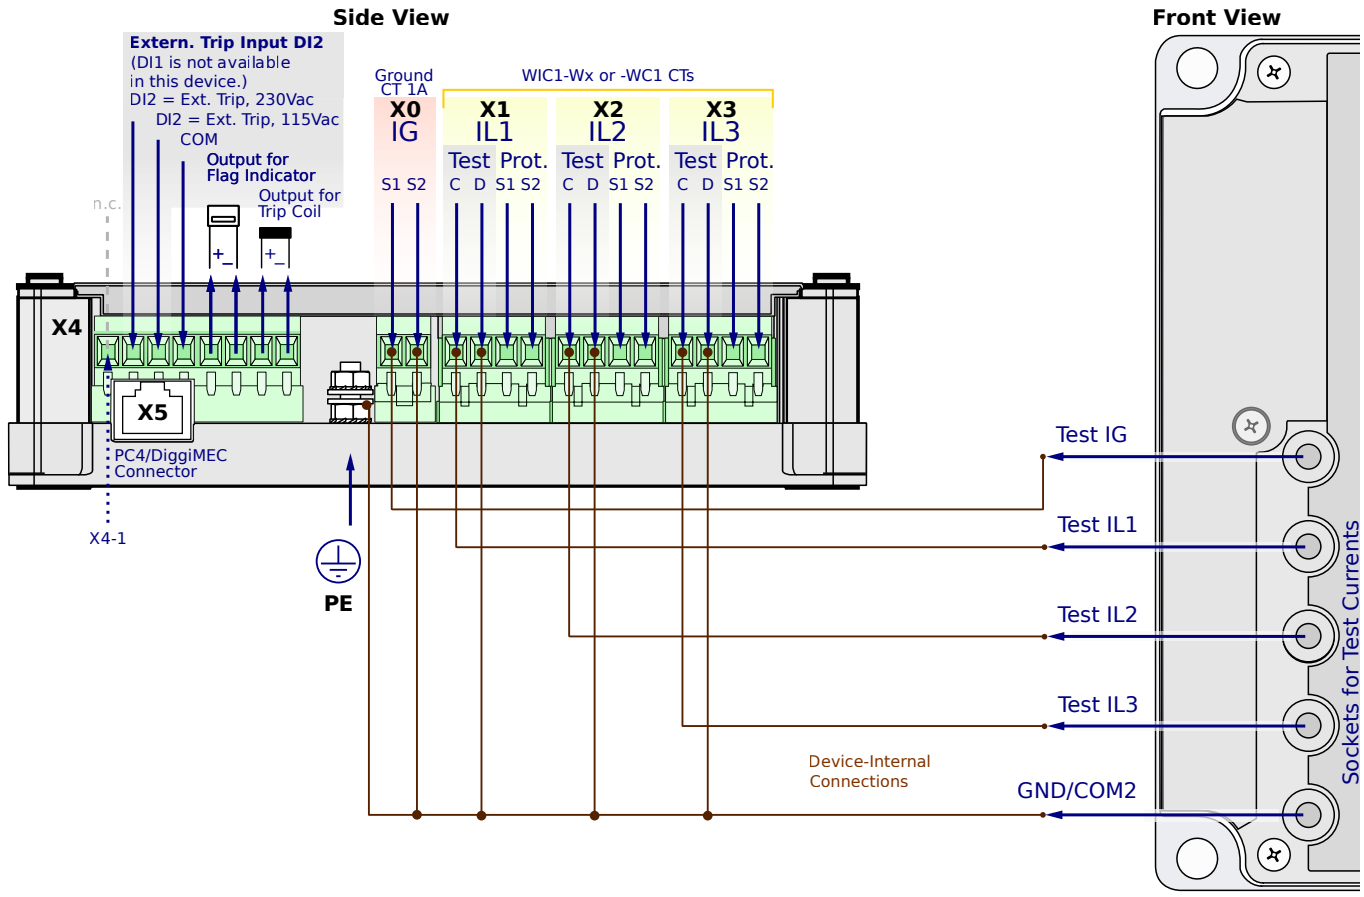


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0AAH

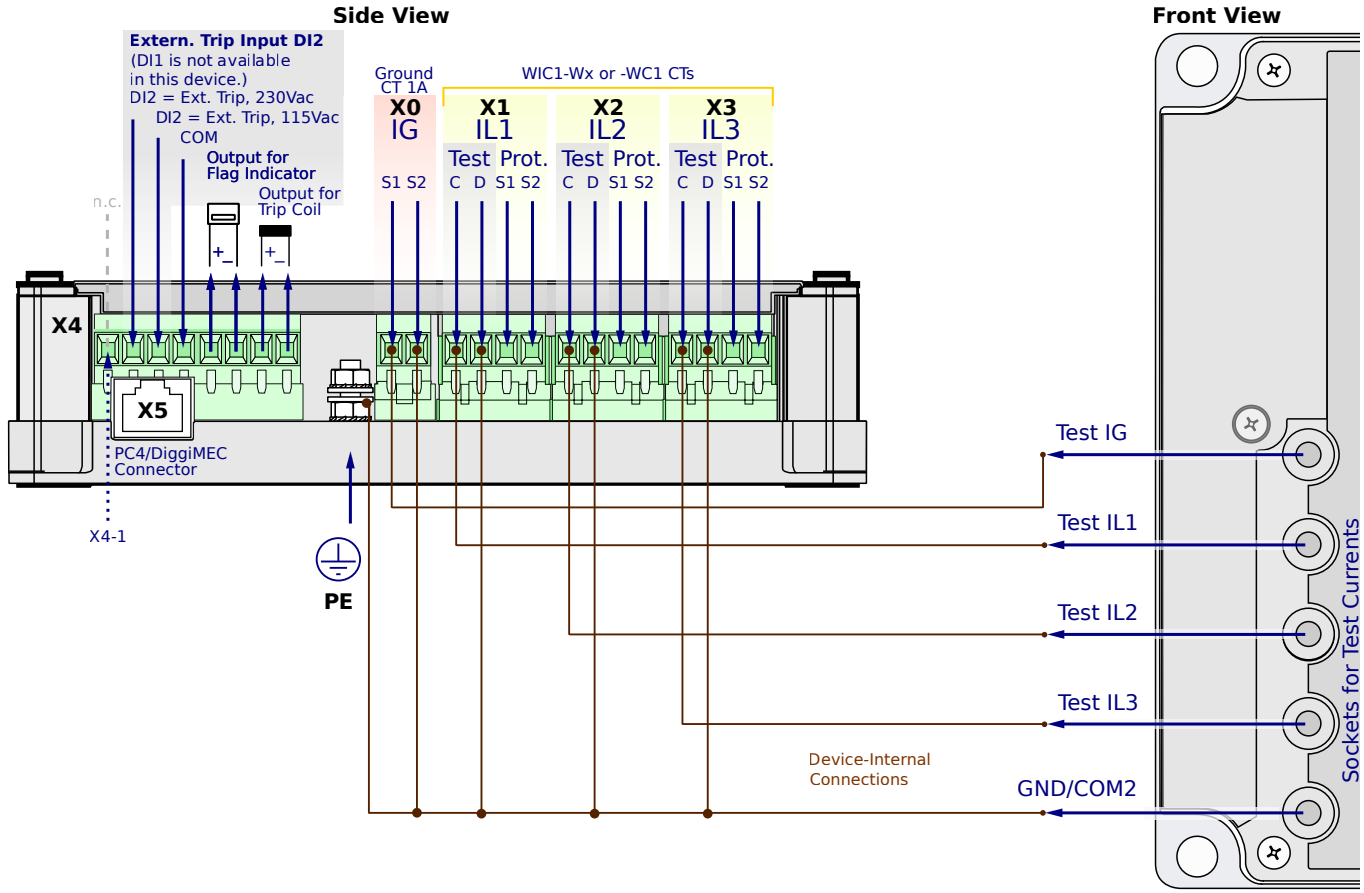


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0PA0

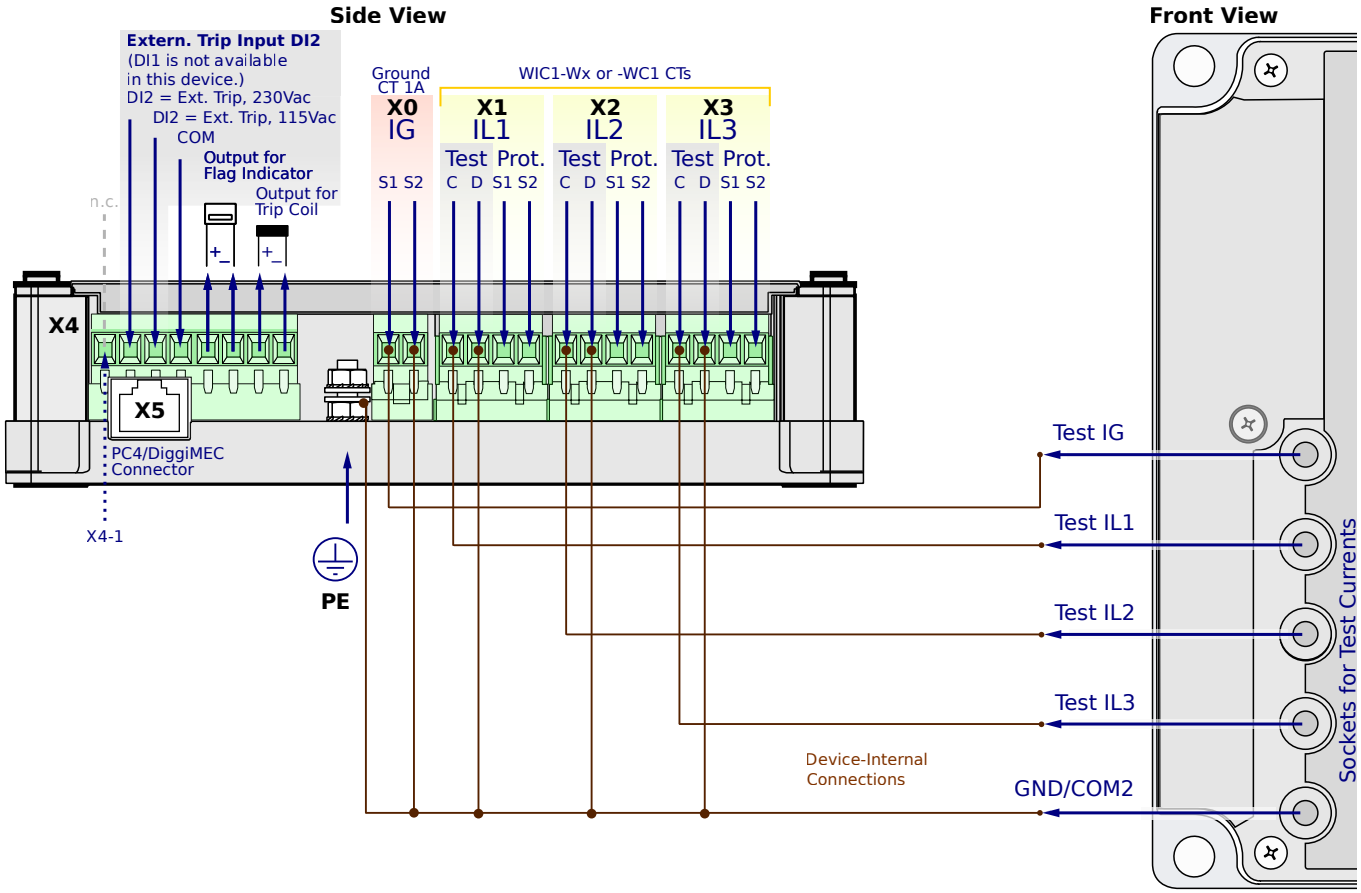


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF0PAH

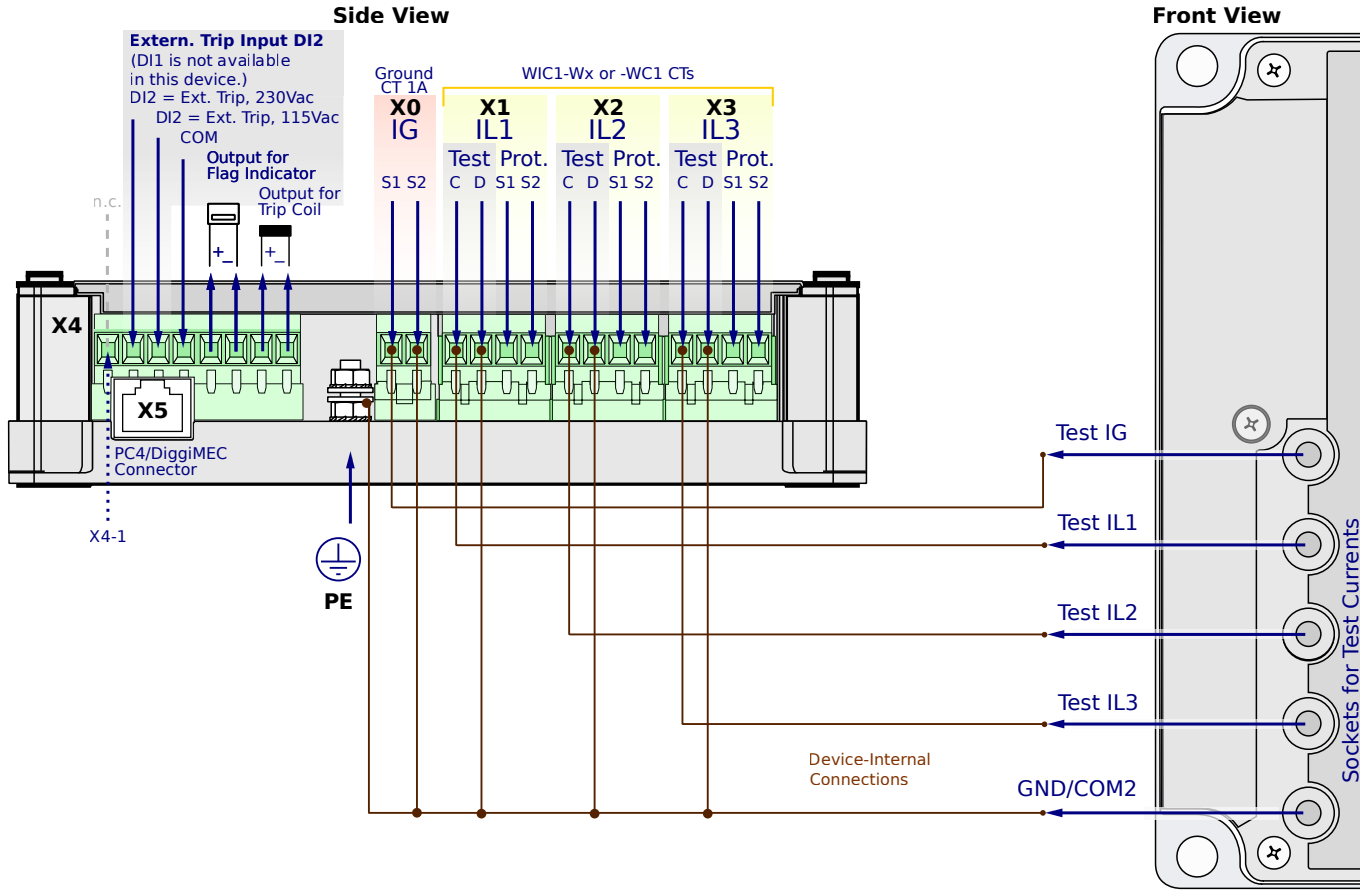


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1SA0

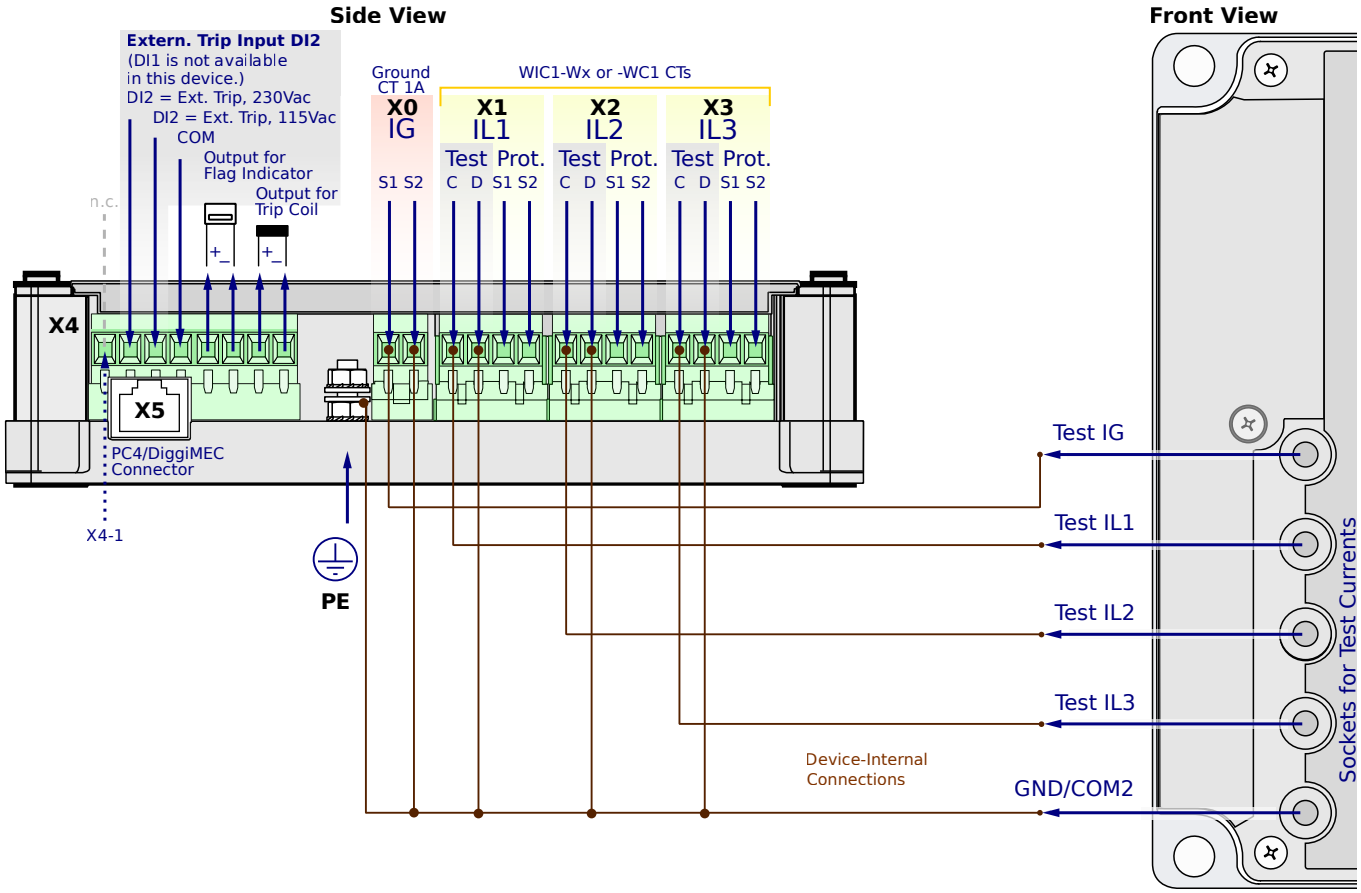


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1SAH

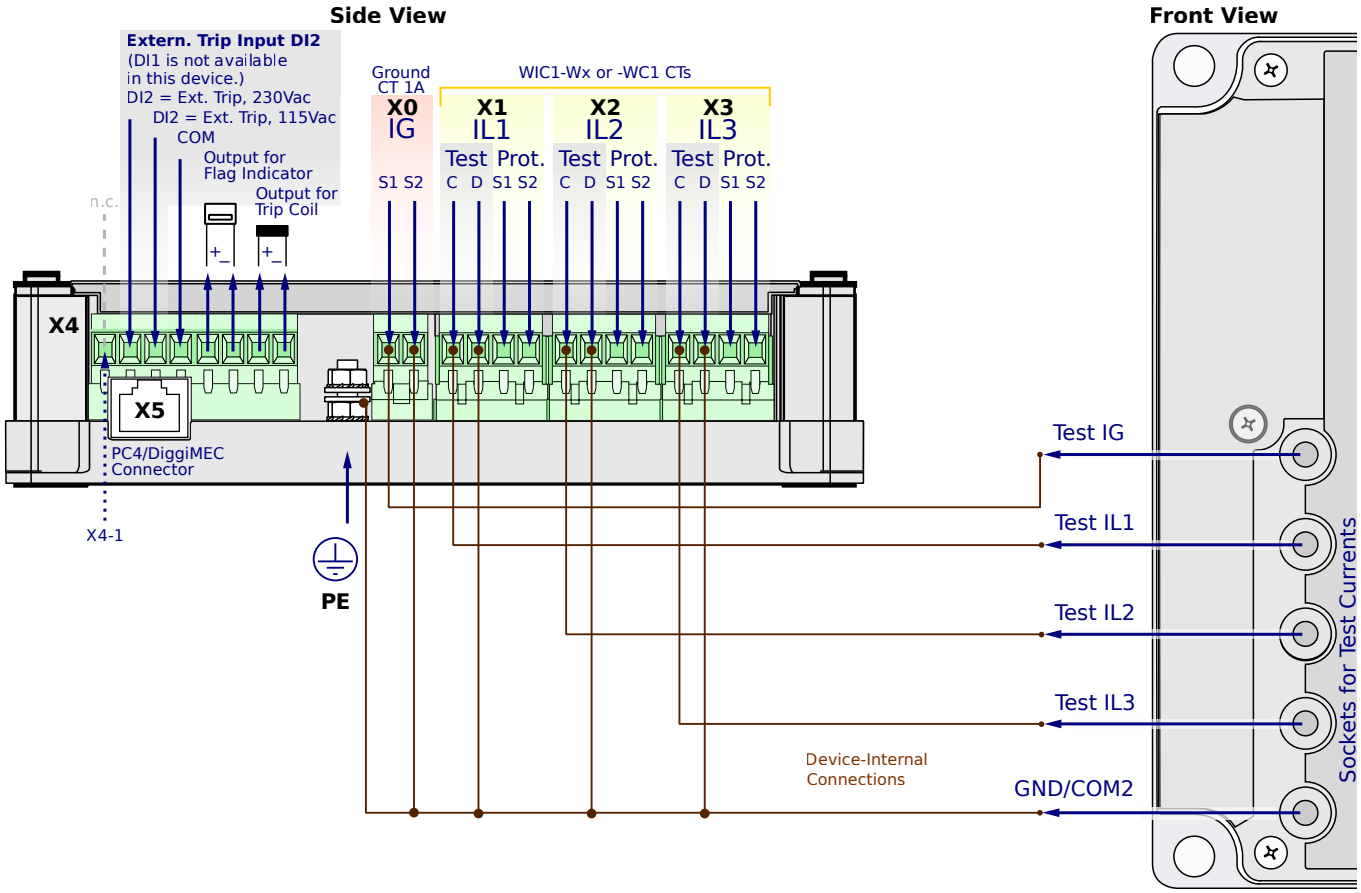


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1AA0

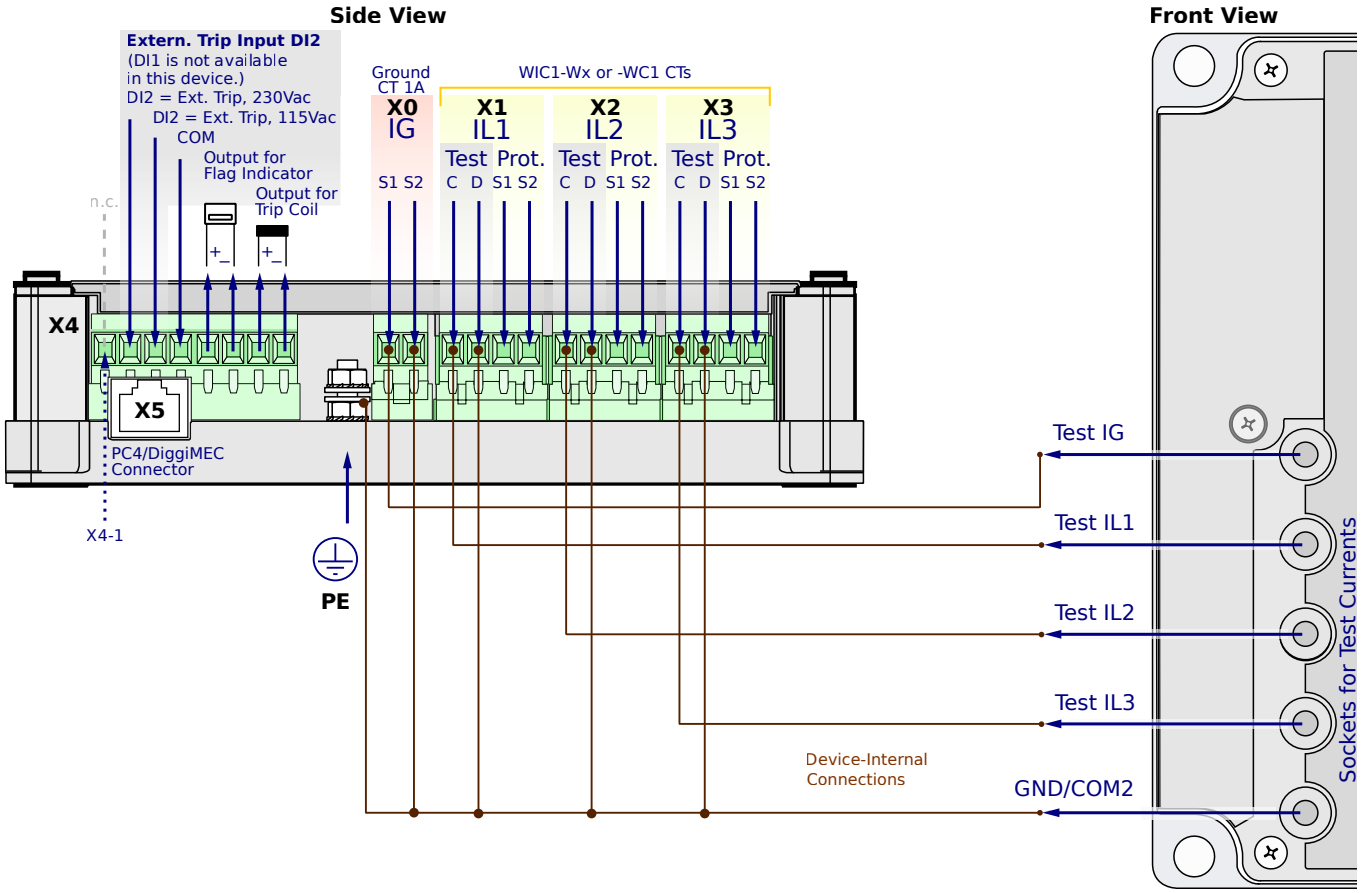


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1AAH

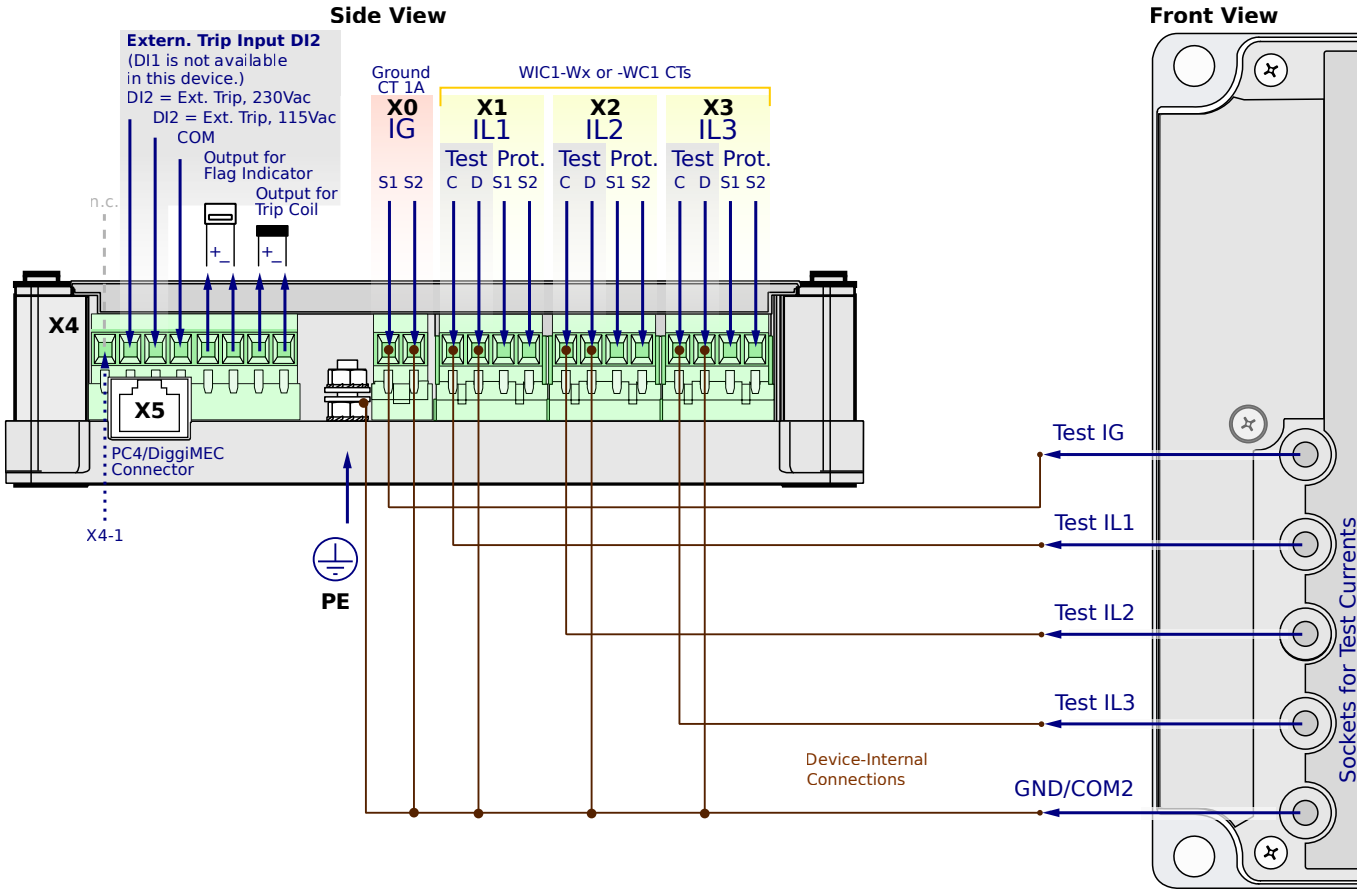


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1PA0

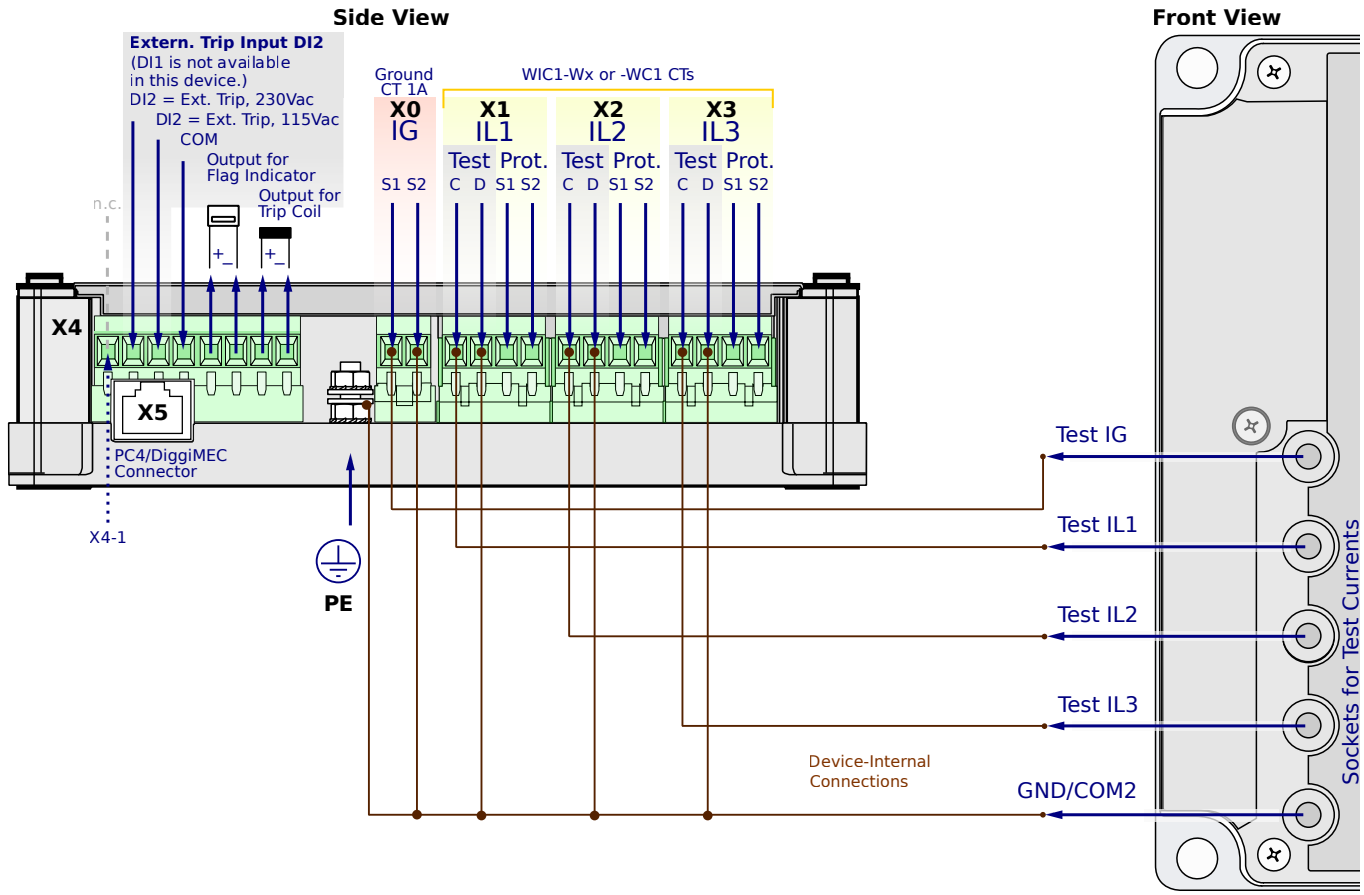


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF1PAH

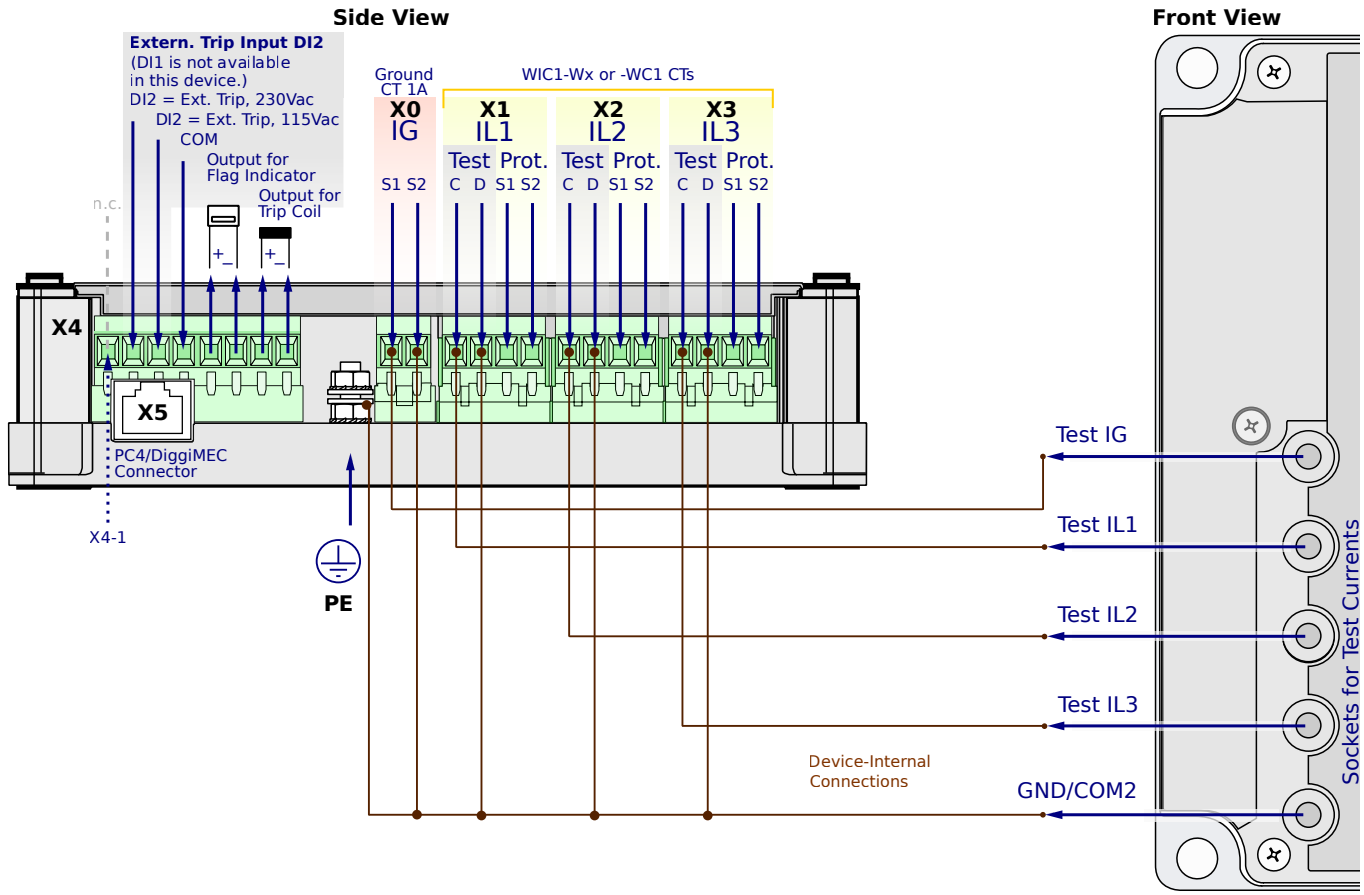


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2SA0

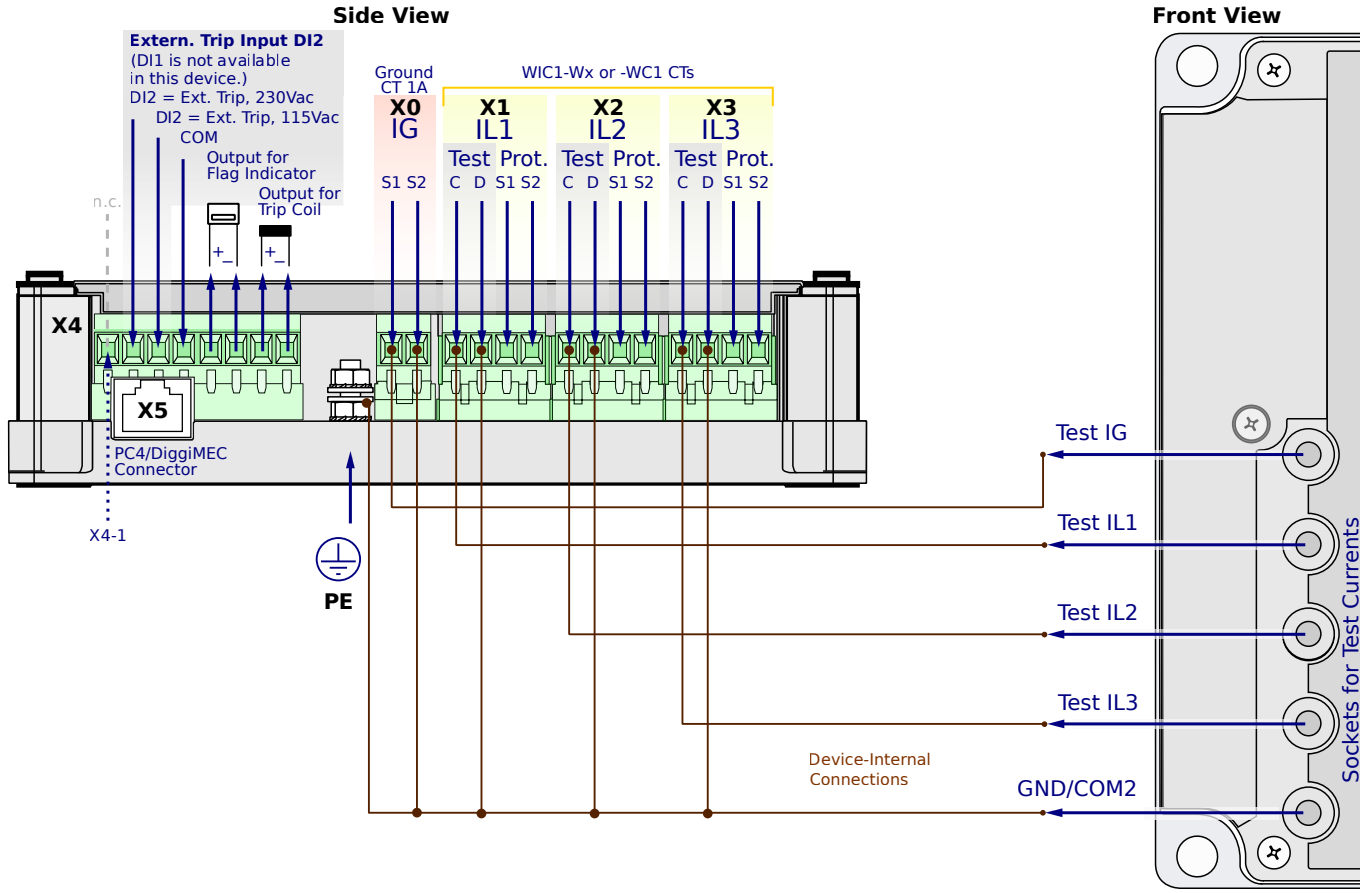


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2SAH

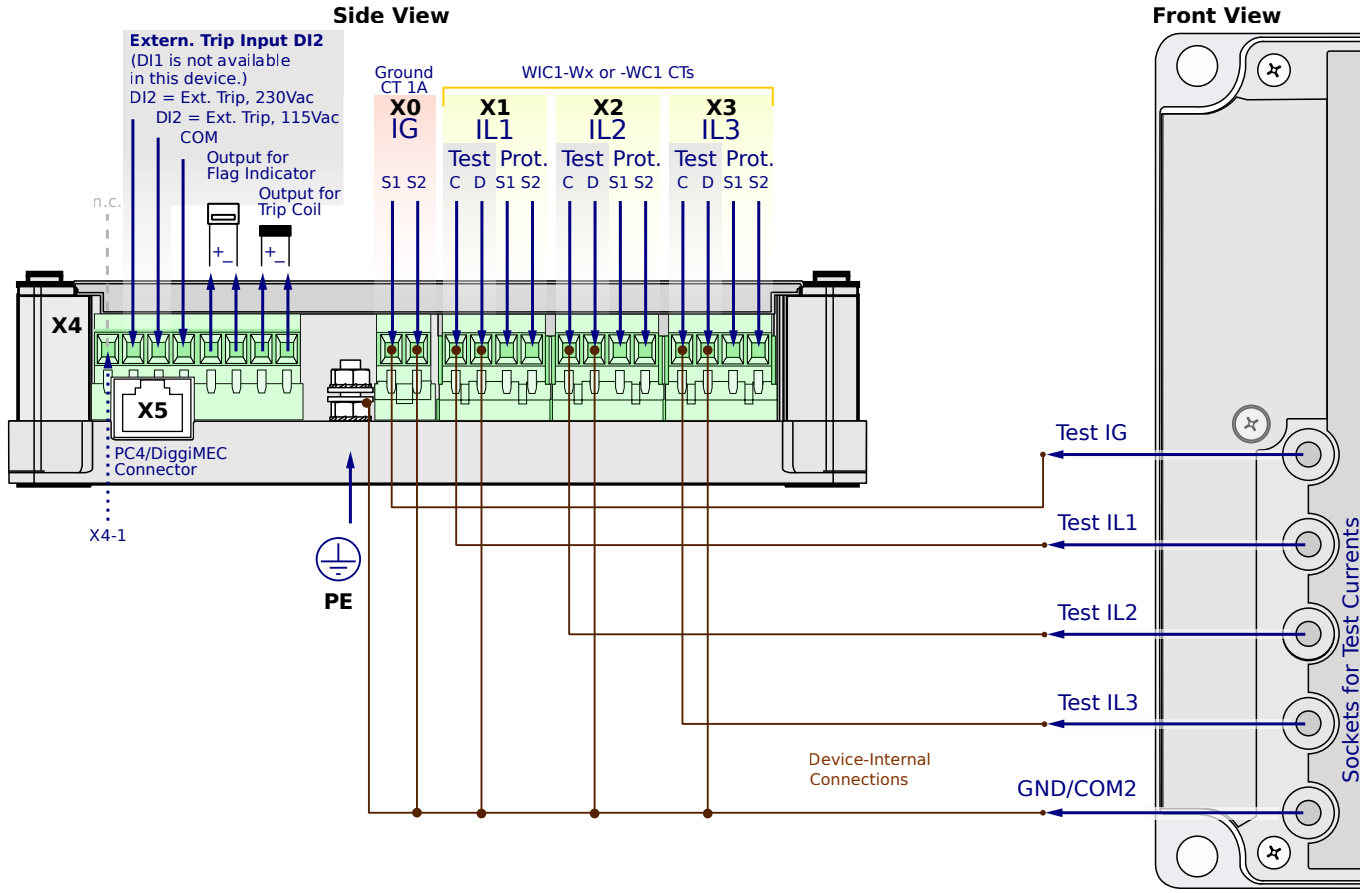


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2AA0

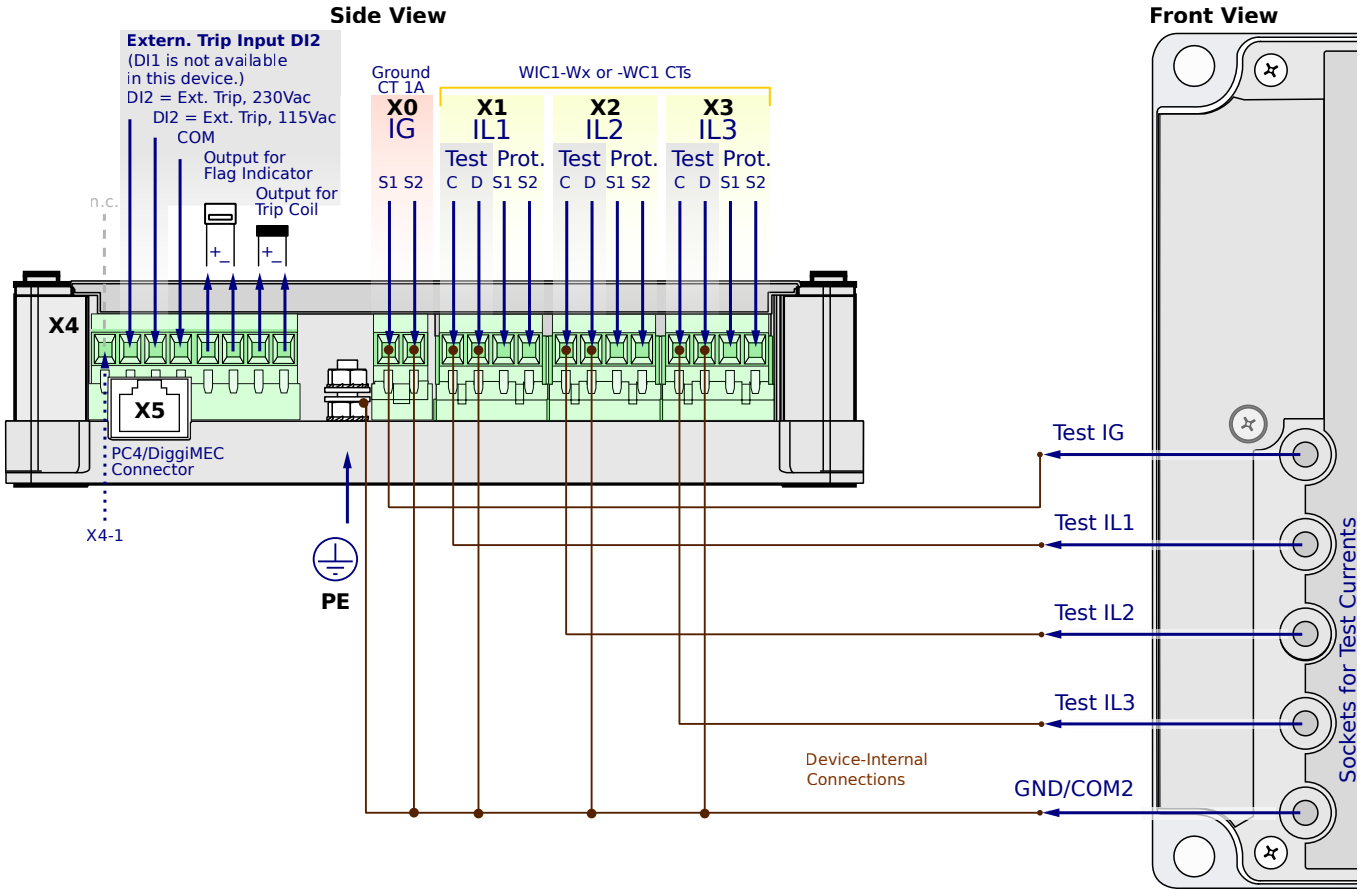


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2AAH

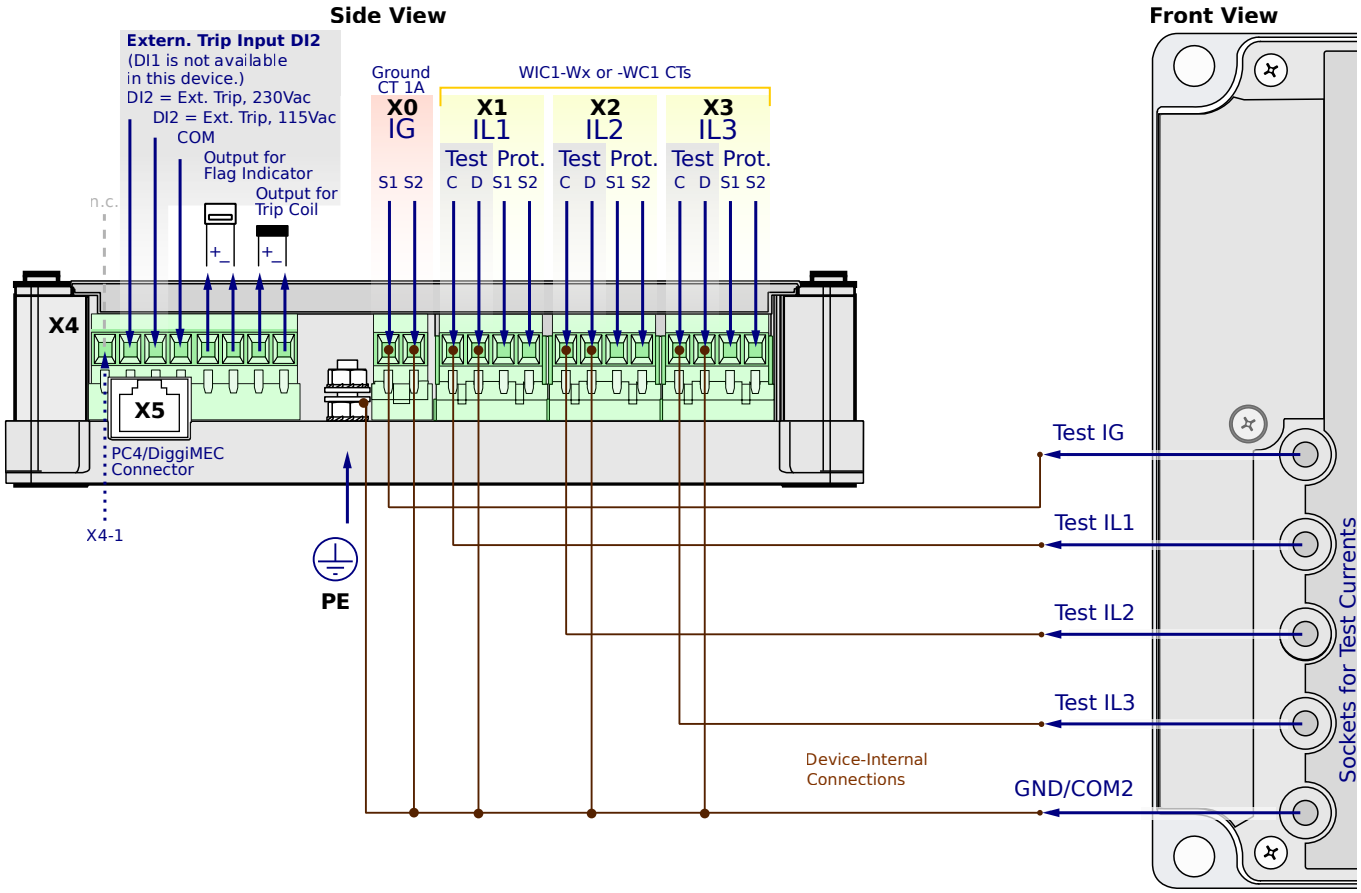


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2PA0

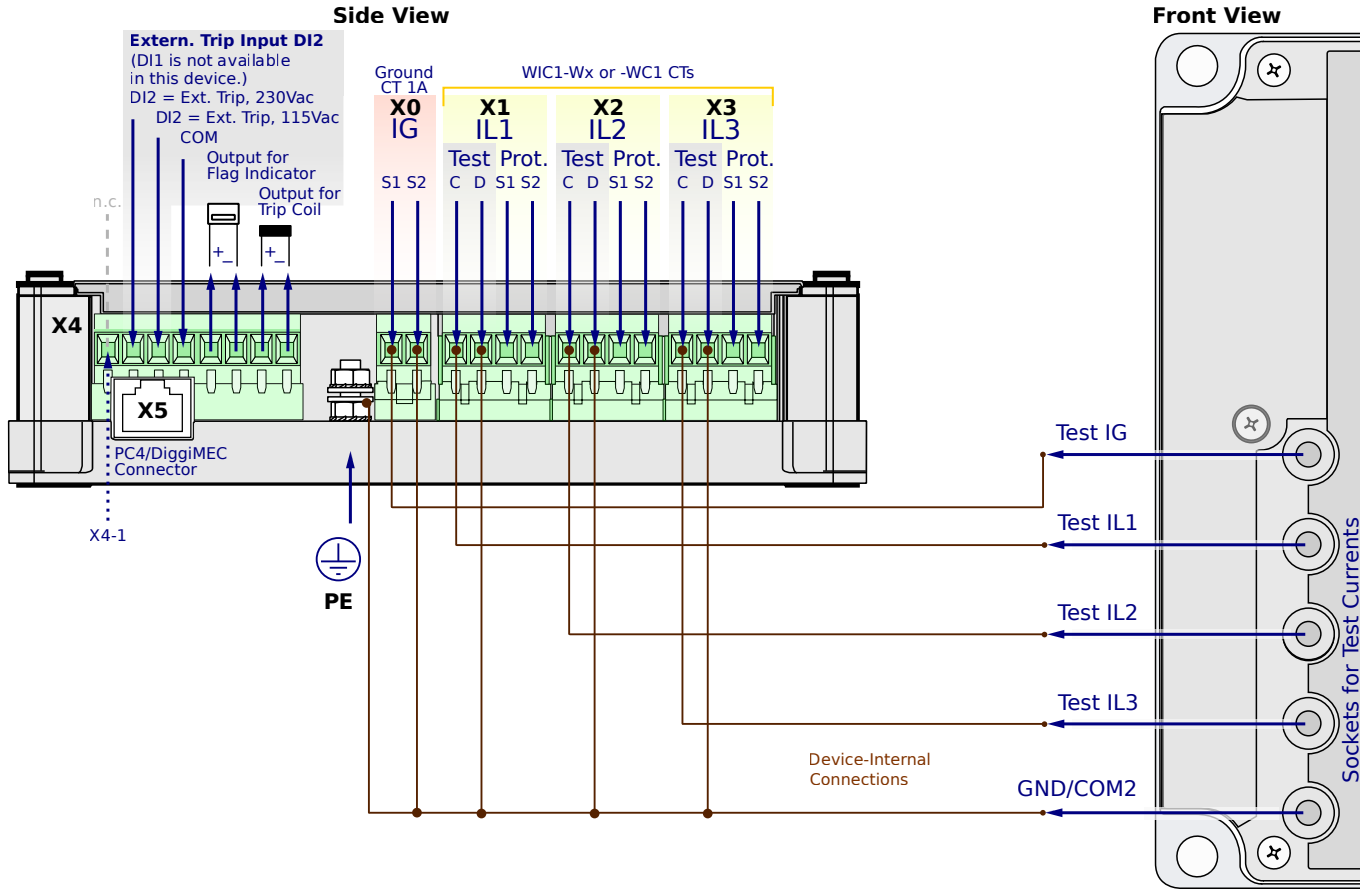


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NF2PAH

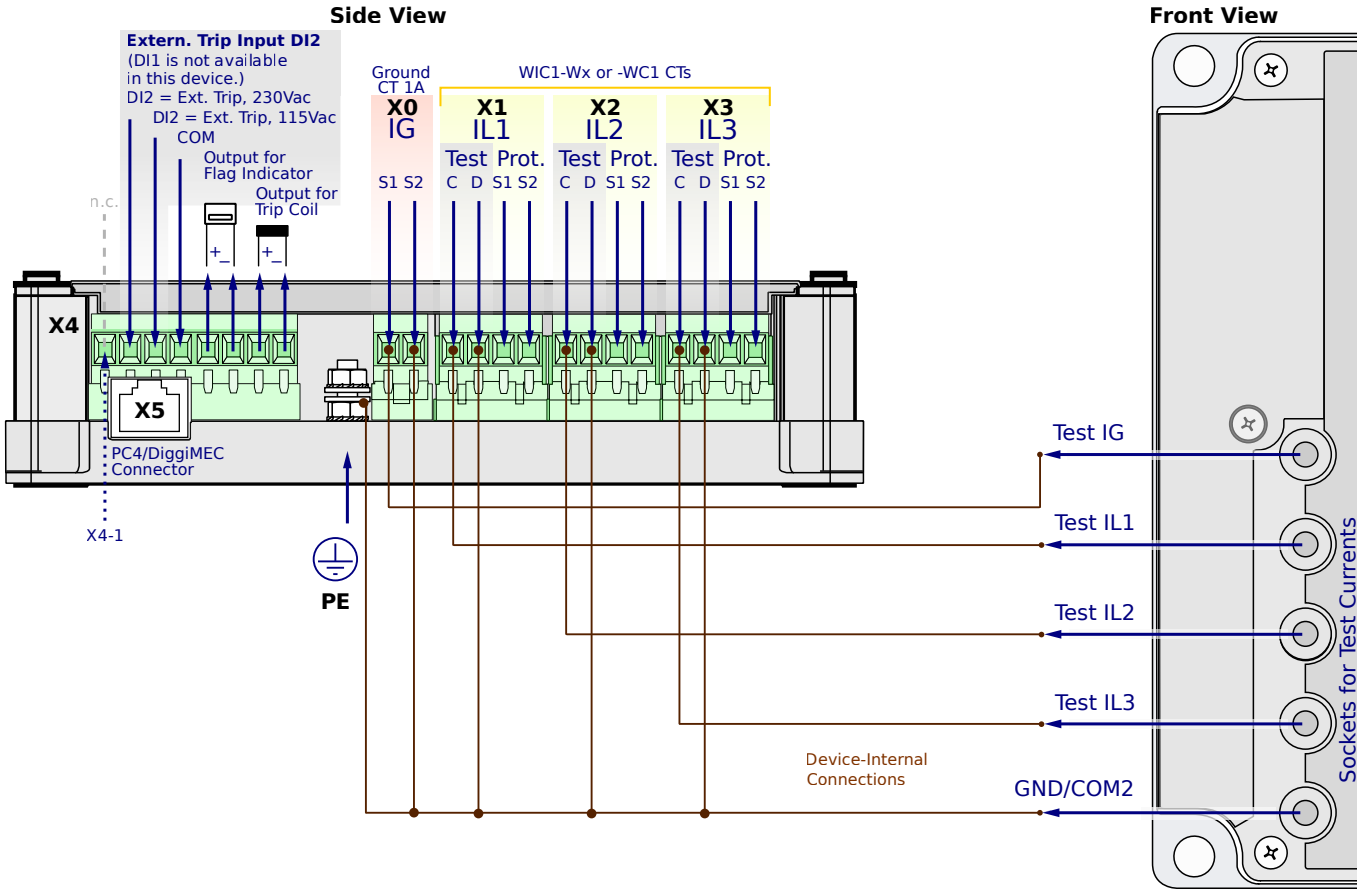


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0SA0

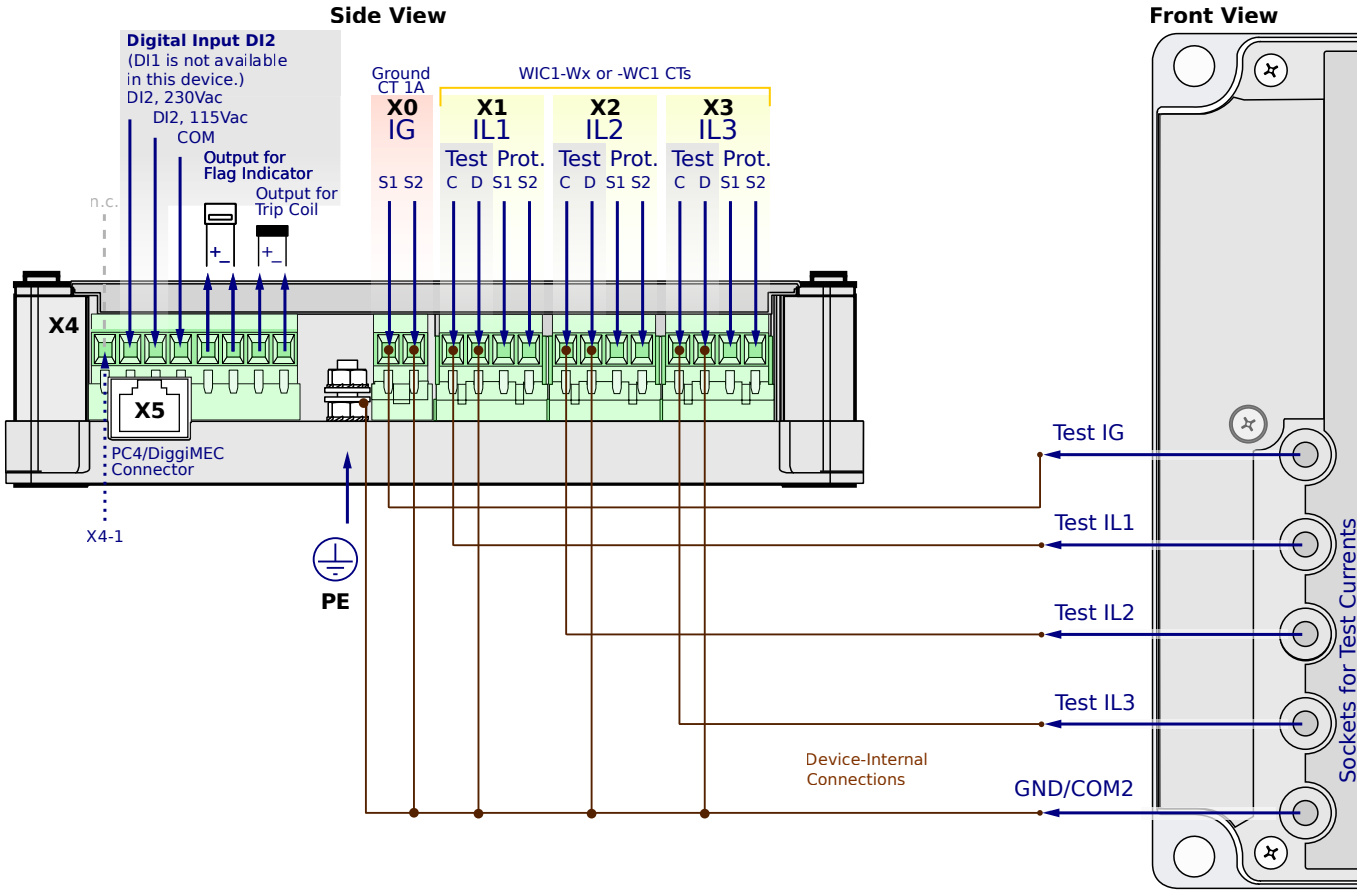


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0SAH

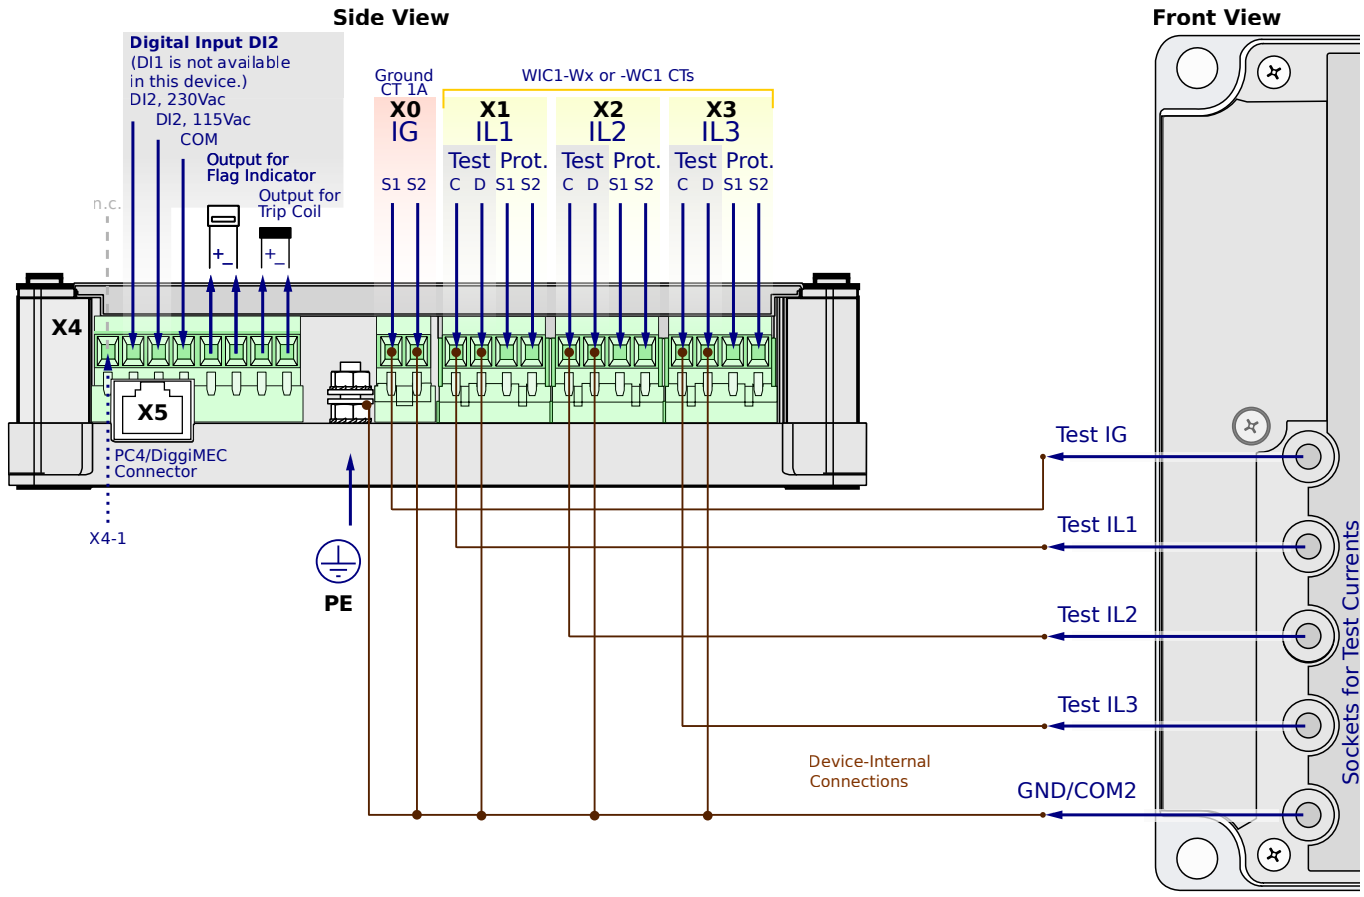


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0AA0

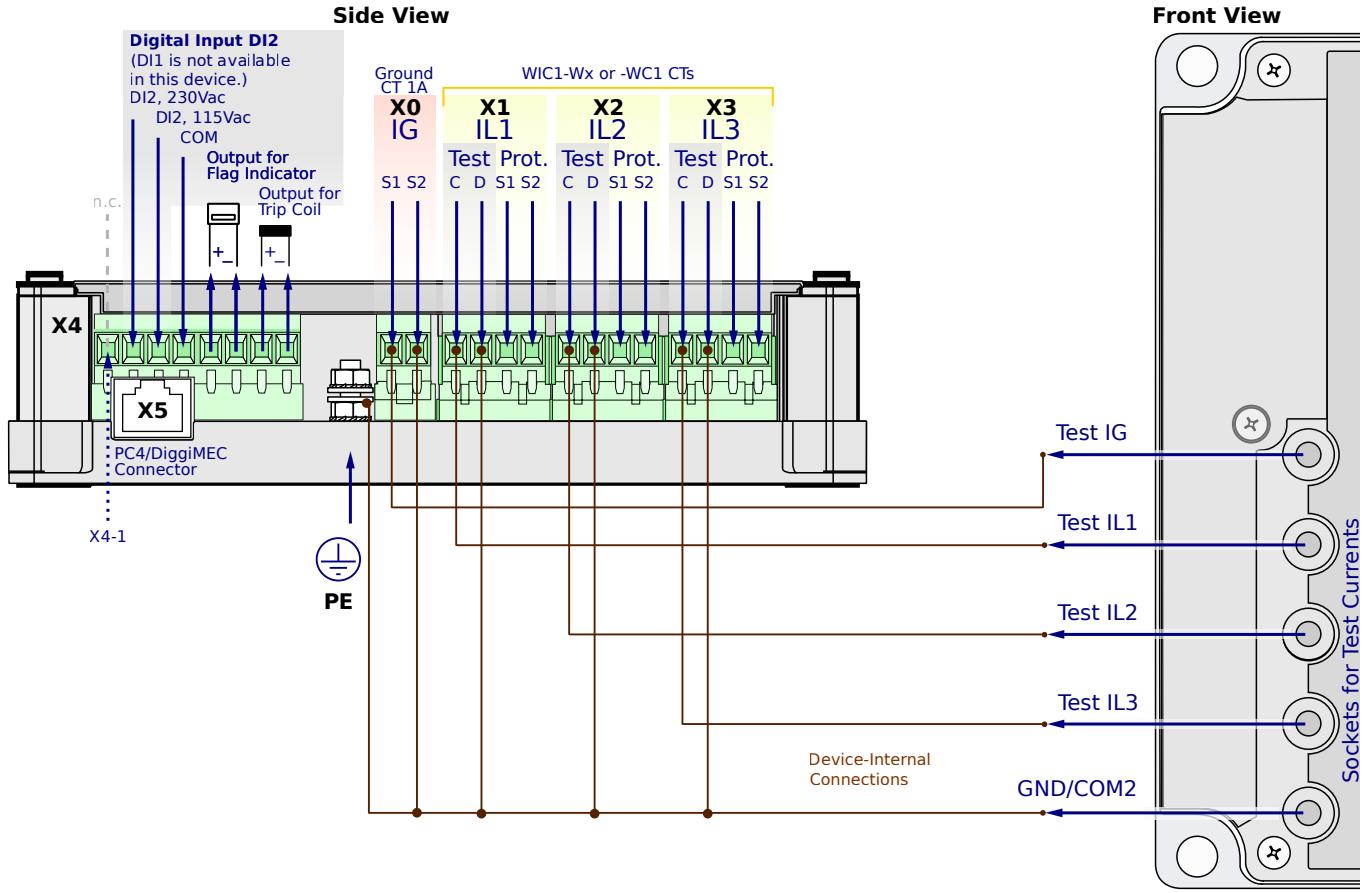


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0AAH

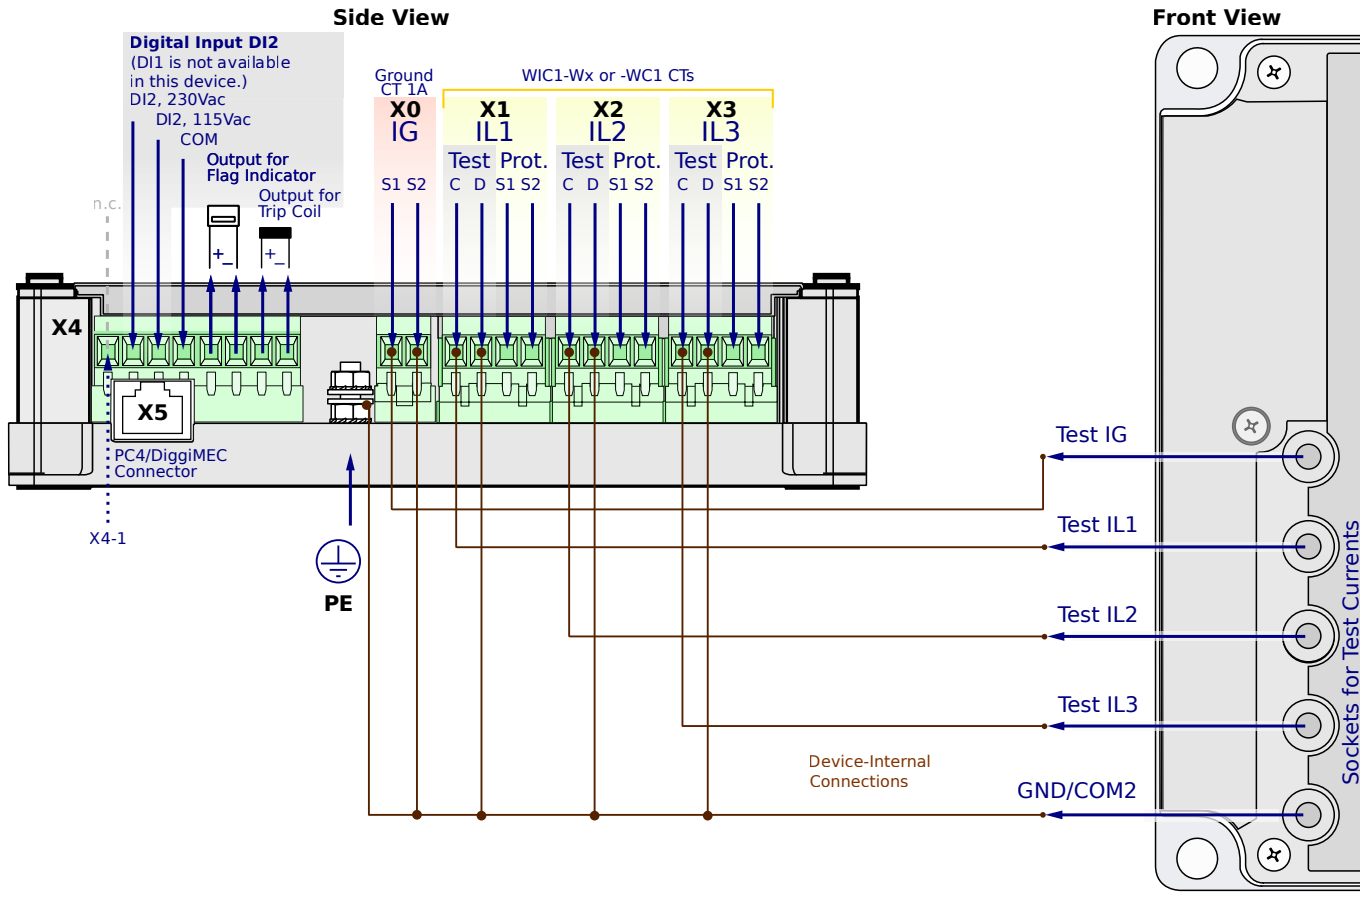


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0PA0

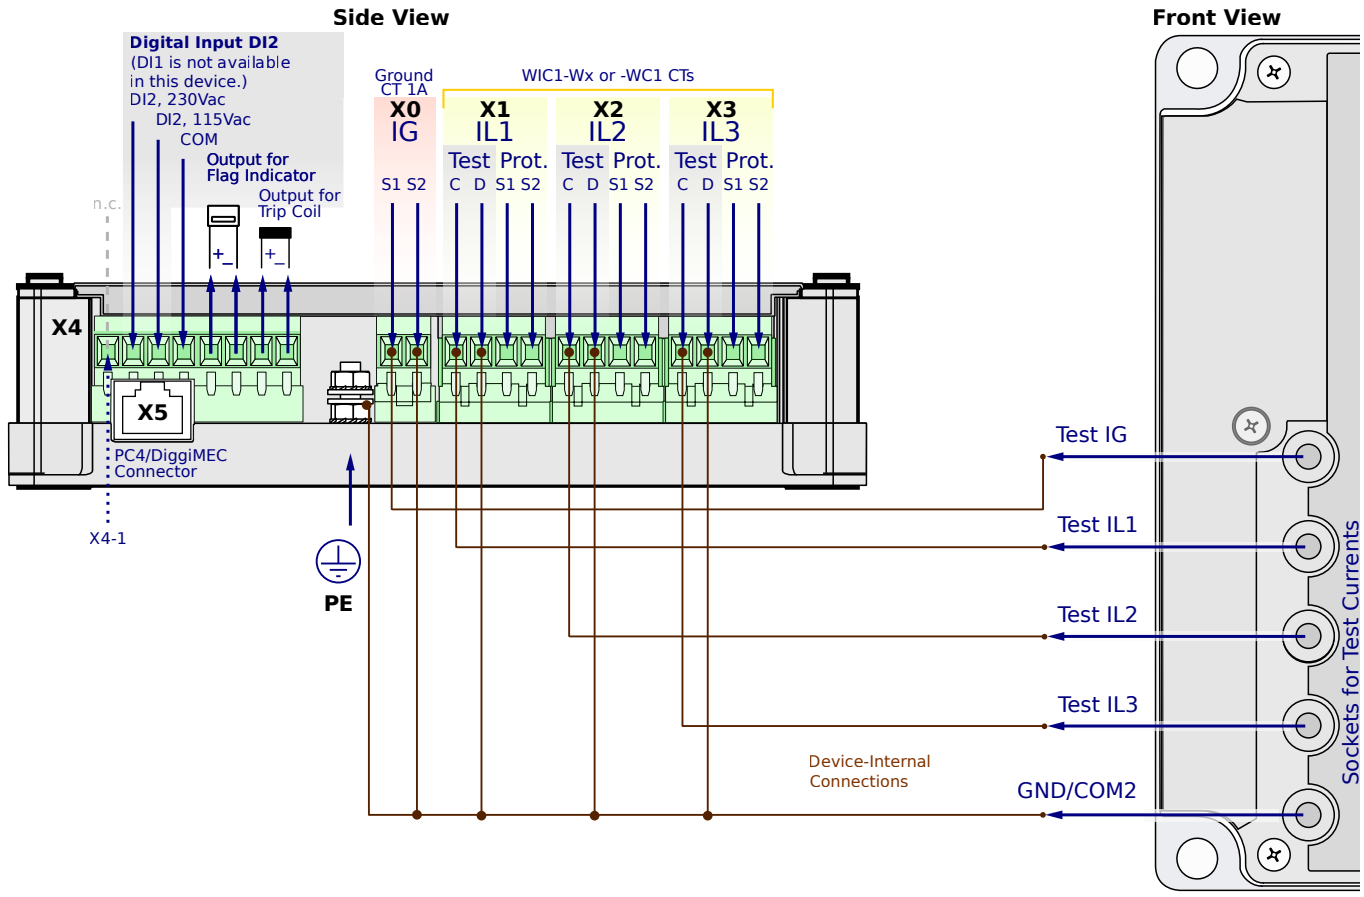


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC0PAH

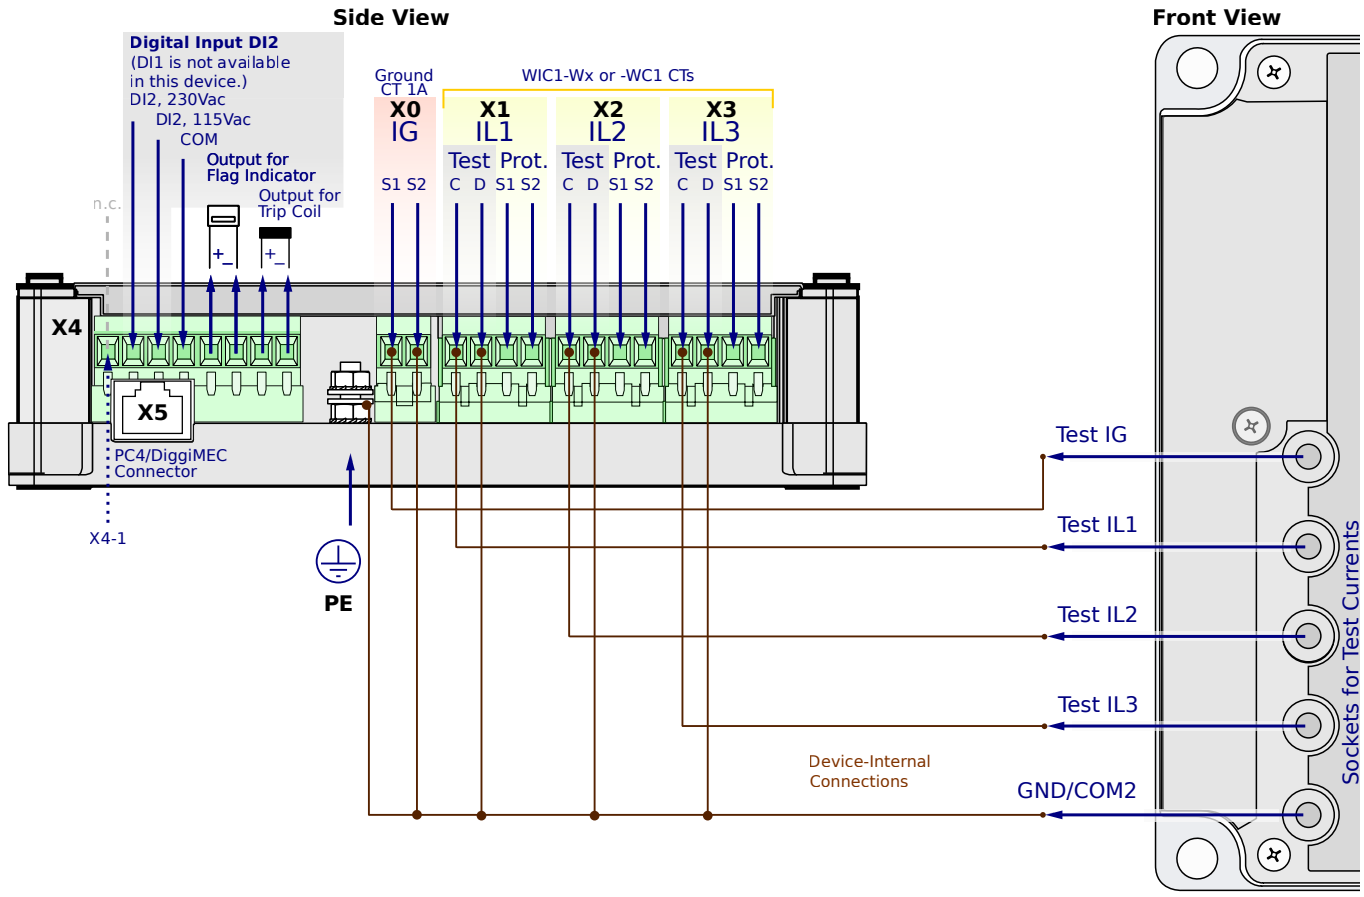


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1SA0

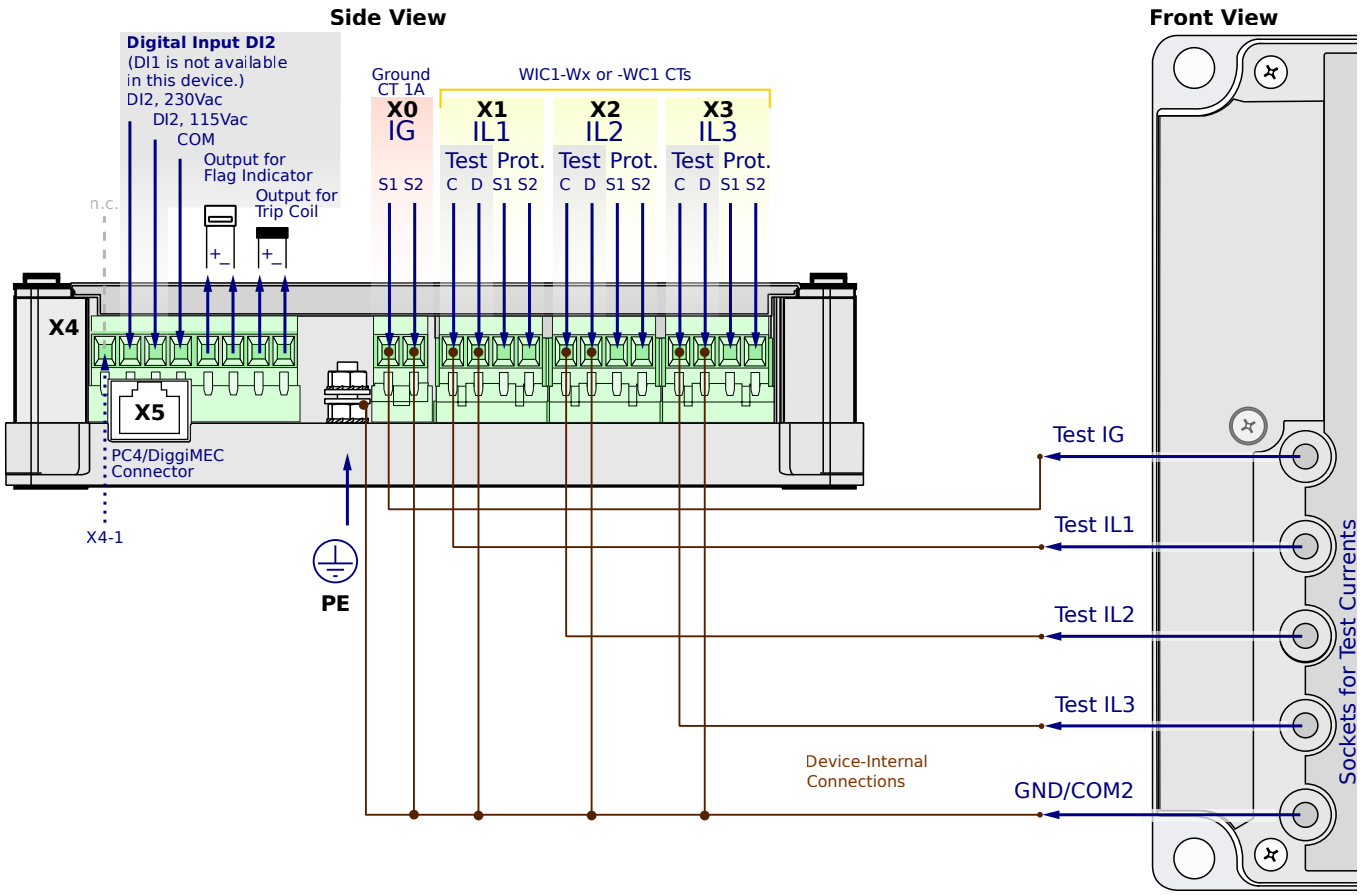


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1SAH

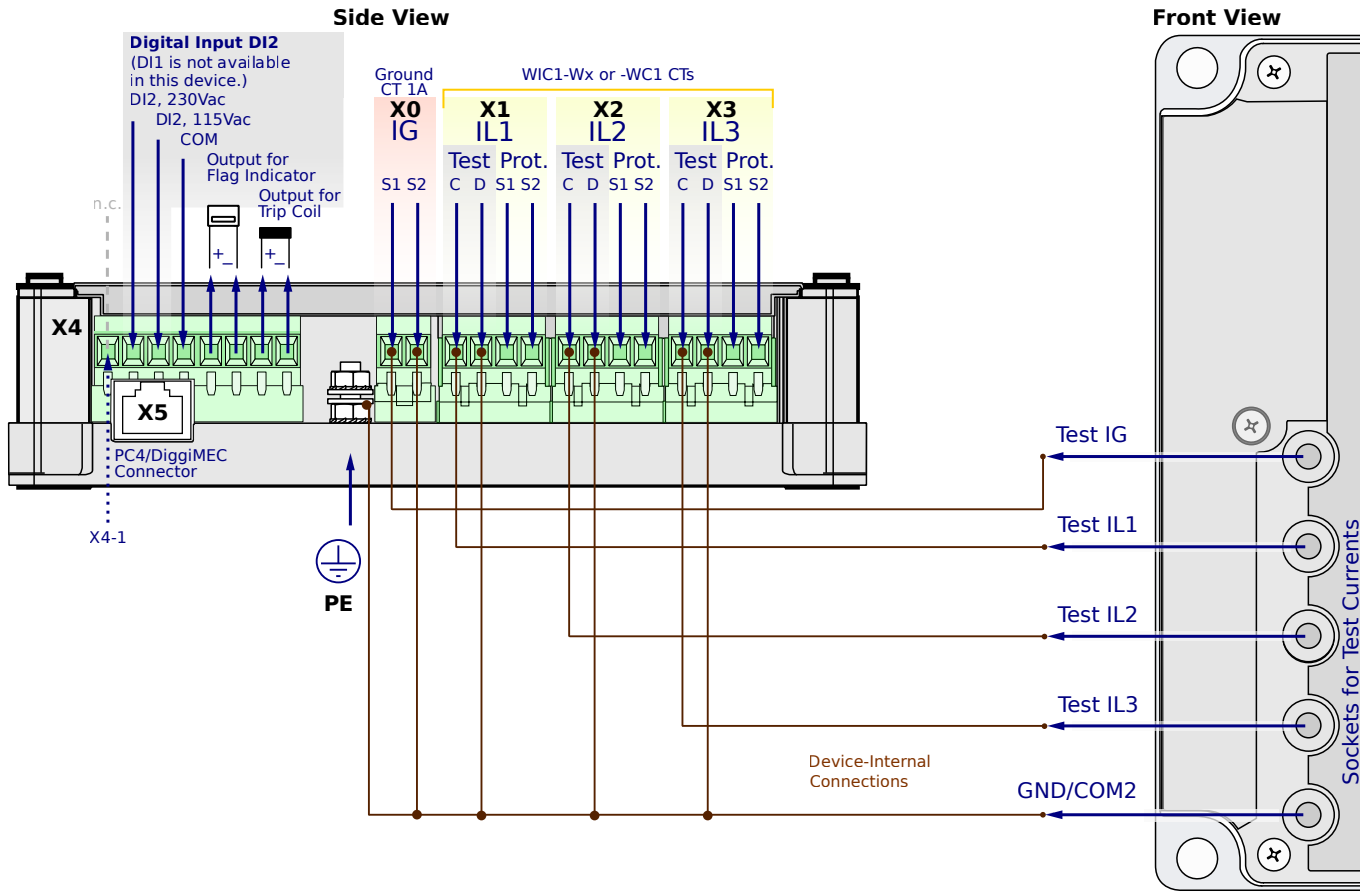


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1AA0

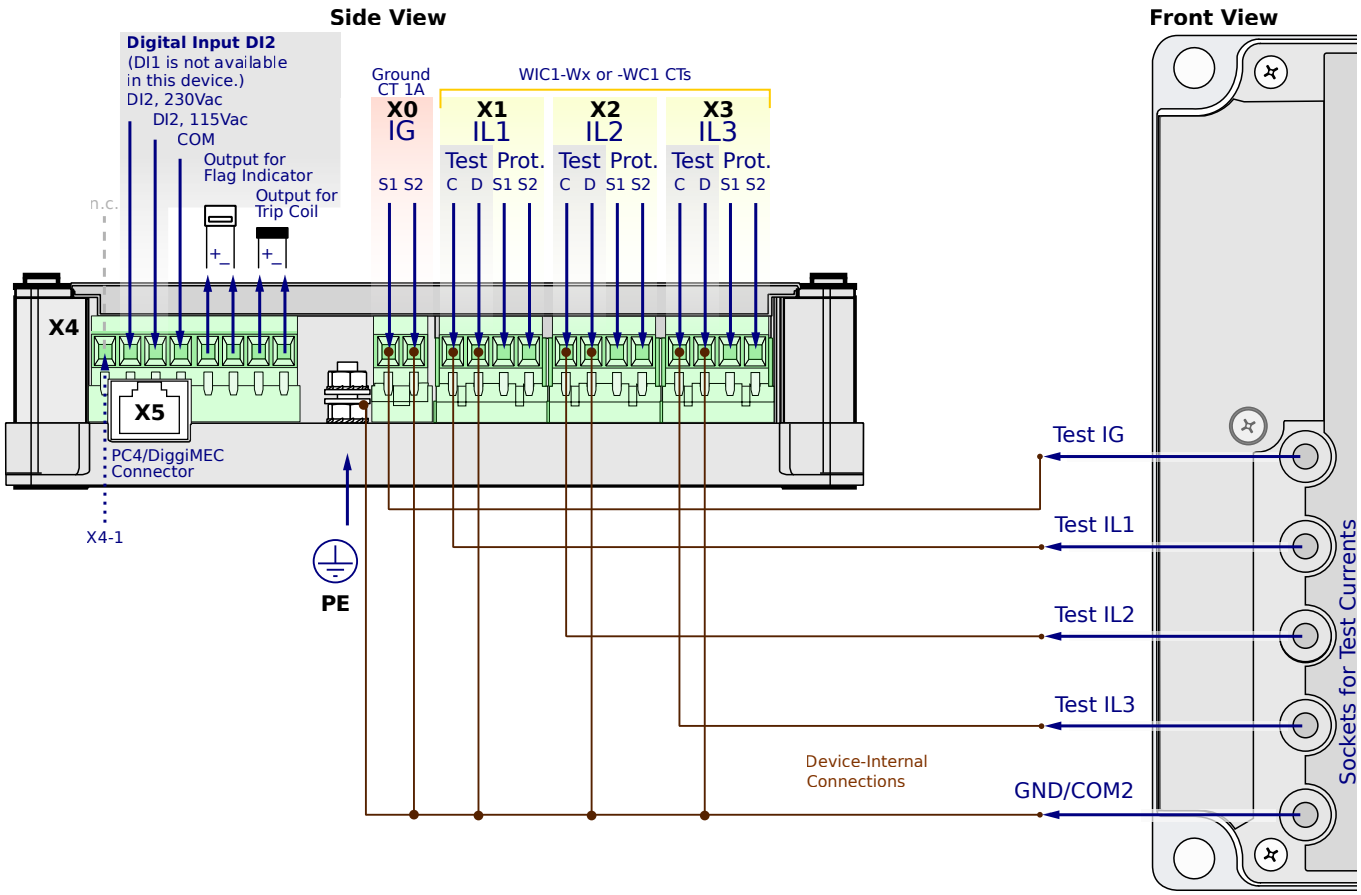


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1AAH

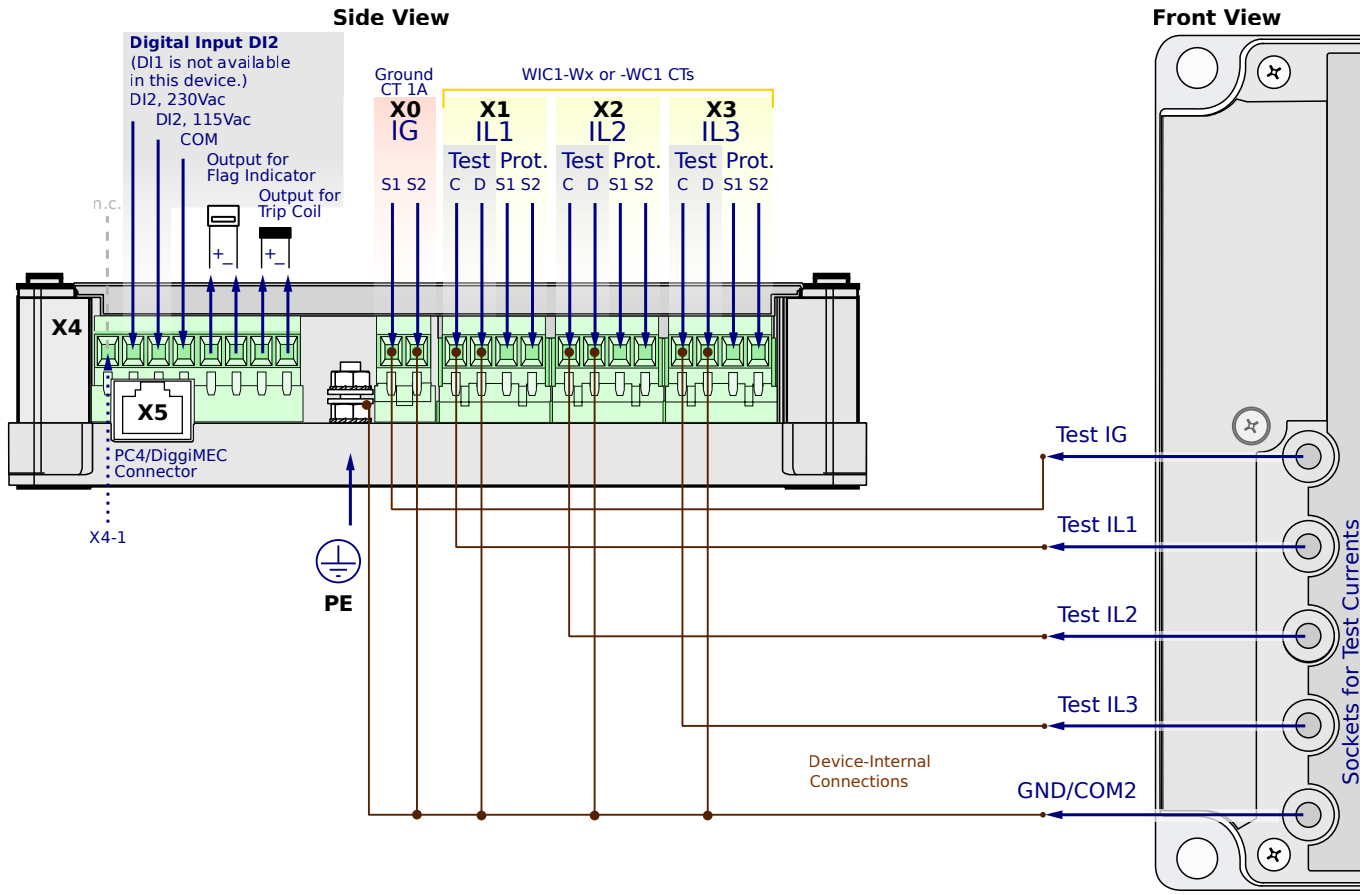


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1PA0

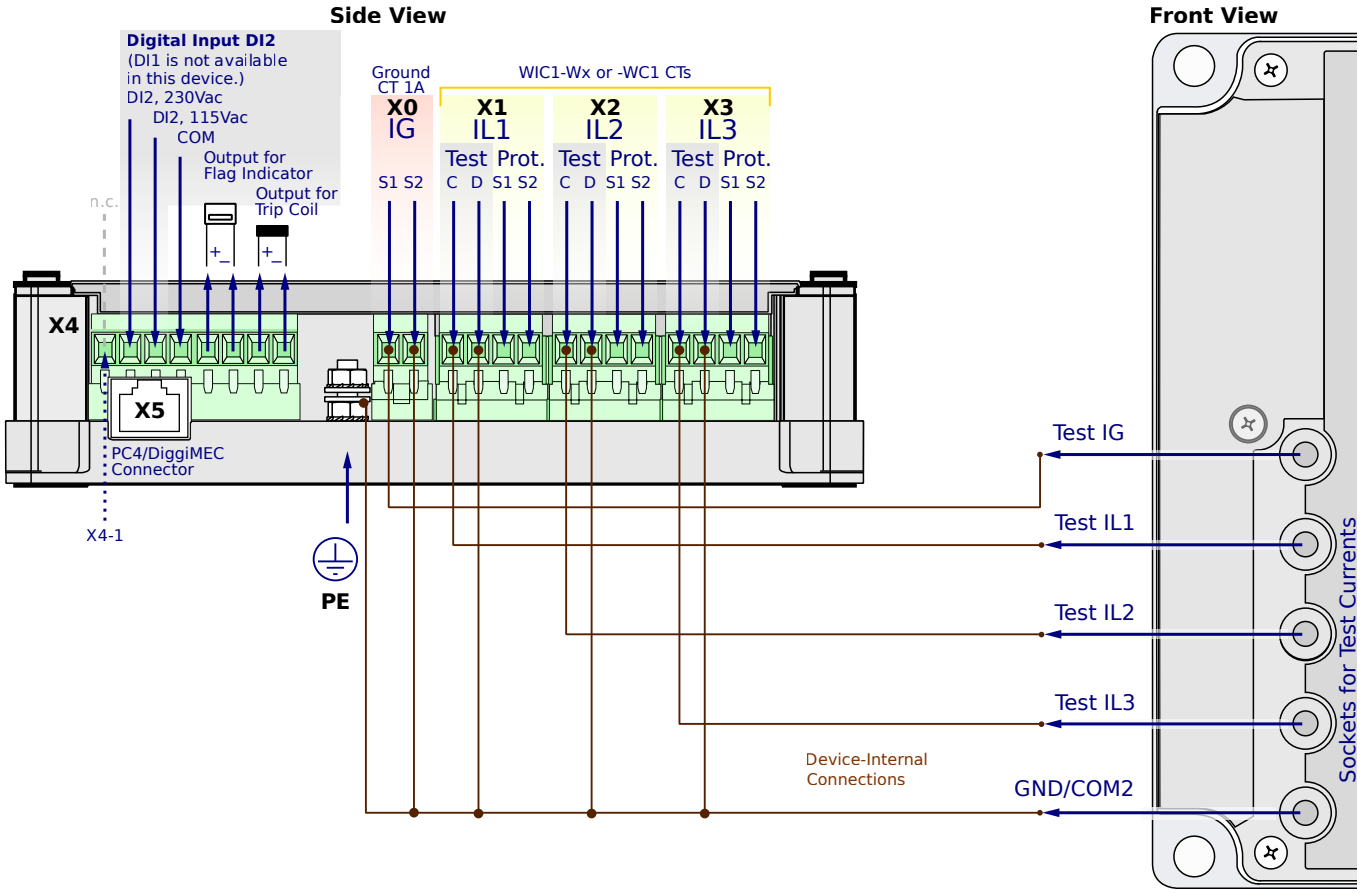


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC1PAH

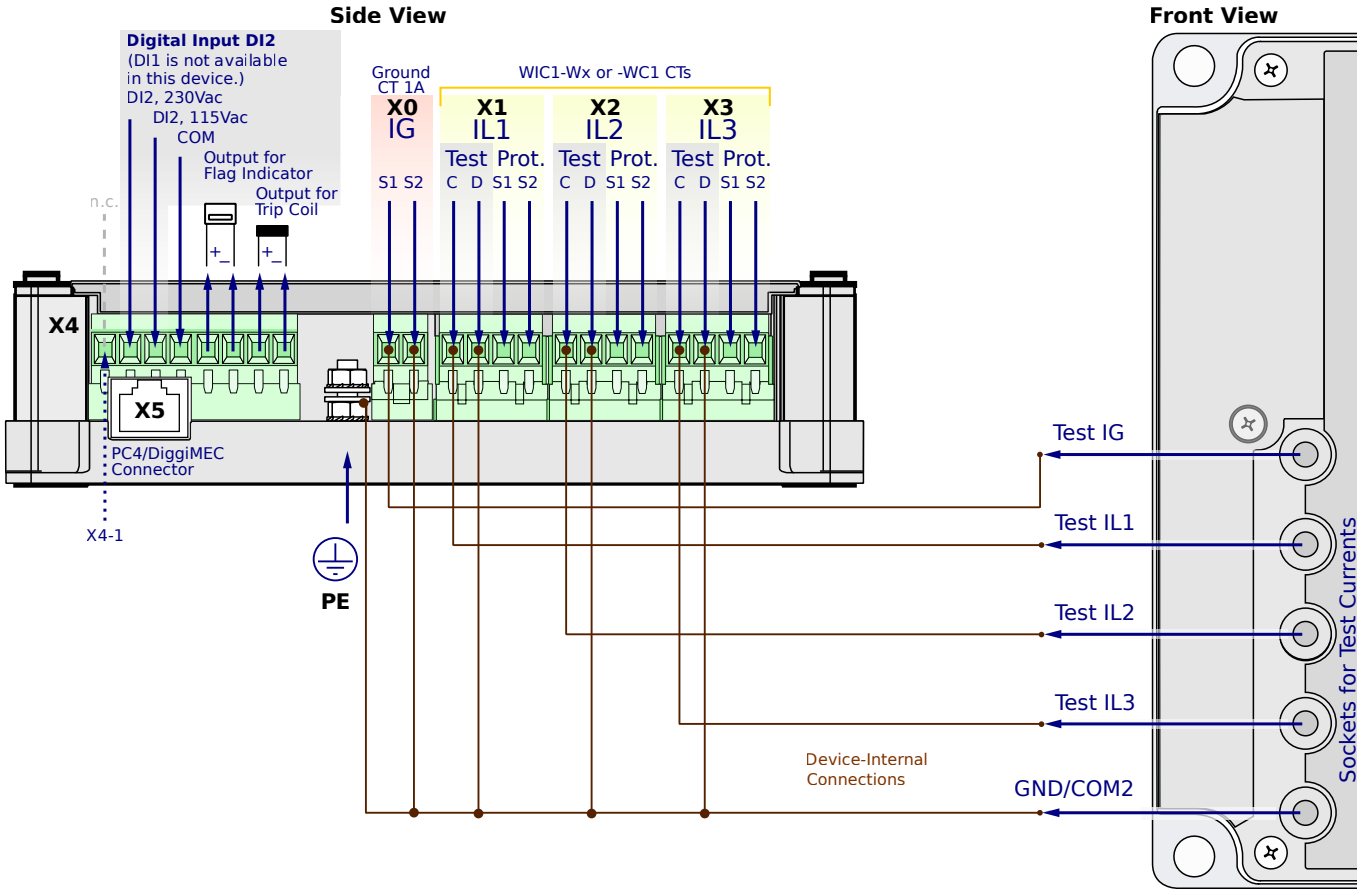


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2SA0

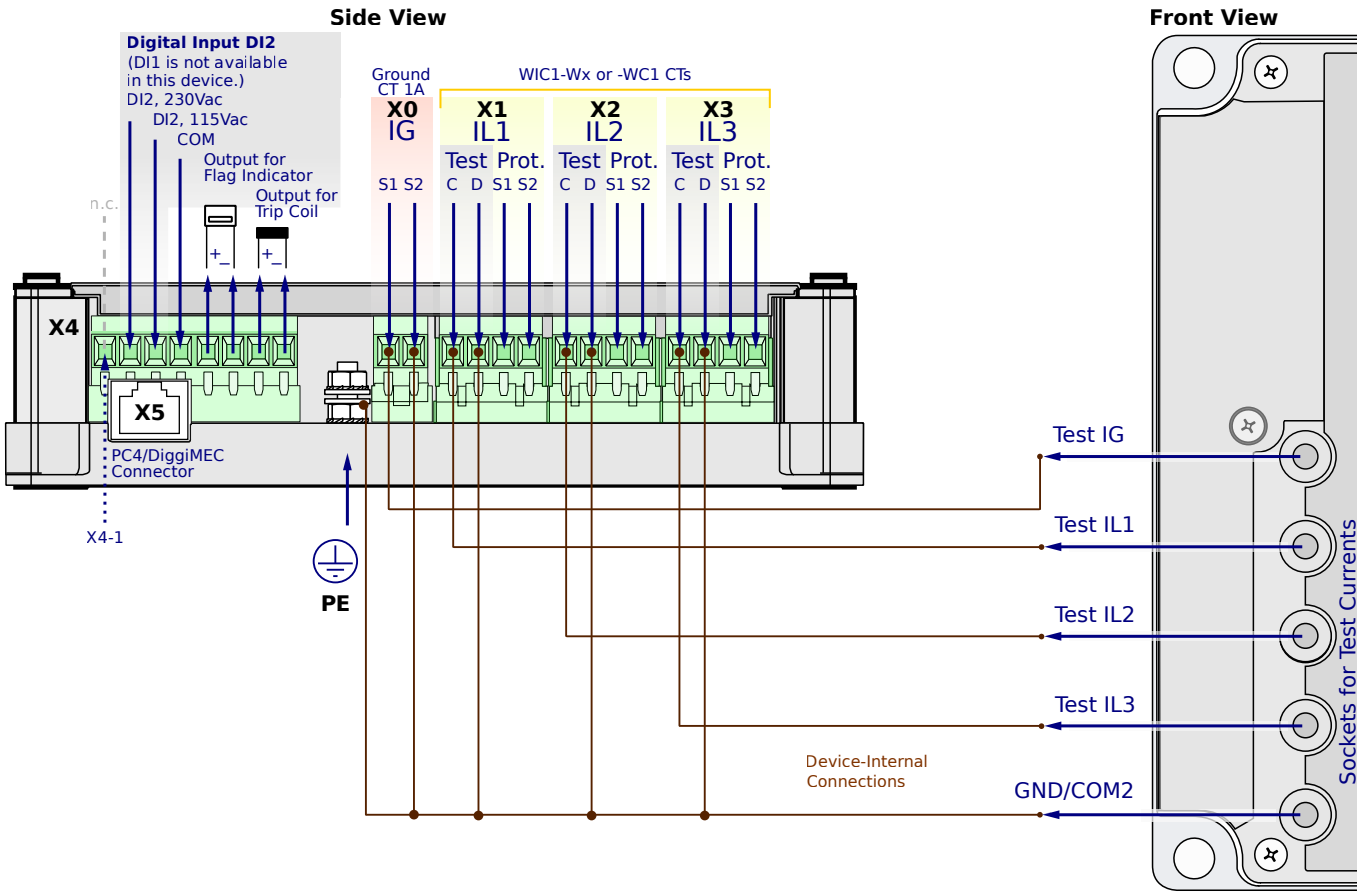


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2SAH

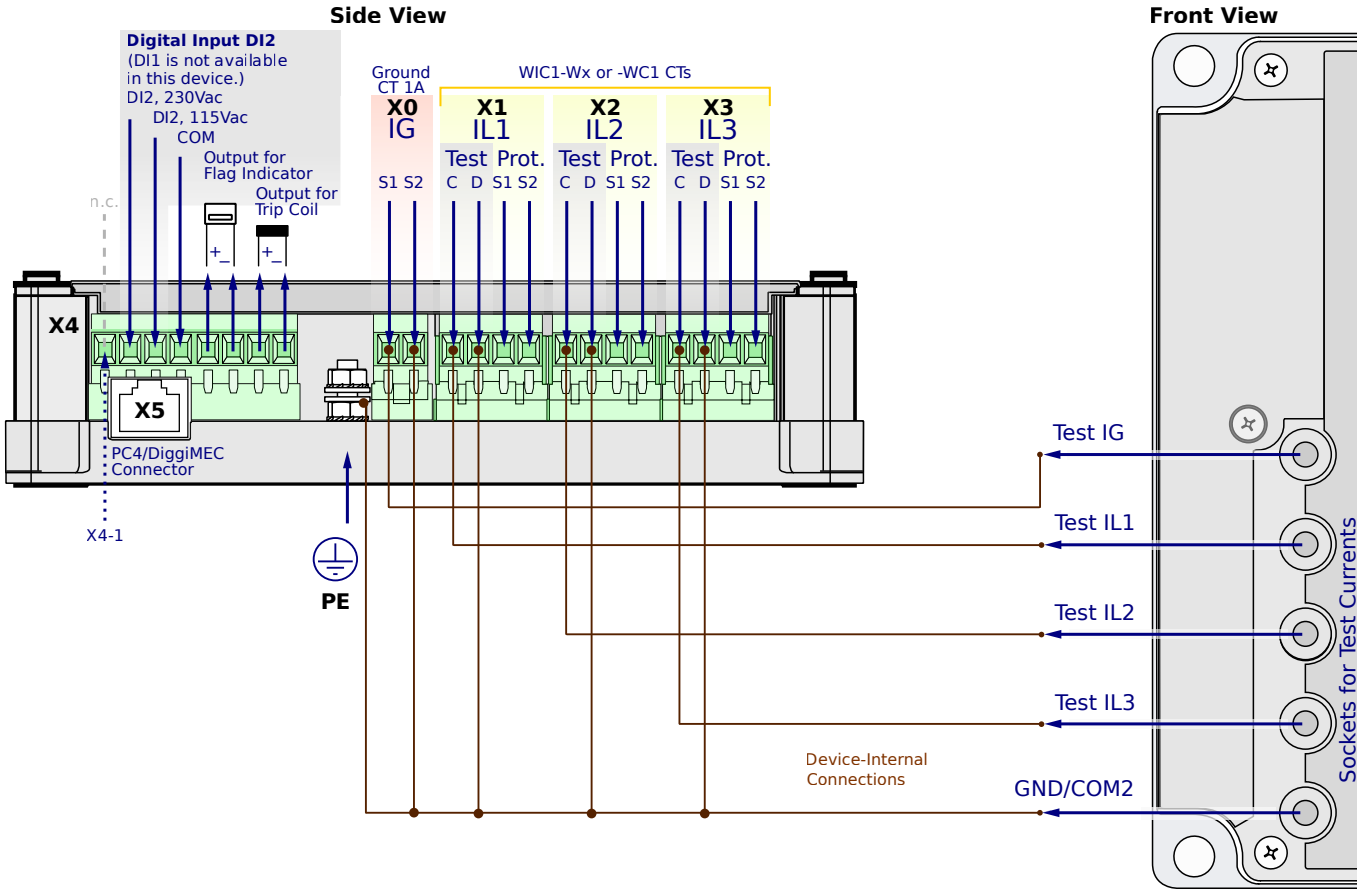


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2AA0

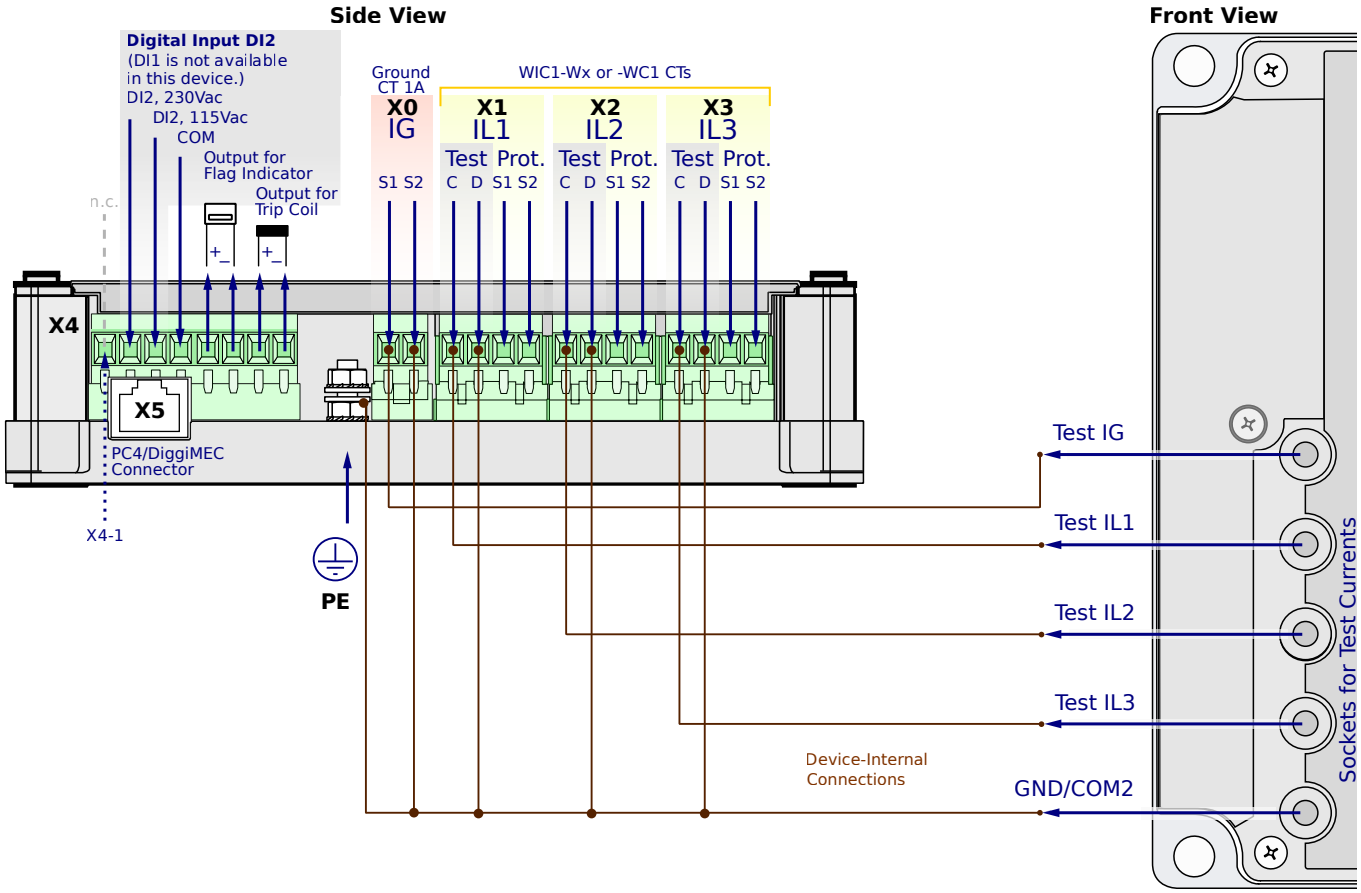


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2AAH

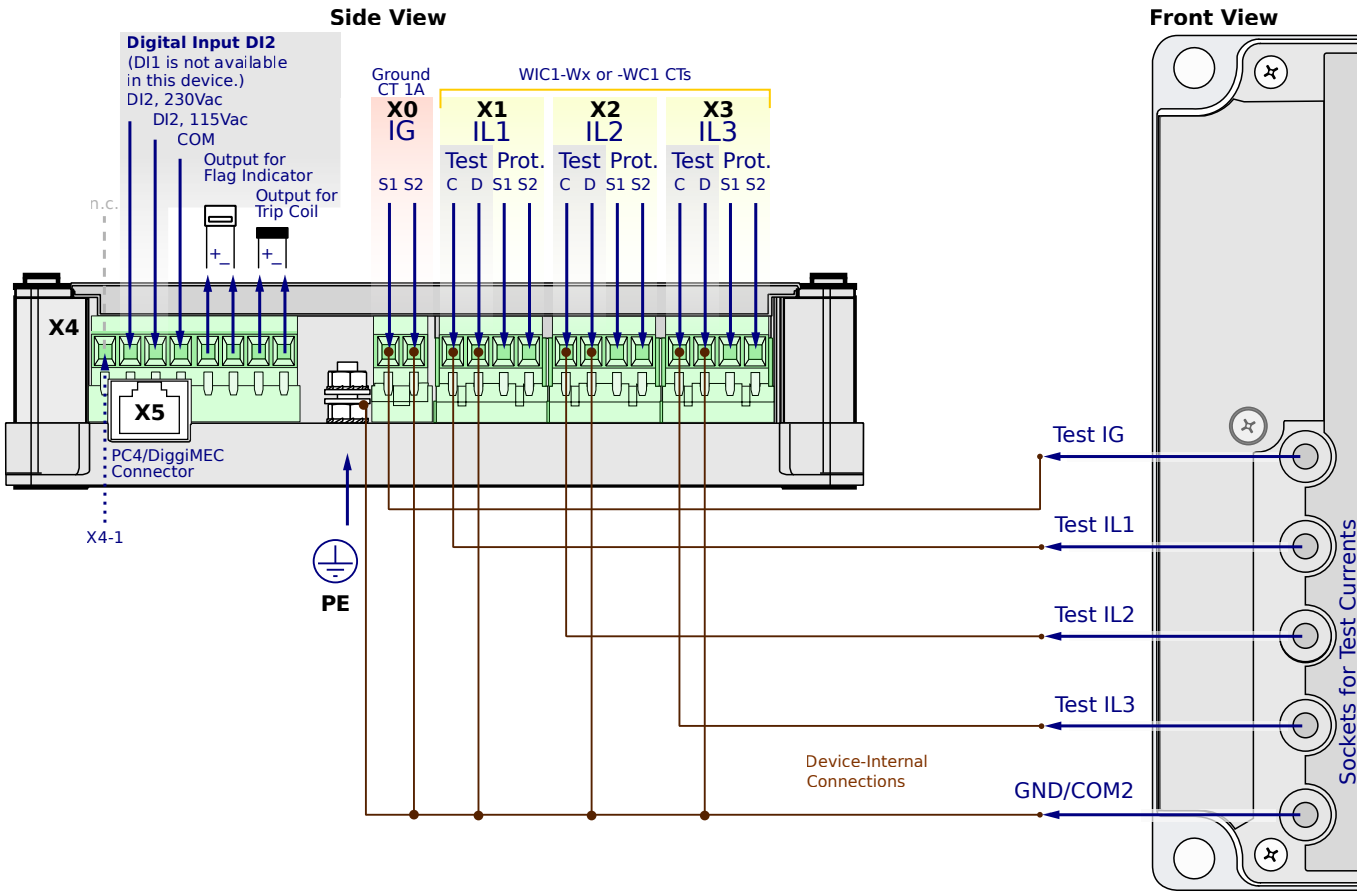


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2PA0

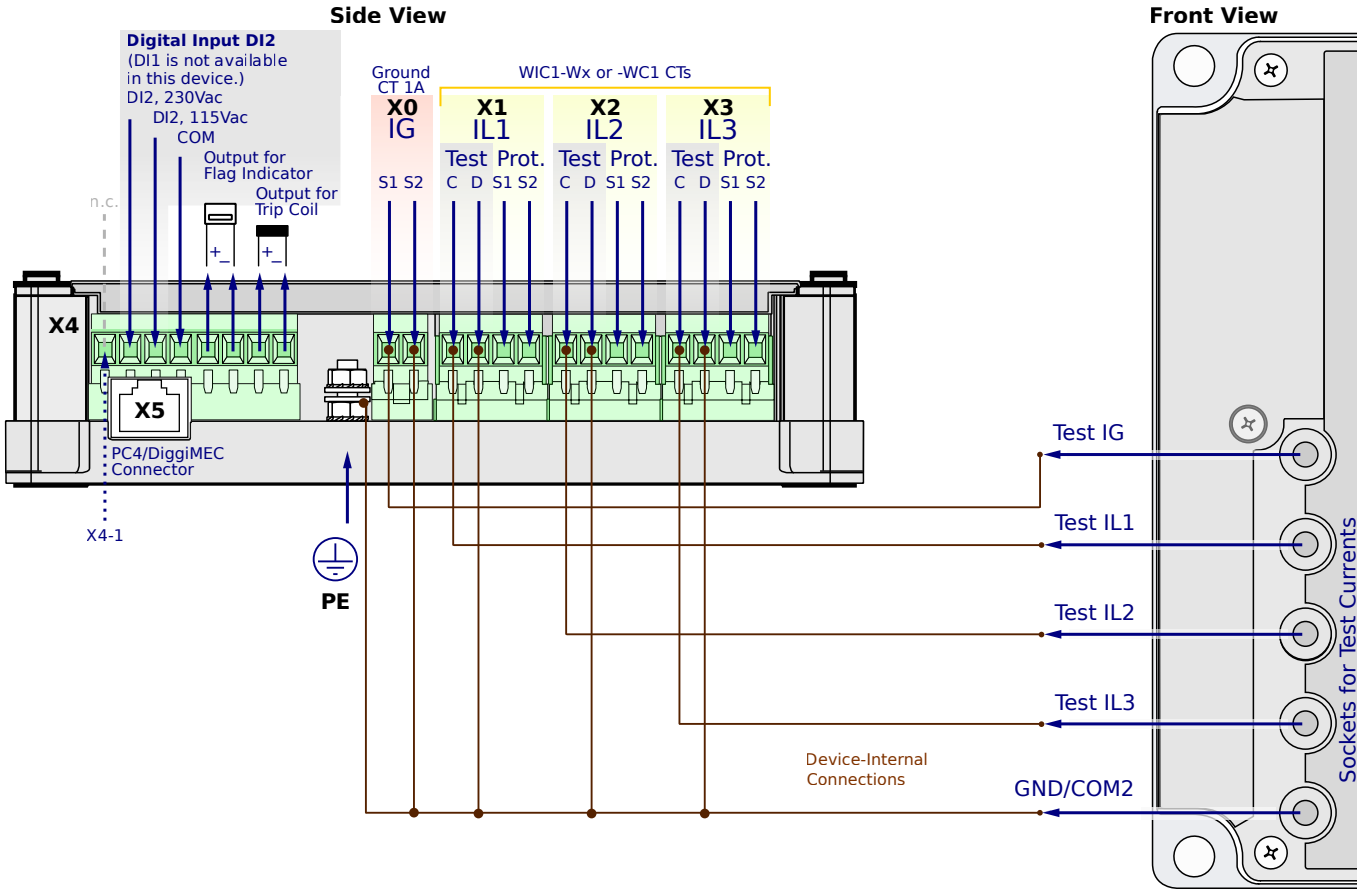


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5NC2PAH

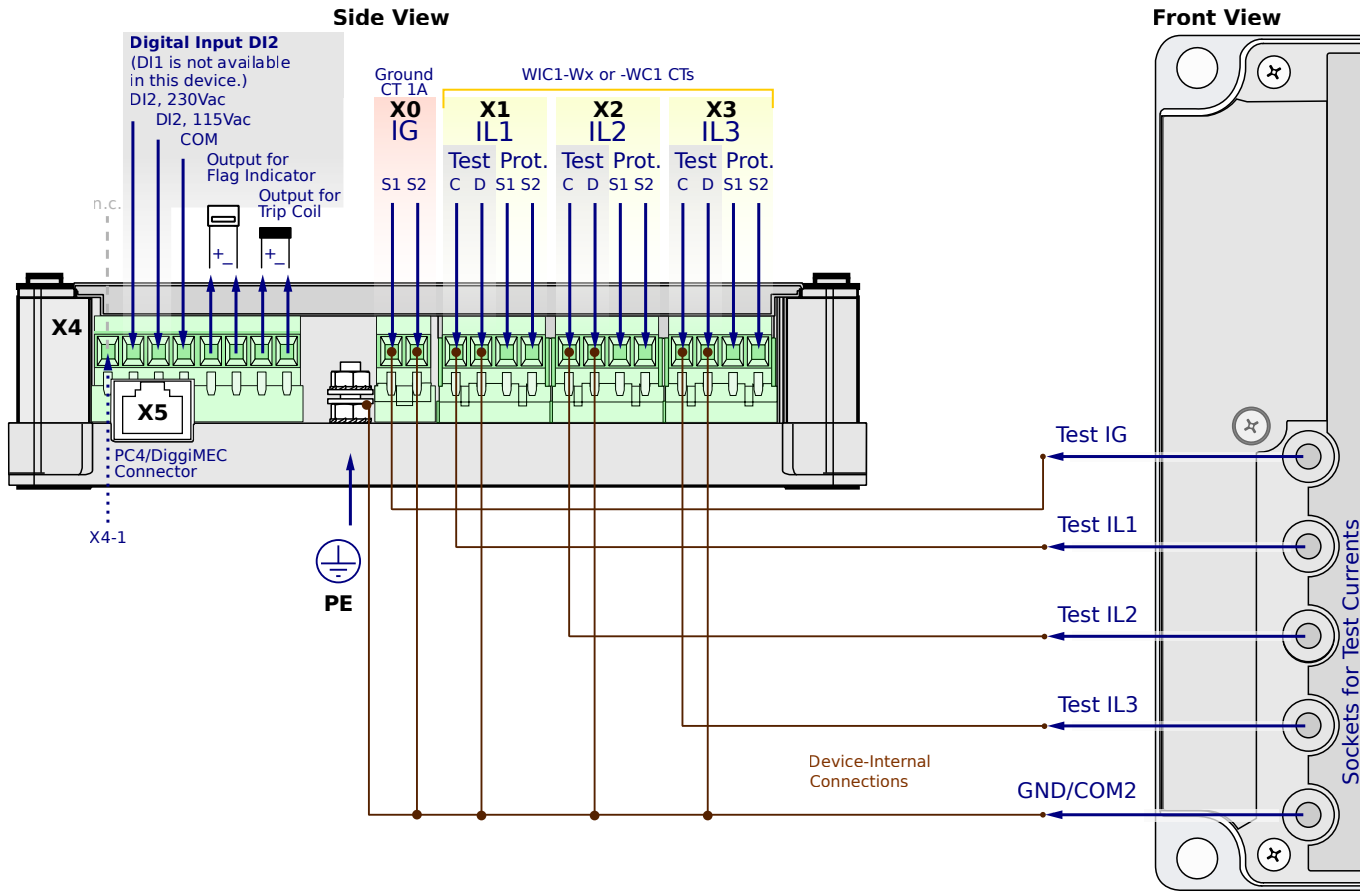


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1SA0

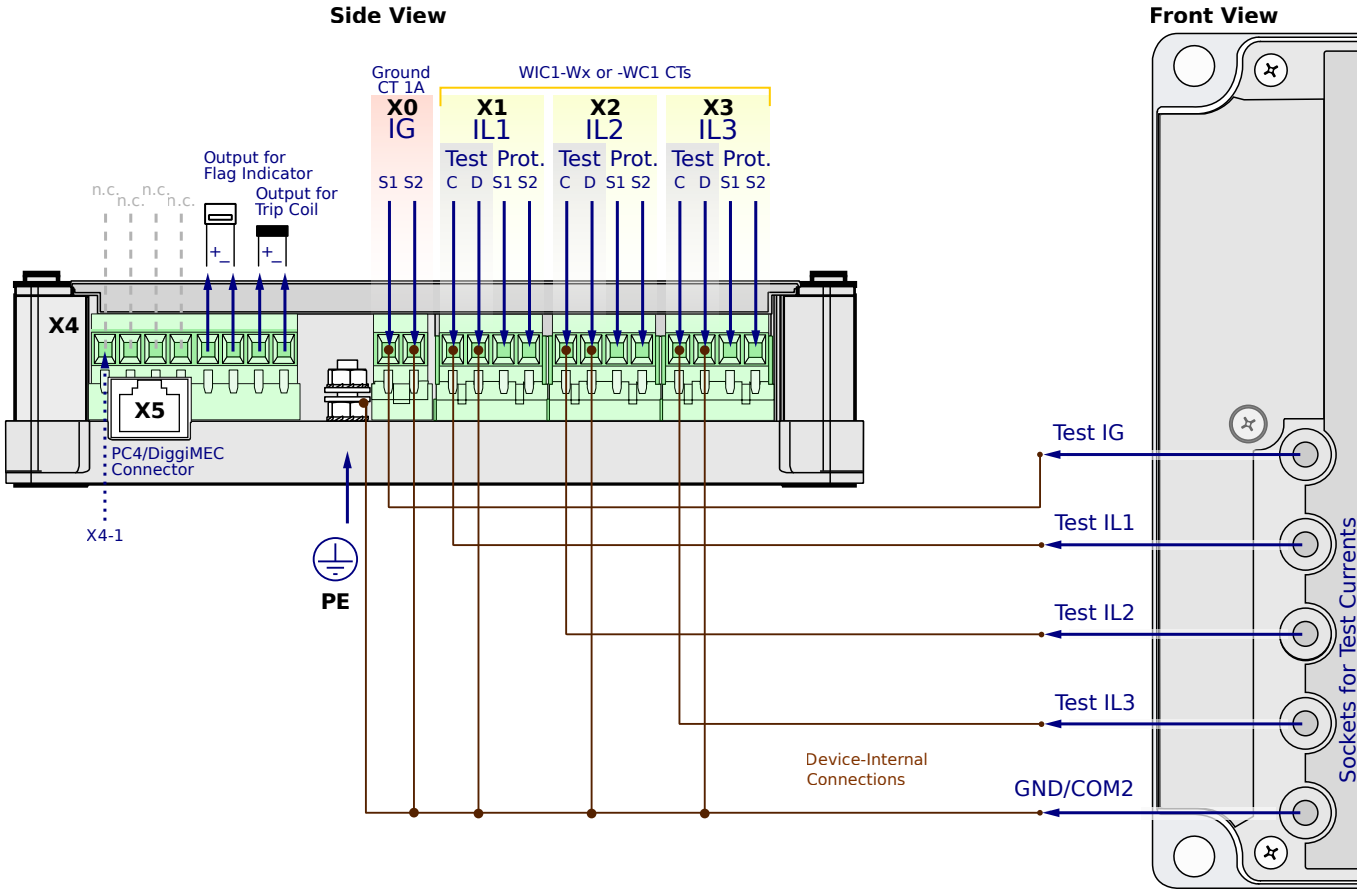


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1SAH

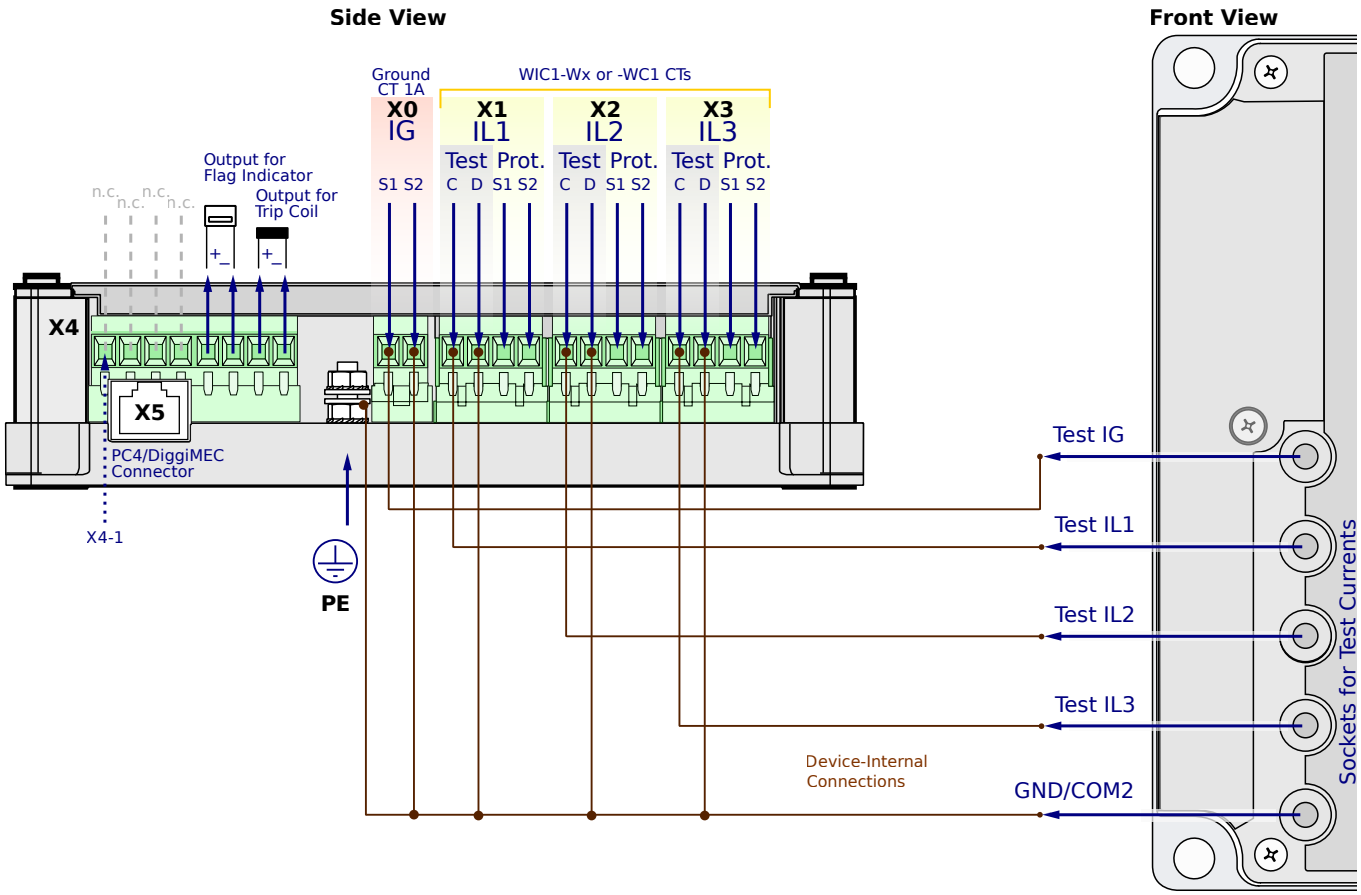


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1AA0

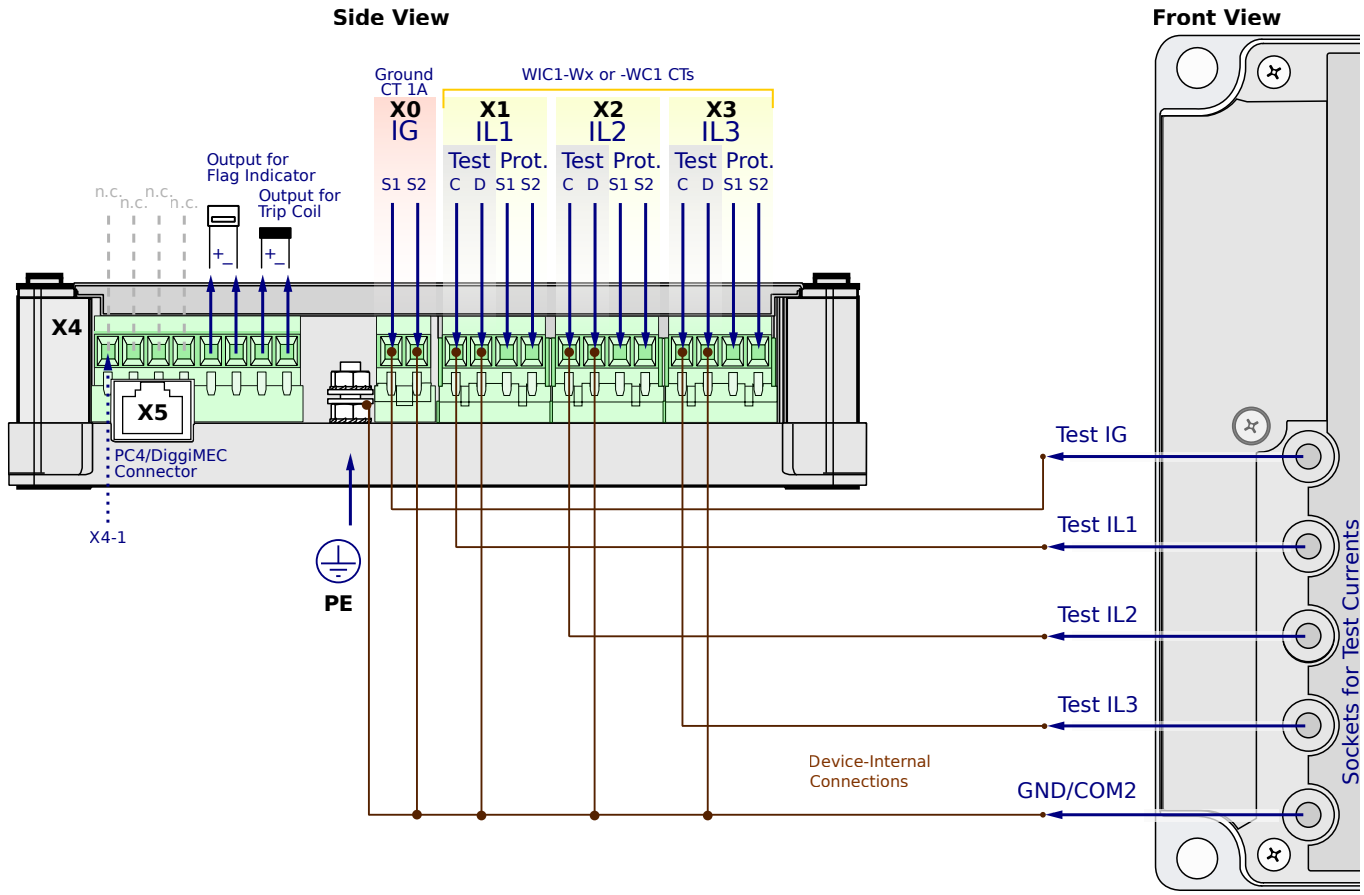


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1AAH

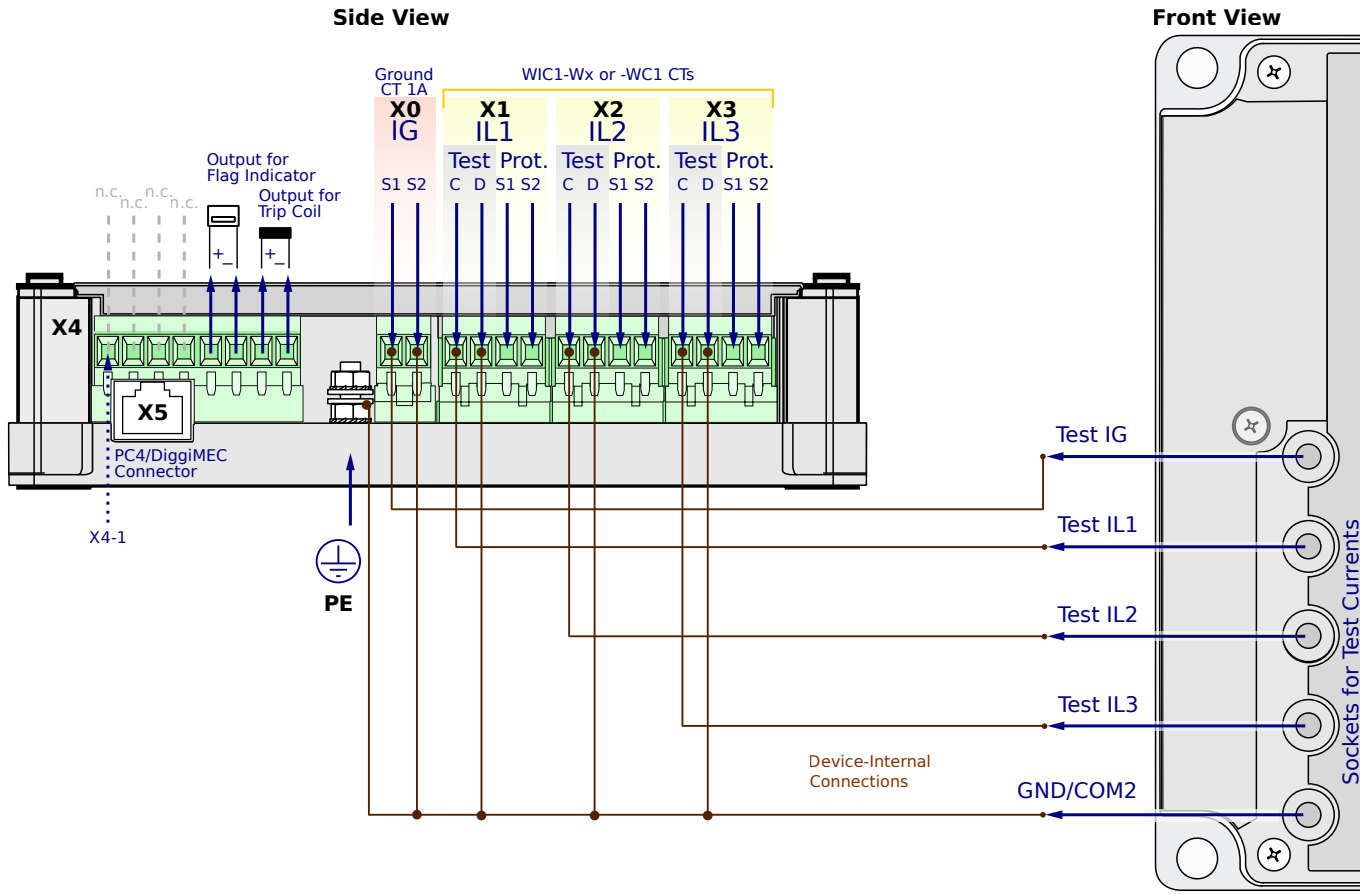


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1PA0

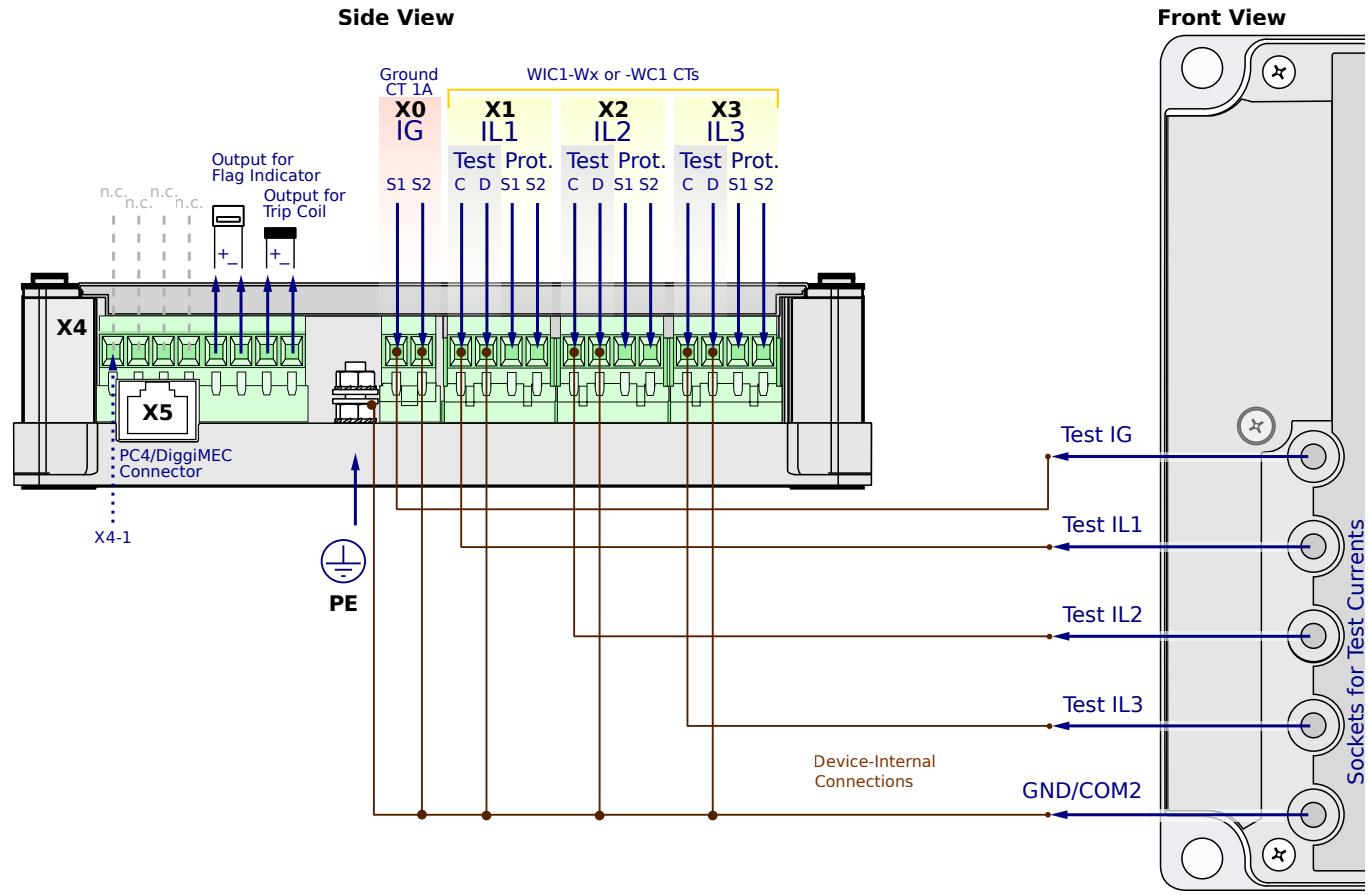


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN1PAH

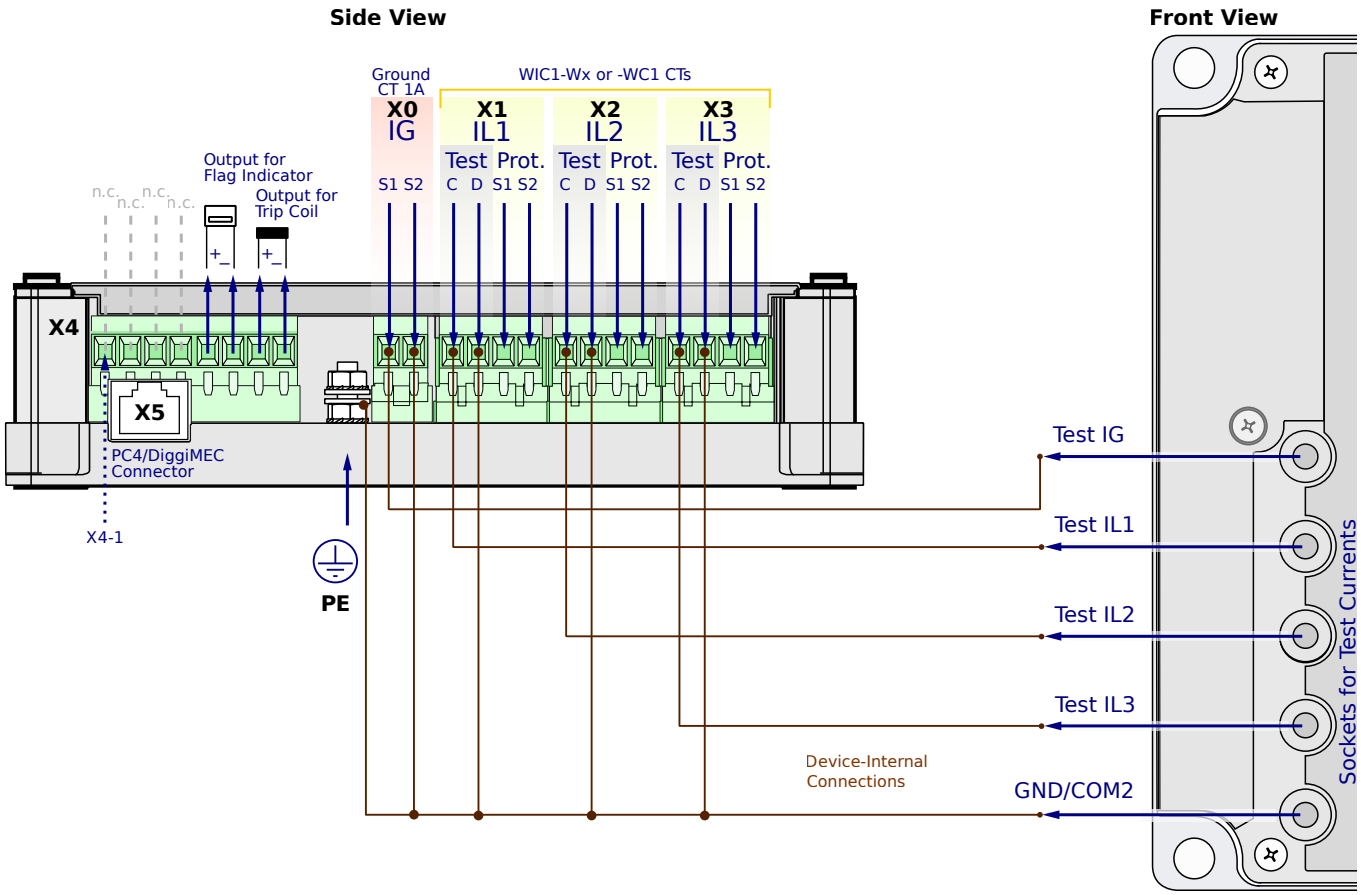


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2SA0

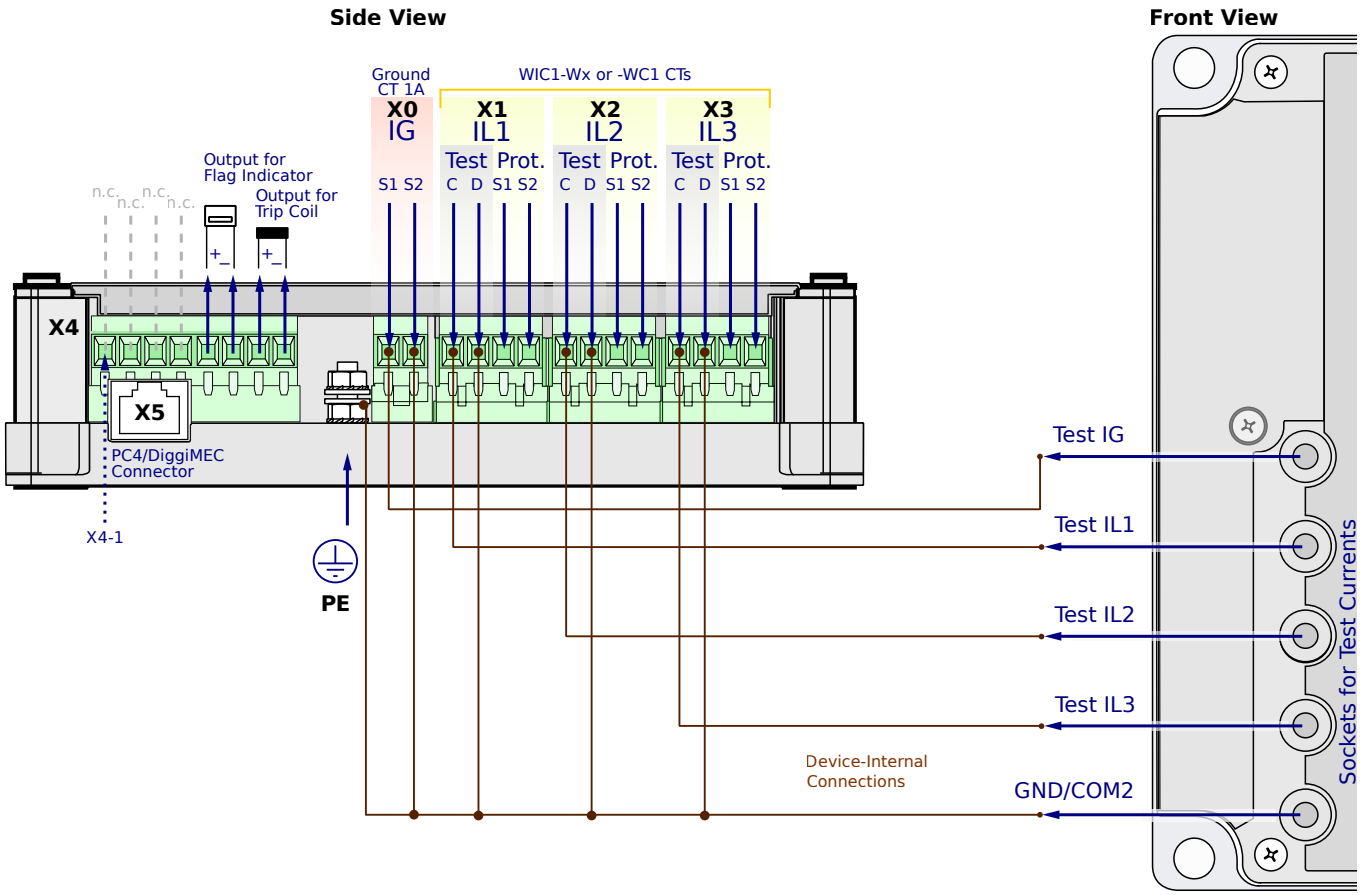


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2SAH

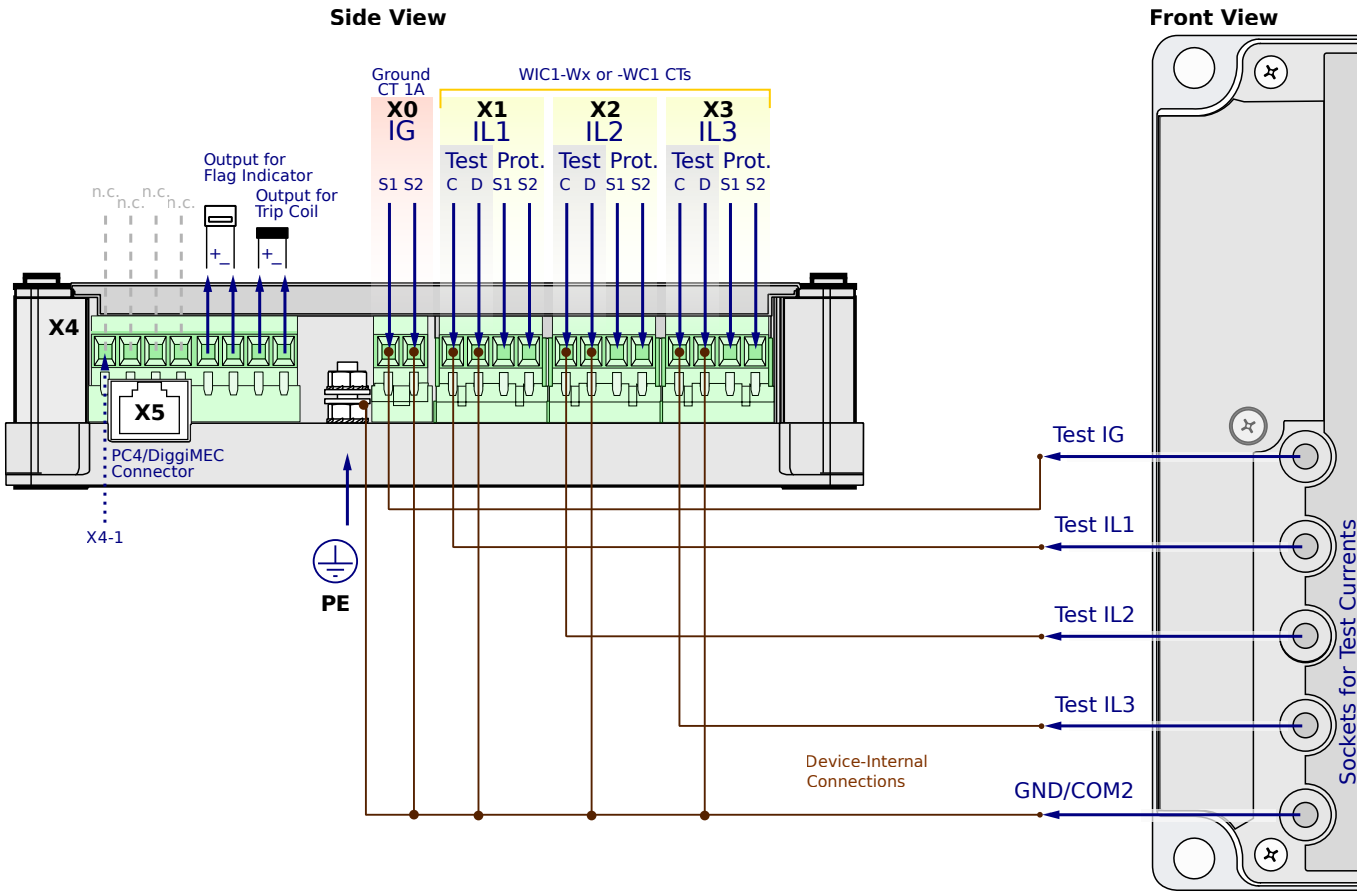


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2AA0

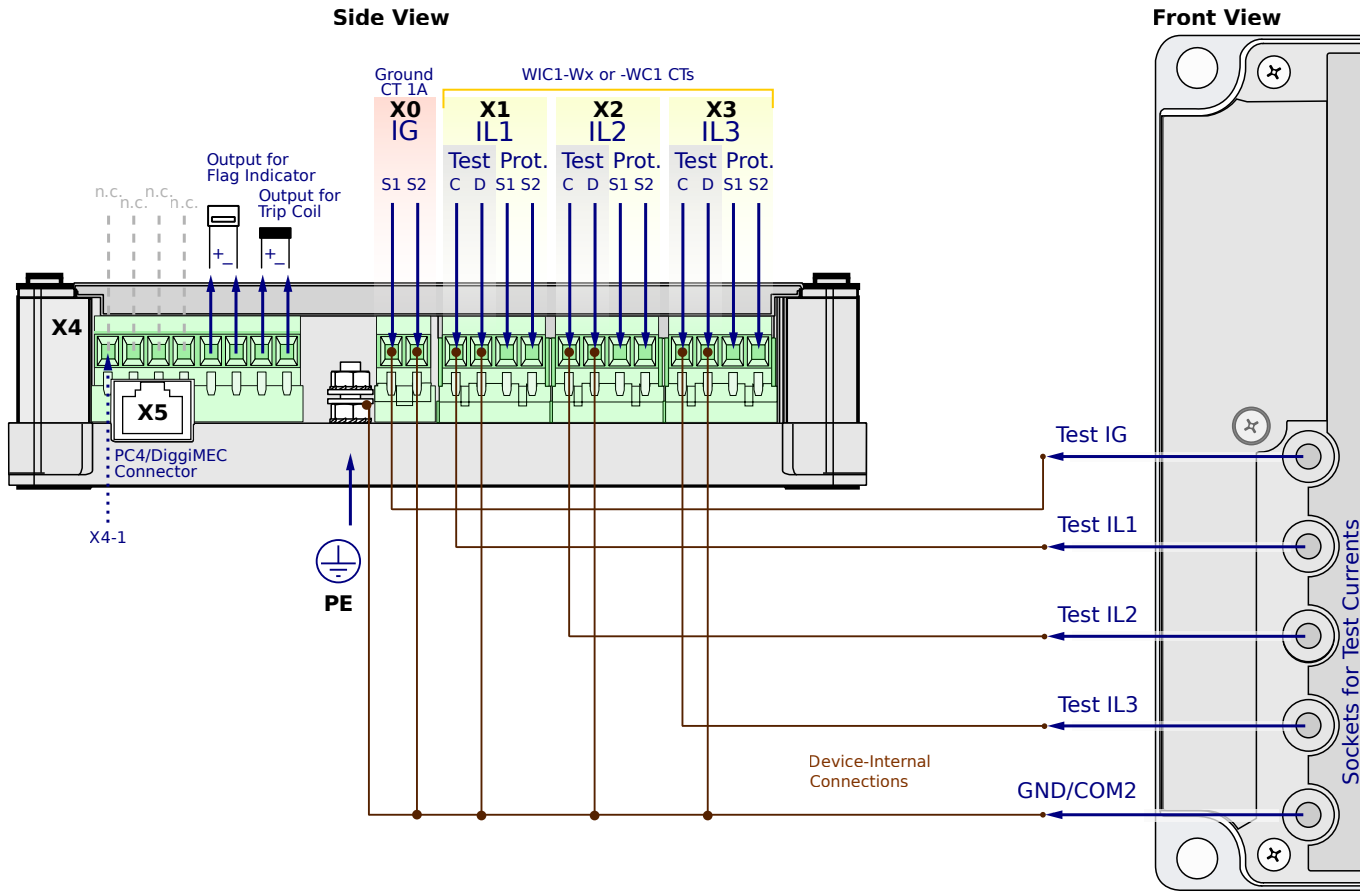


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2AAH

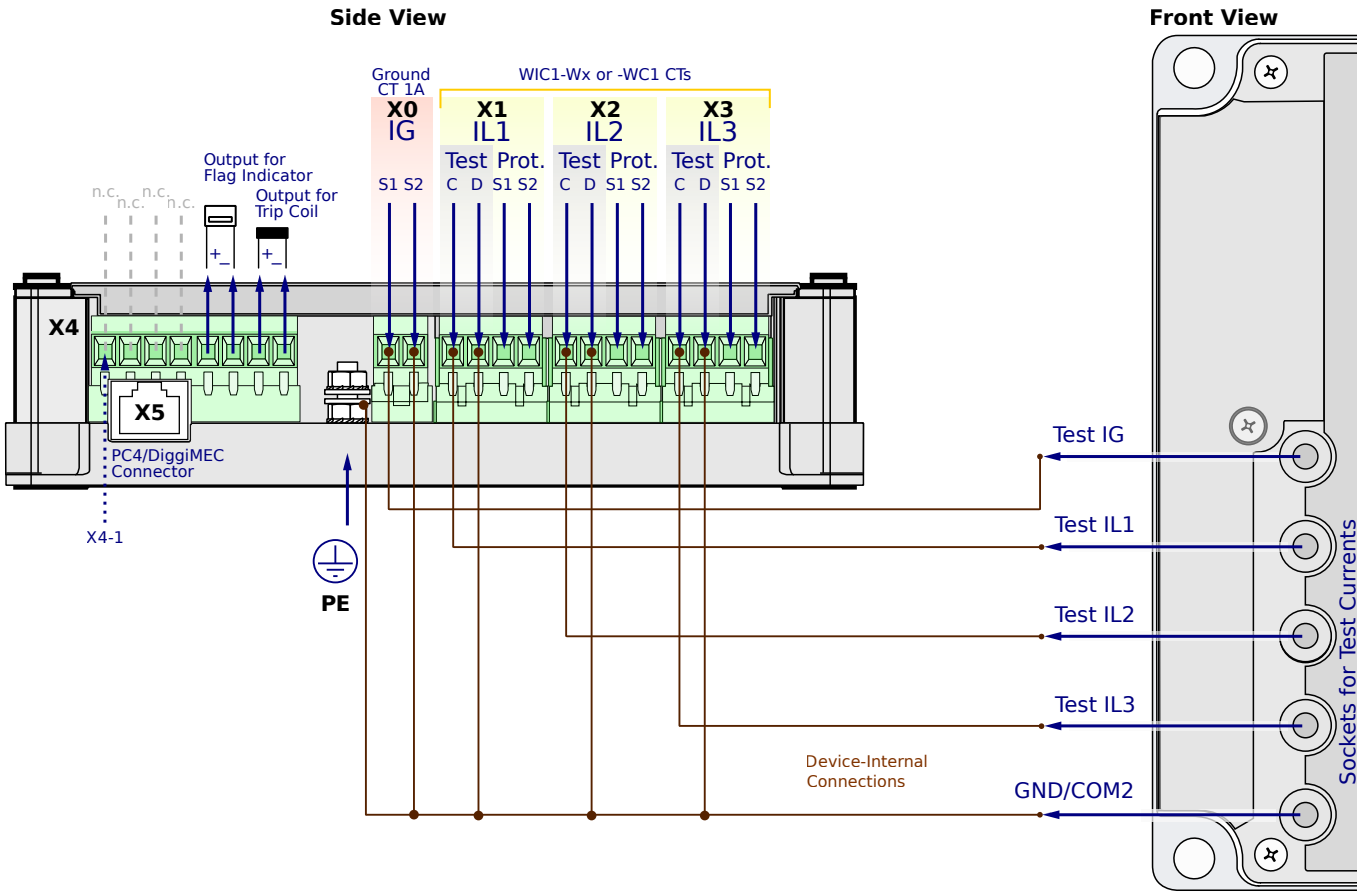


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2PA0

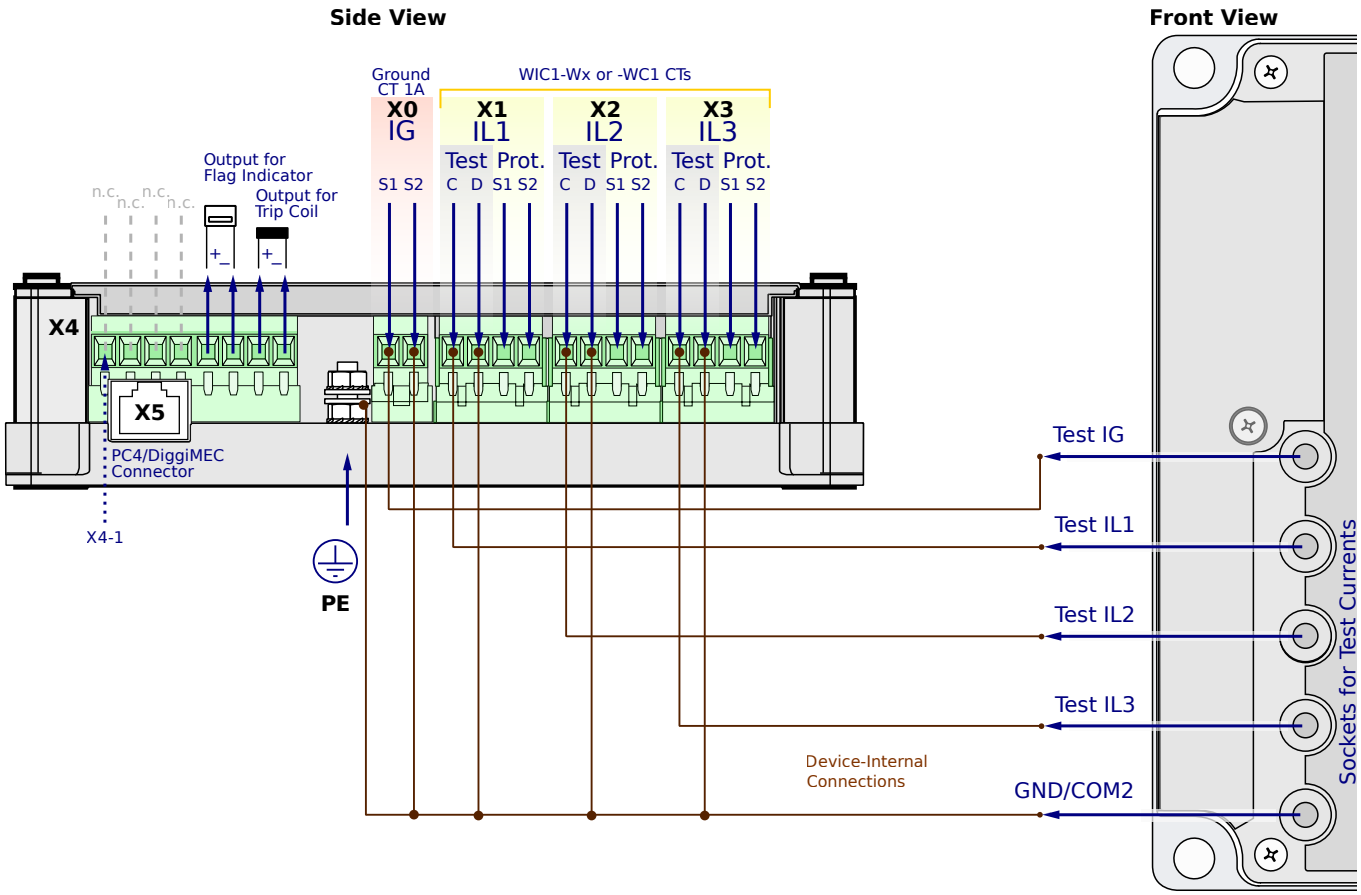


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FN2PAH

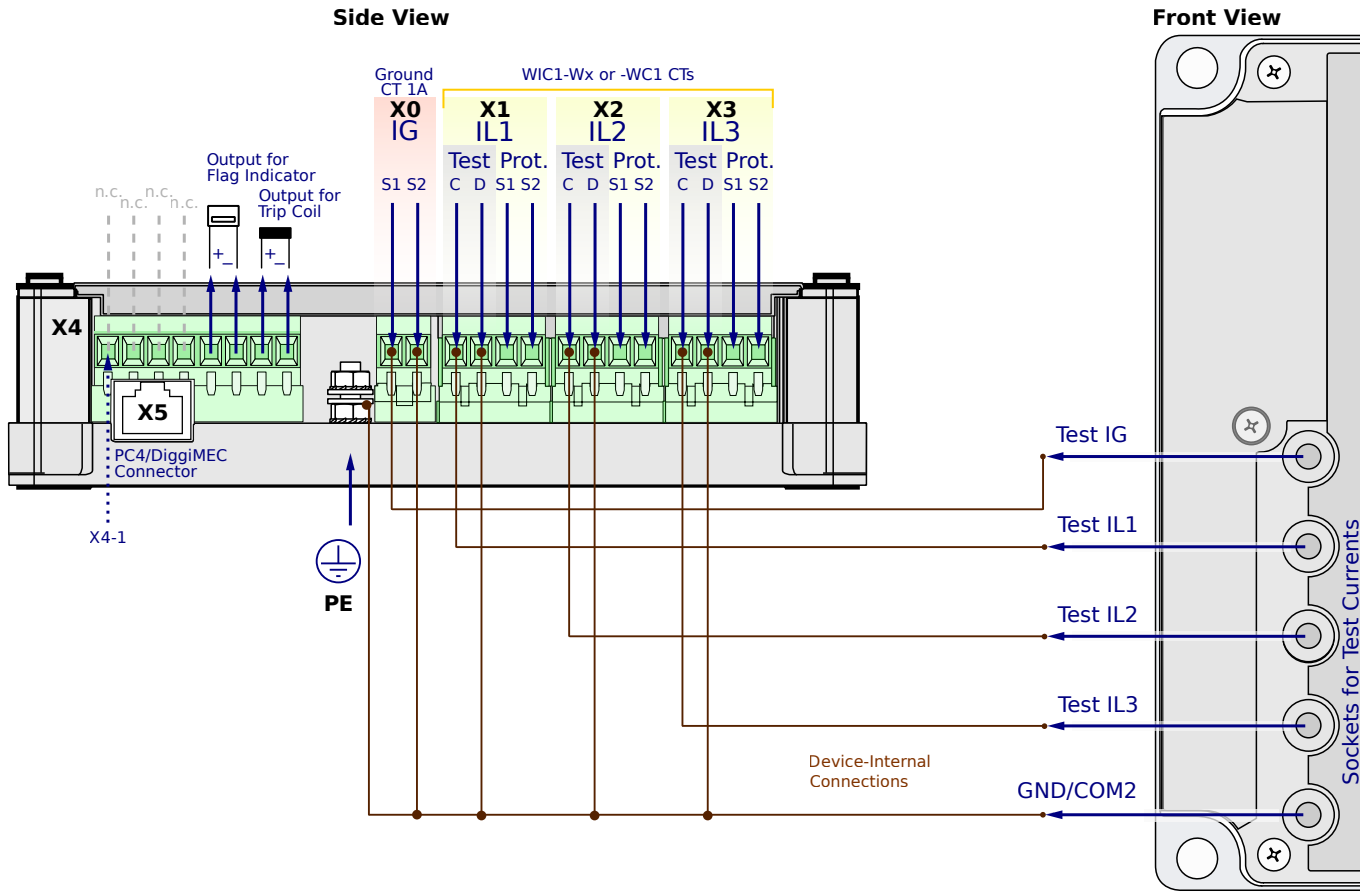


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1SA0

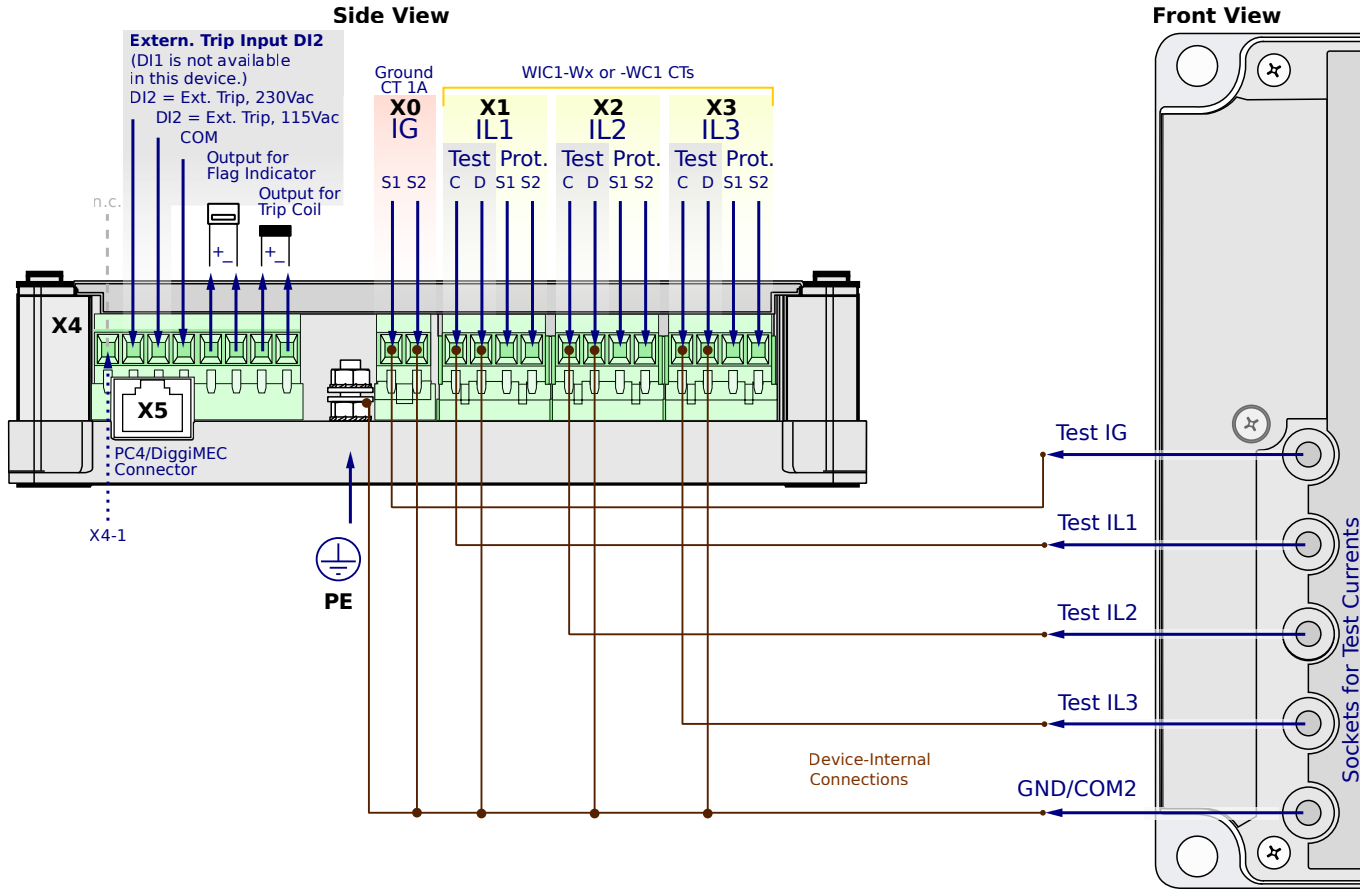


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1SAH

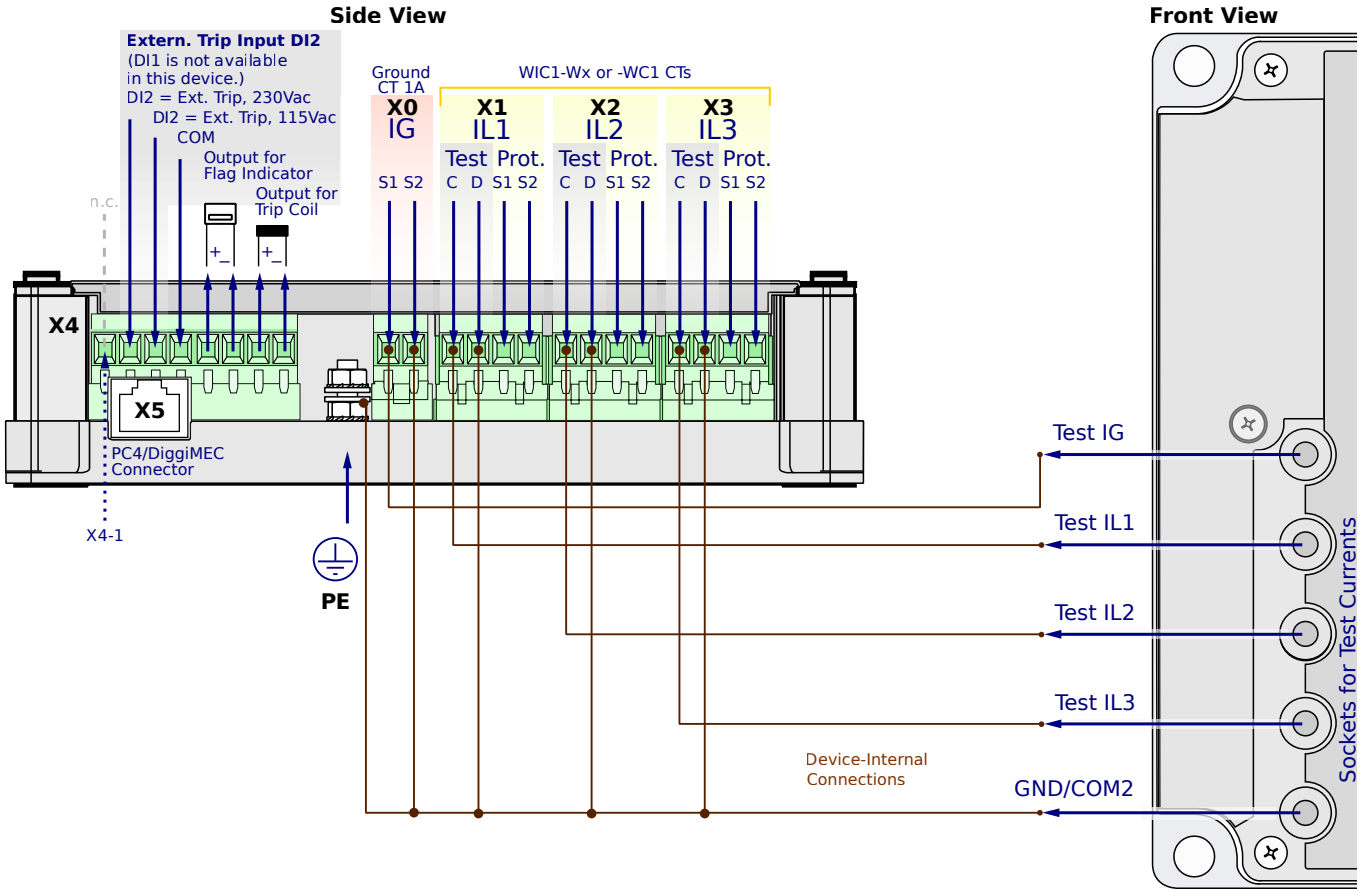


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1AA0

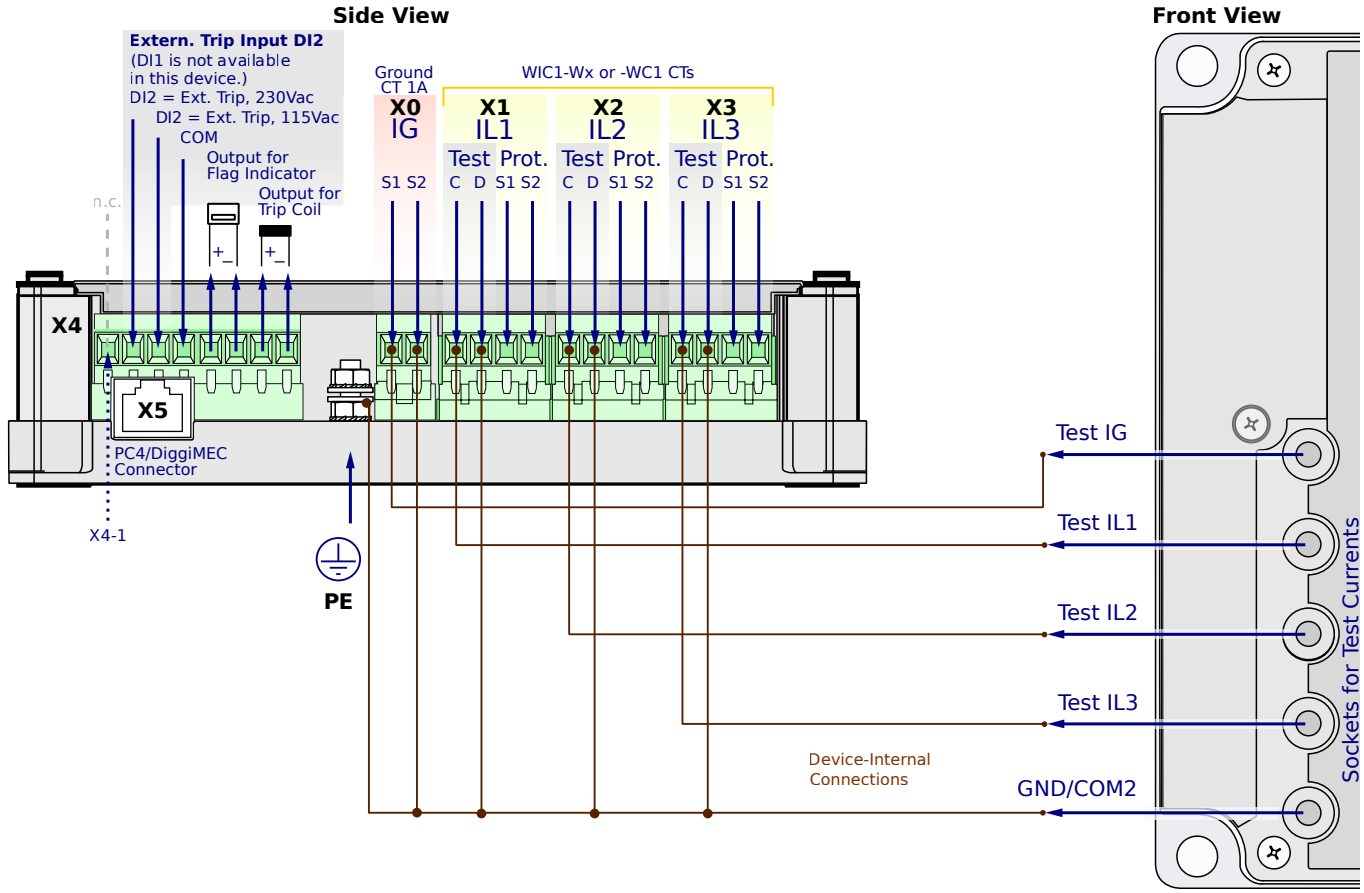


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1AAH

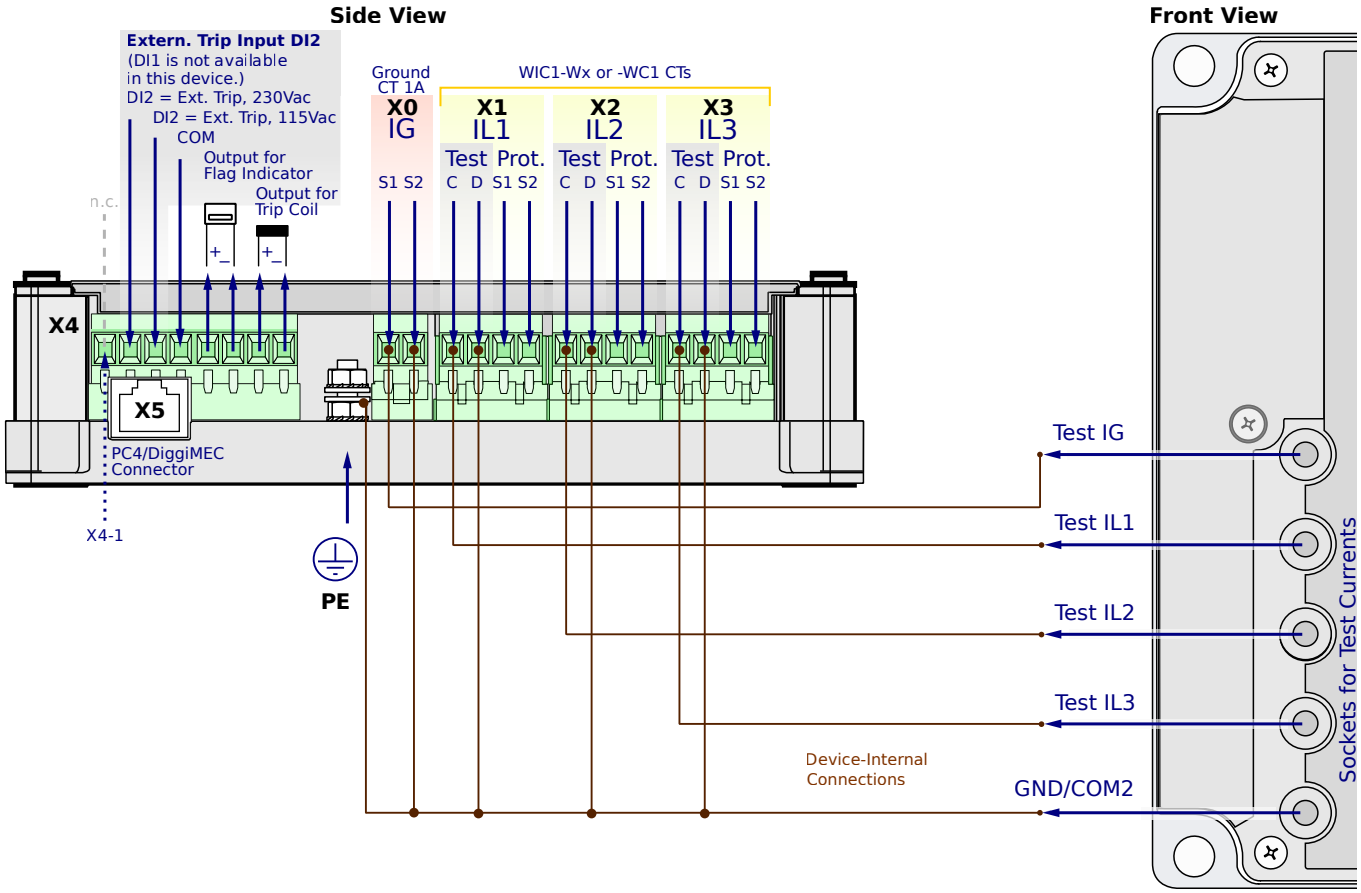


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1PA0

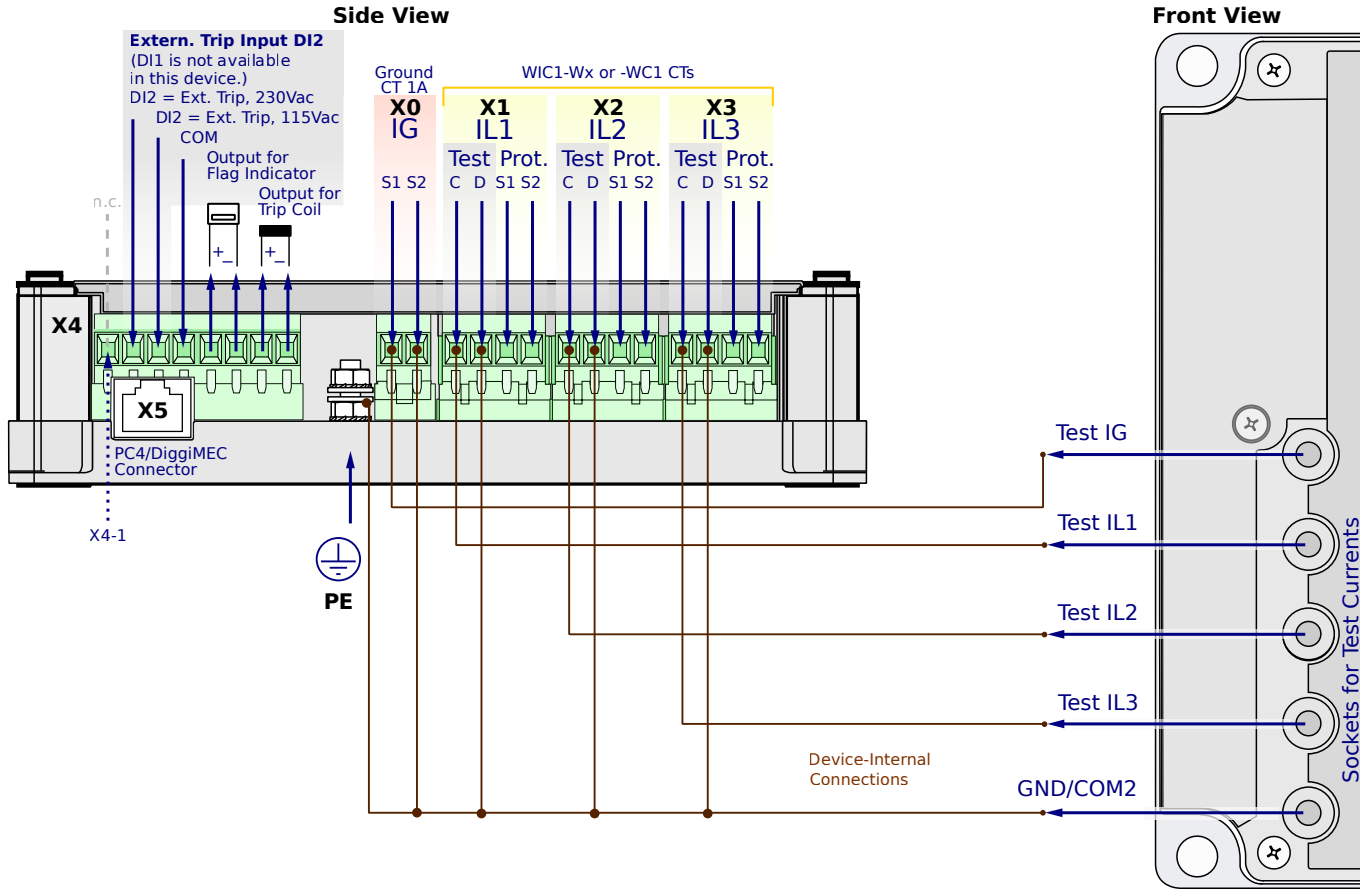


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF1PAH

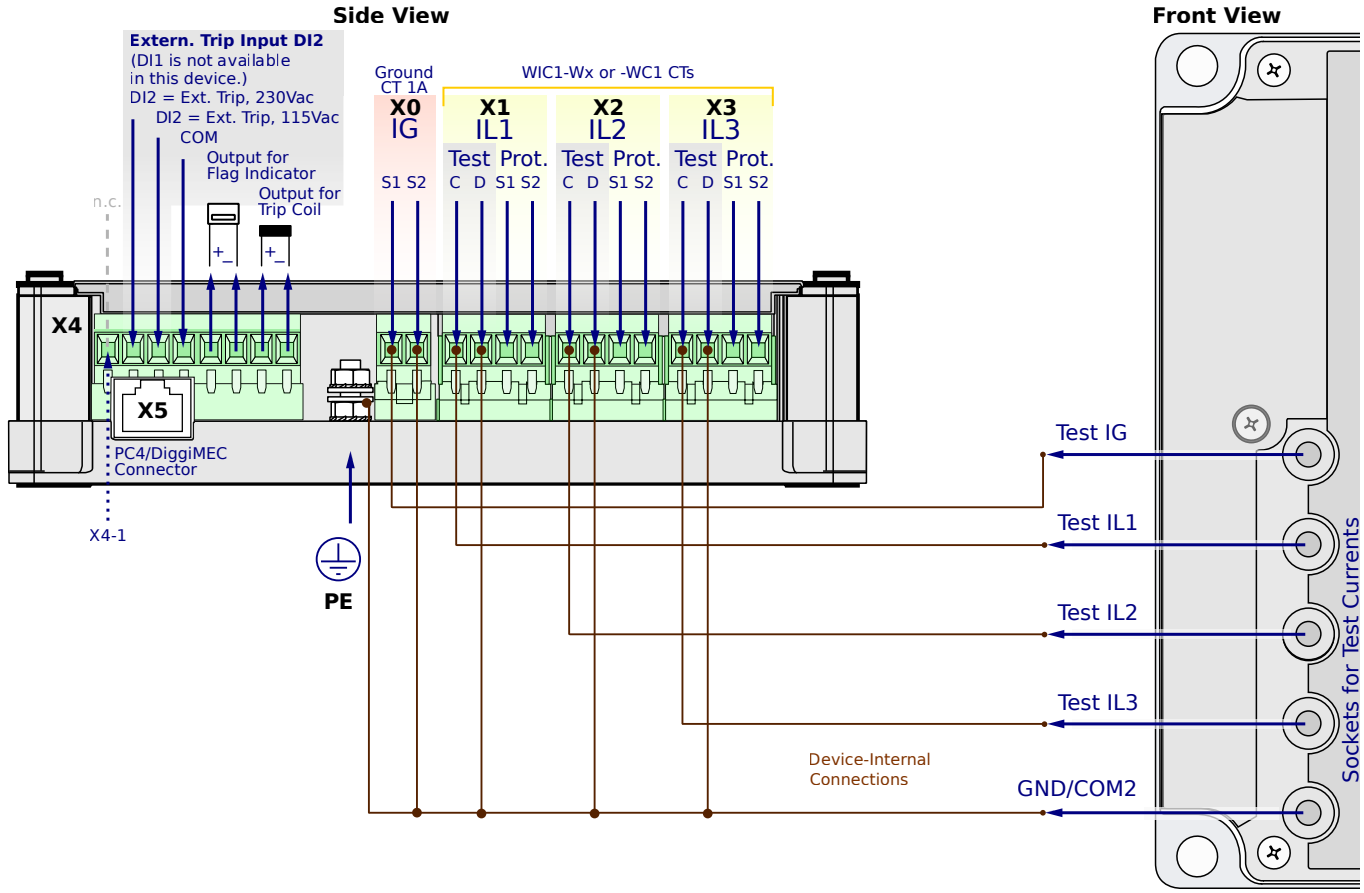


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2SA0

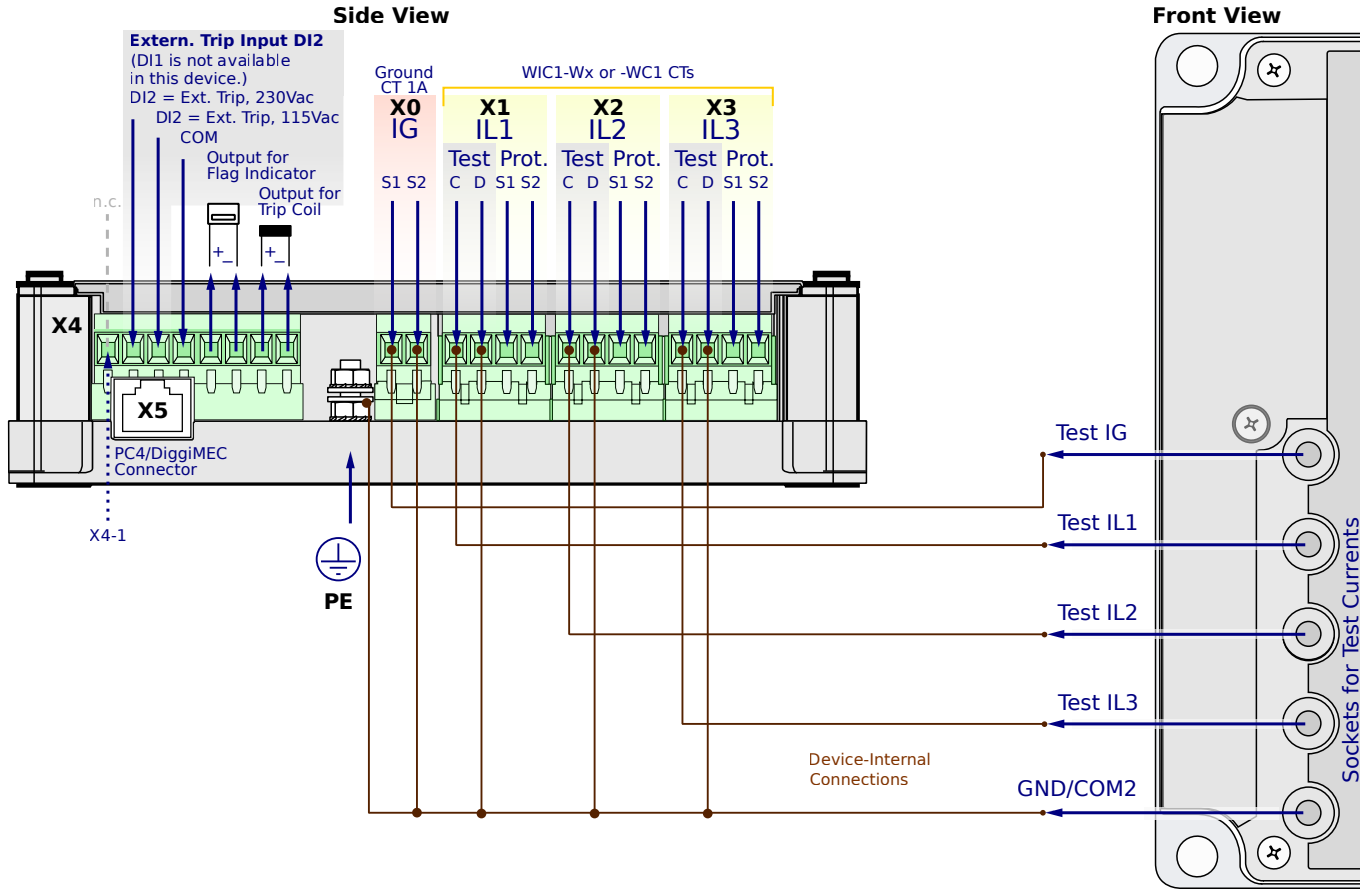


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2SAH

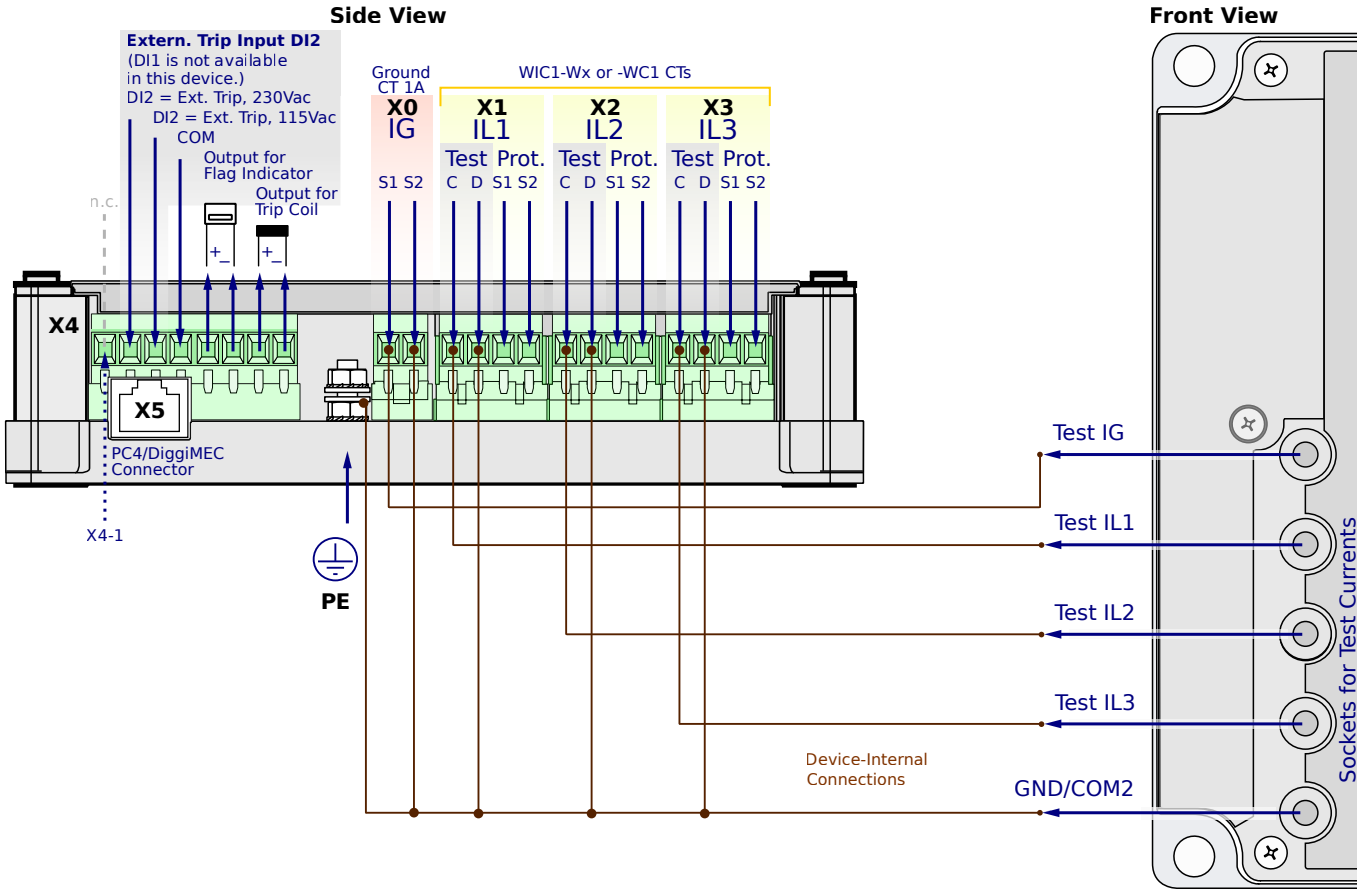


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2AA0

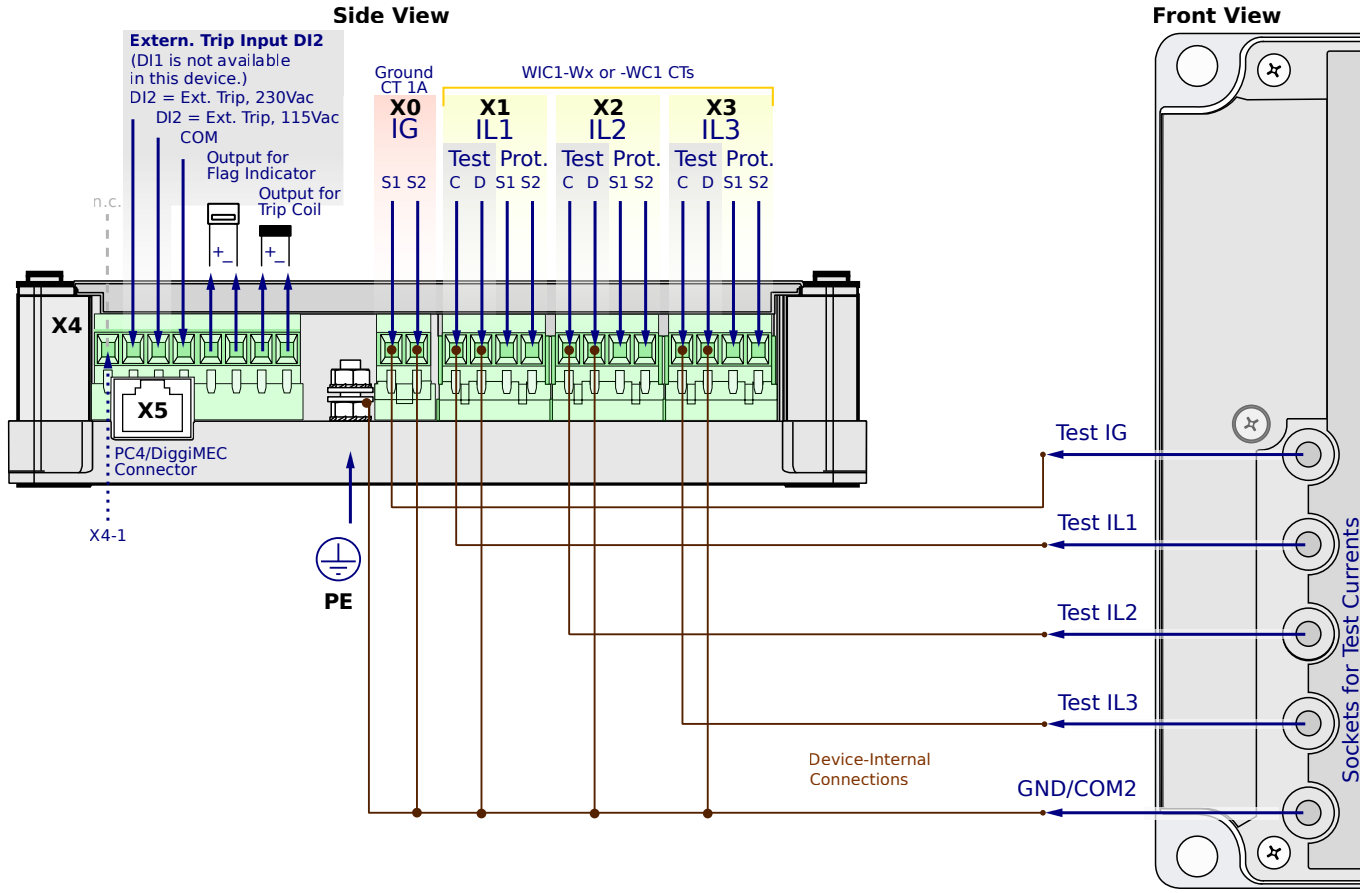


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2AAH

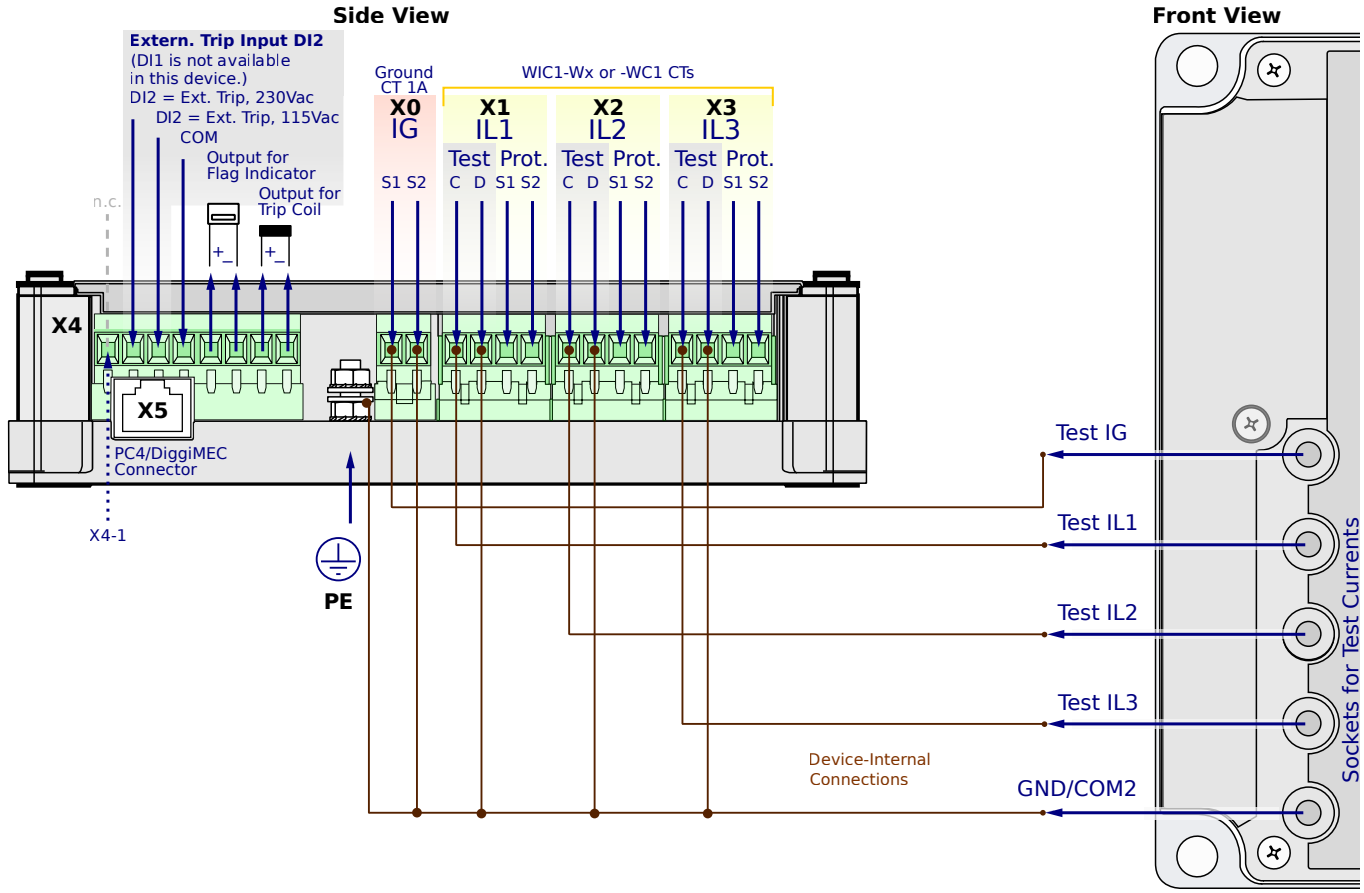


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2PA0

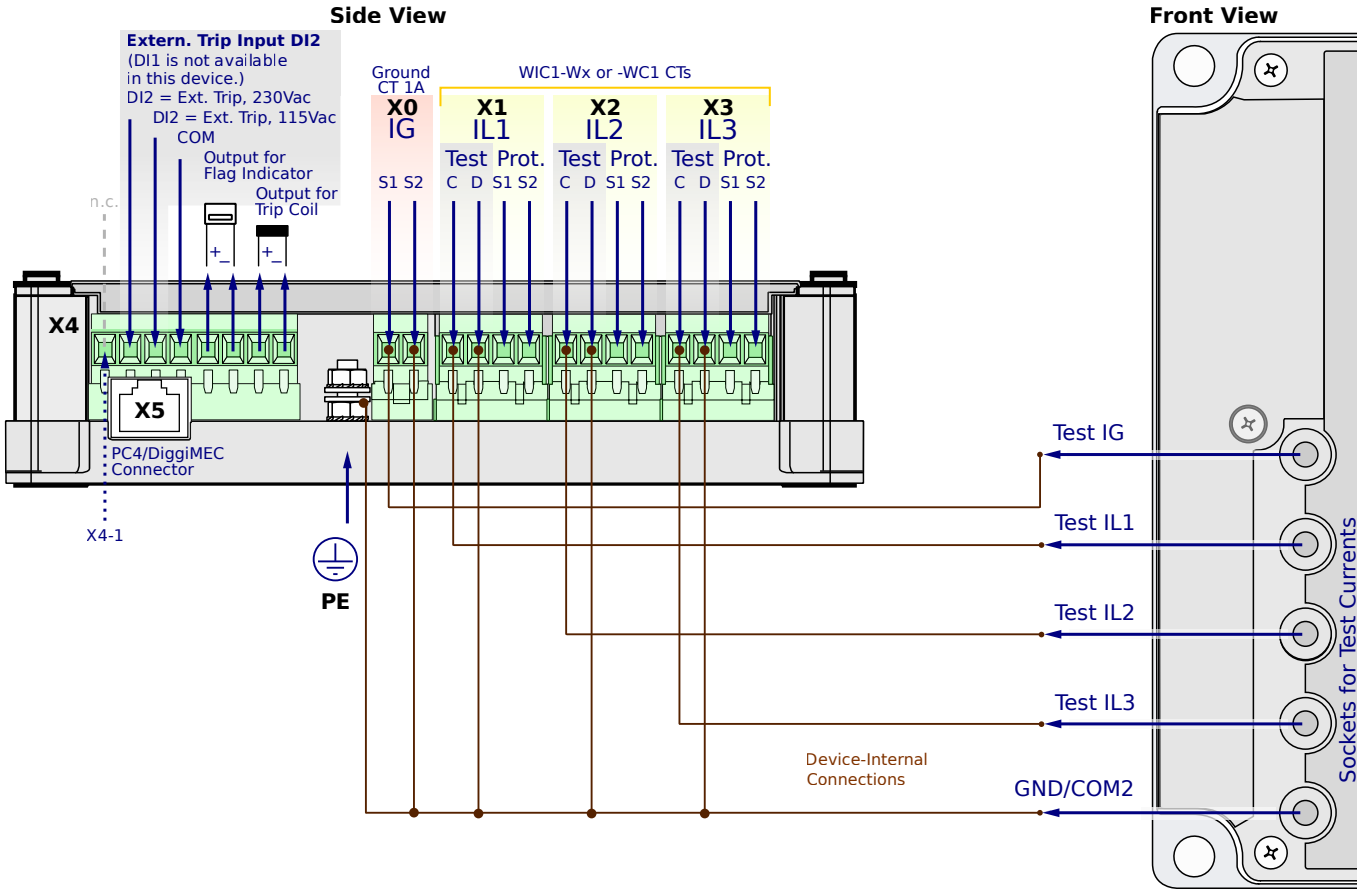


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FF2PAH

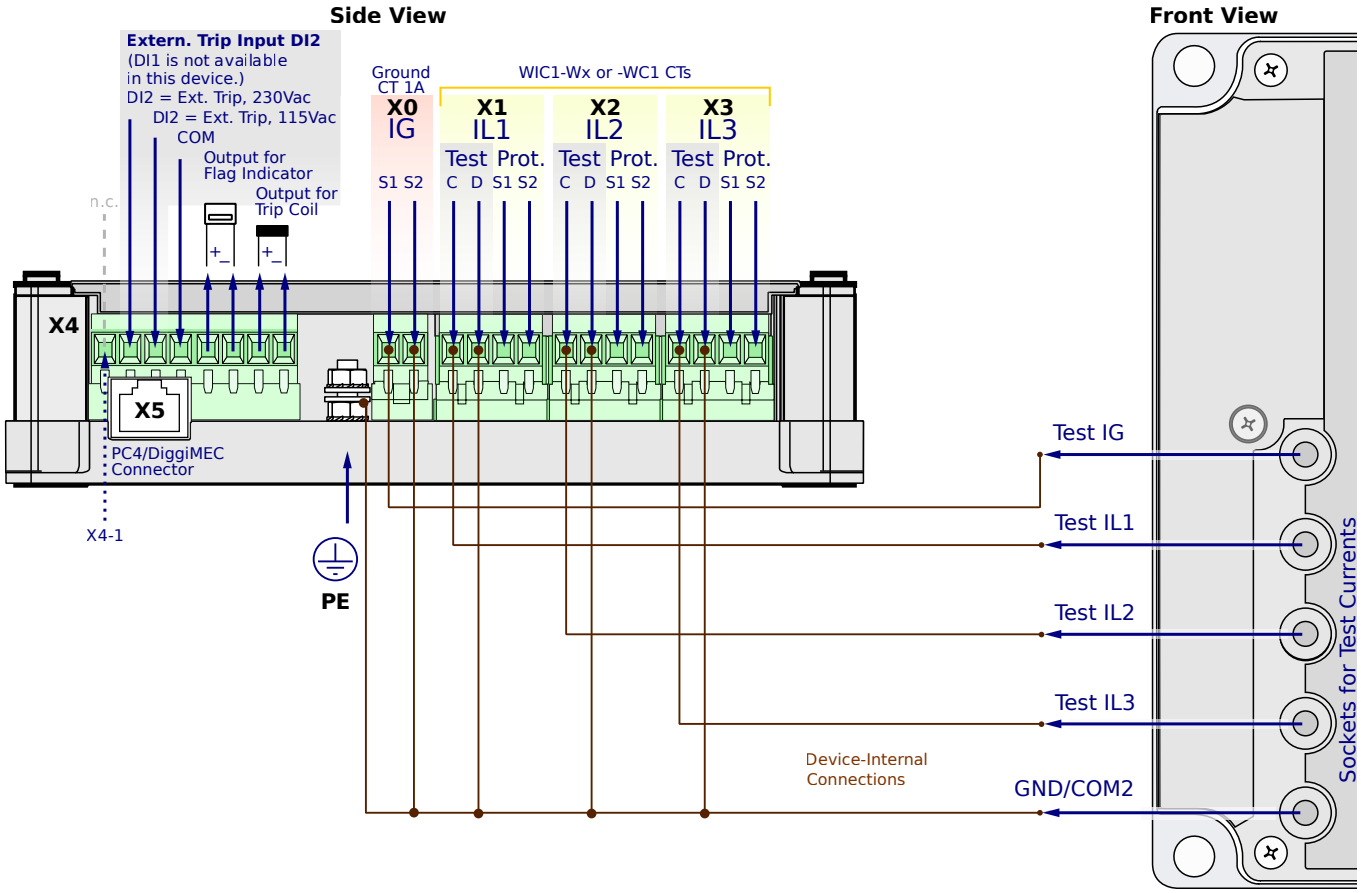


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1SA0

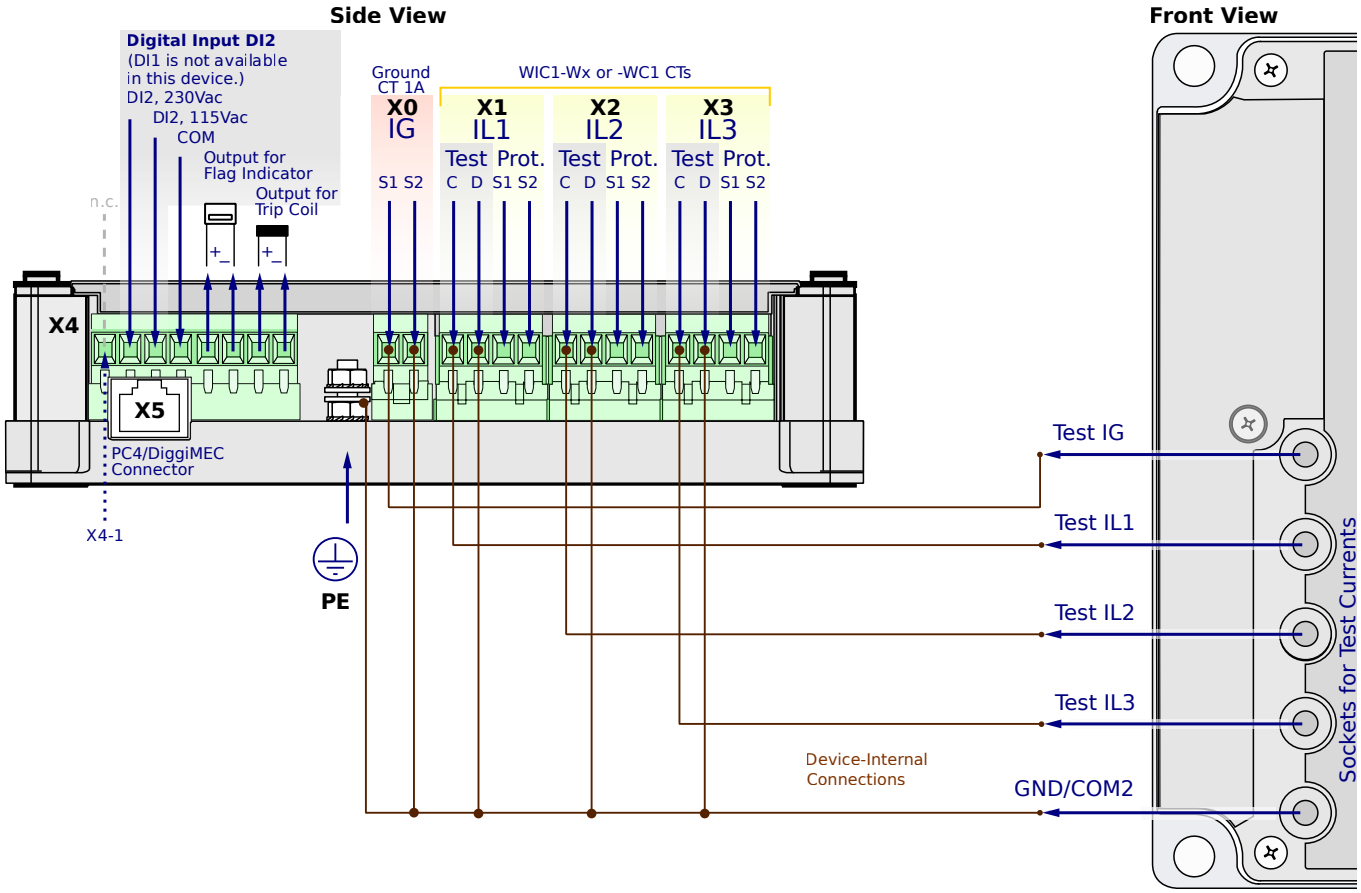


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1SAH

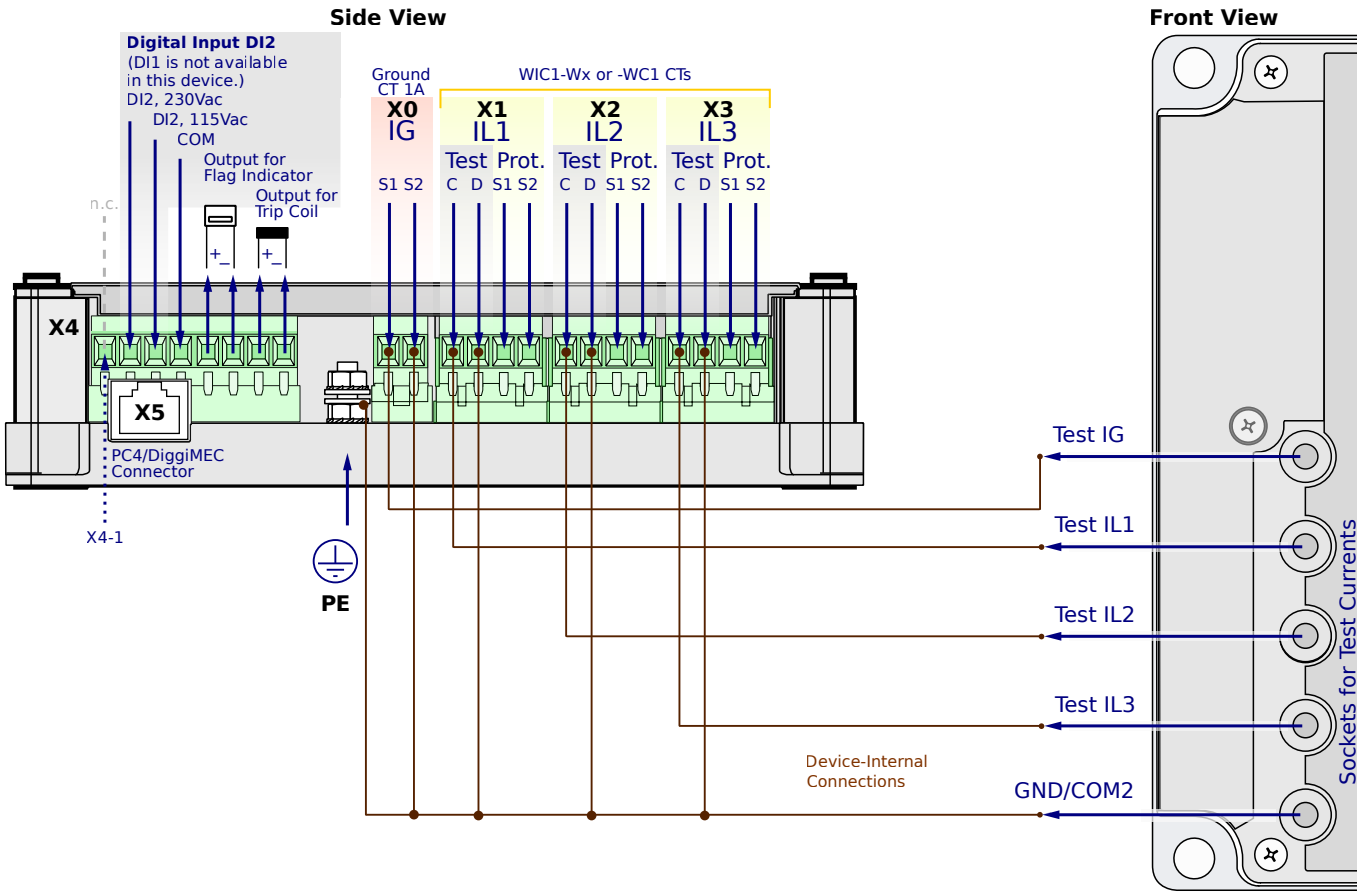


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1AA0

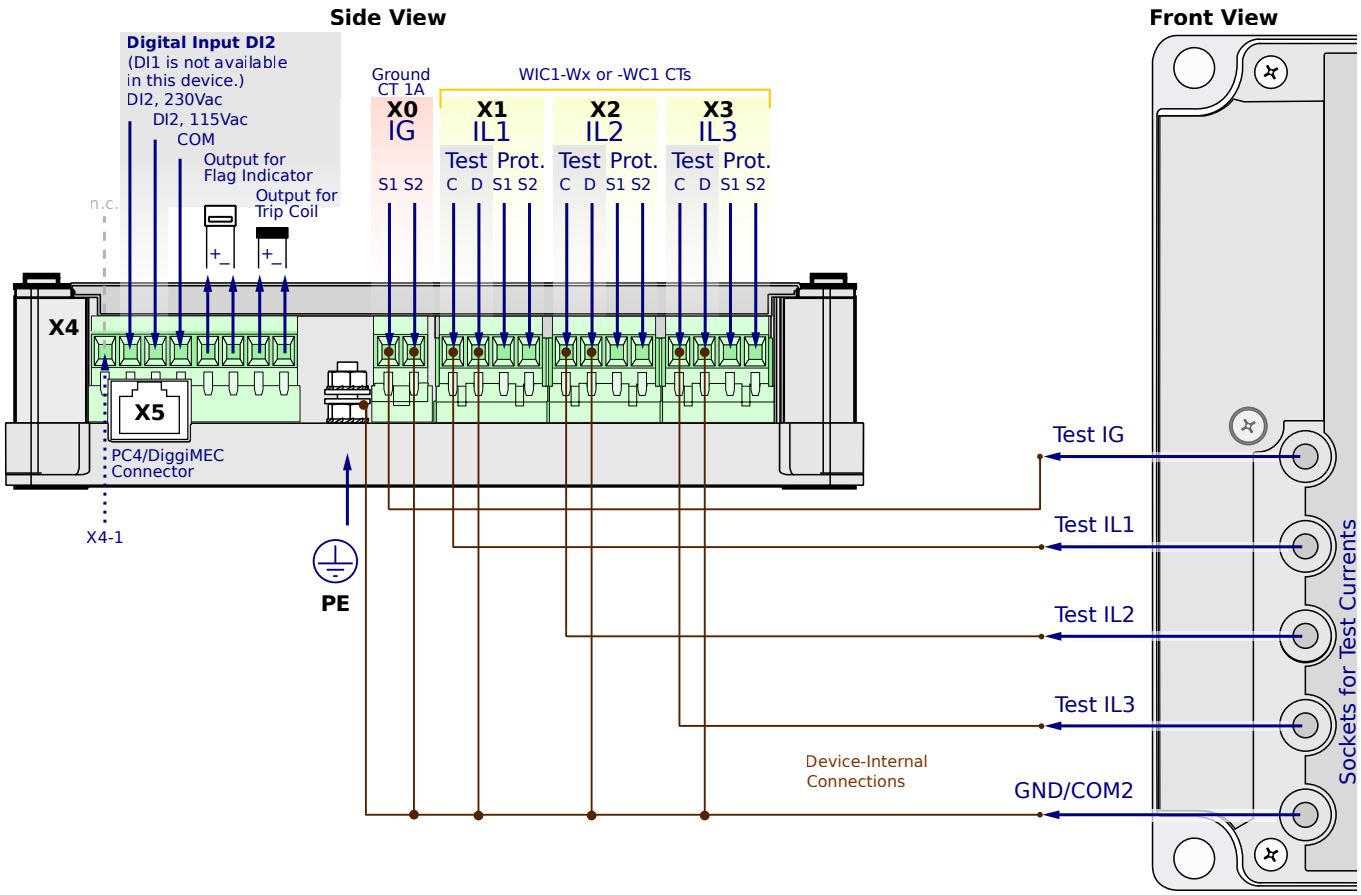


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1AAH

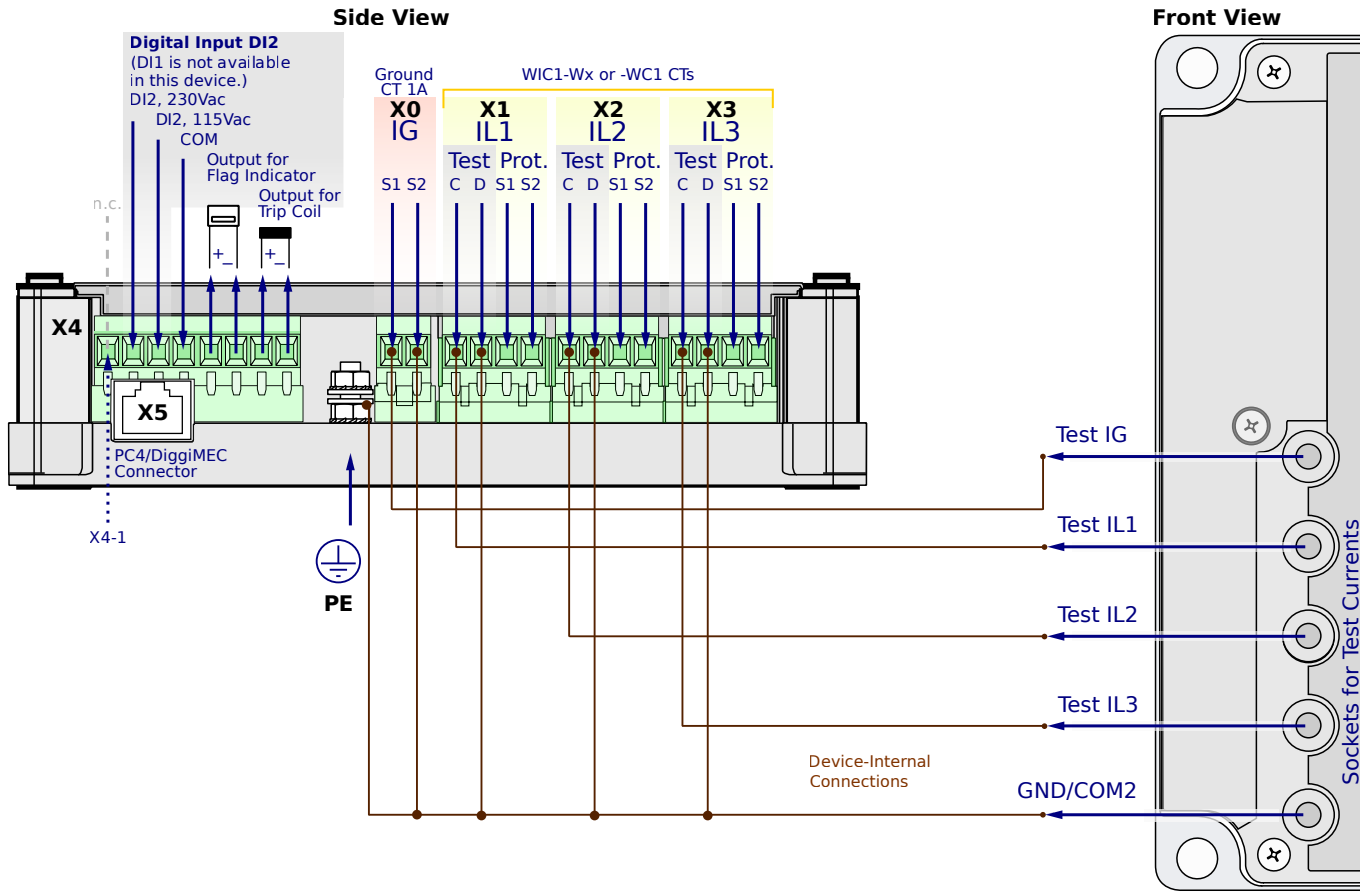


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1PA0

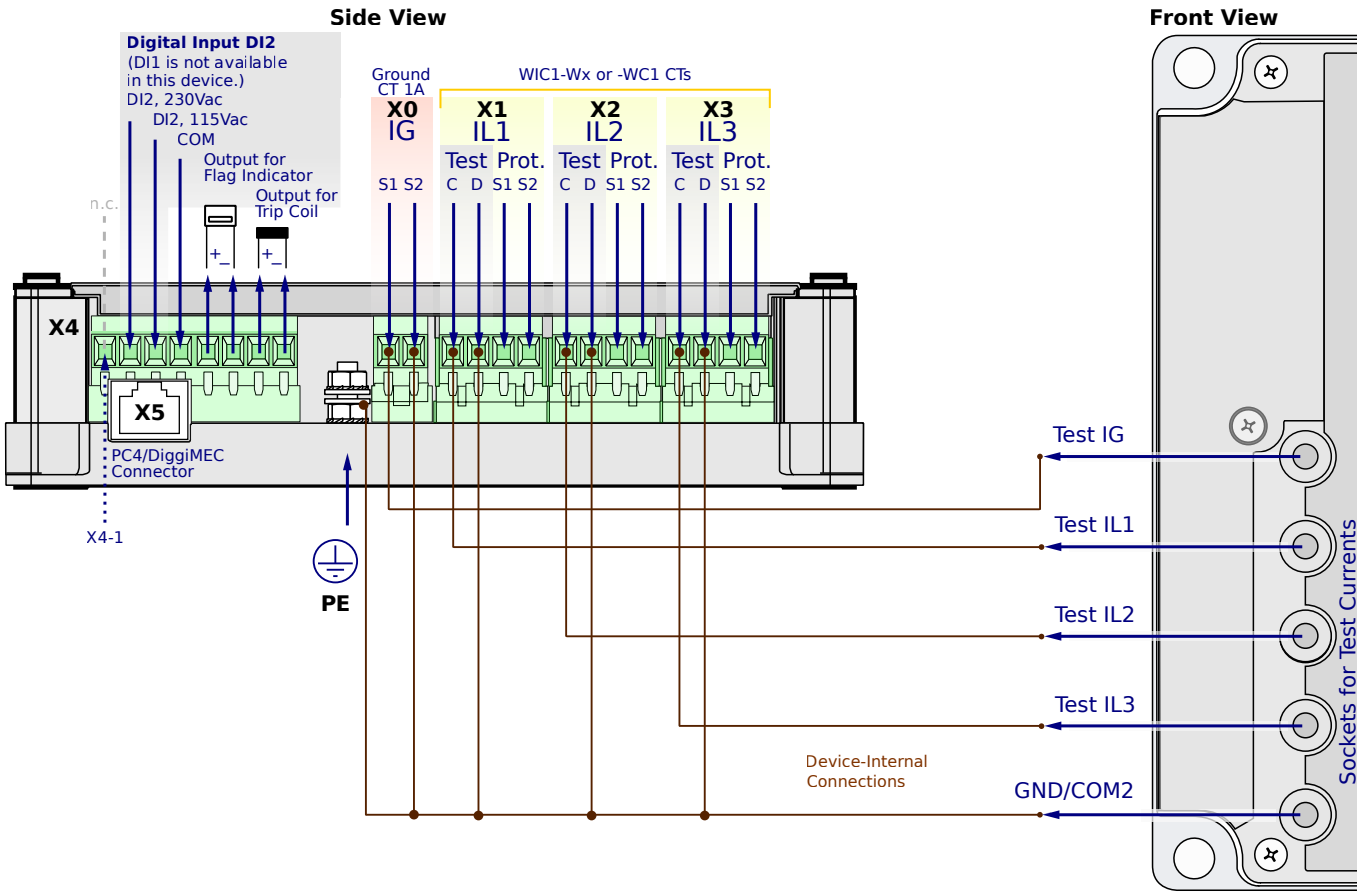


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC1PAH

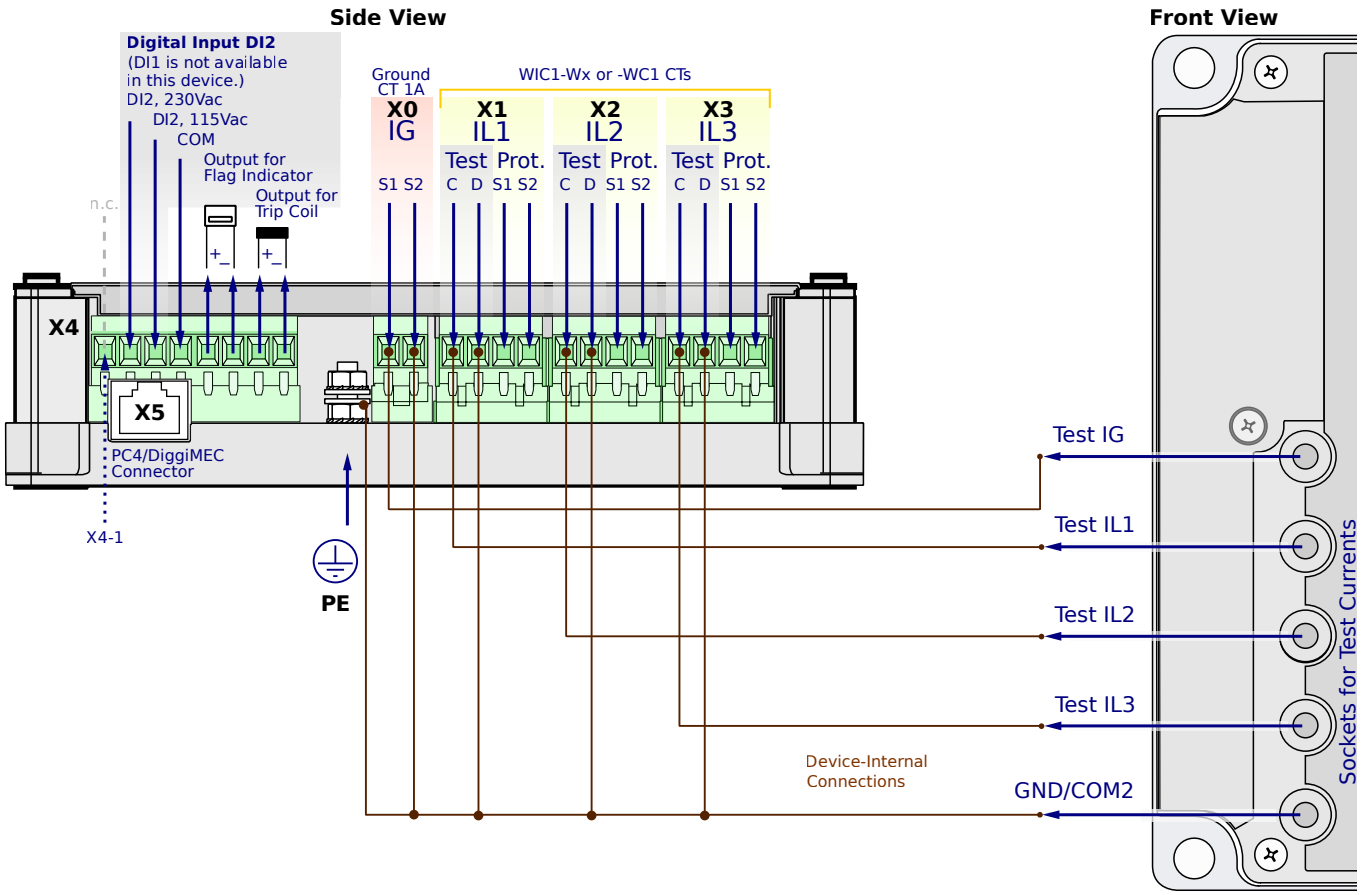


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2SA0

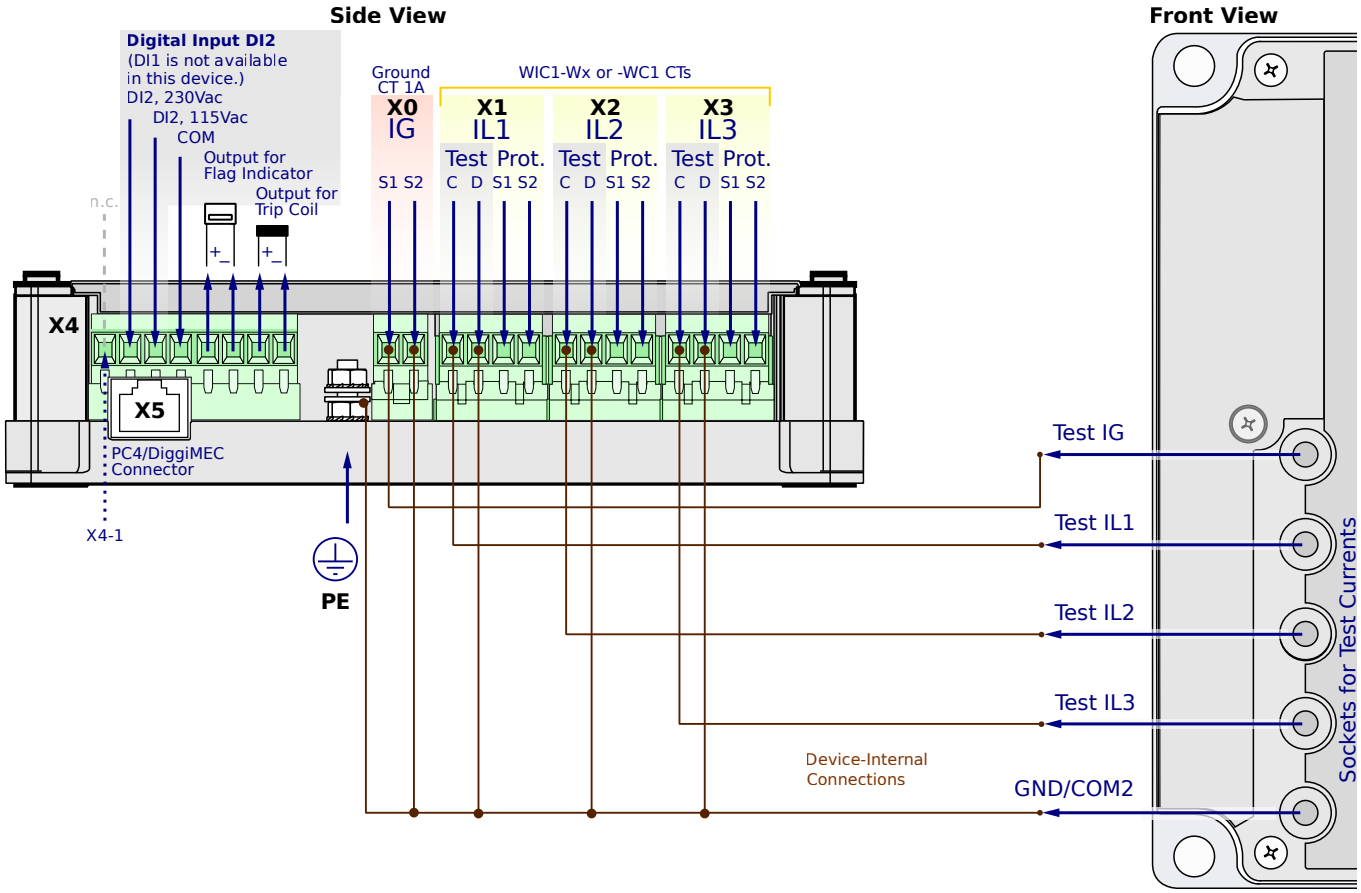


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2SAH

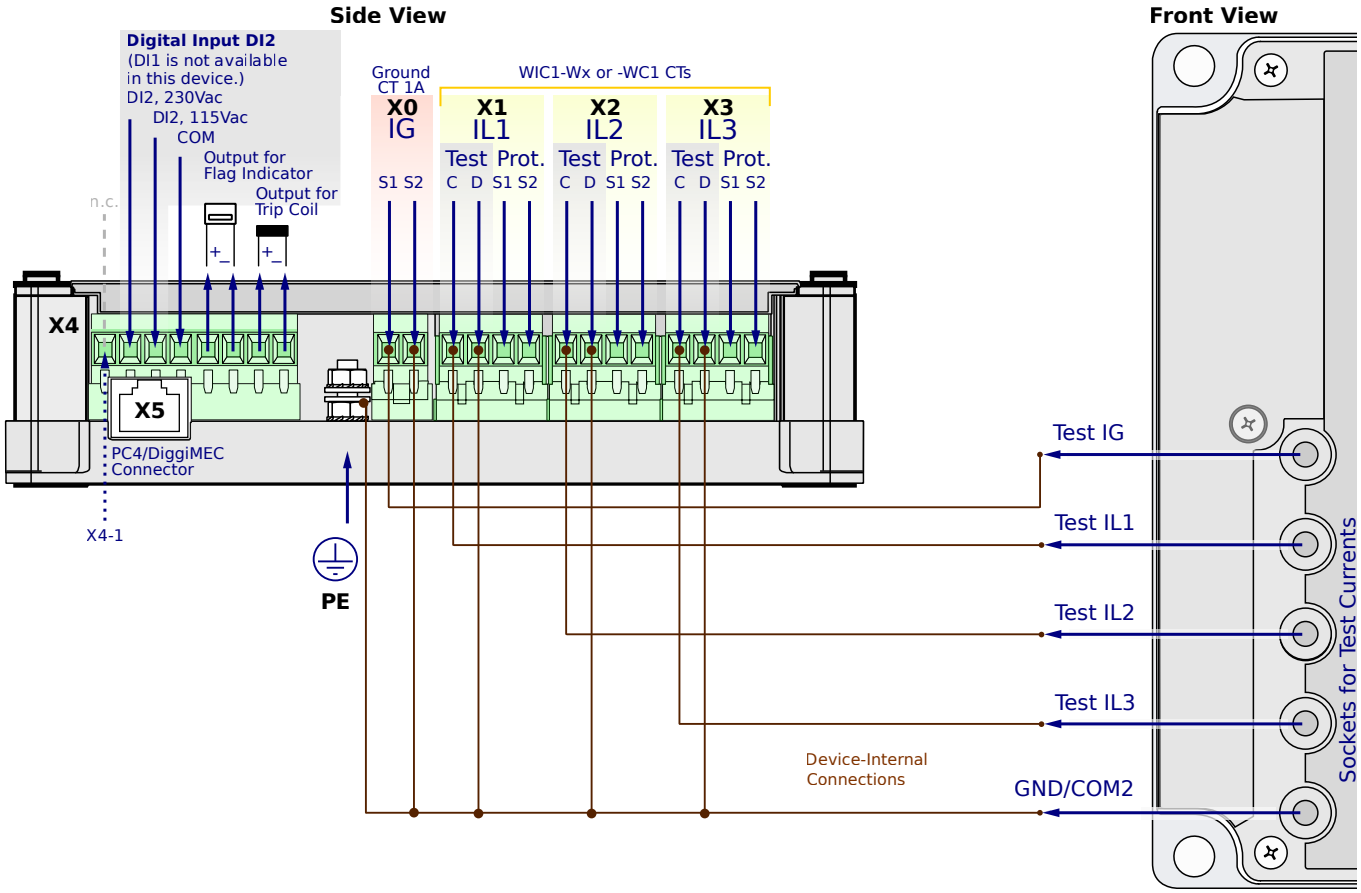


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2AA0

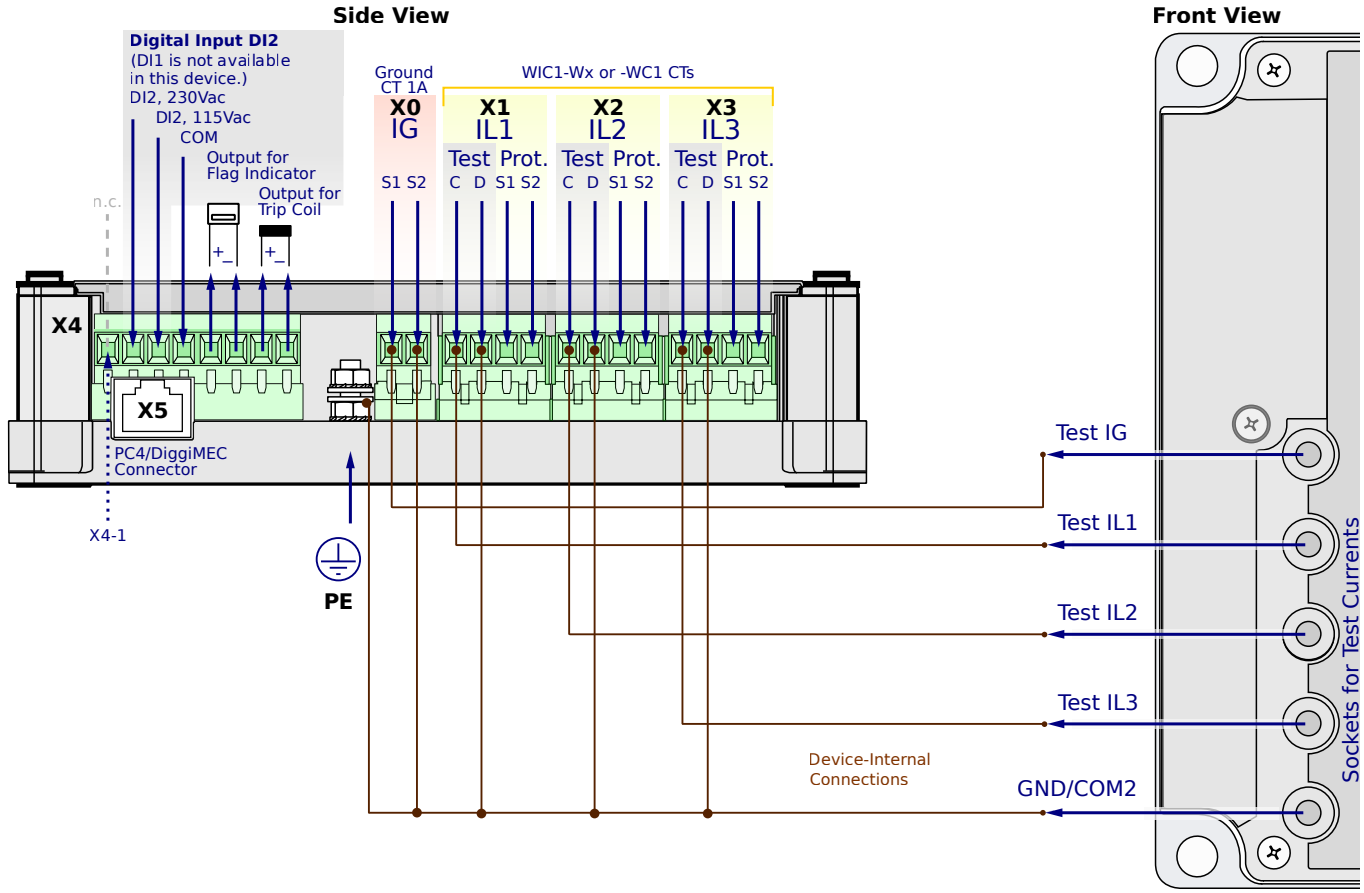


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2AAH

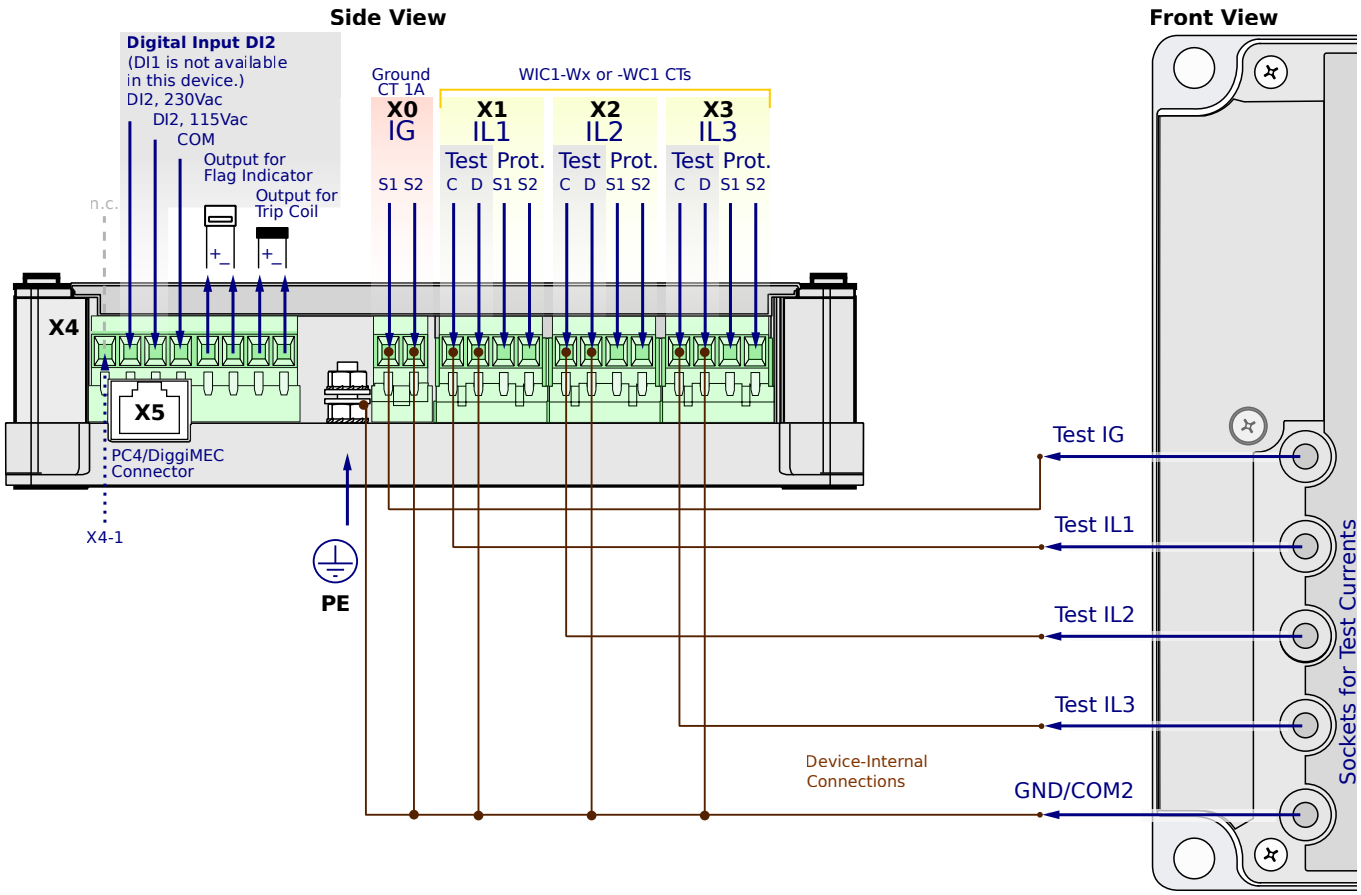


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2PA0

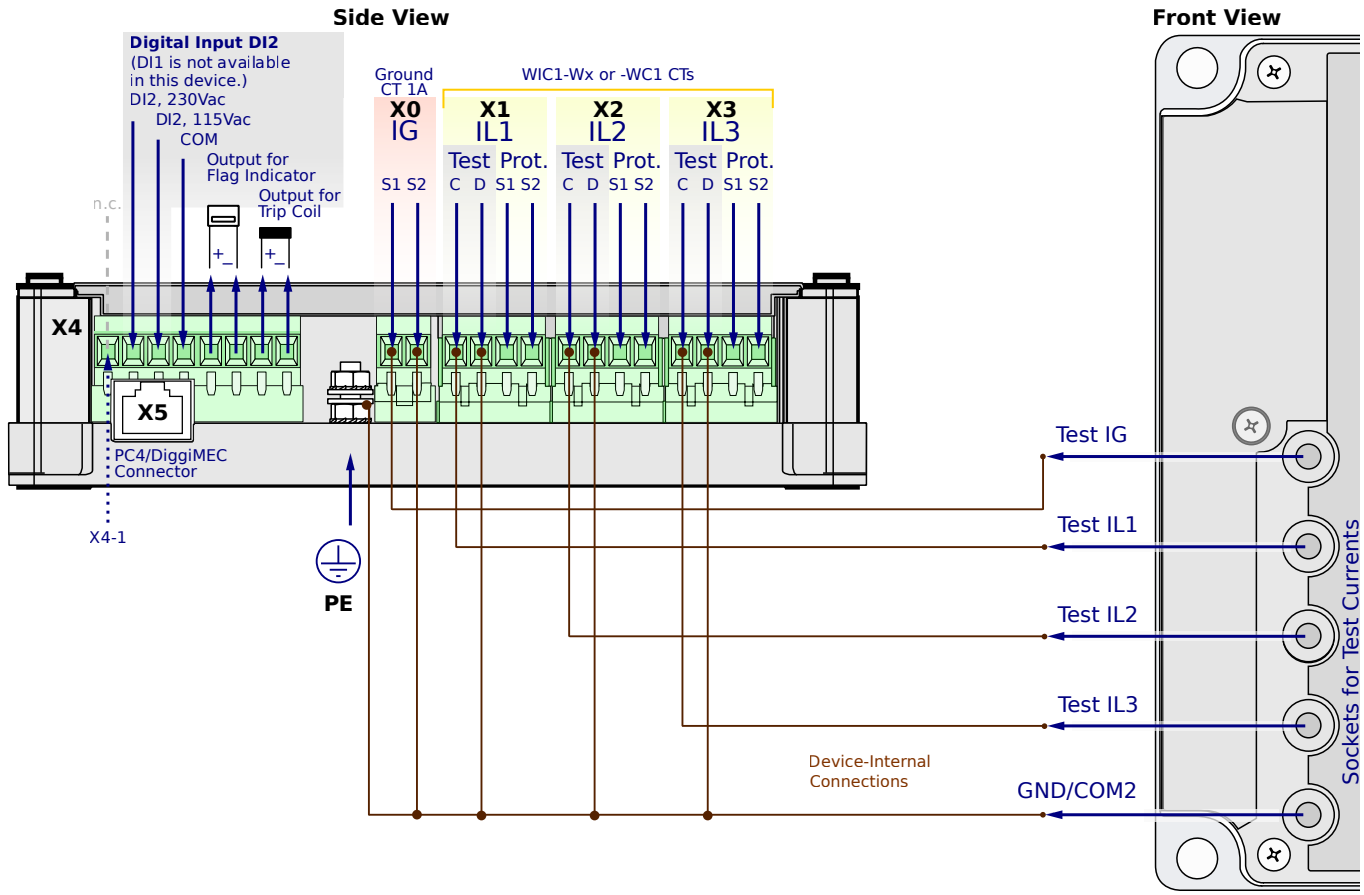


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5FC2PAH

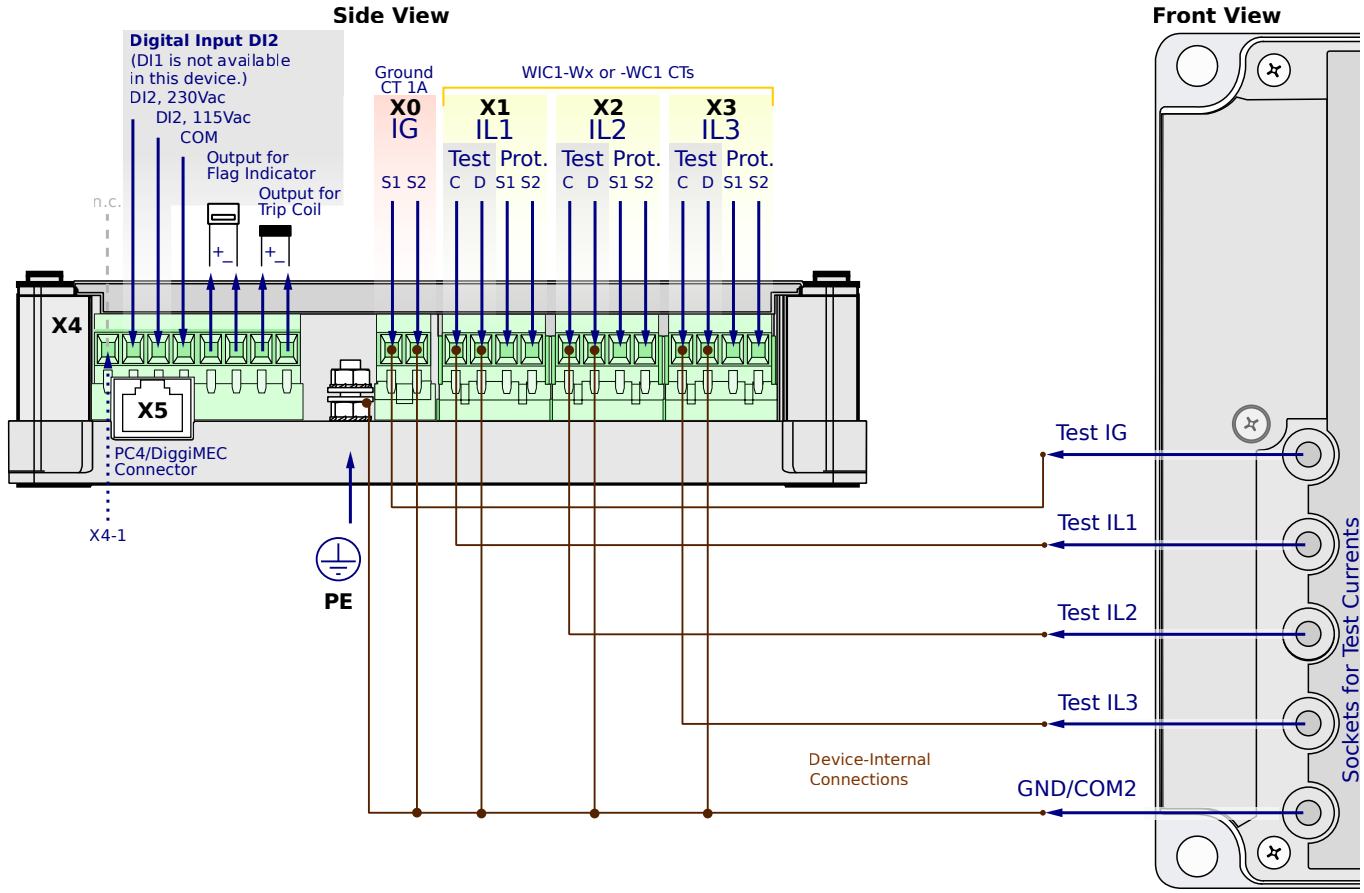


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1SA0

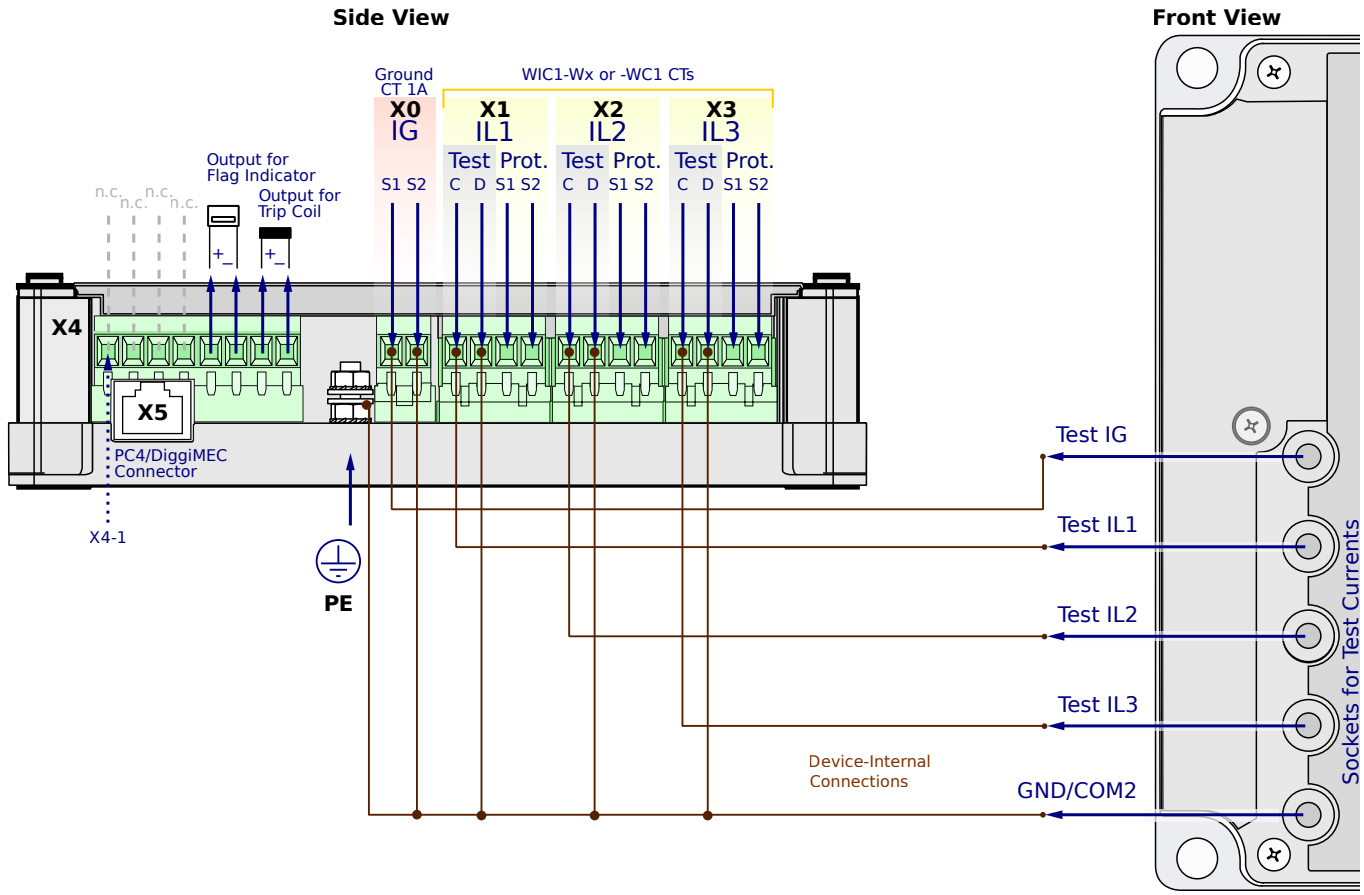


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1SAH

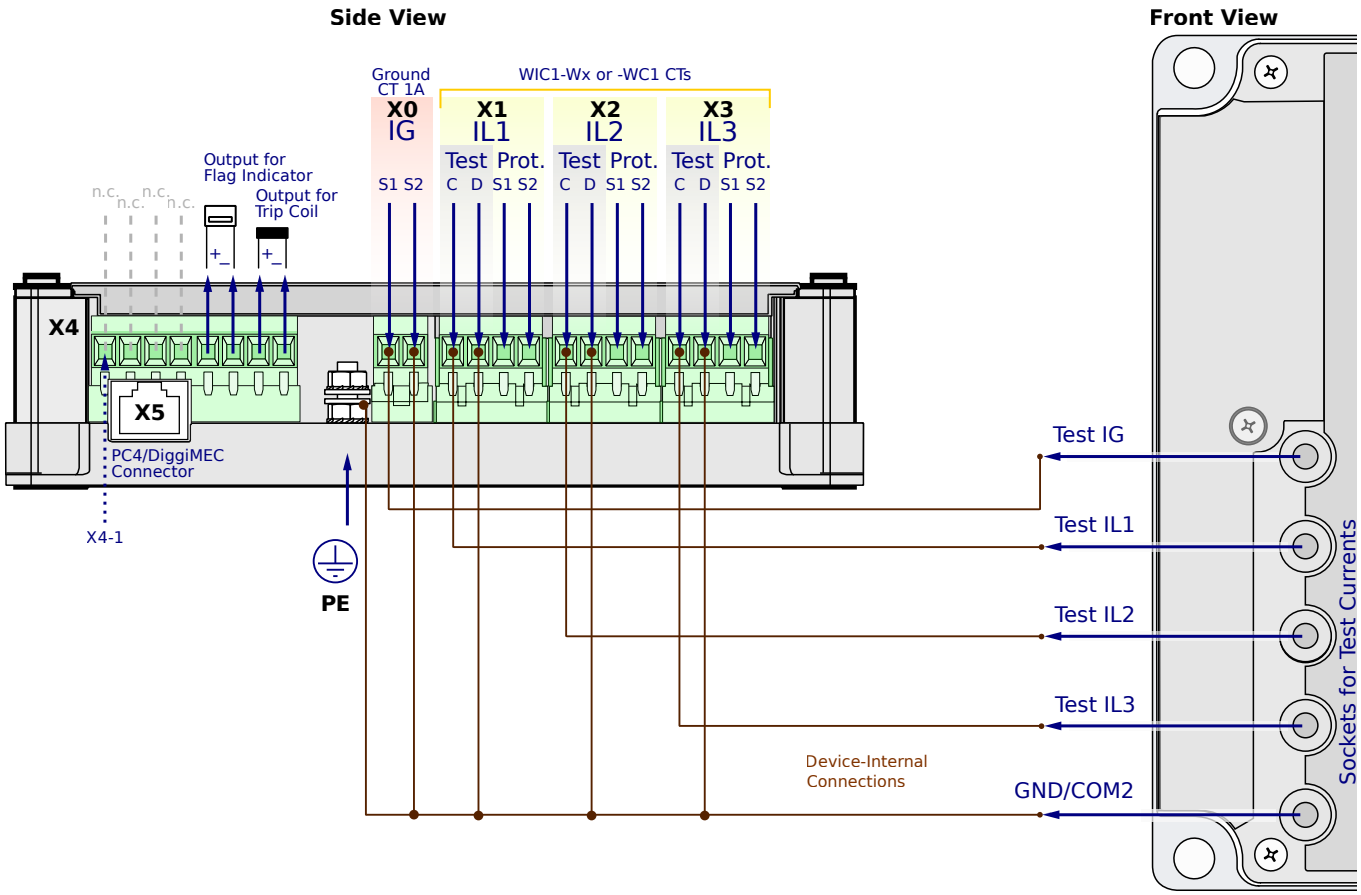


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1AA0

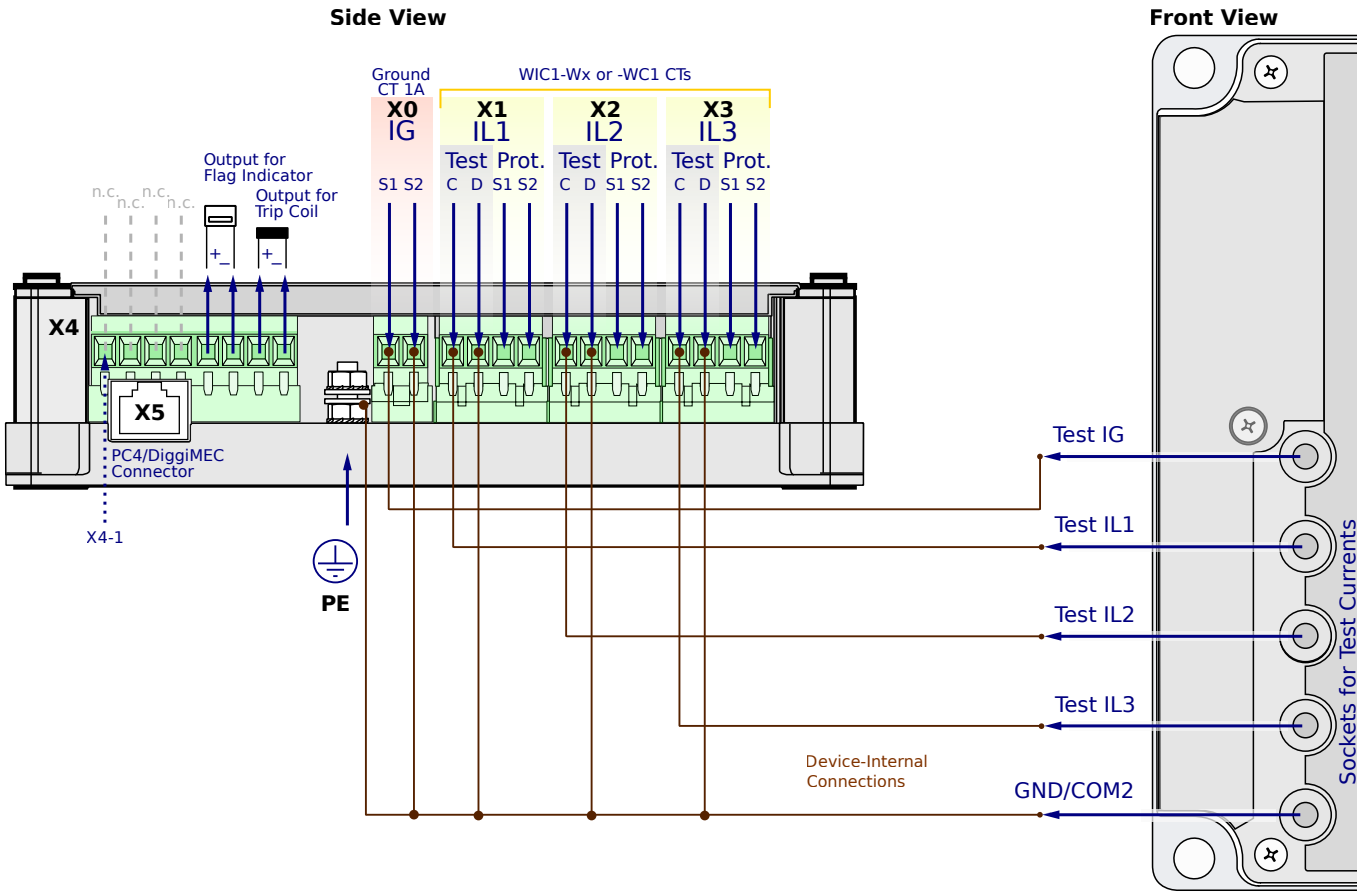


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1AAH

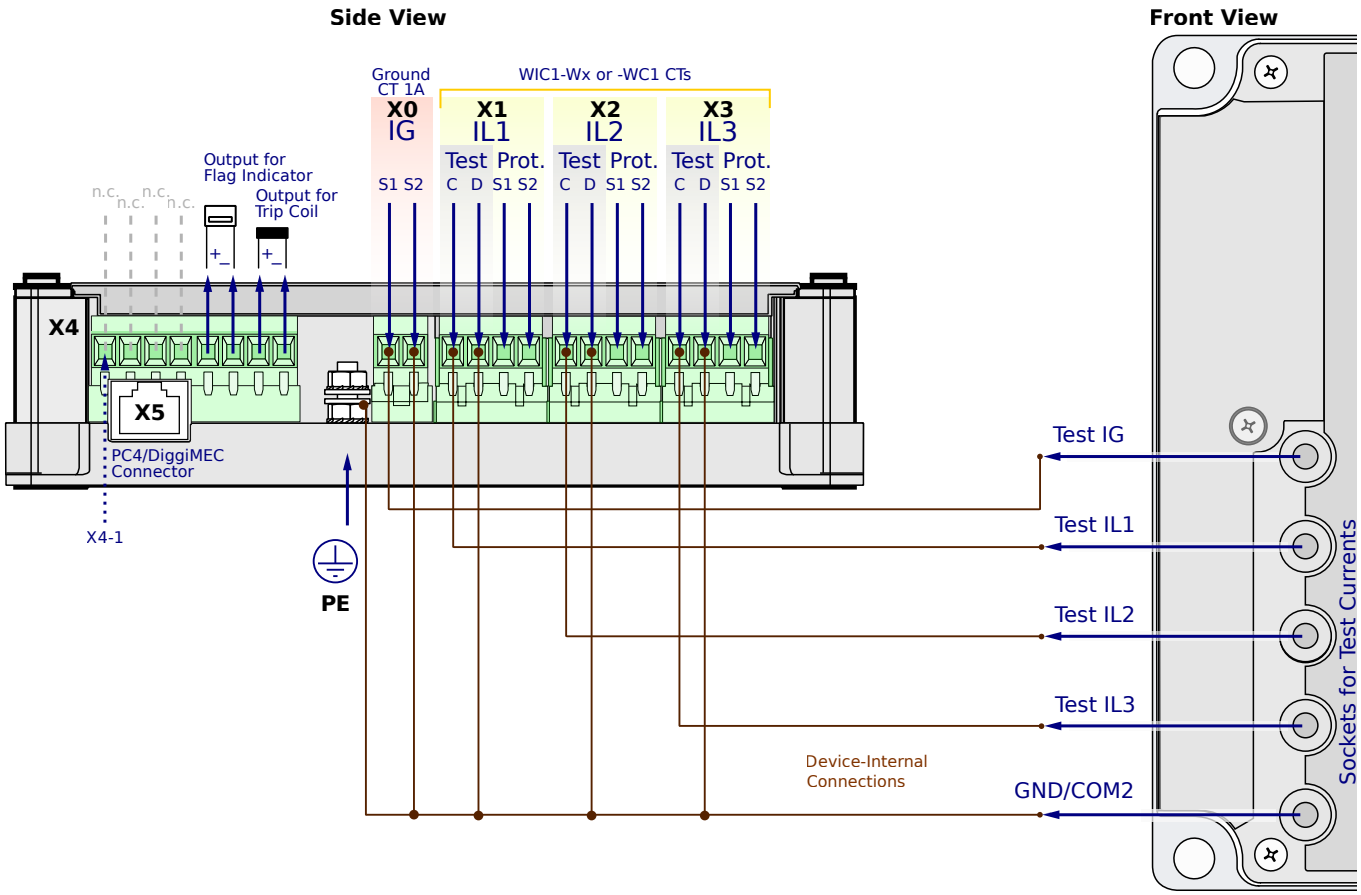


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1PA0

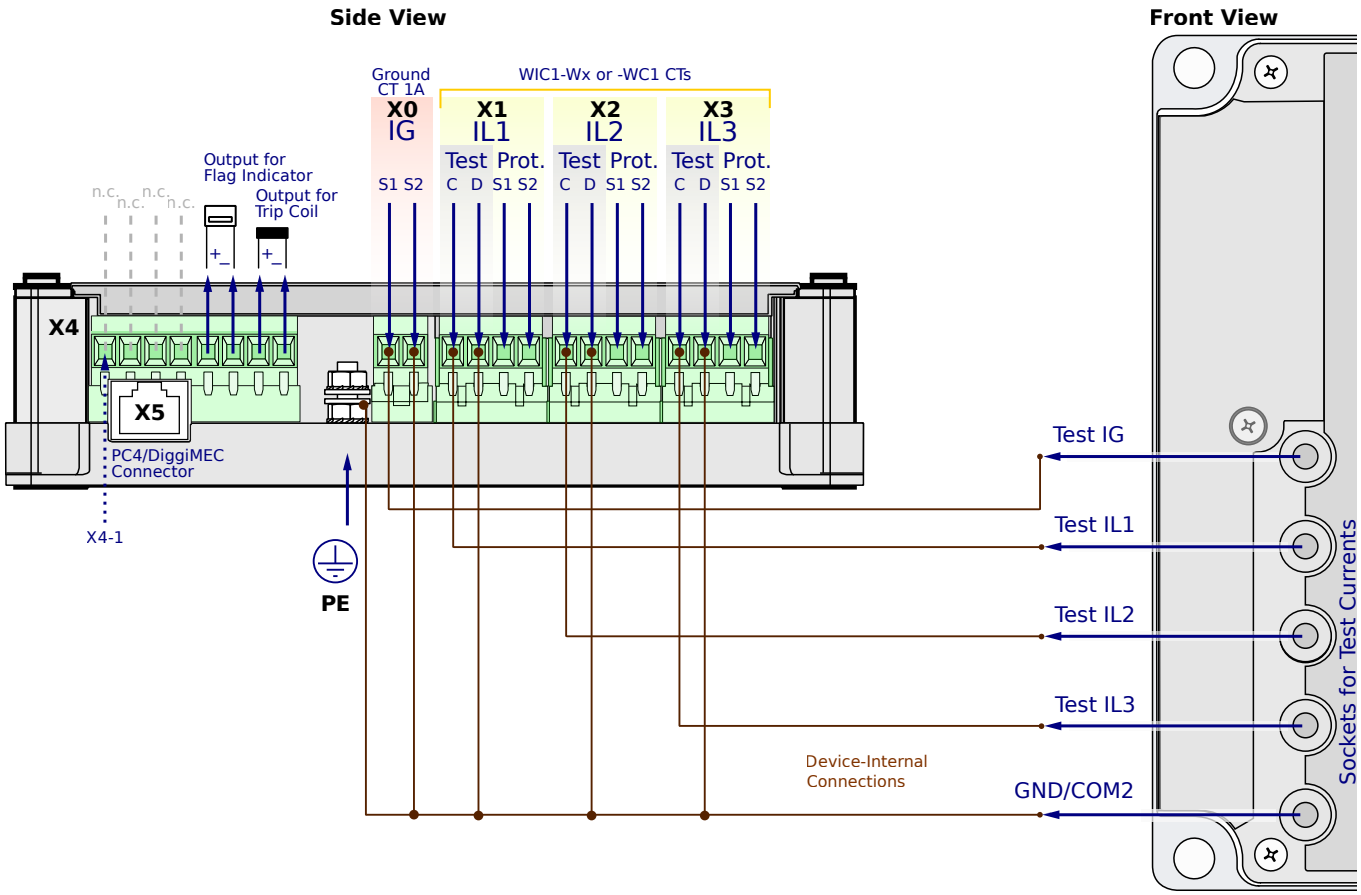


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN1PAH

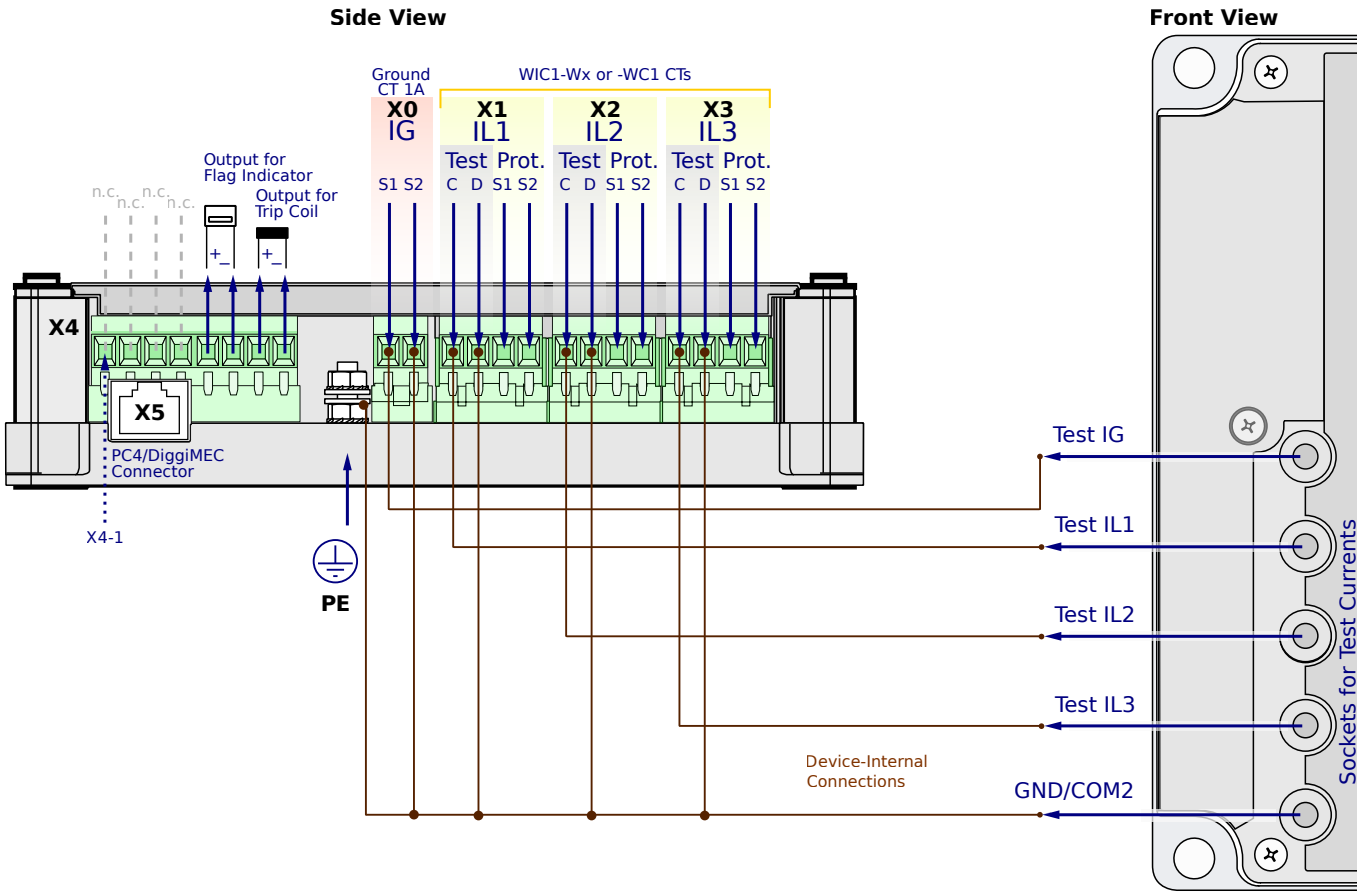


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2SA0

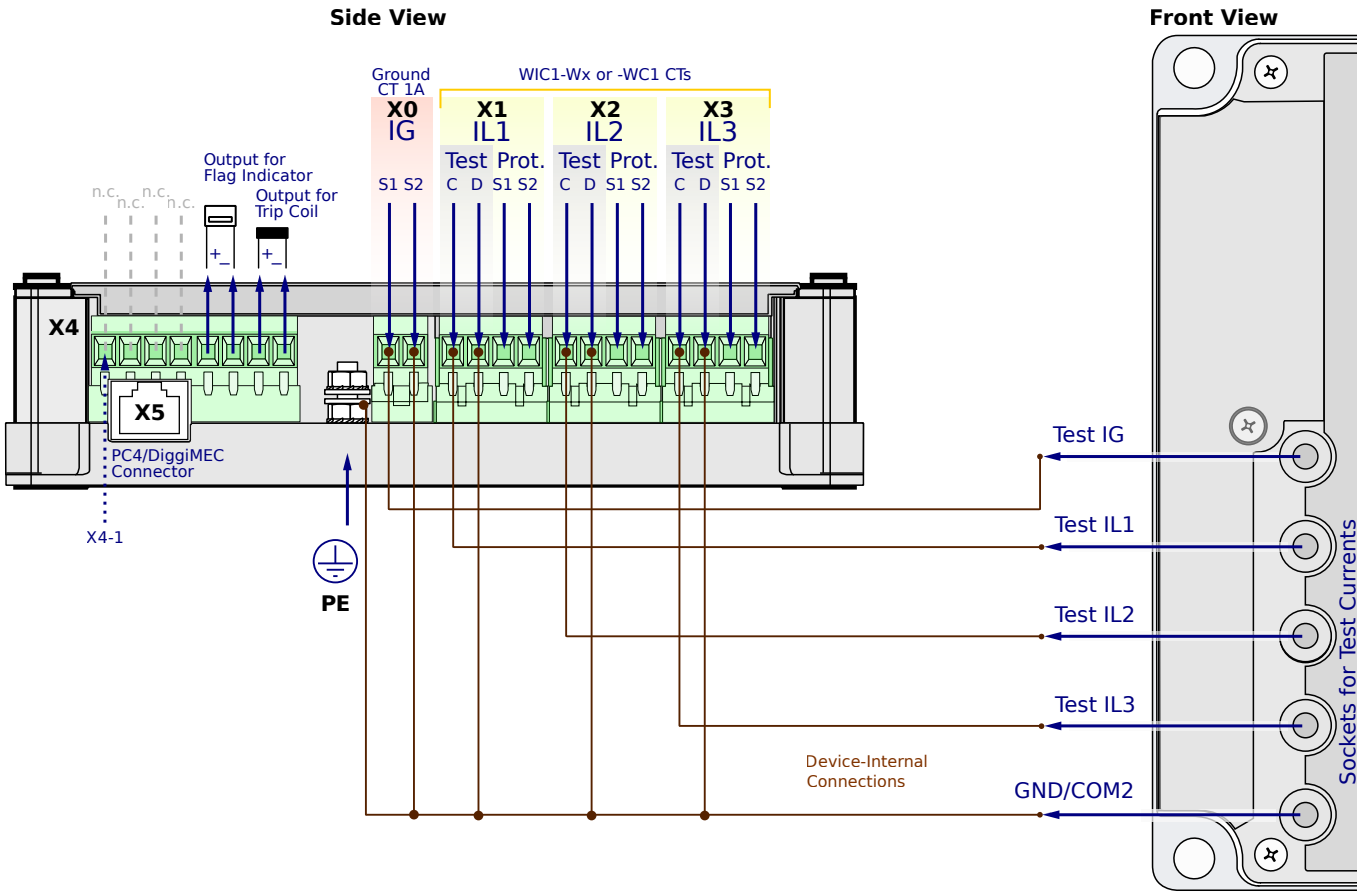


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2SAH

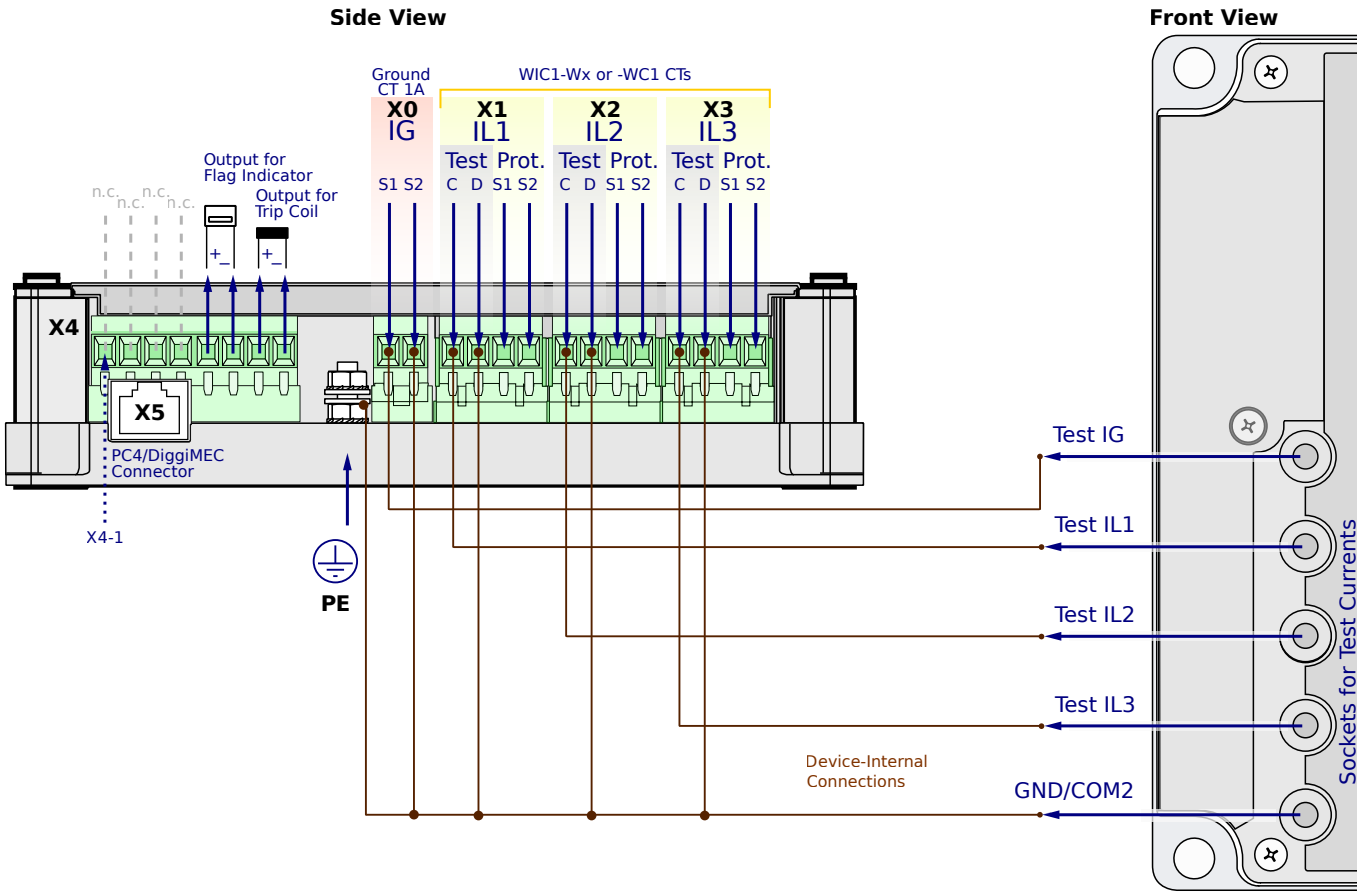


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2AA0

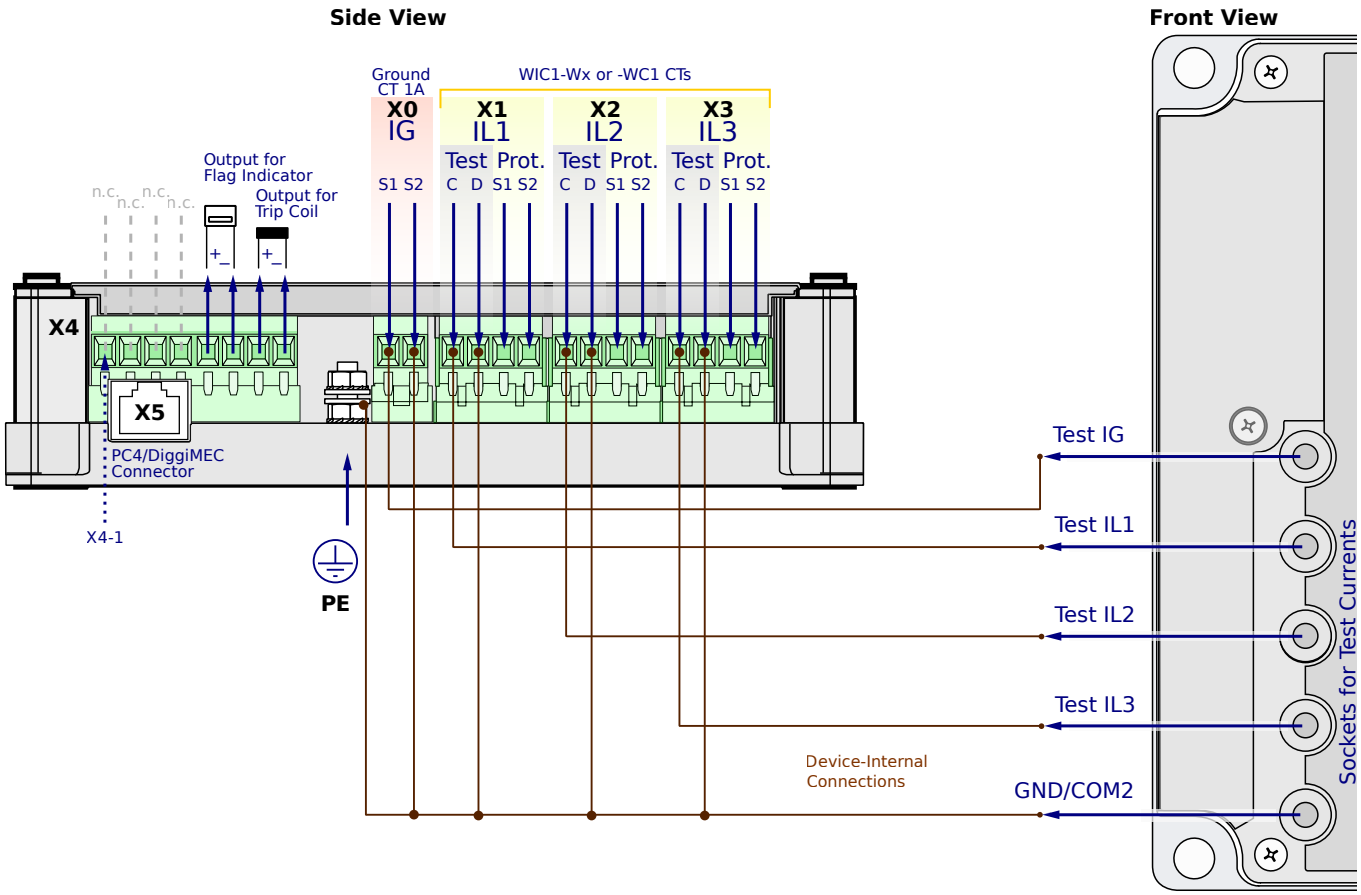


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2AAH

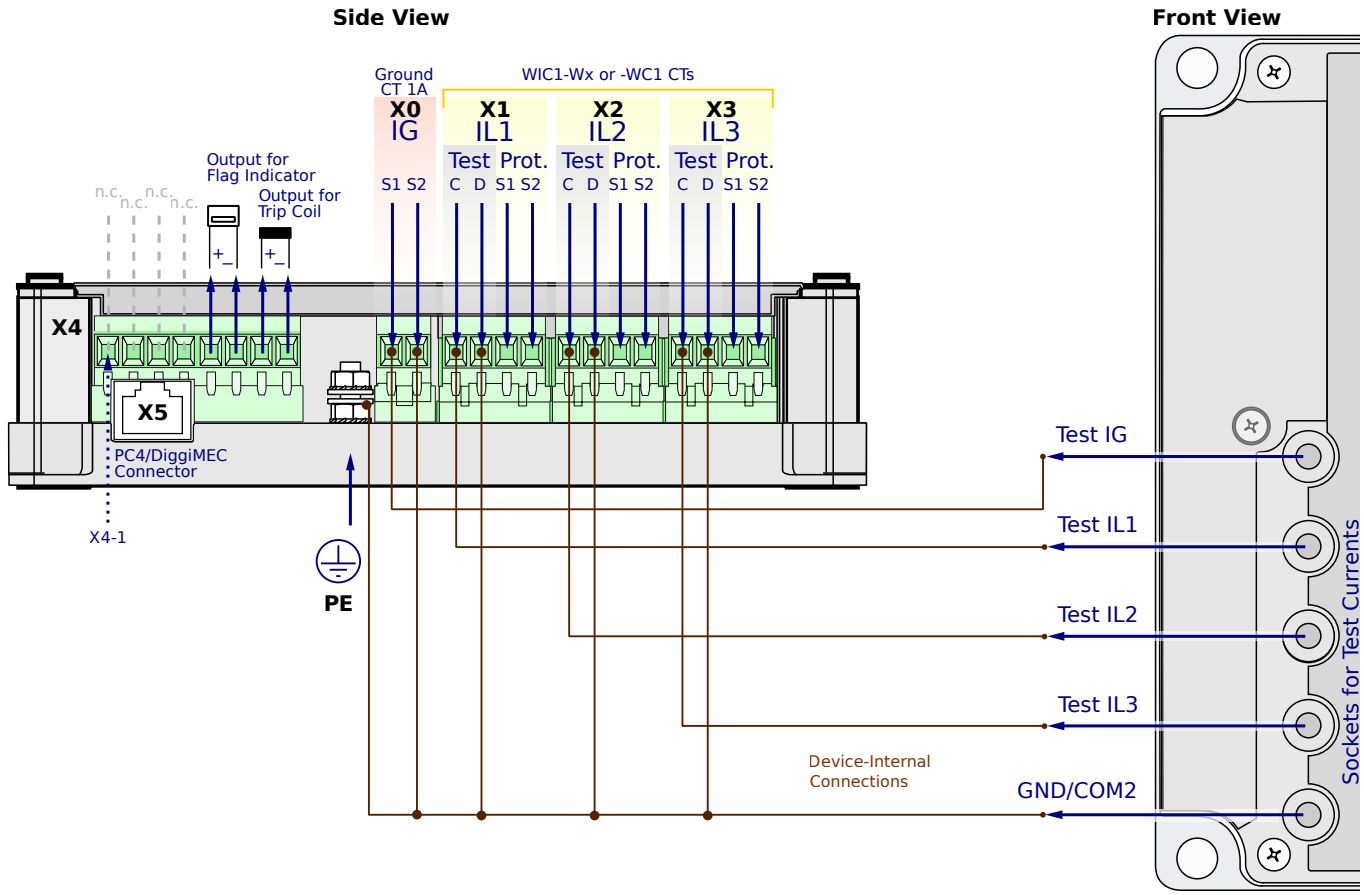


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2PA0

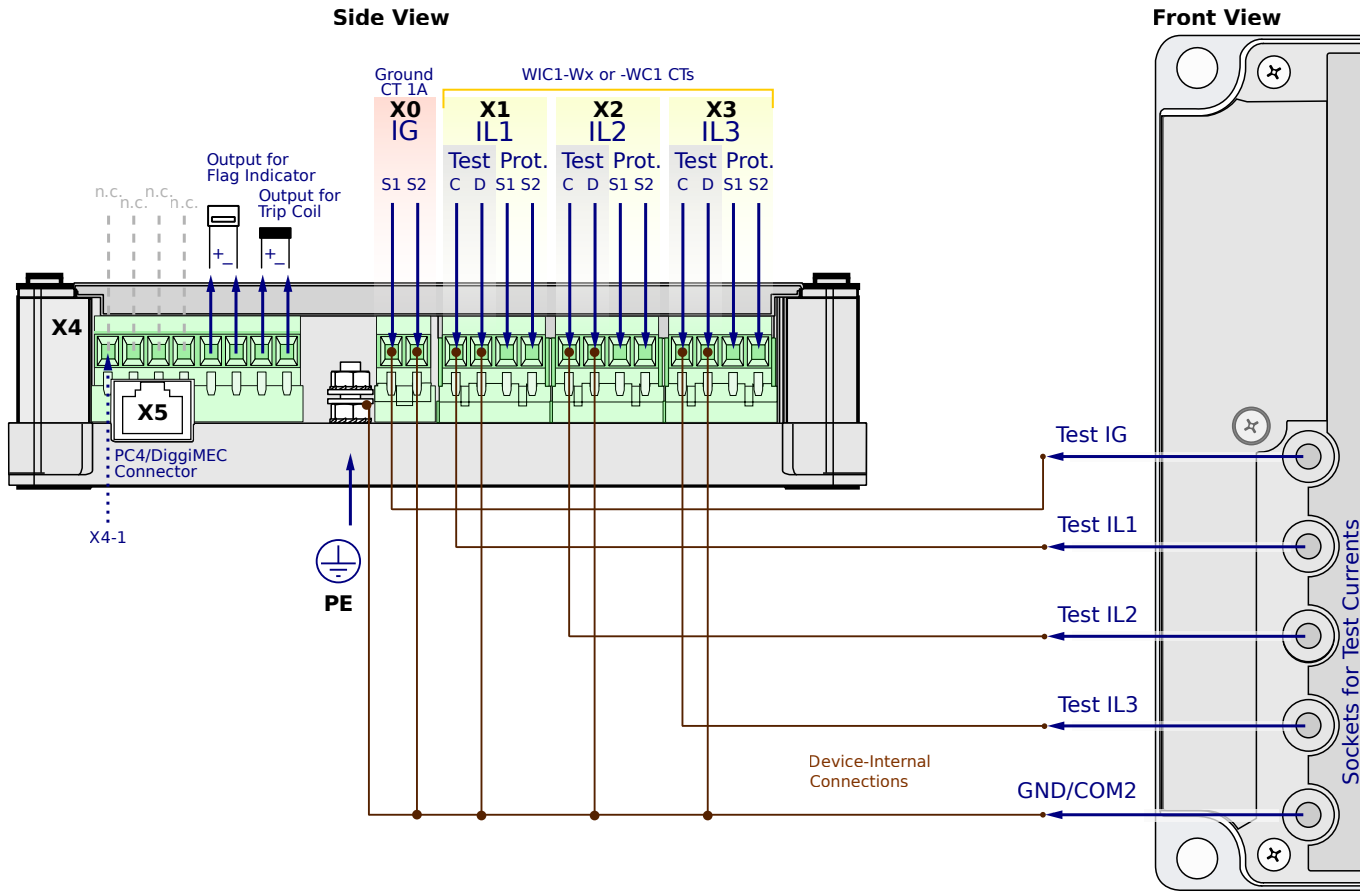


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CN2PAH

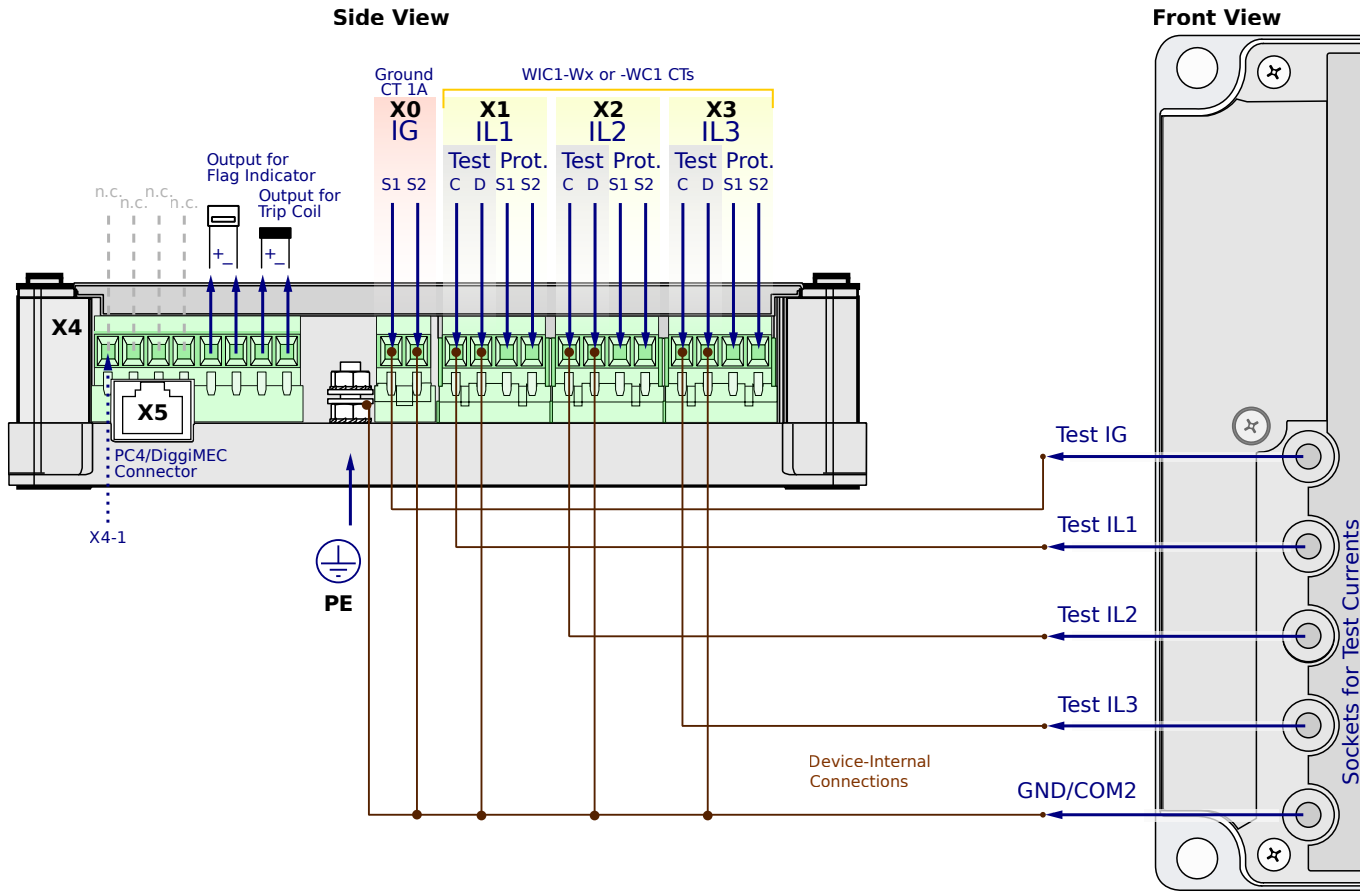


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1SA0

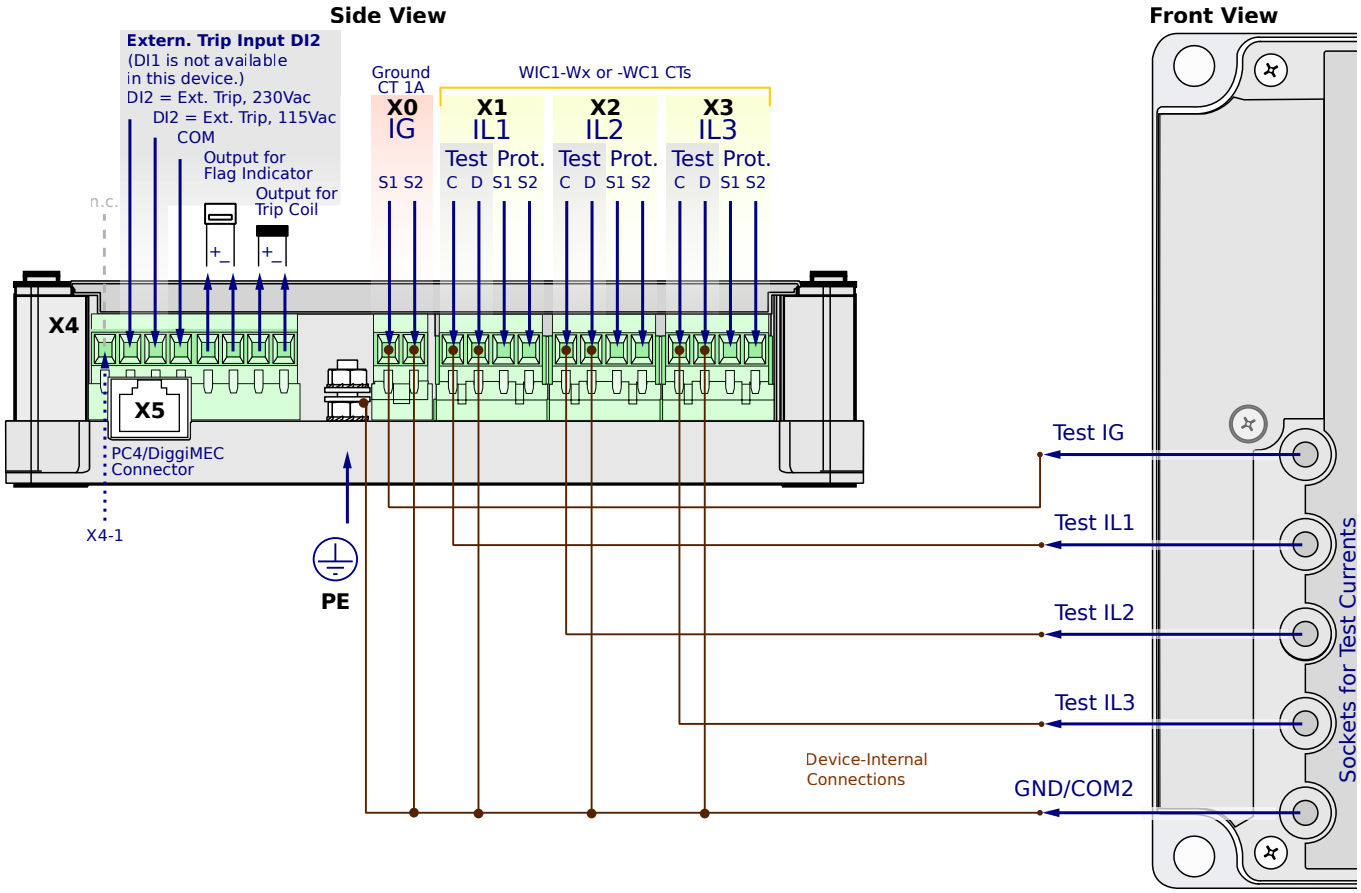


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1SAH

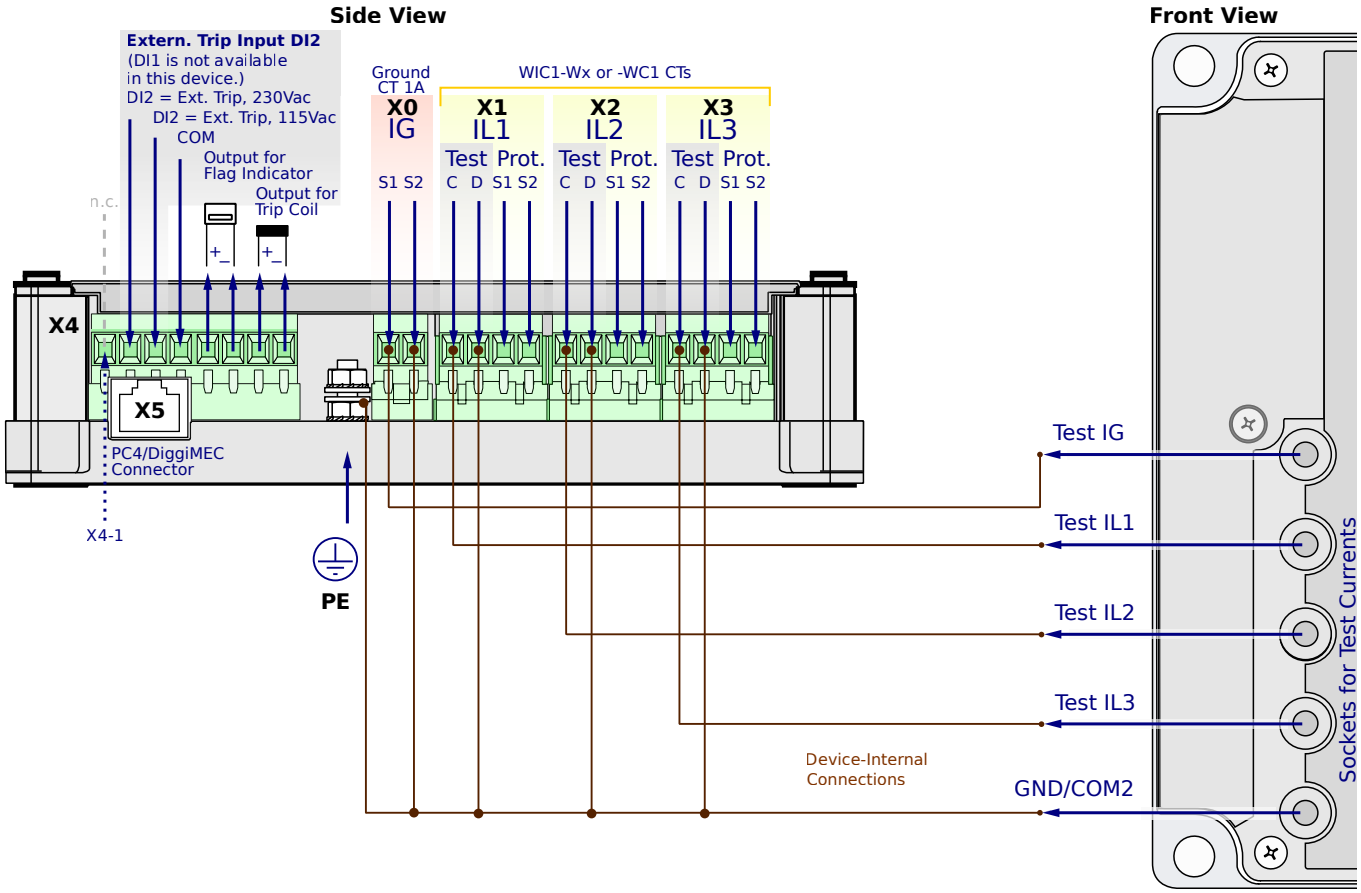


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1AA0

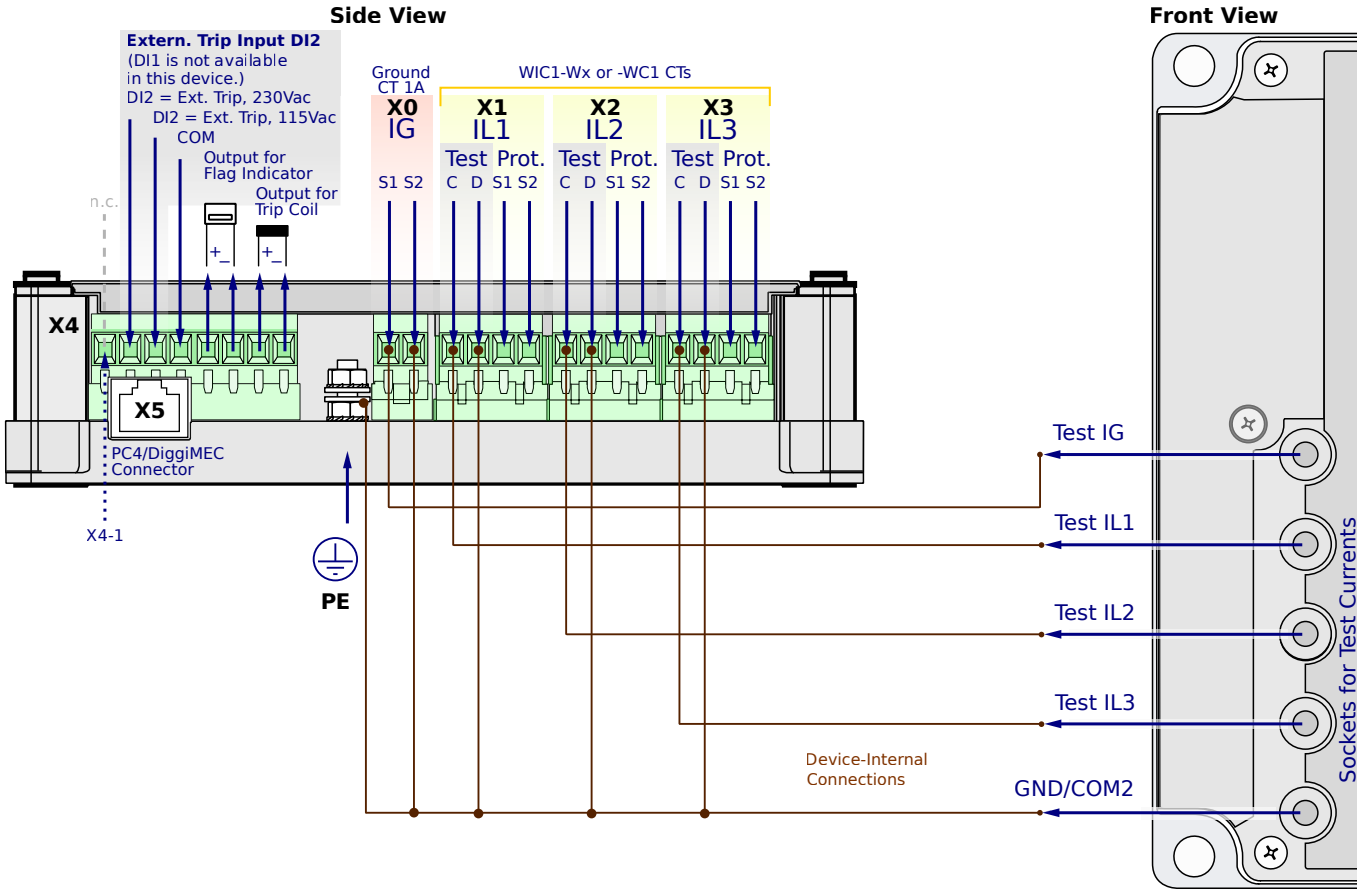


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1AAH

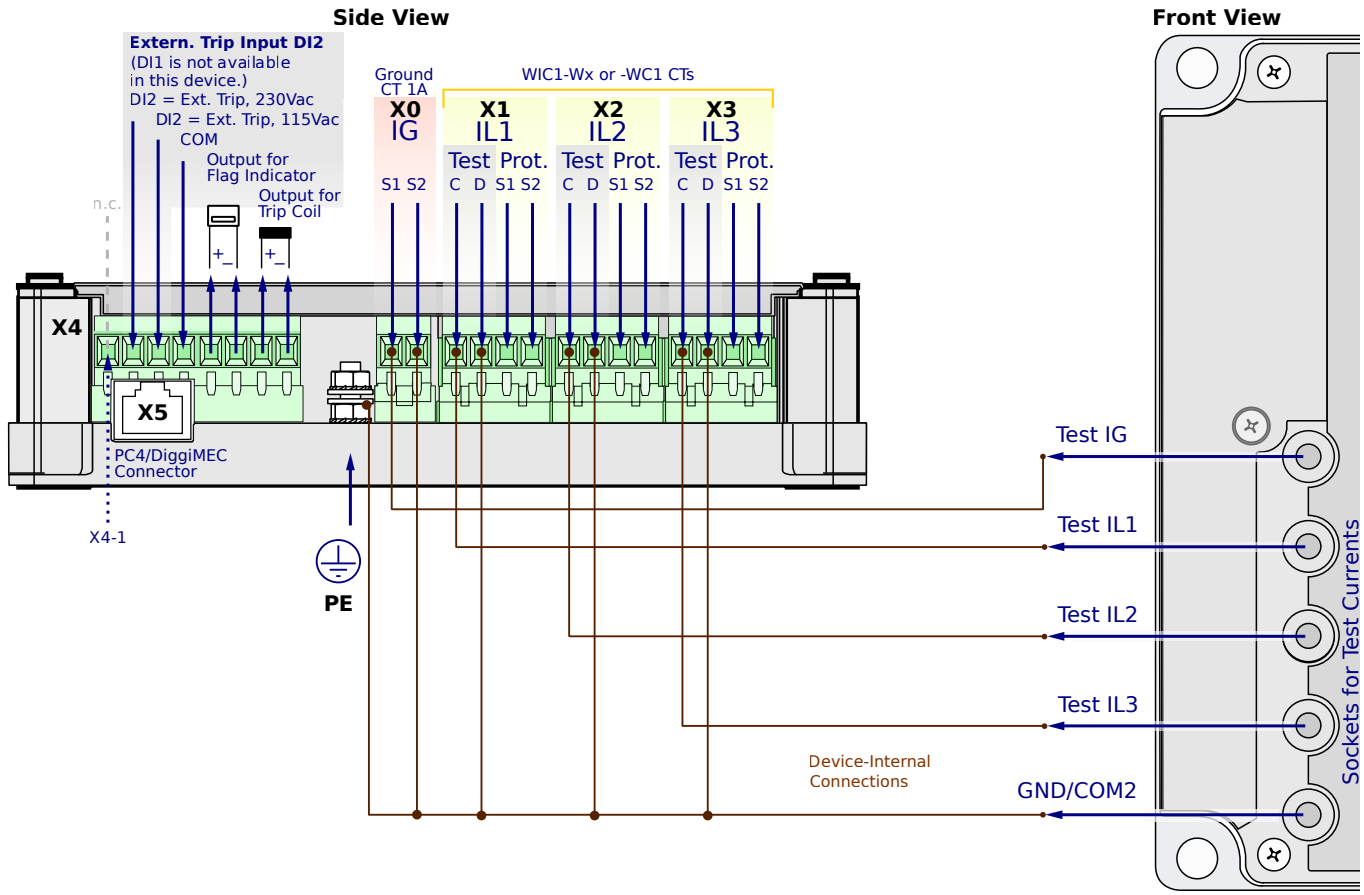


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1PA0

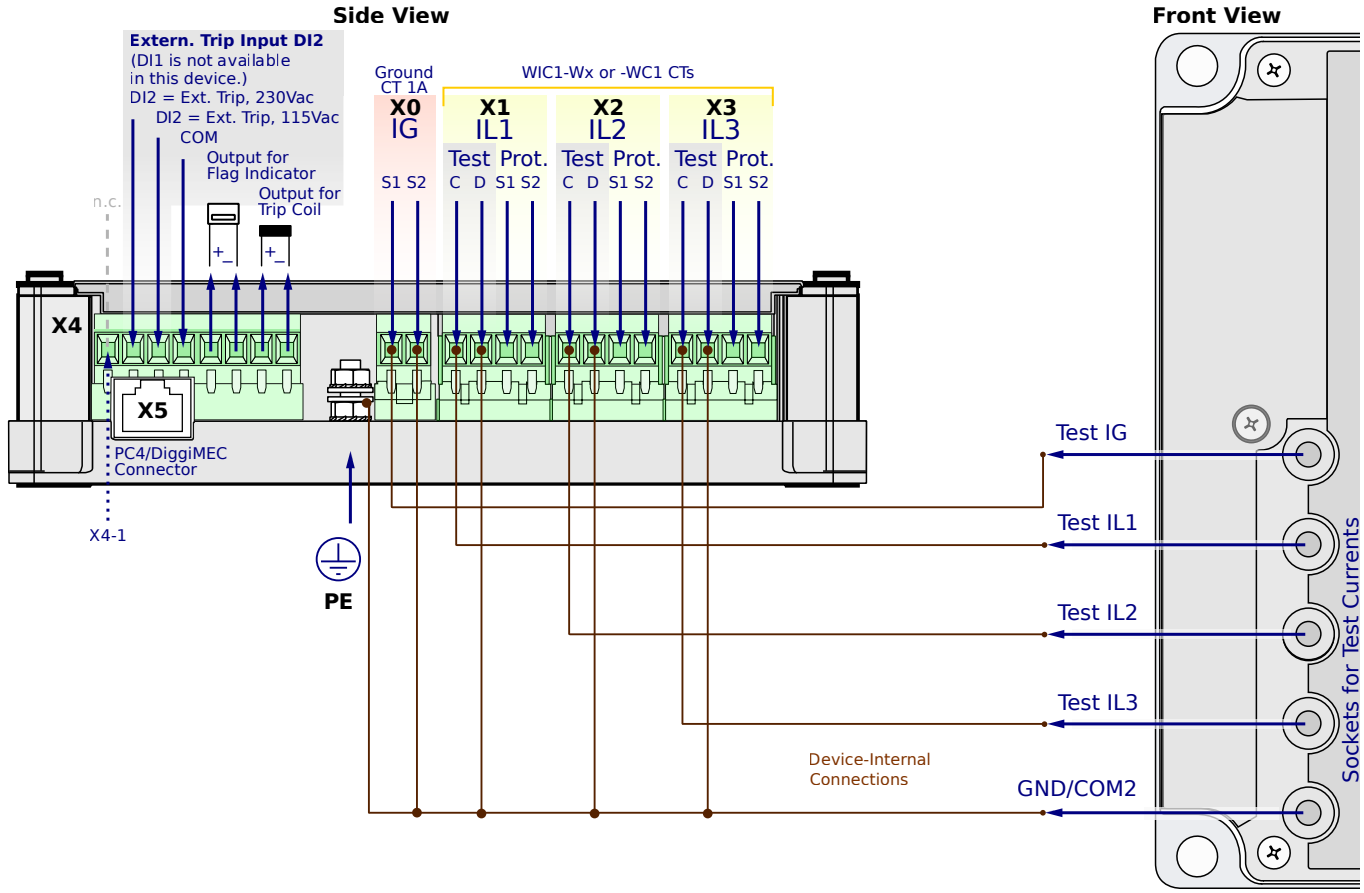


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF1PAH

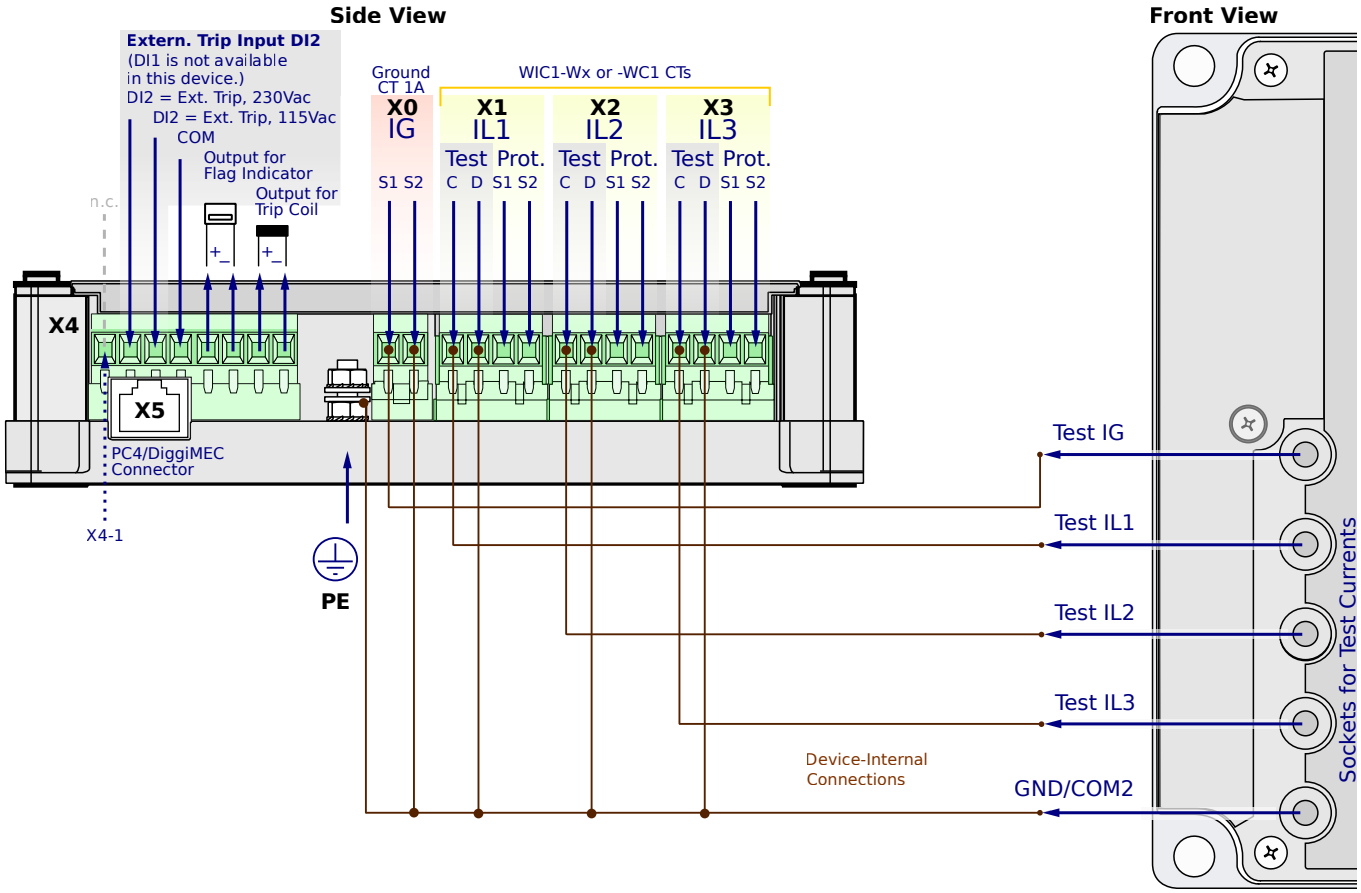


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2SA0

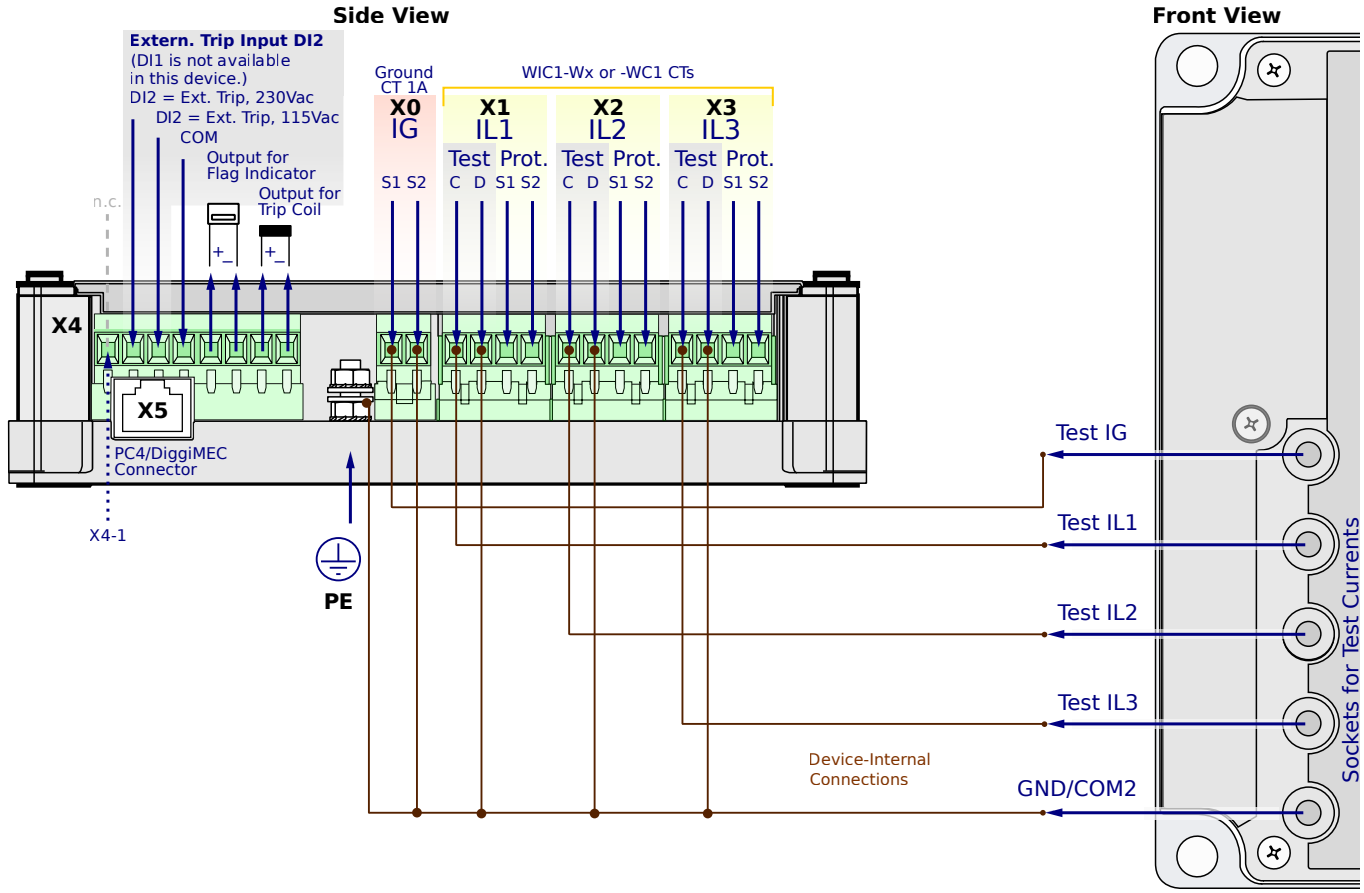


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2SAH

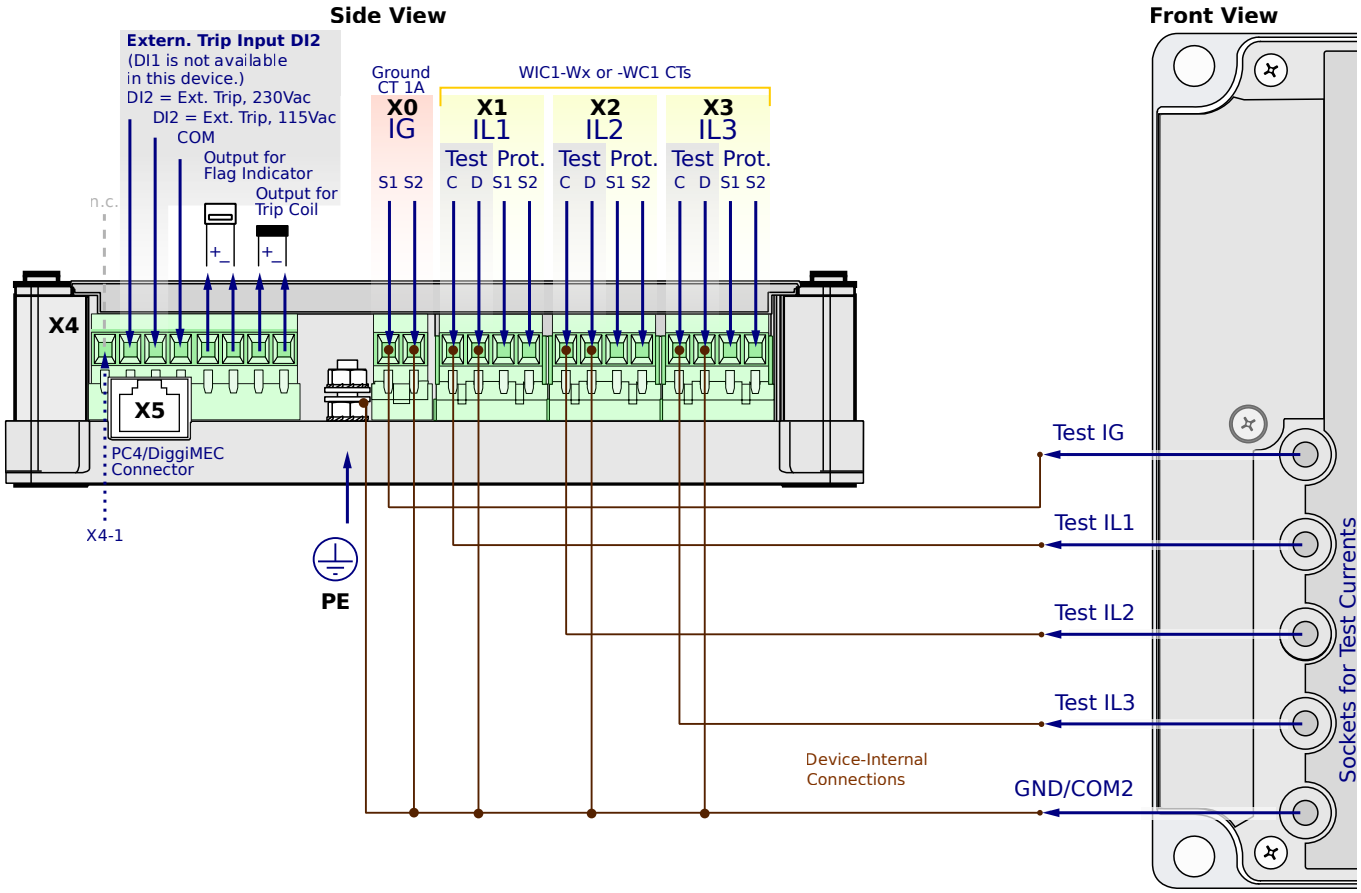


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2AA0

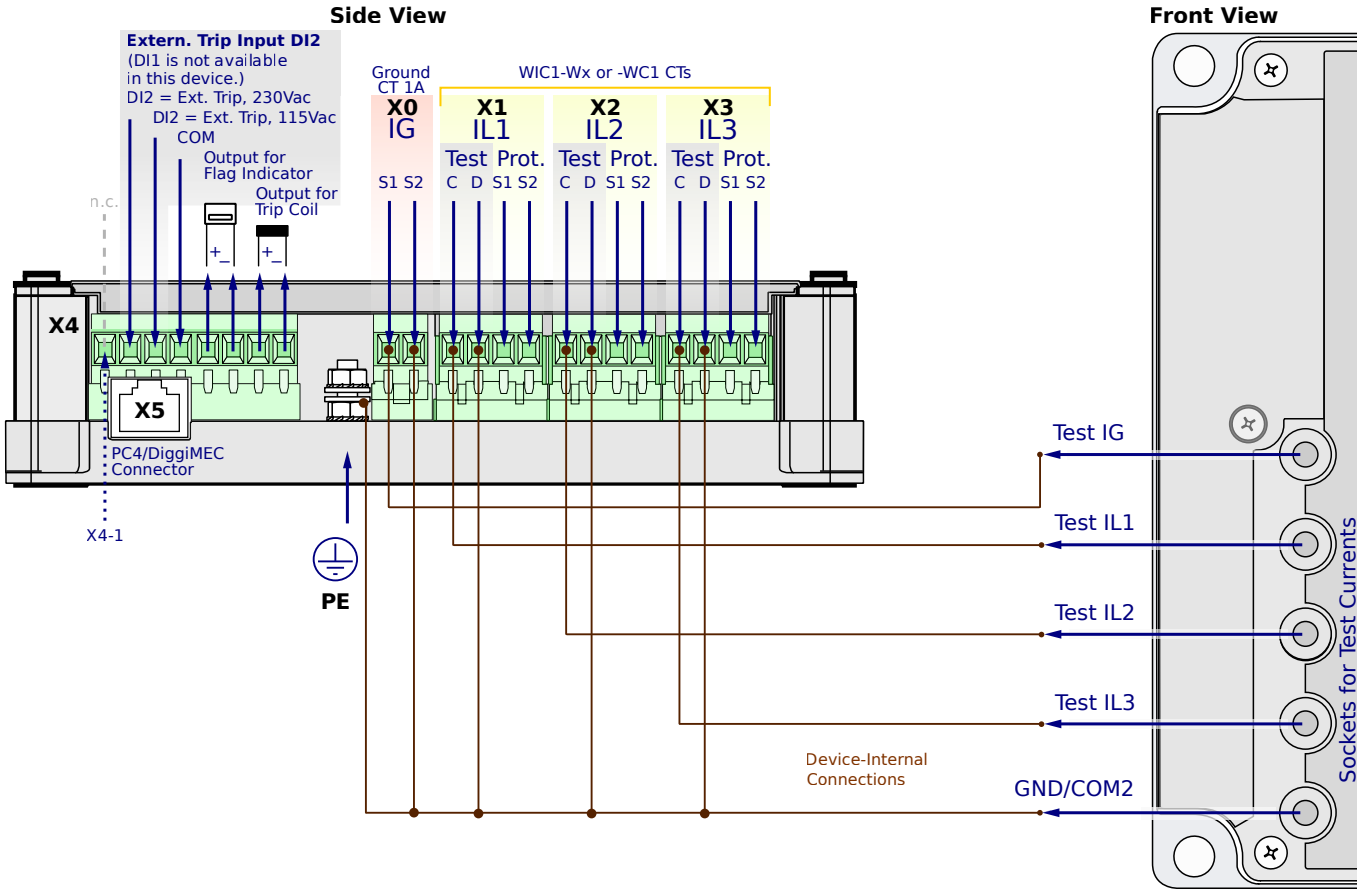


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2AAH

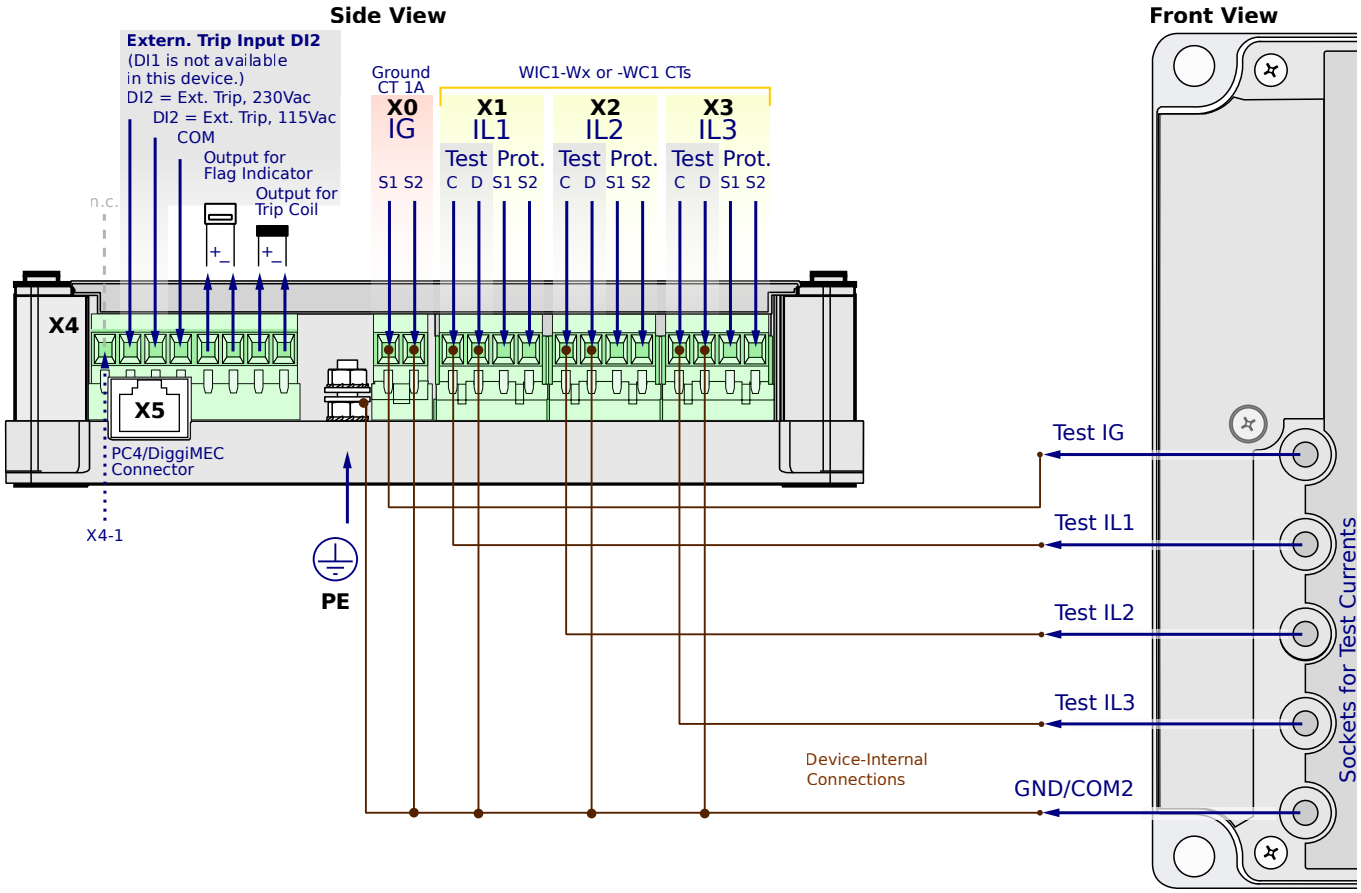


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2PA0

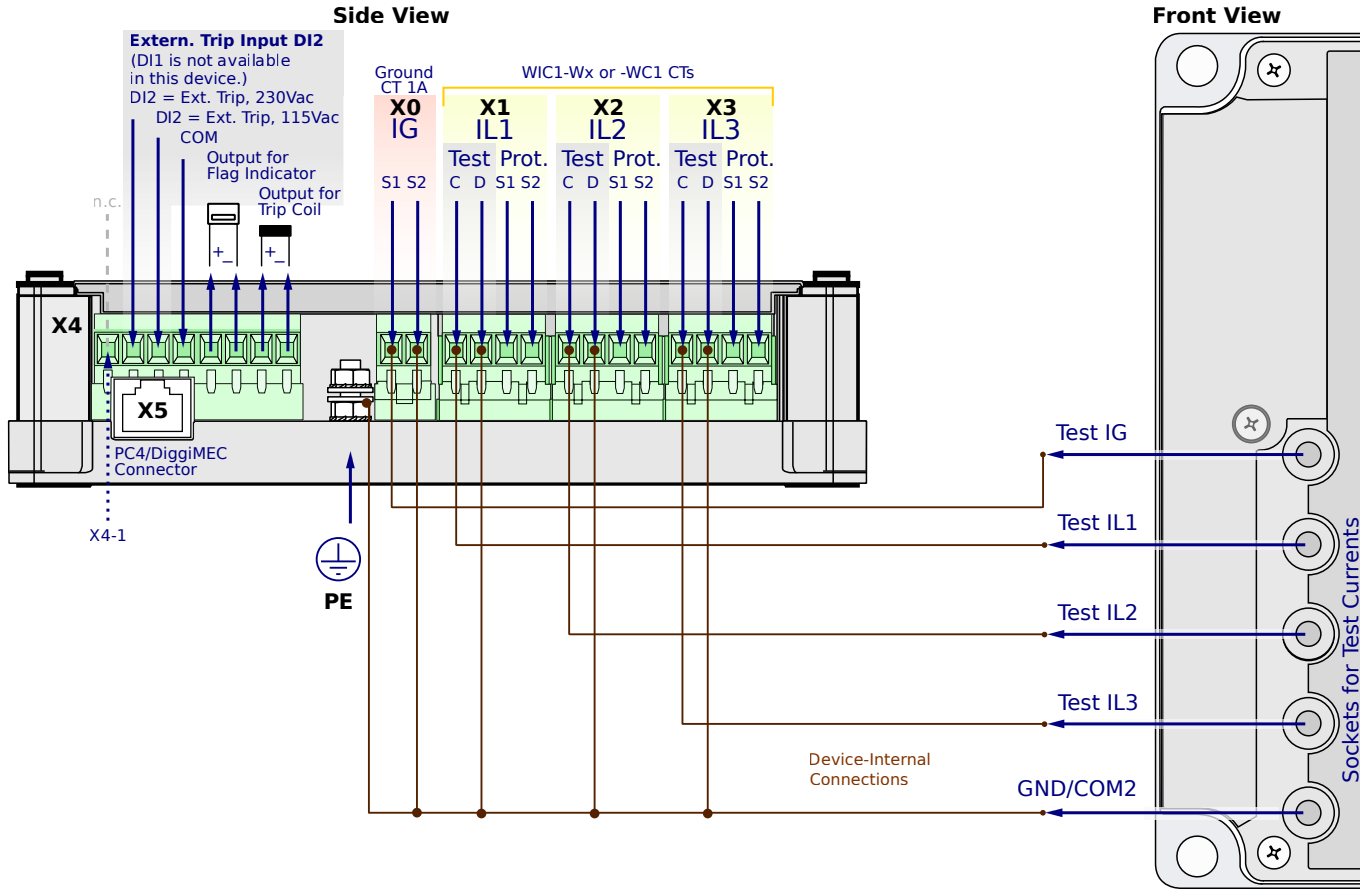


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CF2PAH

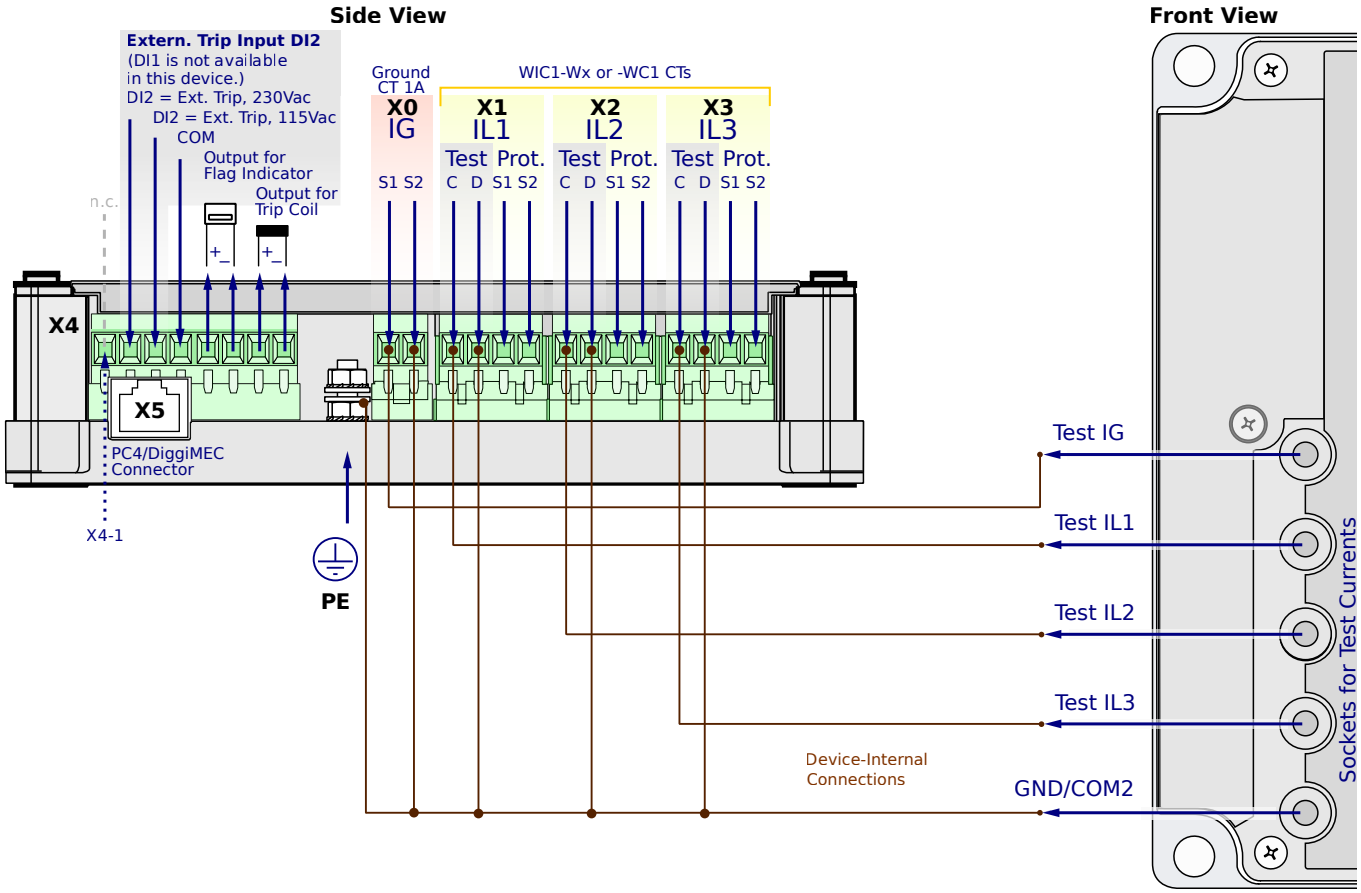


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1SA0

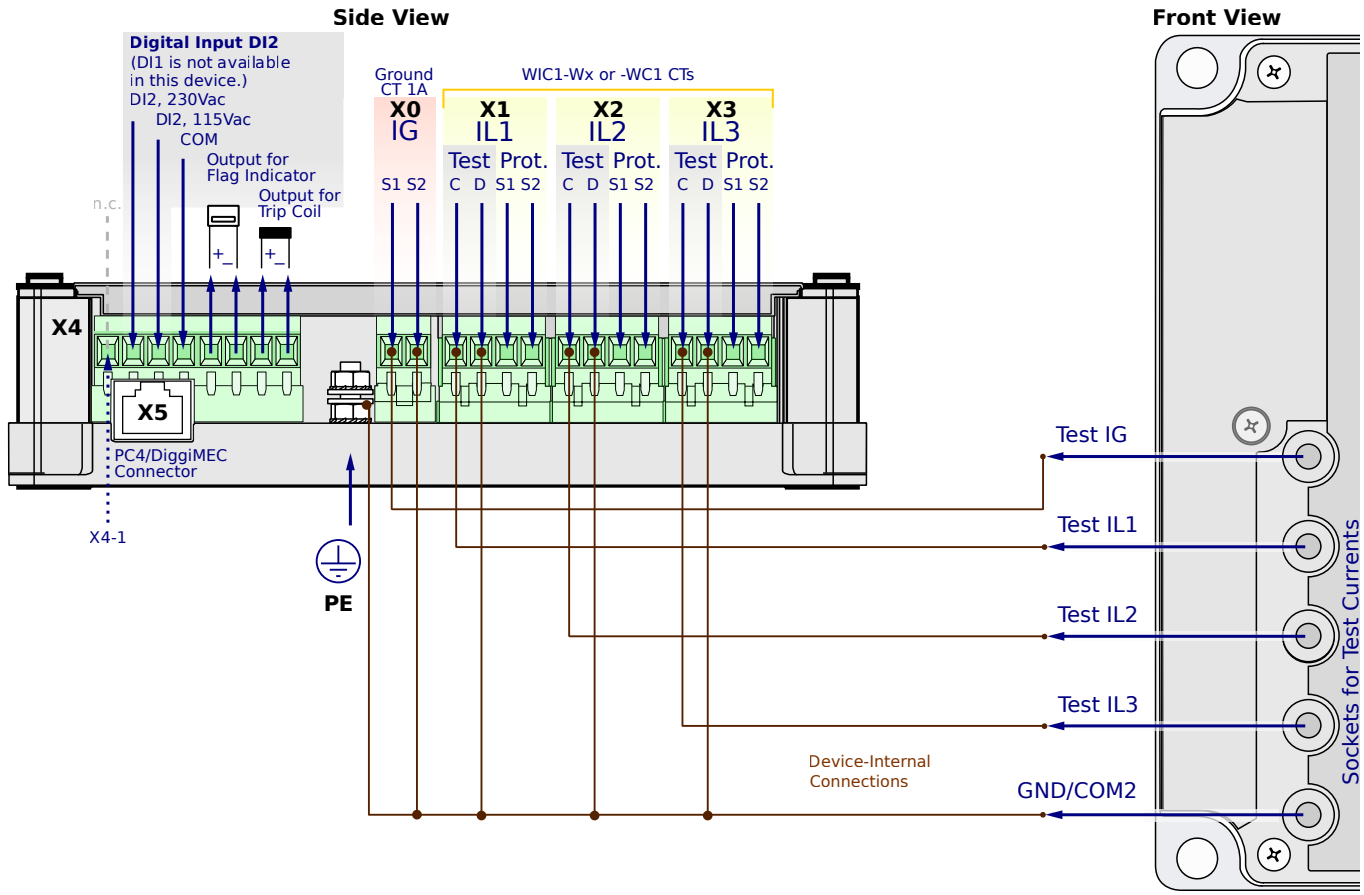


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1SAH

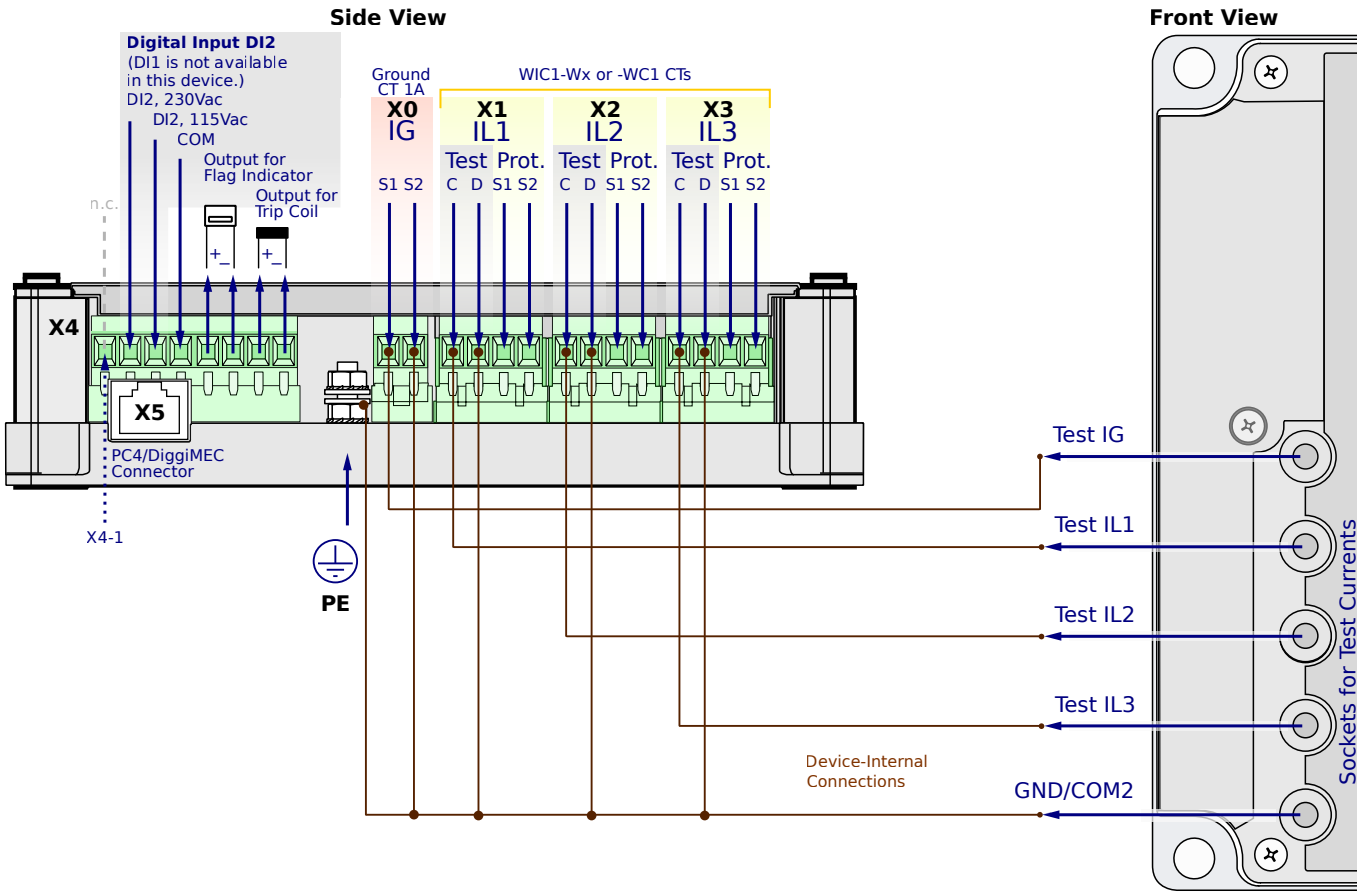


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1AA0

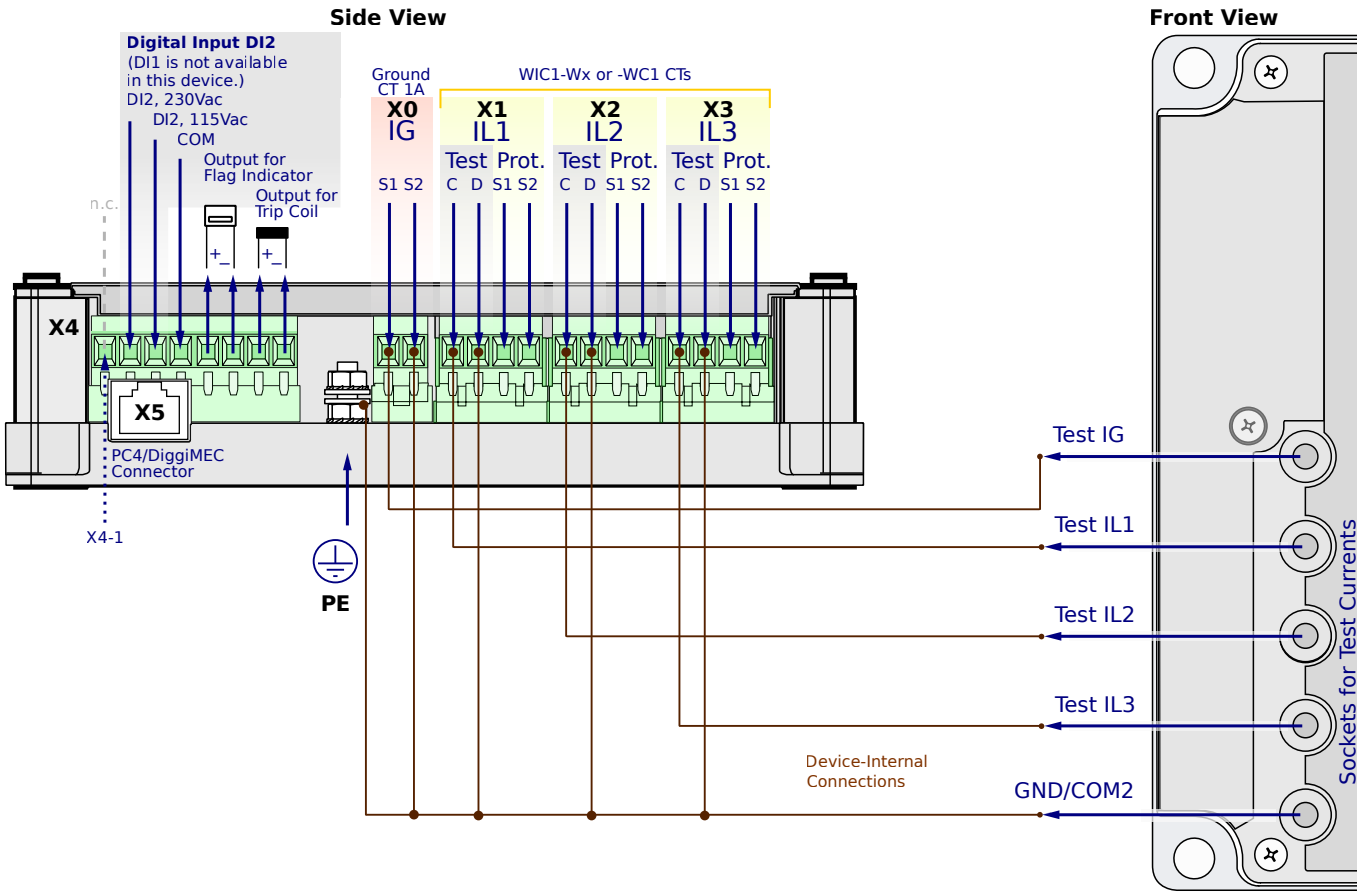


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1AAH

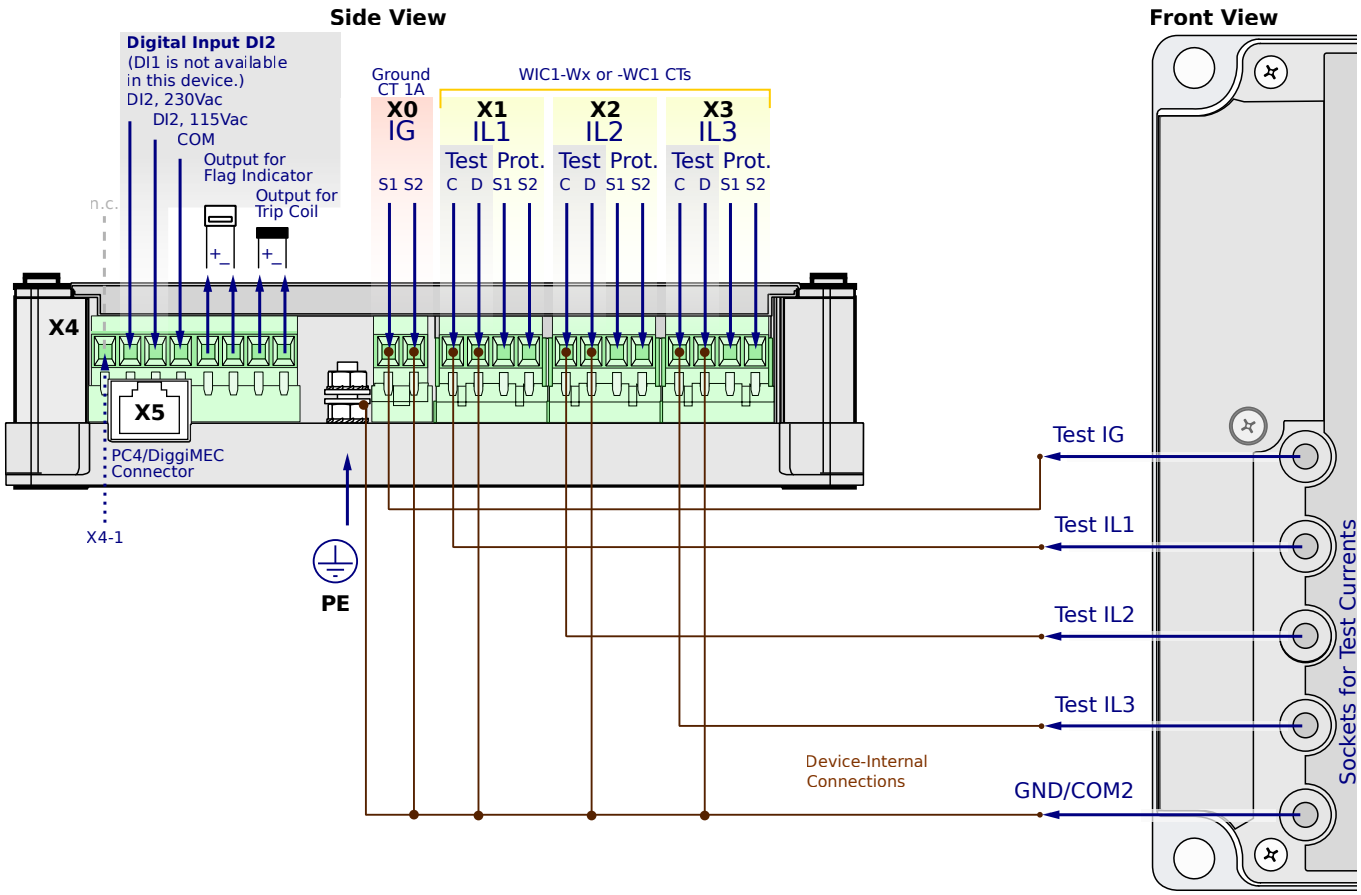


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1PA0

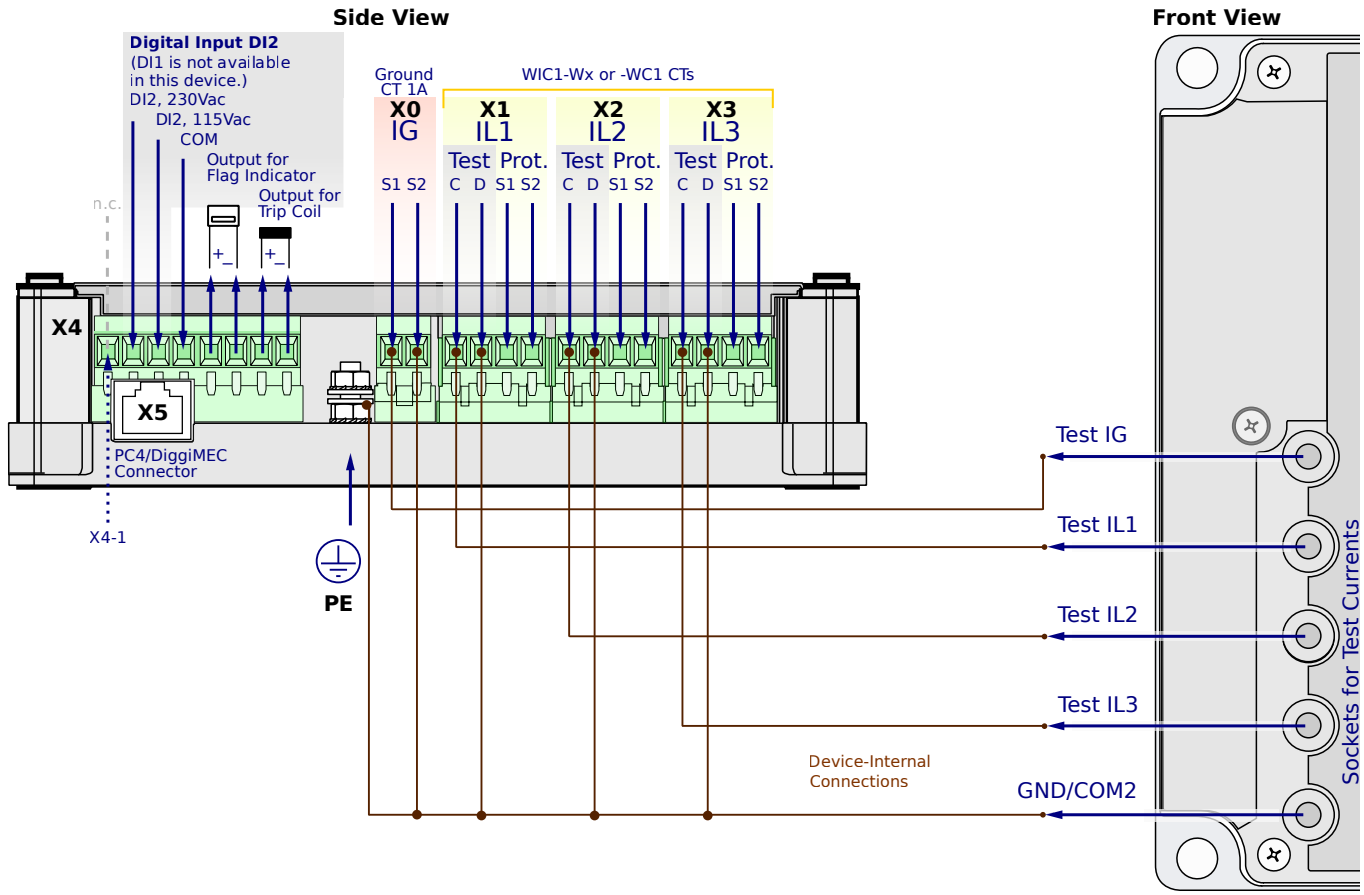


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC1PAH

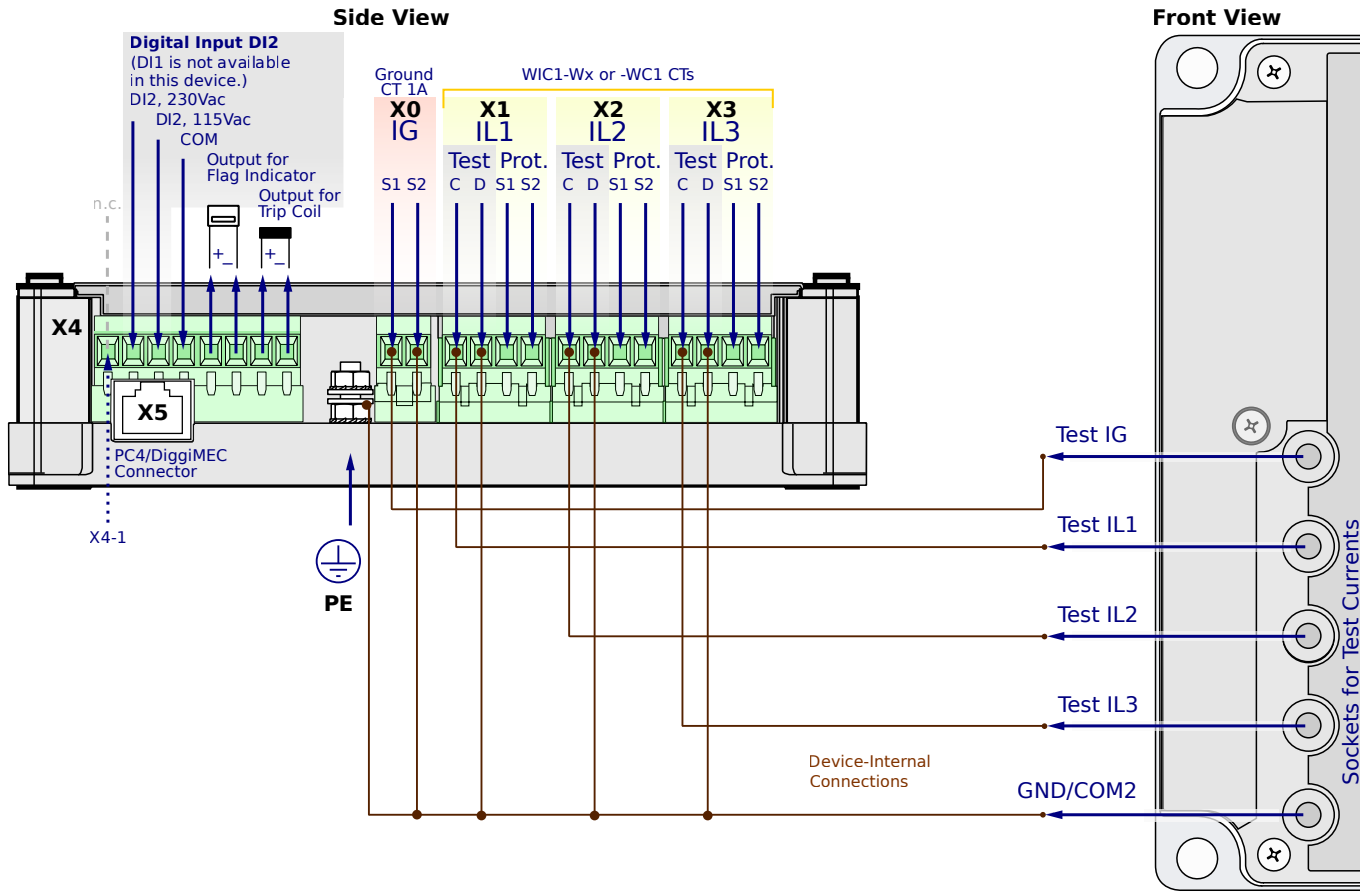


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2SA0

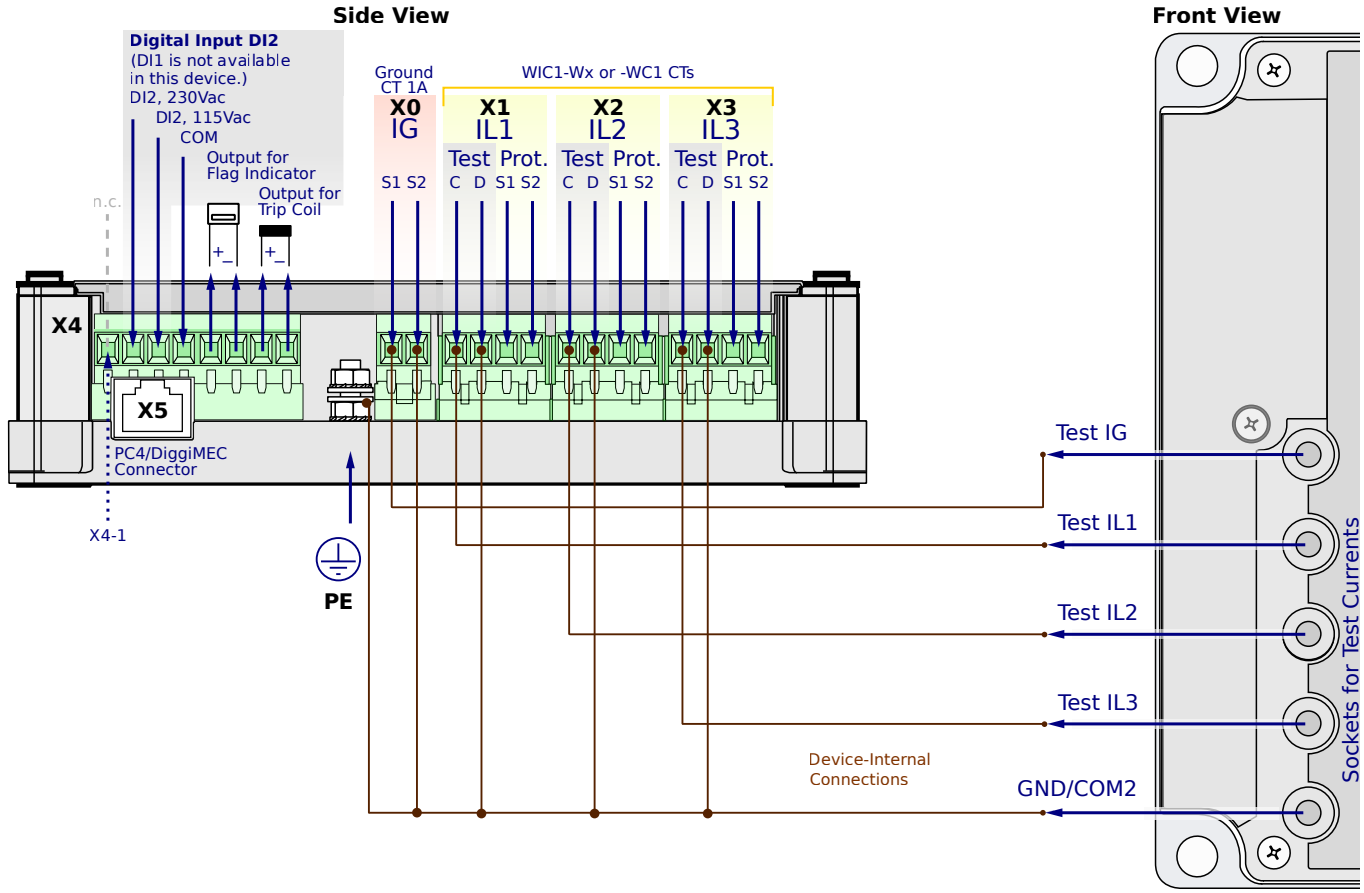


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2SAH

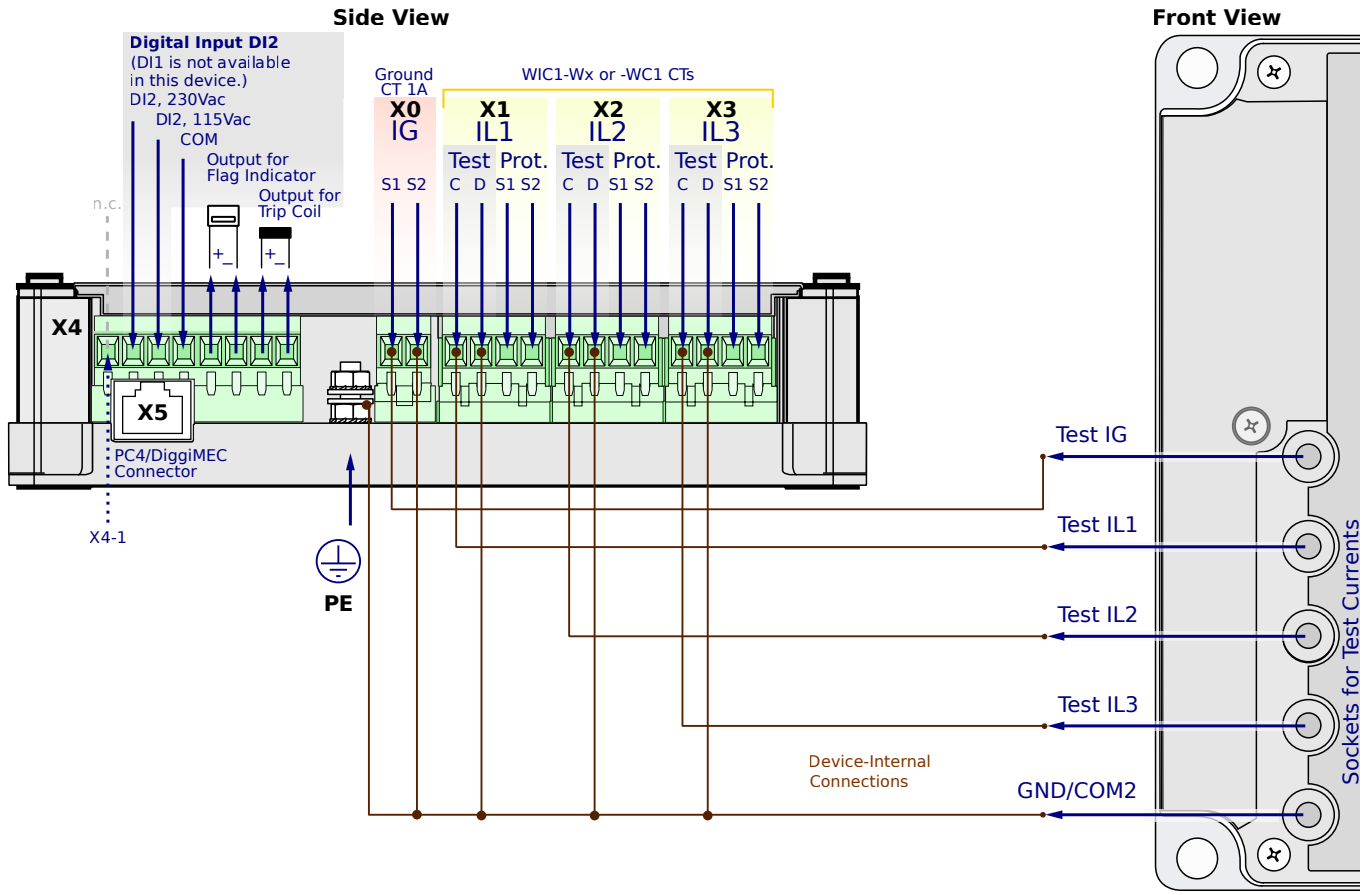


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2AA0

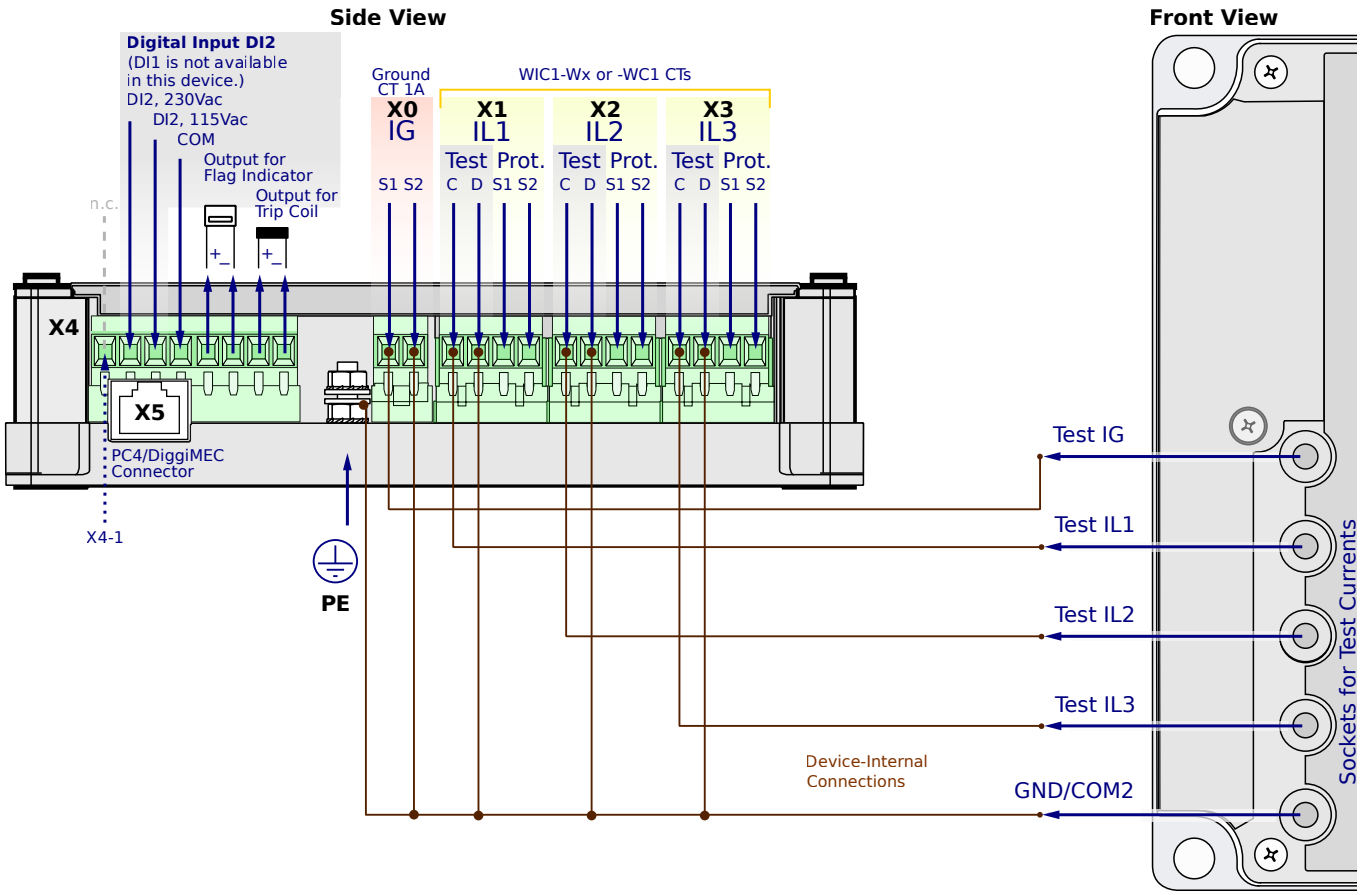


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2AAH

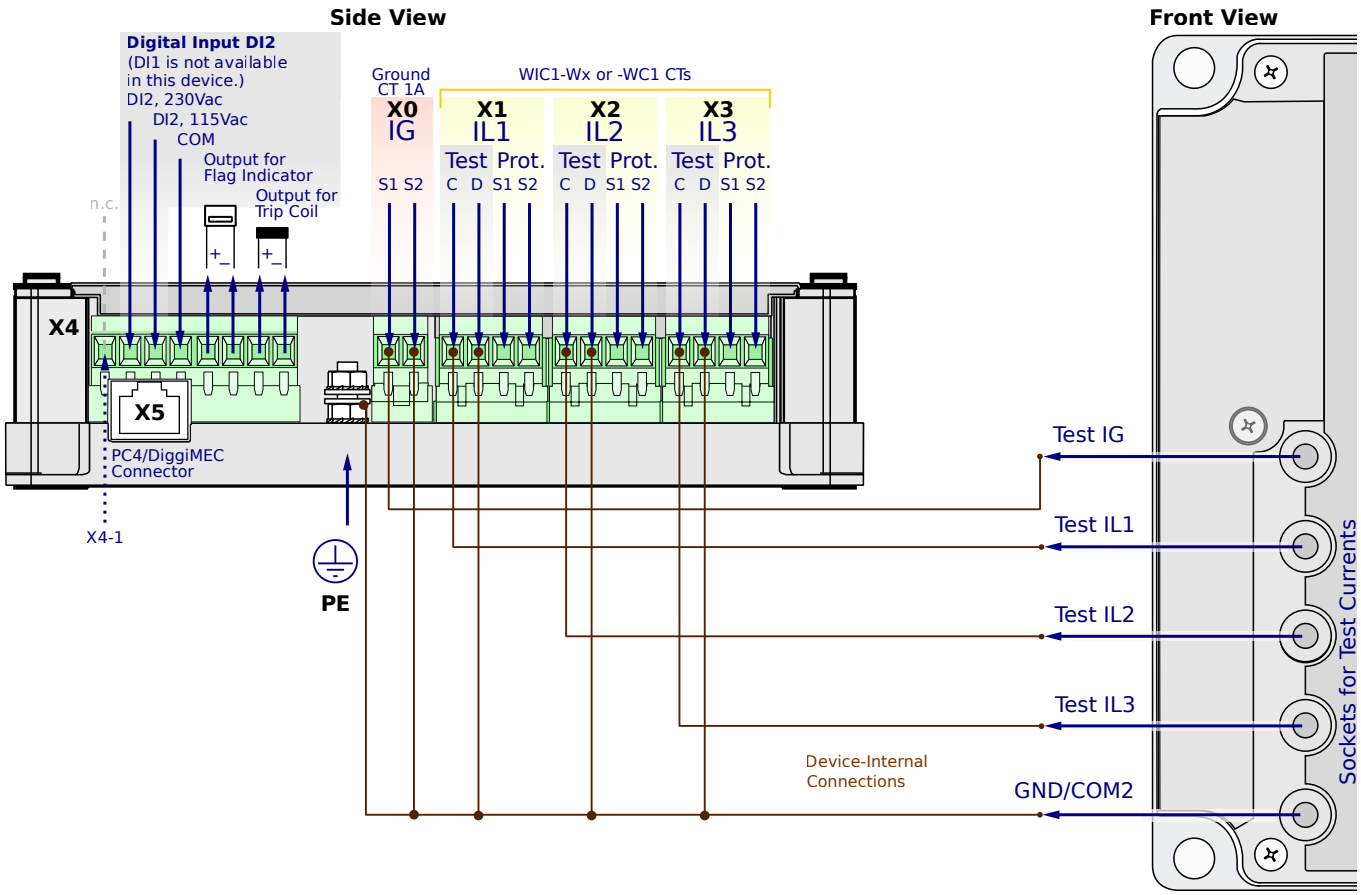


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2PA0

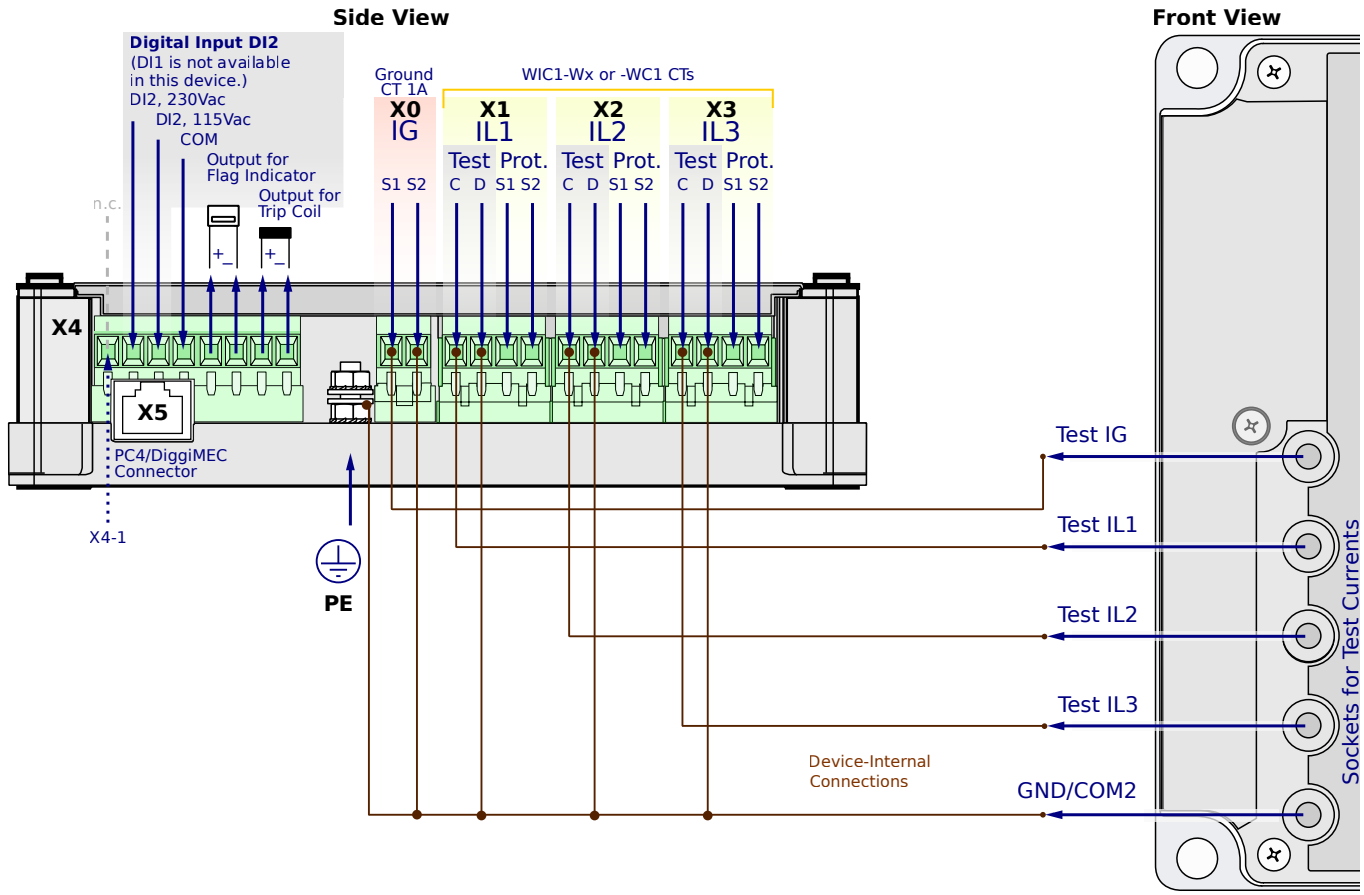


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG5CC2PAH

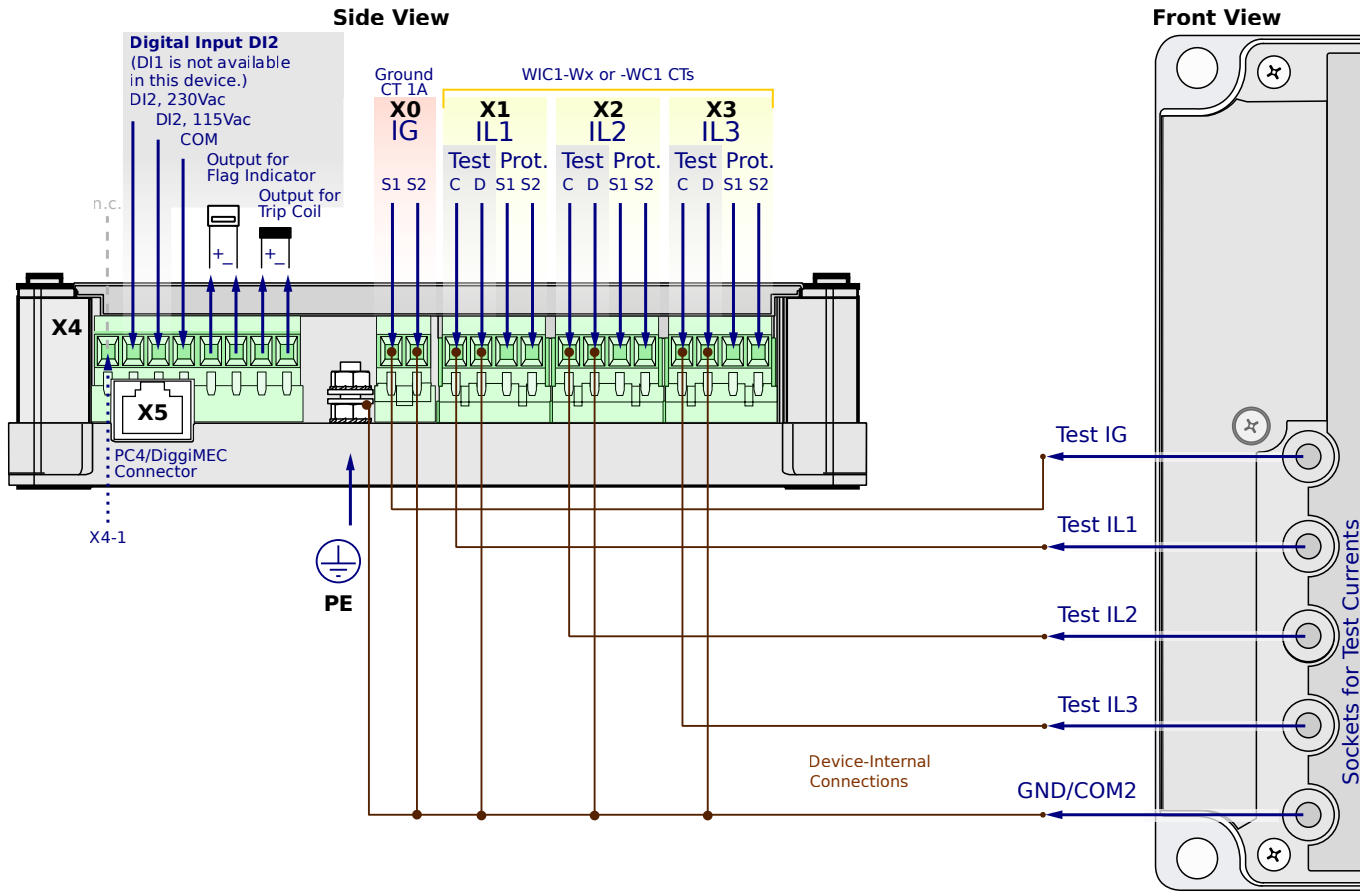


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0SA0

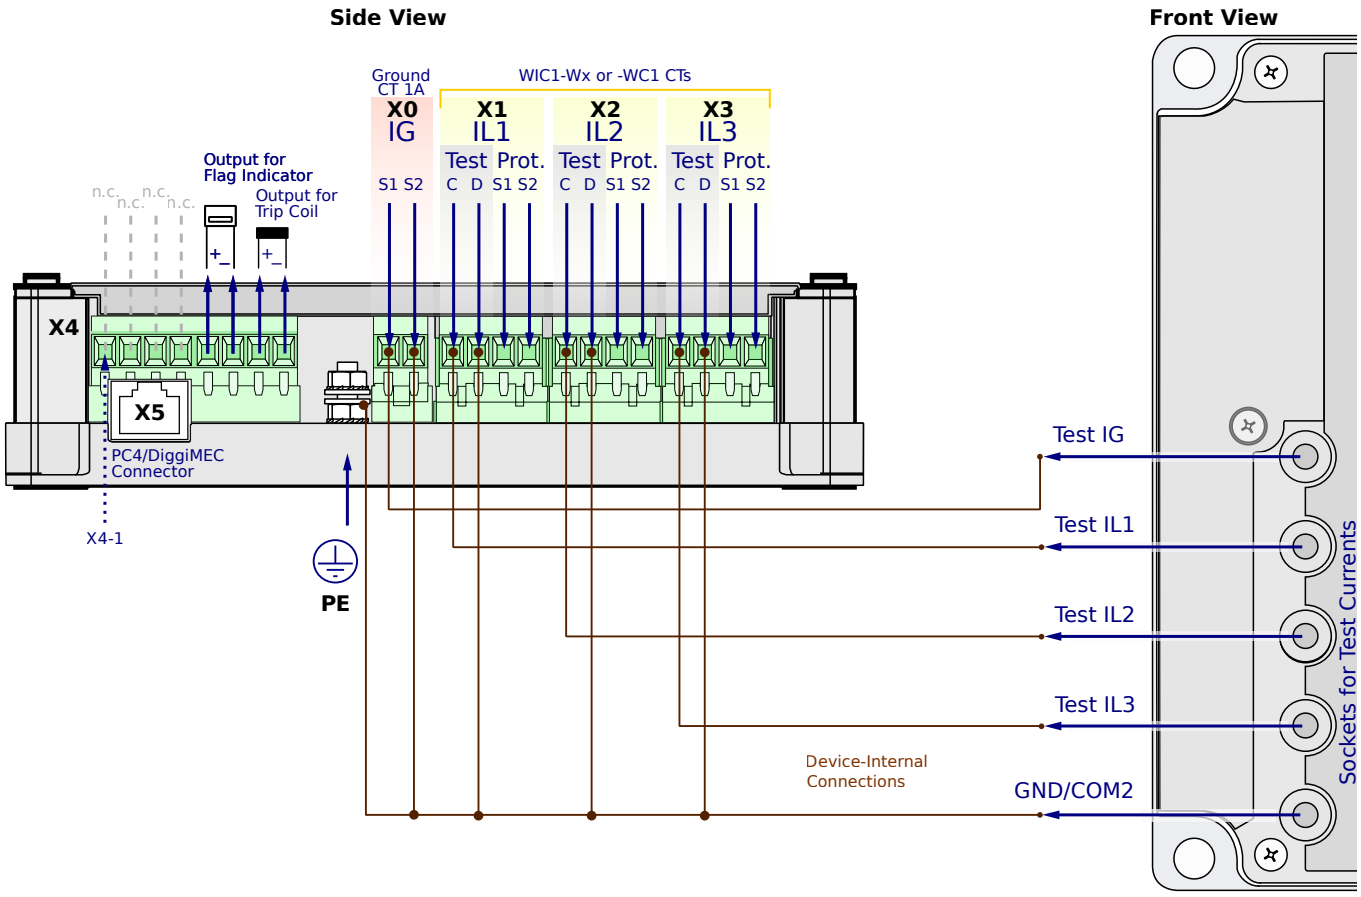


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0SAH

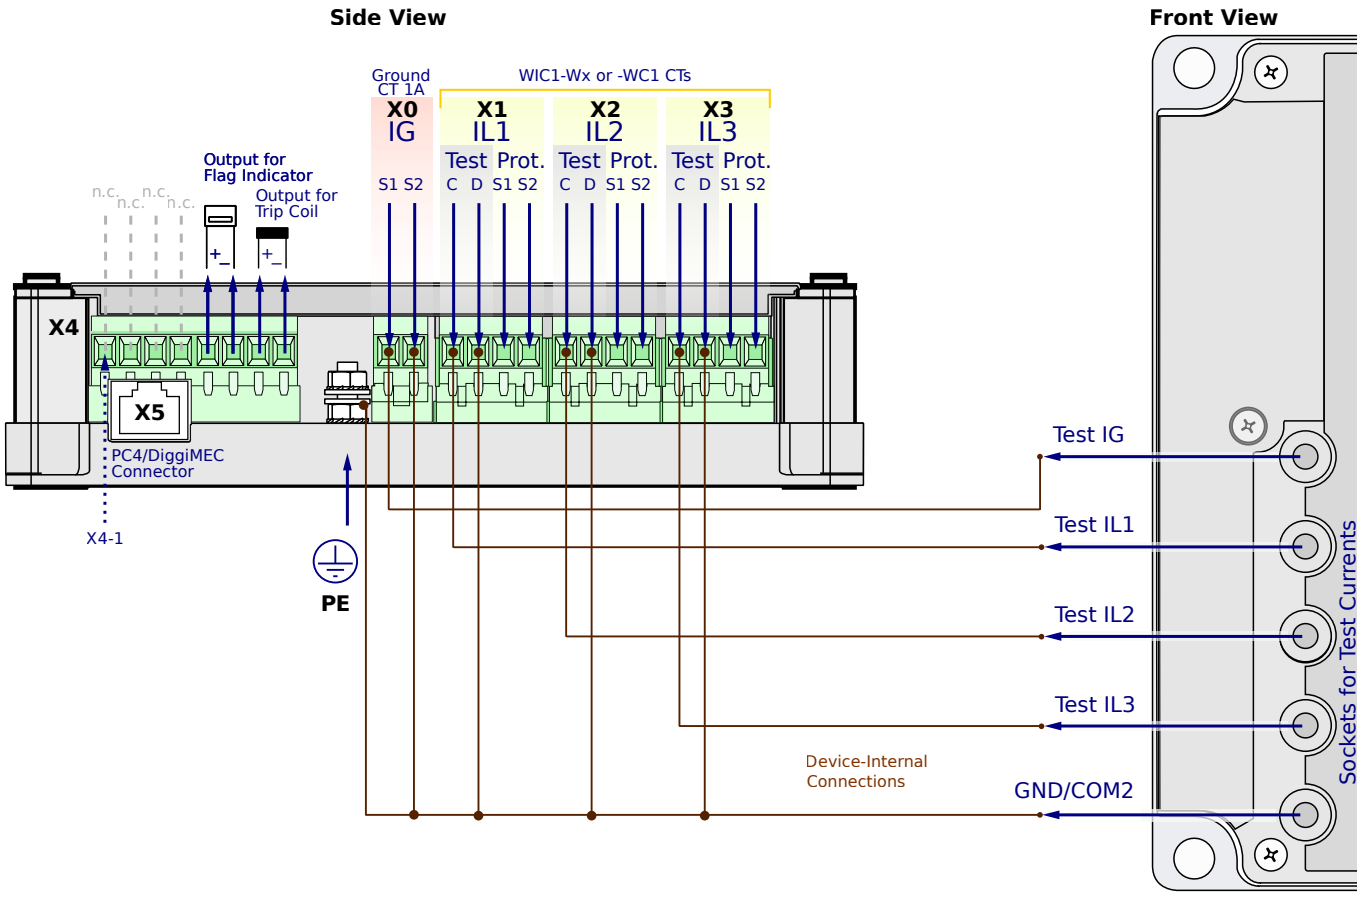


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0AA0

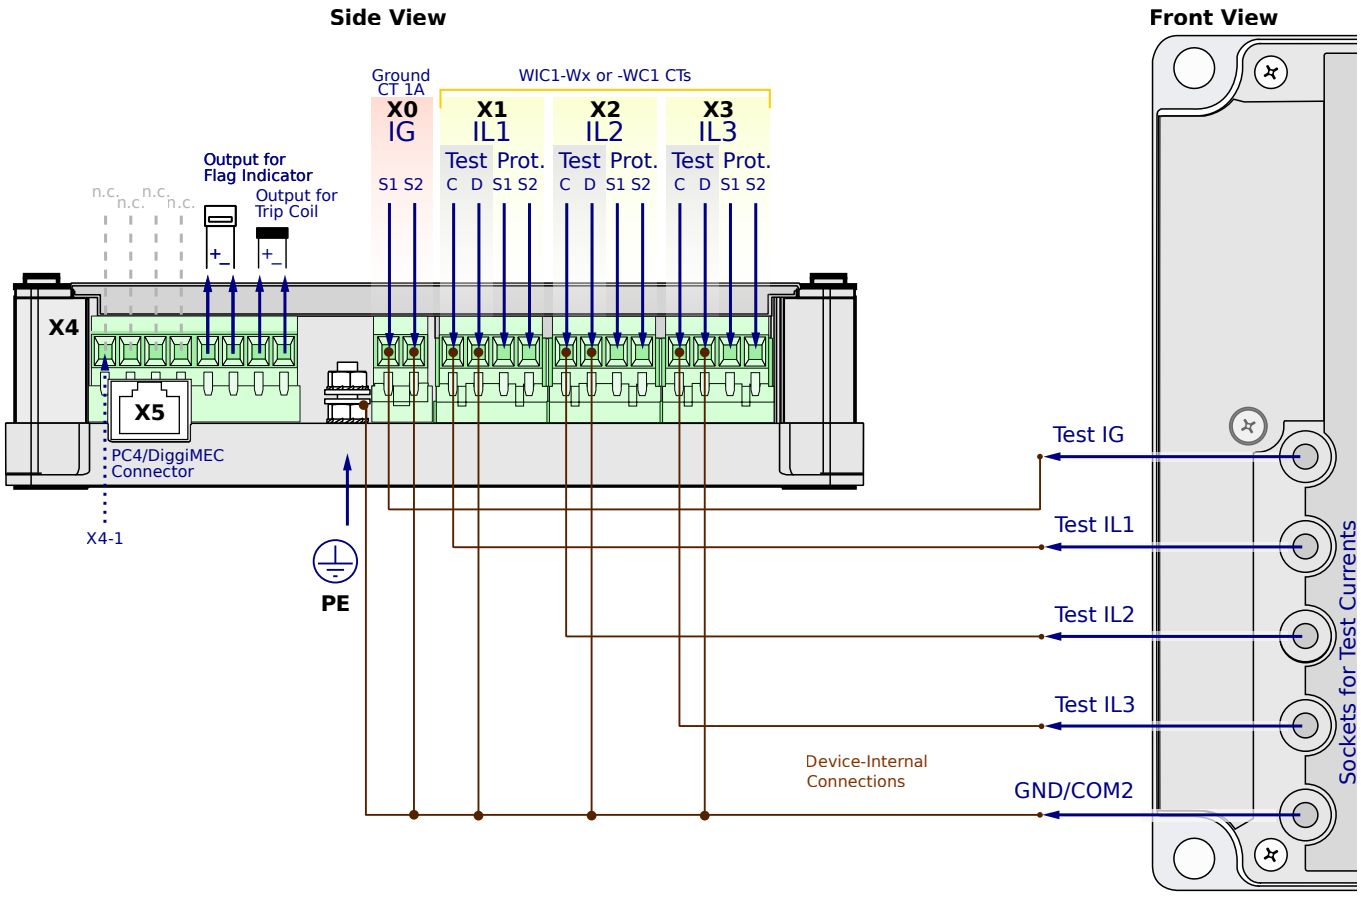


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0AAH

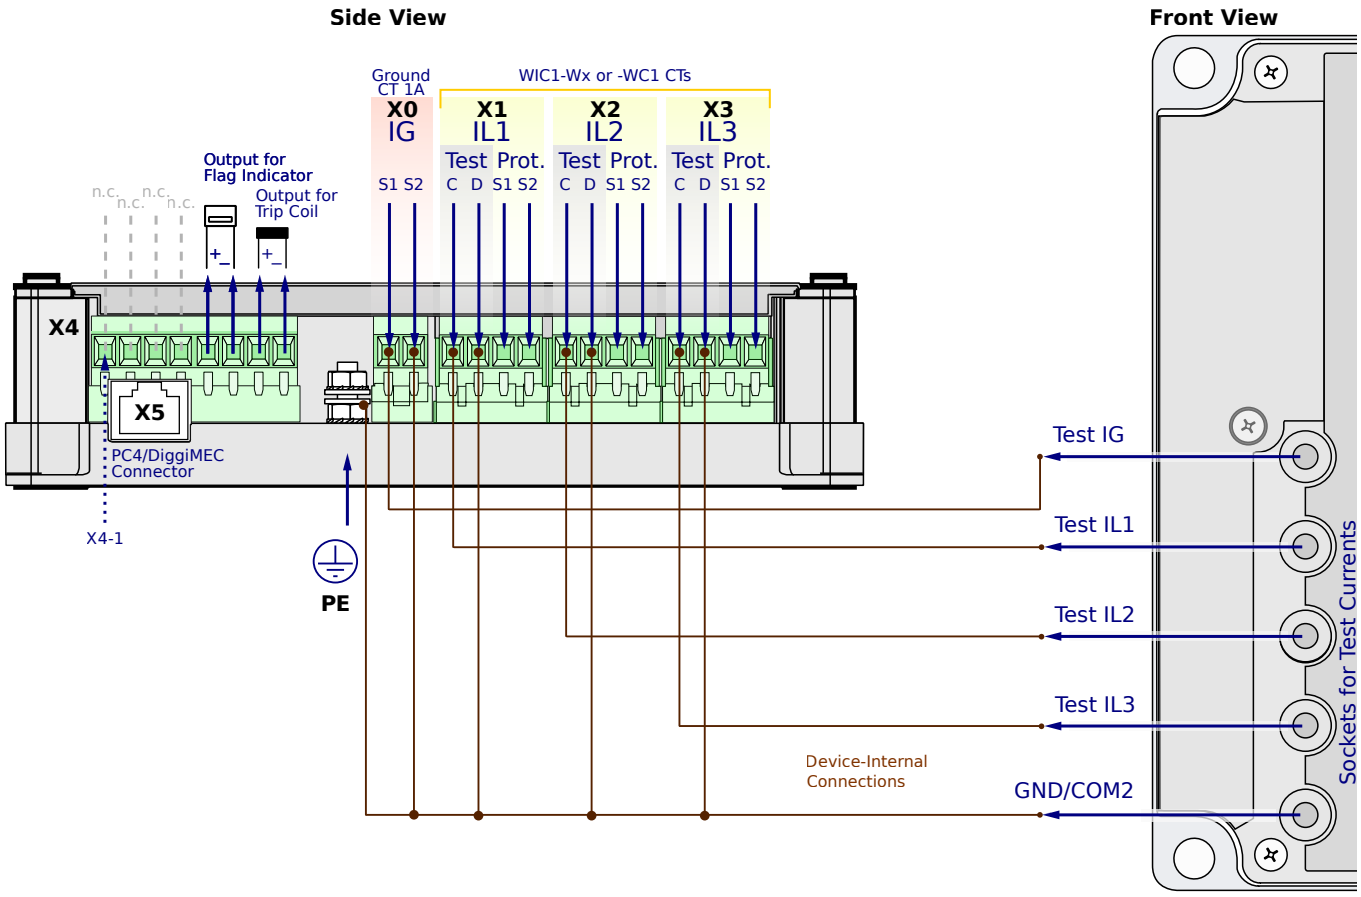


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0PA0

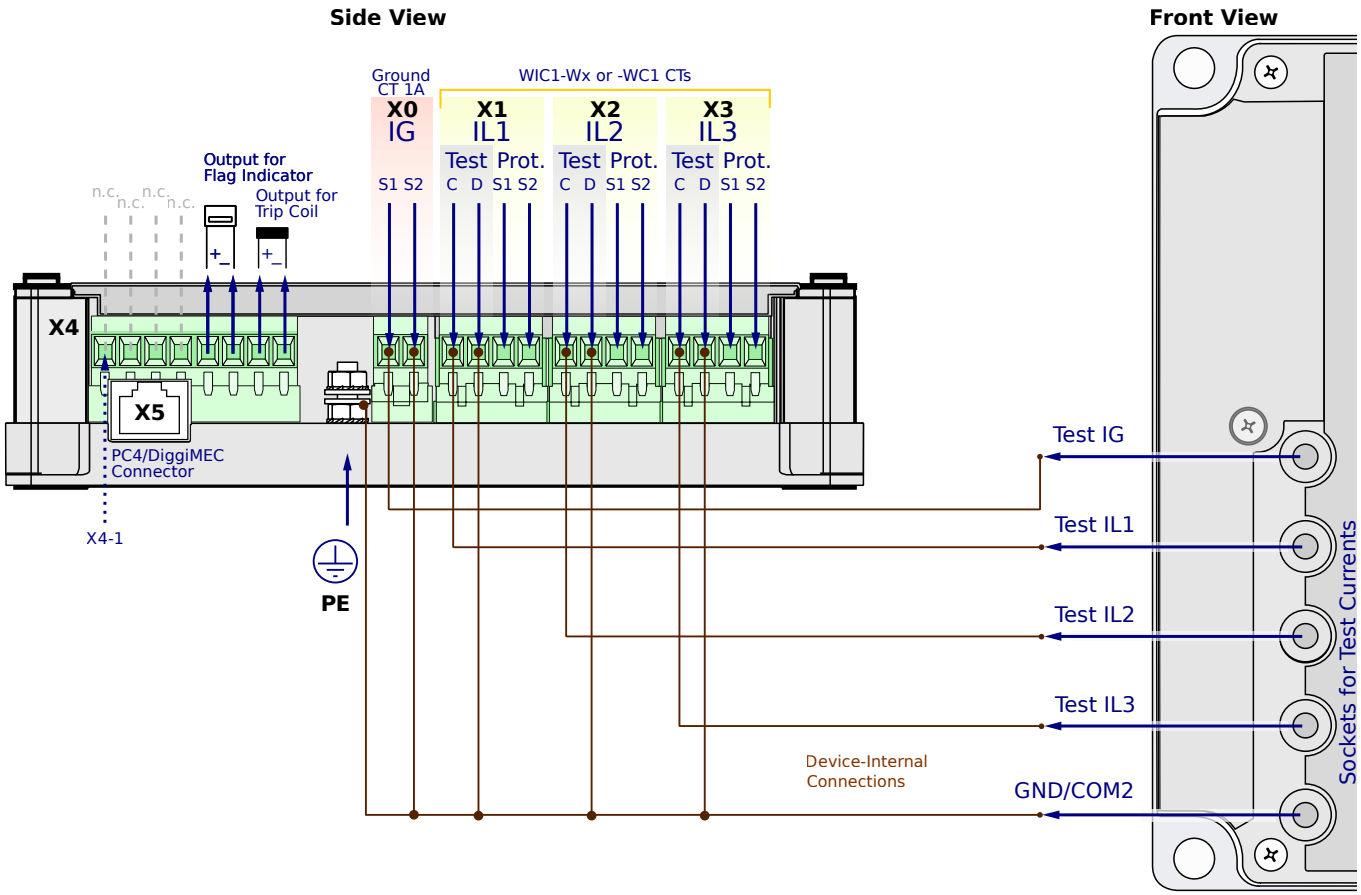


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN0PAH

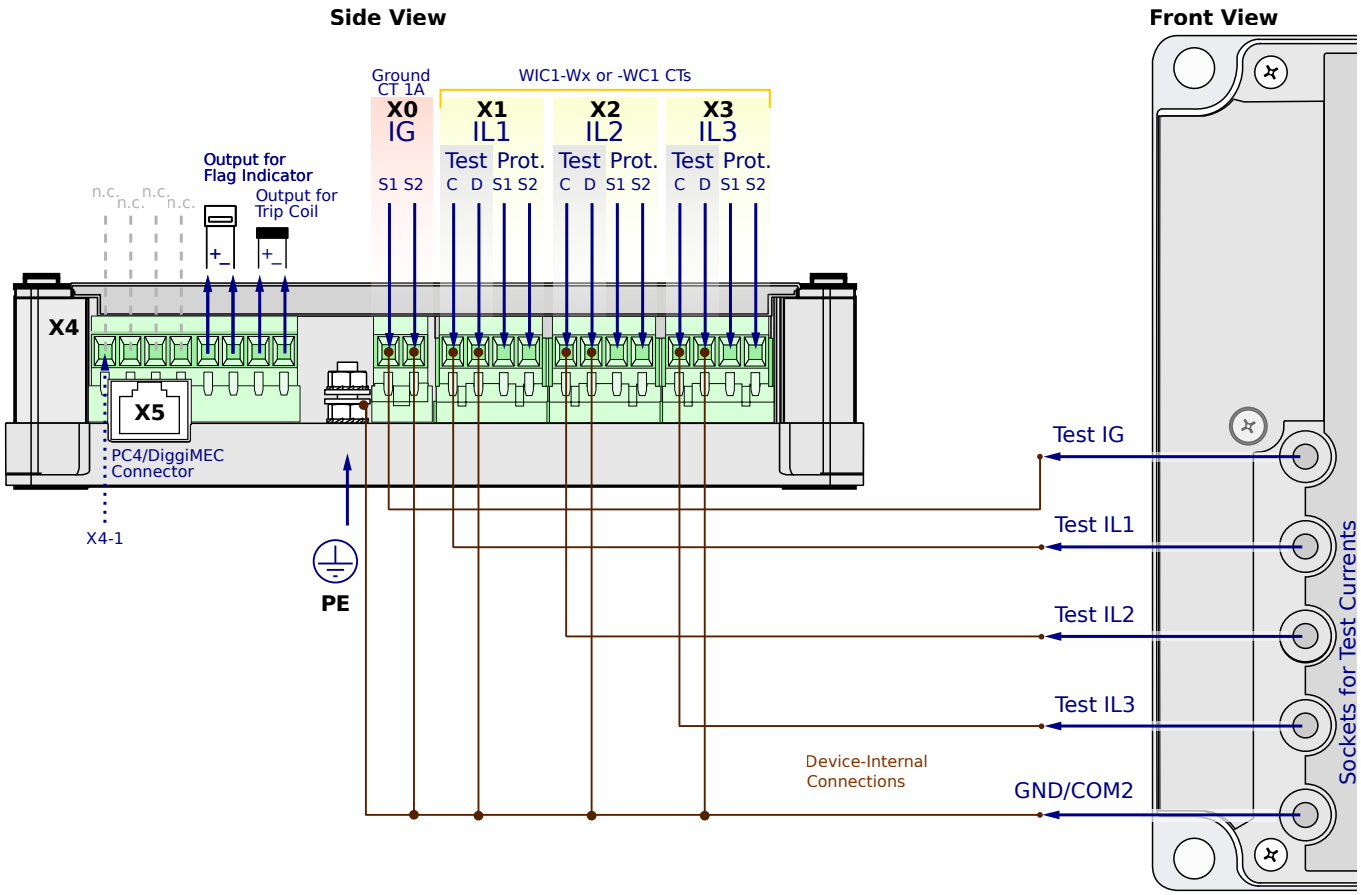


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1SA0

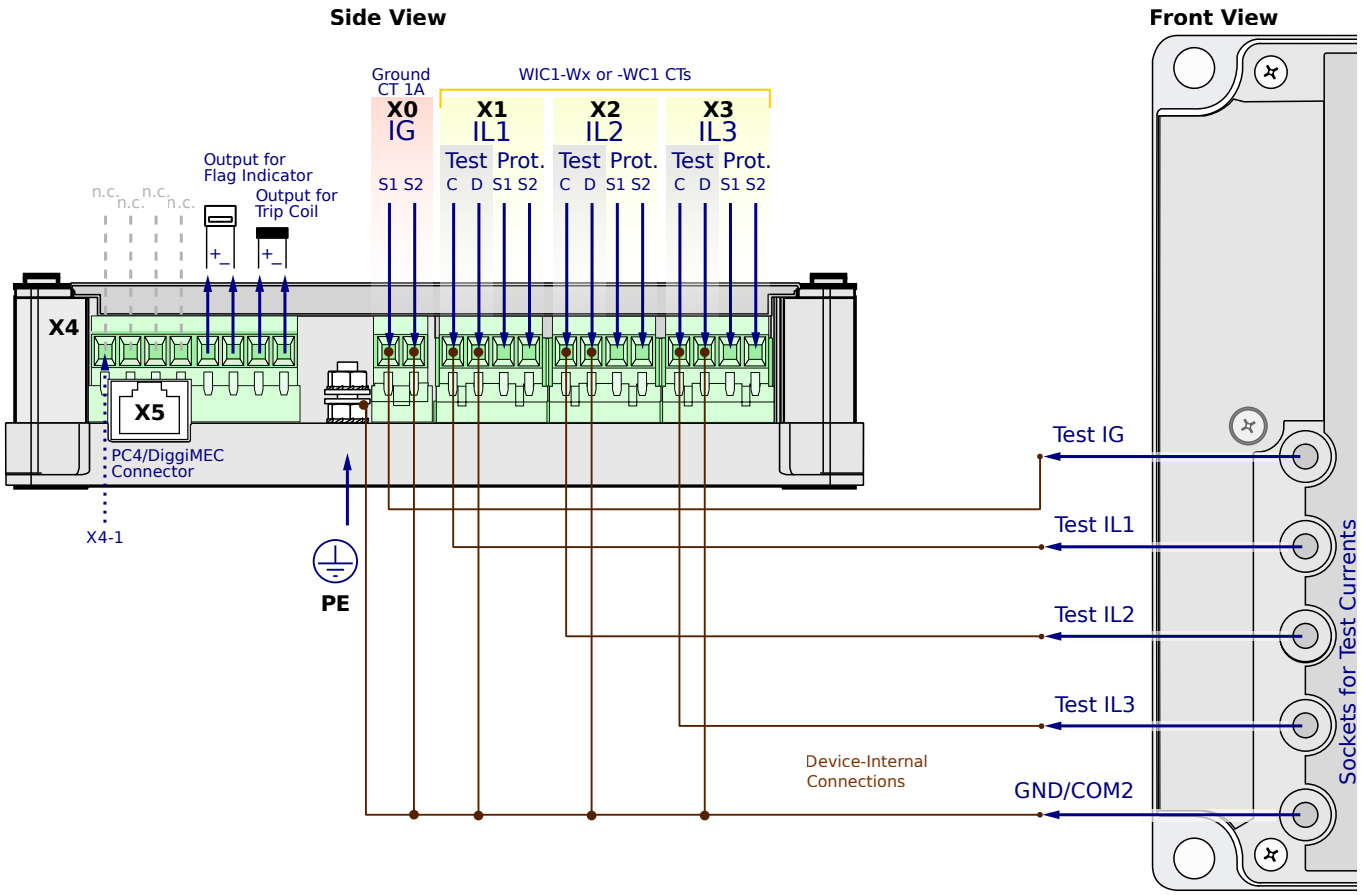


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1SAH

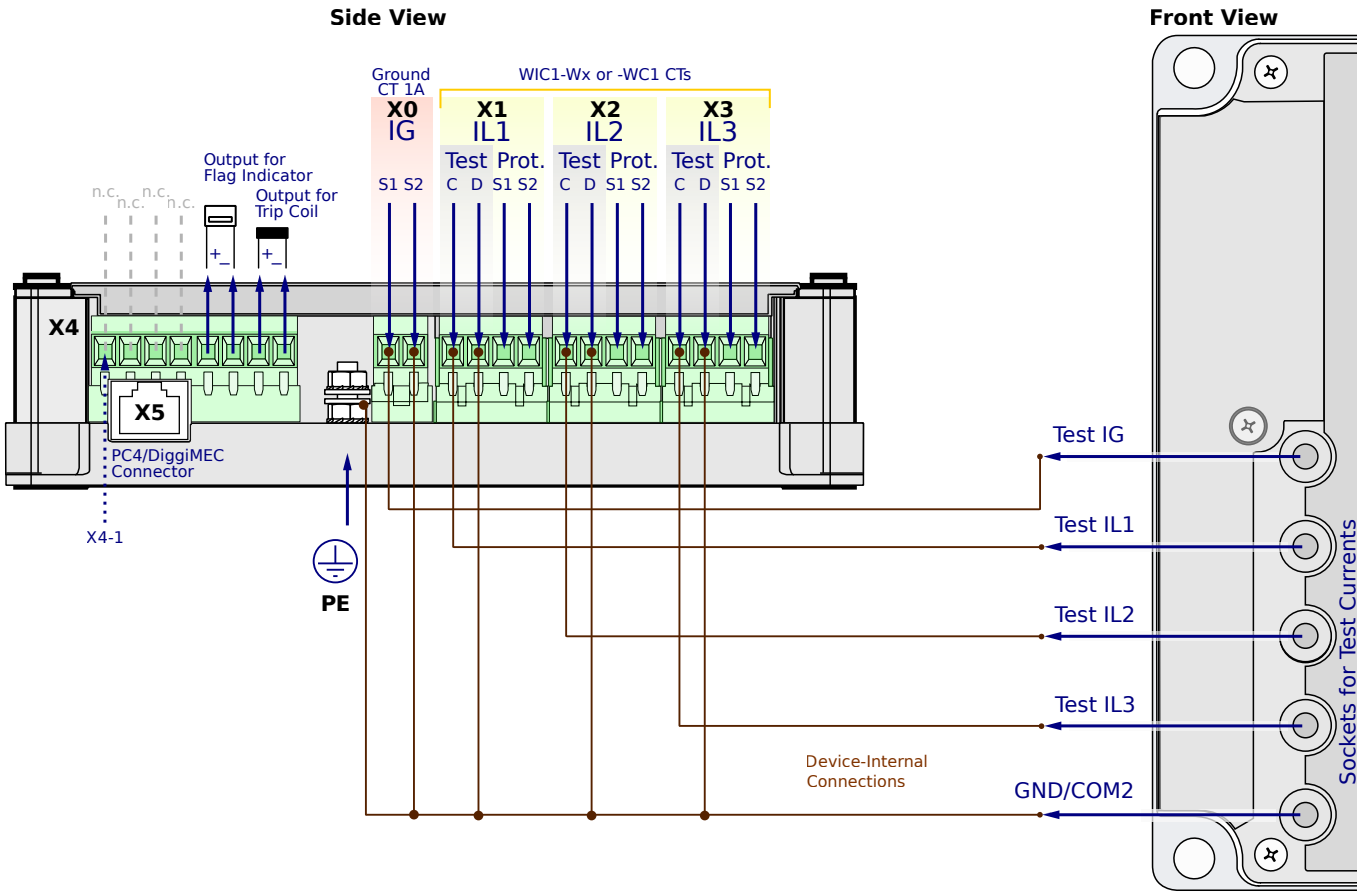


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1AA0

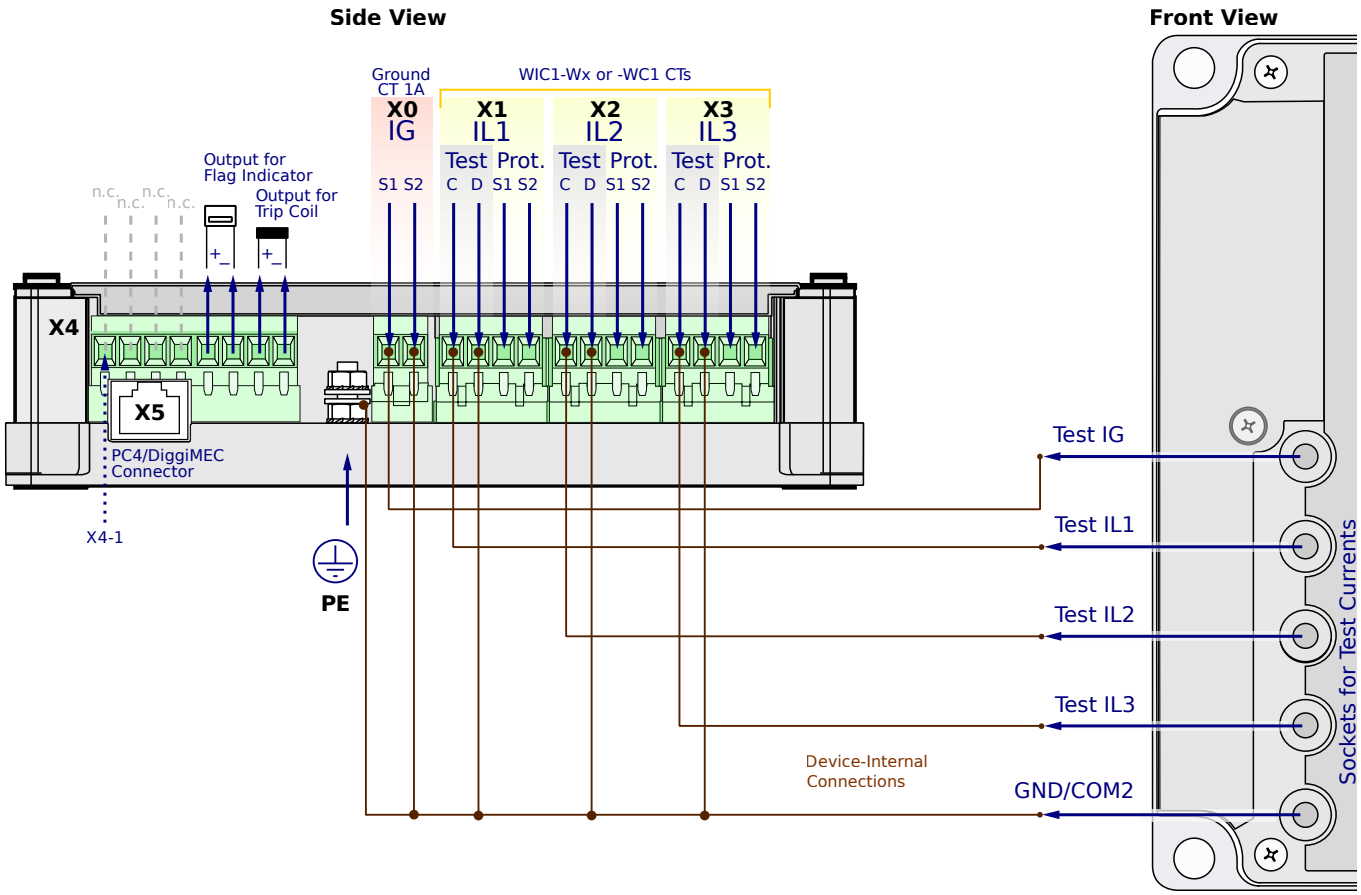


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1AAH

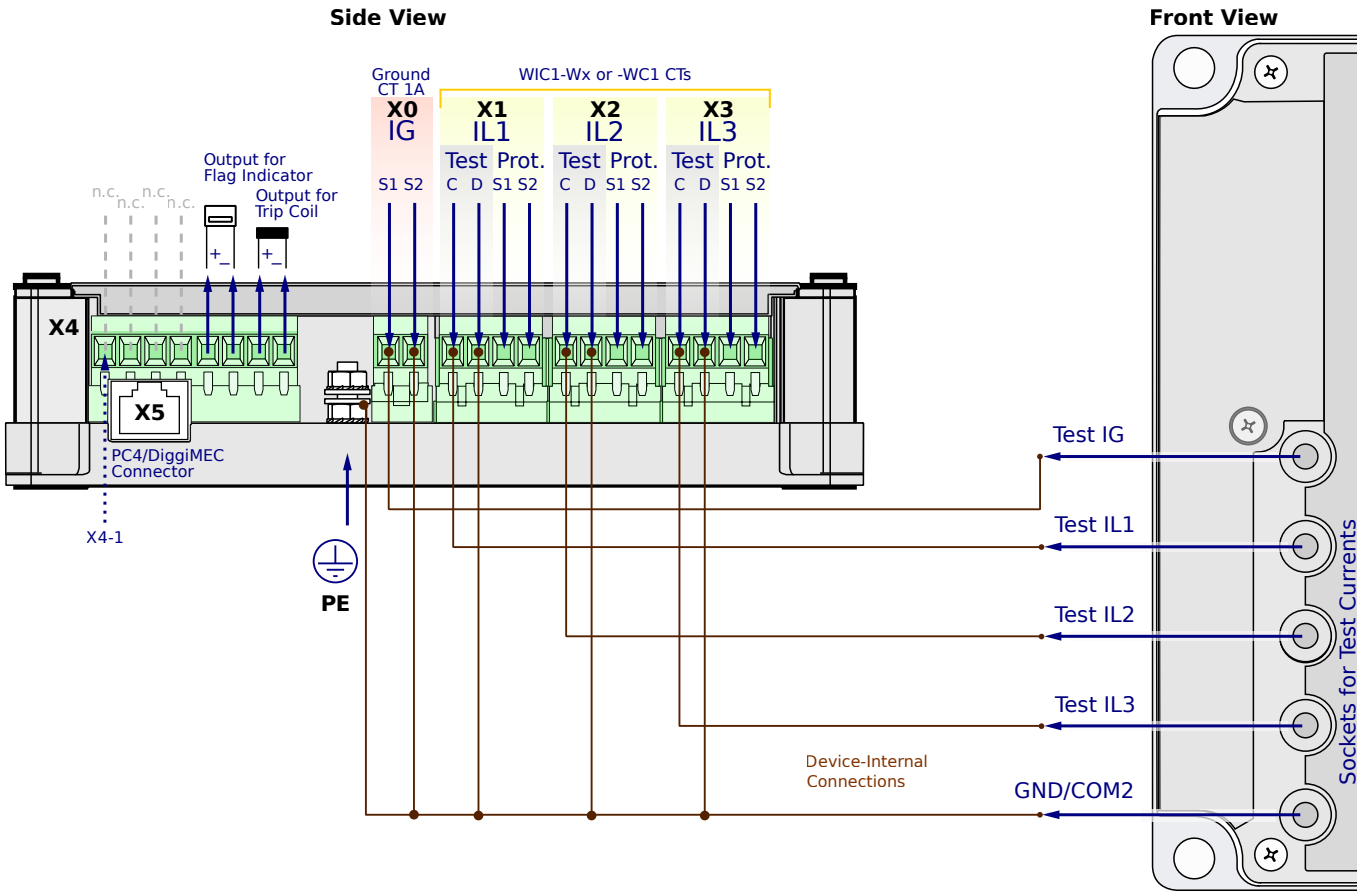


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1PA0

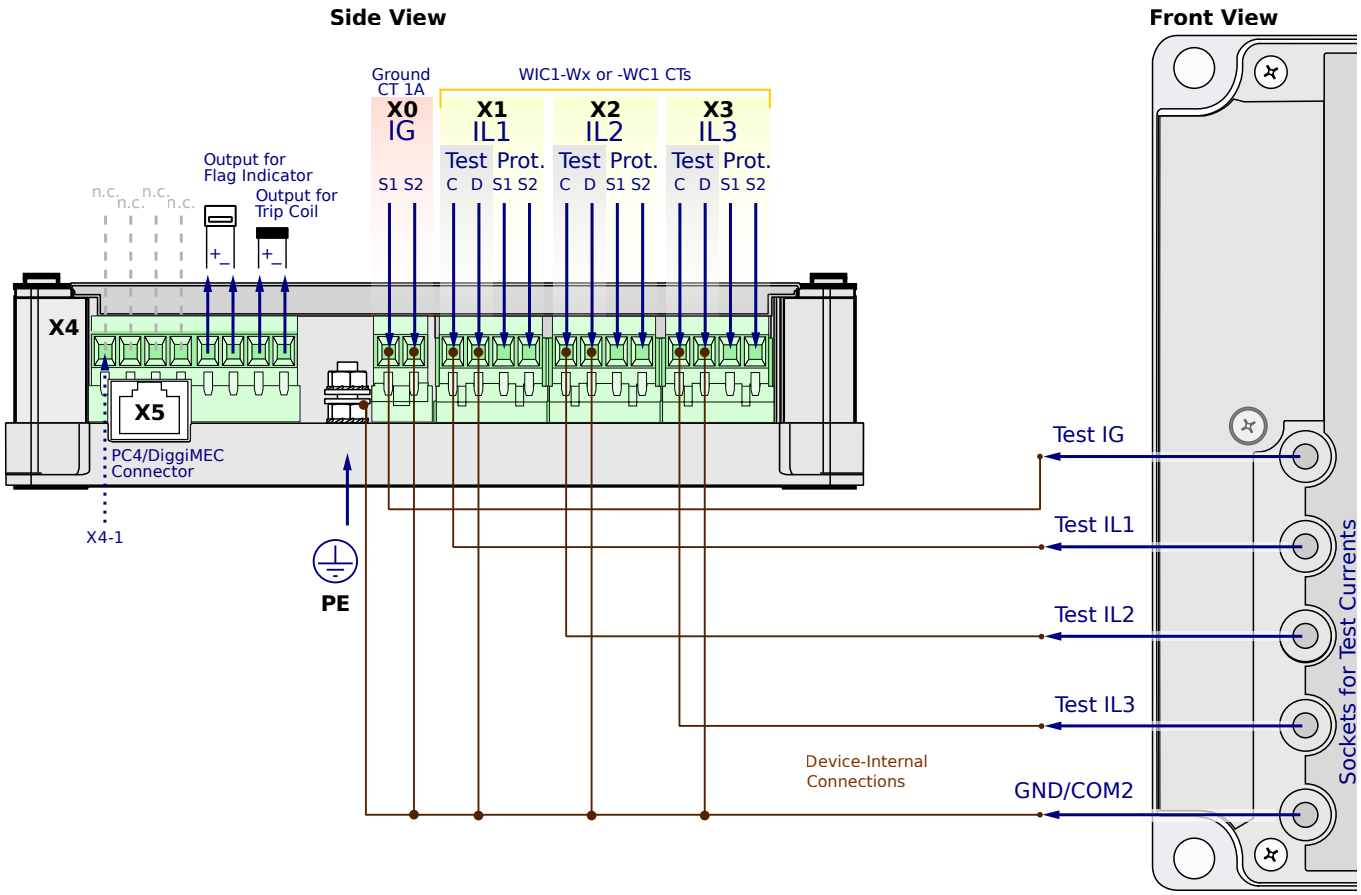


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN1PAH

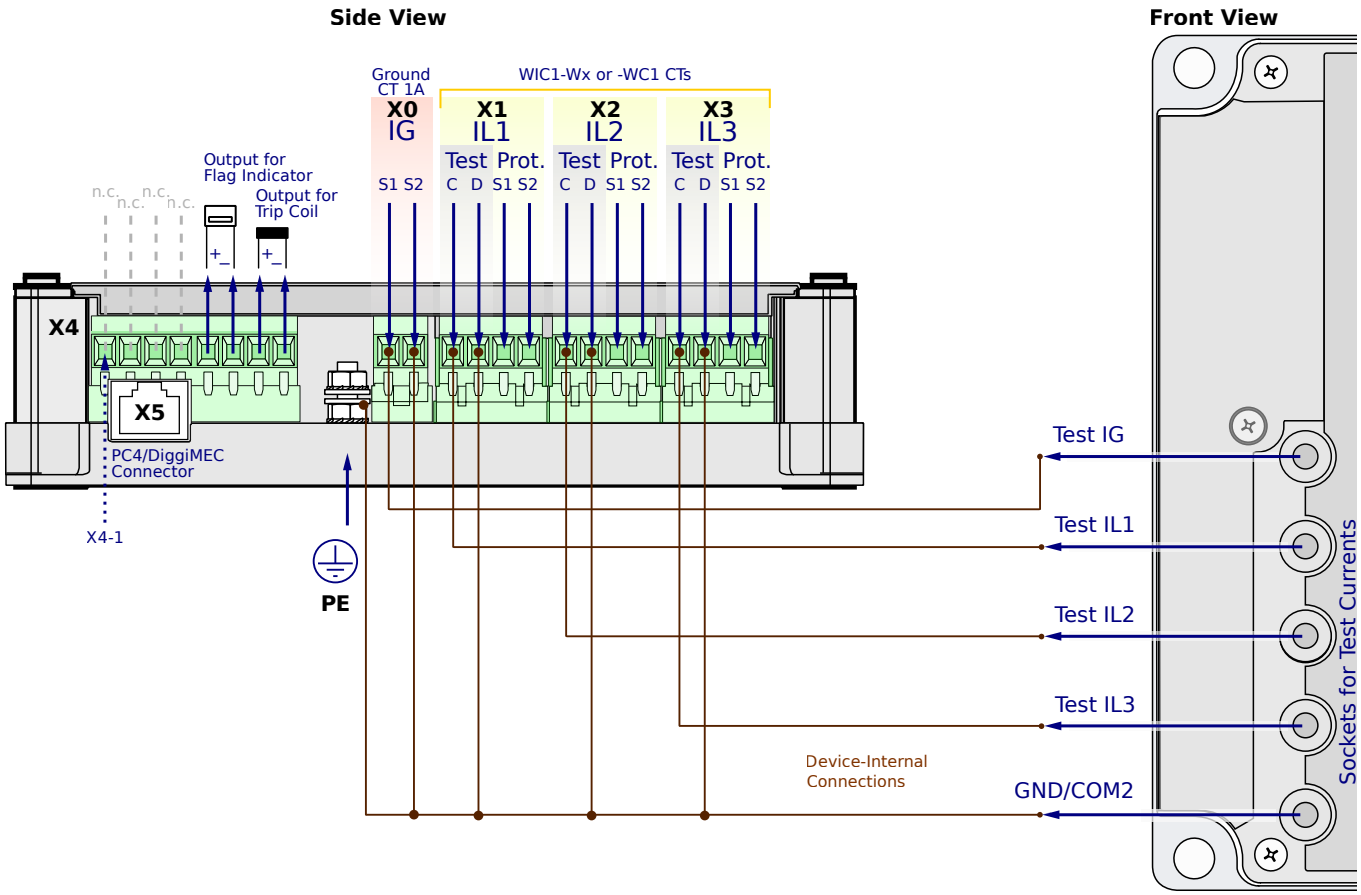


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2SA0

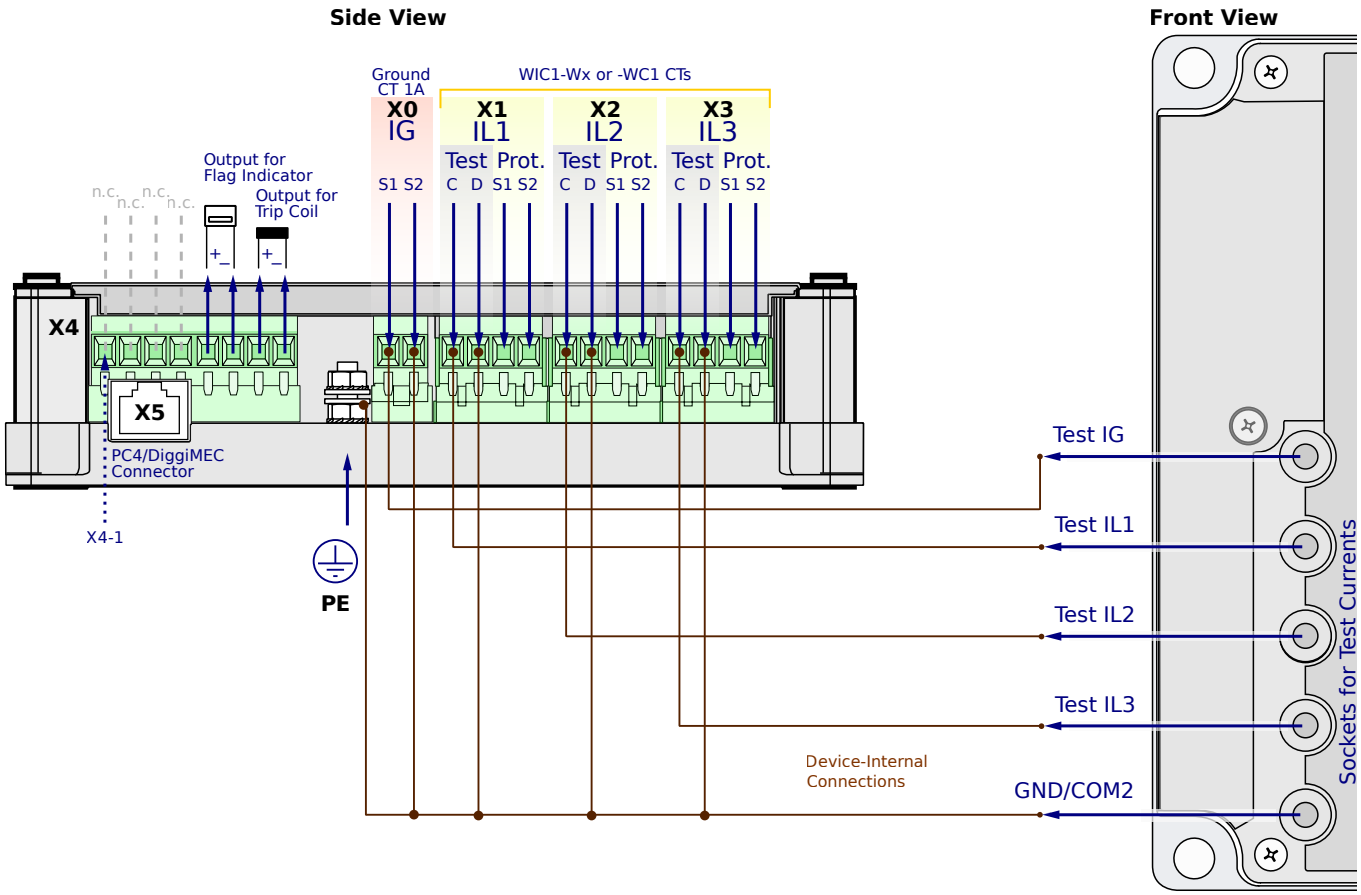


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2SAH

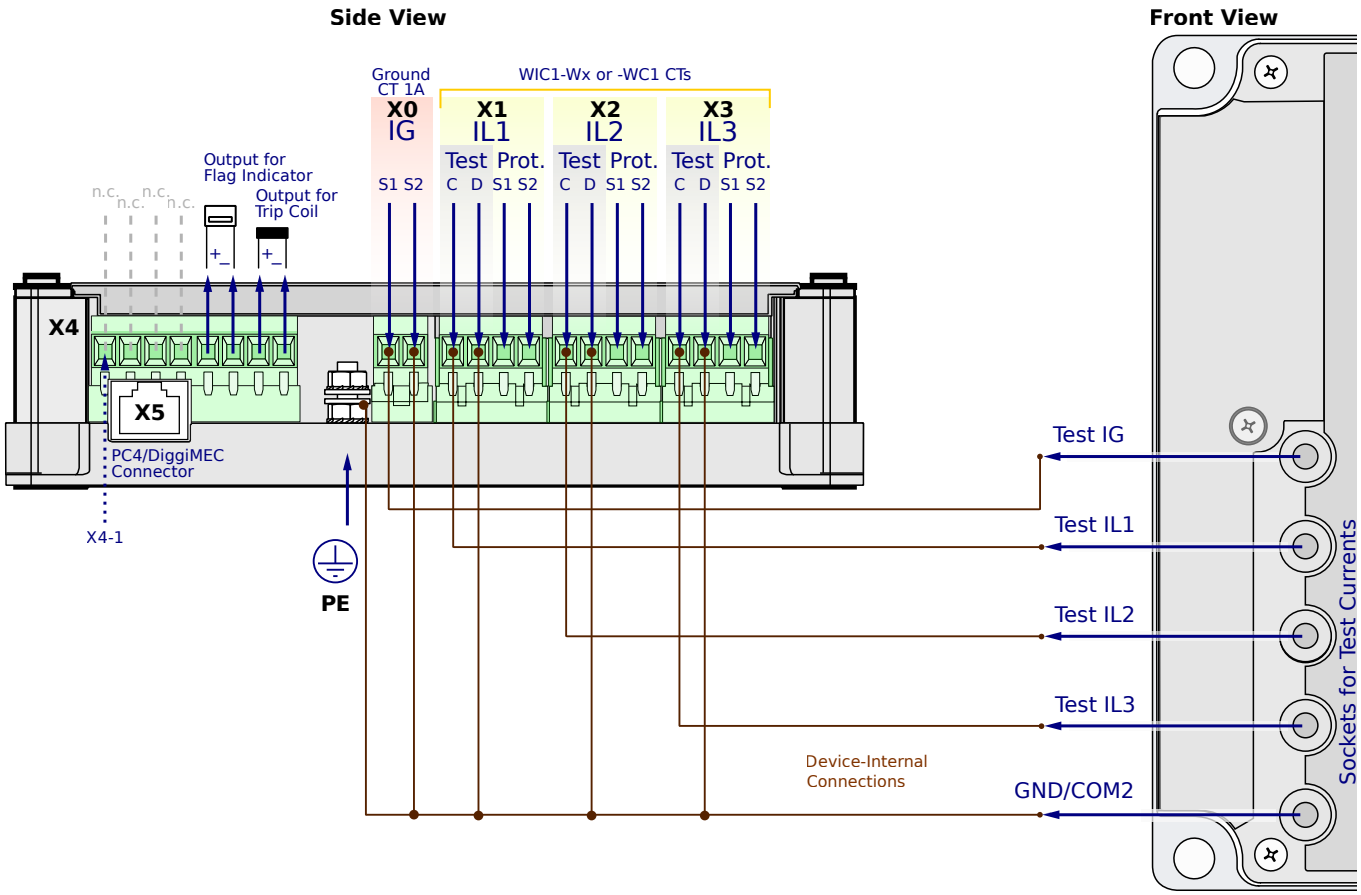


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2AA0

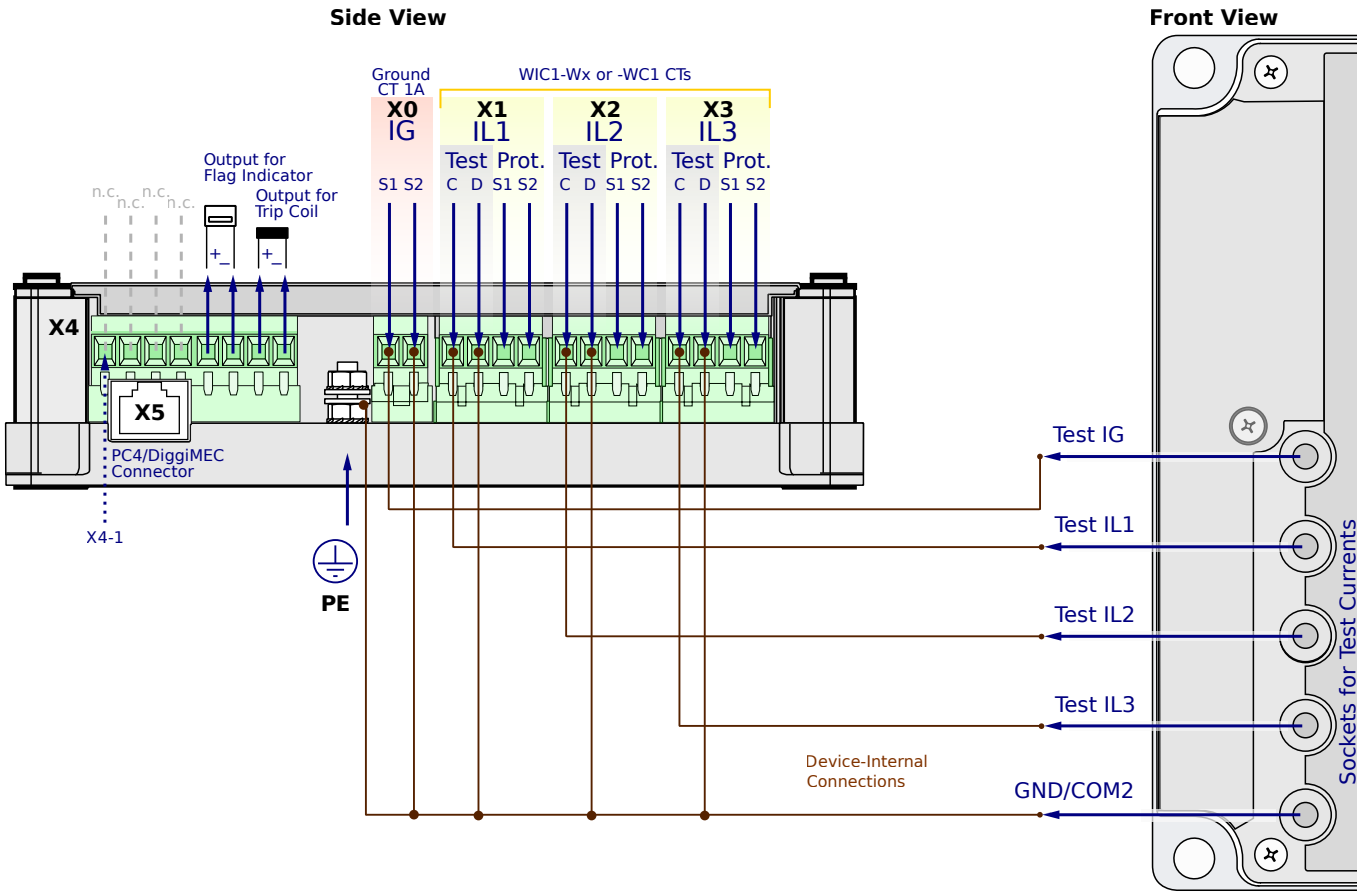


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2AAH

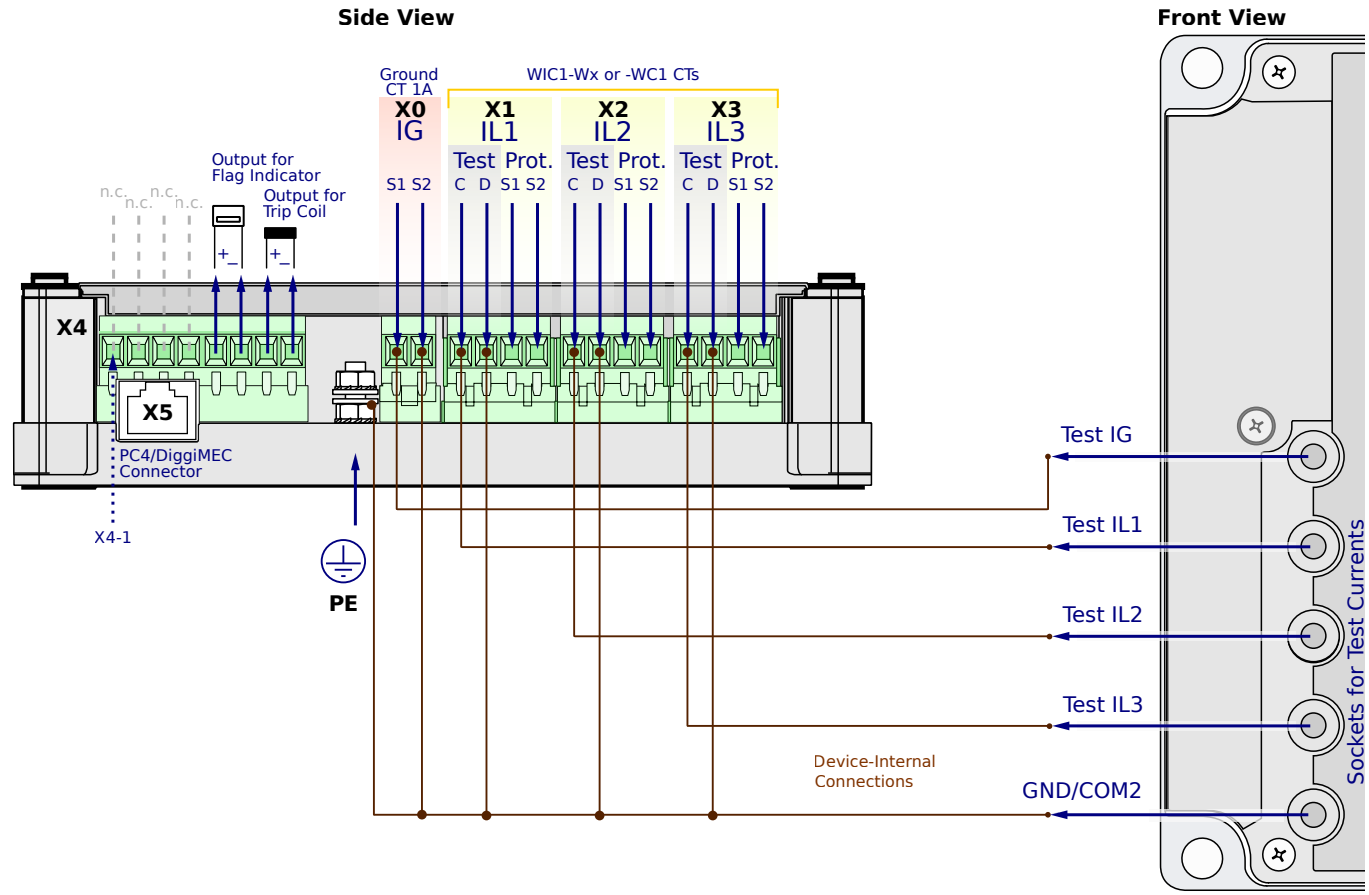


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2PA0

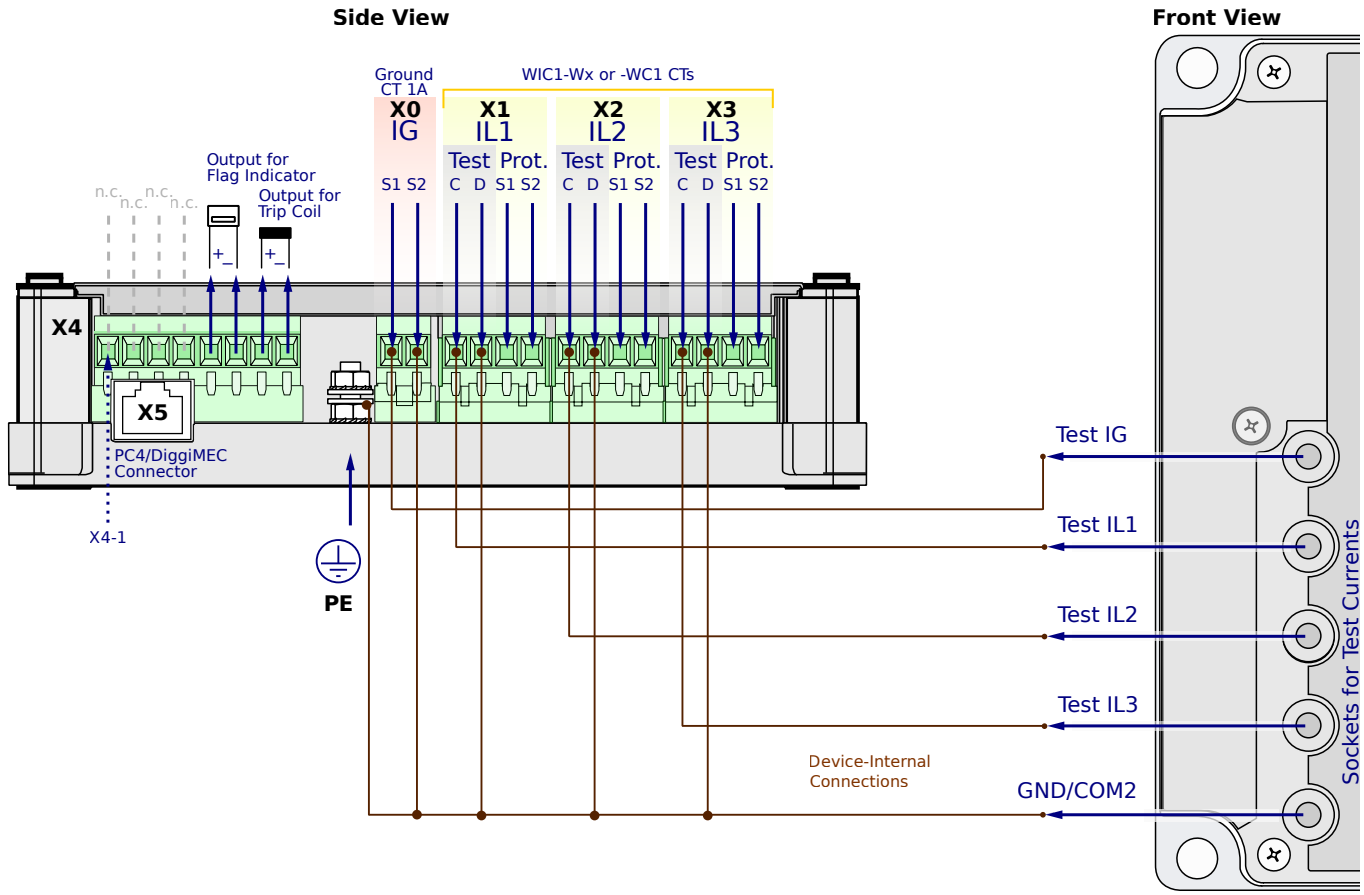


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NN2PAH

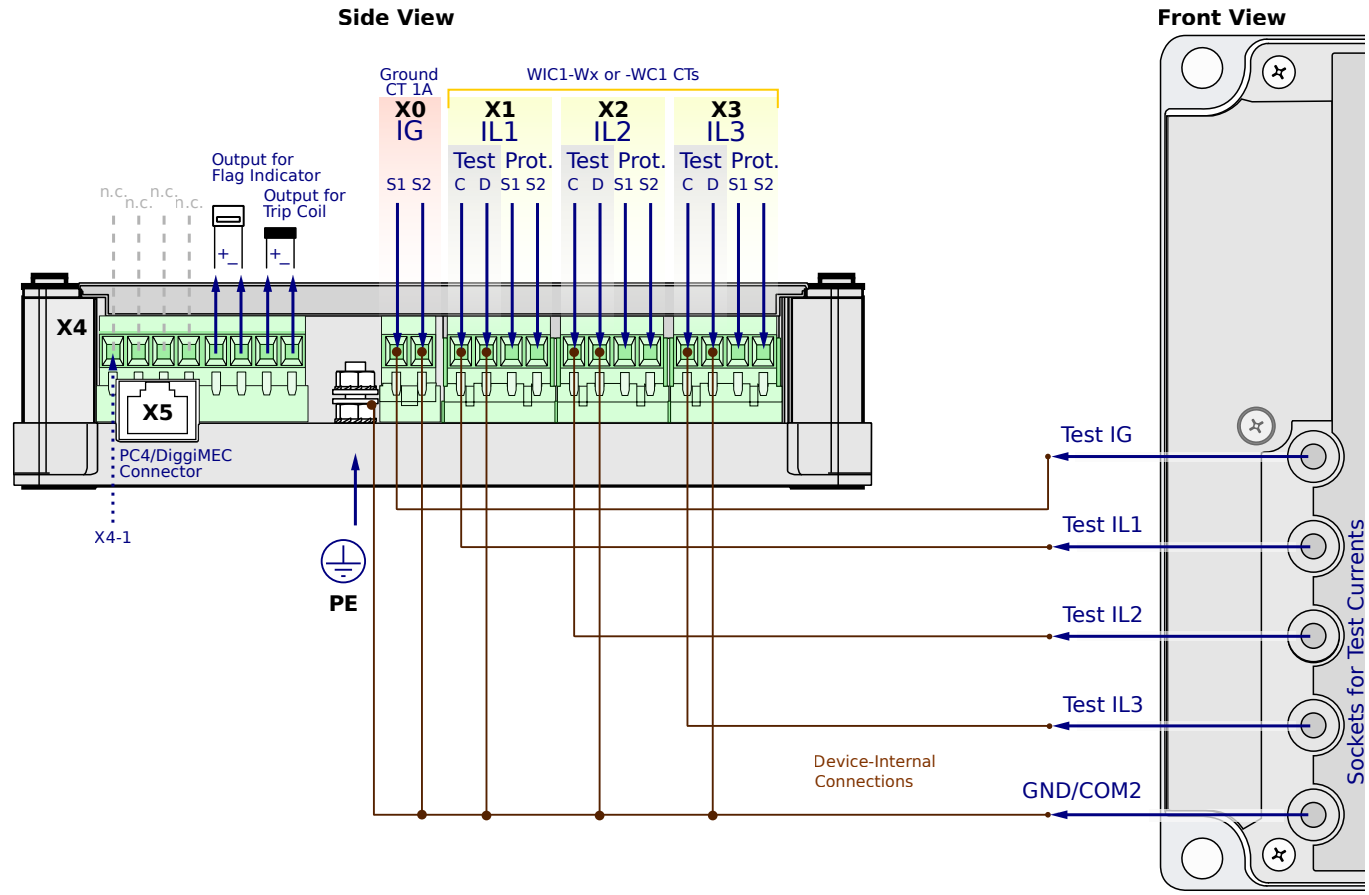


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0SA0

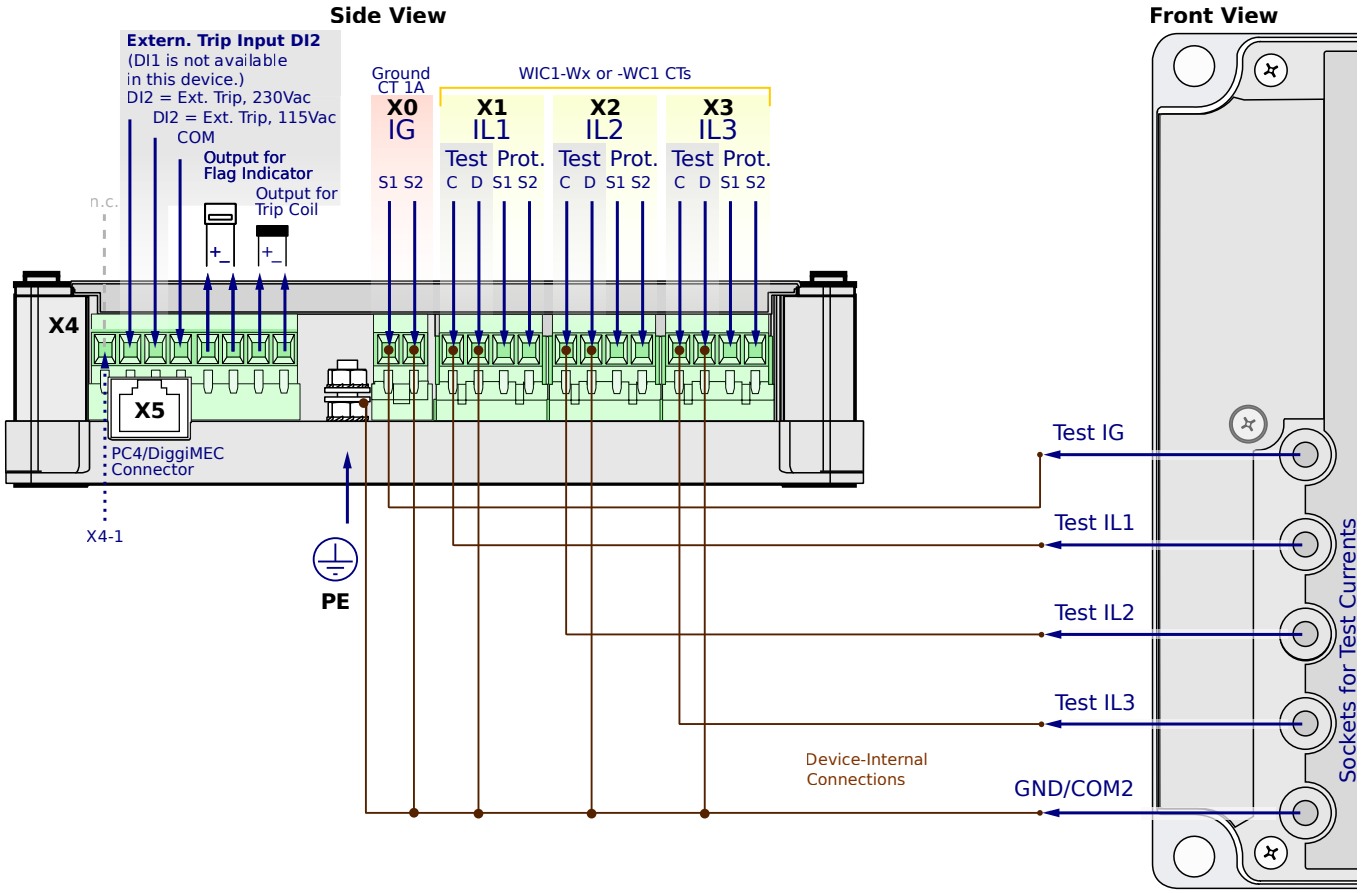


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0SAH

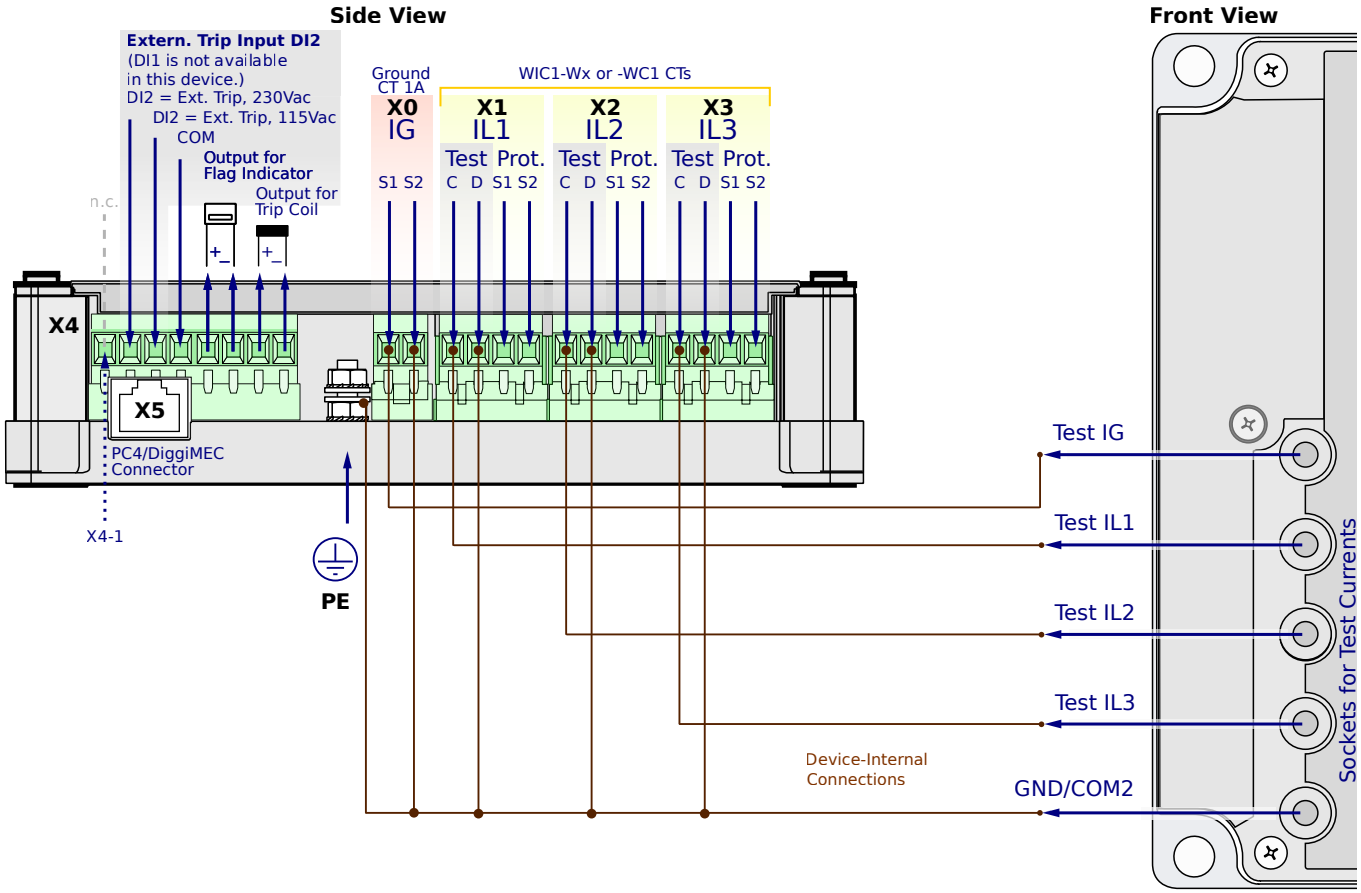


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0AA0

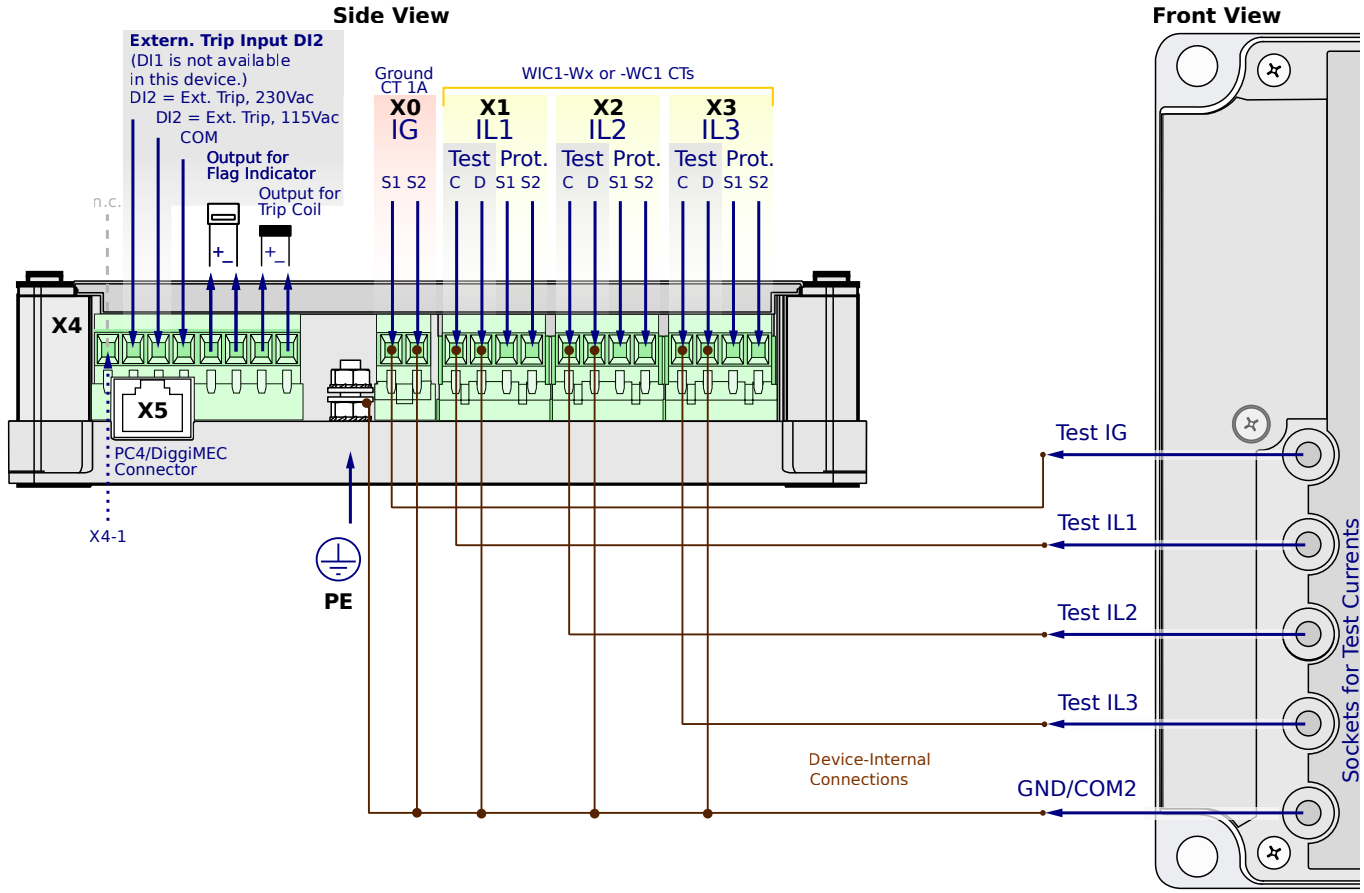


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0AAH

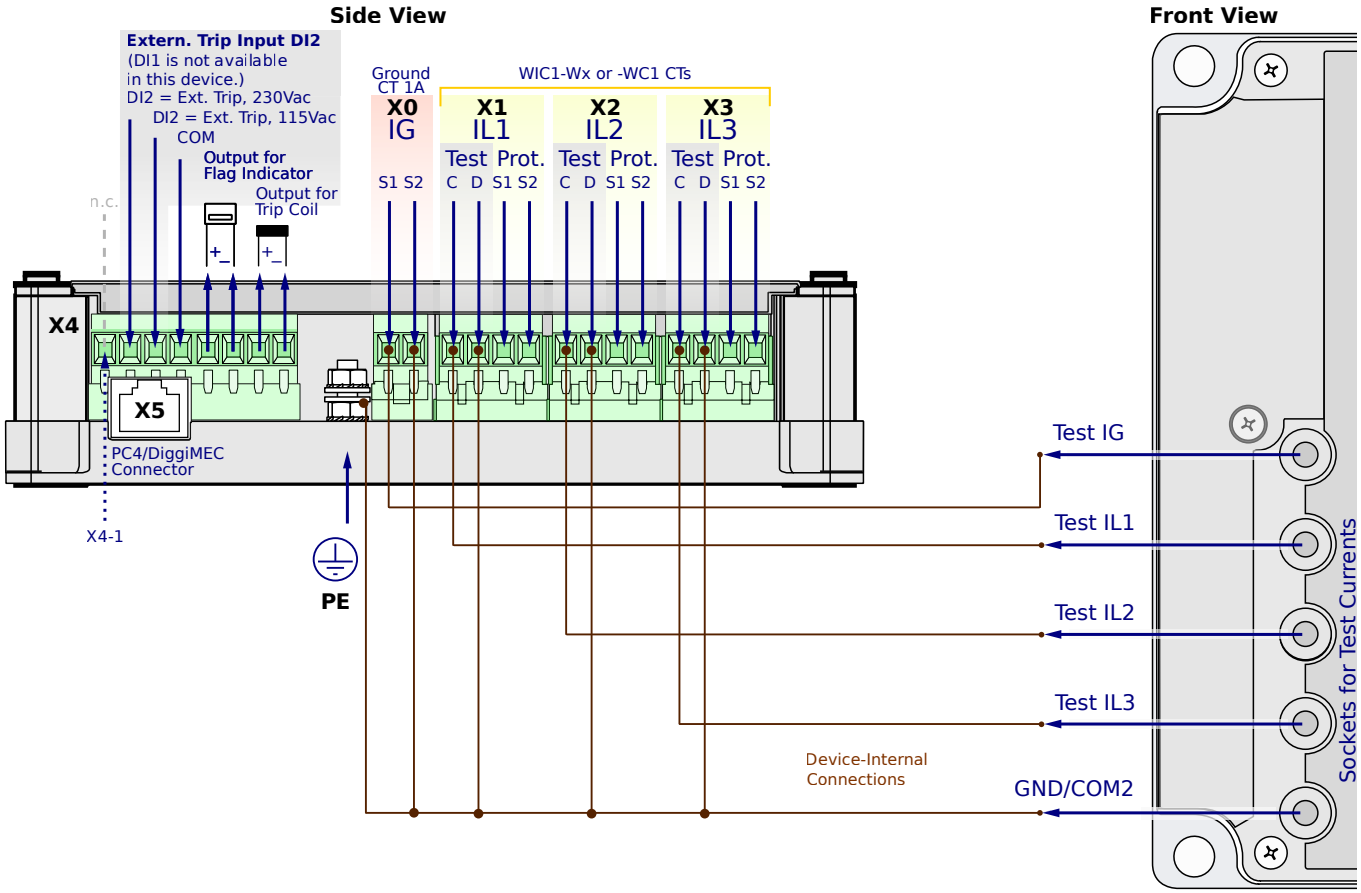


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0PA0

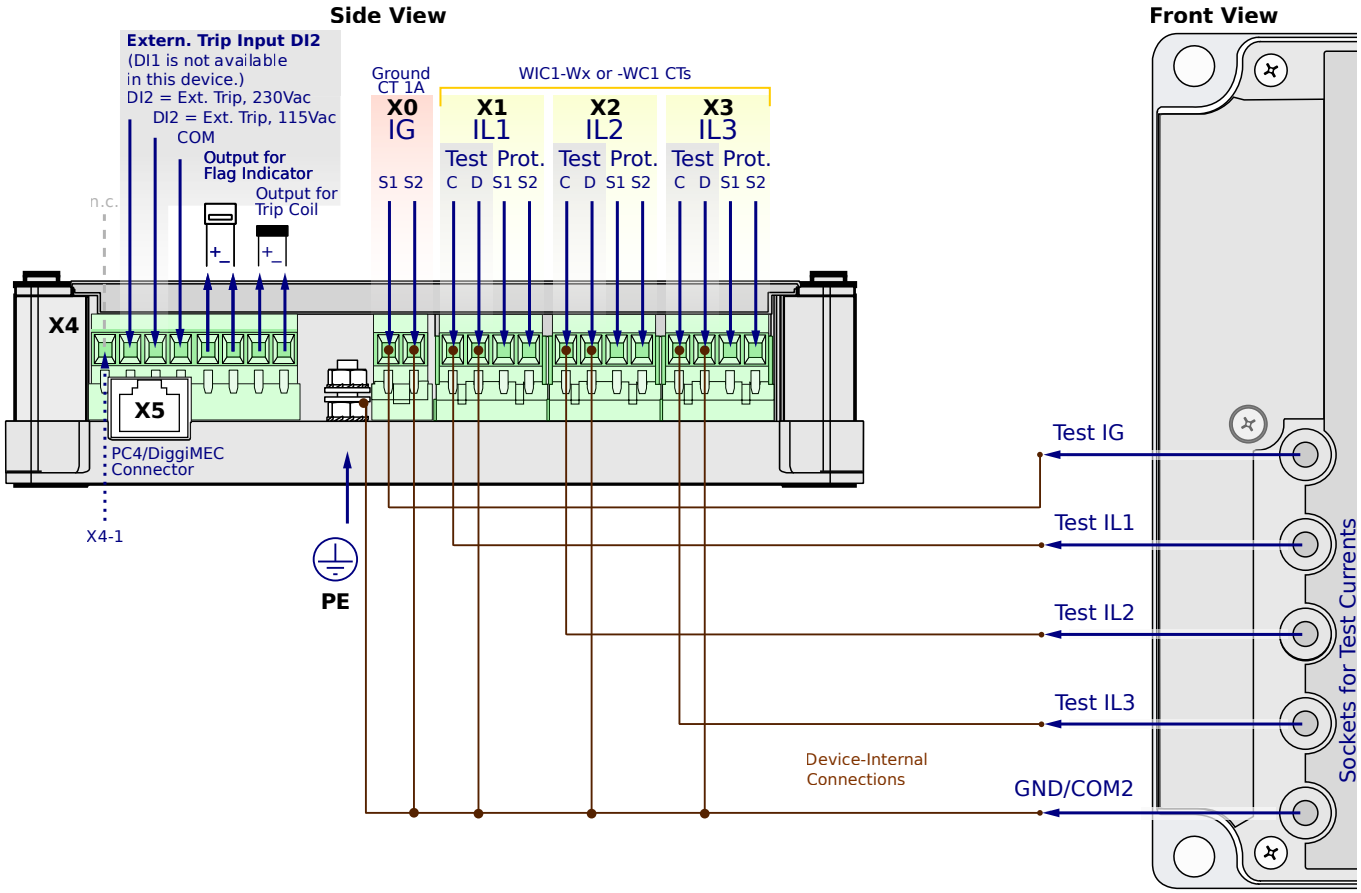


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF0PAH

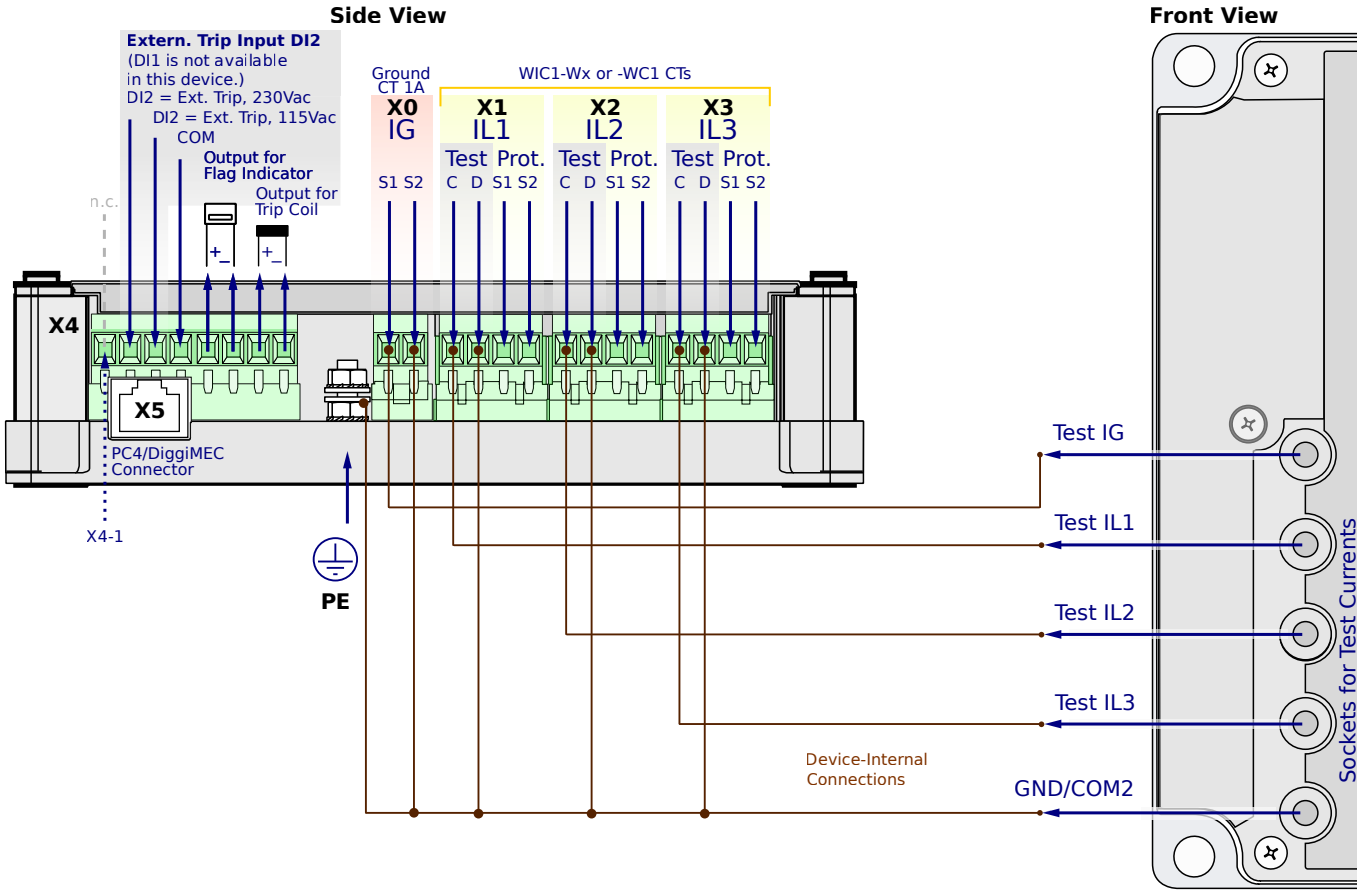


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1SA0

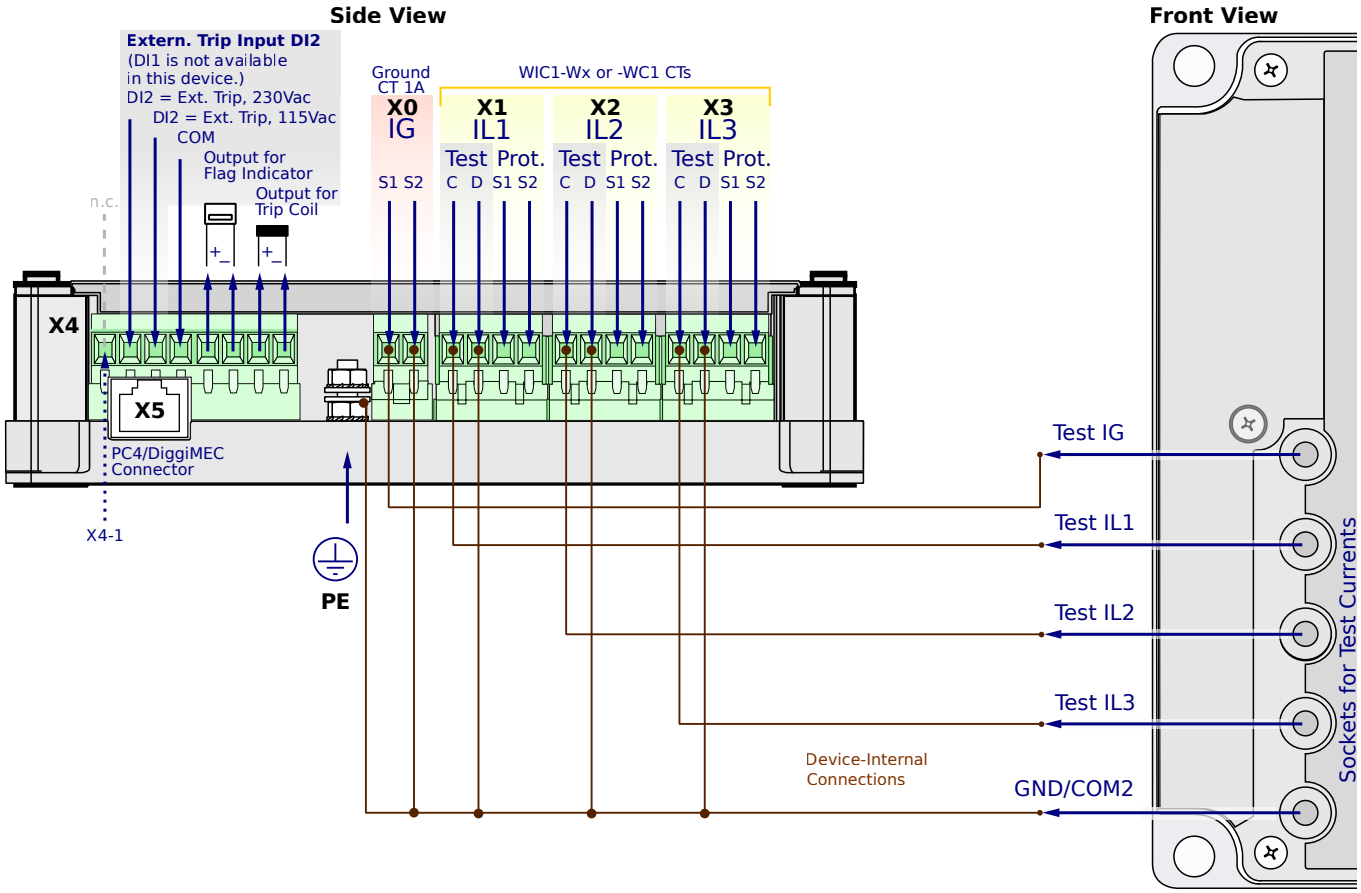


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1SAH

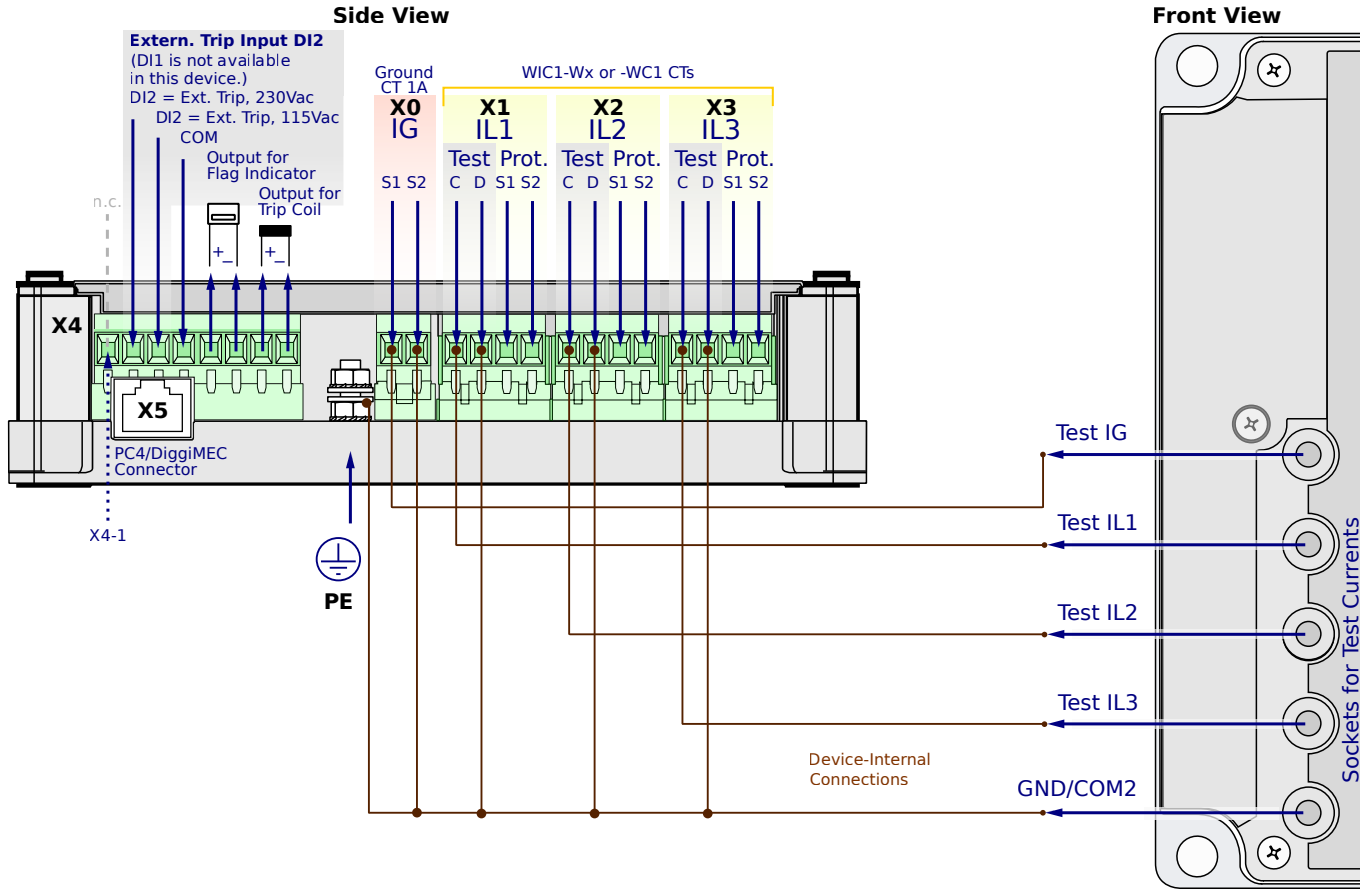


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1AA0

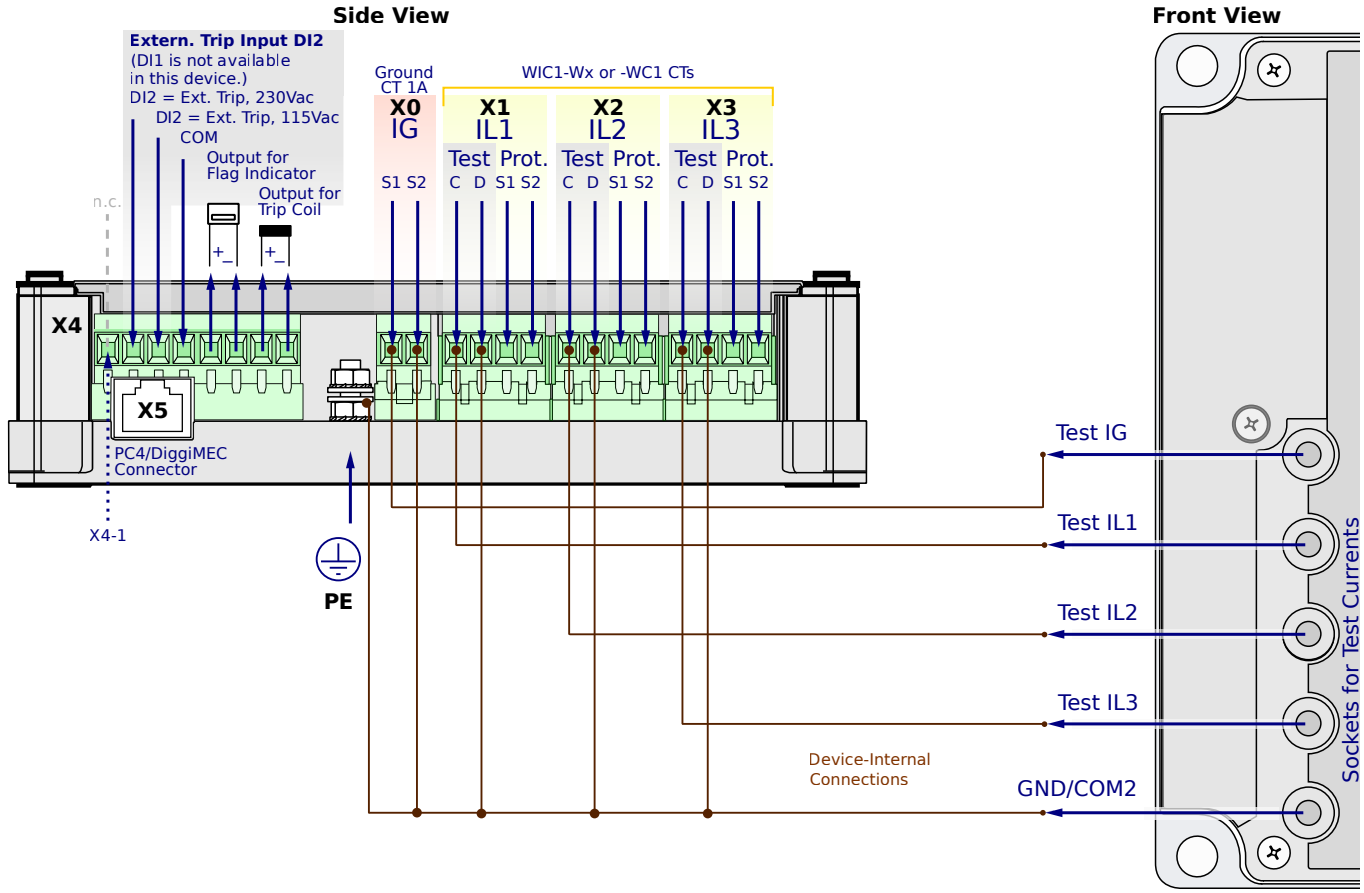


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1AAH

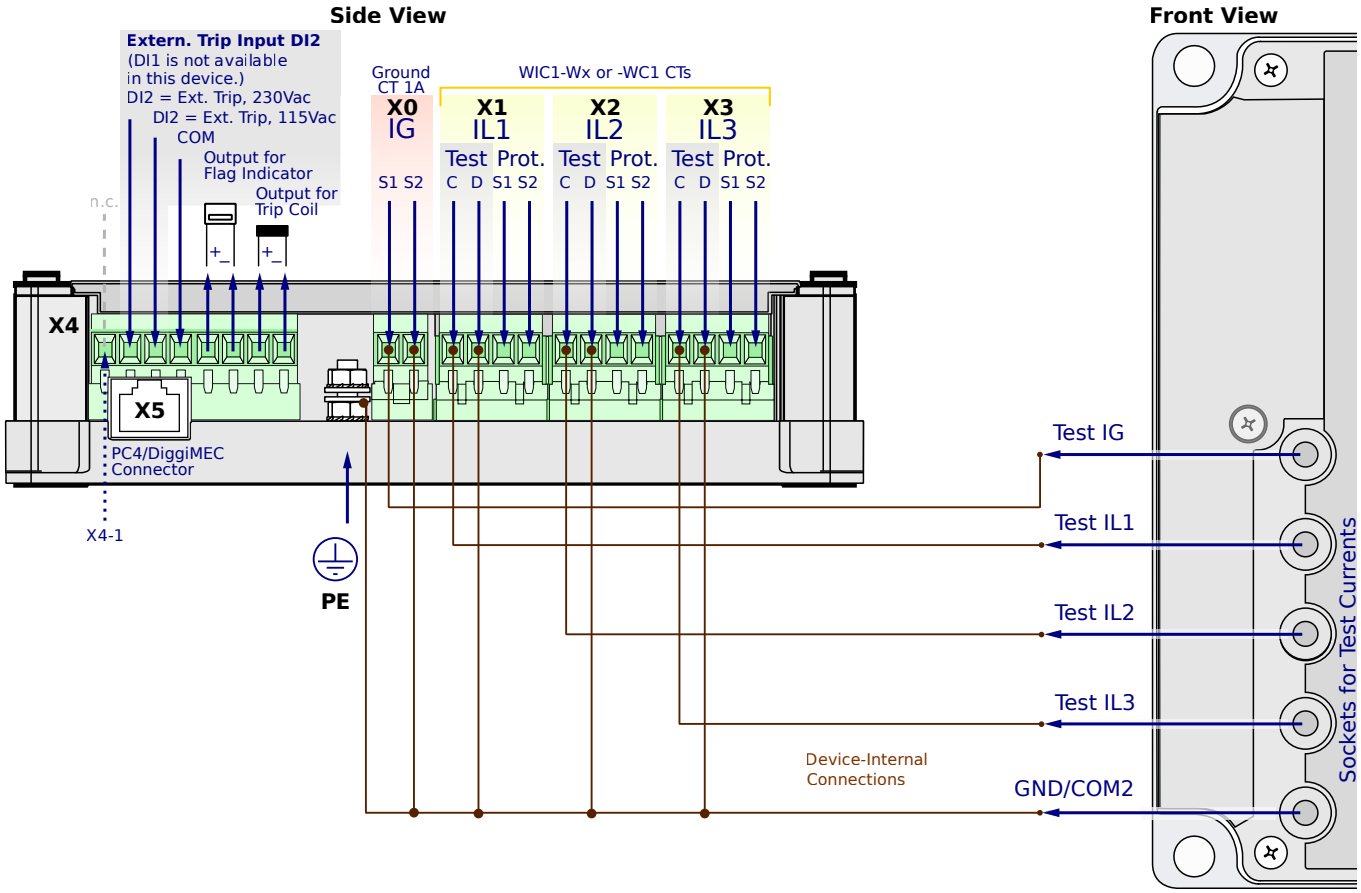


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1PA0

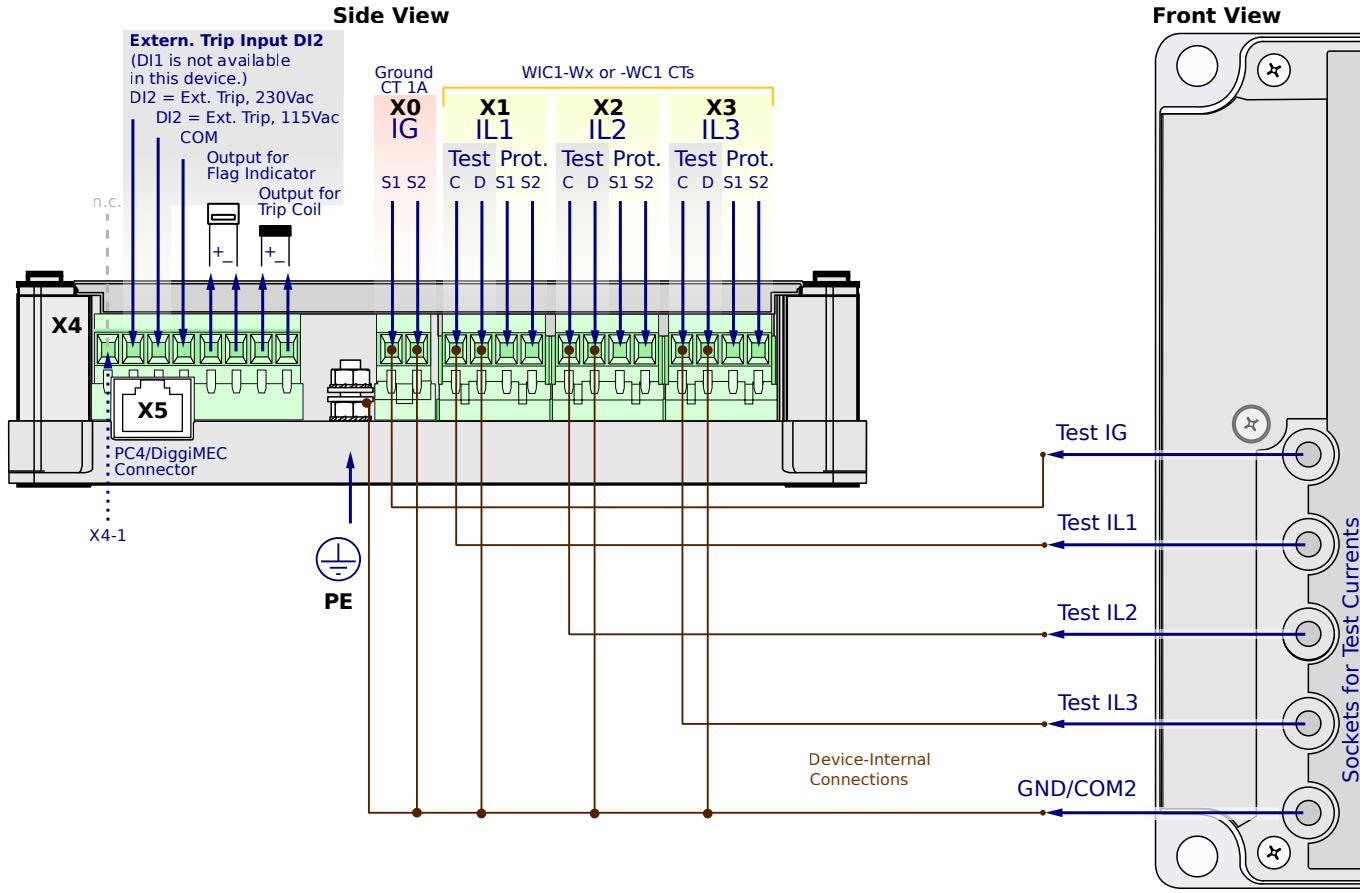


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF1PAH

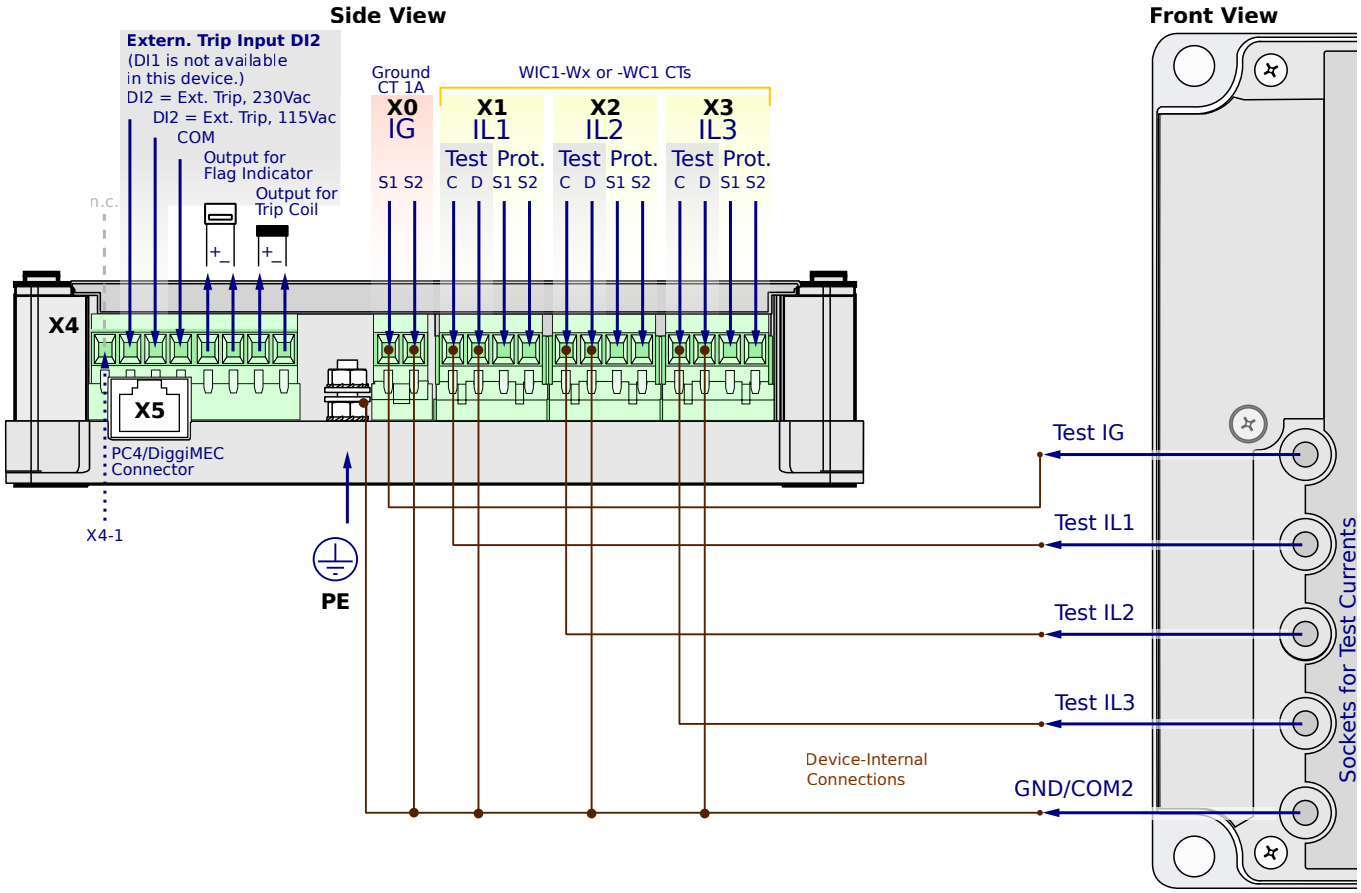


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2SA0

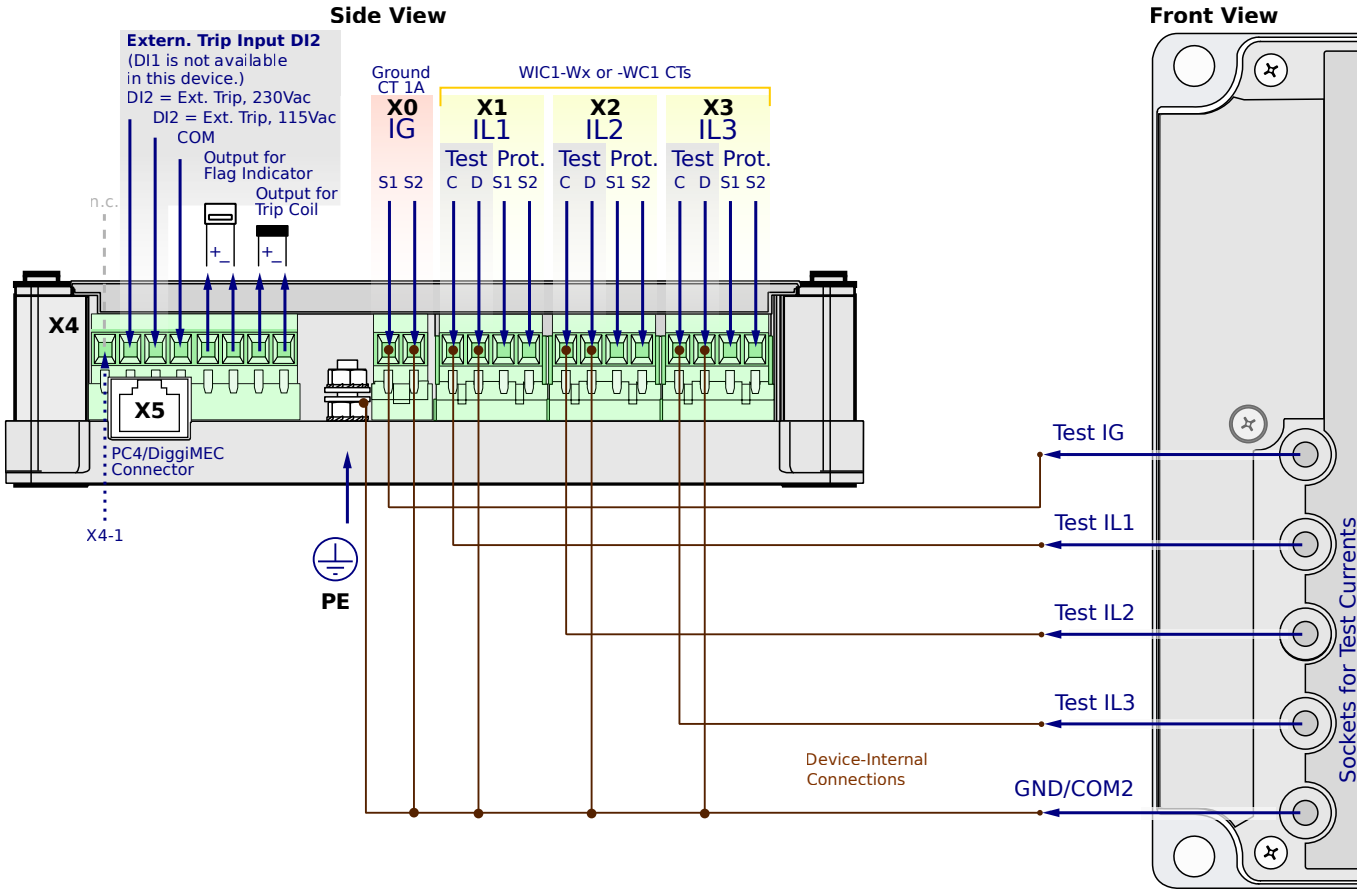


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2SAH

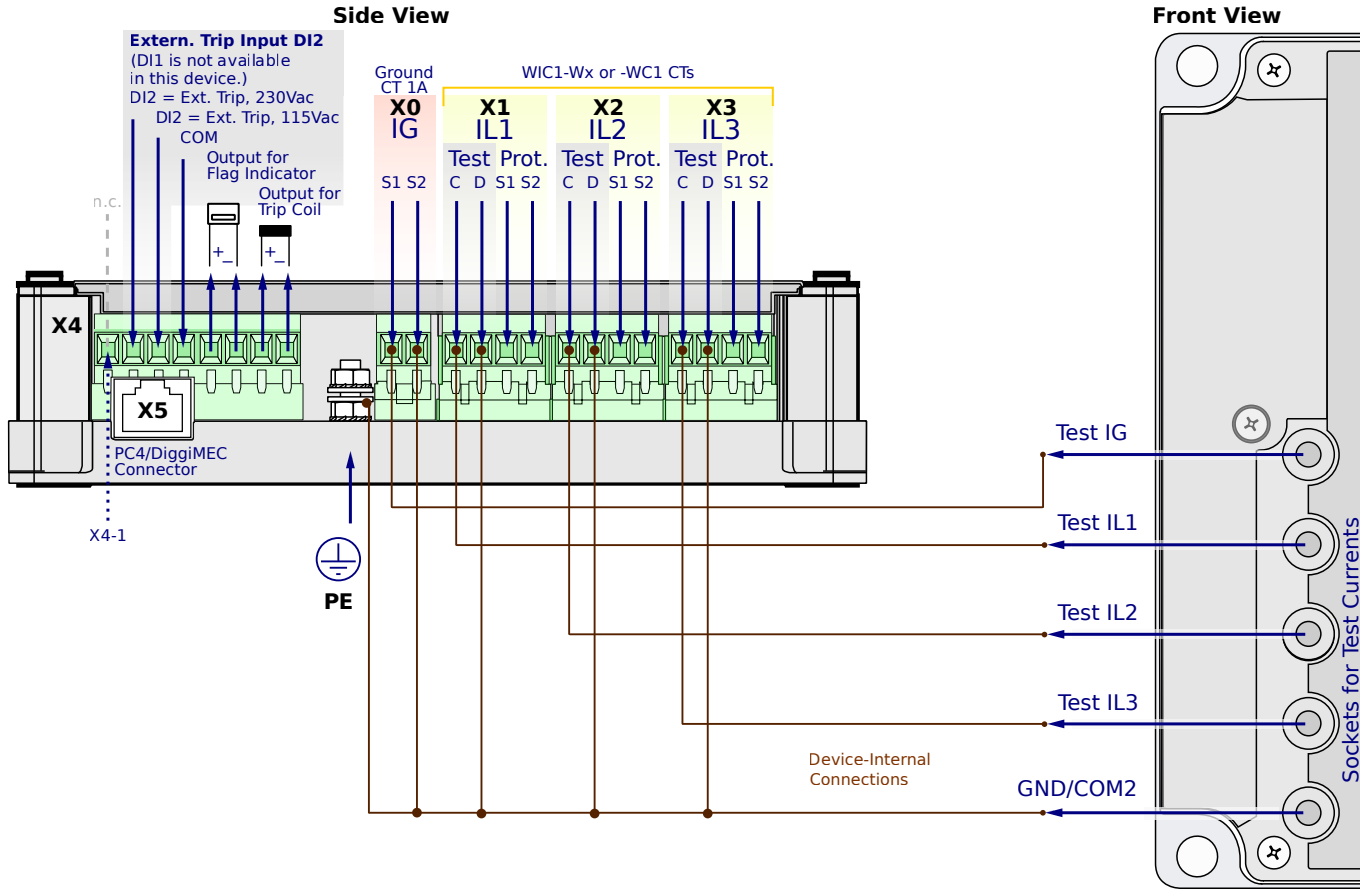


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2AA0

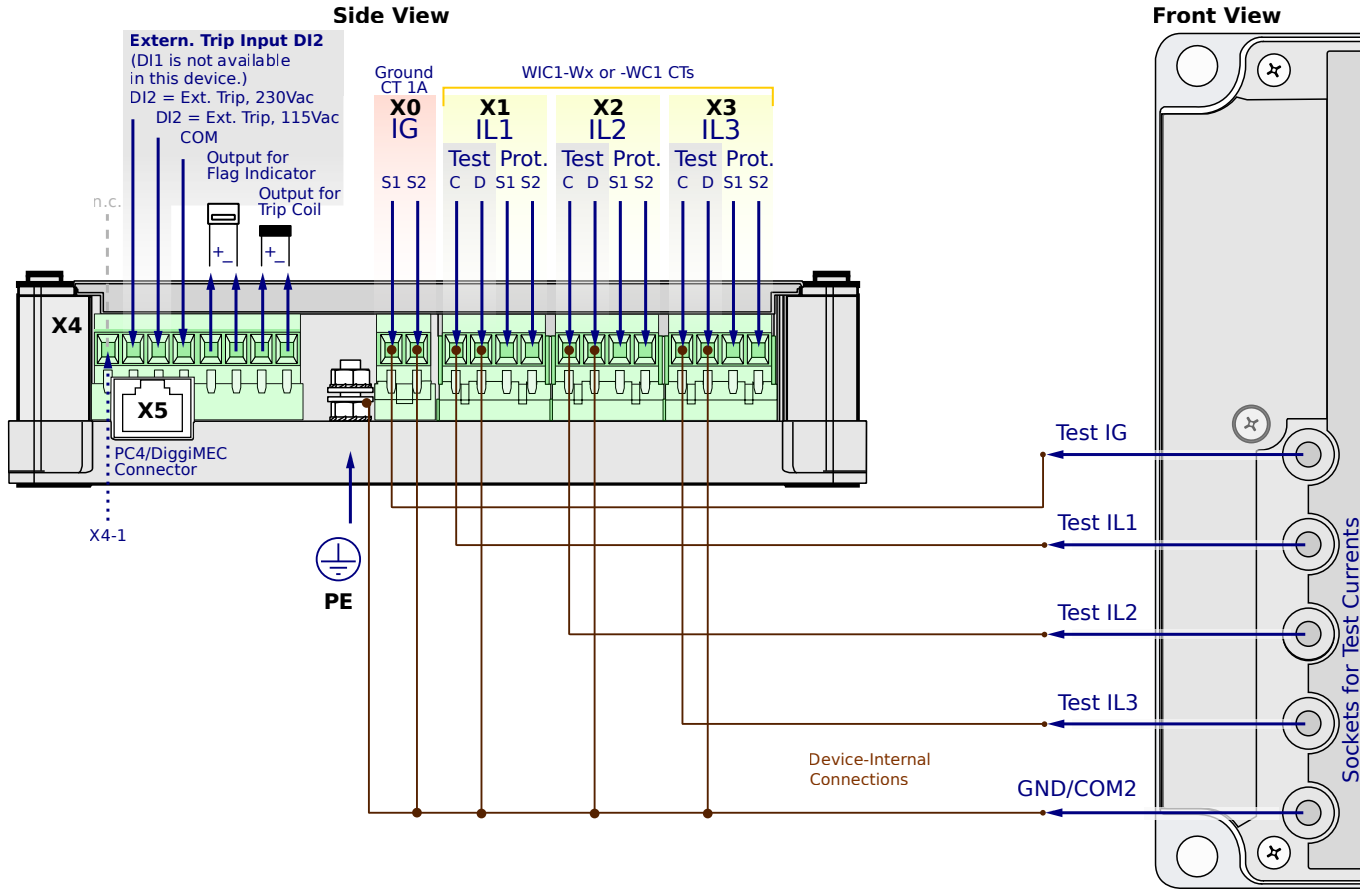


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2AAH

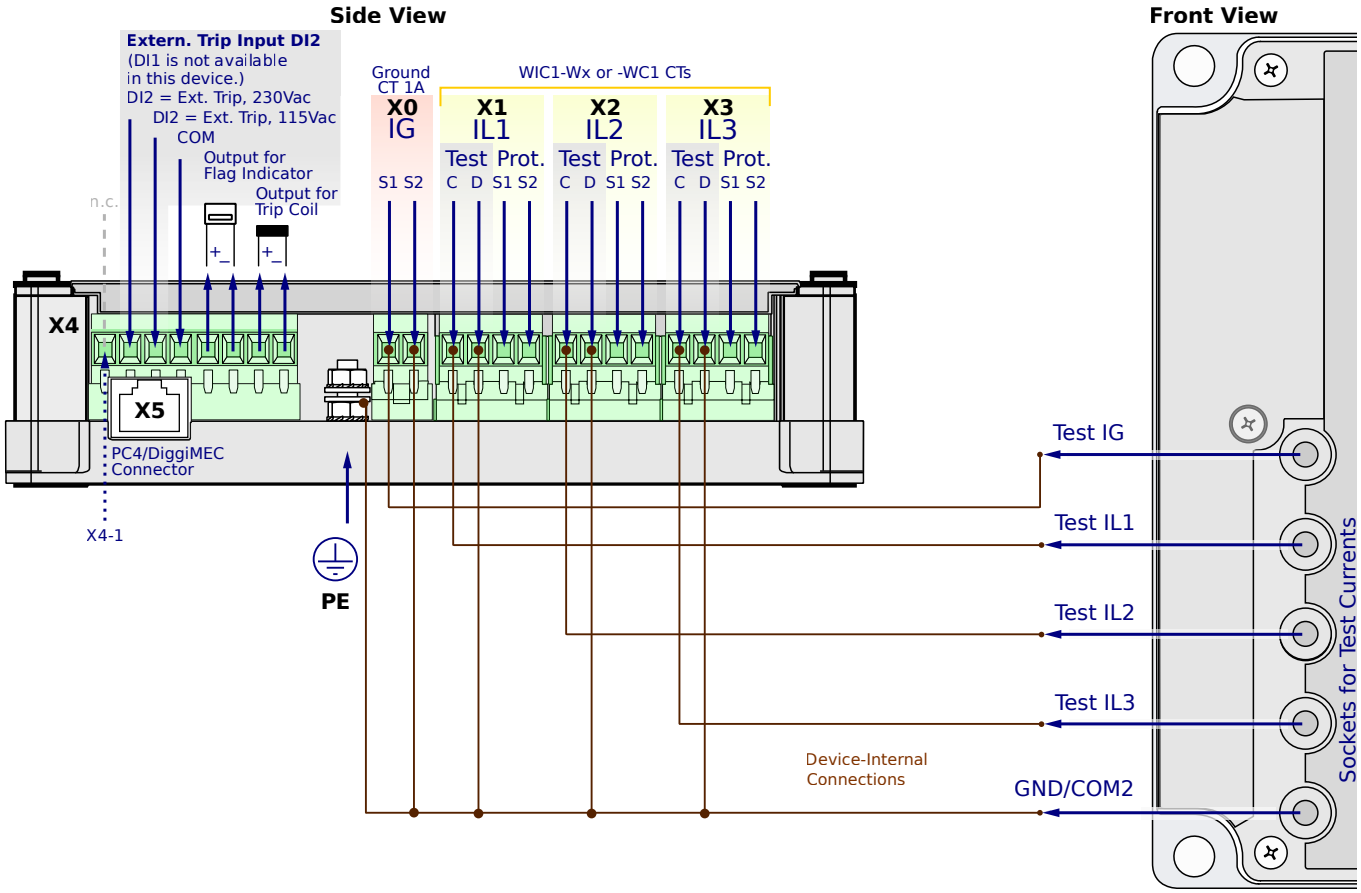


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2PA0

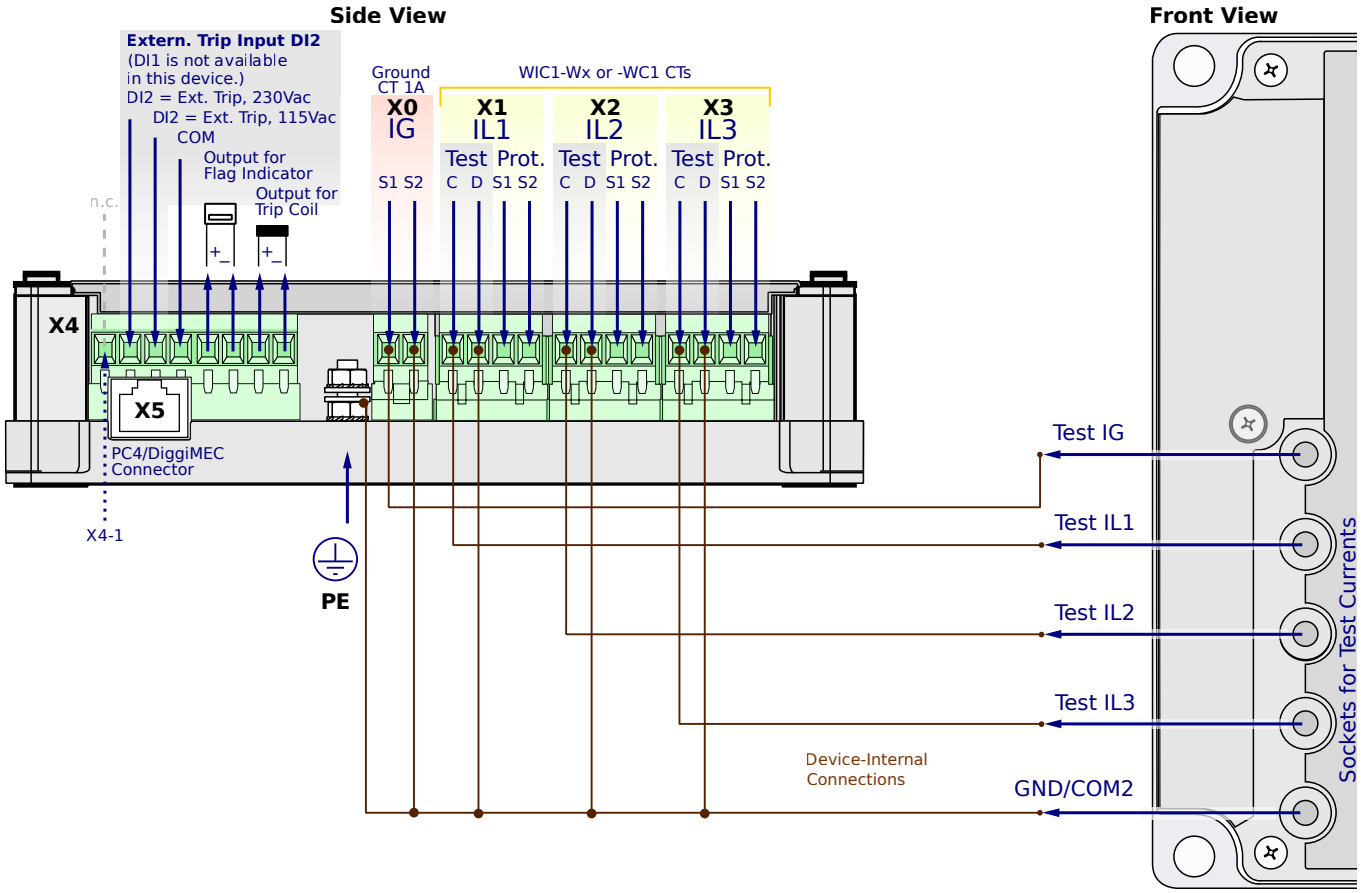


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NF2PAH

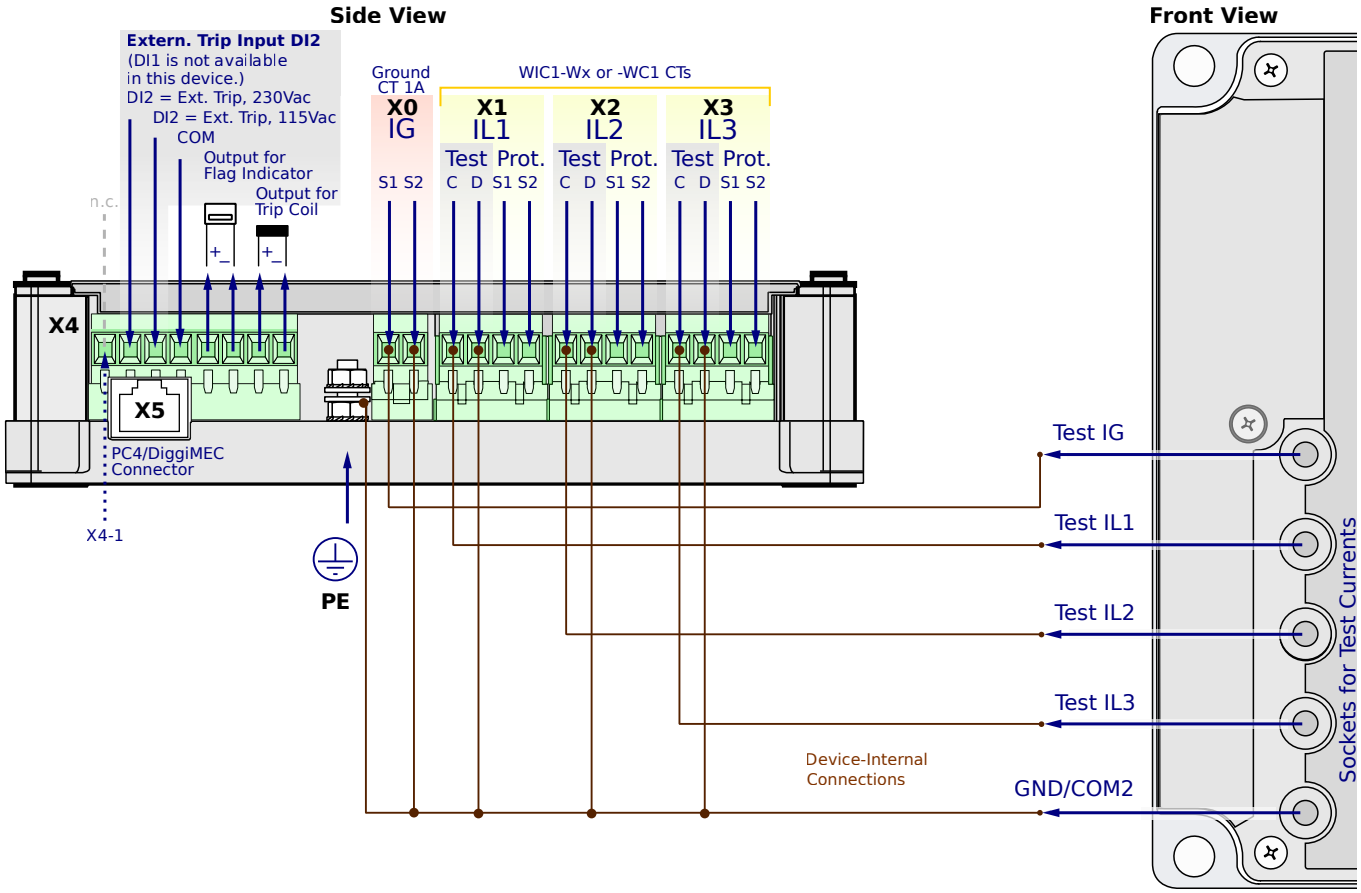


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0SA0

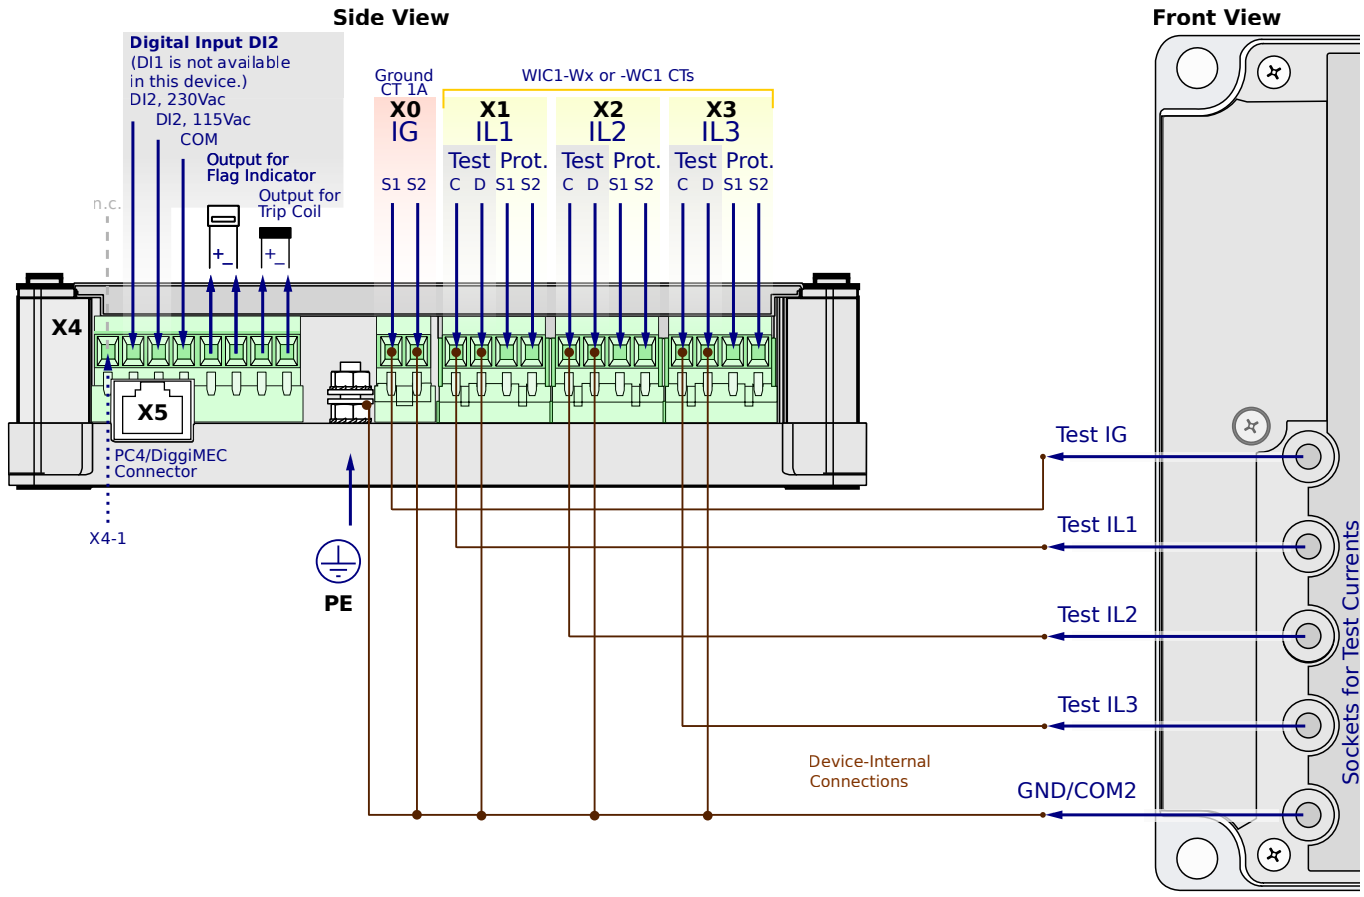


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0SAH

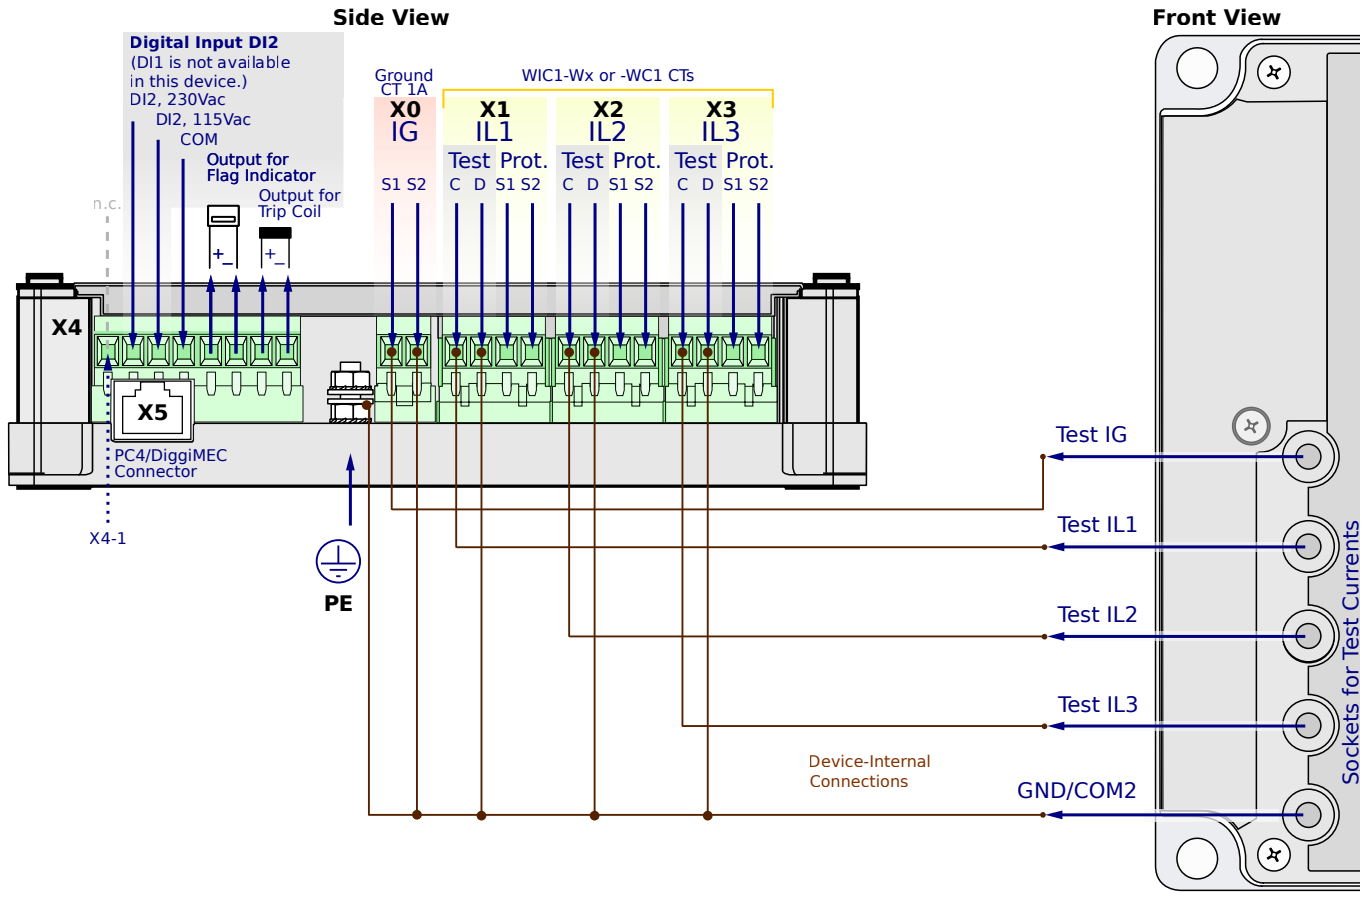


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0AA0

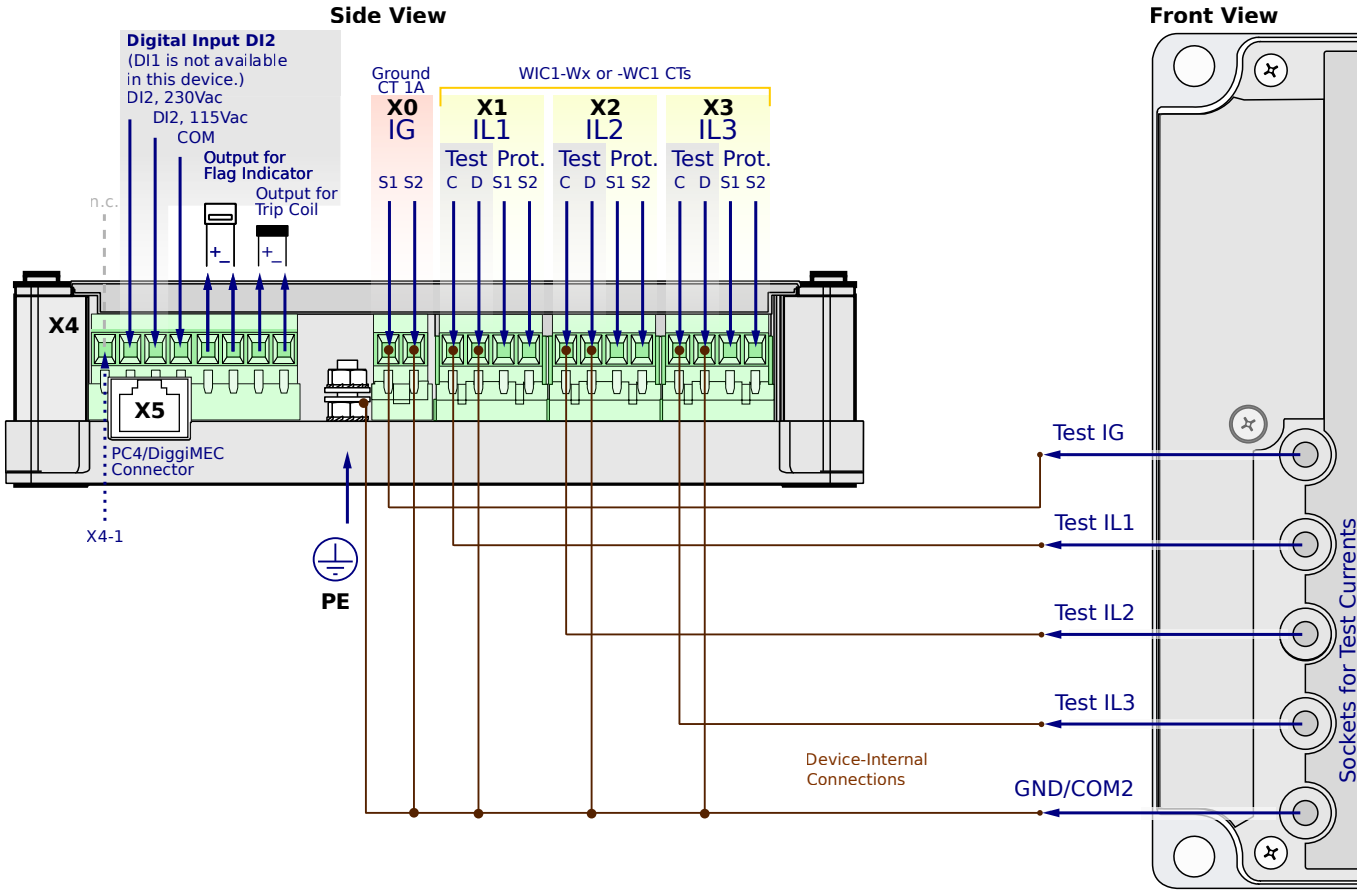


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0AAH

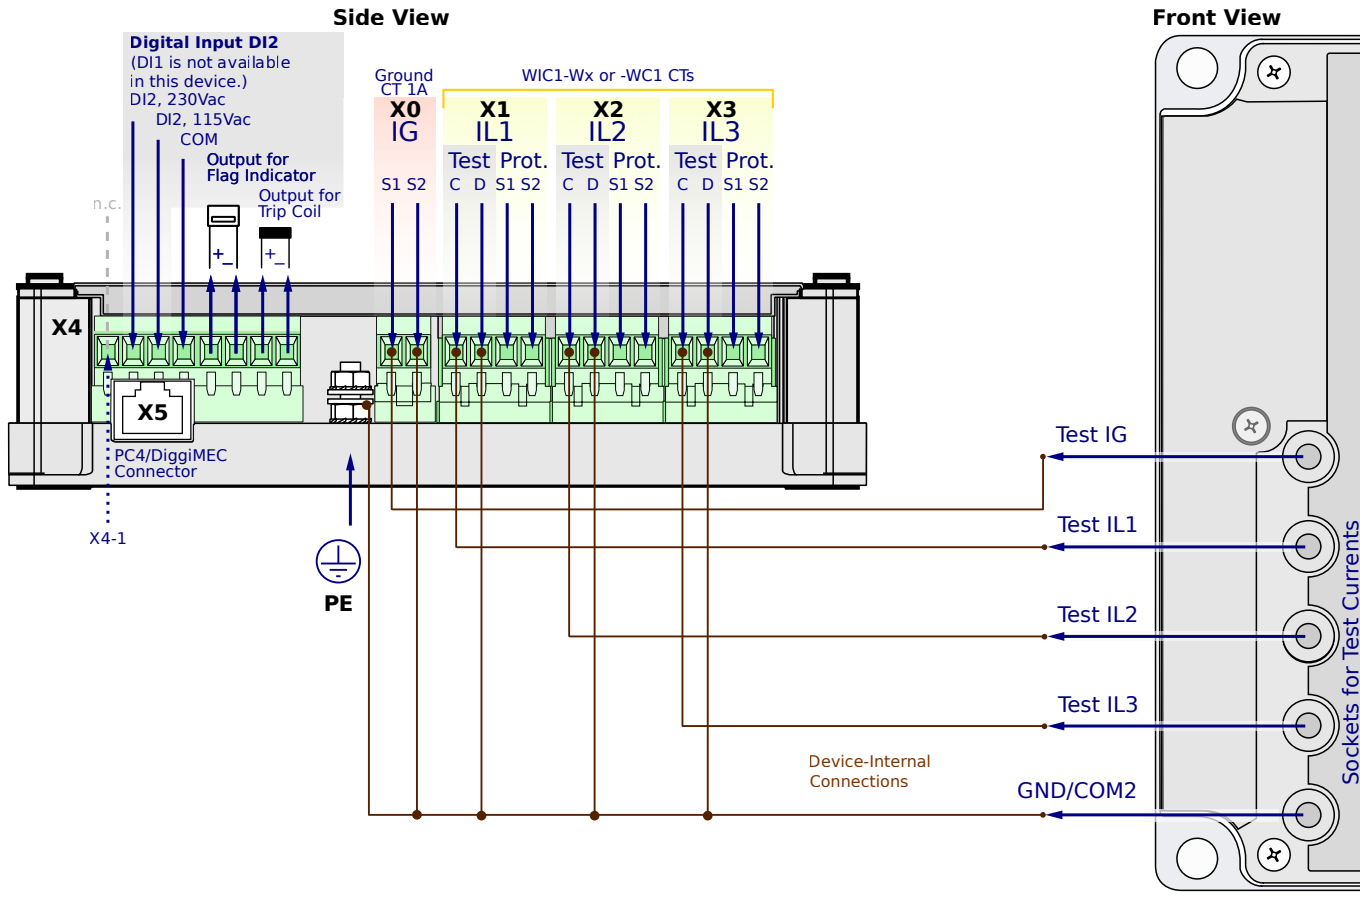


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0PA0

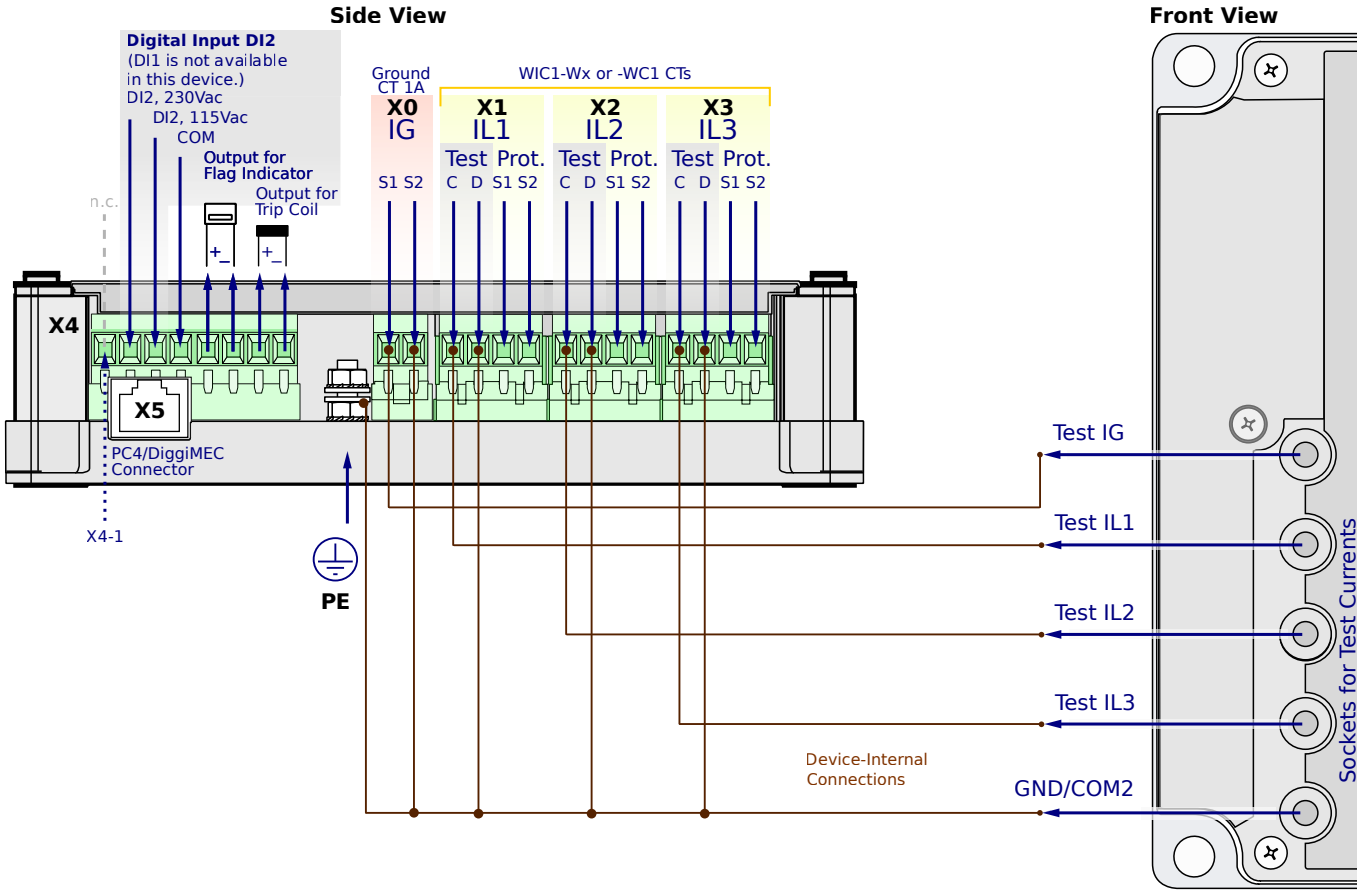


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC0PAH

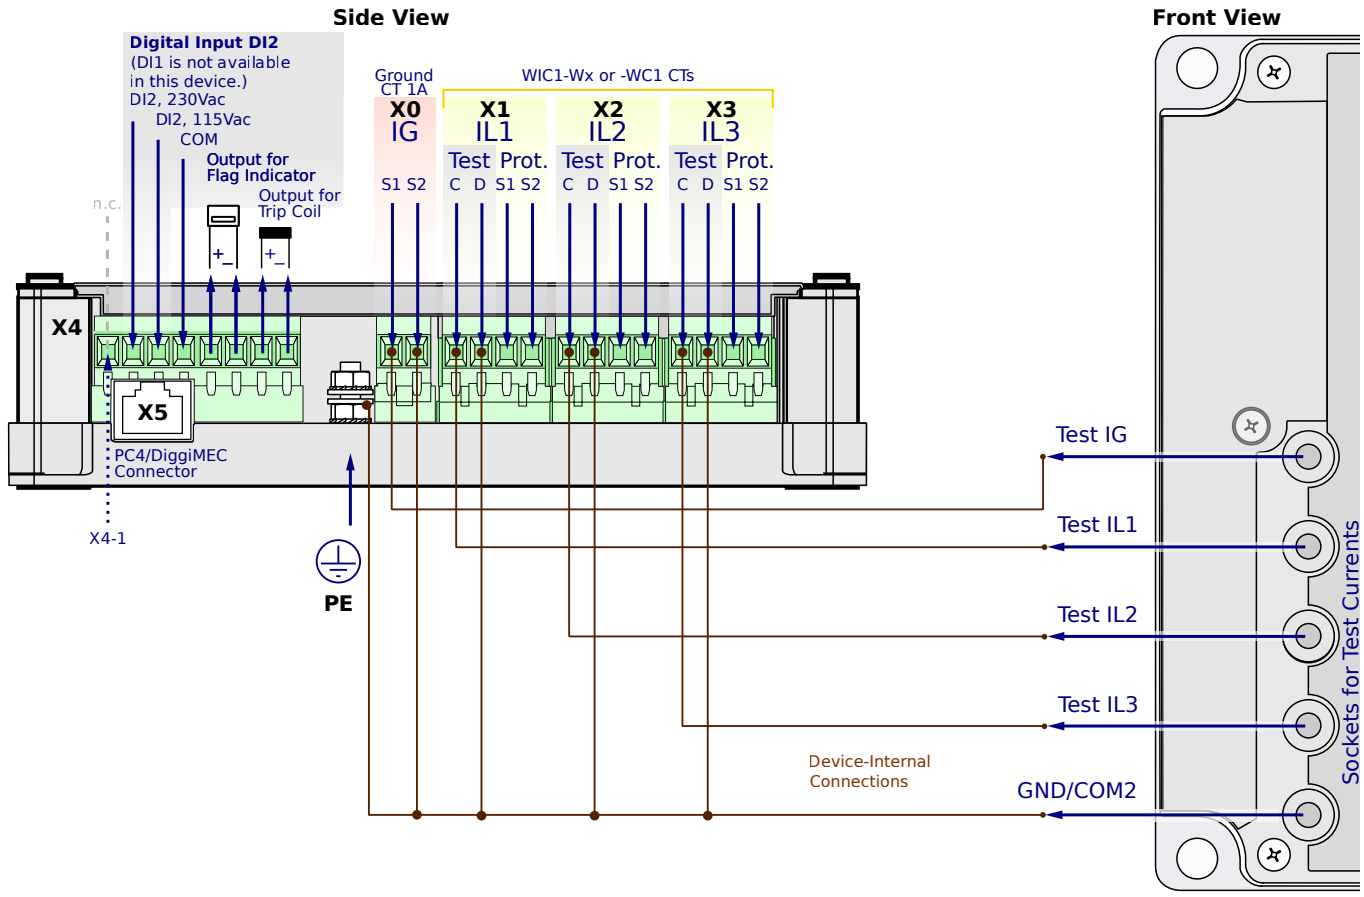


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1SA0

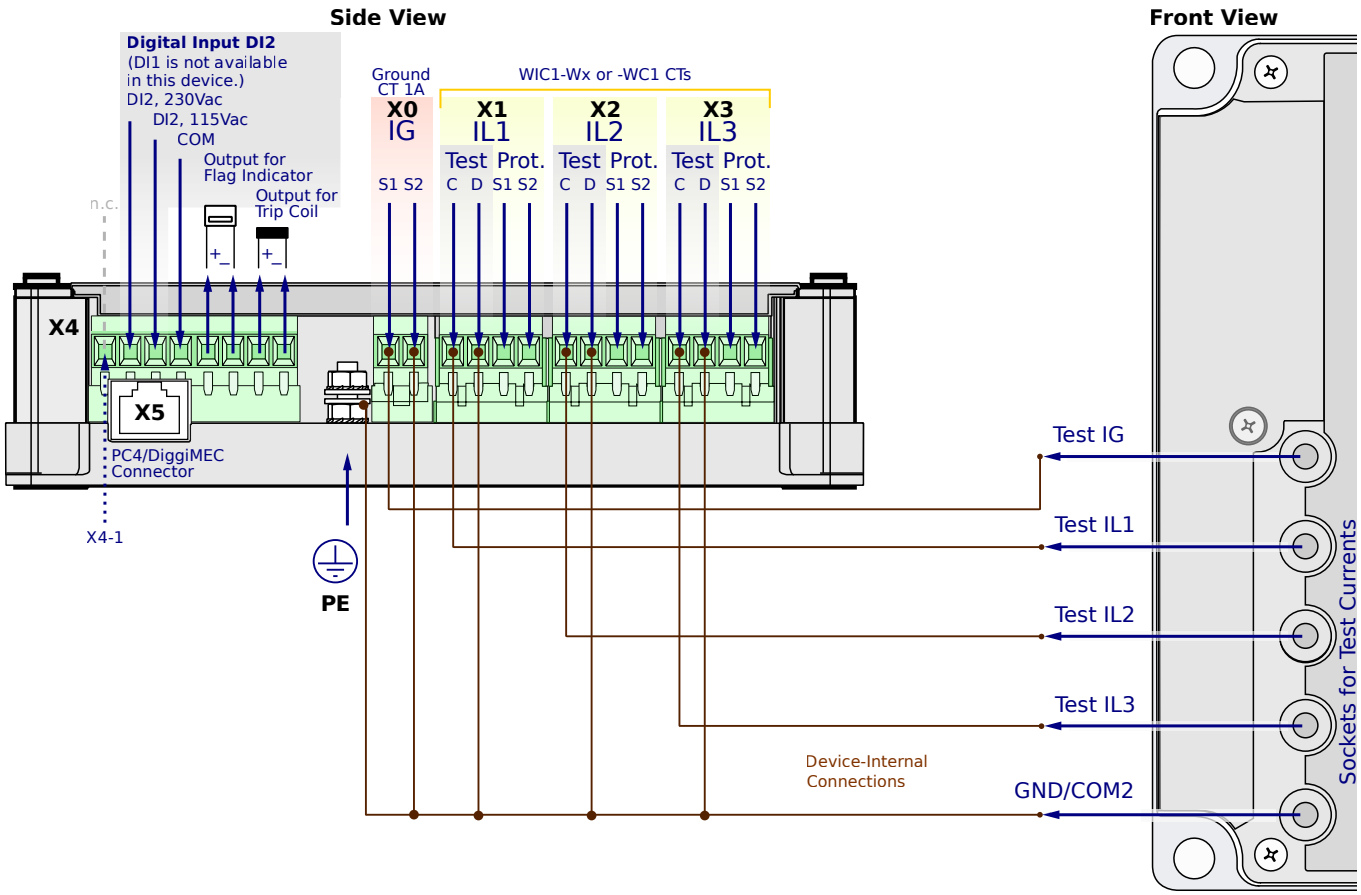


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1SAH

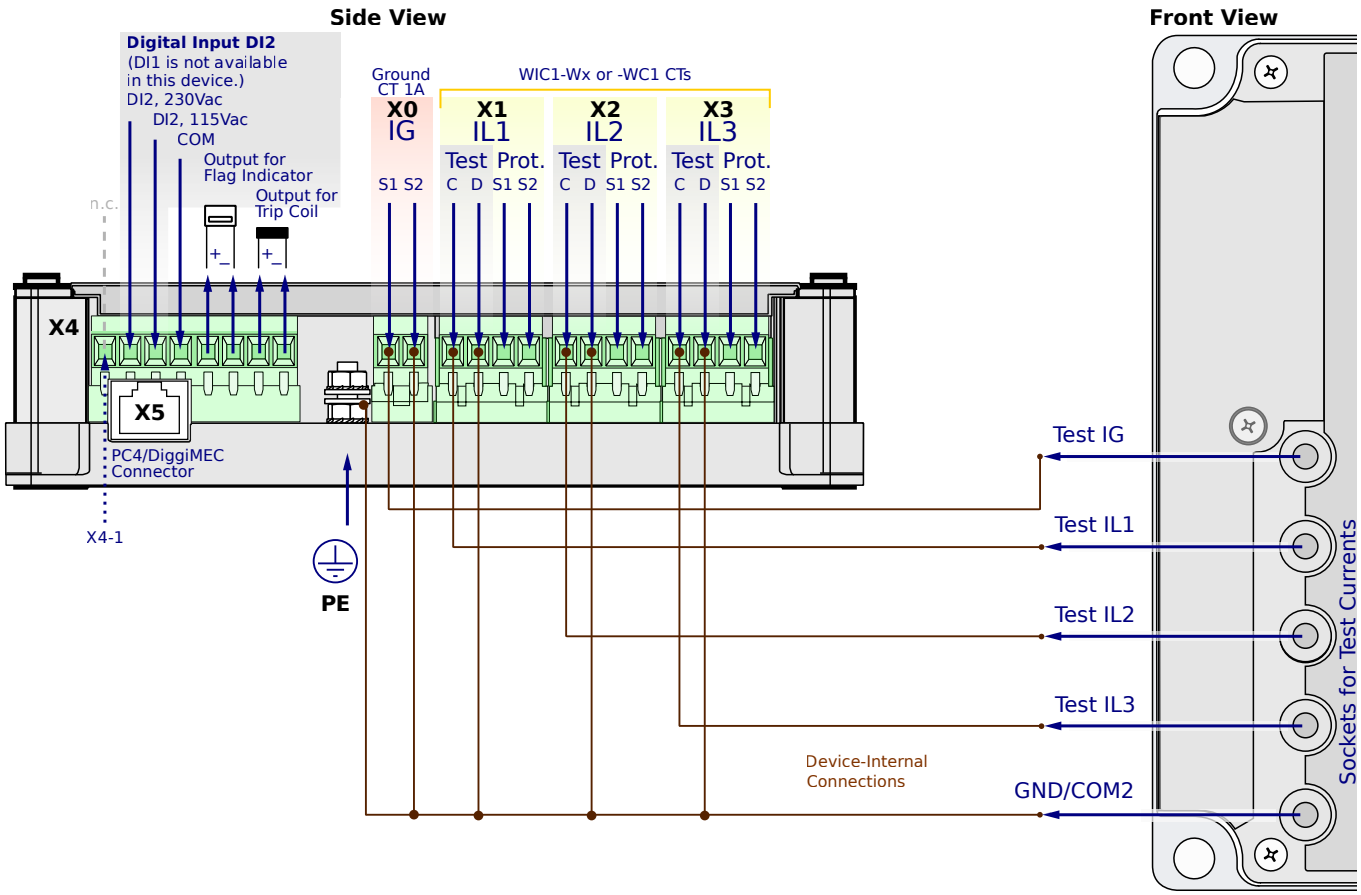


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1AA0

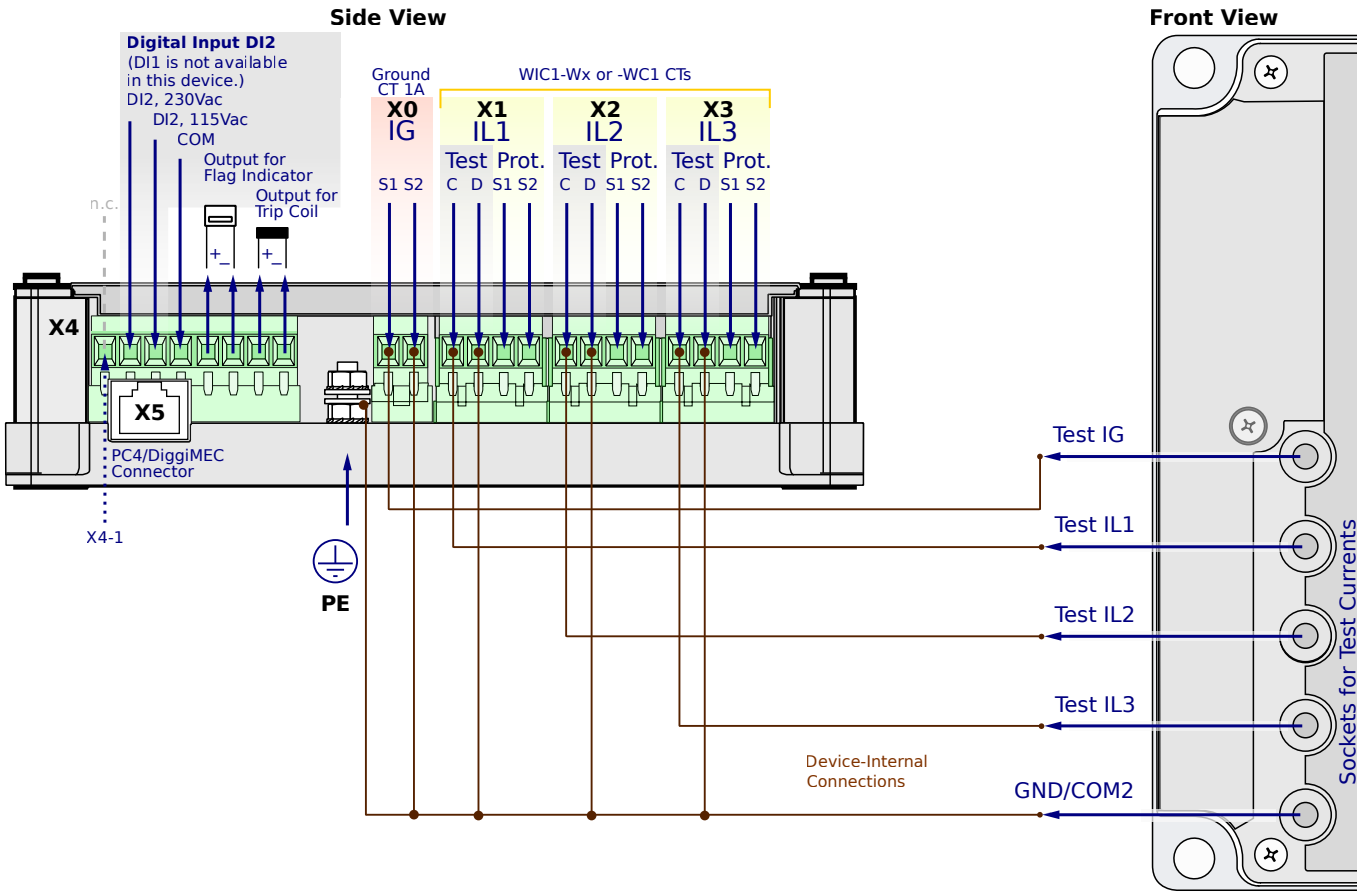


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1AAH

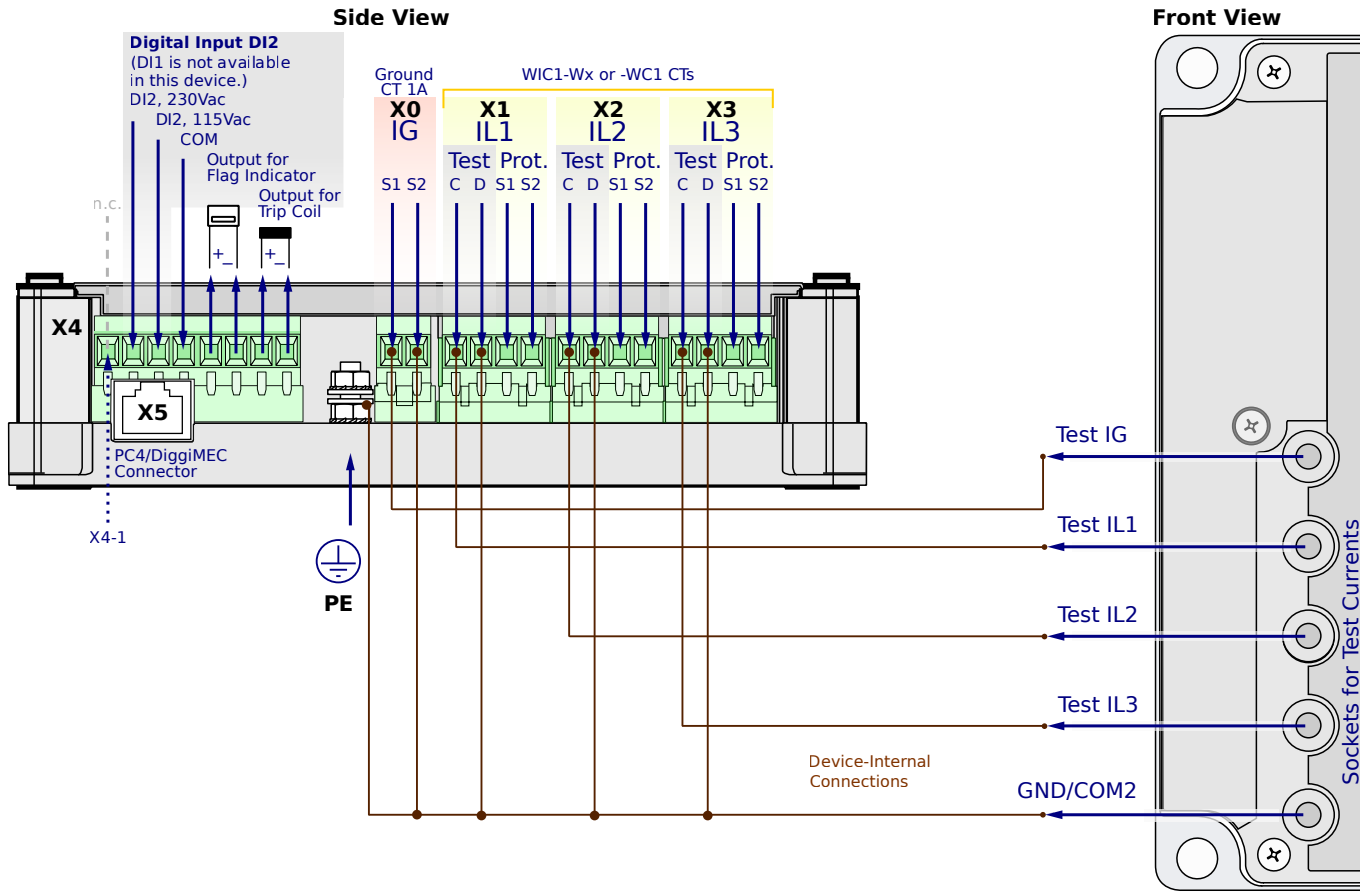


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1PA0

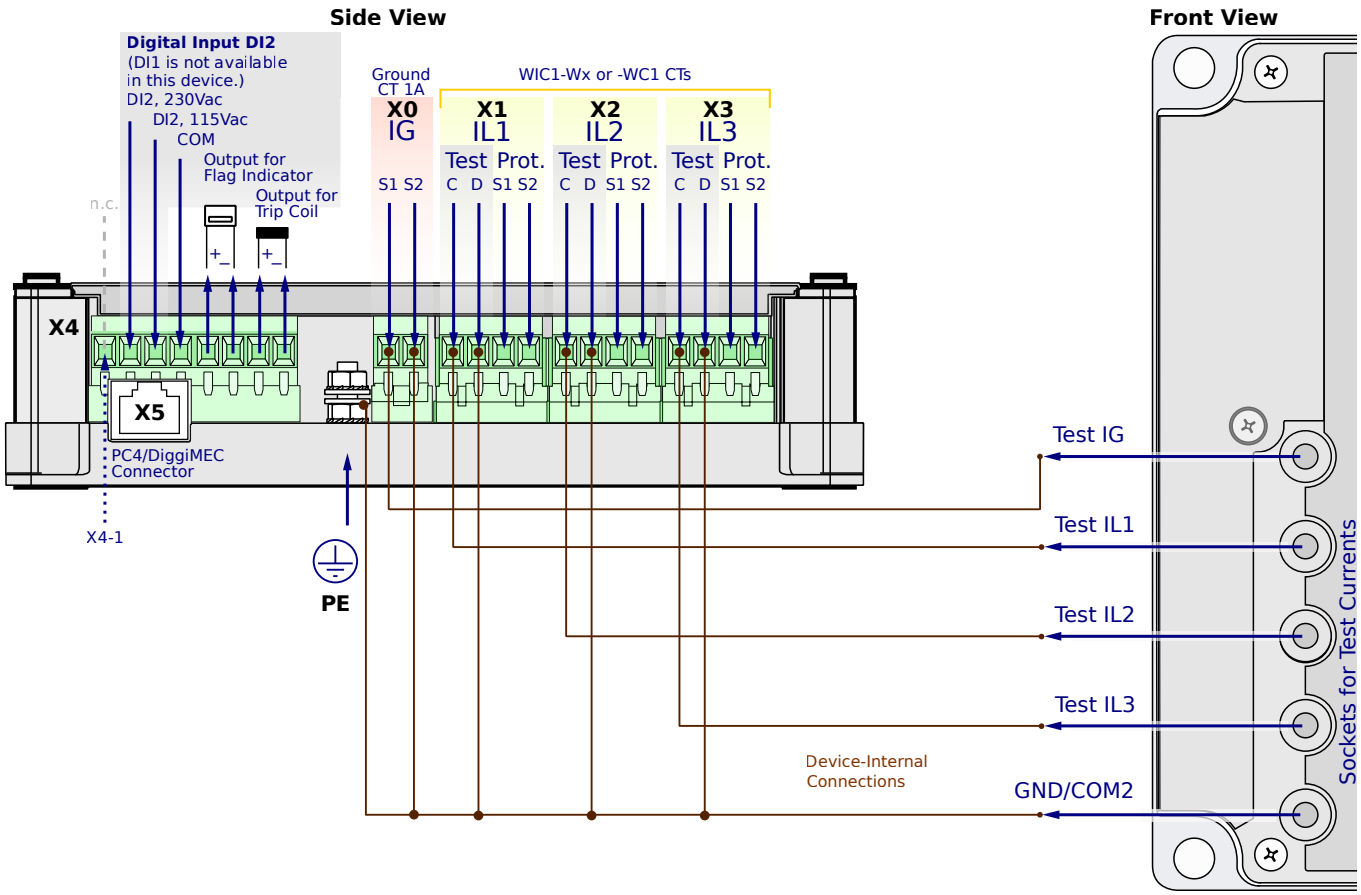


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC1PAH

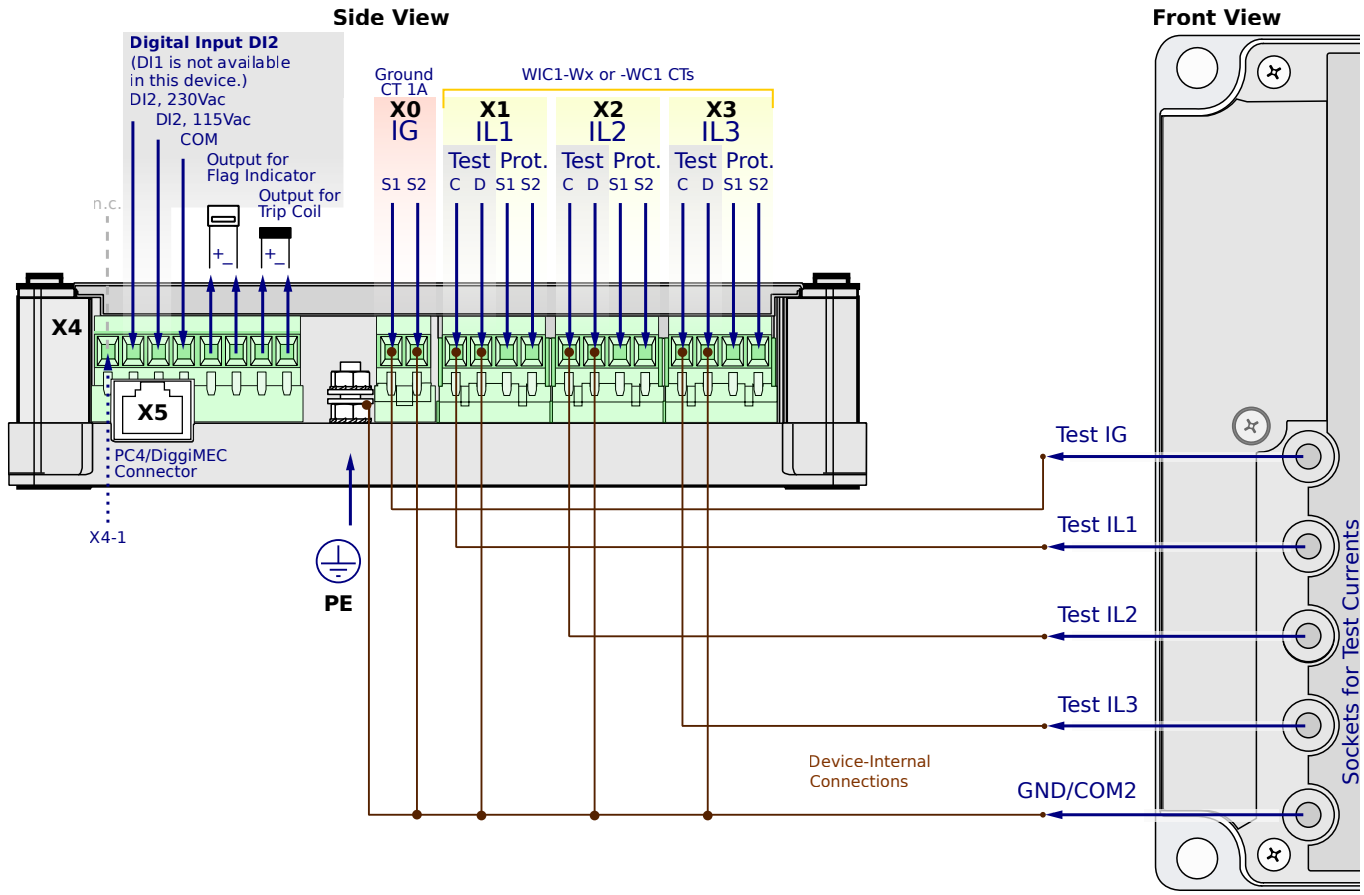


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2SA0

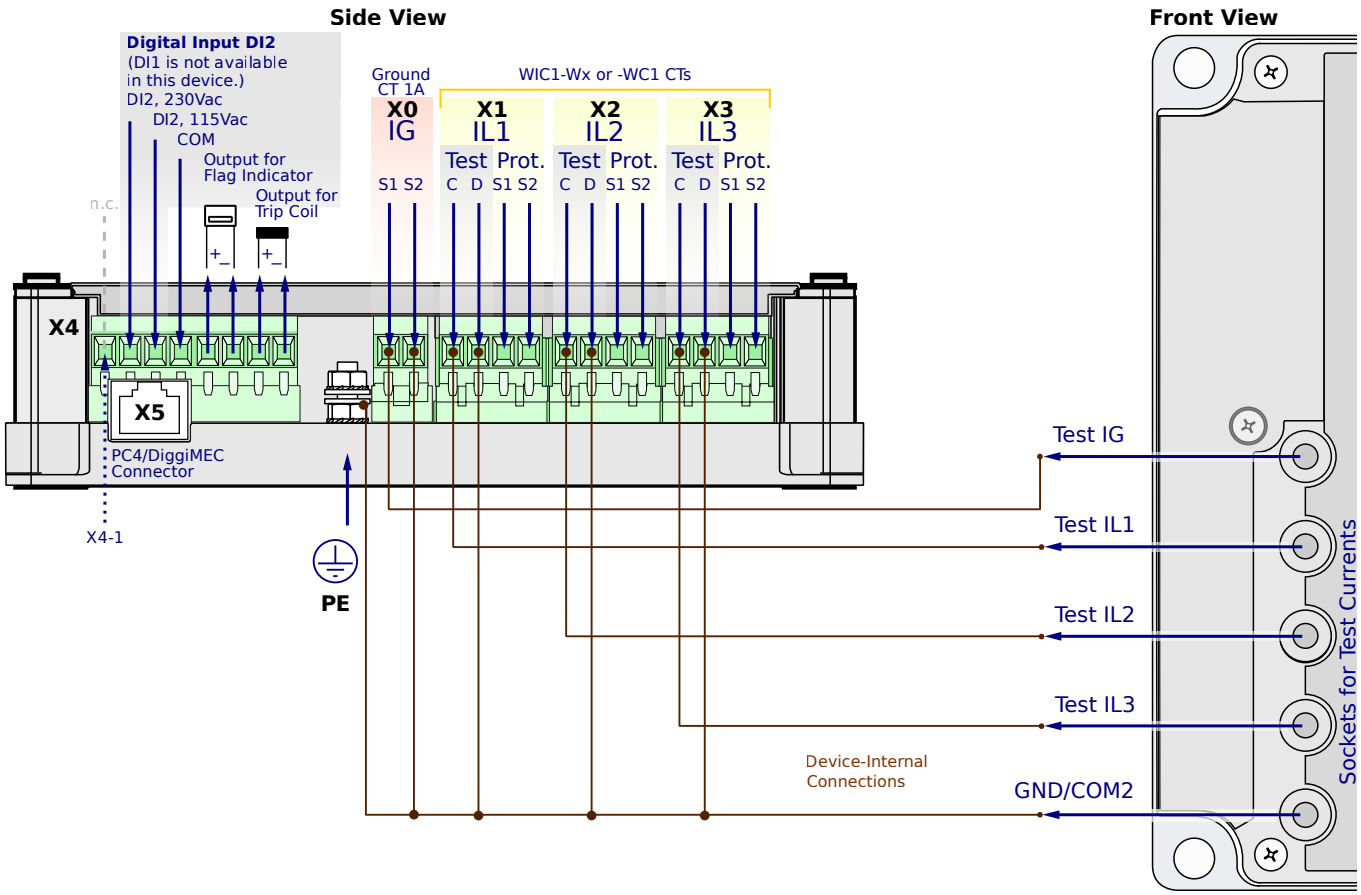


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2SAH

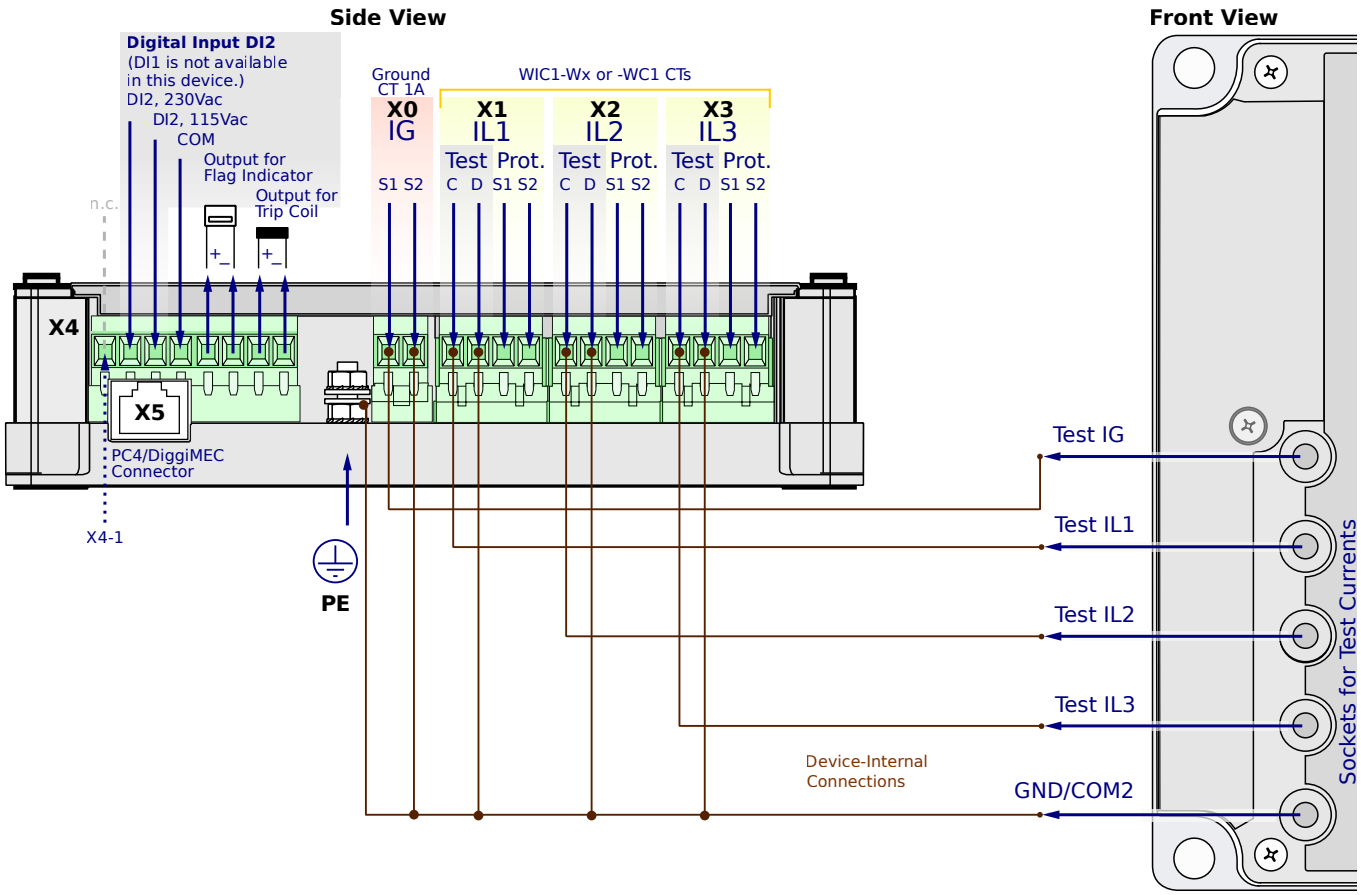


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2AA0

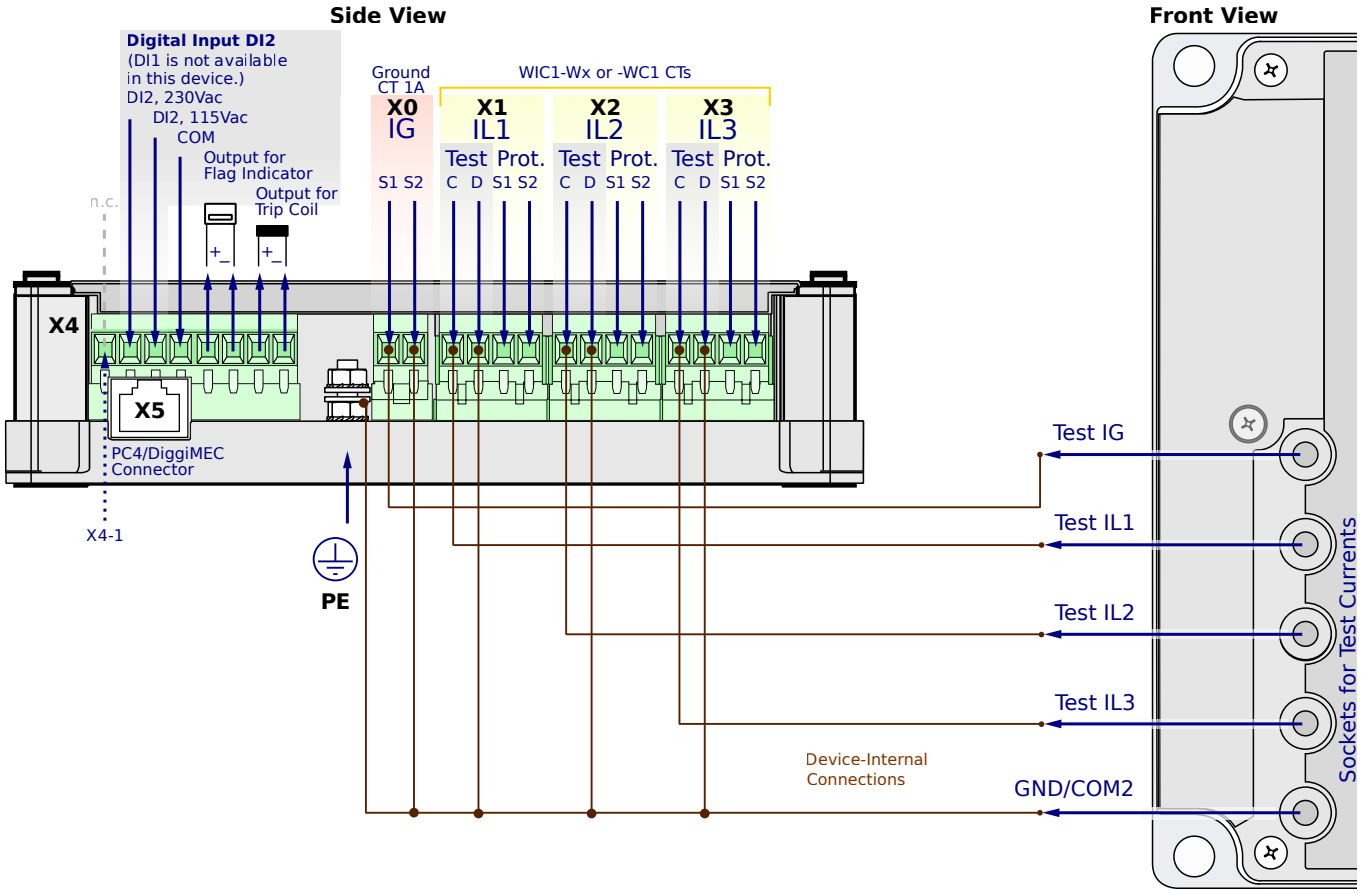


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2AAH

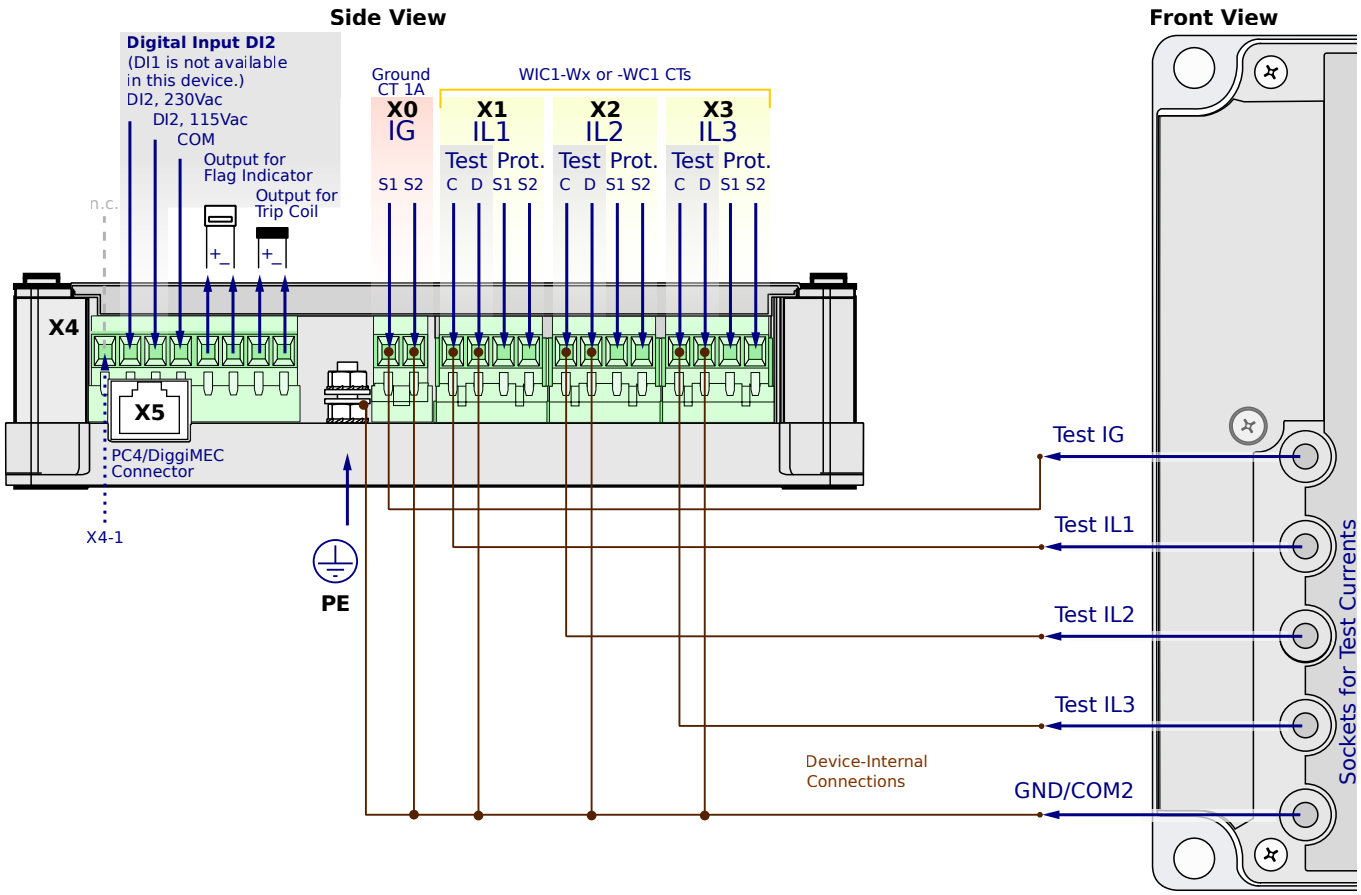


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2PA0

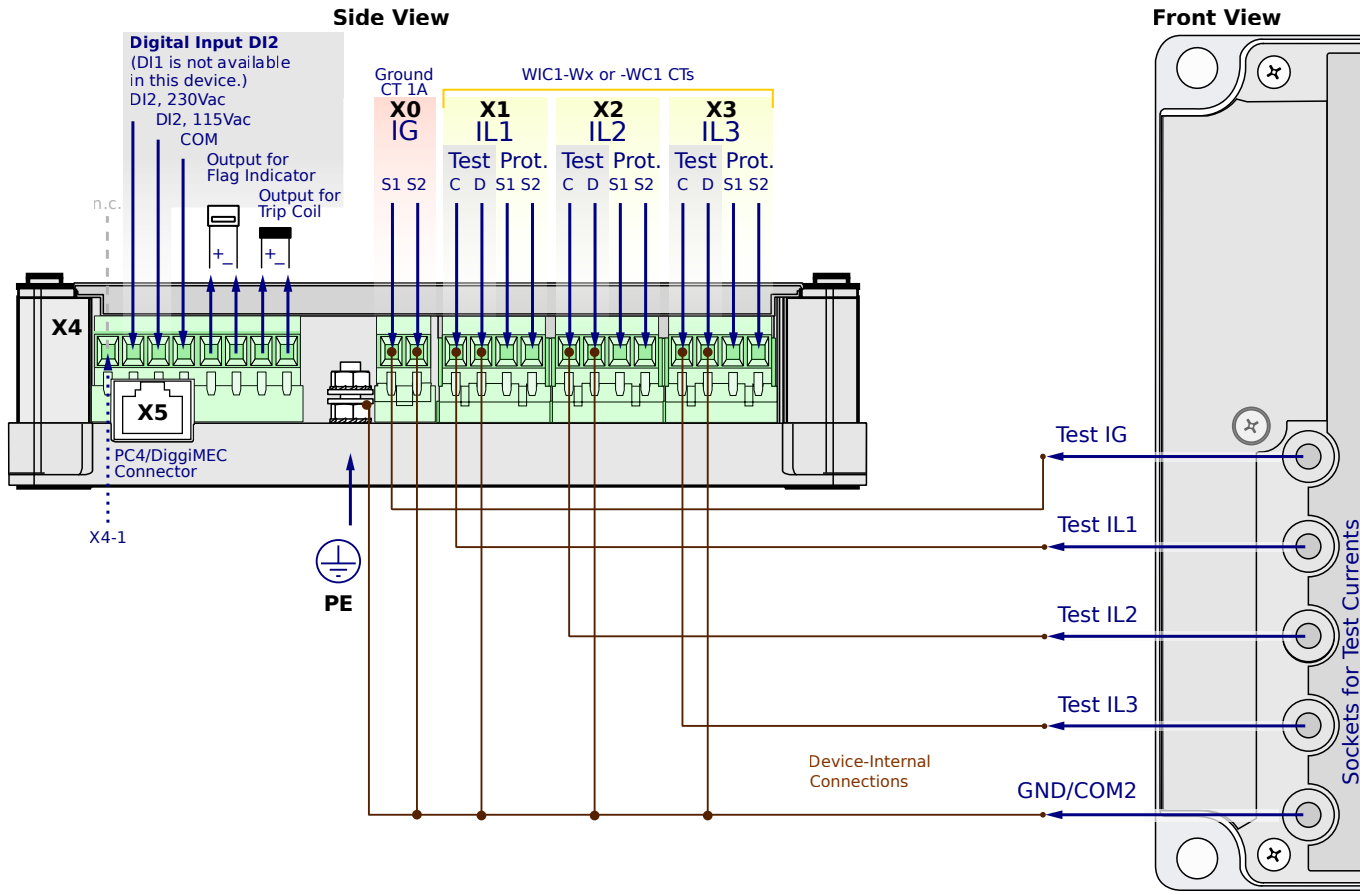


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6NC2PAH

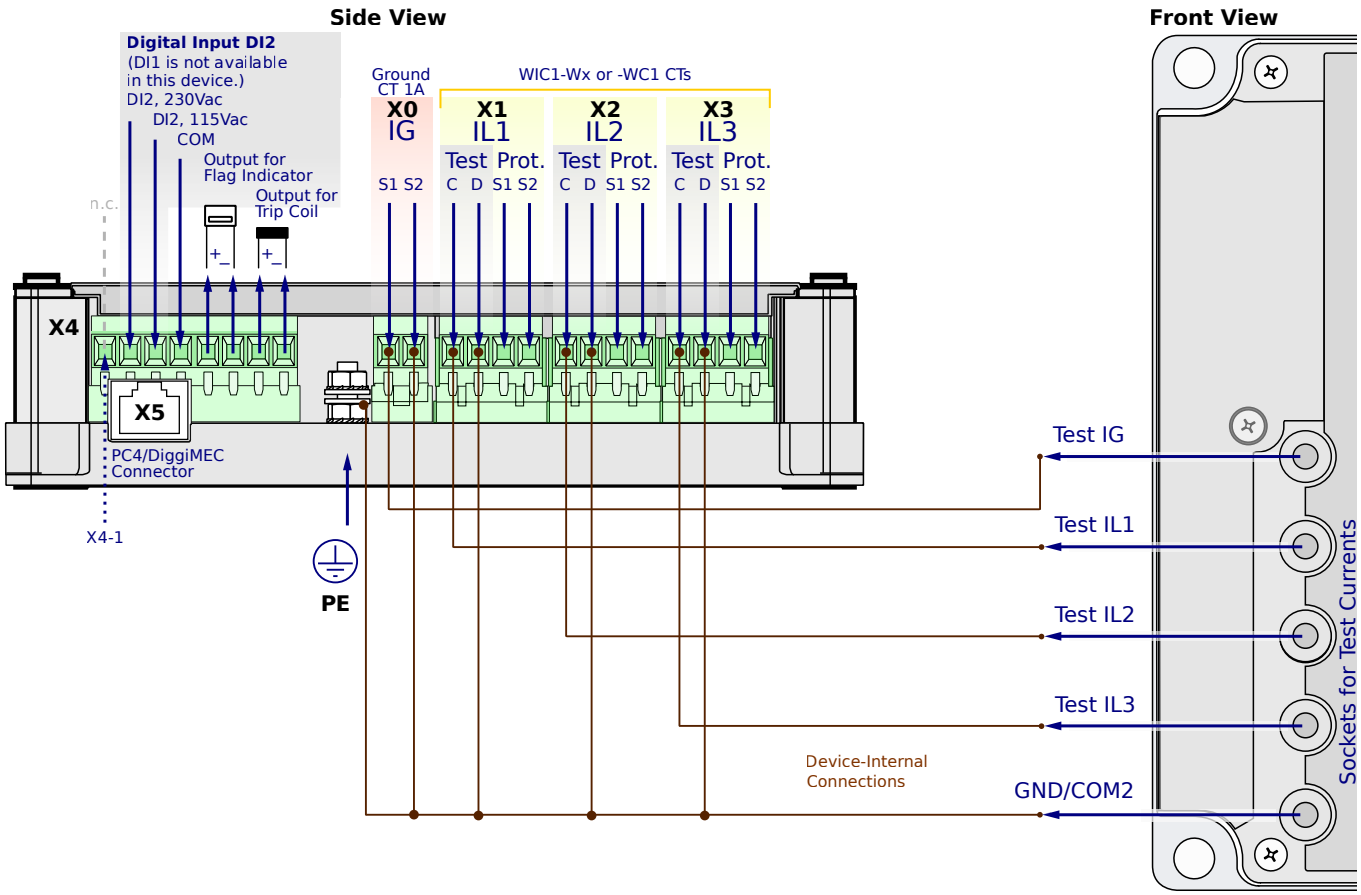


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1SA0

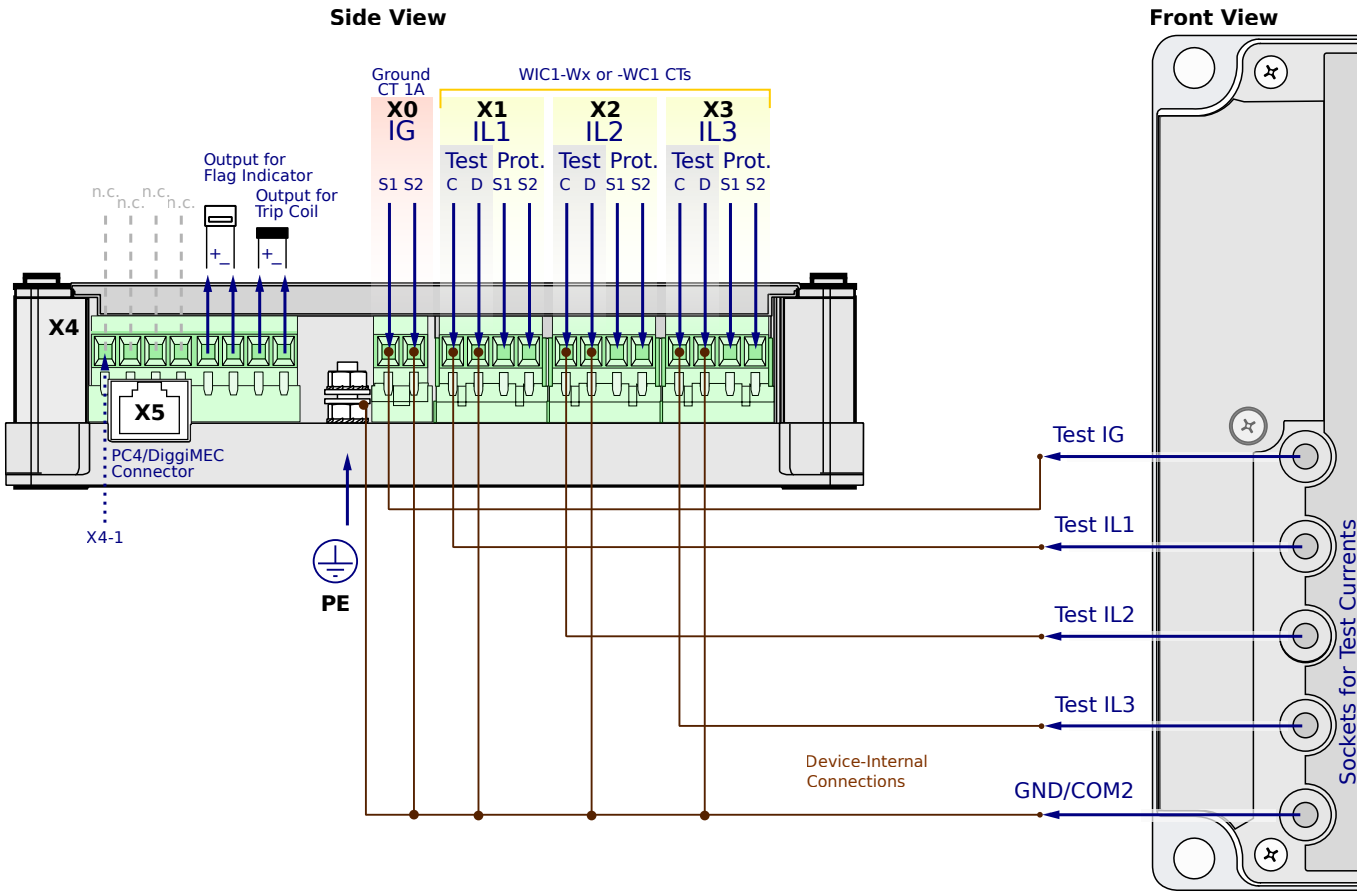


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1SAH

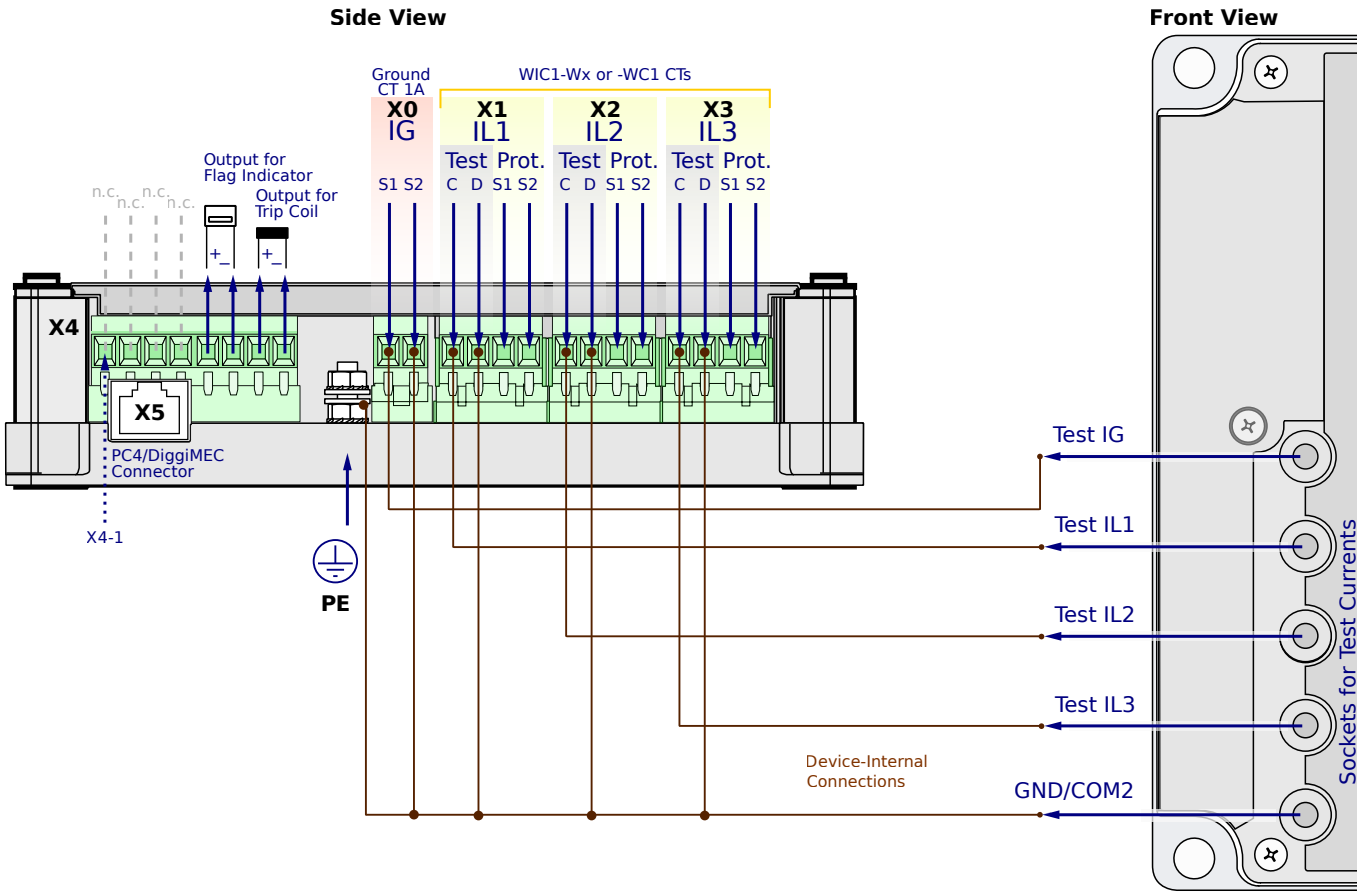


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1AA0

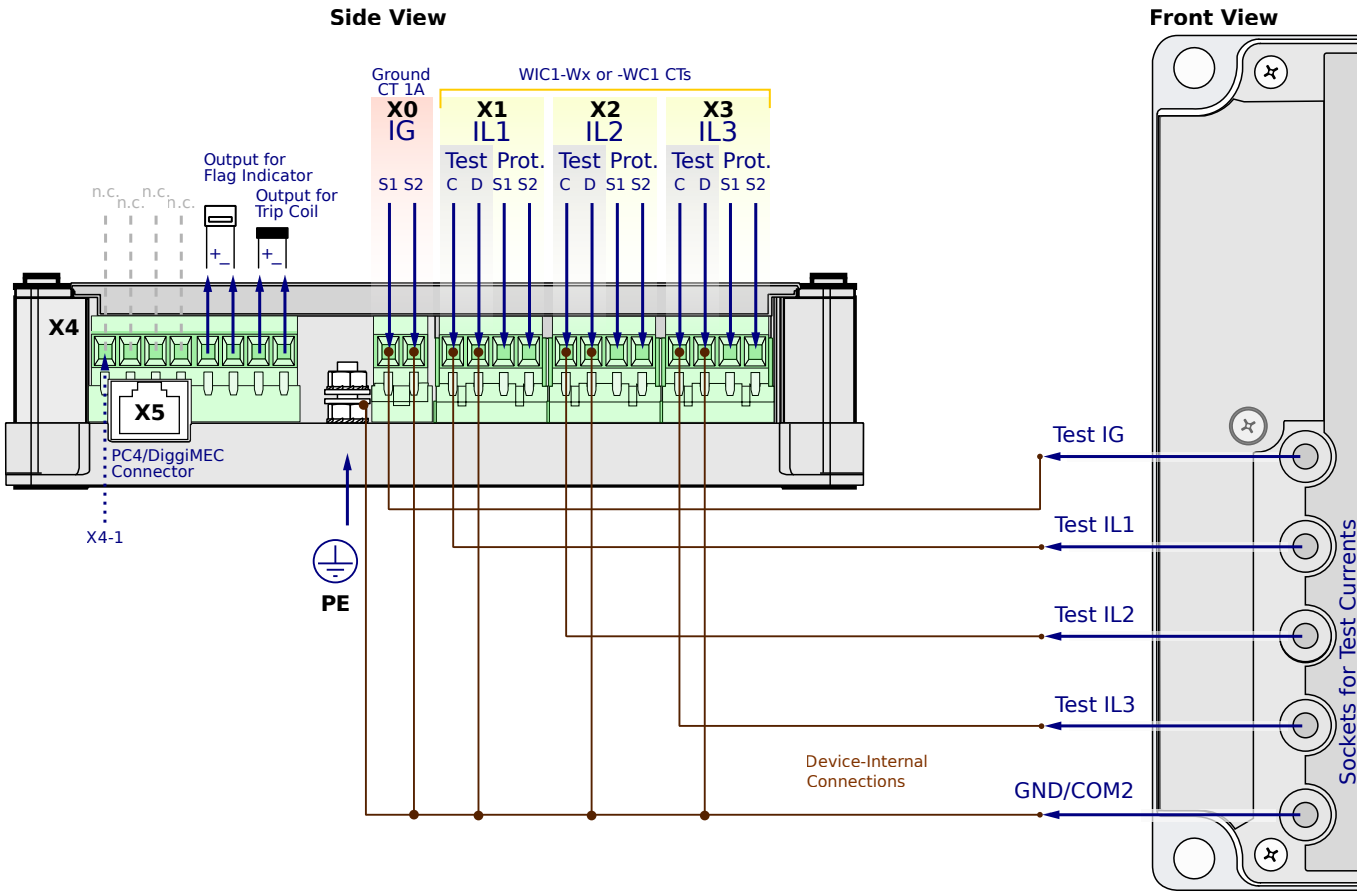


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1AAH

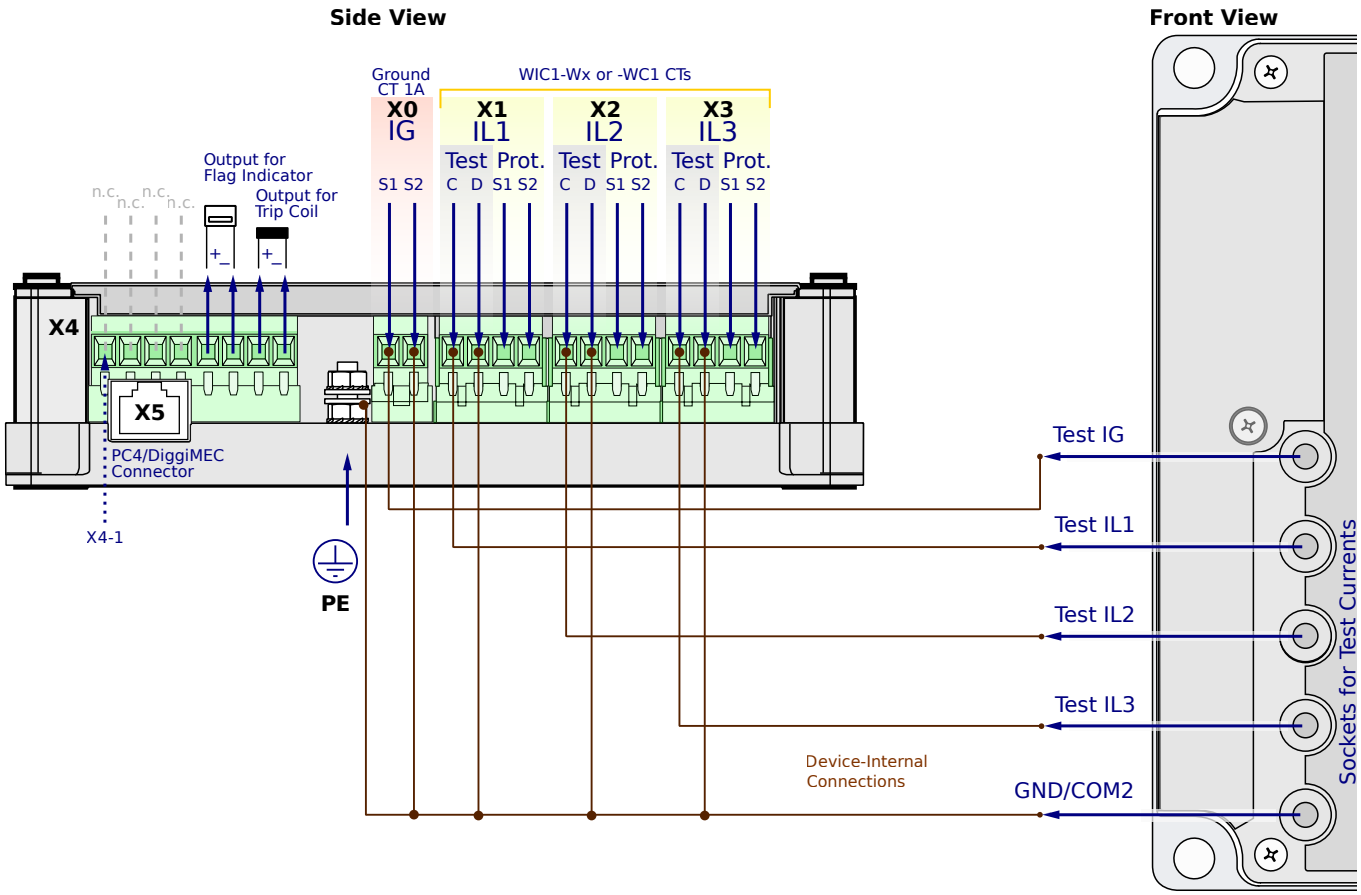


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1PA0

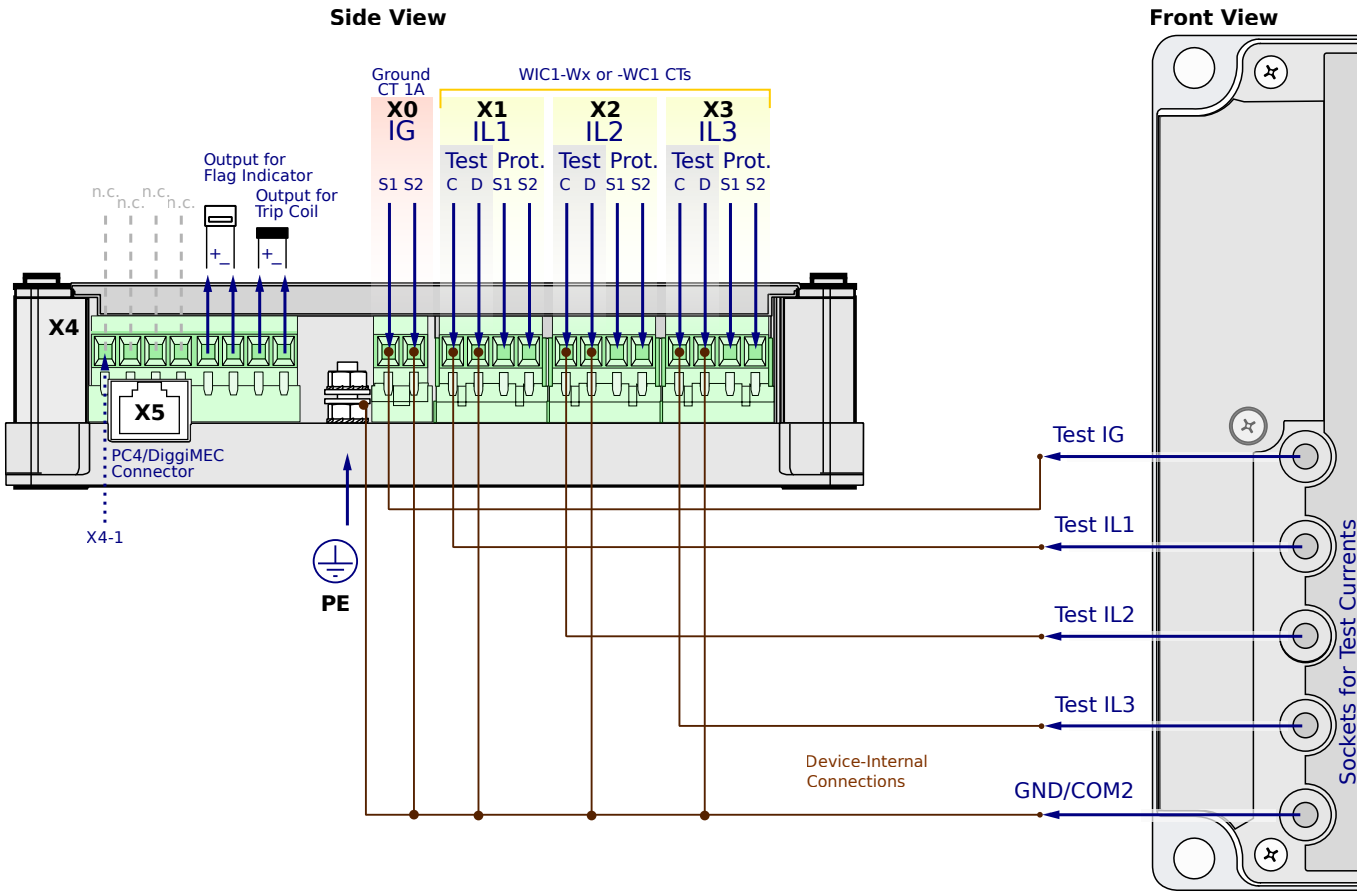


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN1PAH

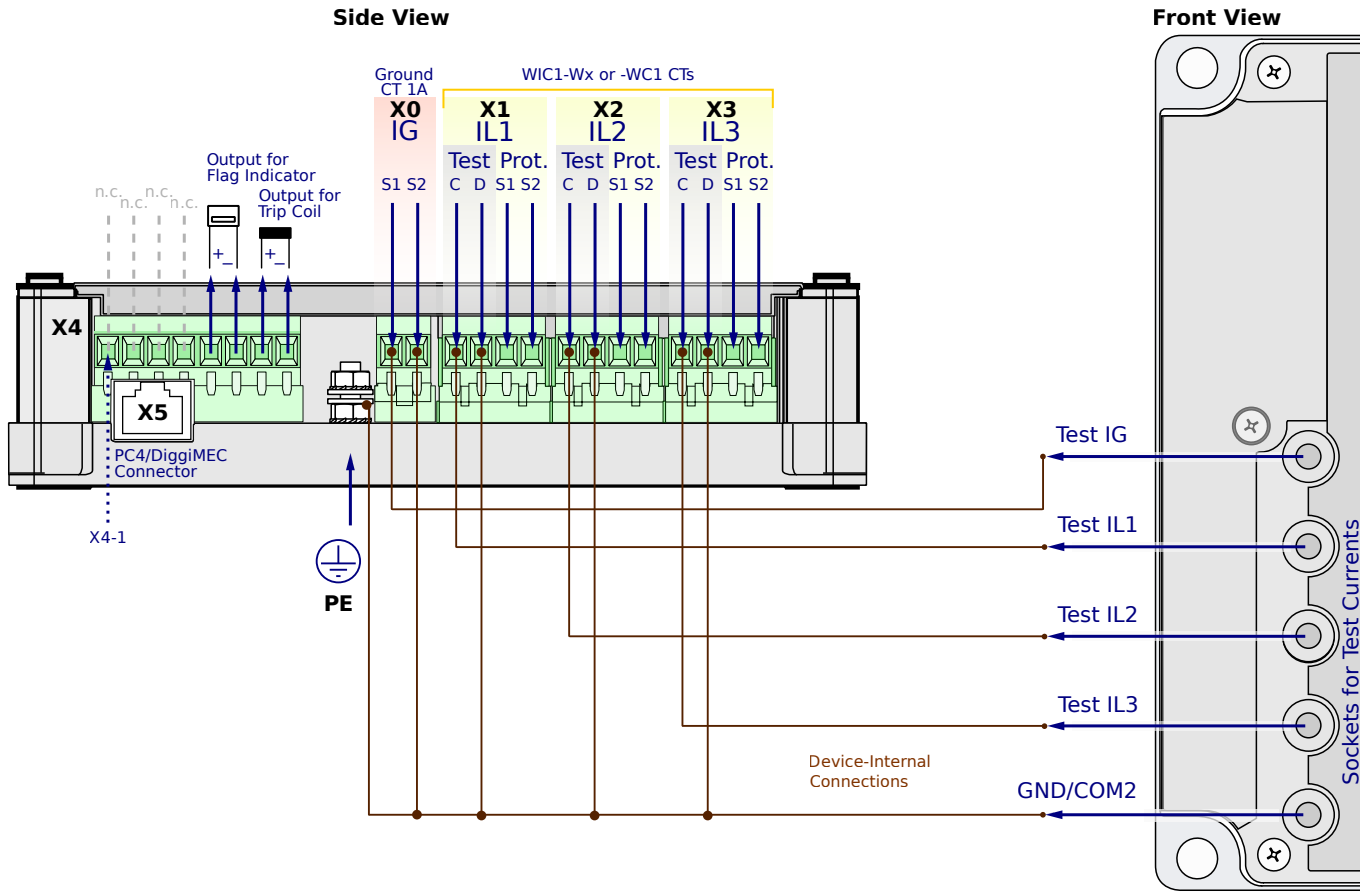


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2SA0

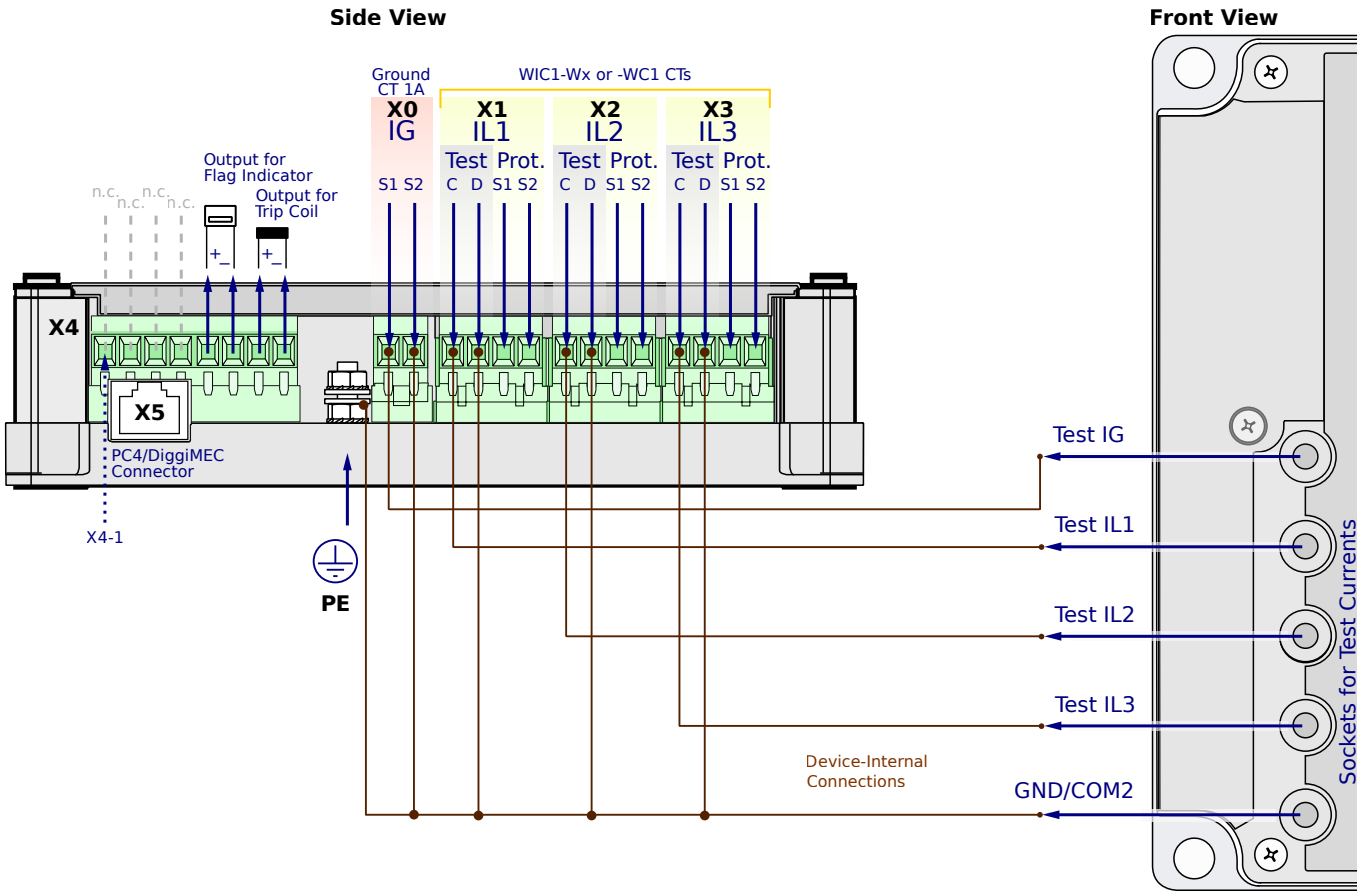


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2SAH

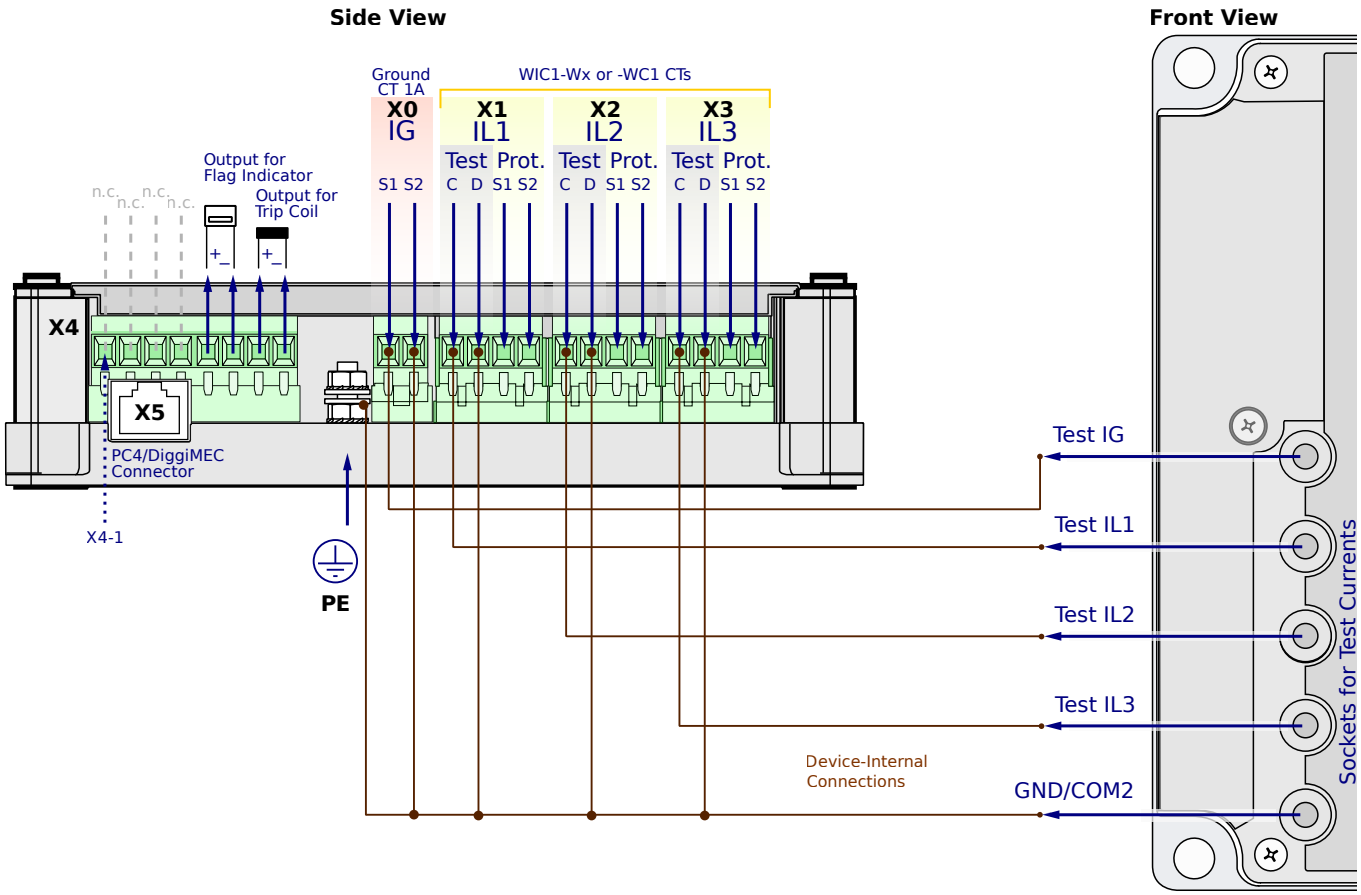


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2AA0

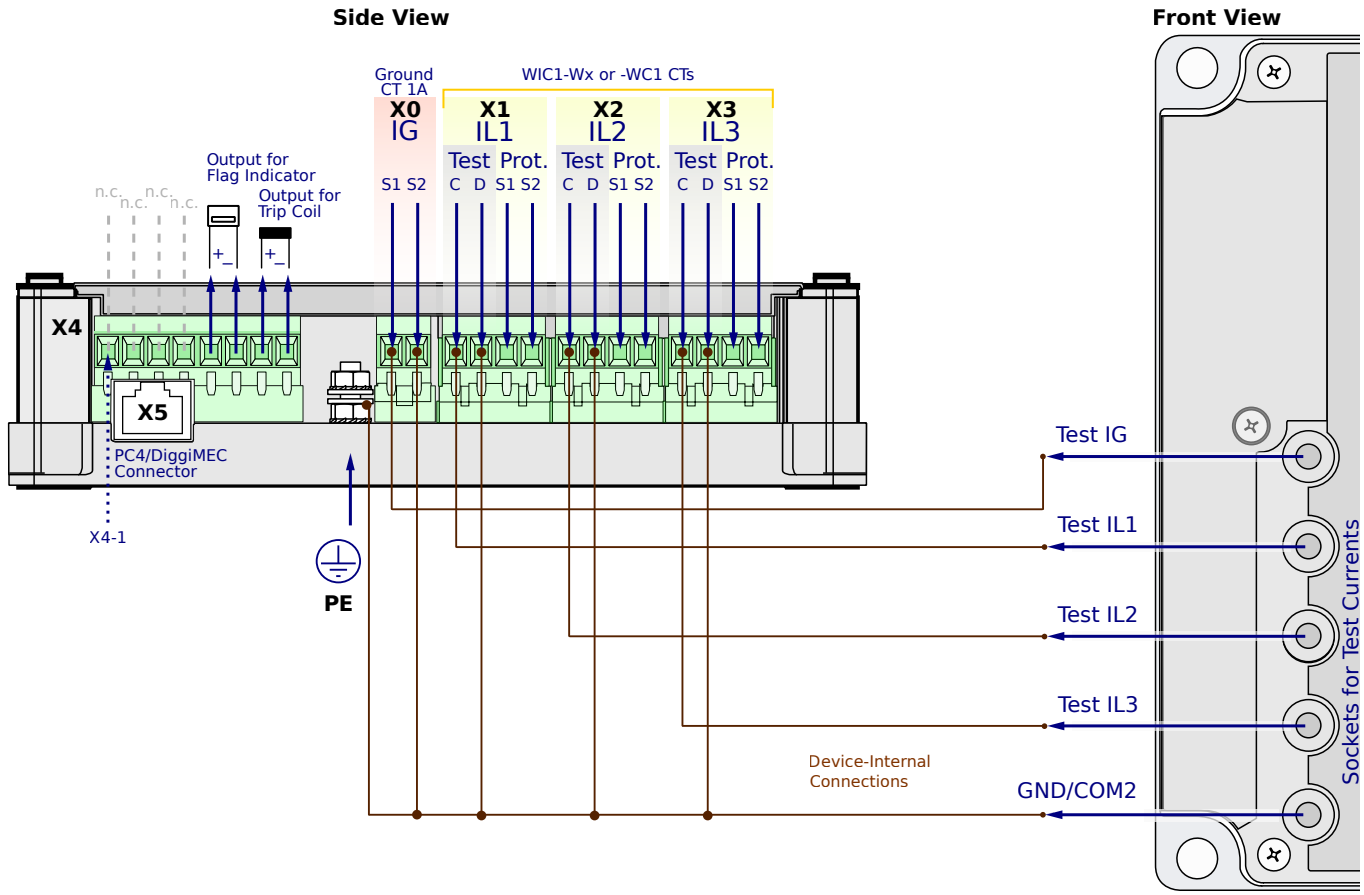


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2AAH

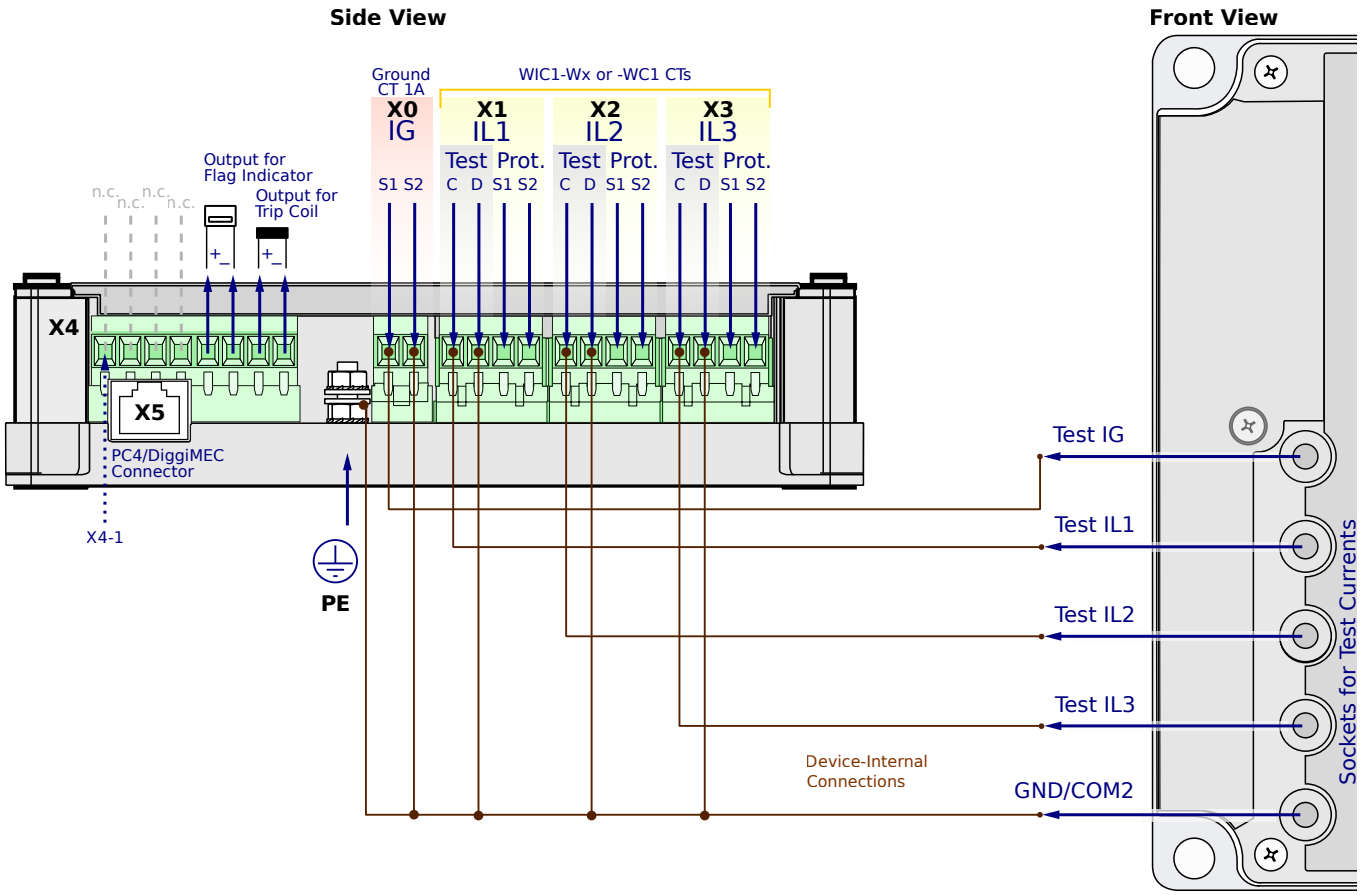


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2PA0

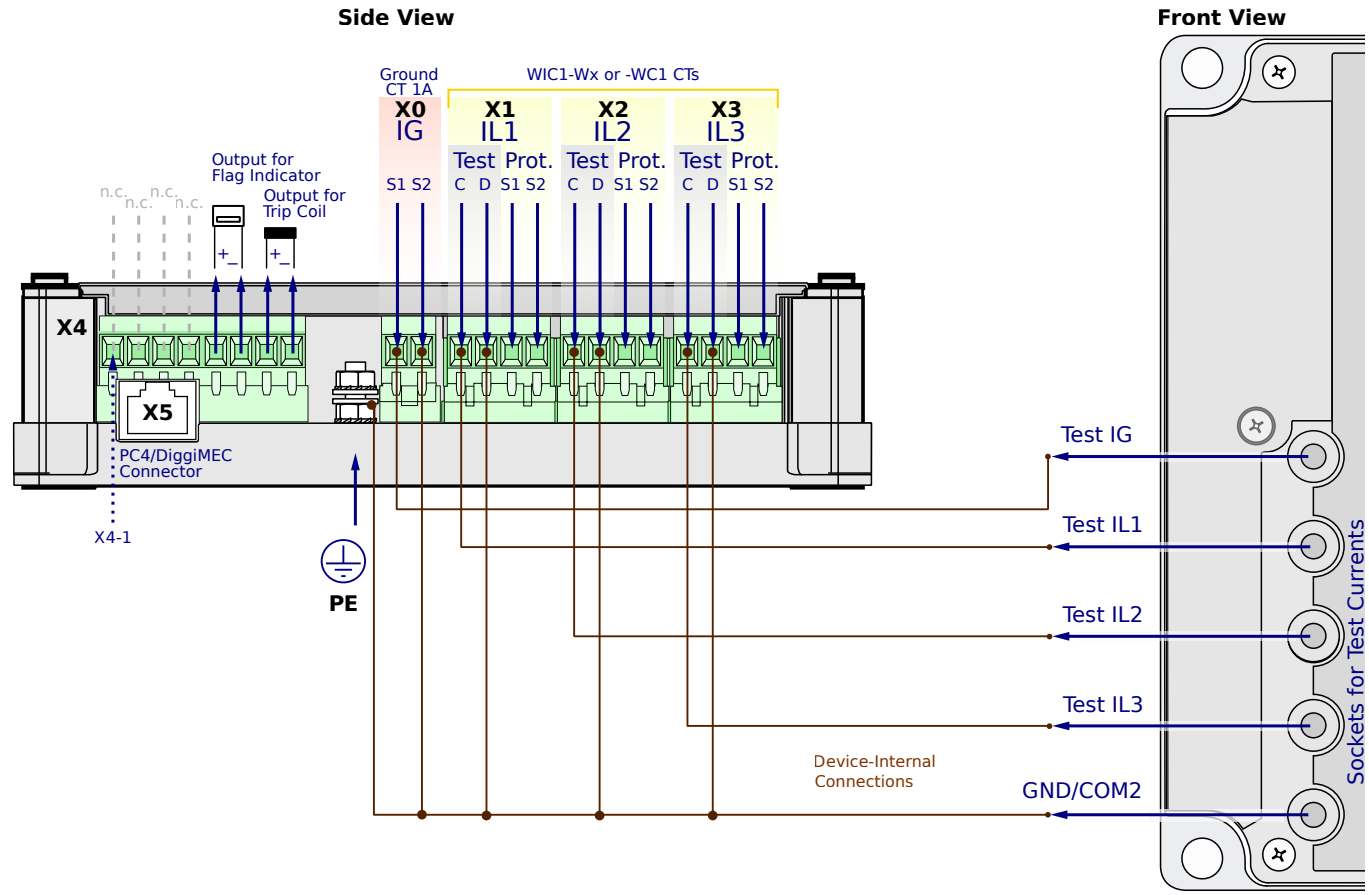


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FN2PAH

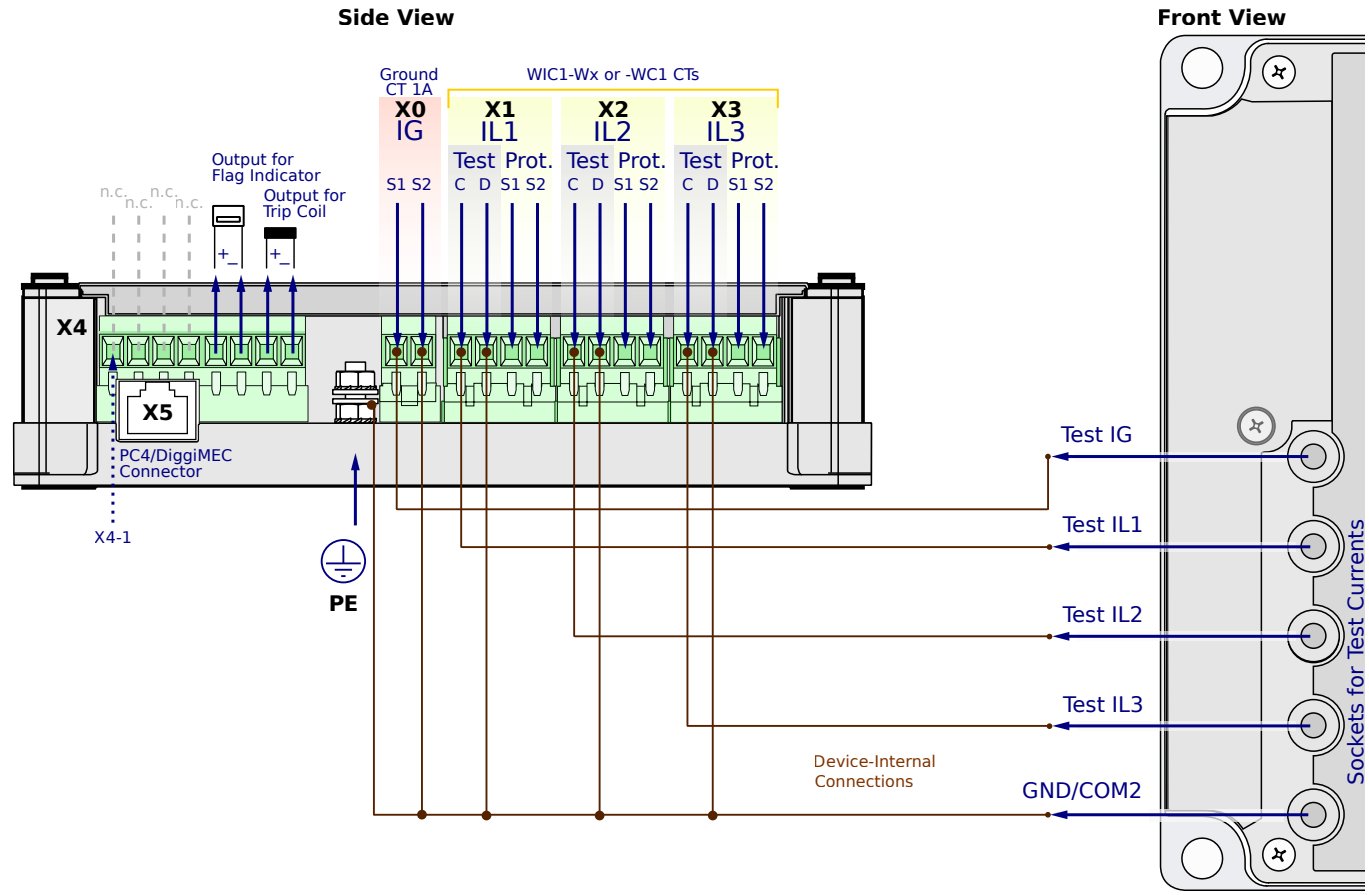


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1SA0

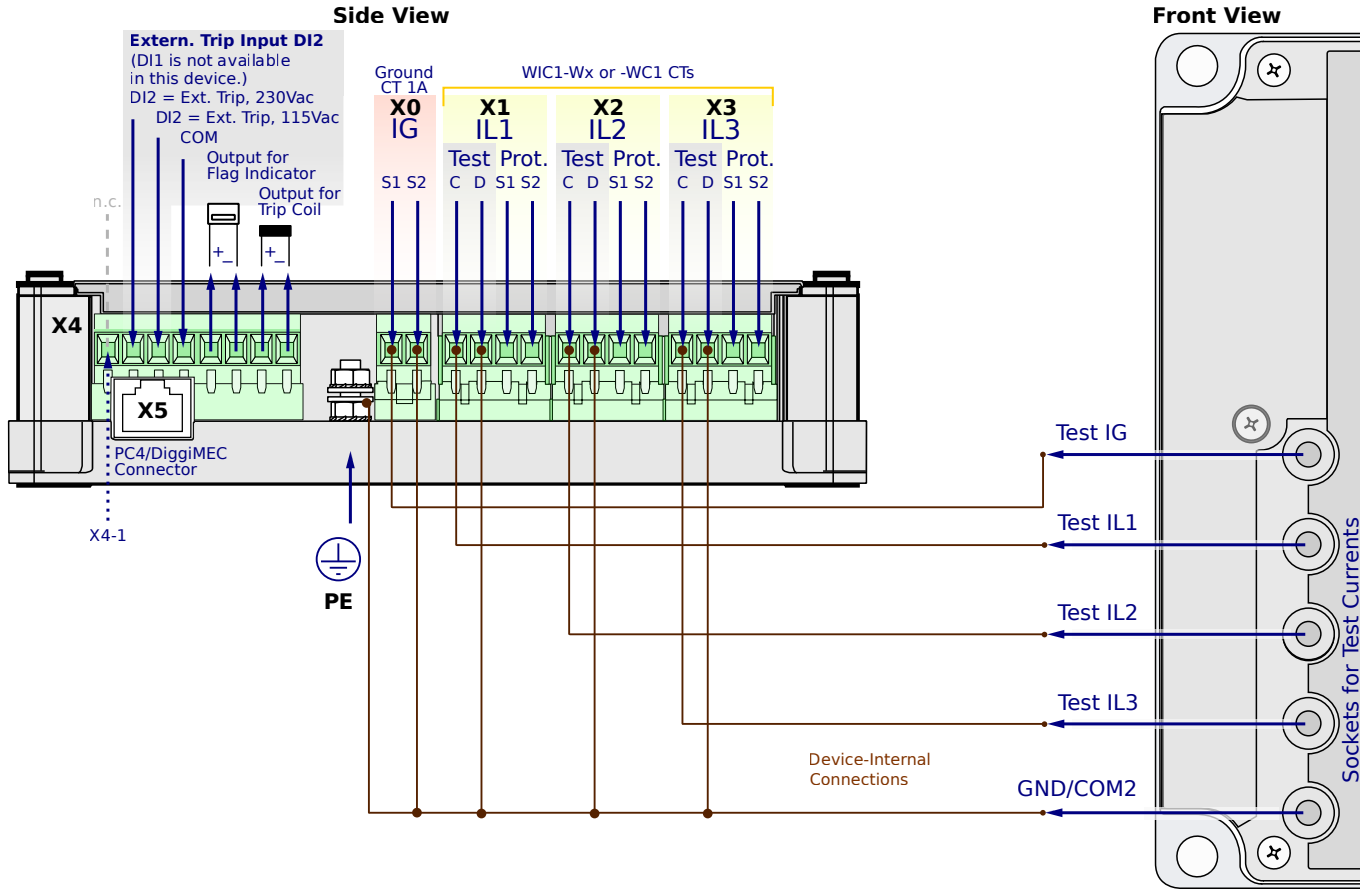


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1SAH

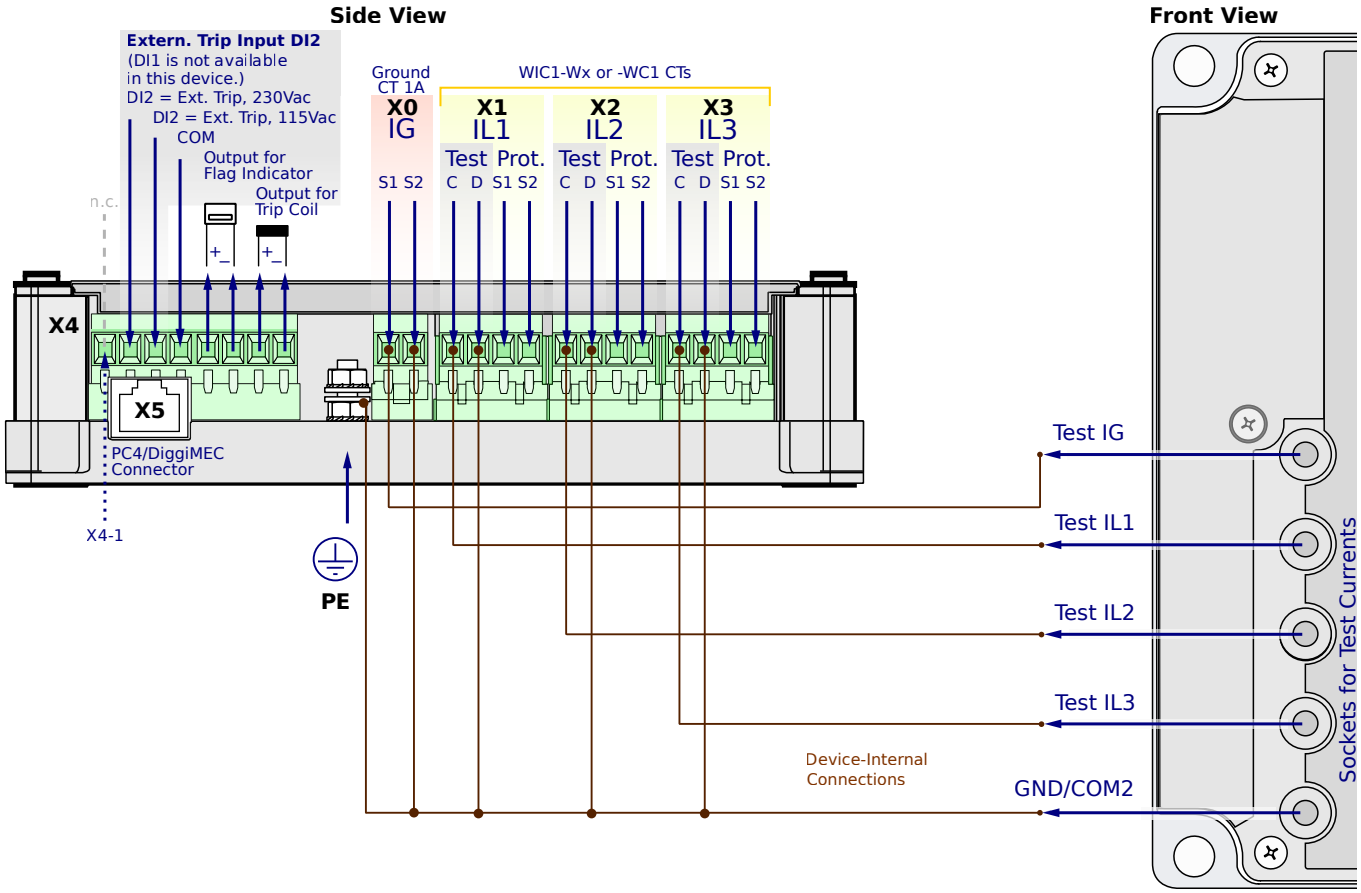


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1AA0

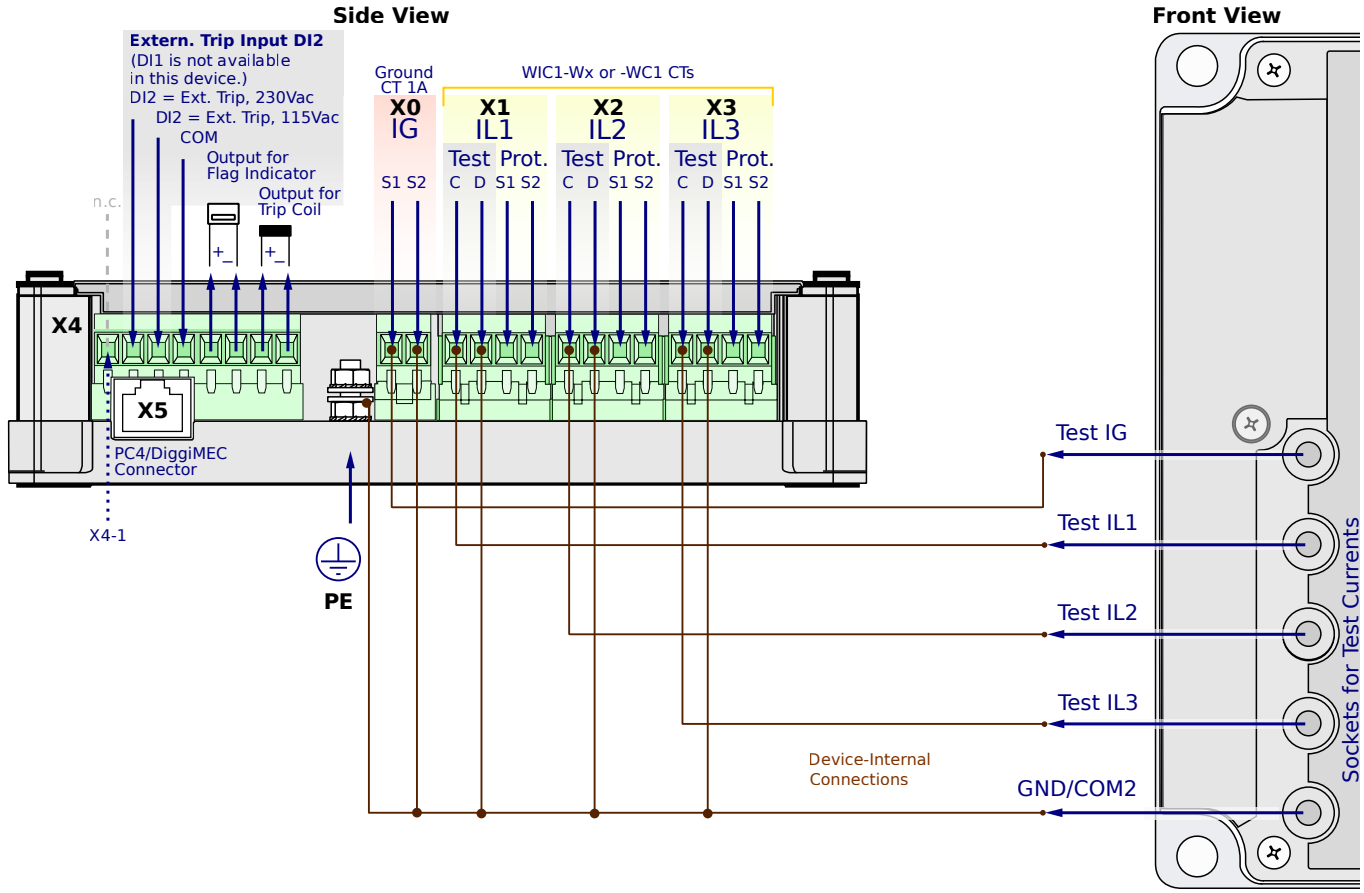


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1AAH

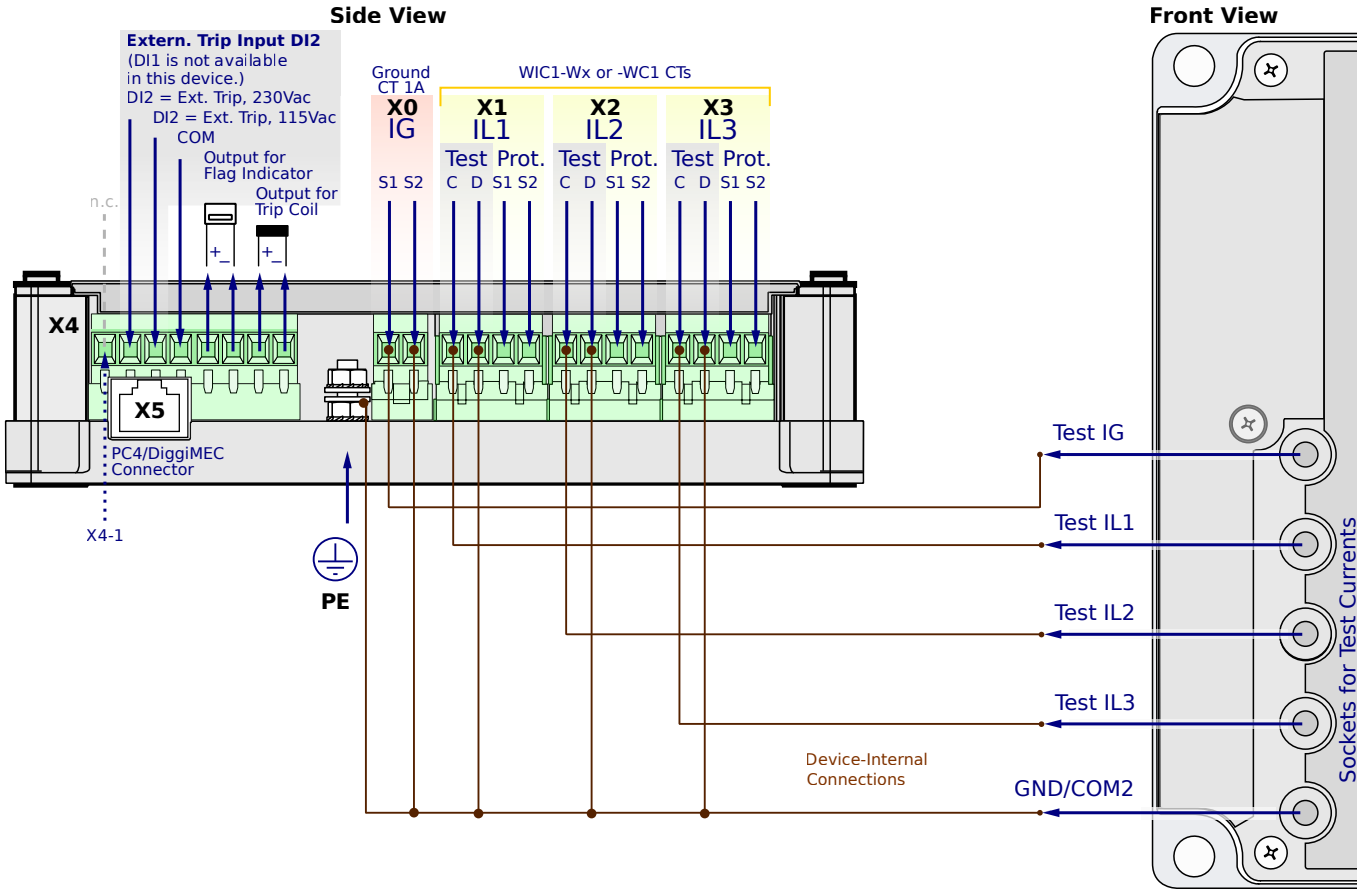


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1PA0

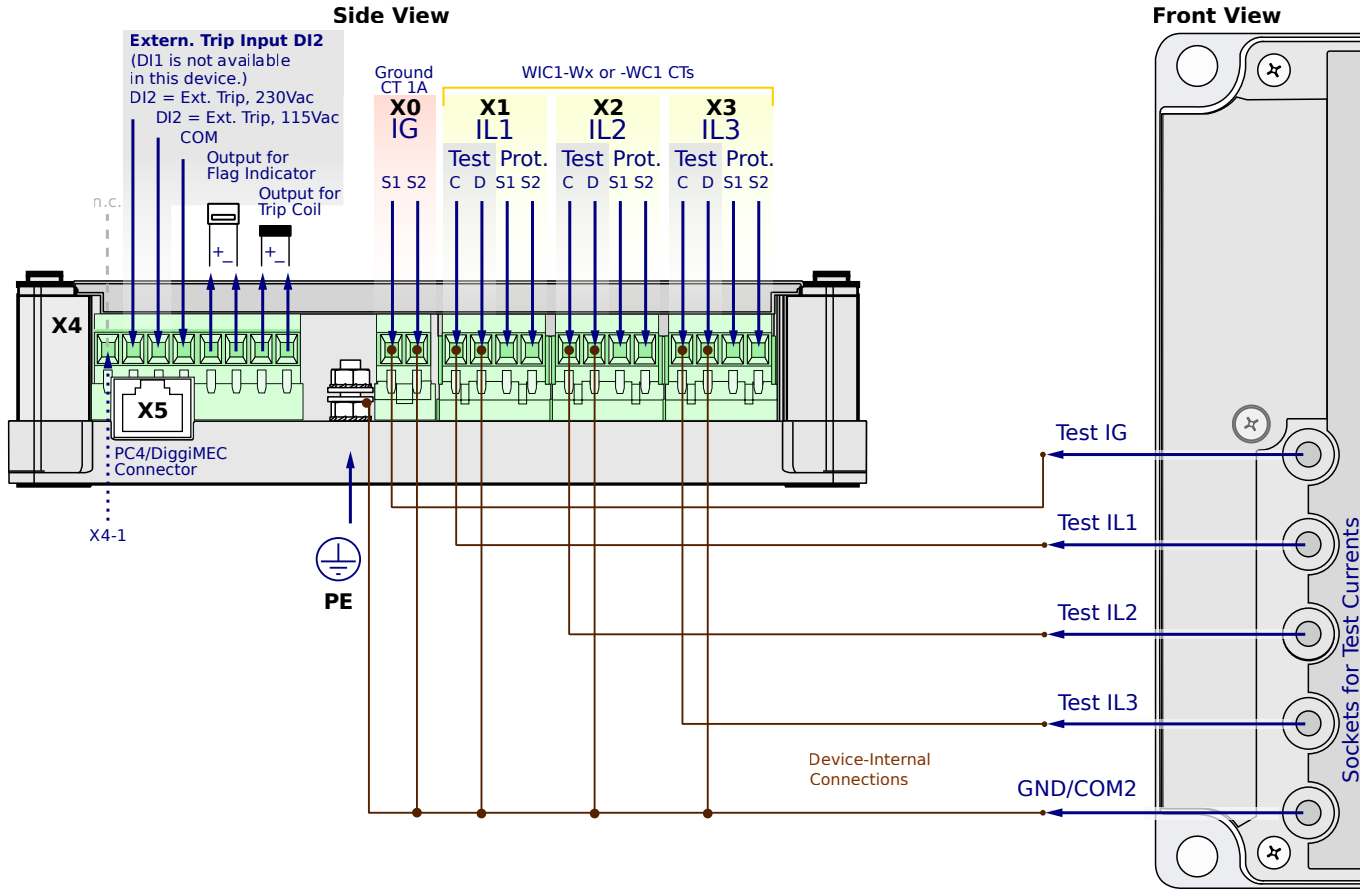


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF1PAH

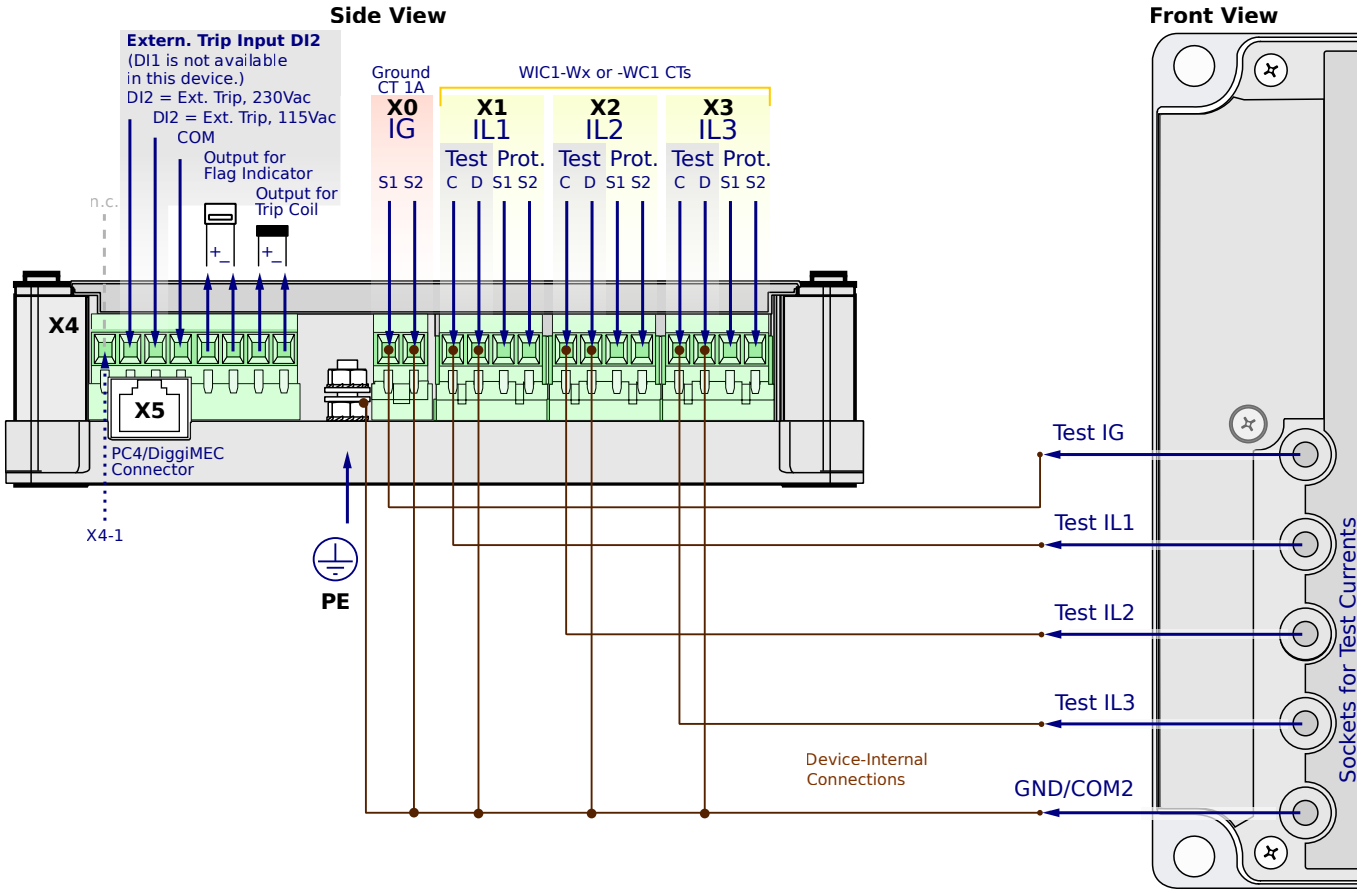


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2SA0

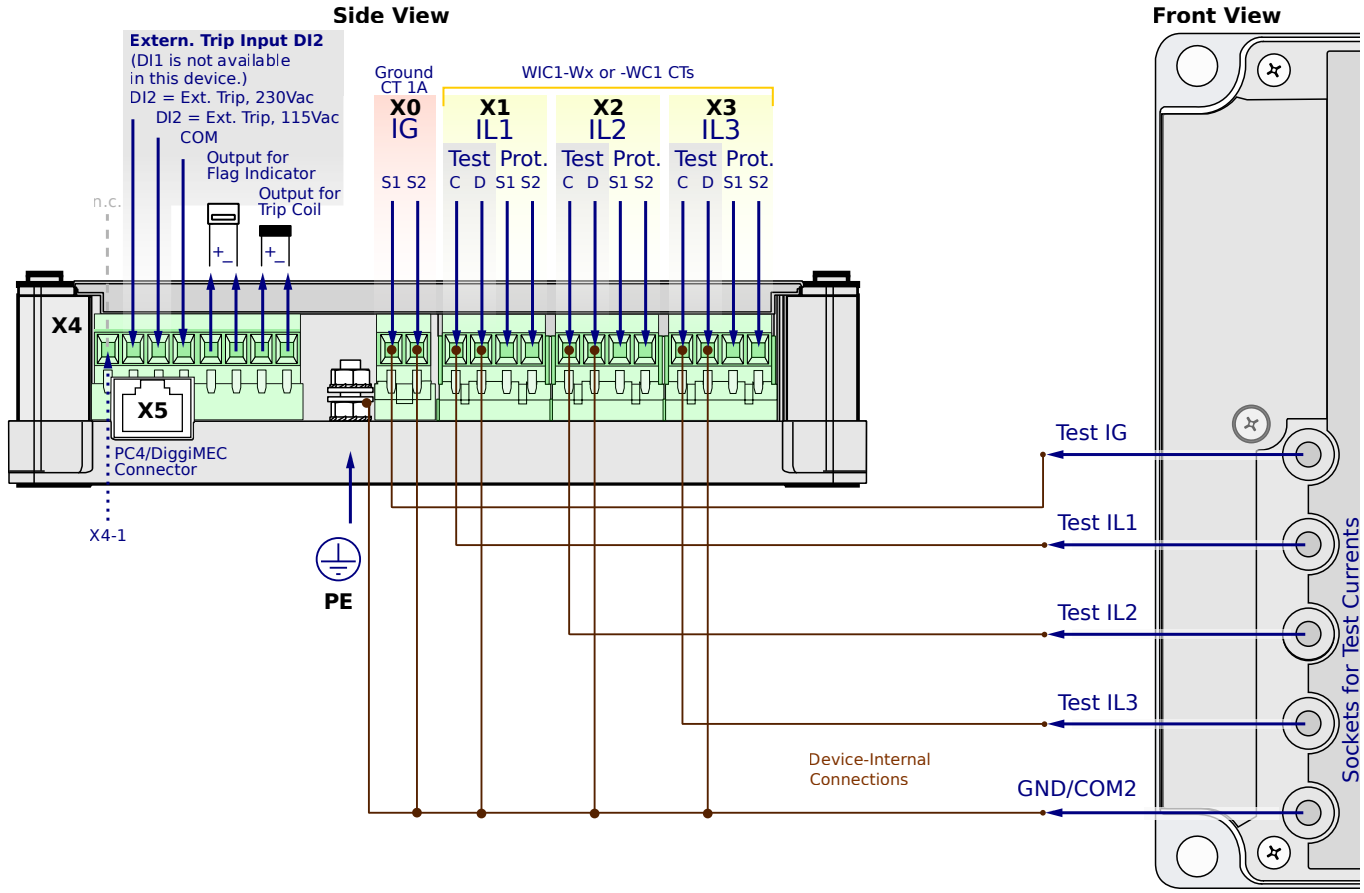


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2SAH

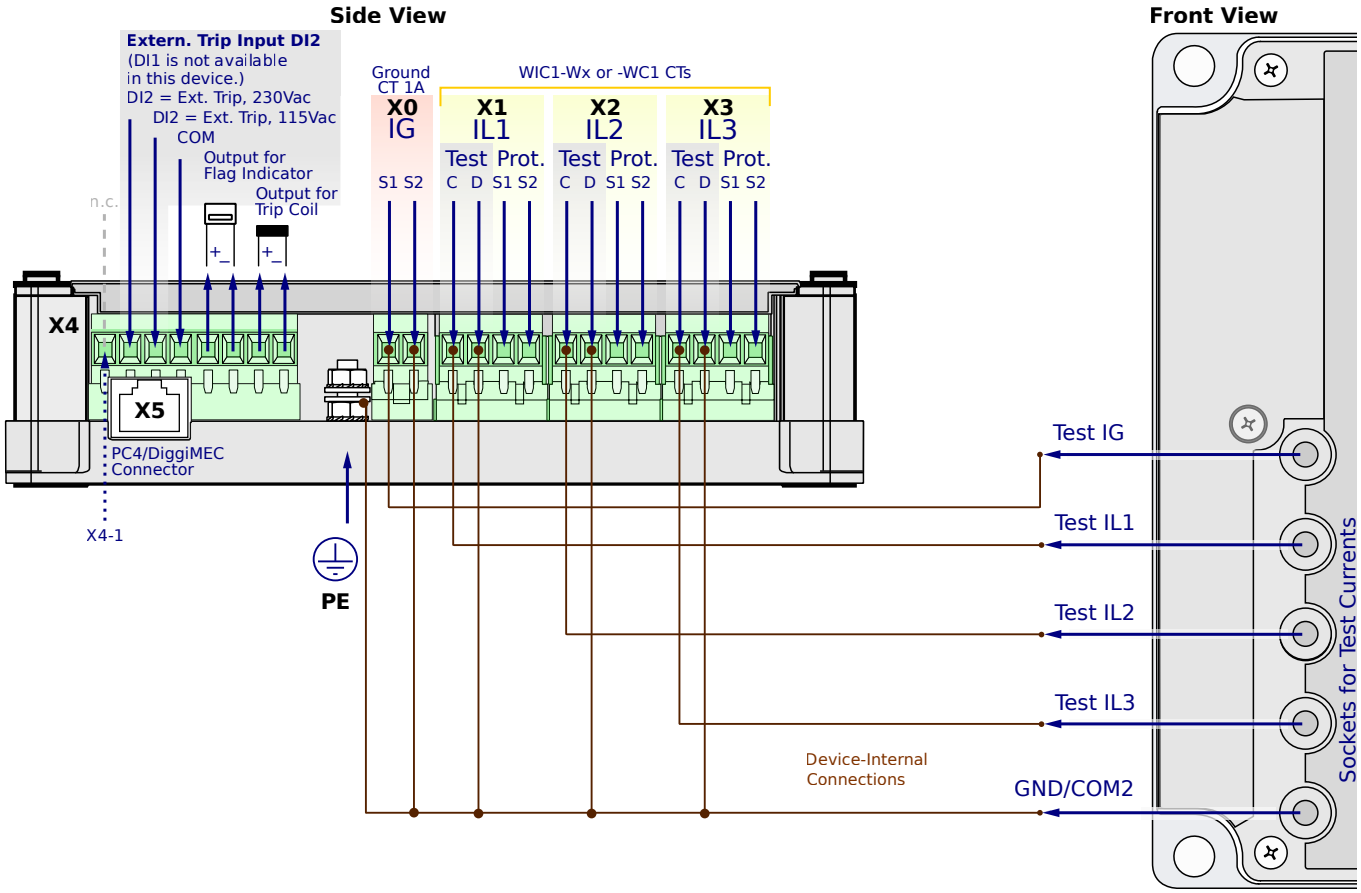


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2AA0

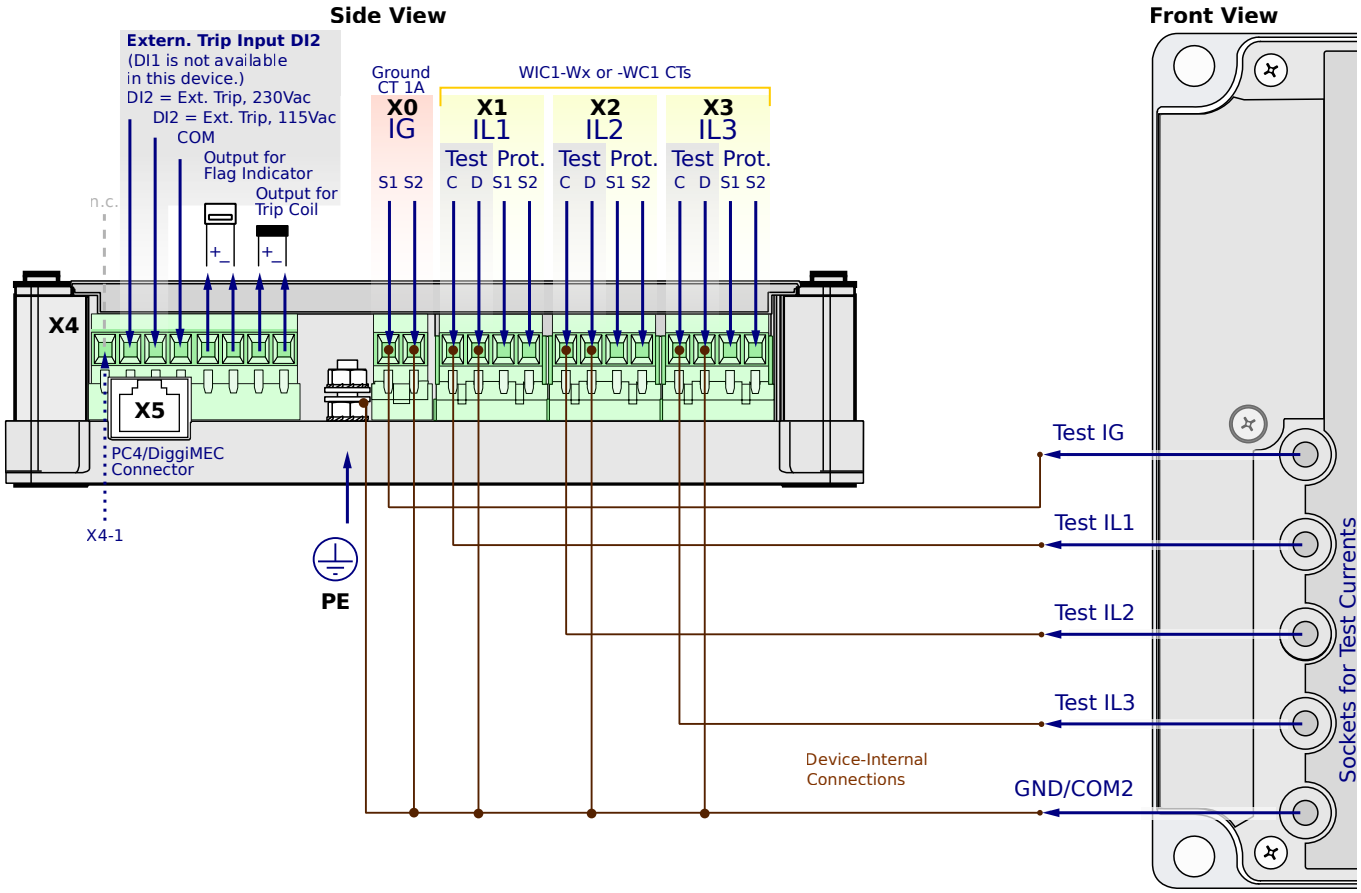


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2AAH

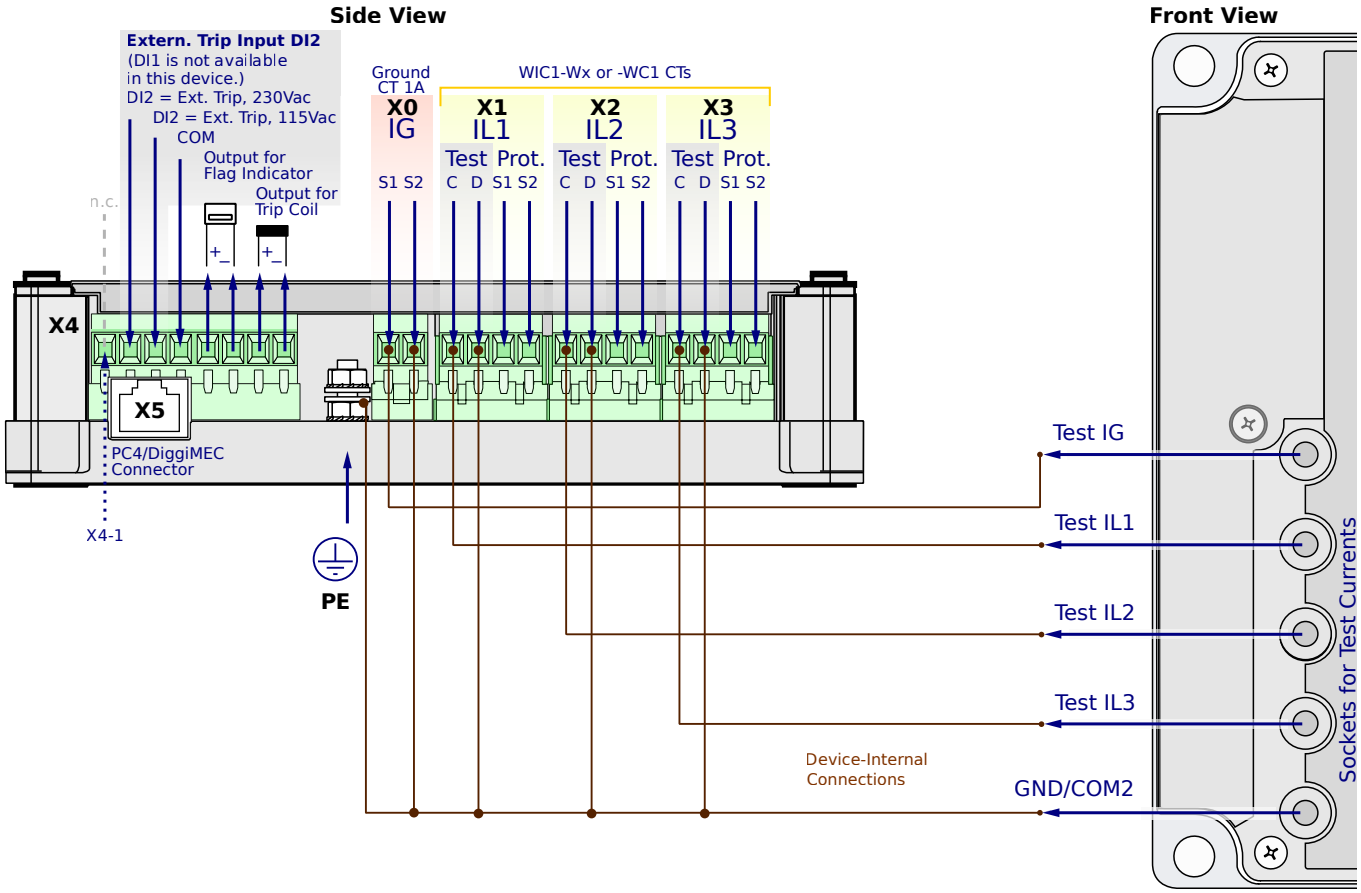


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2PA0

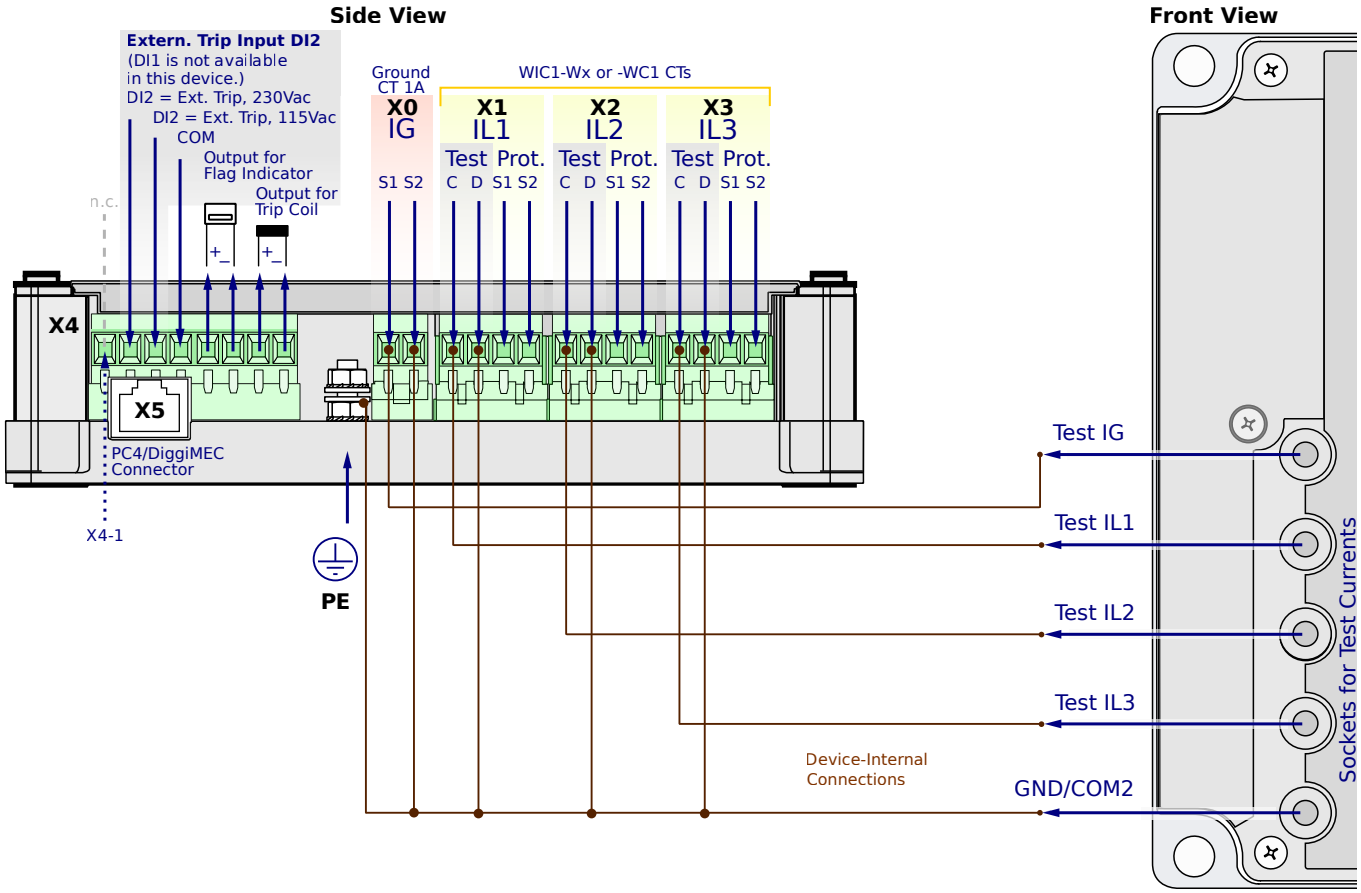


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FF2PAH

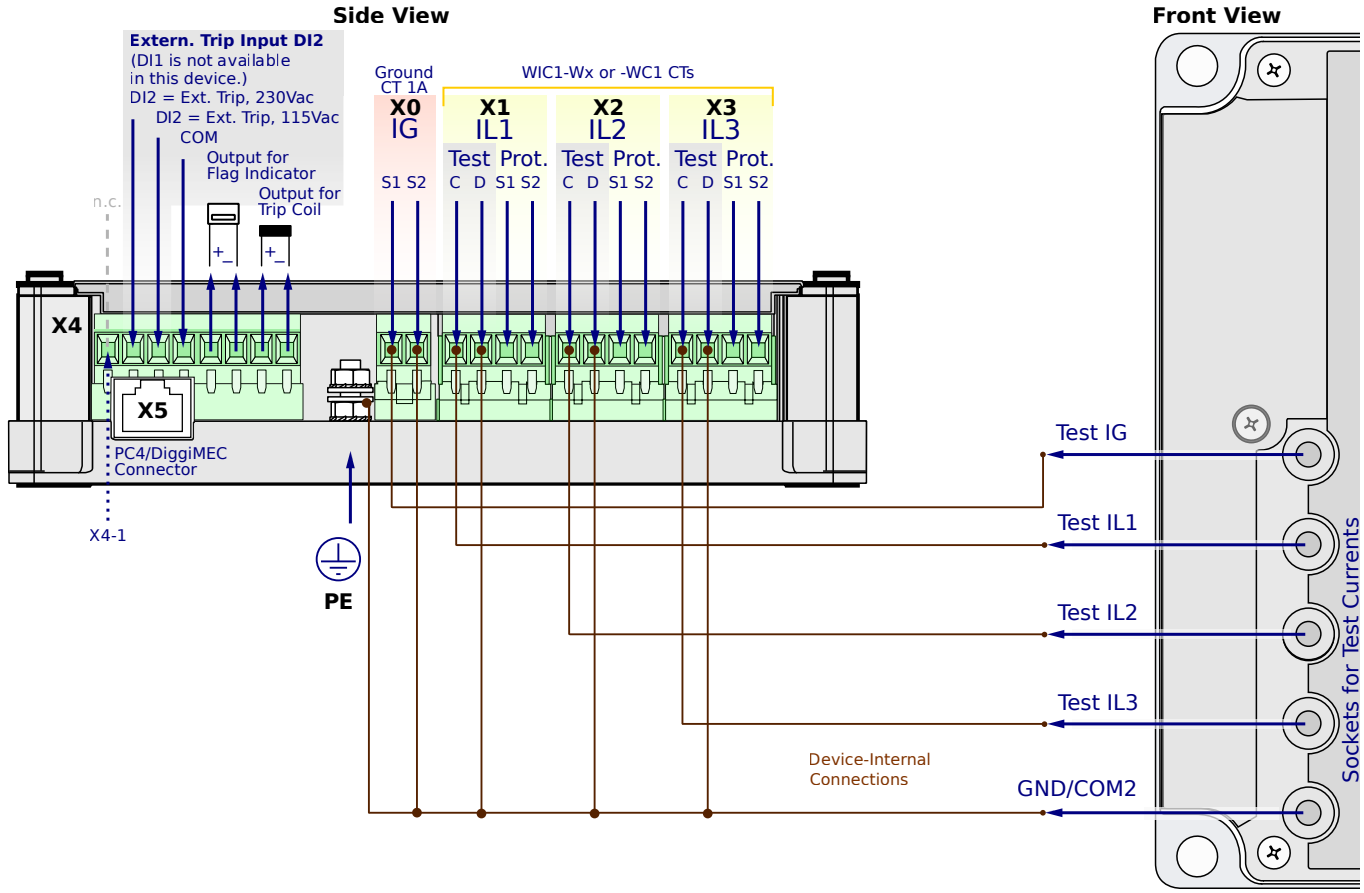


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1SA0

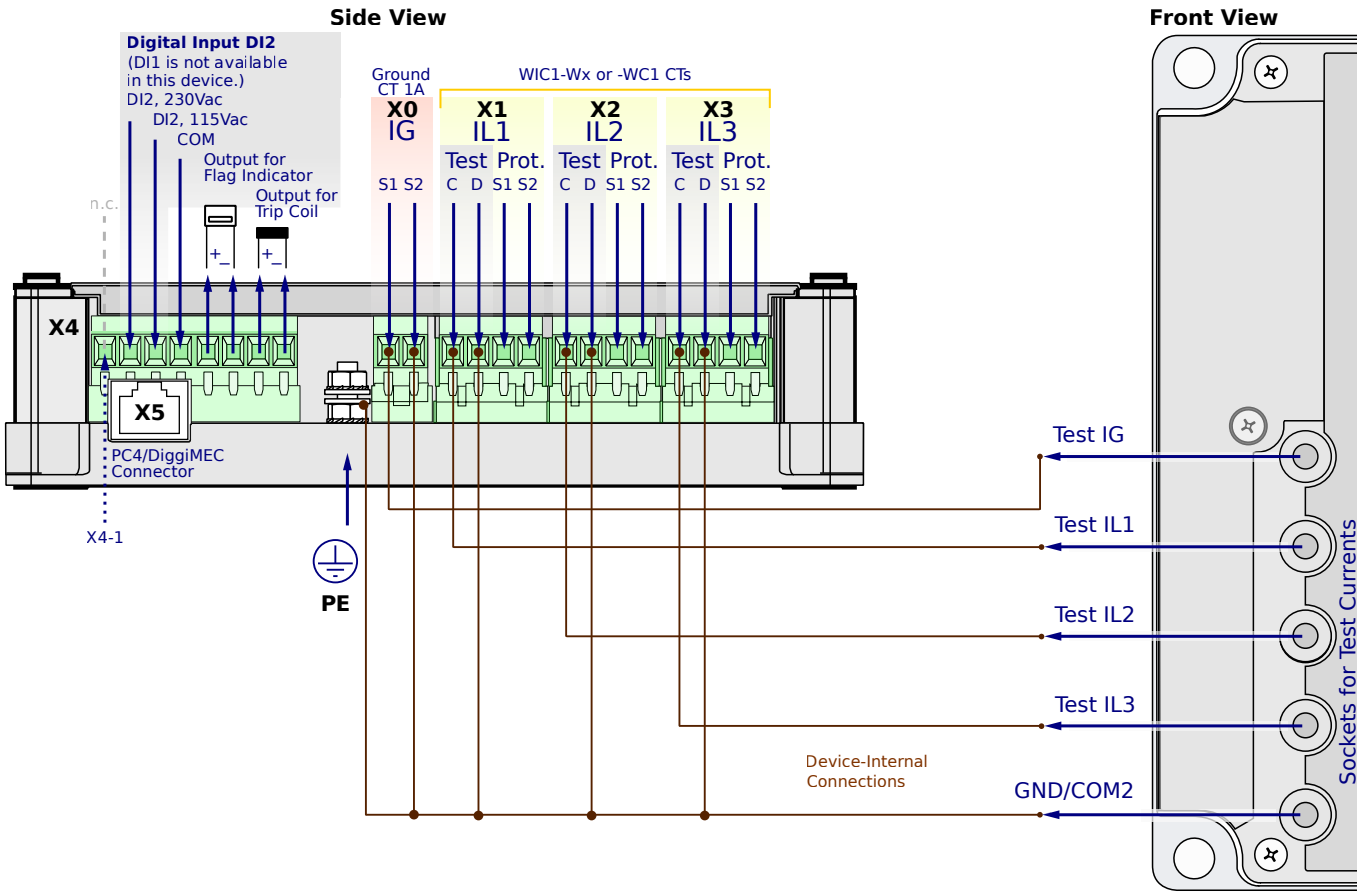


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1SAH

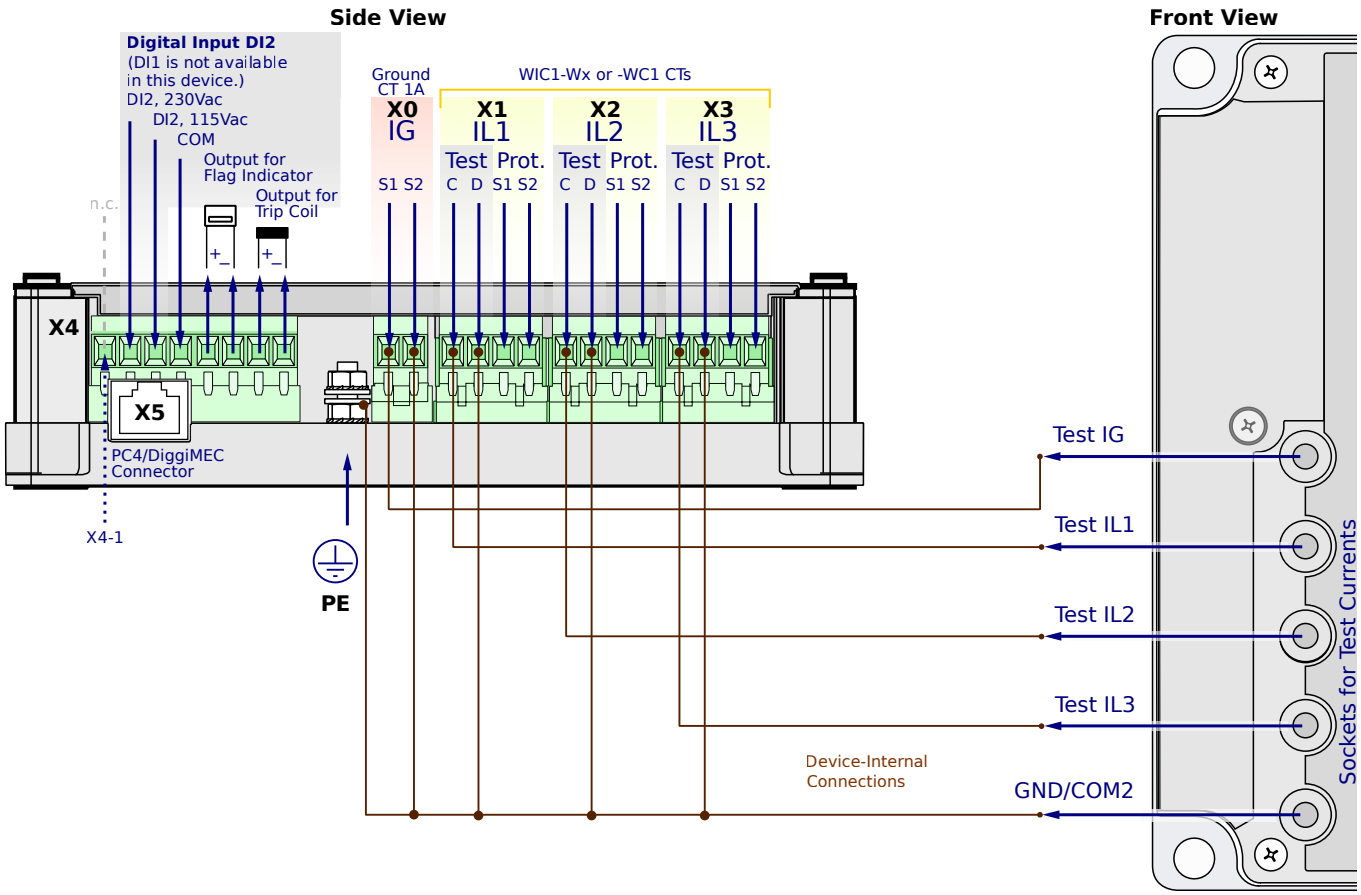


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1AA0

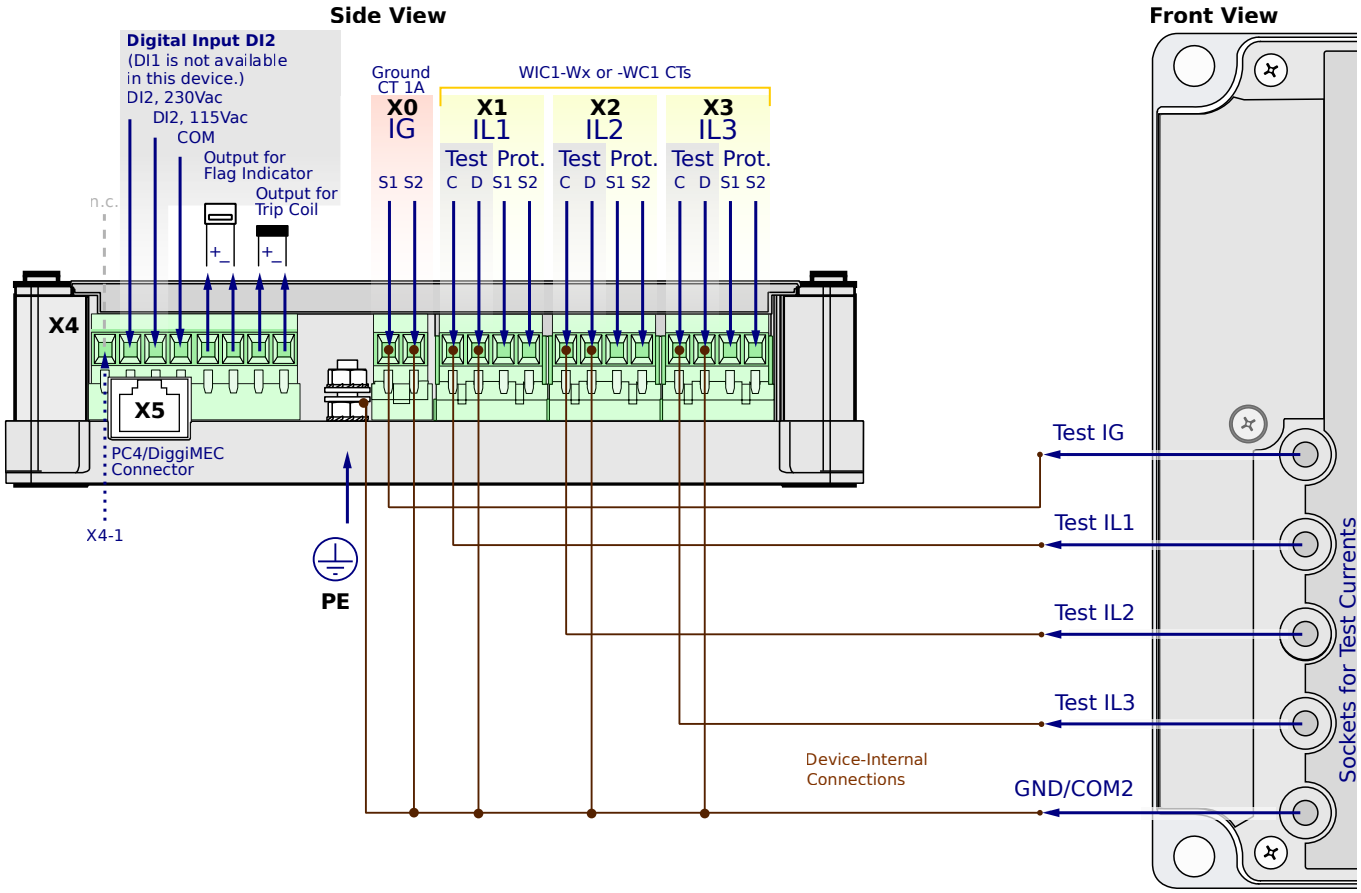


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1AAH

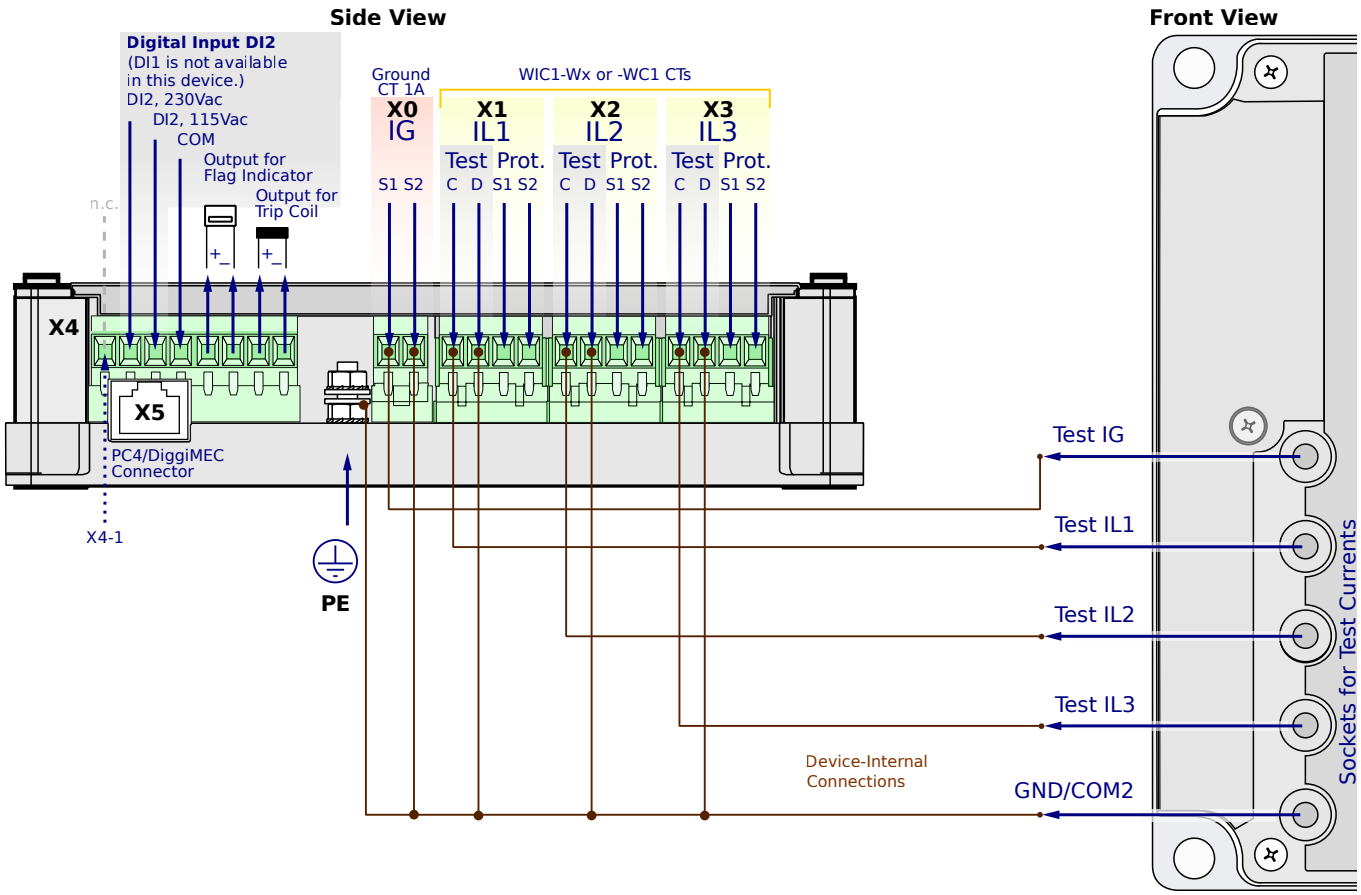


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1PA0

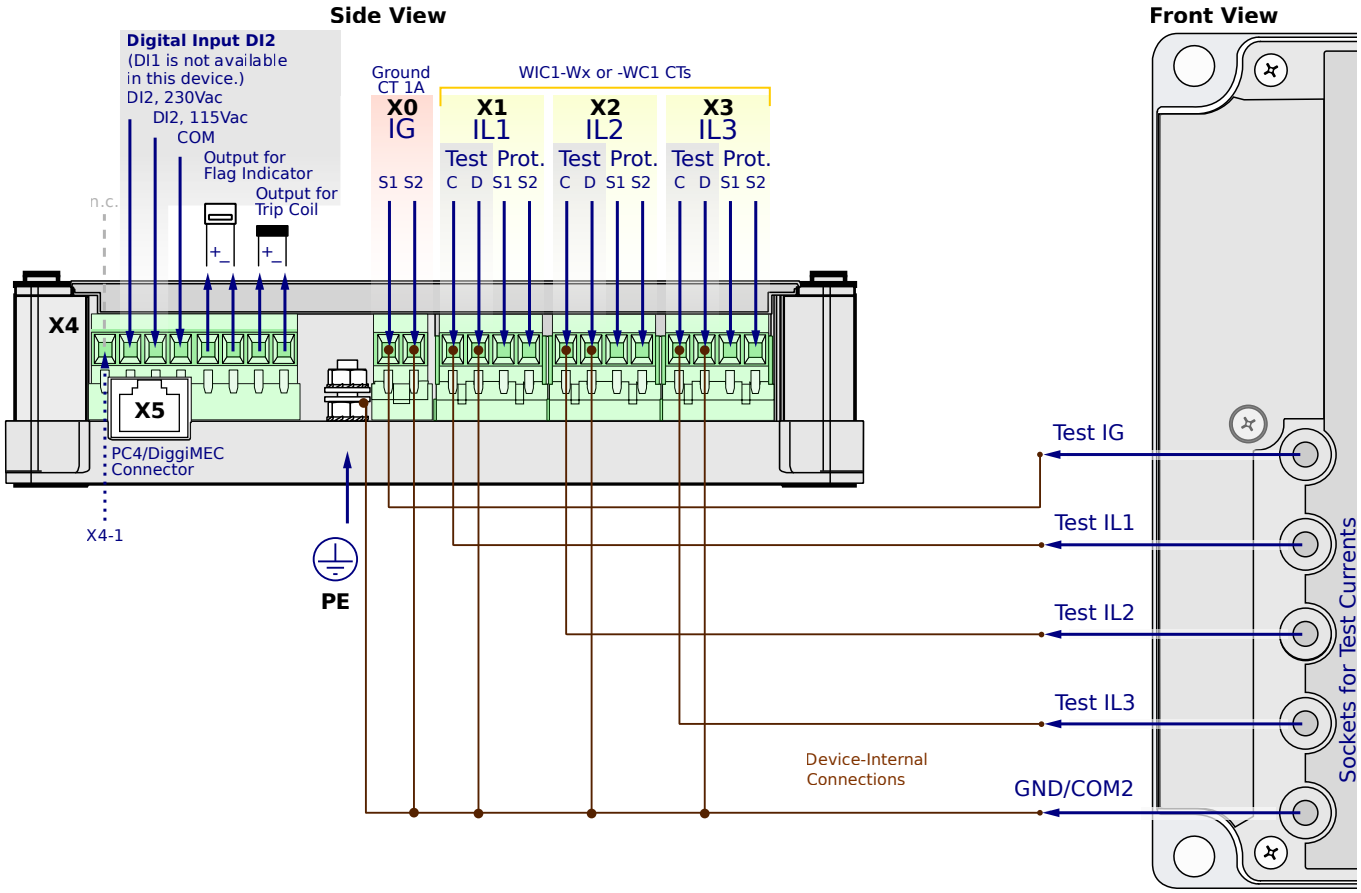


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC1PAH

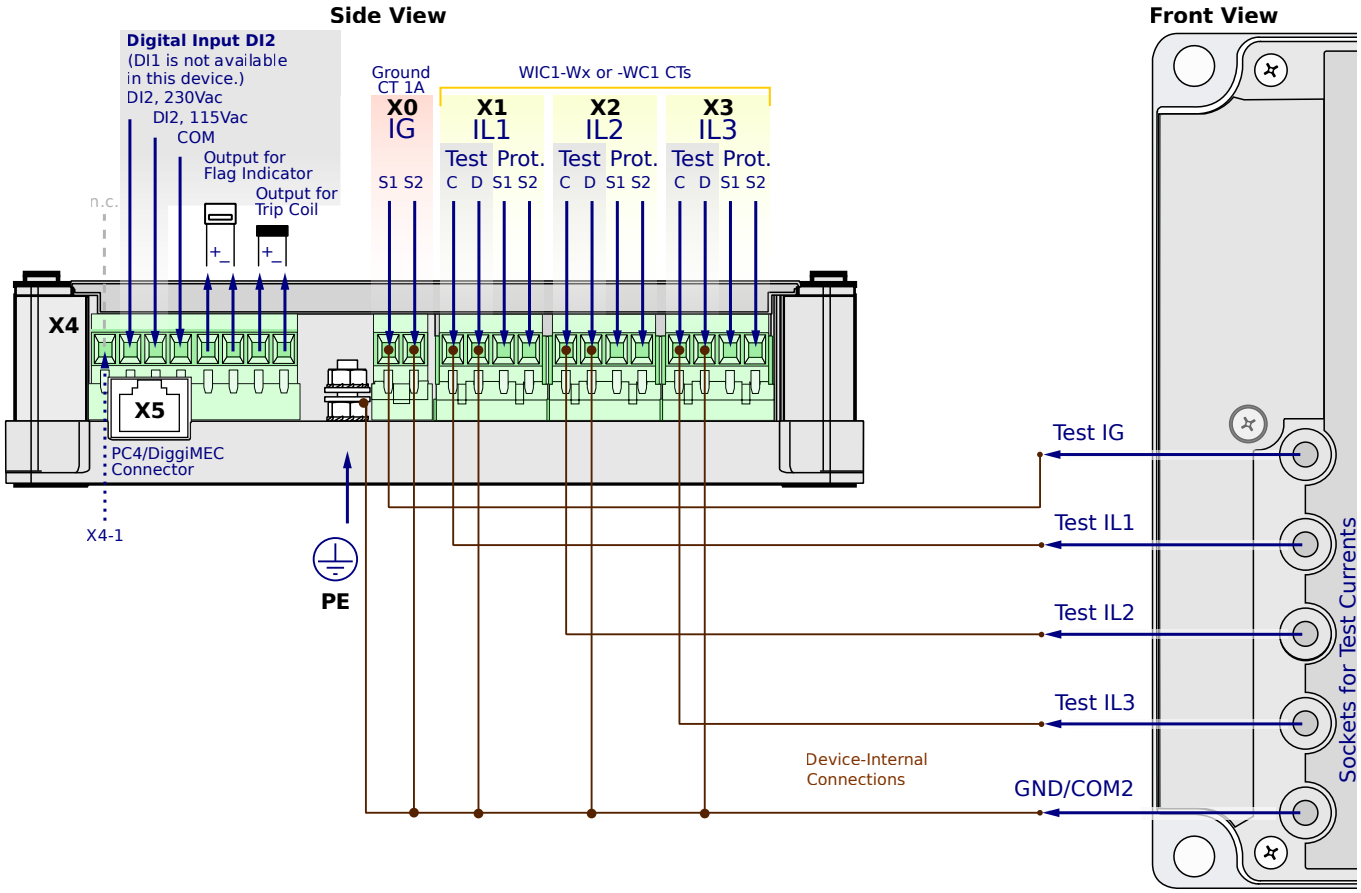


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2SA0

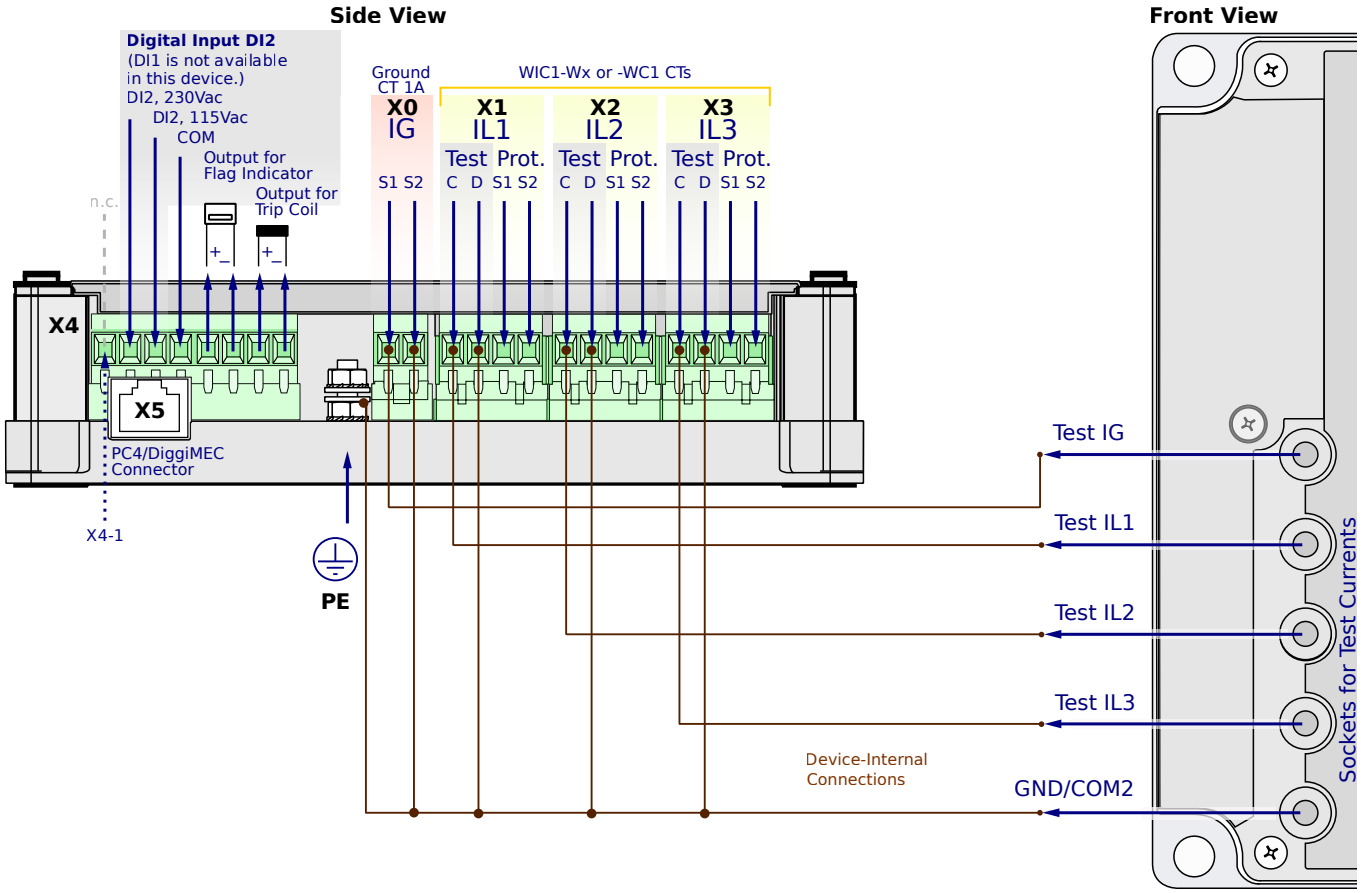


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2SAH

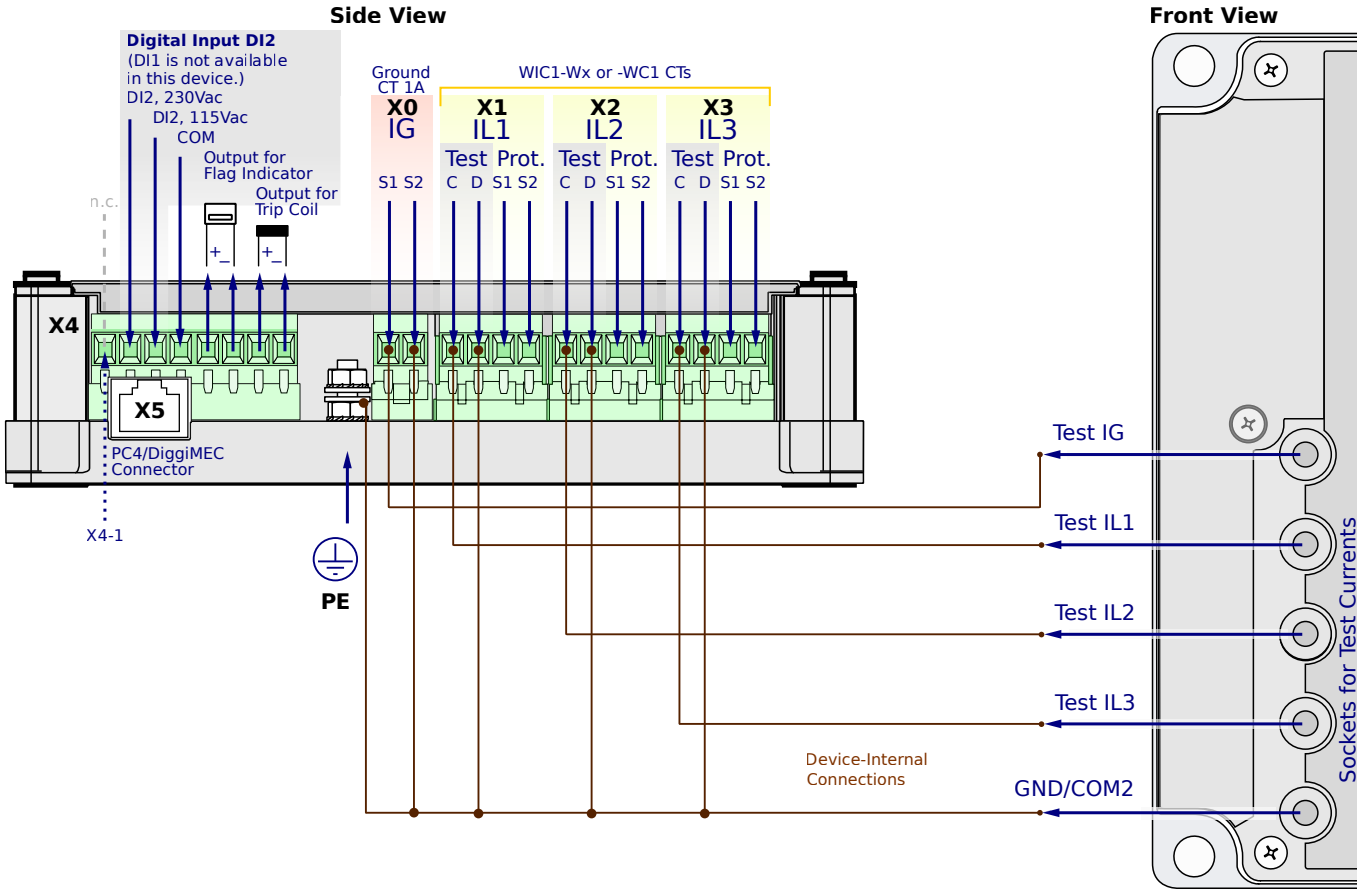


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2AA0

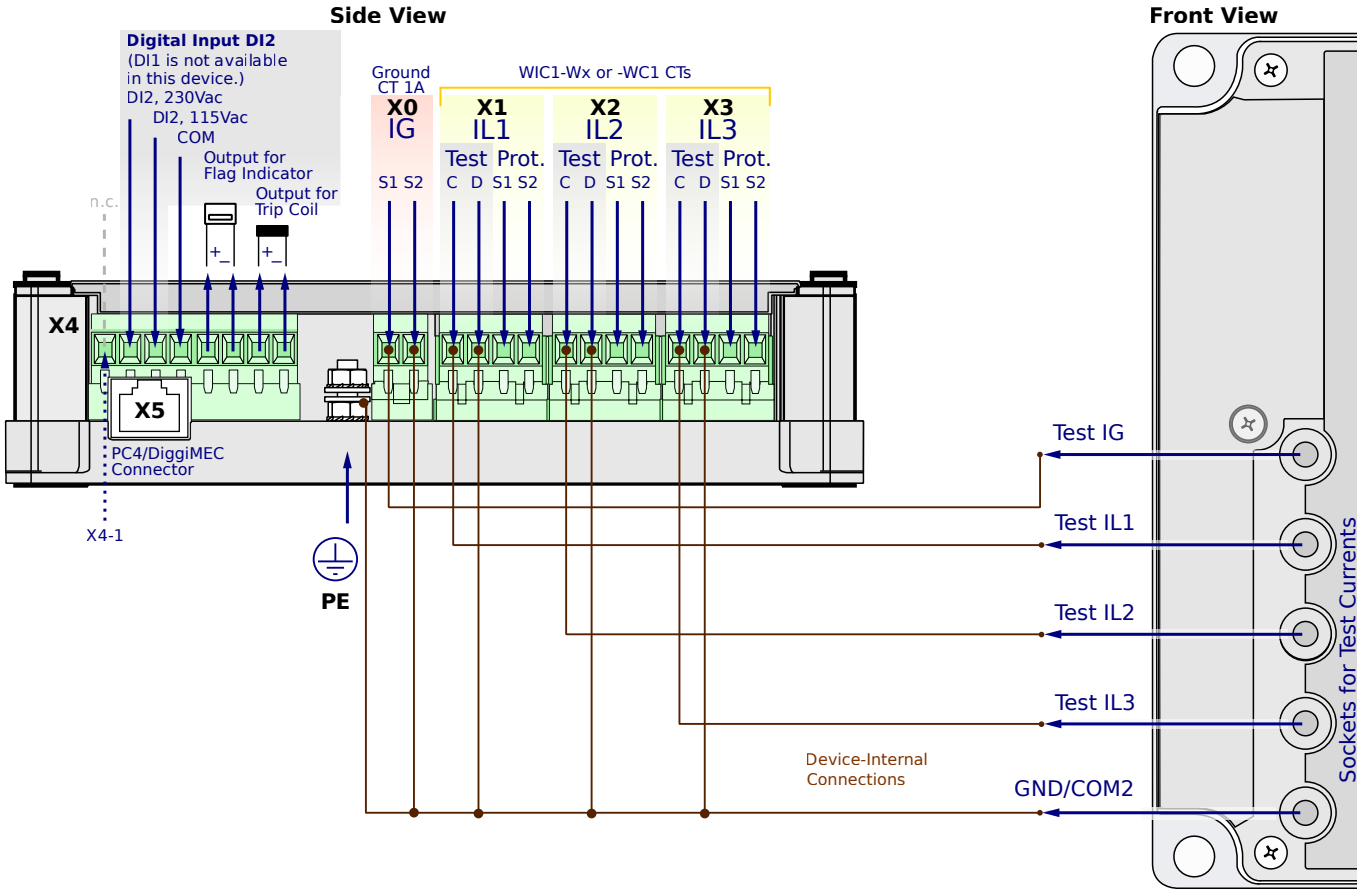


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2AAH

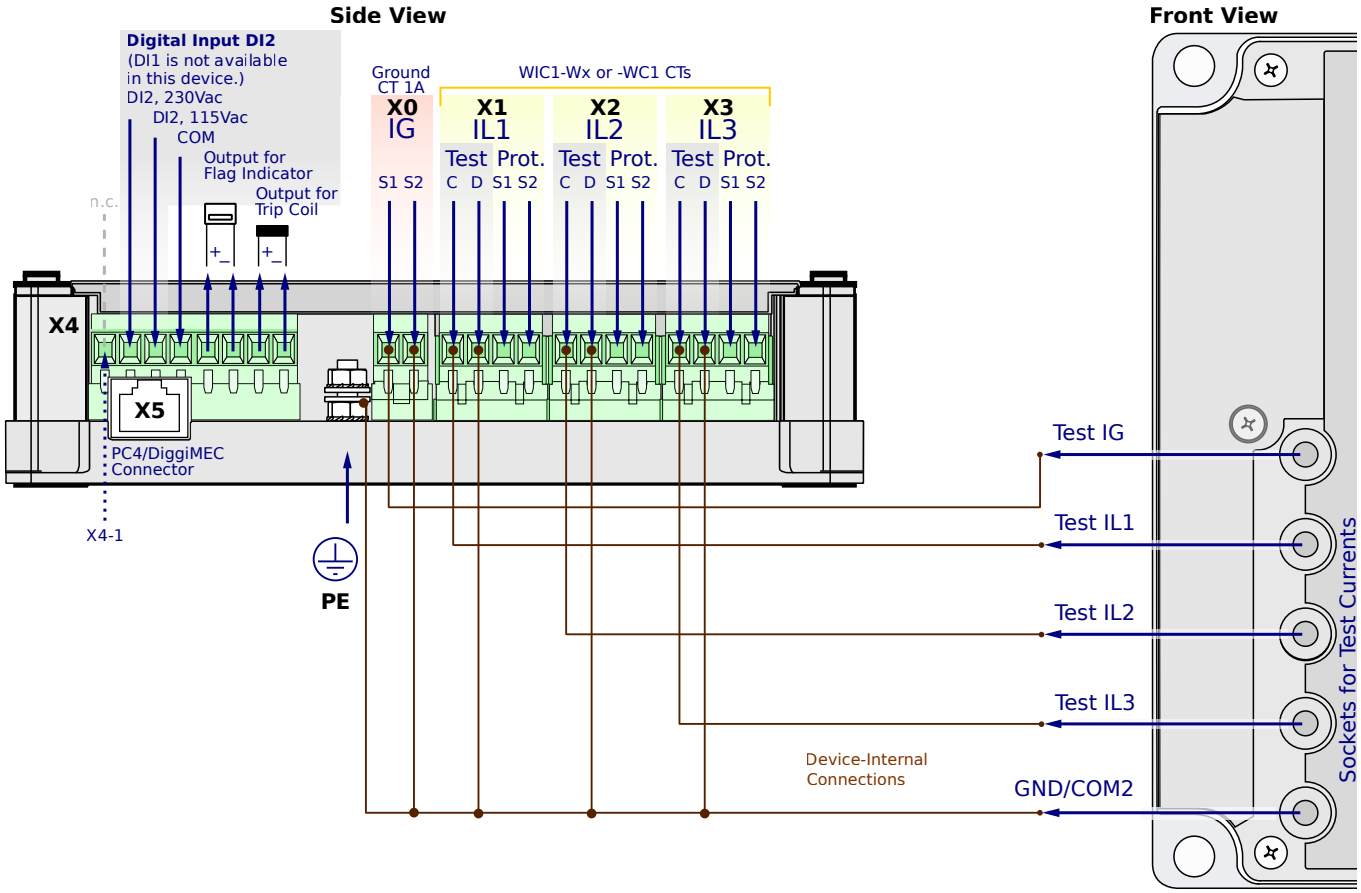


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2PA0

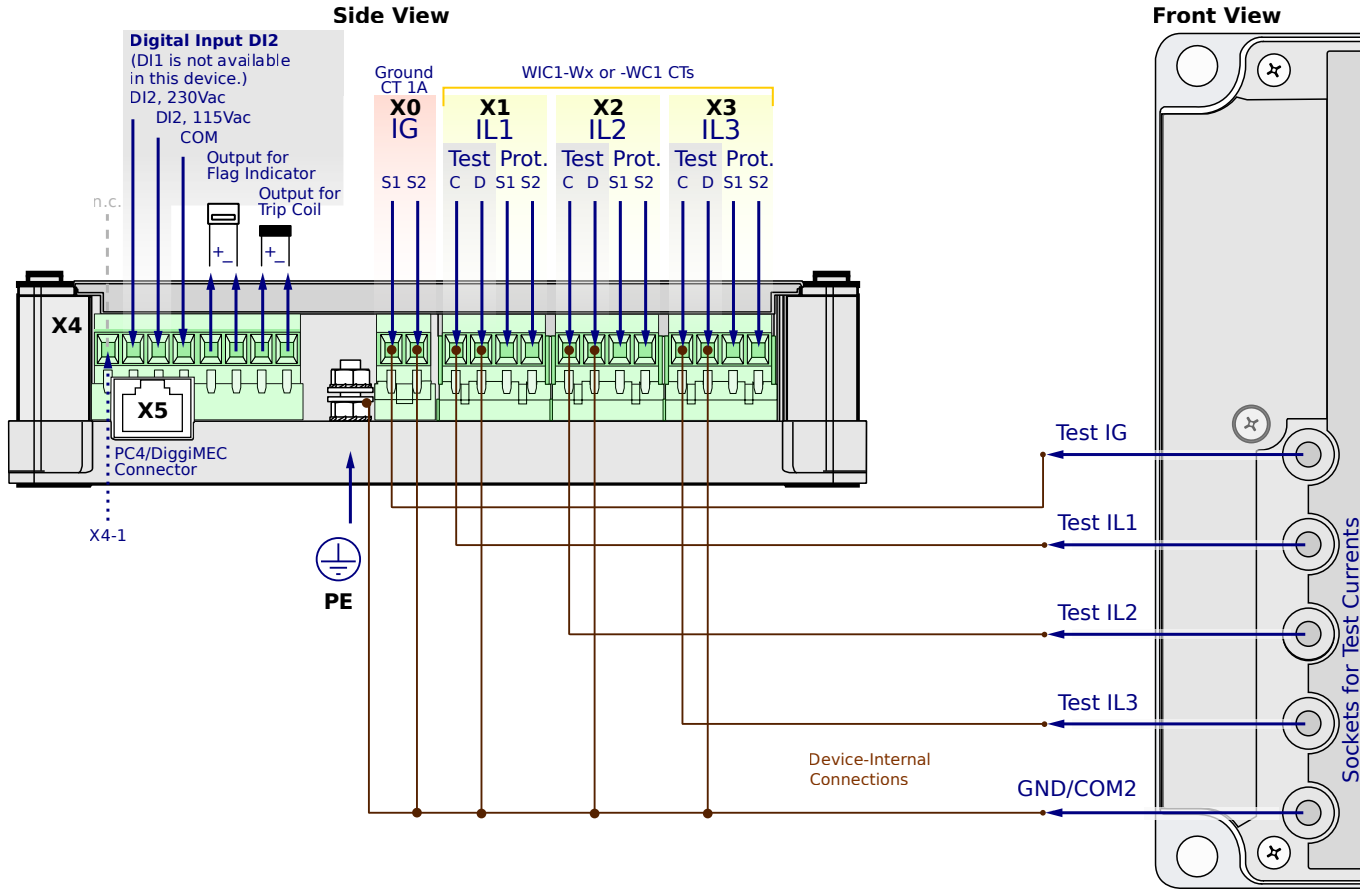


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6FC2PAH

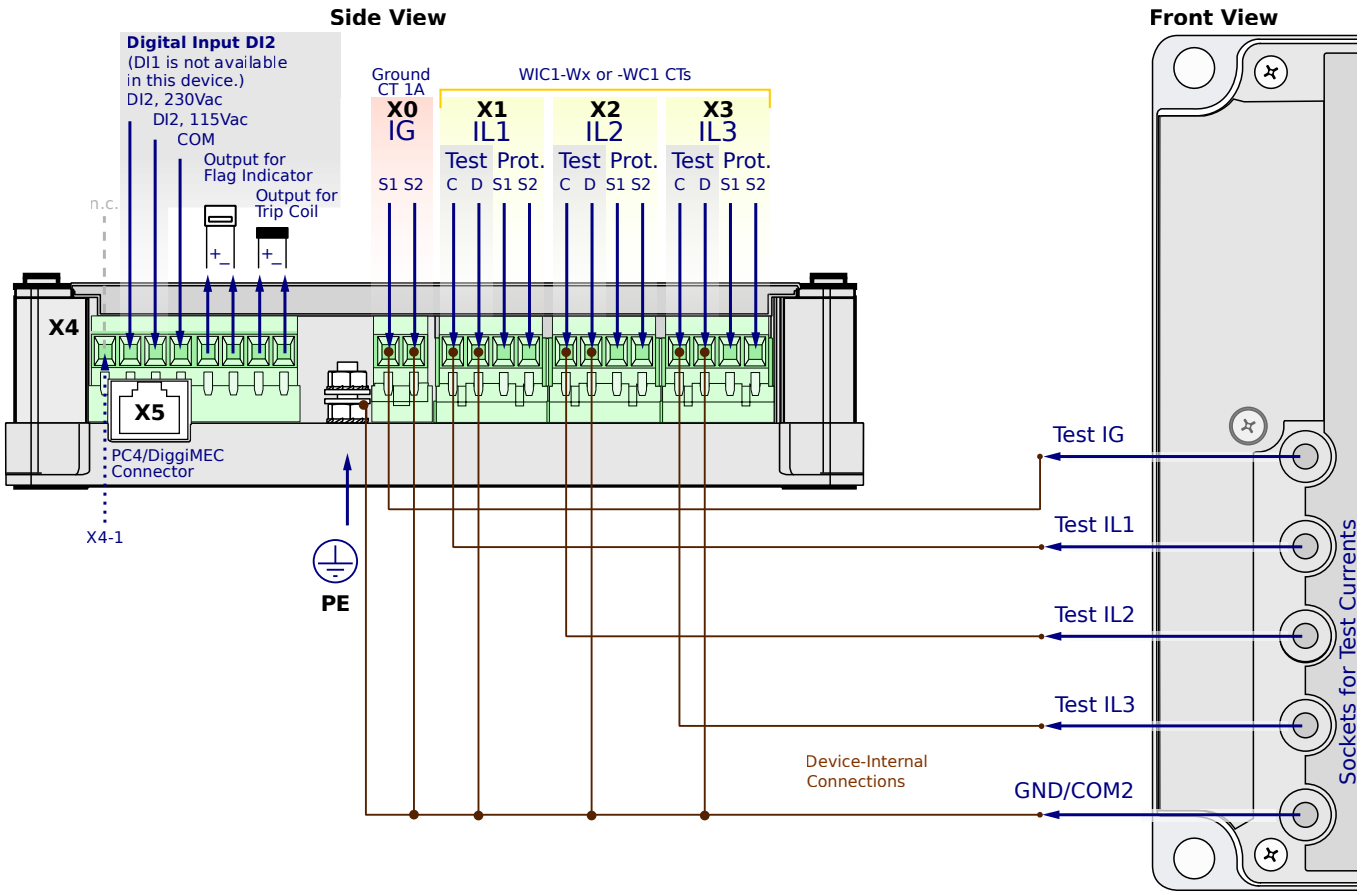


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1SA0

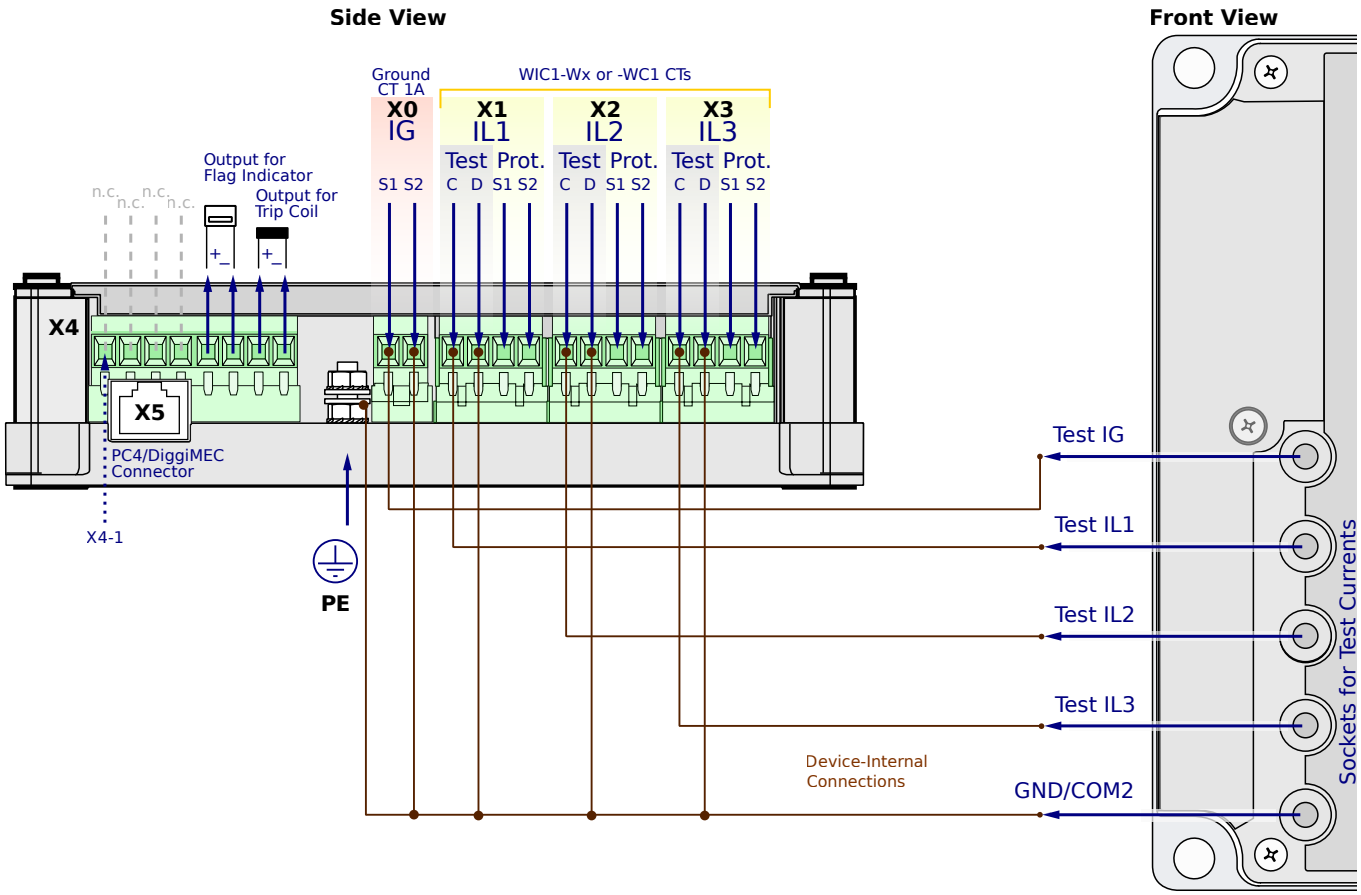


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1SAH

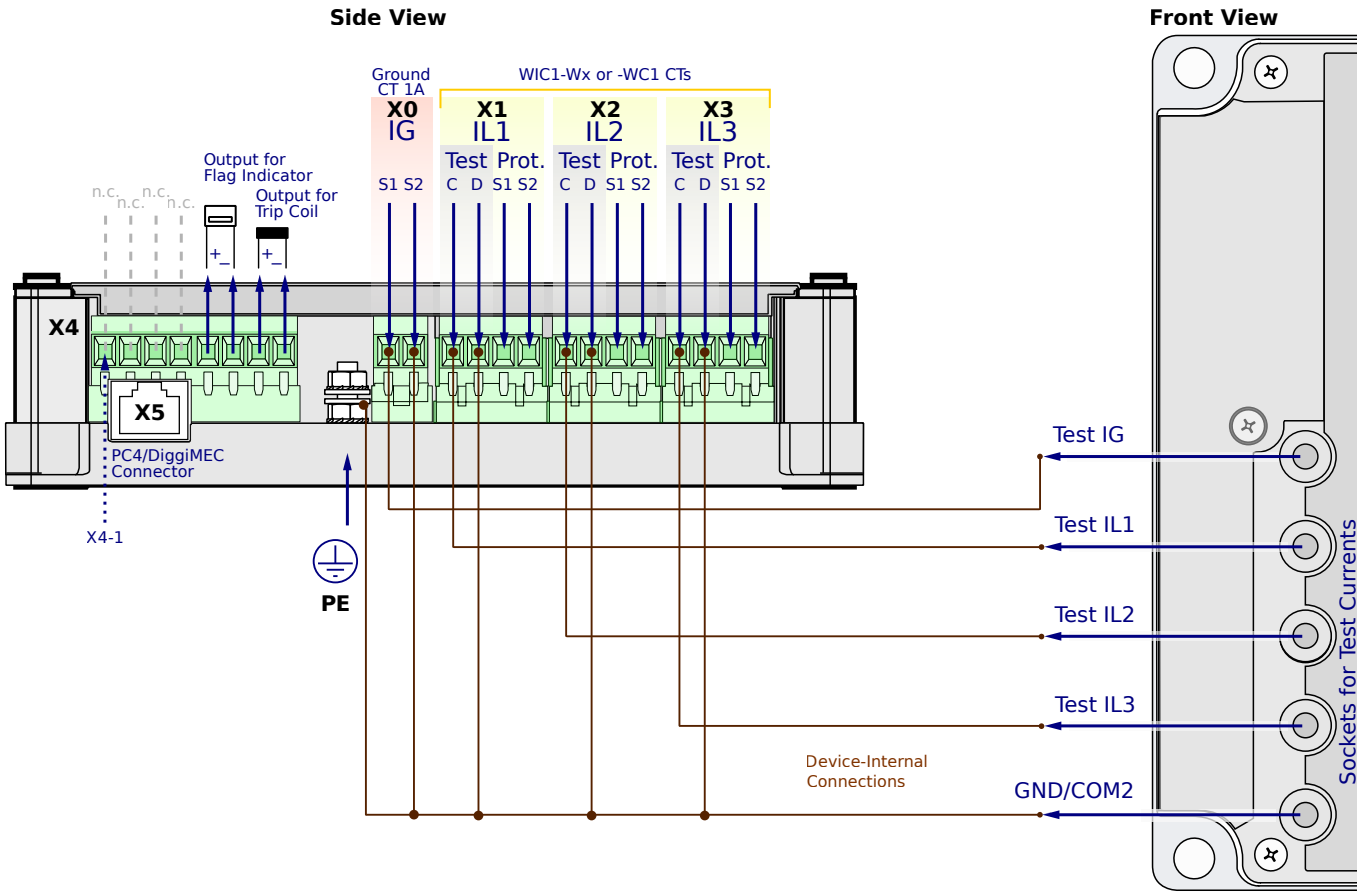


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1AA0

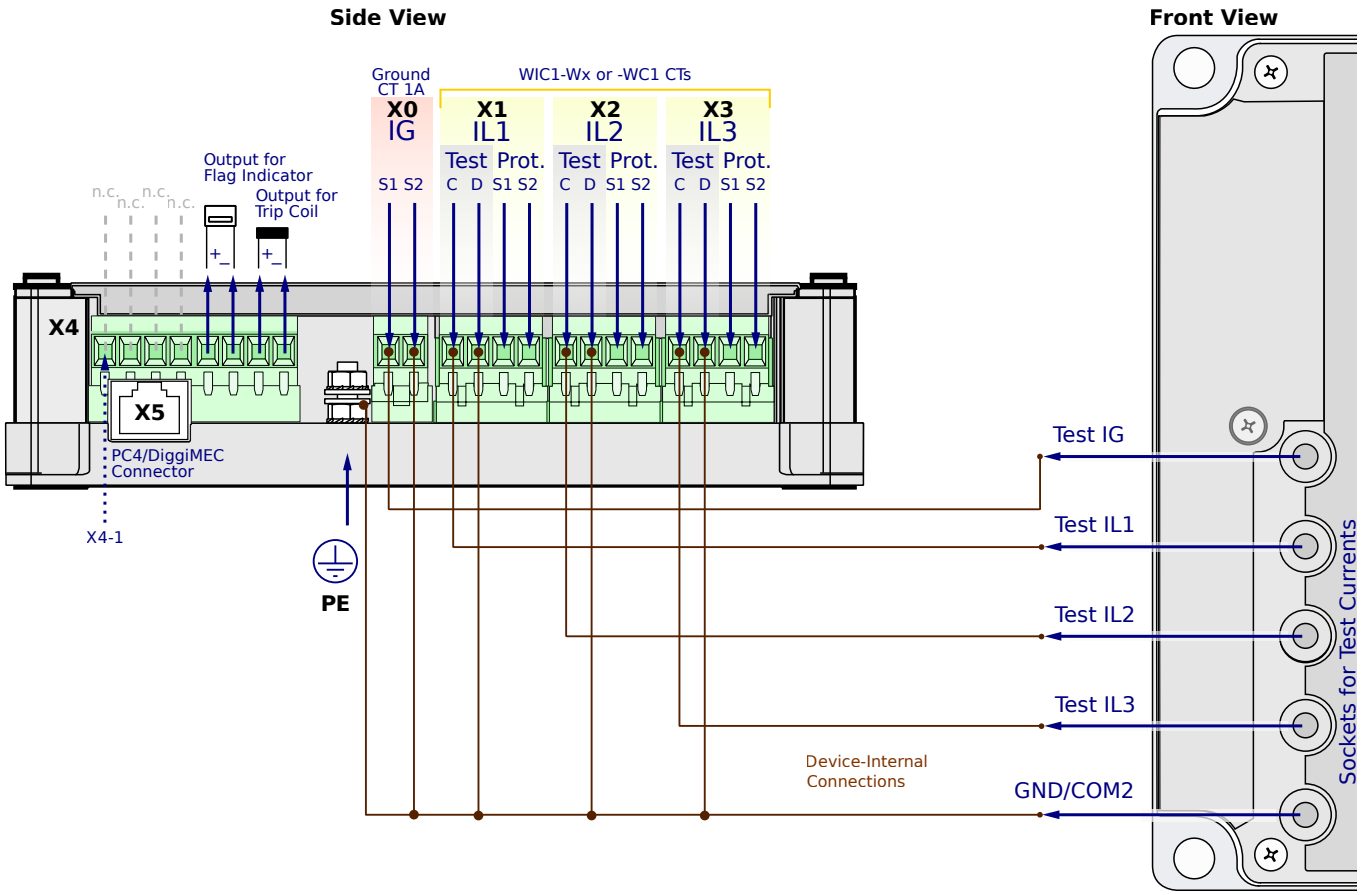


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1AAH

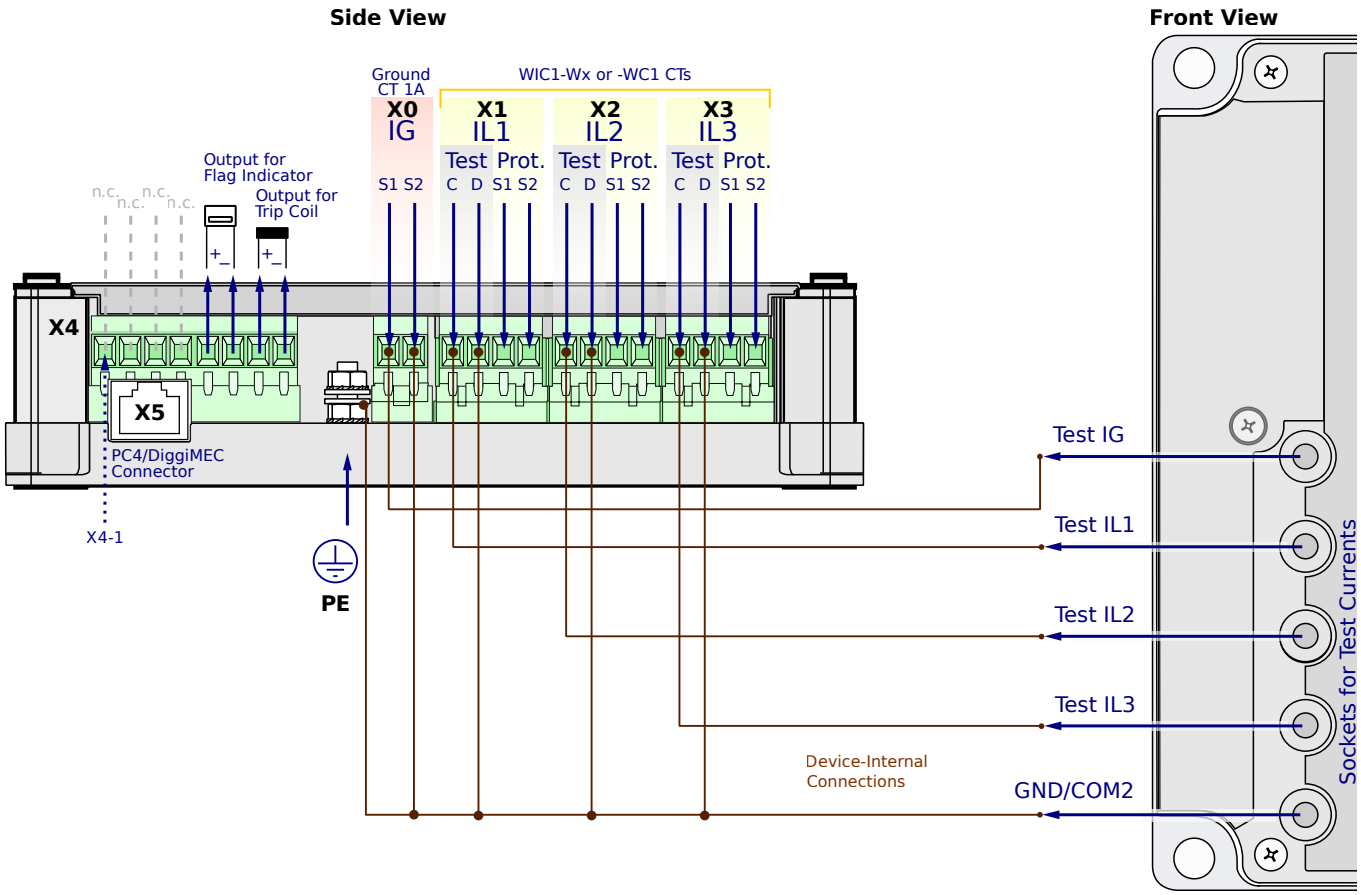


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1PA0

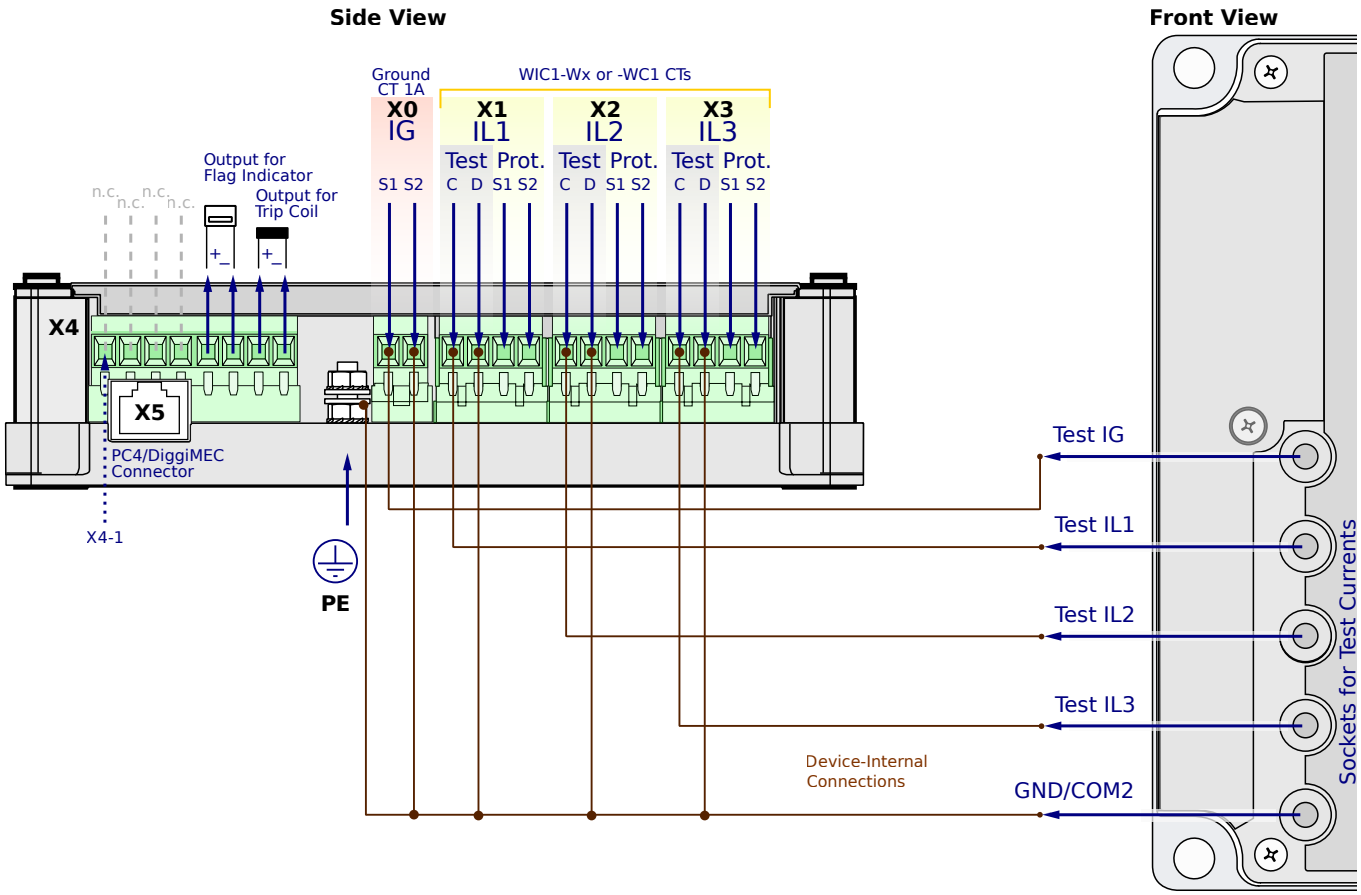


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN1PAH

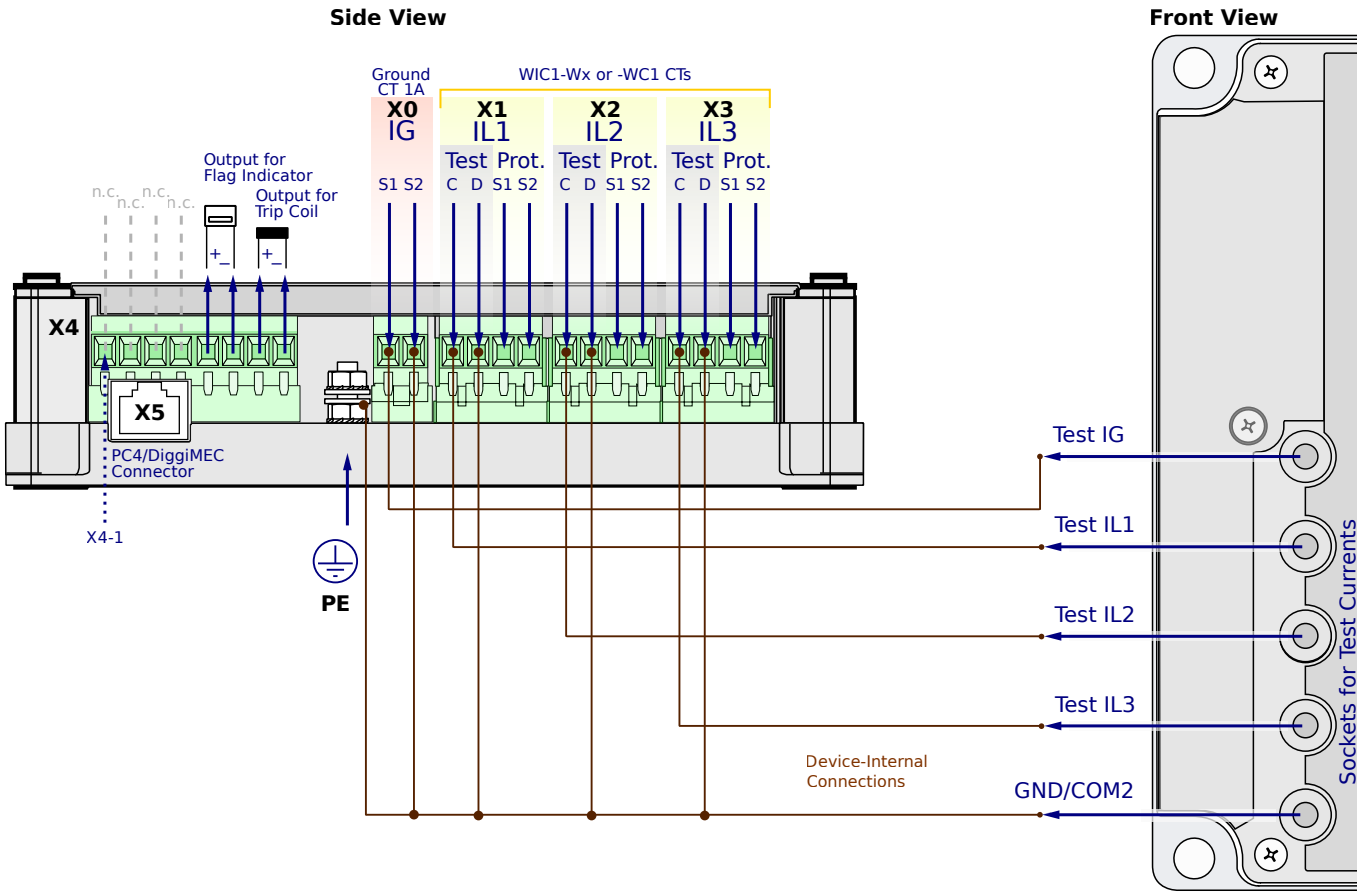


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2SA0

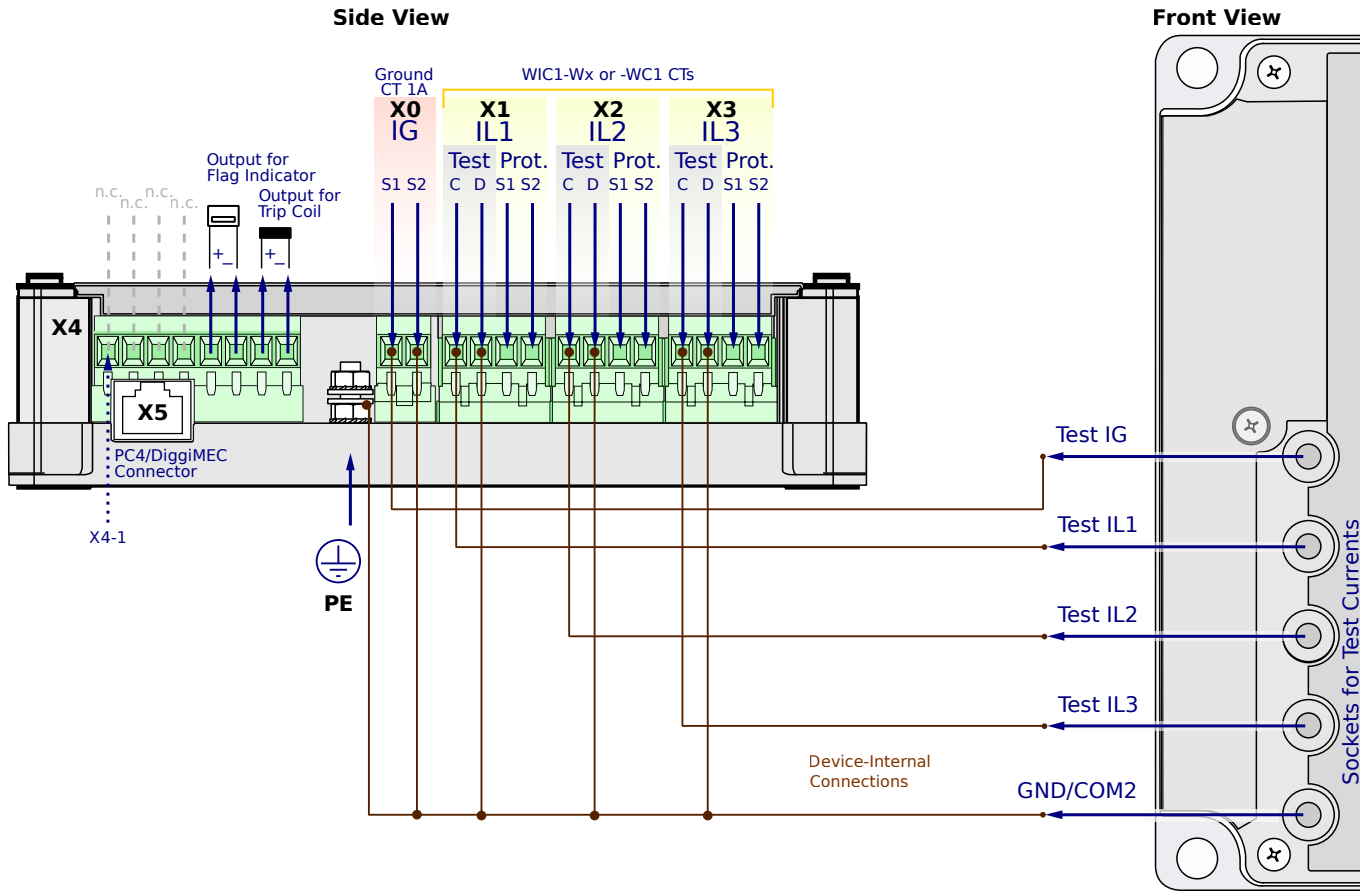


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2SAH

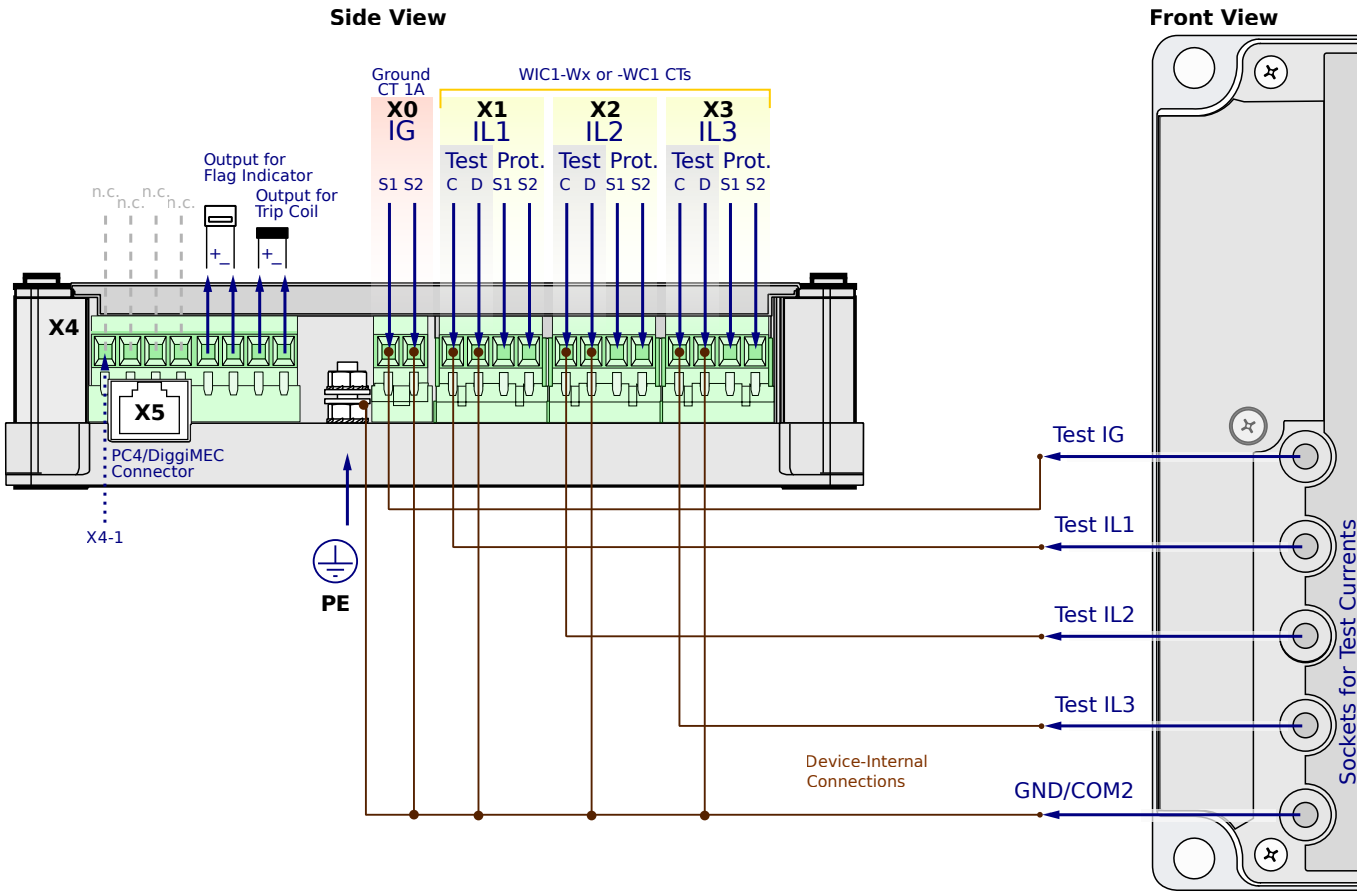


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2AA0

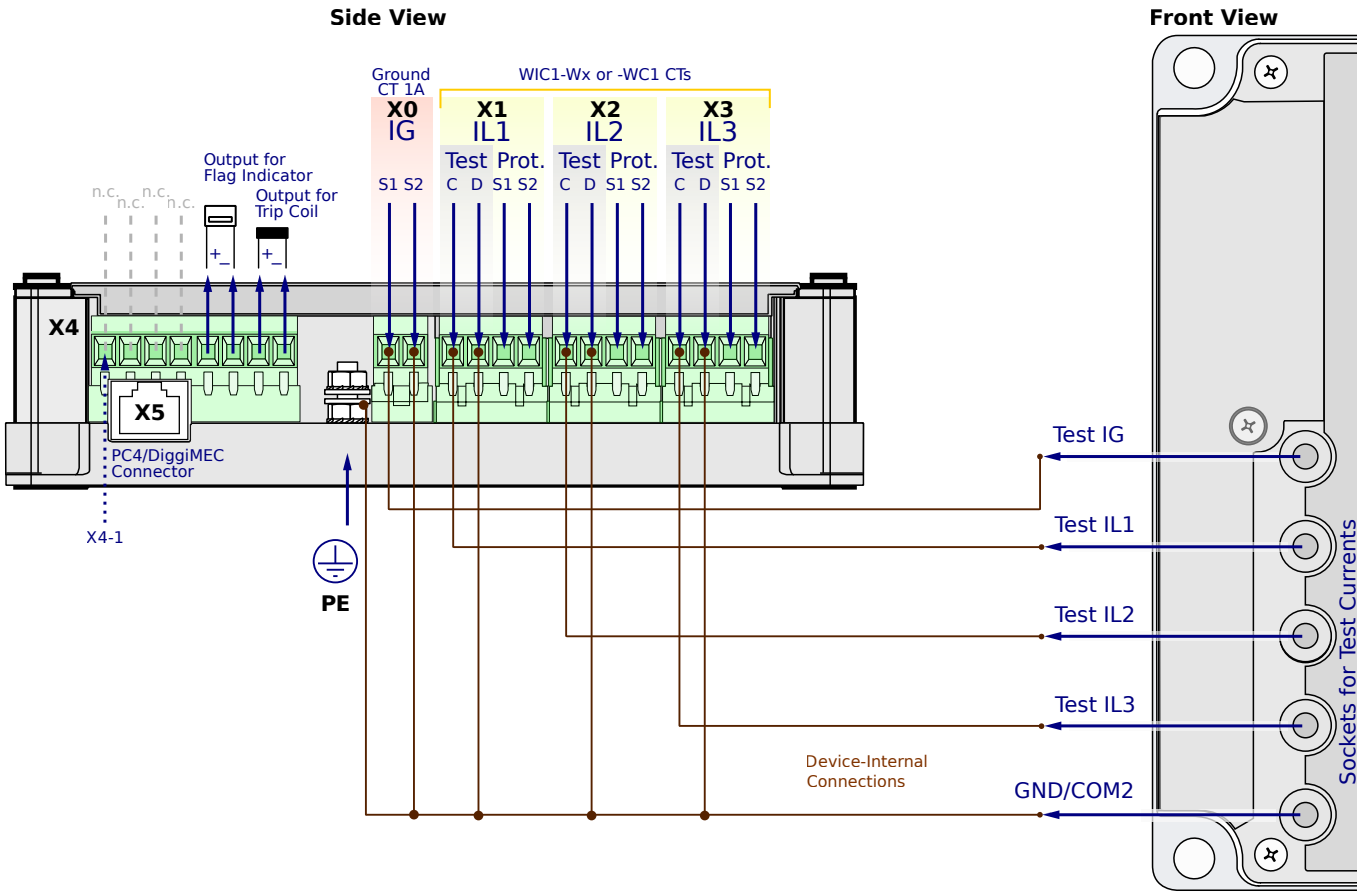


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2AAH

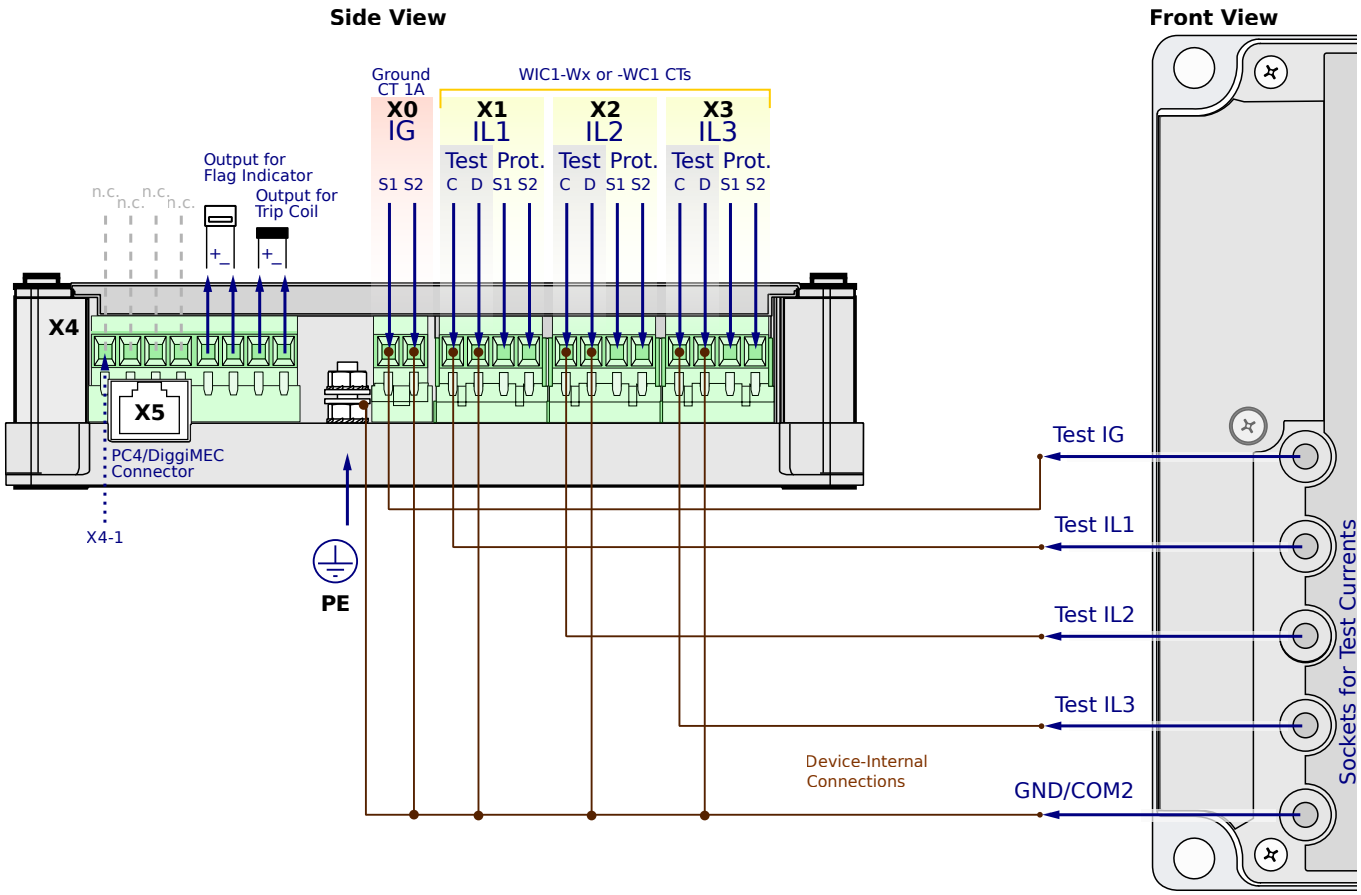


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2PA0

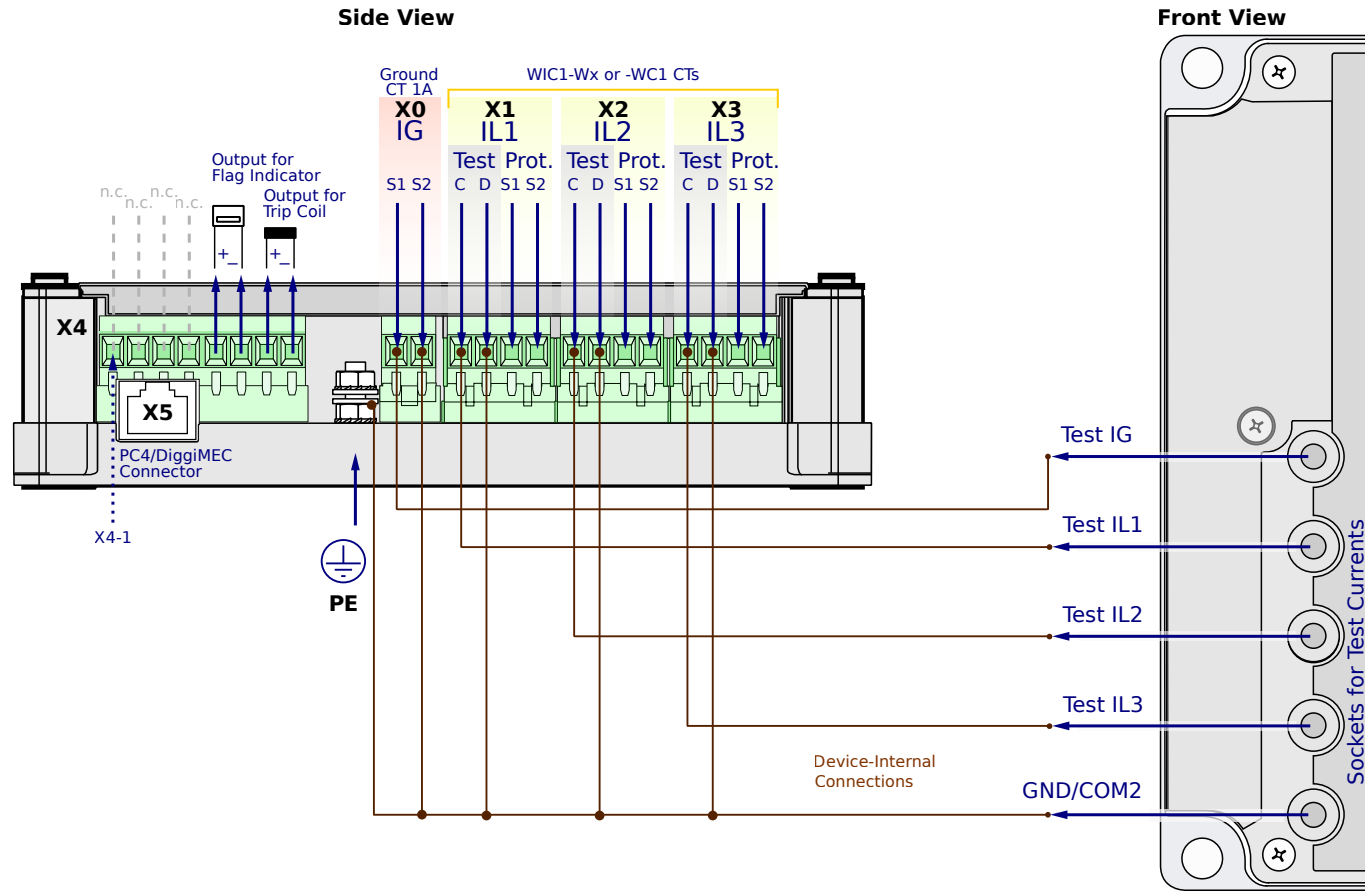


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CN2PAH

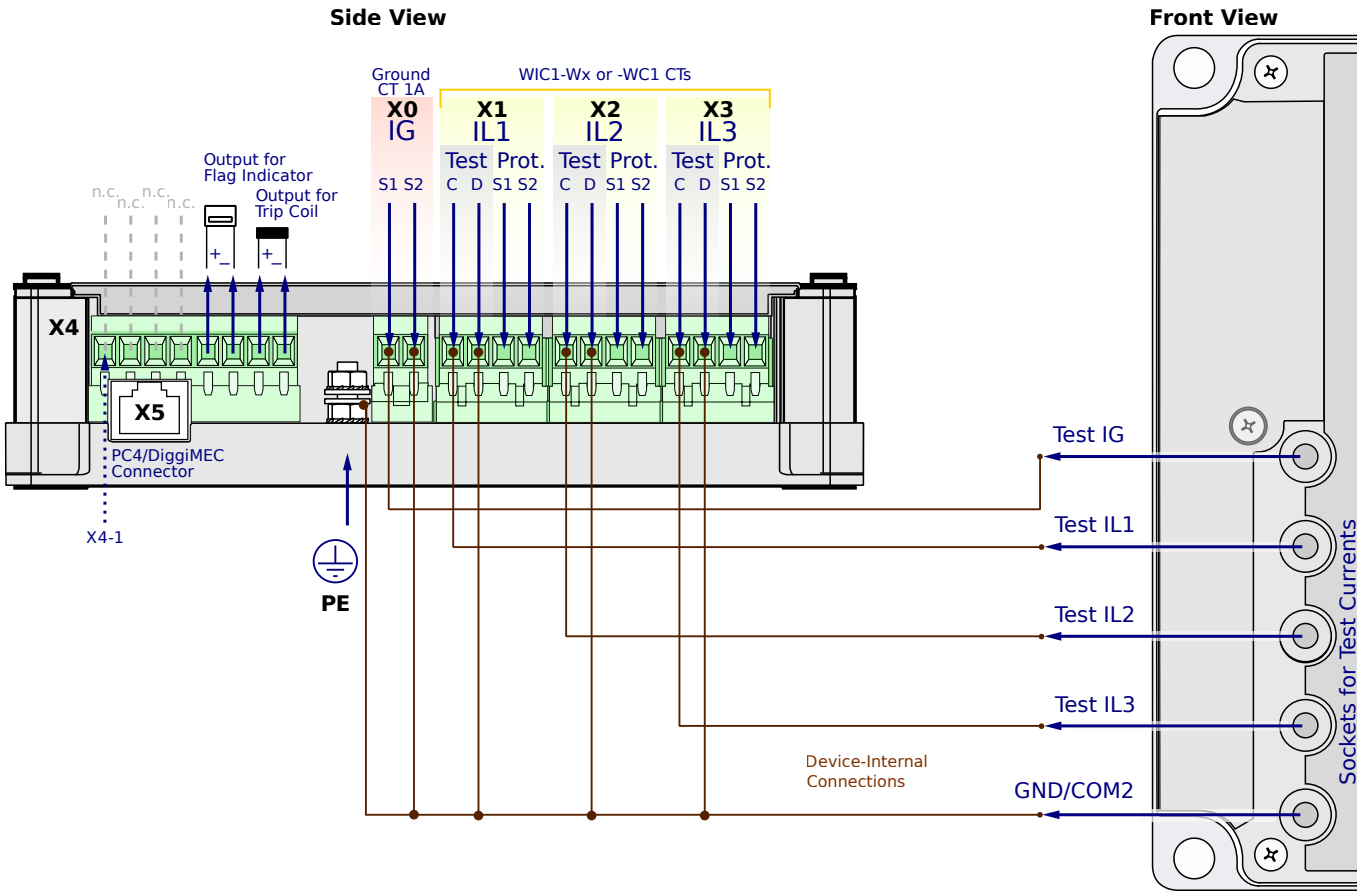


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1SA0

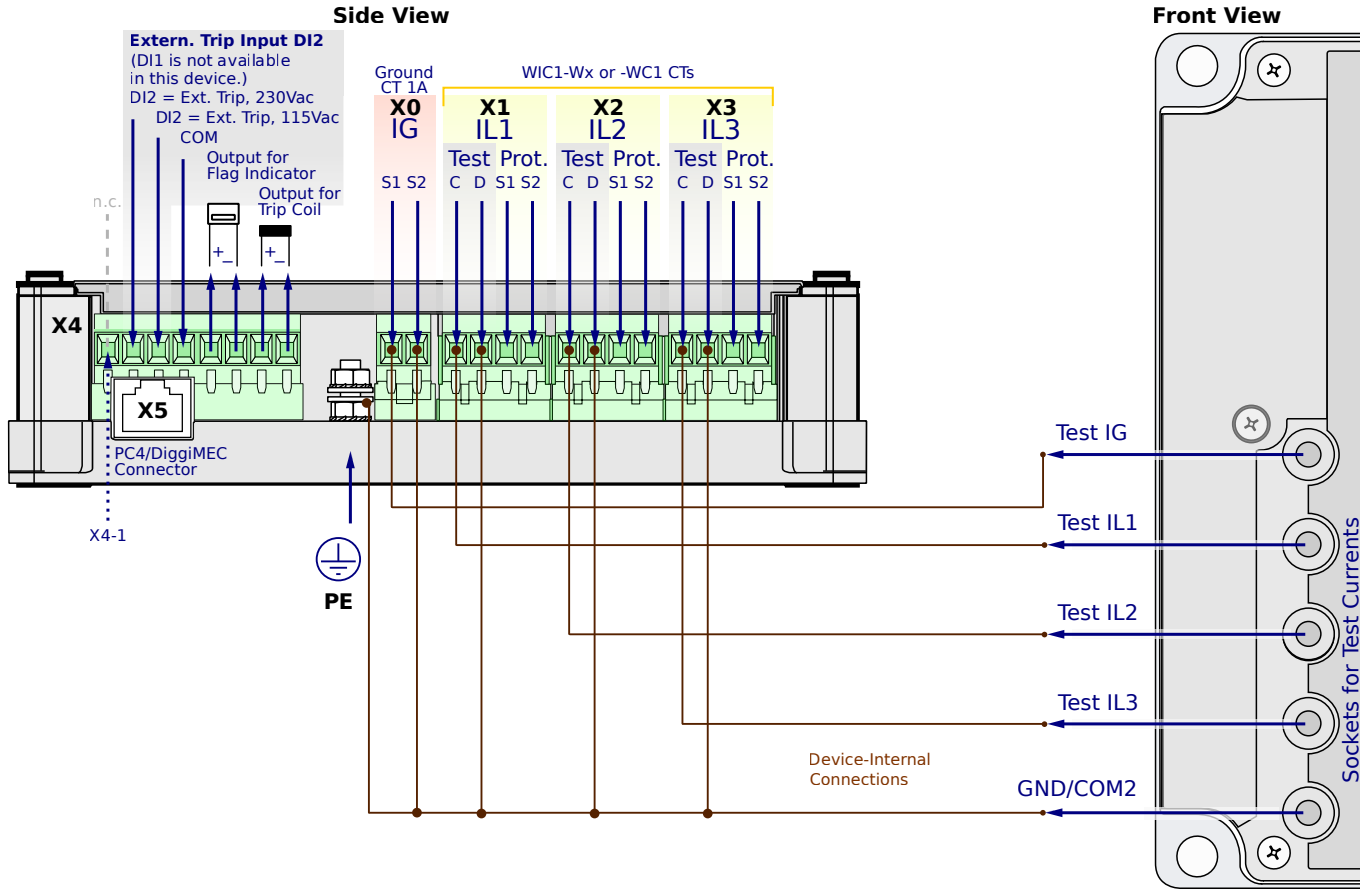


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1SAH

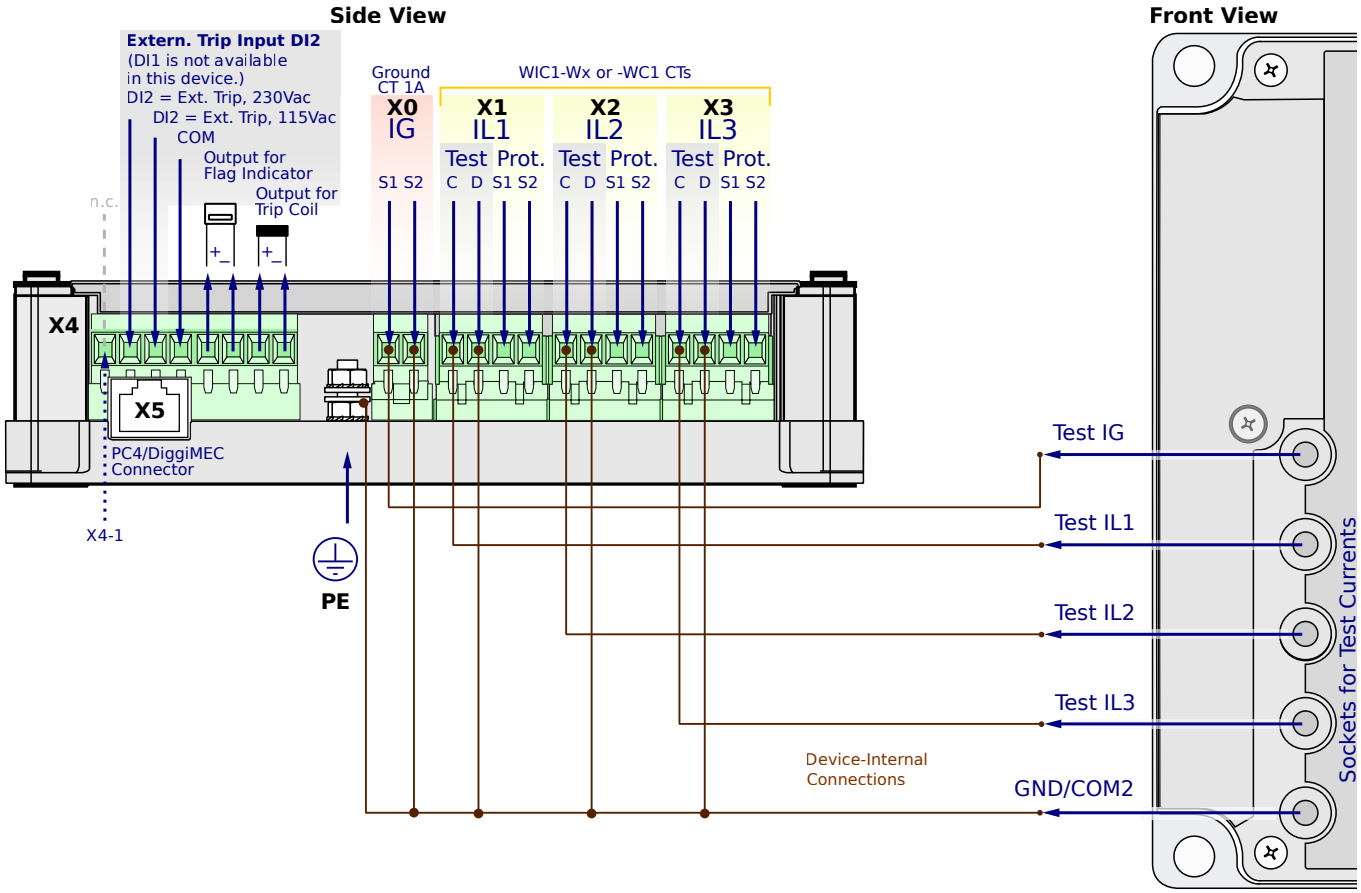


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1AA0

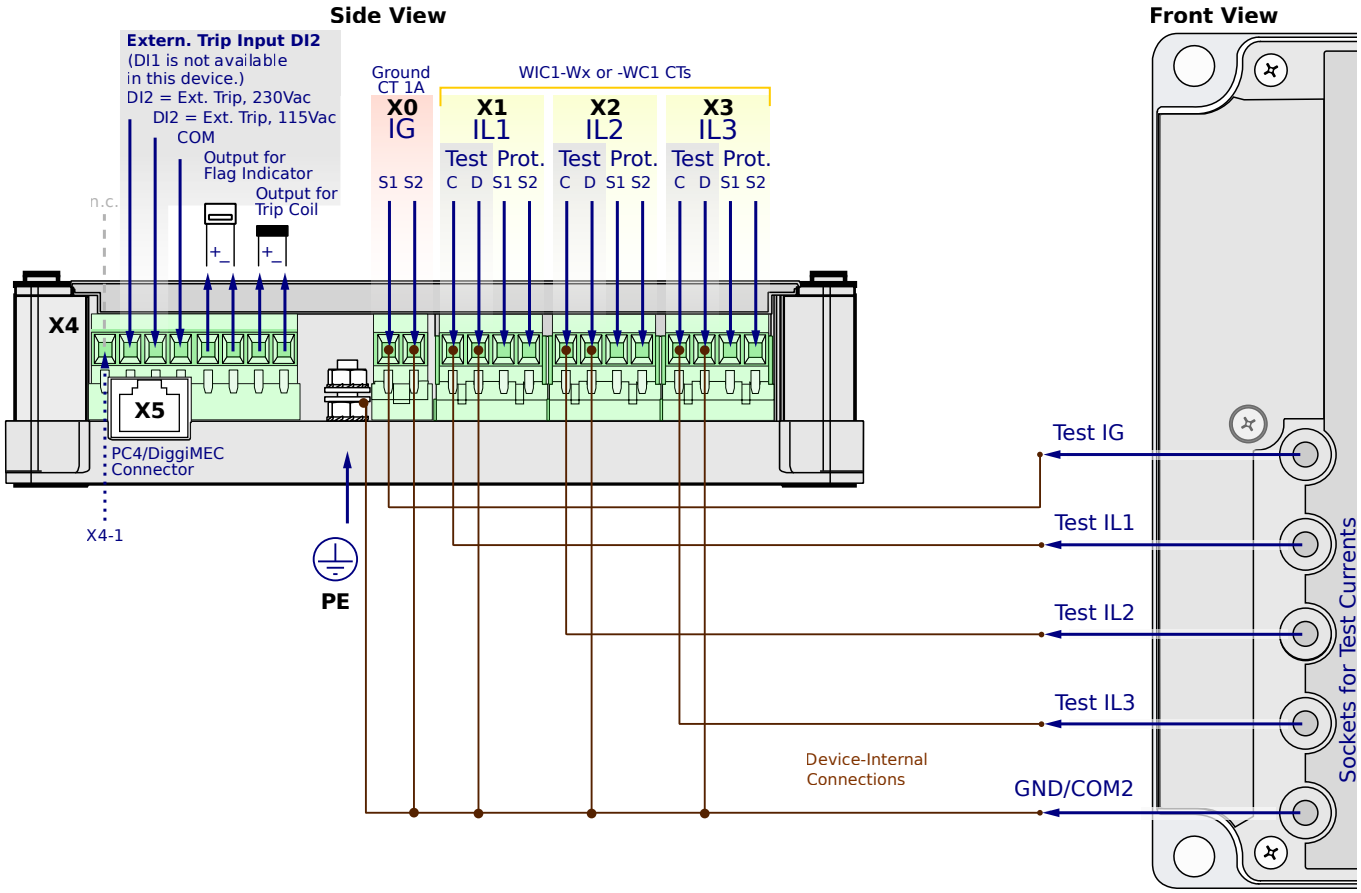


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1AAH

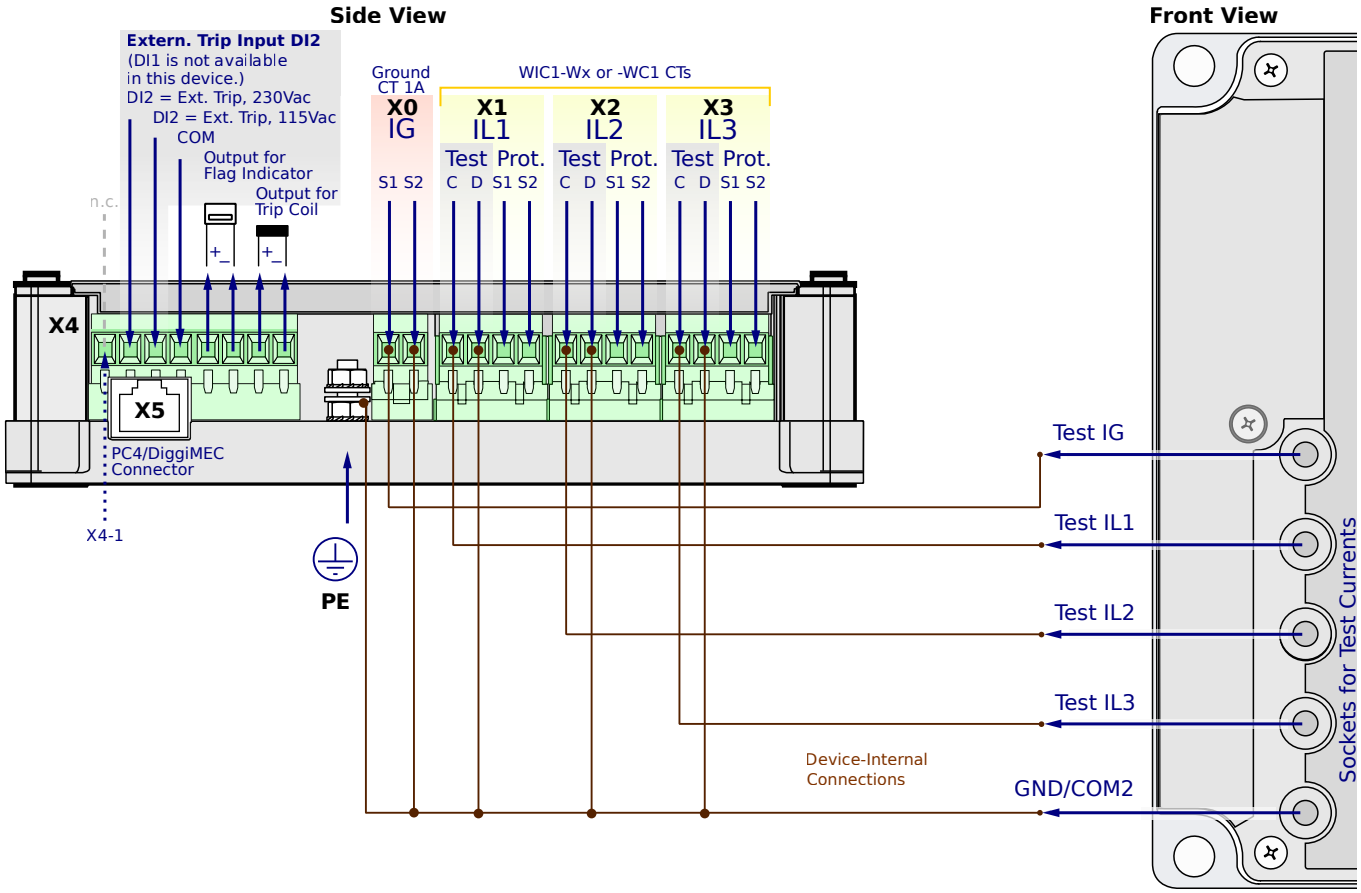


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1PA0

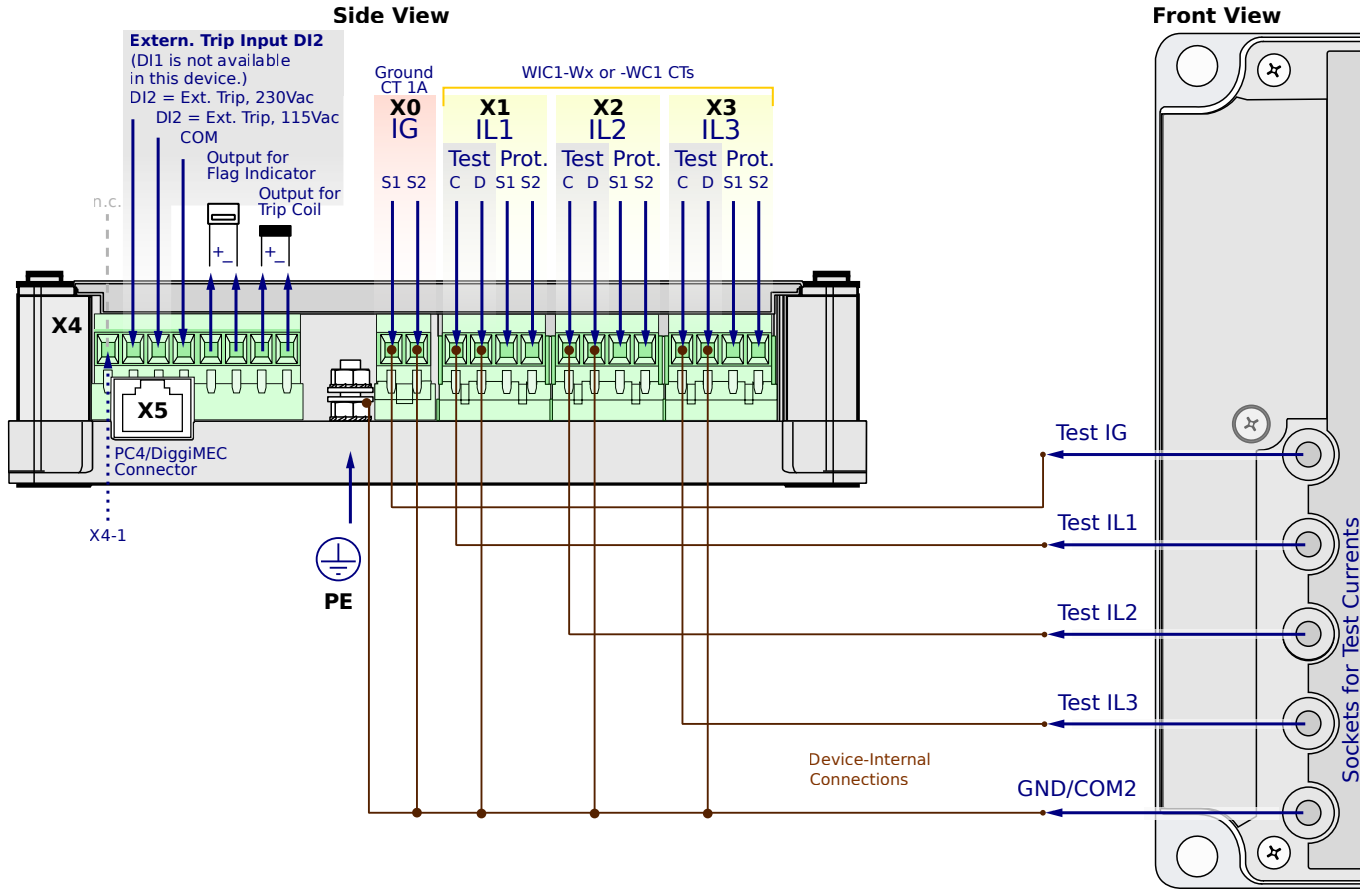


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF1PAH

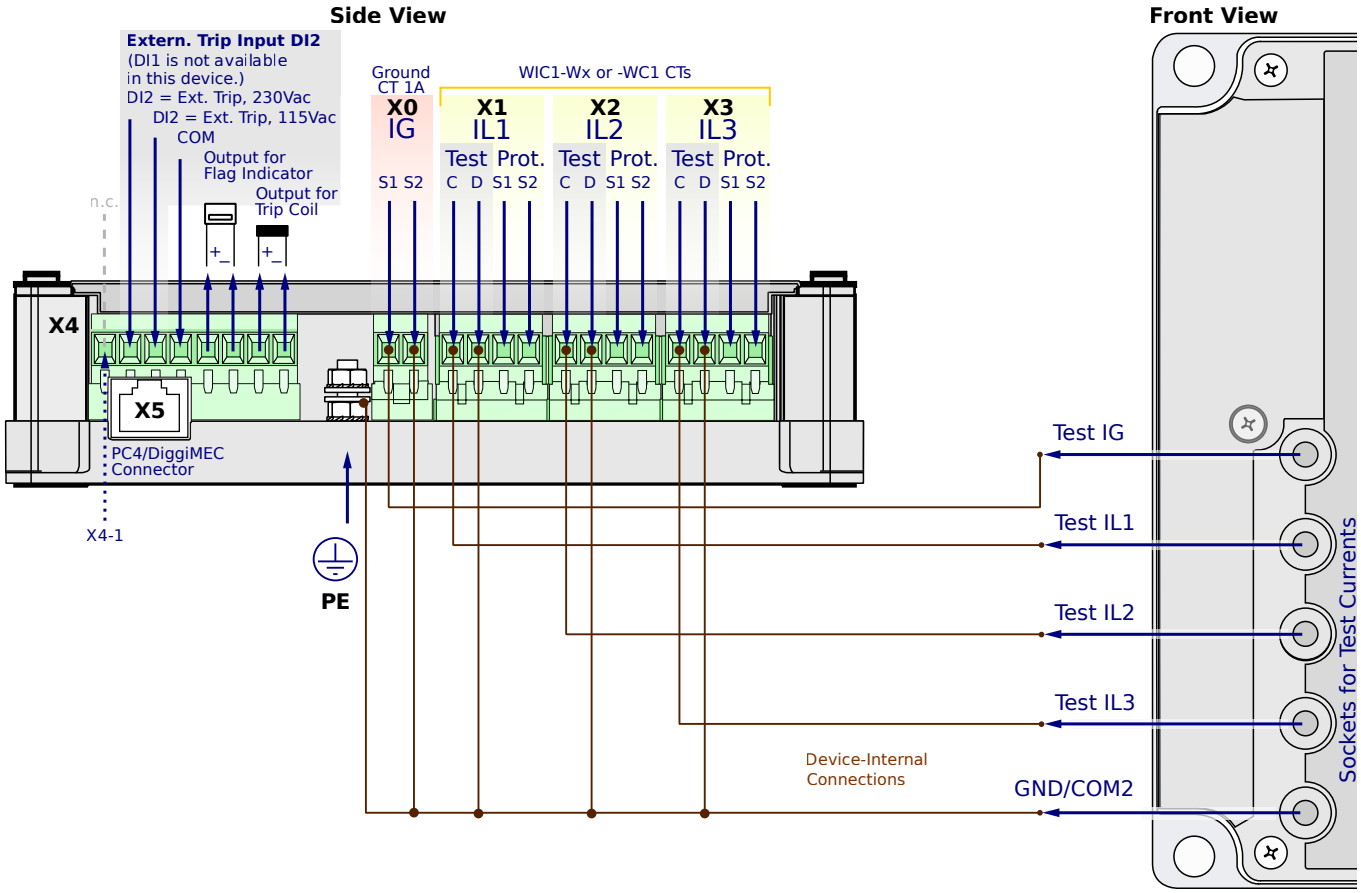


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2SA0

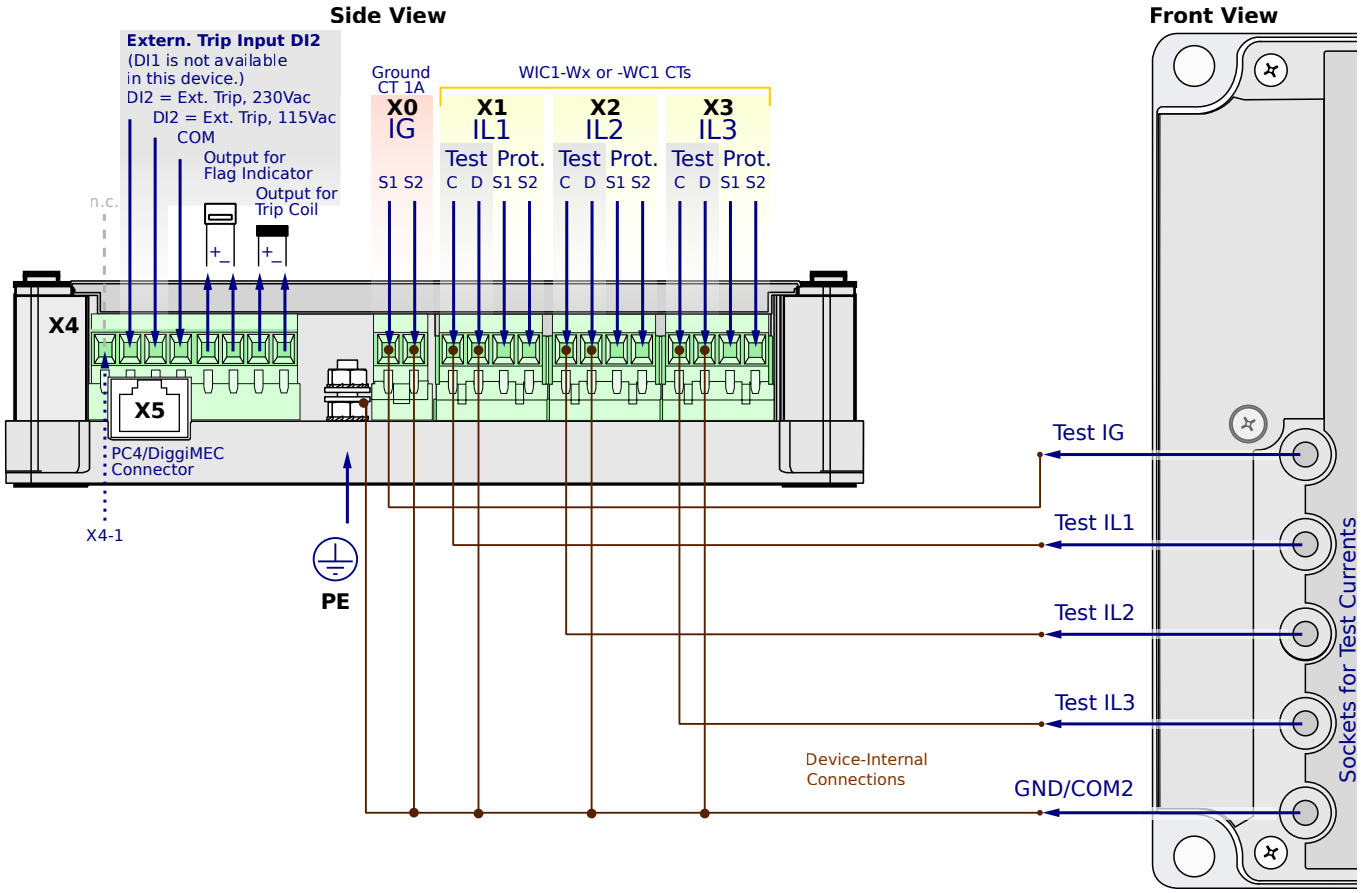


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2SAH

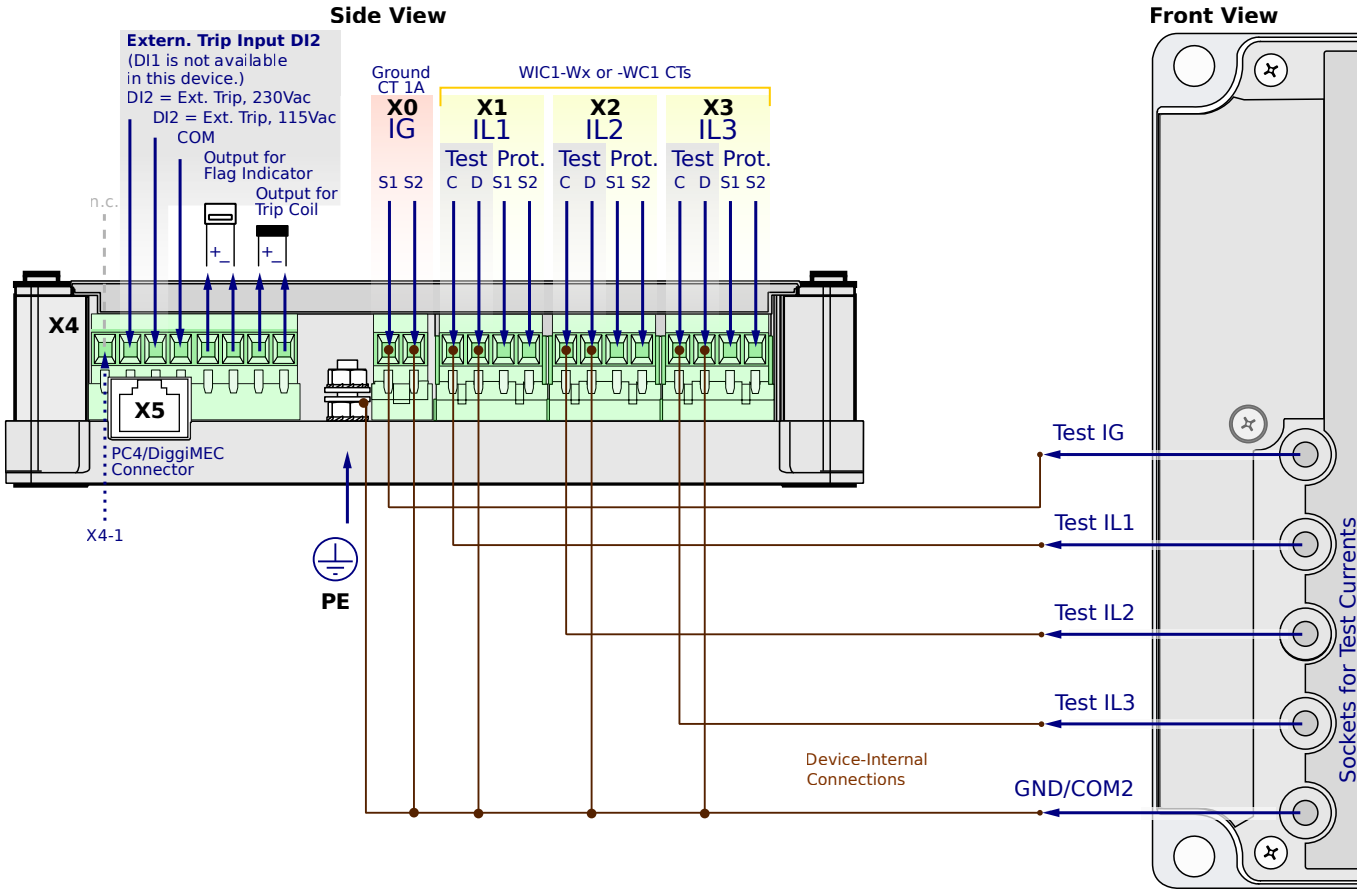


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2AA0

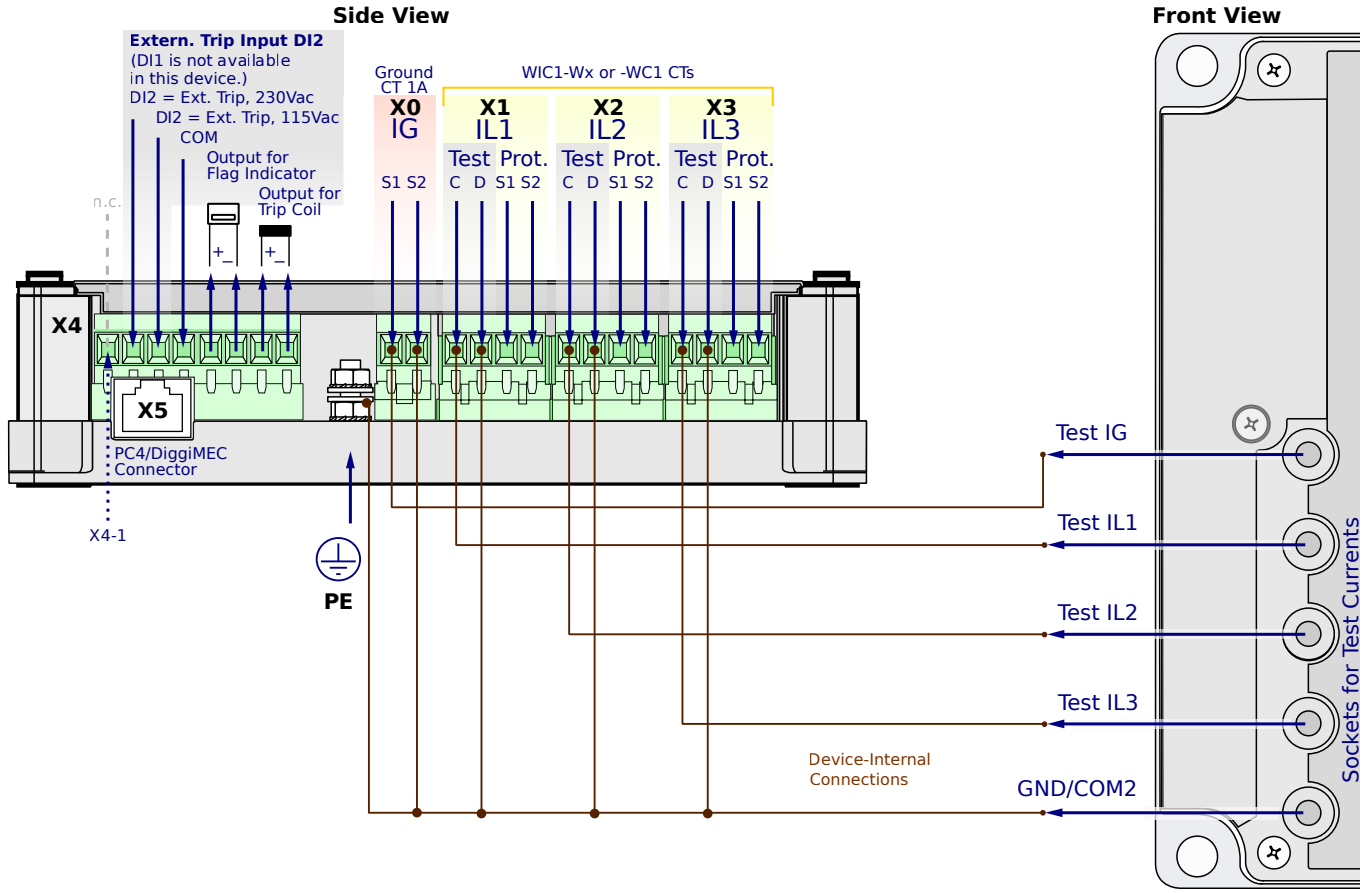


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2AAH

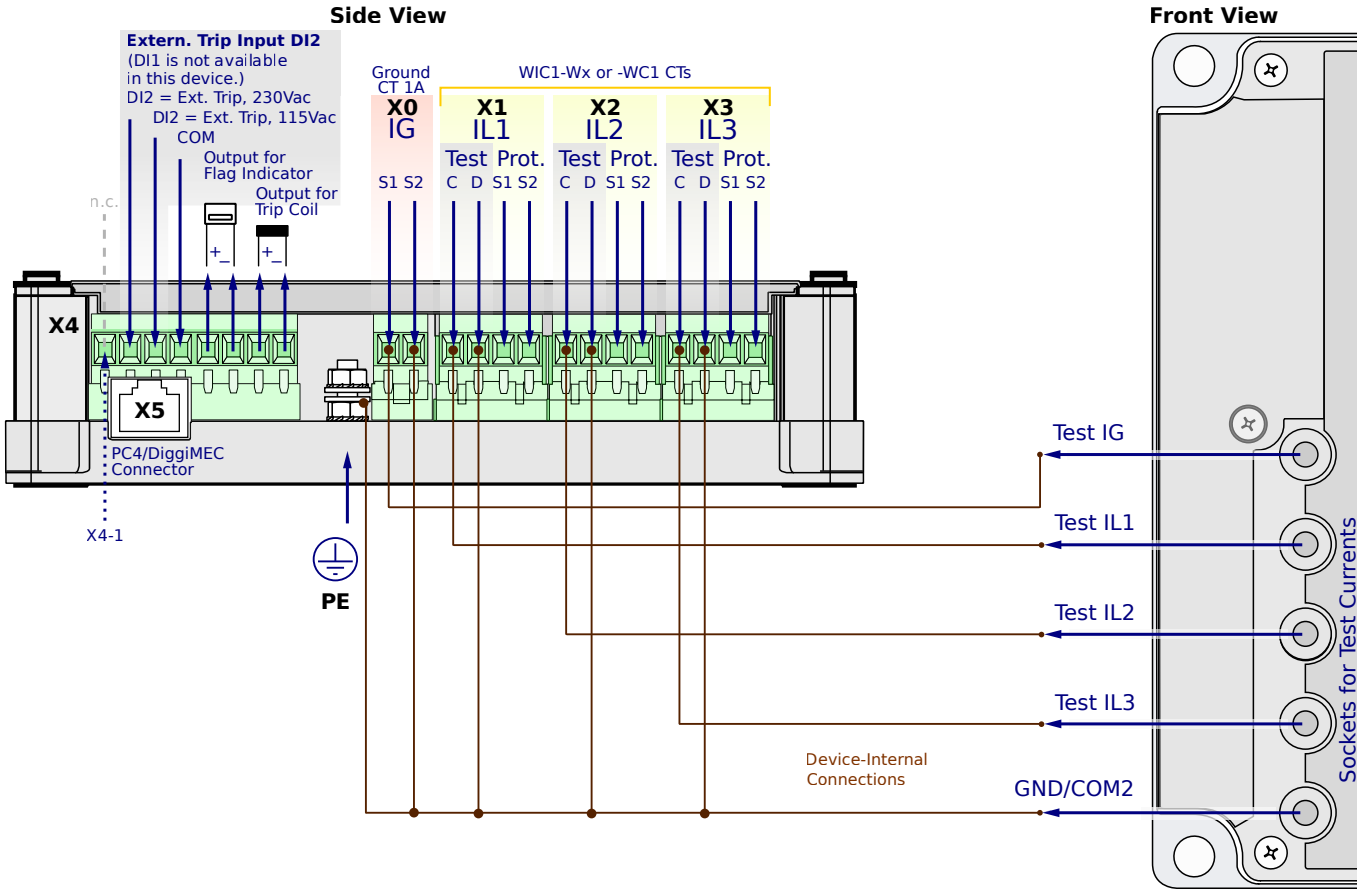


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2PA0

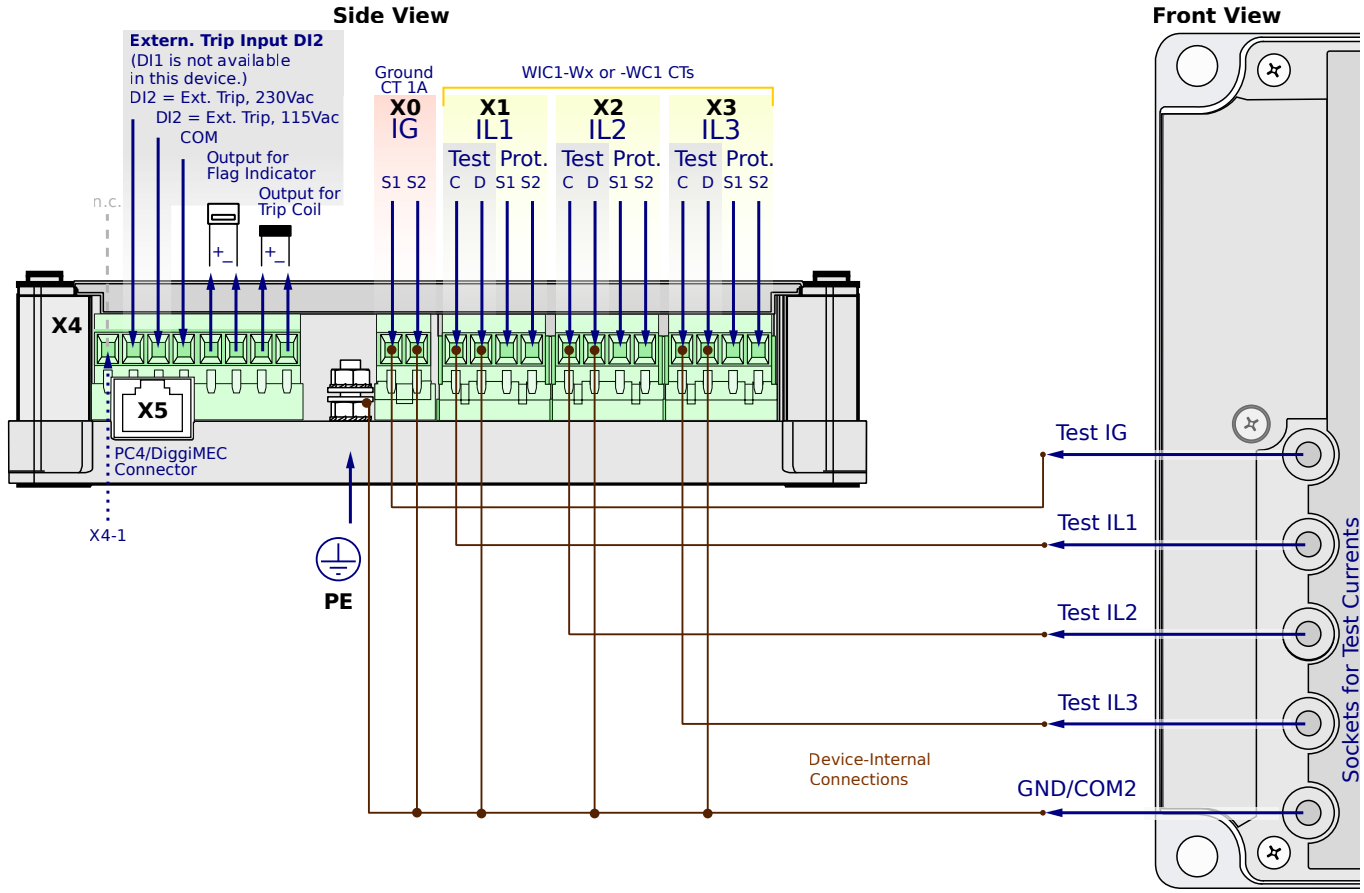


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CF2PAH

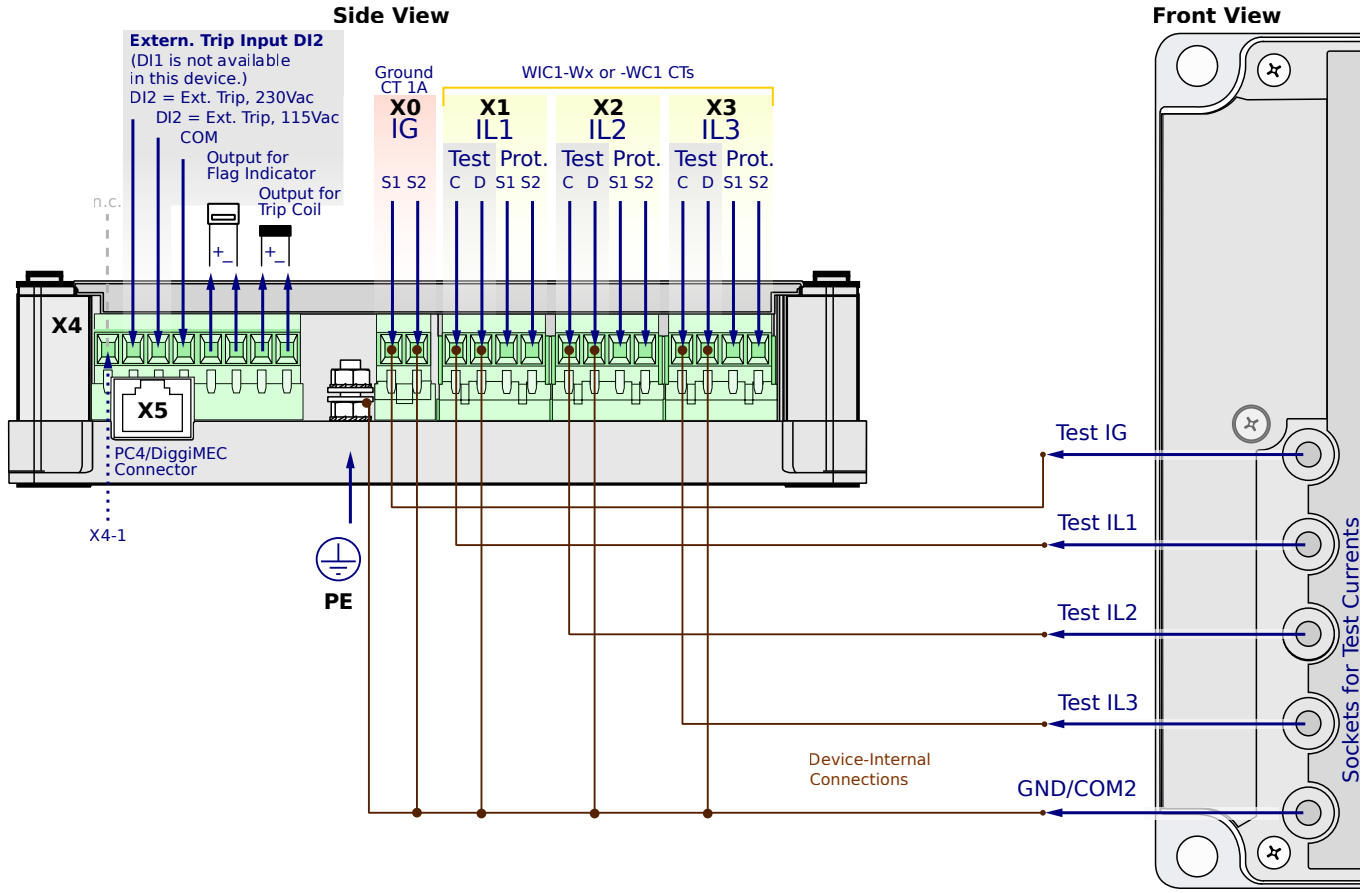


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1SA0

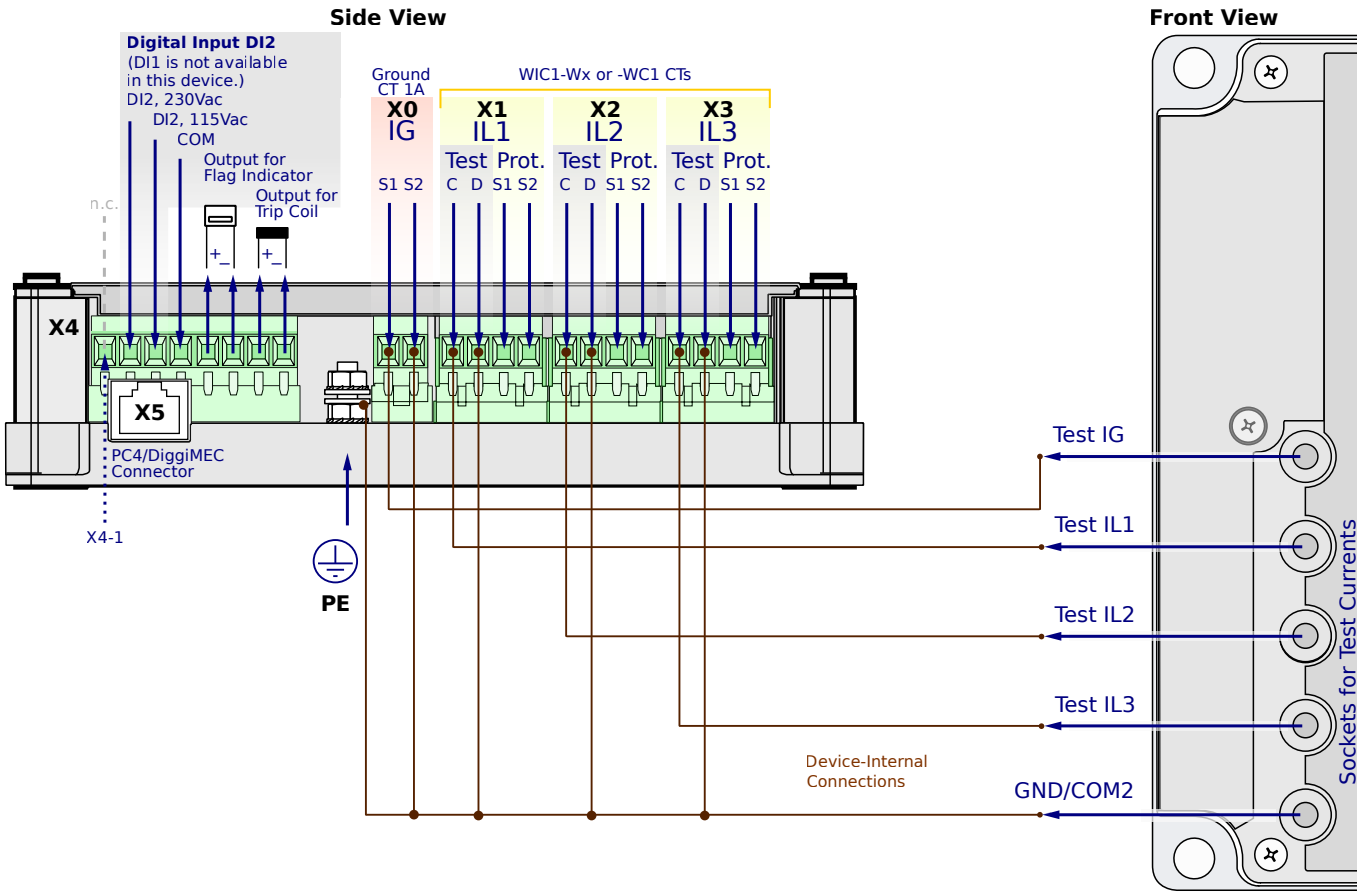


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1SAH

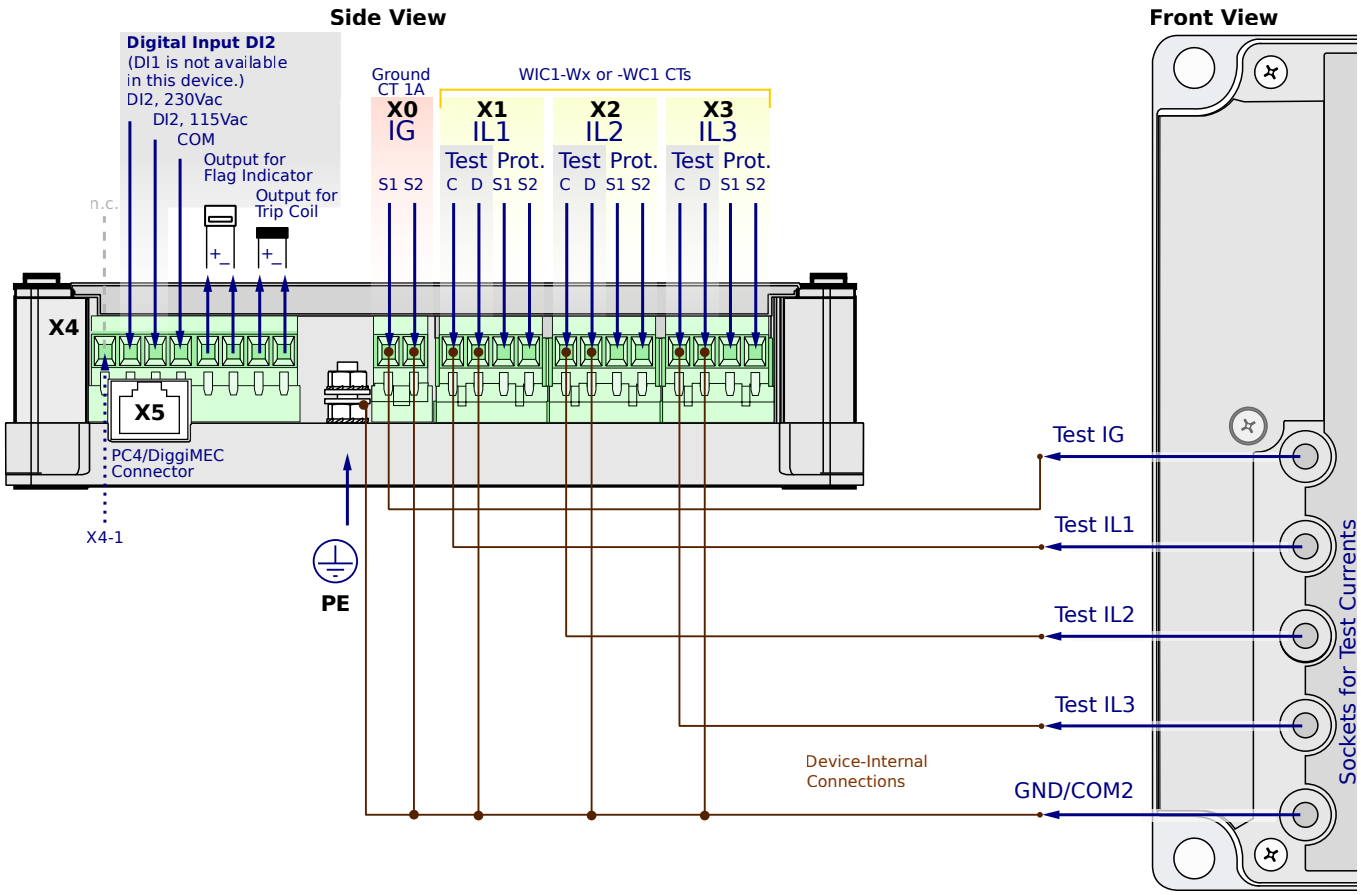


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1AA0

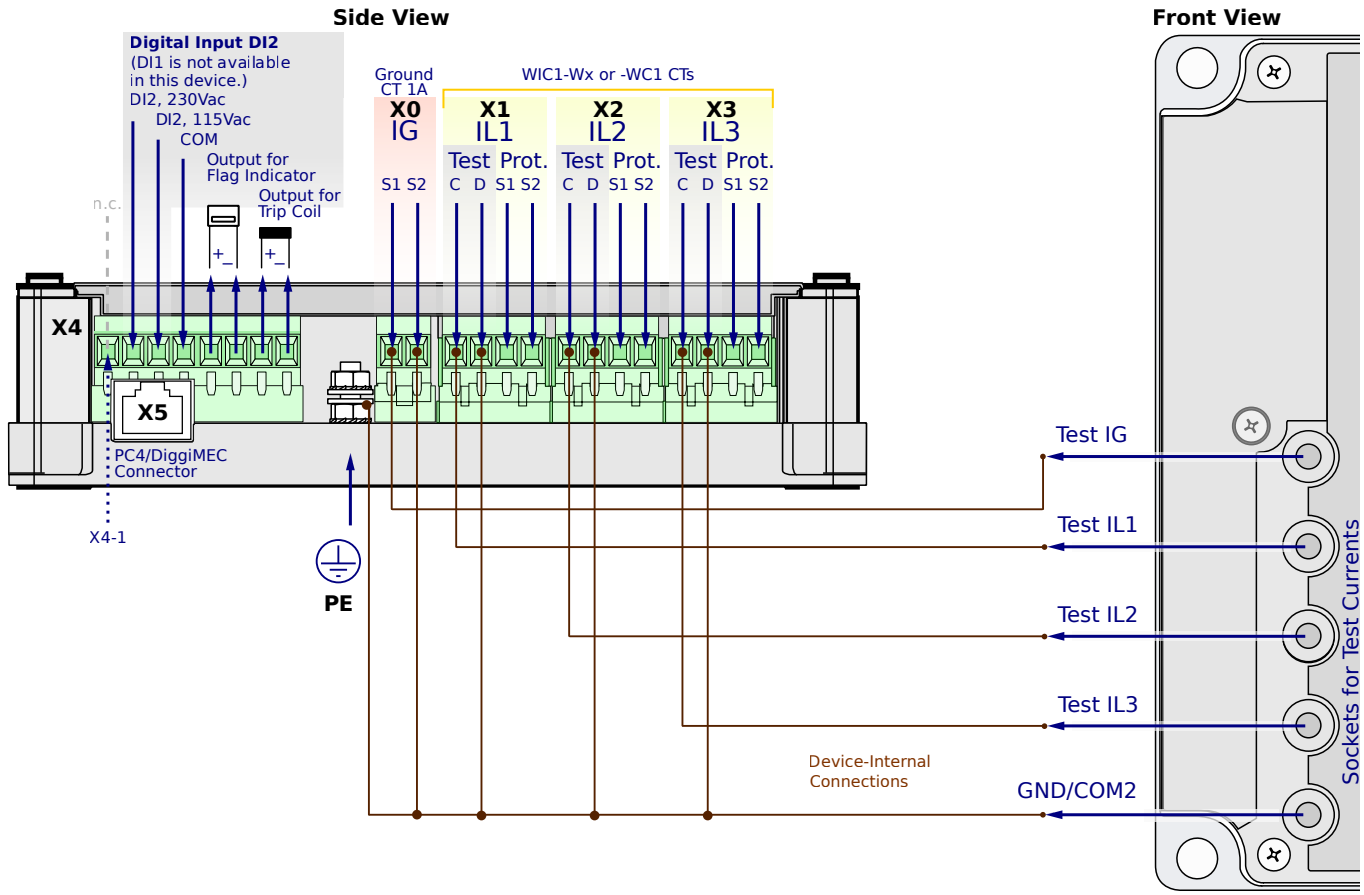


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1AAH

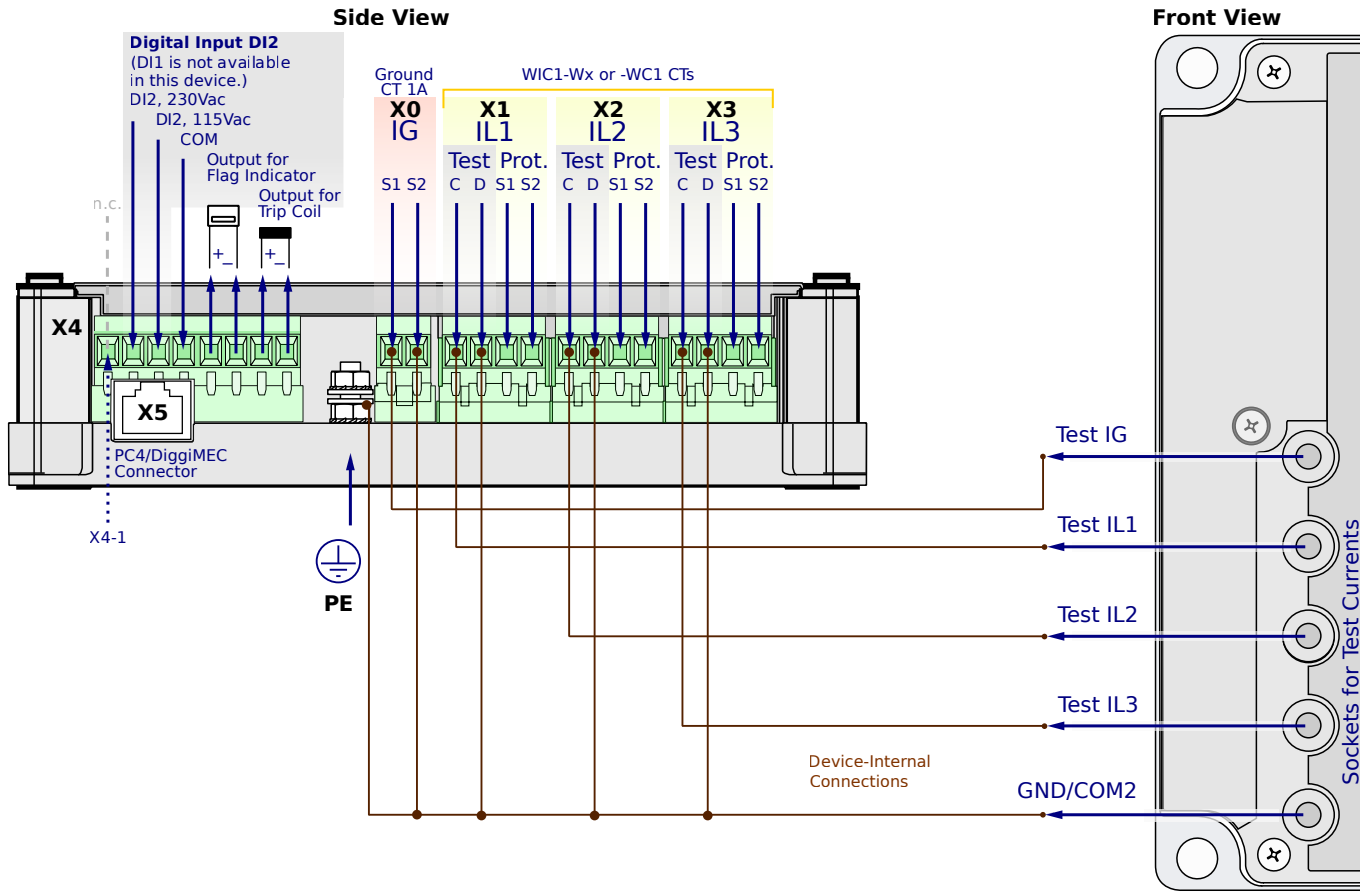


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1PA0

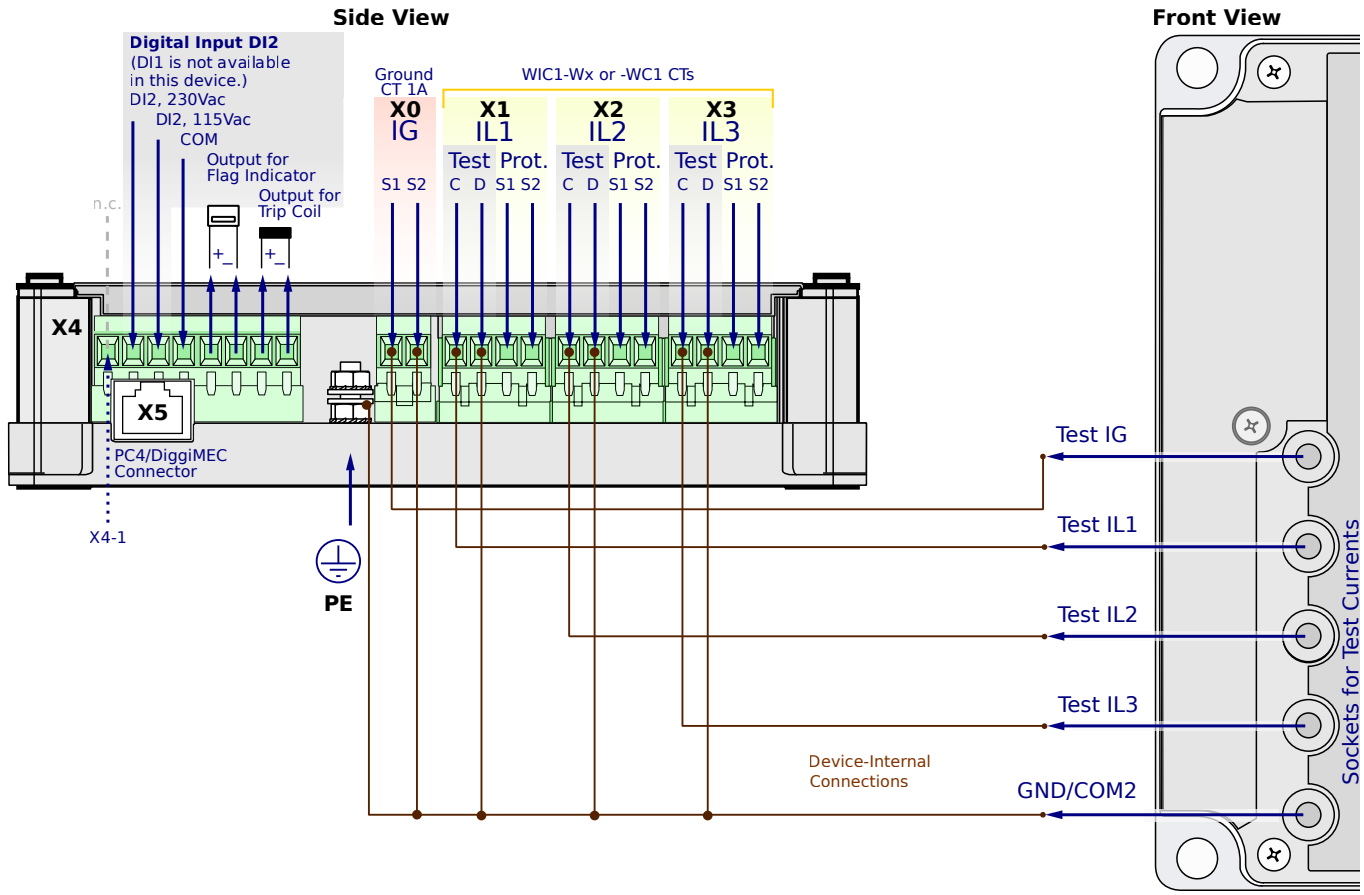


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC1PAH

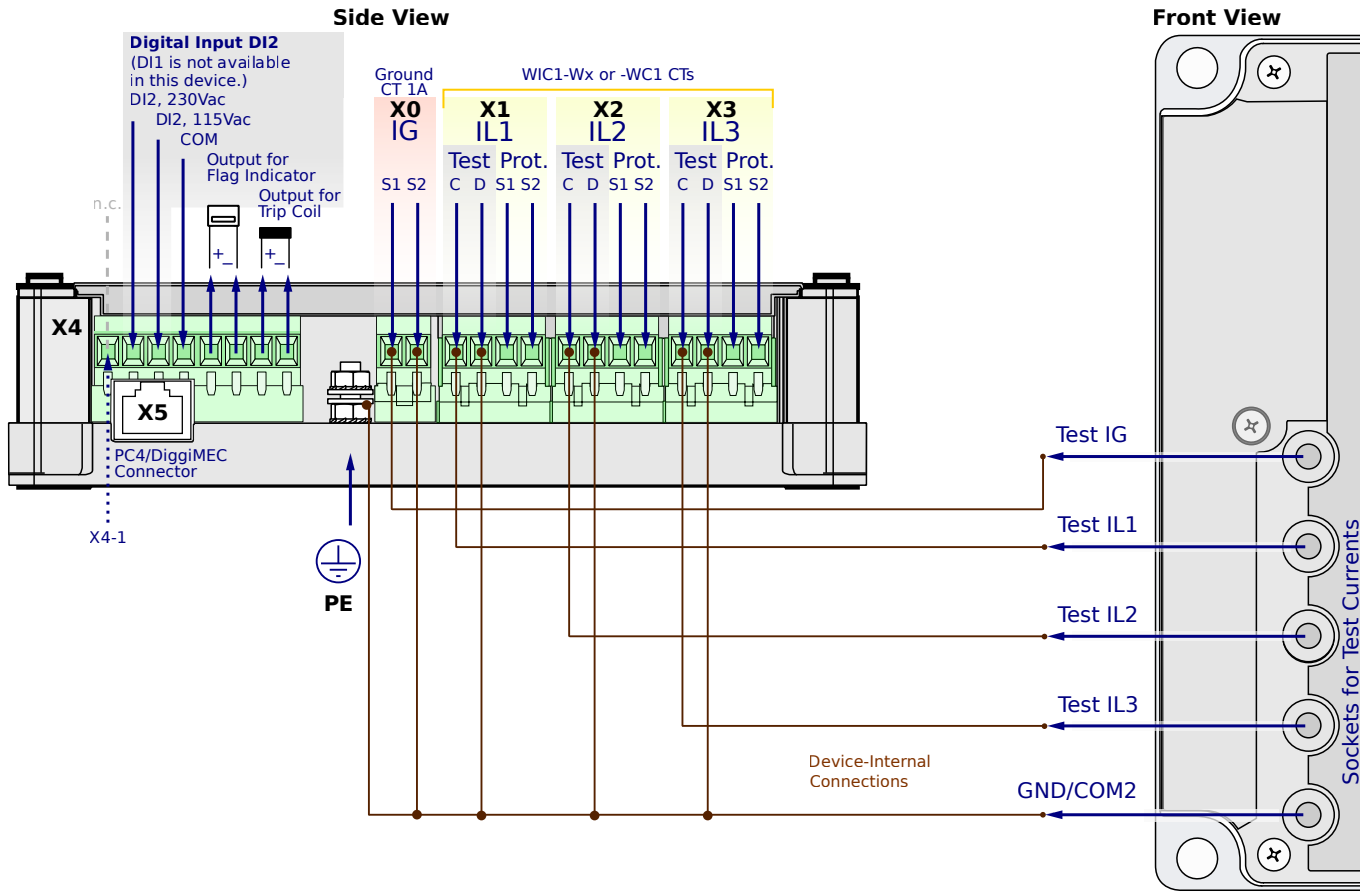


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2SA0

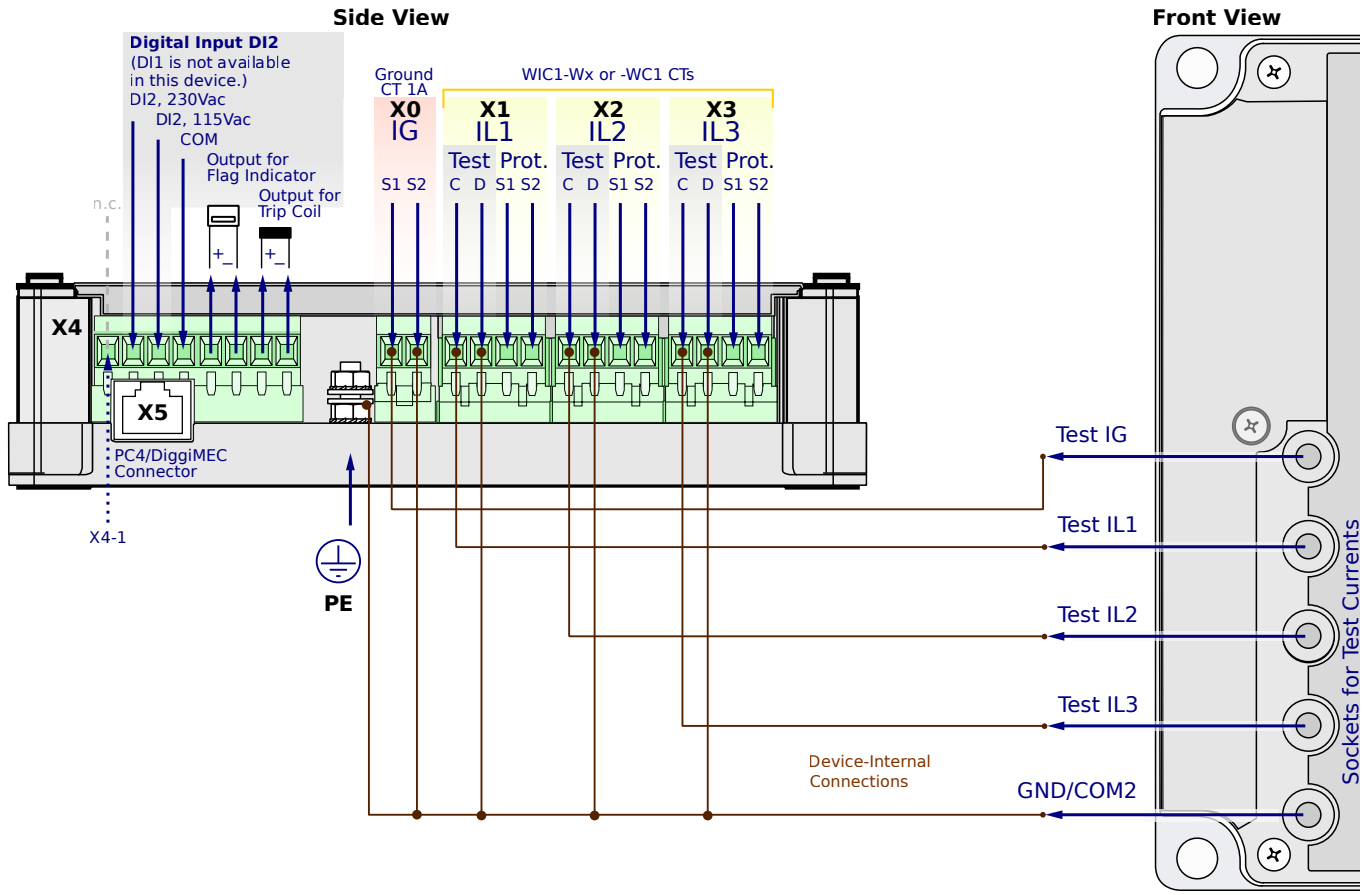


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2SAH

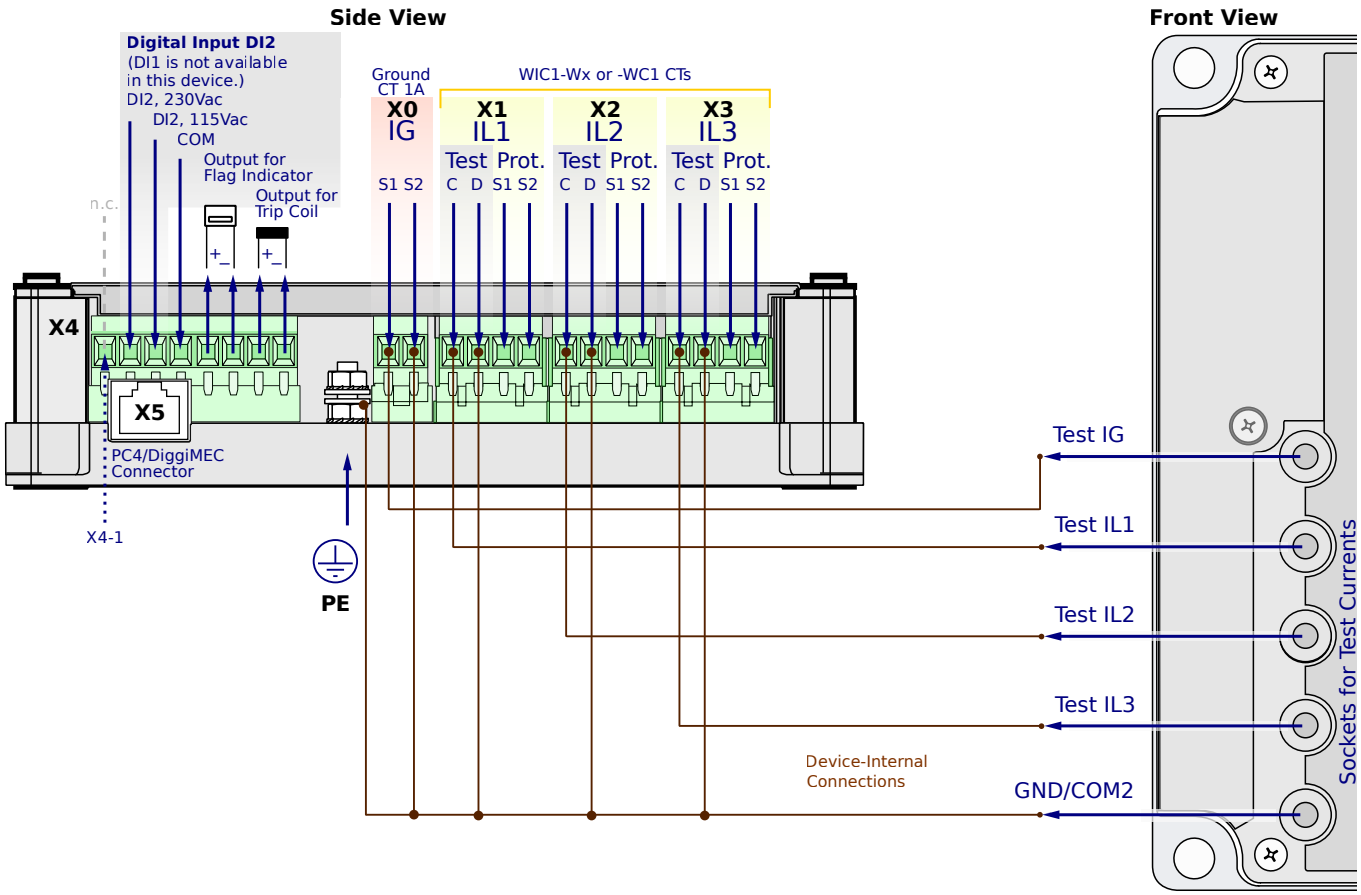


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2AA0

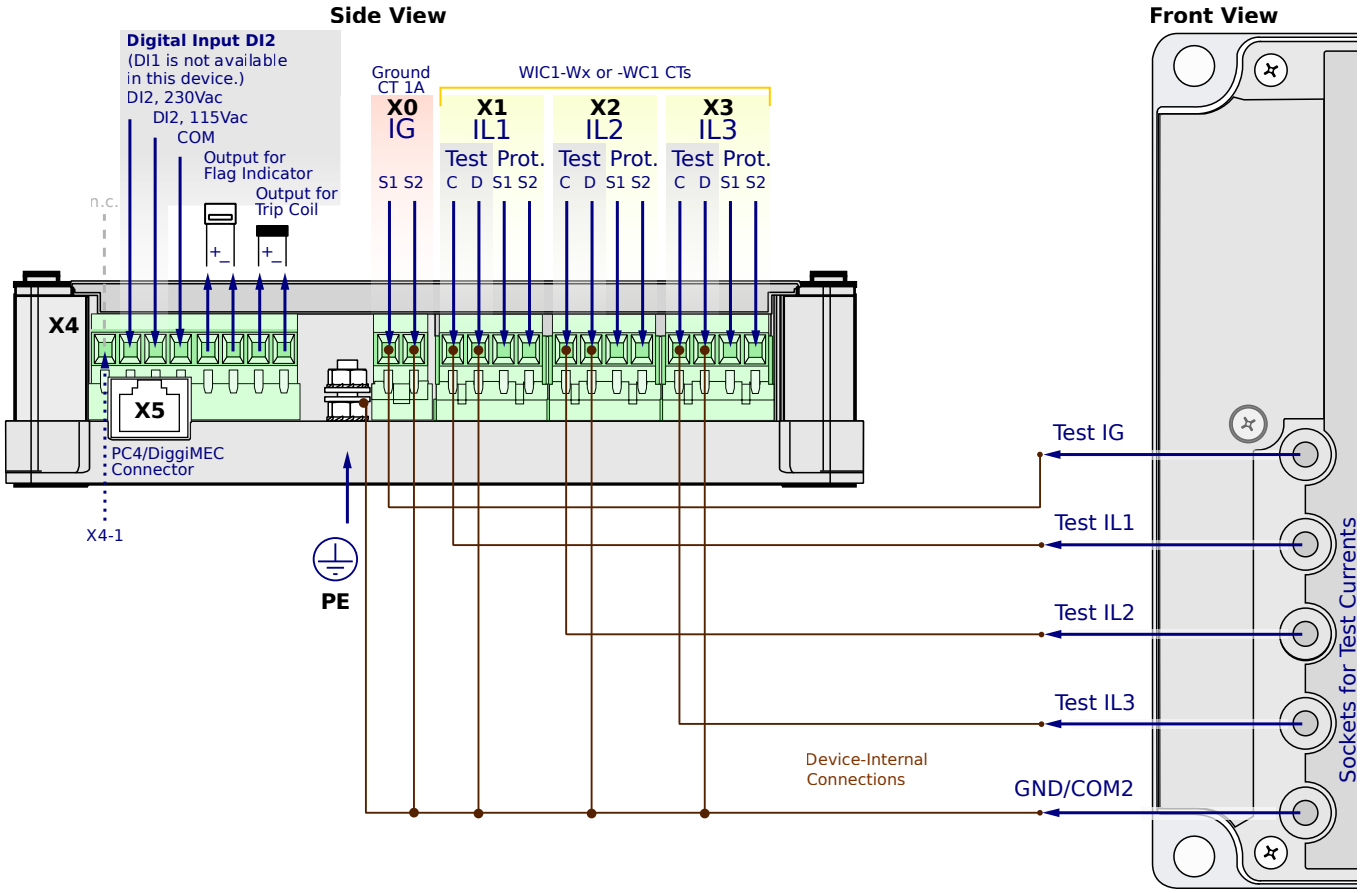


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2AAH

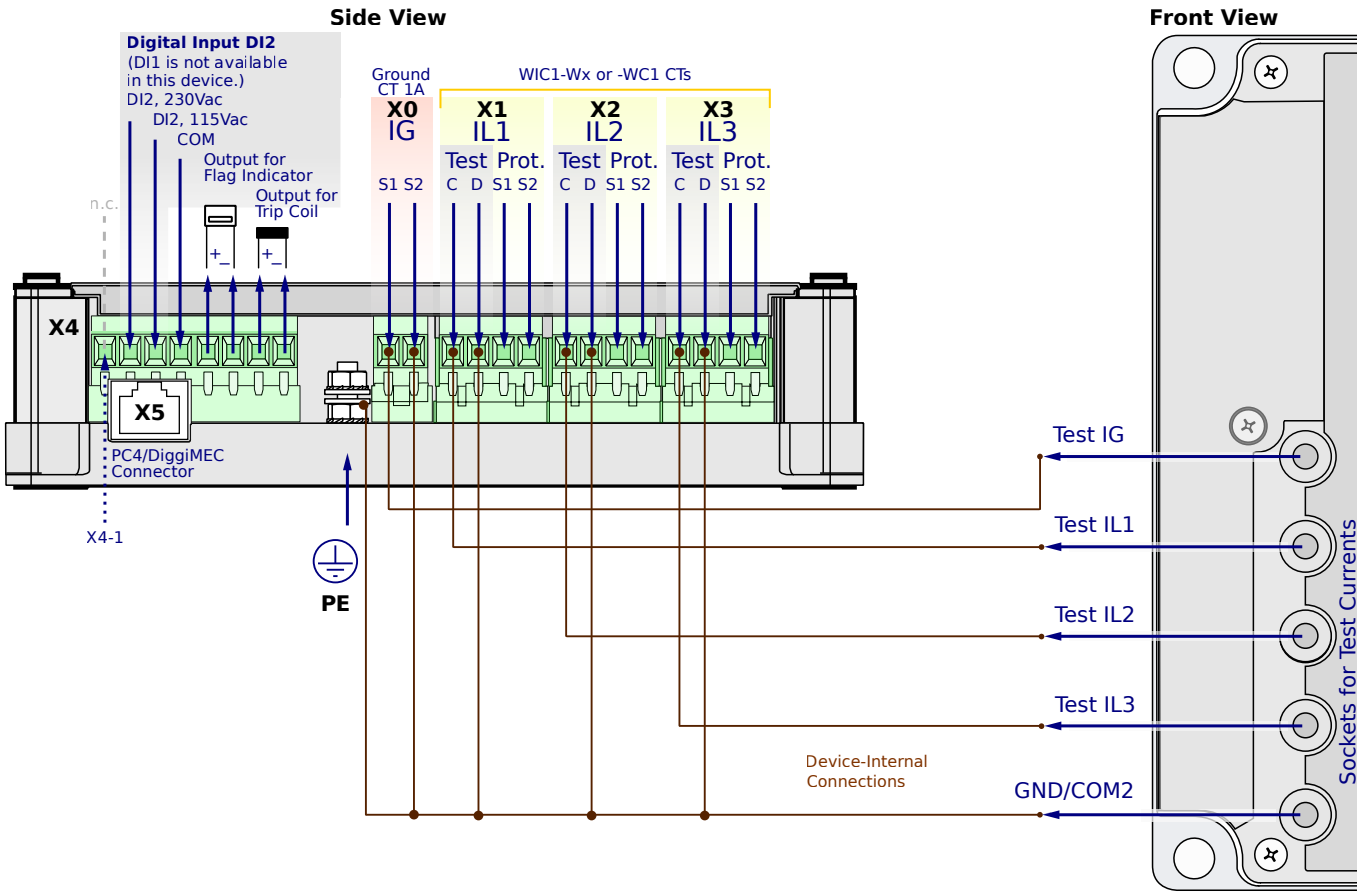


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2PA0

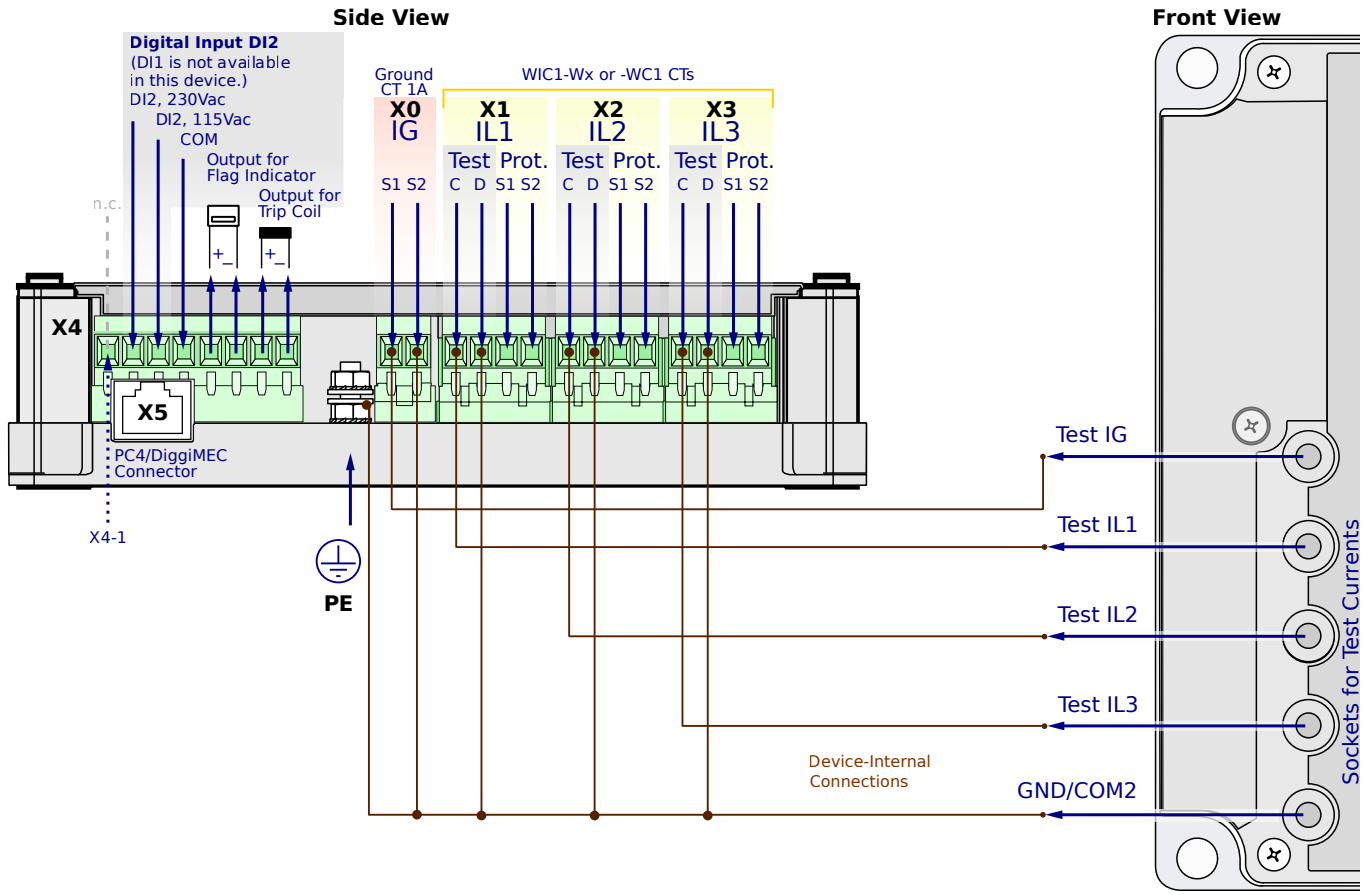


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SG6CC2PAH

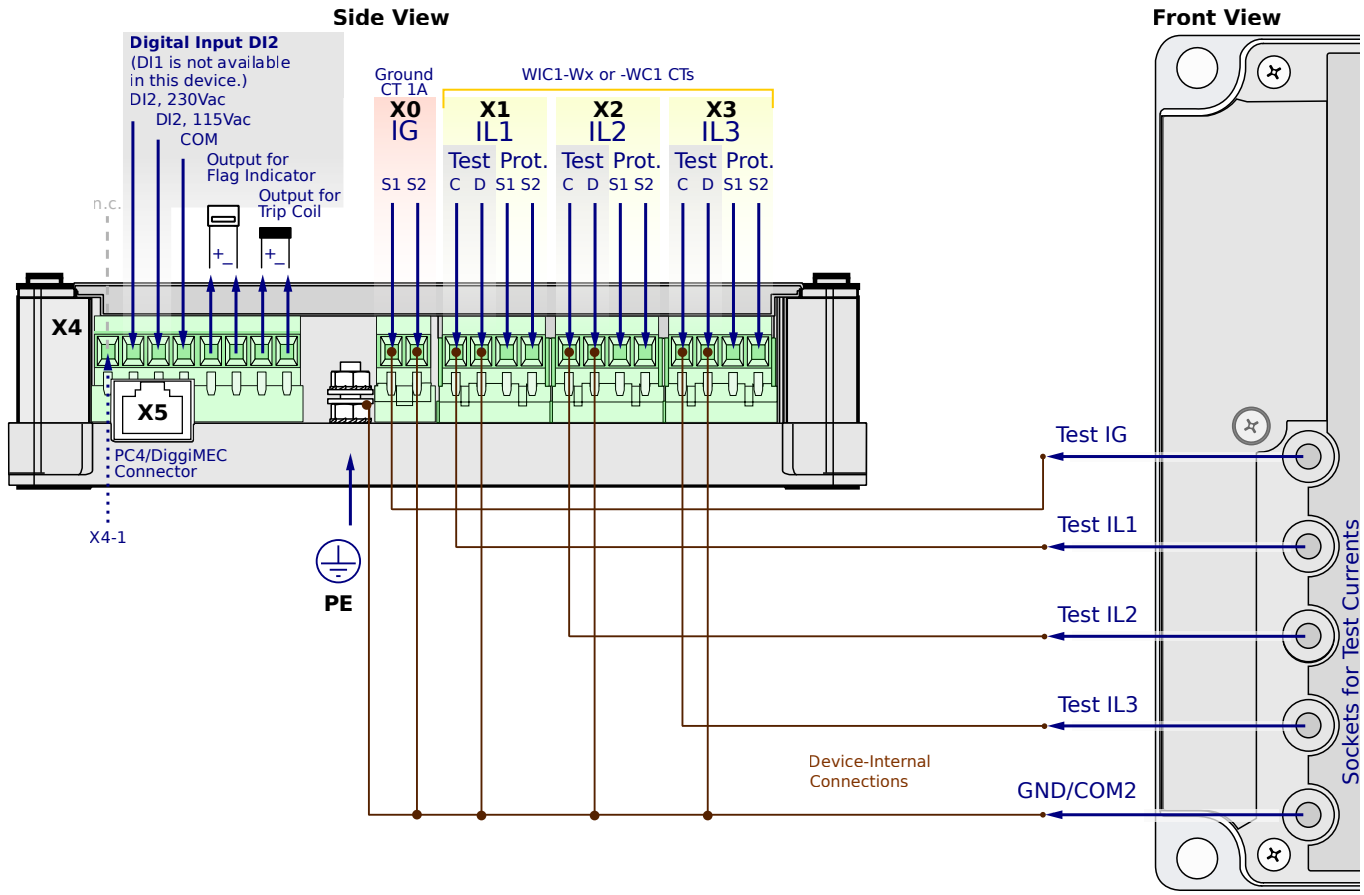


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0SA0

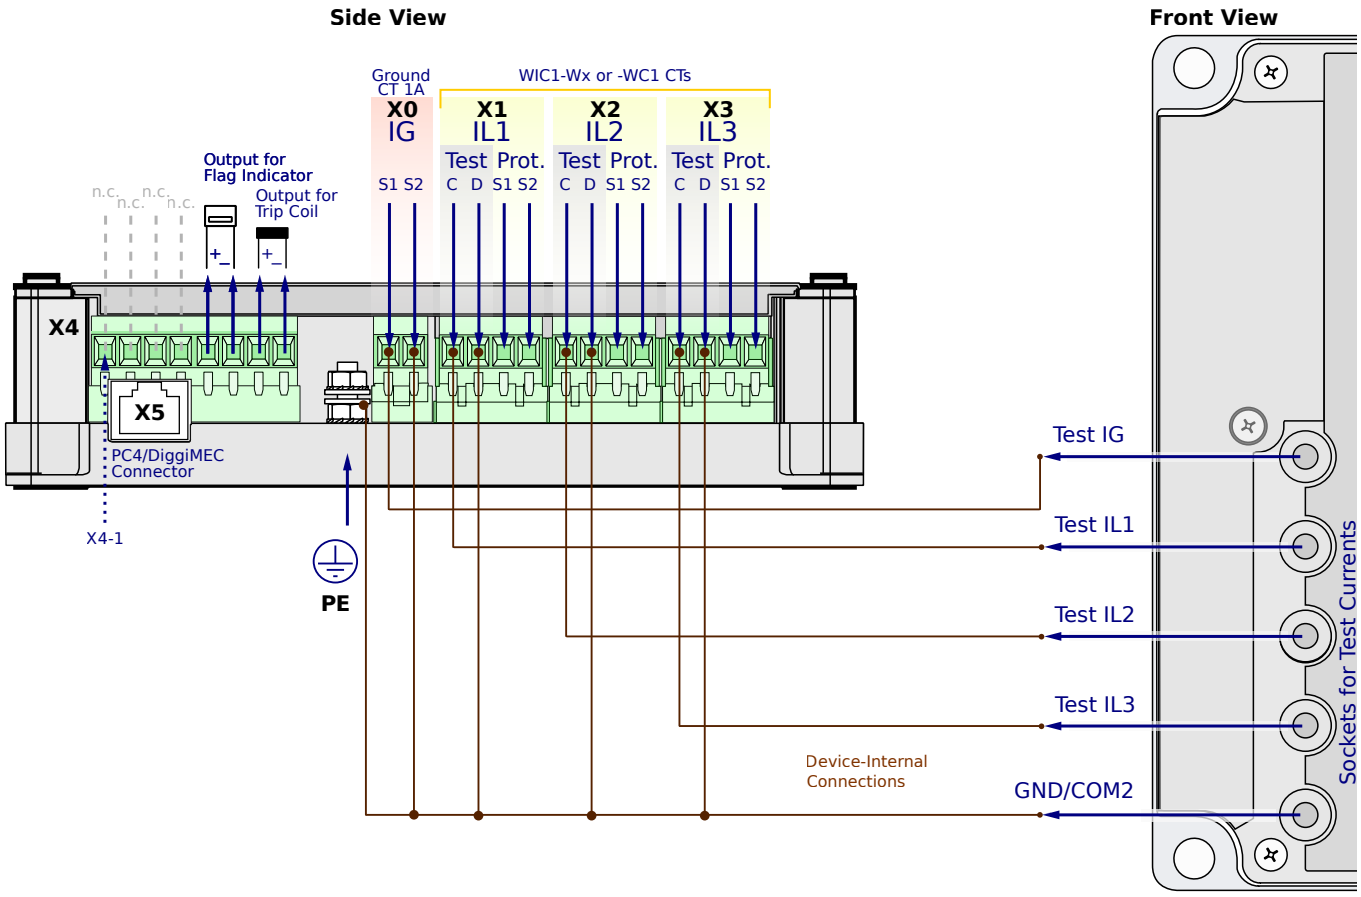


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0SAH

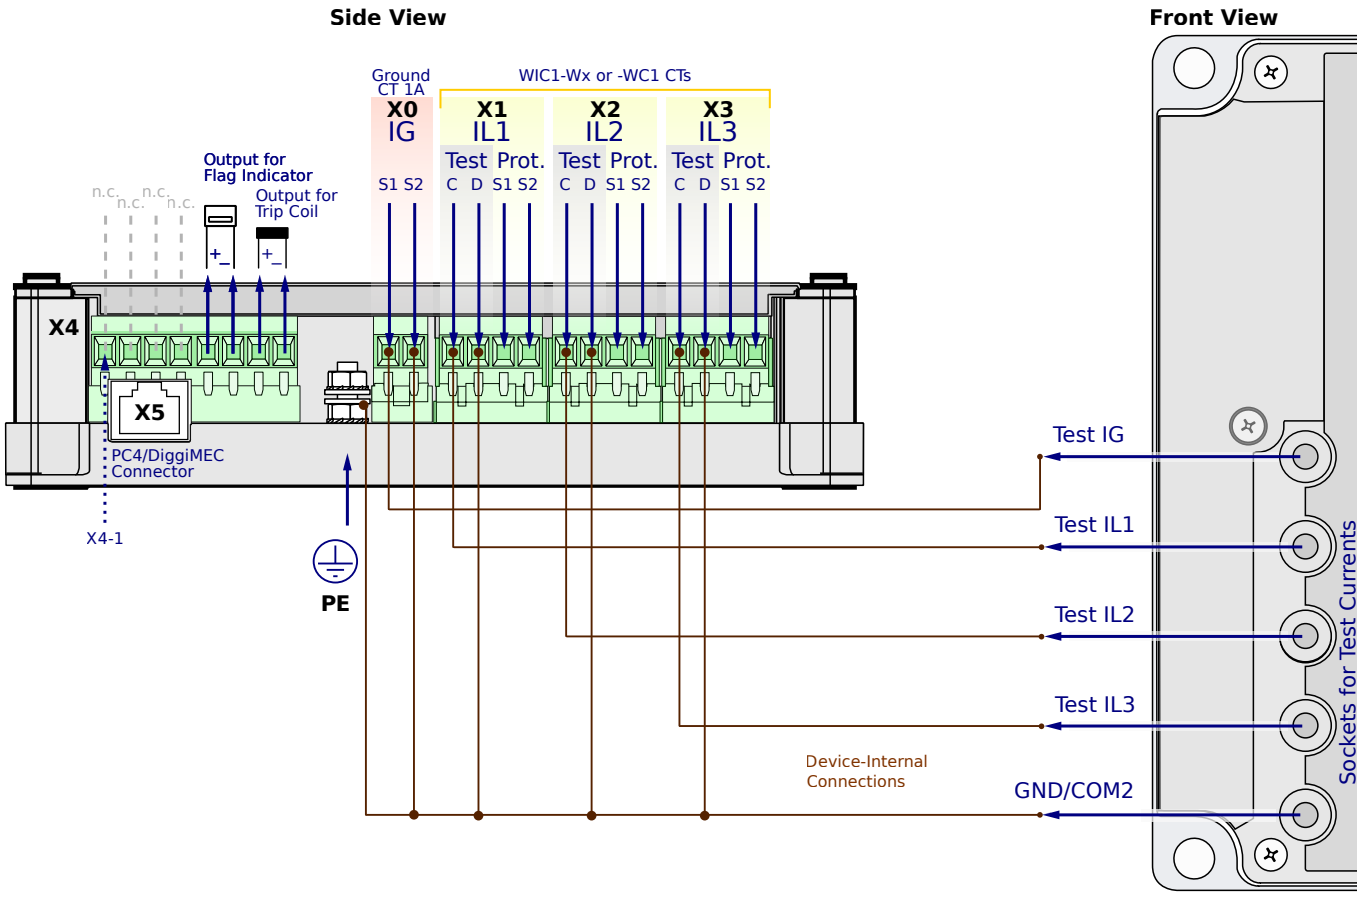


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0AA0

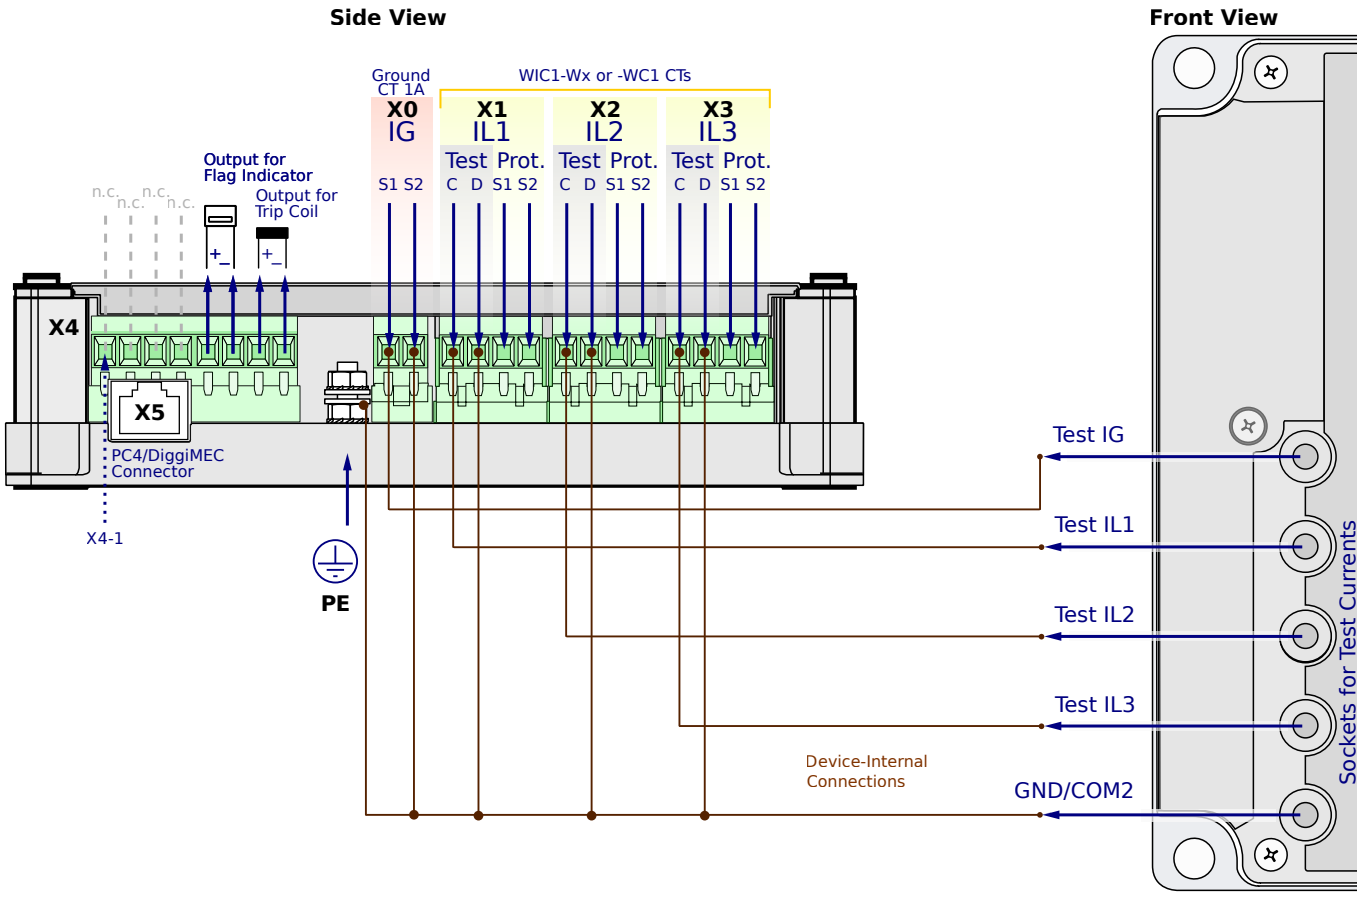


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0AAH

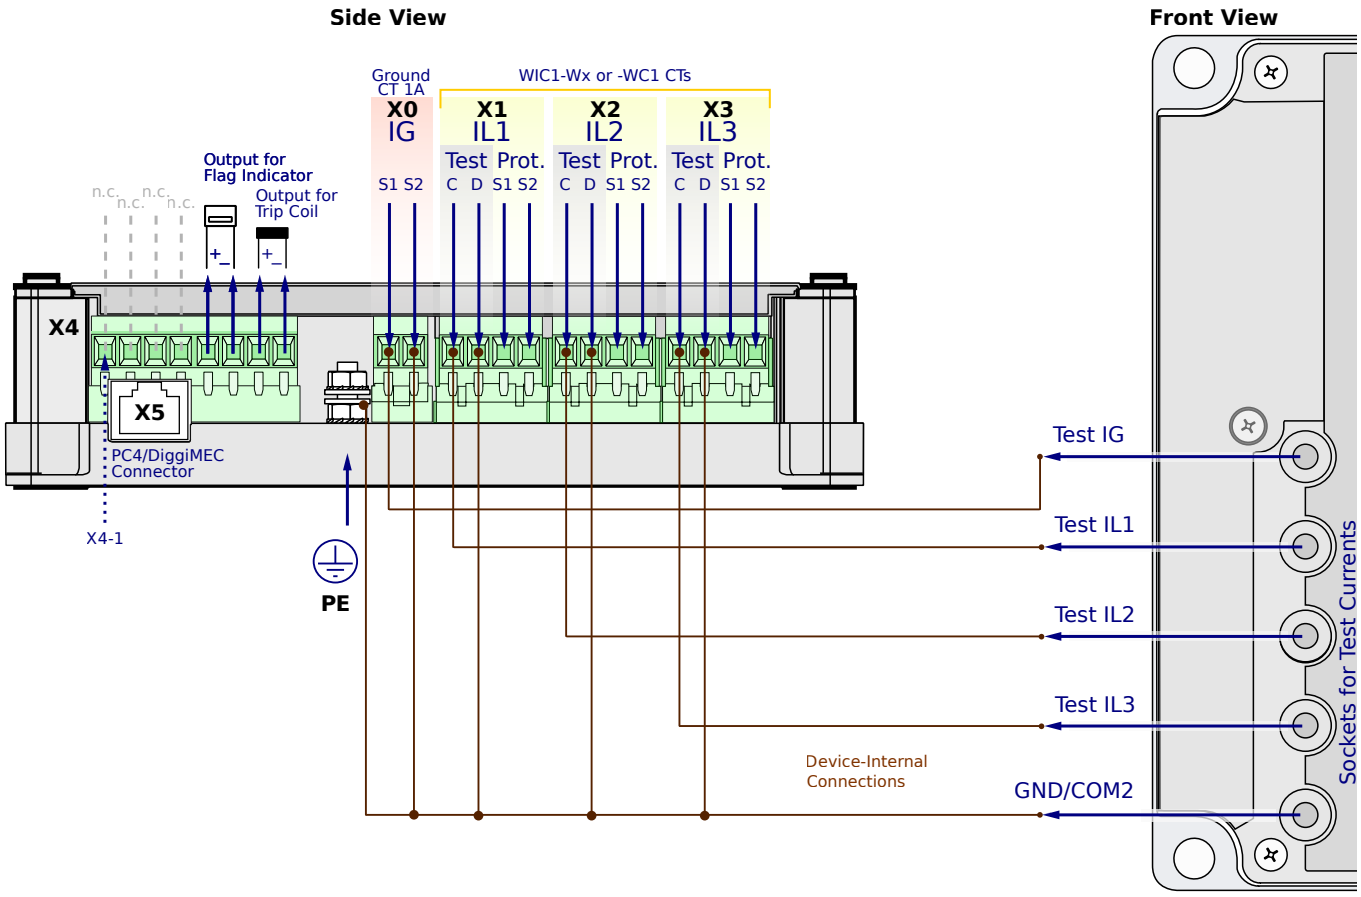


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0PA0

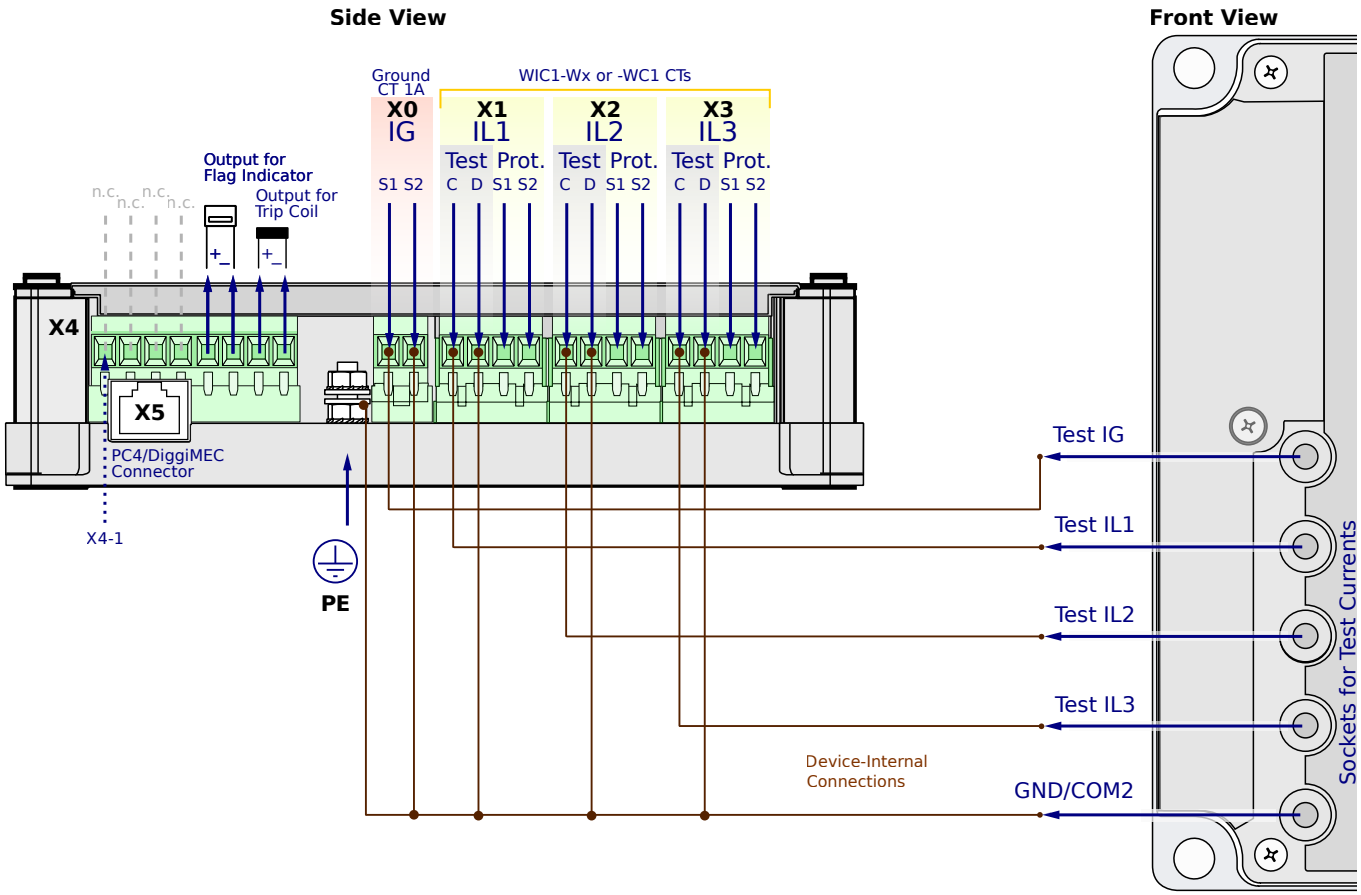


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN0PAH

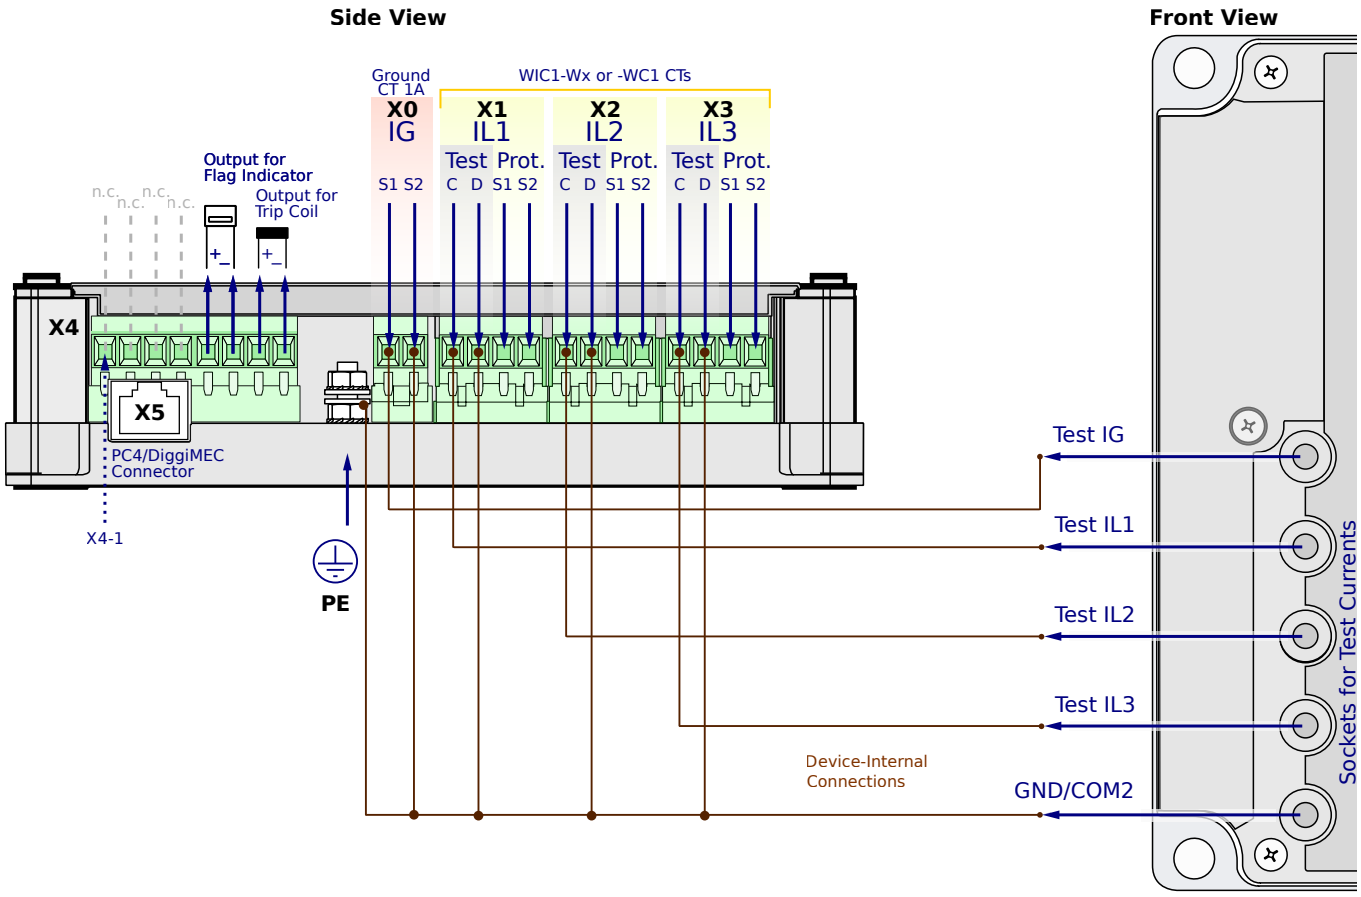


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1SA0

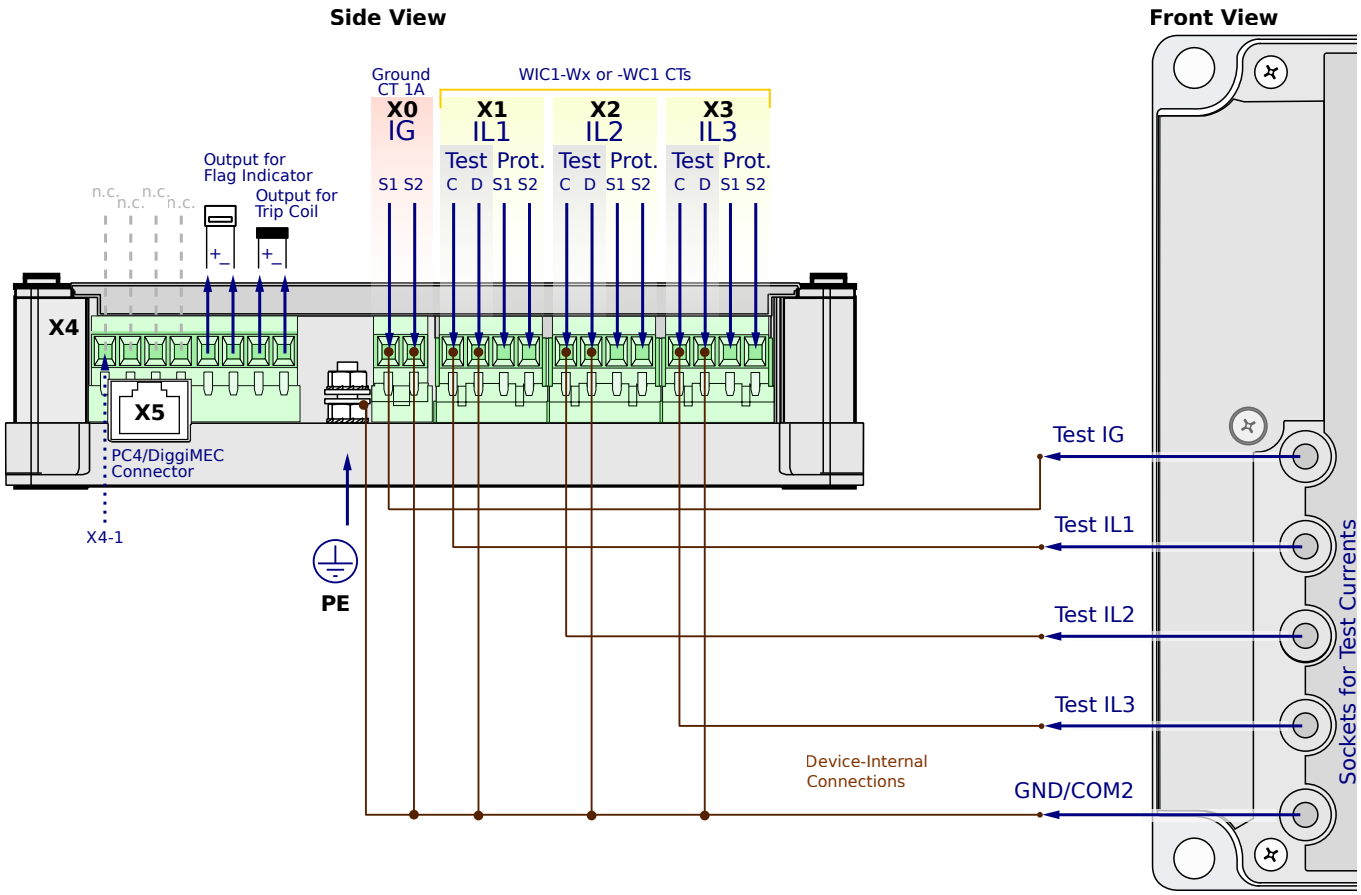


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1SAH

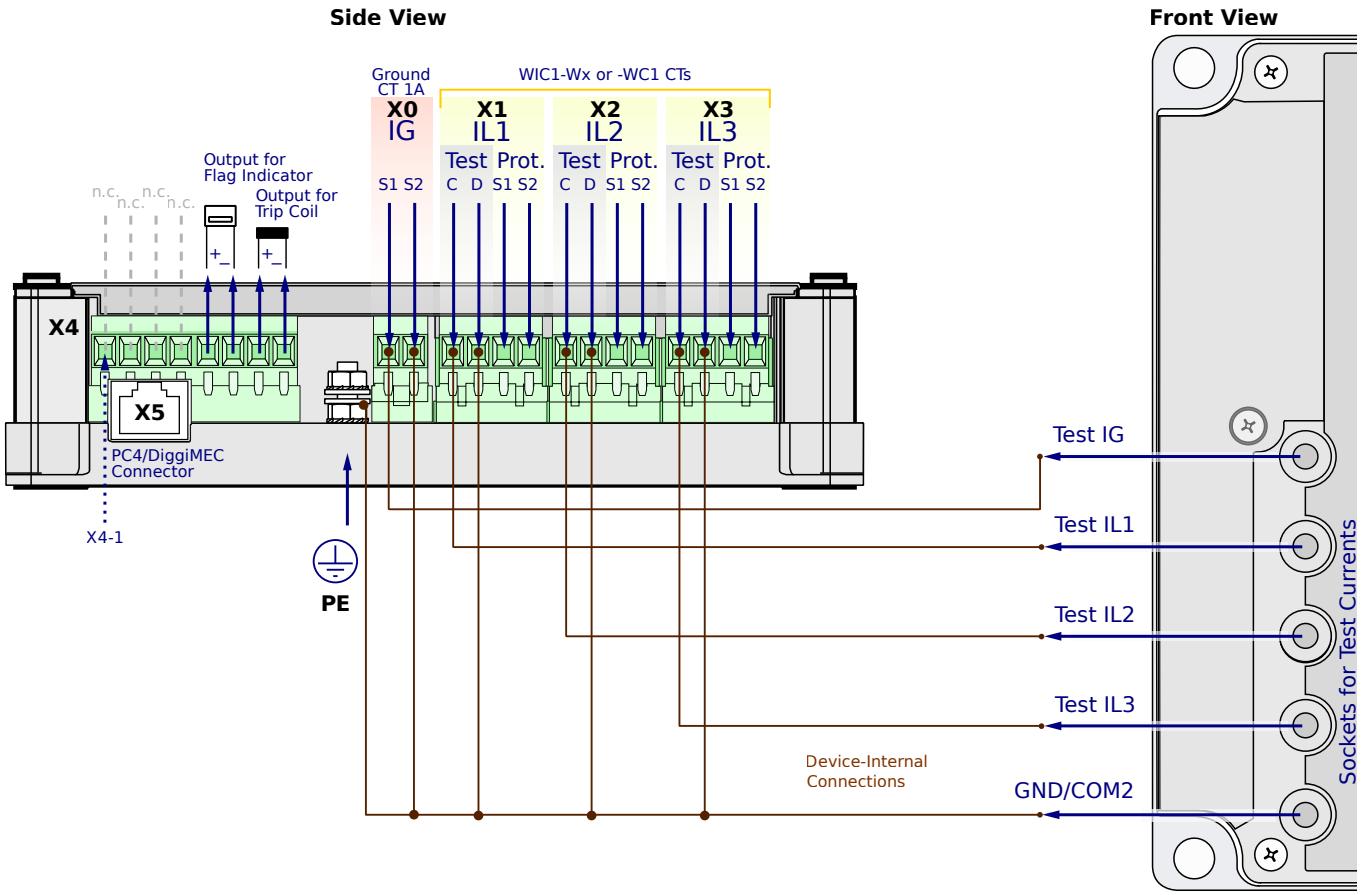


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1AA0

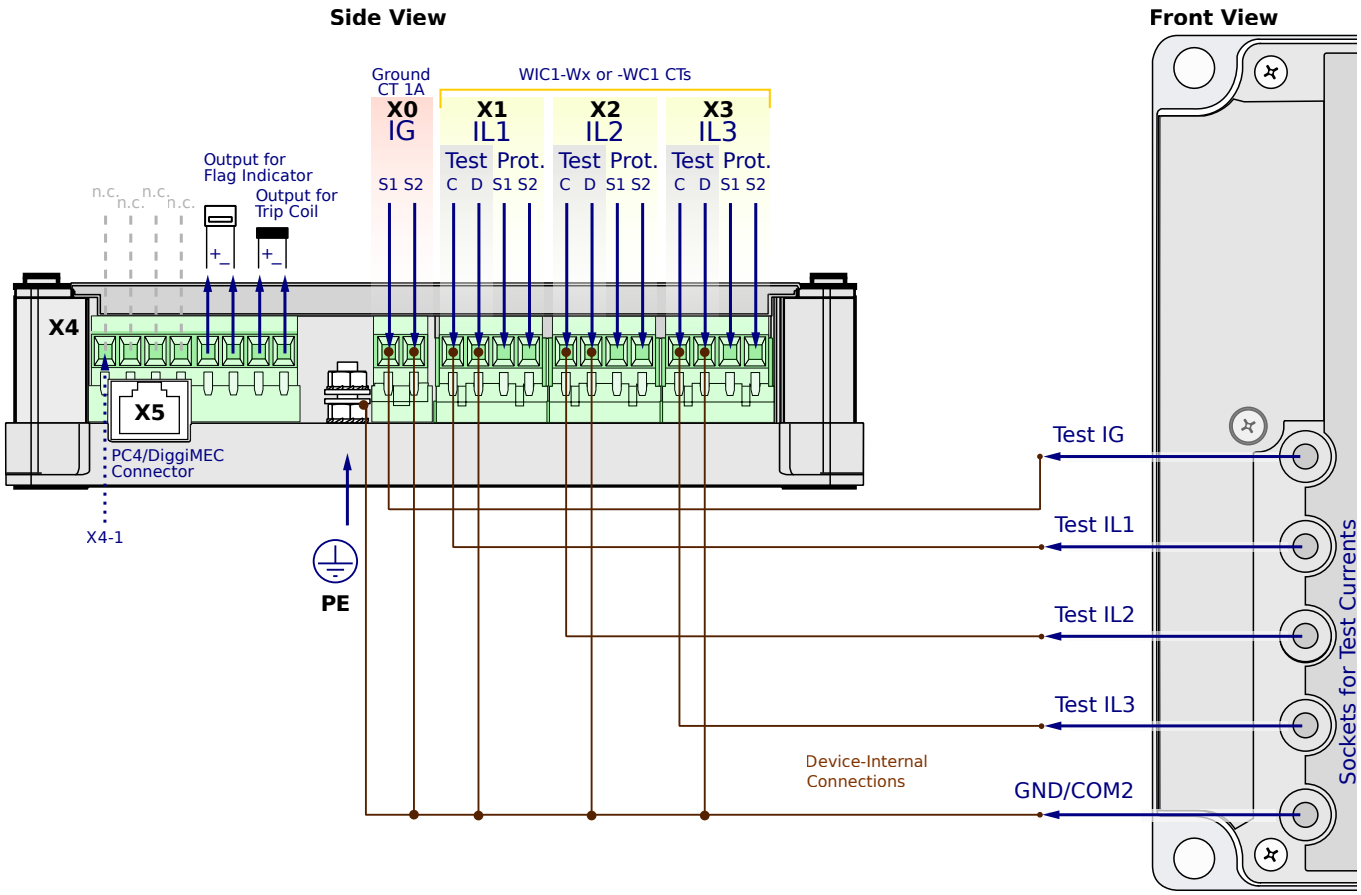


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1AAH

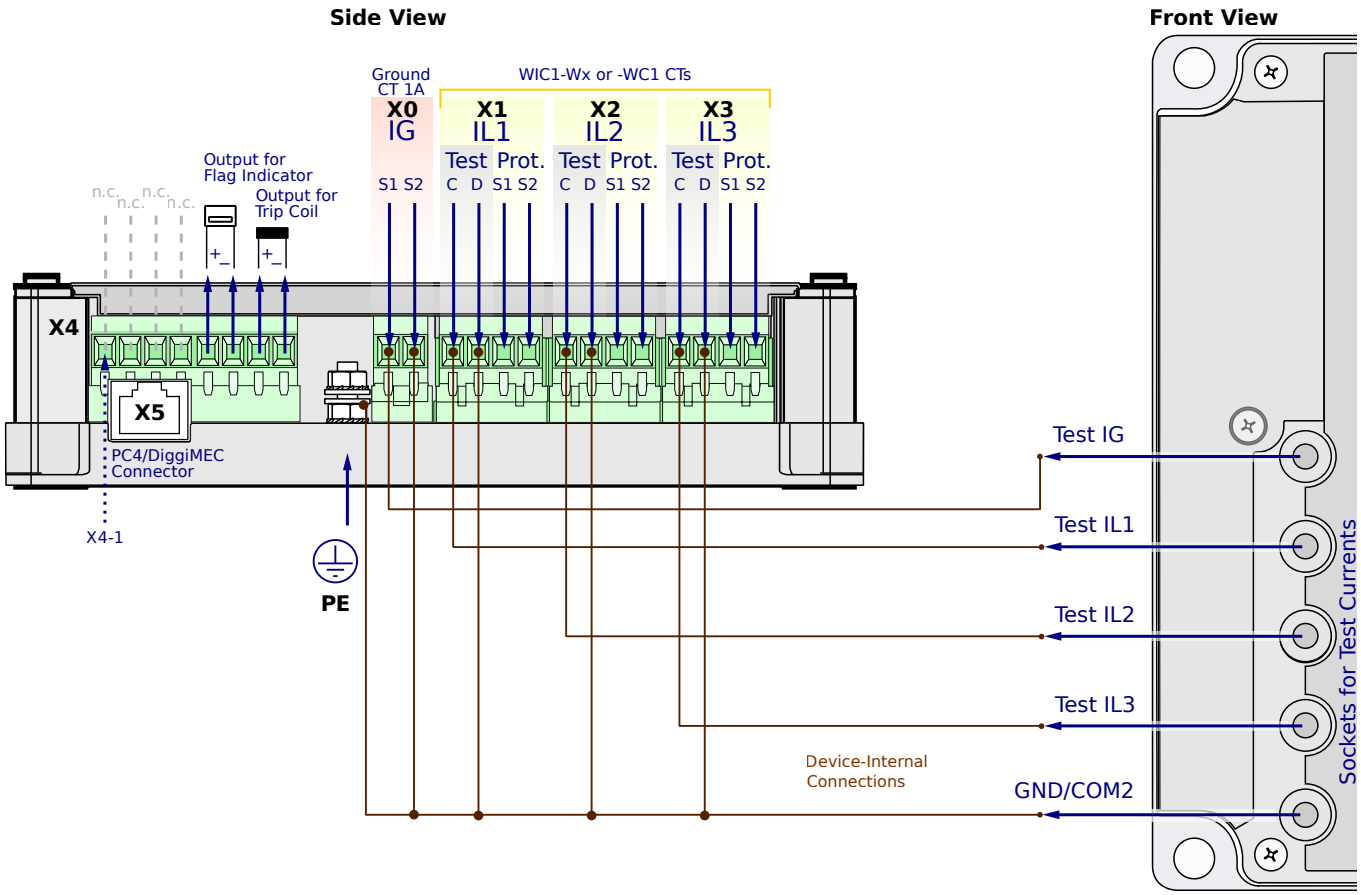


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1PA0

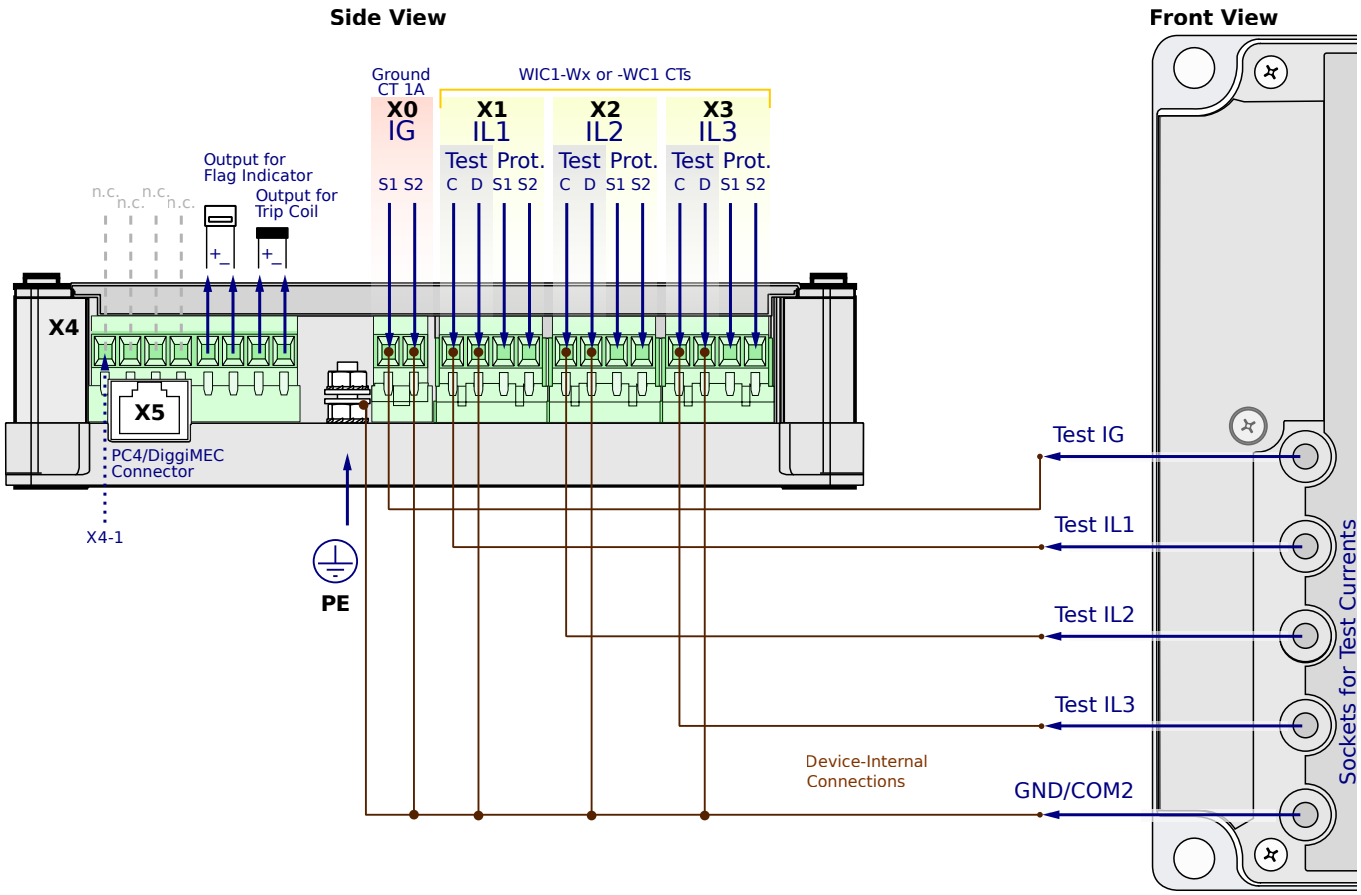


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN1PAH

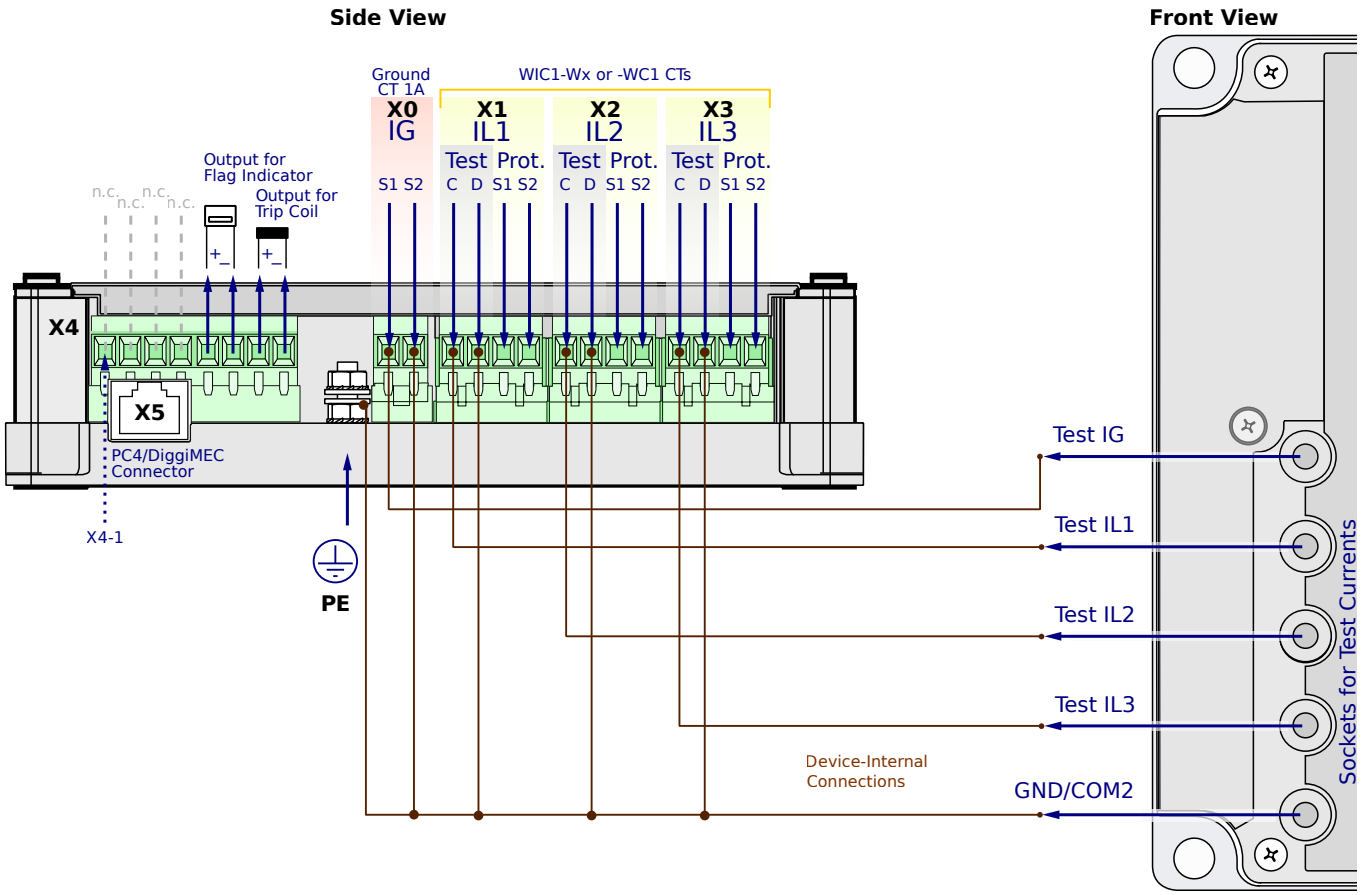


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2SA0

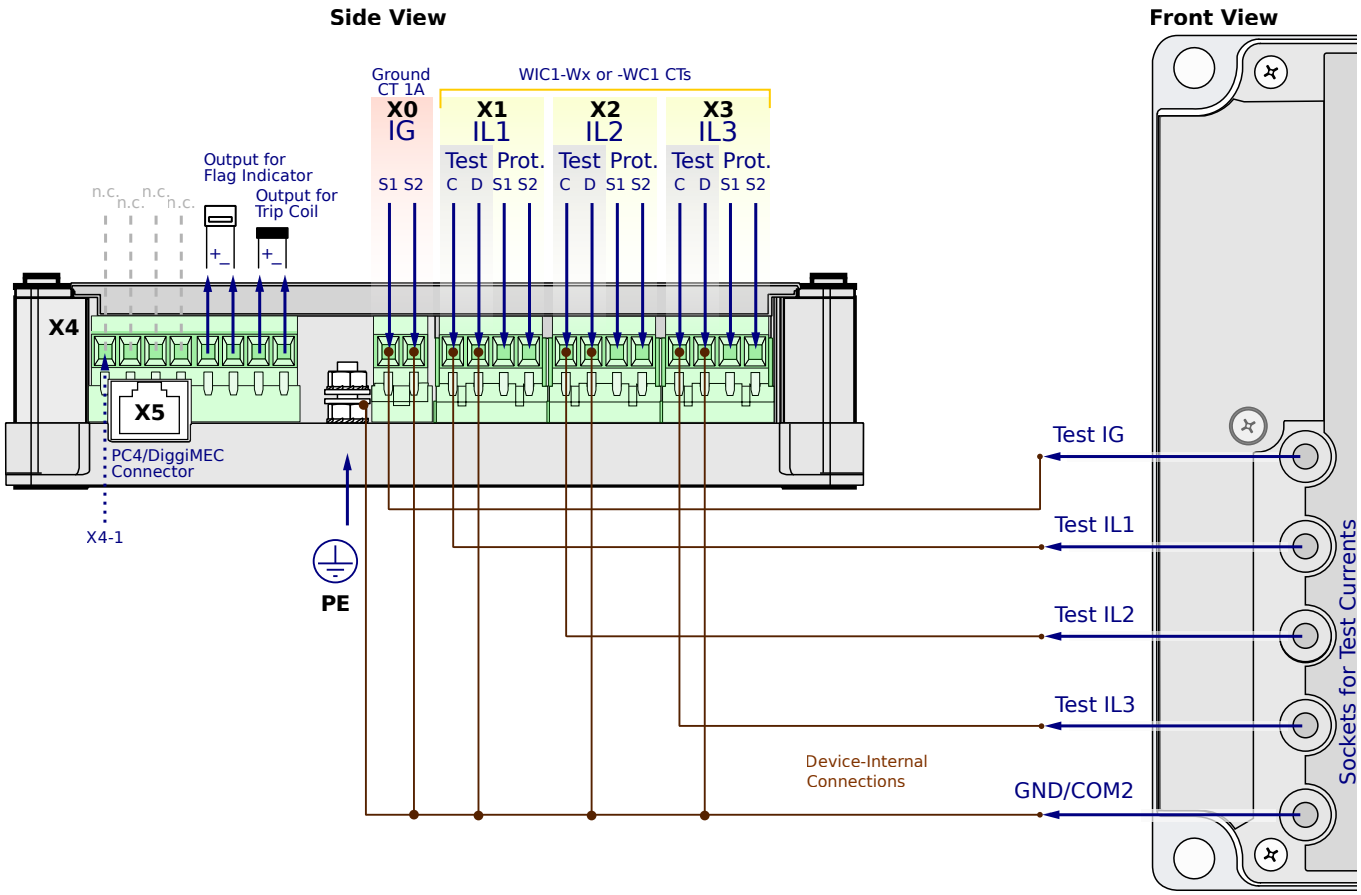


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2SAH

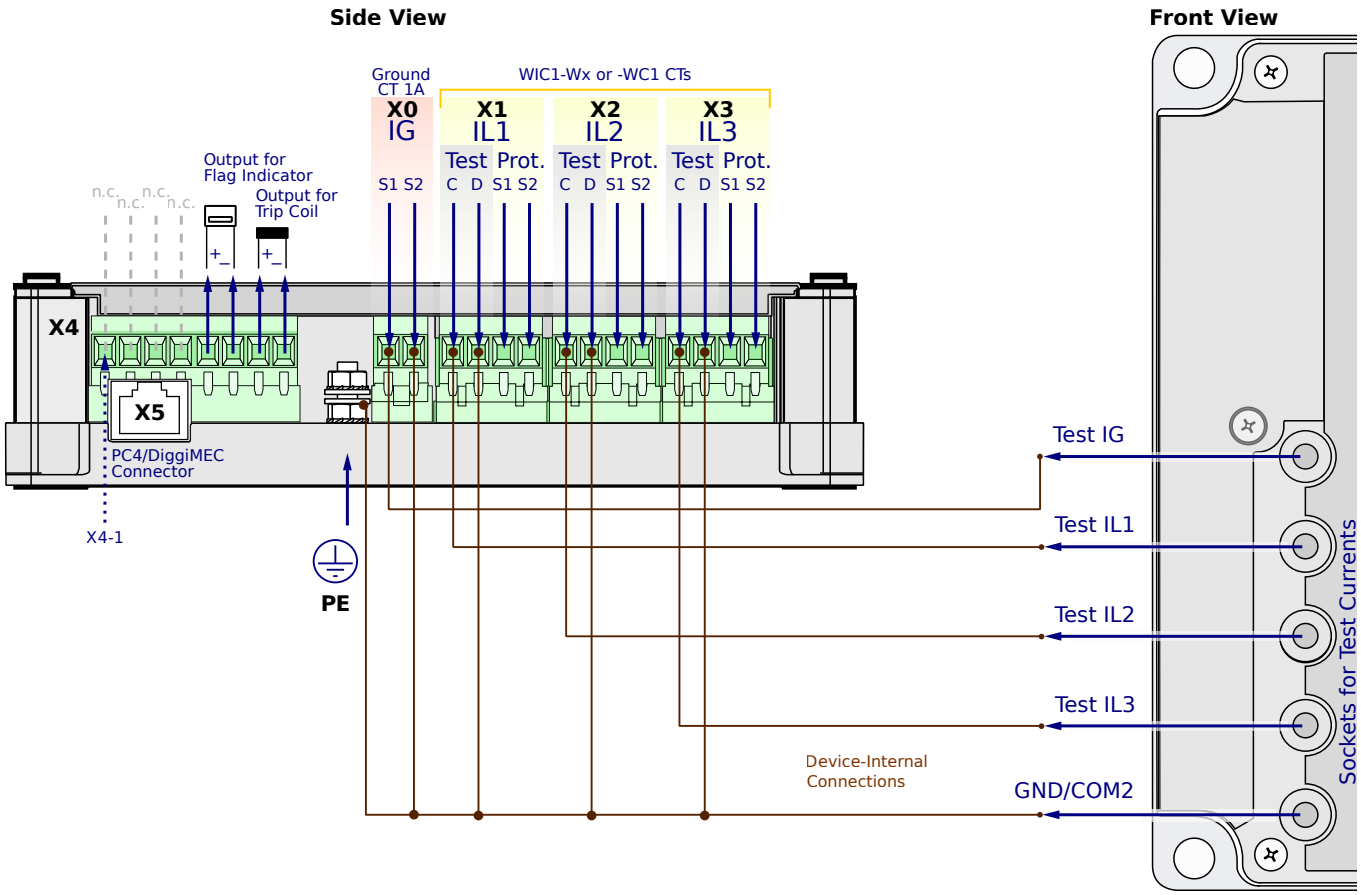


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2AA0

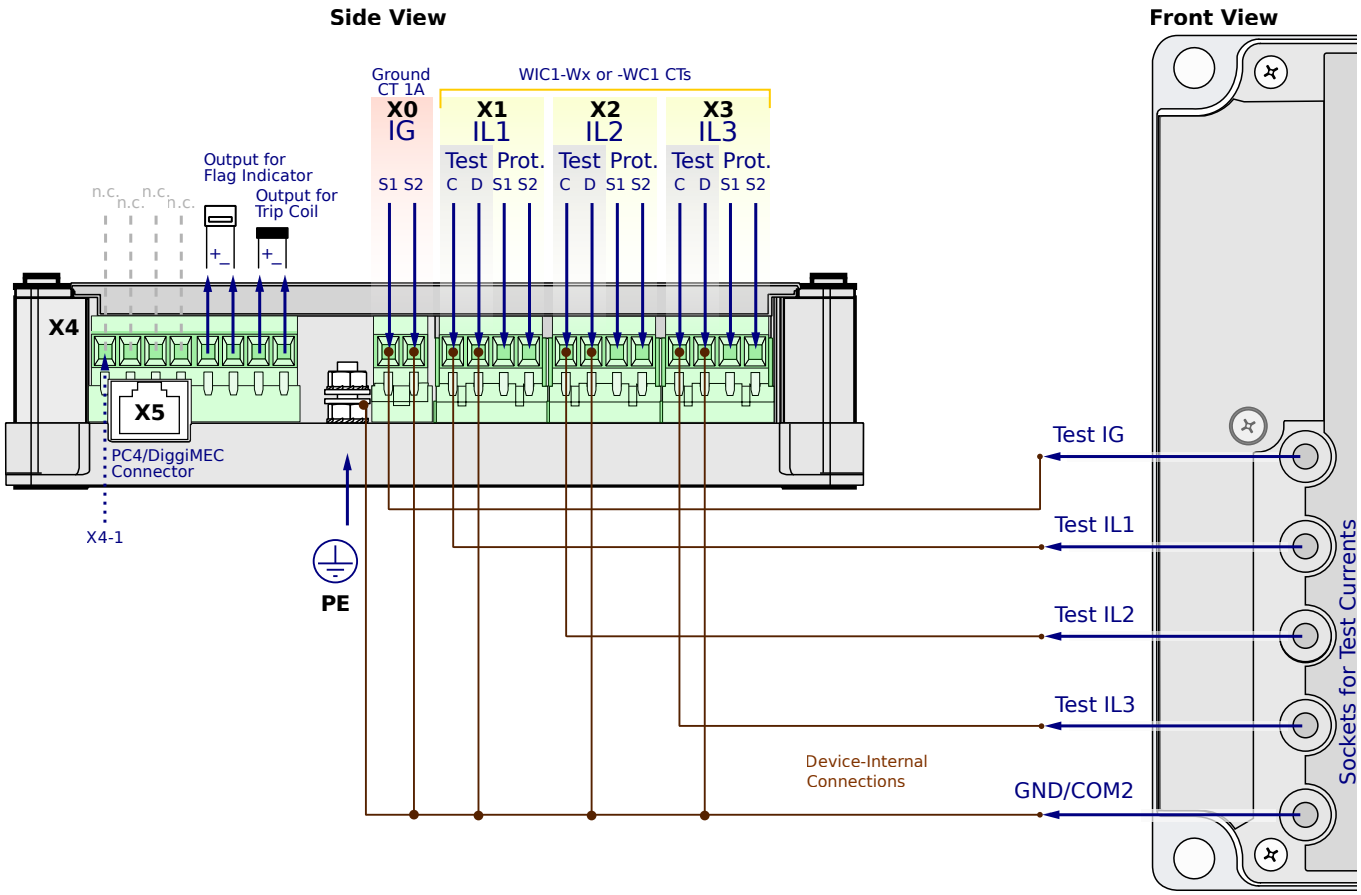


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2AAH

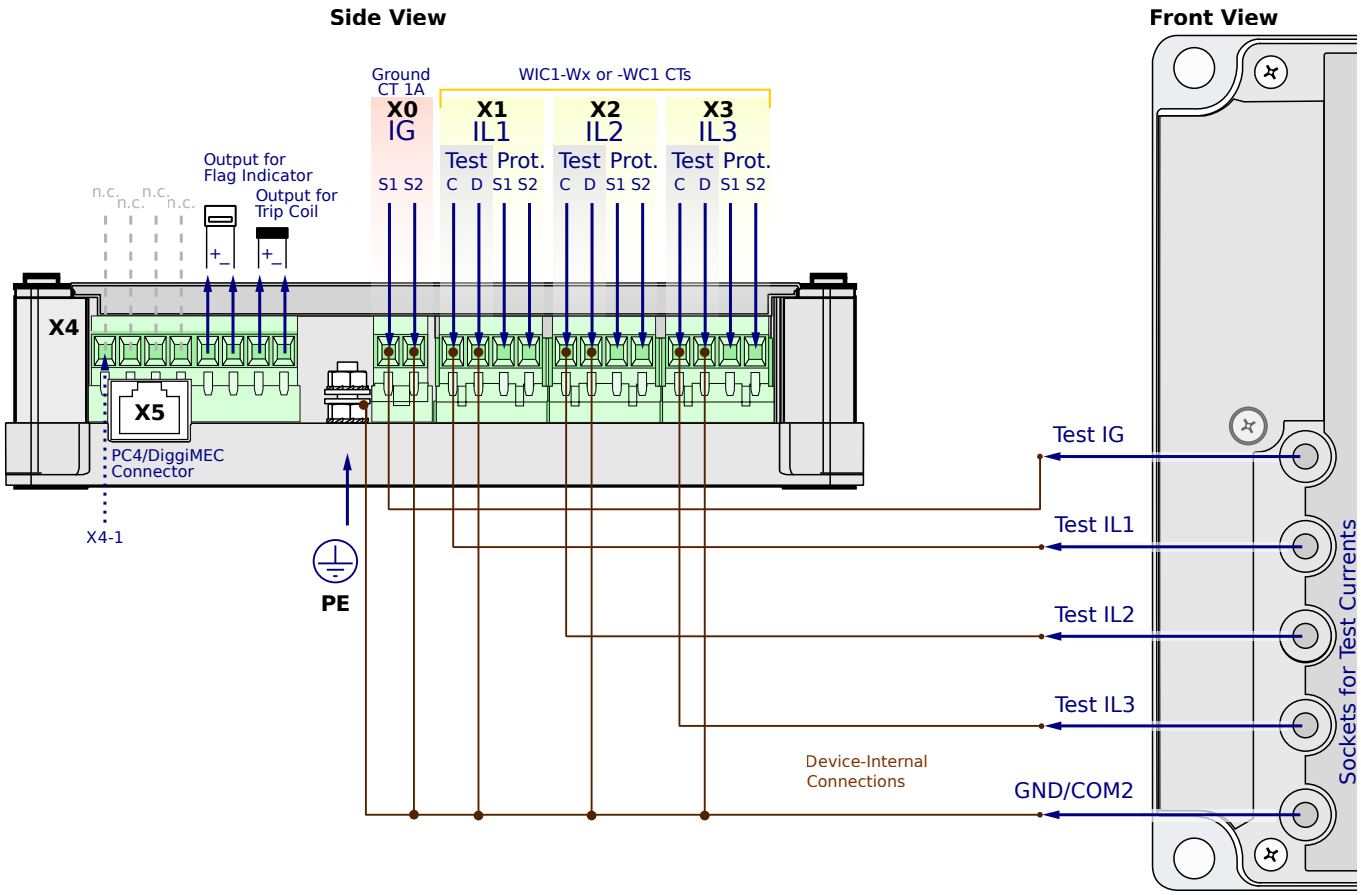


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2PA0

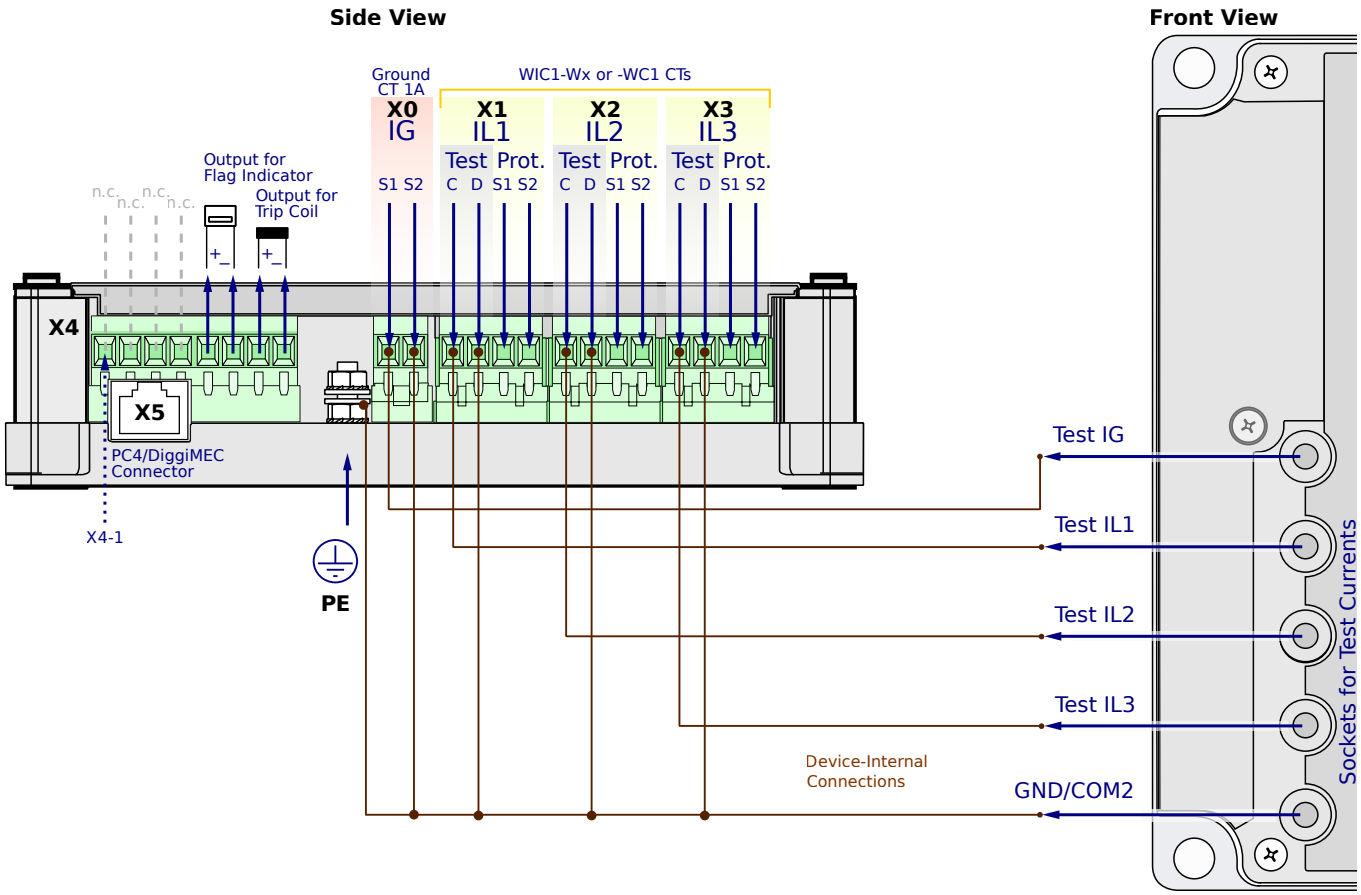


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NN2PAH

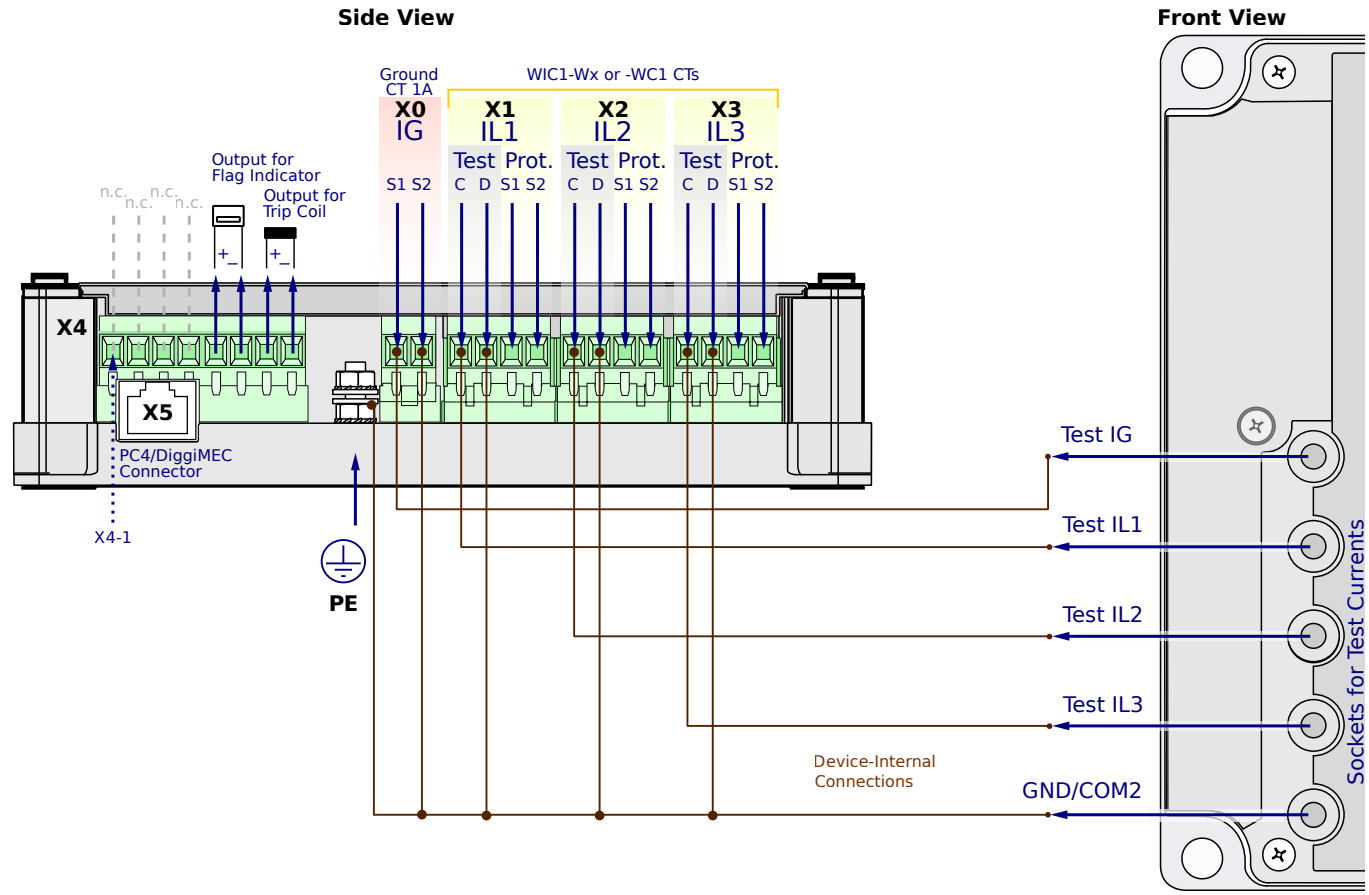


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0SA0

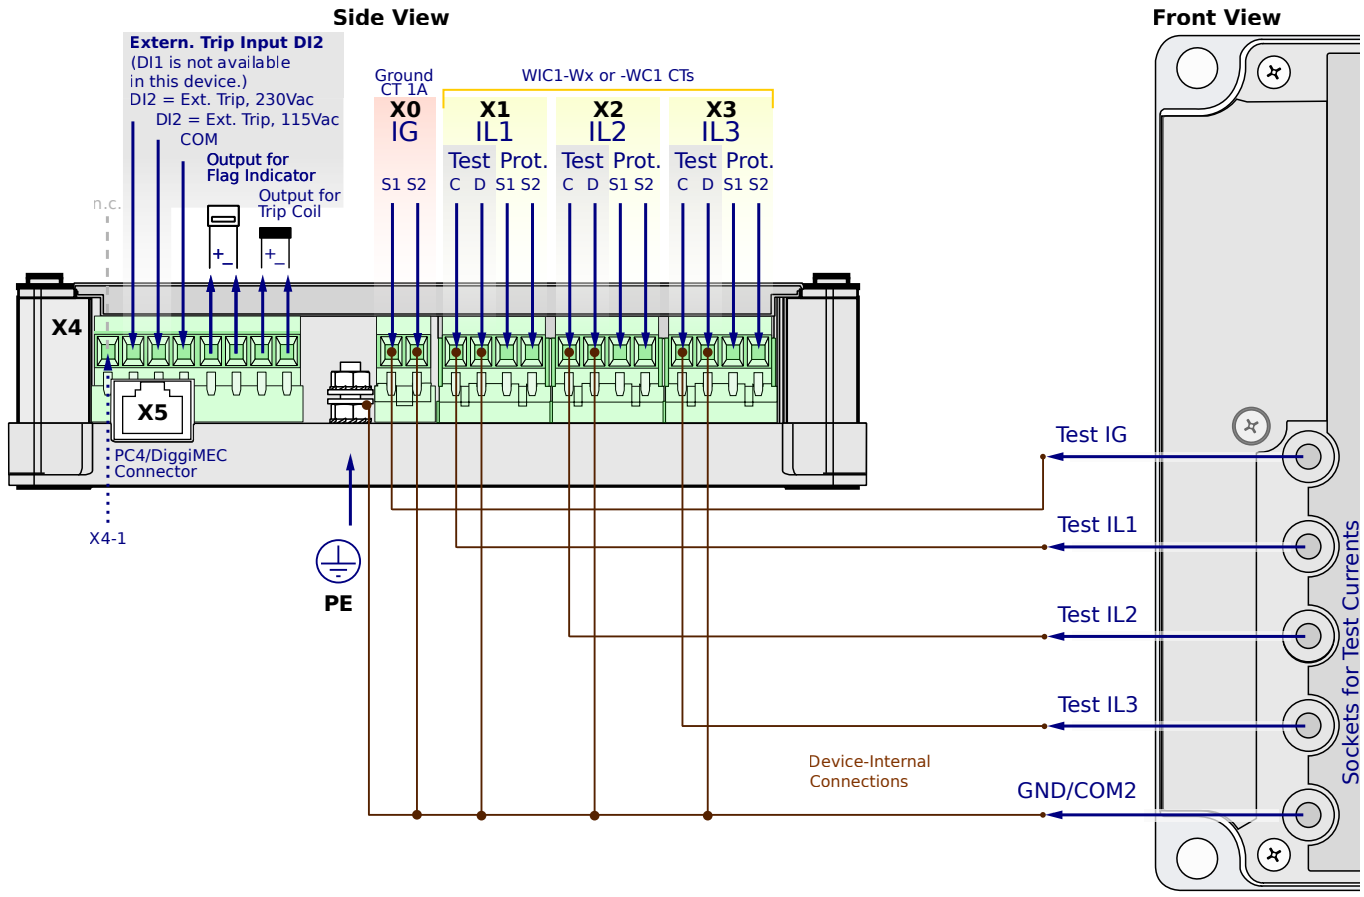


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0SAH

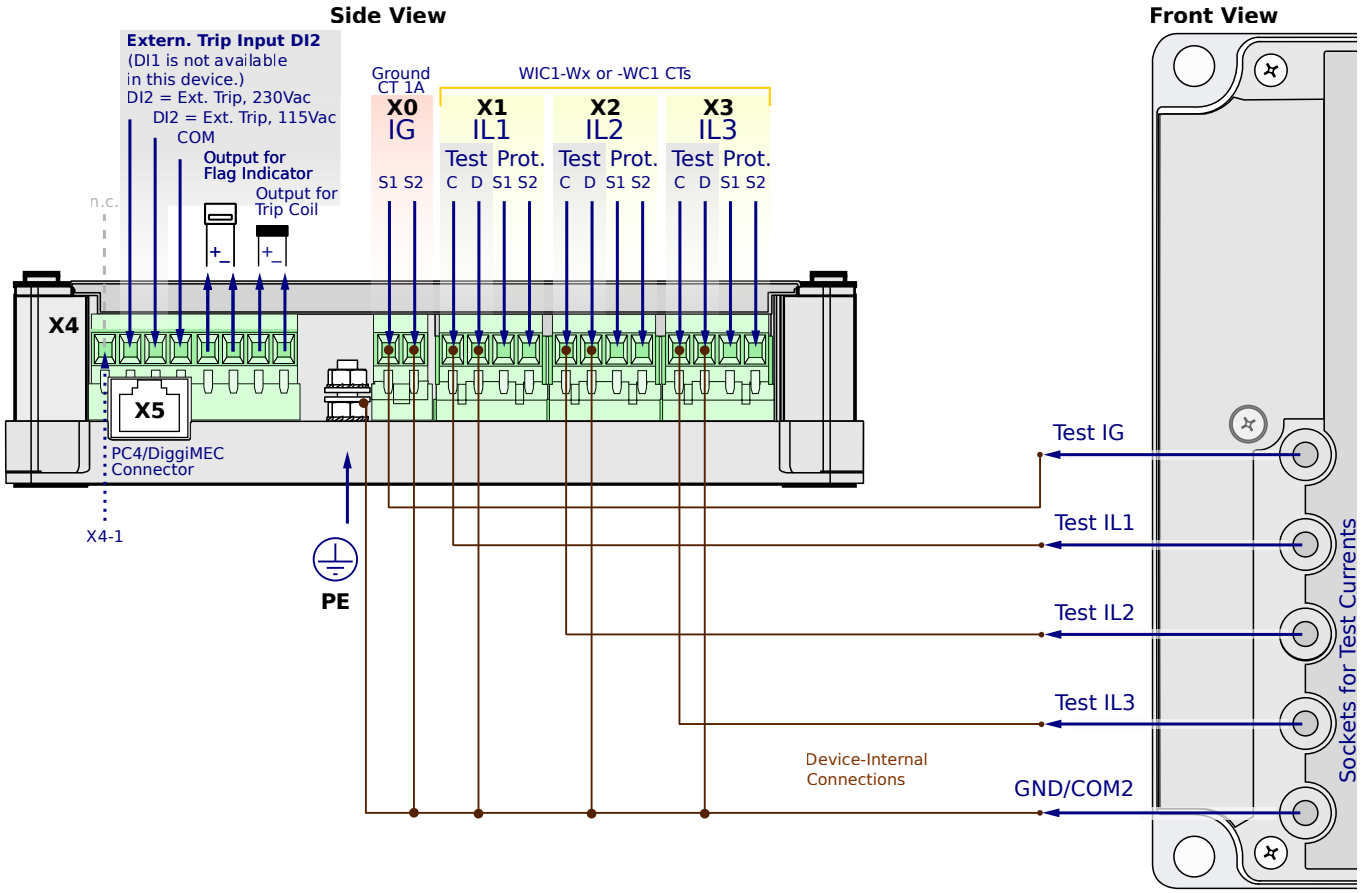


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0AA0

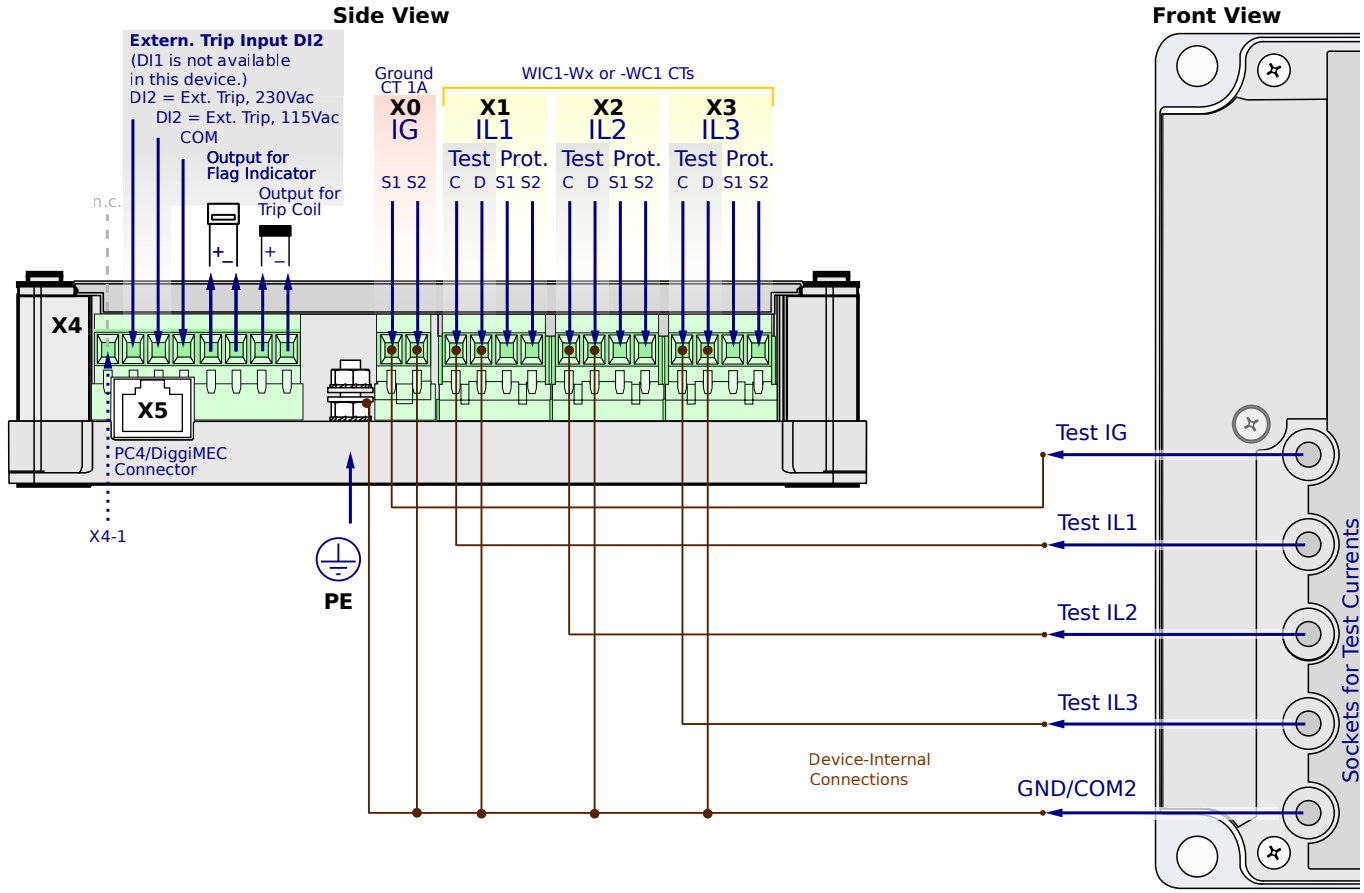


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0AAH

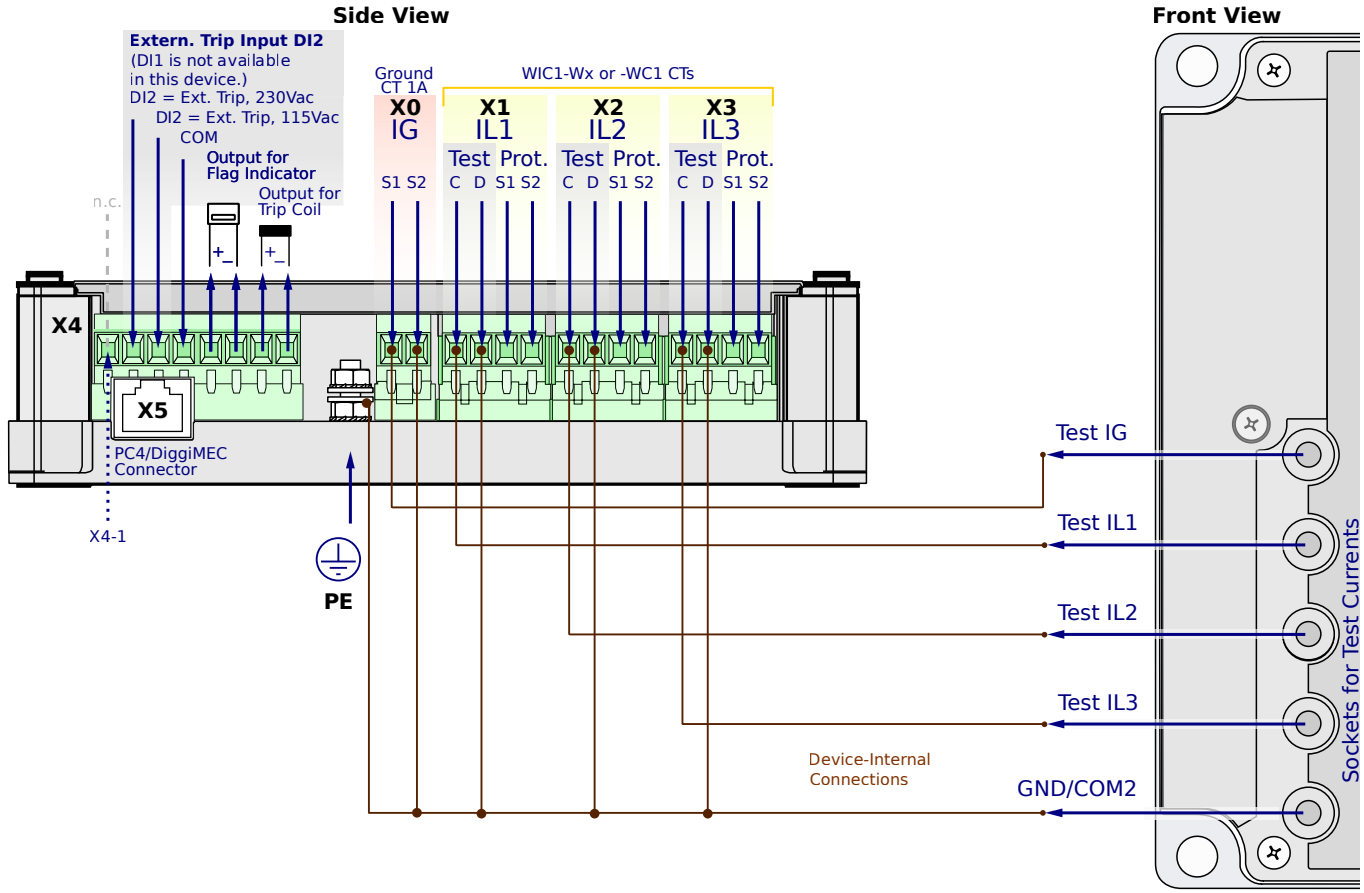


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0PA0

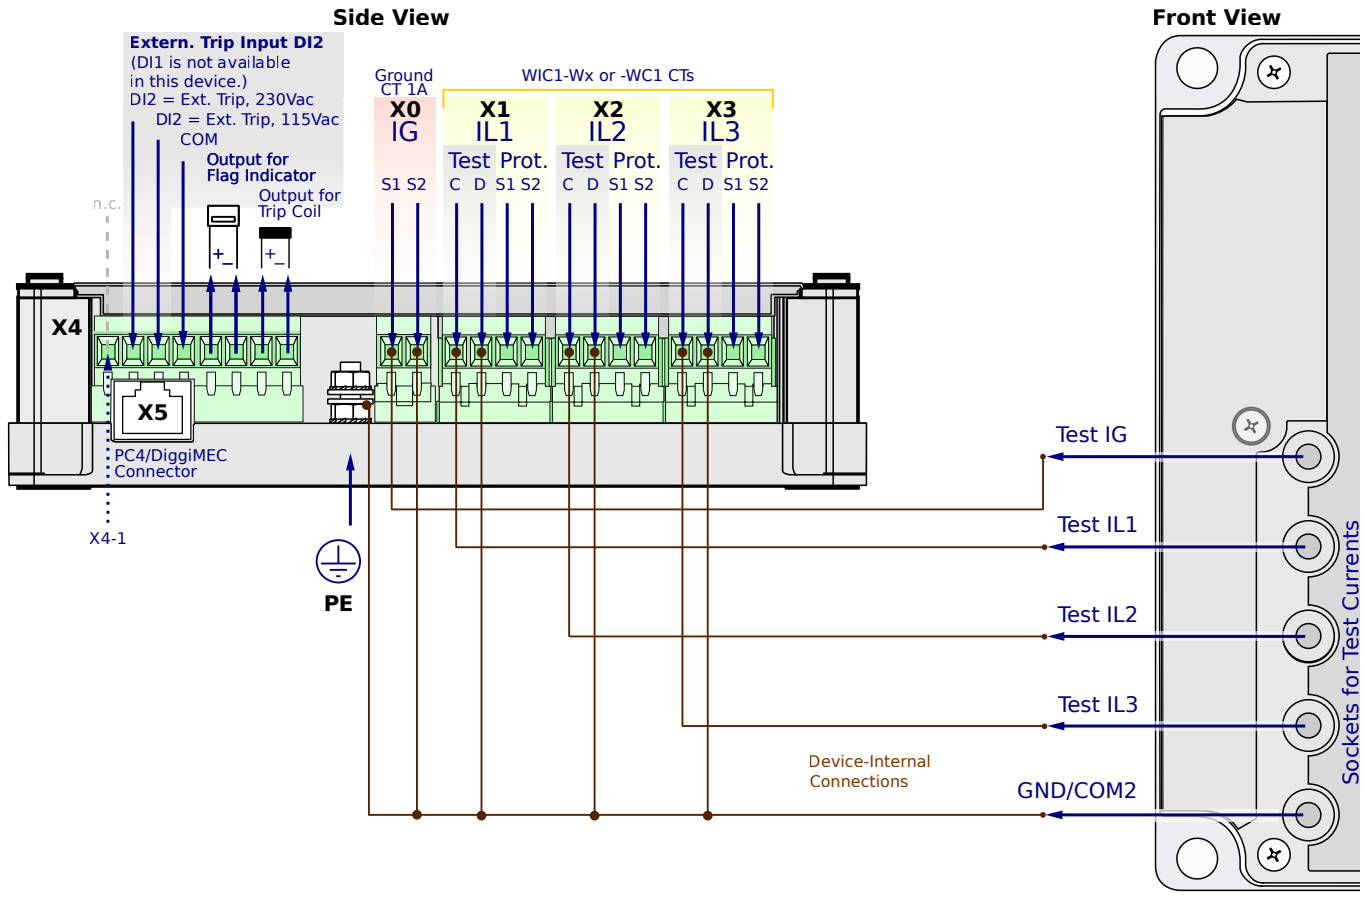


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF0PAH

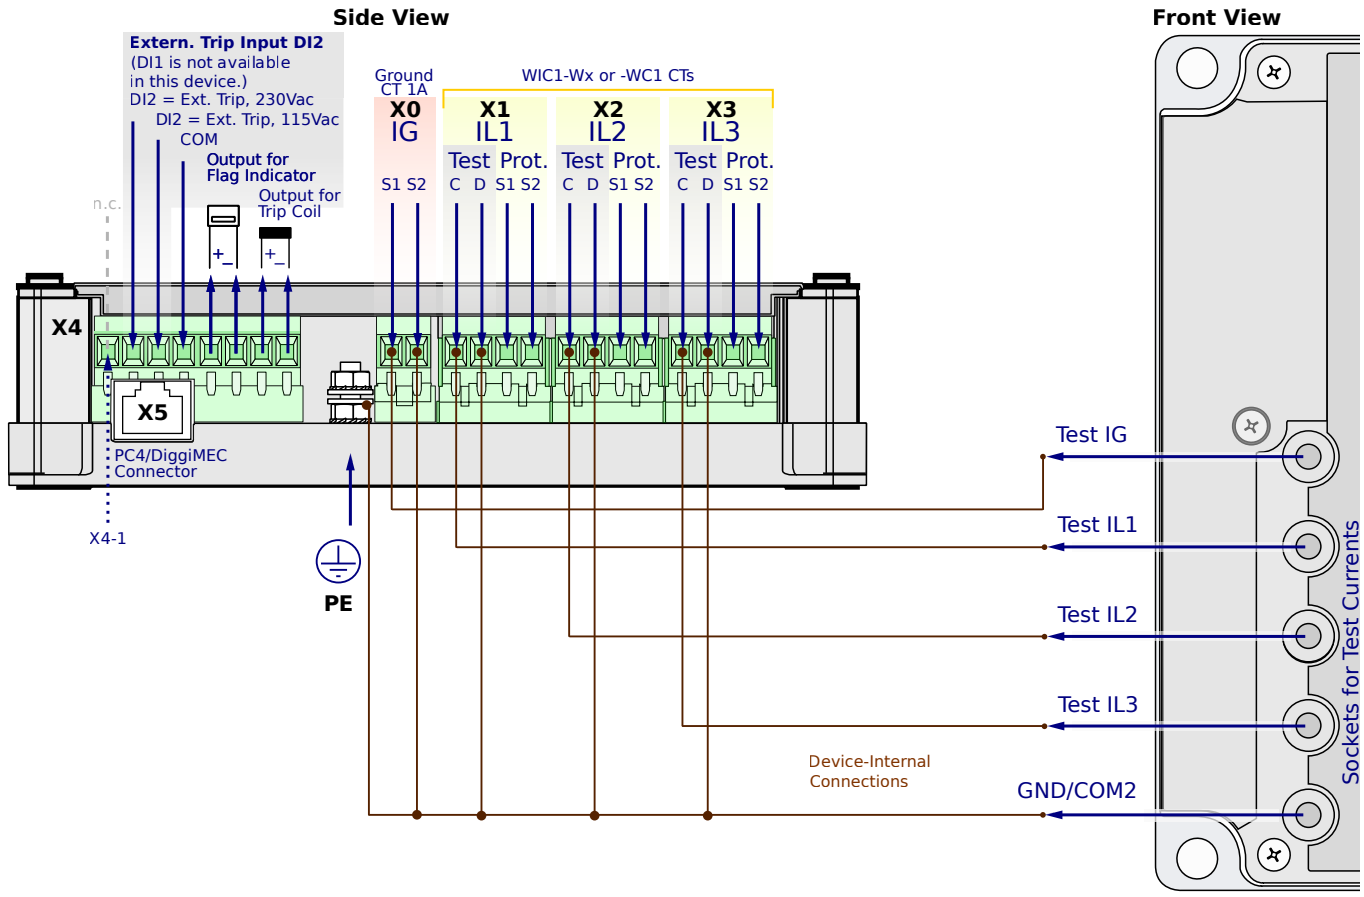


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1SA0

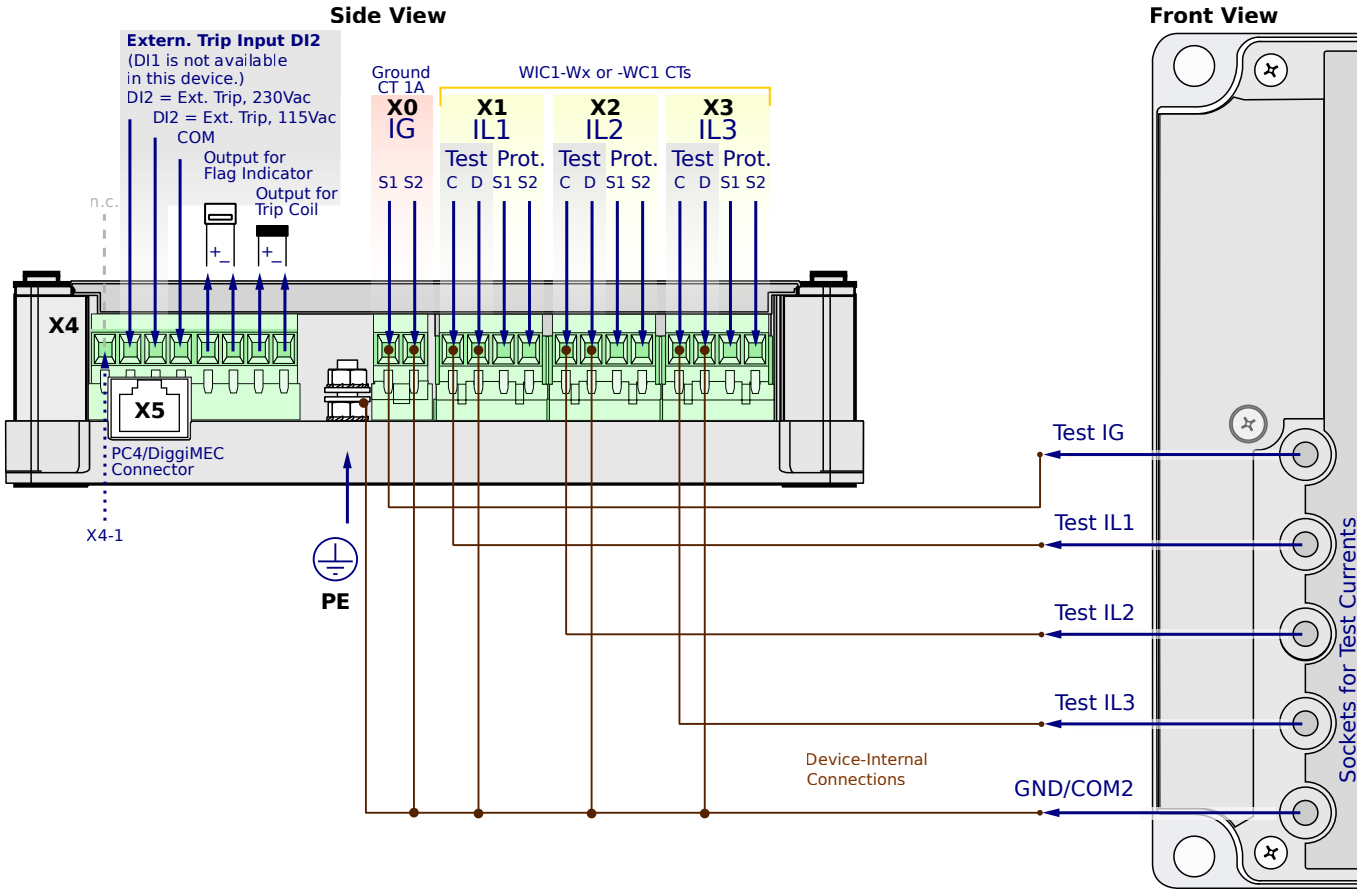


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1SAH

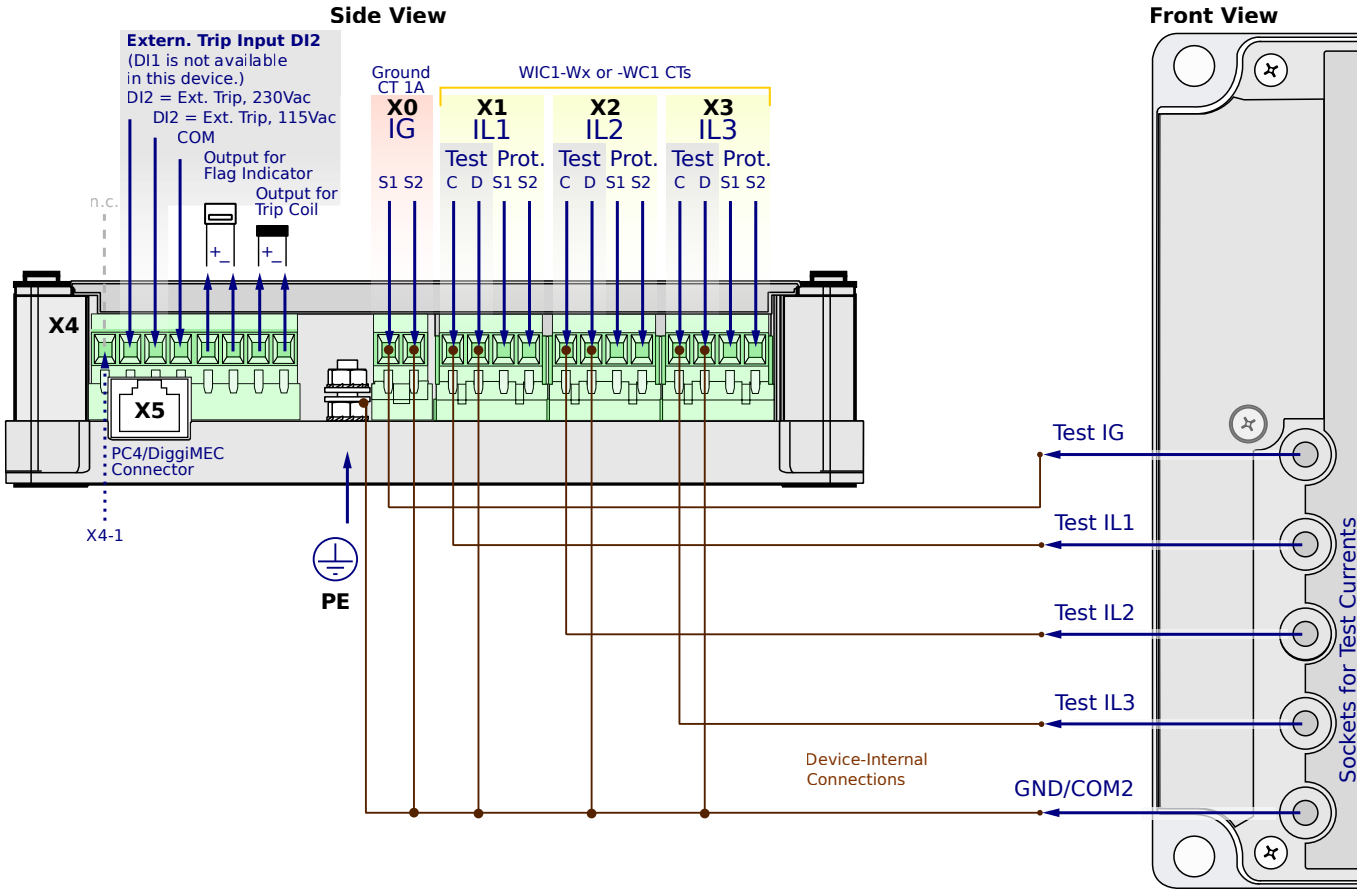


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1AA0

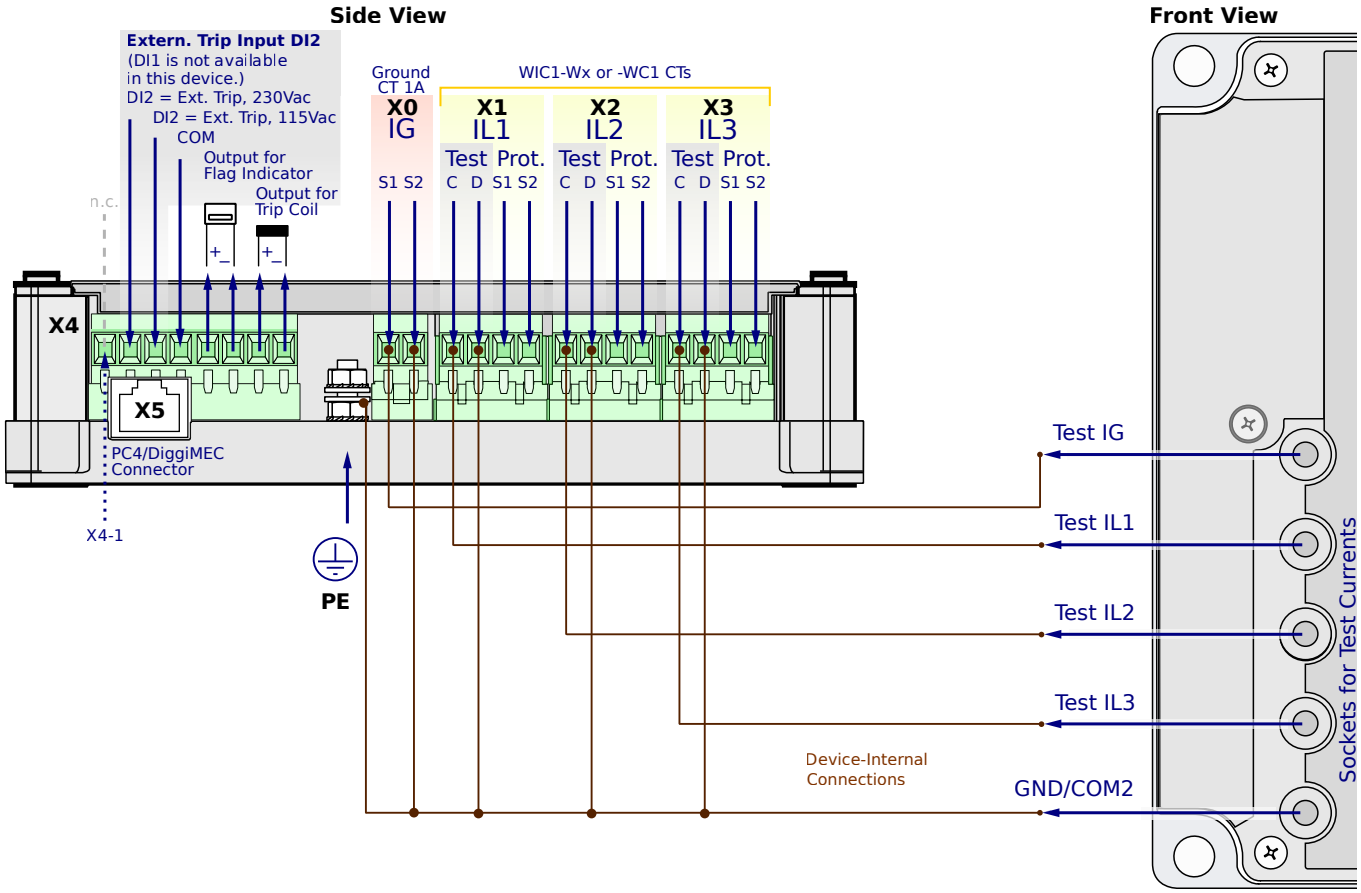


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1AAH

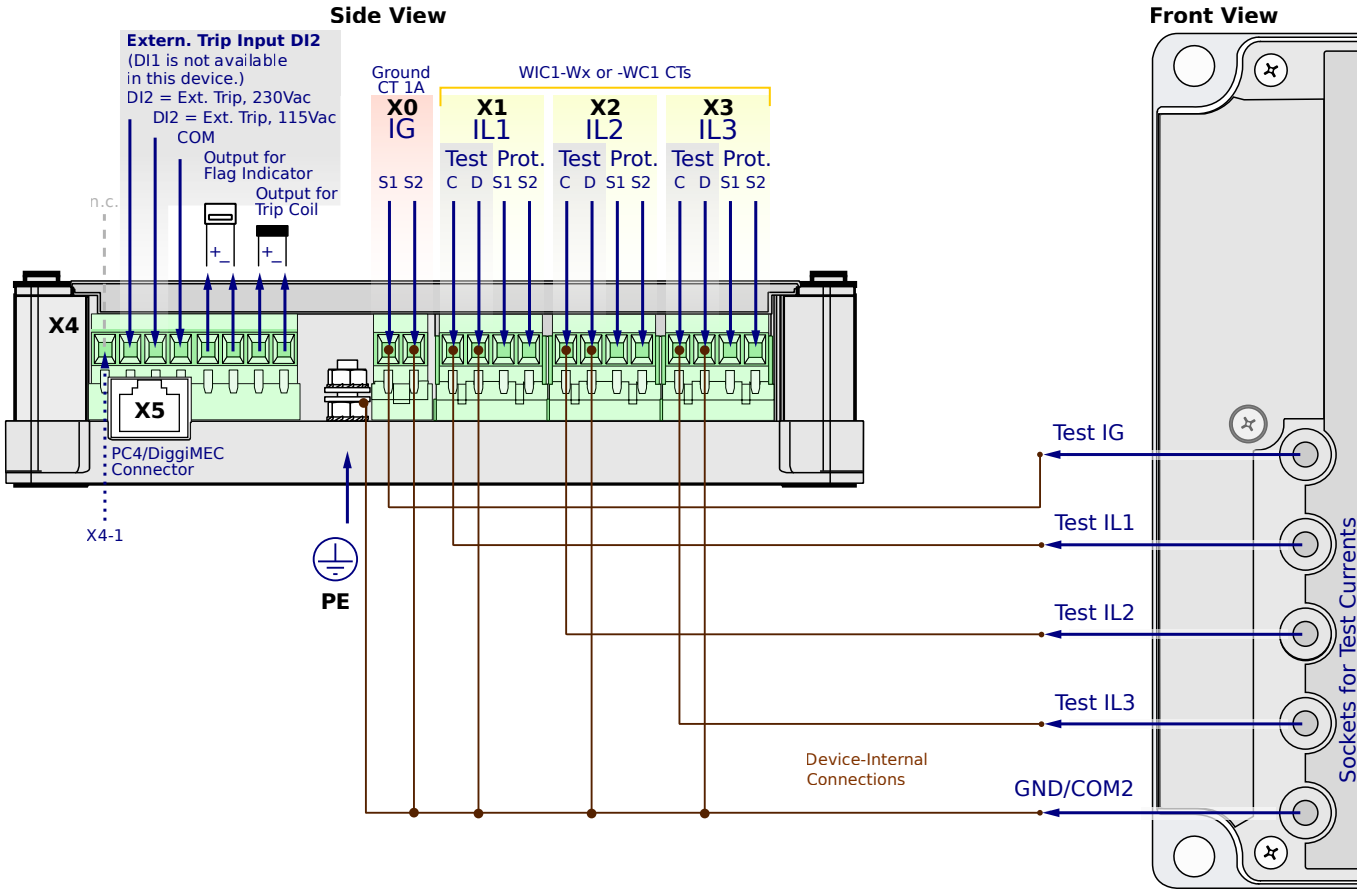


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1PA0

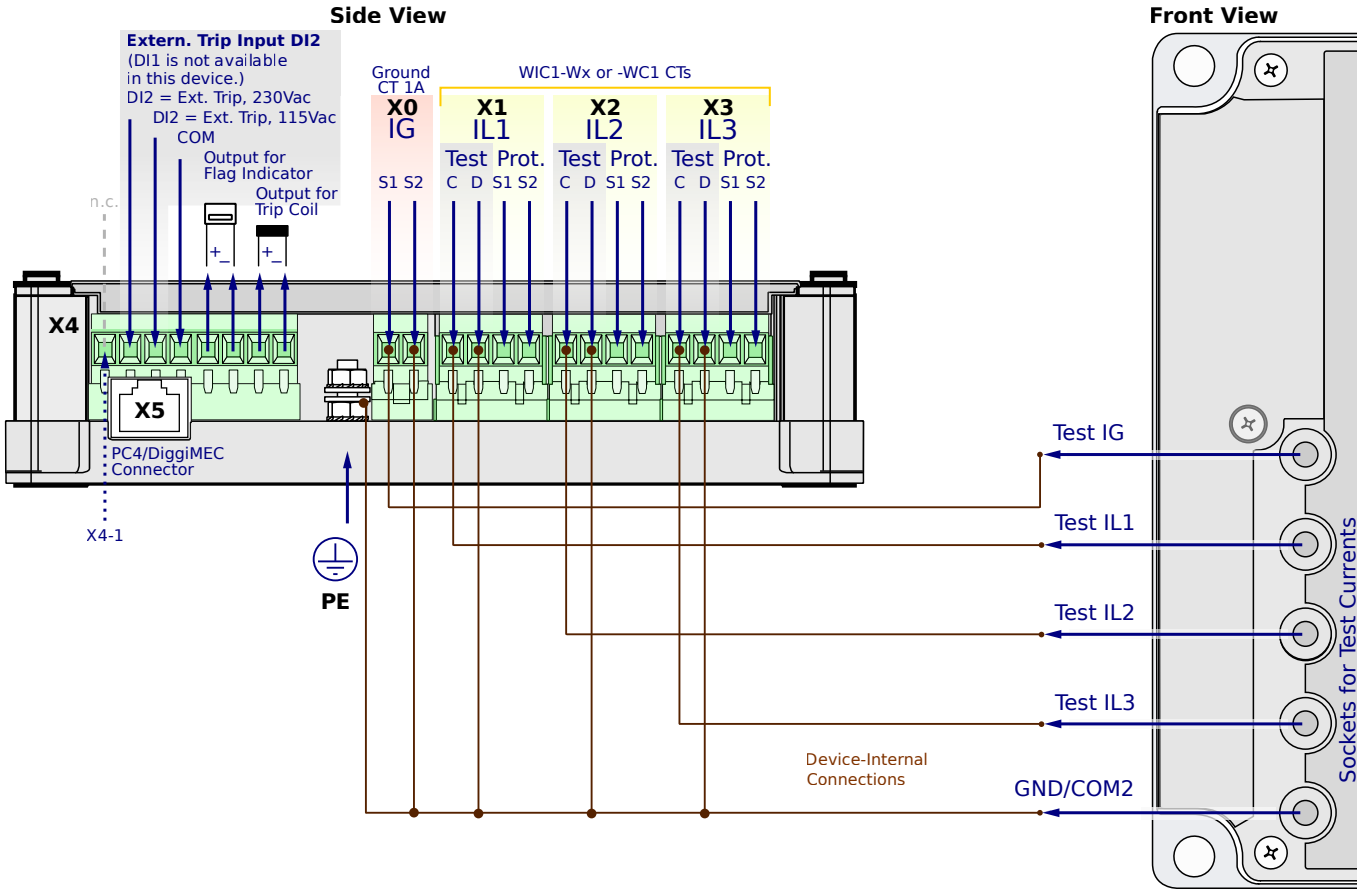


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF1PAH

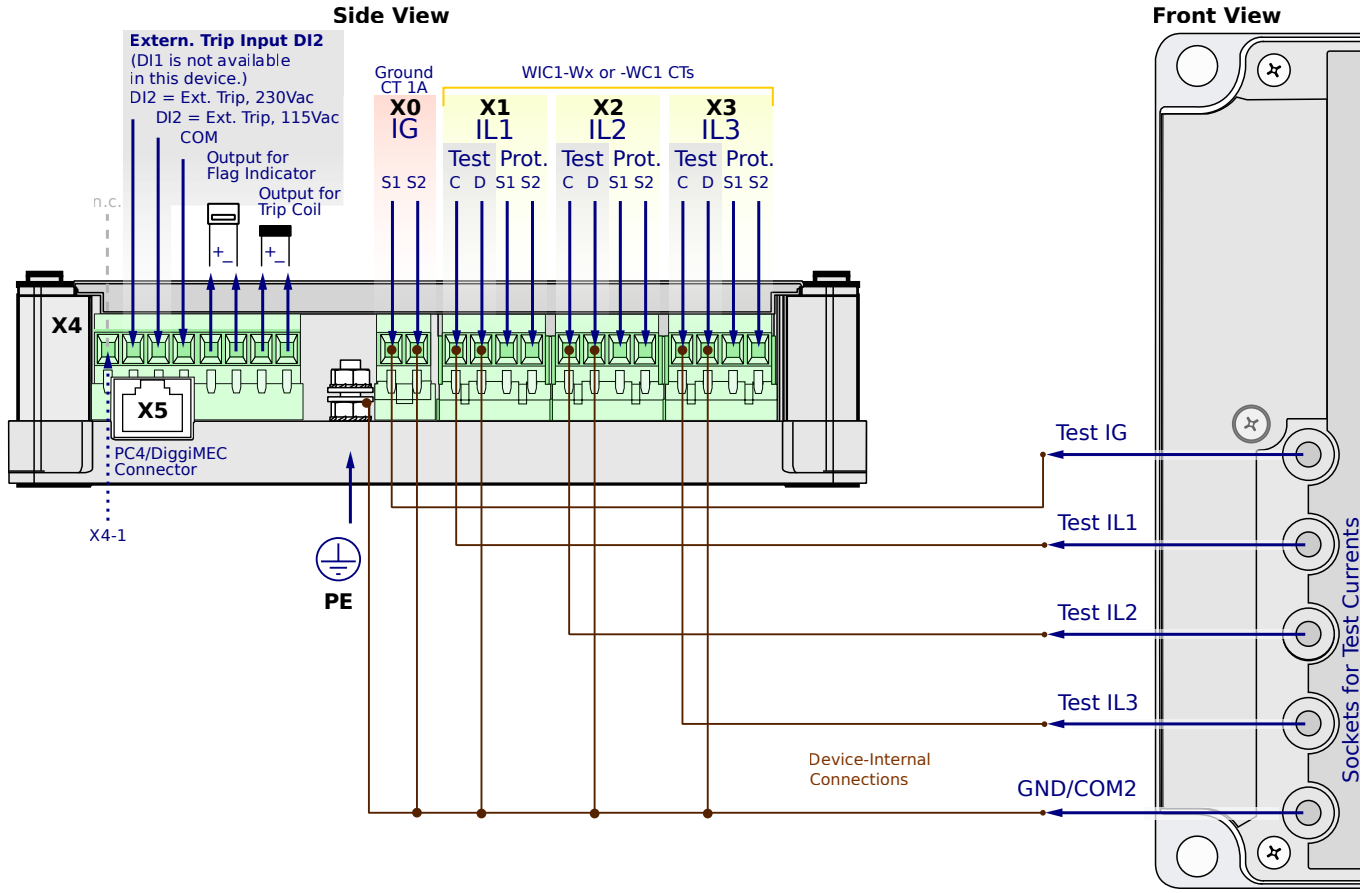


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2SA0

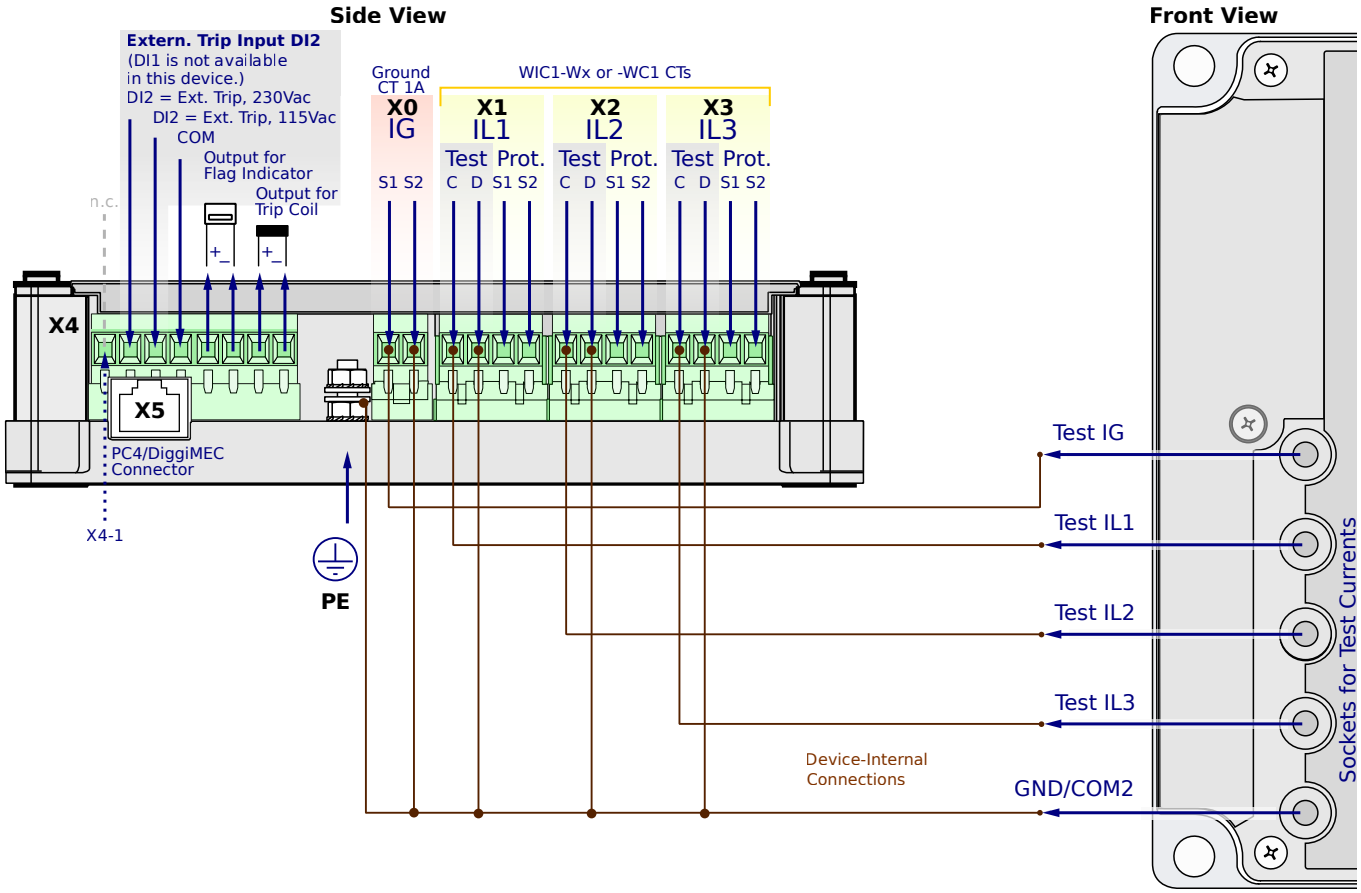


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2SAH

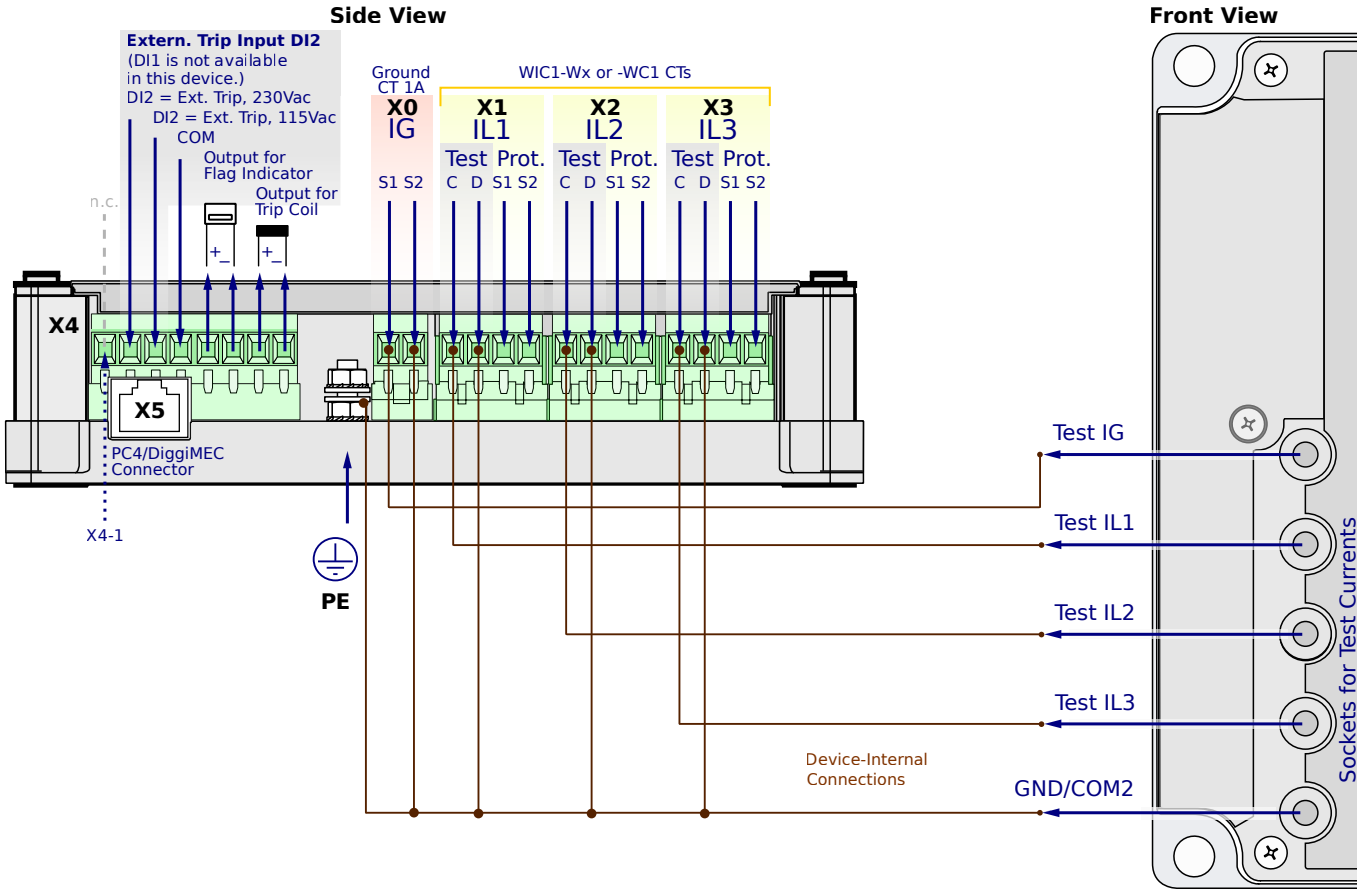


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2AA0

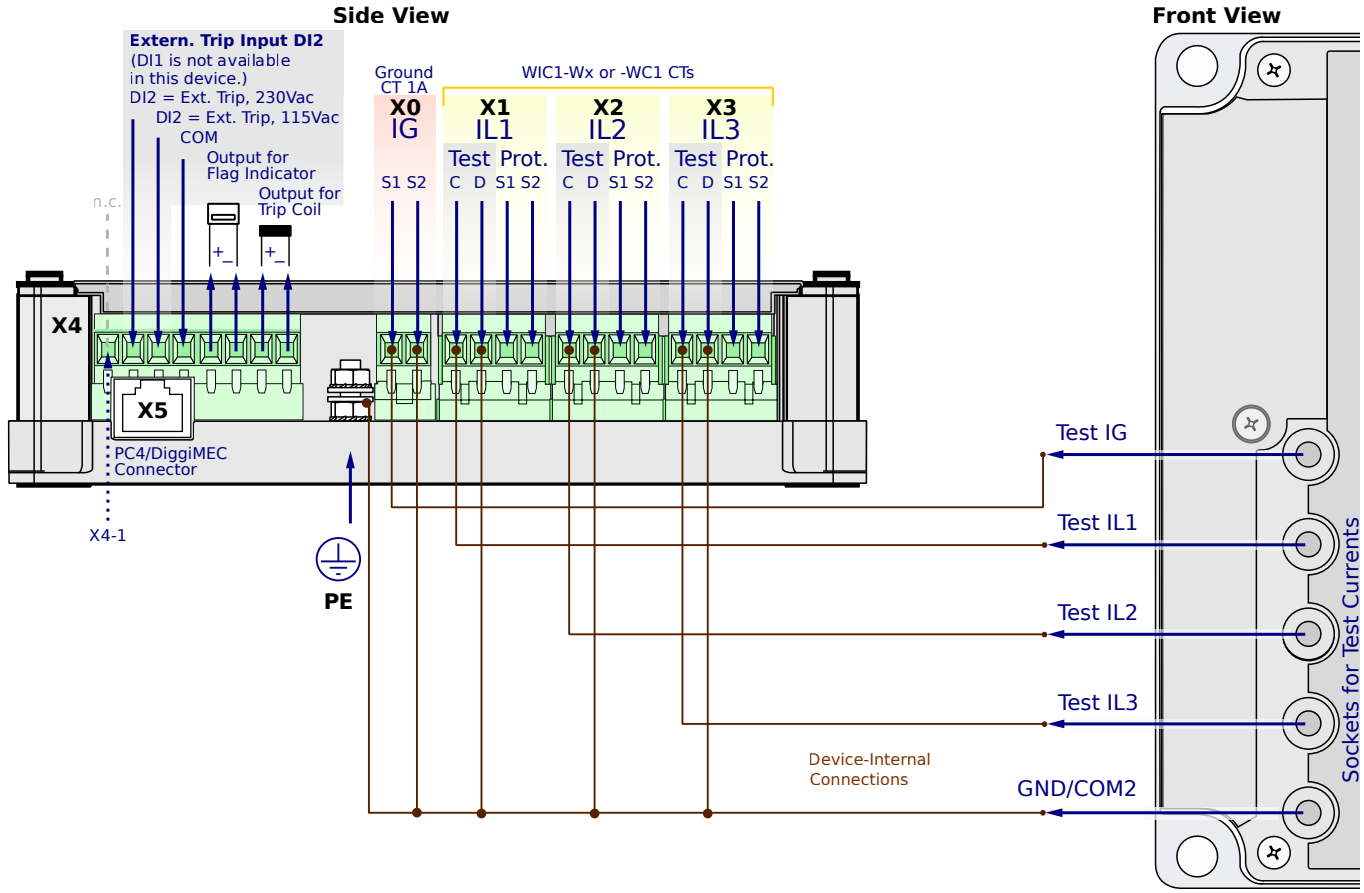


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2AAH

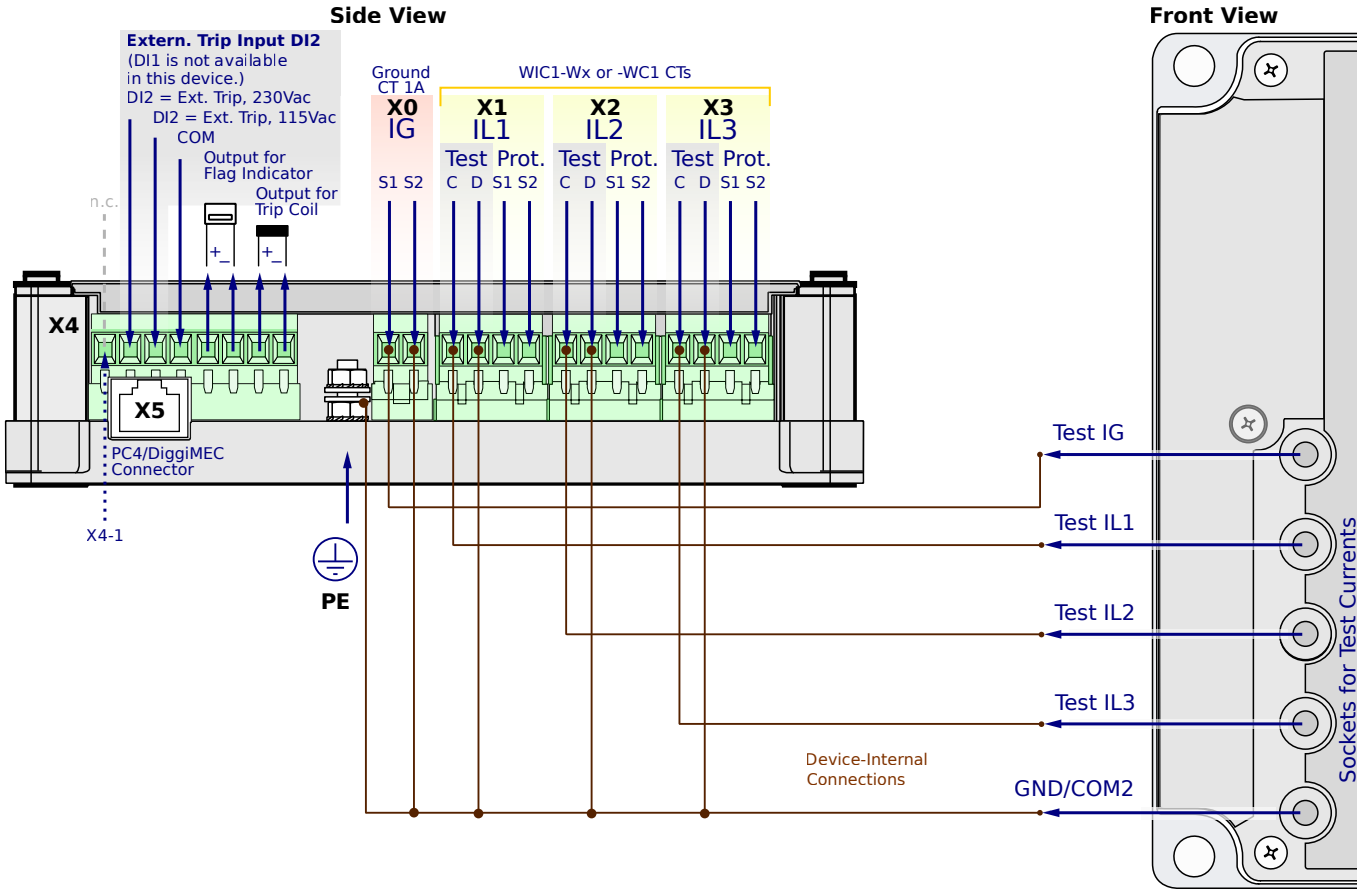


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2PA0

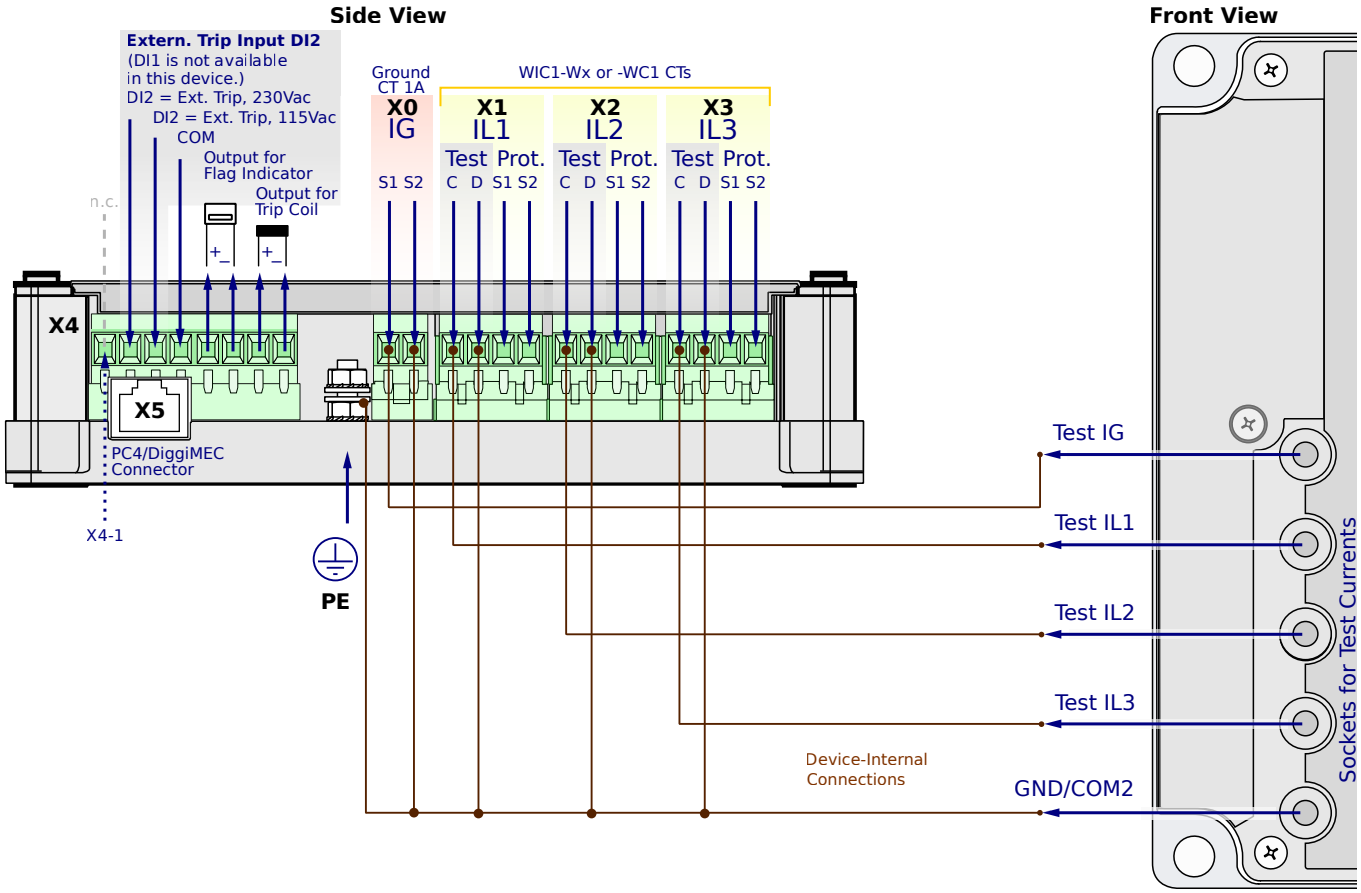


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NF2PAH

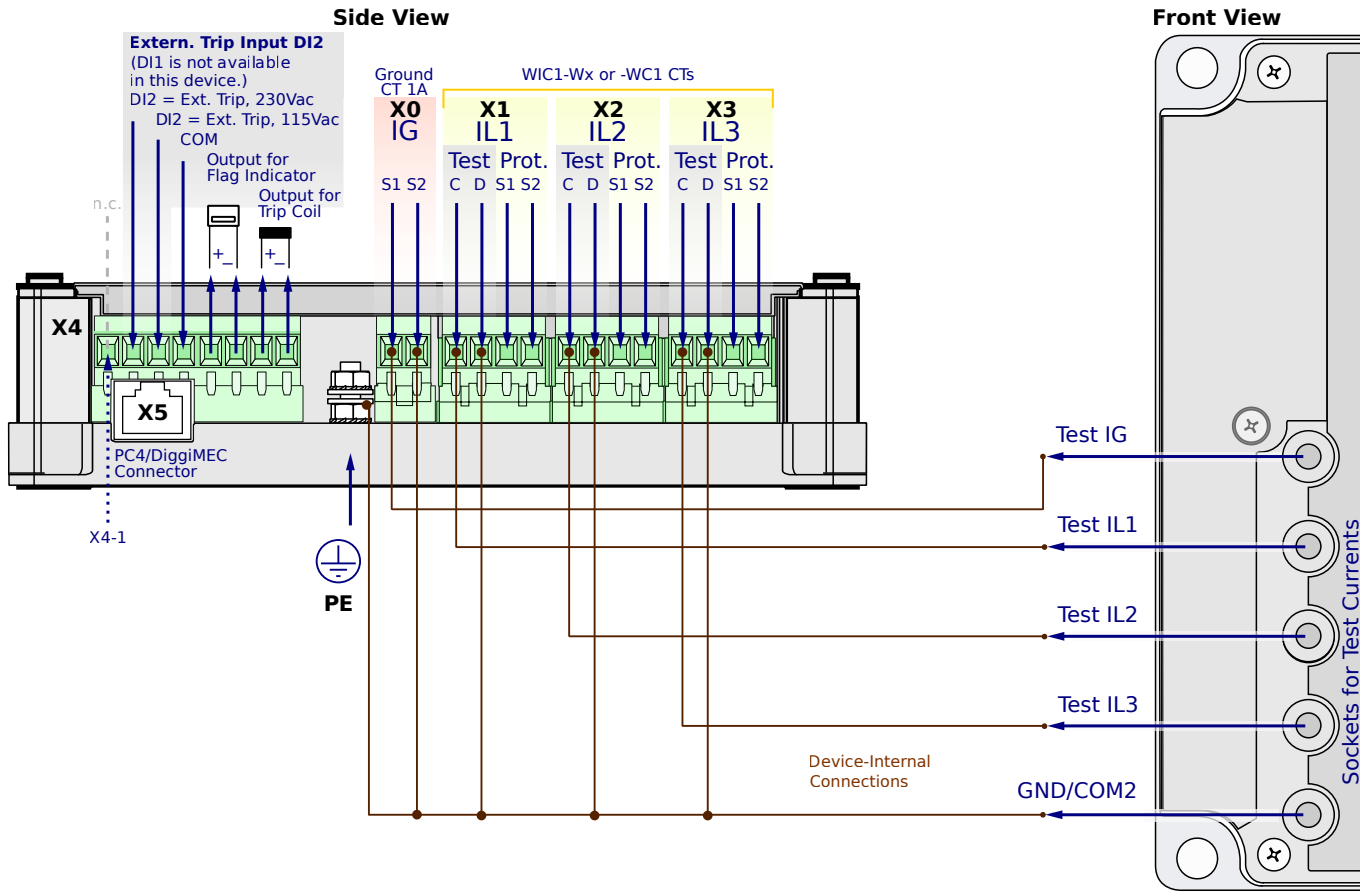


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0SA0

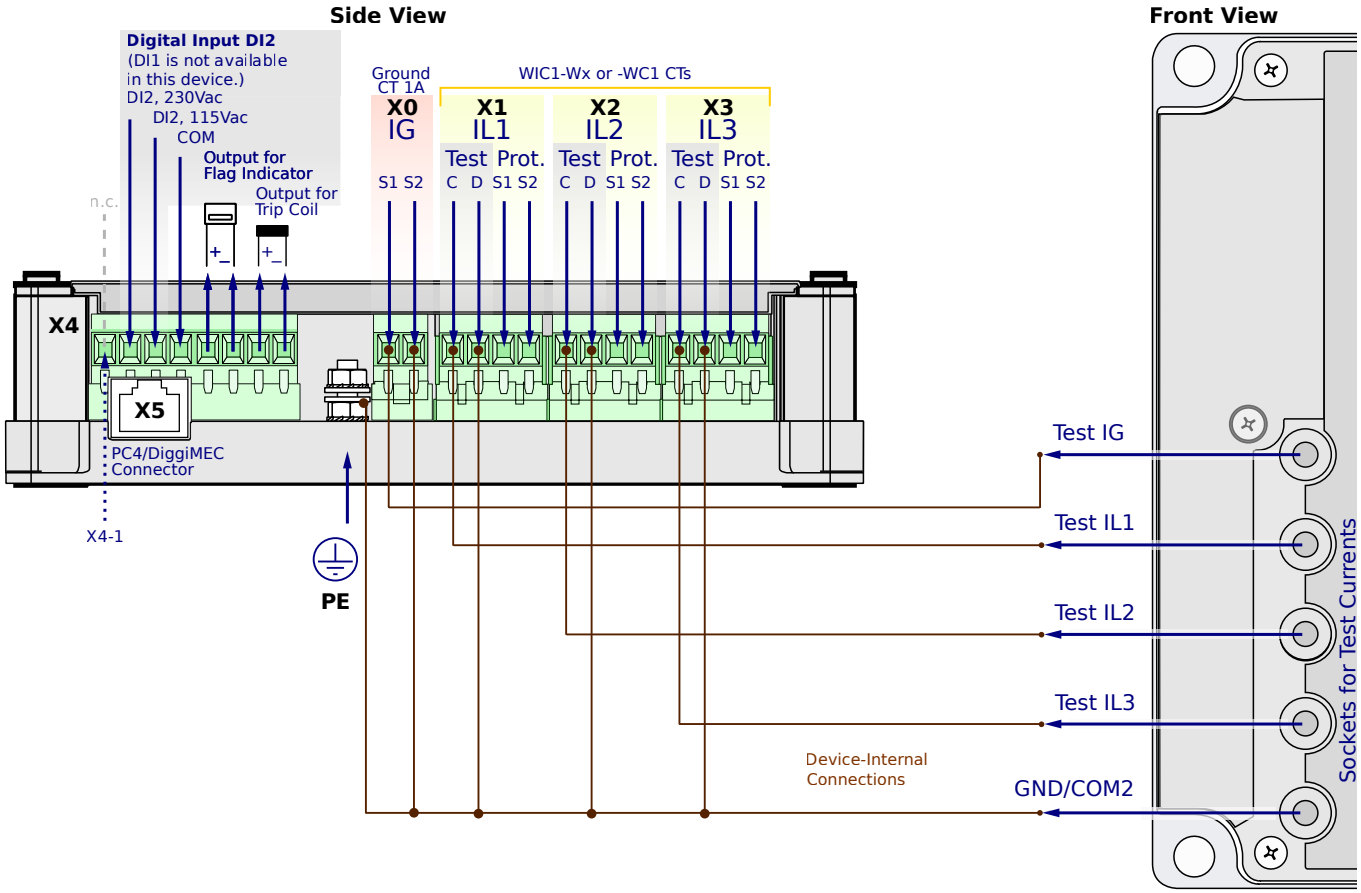


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0SAH

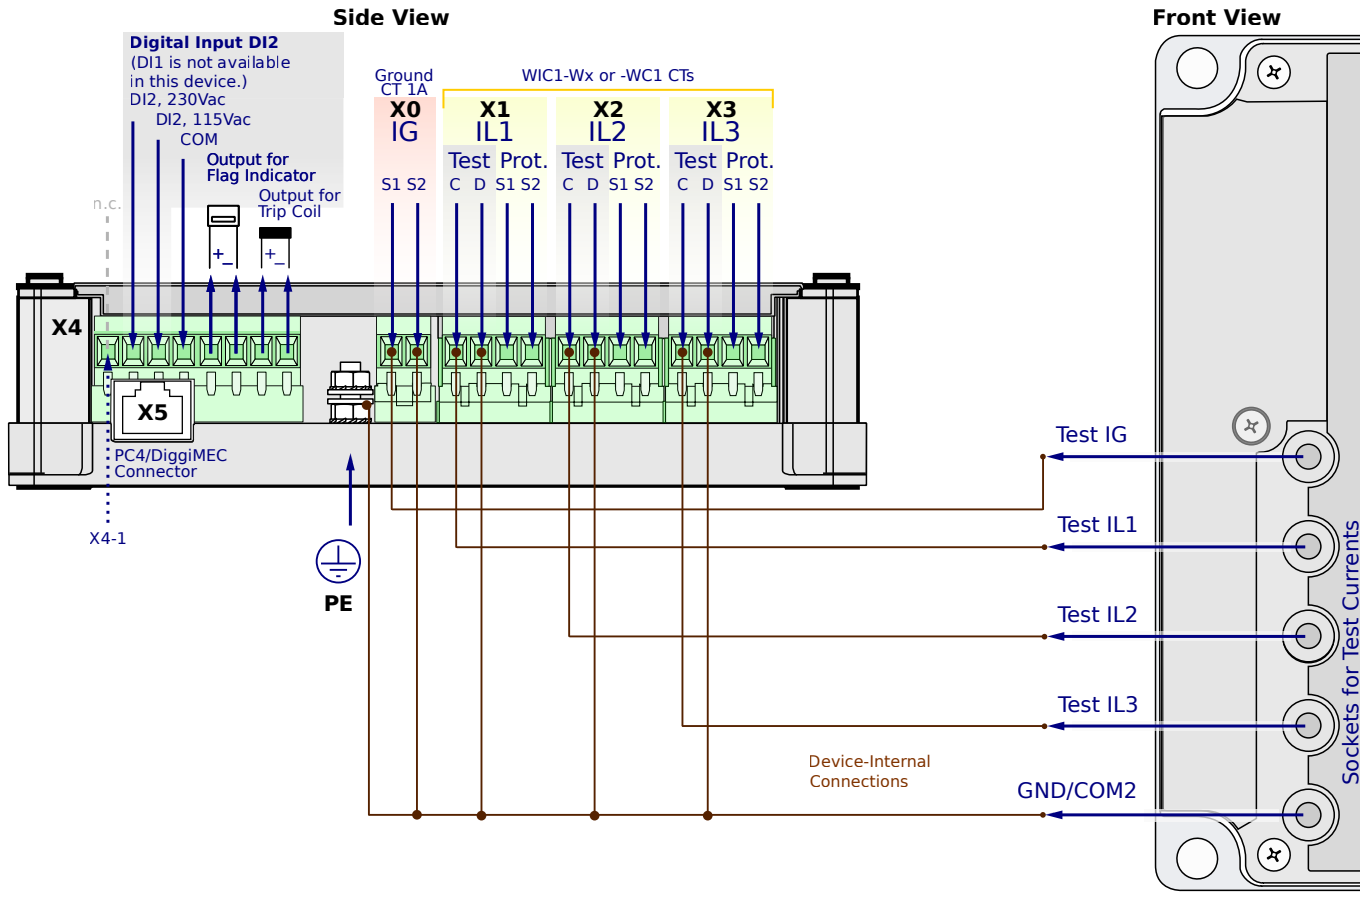


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0AA0

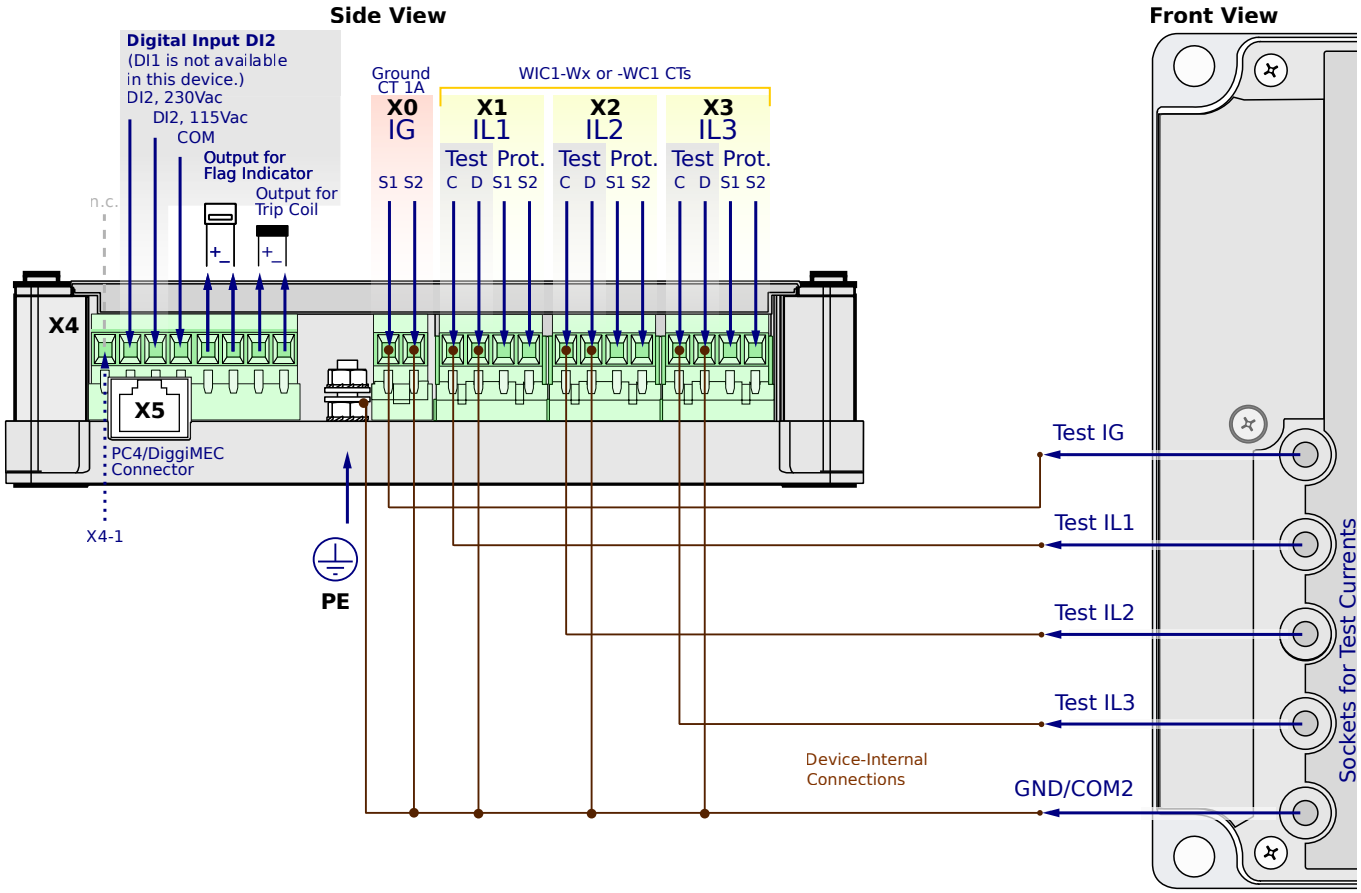


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0AAH

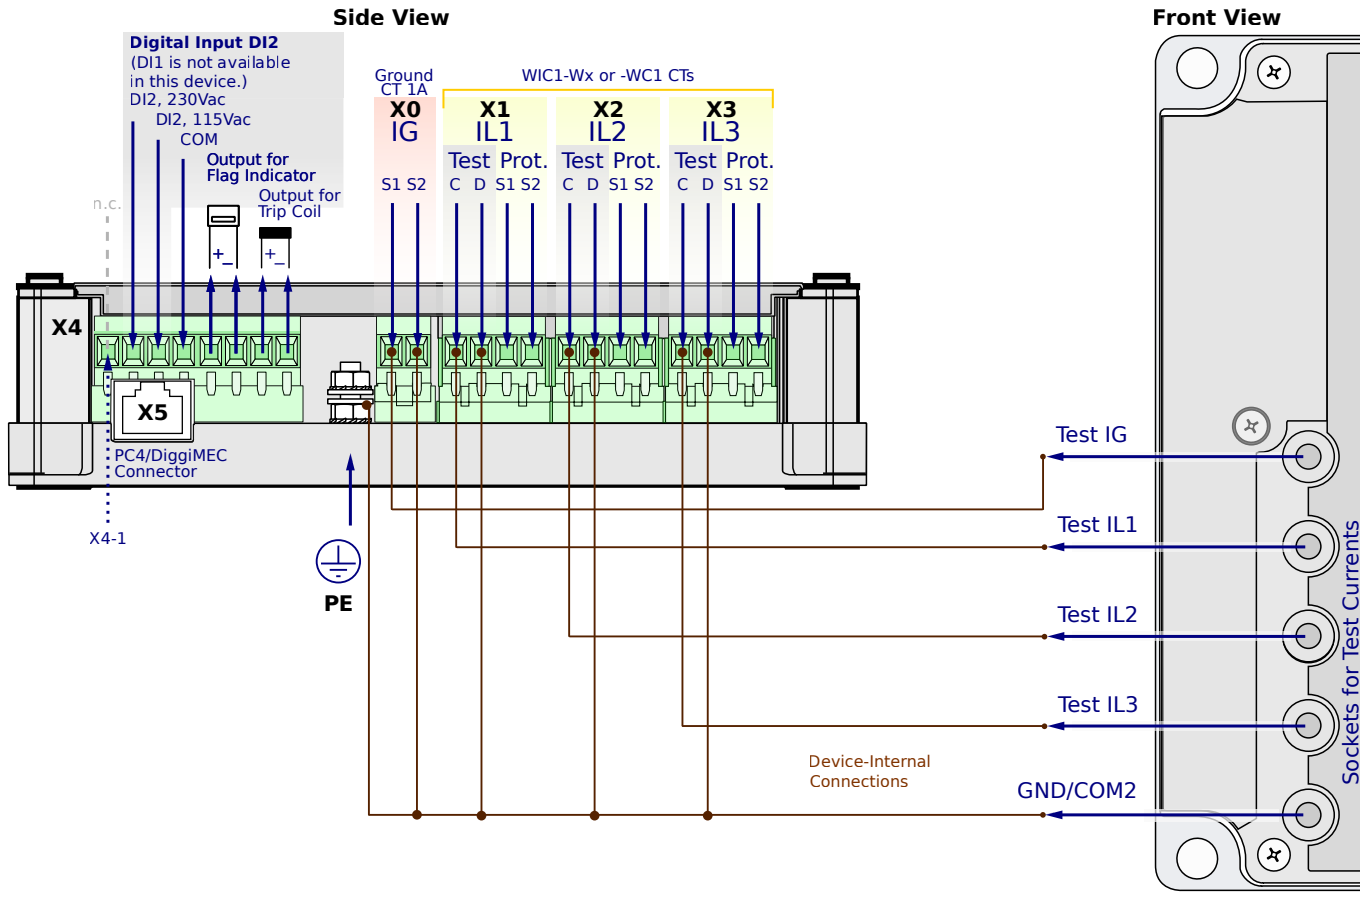


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0PA0

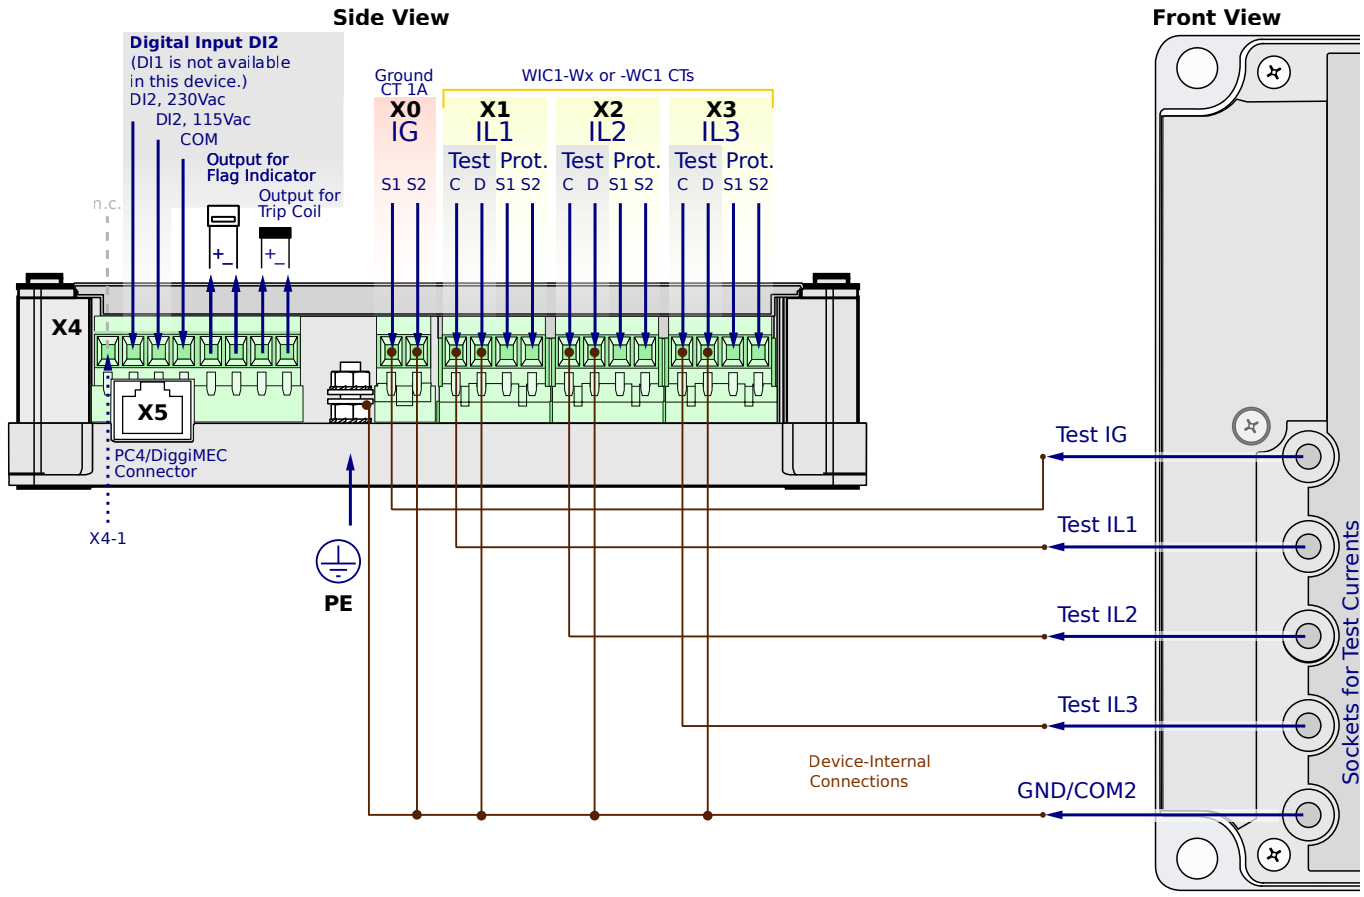


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC0PAH

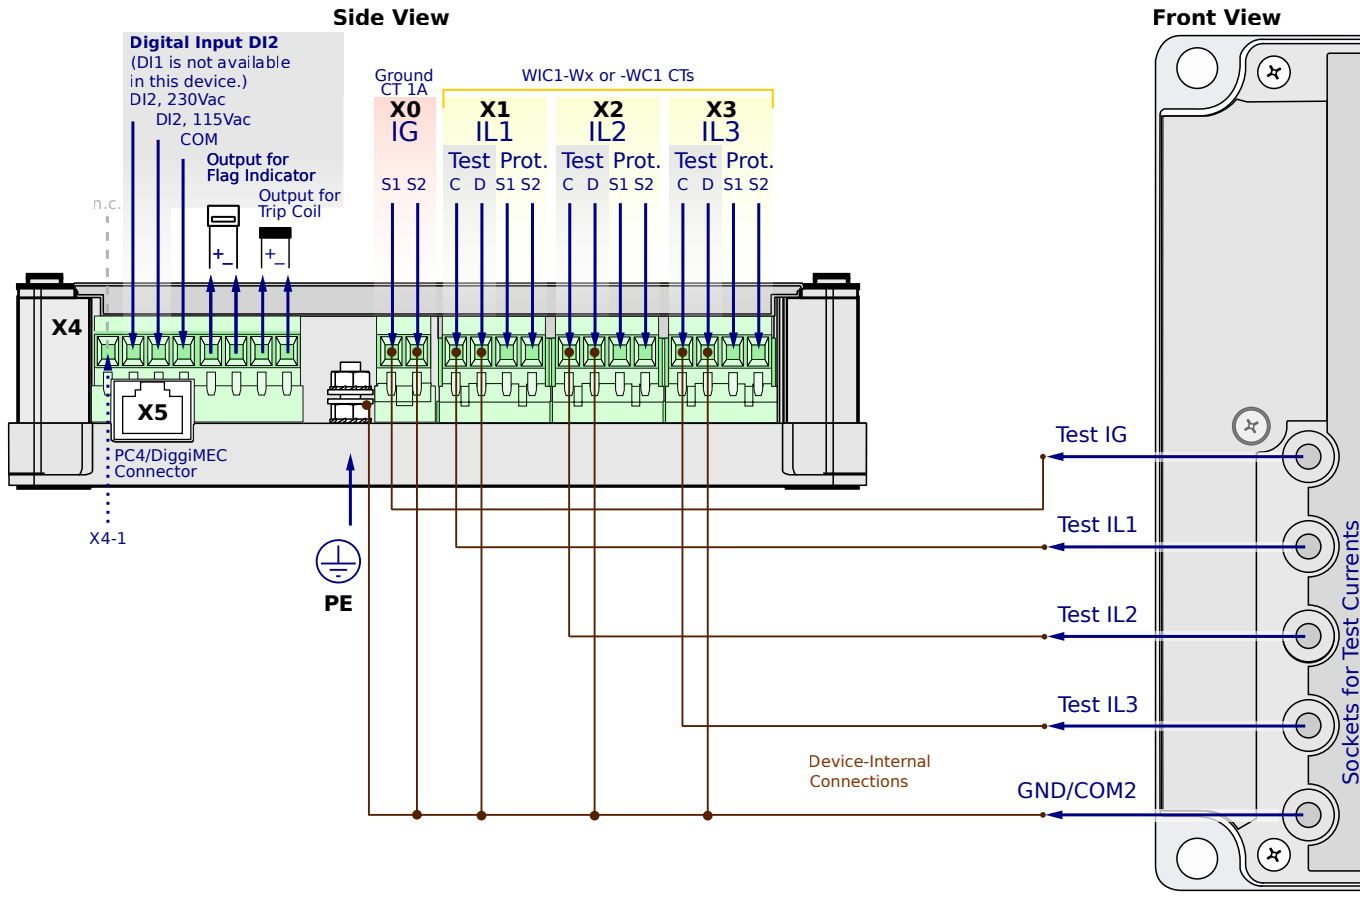


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1SA0

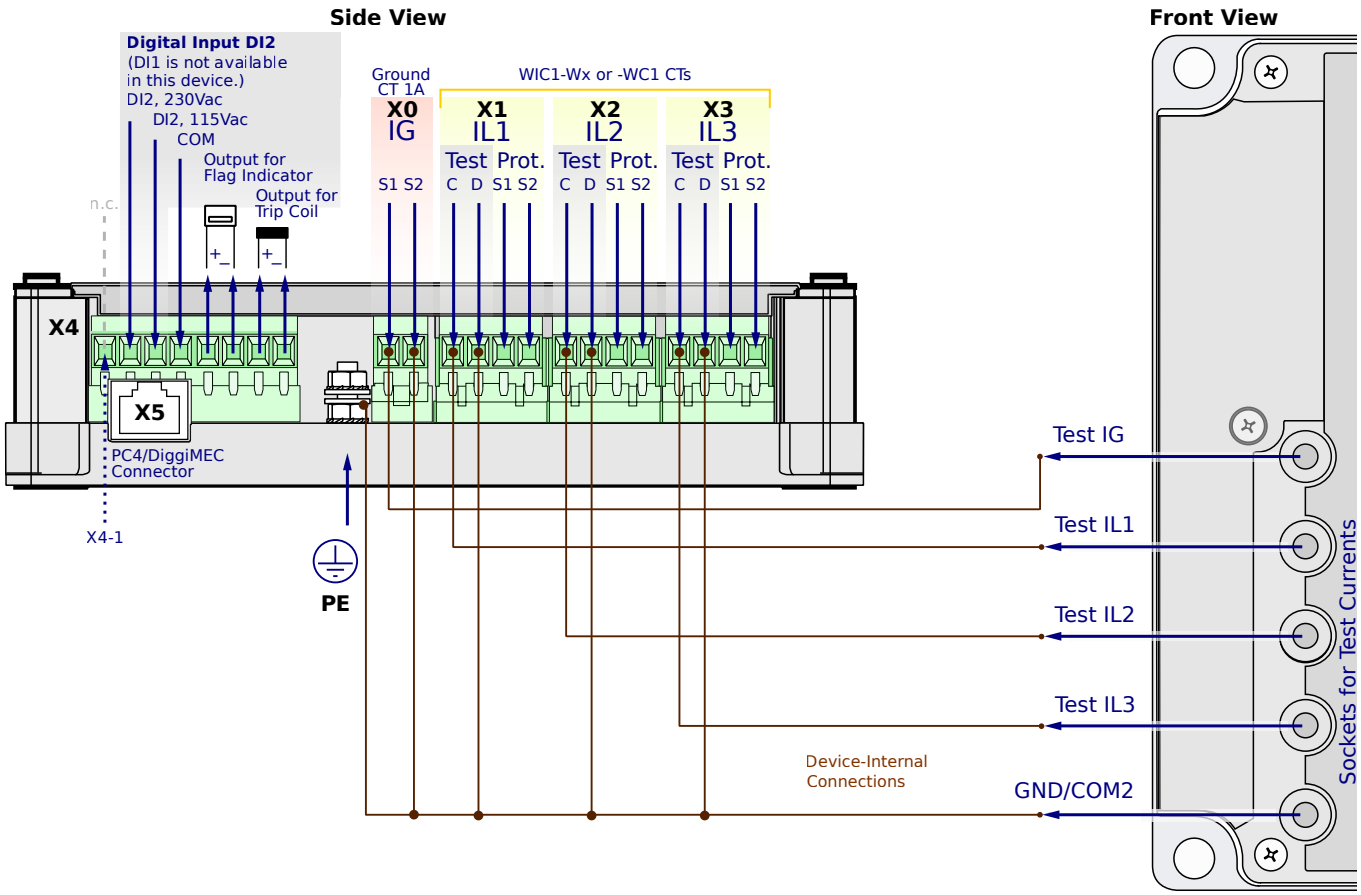


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1SAH

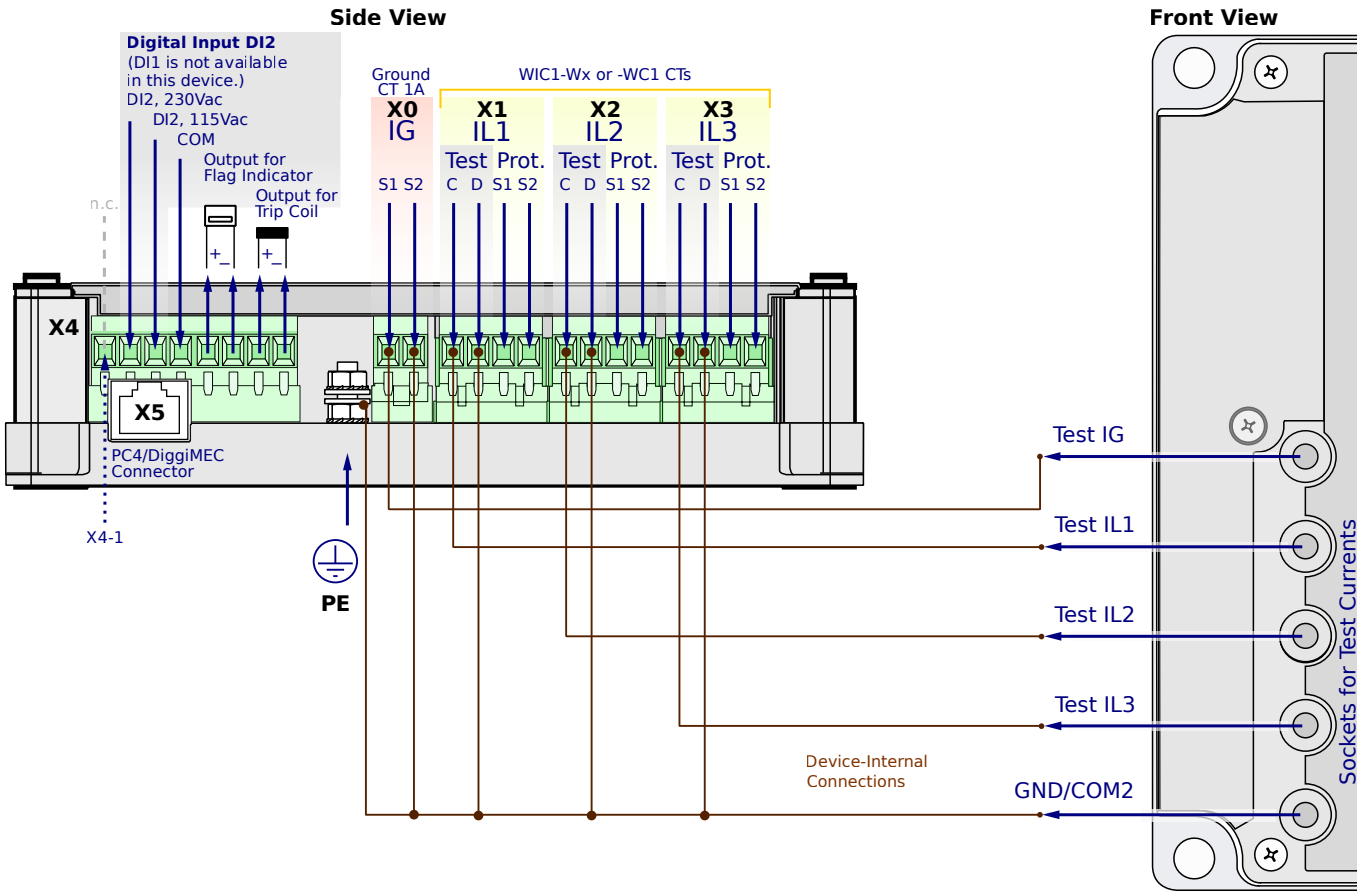


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1AA0

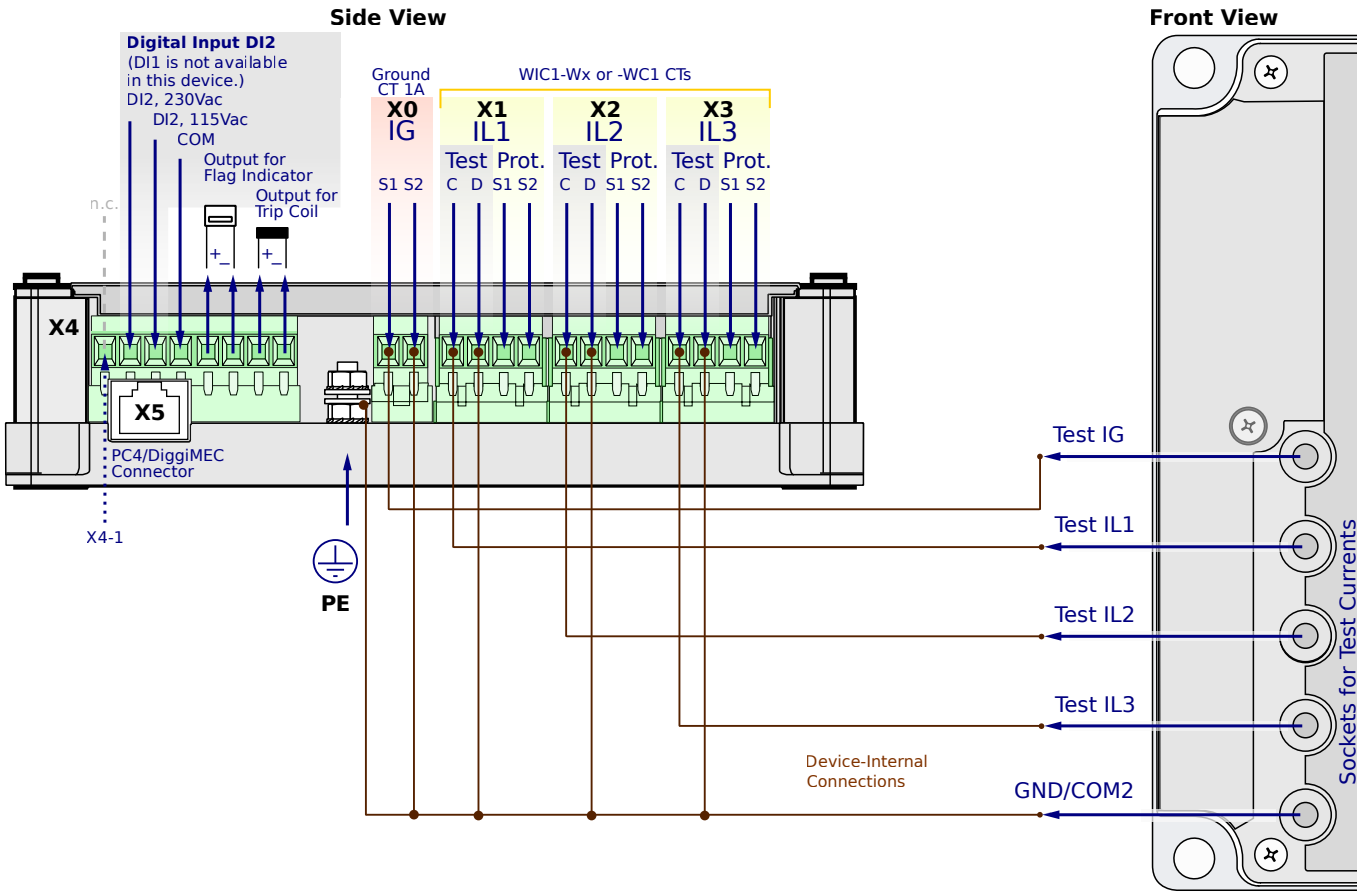


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1AAH

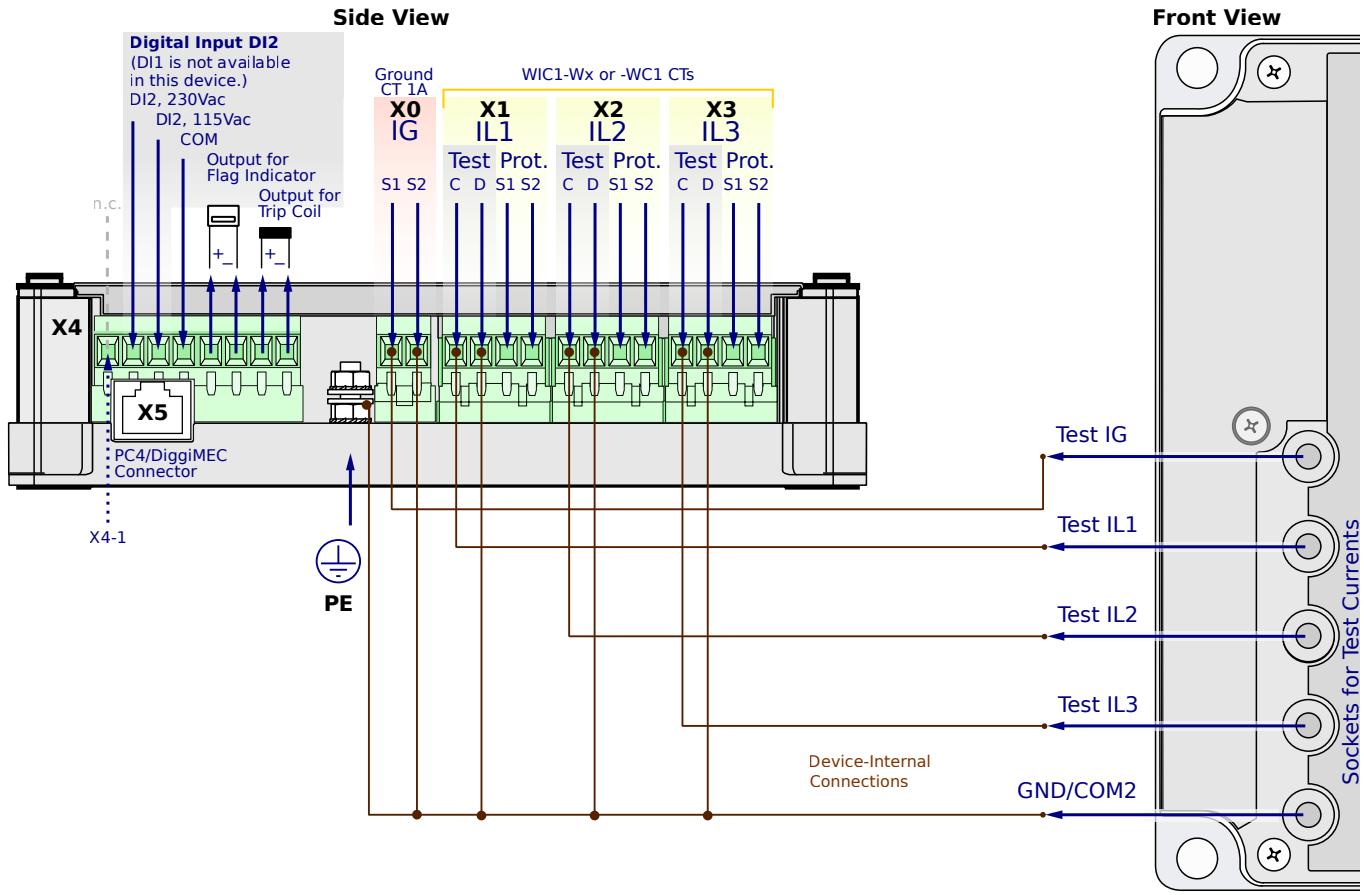


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1PA0

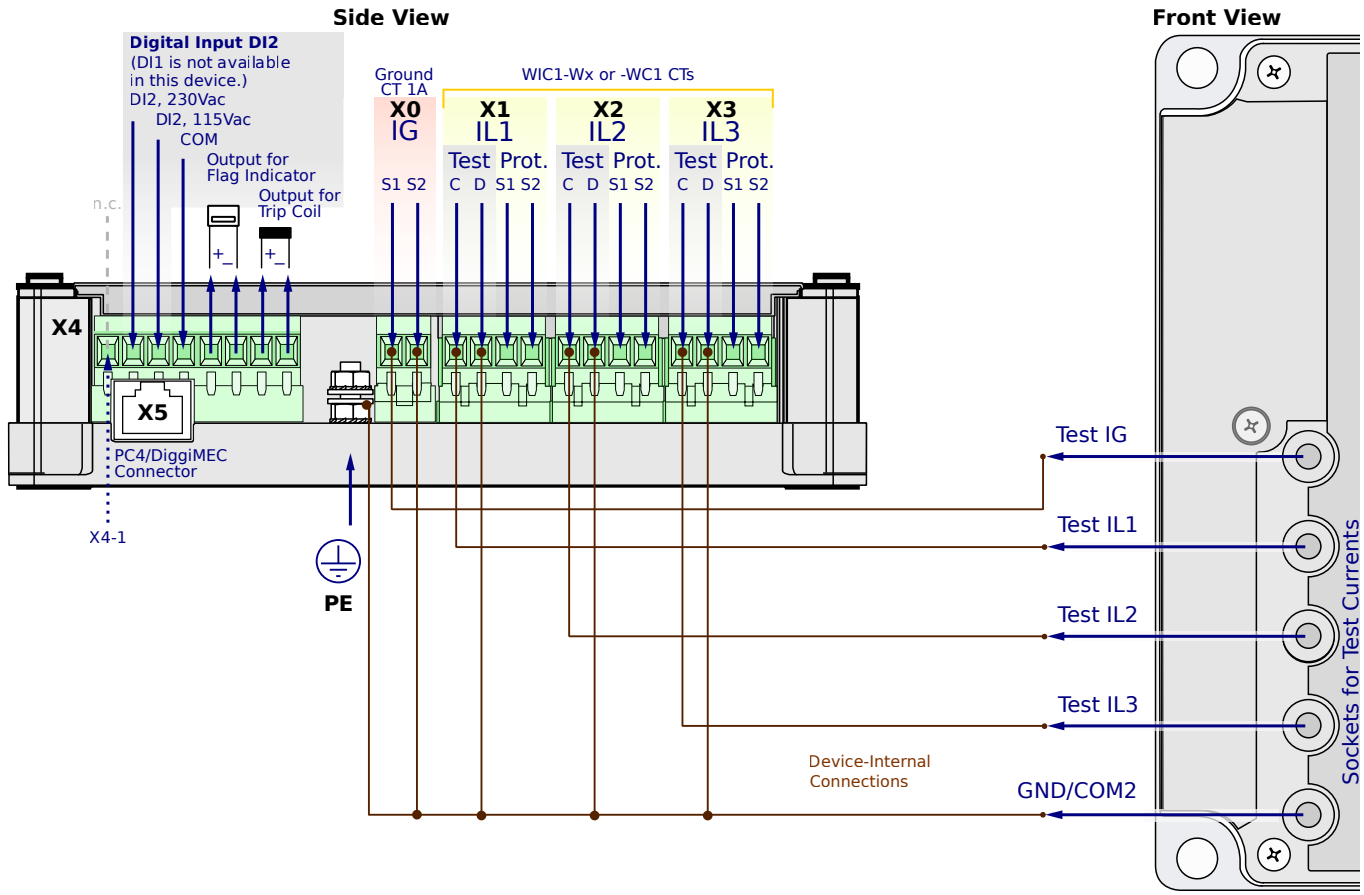


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC1PAH

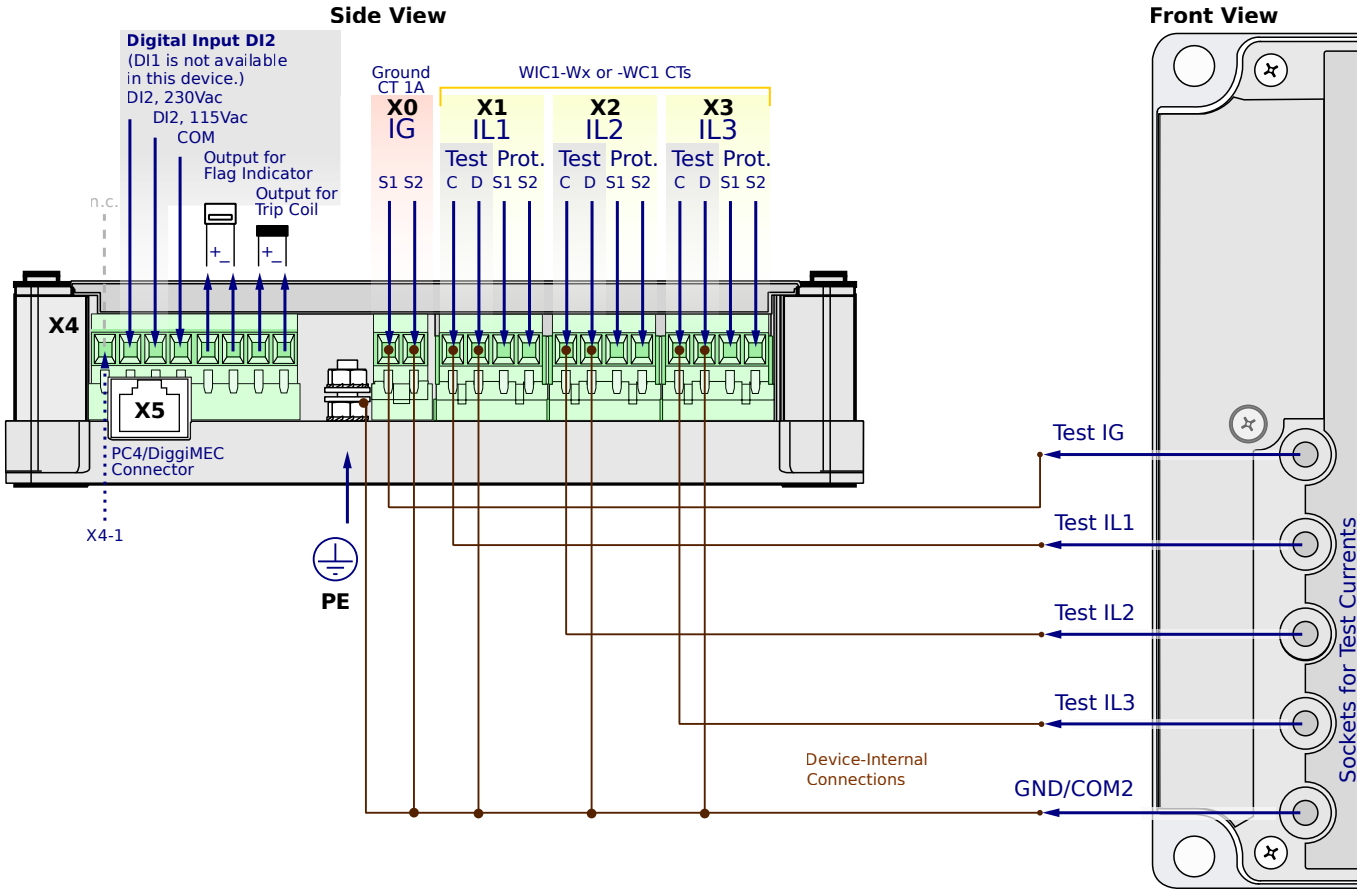


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2SA0

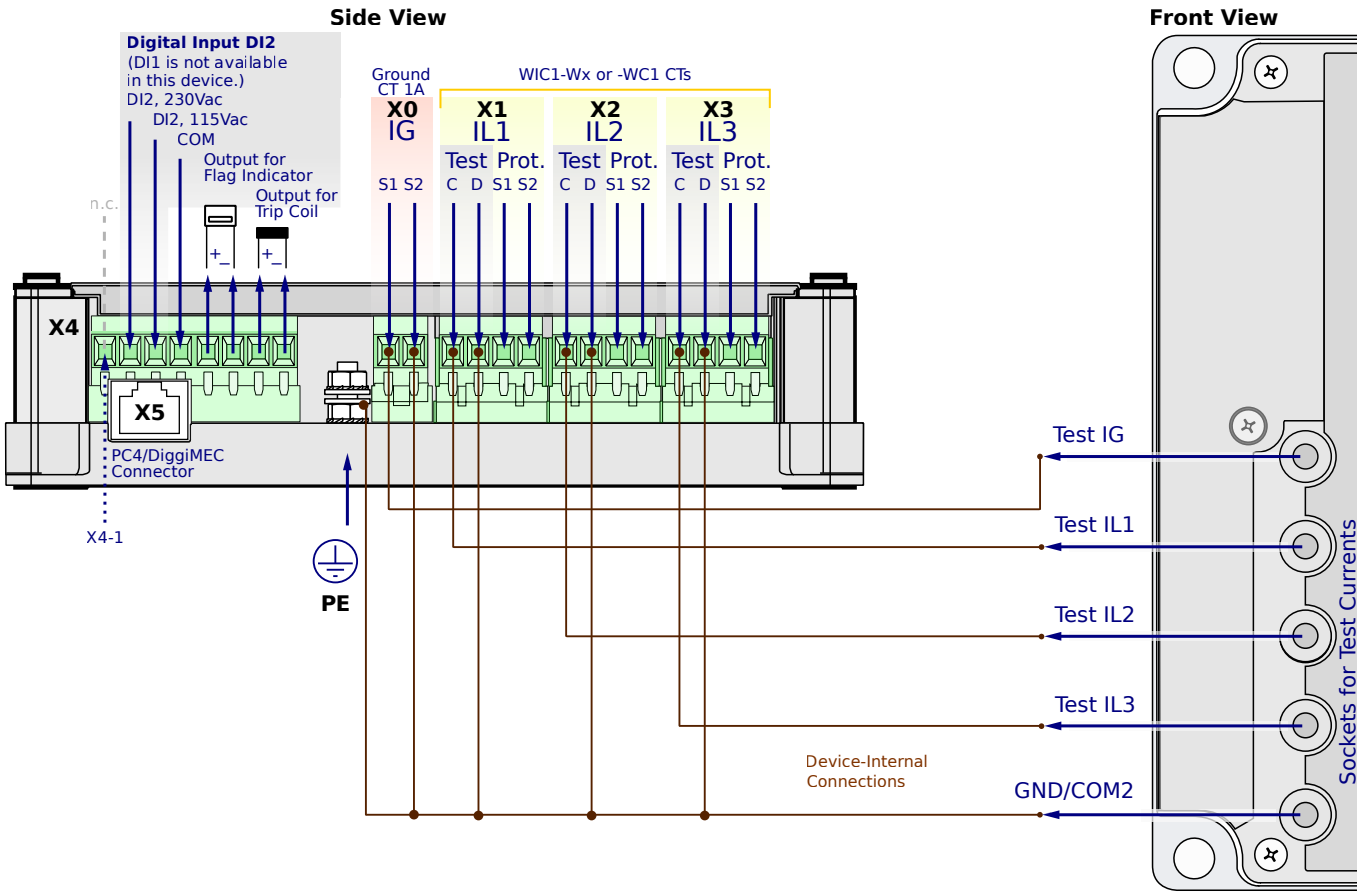


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2SAH

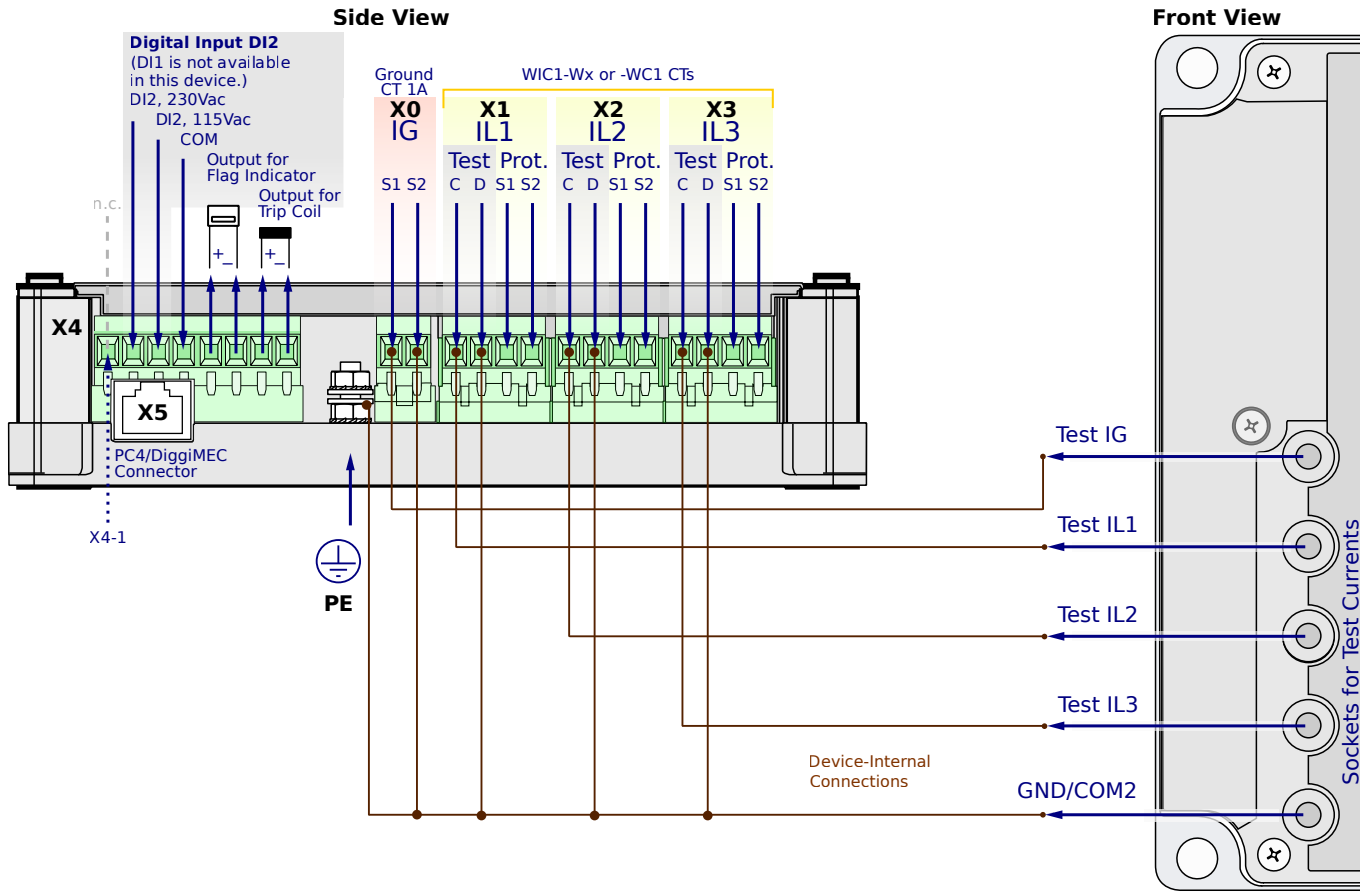


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2AA0

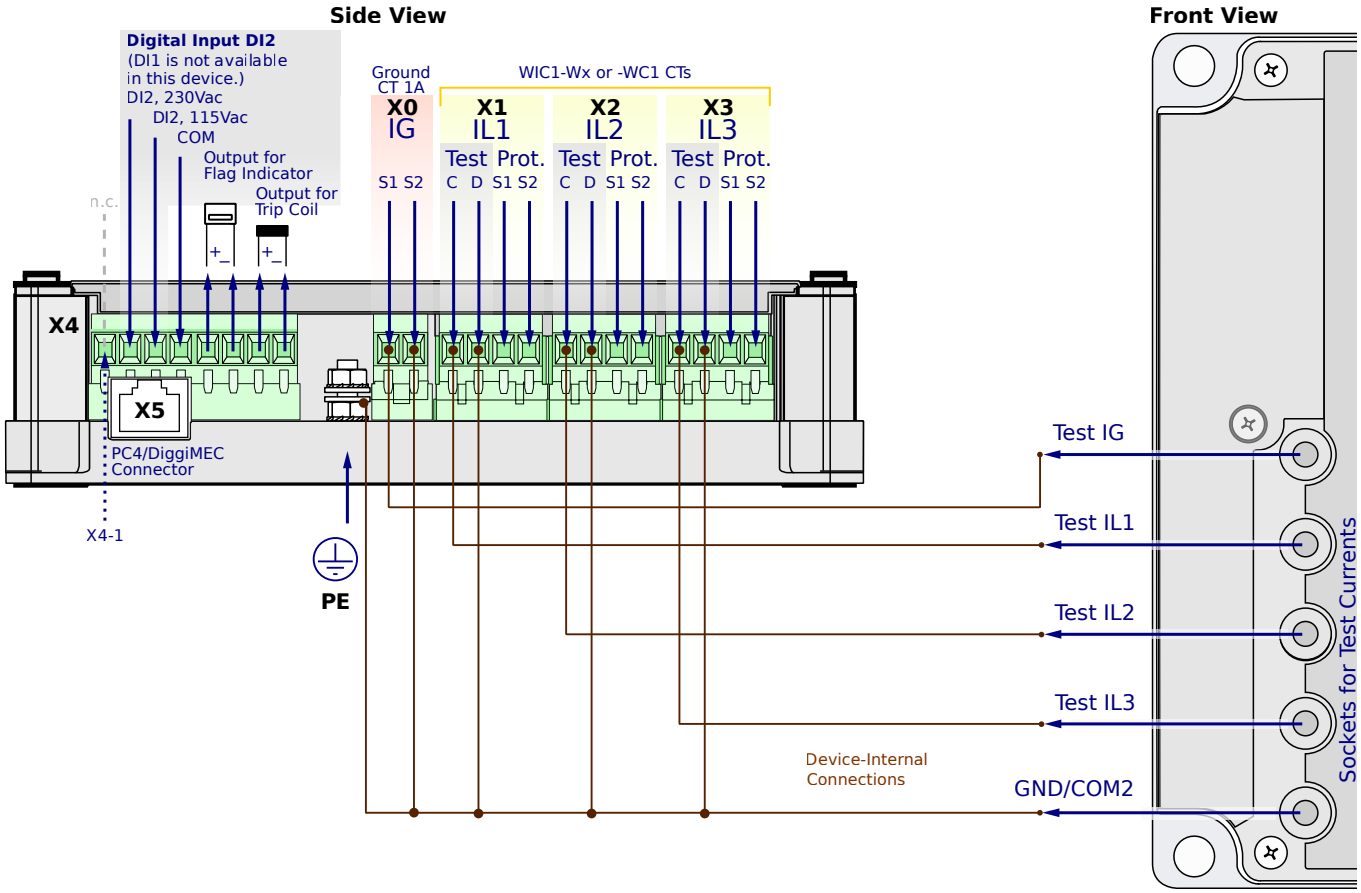


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2AAH

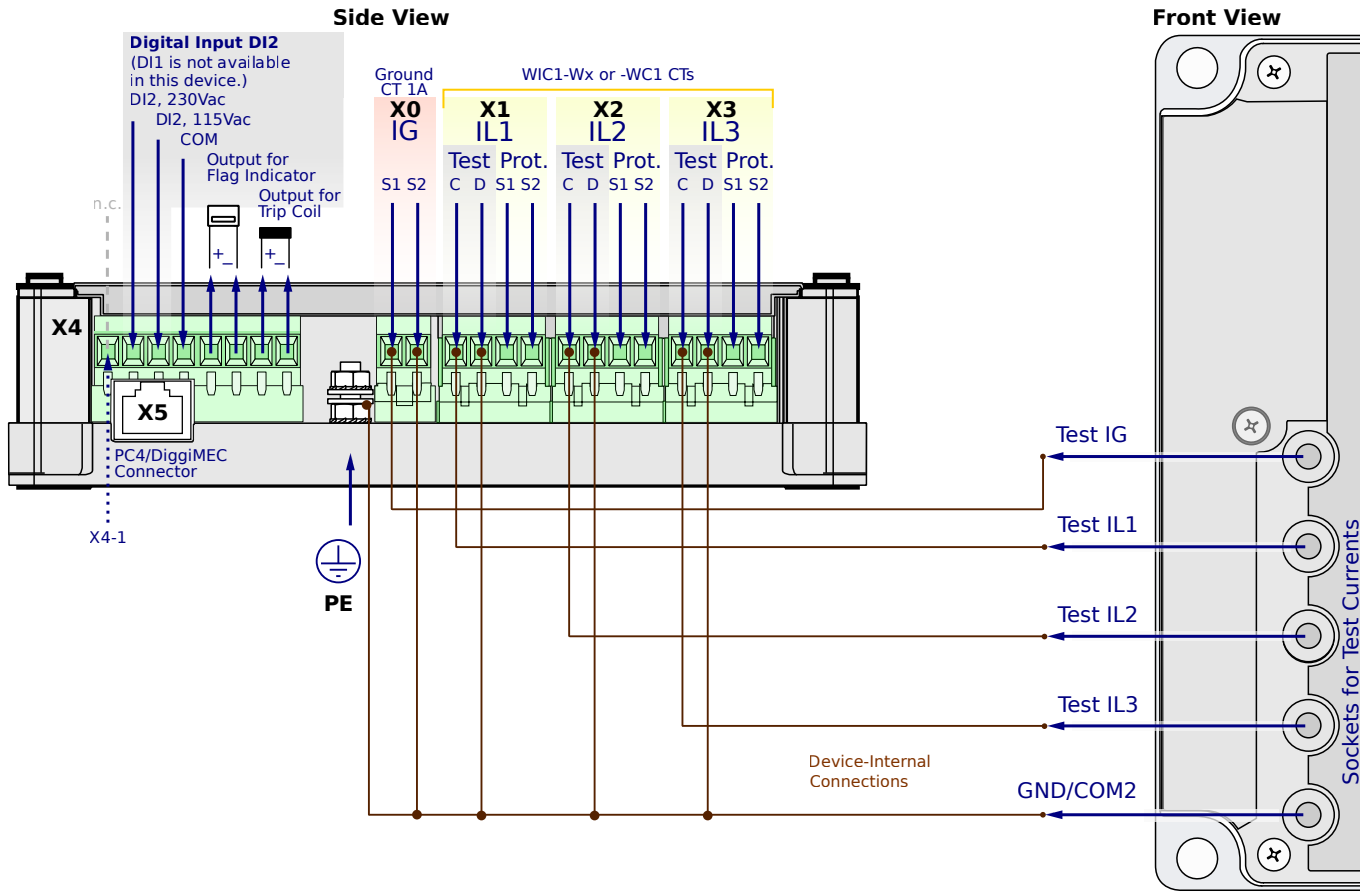


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2PA0

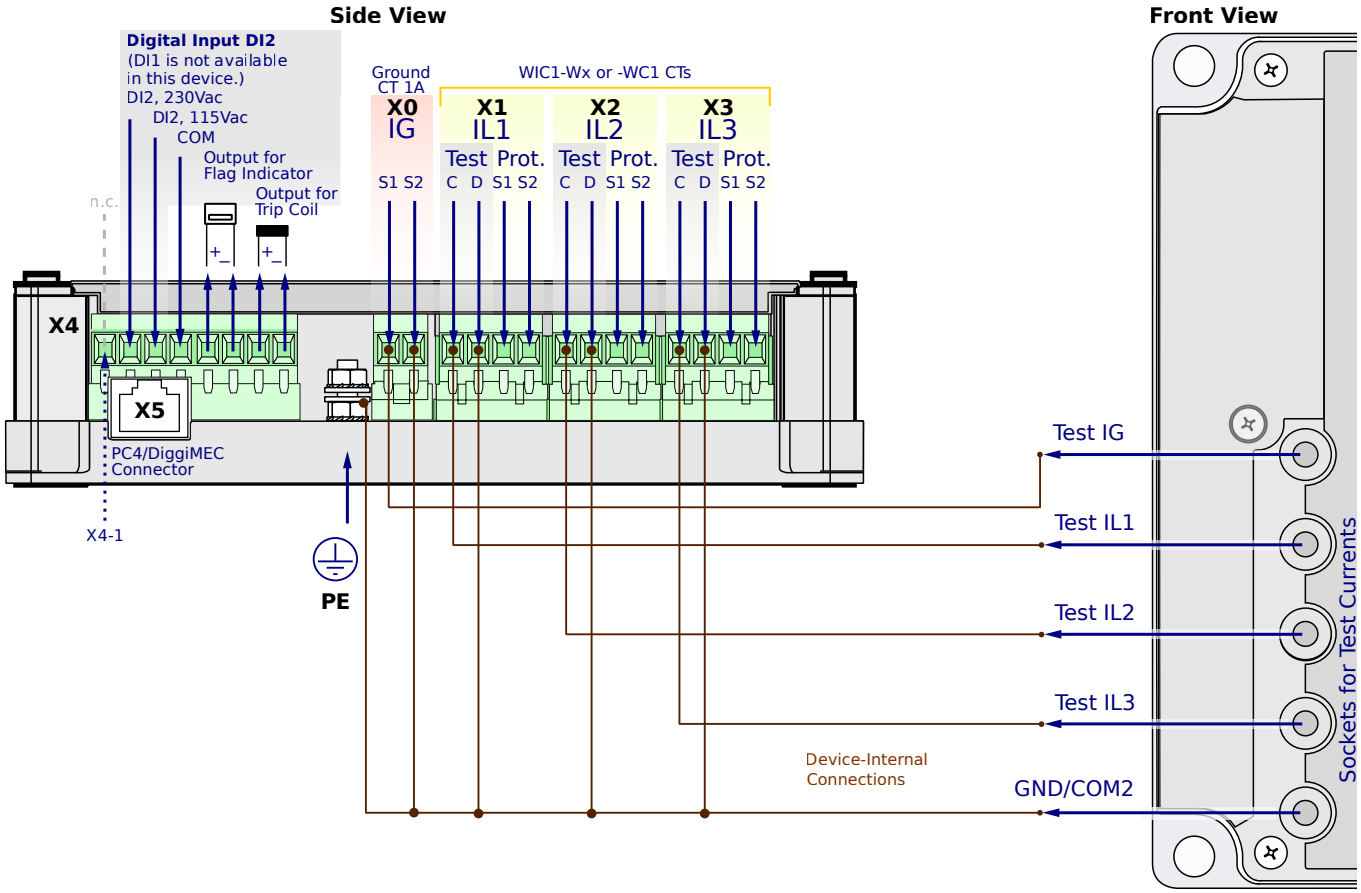


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5NC2PAH

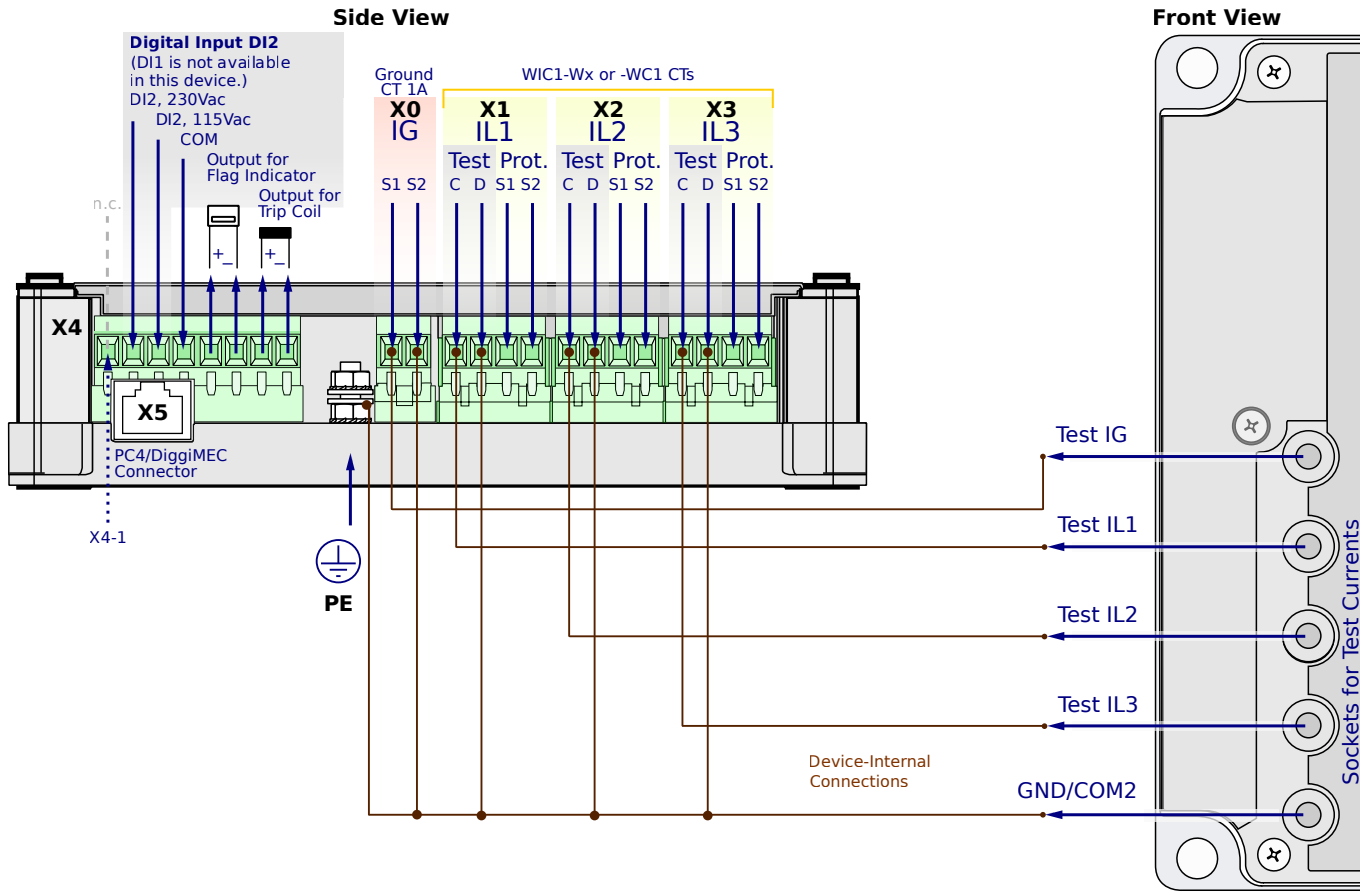


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1SA0

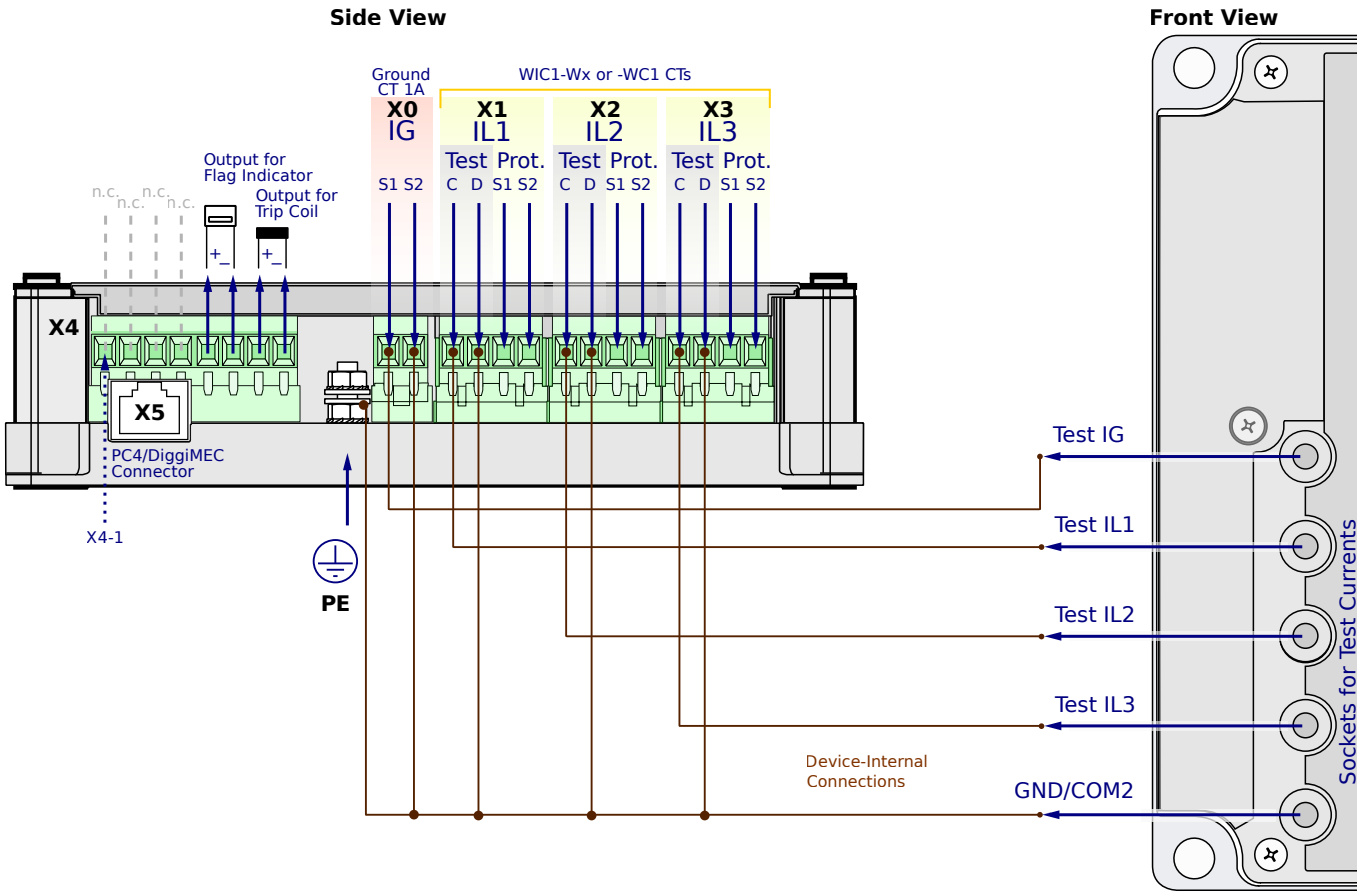


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1SAH

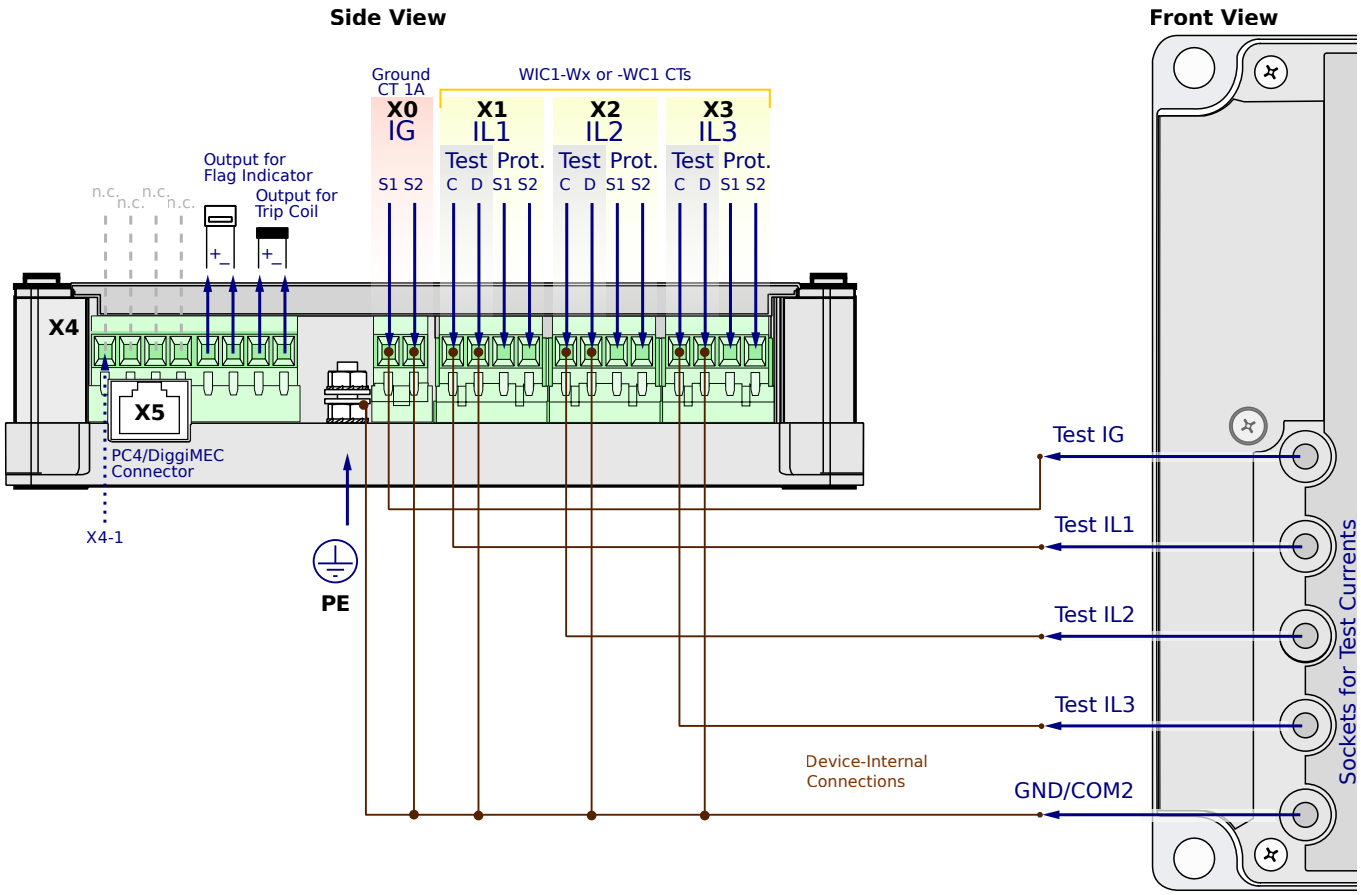


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1AA0

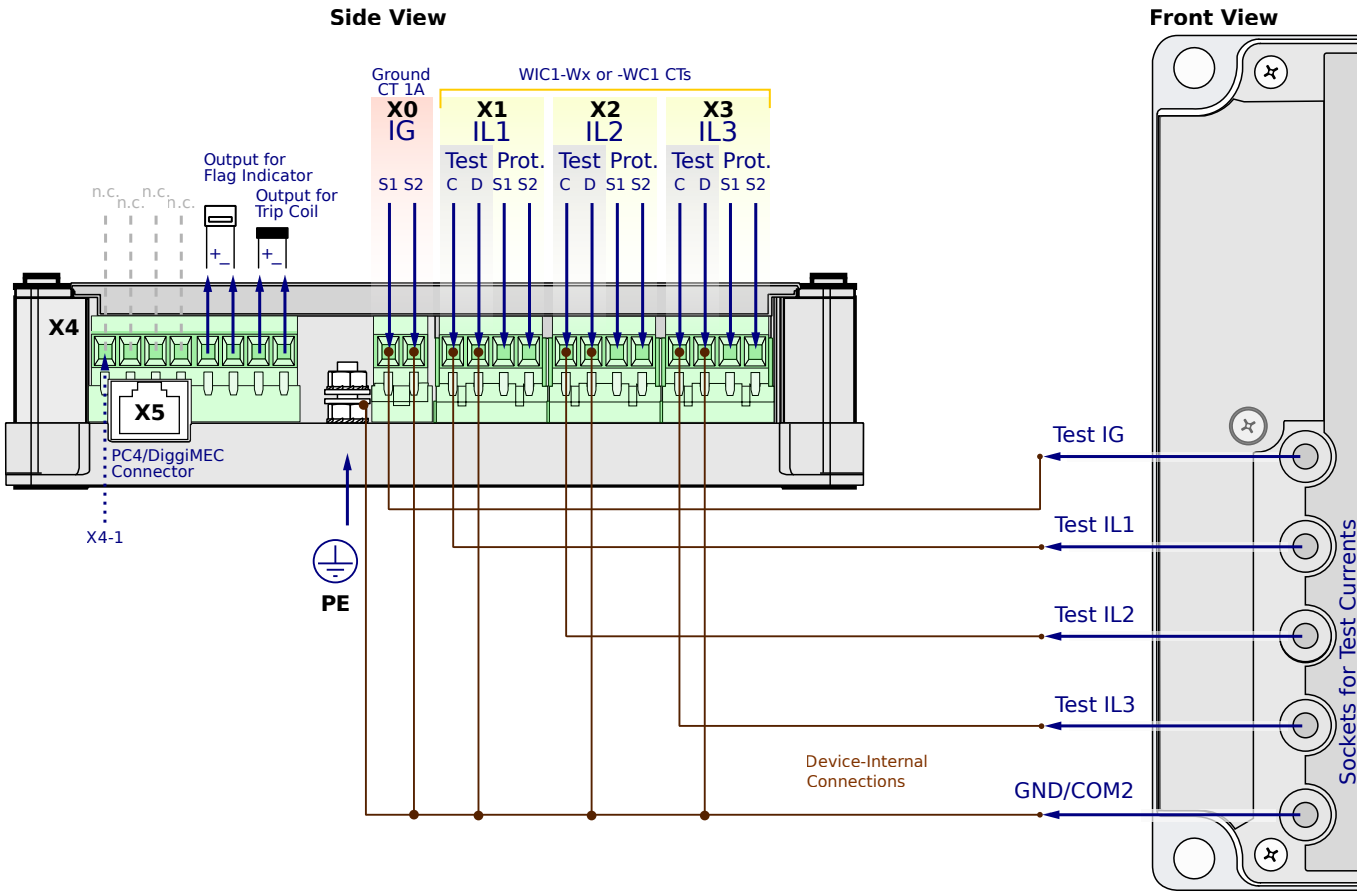


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1AAH

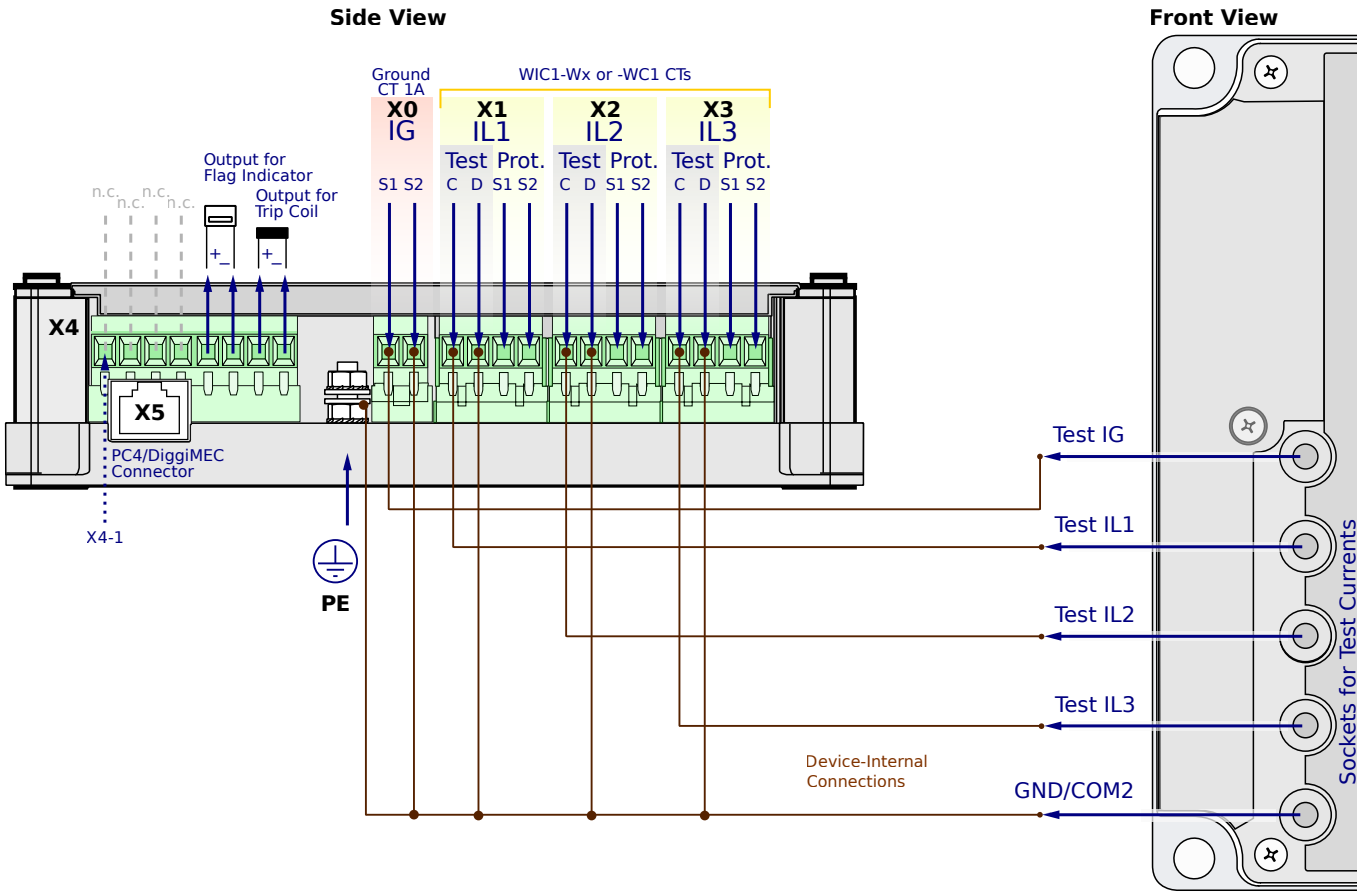


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1PA0

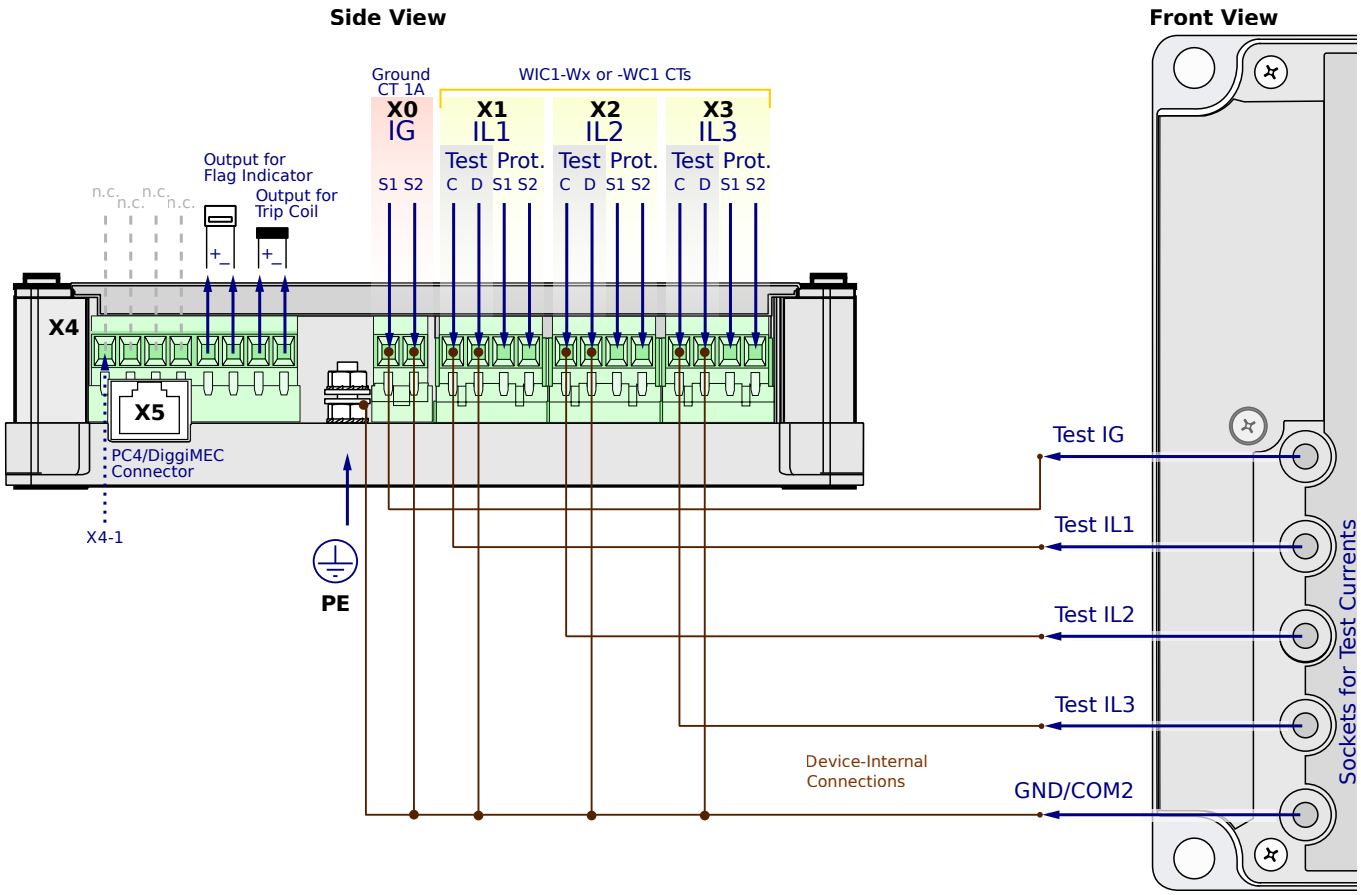


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN1PAH

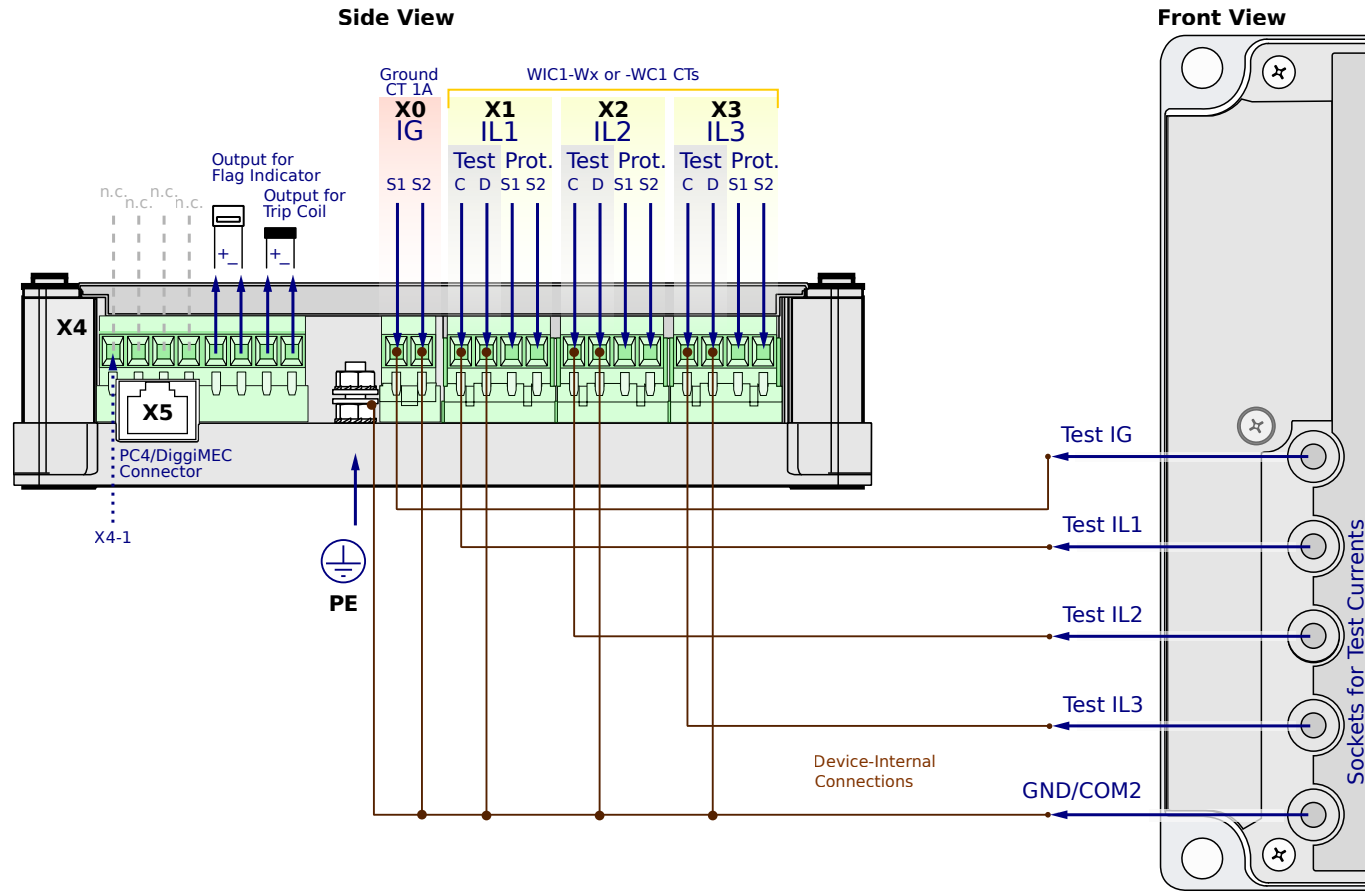


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2SA0

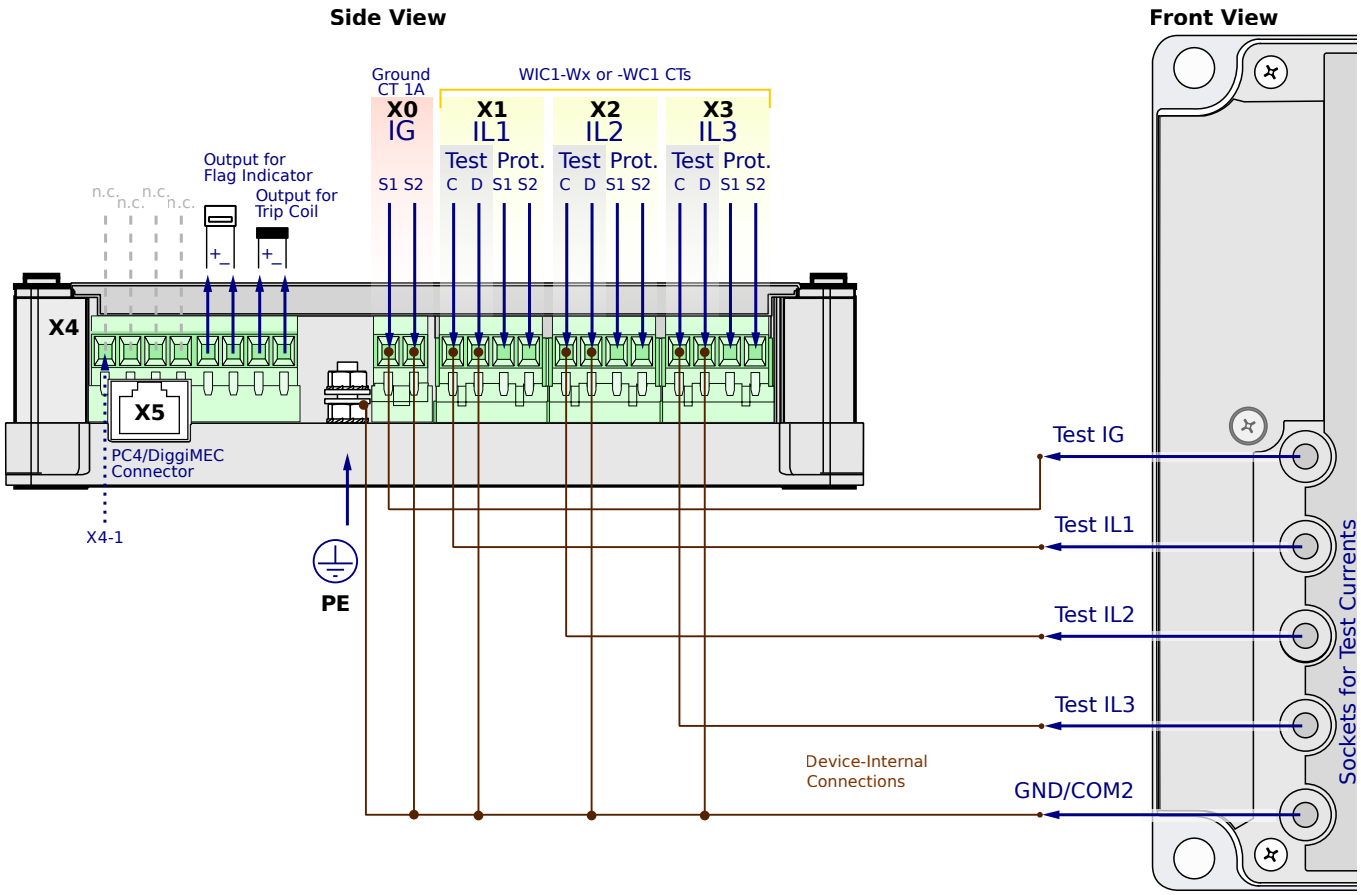


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2SAH

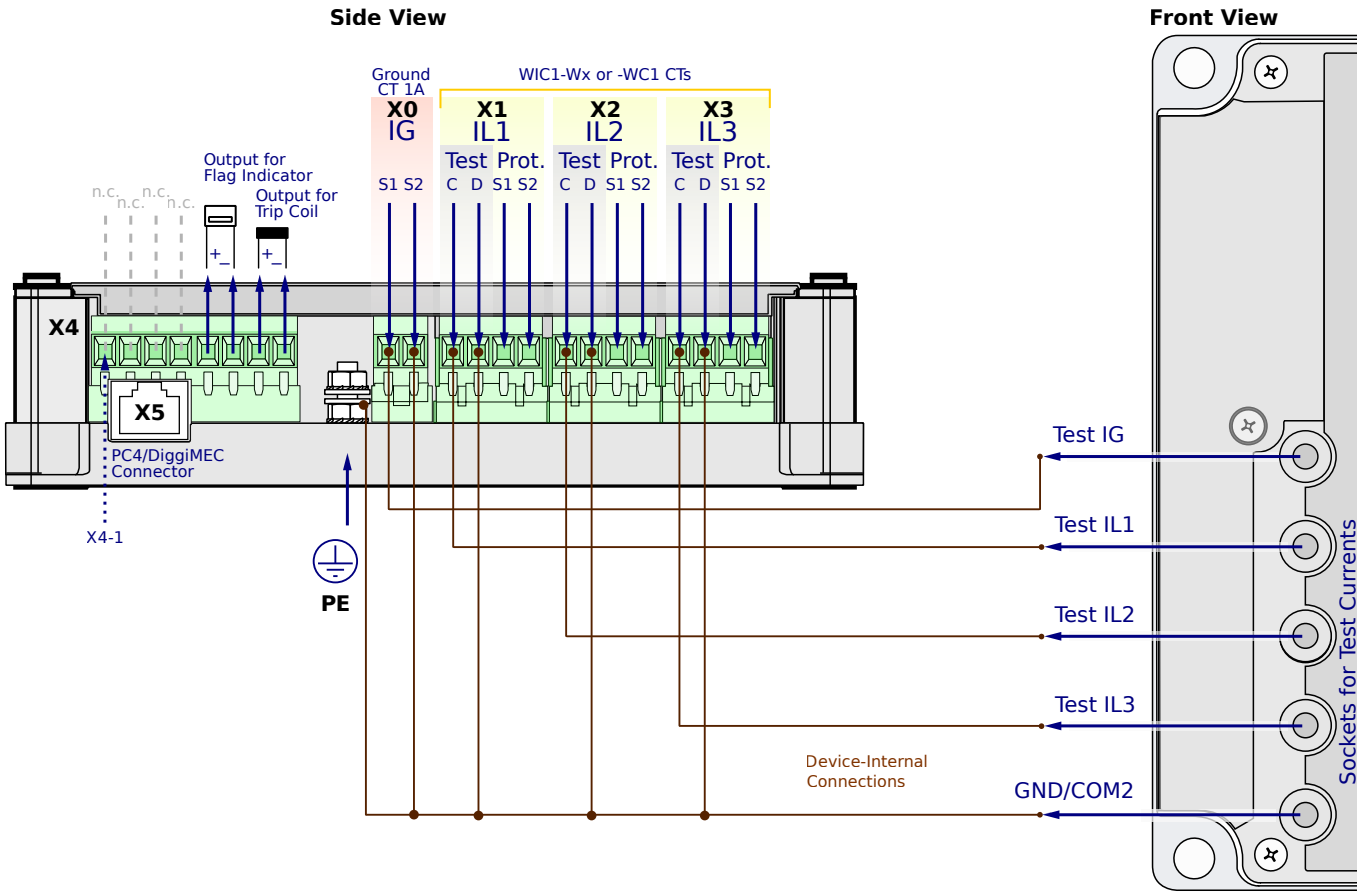


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2AA0

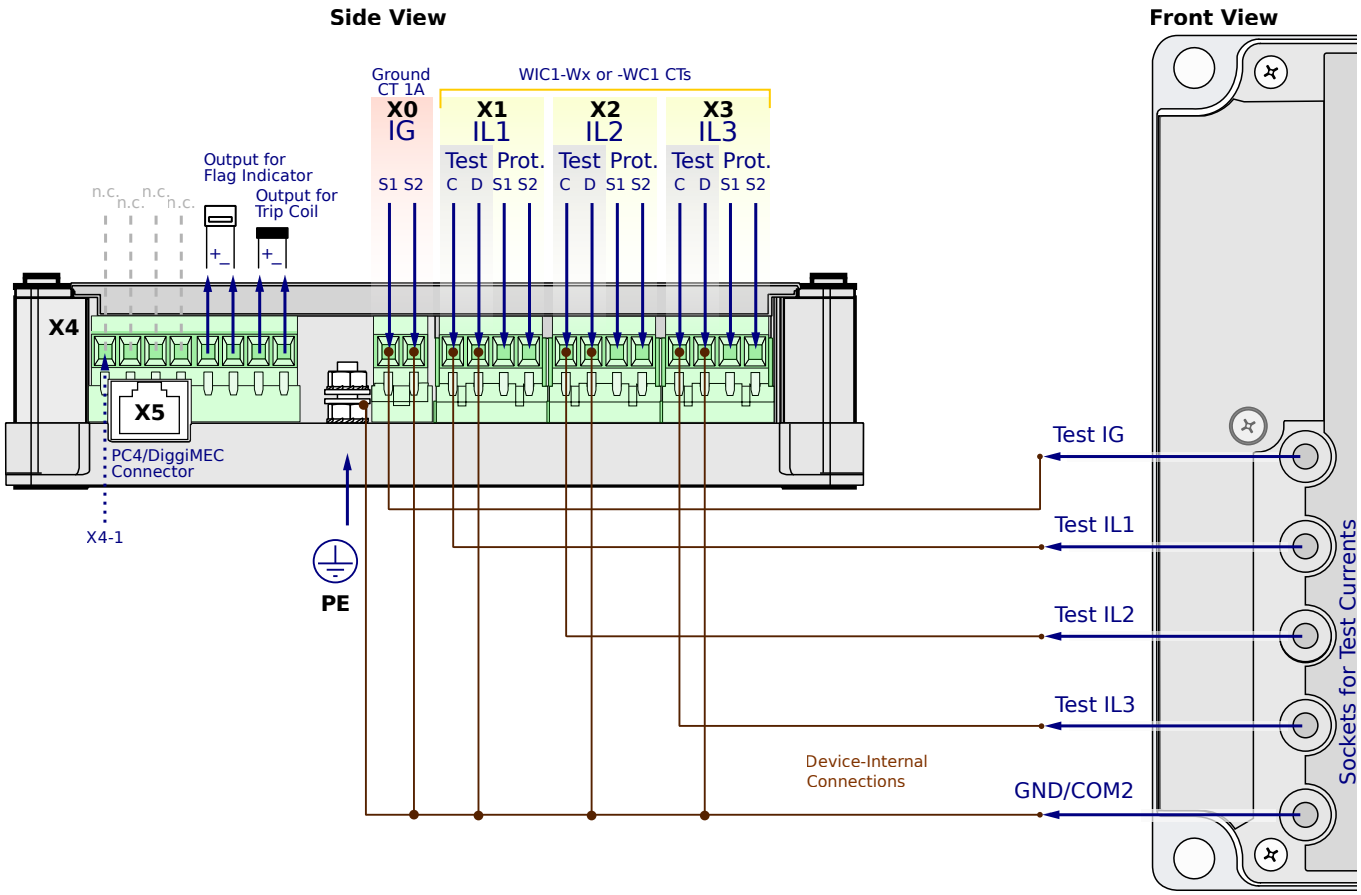


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2AAH

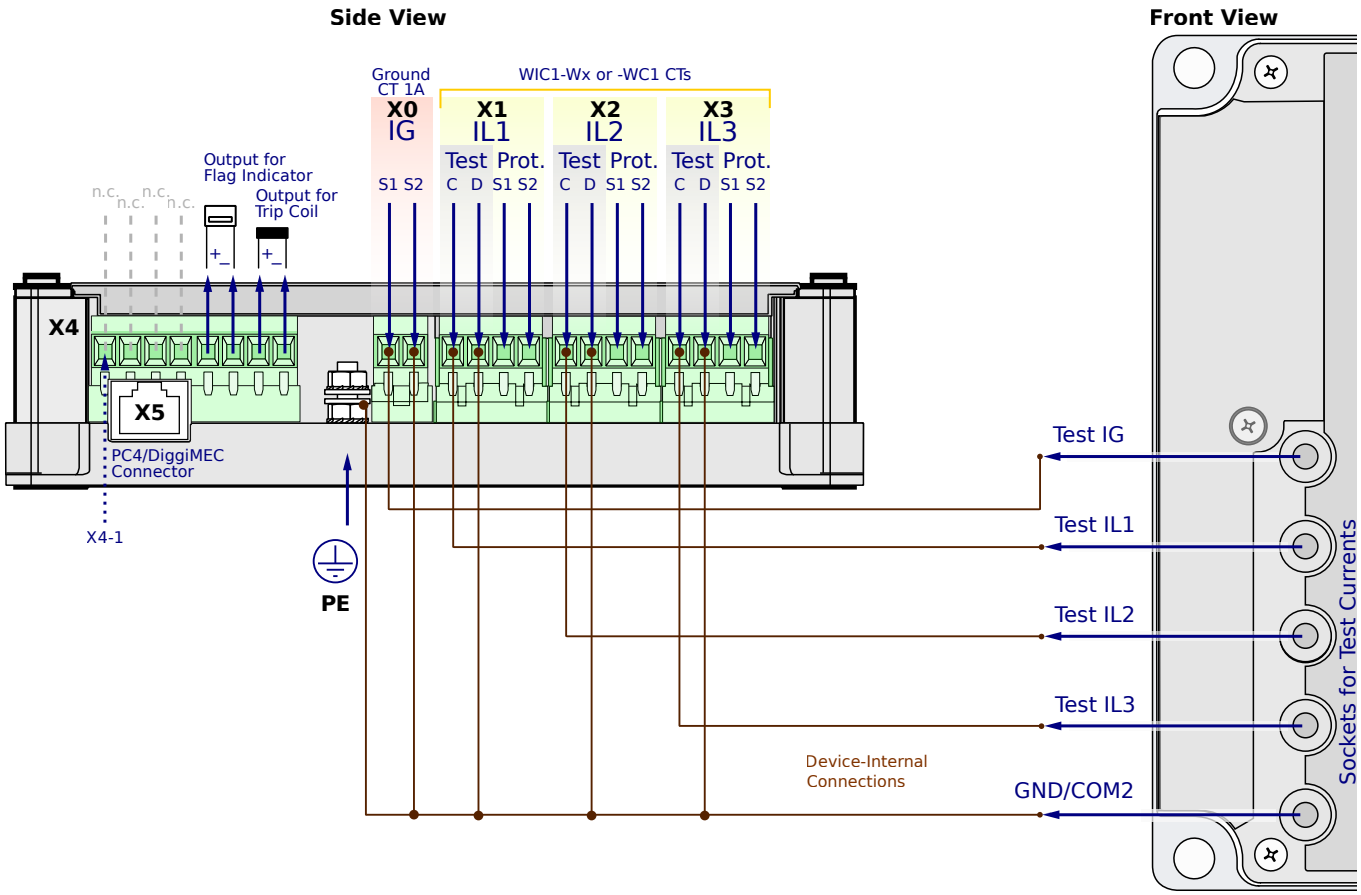


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2PA0

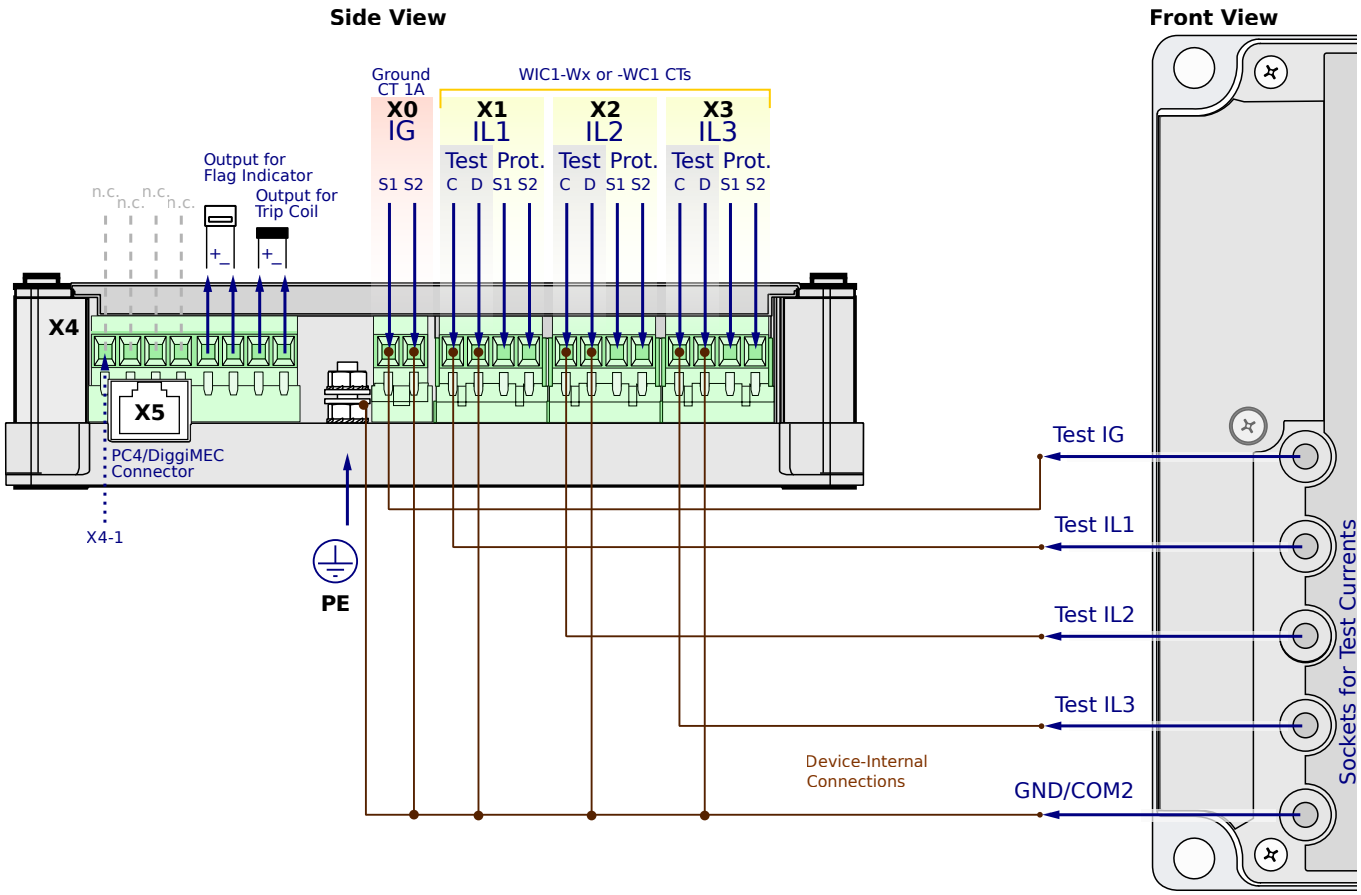


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FN2PAH

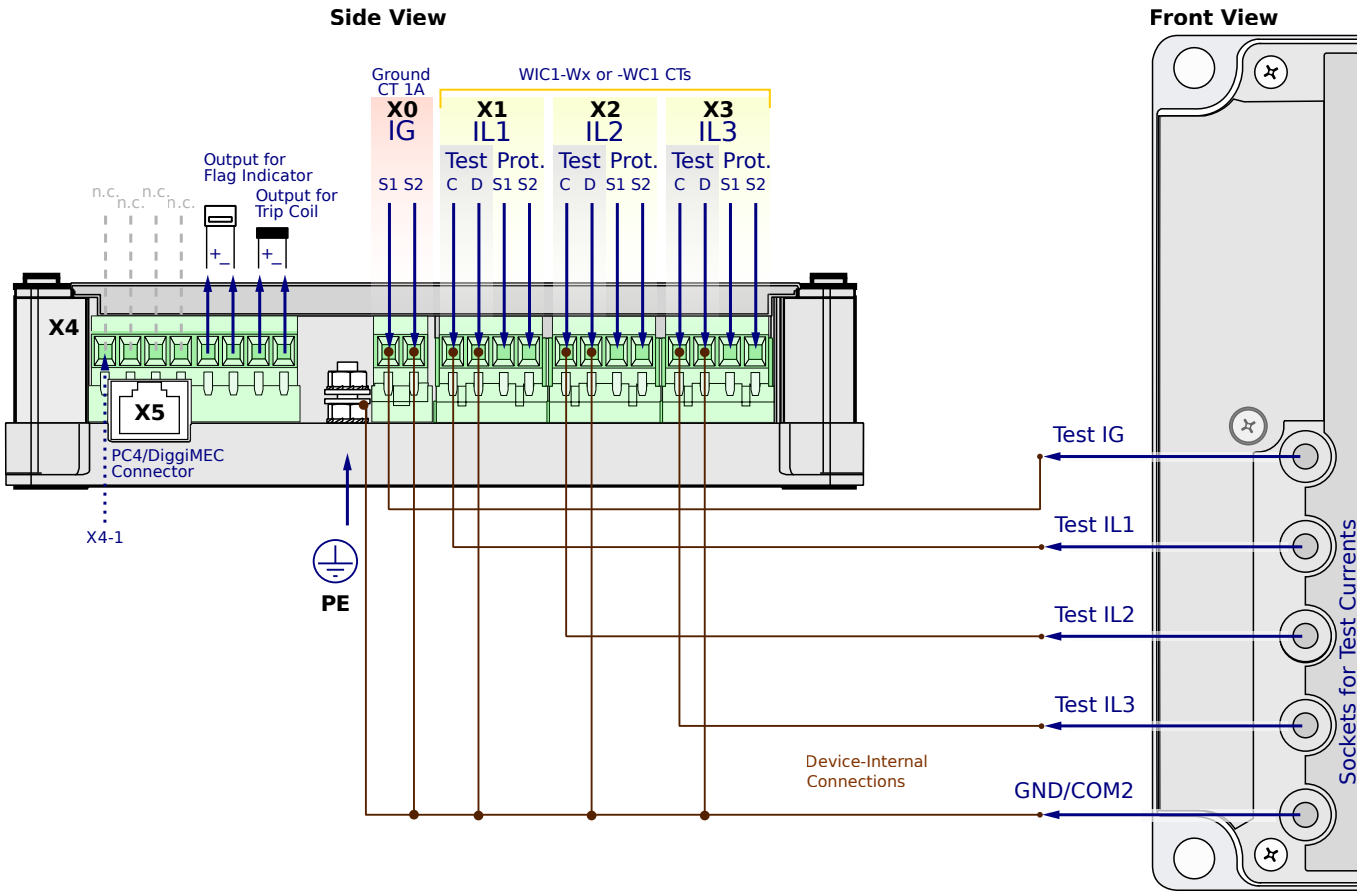


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1SA0

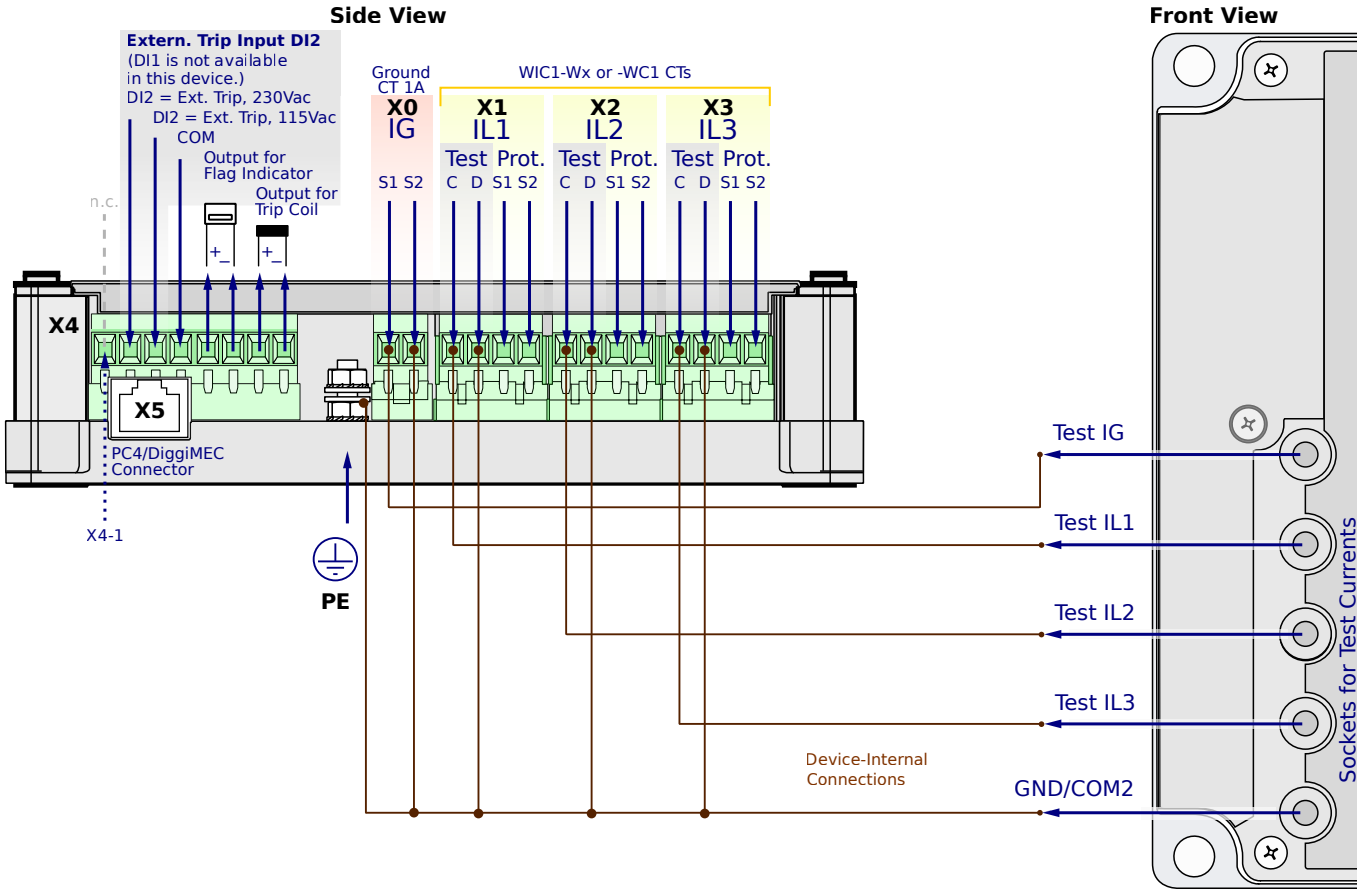


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1SAH

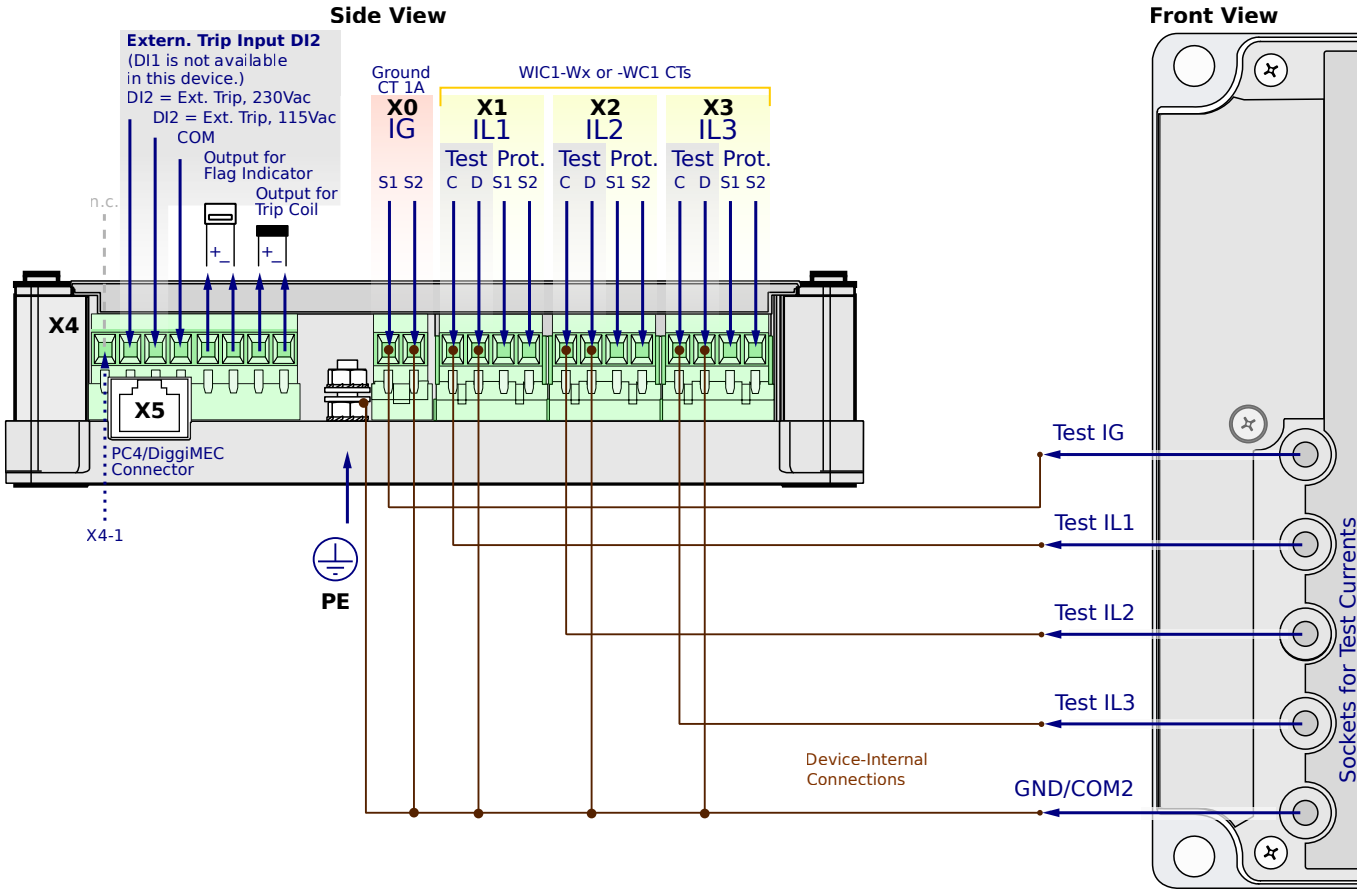


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1AA0

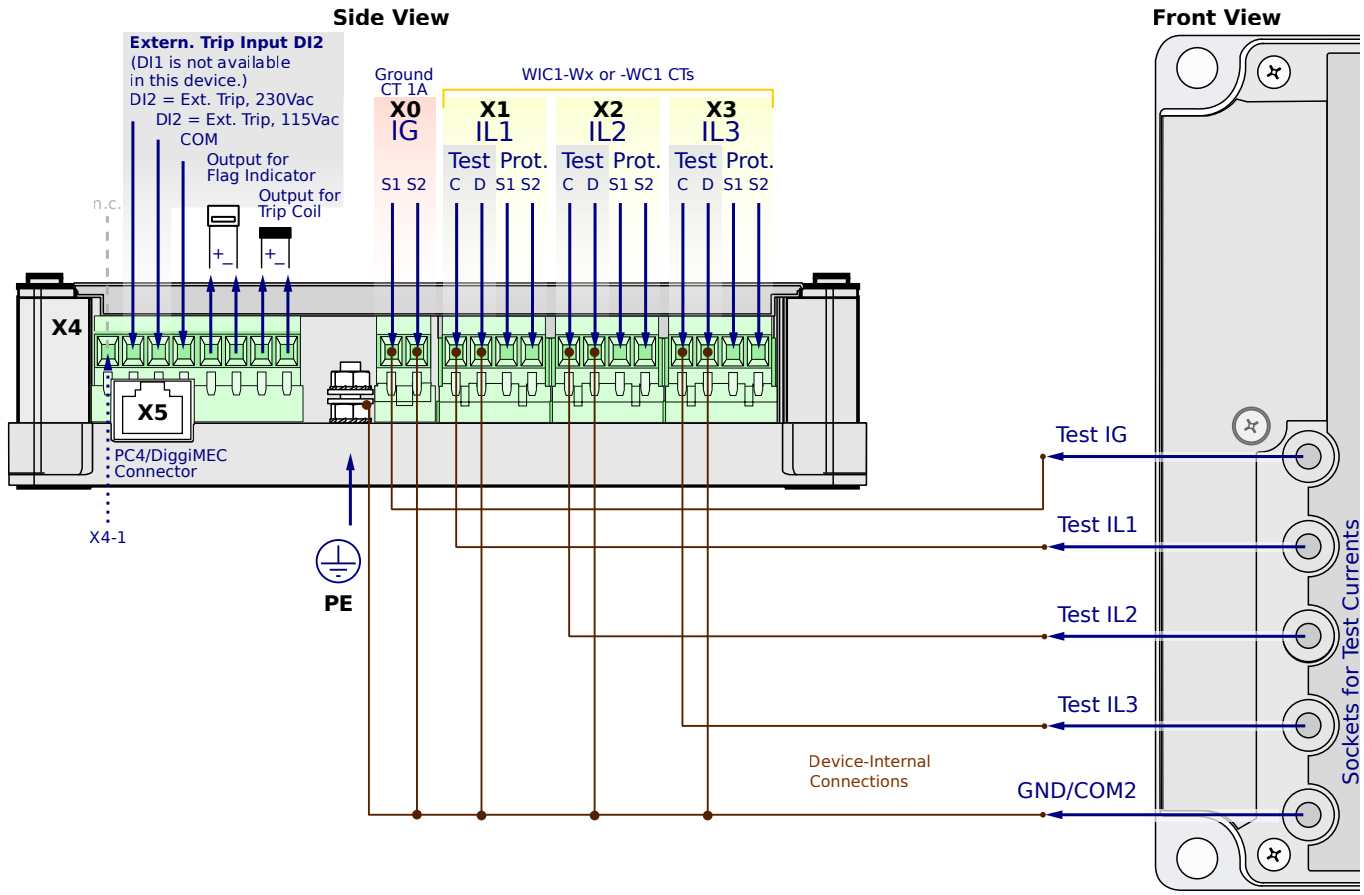


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1AAH

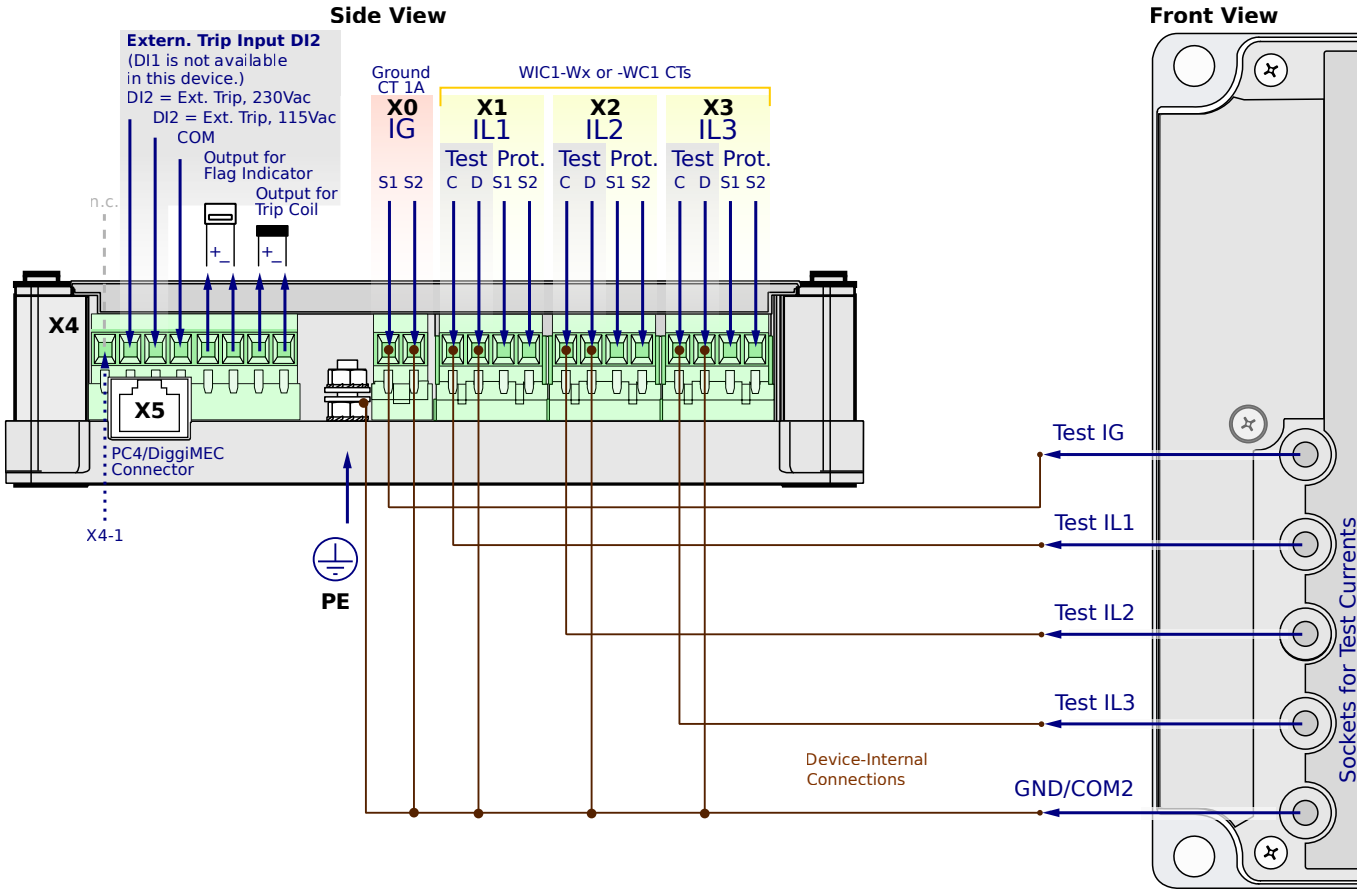


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1PA0

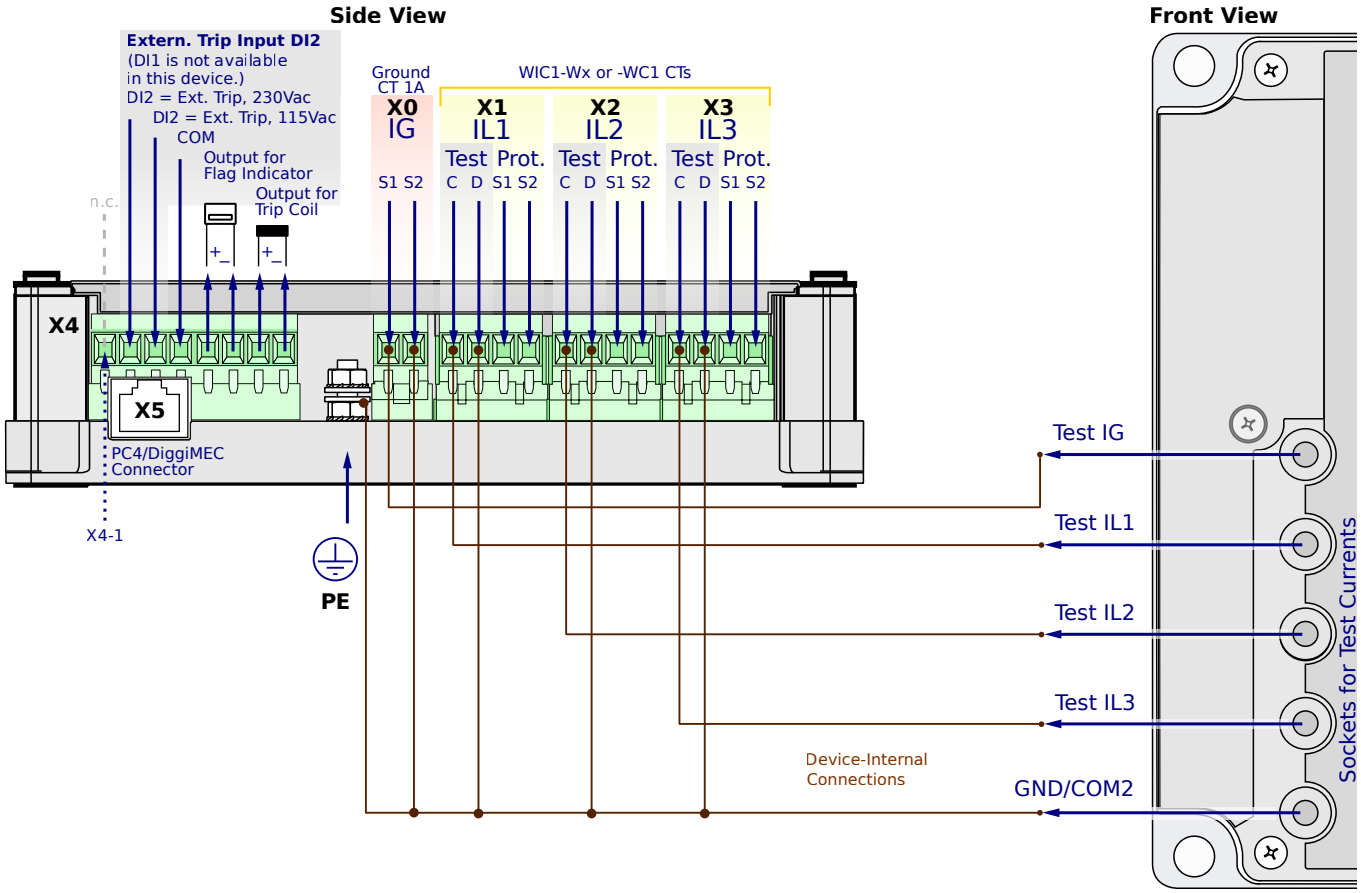


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF1PAH

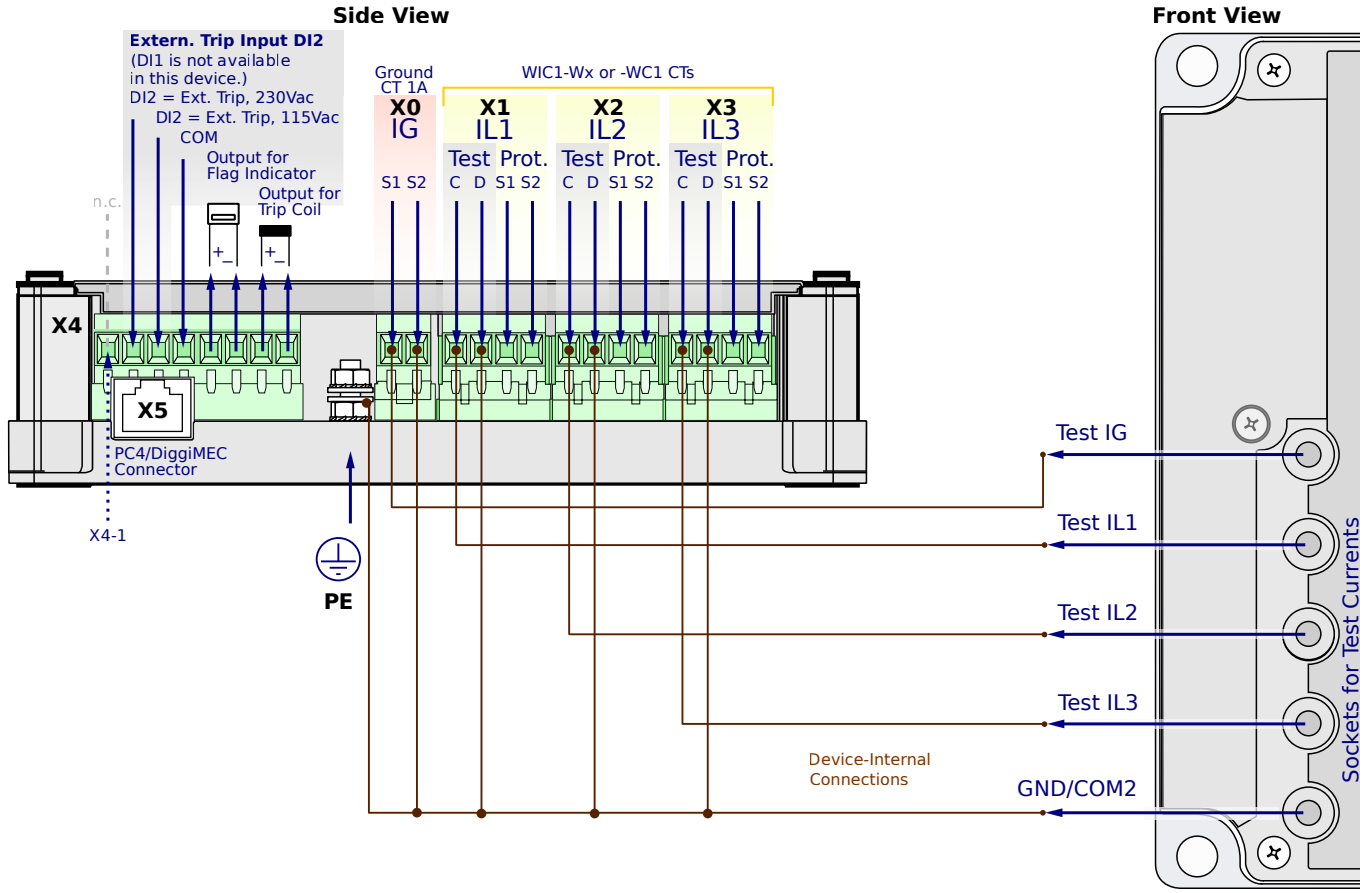


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2SA0

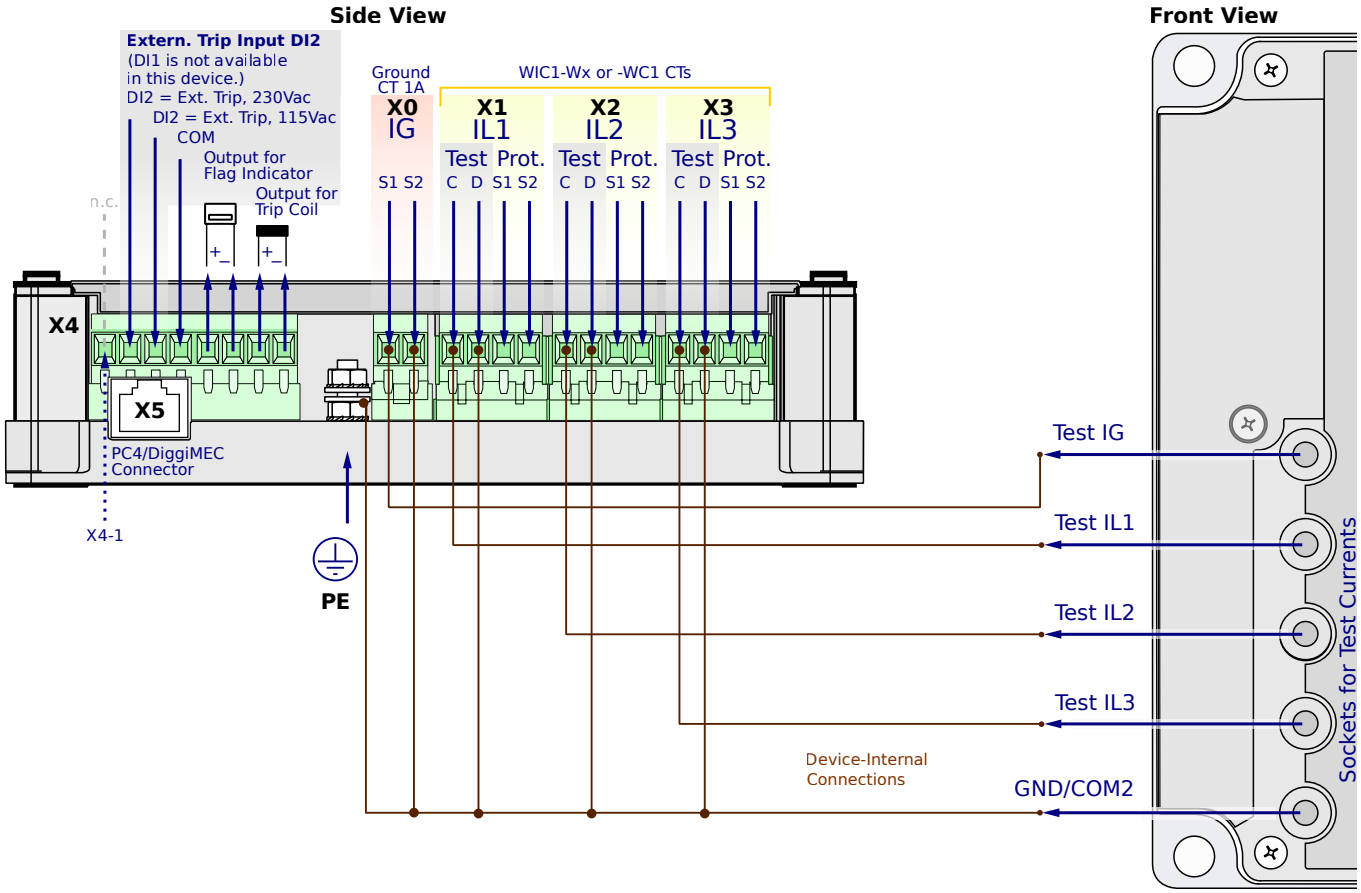


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2SAH

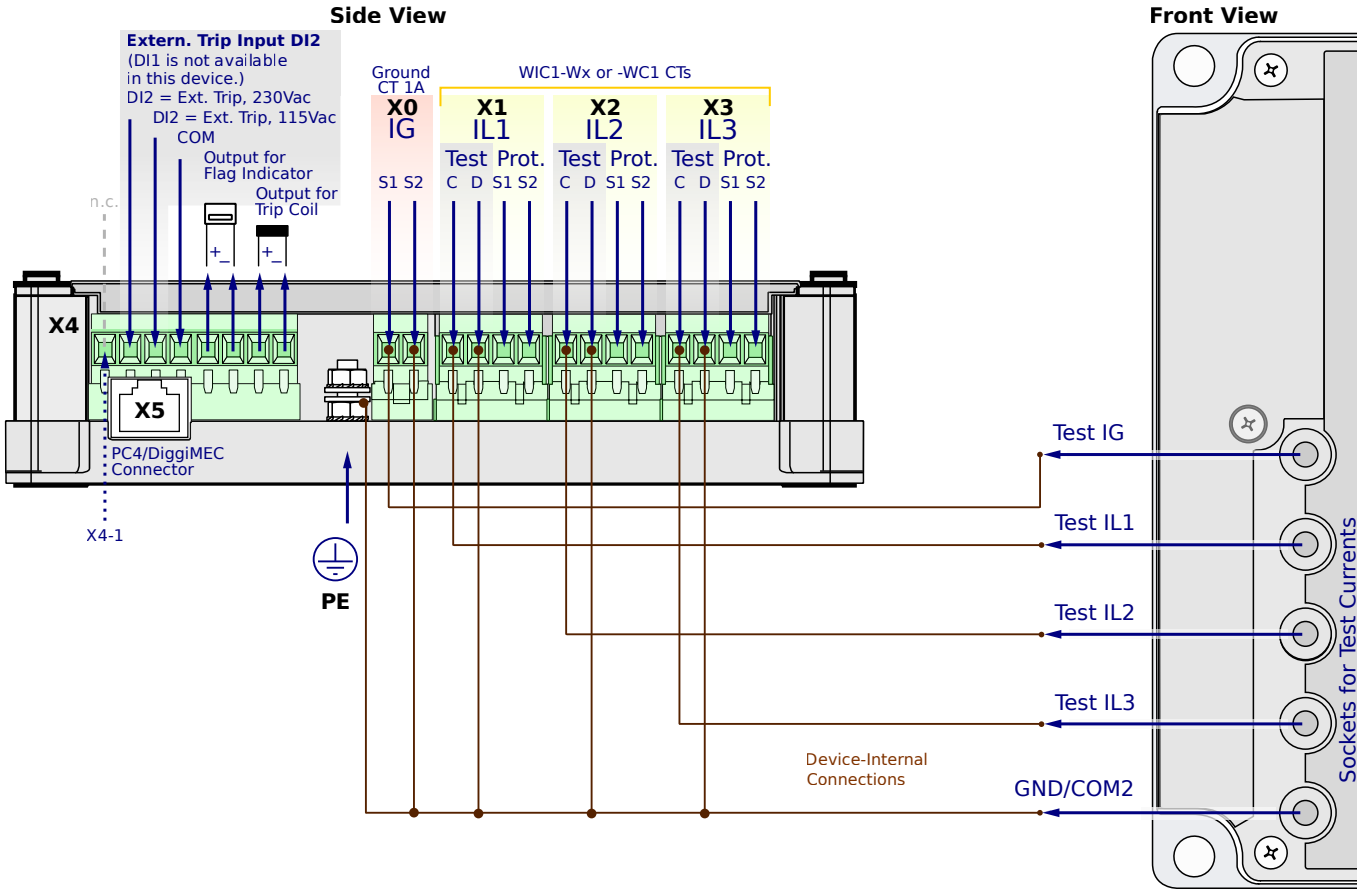


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2AA0

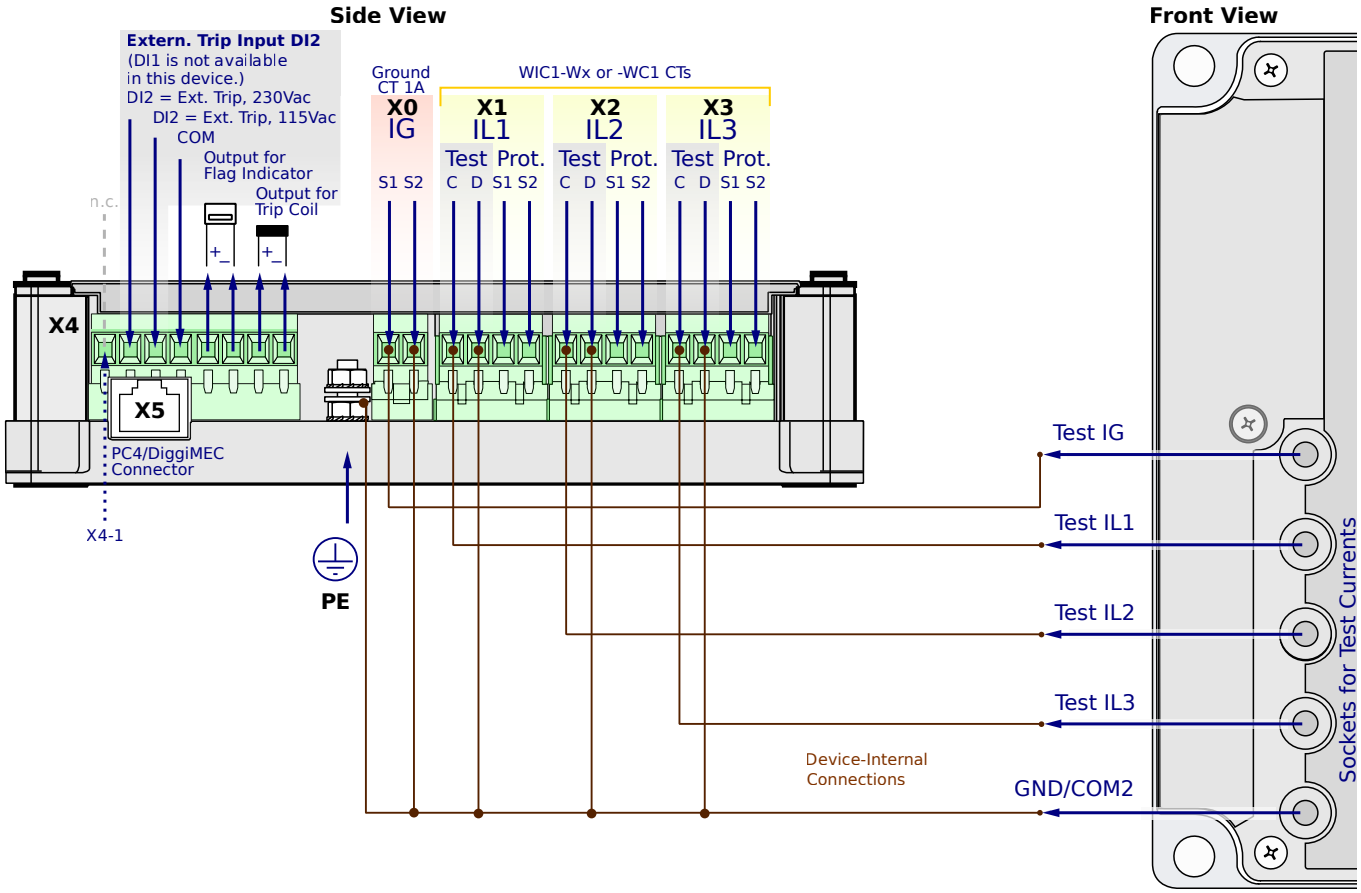


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2AAH

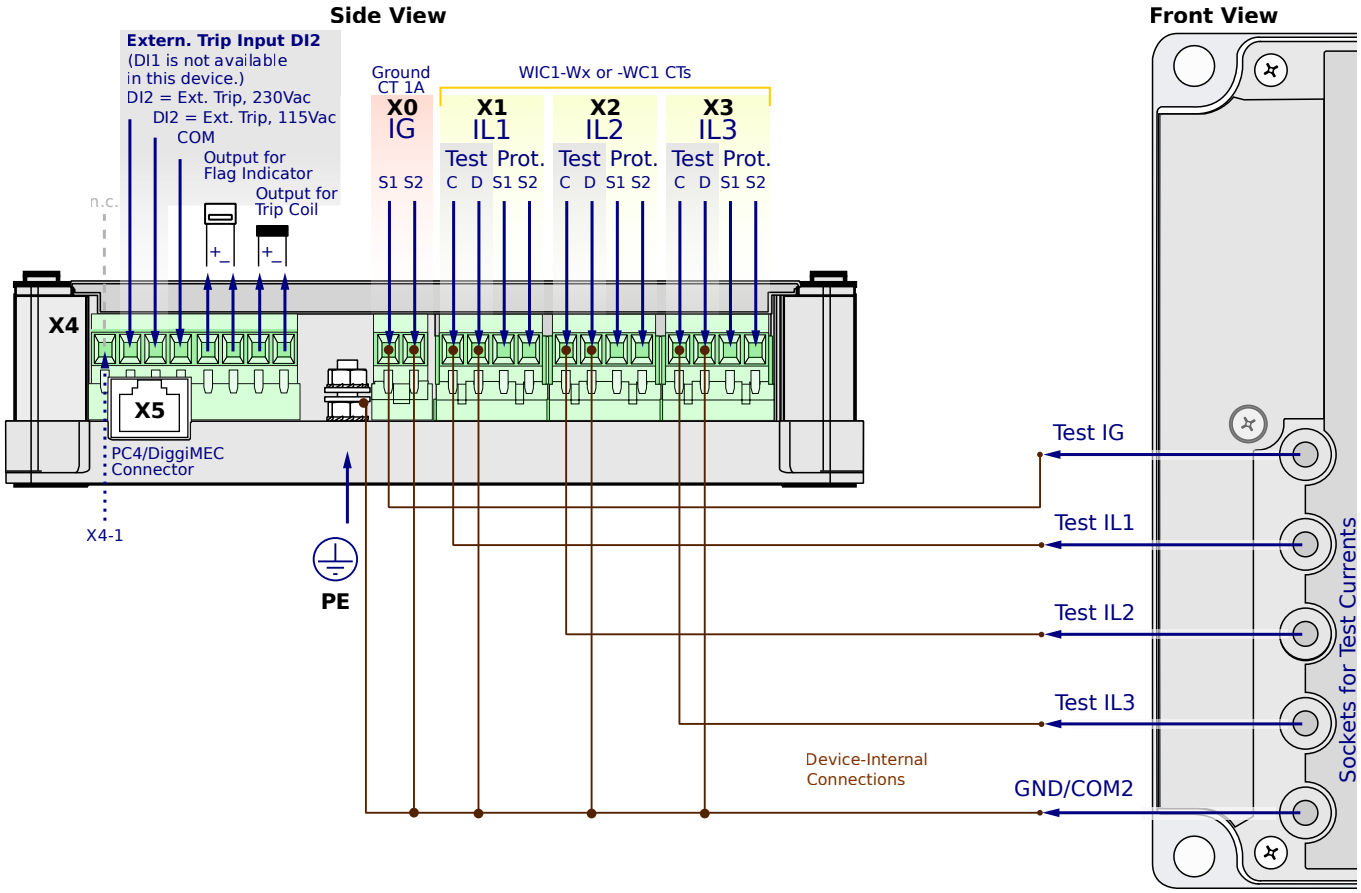


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2PA0

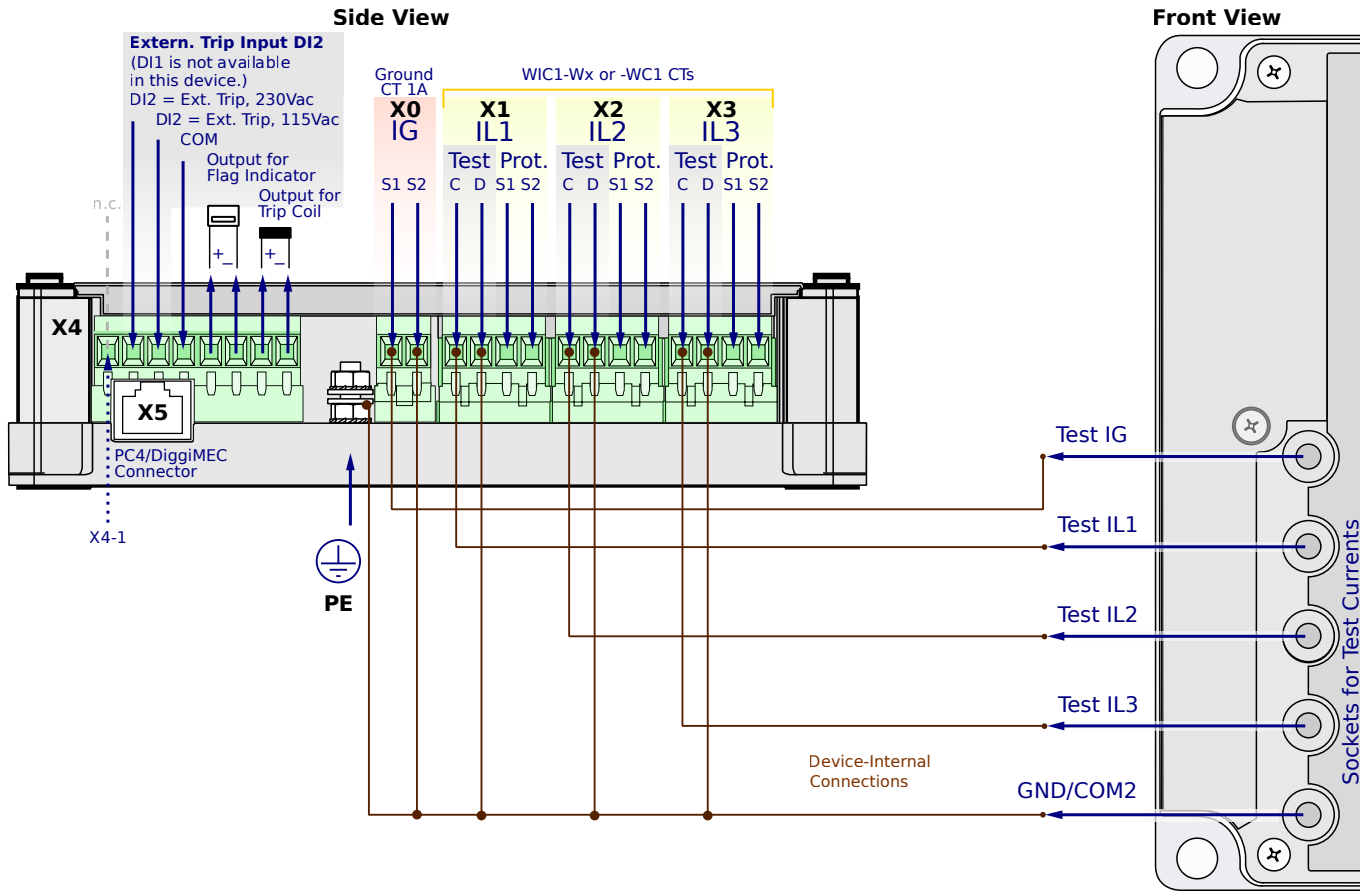


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FF2PAH

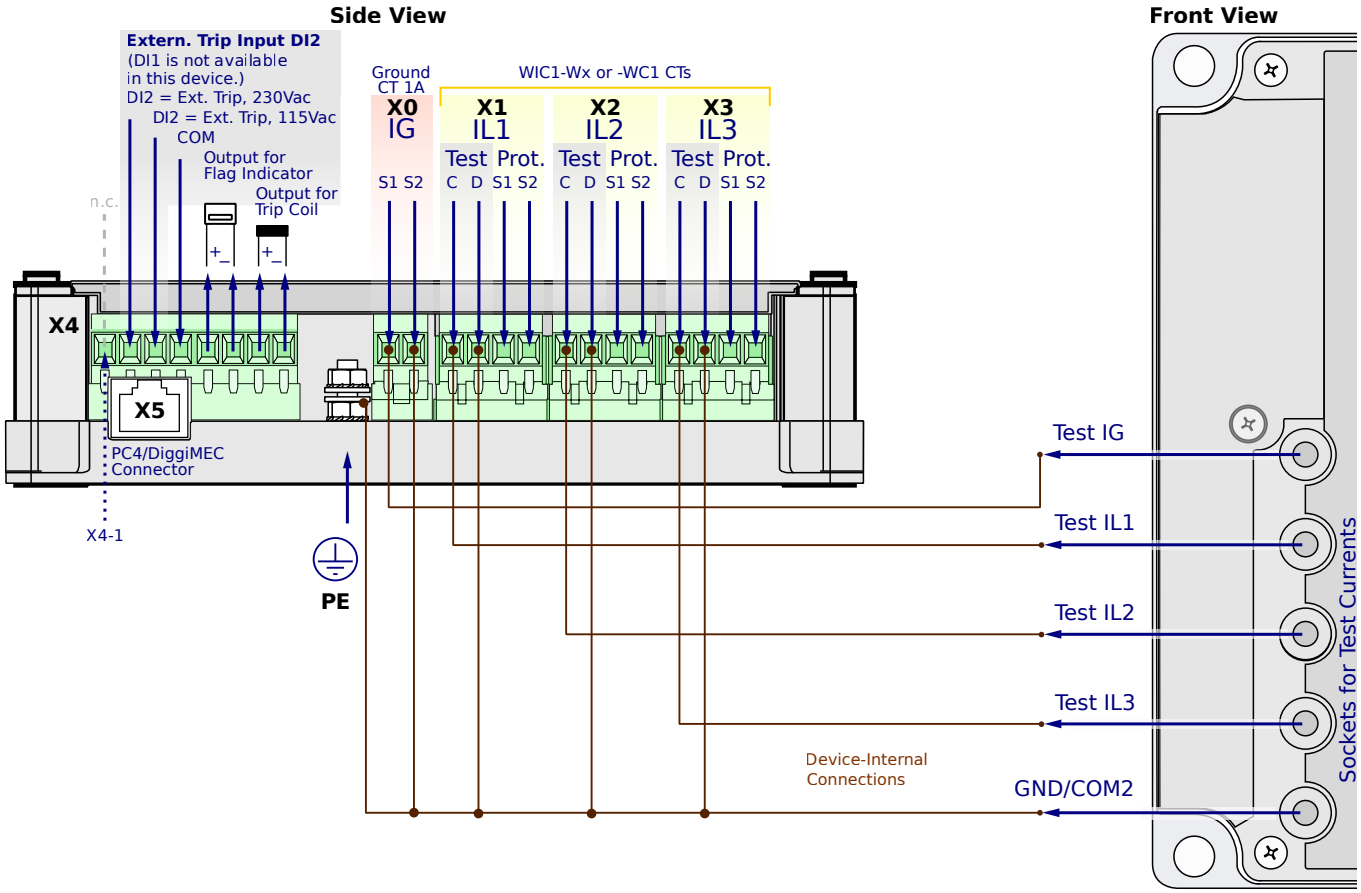


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1SA0

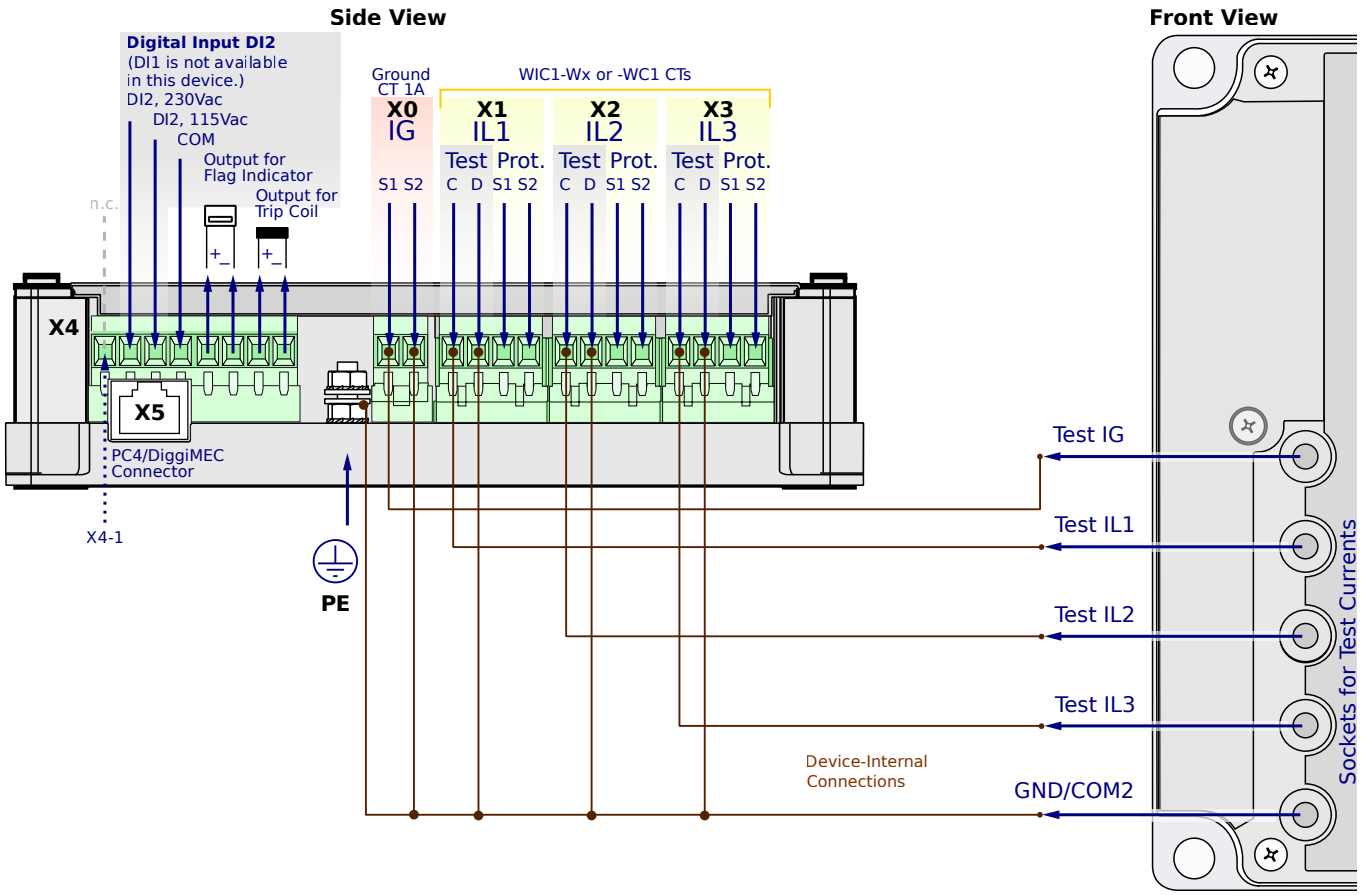


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1SAH

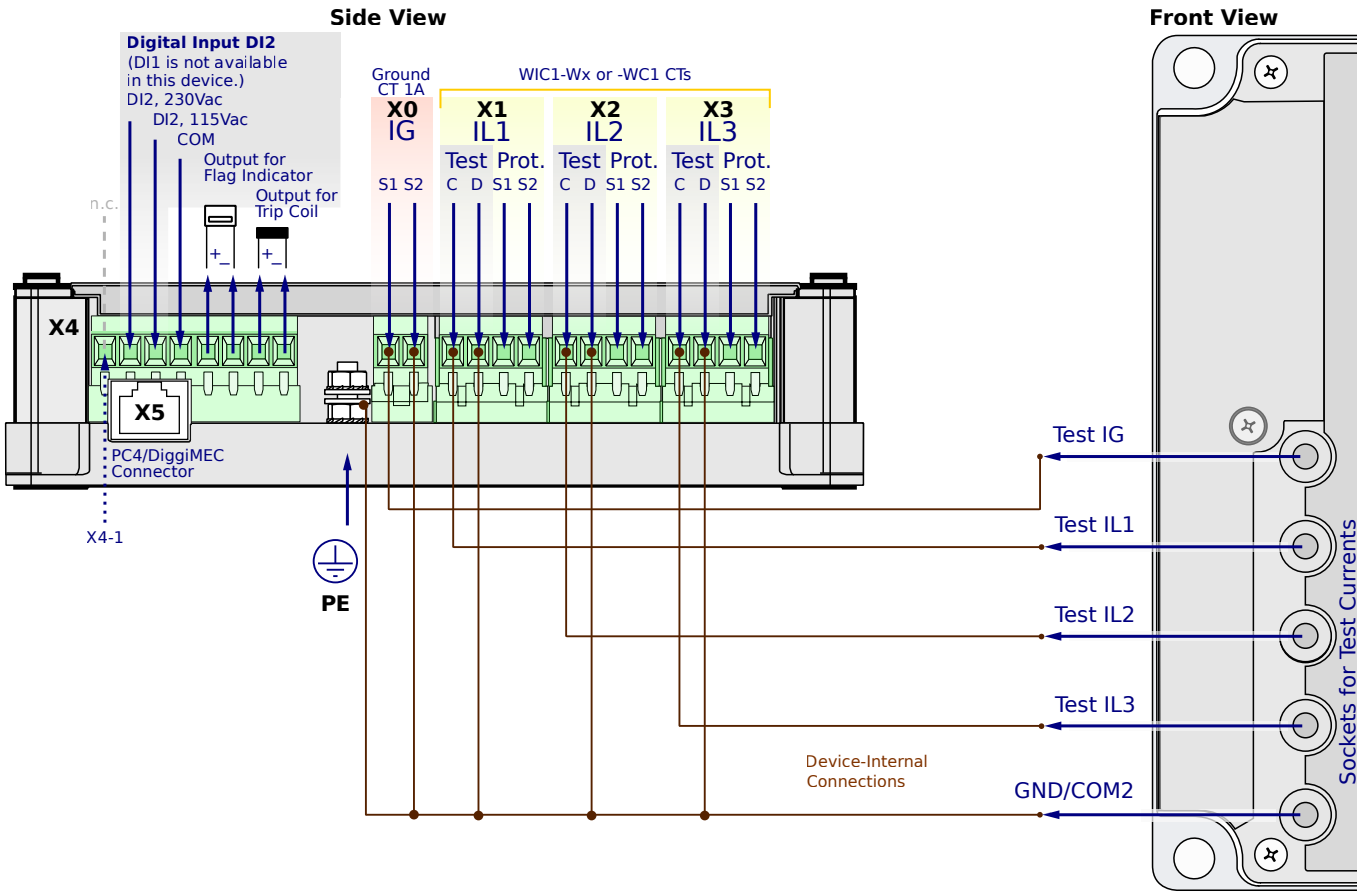


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1AA0

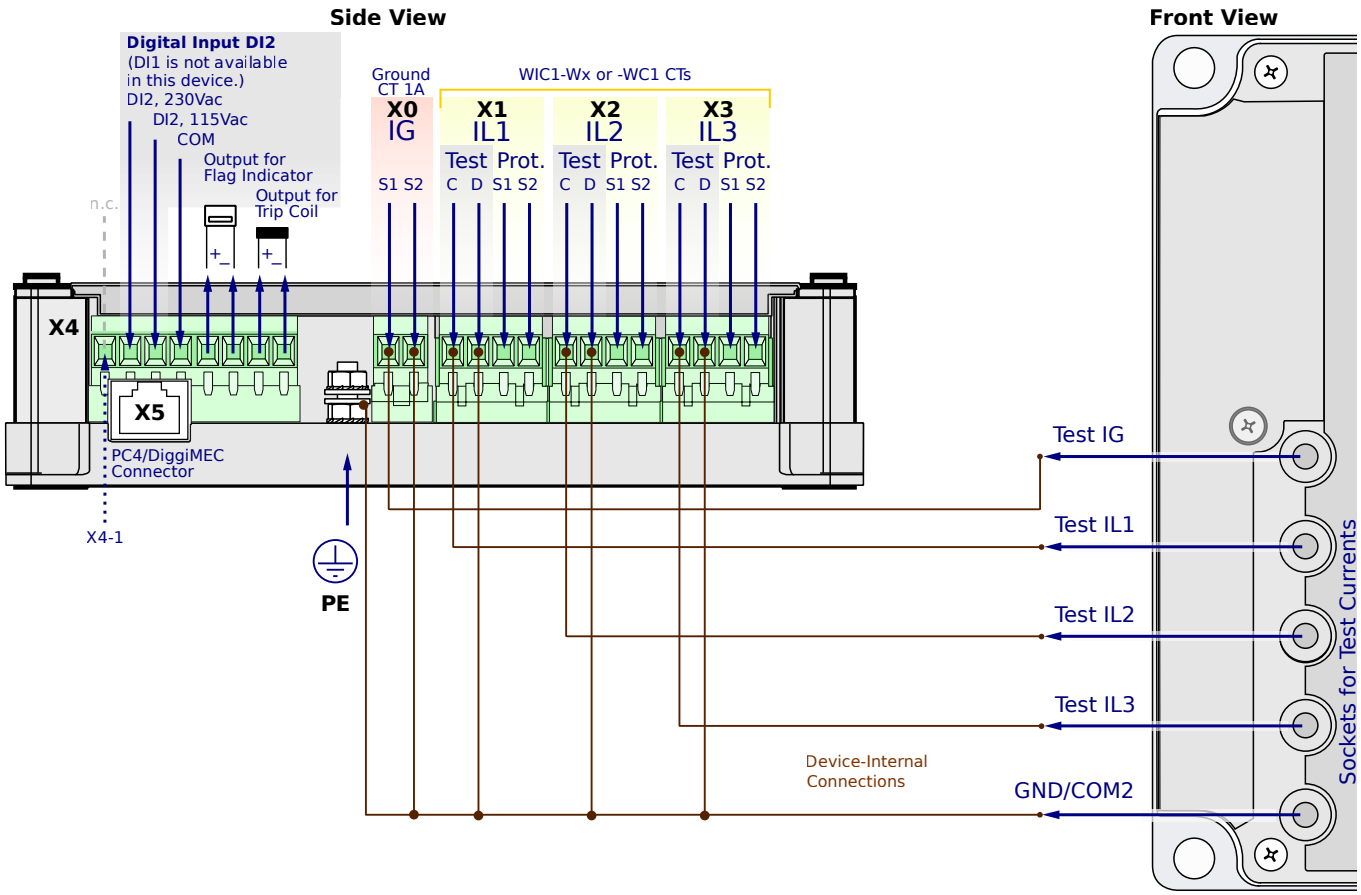


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1AAH

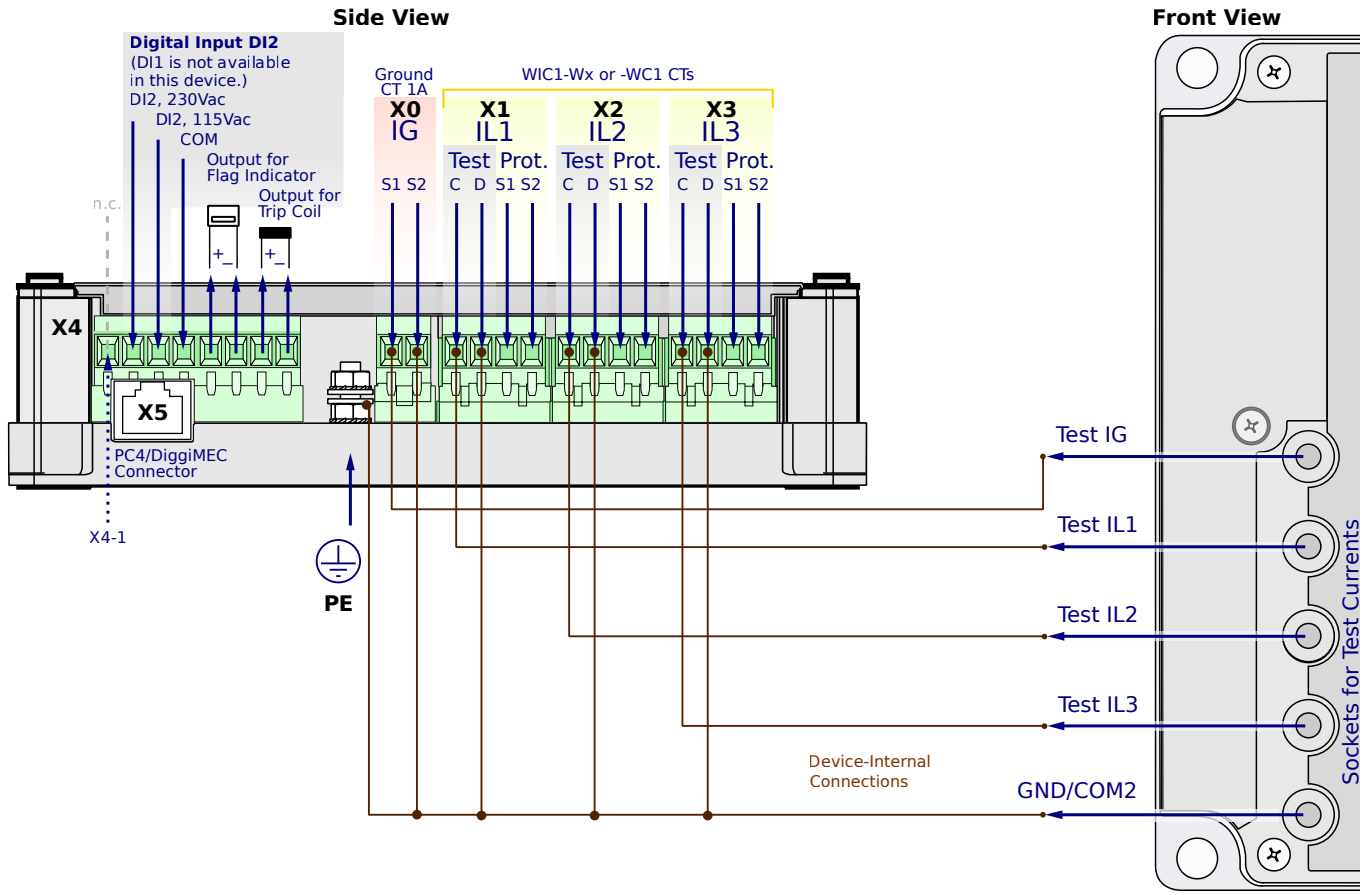


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1PA0

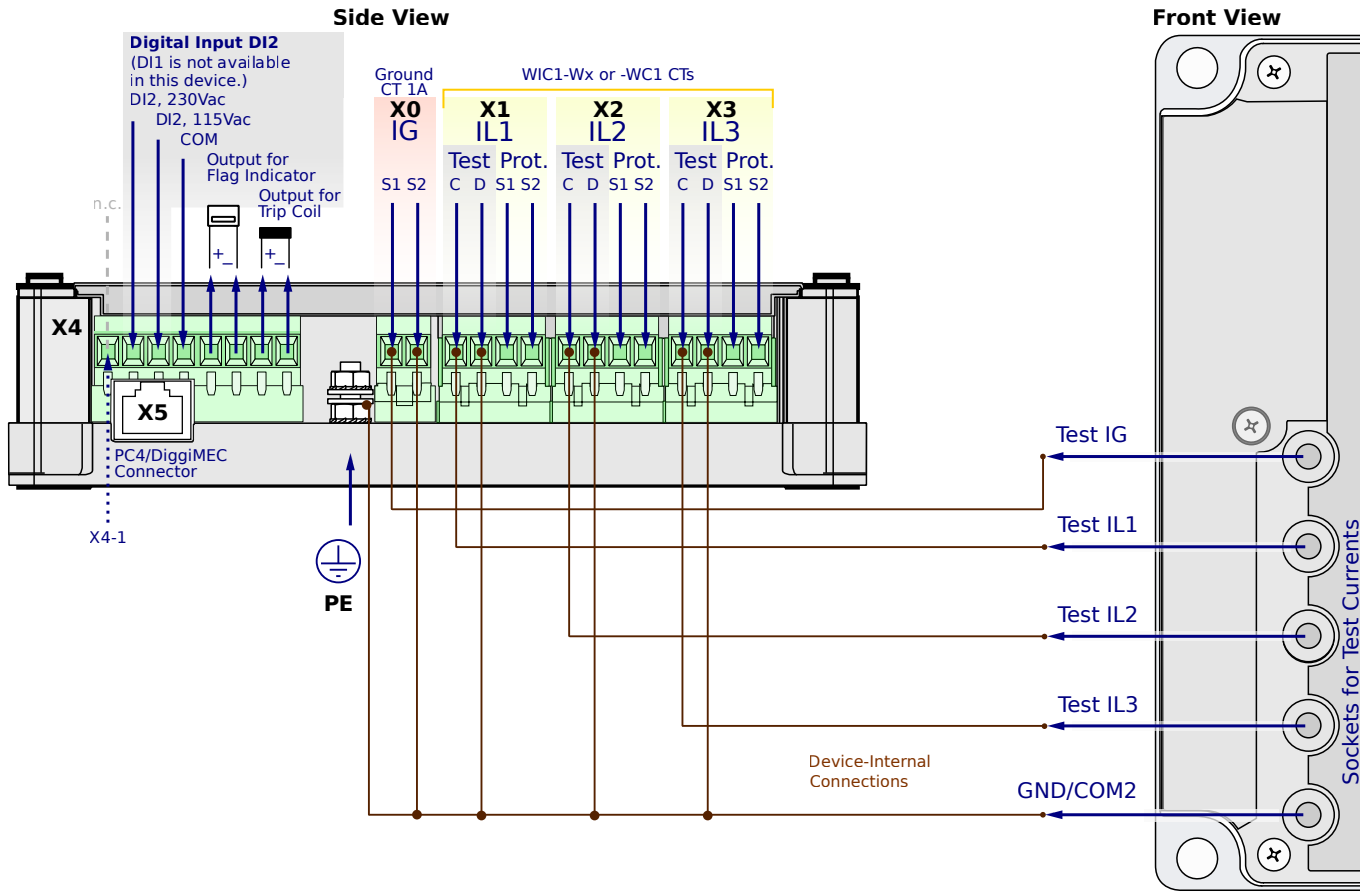


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC1PAH

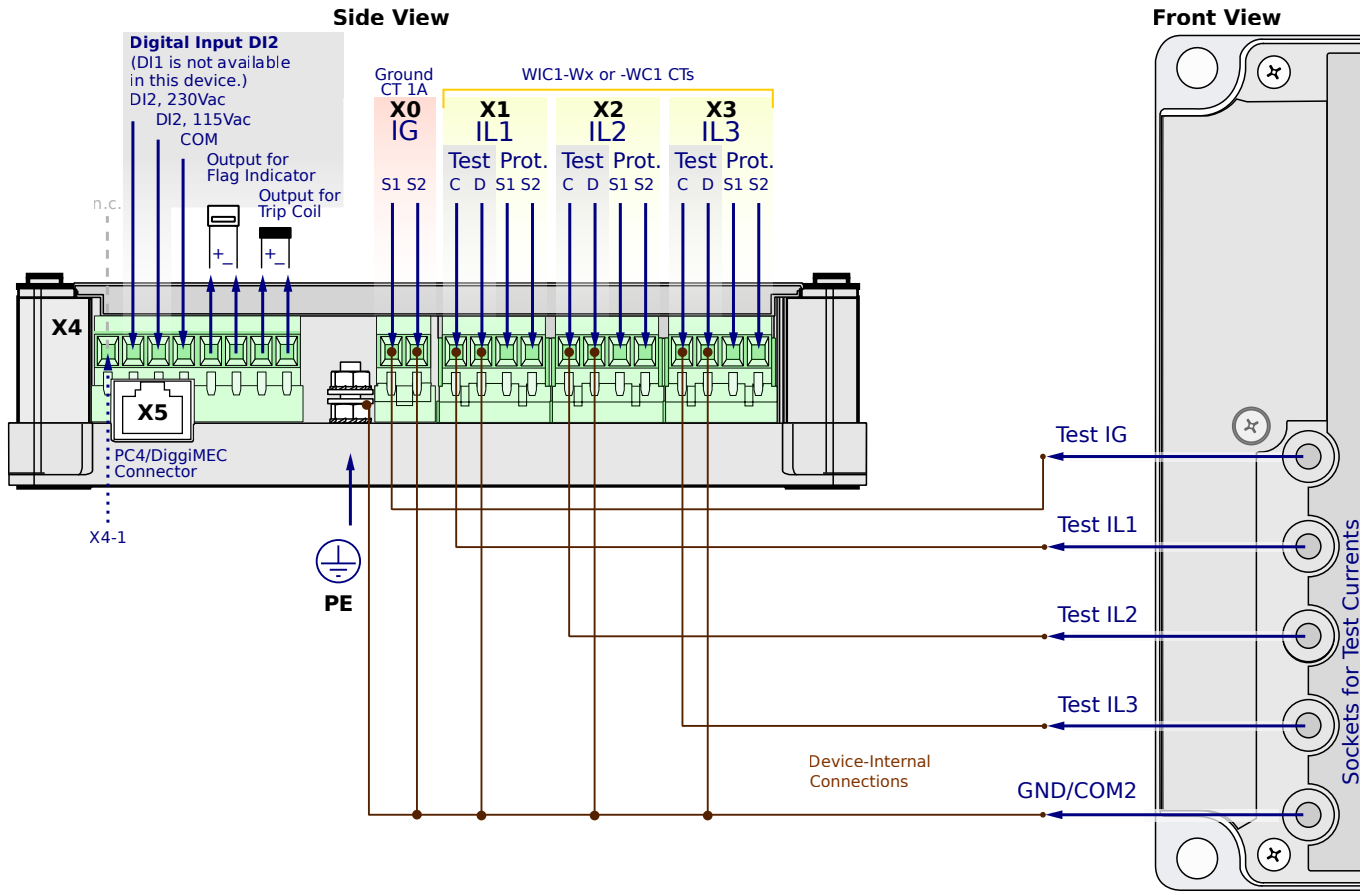


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2SA0

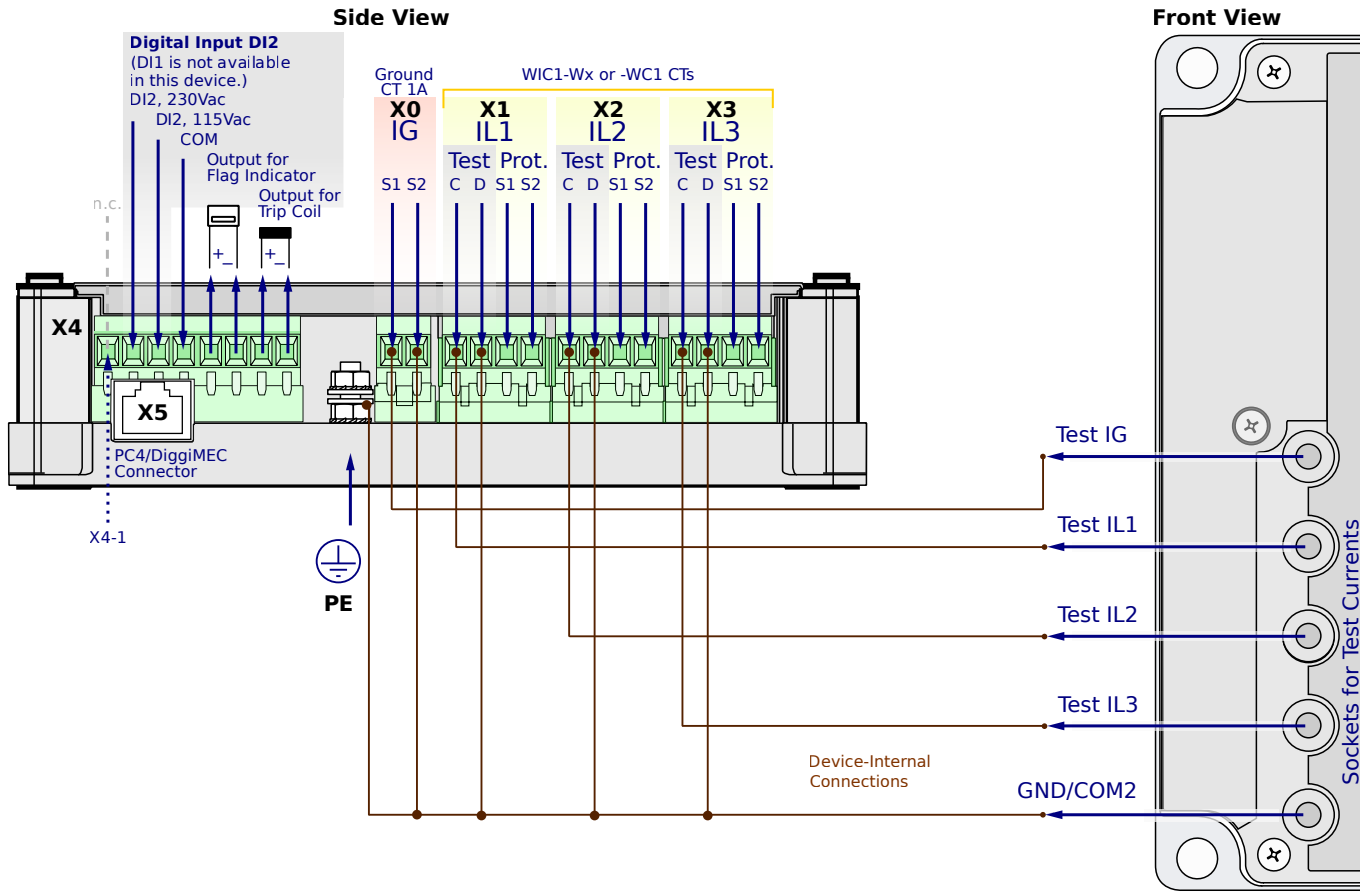


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2SAH

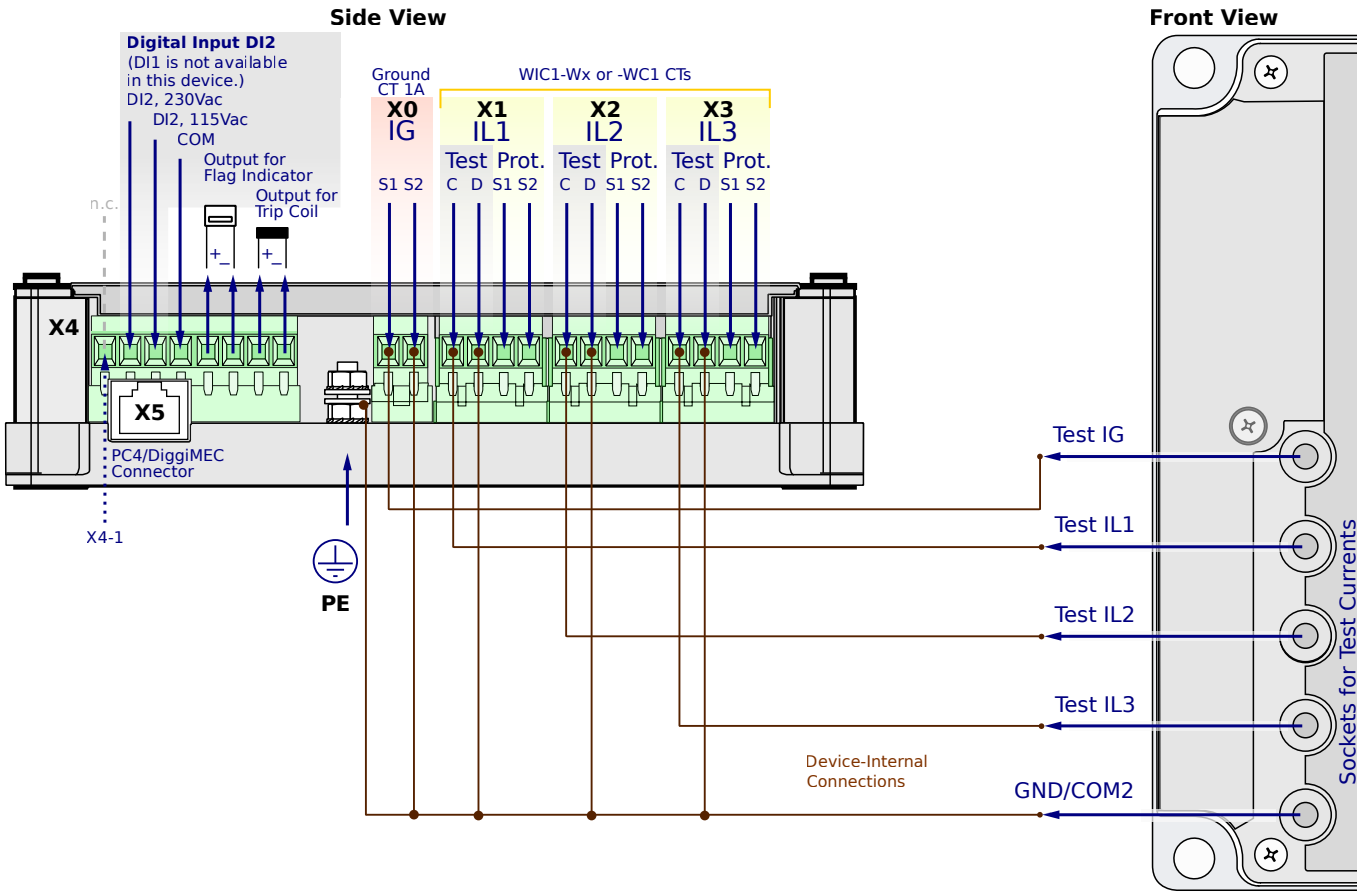


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2AA0

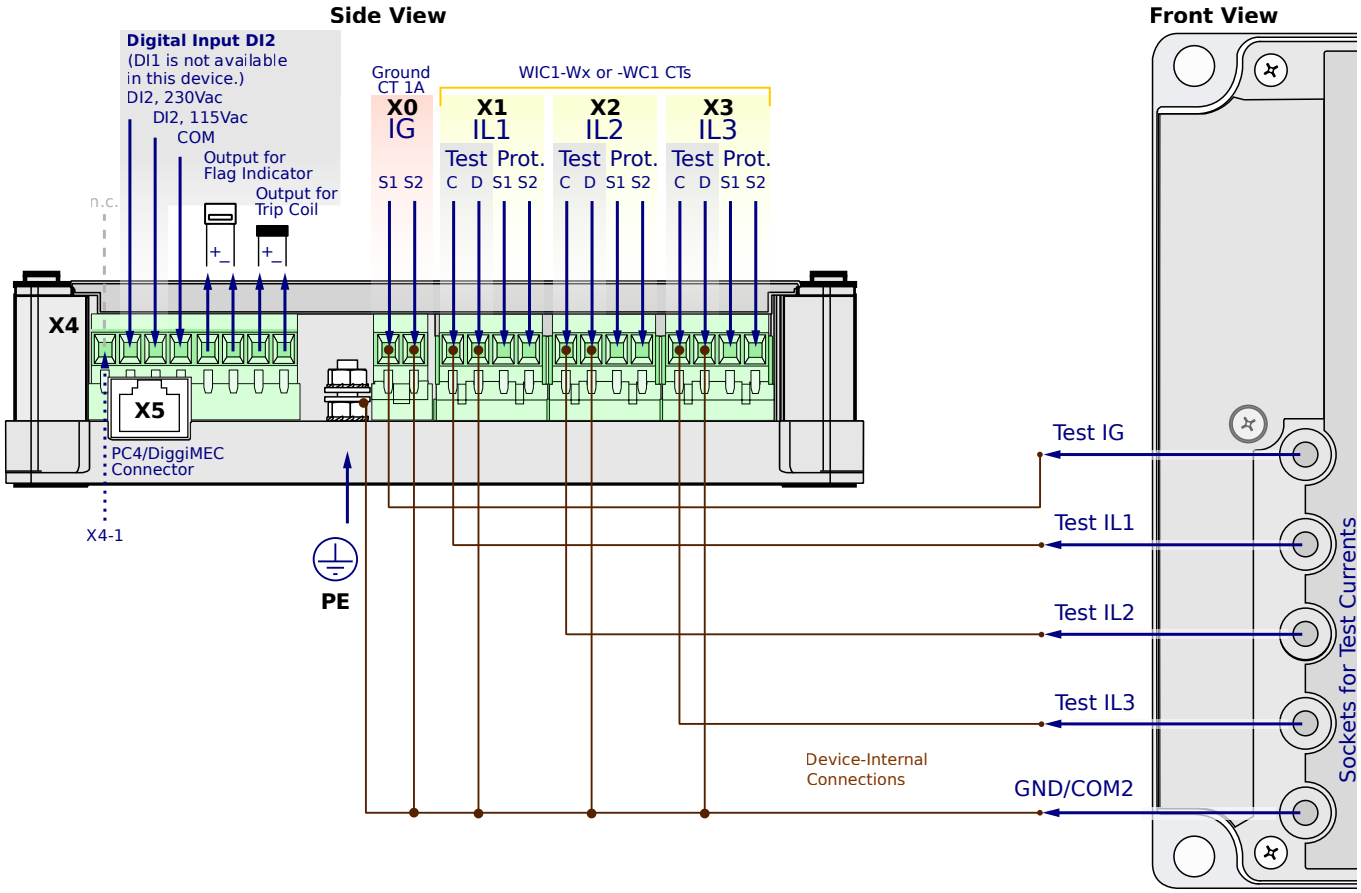


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2AAH

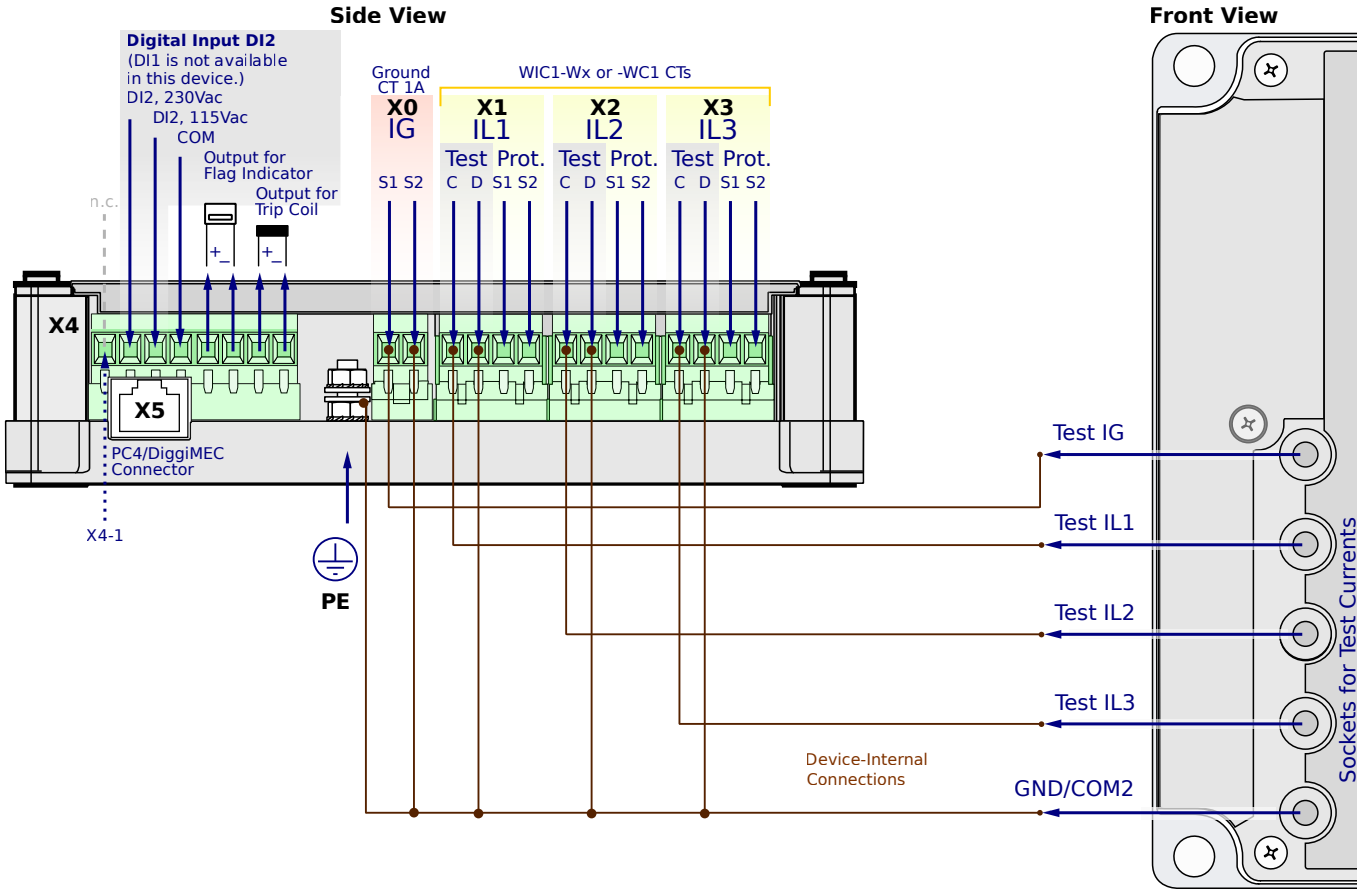


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2PA0

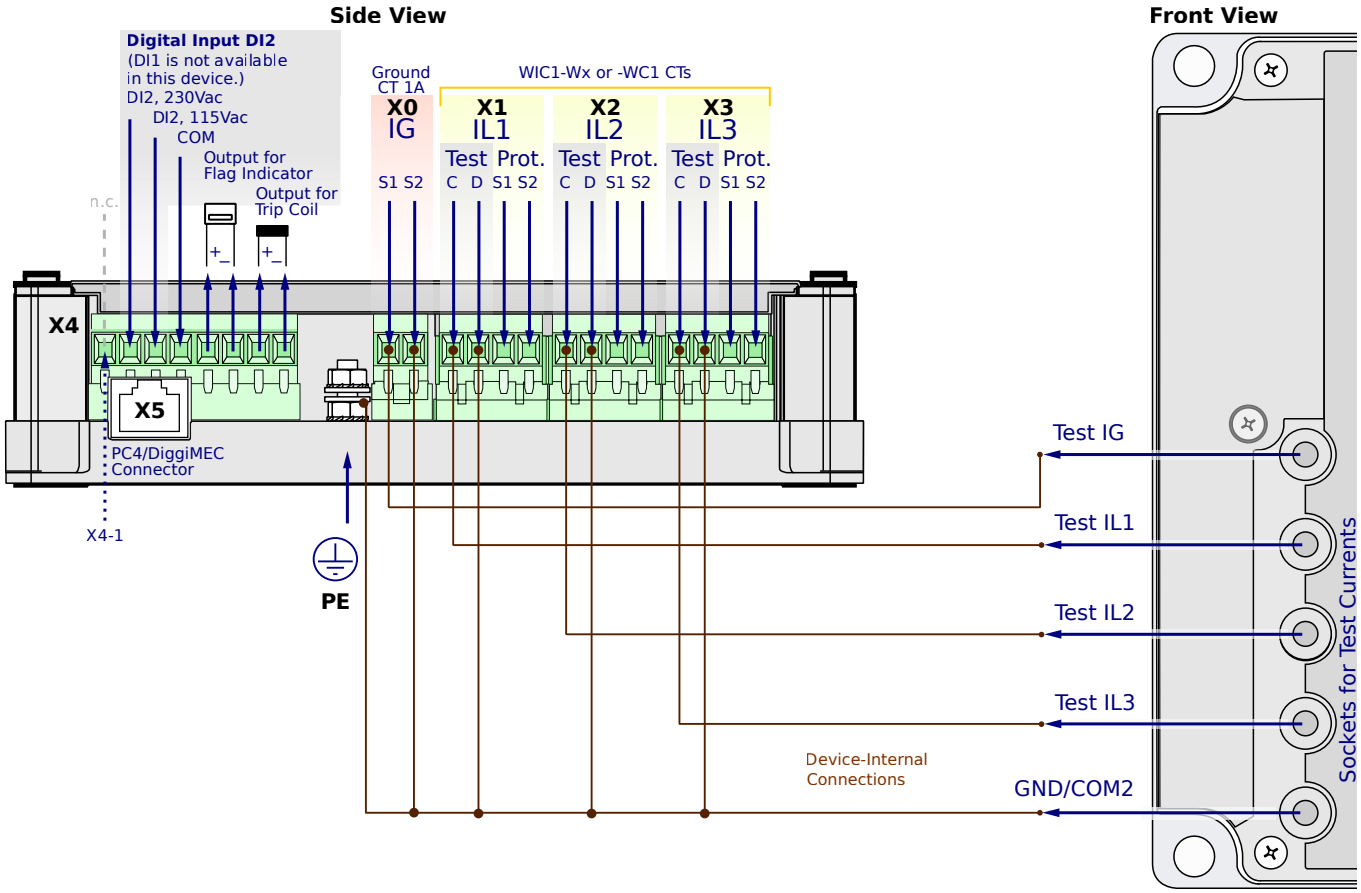


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5FC2PAH

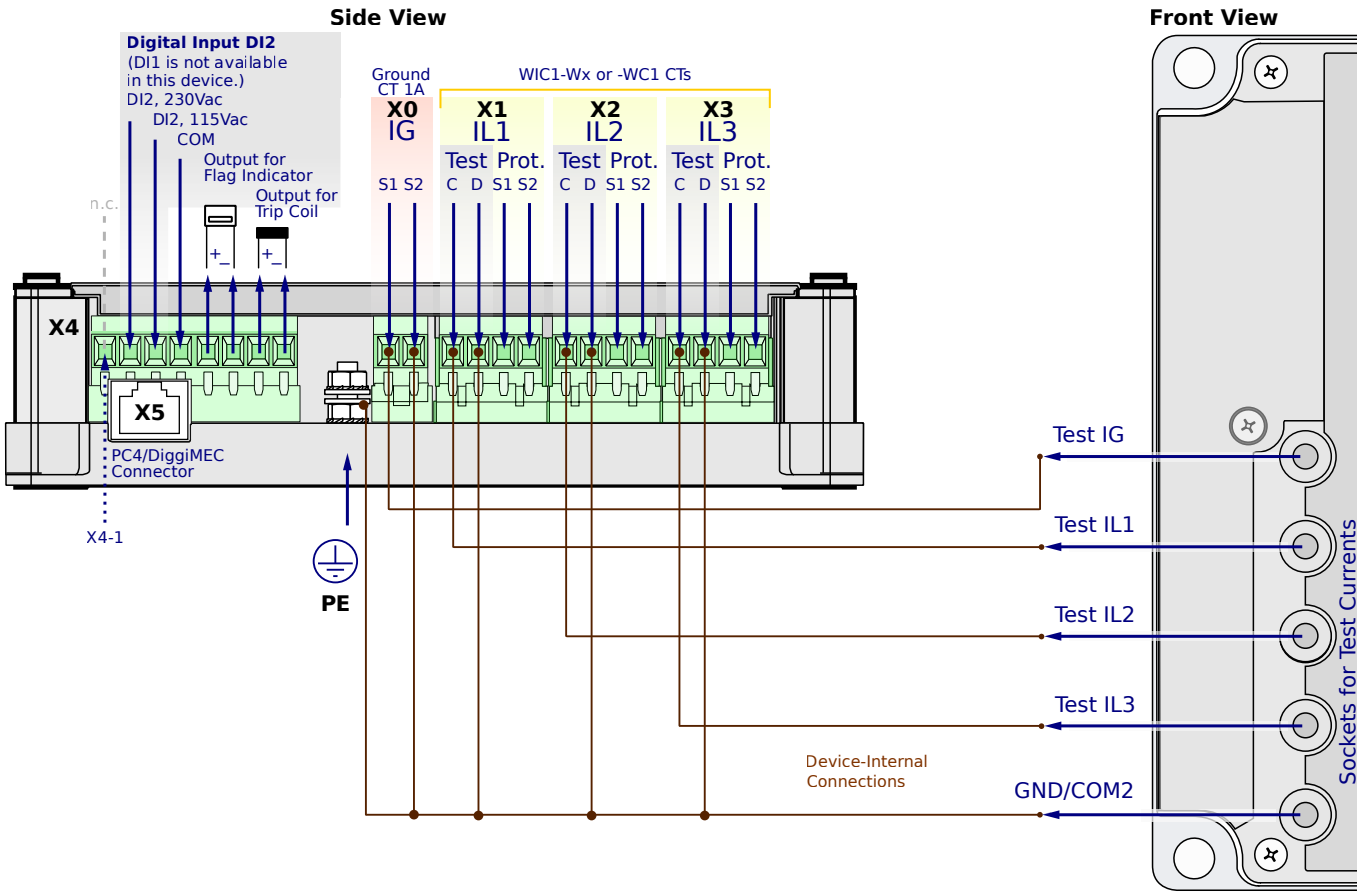


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1SA0

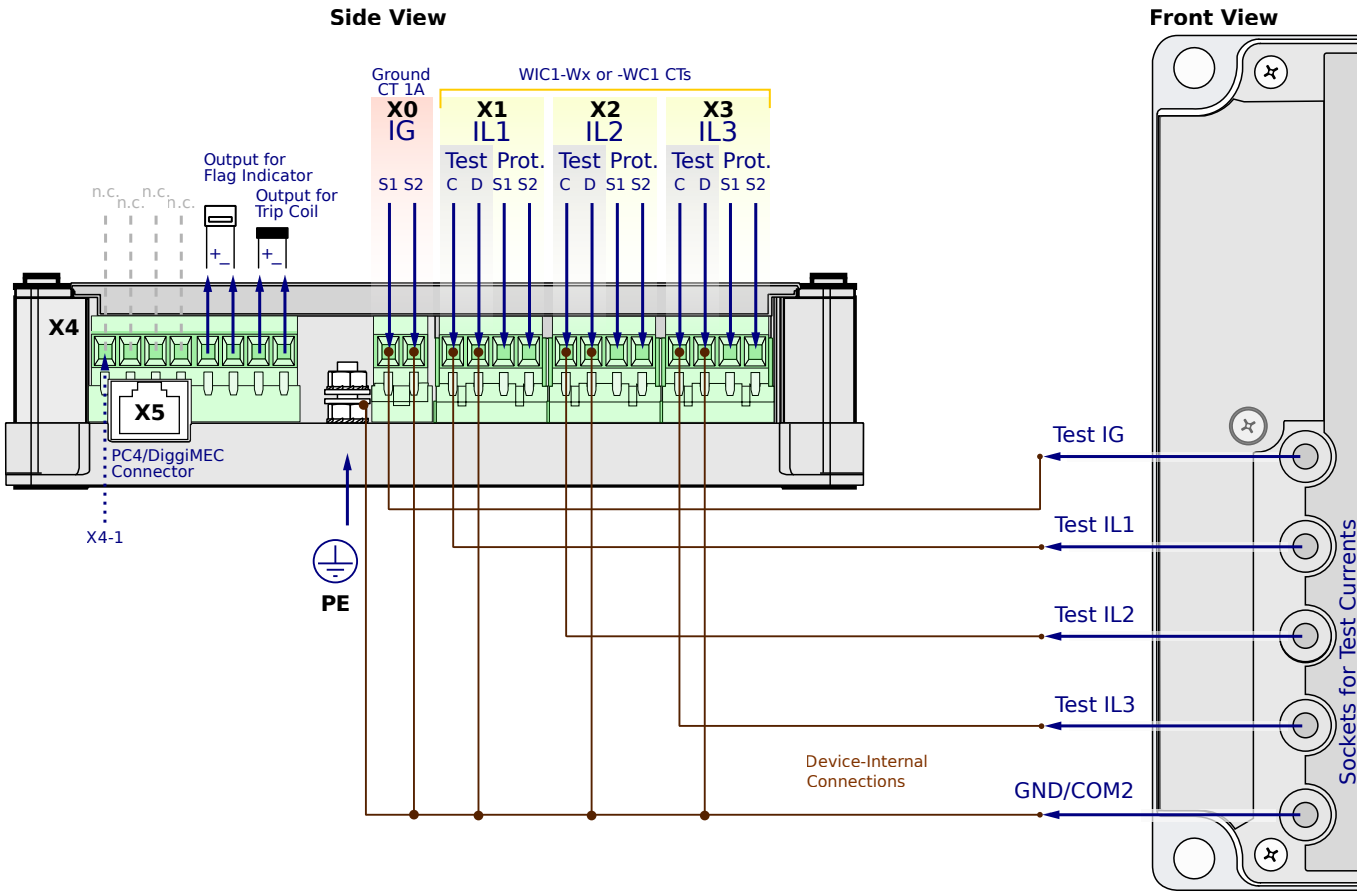


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1SAH

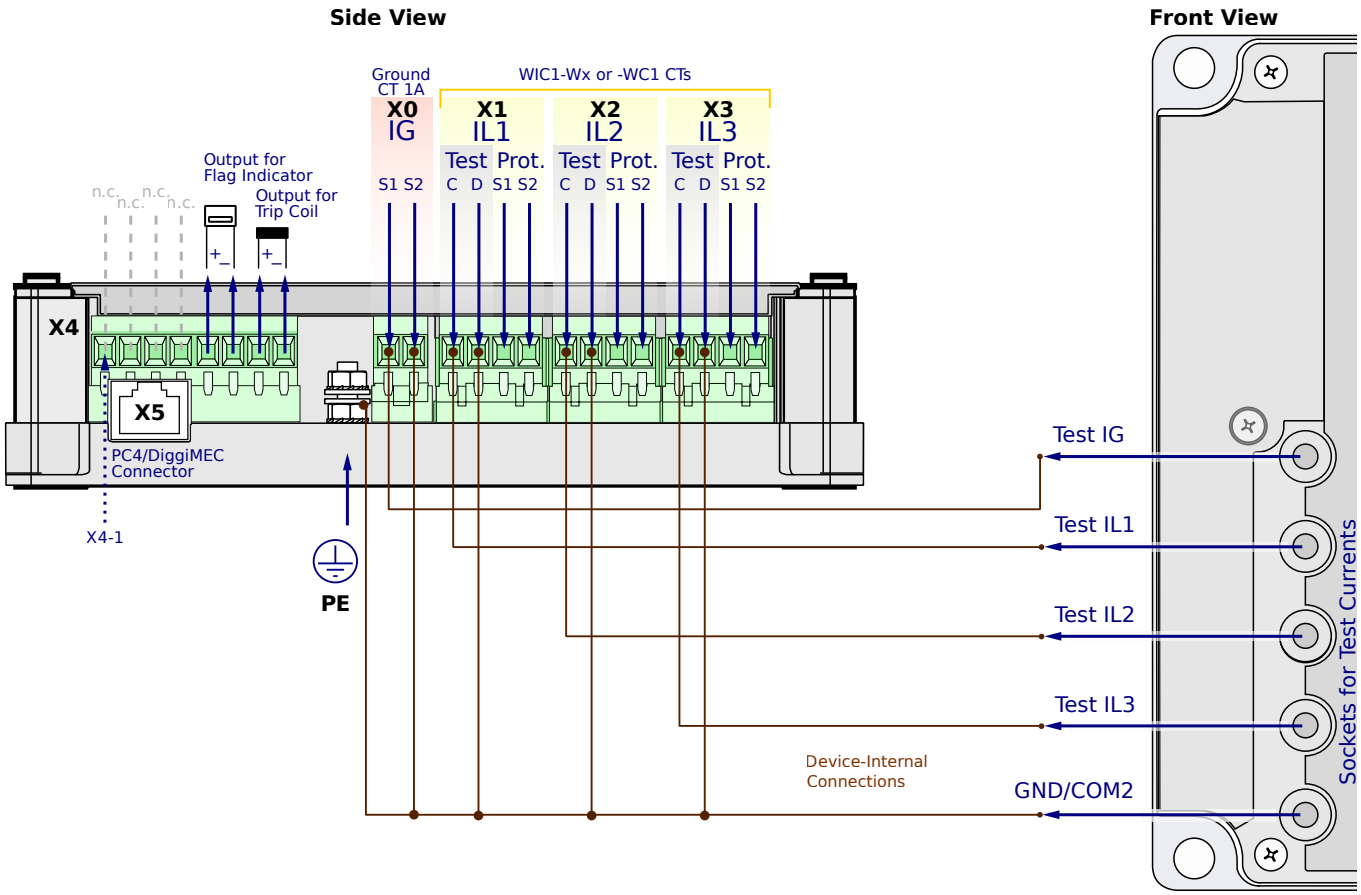


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1AA0

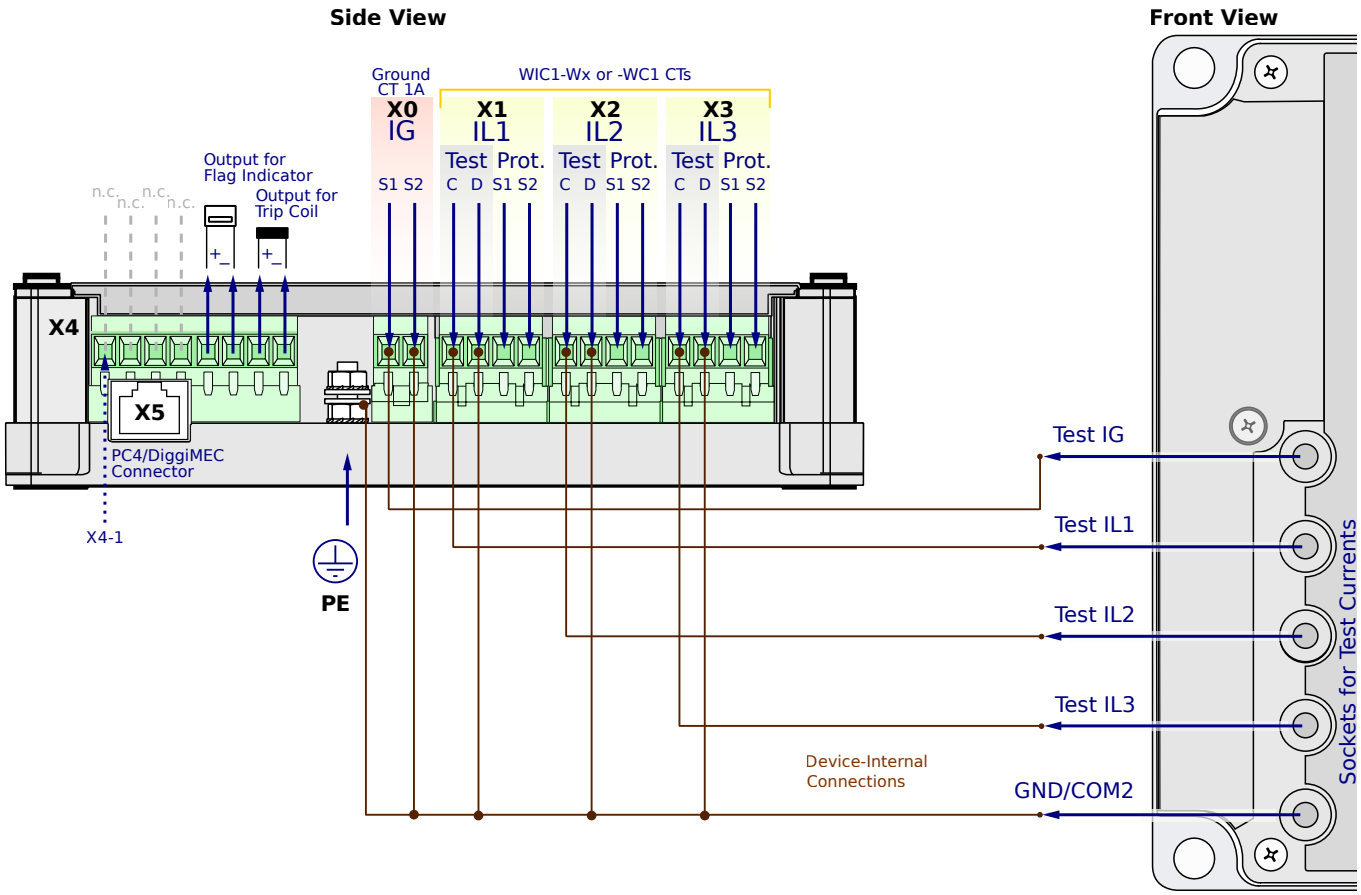


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1AAH

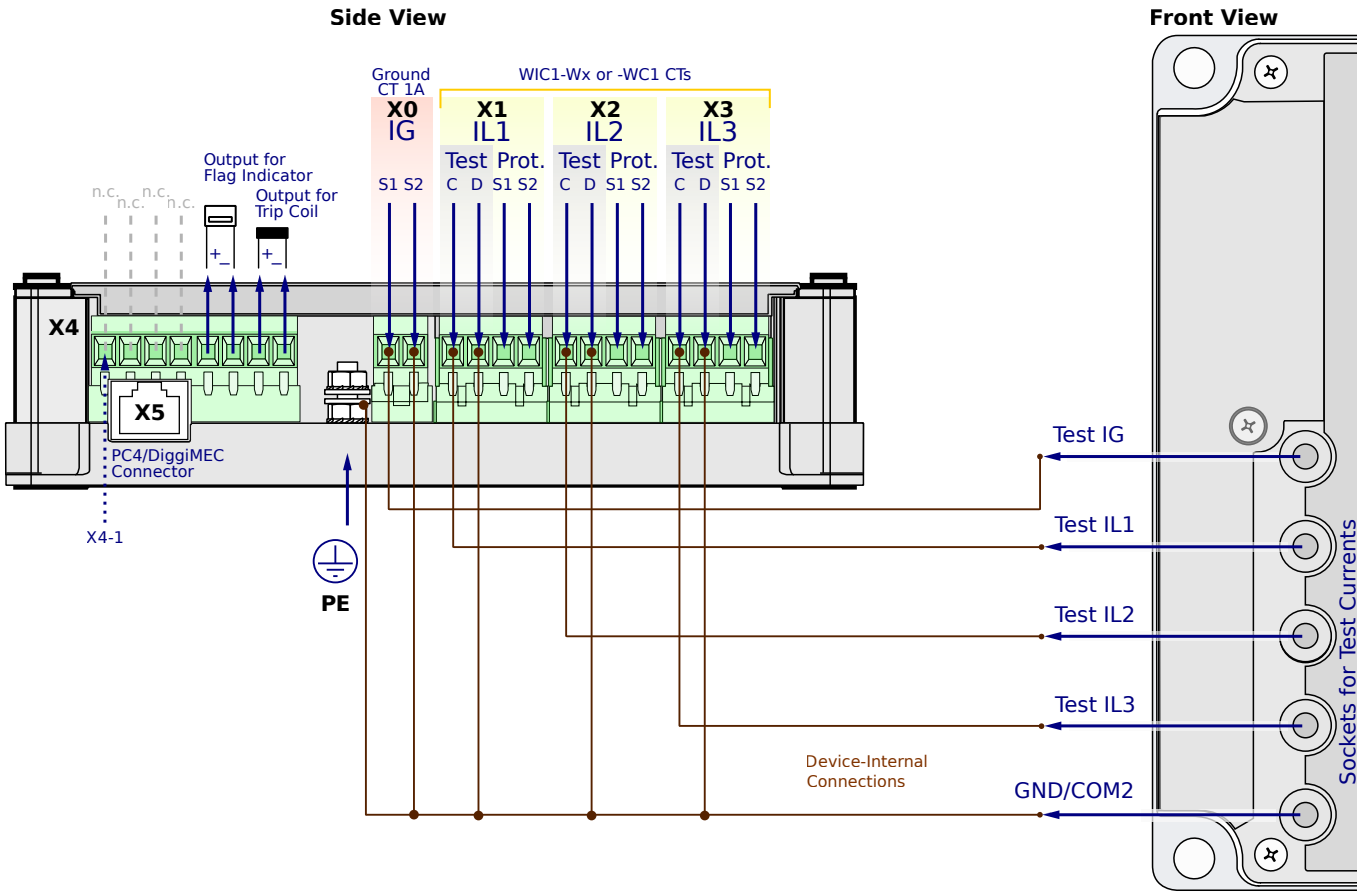


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1PA0

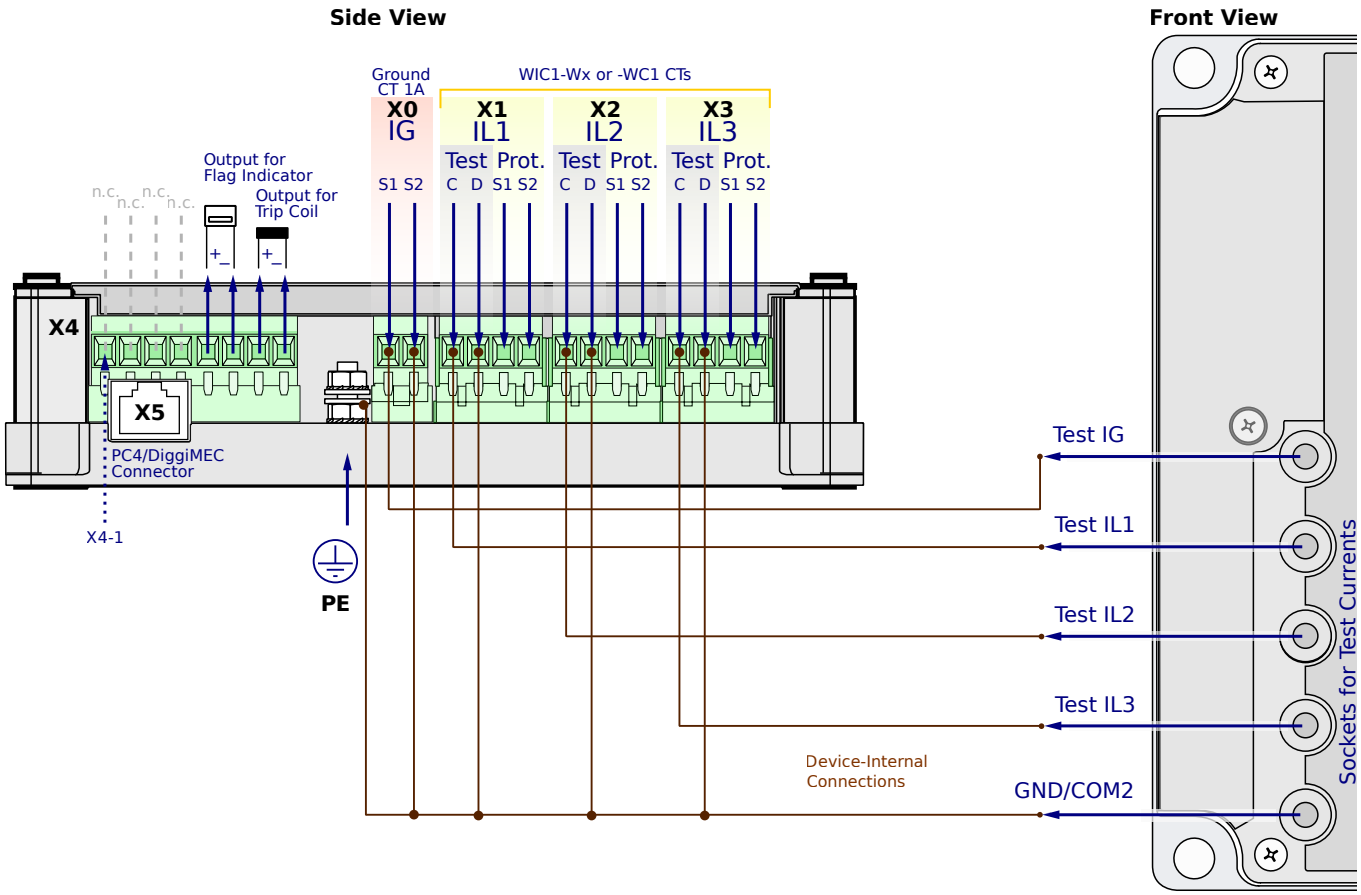


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN1PAH

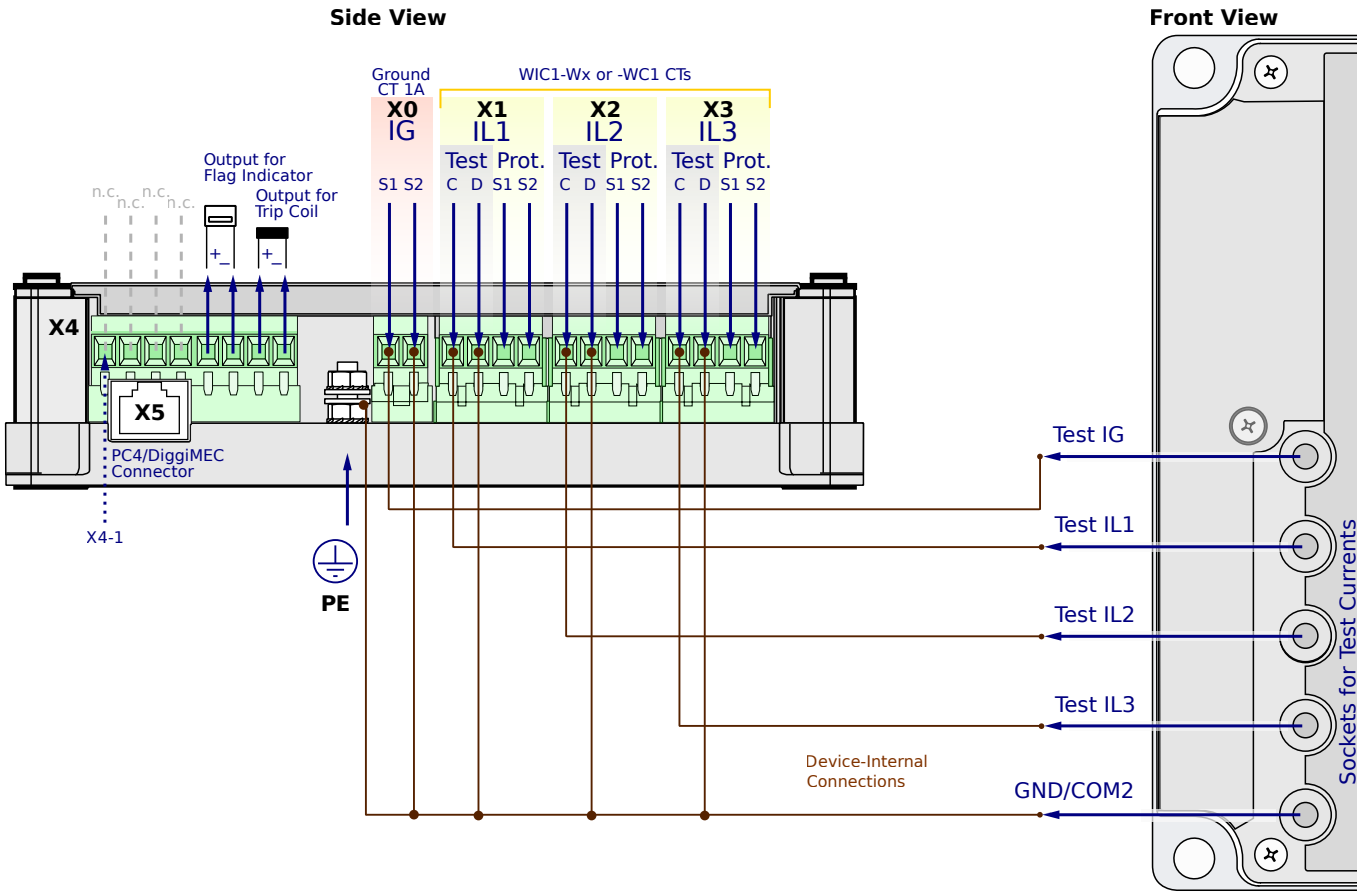


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2SA0

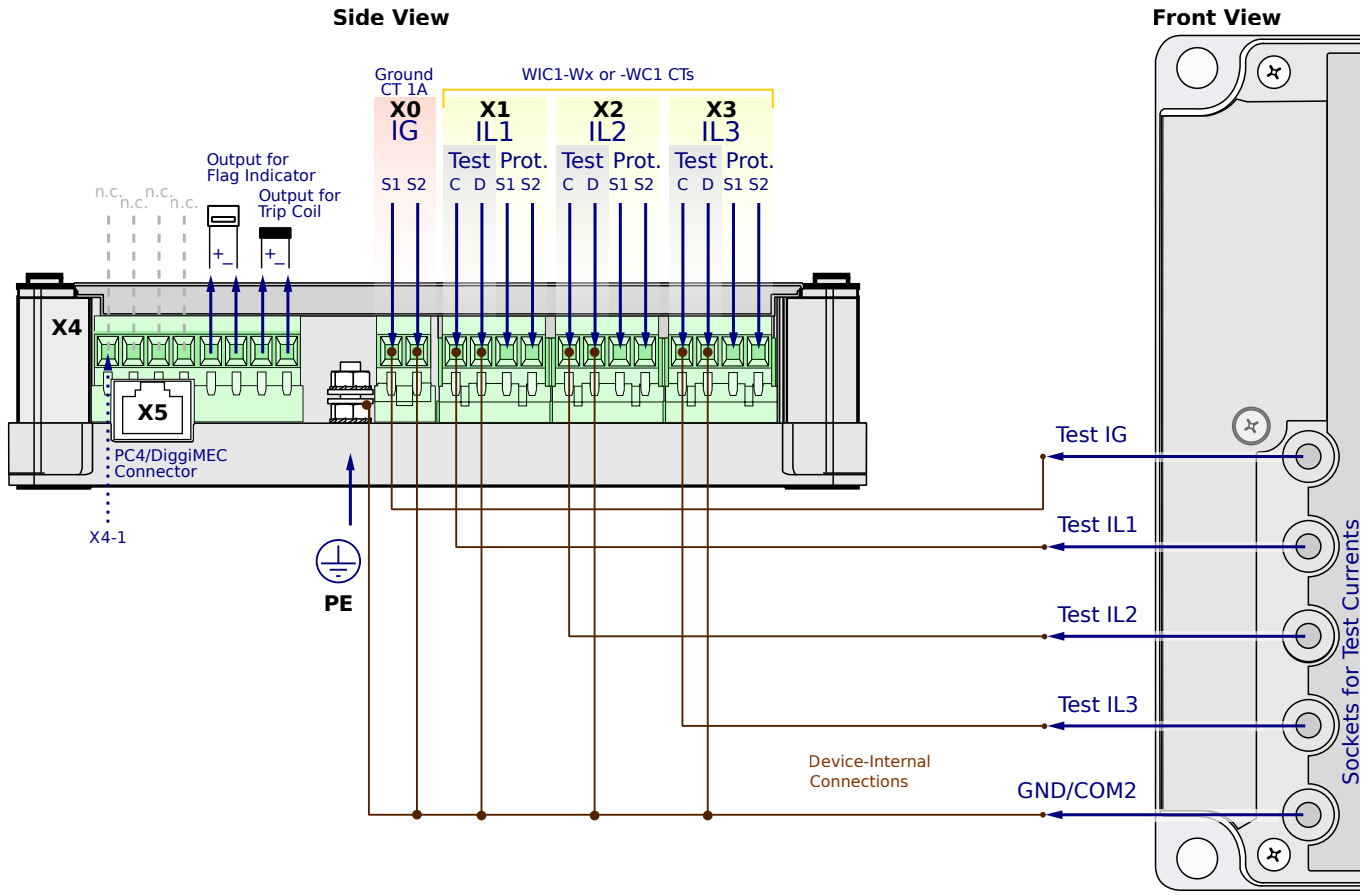


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2SAH

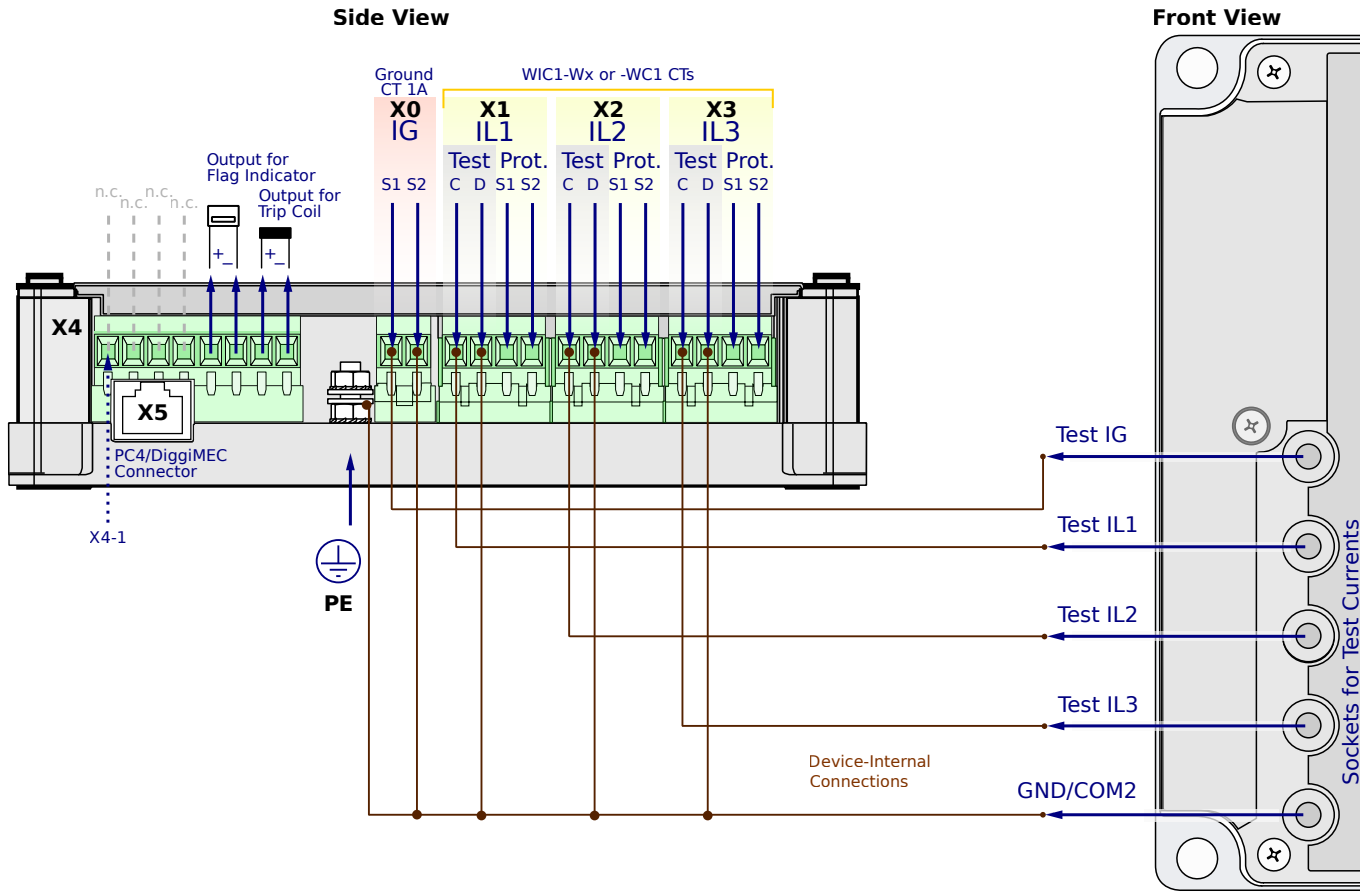


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2AA0

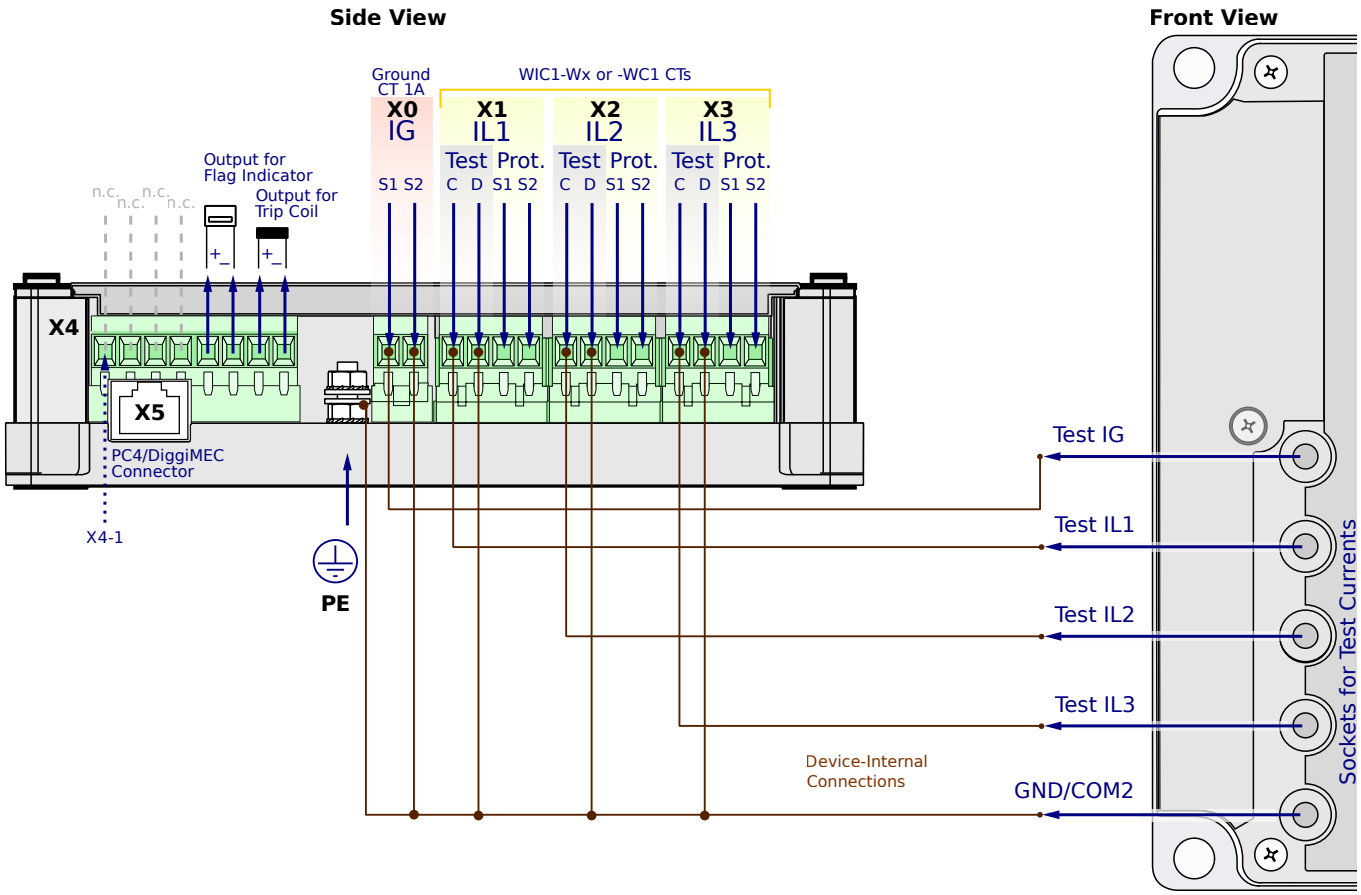


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2AAH

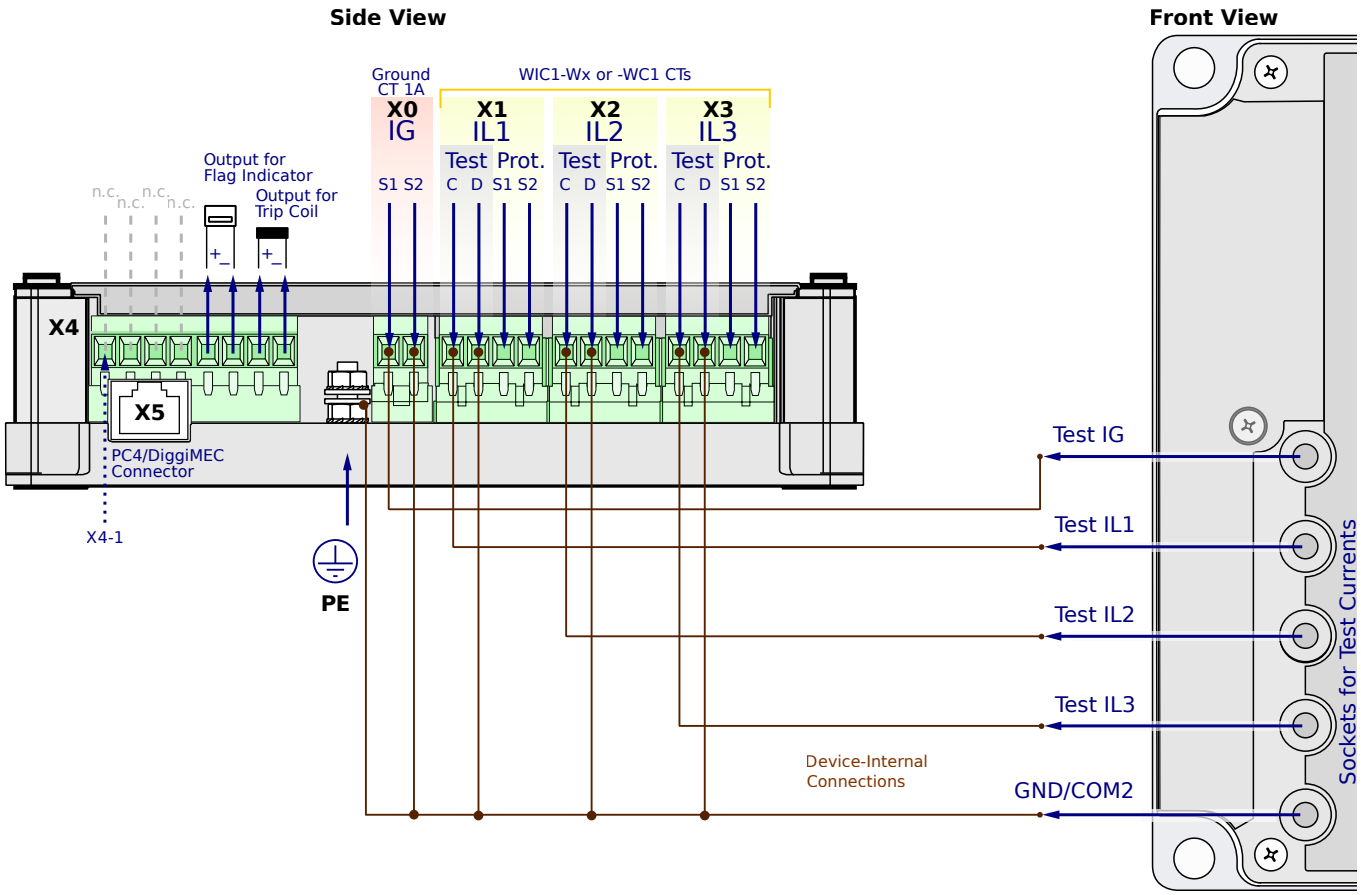


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2PA0

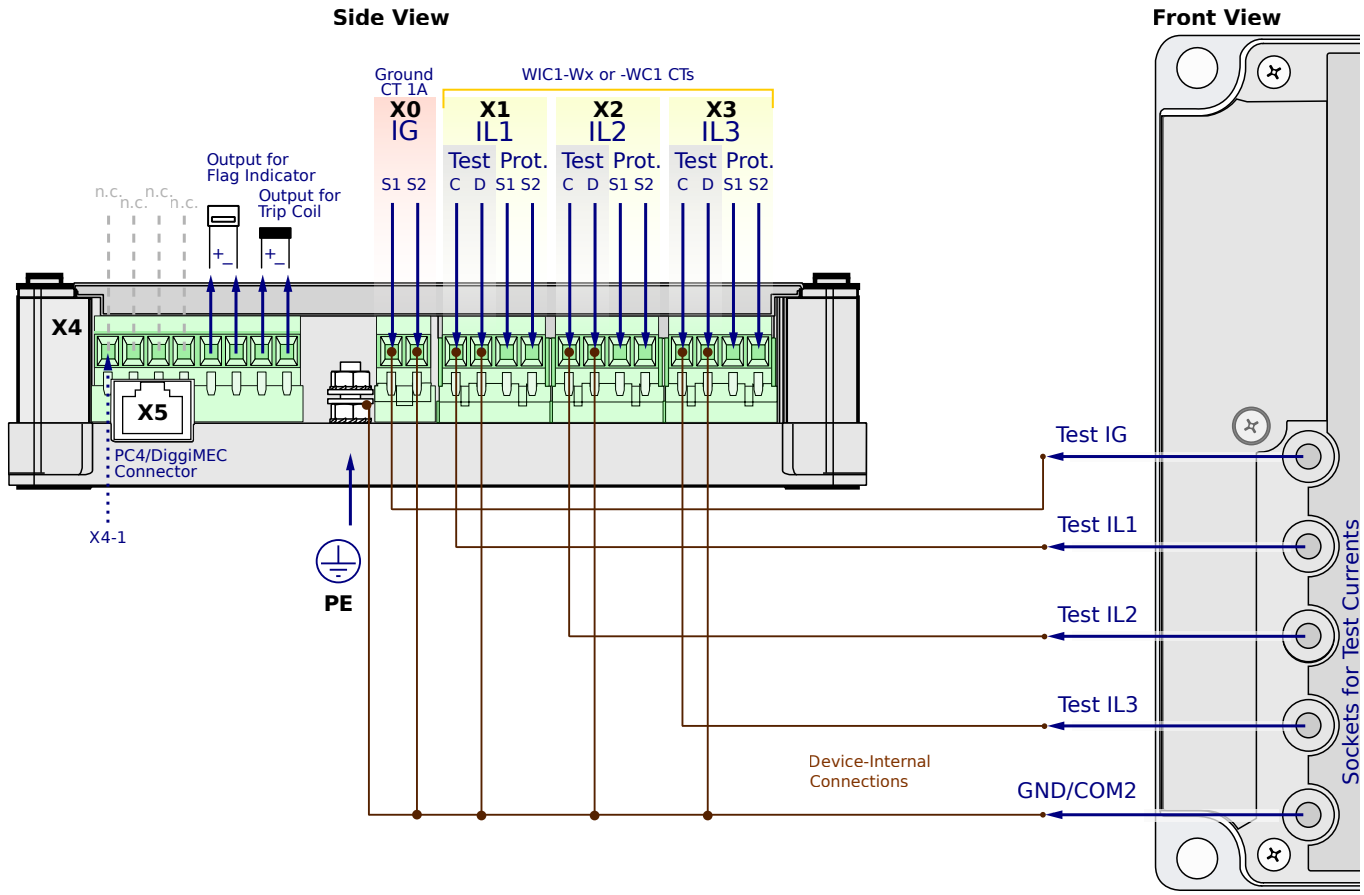


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CN2PAH

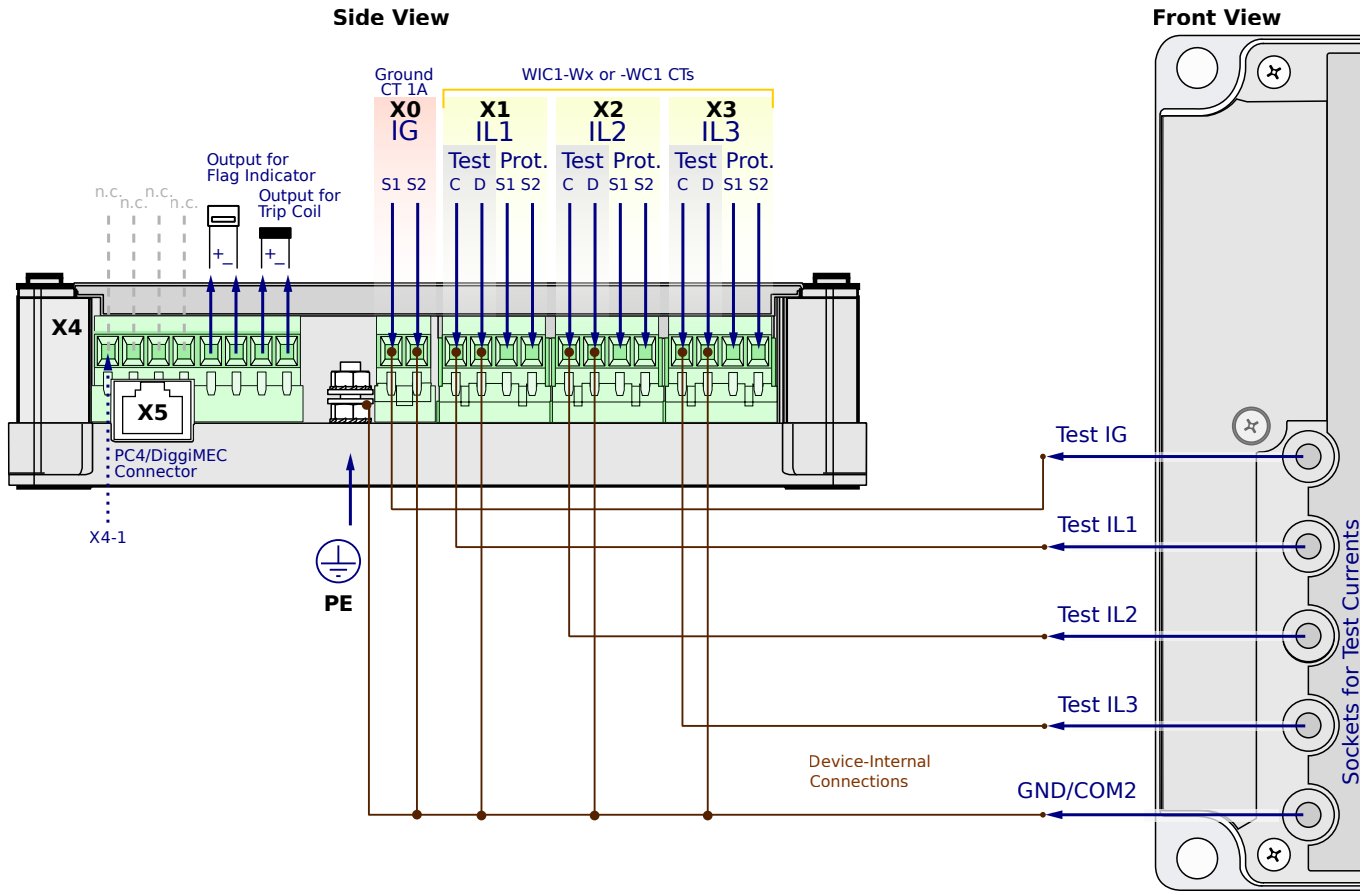


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1SA0

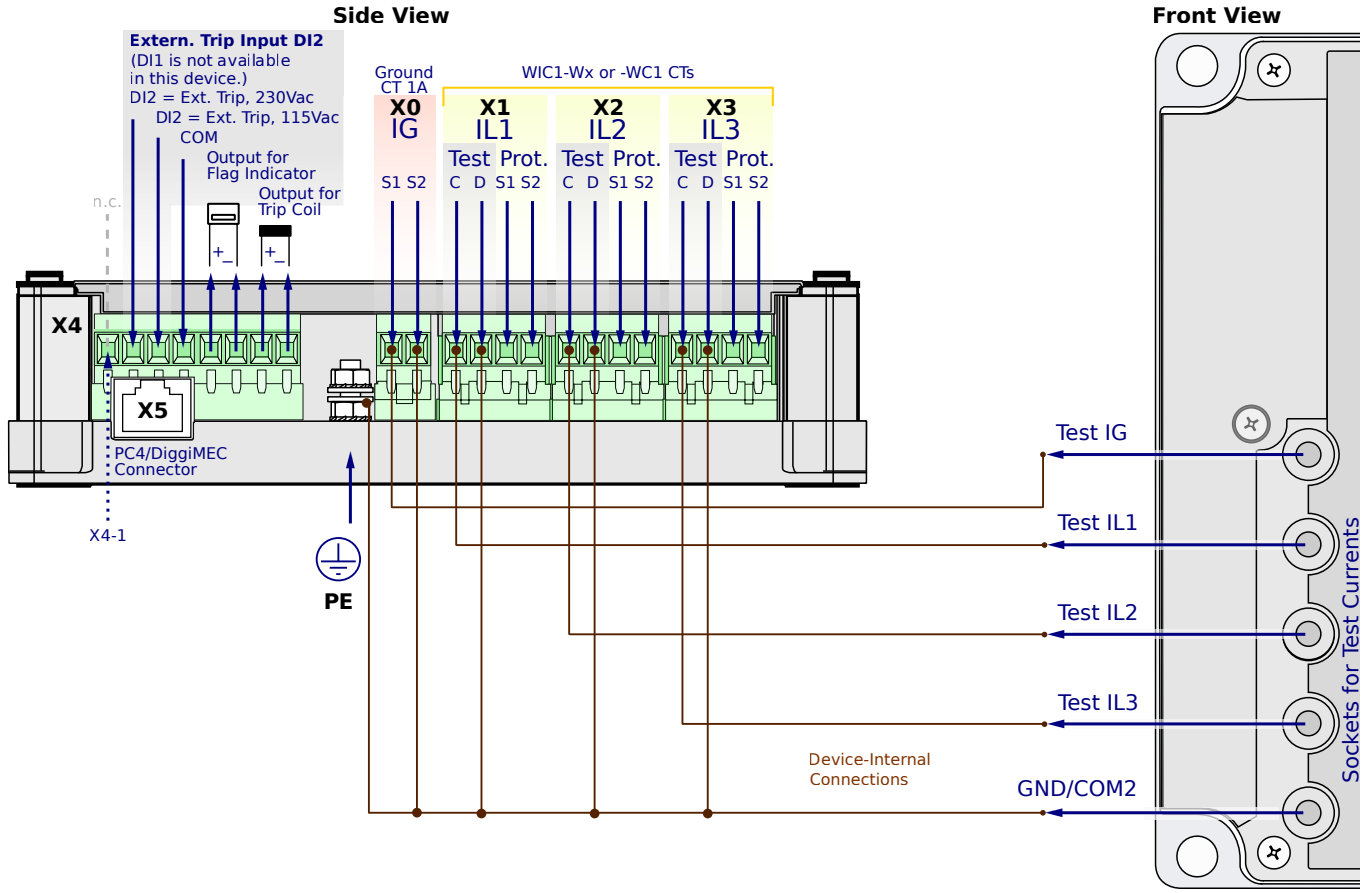


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1SAH

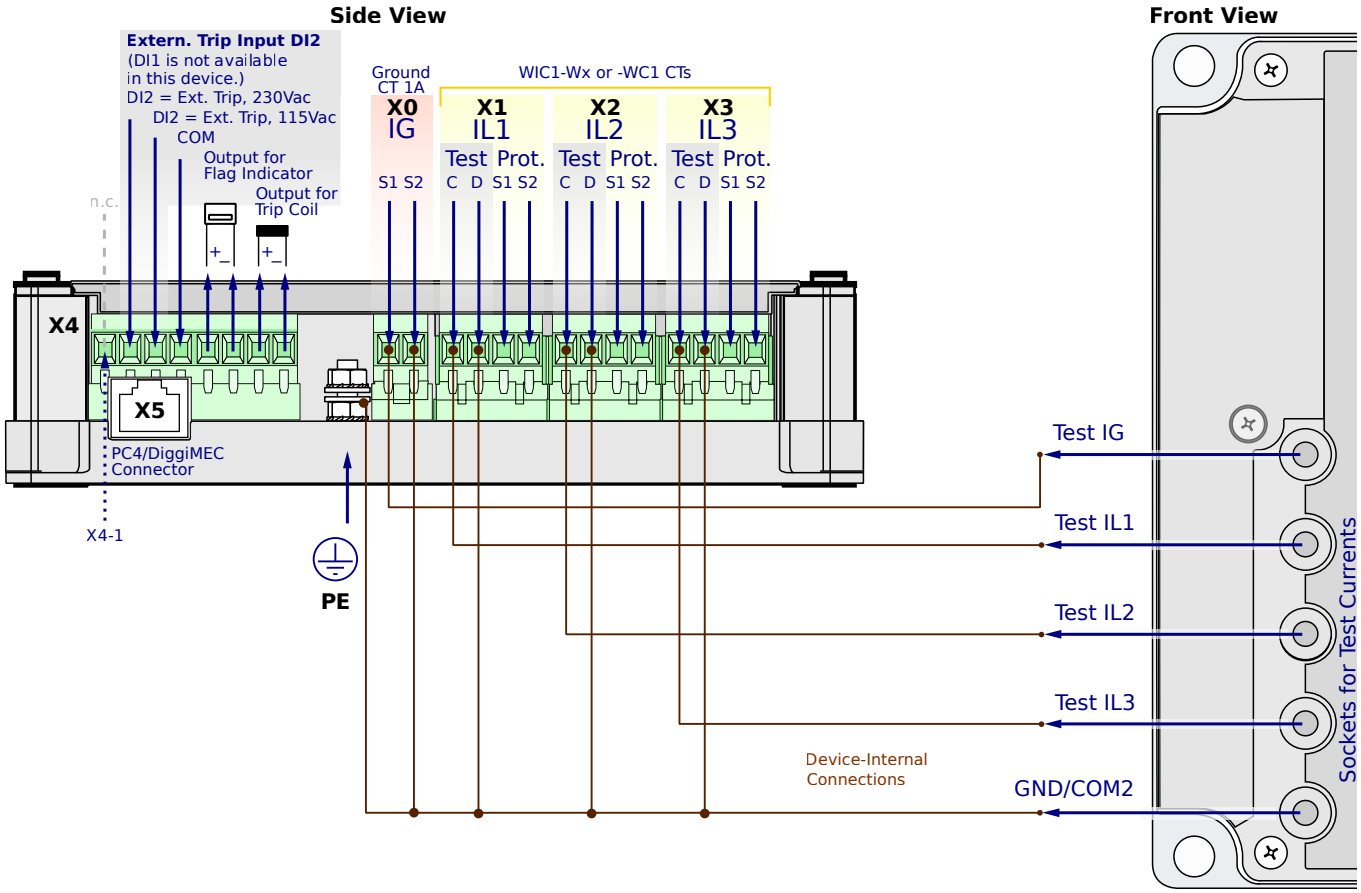


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1AA0

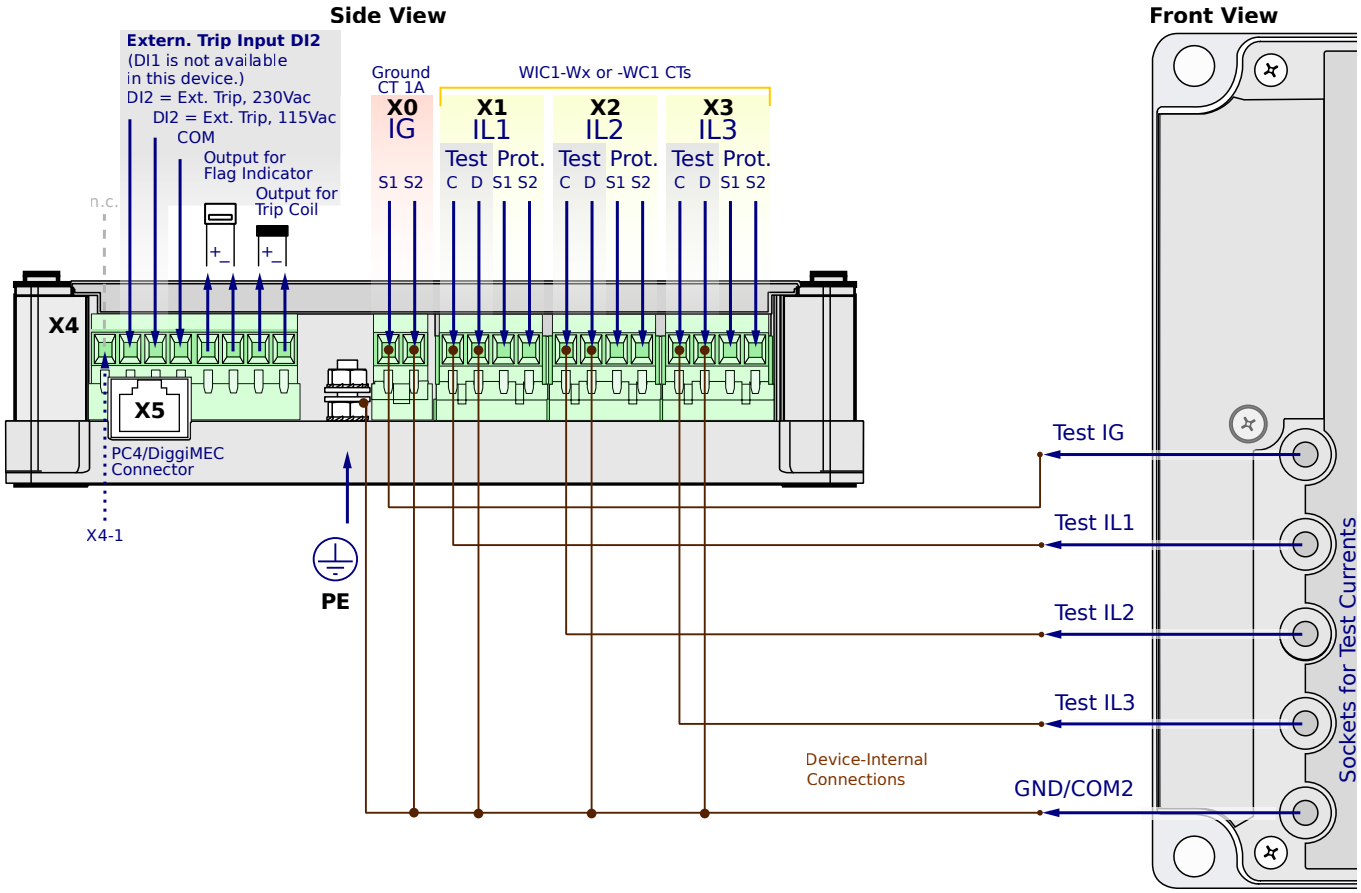


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1AAH

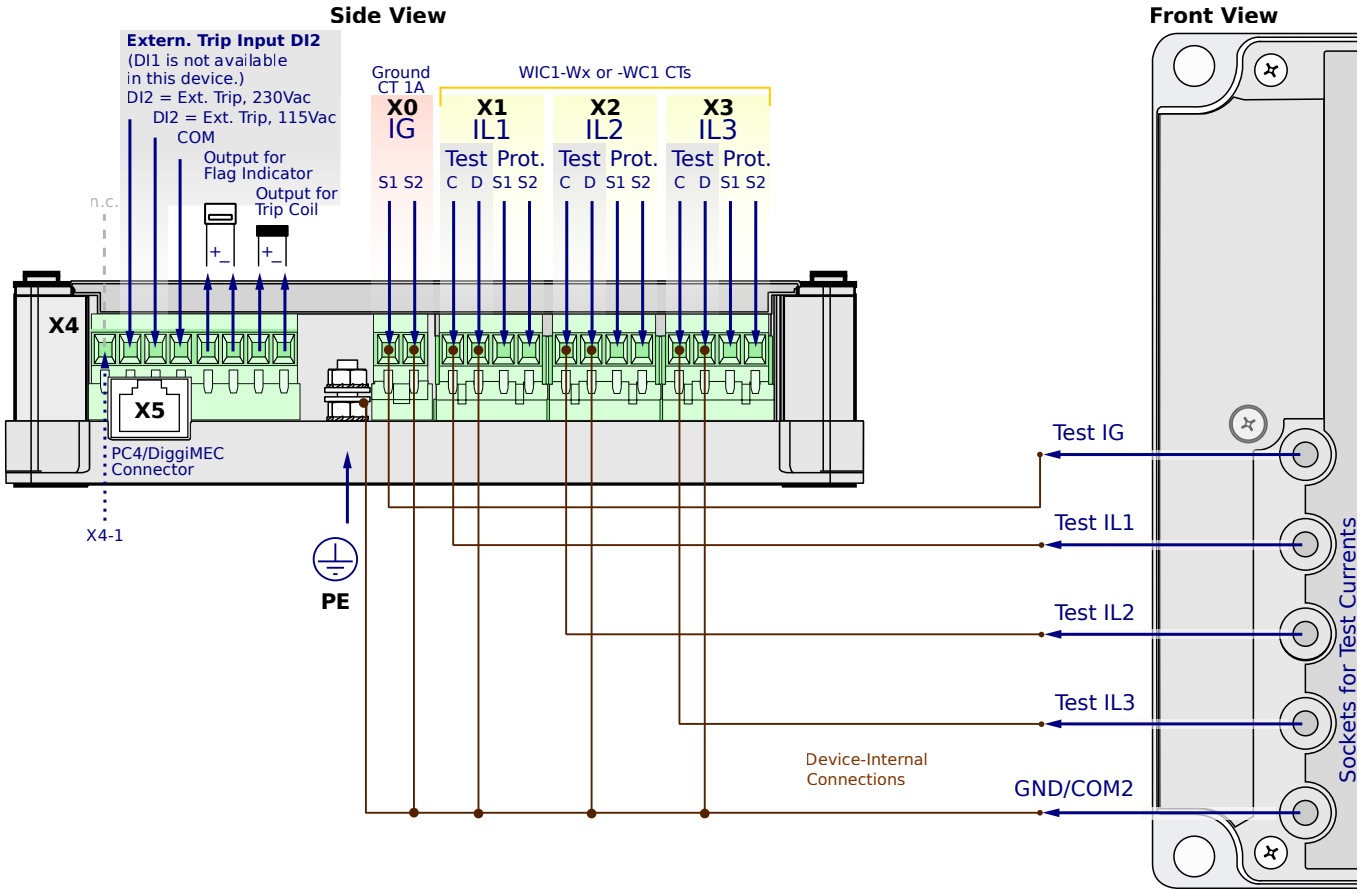


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1PA0

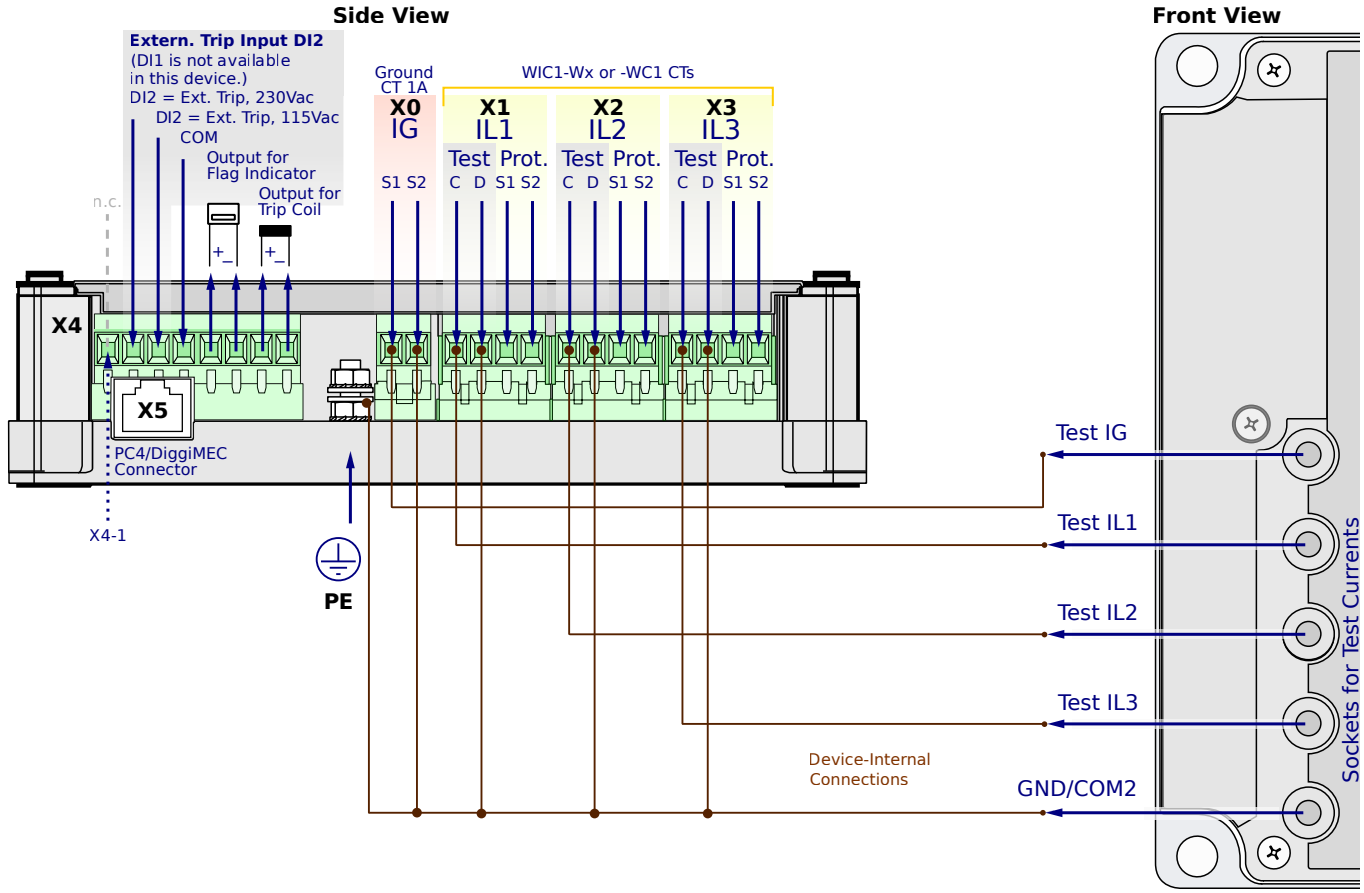


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF1PAH

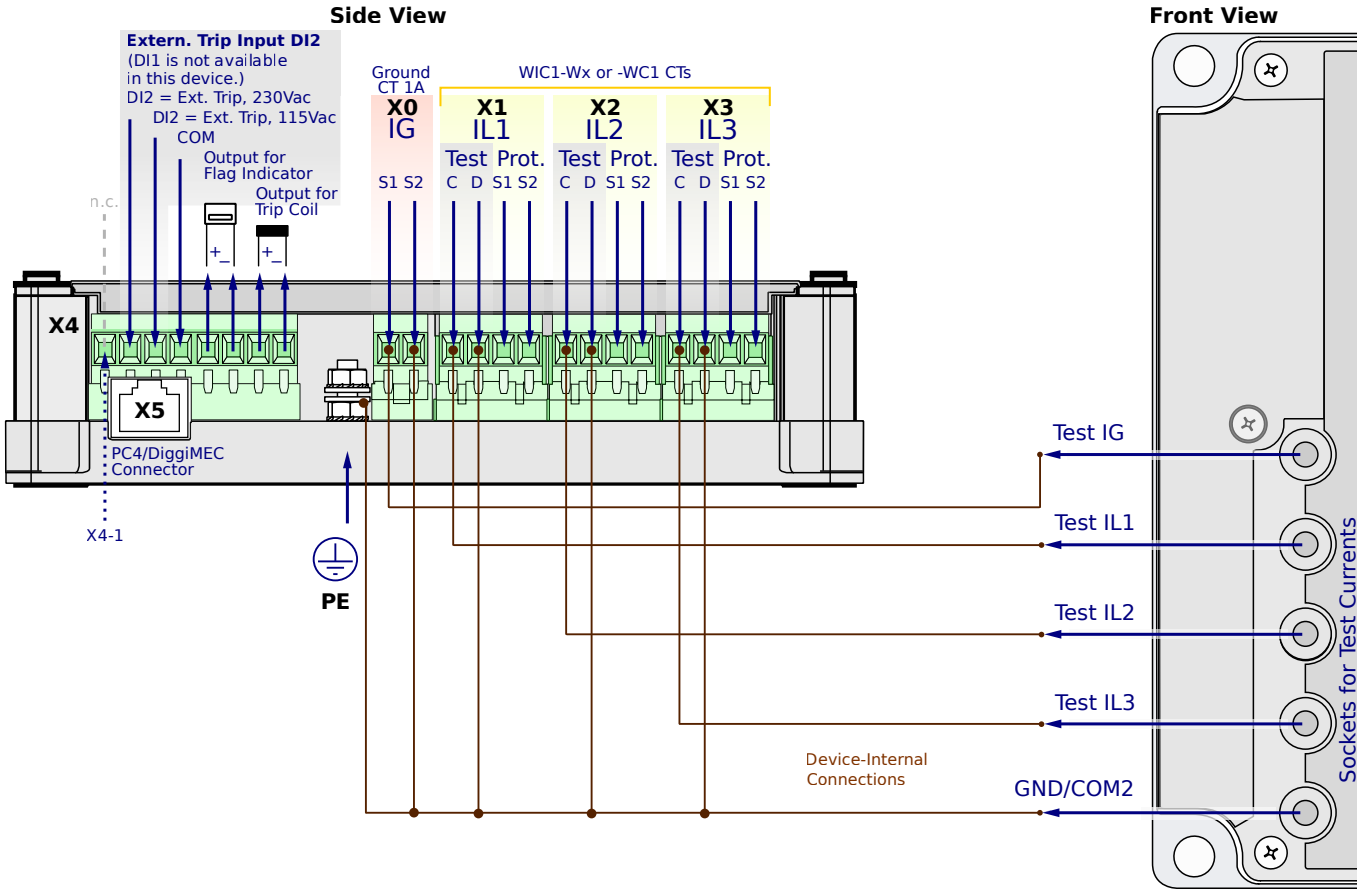


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2SA0

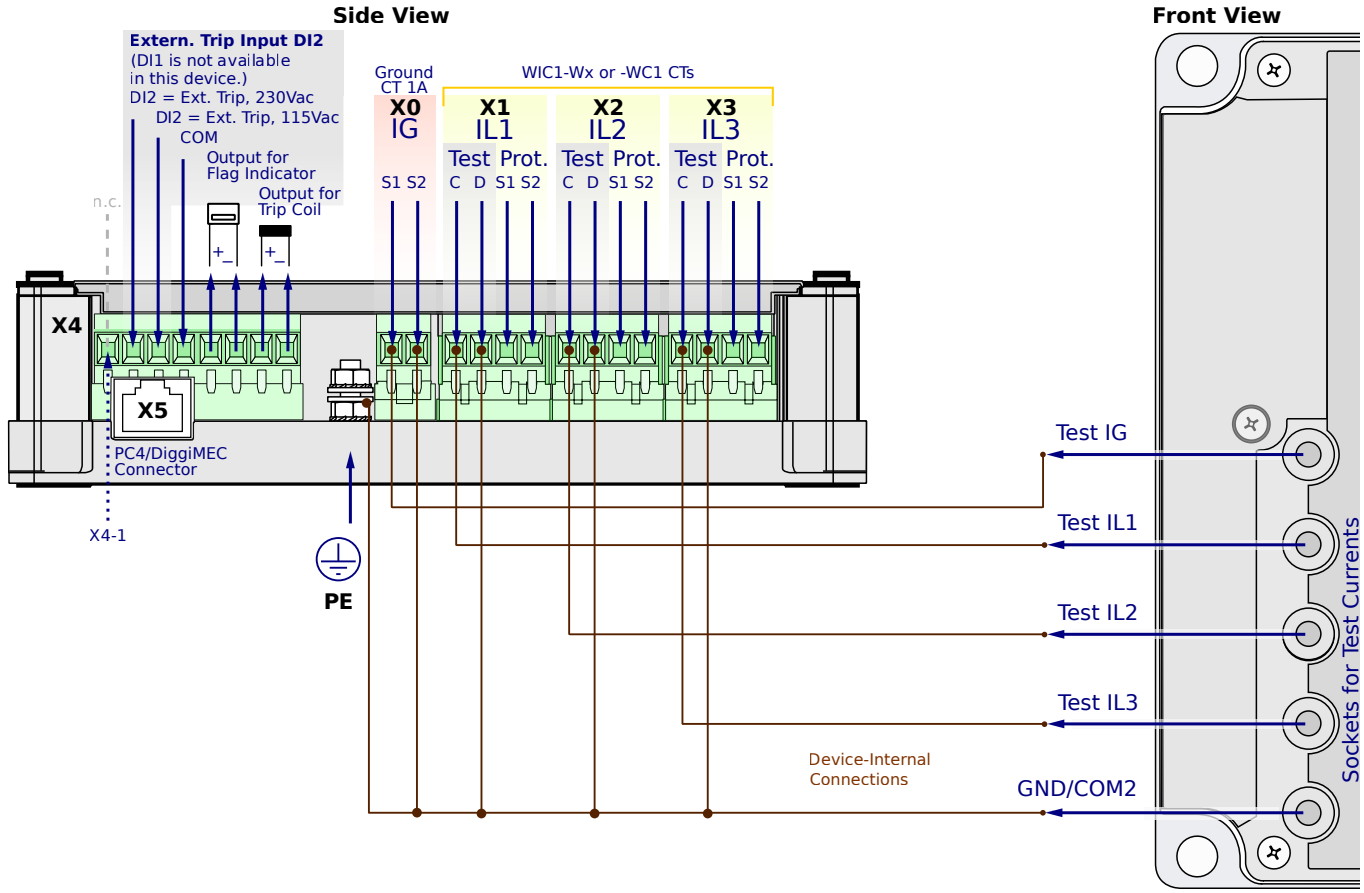


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2SAH

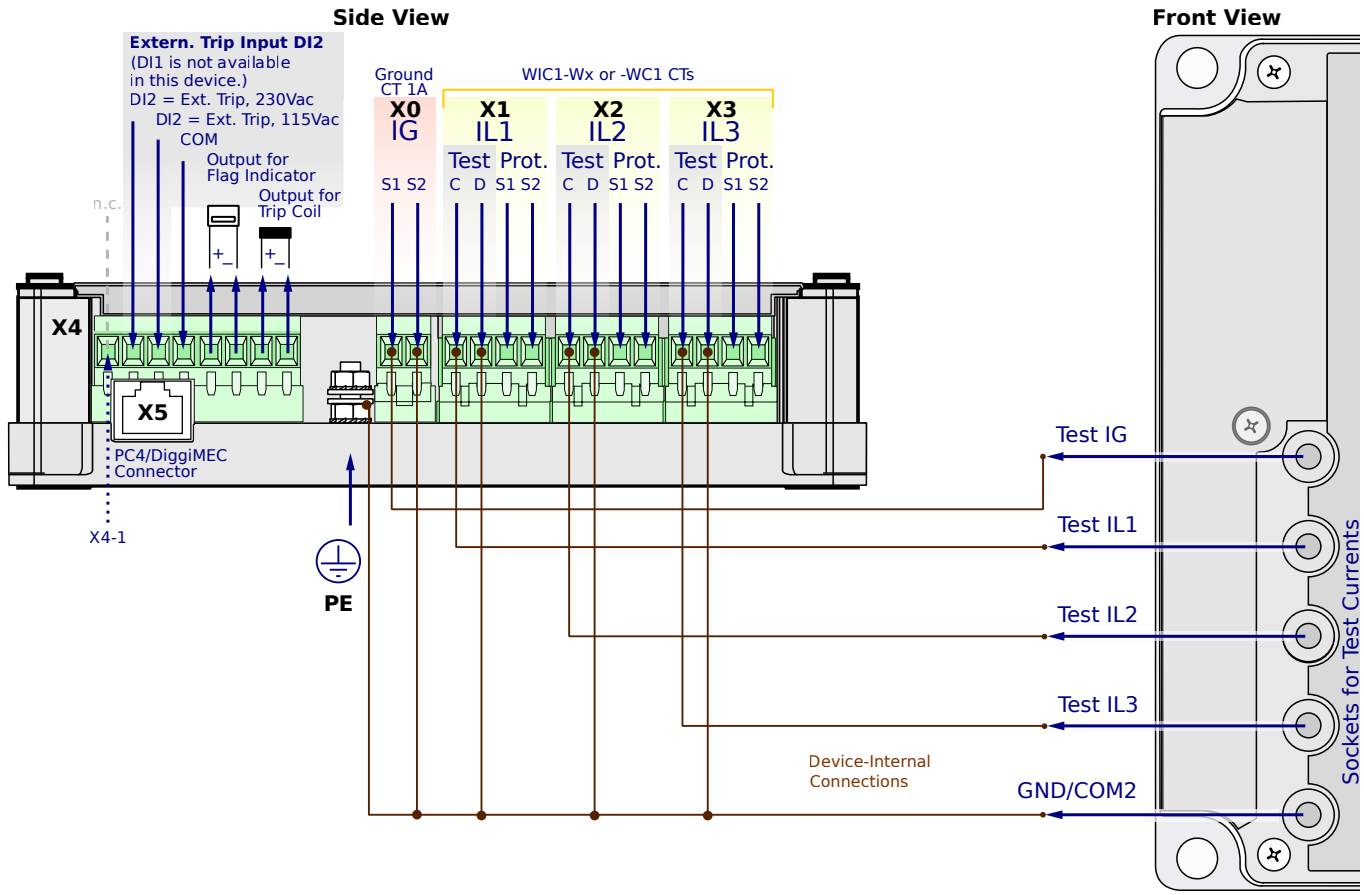


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2AA0

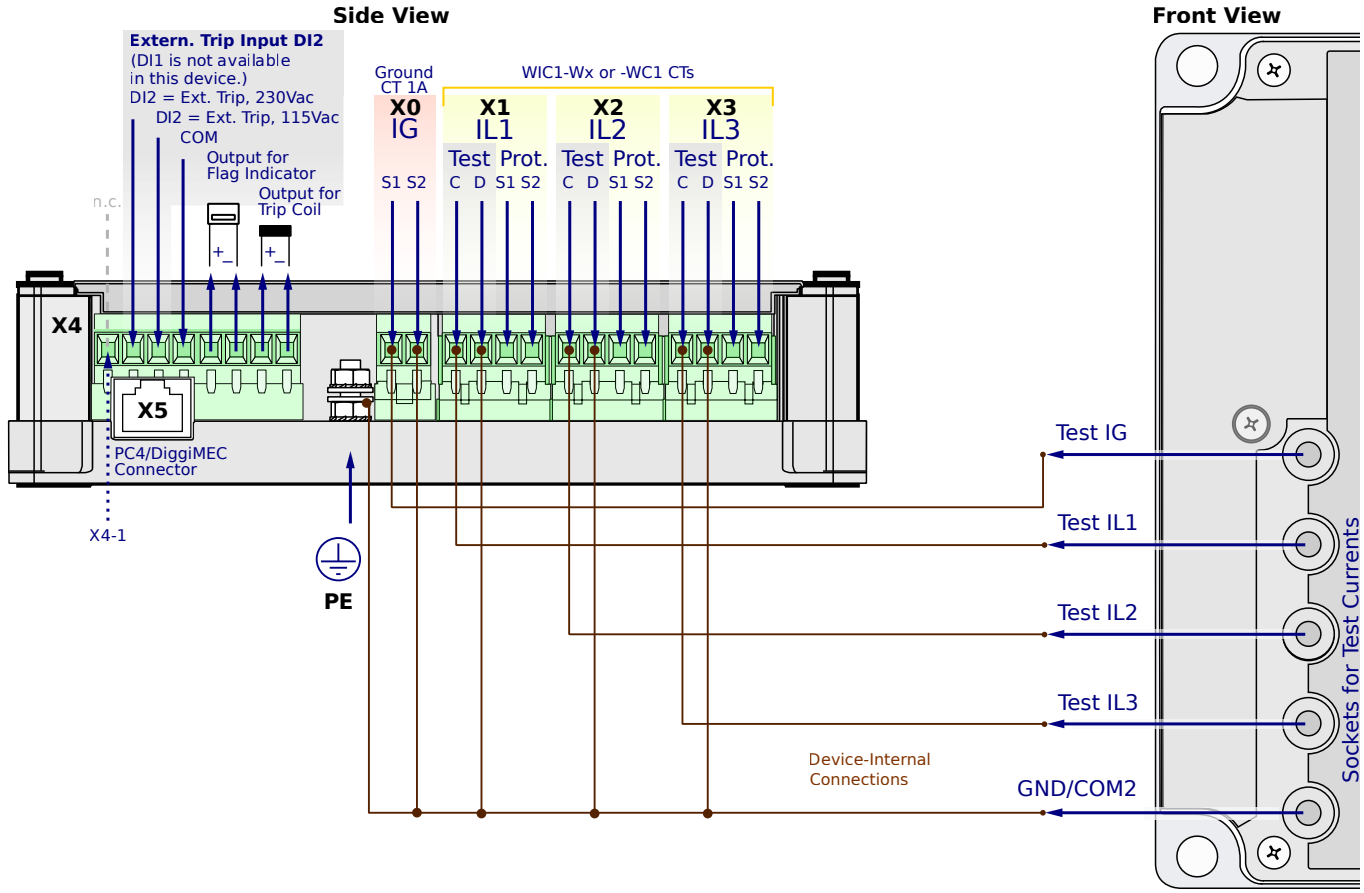


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2AAH

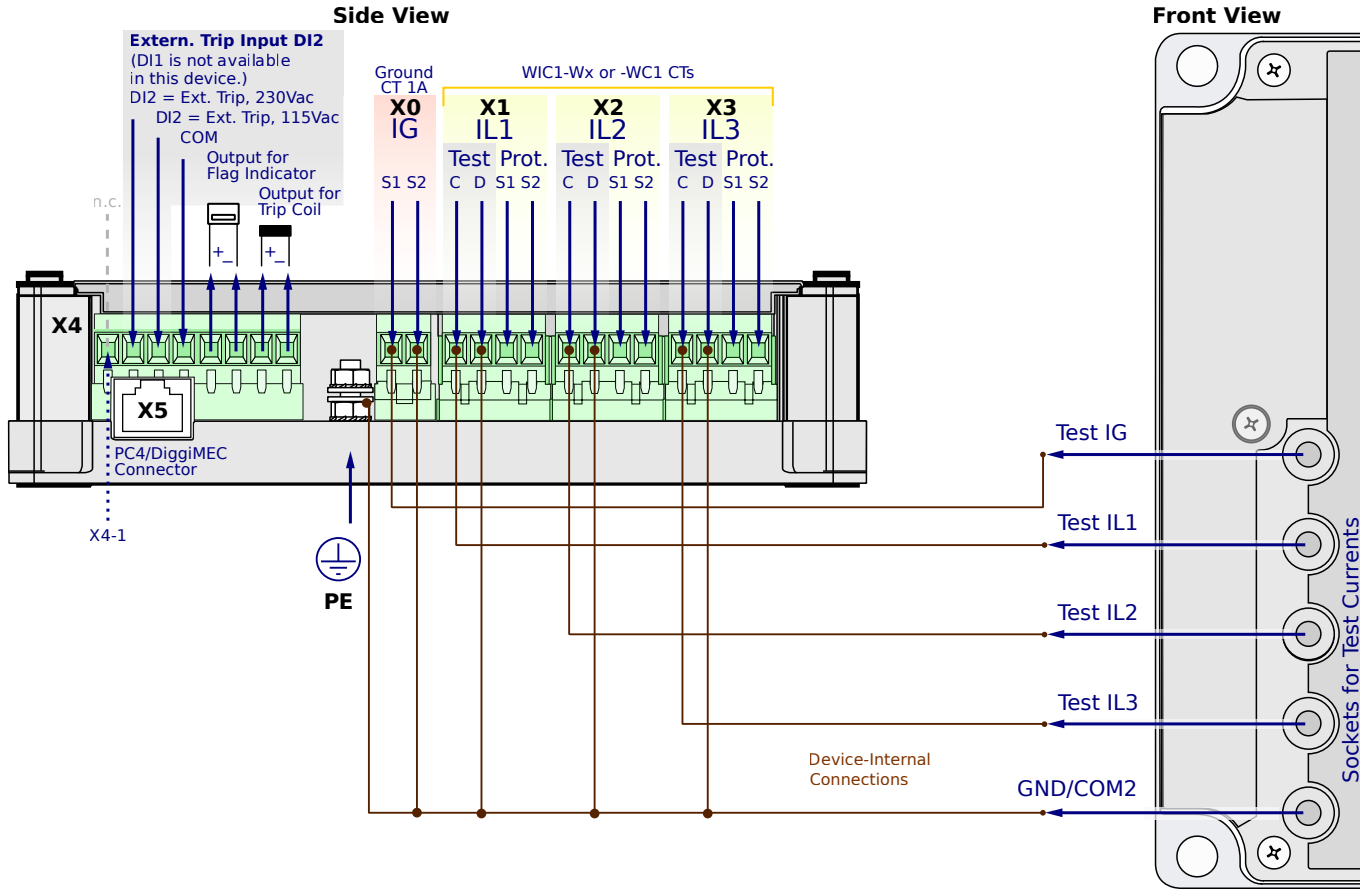


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2PA0

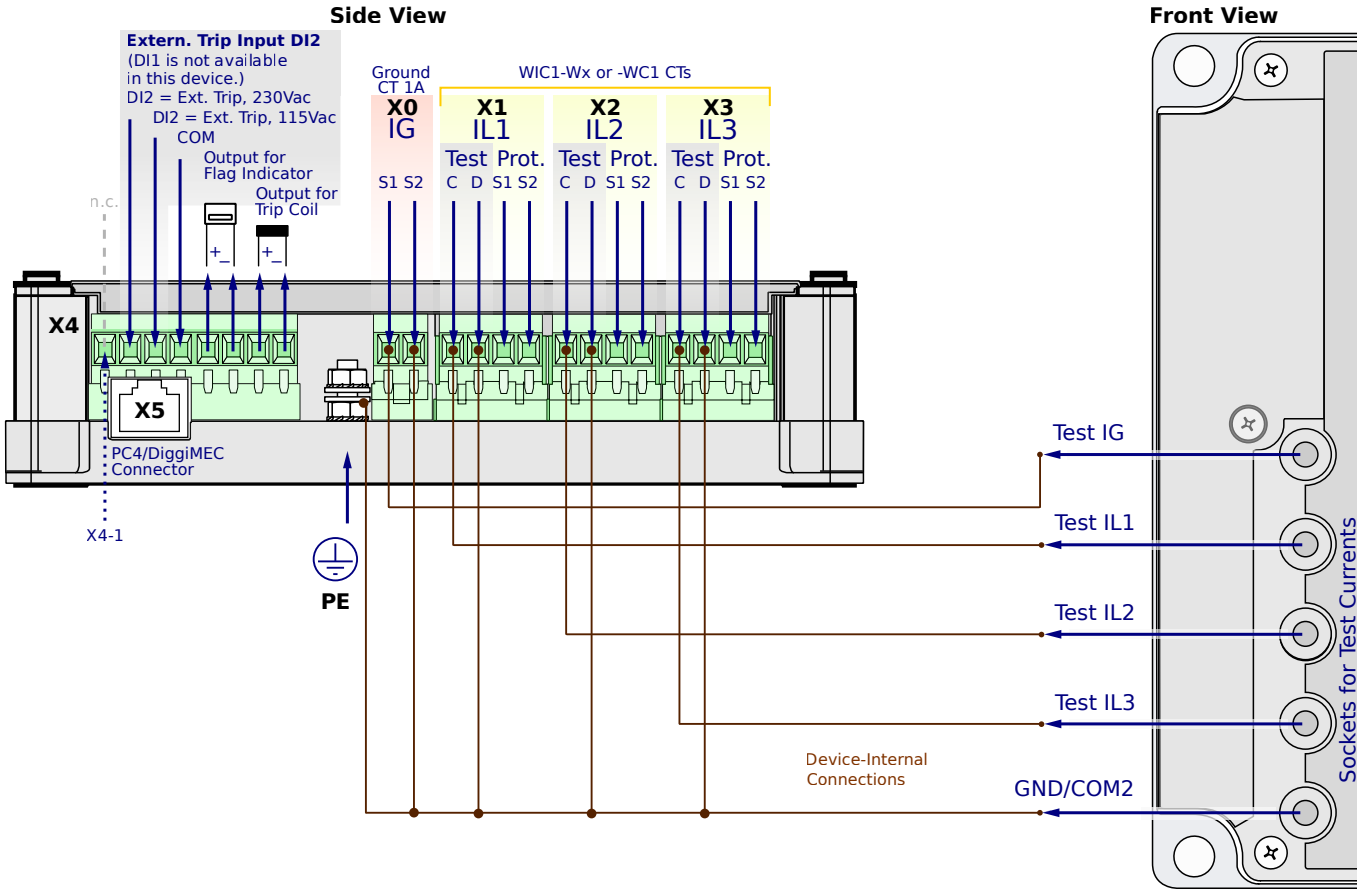


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CF2PAH

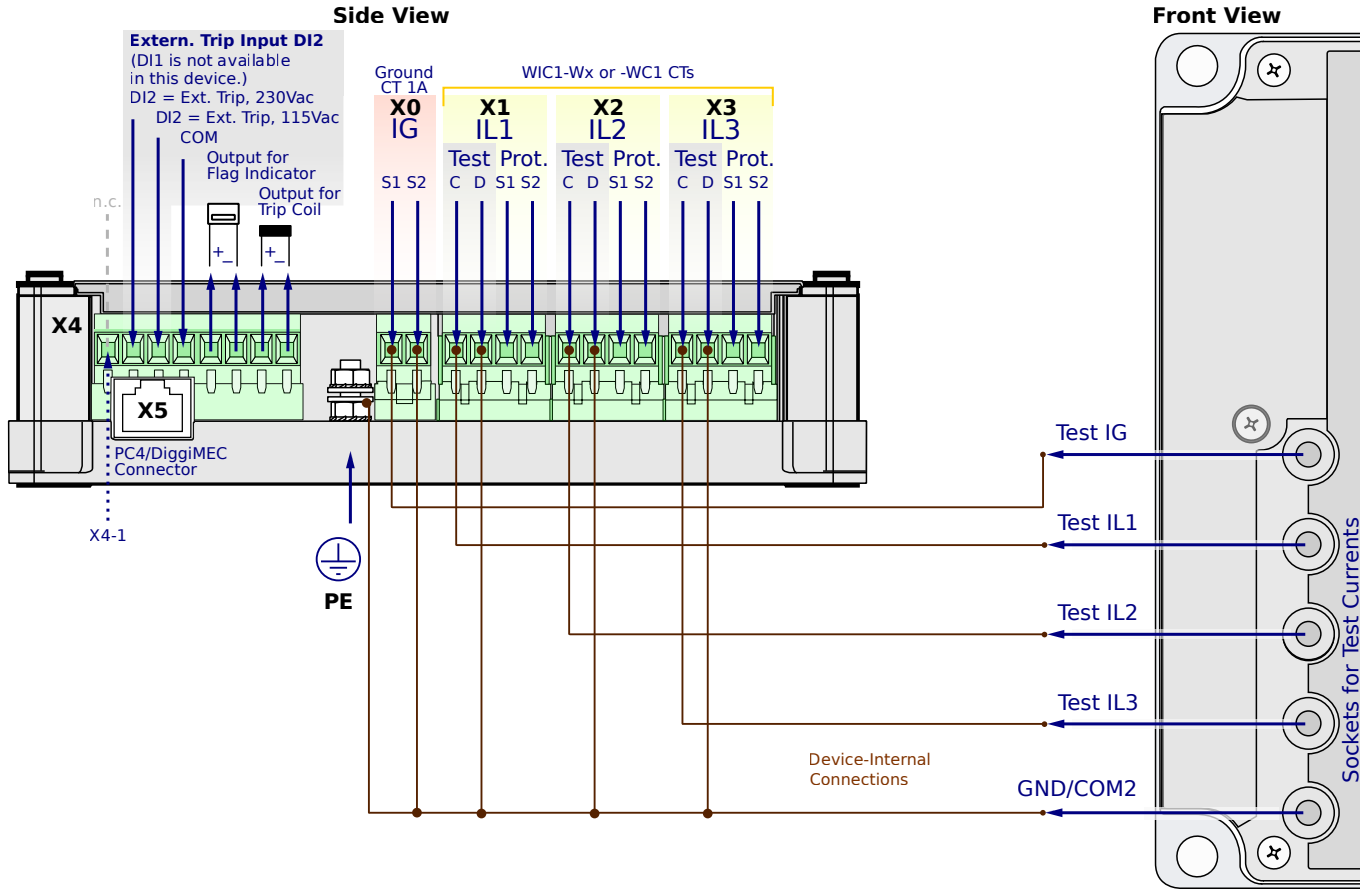


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1SA0

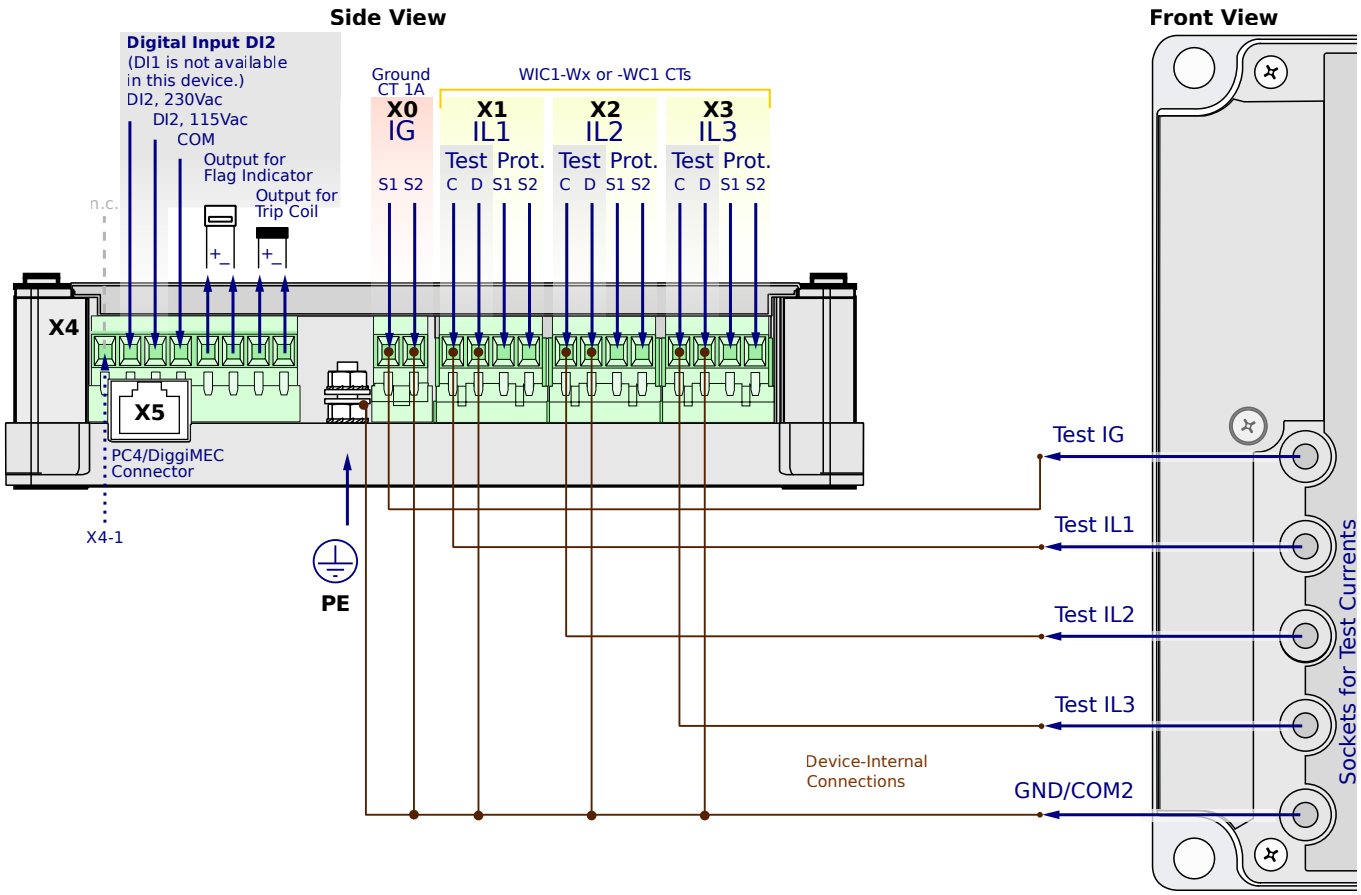


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1SAH

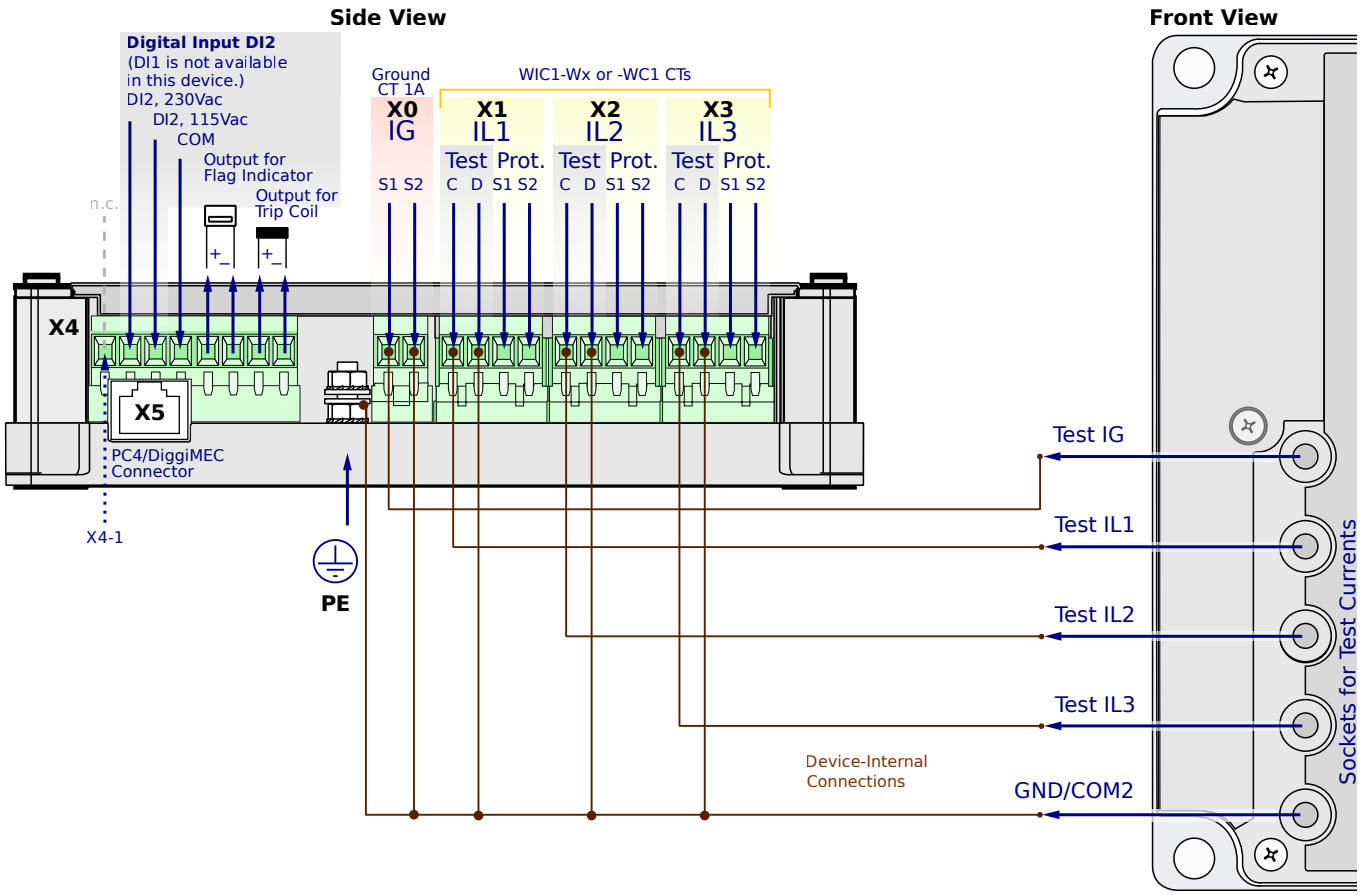


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1AA0

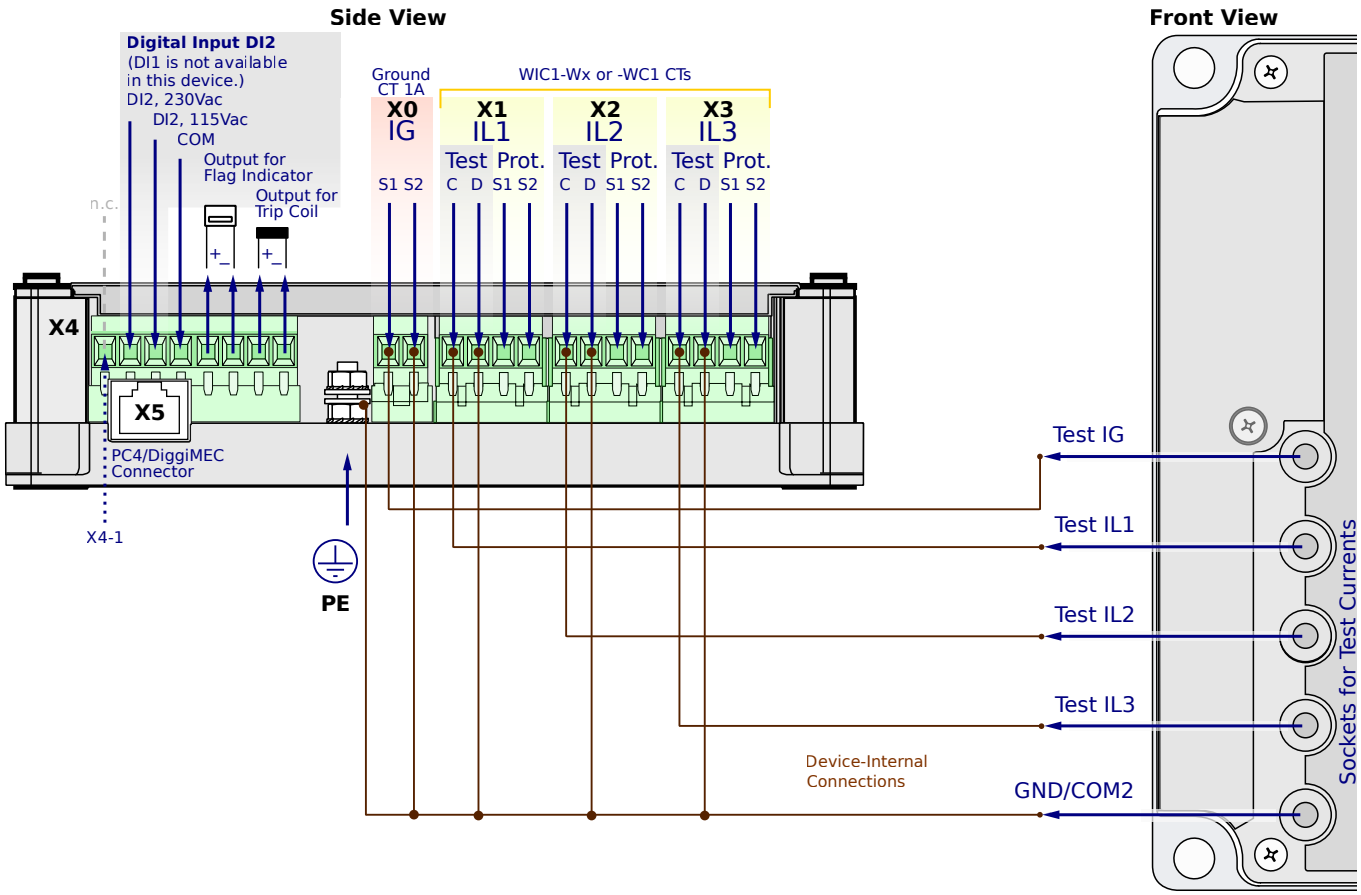


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1AAH

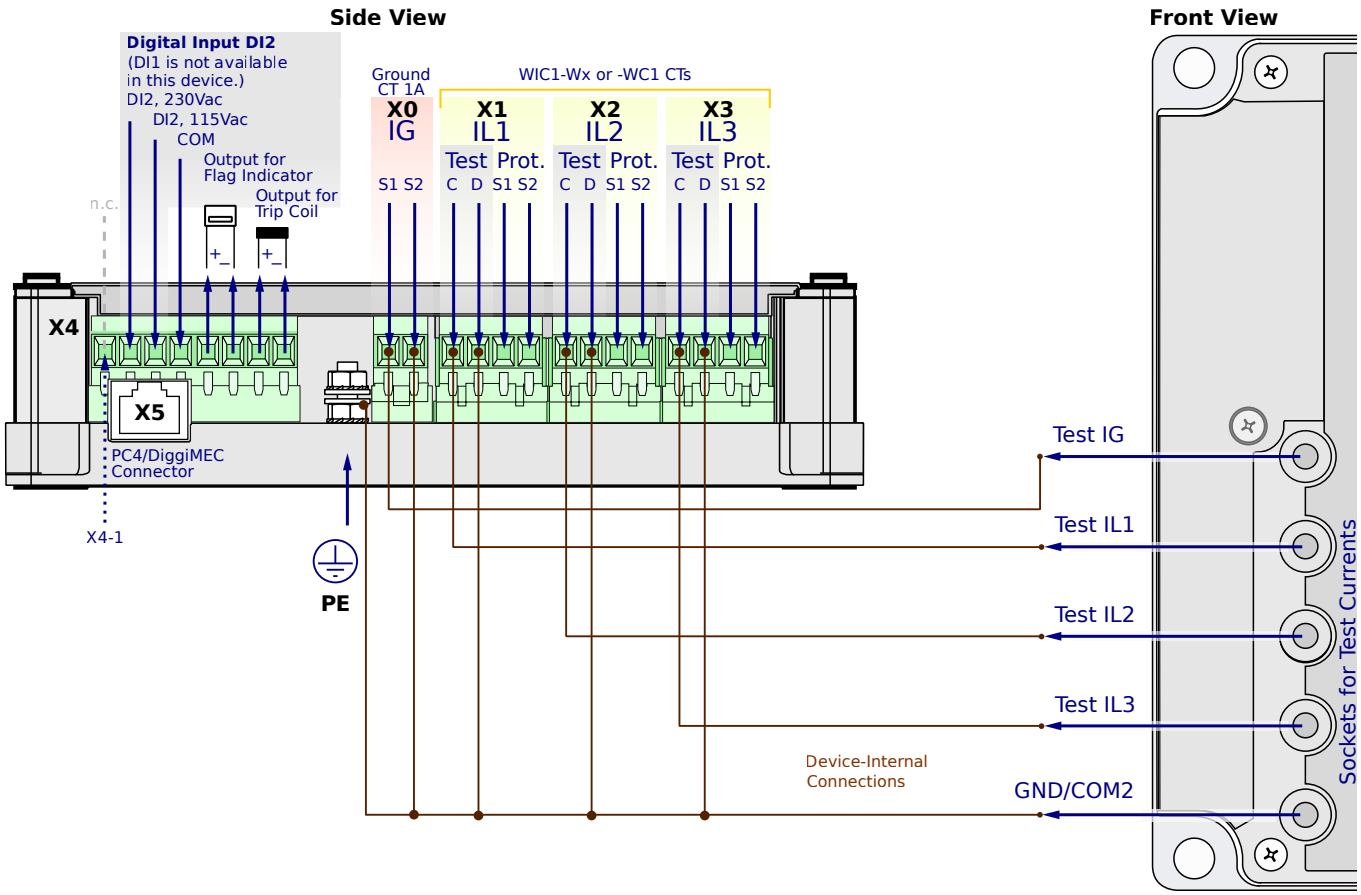


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1PA0

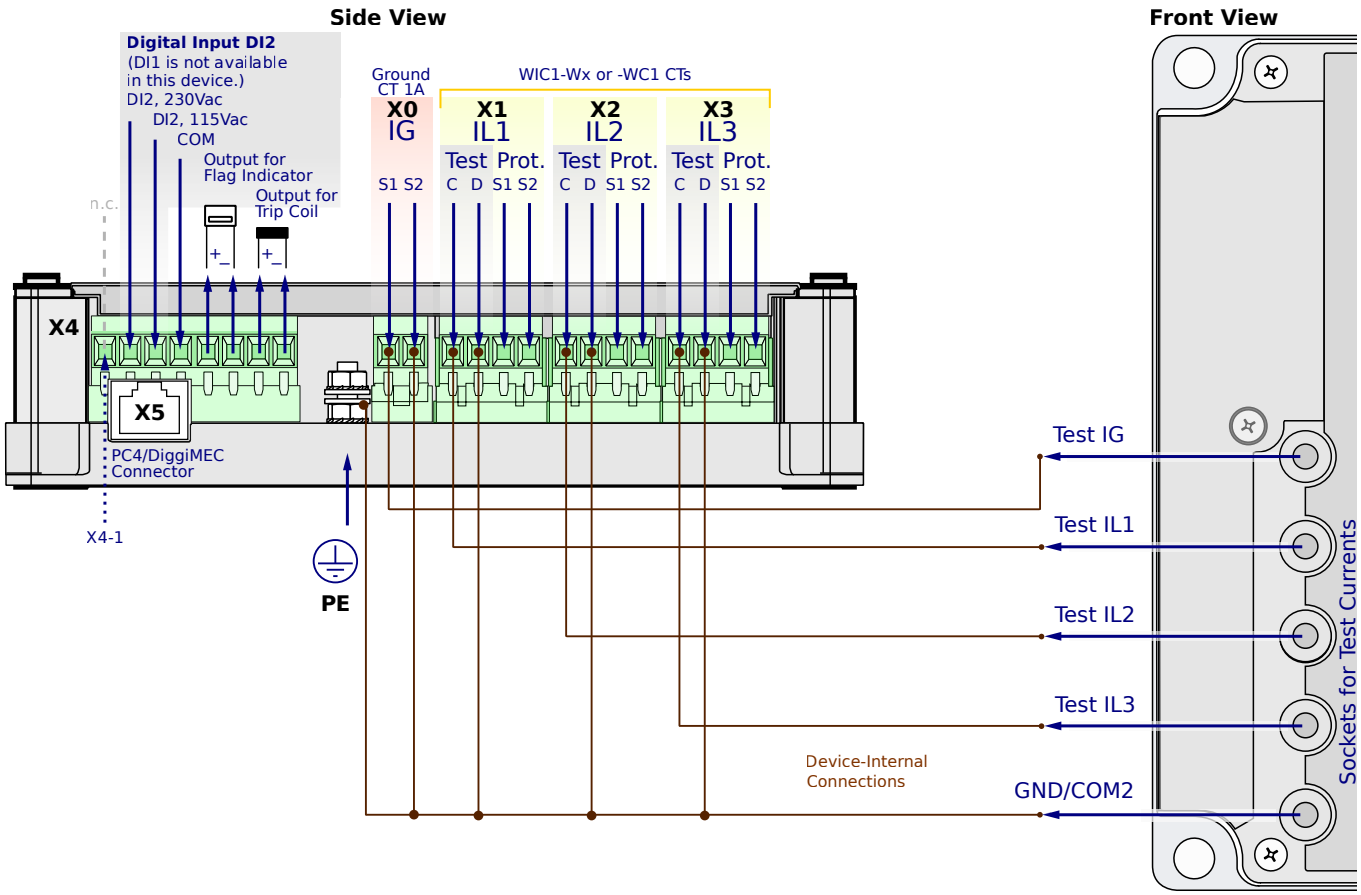


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC1PAH

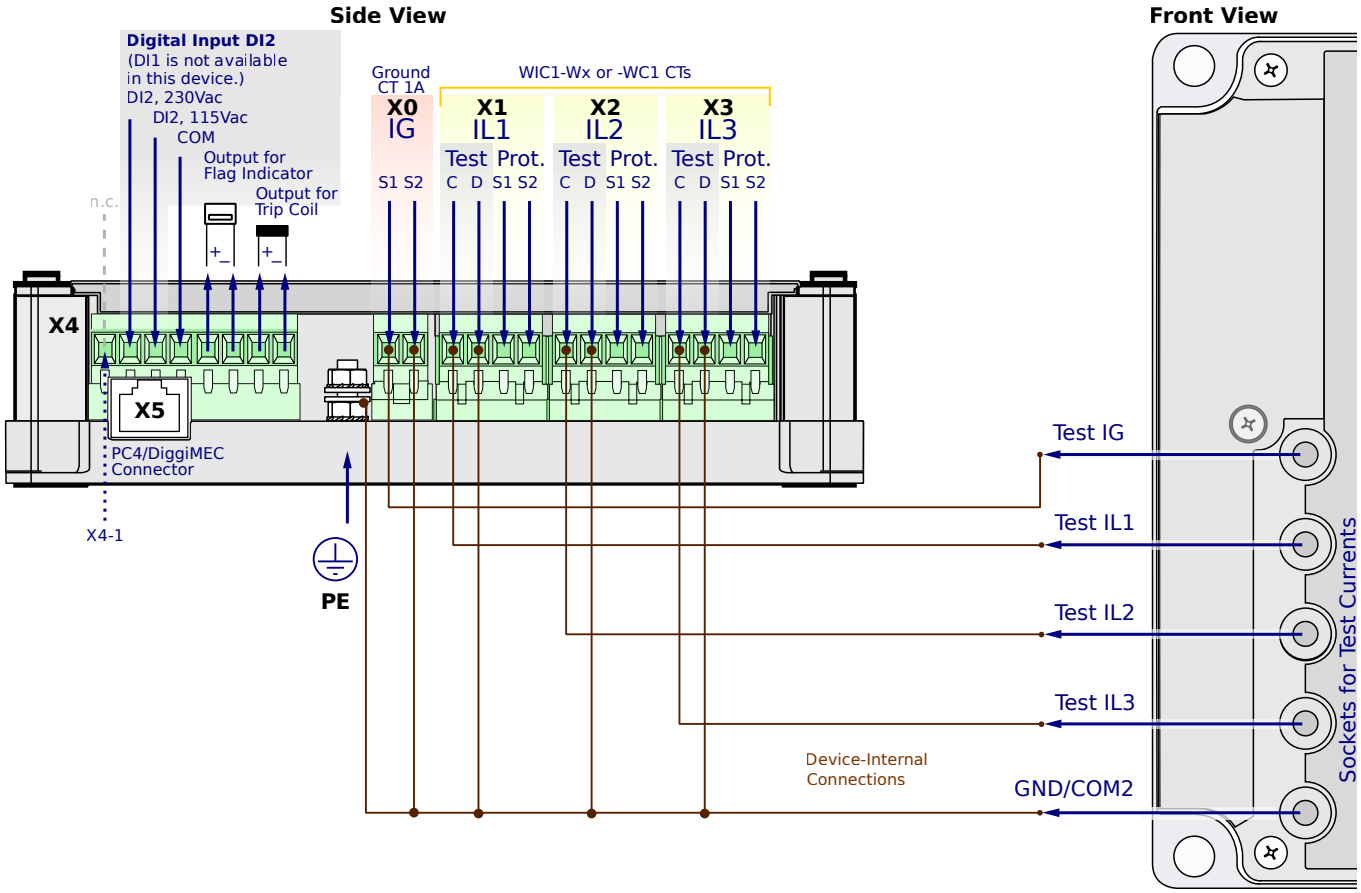


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2SA0

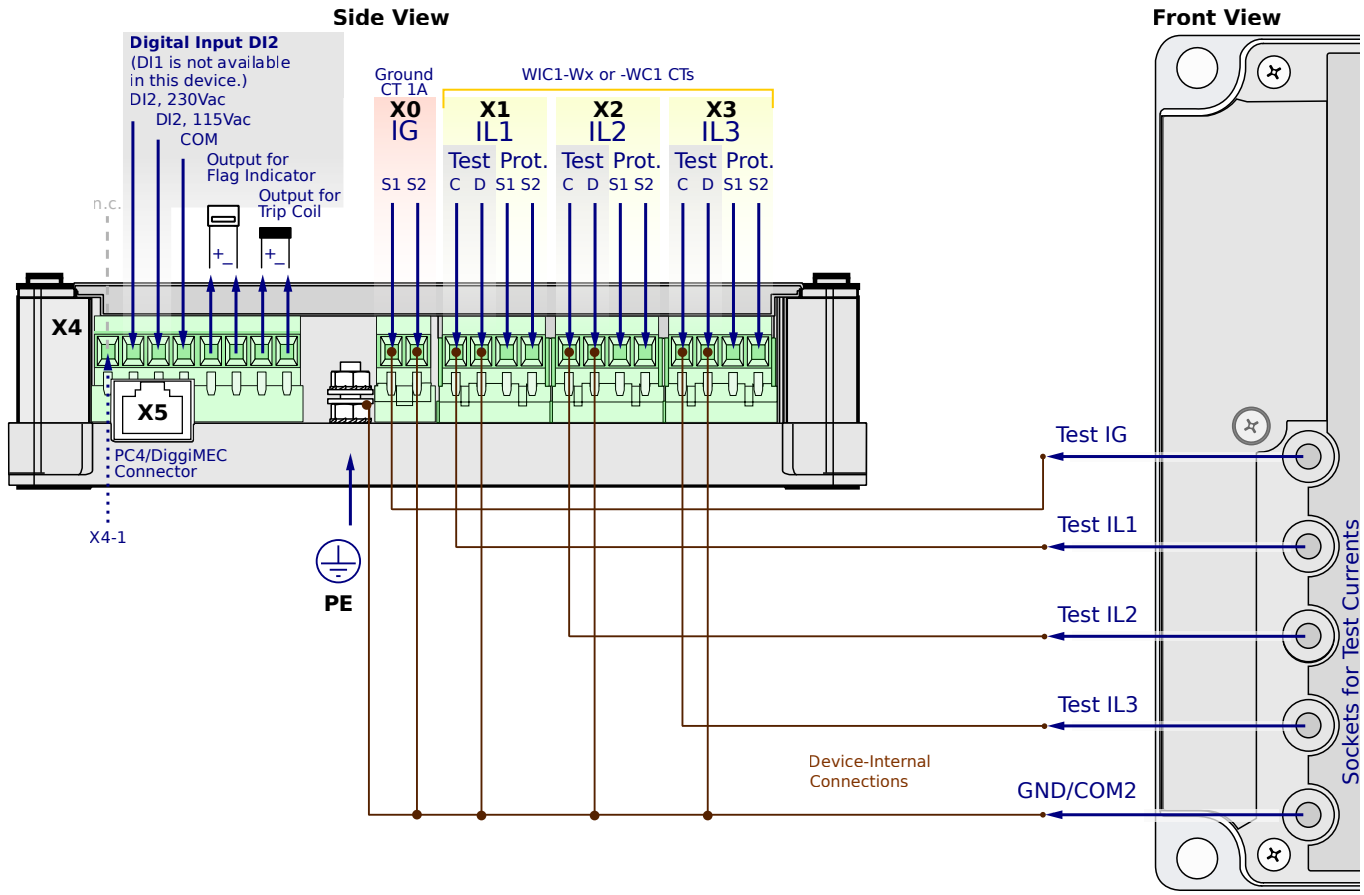


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2SAH

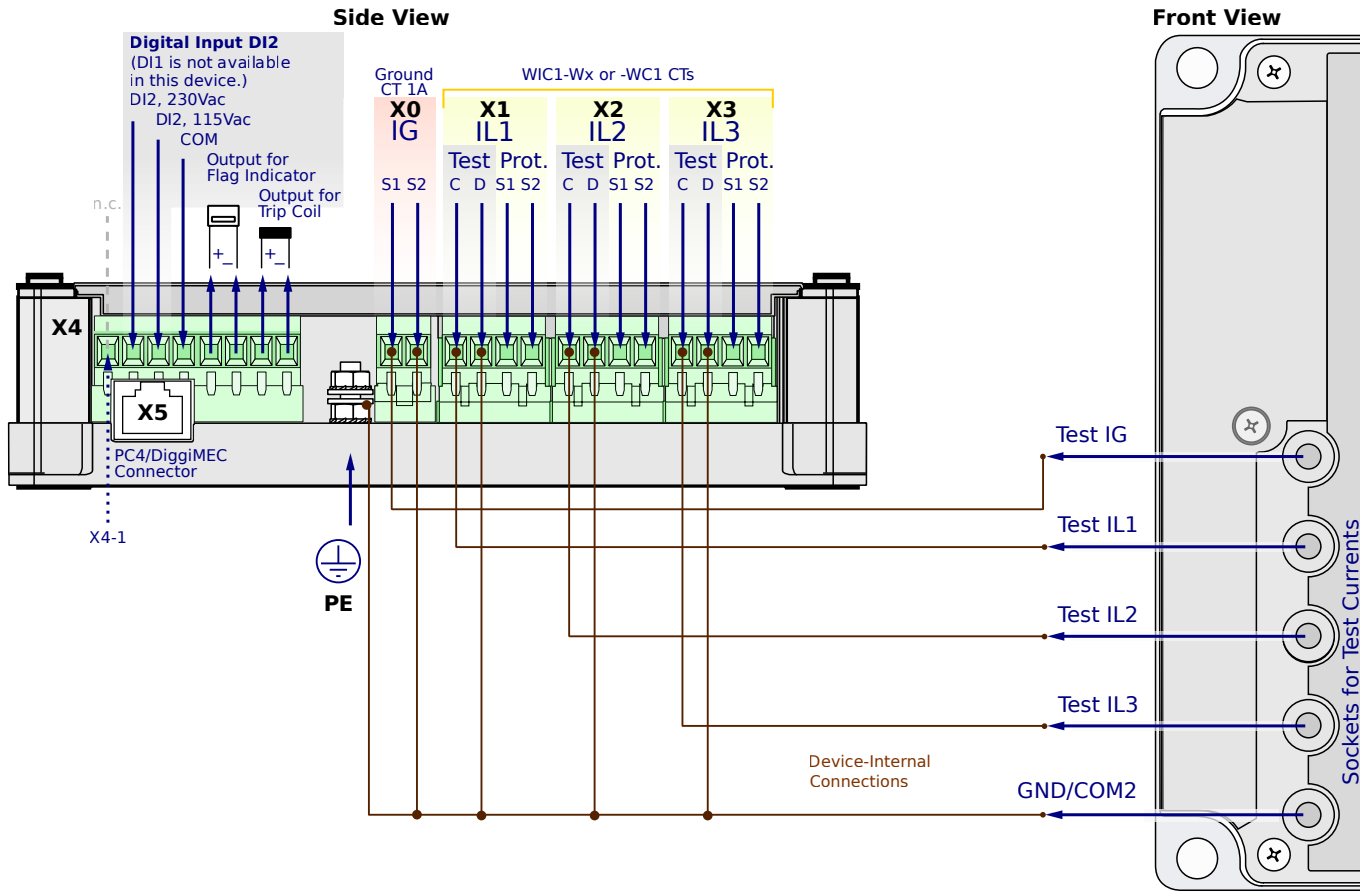


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2AA0

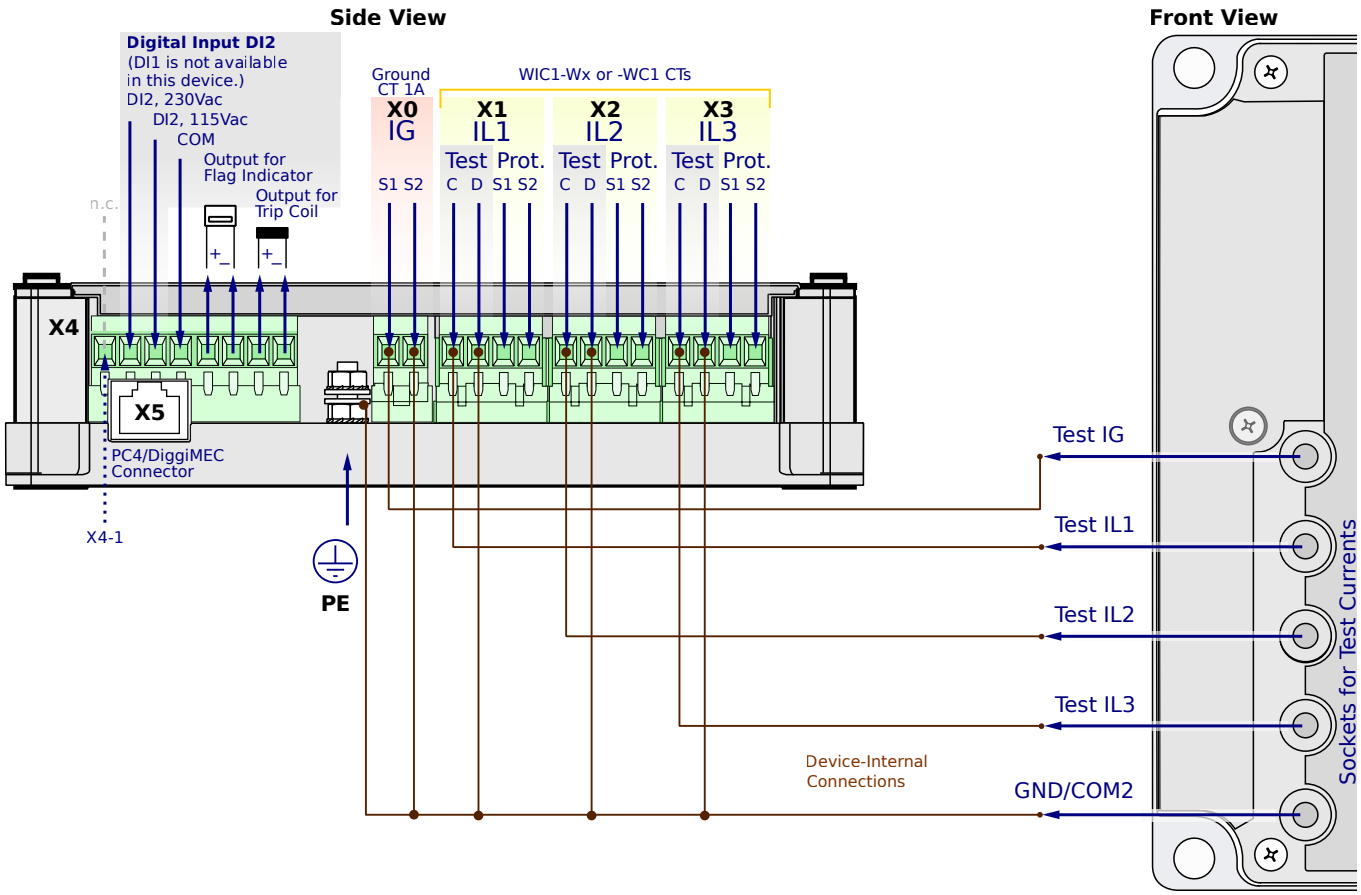


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2AAH

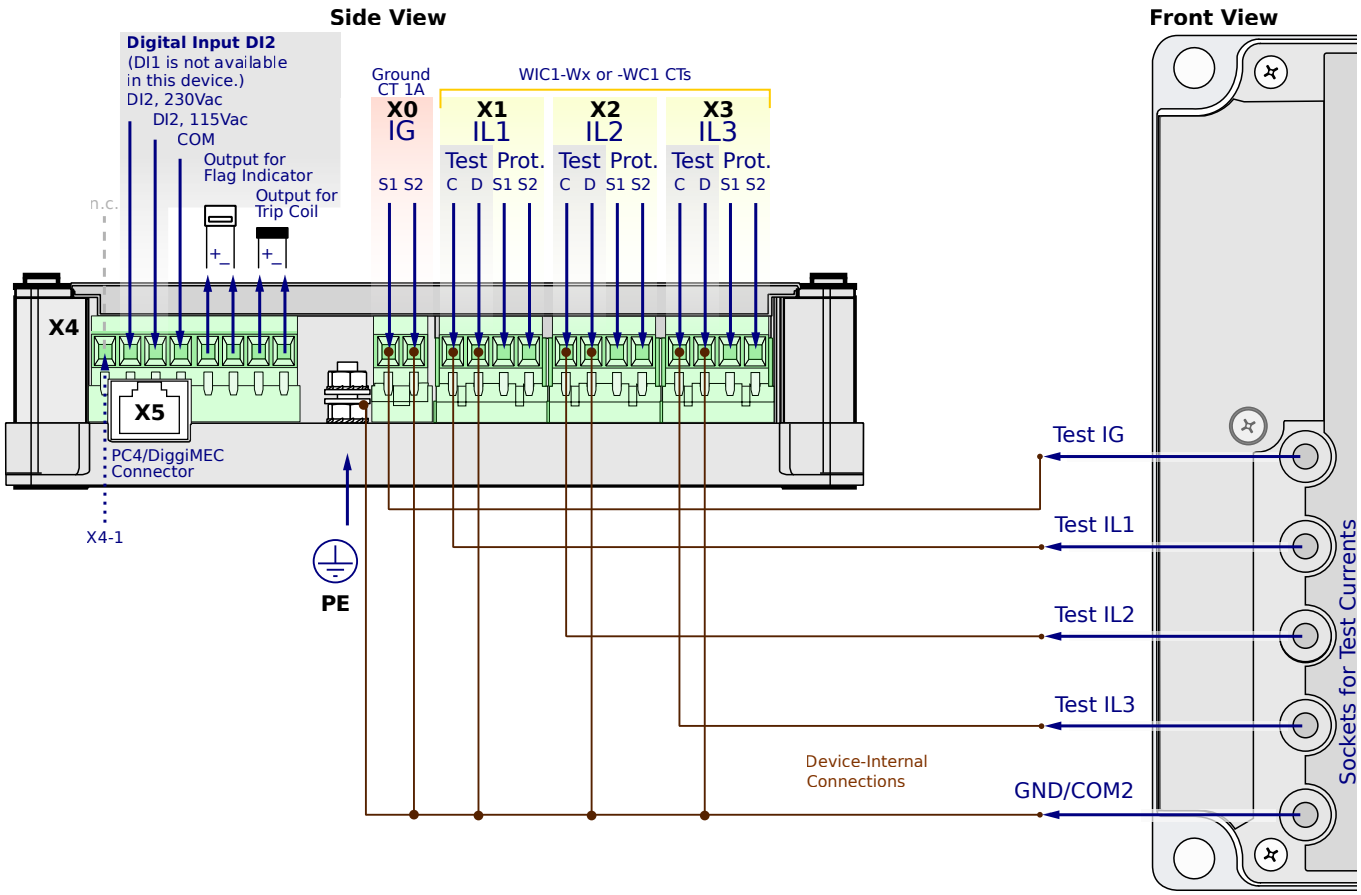


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2PA0

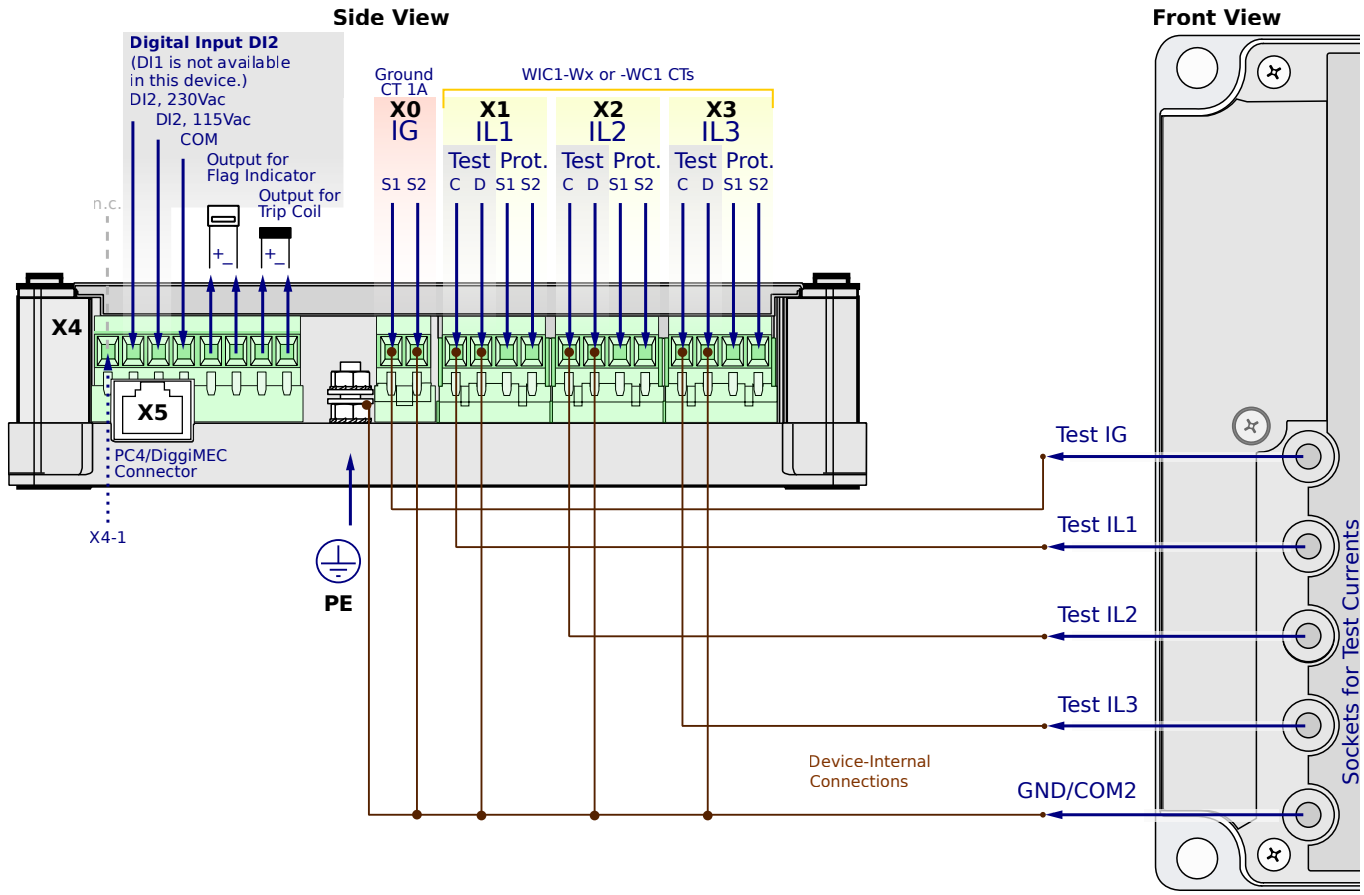


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB5CC2PAH

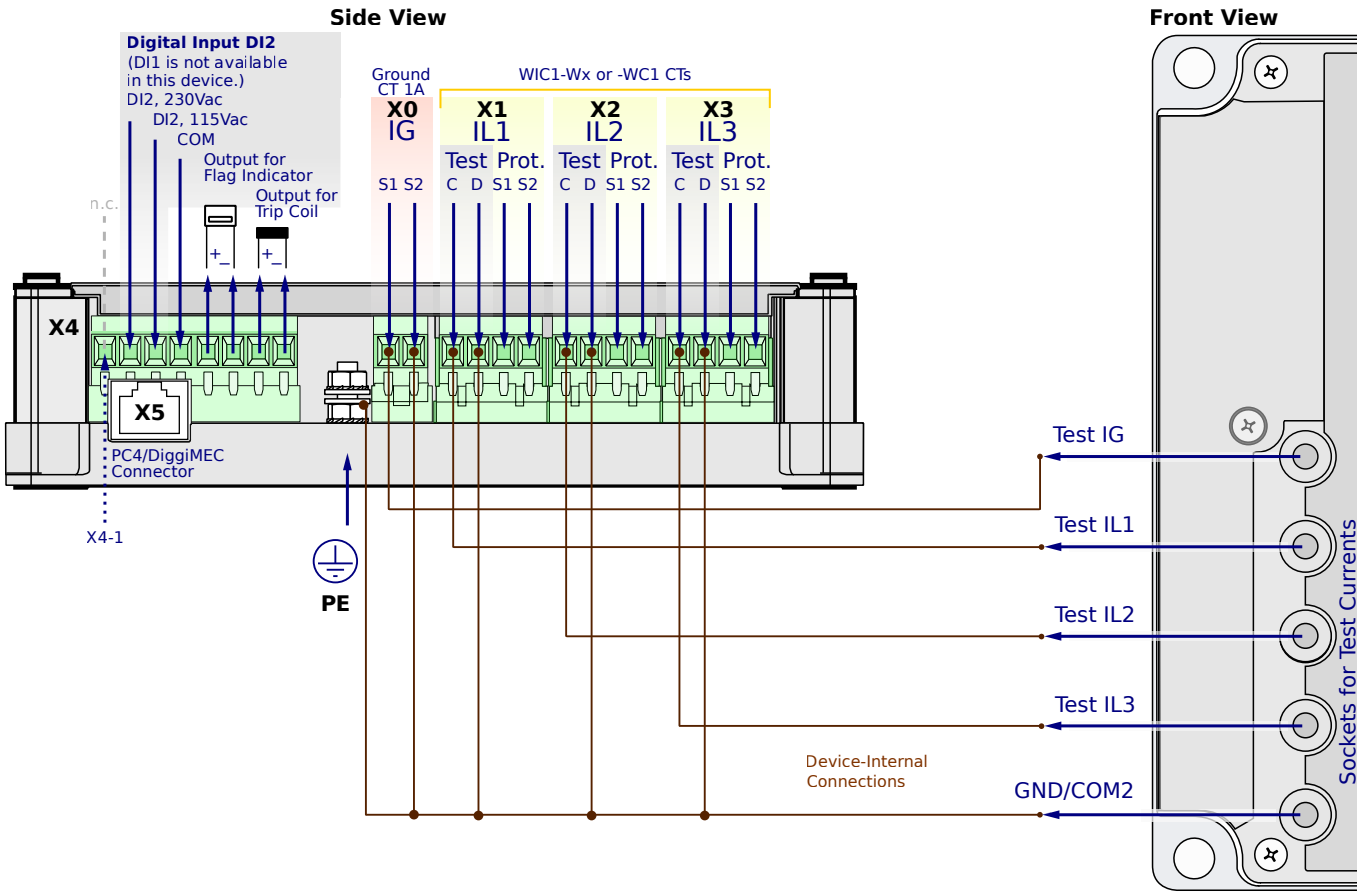


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0SA0

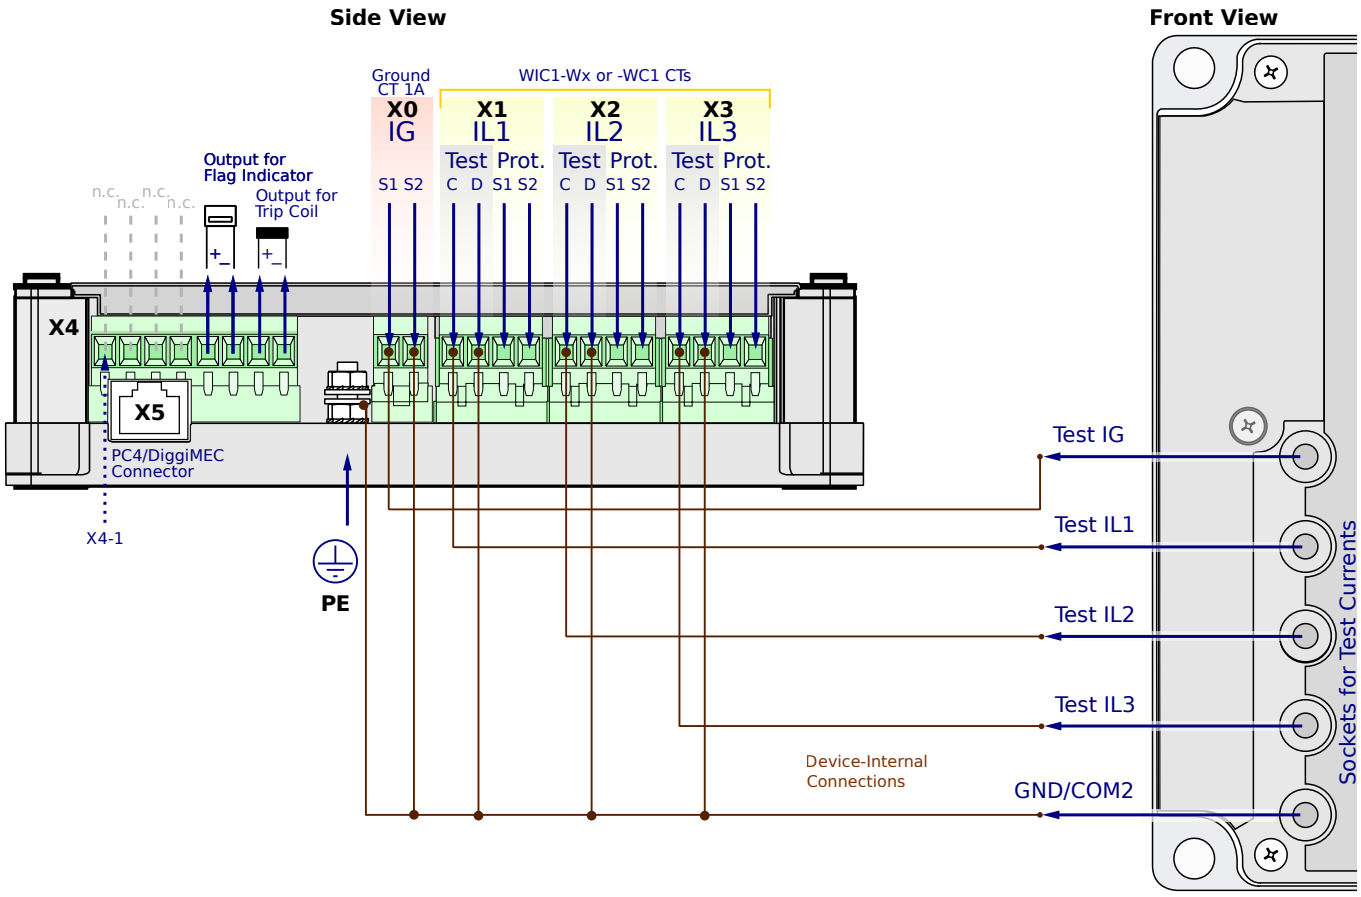


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0SAH

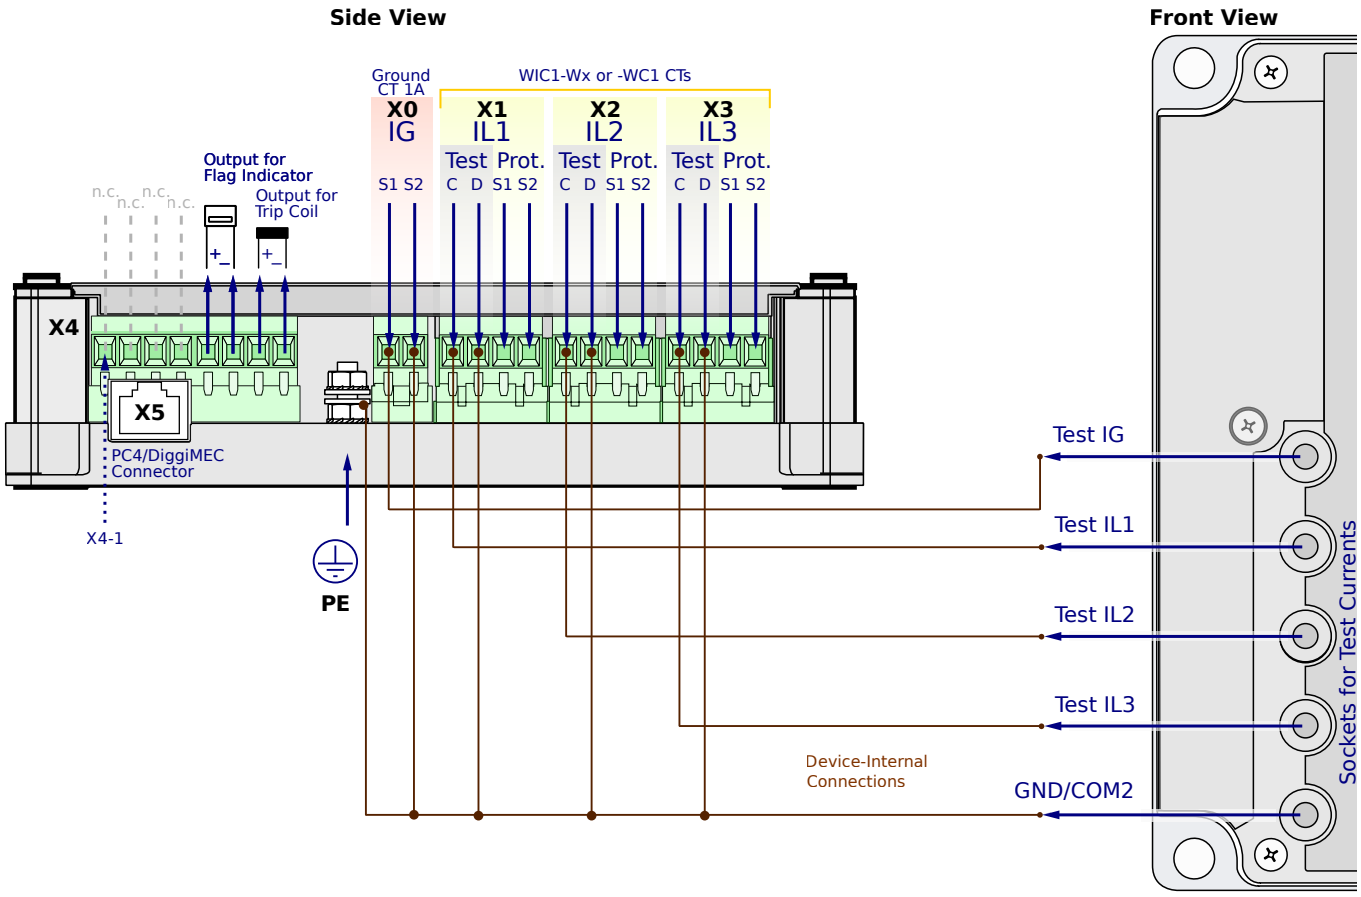


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0AA0

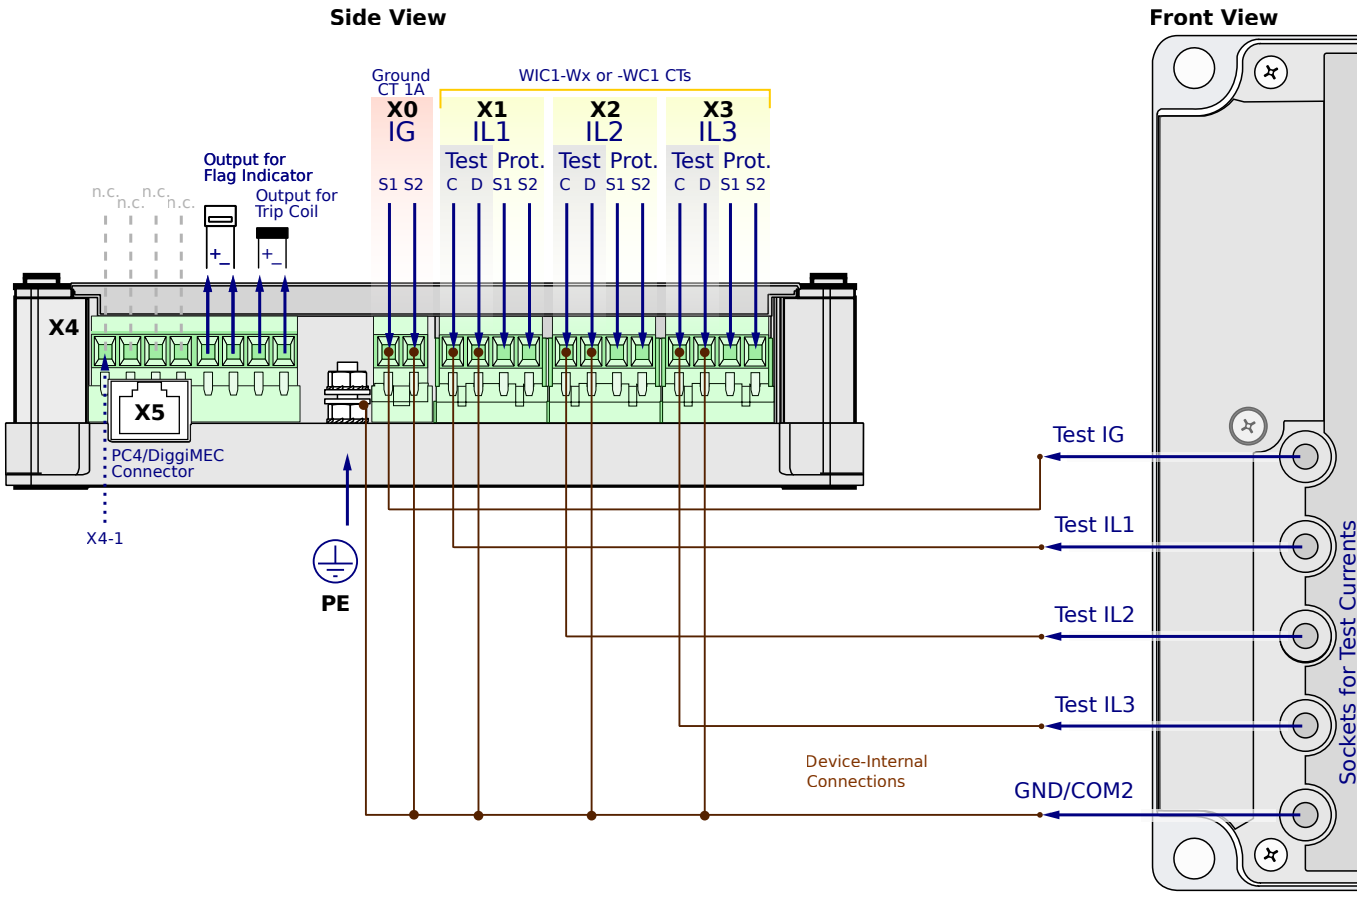


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0AAH

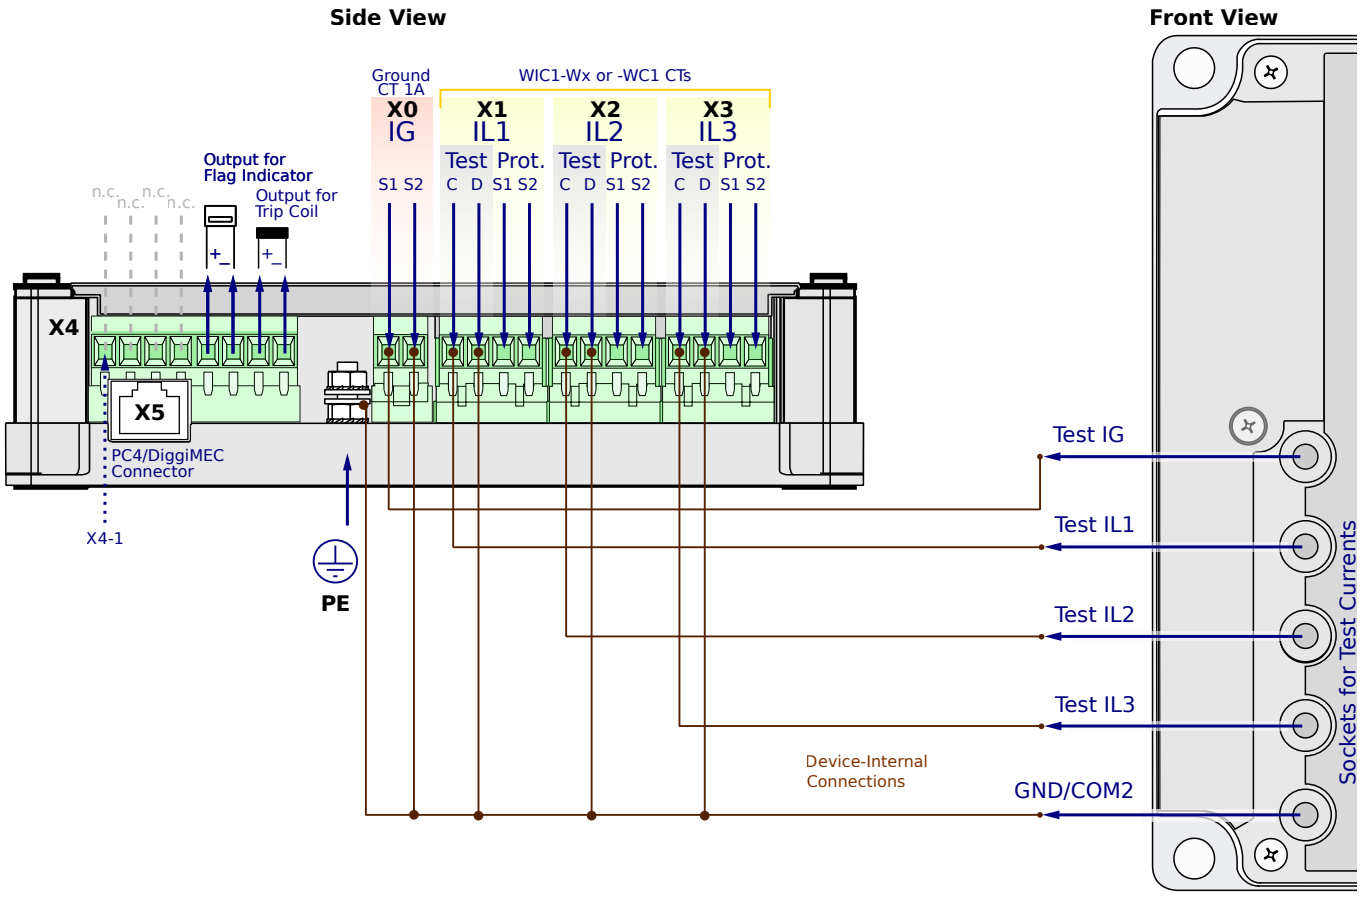


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0PA0

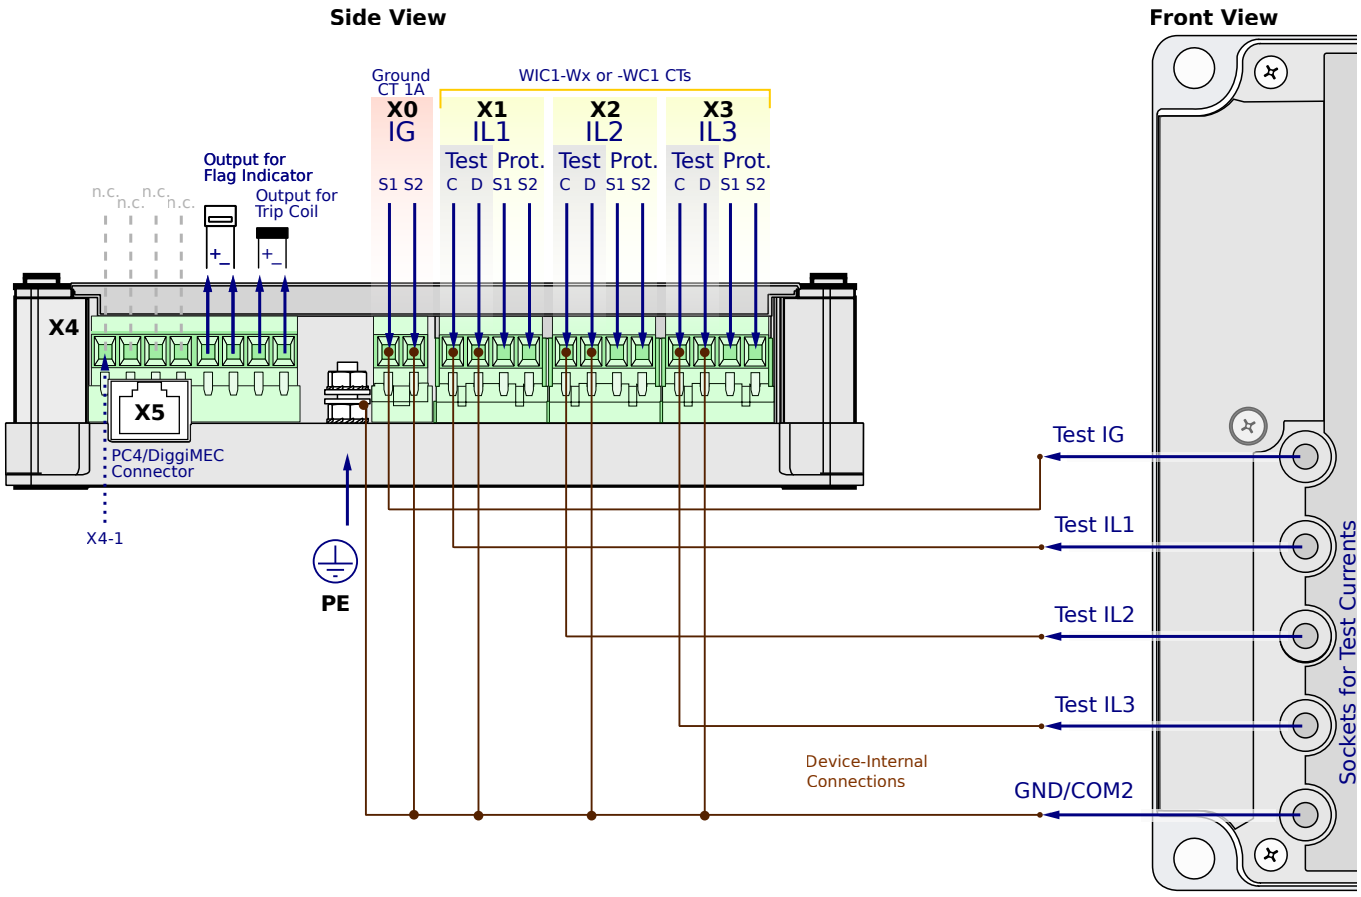


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN0PAH

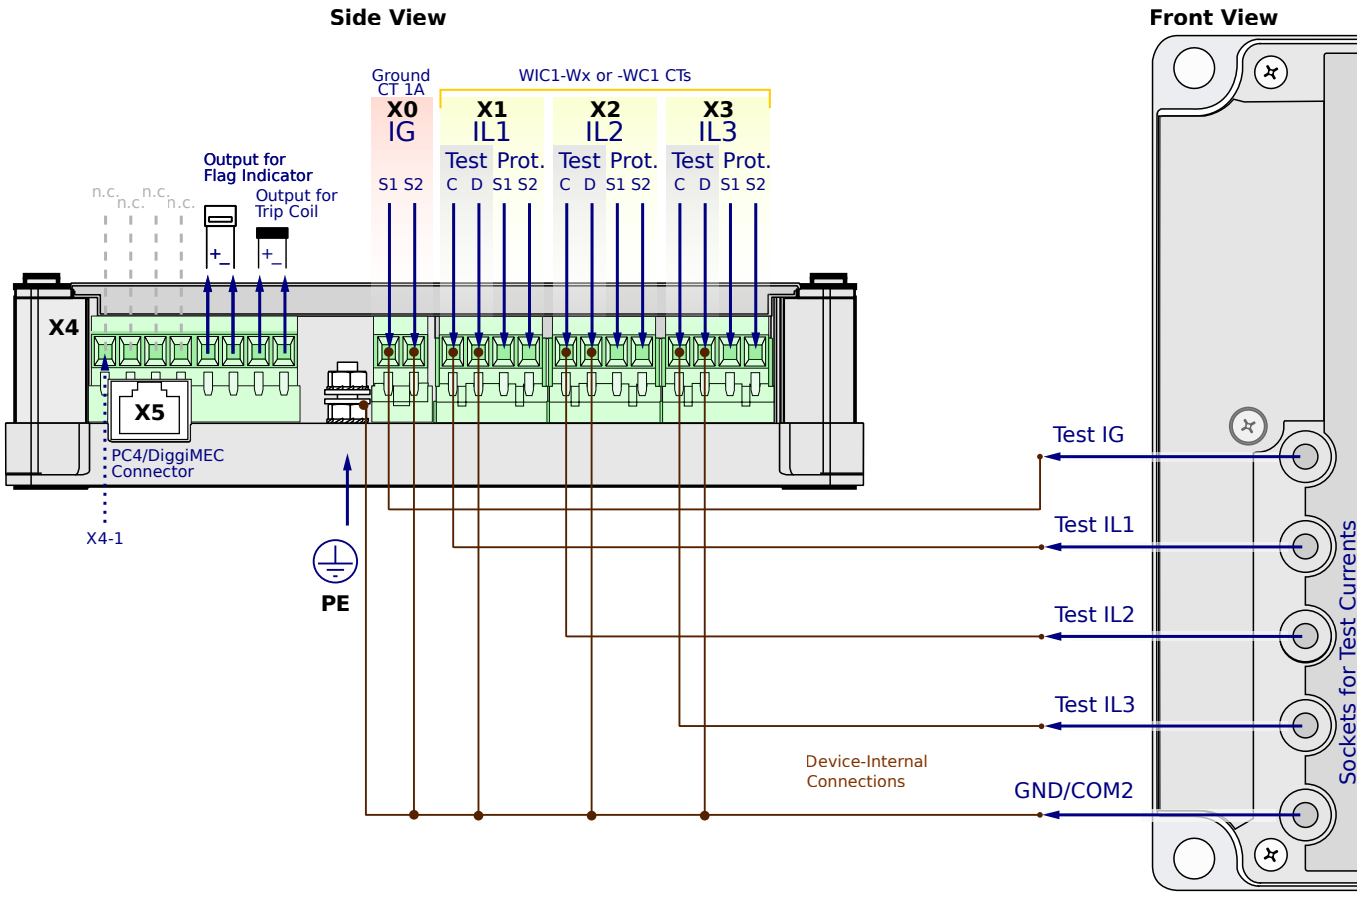


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1SA0

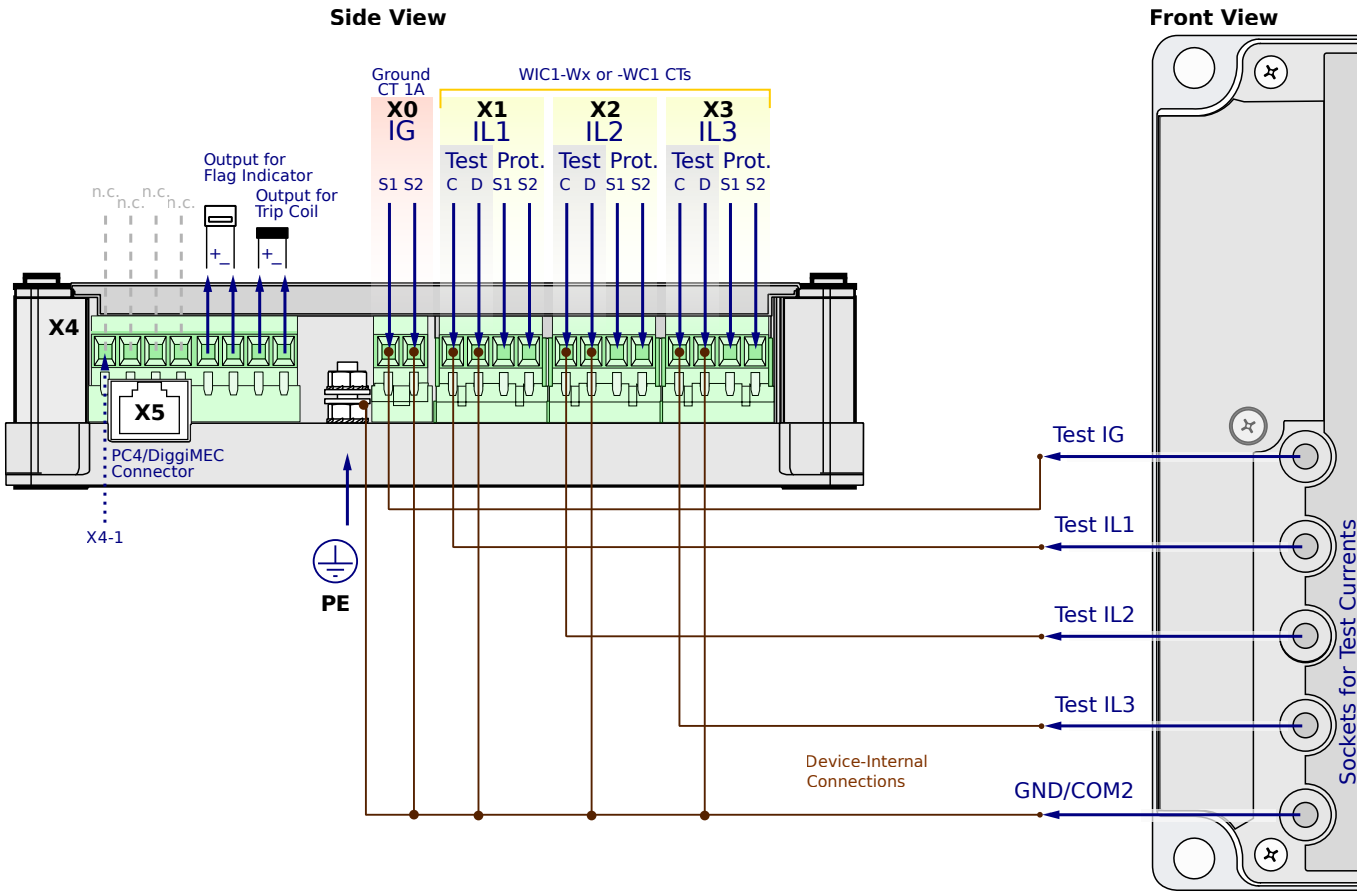


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1SAH

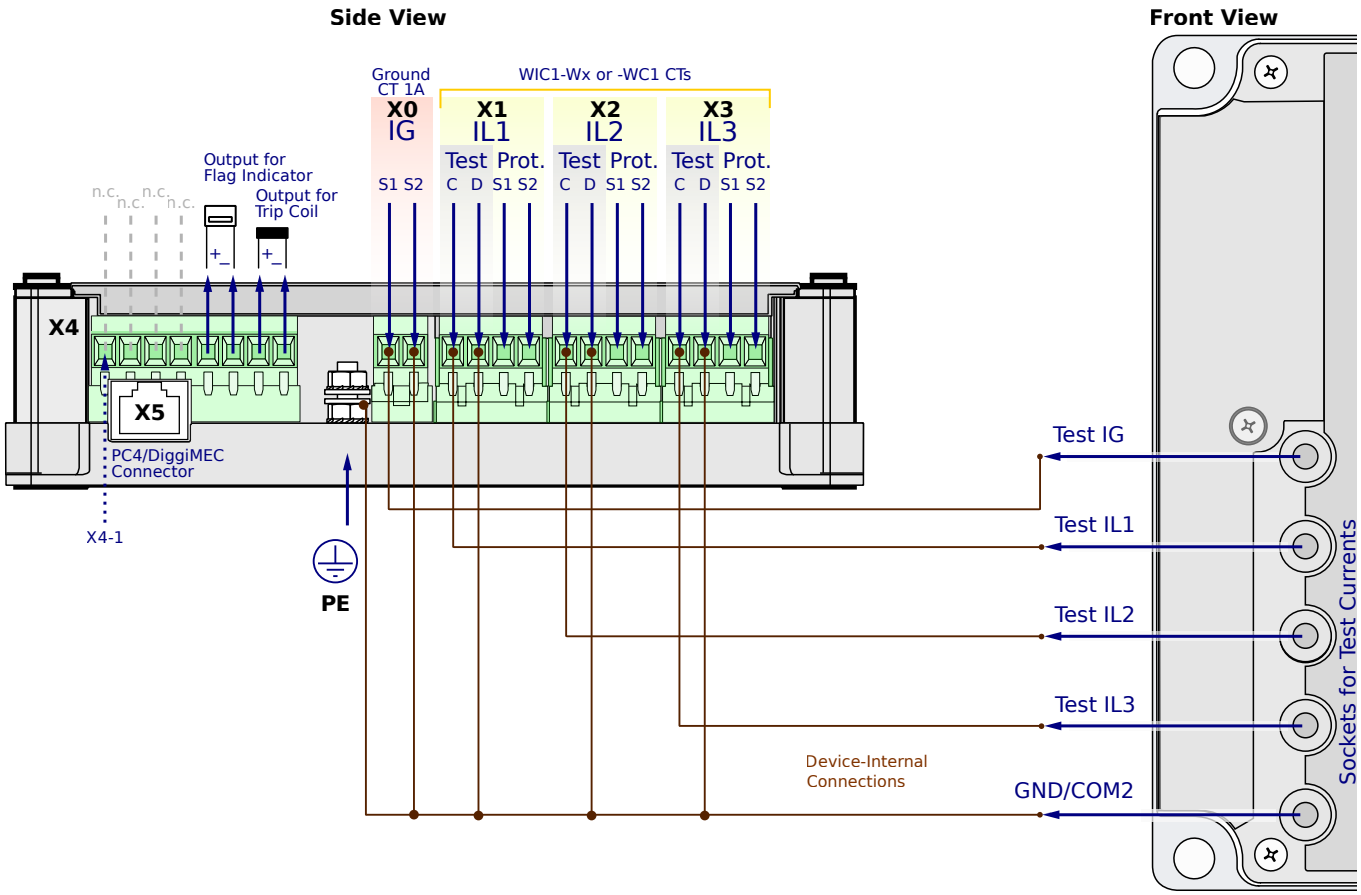


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1AA0

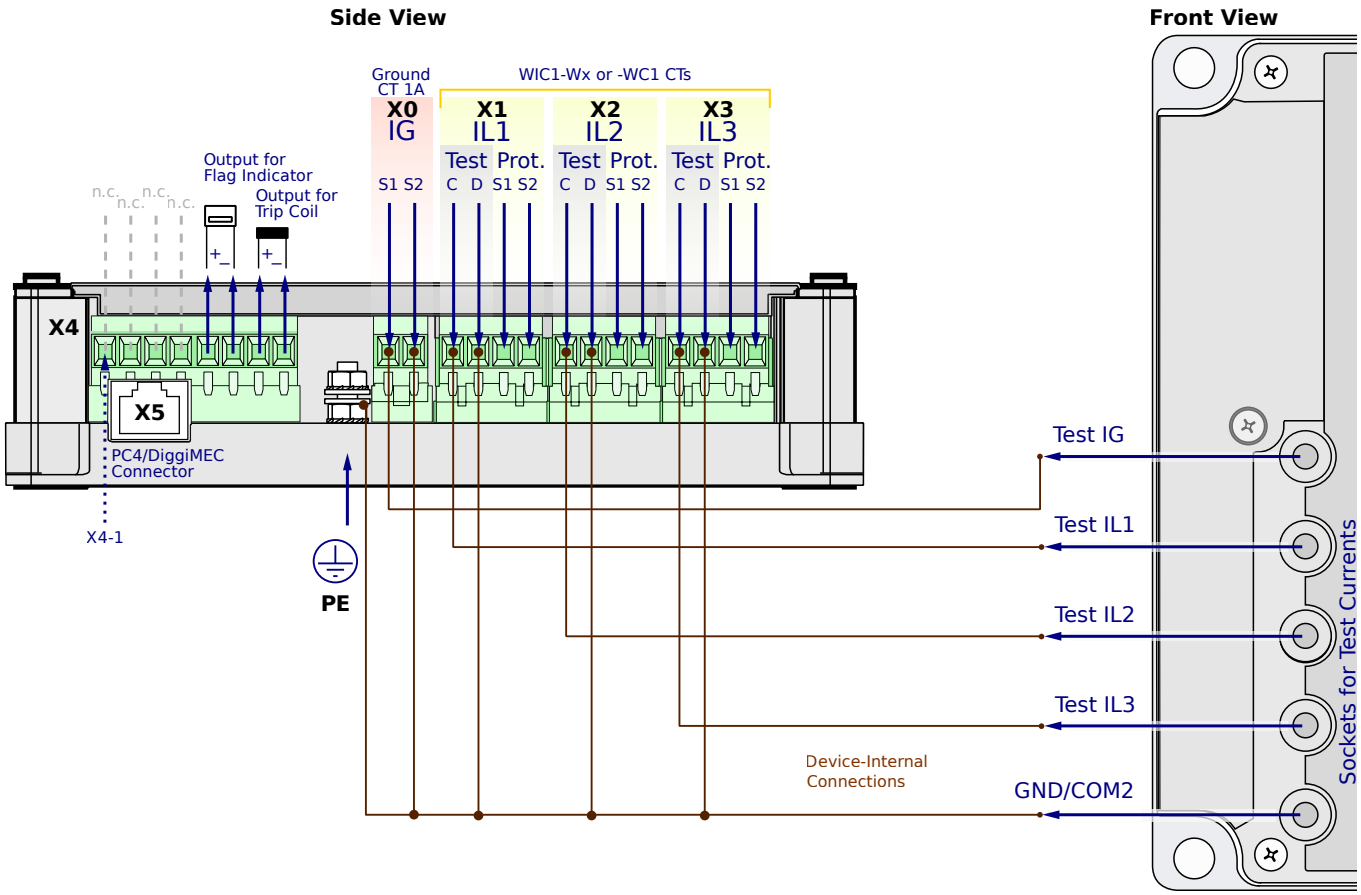


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1AAH

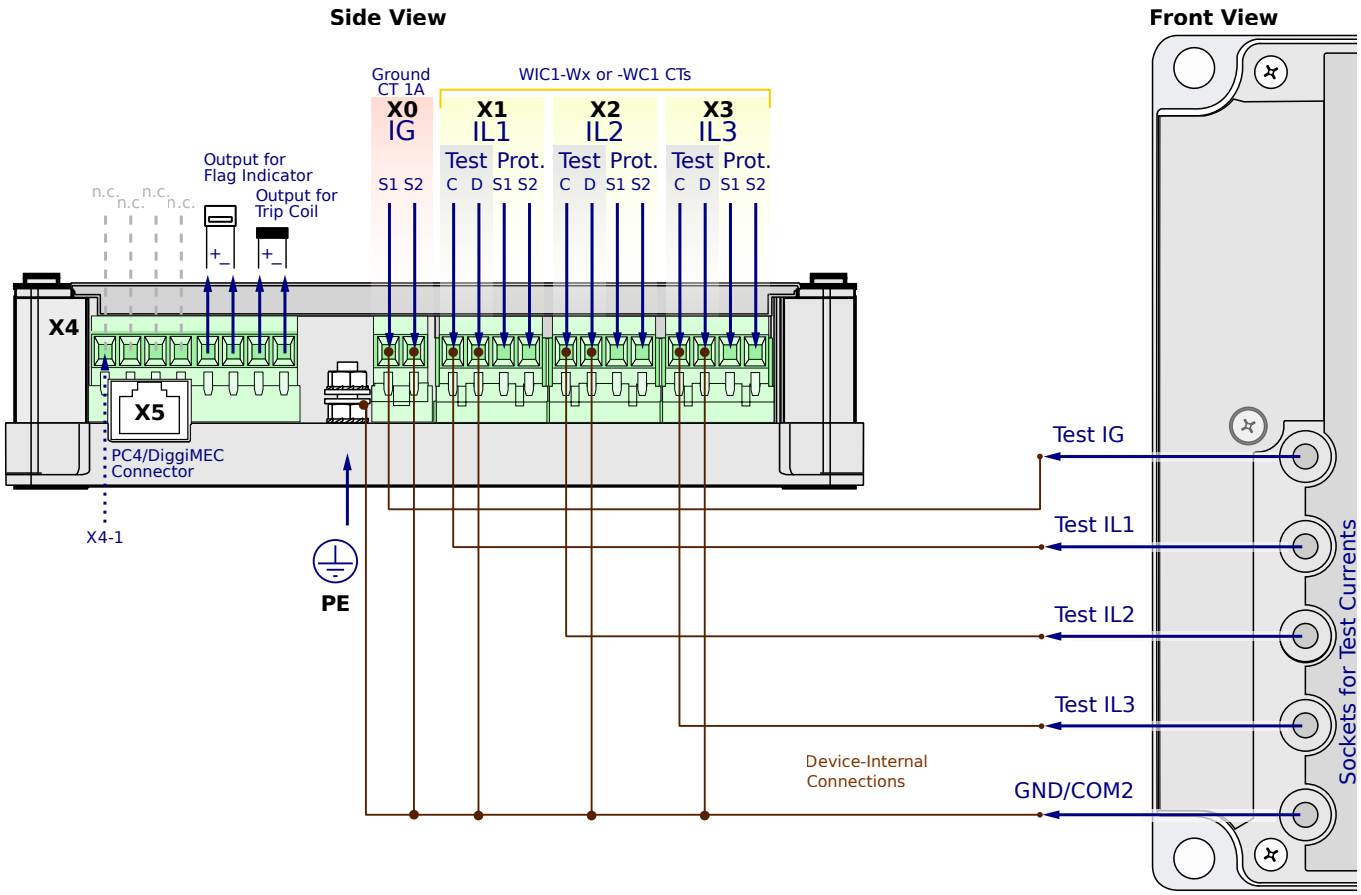


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1PA0

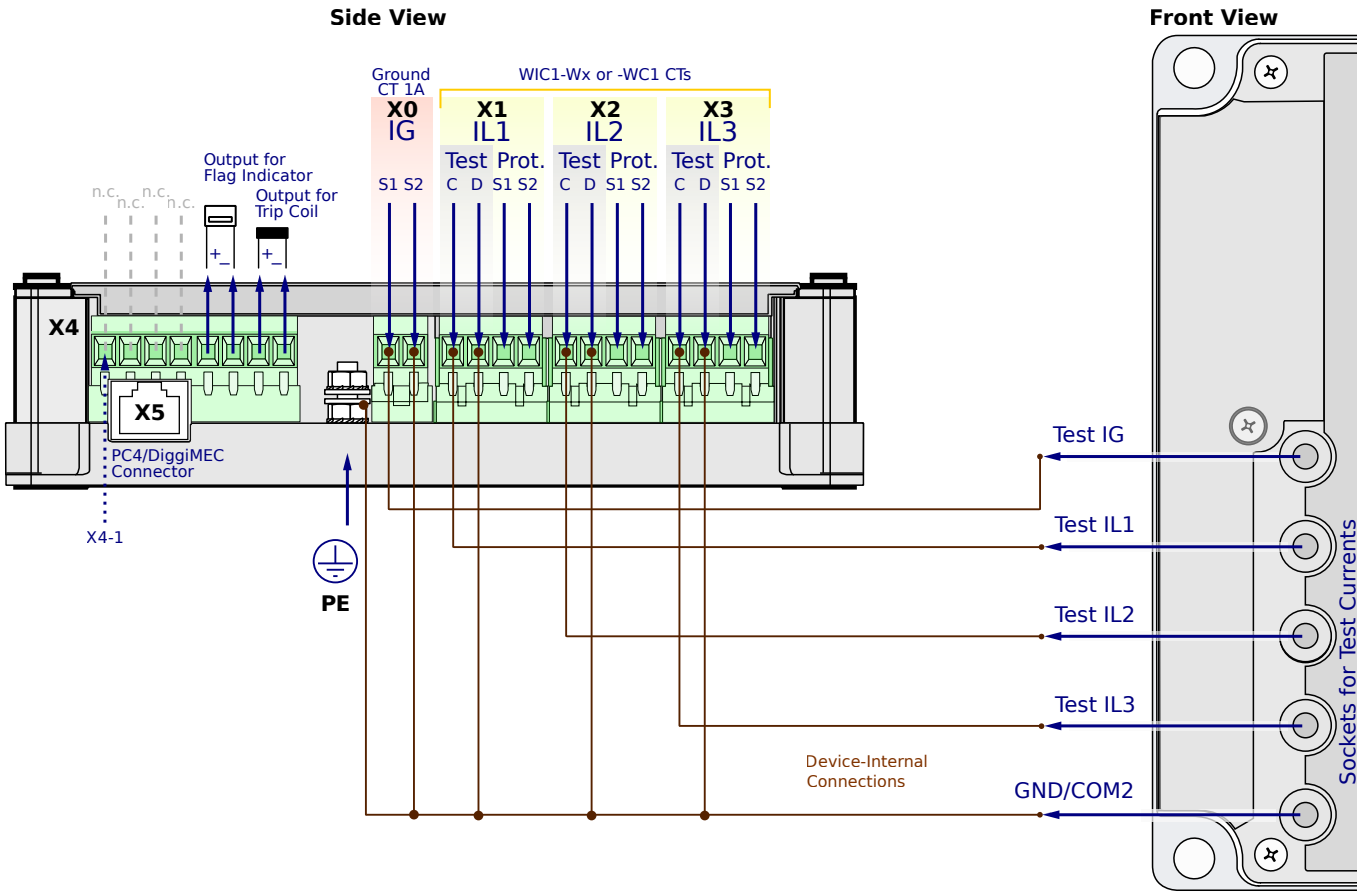


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN1PAH

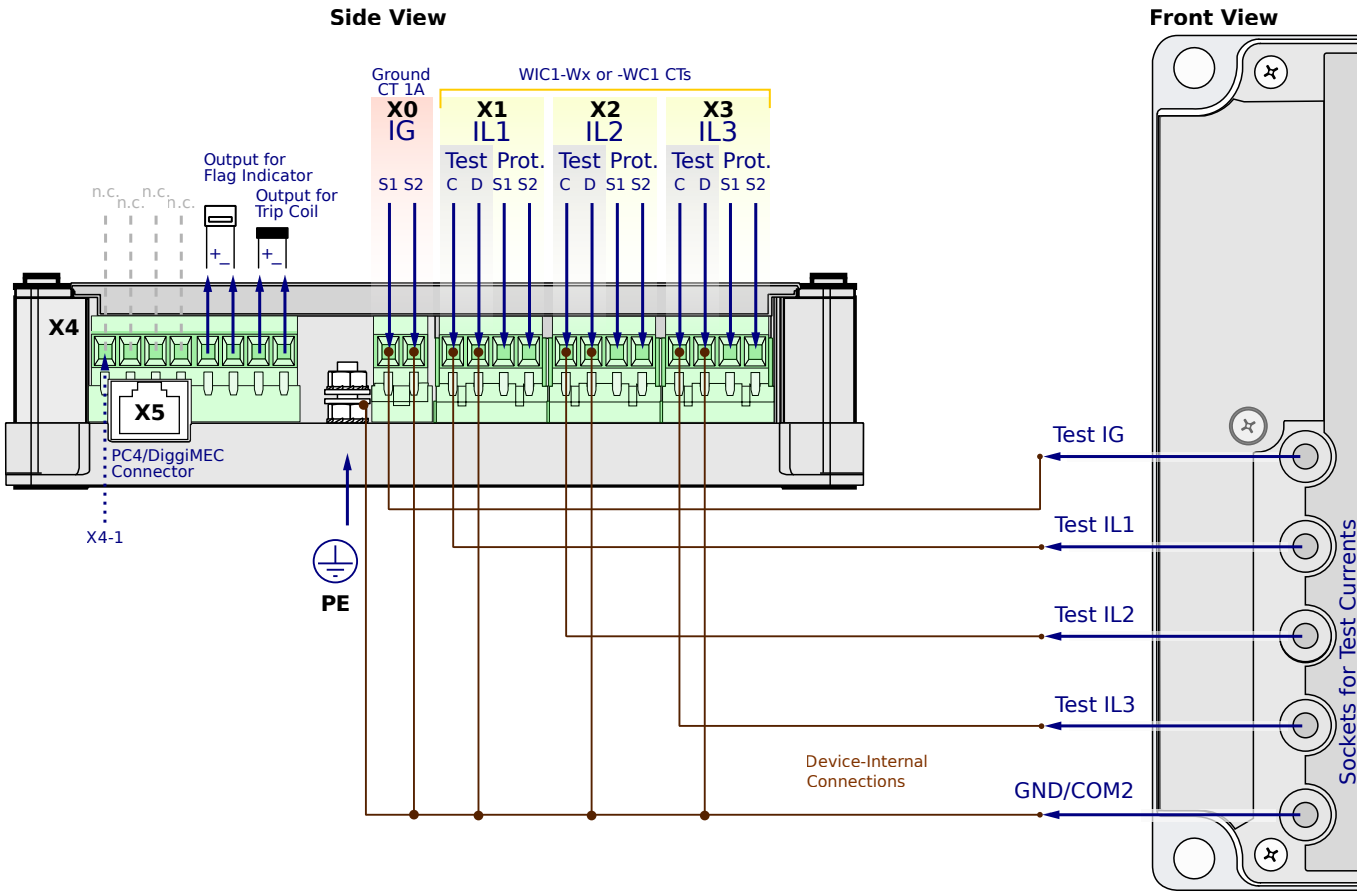


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2SA0

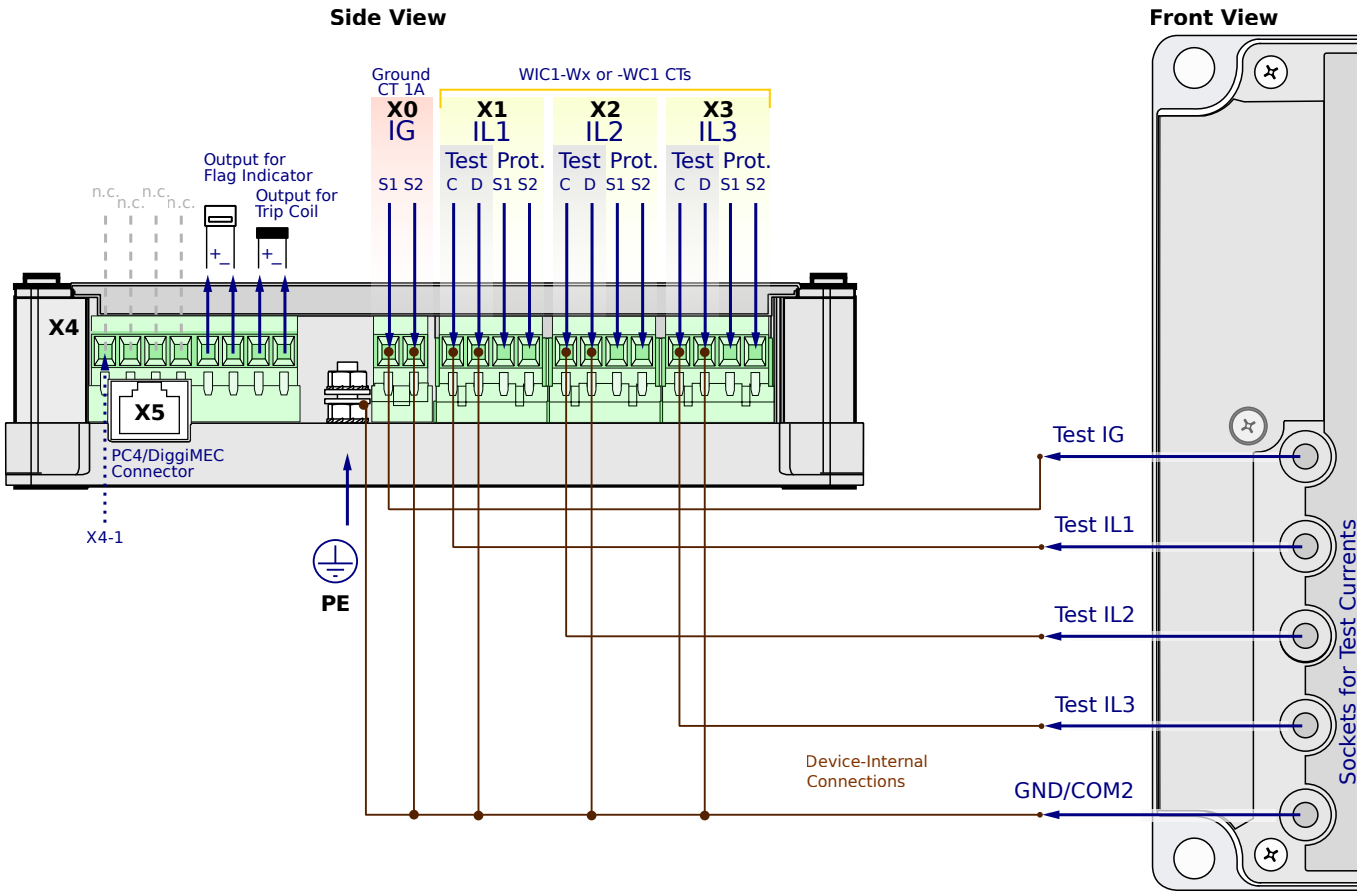


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2SAH

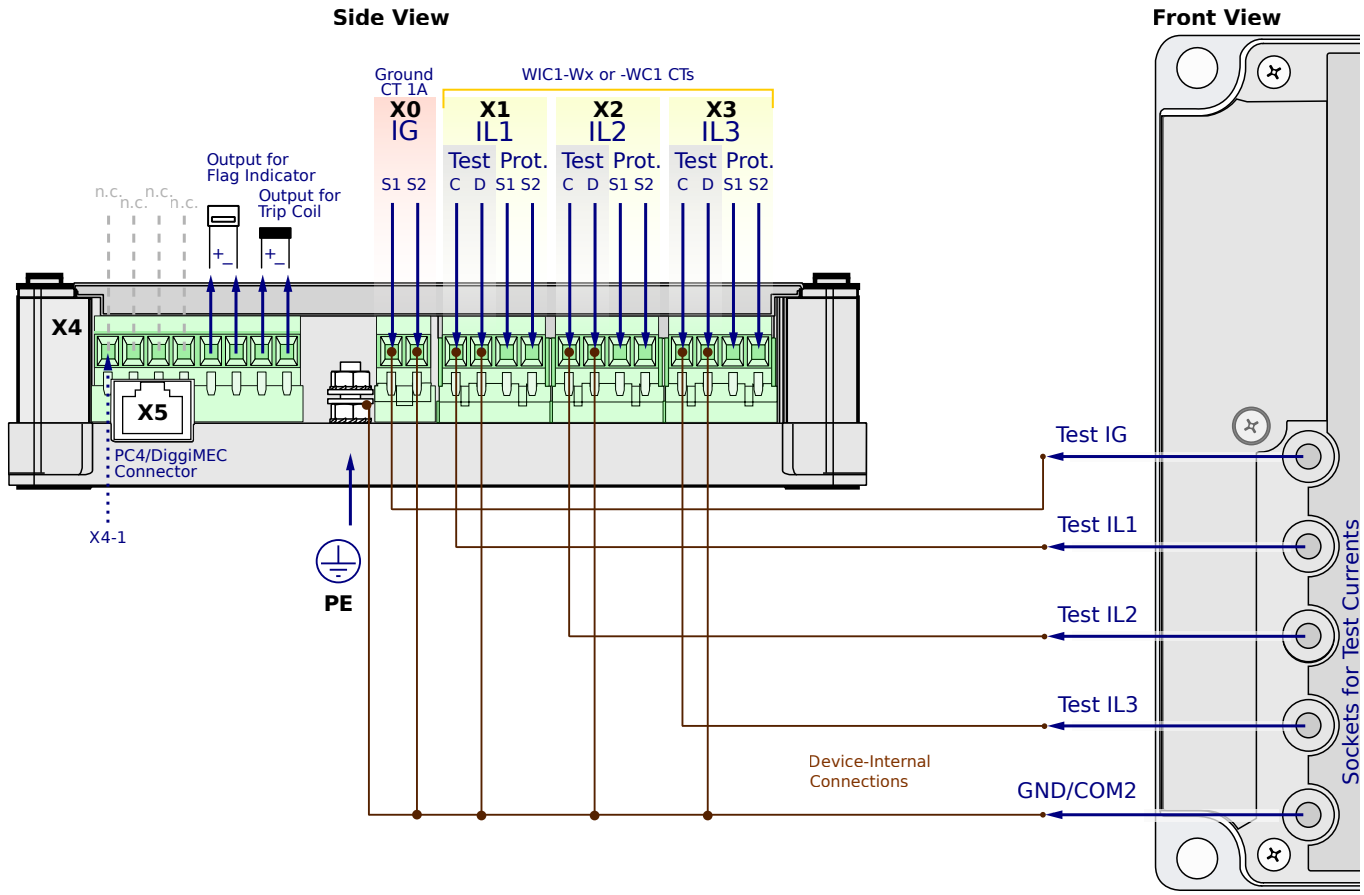


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2AA0

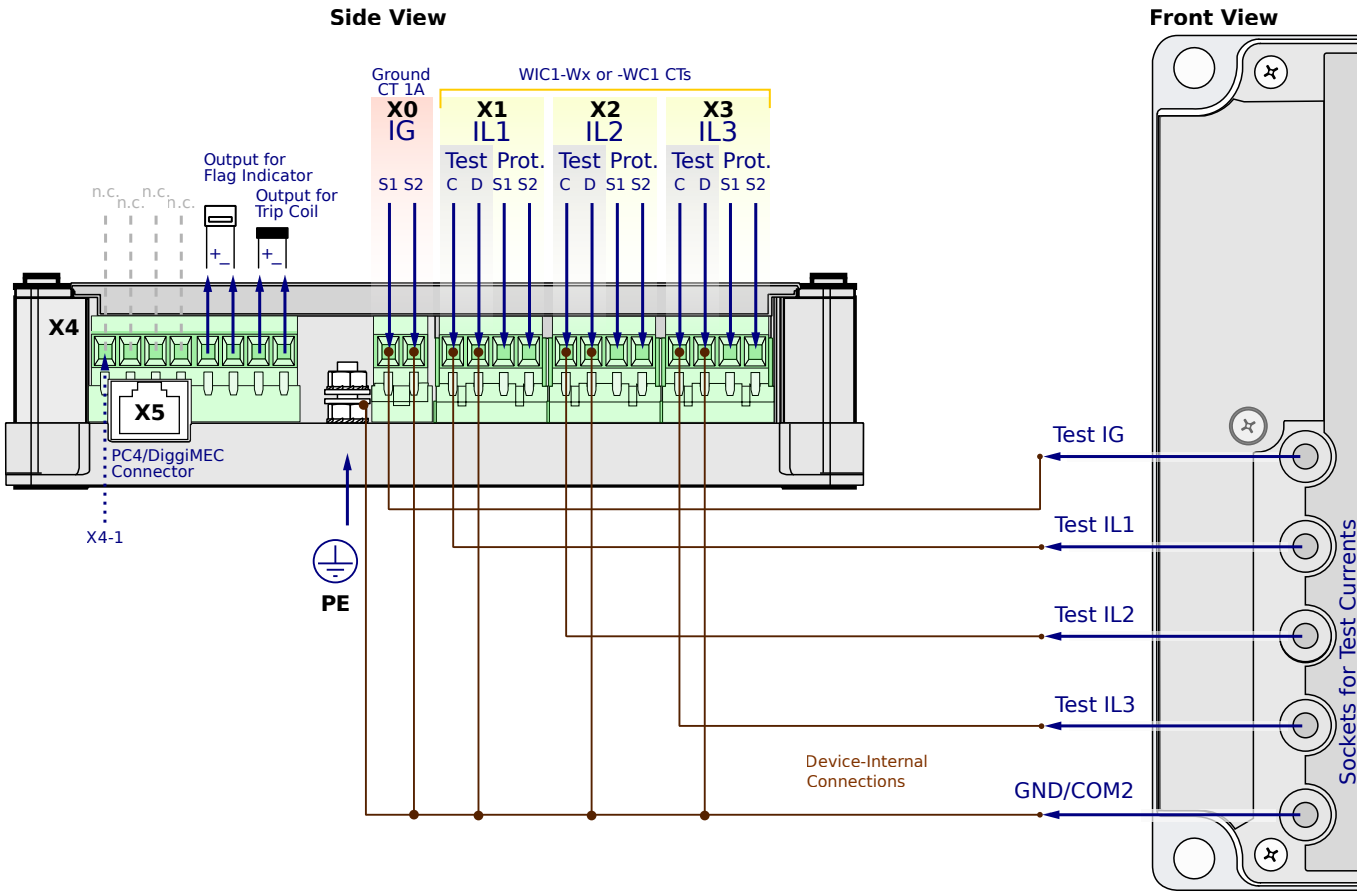


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2AAH

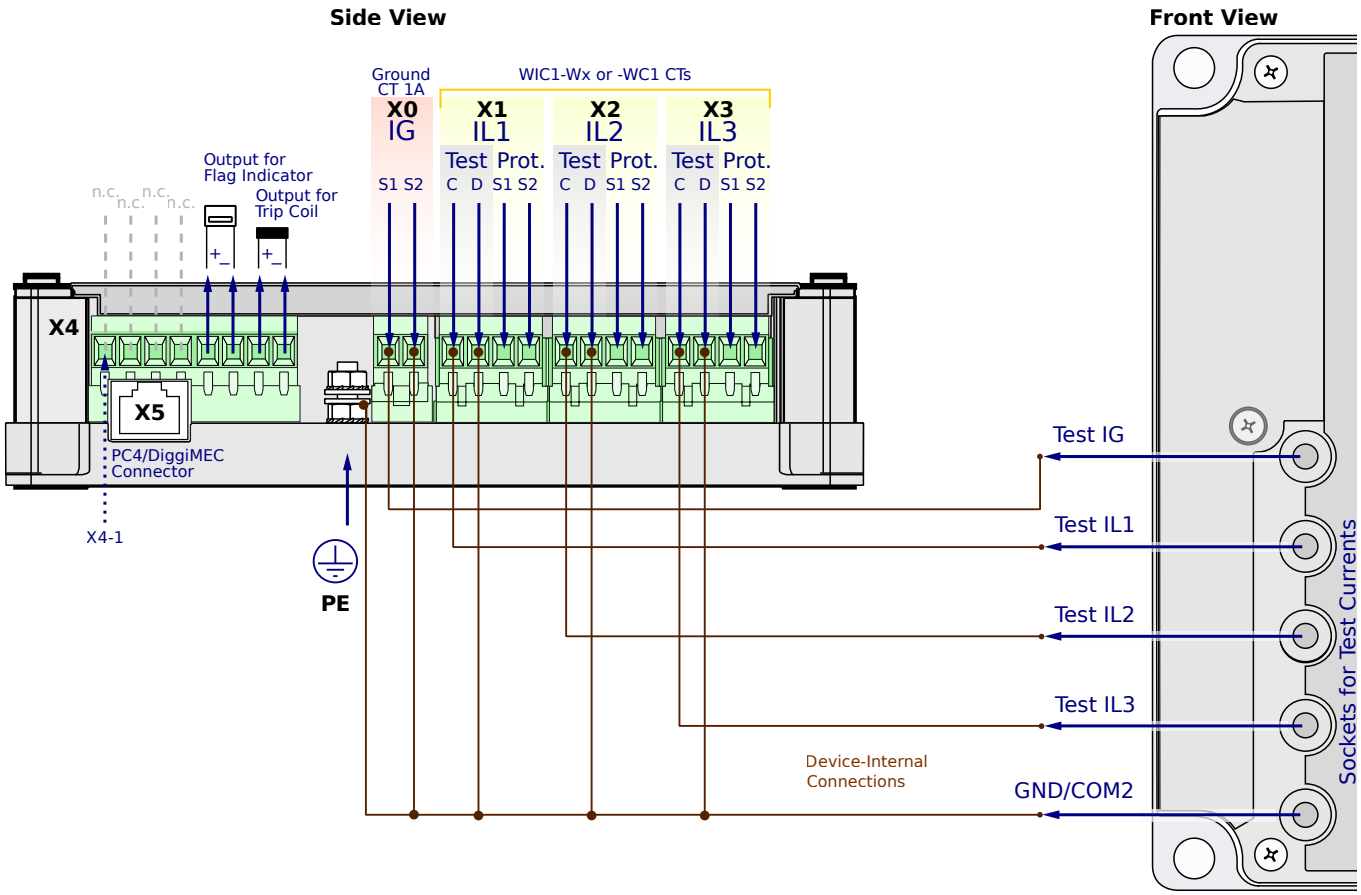


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2PA0

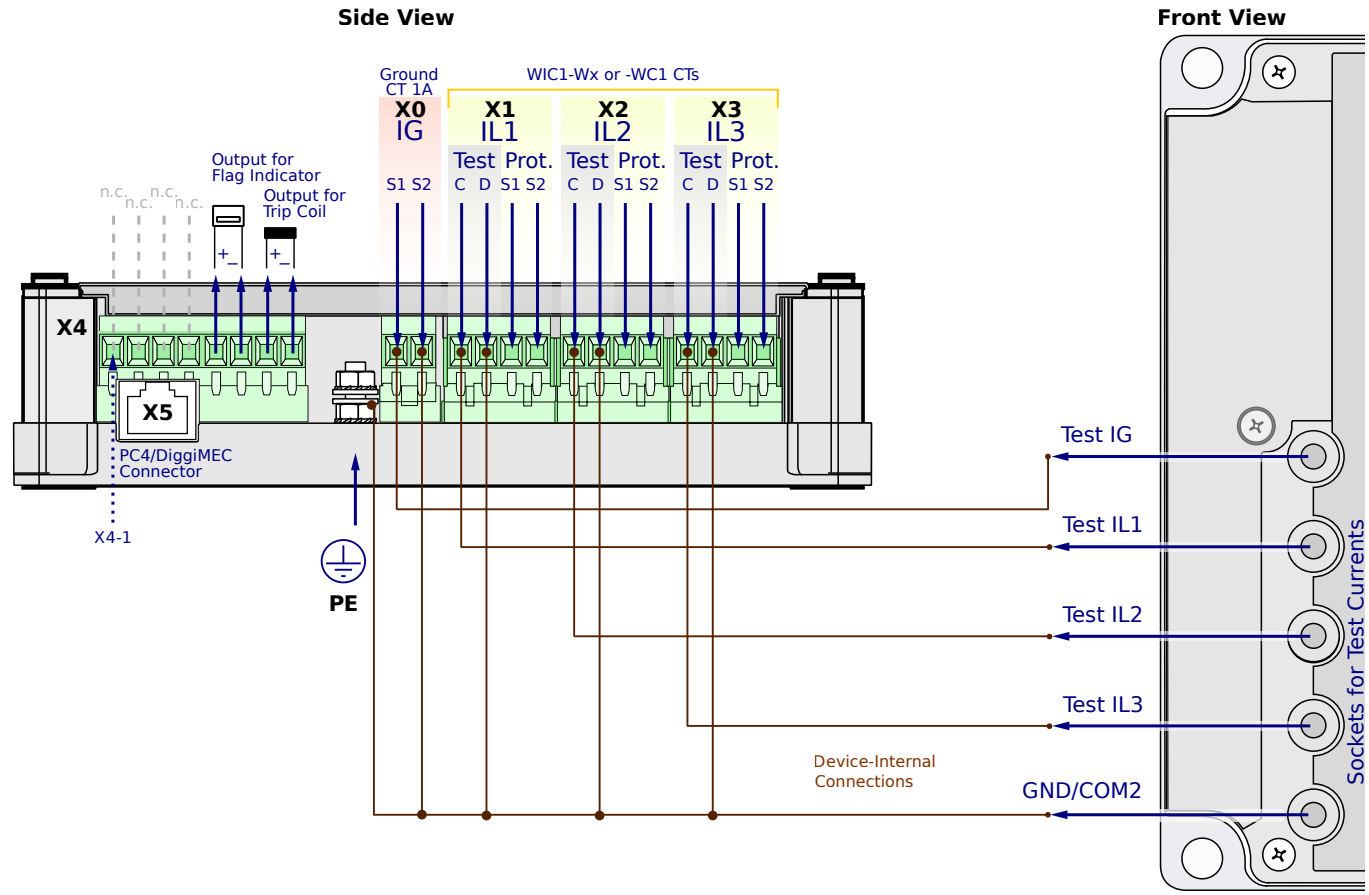


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NN2PAH

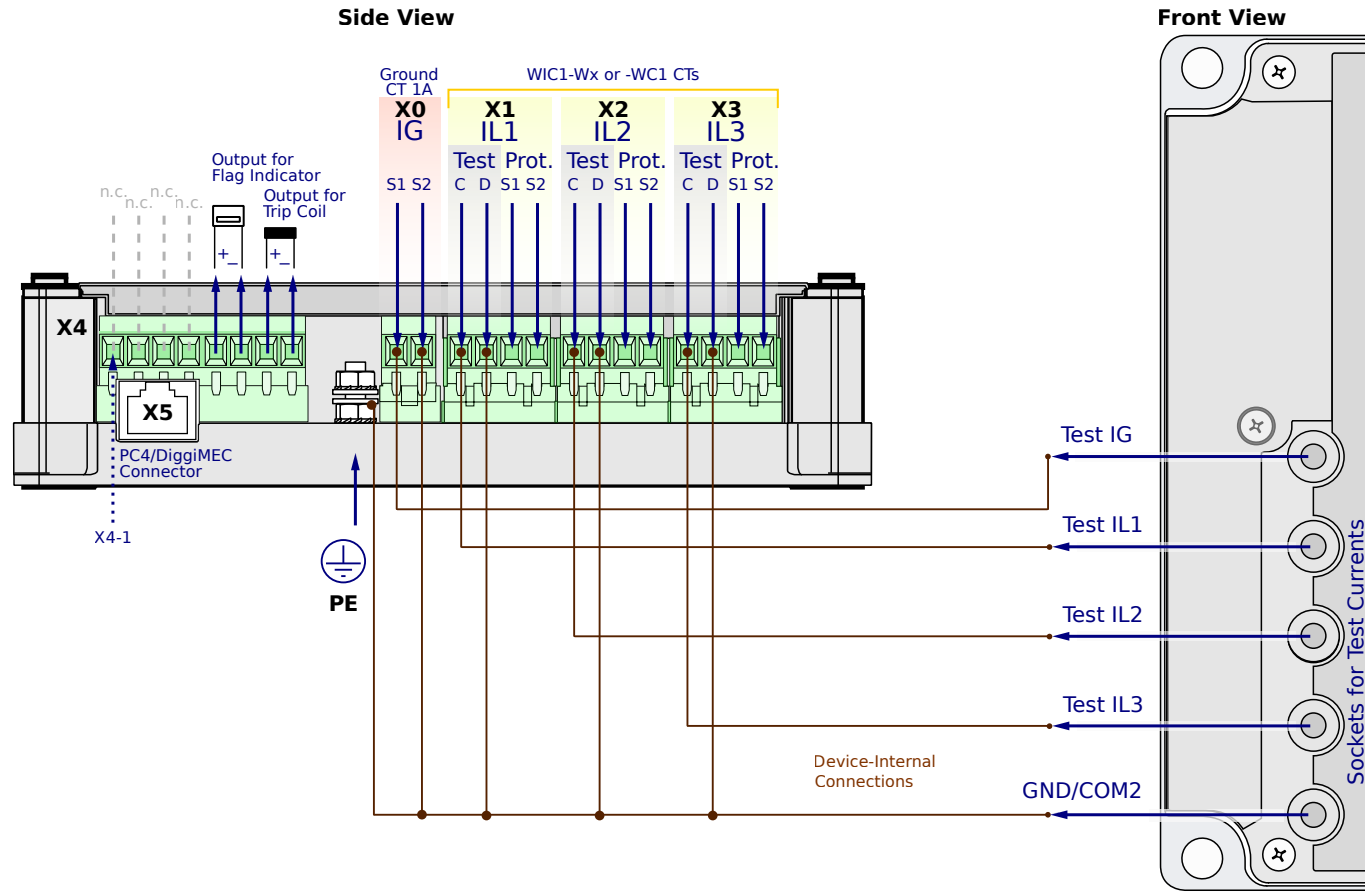


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0SA0

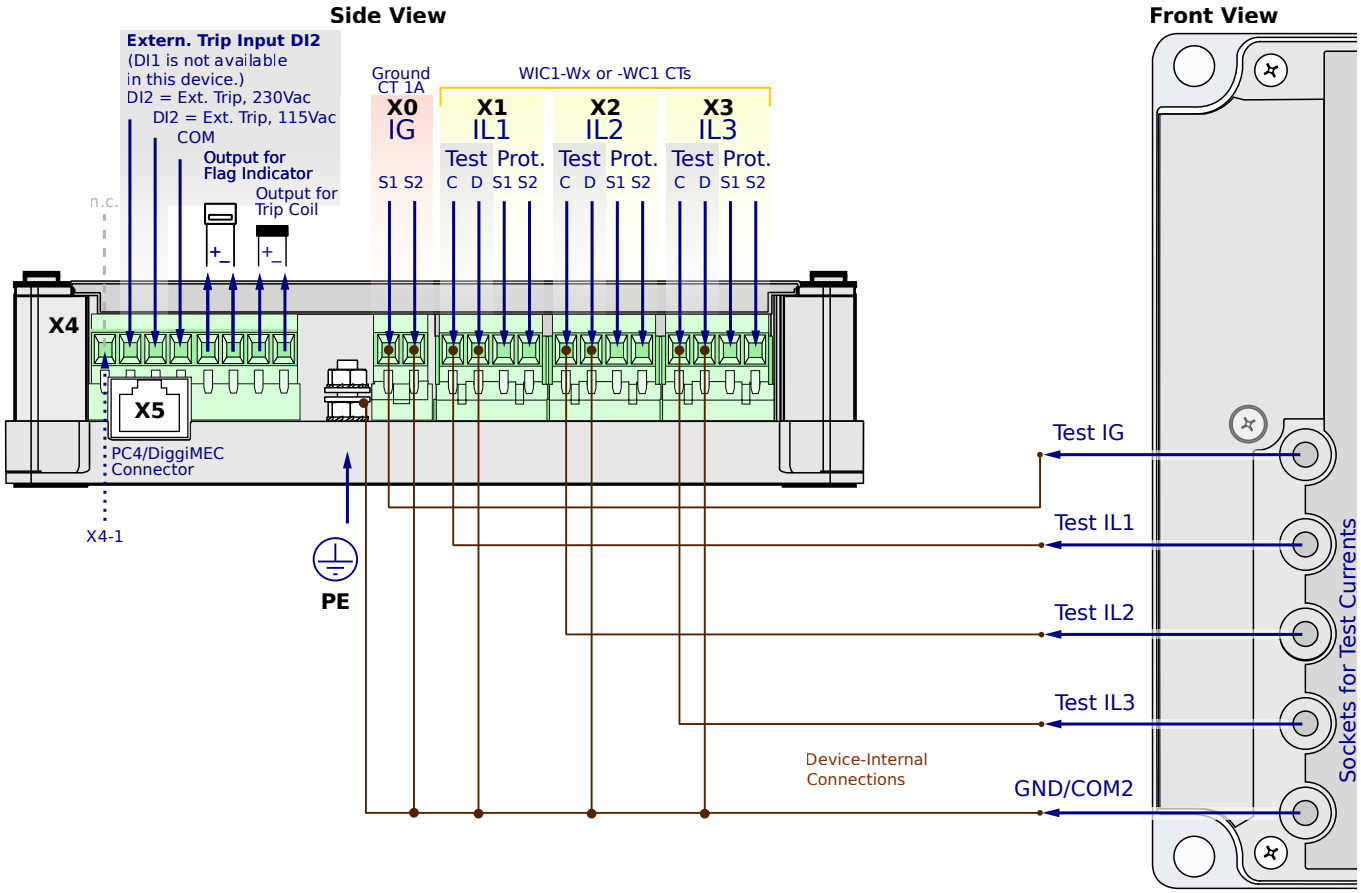


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0SAH

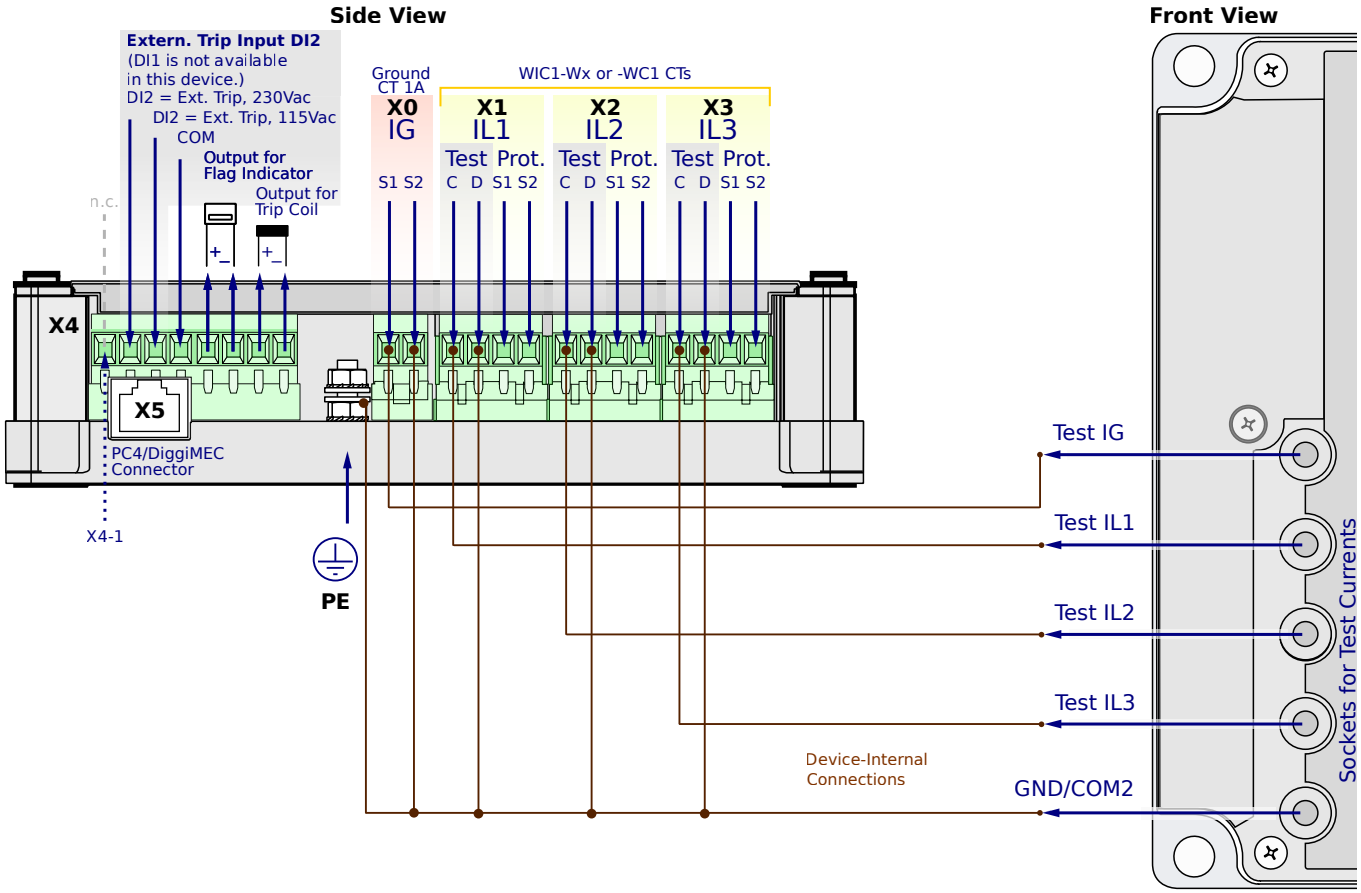


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0AA0

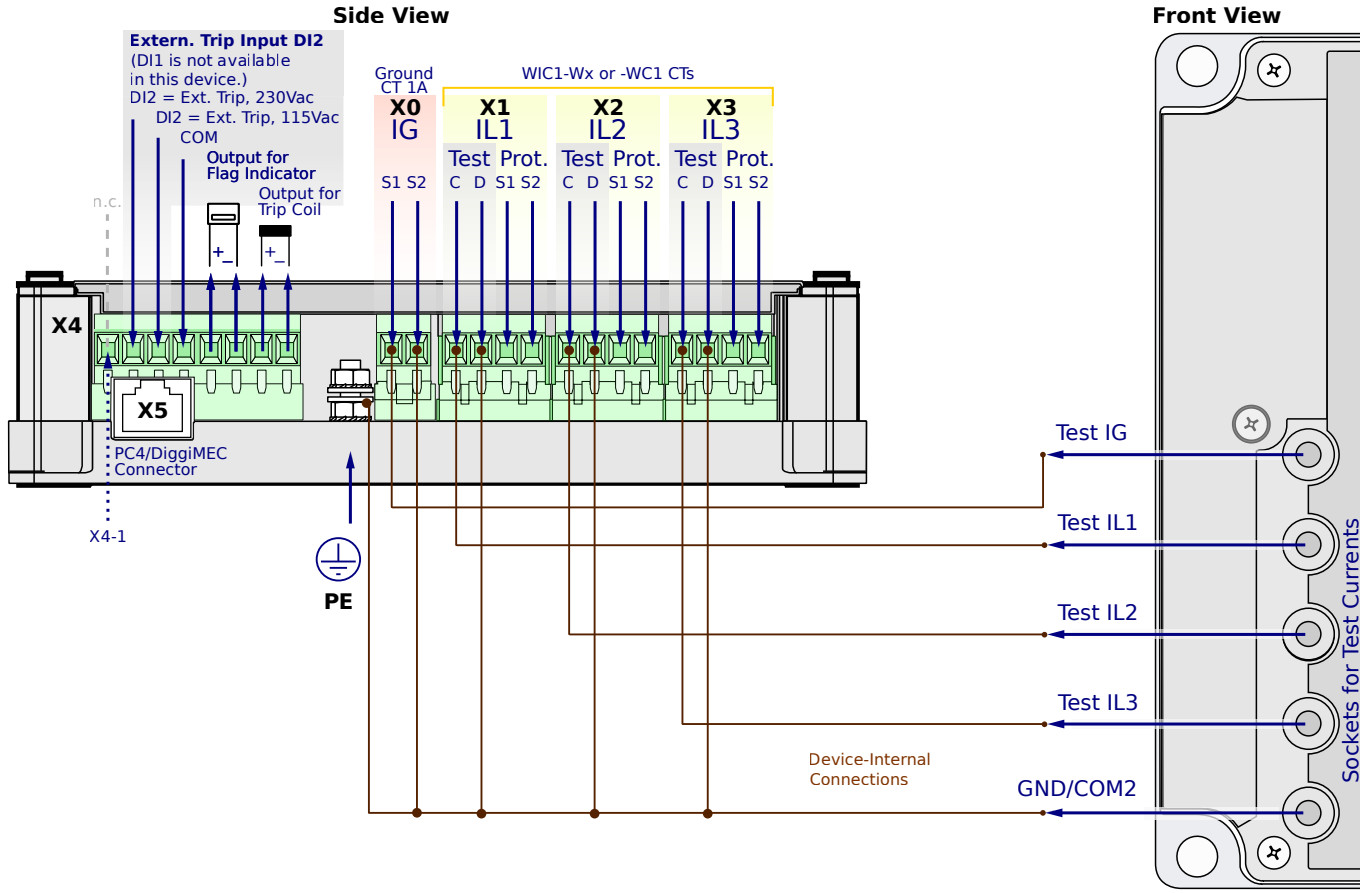


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0AAH

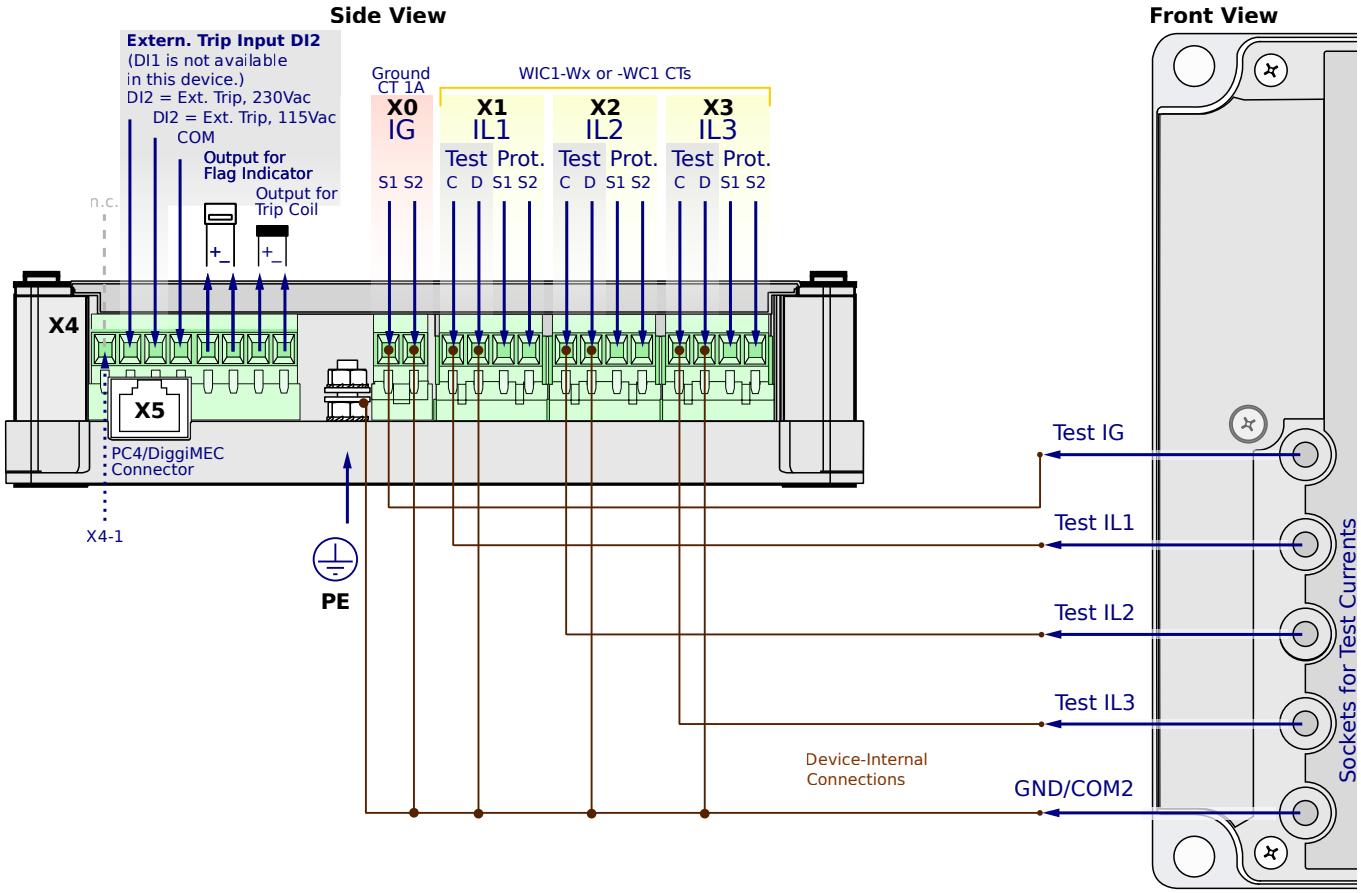


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0PA0

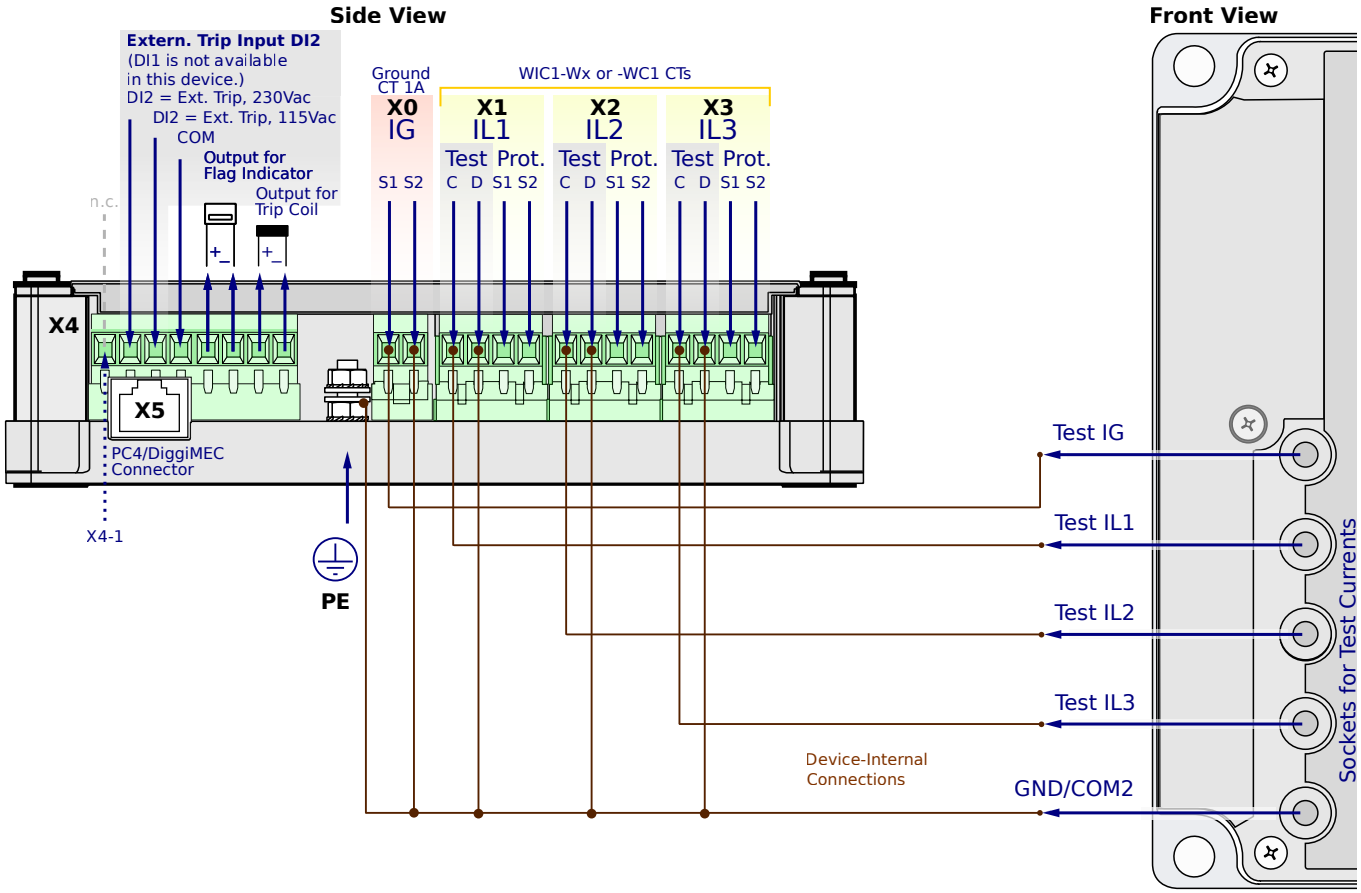


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF0PAH

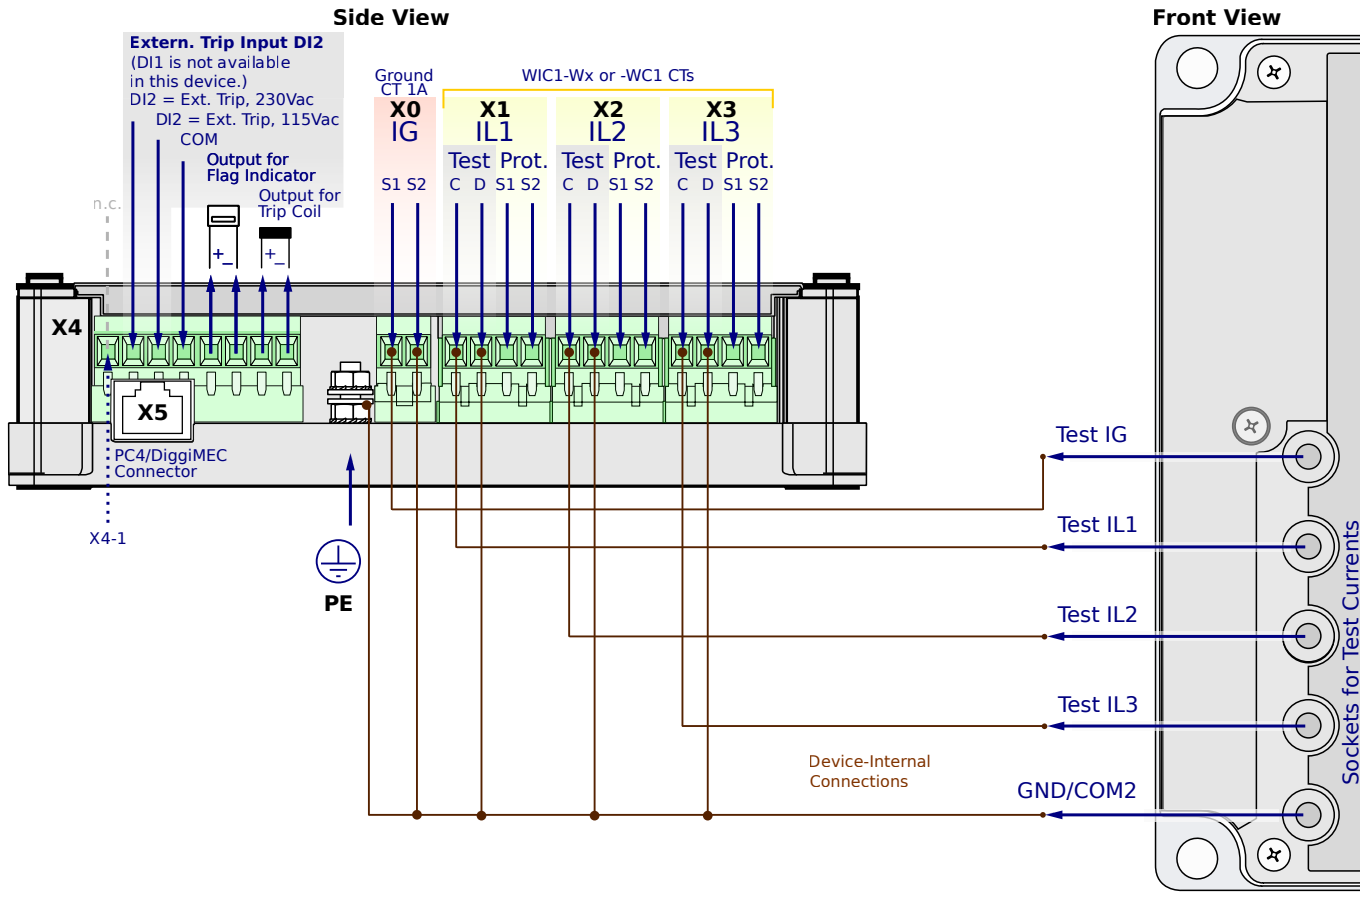


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1SA0

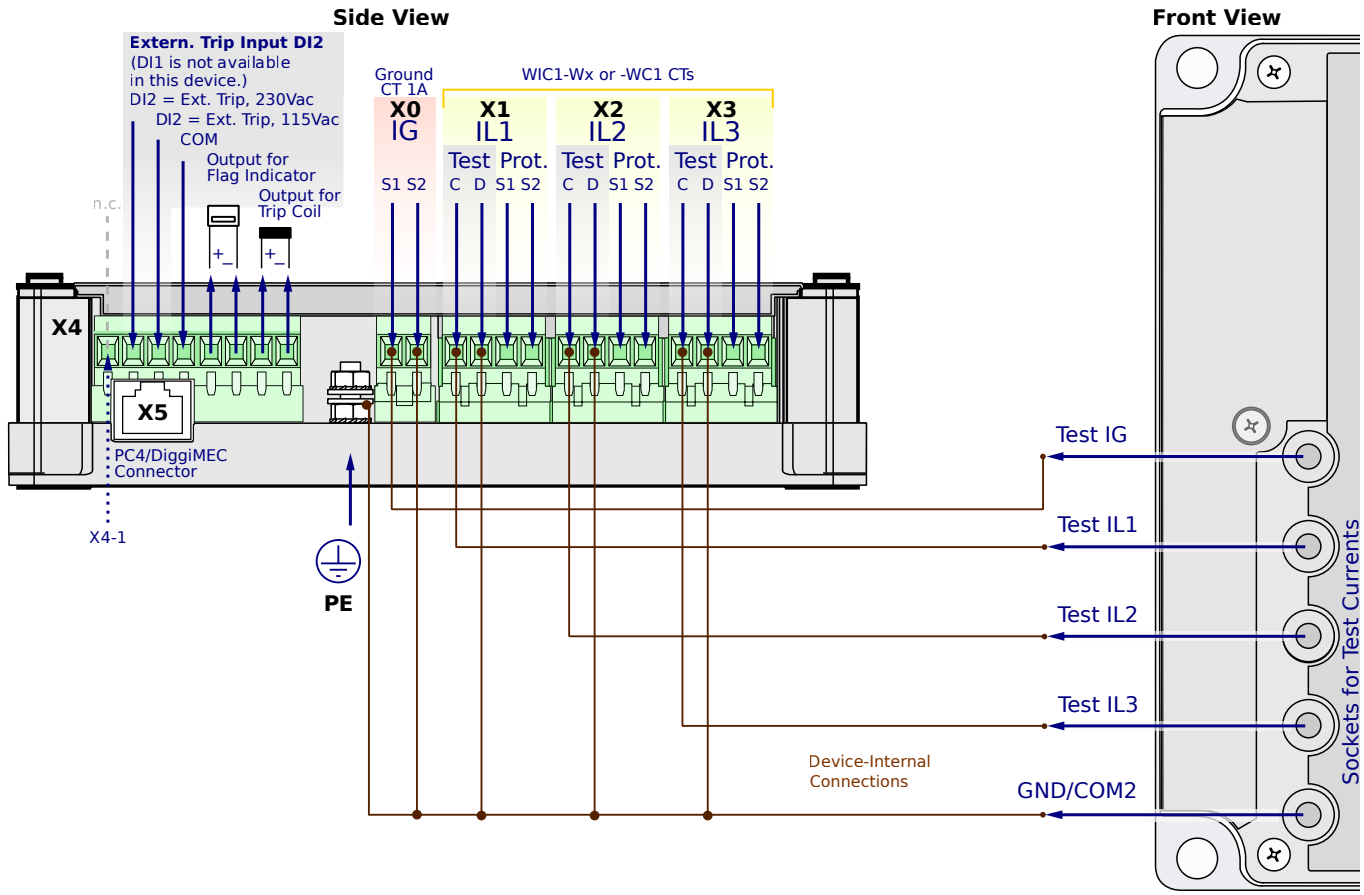


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1SAH

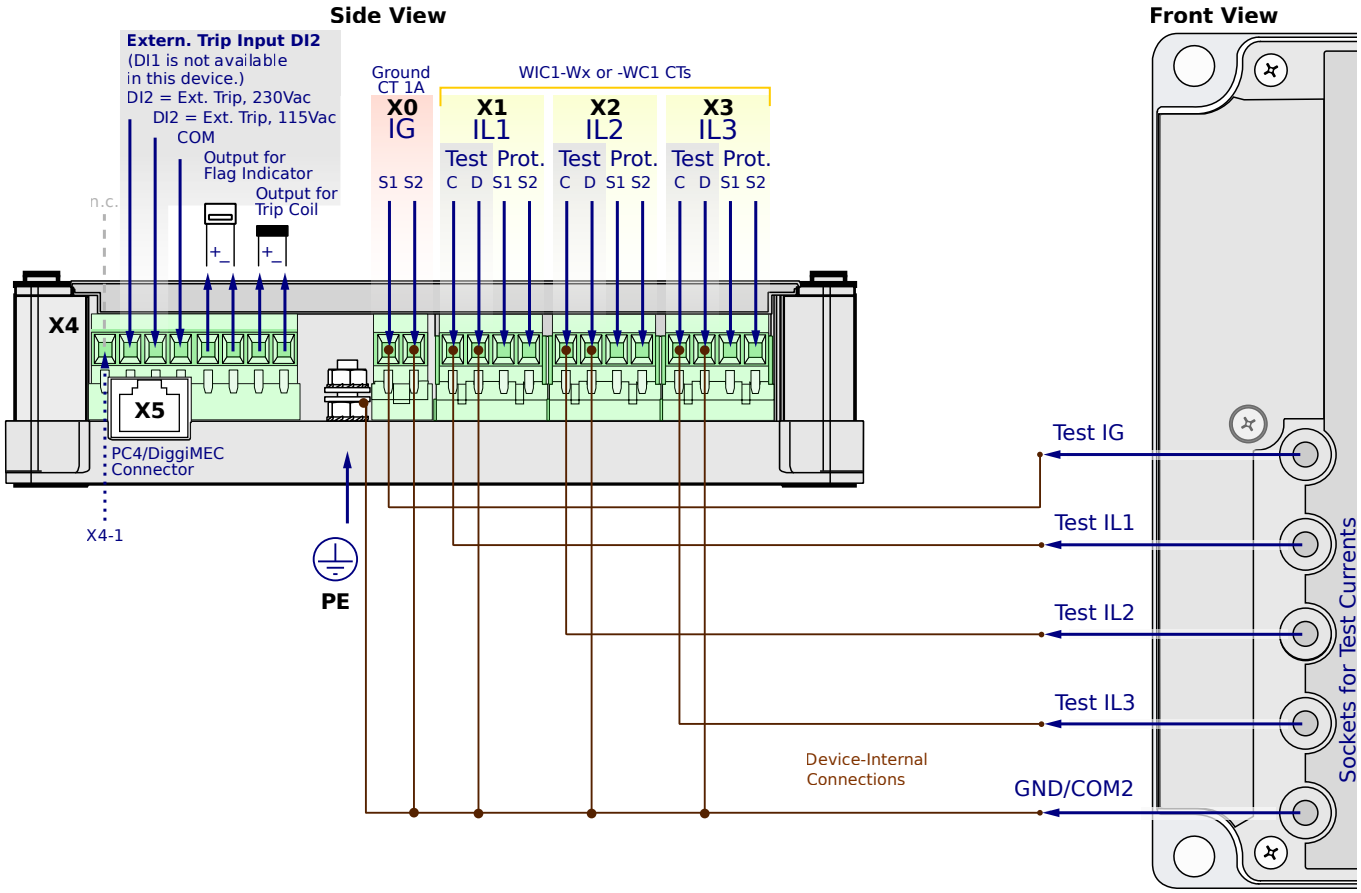


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1AA0

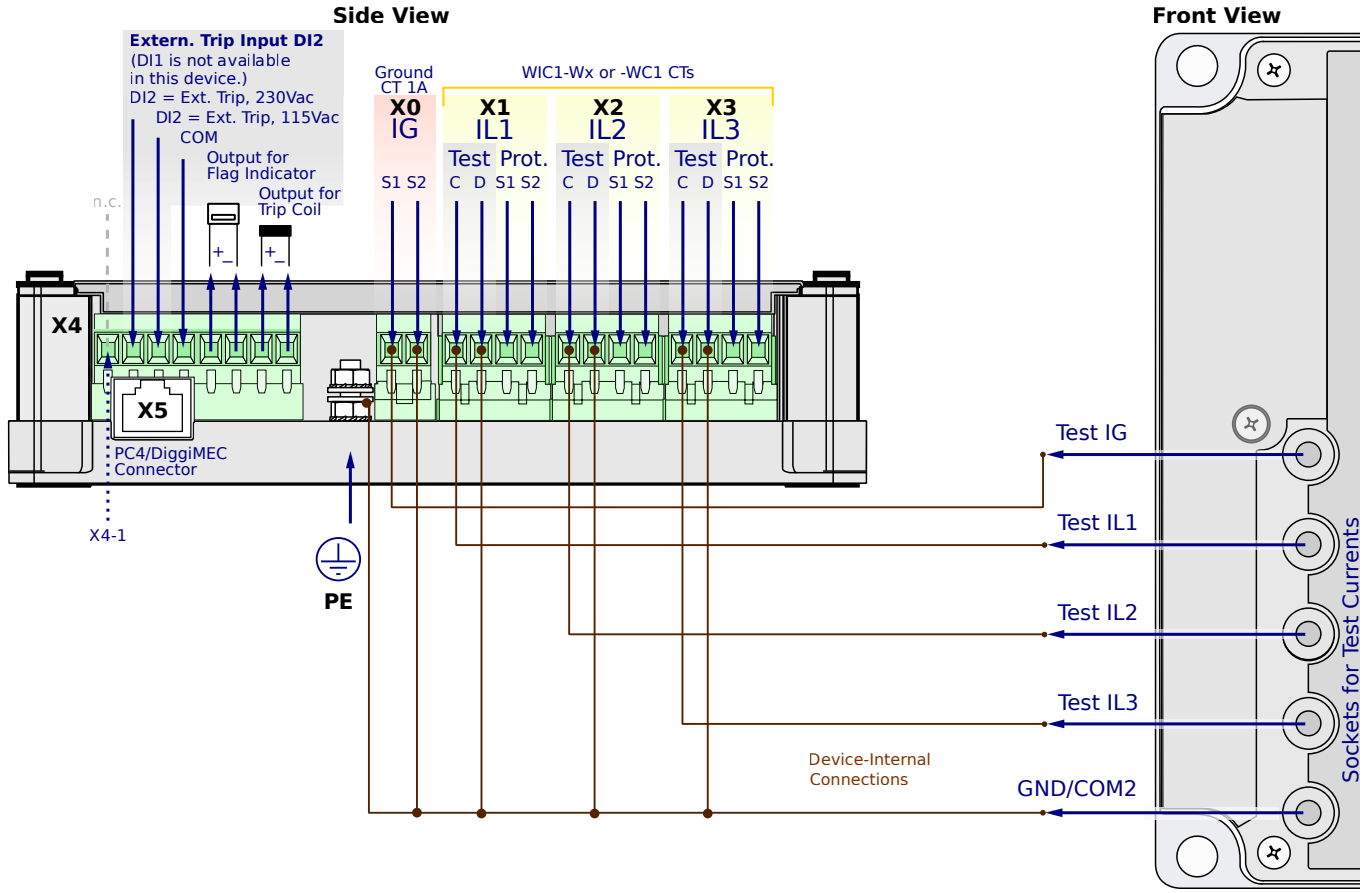


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1AAH

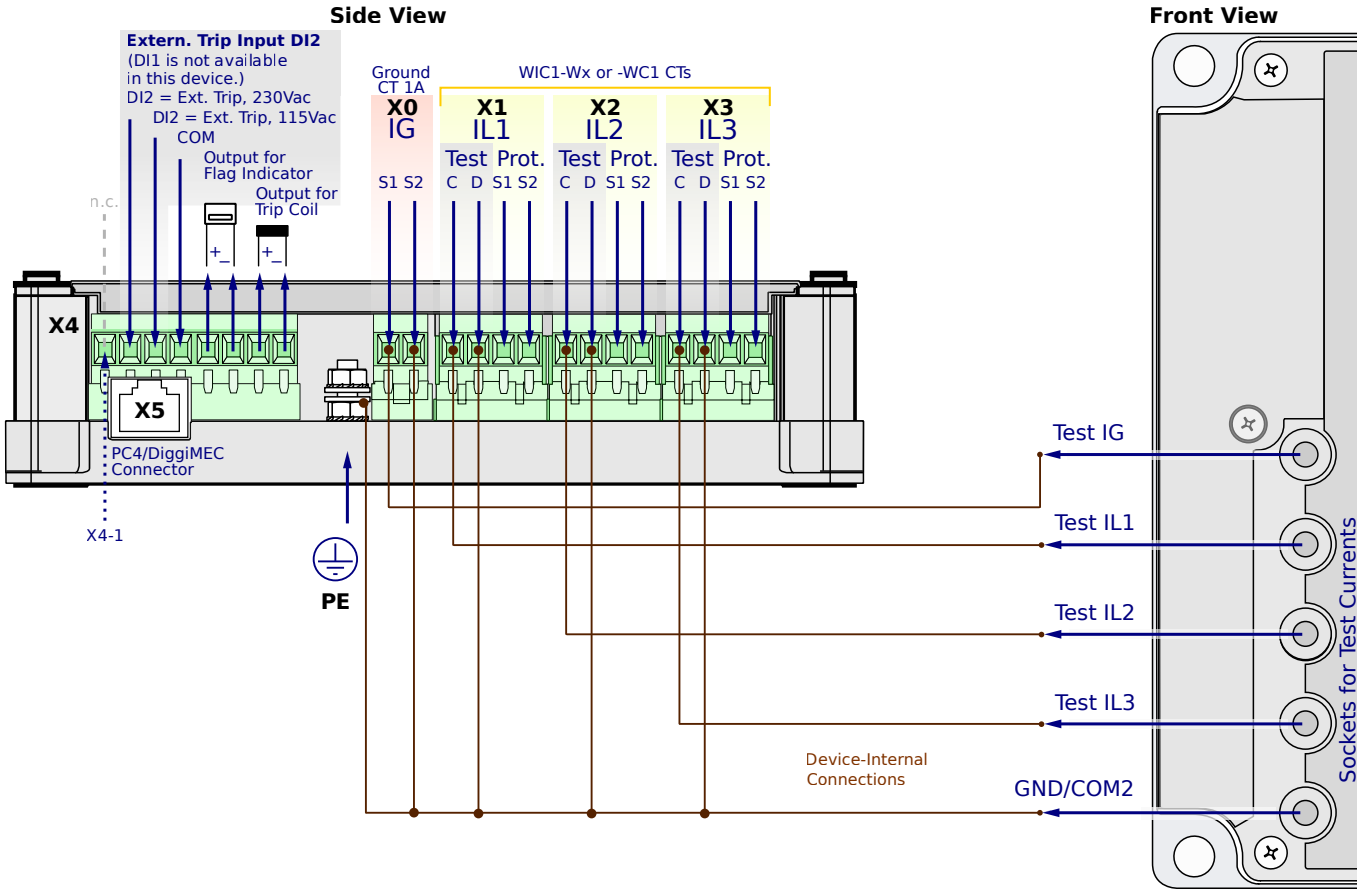


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1PA0

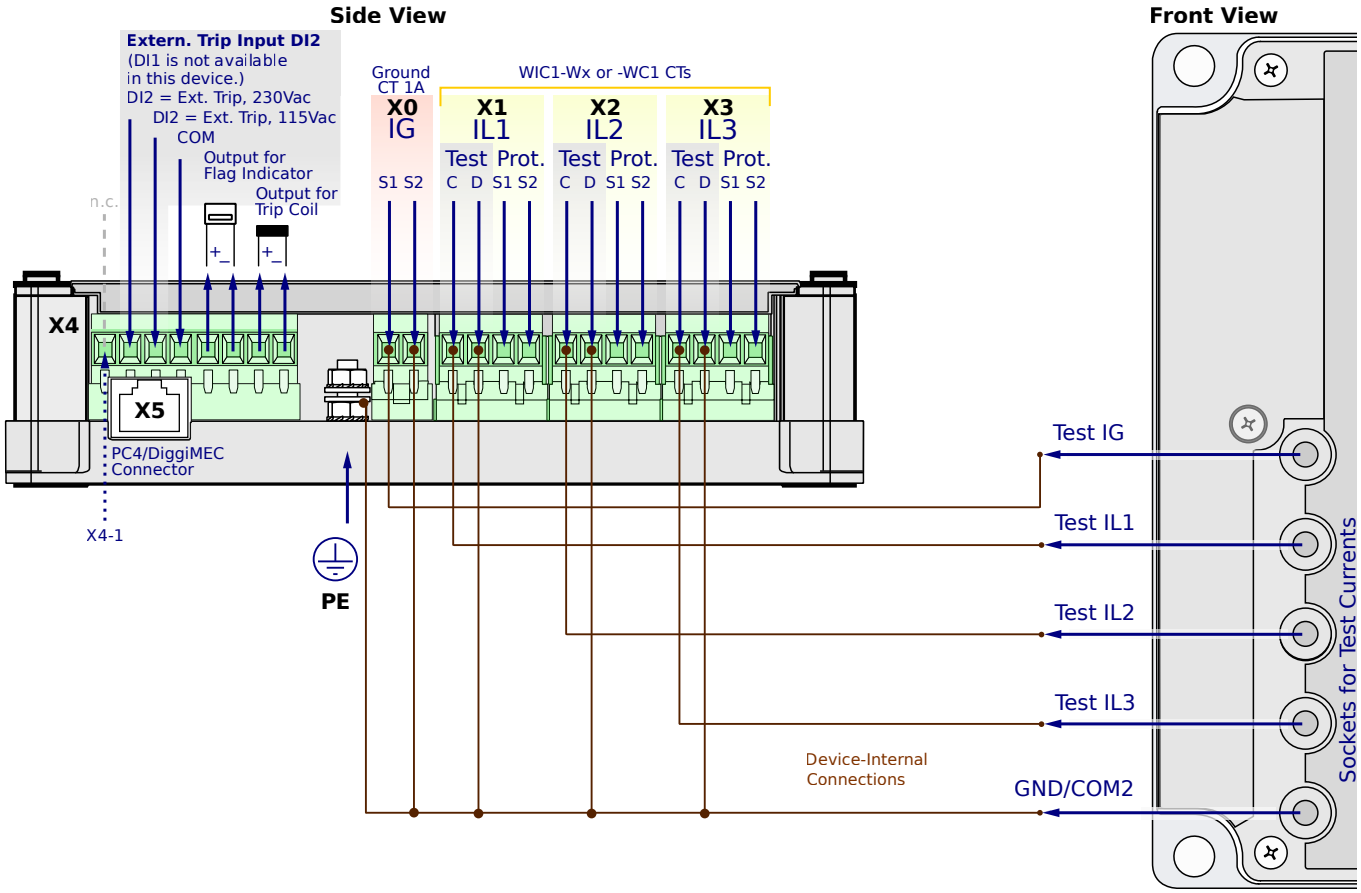


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF1PAH

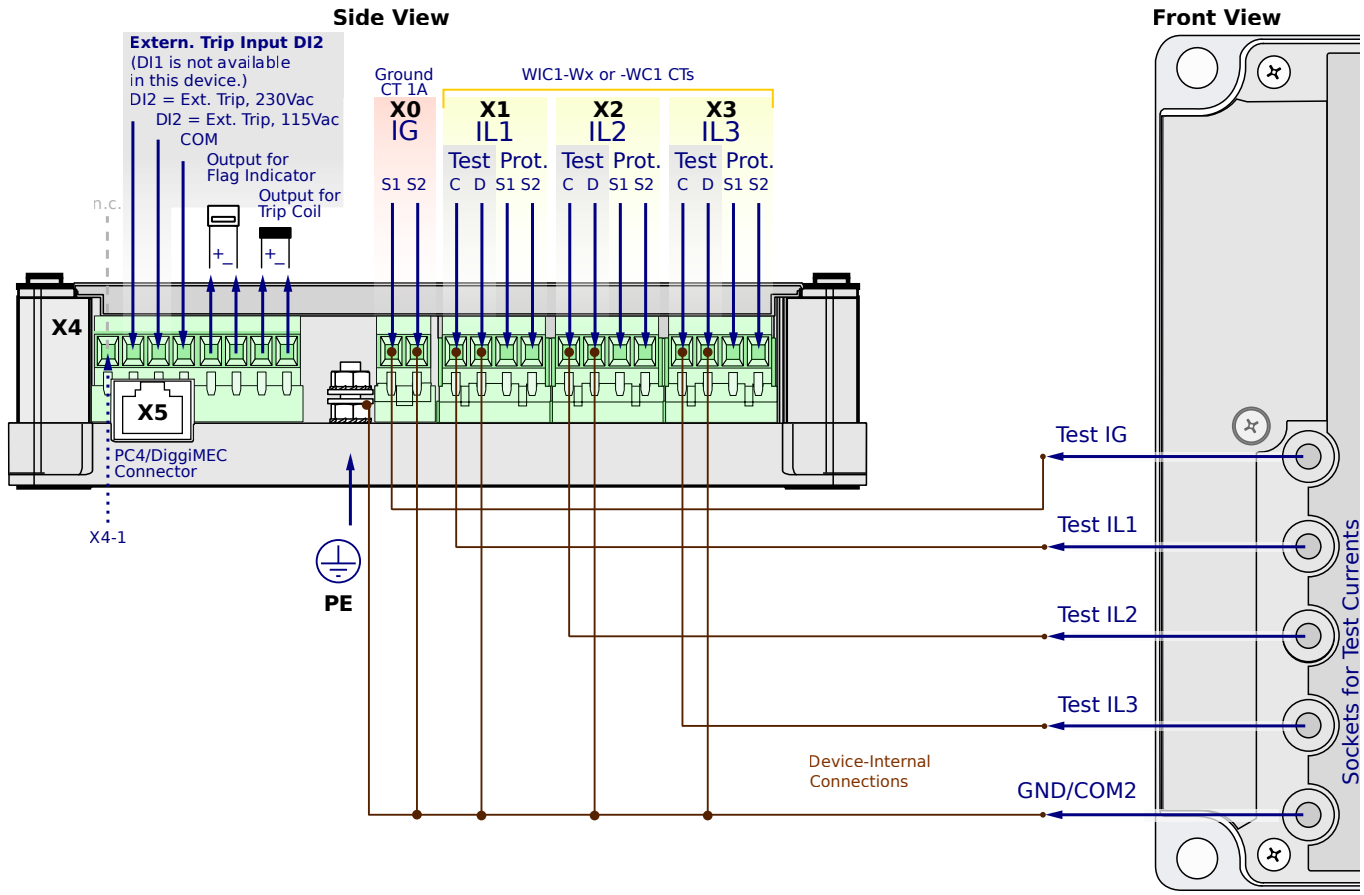


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2SA0

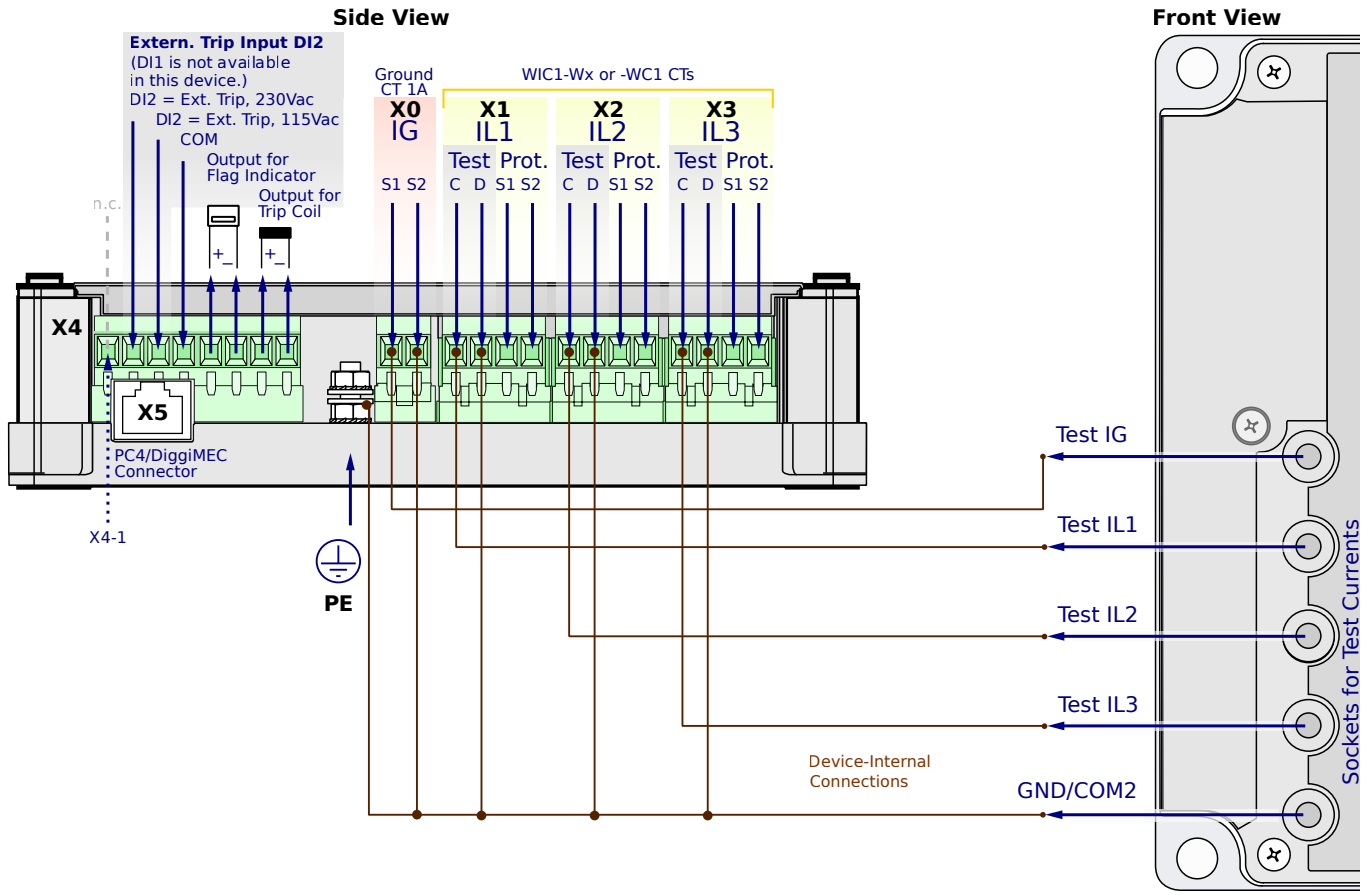


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2SAH

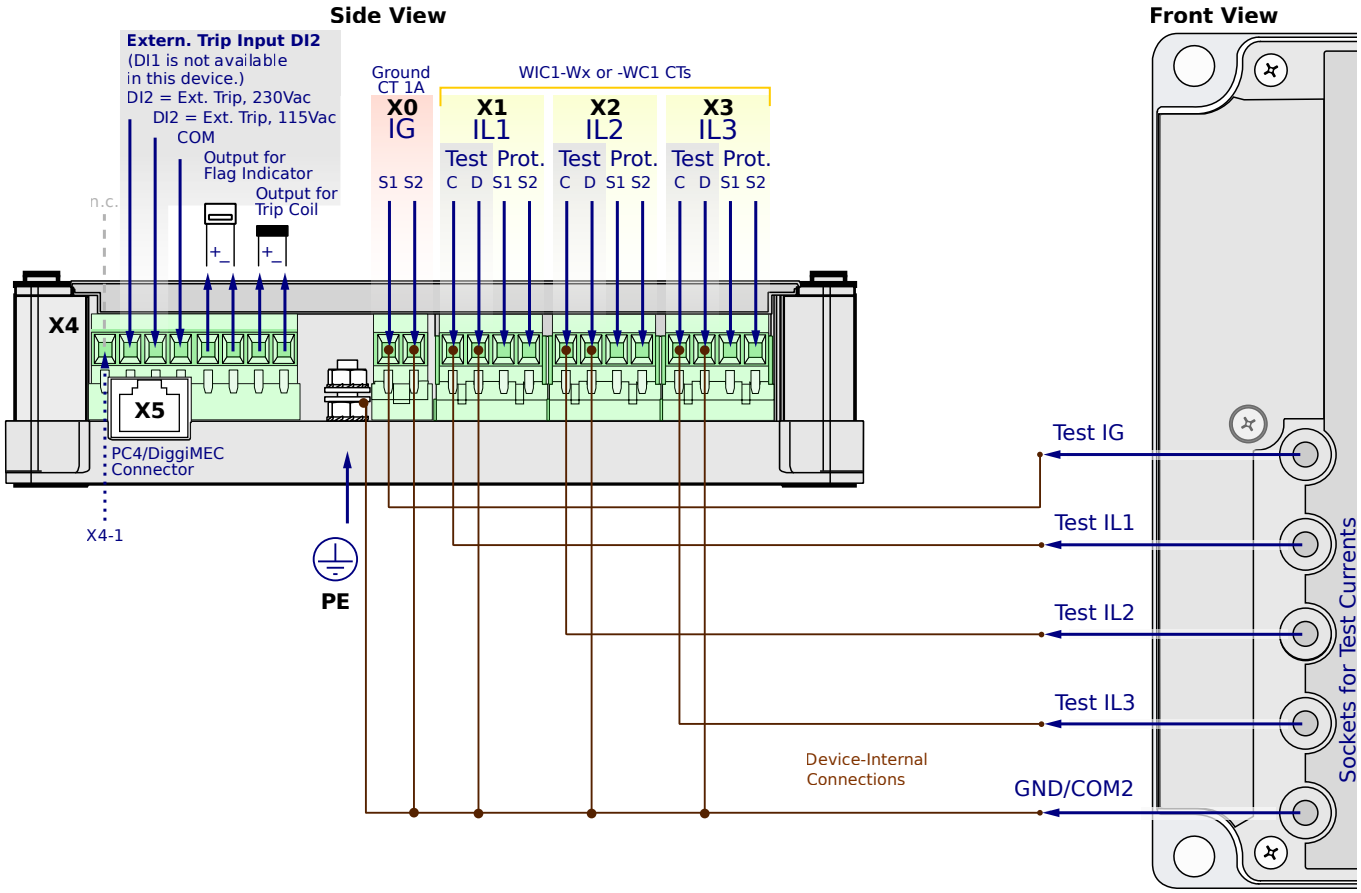


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2AA0

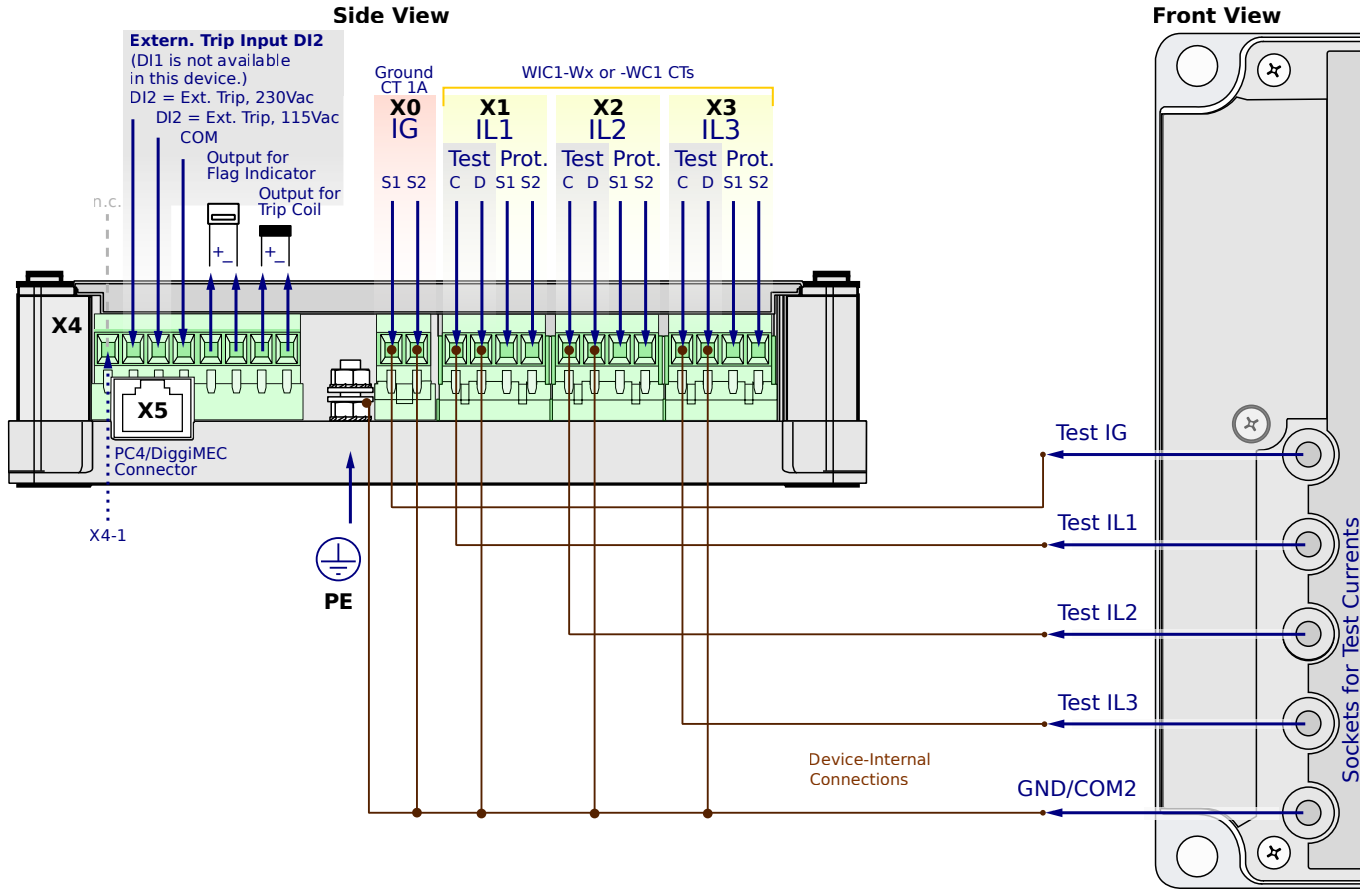


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2AAH

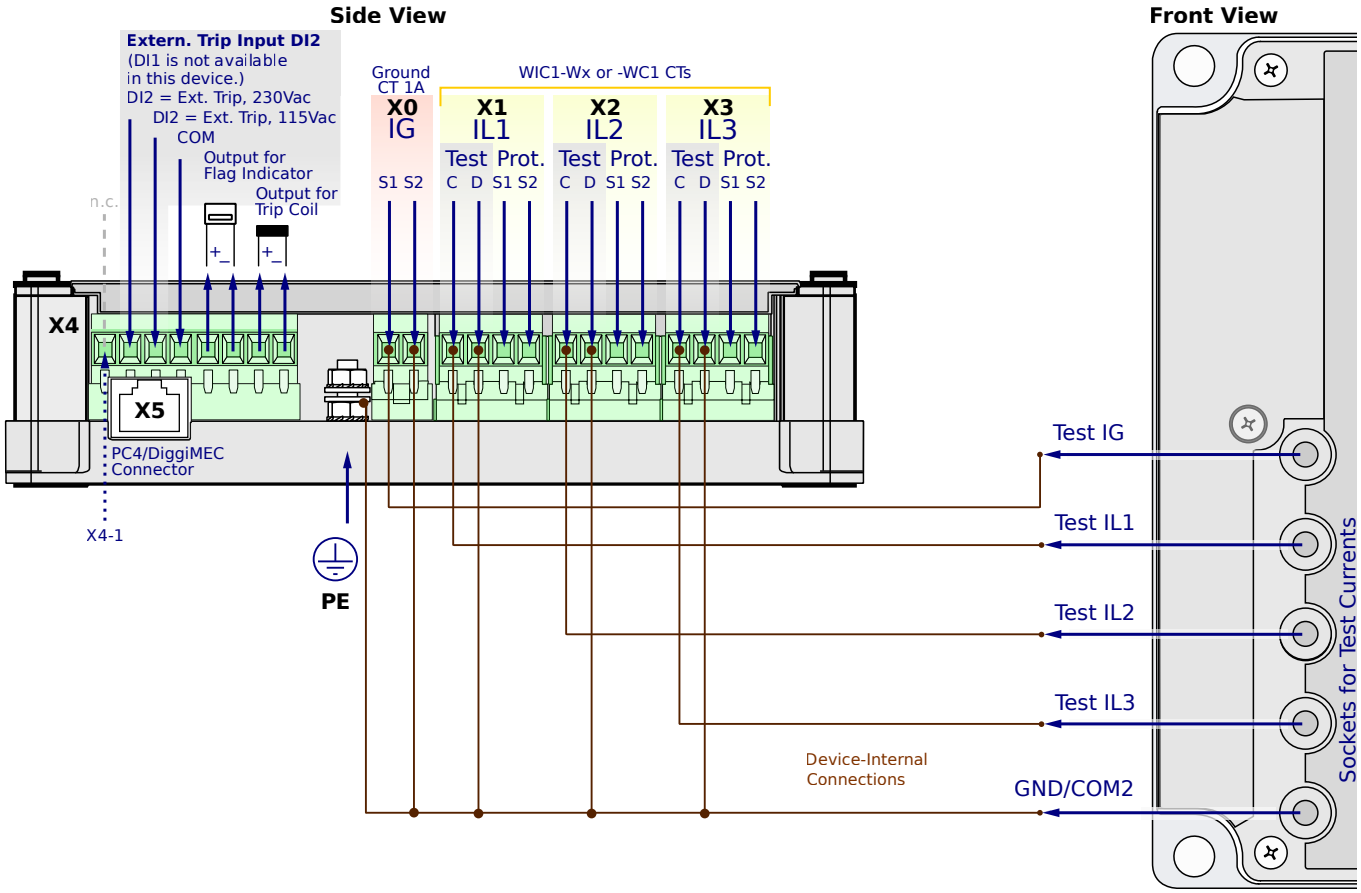


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2PA0

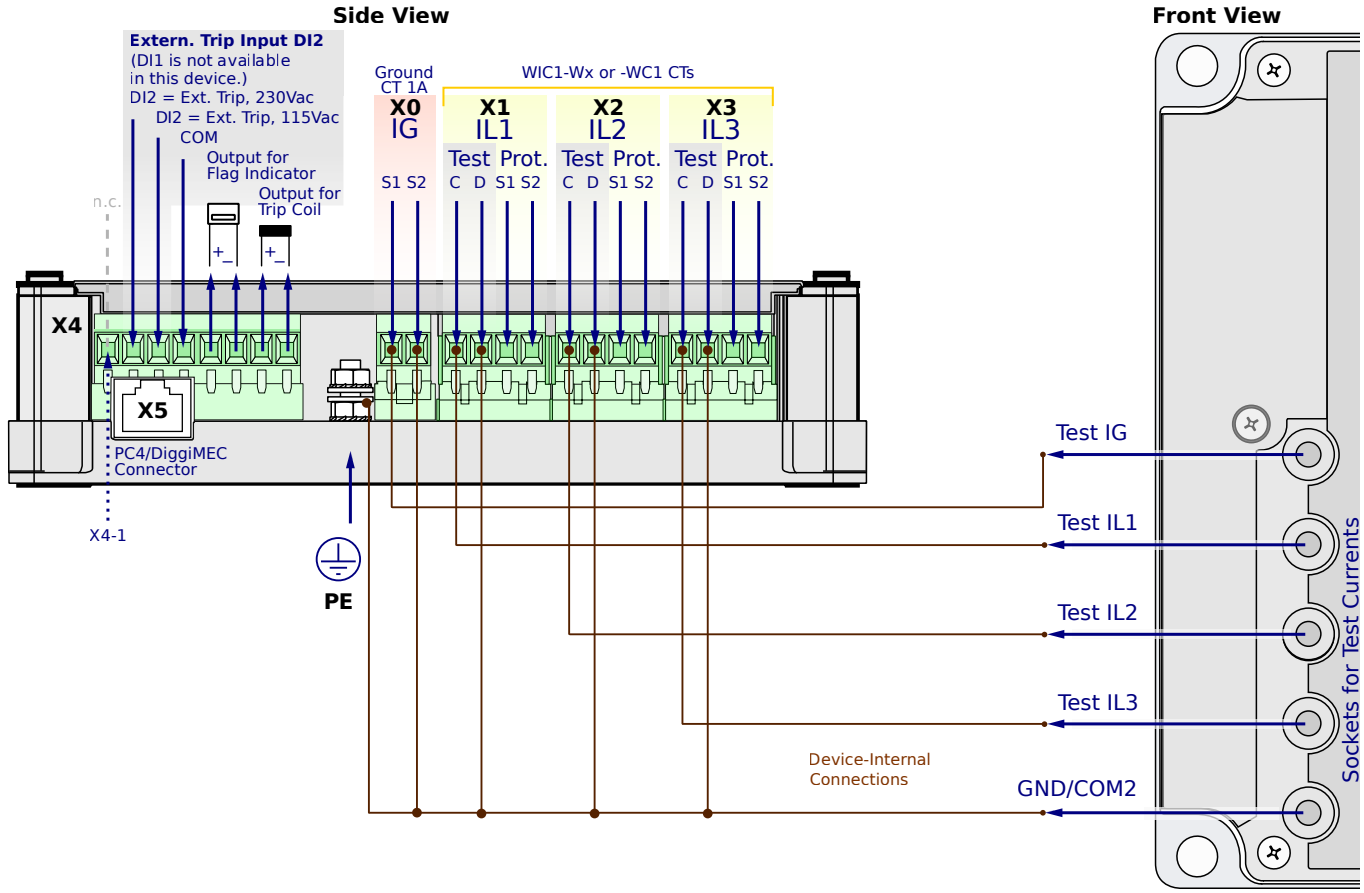


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NF2PAH

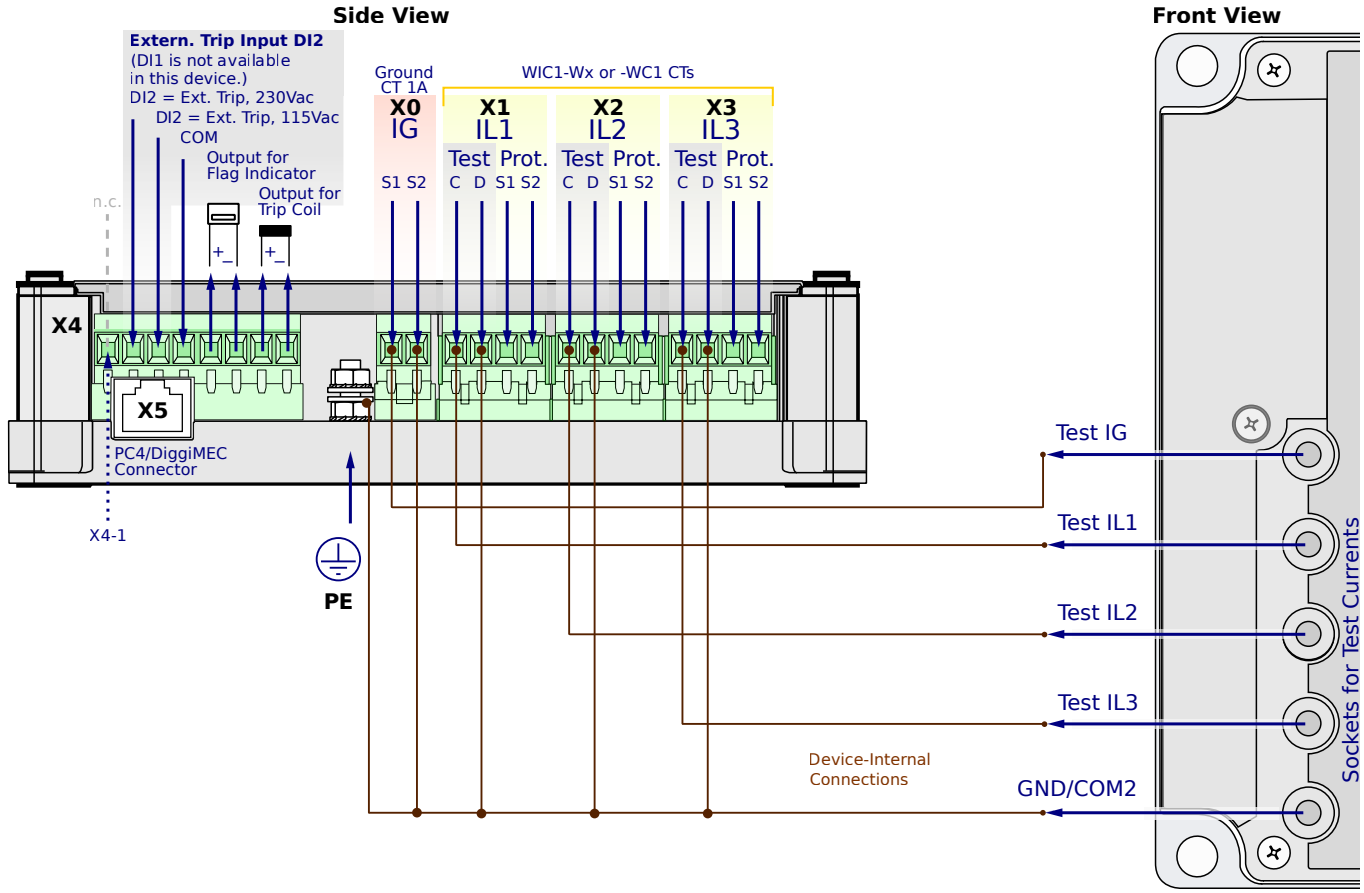


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0SA0

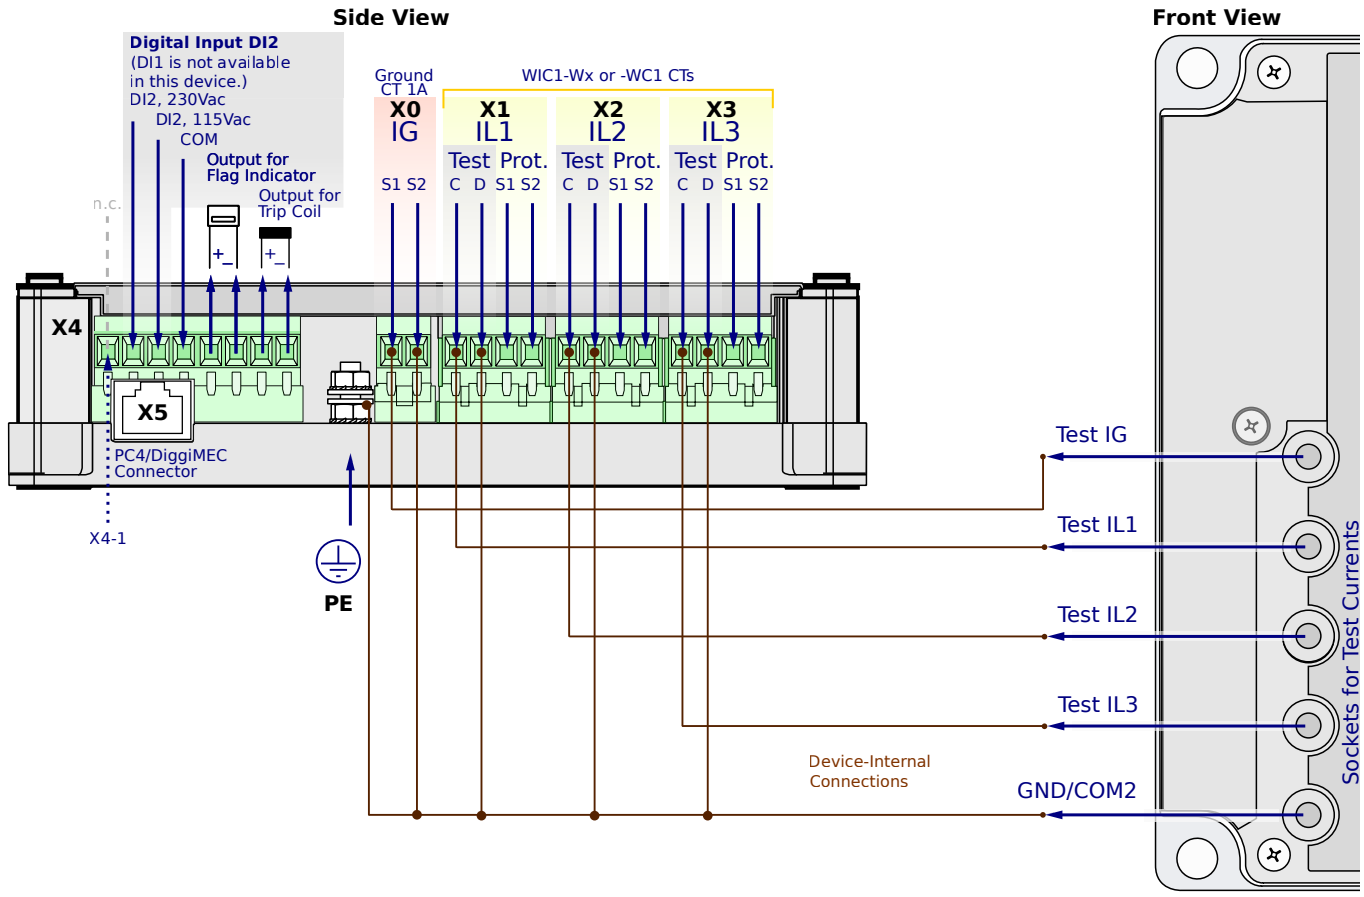


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0SAH

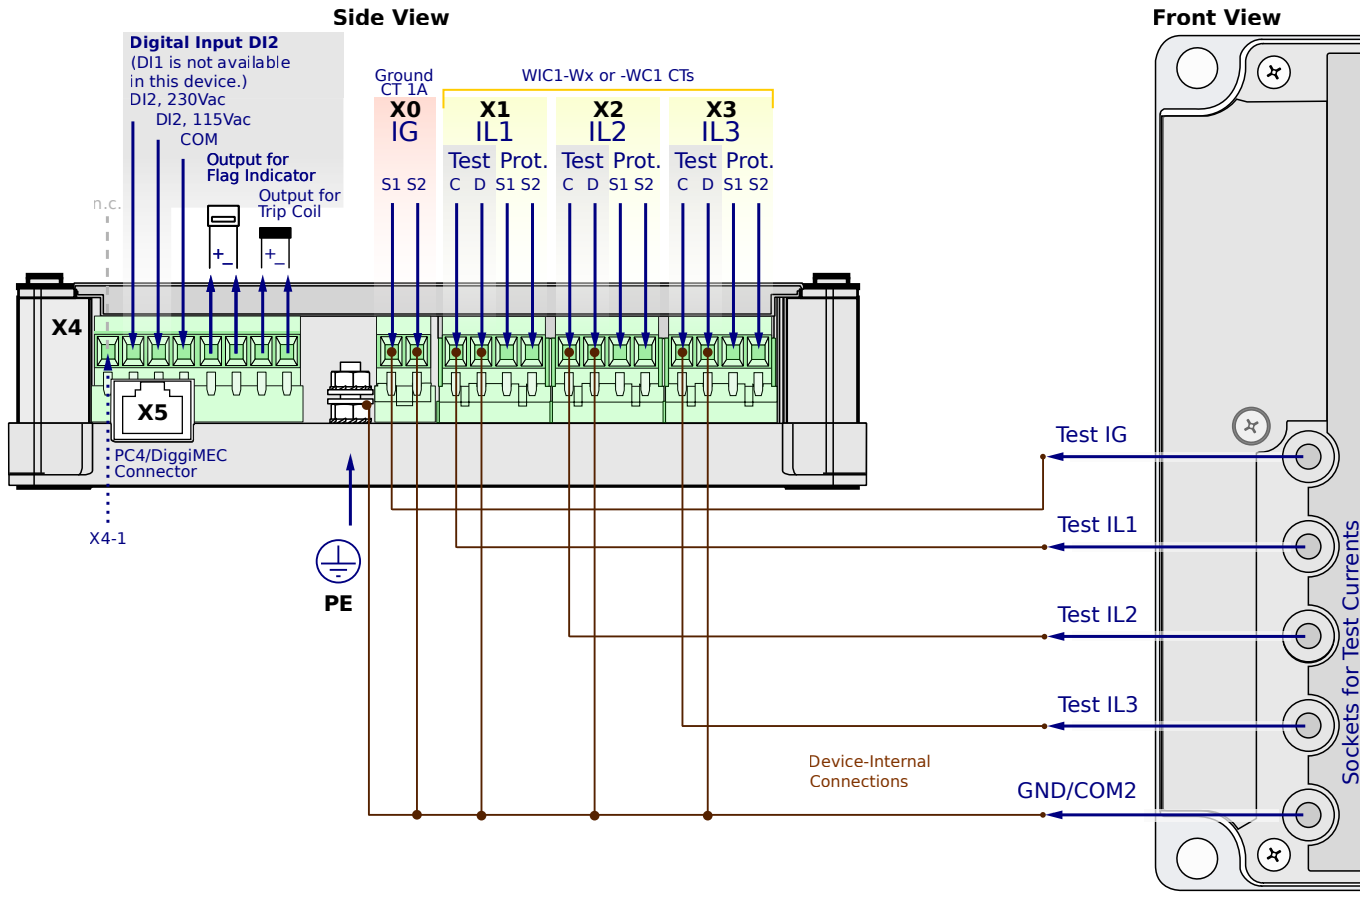


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0AA0

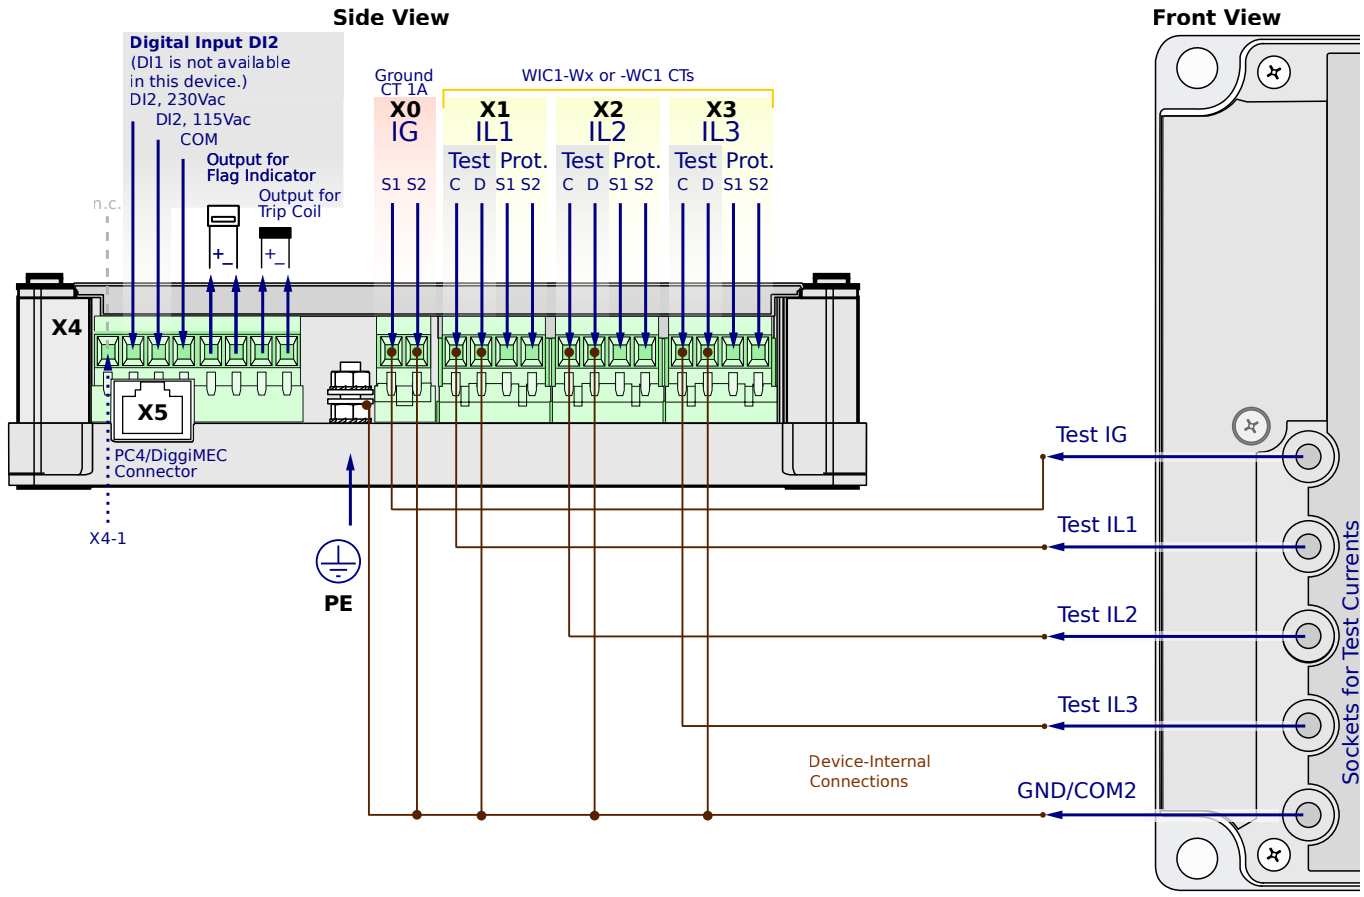


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0AAH

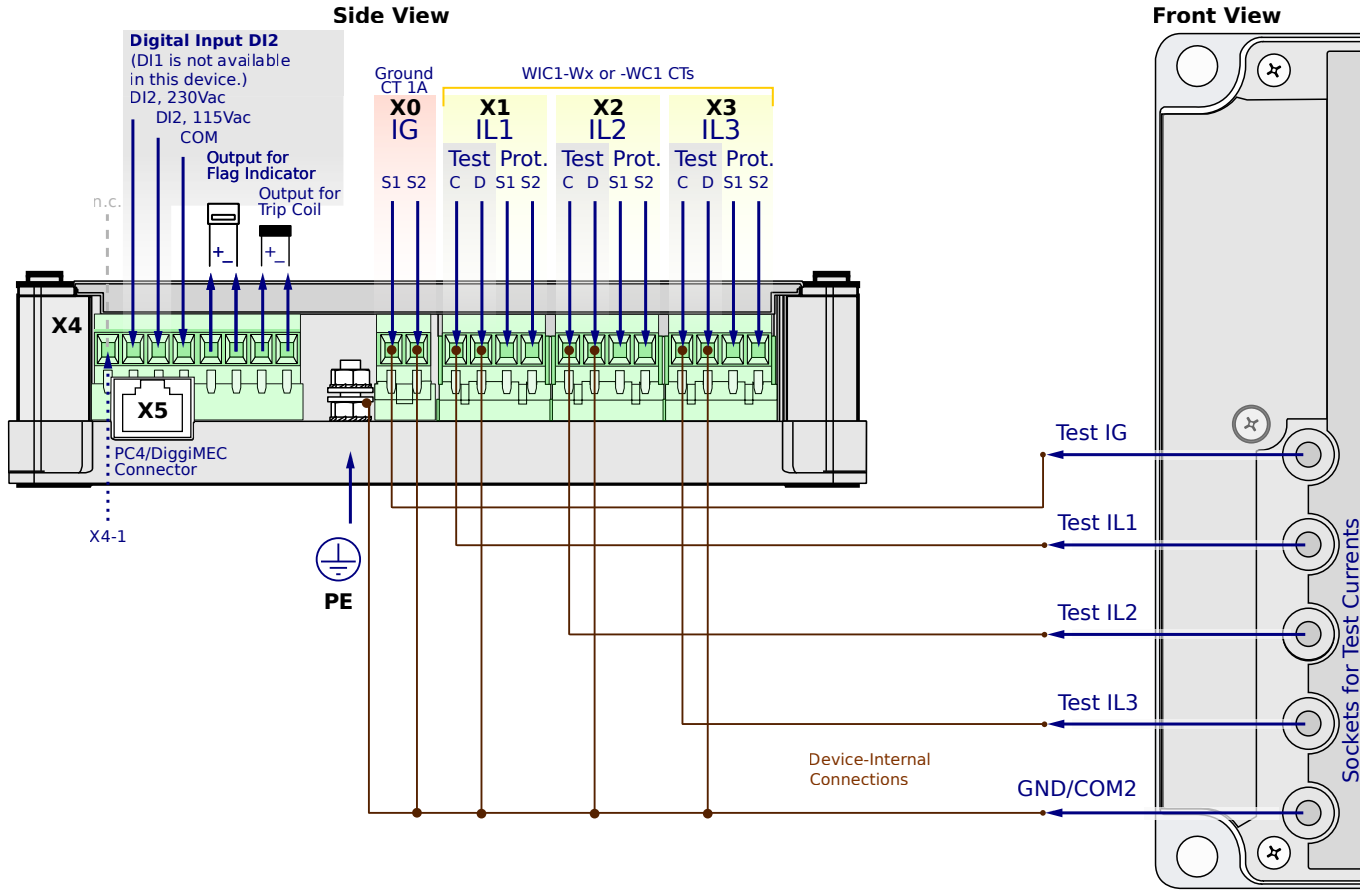


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0PA0

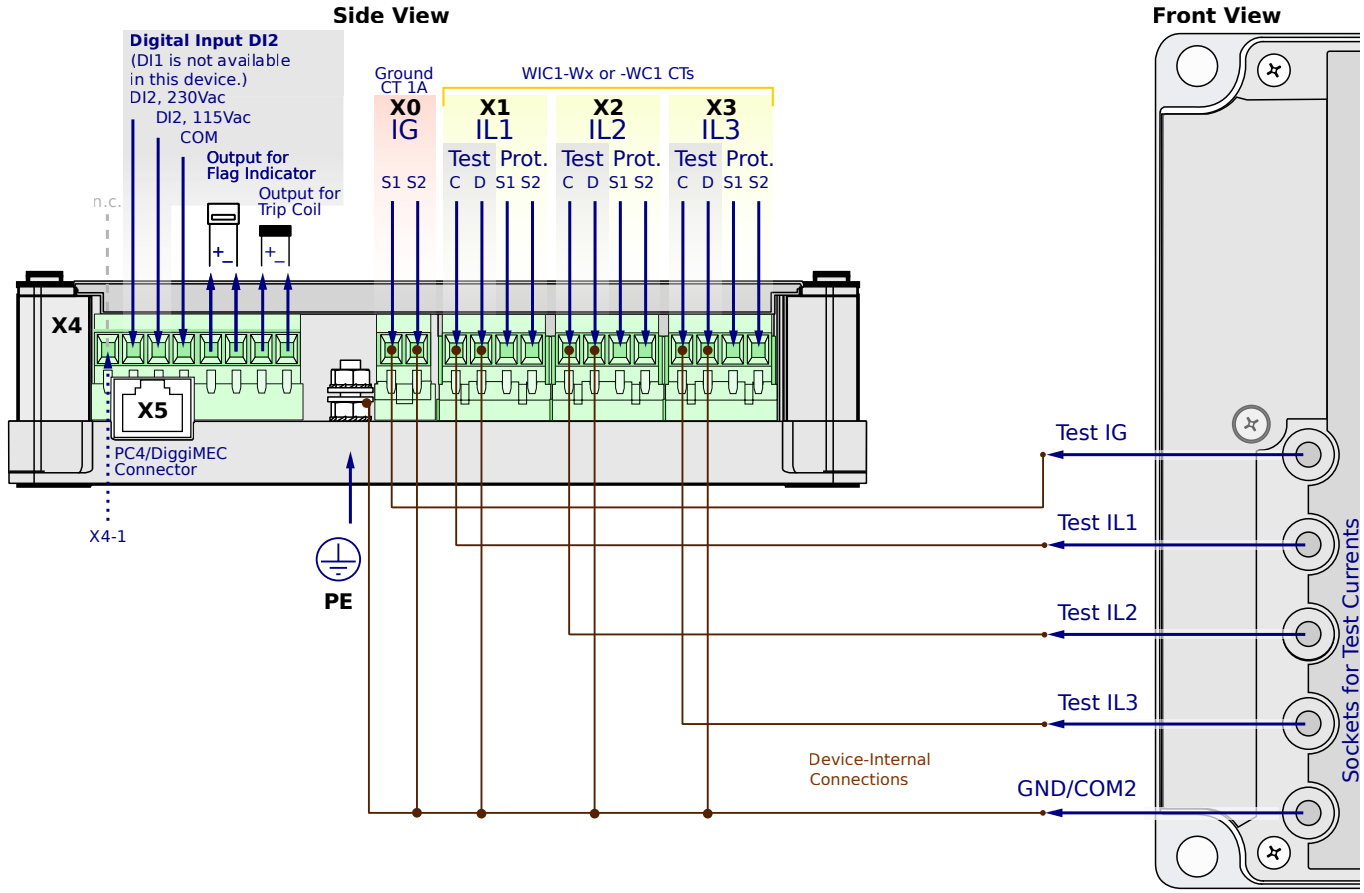


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC0PAH

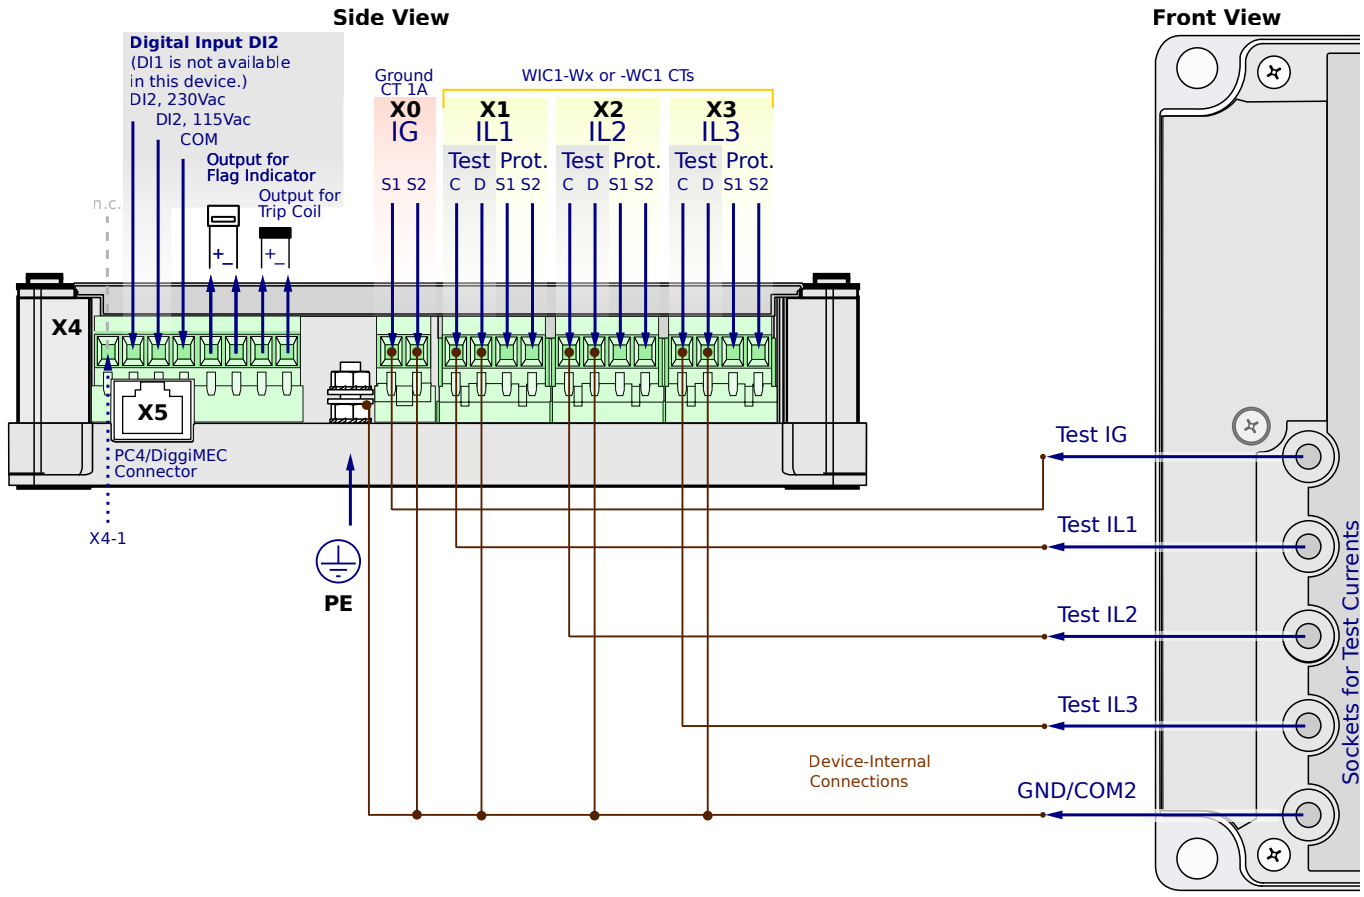


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1SA0

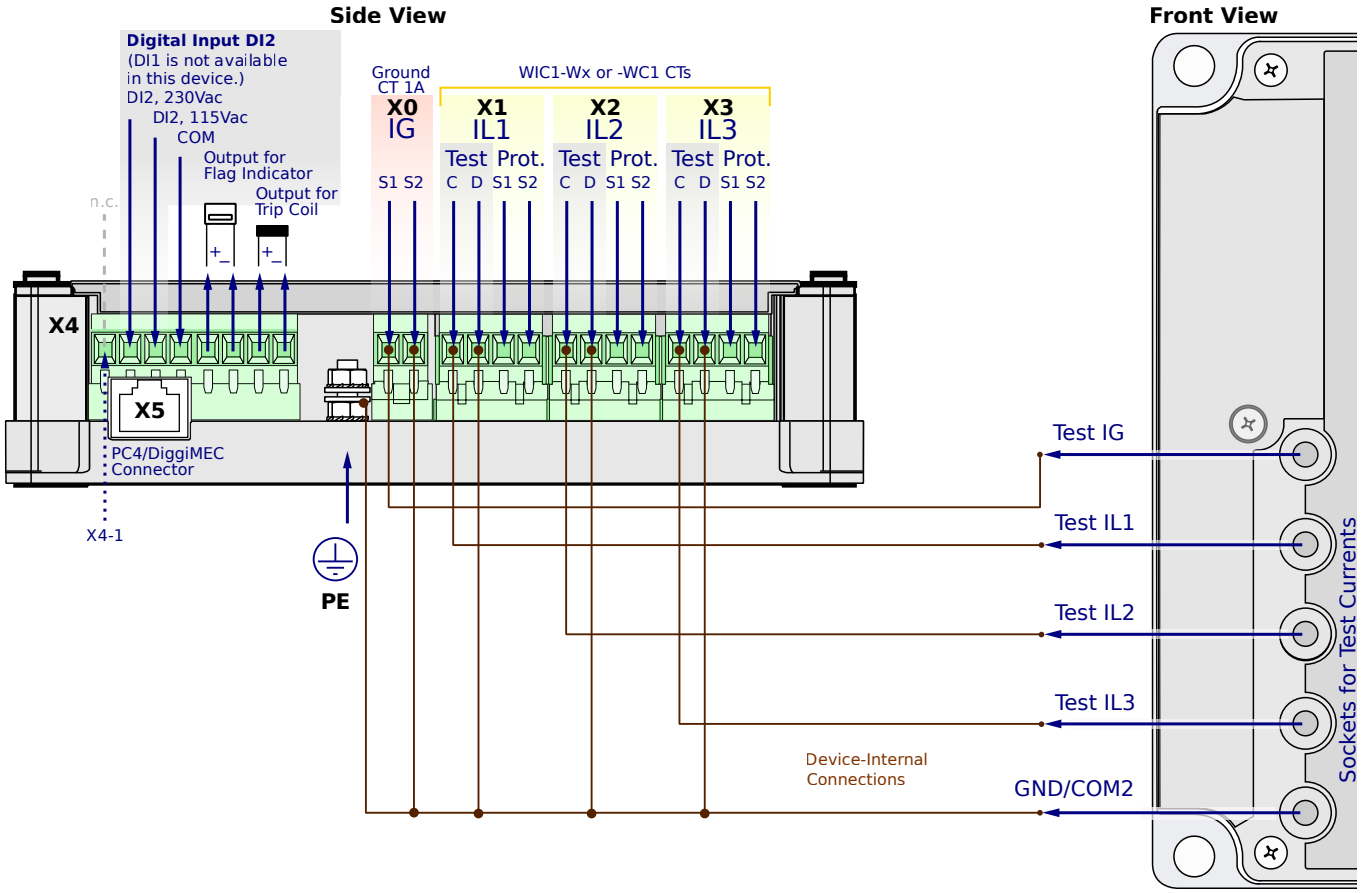


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1SAH

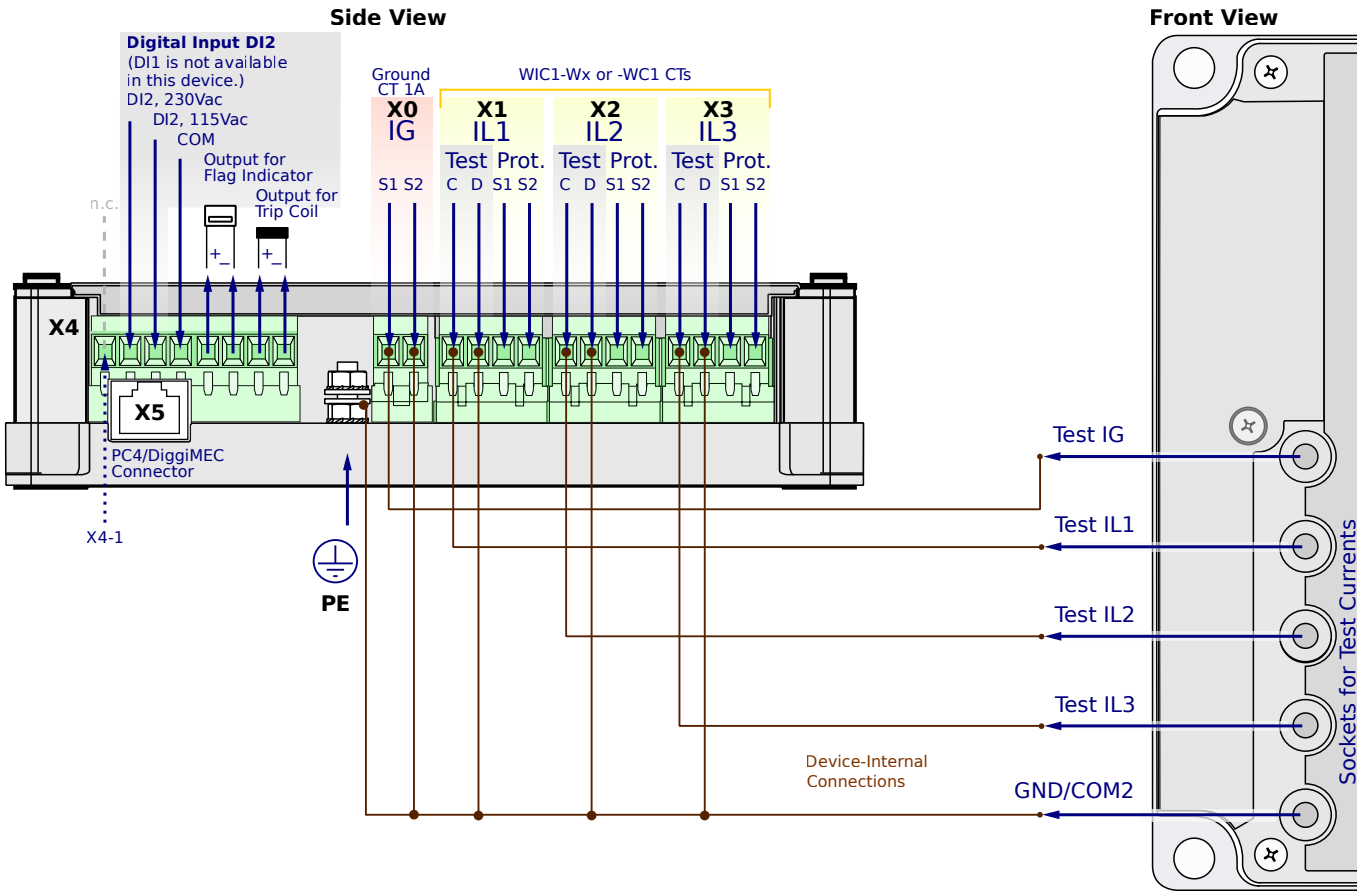


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1AA0

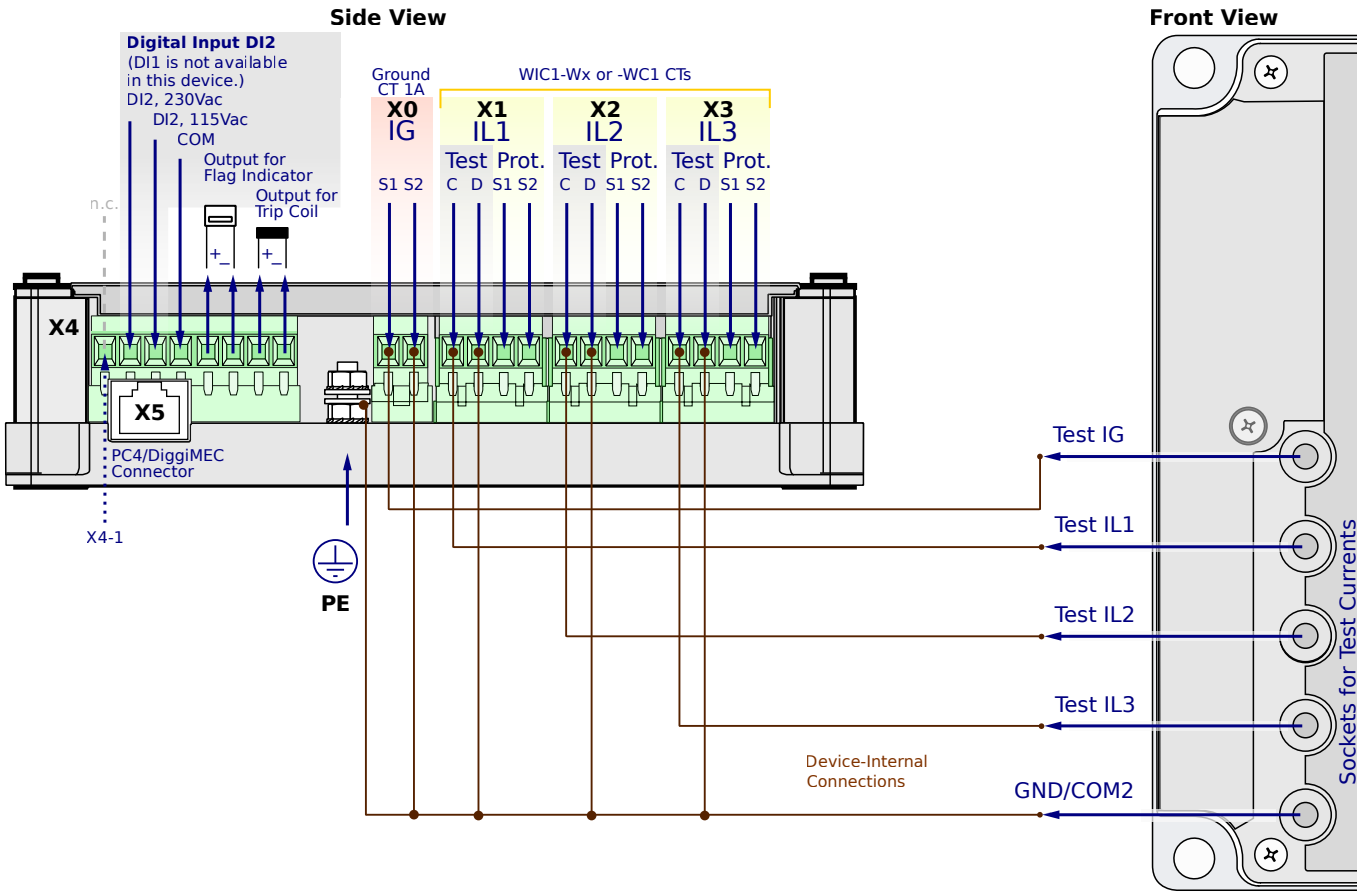


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1AAH

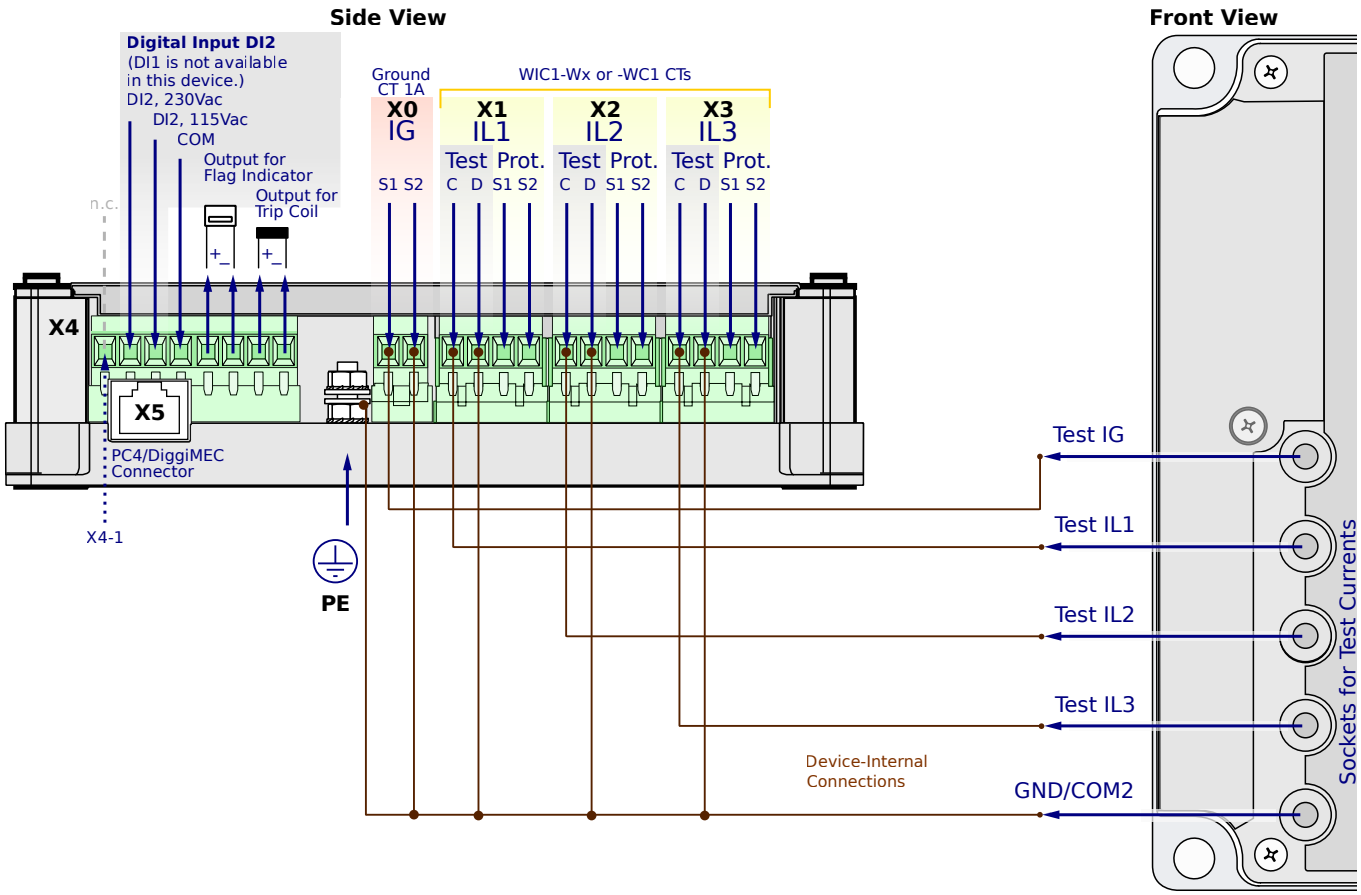


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1PA0

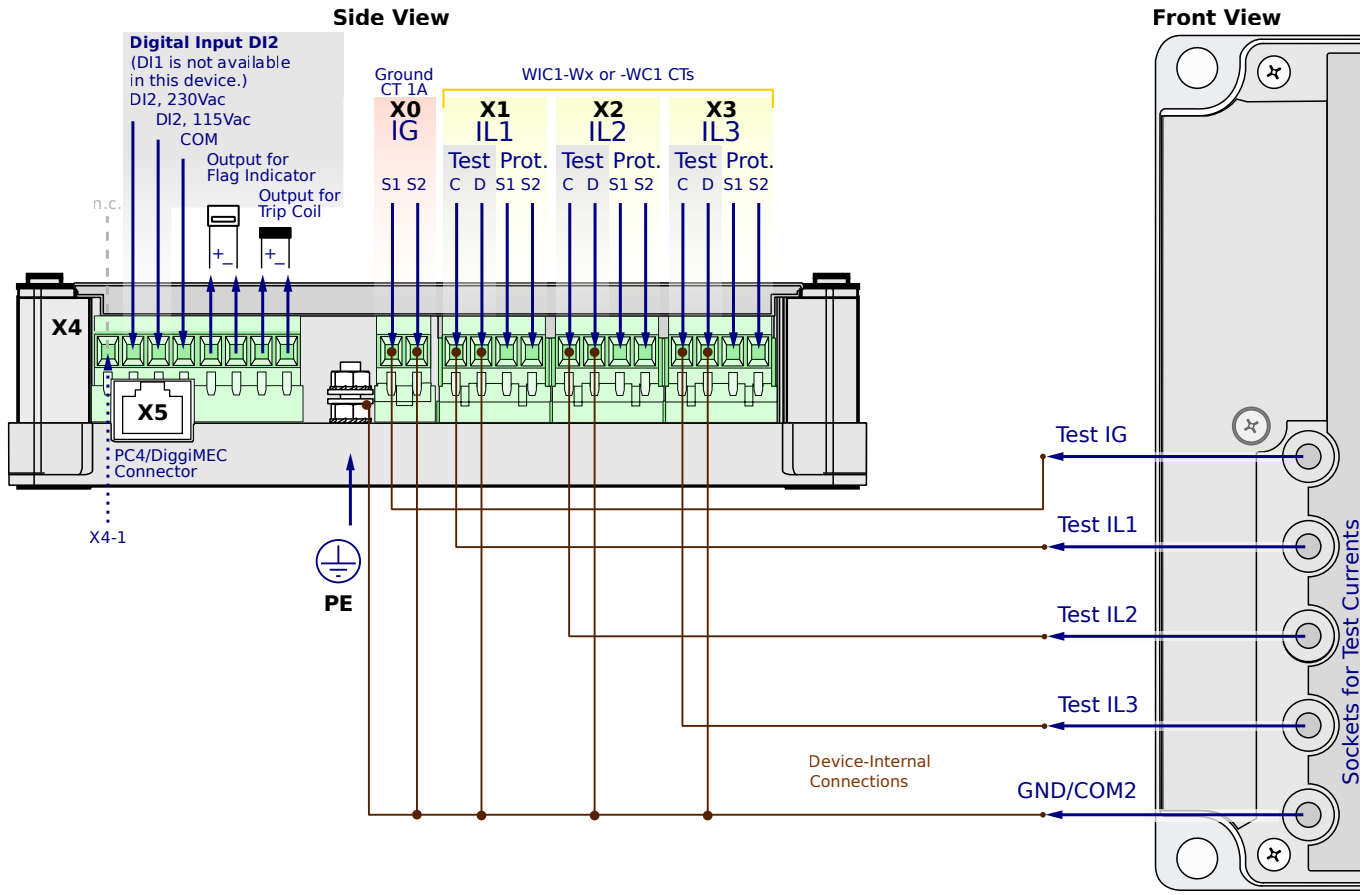


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC1PAH

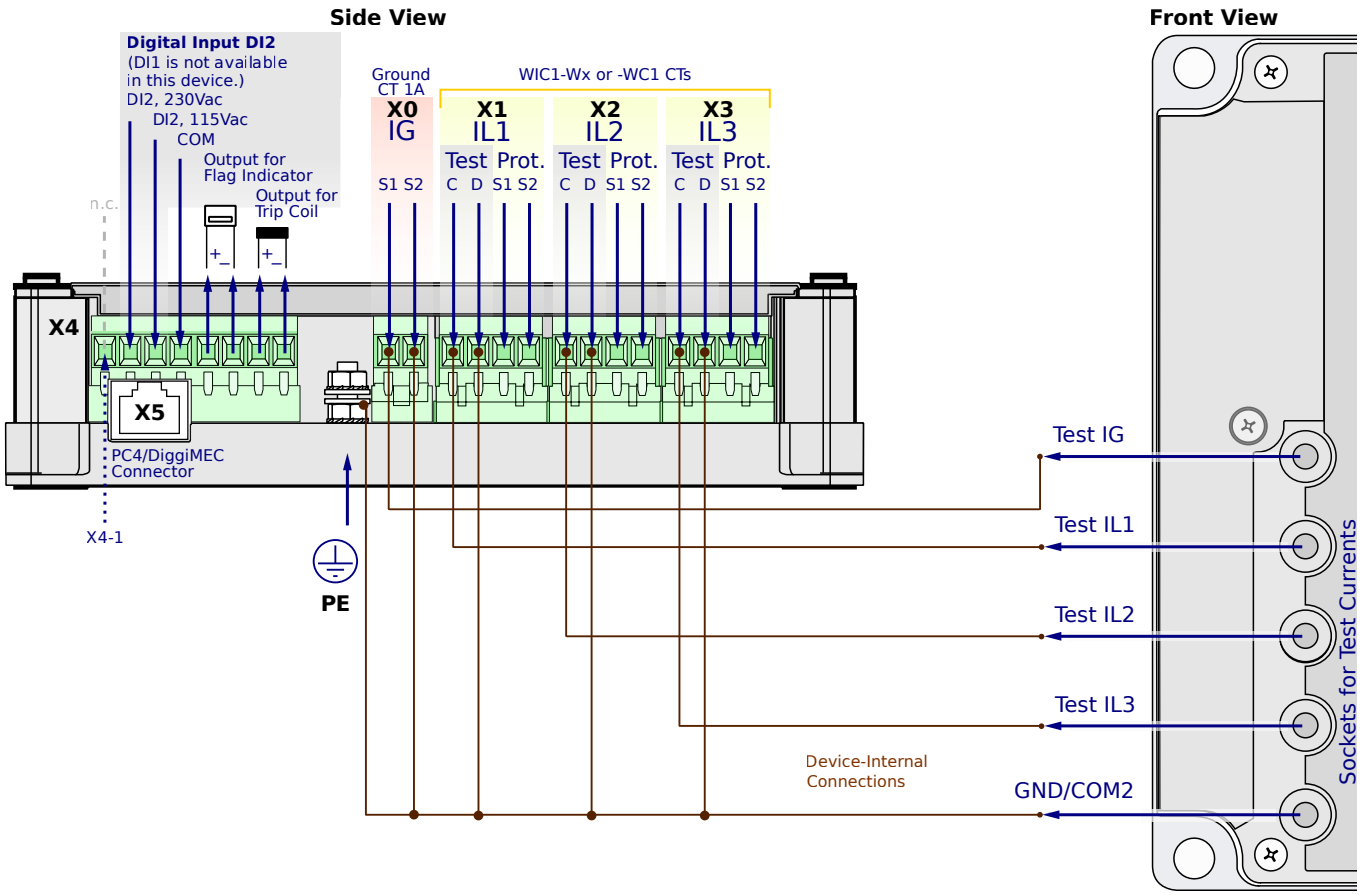


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2SA0

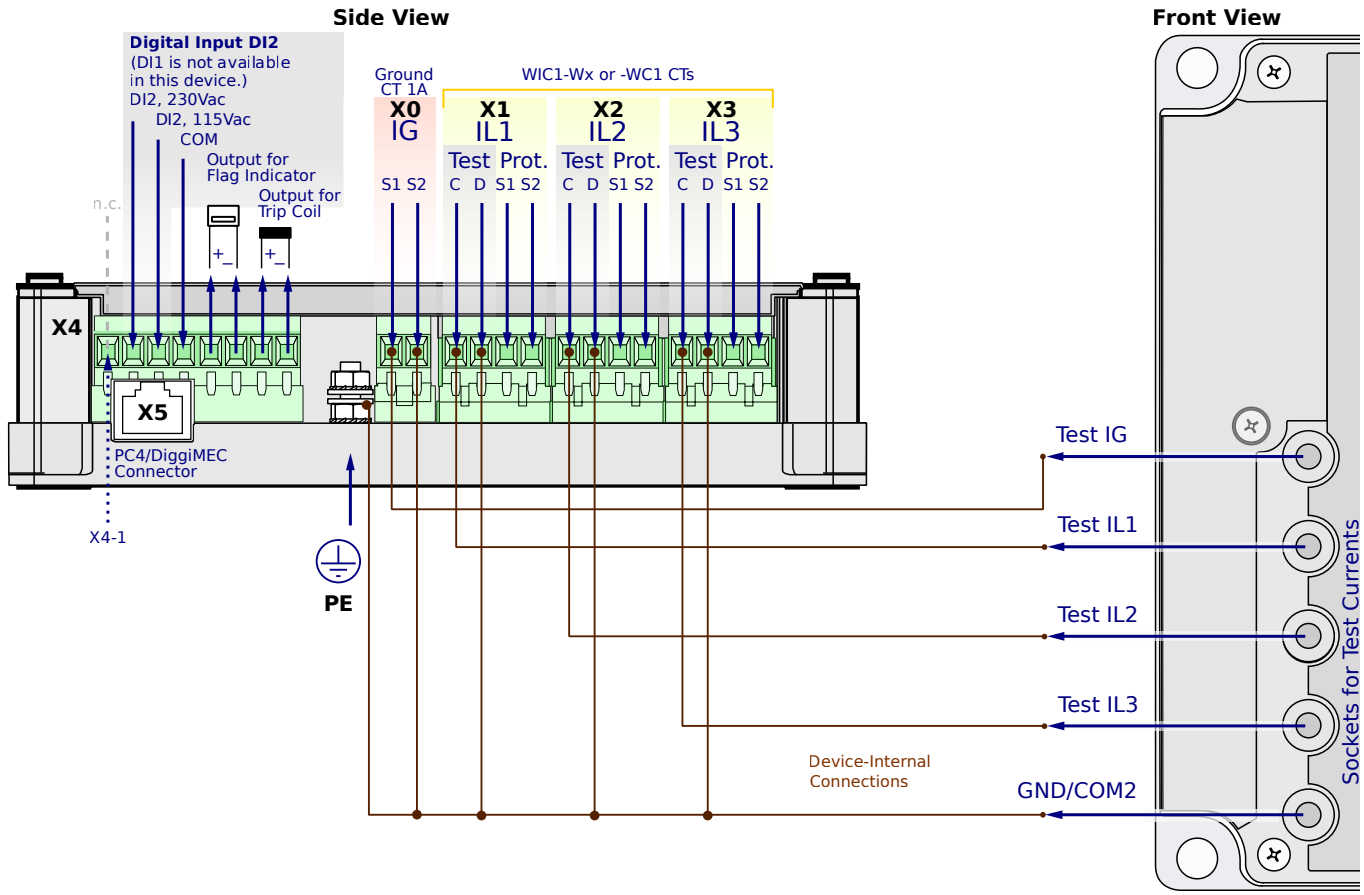


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2SAH

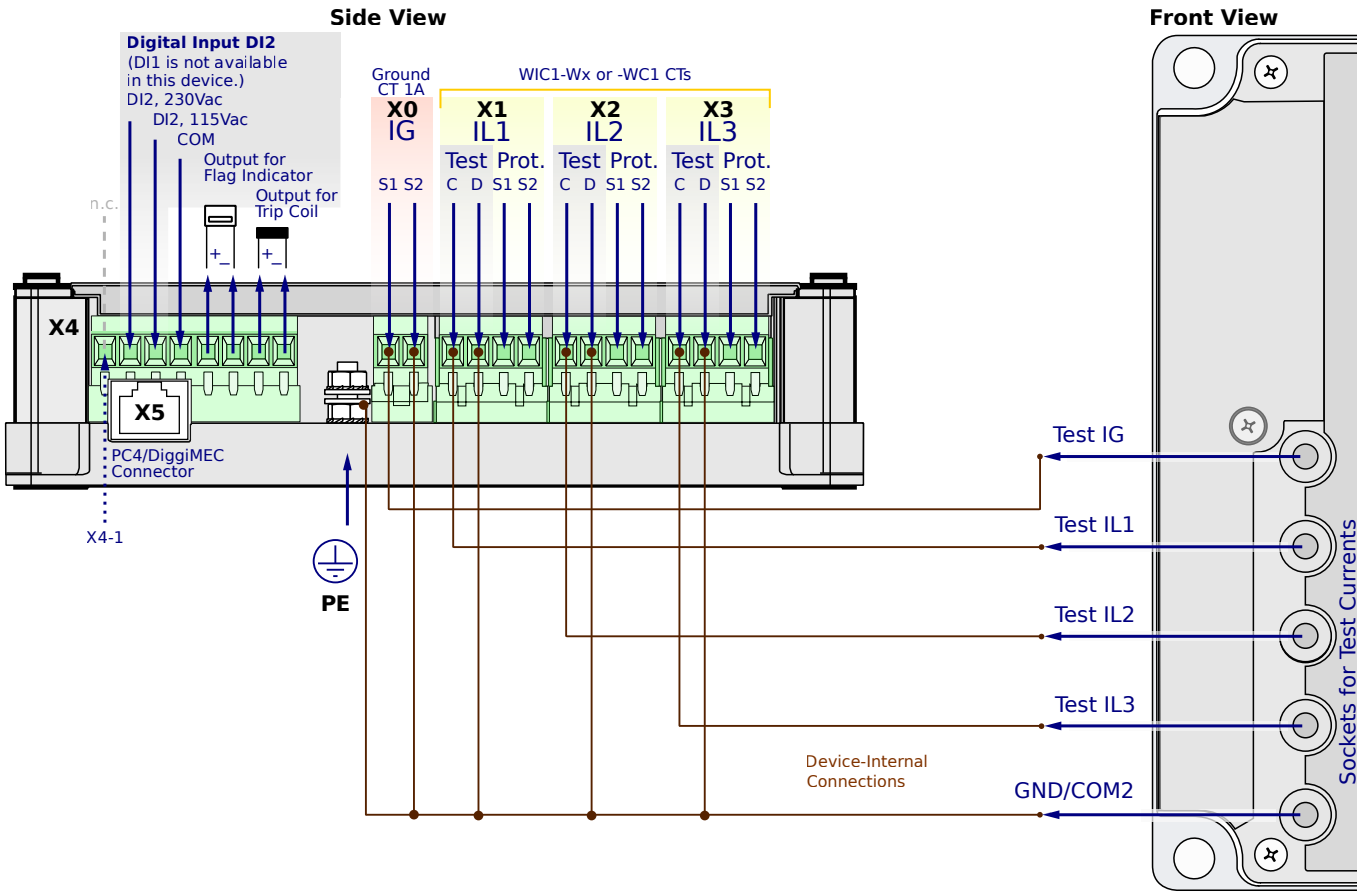


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2AA0

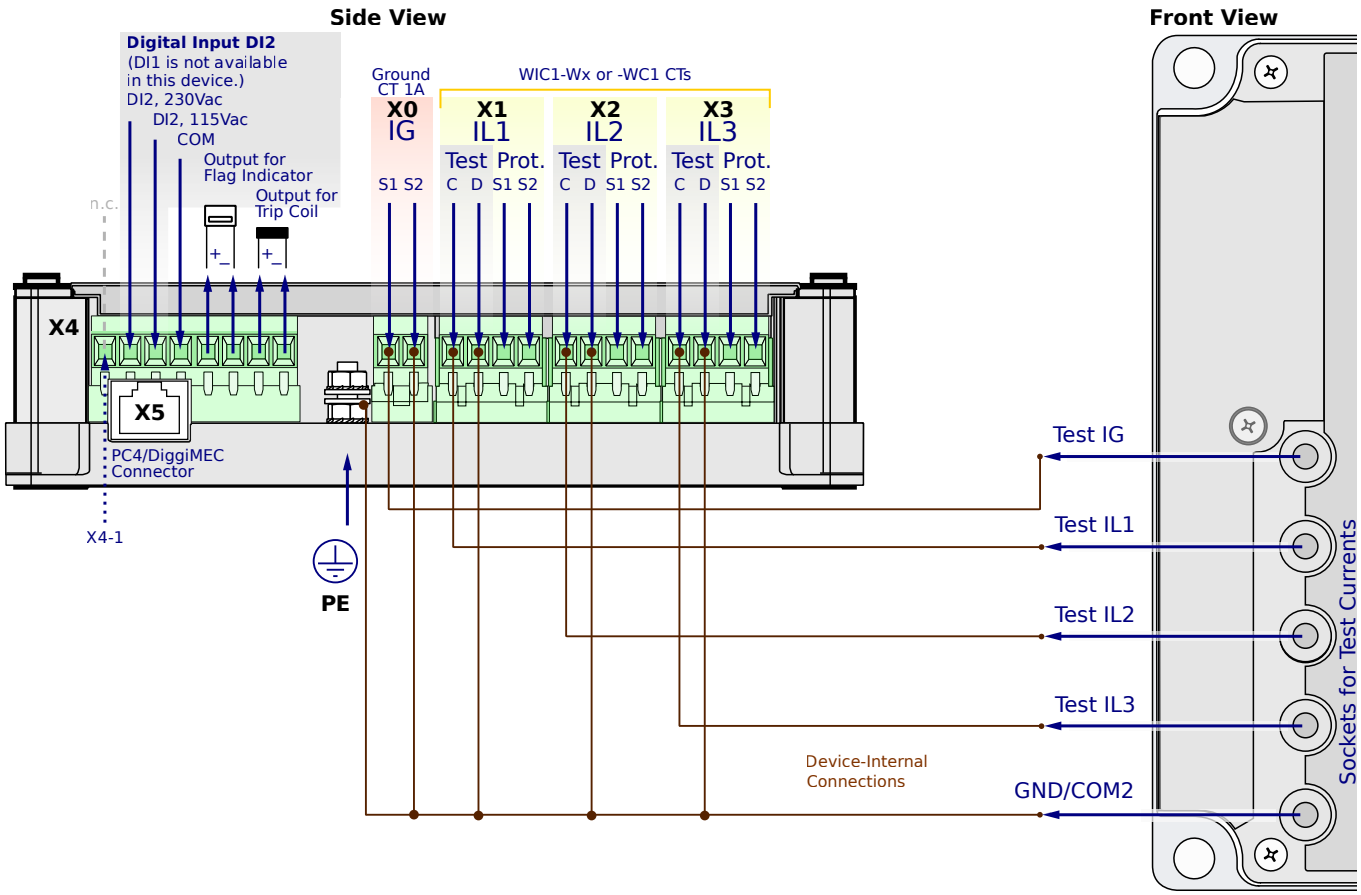


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2AAH

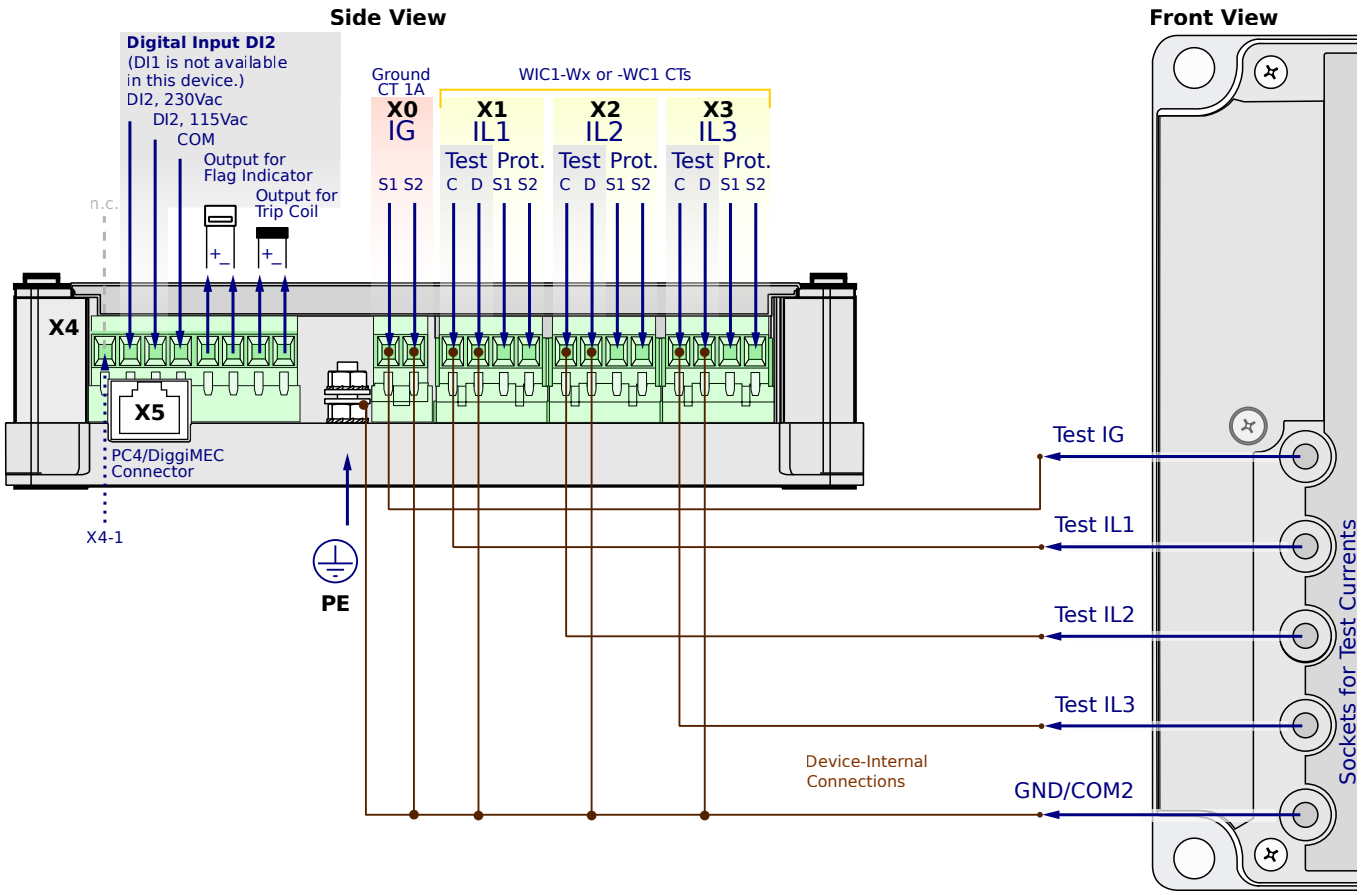


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2PA0

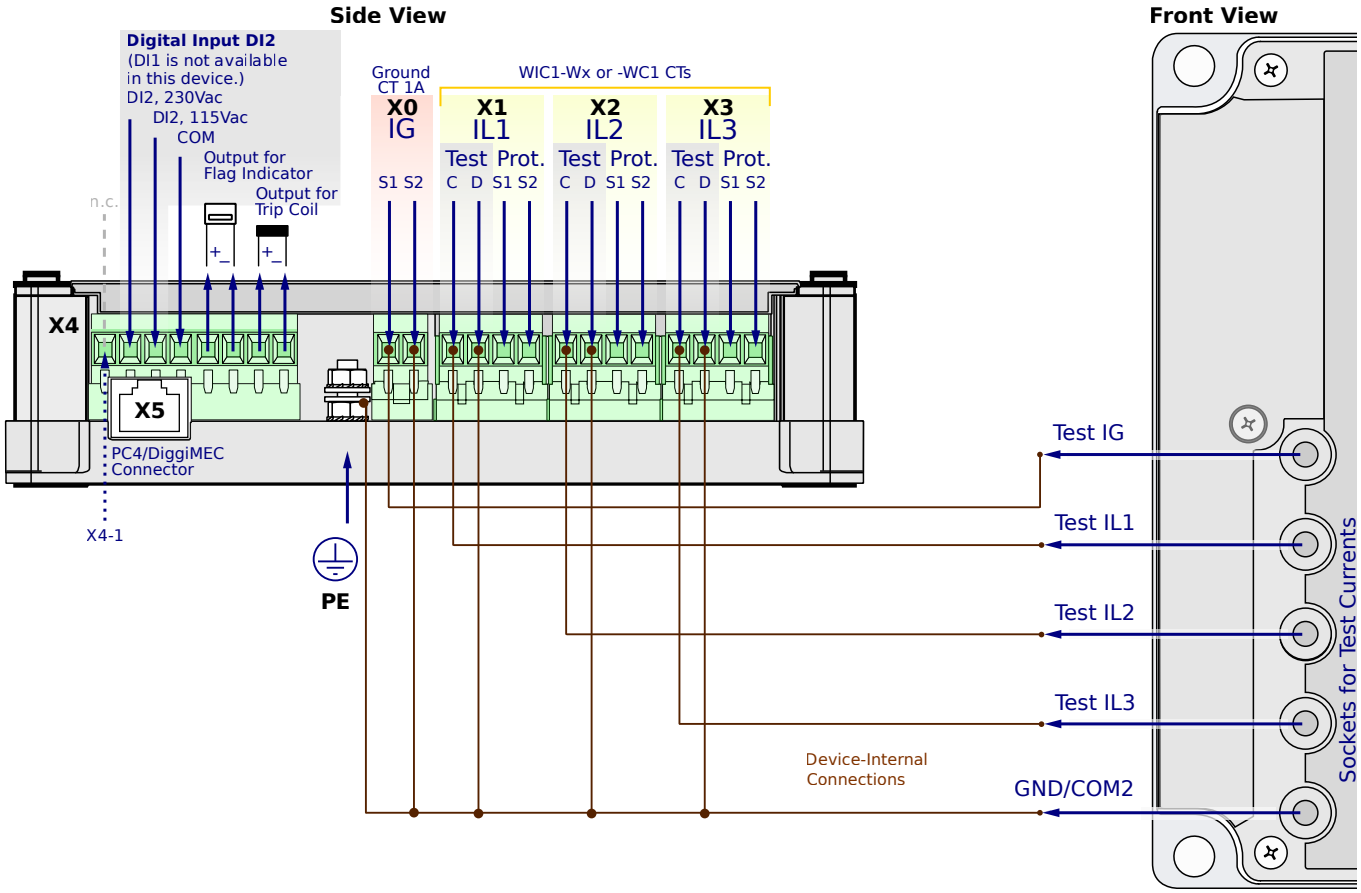


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6NC2PAH

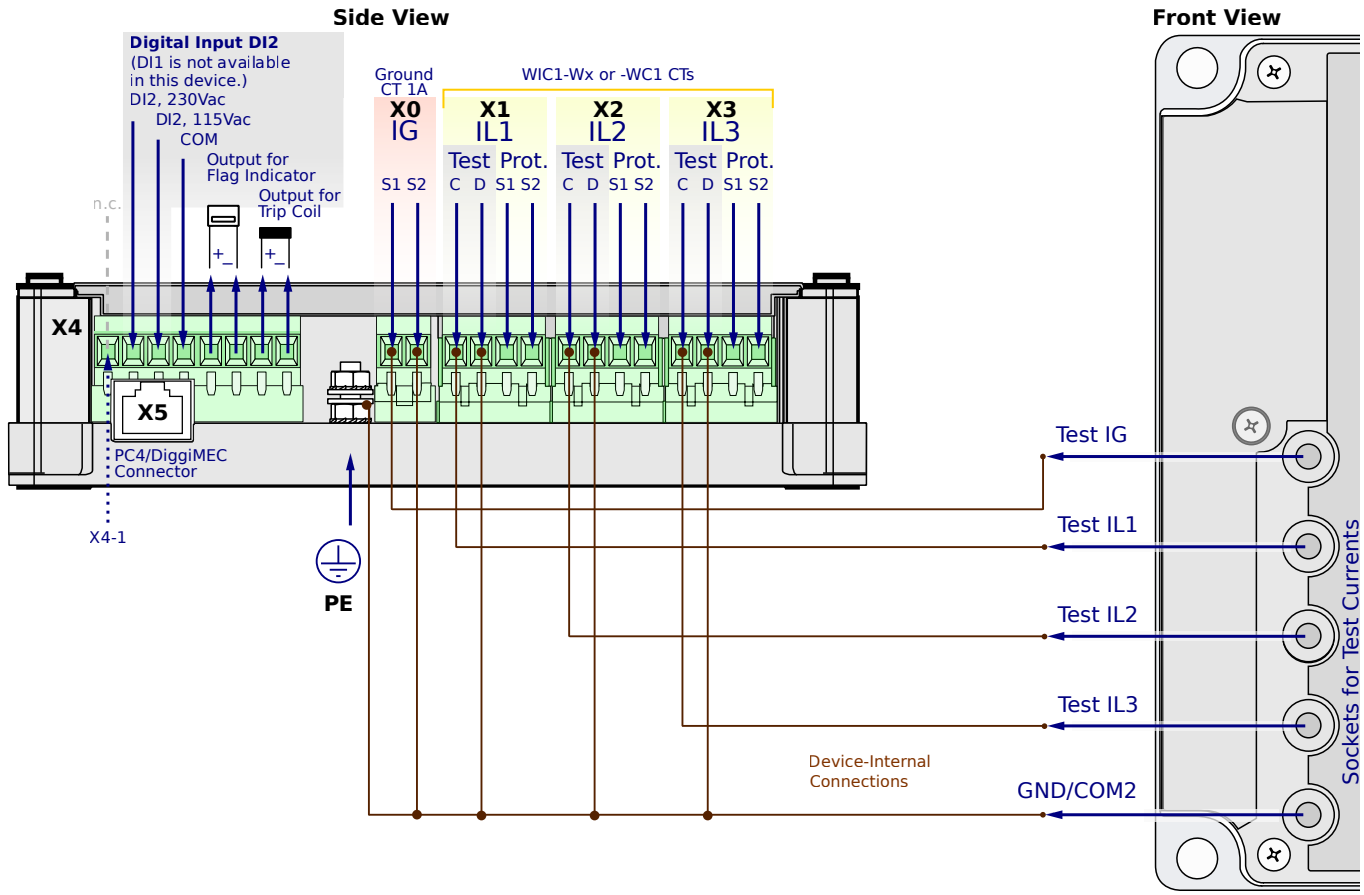


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1SA0

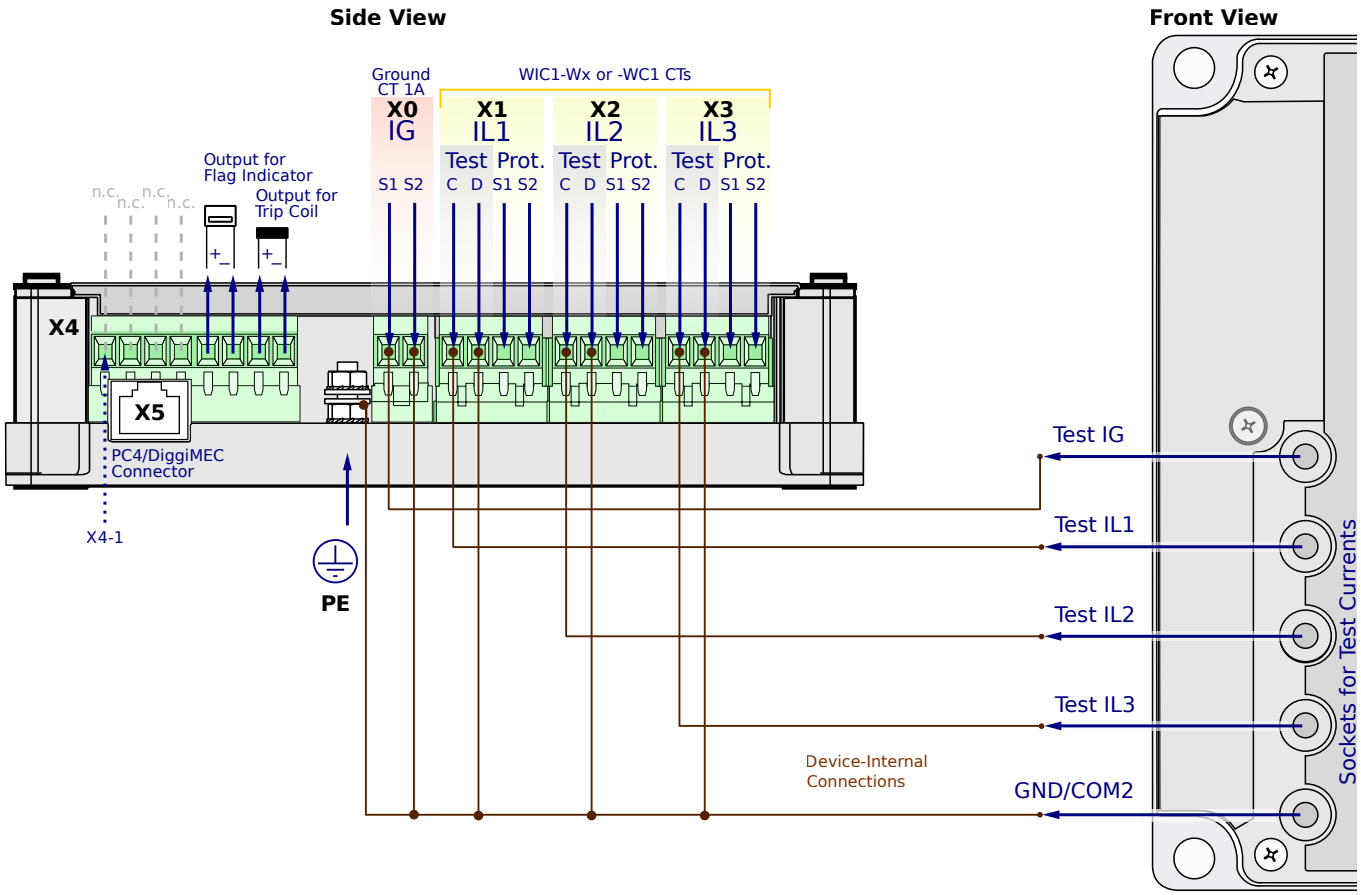


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1SAH

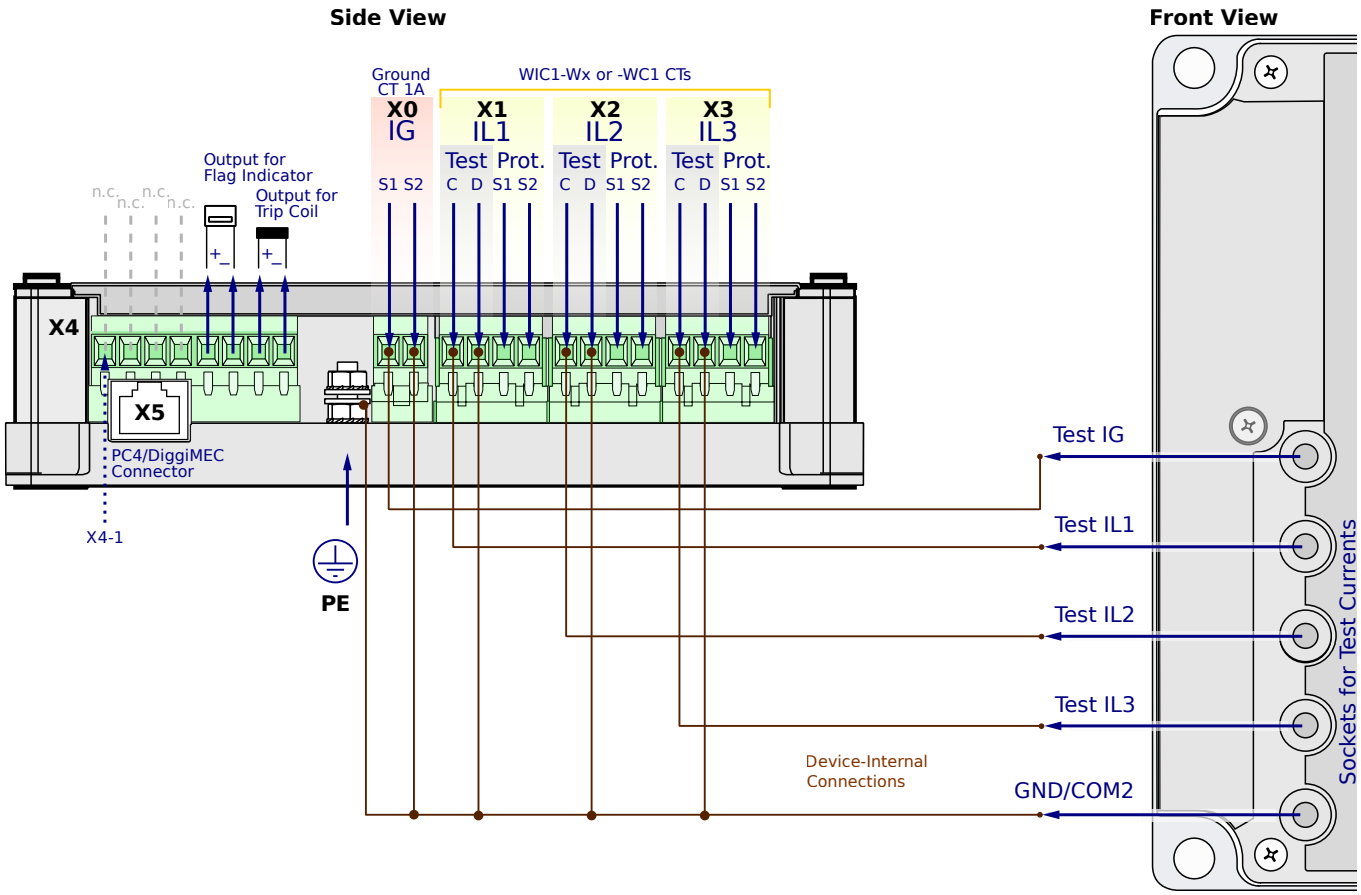


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1AA0

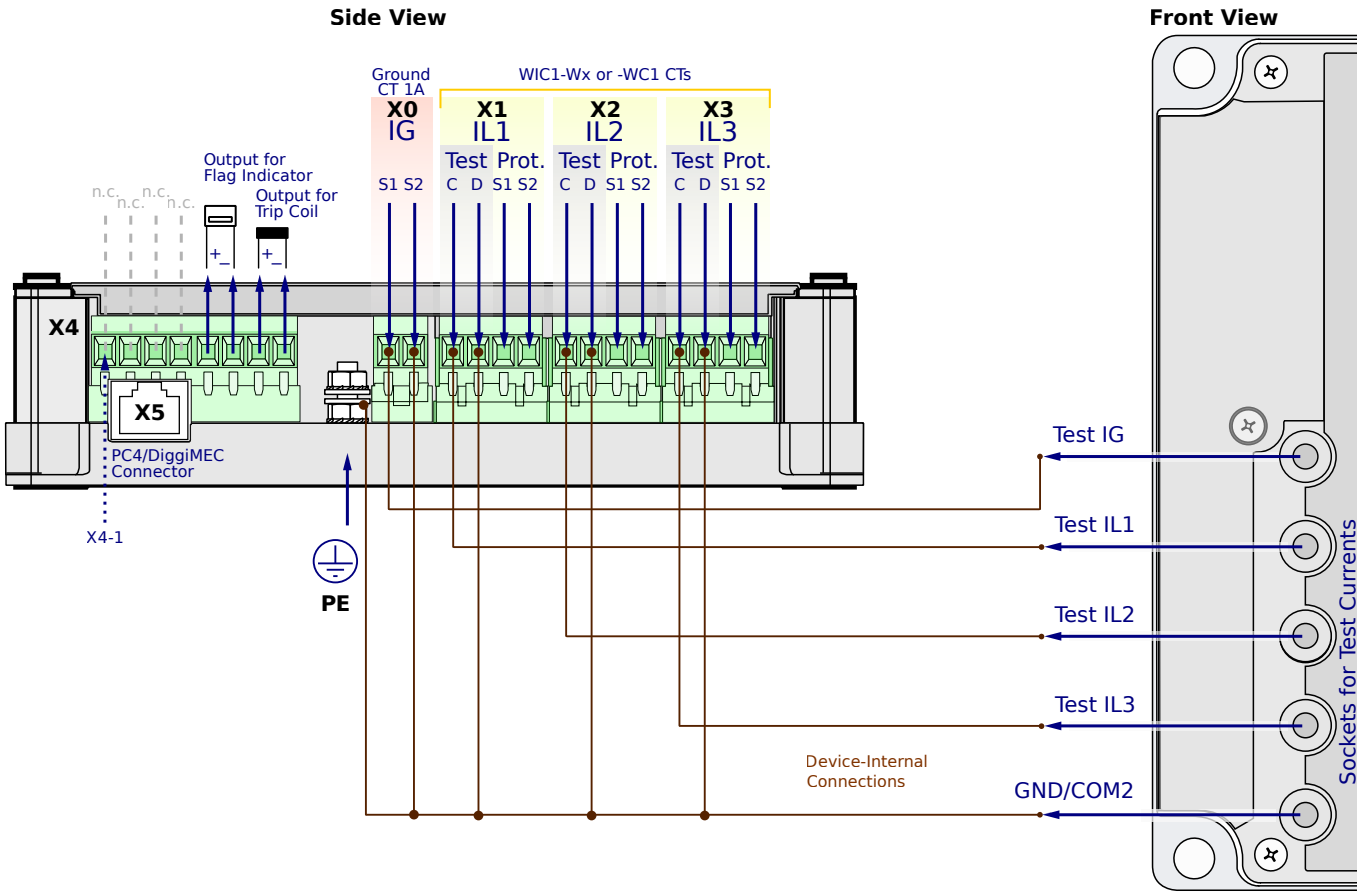


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1AAH

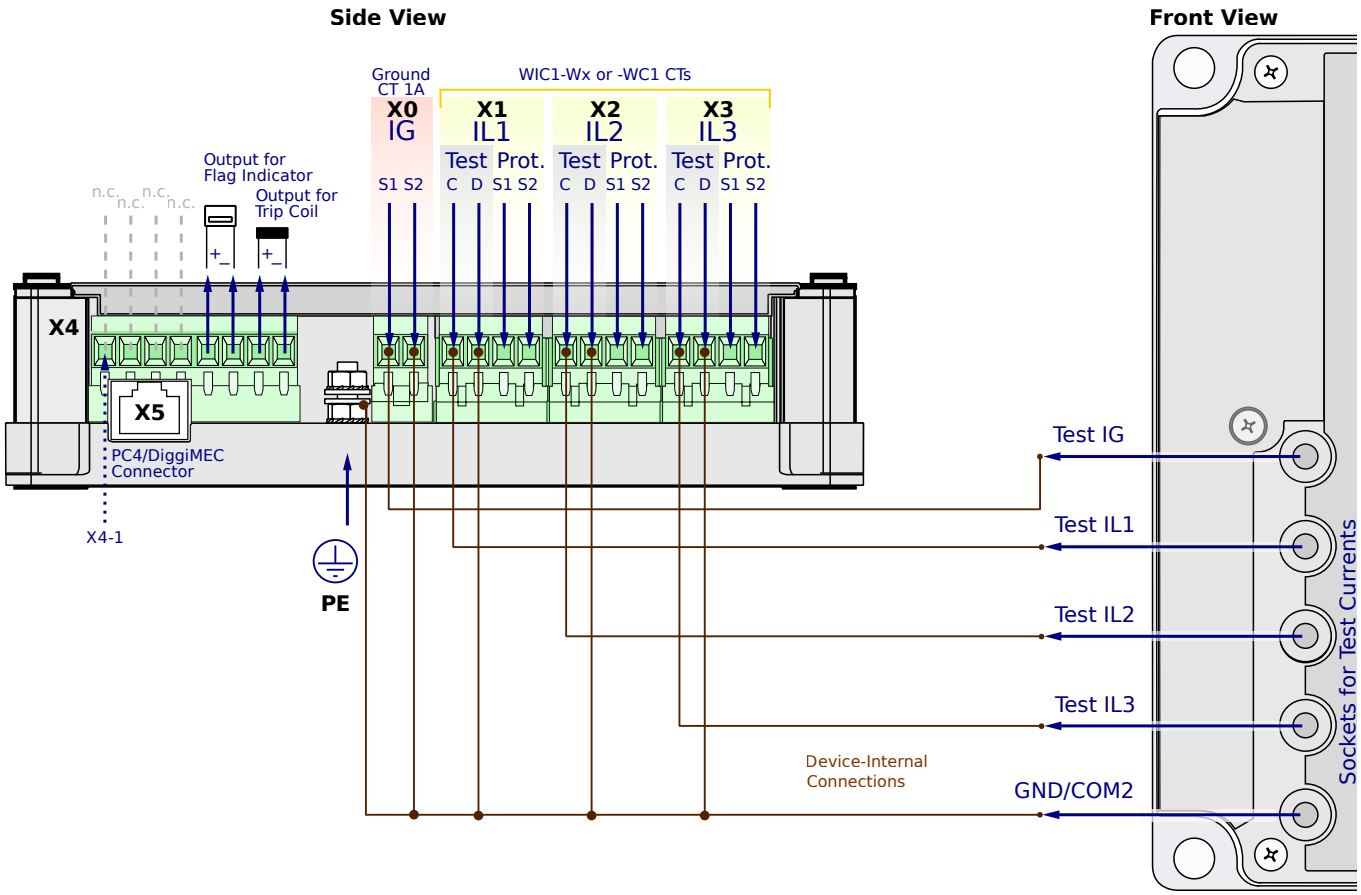


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1PA0

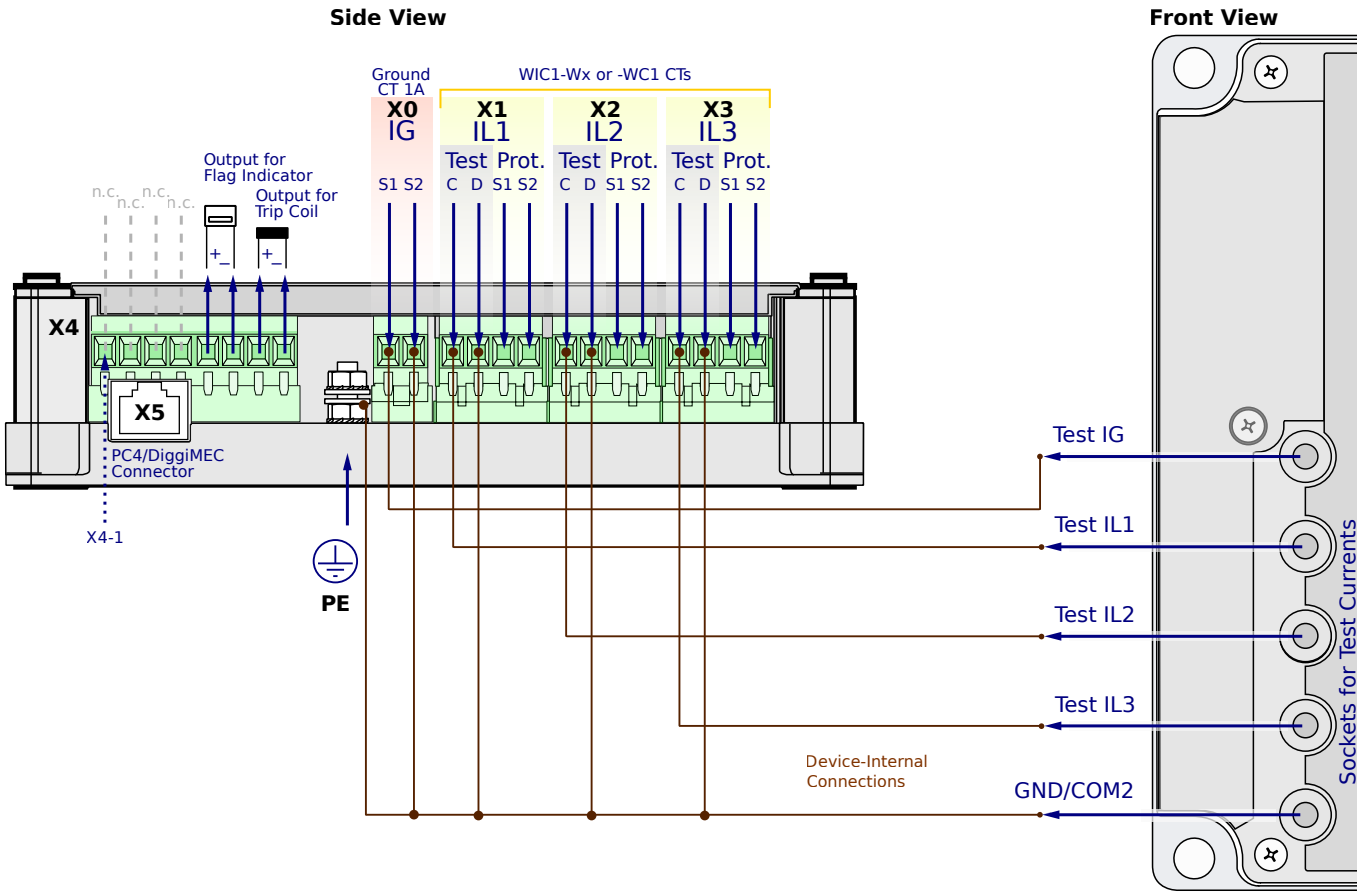


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN1PAH

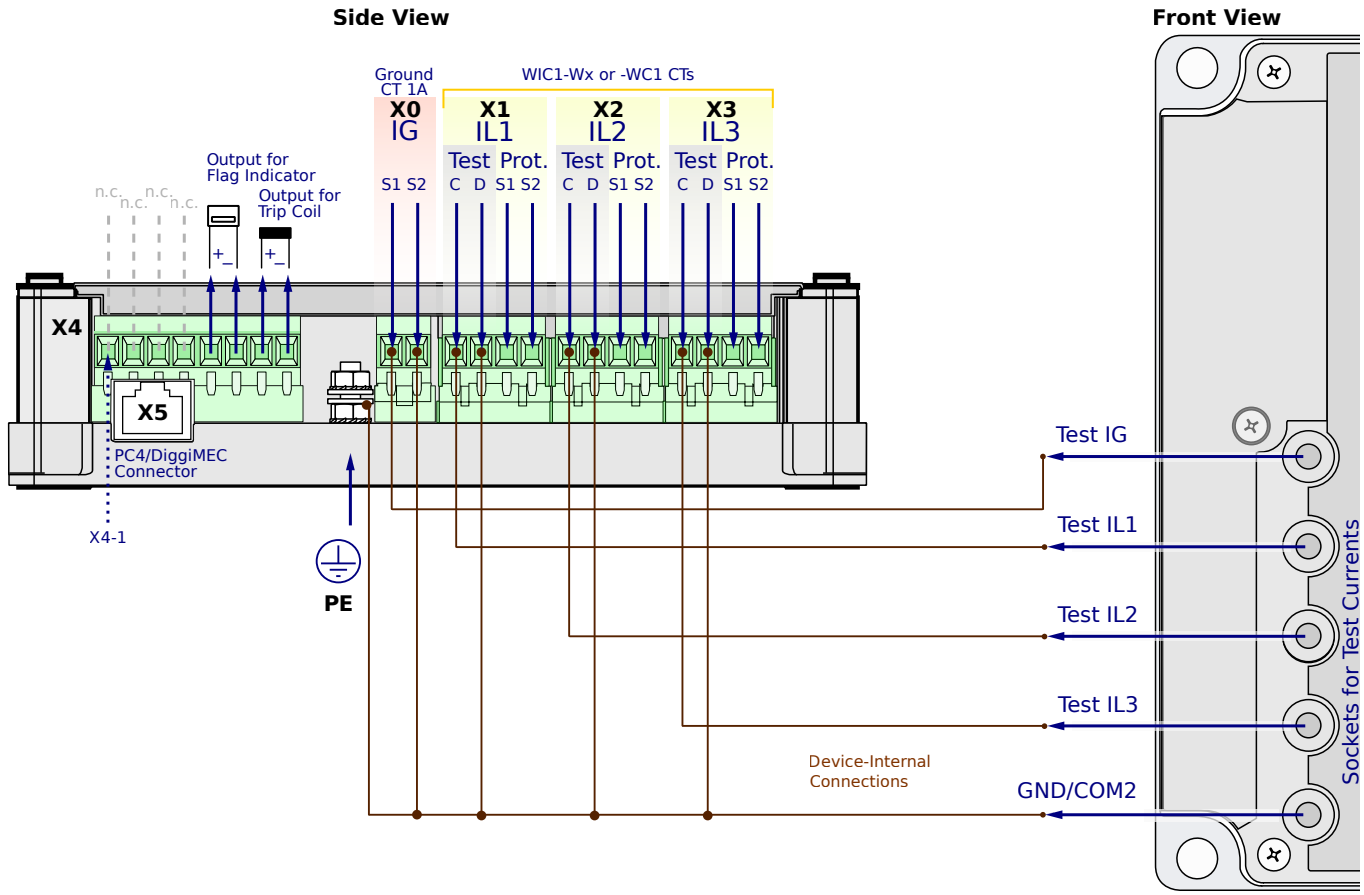


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2SA0

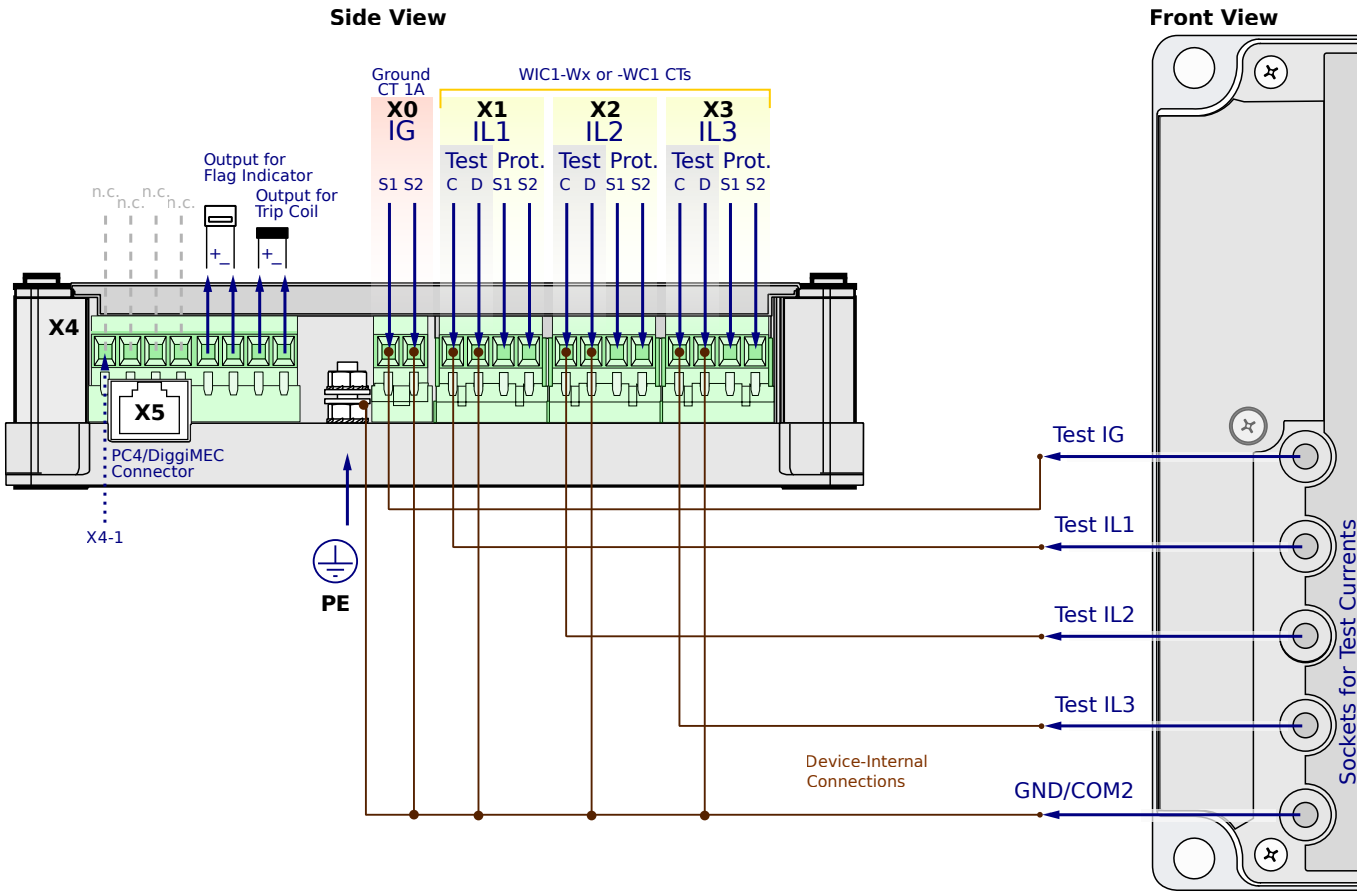


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2SAH

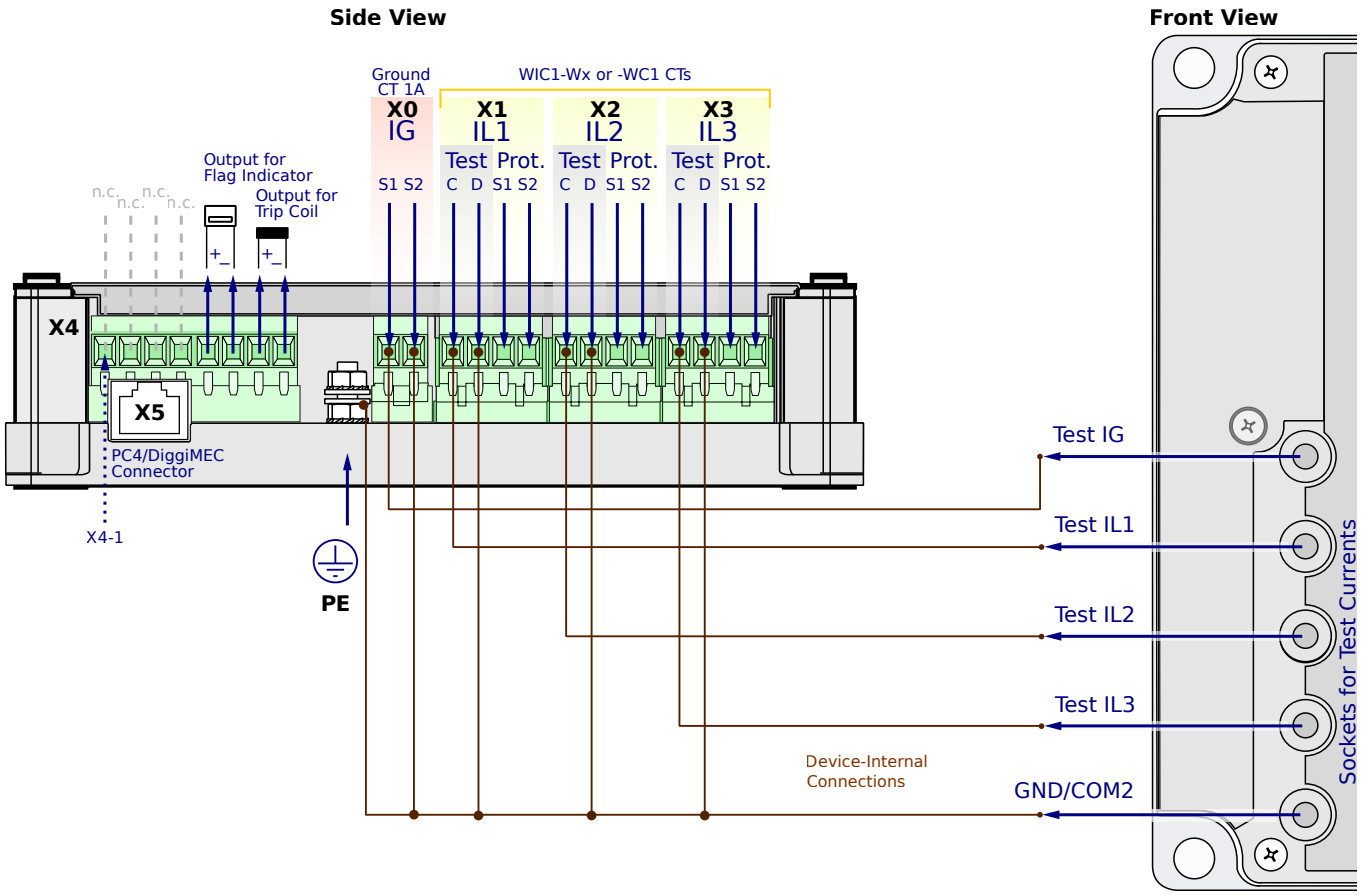


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2AA0

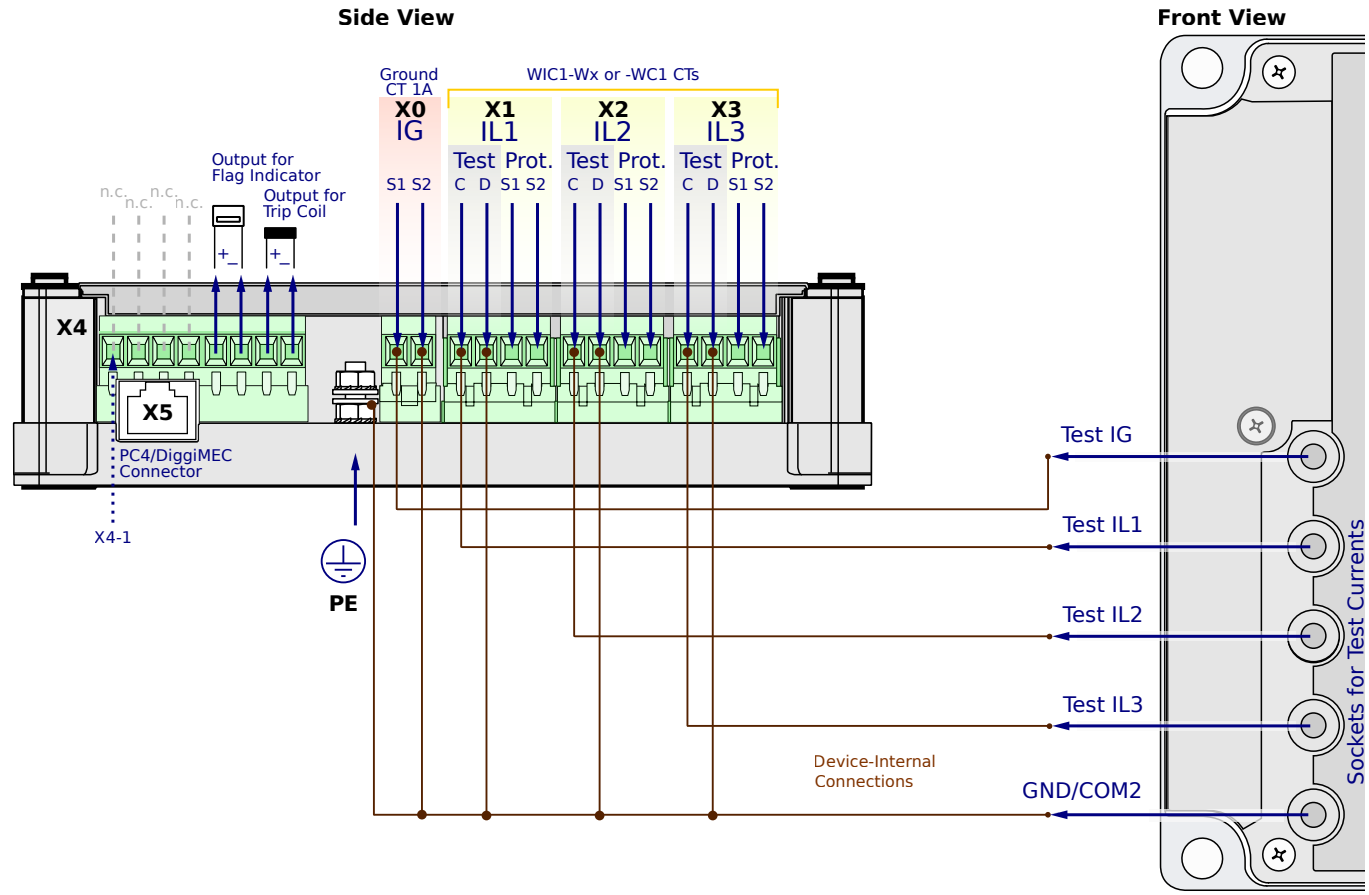


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2AAH

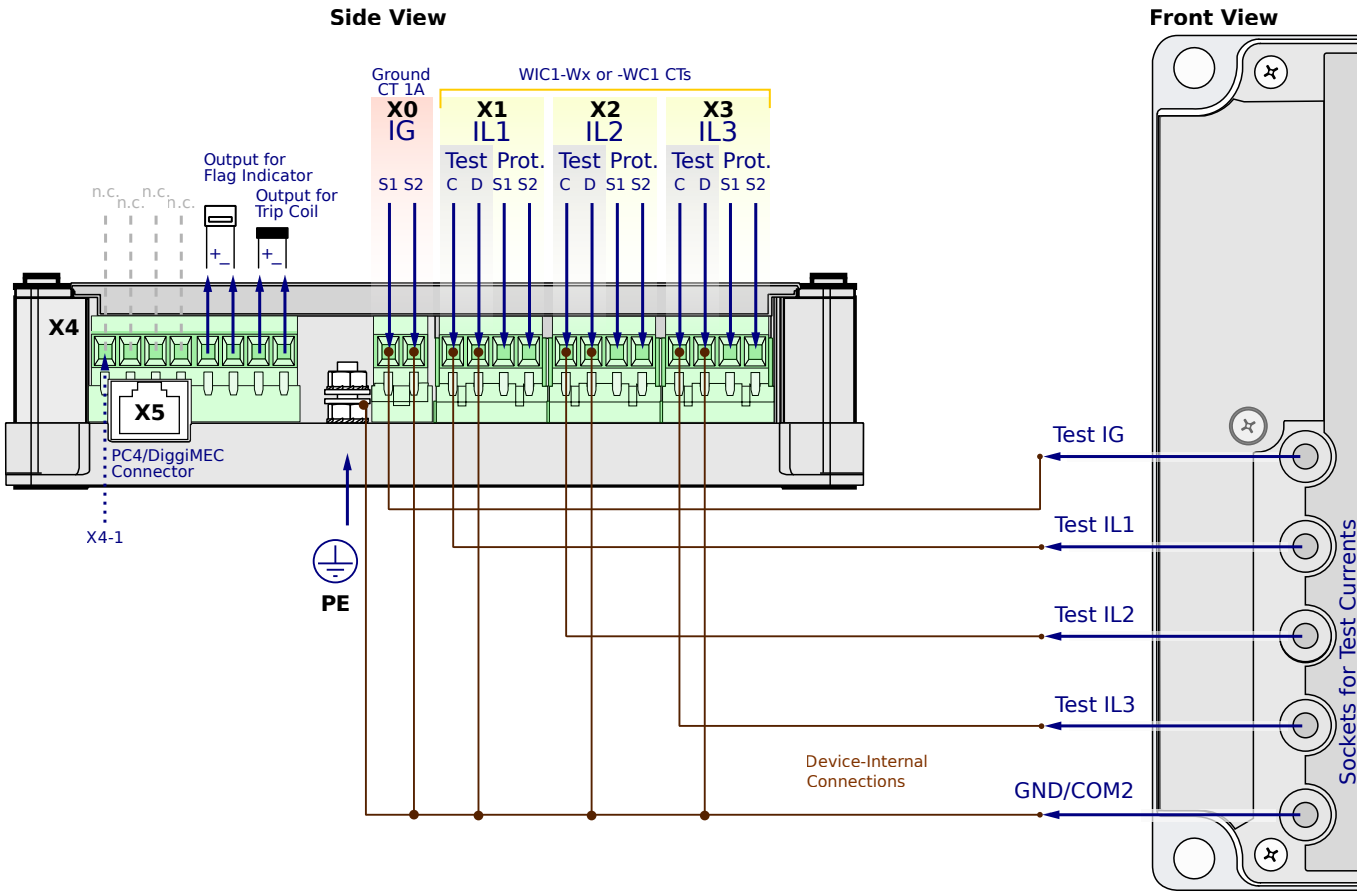


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2PA0

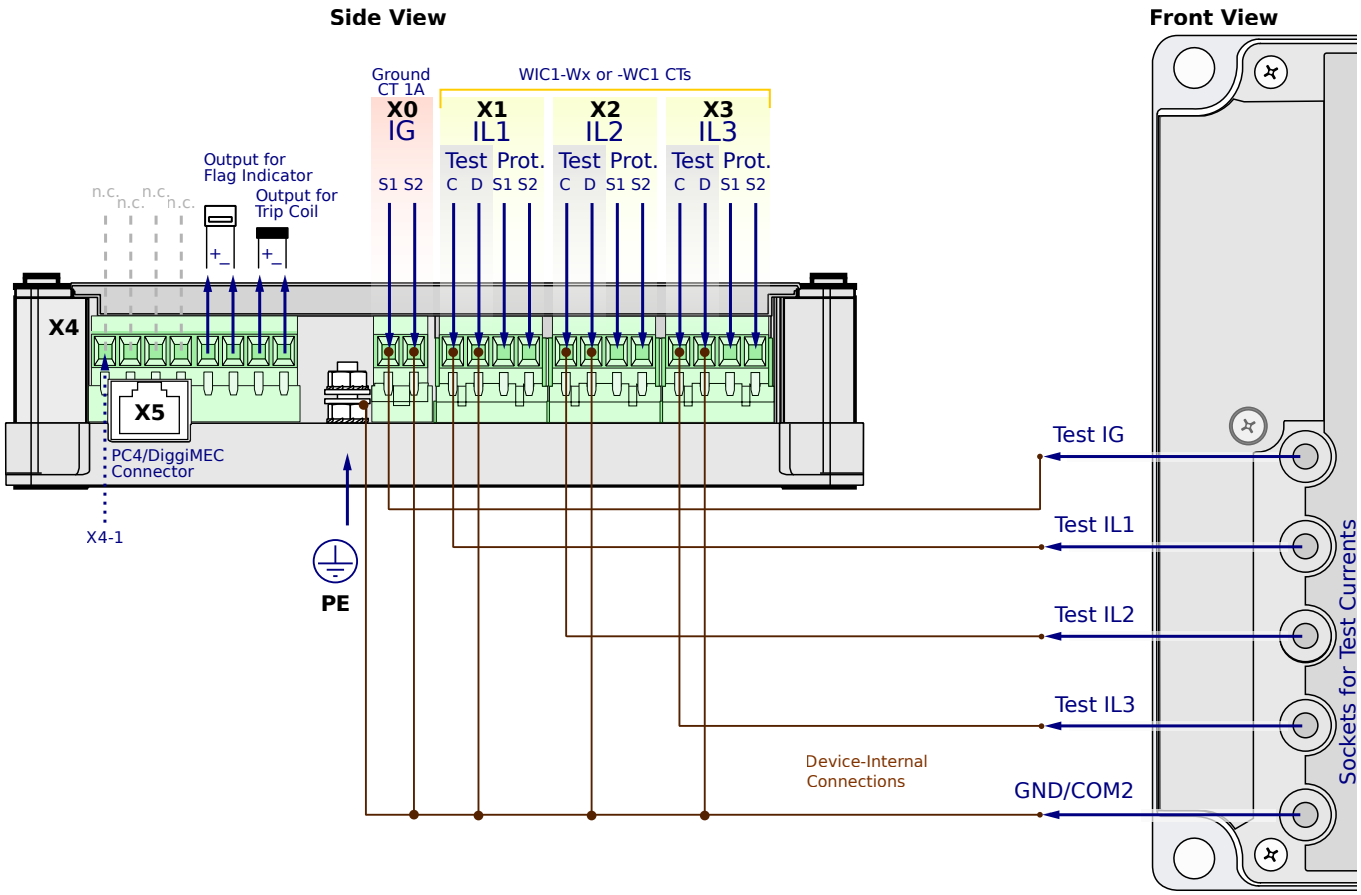


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FN2PAH

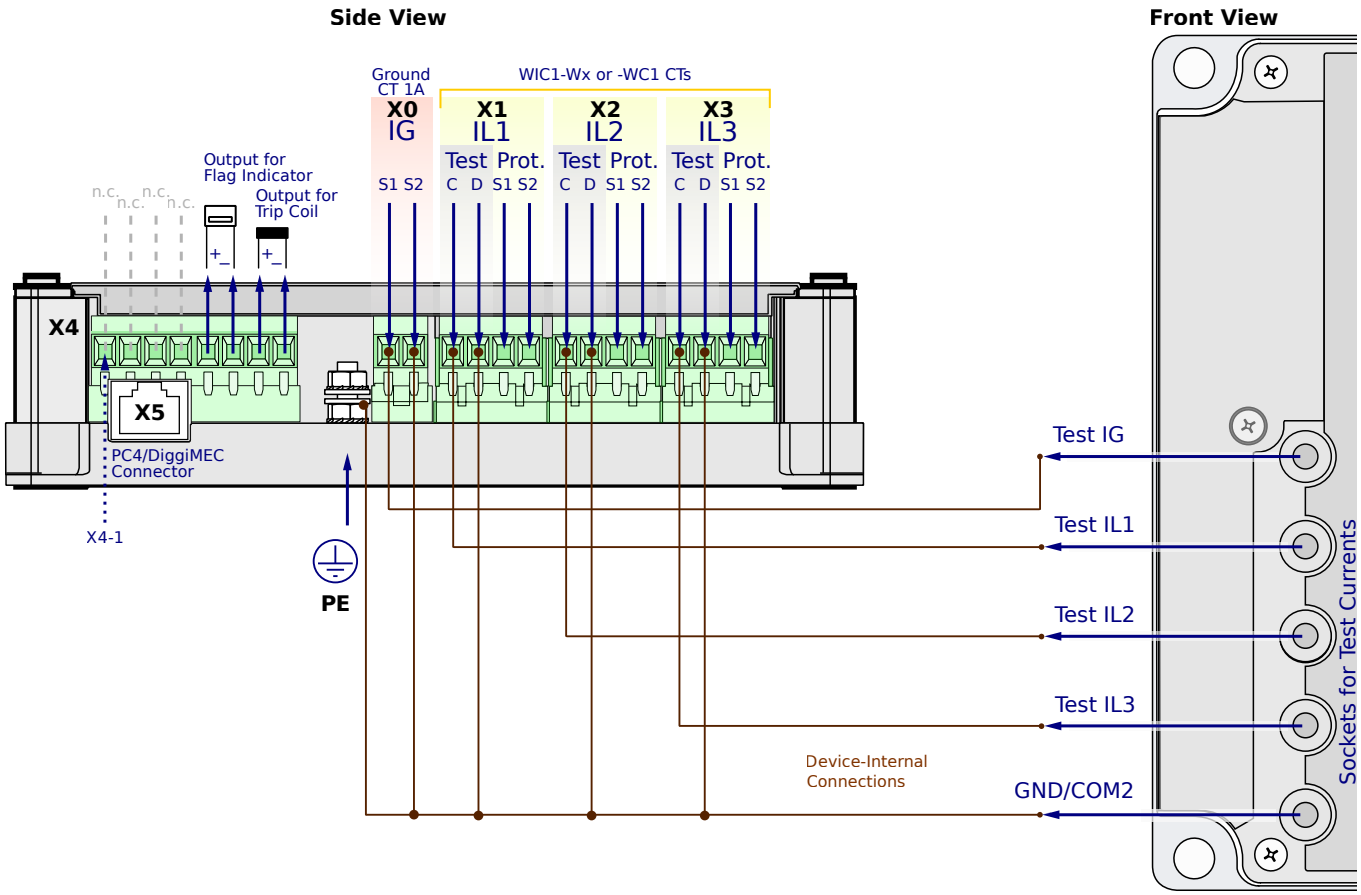


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1SA0

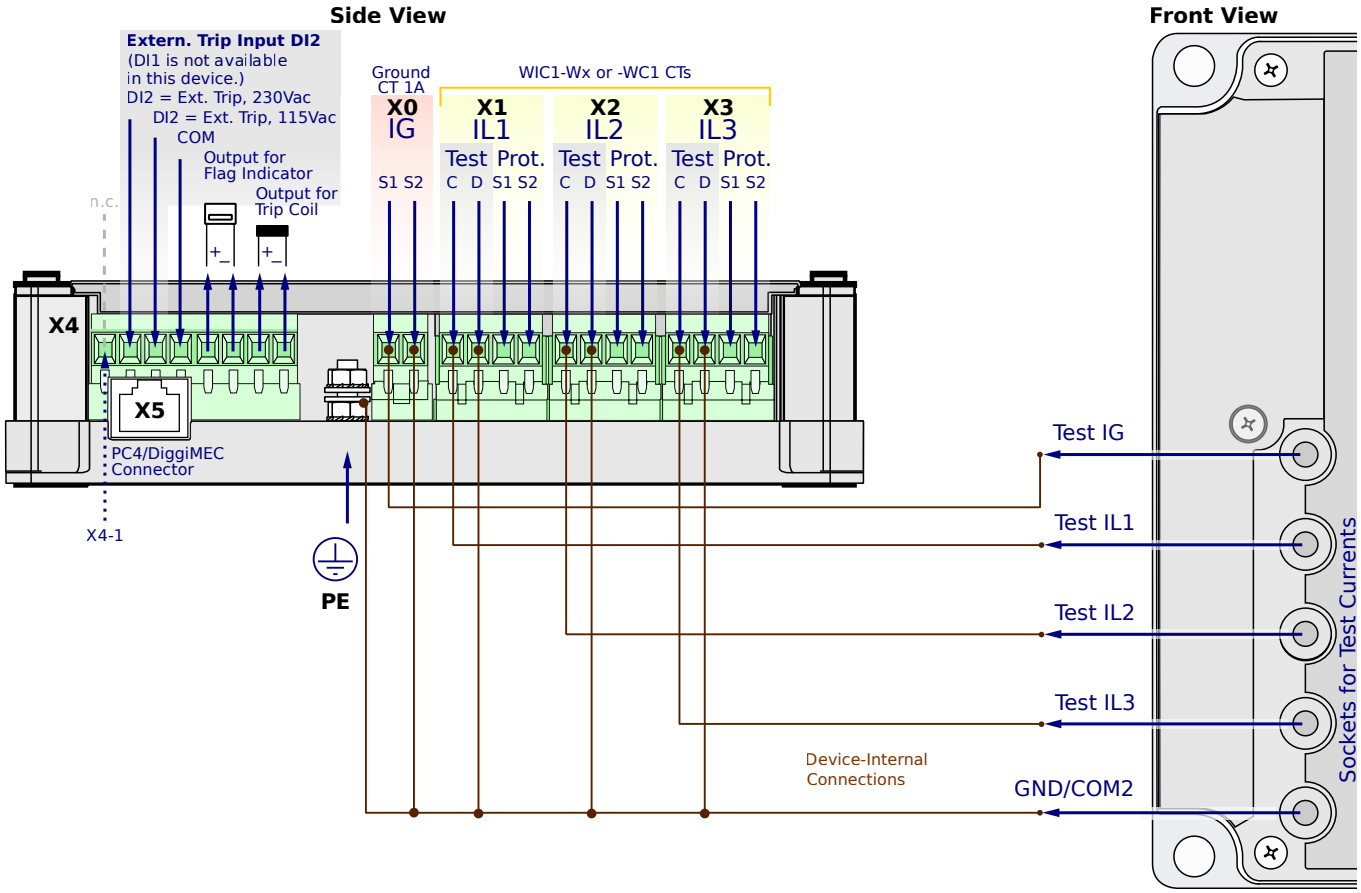


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1SAH

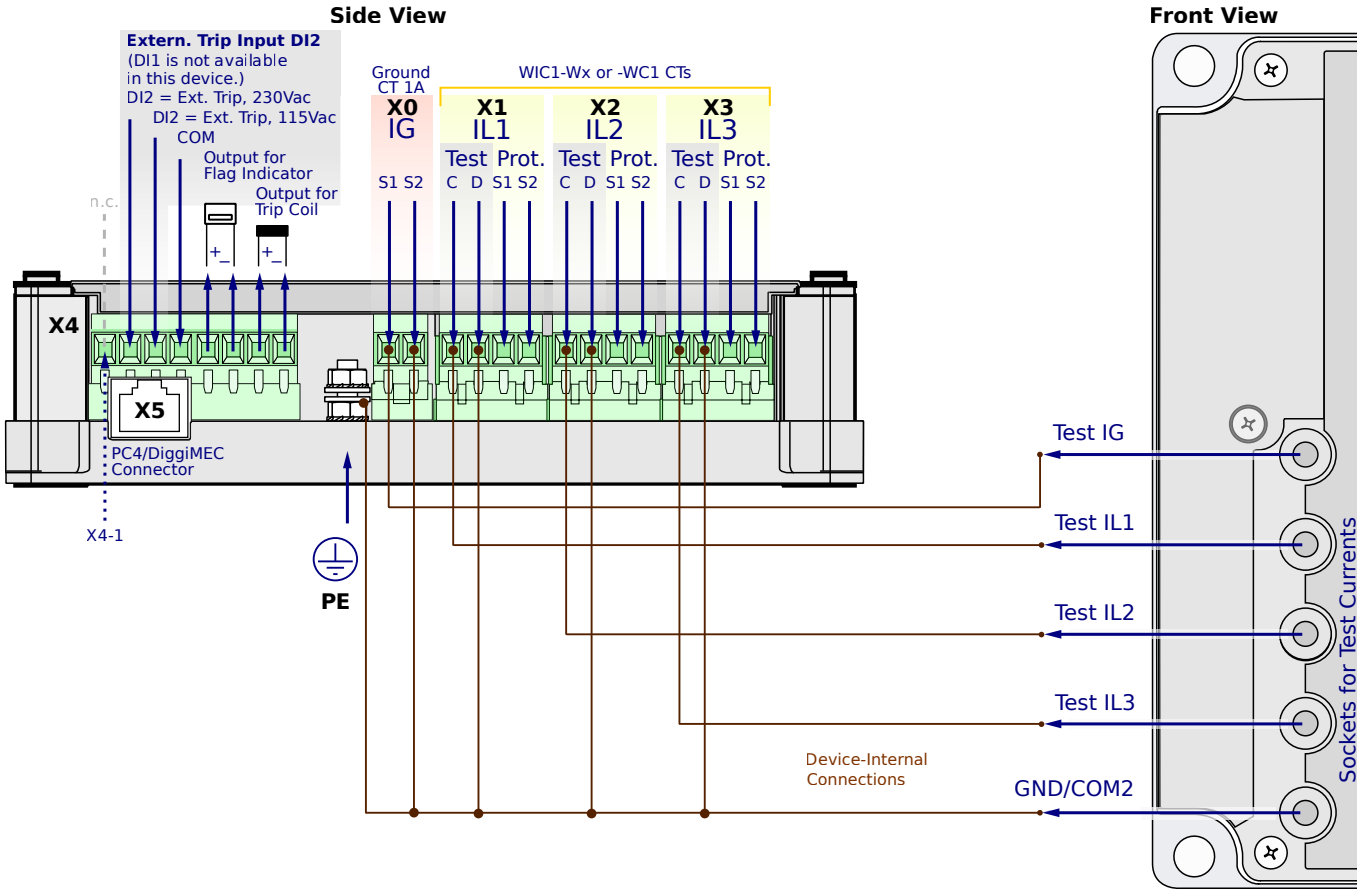


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1AA0

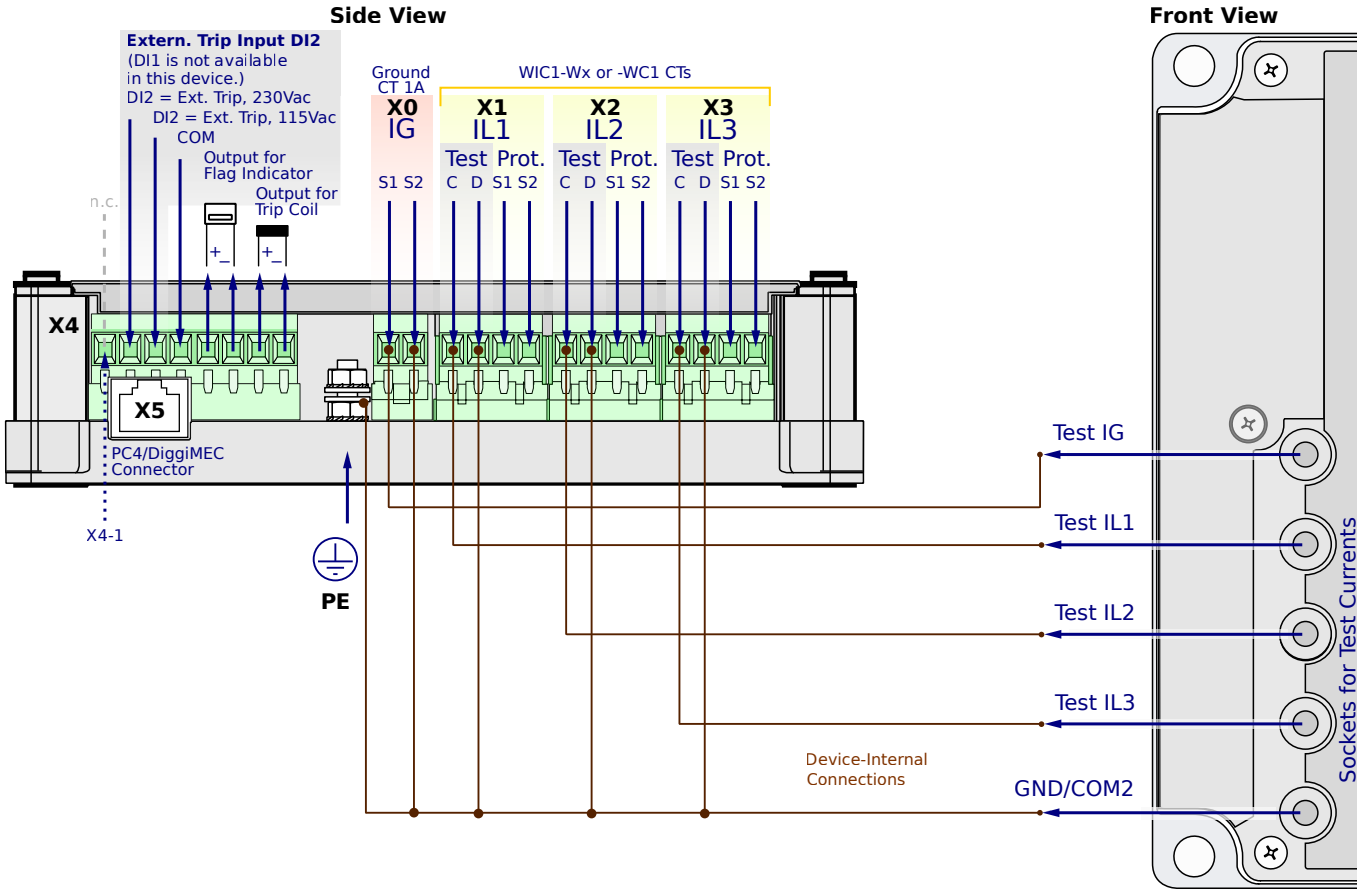


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1AAH

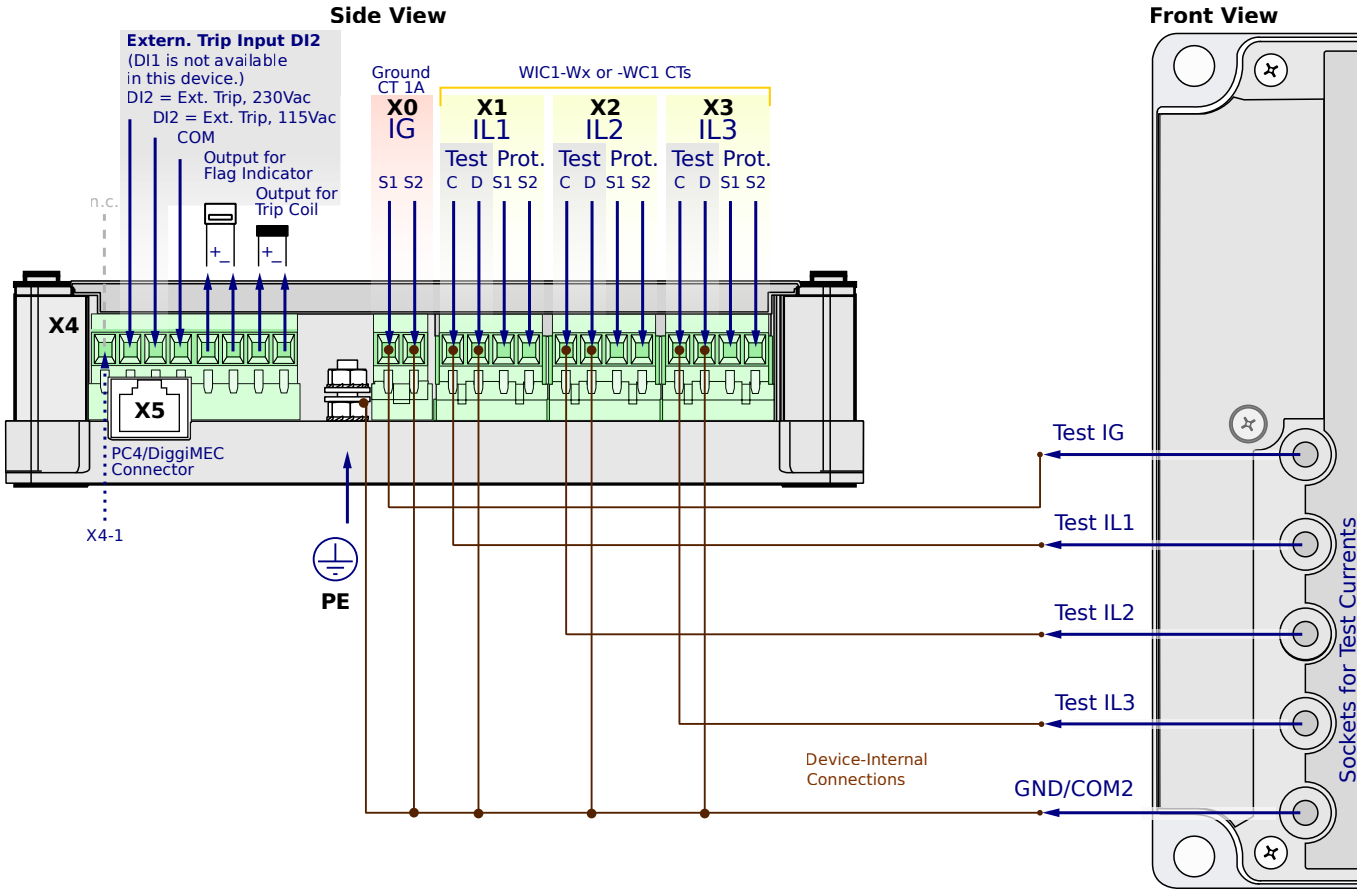


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1PA0

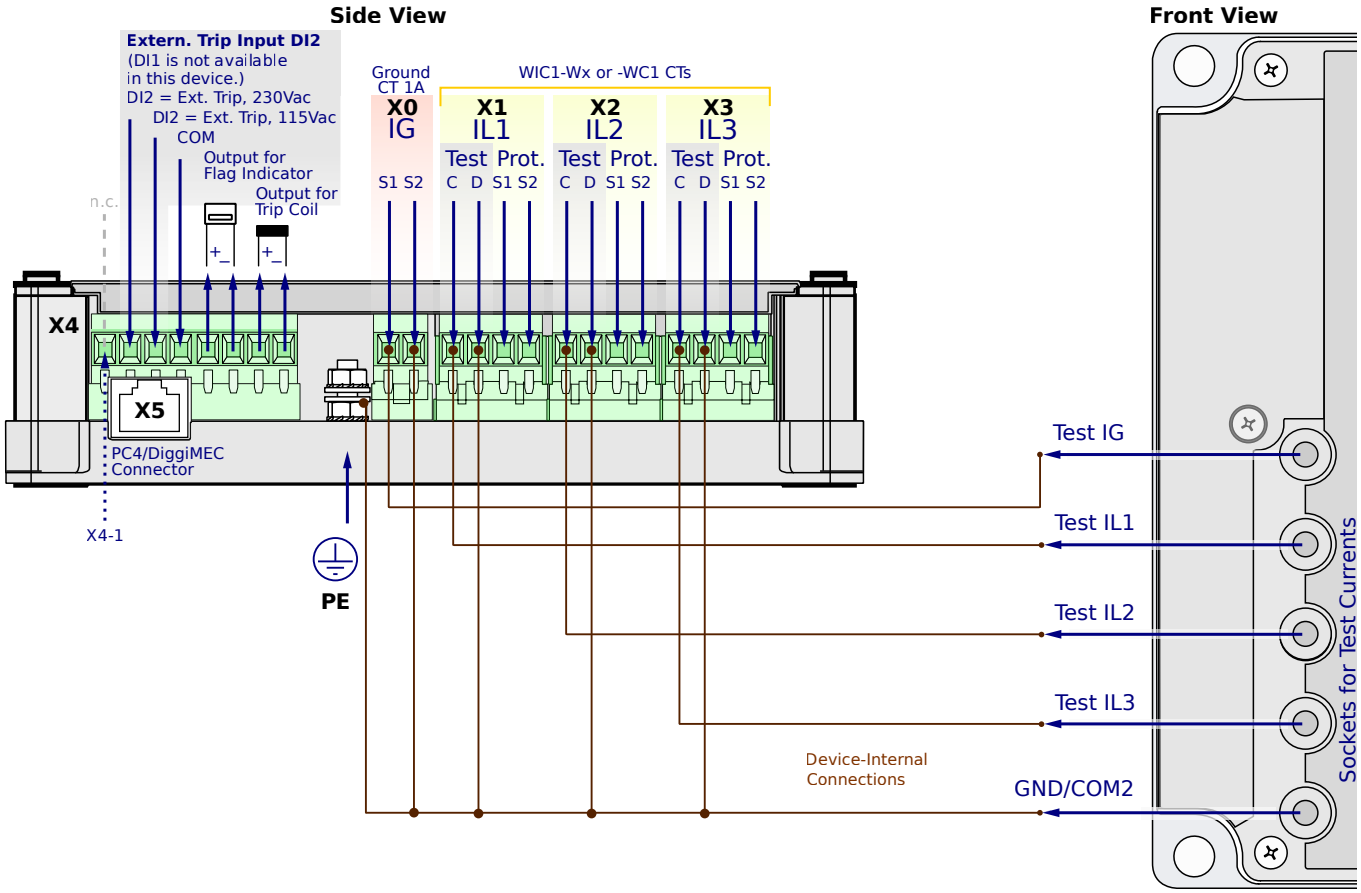


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF1PAH

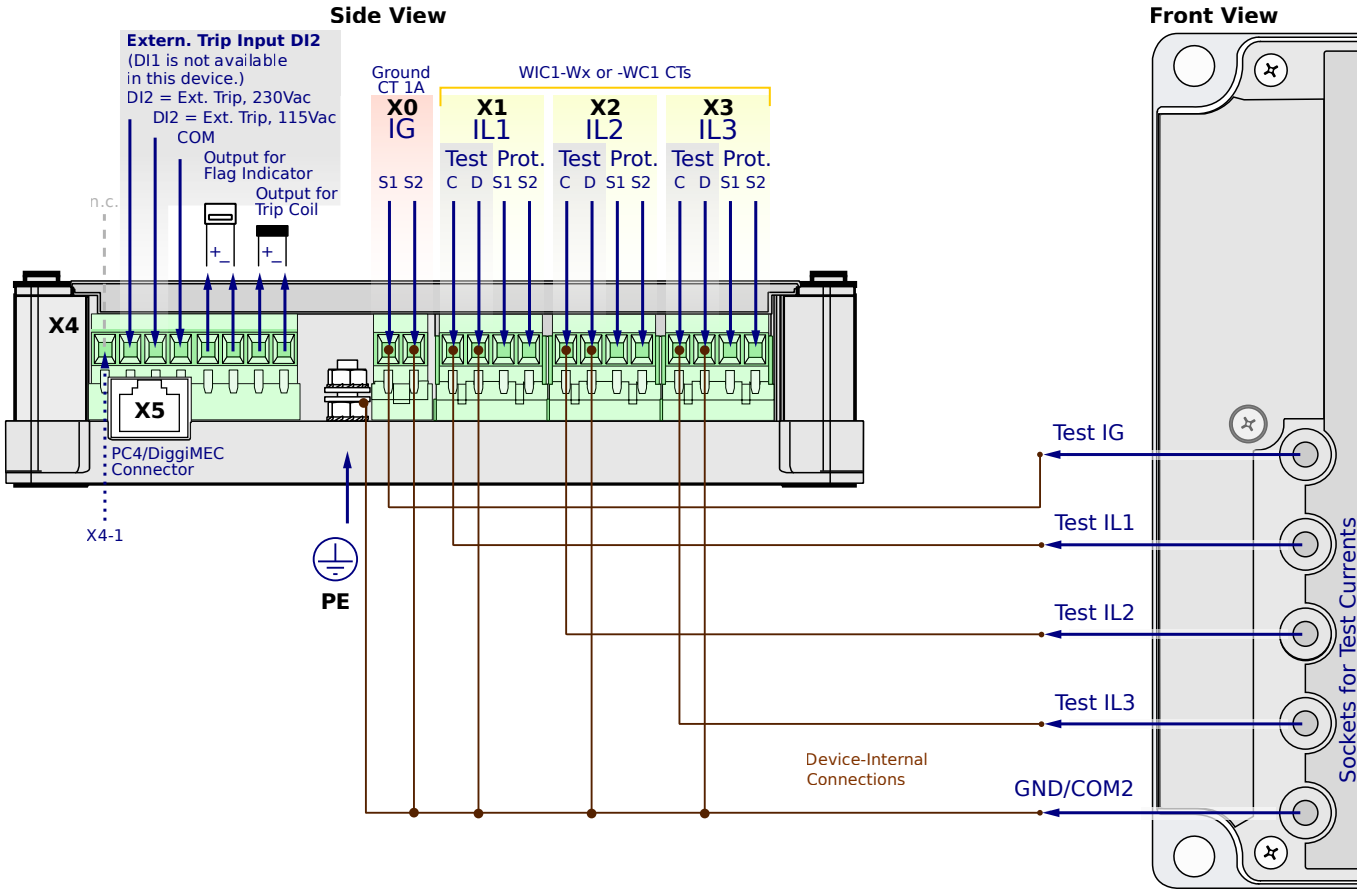


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2SA0

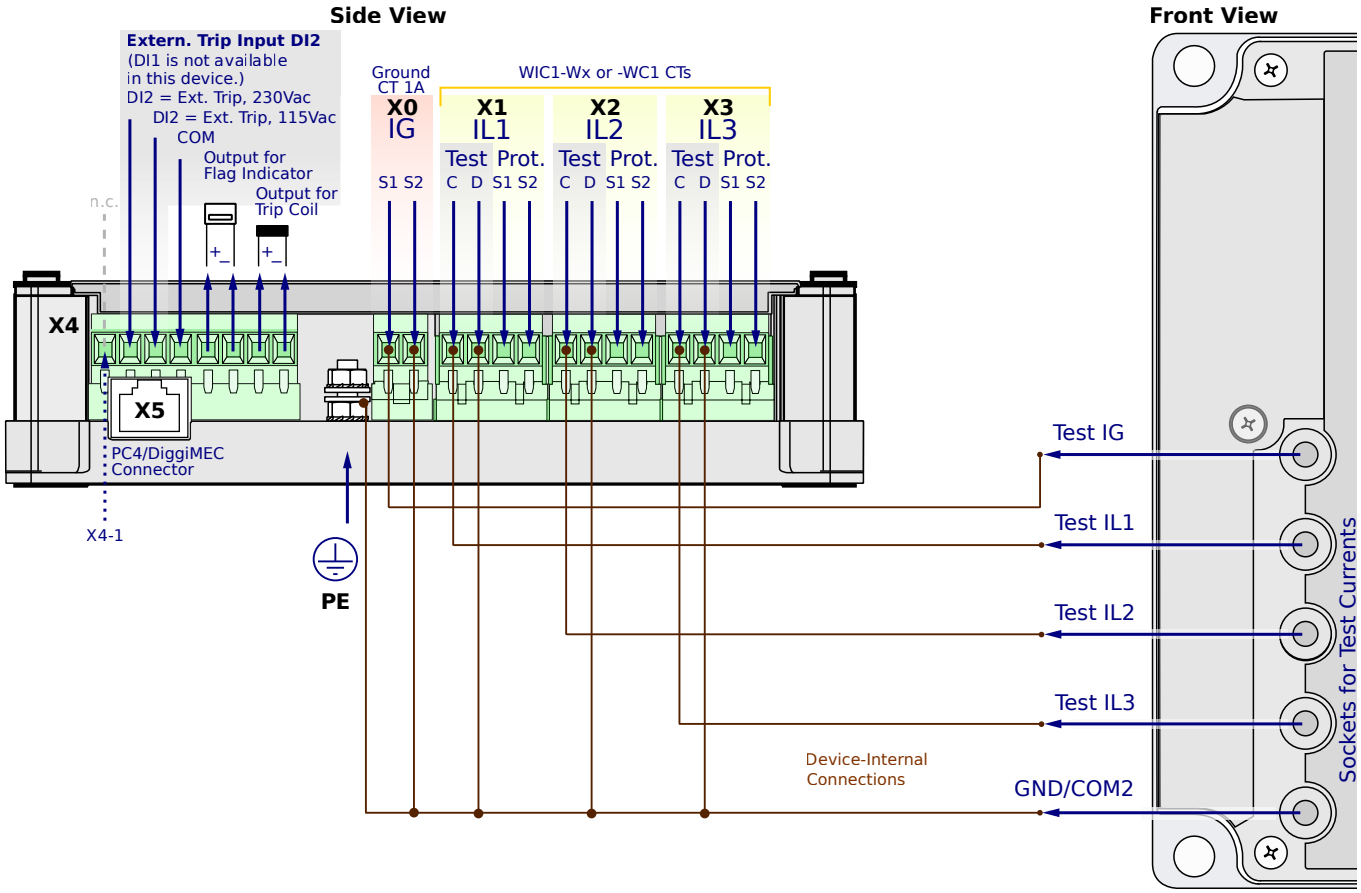


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2SAH

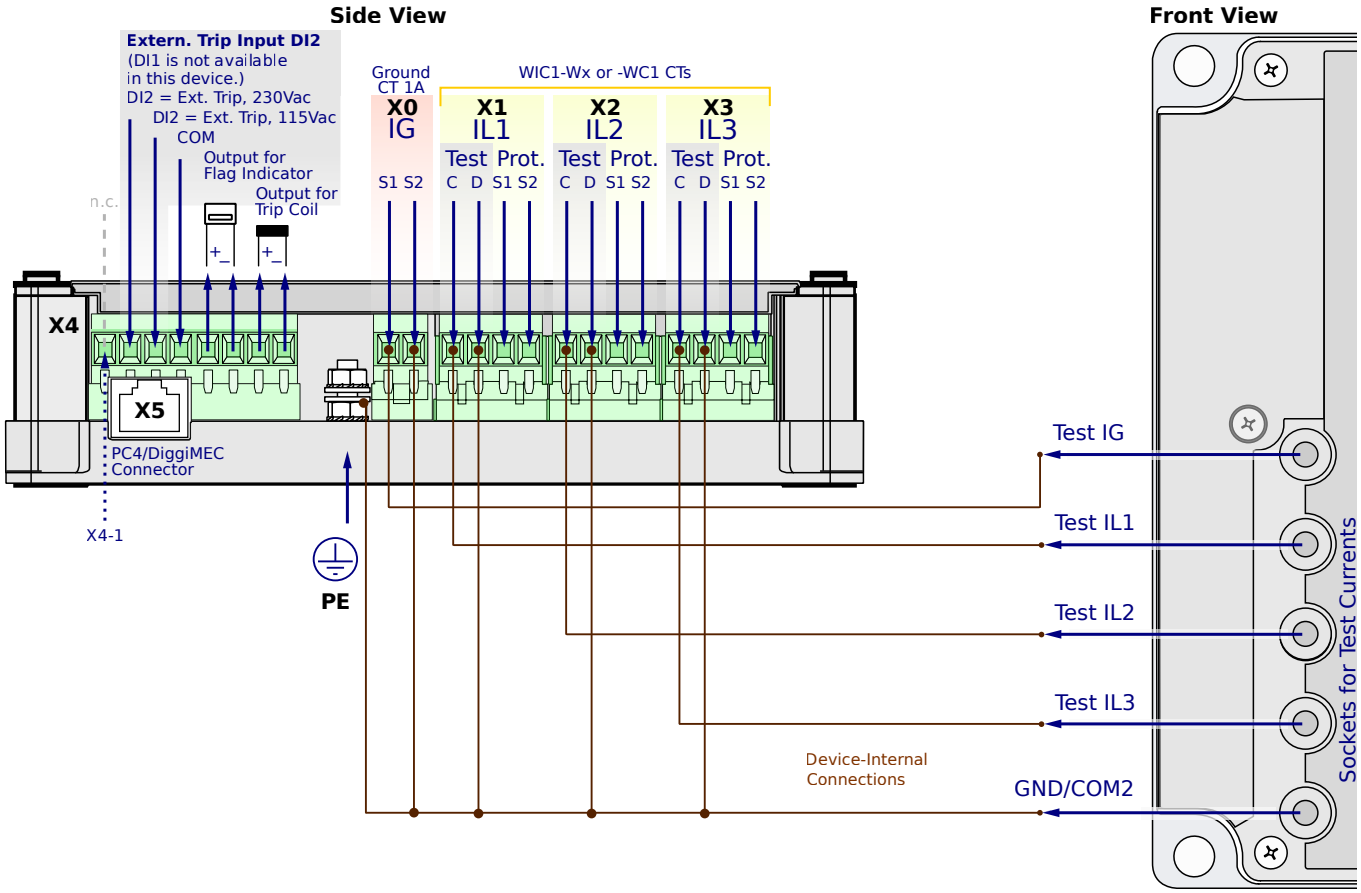


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2AA0

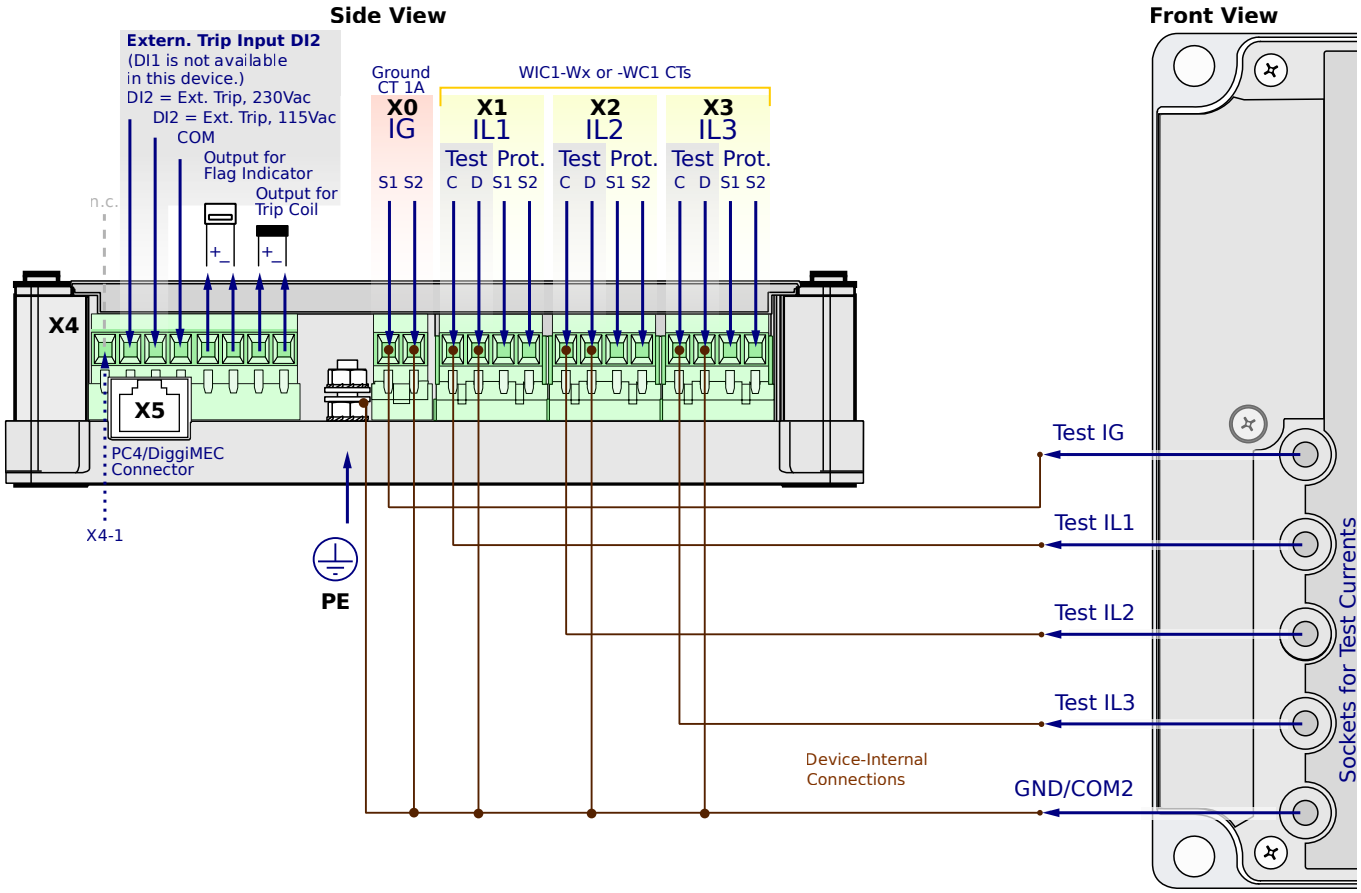


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2AAH

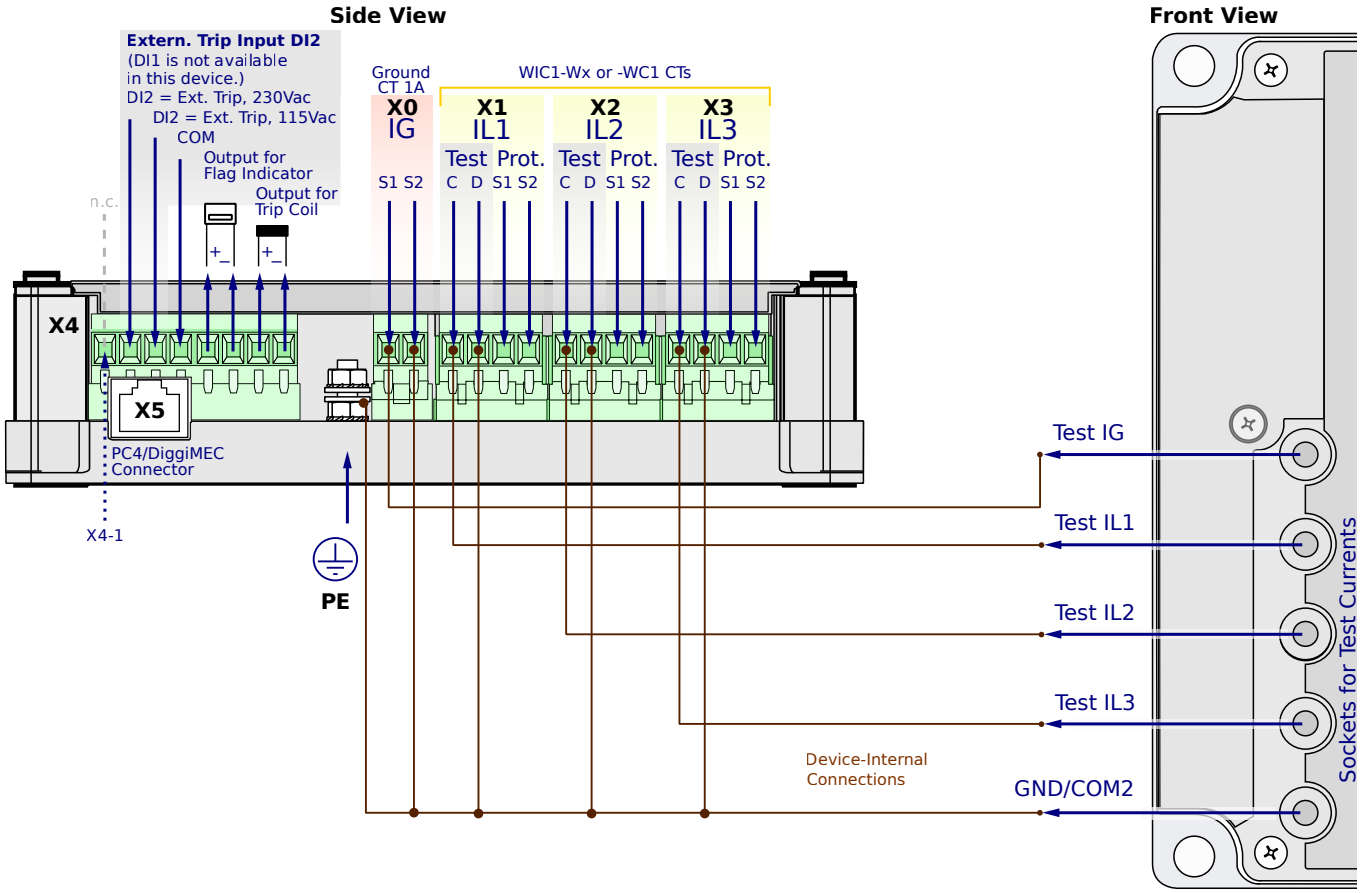


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2PA0

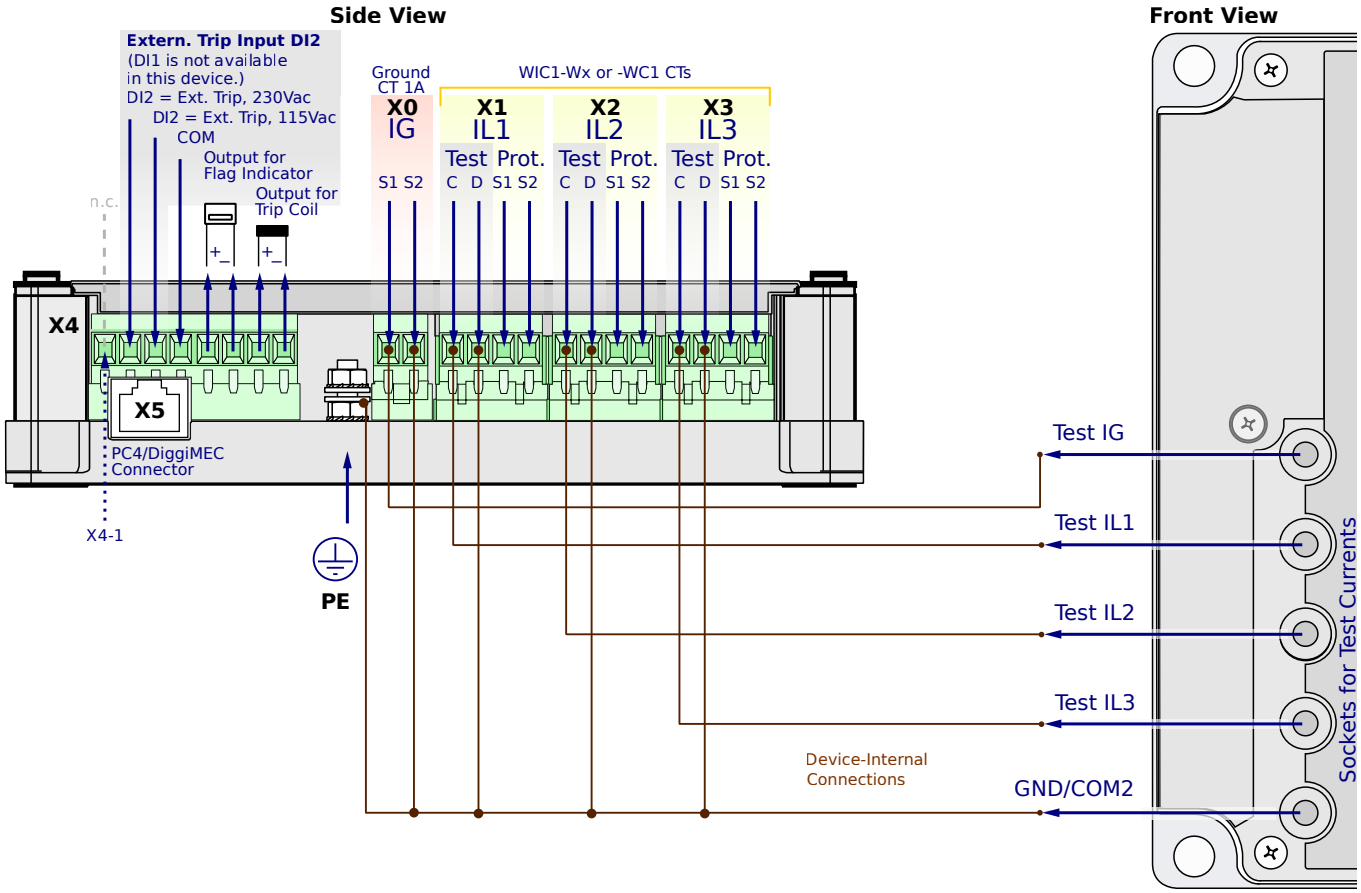


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FF2PAH

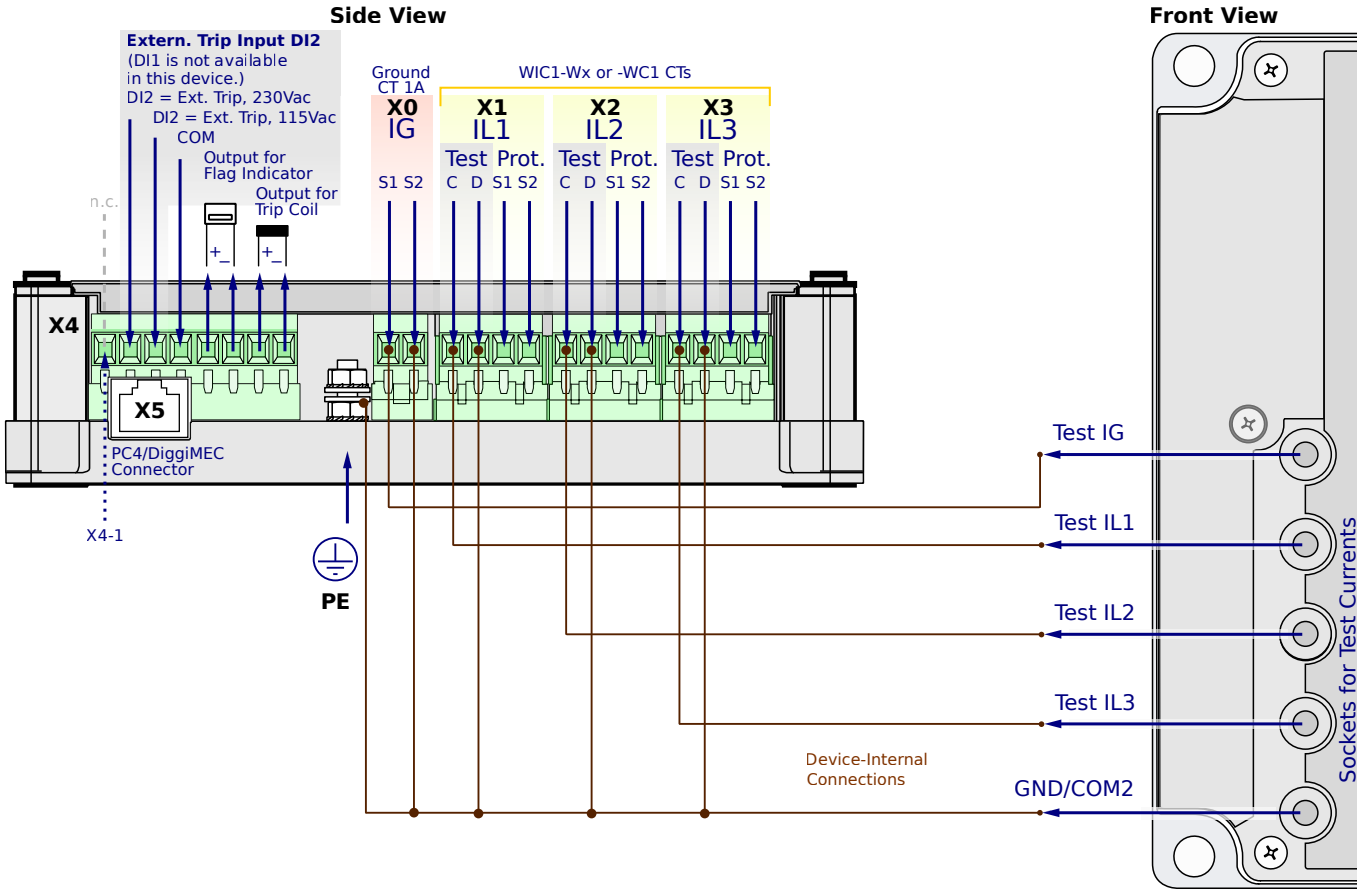


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1SA0

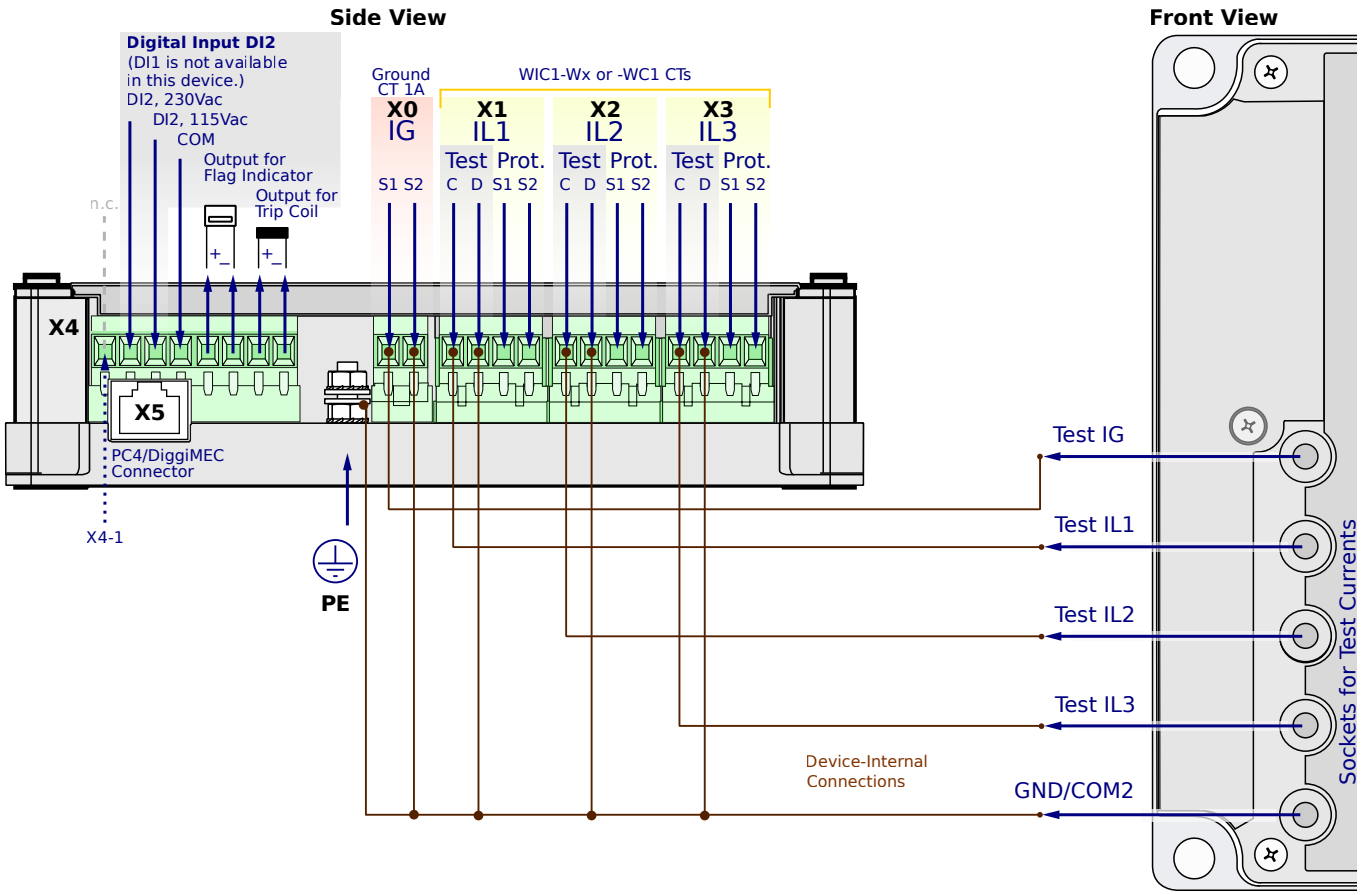


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1SAH

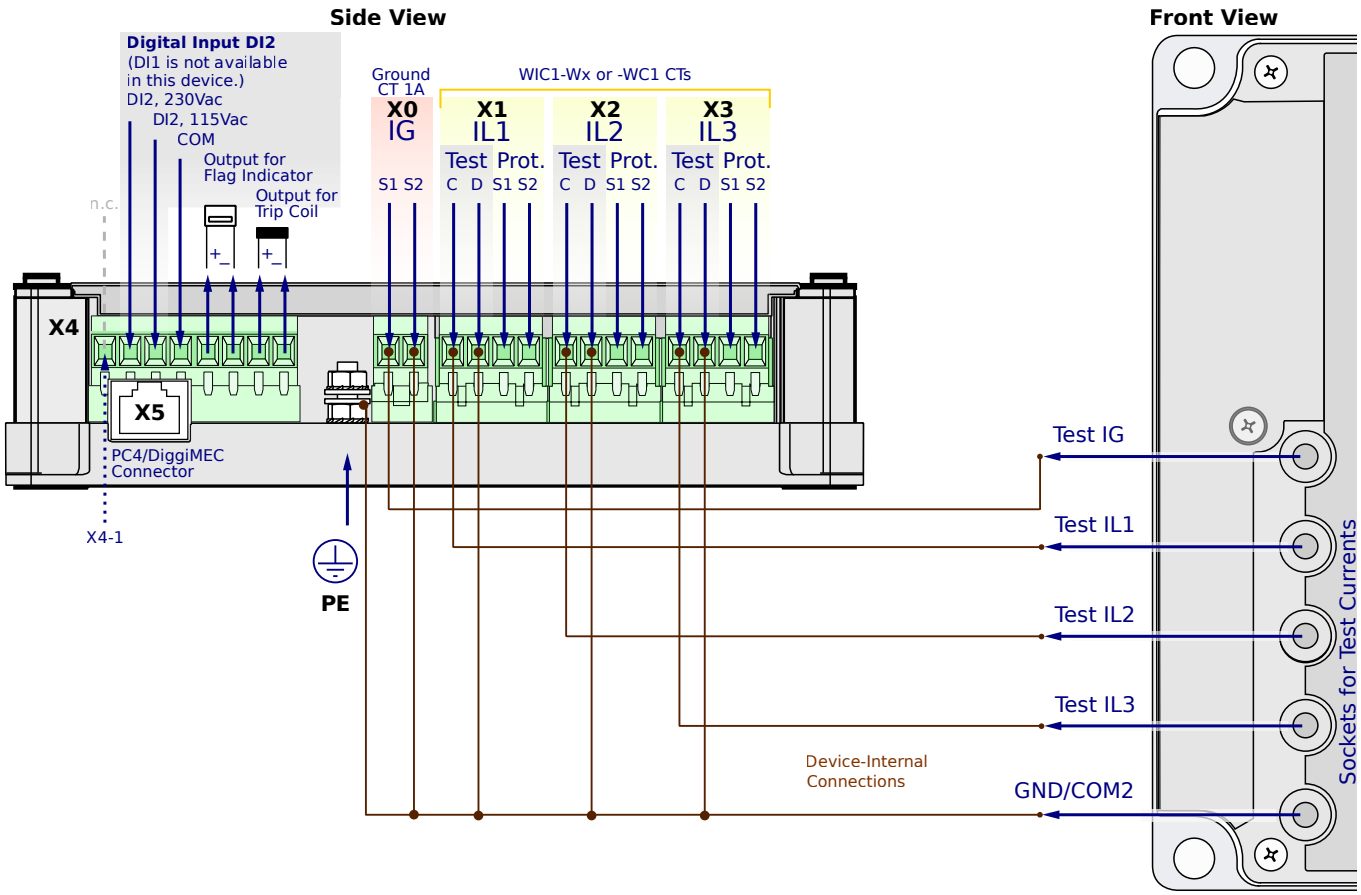


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1AA0

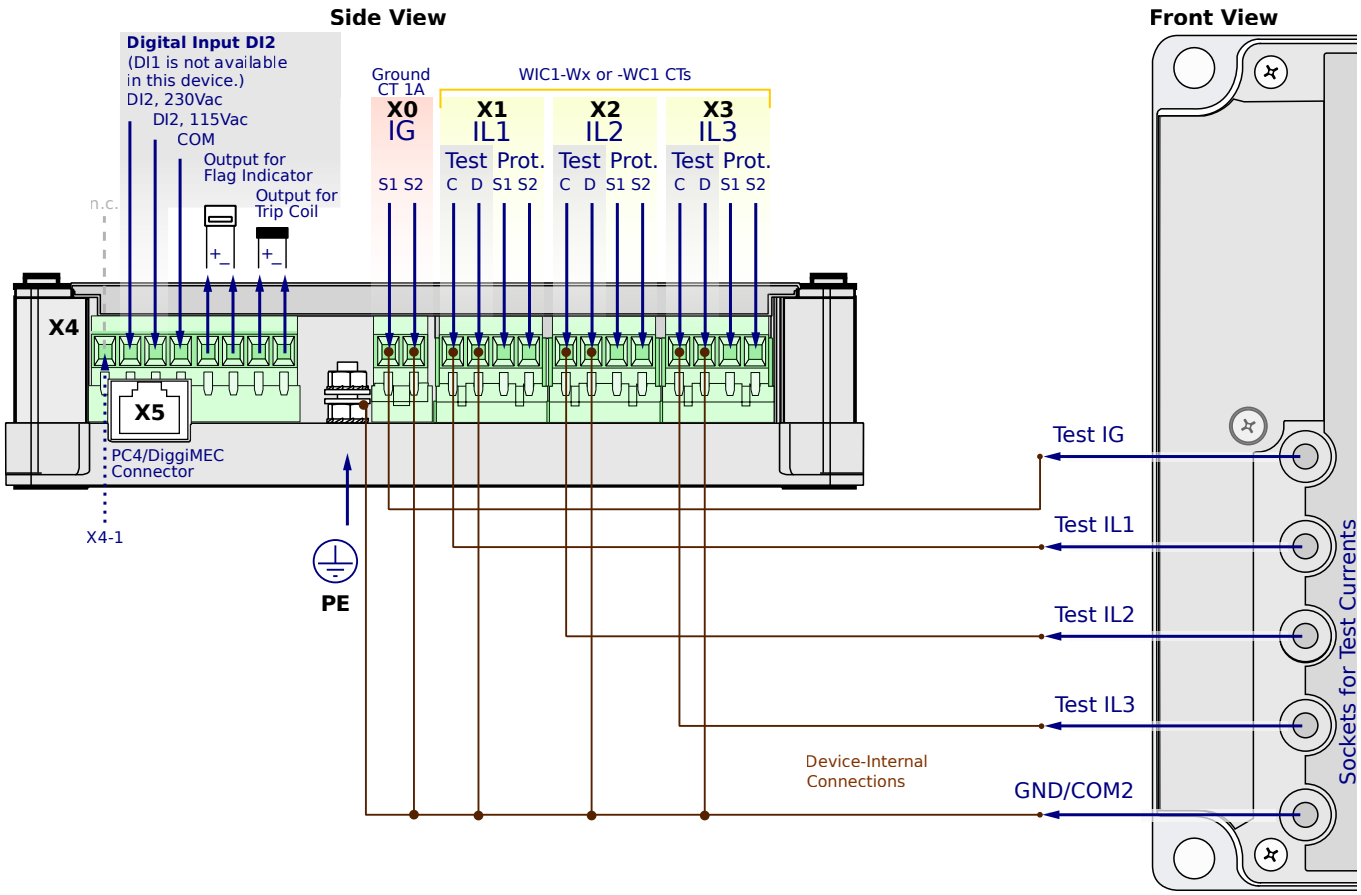


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1AAH

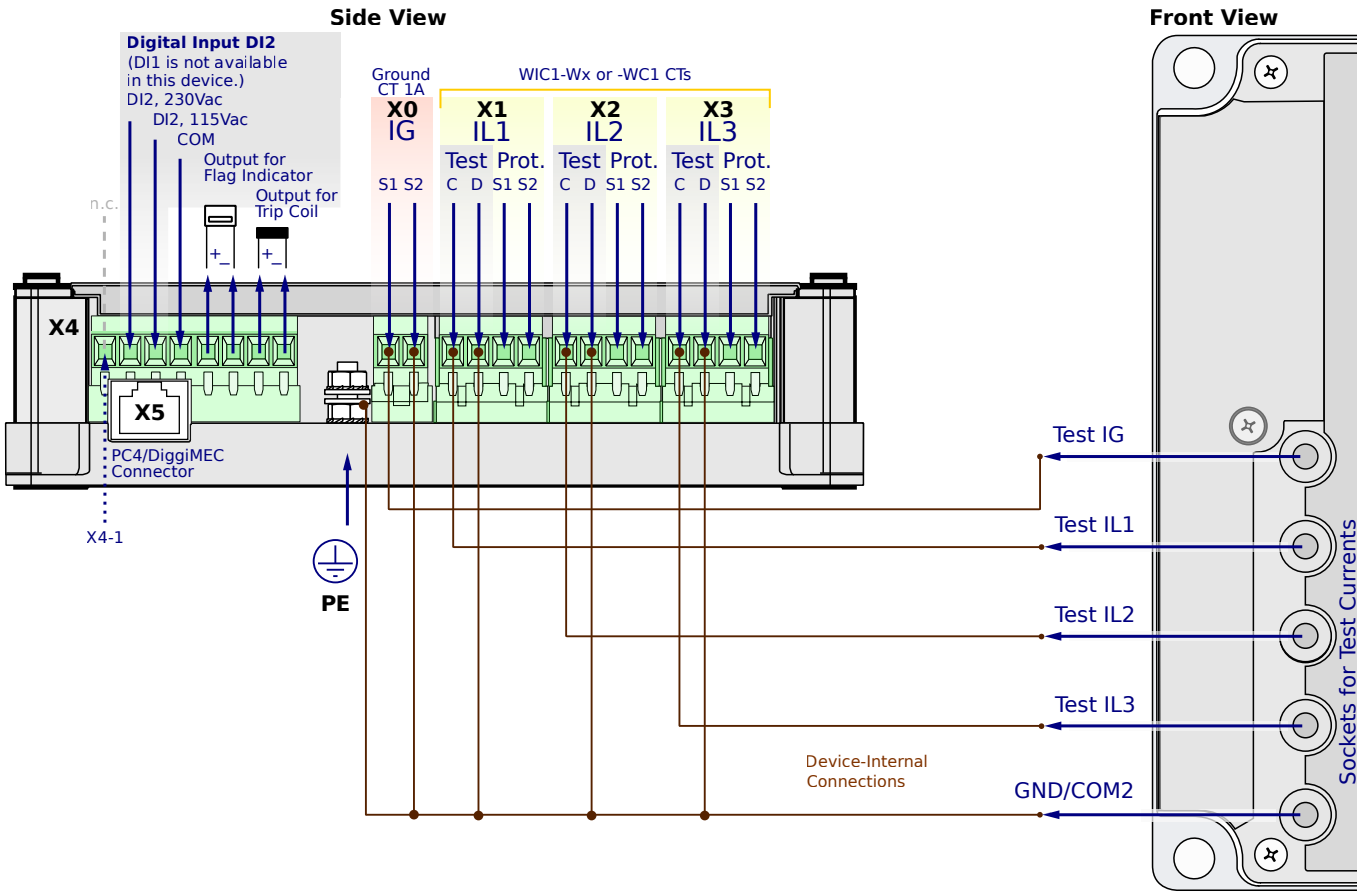


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1PA0

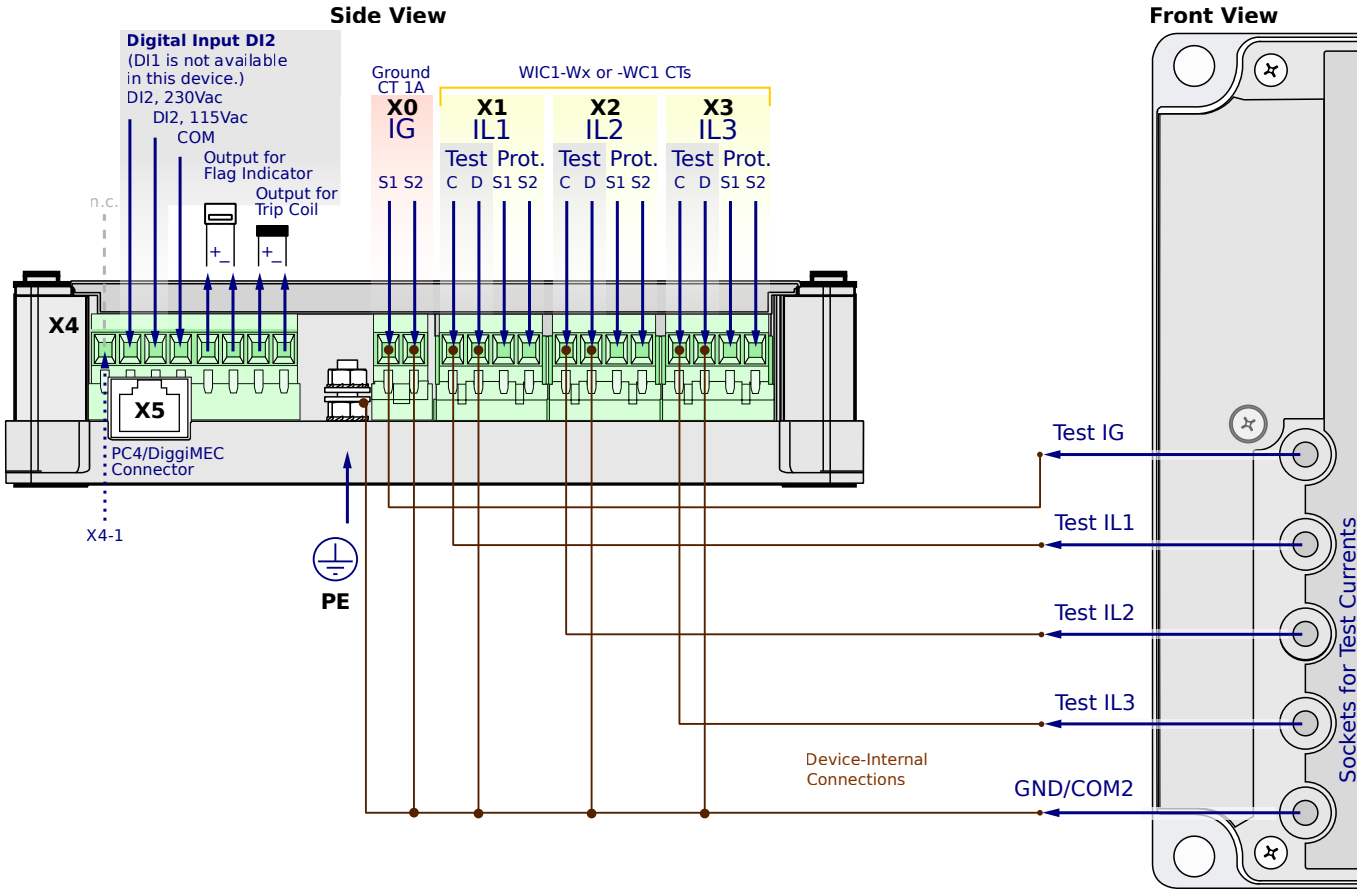


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC1PAH

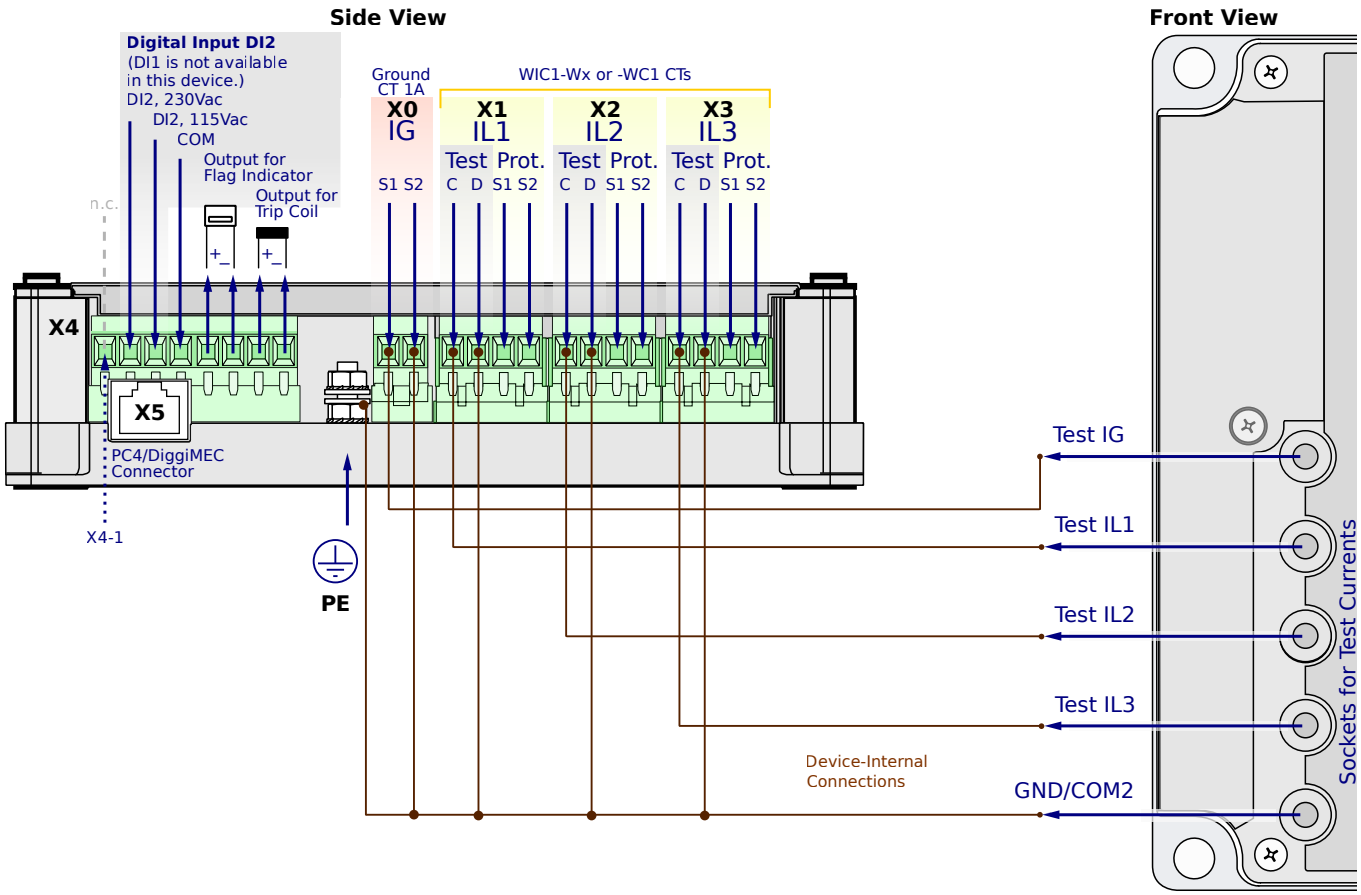


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2SA0

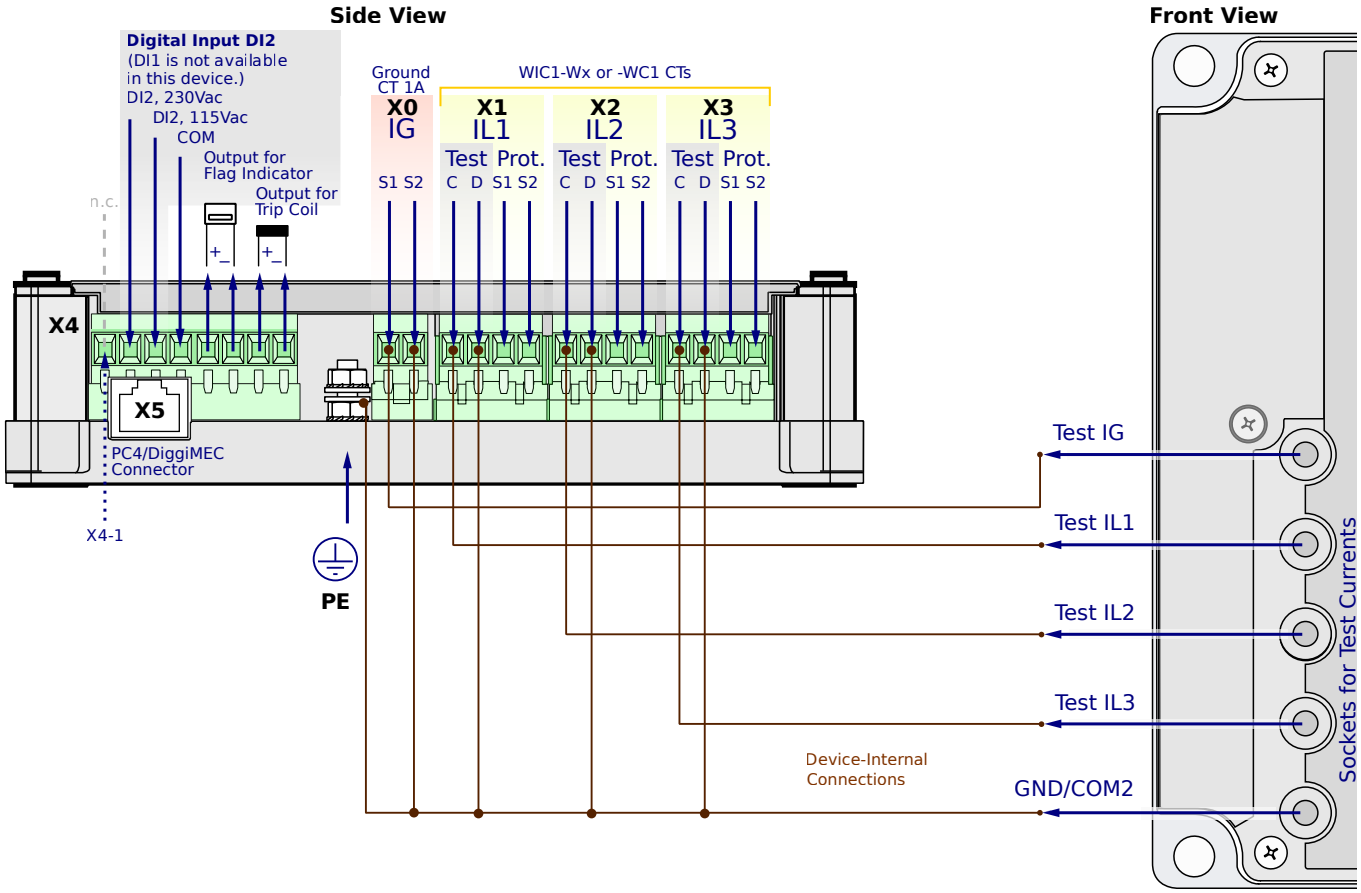


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2SAH

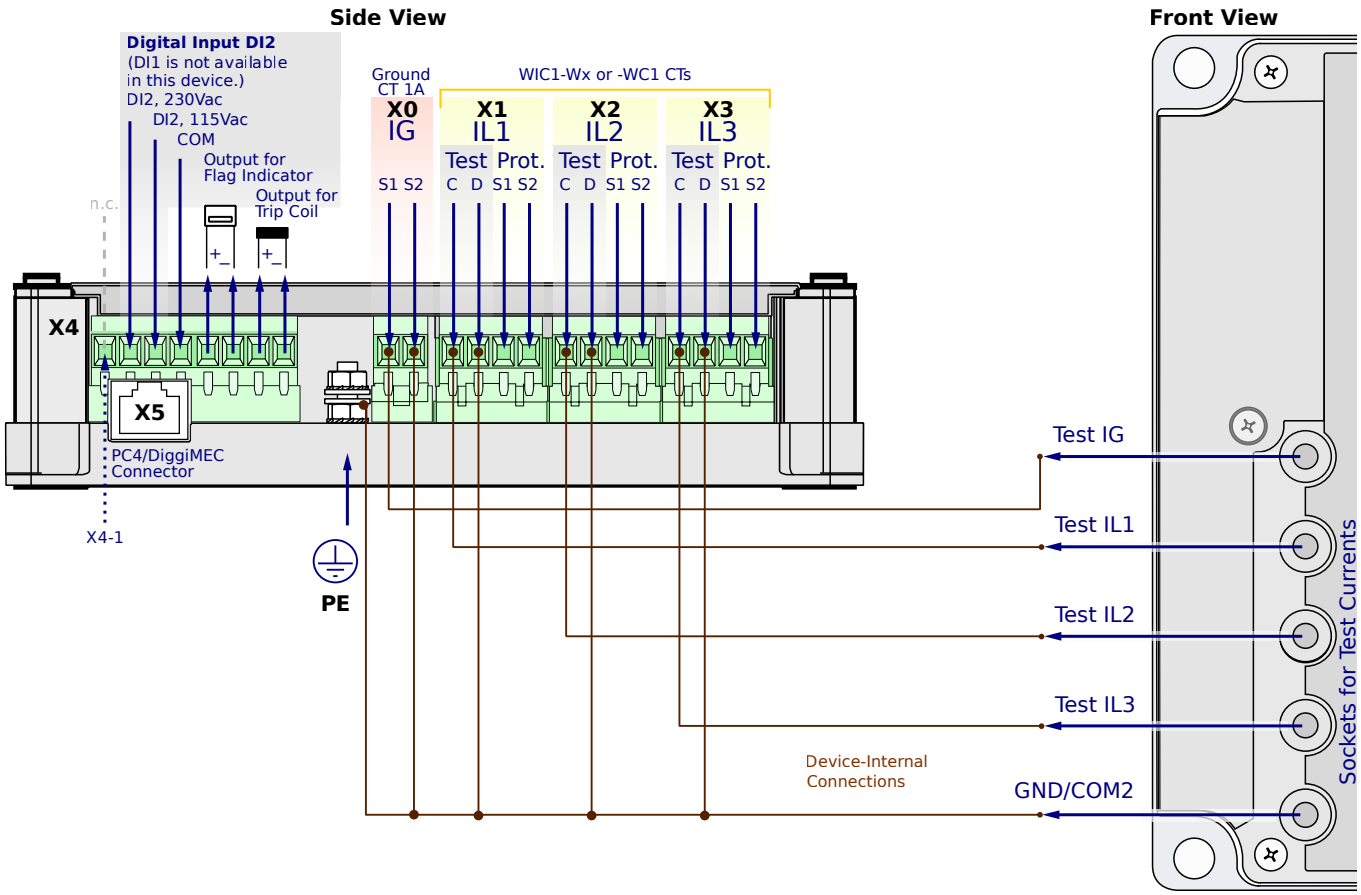


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2AA0

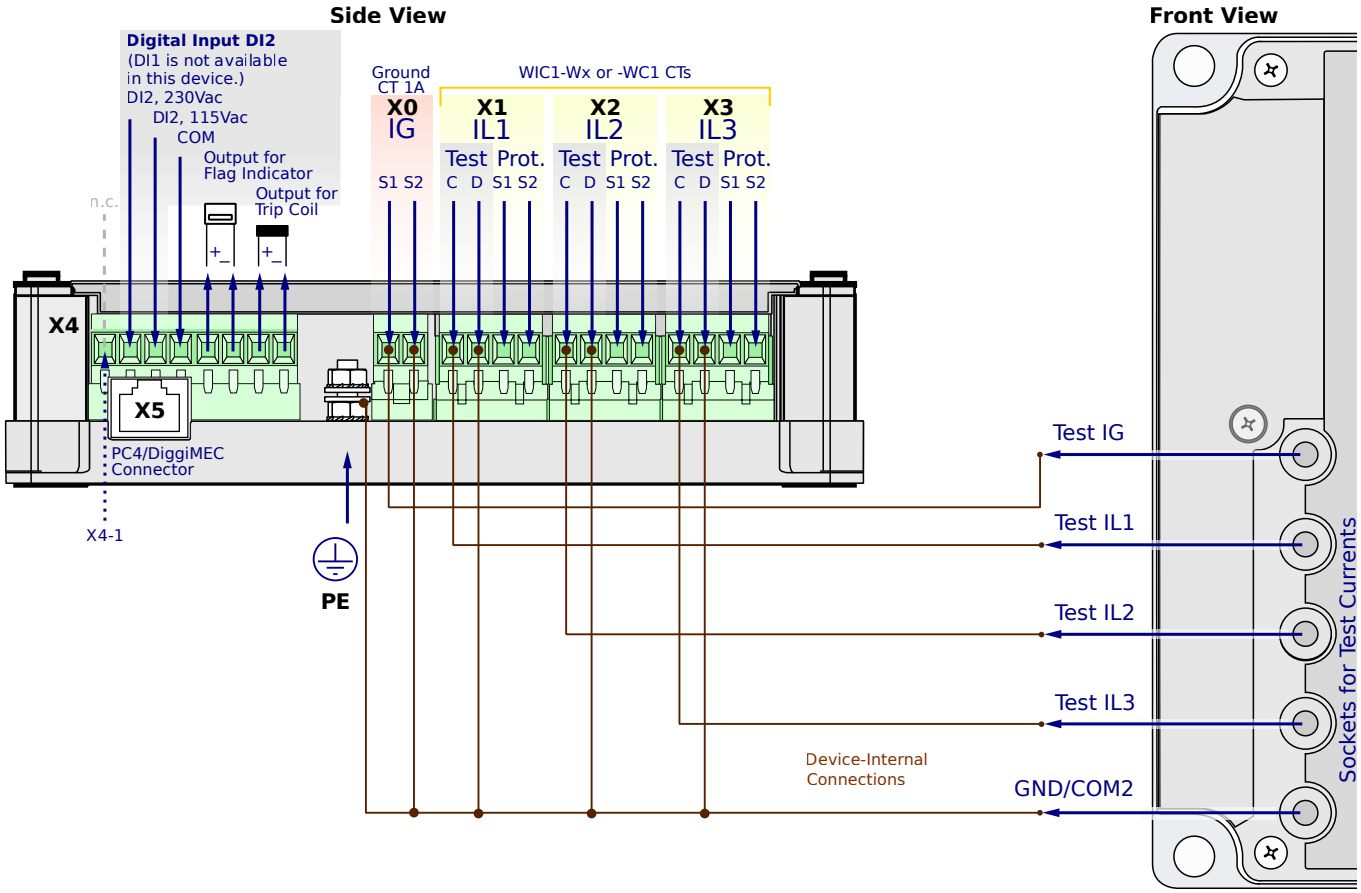


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2AAH

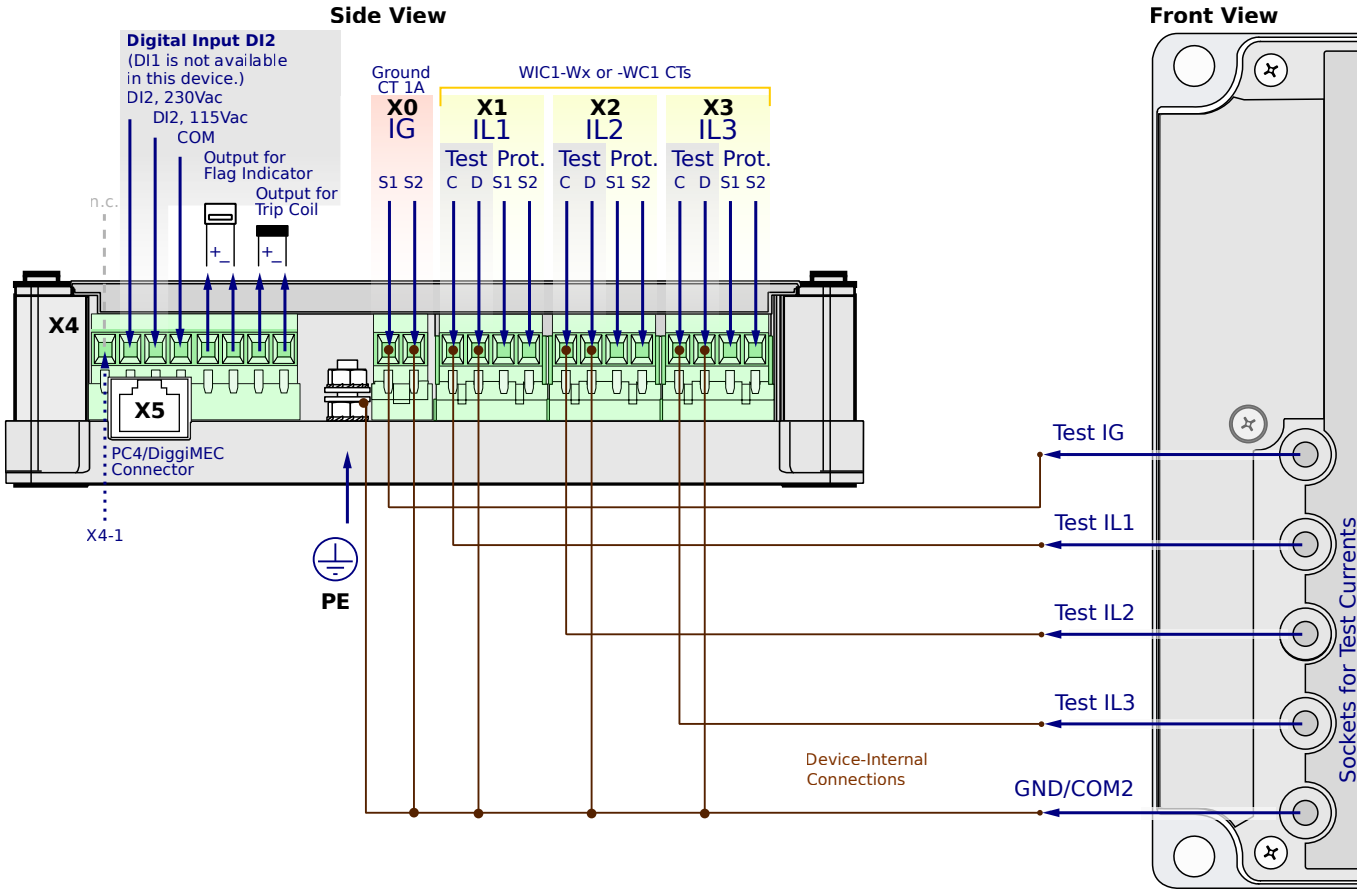


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2PA0

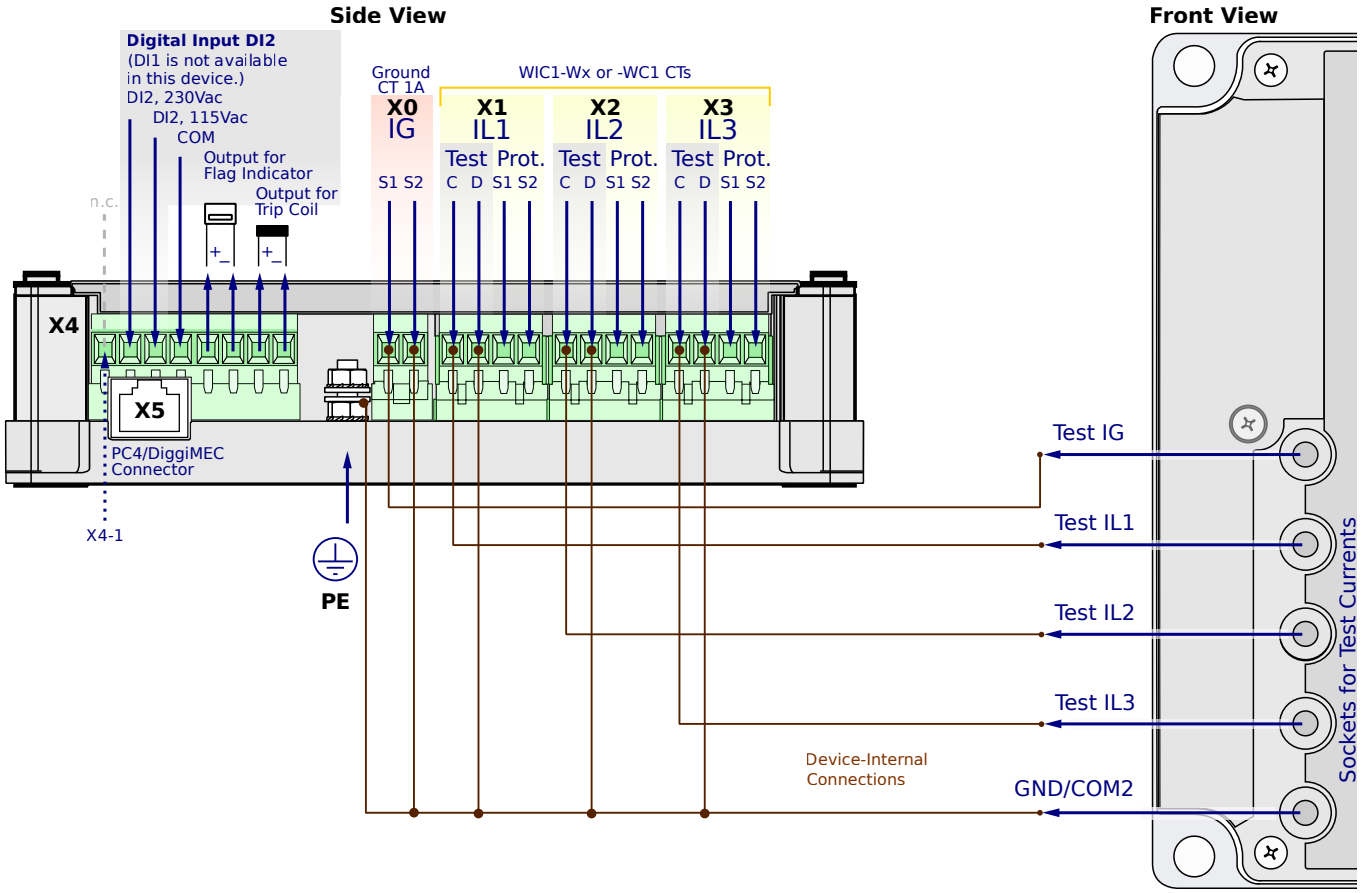


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6FC2PAH

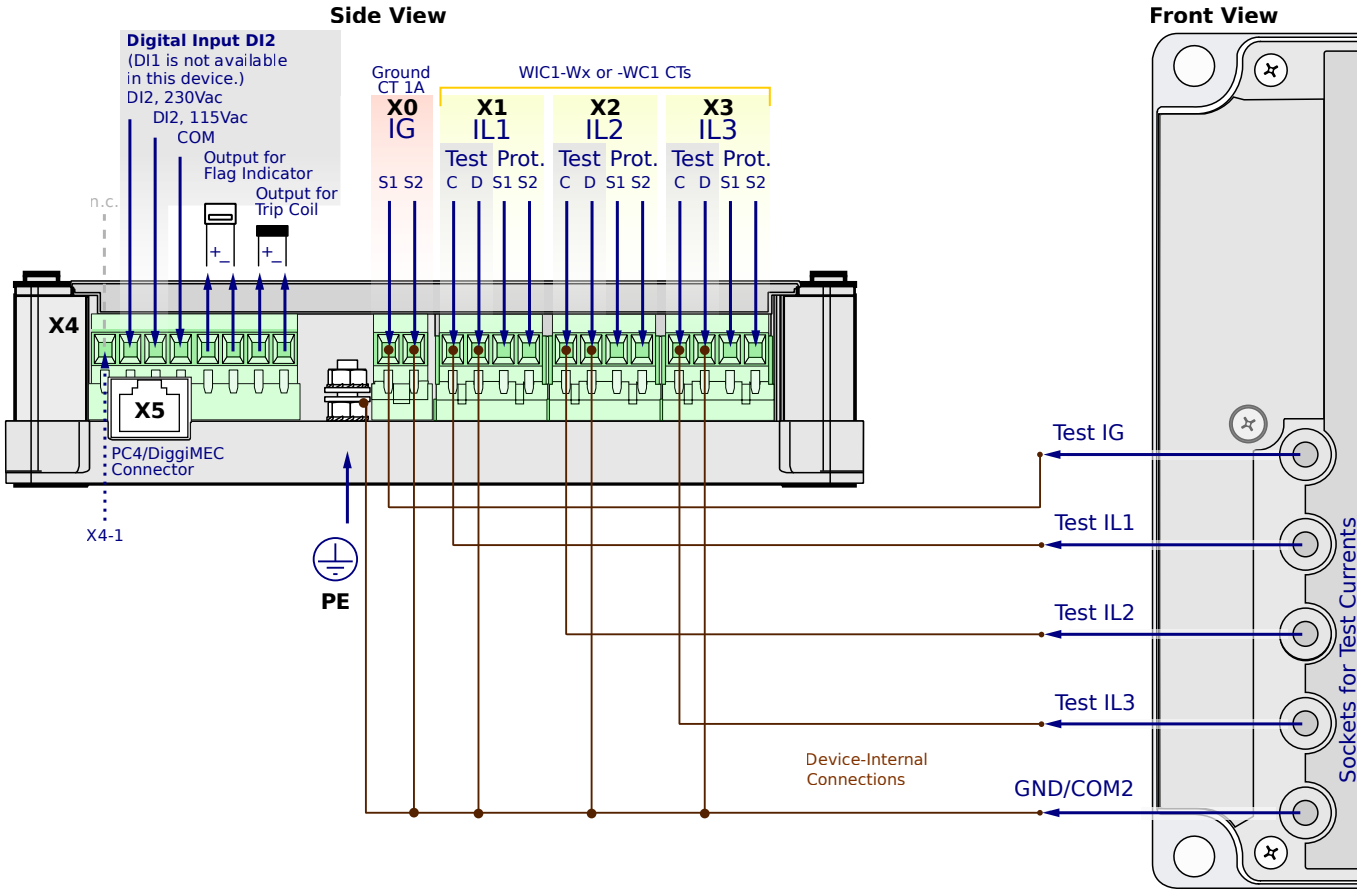


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1SA0

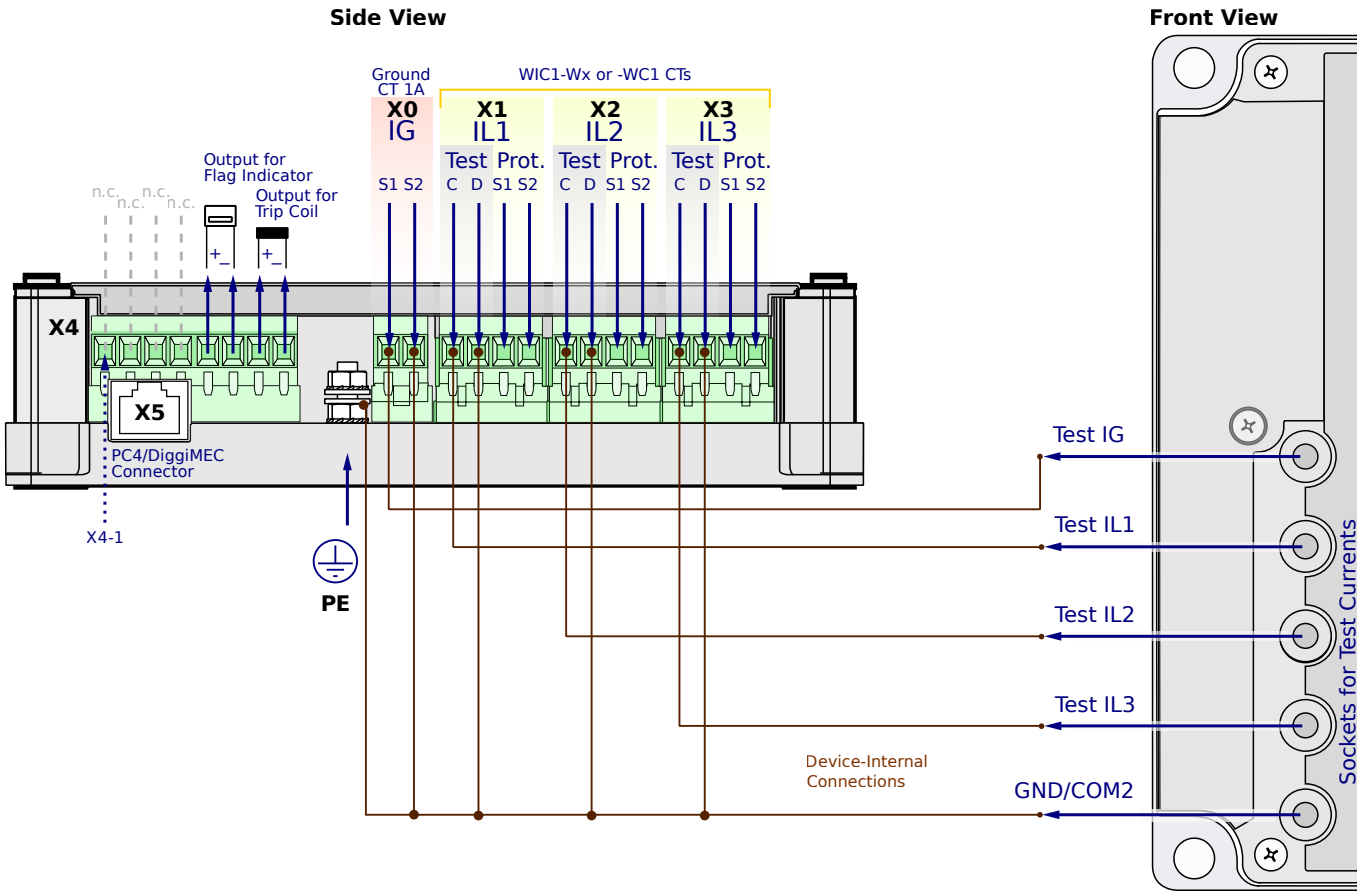


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1SAH

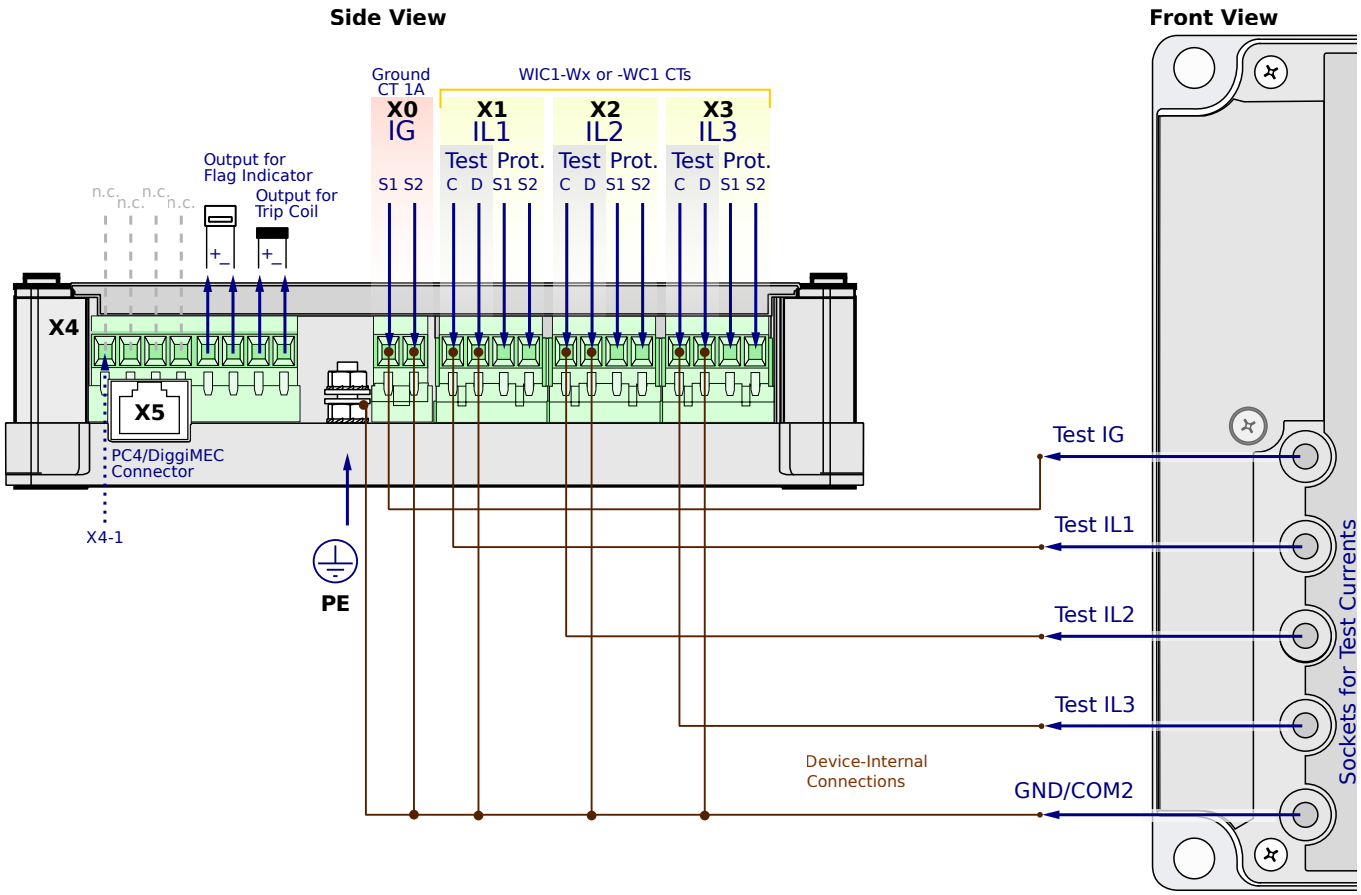


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1AA0

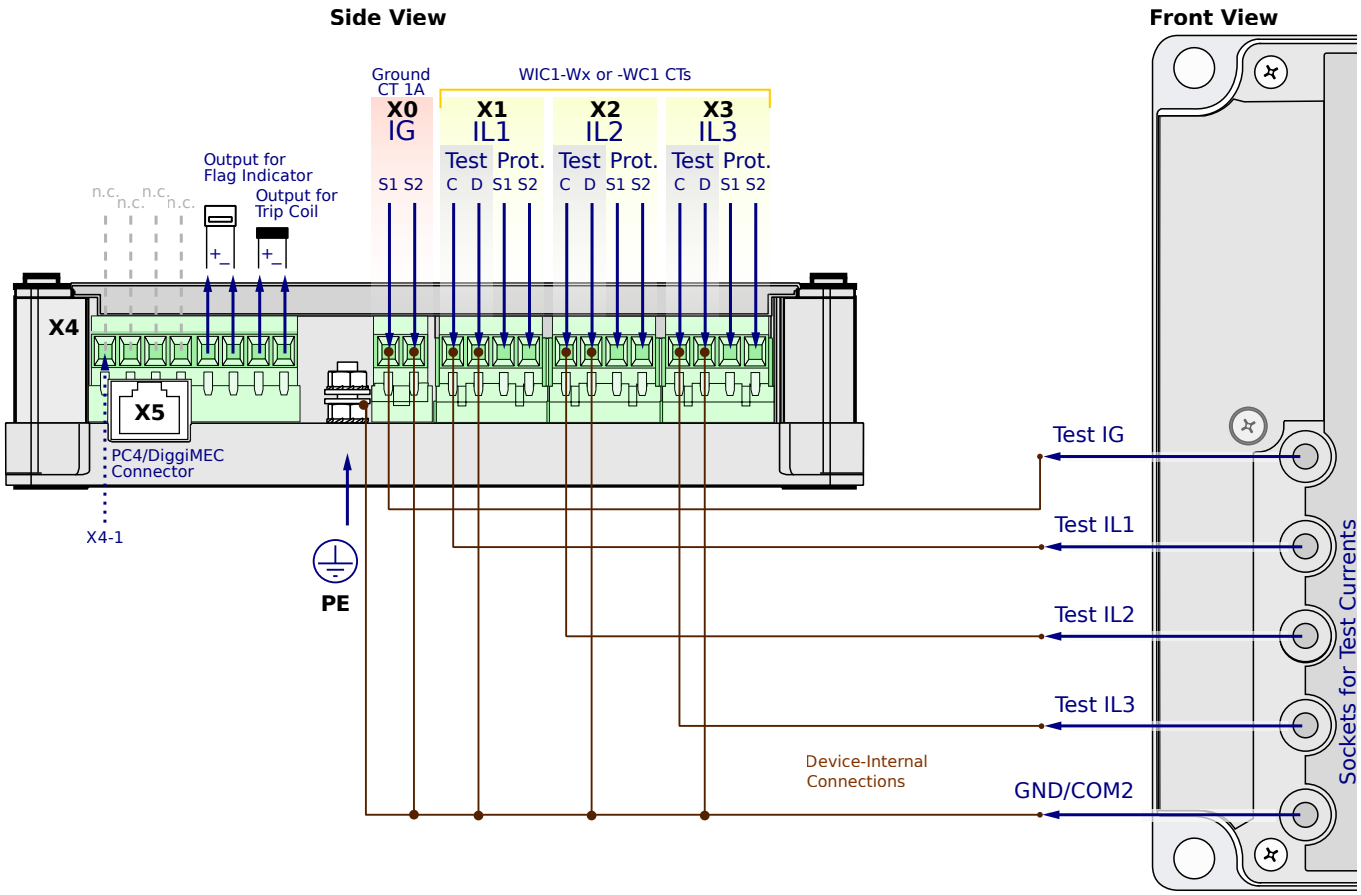


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1AAH

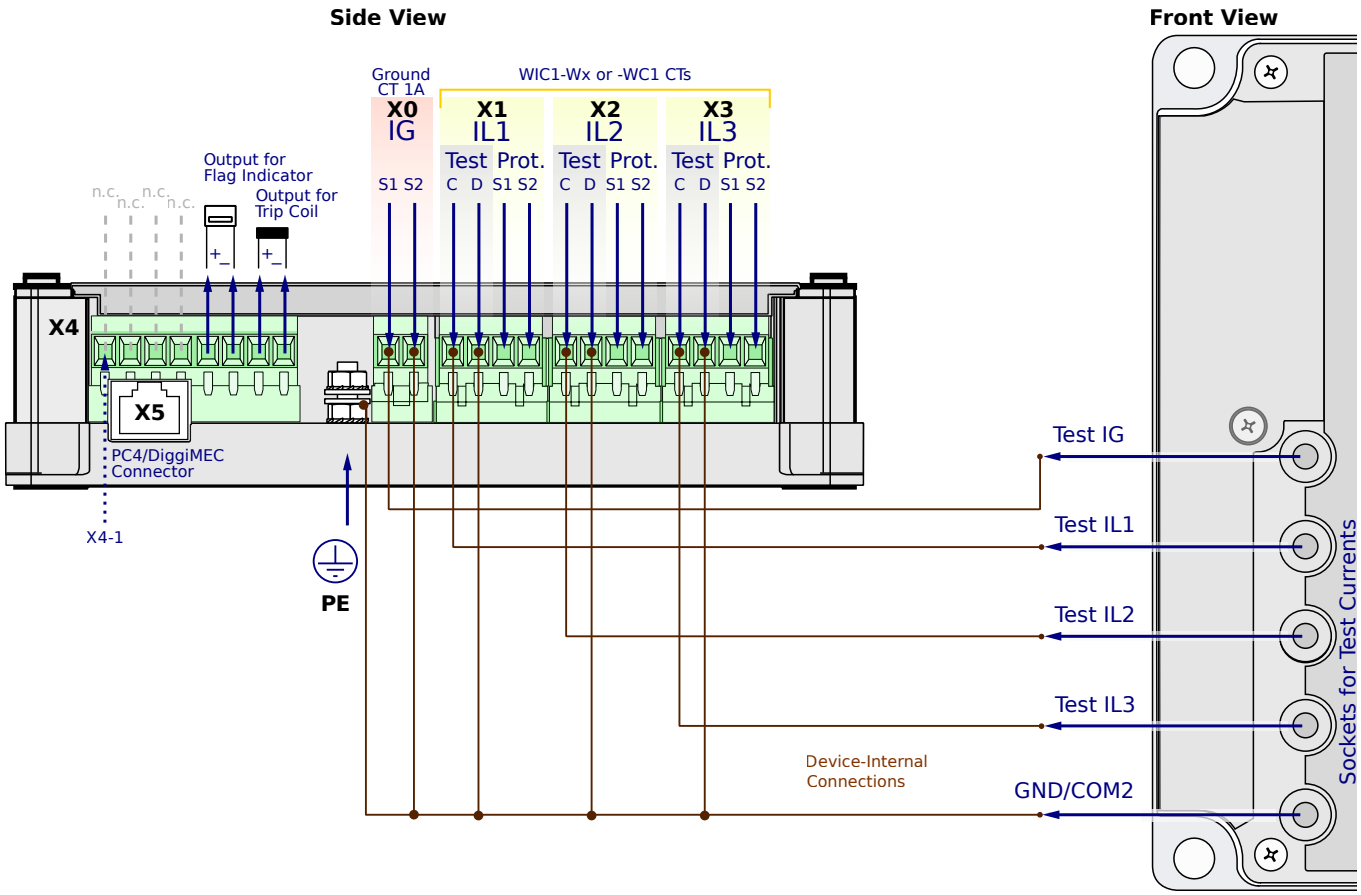


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1PA0

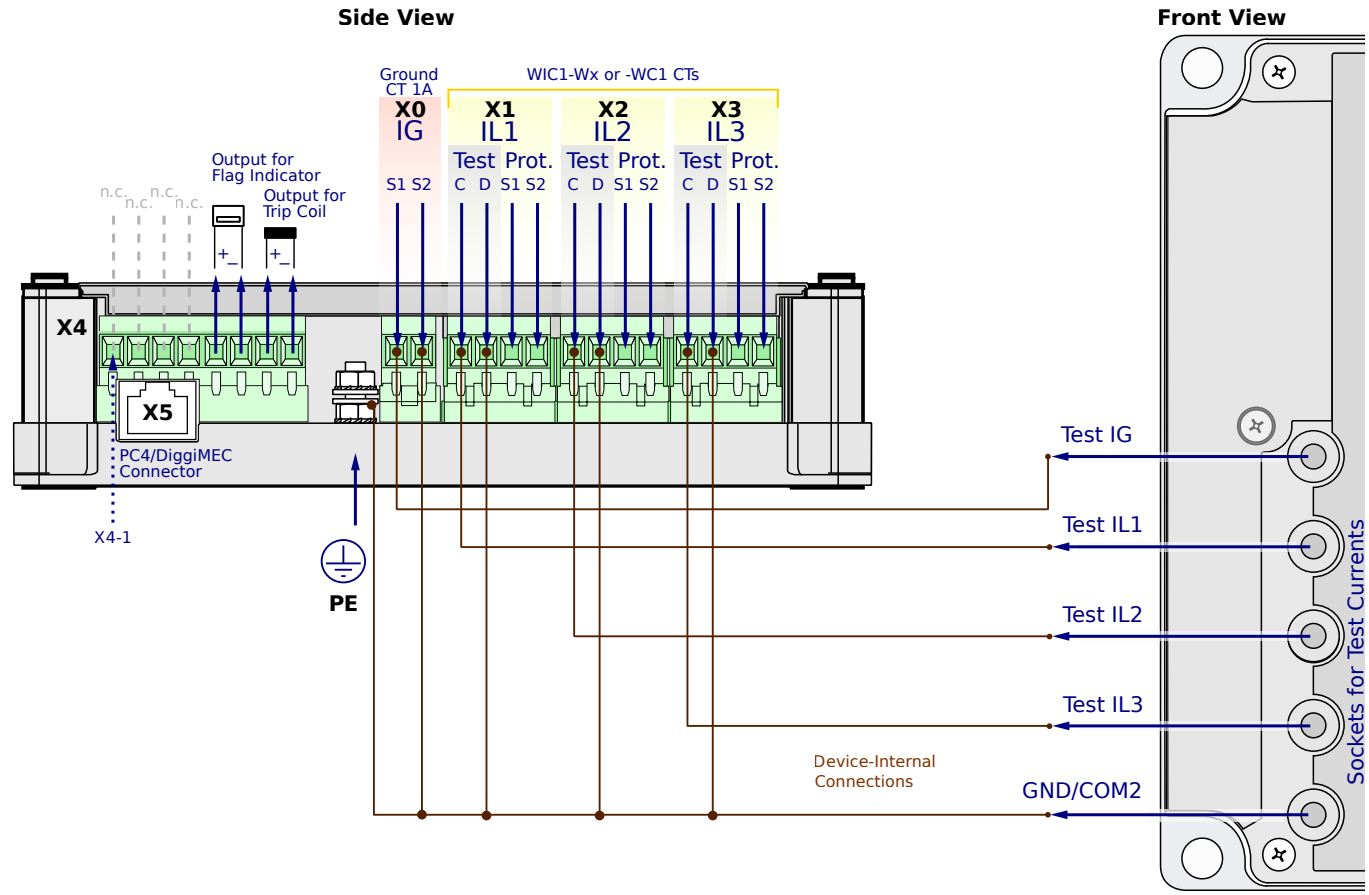


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN1PAH

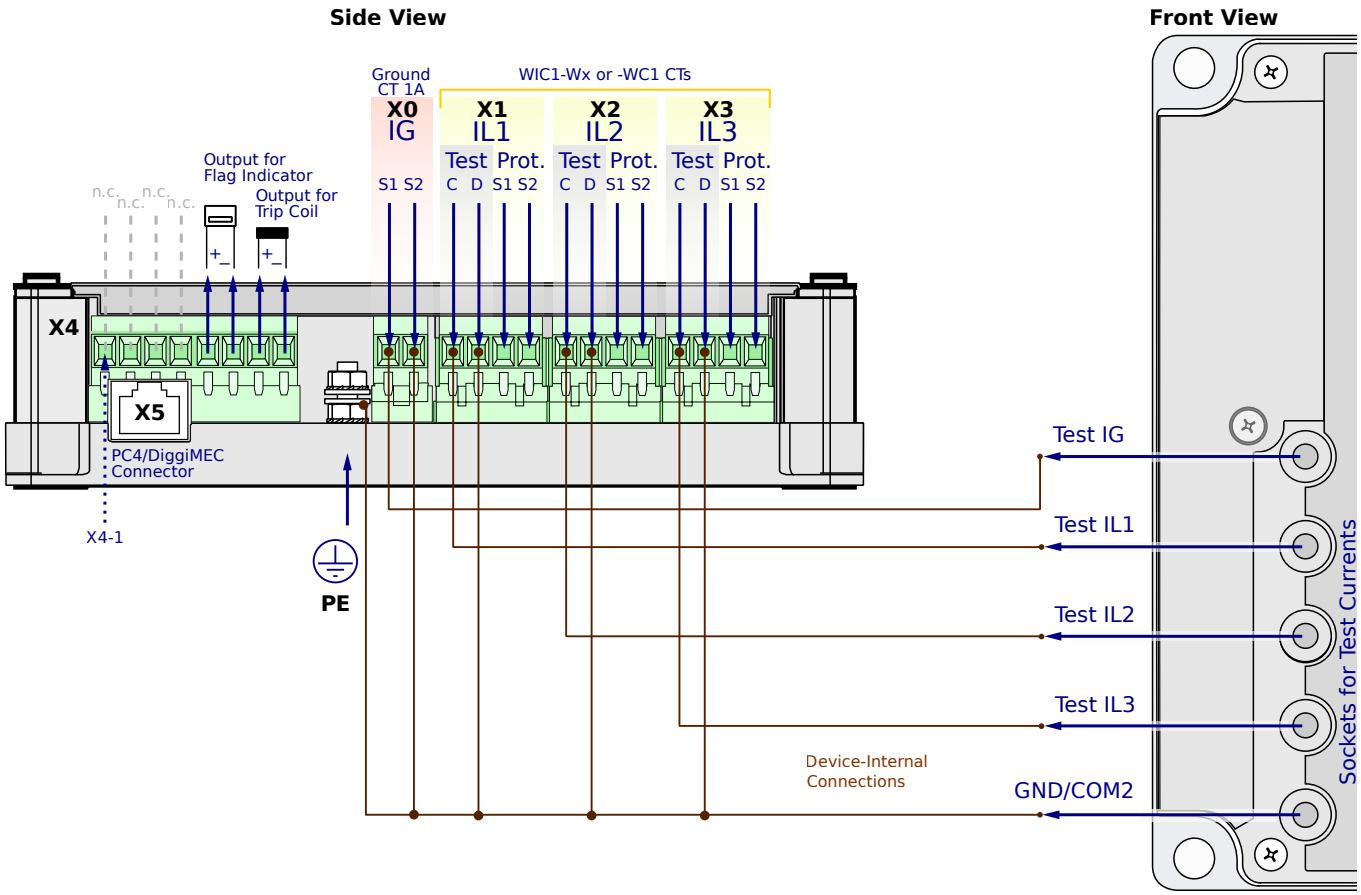


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2SA0

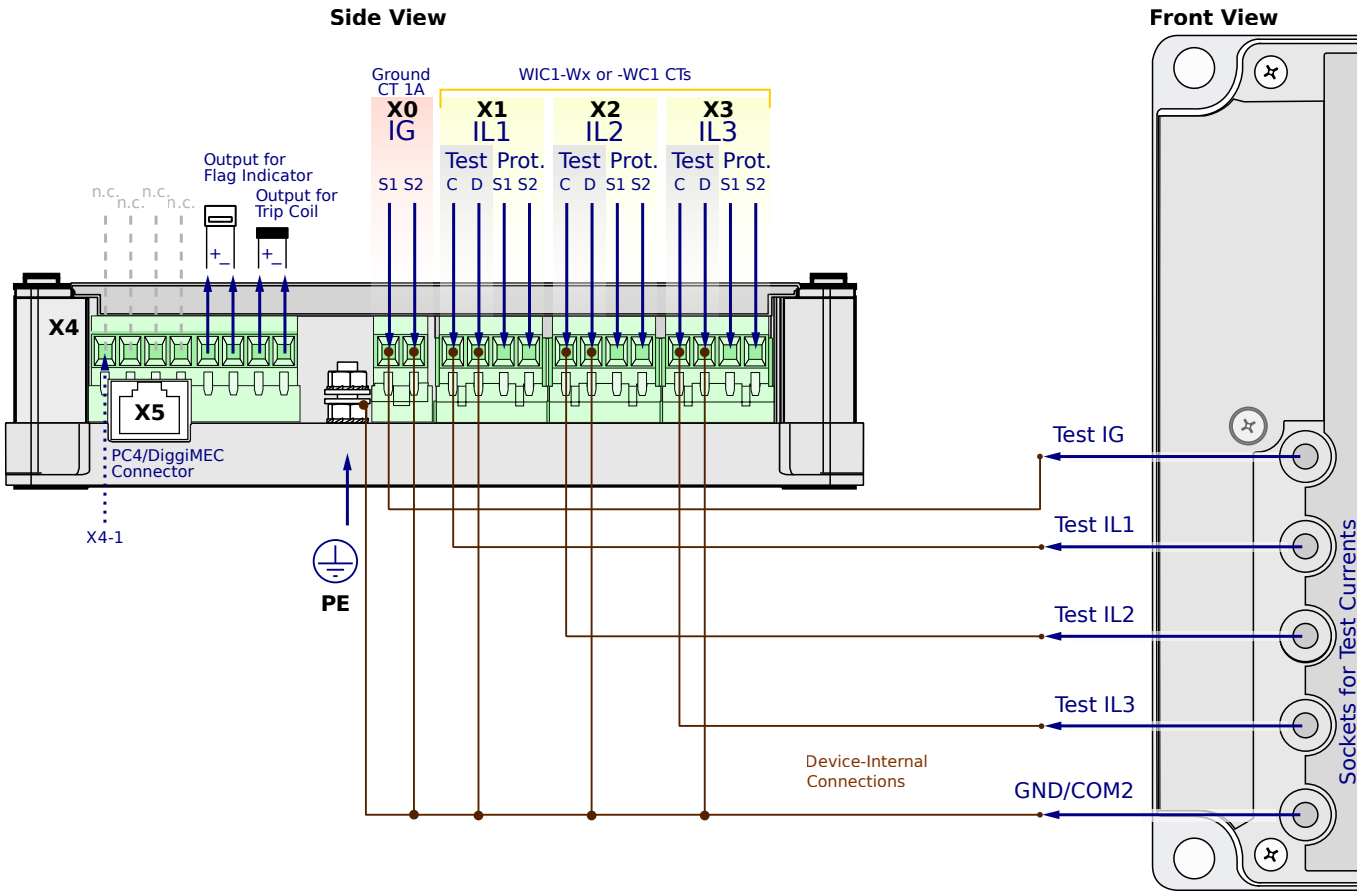


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2SAH

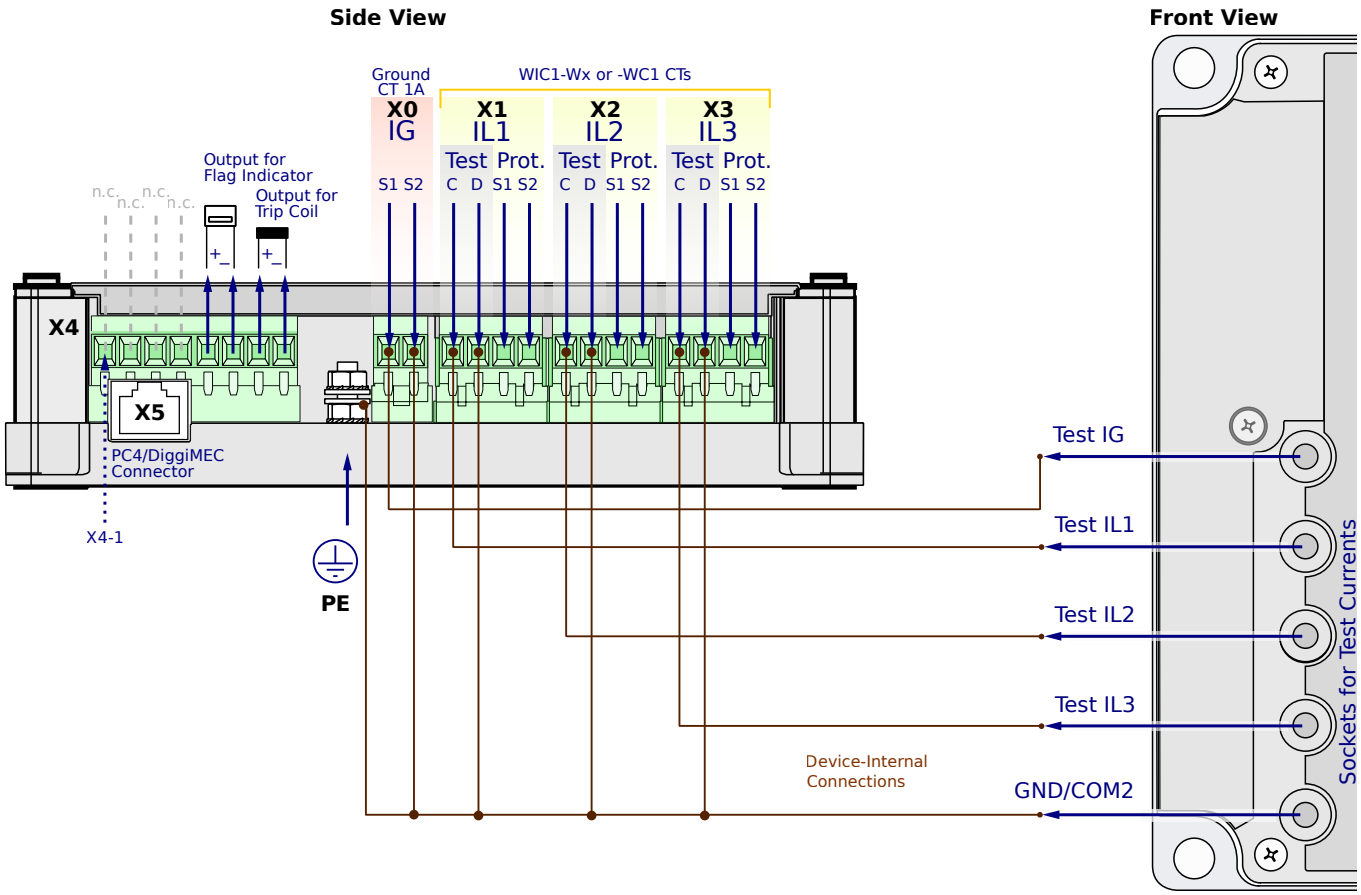


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2AA0

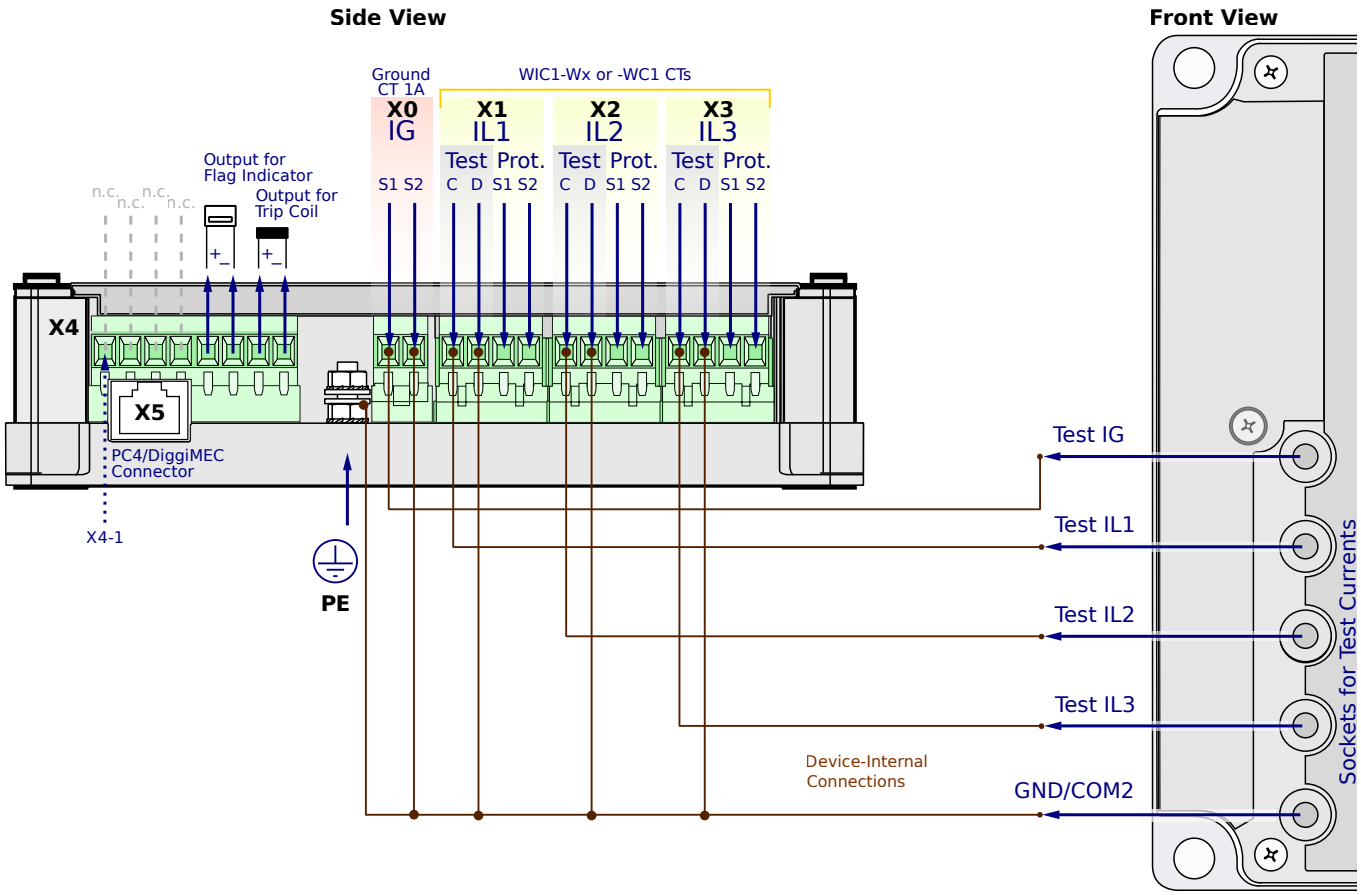


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2AAH

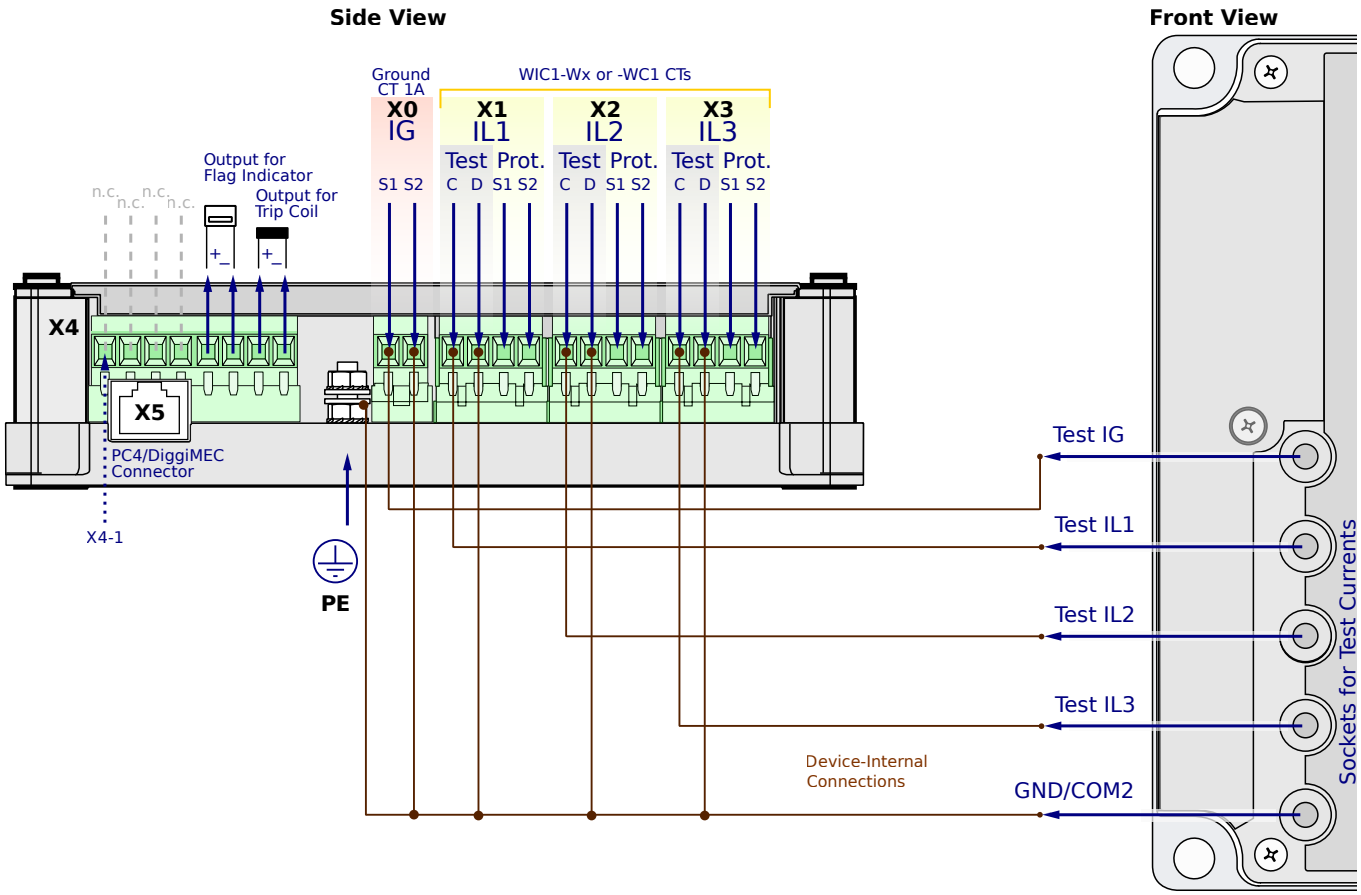


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2PA0

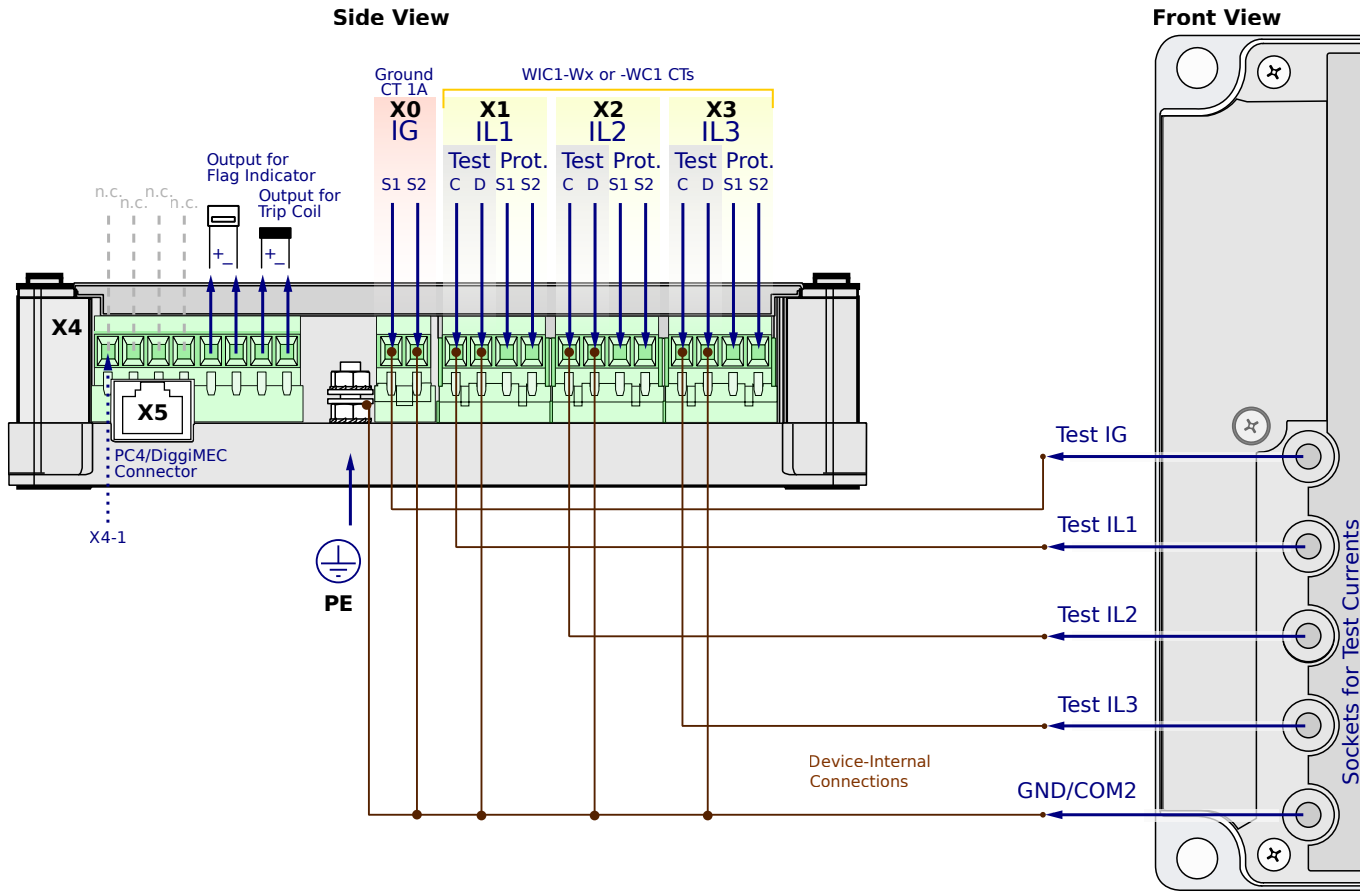


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CN2PAH

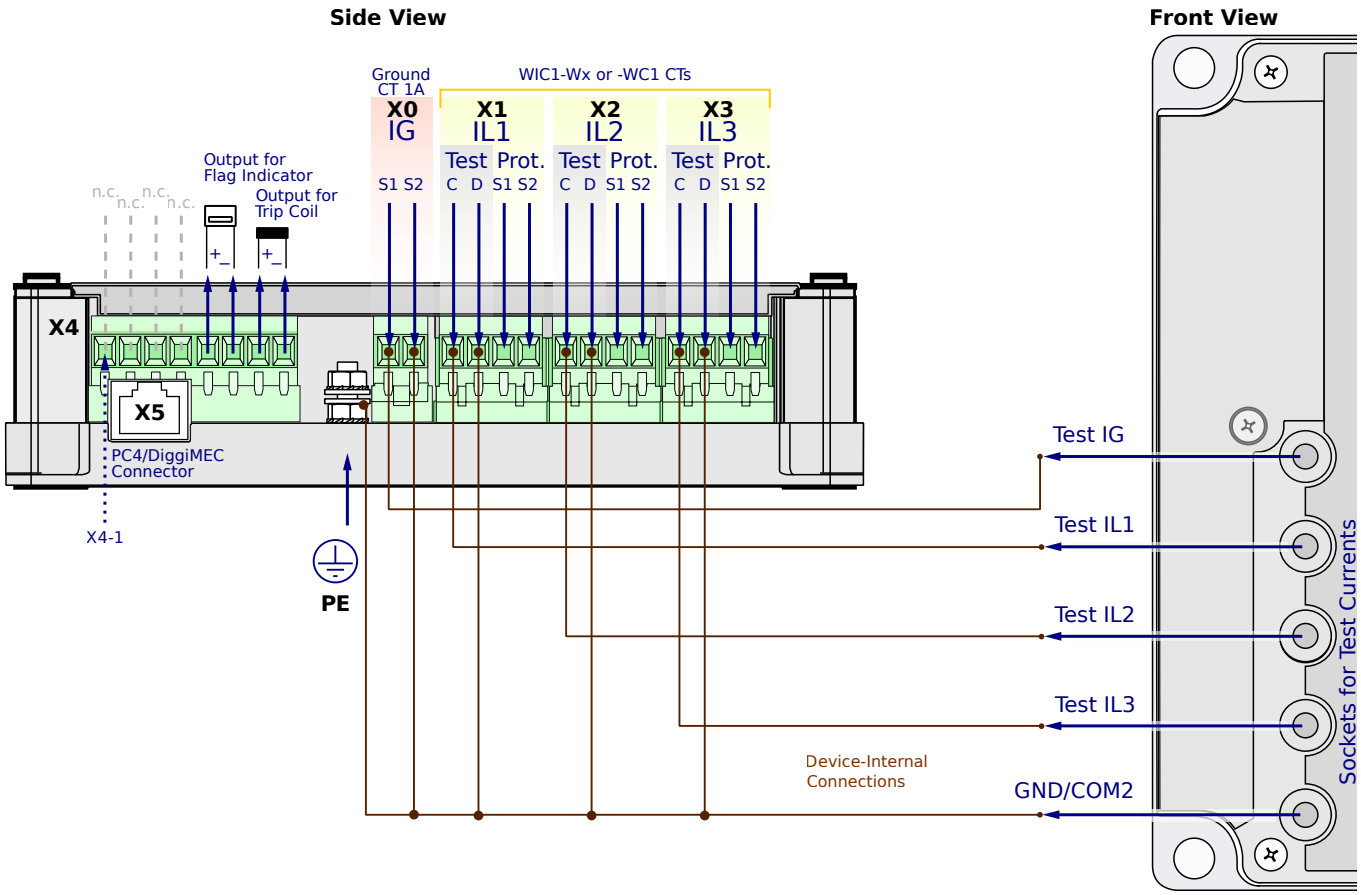


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1SA0

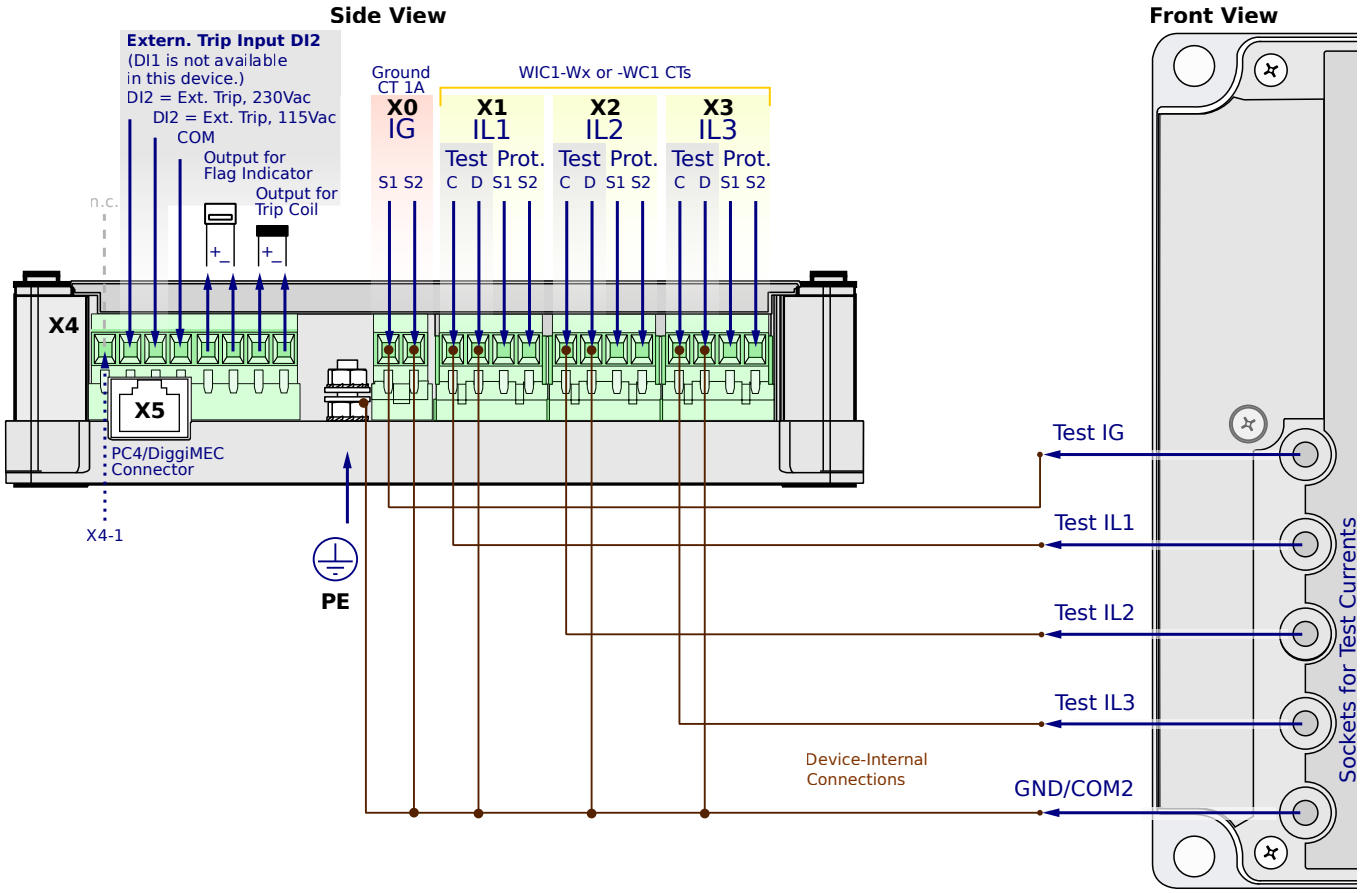


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1SAH

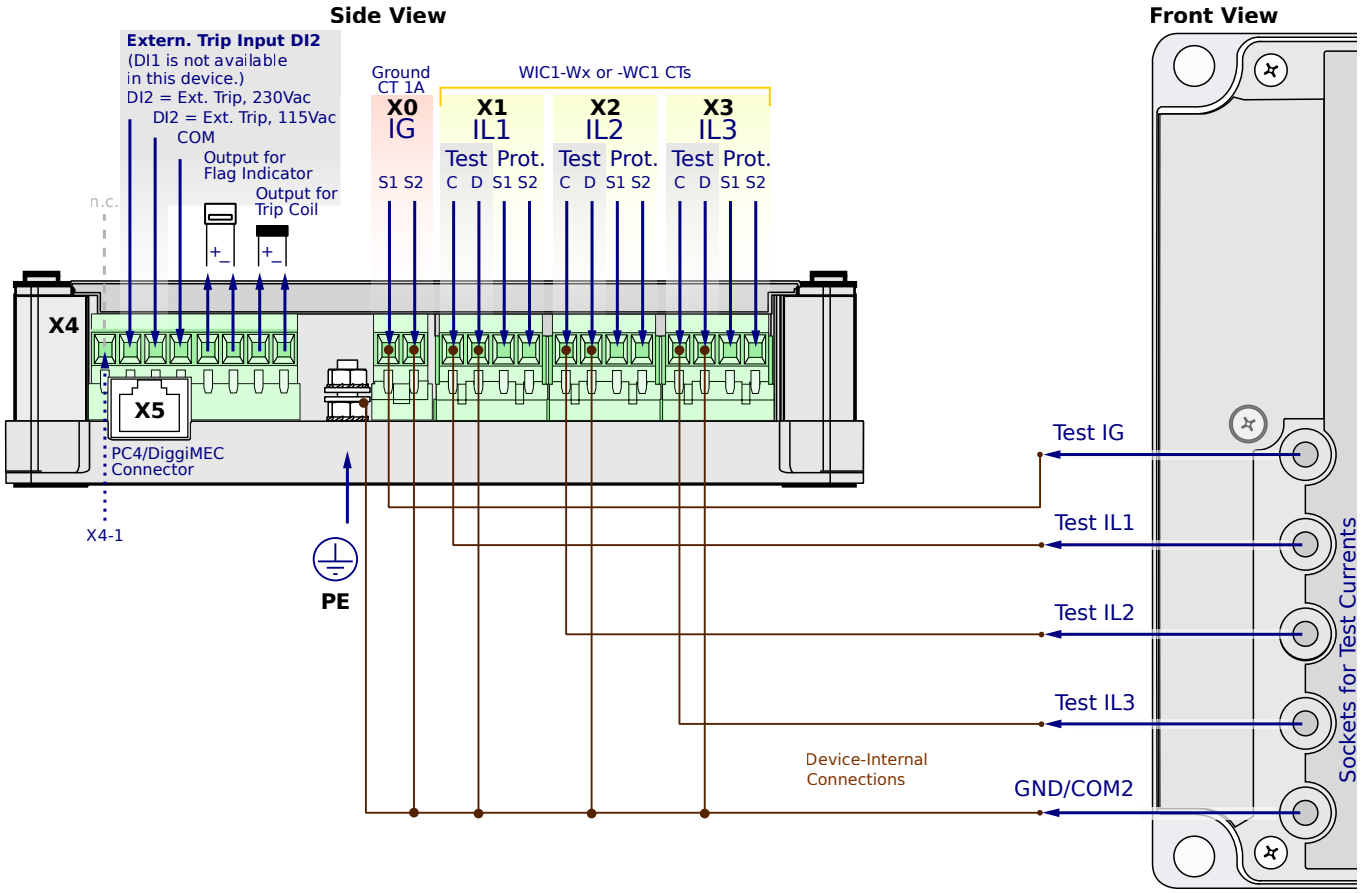


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1AA0

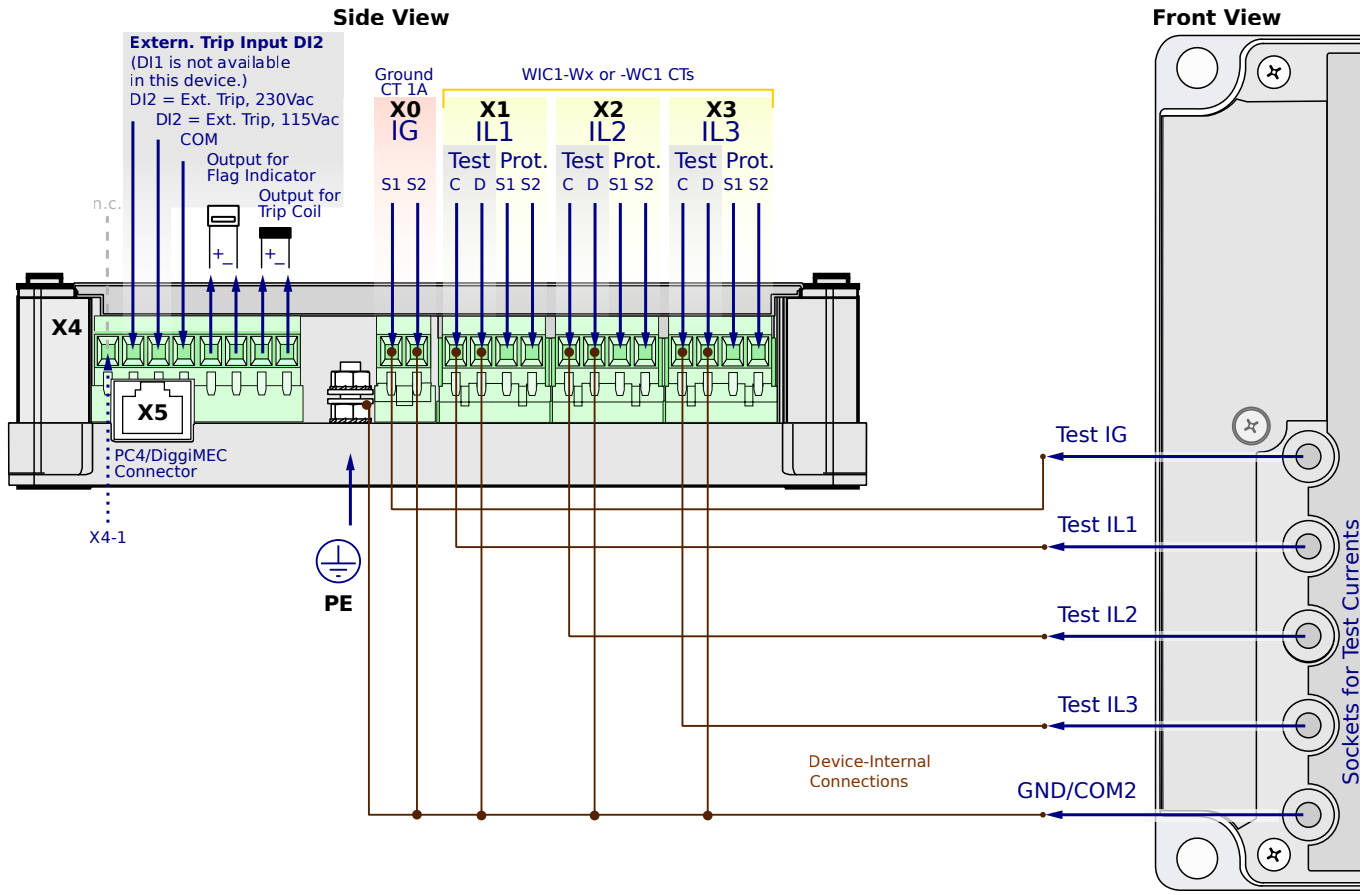


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1AAH

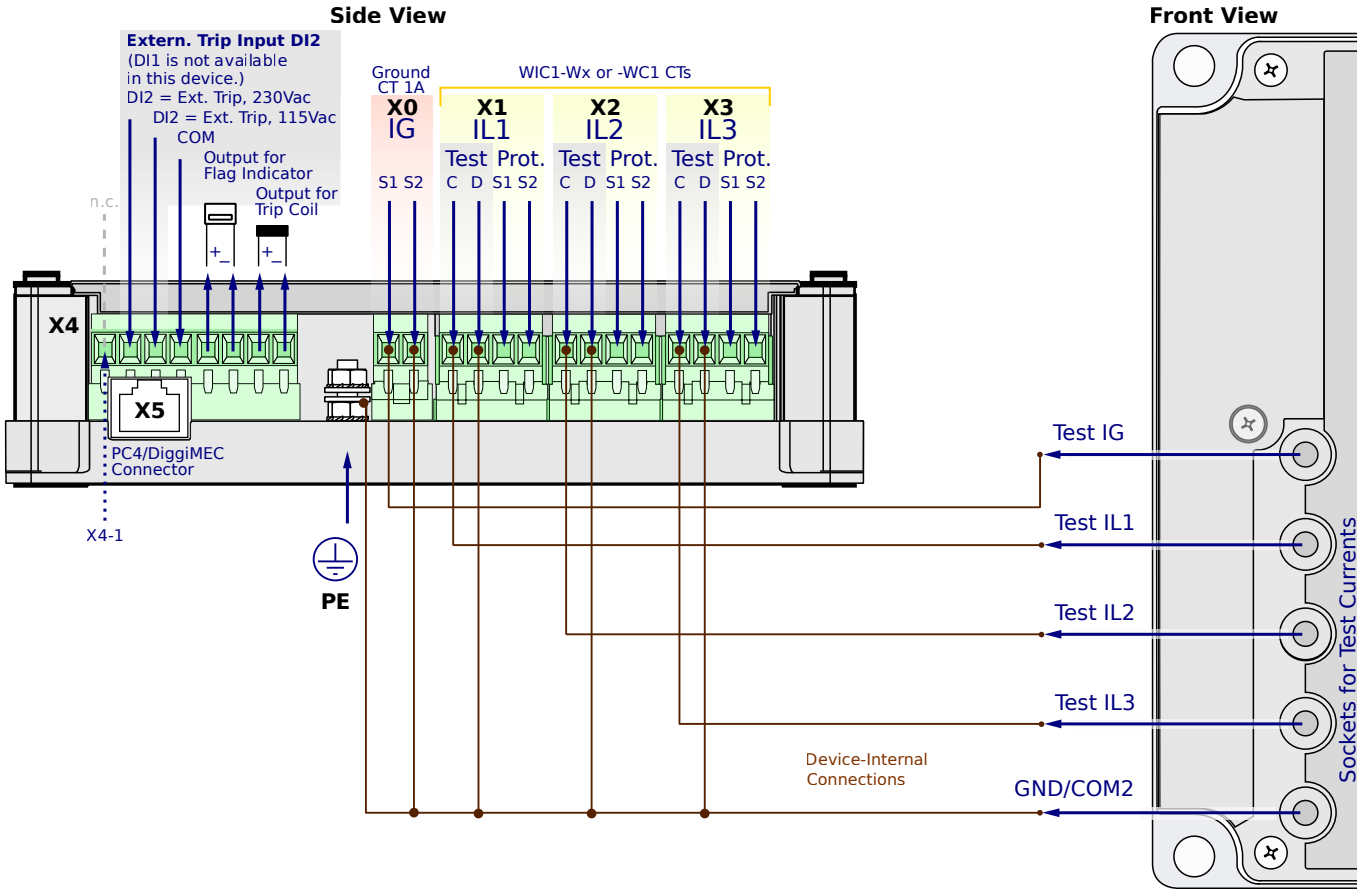


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1PA0

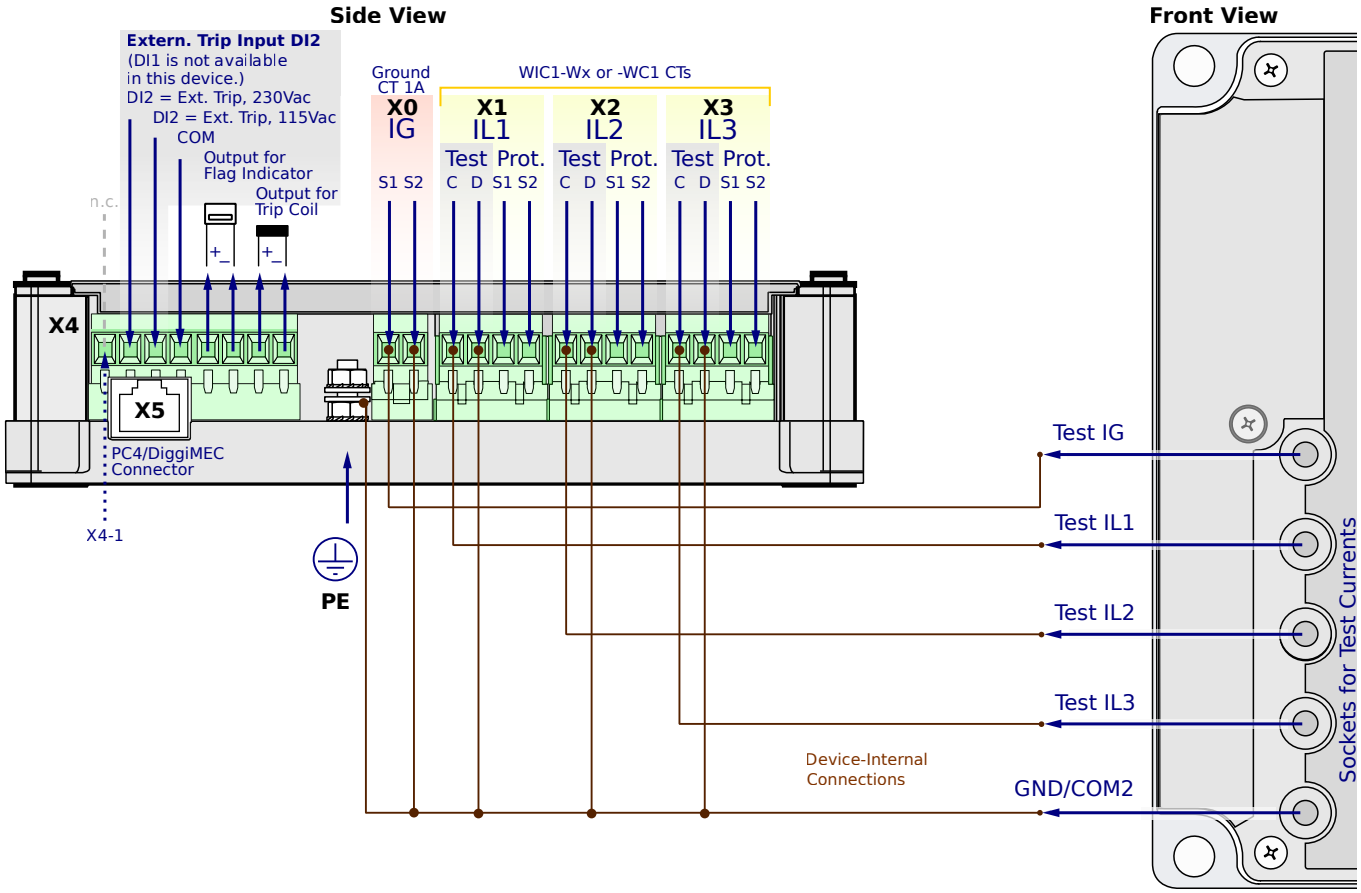


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF1PAH

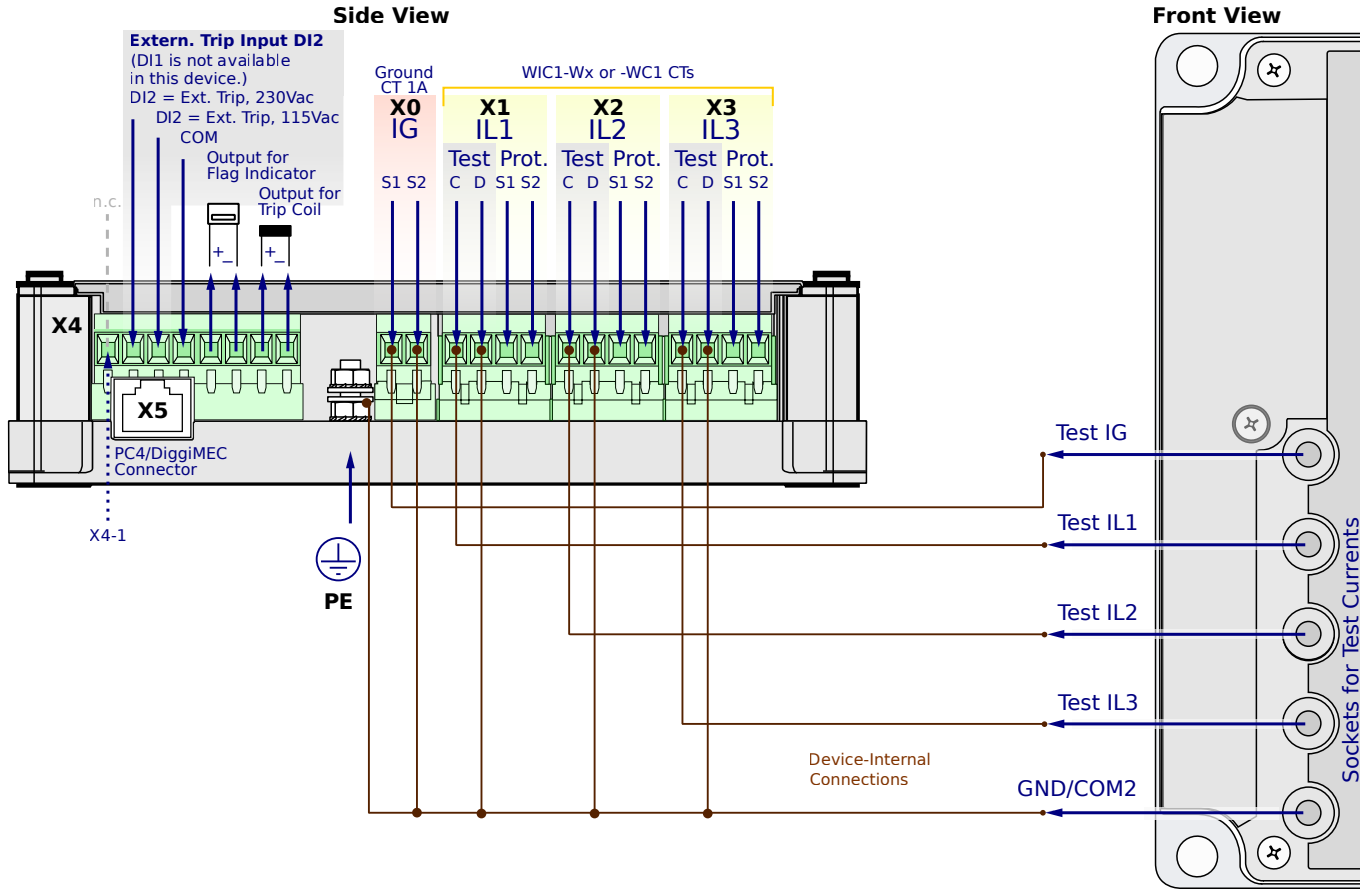


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2SA0

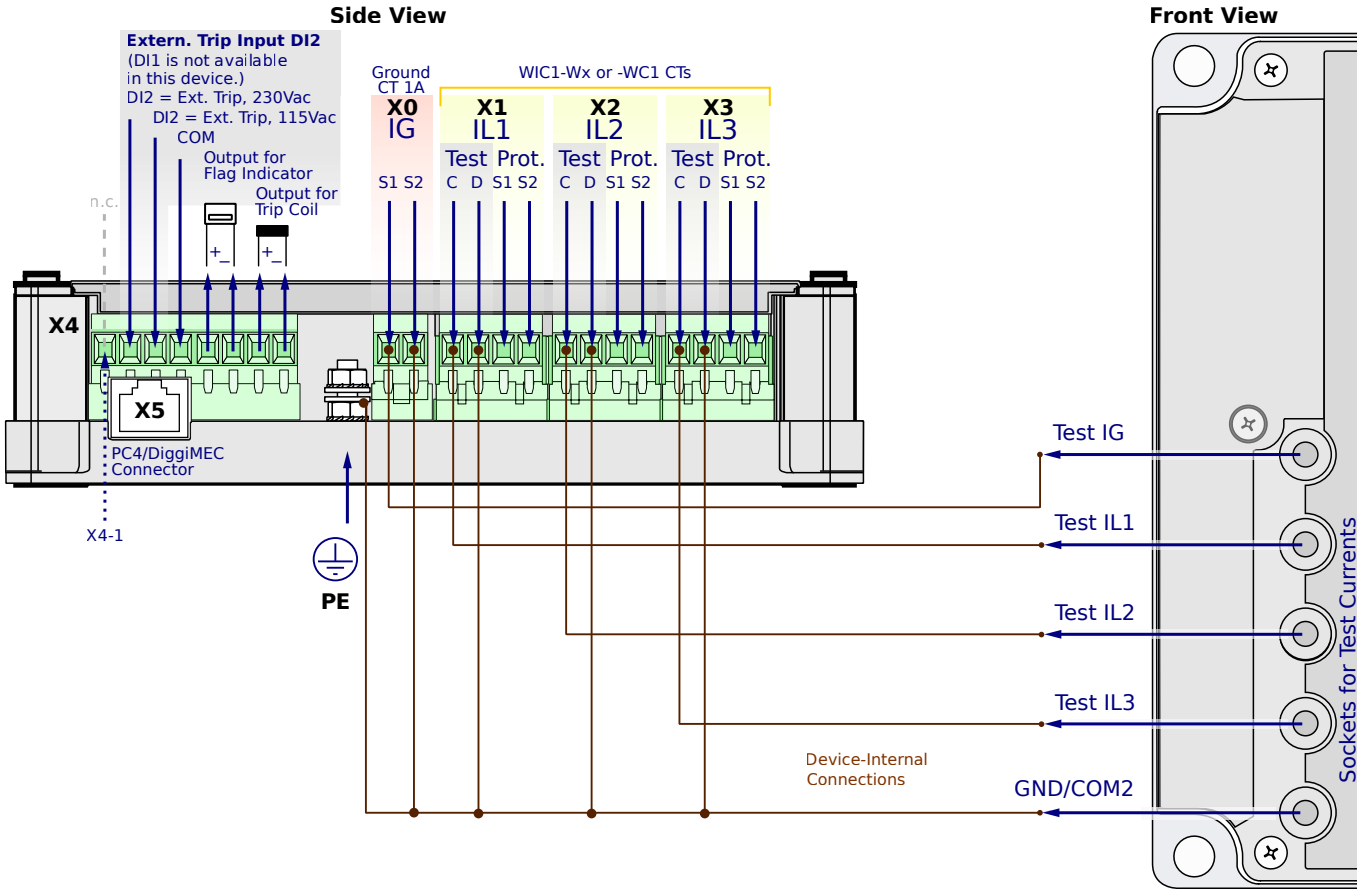


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2SAH

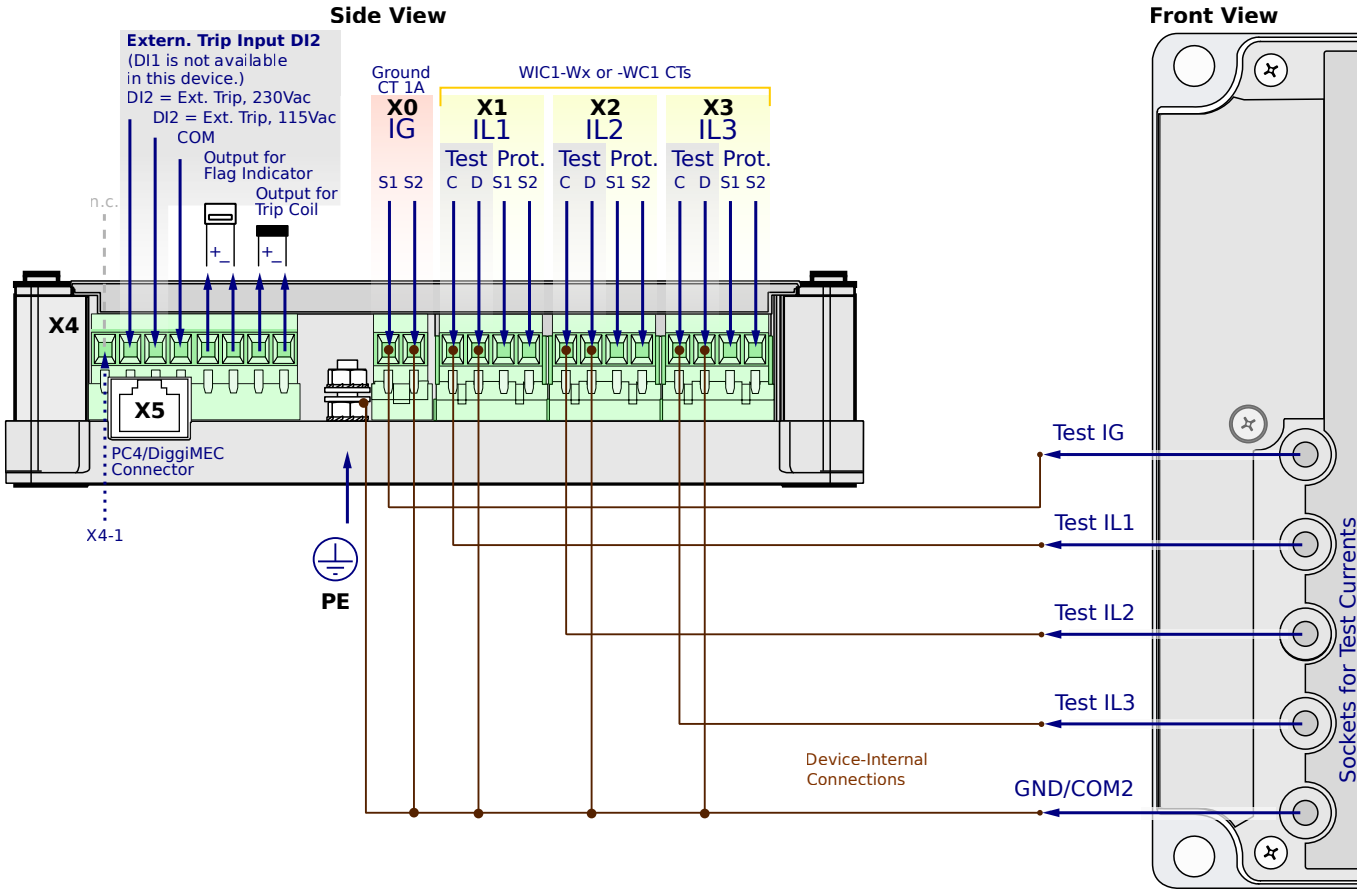


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2AA0

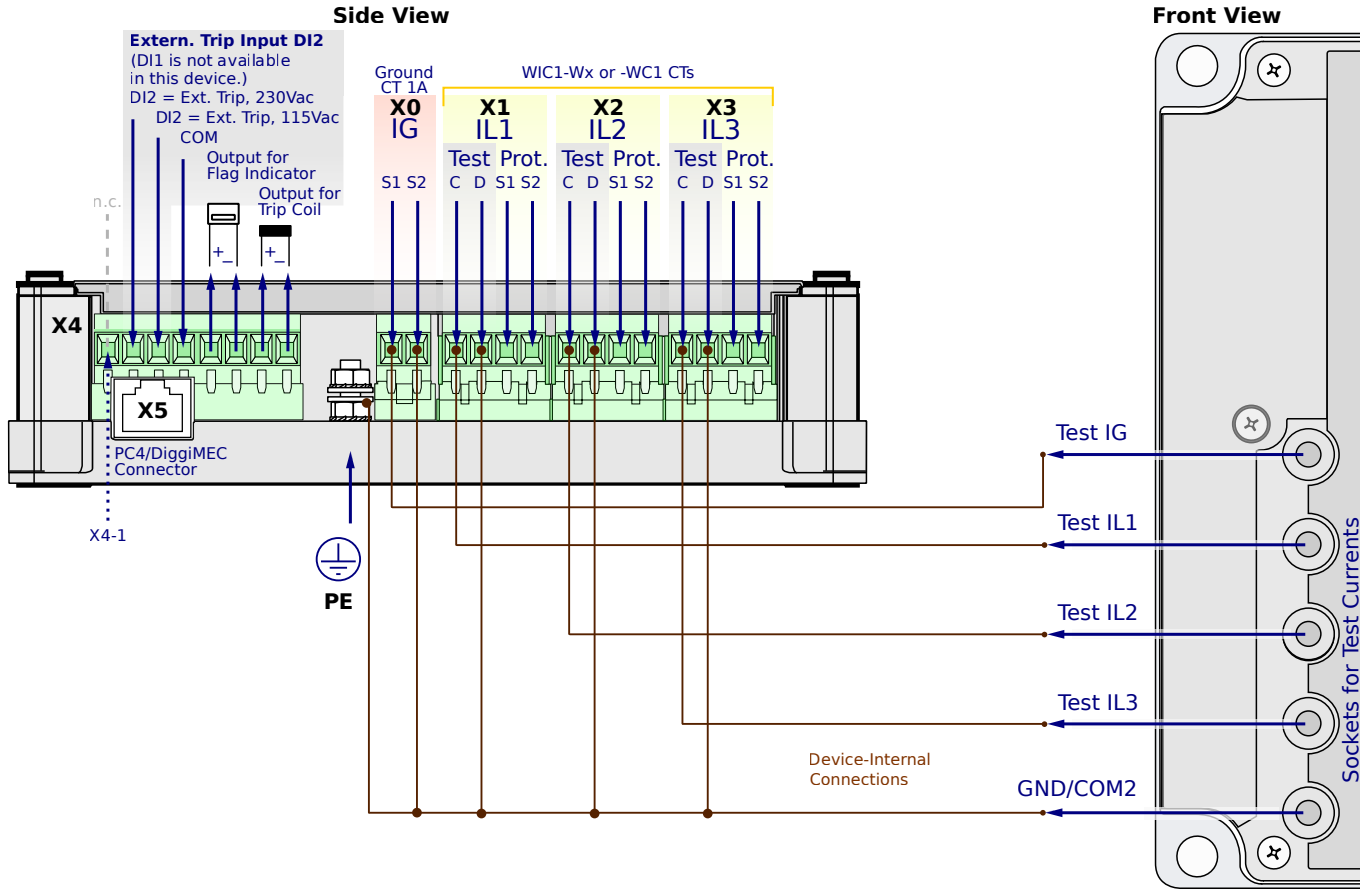


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2AAH

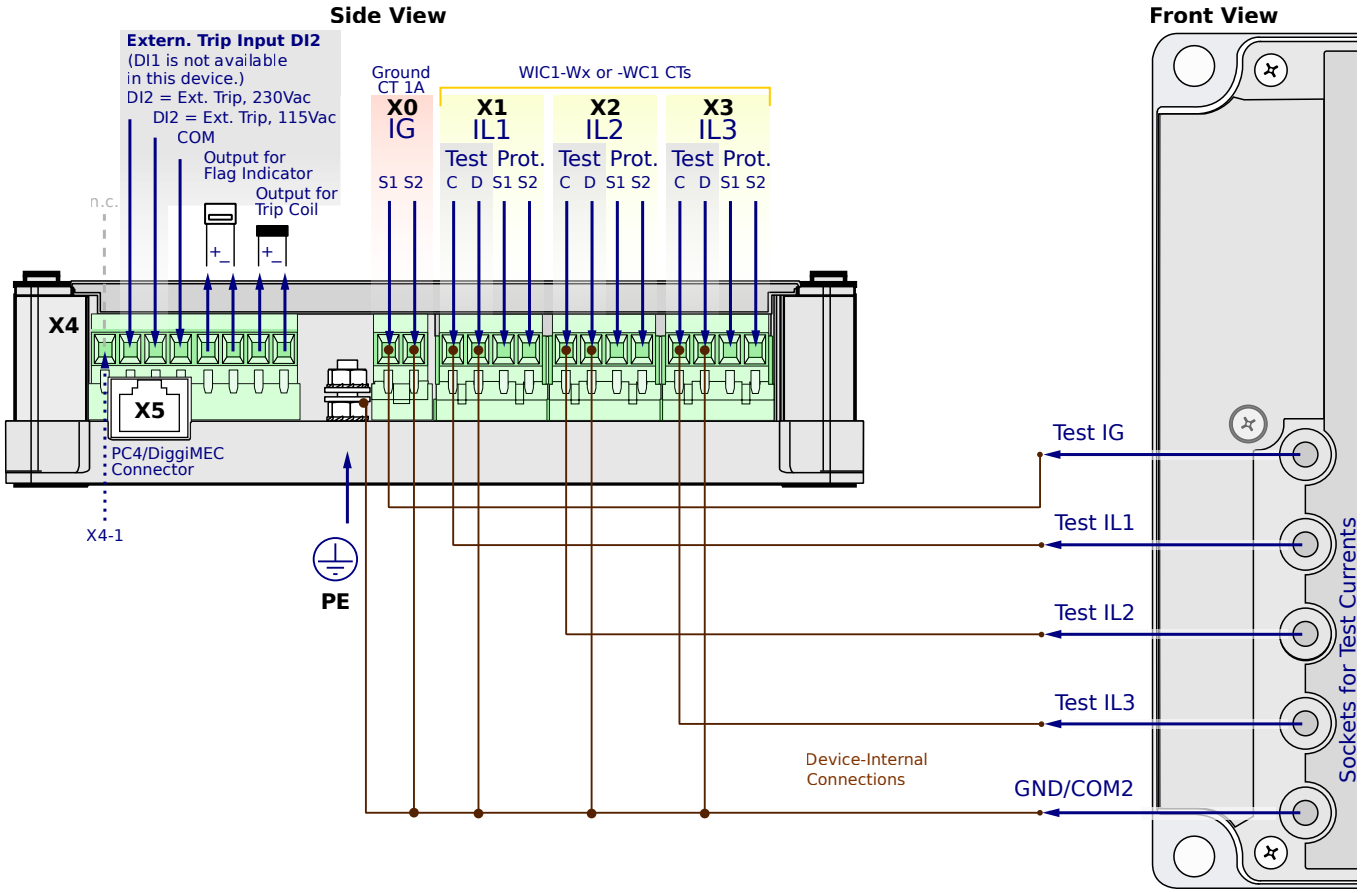


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2PA0

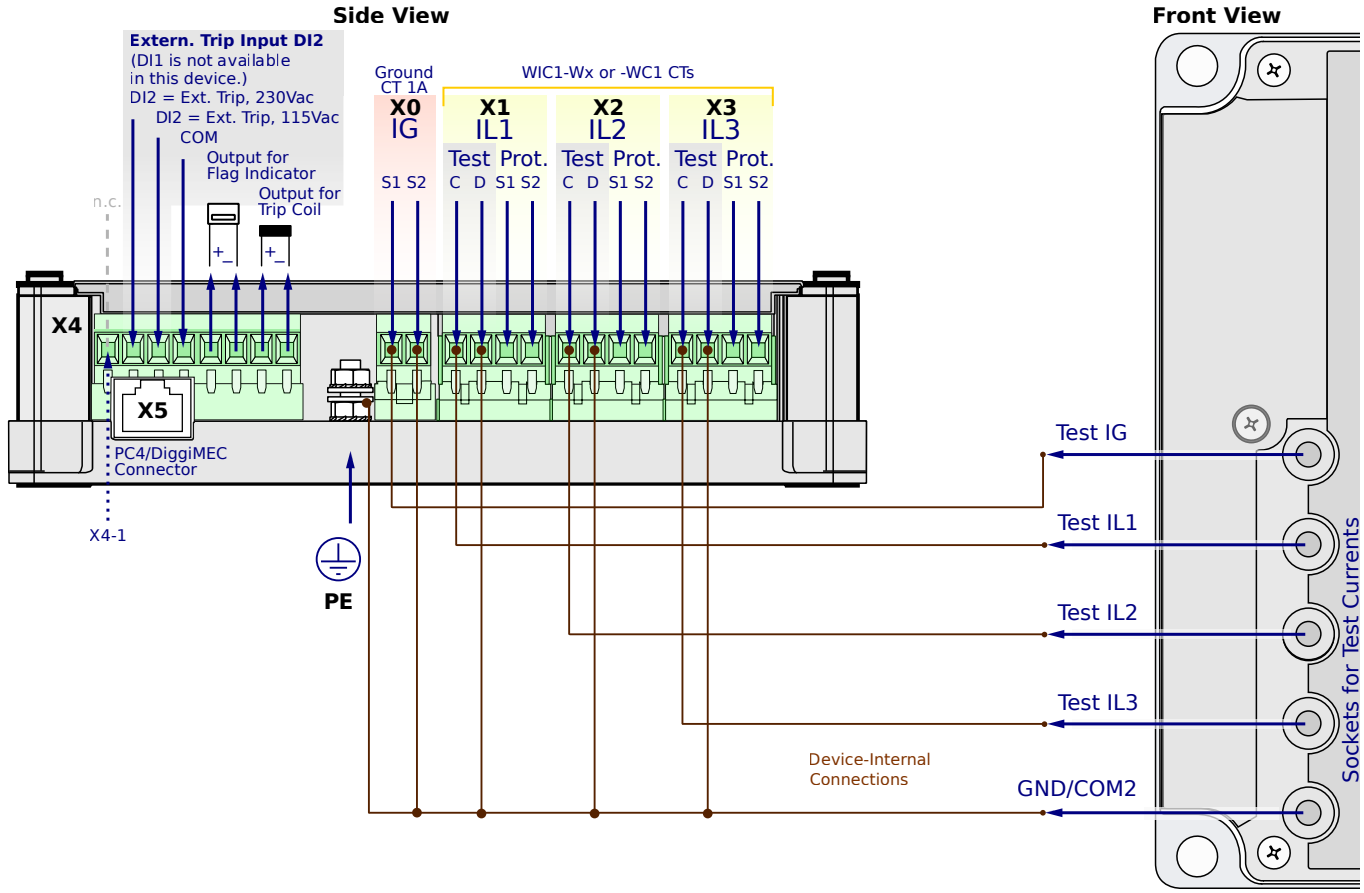


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CF2PAH

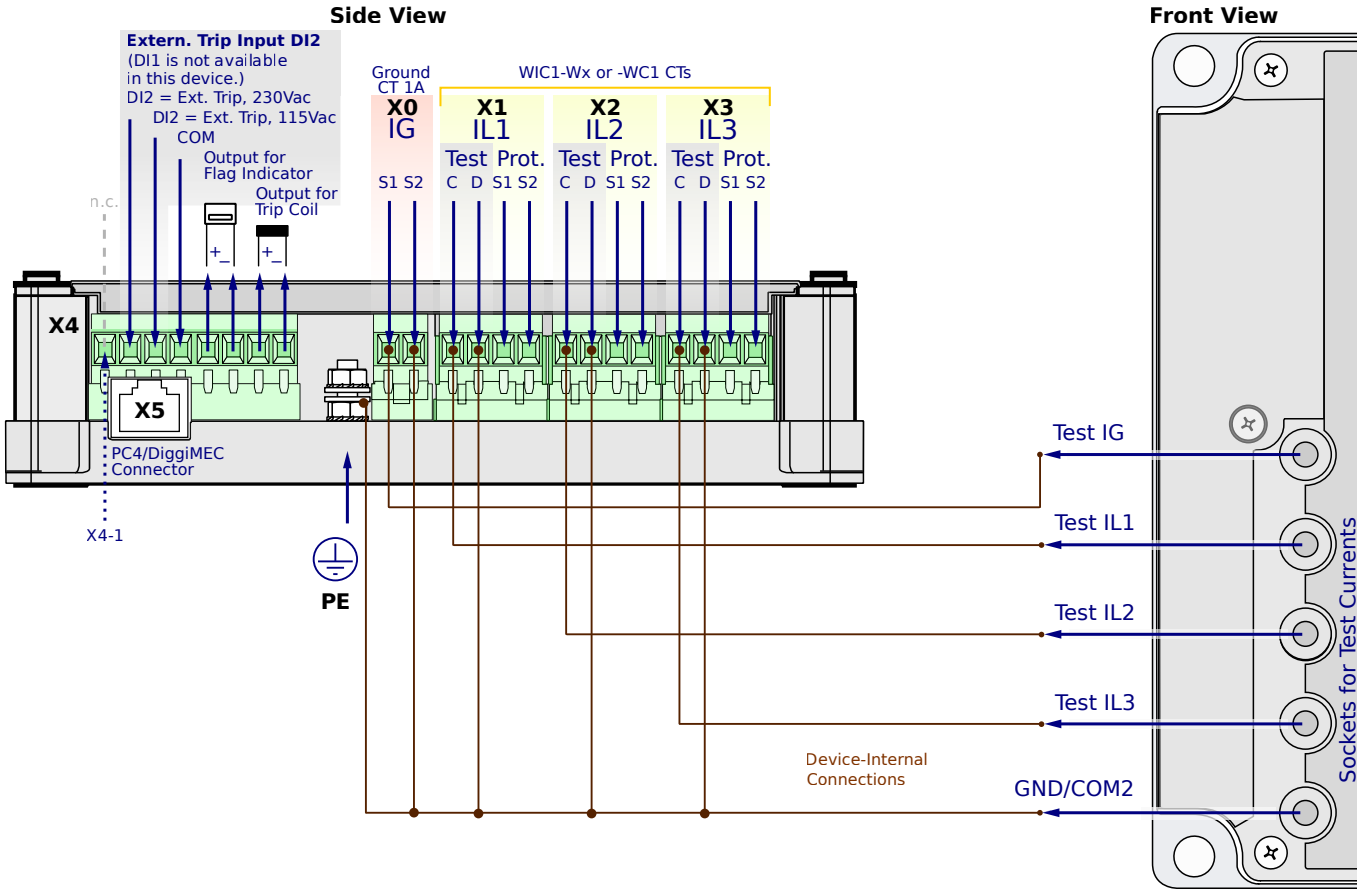


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1SA0

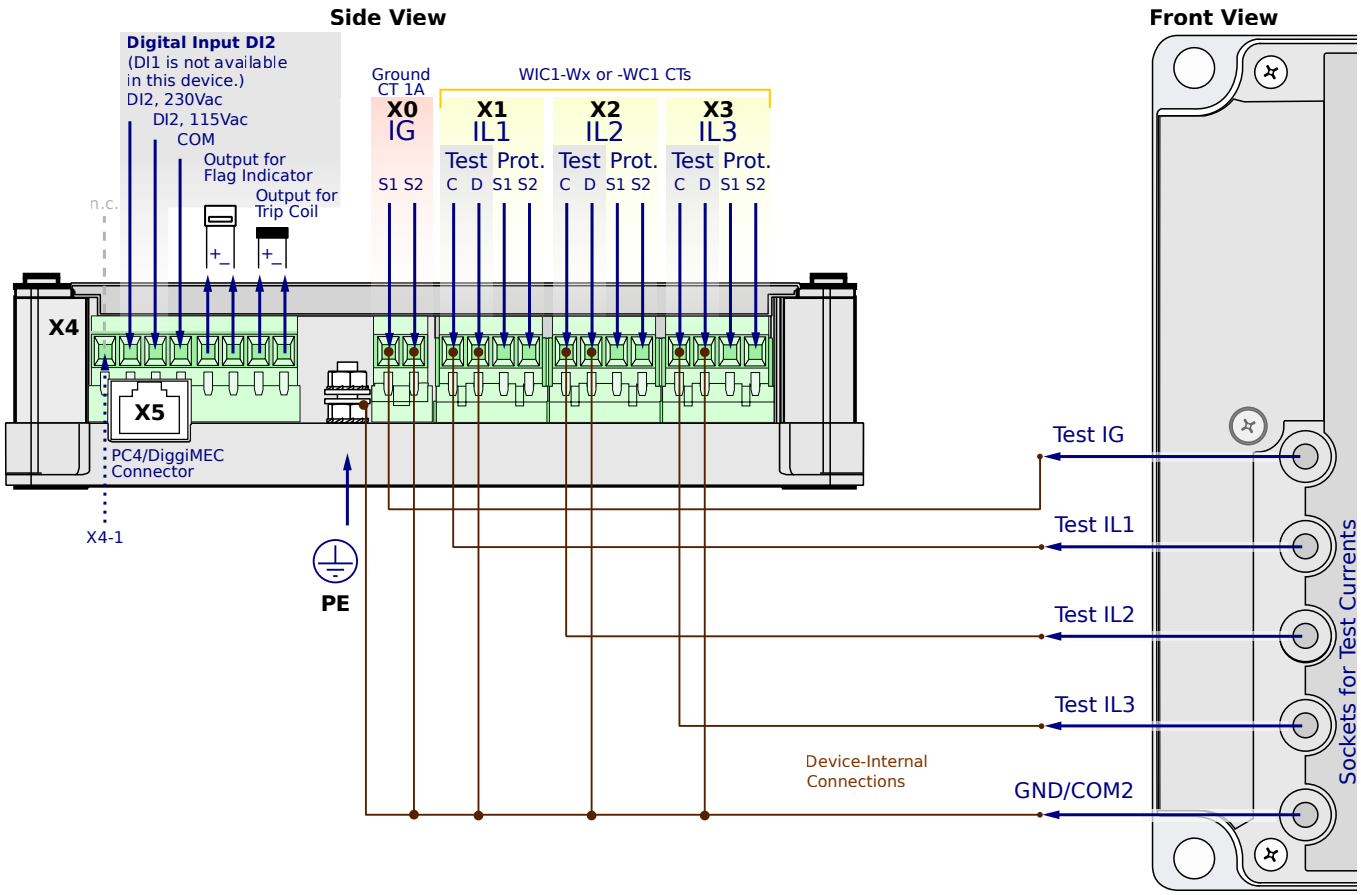


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1SAH

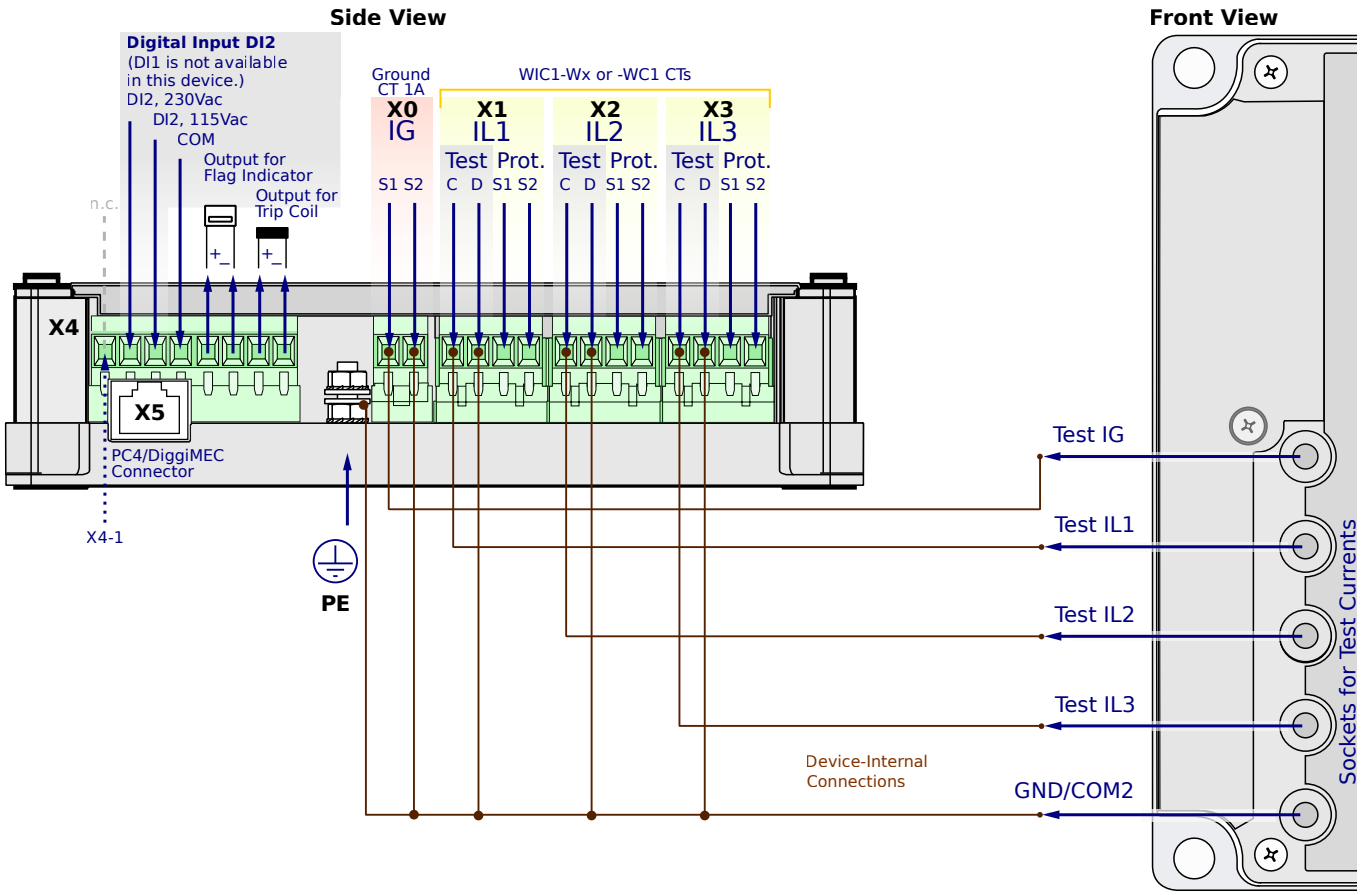


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1AA0

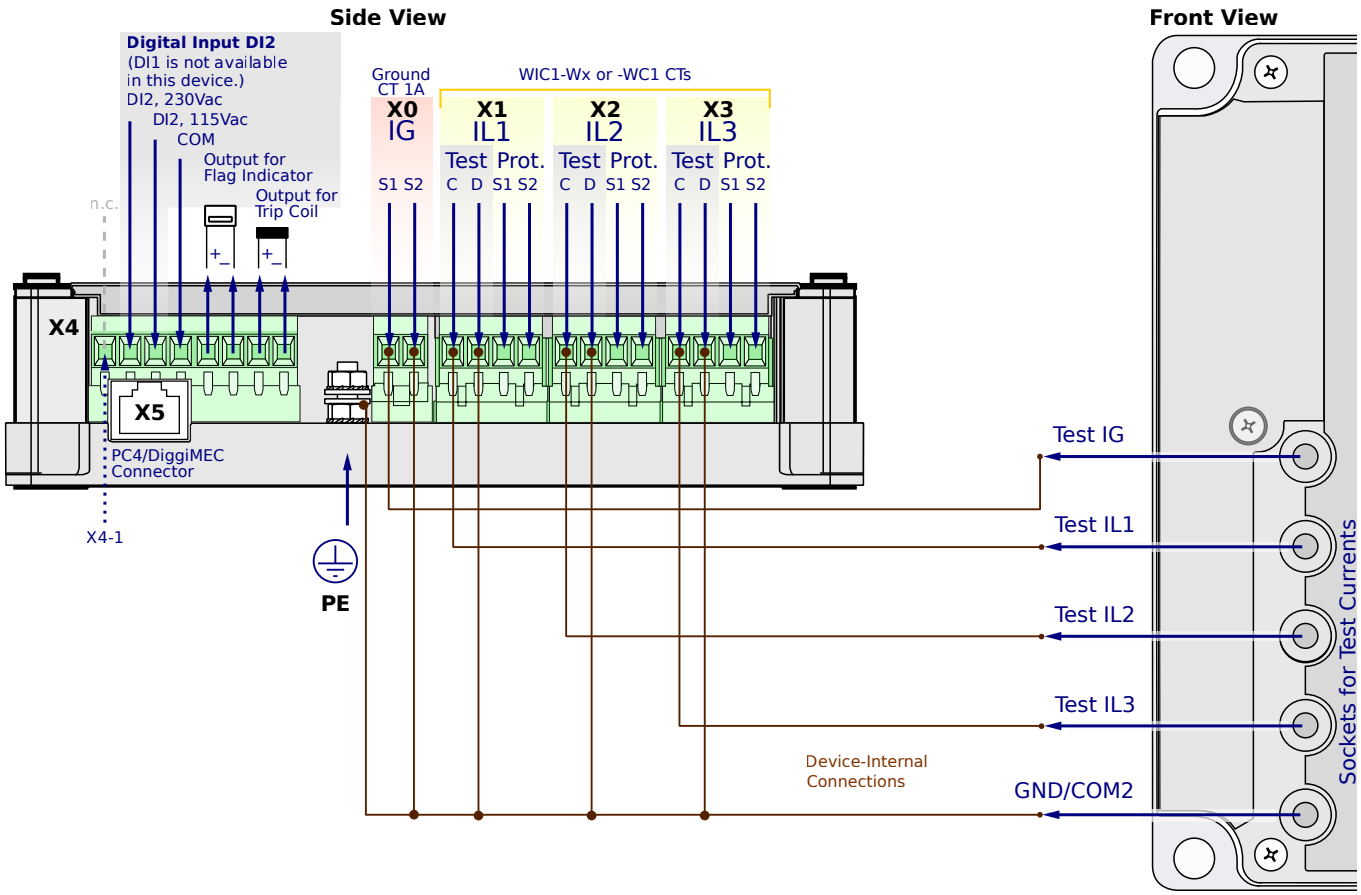


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1AAH

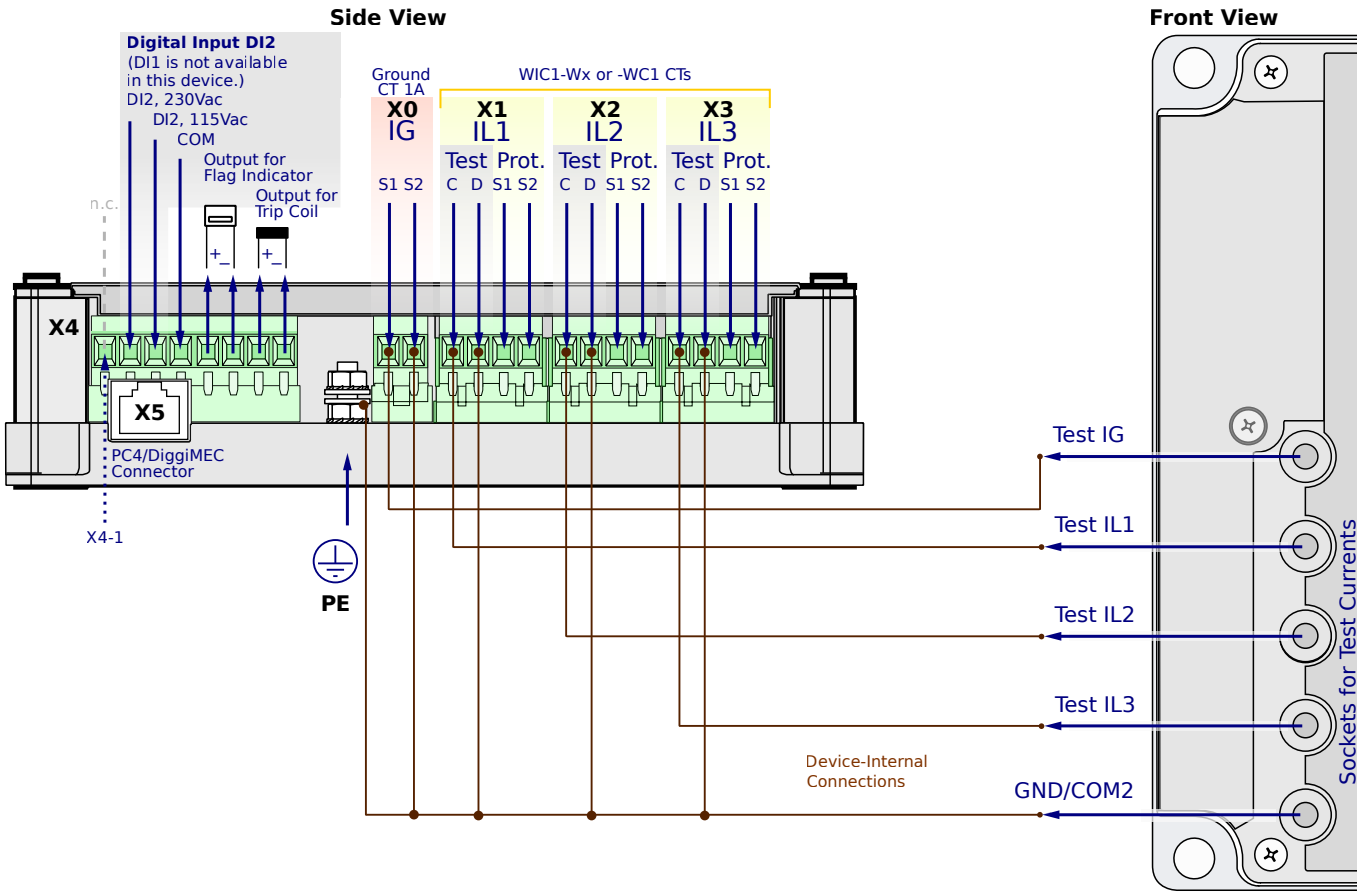


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1PA0

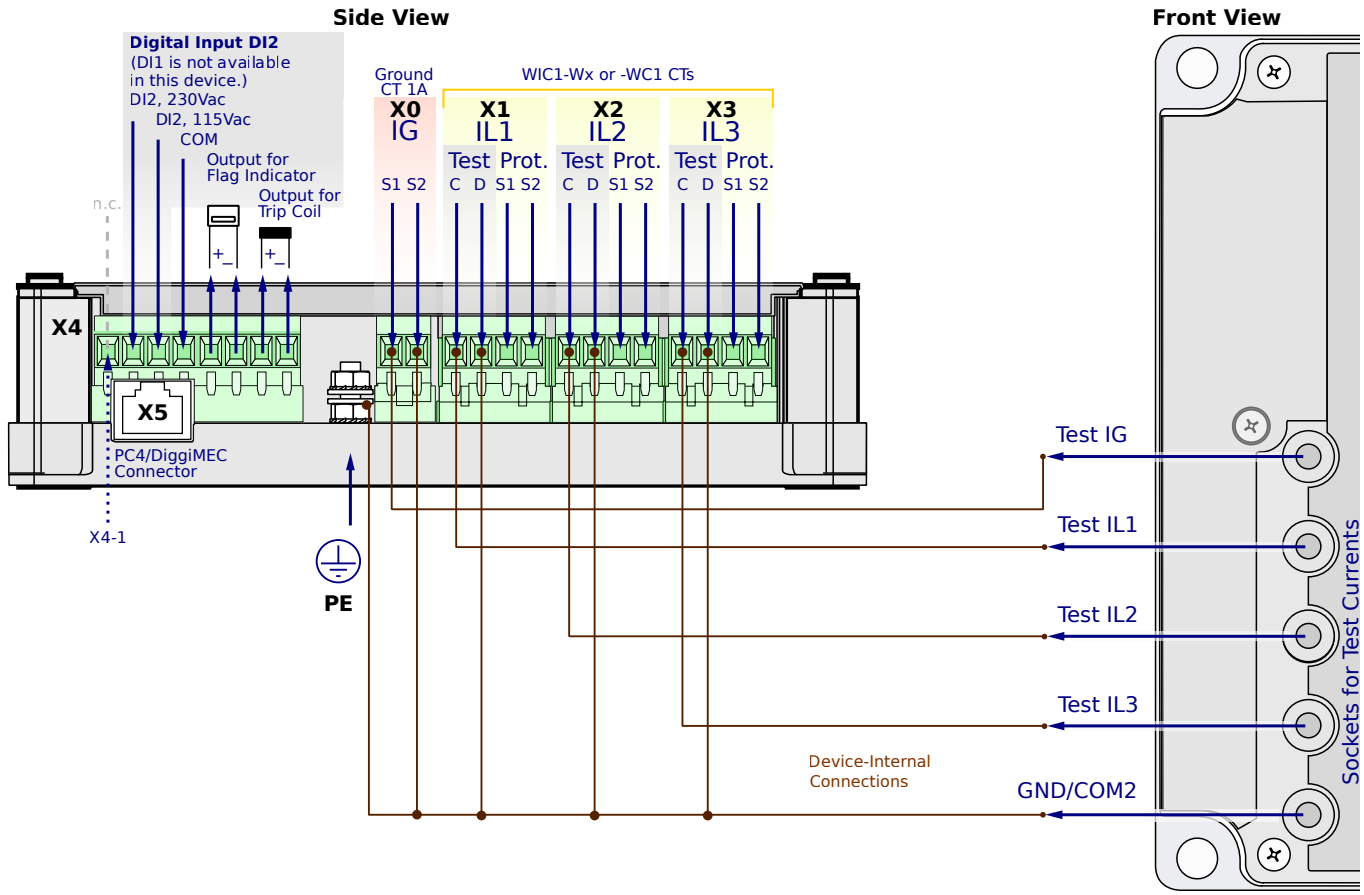


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC1PAH

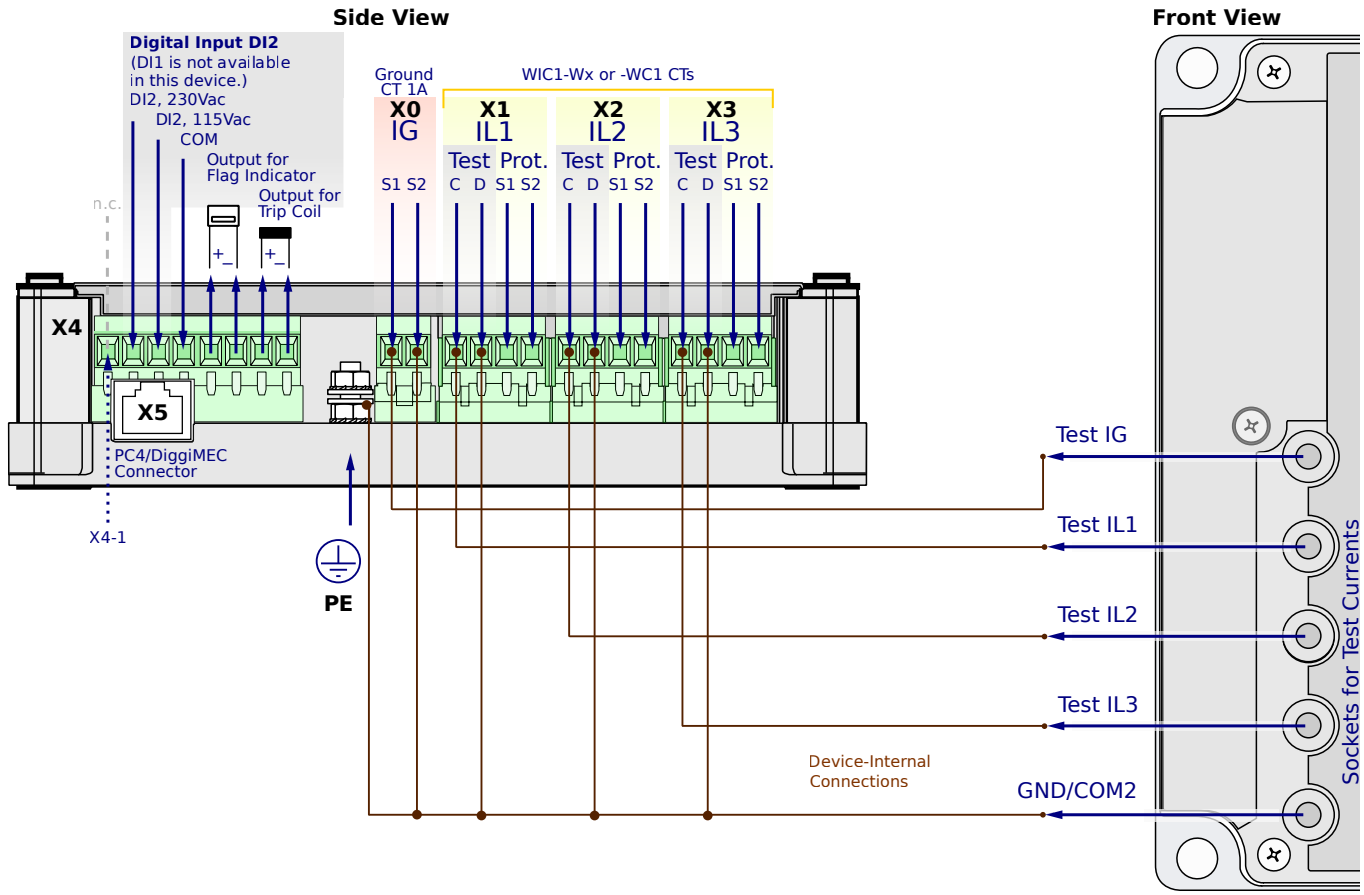


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2SA0

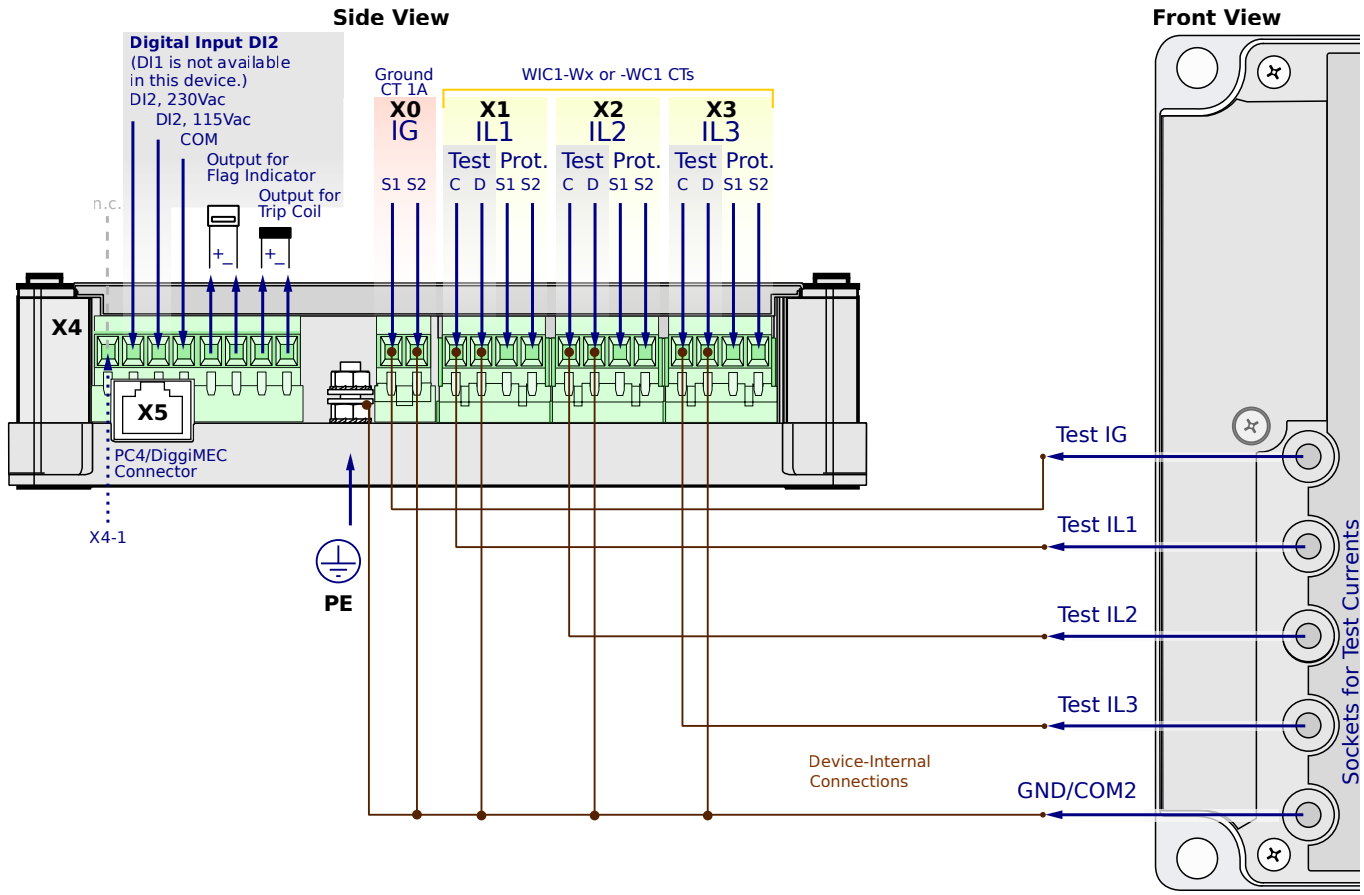


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2SAH

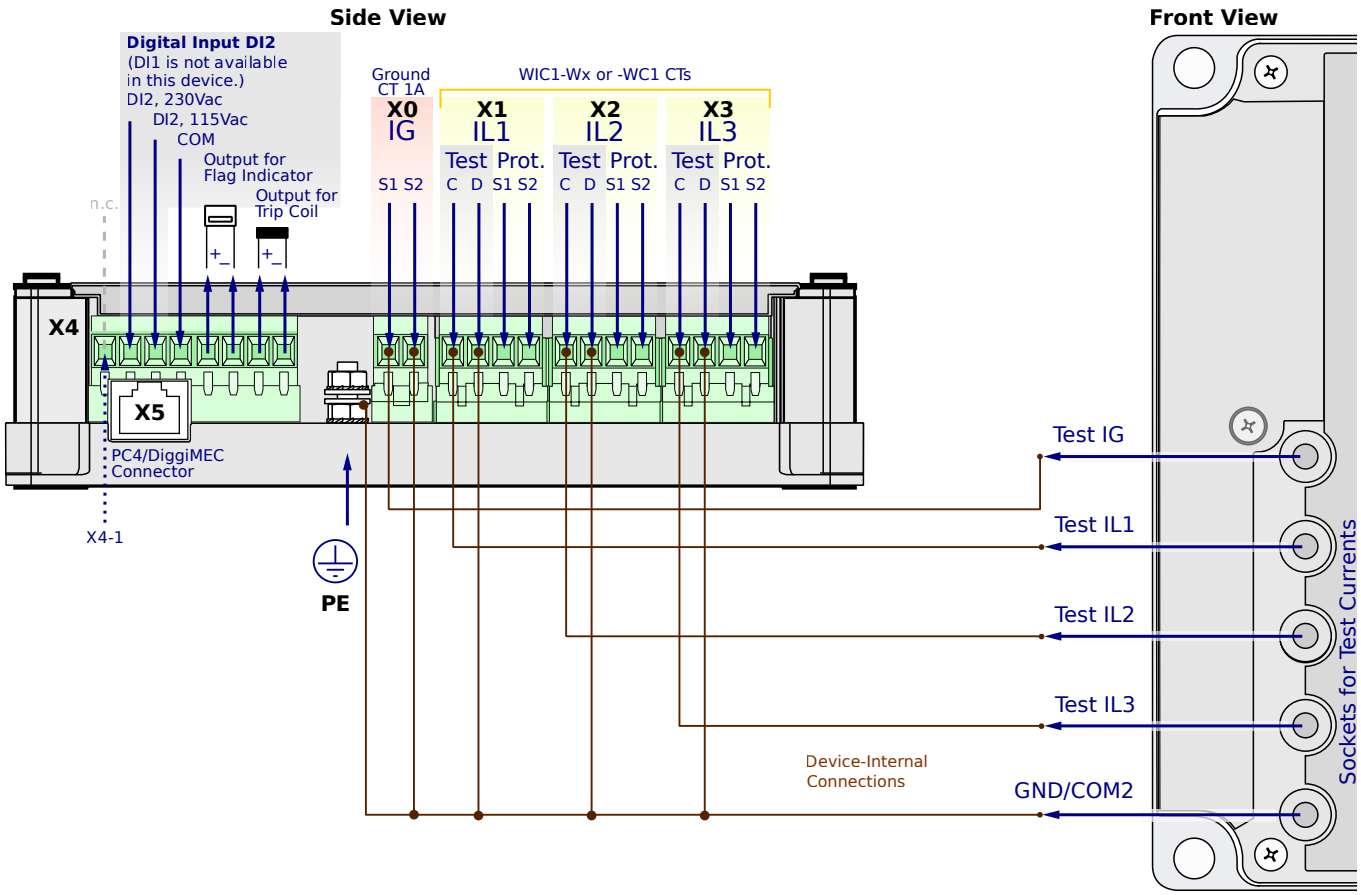


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2AA0

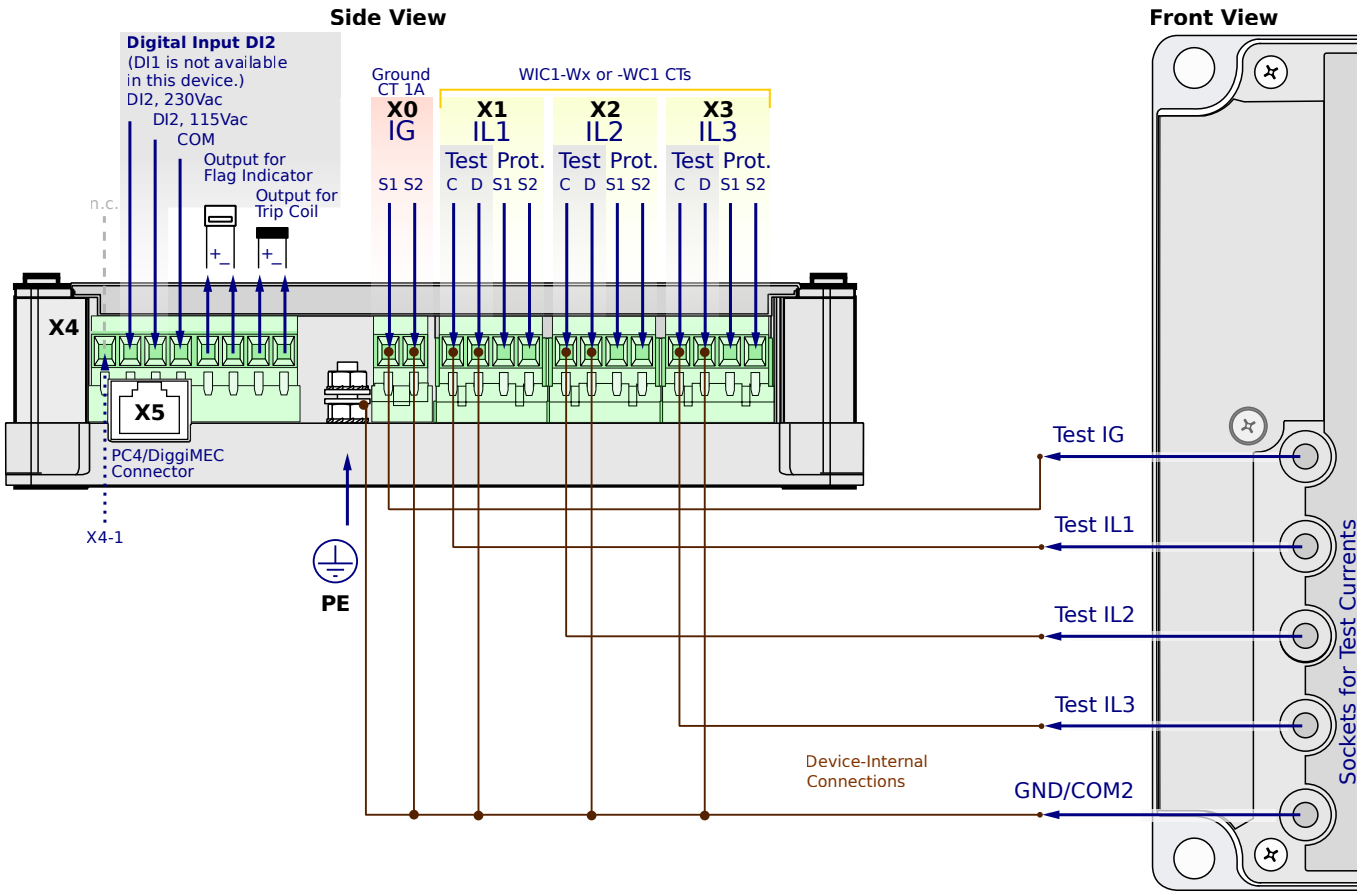


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2AAH

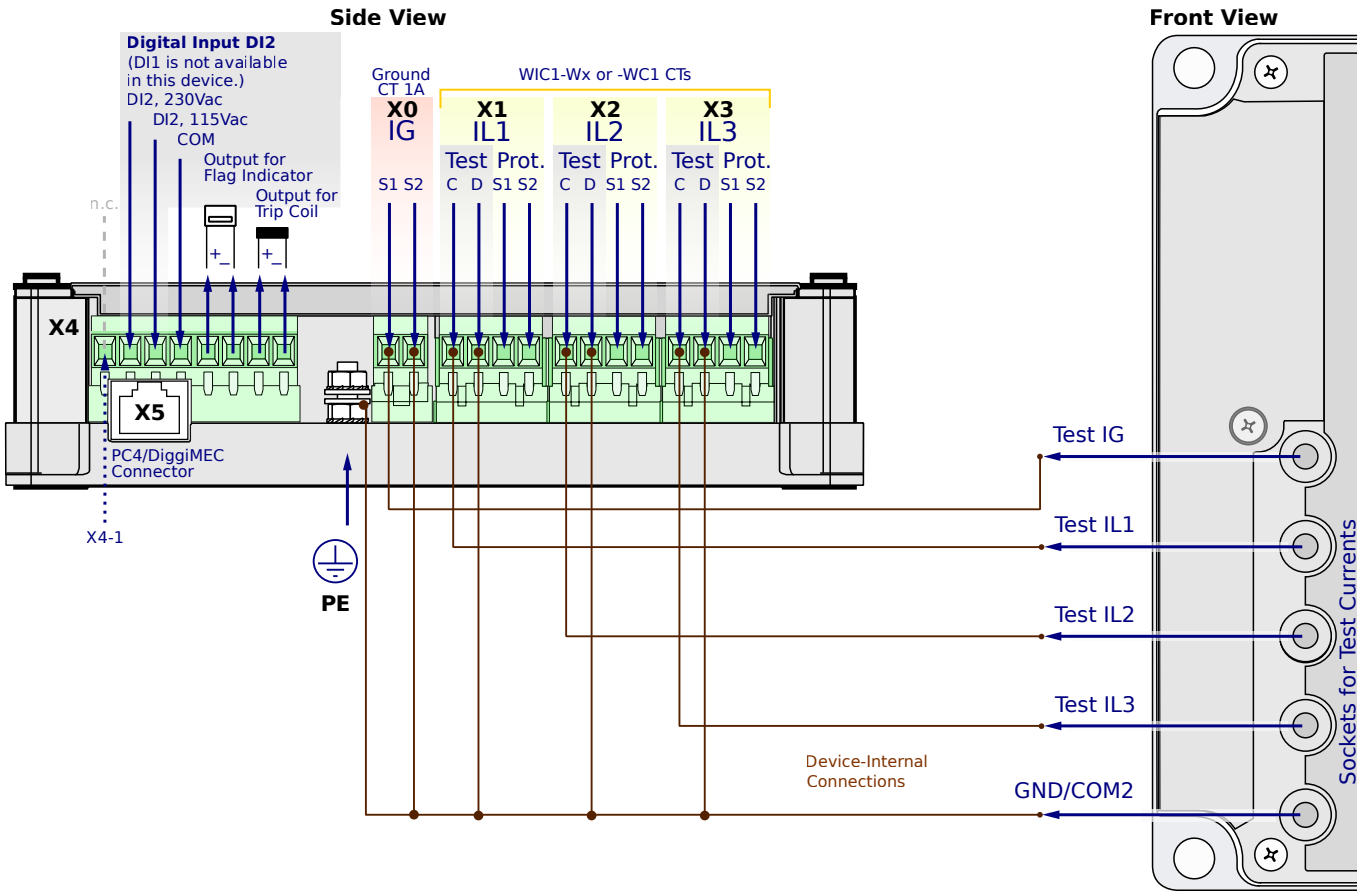


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2PA0

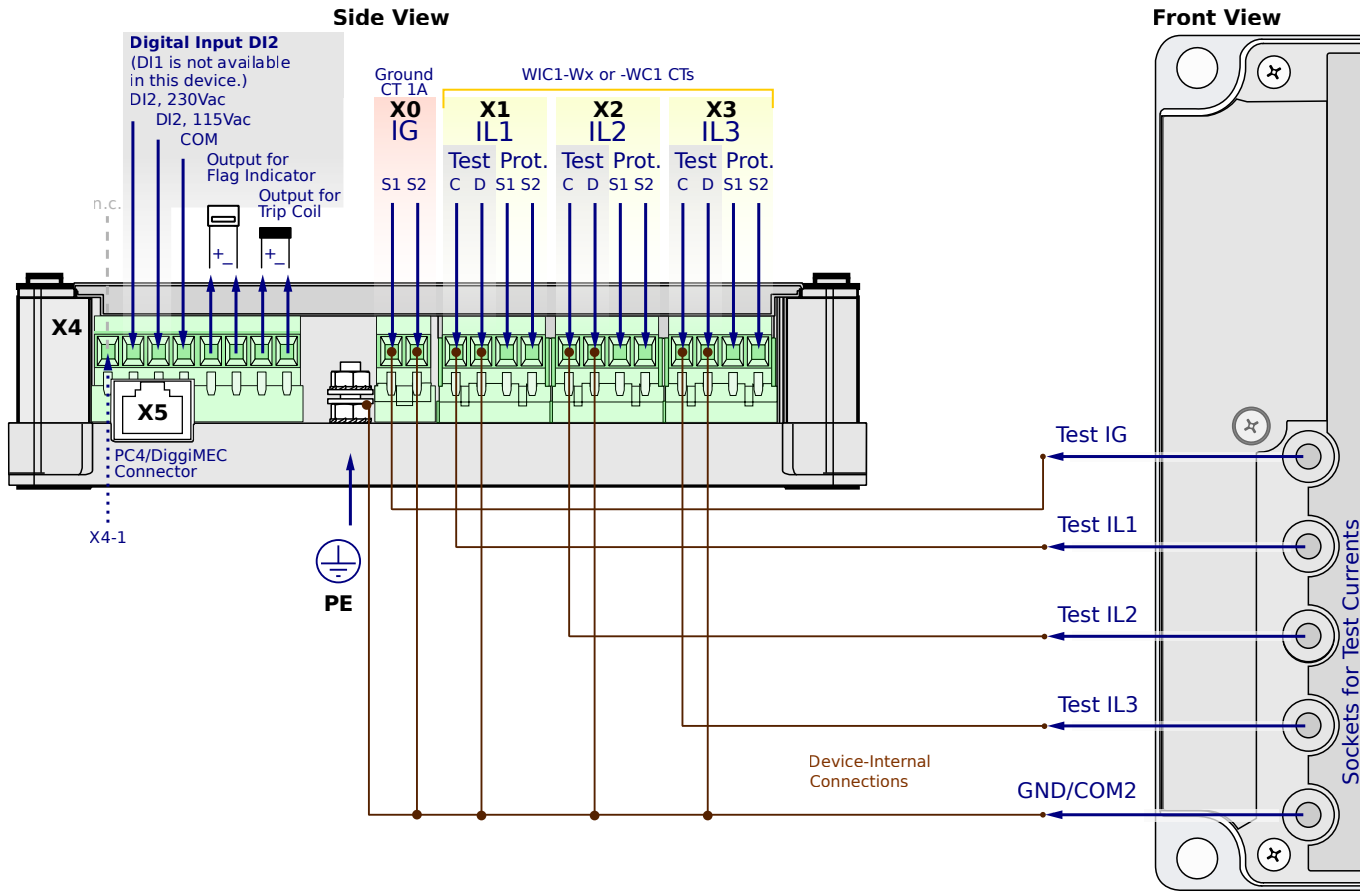


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3SB6CC2PAH

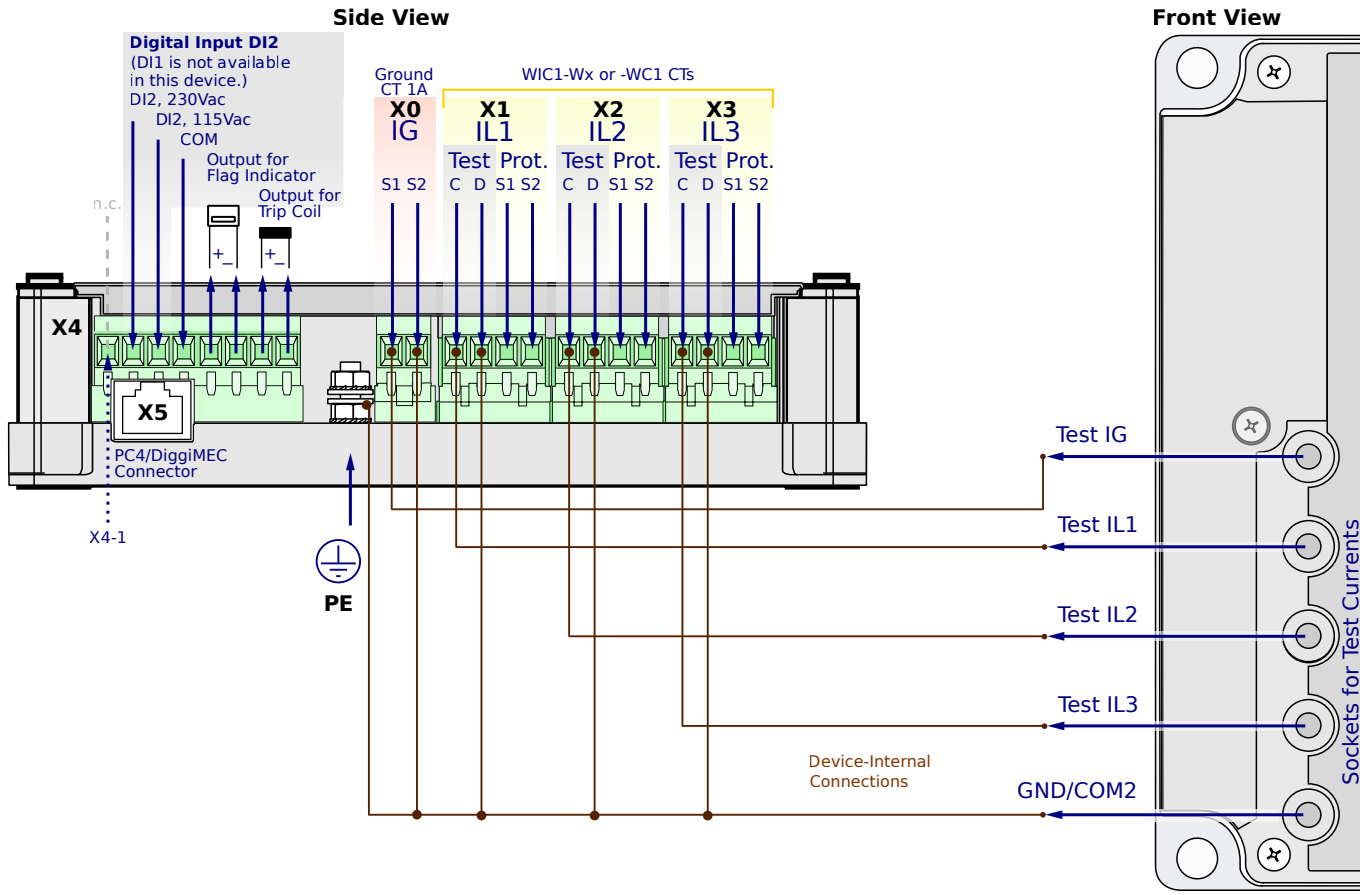


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0SA0

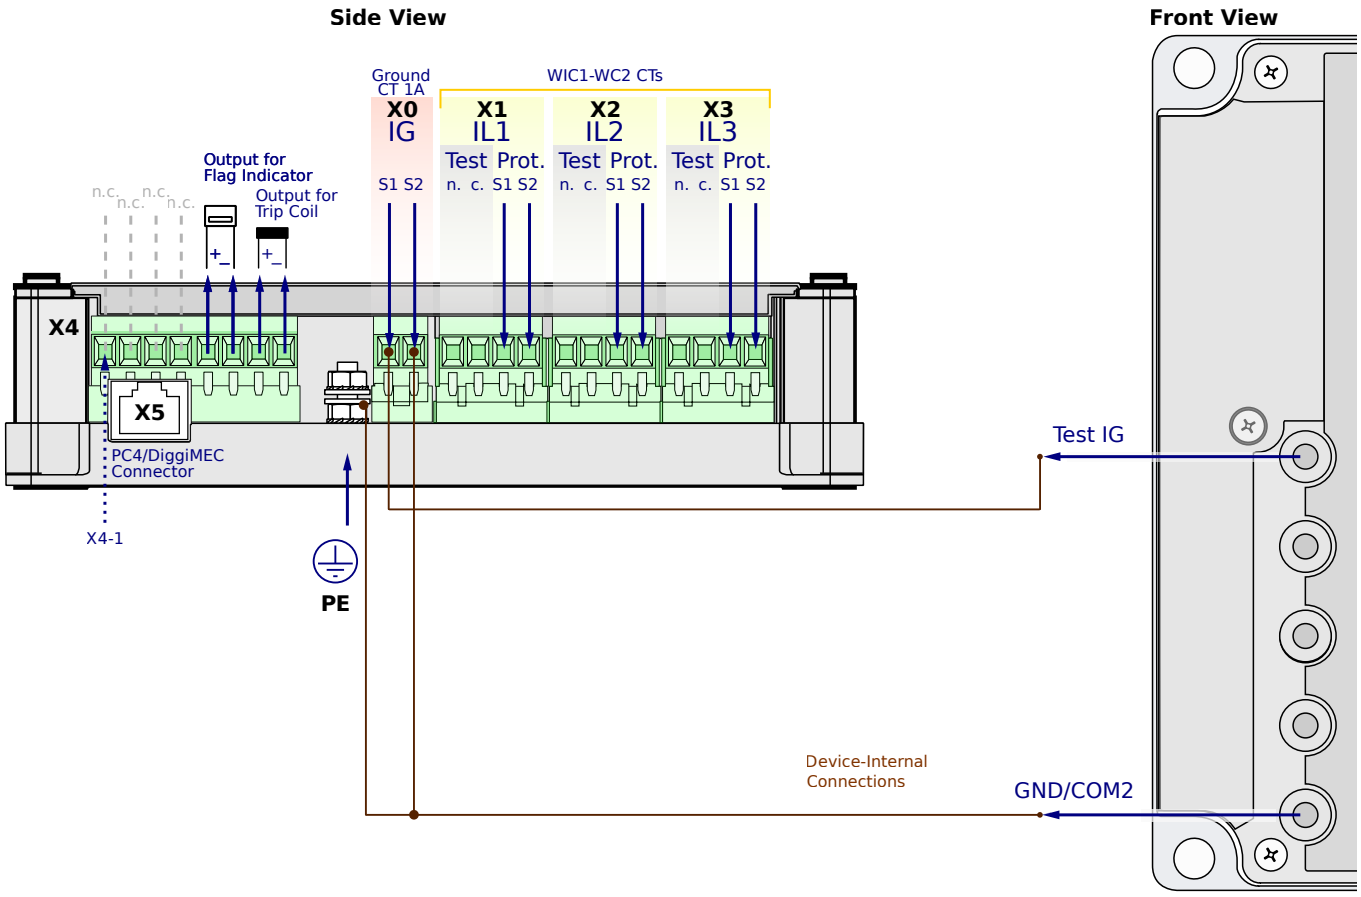


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0SAH

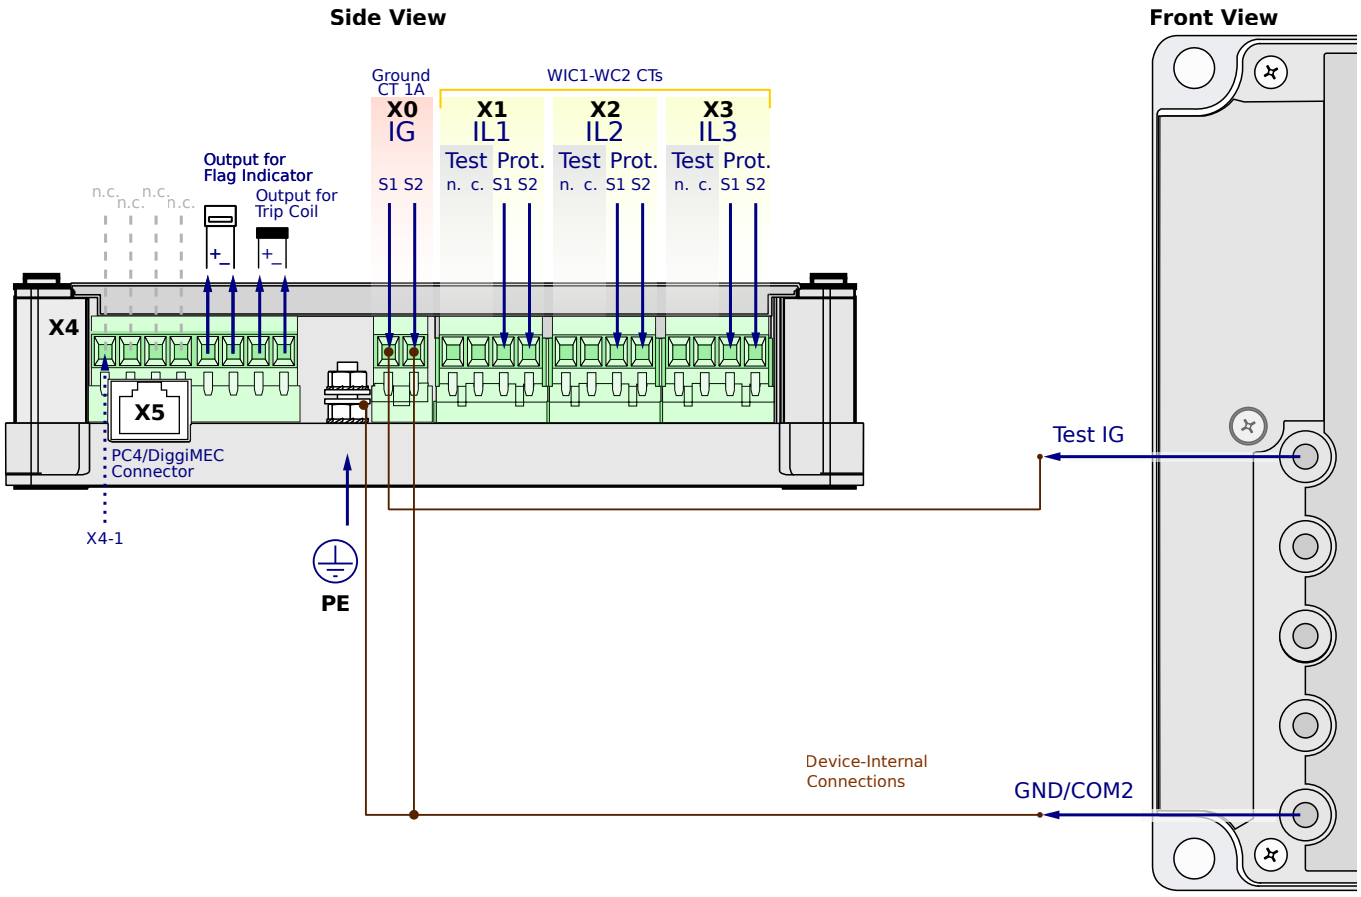


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0AA0

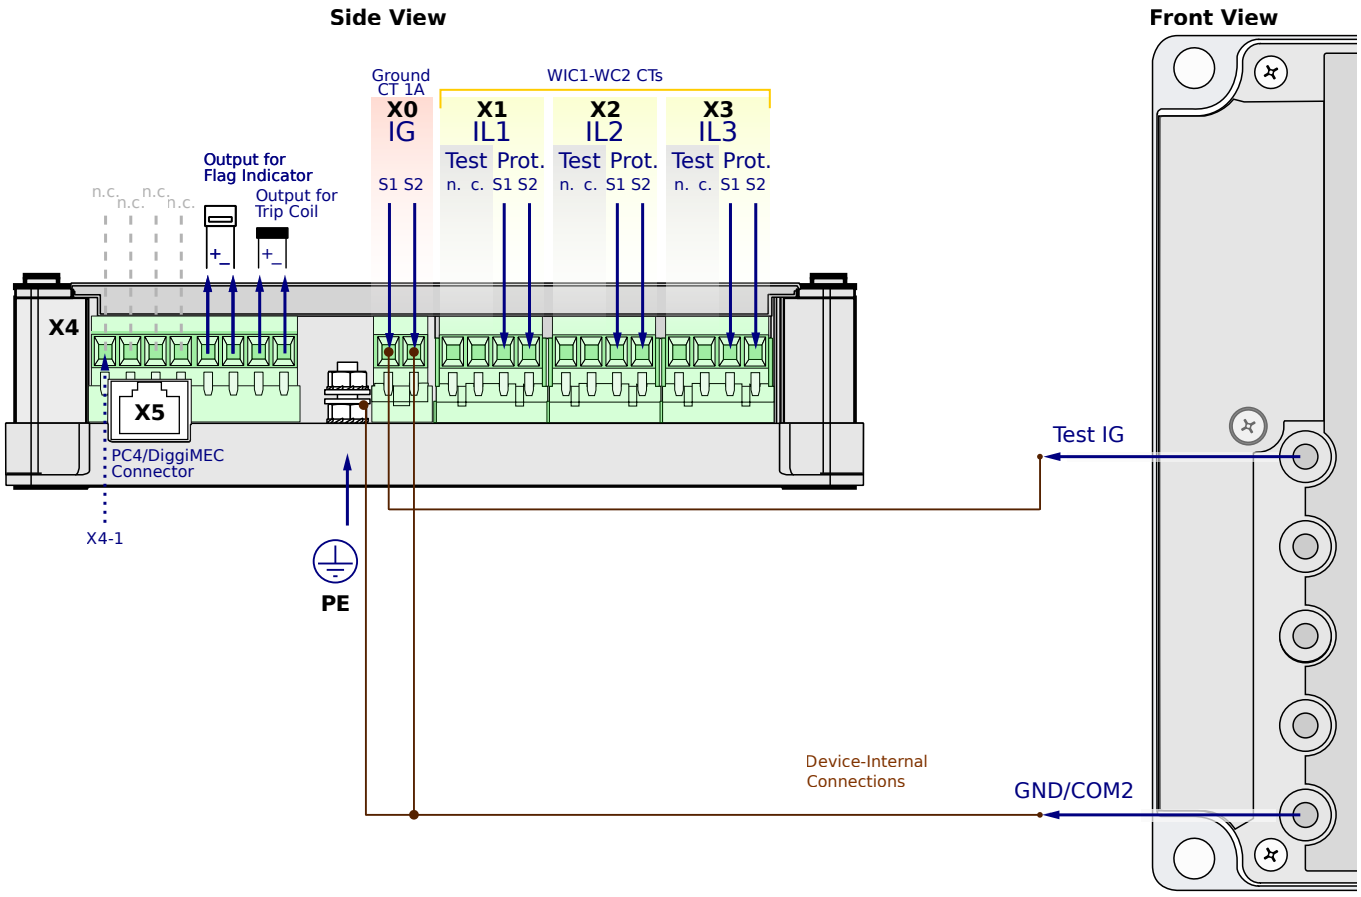


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0AAH

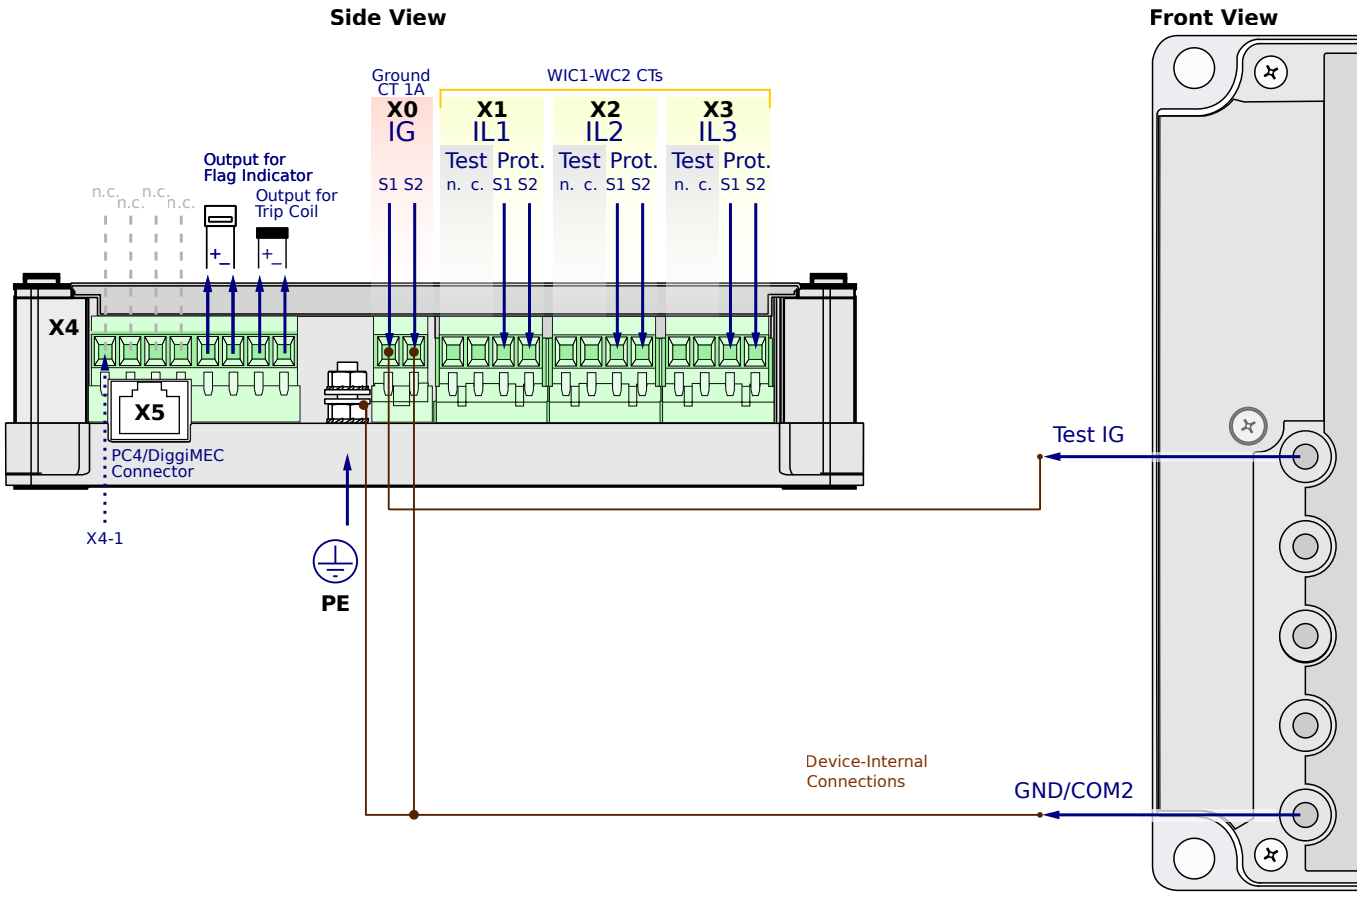


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0PA0

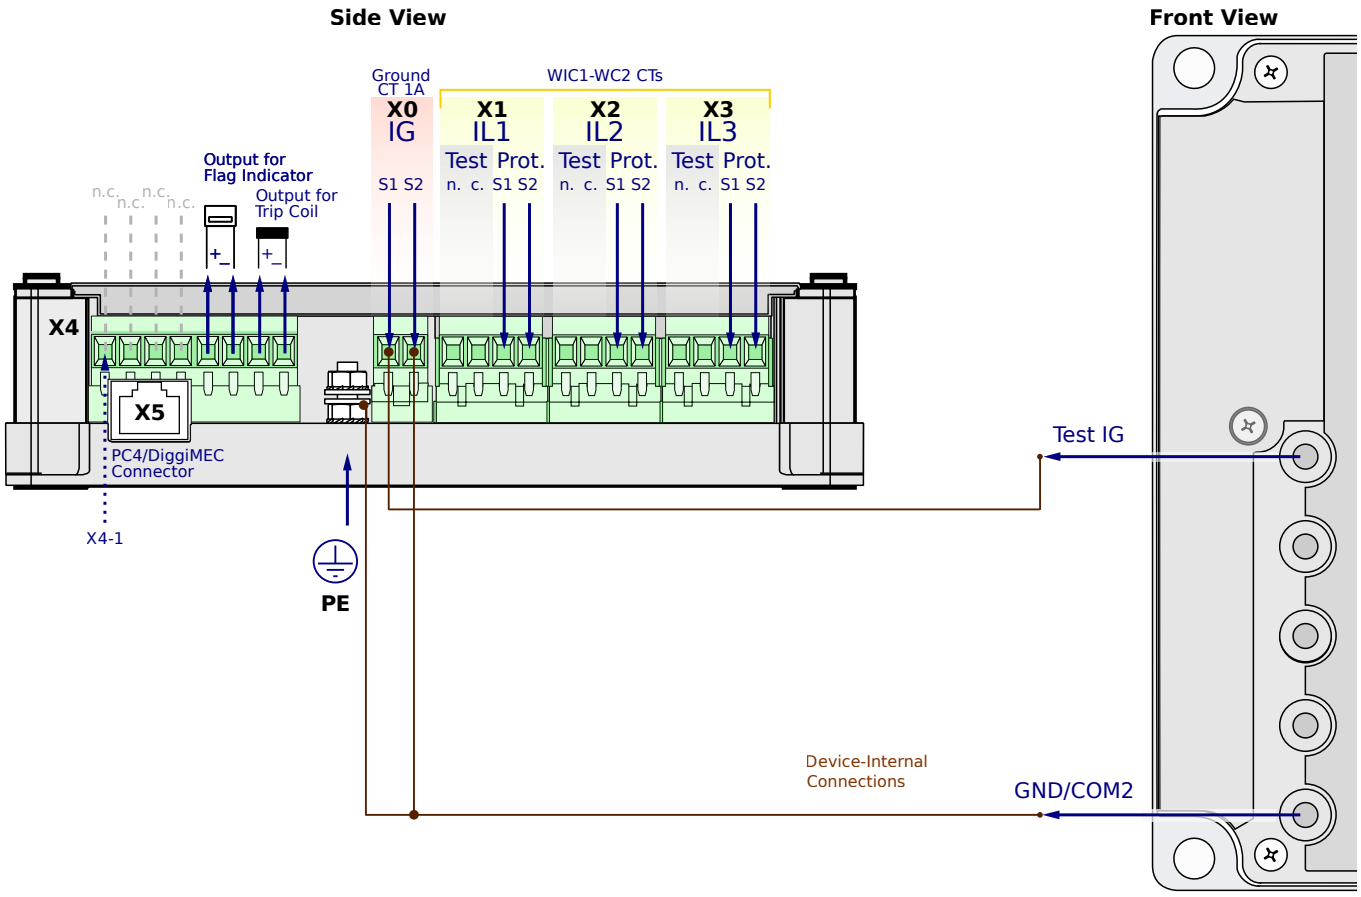


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN0PAH

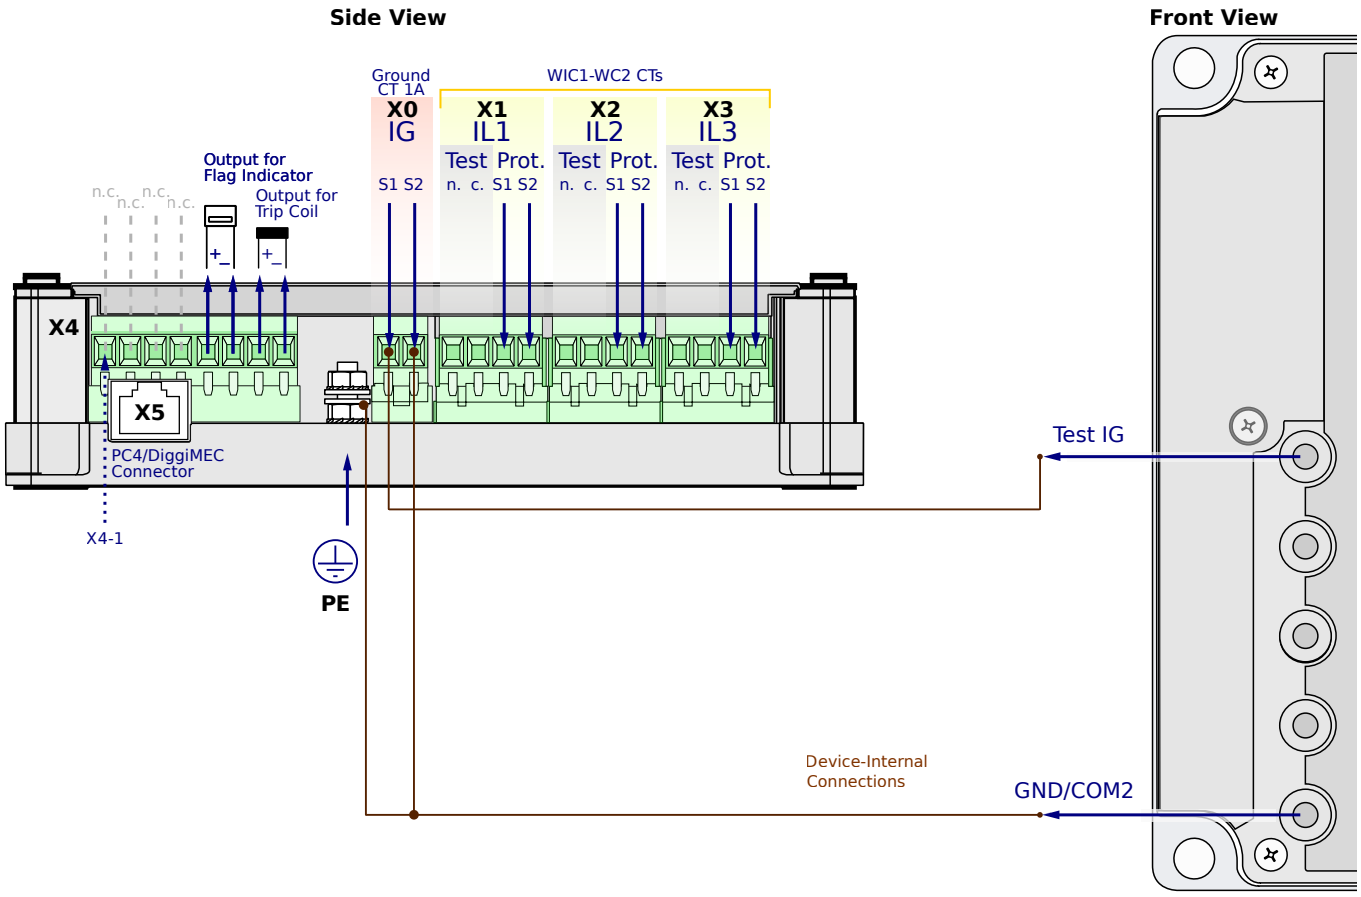


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1SA0

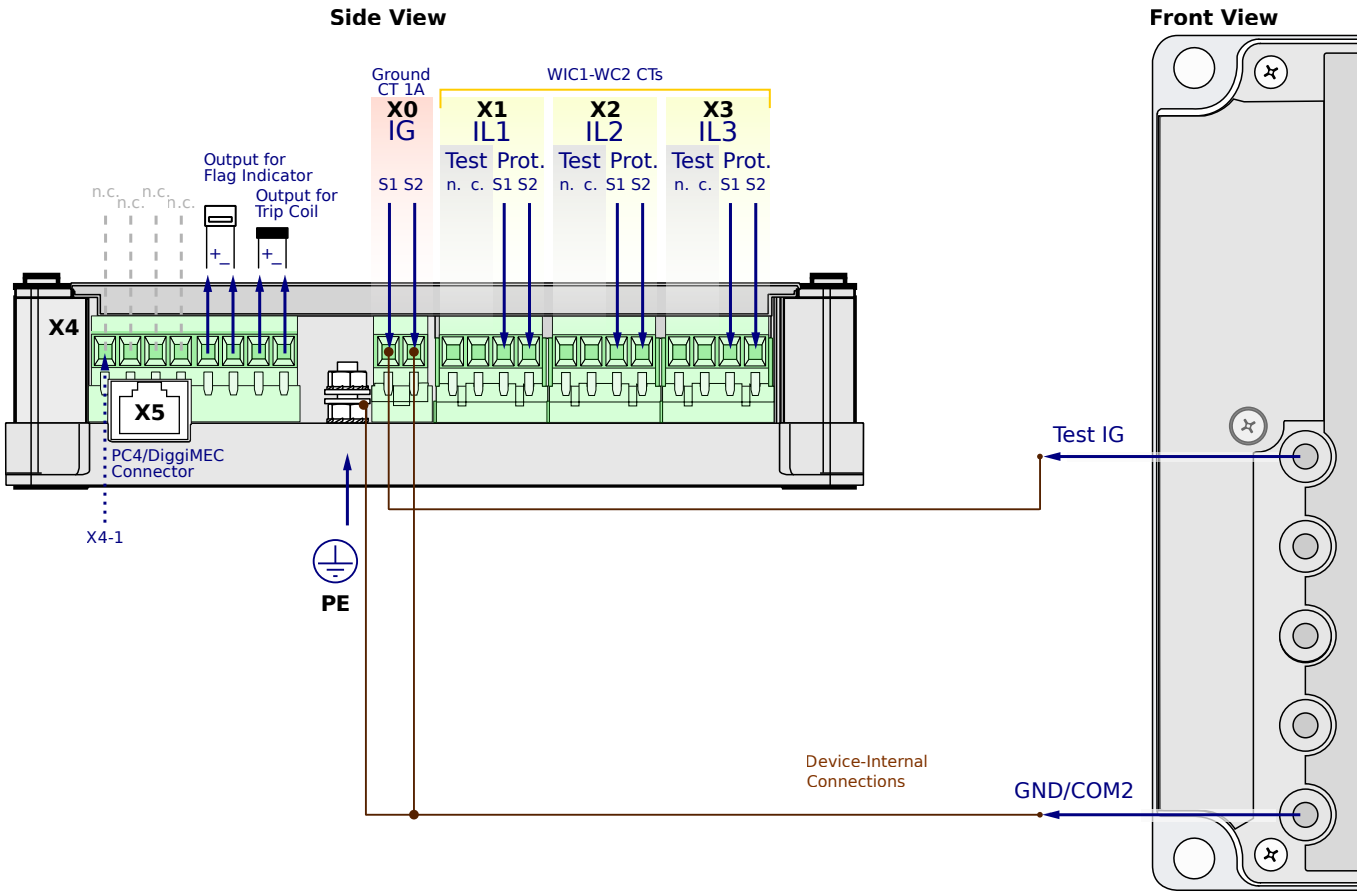


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1SAH

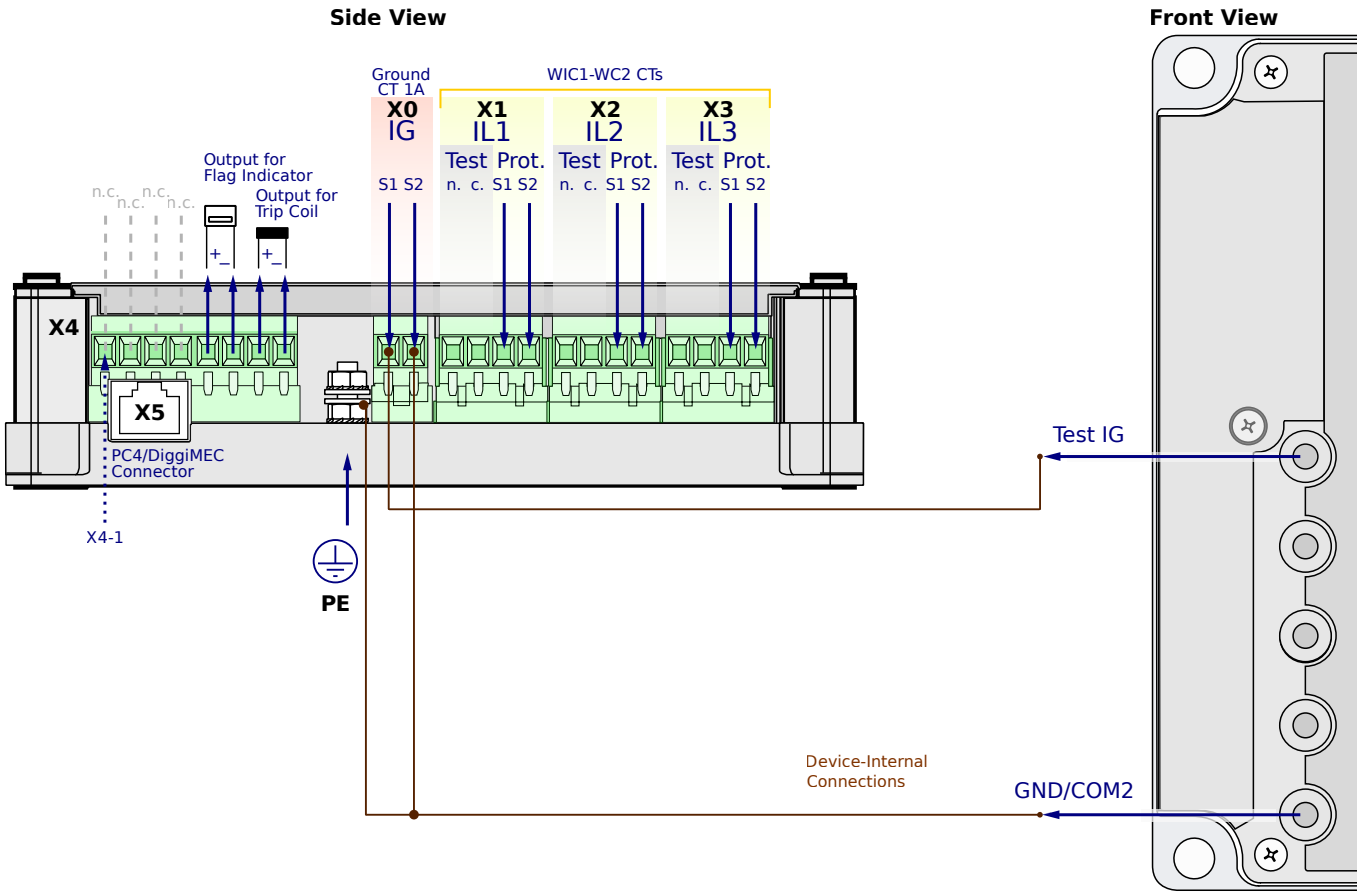


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1AA0

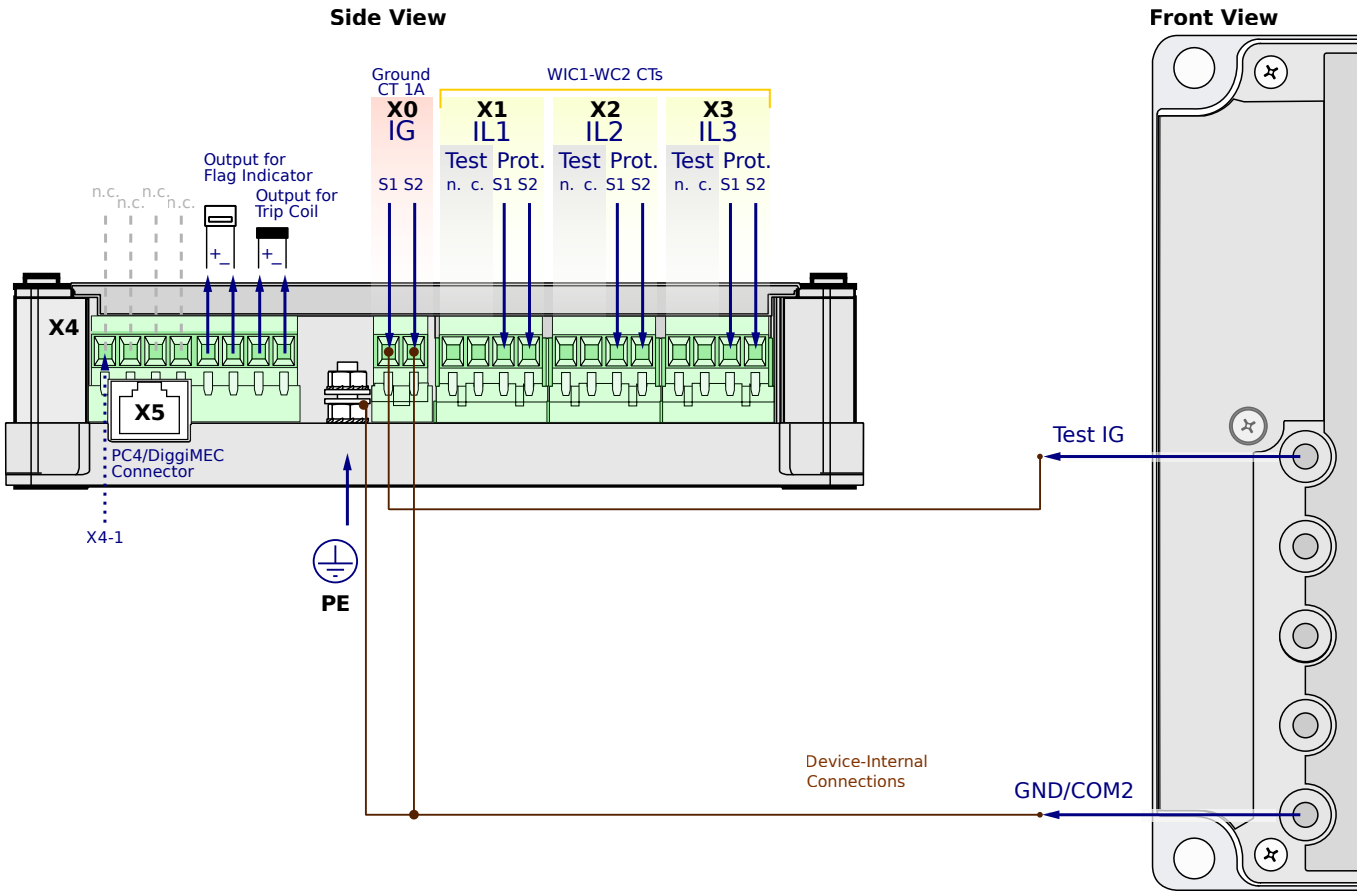


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1AAH

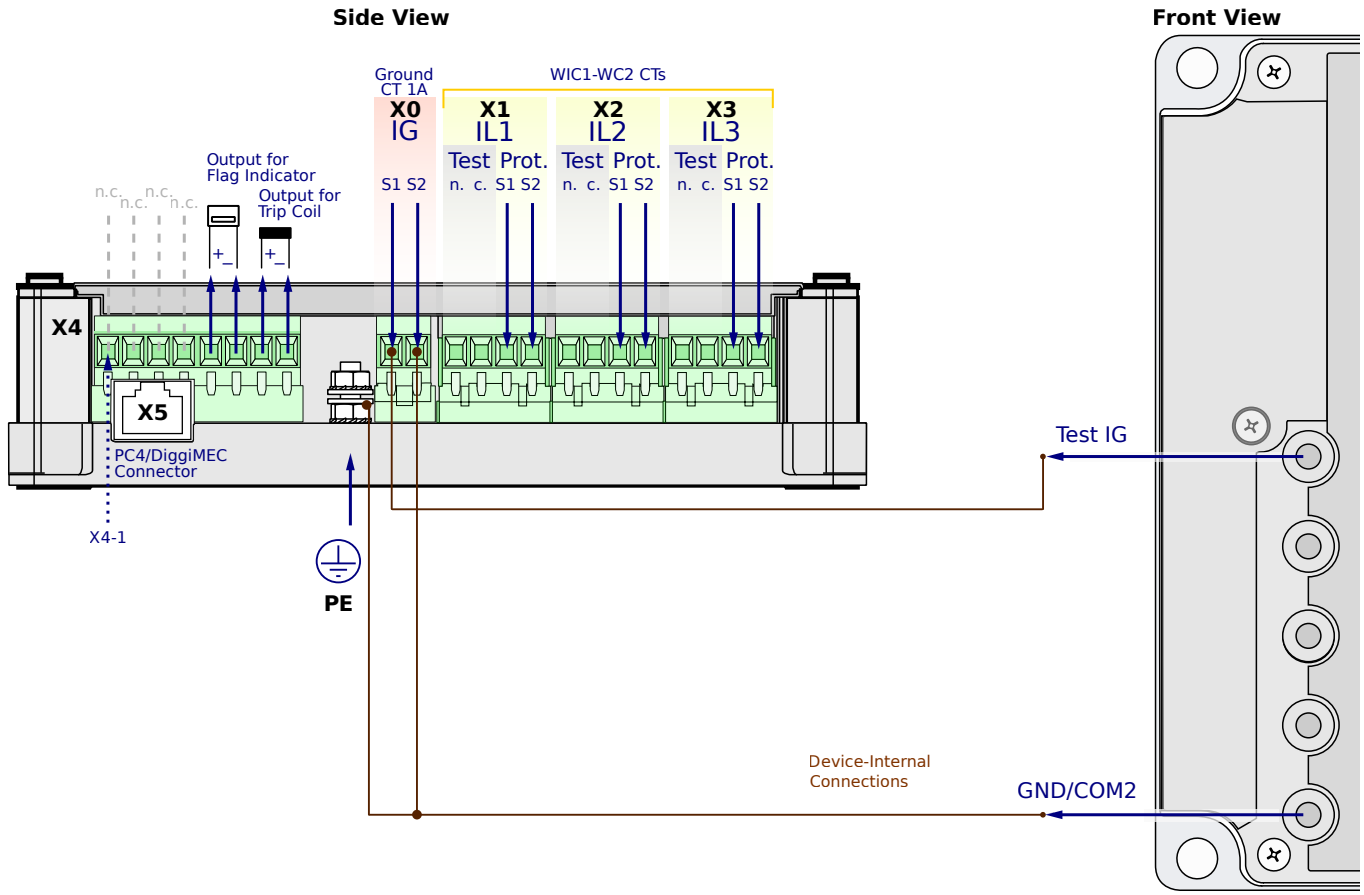


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1PA0

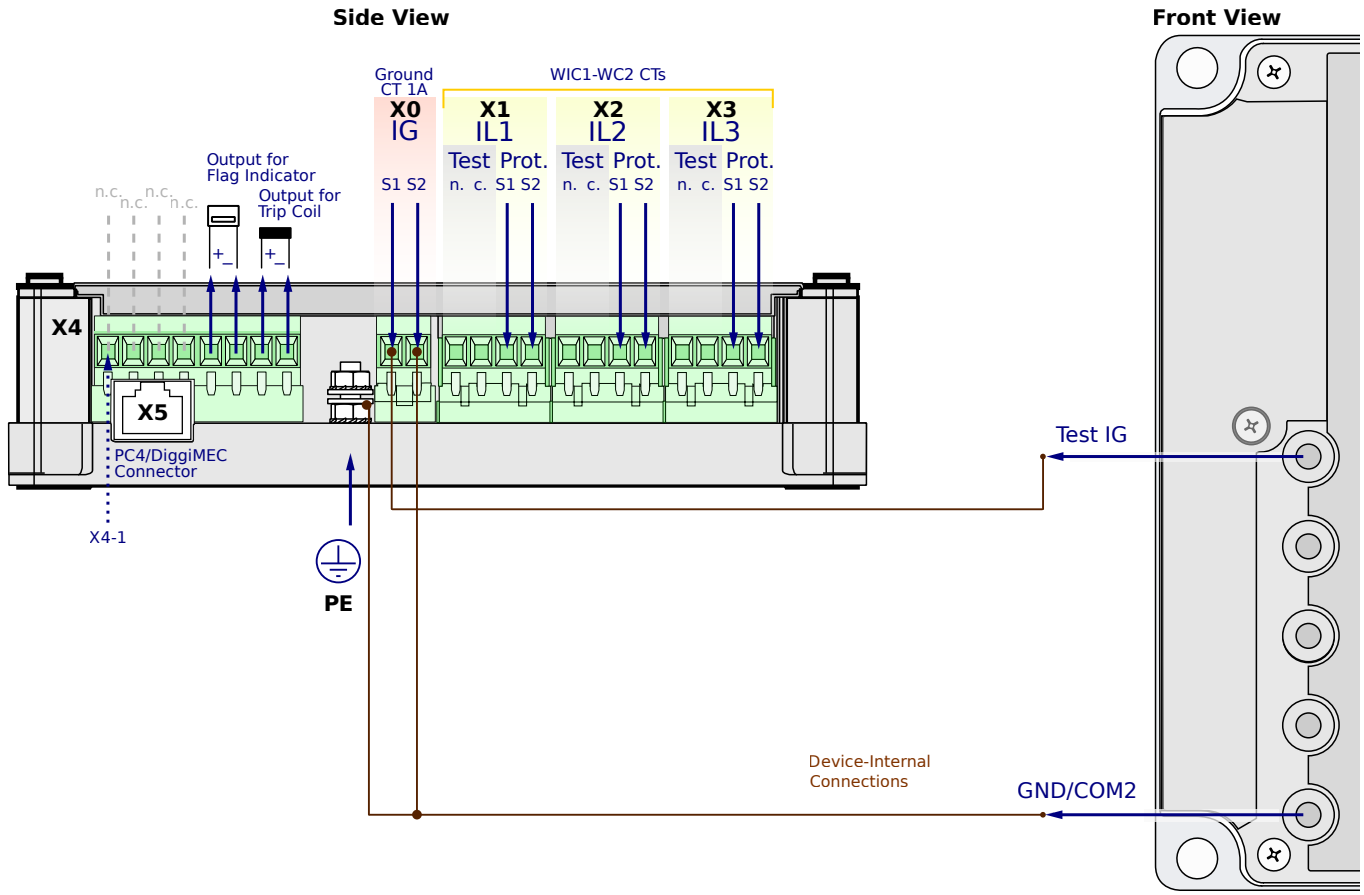


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN1PAH

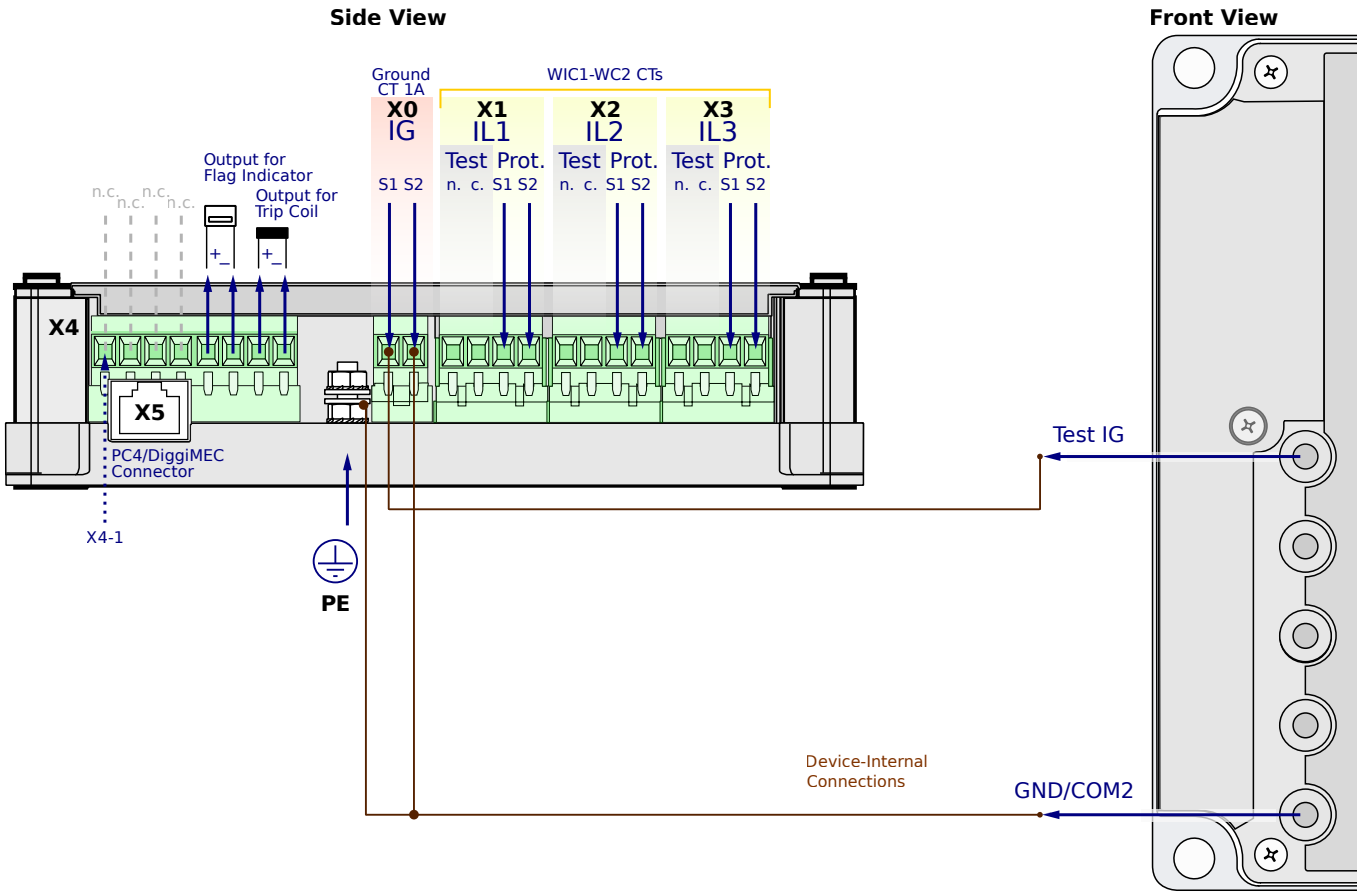


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2SA0

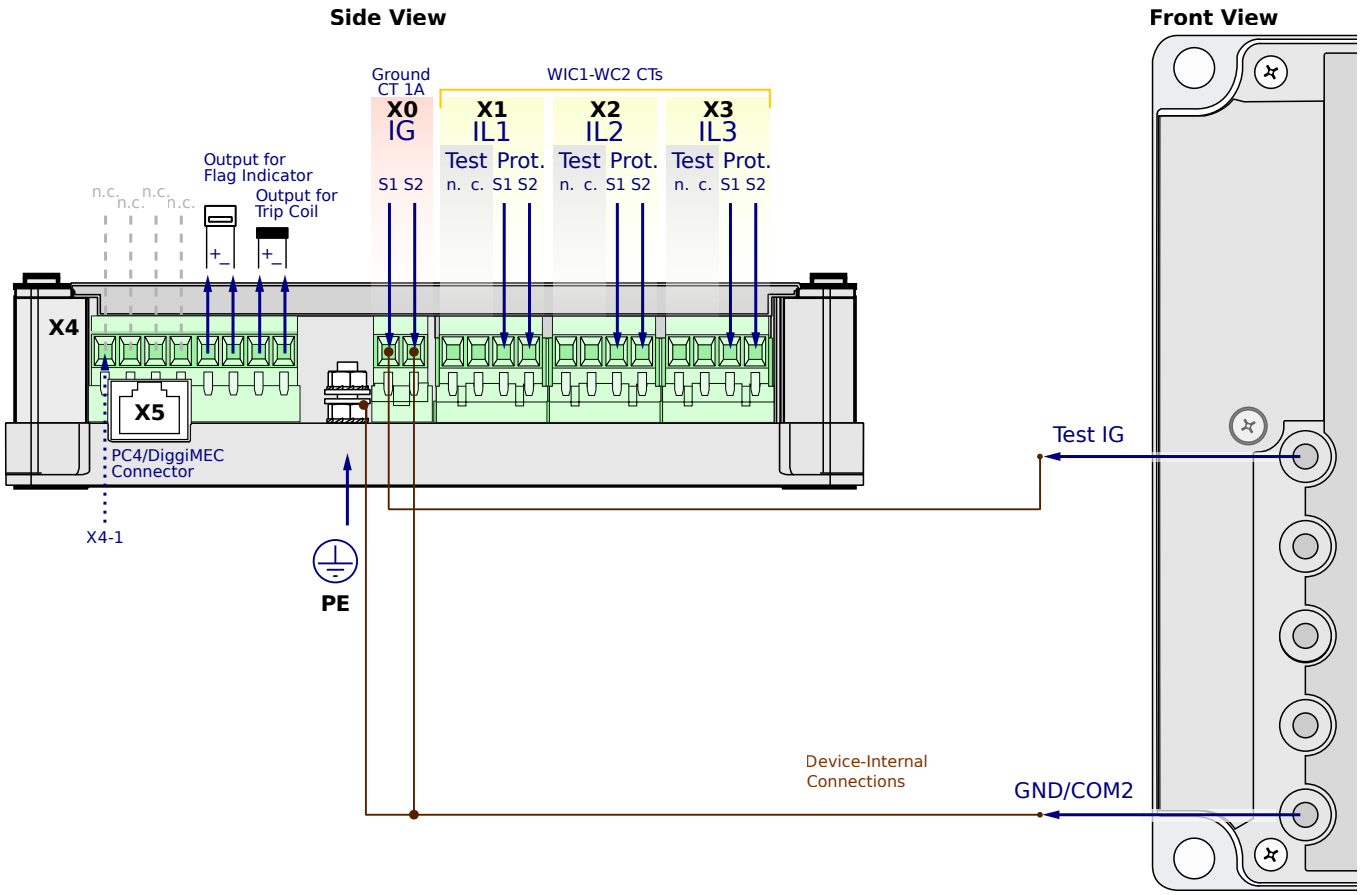


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2SAH

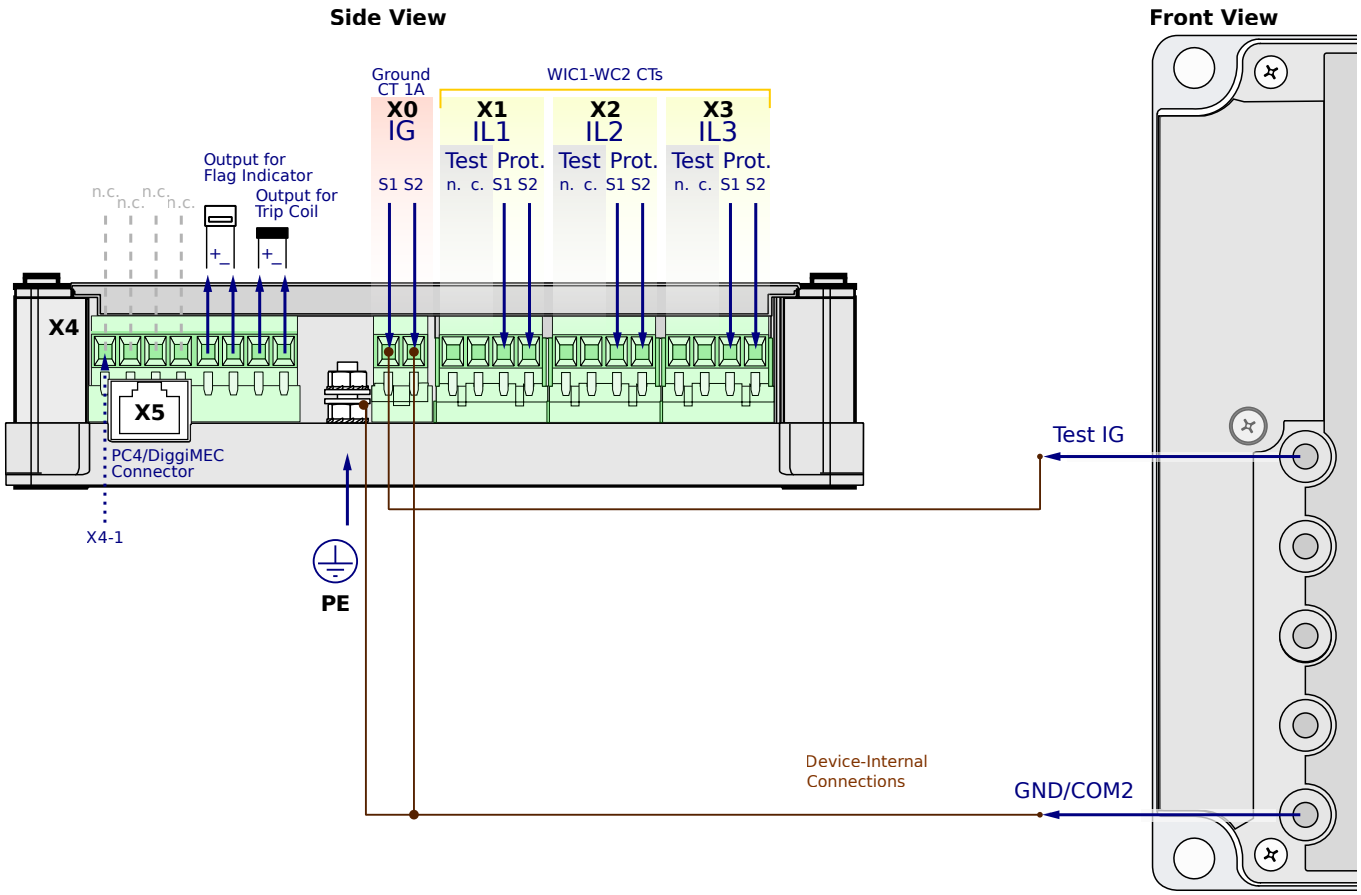


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2AA0

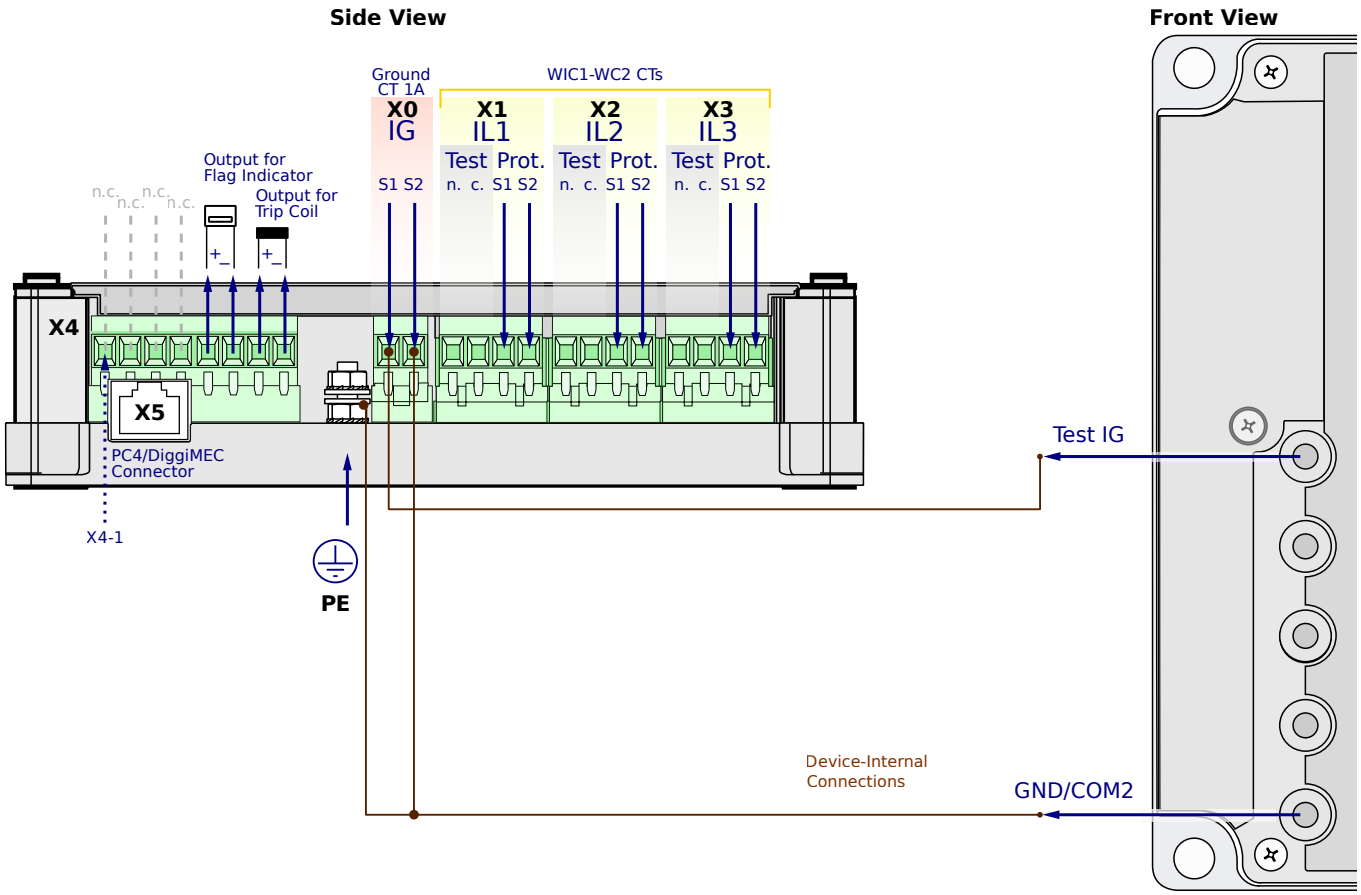


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2AAH

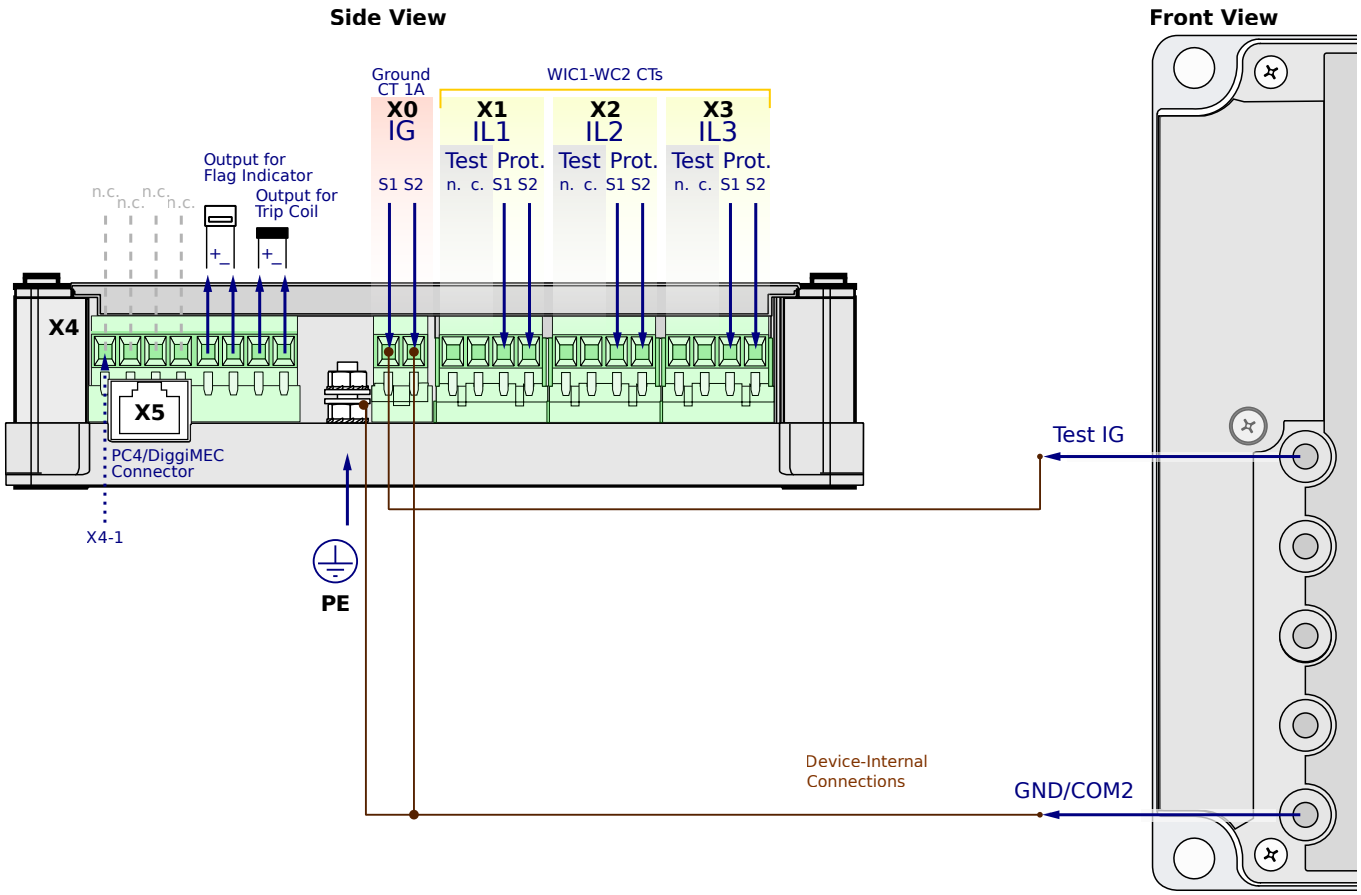


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2PA0

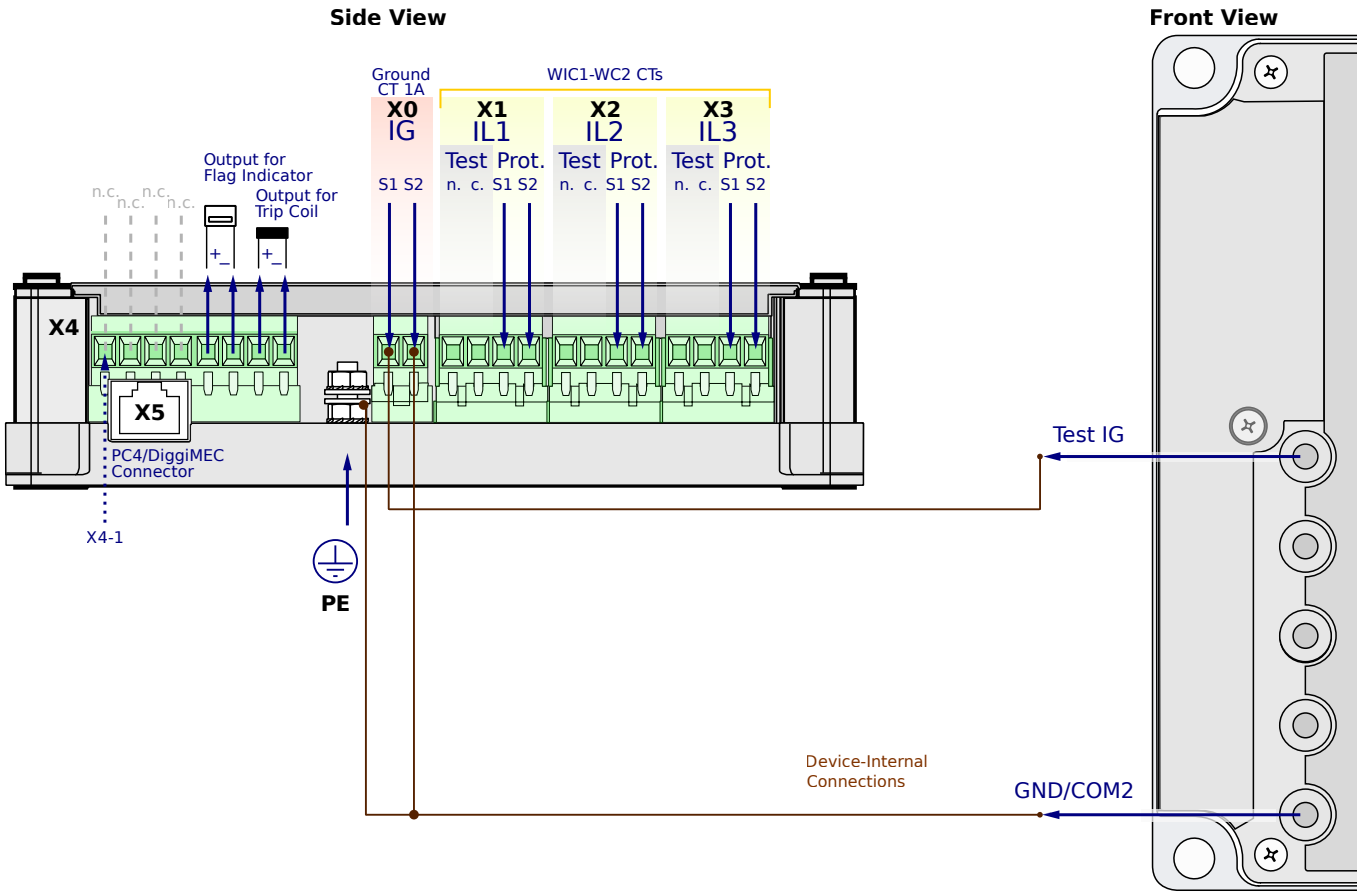


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NN2PAH

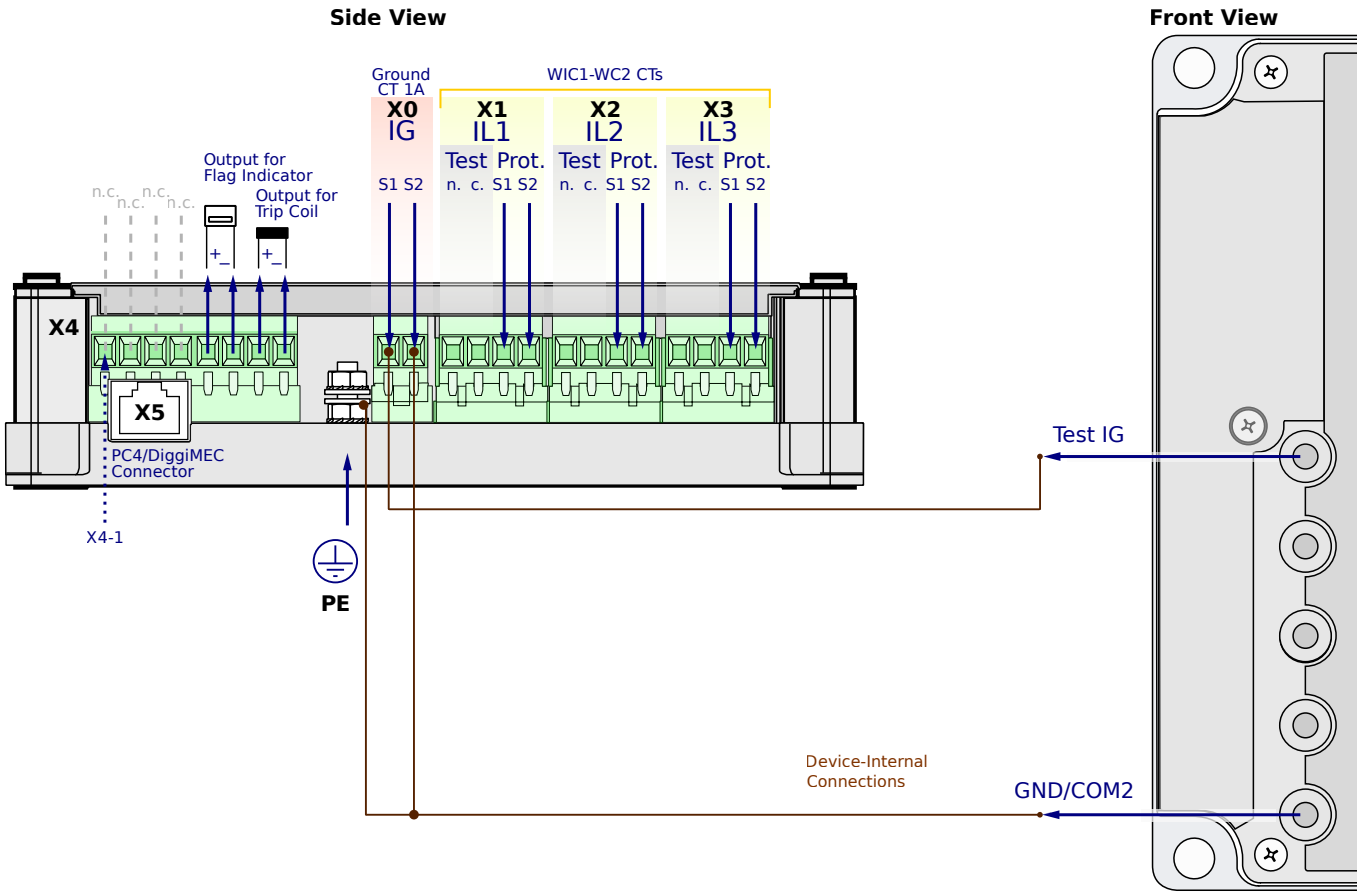


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0SA0

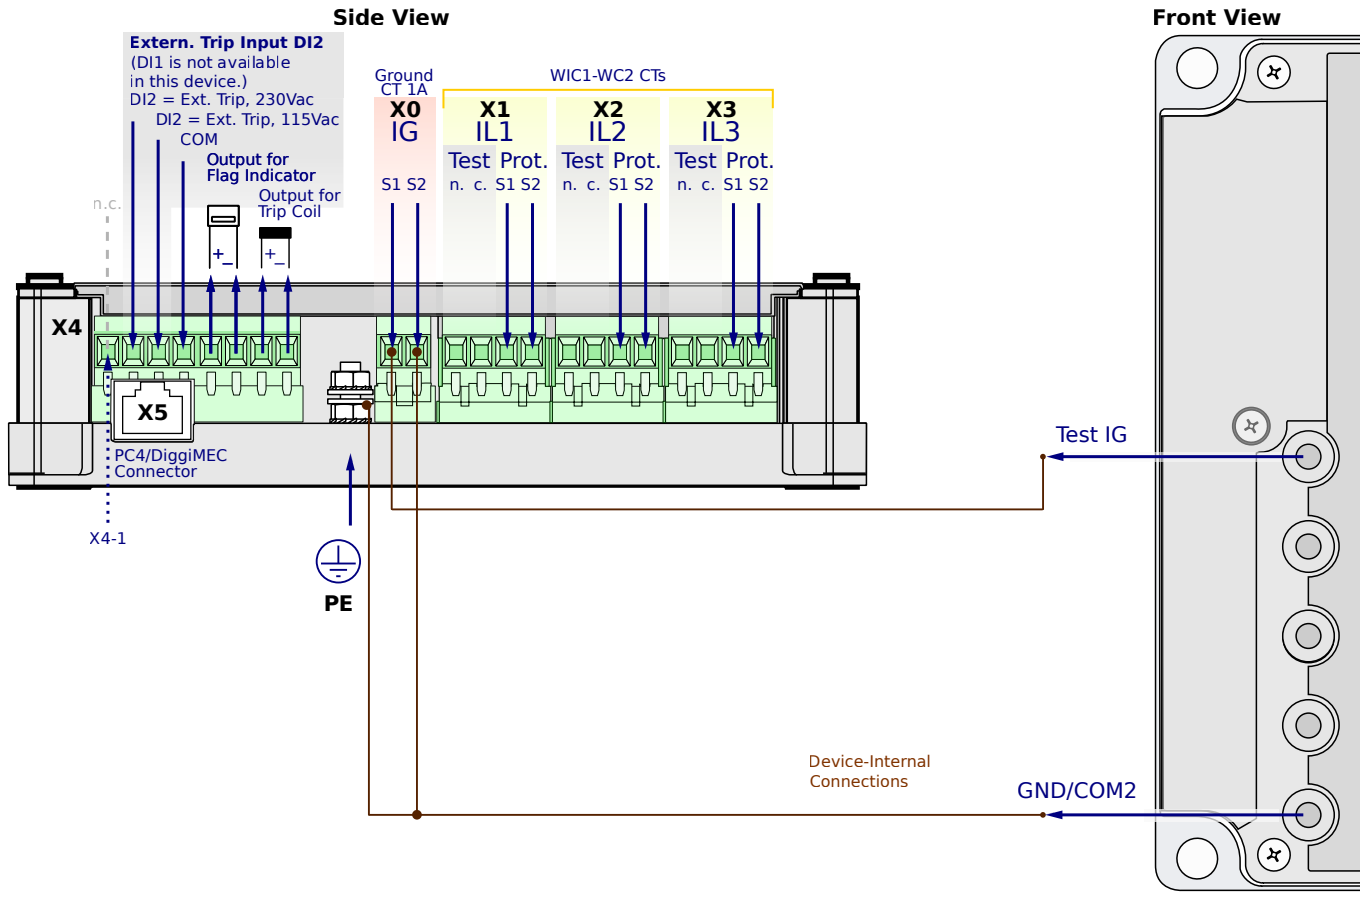


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0SAH

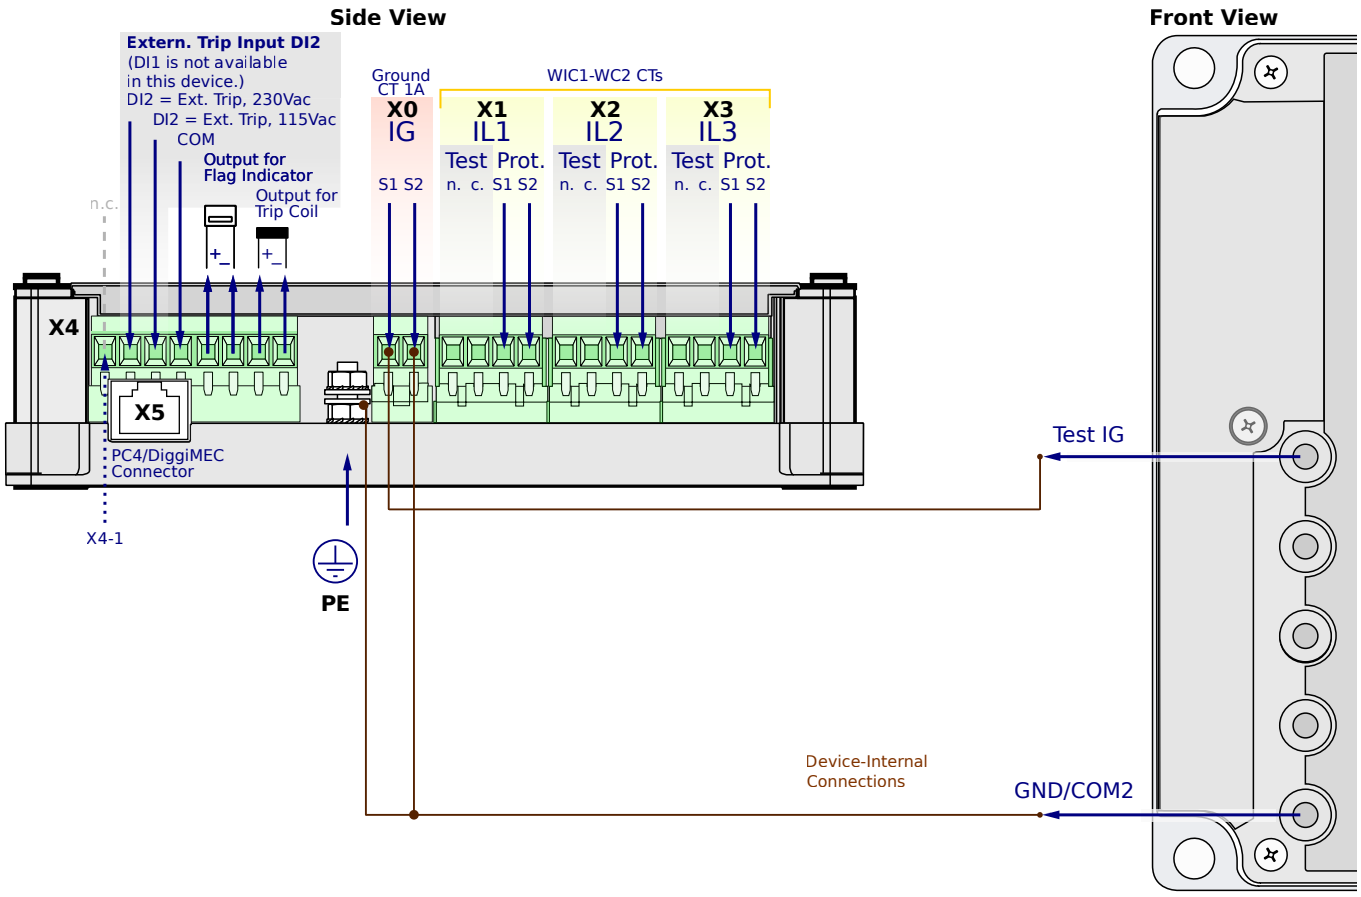


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0AA0

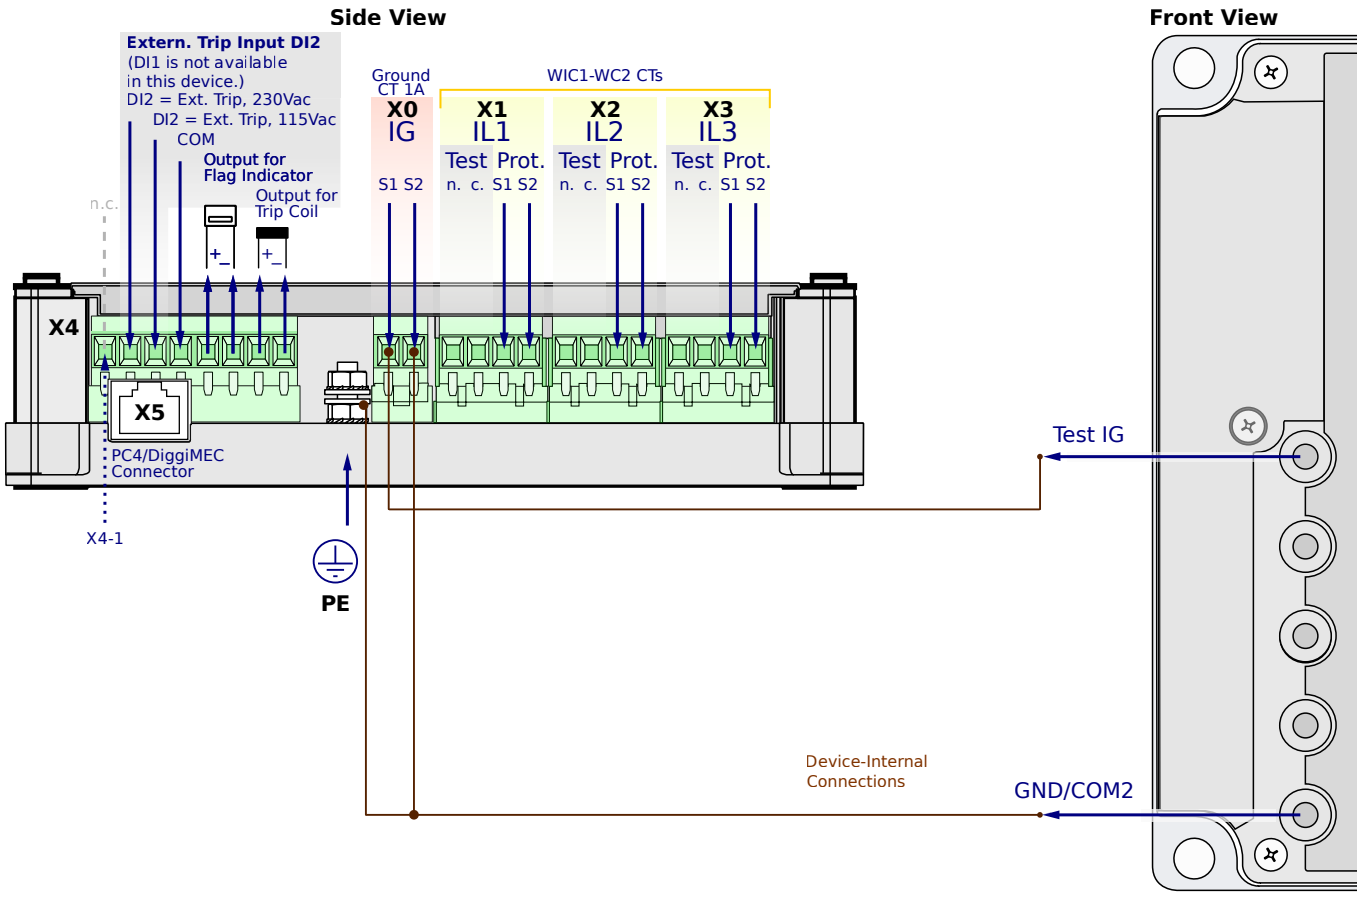


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0AAH

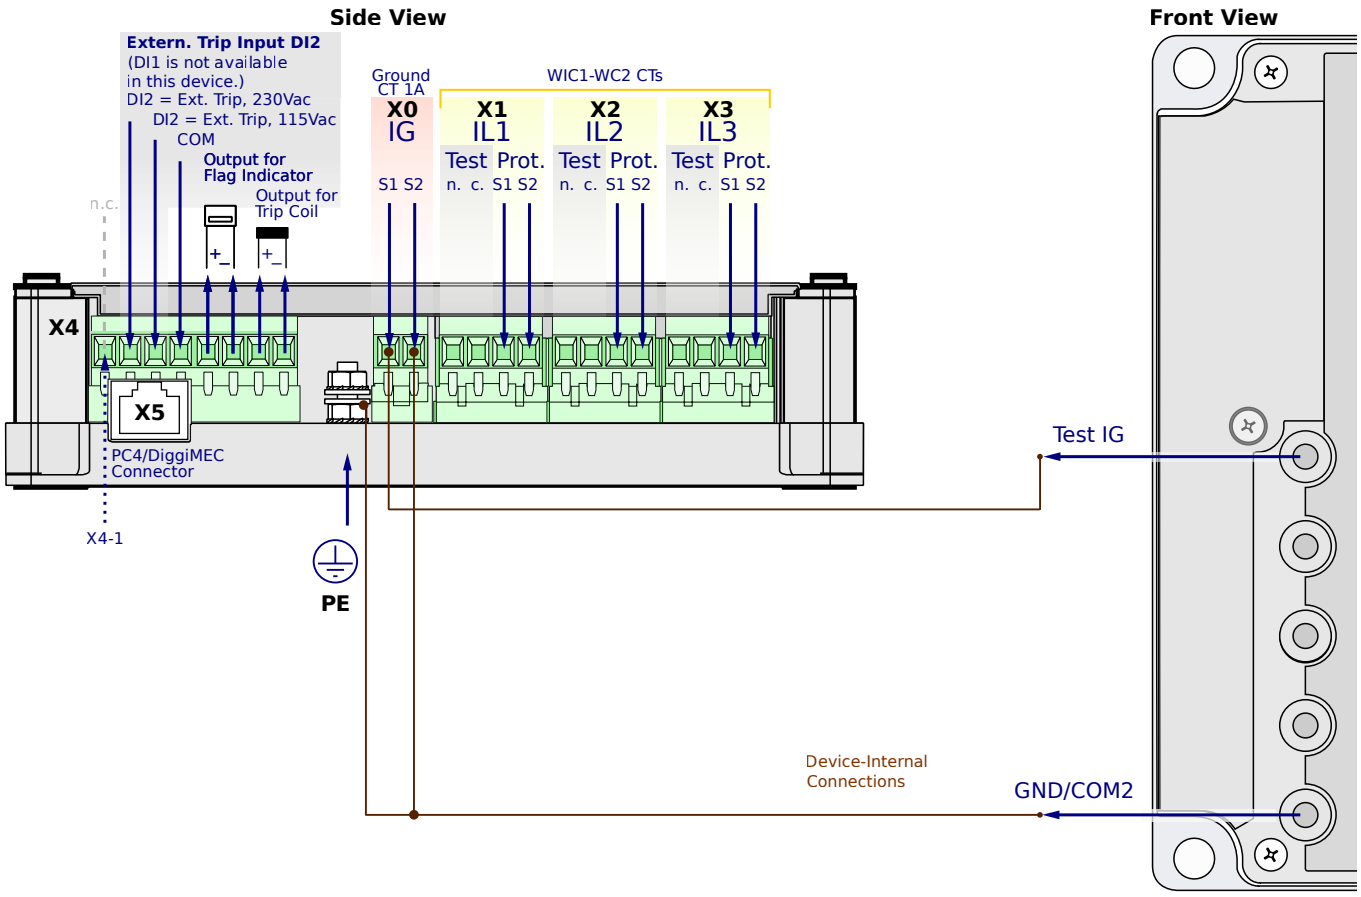


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0PA0

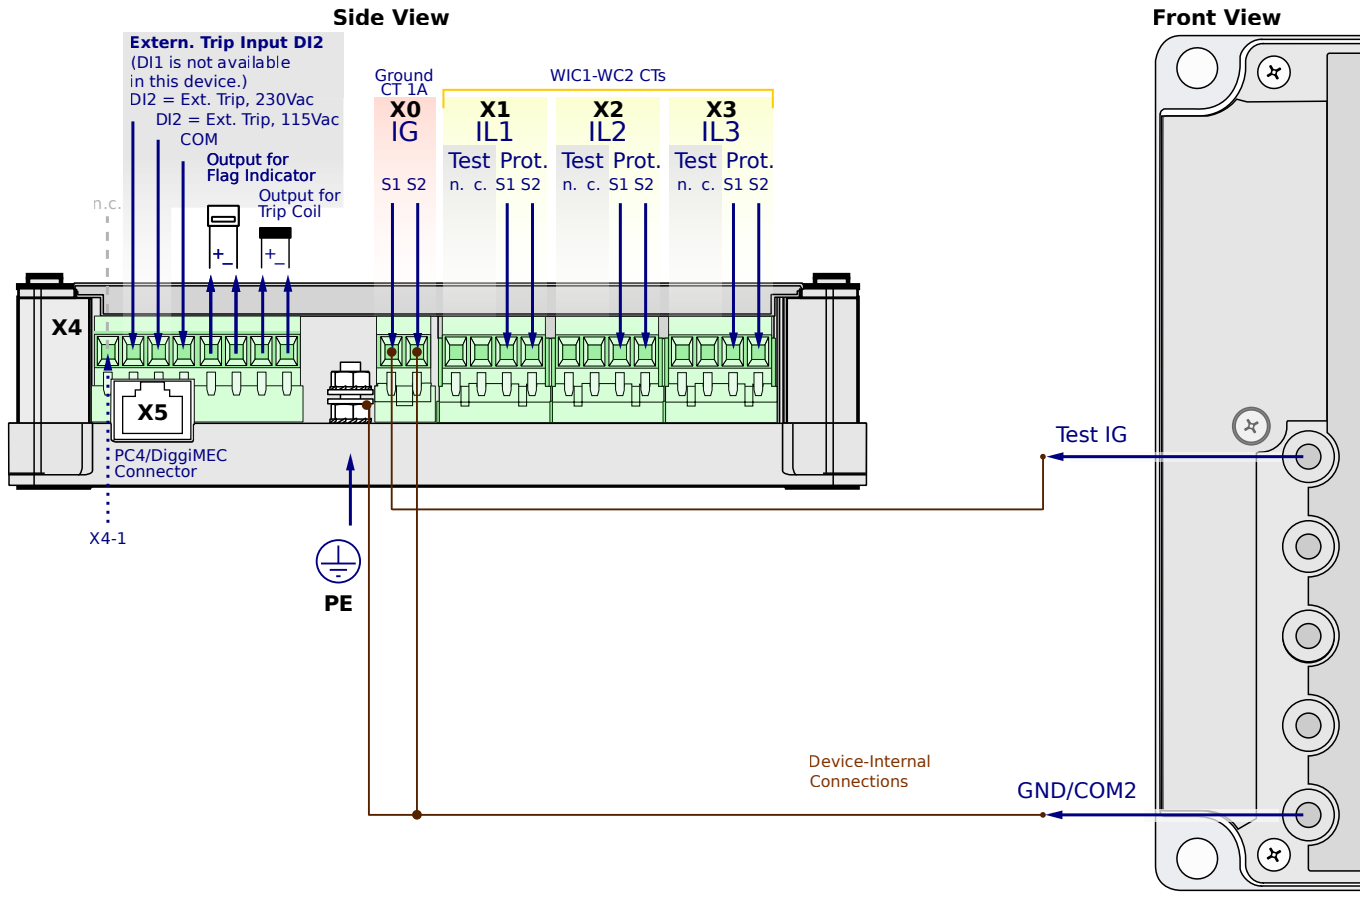


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF0PAH

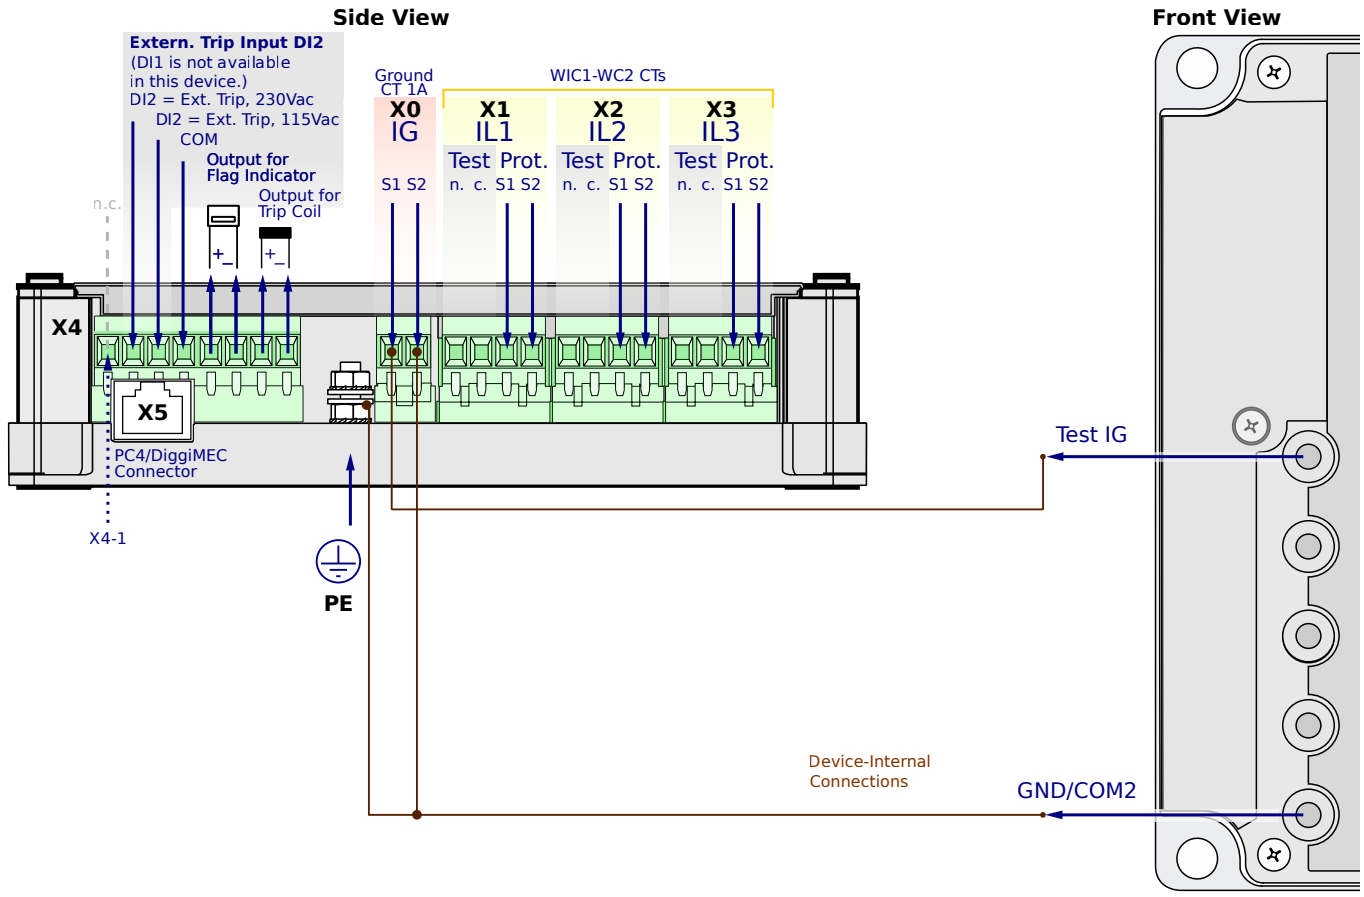


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1SA0

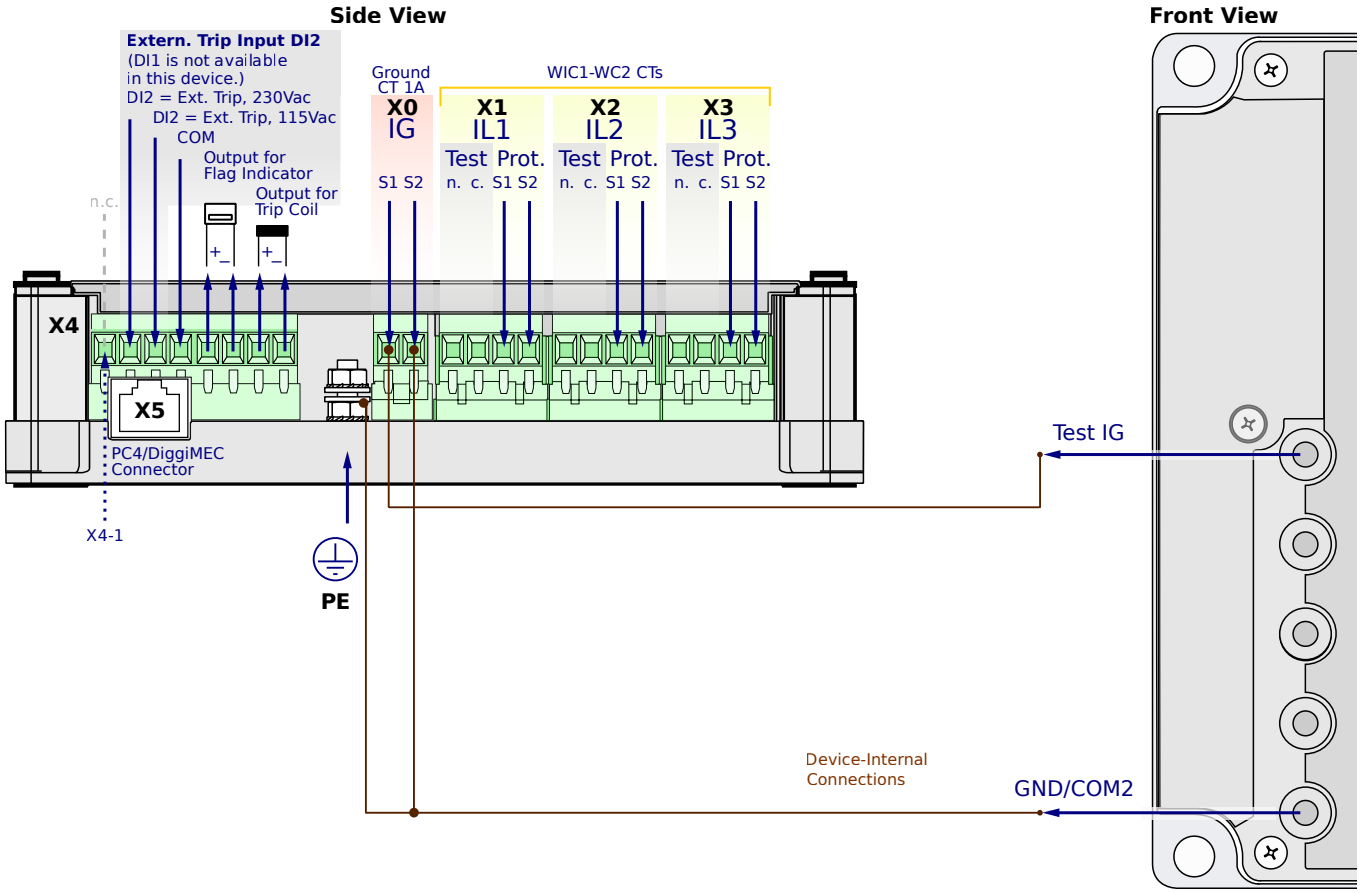


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1SAH

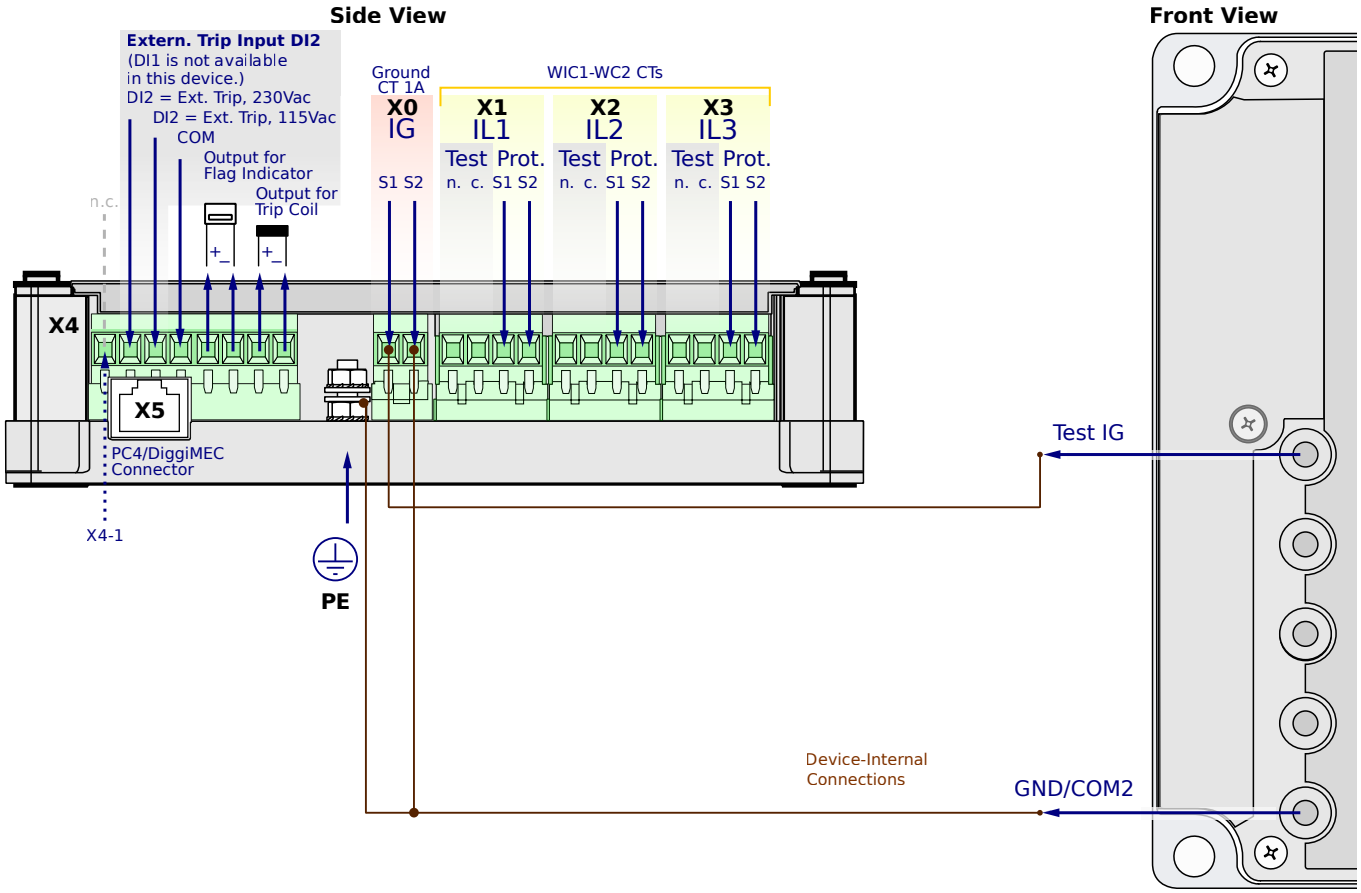


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1AA0

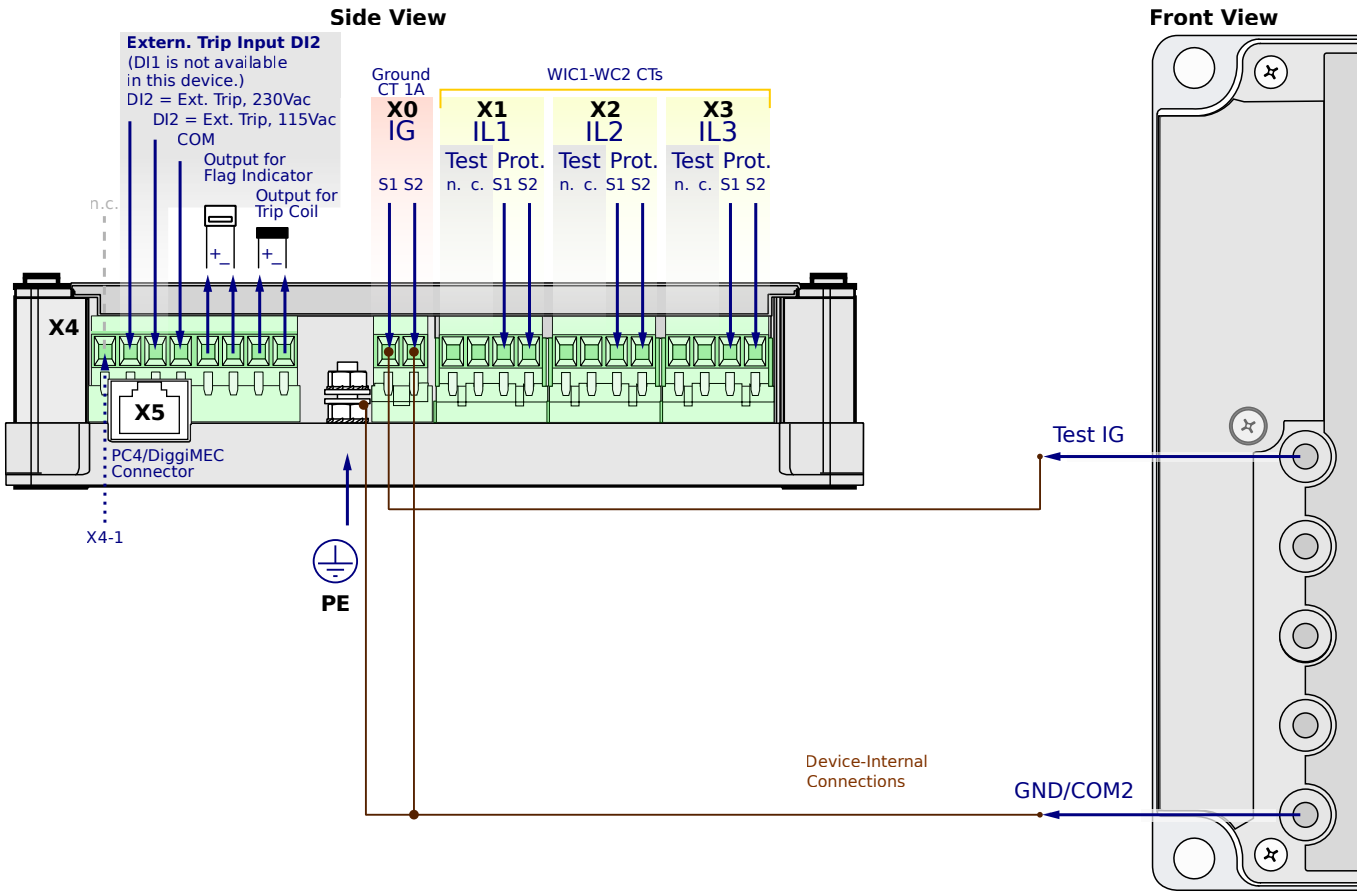


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1AAH

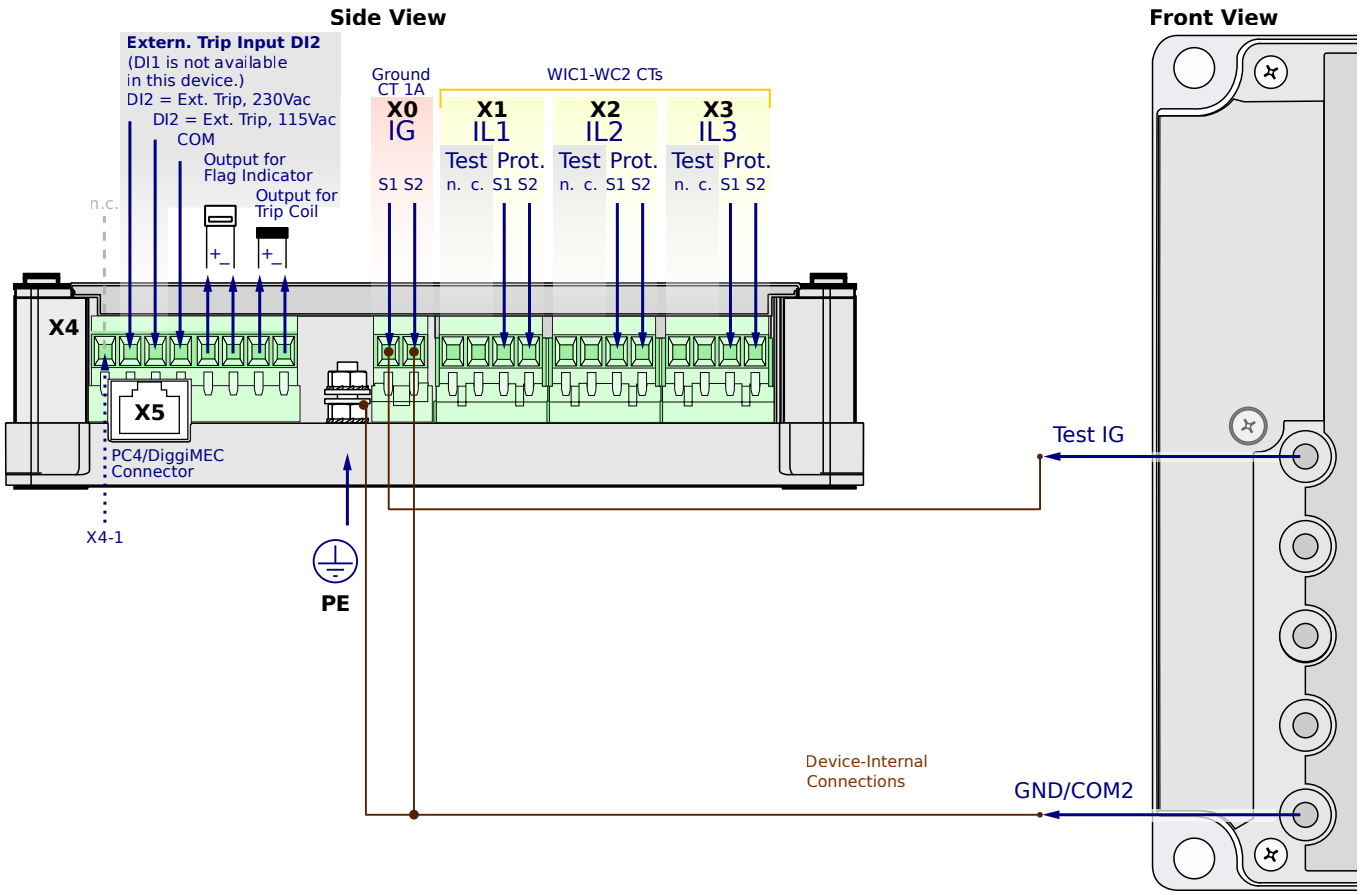


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1PA0

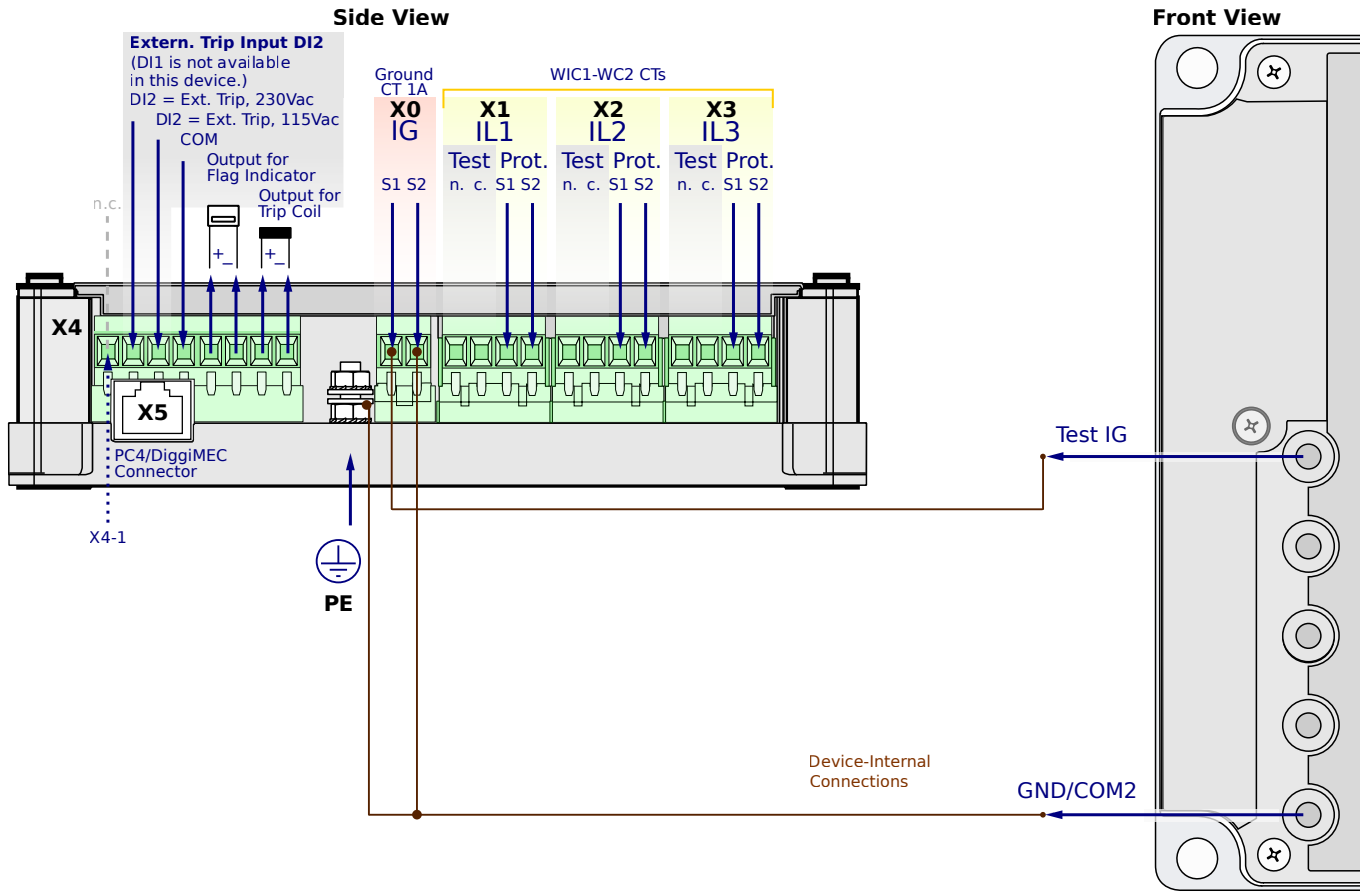


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF1PAH

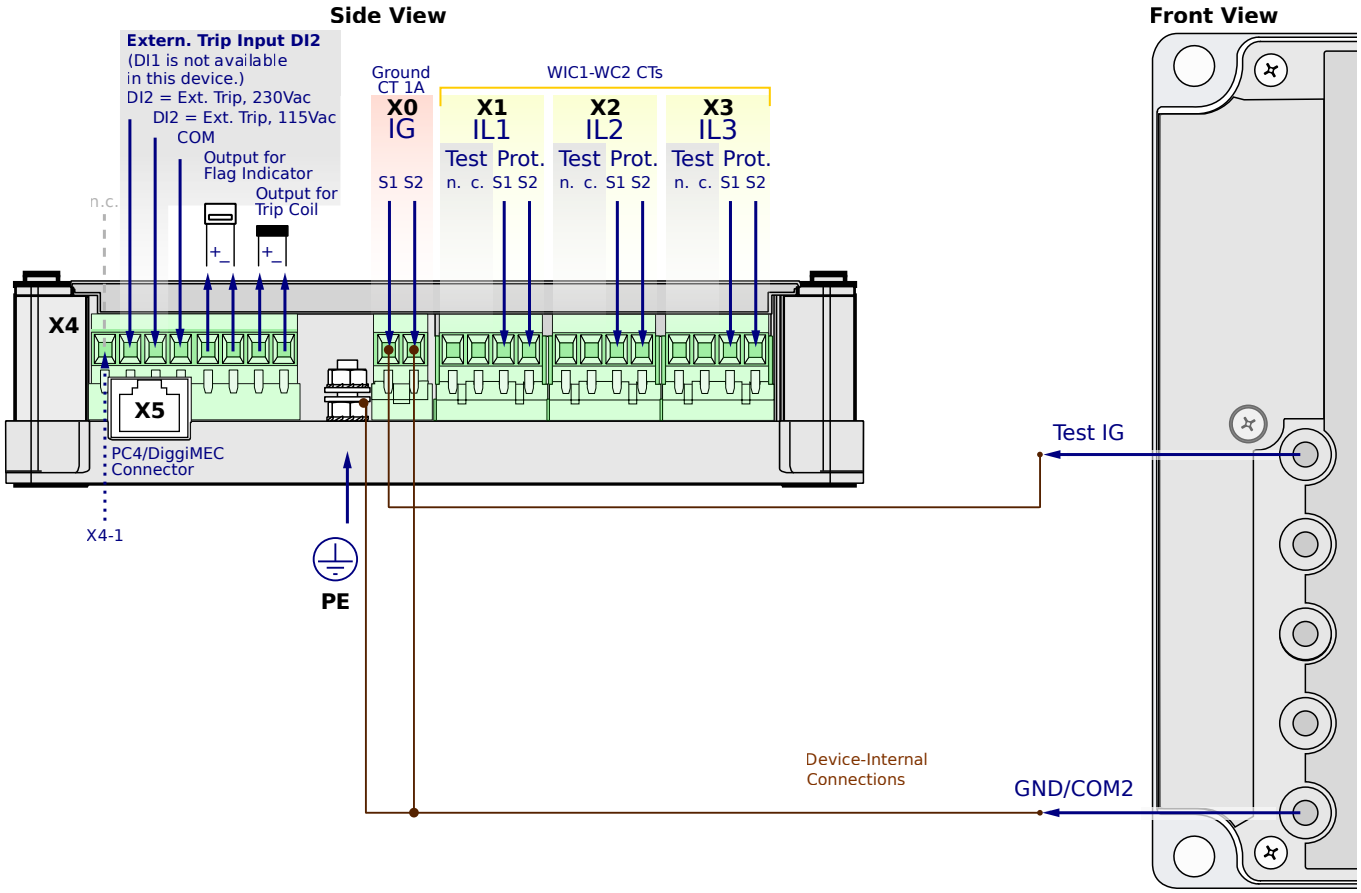


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2SA0

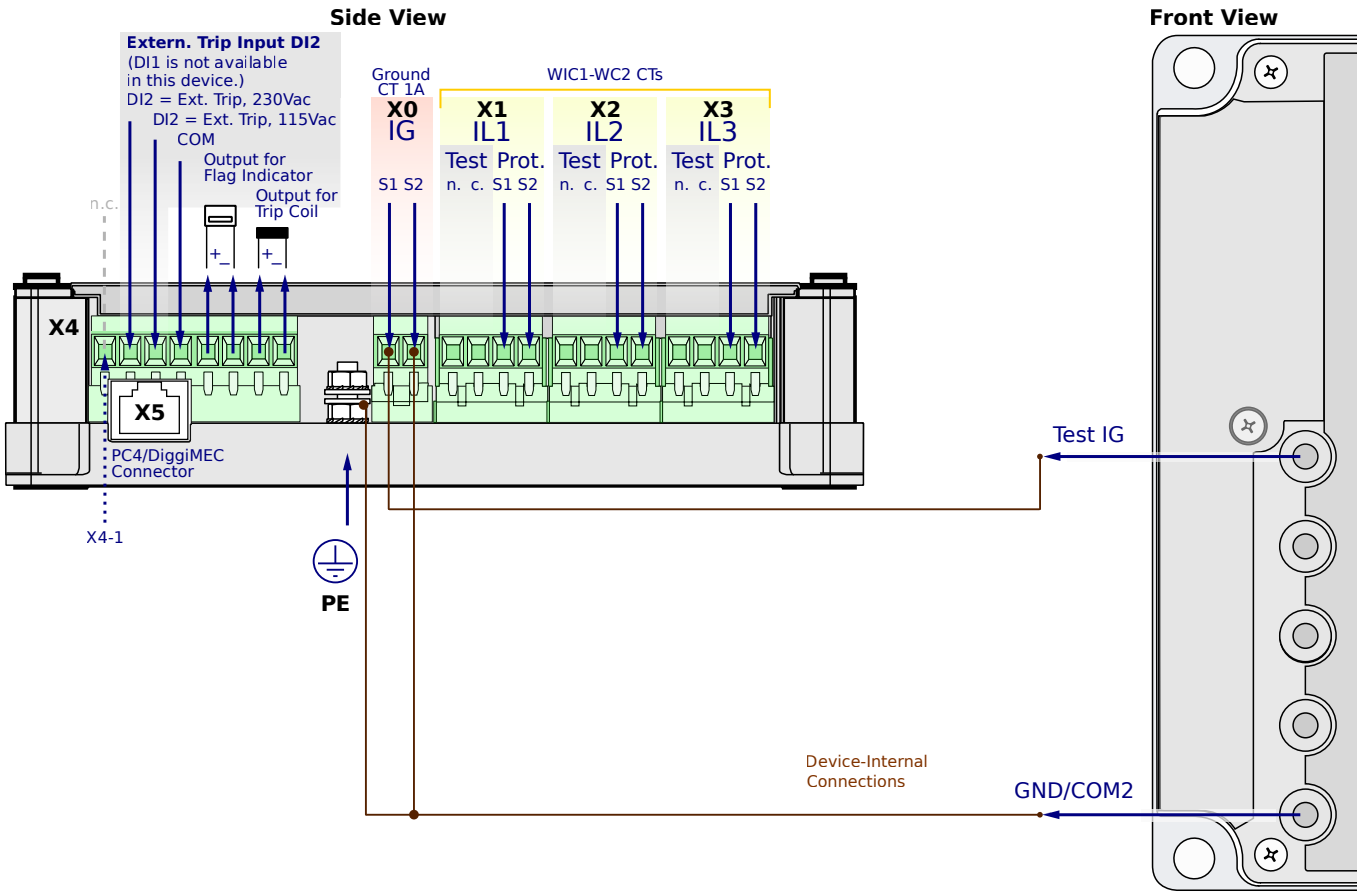


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2SAH

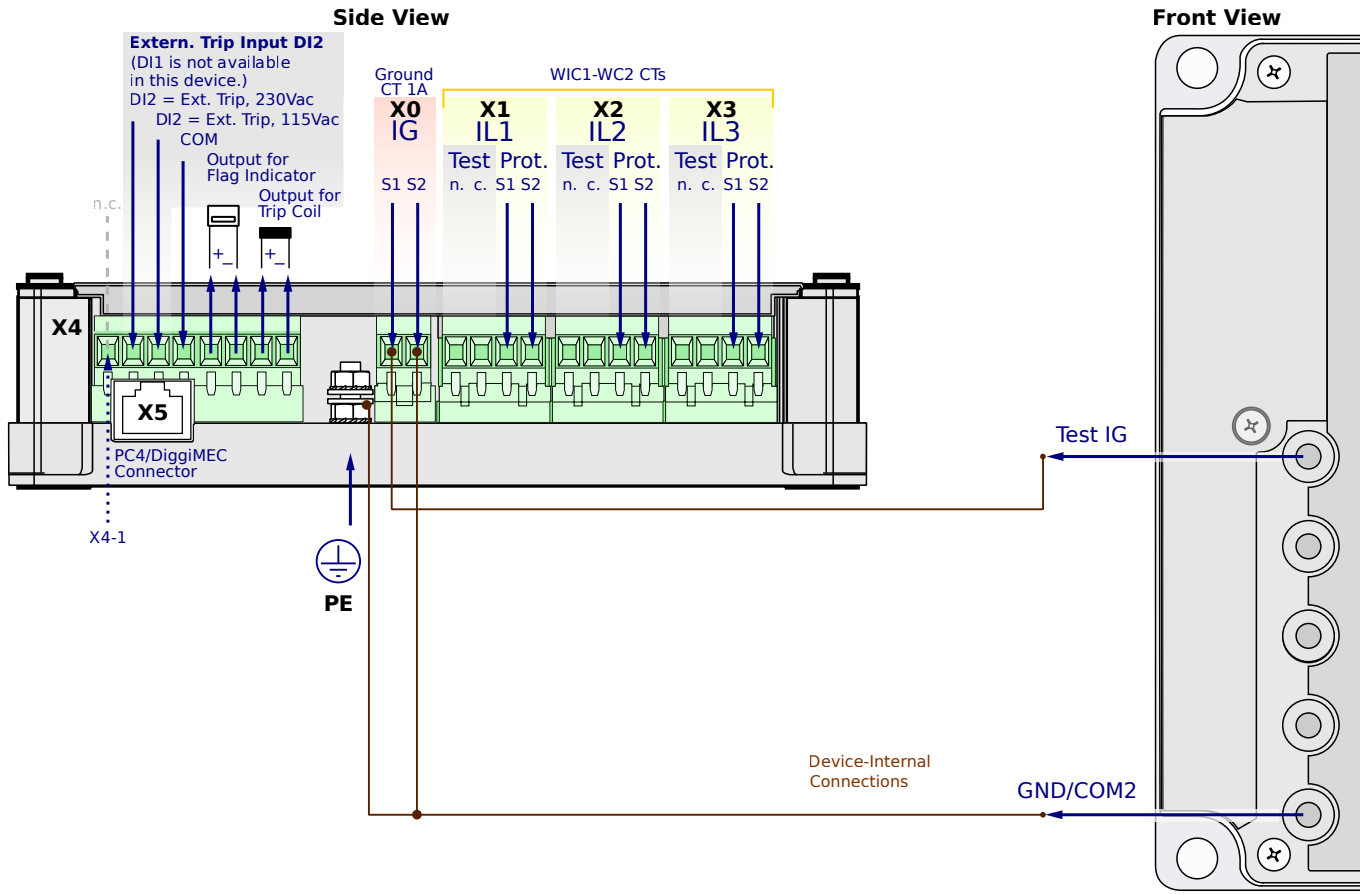


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2AA0

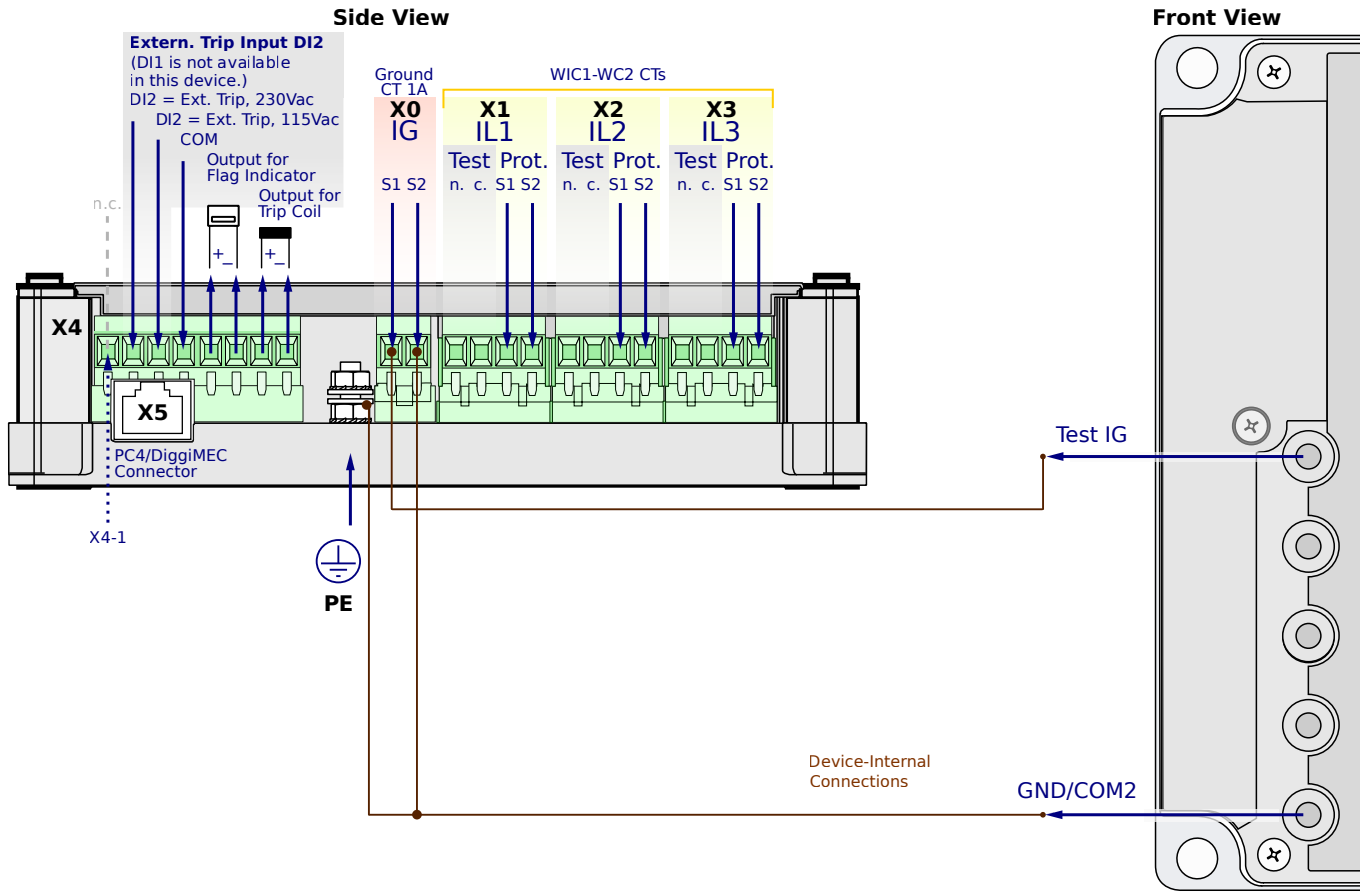


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2AAH

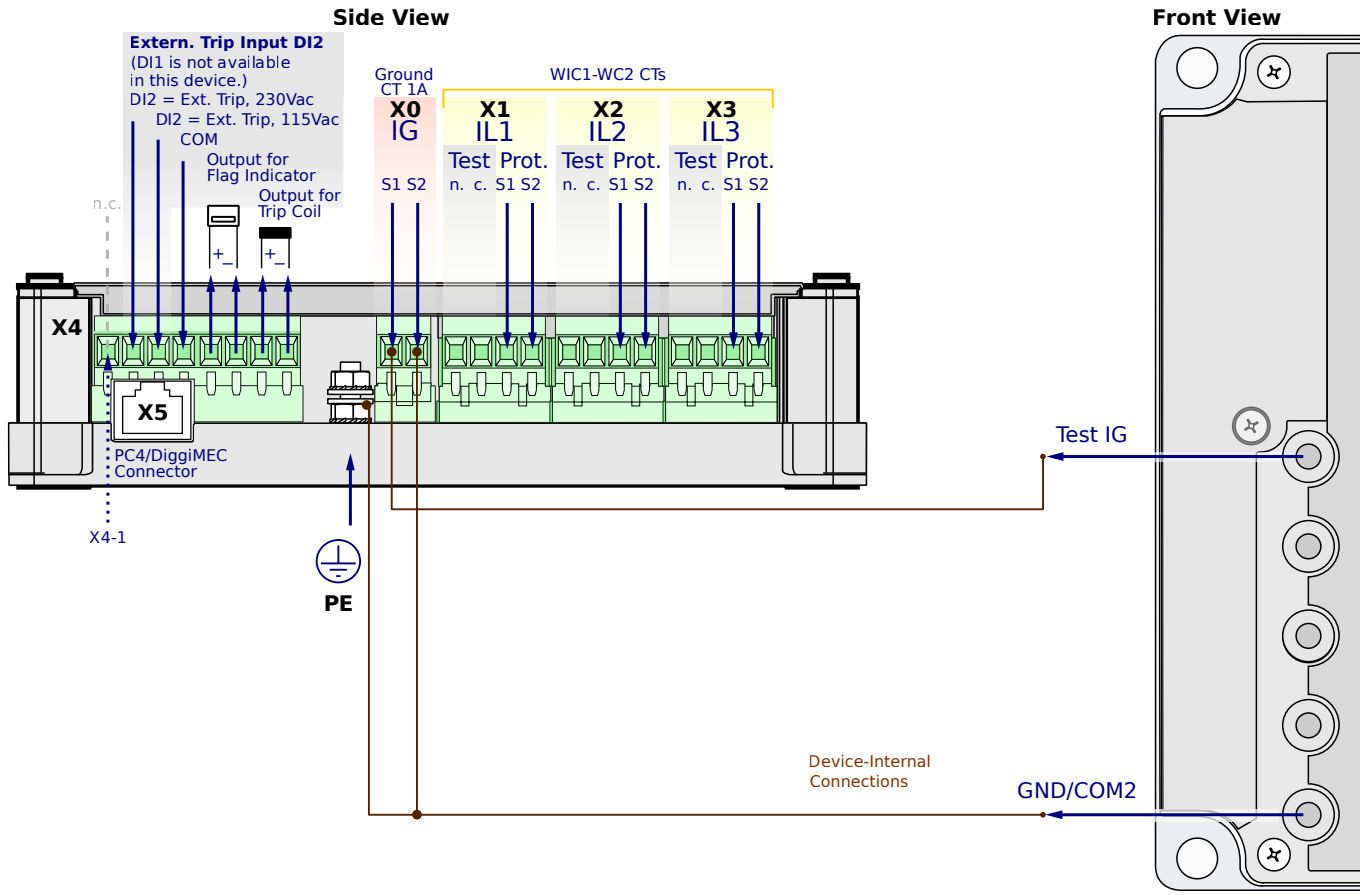


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2PA0

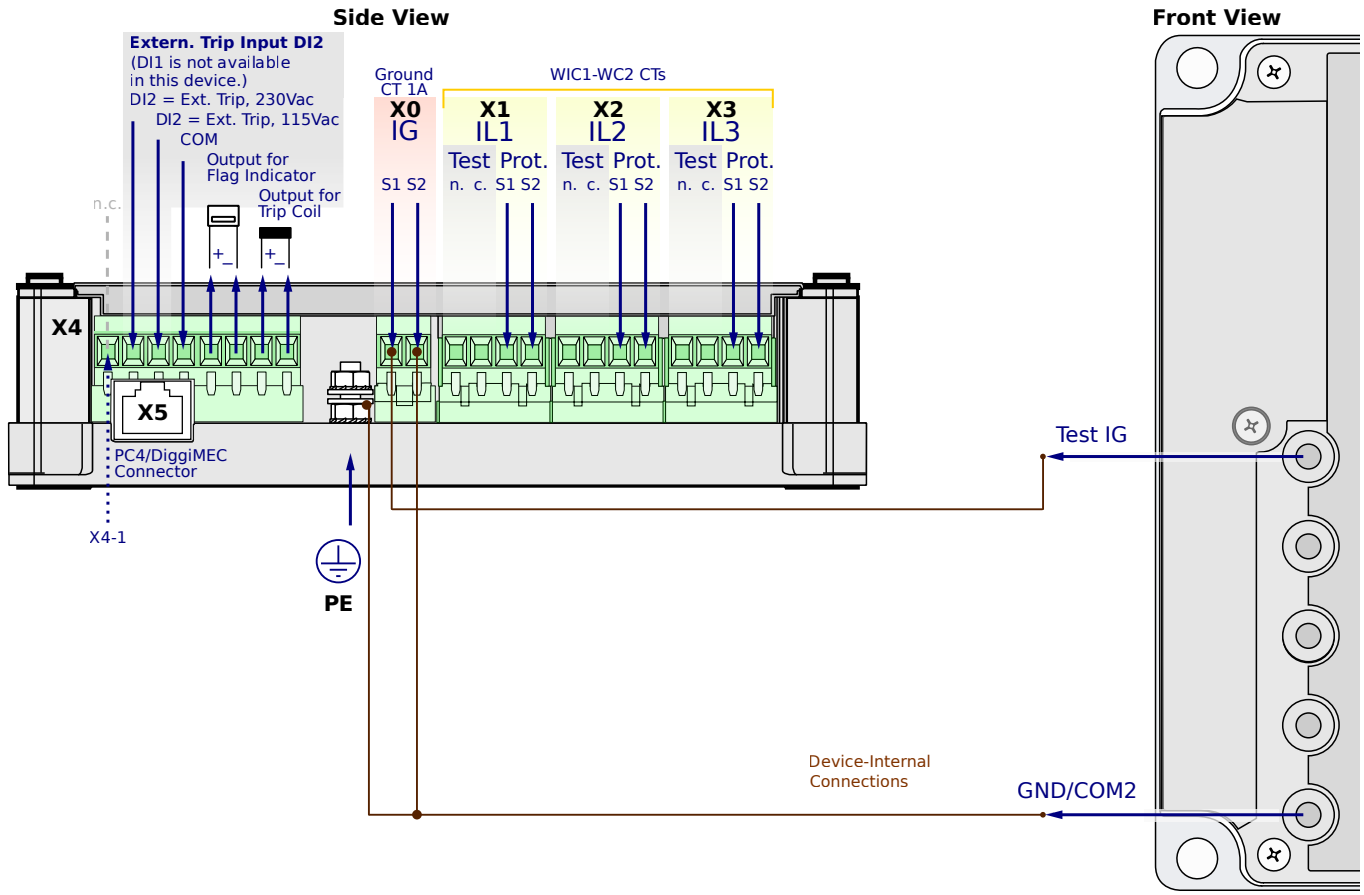


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NF2PAH

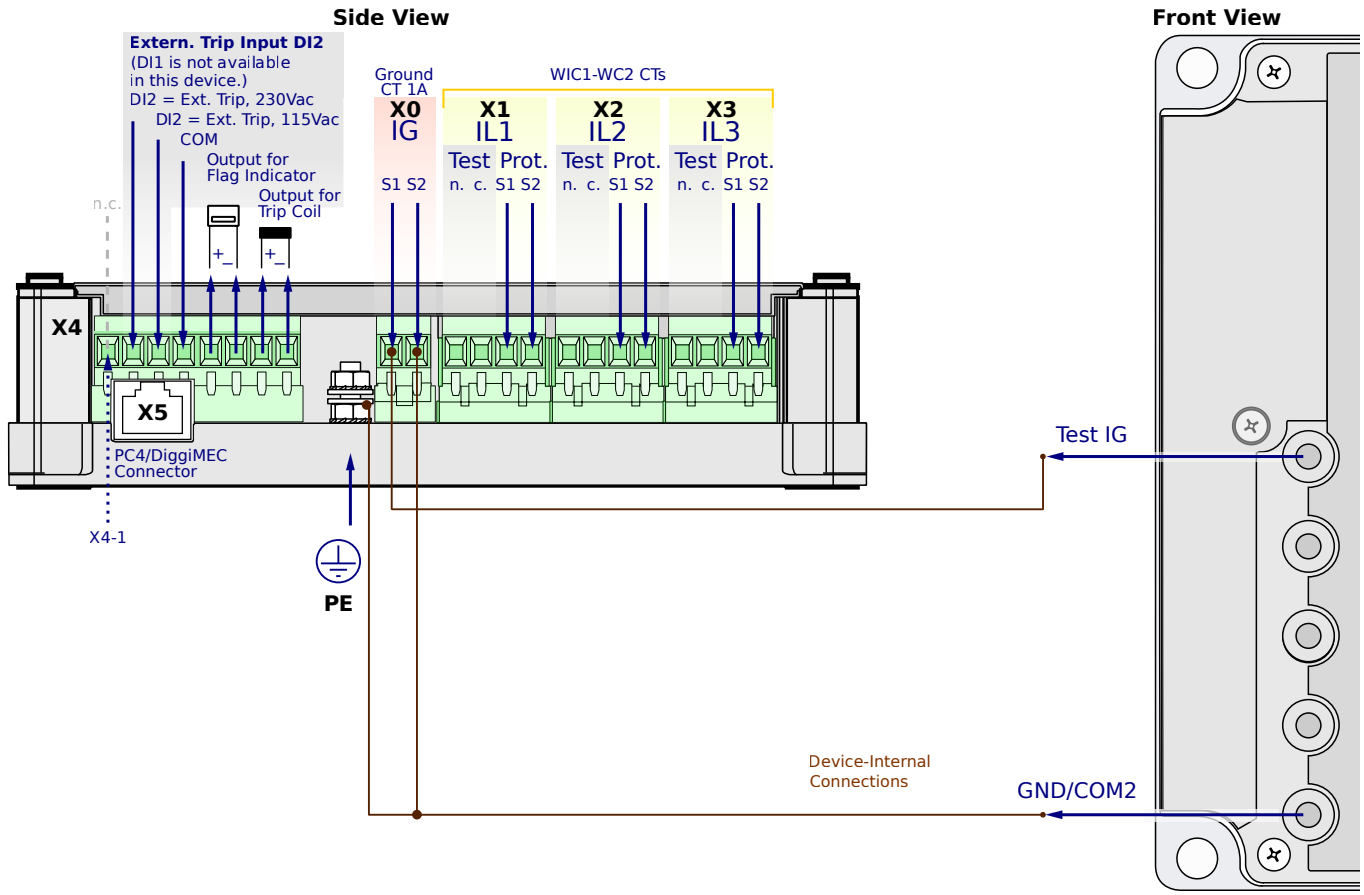


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0SA0

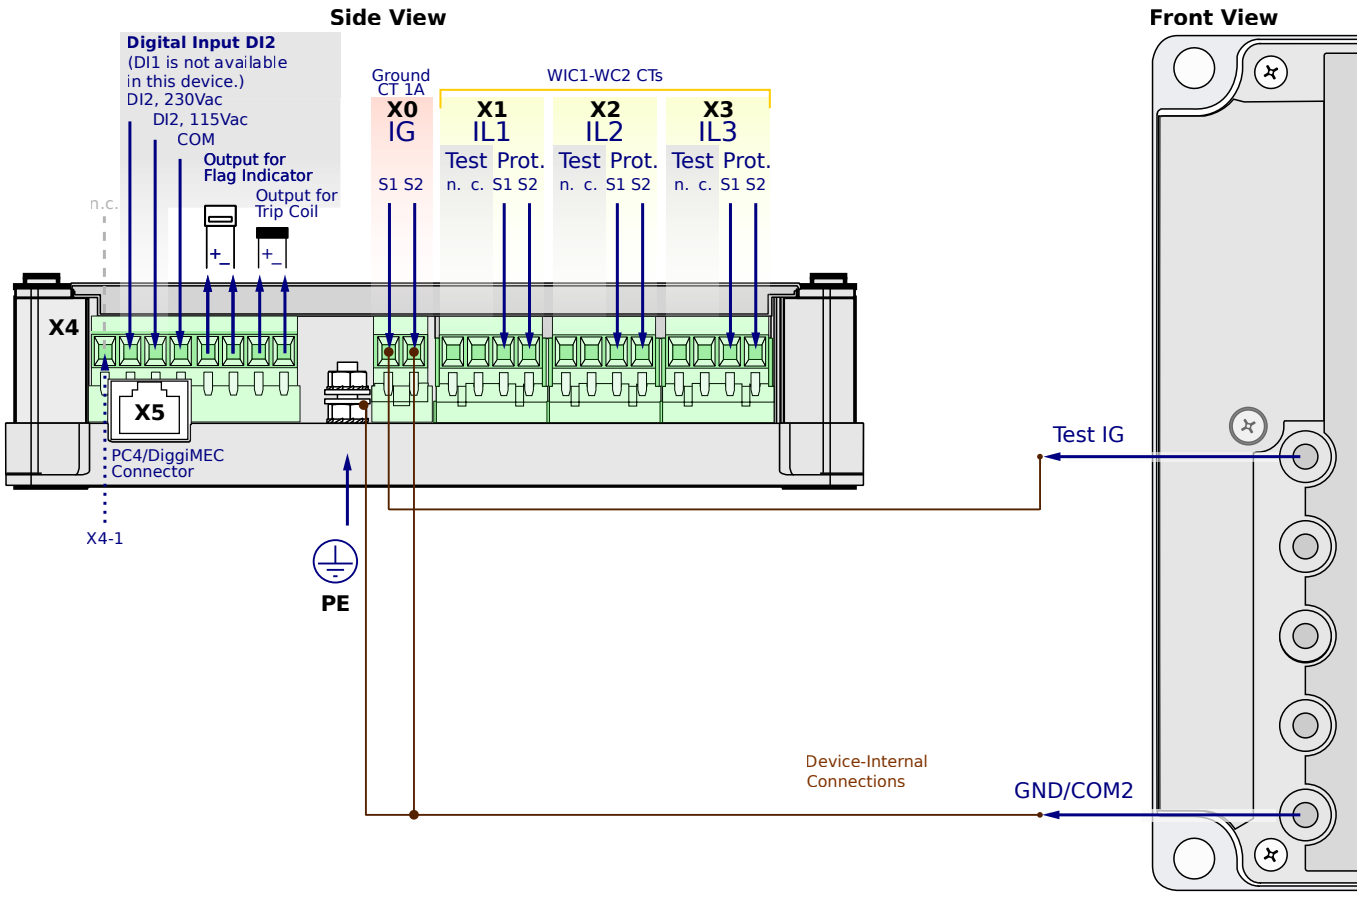


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0SAH

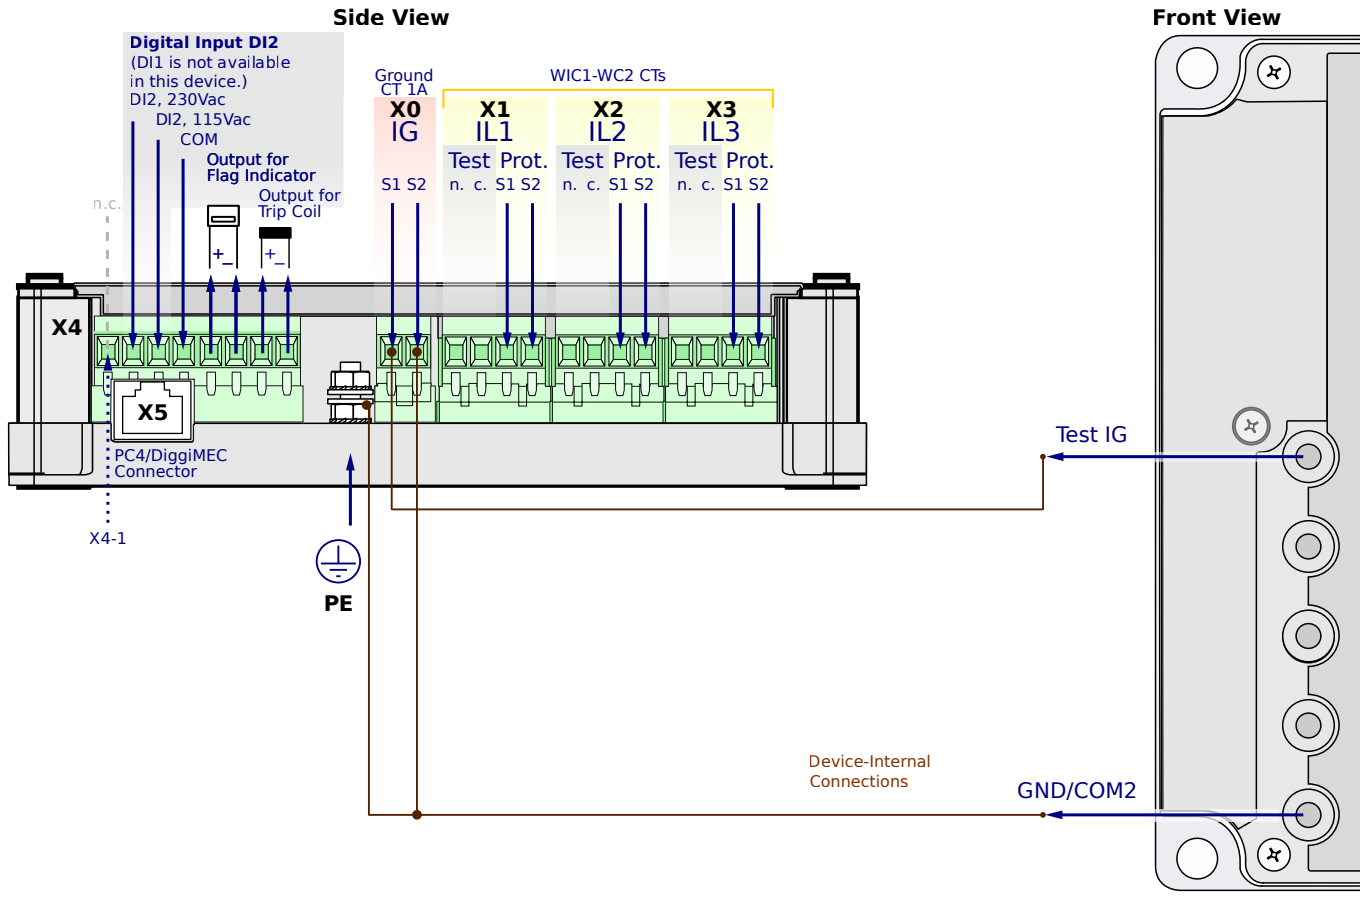


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0AA0

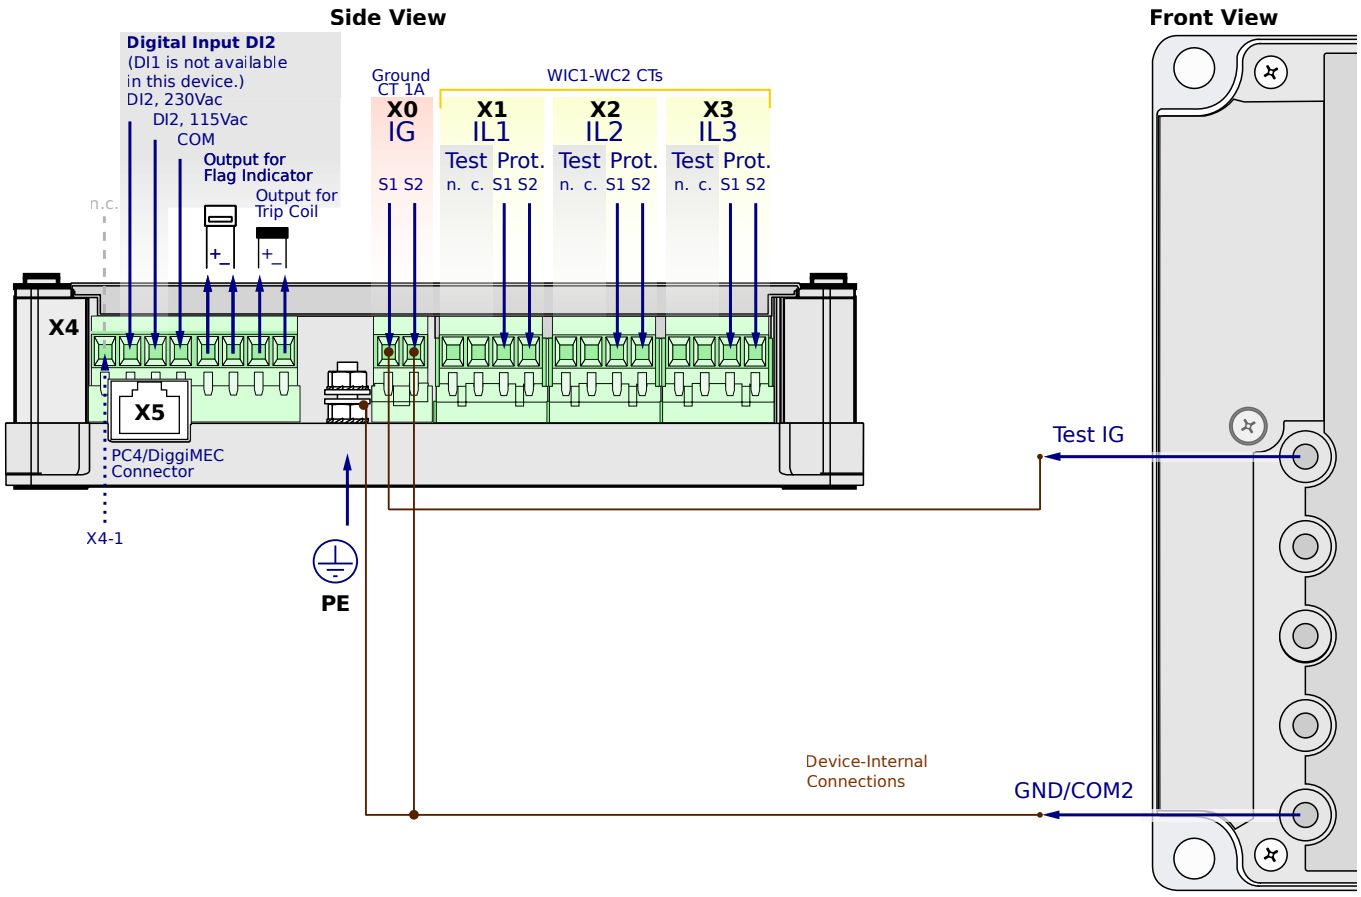


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0AAH

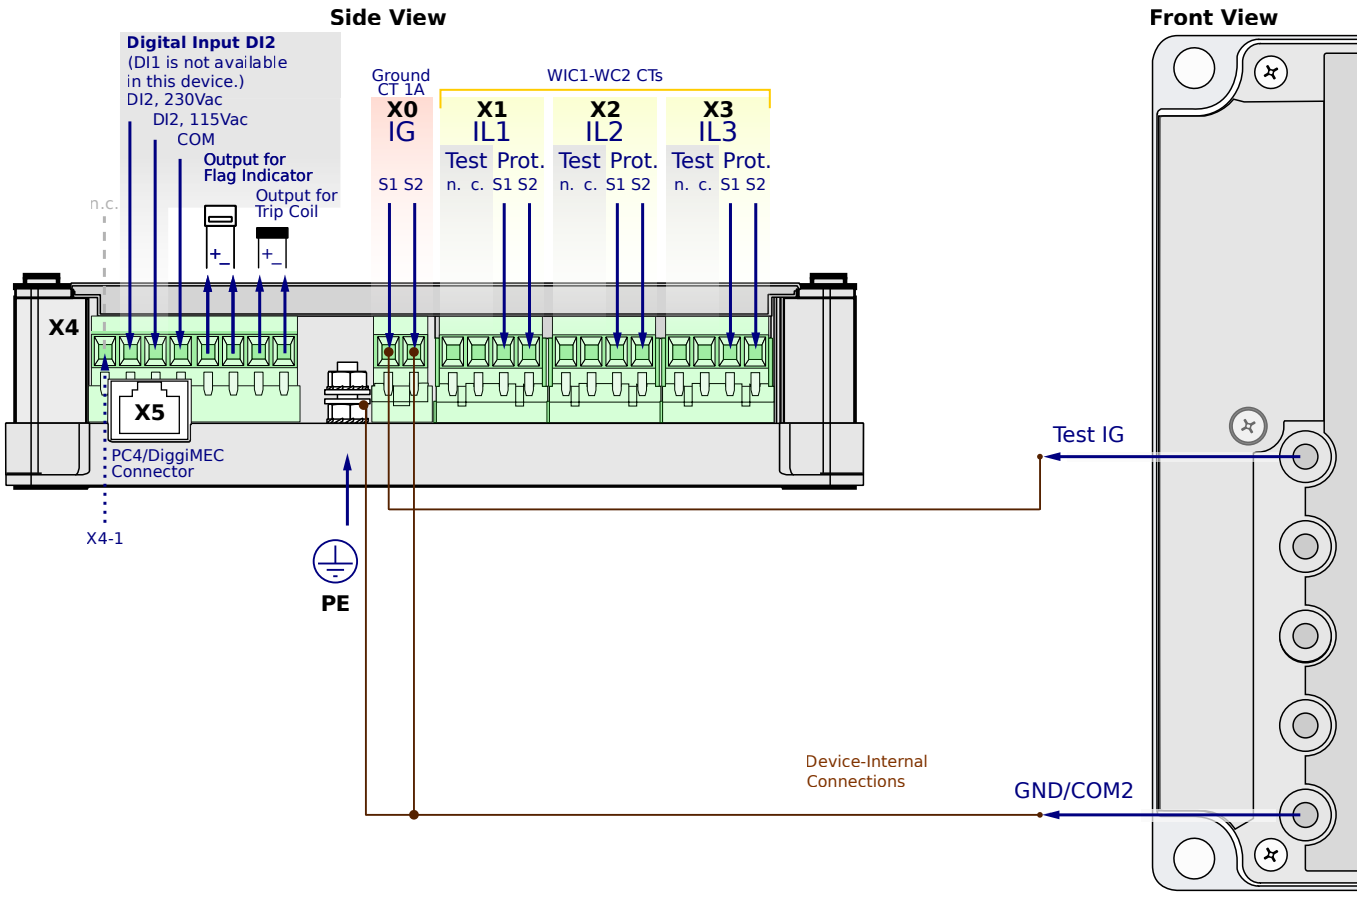


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0PA0

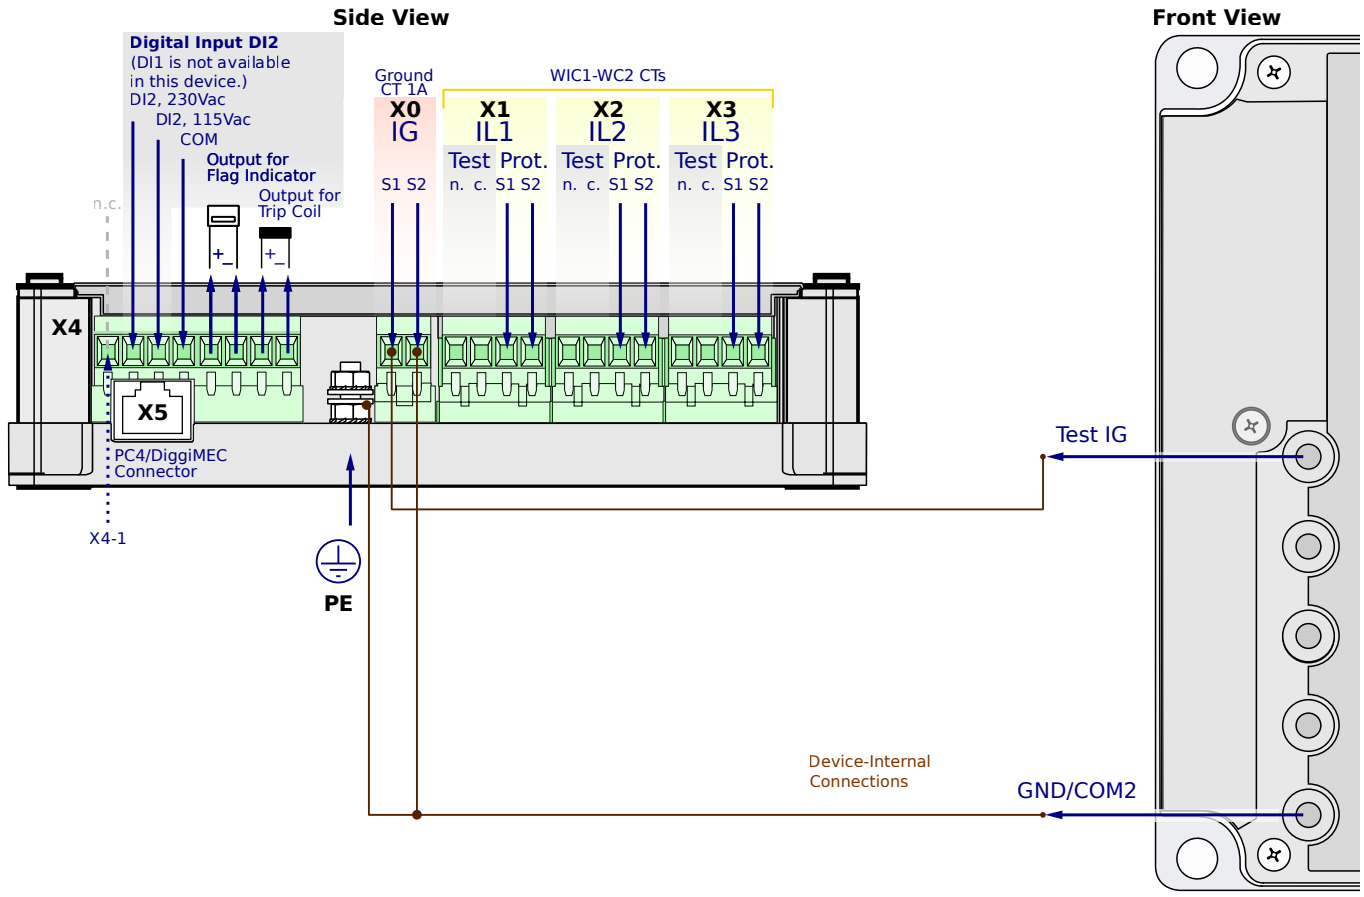


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC0PAH

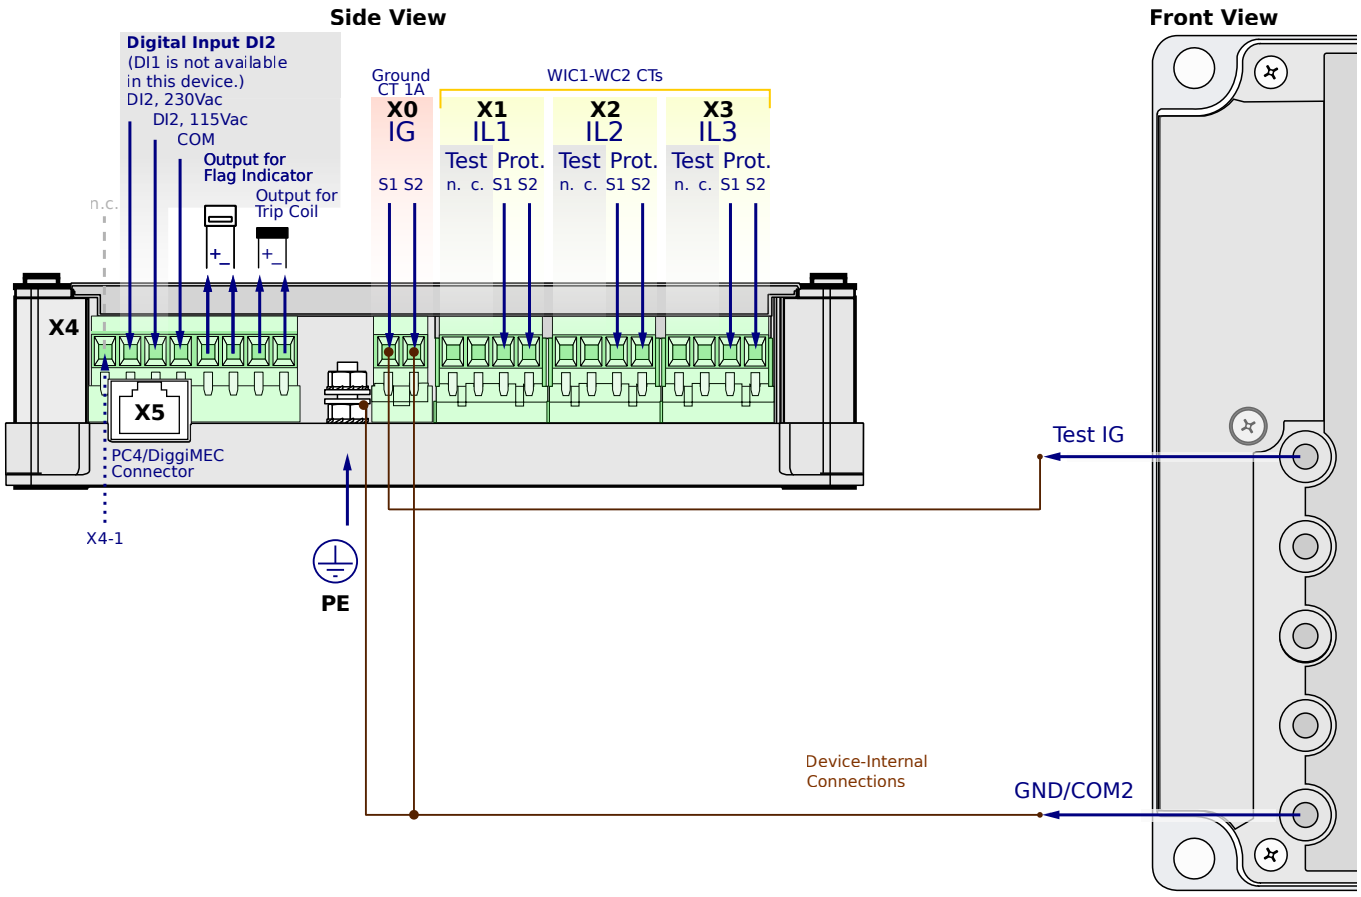


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1SA0

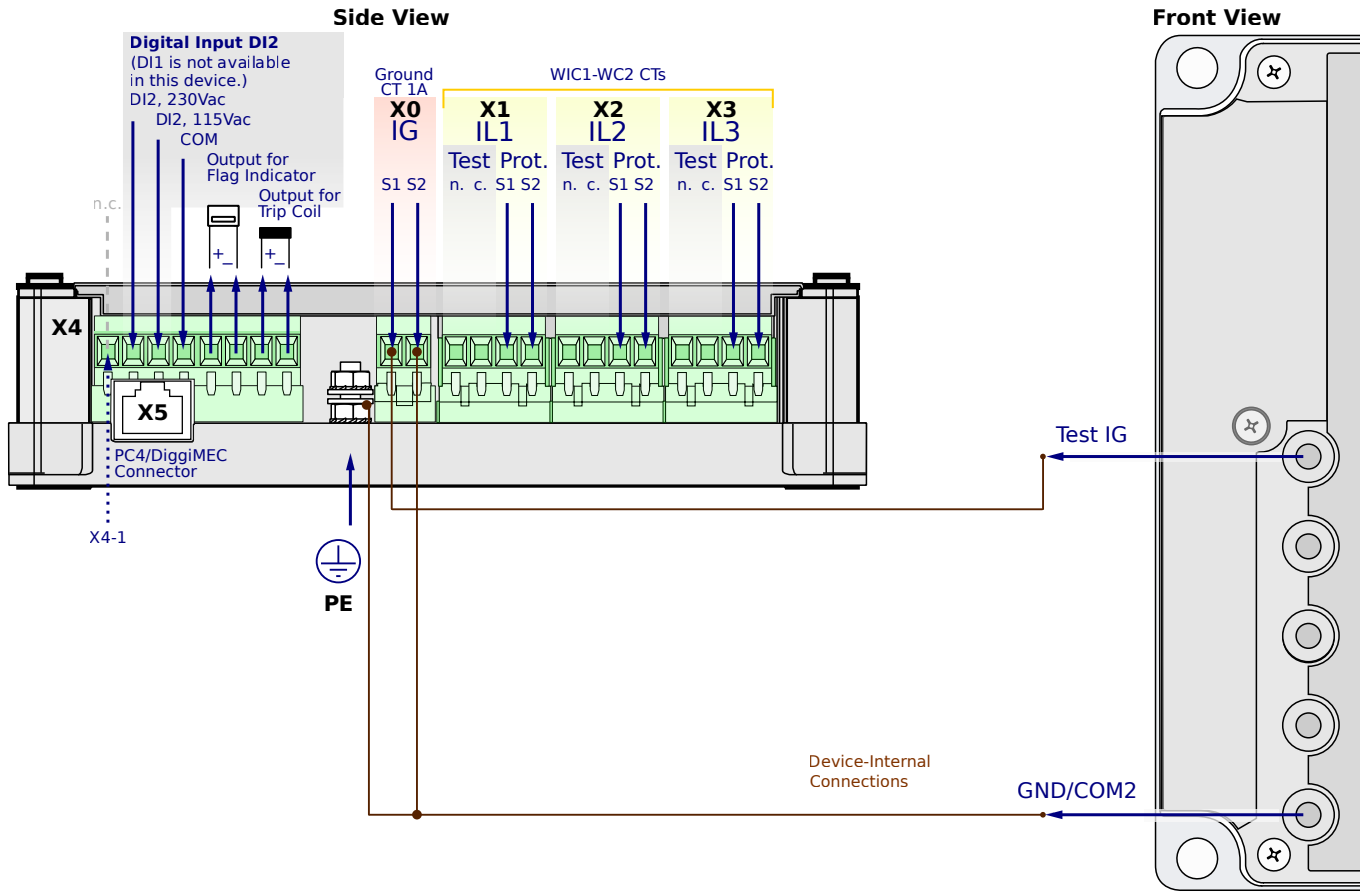


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1SAH

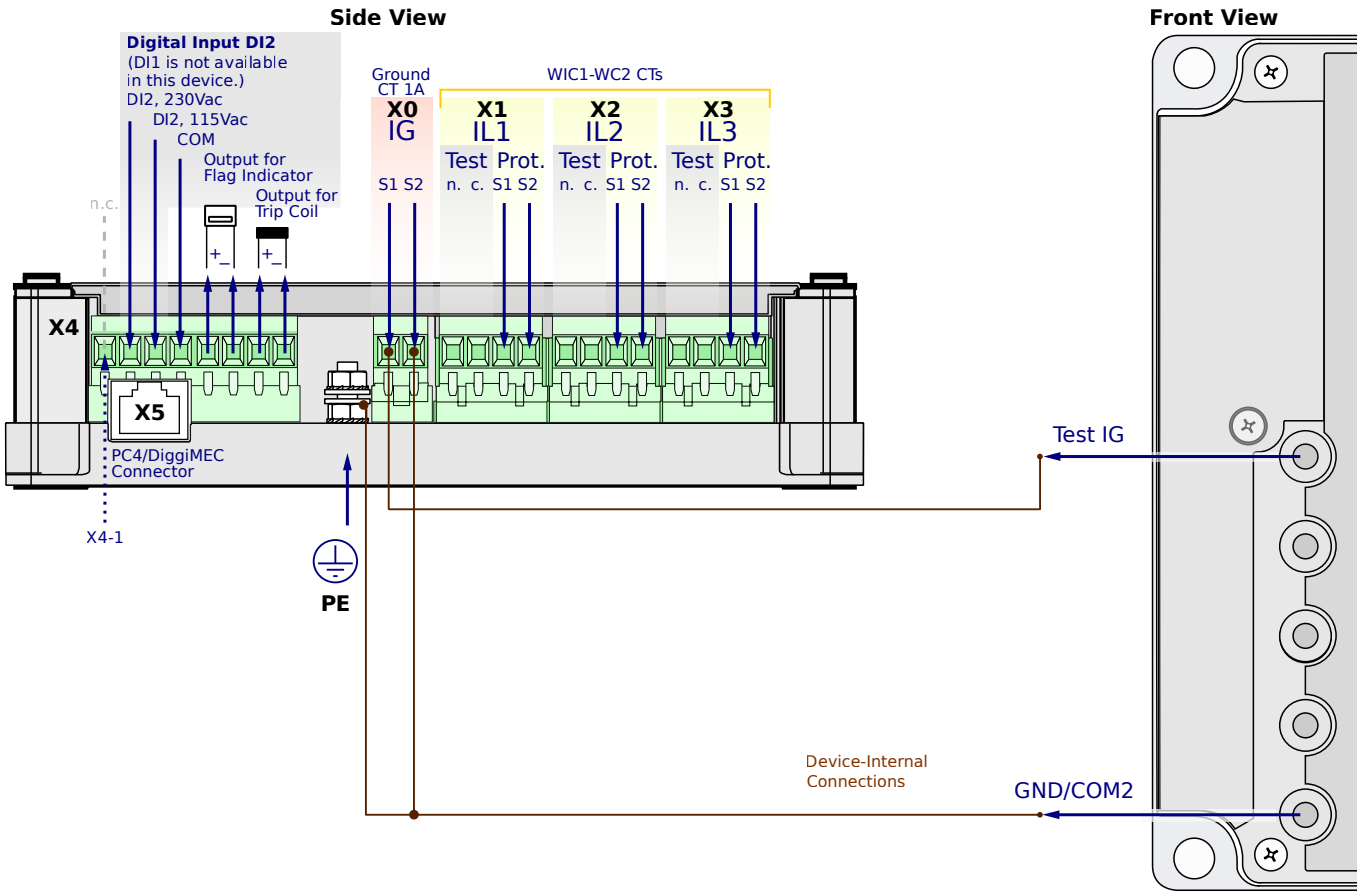


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1AA0

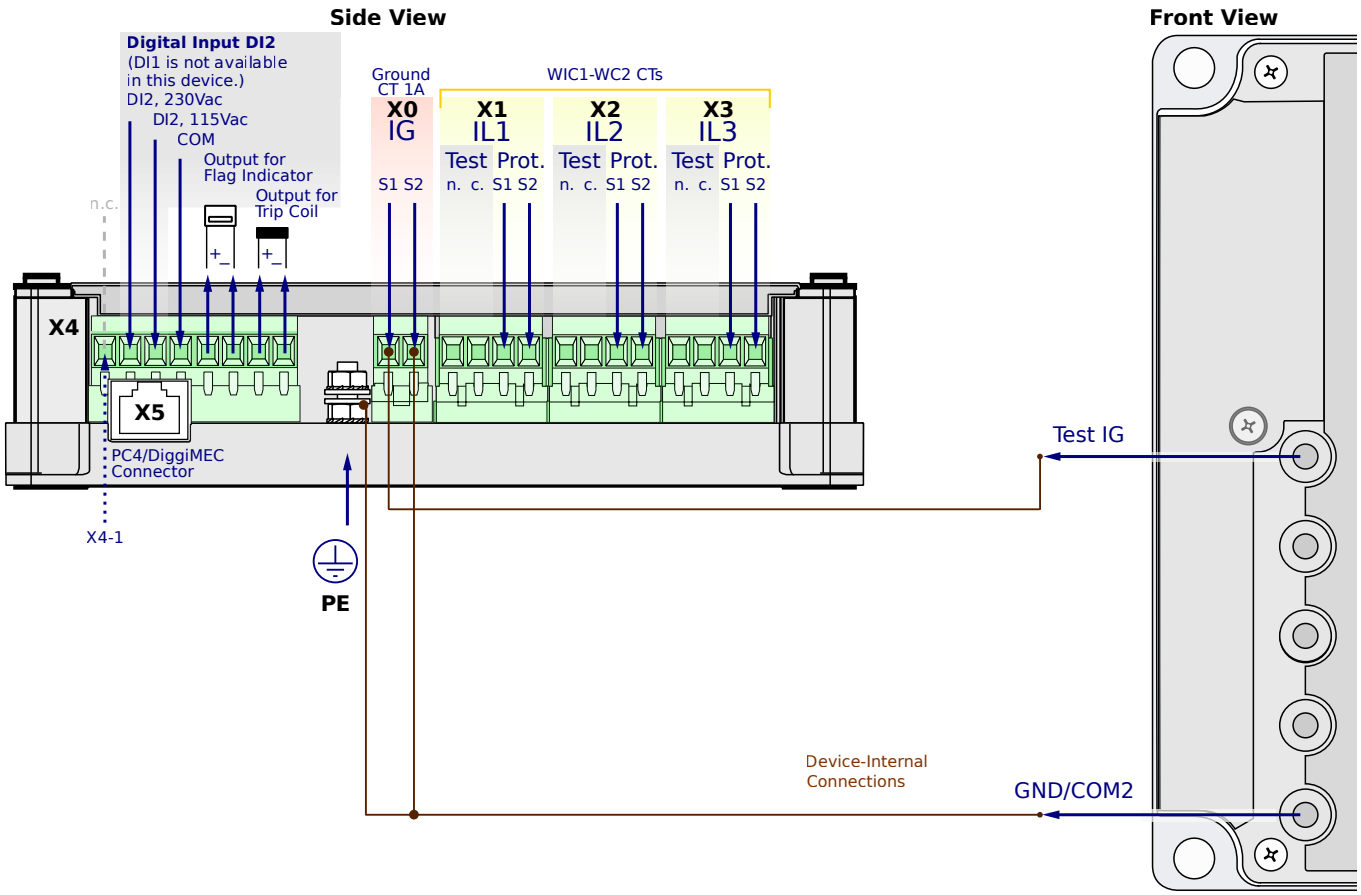


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1AAH

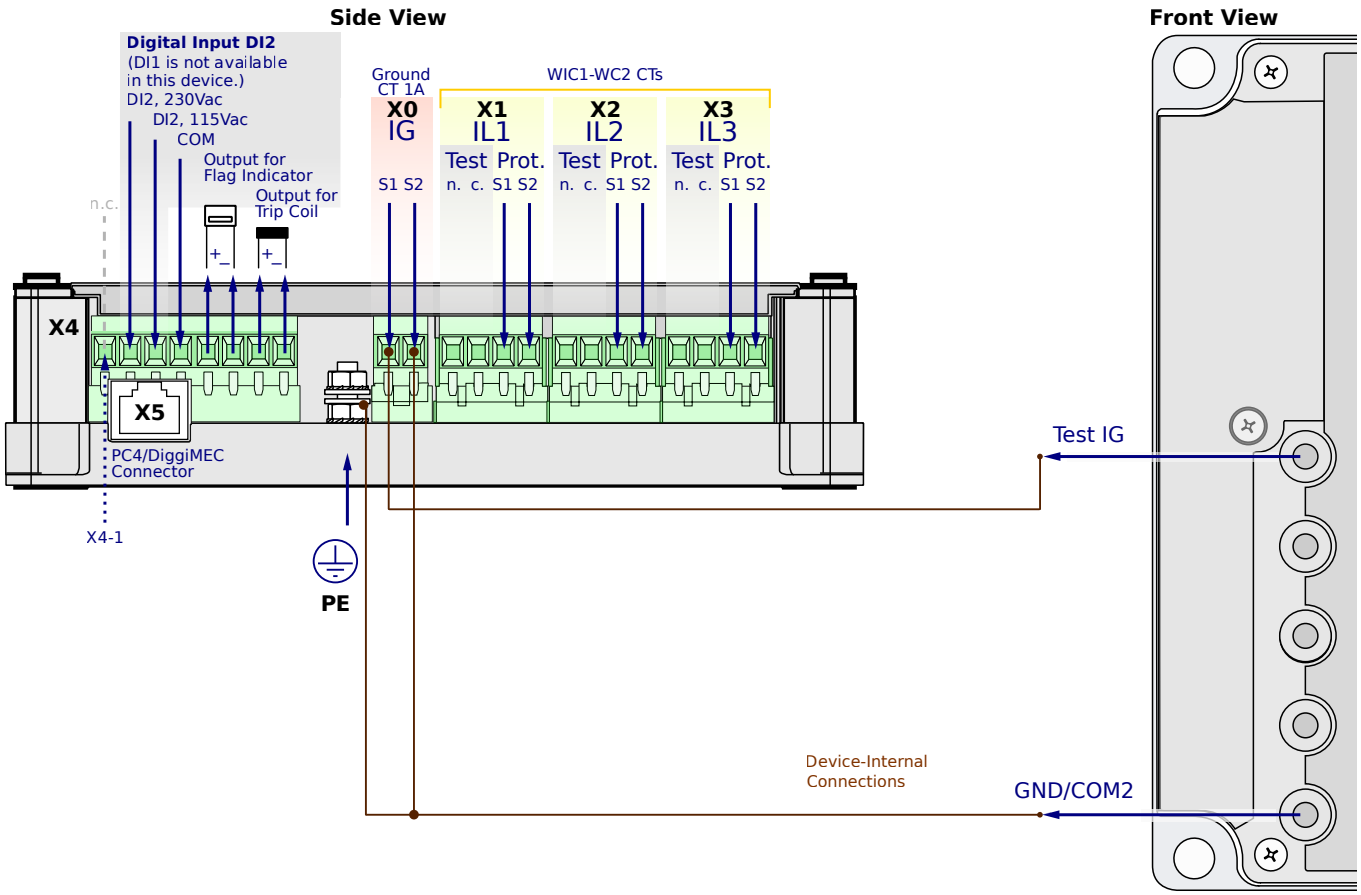


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1PA0

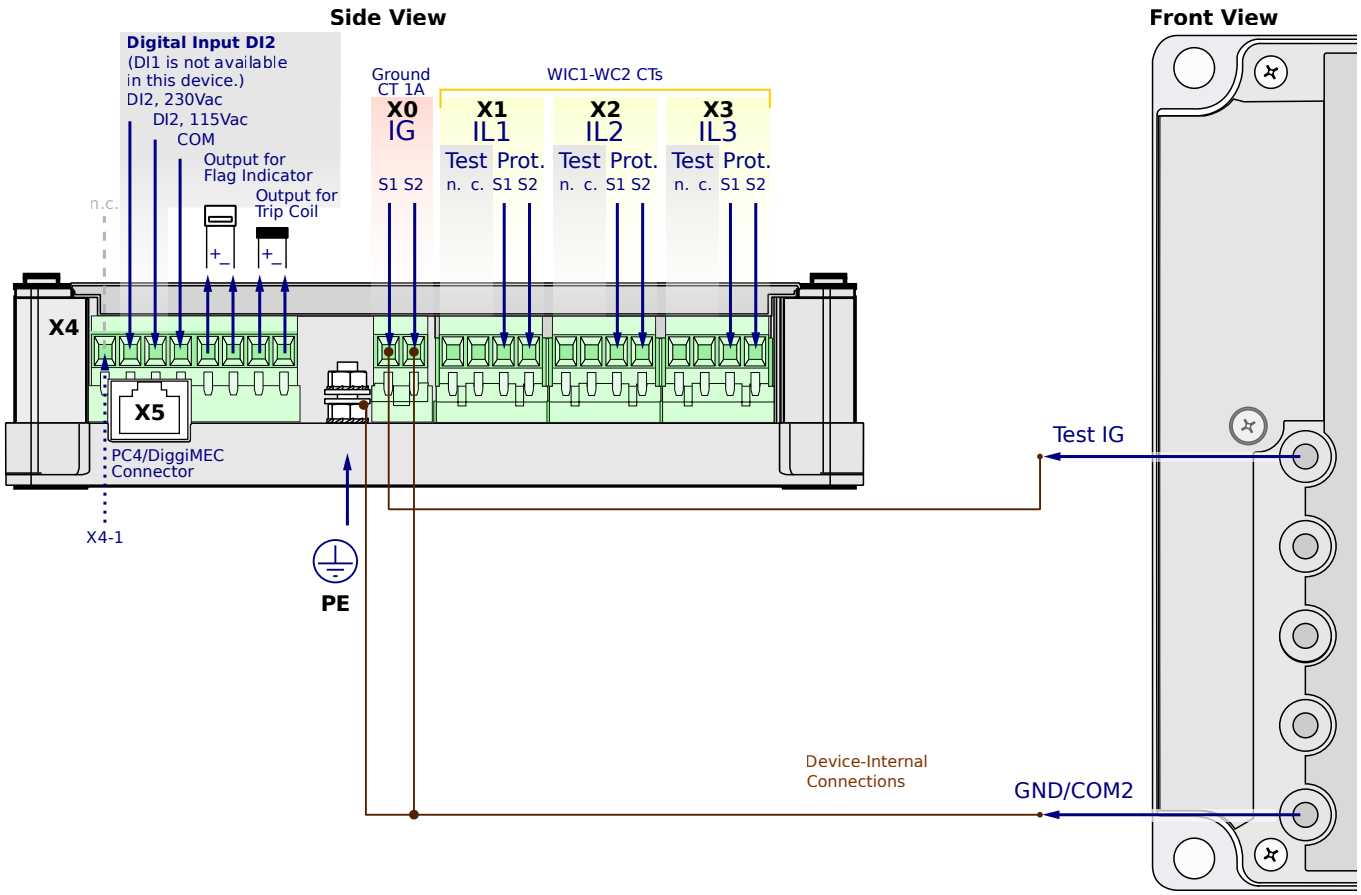


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC1PAH

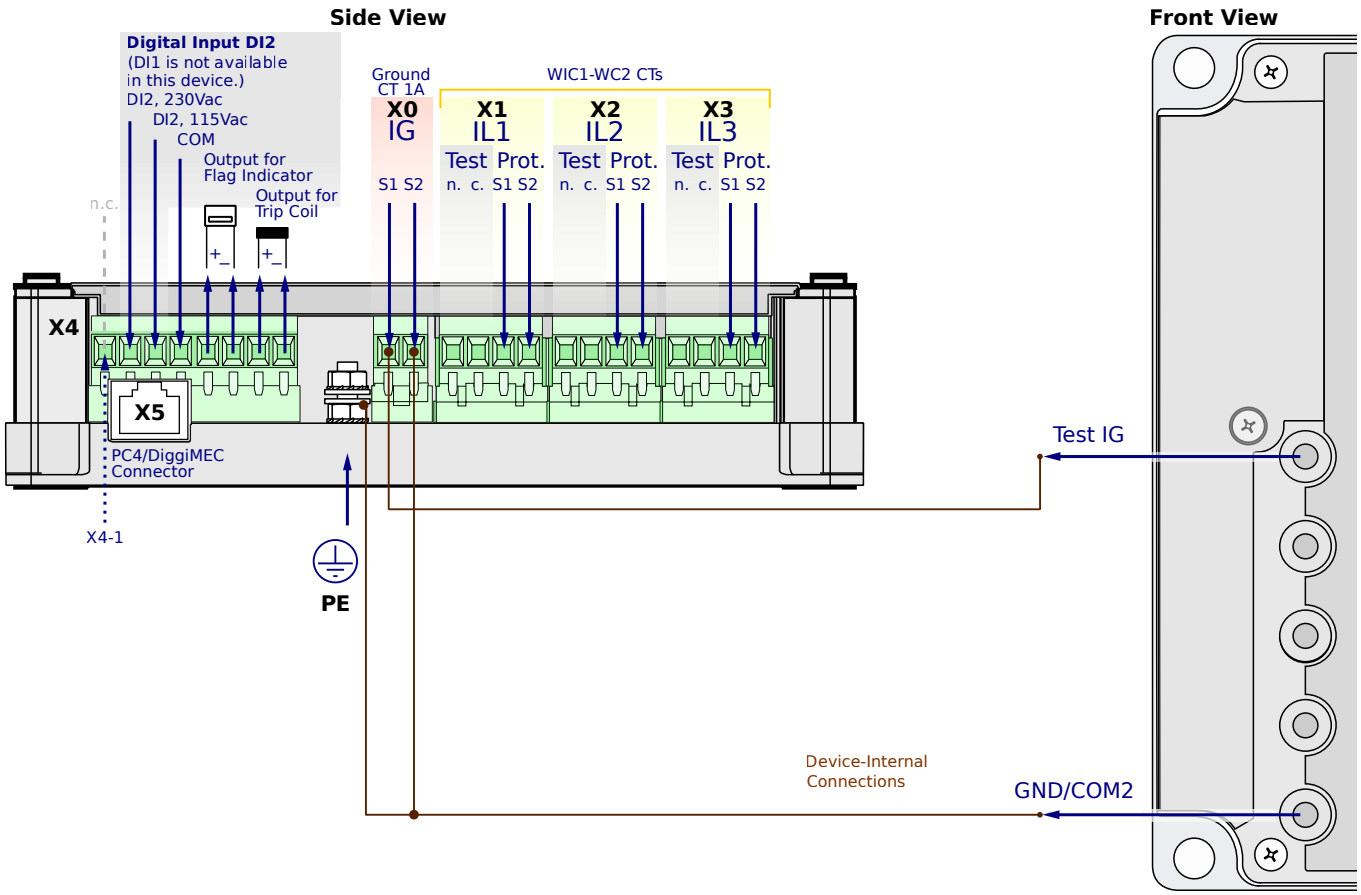


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2SA0

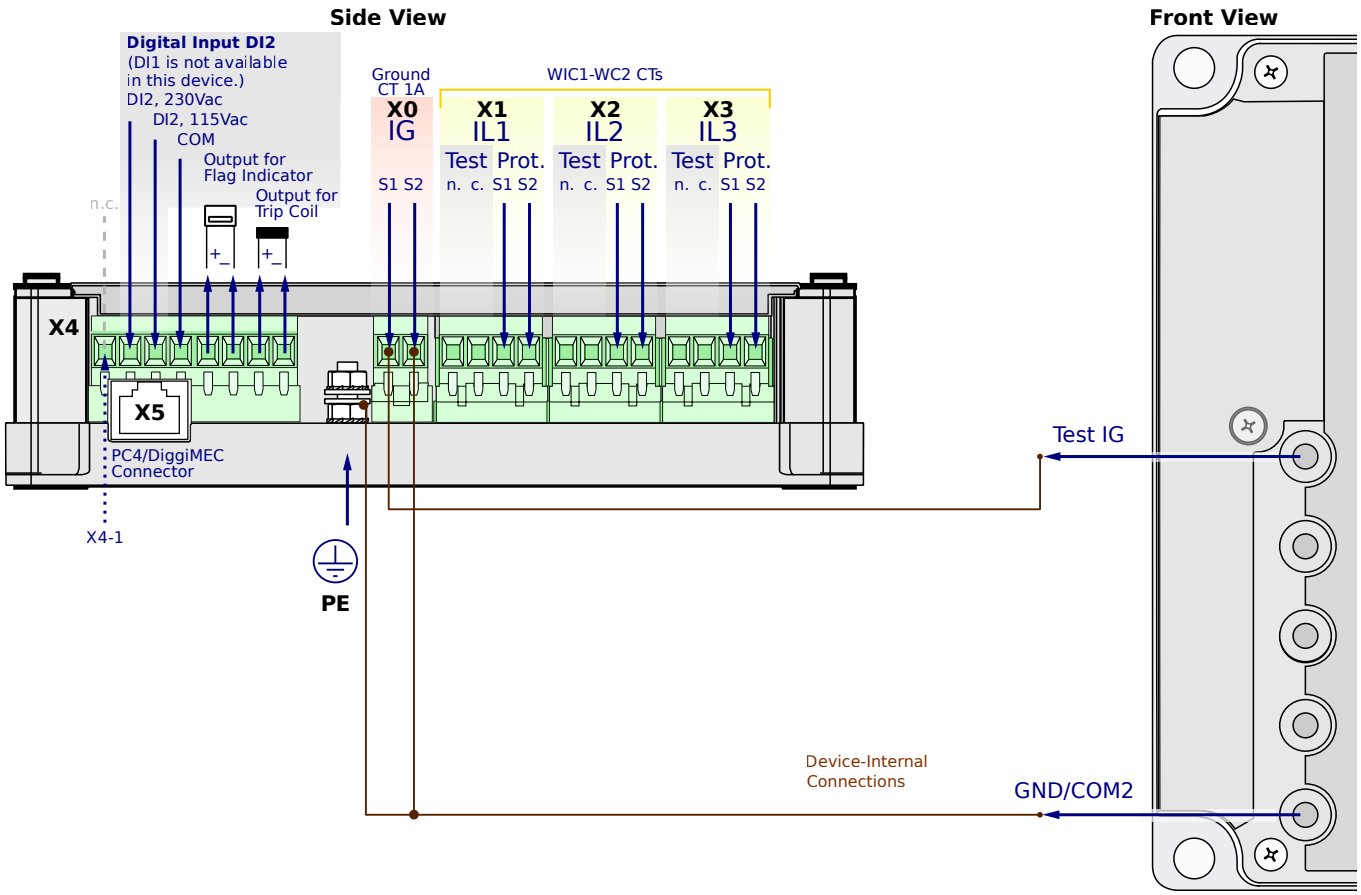


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2SAH

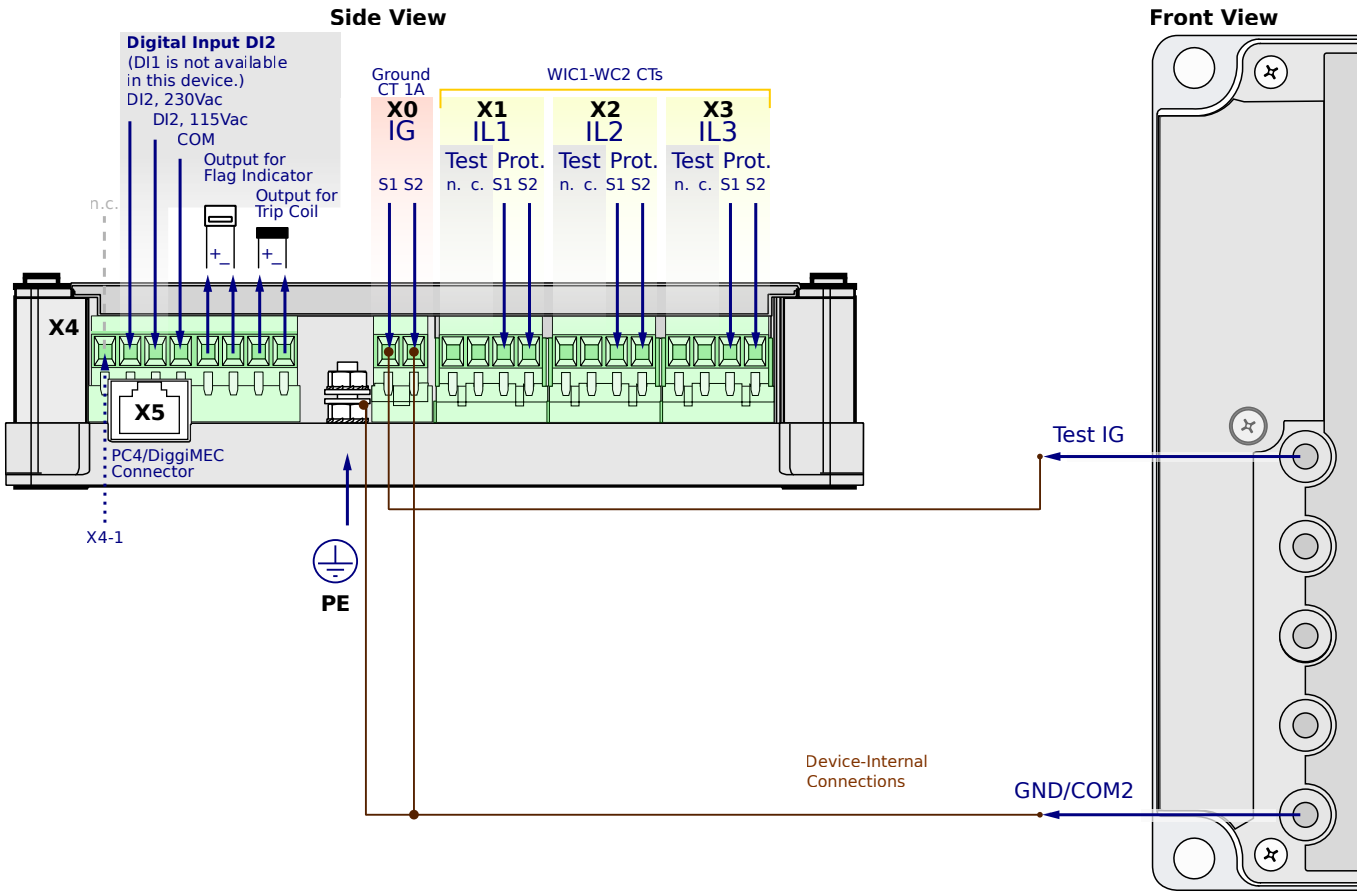


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2AA0

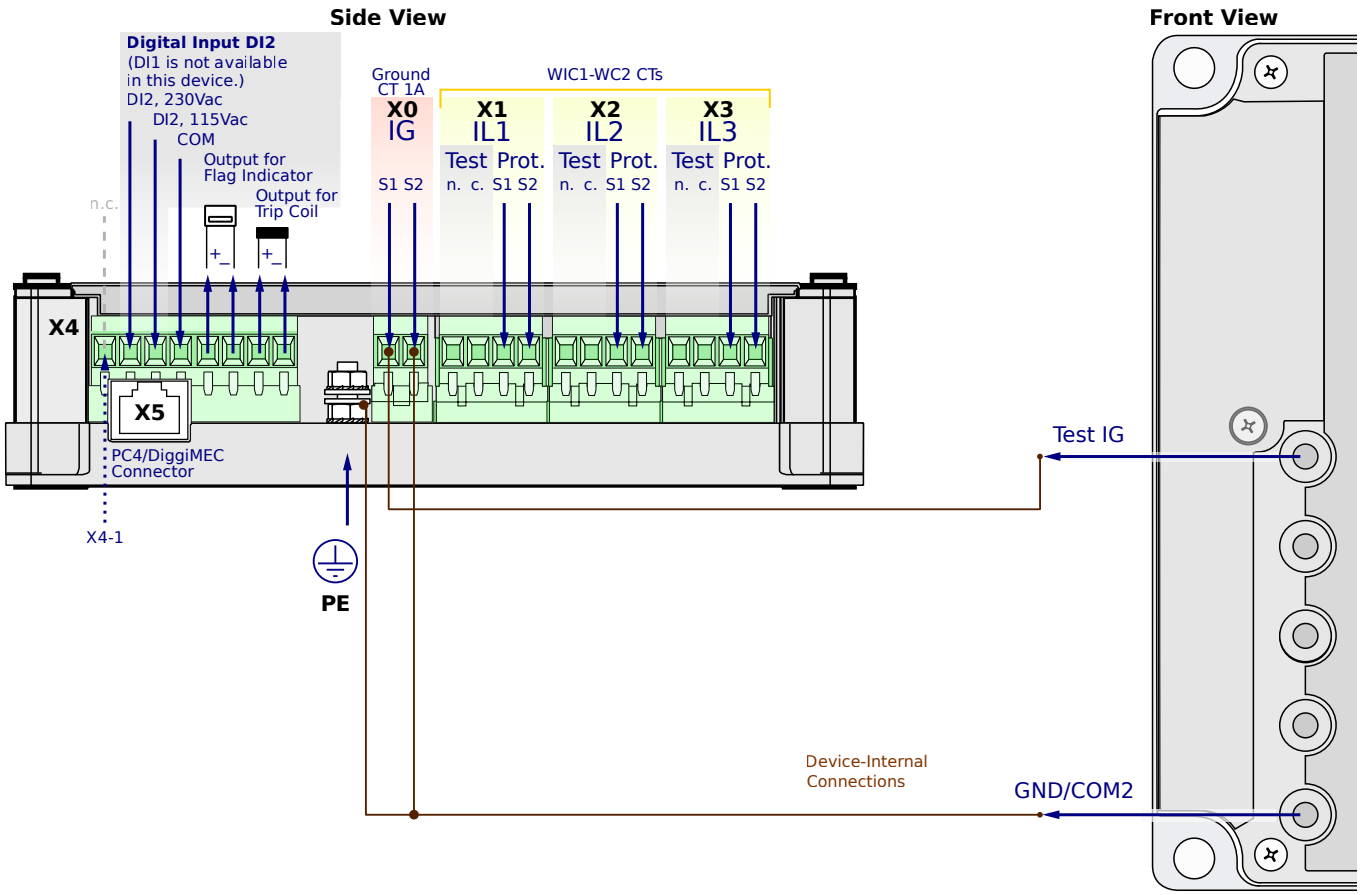


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2AAH

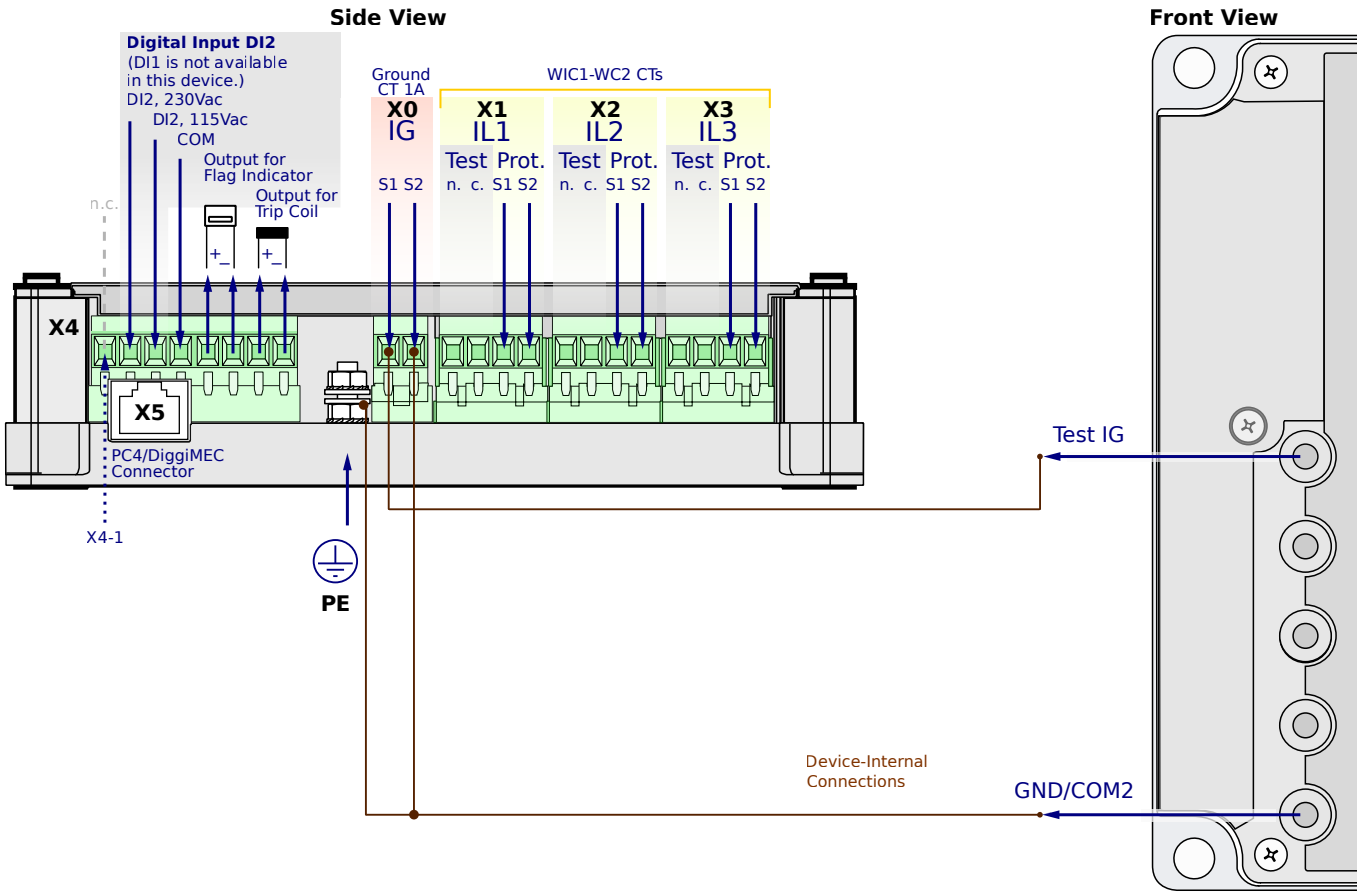


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2PA0

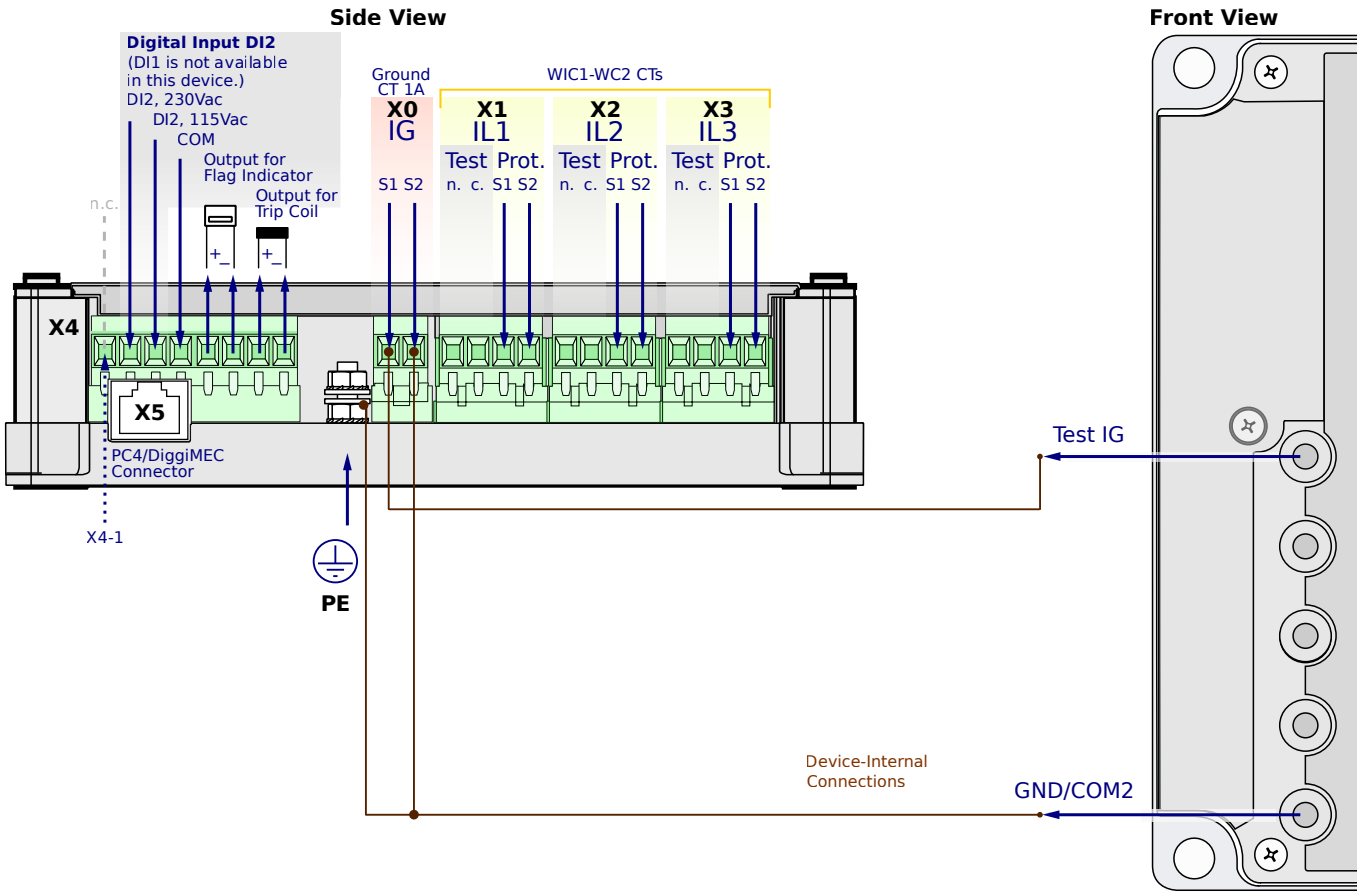


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5NC2PAH

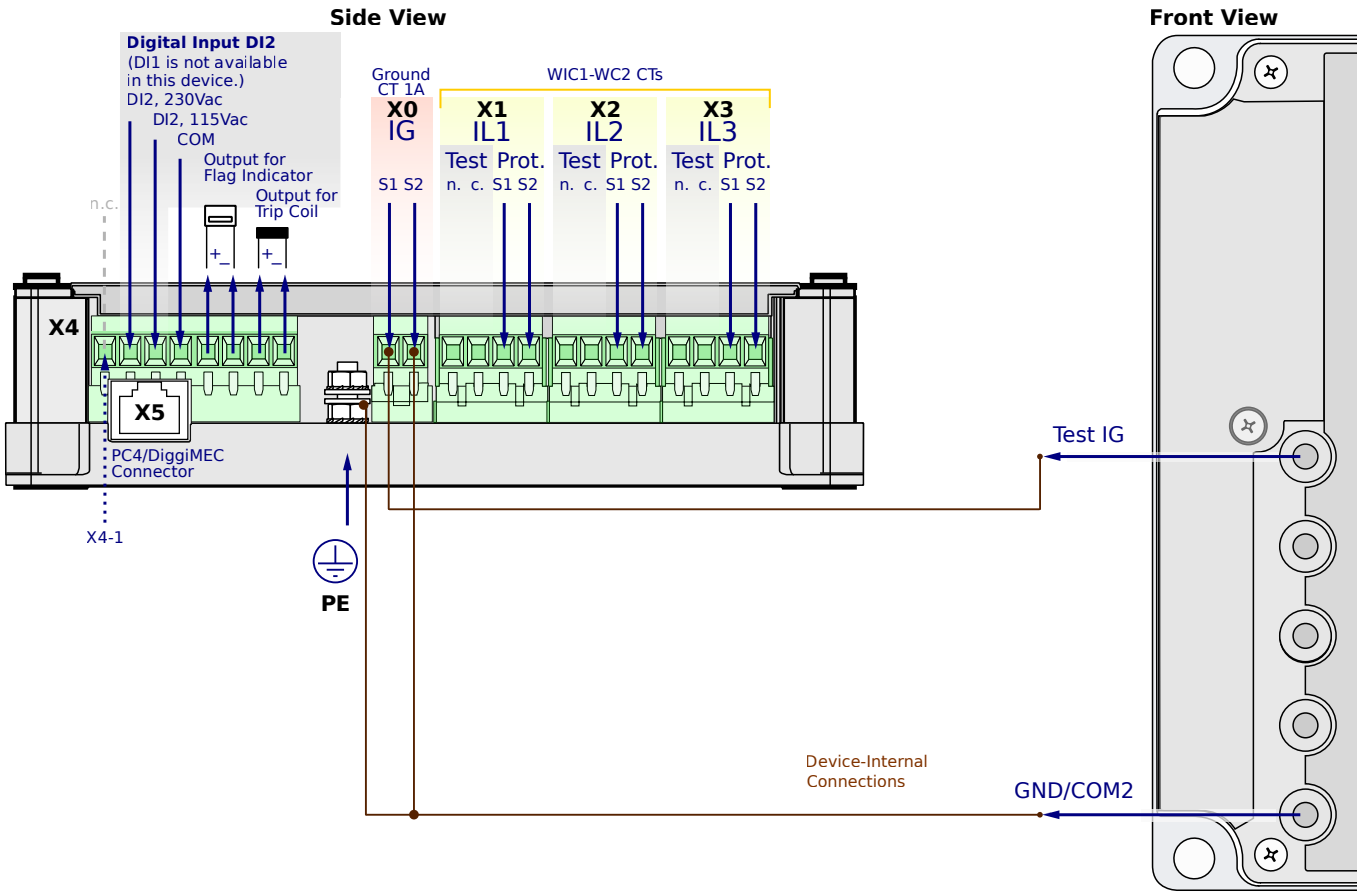


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1SA0

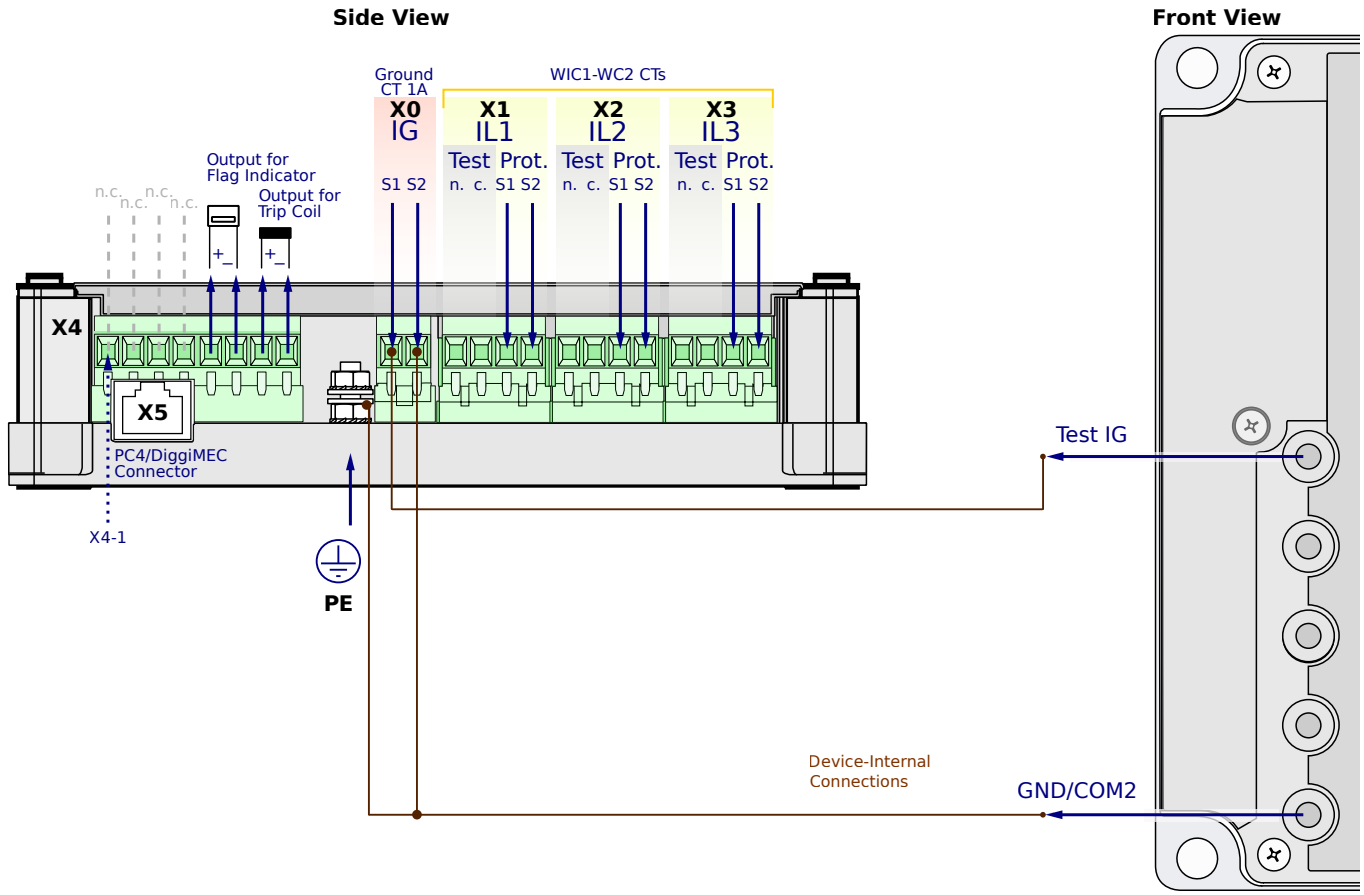


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1SAH

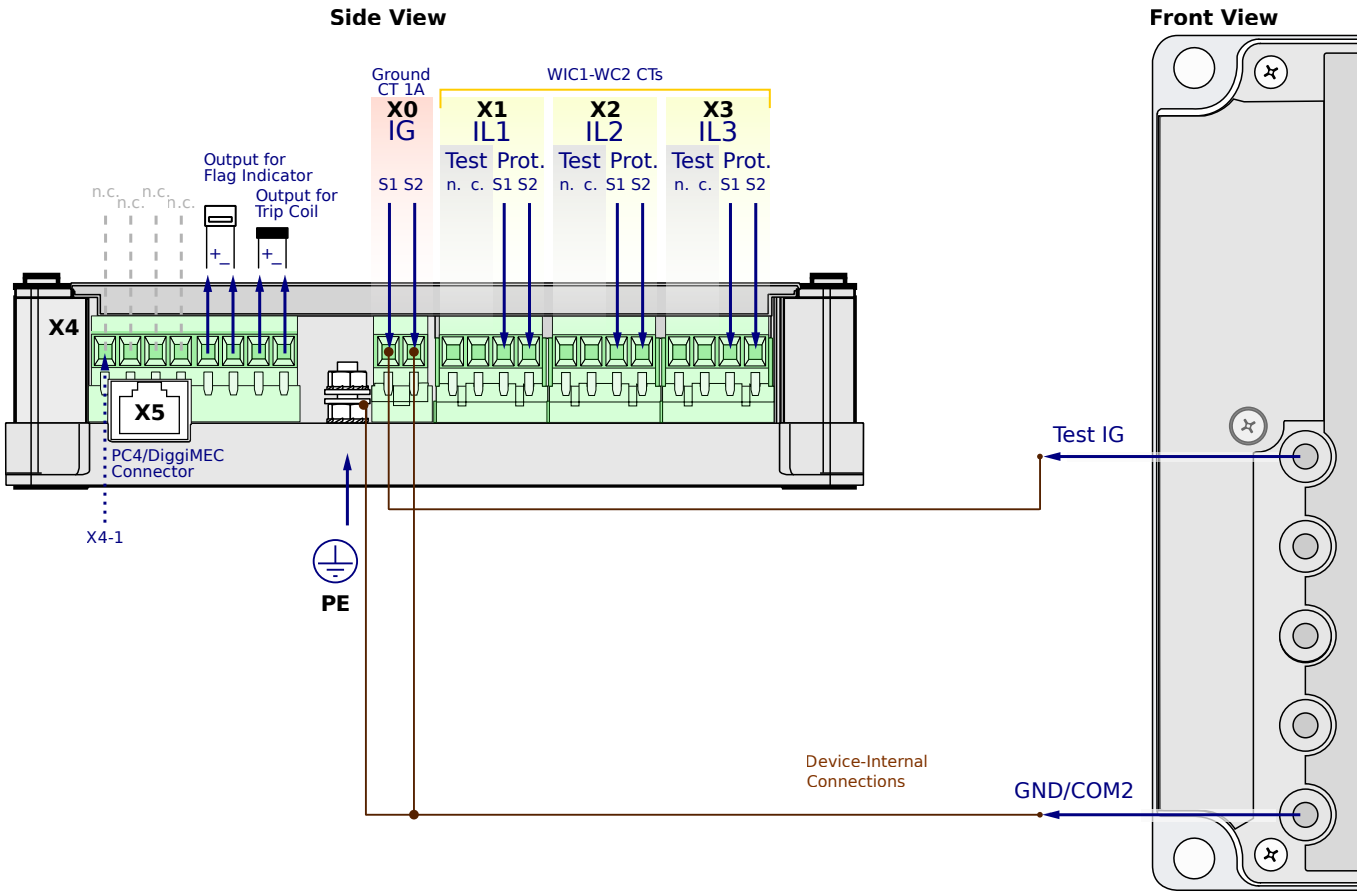


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1AA0

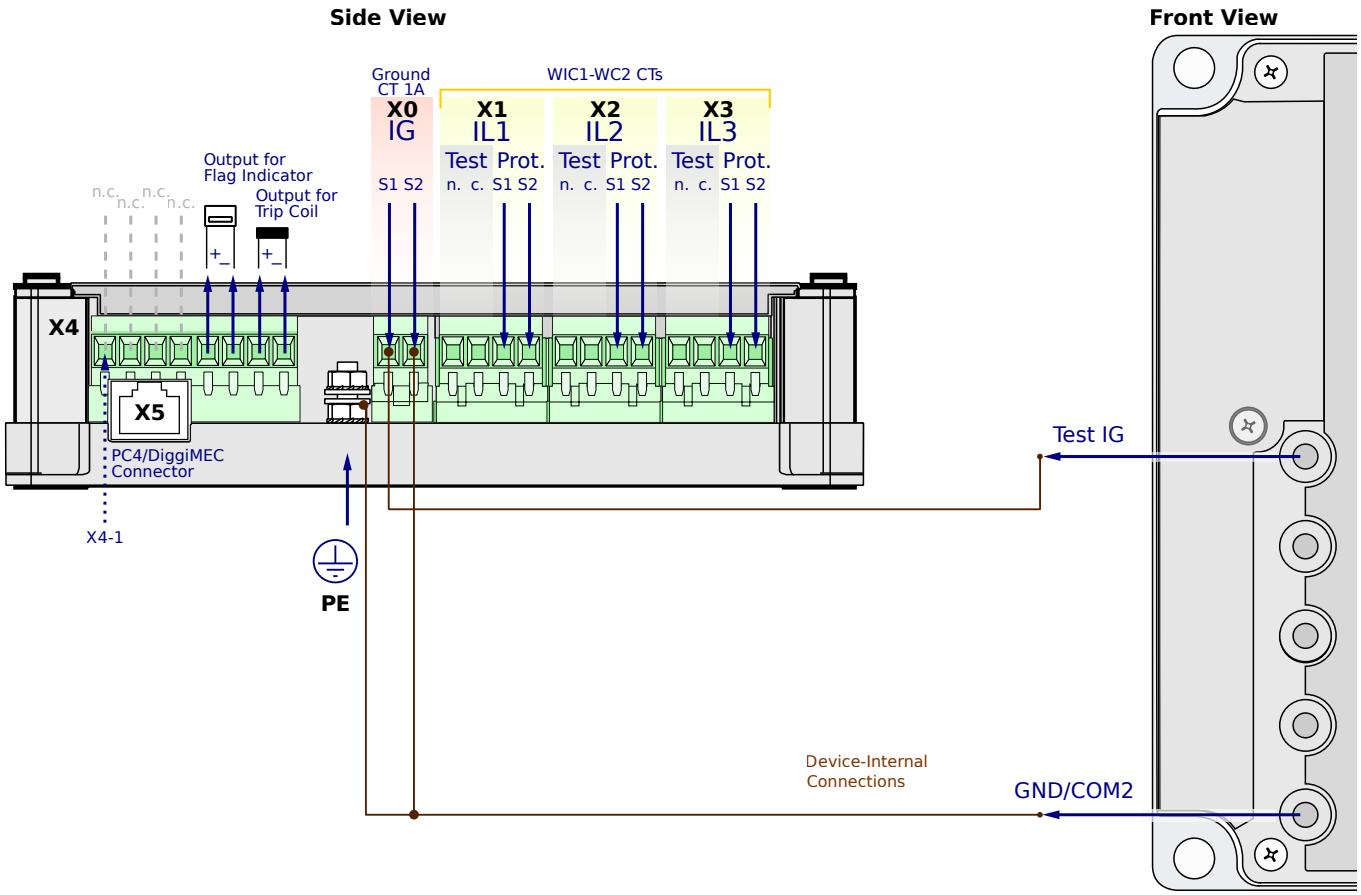


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1AAH

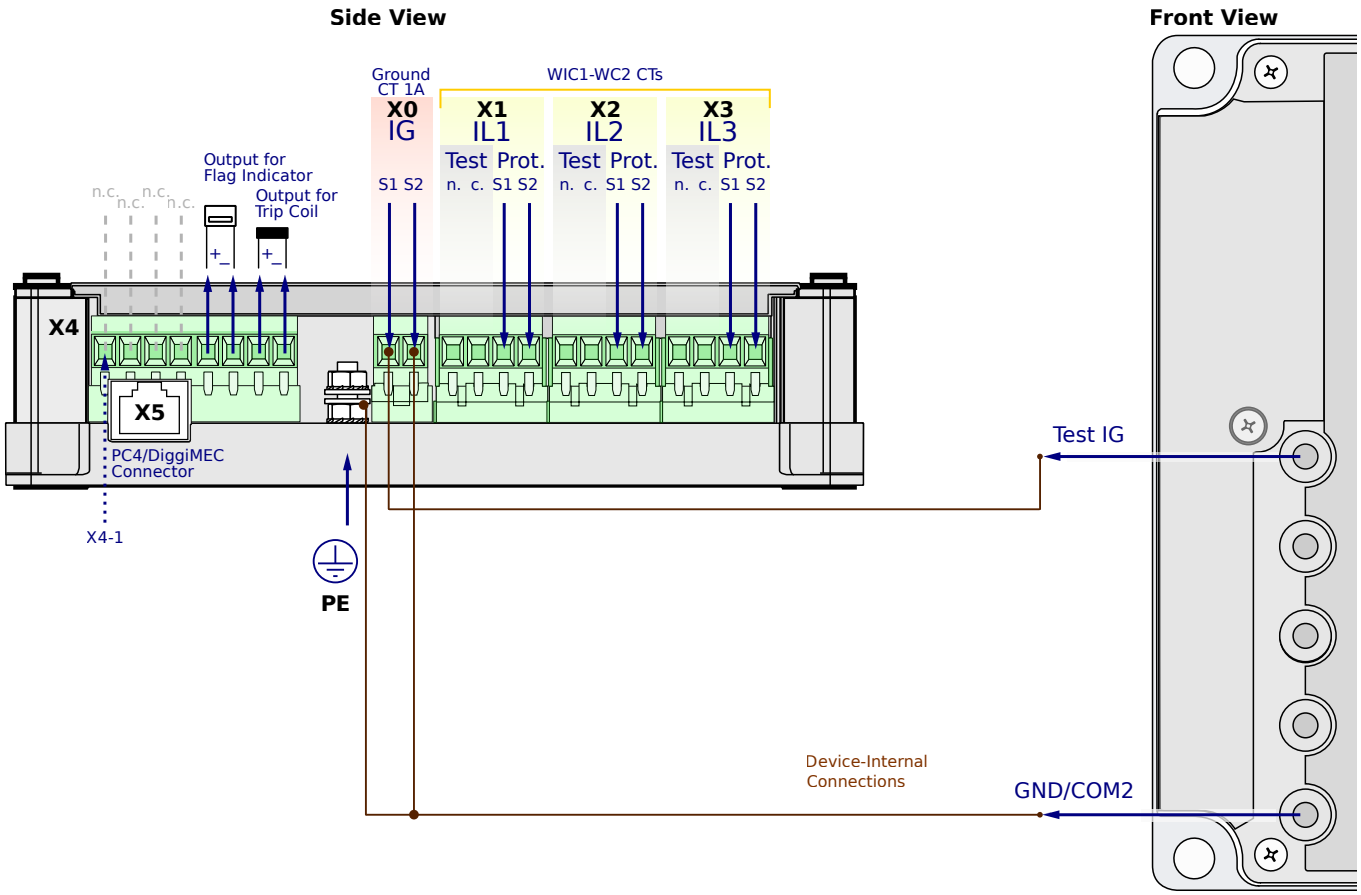


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1PA0

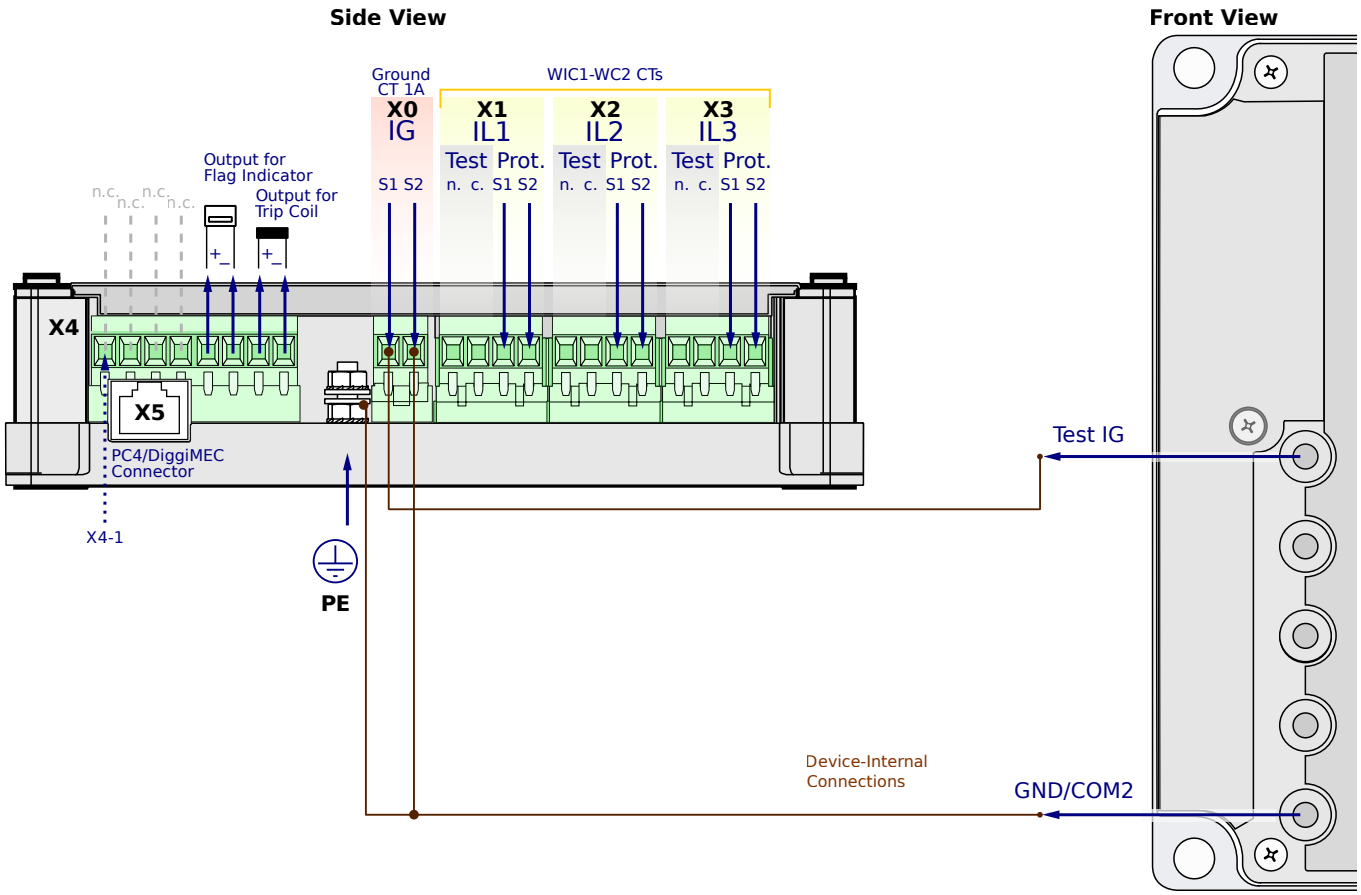


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN1PAH

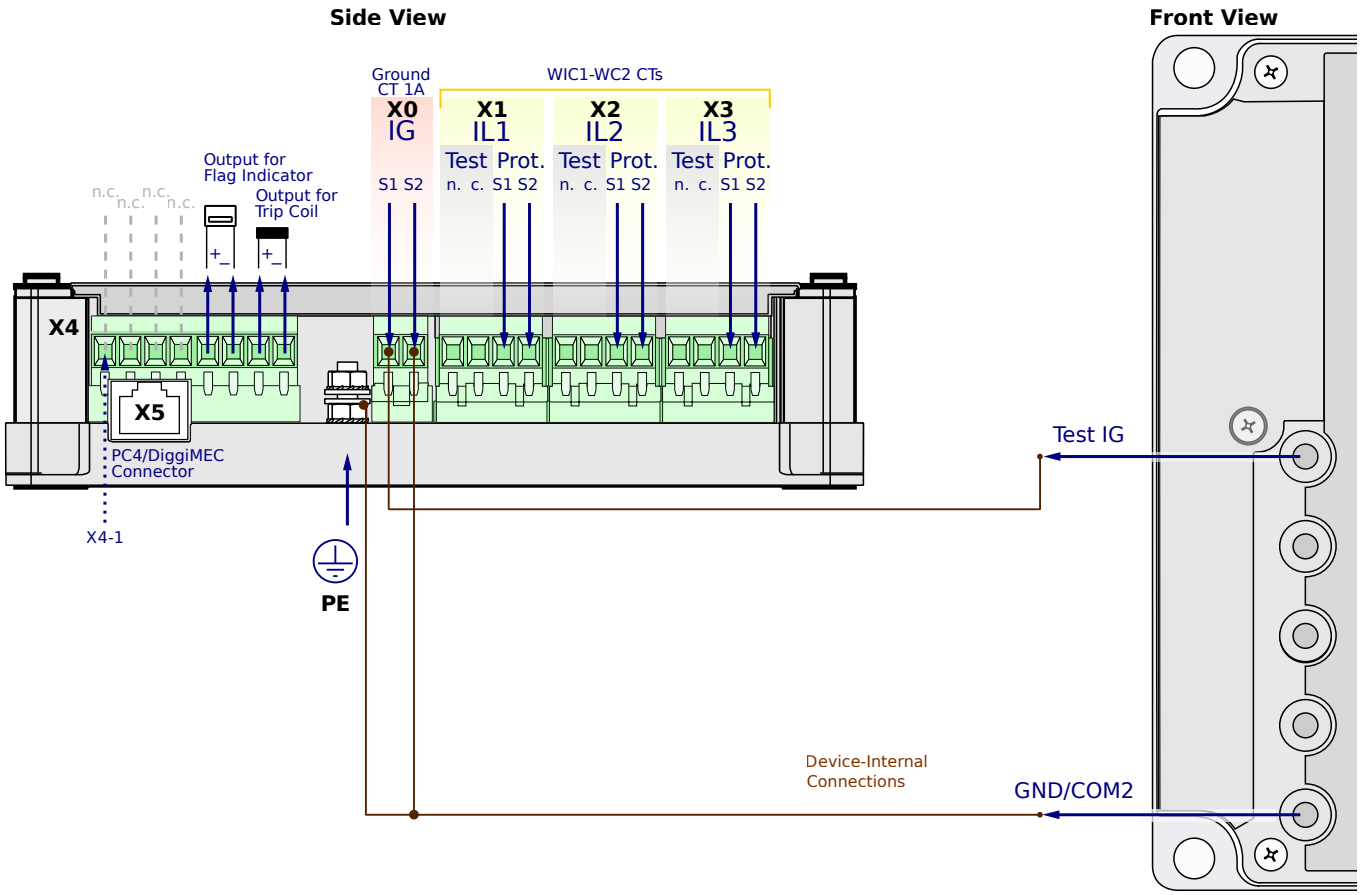


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2SA0

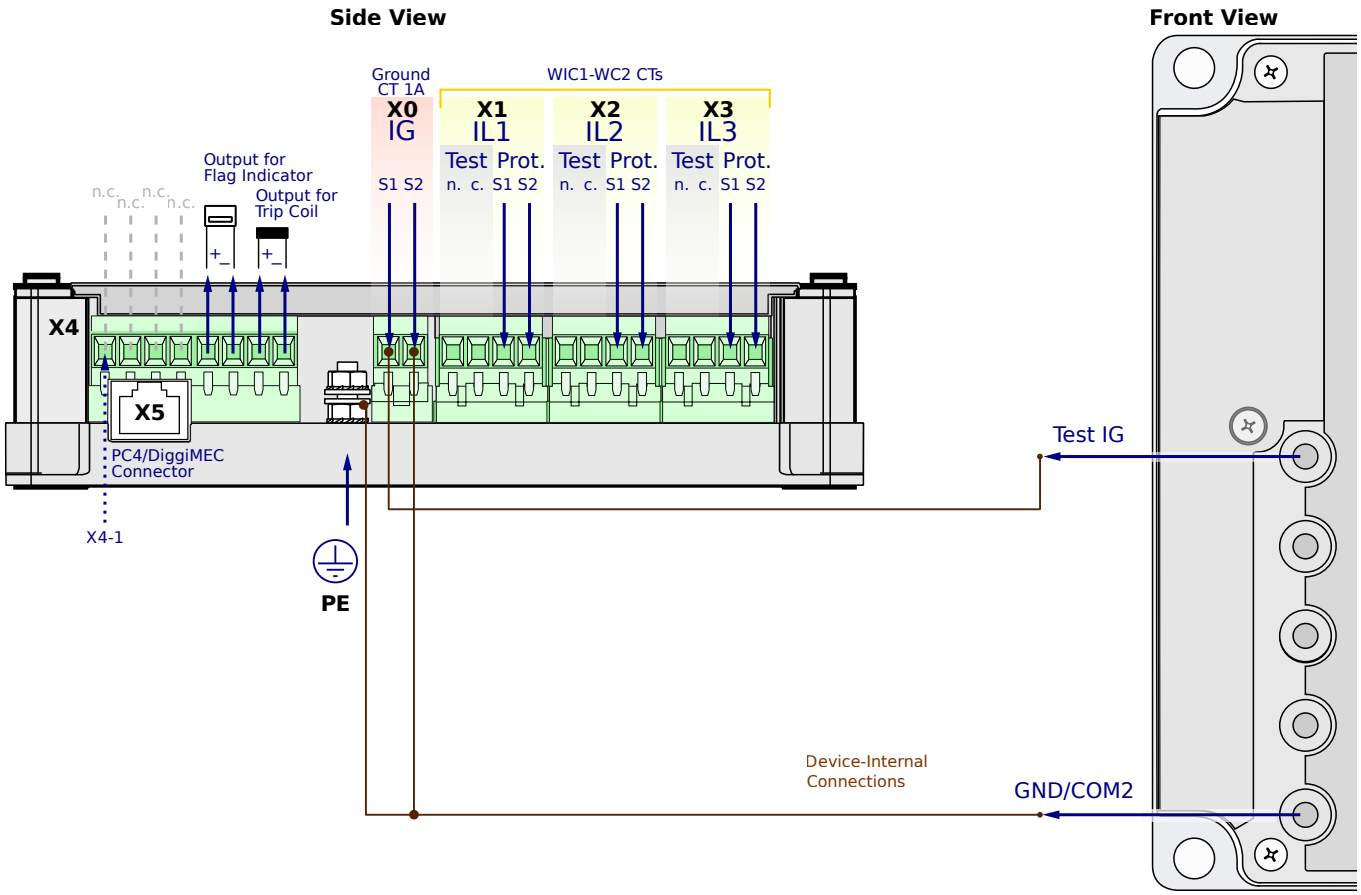


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2SAH

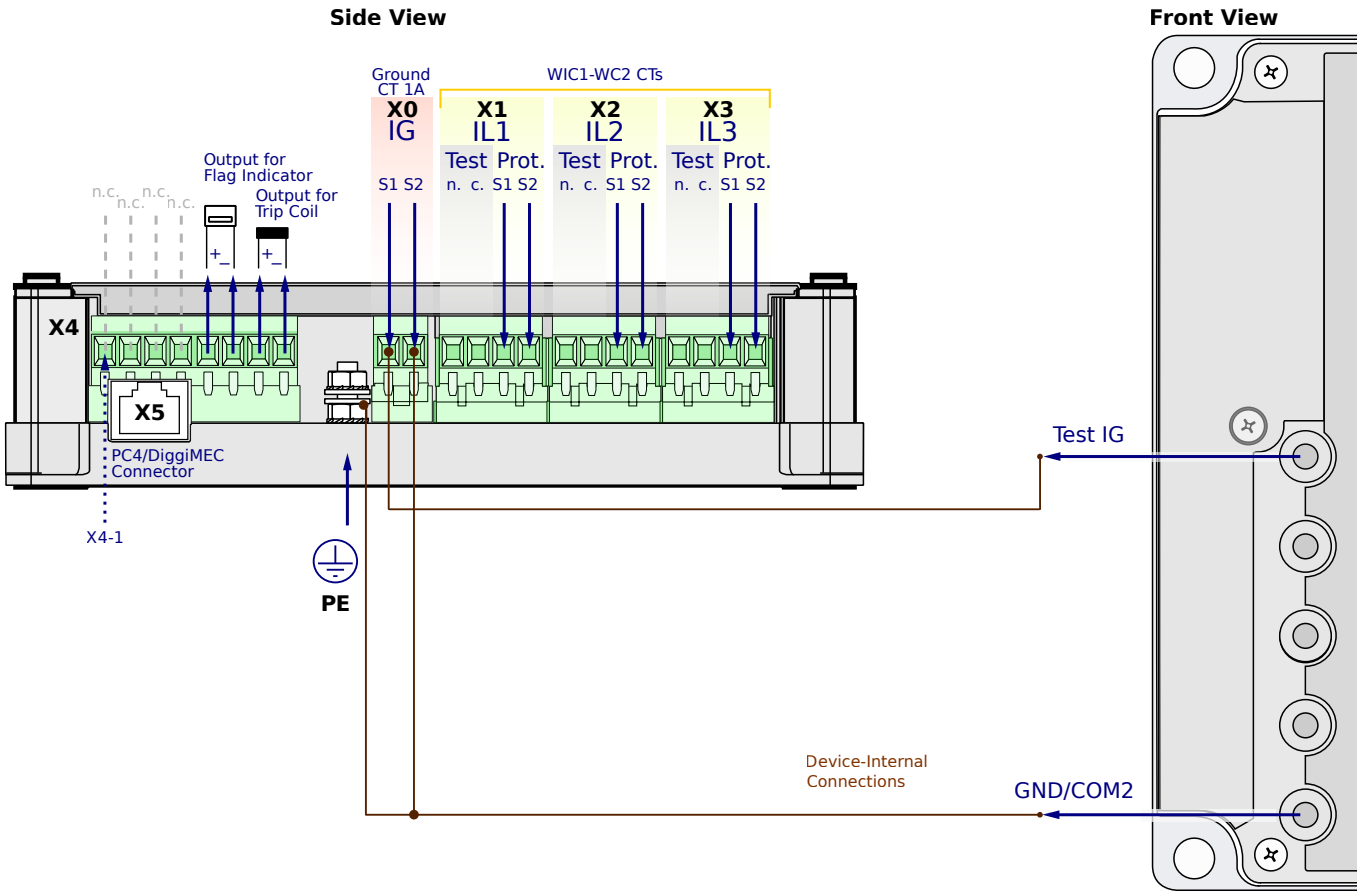


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2AA0

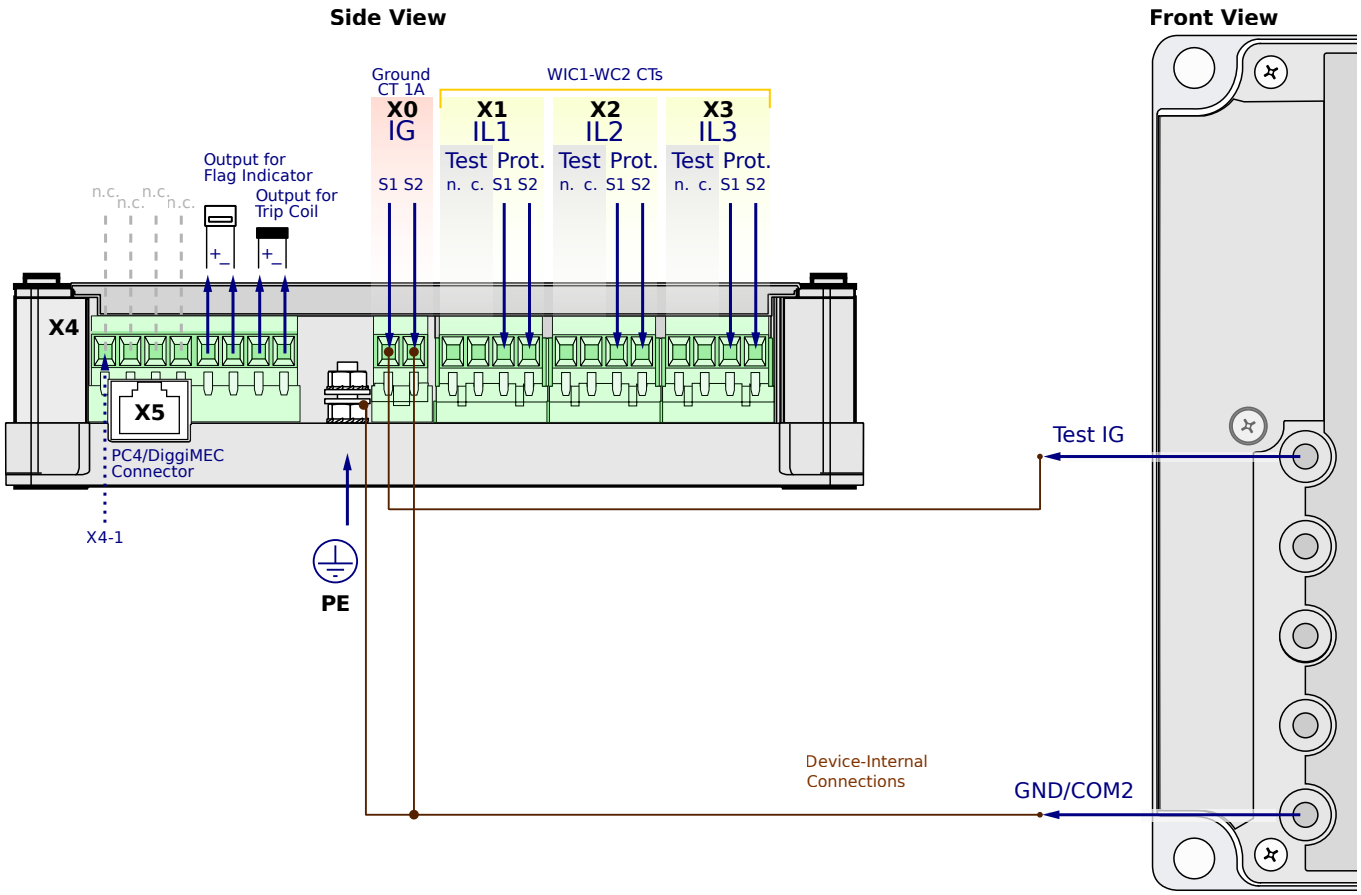


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2AAH

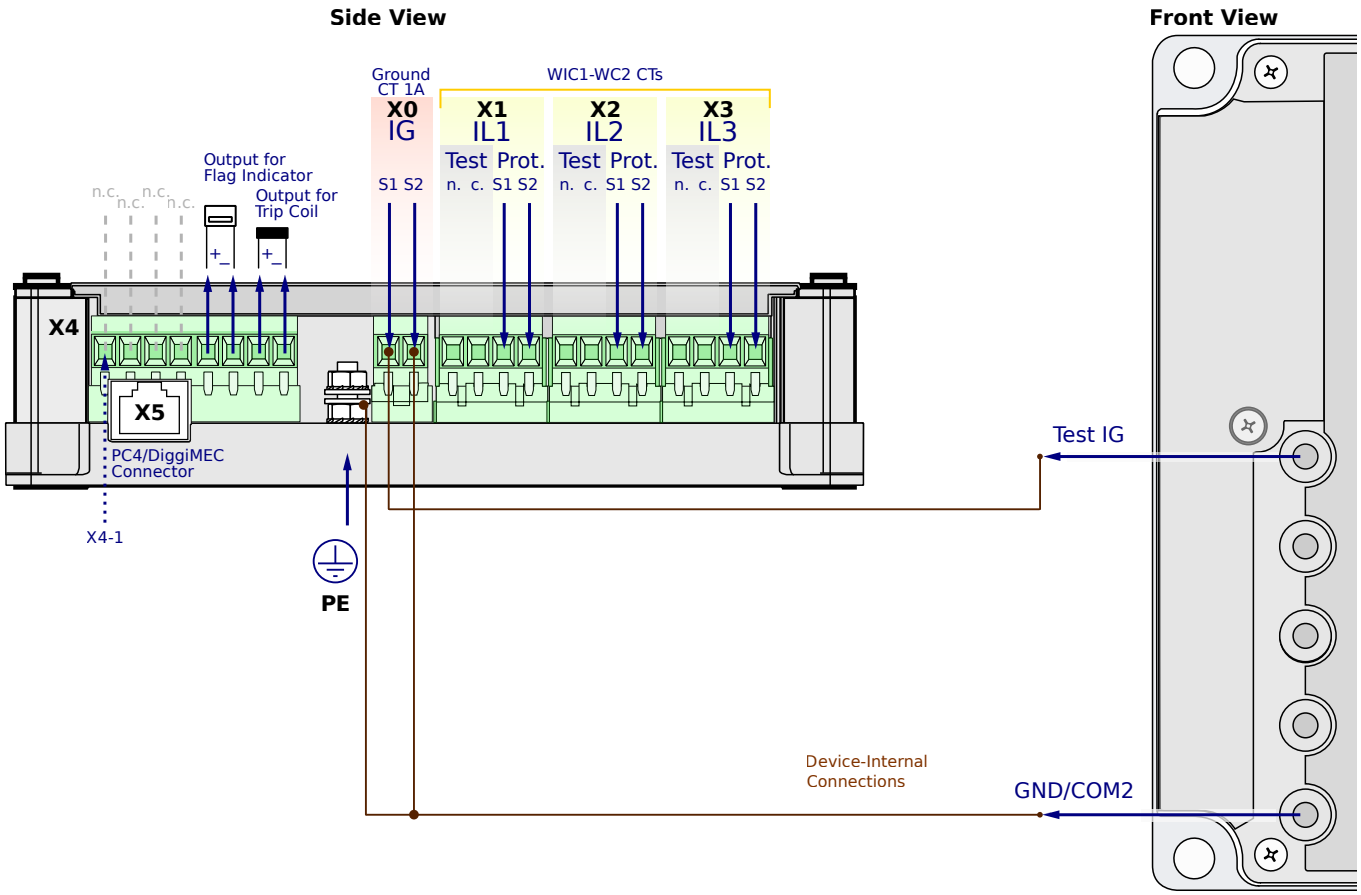


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2PA0

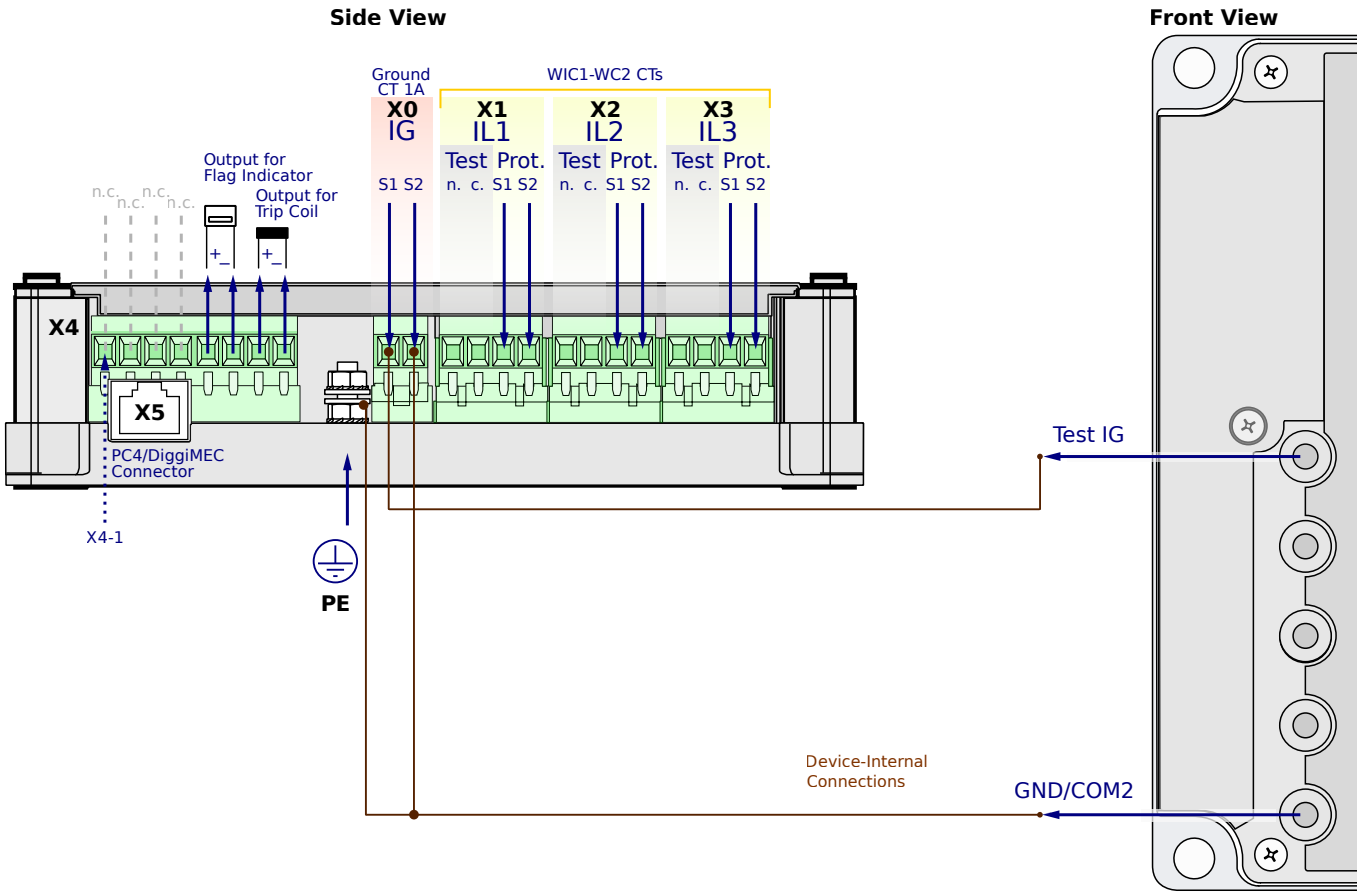


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FN2PAH

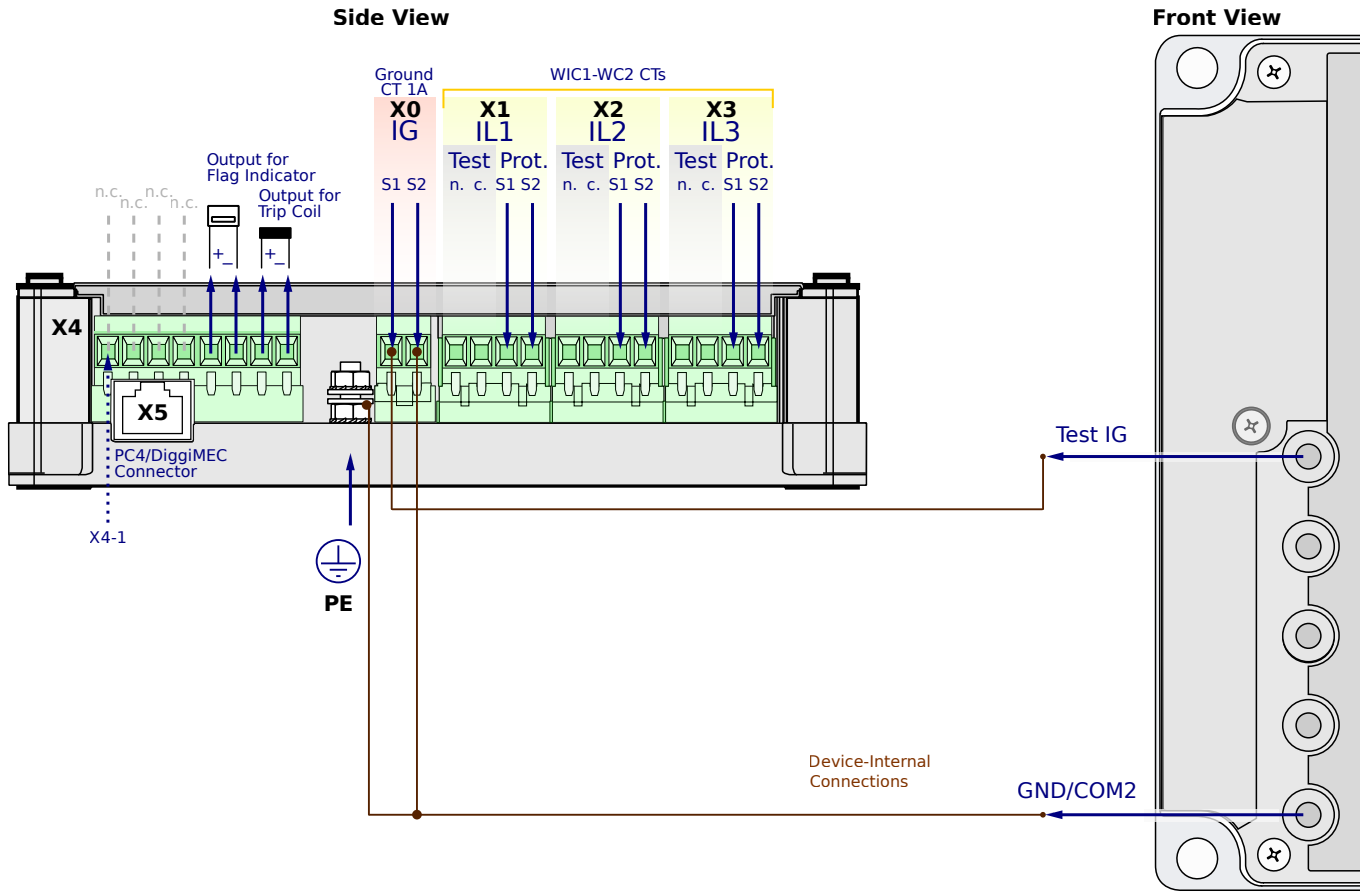


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1SA0

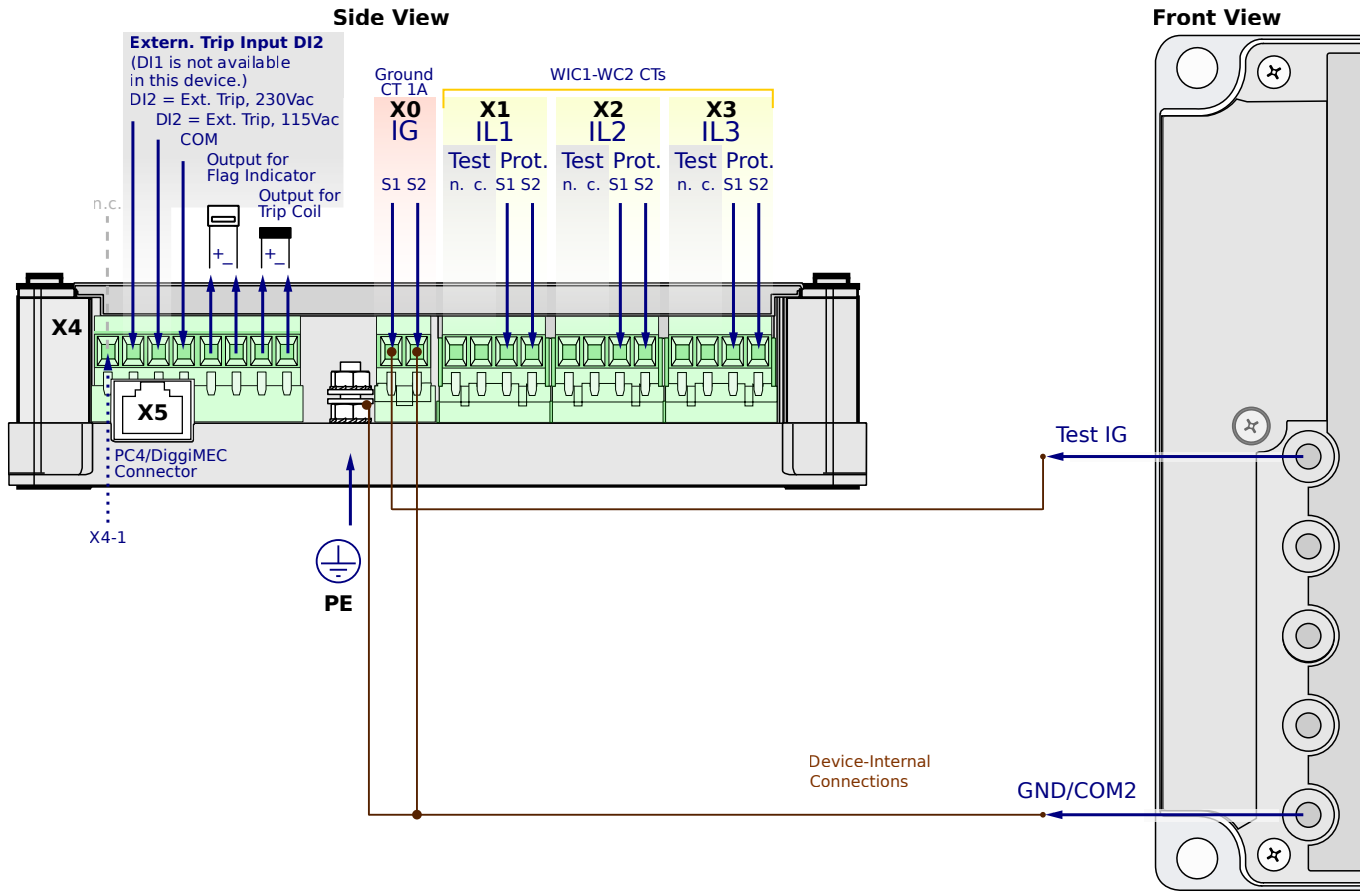


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1SAH

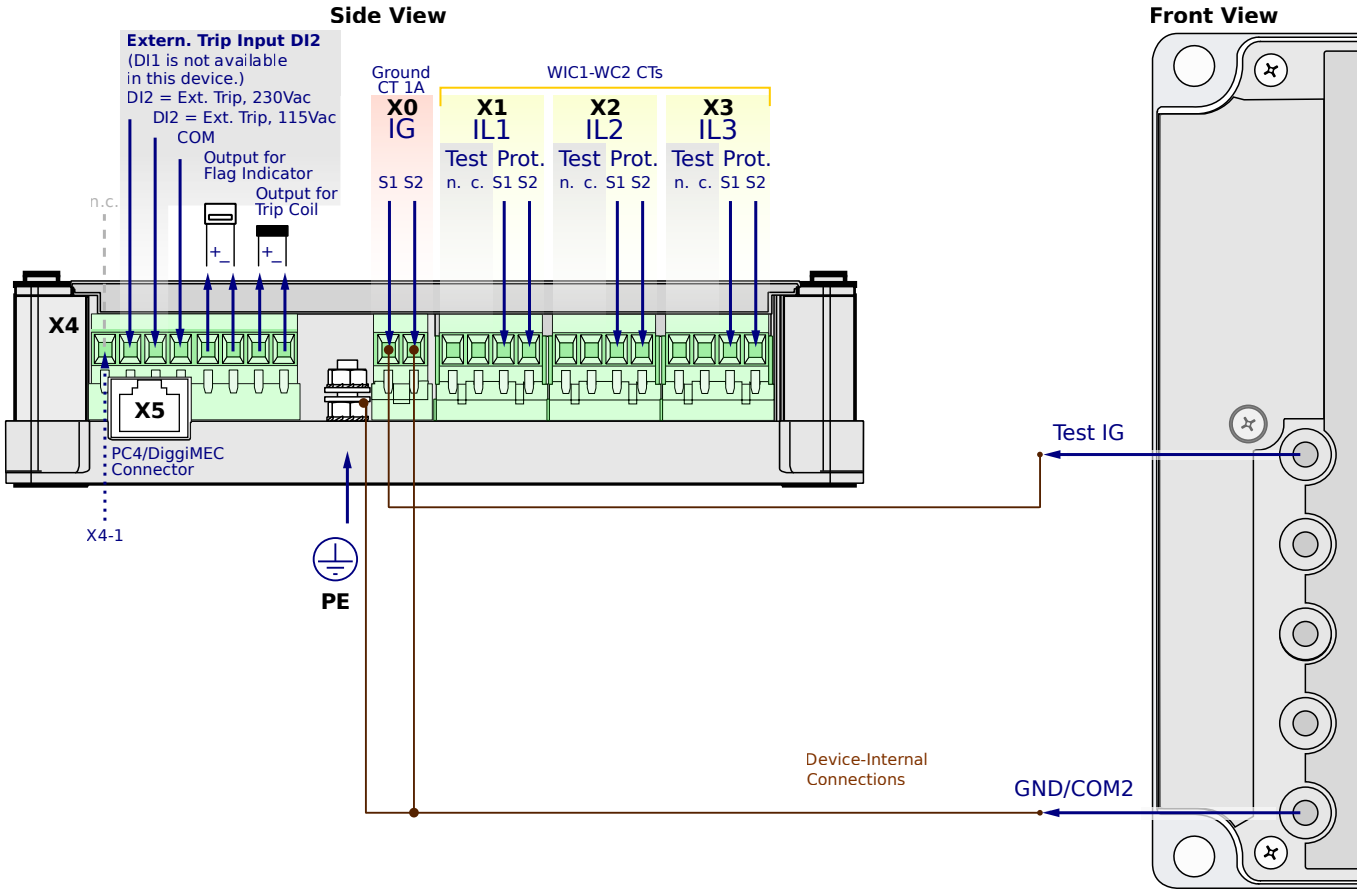


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1AA0

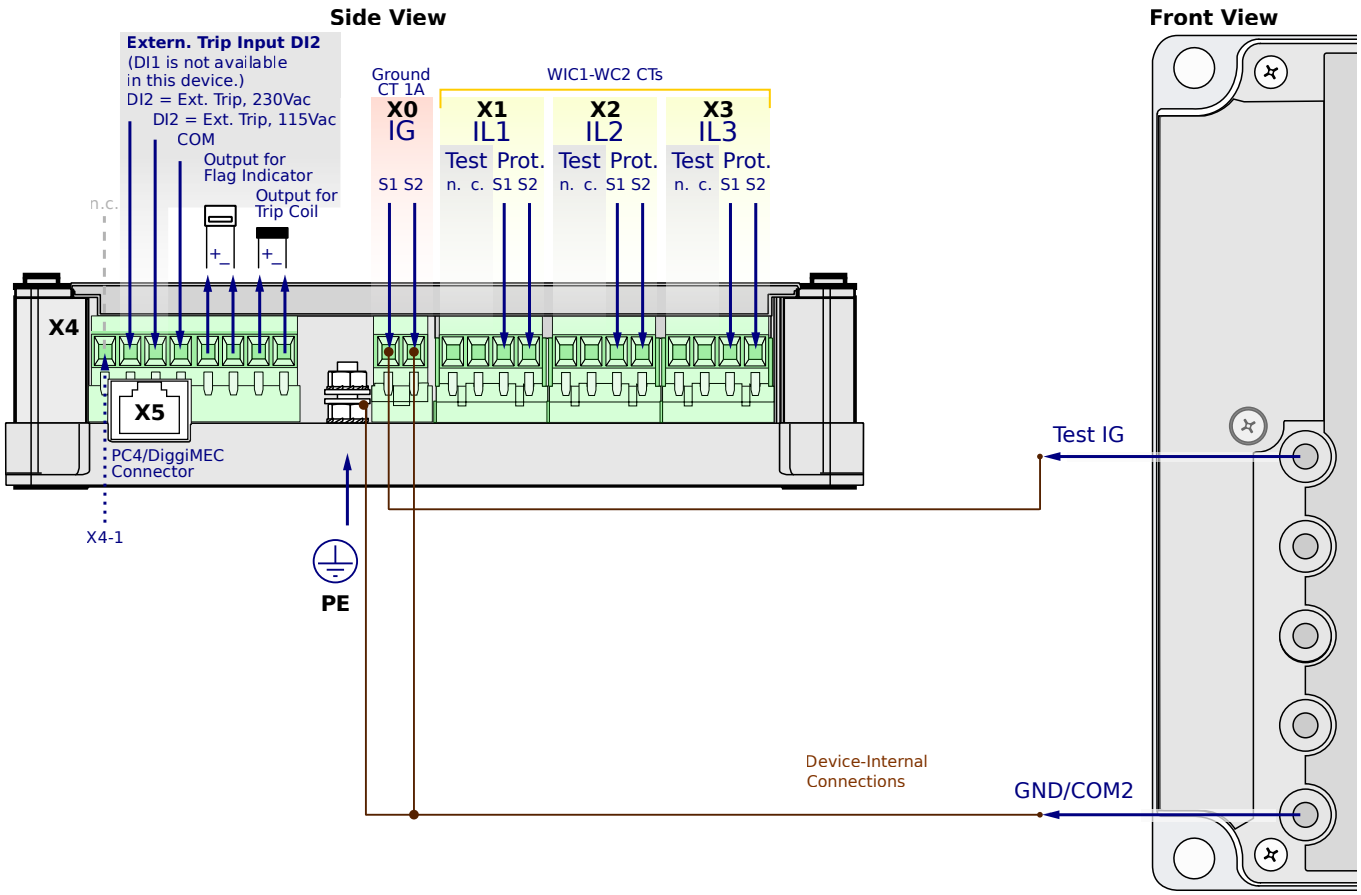


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1AAH

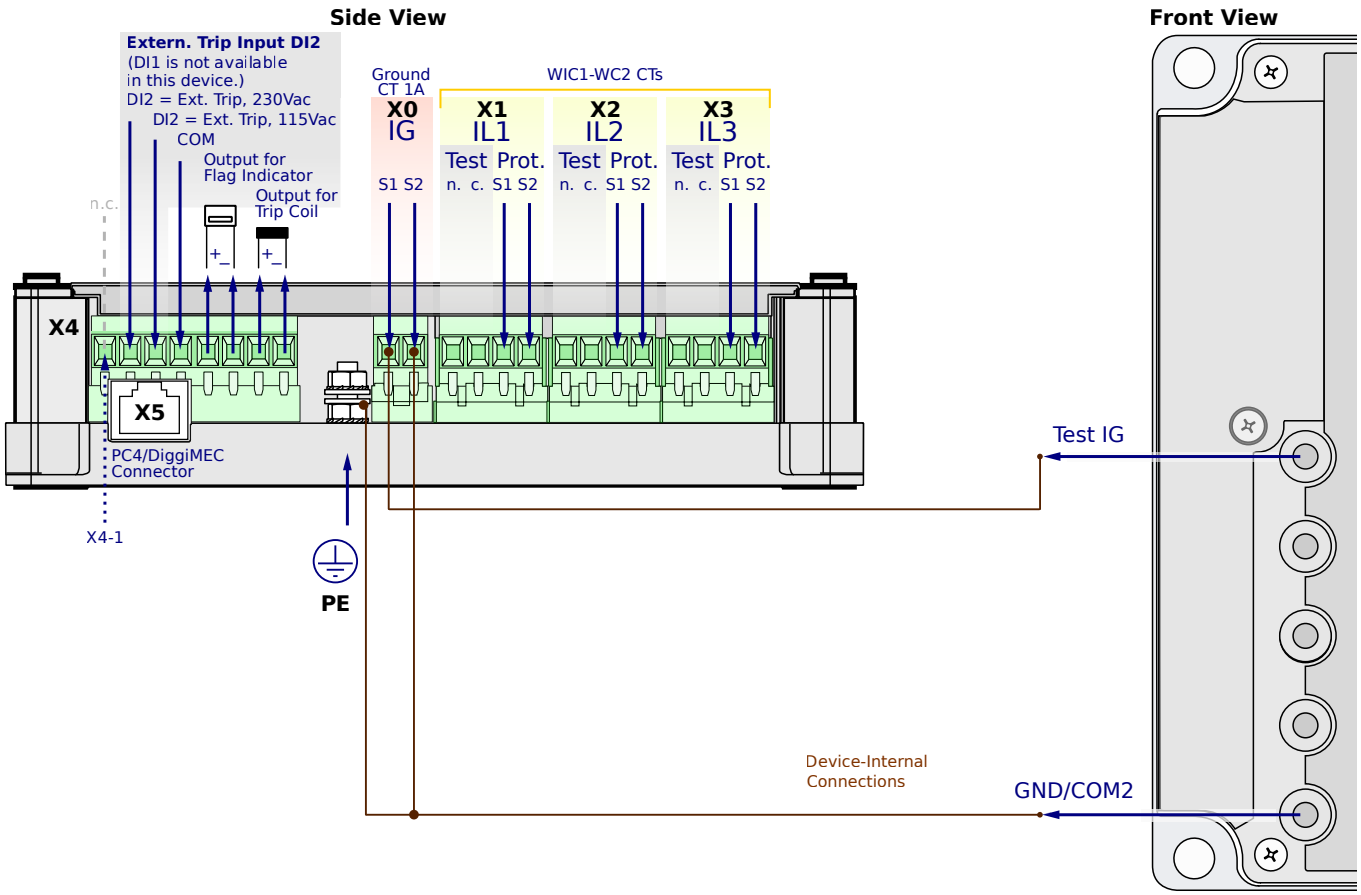


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1PA0

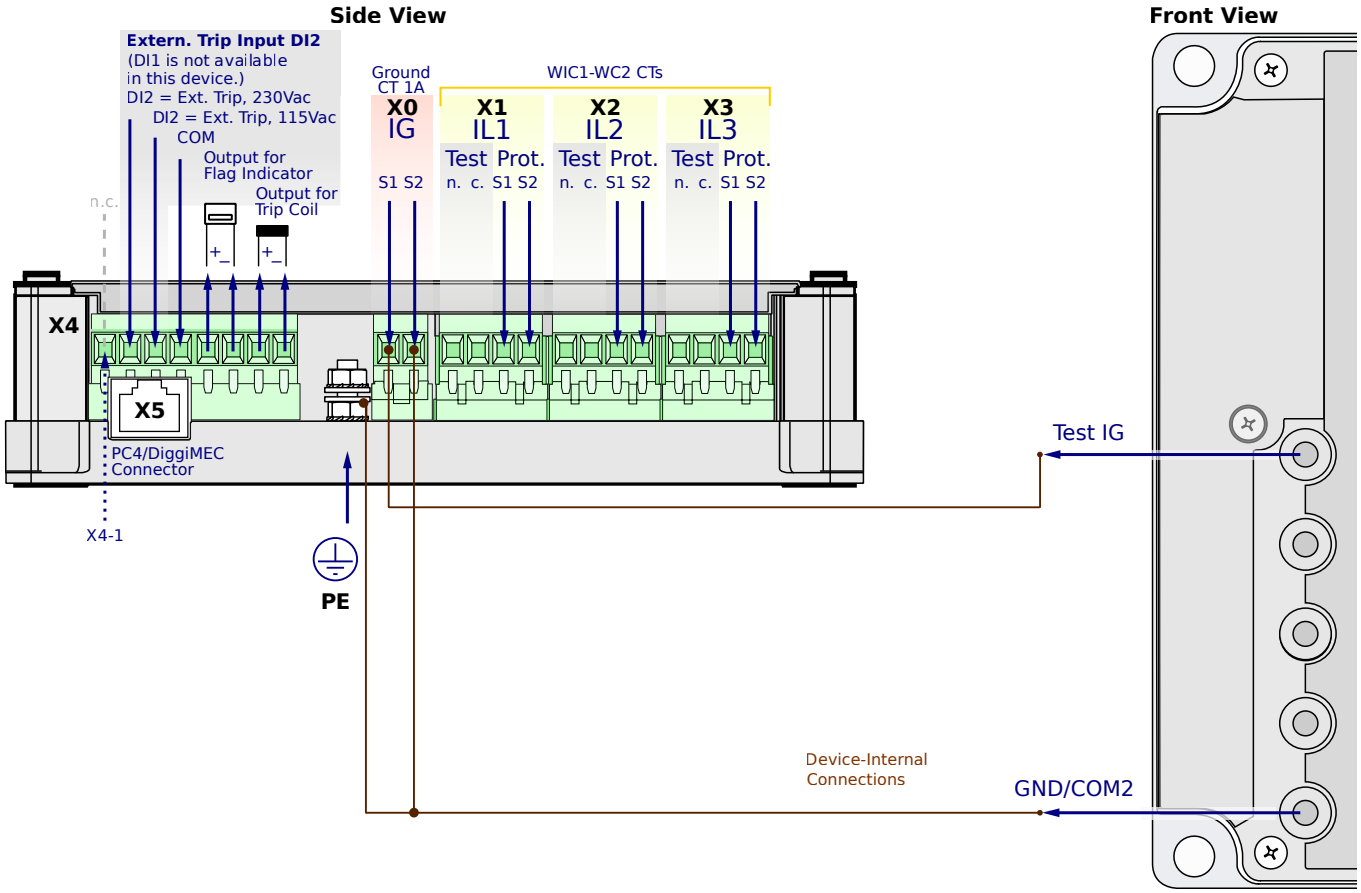


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF1PAH

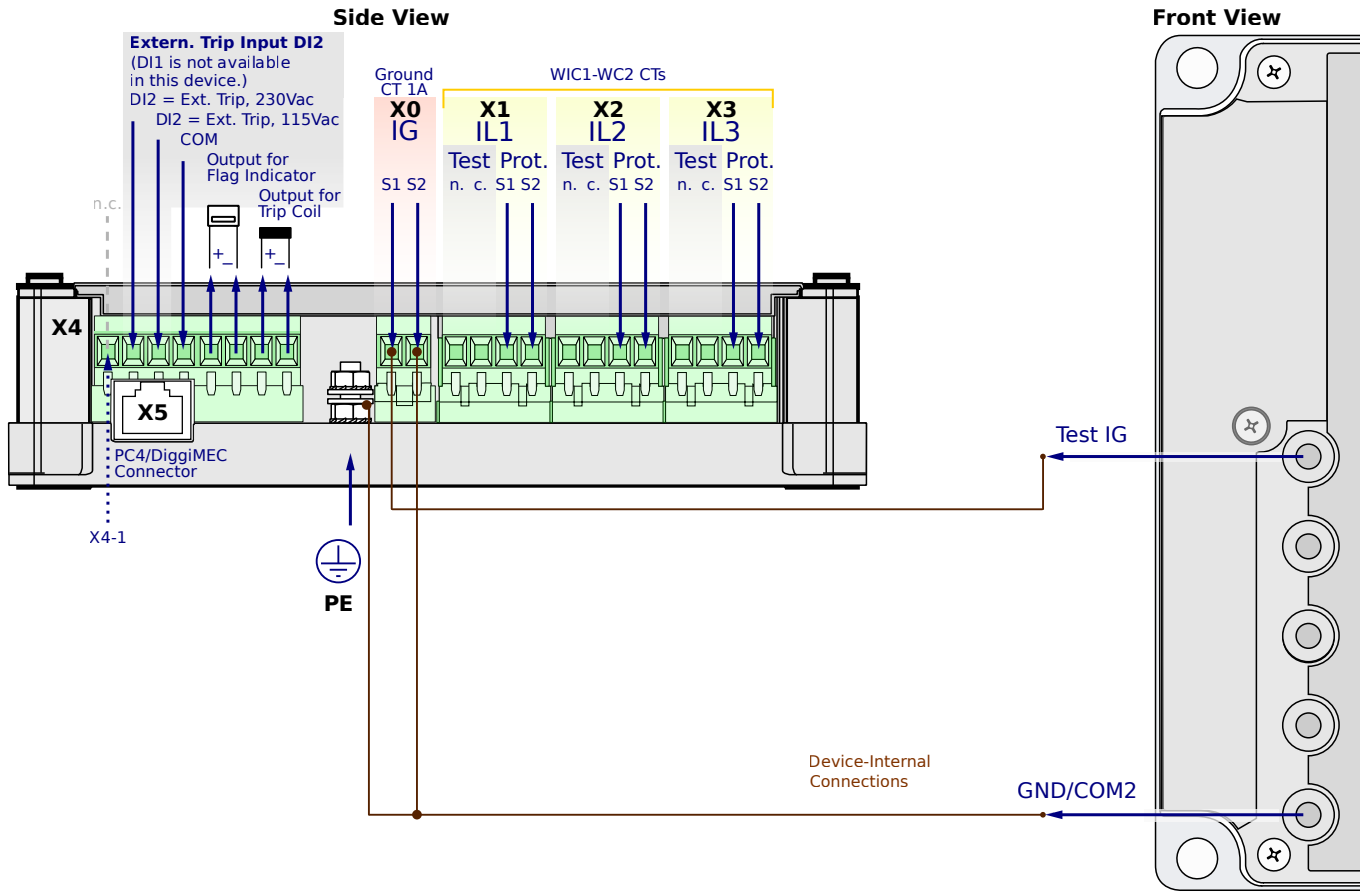


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2SA0

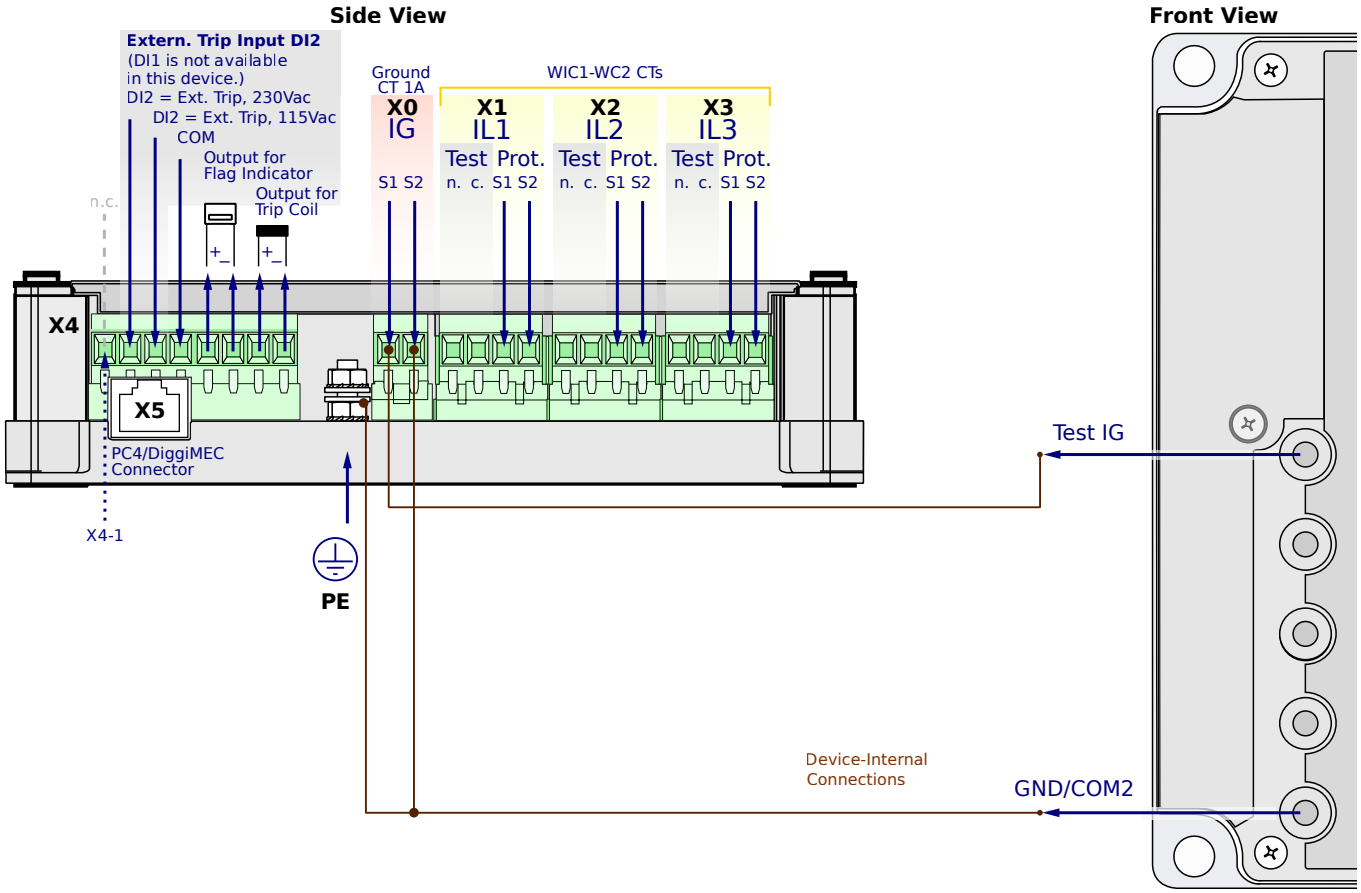


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2SAH

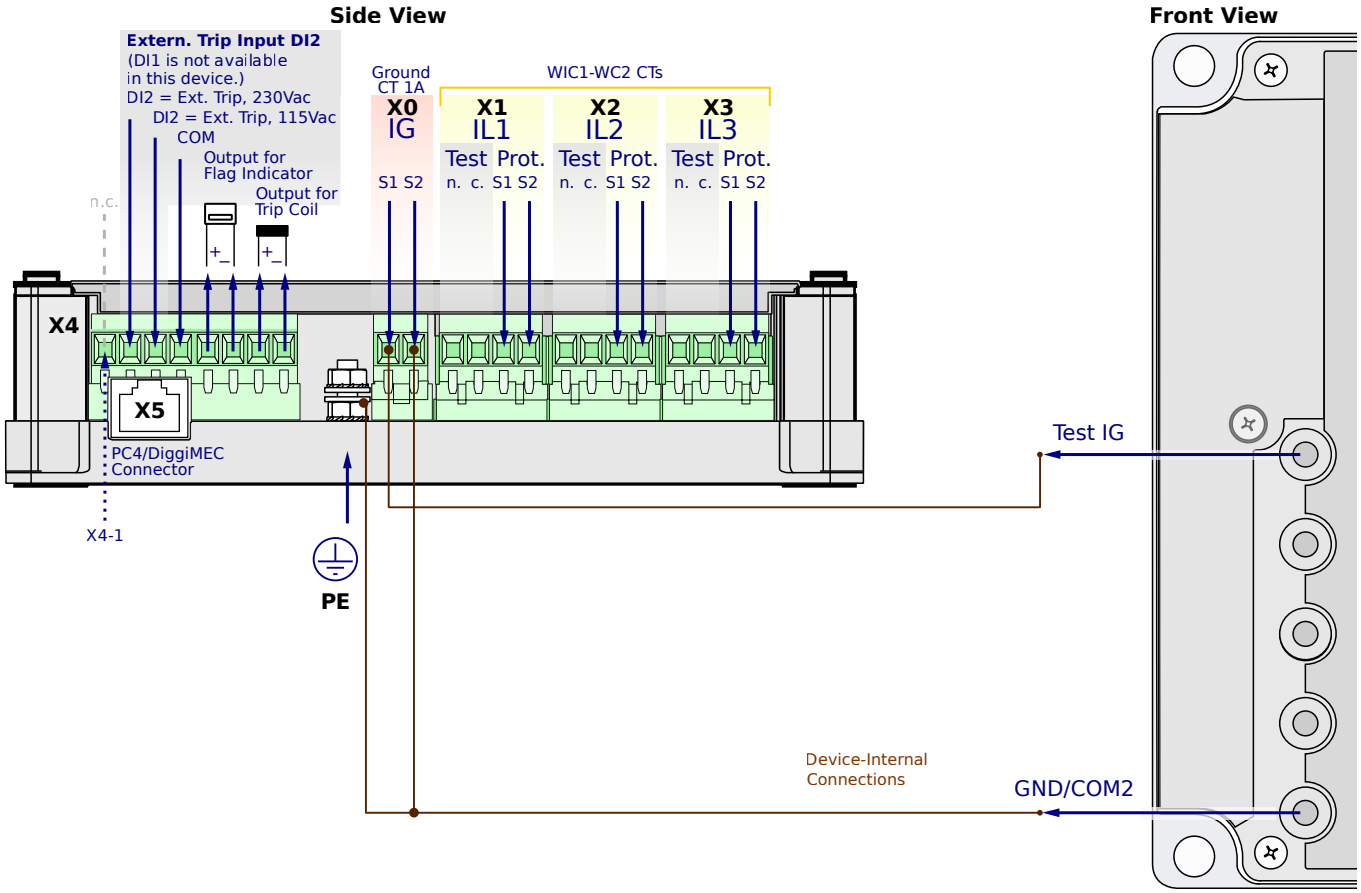


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2AA0

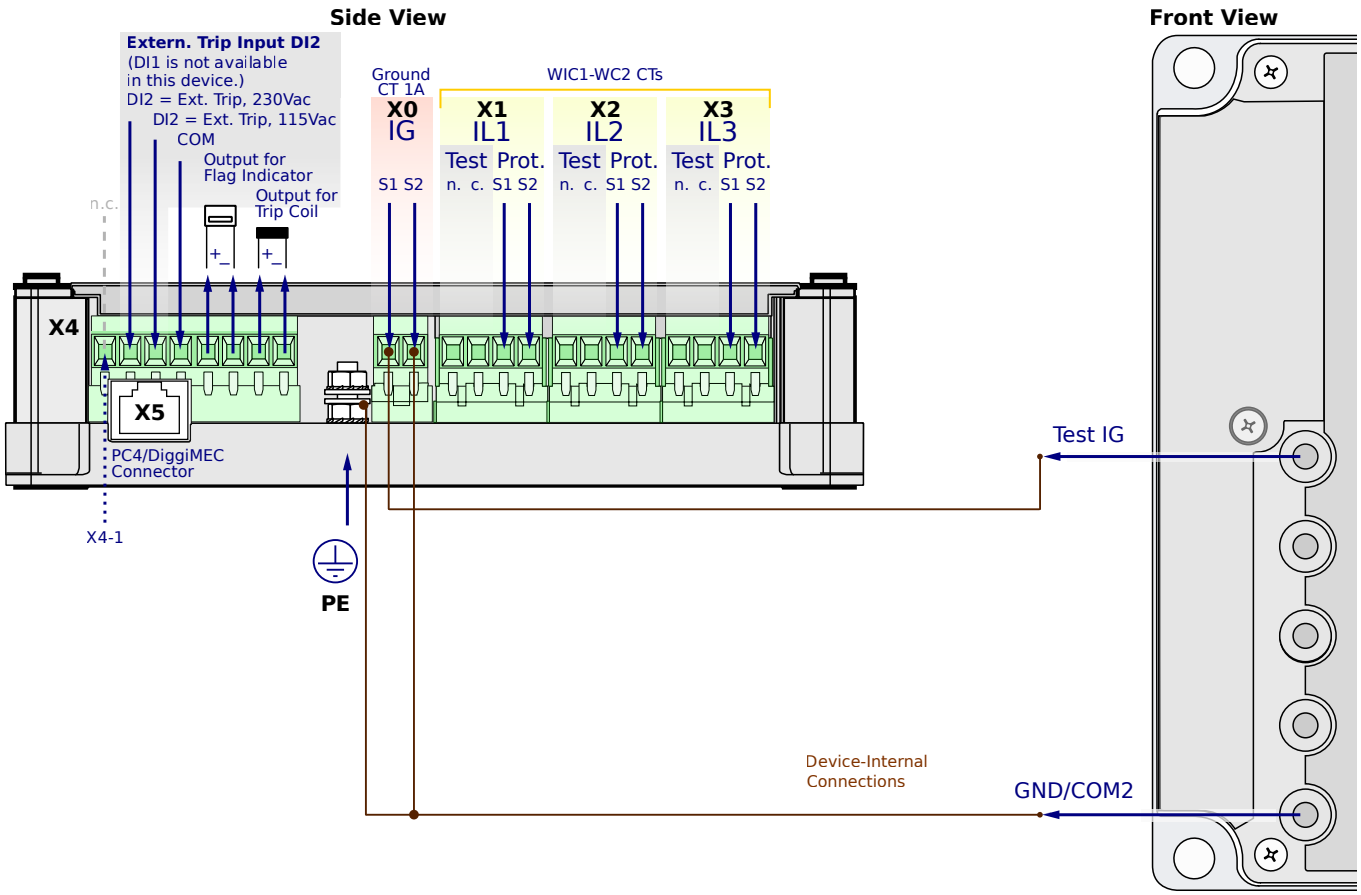


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2AAH

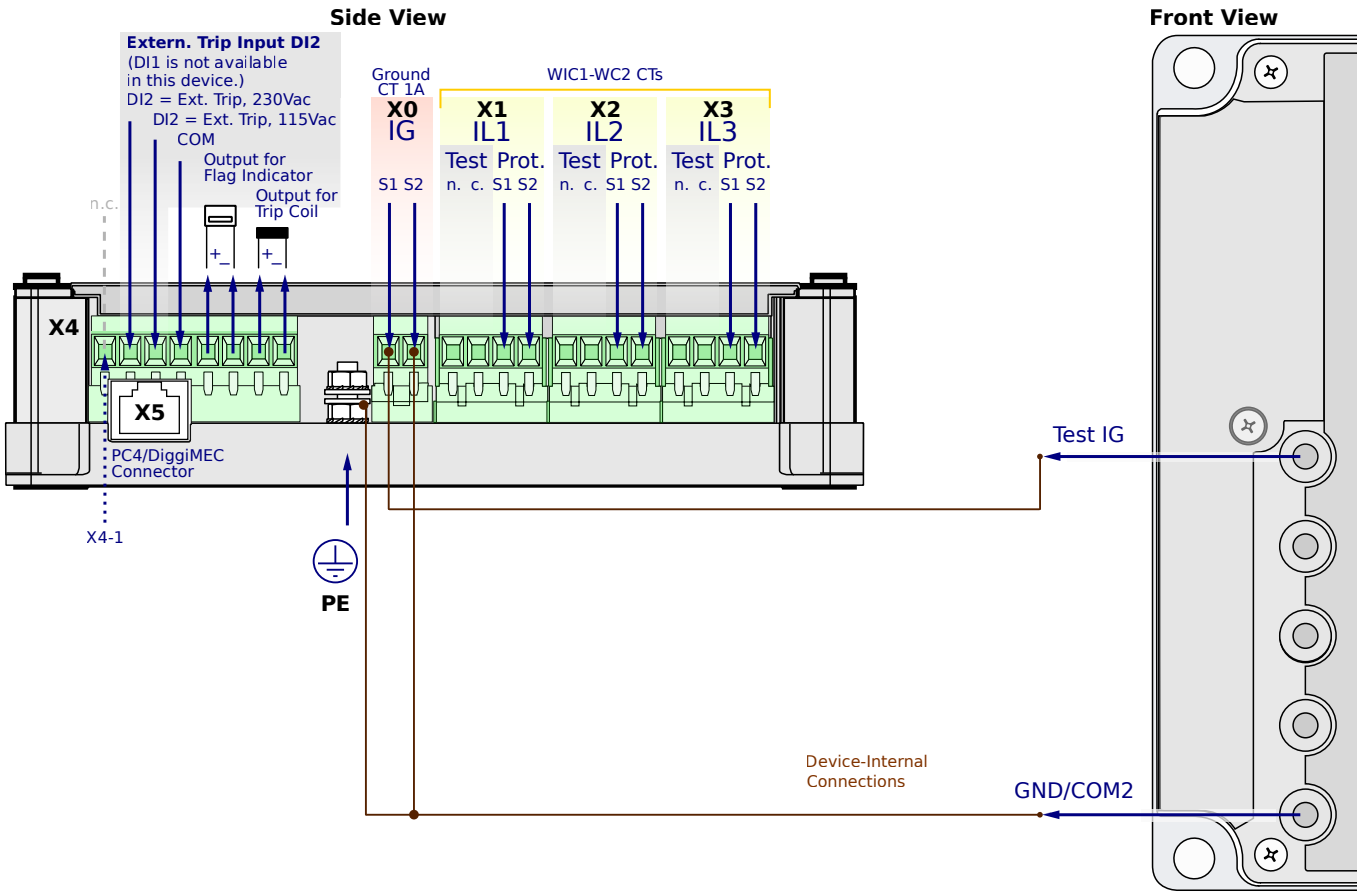


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2PA0

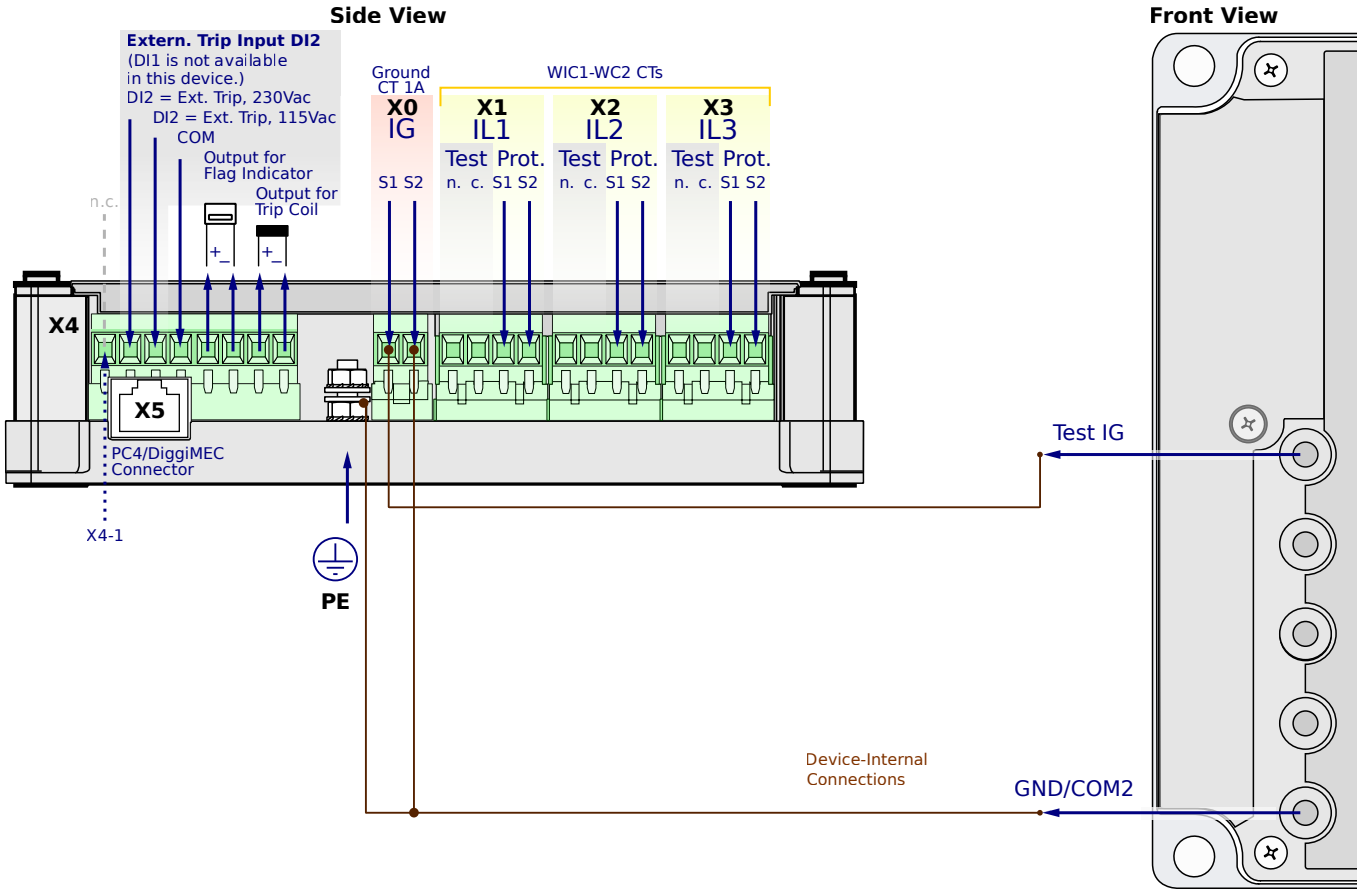


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FF2PAH

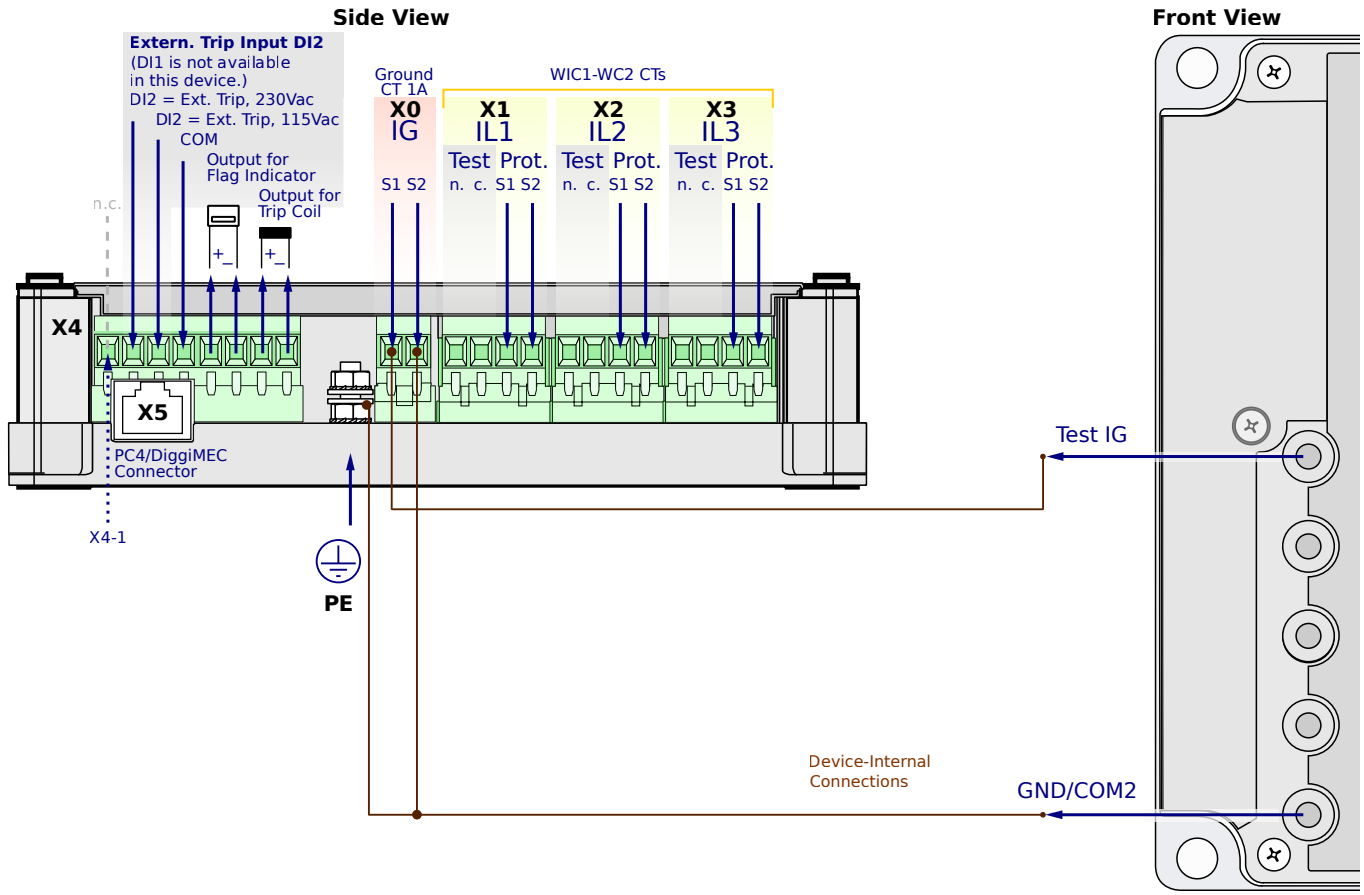


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1SA0

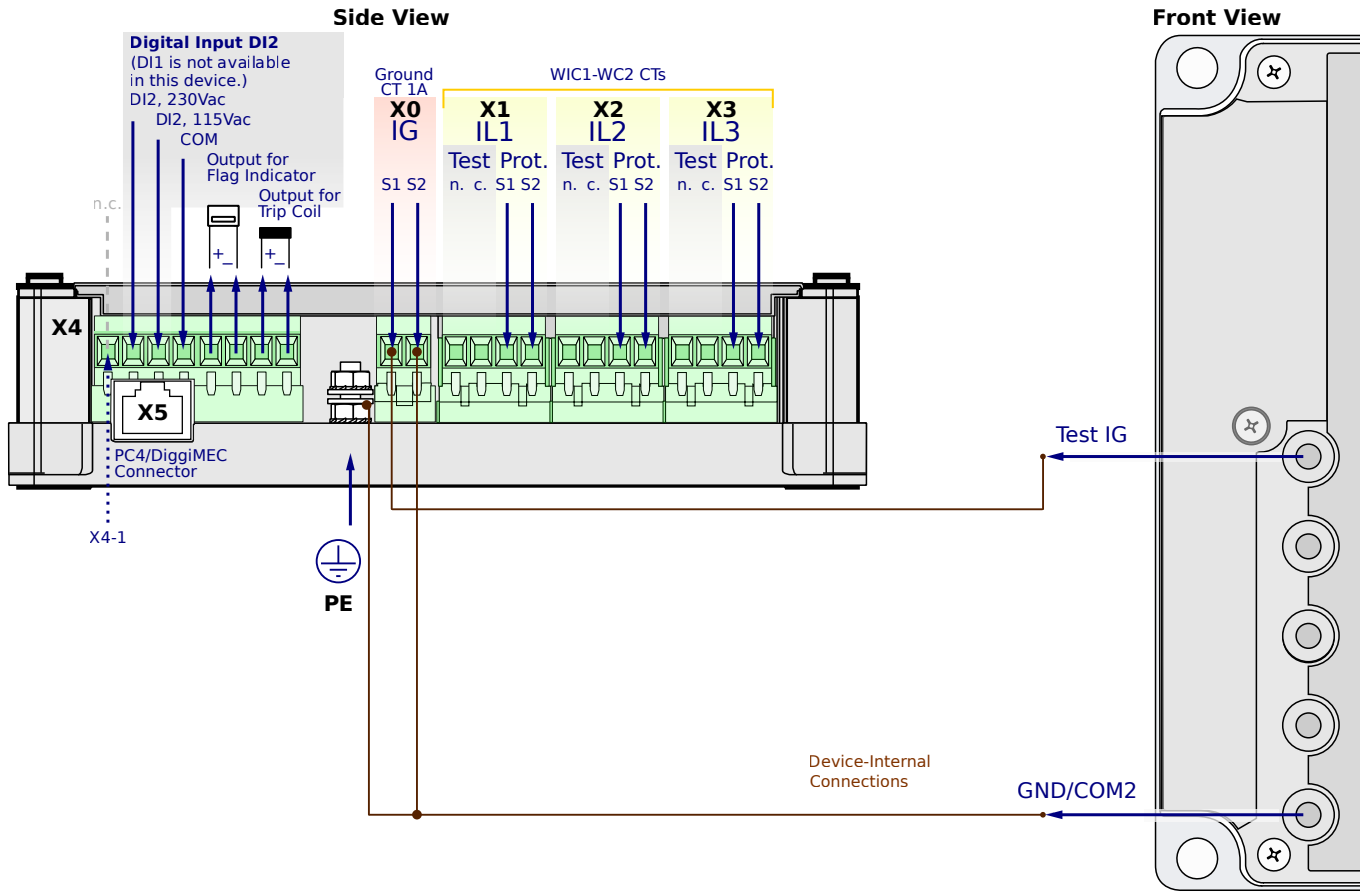


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1SAH

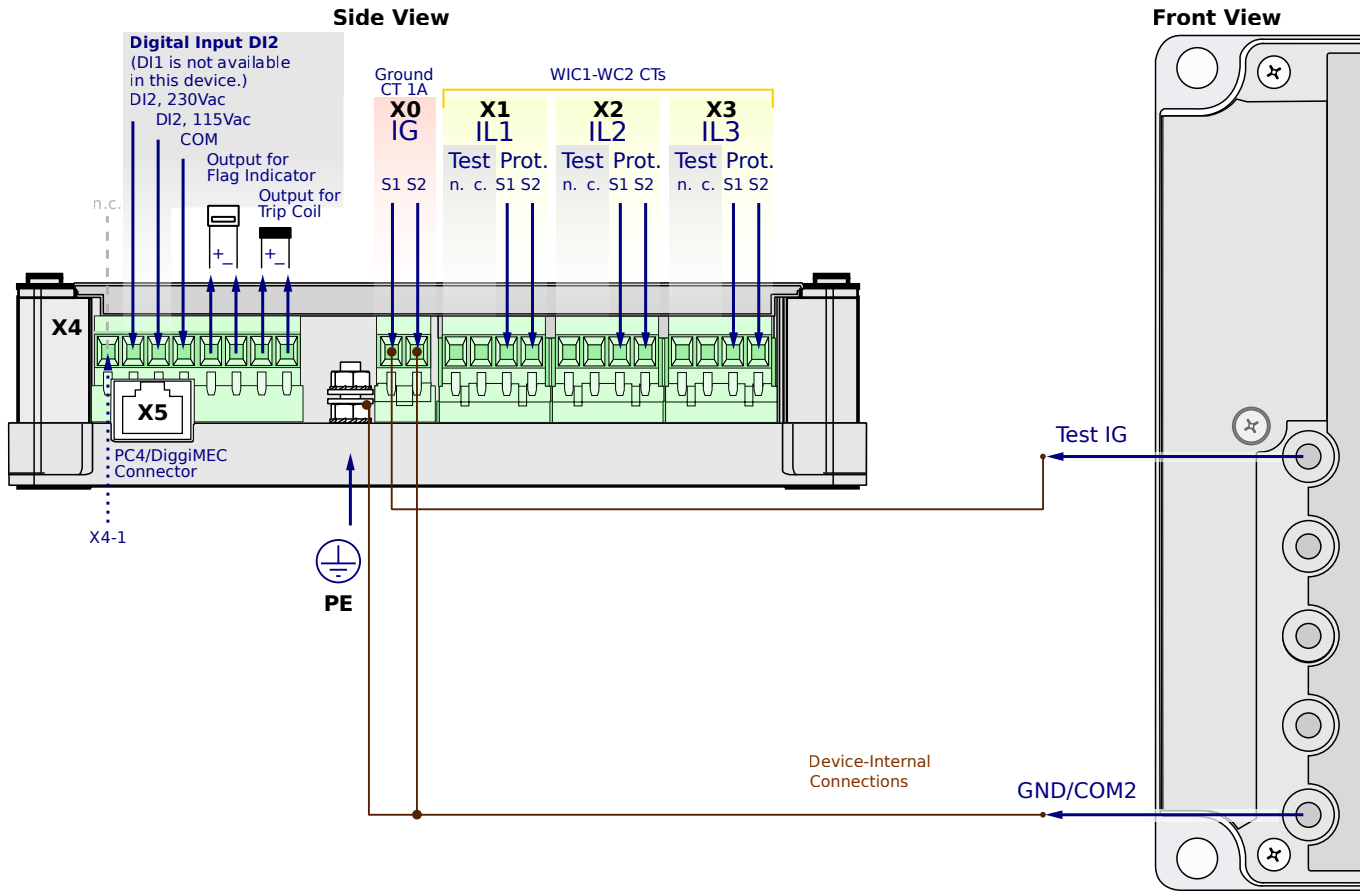


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1AA0

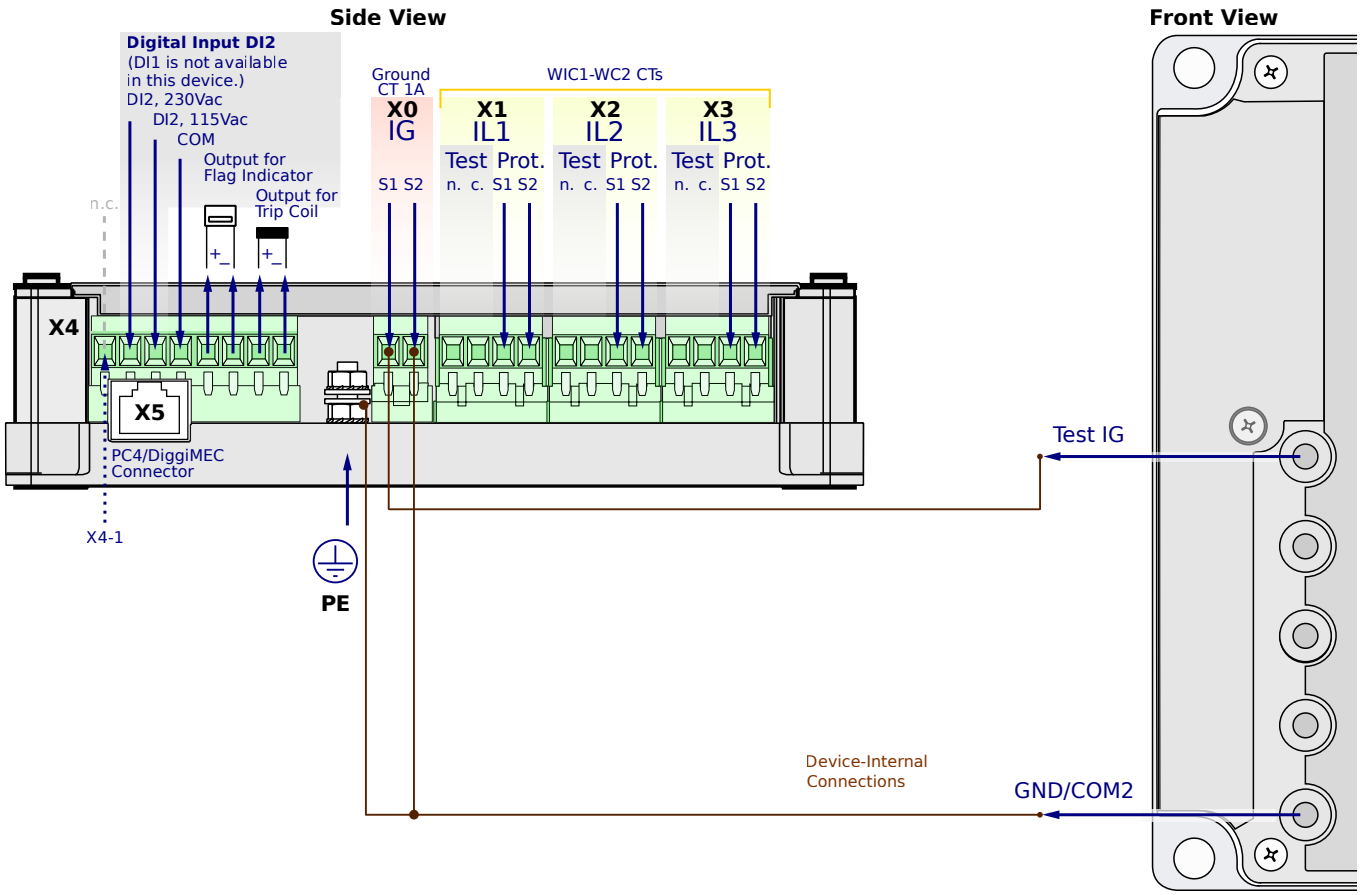


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1AAH

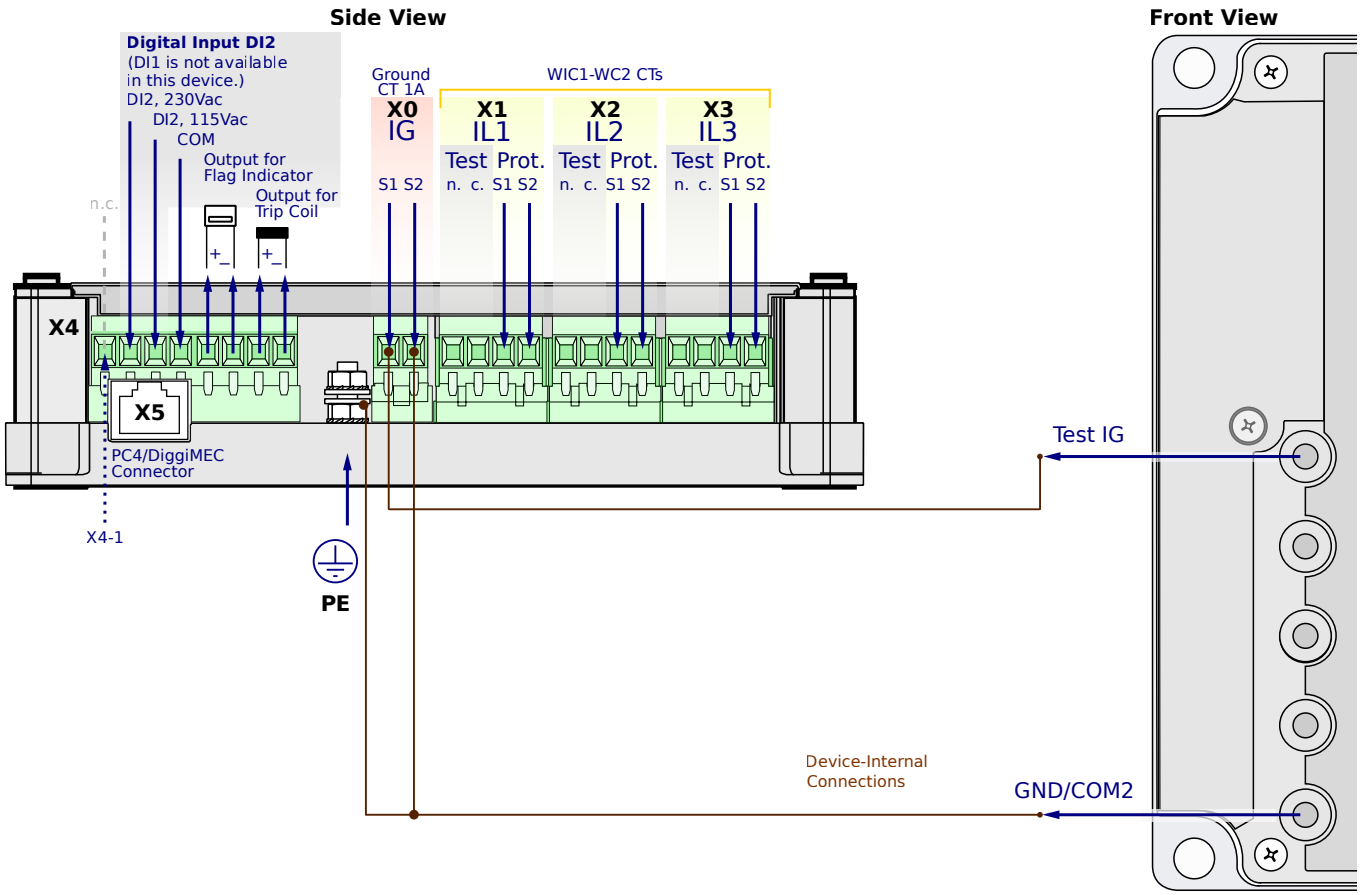


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1PA0

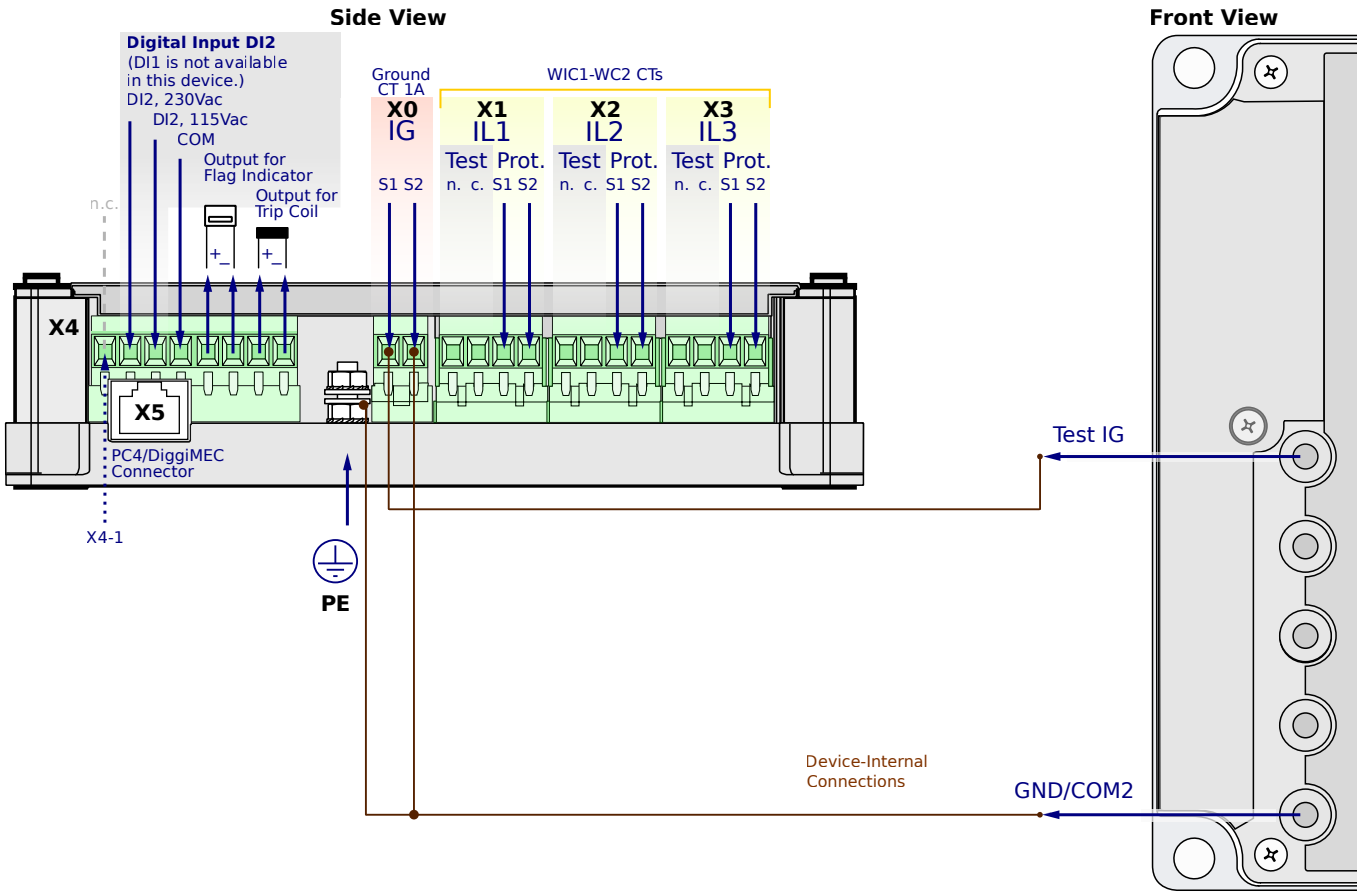


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC1PAH

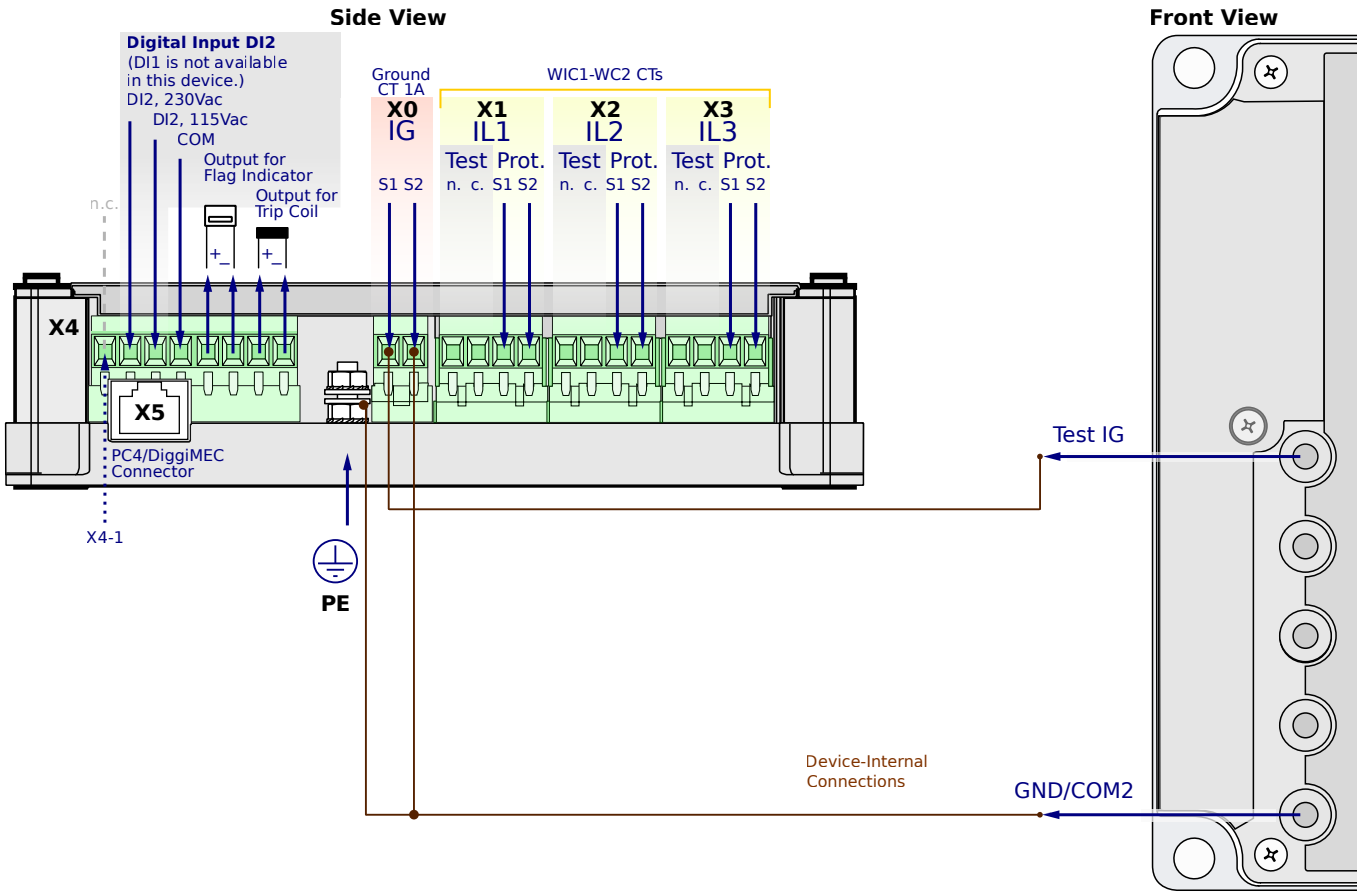


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2SA0

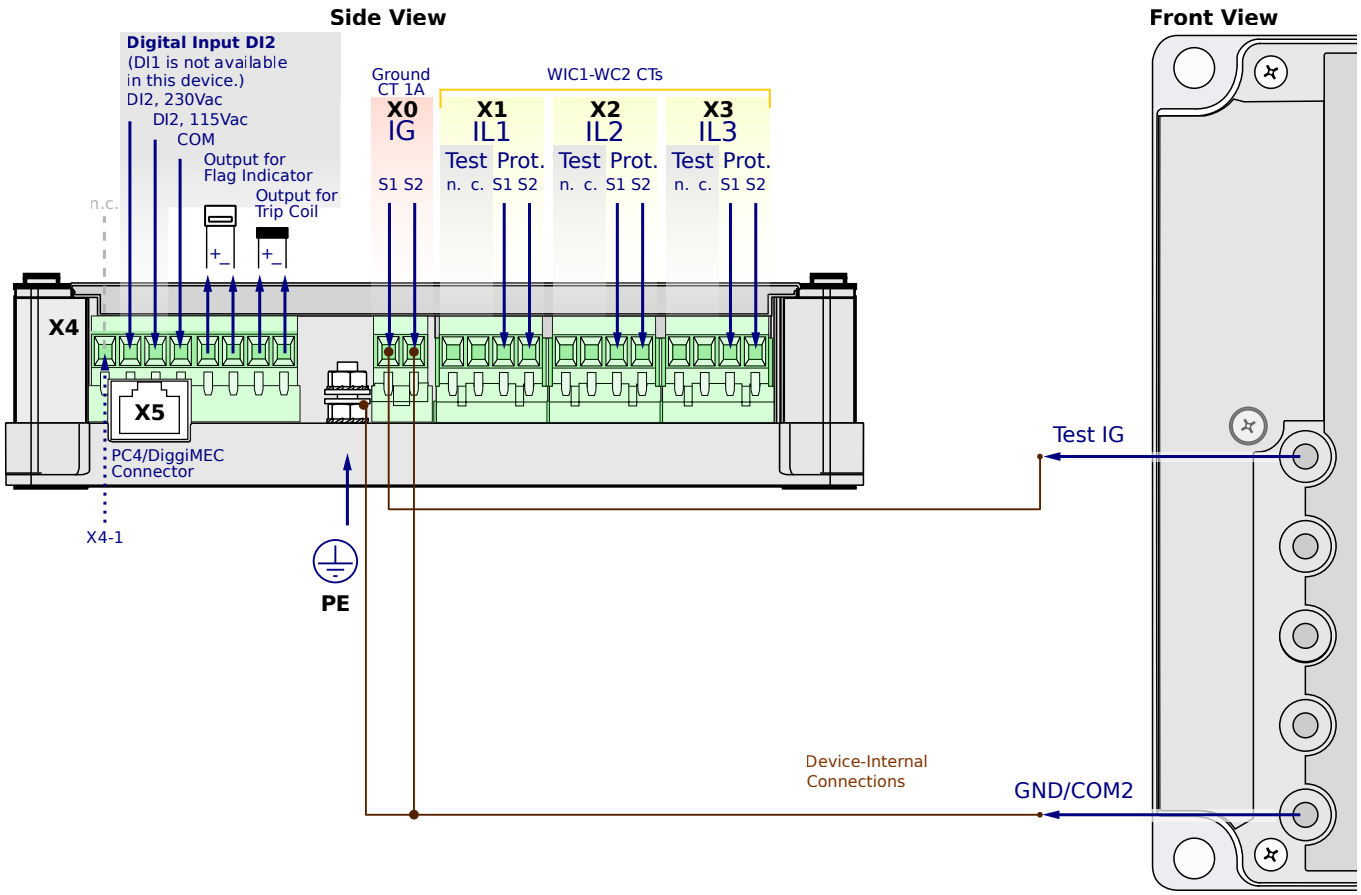


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2SAH

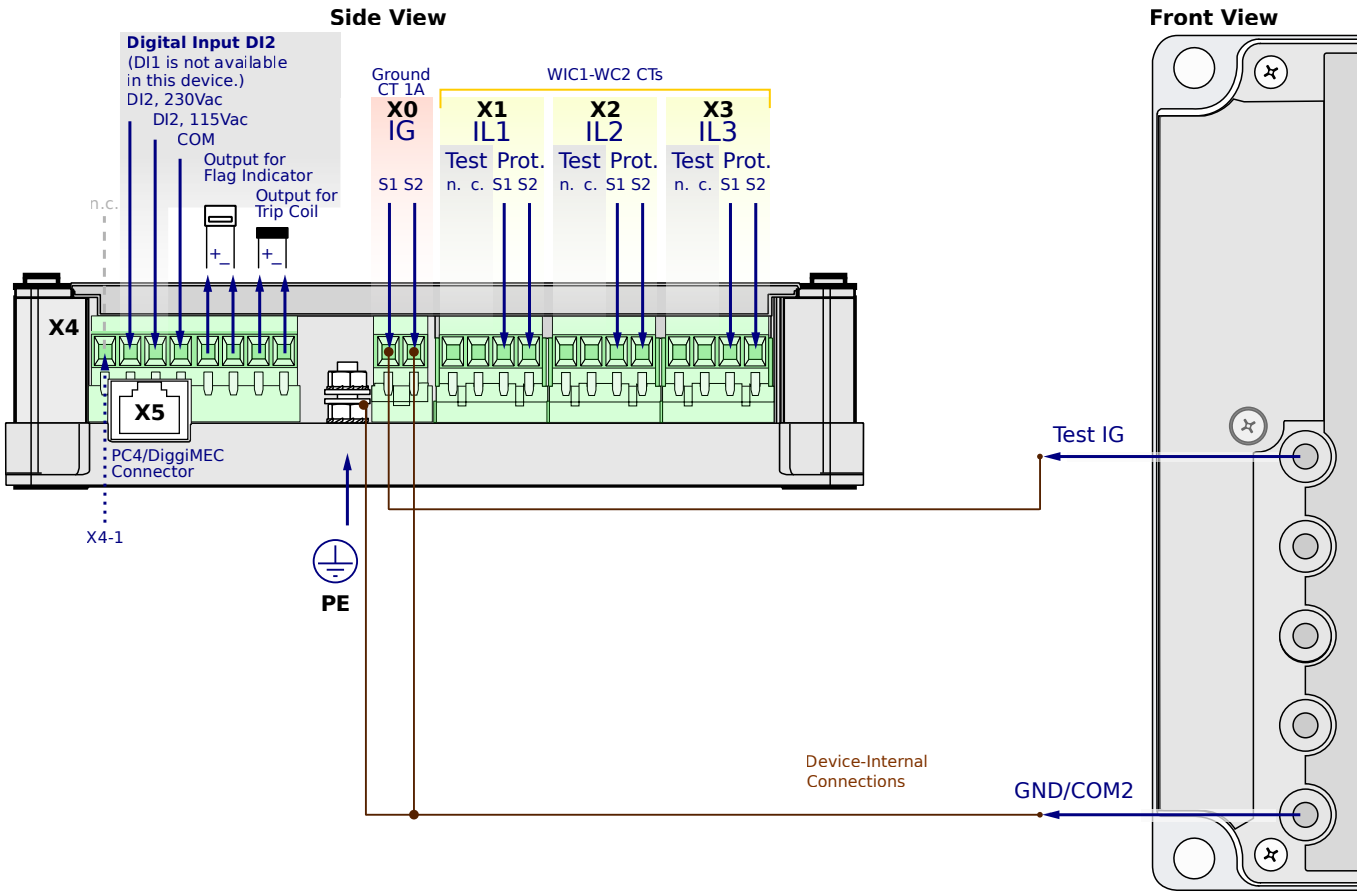


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2AA0

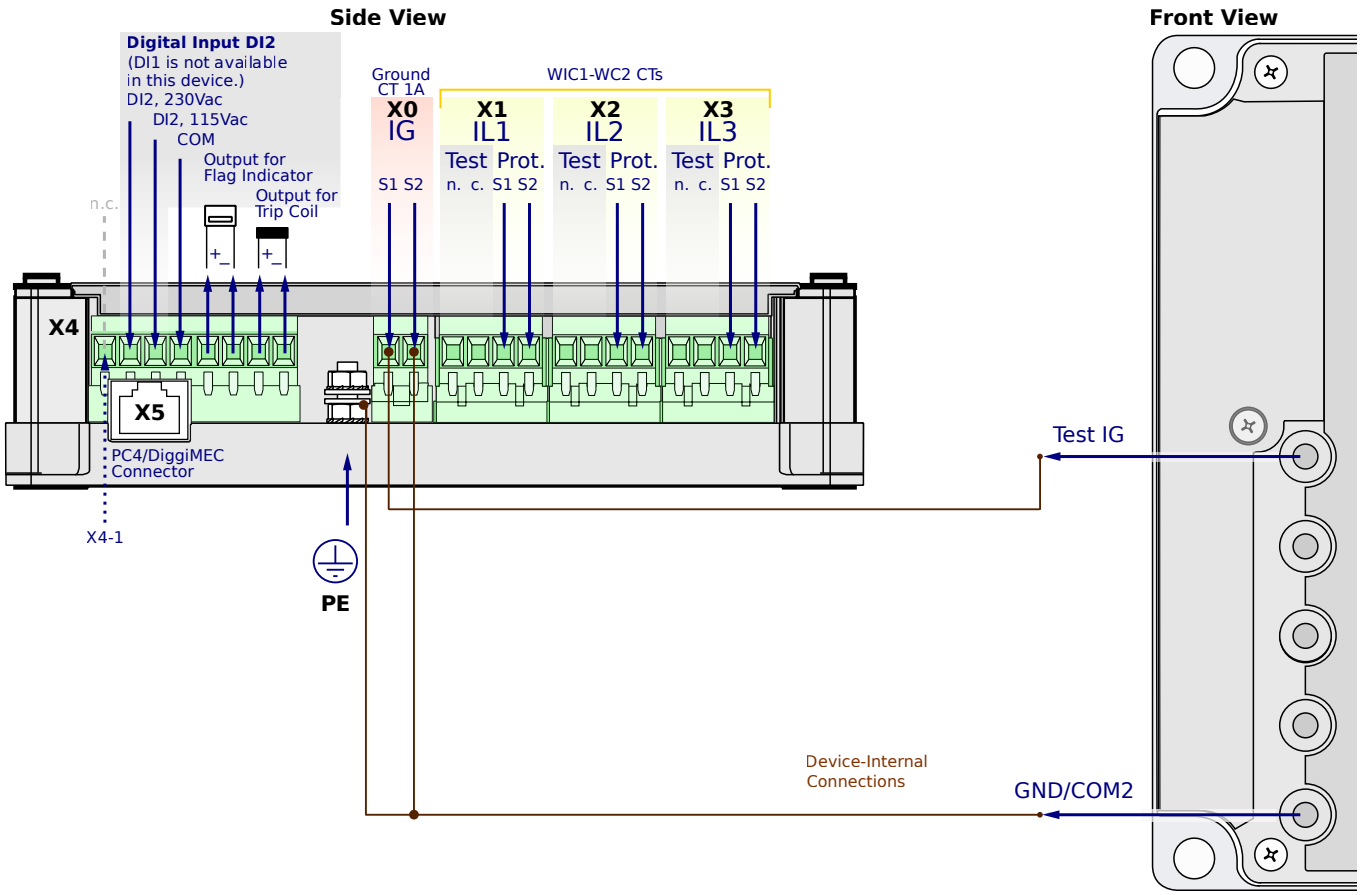


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2AAH

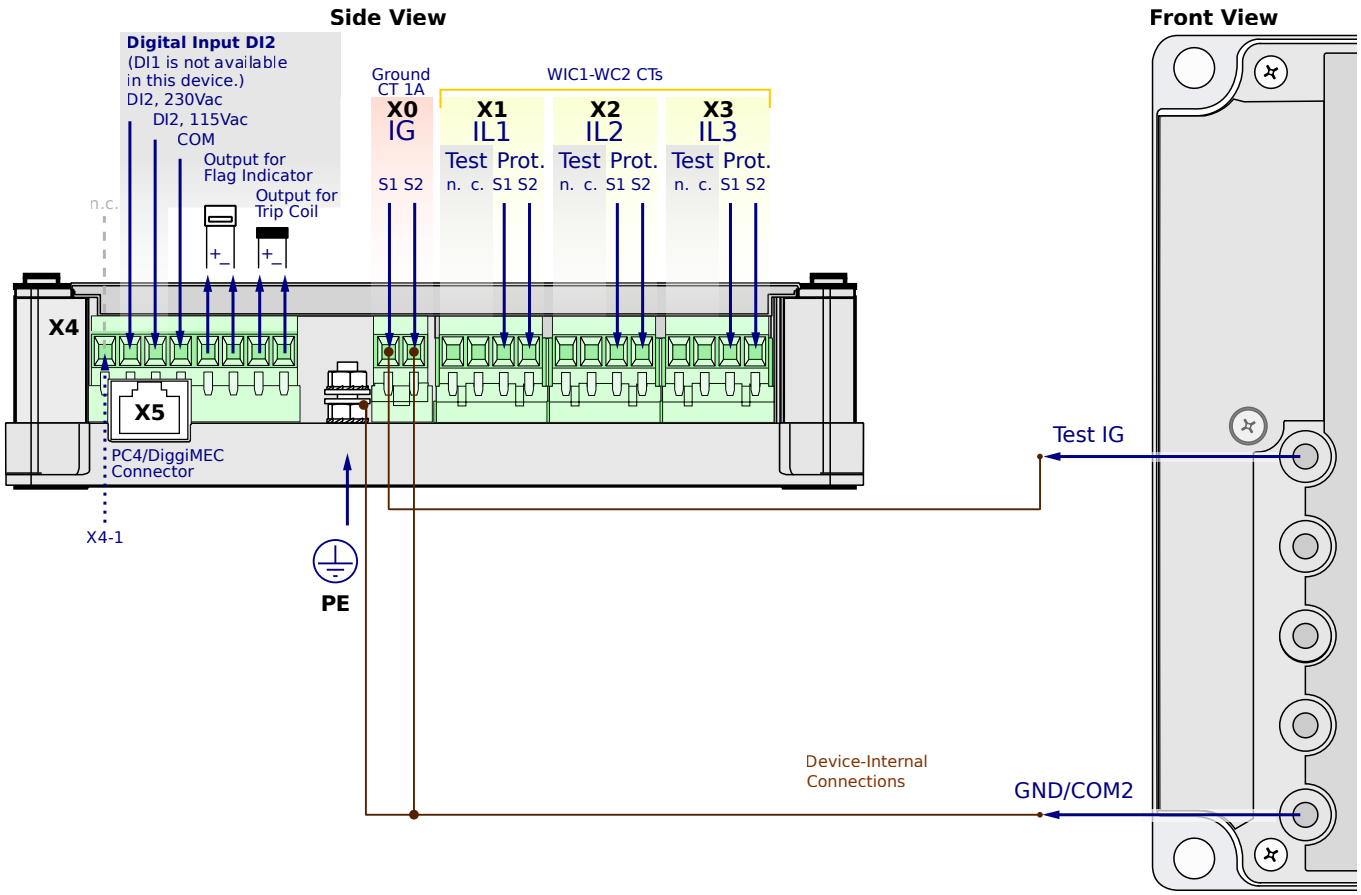


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2PA0

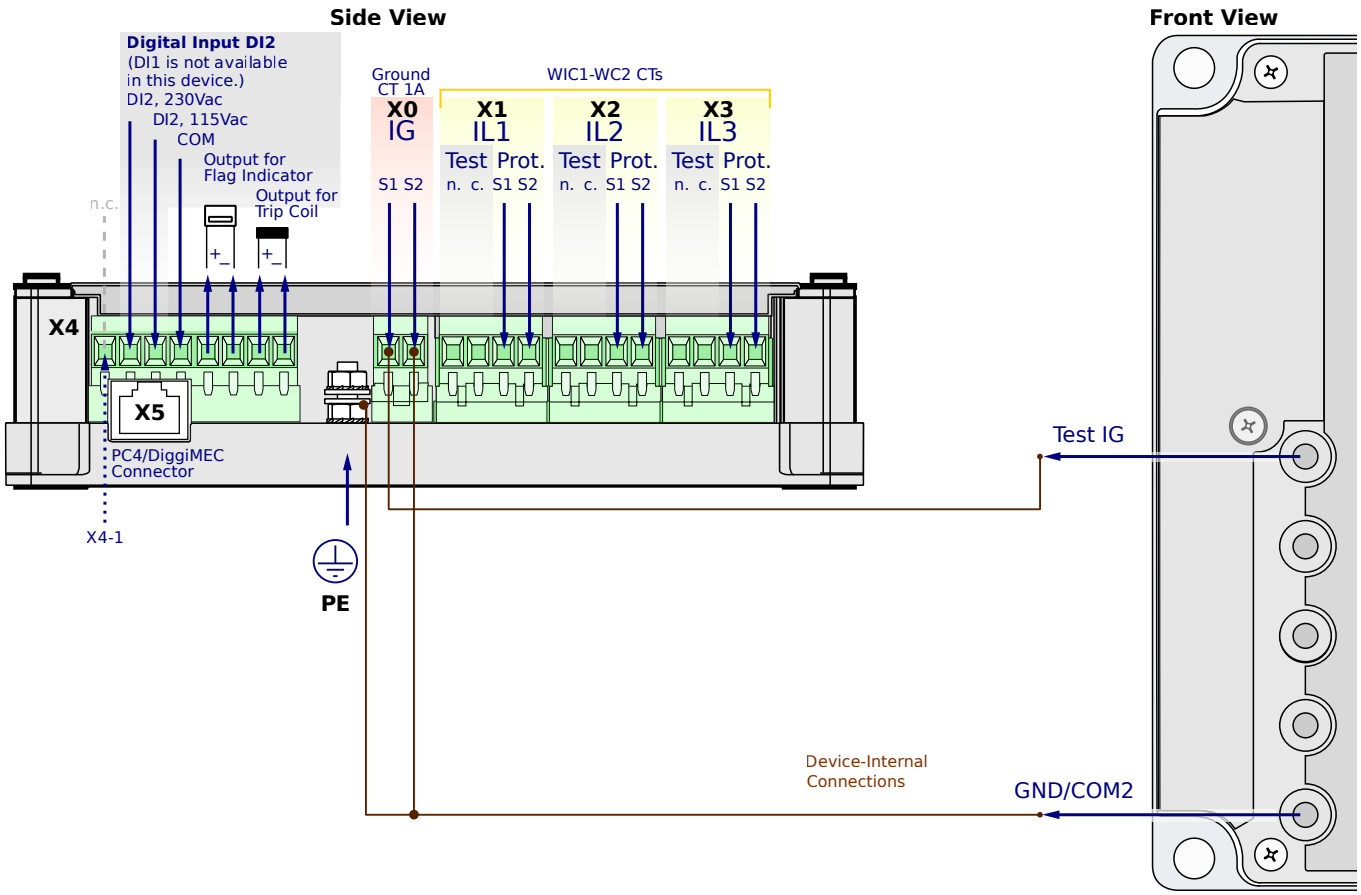


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5FC2PAH

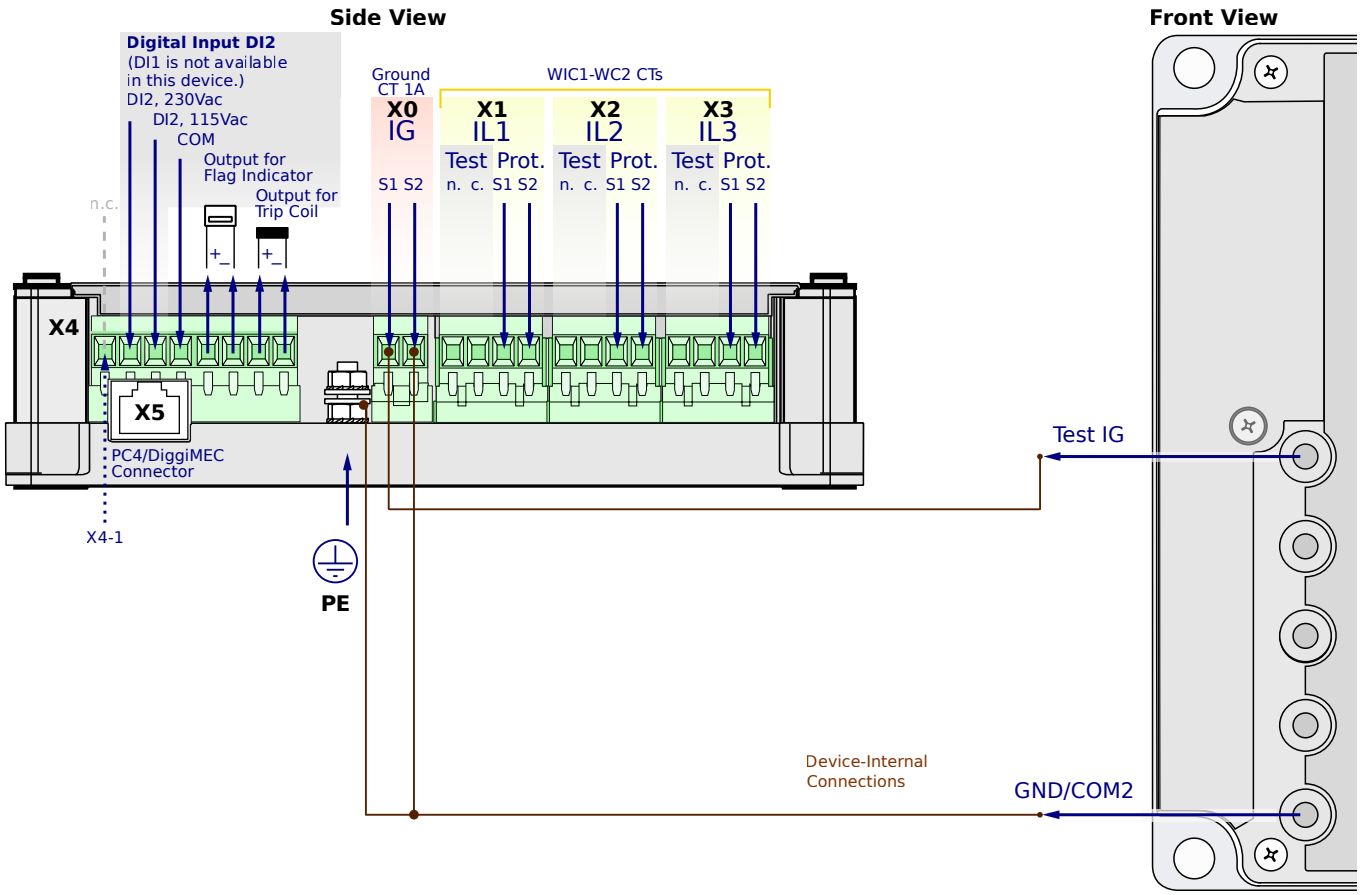


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1SA0

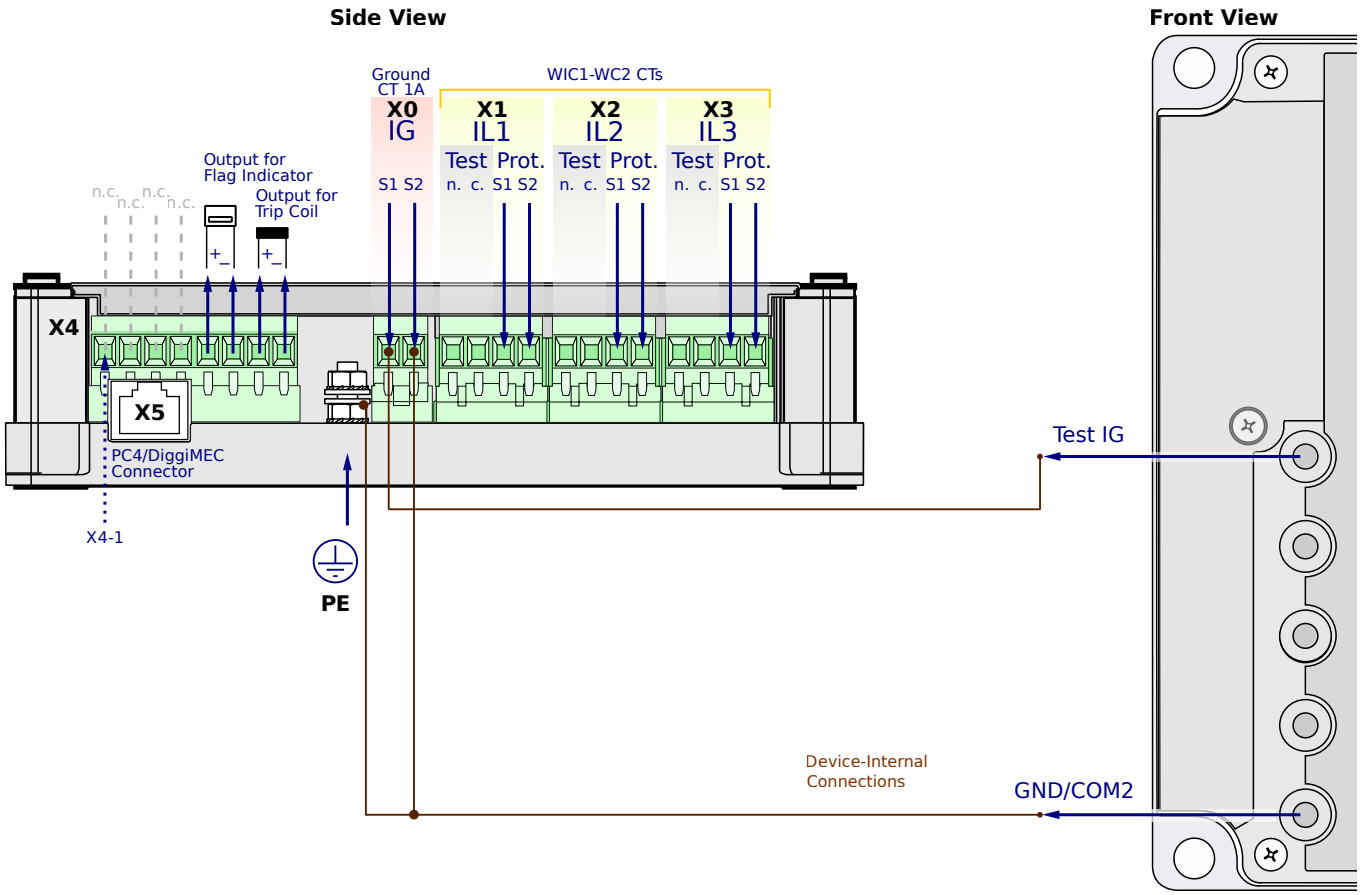


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1SAH

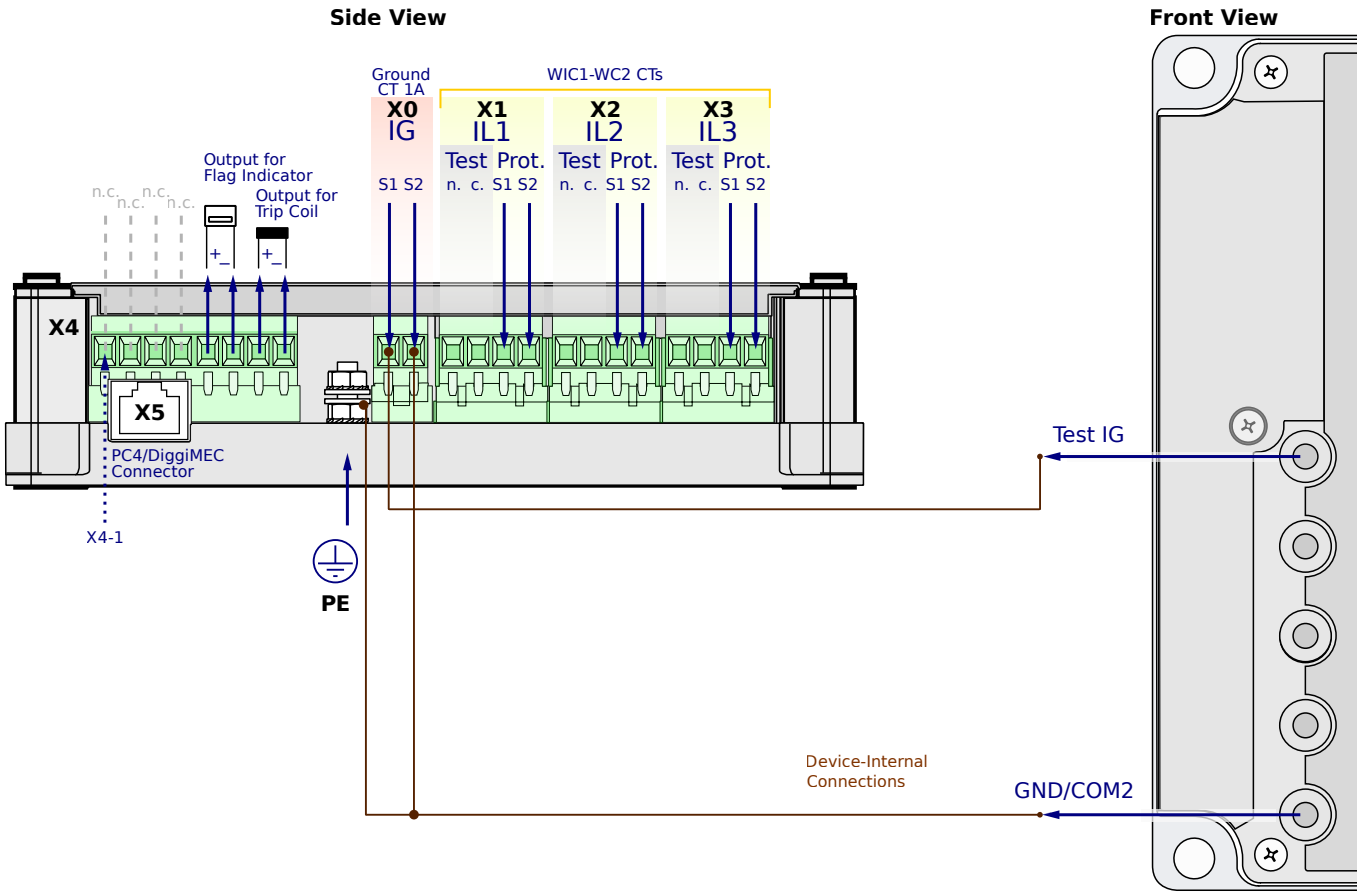


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1AA0

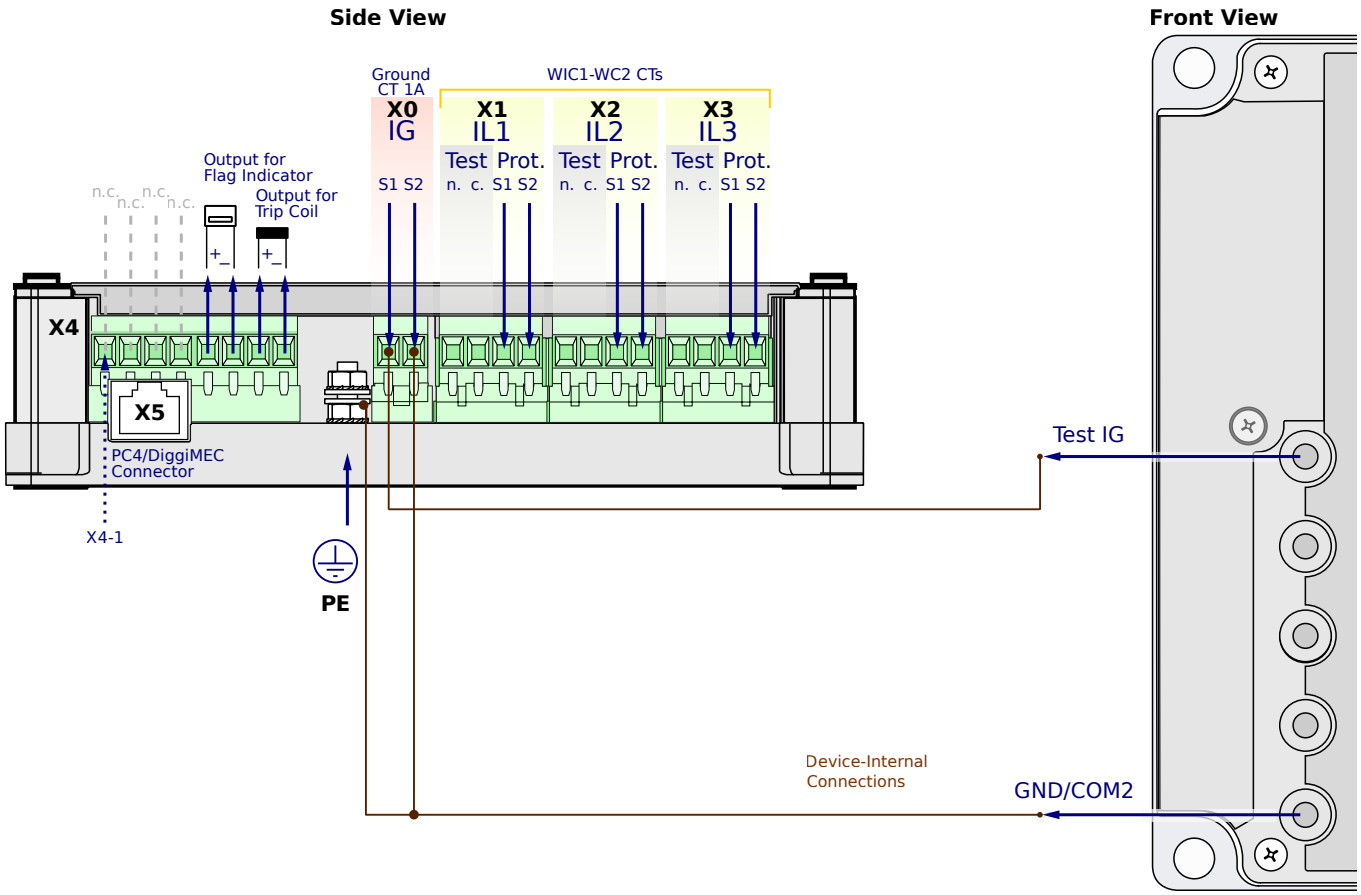


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1AAH

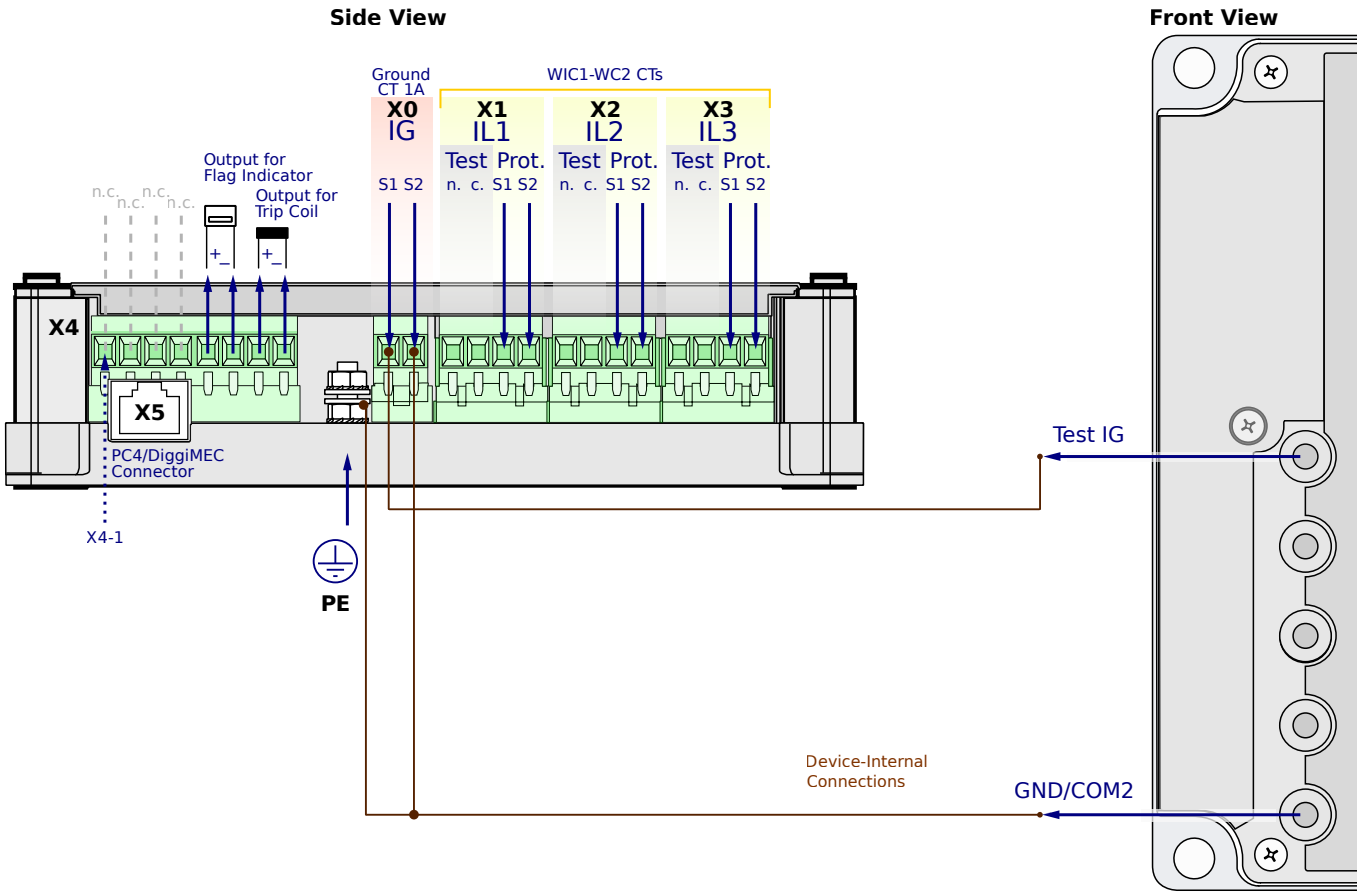


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1PA0

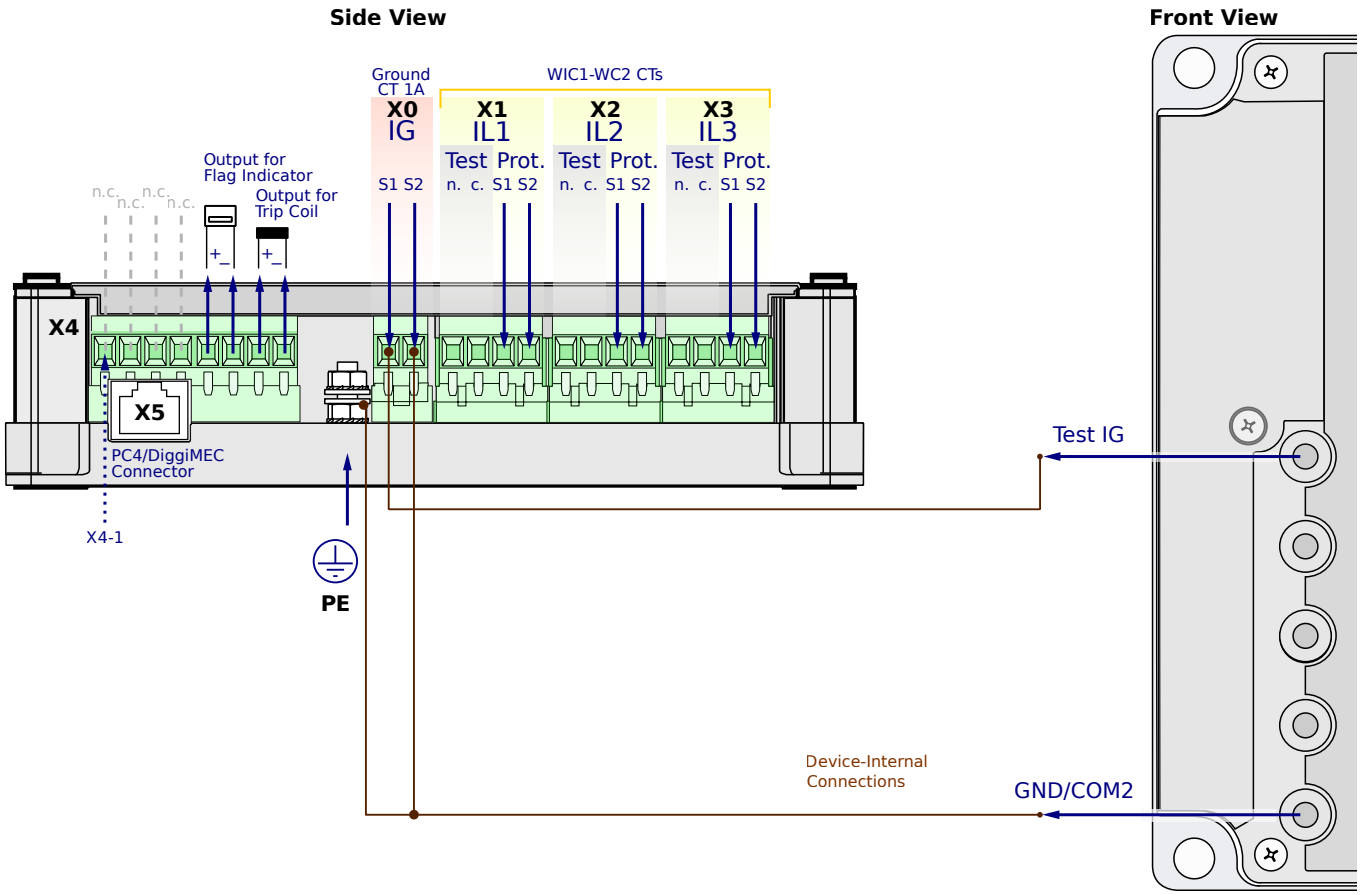


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN1PAH

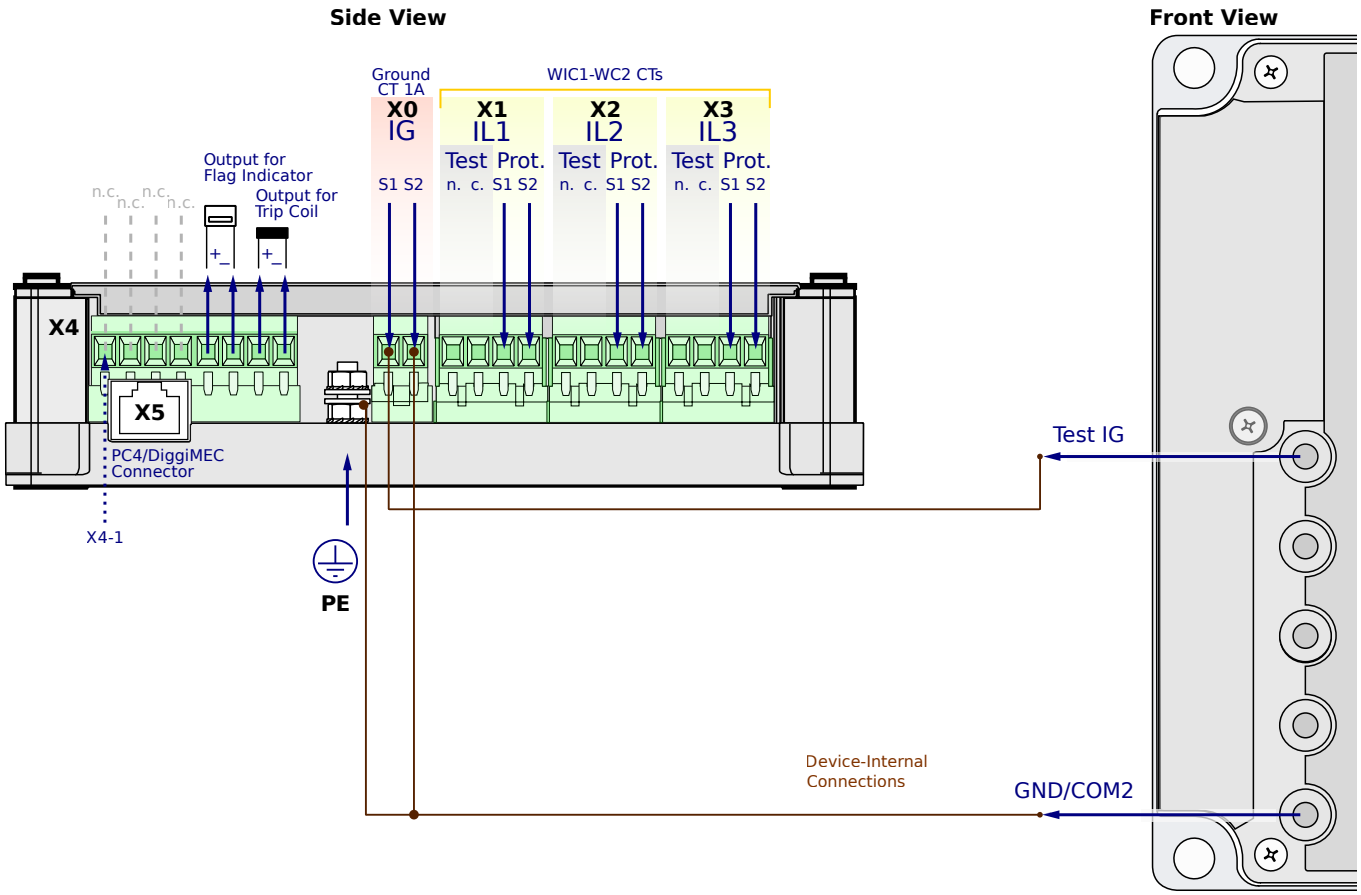


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2SA0

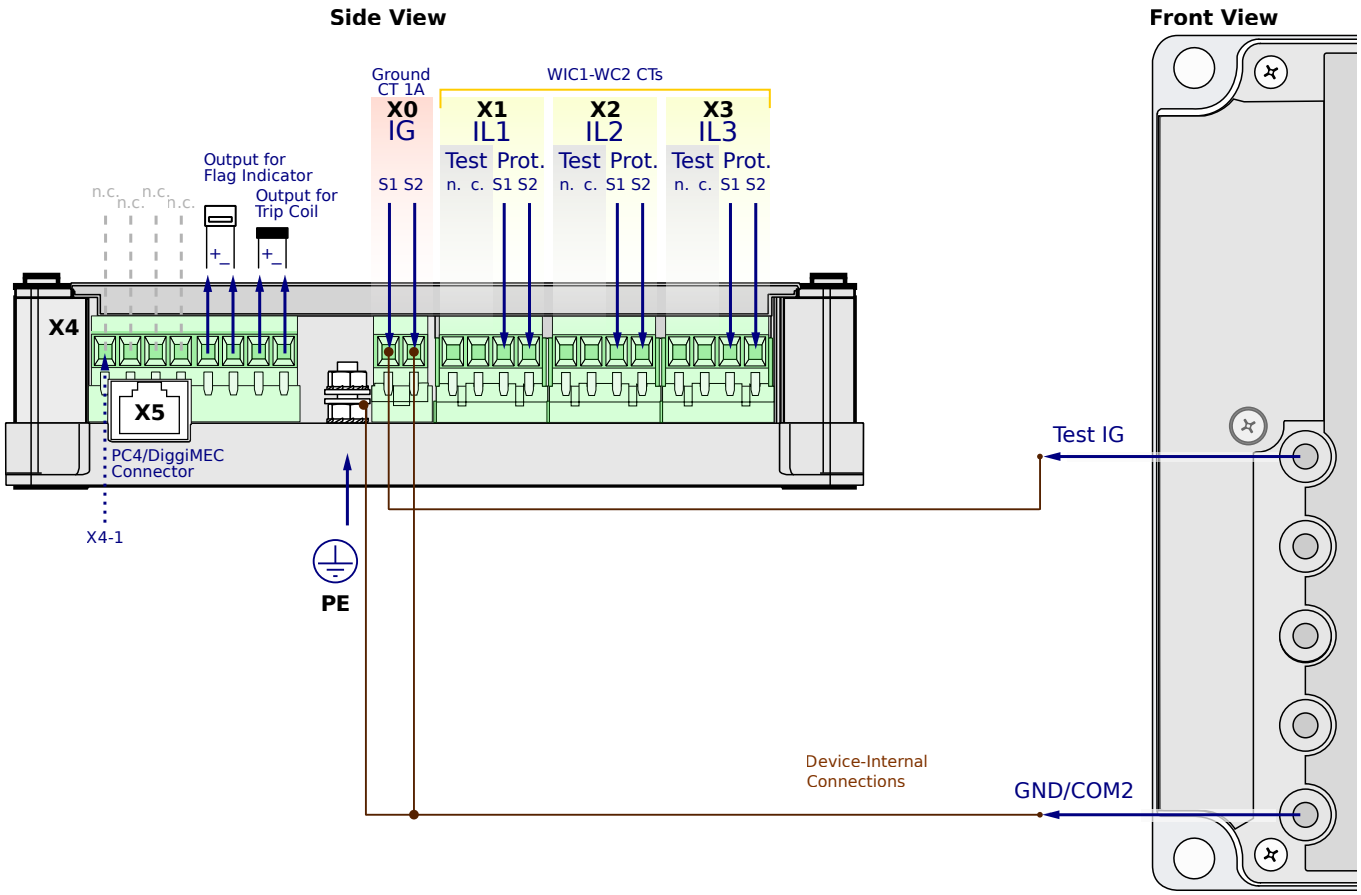


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2SAH

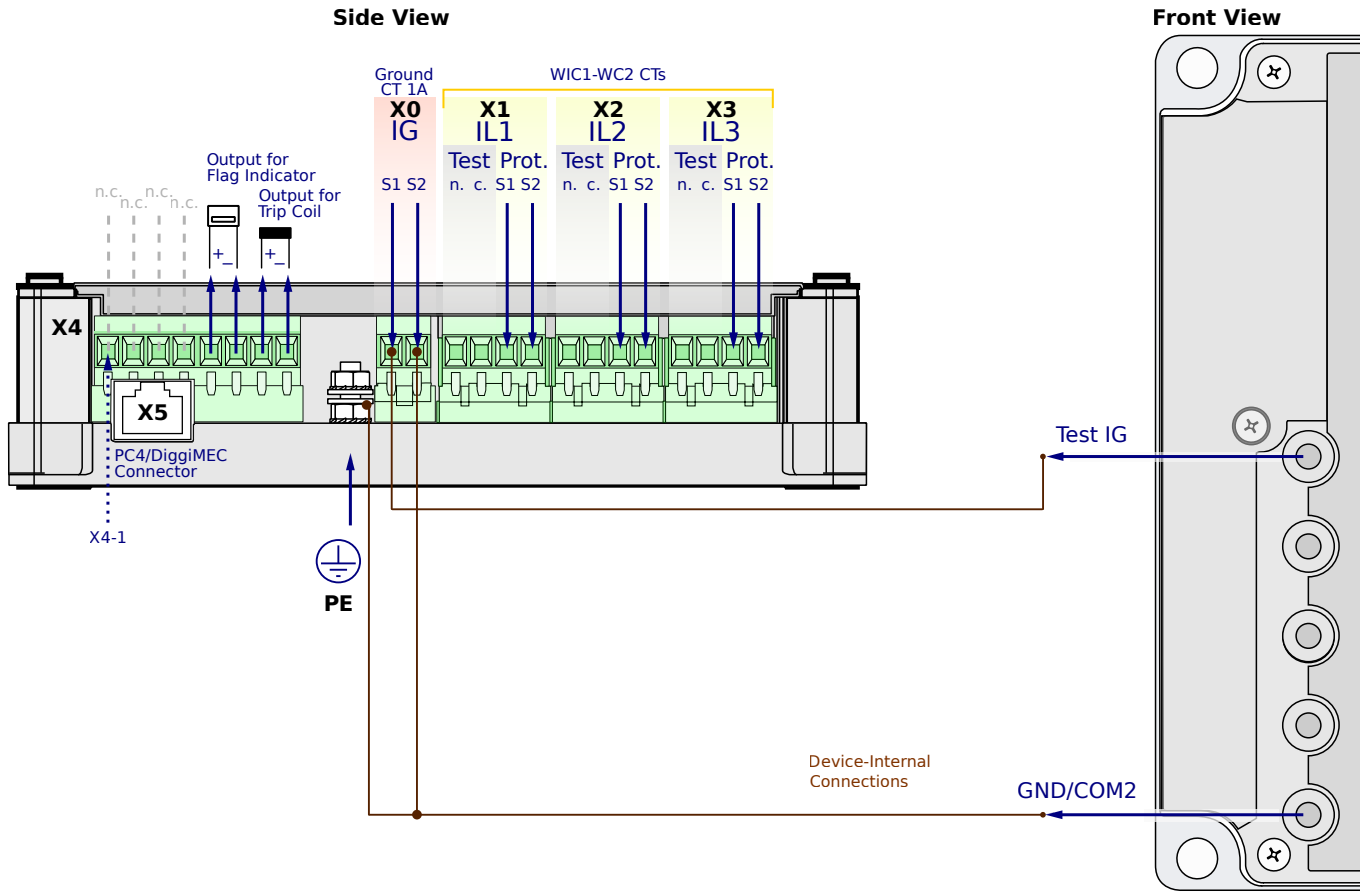


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2AA0

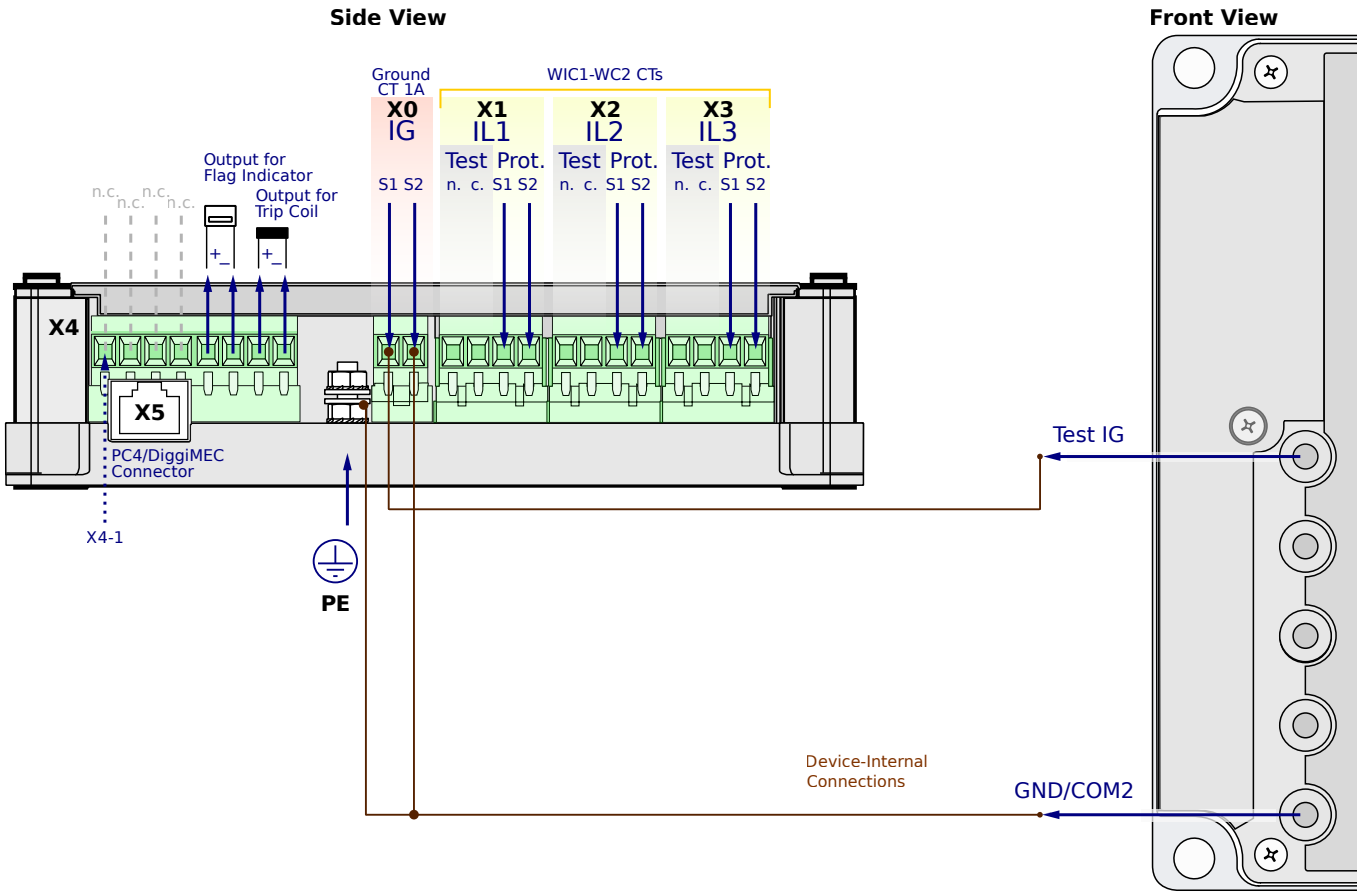


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2AAH

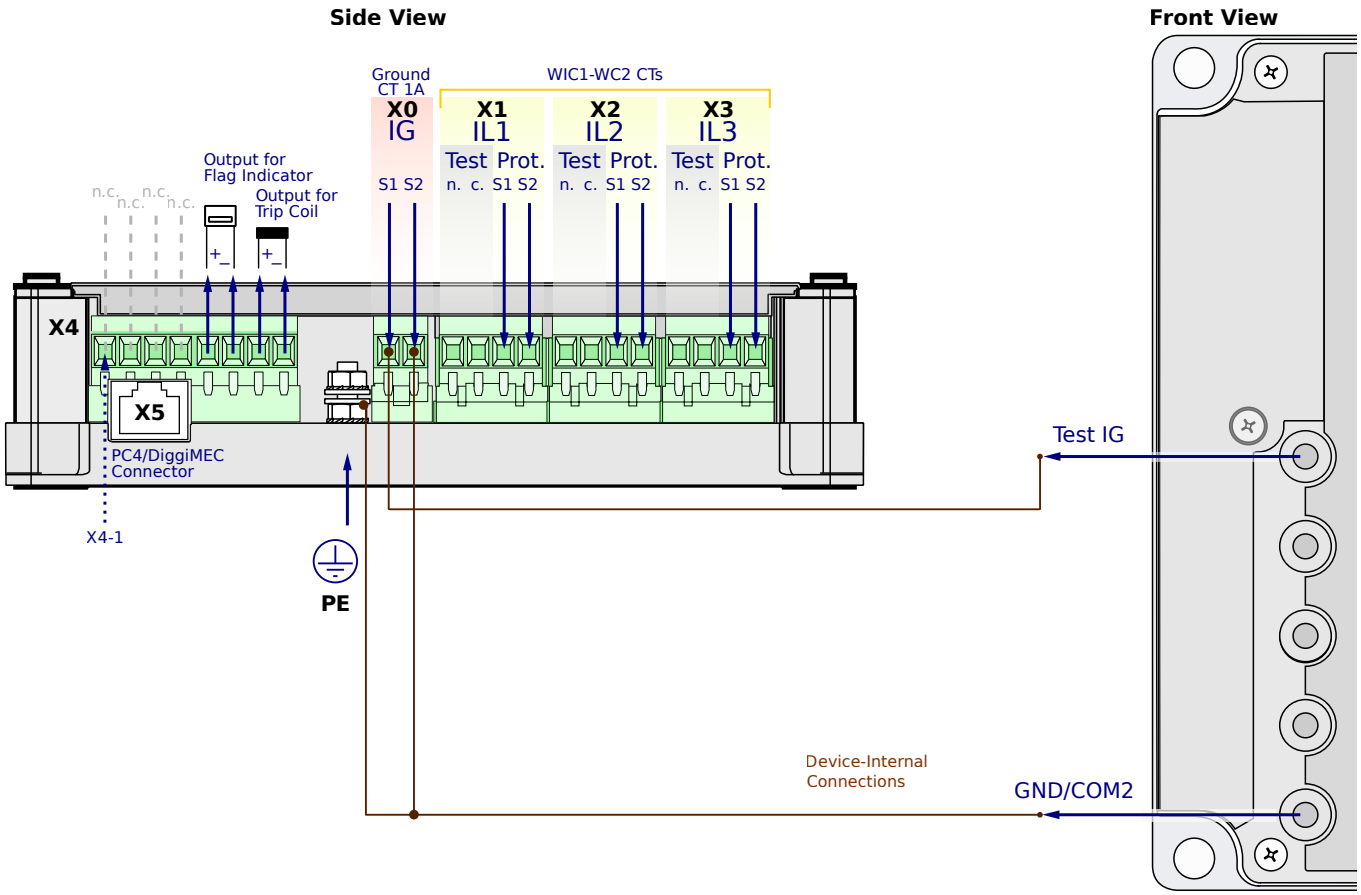


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2PA0

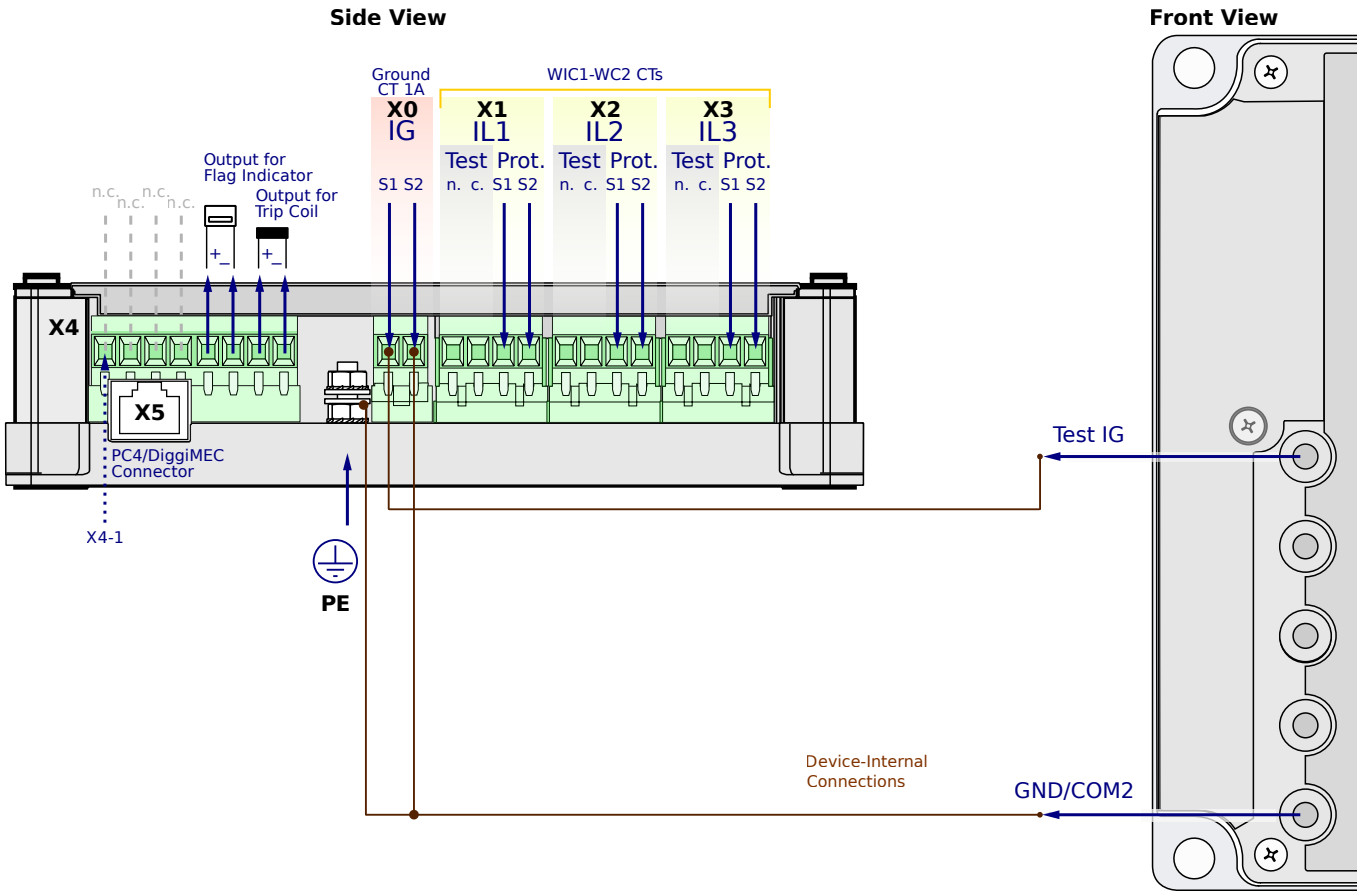


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CN2PAH

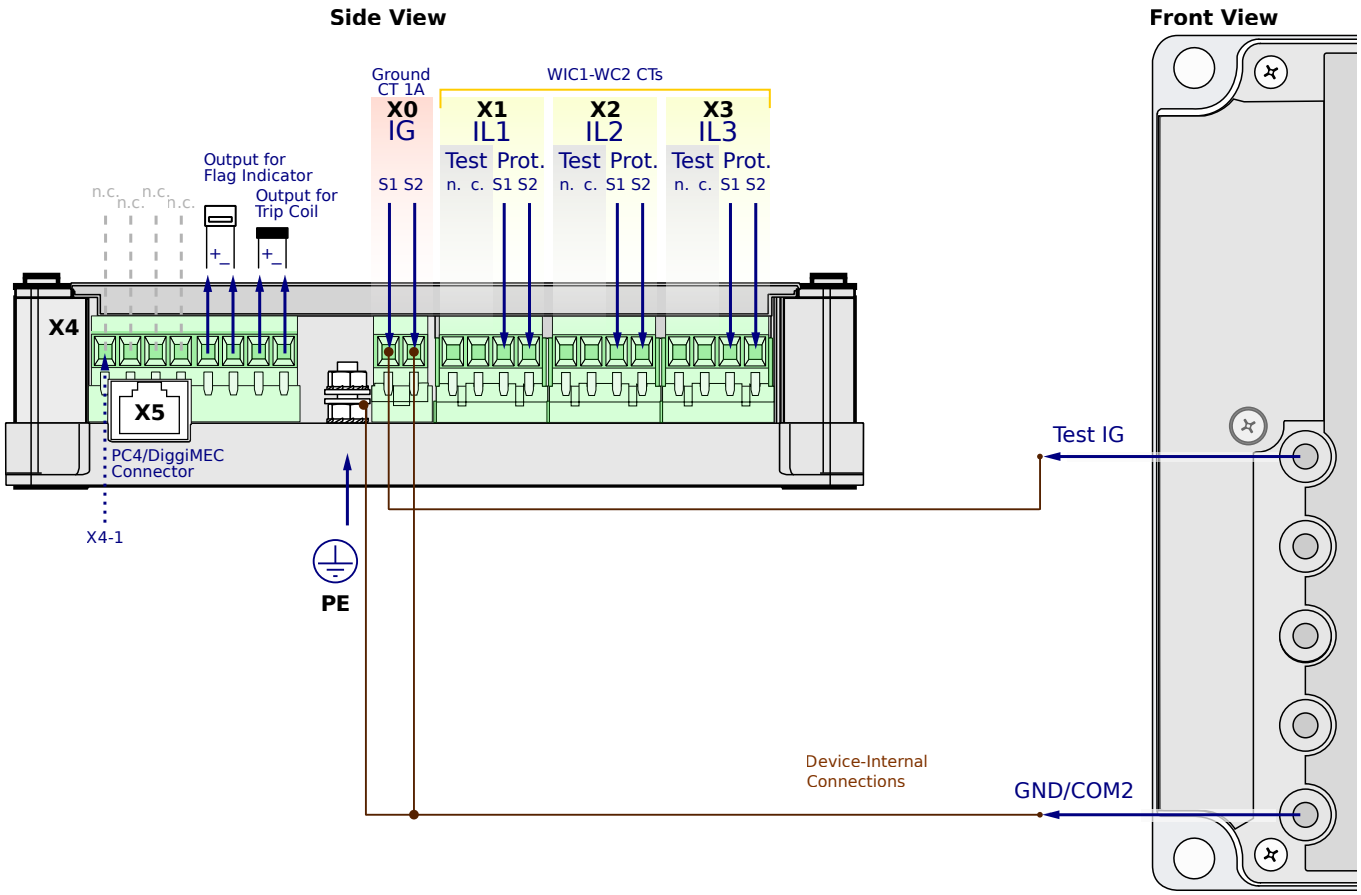


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1SA0

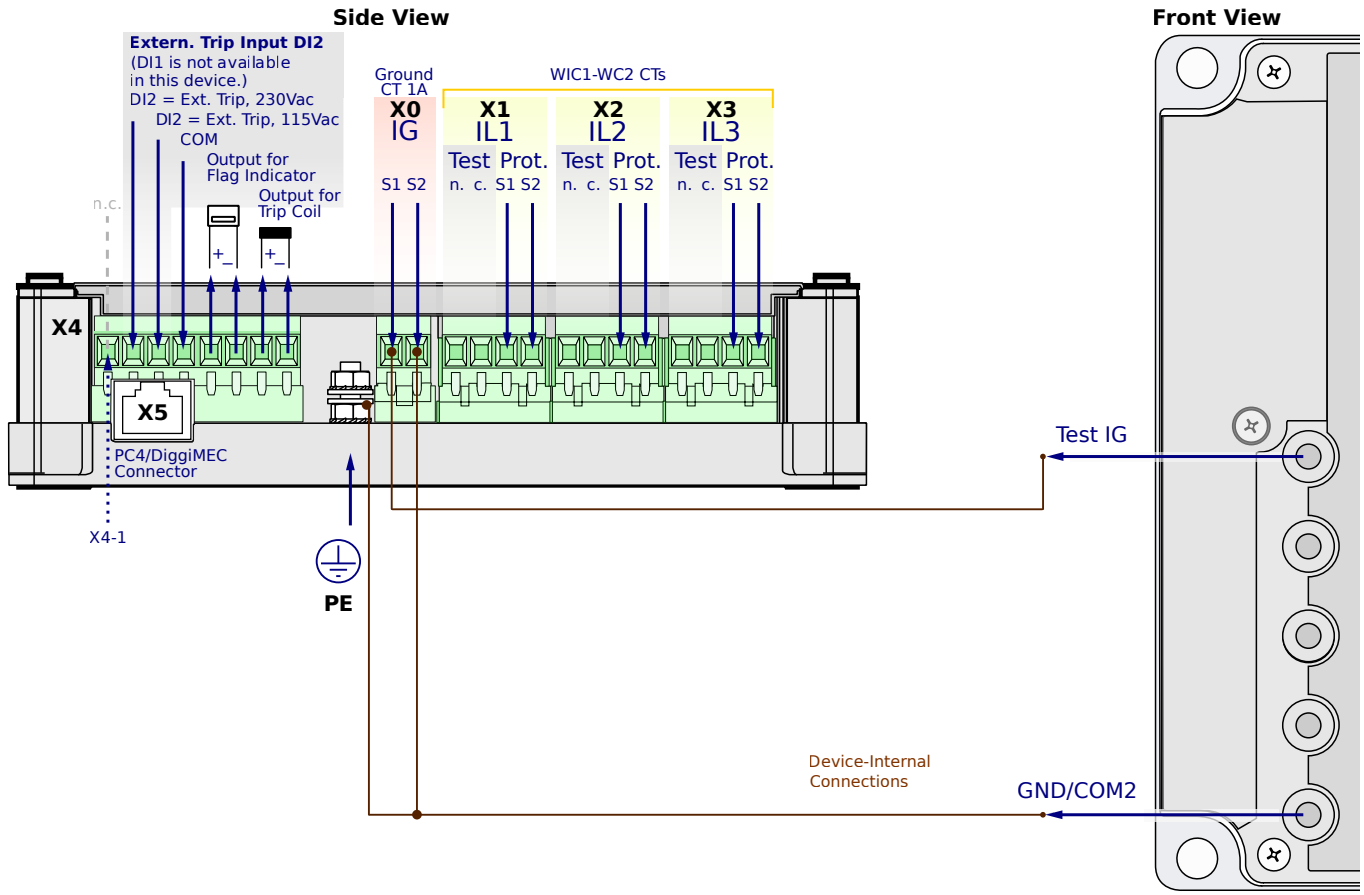


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1SAH

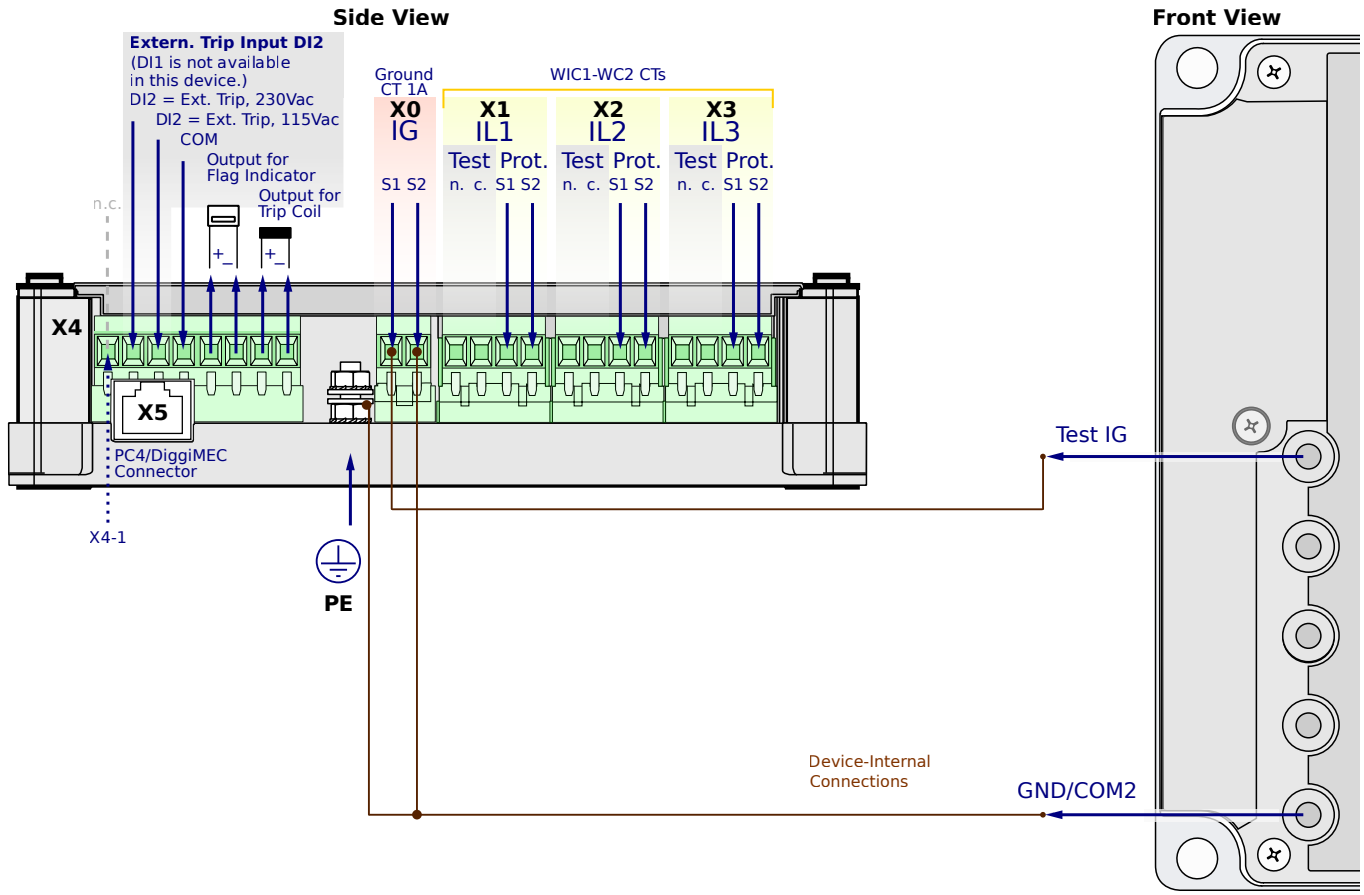


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1AA0

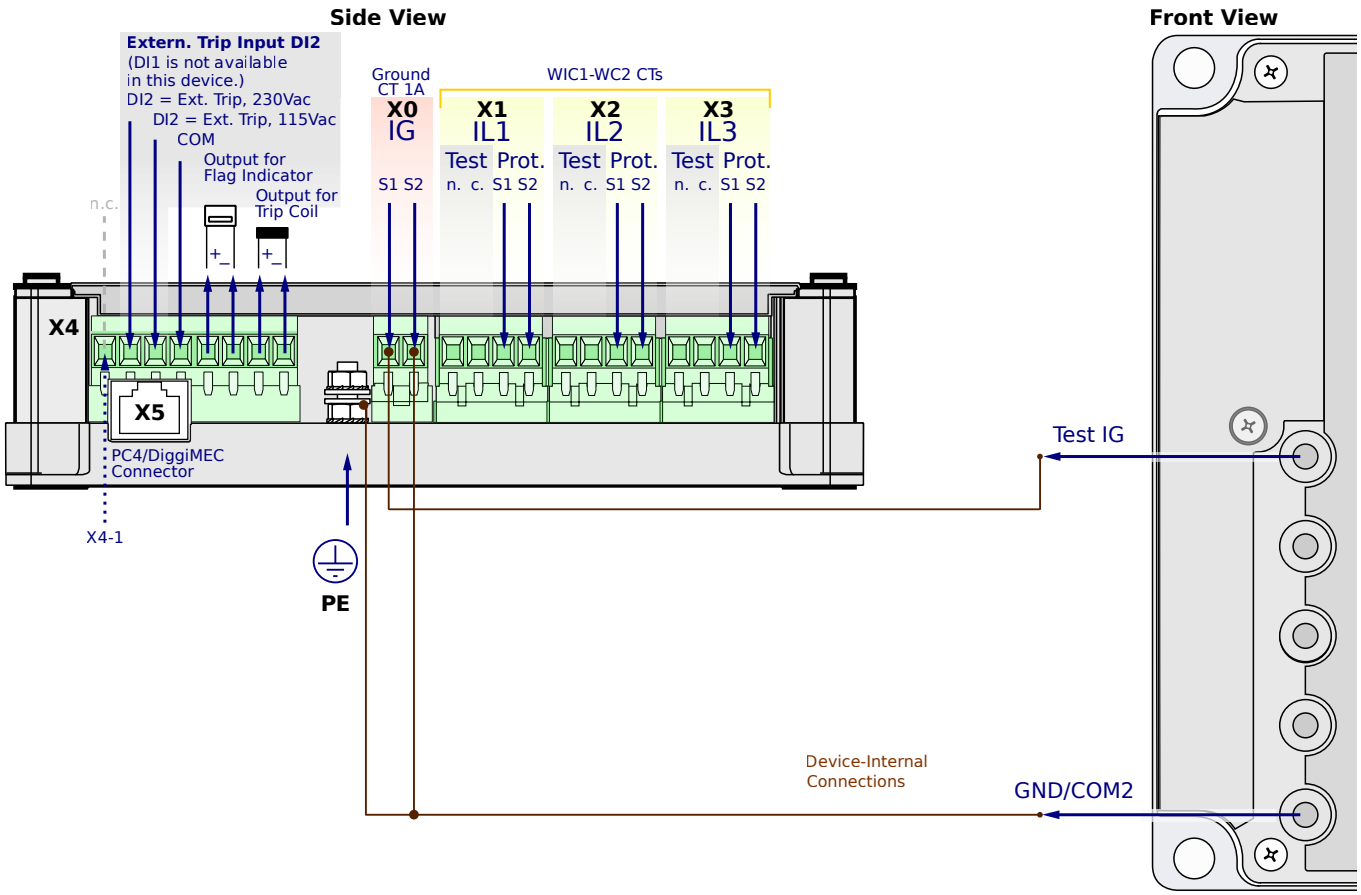


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1AAH

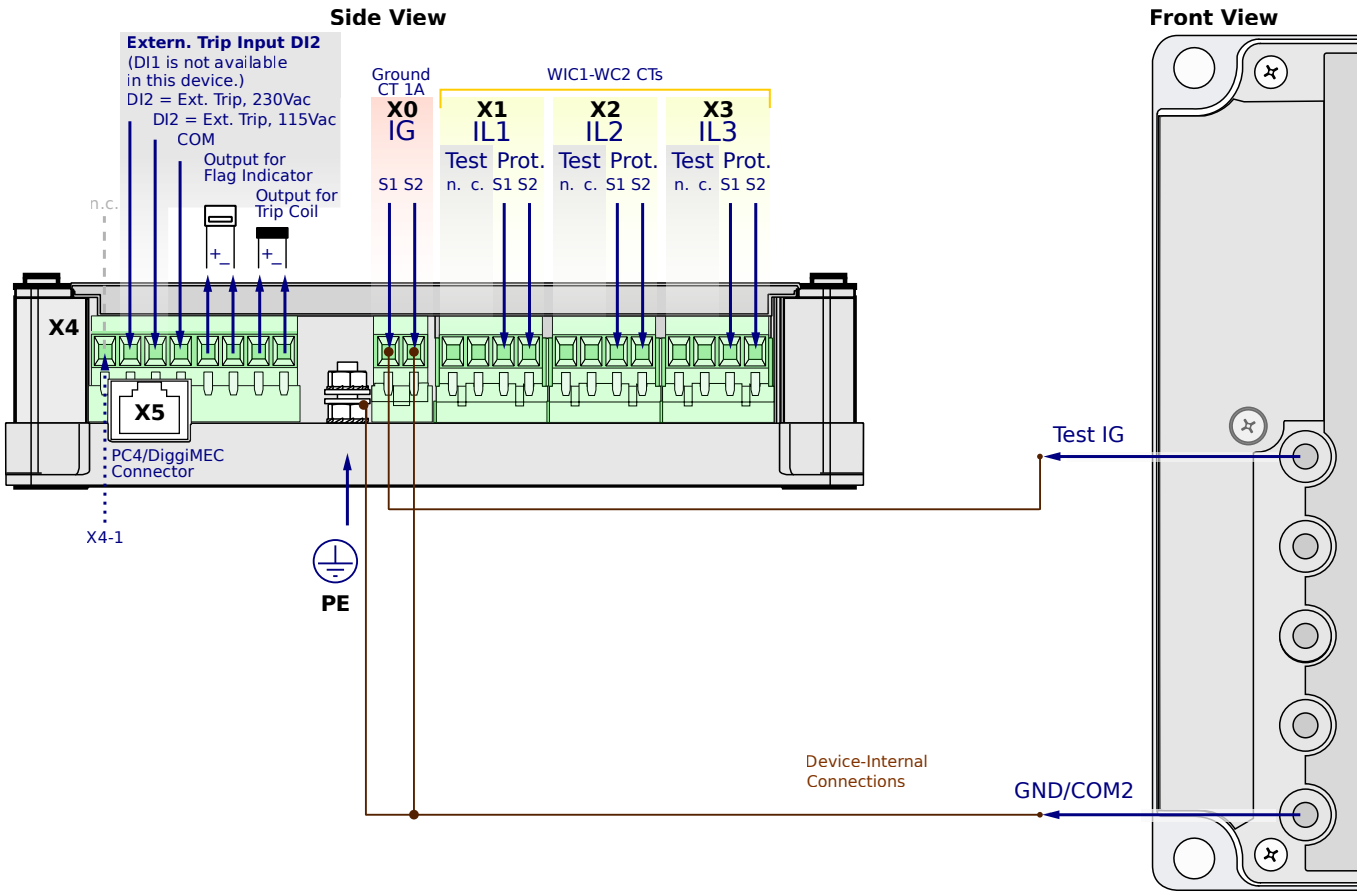


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1PA0

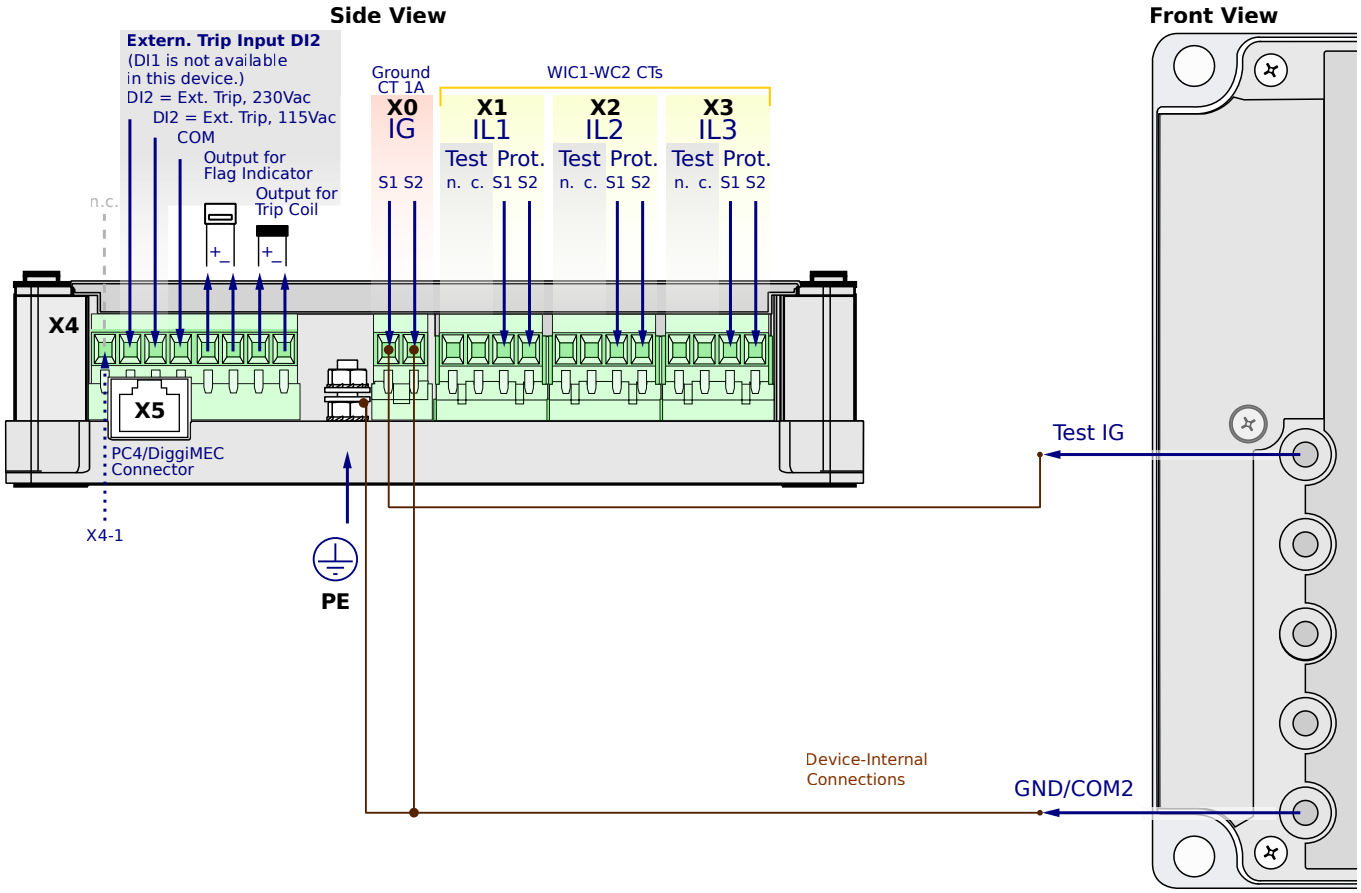


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF1PAH

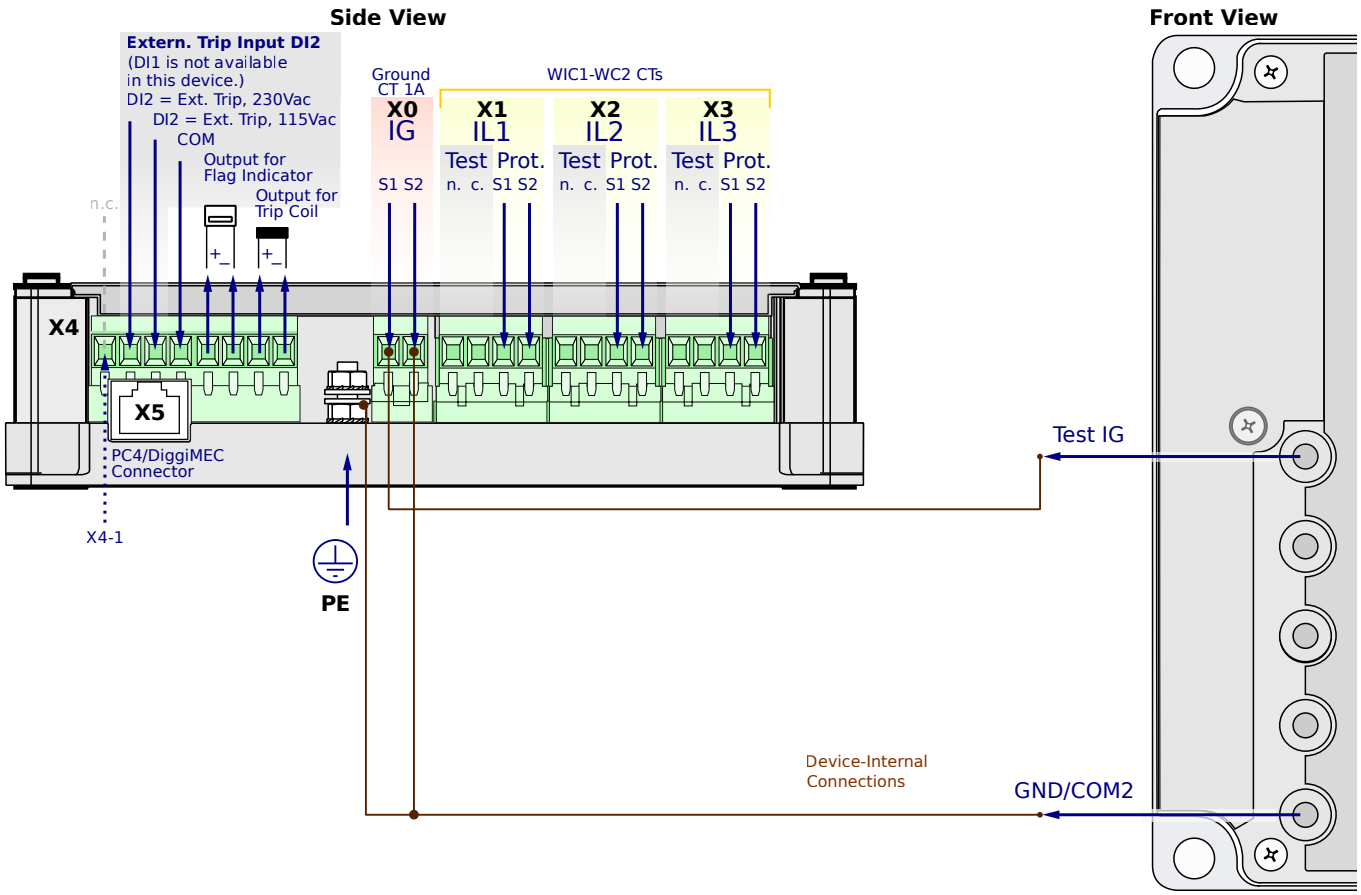


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2SA0

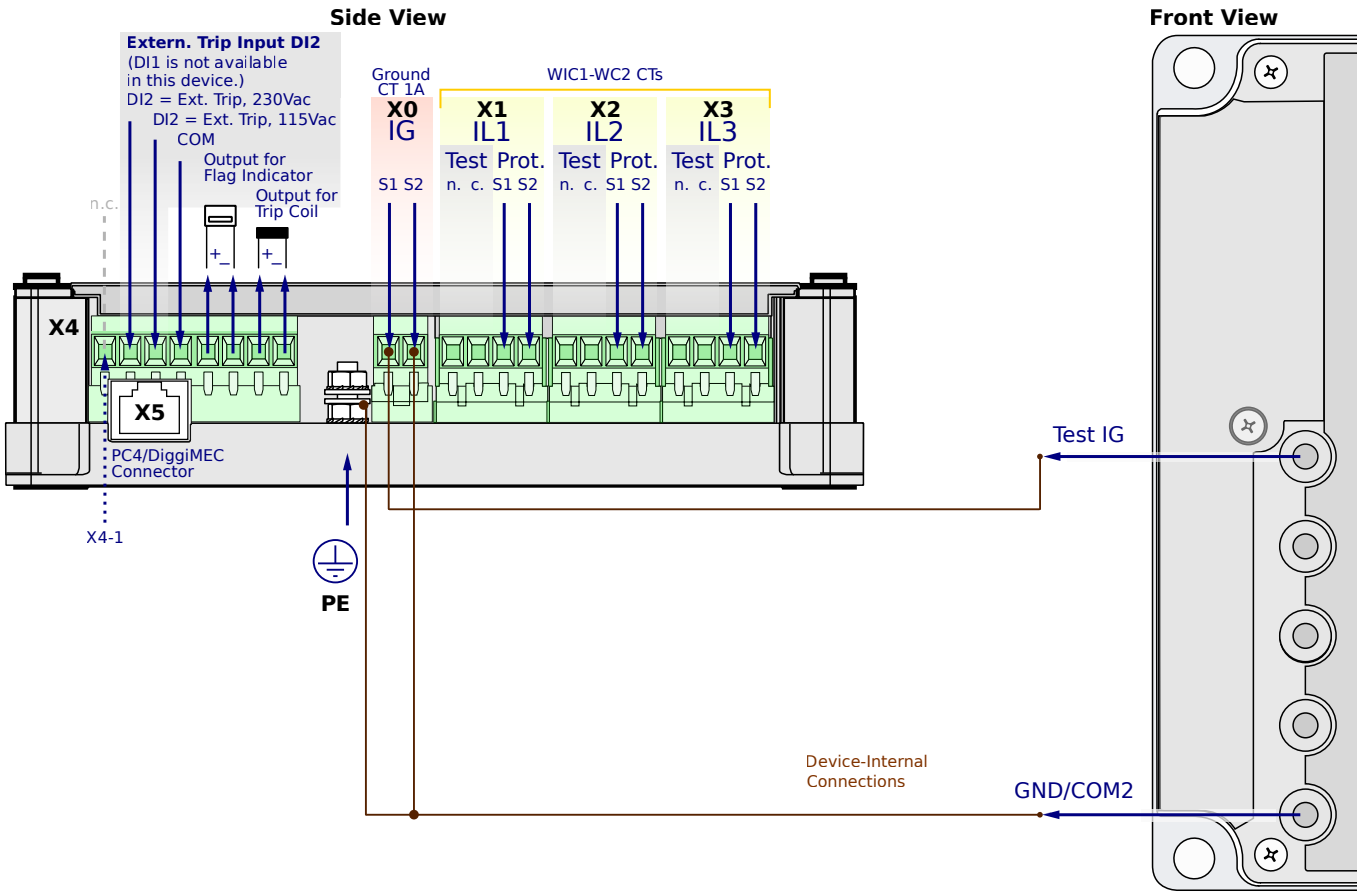


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2SAH

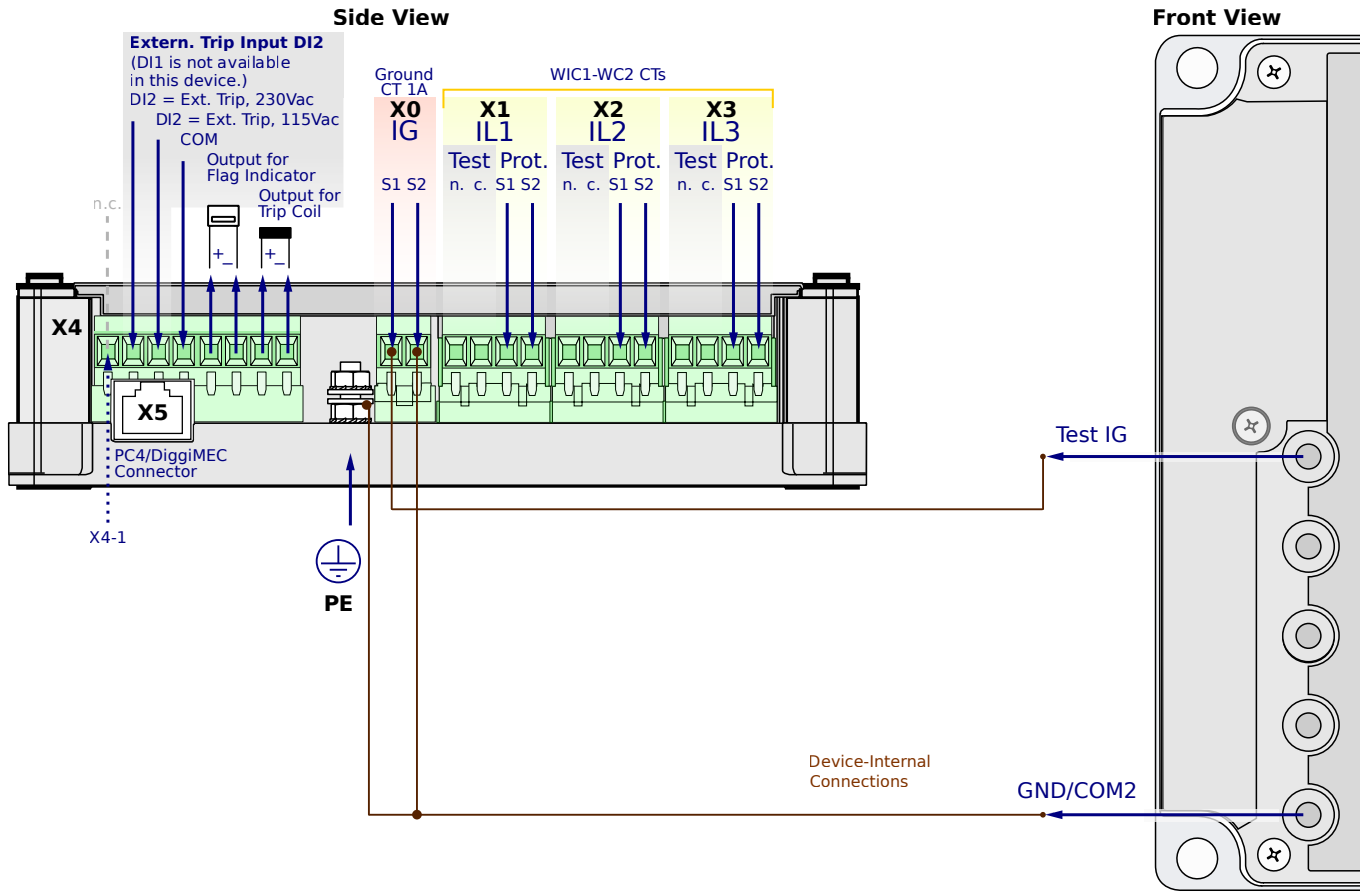


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2AA0

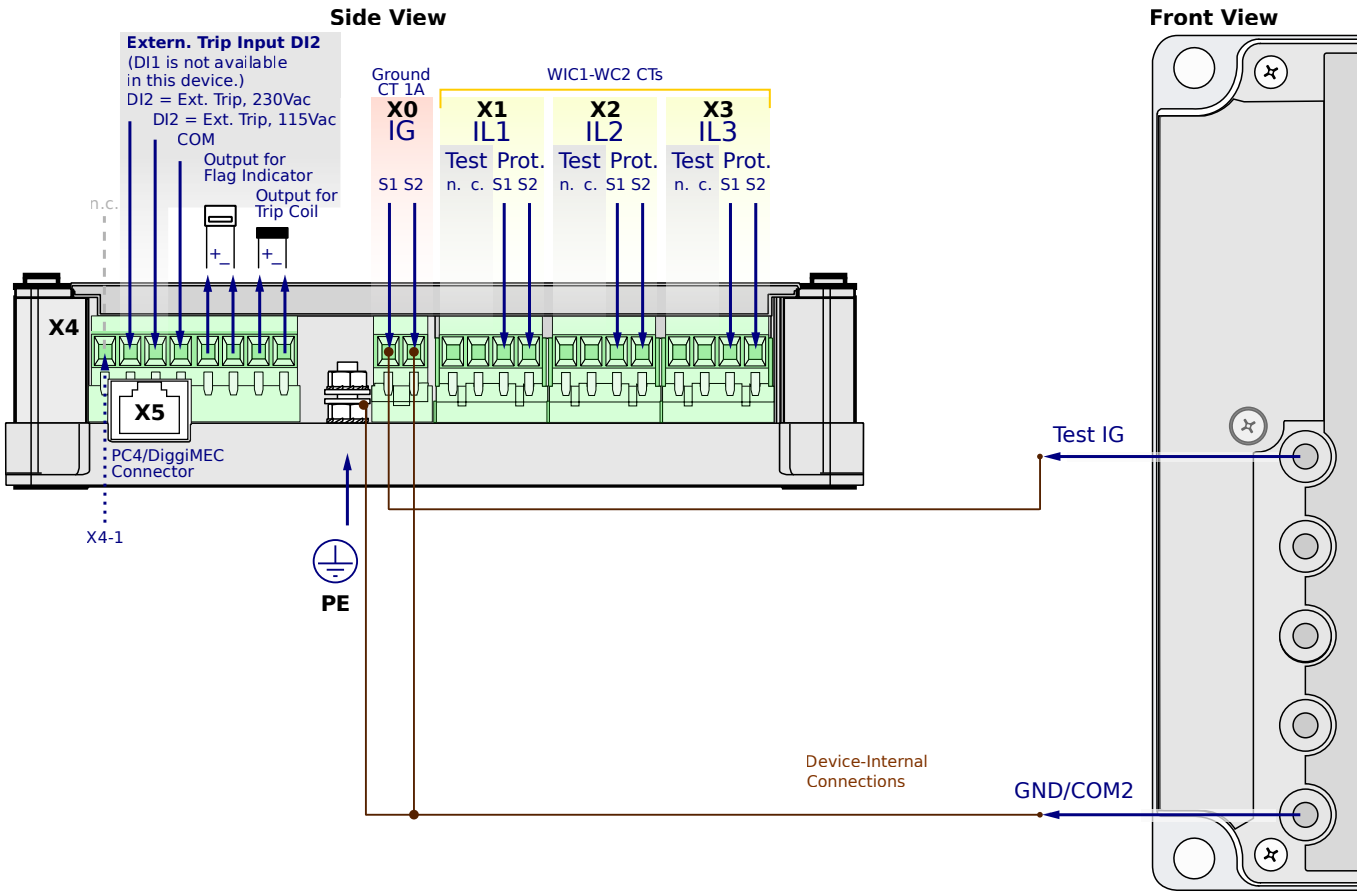


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2AAH

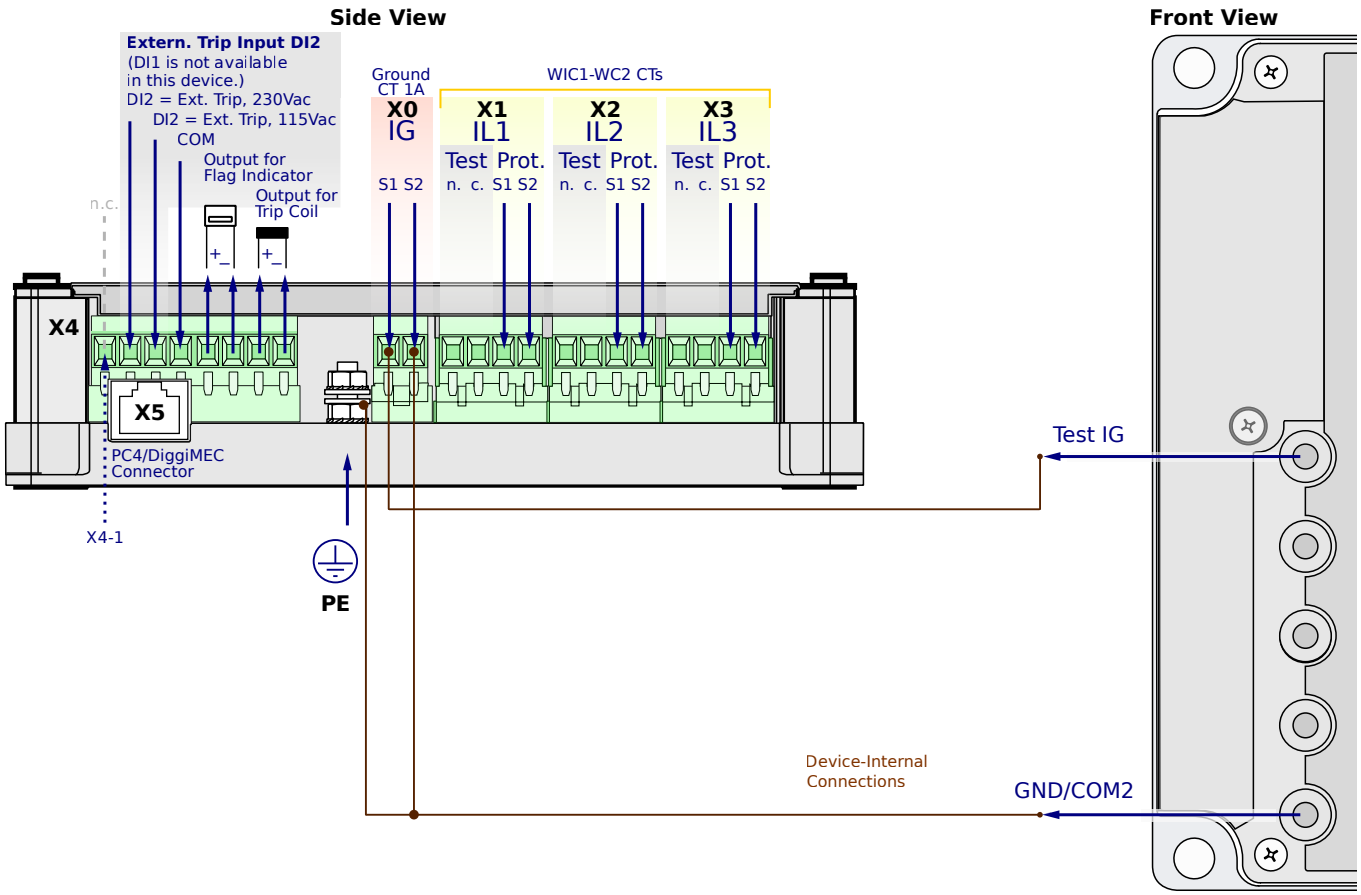


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2PA0

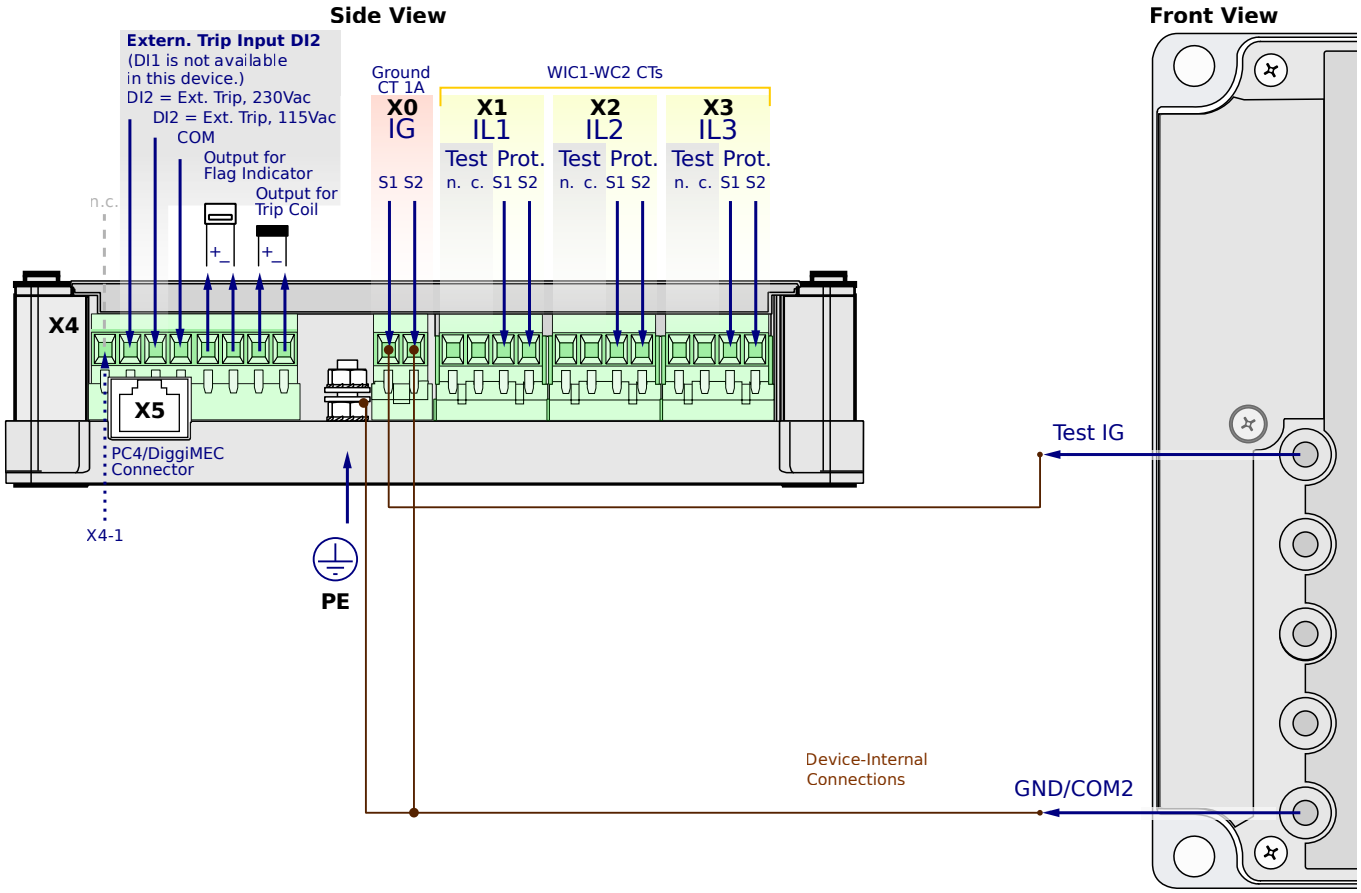


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CF2PAH

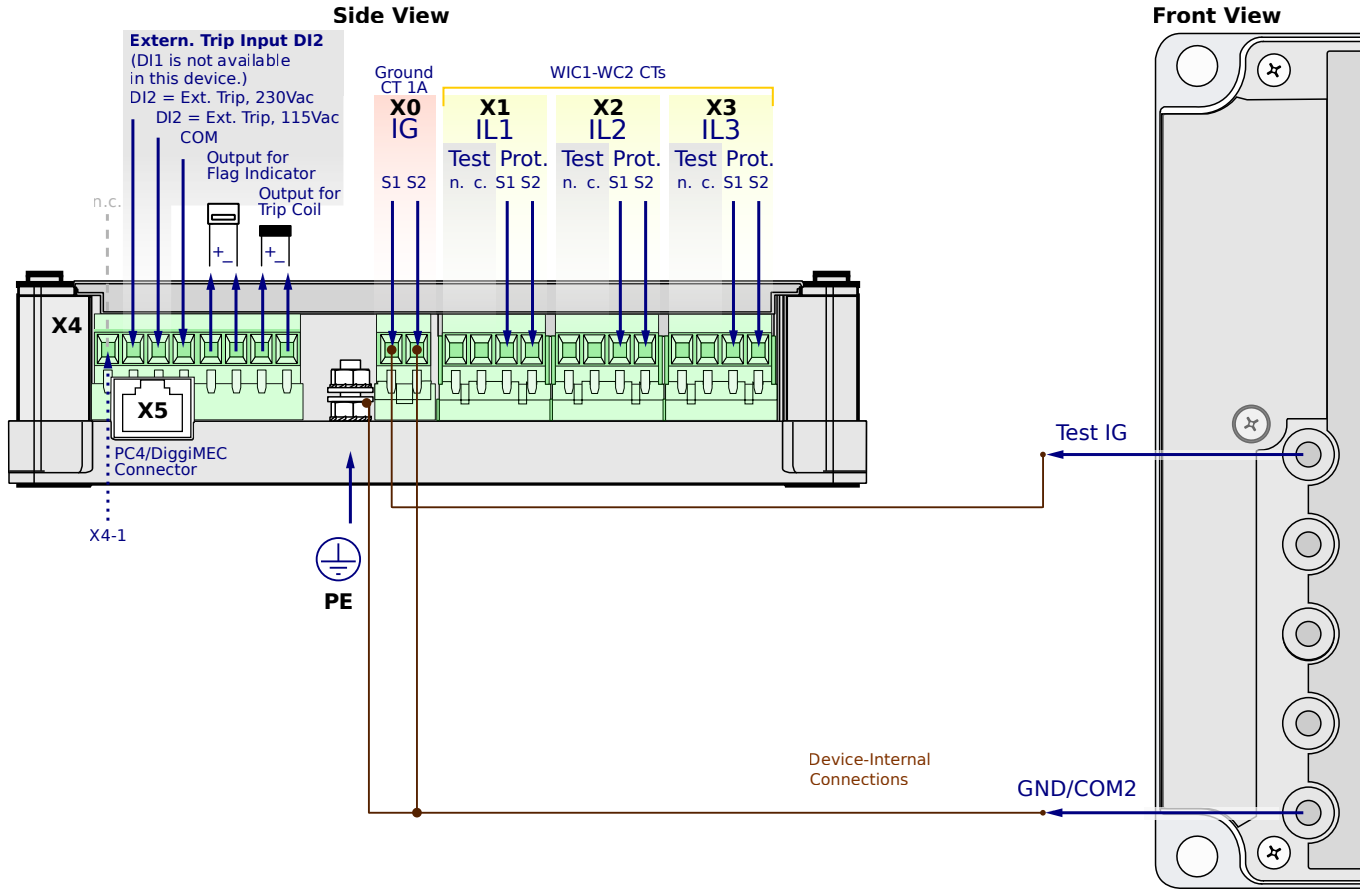


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1SA0

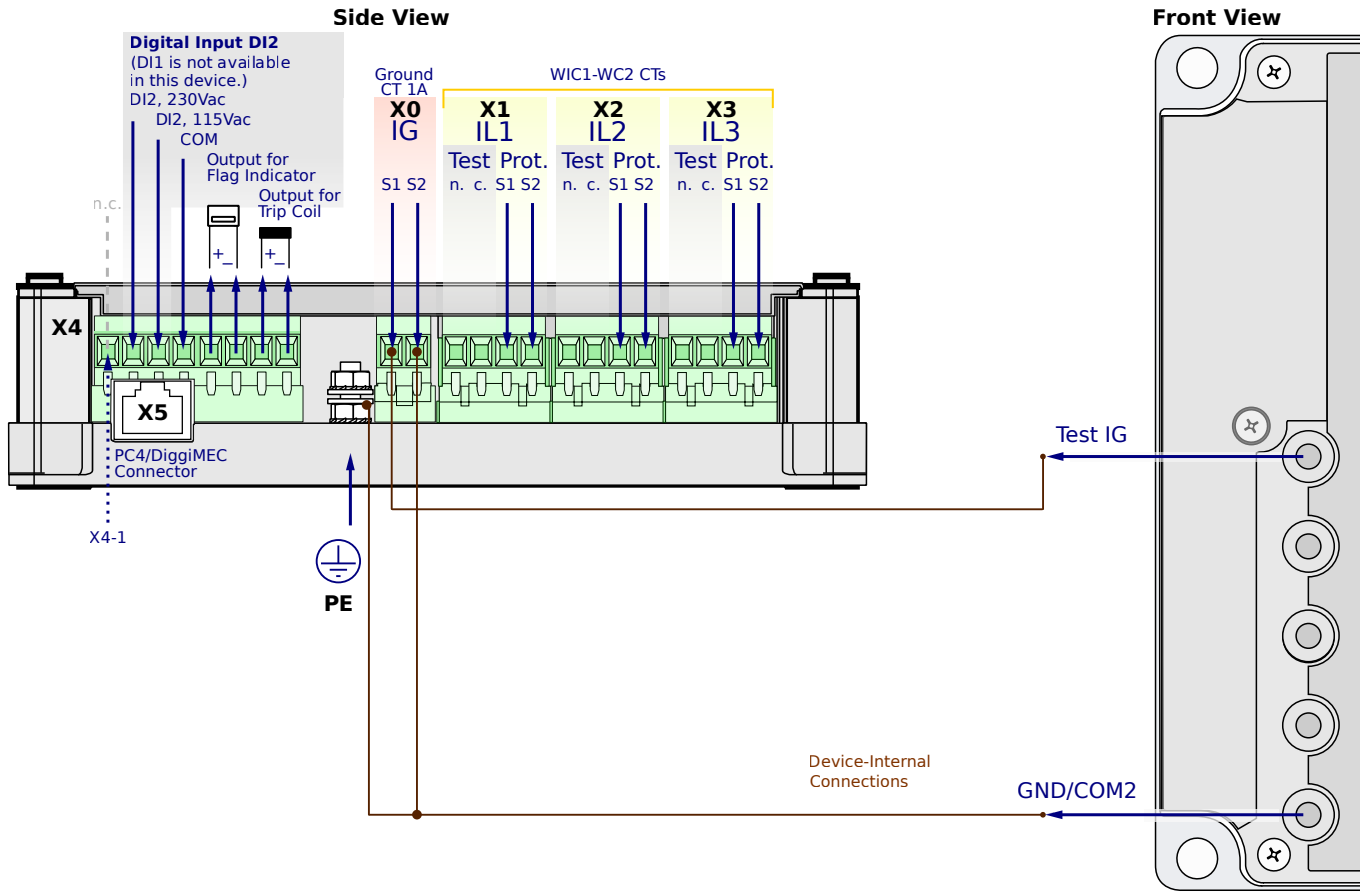


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1SAH

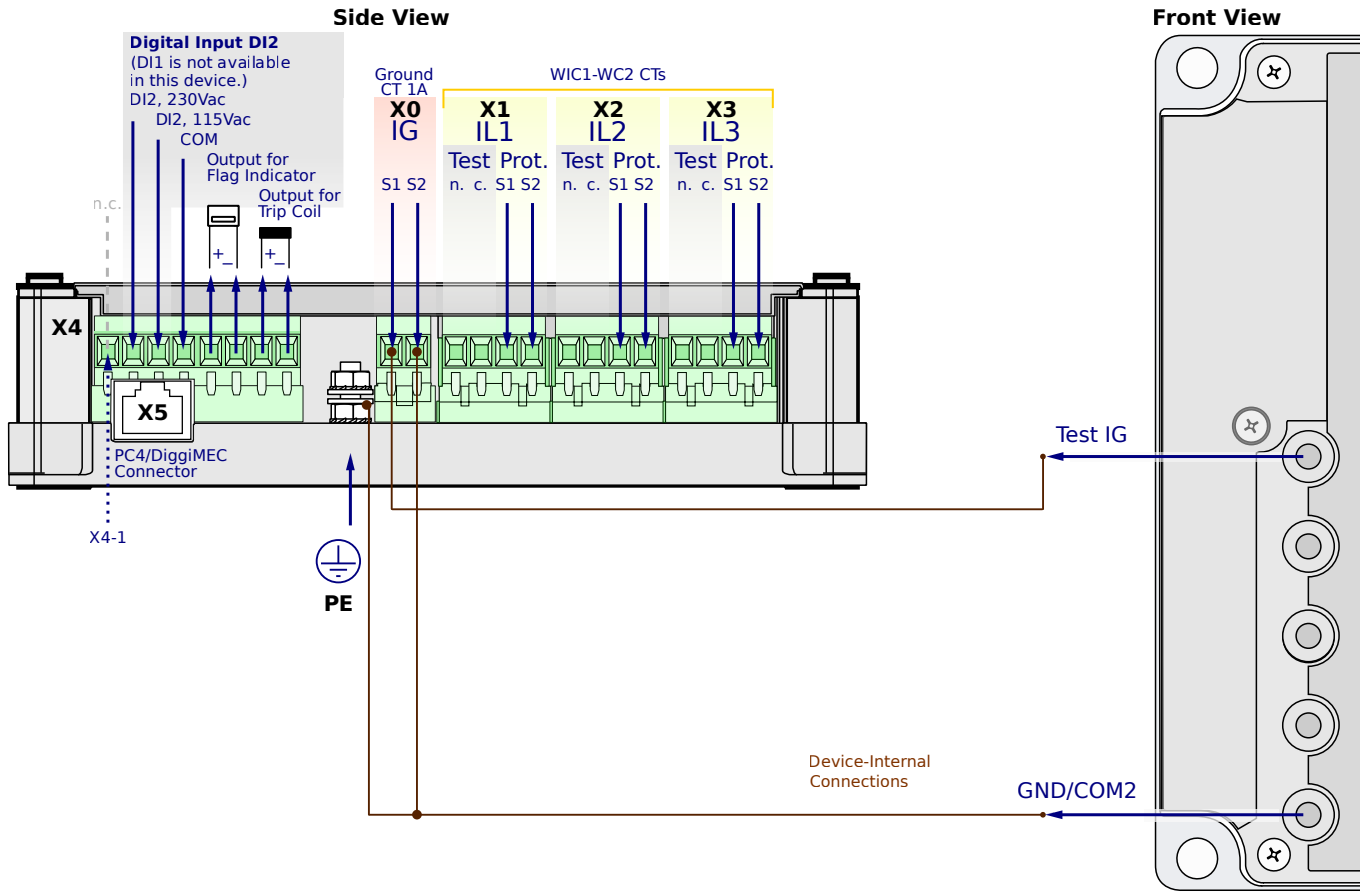


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1AA0

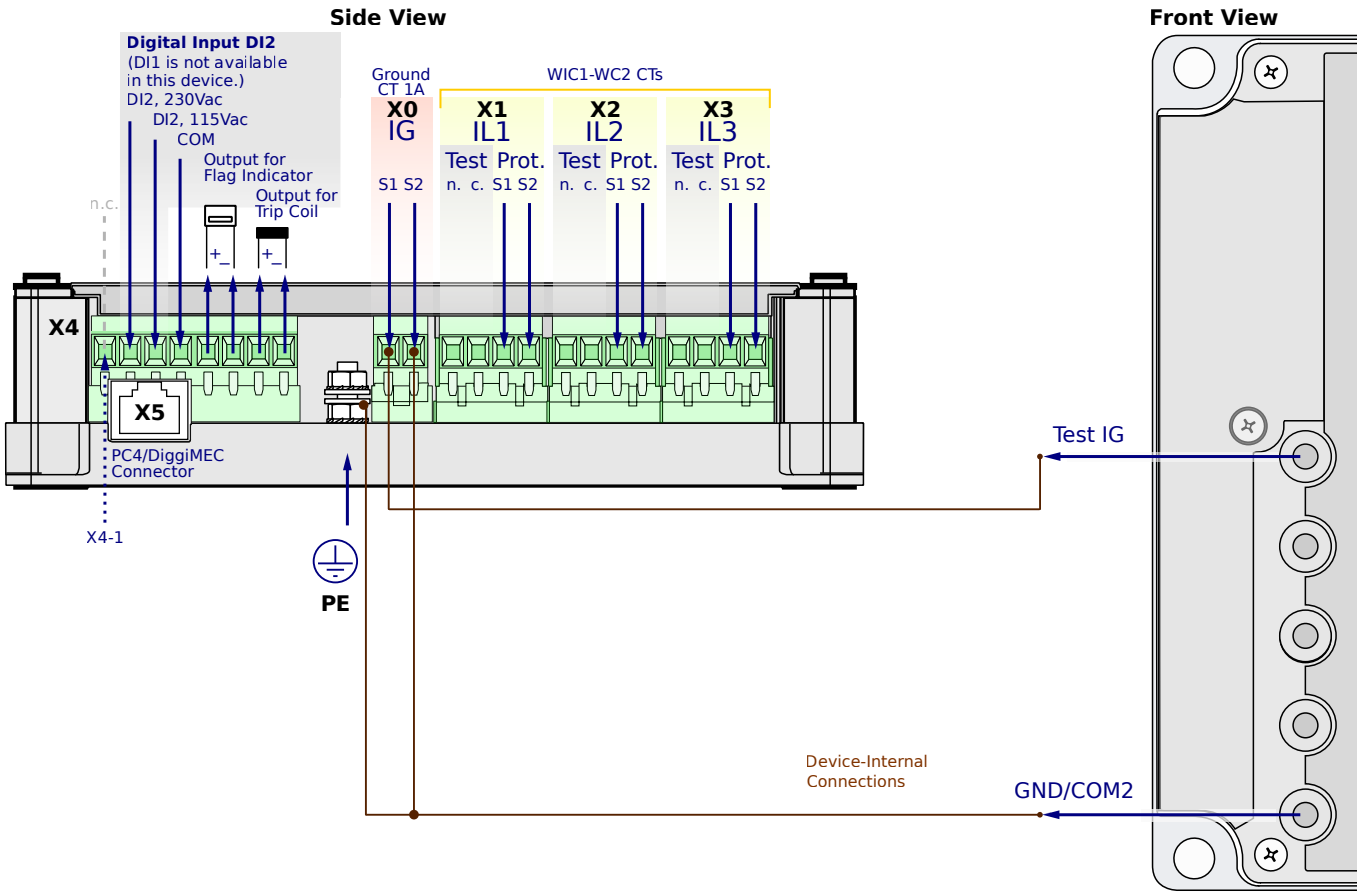


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1AAH

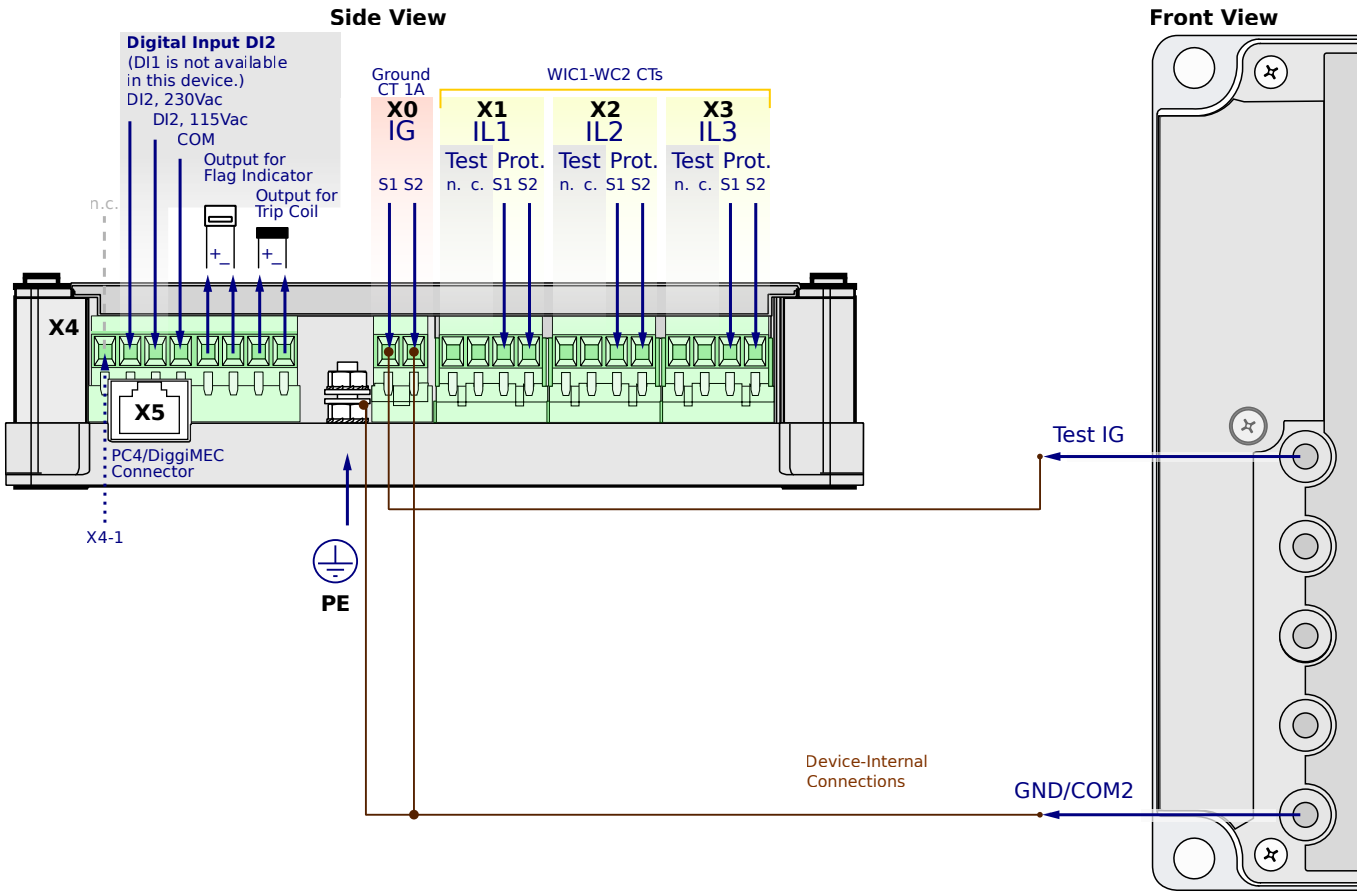


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1PA0

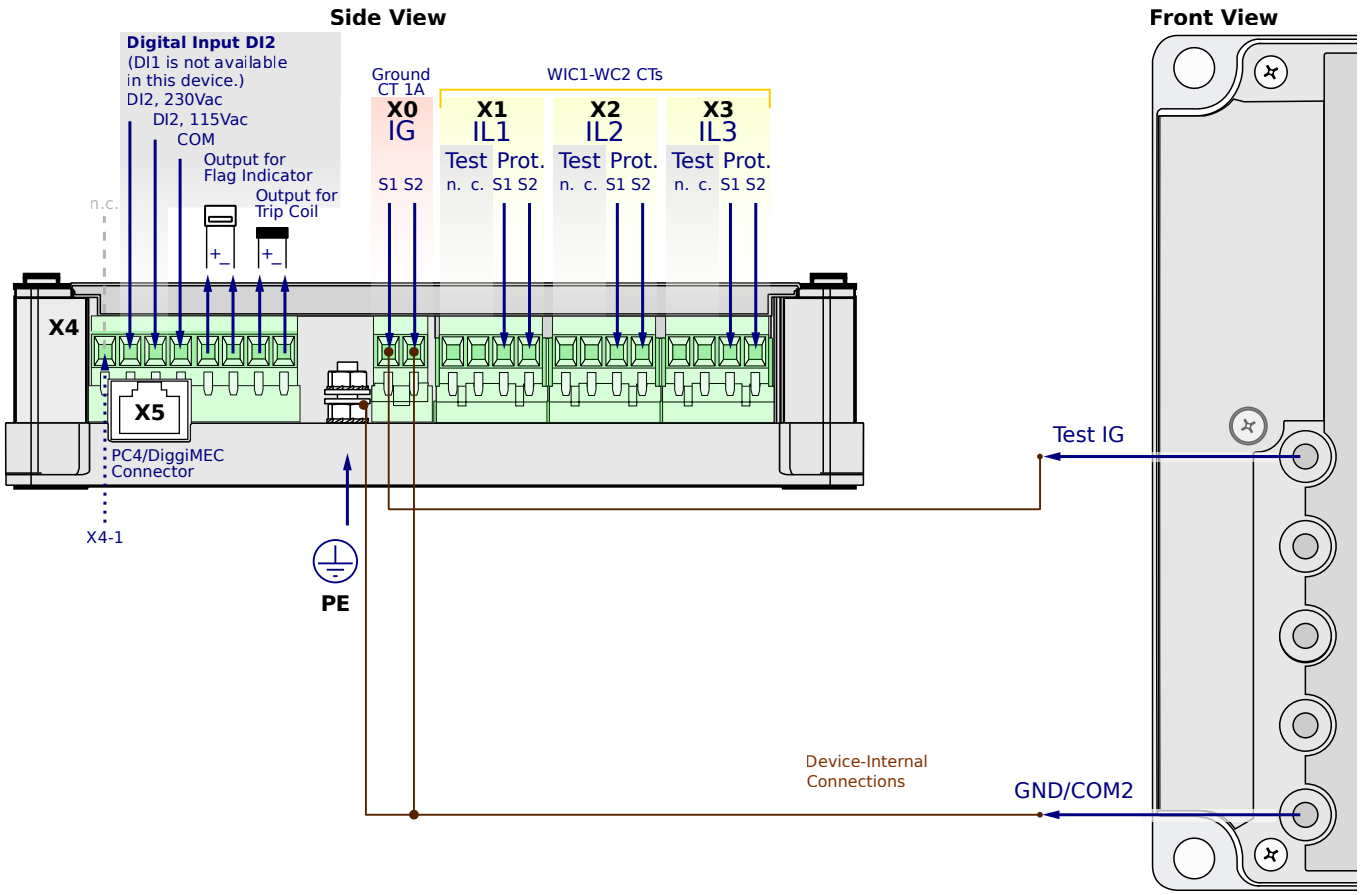


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC1PAH

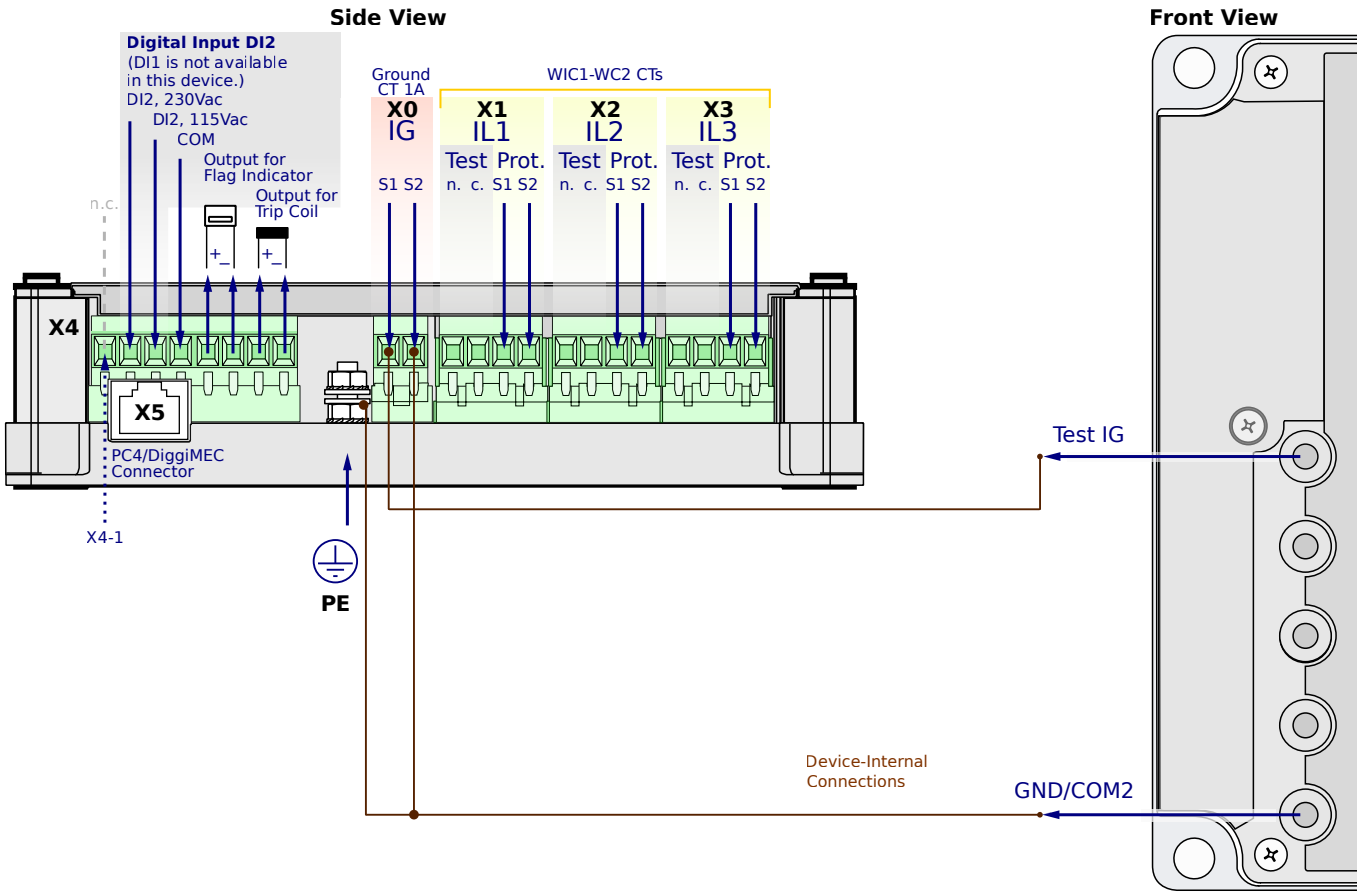


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2SA0

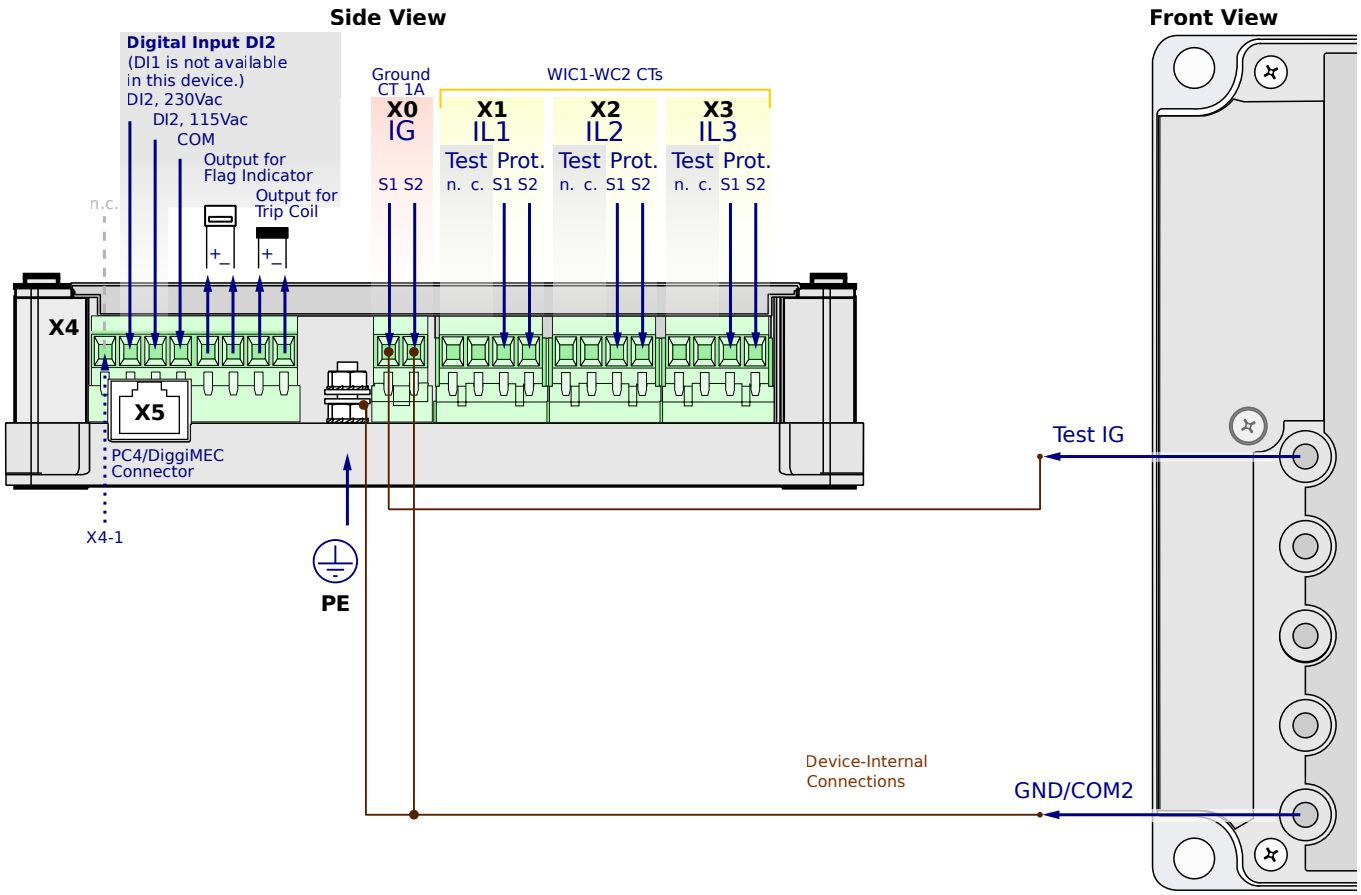


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2SAH

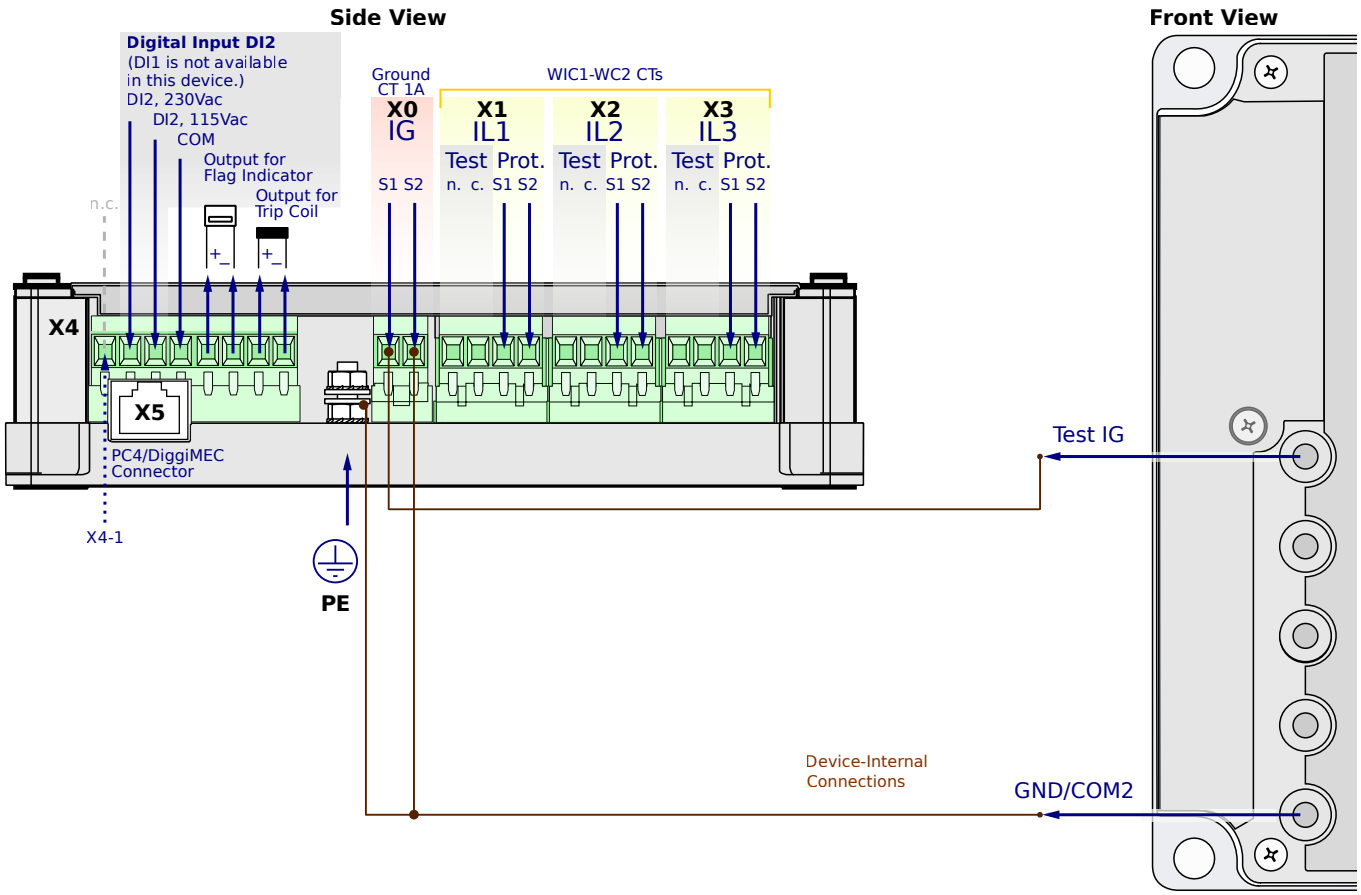


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2AA0

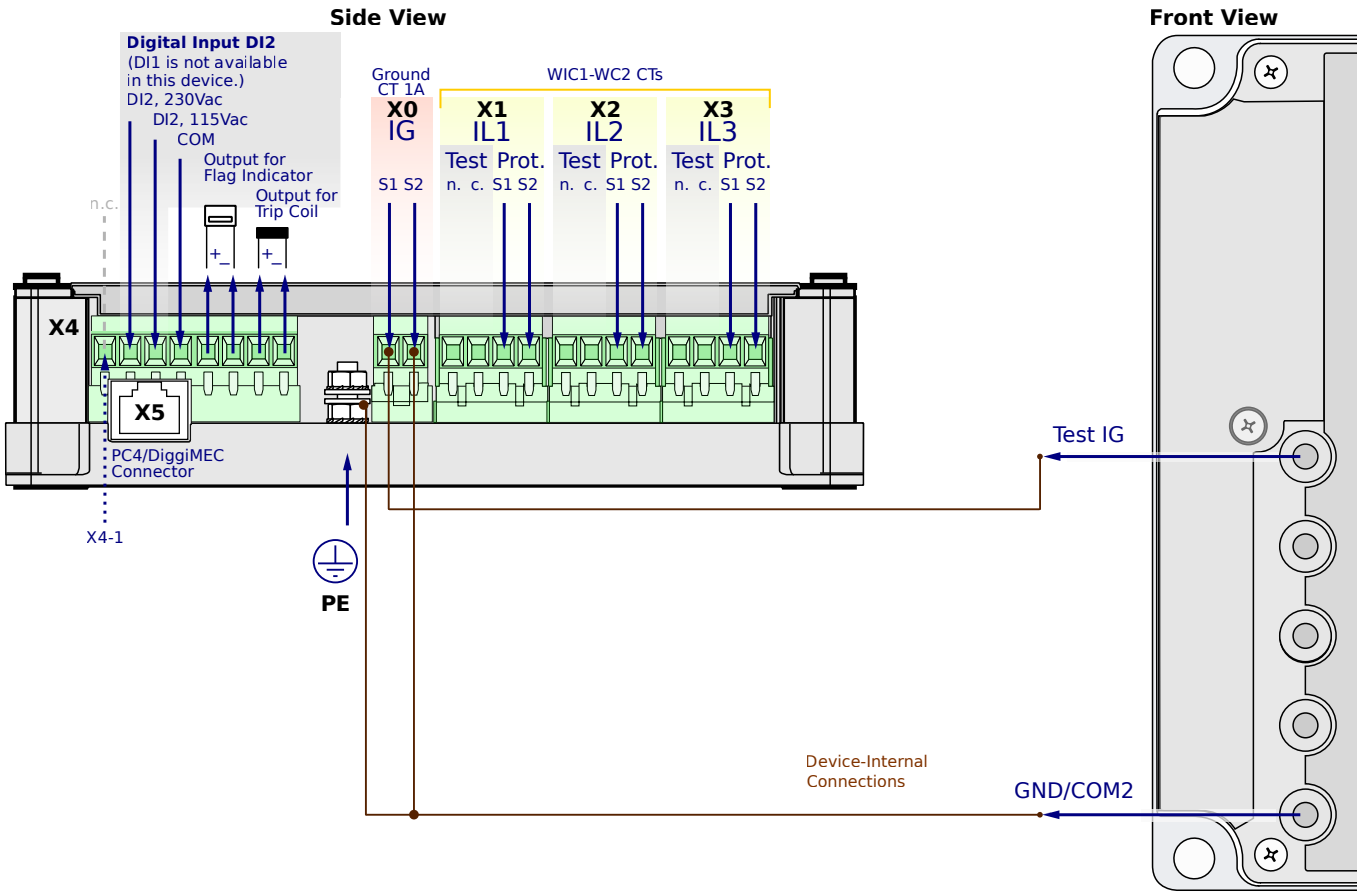


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2AAH

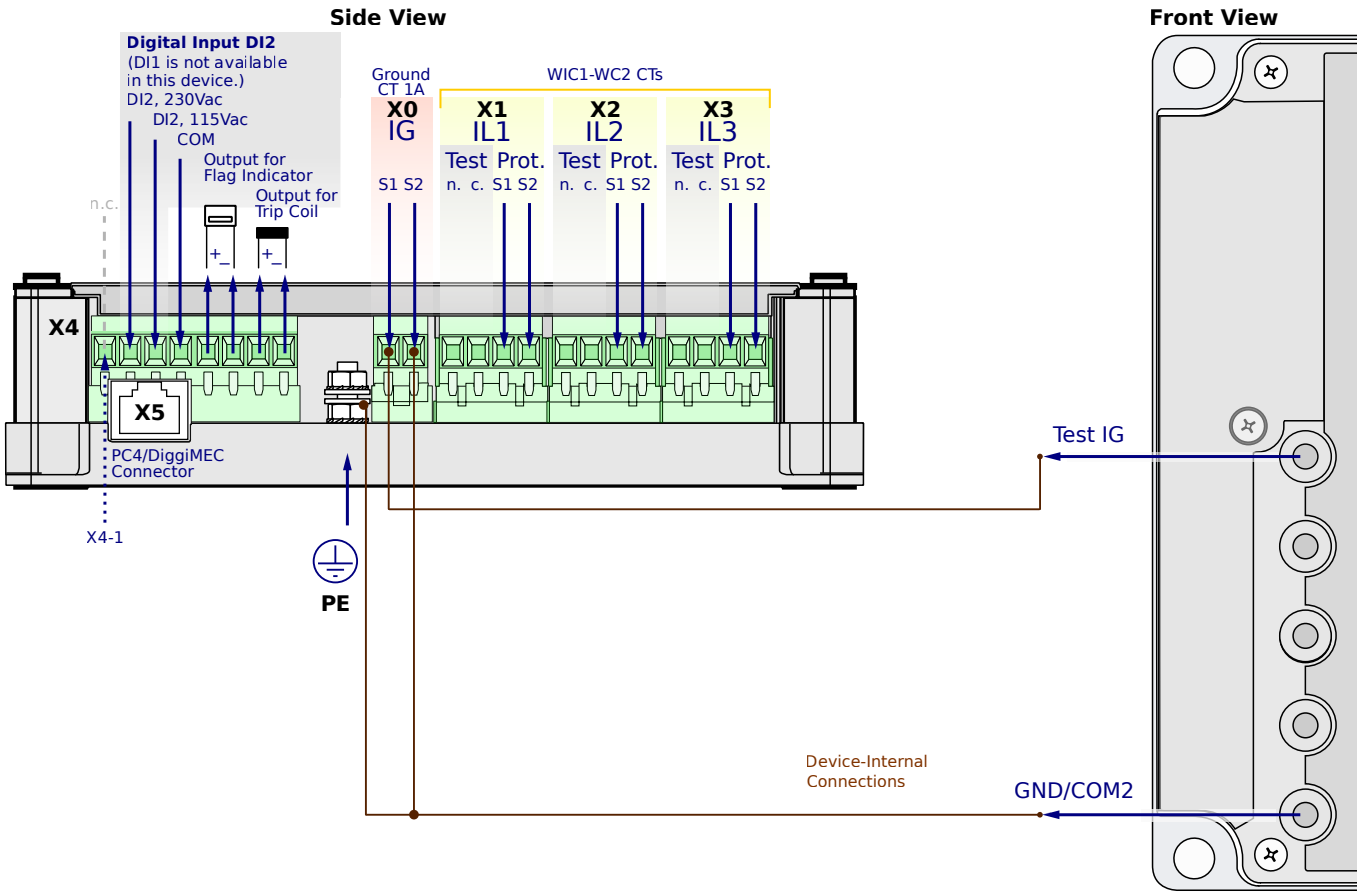


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2PA0

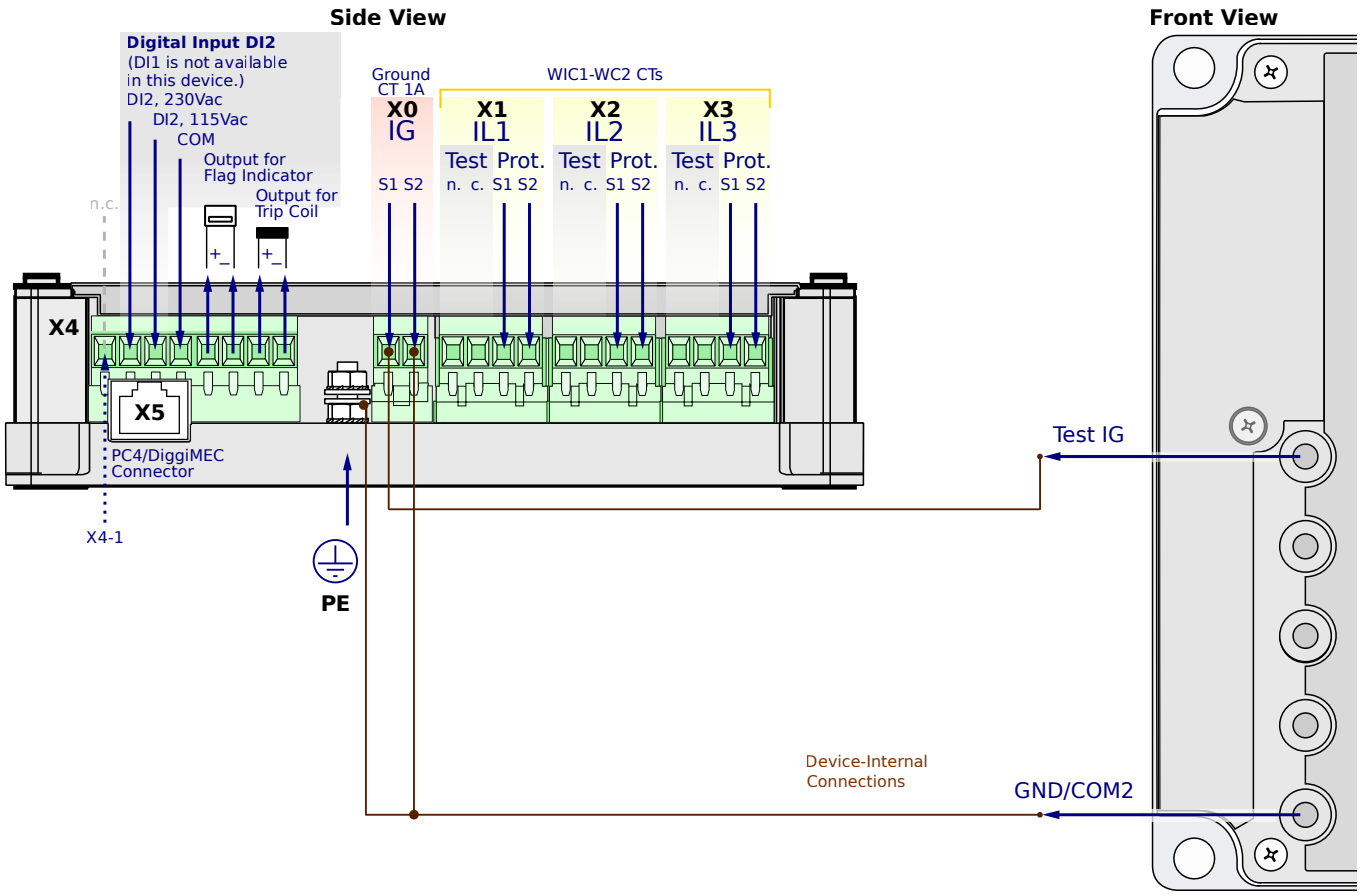


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG5CC2PAH

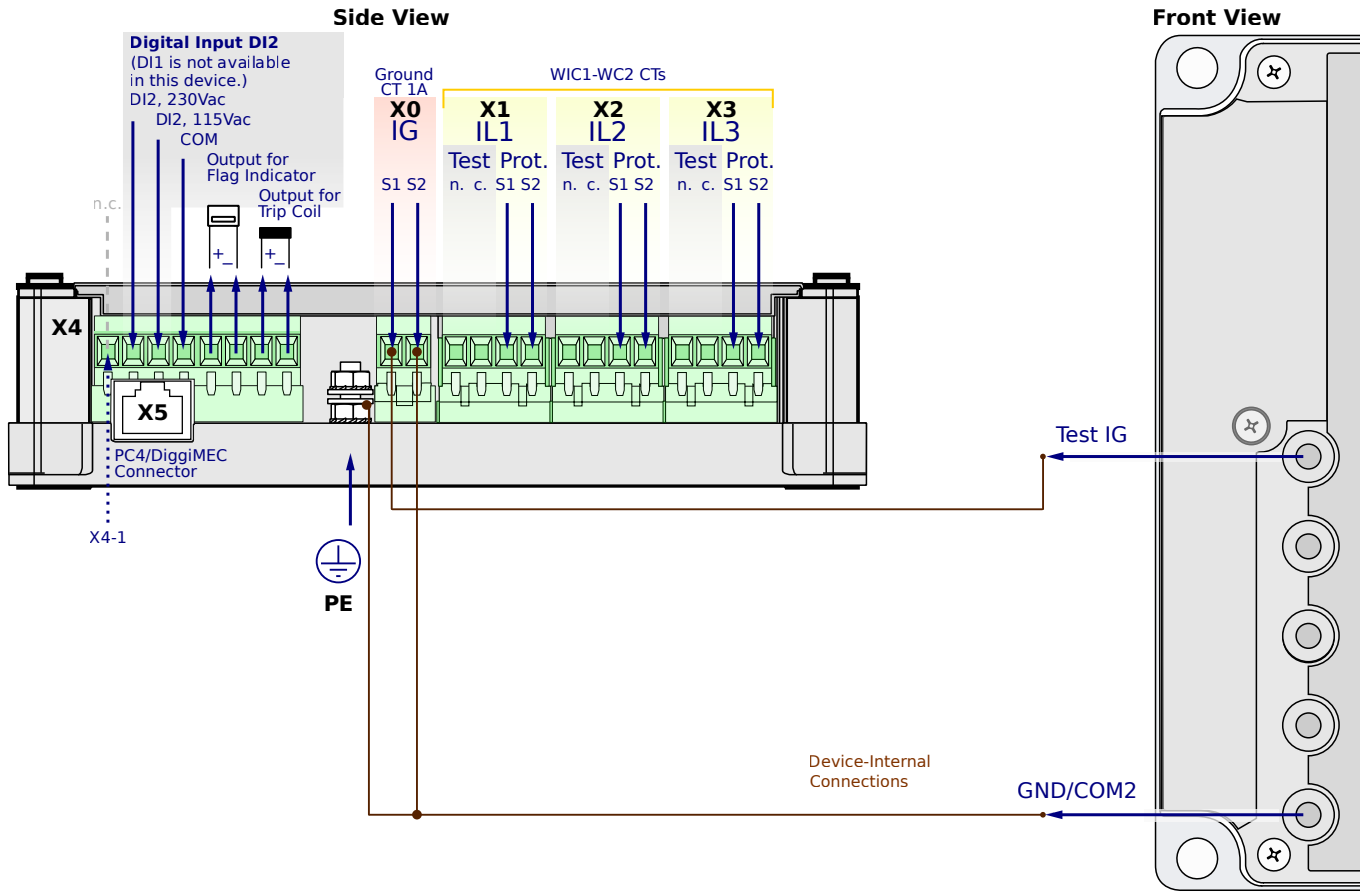


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz. (Setting to 60 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0SA0

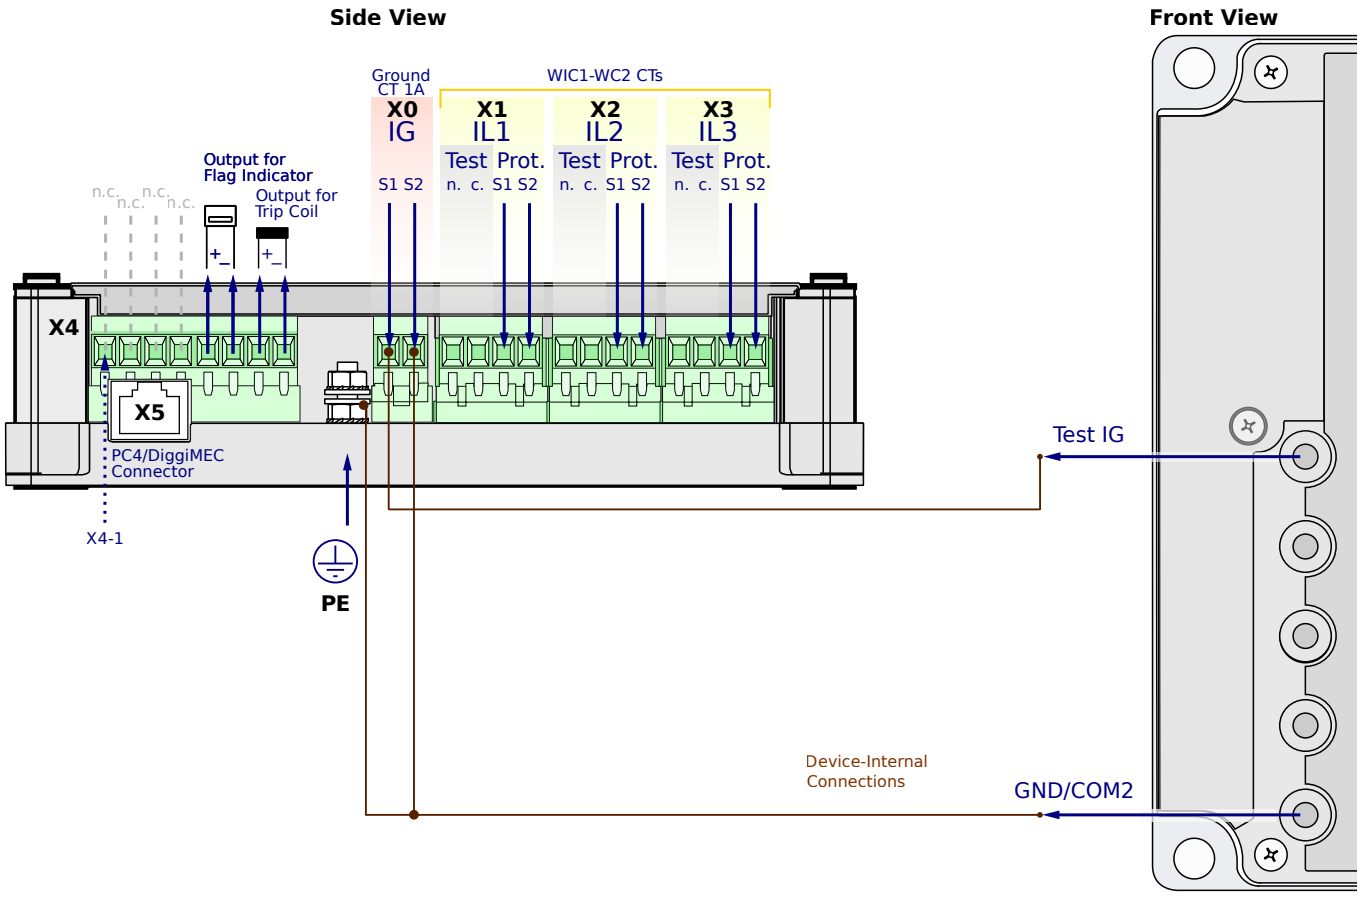


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0SAH

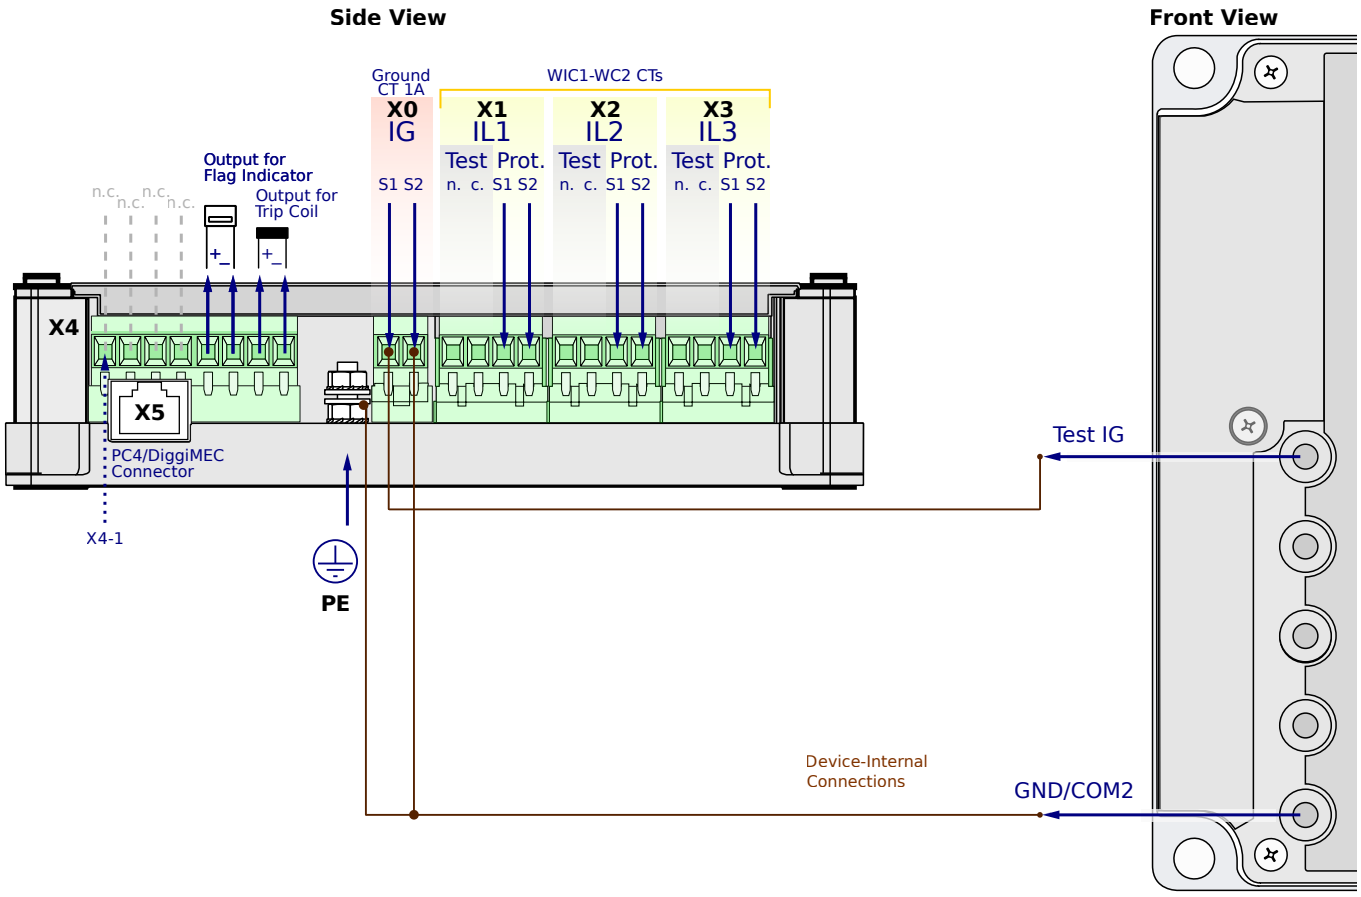


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0AA0

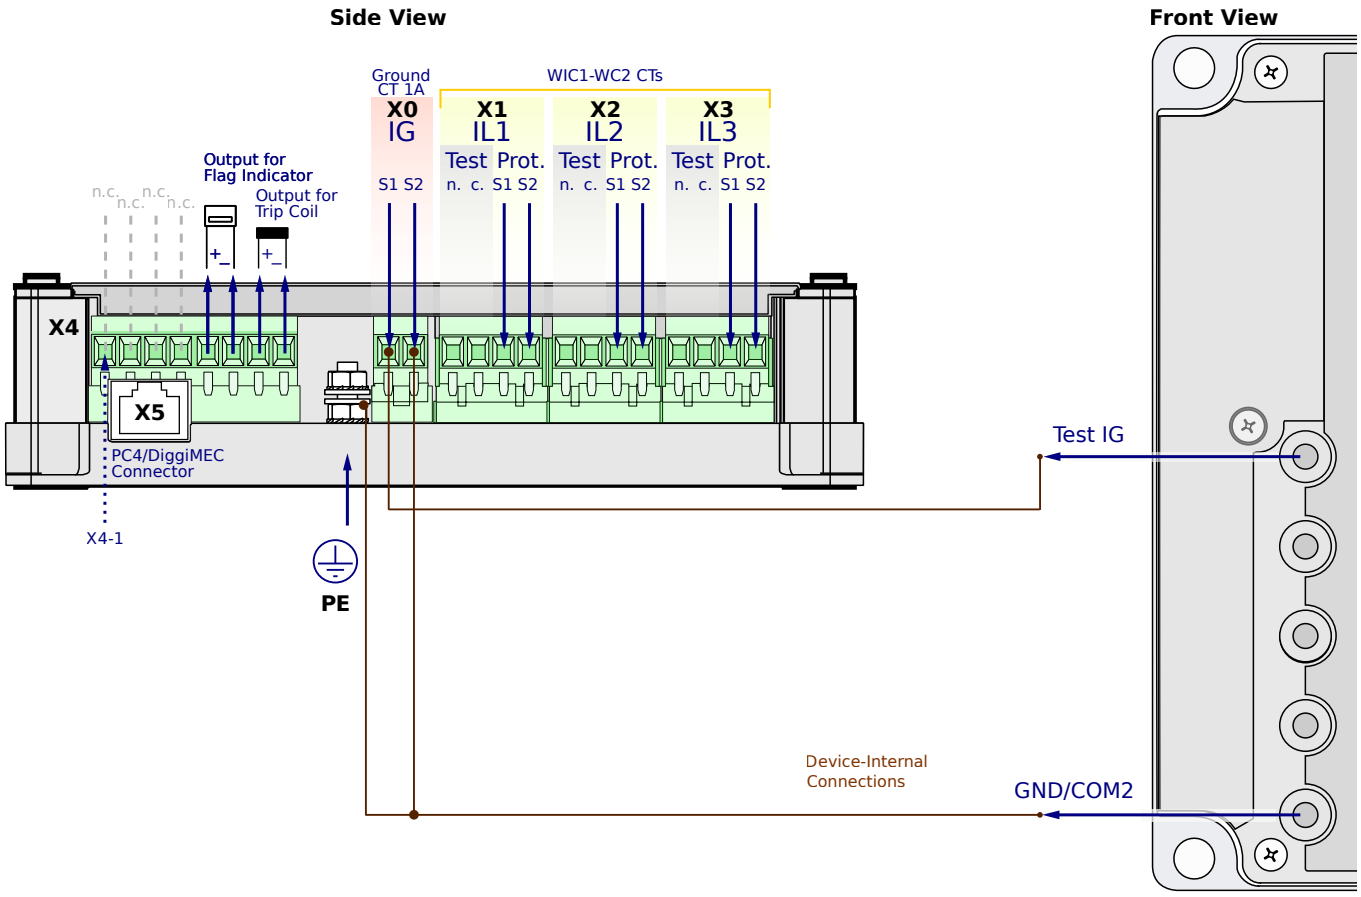


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0AAH

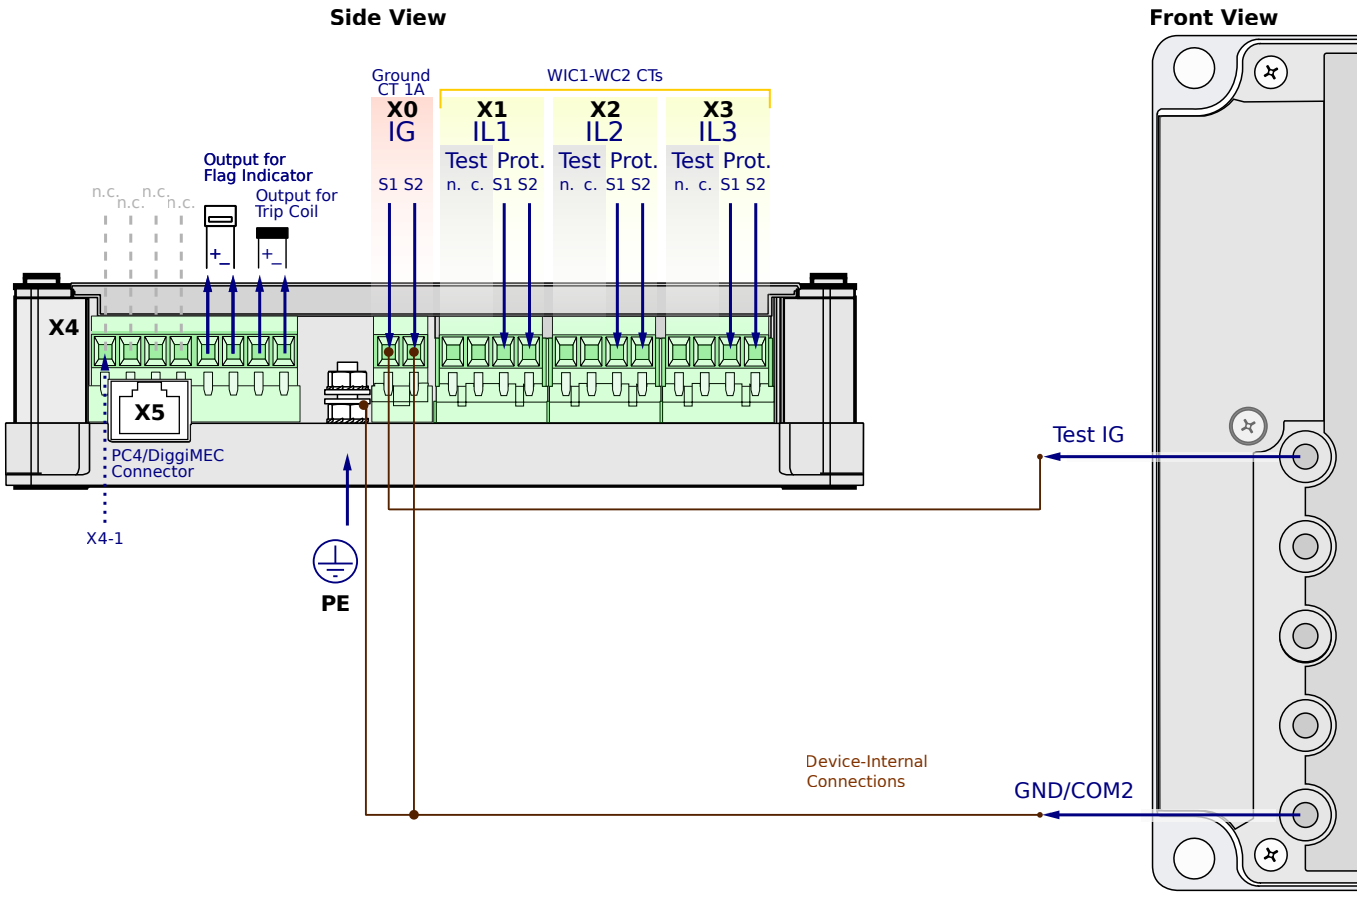


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0PA0

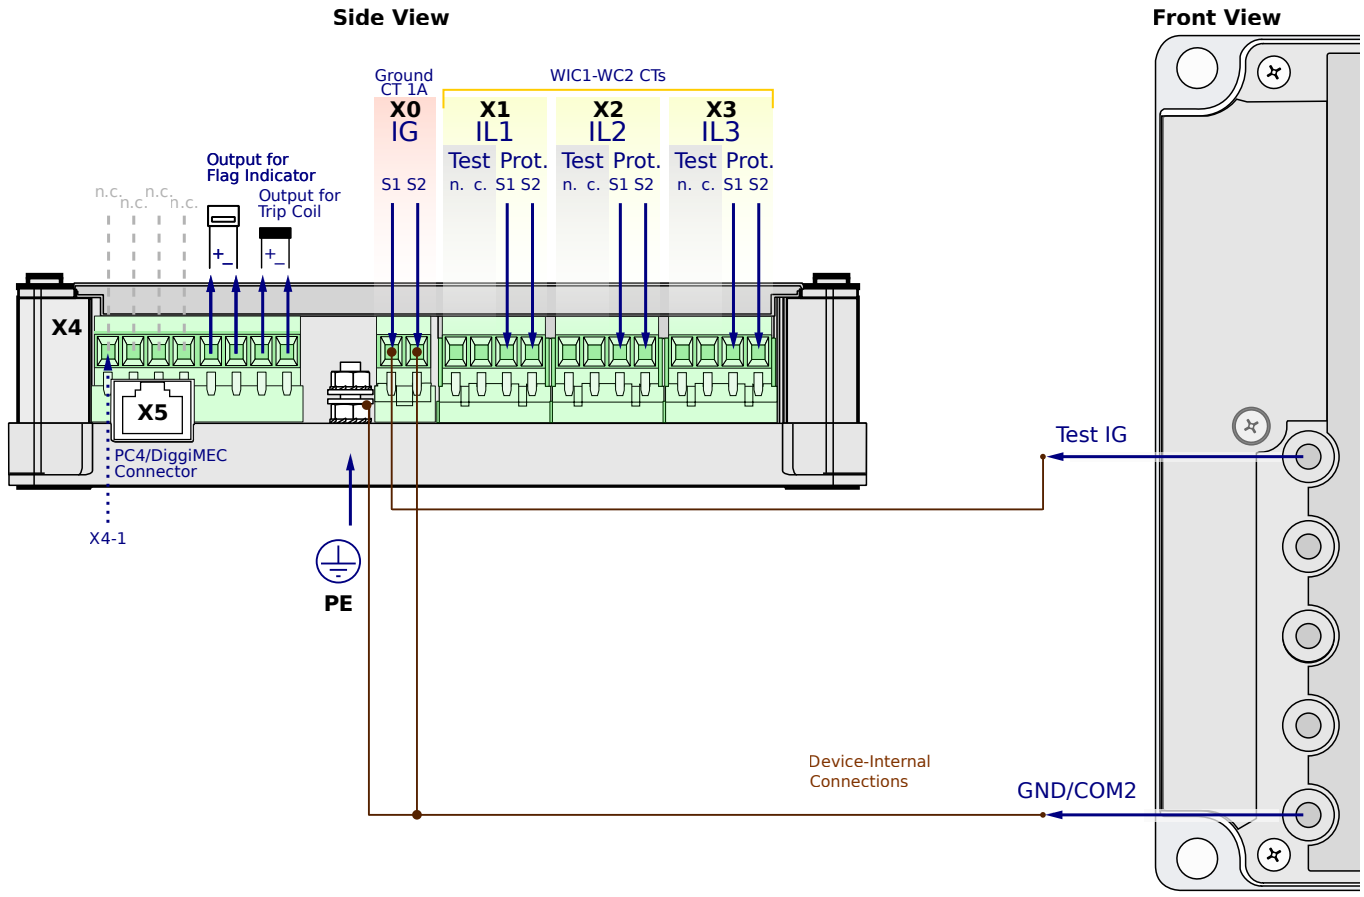


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN0PAH

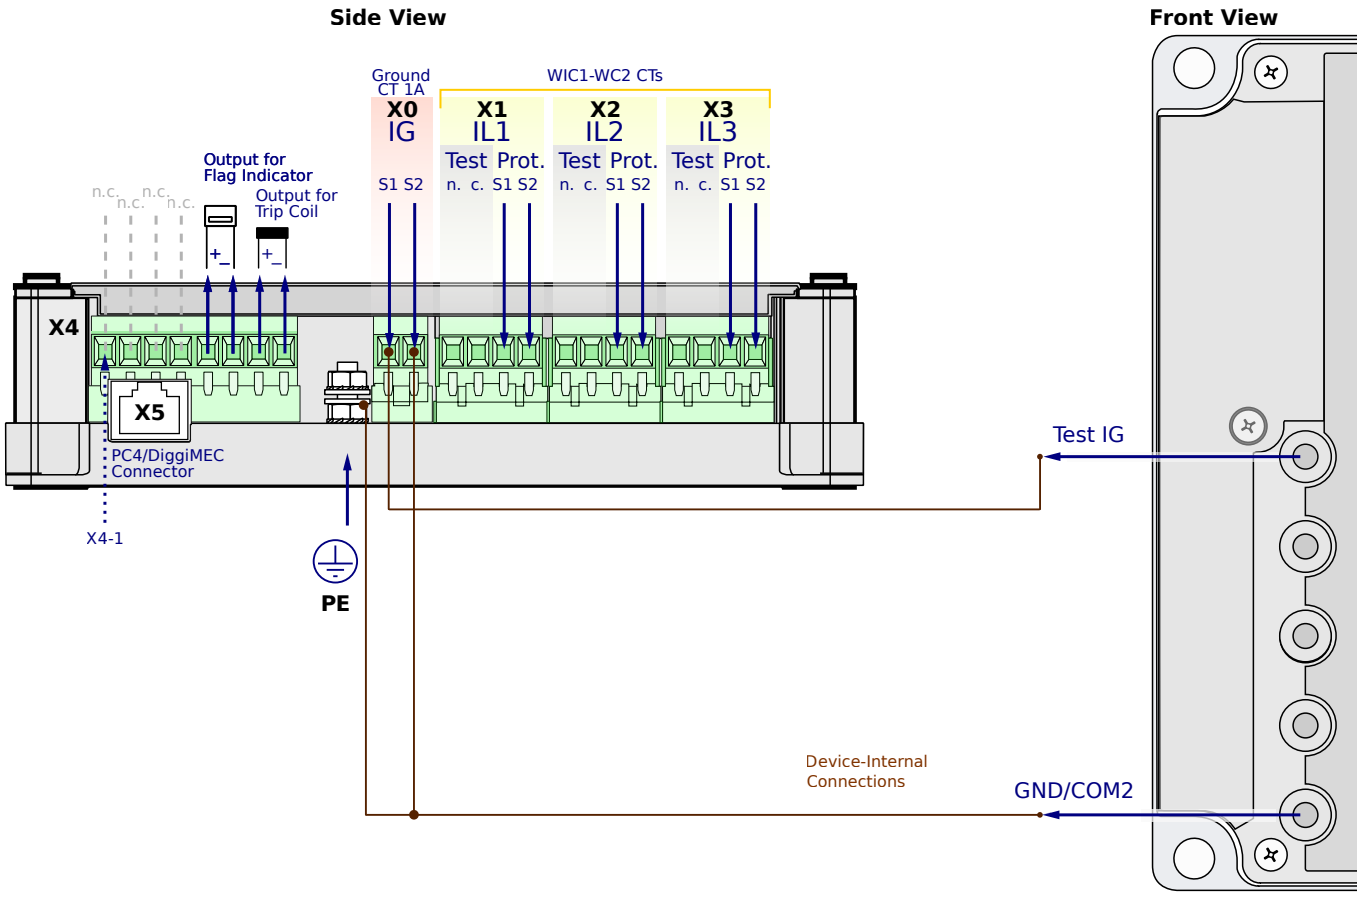


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1SA0

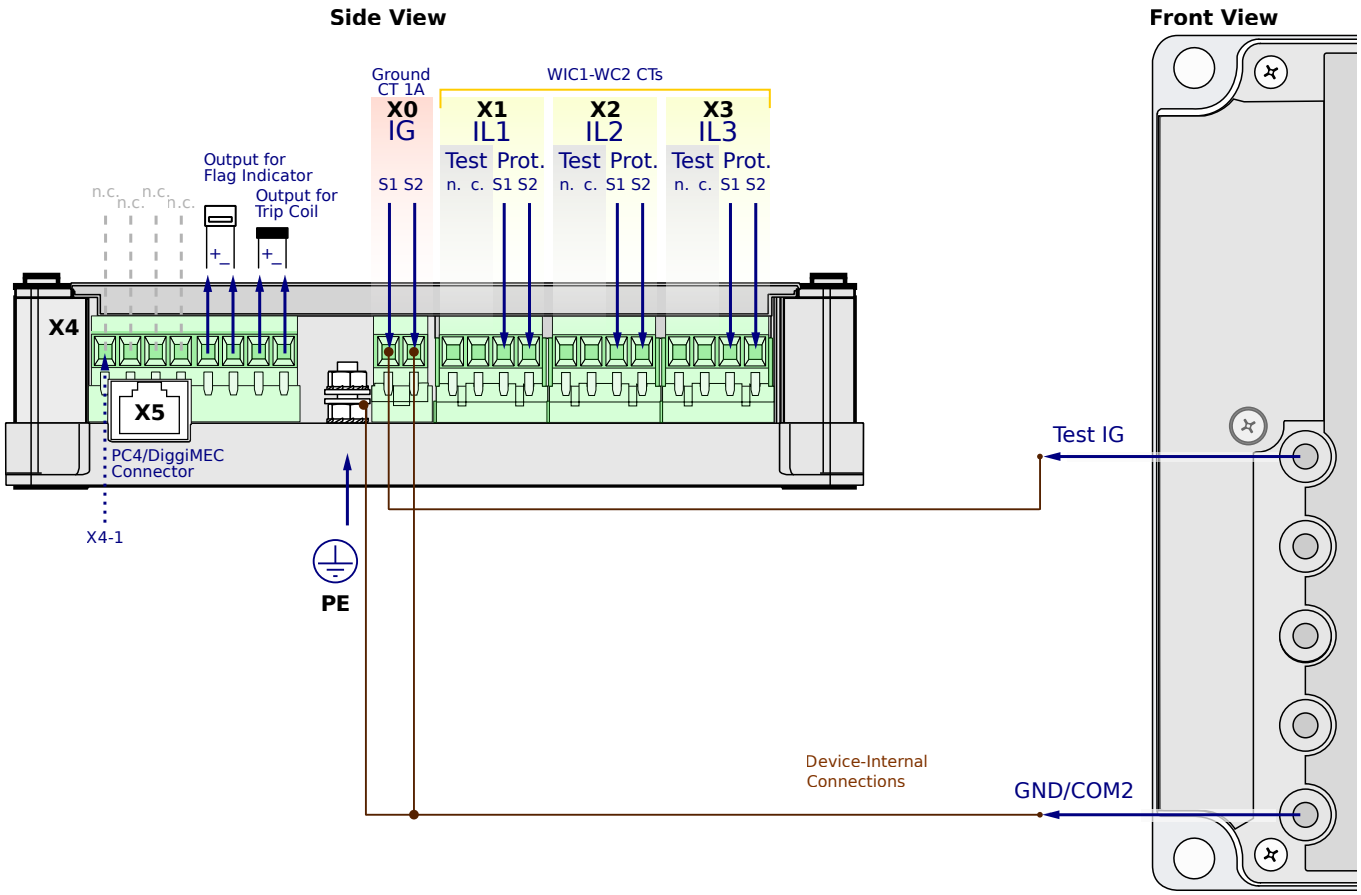


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1SAH

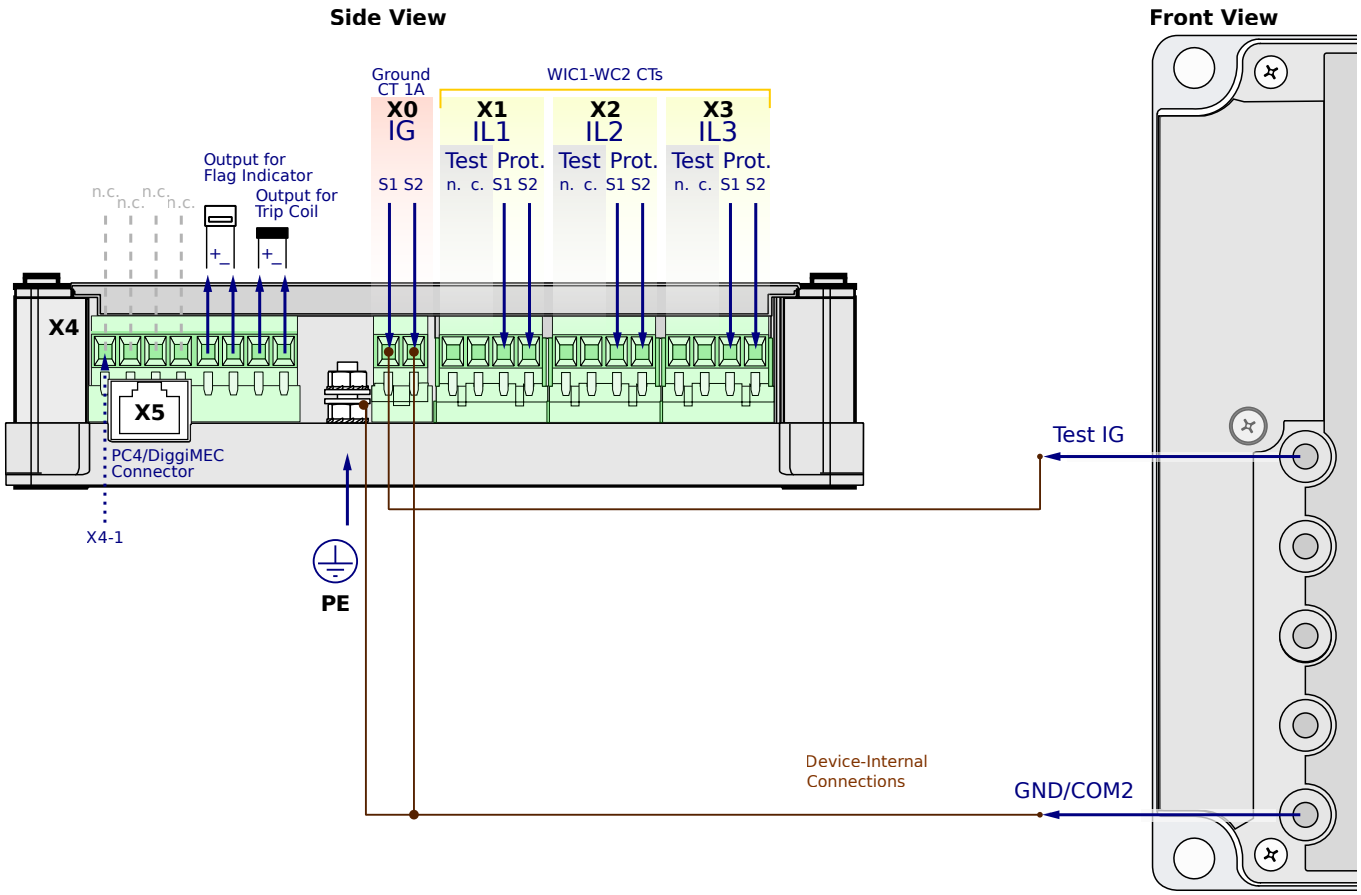


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1AA0

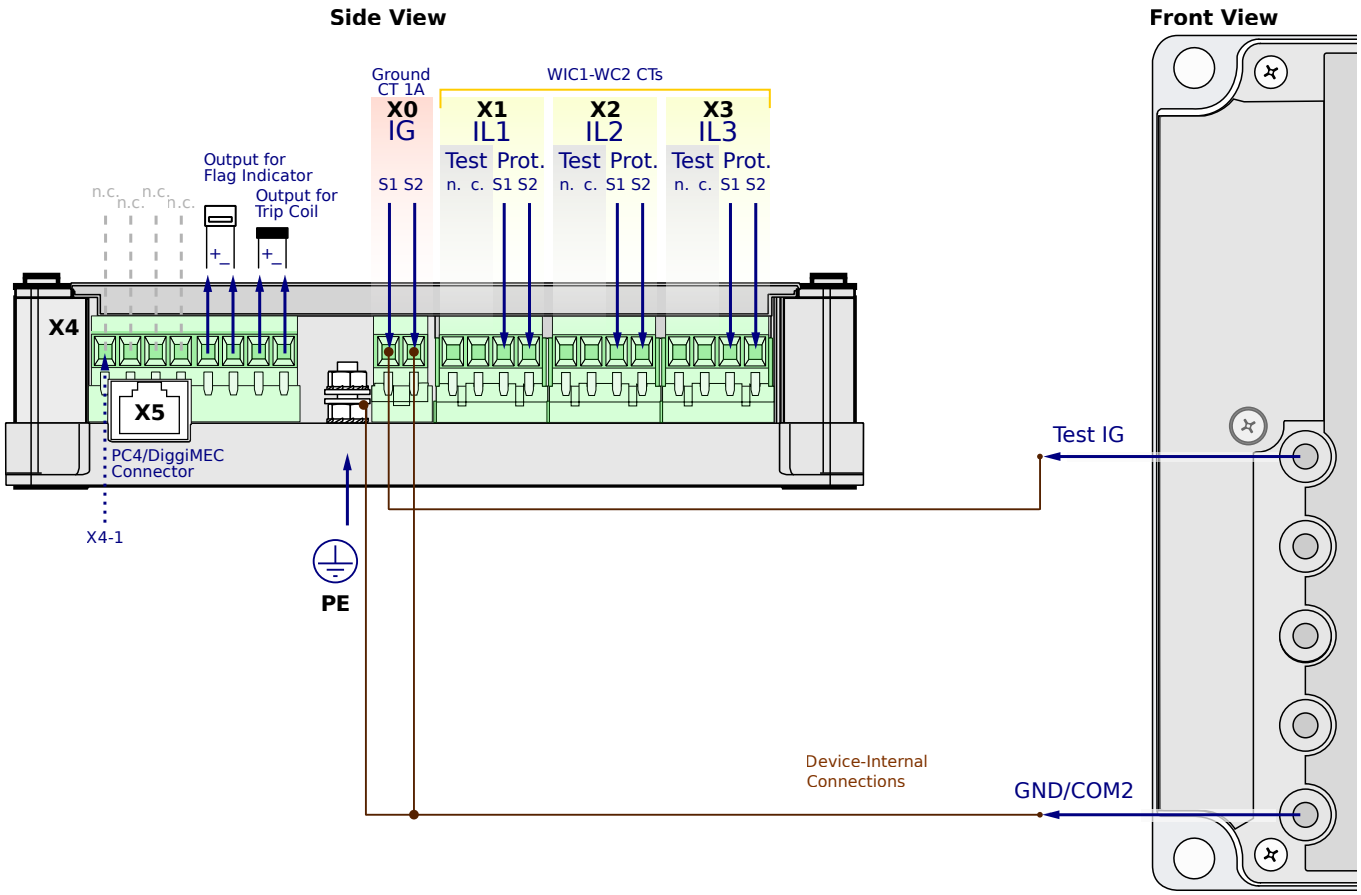


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1AAH

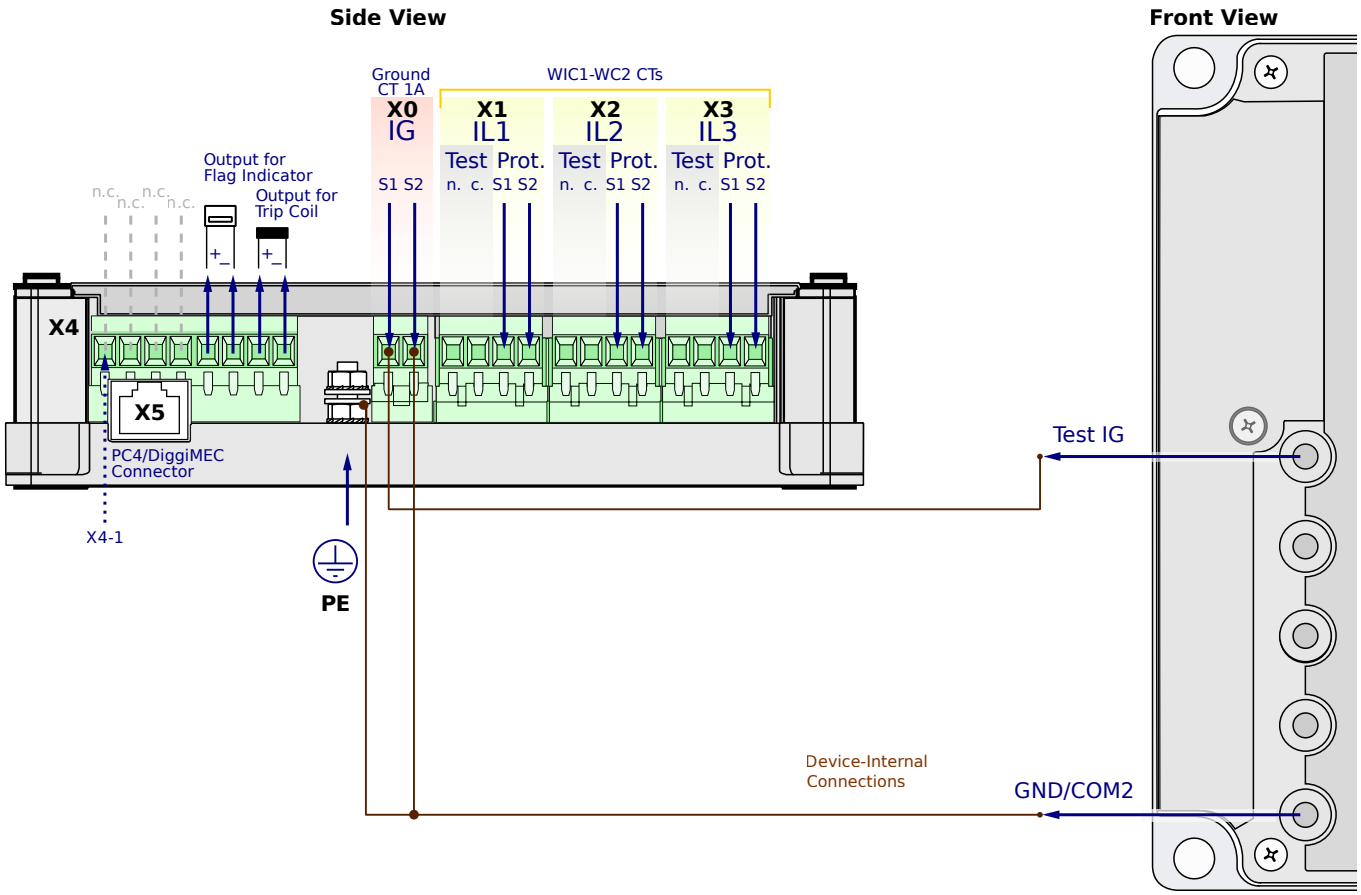


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1PA0

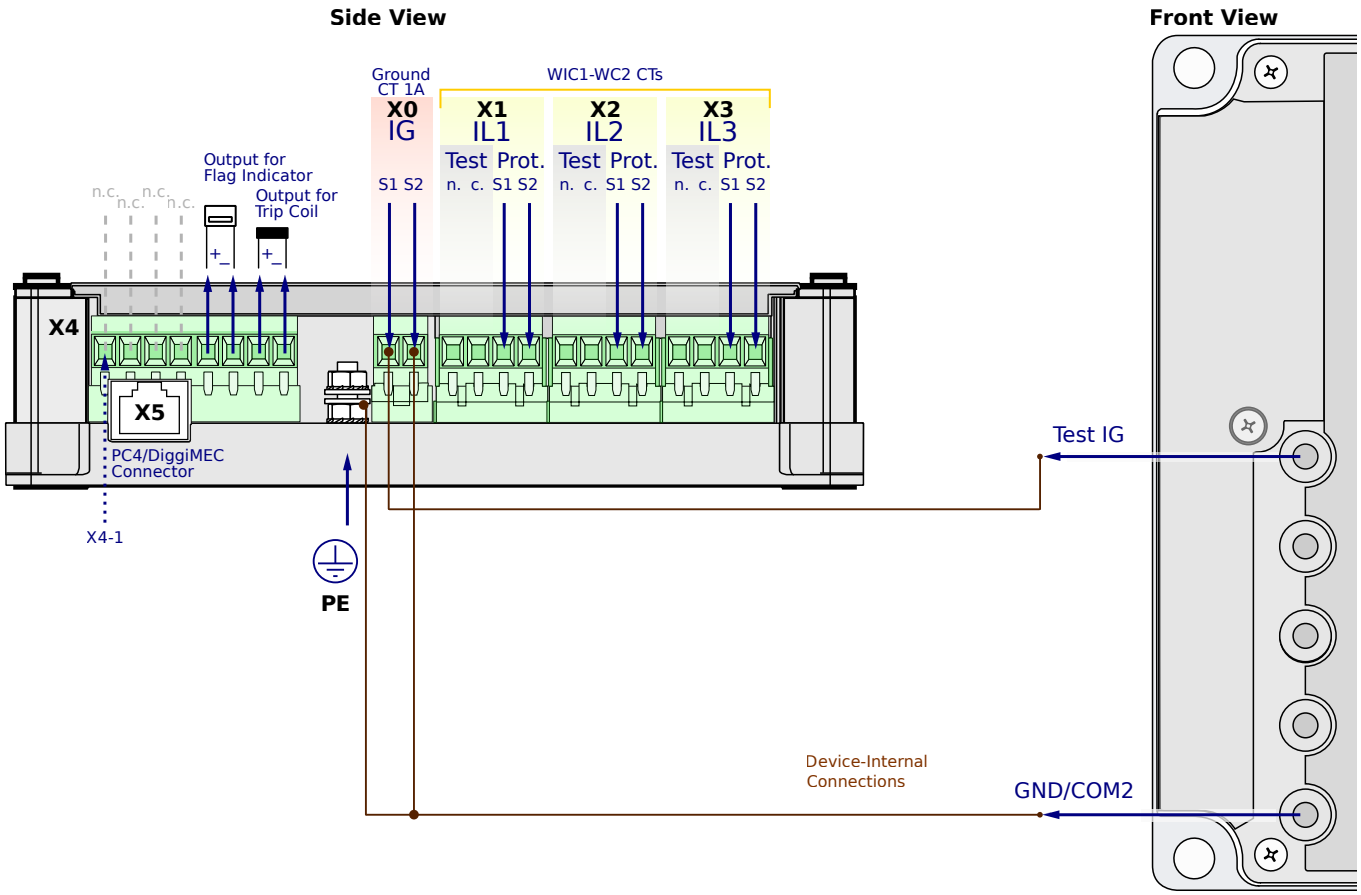


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN1PAH

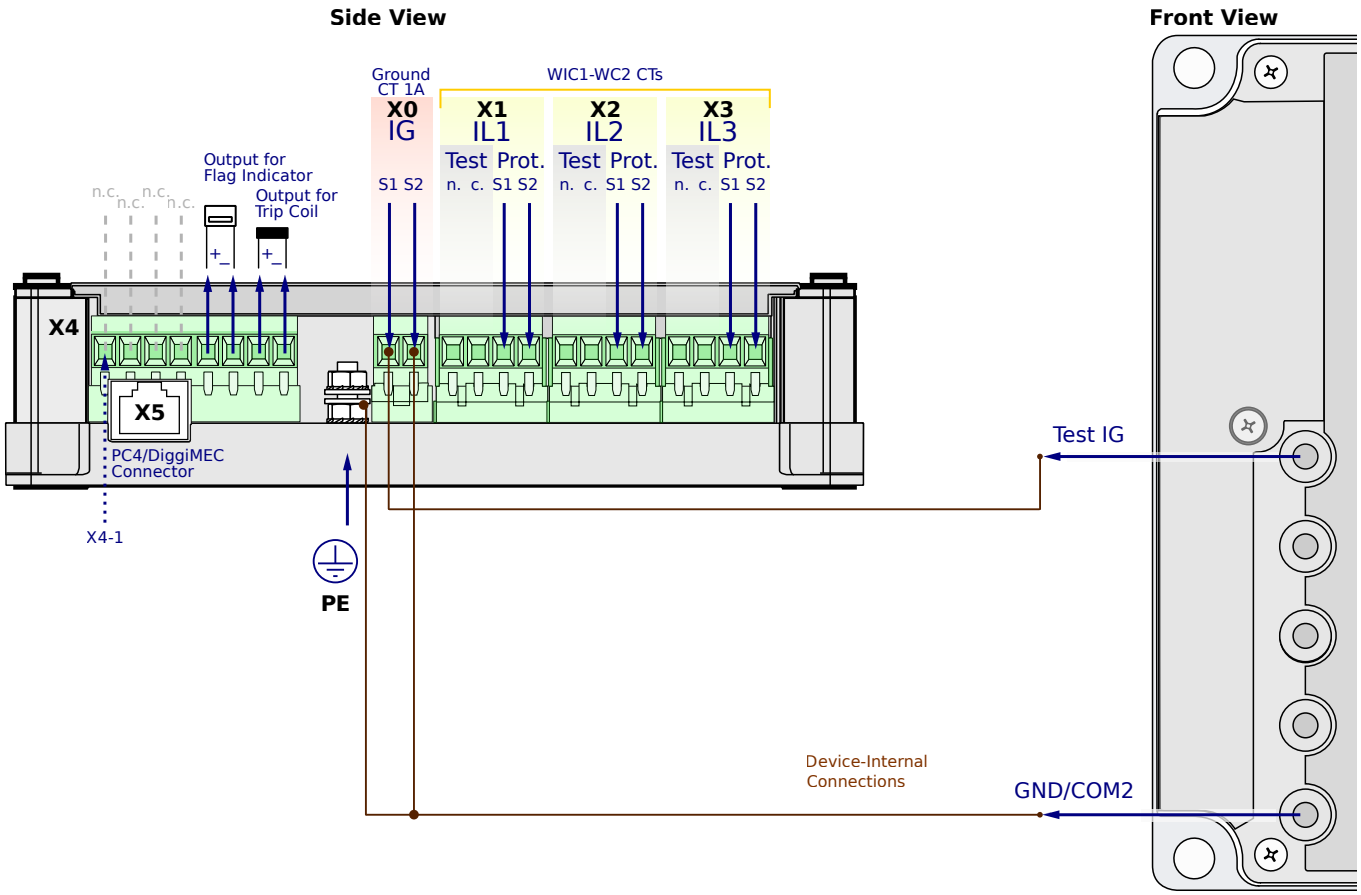


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2SA0

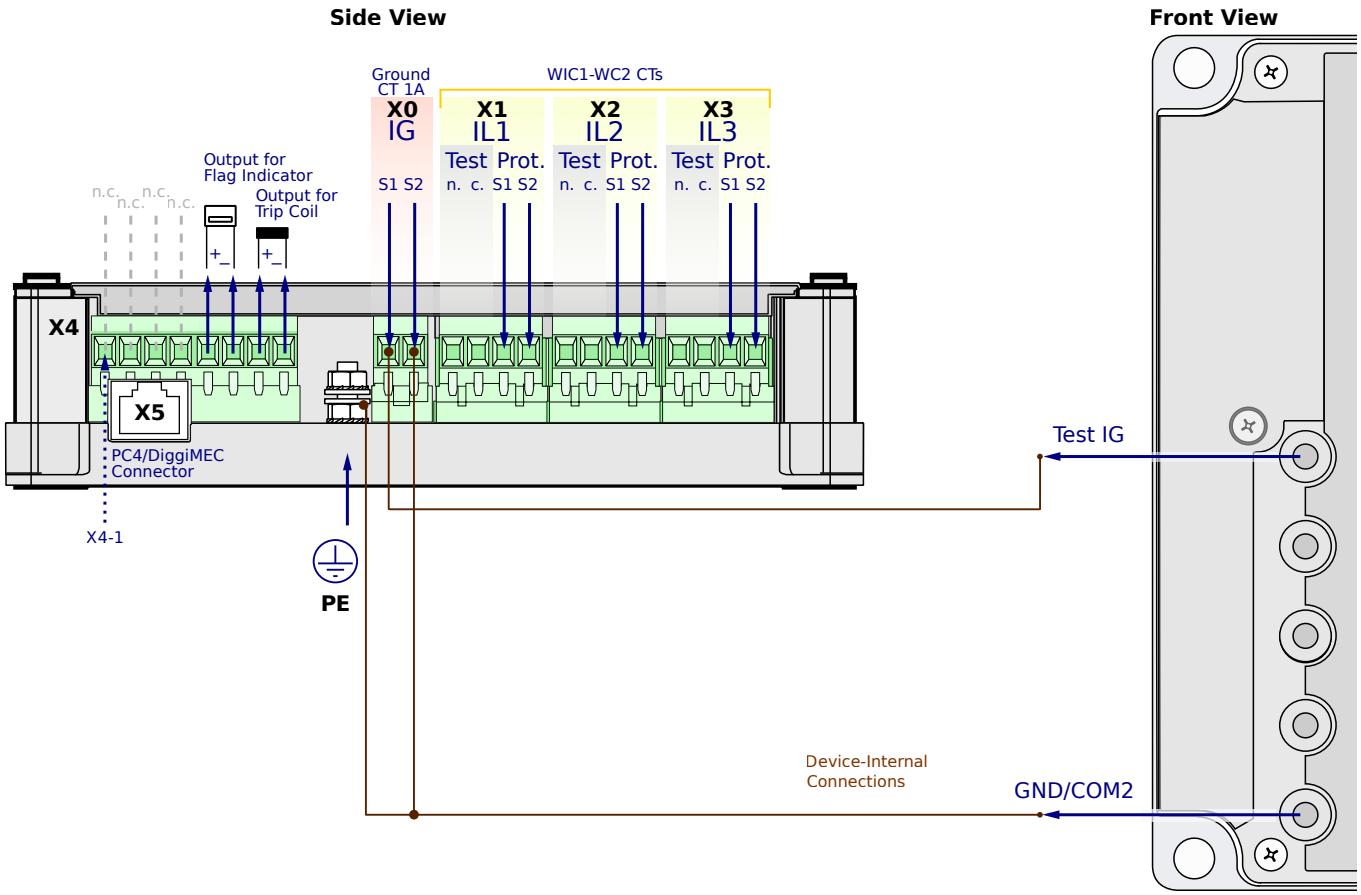


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2SAH

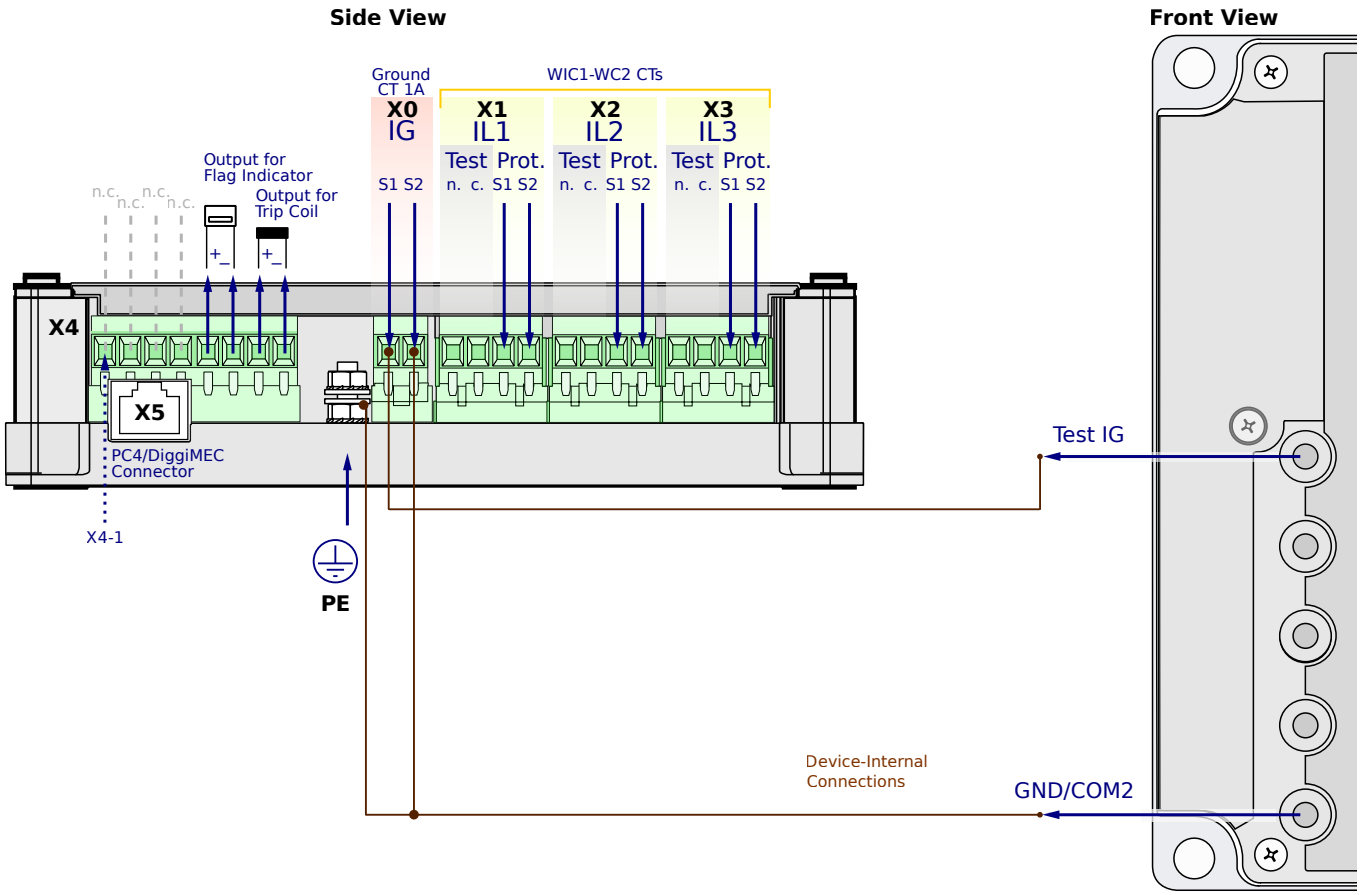


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2AA0

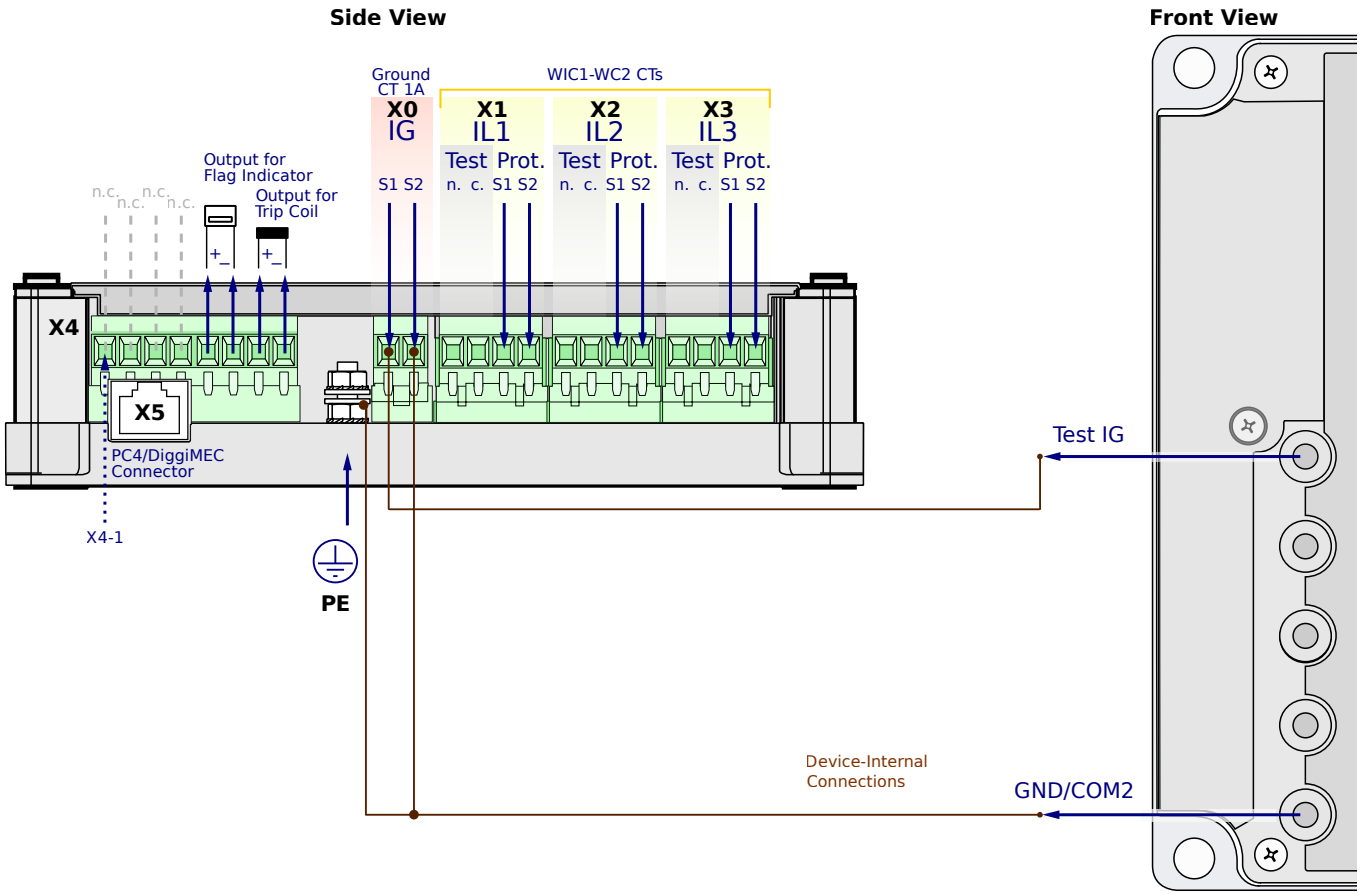


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2AAH

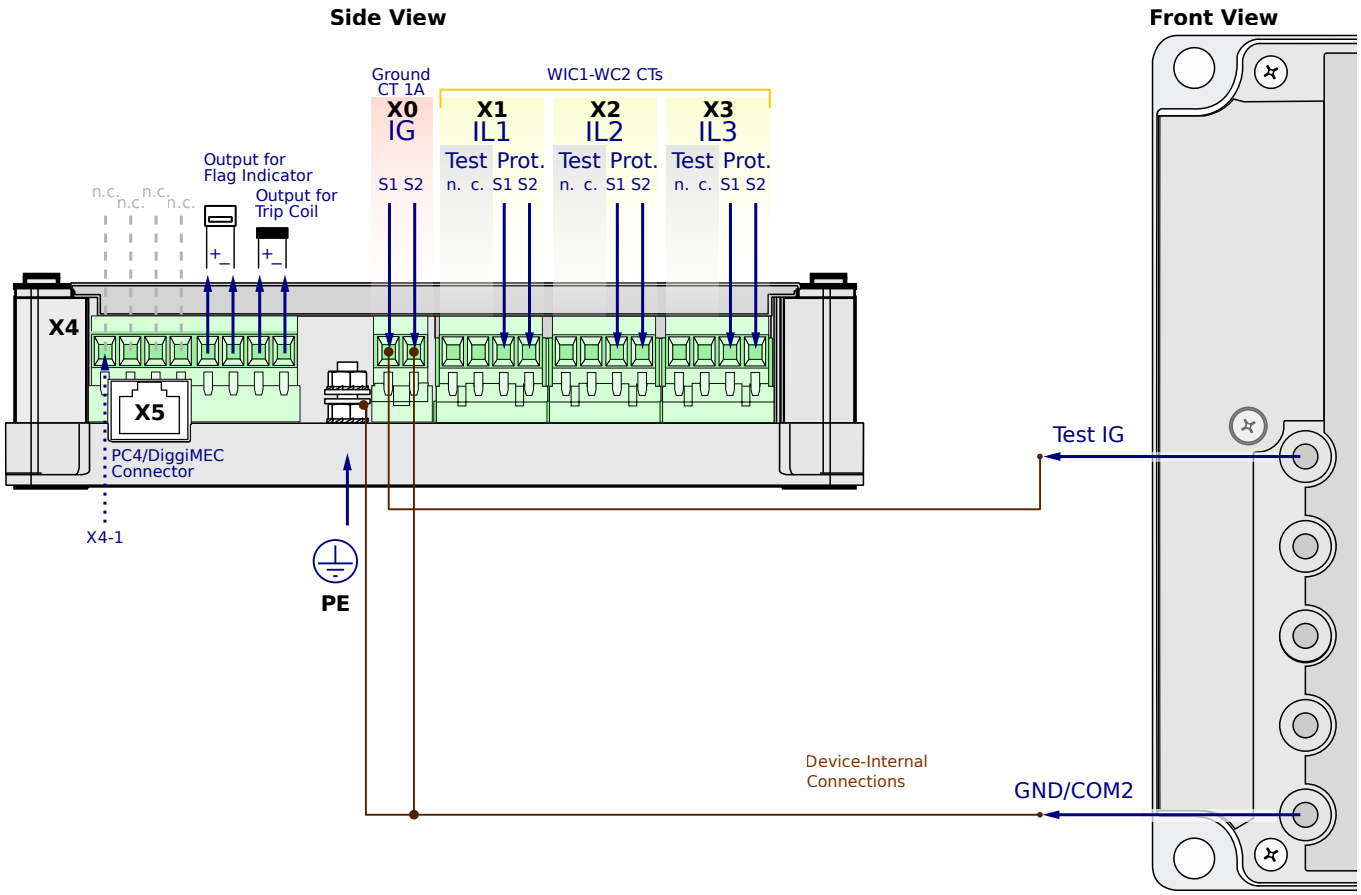


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2PA0

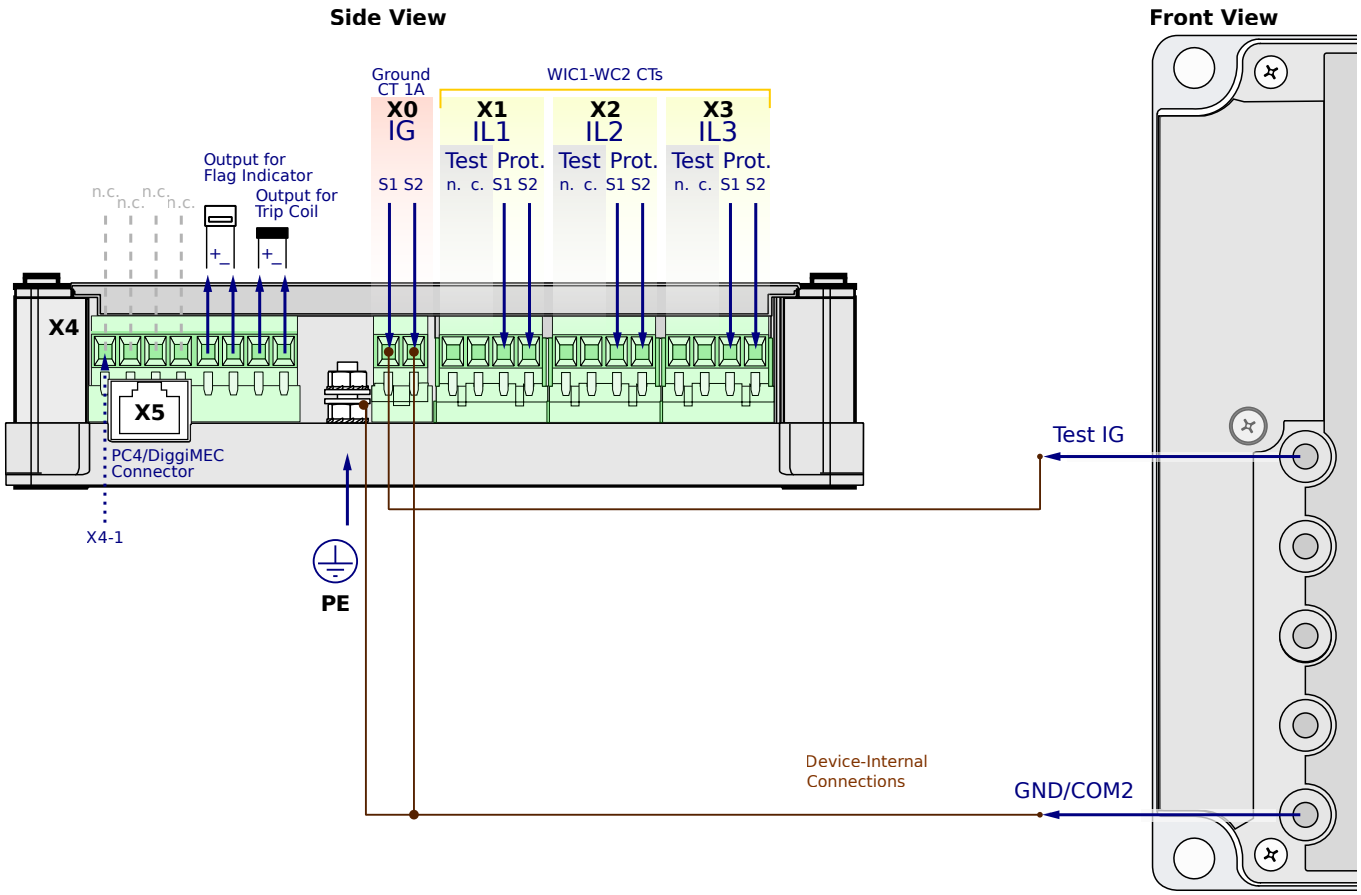


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NN2PAH

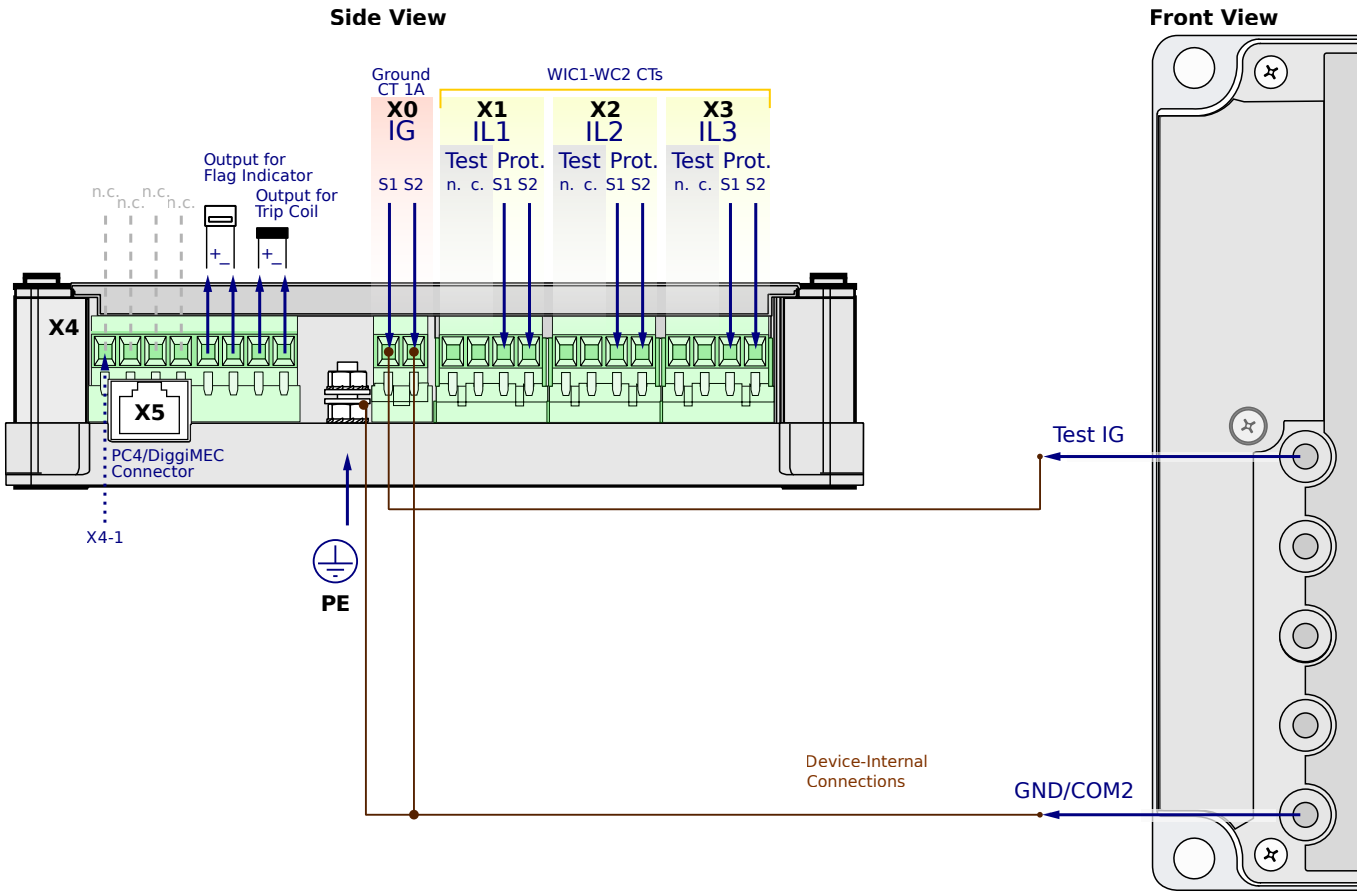


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0SA0

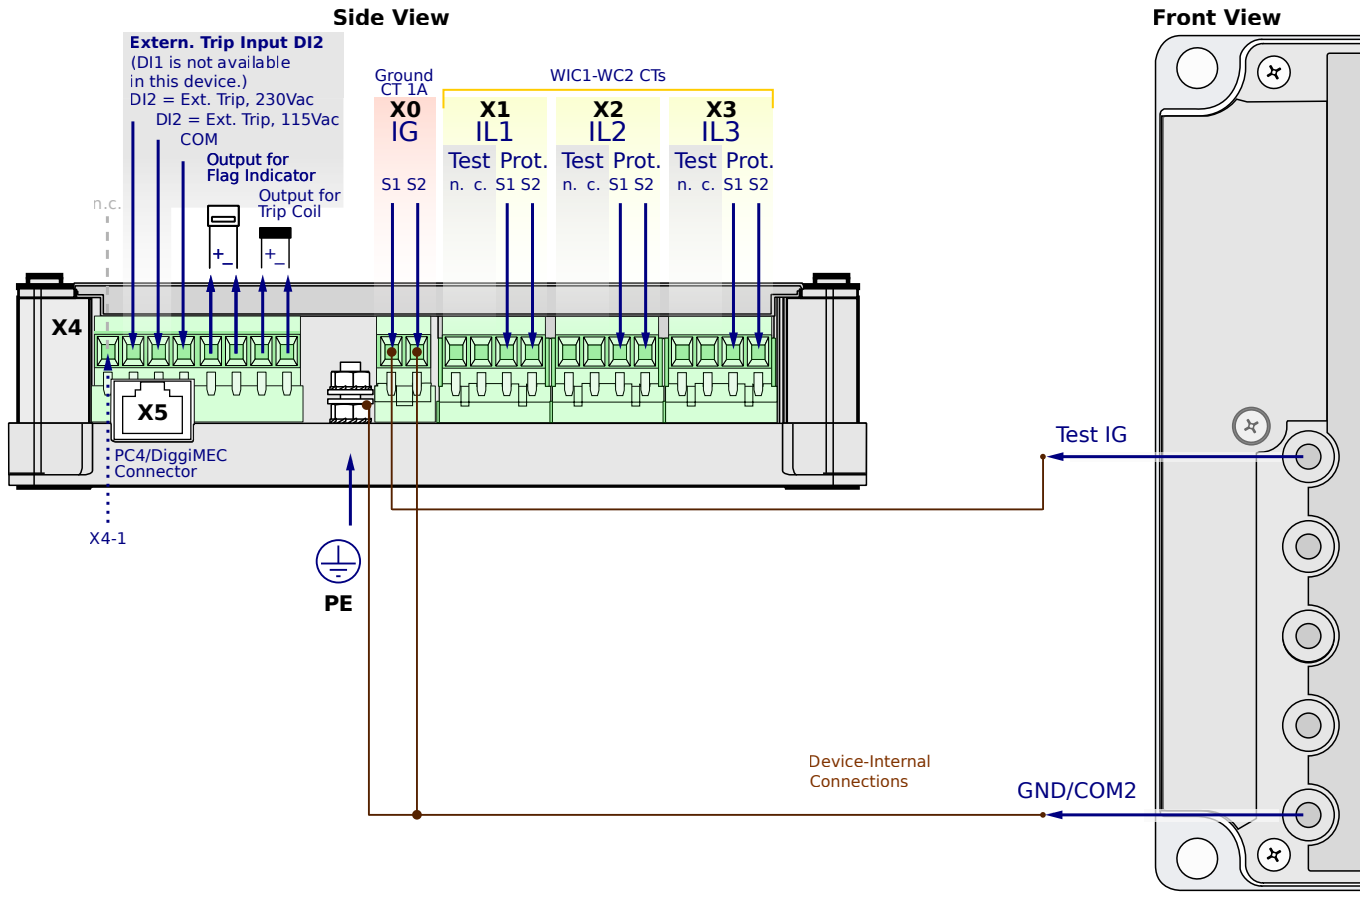


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0SAH

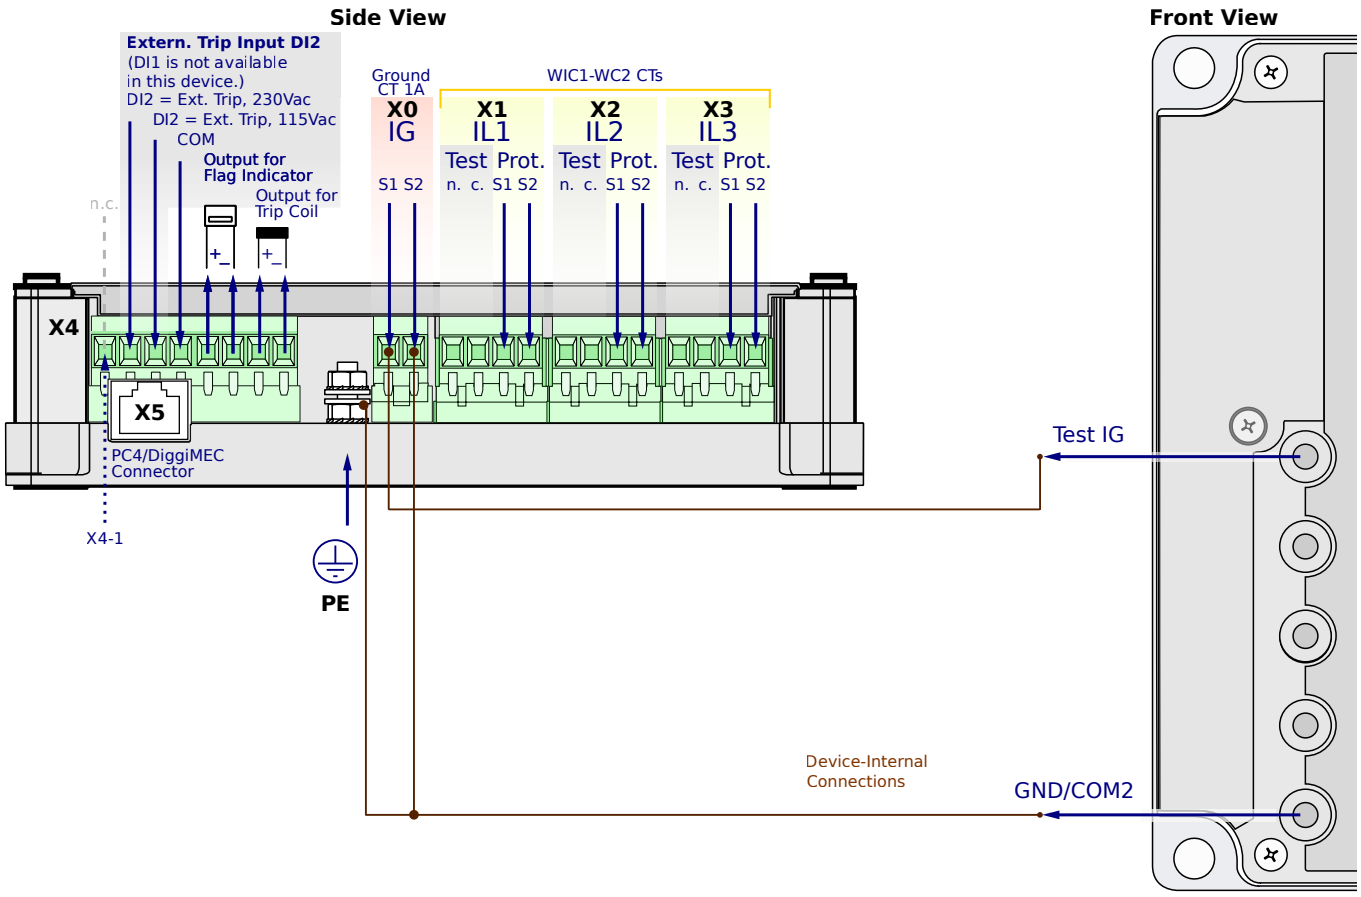


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0AA0

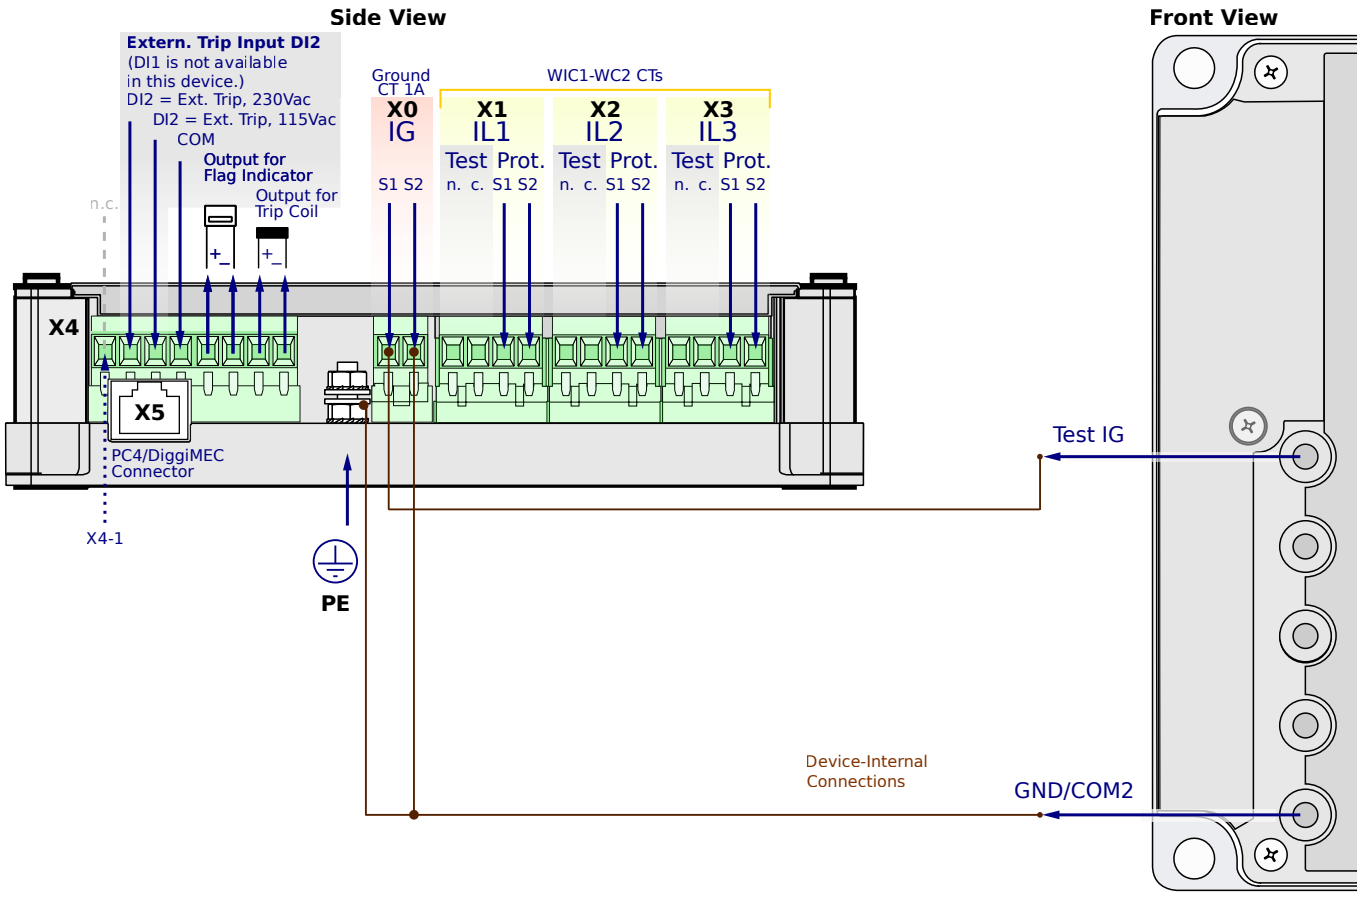


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0AAH

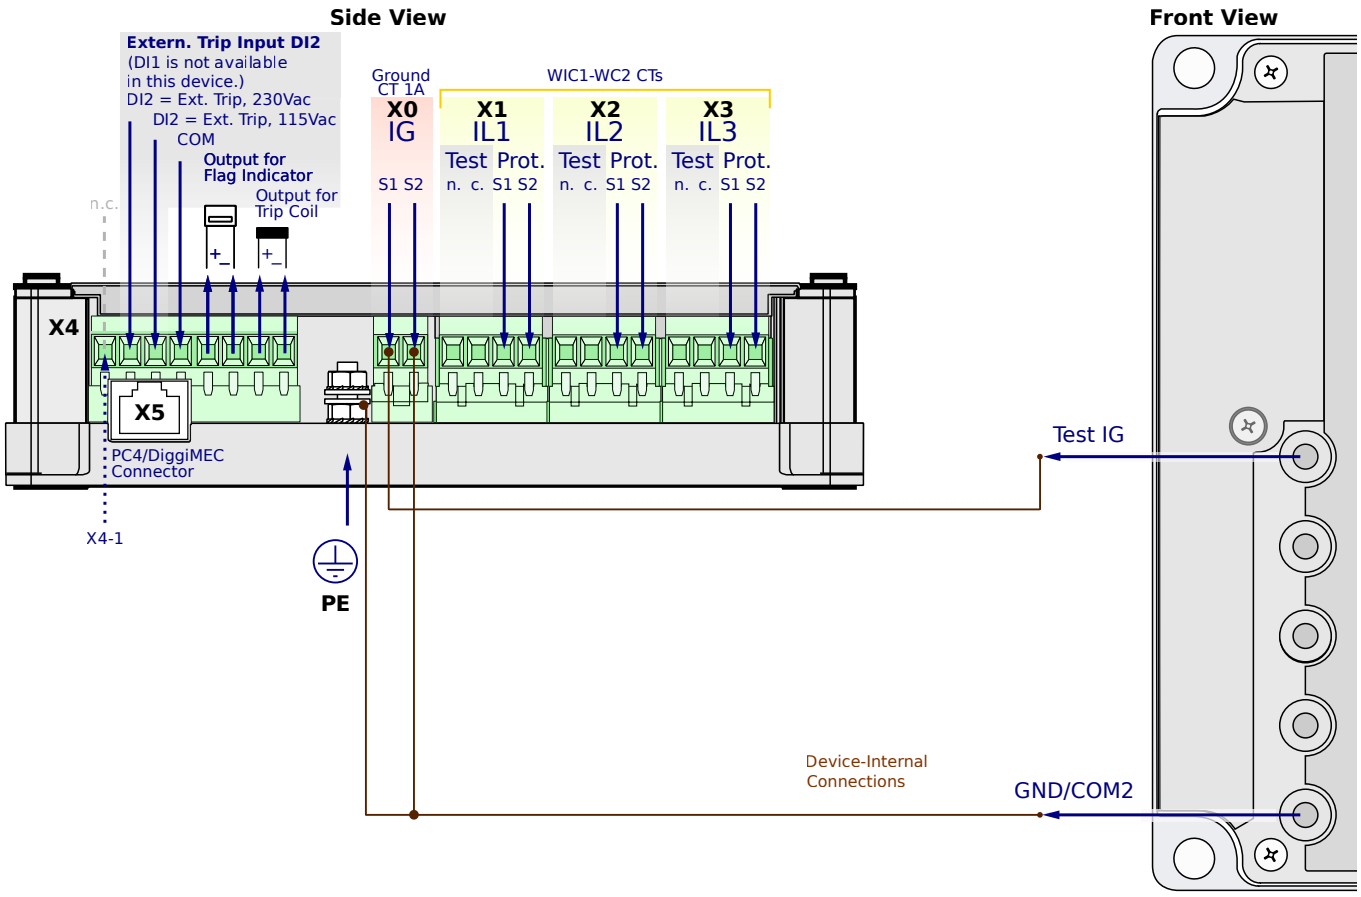


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0PA0

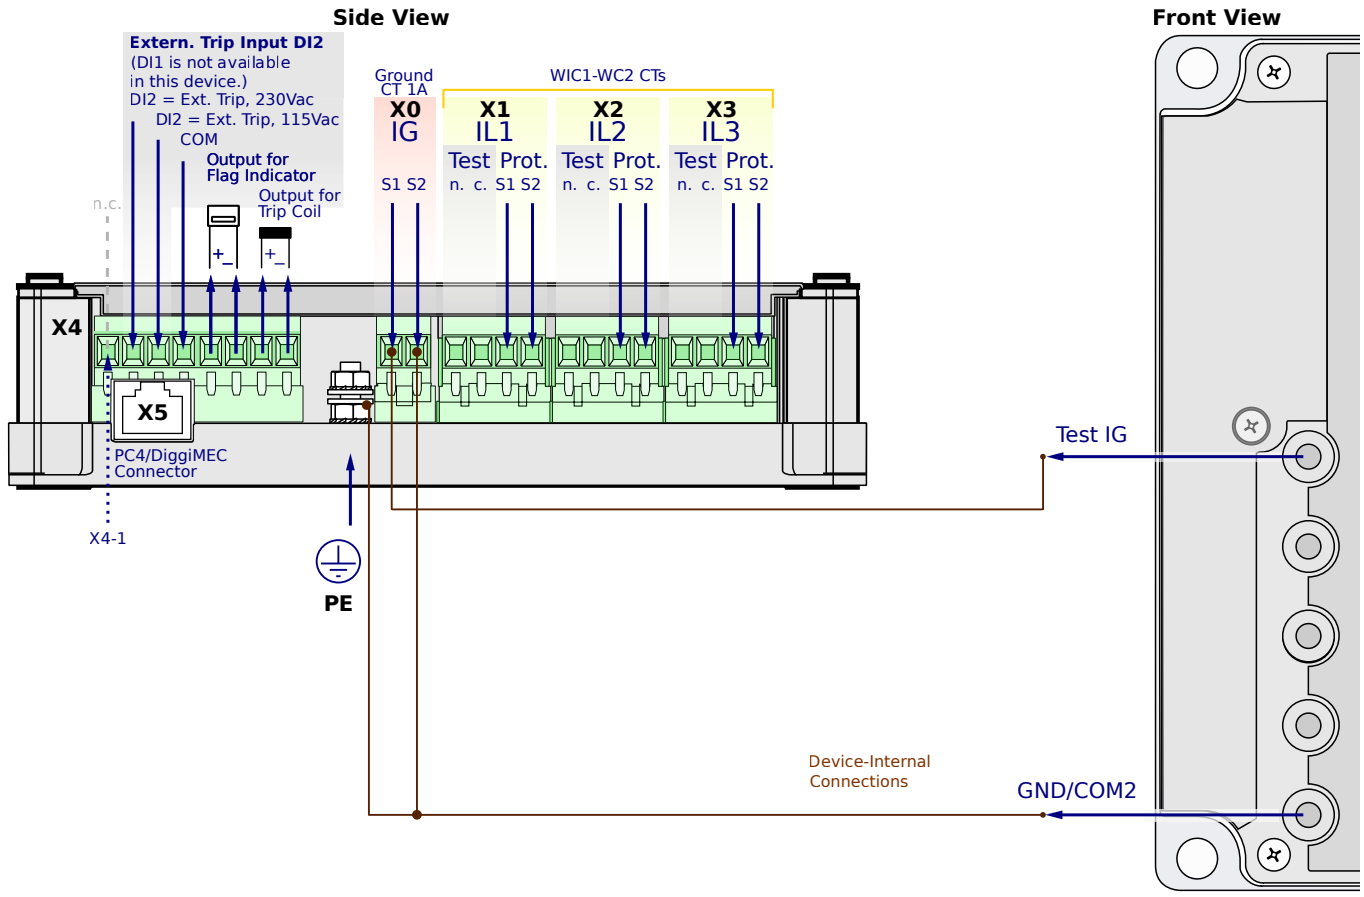


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF0PAH

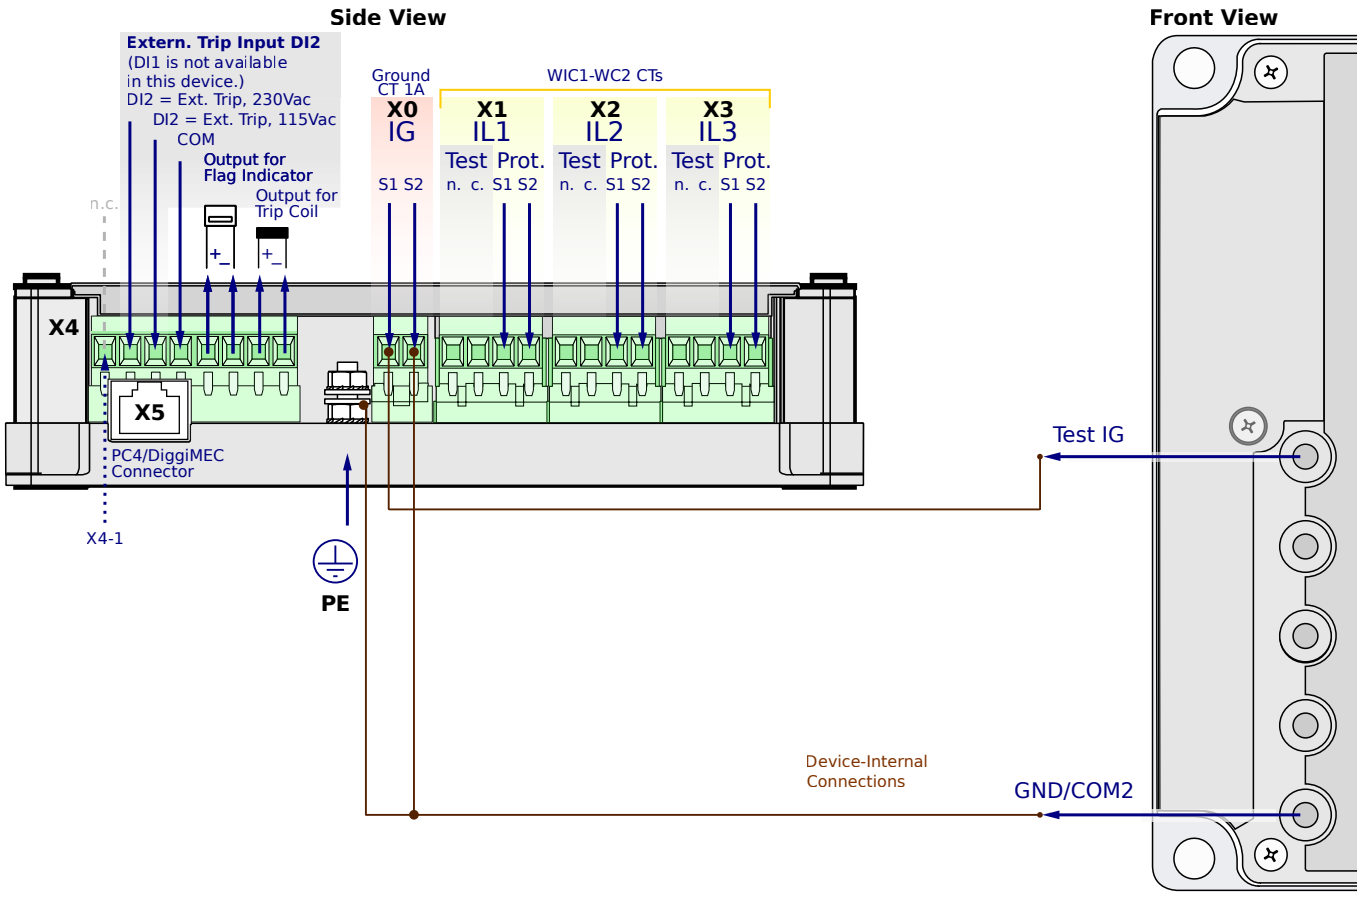


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1SA0

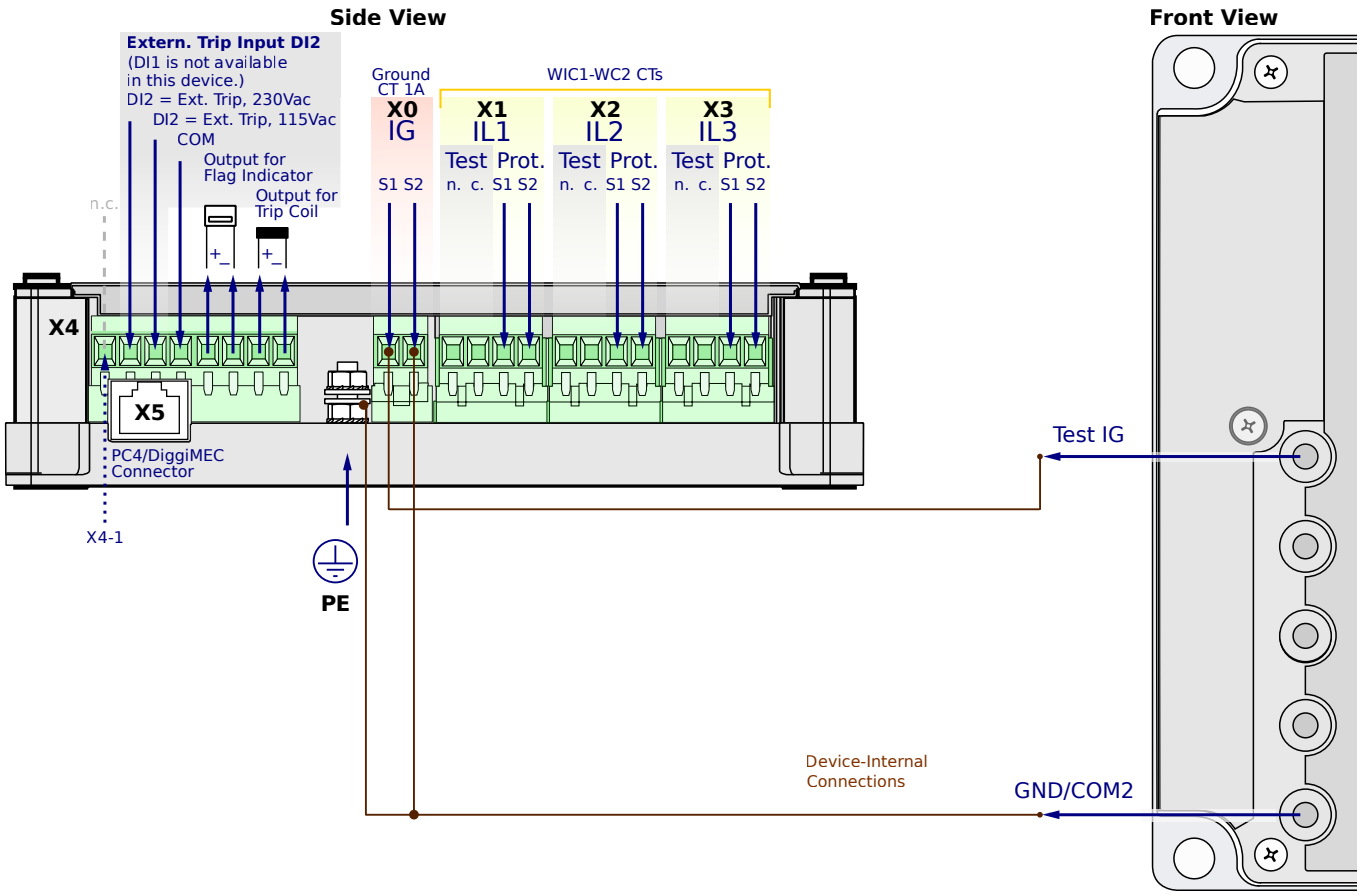


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1SAH

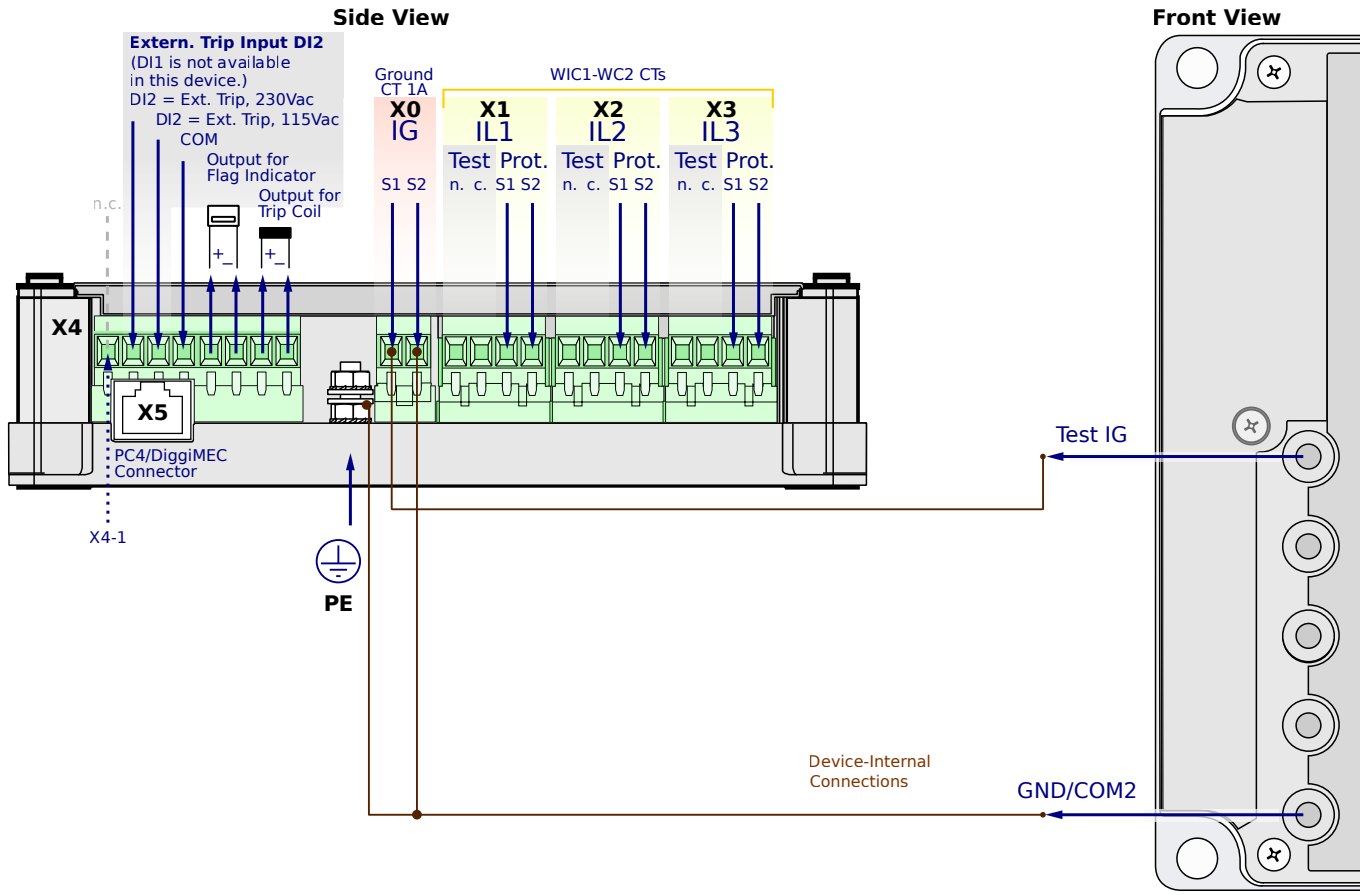


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1AA0

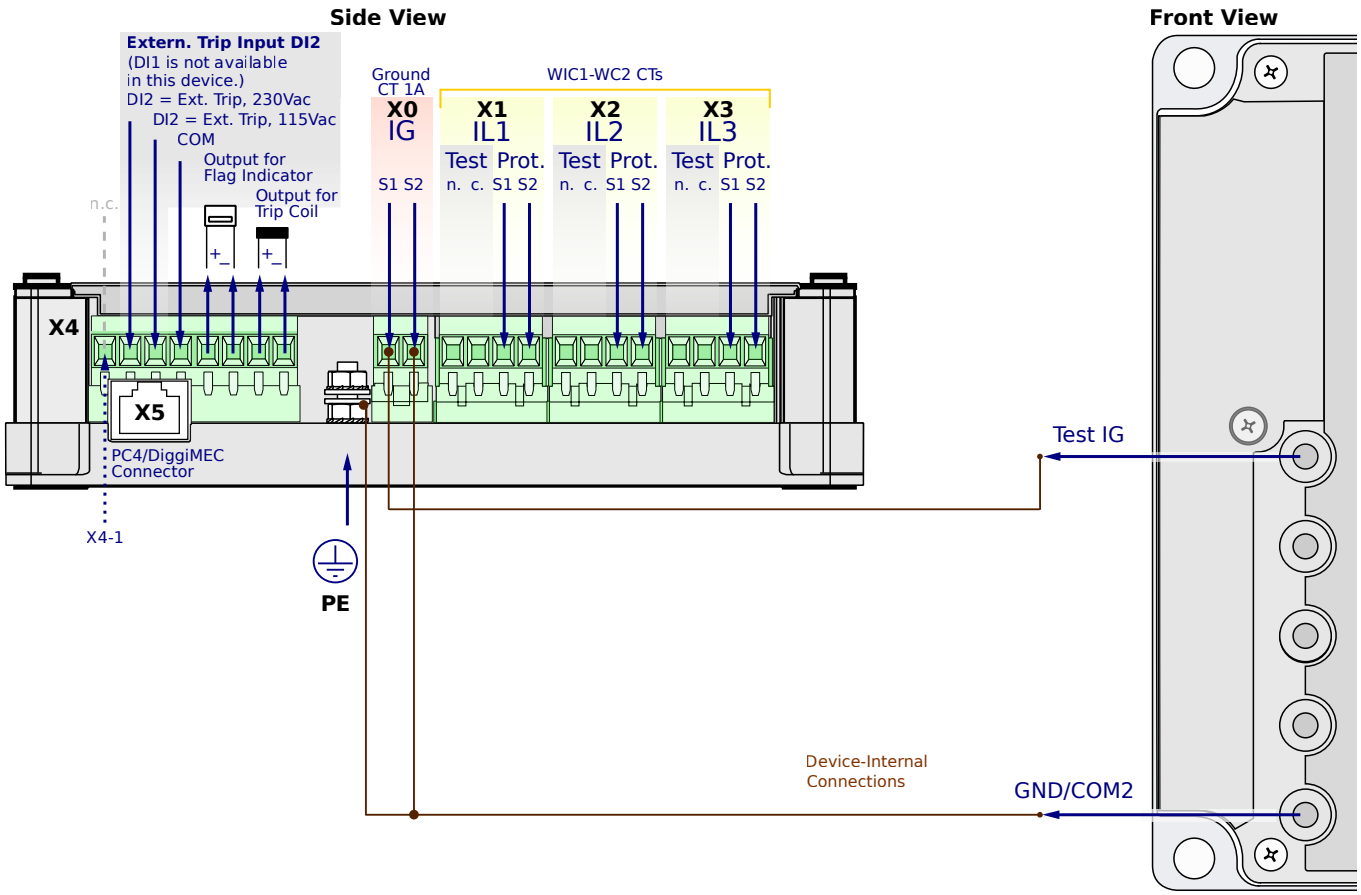


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1AAH

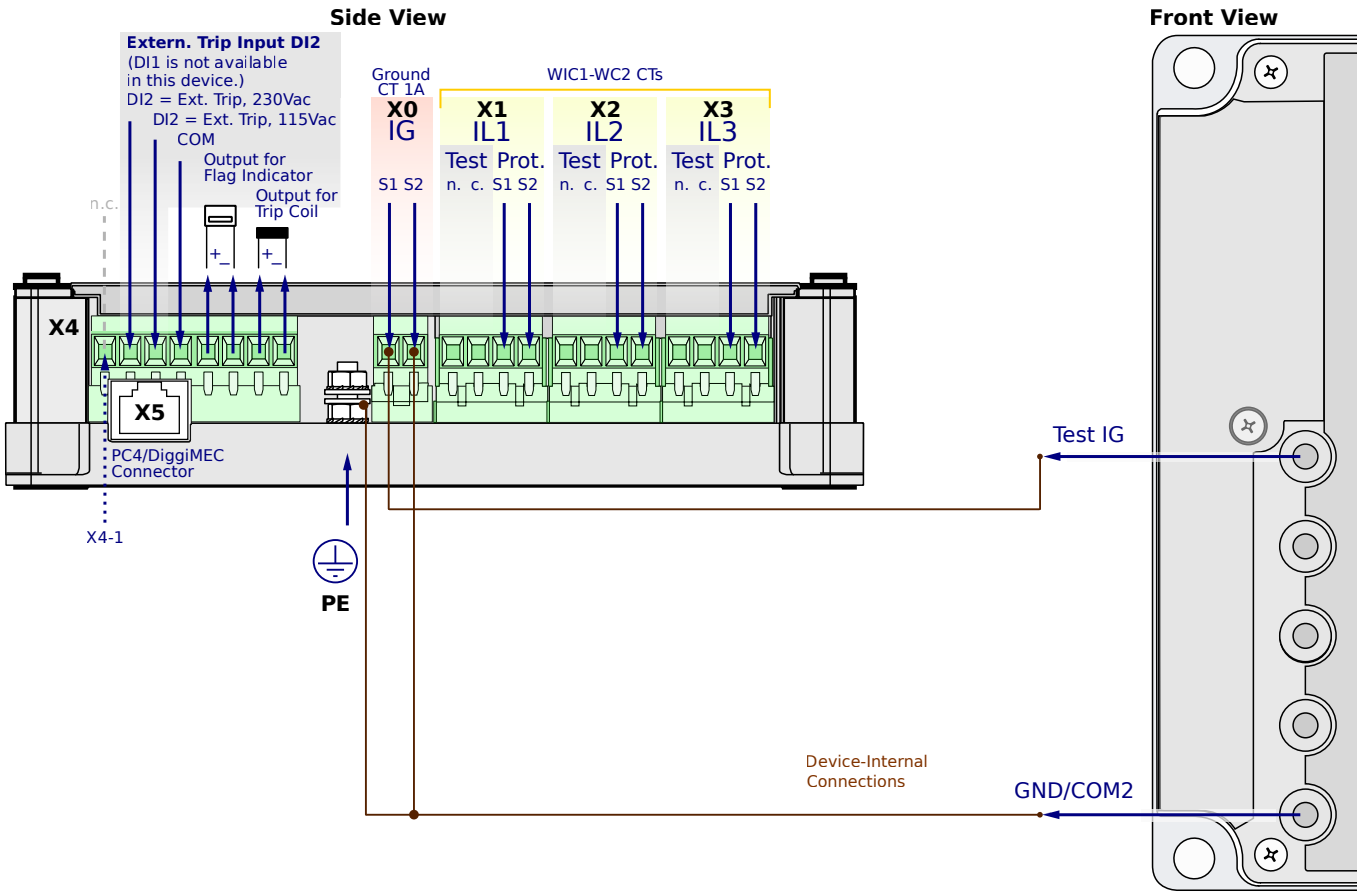


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1PA0

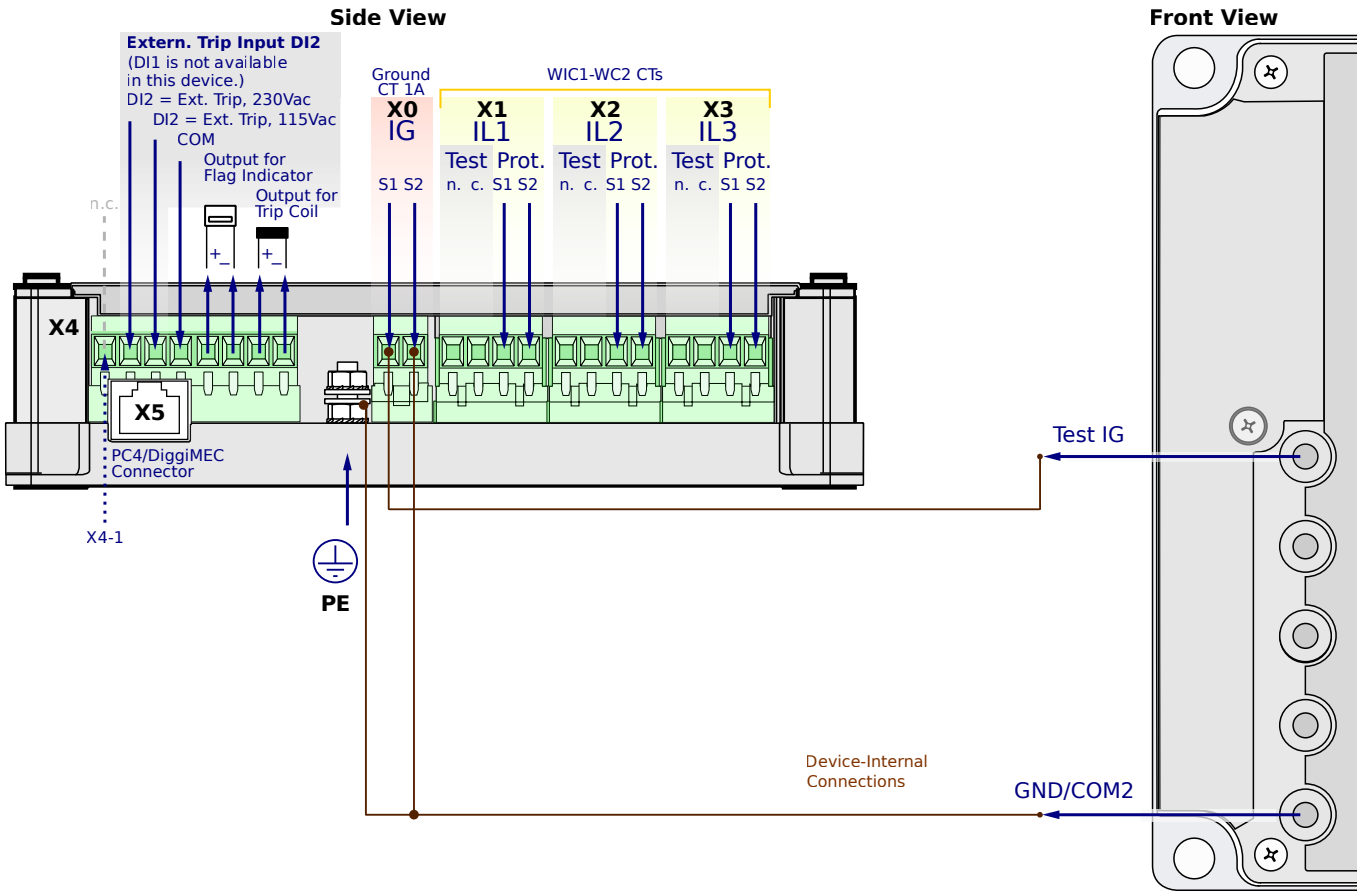


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF1PAH

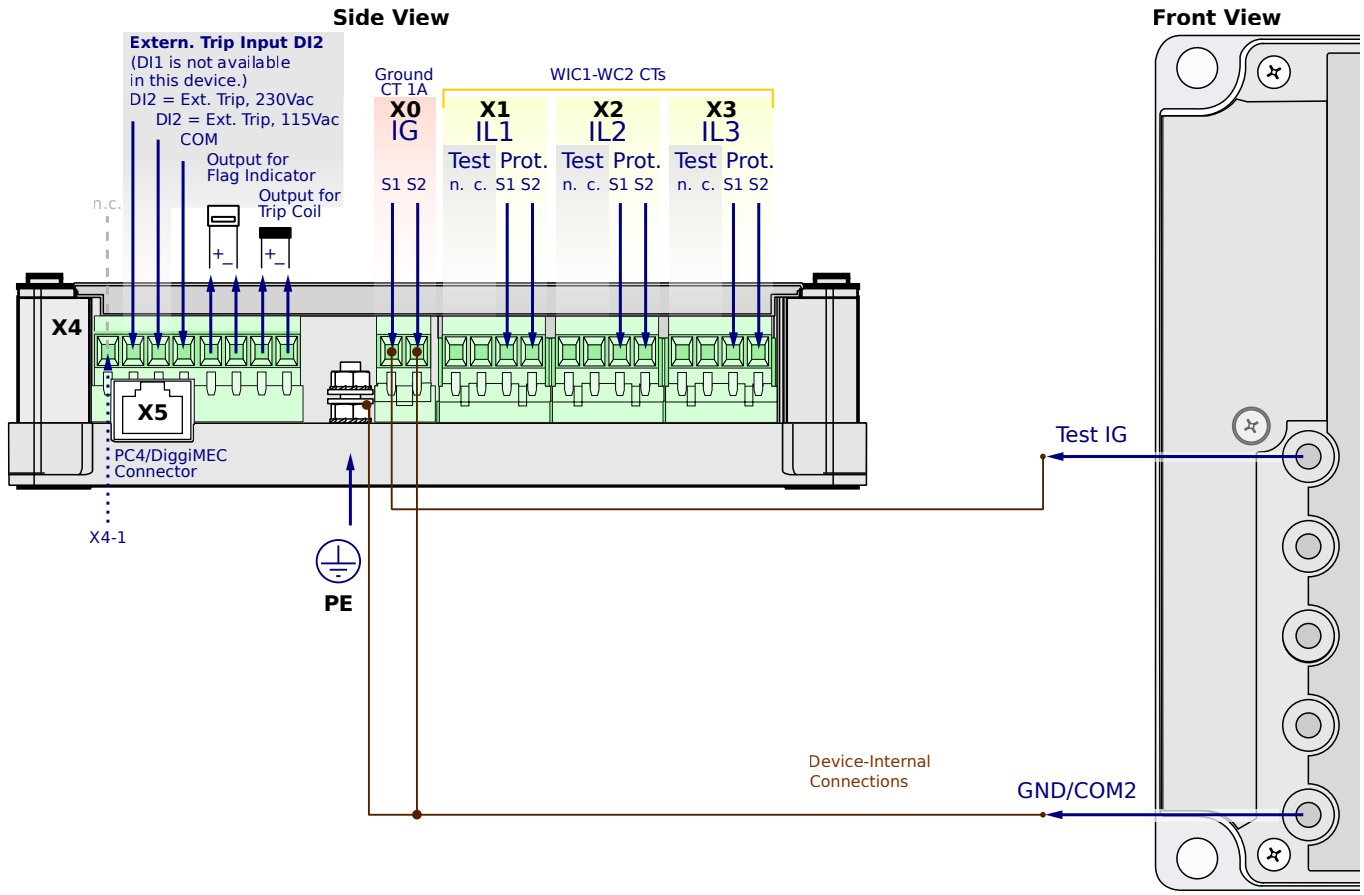


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2SA0

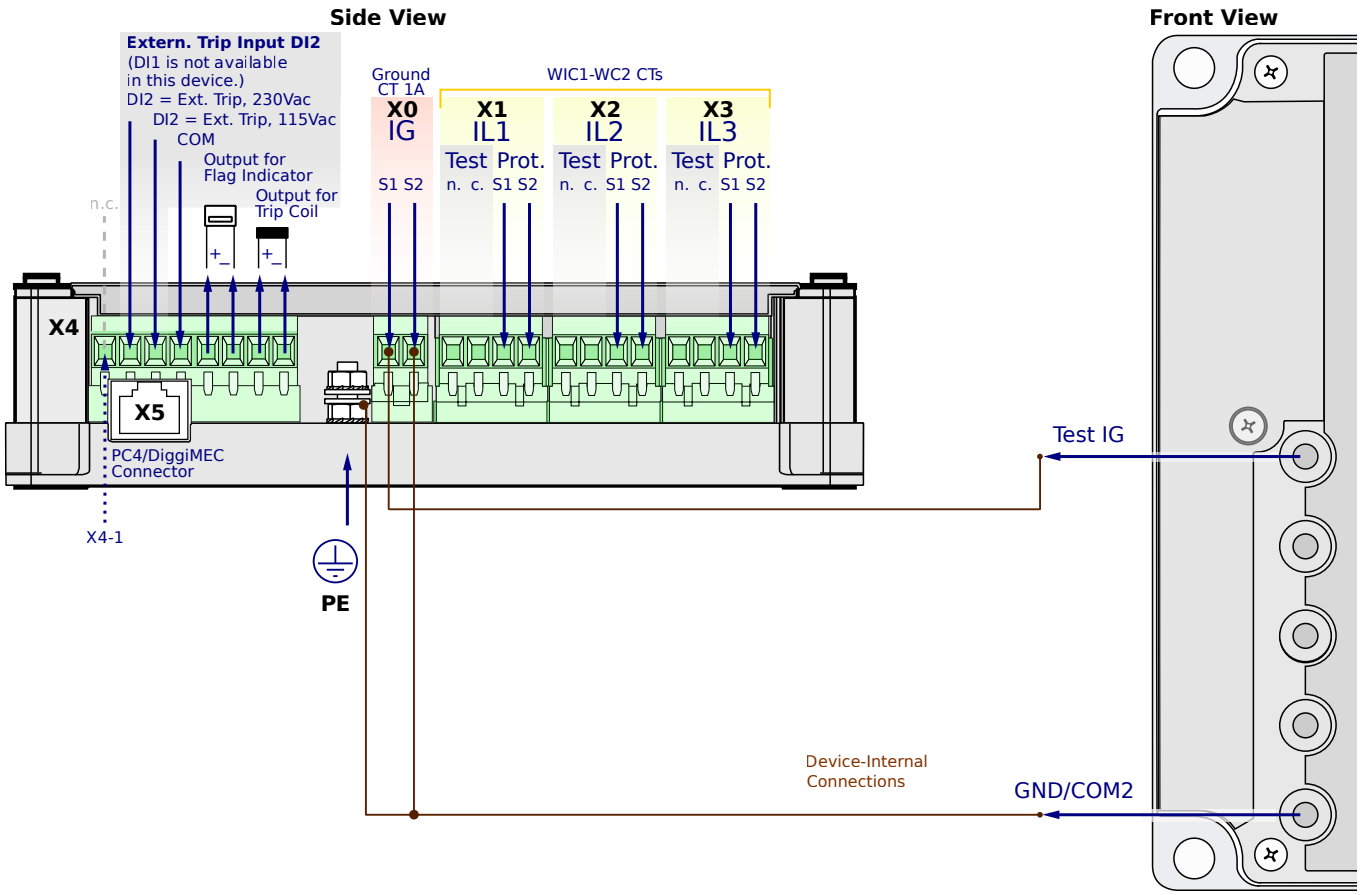


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2SAH

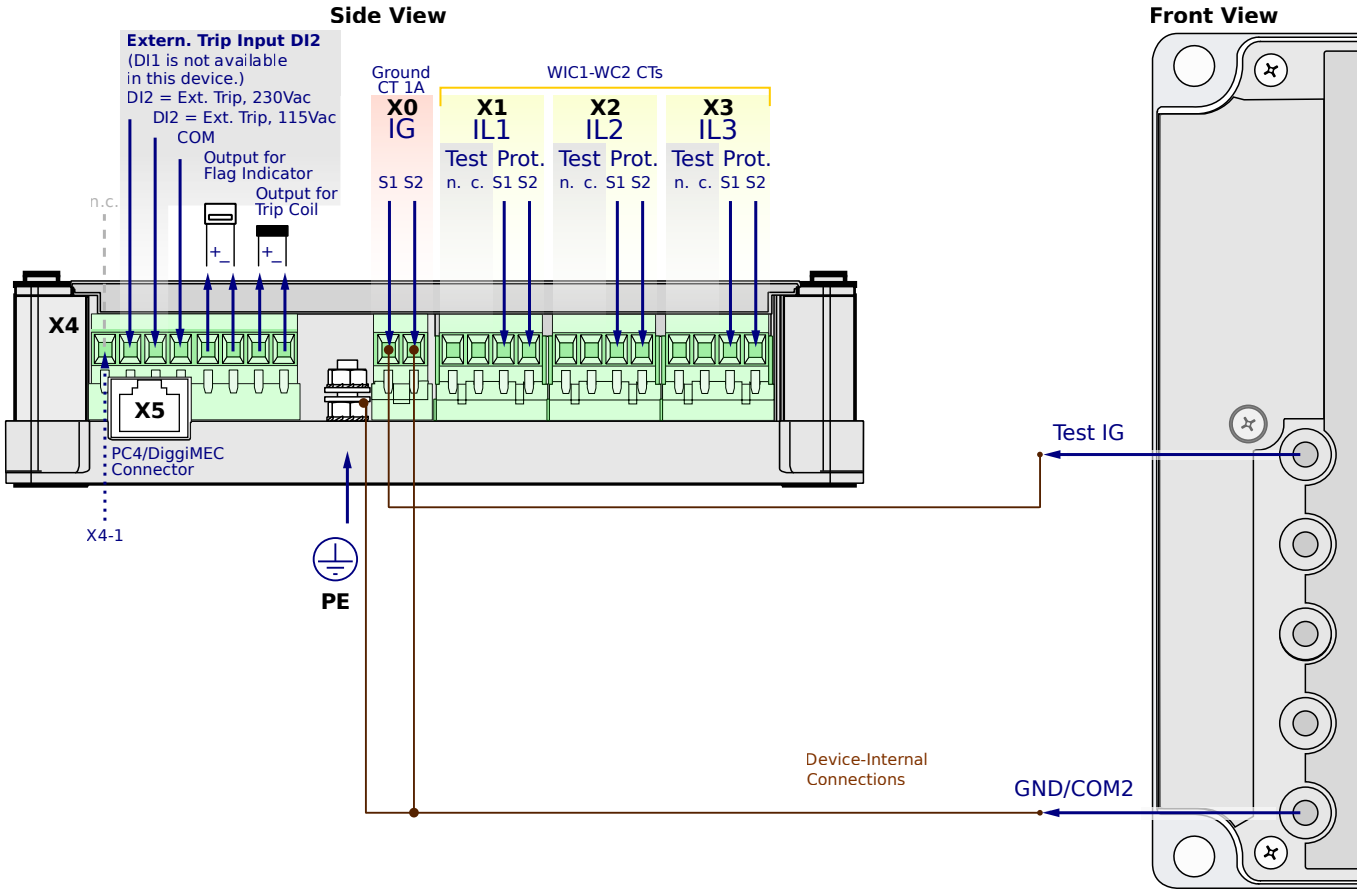


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2AA0

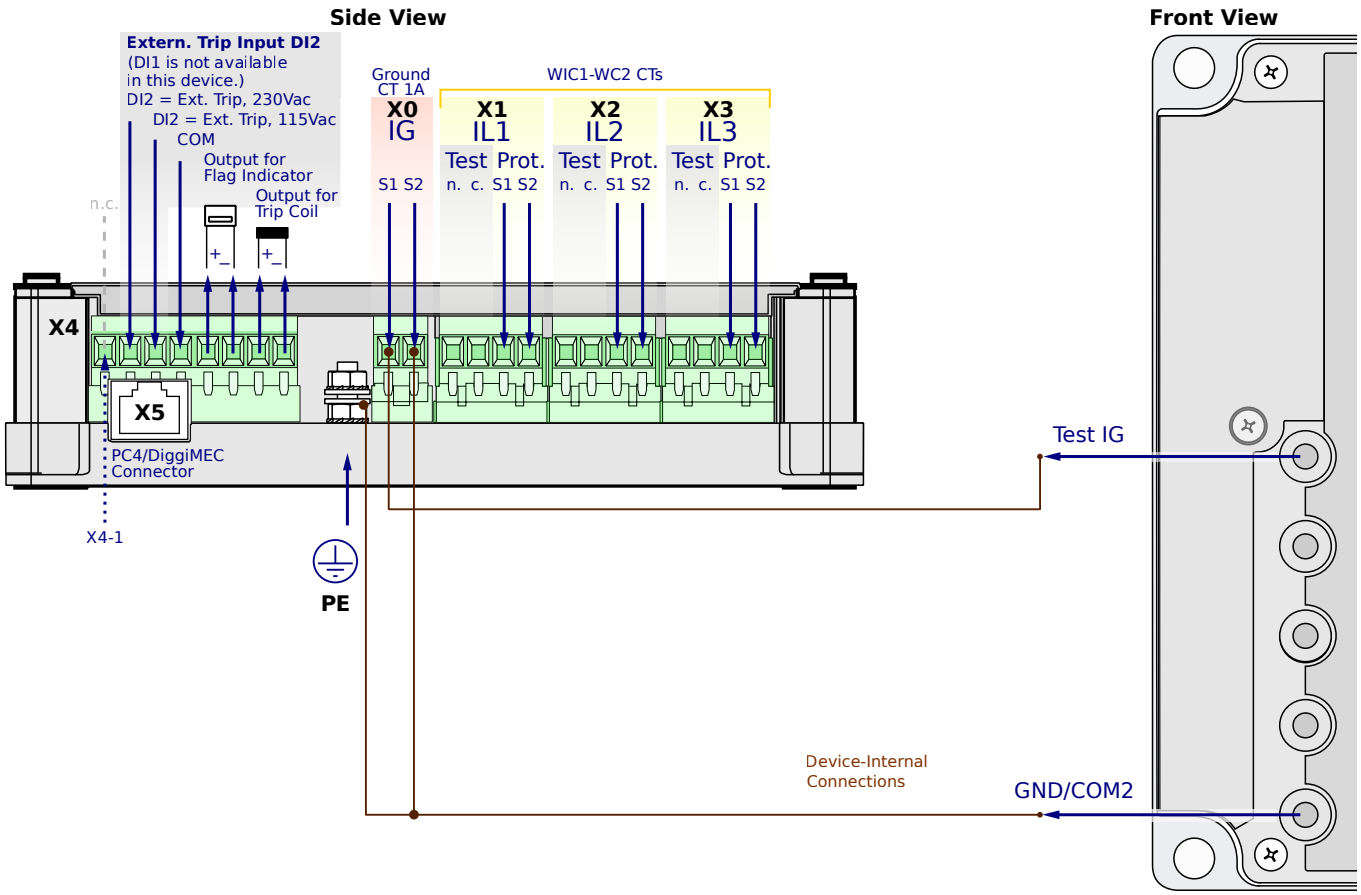


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2AAH

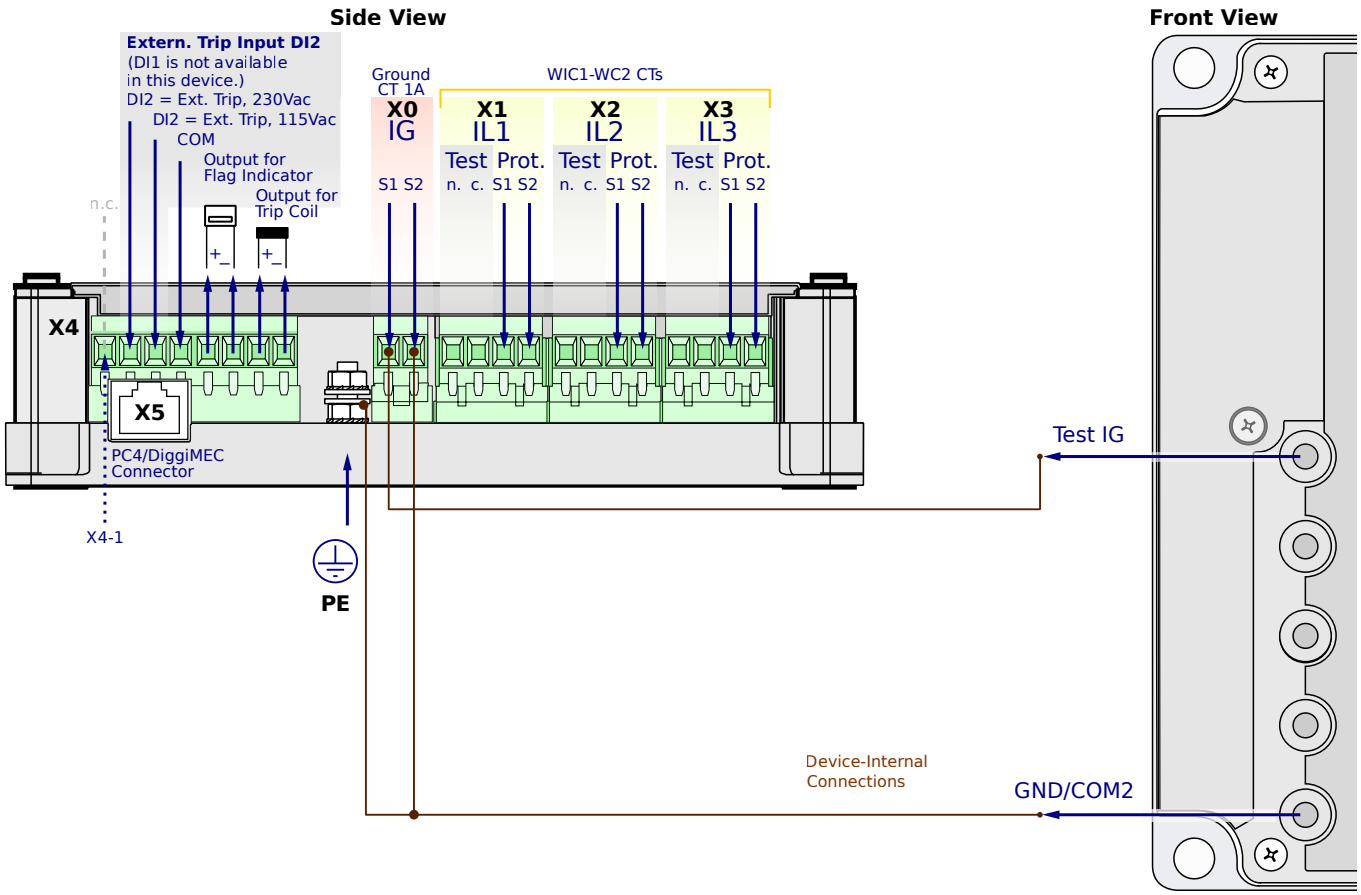


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2PA0

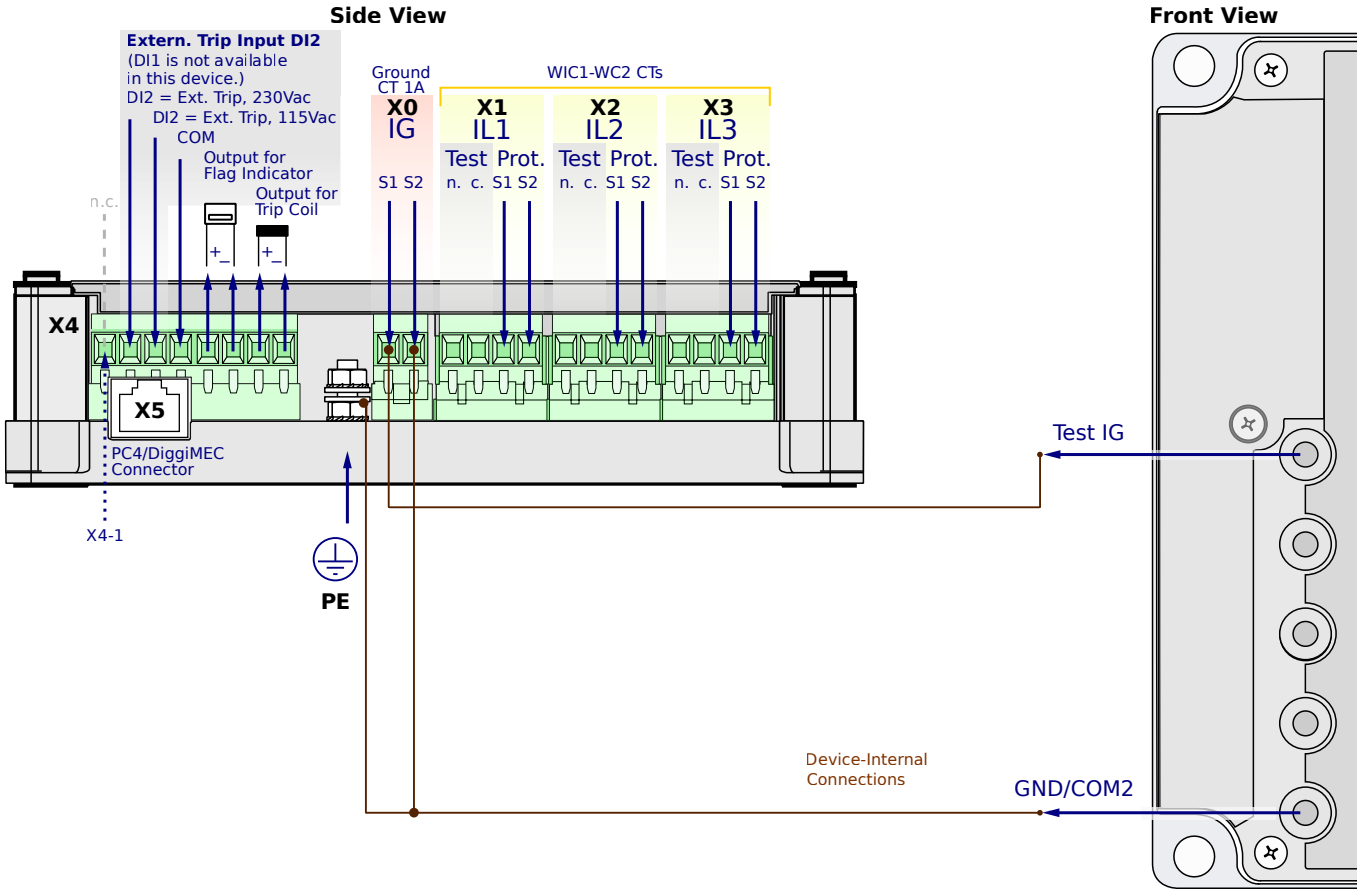


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NF2PAH

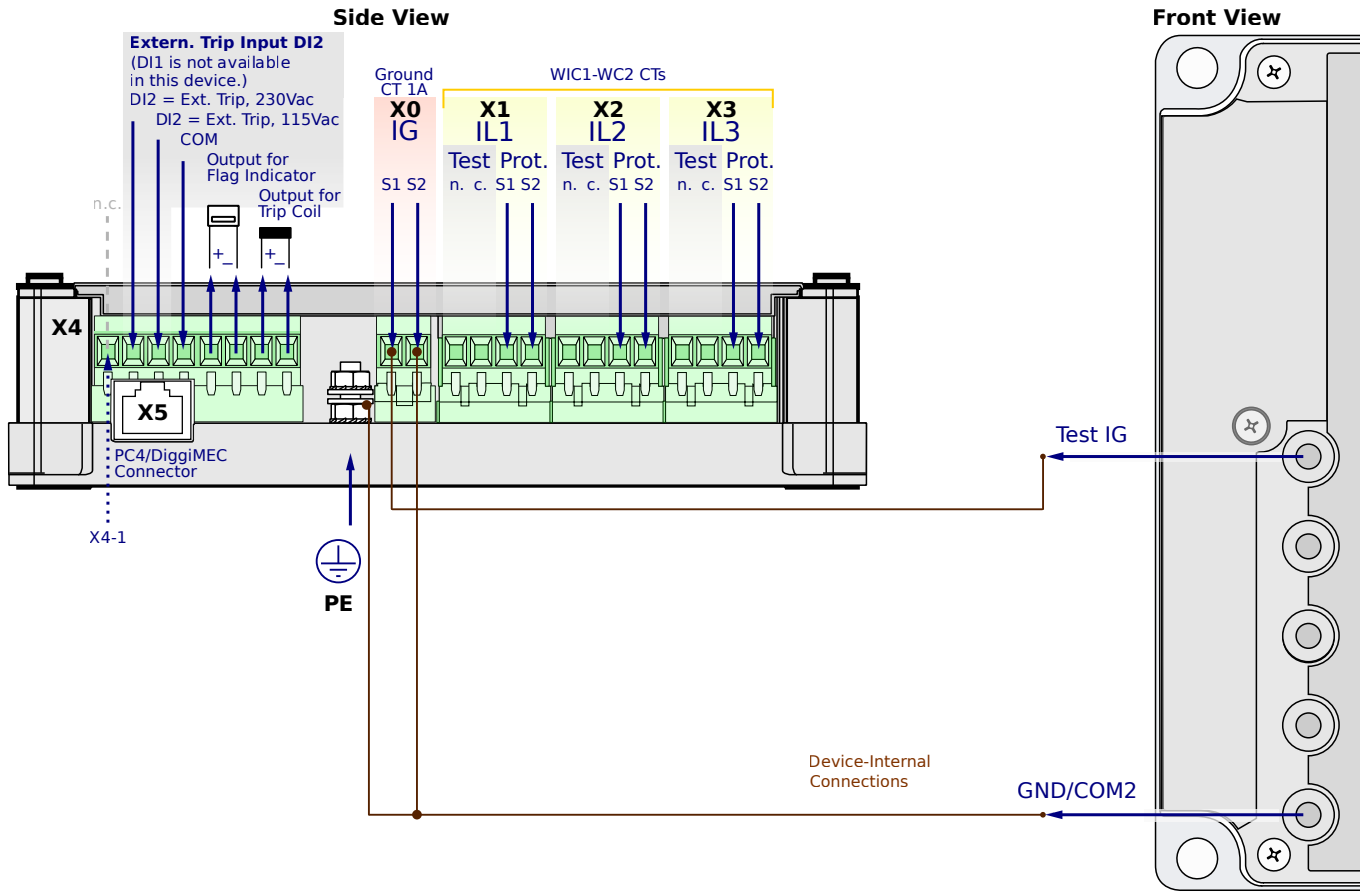


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0SA0

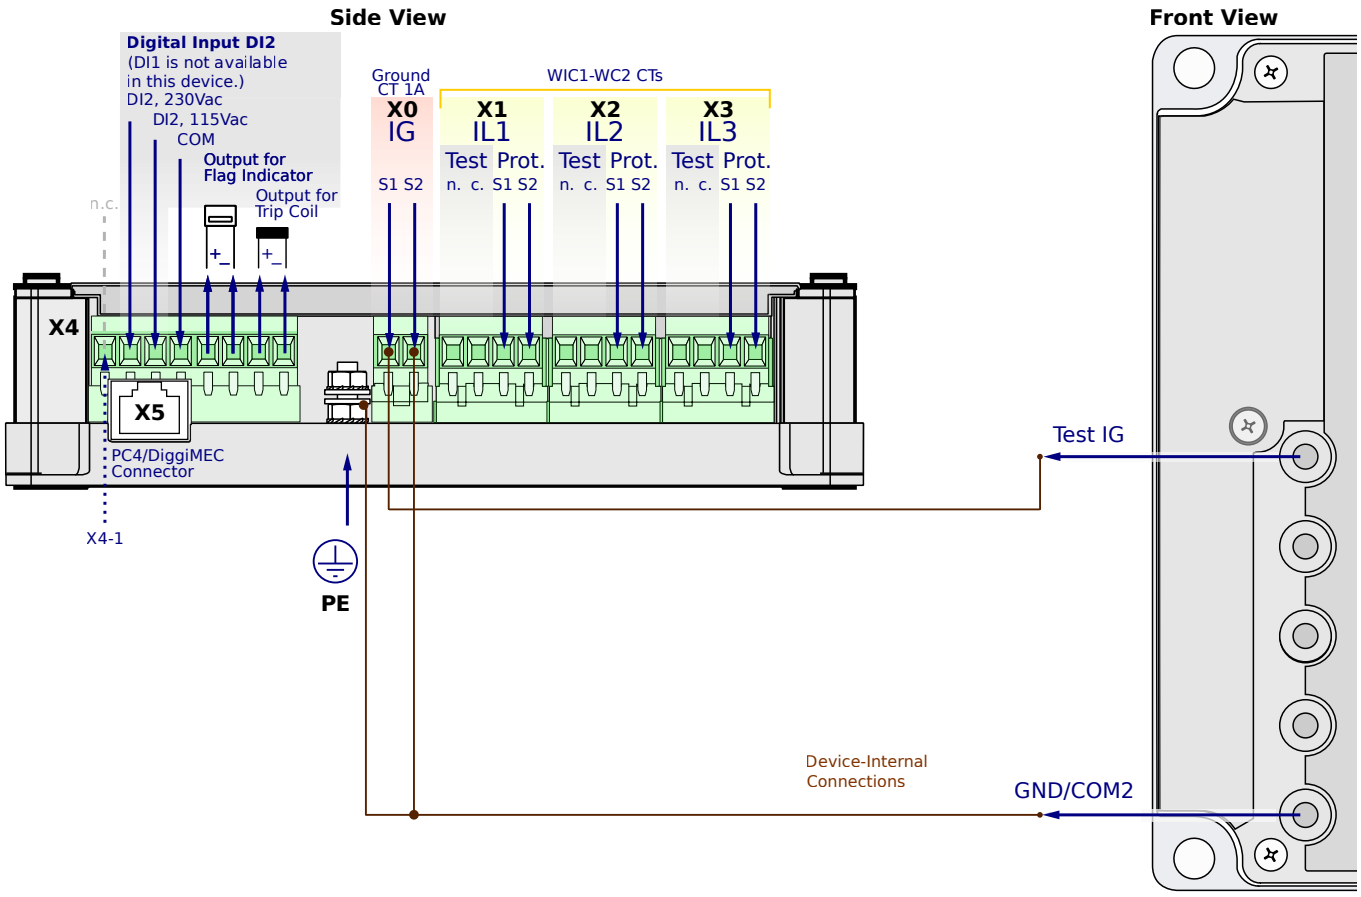


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0SAH

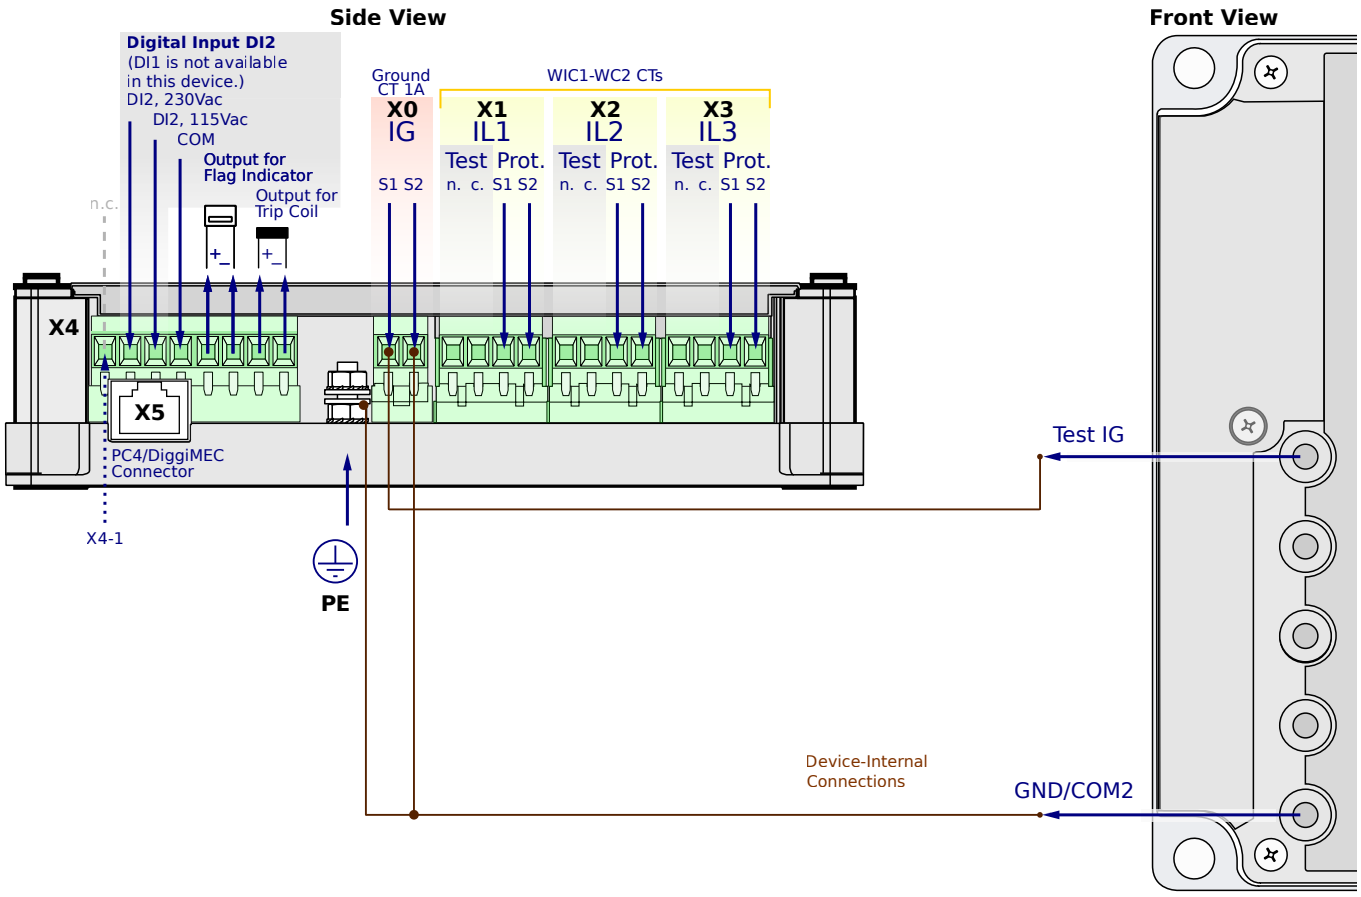


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0AA0

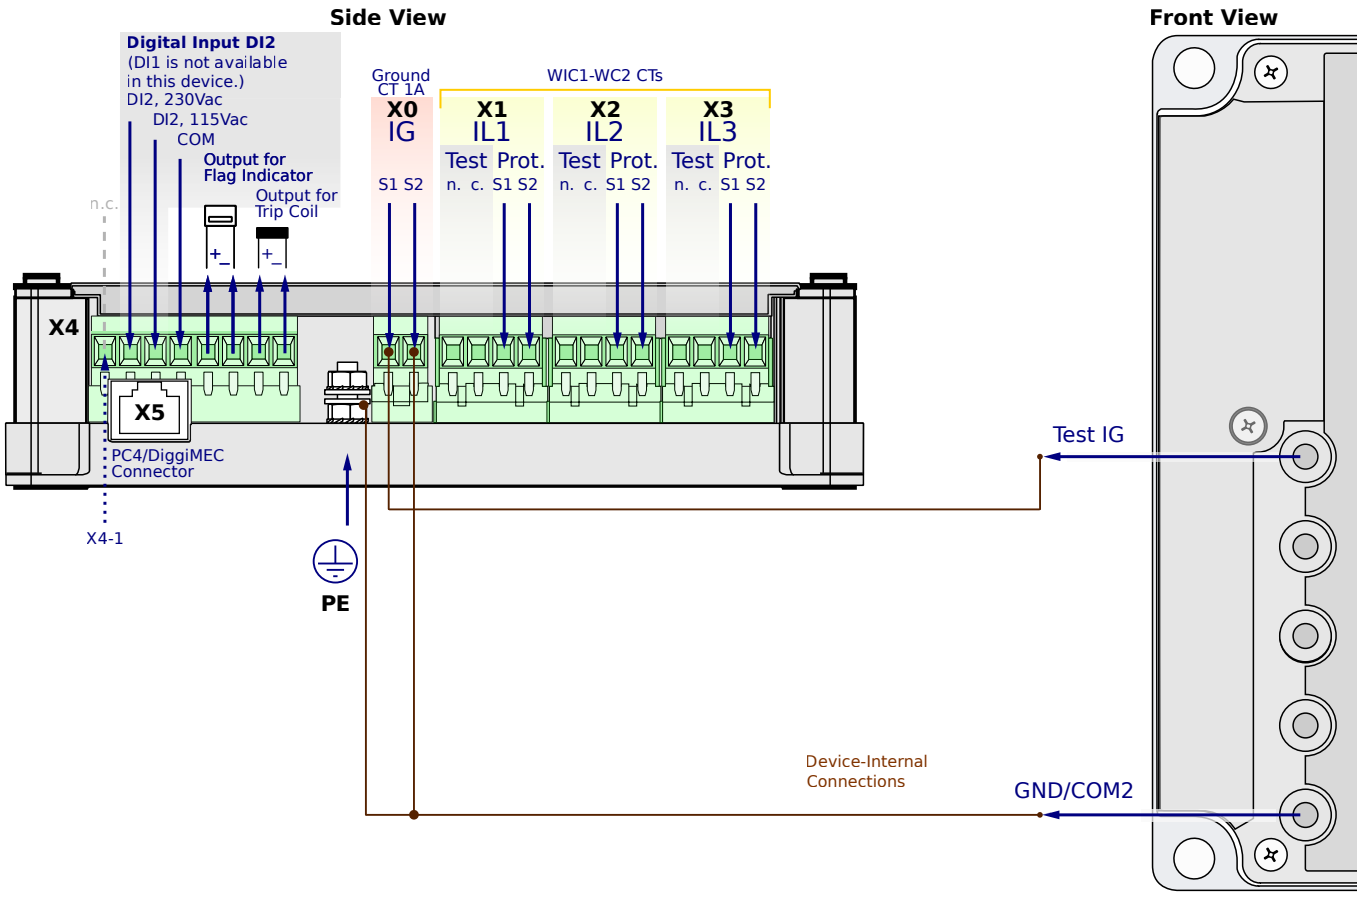


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0AAH

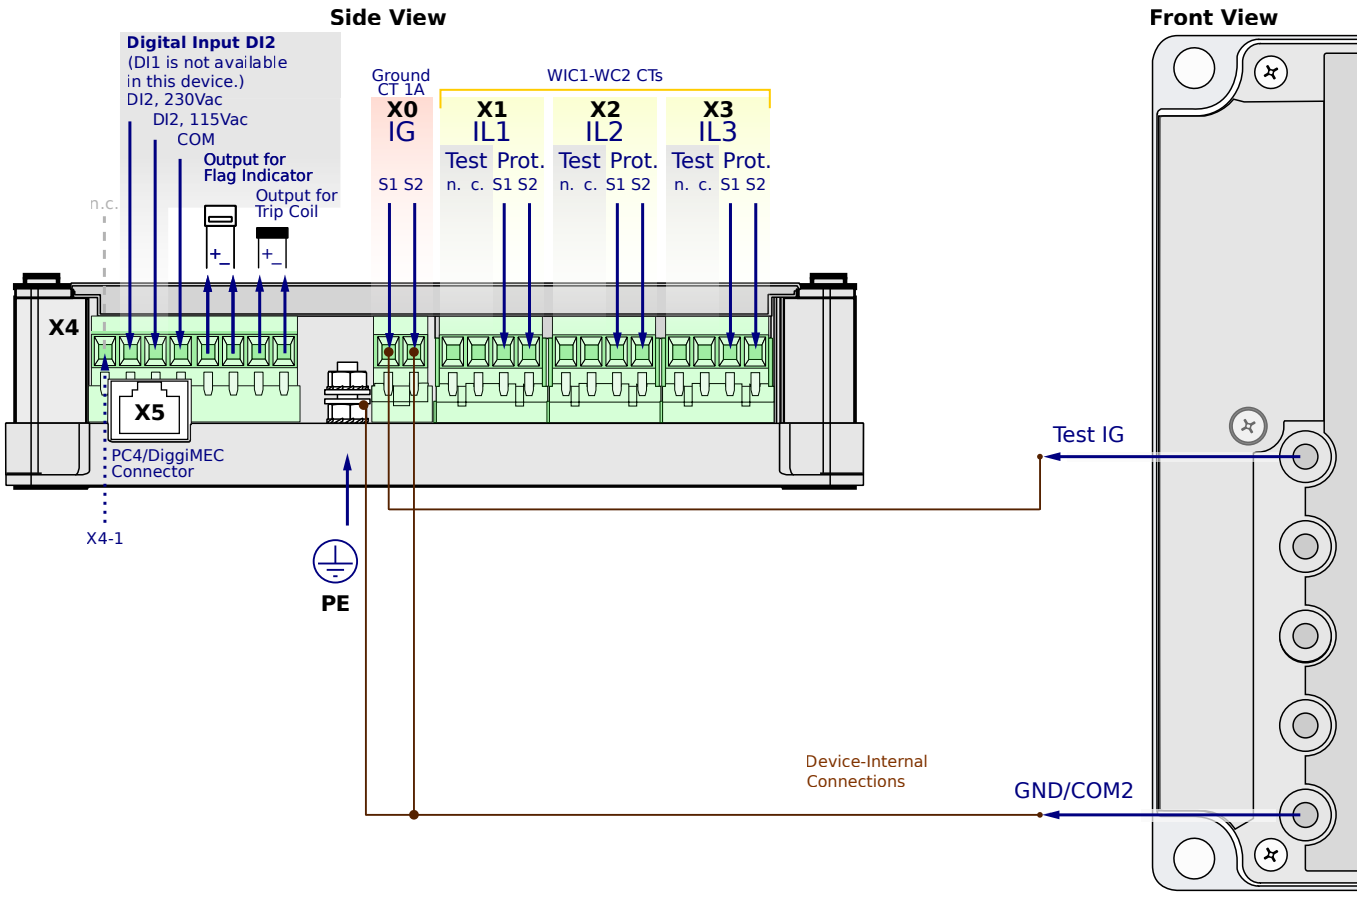


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0PA0

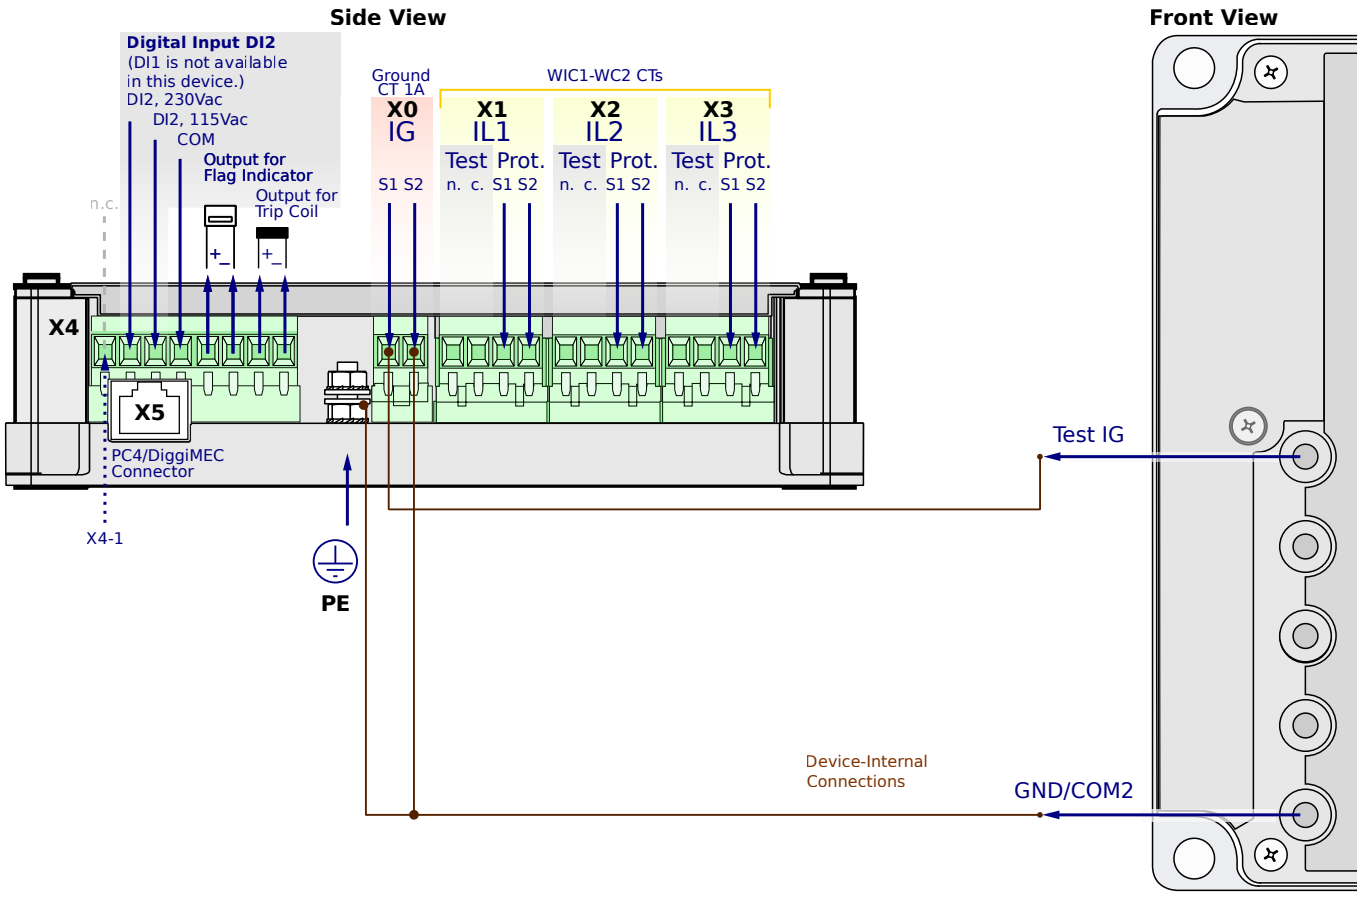


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC0PAH

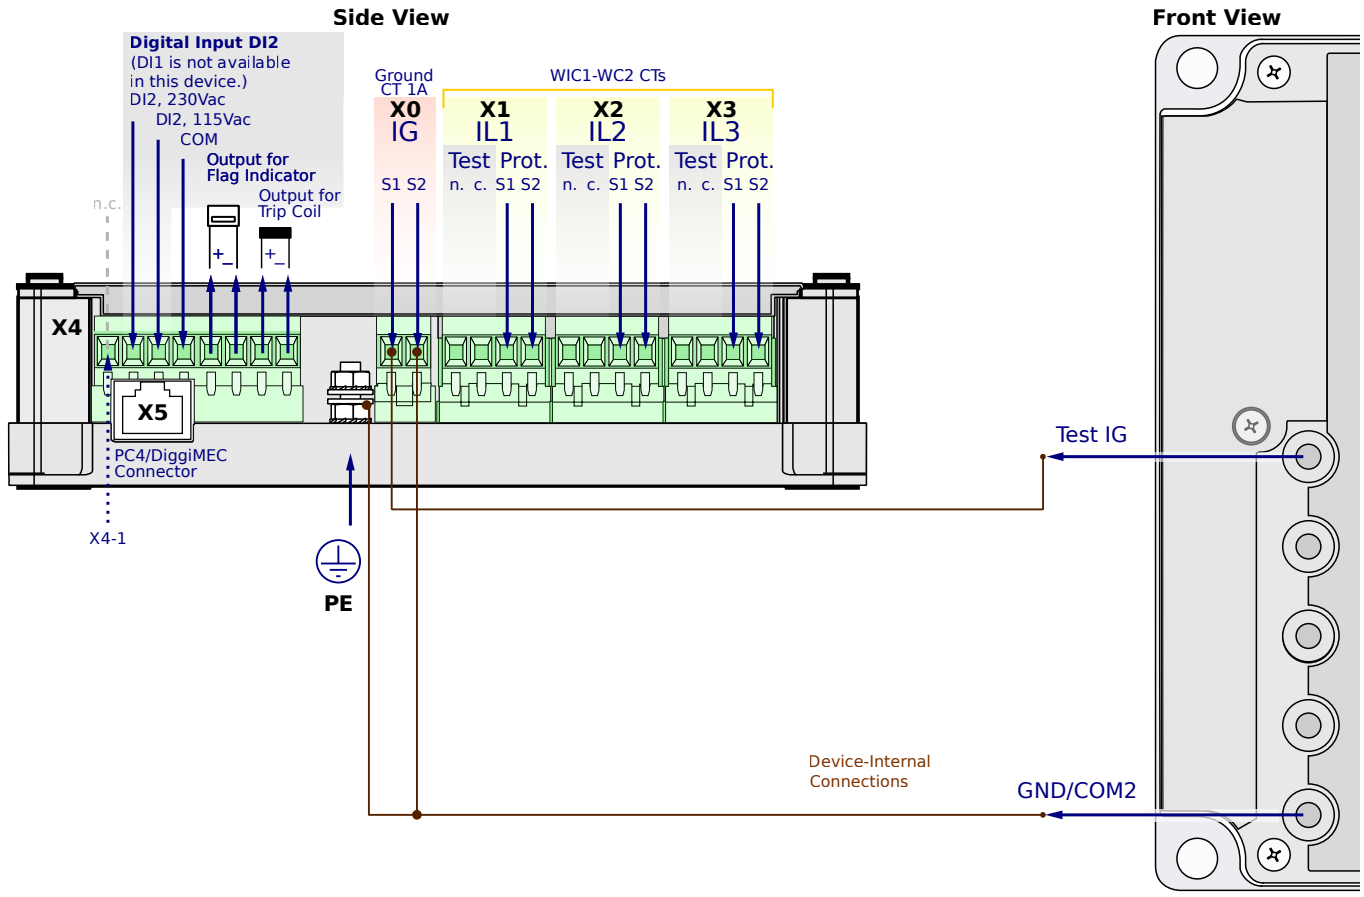


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1SA0

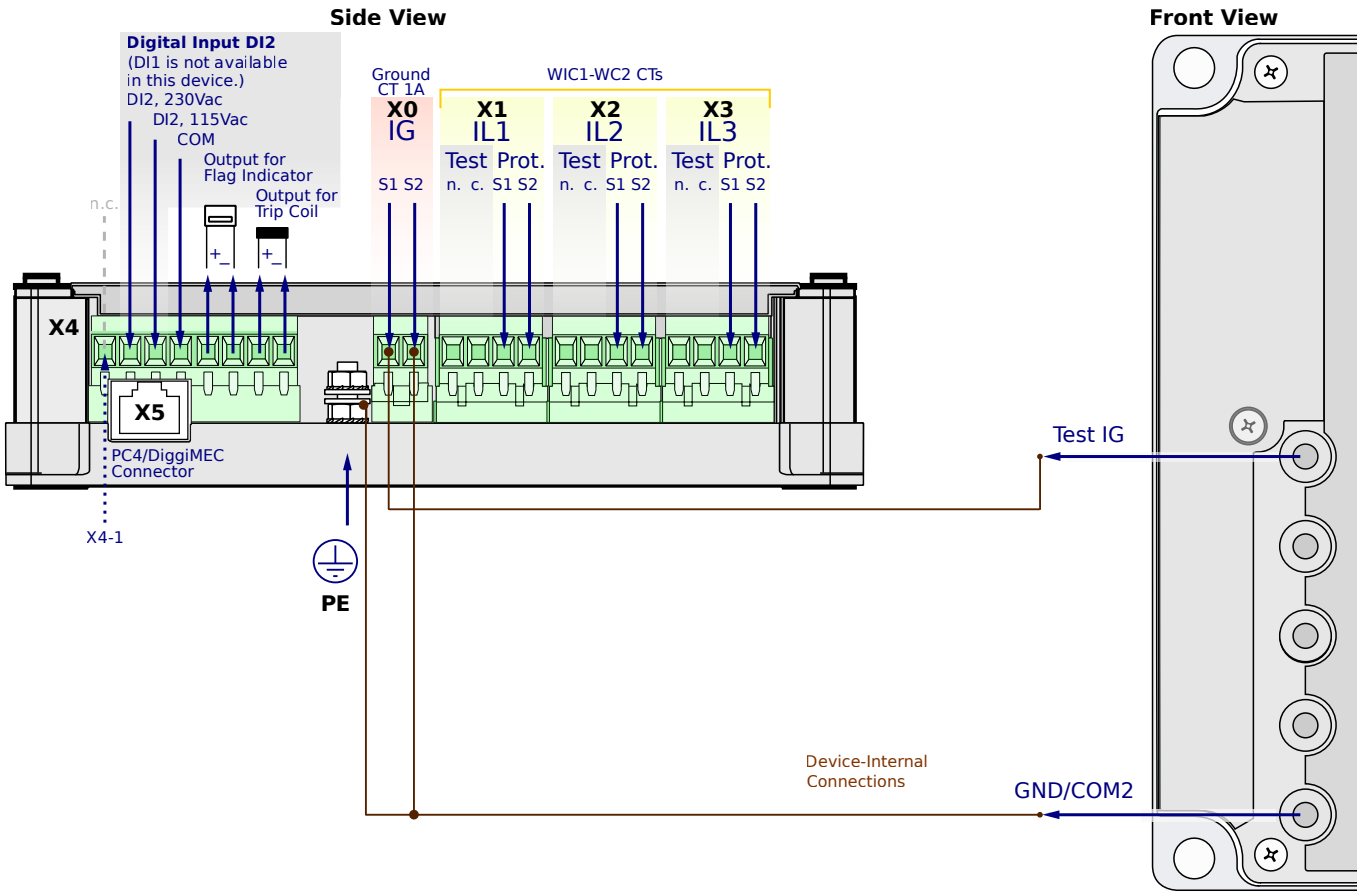


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1SAH

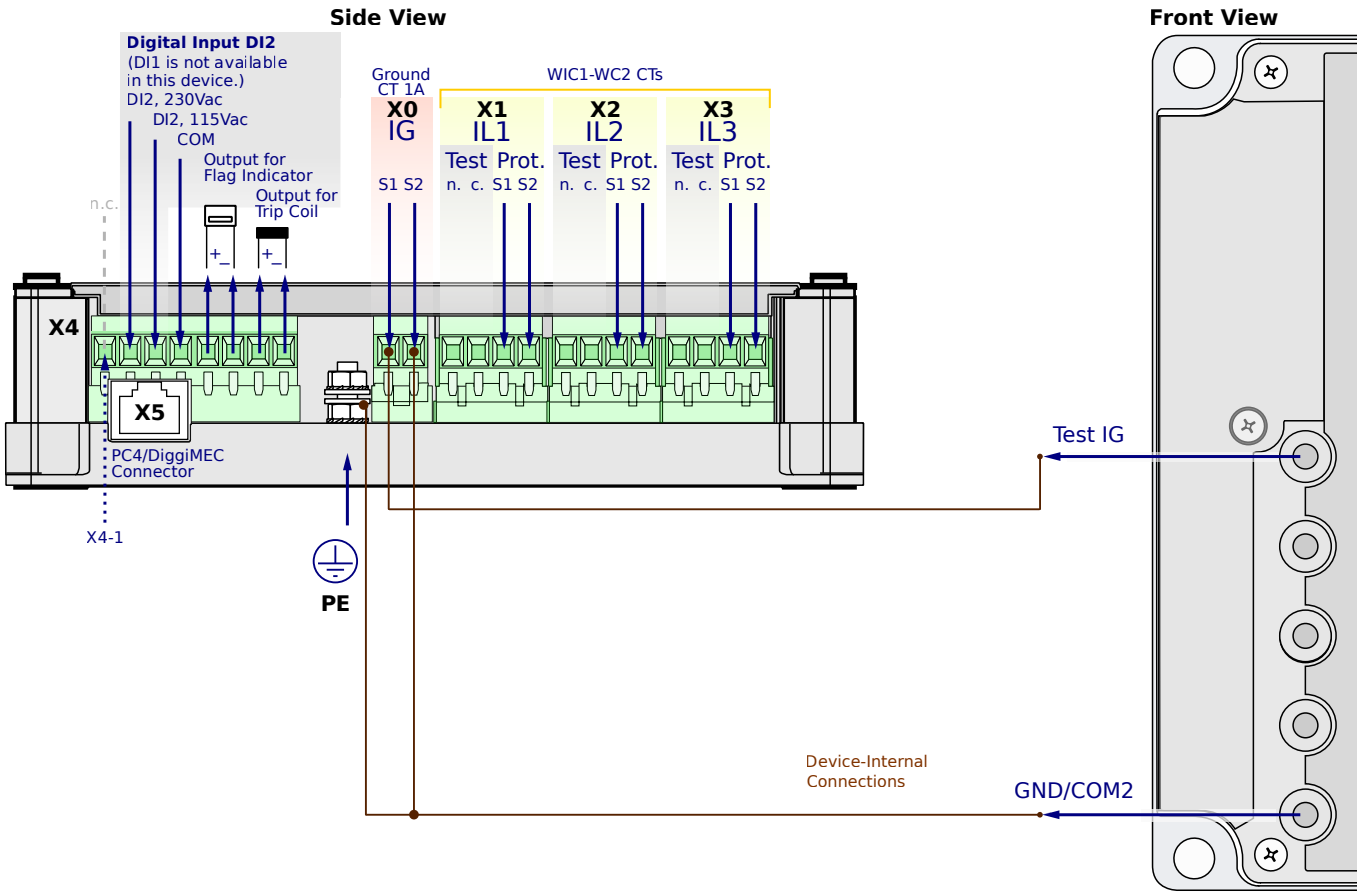


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- – Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1AA0

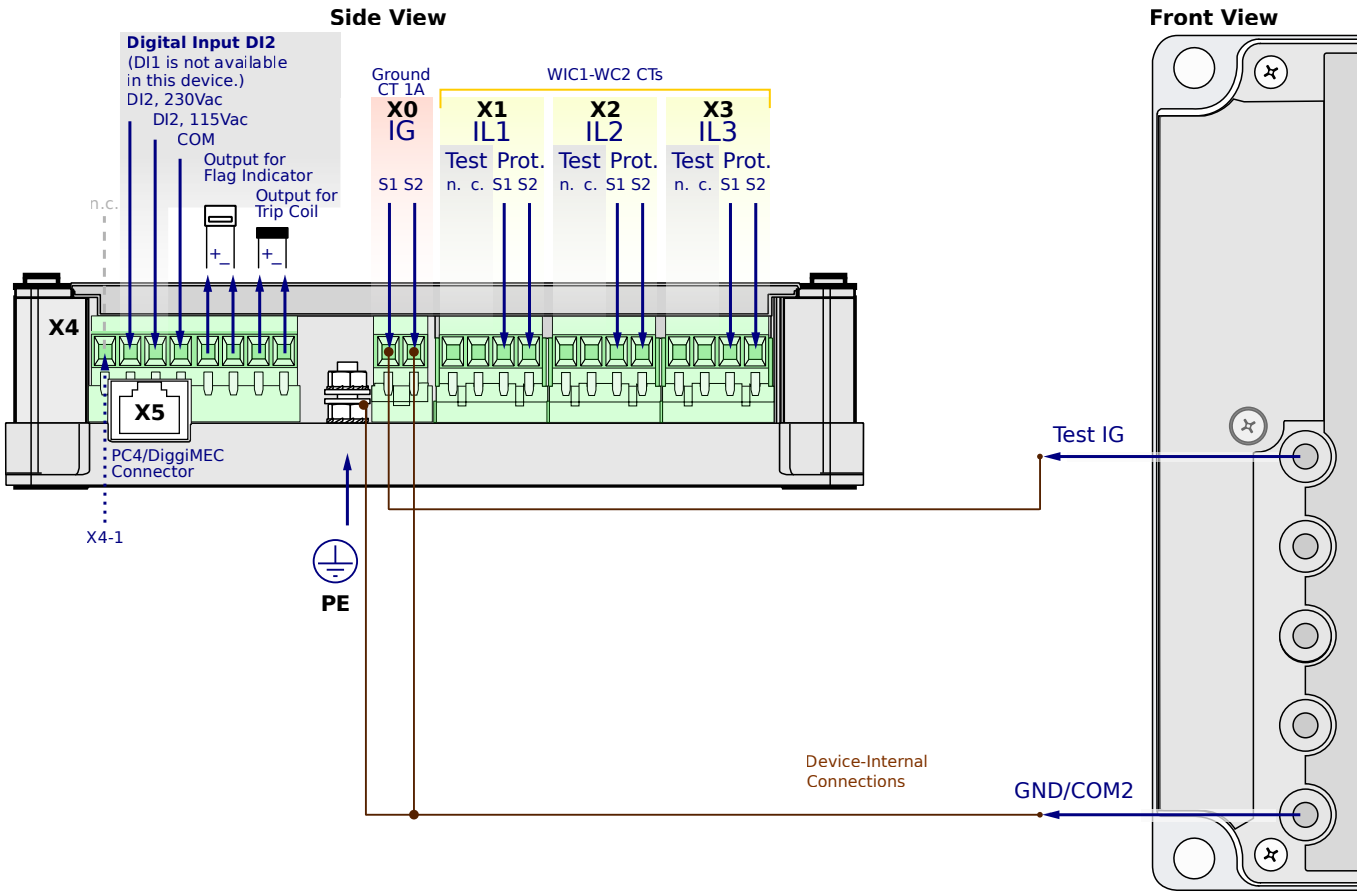


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1AAH

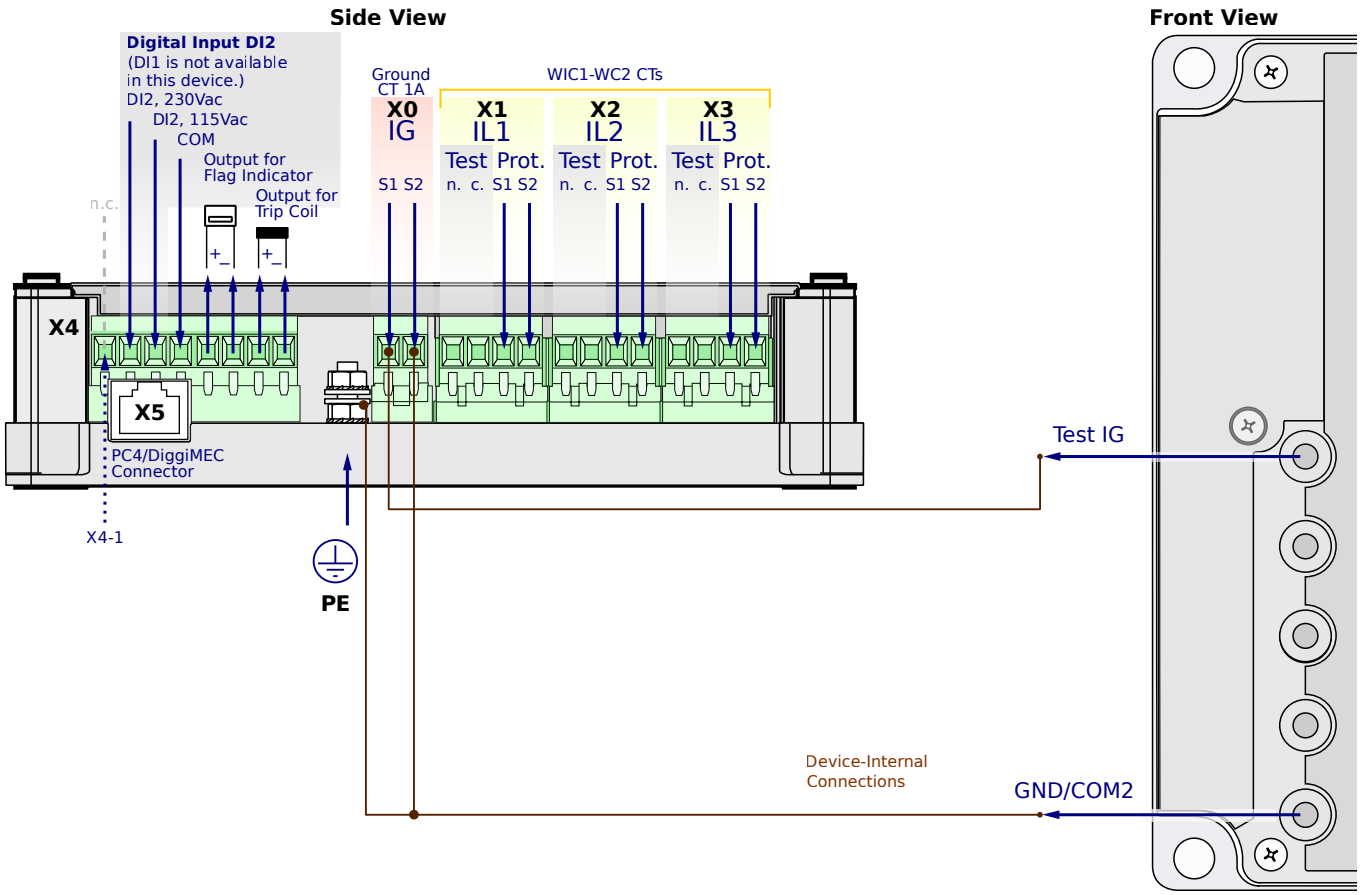


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1PA0

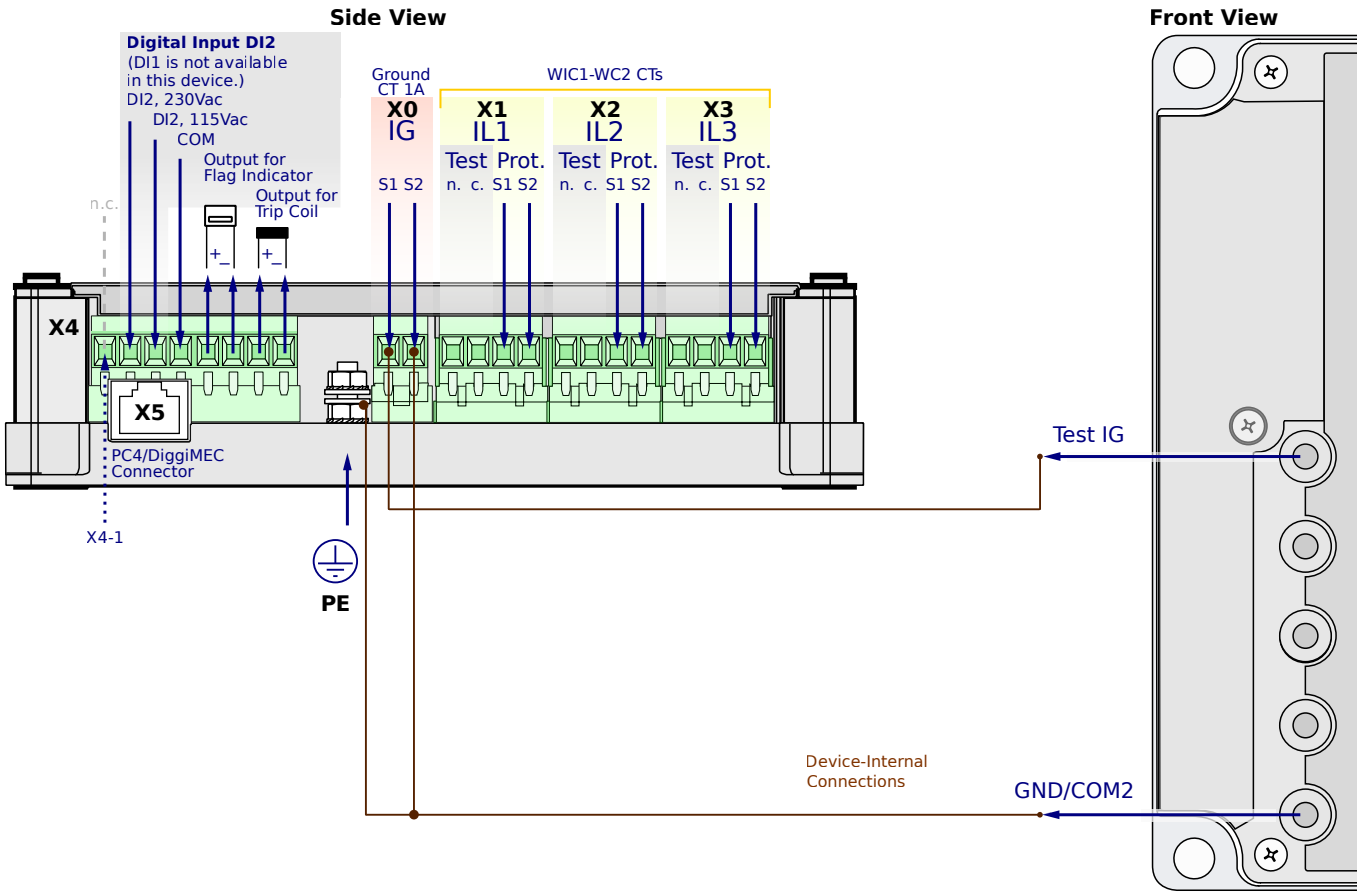


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC1PAH

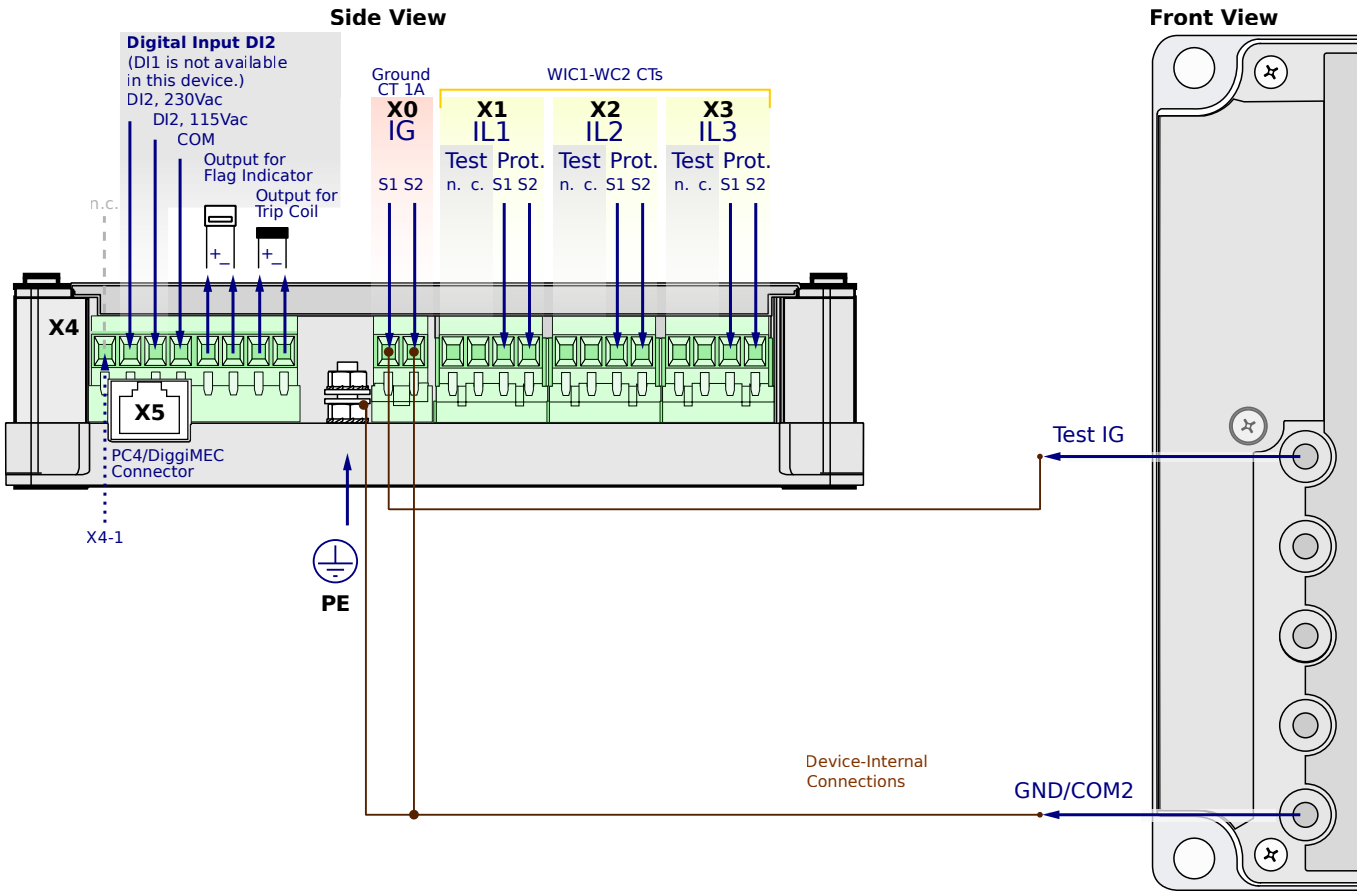


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2SA0

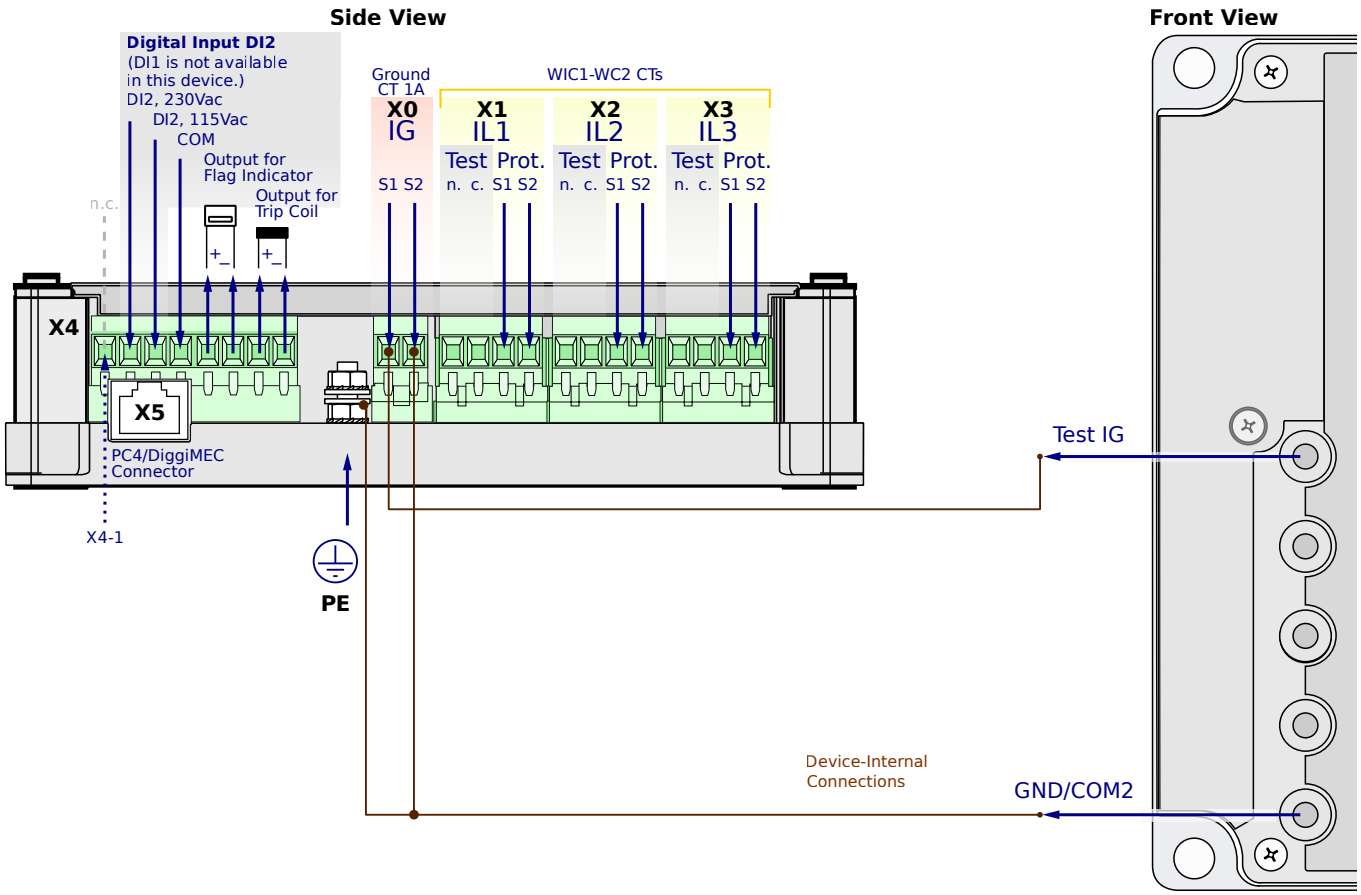


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2SAH

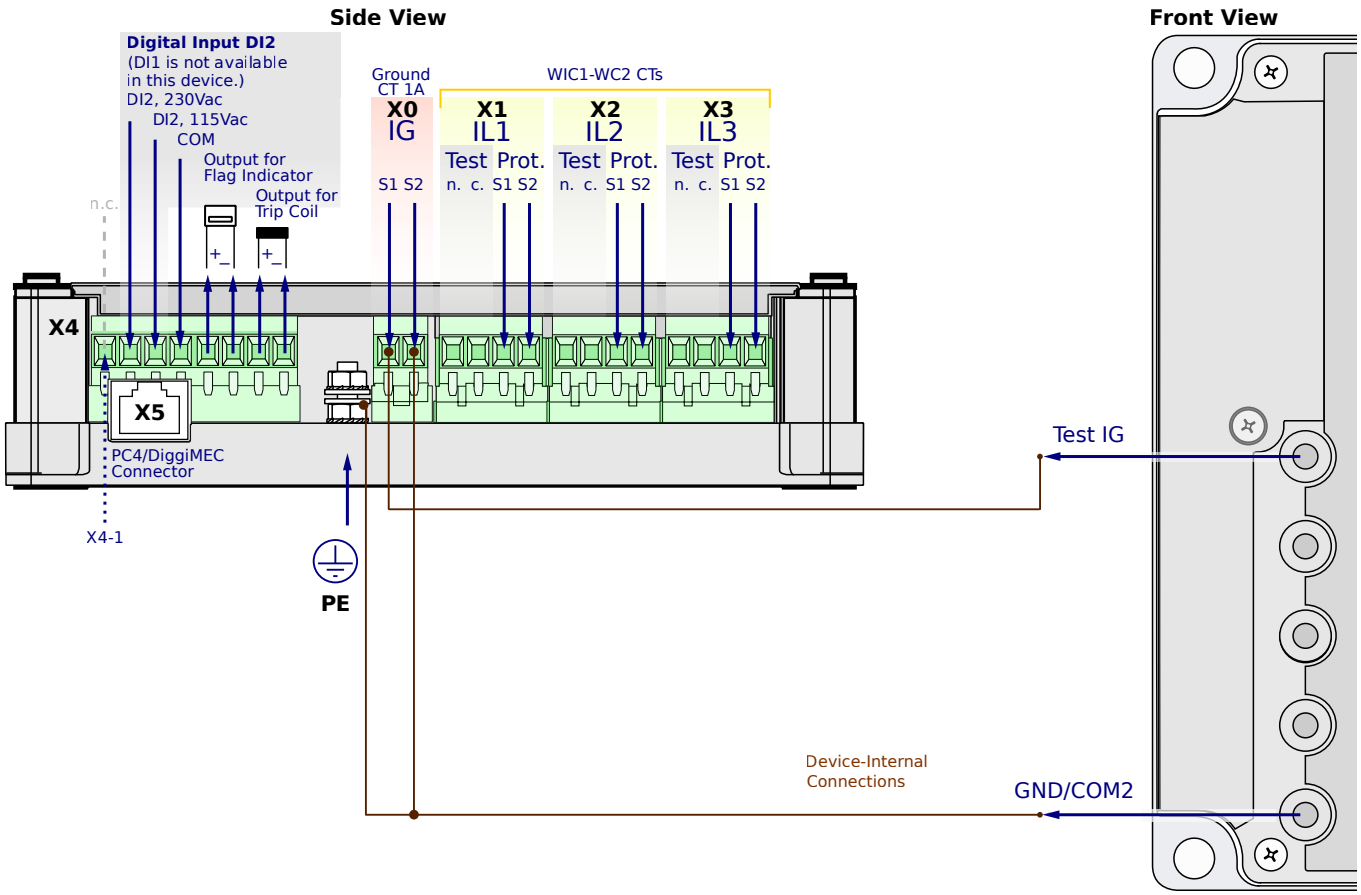


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2AA0

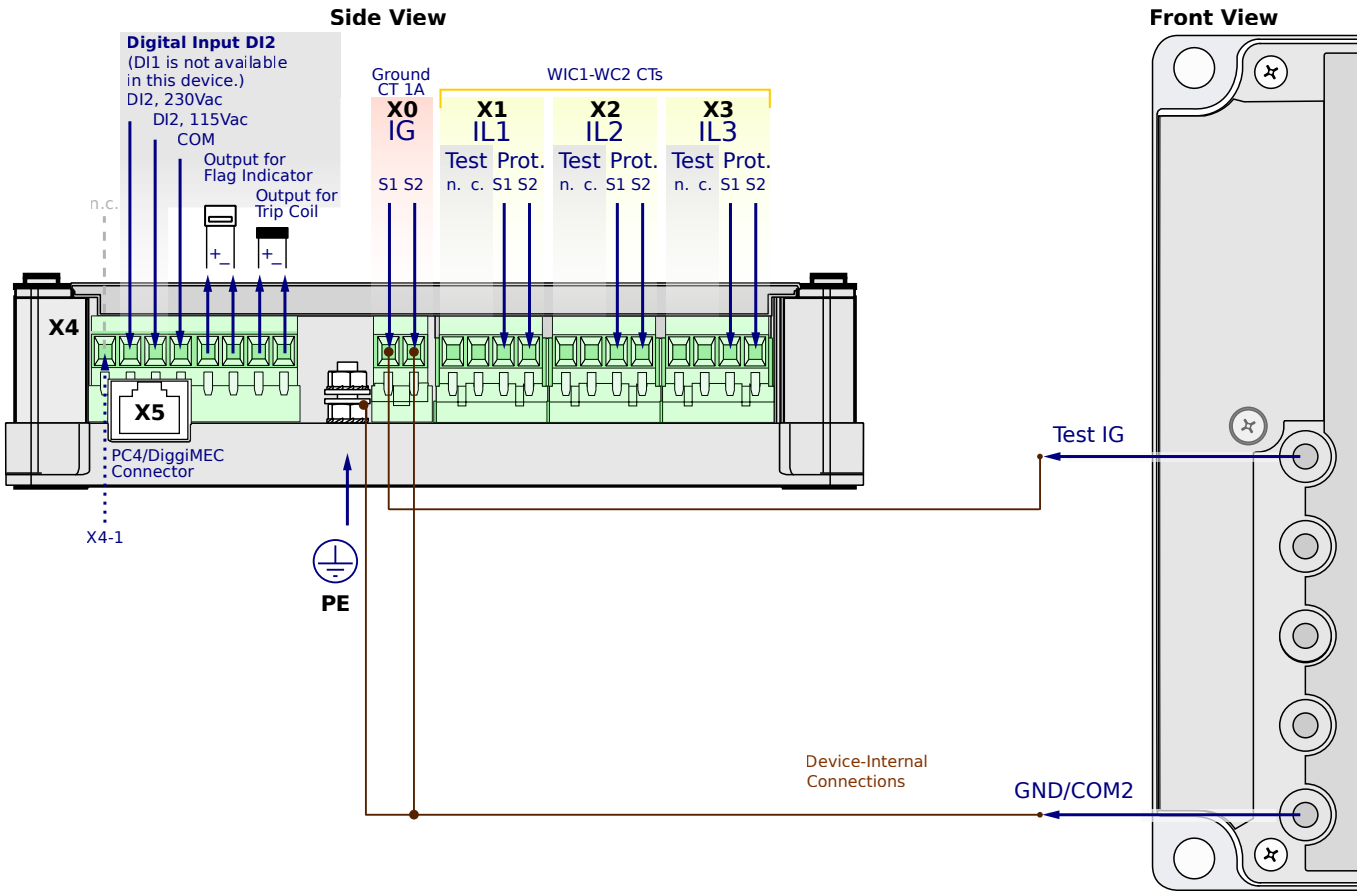


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2AAH

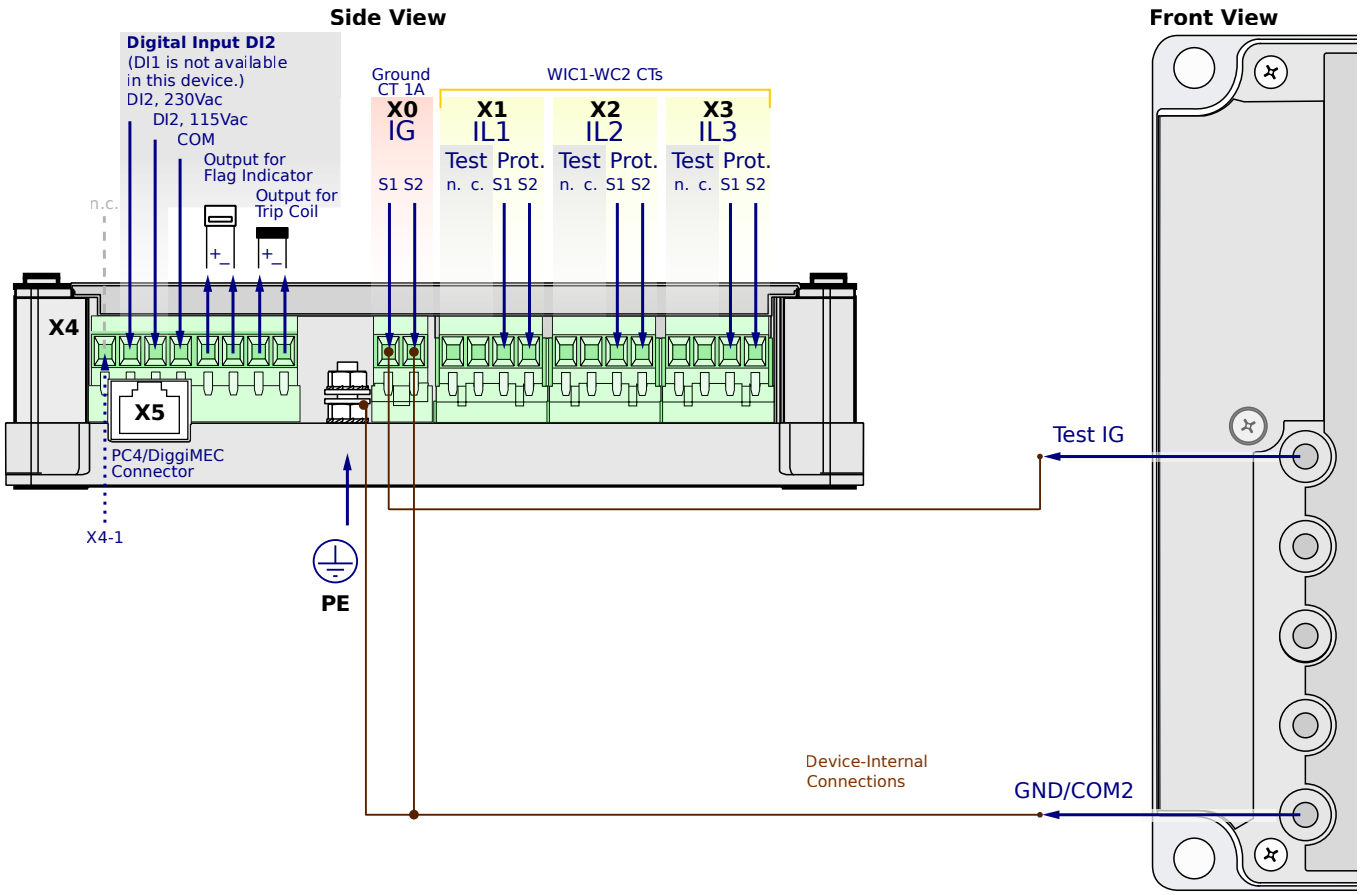


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2PA0

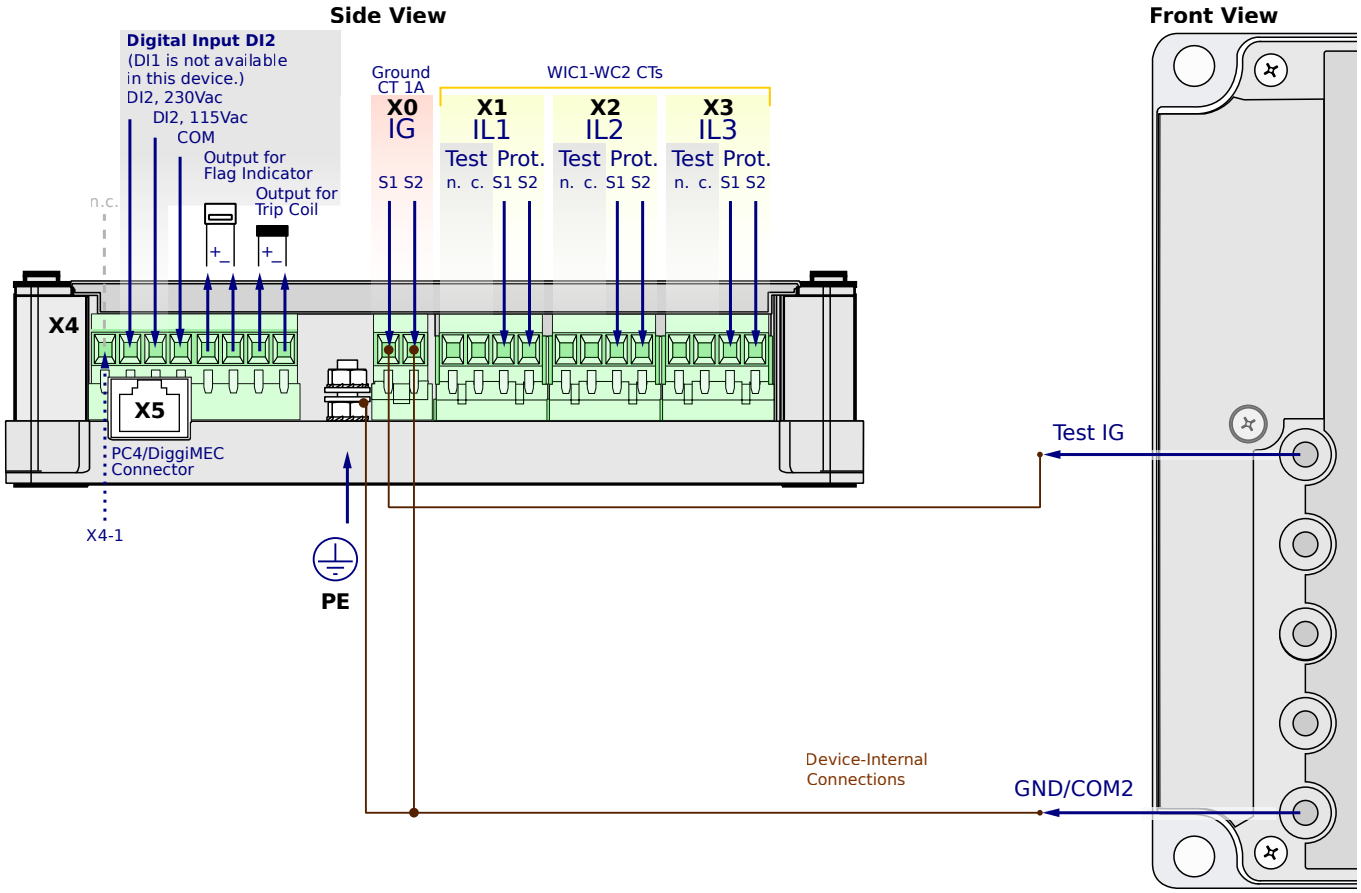


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6NC2PAH

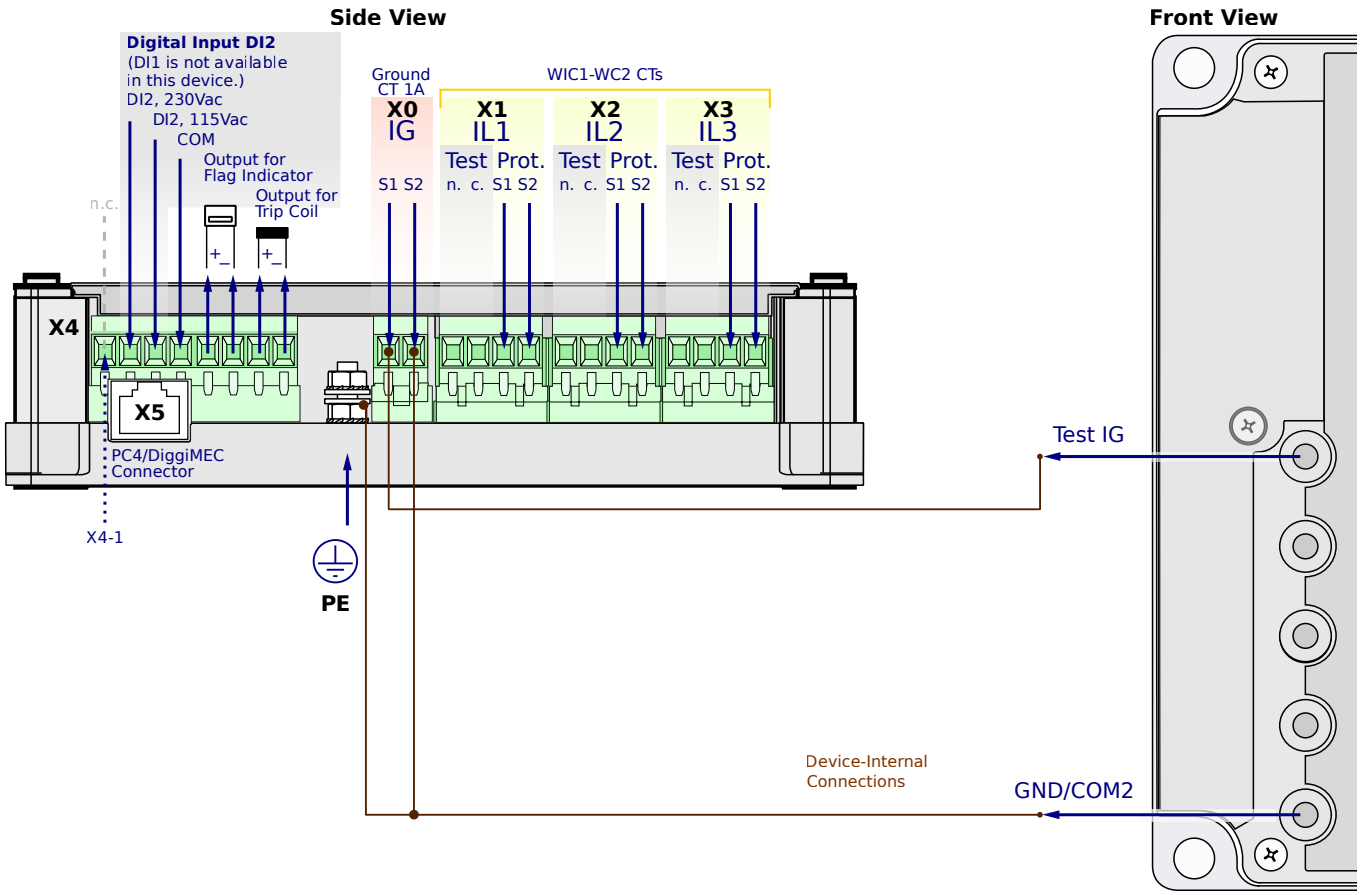


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1SA0

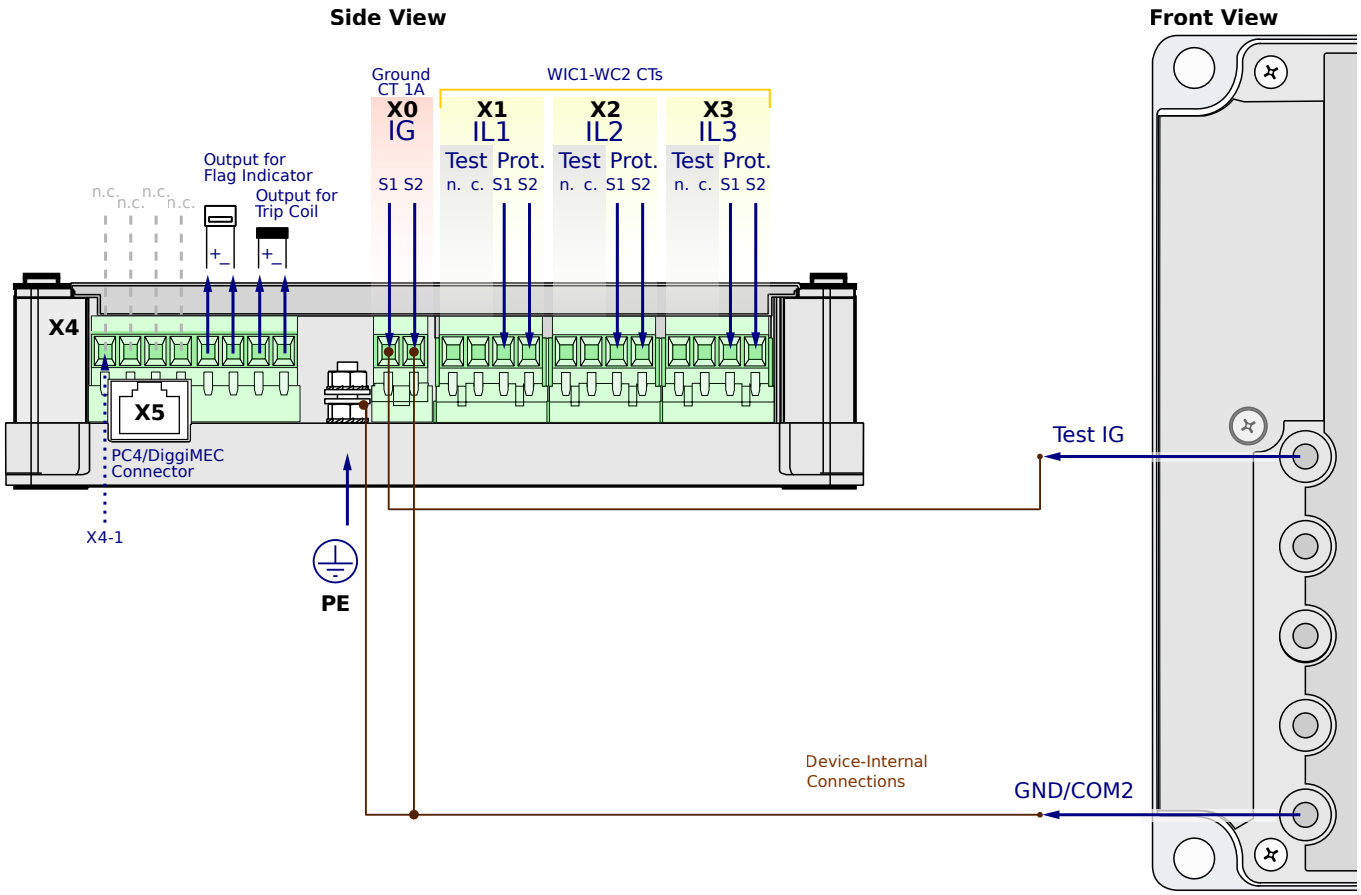


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1SAH

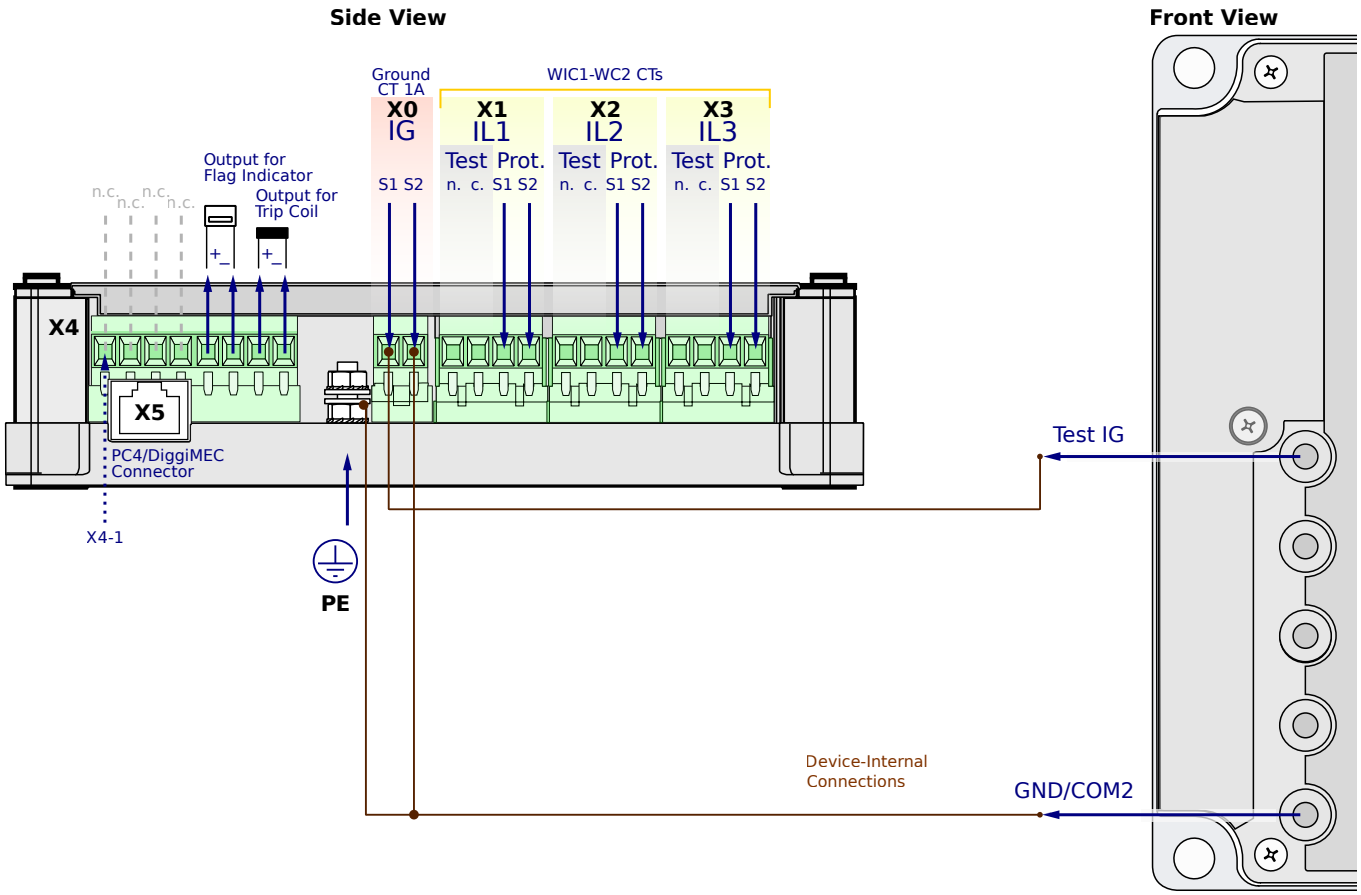


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1AA0

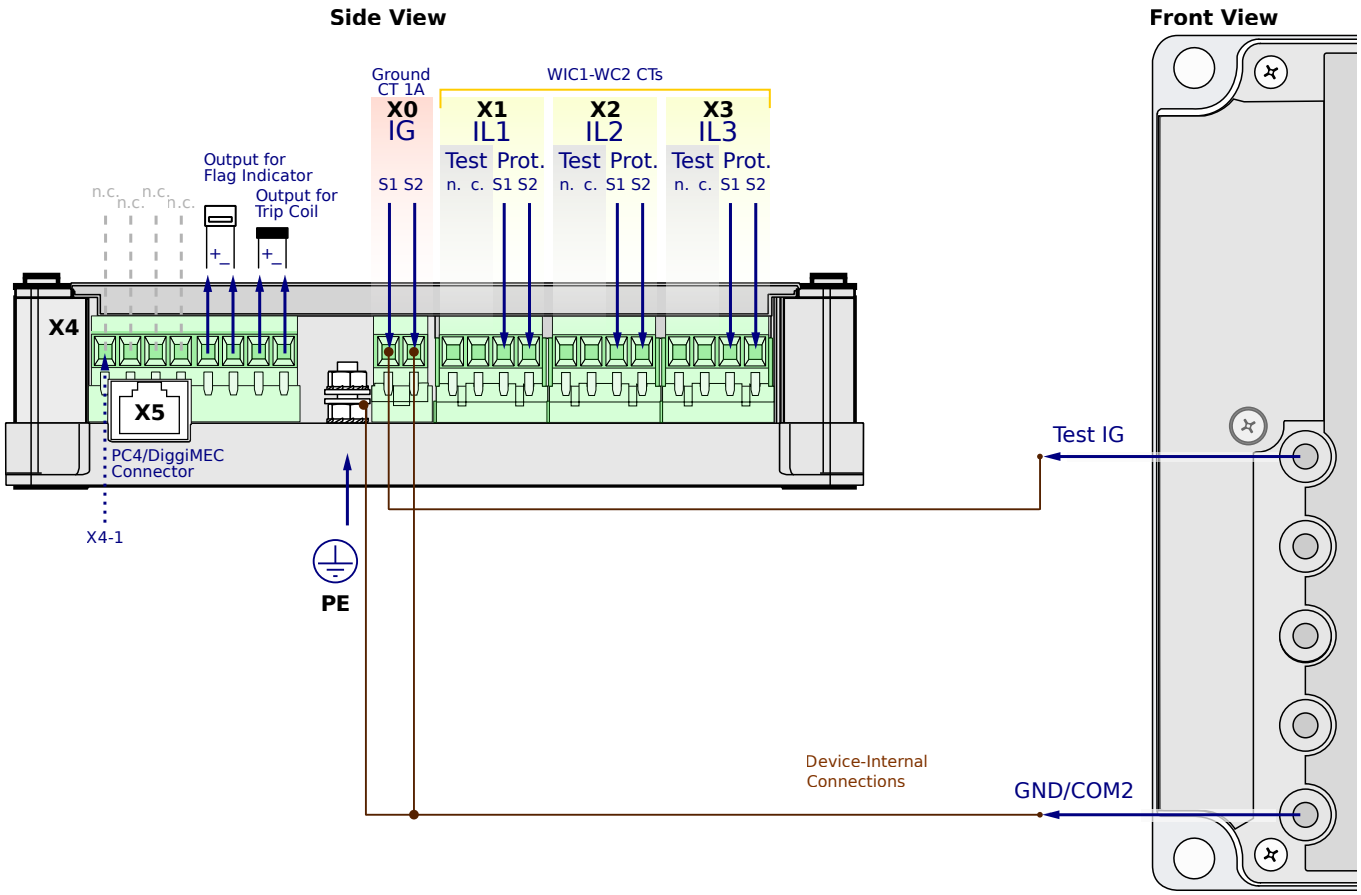


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1AAH

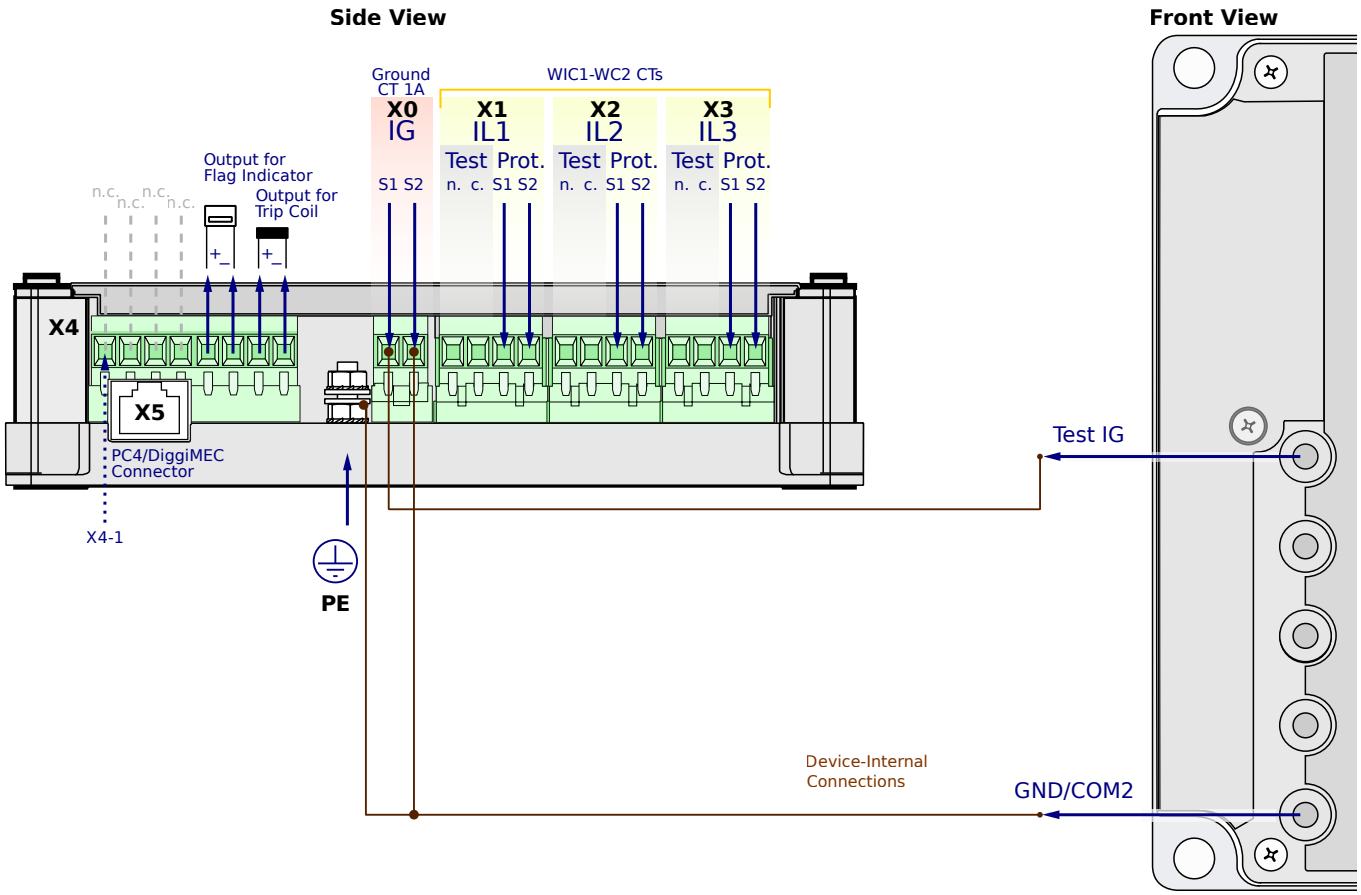


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1PA0

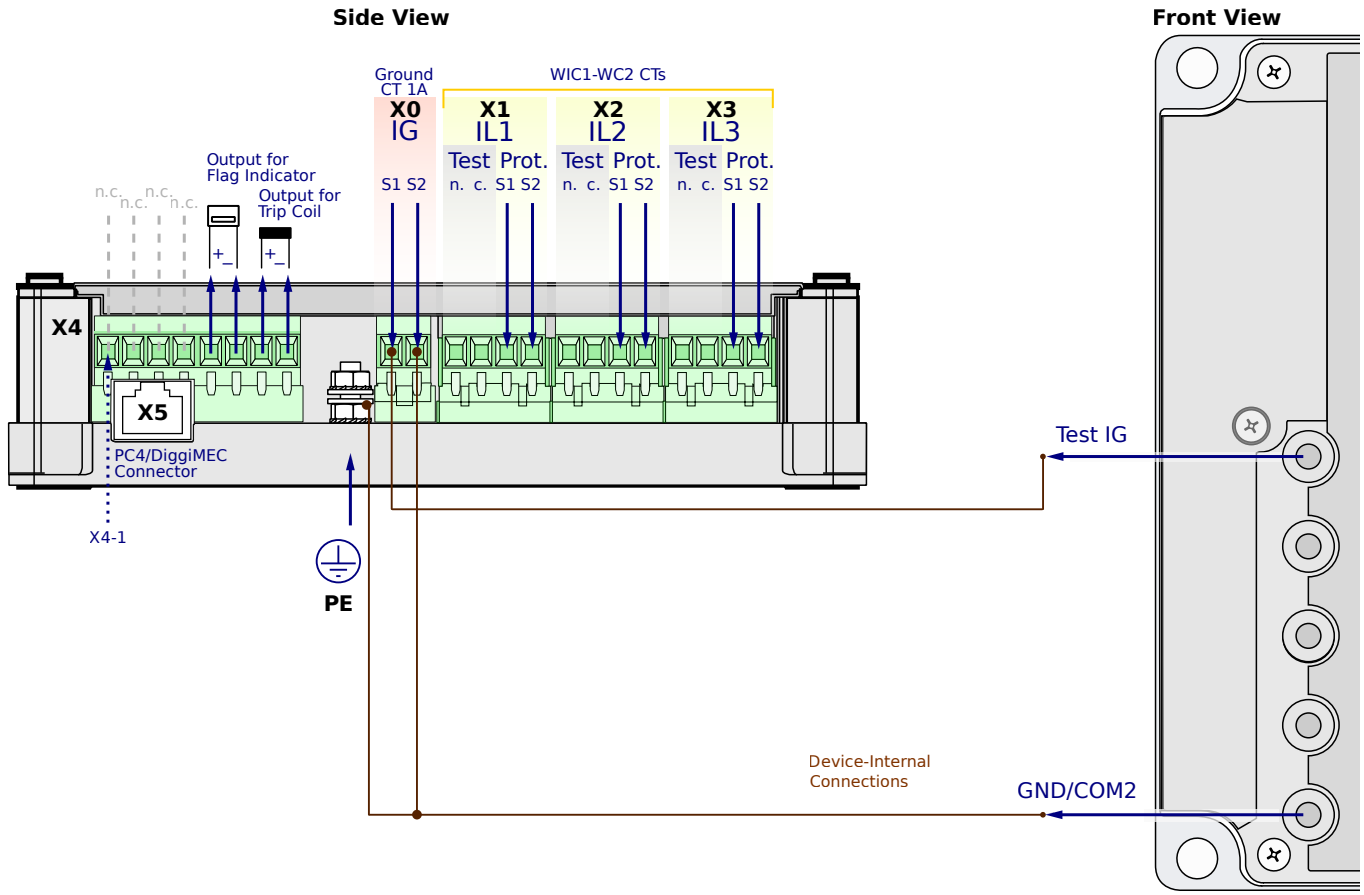


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN1PAH

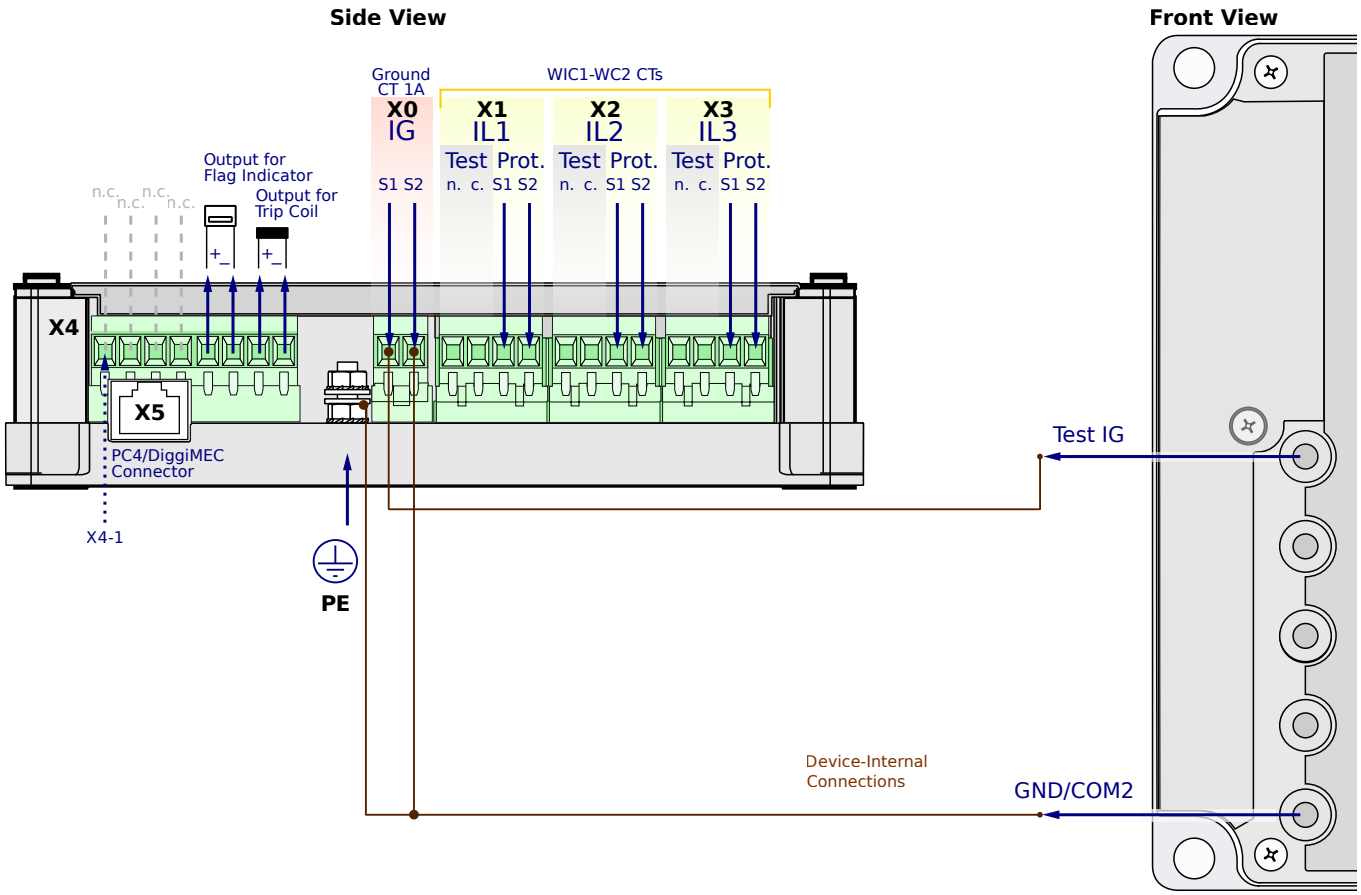


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2SA0

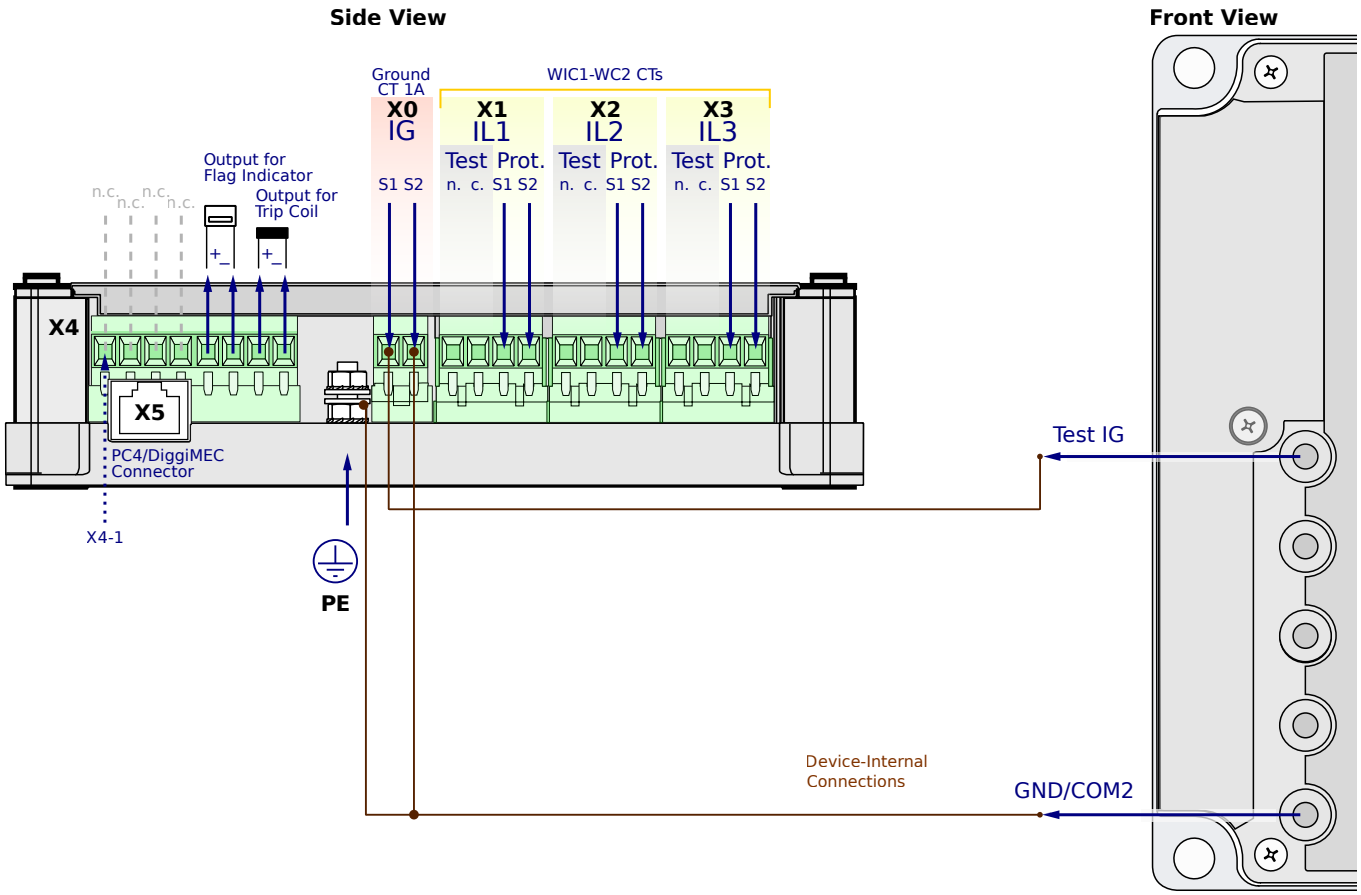


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2SAH

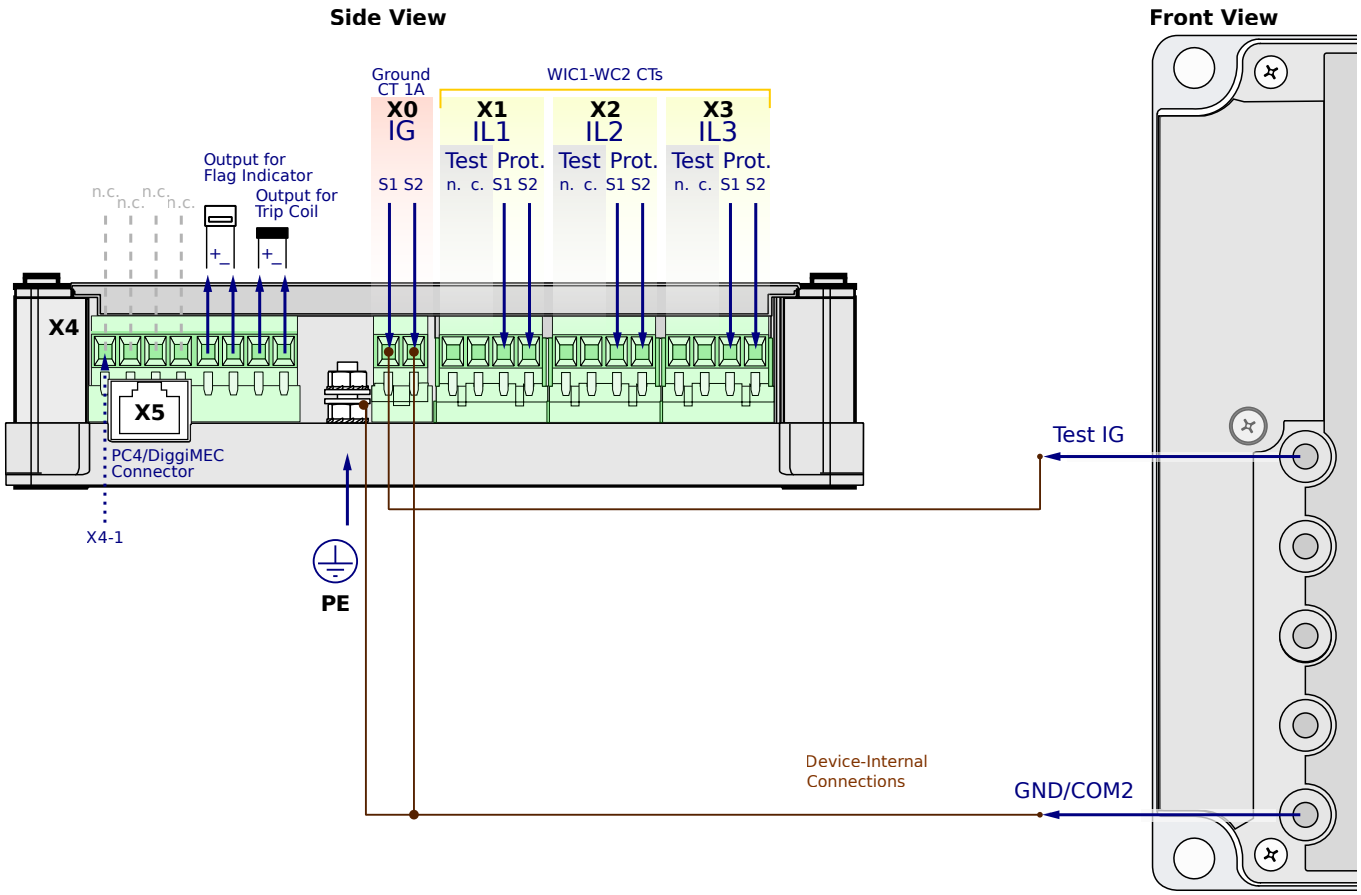


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2AA0

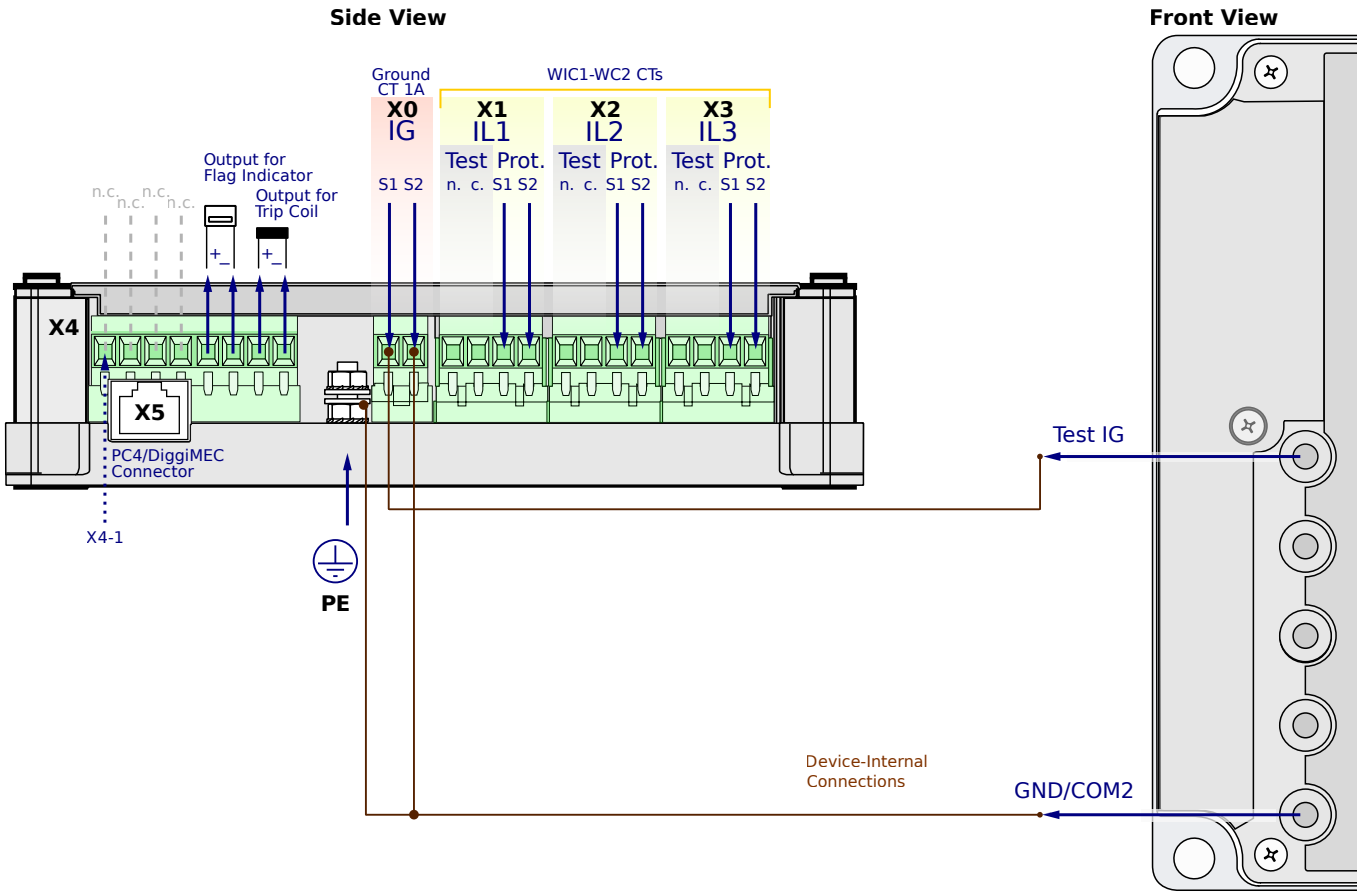


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2AAH

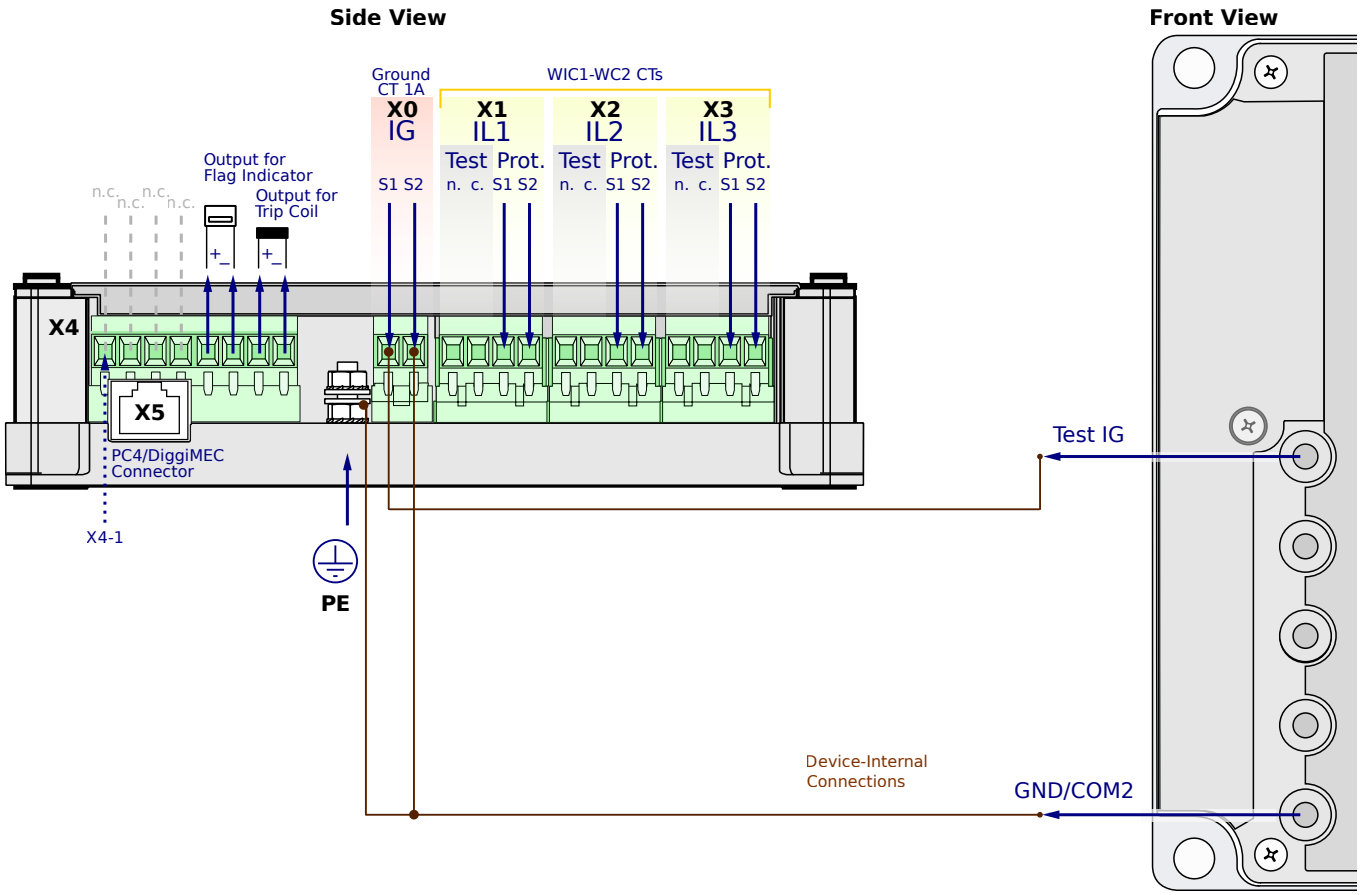


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2PA0

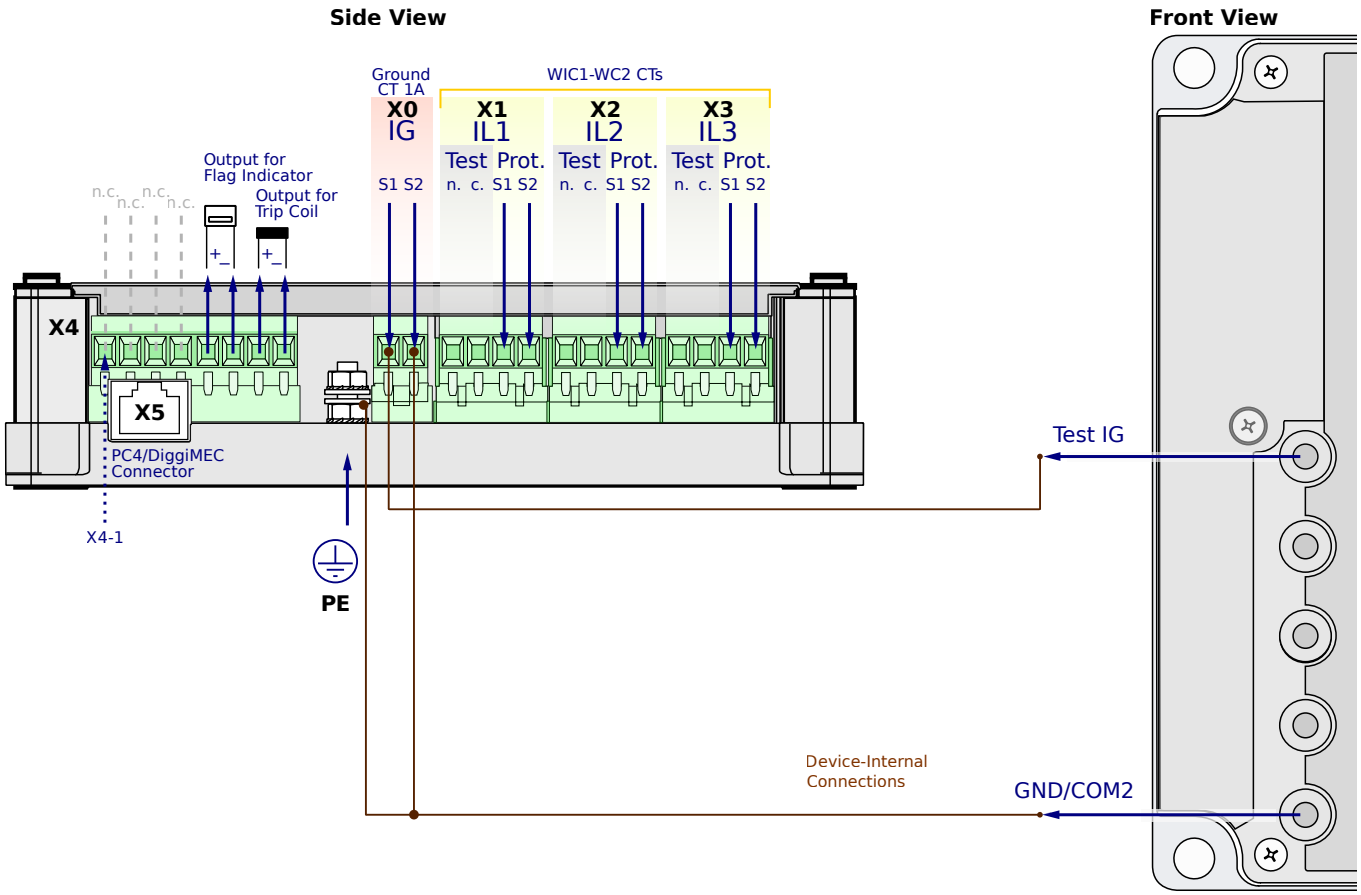


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FN2PAH

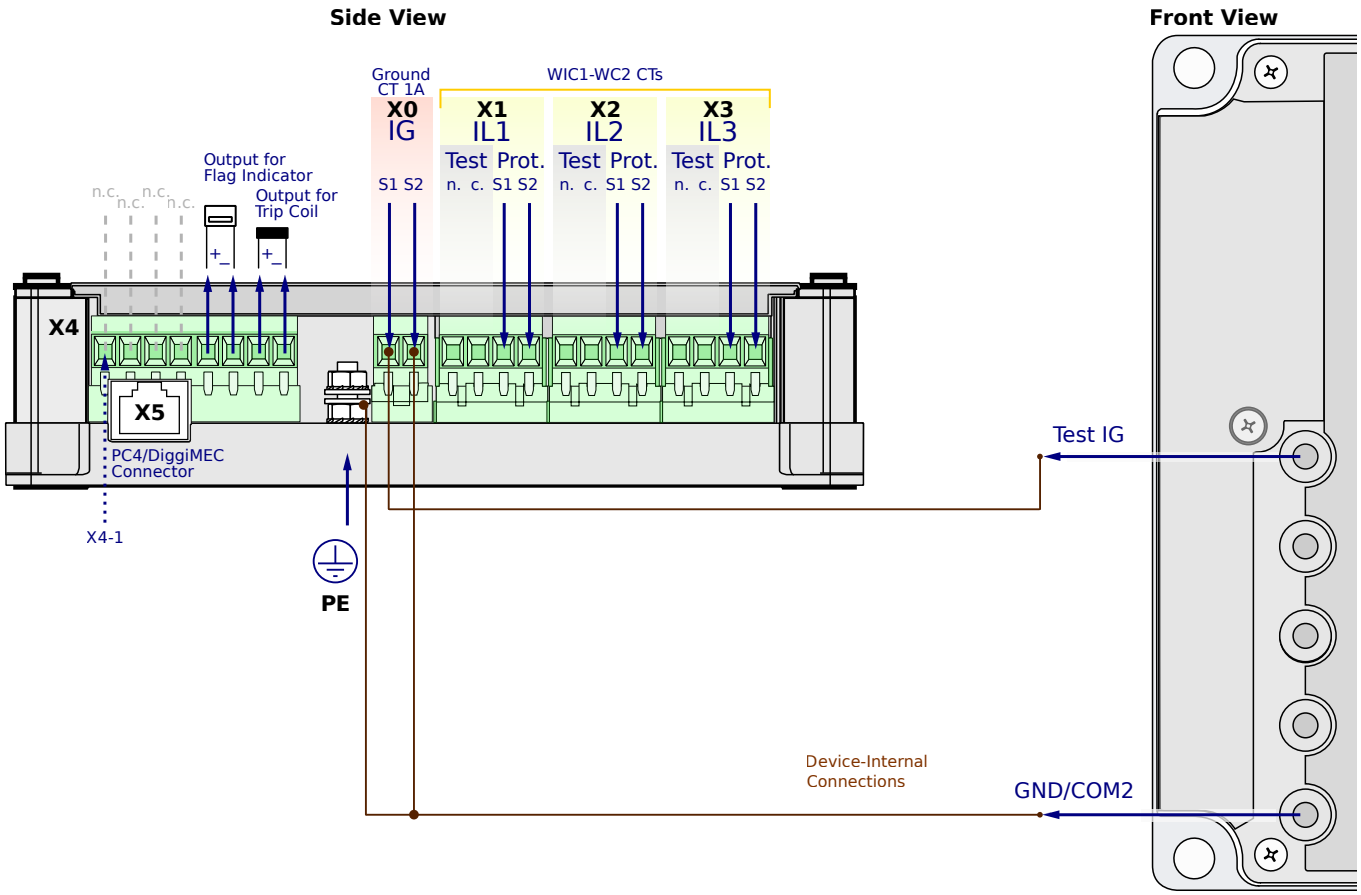


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1SA0

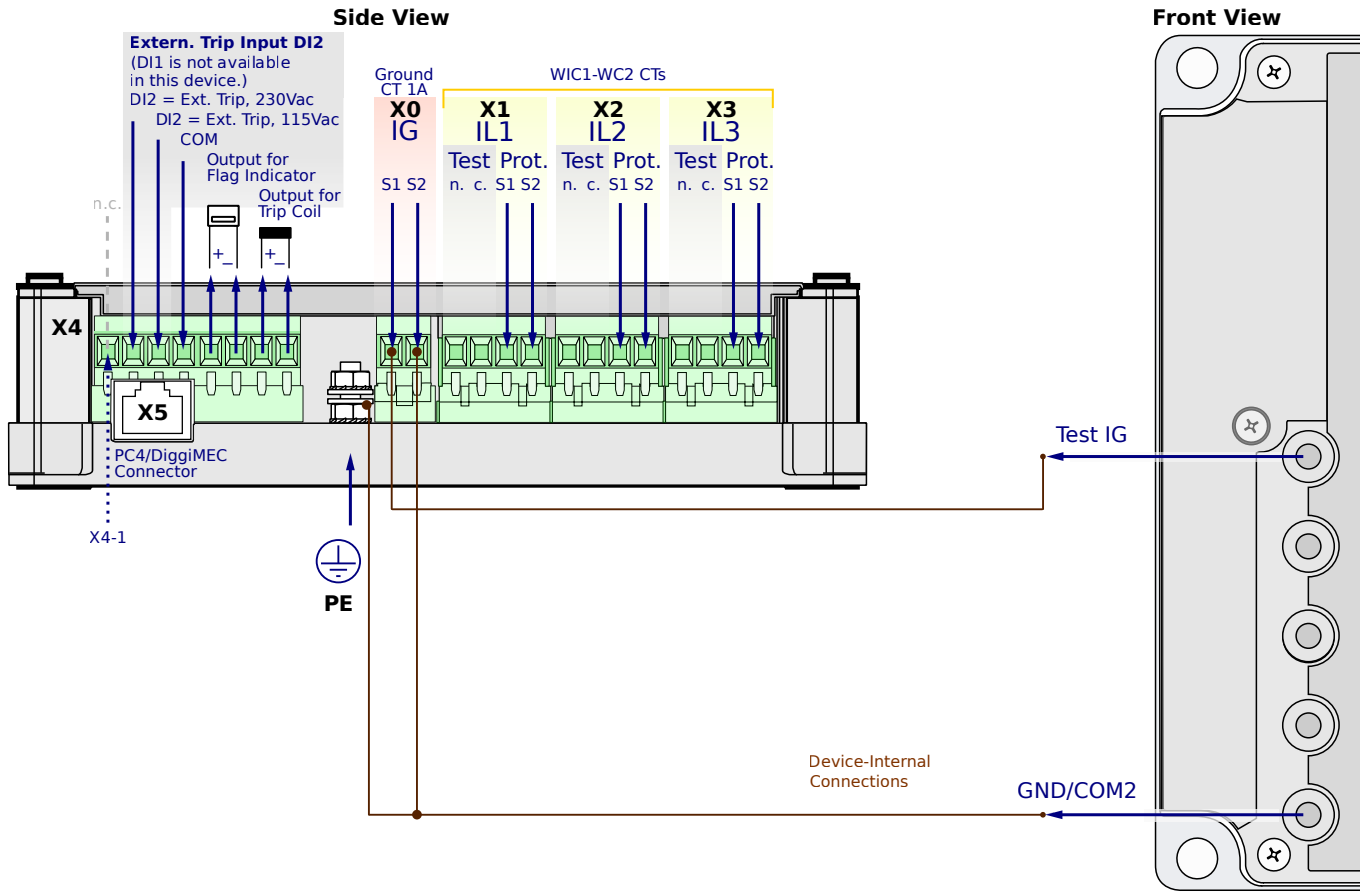


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1SAH

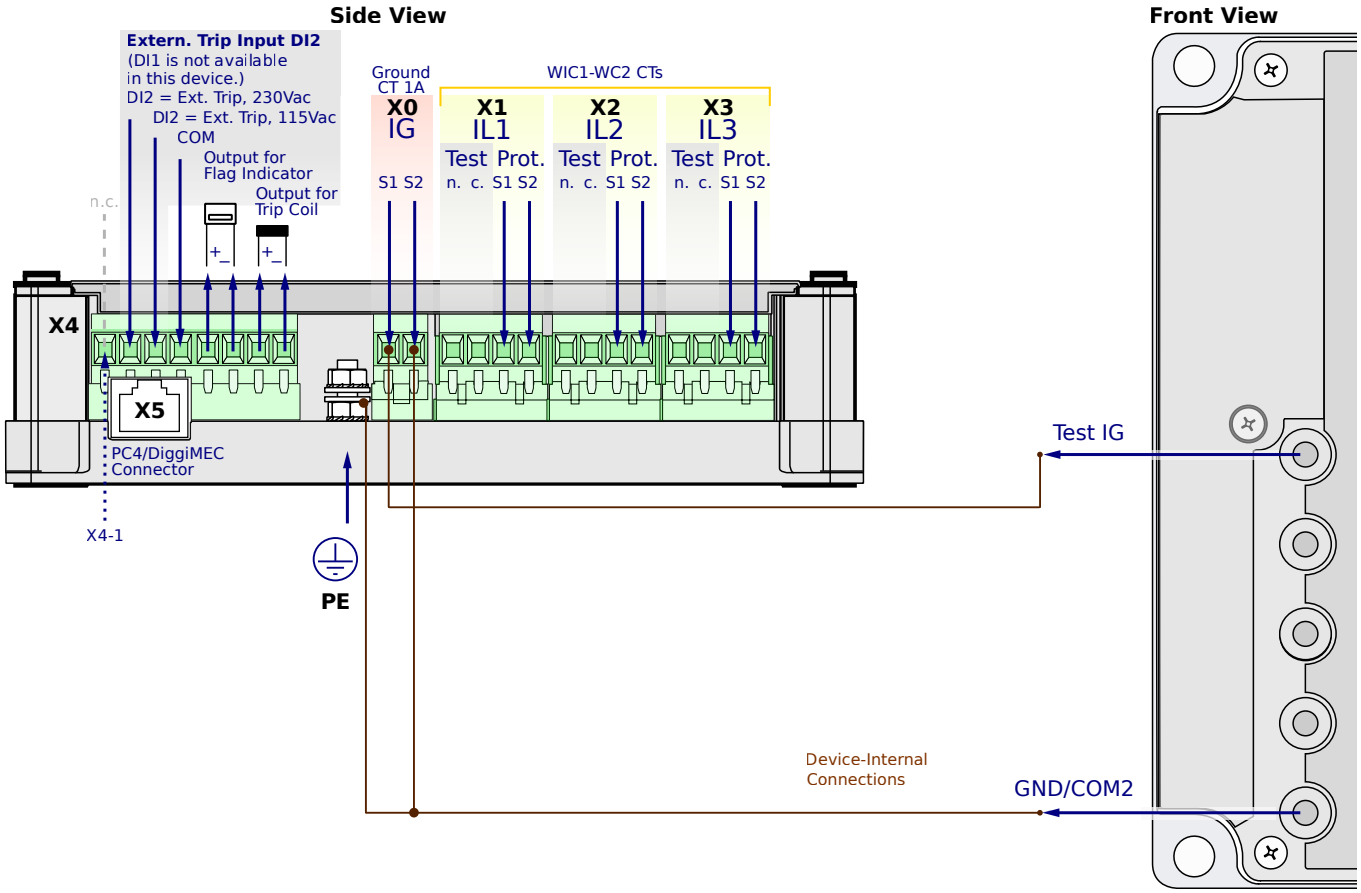


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1AA0

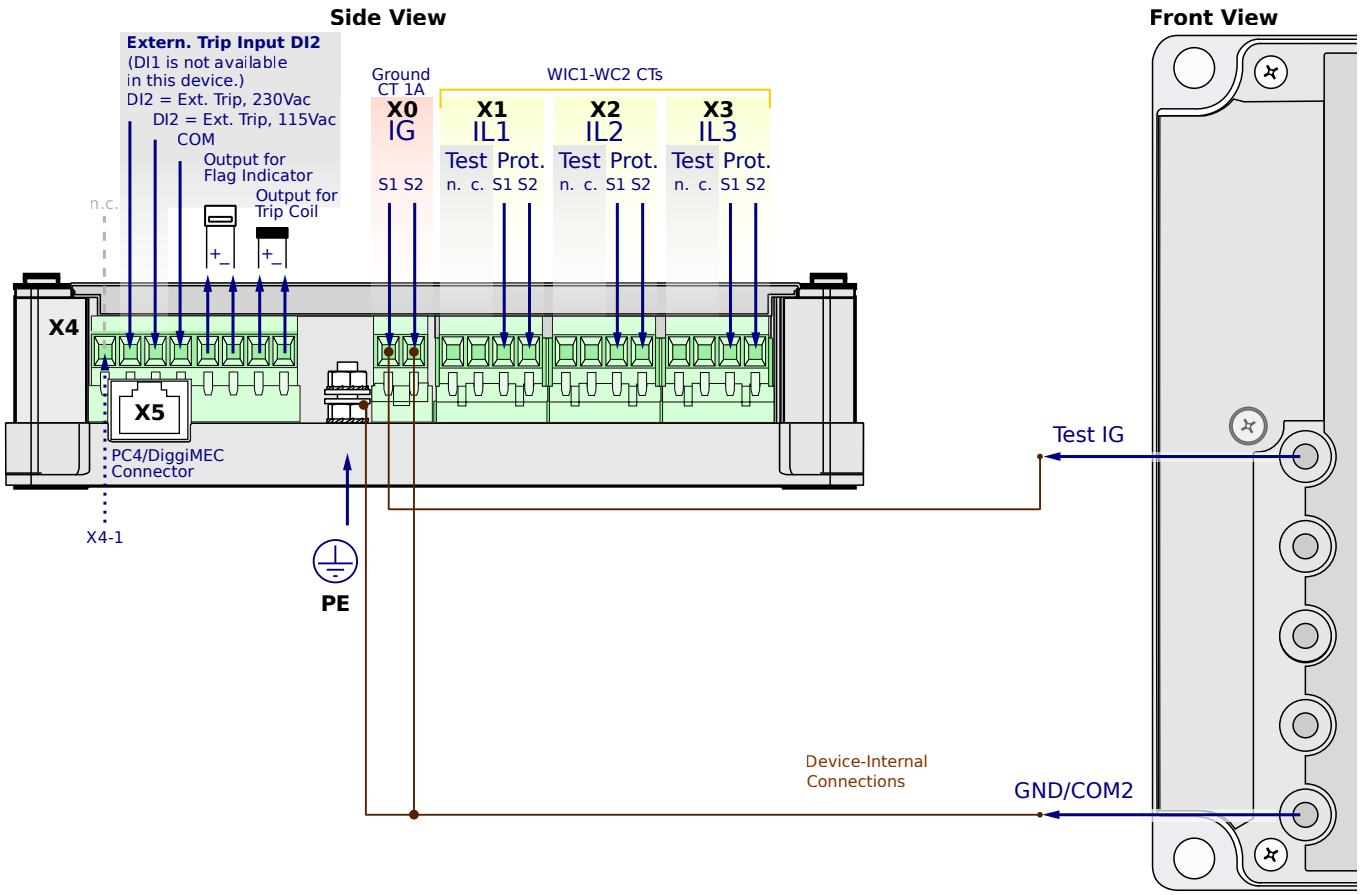


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1AAH

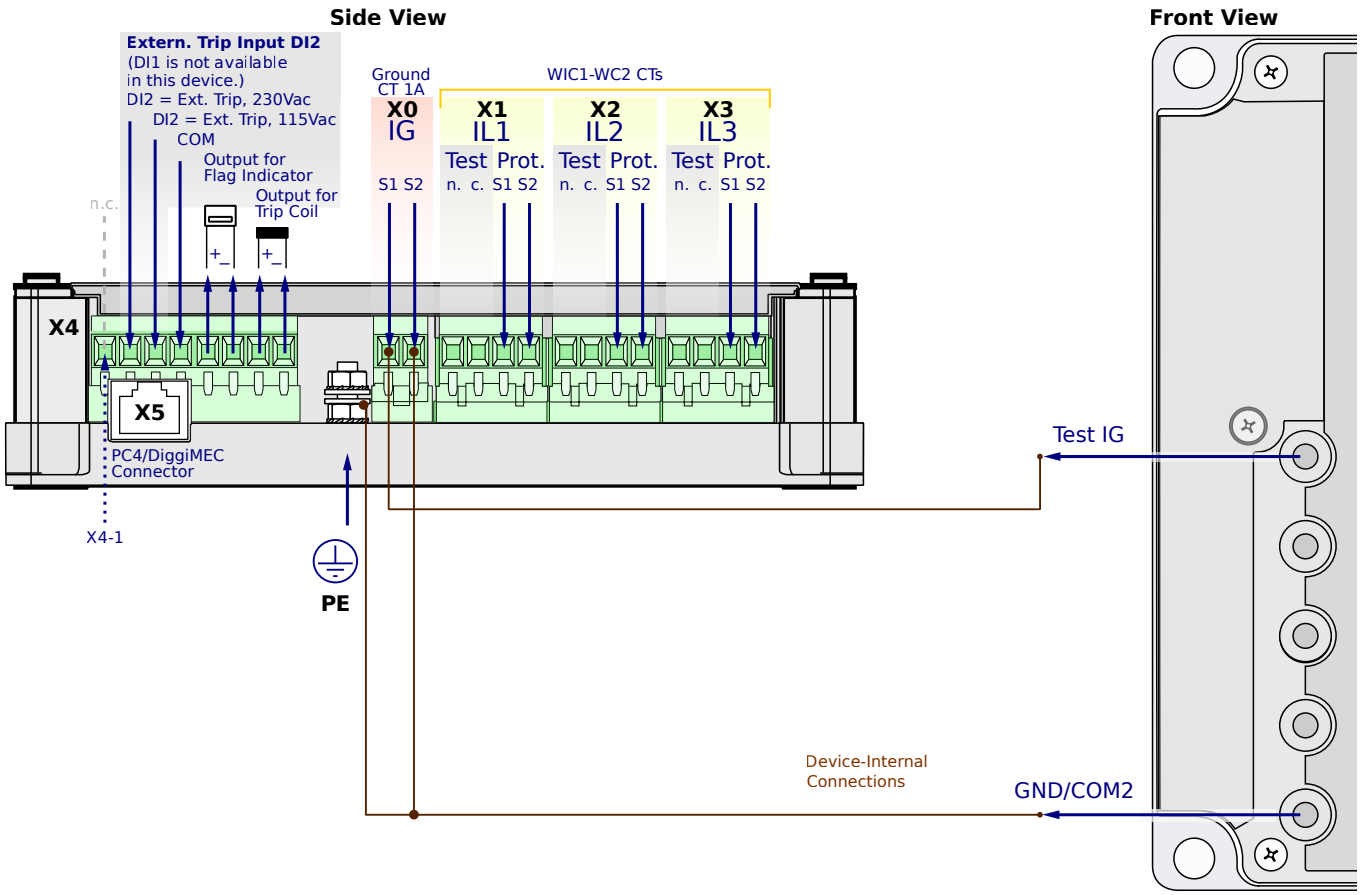


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1PA0

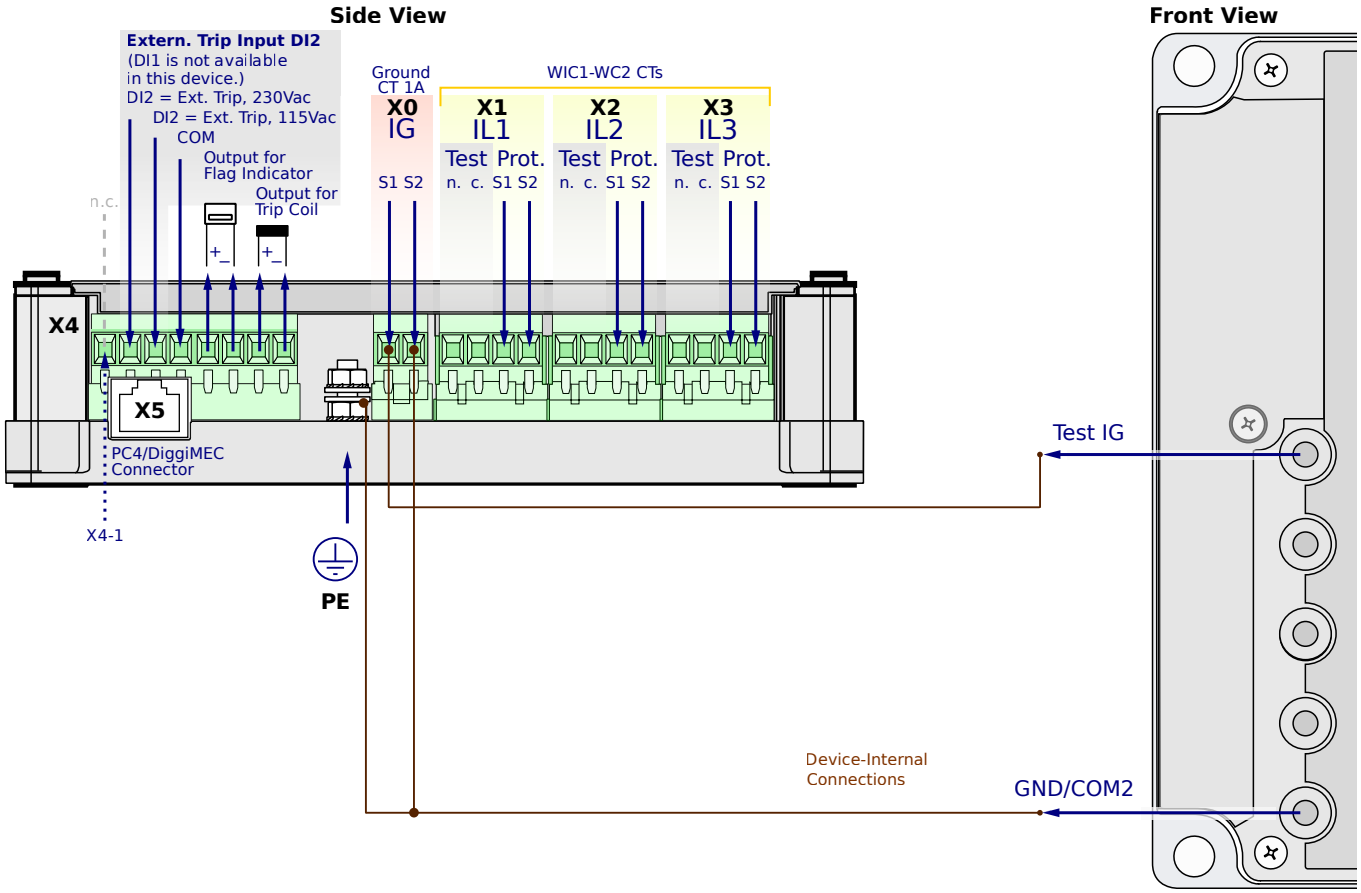


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF1PAH

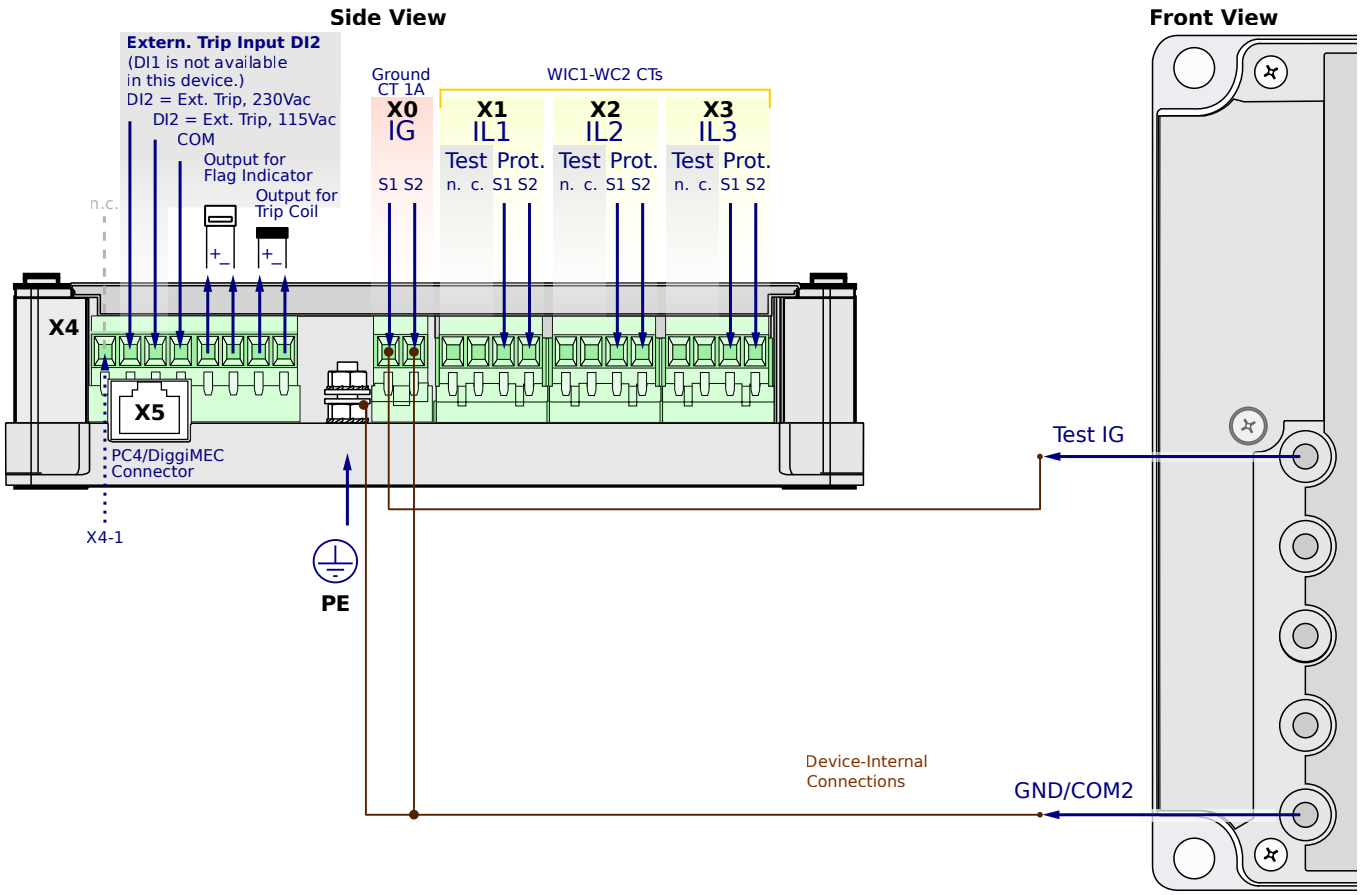


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2SA0

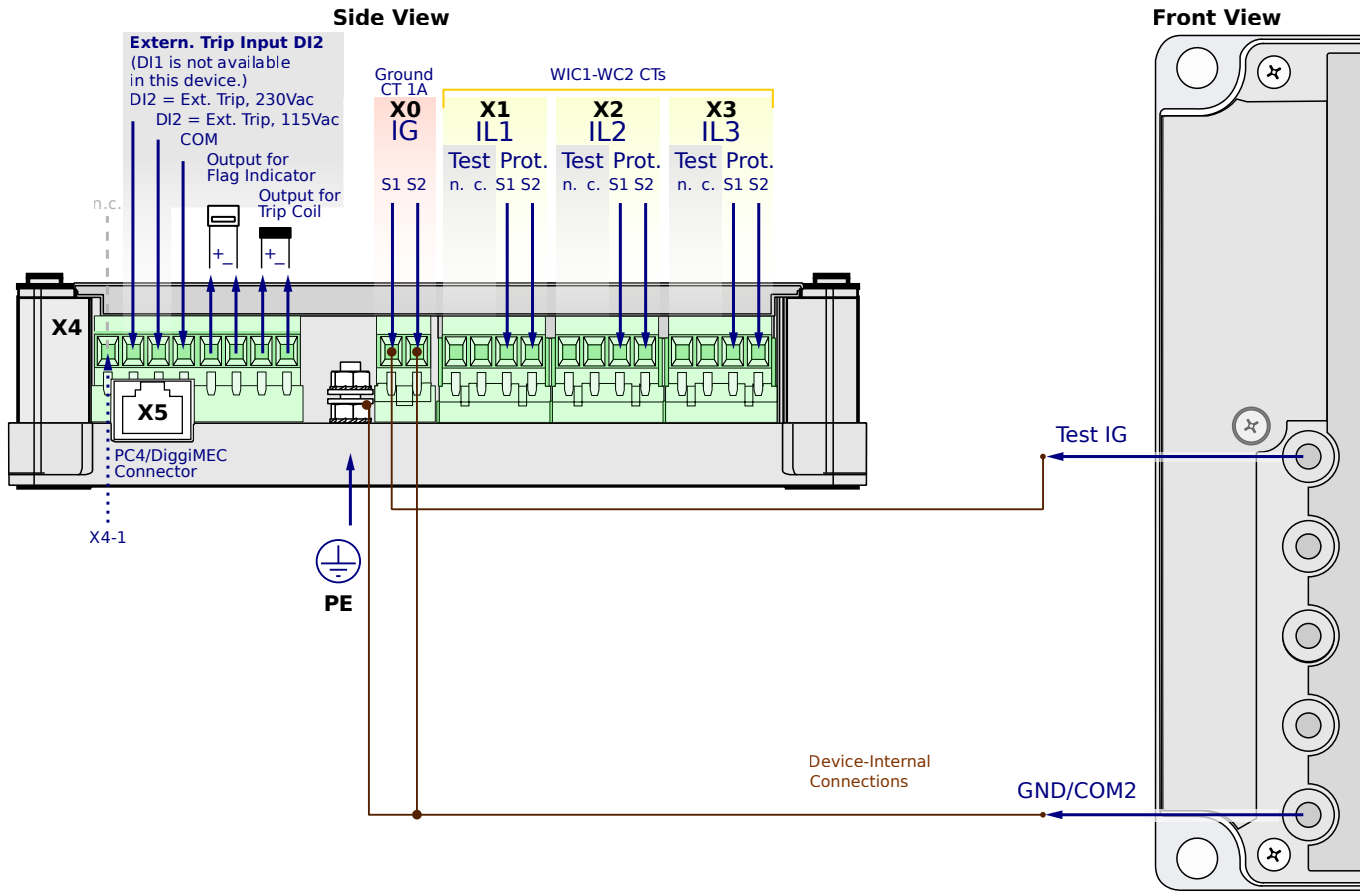


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2SAH

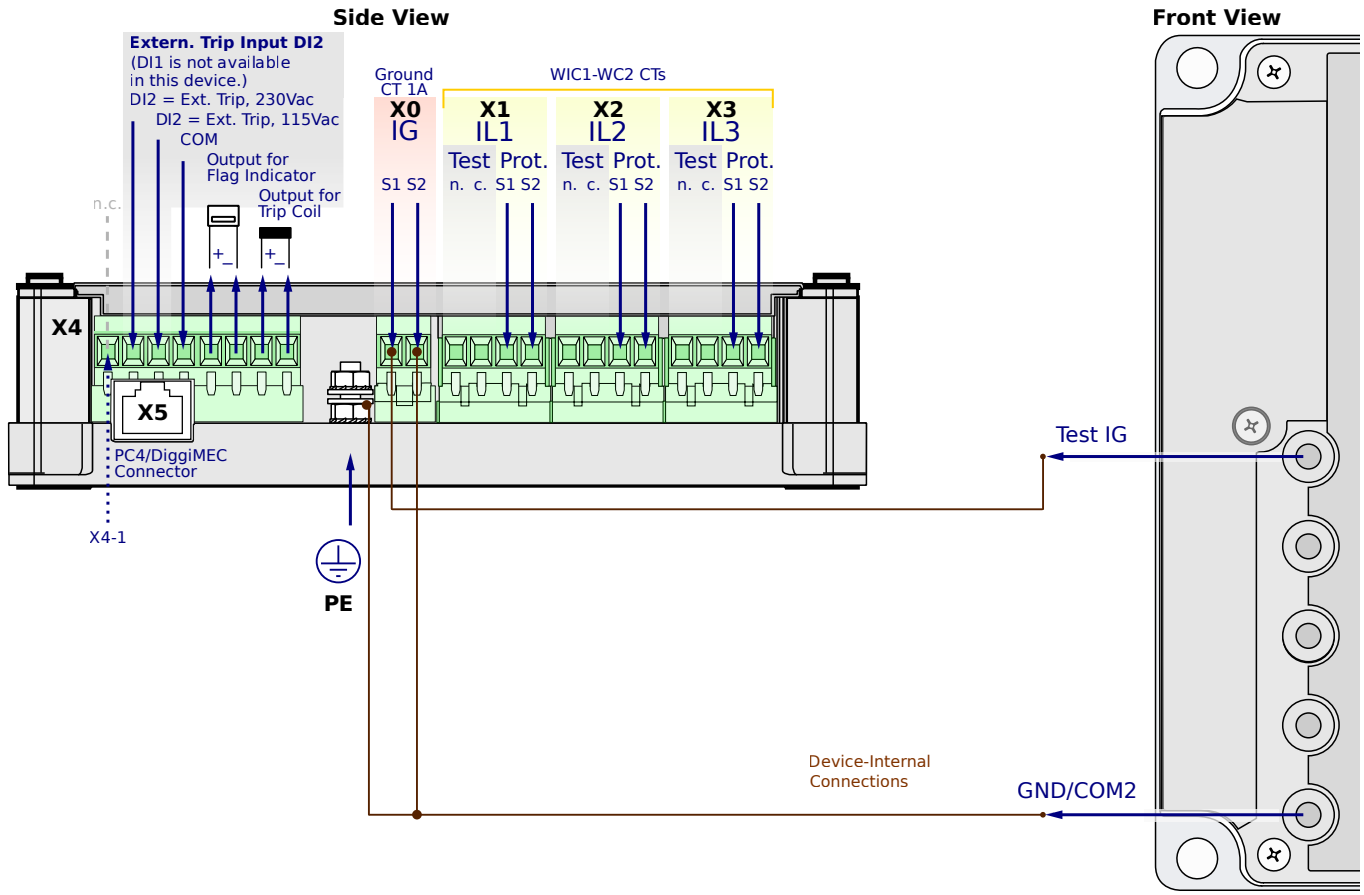


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2AA0

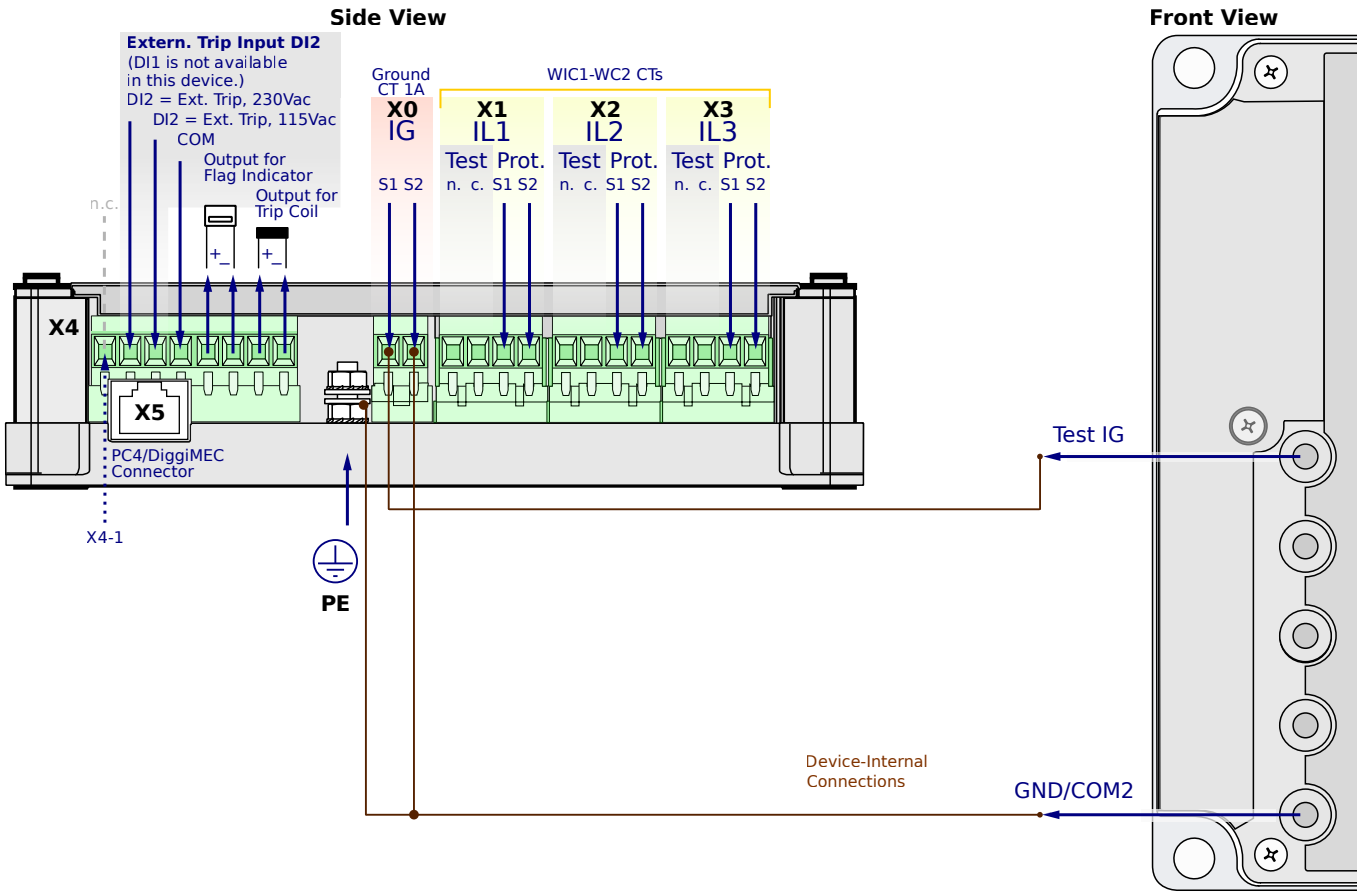


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2AAH

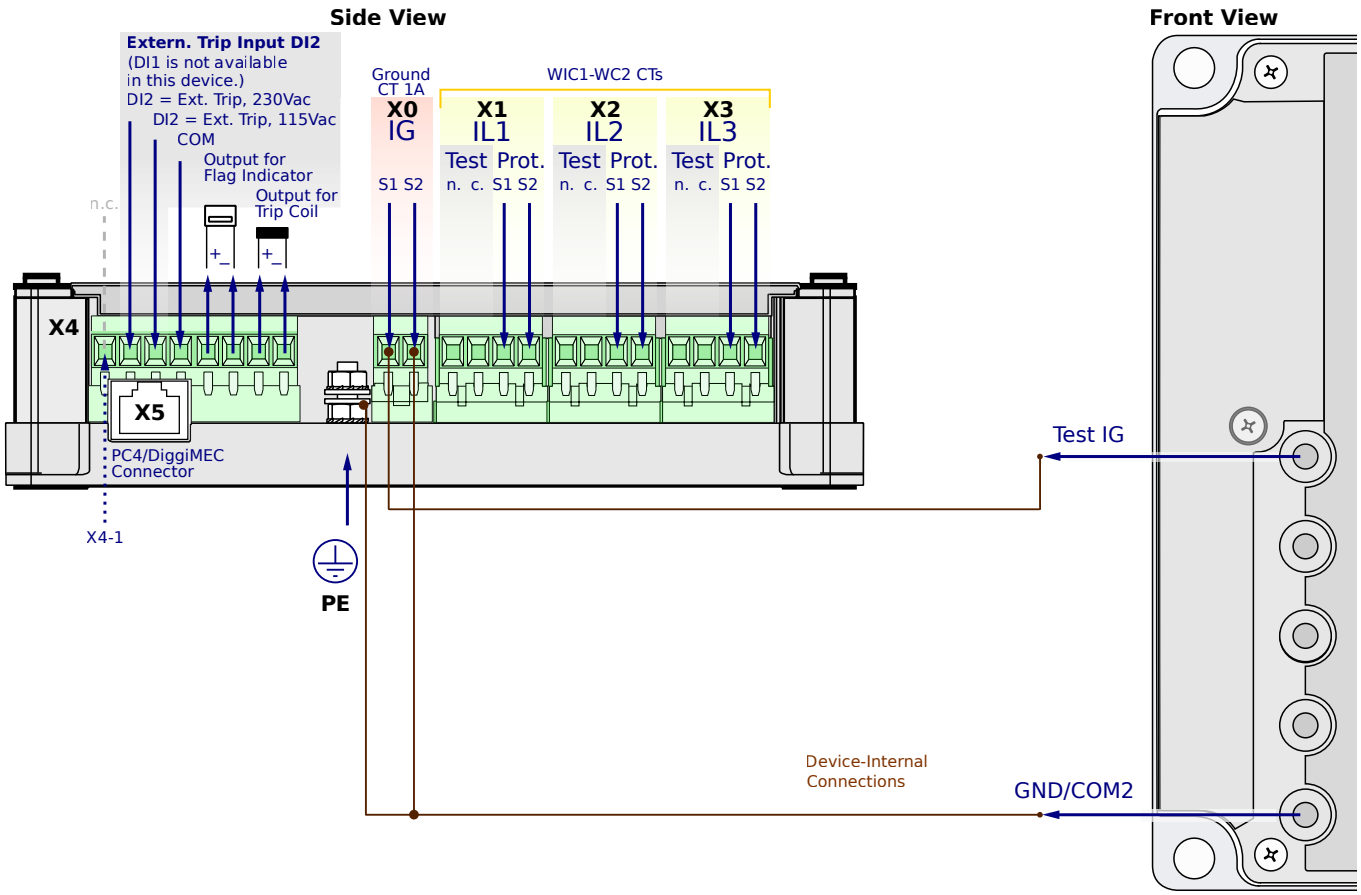


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2PA0

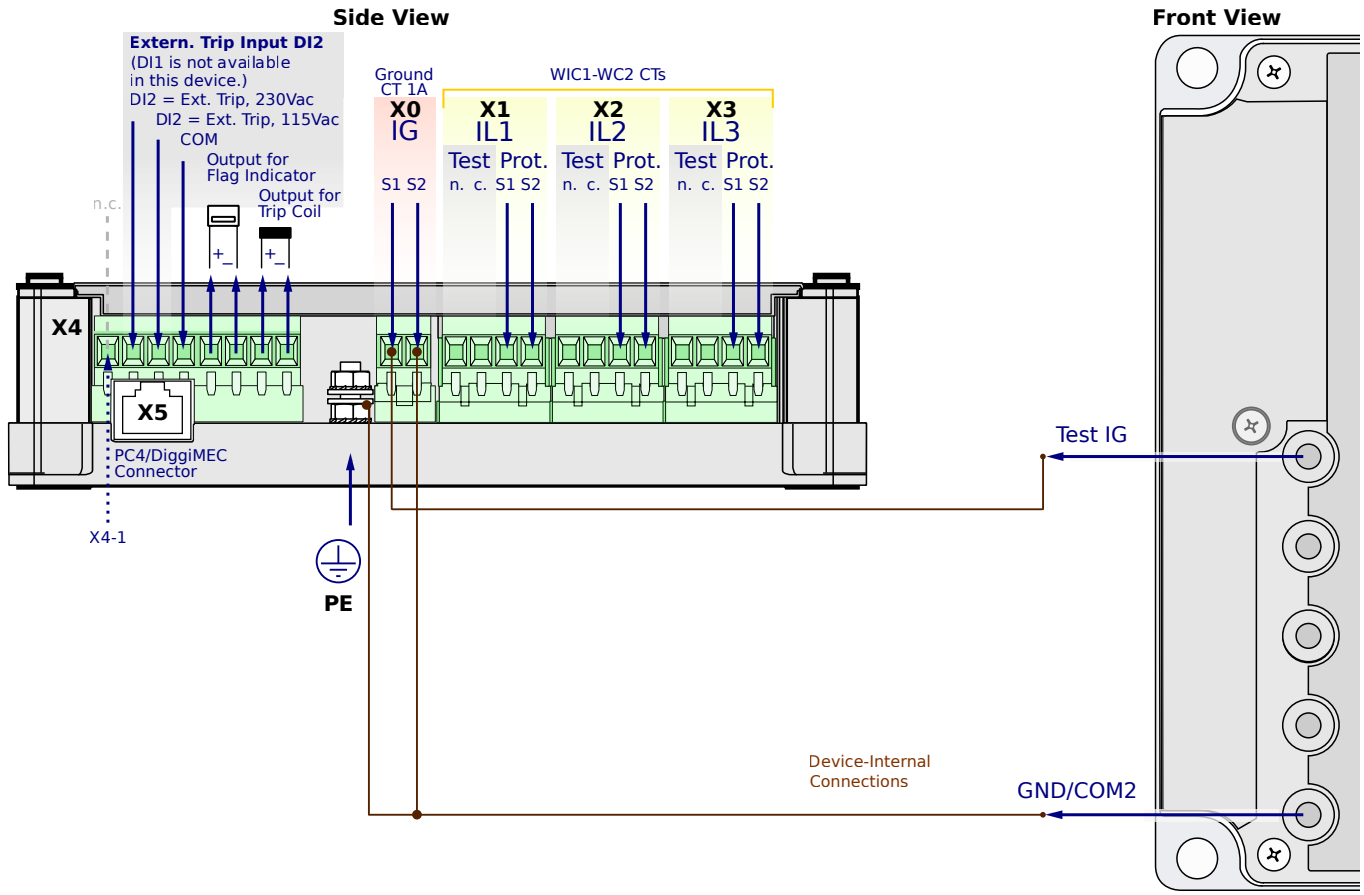


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FF2PAH

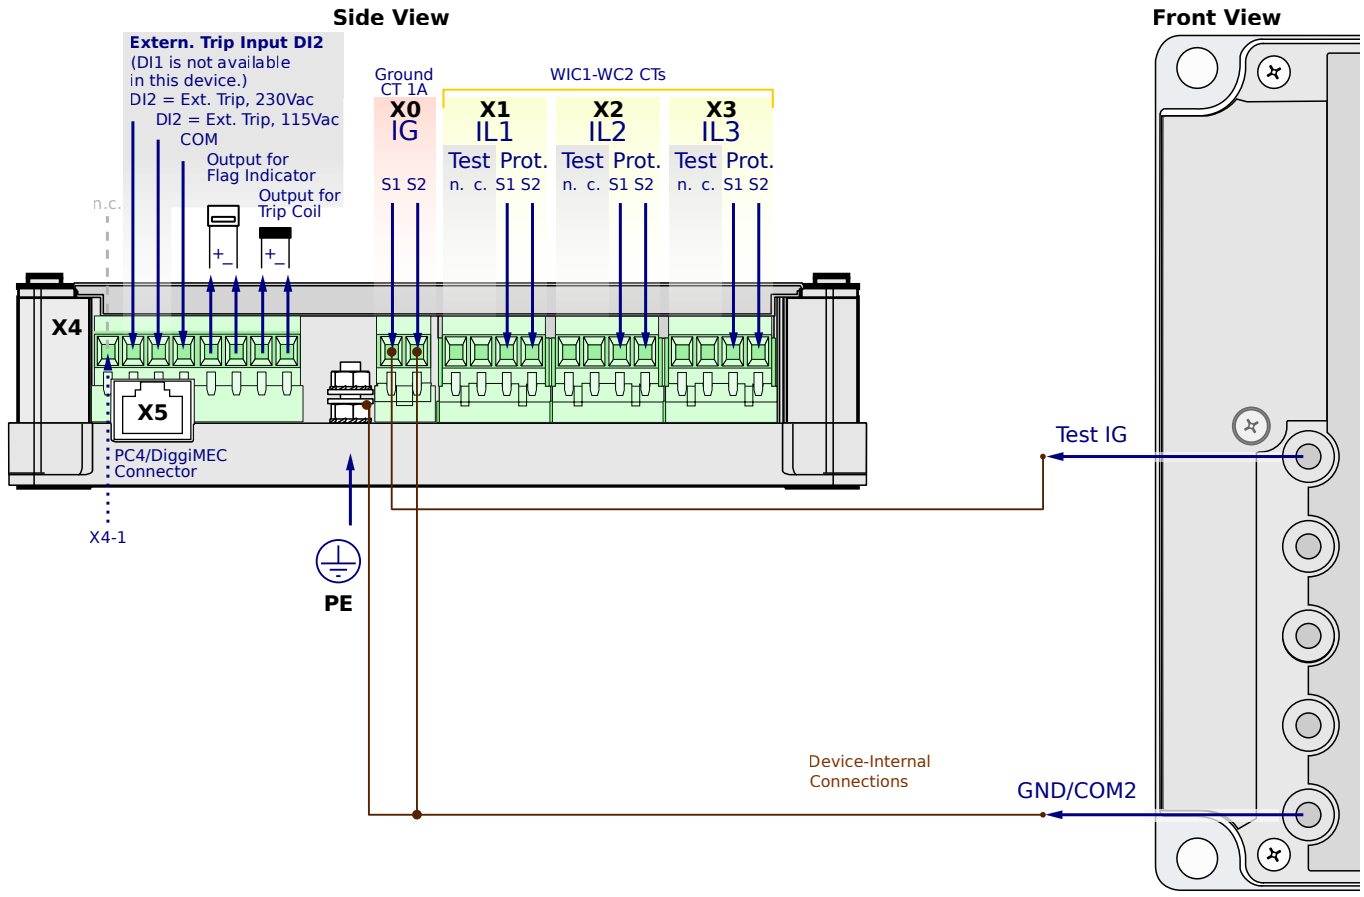


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1SA0

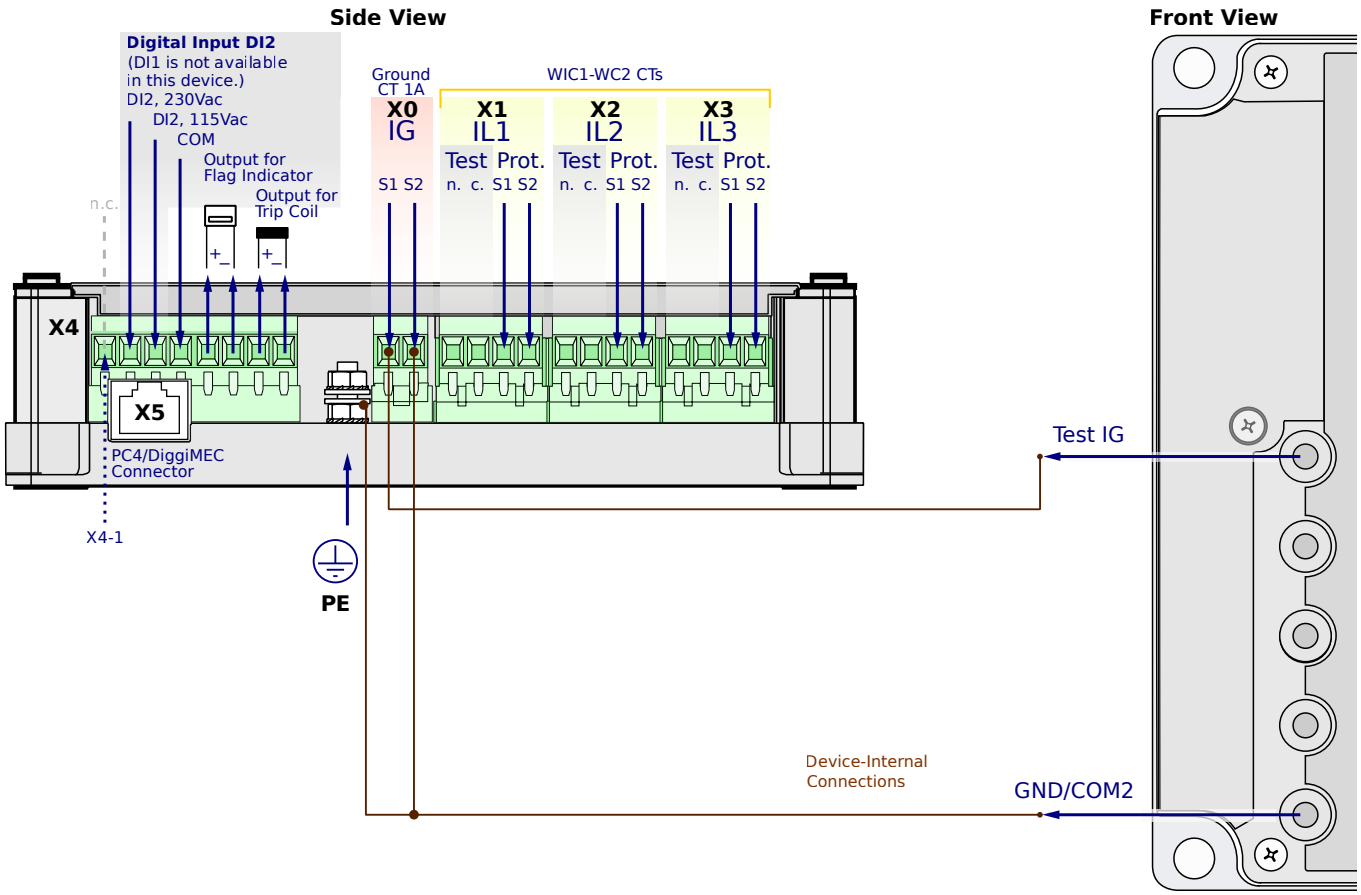


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1SAH

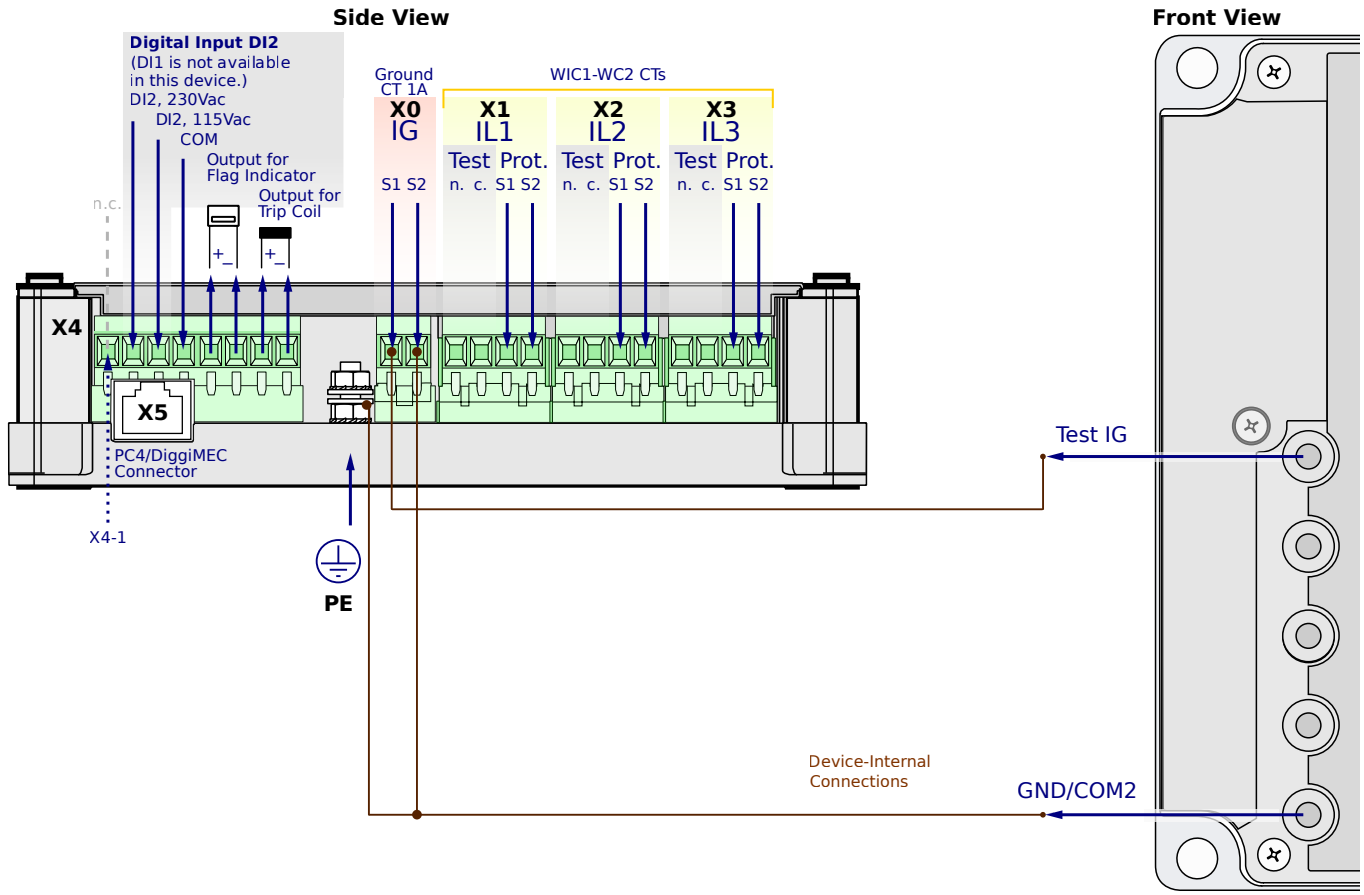


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1AA0

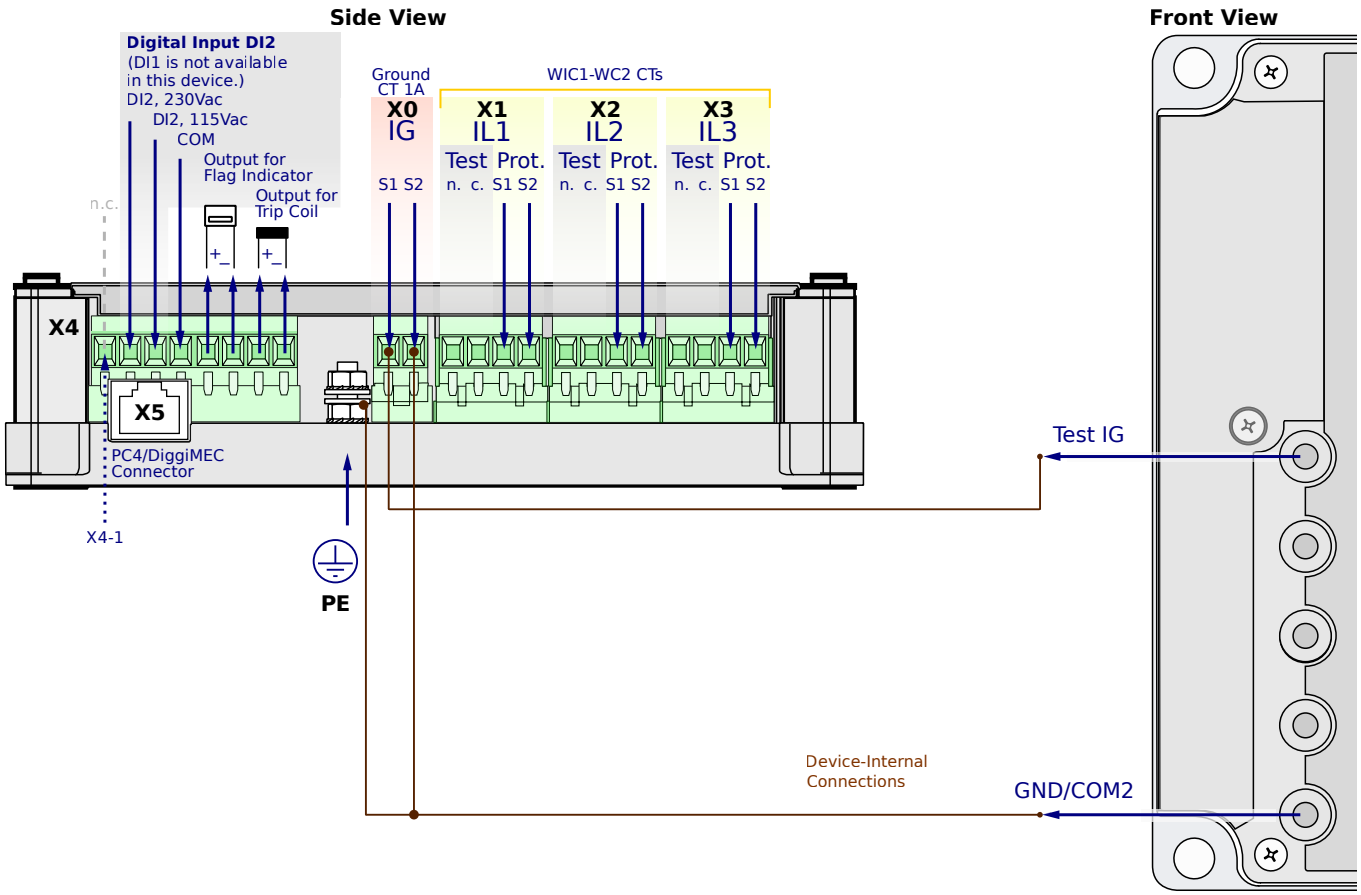


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1AAH

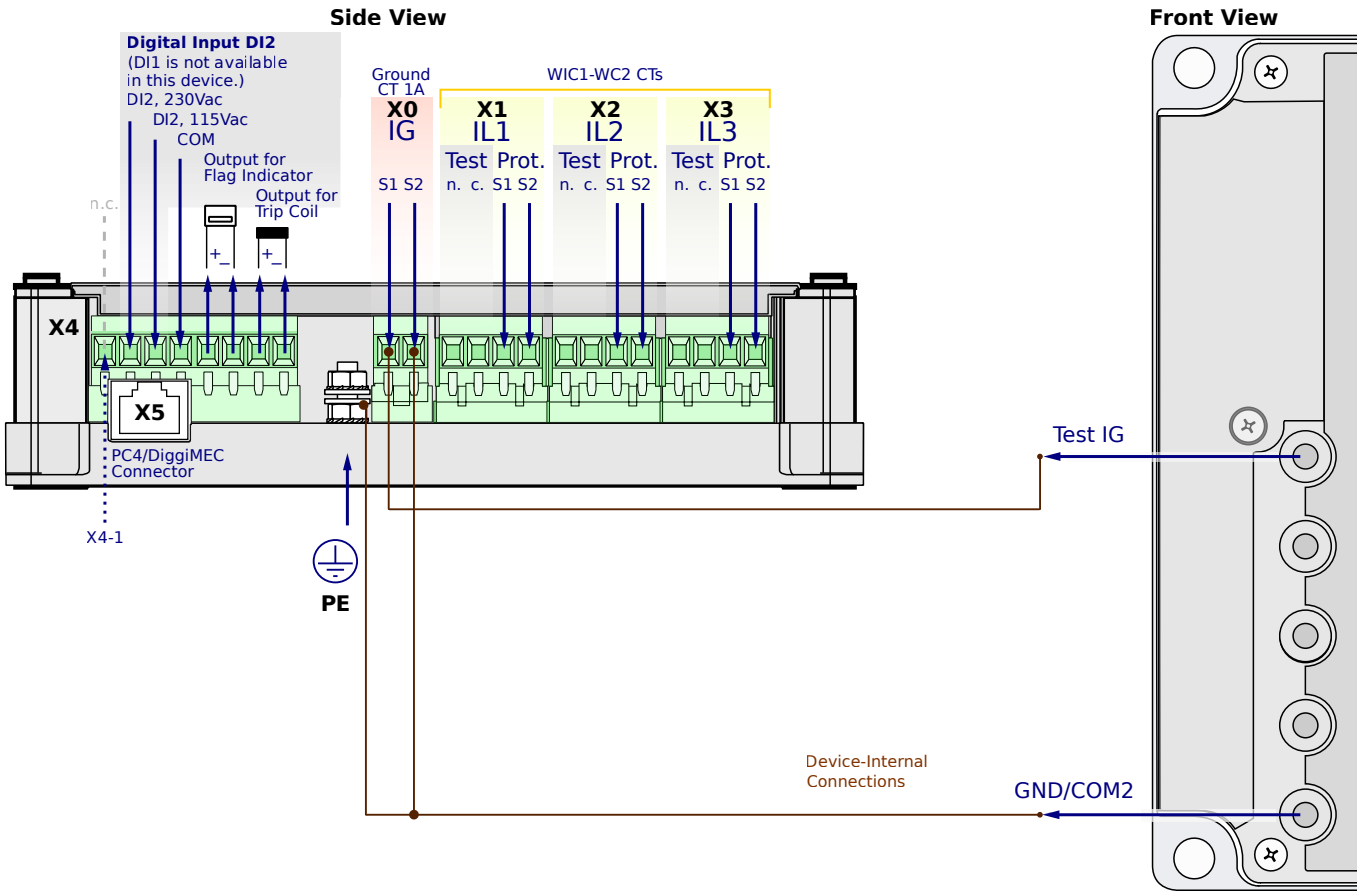


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1PA0

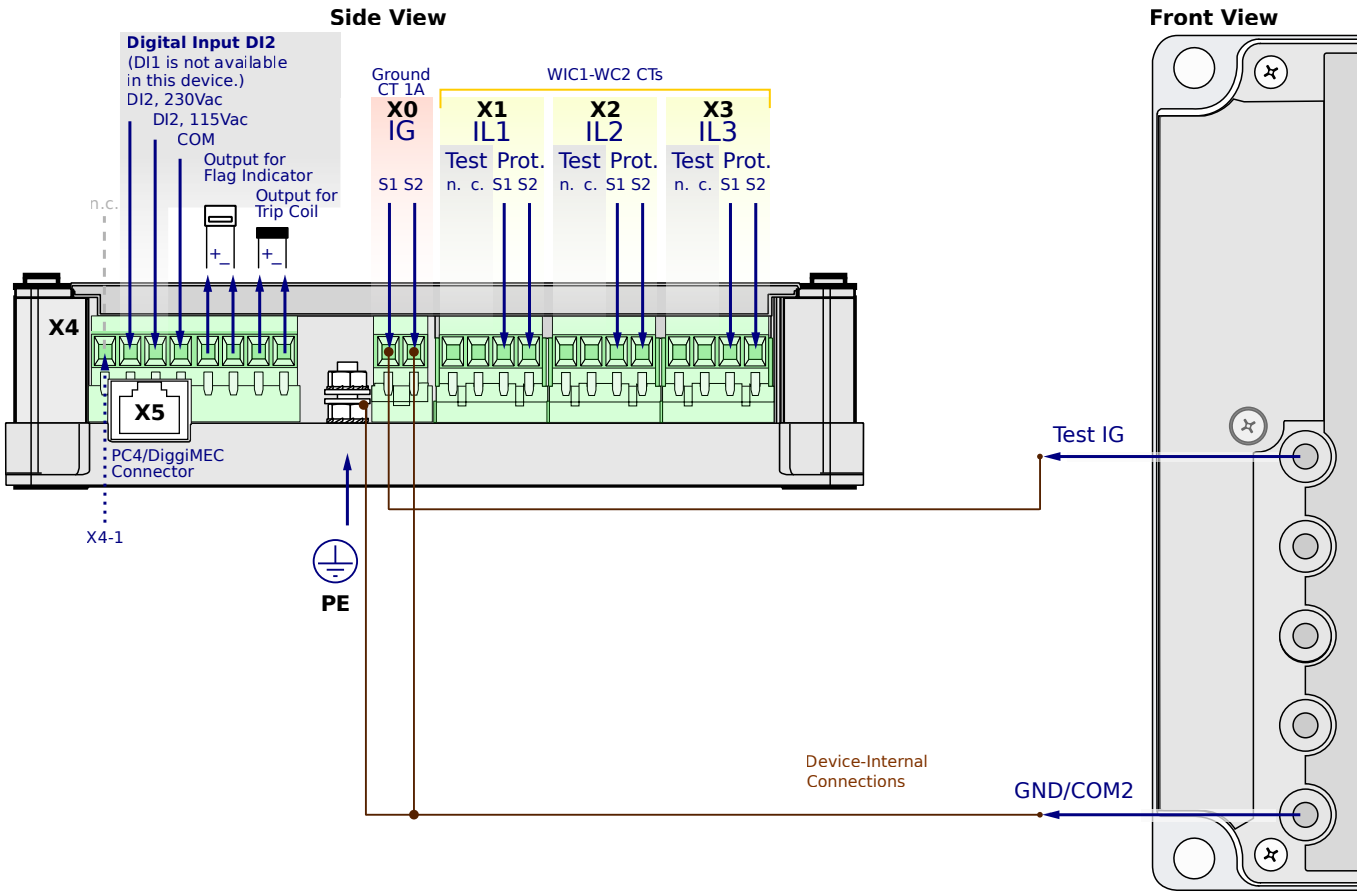


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC1PAH

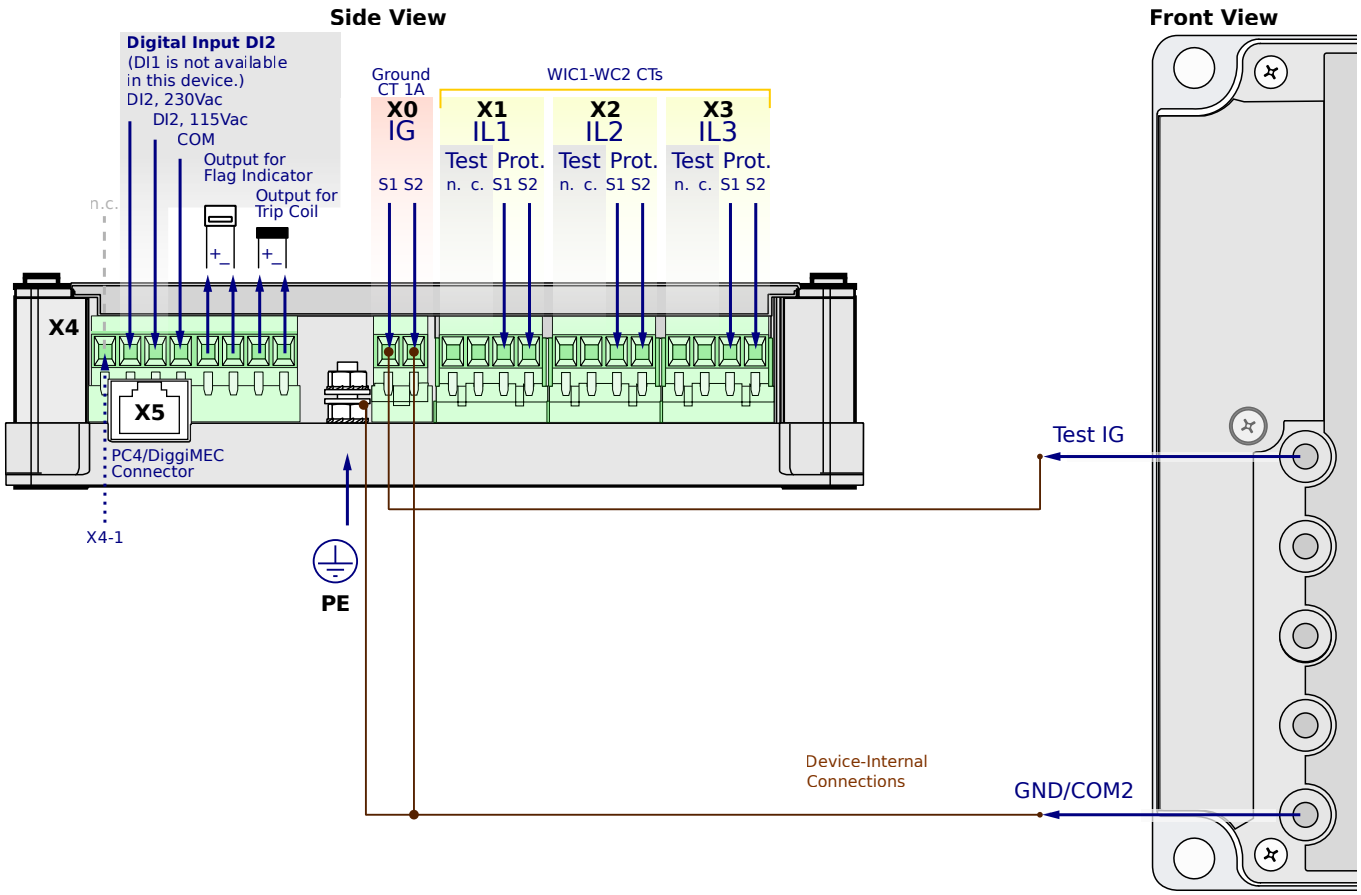


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2SA0

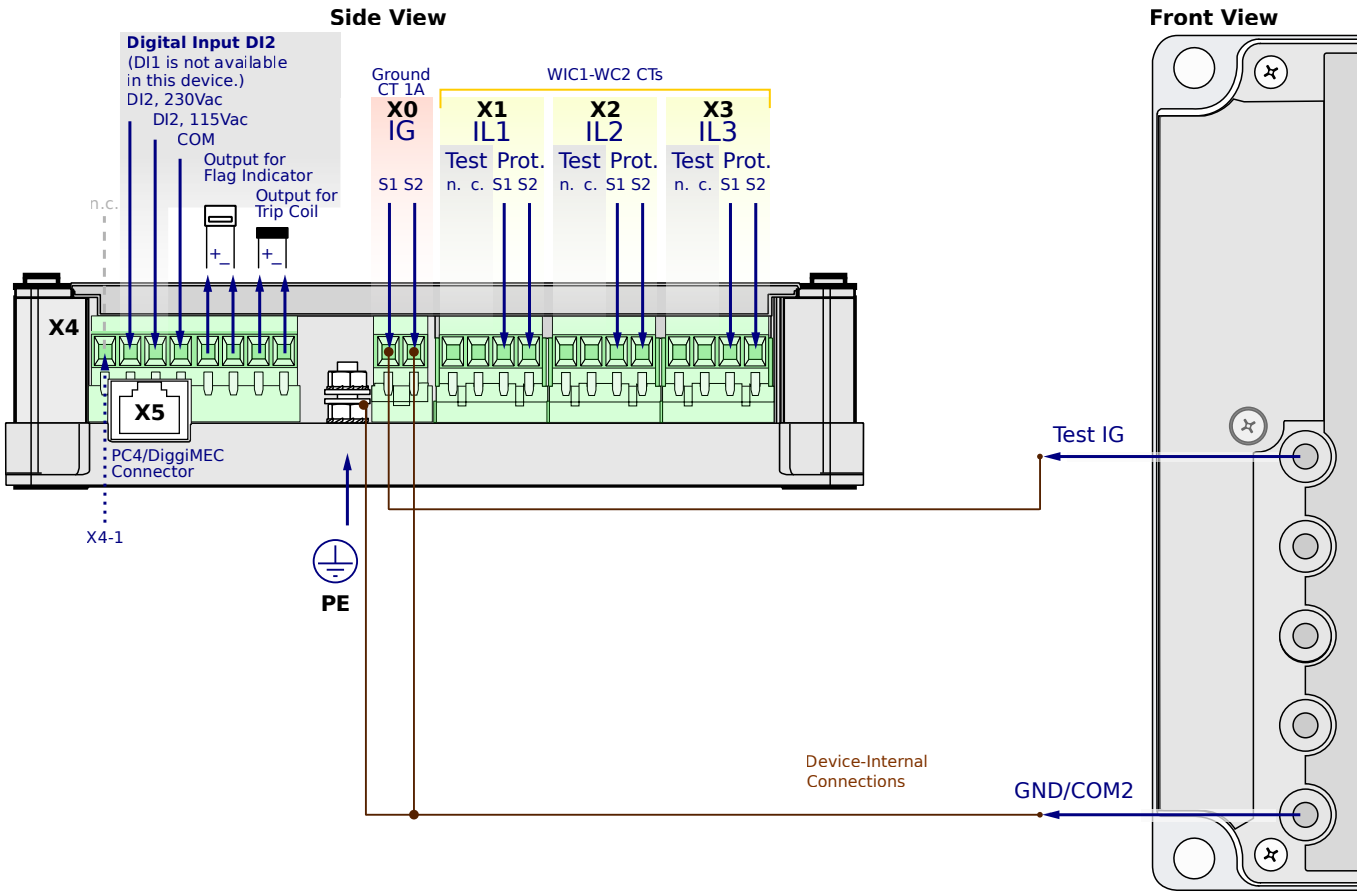


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2SAH

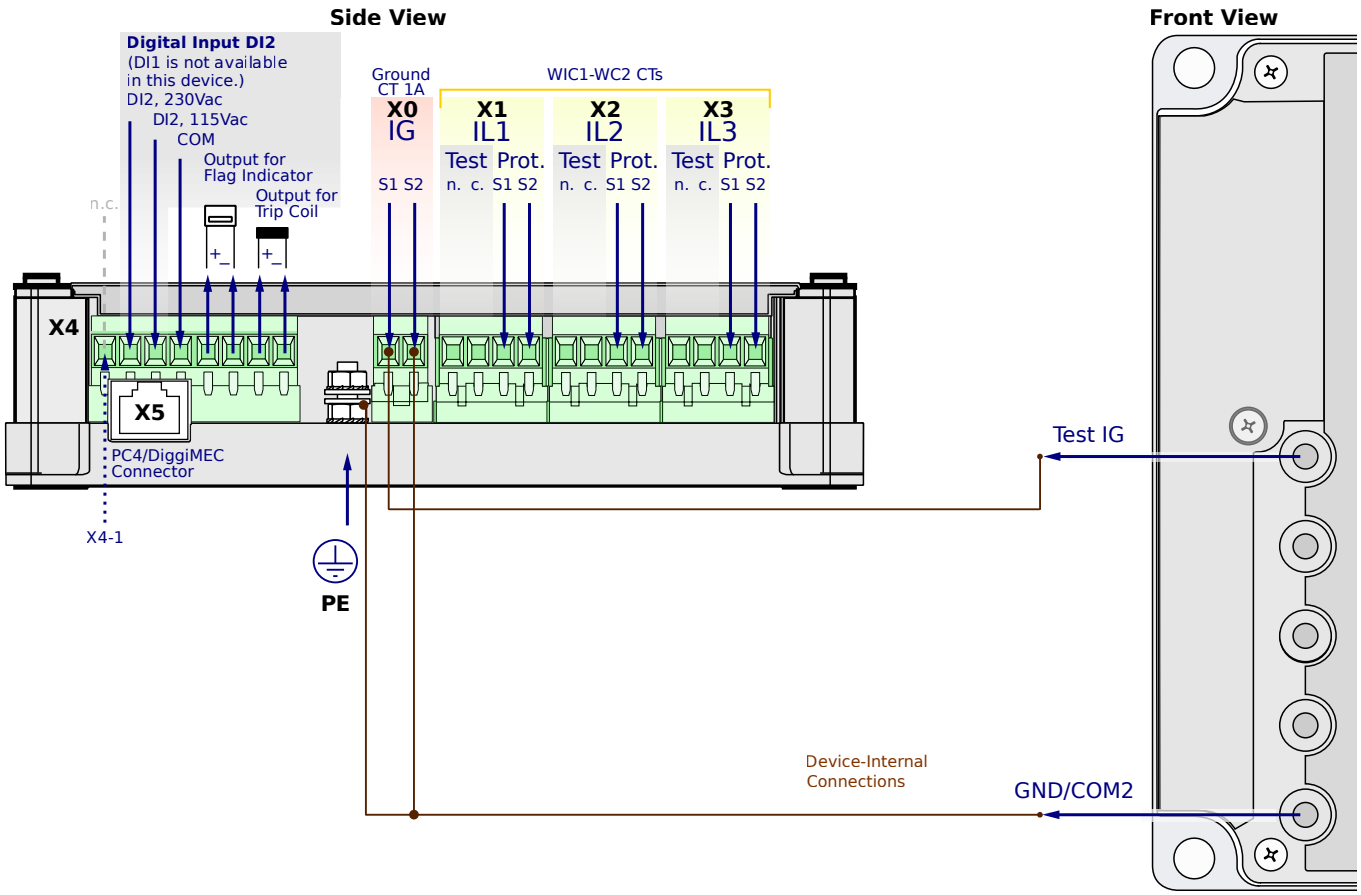


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2AA0

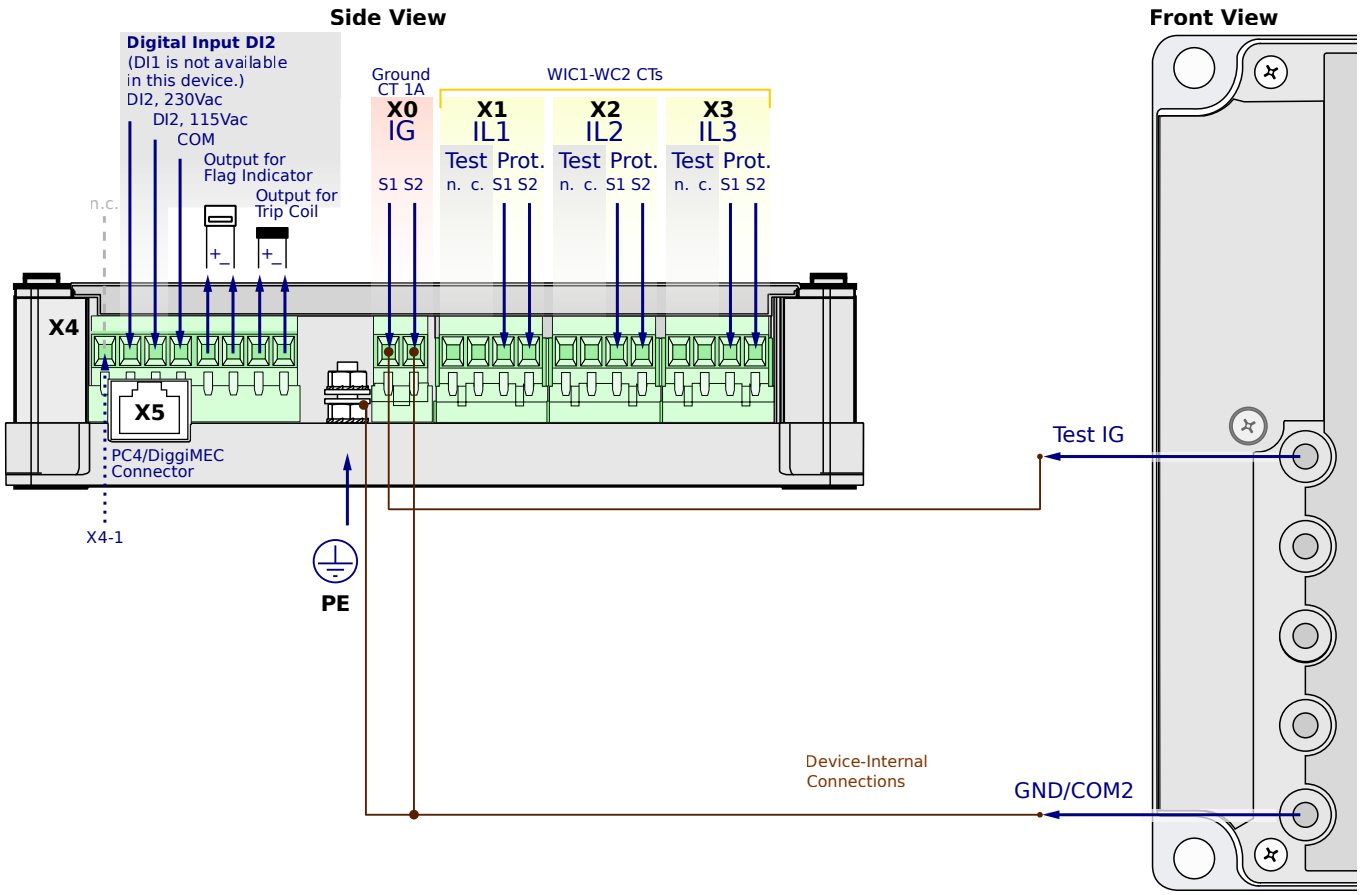


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2AAH

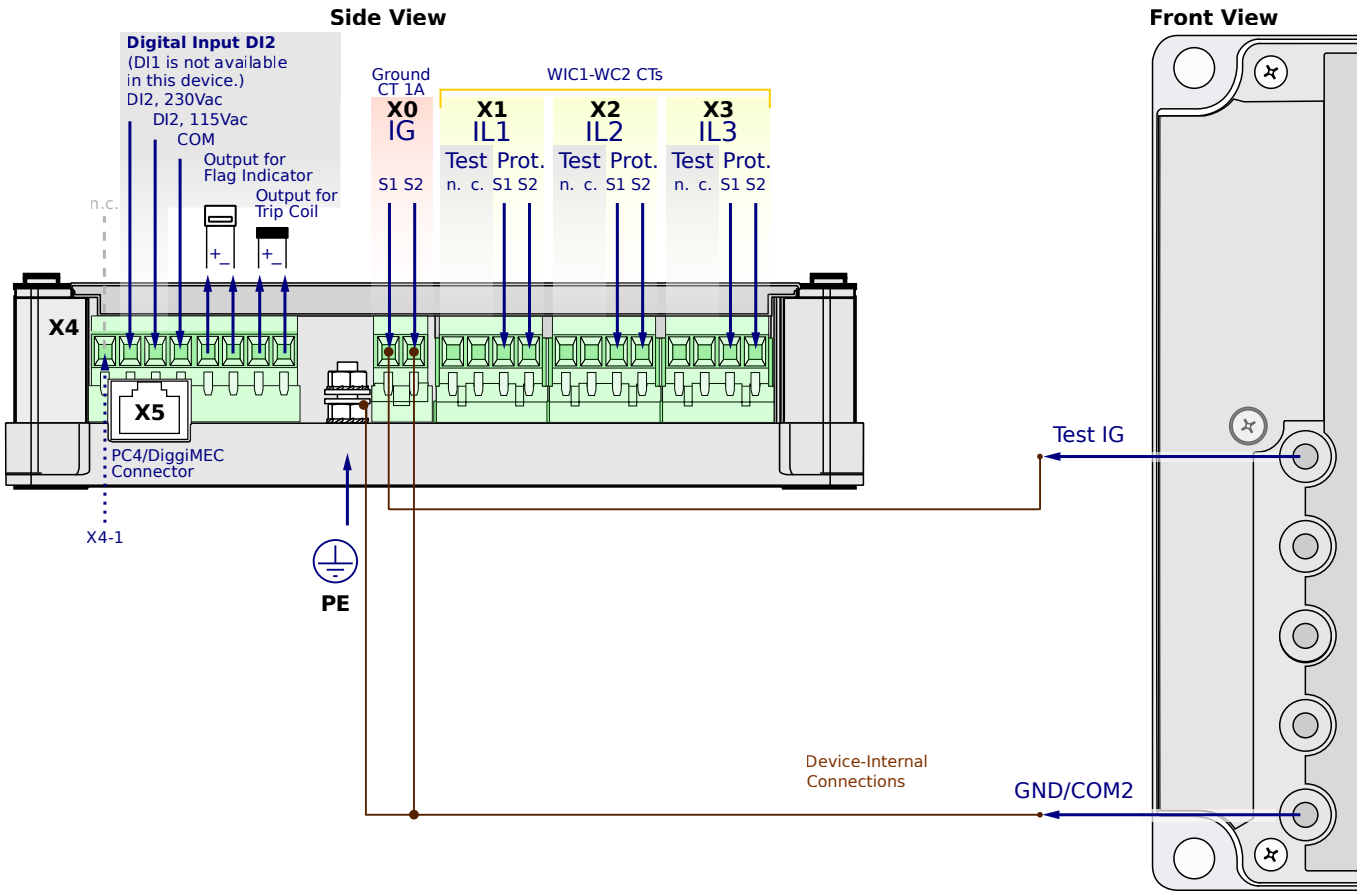


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2PA0

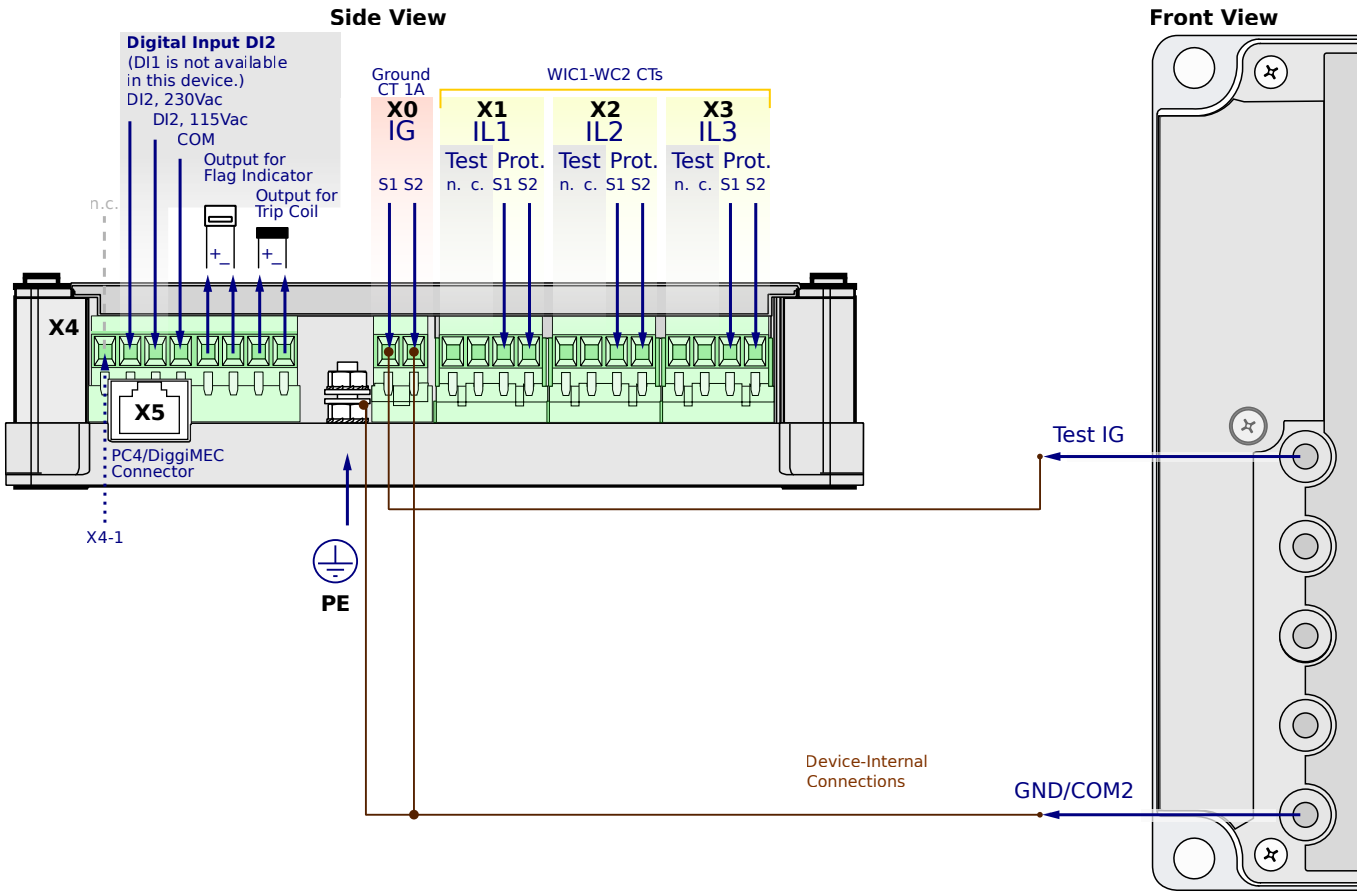


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6FC2PAH

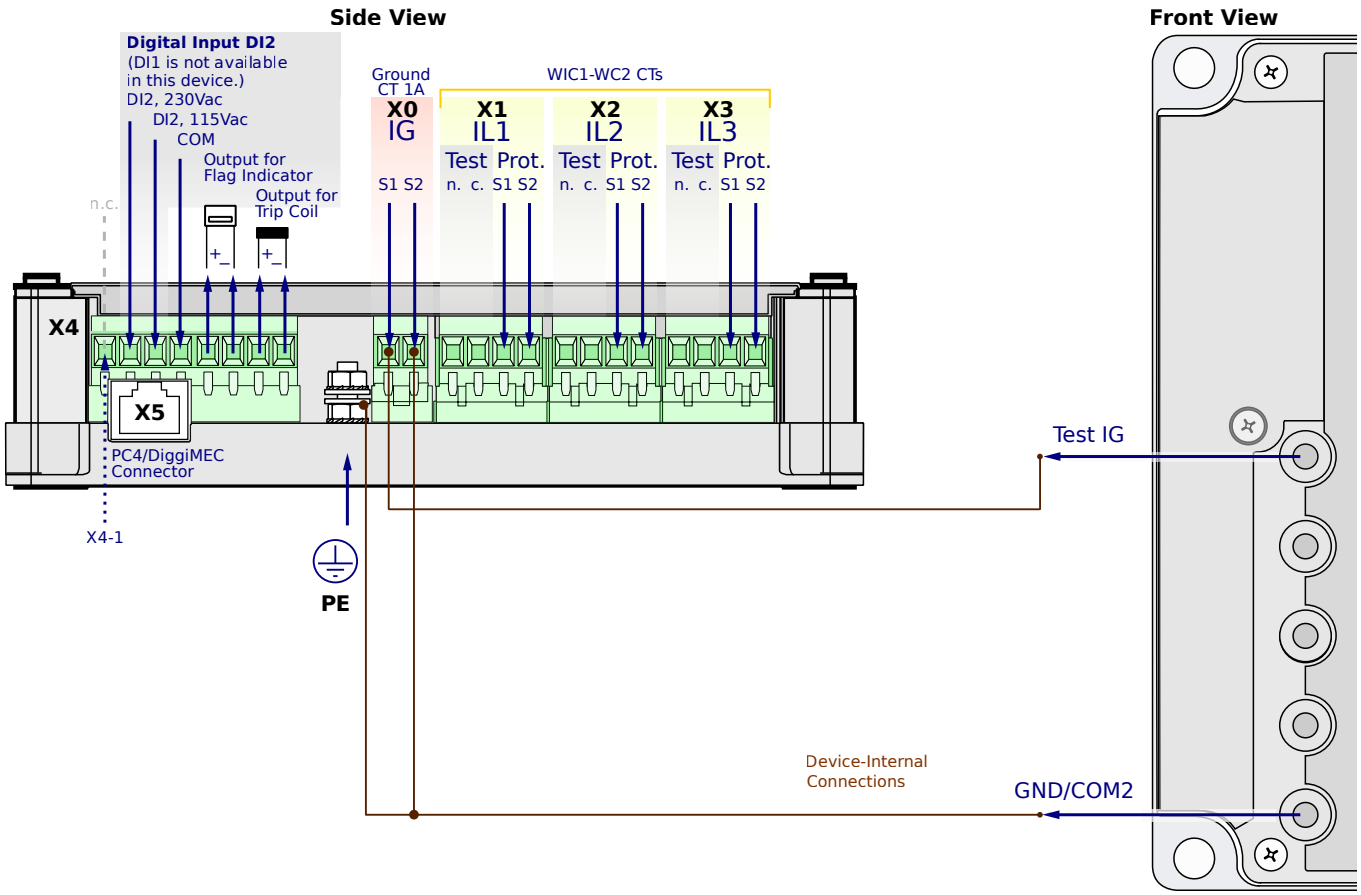


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1SA0

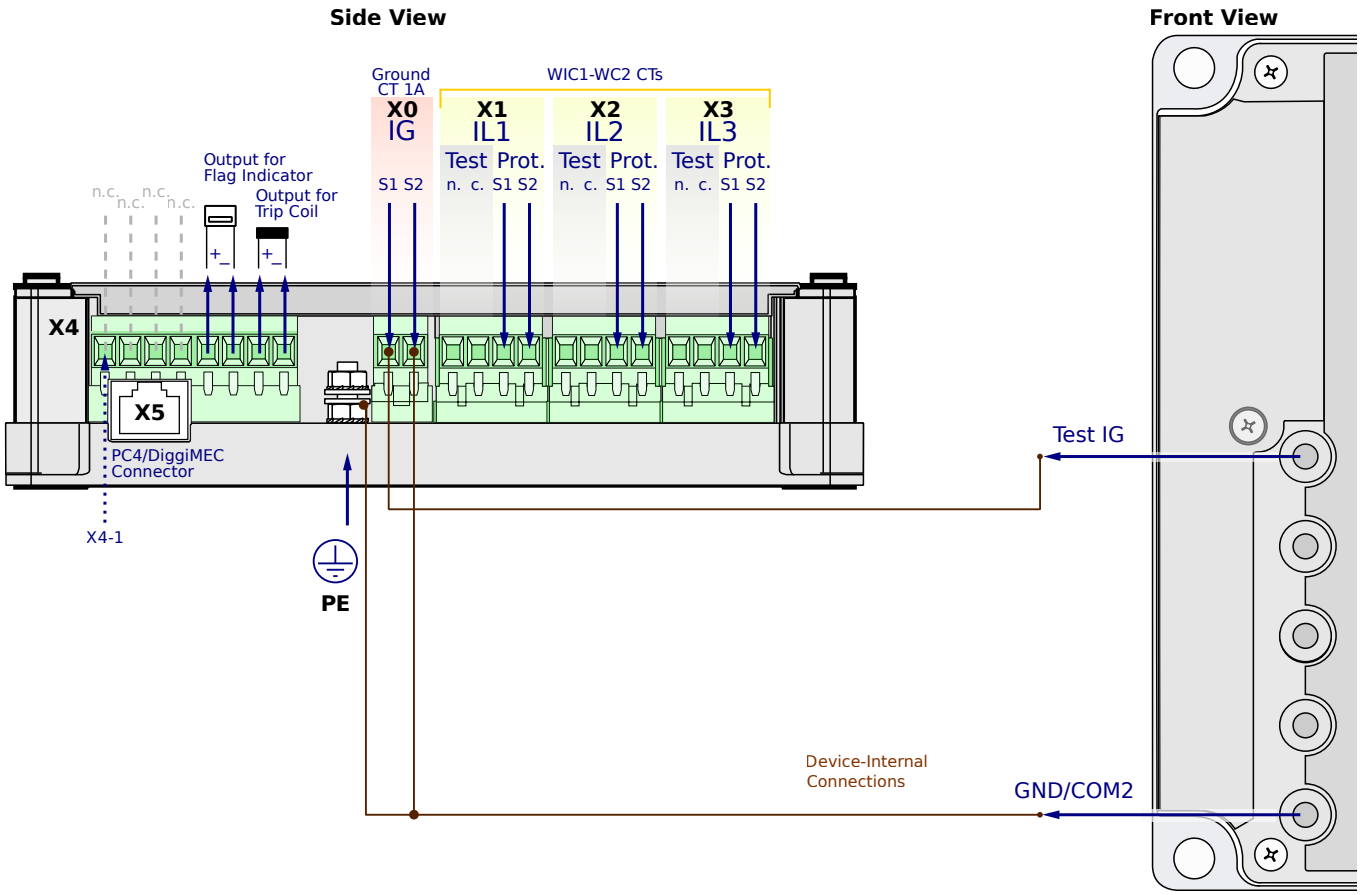


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1SAH

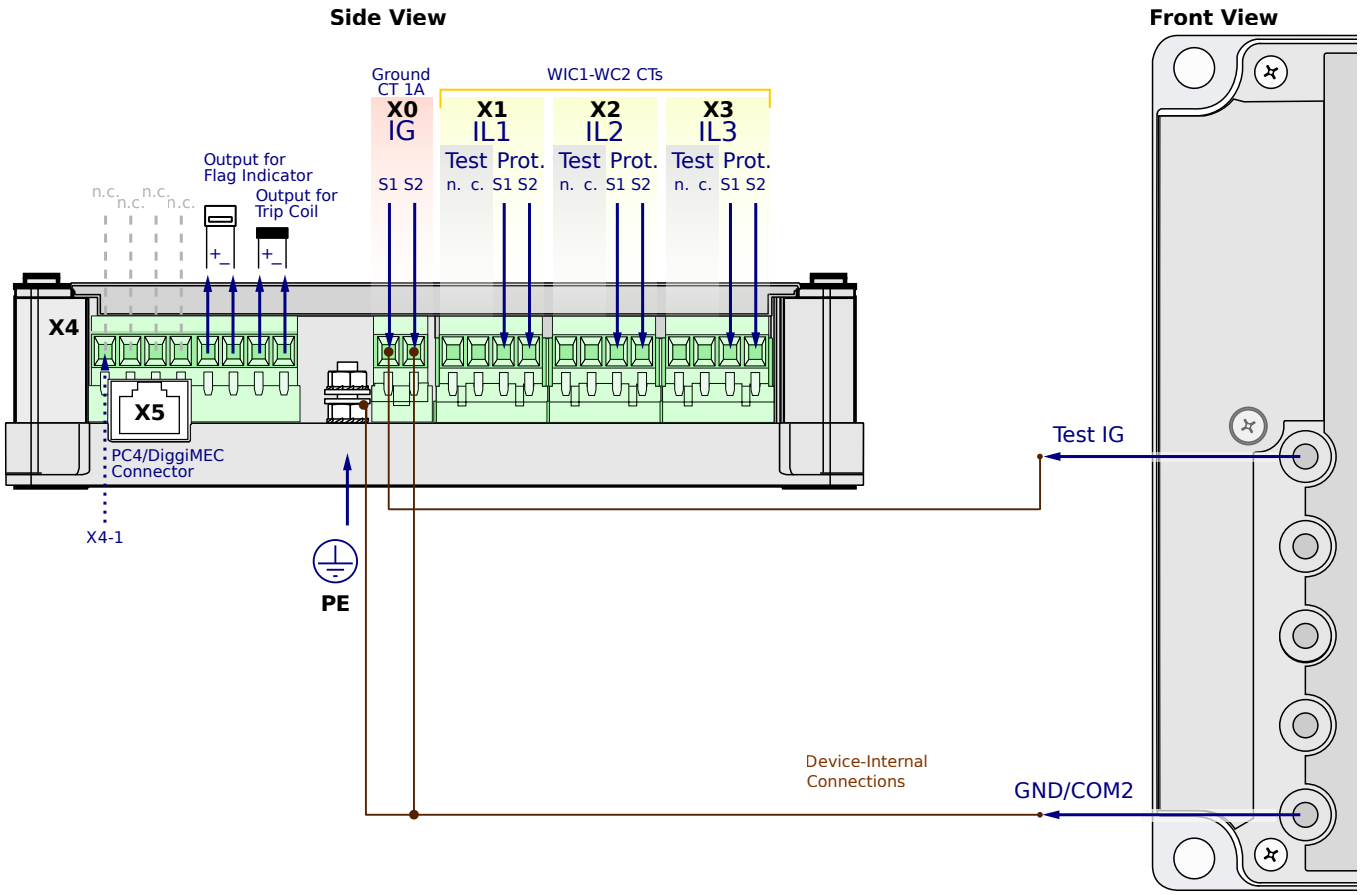


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1AA0

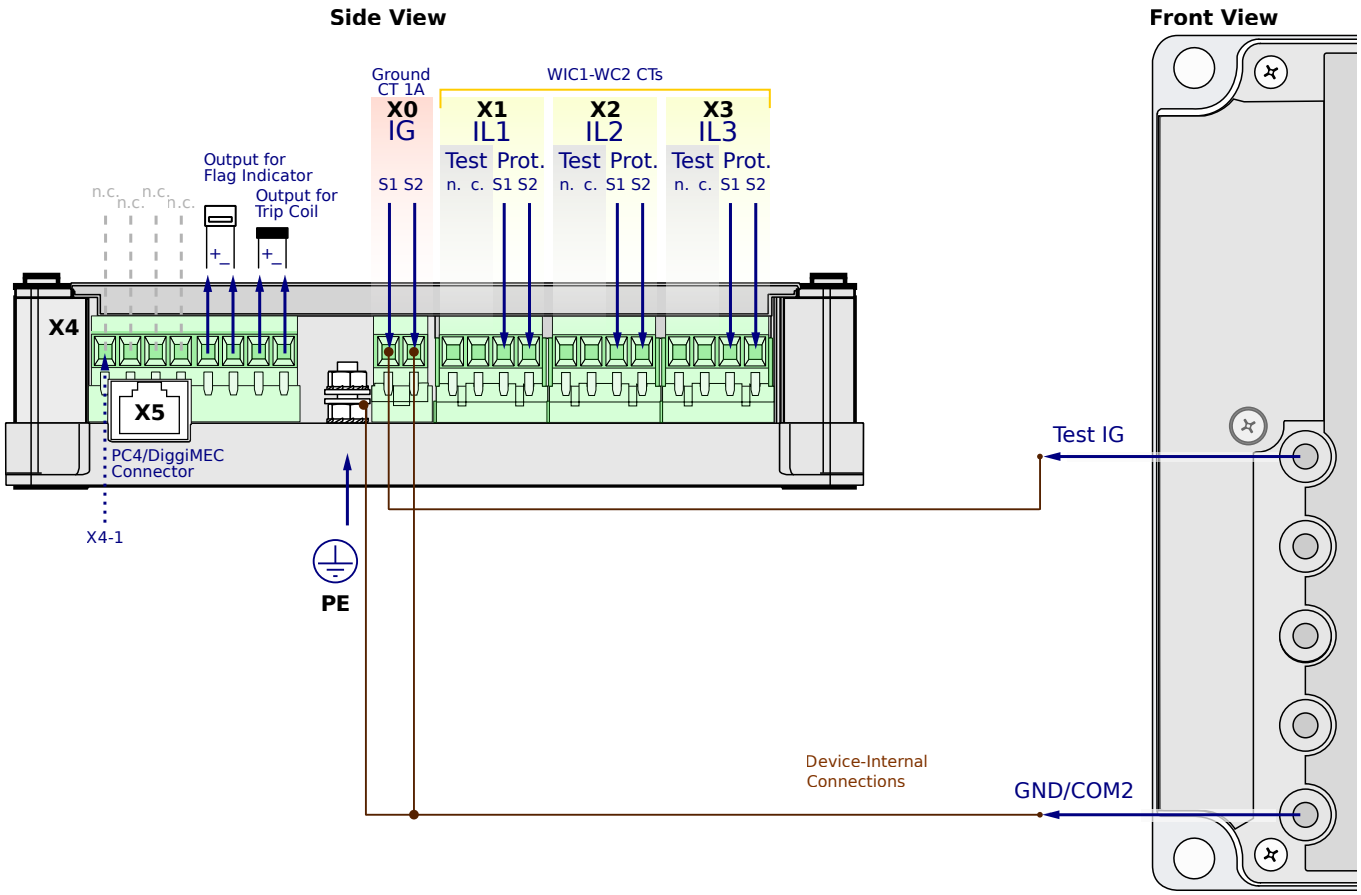


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1AAH

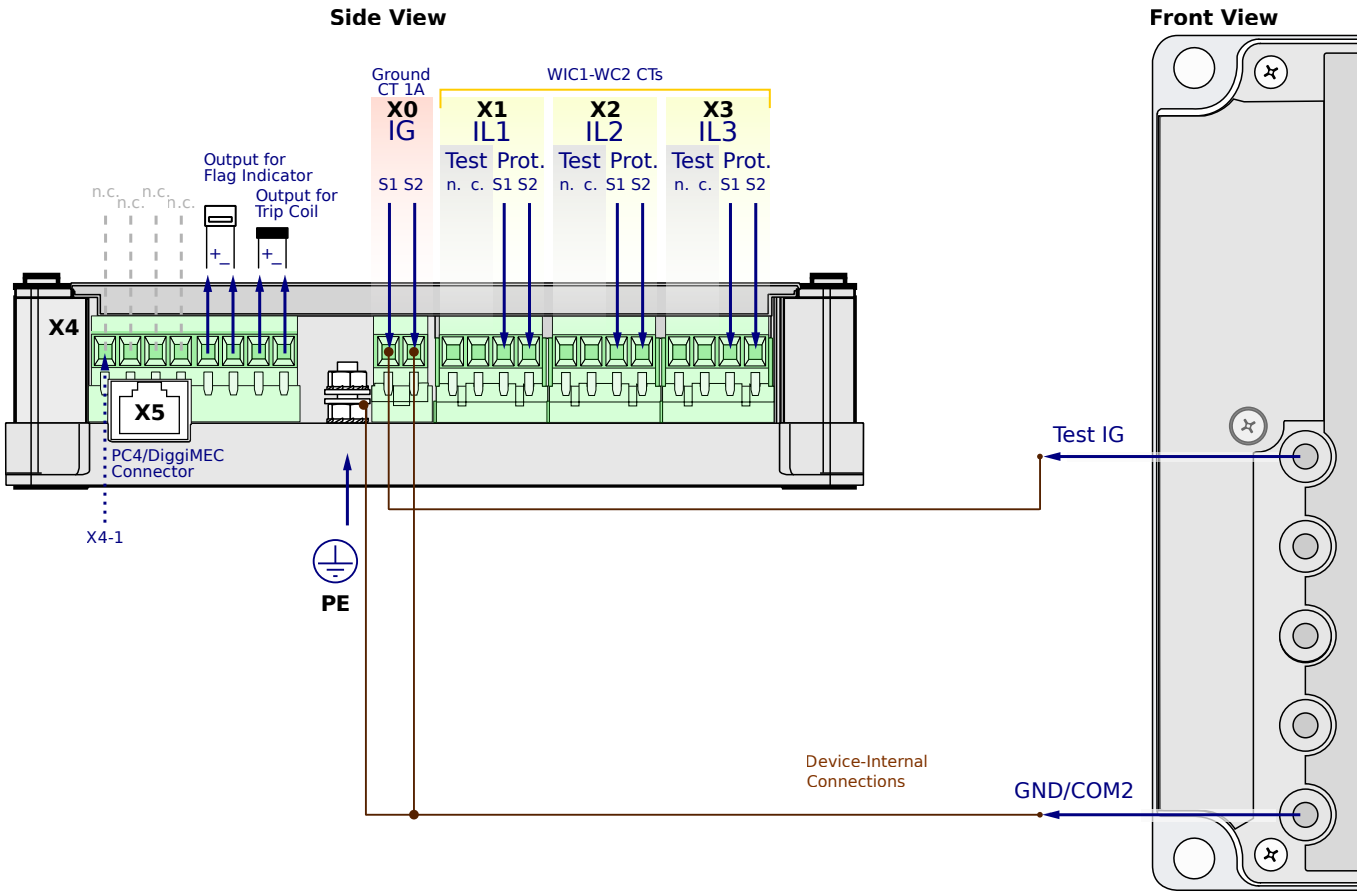


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1PA0

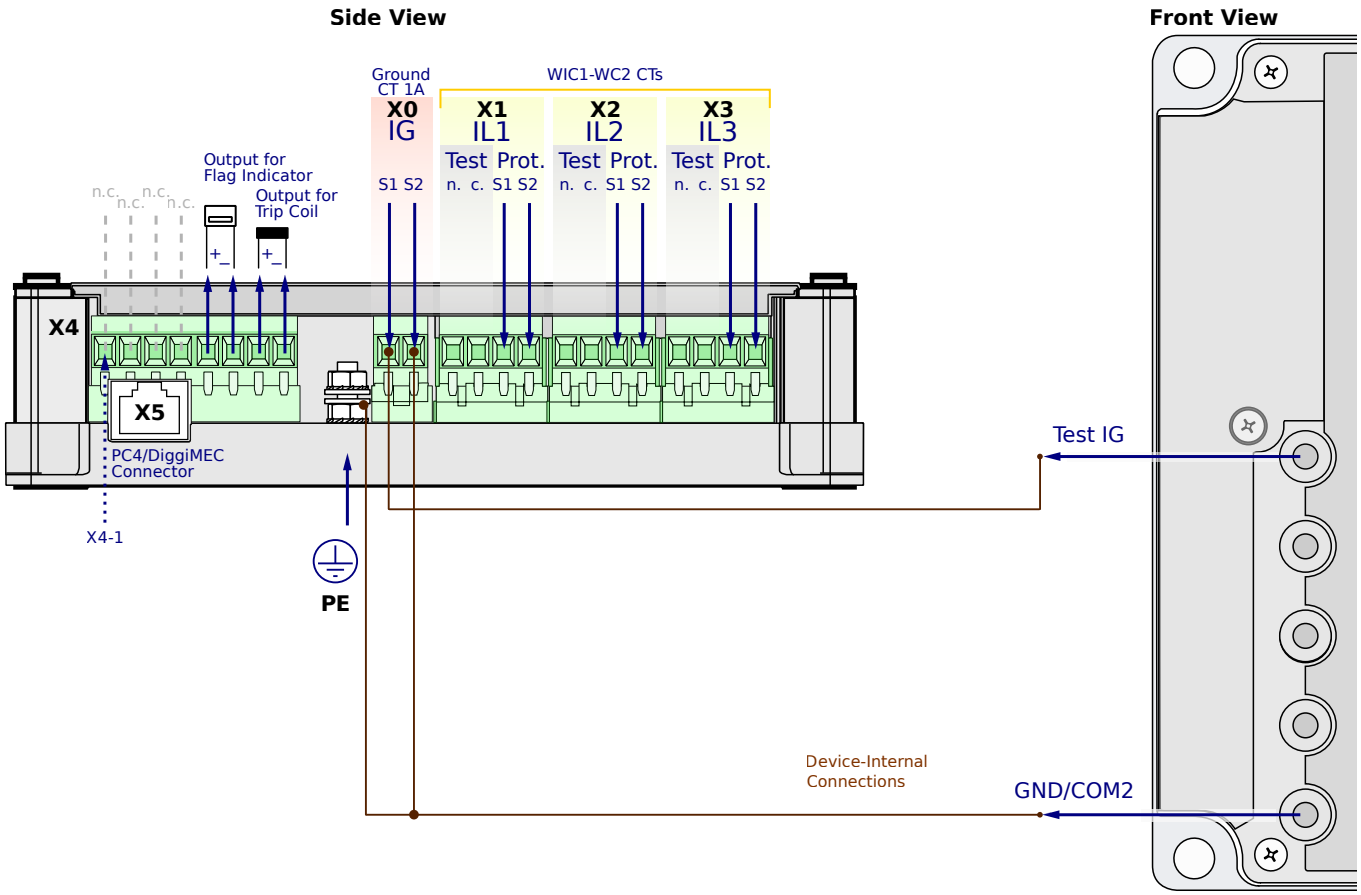


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN1PAH

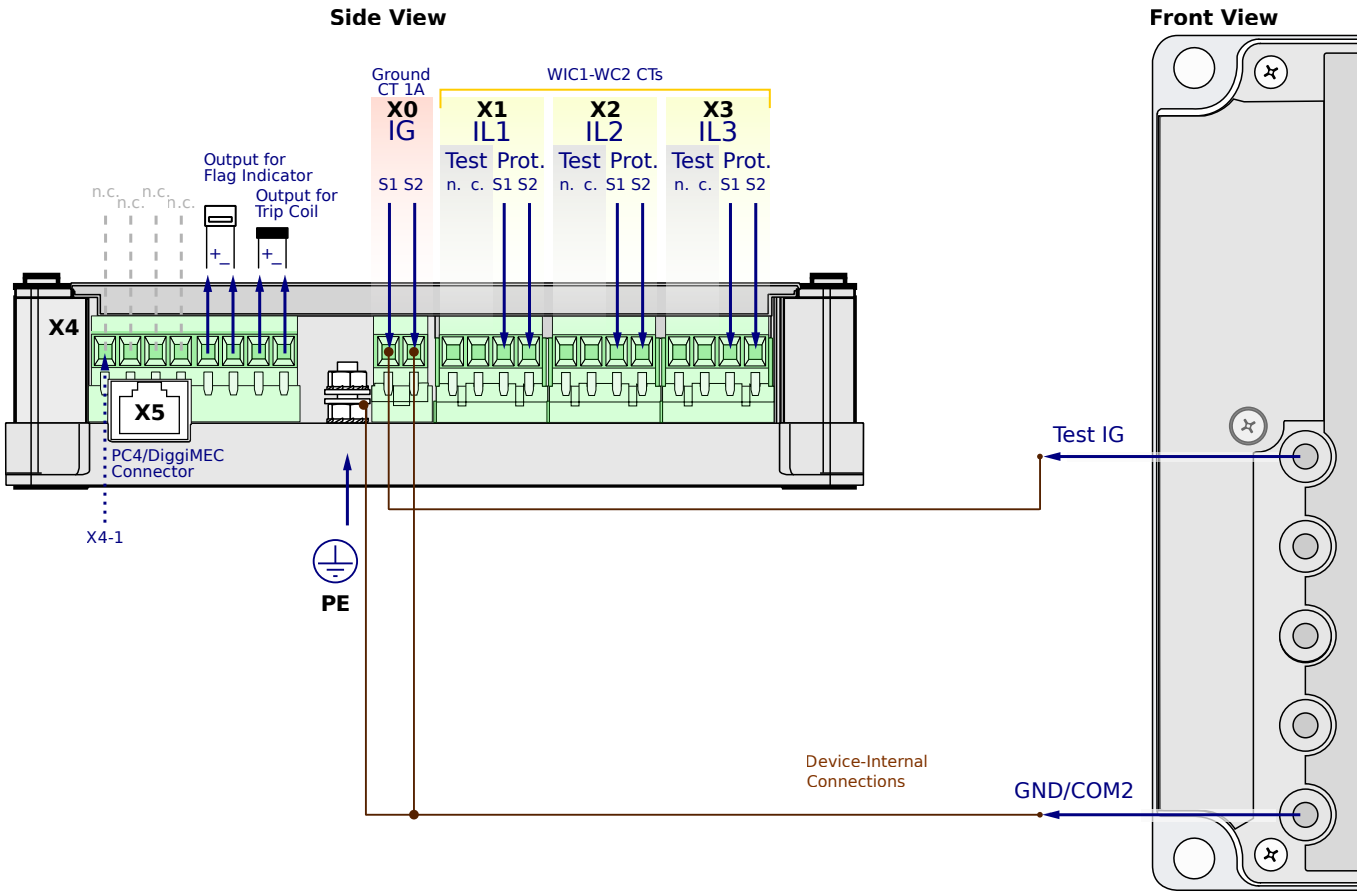


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2SA0

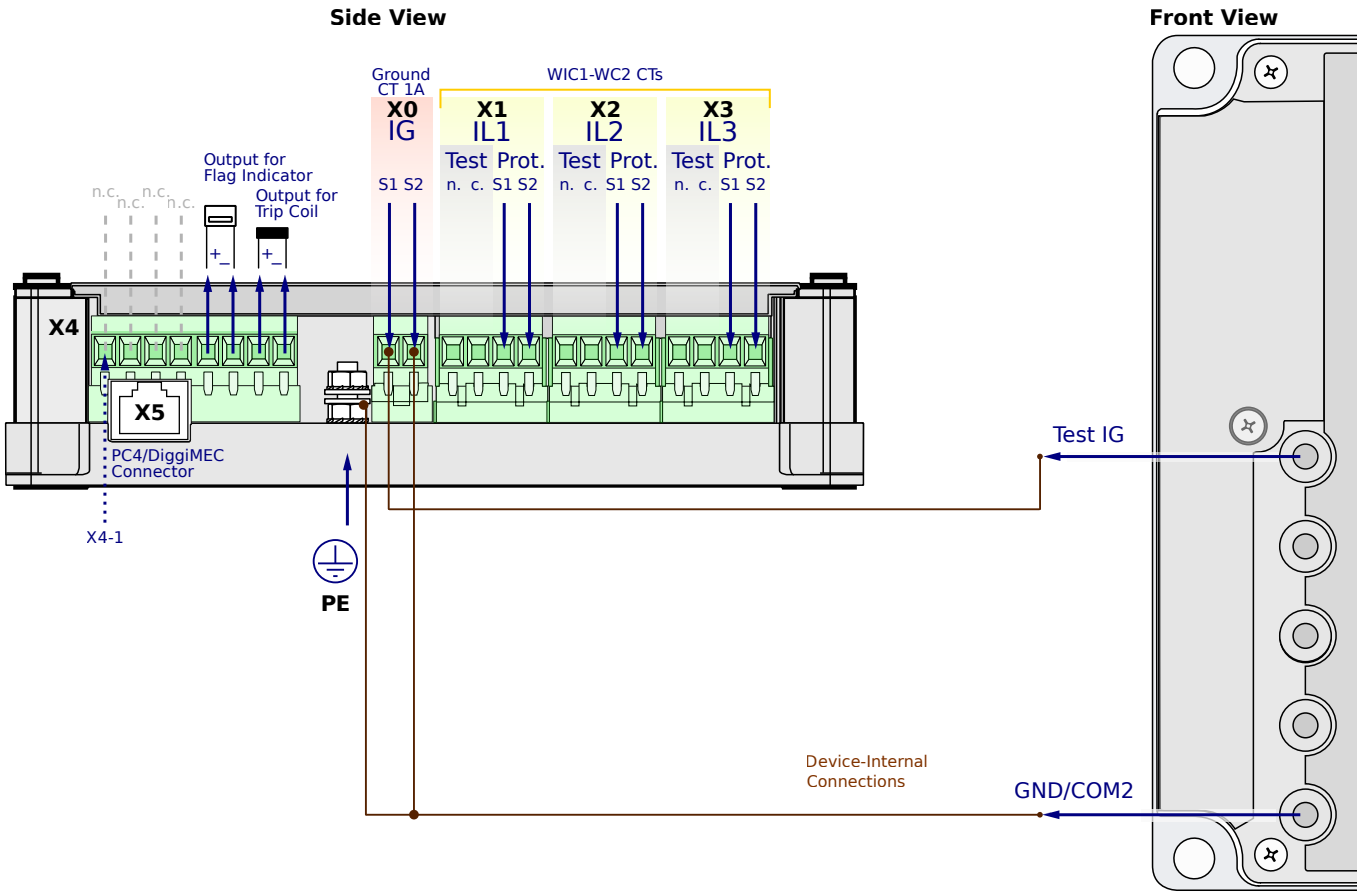


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2SAH

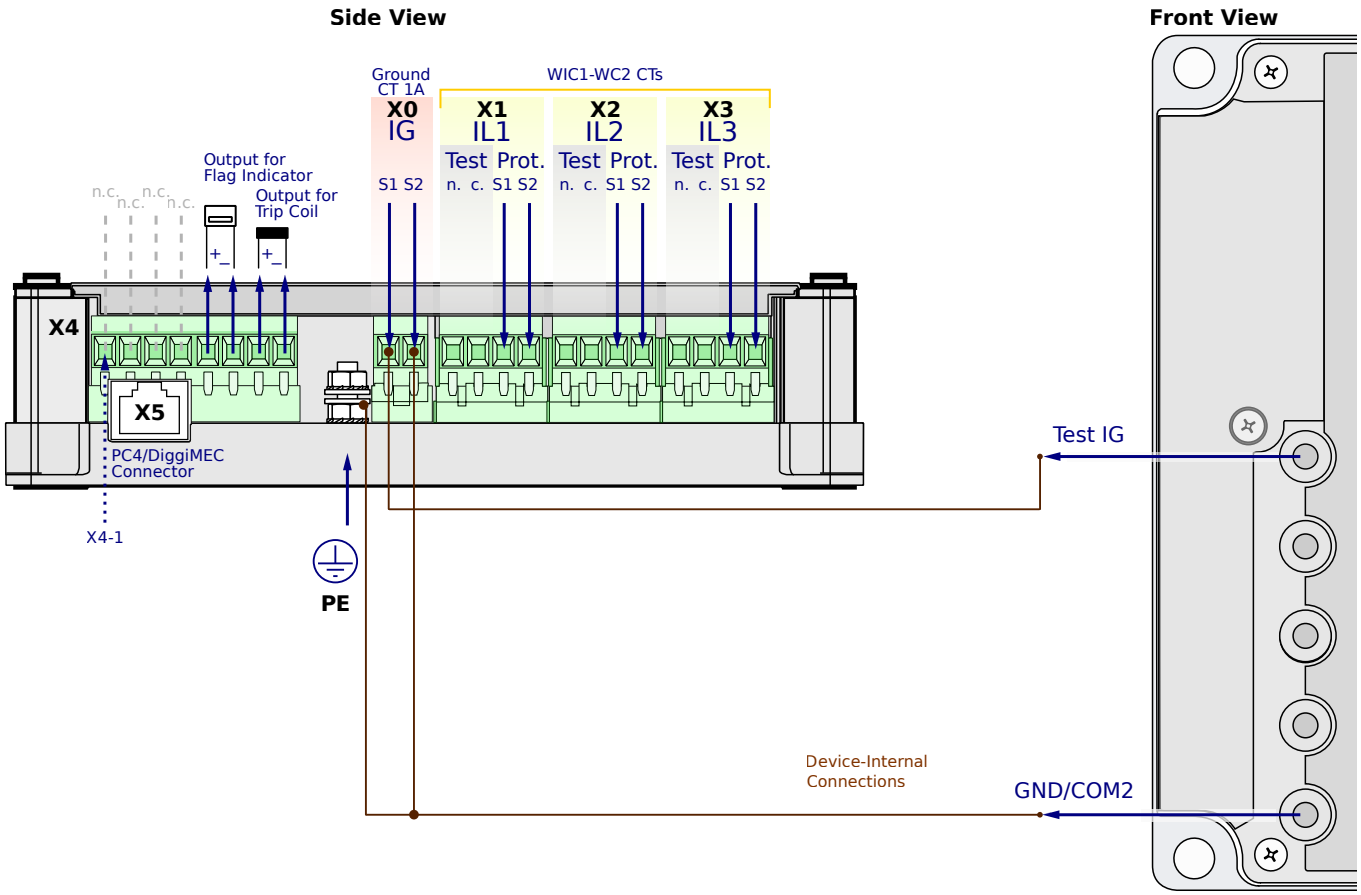


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2AA0

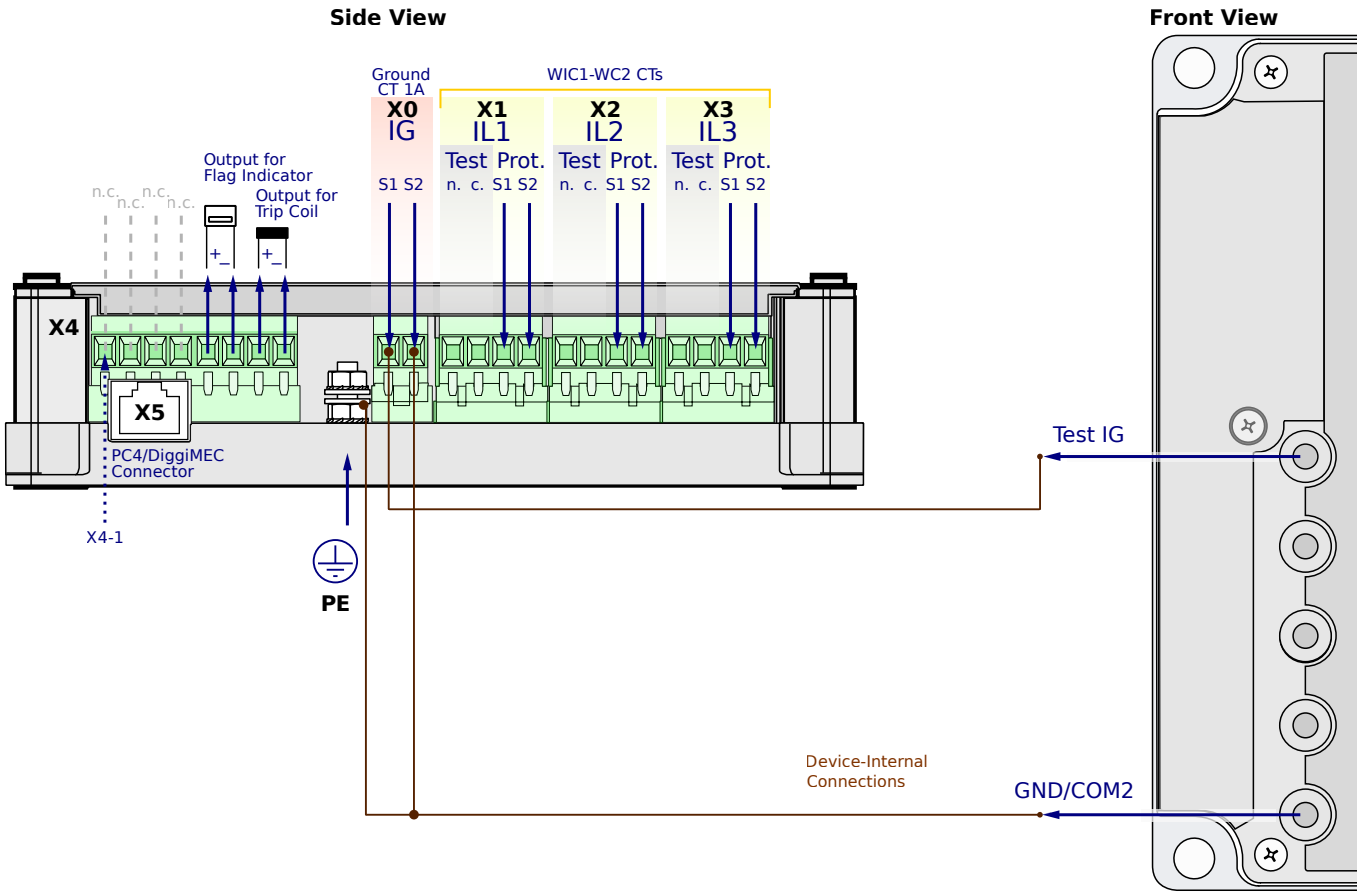


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2AAH

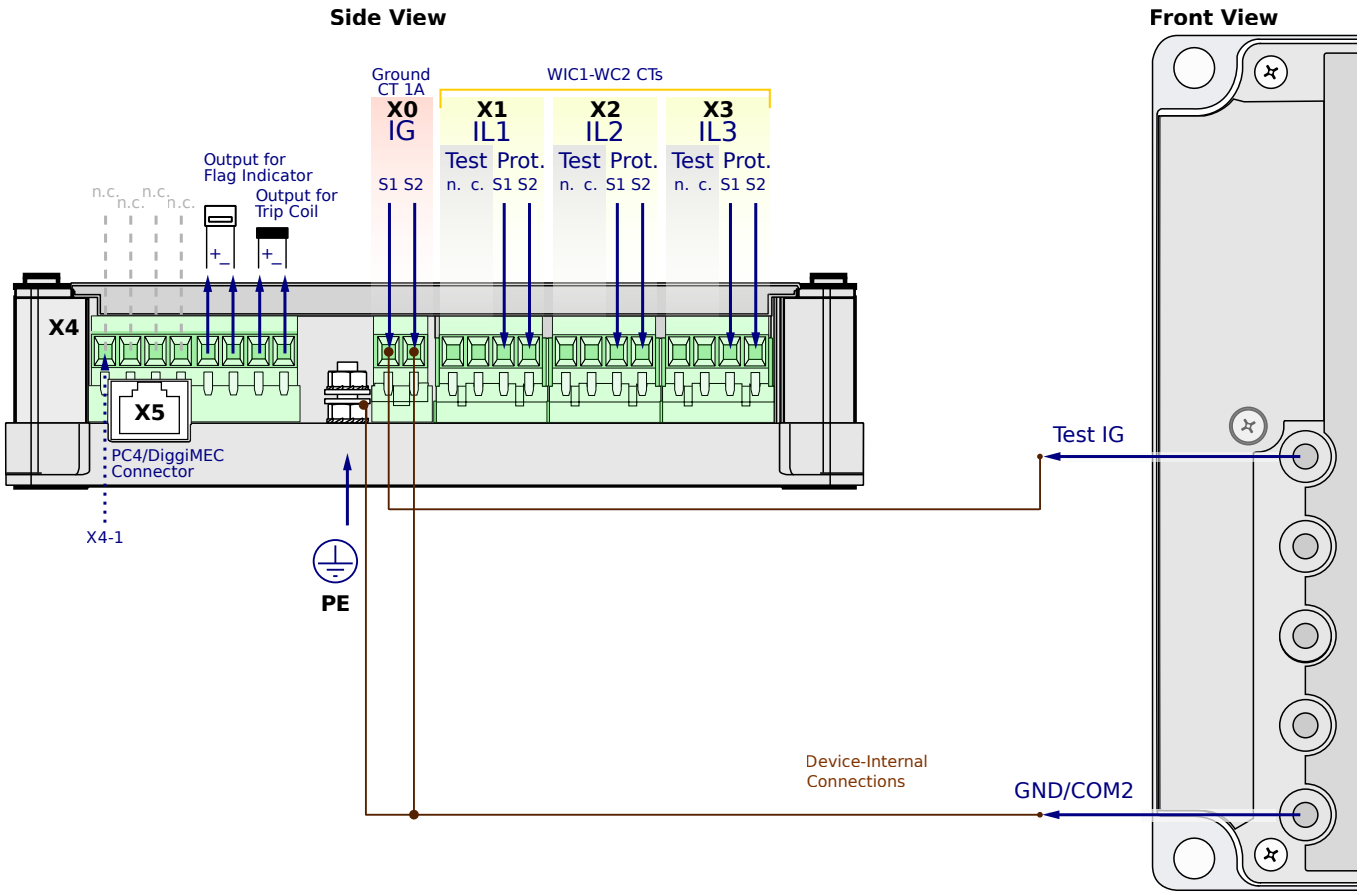


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

- Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2PA0

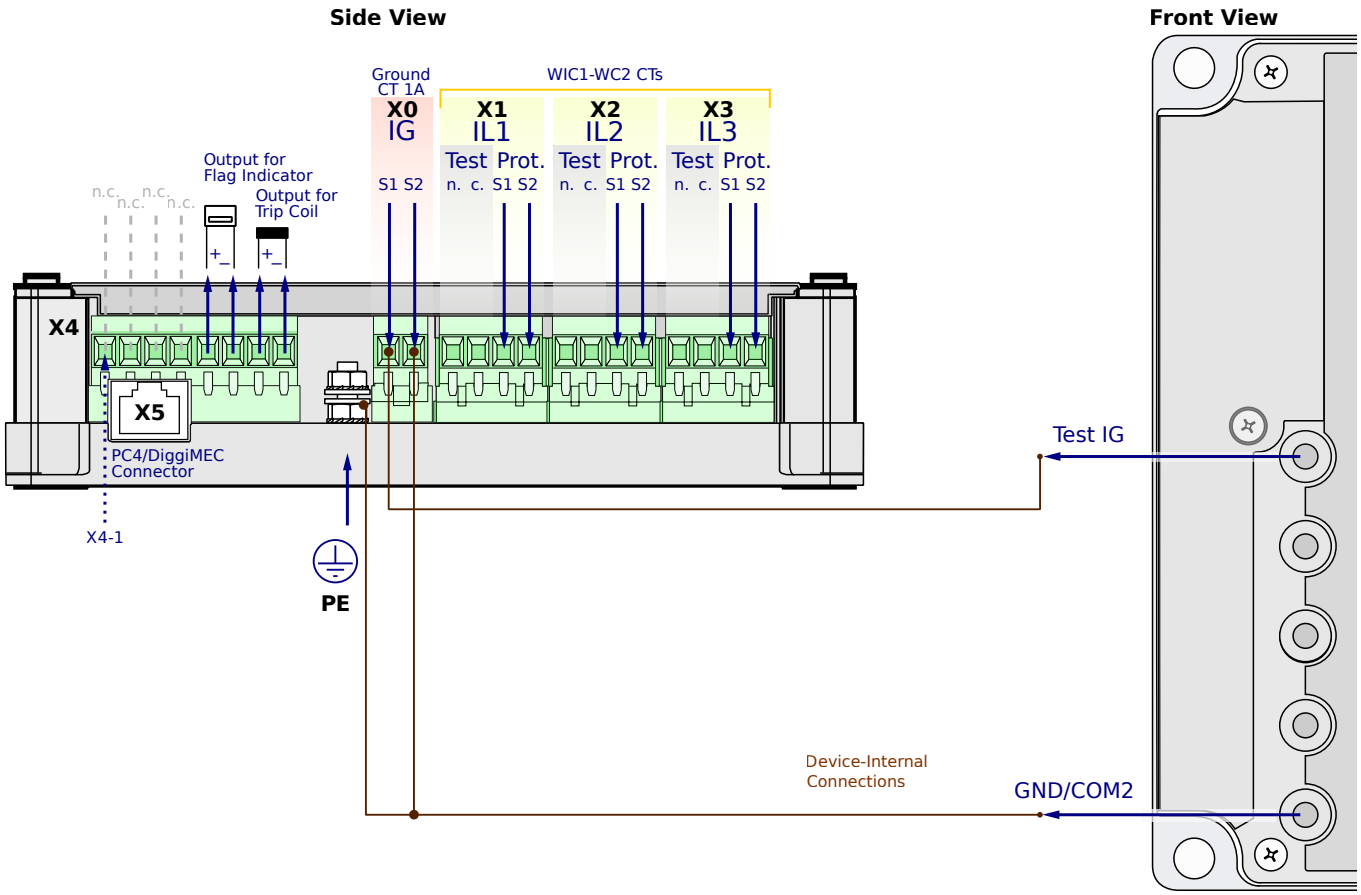


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CN2PAH

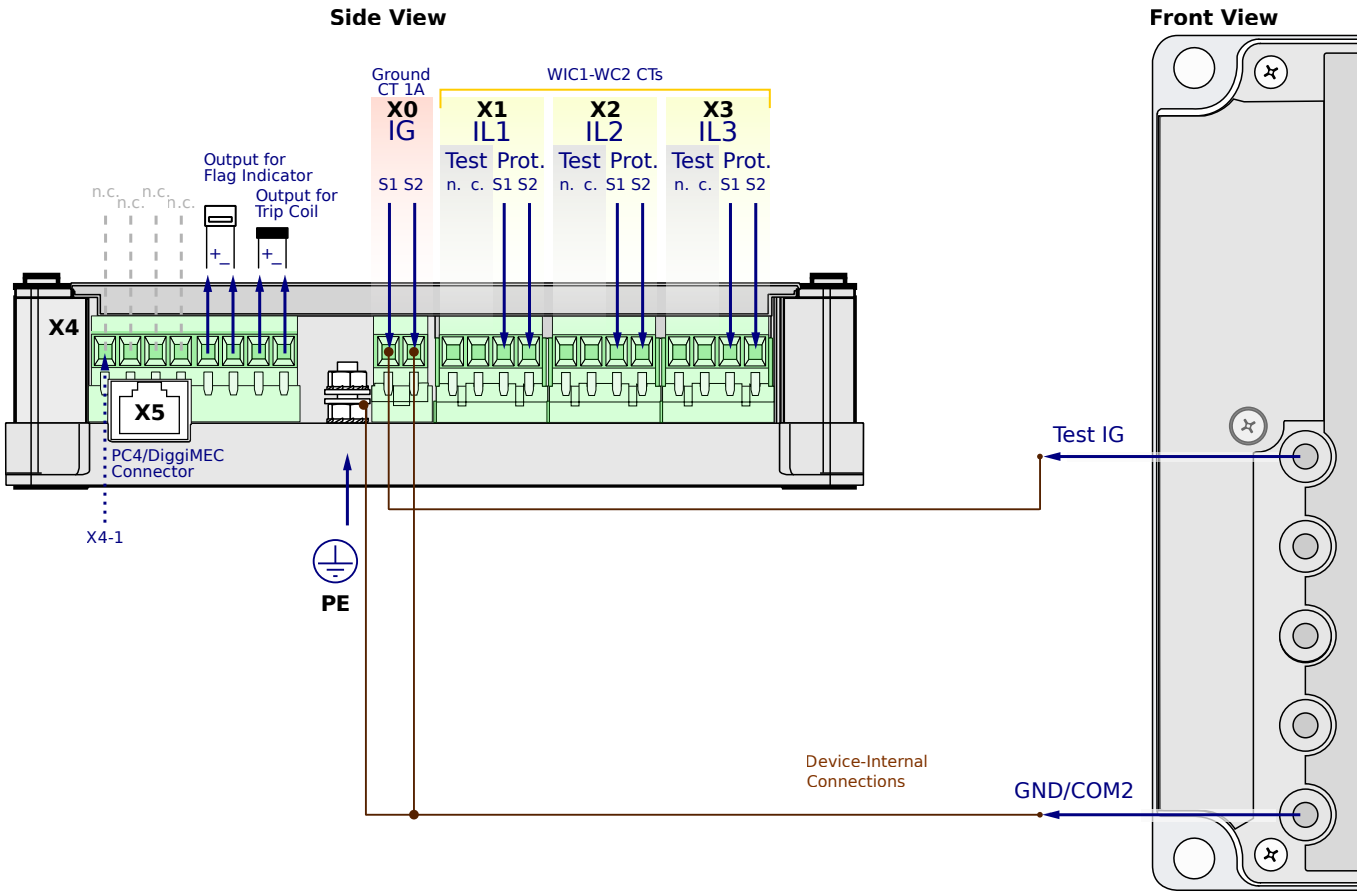


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1SA0

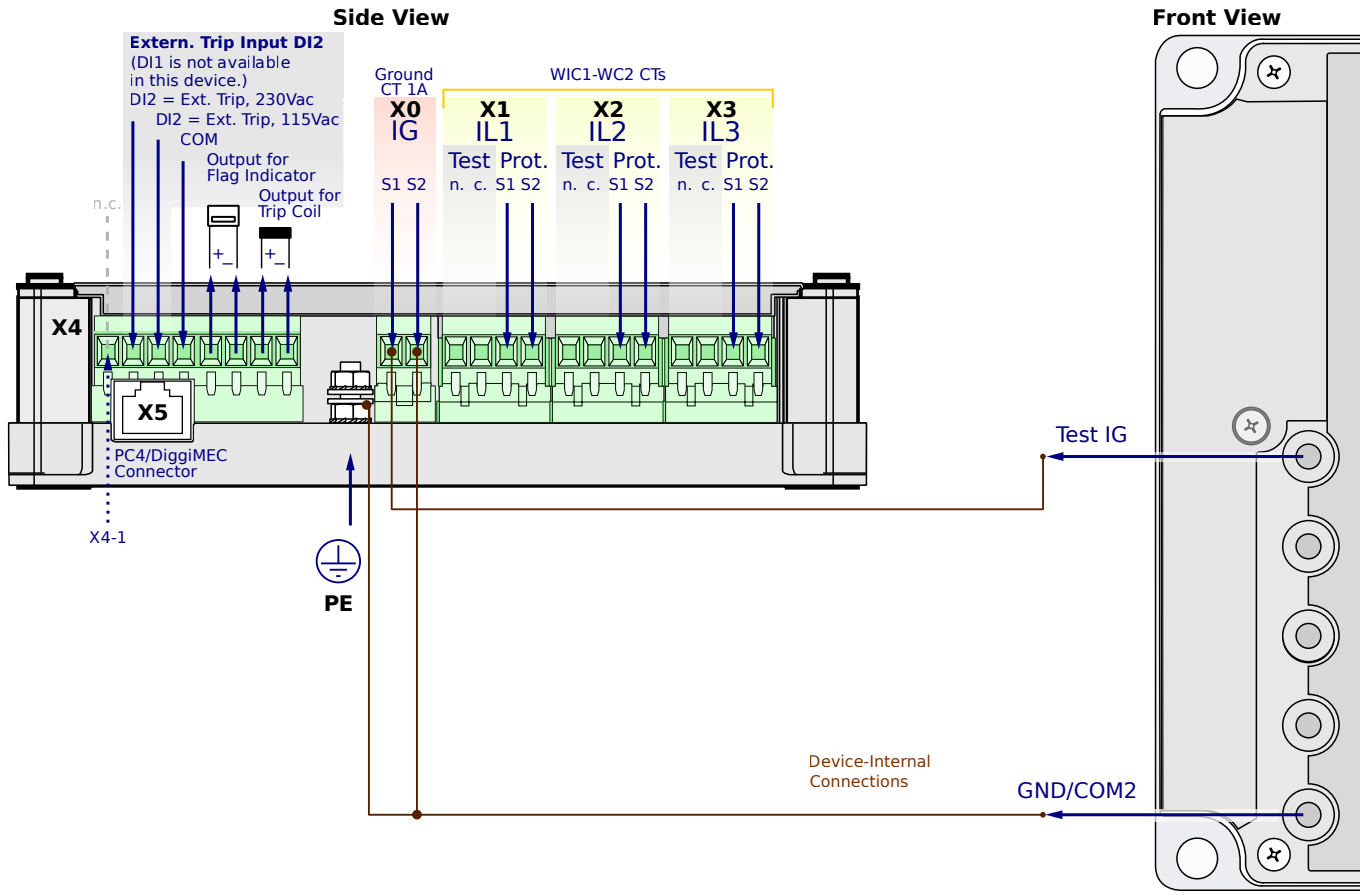


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1SAH

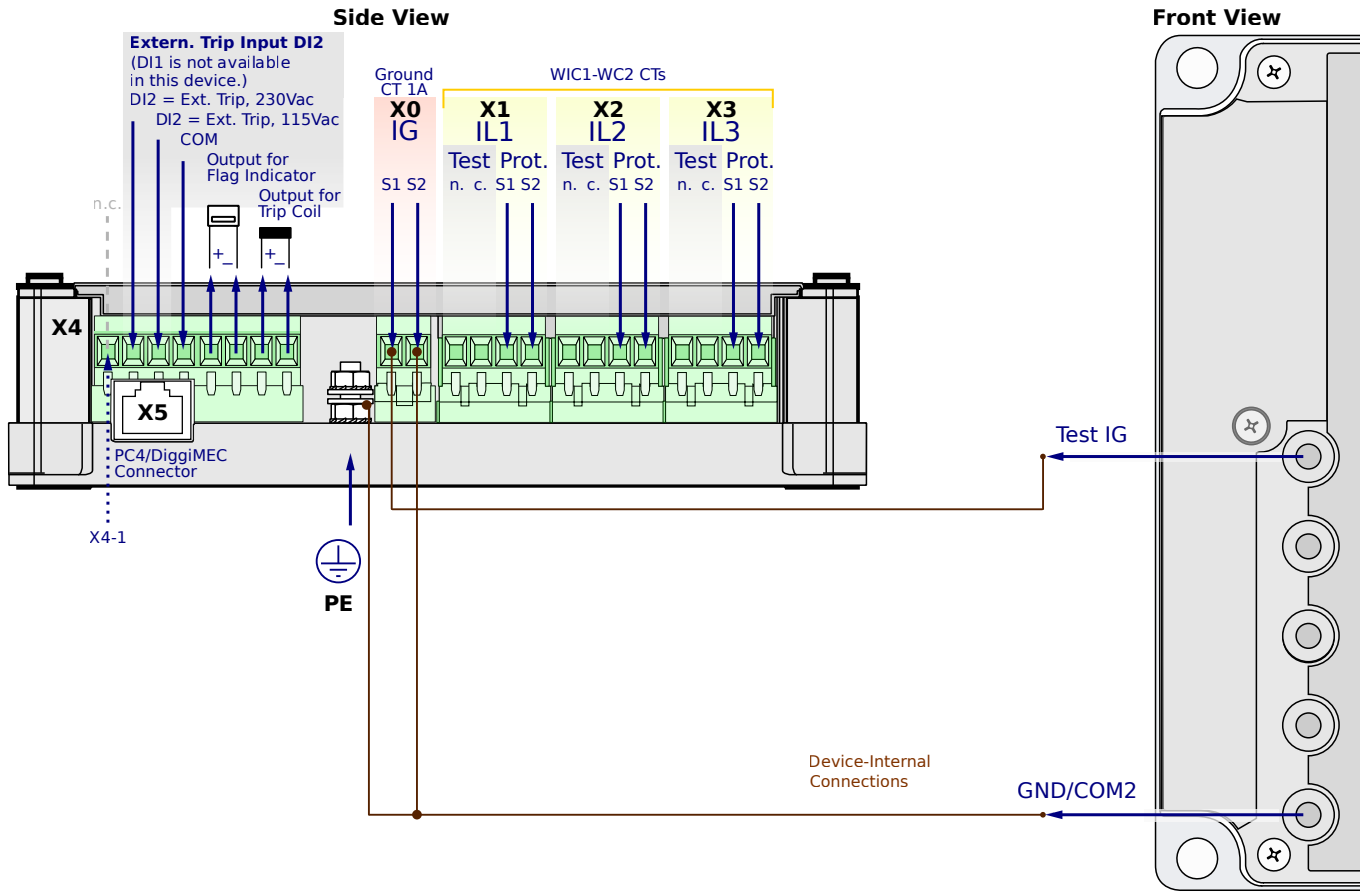


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1AA0

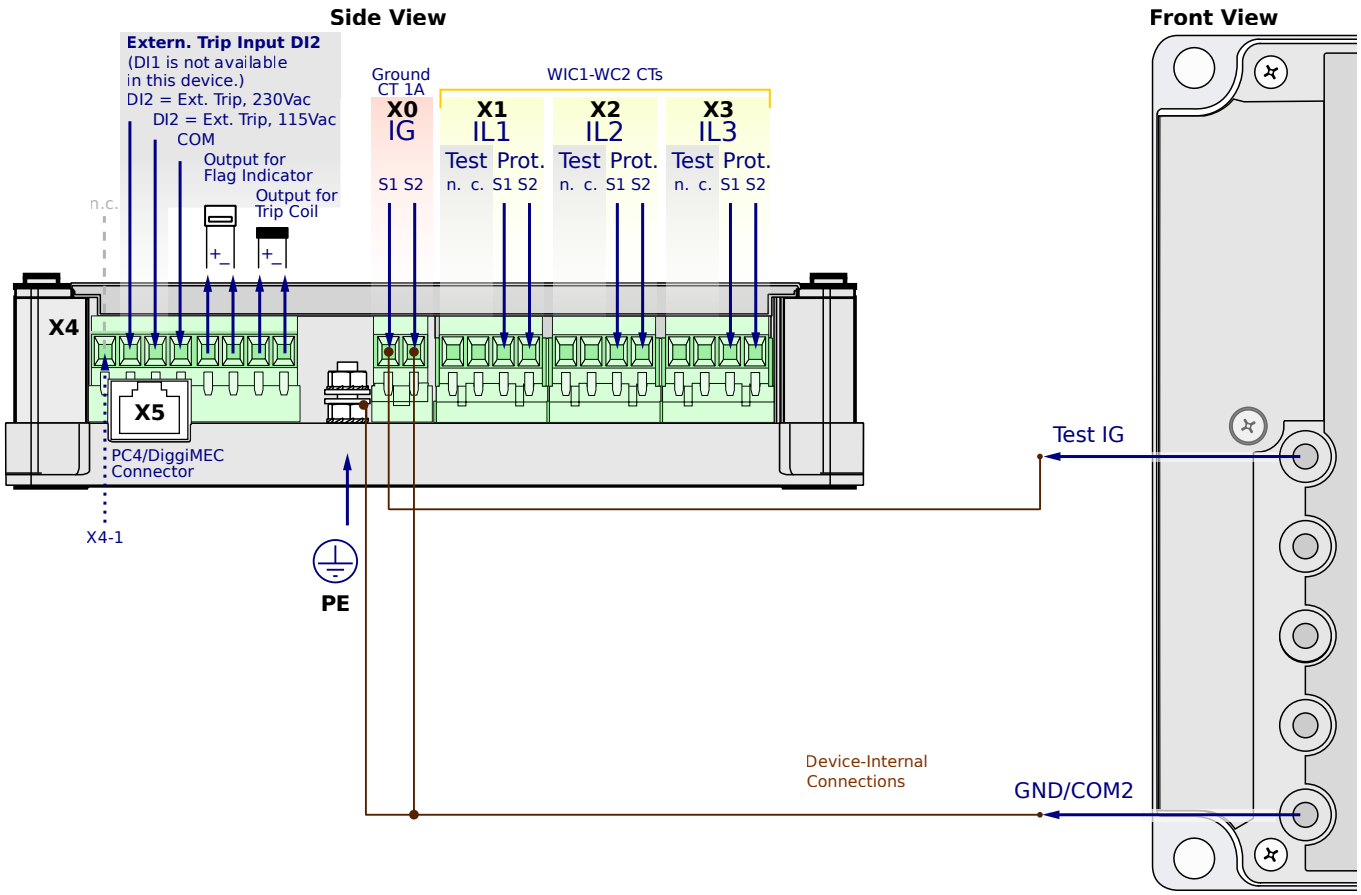


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1AAH

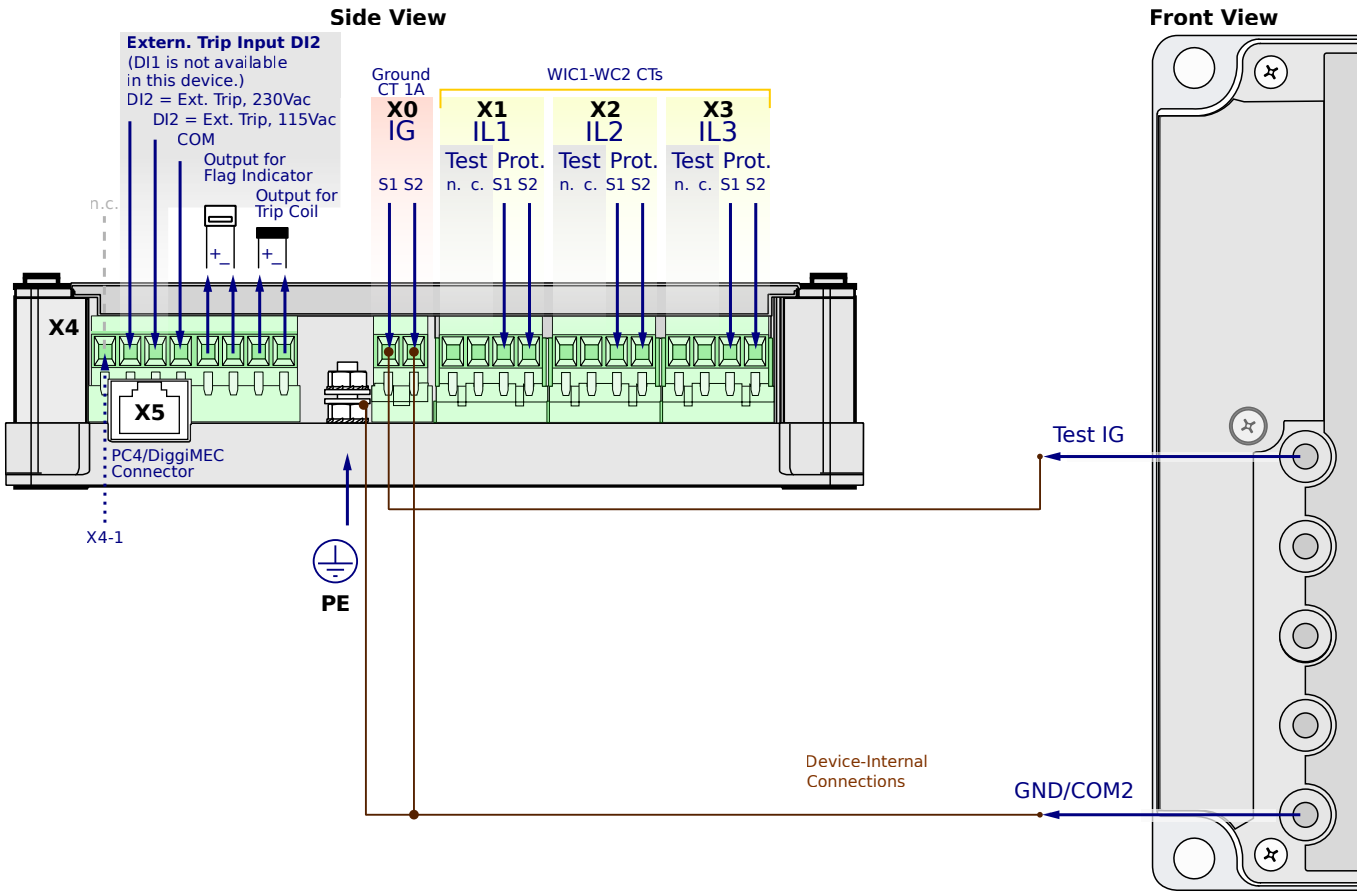


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1PA0

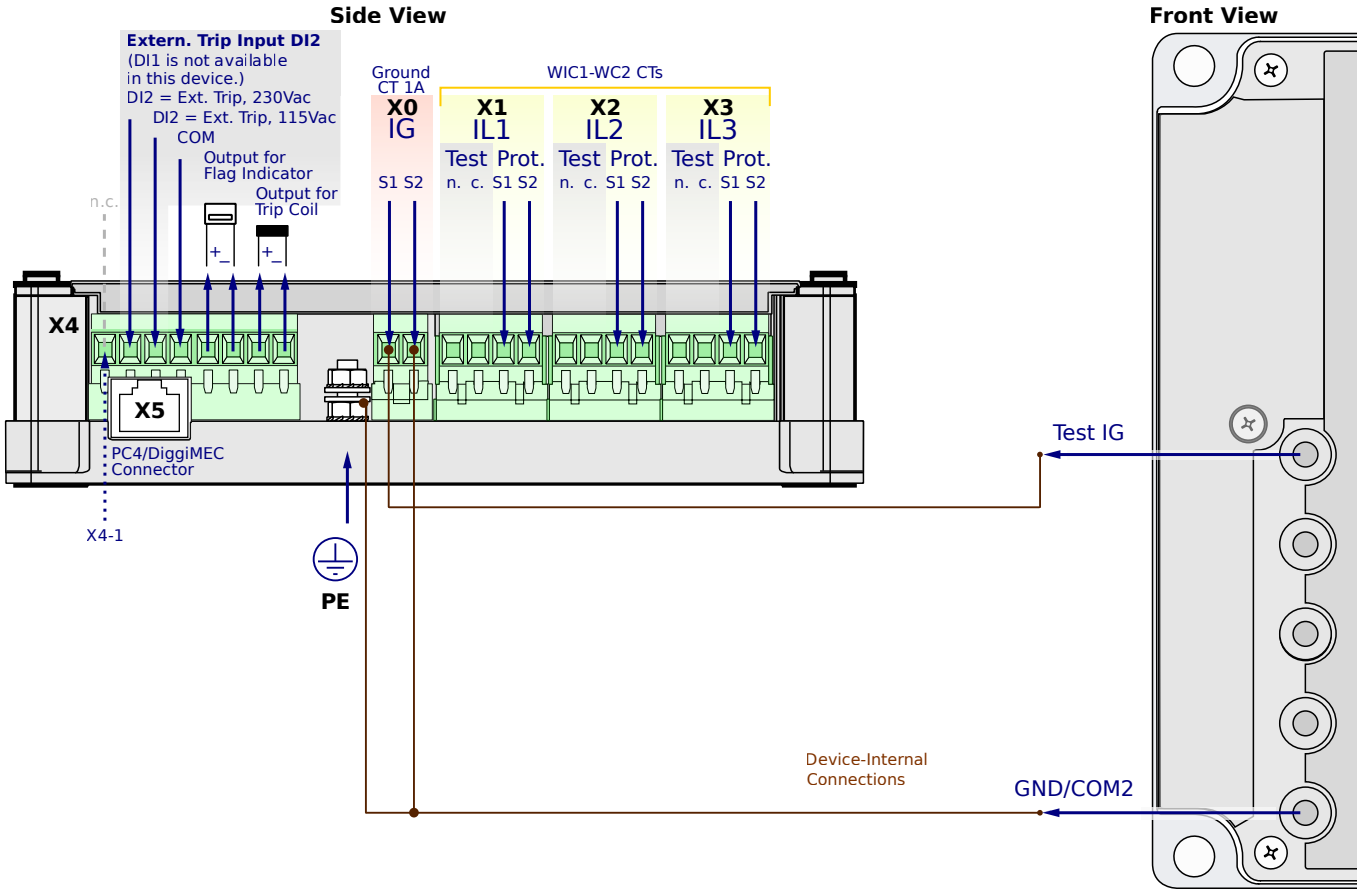


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF1PAH

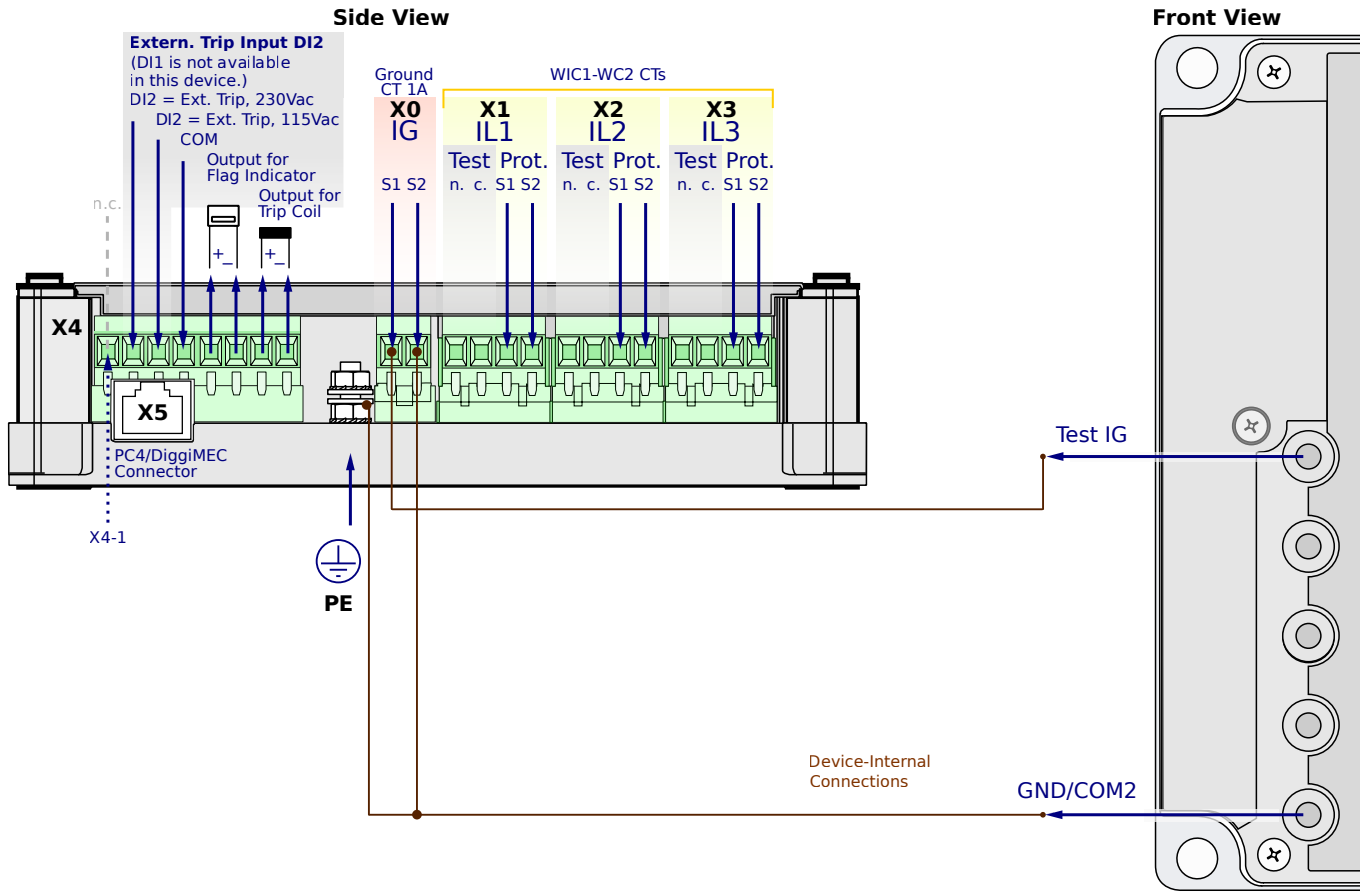


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2SA0

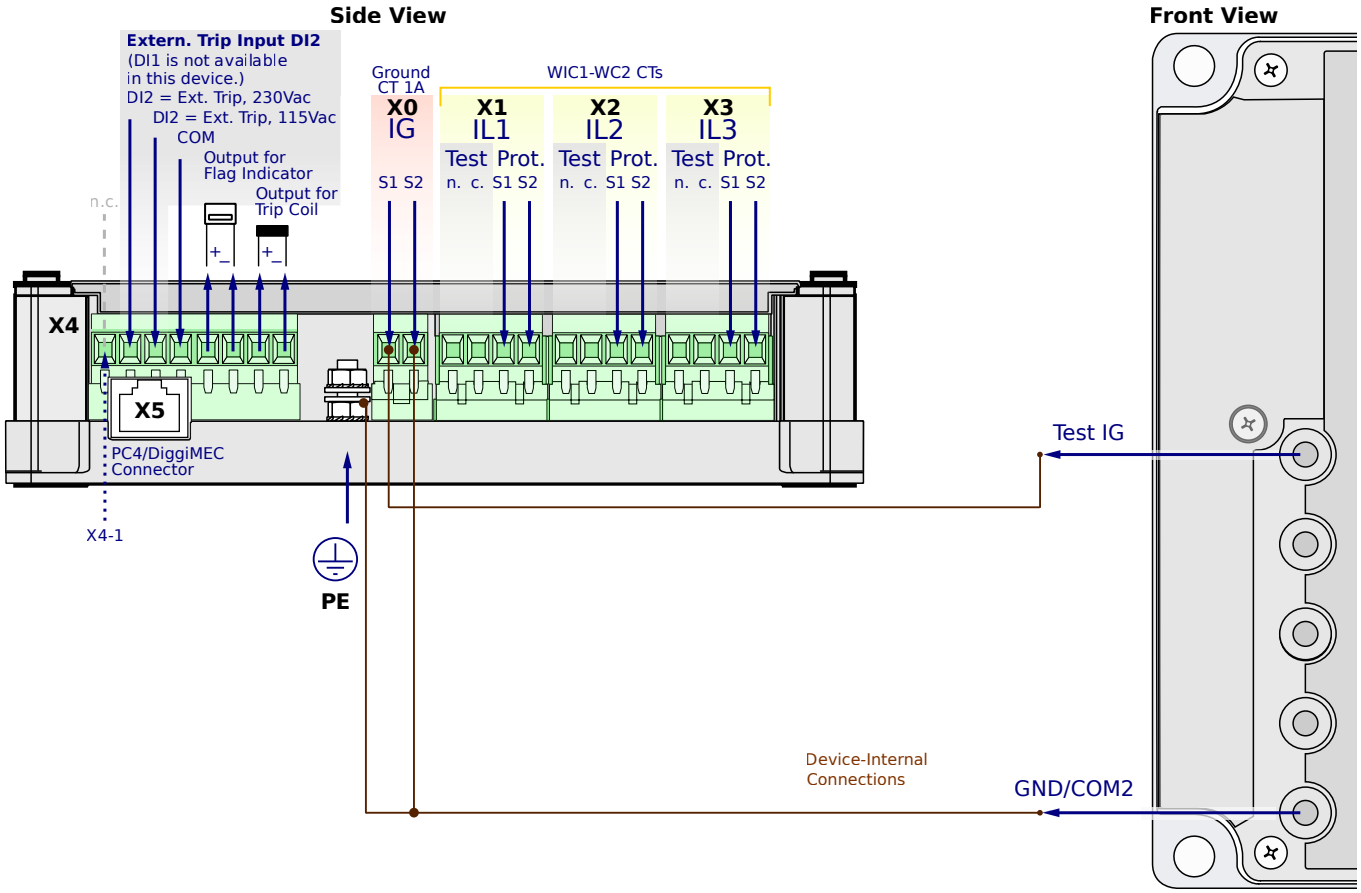


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2SAH

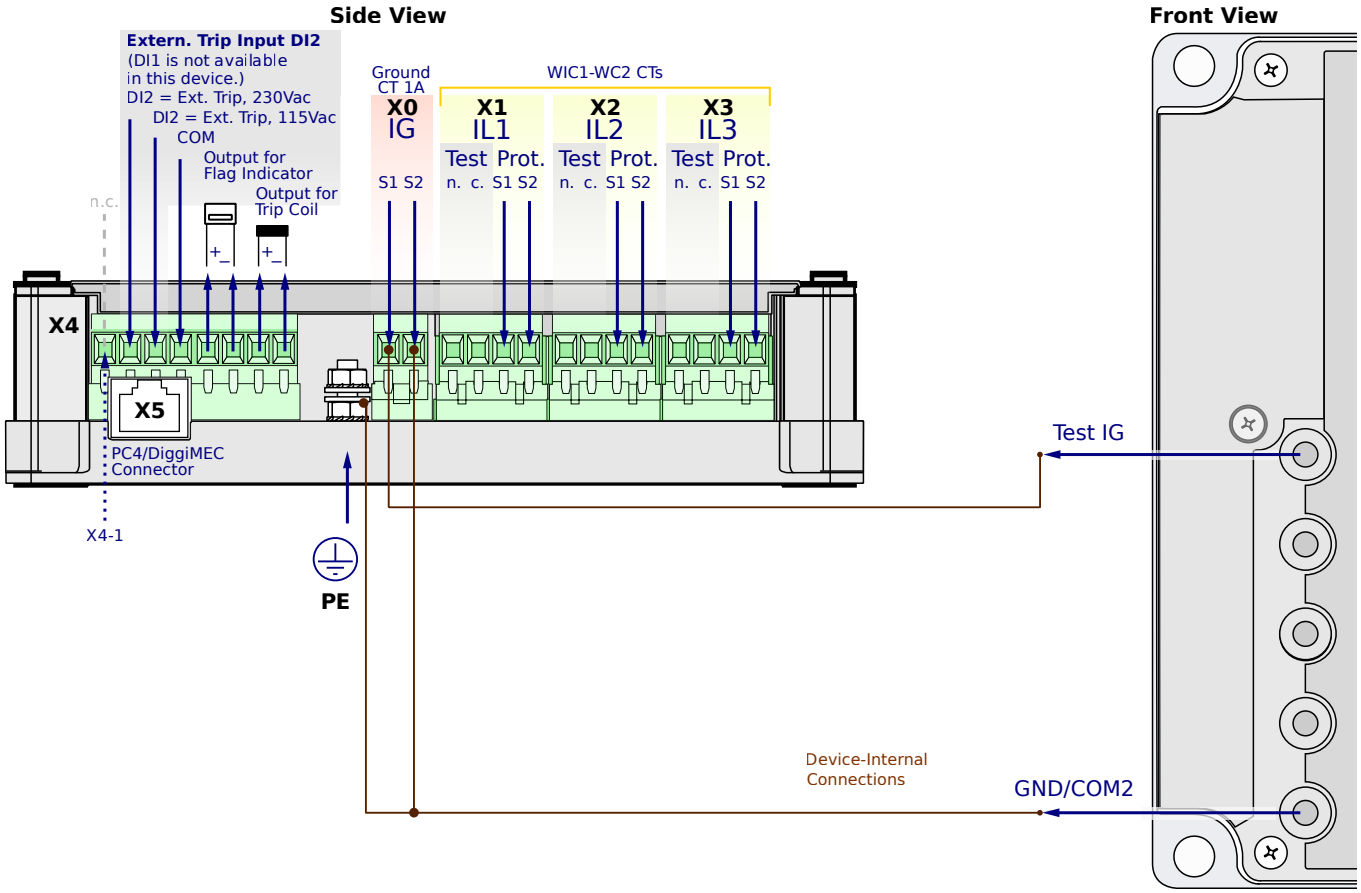


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2AA0

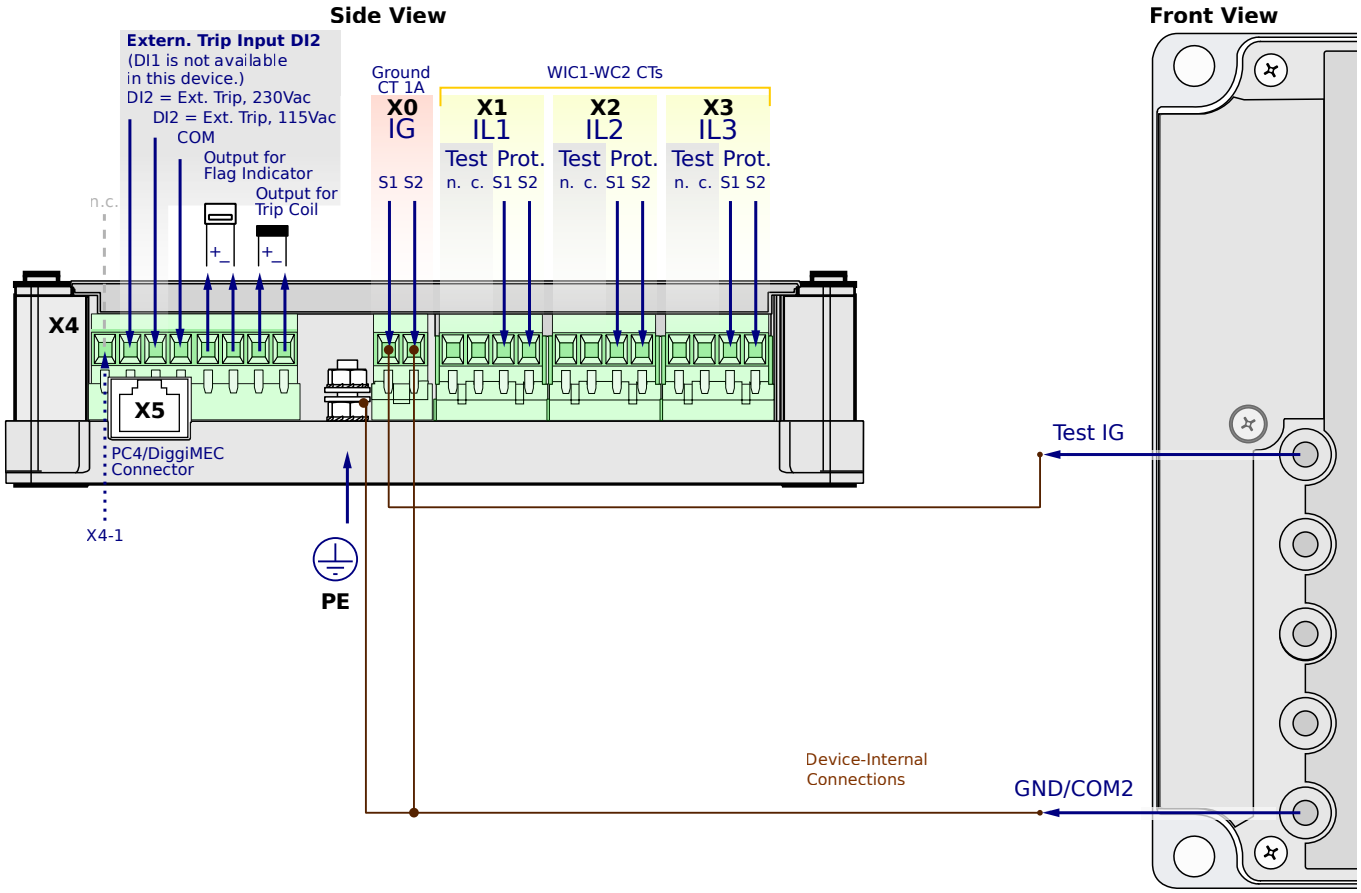


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2AAH

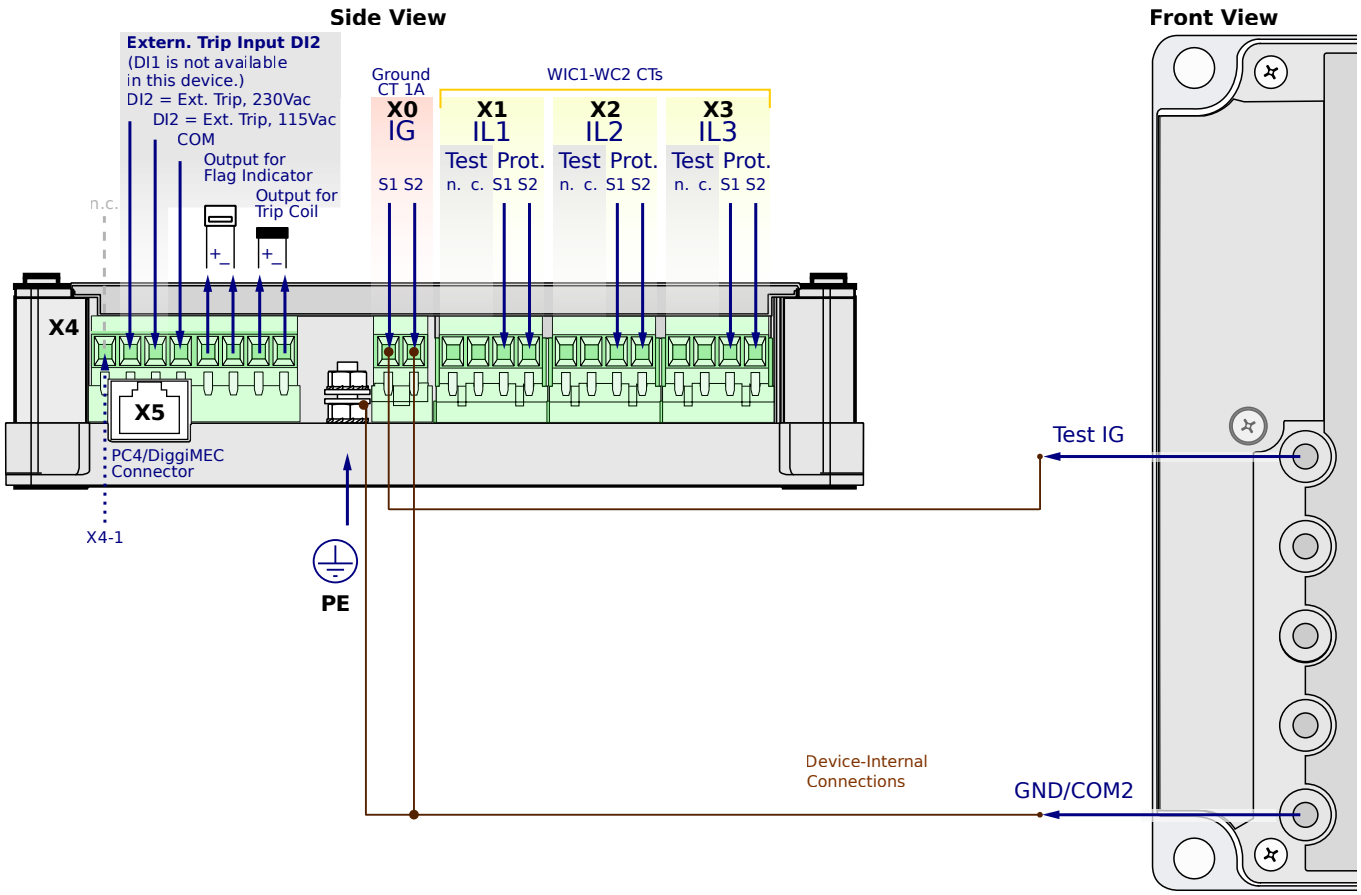


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2PA0

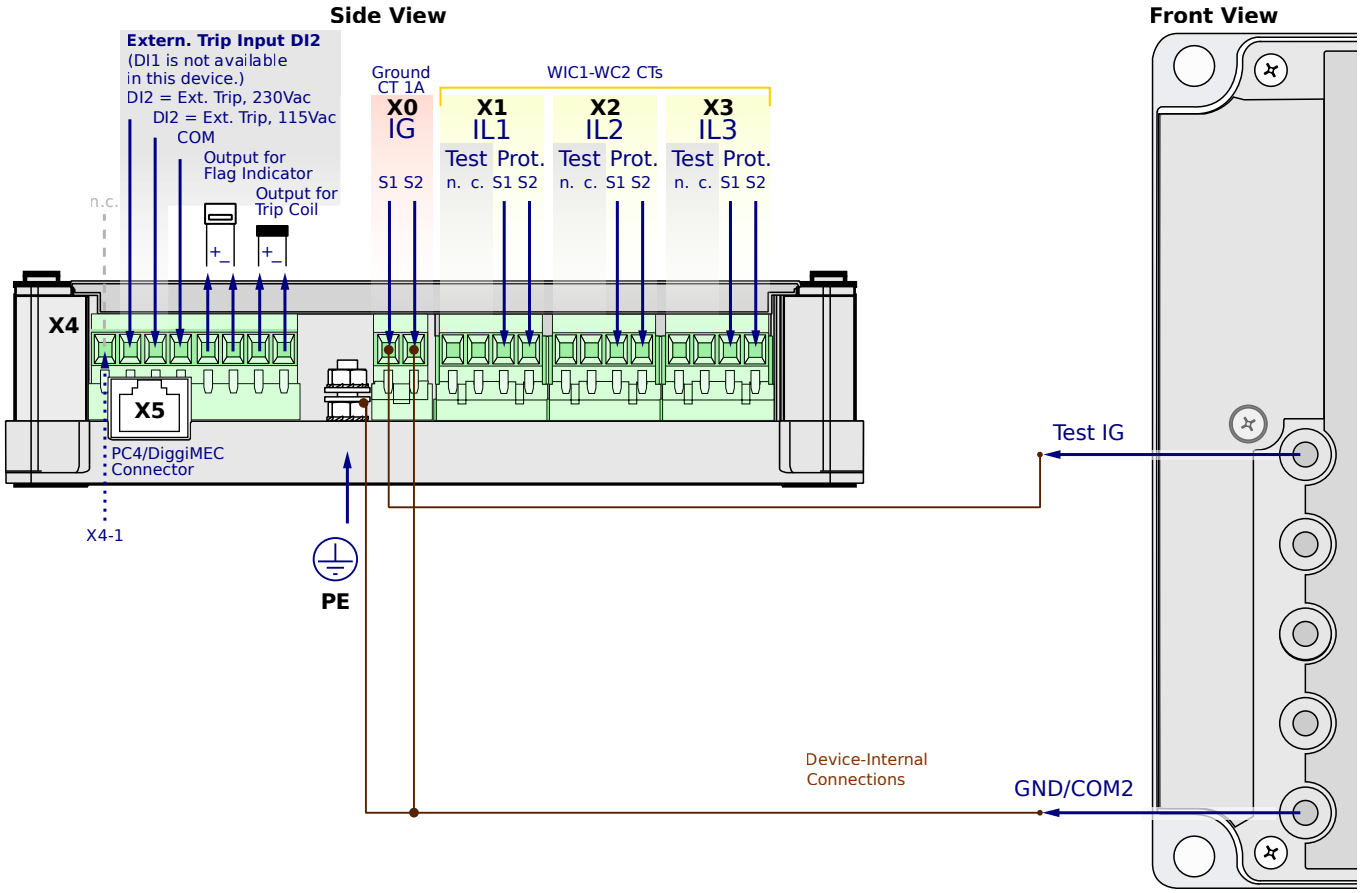


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CF2PAH

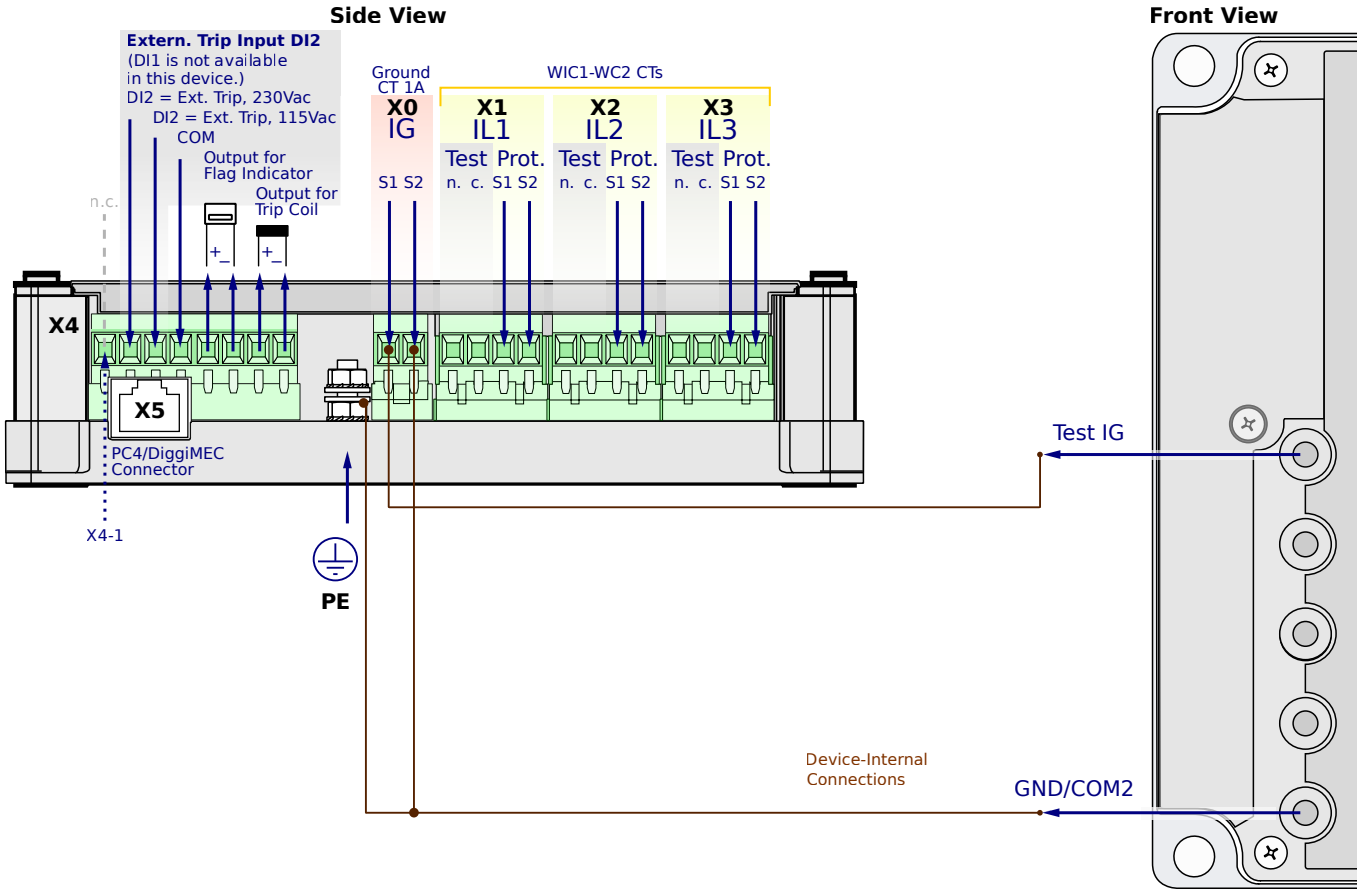


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – DI2, fixed to External trip input (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1SA0

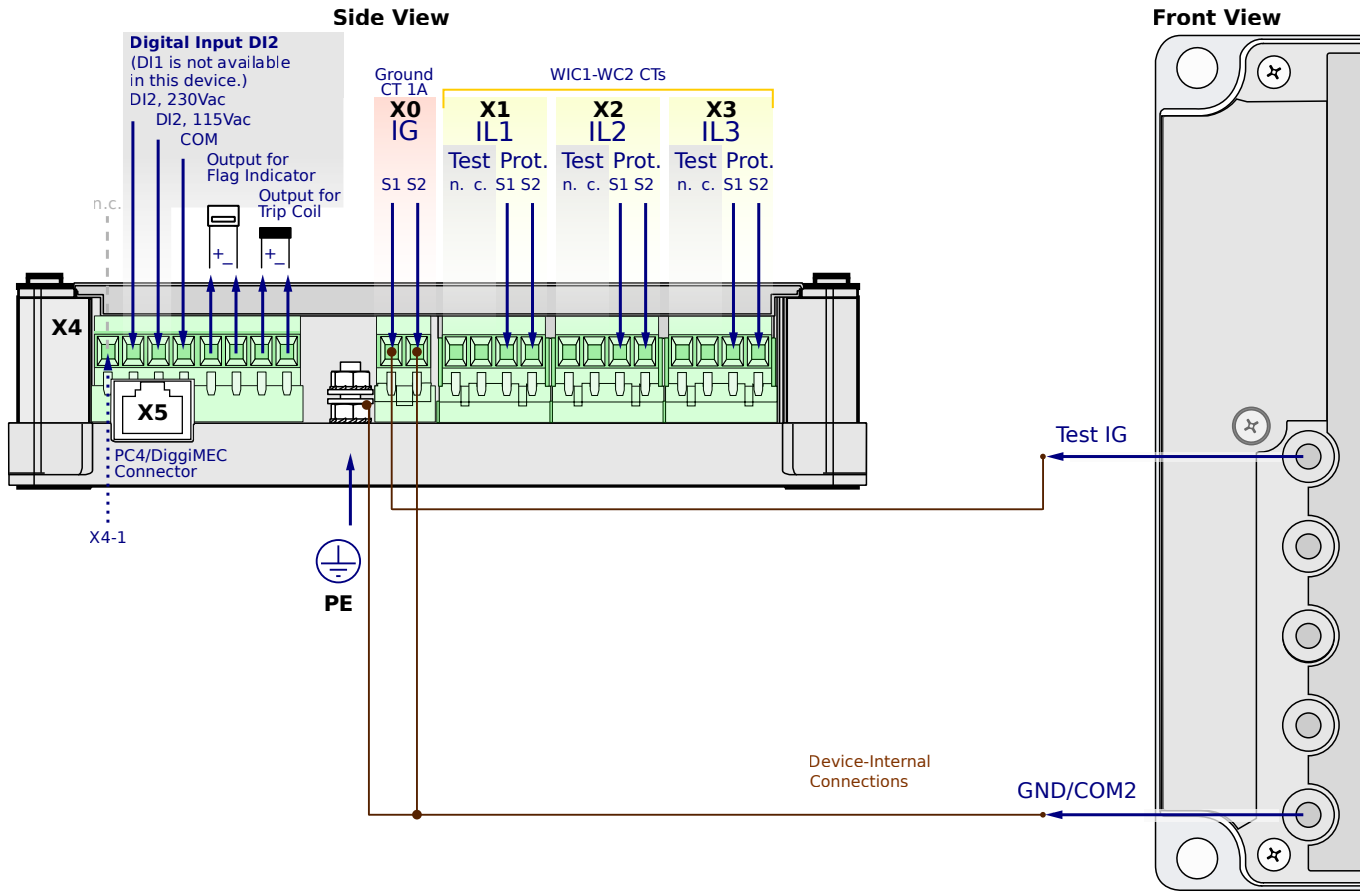


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1SAH

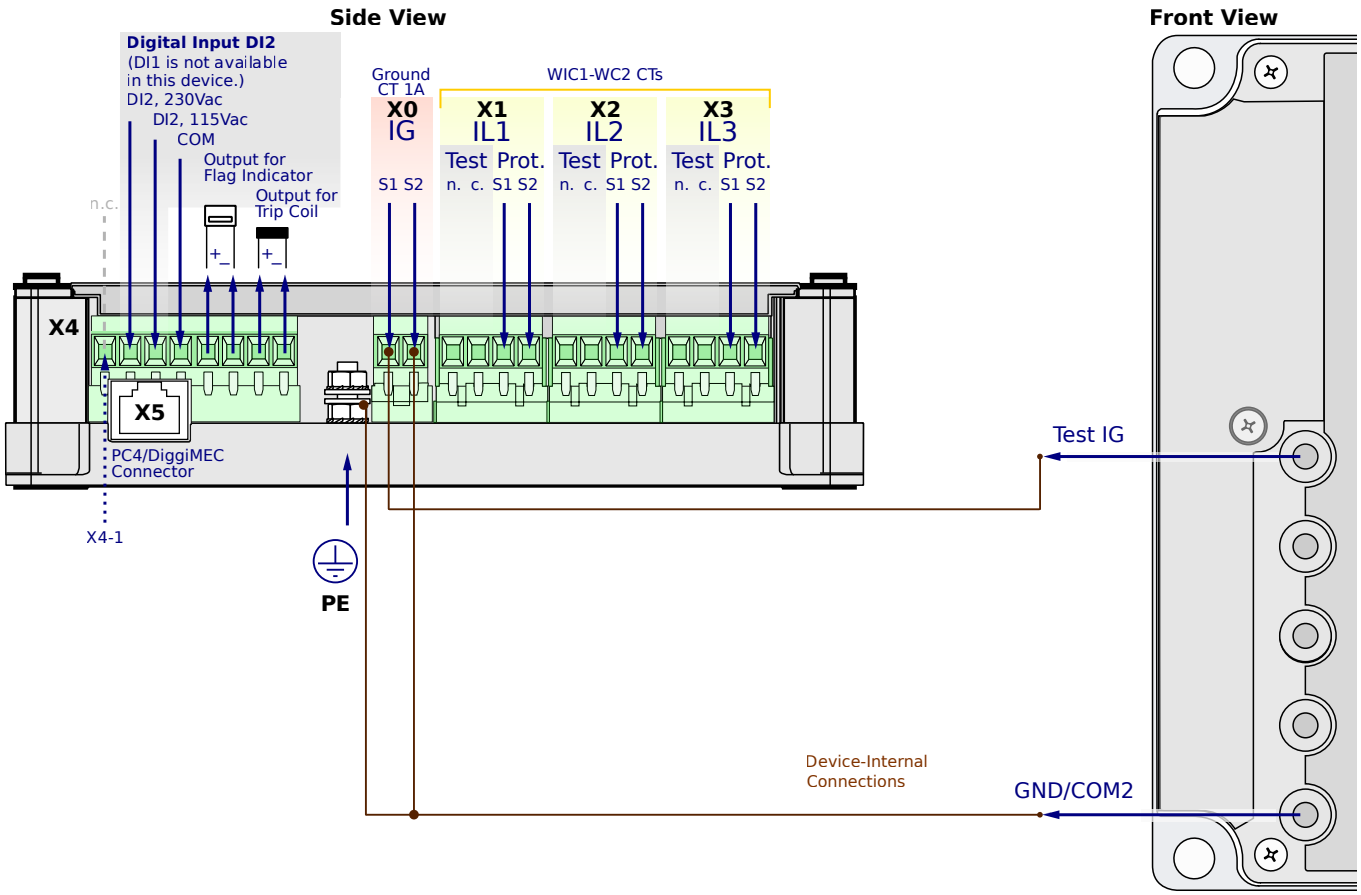


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1AA0

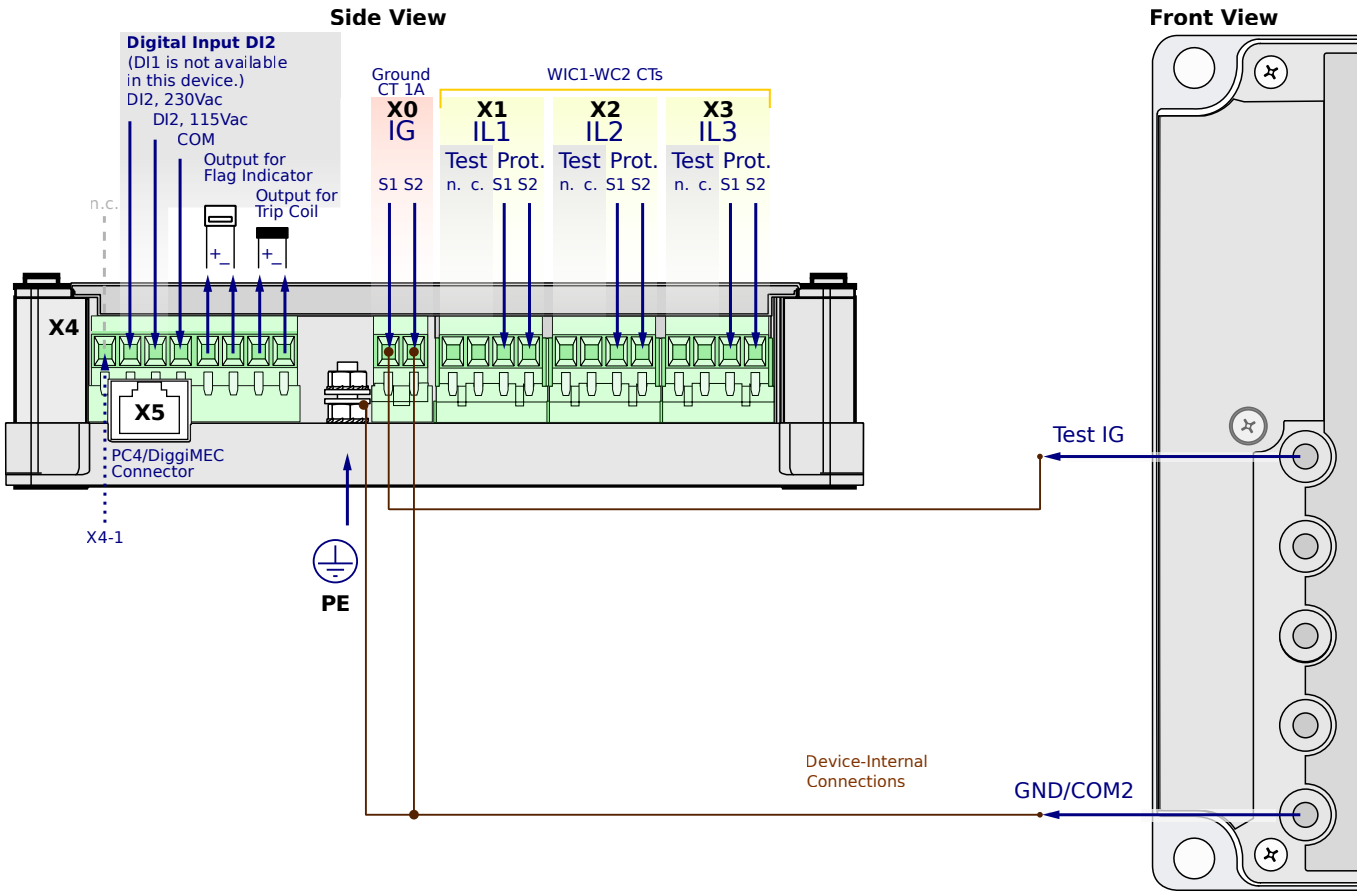


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1AAH

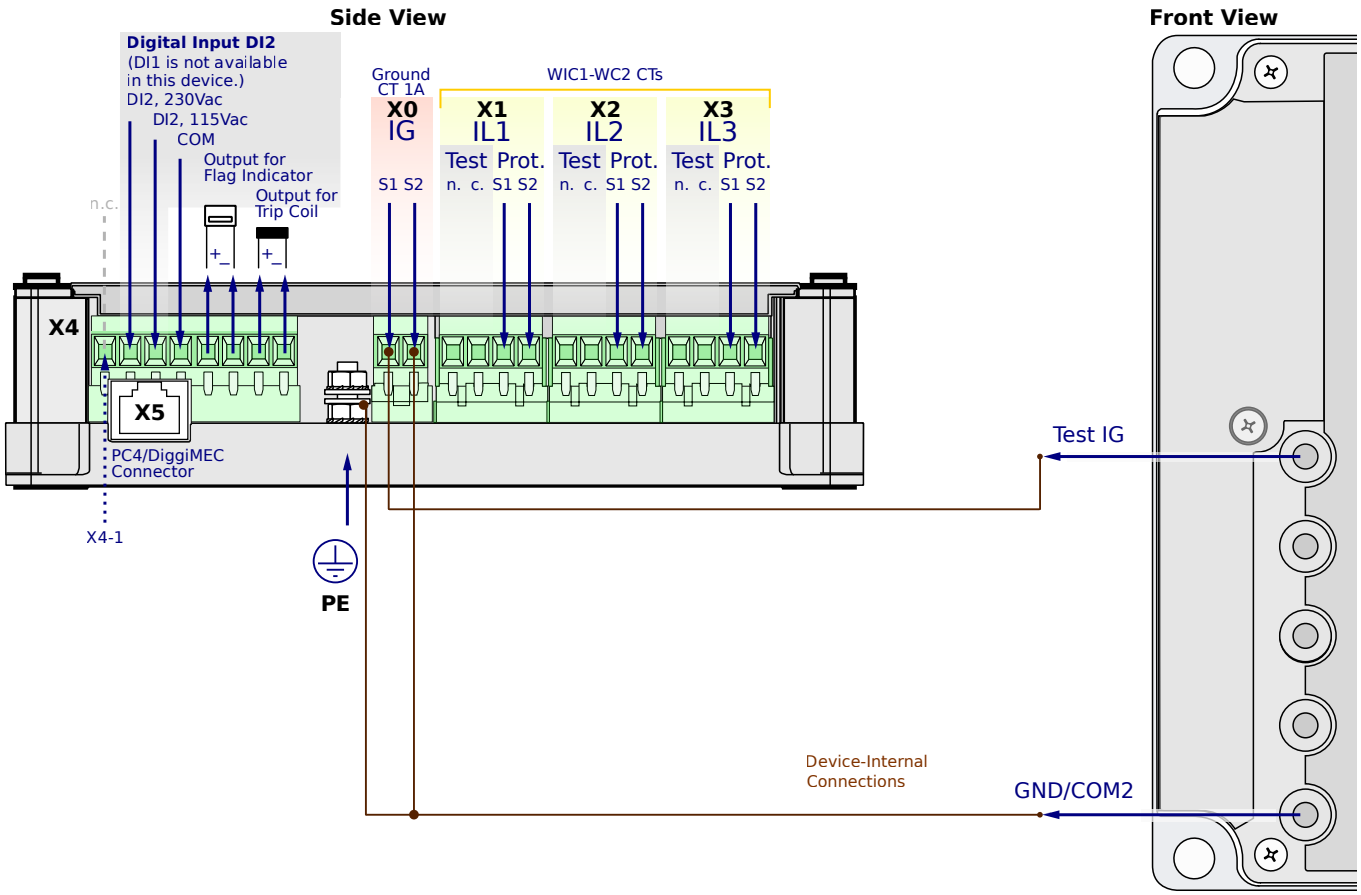


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1PA0

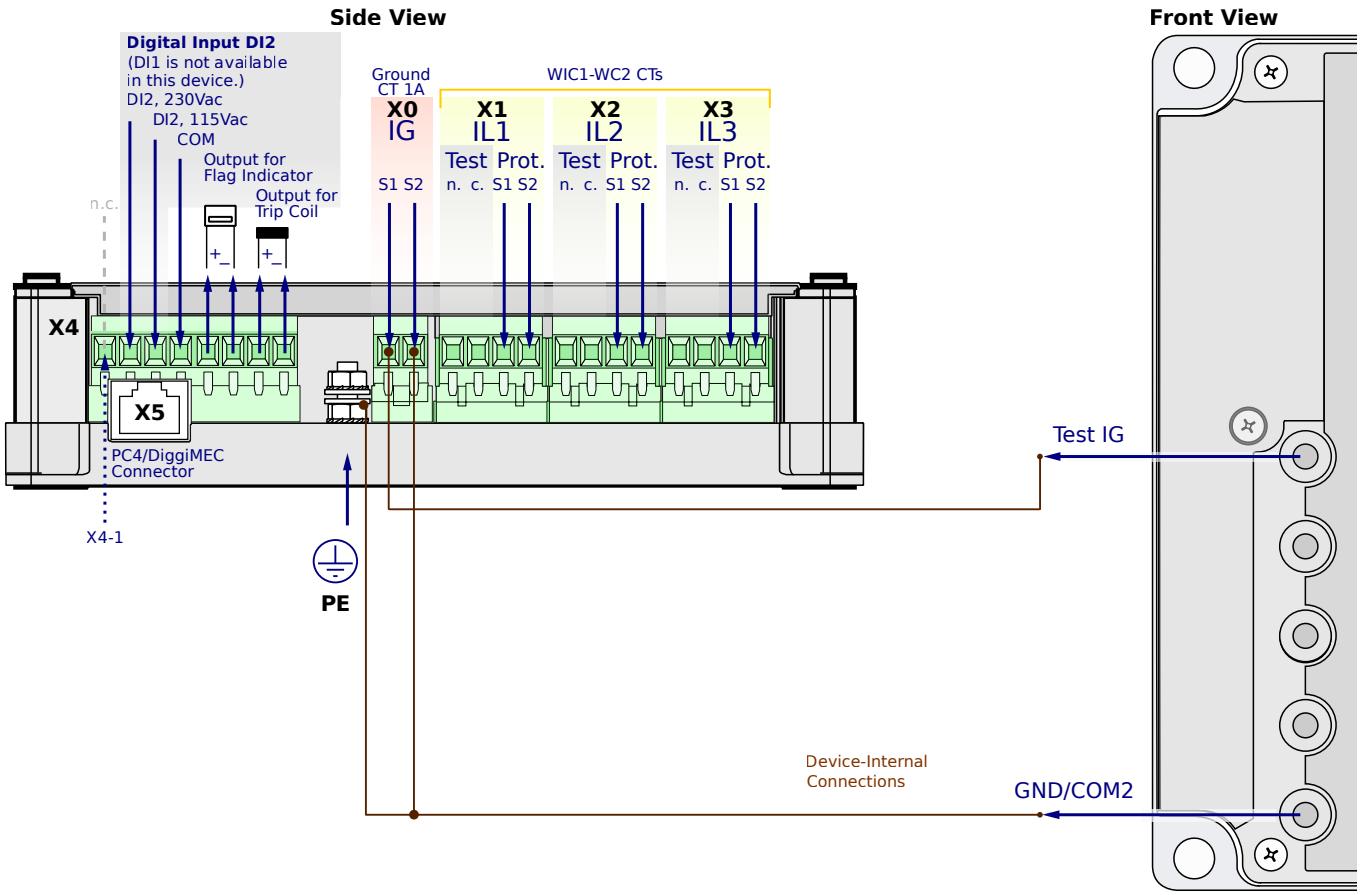


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC1PAH

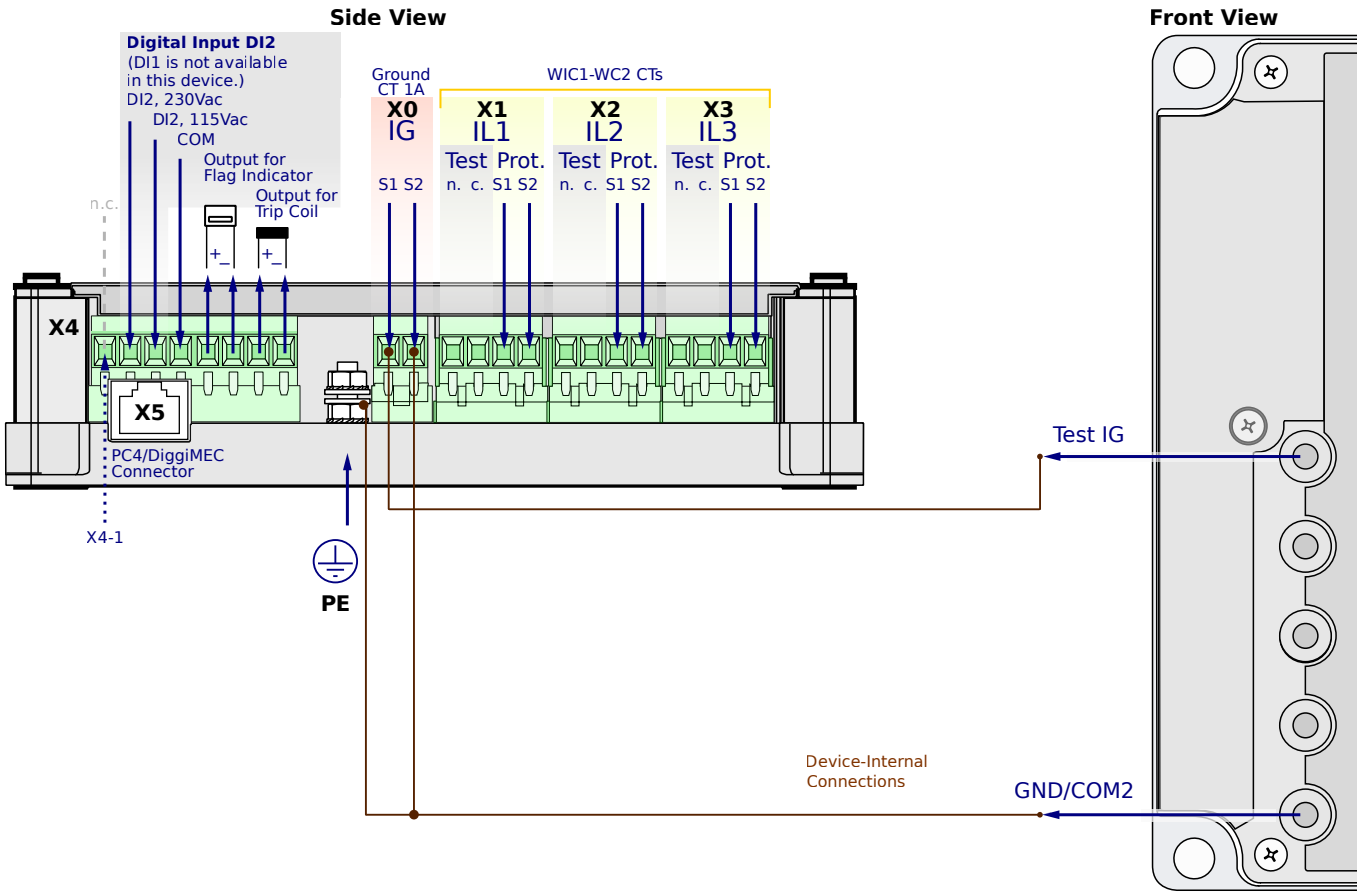


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2SA0

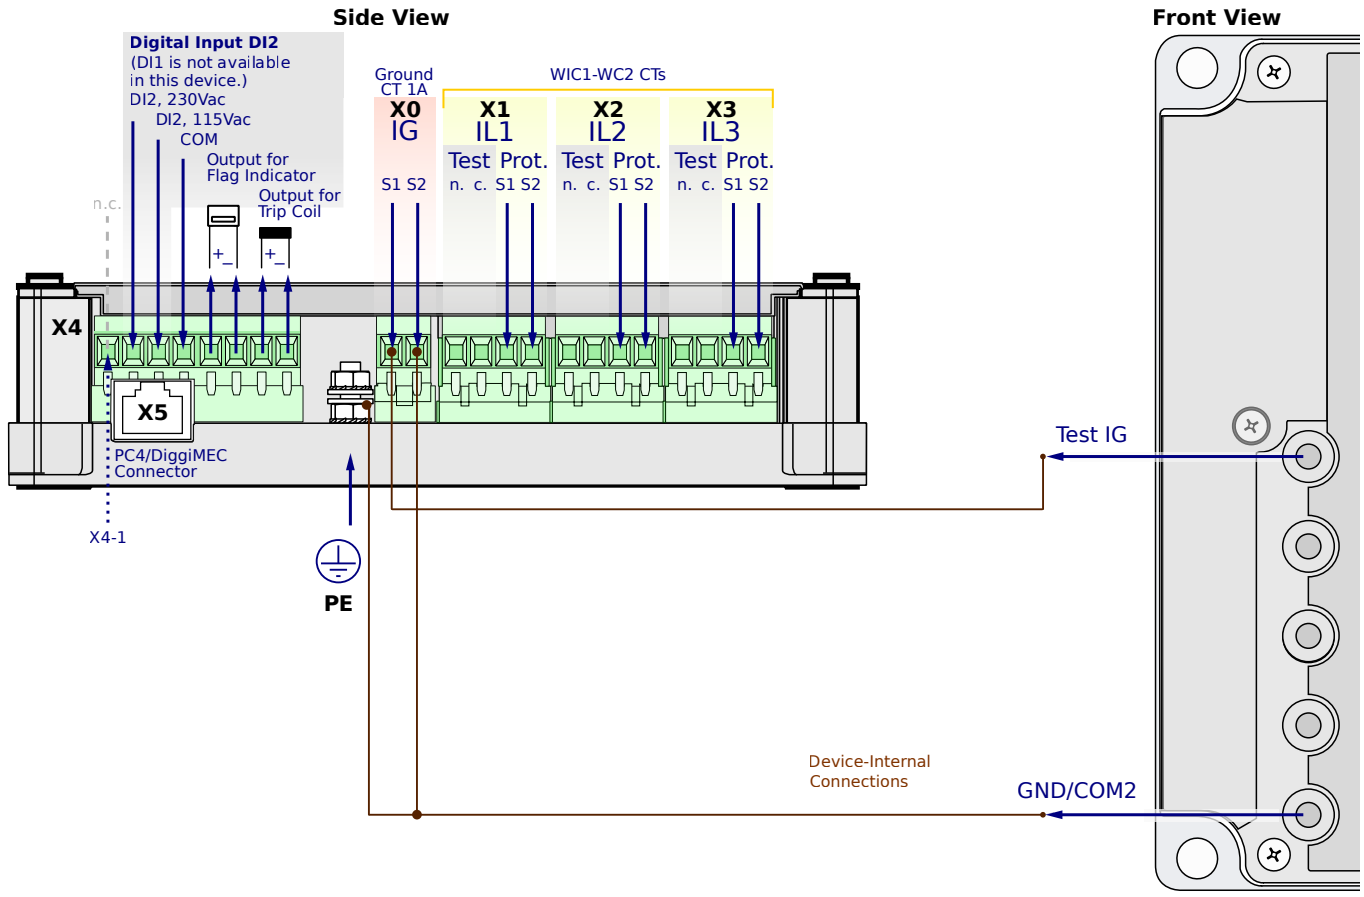


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2SAH

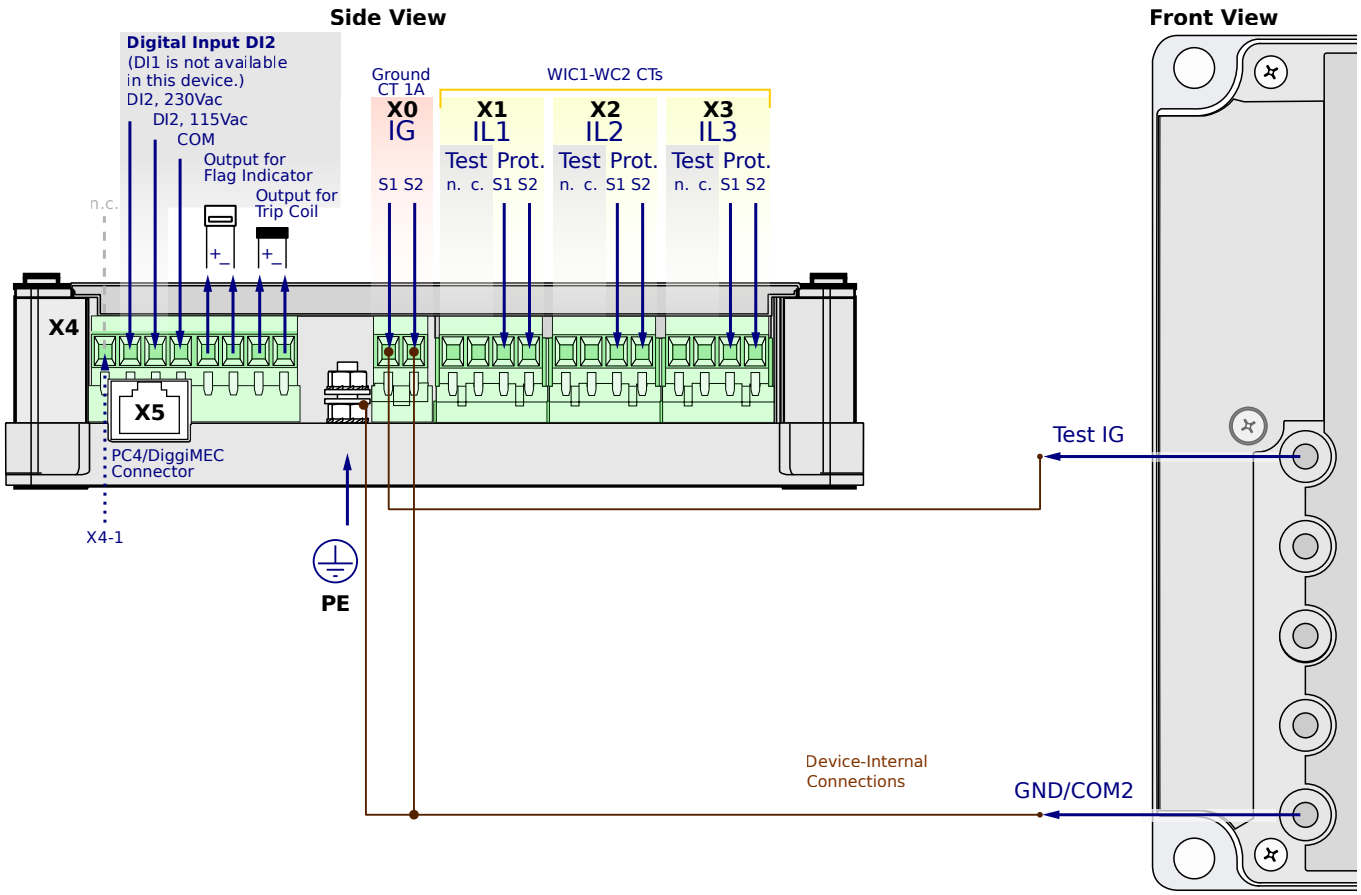


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2AA0

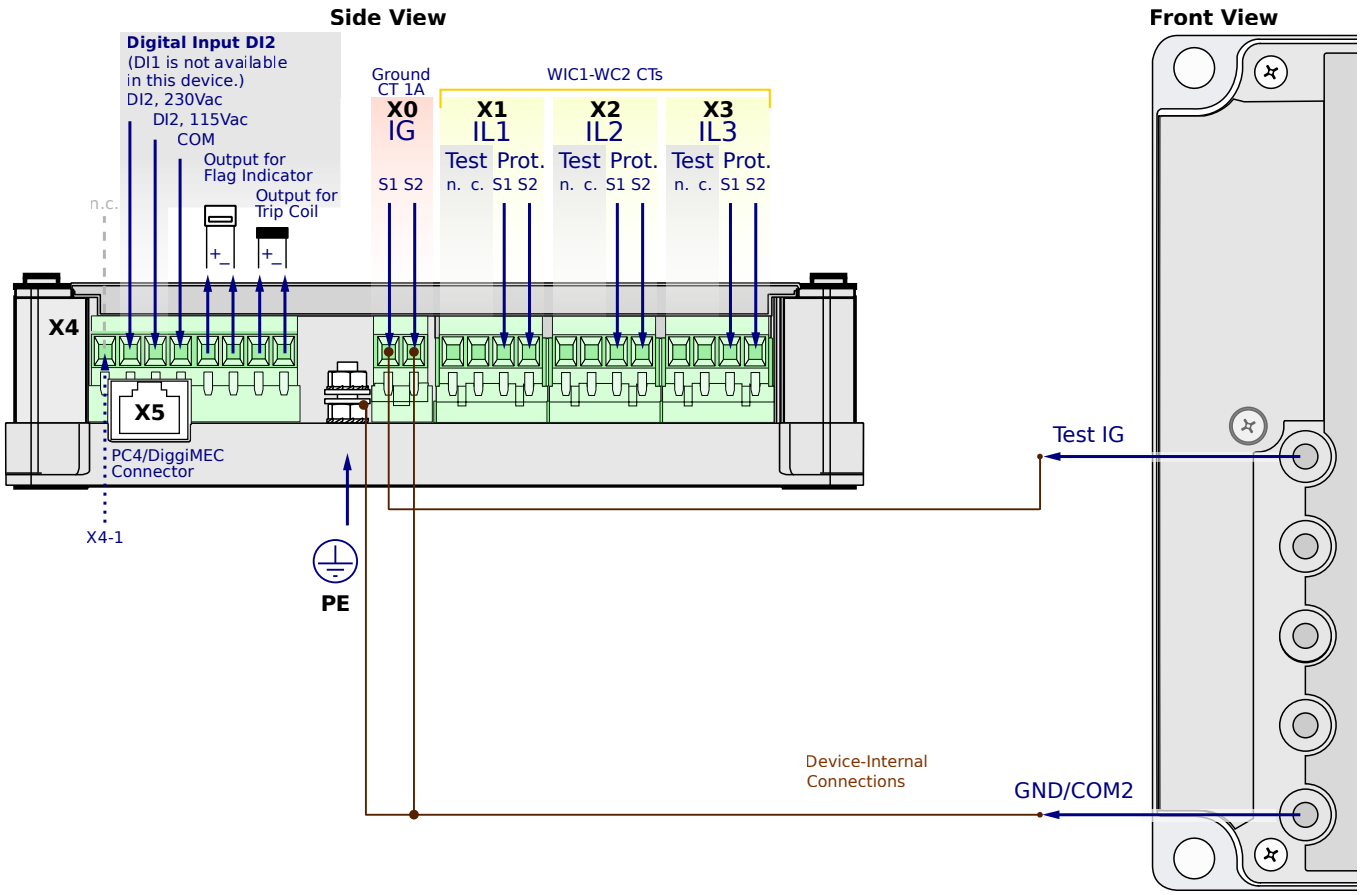


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2AAH

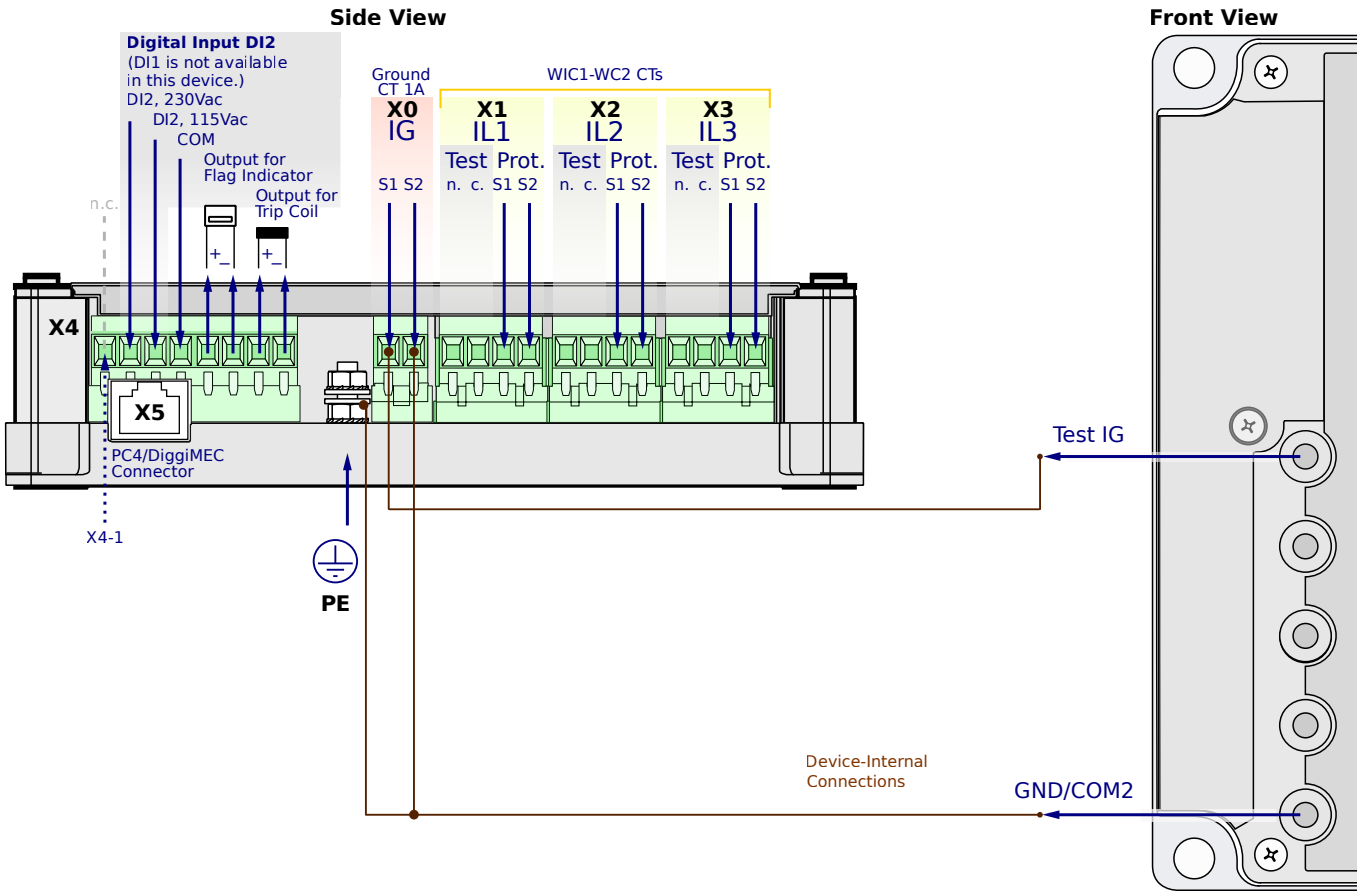


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2PA0

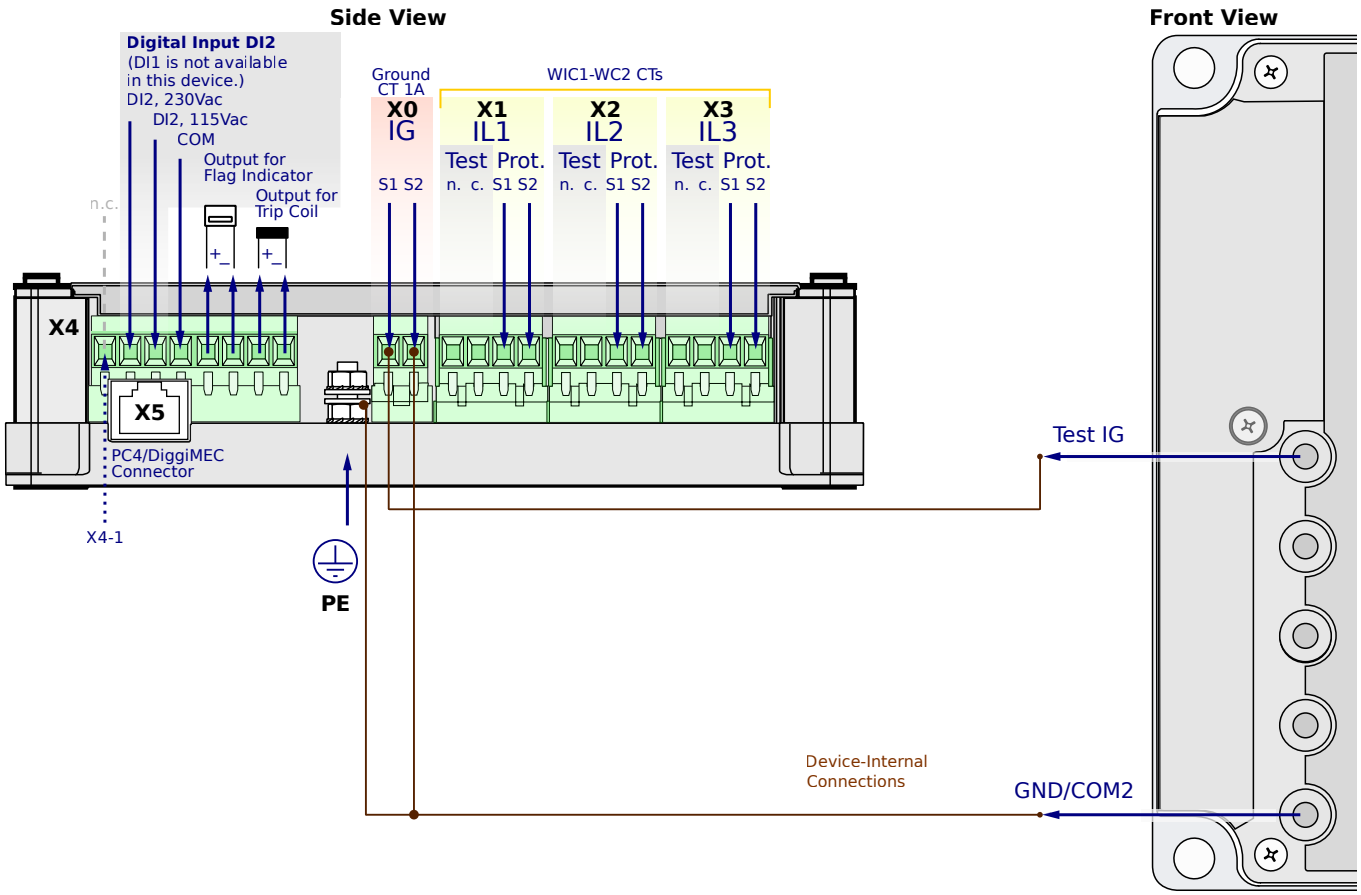


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-3DG6CC2PAH

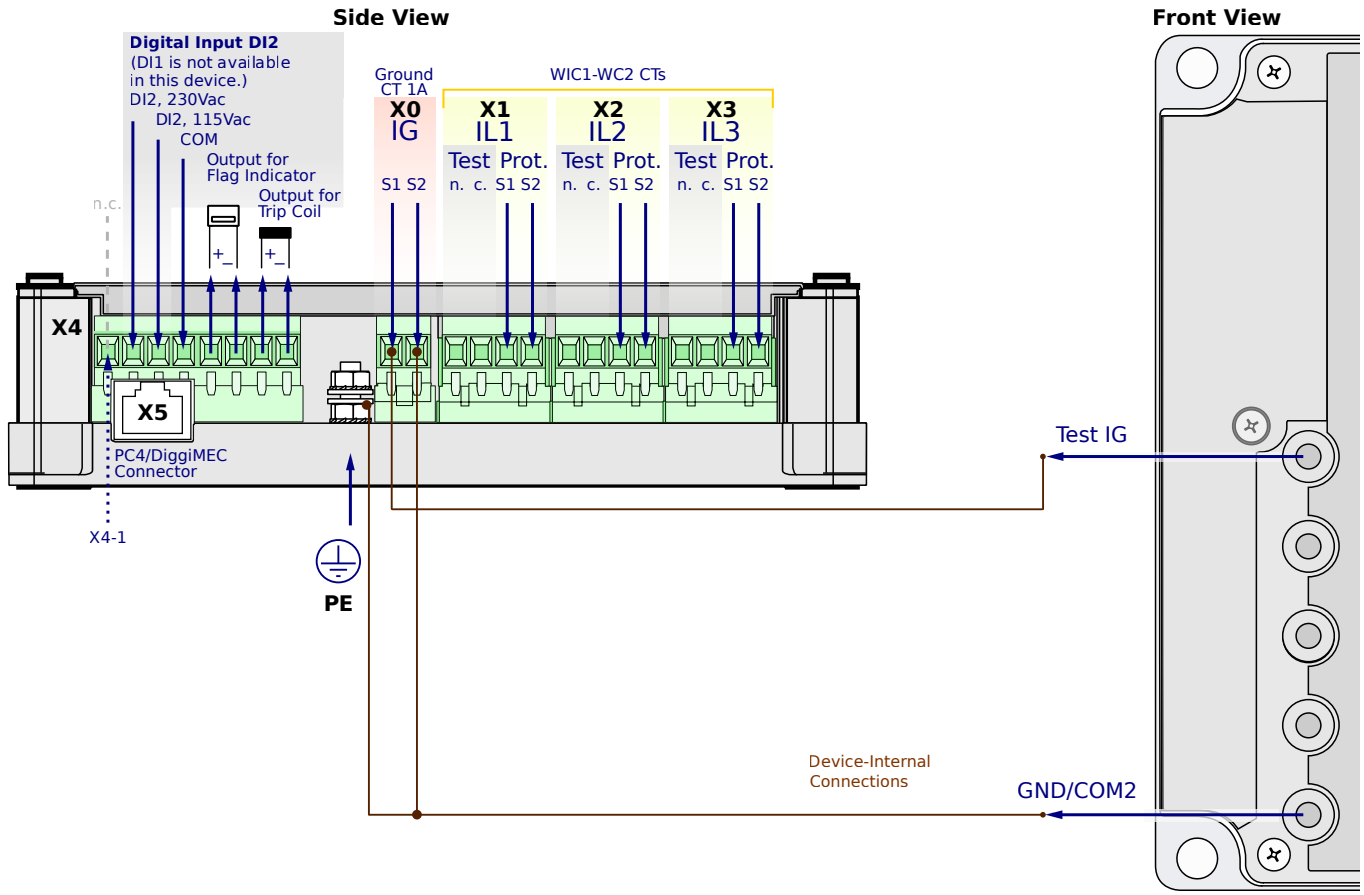


CT-Powered Protection Device, configuration via HEX switches or Smart view (PC) / DiggiMEC

– Nominal frequency is 60 Hz. (Setting to 50 Hz is possible via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-2,3 – 1 assignable Digital Input DI2 (115Vac or 230Vac)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0SA0

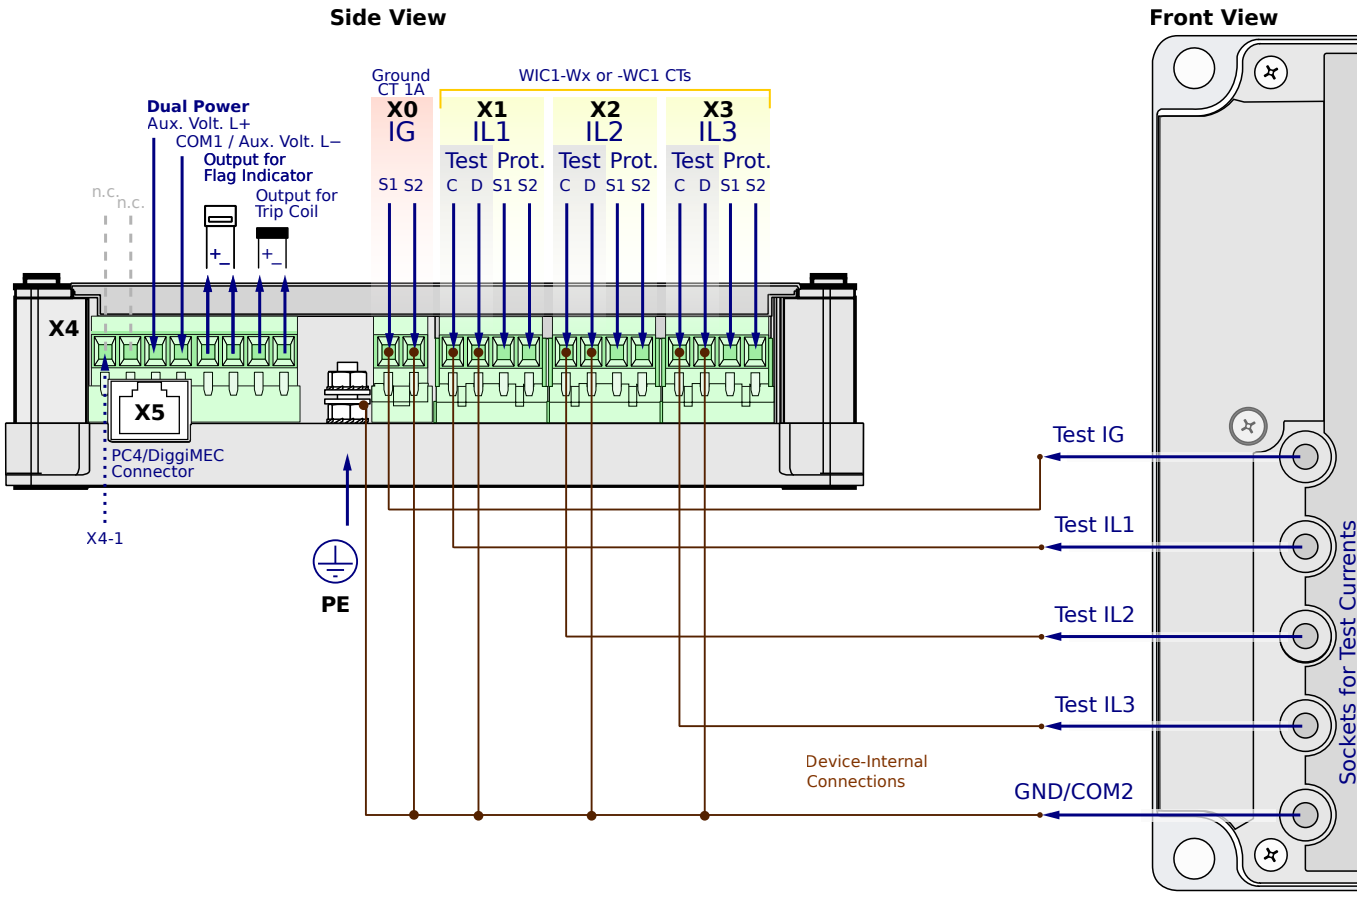


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0SAH

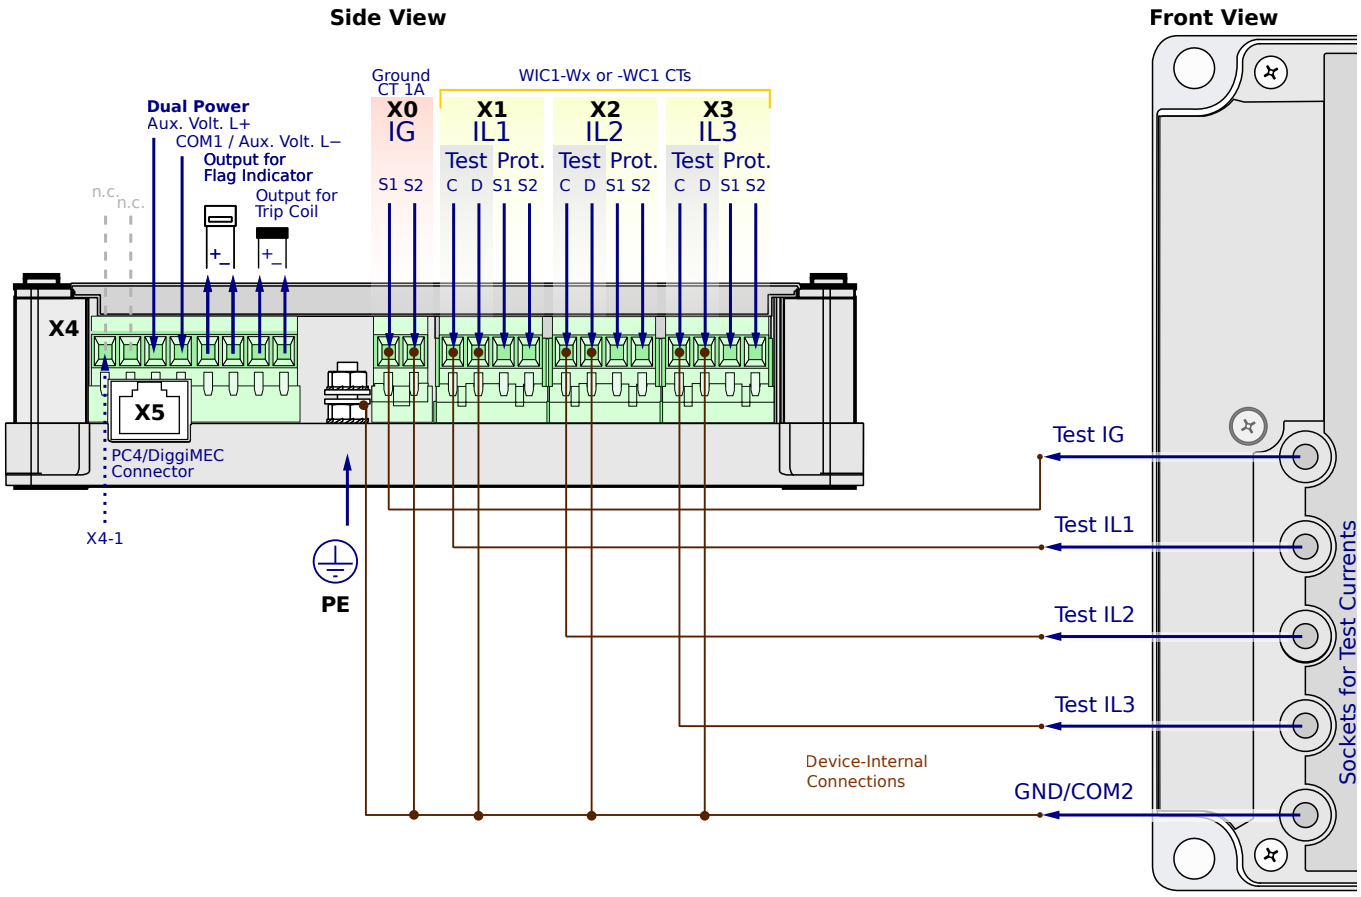


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0SB0

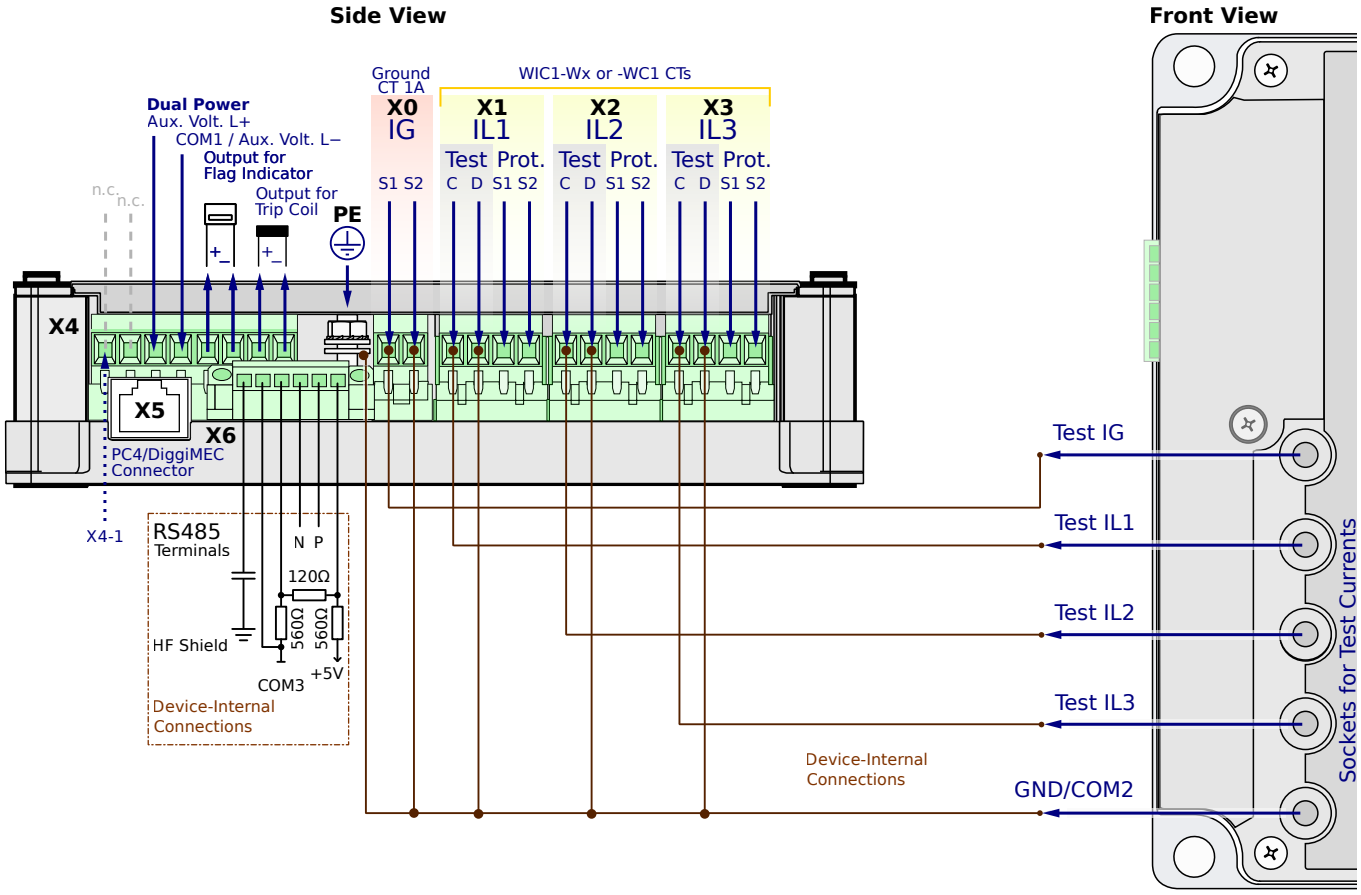


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0SBH

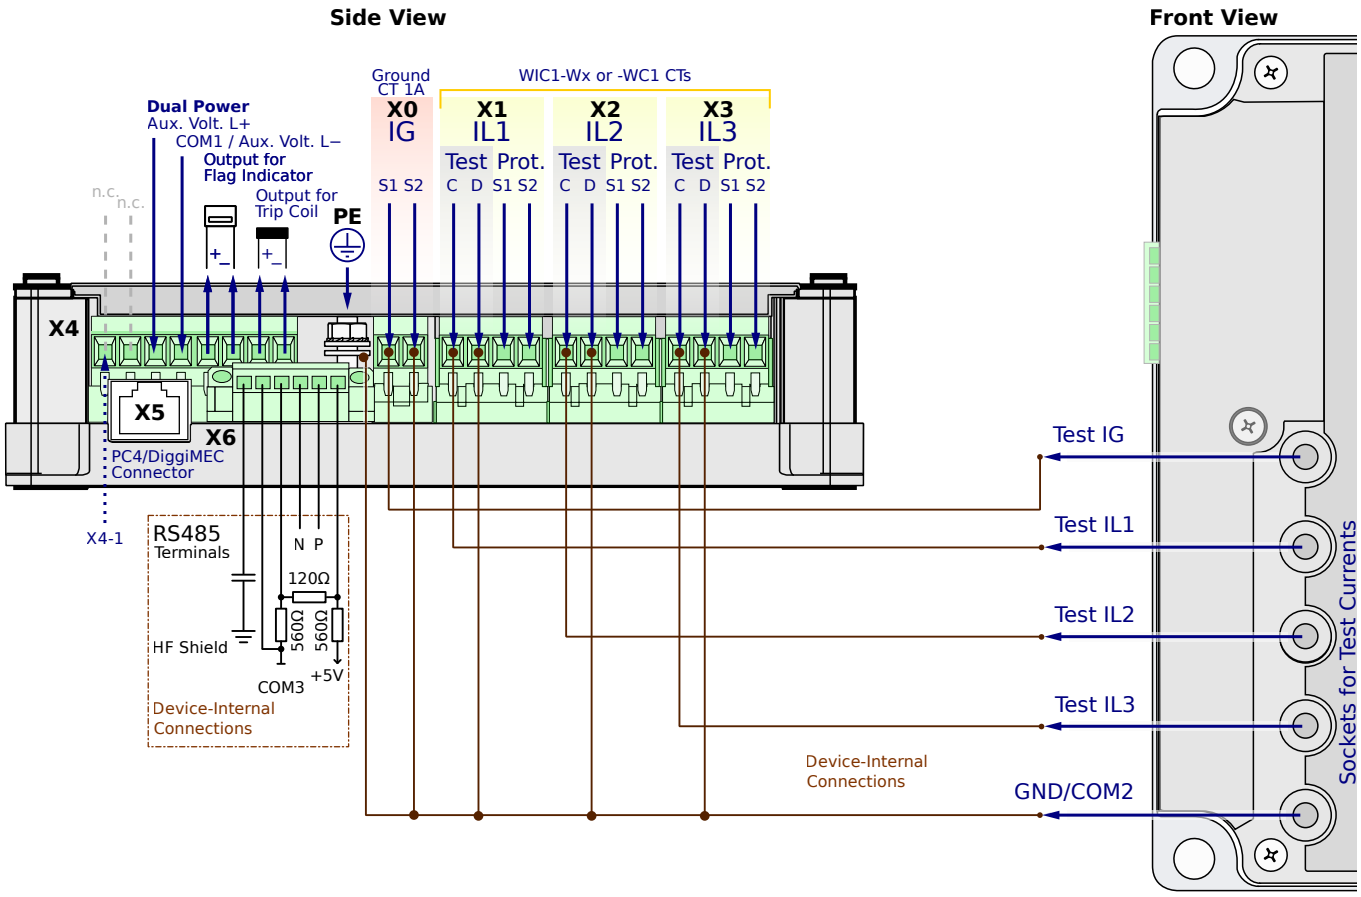


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0SC0

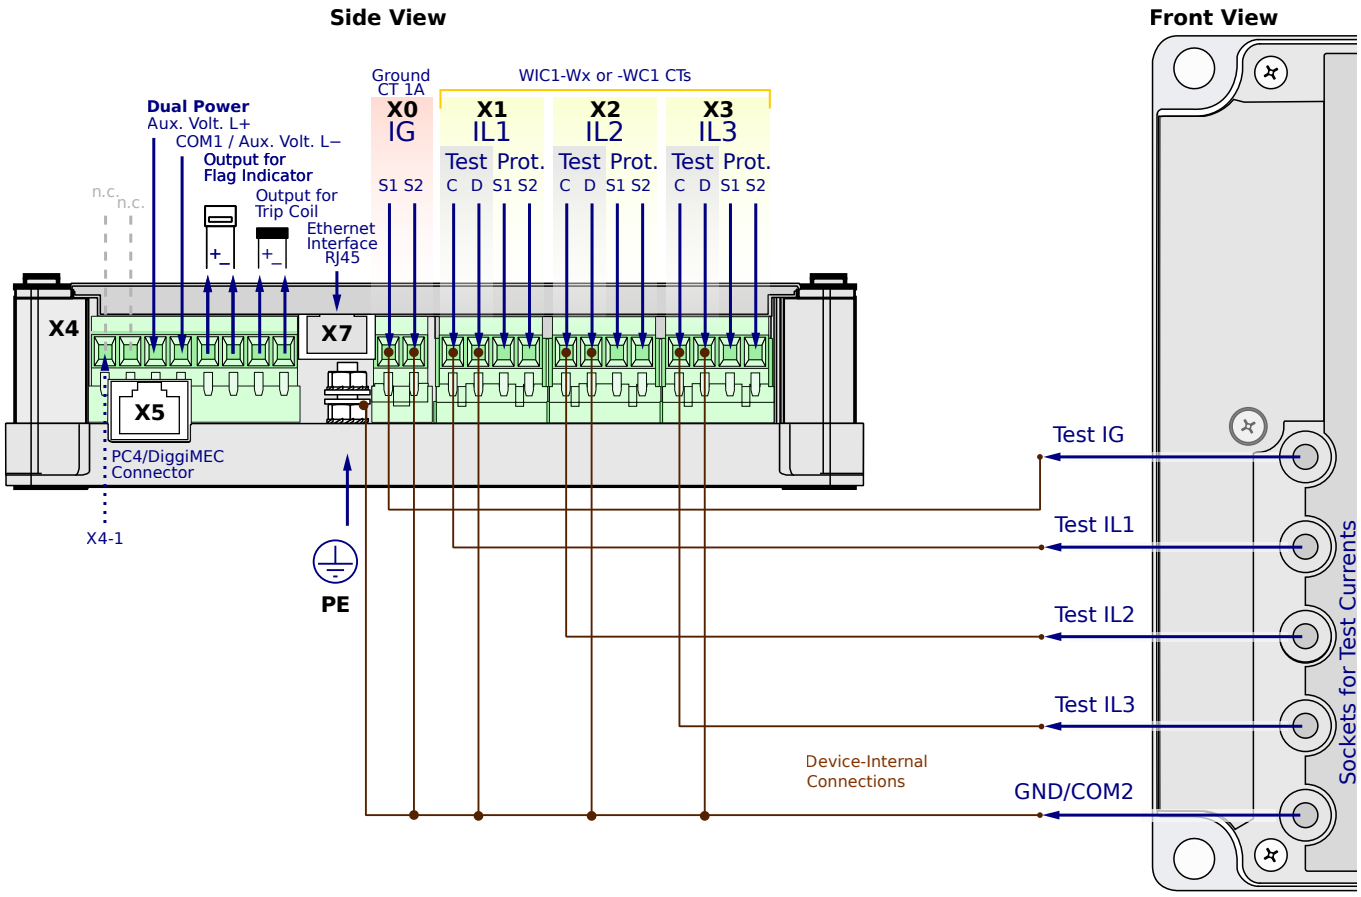


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0SCH

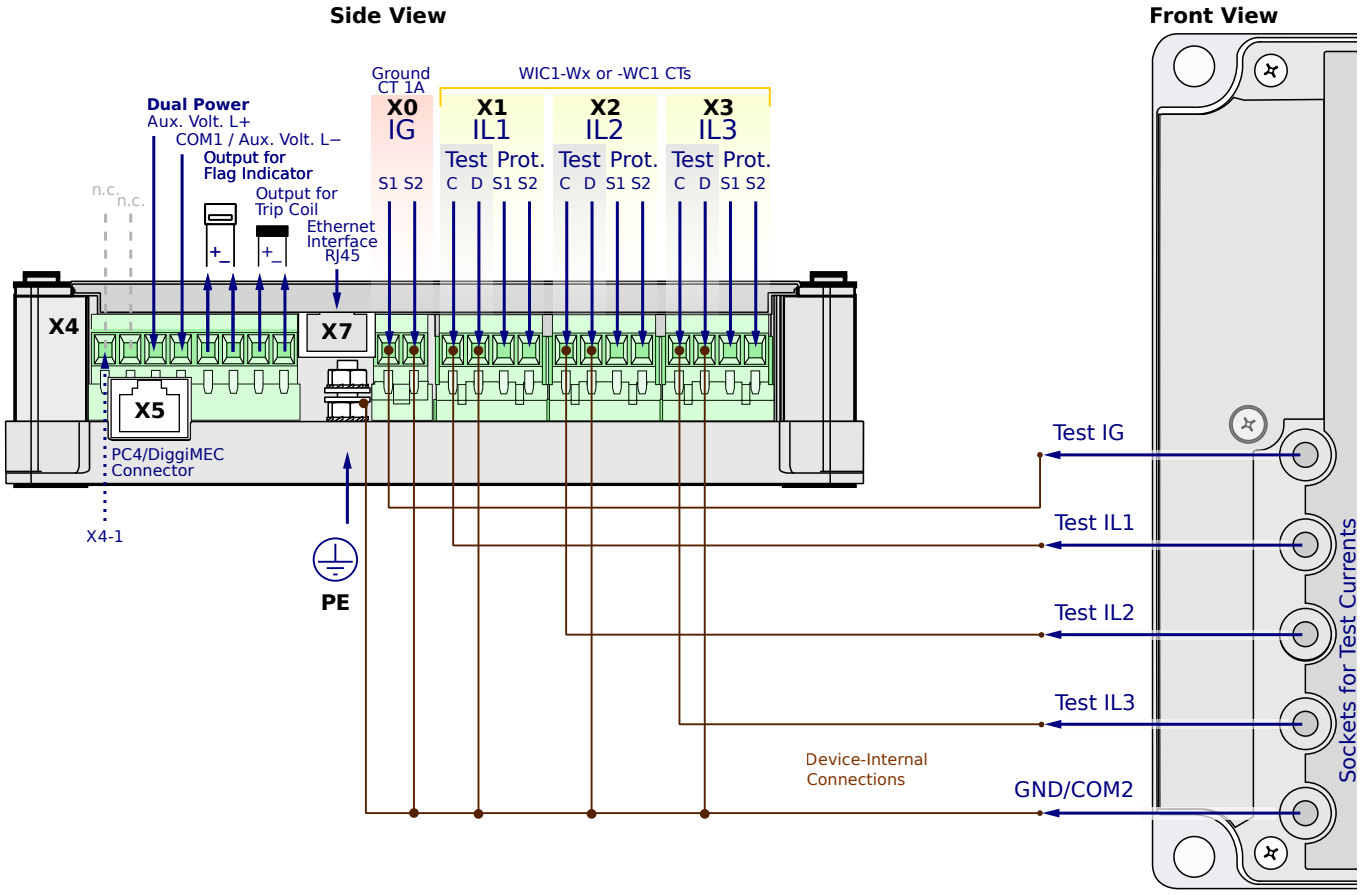


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0SL0

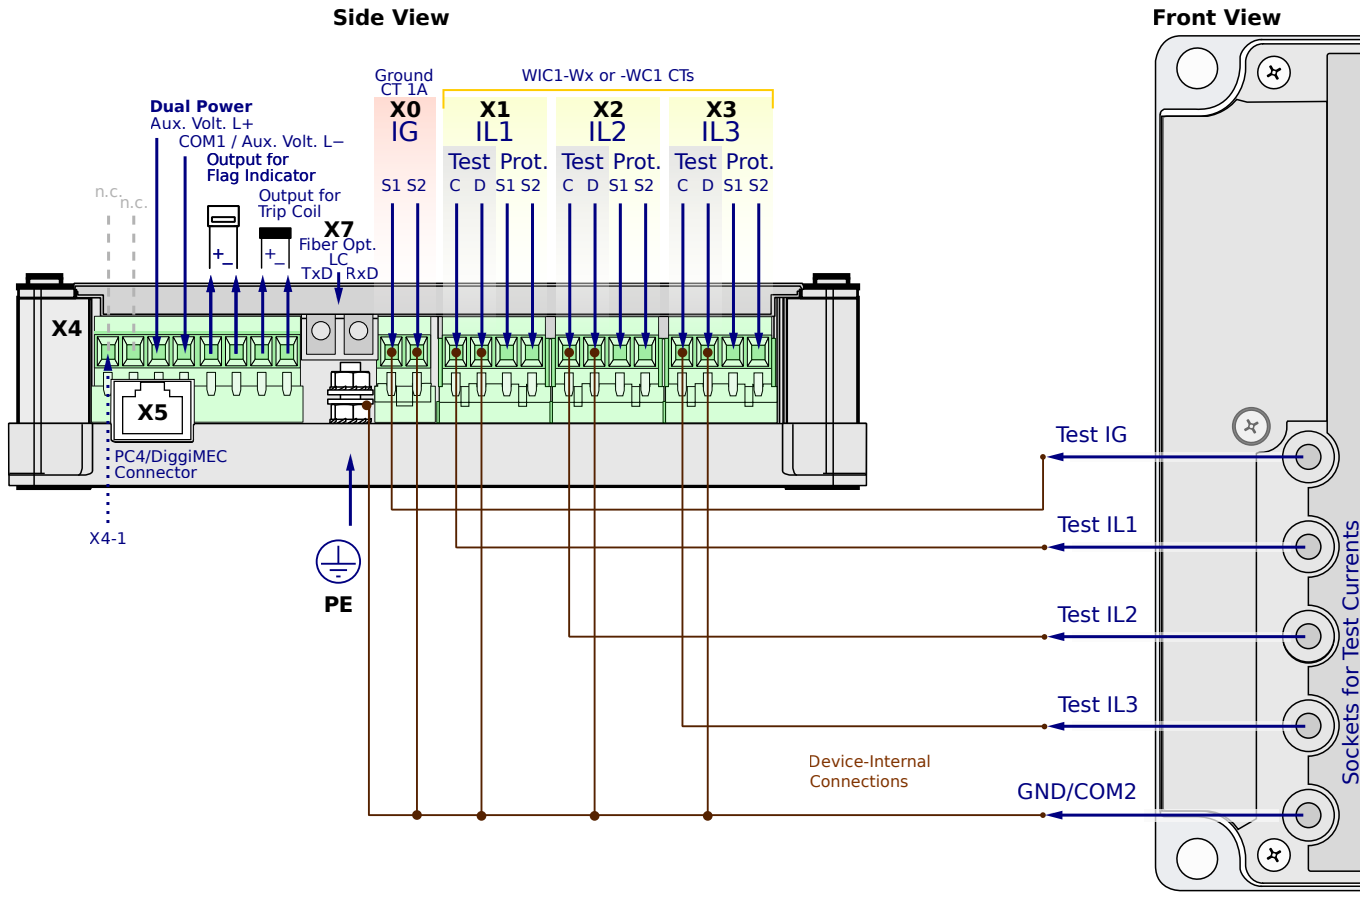


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM0SLH

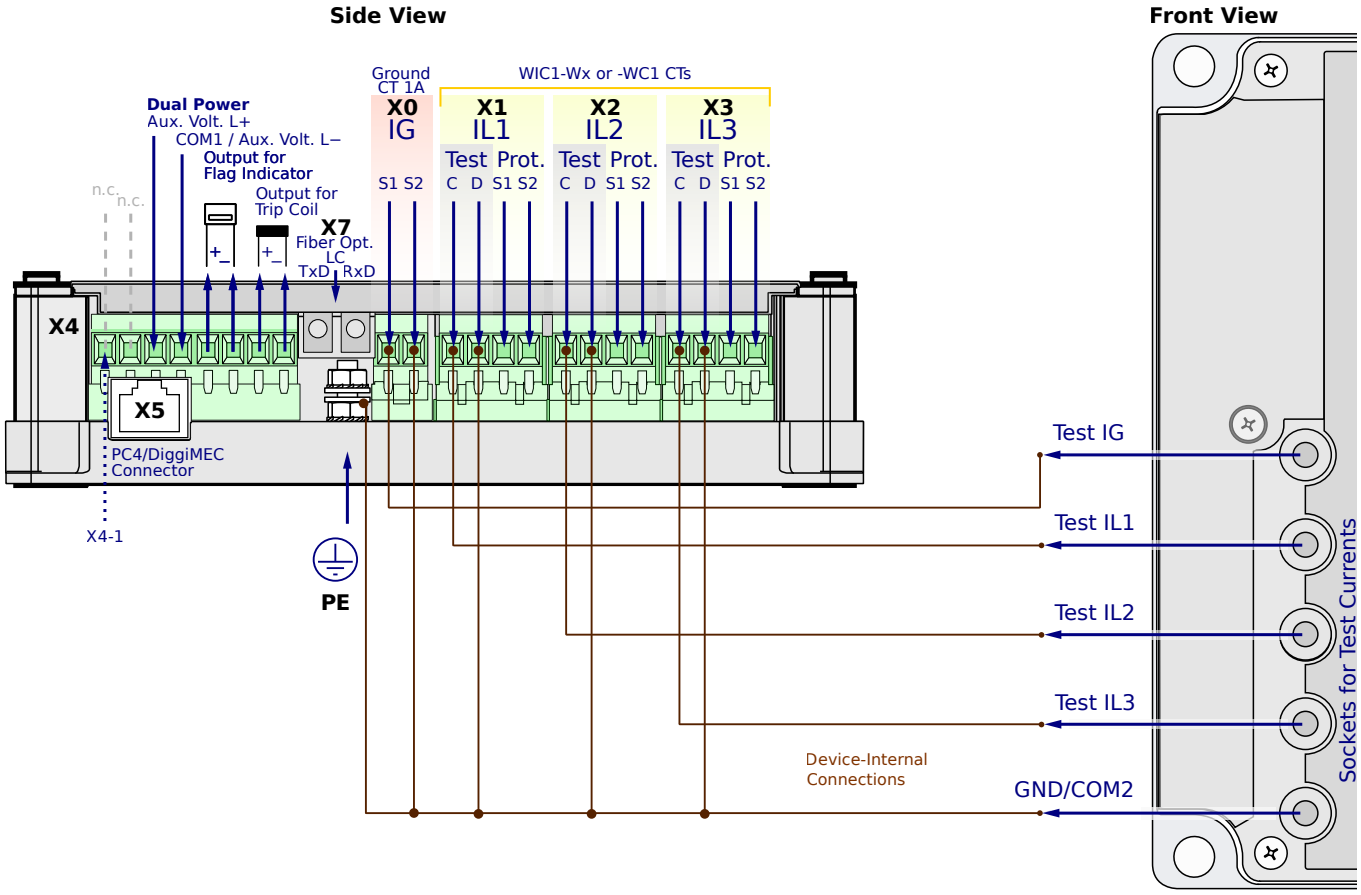


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM0AA0

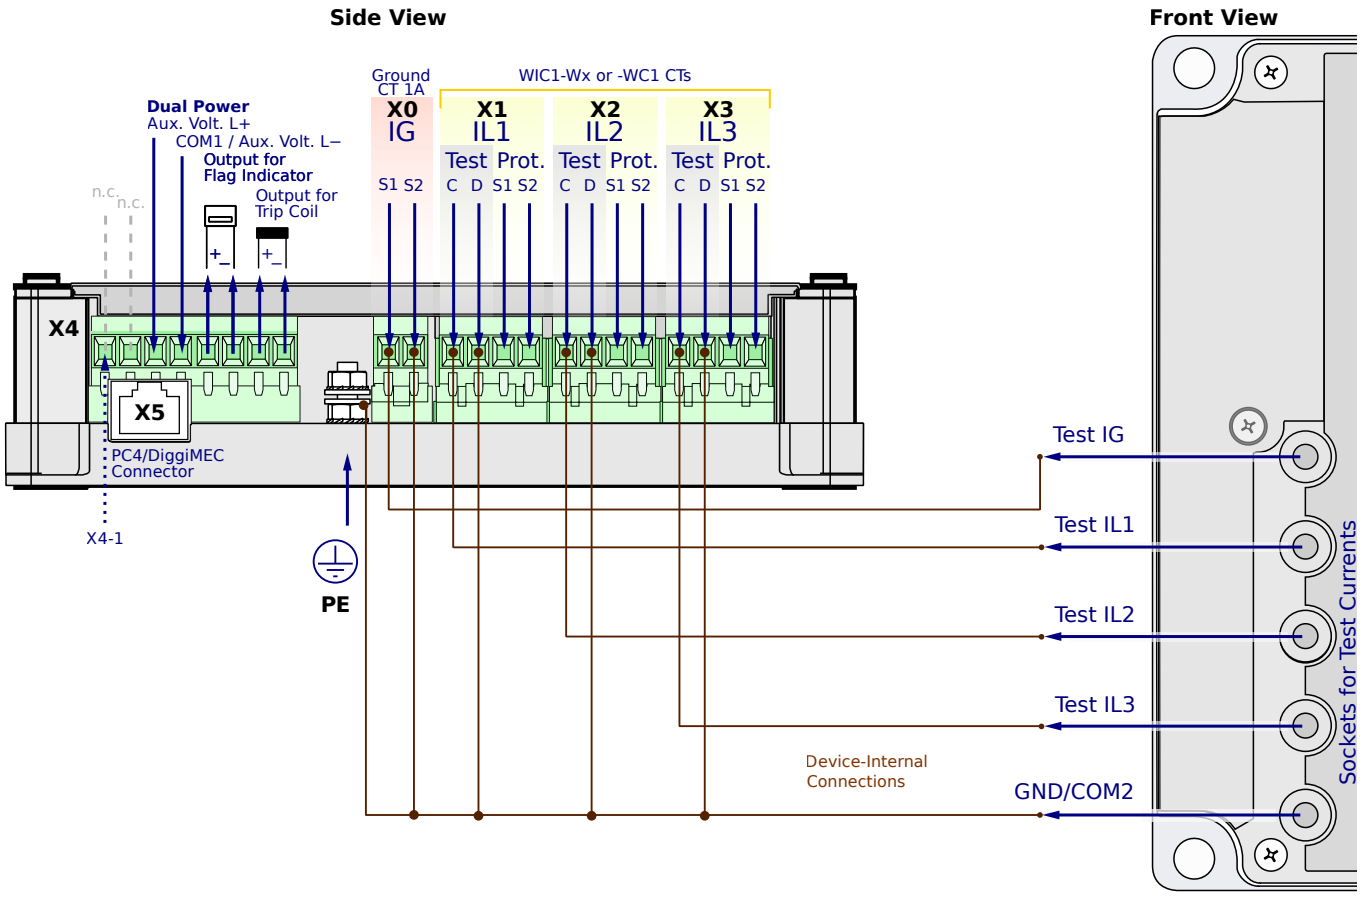


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0AAH

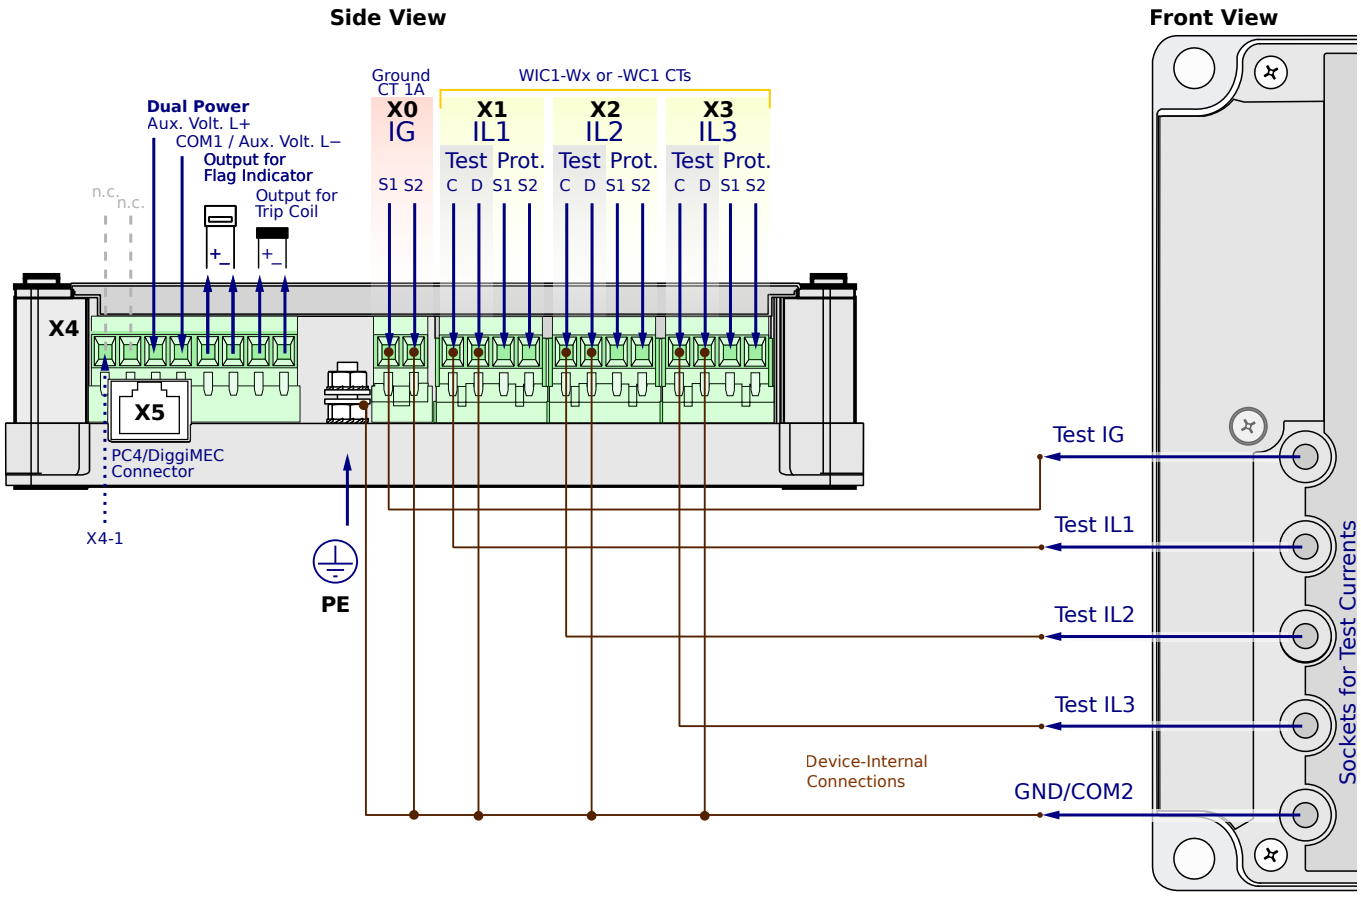


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0AB0

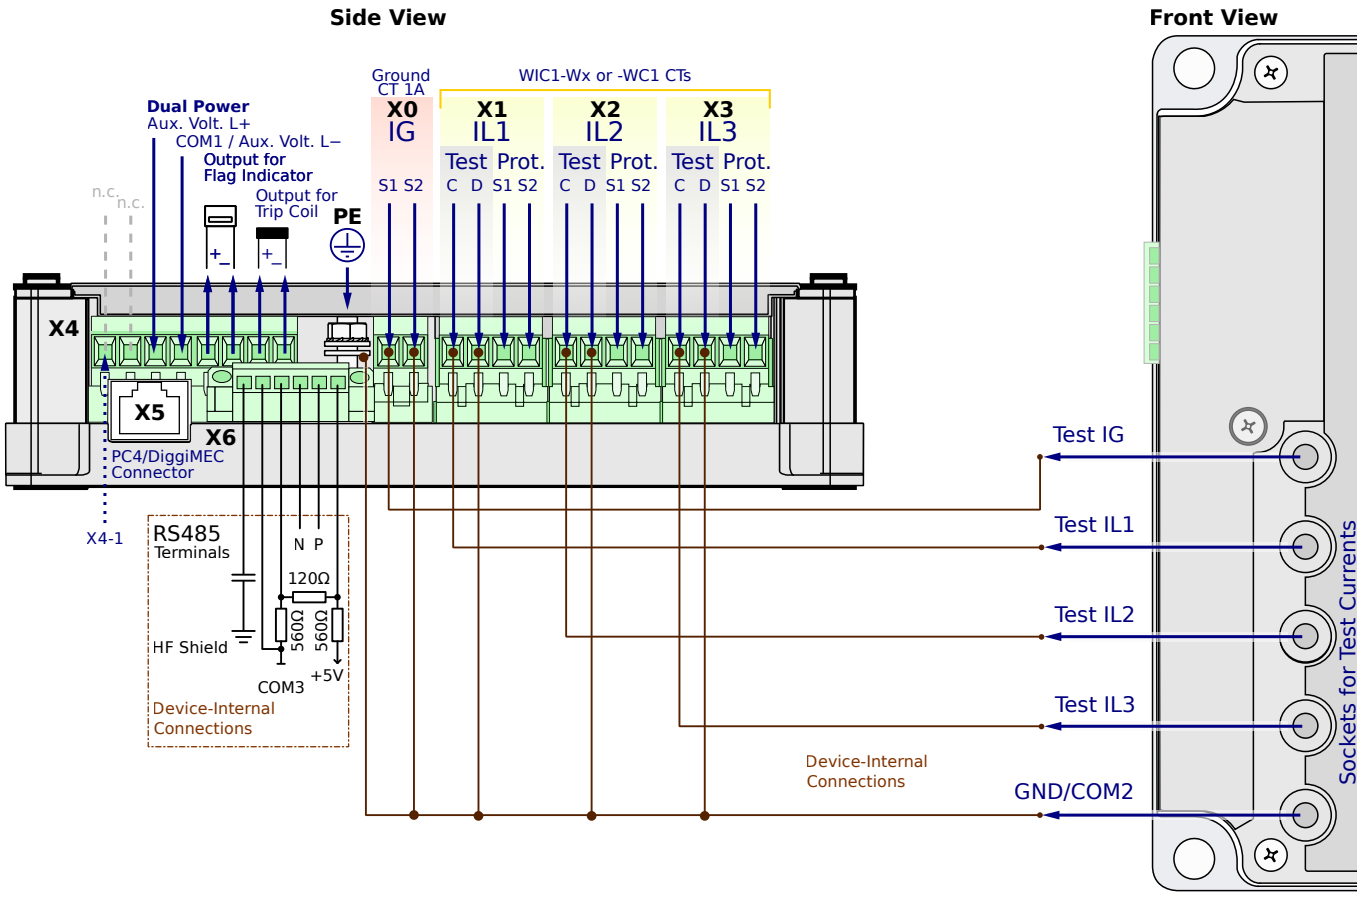


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0ABH

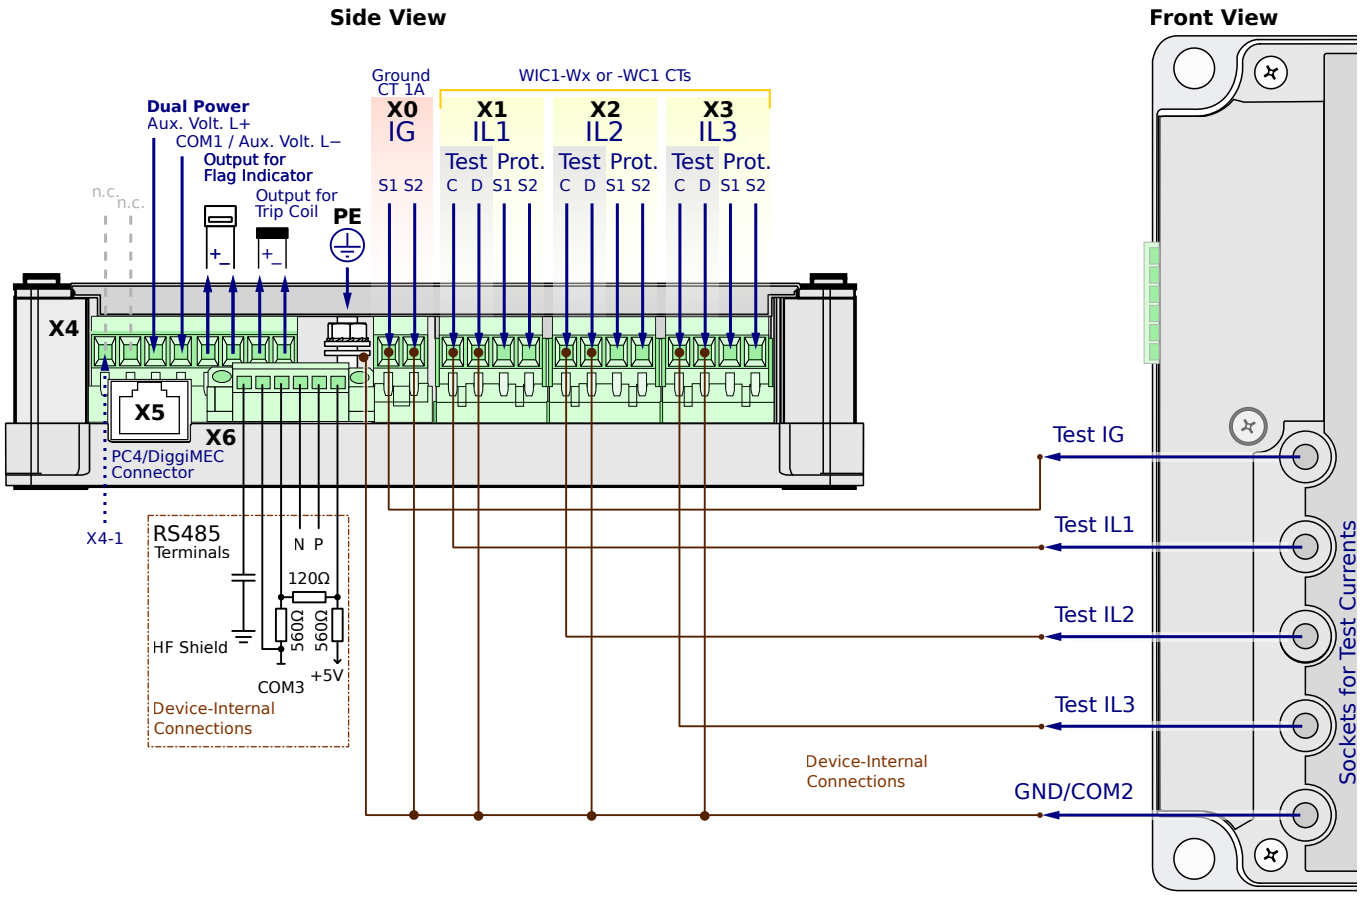


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0AC0

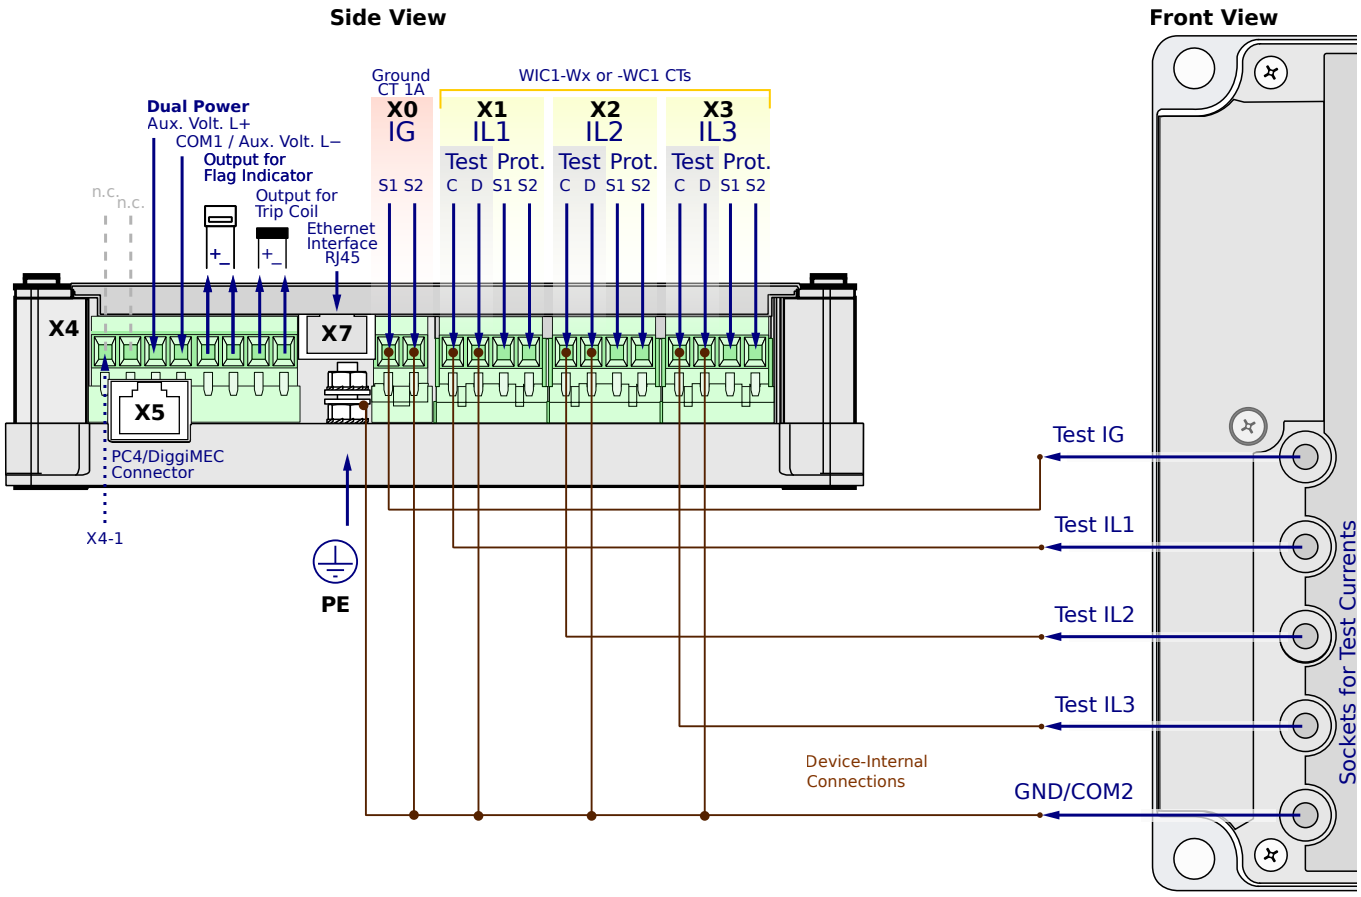


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0ACH

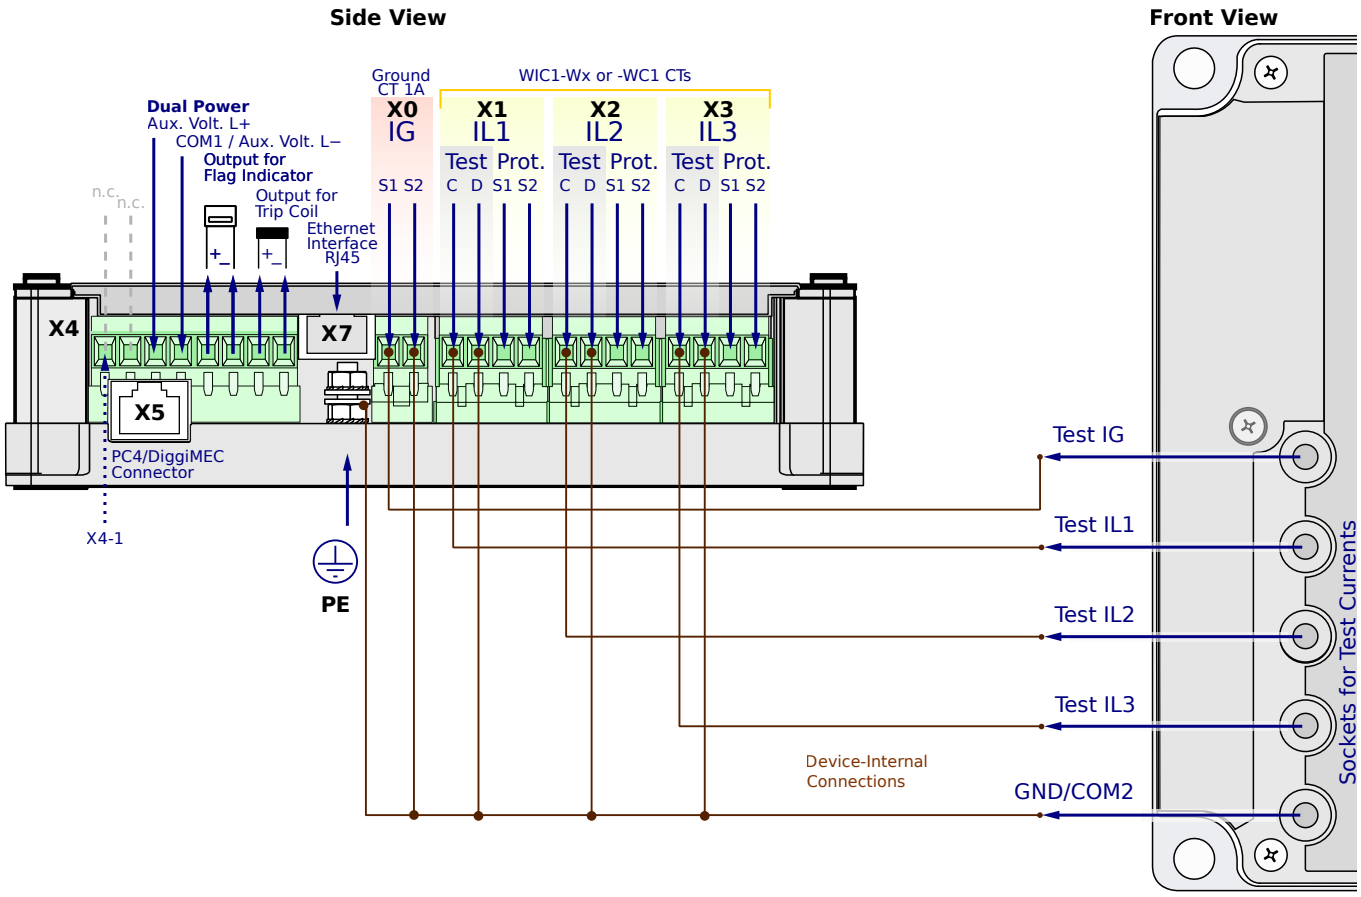


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0AL0

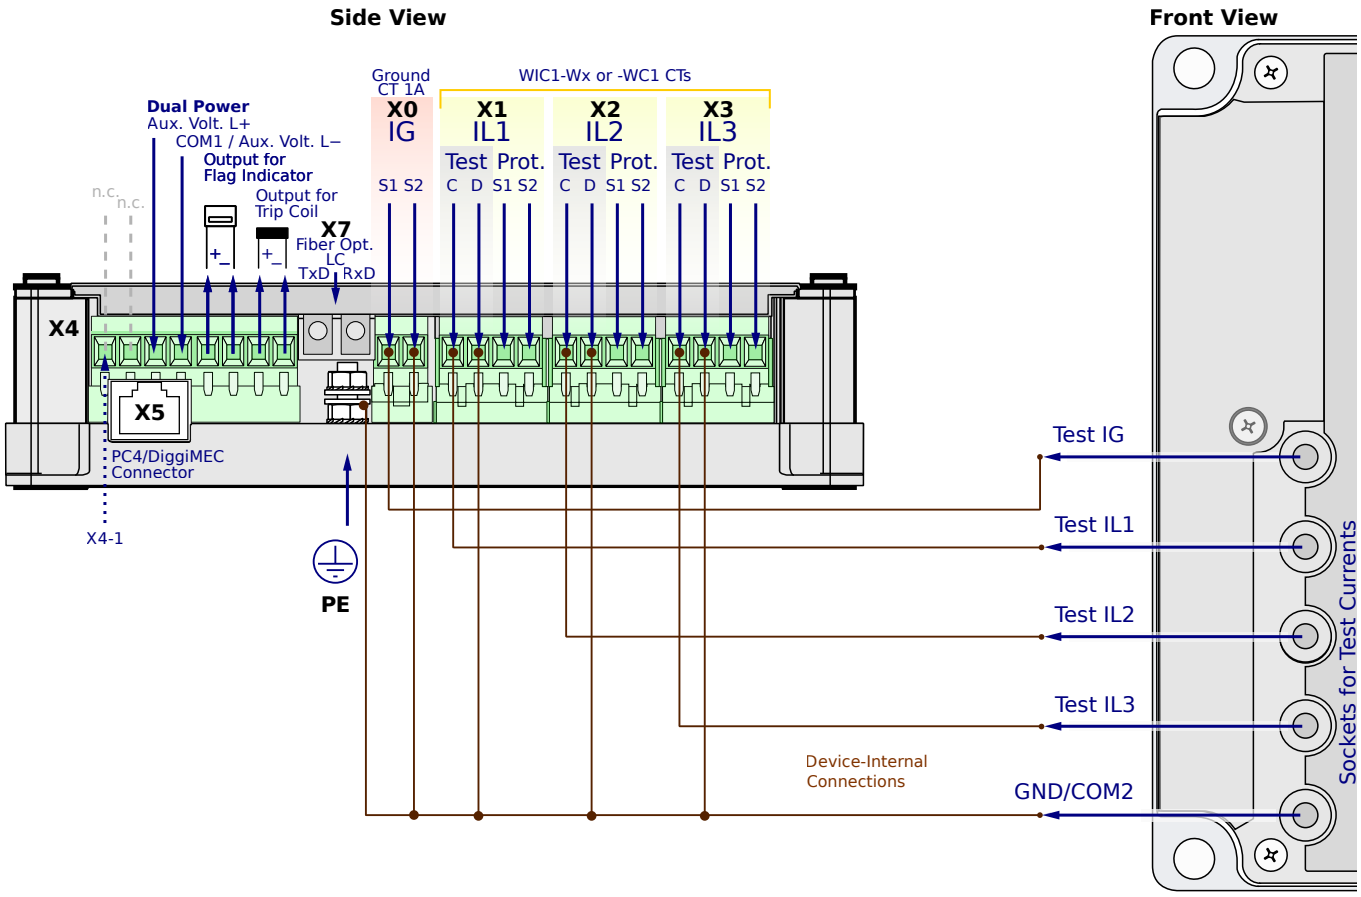


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM0ALH

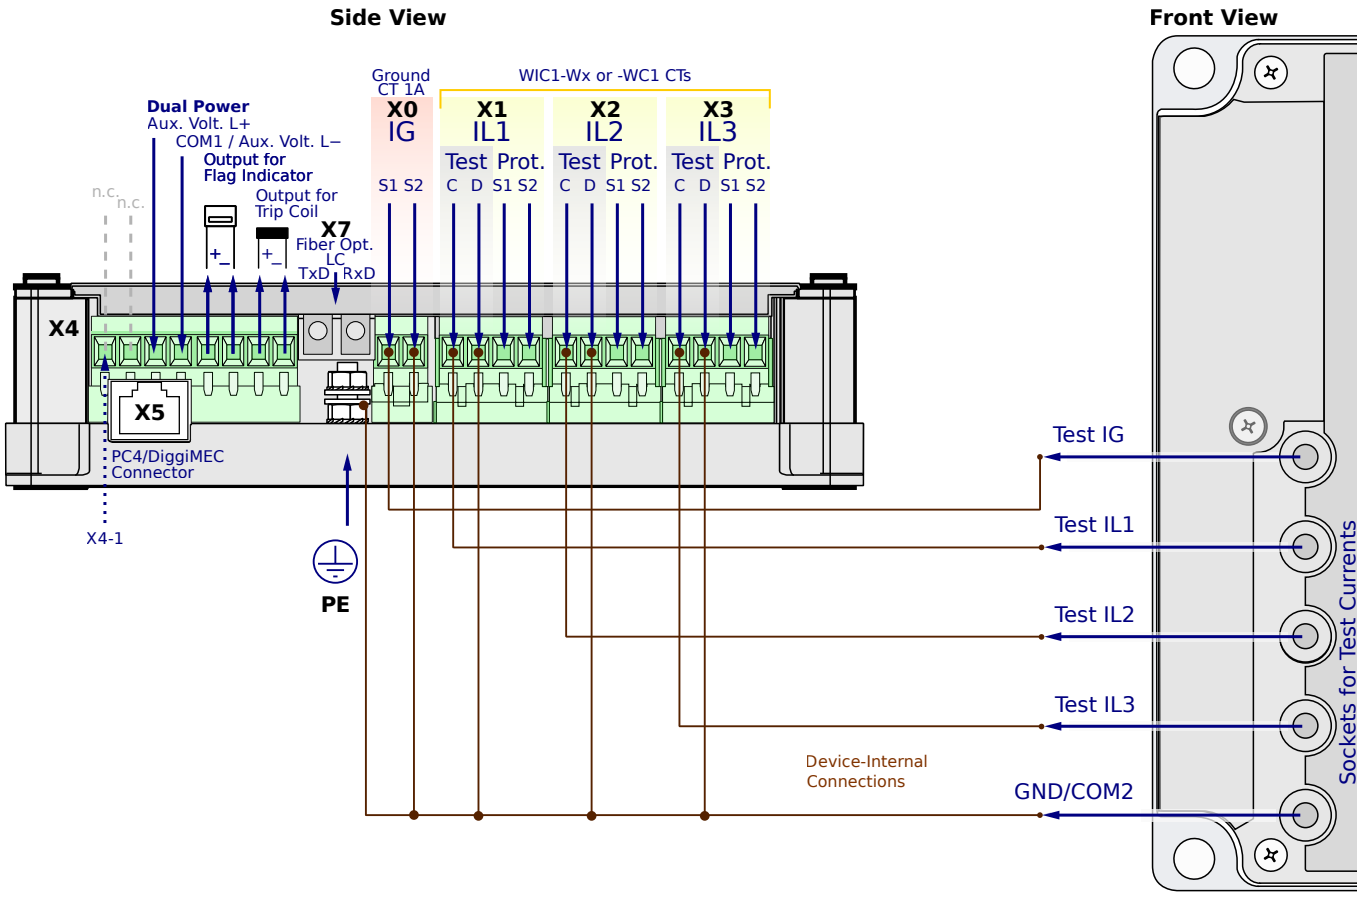


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM0PA0

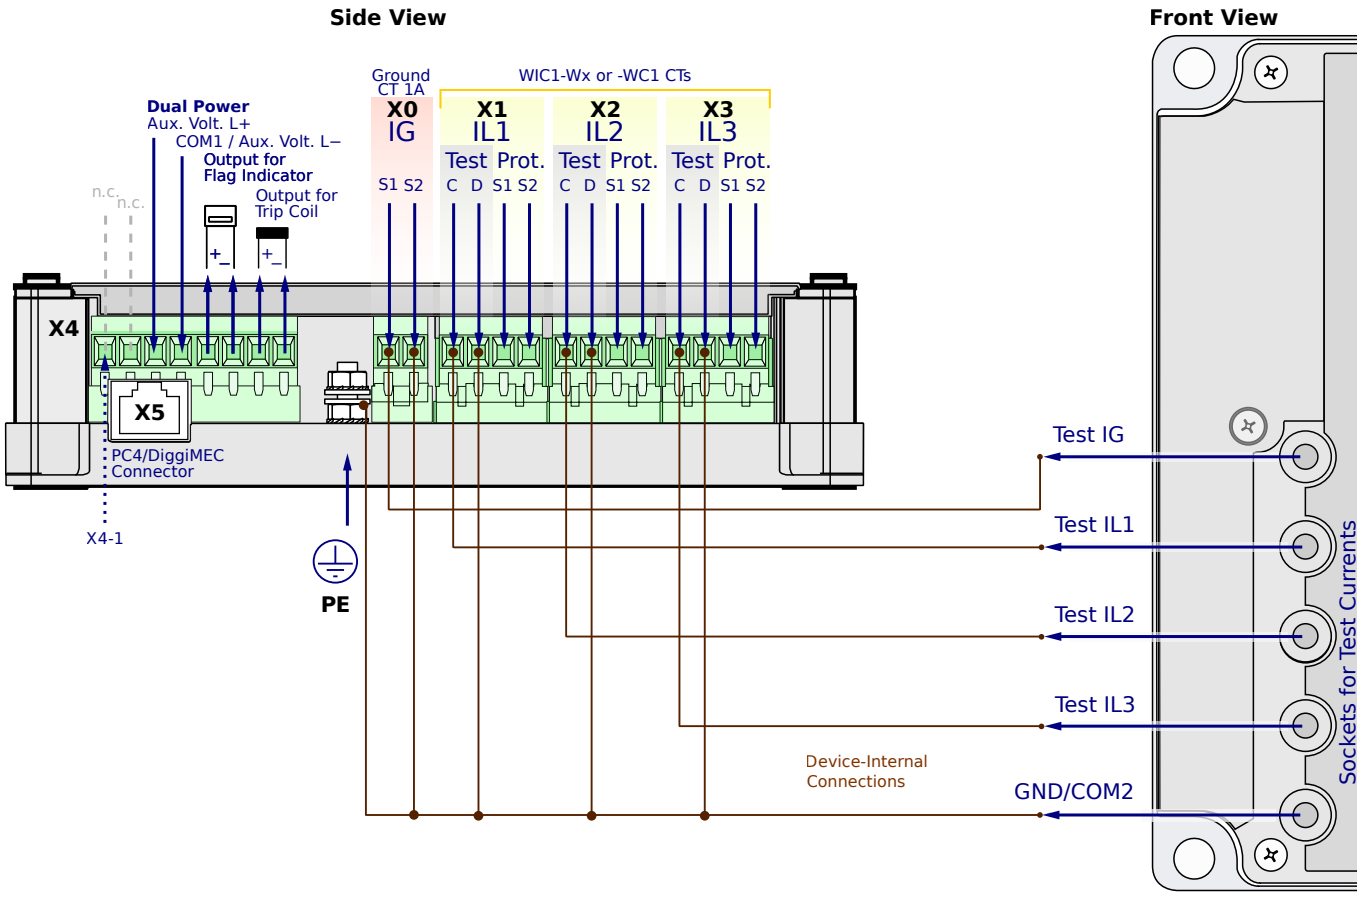


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0PAH

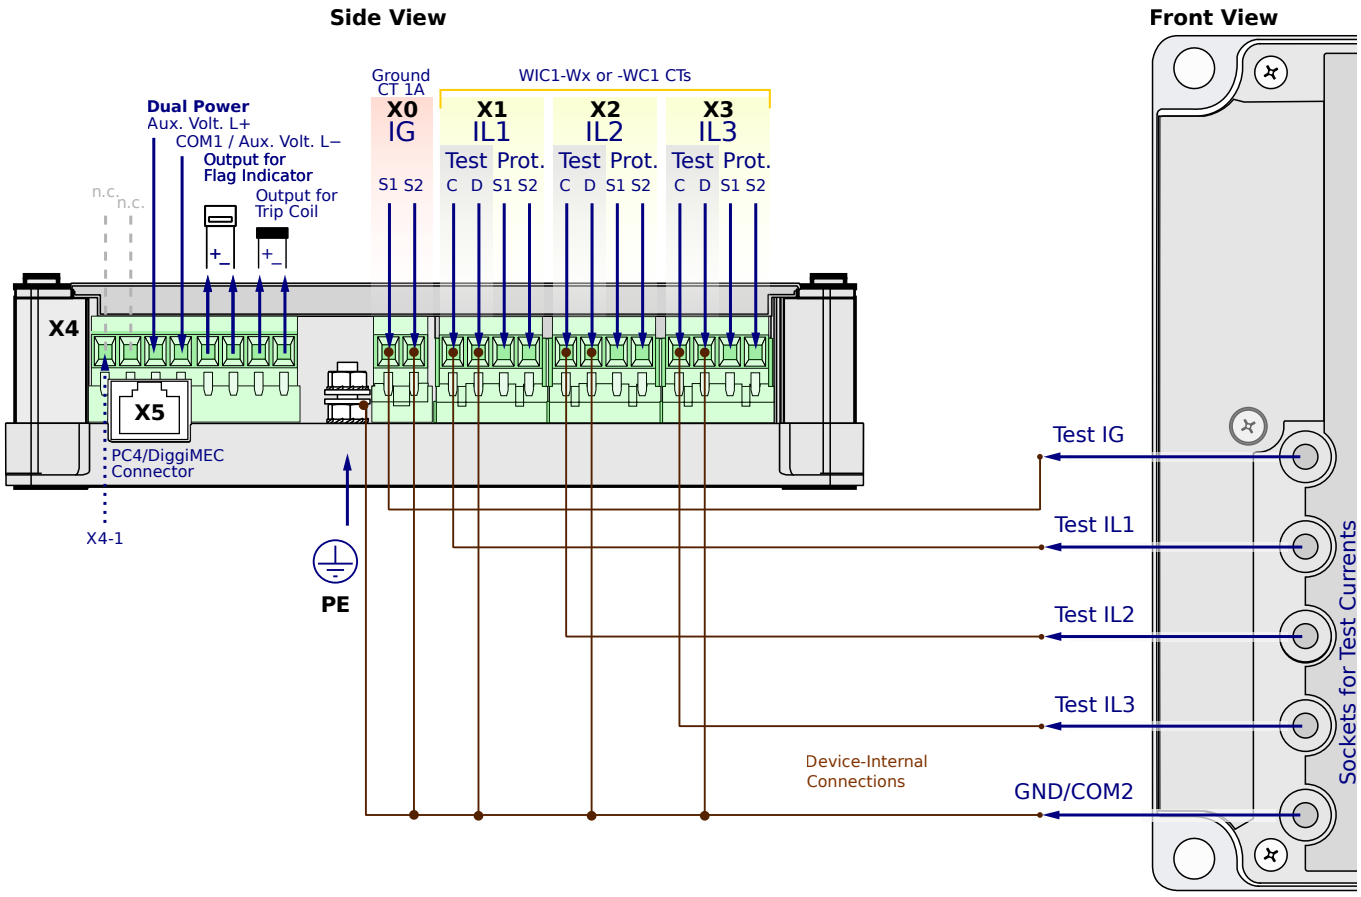


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM0PB0

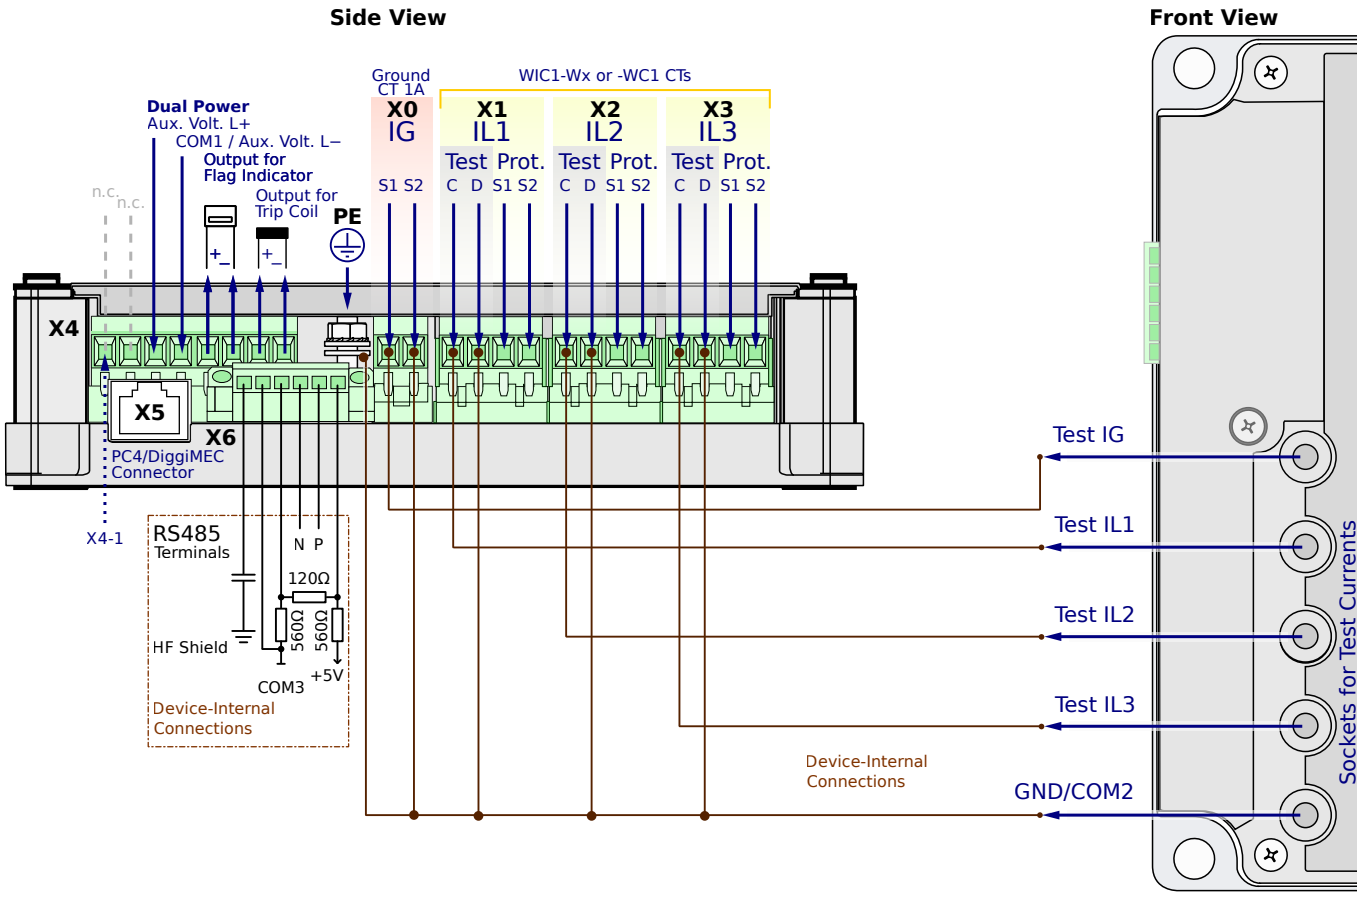


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0PBH

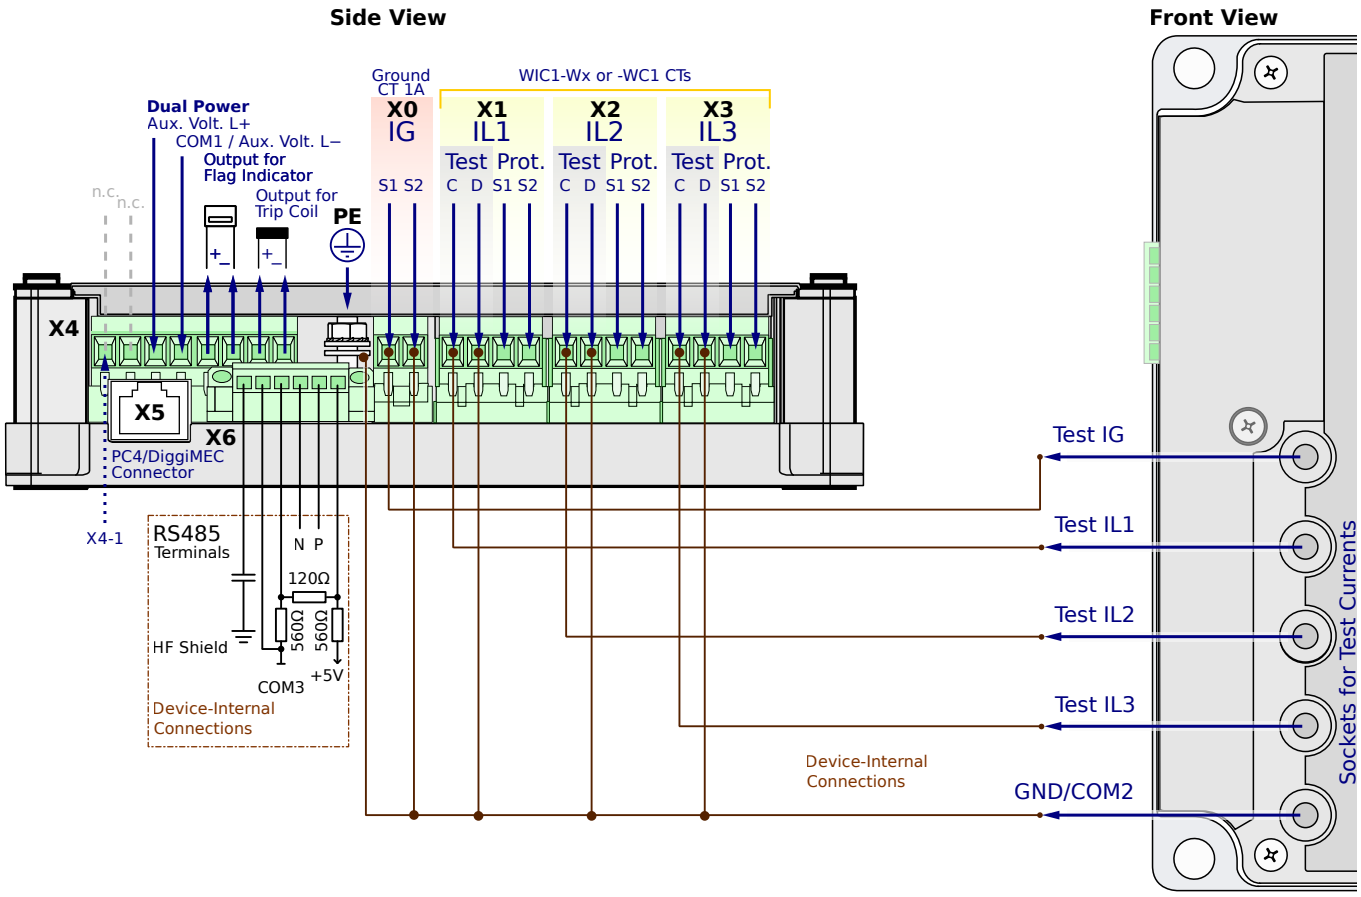


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM0PC0

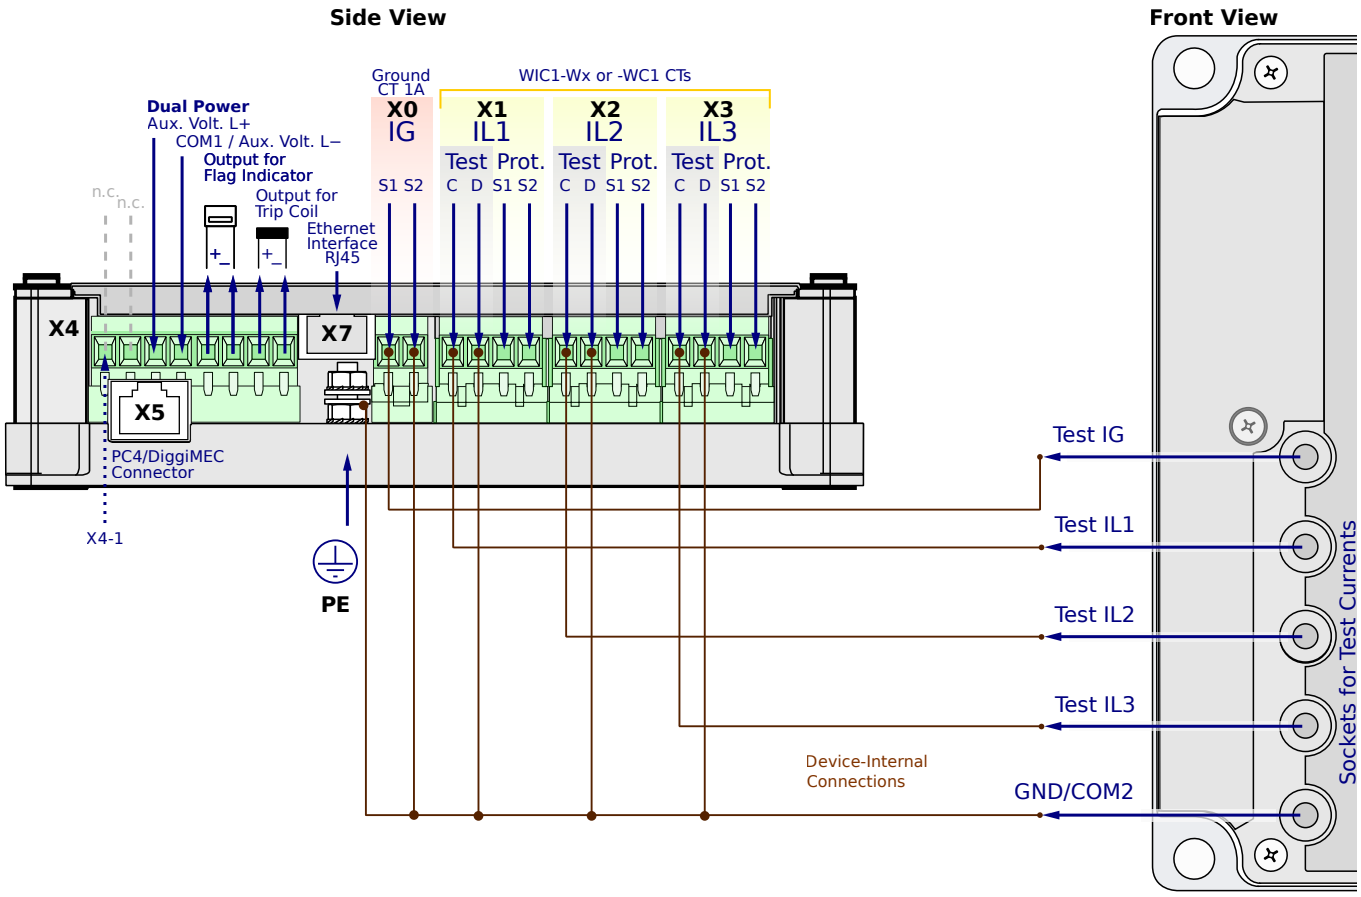


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0PCH

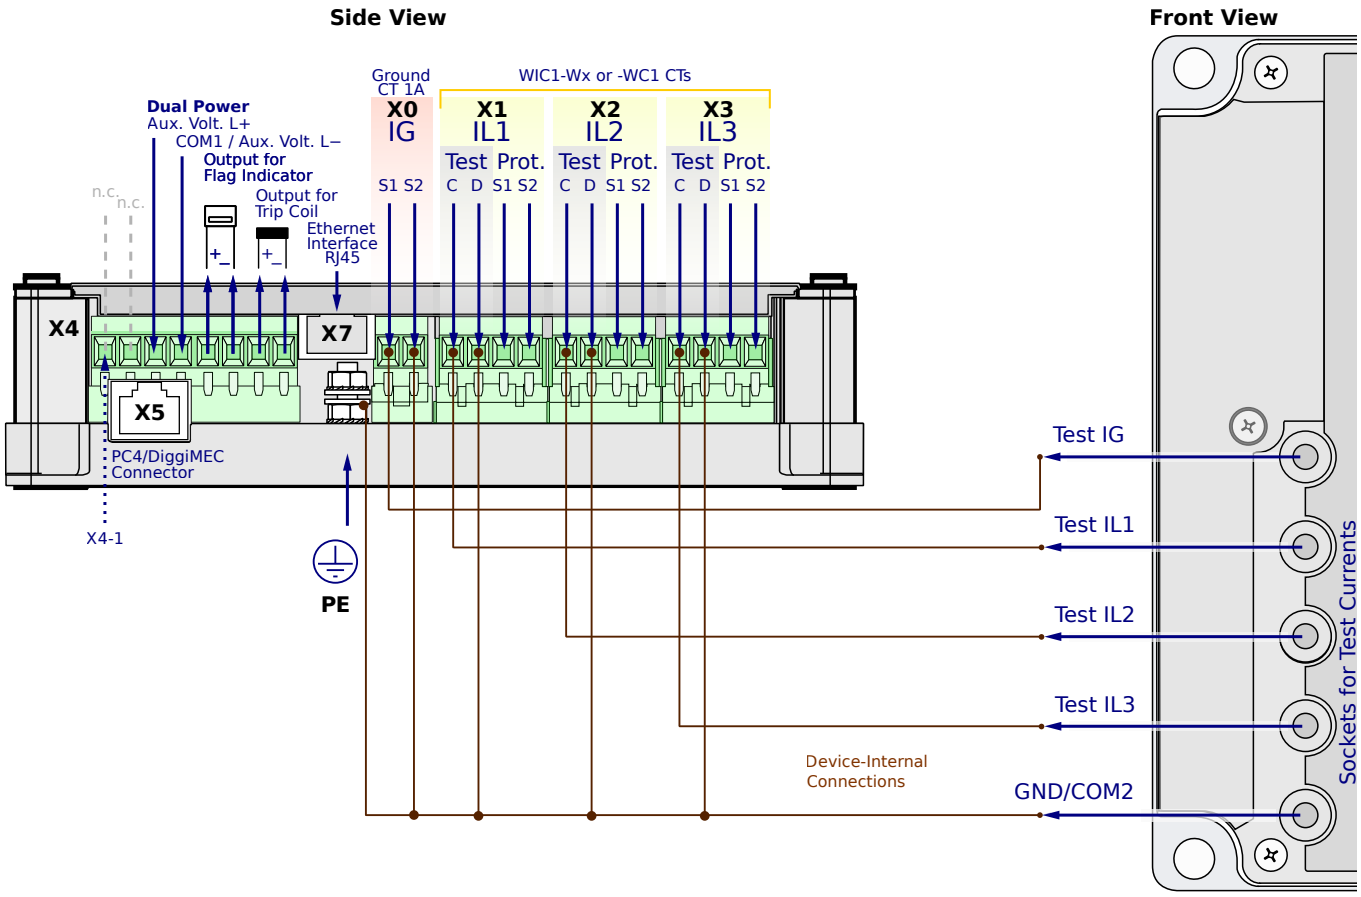


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM0PL0

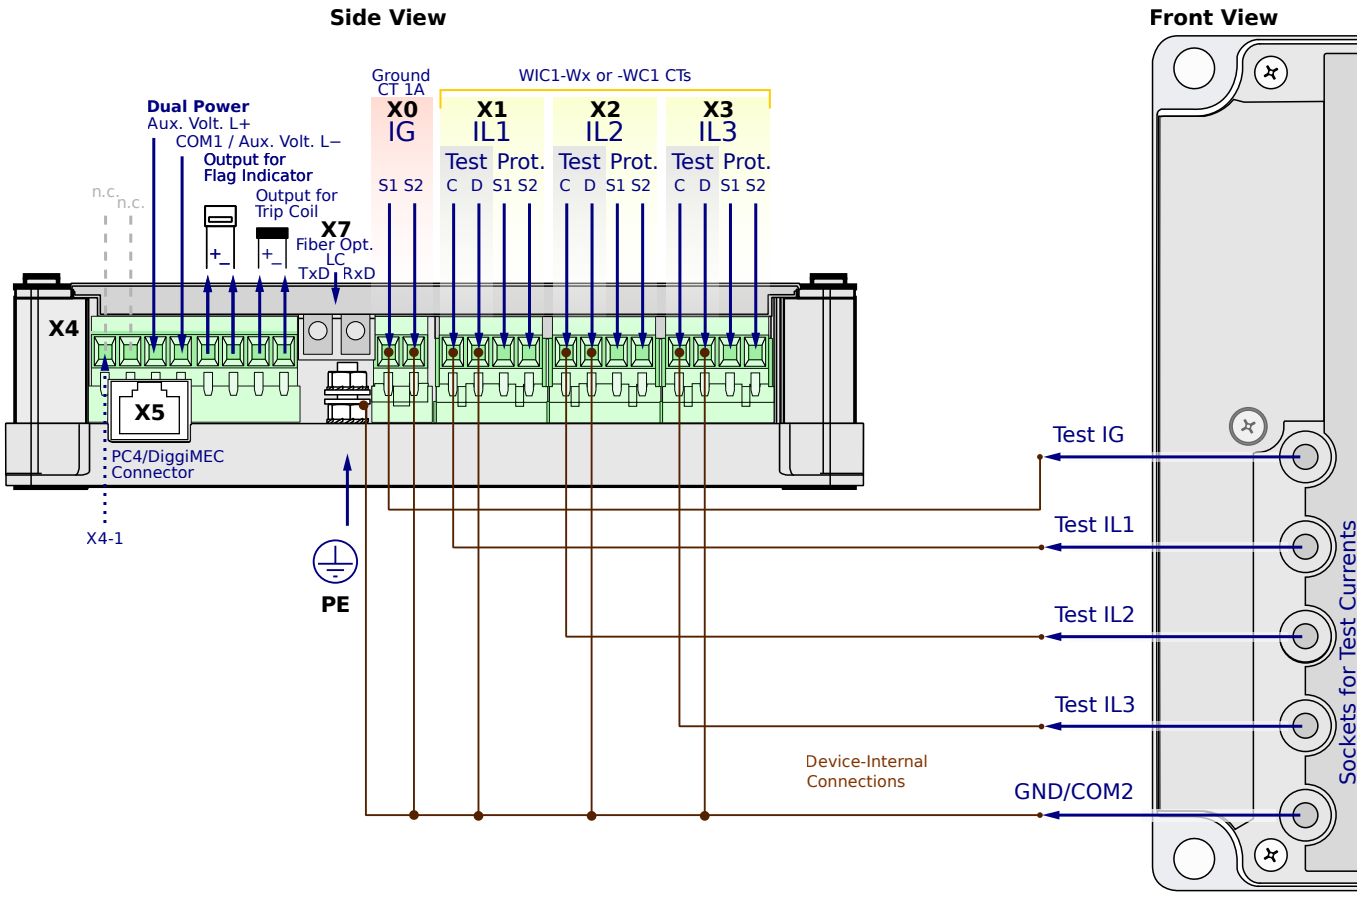


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM0PLH

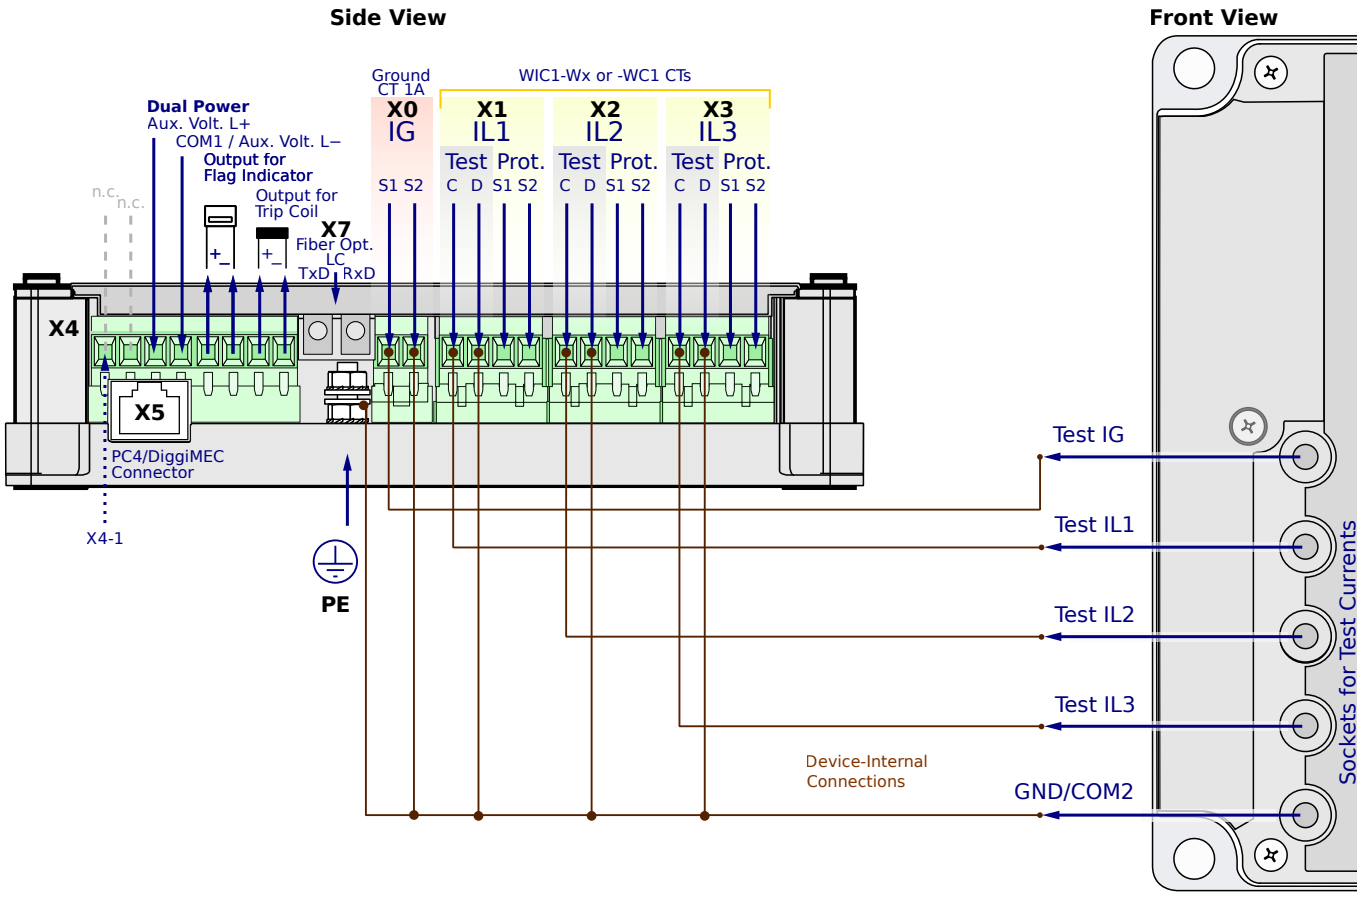


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1SA0

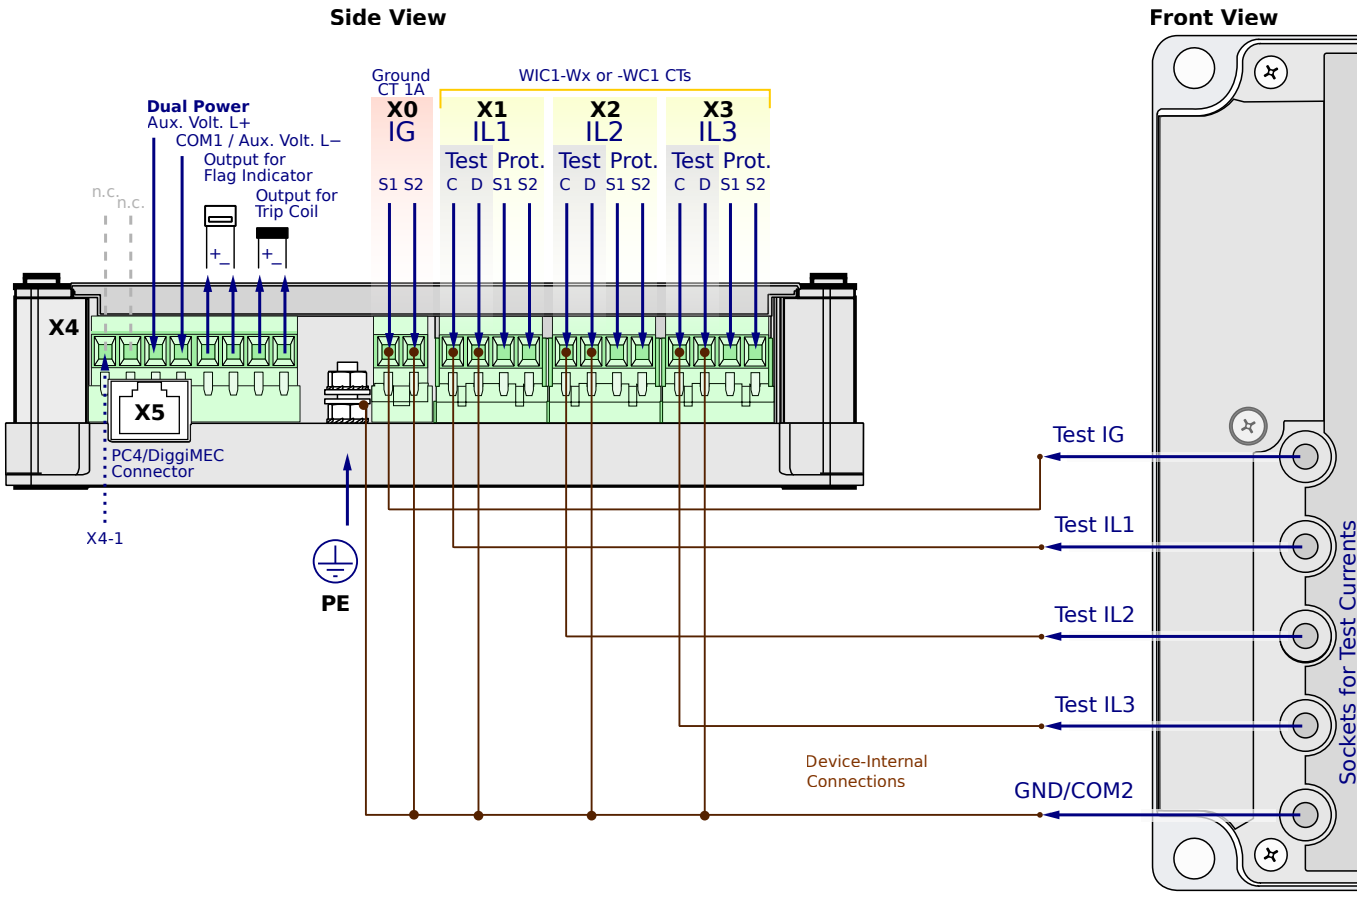


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1SAH

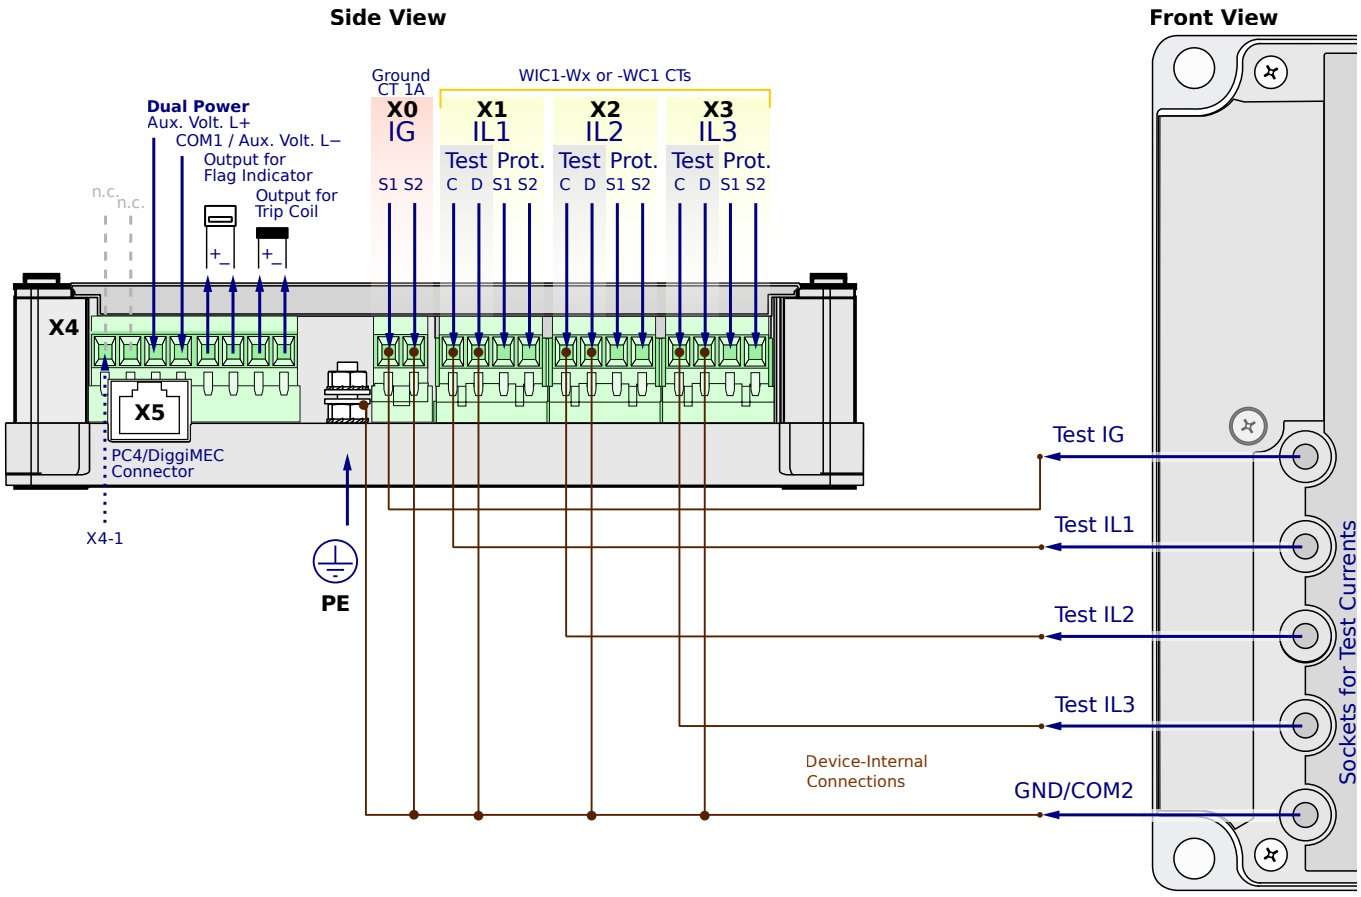


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1SB0

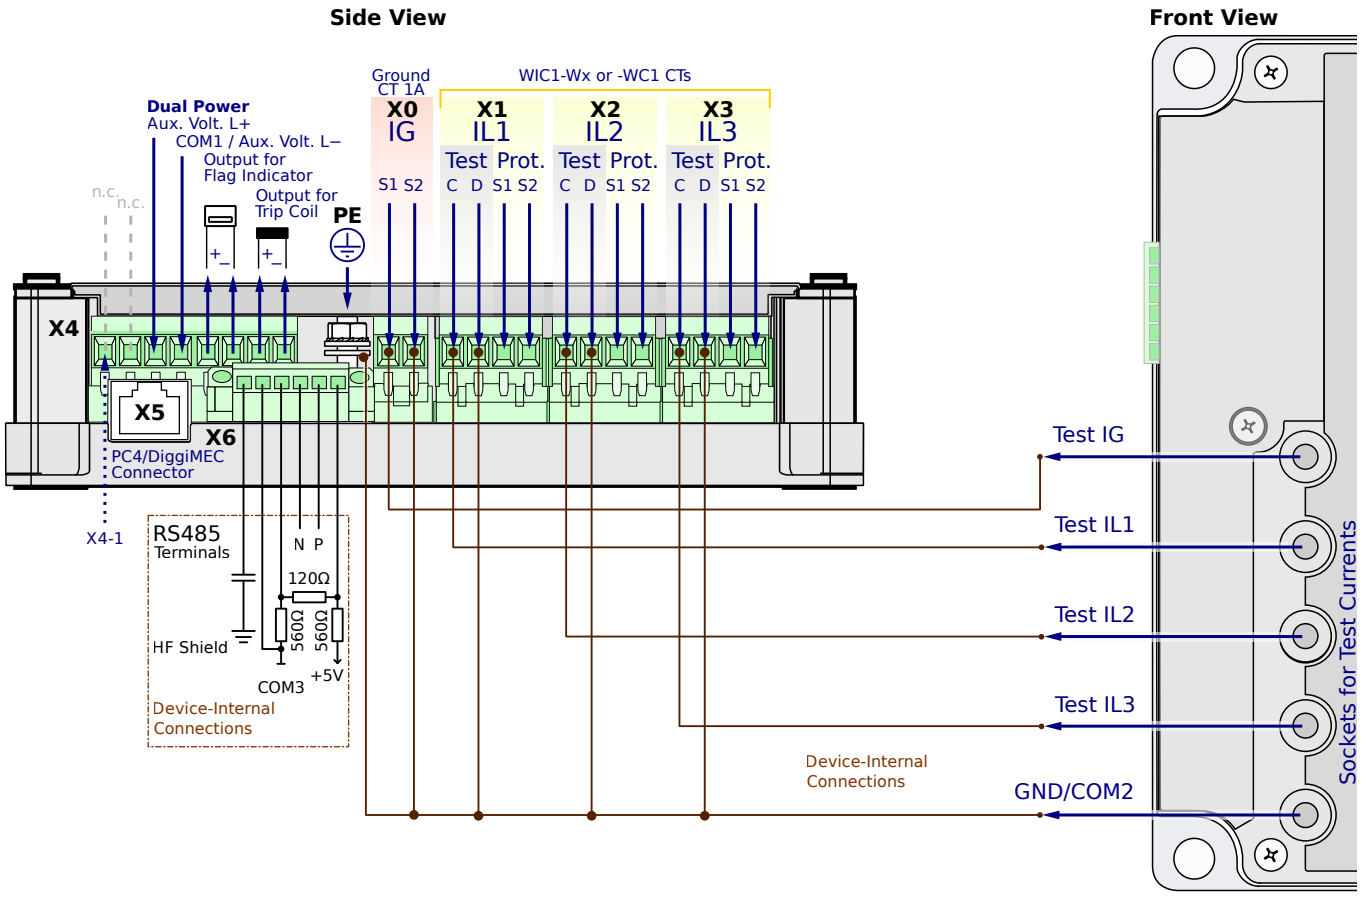


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1SBH

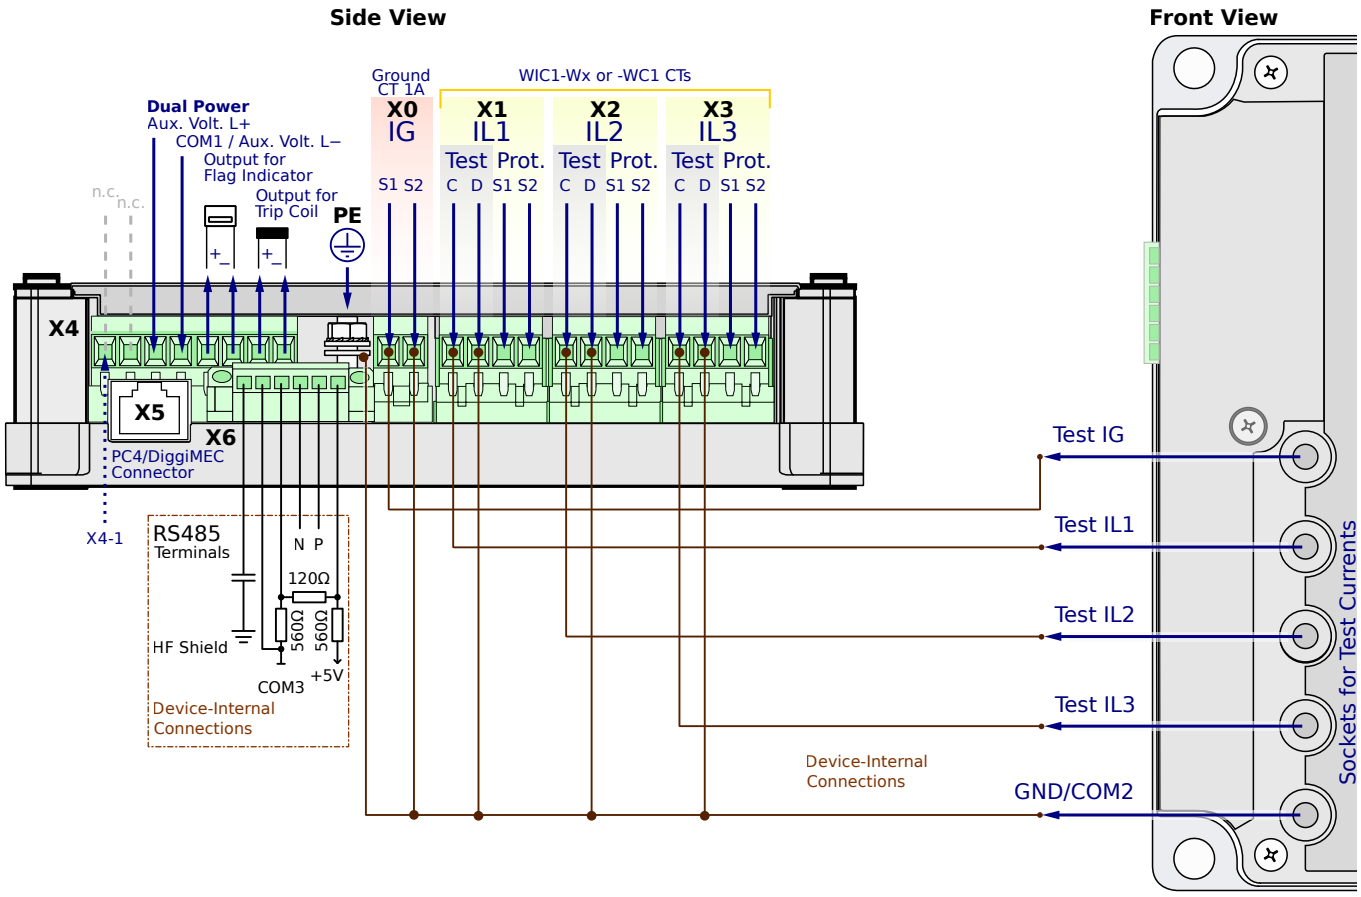


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1SC0

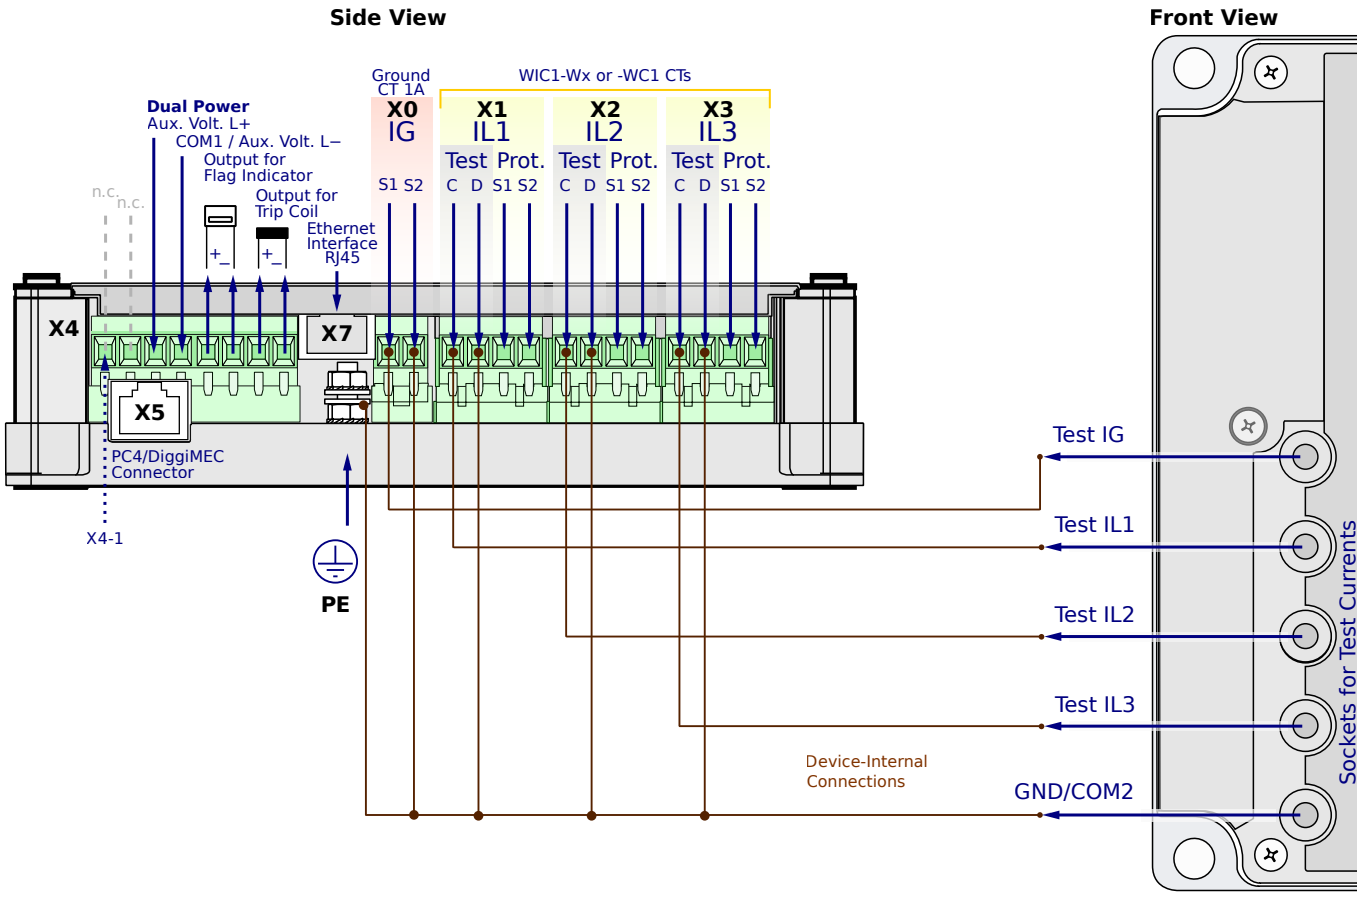


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1SCH

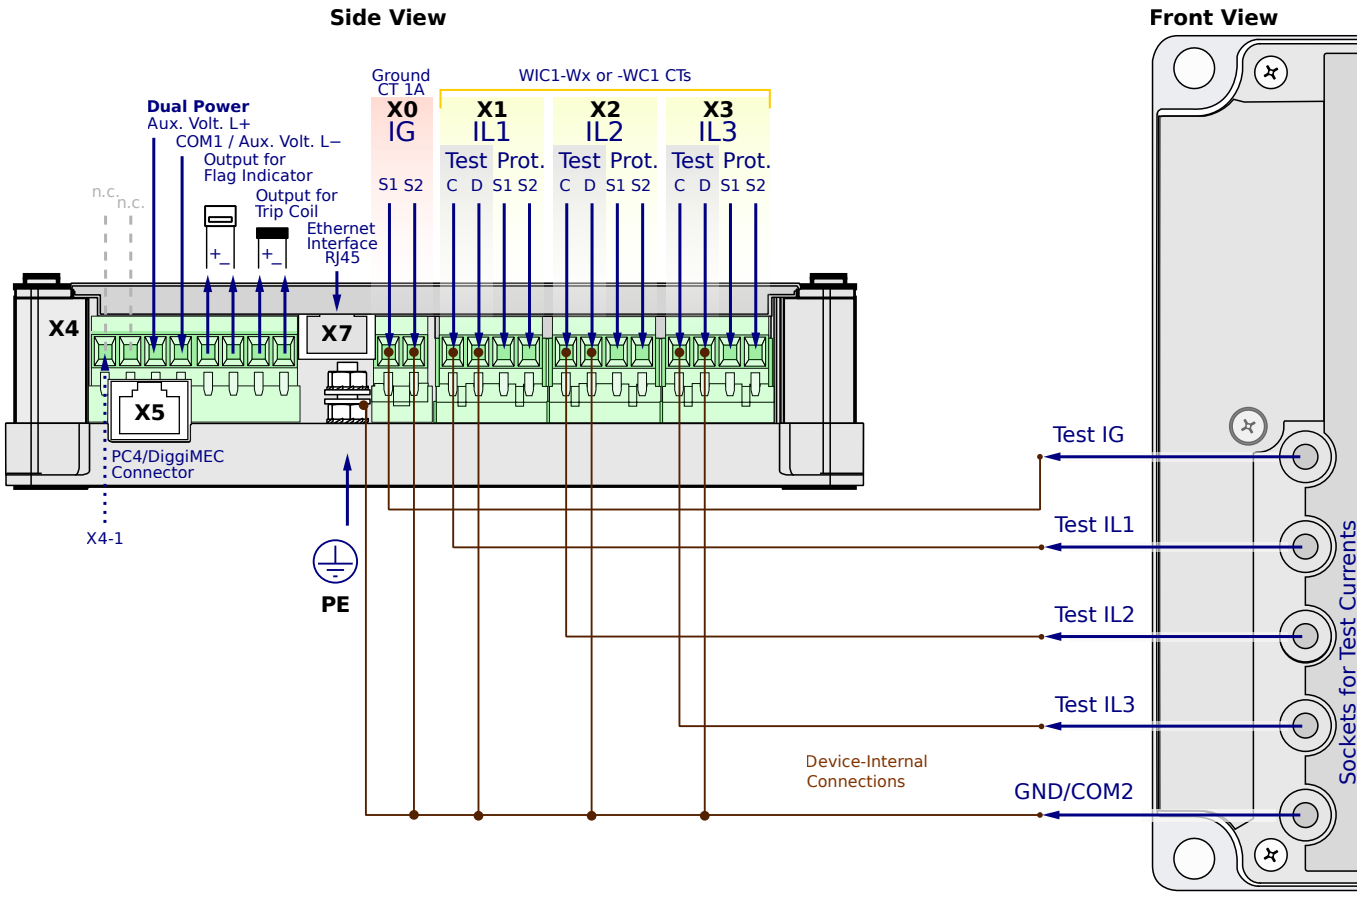


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1SL0

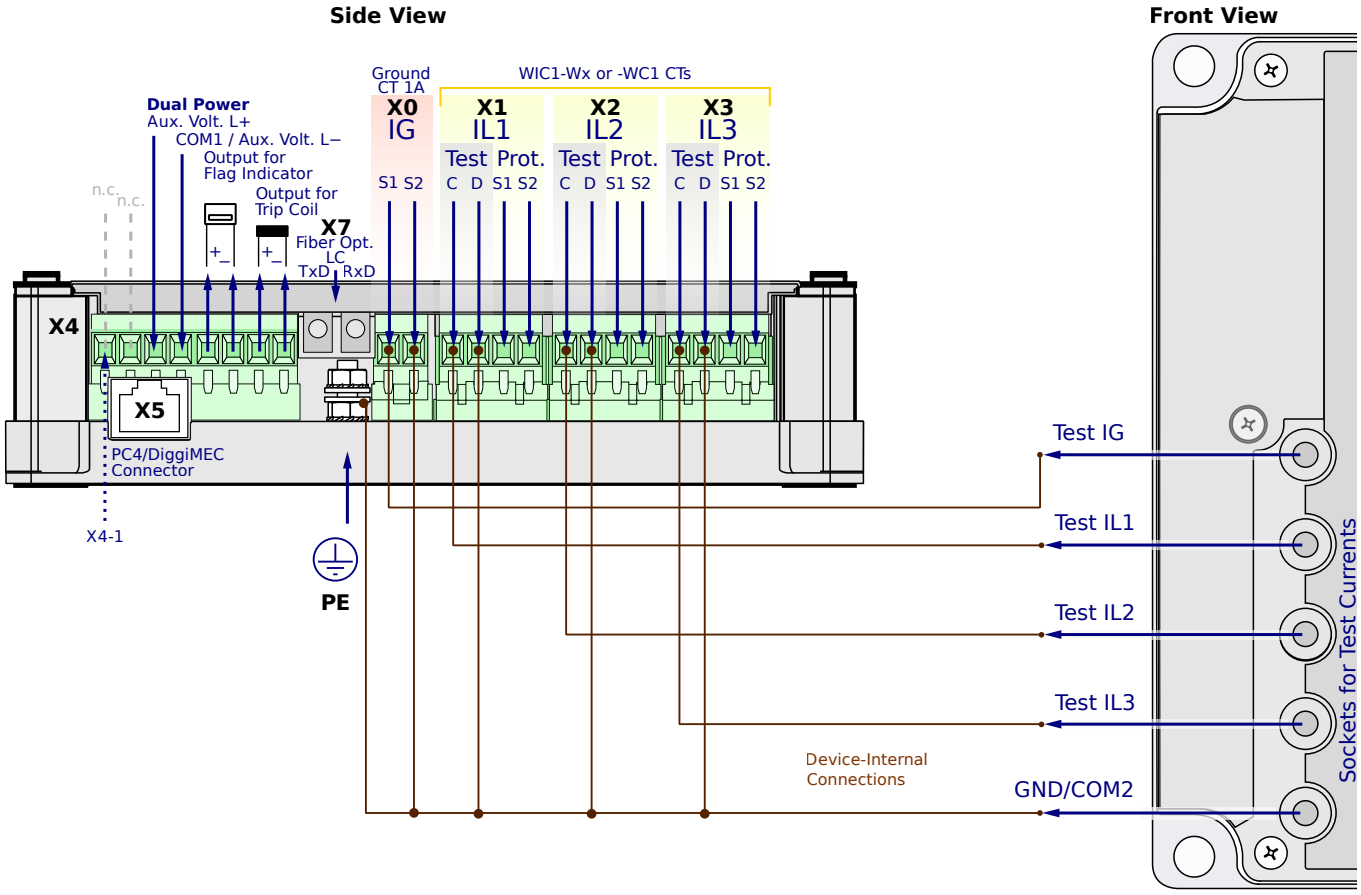


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1SLH

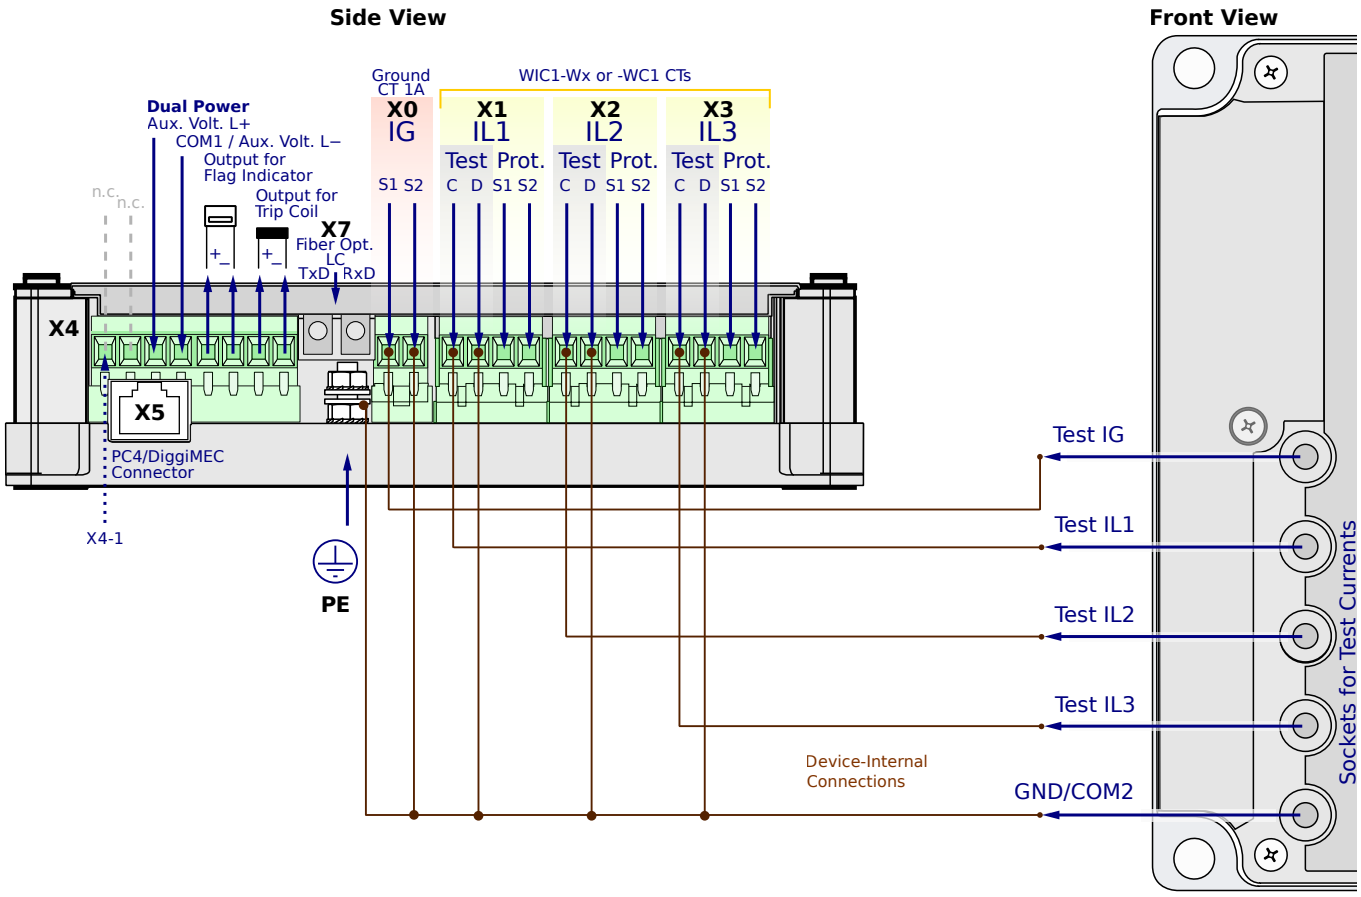


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1AA0

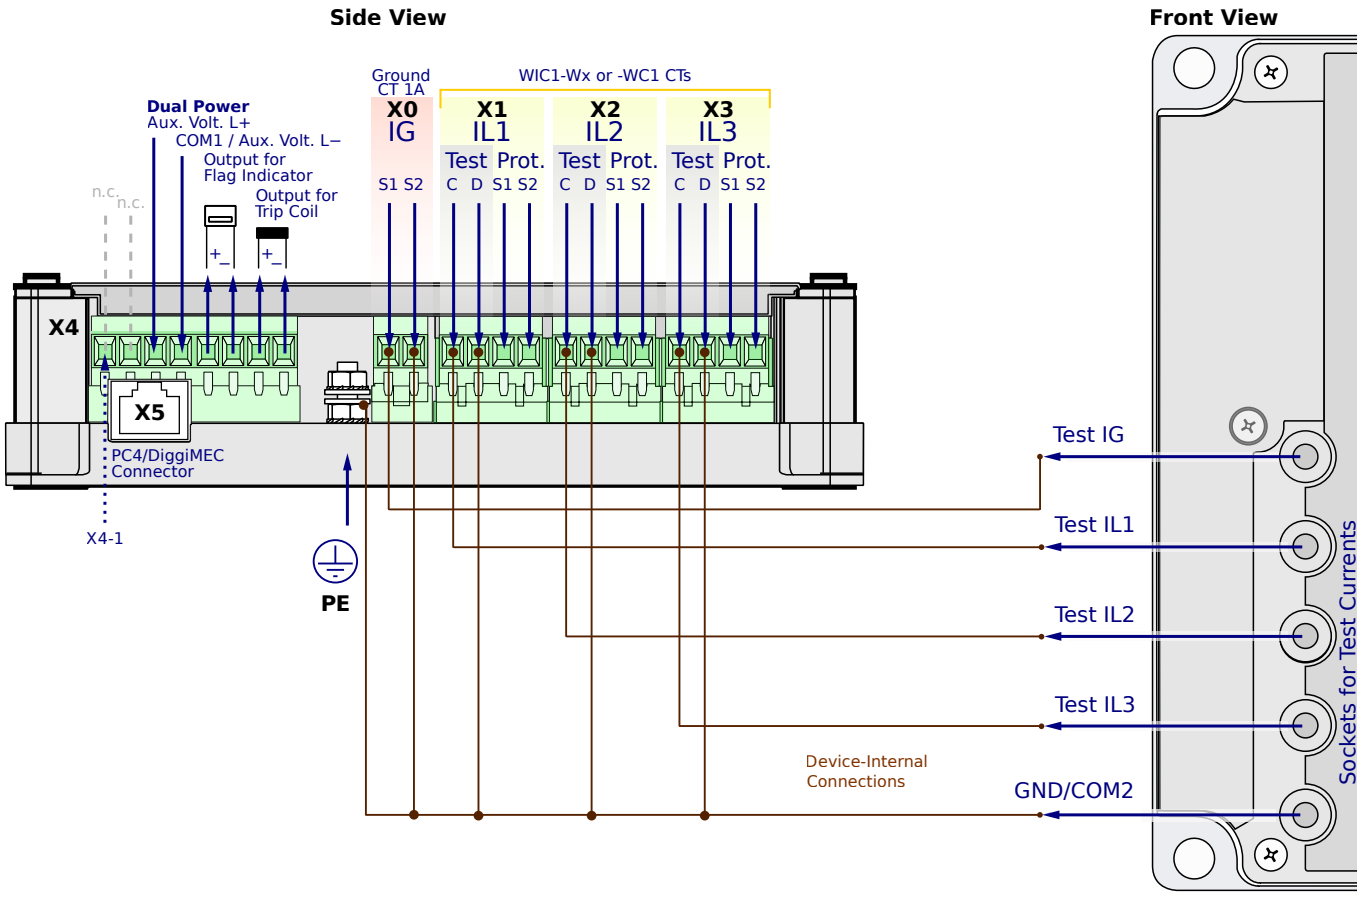


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1AAH

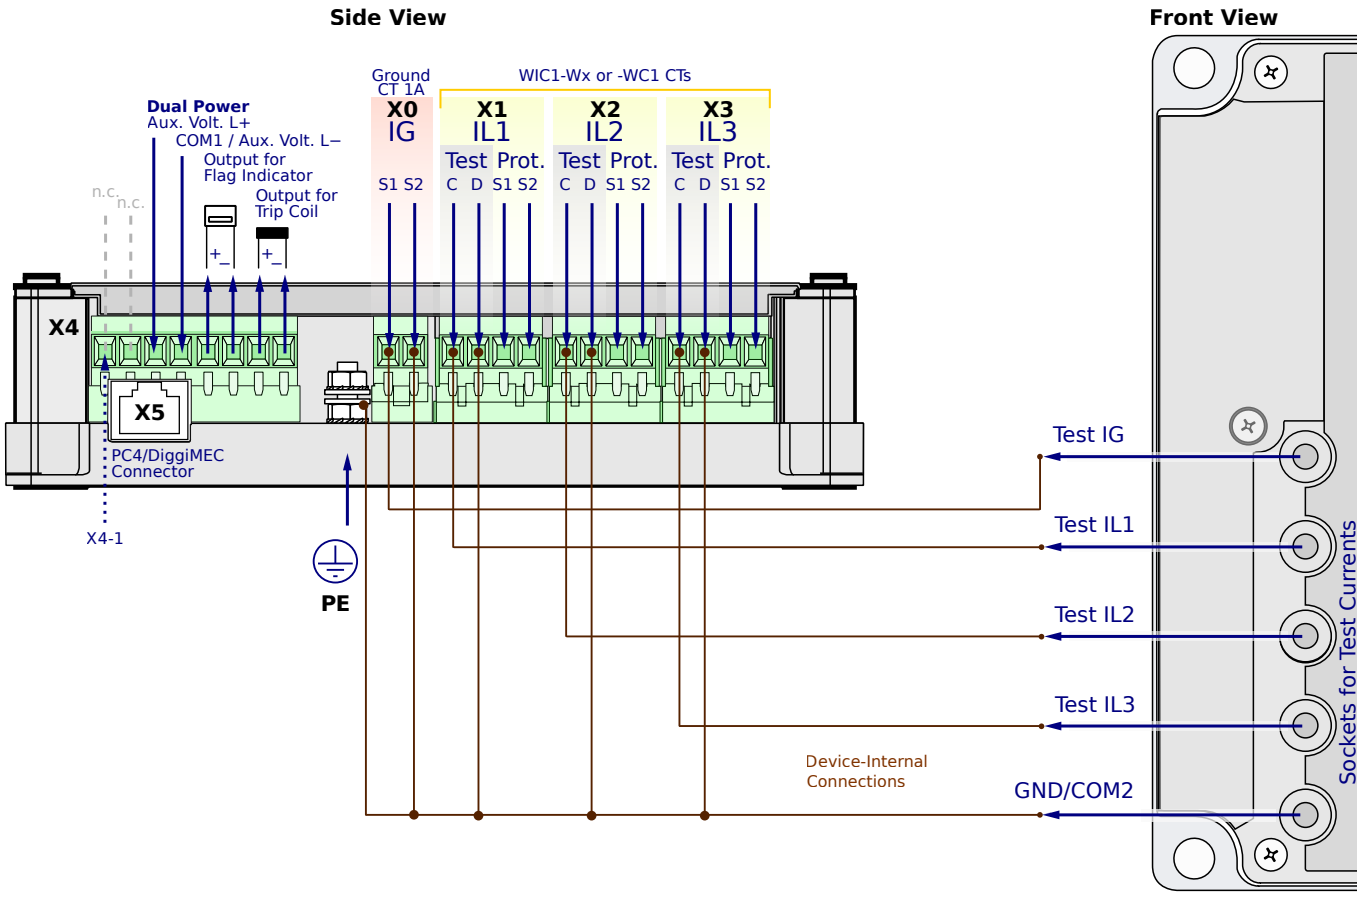


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1AB0

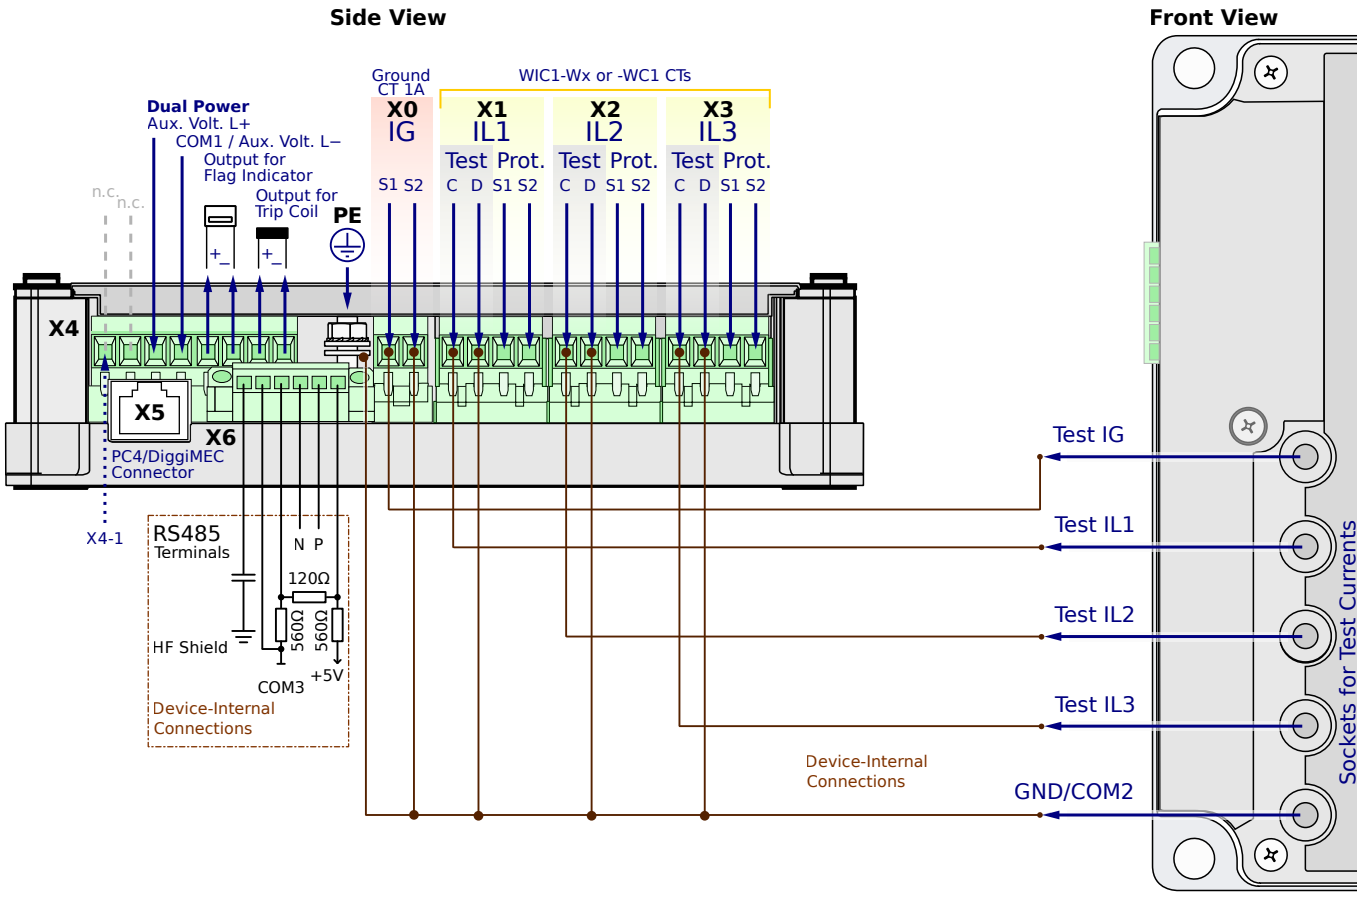


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1ABH

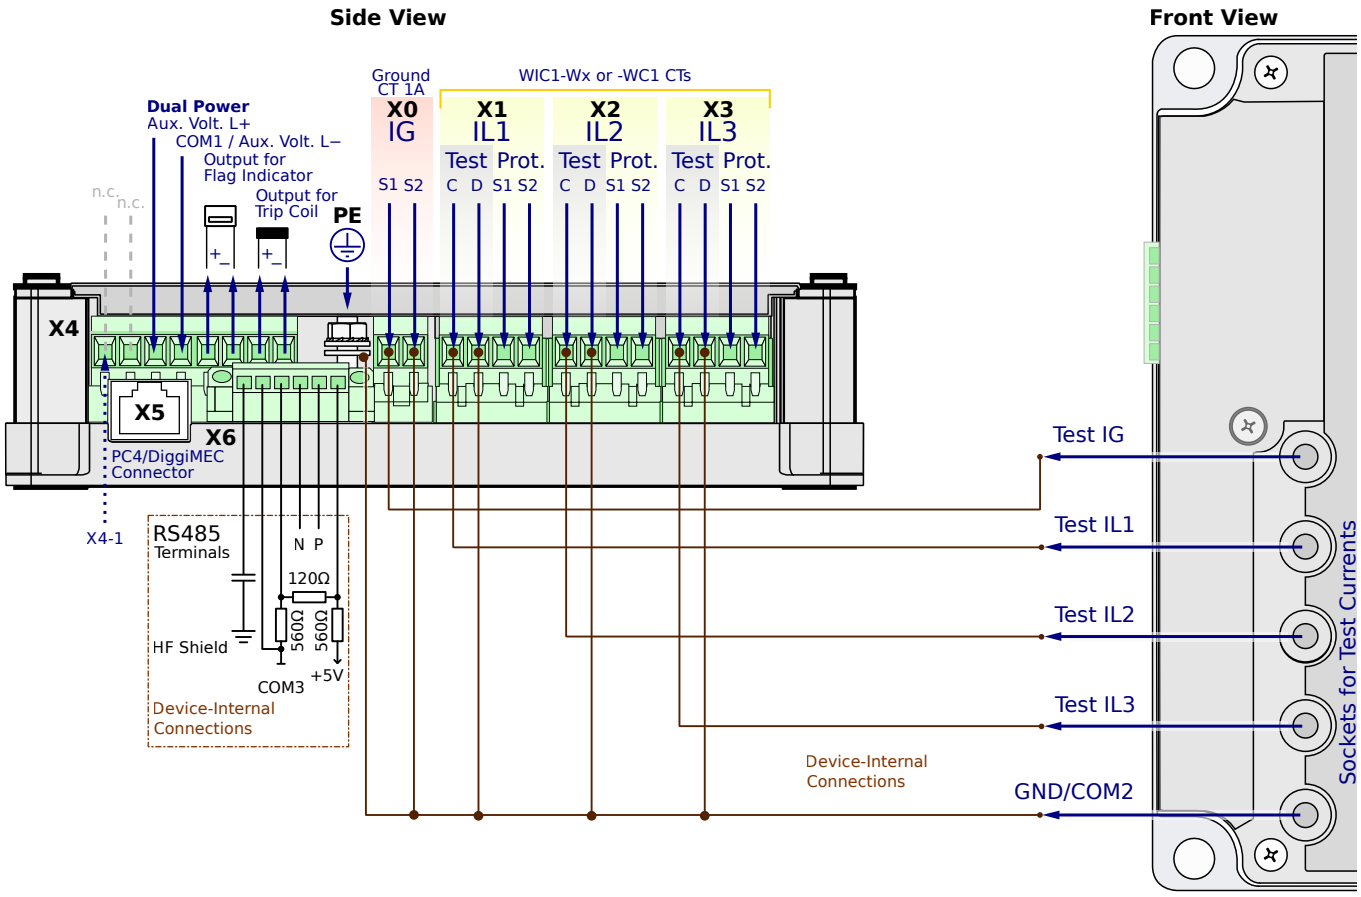


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1AC0

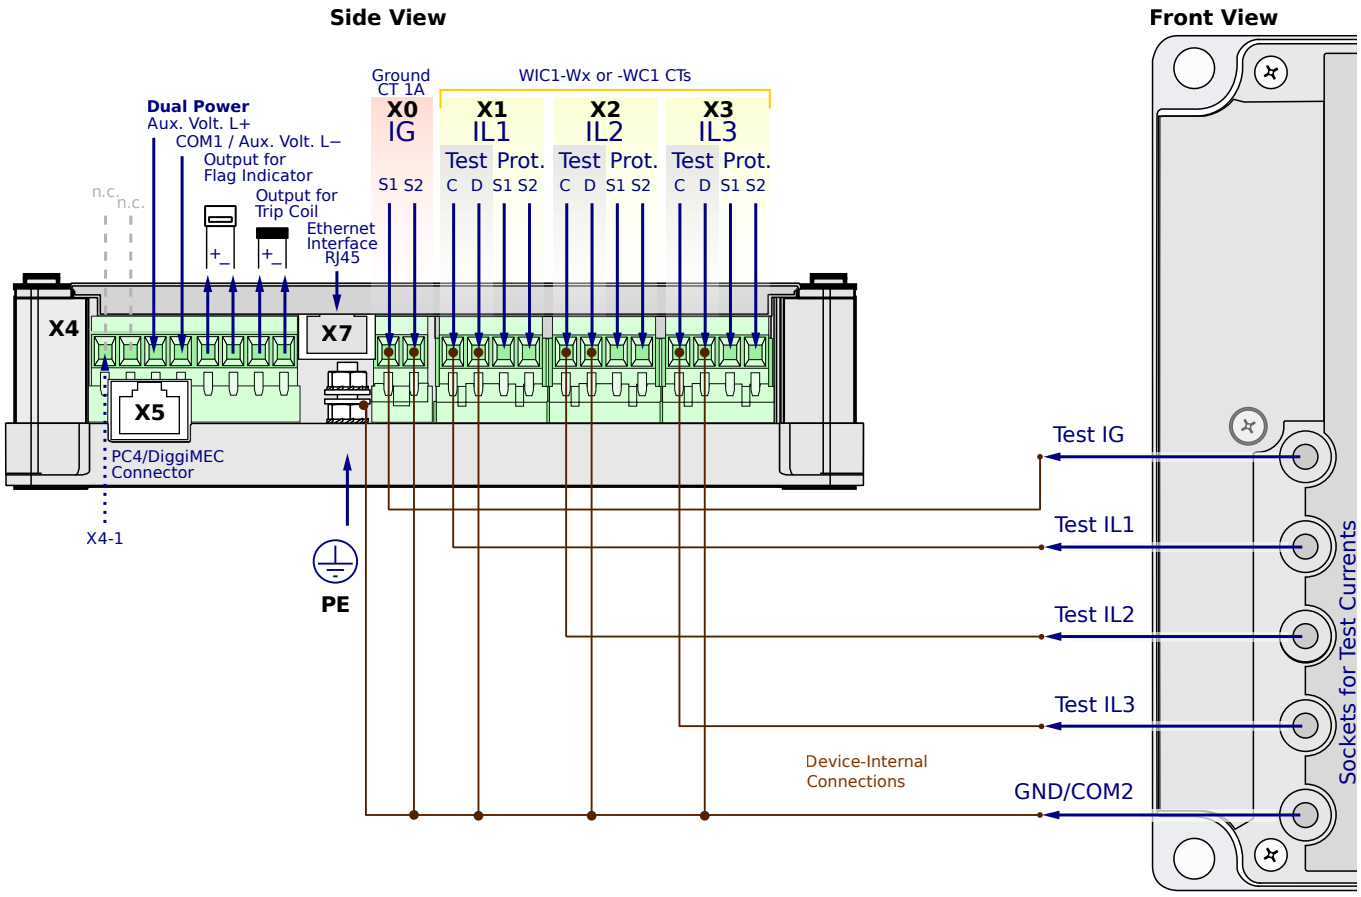


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1ACH

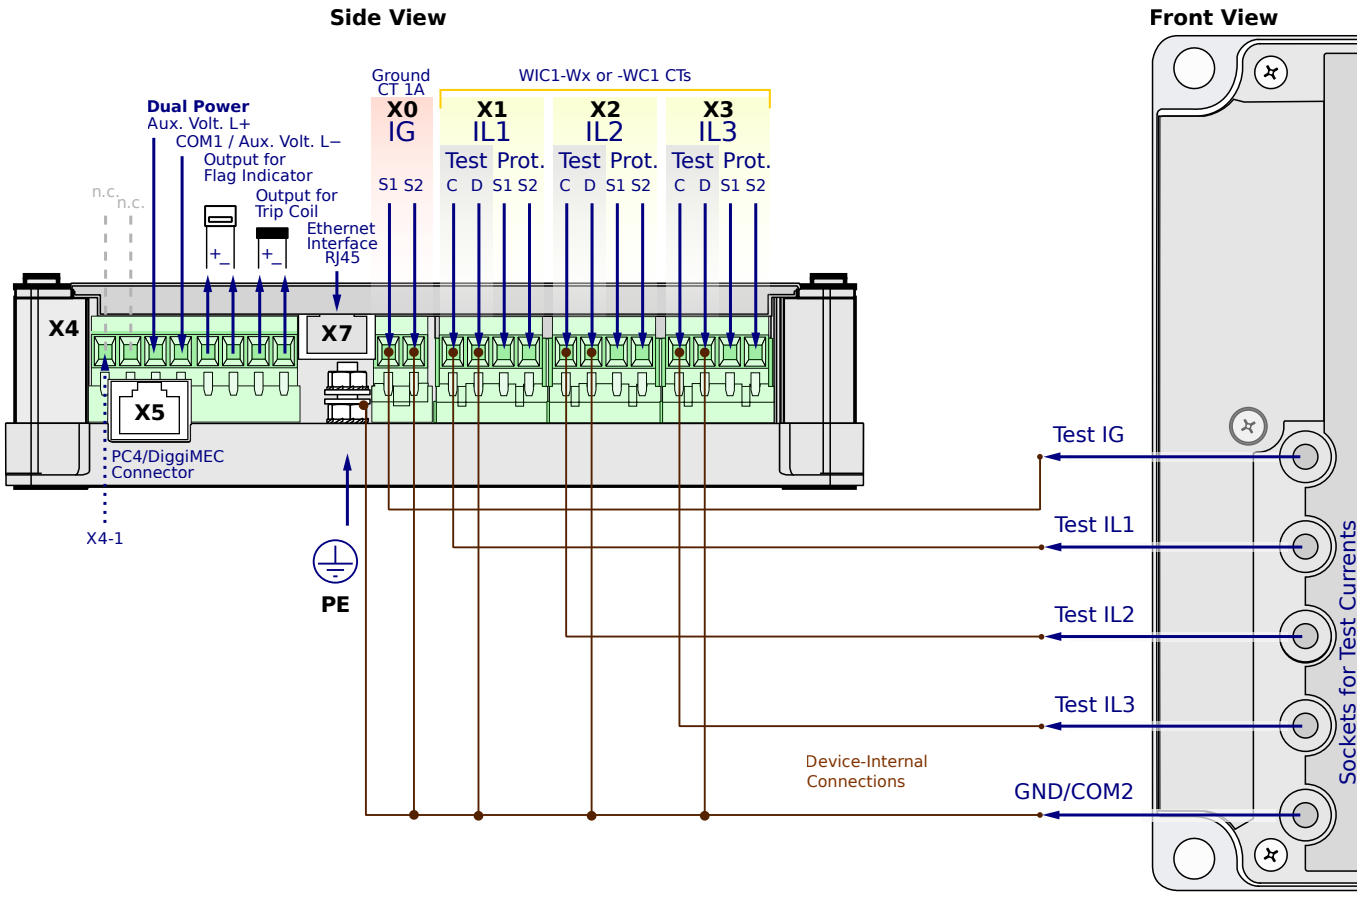


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1AL0

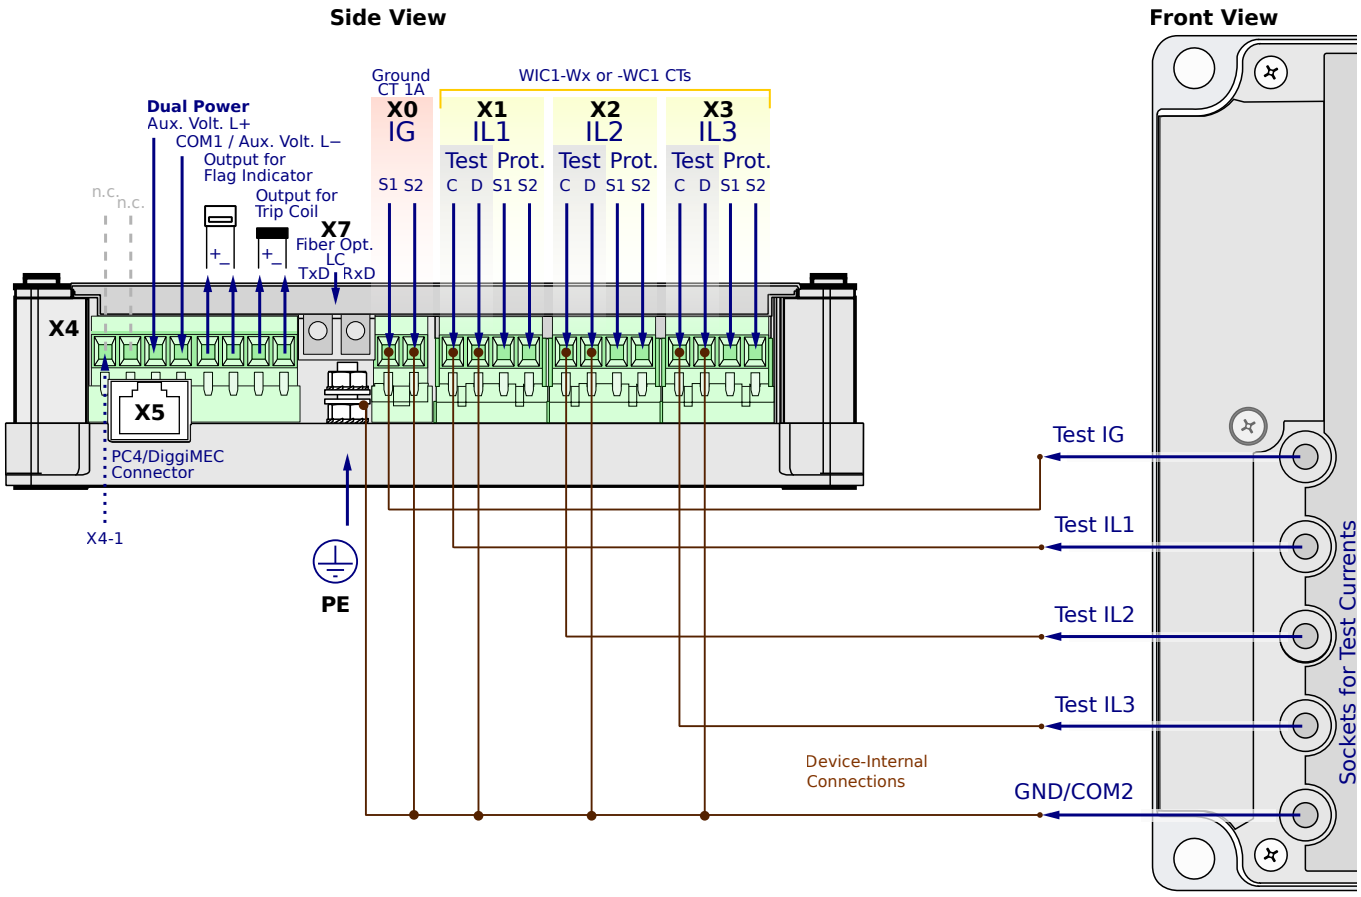


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1ALH

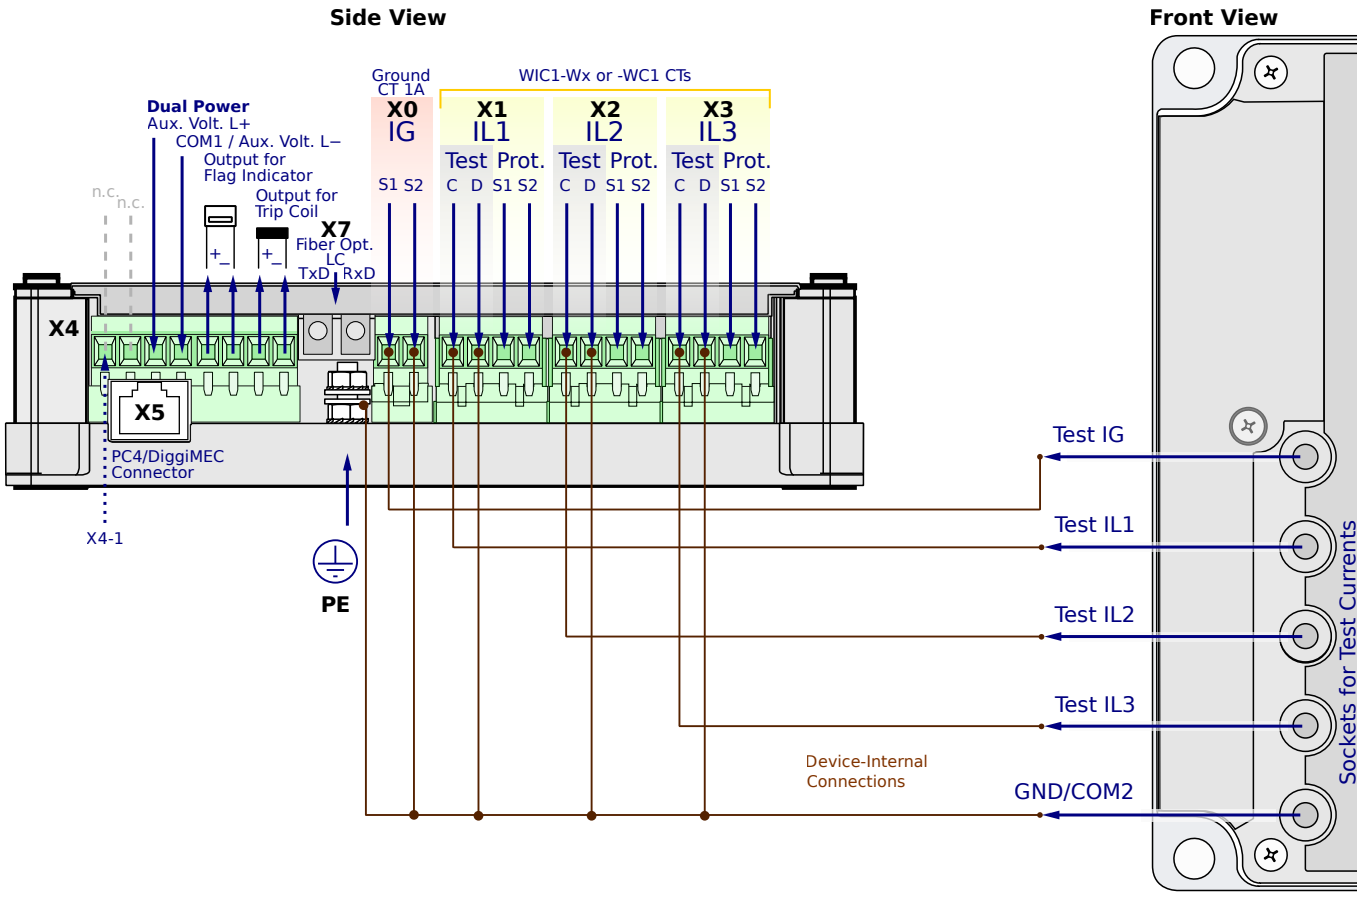


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1PA0

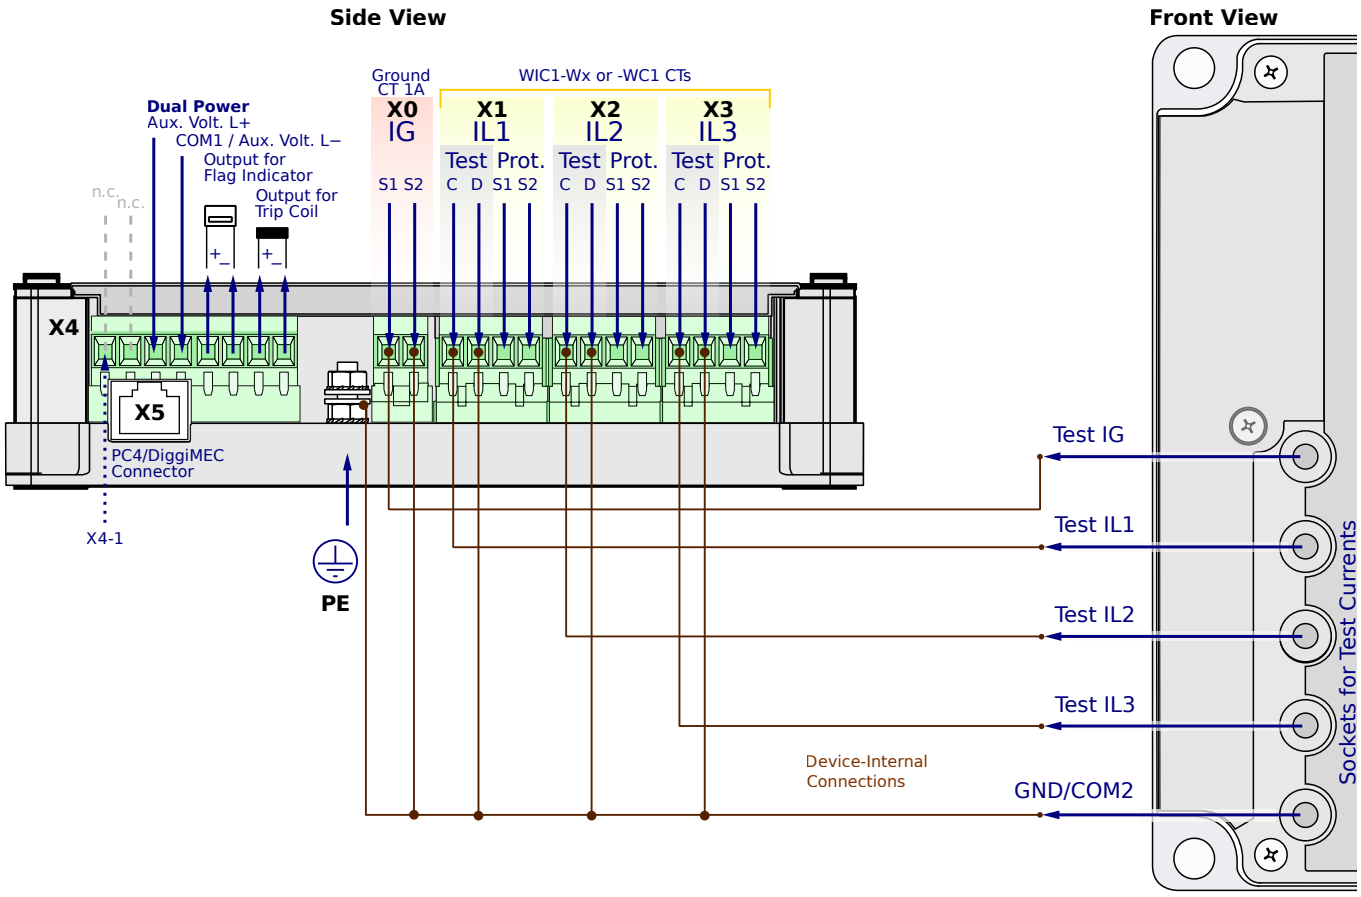


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1PAH

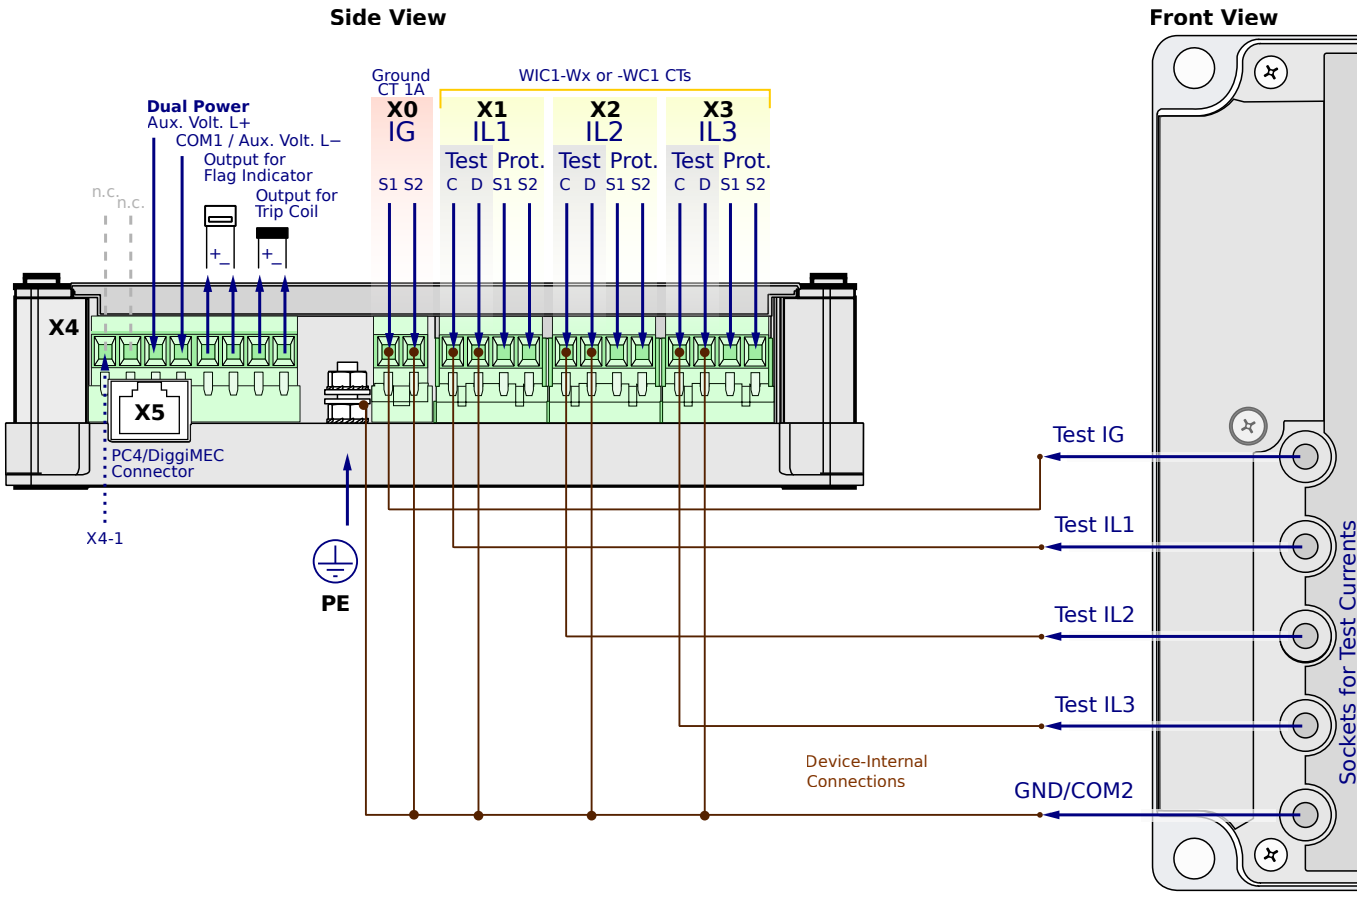


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM1PB0

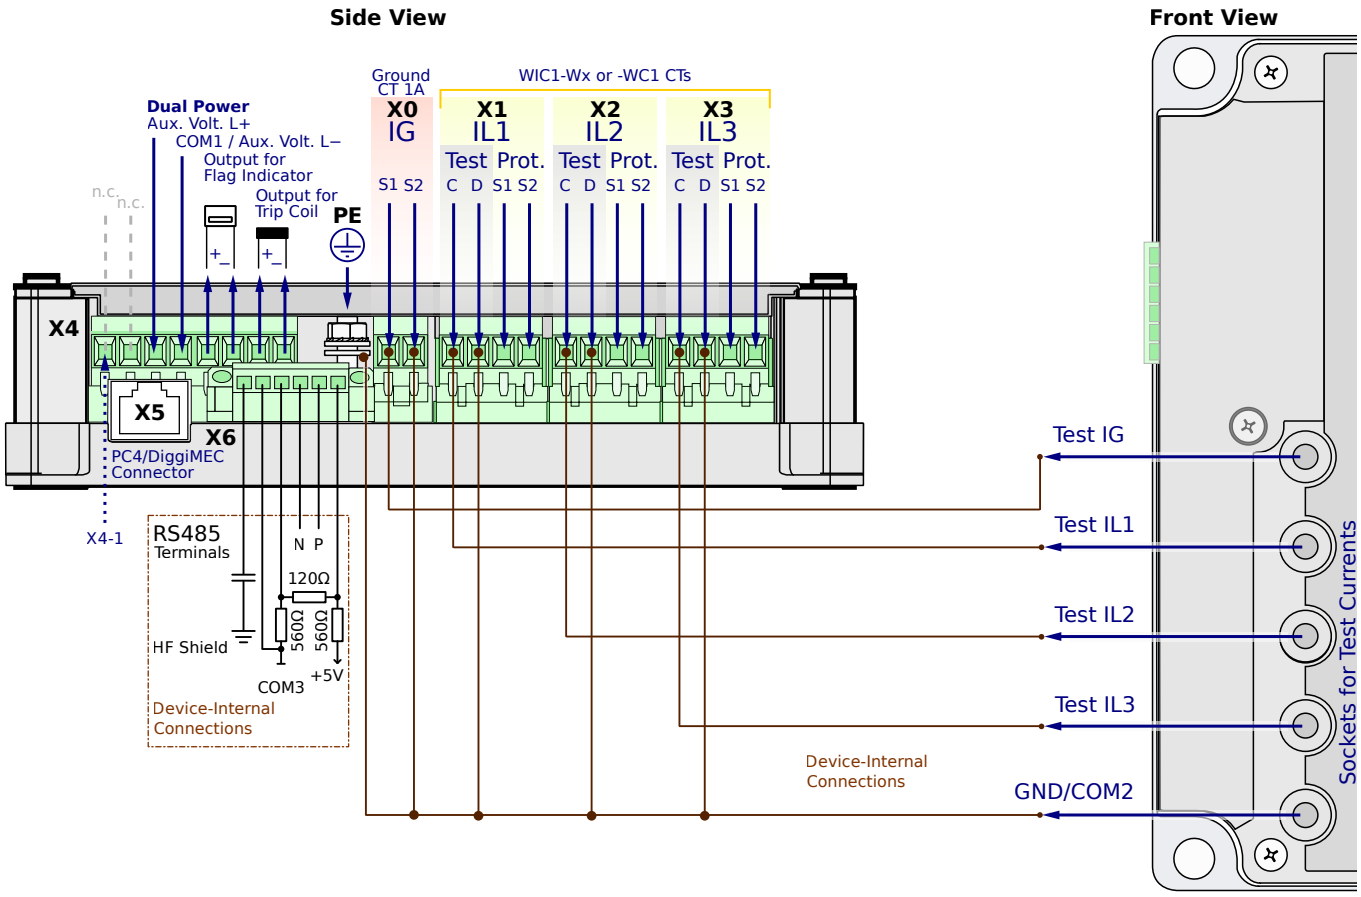


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1PBH

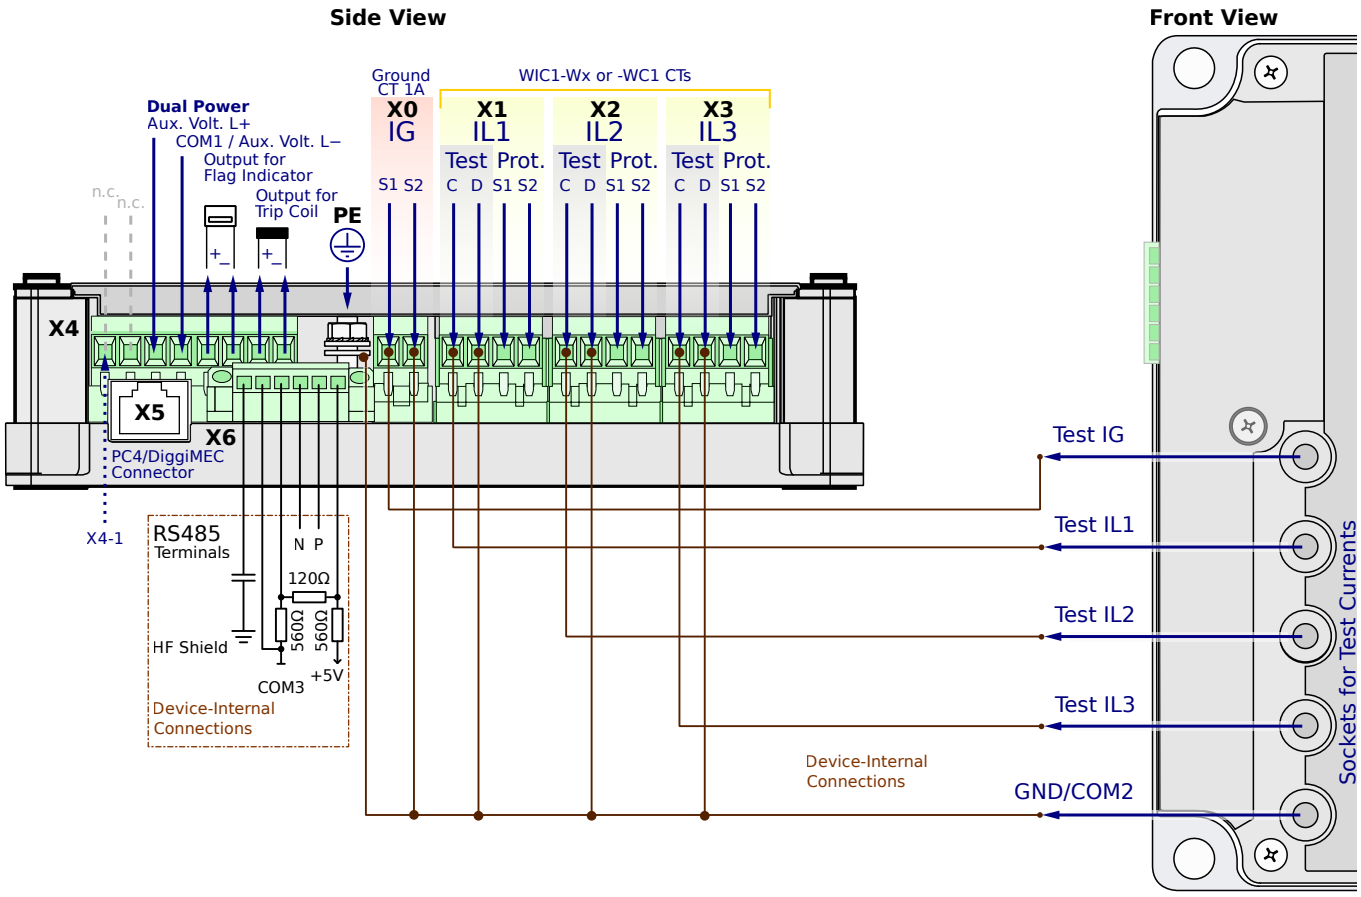


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM1PC0

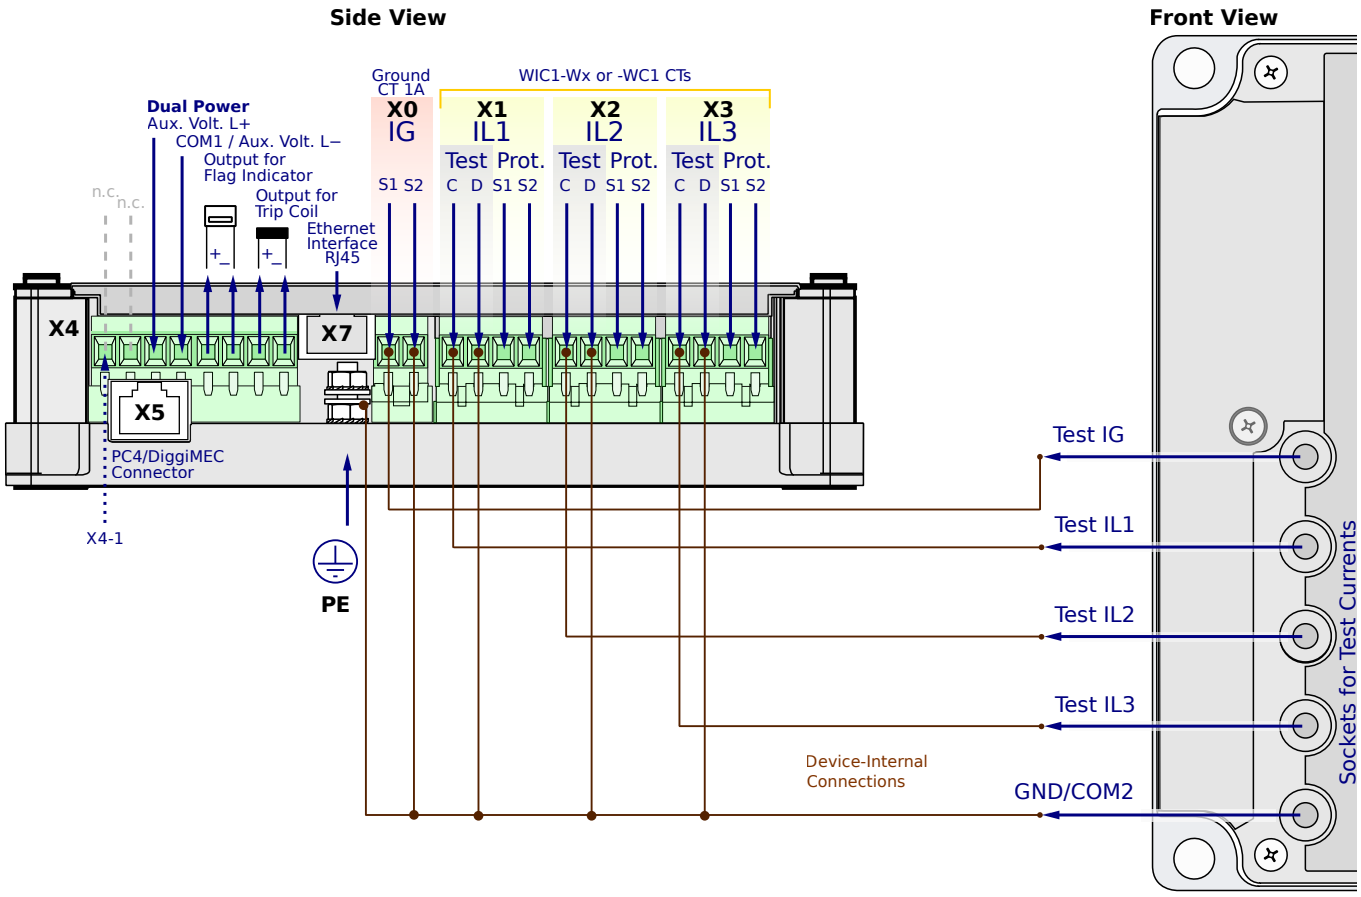


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1PCH

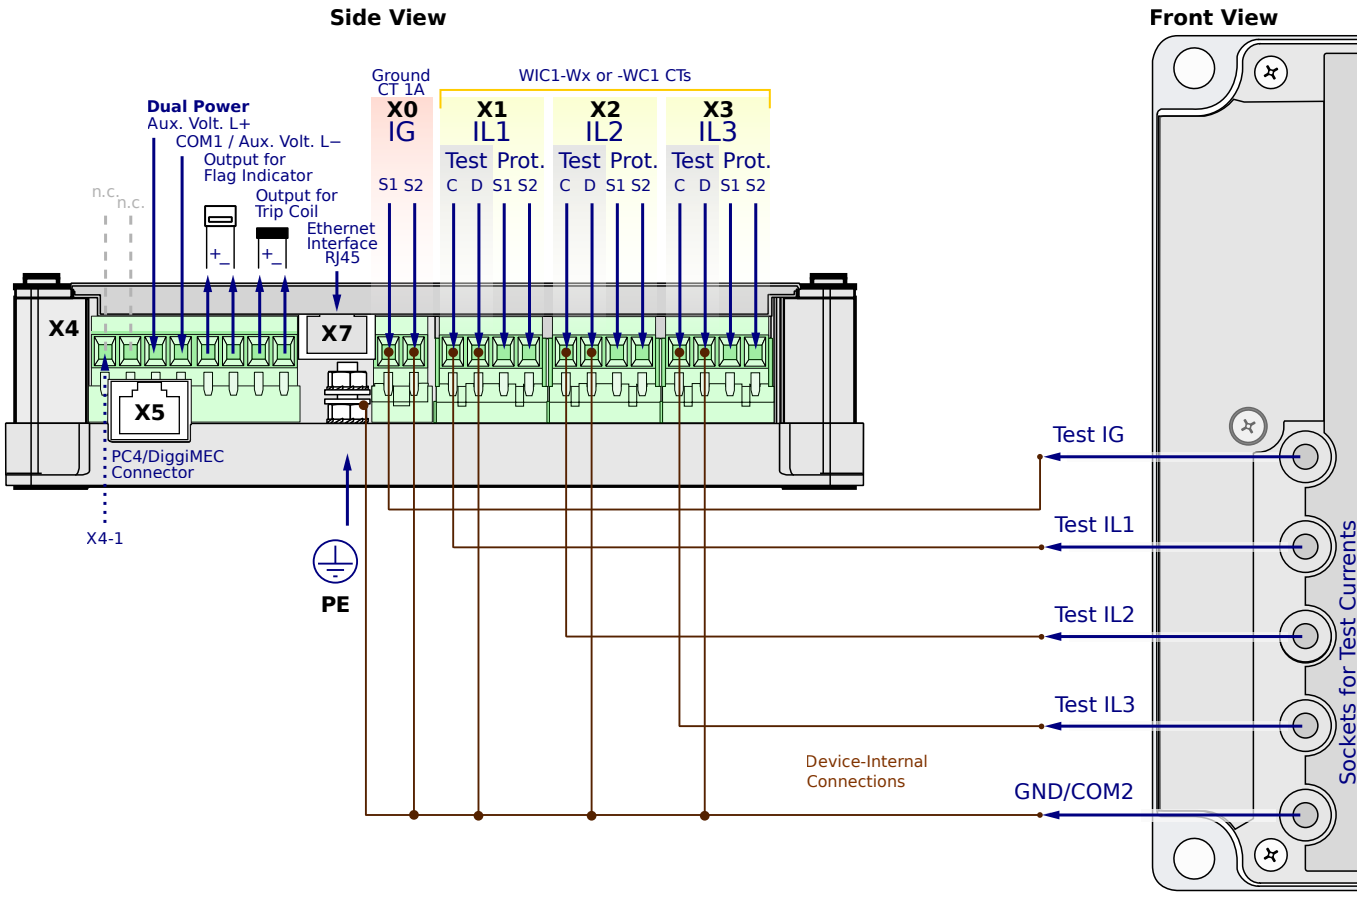


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM1PL0

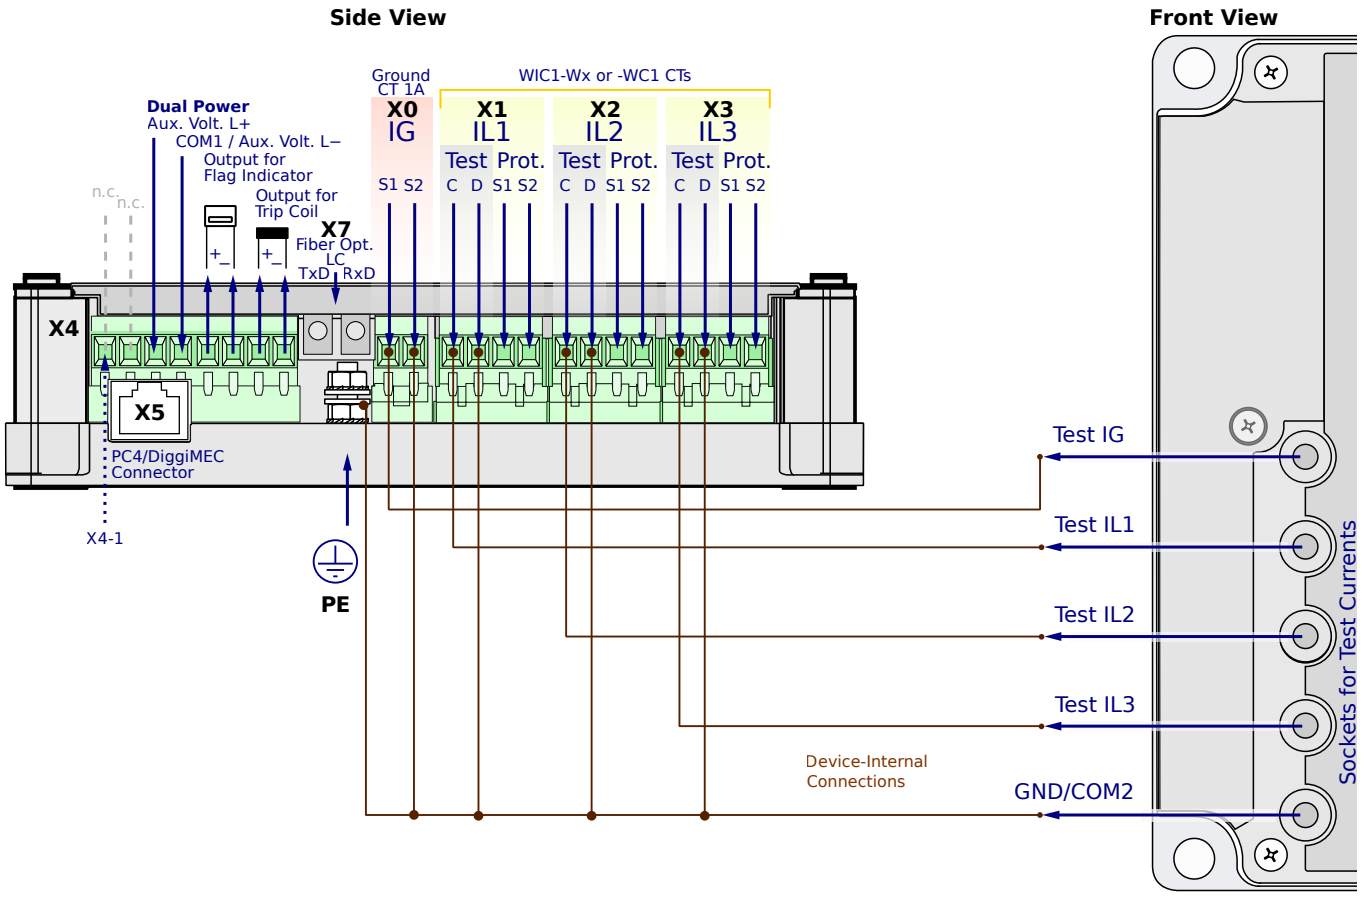


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM1PLH

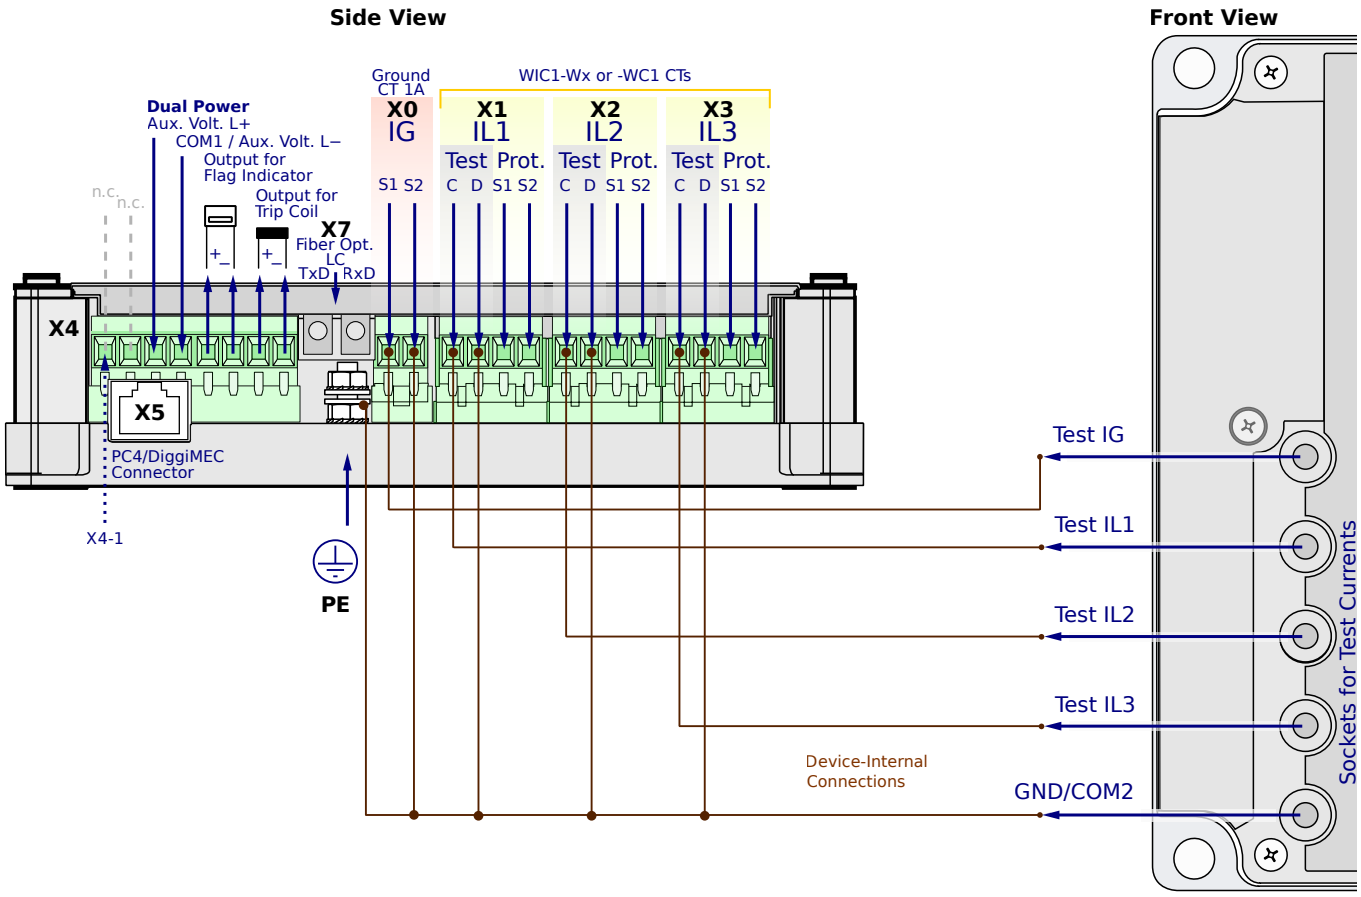


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2SA0

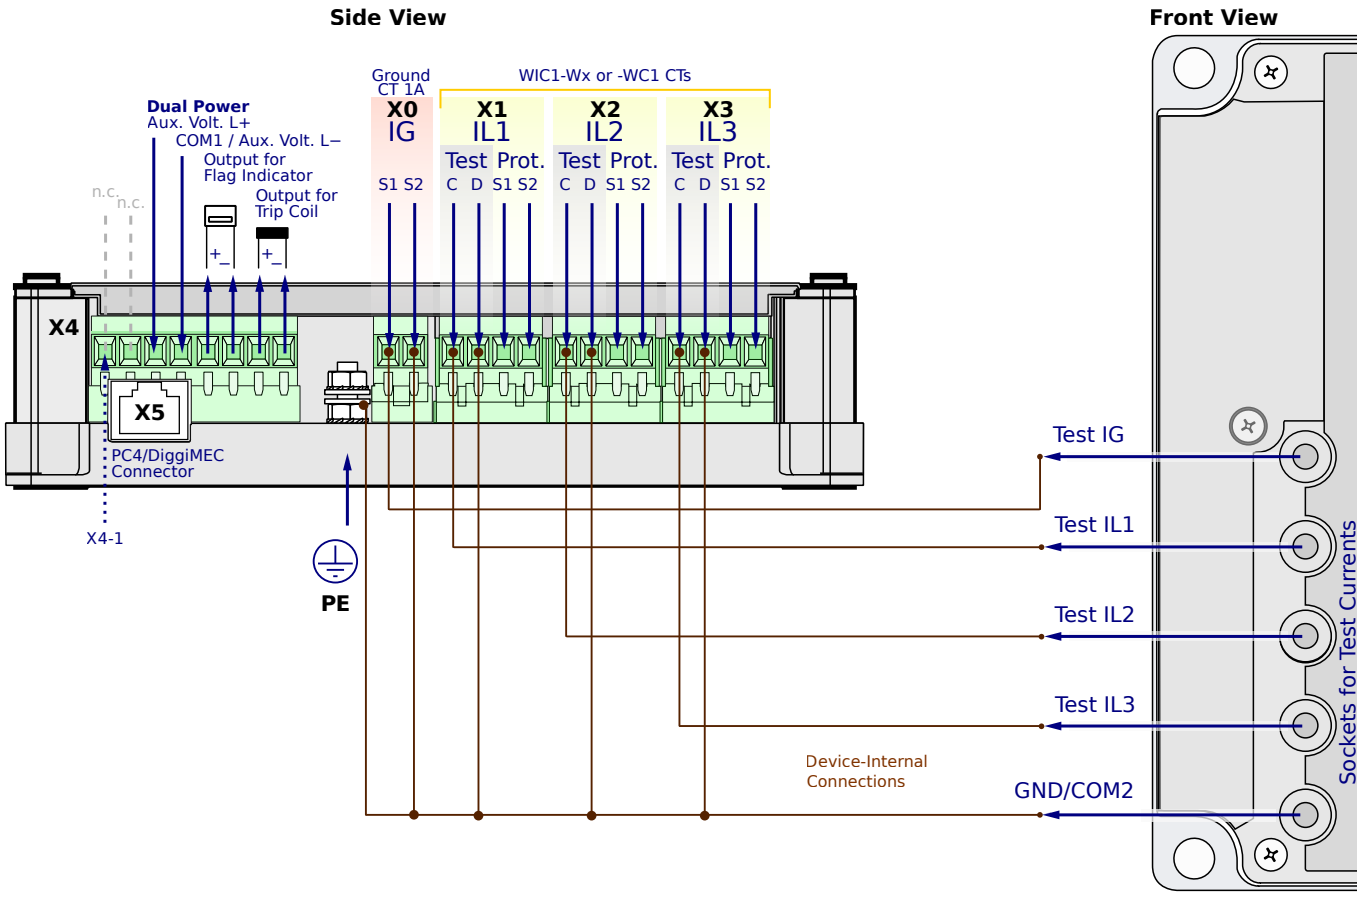


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2SAH

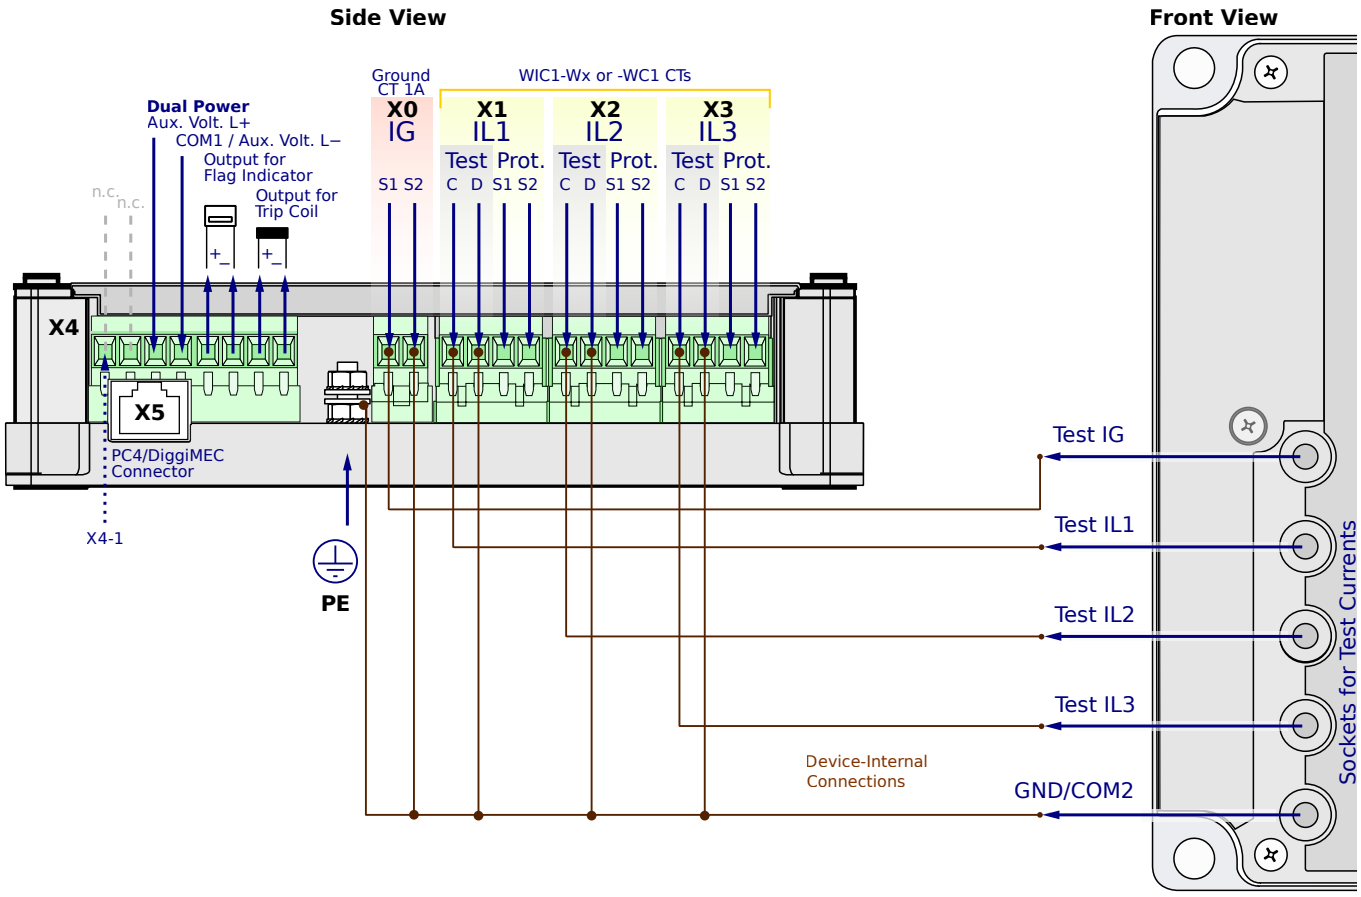


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2SB0

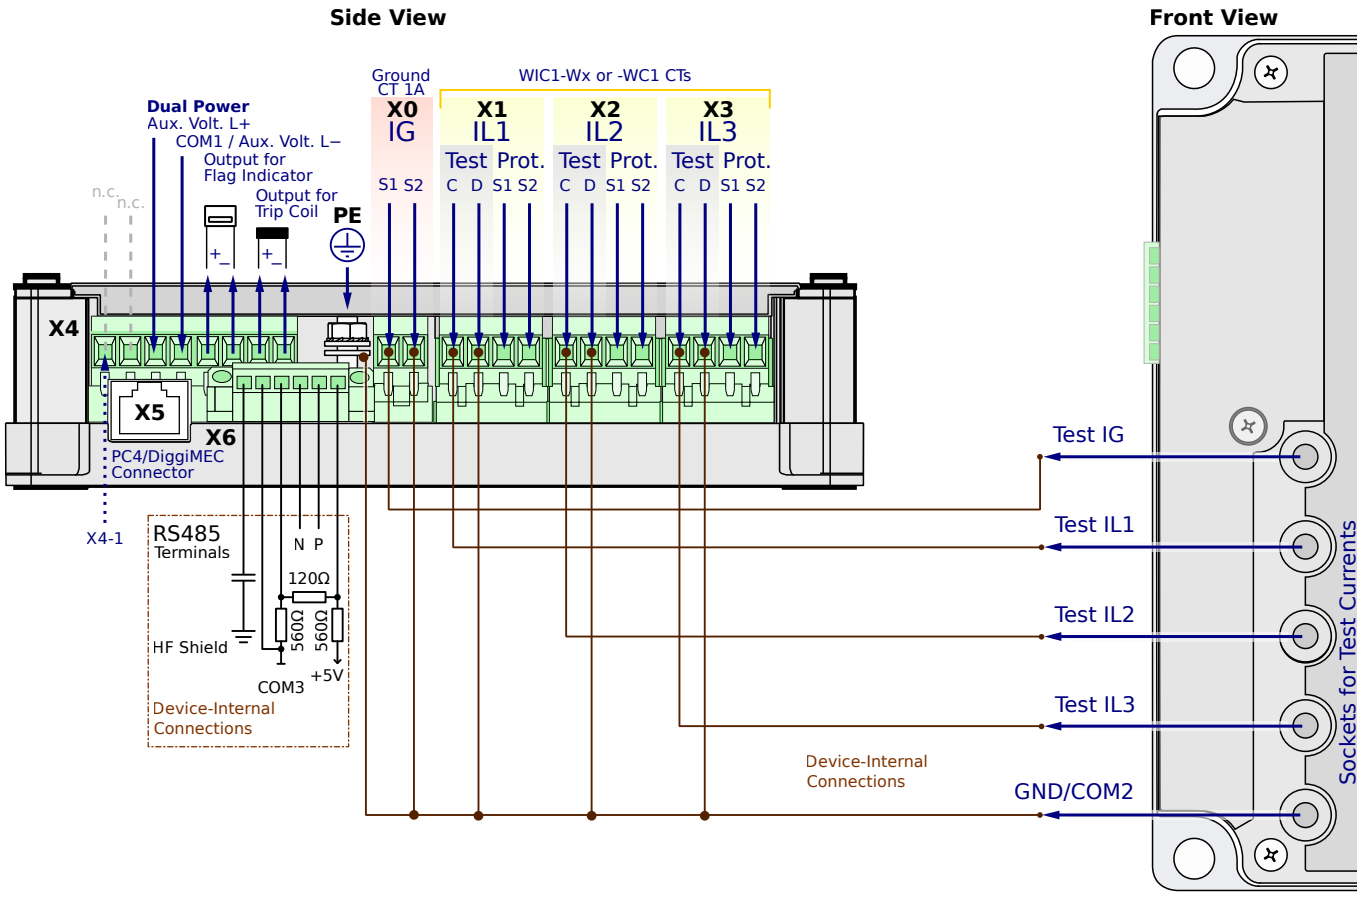


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2SBH

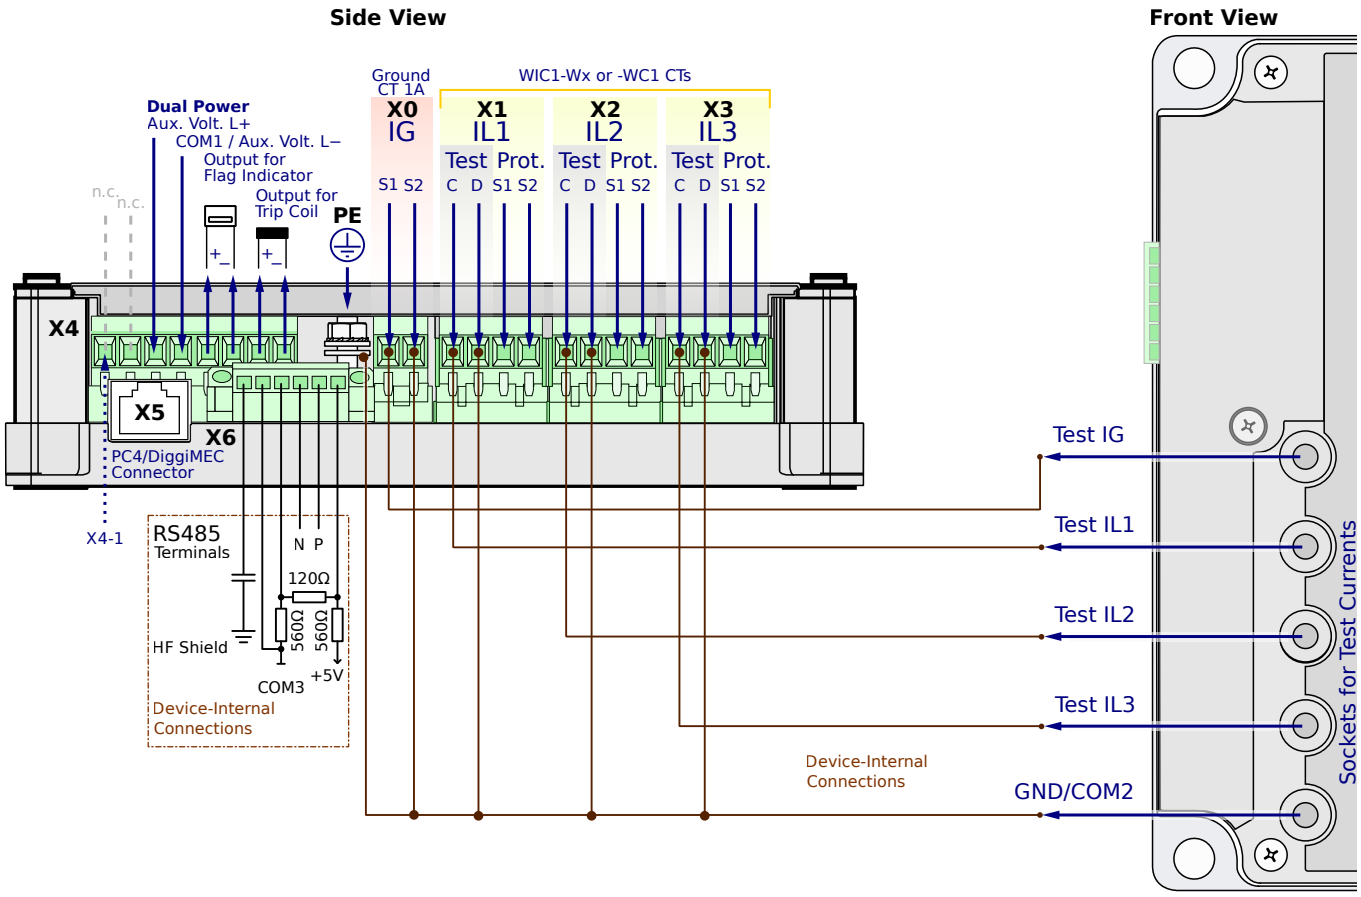


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2SC0

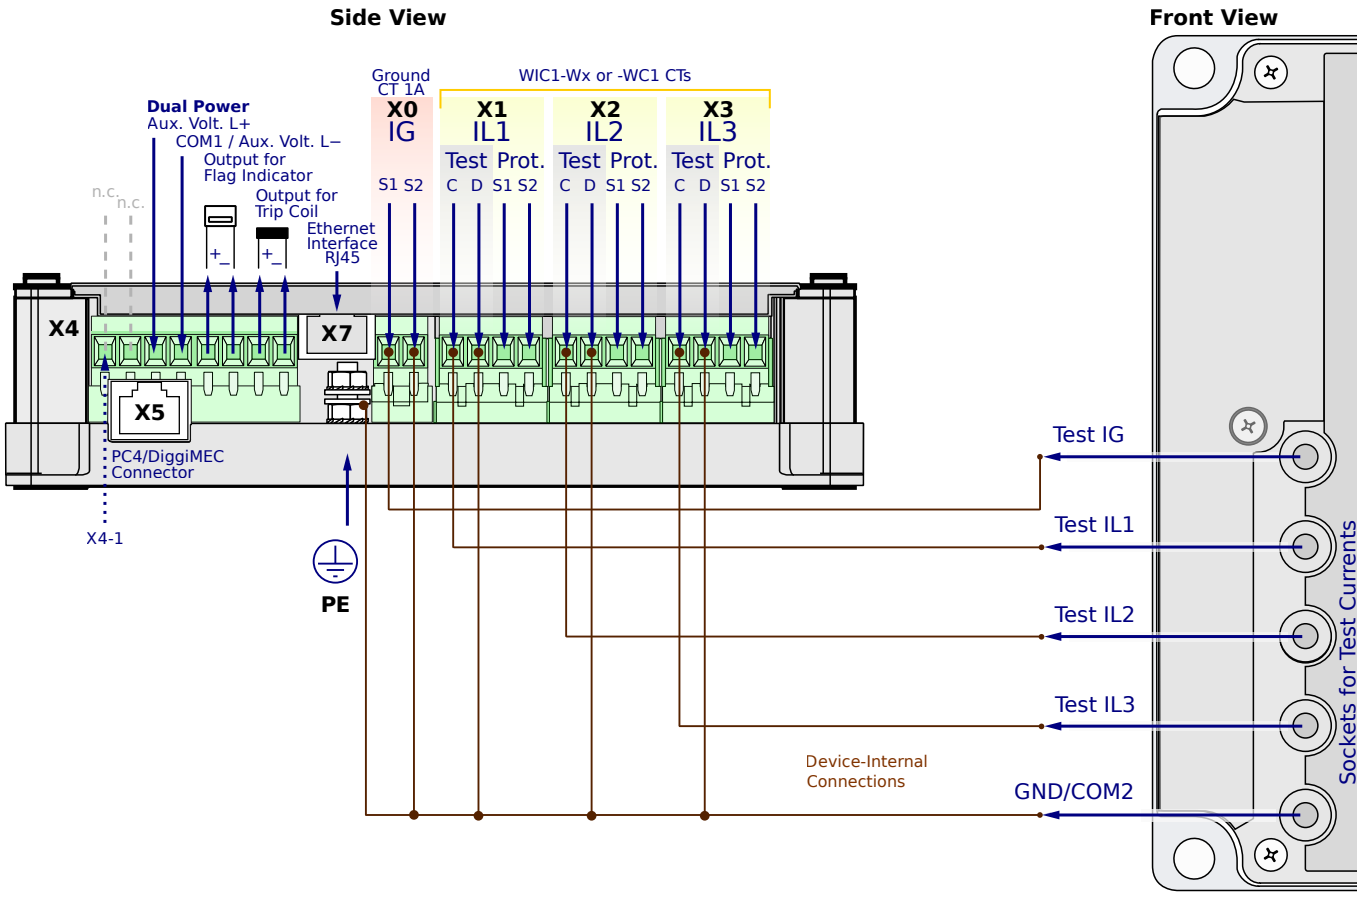


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2SCH

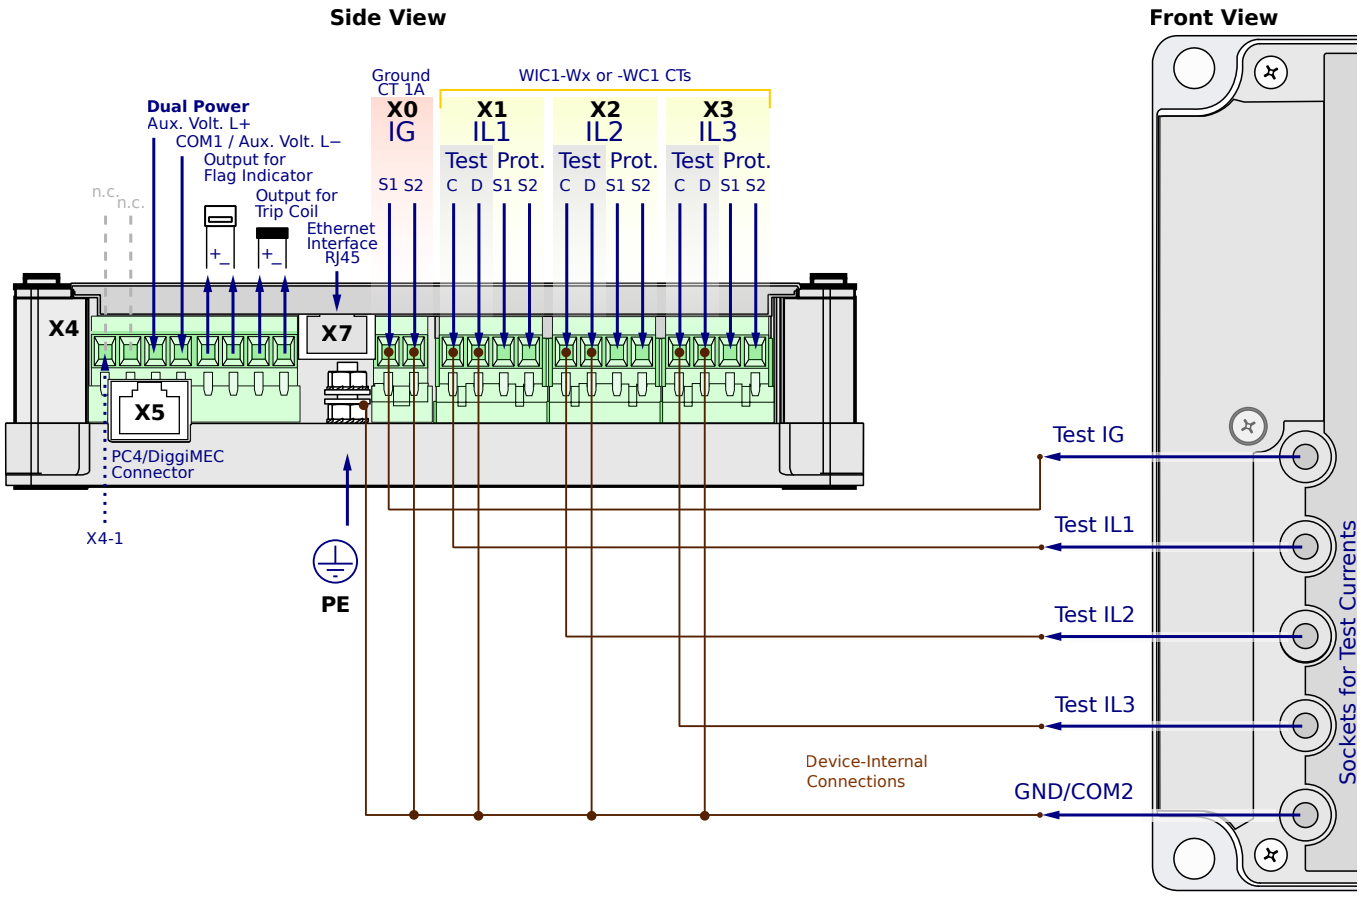


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2SL0

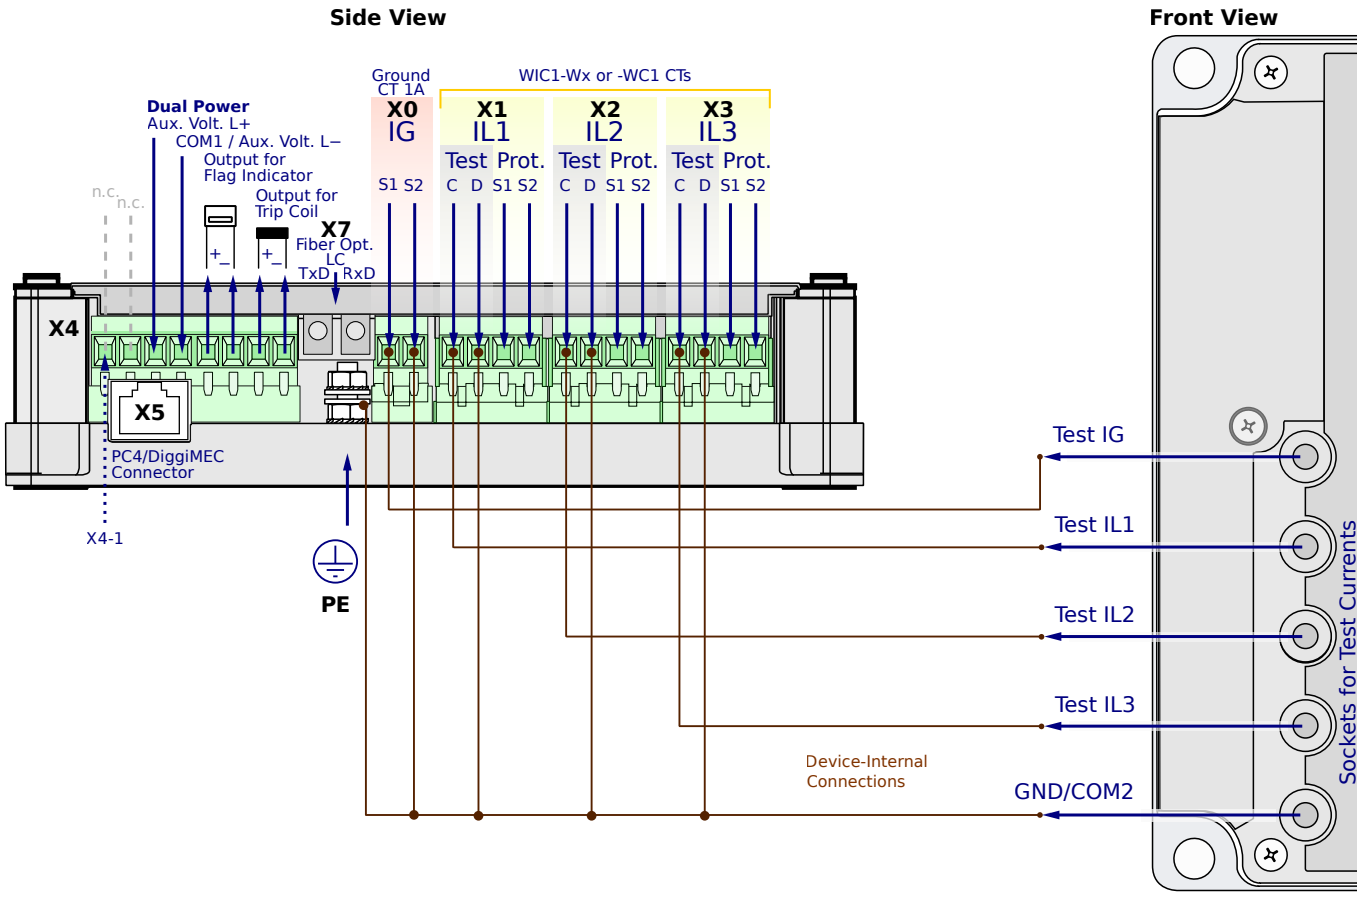


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2SLH

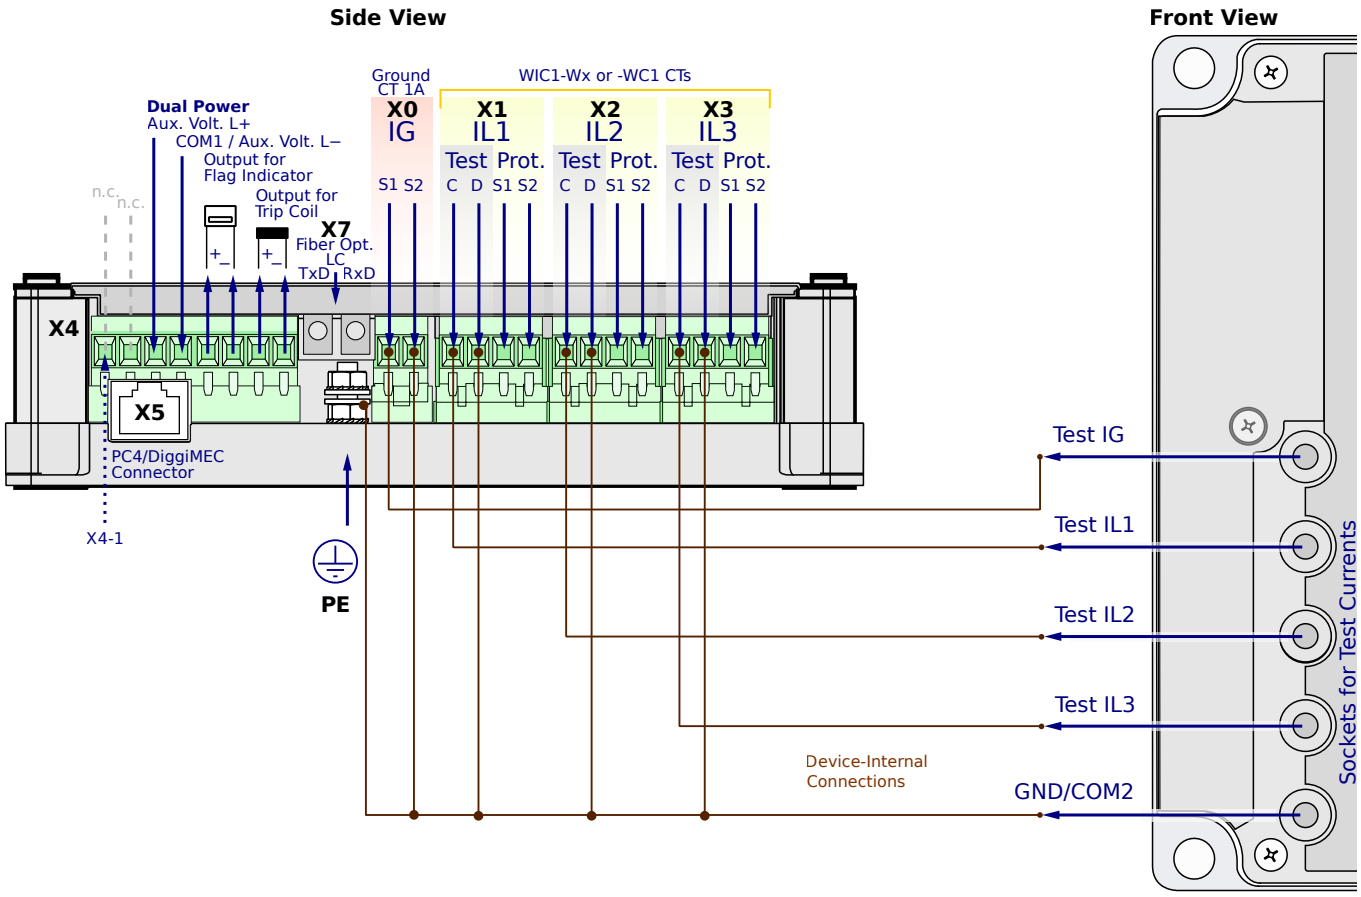


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2AA0

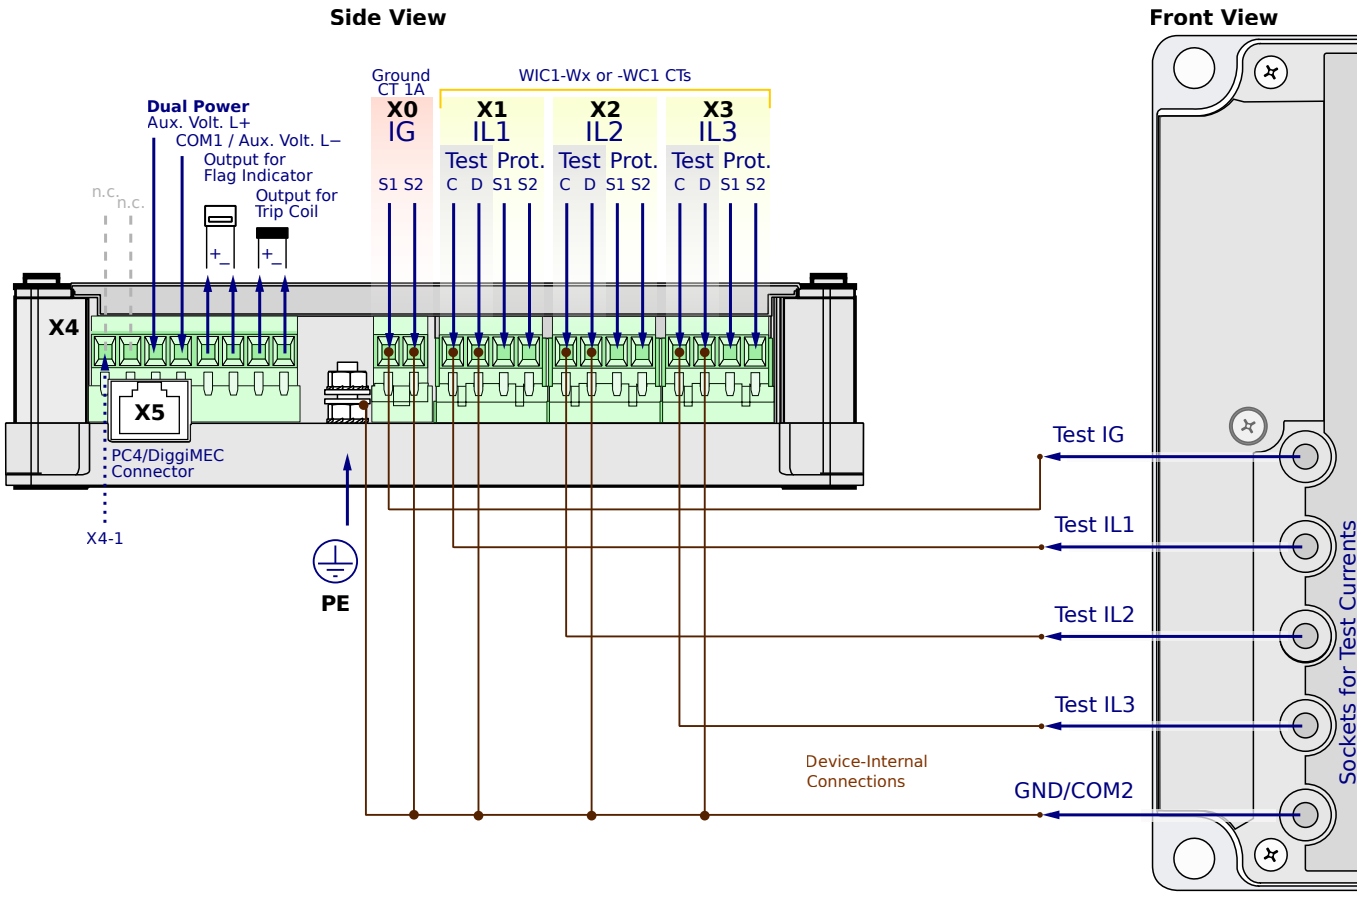


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2AAH

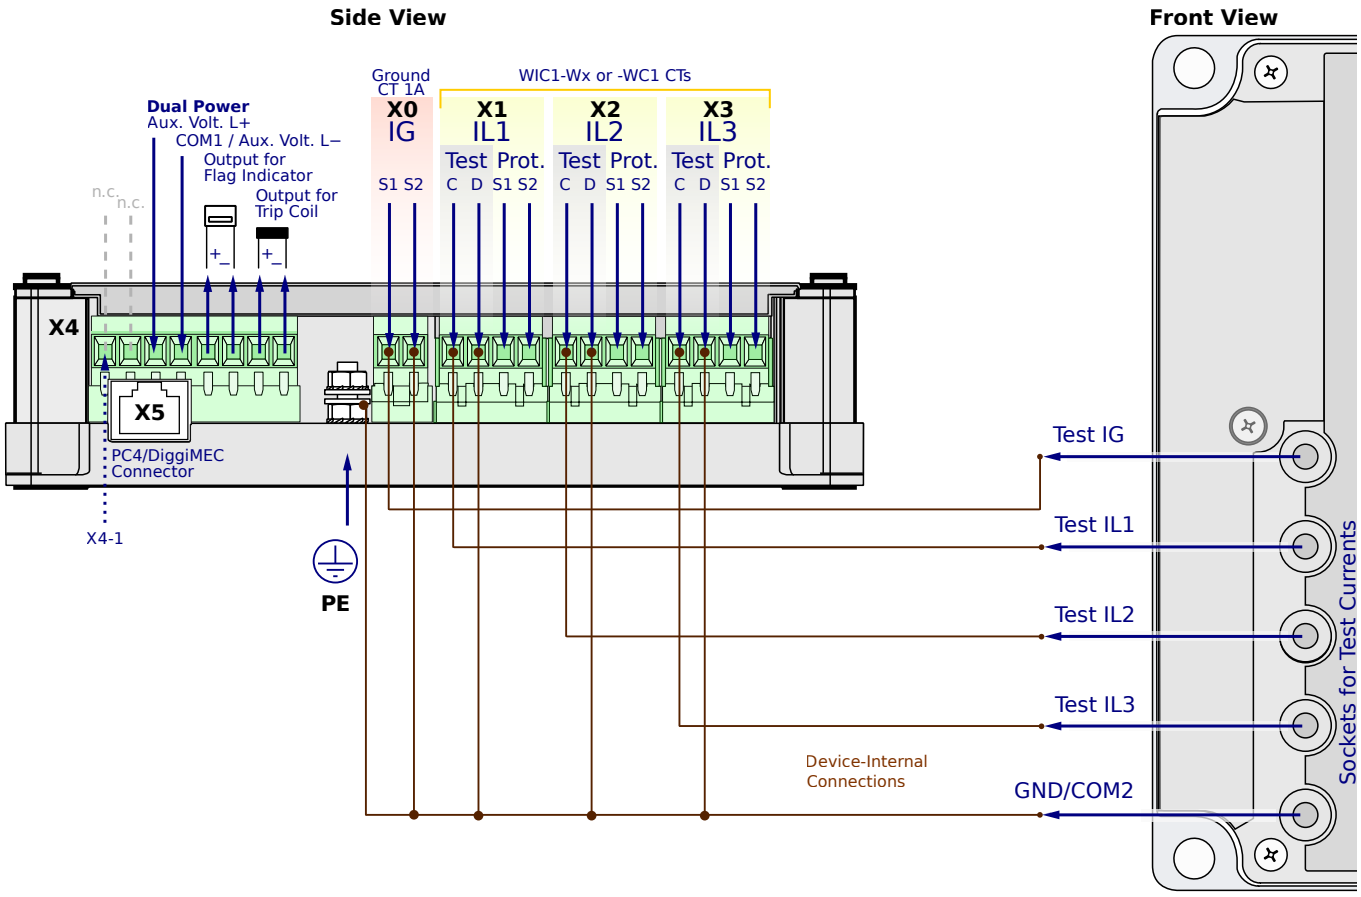


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2AB0

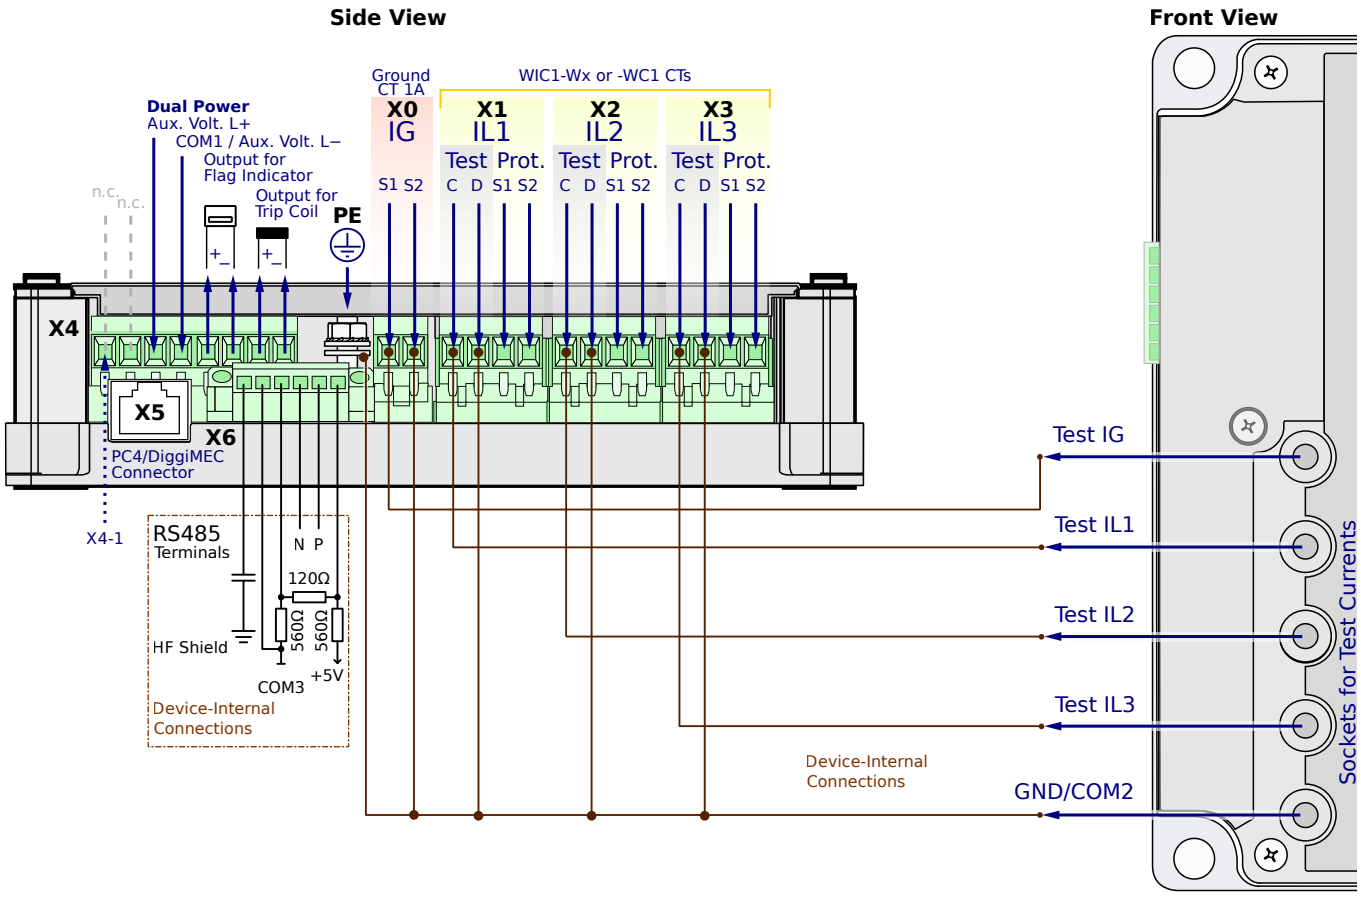


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2ABH

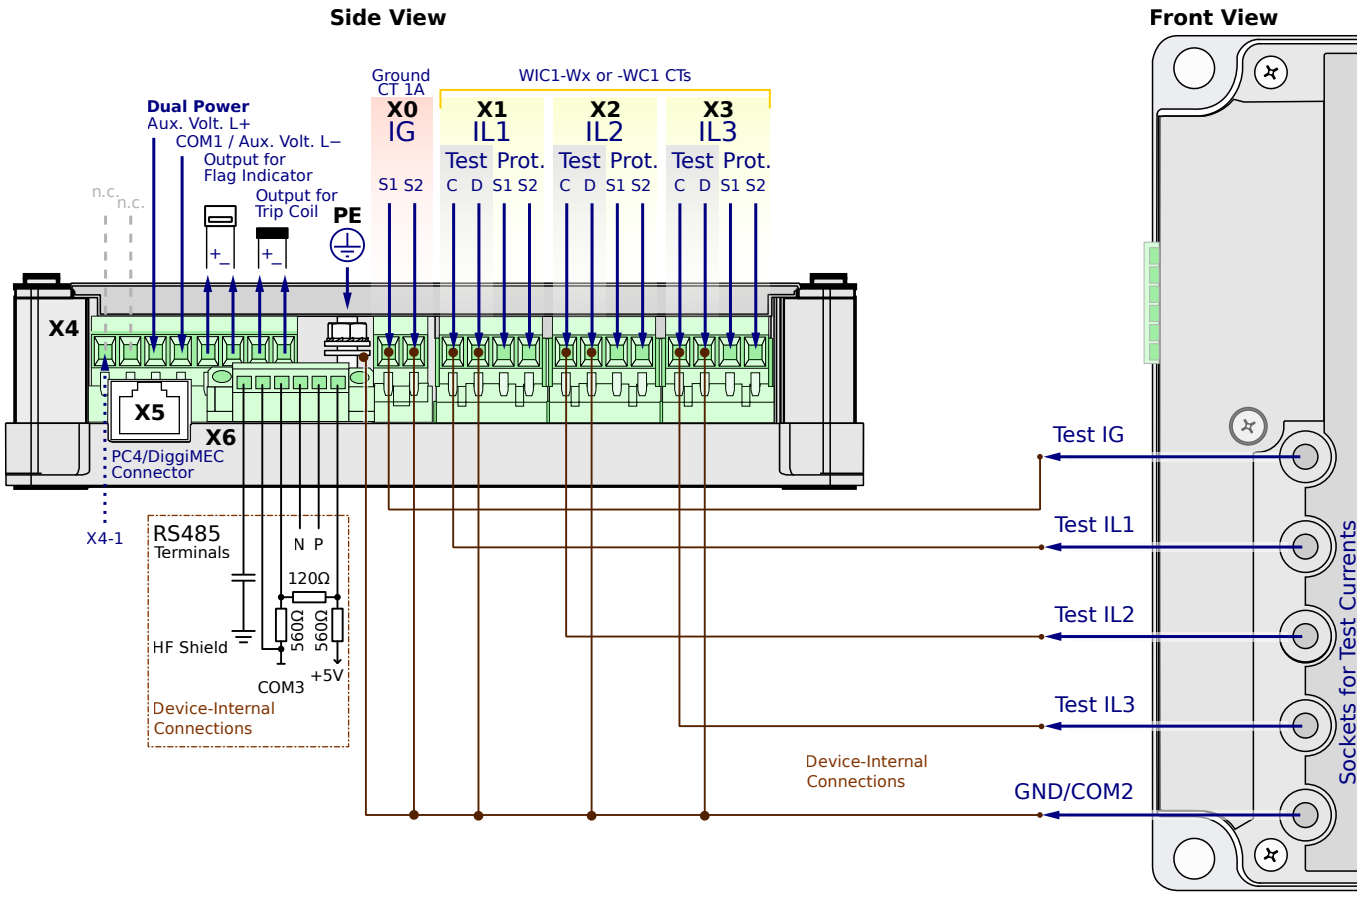


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2AC0

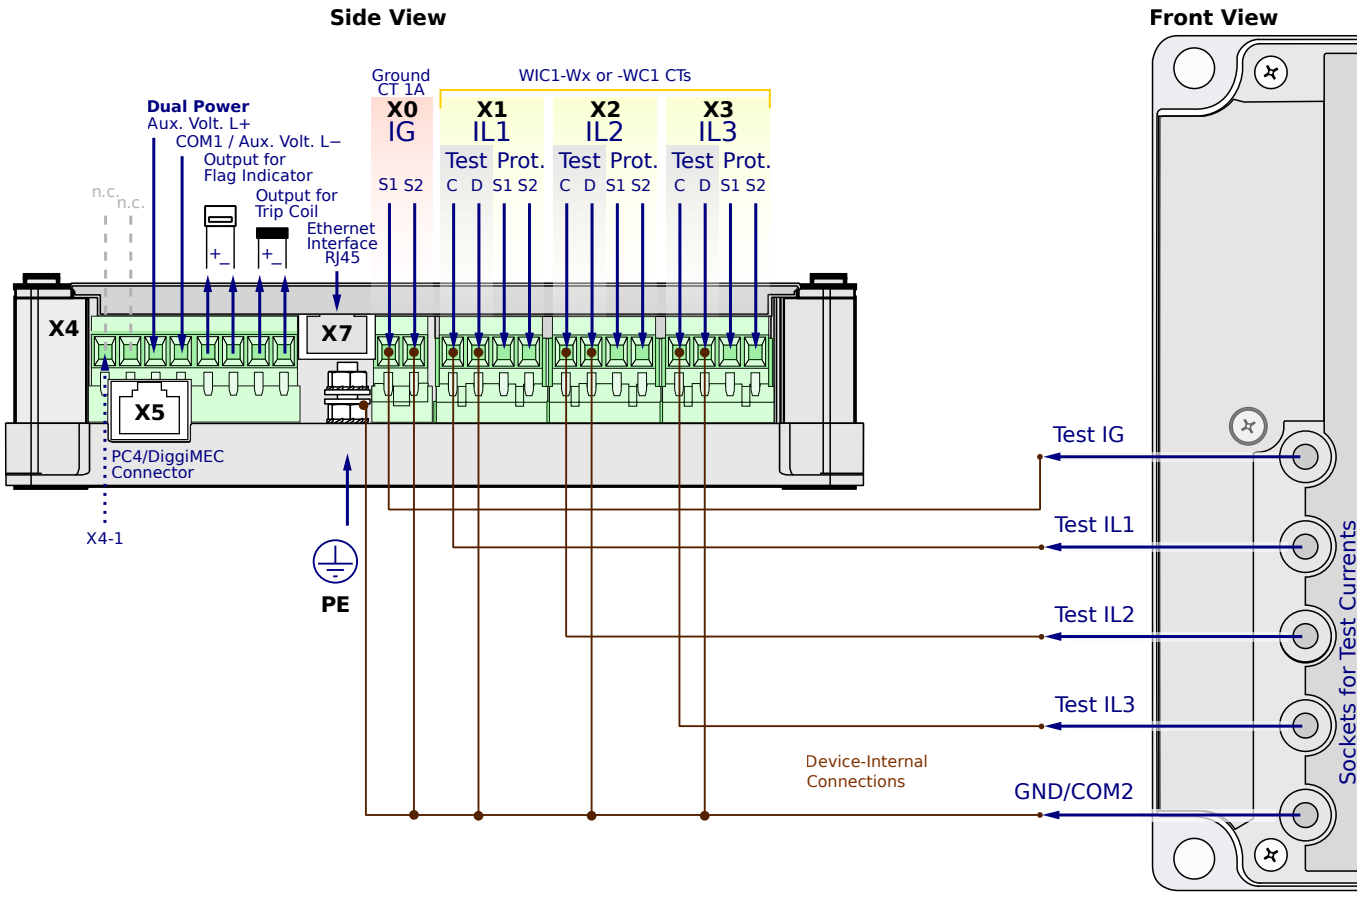


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2ACH

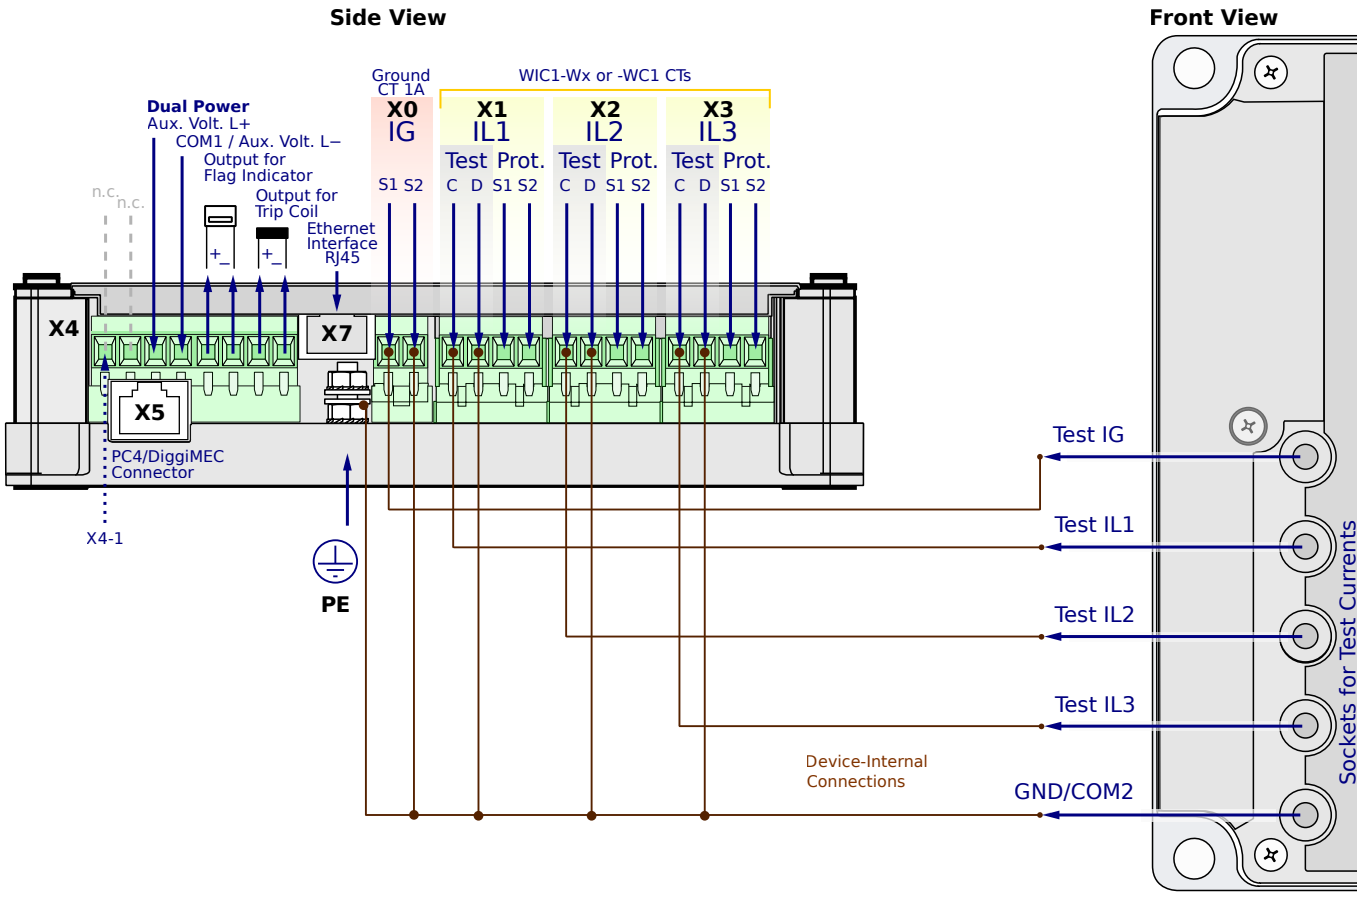


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2AL0

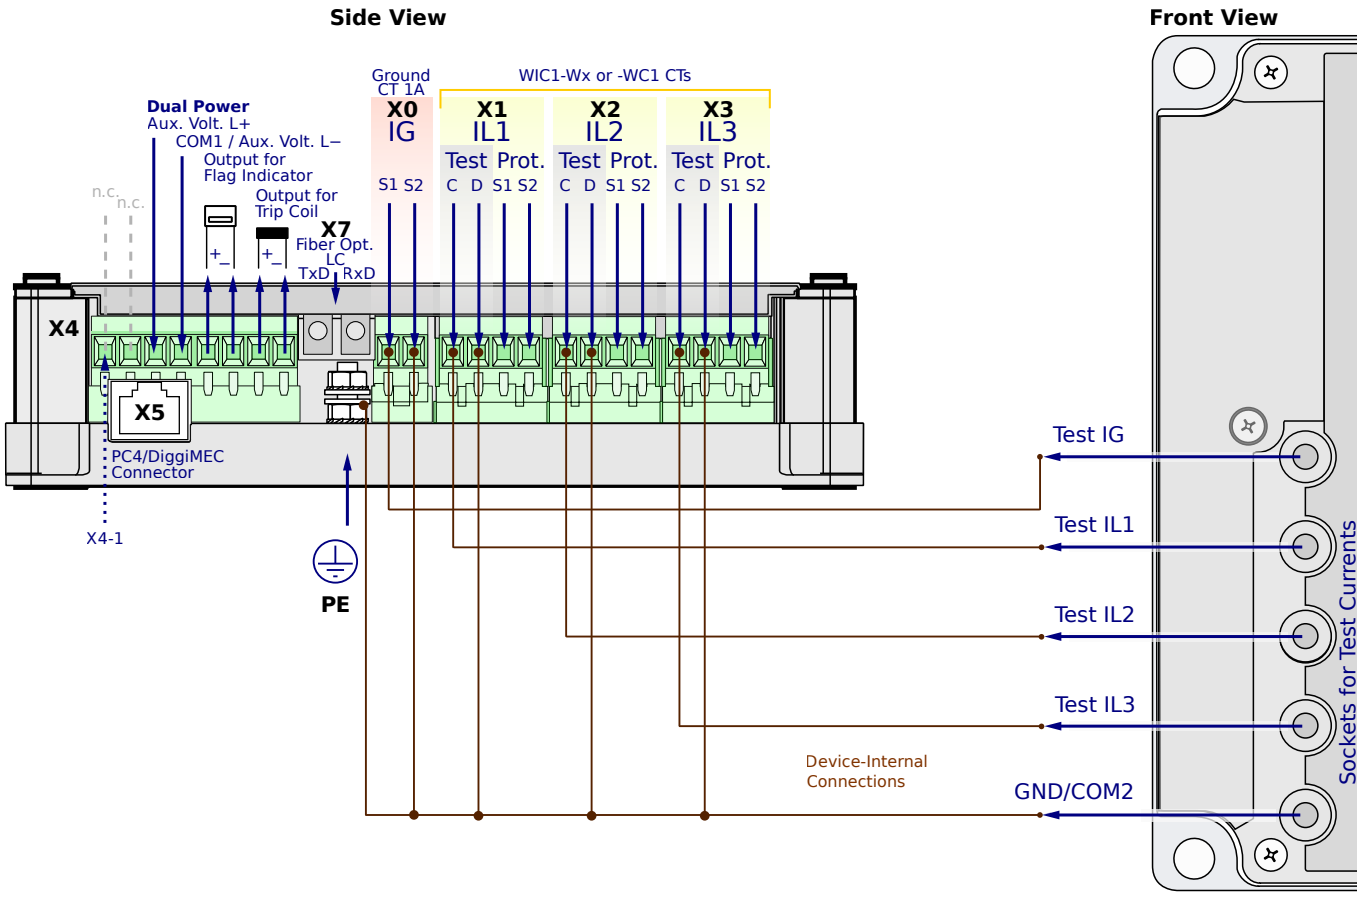


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2ALH

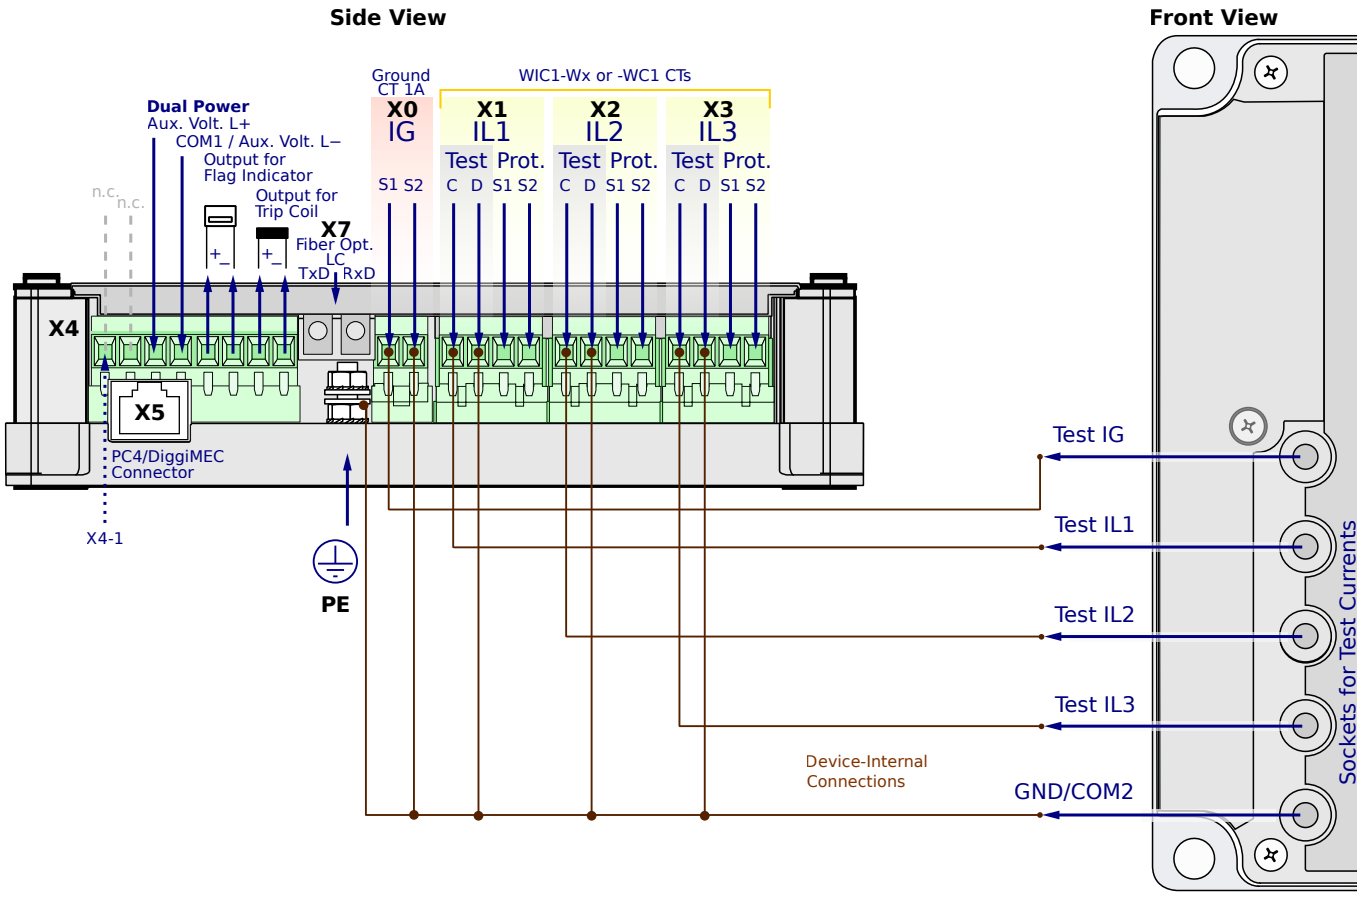


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2PA0

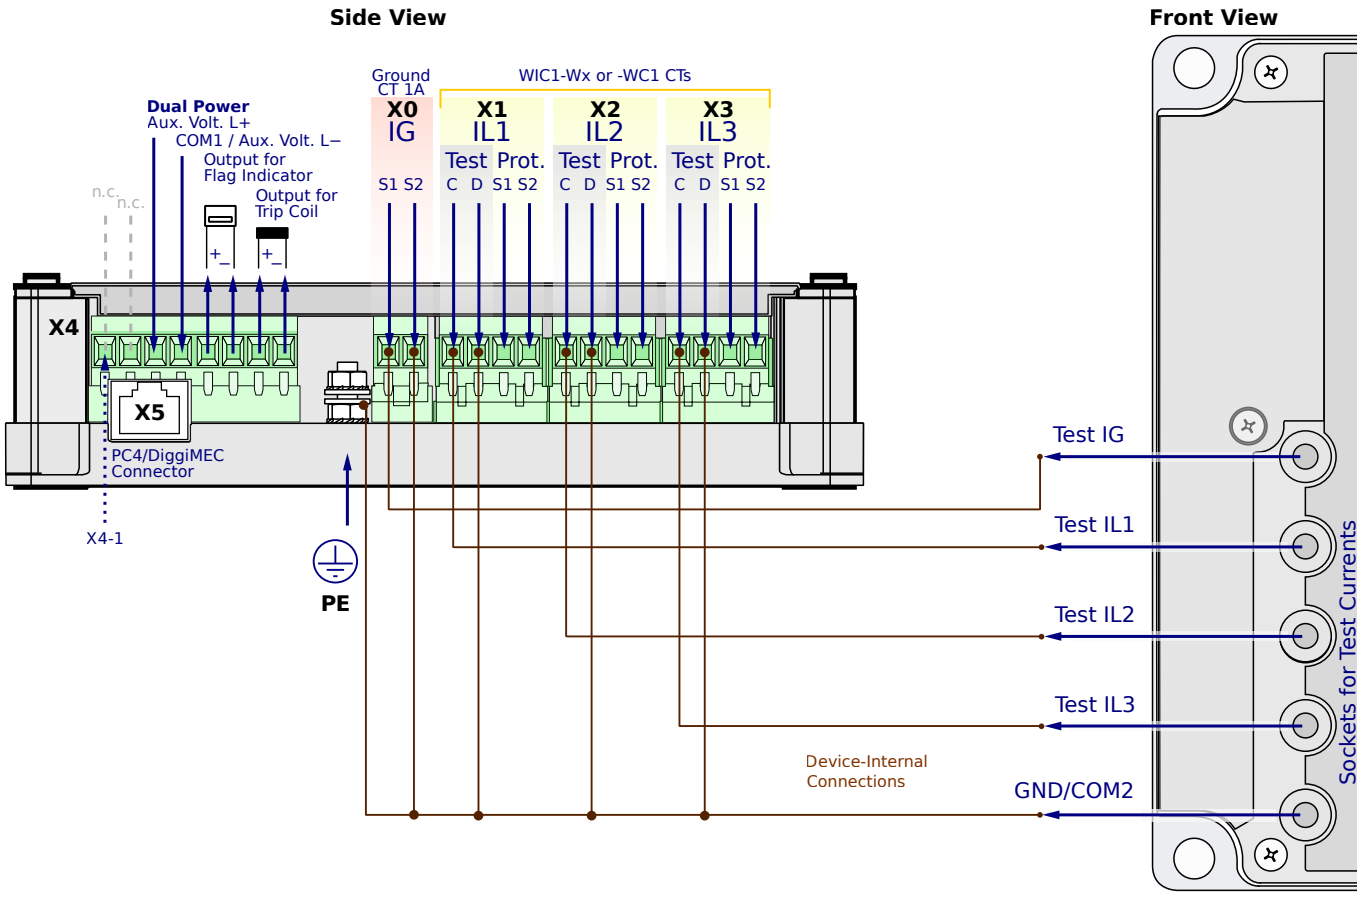


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2PAH

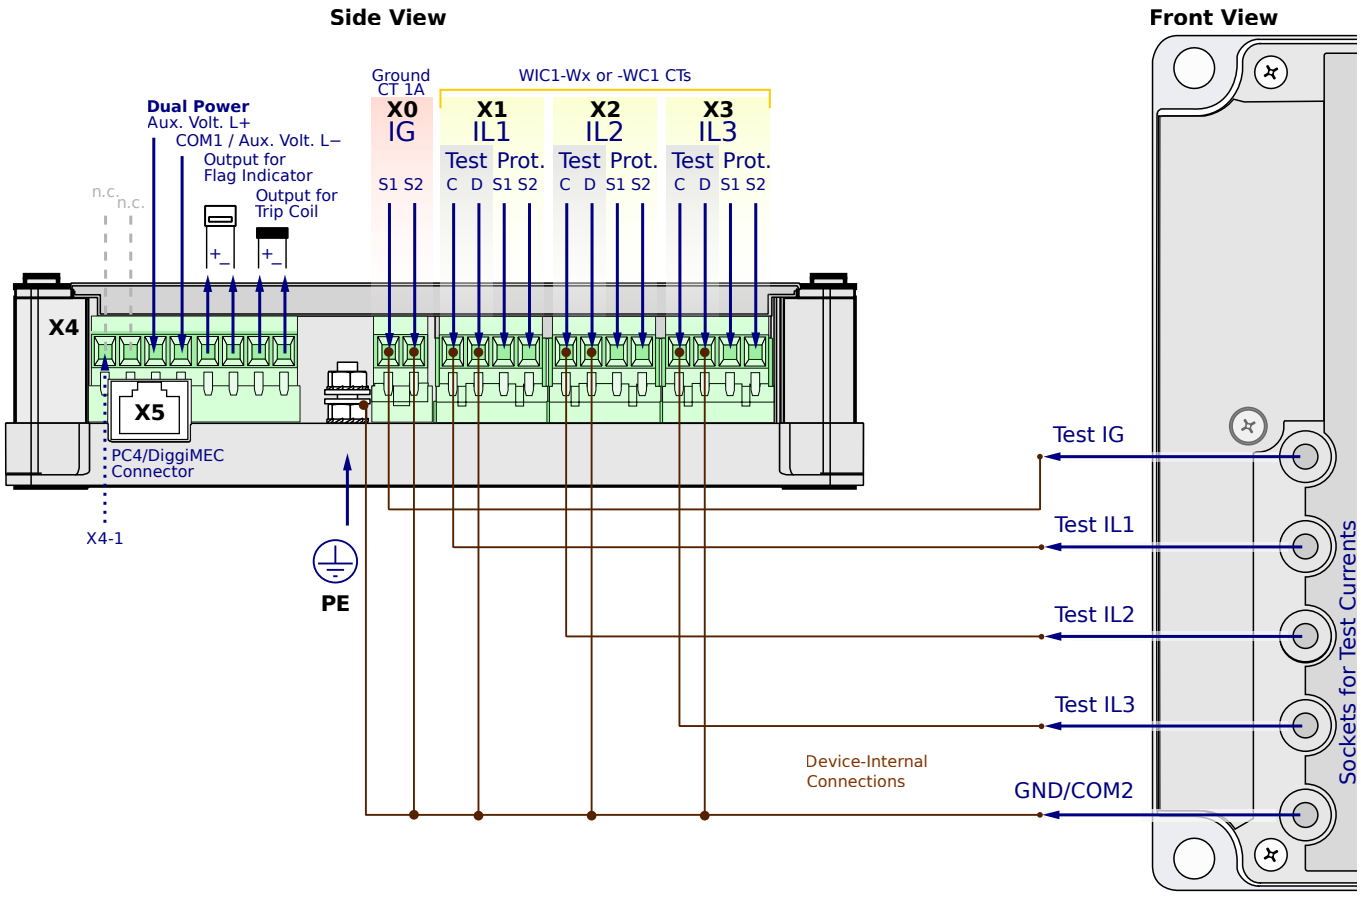


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NM2PB0

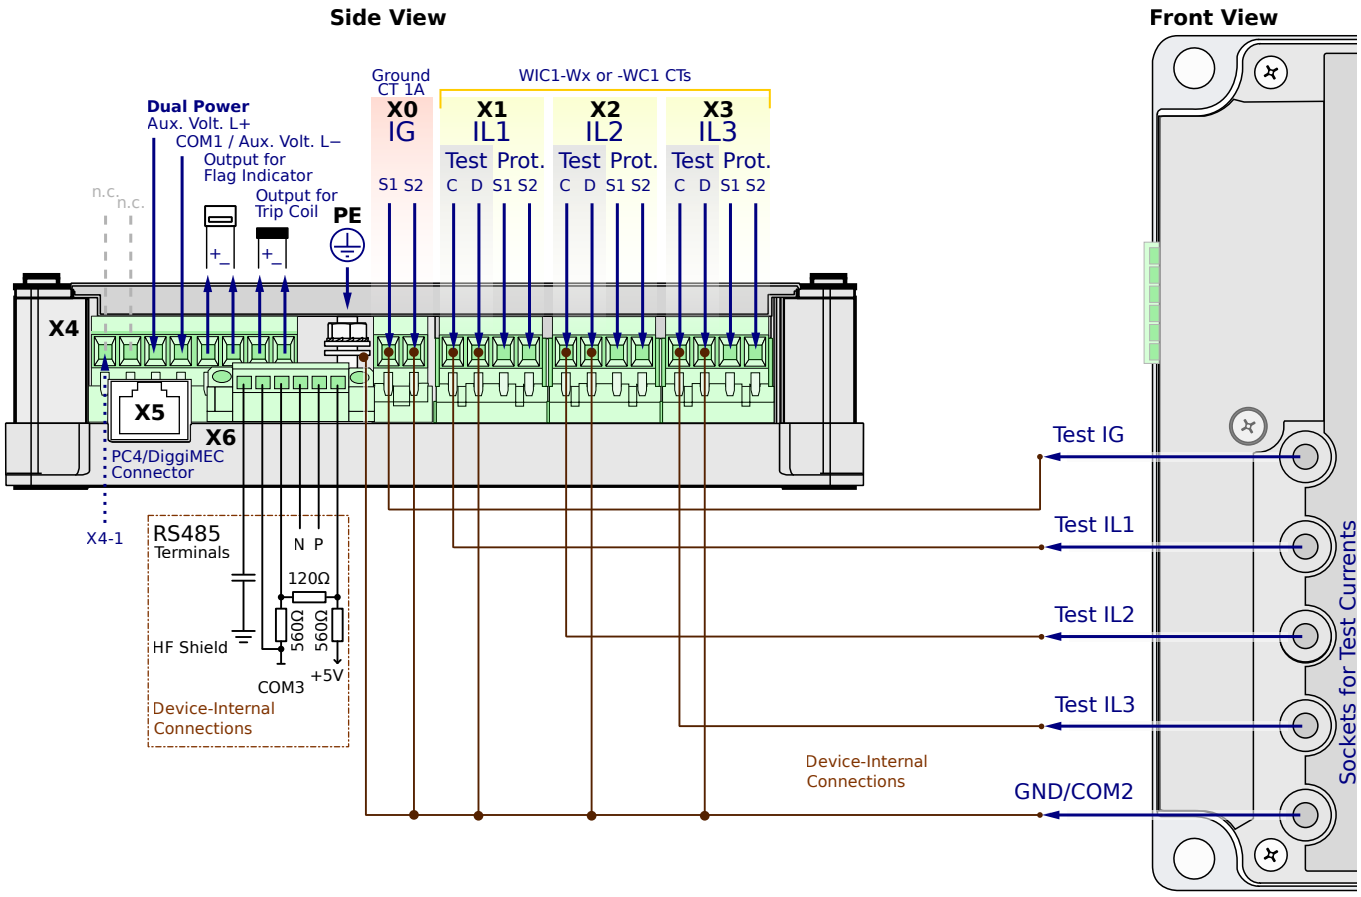


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2PBH

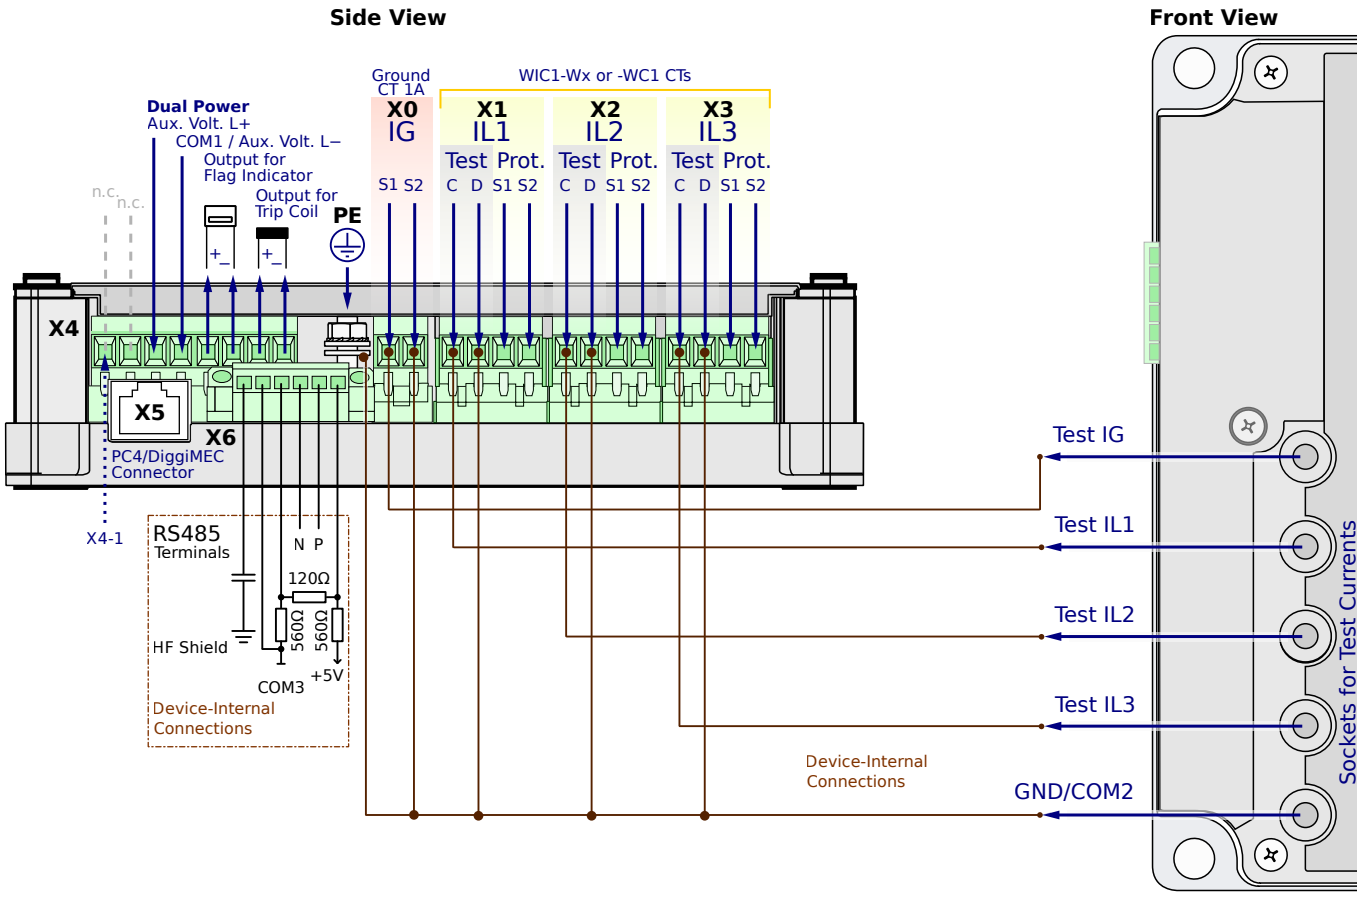


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NM2PC0

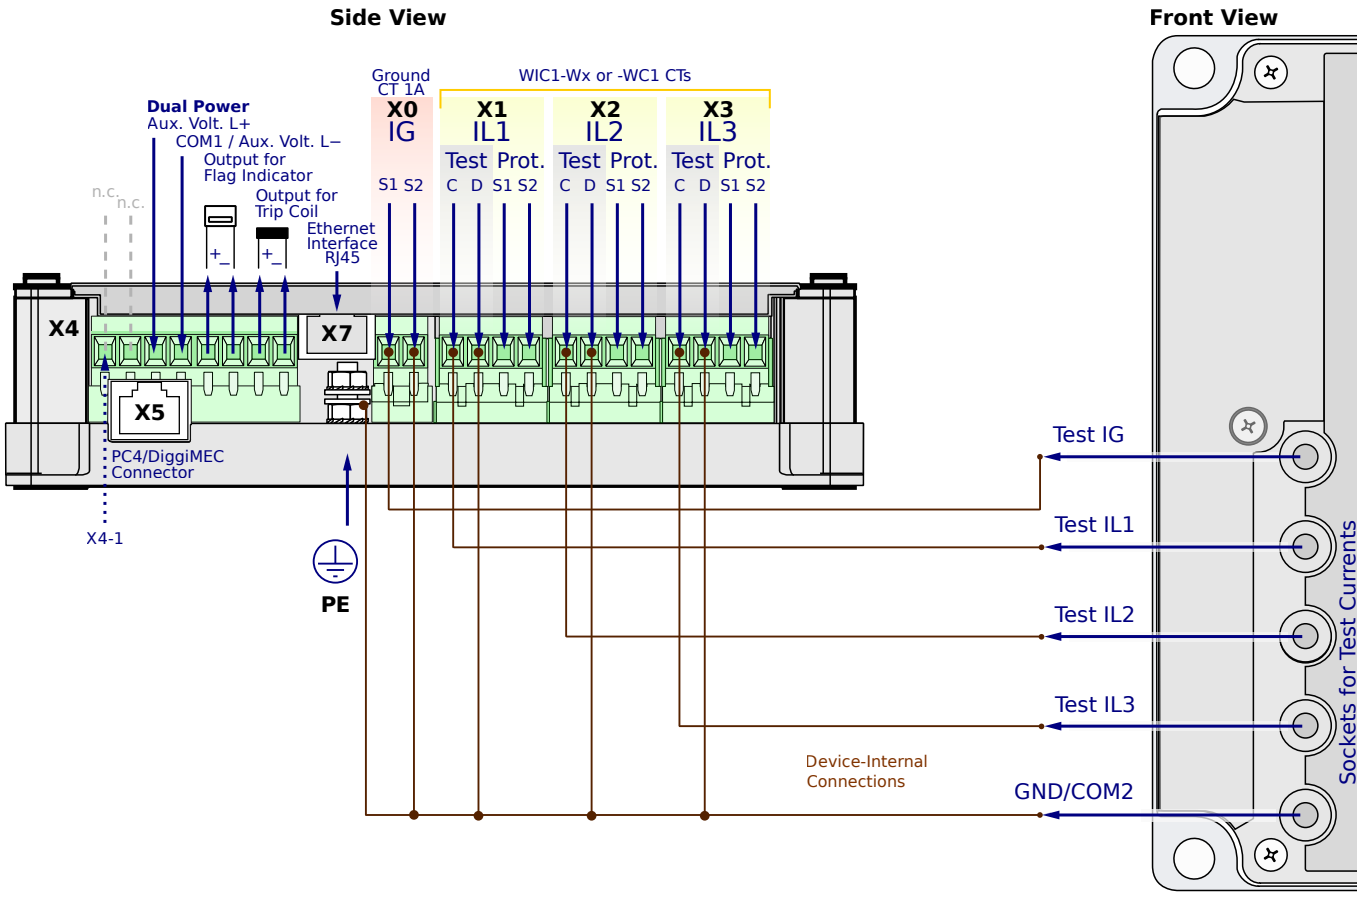


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2PCH

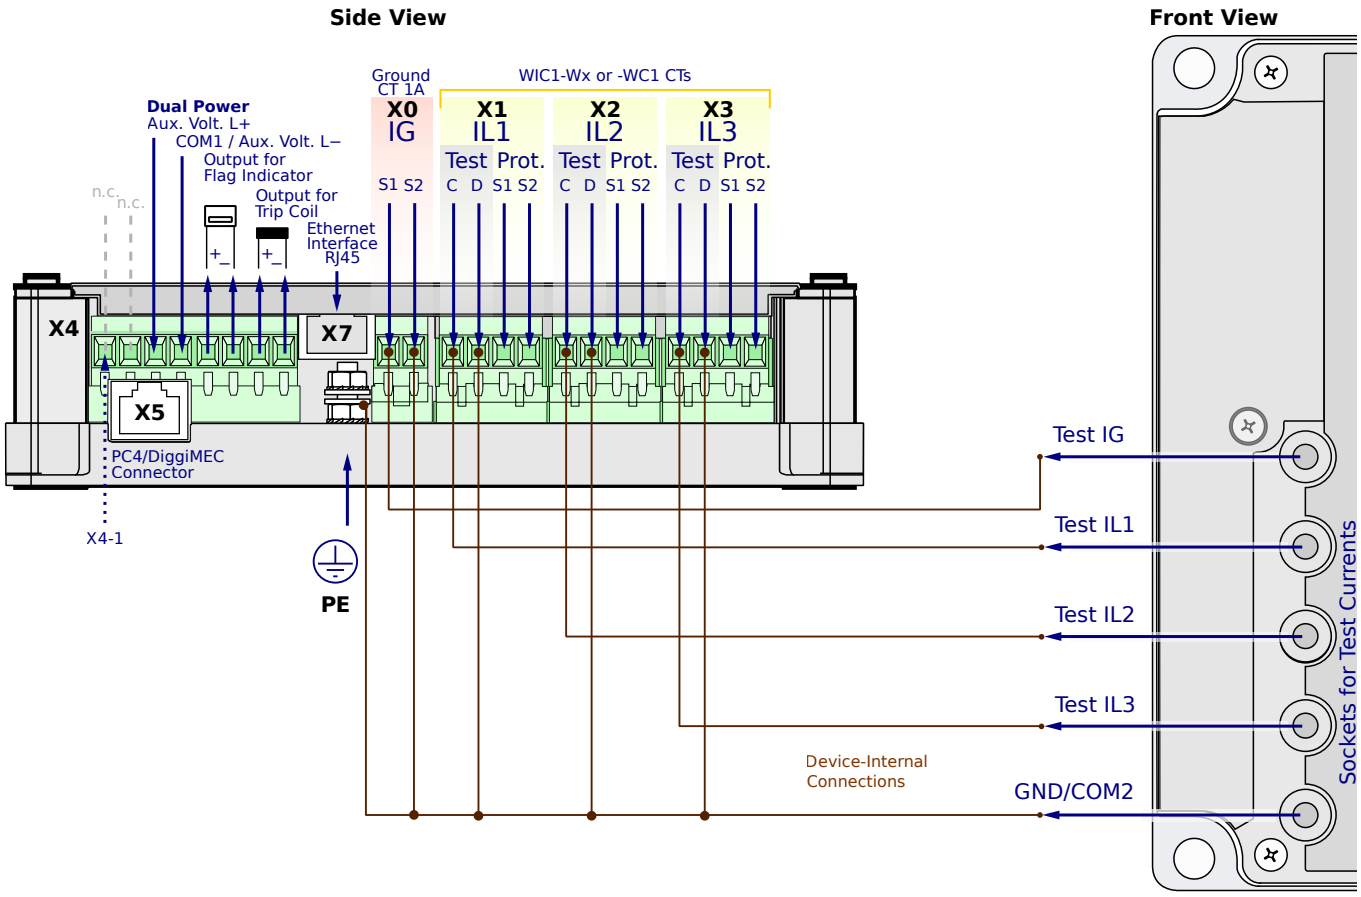


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NM2PL0

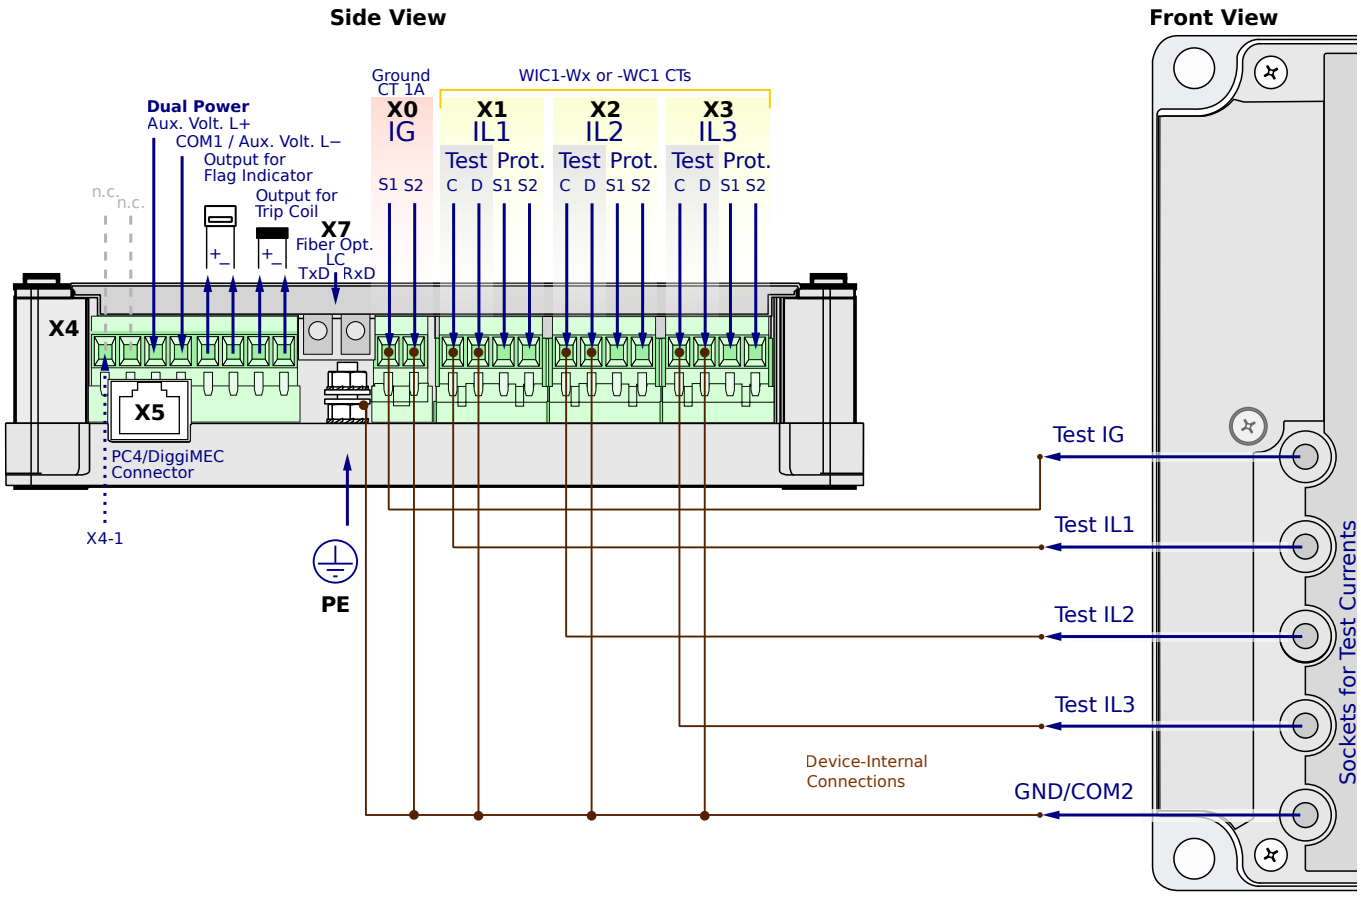


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NM2PLH

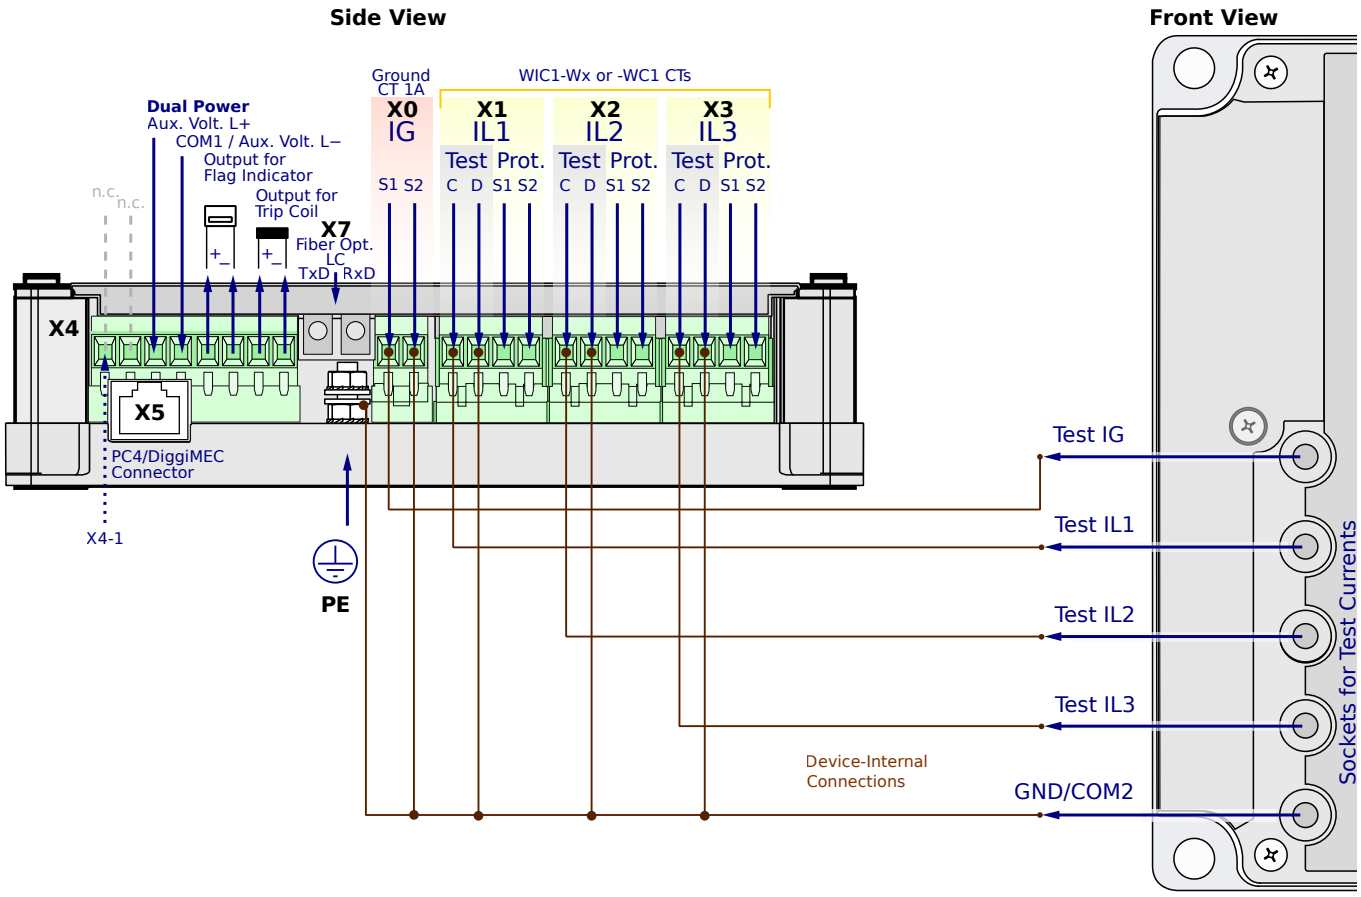


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0SA0

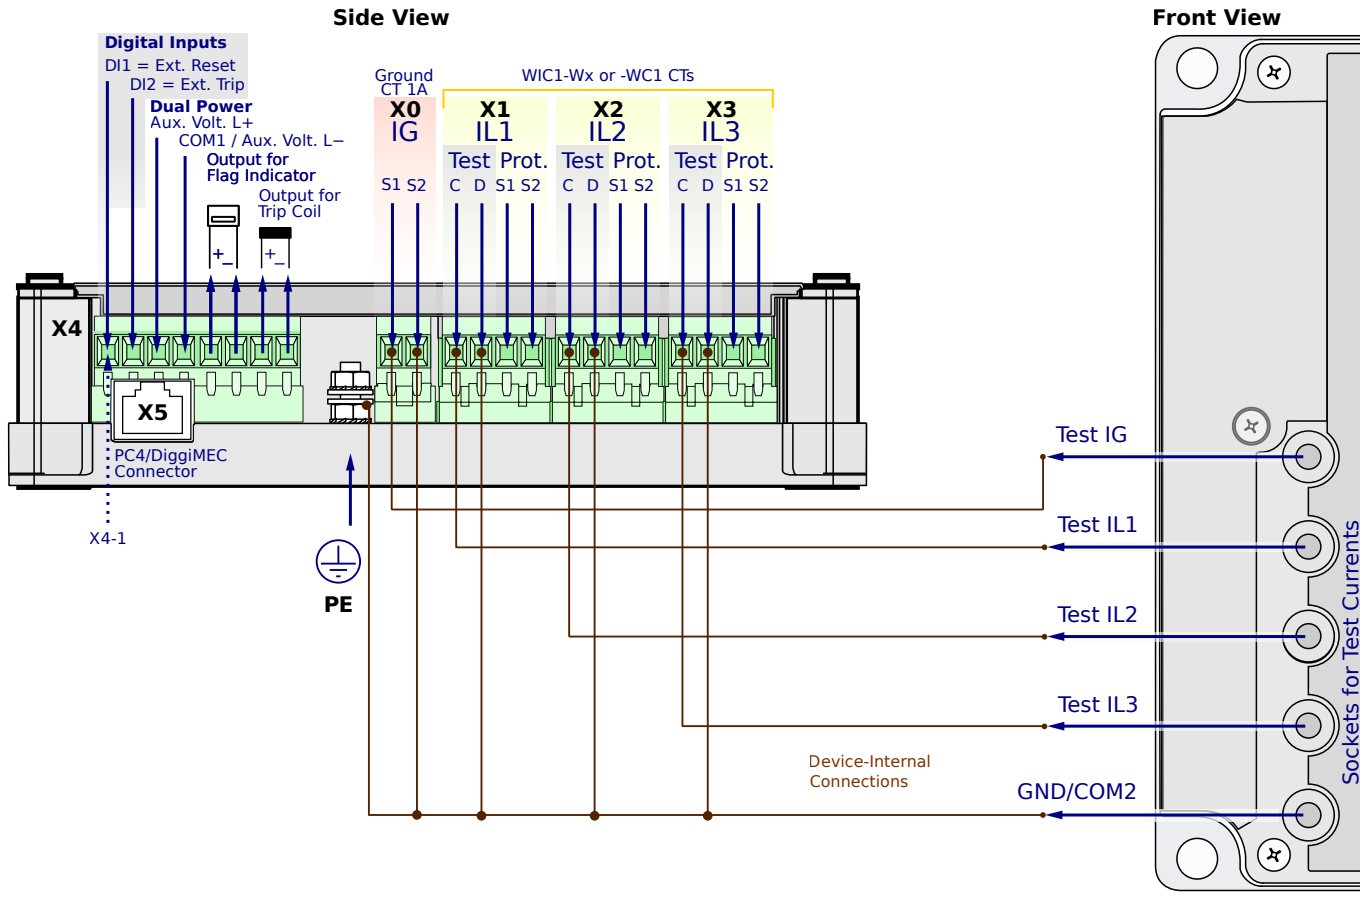


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0SAH

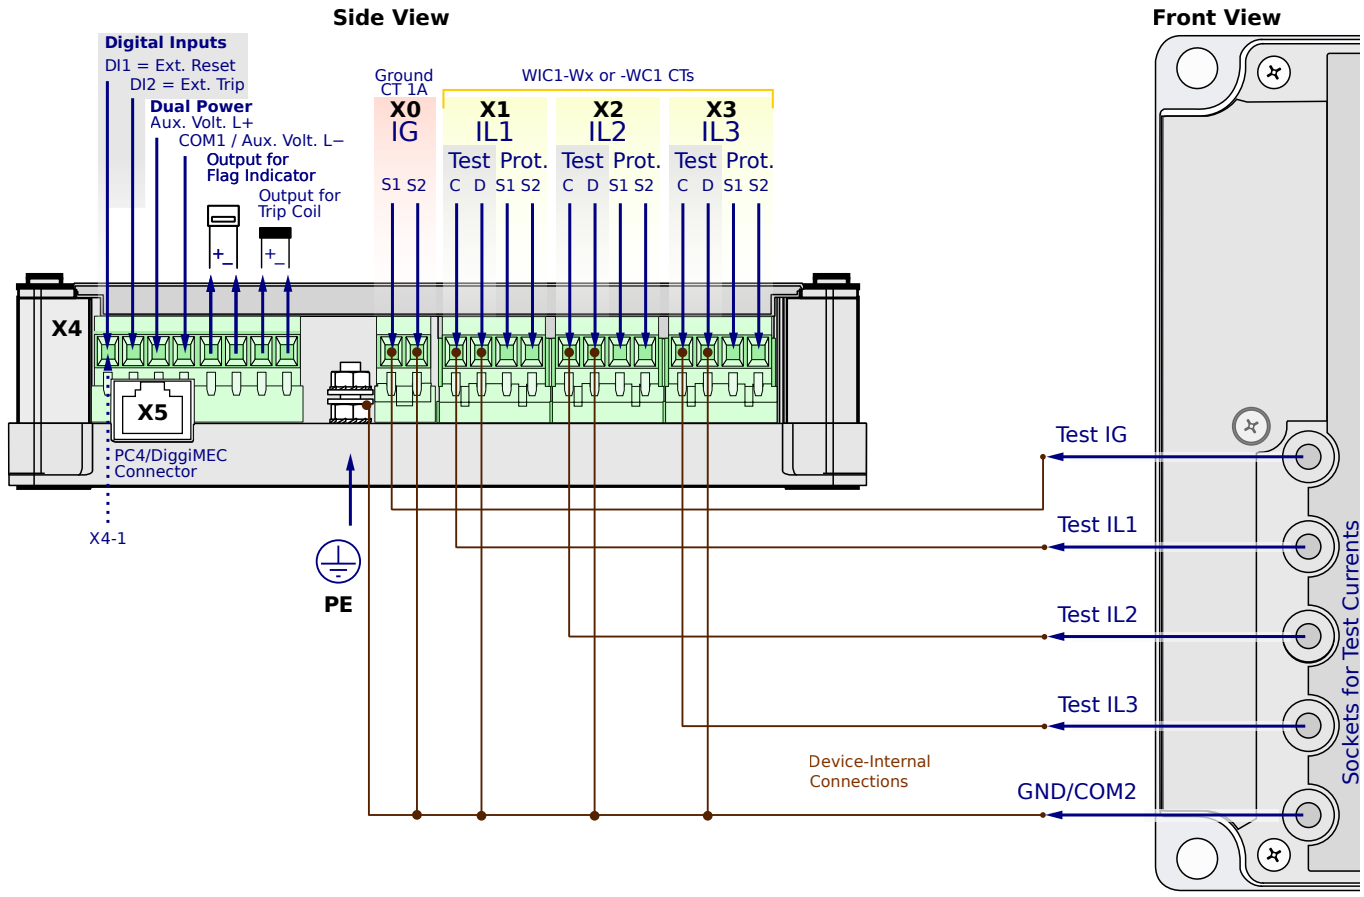


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0SB0

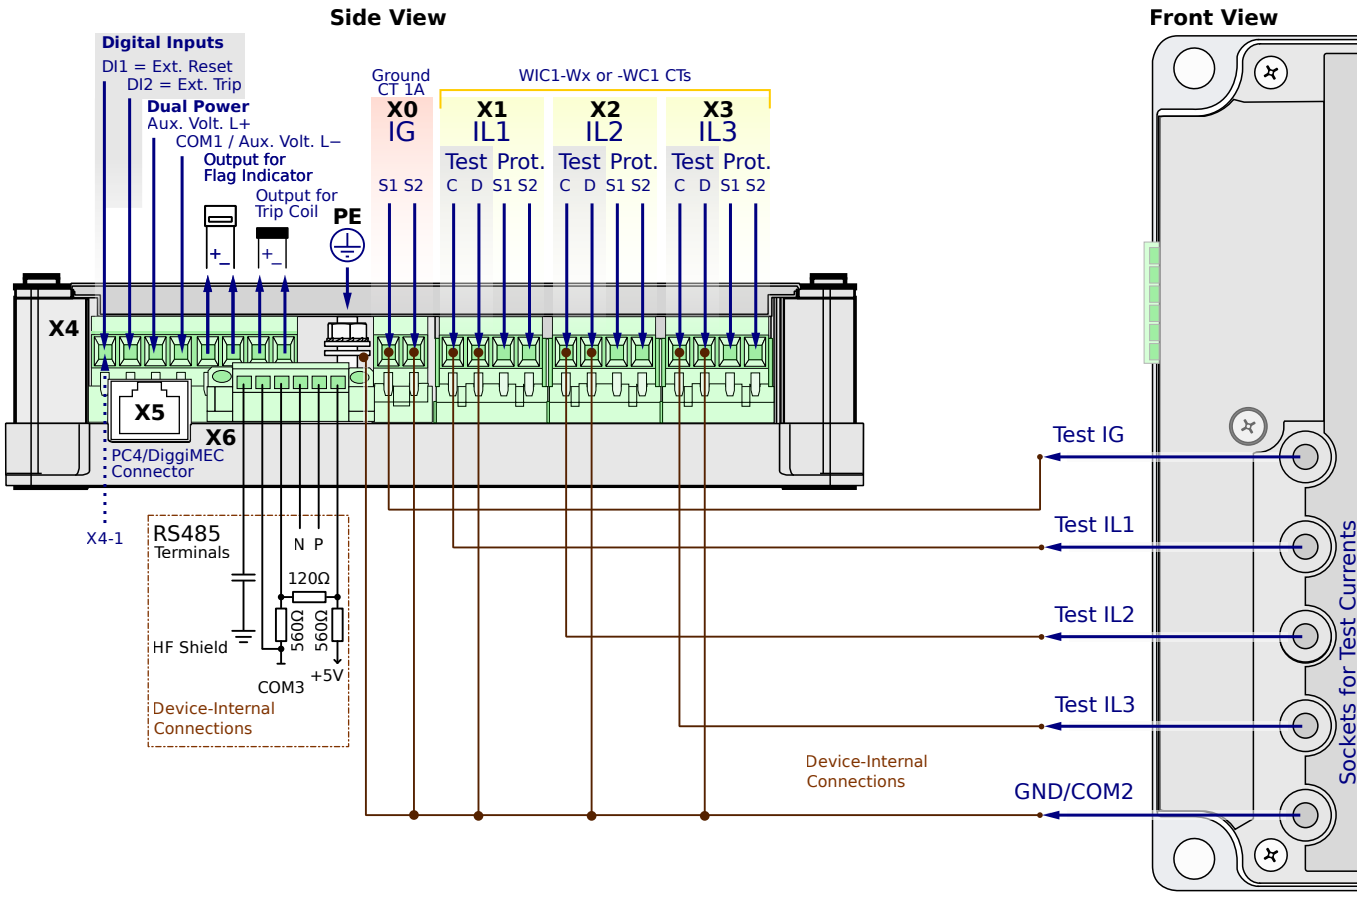


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0SBH

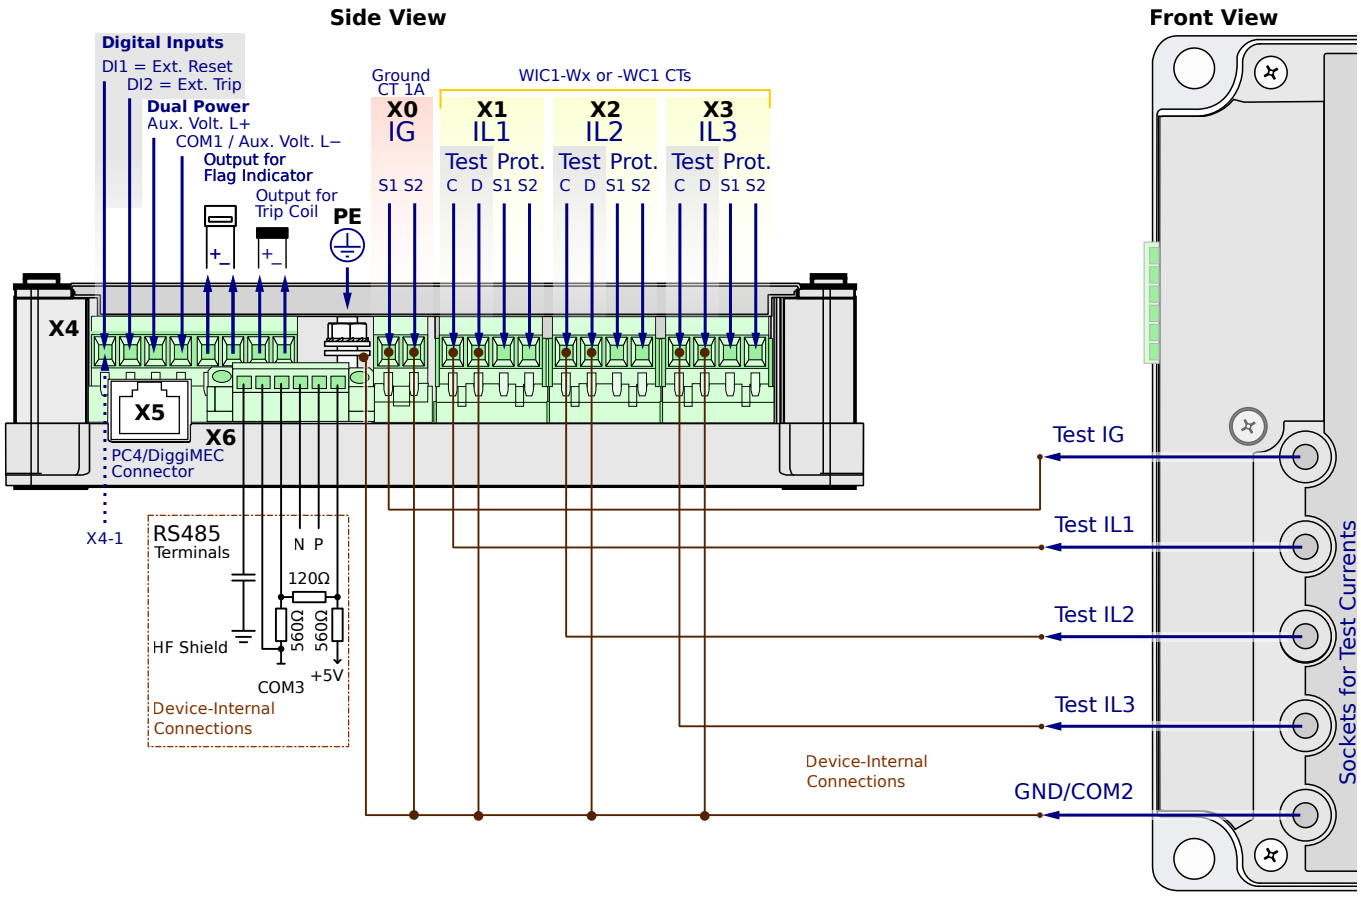


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0SC0

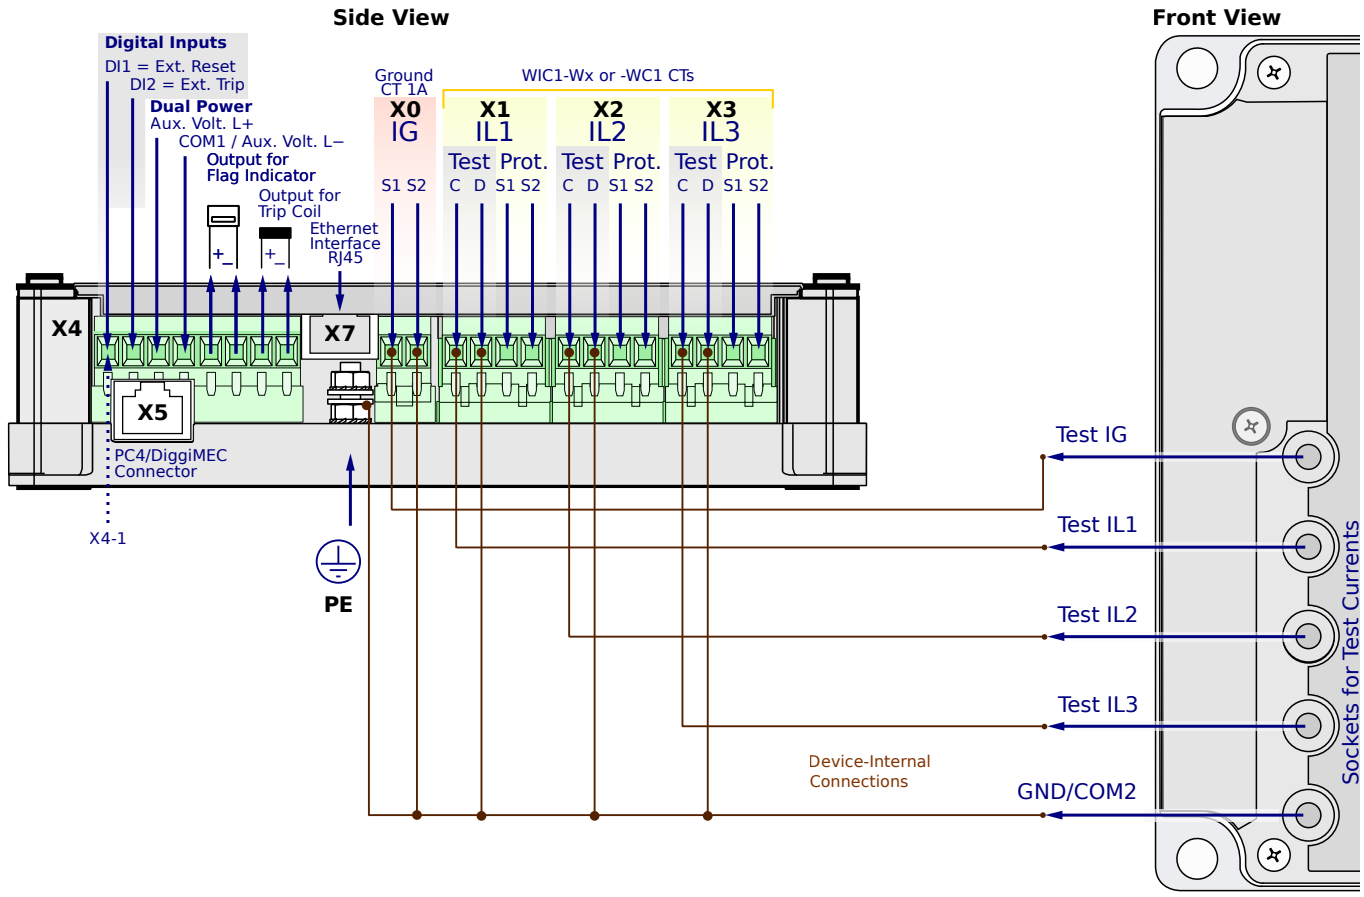


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0SCH

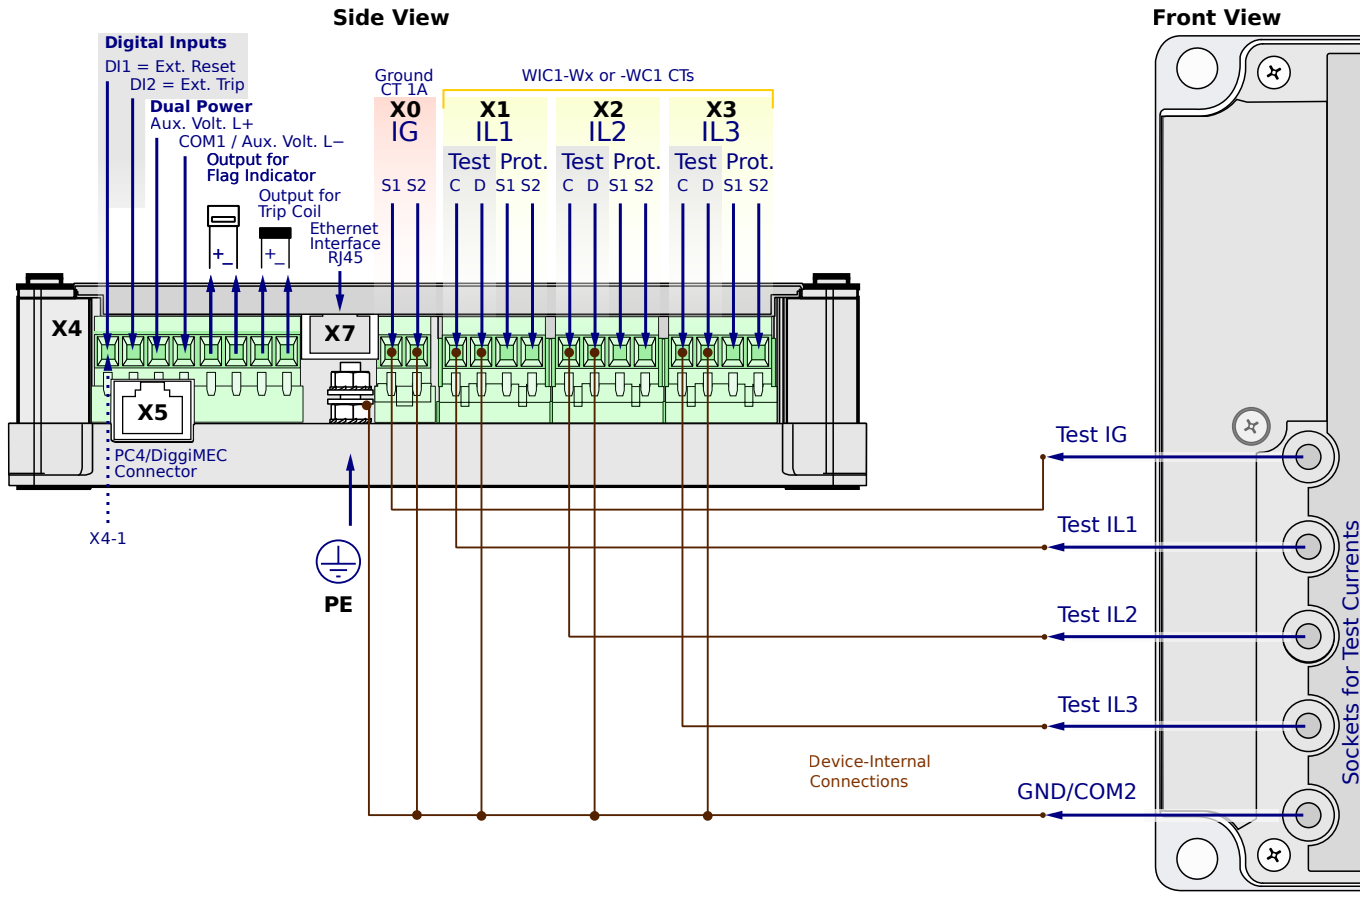


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0SL0

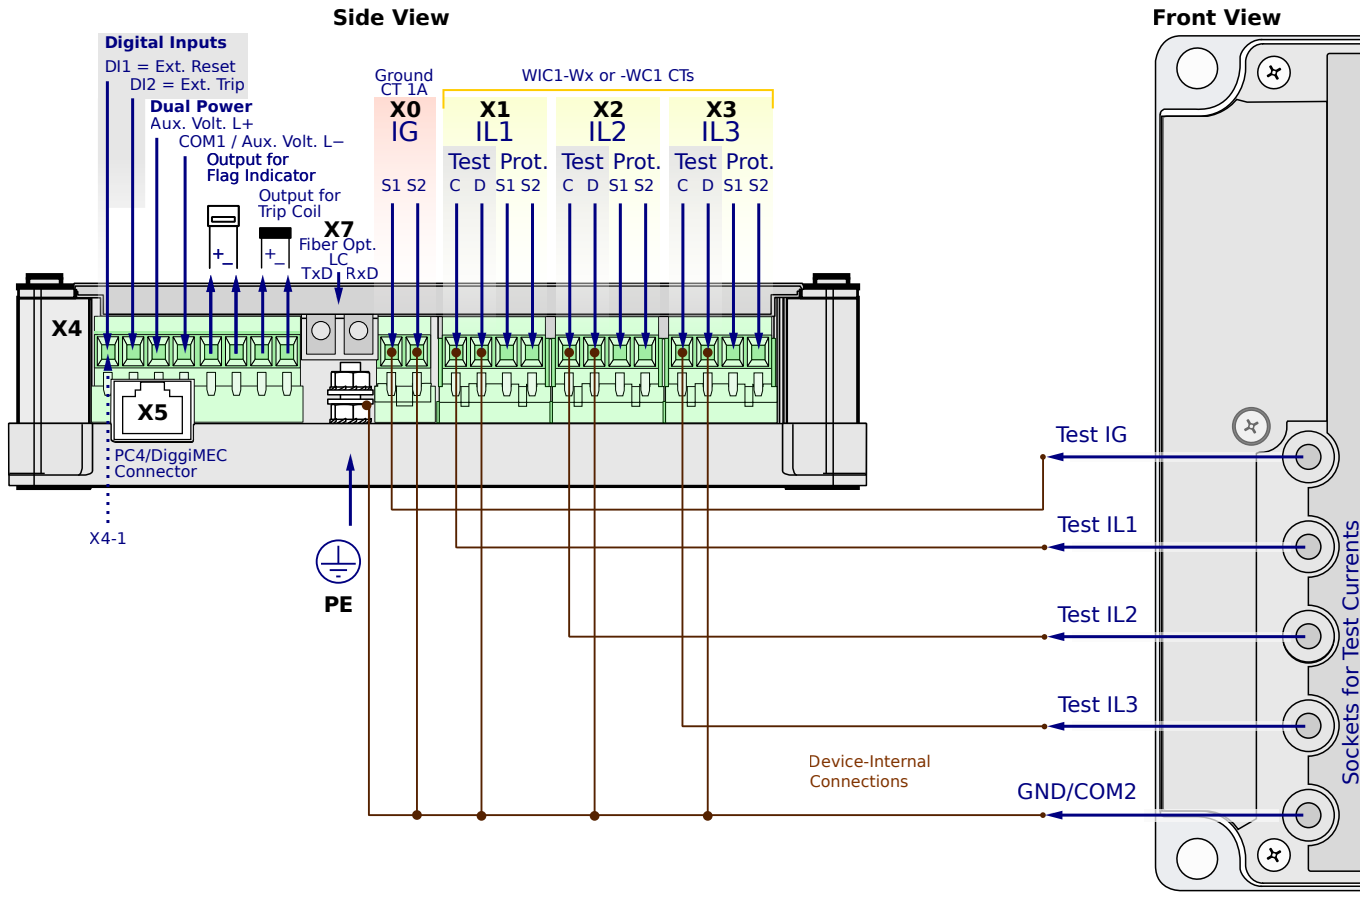


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0SLH

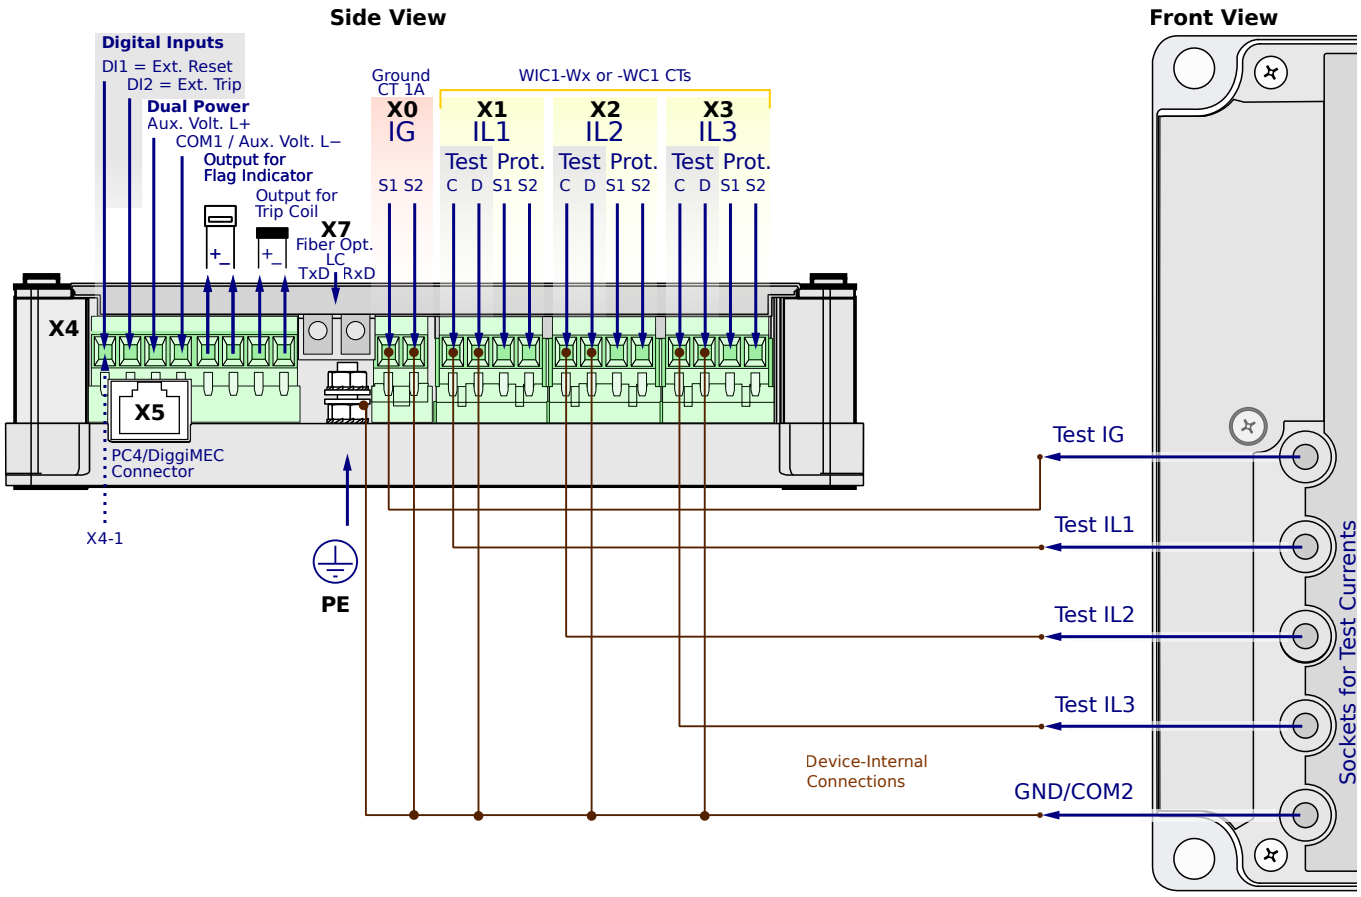


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0AA0

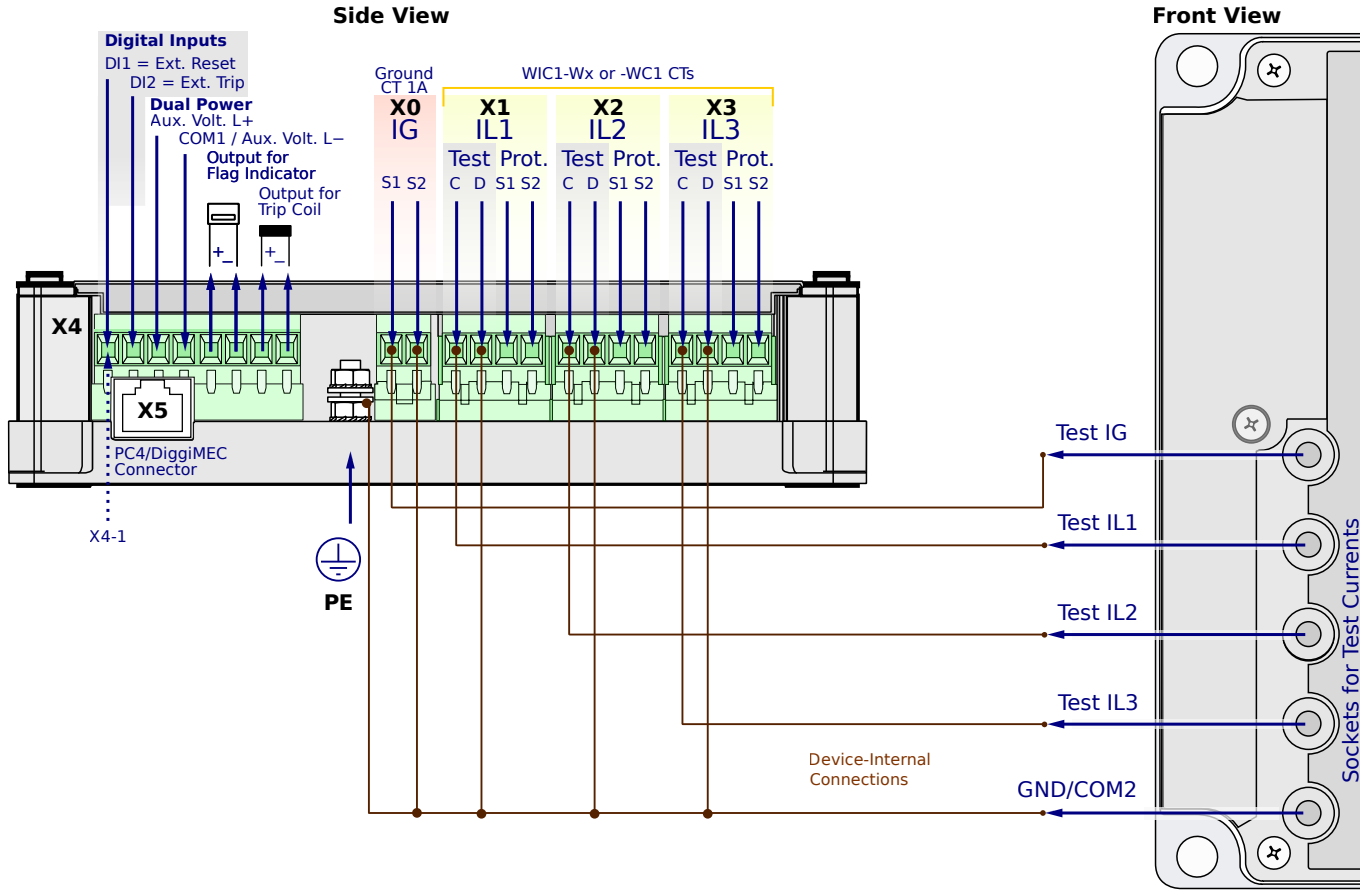


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0AAH

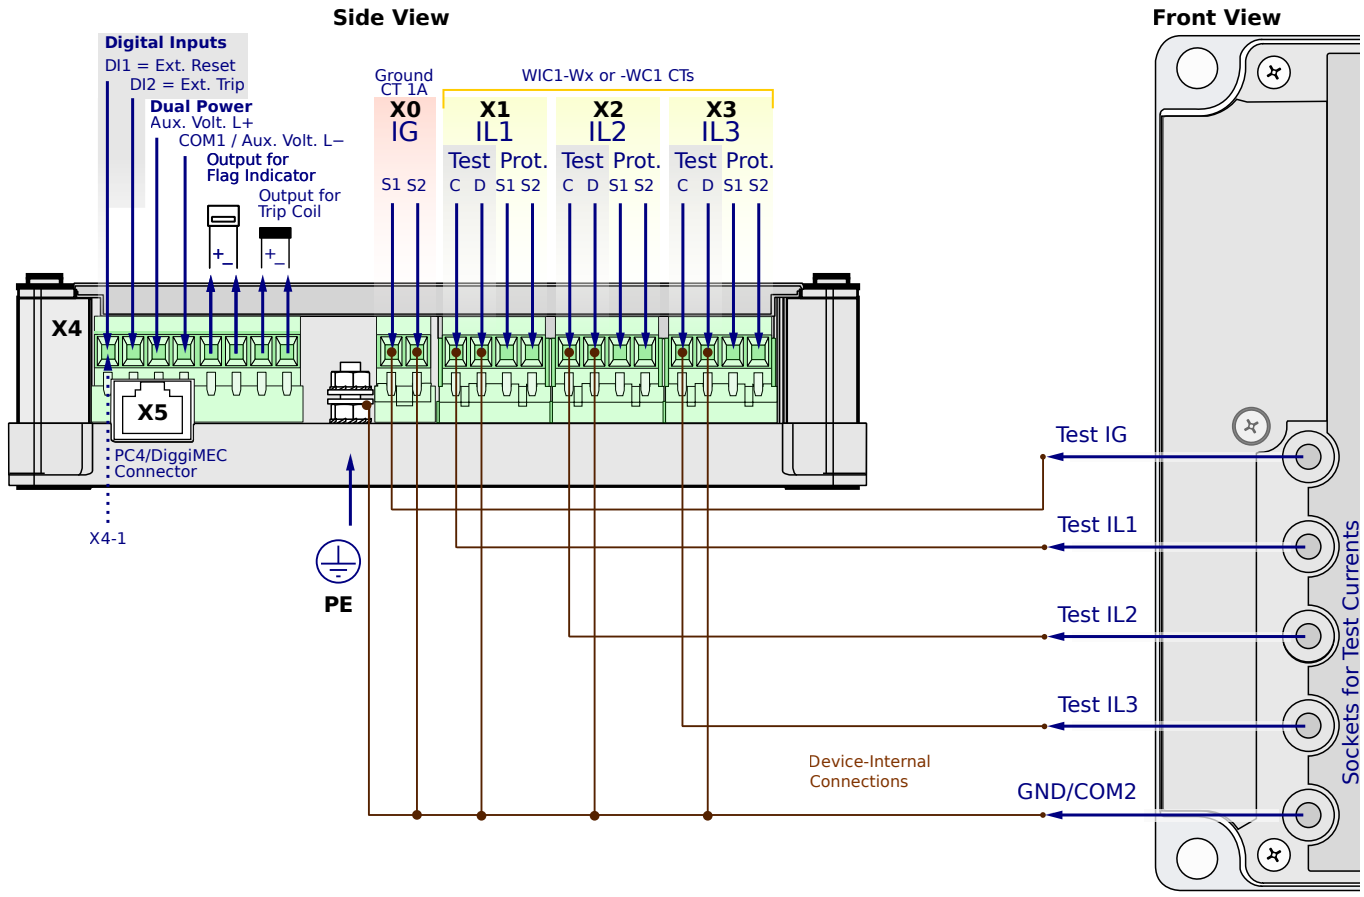


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0AB0

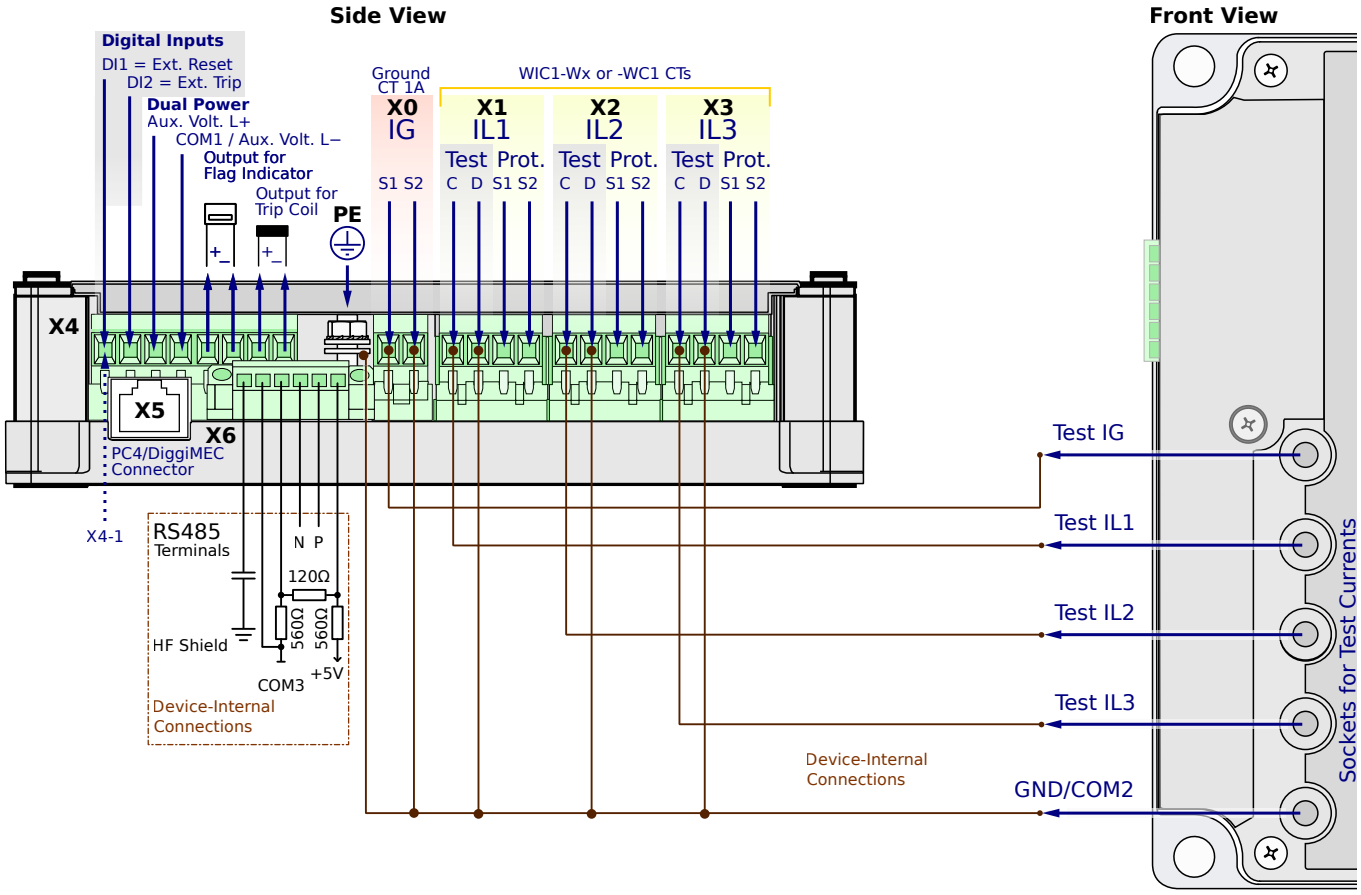


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0ABH

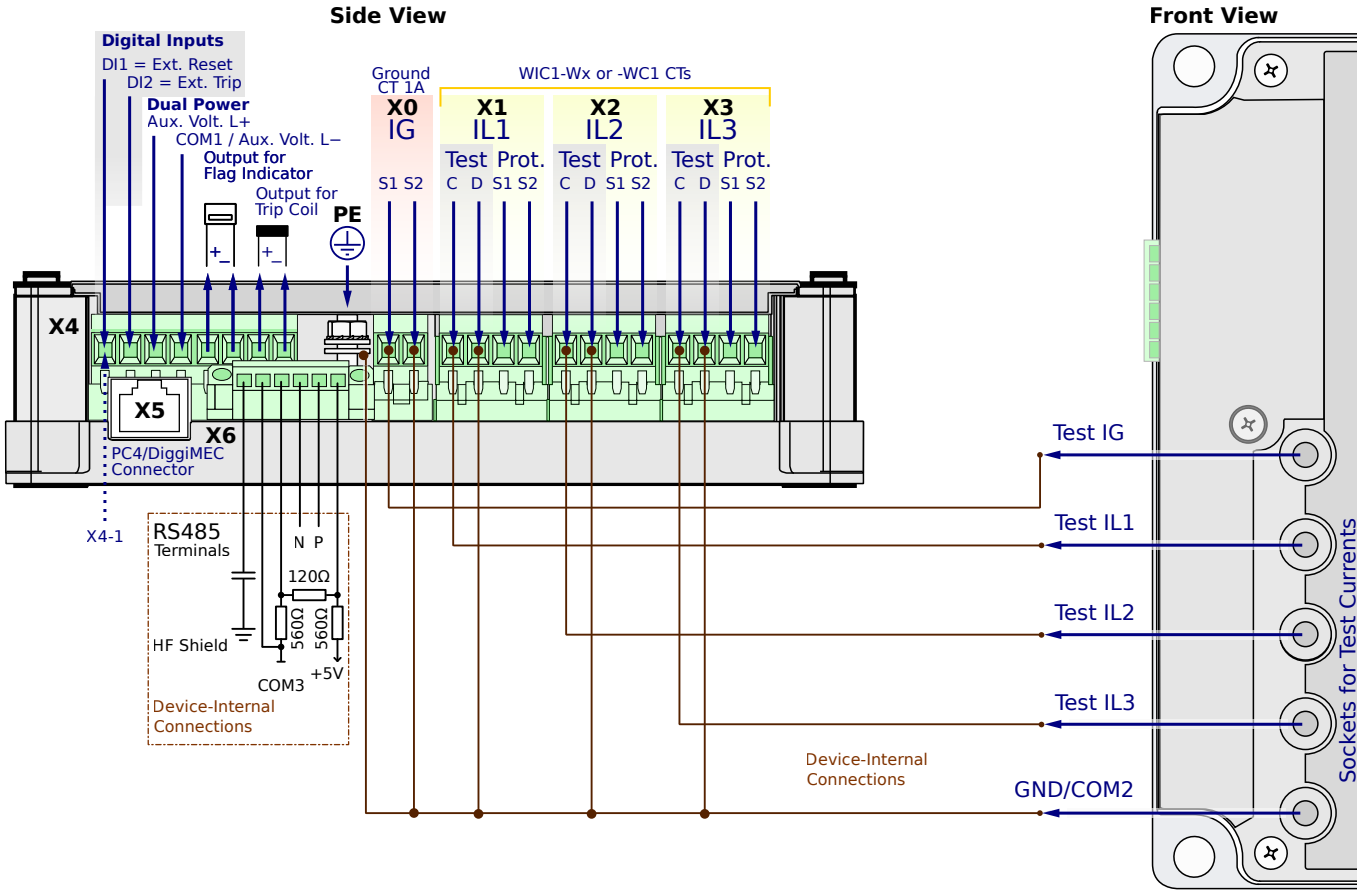


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0AC0

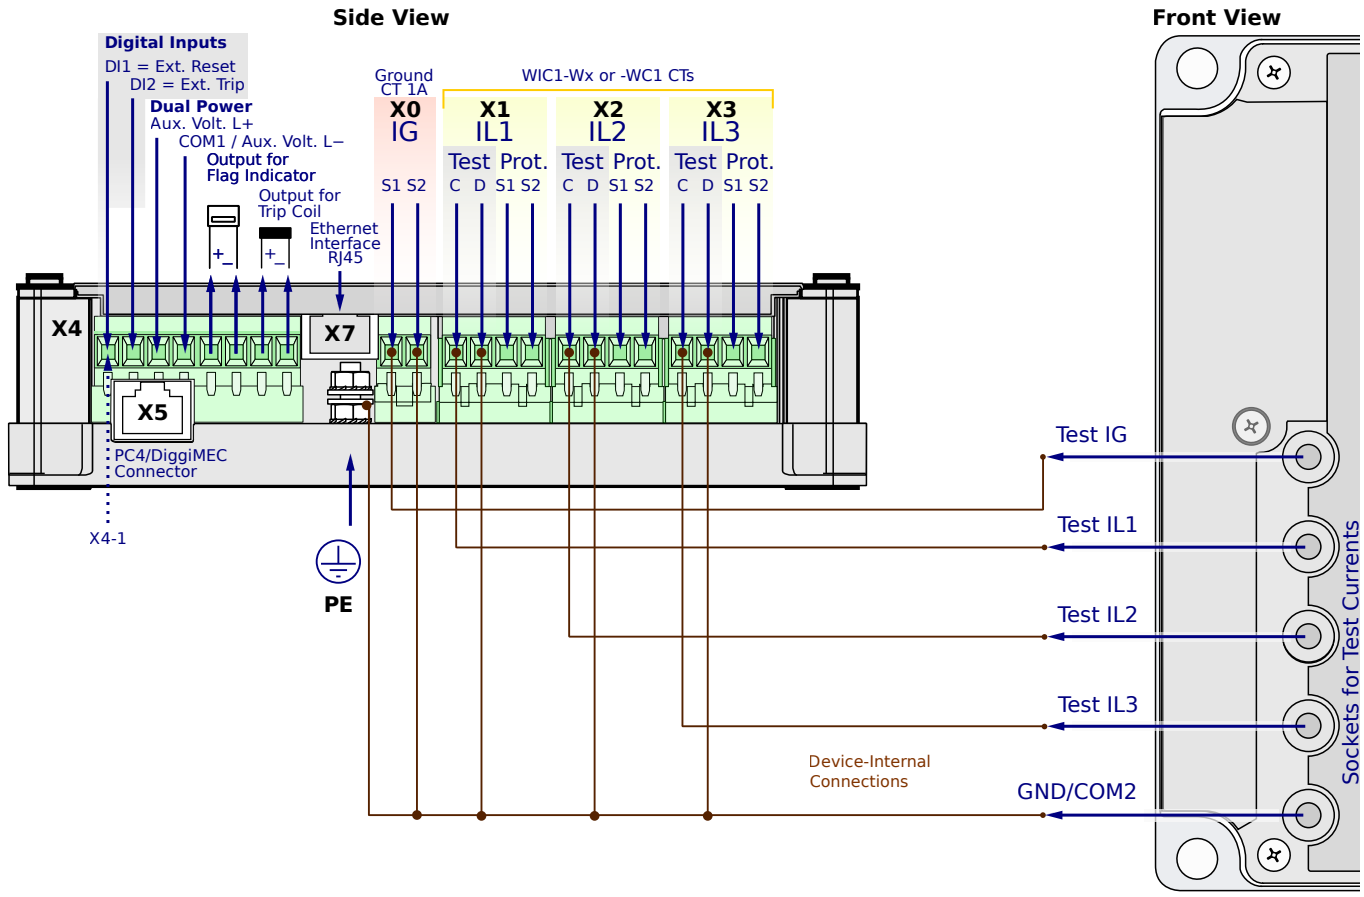


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0ACH

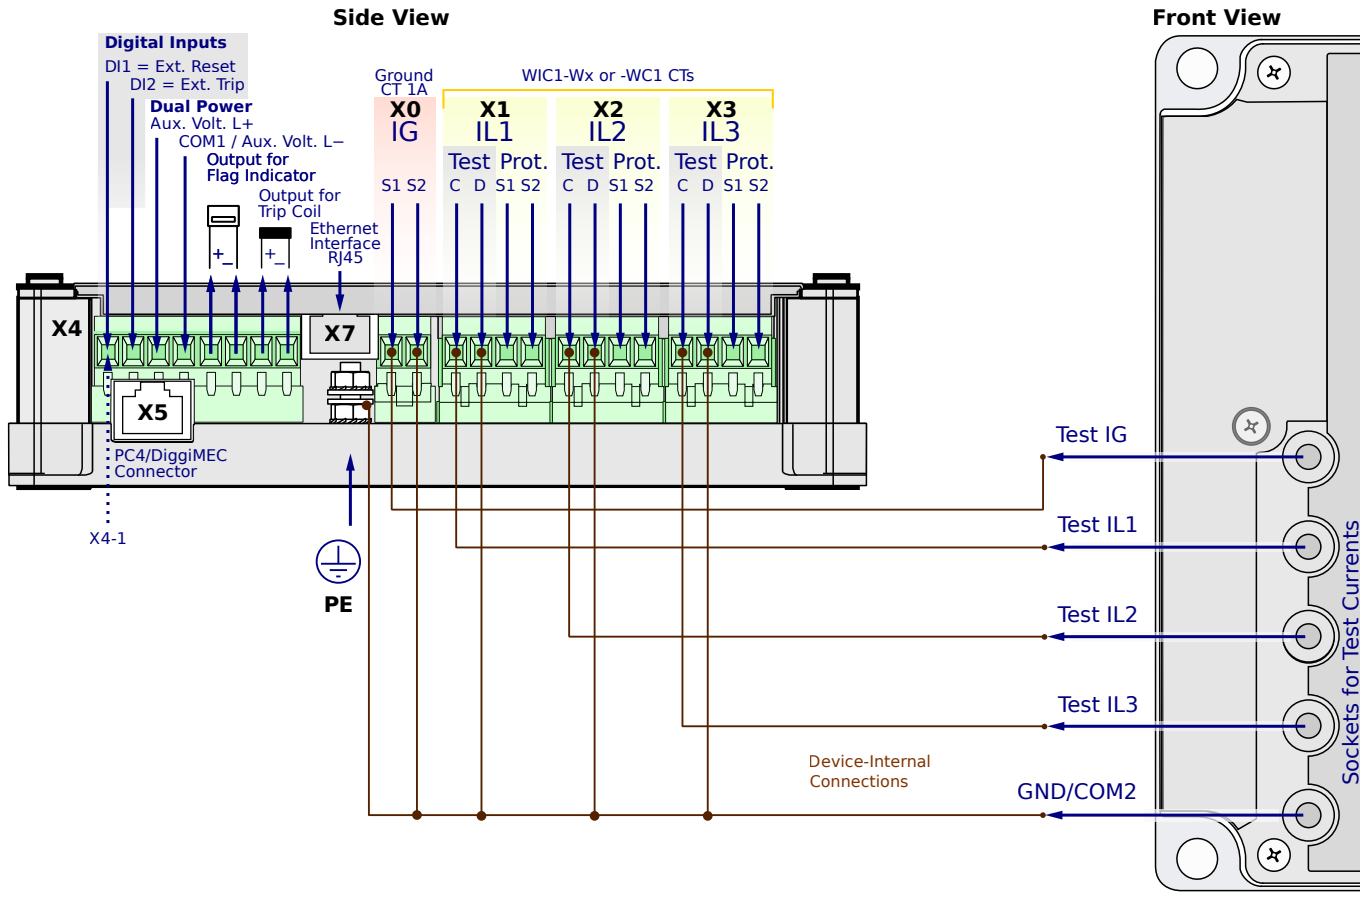


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0AL0

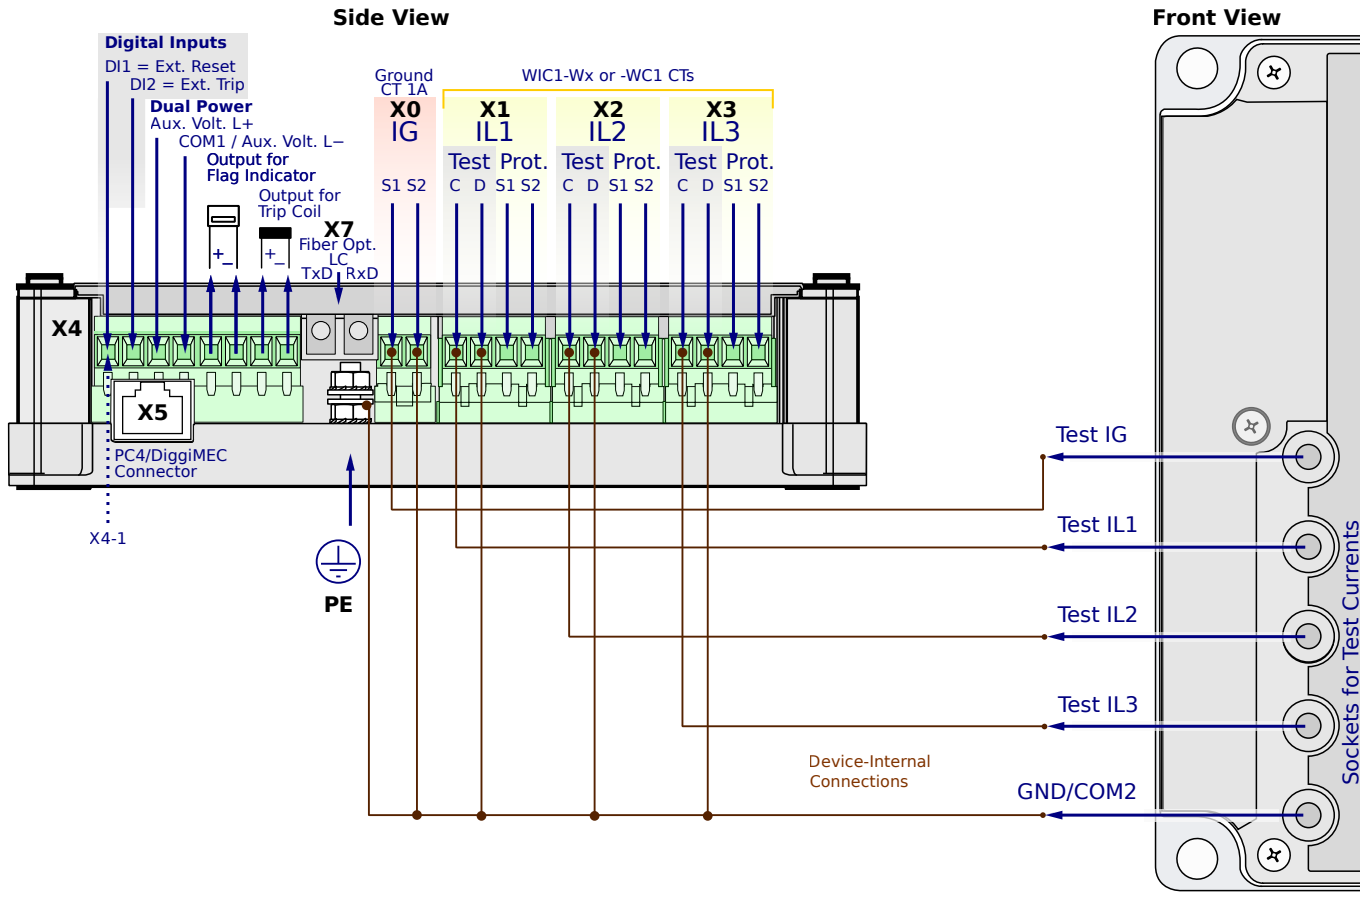


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0ALH

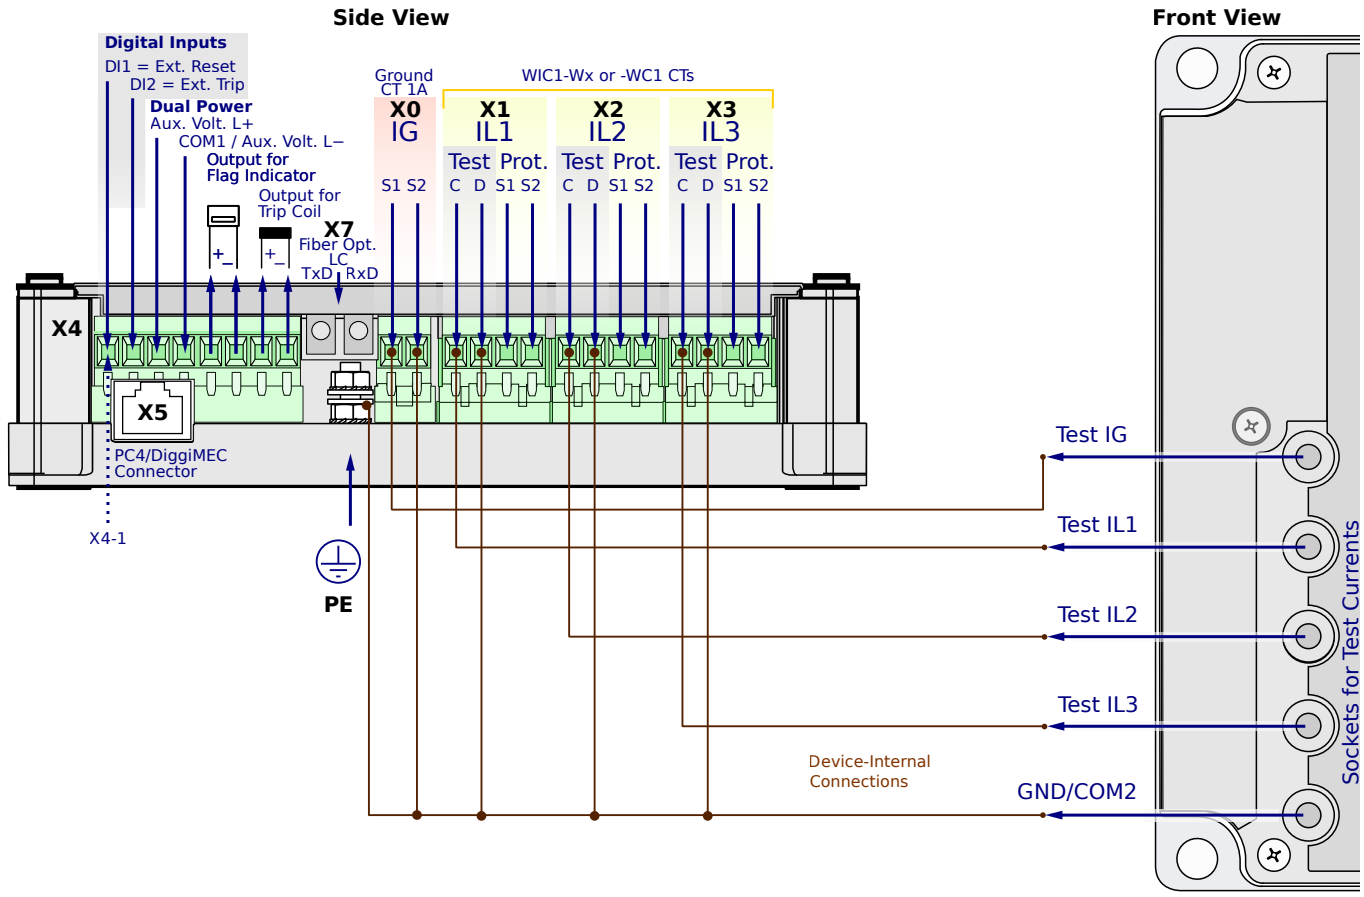


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0PA0

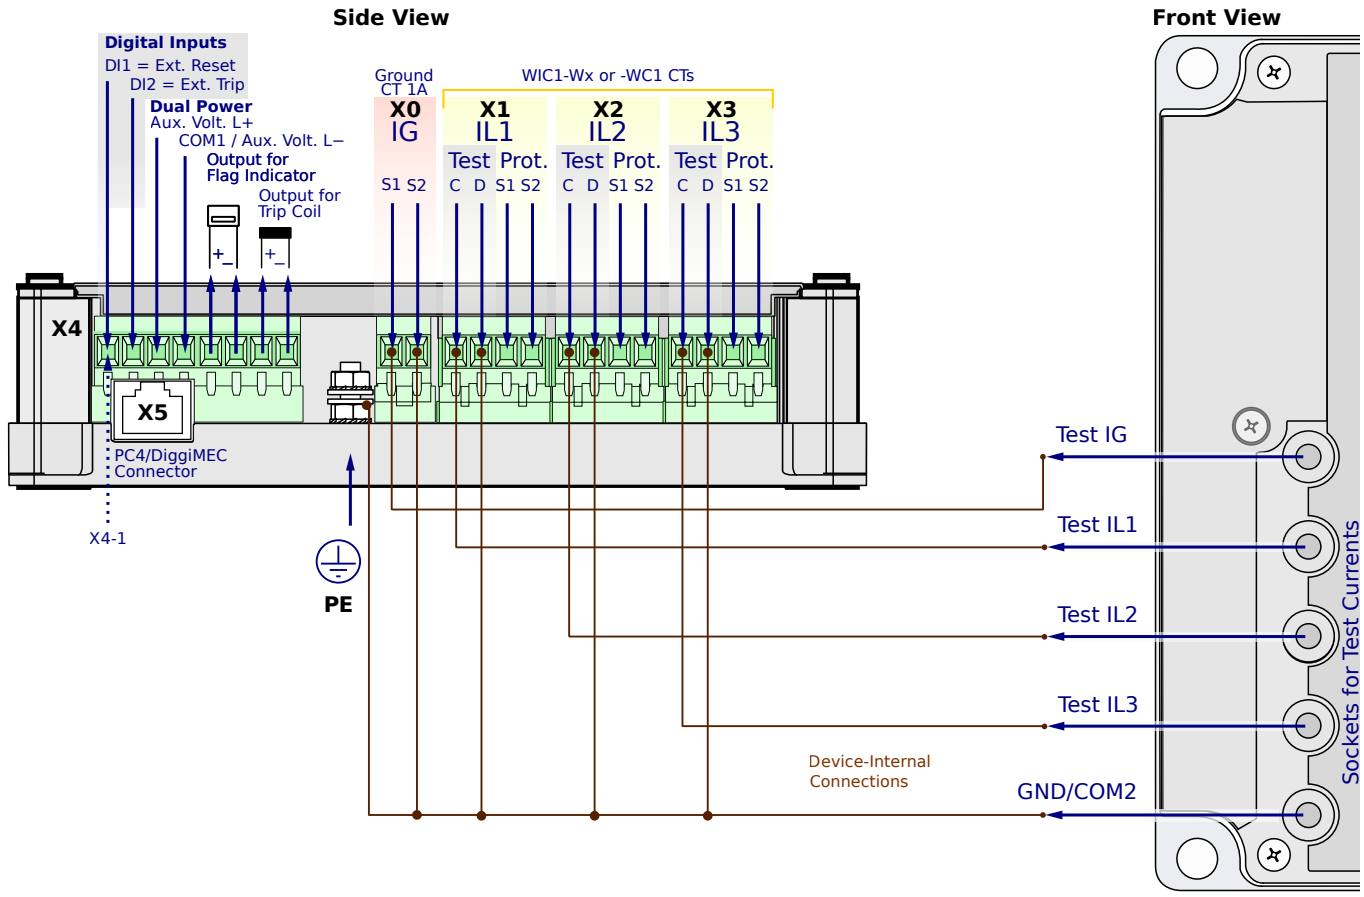


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0PAH

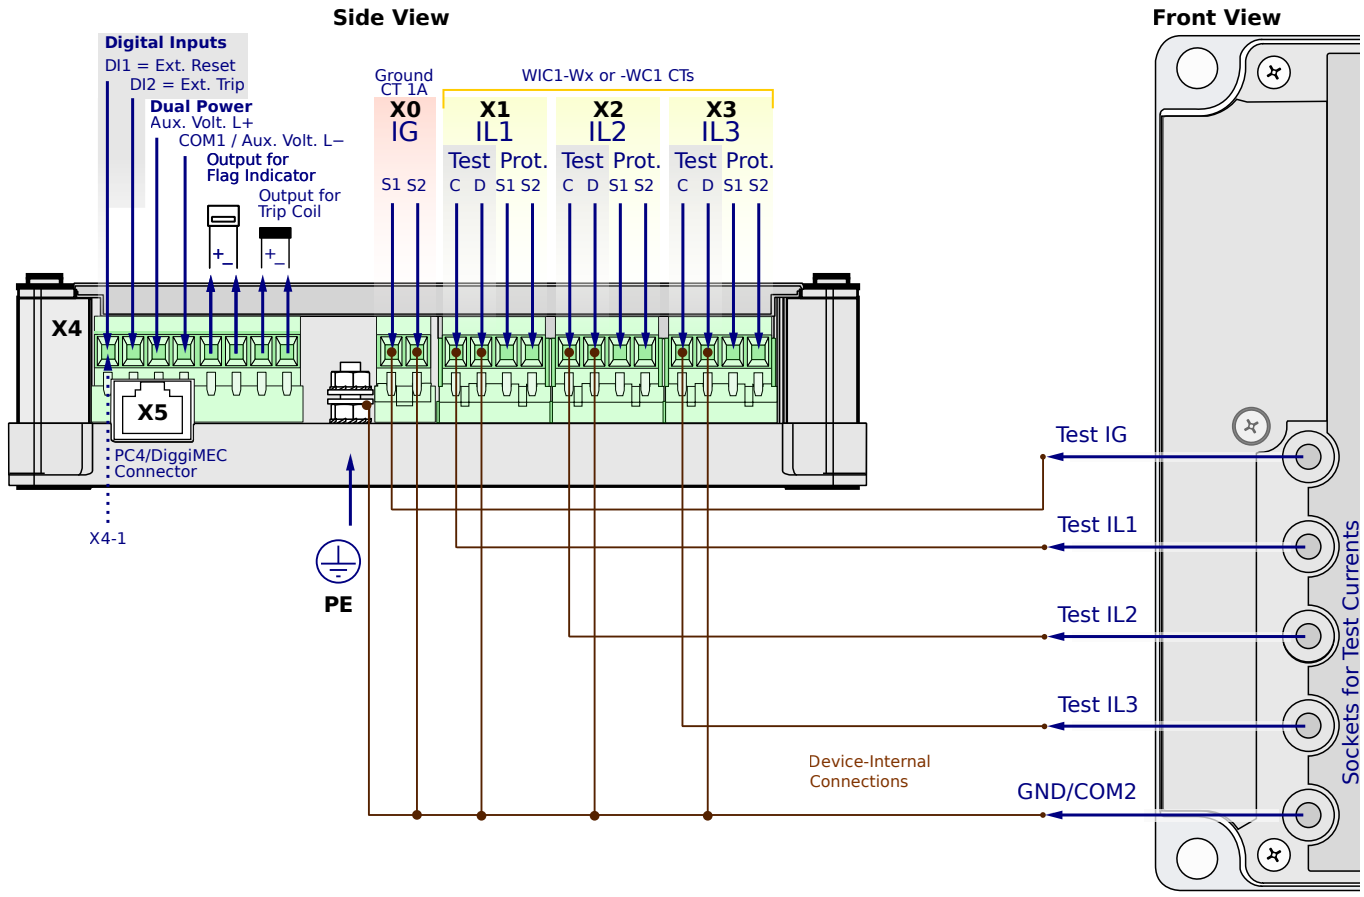


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG0PB0

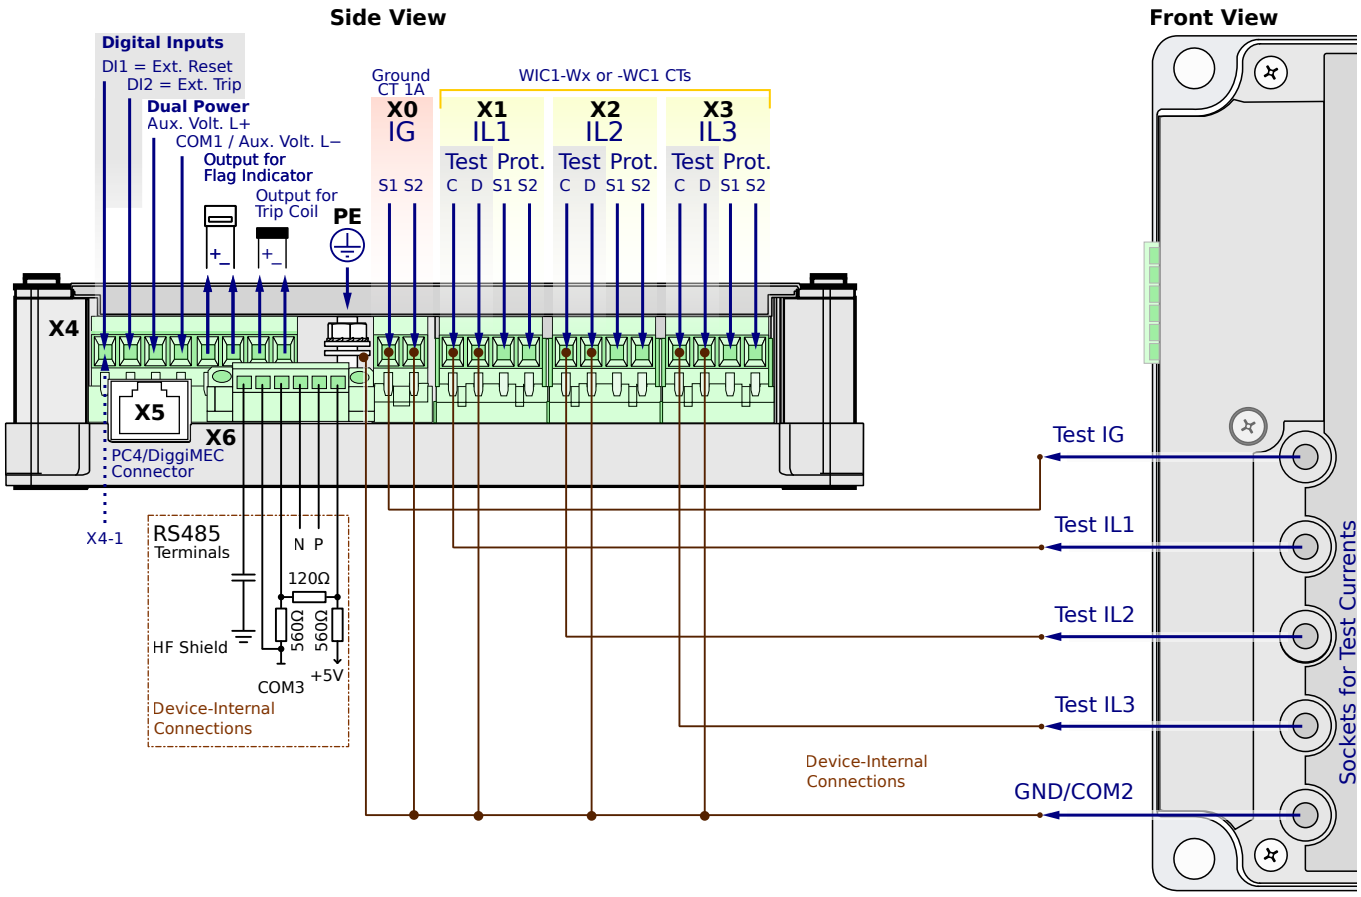


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0PBH

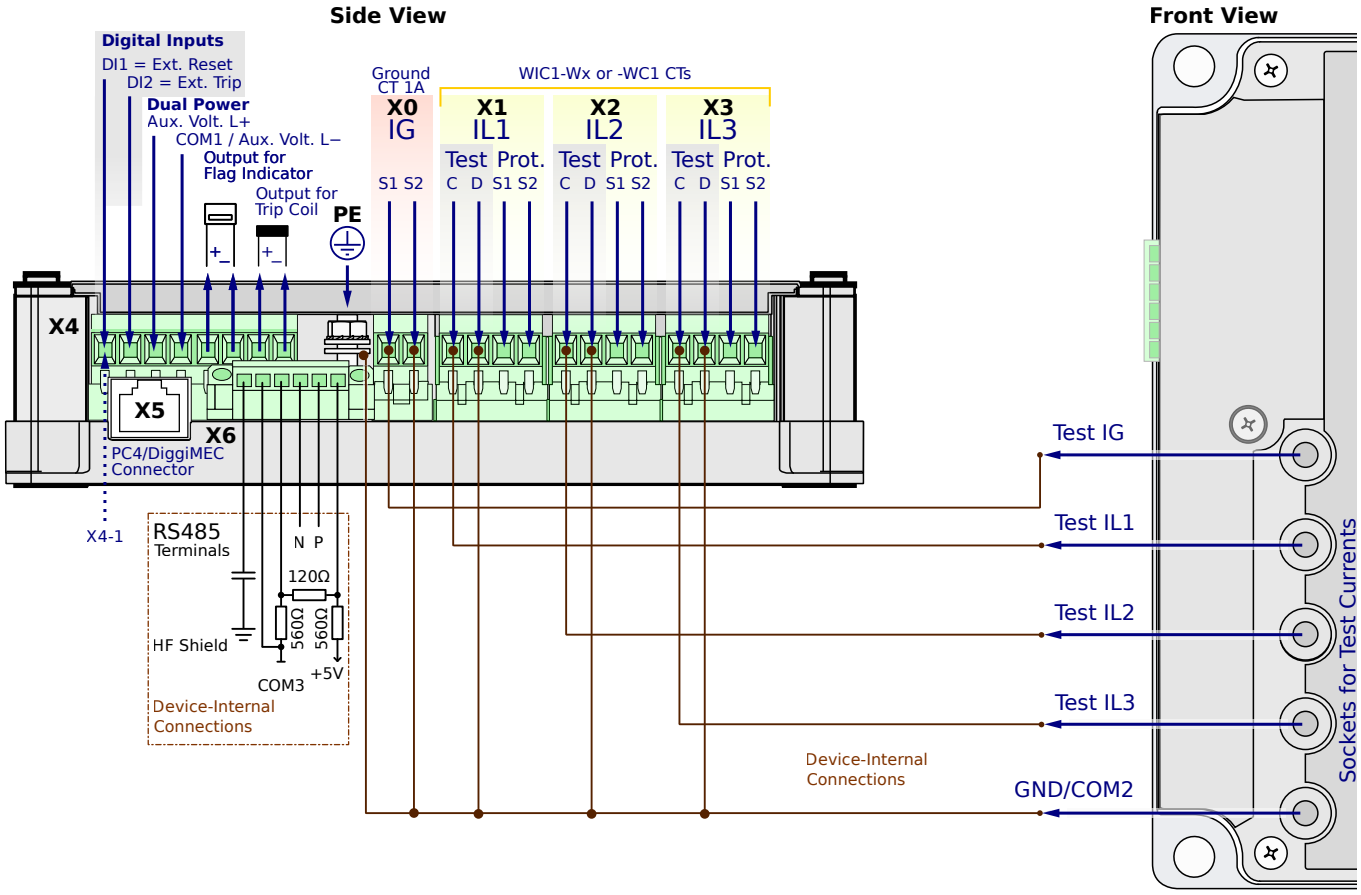


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG0PC0

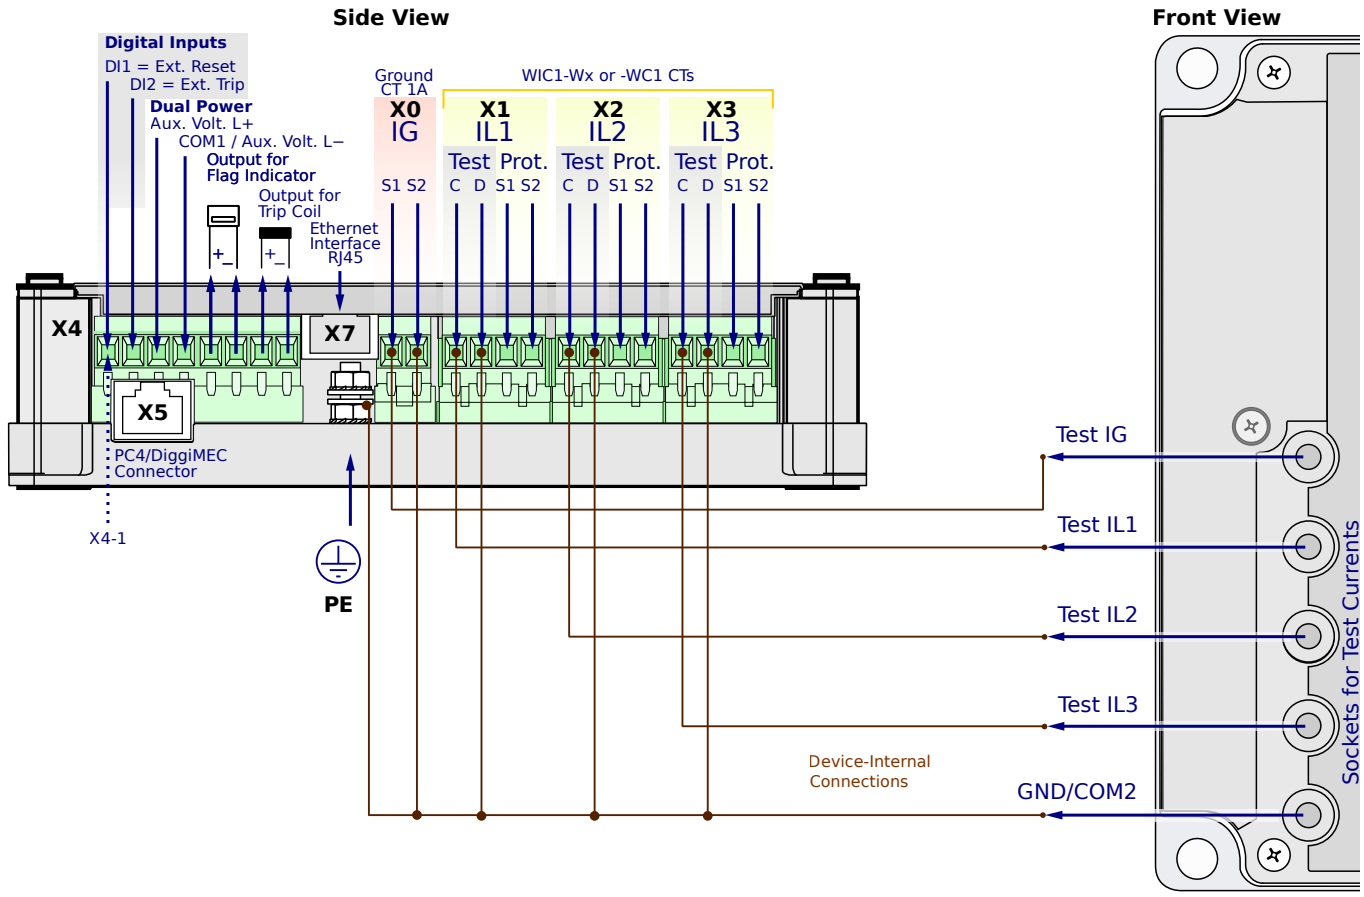


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0PCH

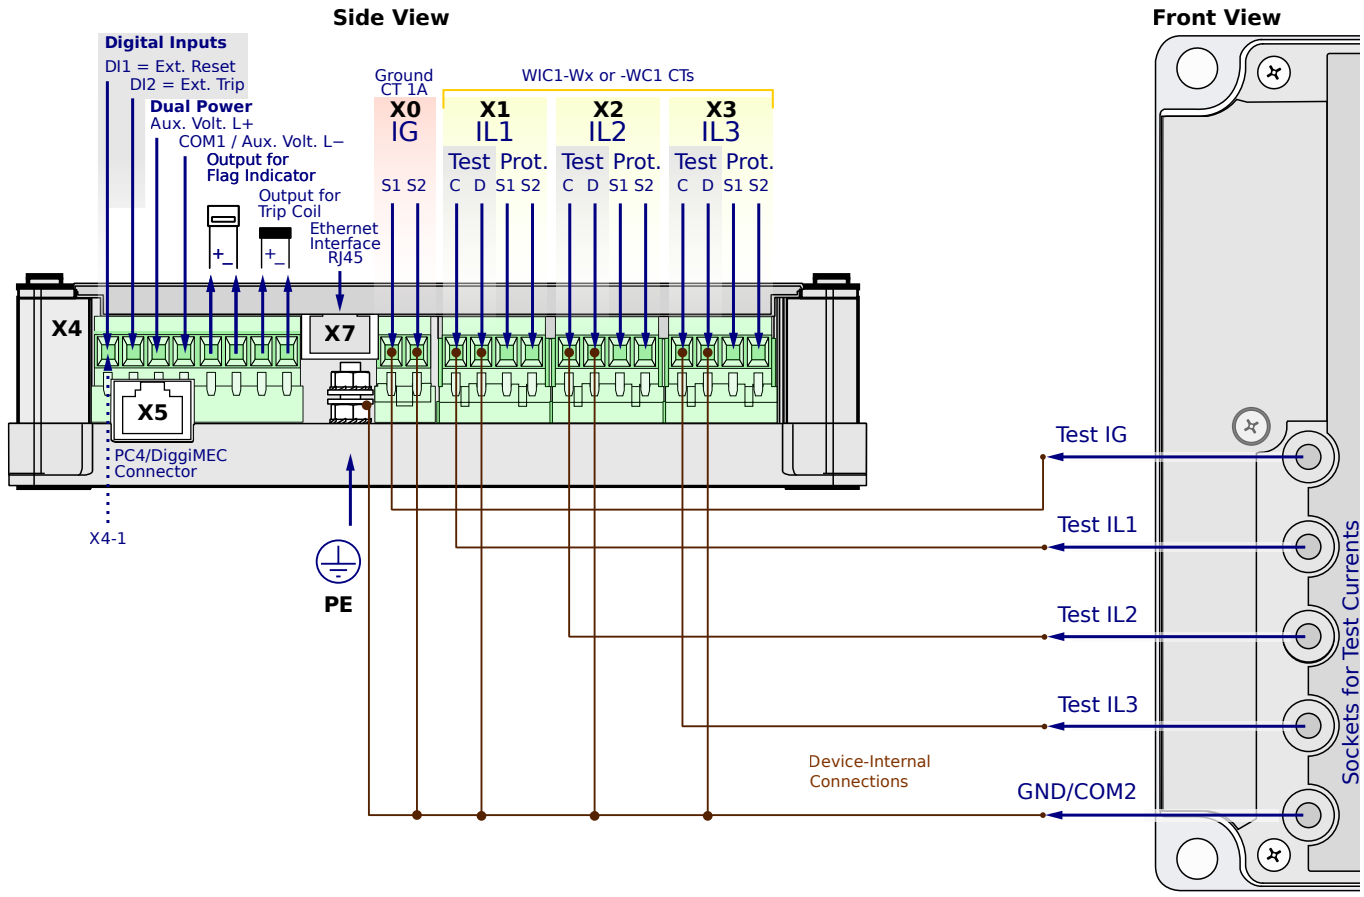


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG0PL0

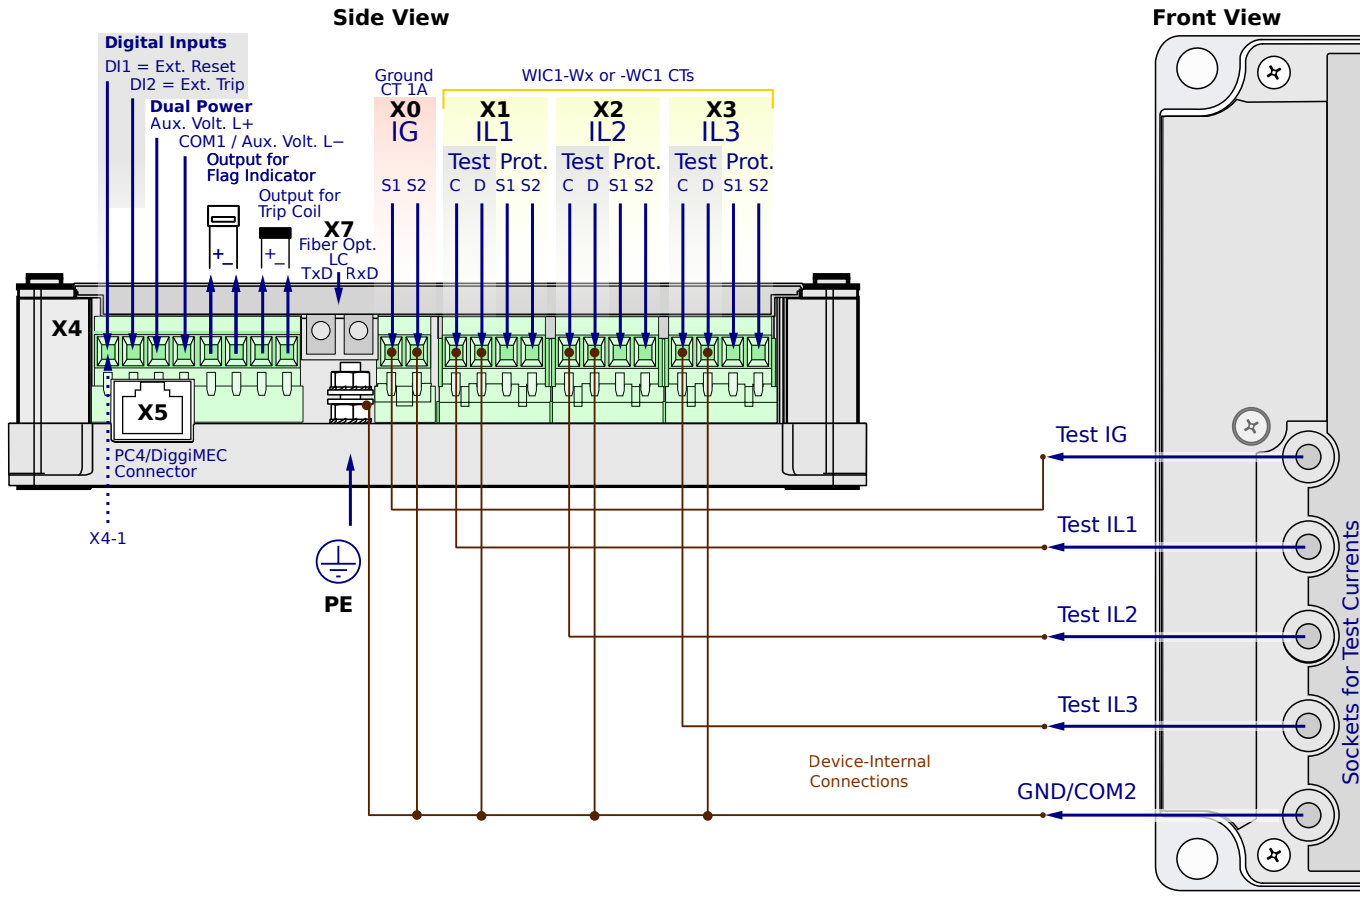


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG0PLH

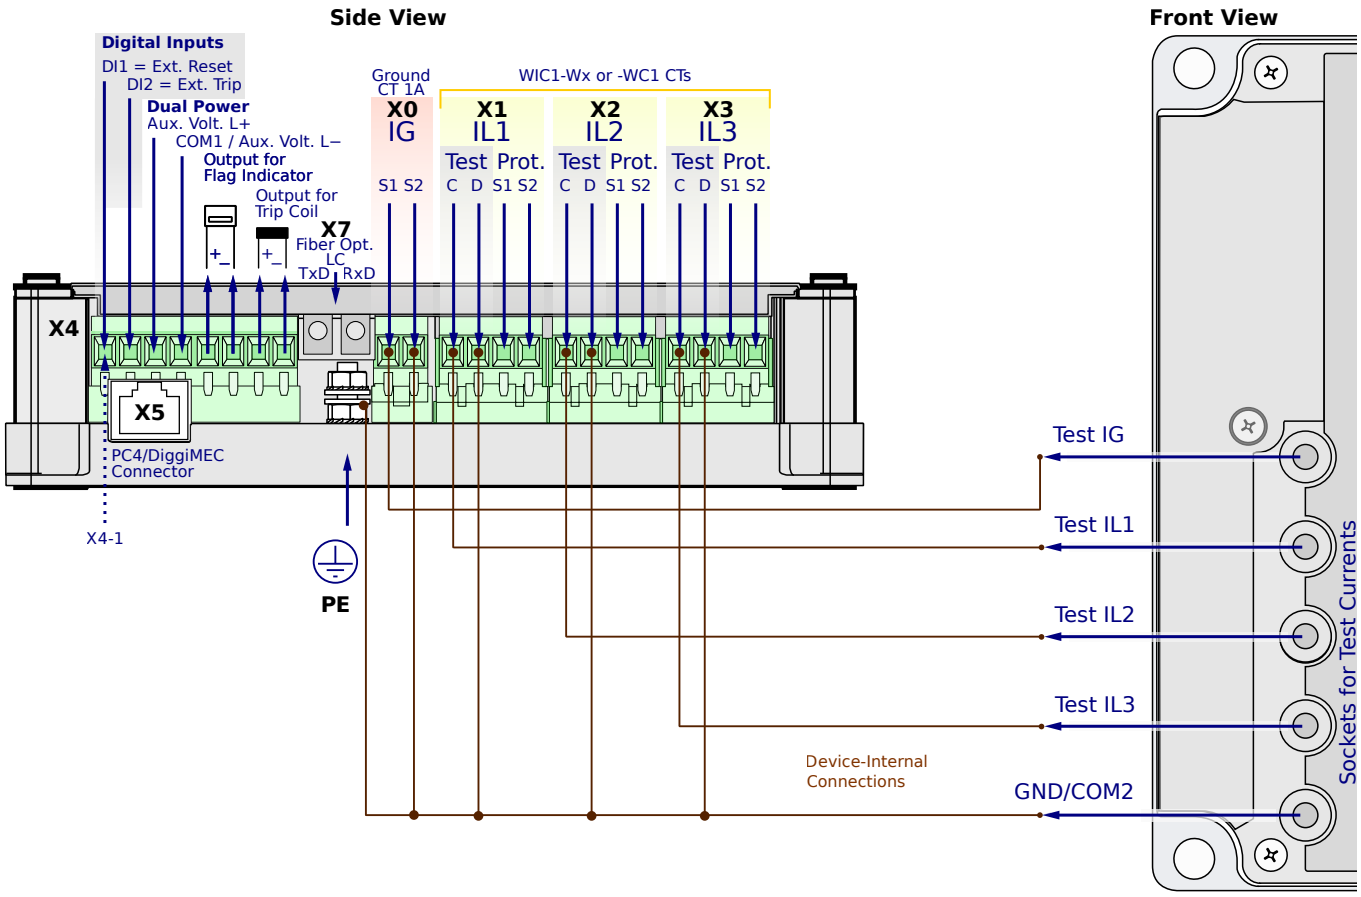


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1SA0

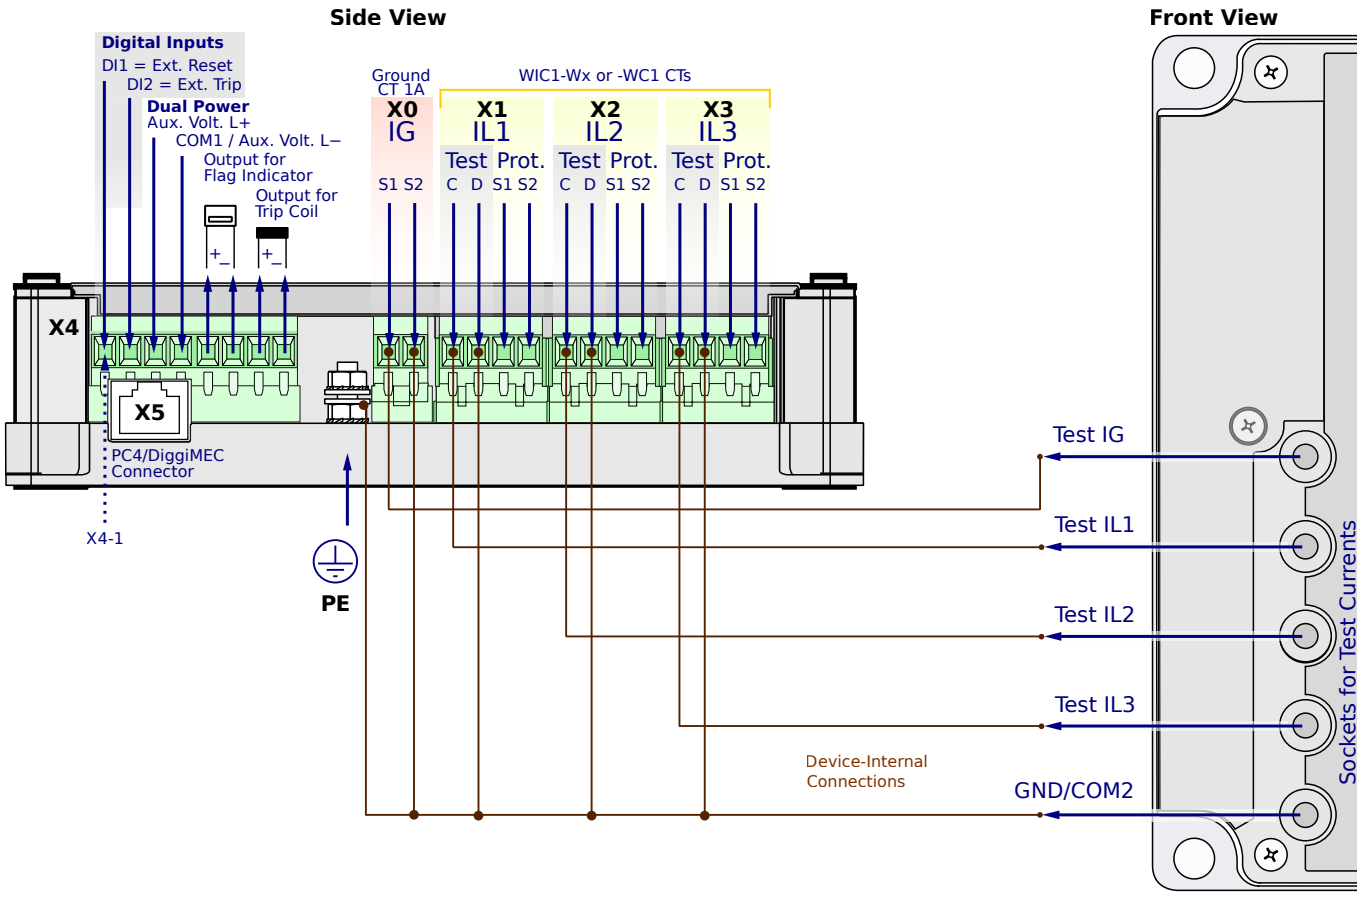


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1SAH

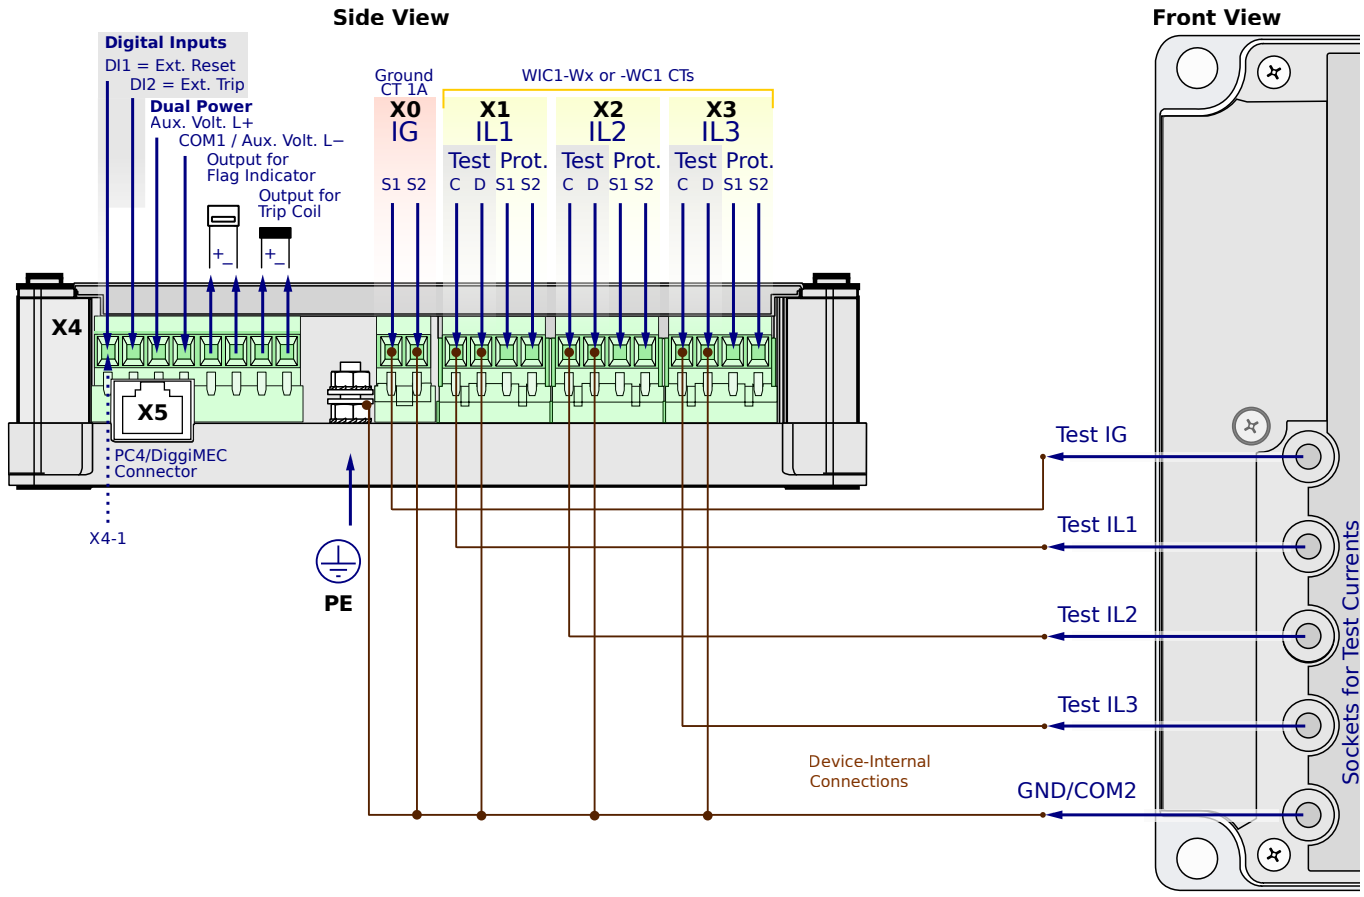


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1SB0

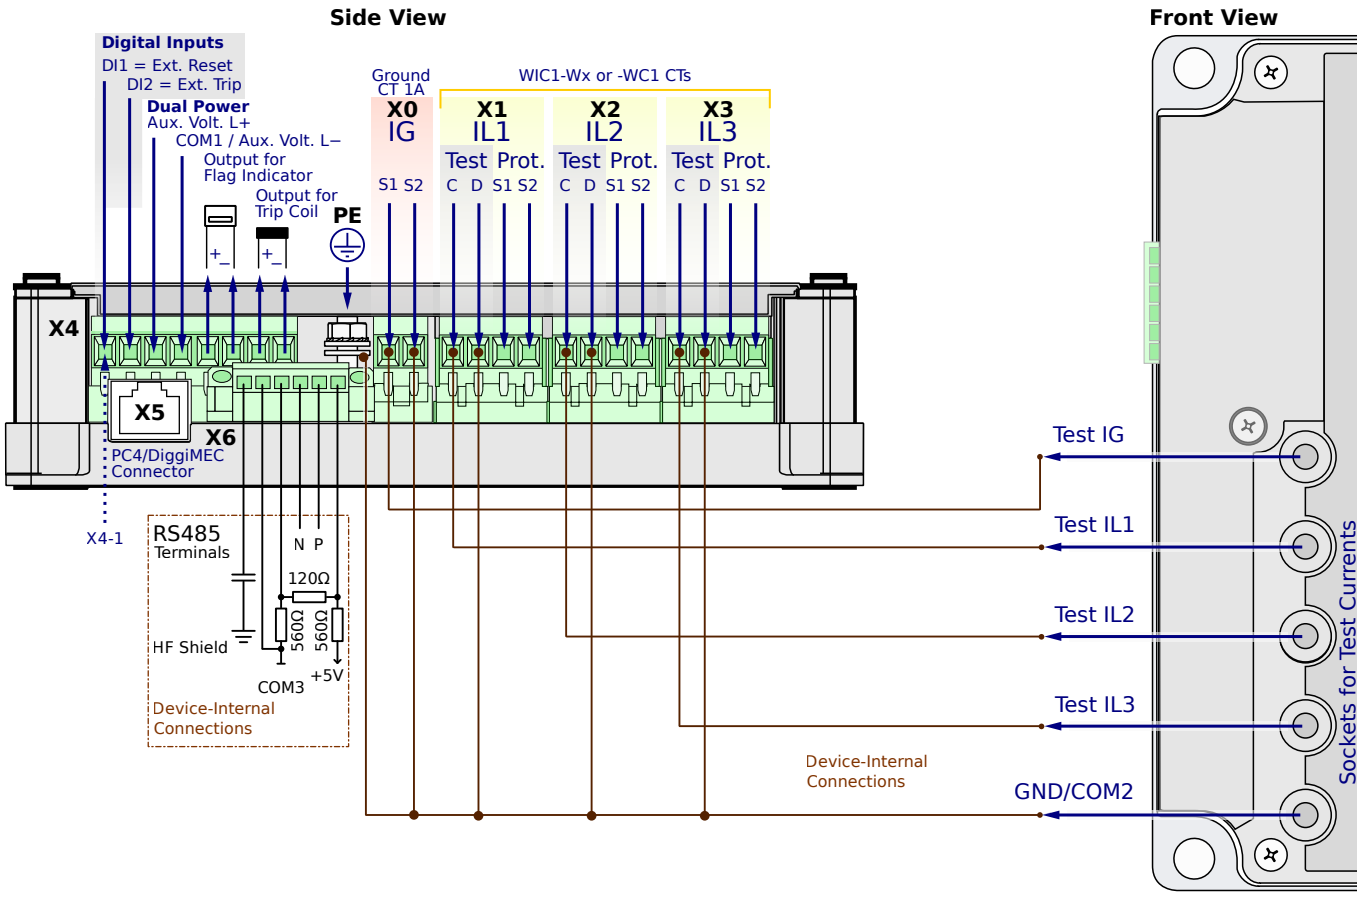


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1SBH

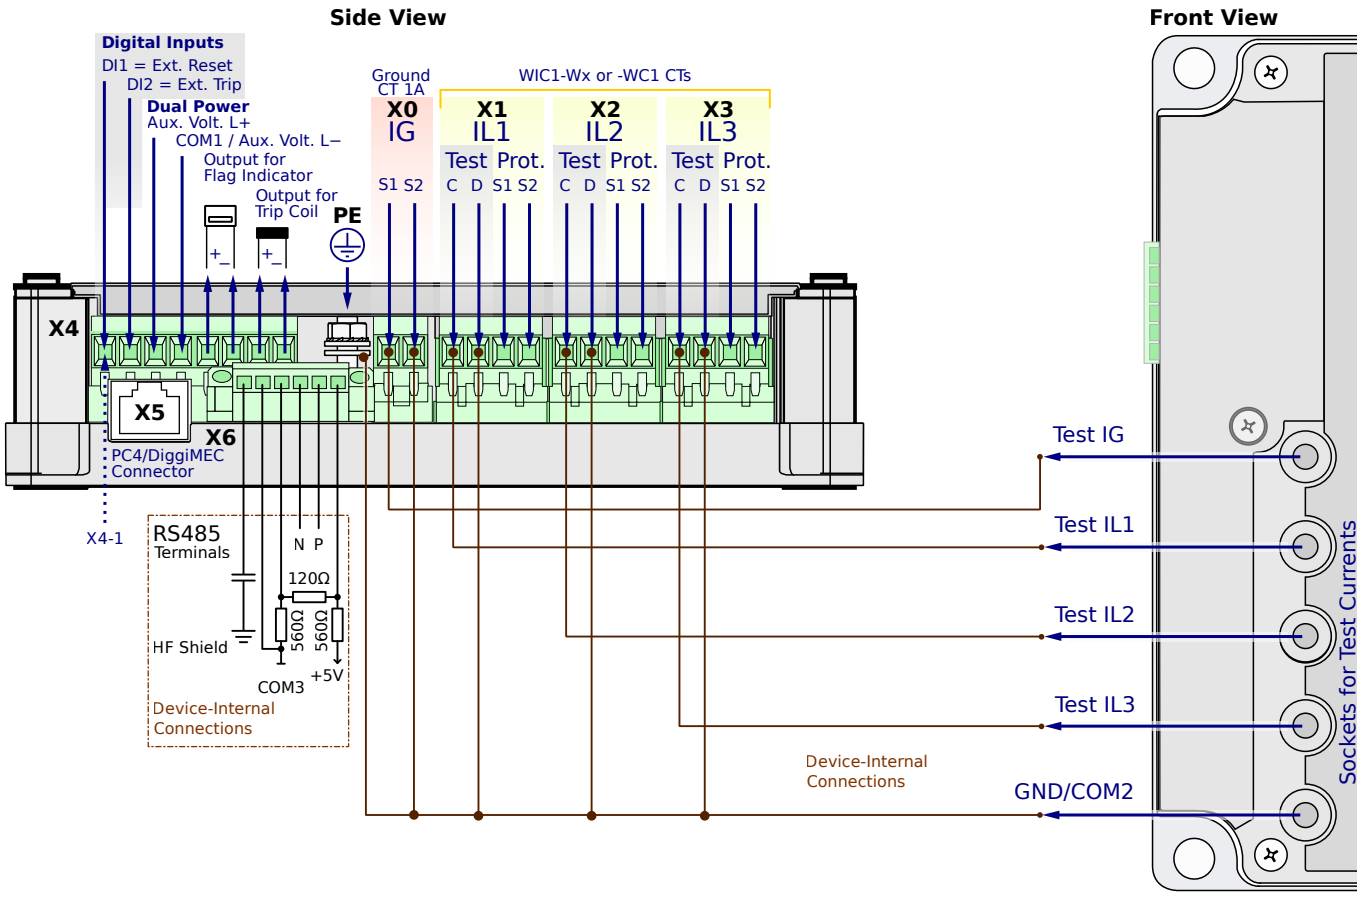


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1SC0

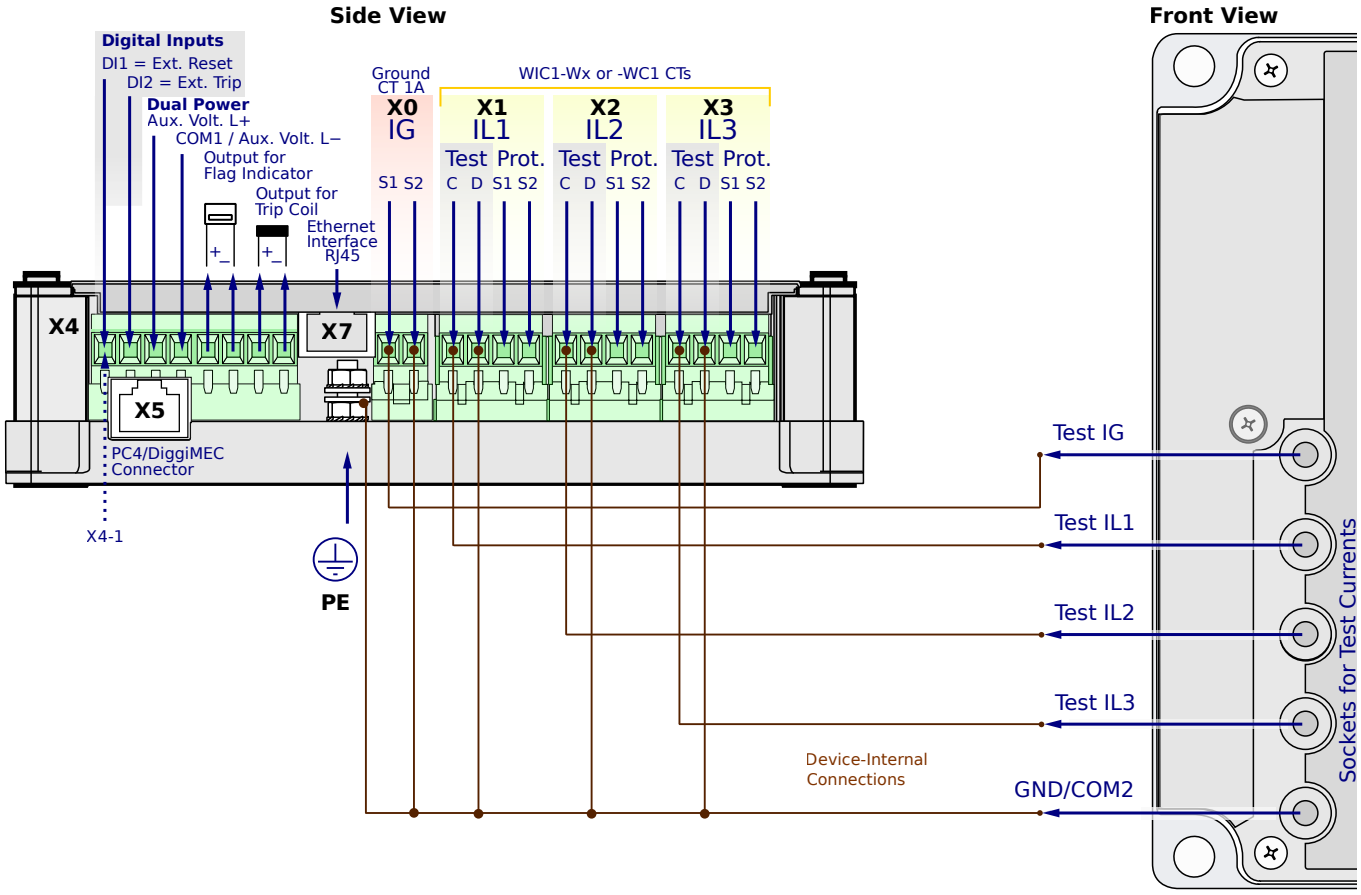


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1SCH

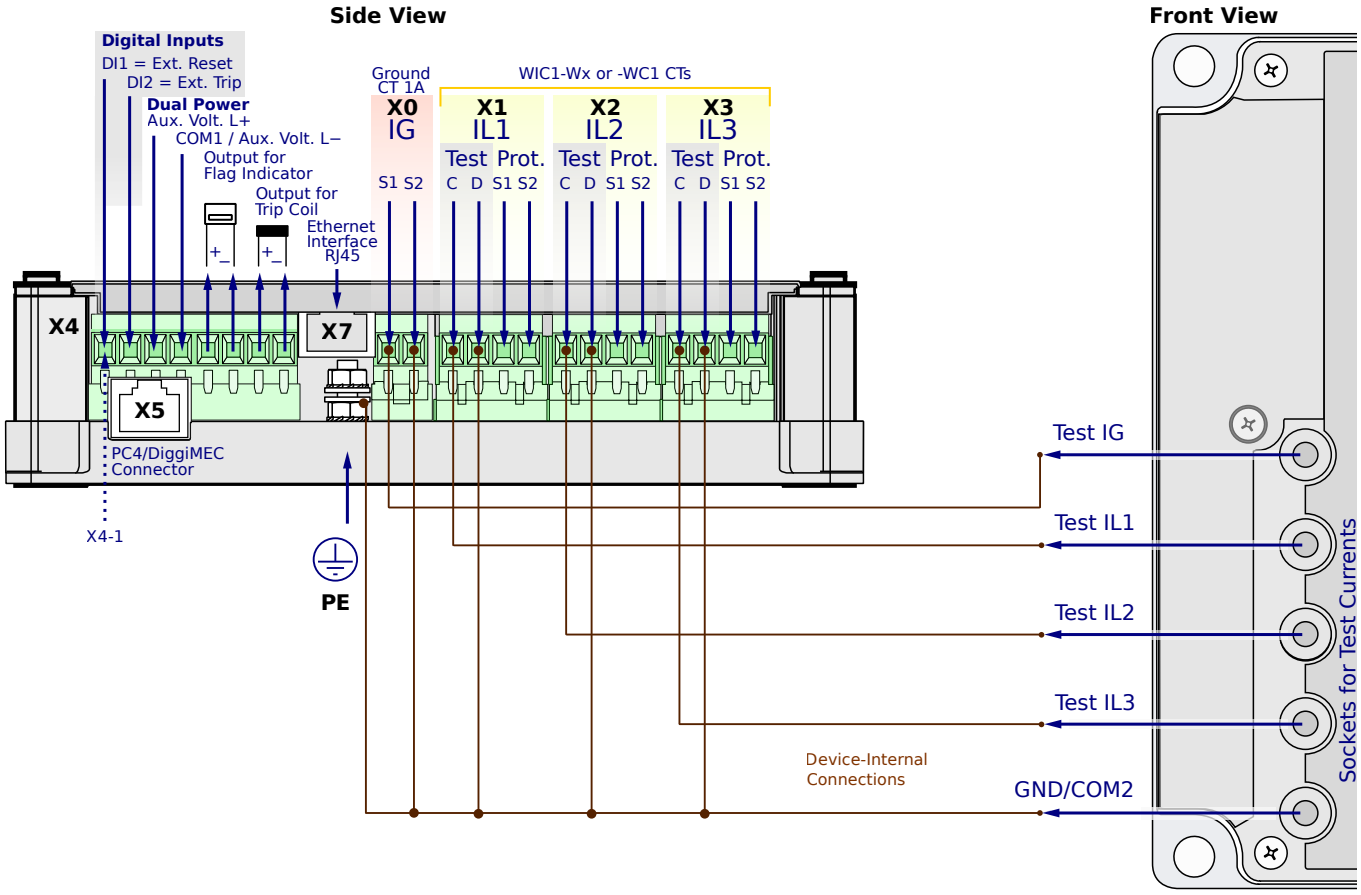


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1SL0

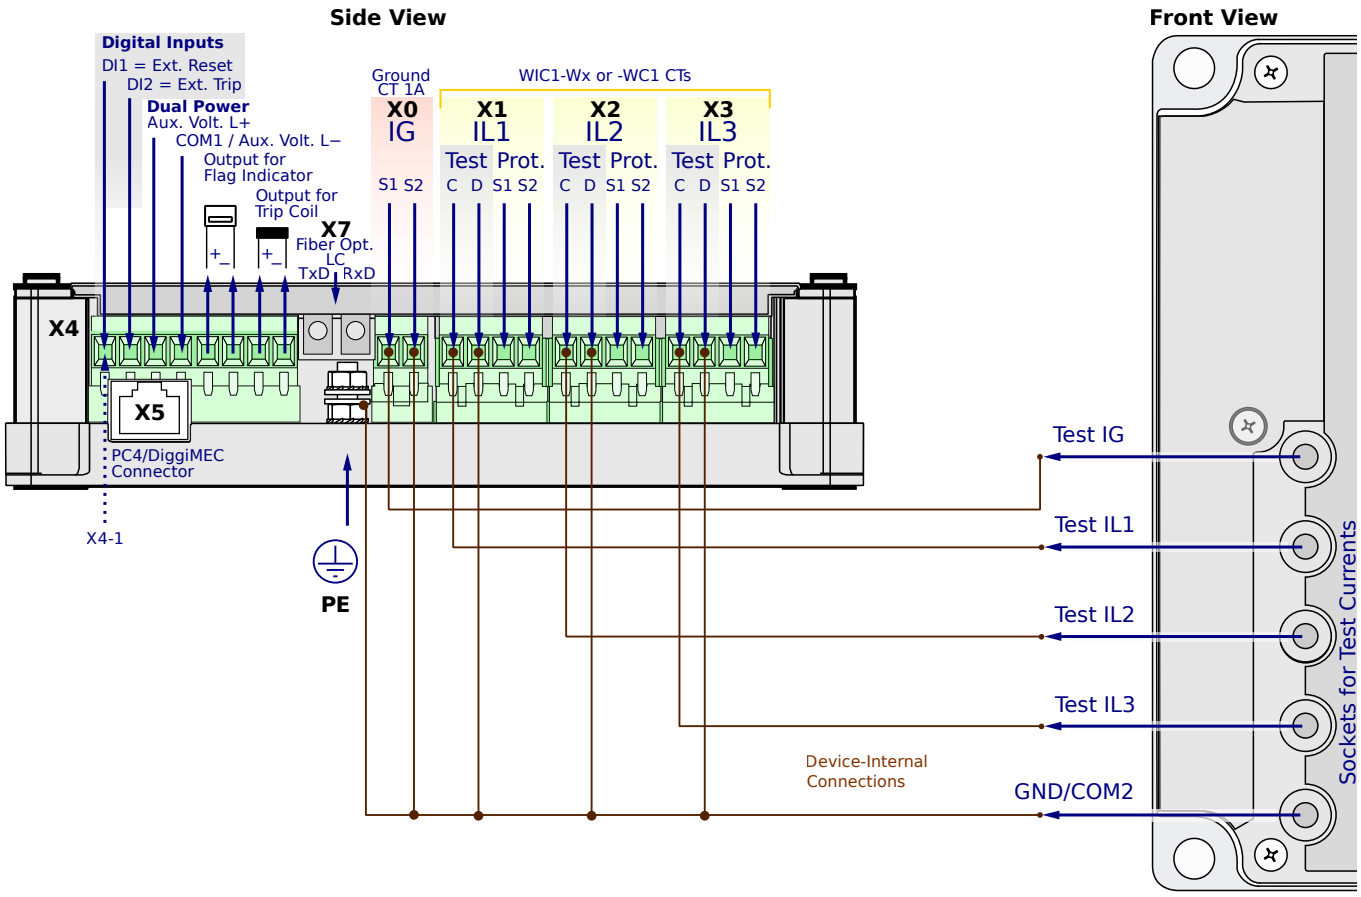


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1SLH

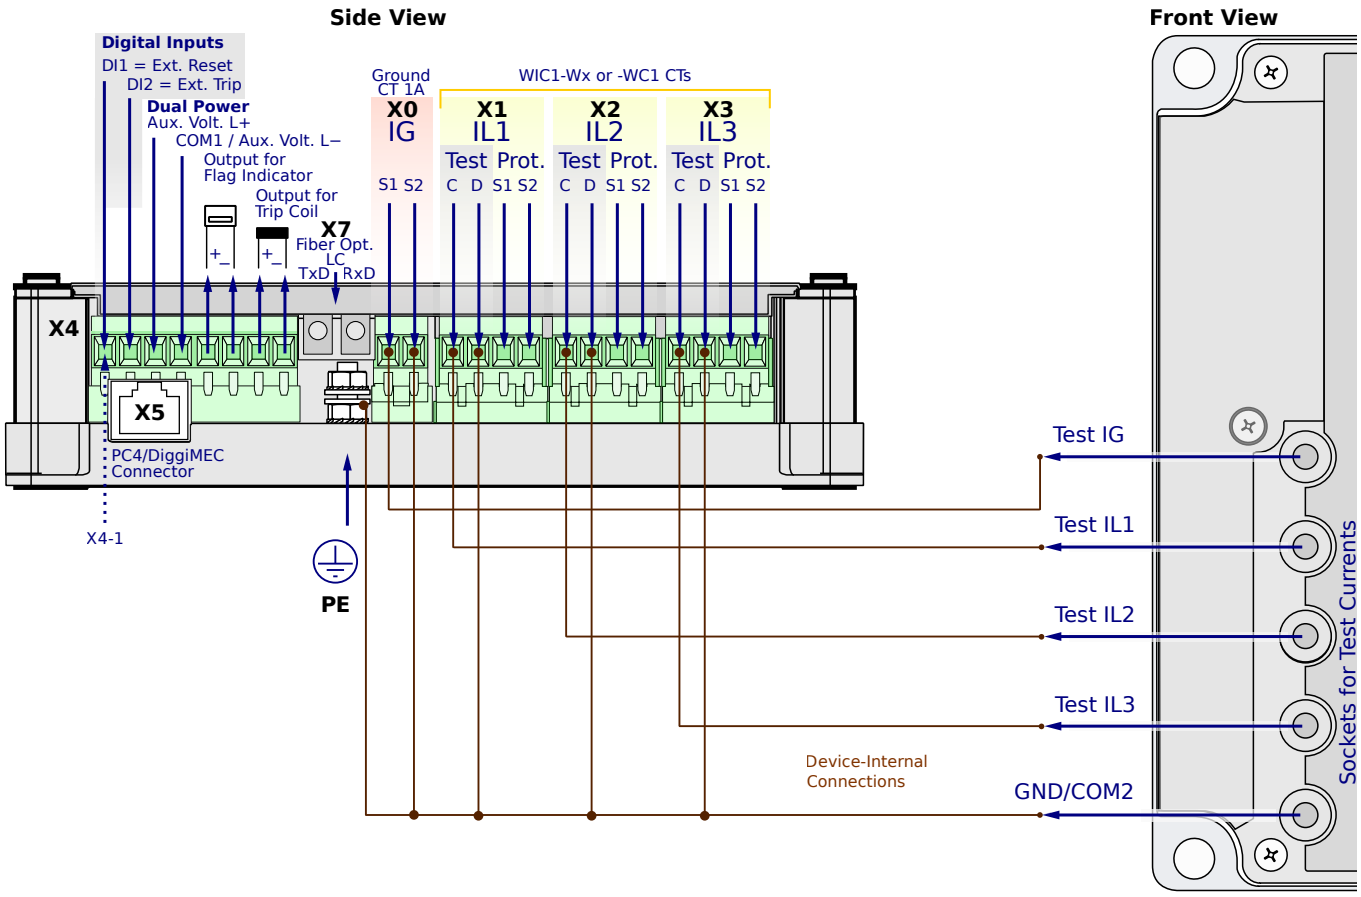


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1AA0

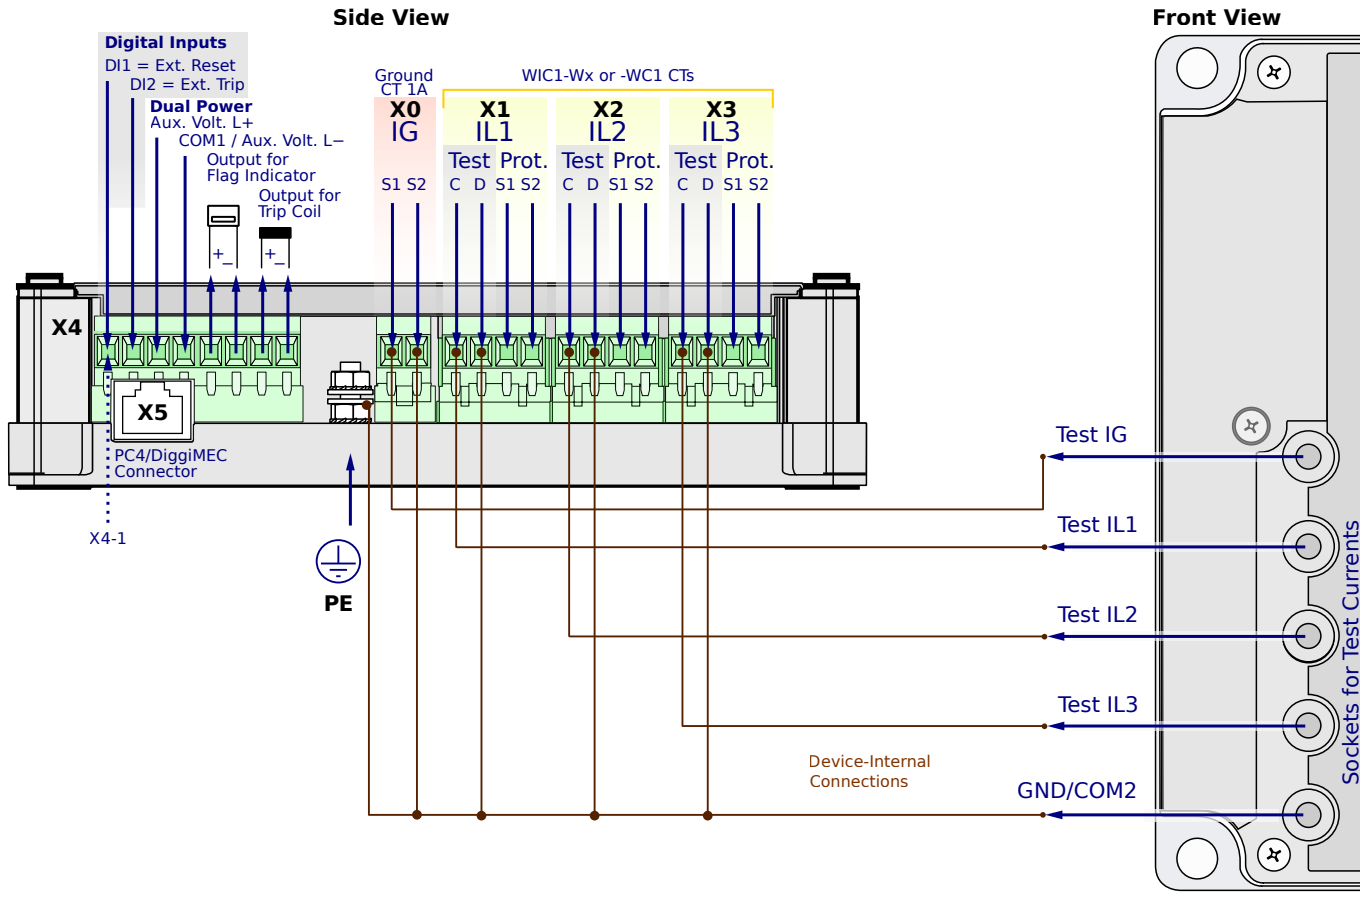


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1AAH

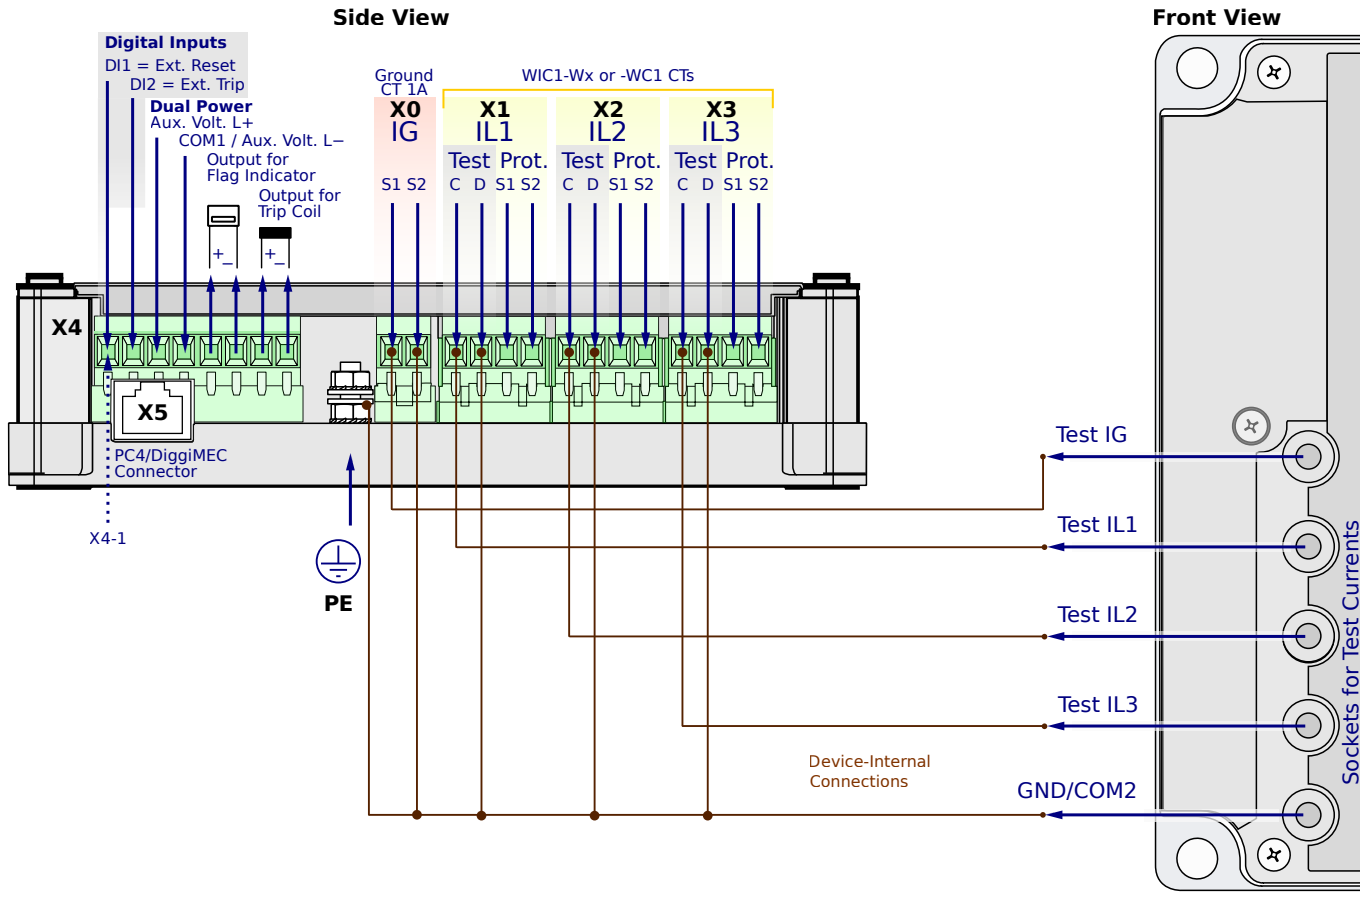


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1AB0

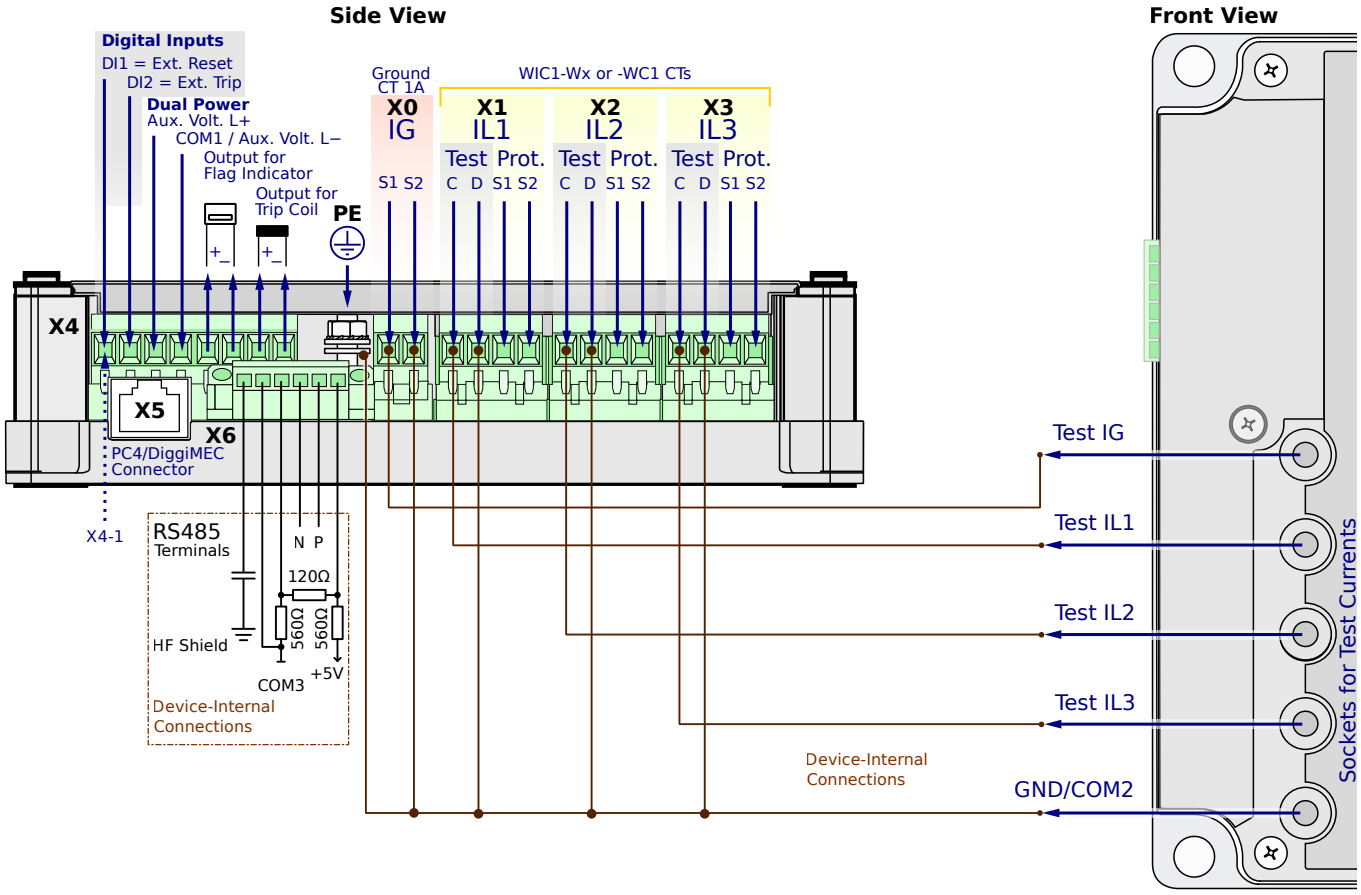


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1ABH

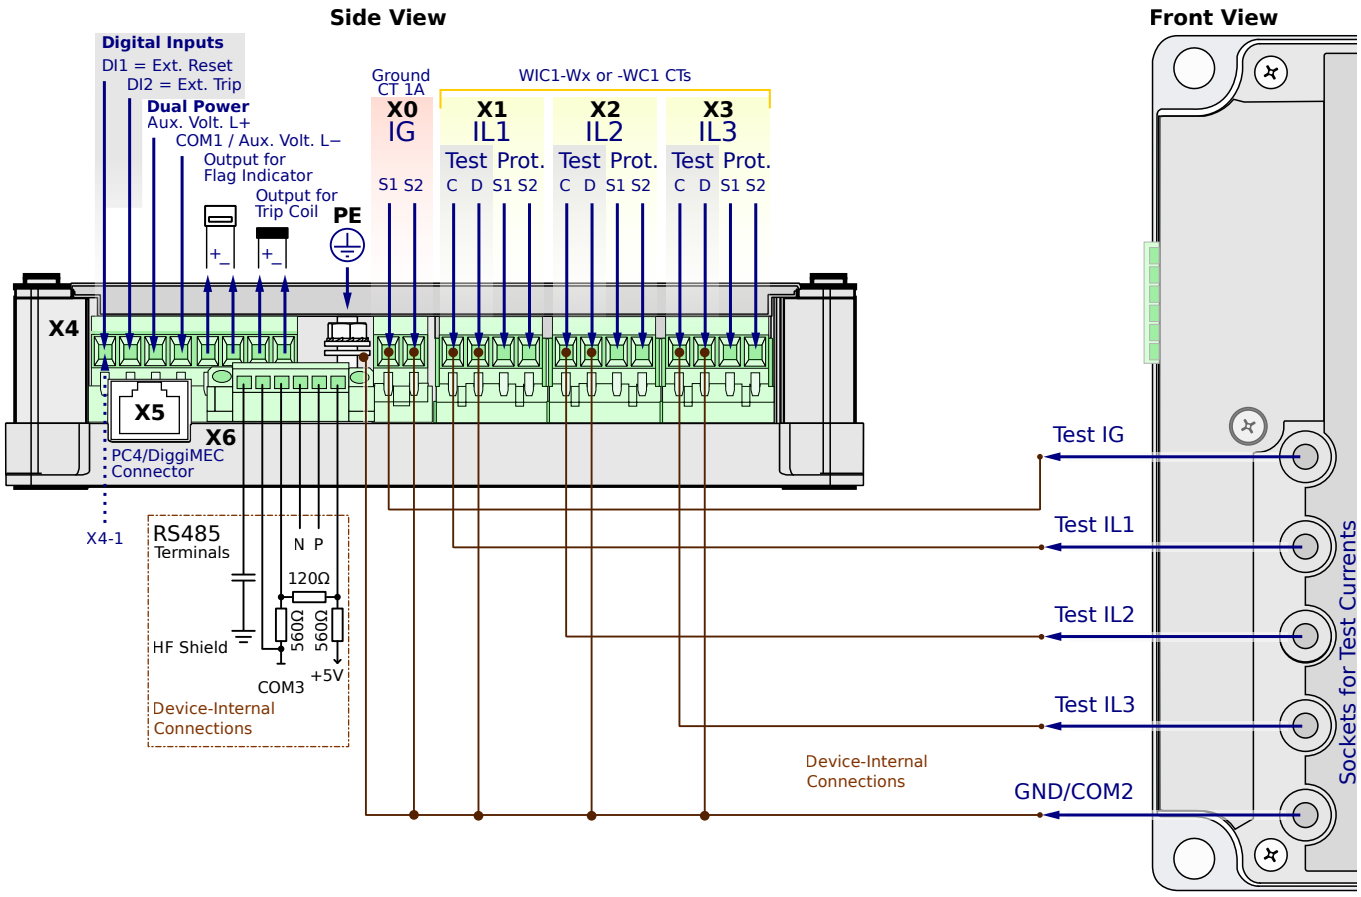


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1AC0

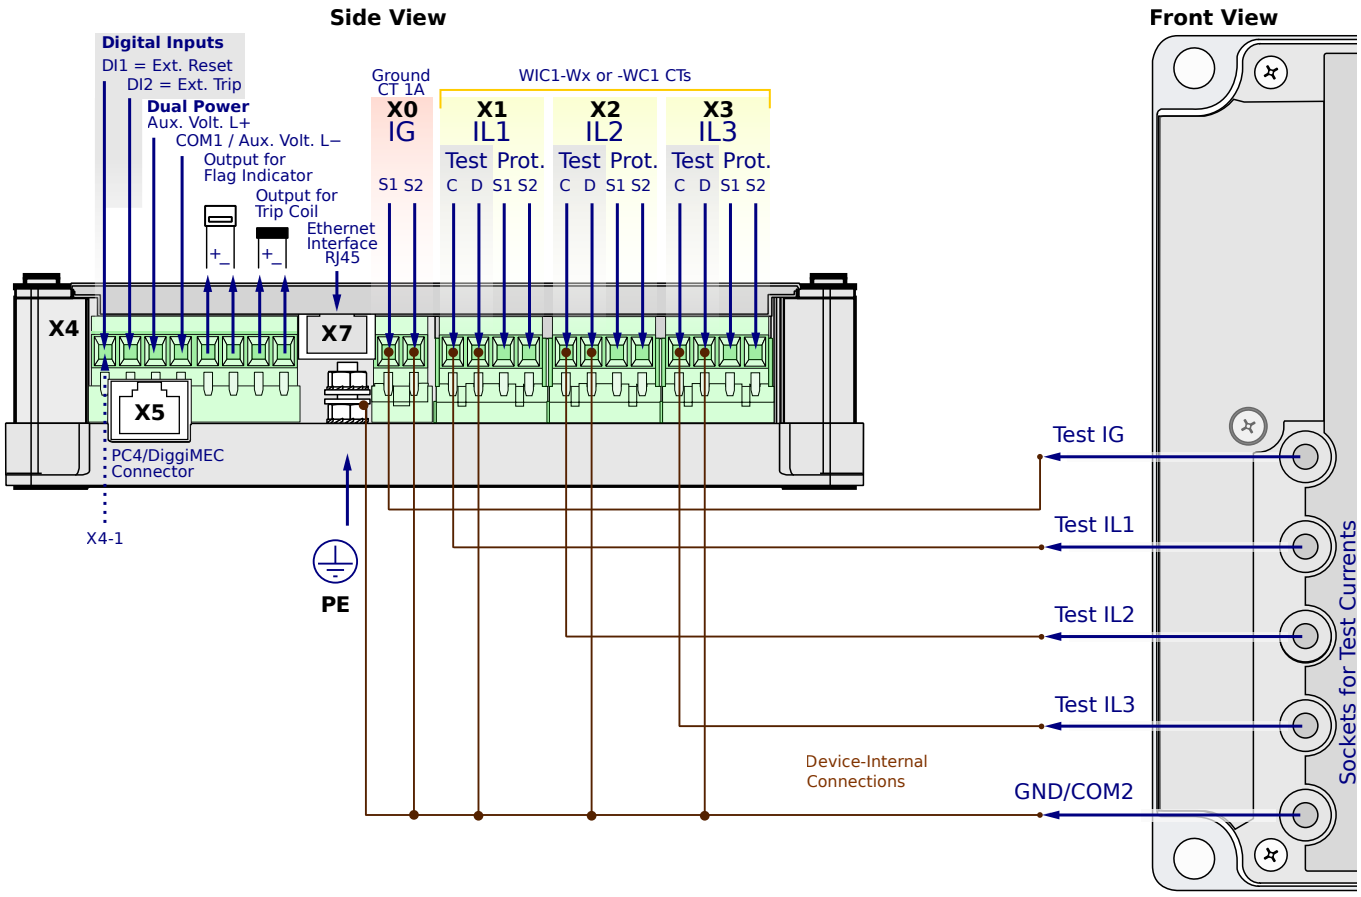


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1ACH

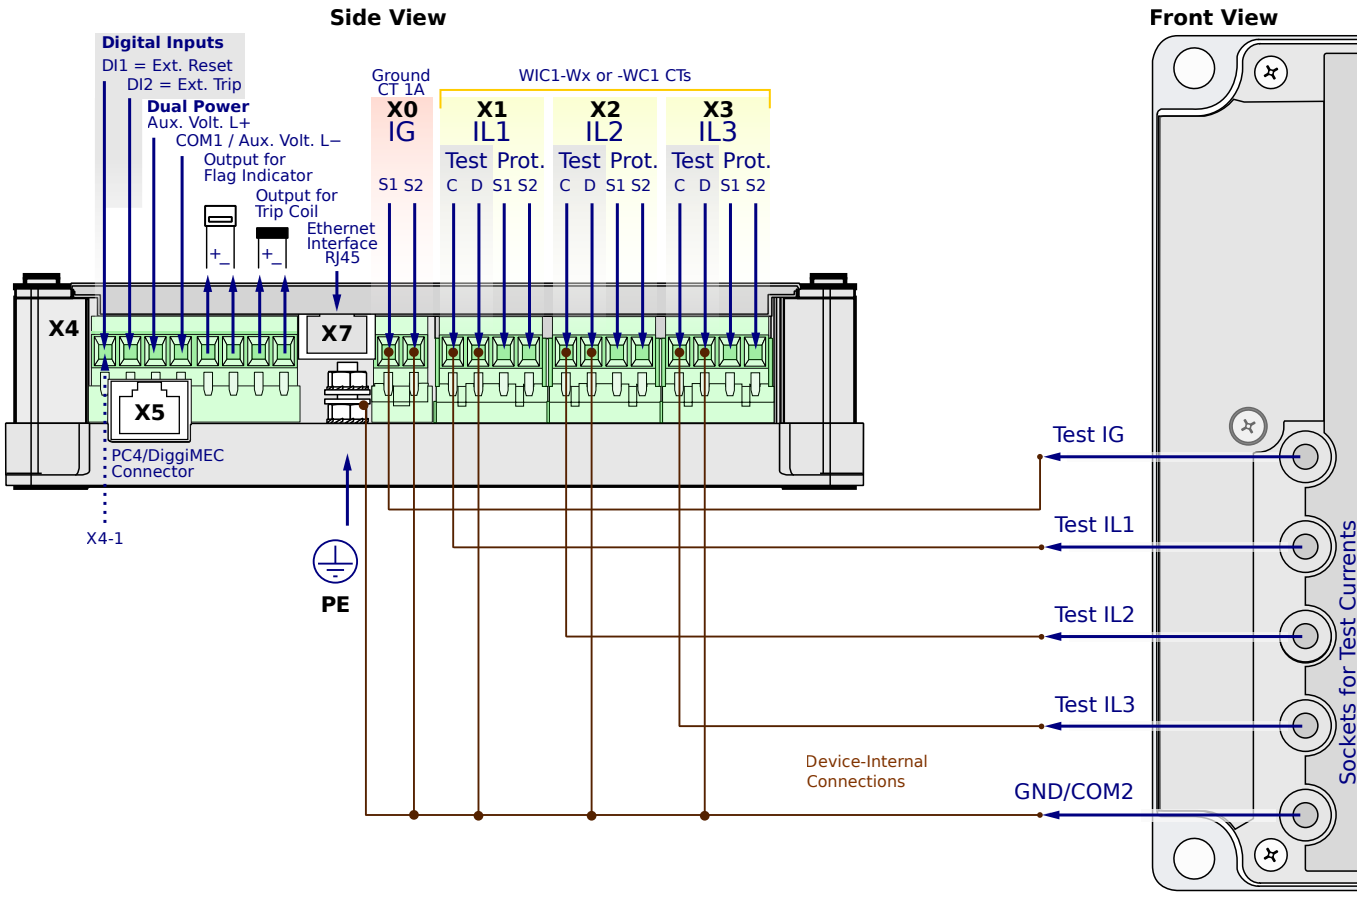


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1AL0

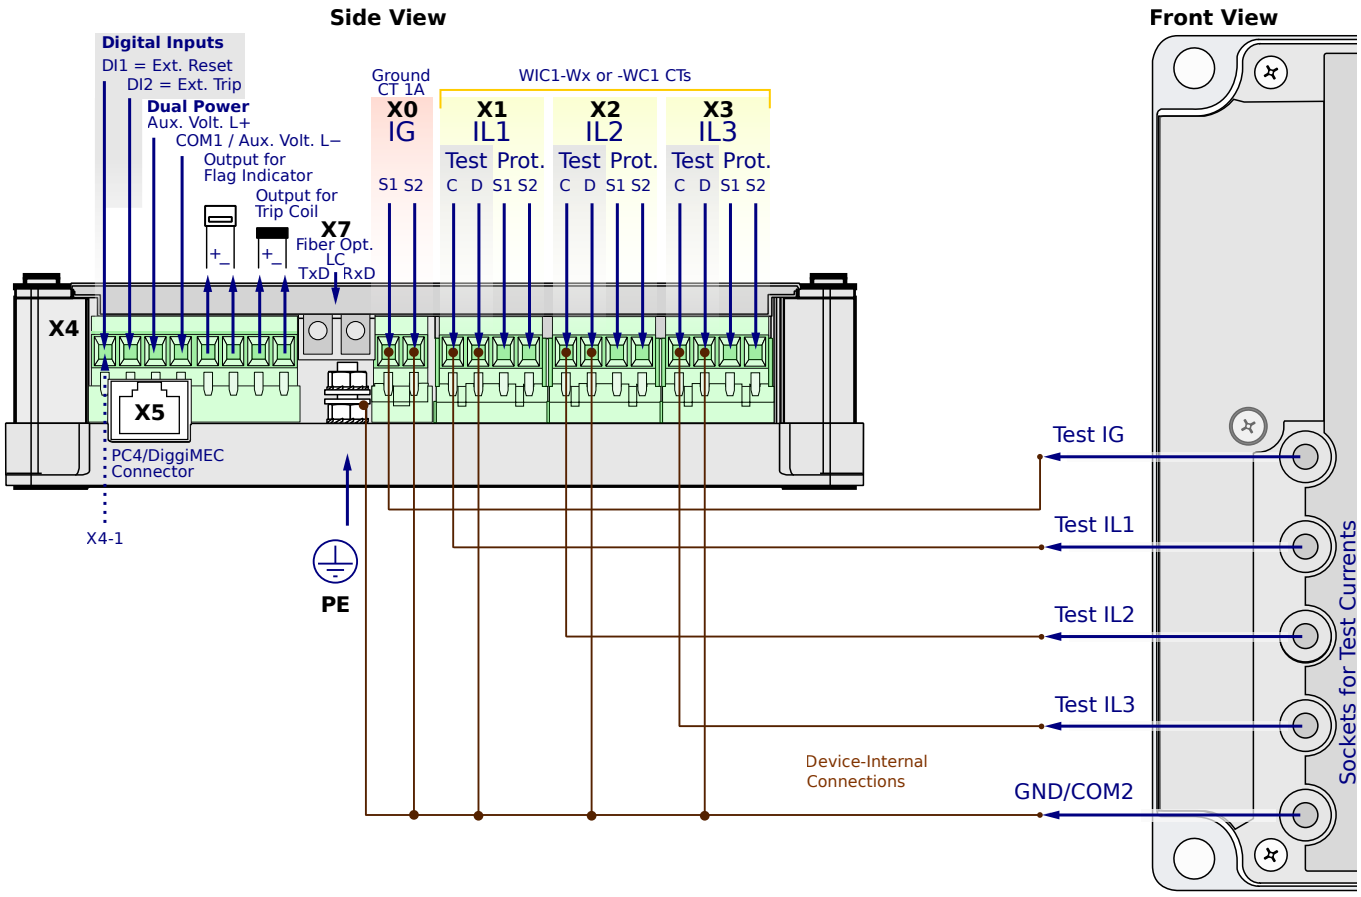


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1ALH

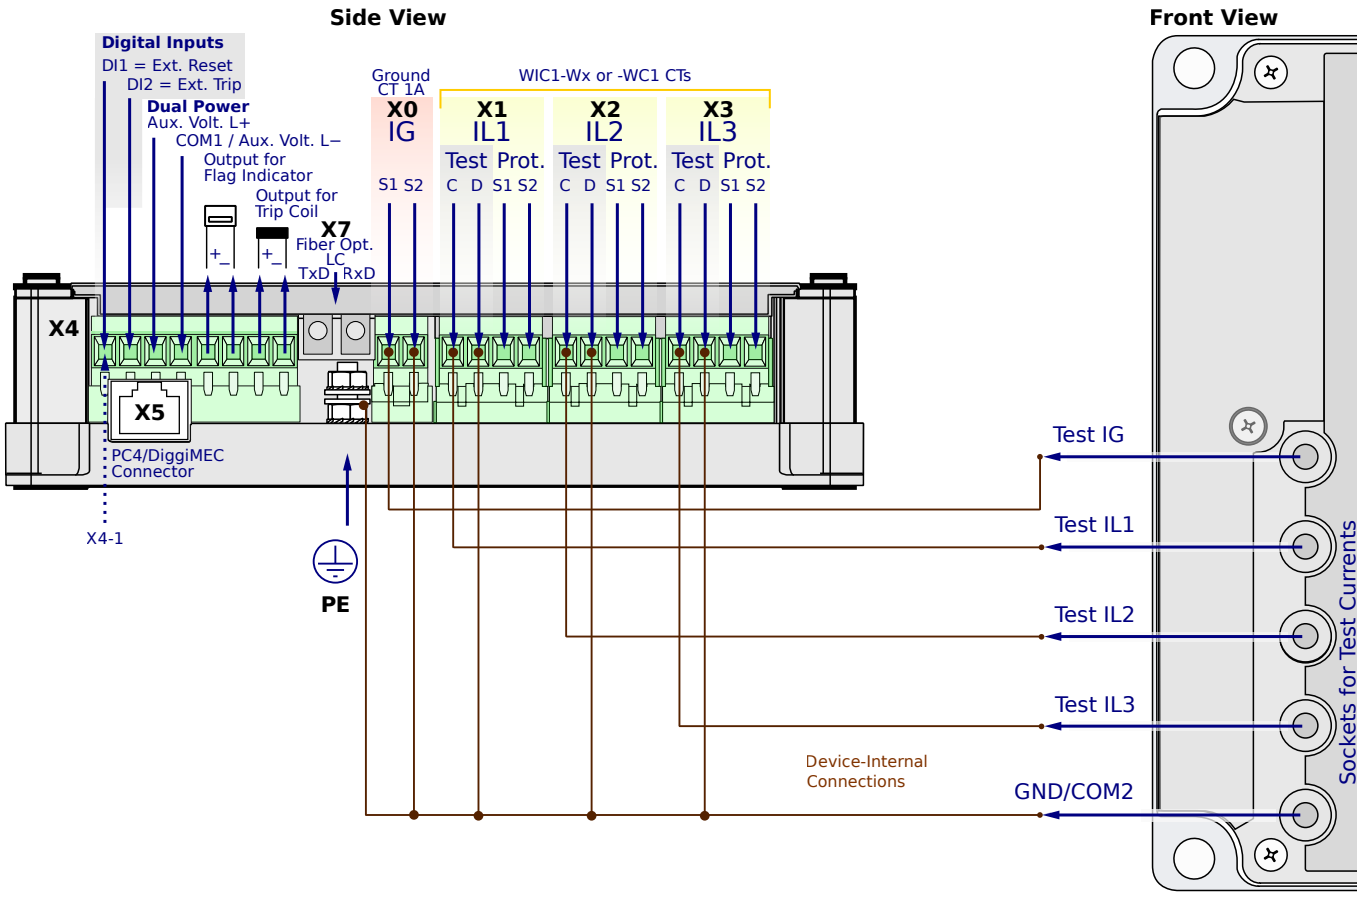


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1PA0

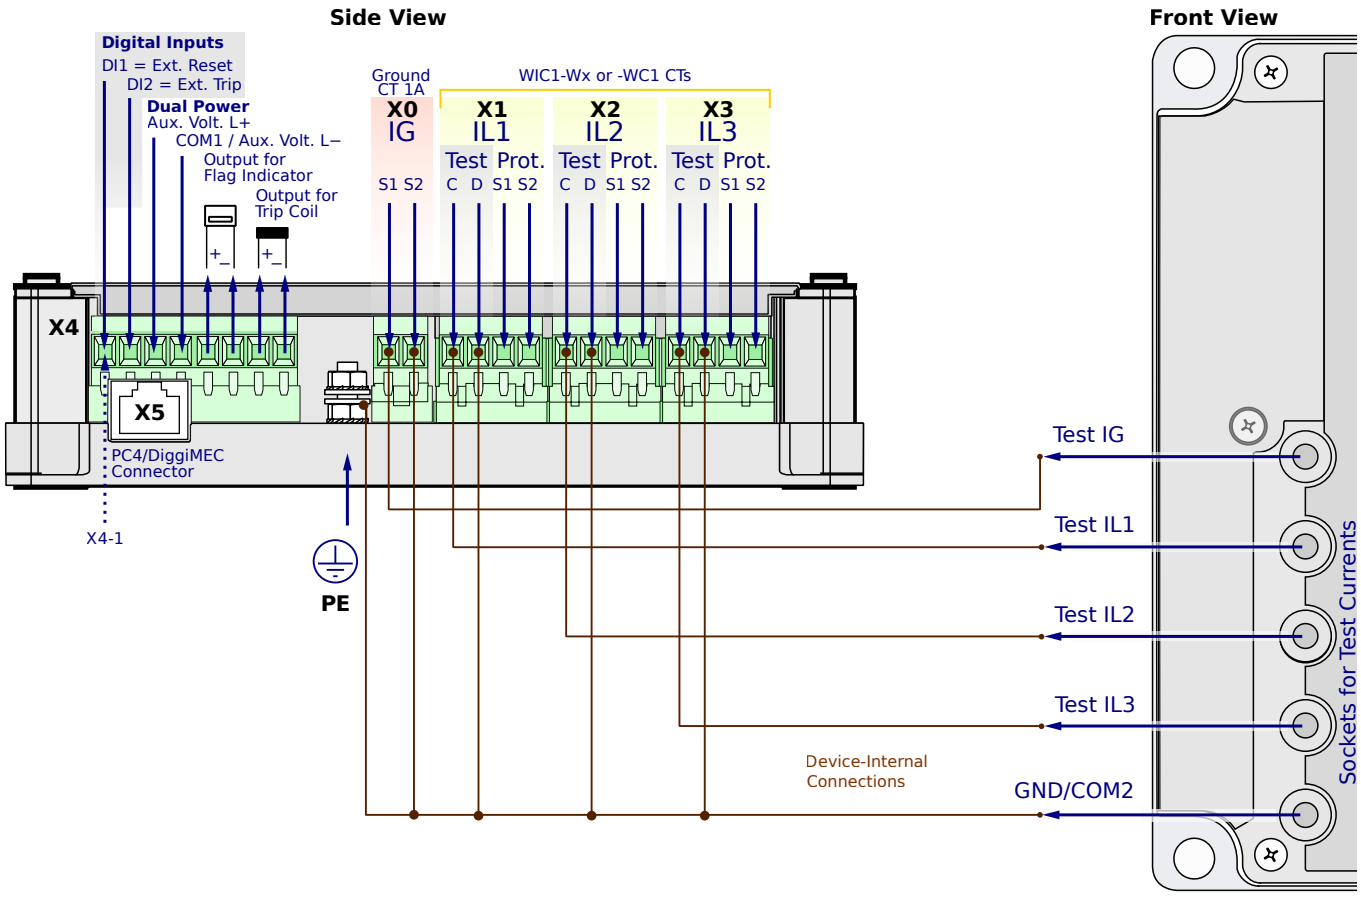


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1PAH

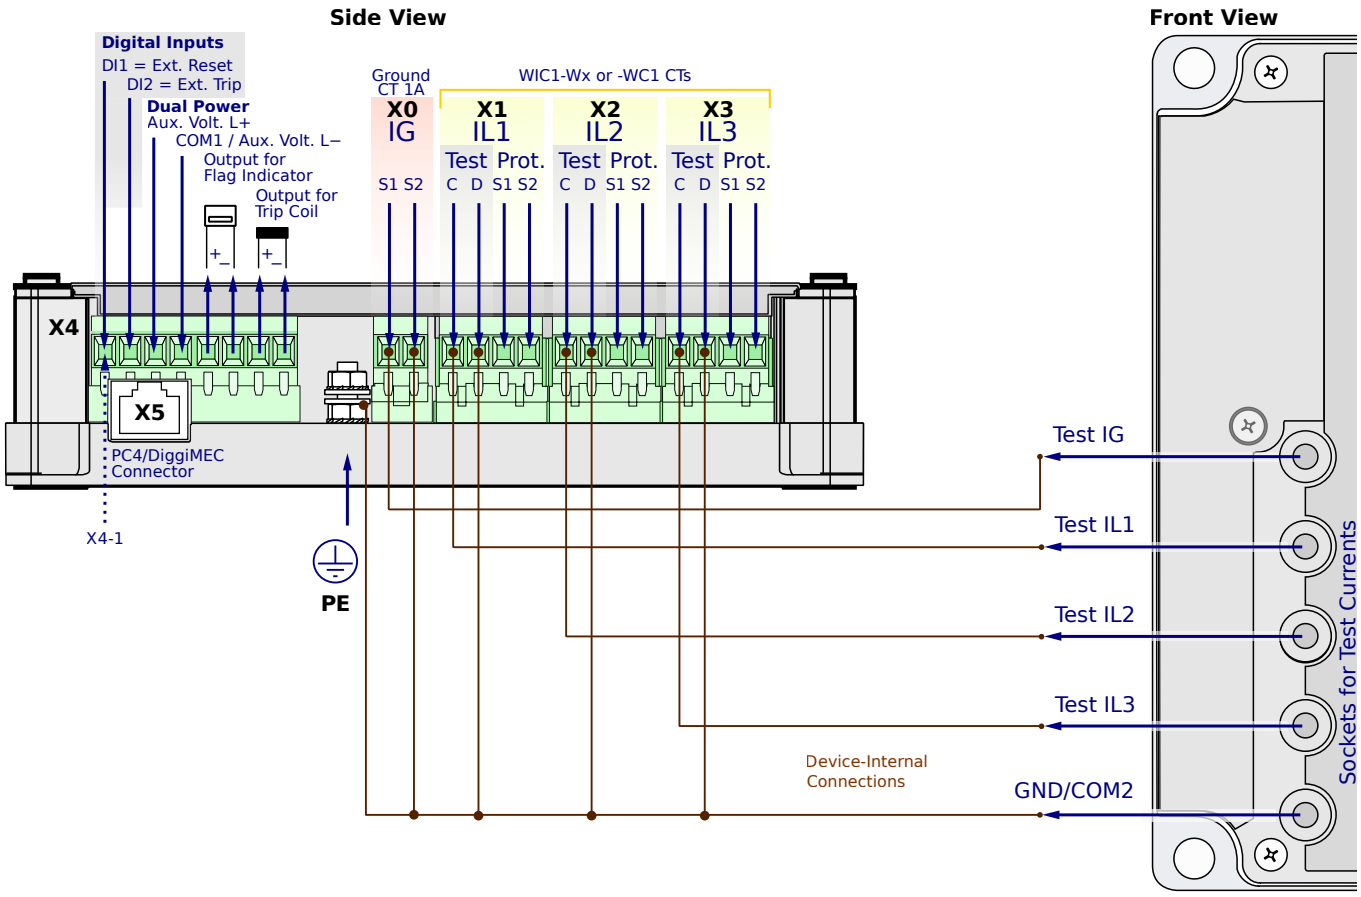


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG1PB0

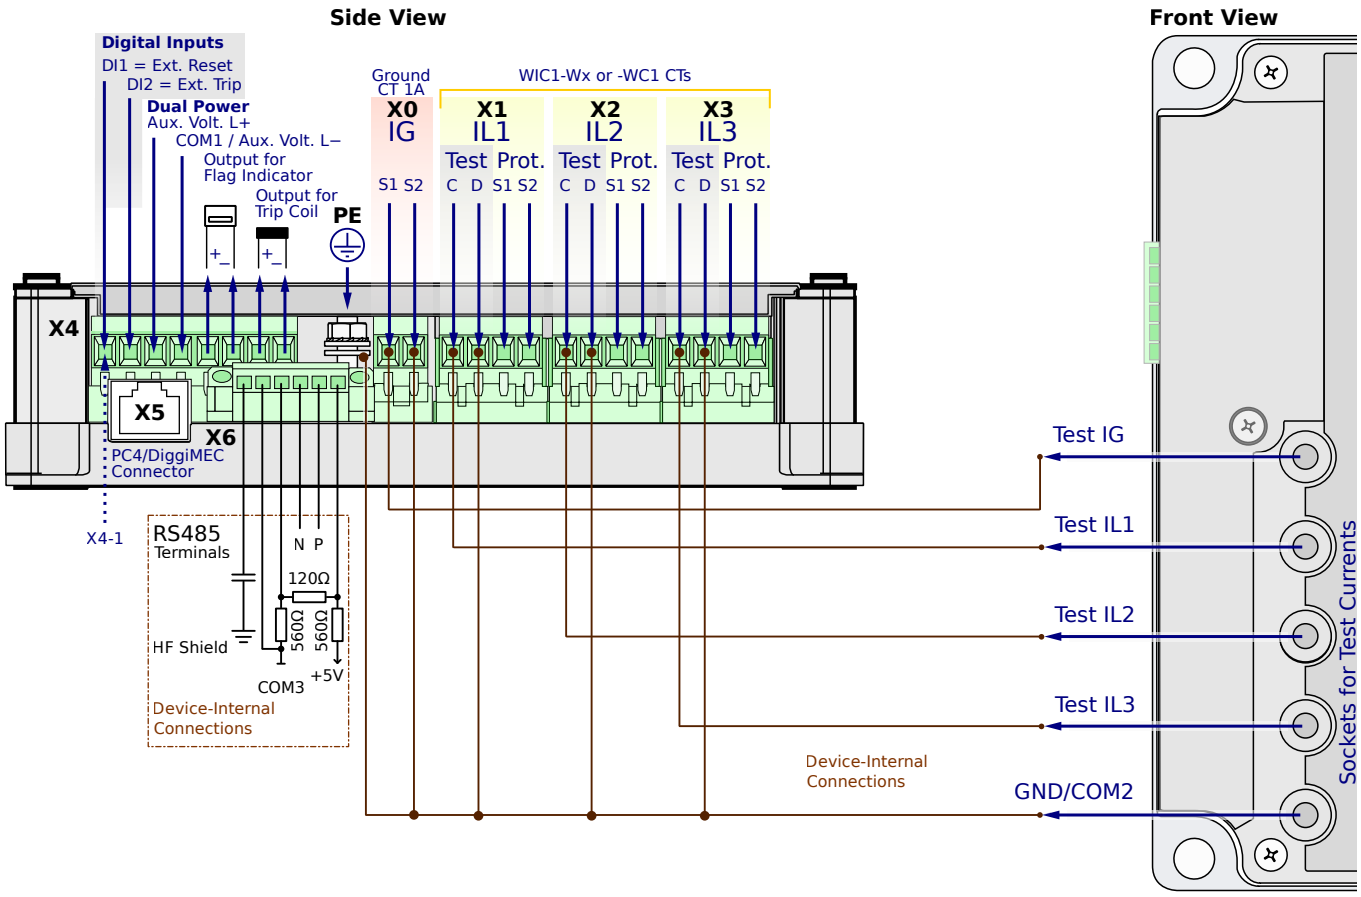


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1PBH

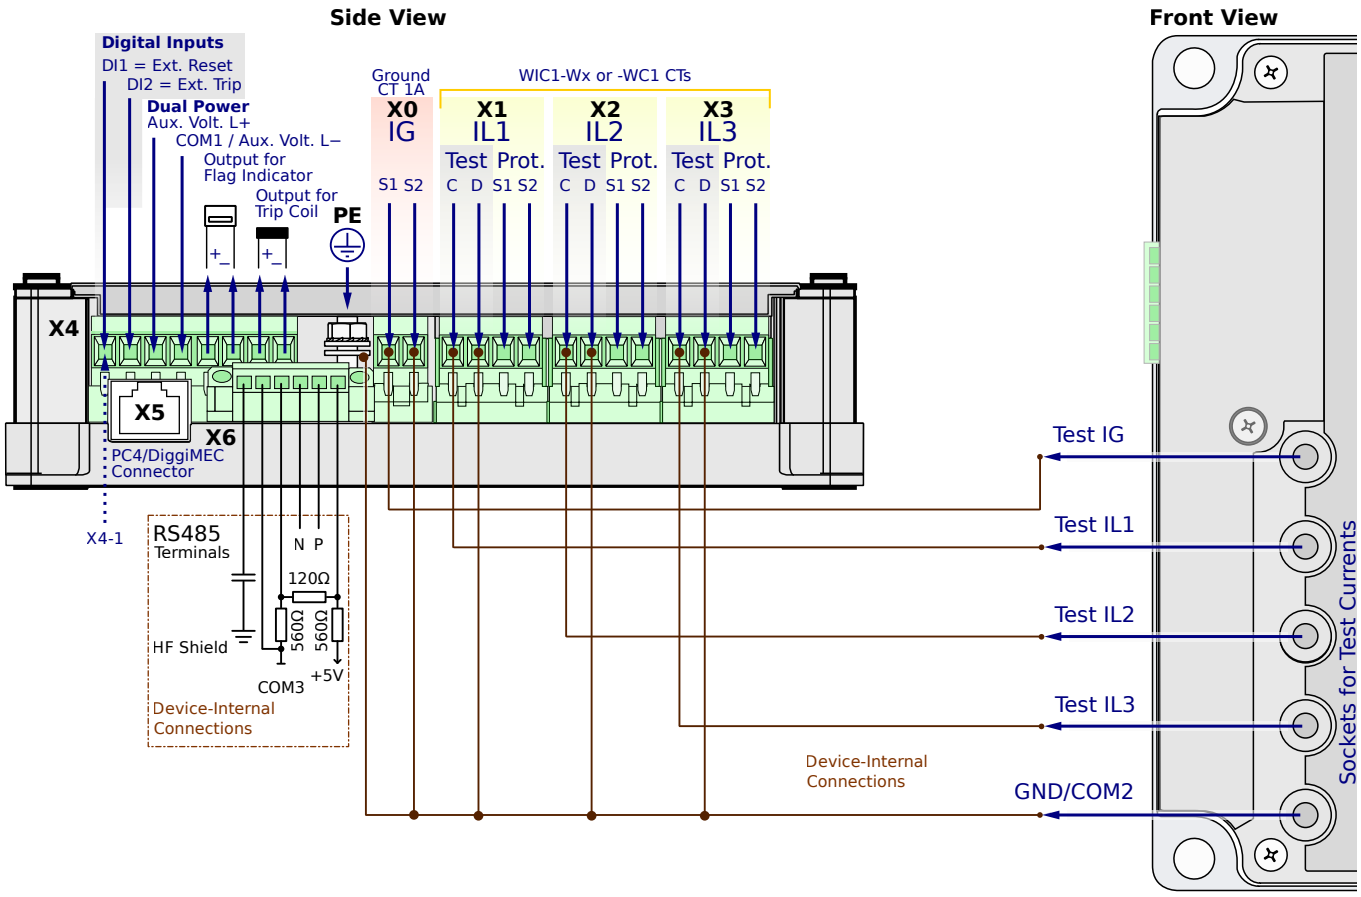


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG1PC0

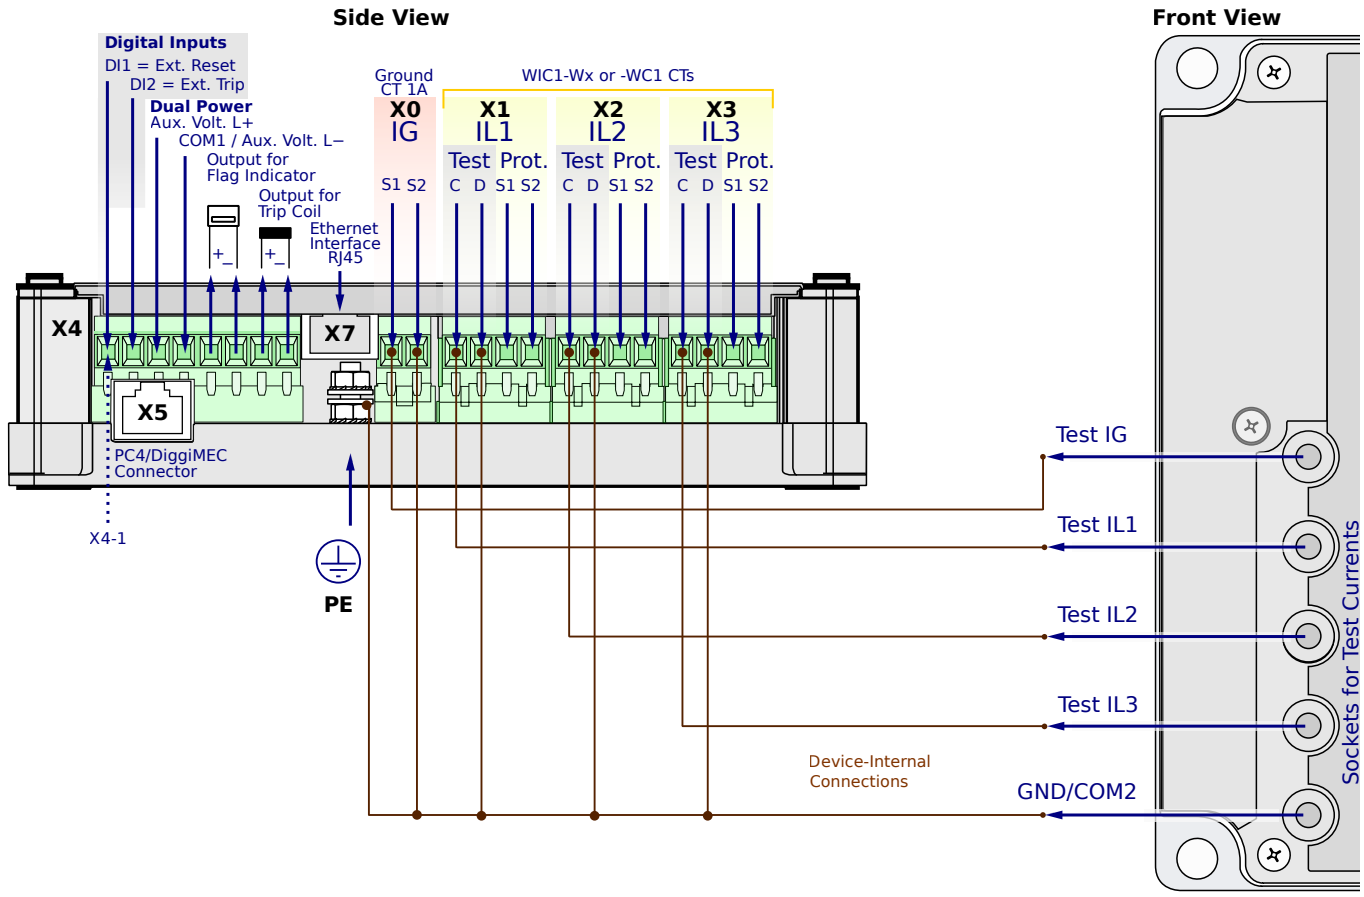


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1PCH

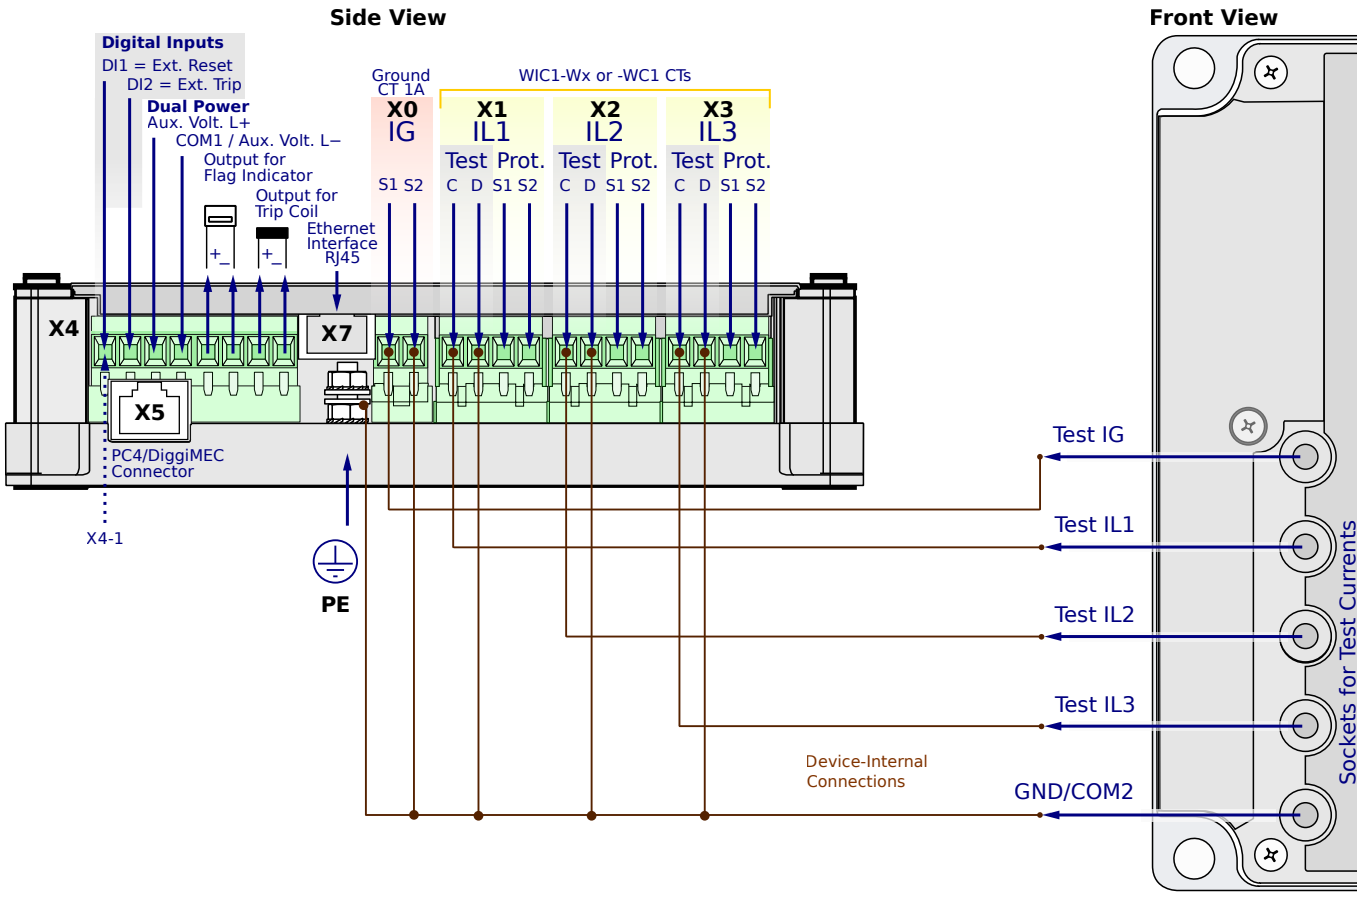


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG1PL0

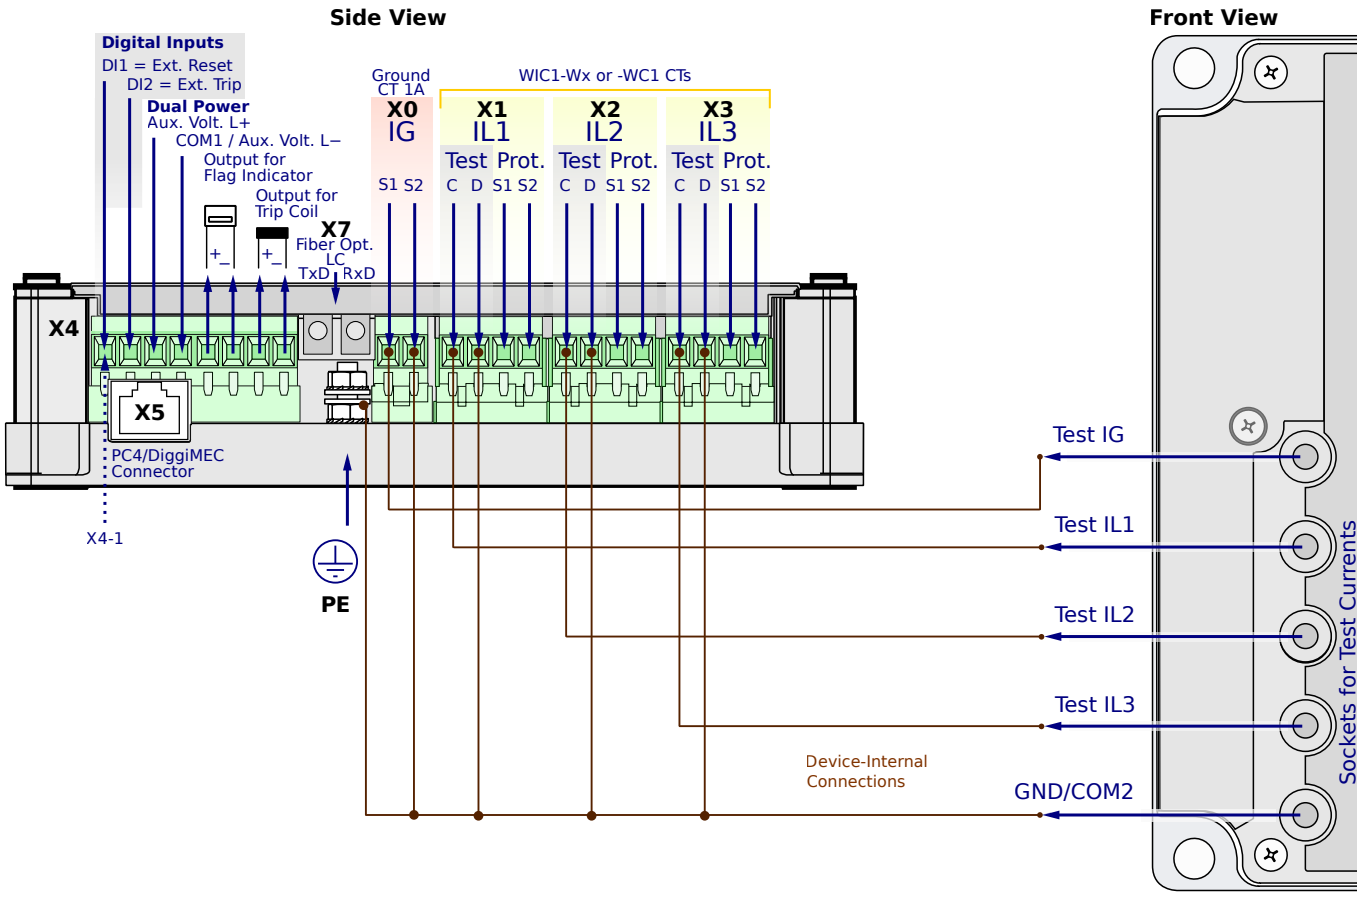


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG1PLH

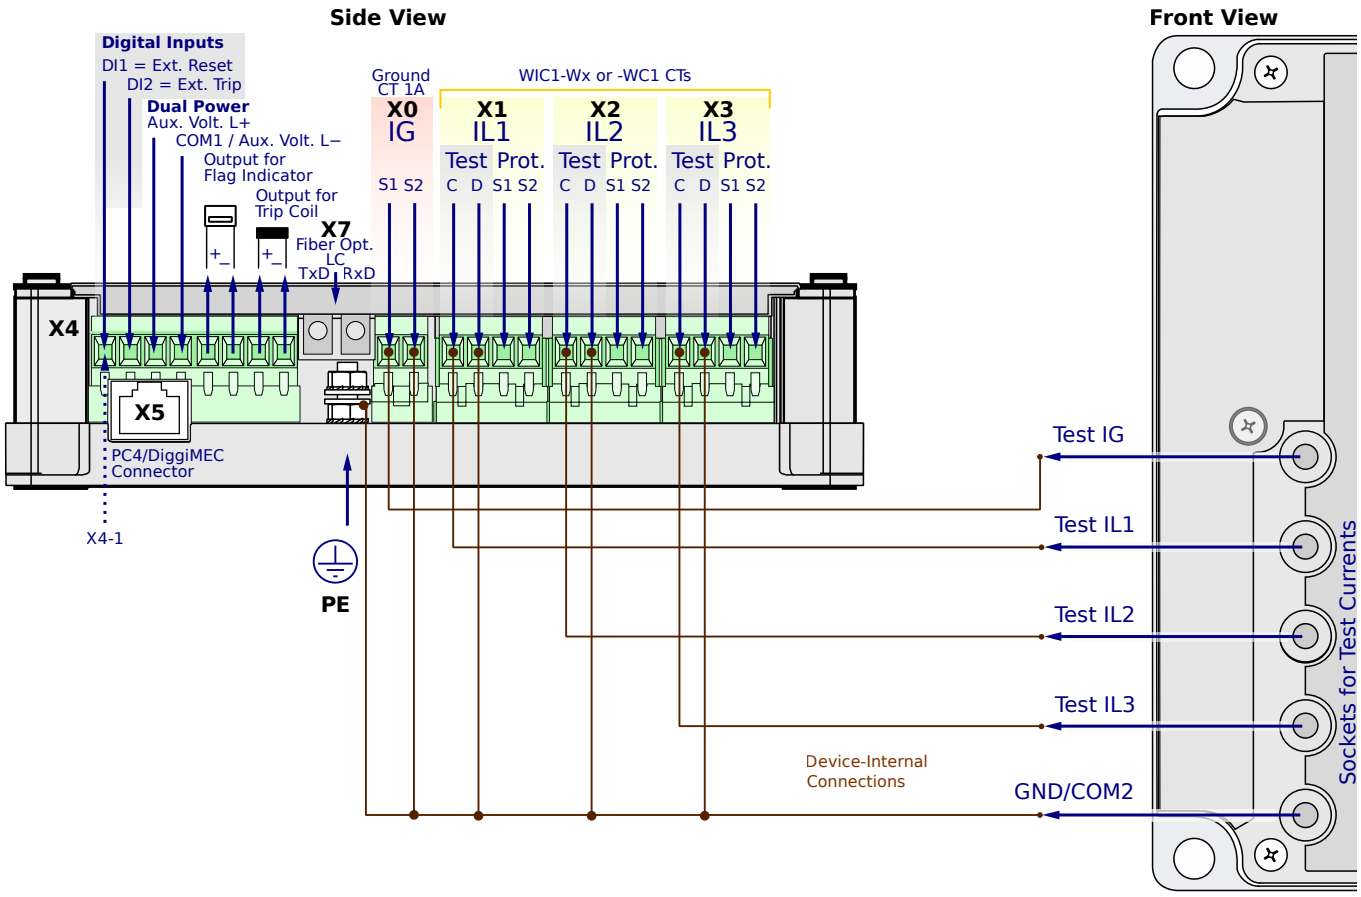


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2SA0

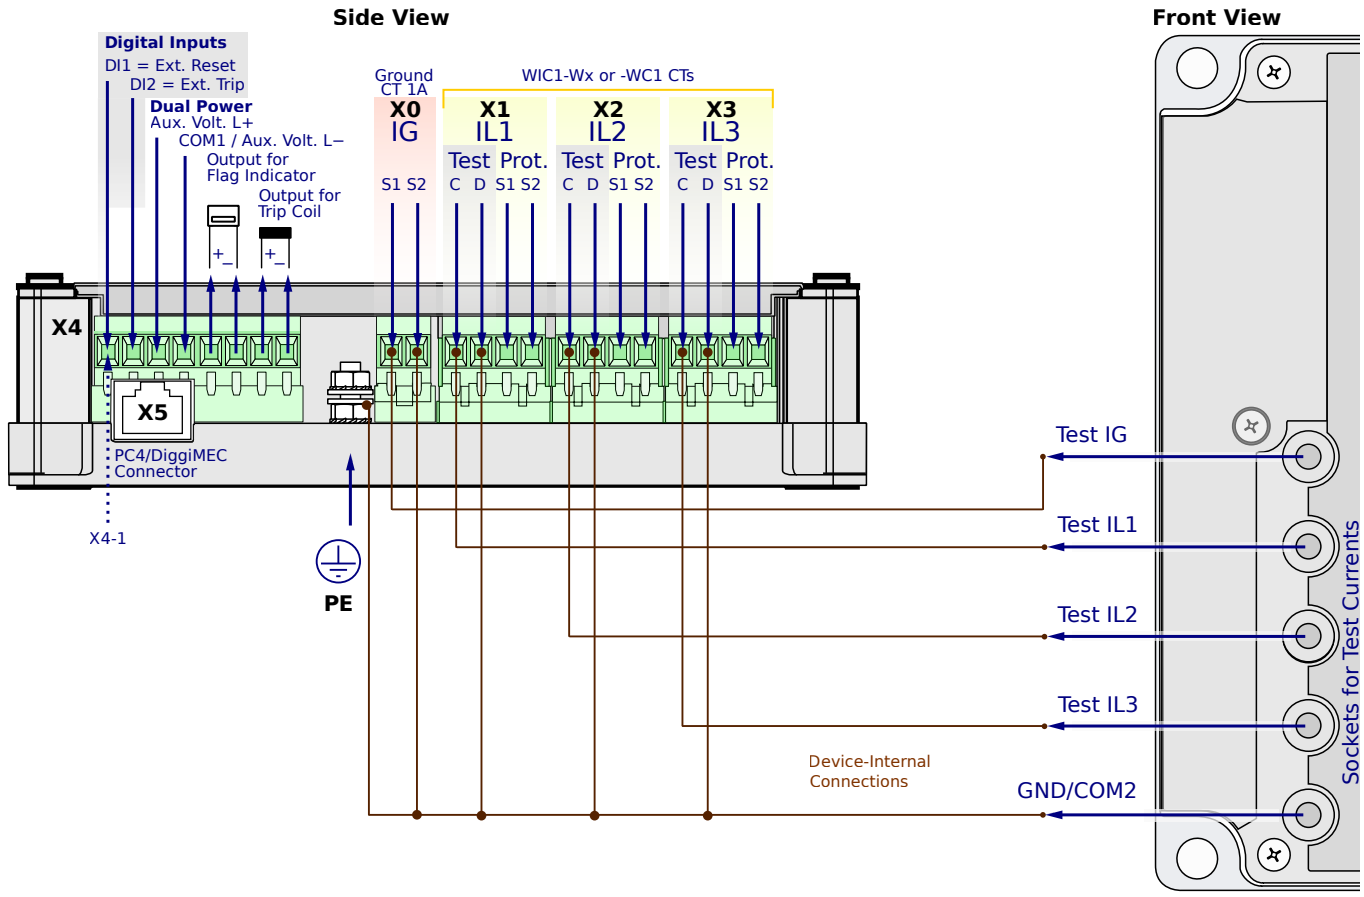


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2SAH

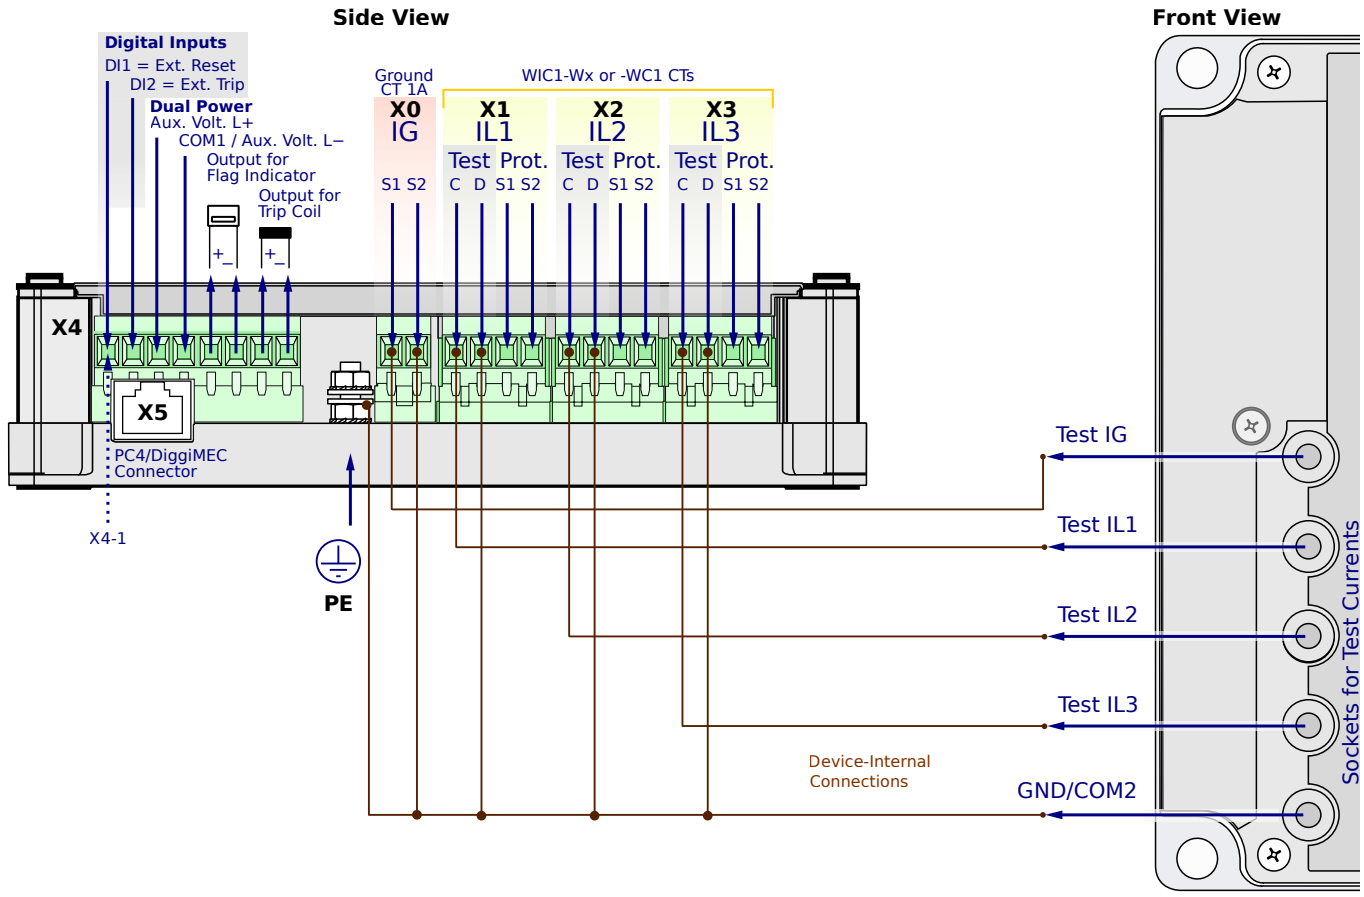


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2SB0

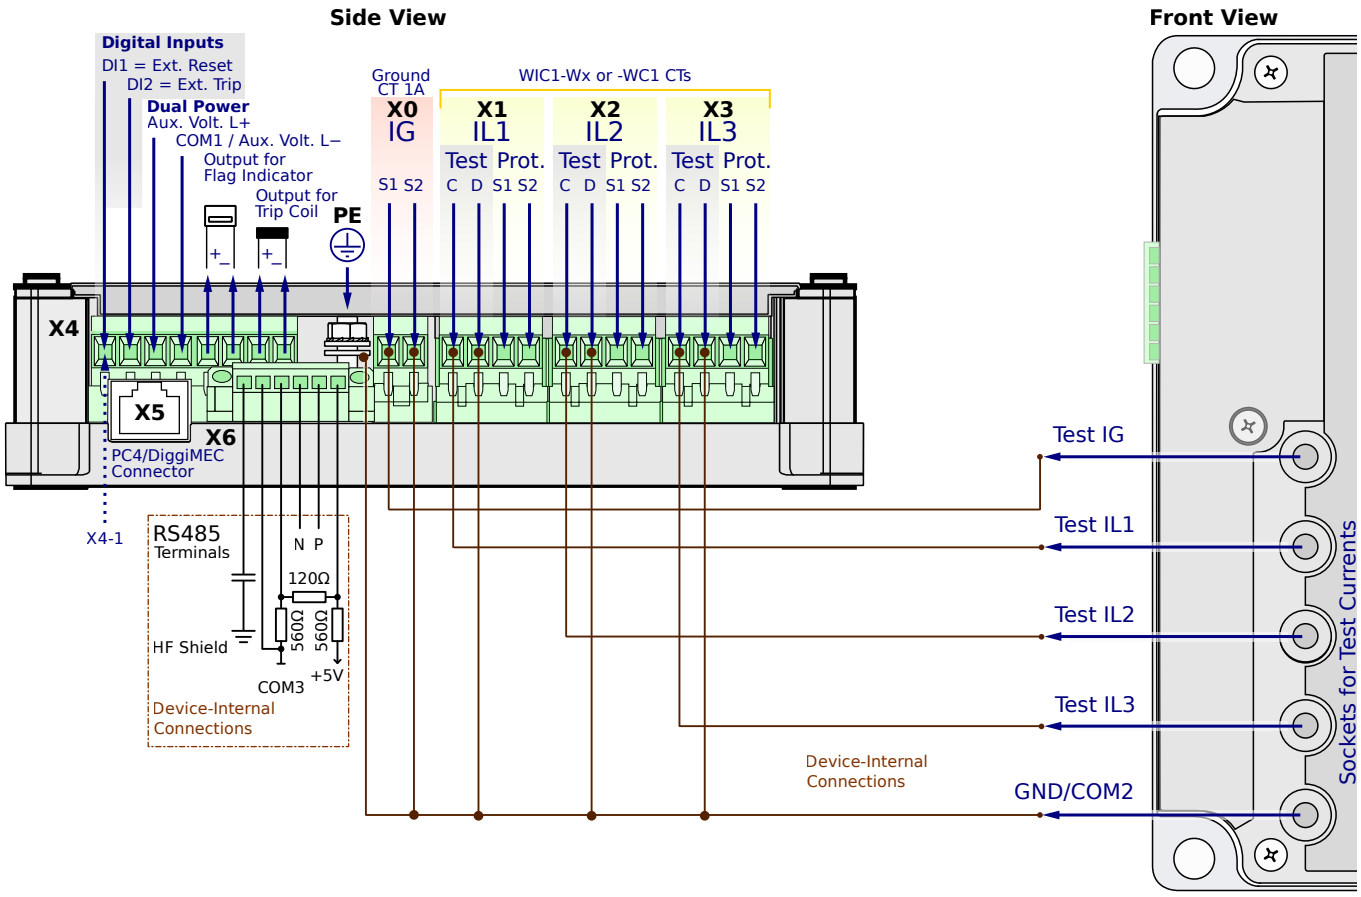


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2SBH

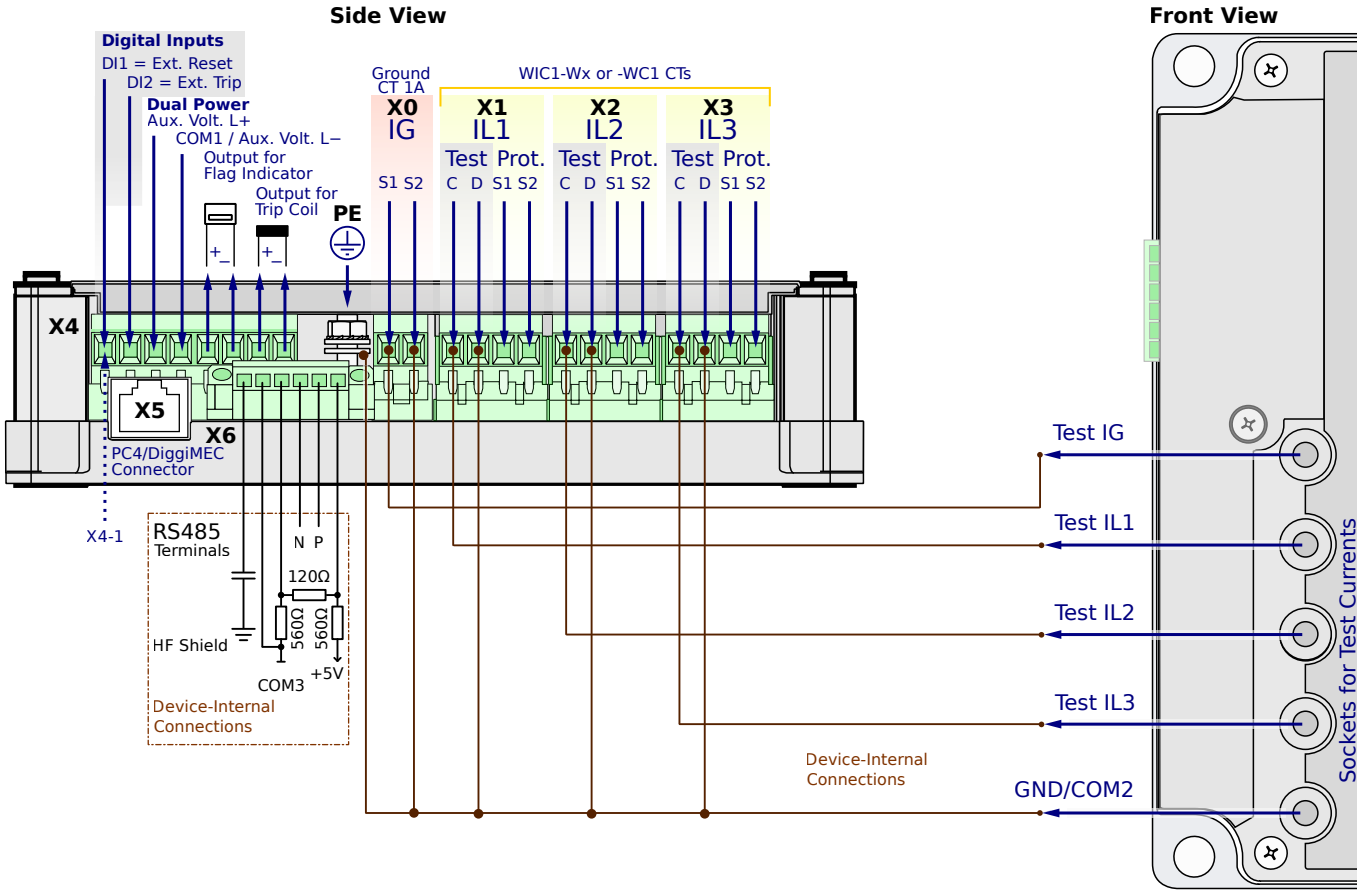


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2SC0

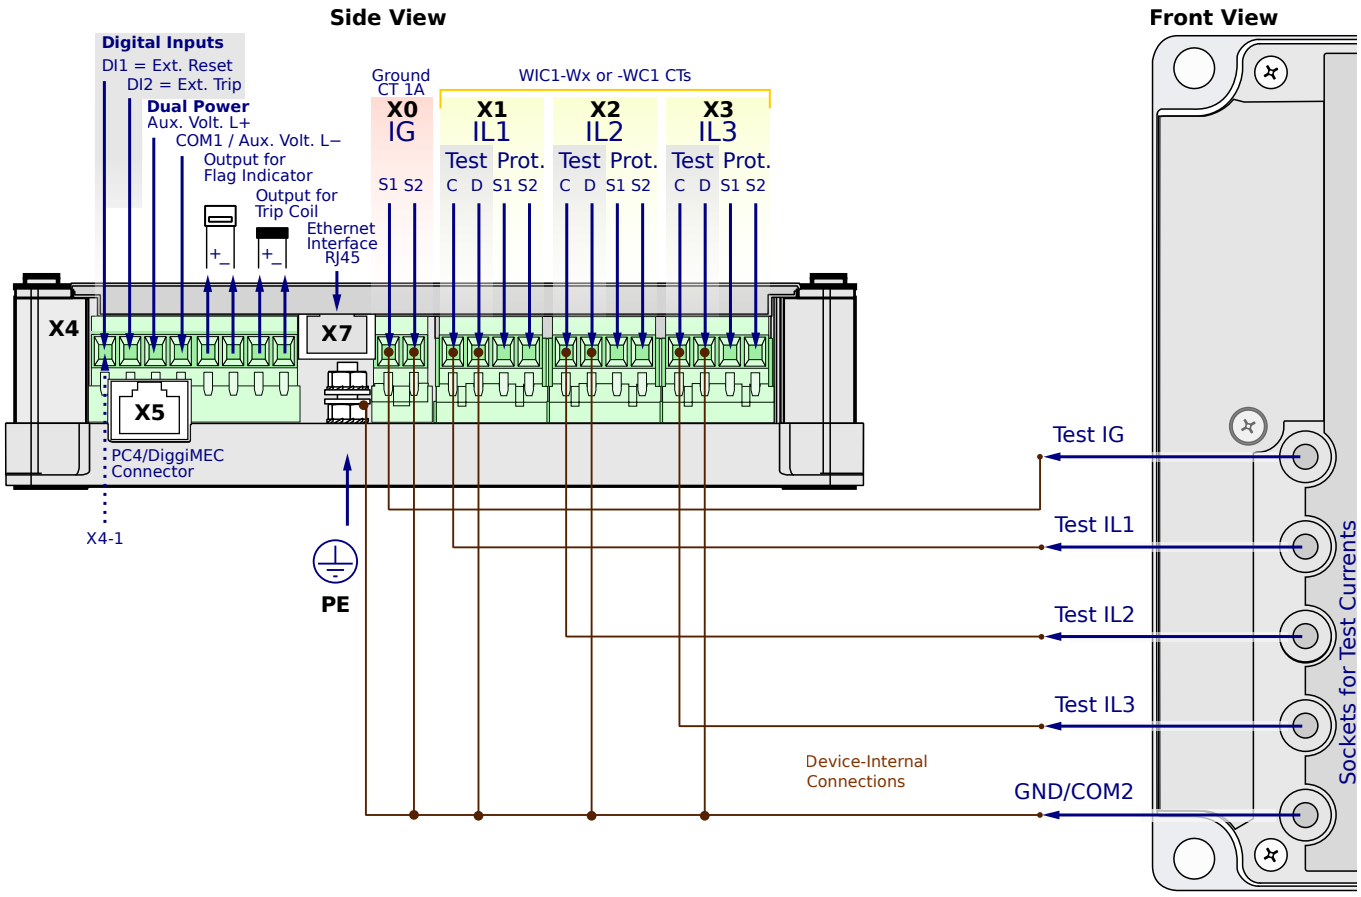


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2SCH

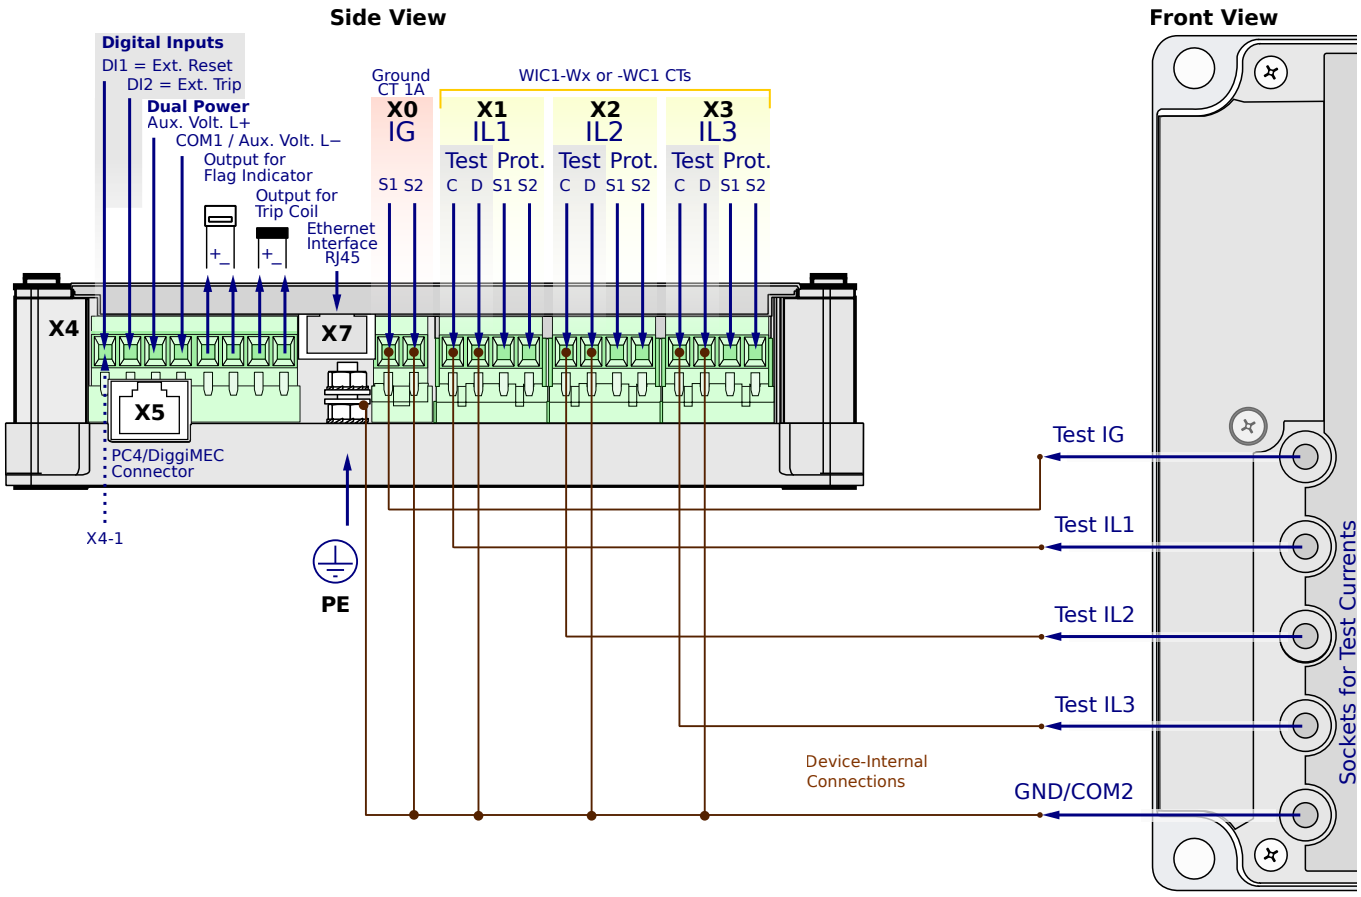


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2SL0

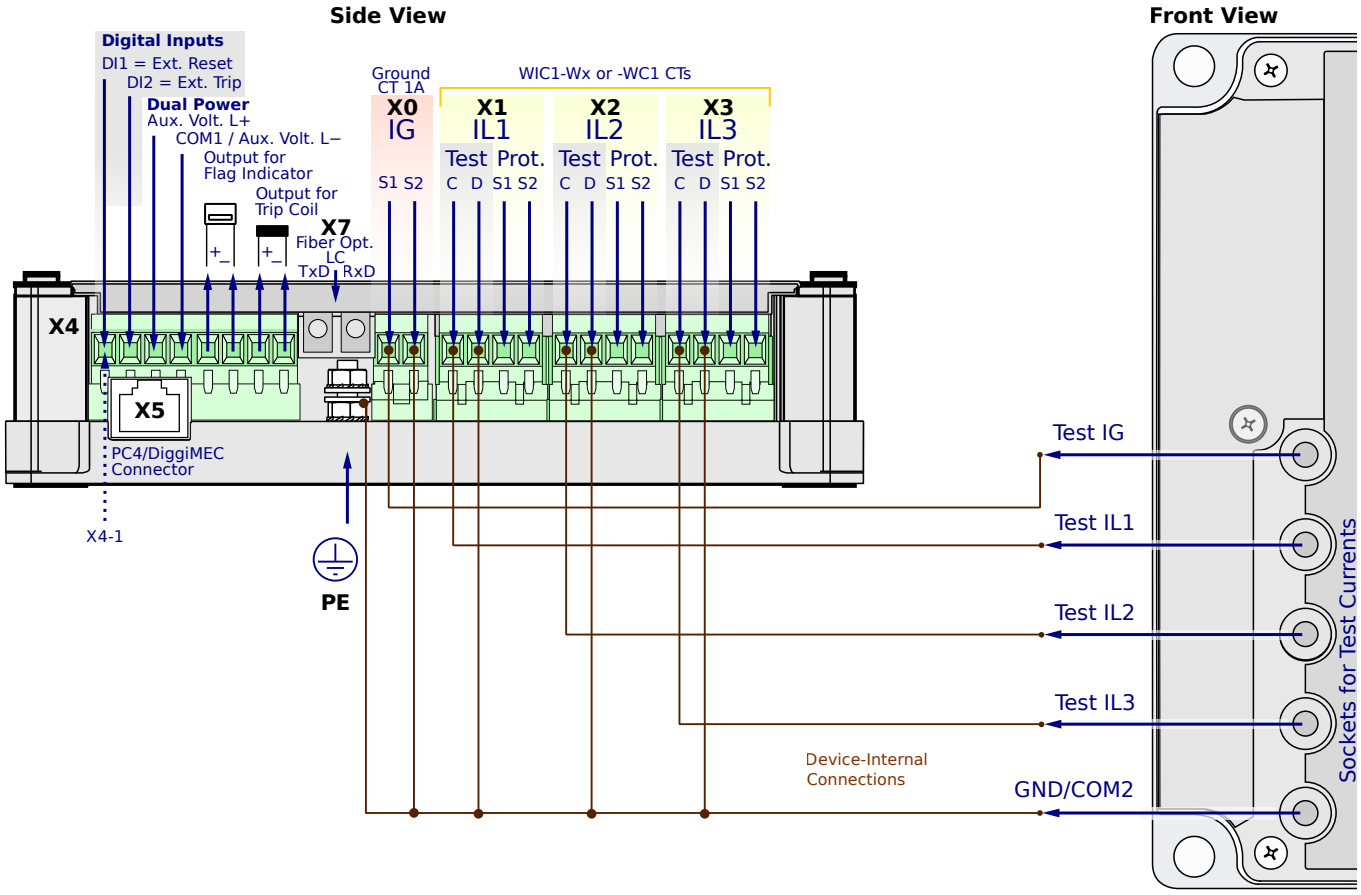


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2SLH

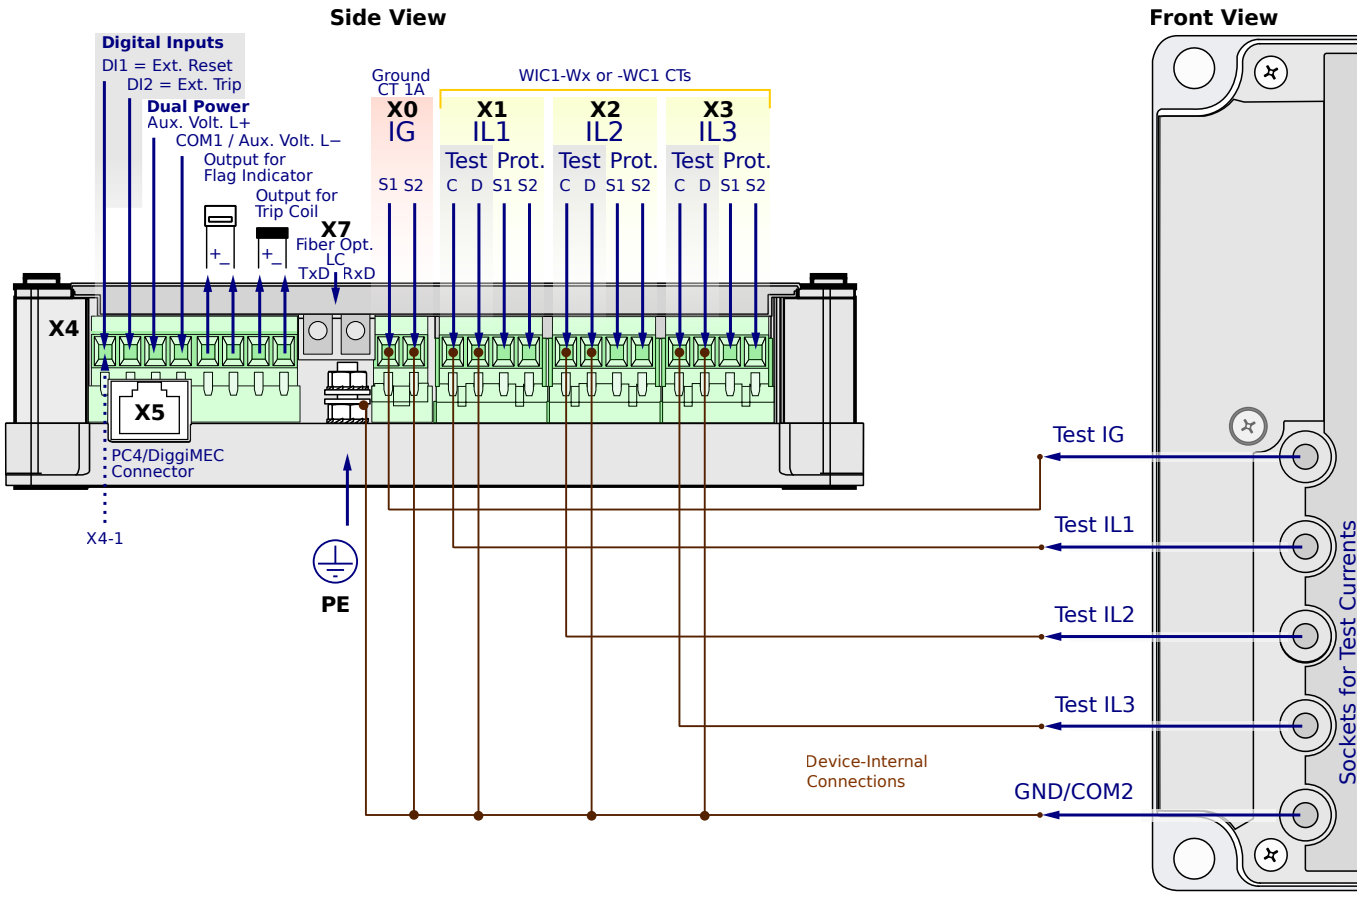


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2AA0

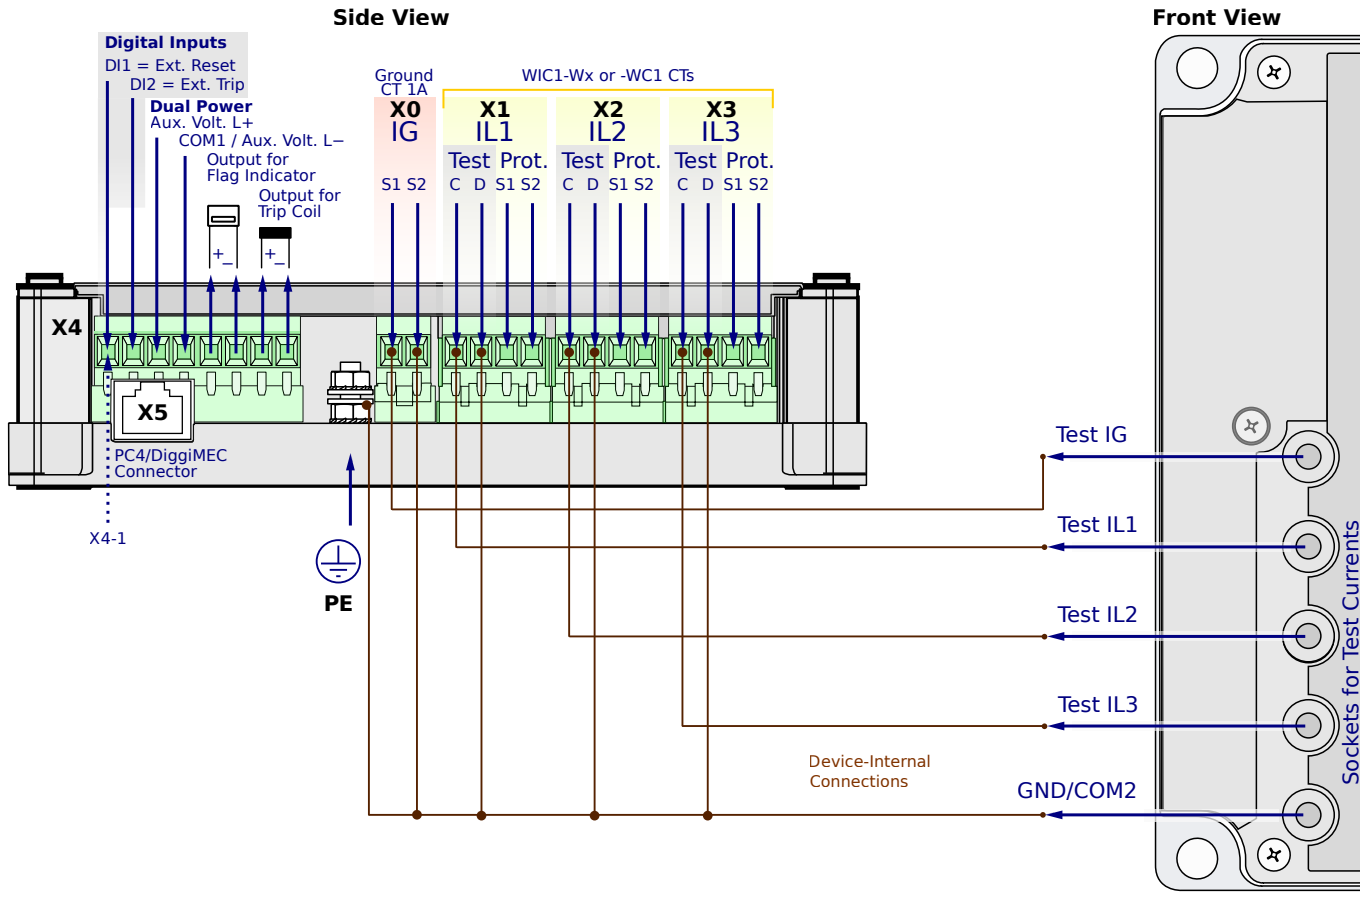


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2AAH

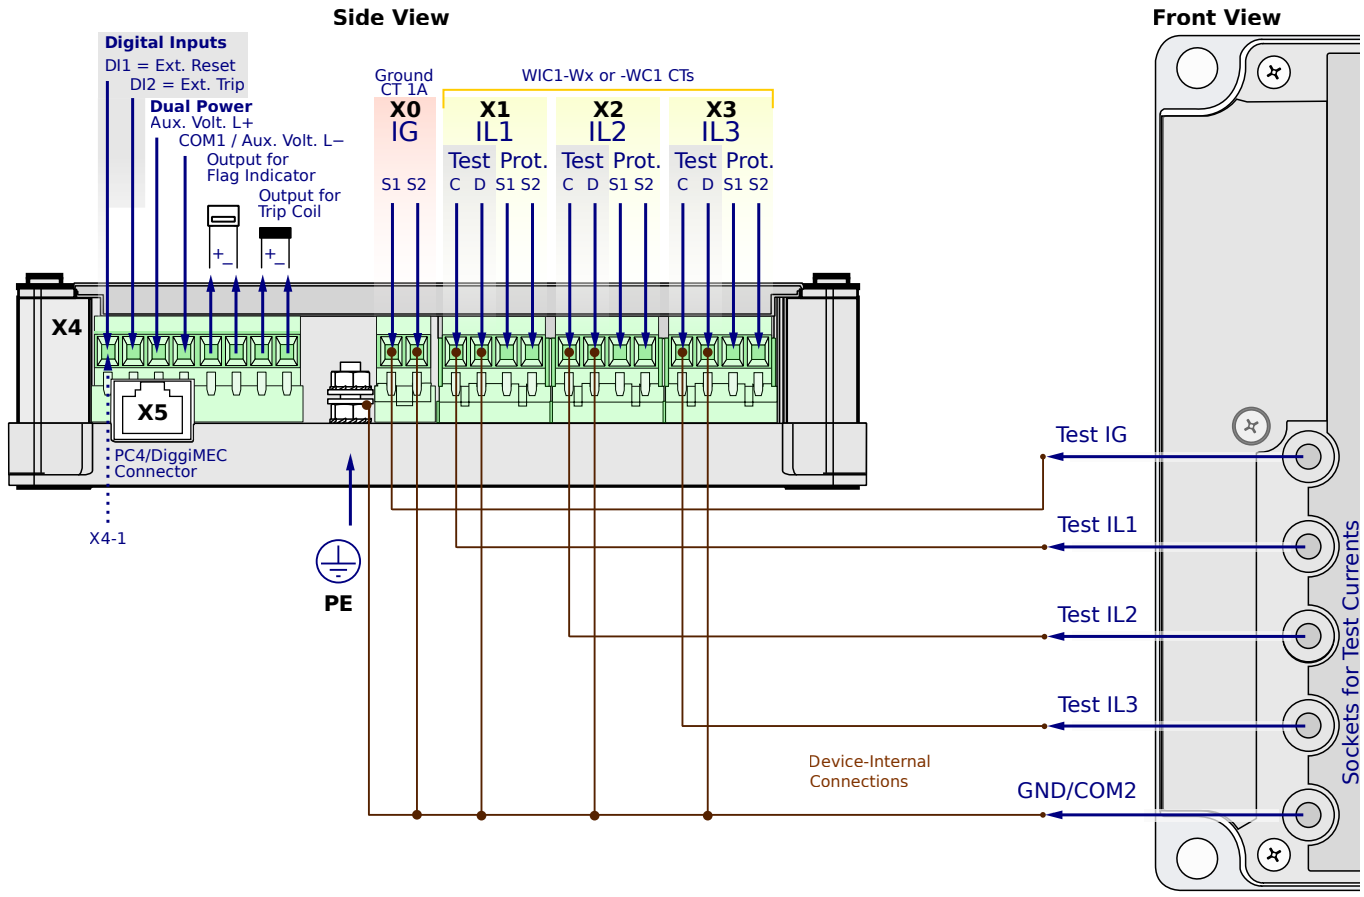


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2AB0

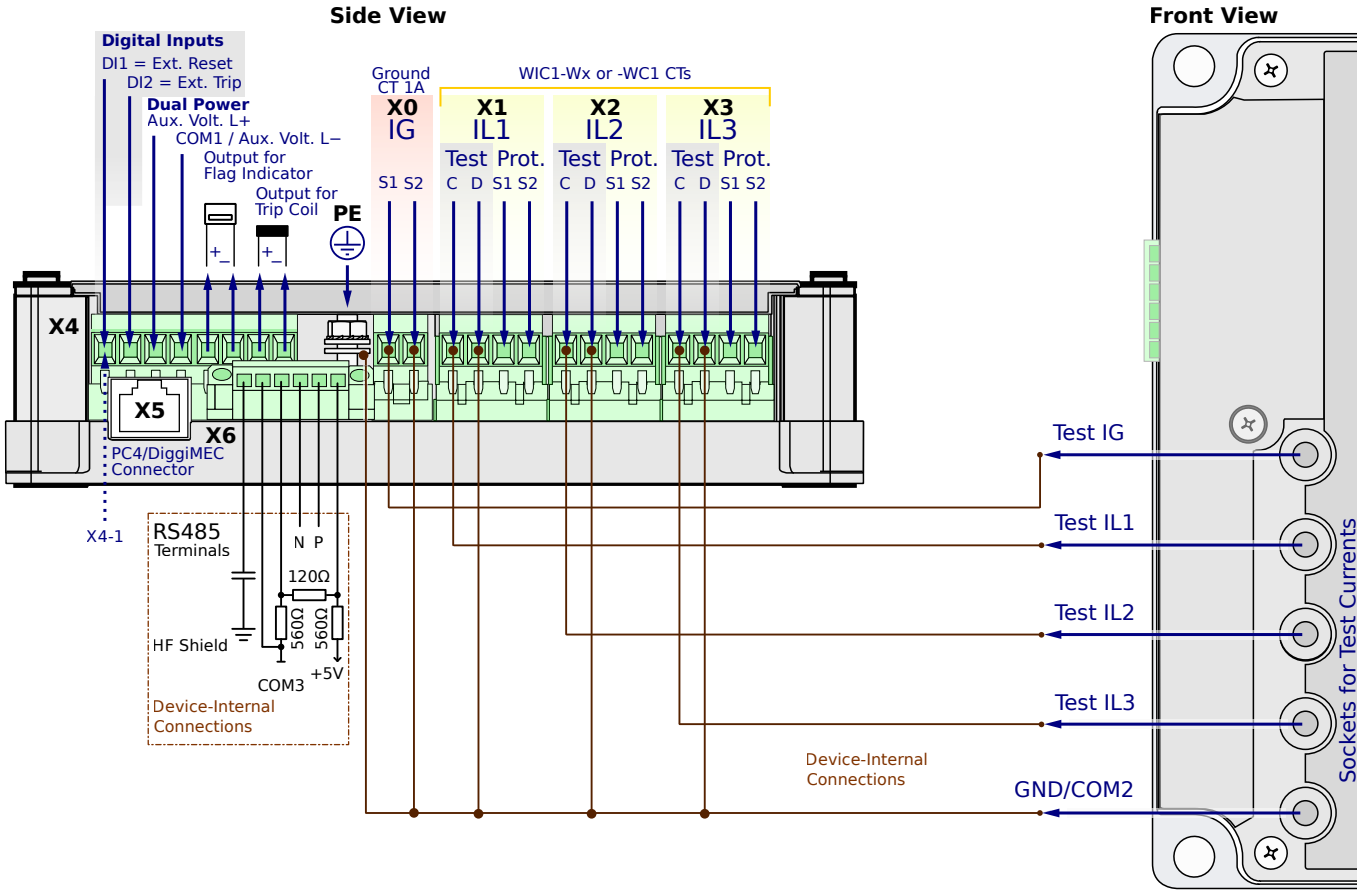


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2ABH

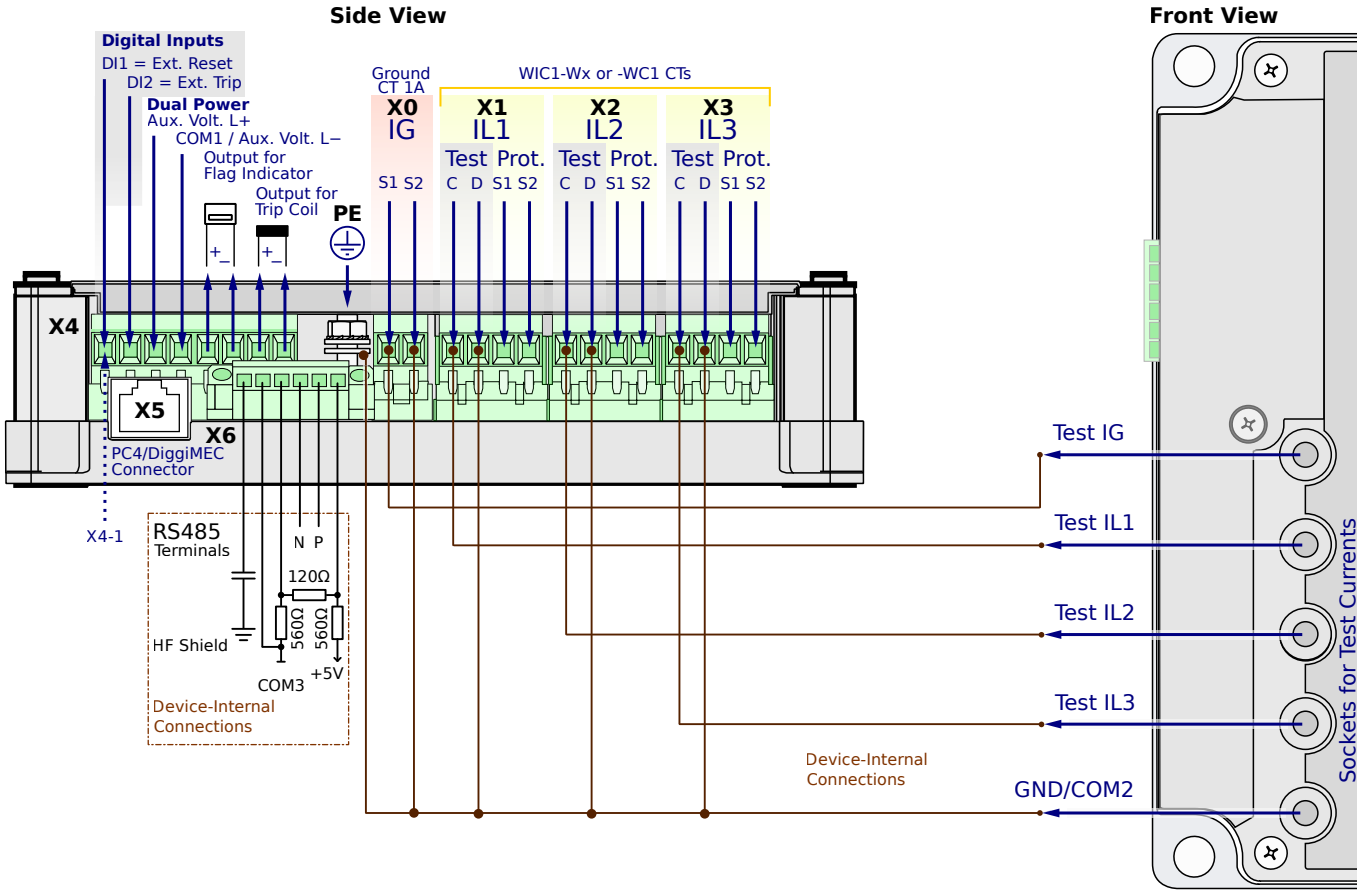


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2AC0

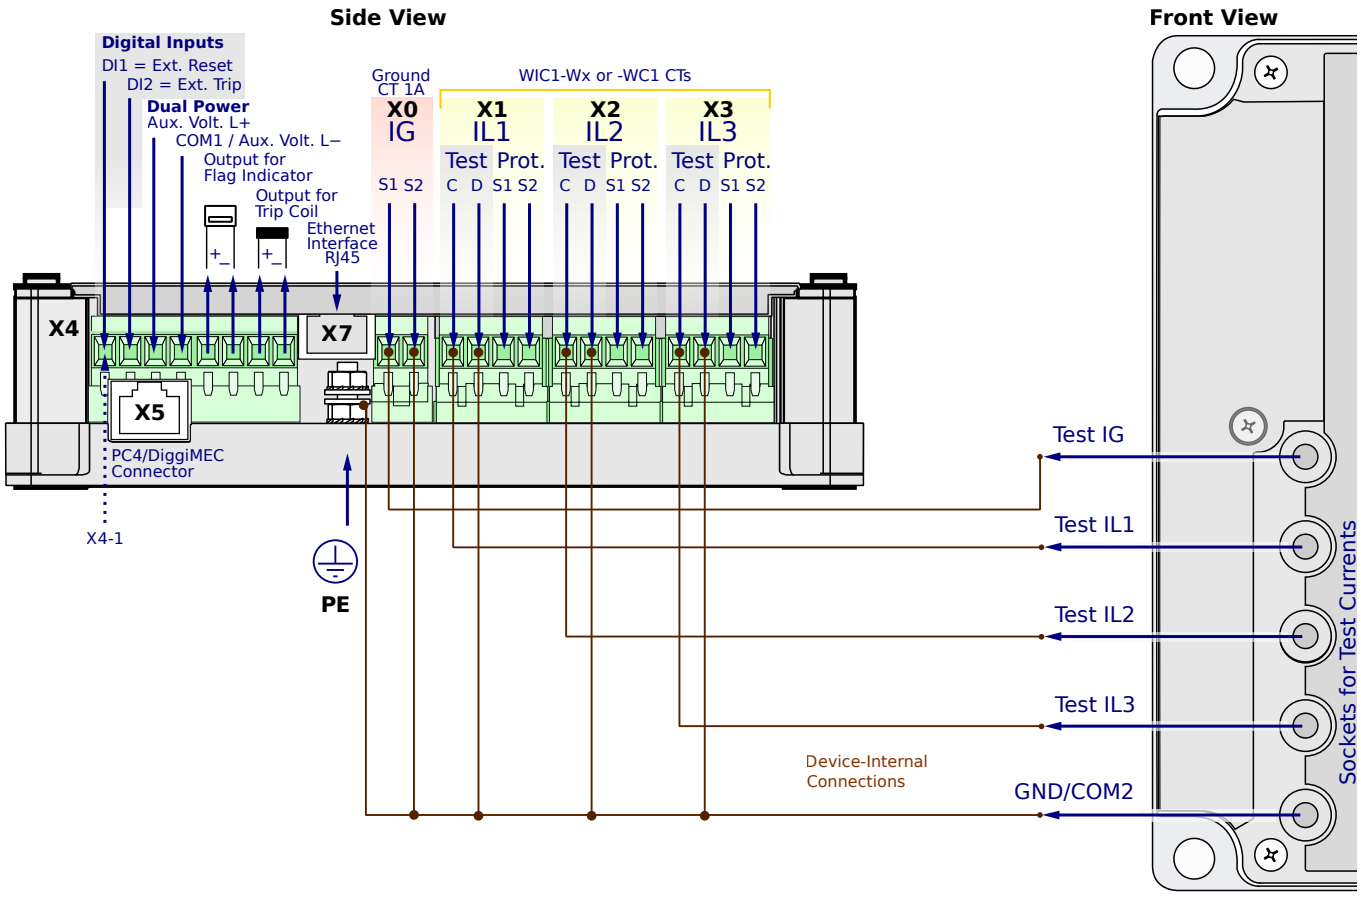


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2ACH

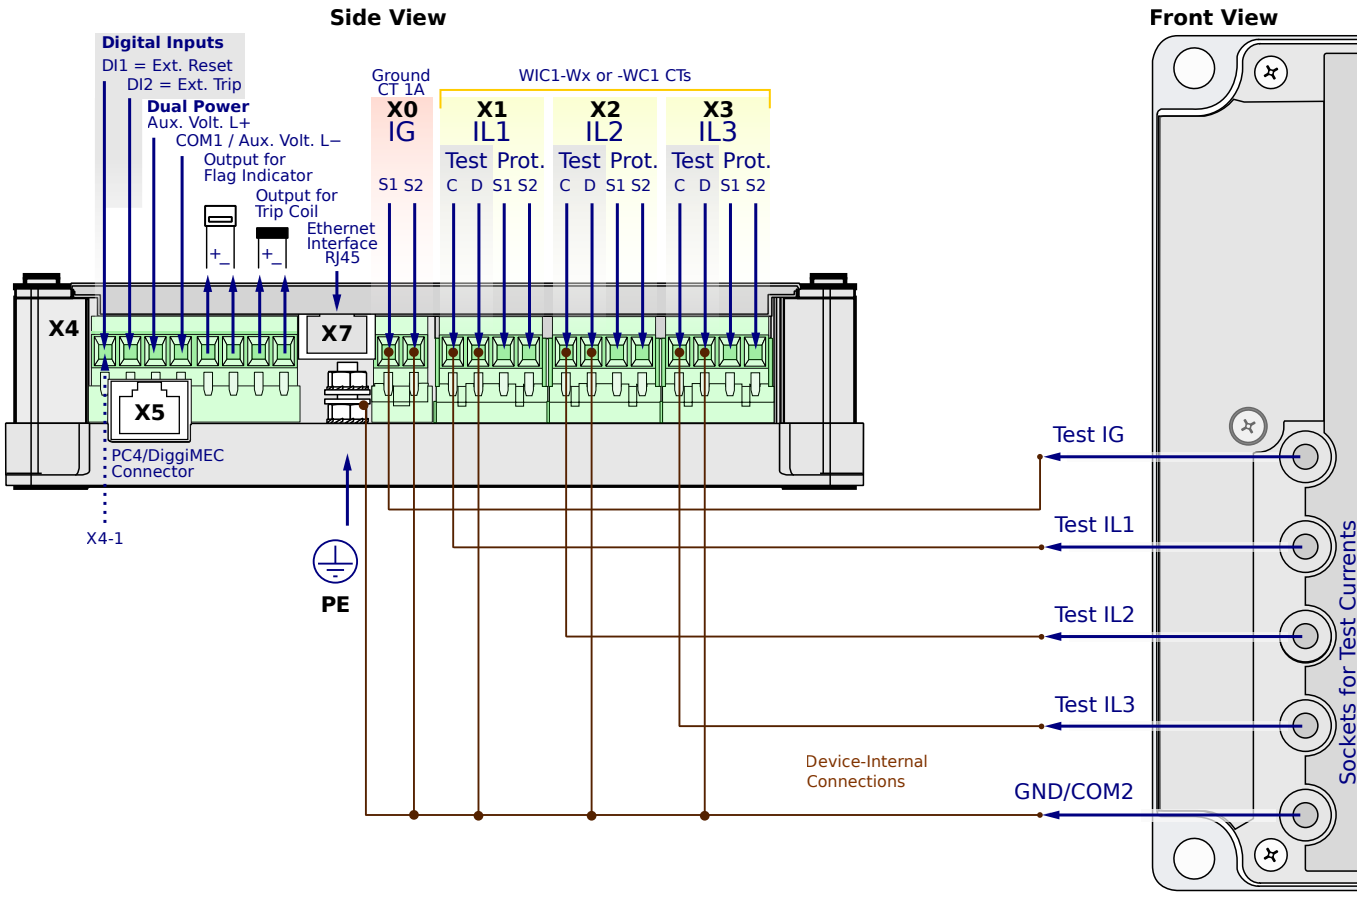


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2AL0

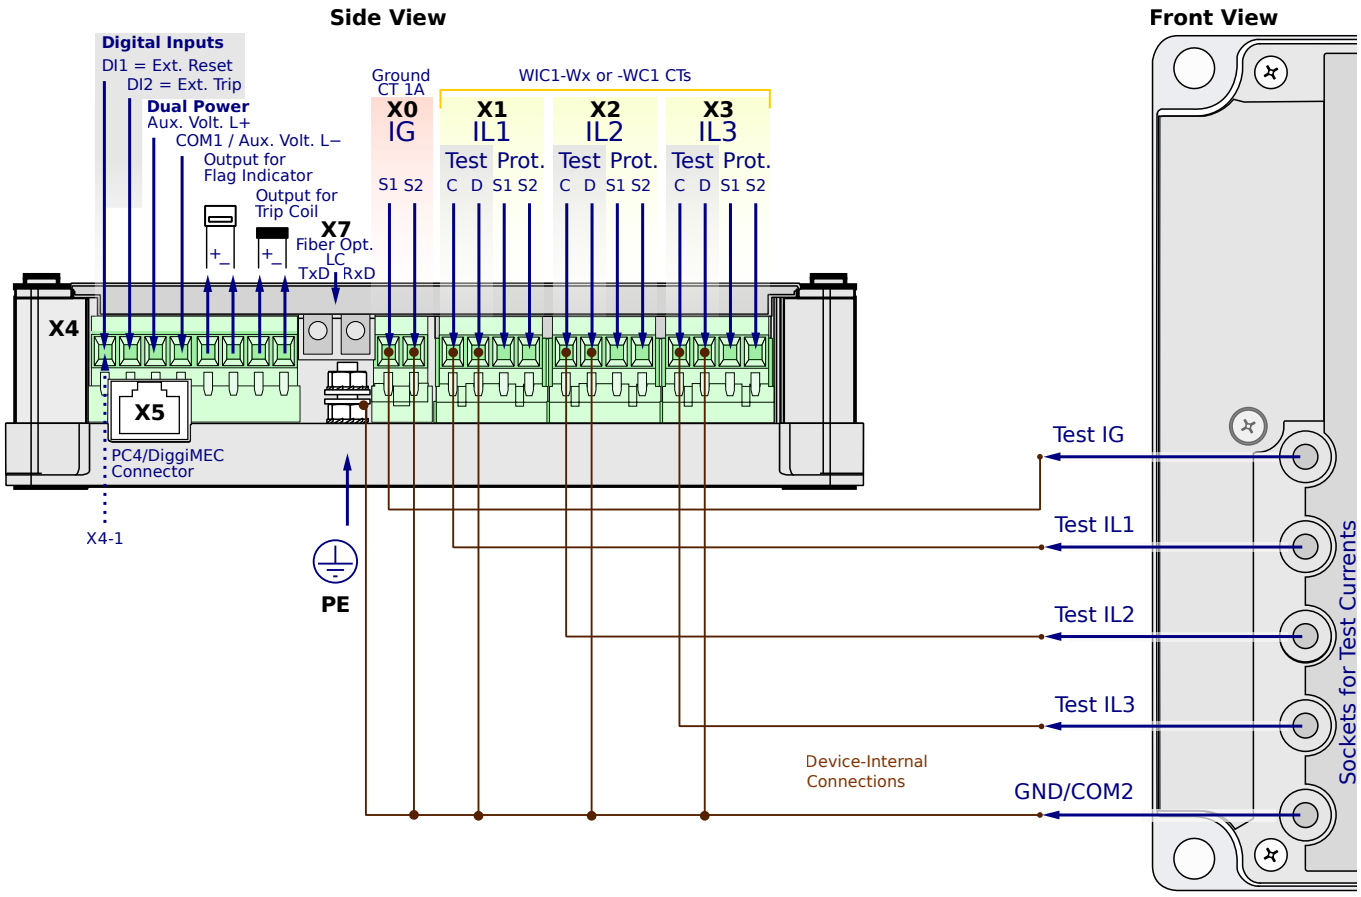


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2ALH

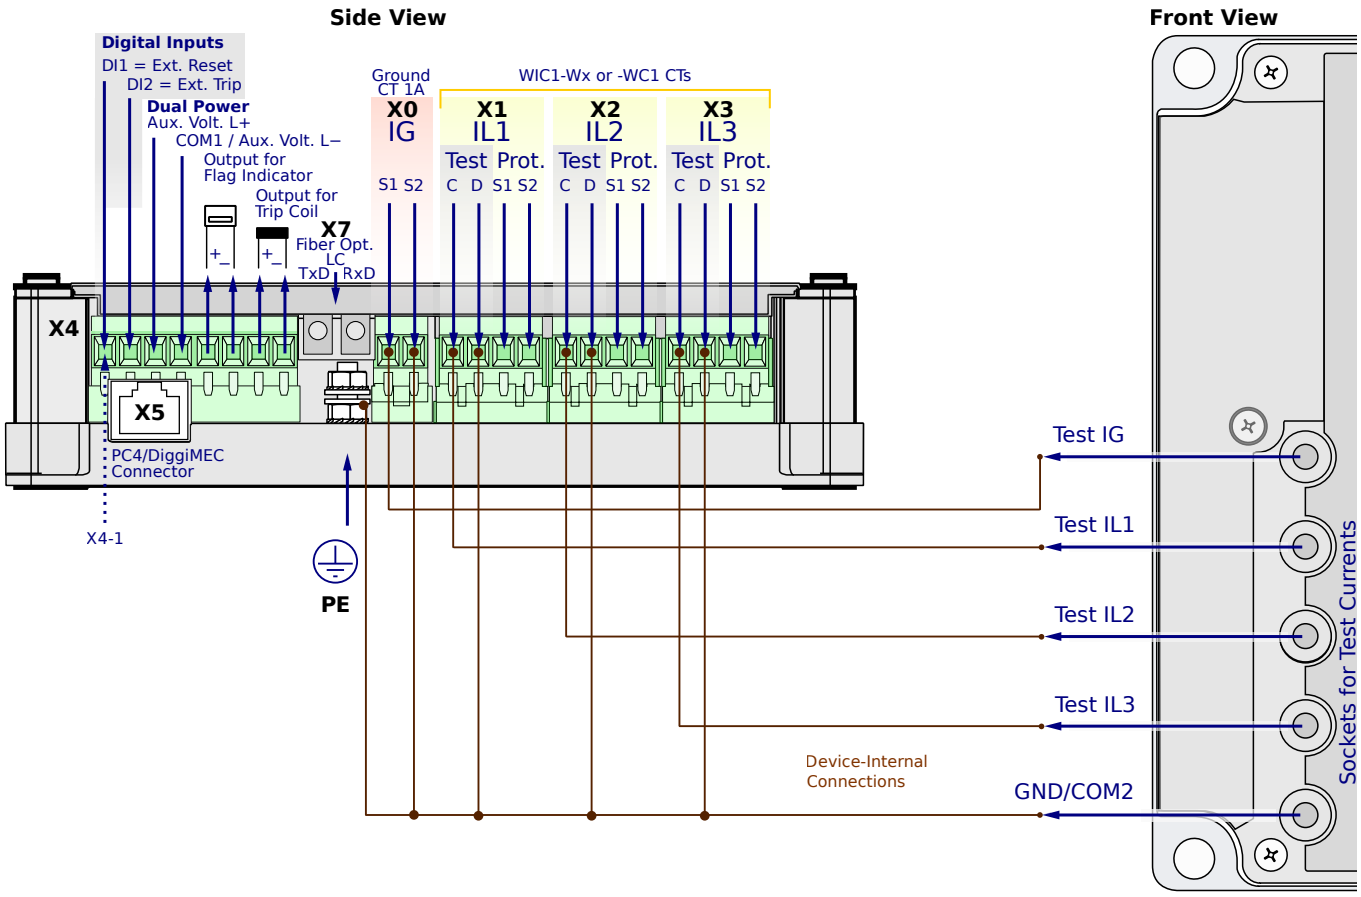


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2PA0

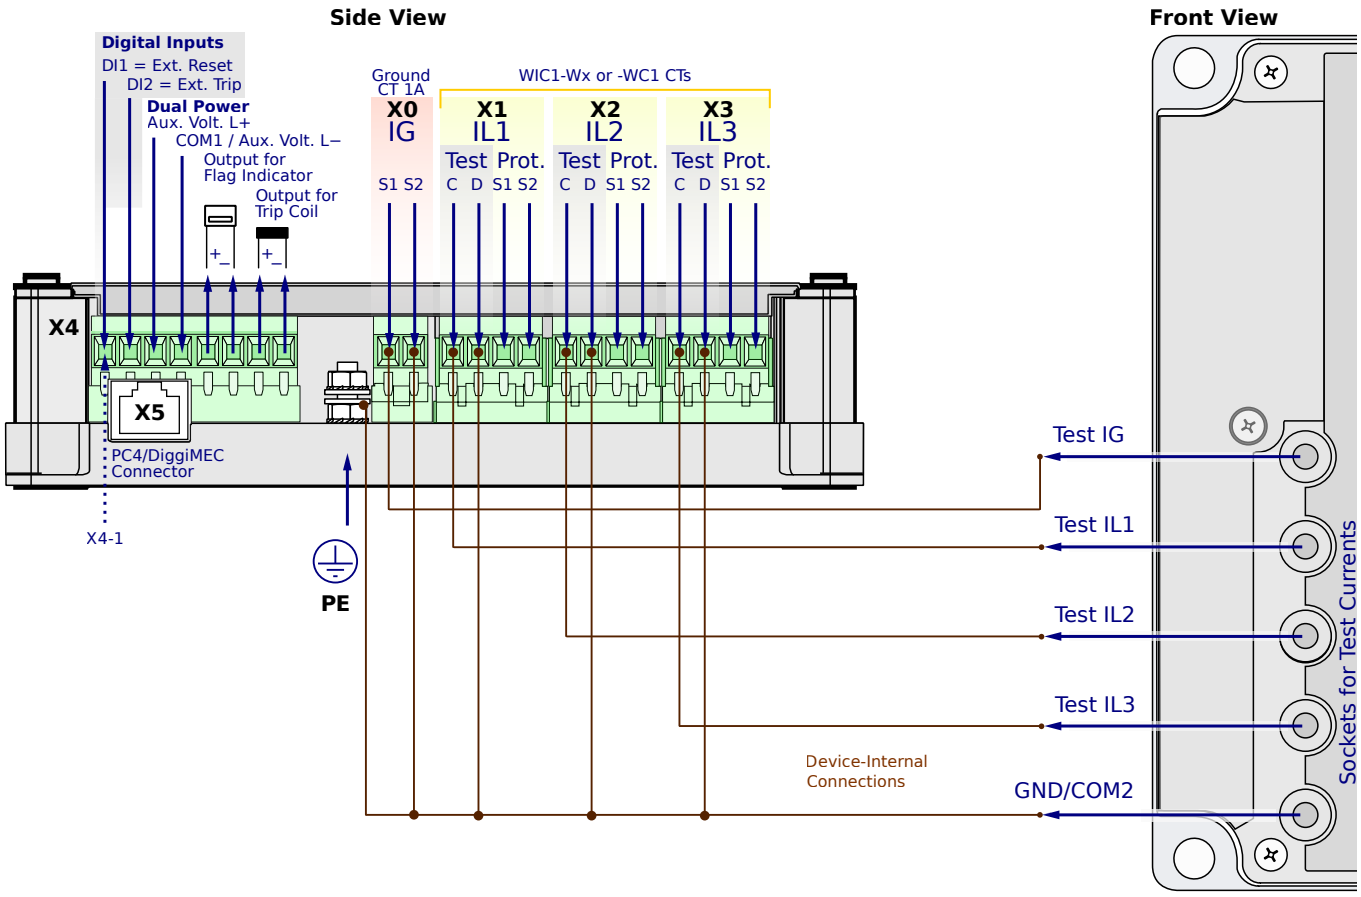


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2PAH

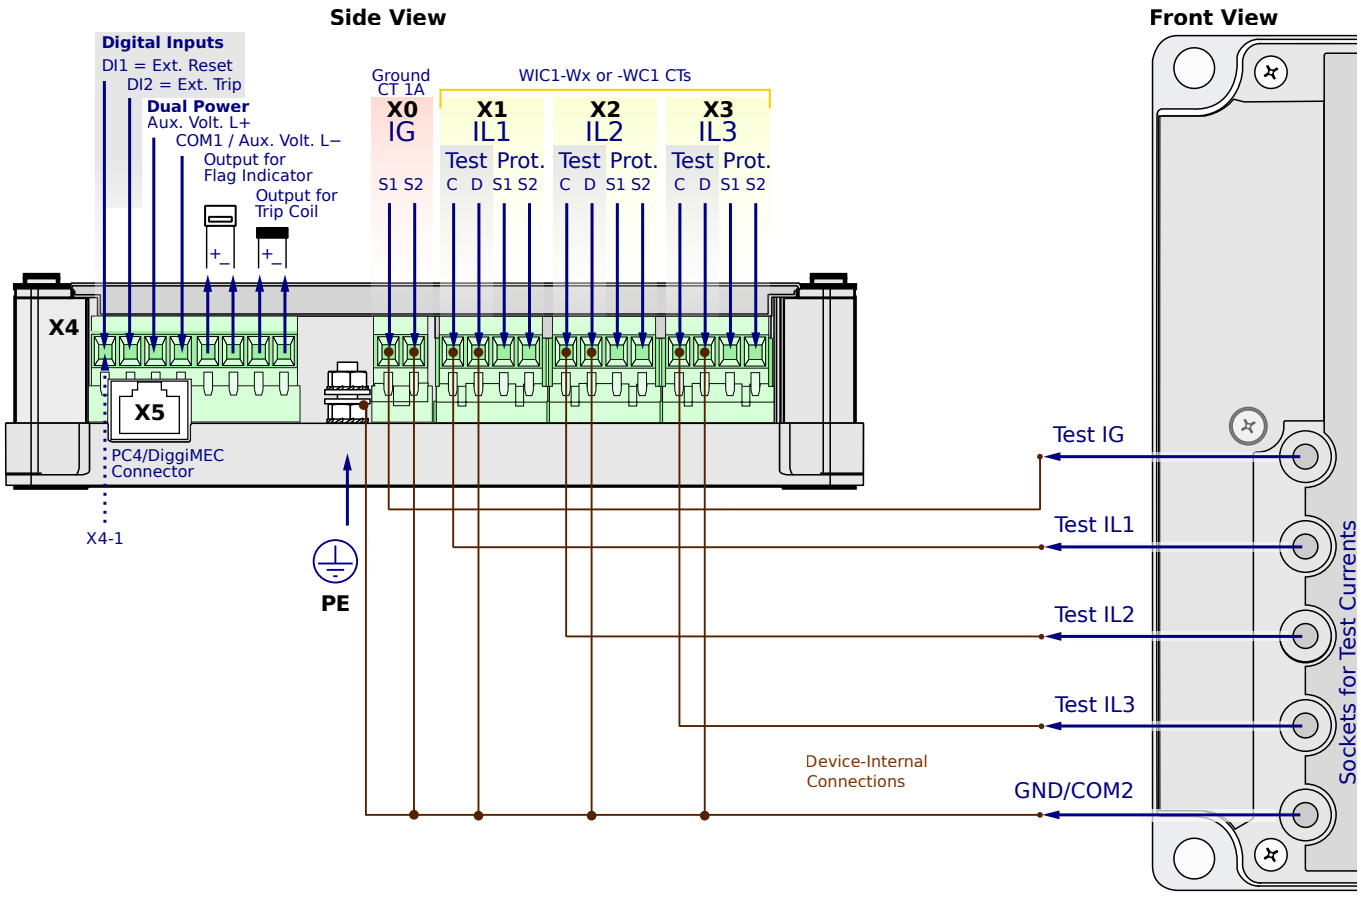


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0NG2PB0

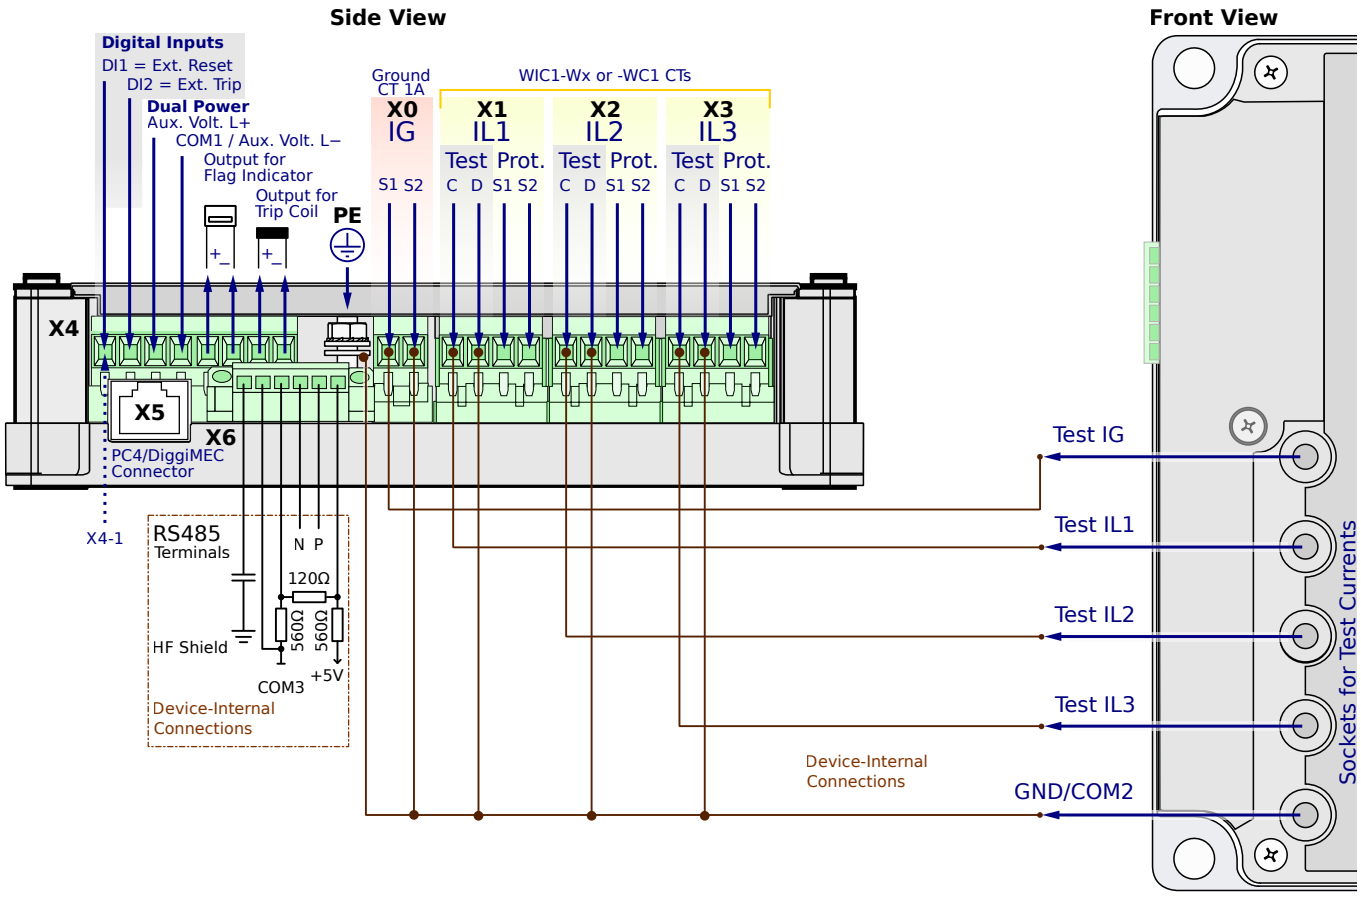


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2PBH

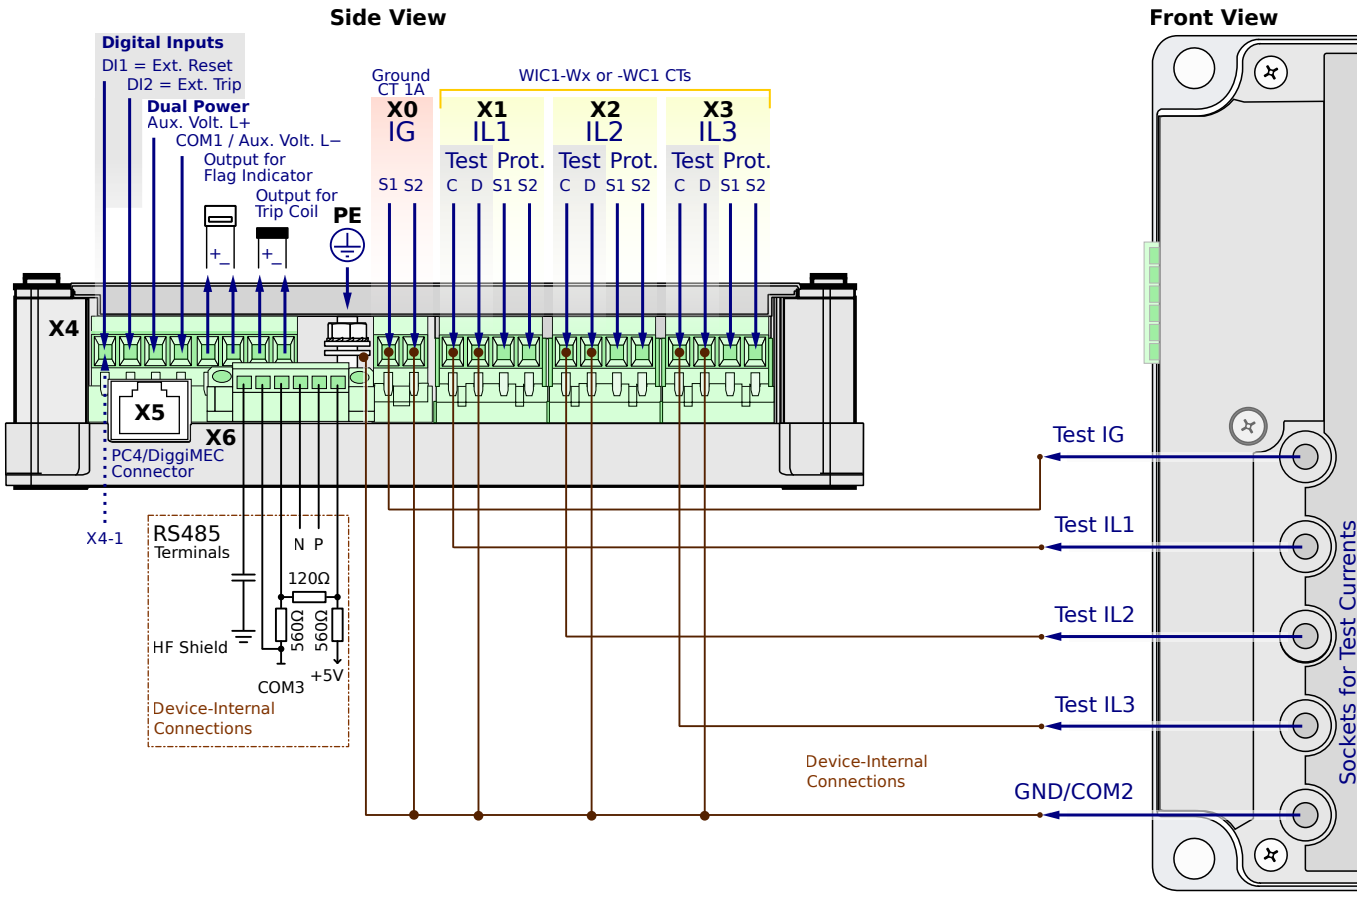


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0NG2PC0

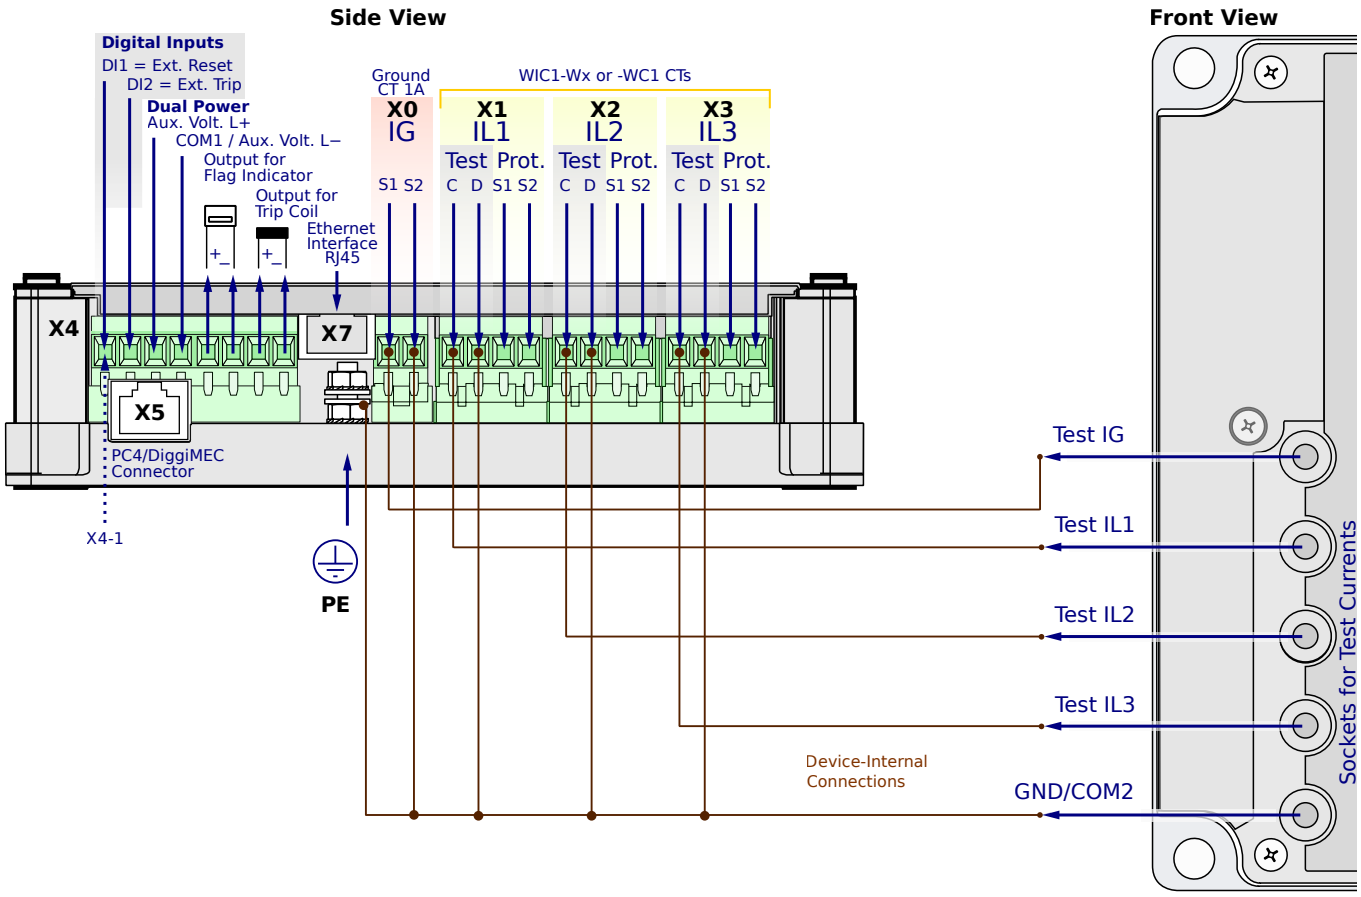


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2PCH

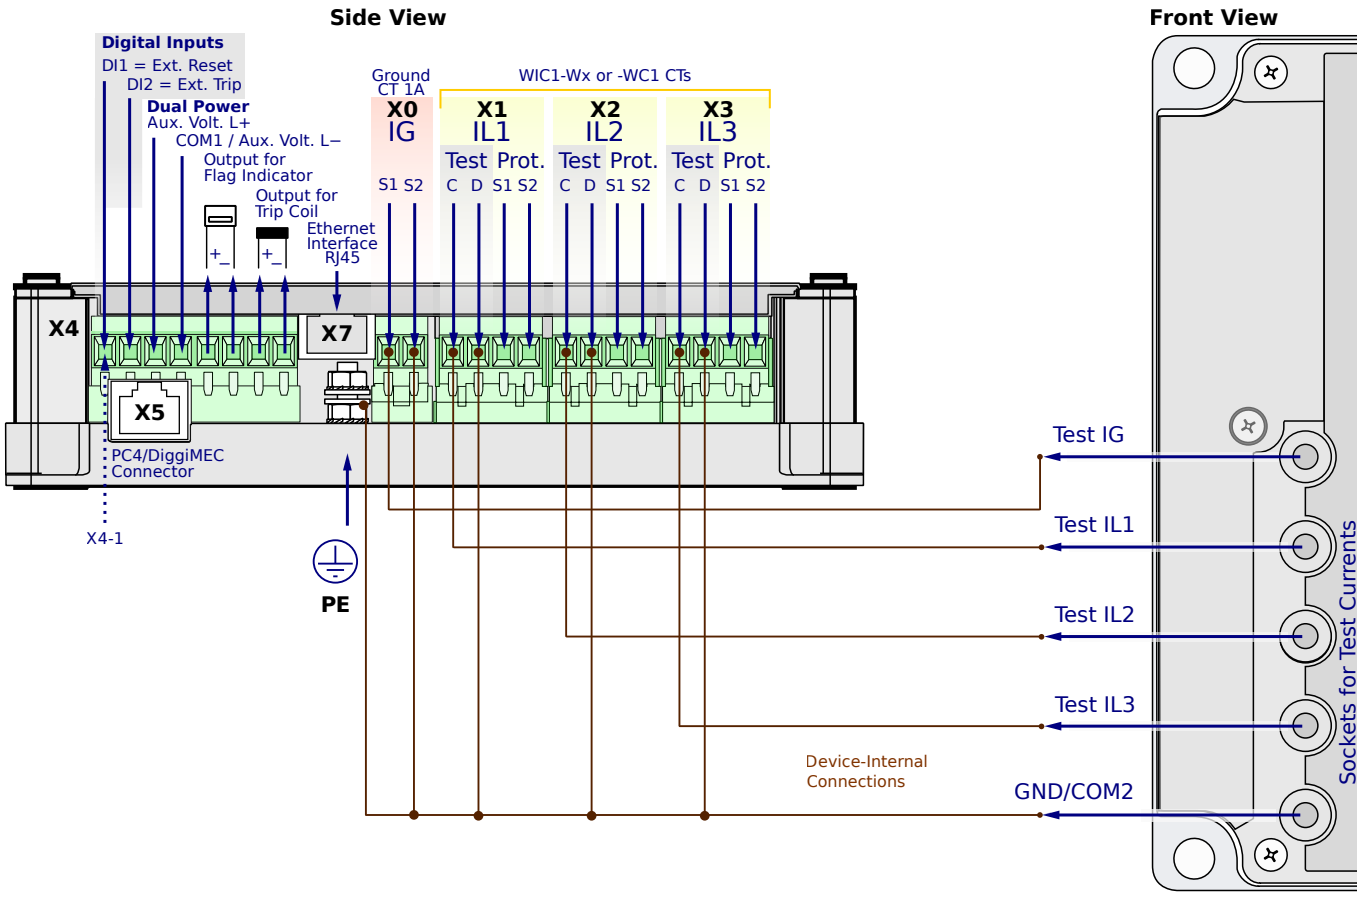


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0NG2PL0

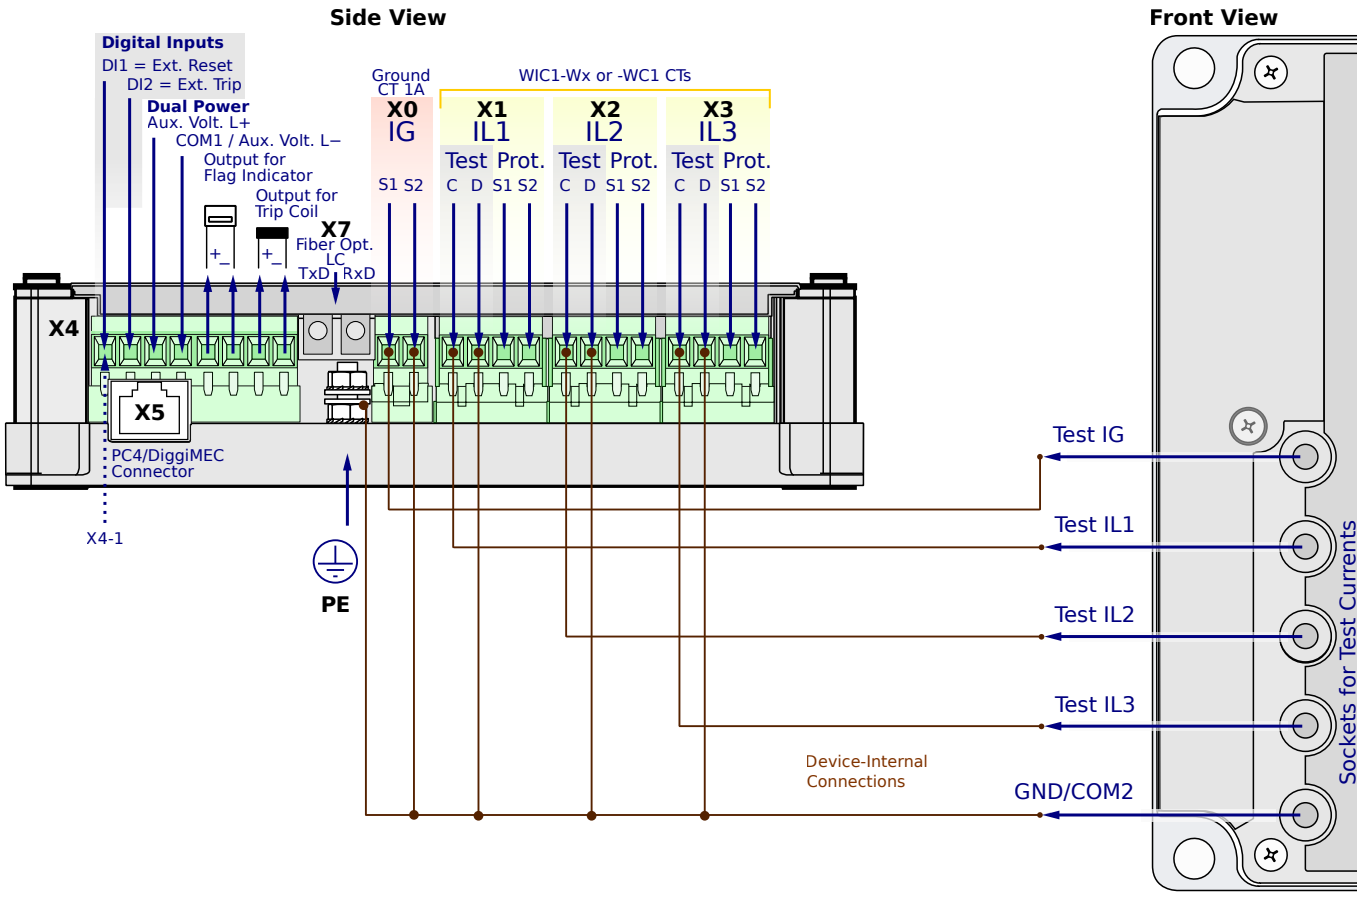


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0NG2PLH

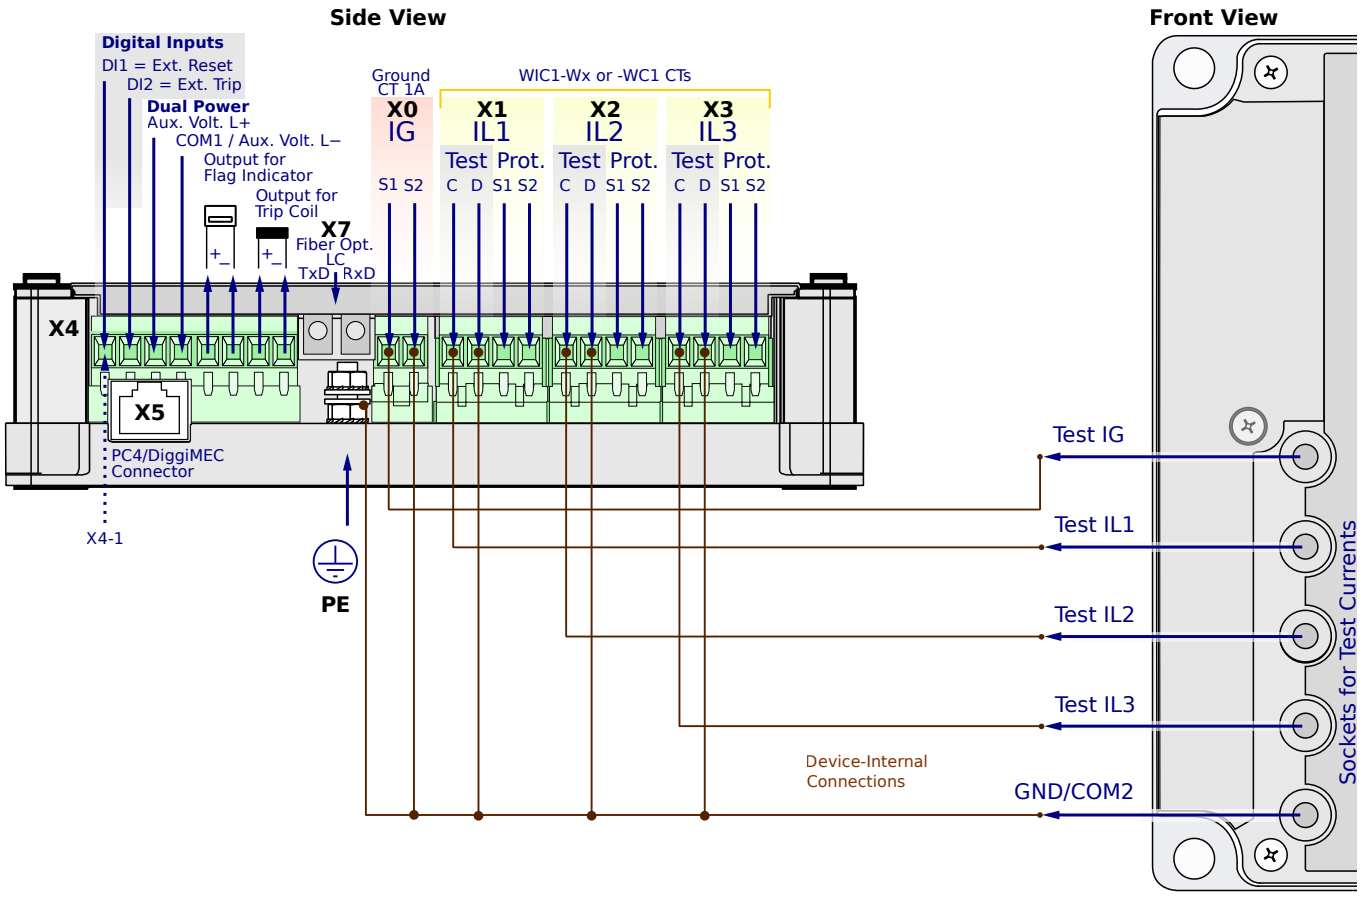


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0SA0

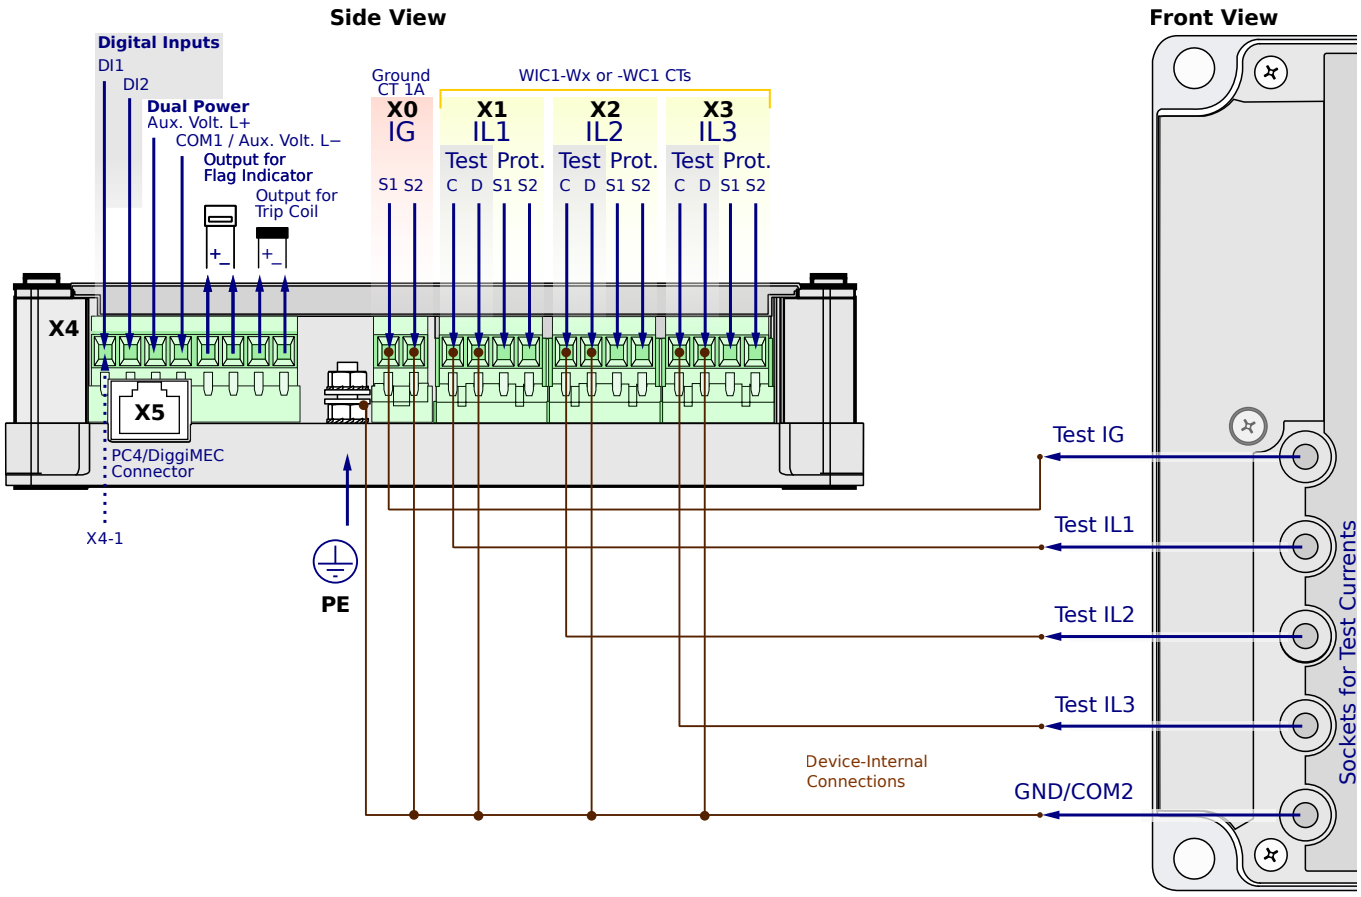


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0SAH

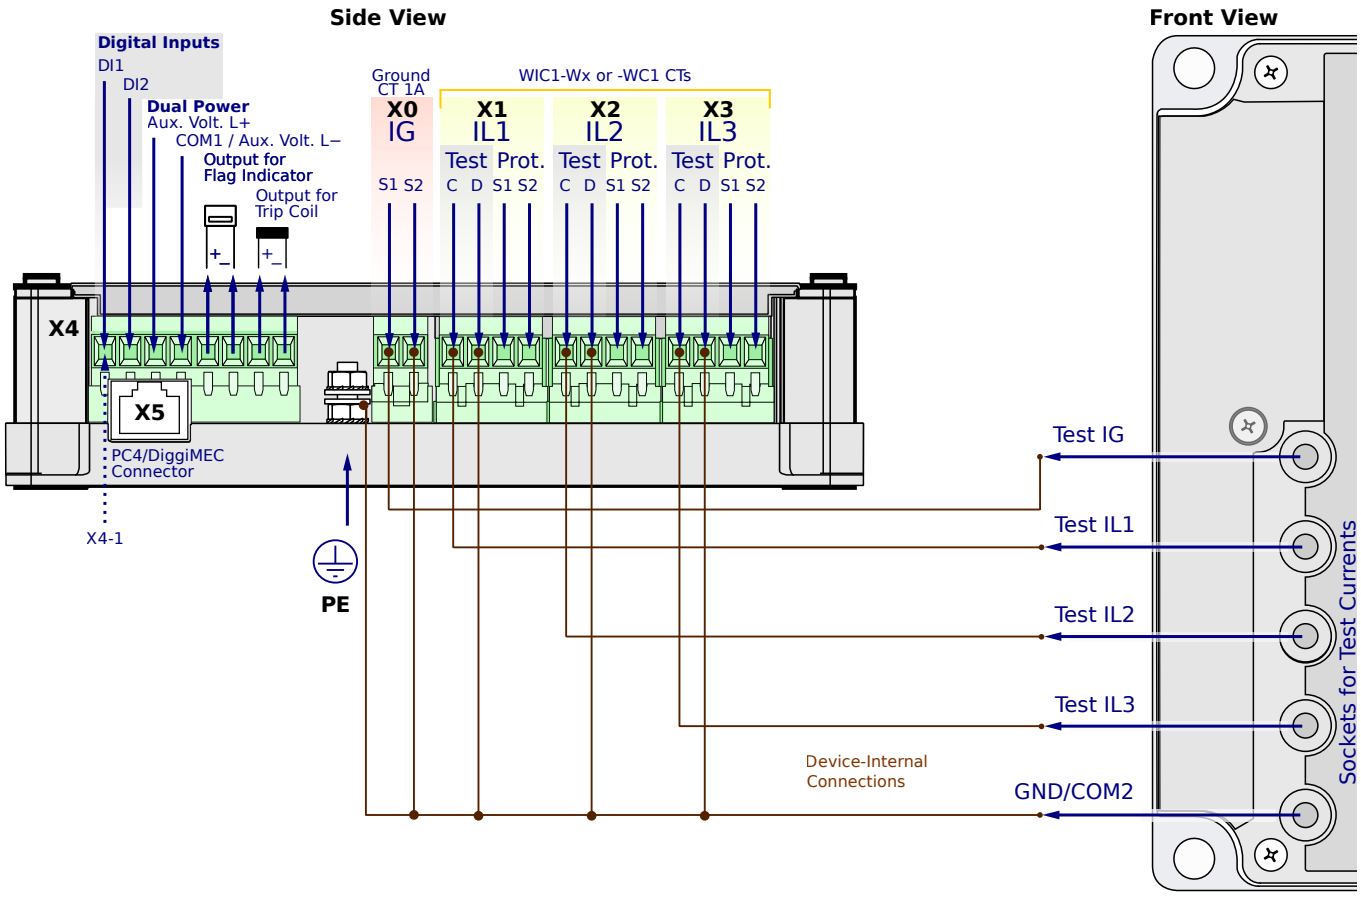


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0SB0

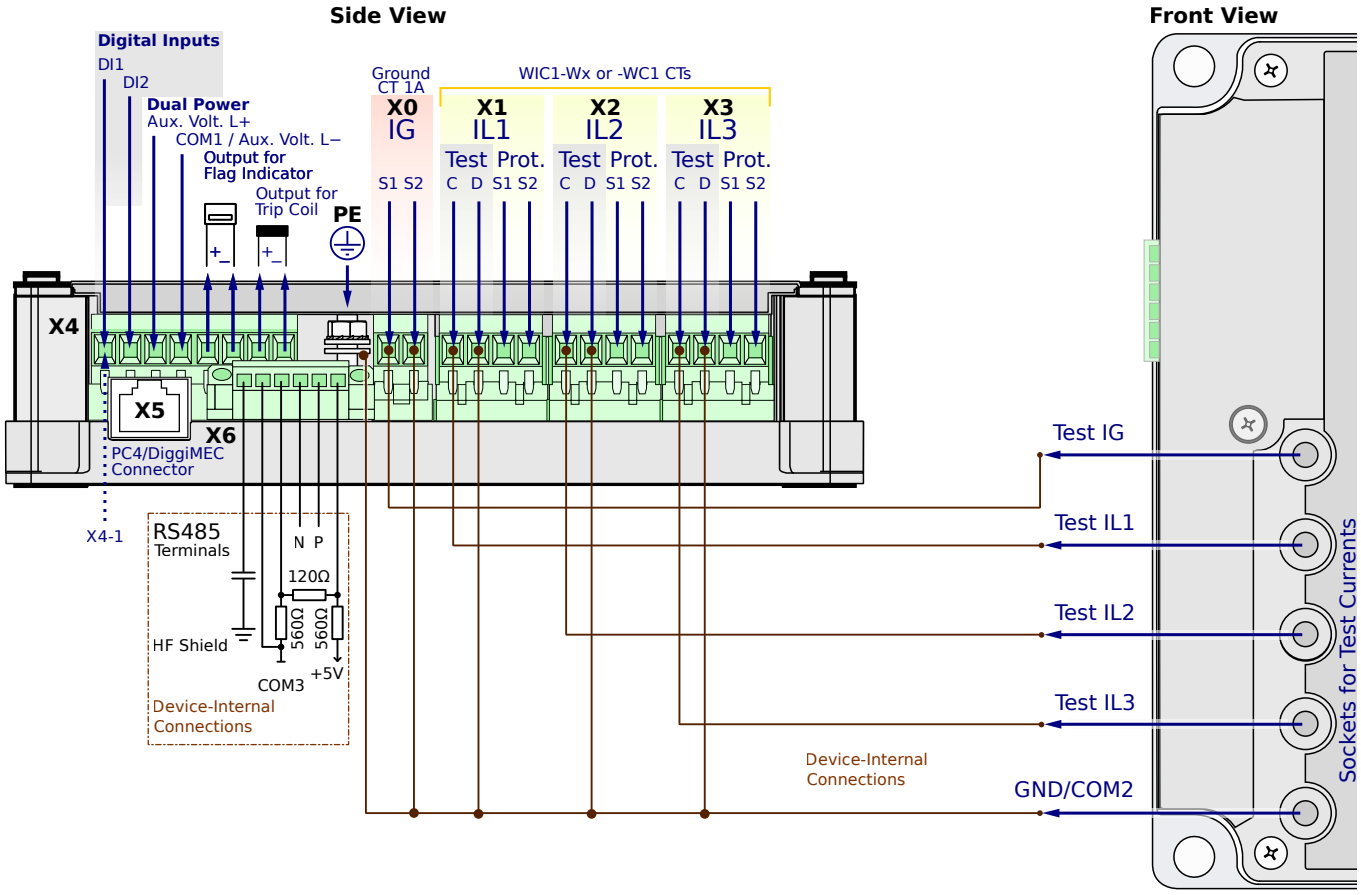


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0SBH

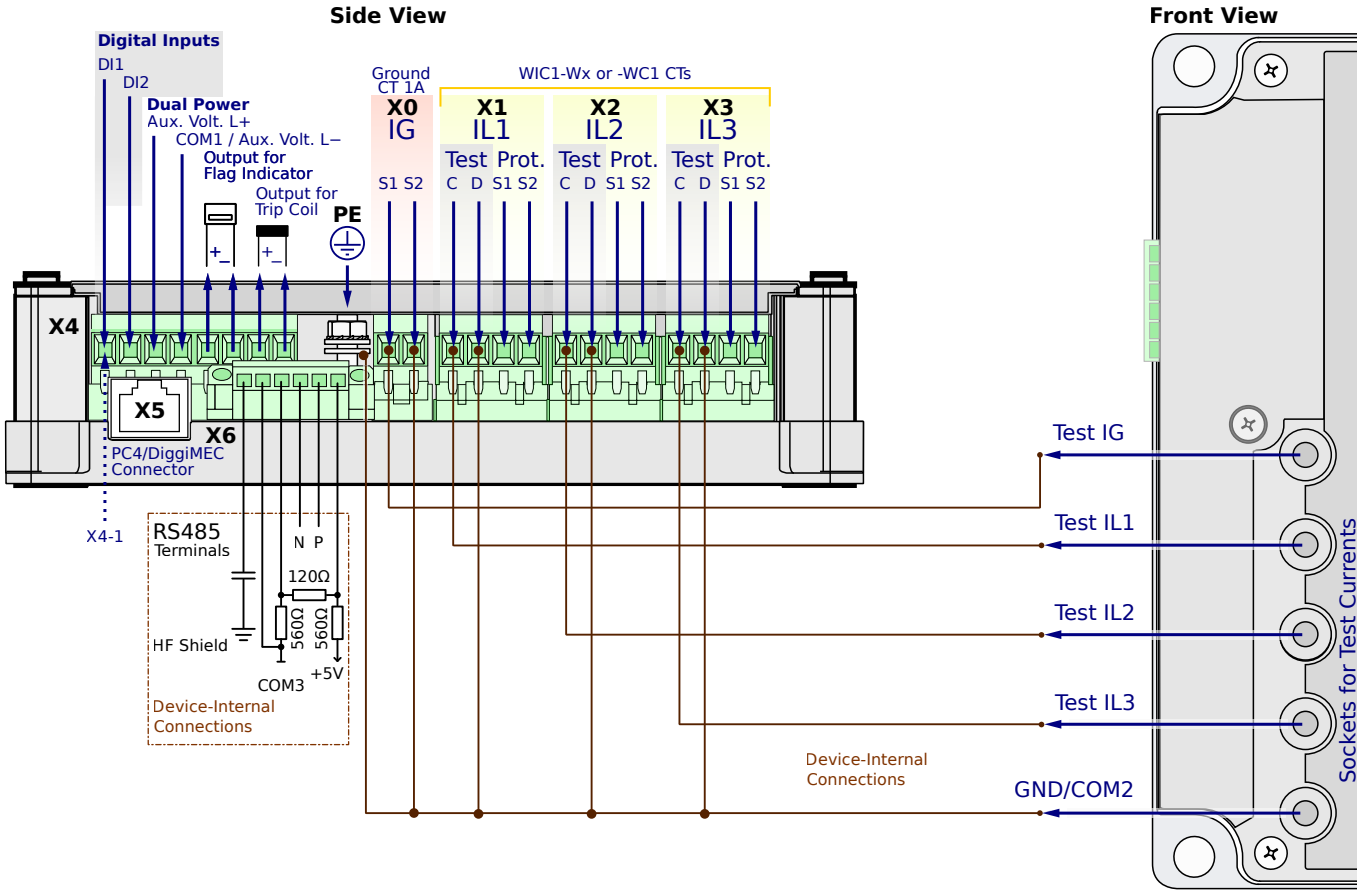


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0SC0

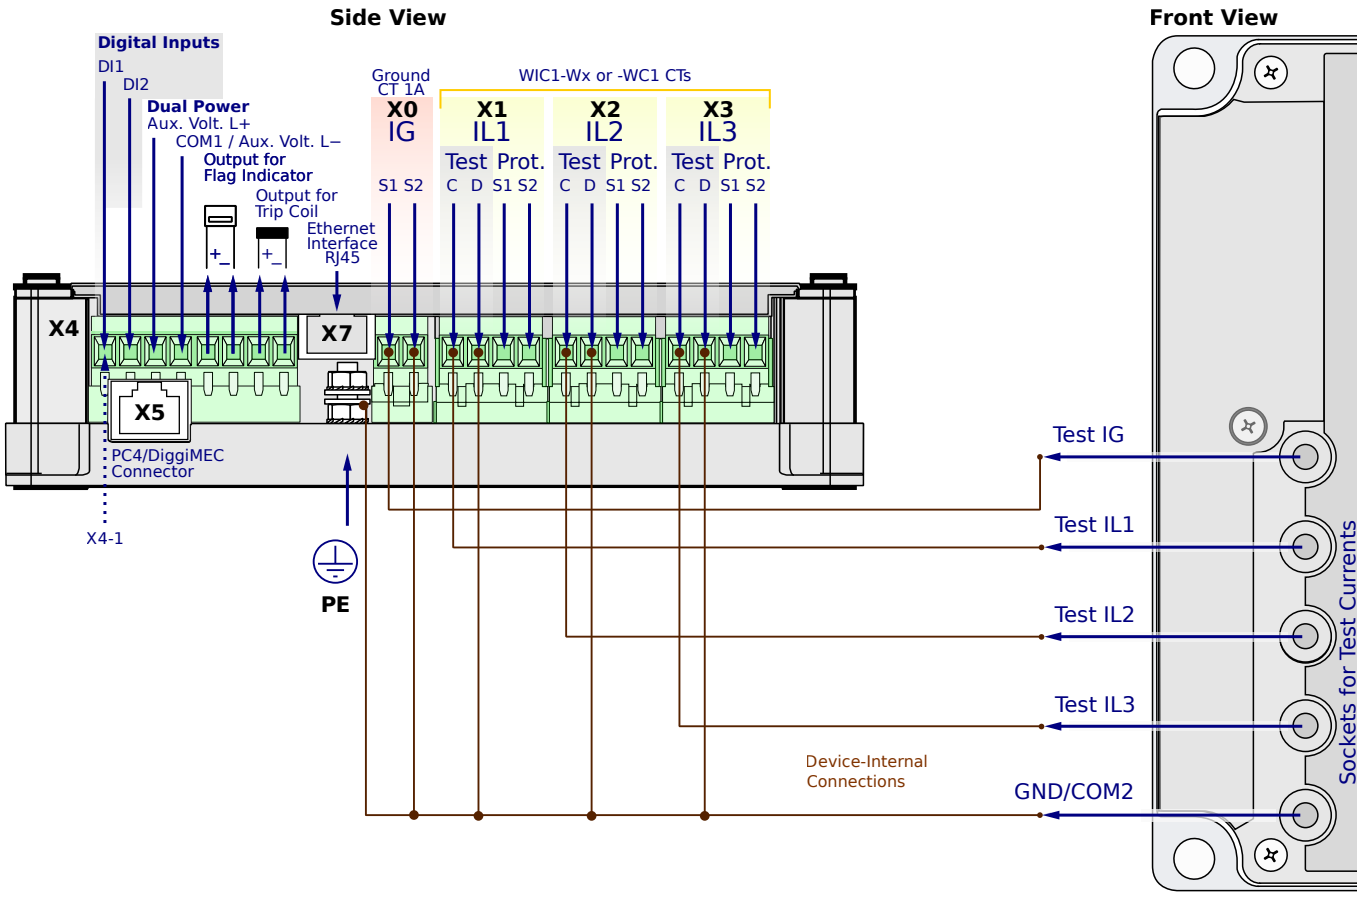


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0SCH

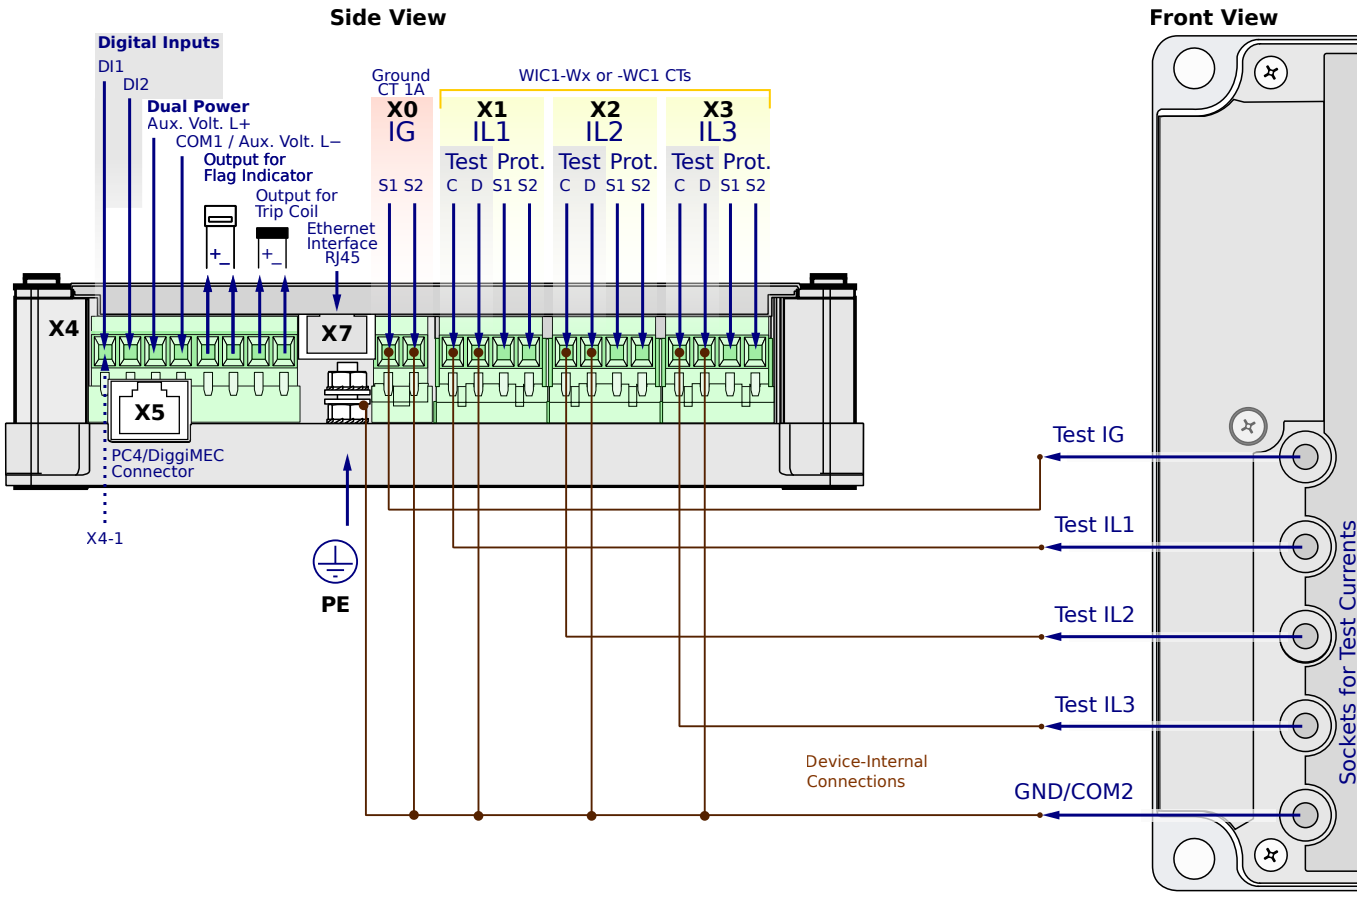


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0SL0

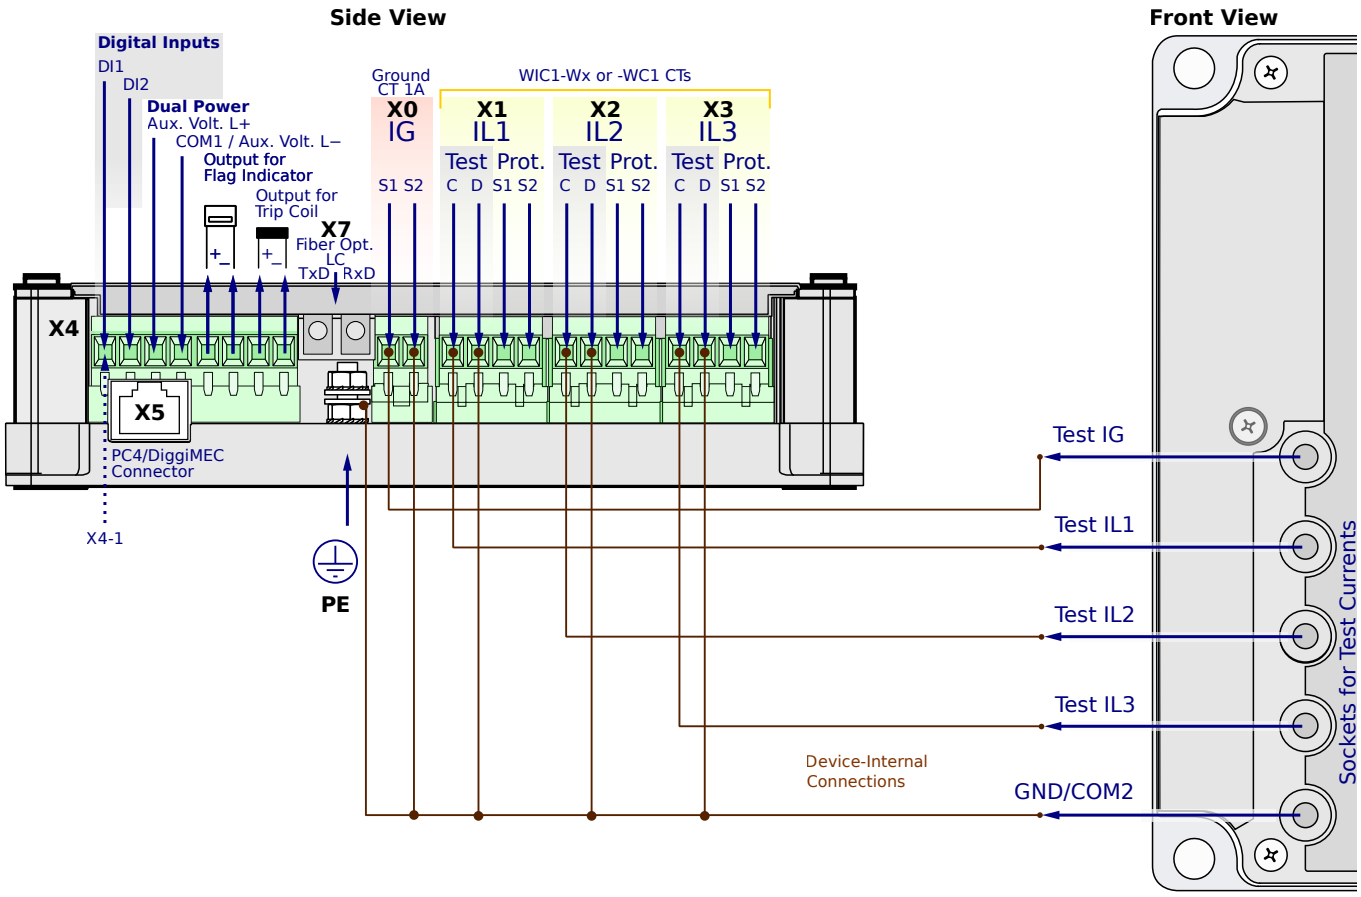


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0SLH

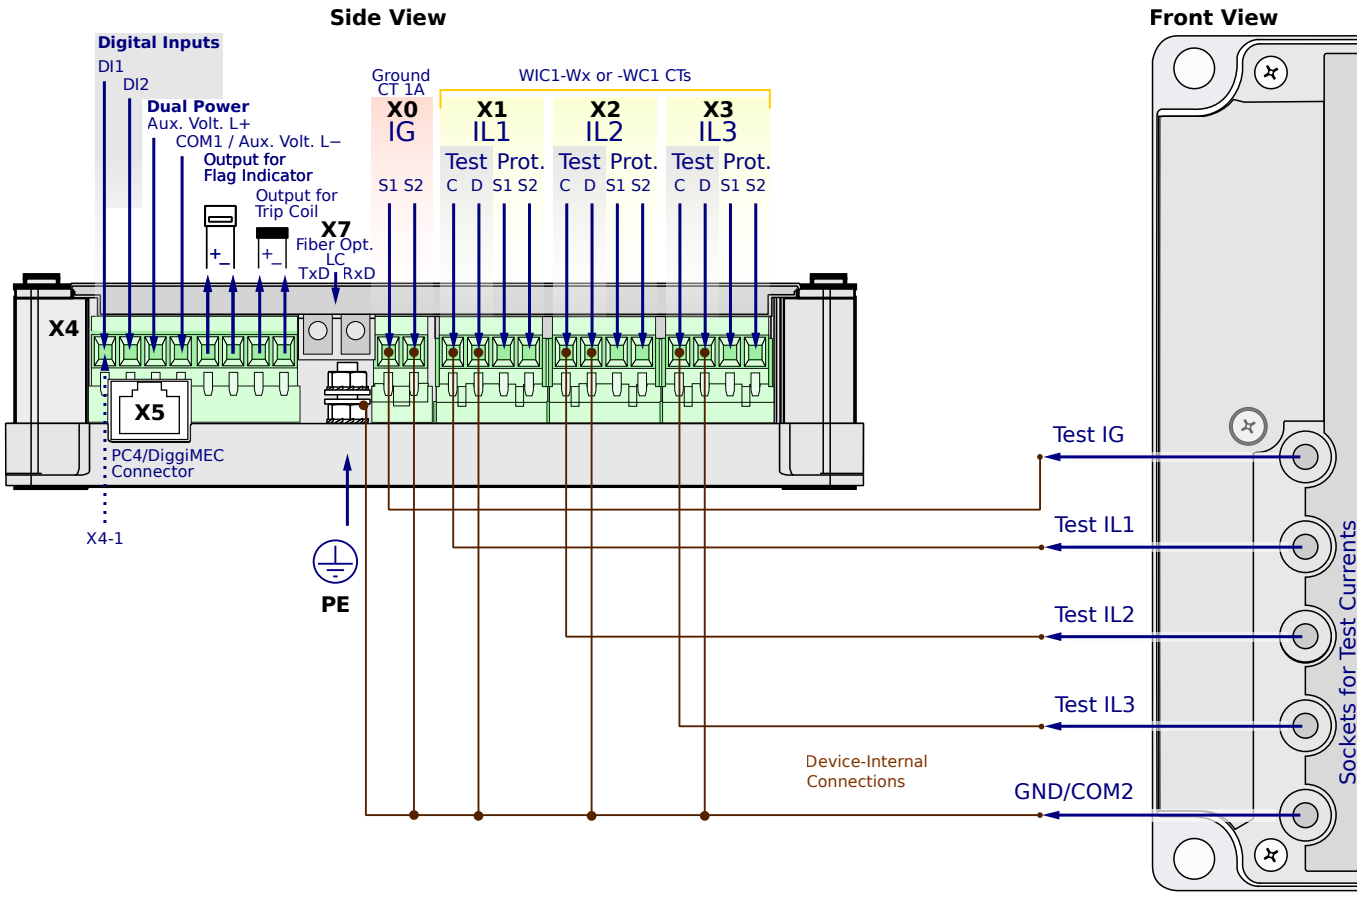


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0AA0

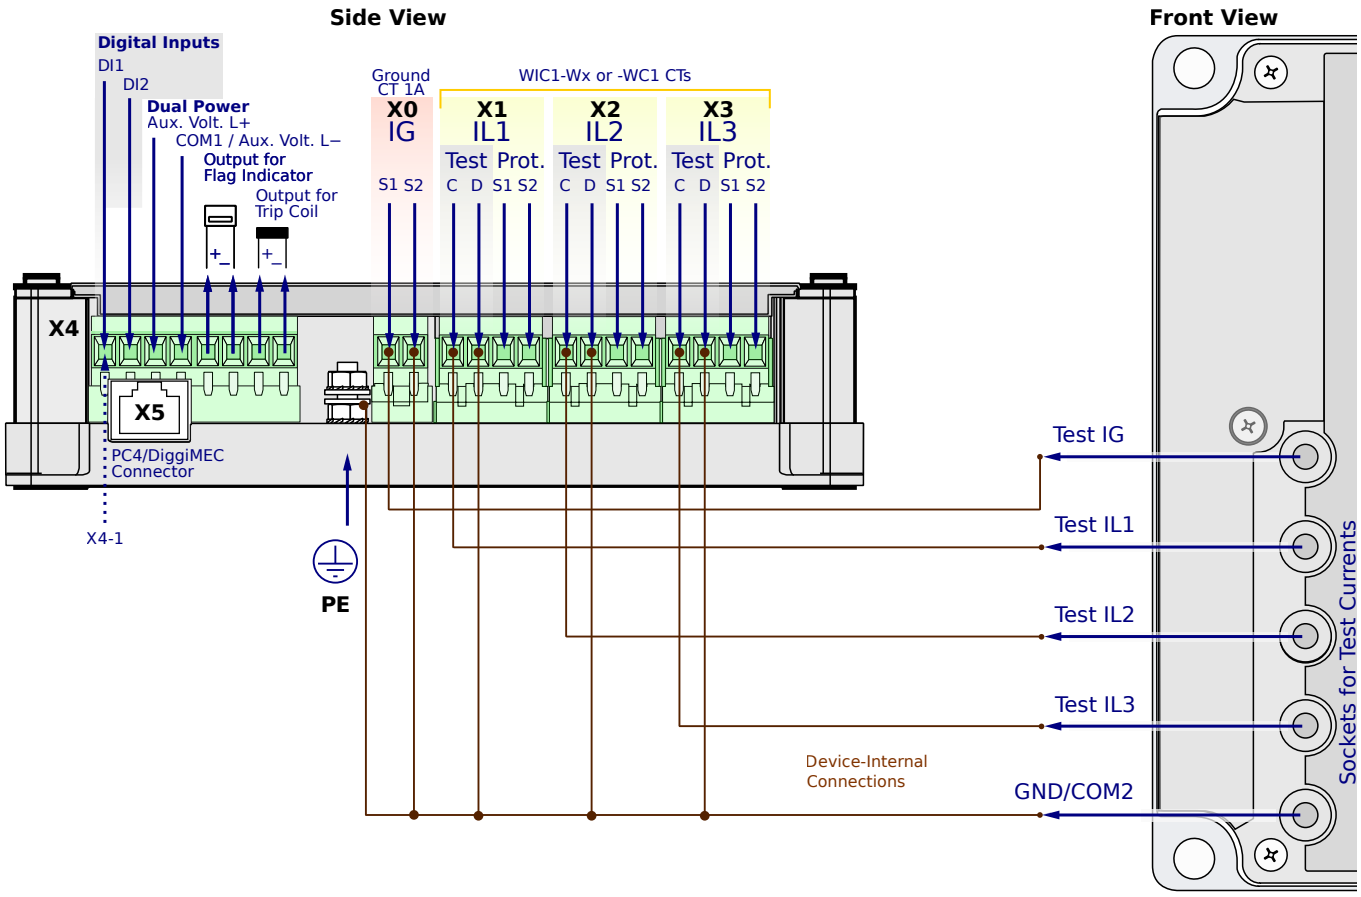


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0AAH

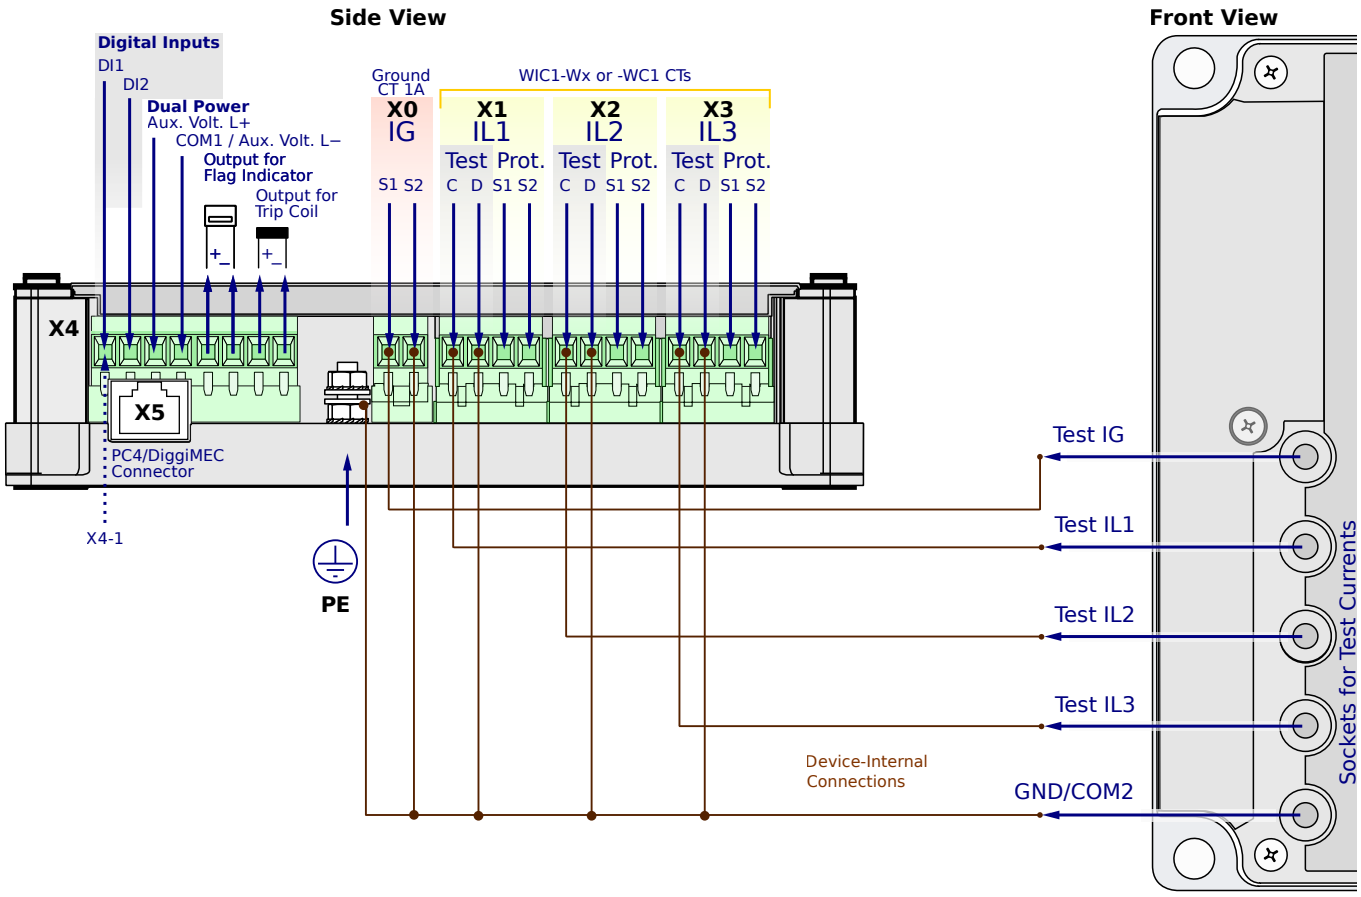


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0AB0

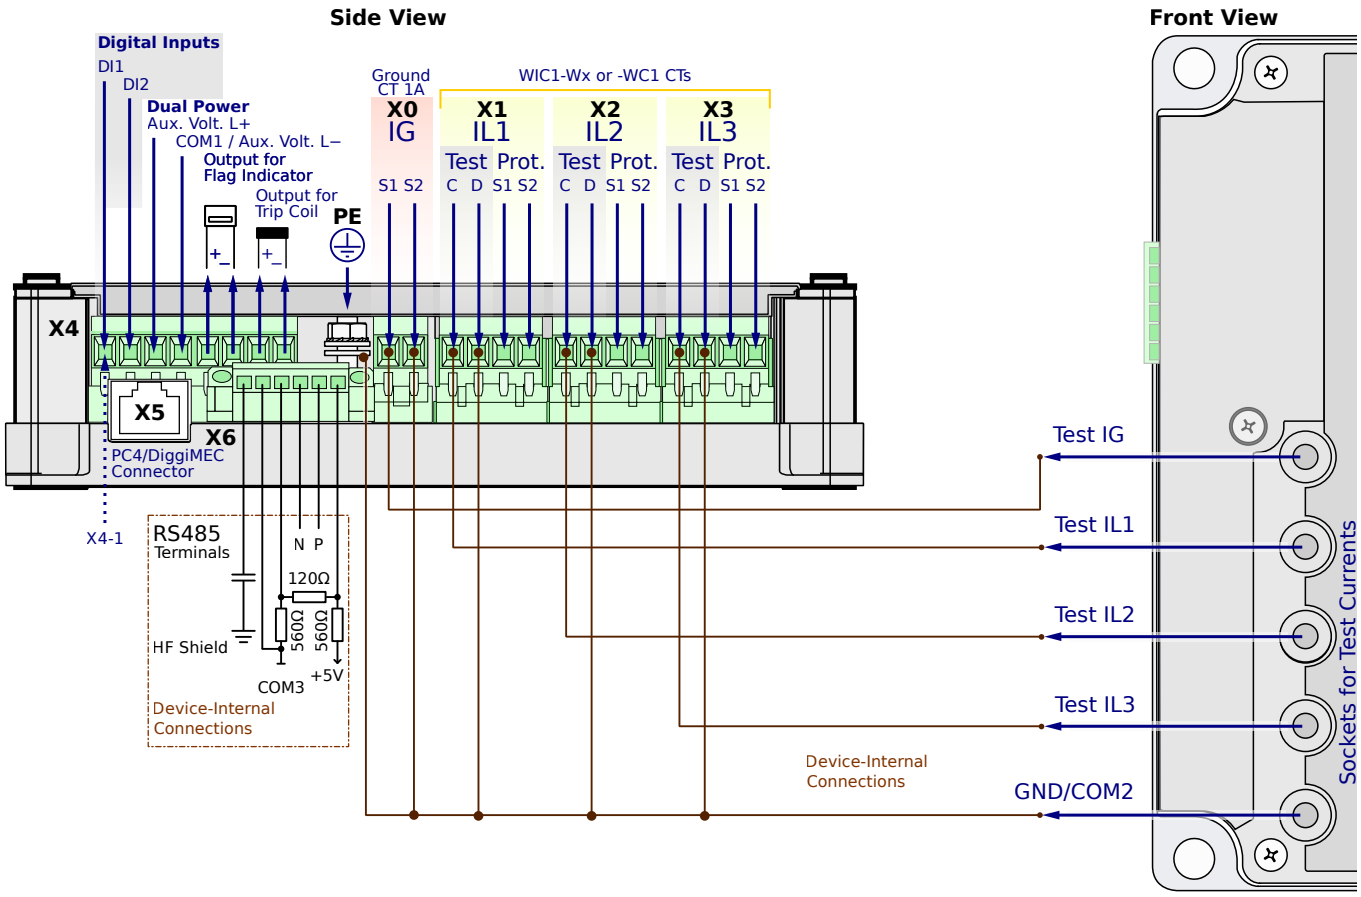


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0ABH

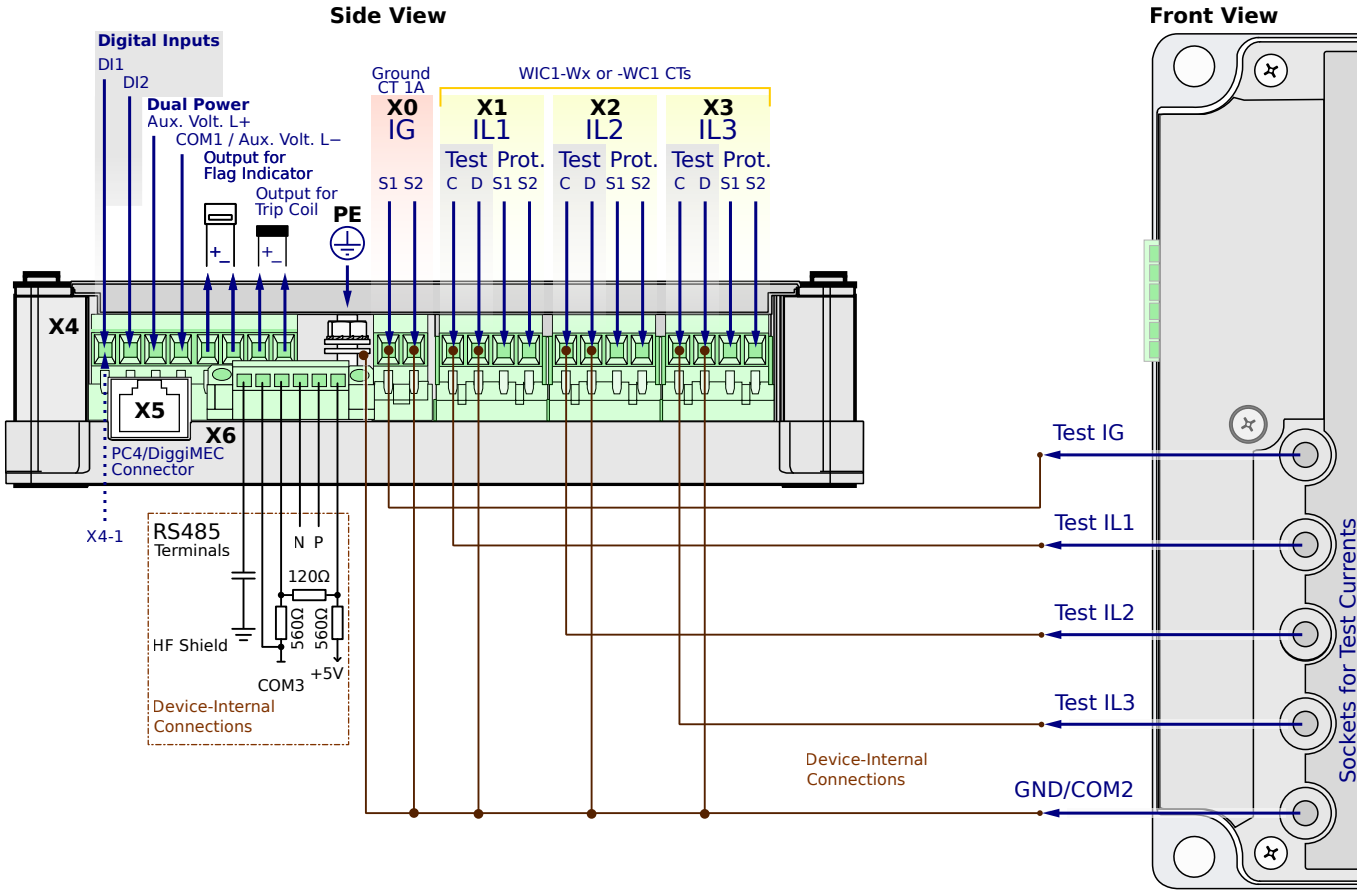


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0AC0

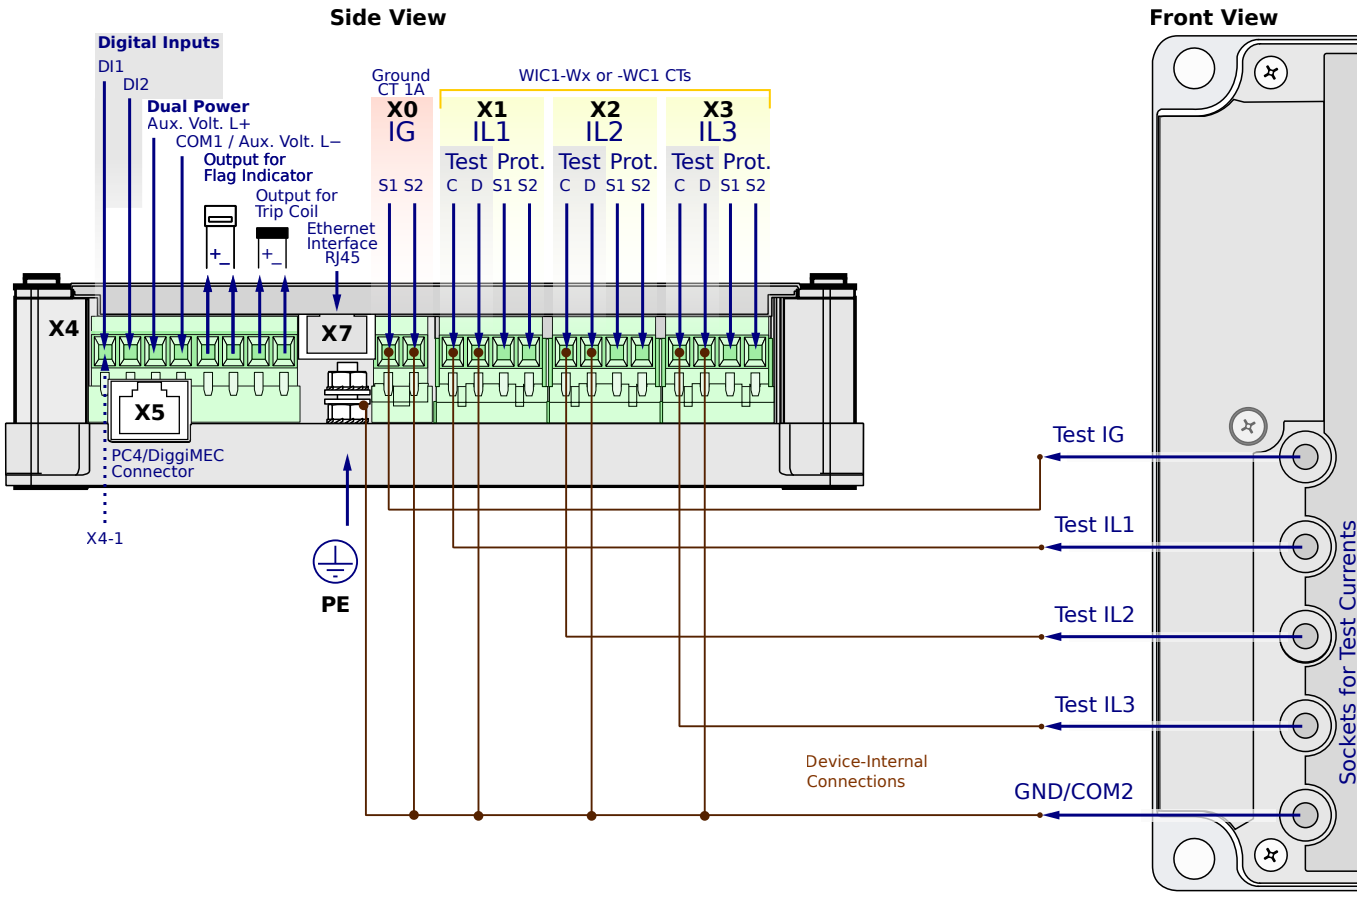


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0ACH

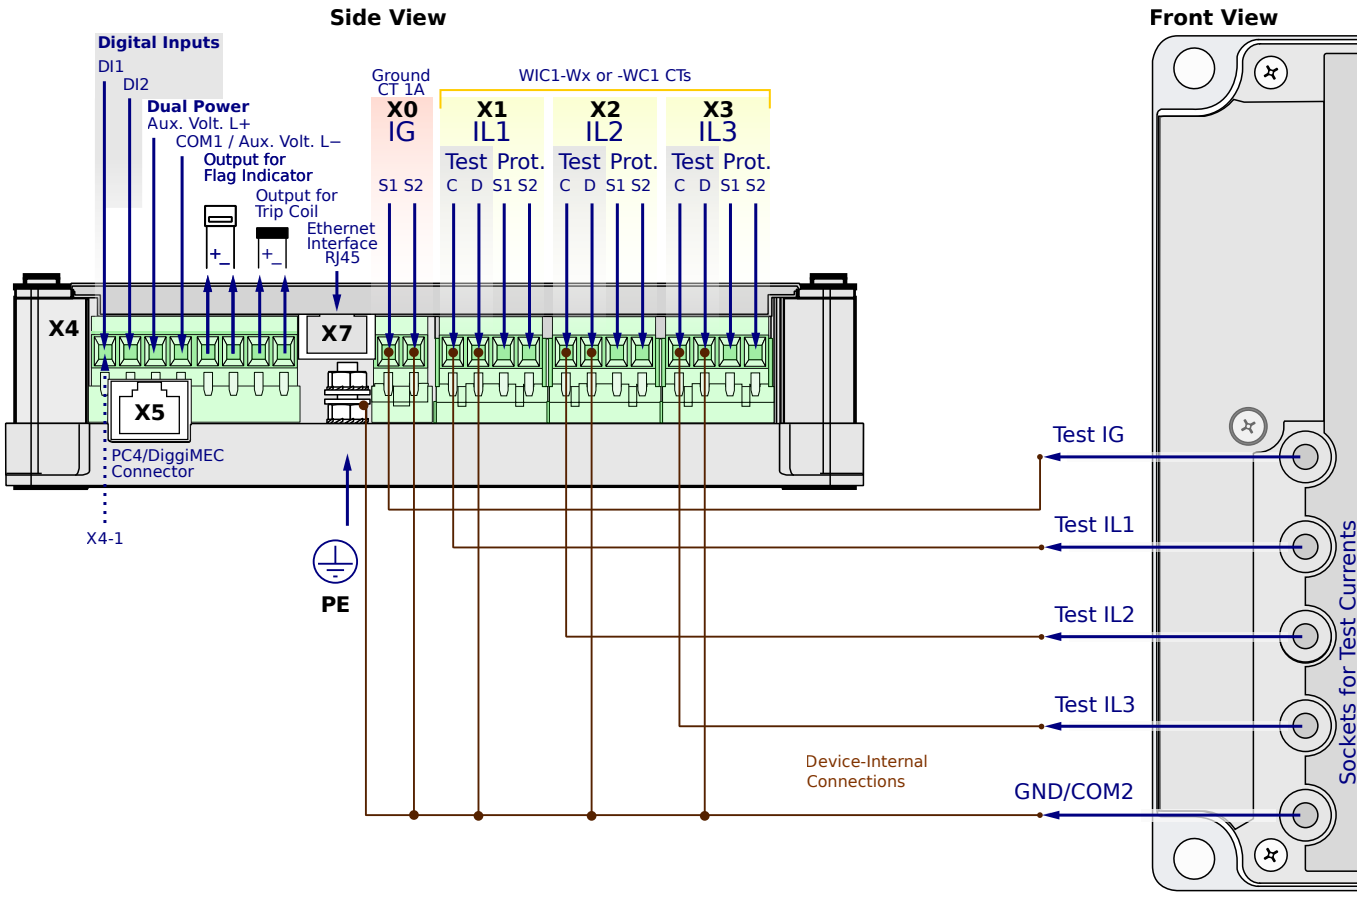


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0AL0

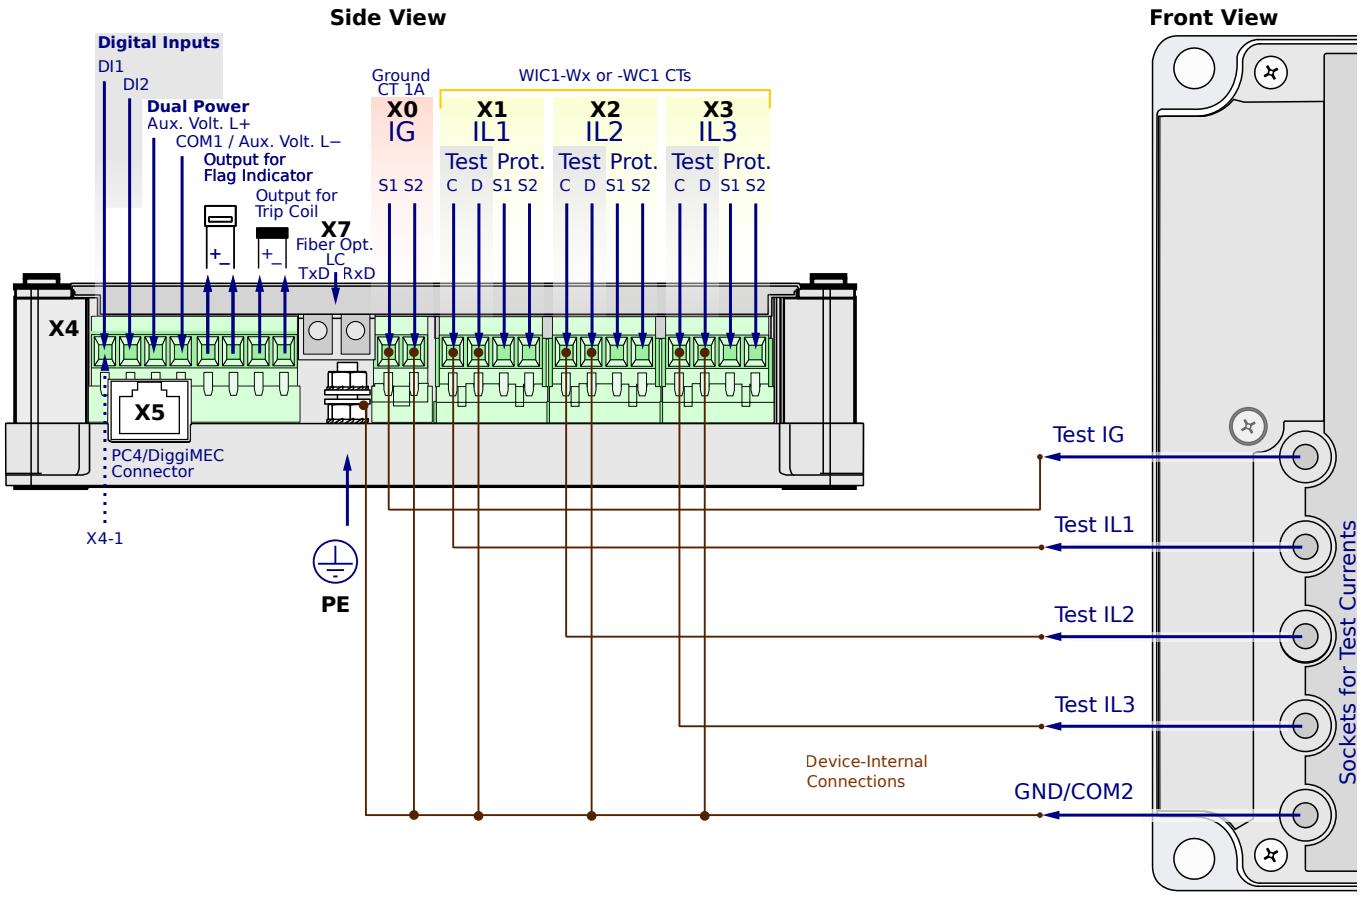


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0ALH

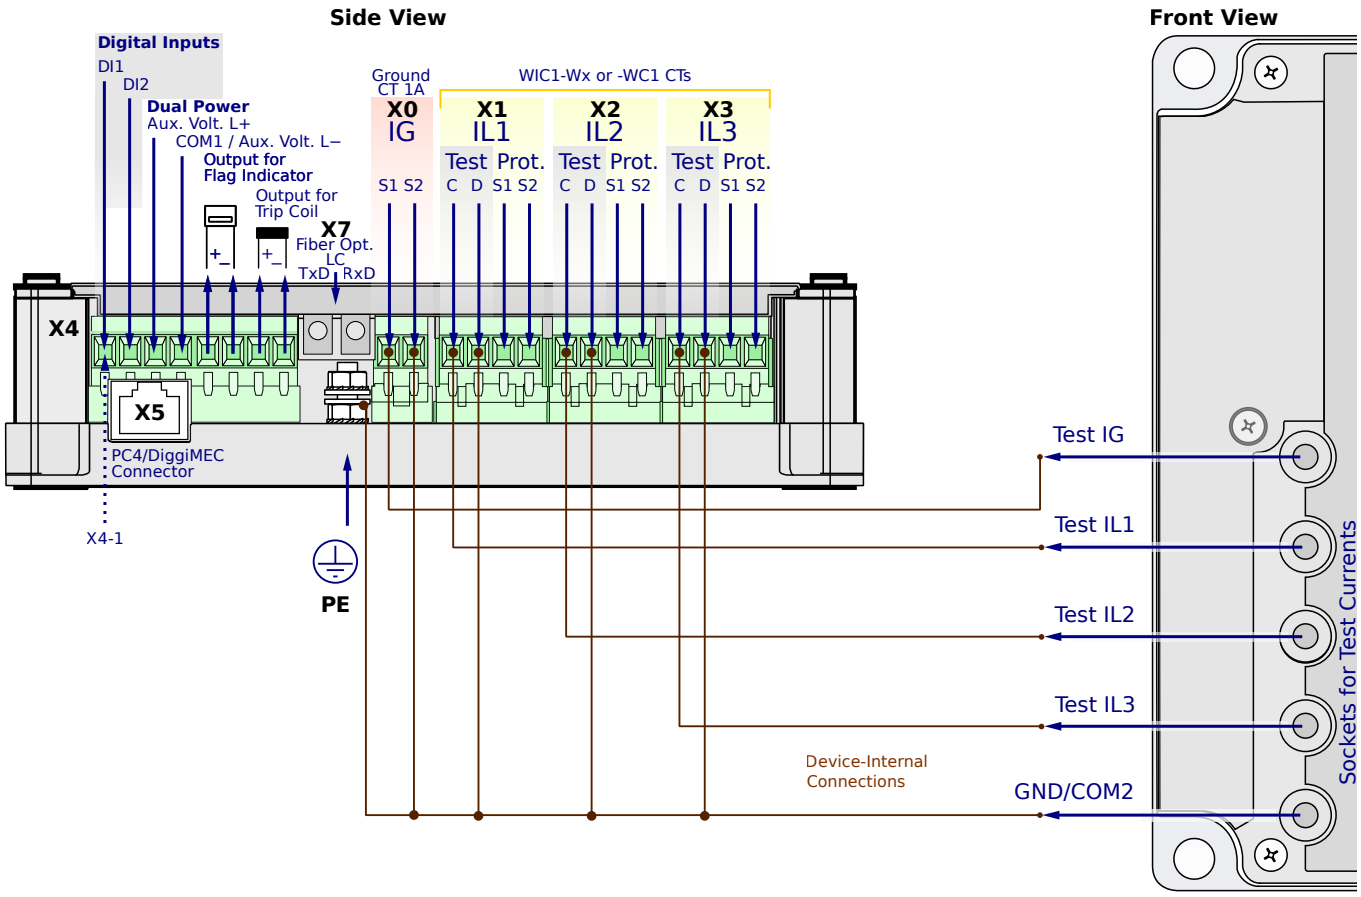


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0PA0

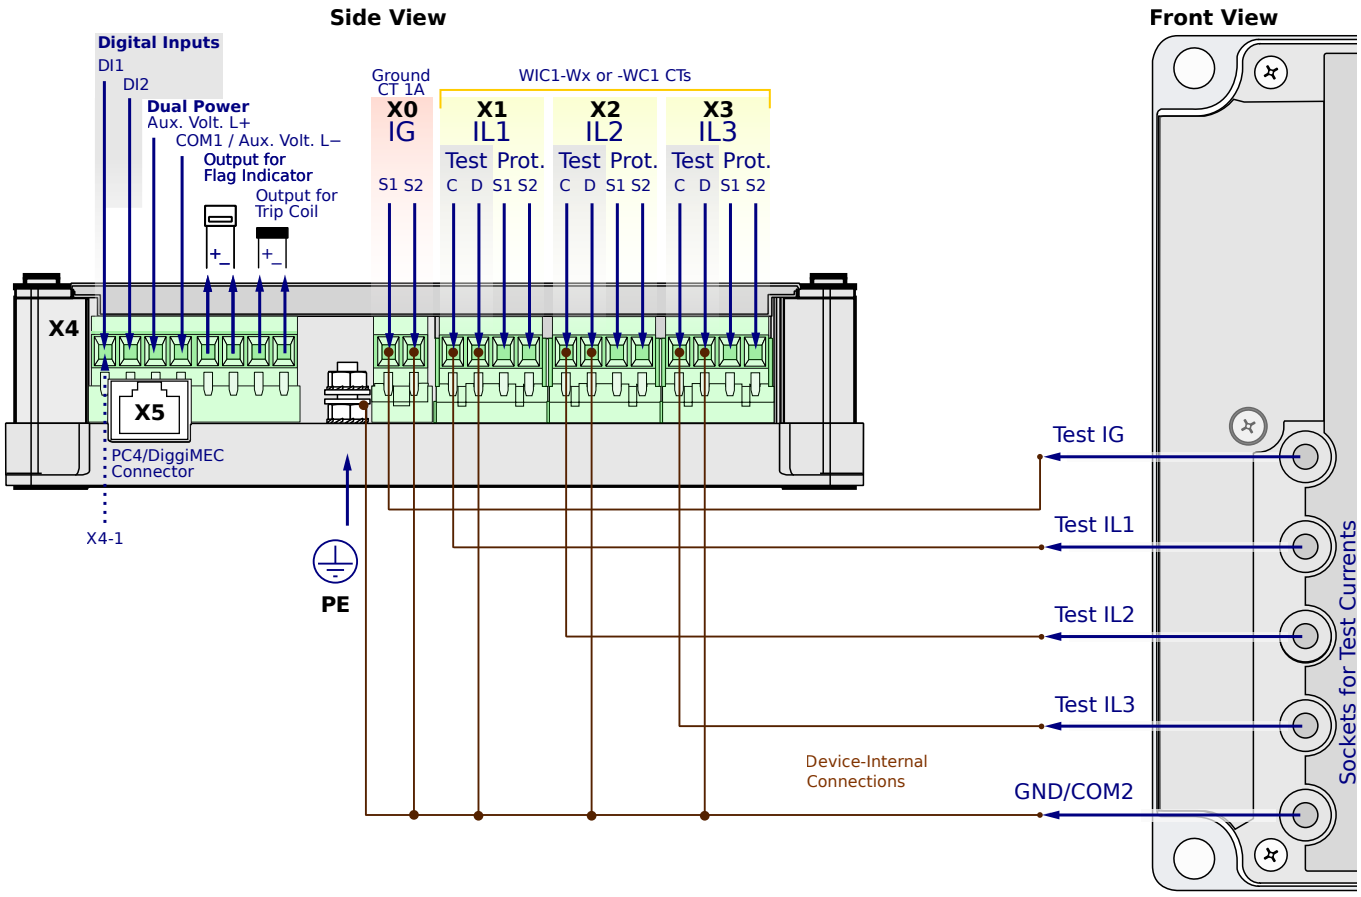


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0PAH

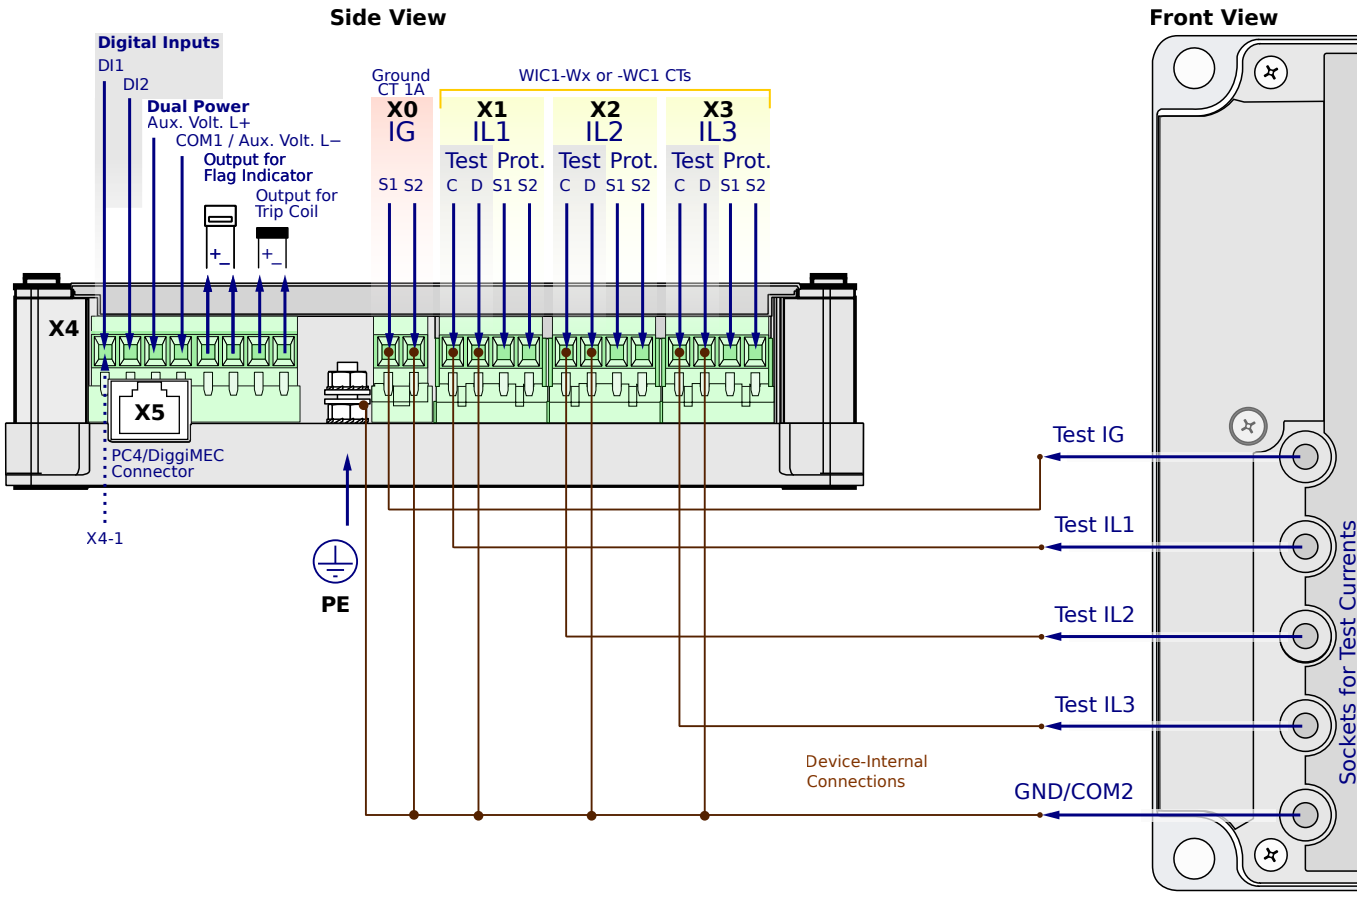


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND0PB0

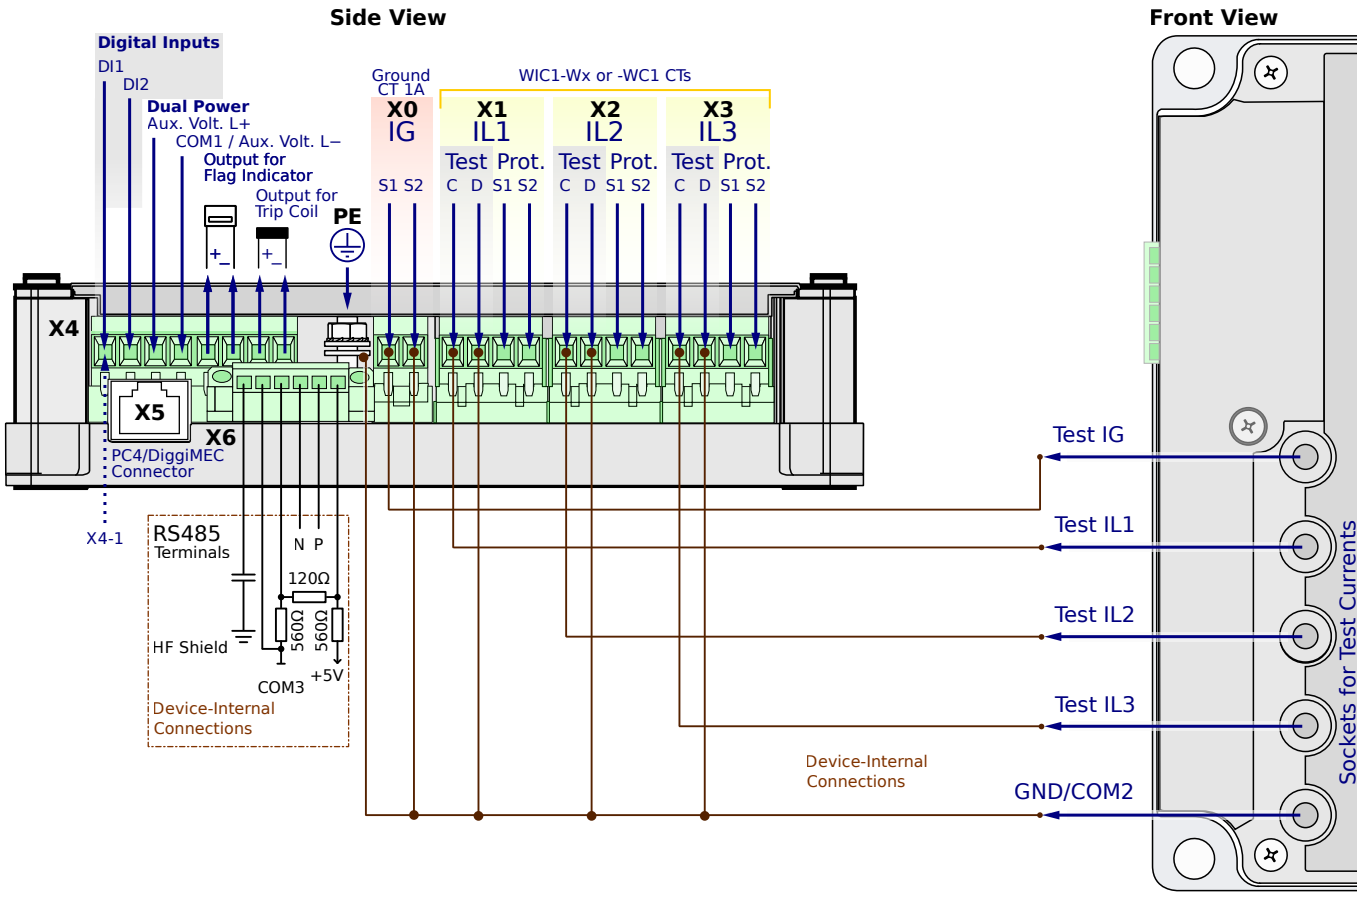


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0PBH

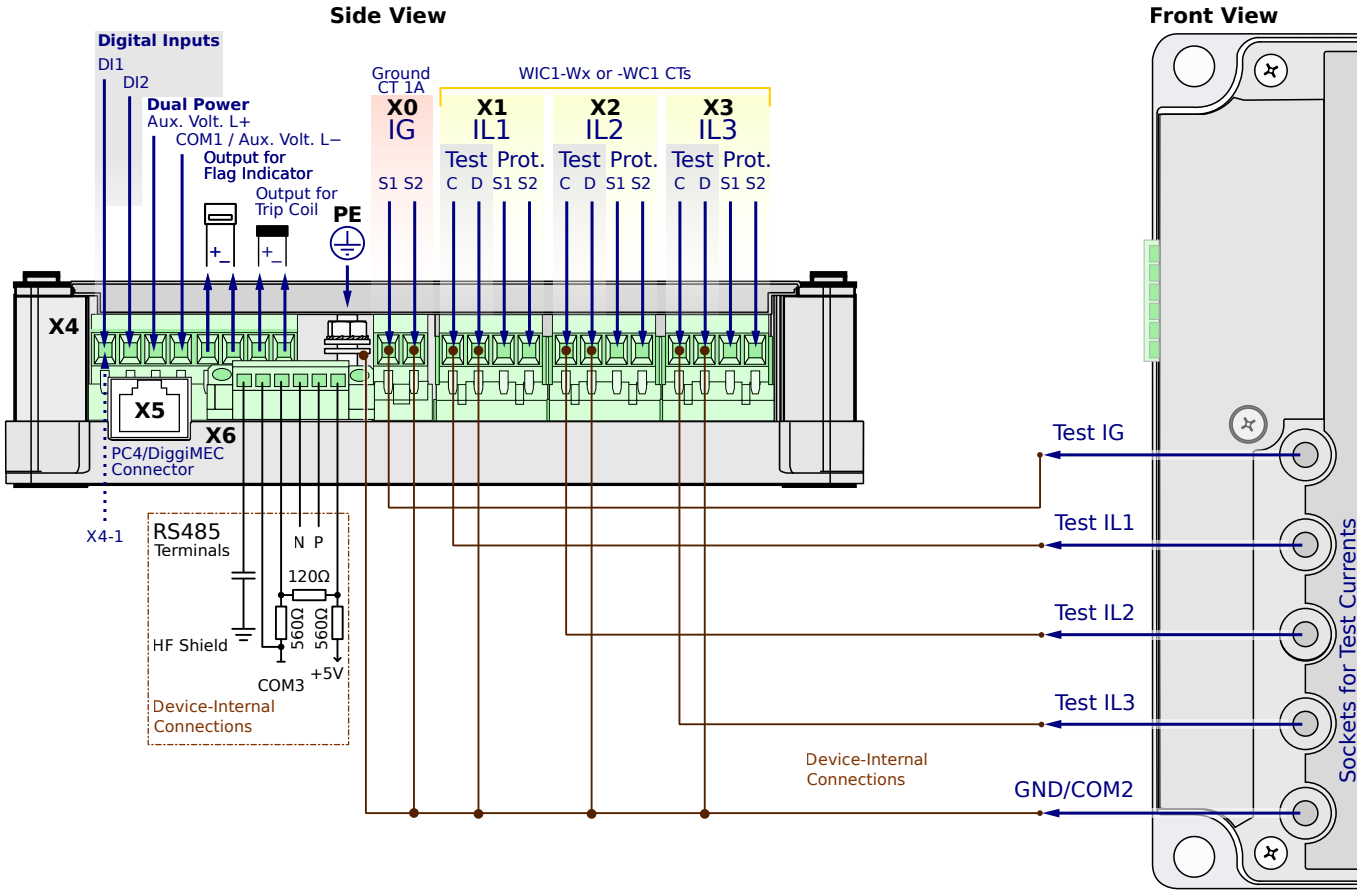


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND0PC0

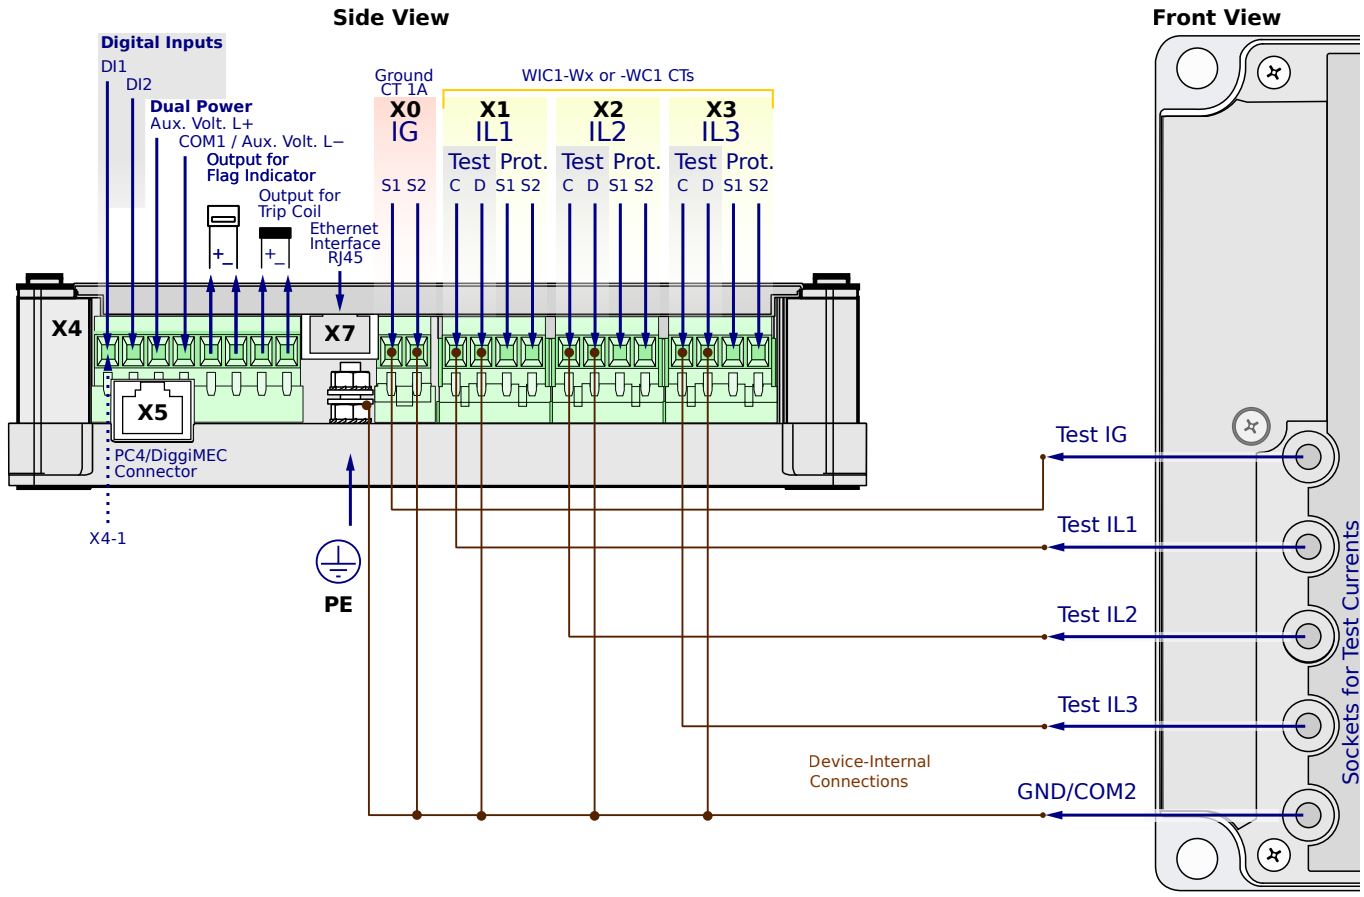


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0PCH

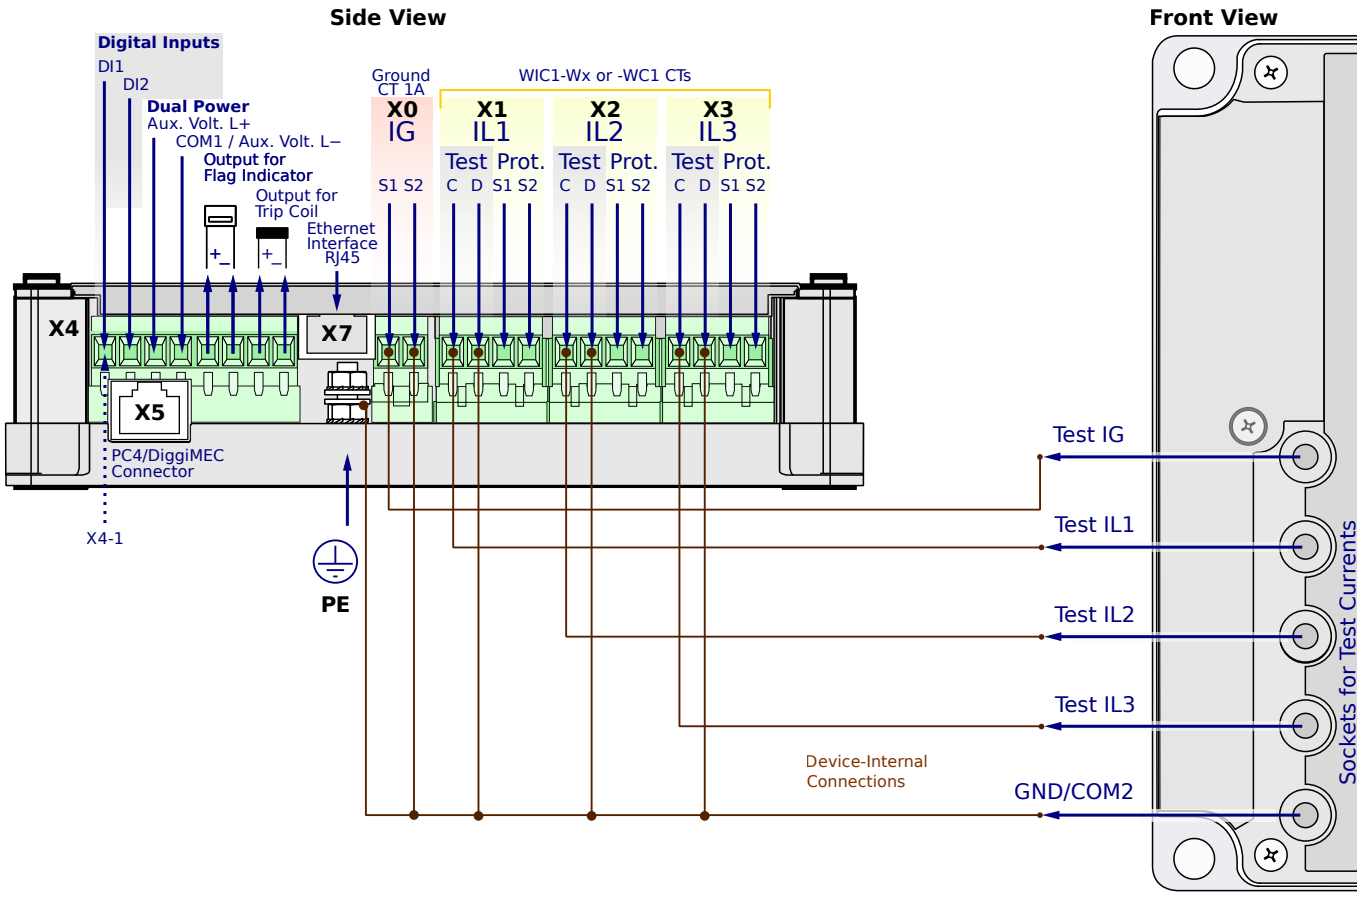


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND0PL0

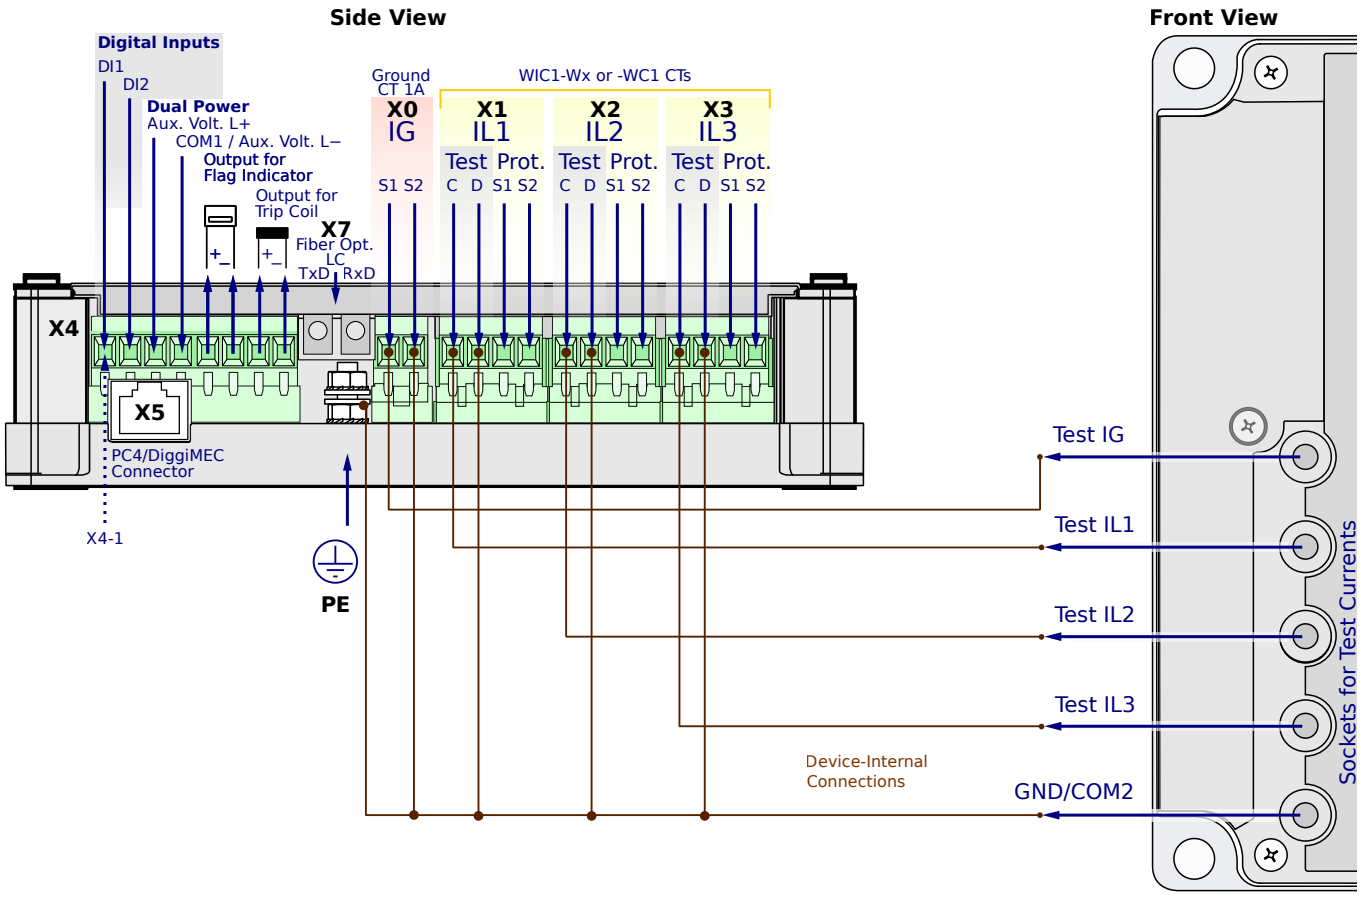


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND0PLH

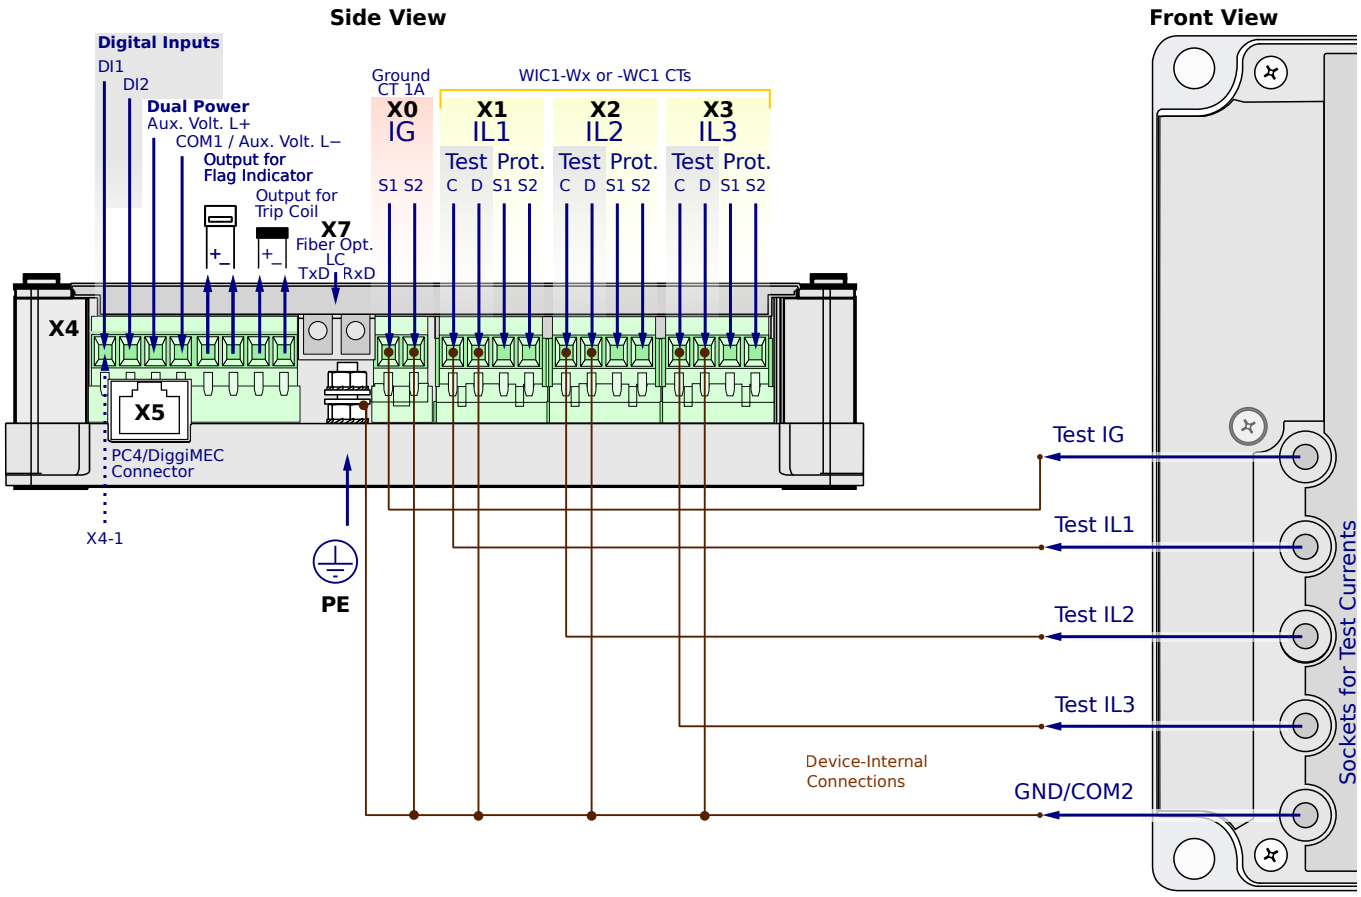


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1SA0

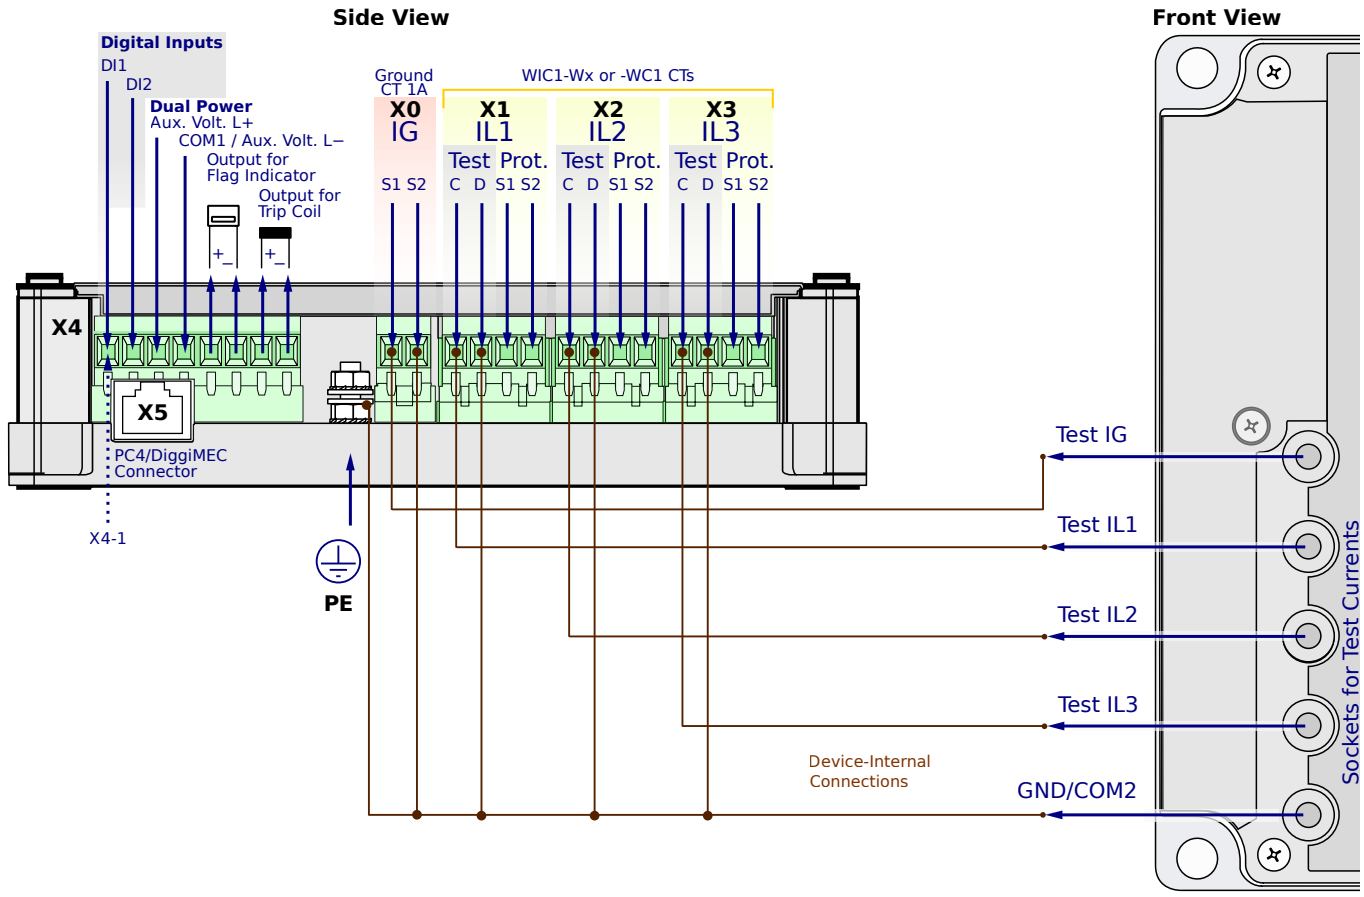


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1SAH

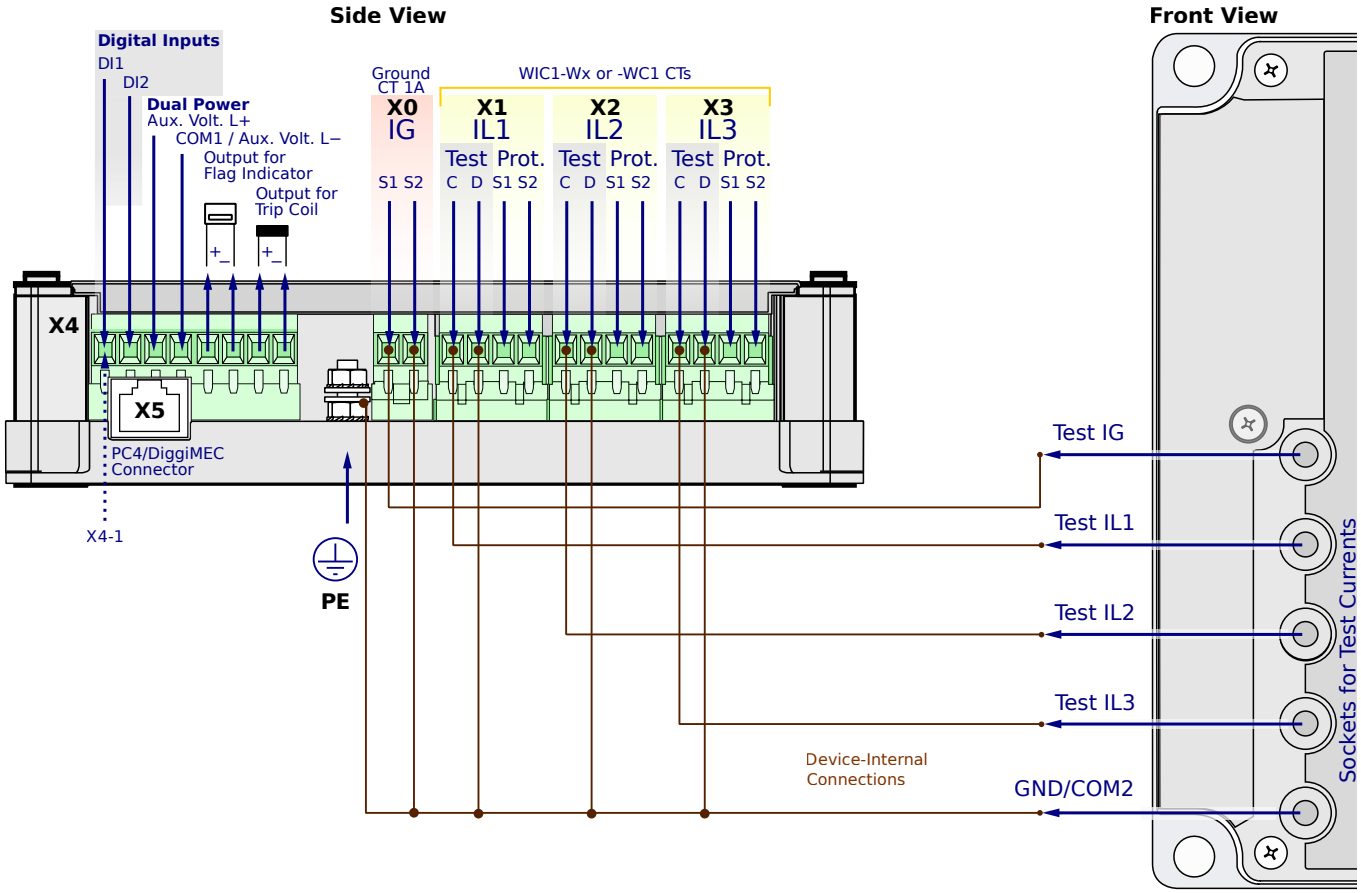


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1SB0

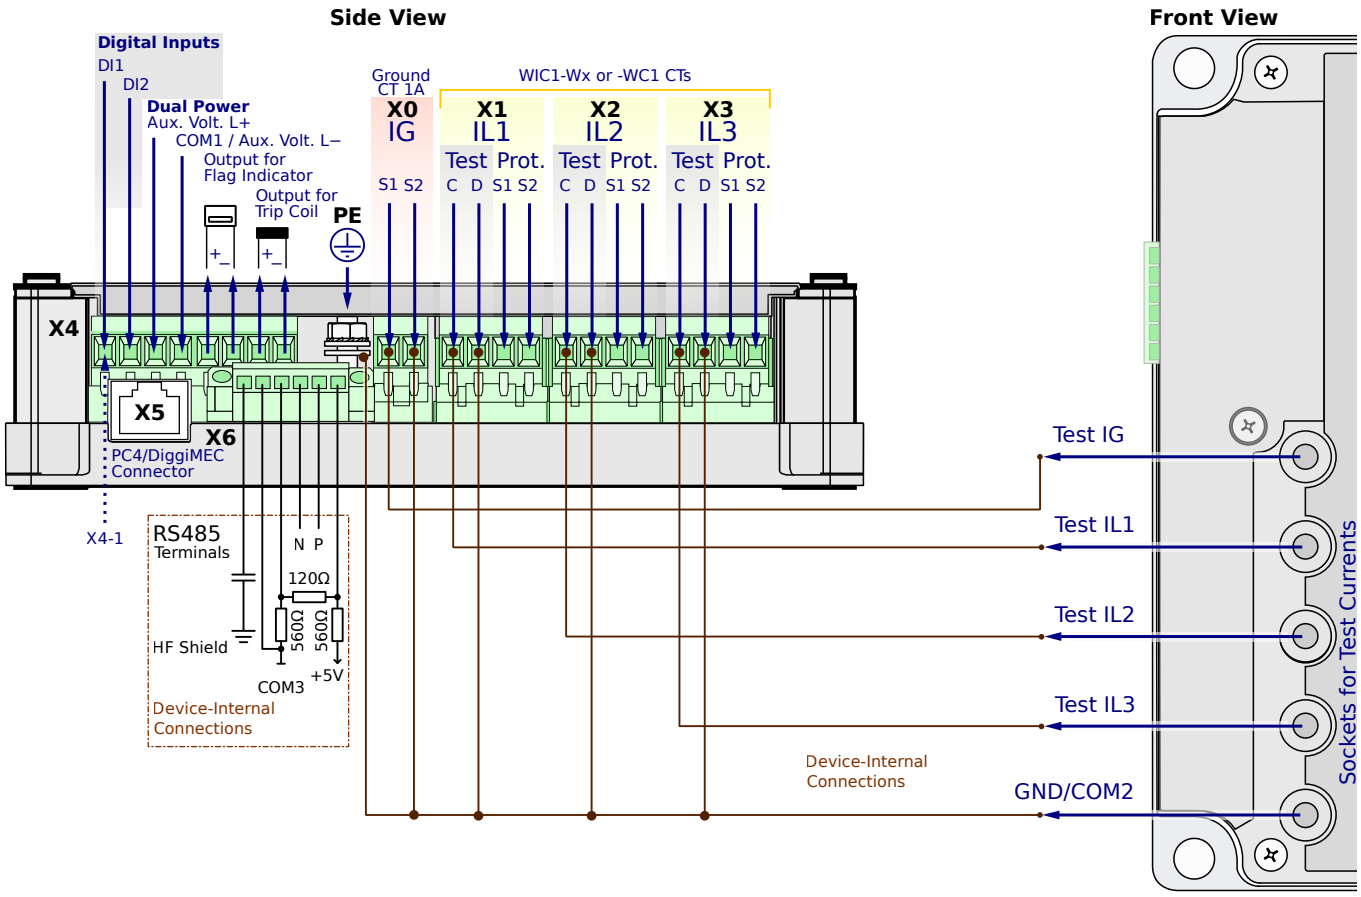


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1SBH

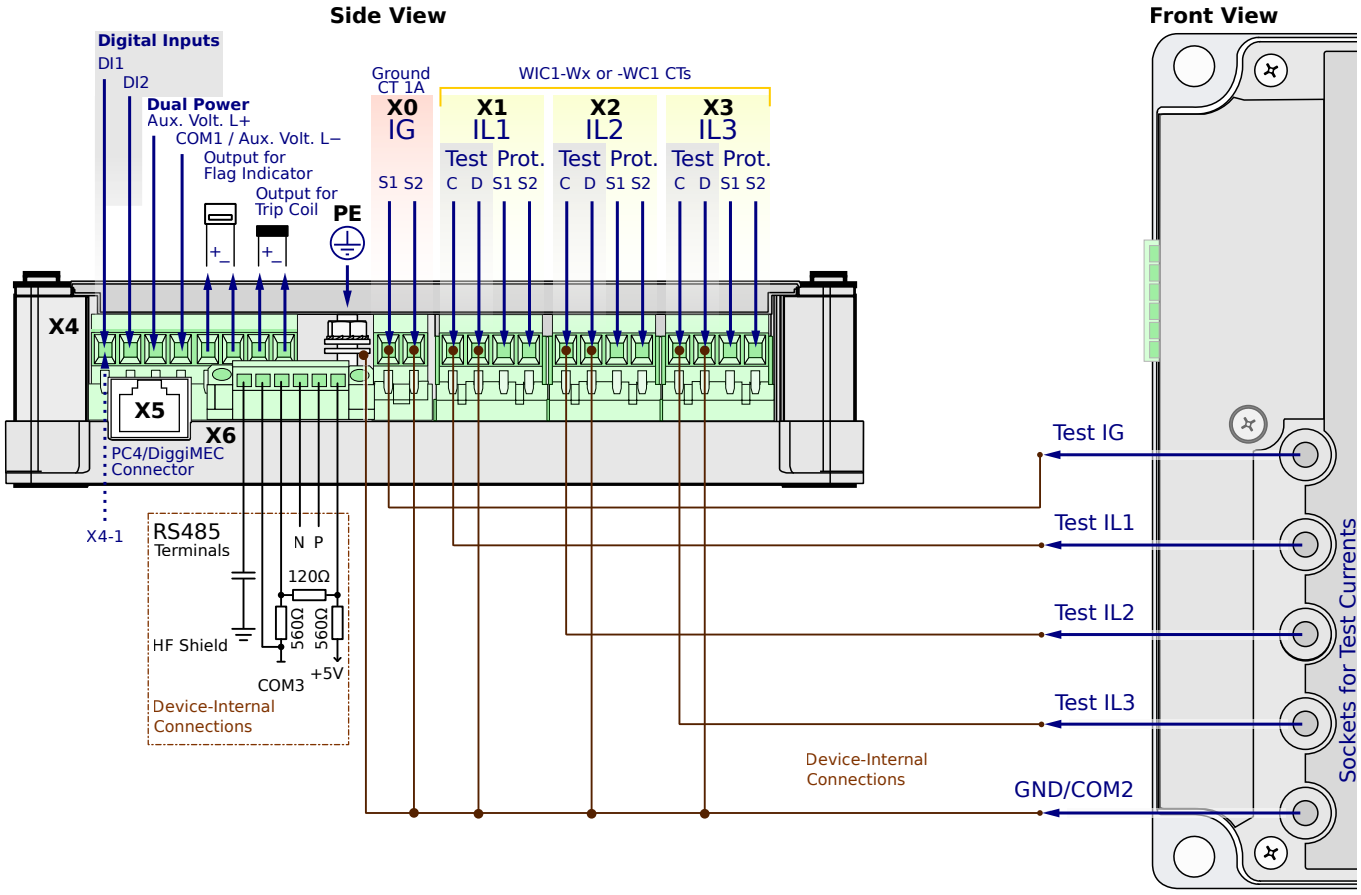


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1SC0

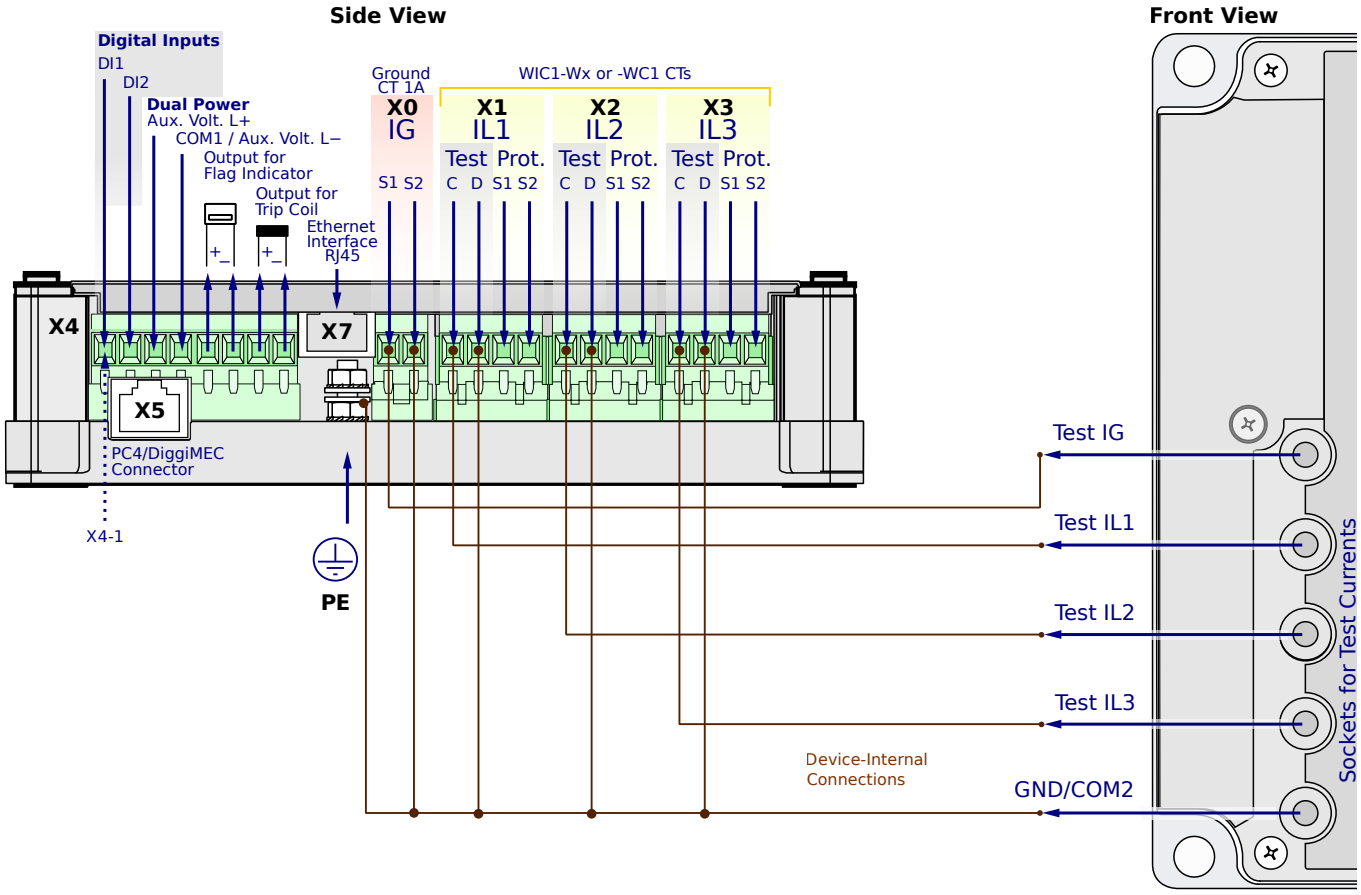


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1SCH

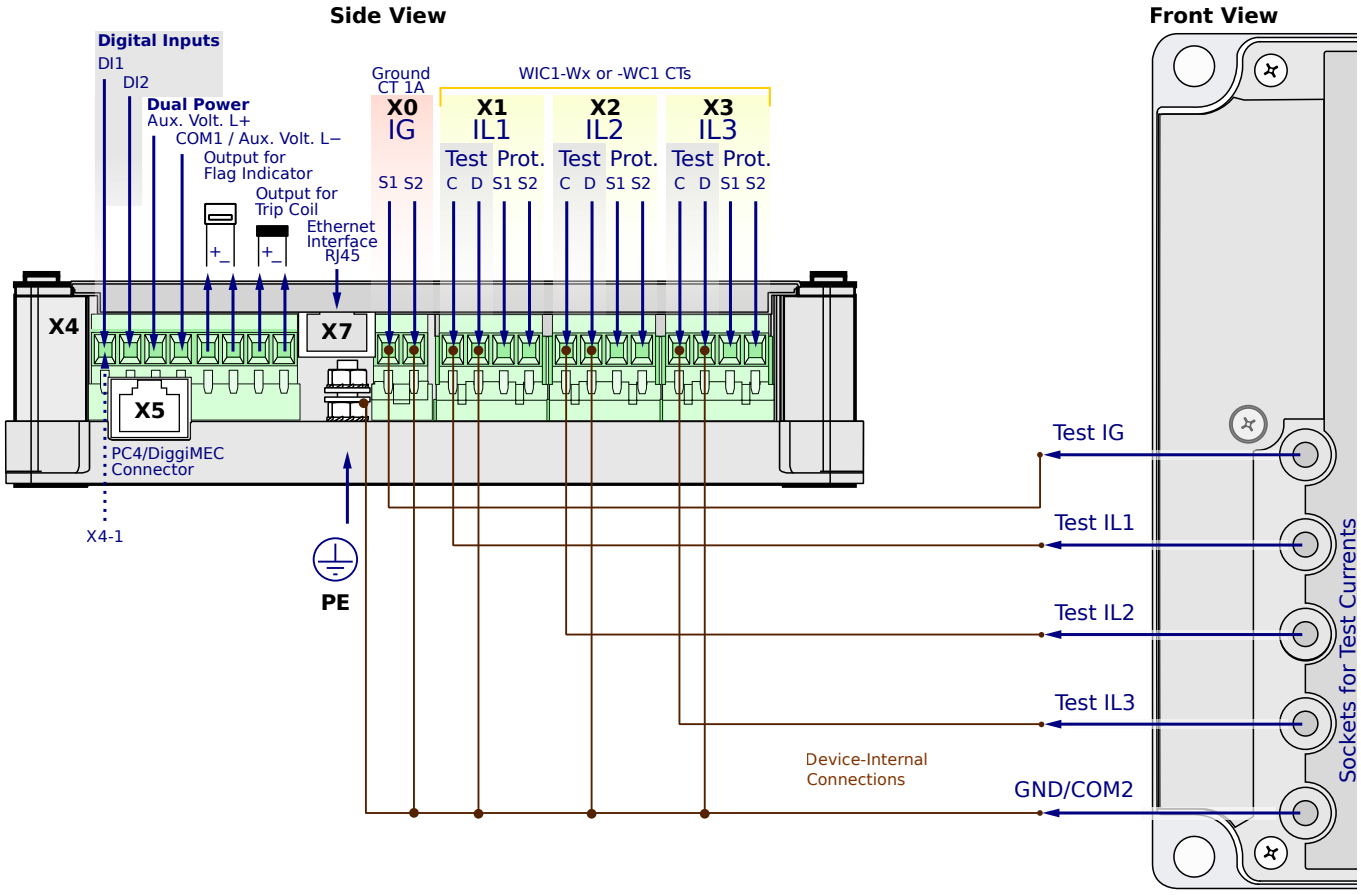


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1SL0

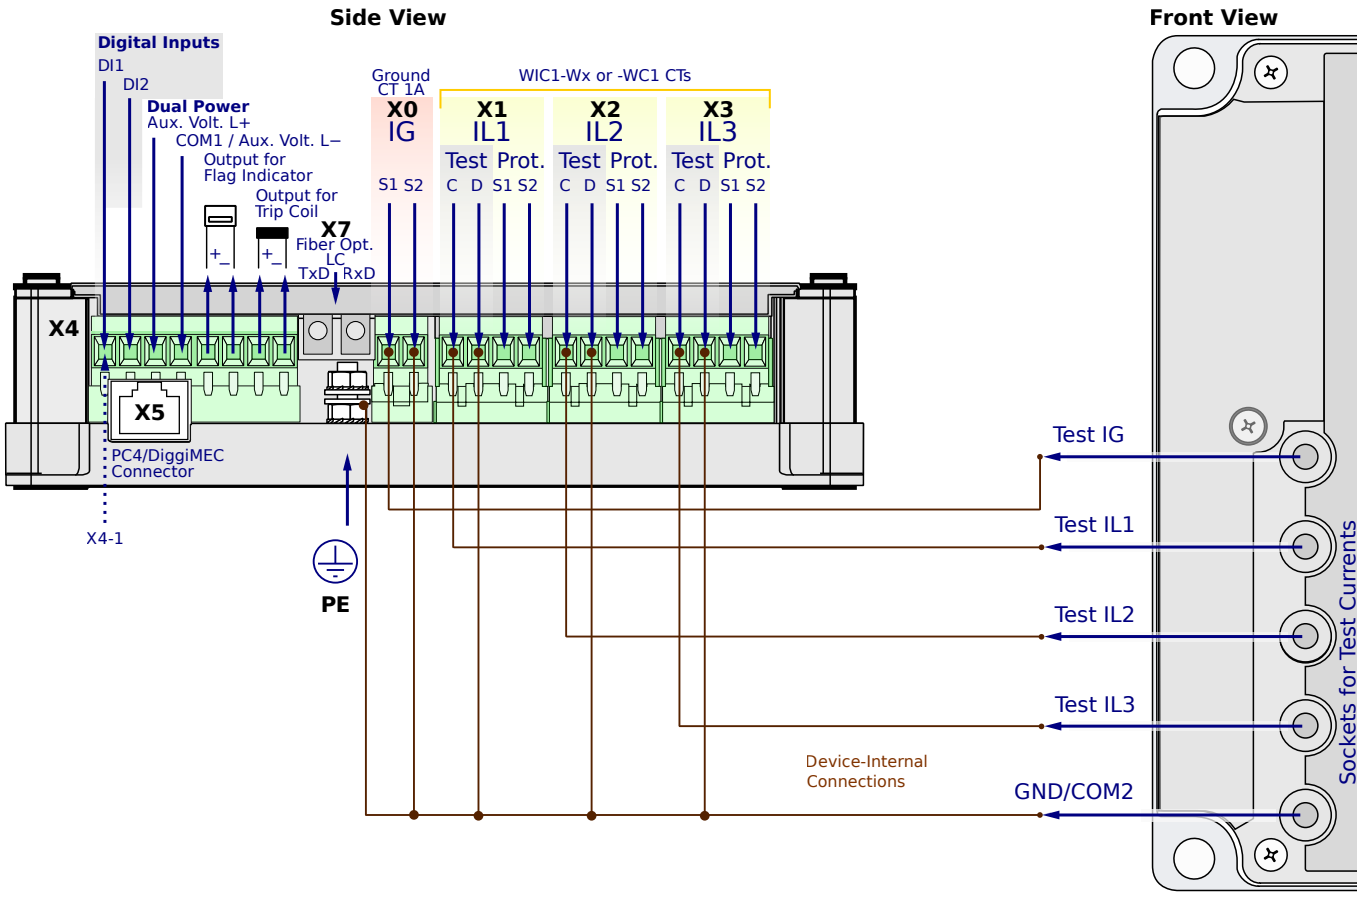


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1SLH

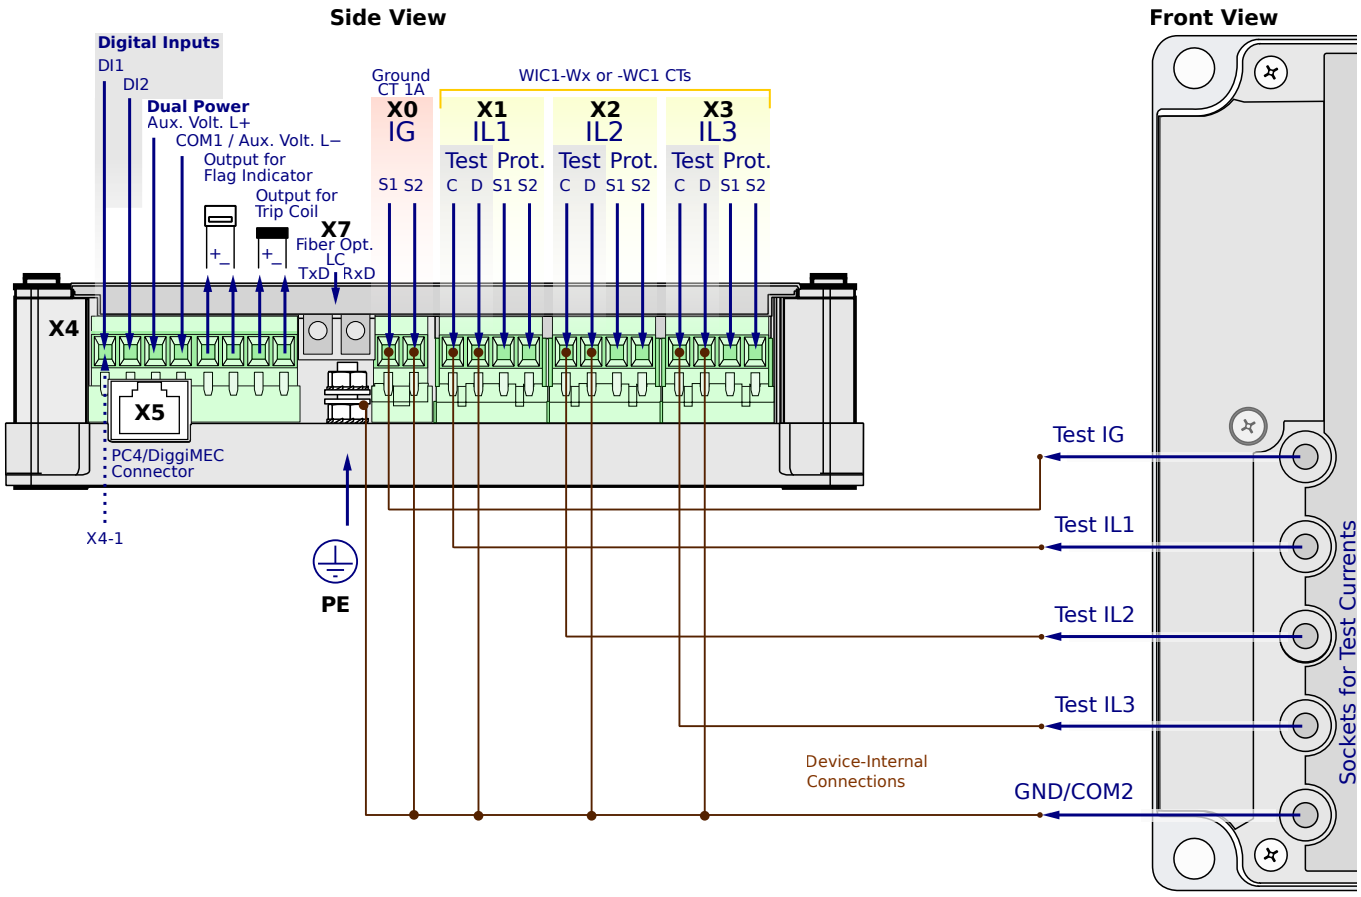


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1AA0

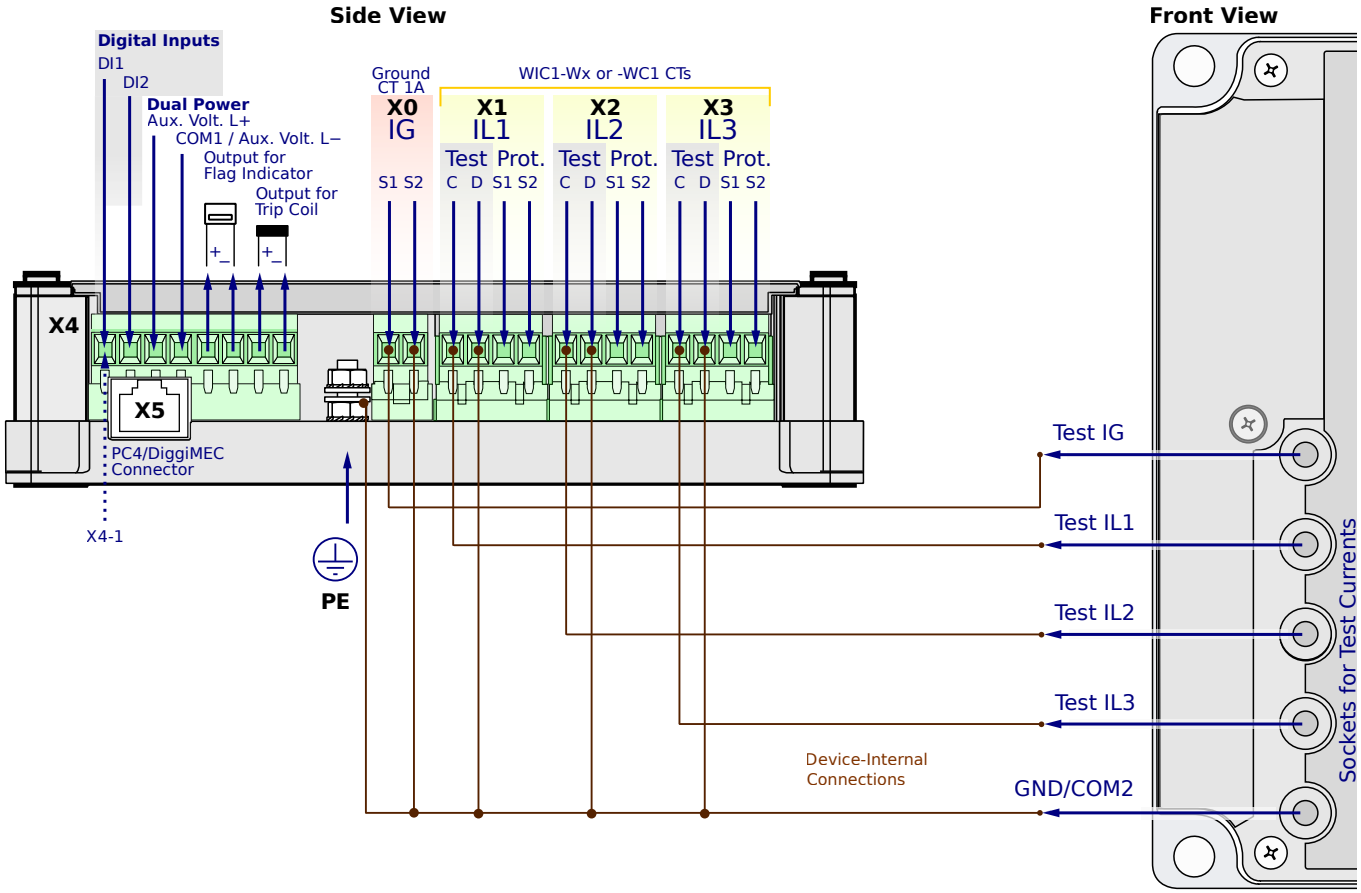


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1AAH

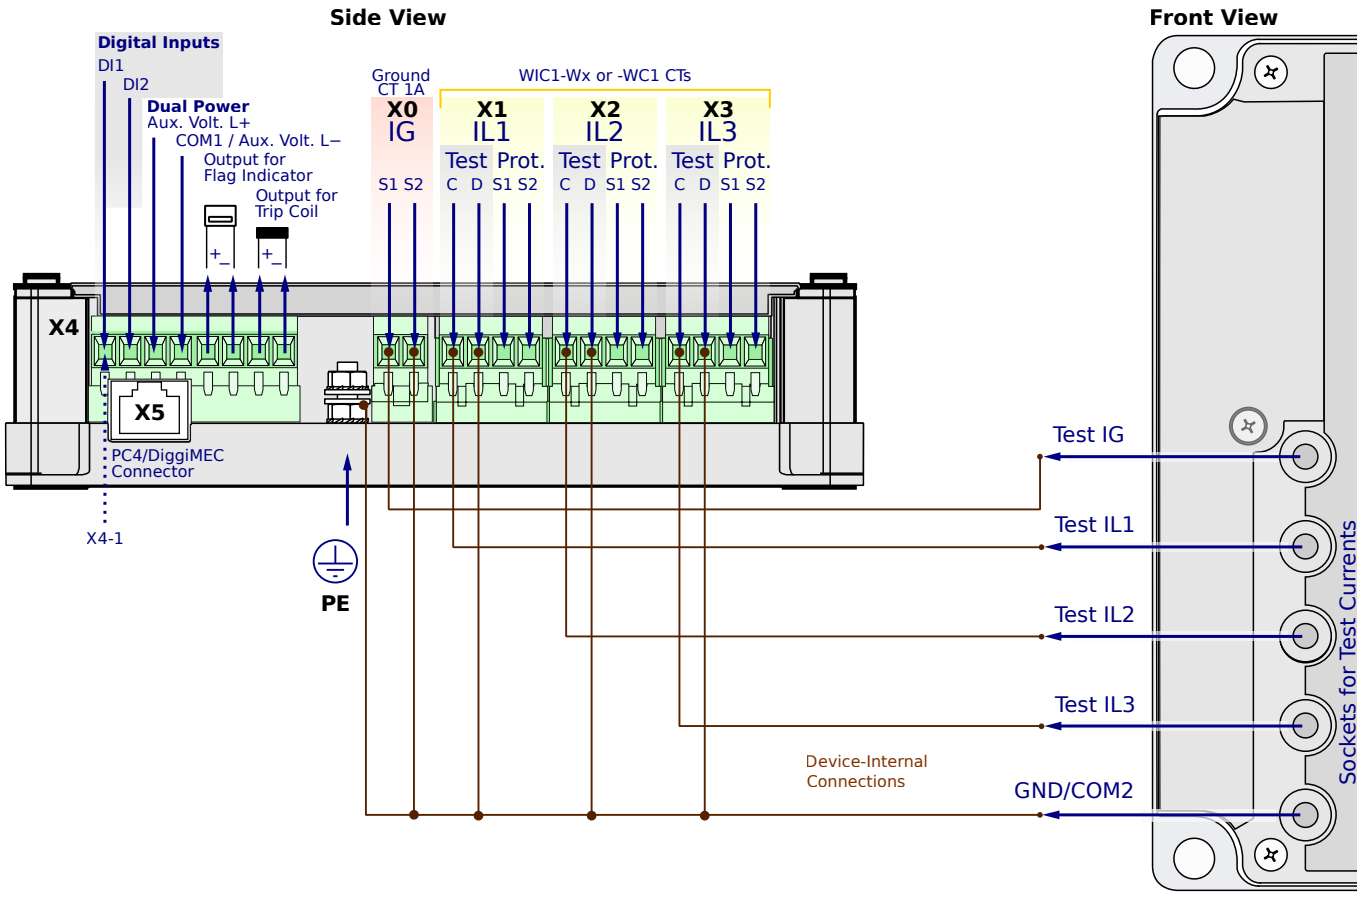


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1AB0

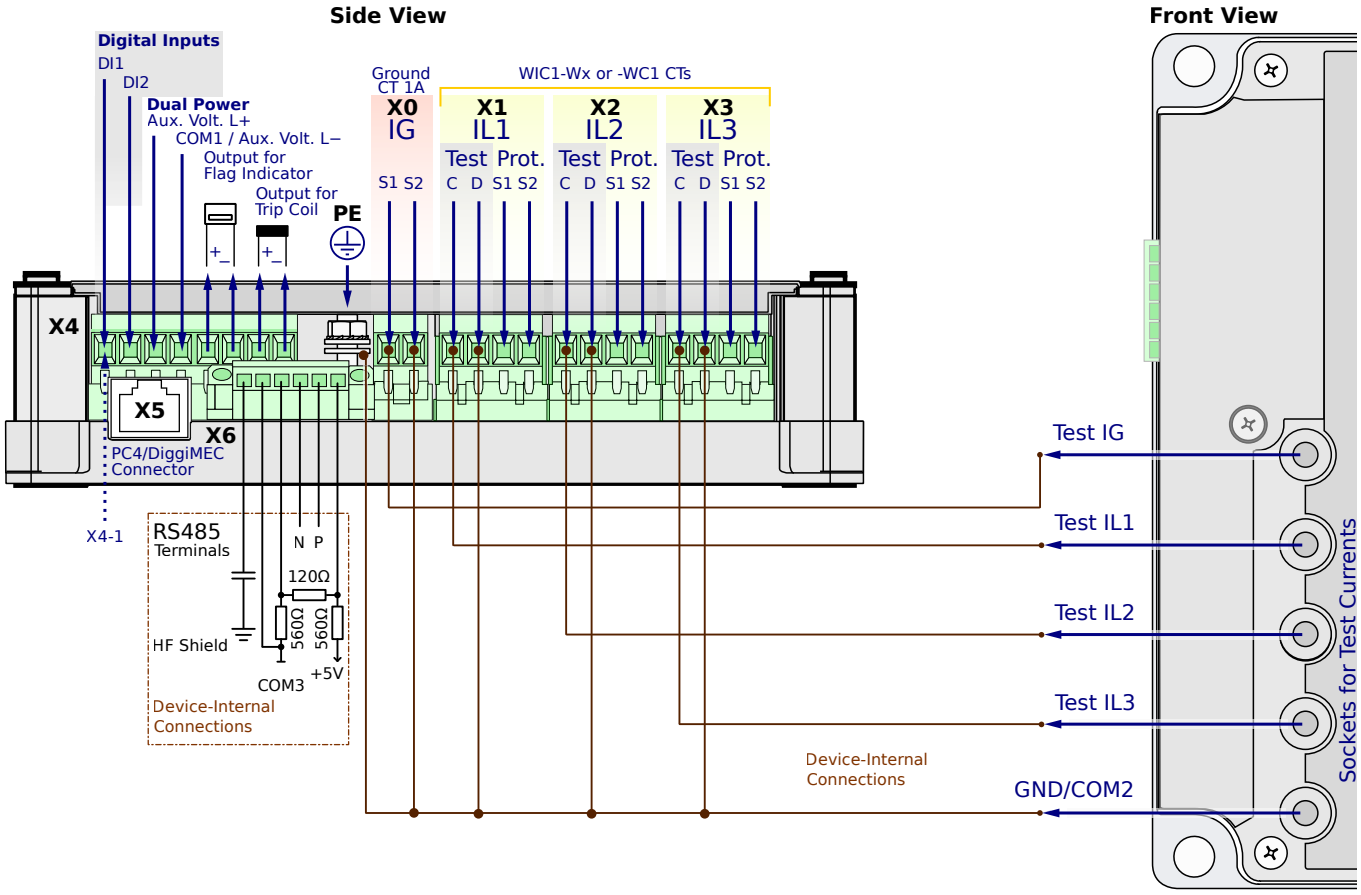


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1ABH

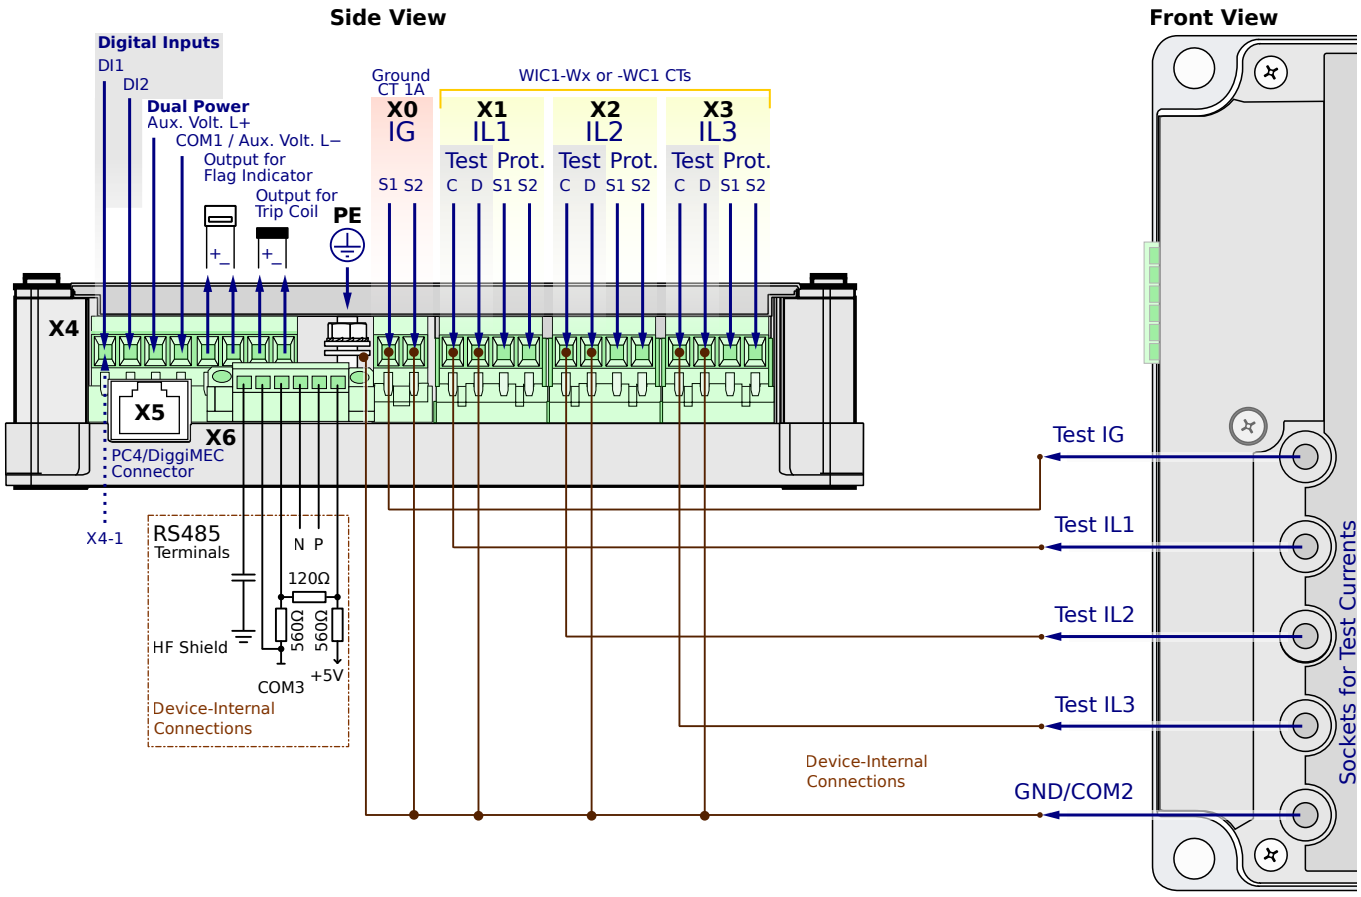


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1AC0

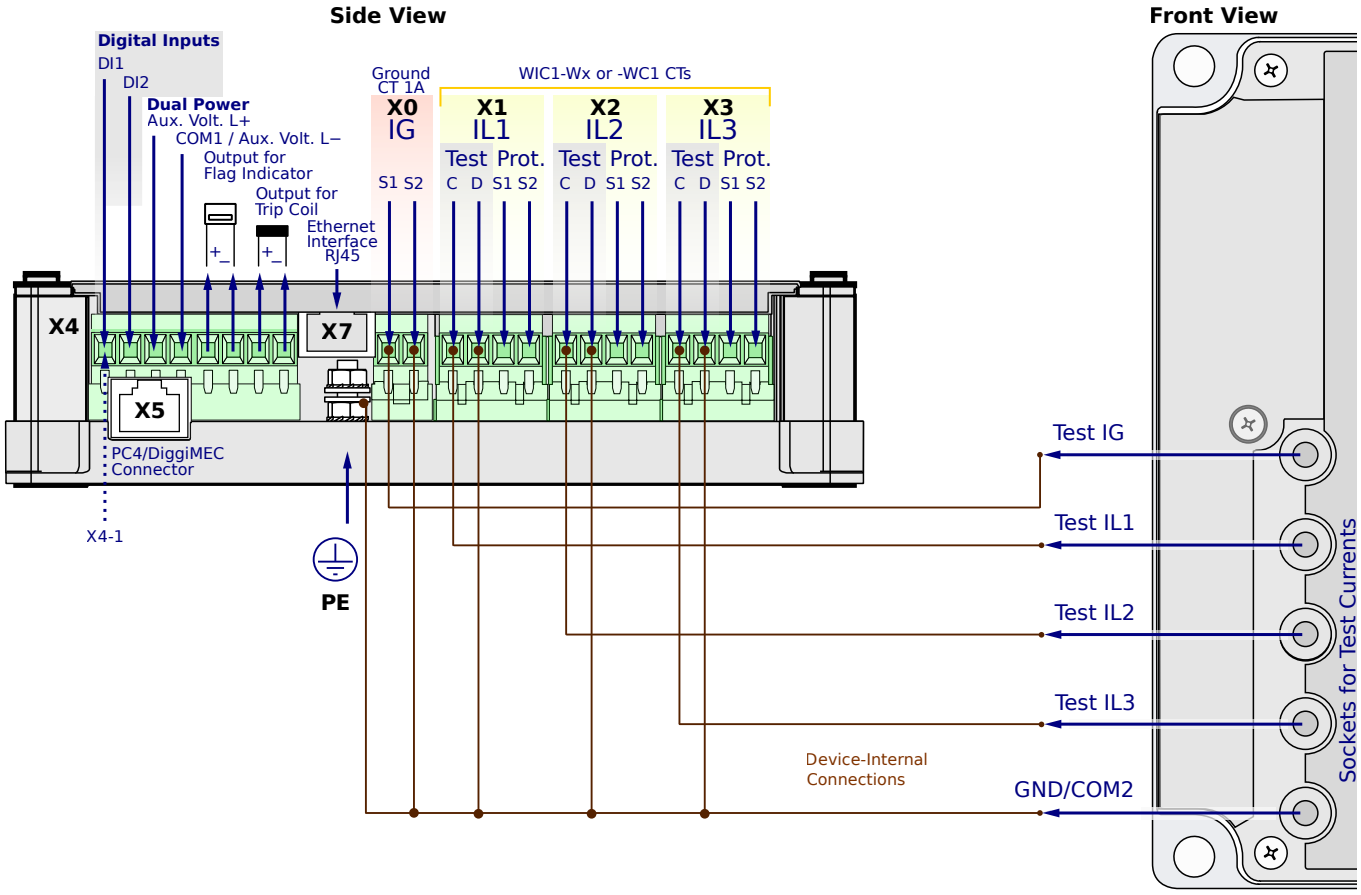


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1ACH

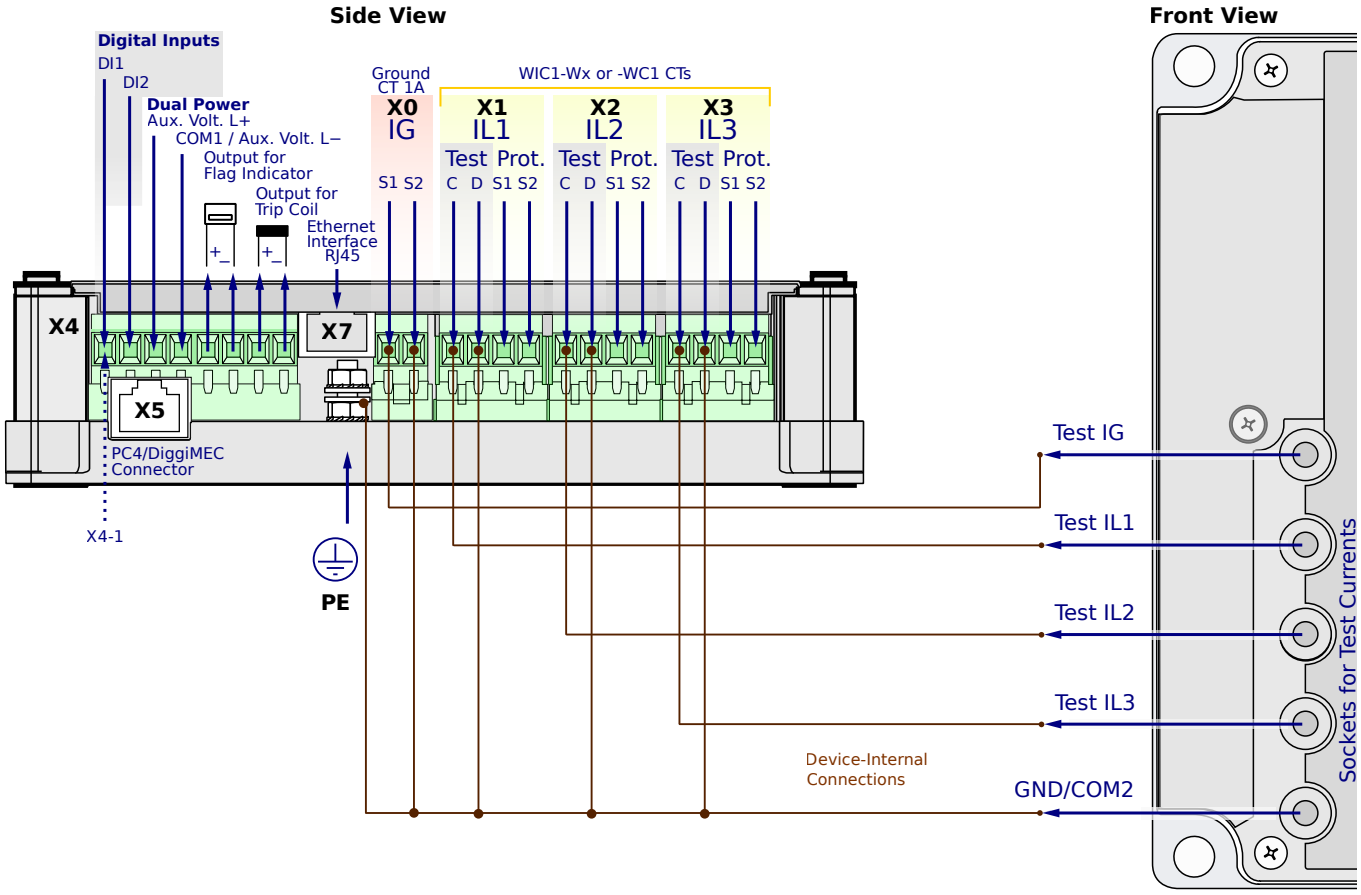


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1AL0

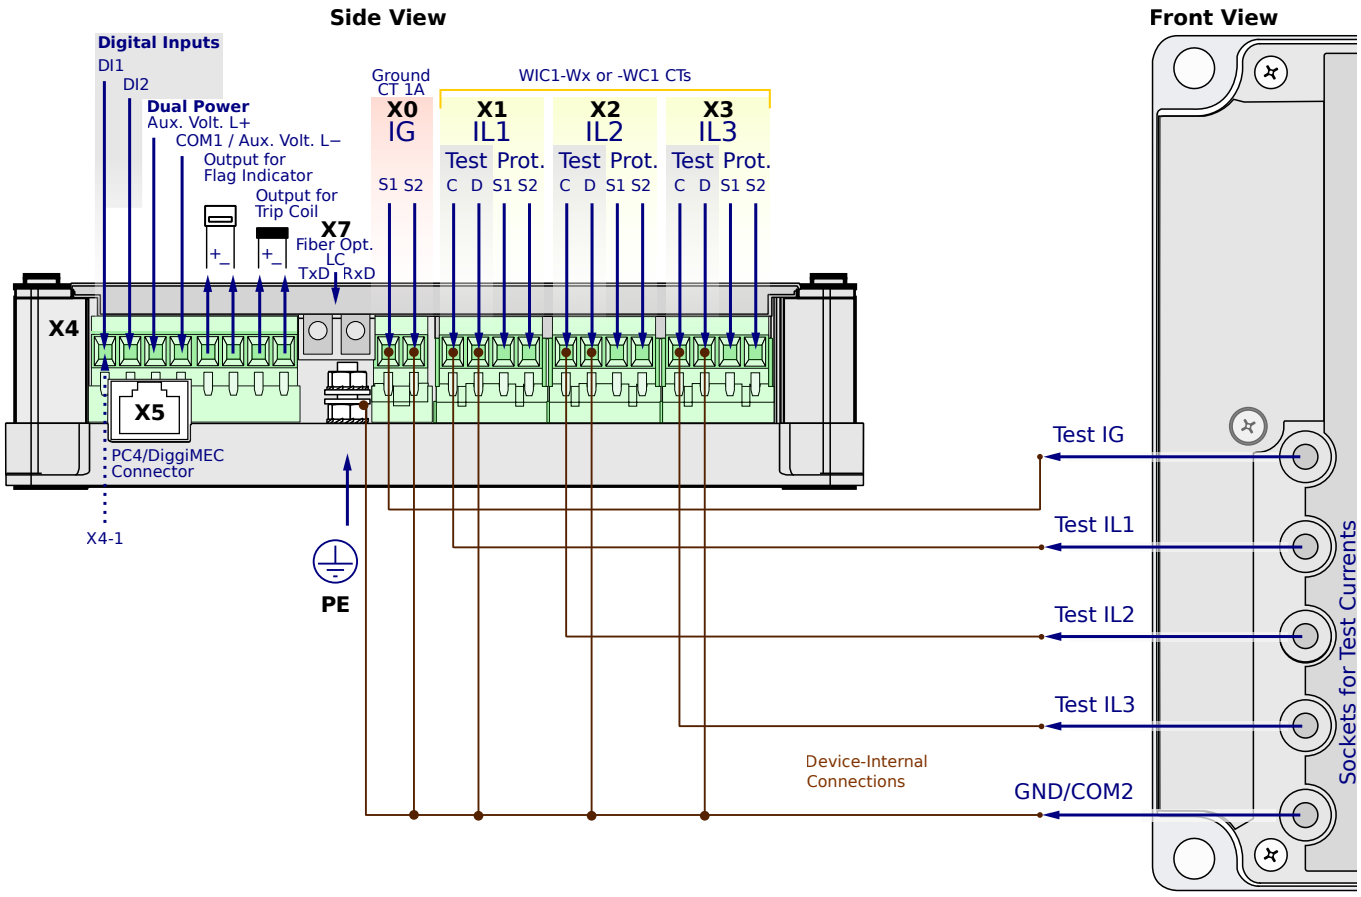


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1ALH

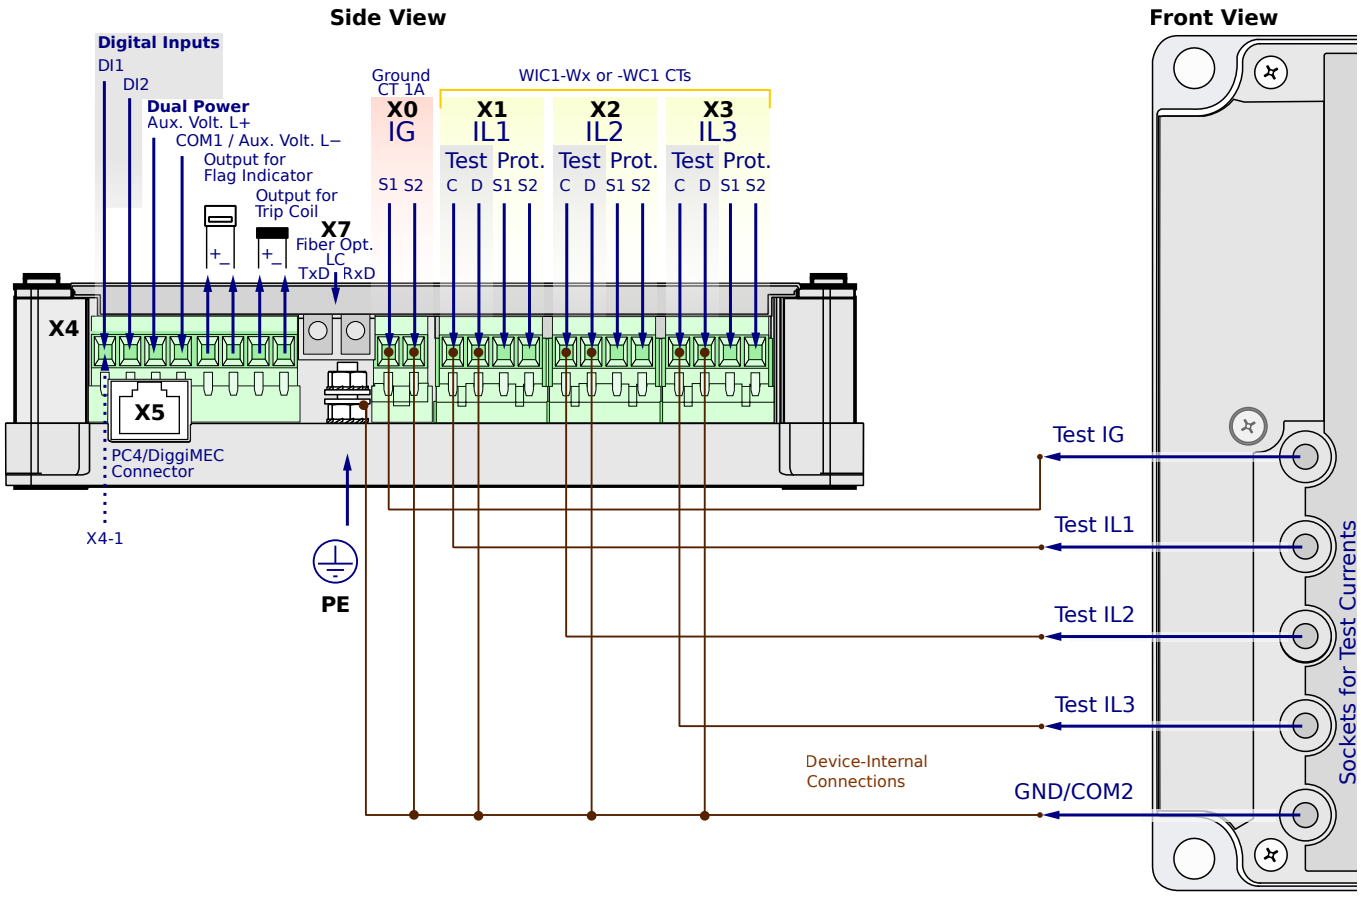


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1PA0

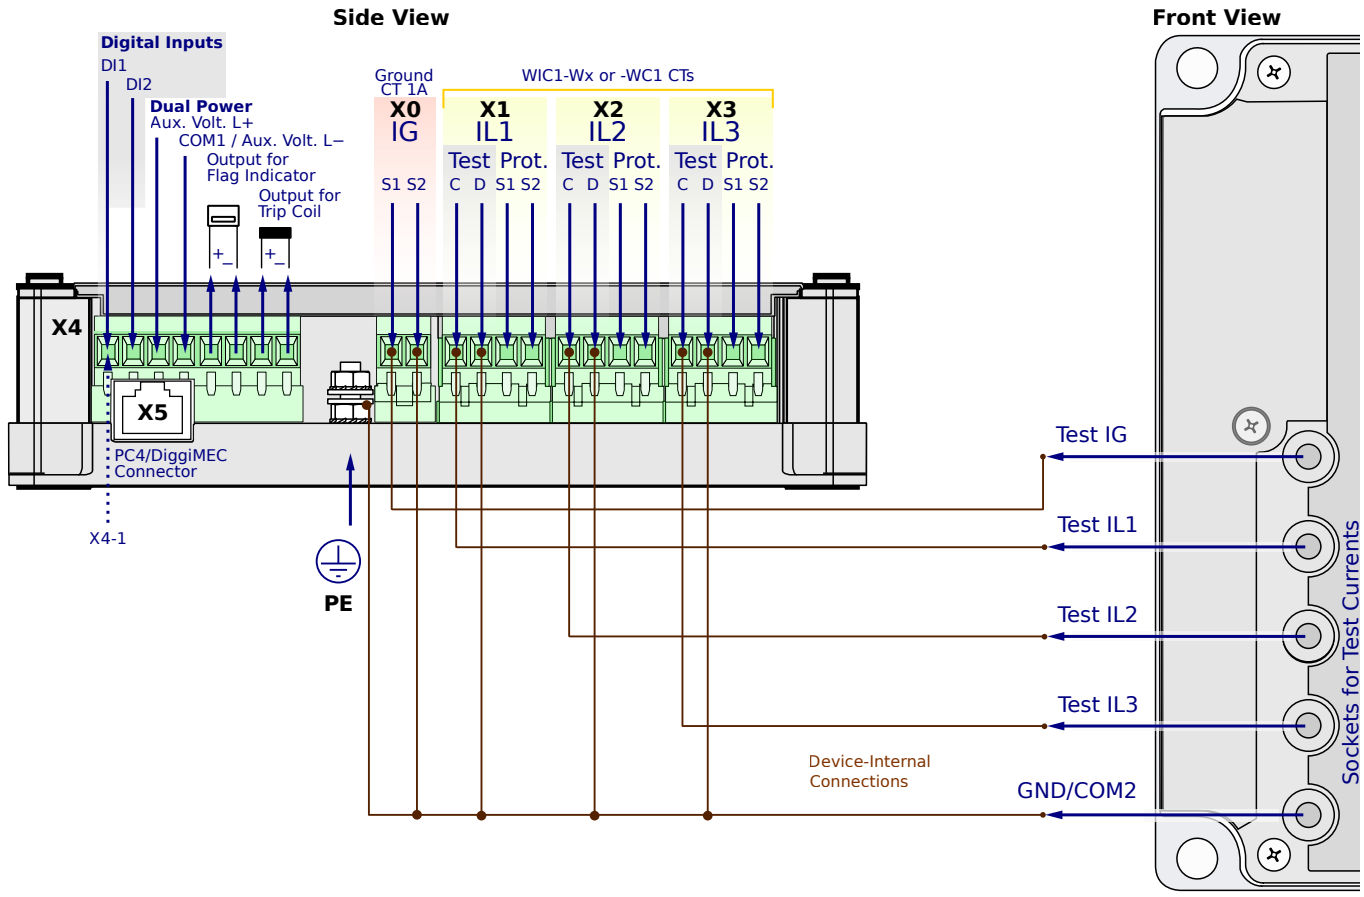


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1PAH

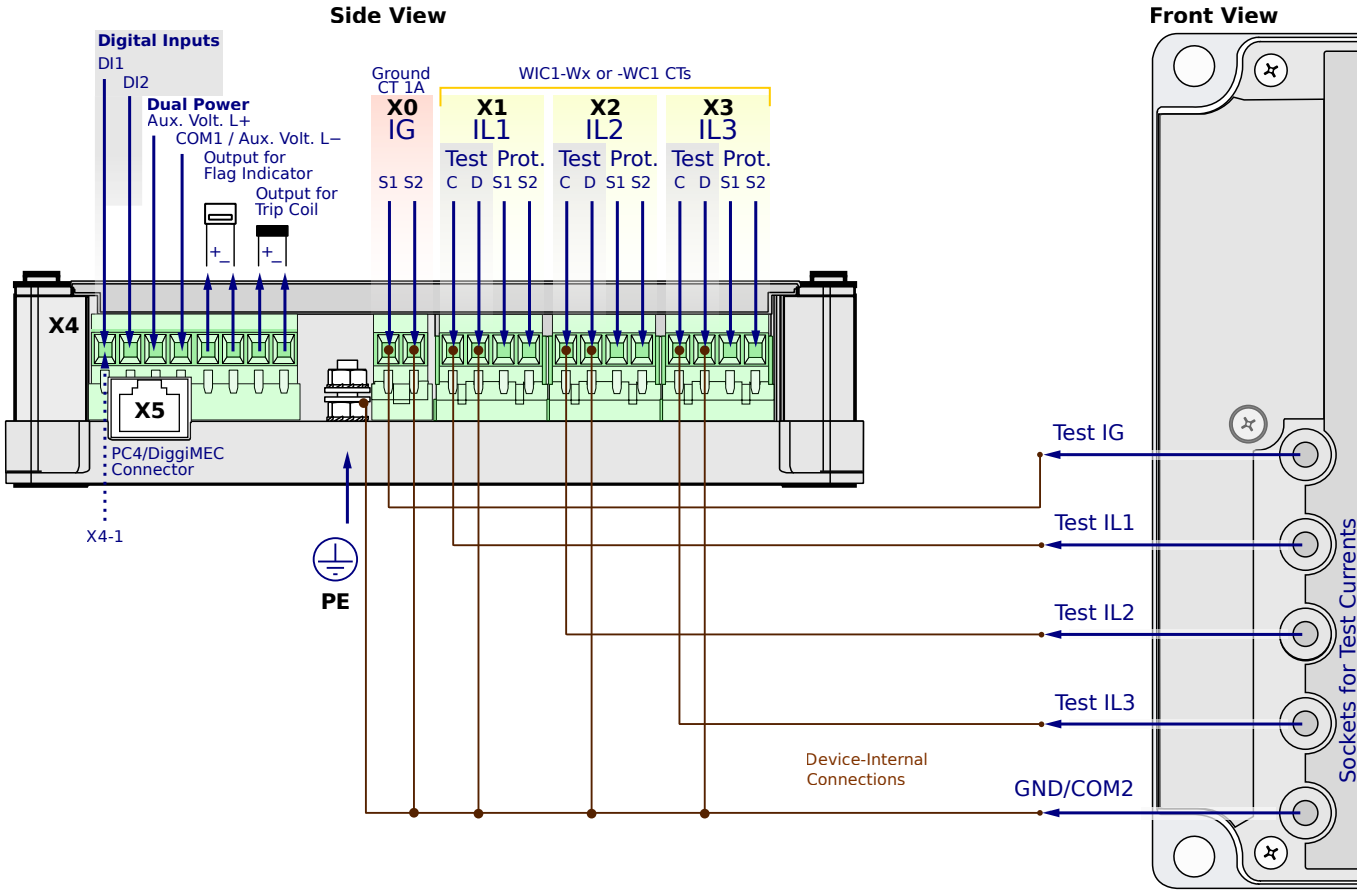


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND1PB0

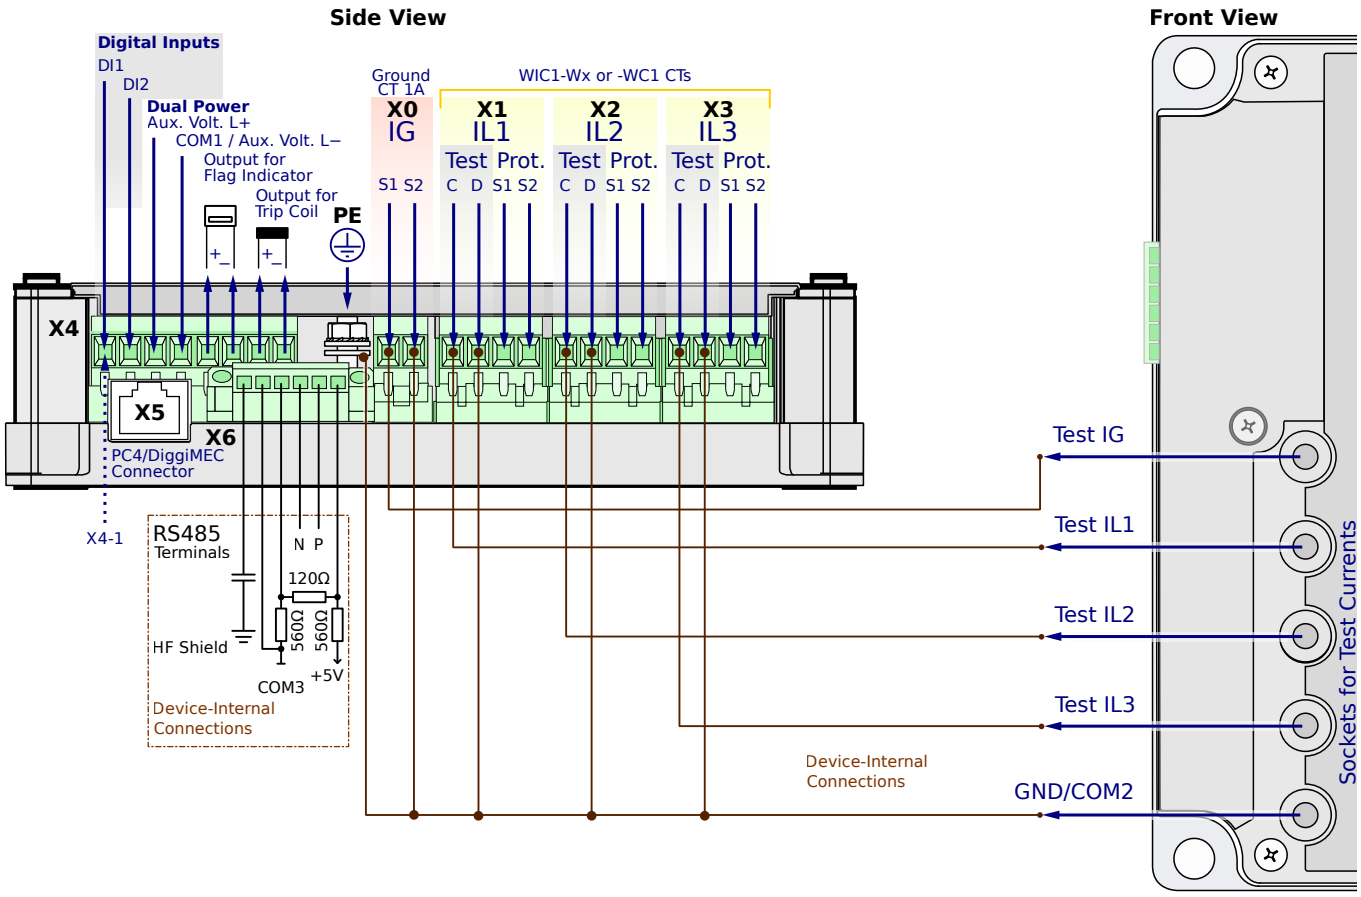


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1PBH

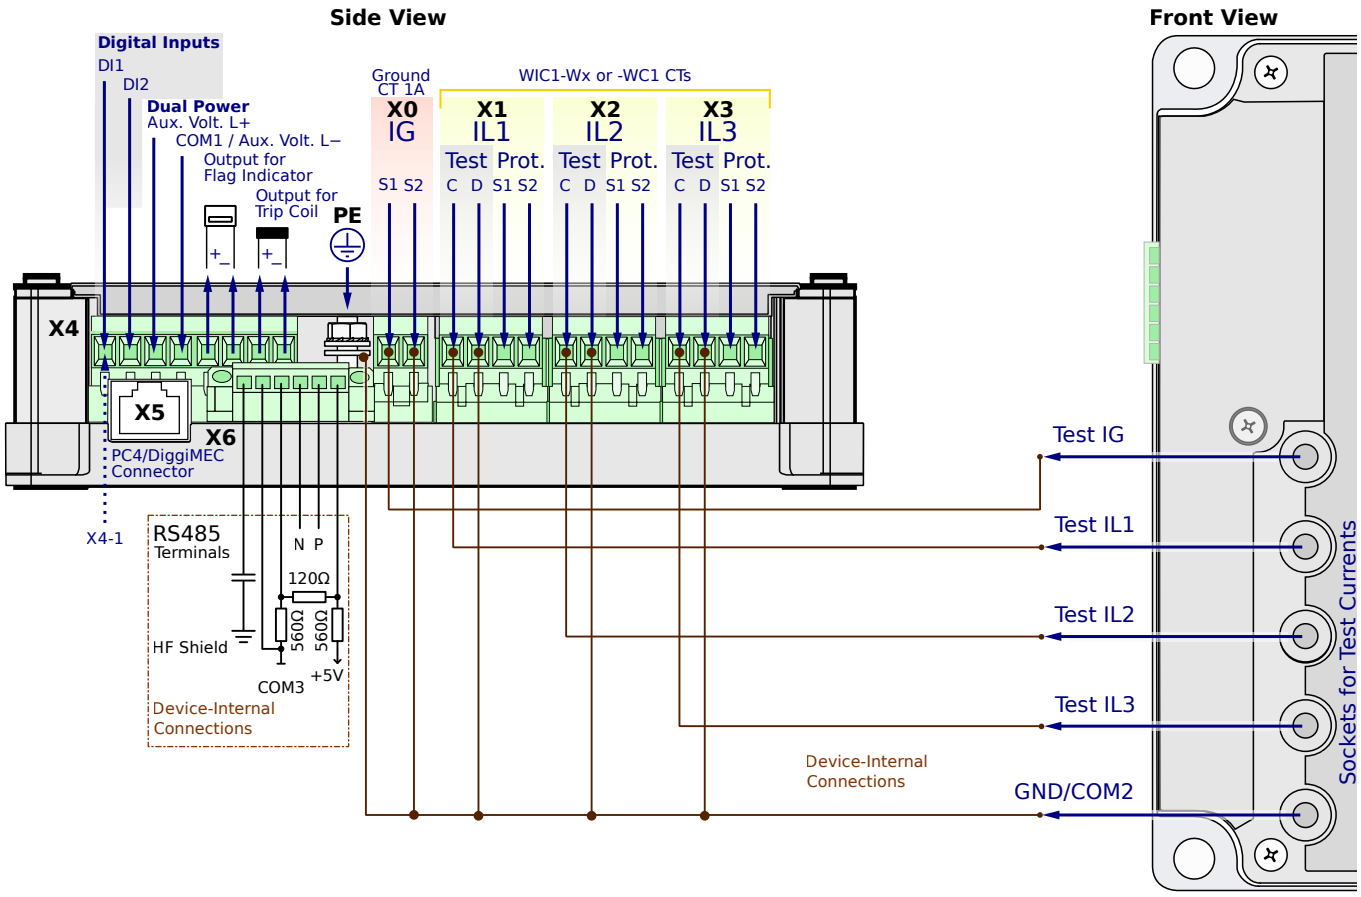


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND1PC0

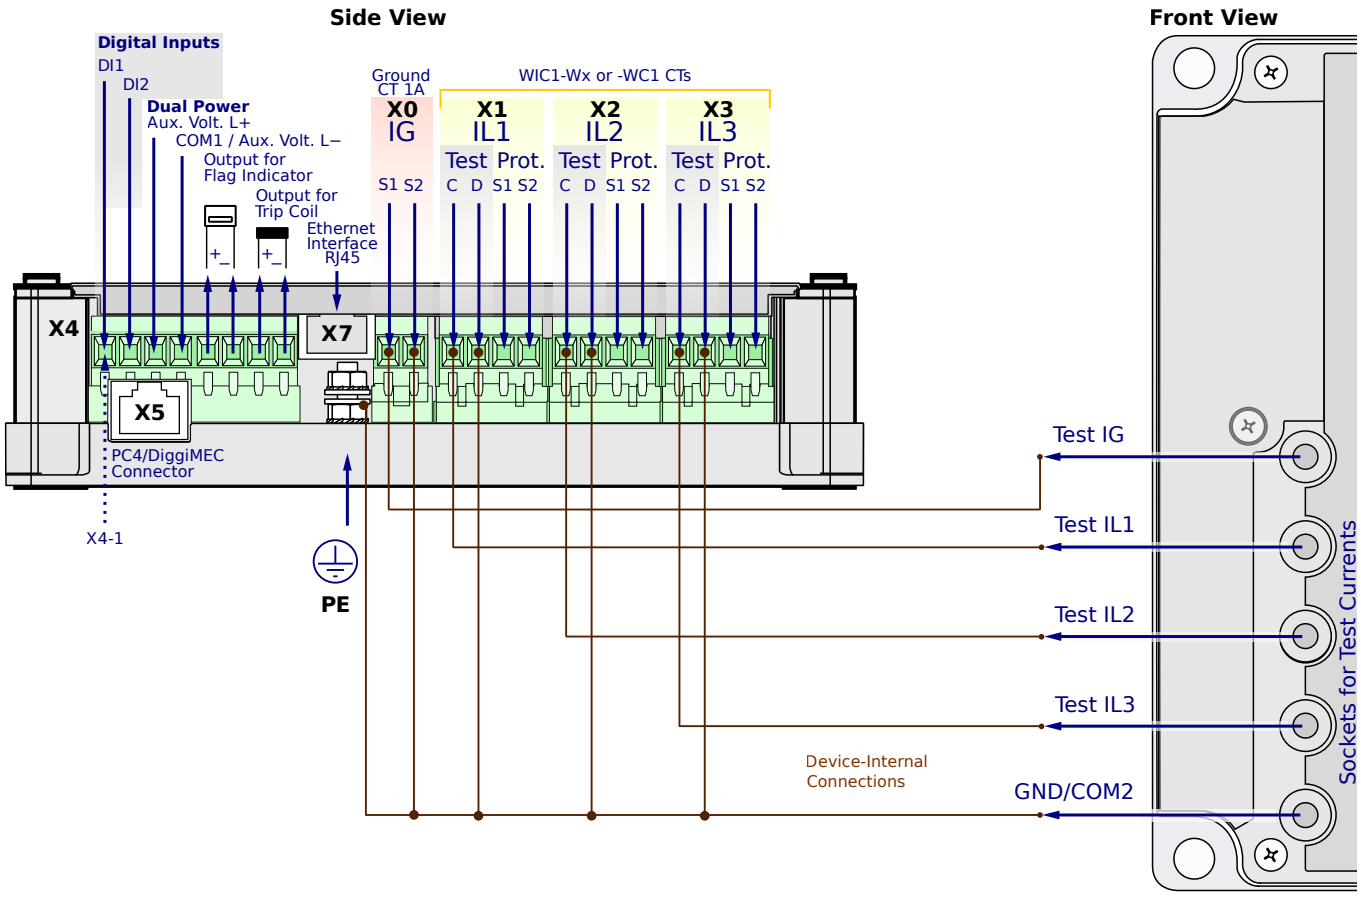


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1PCH

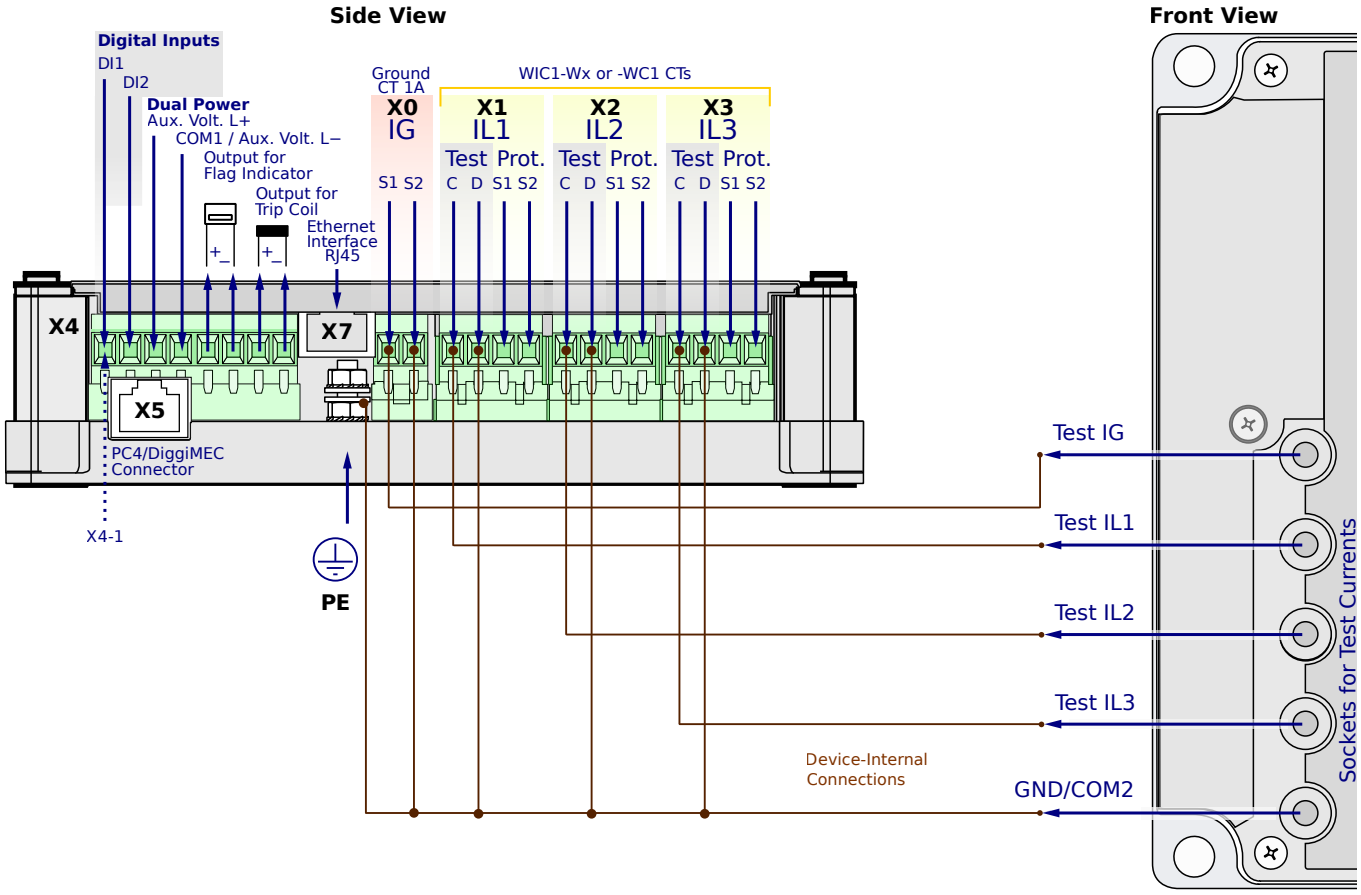


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND1PL0

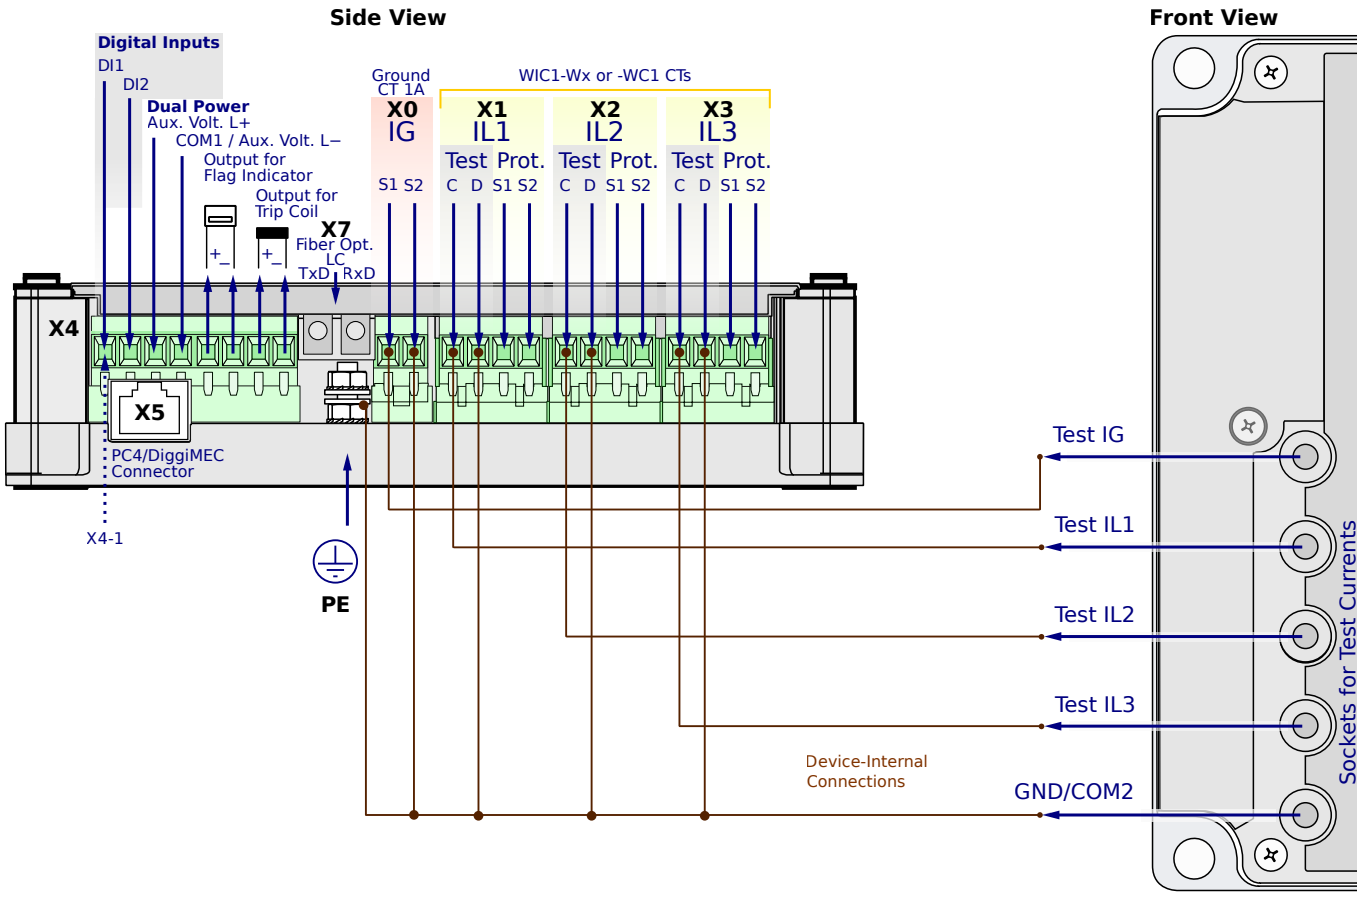


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND1PLH

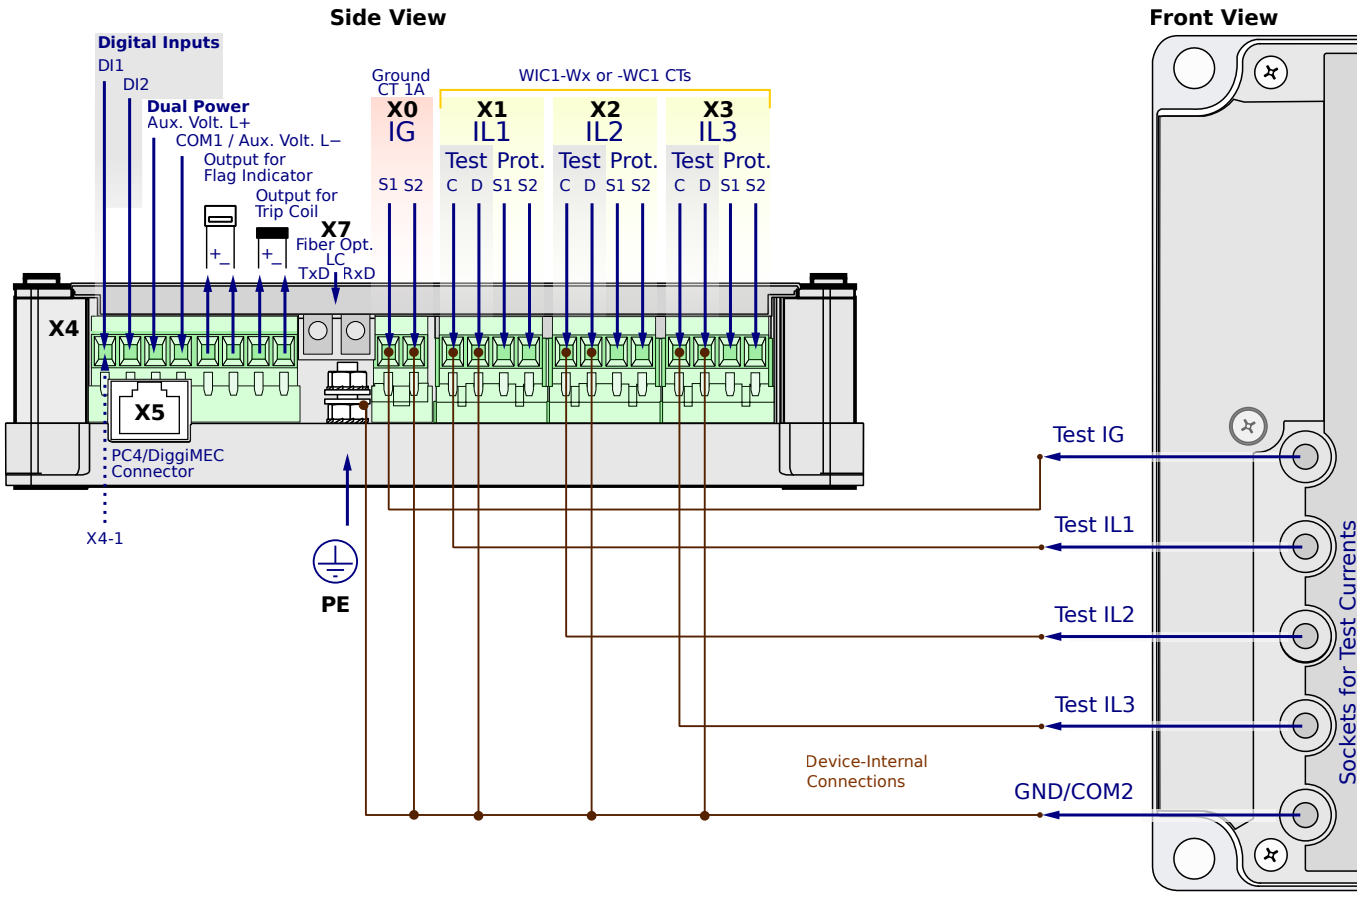


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2SA0

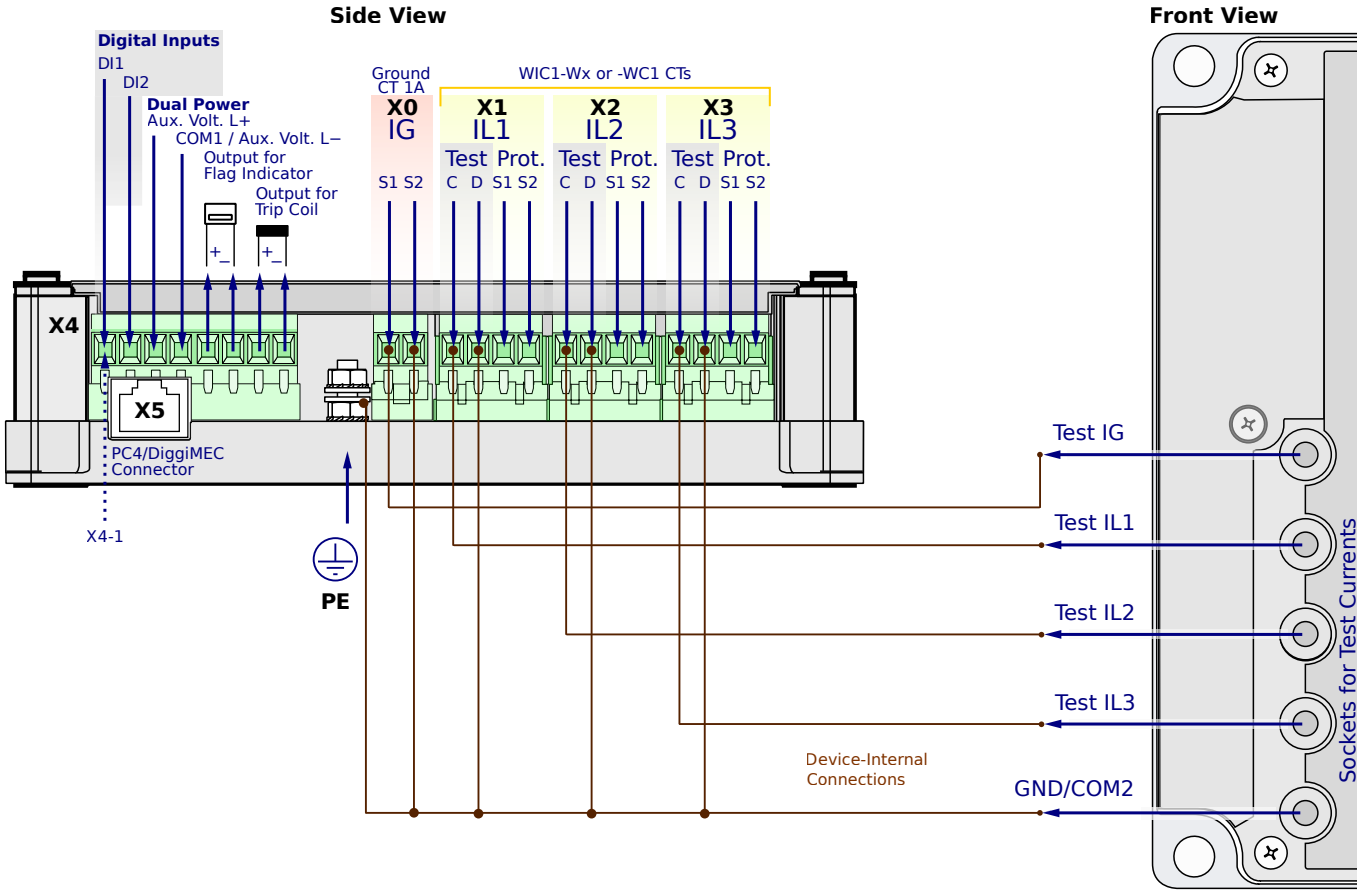


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2SAH

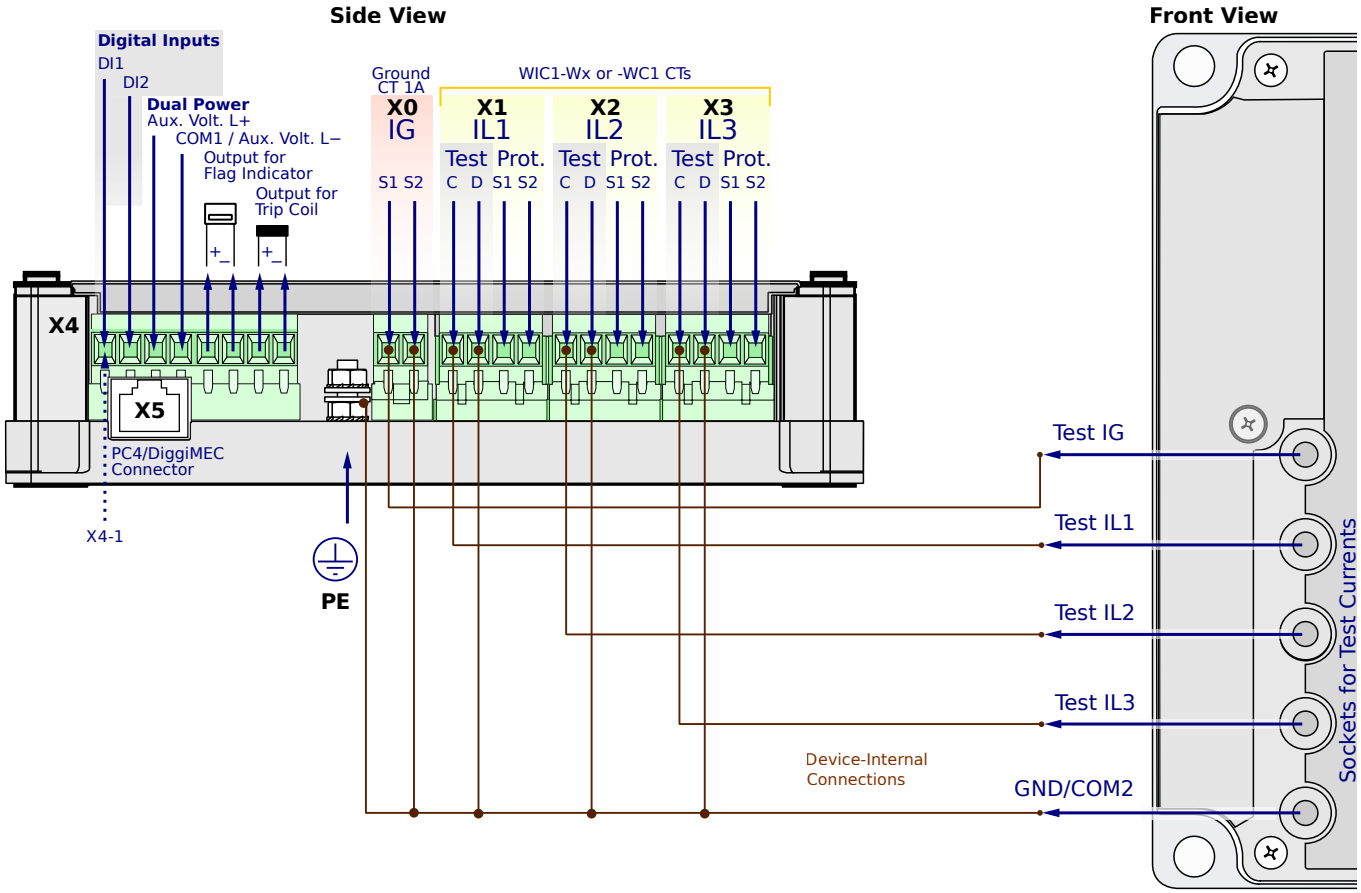


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2SB0

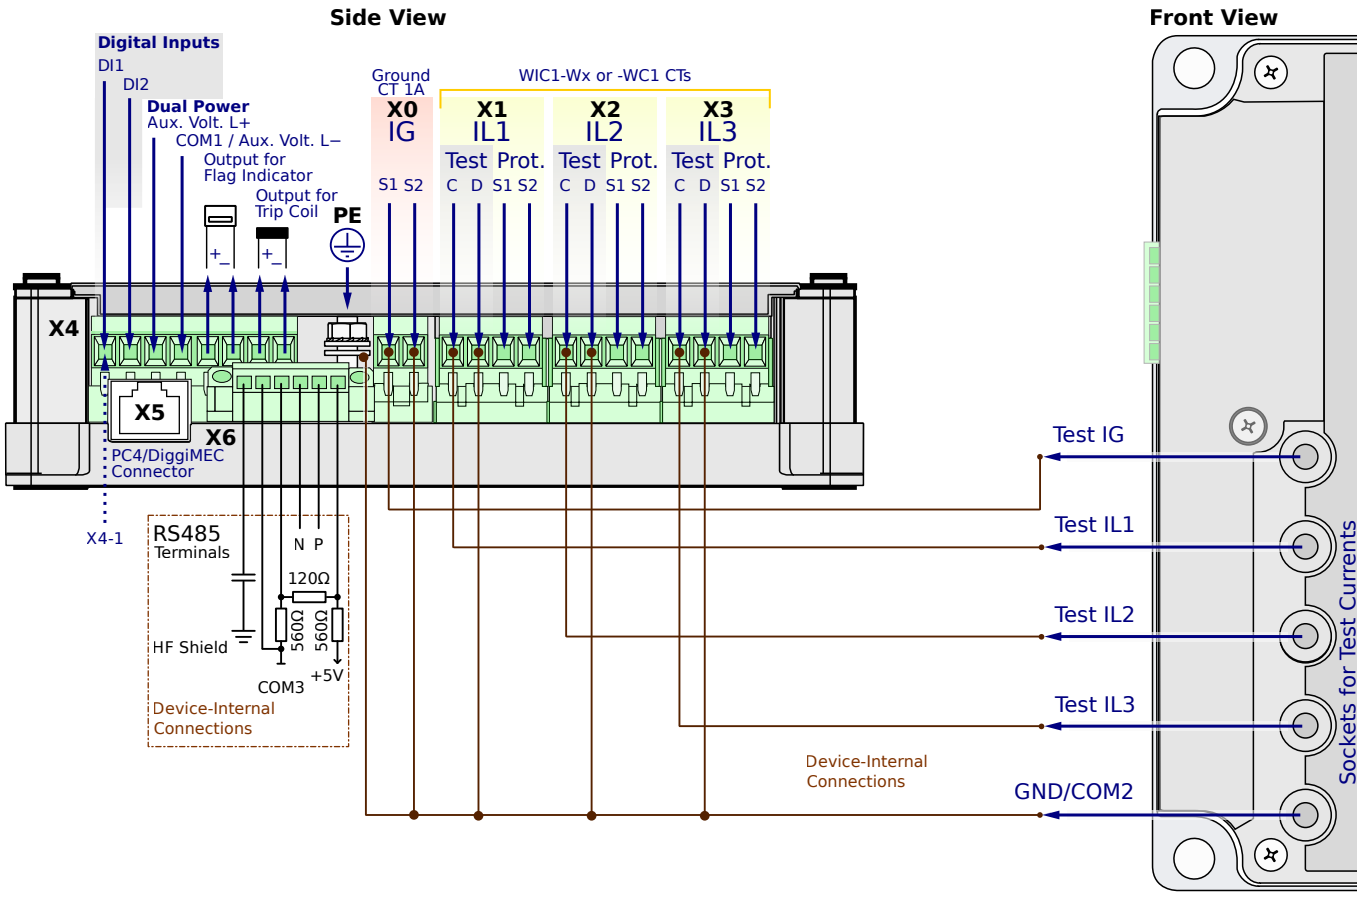


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2SBH

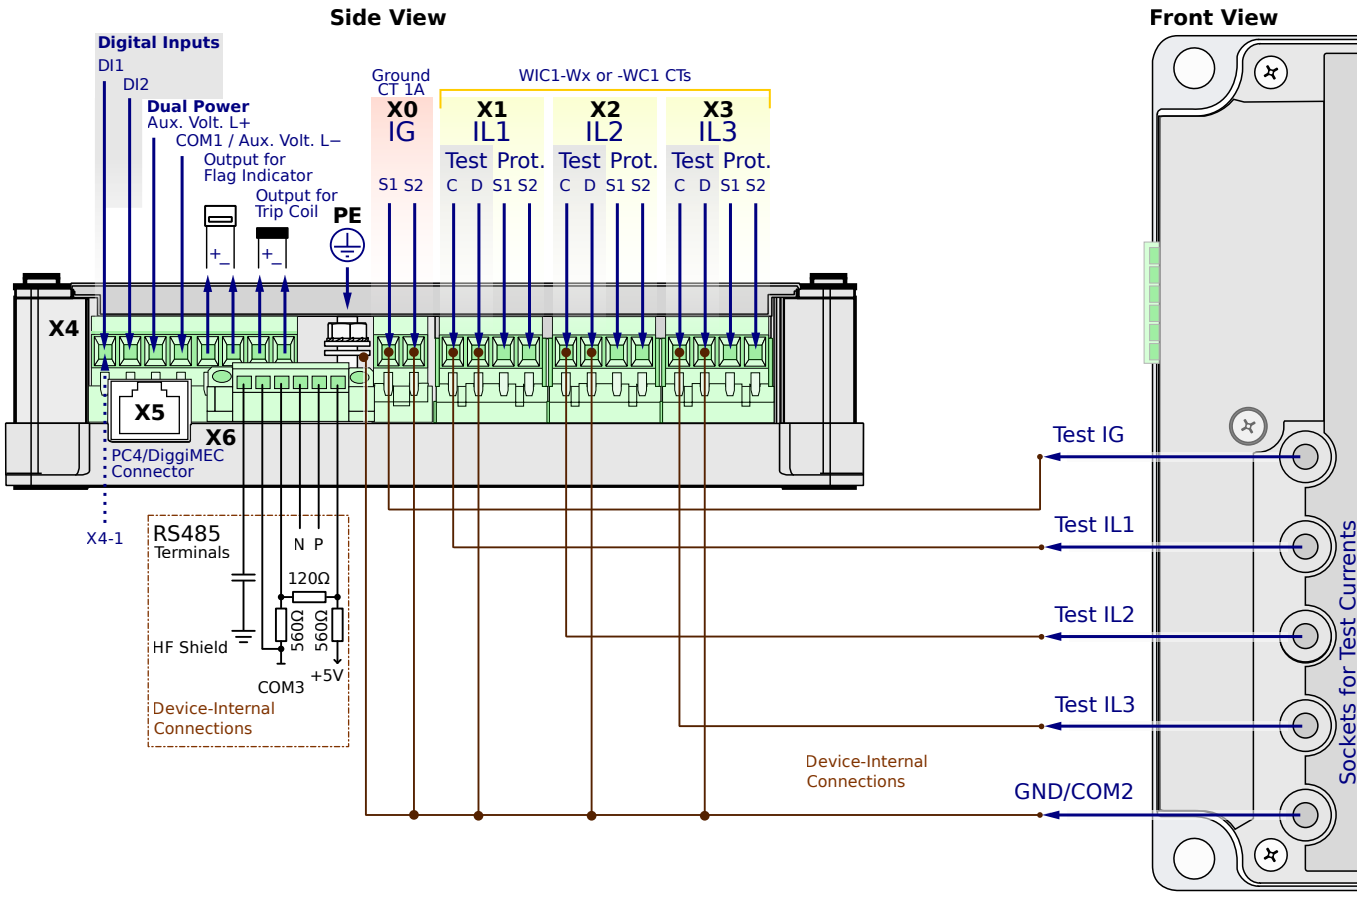


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2SC0

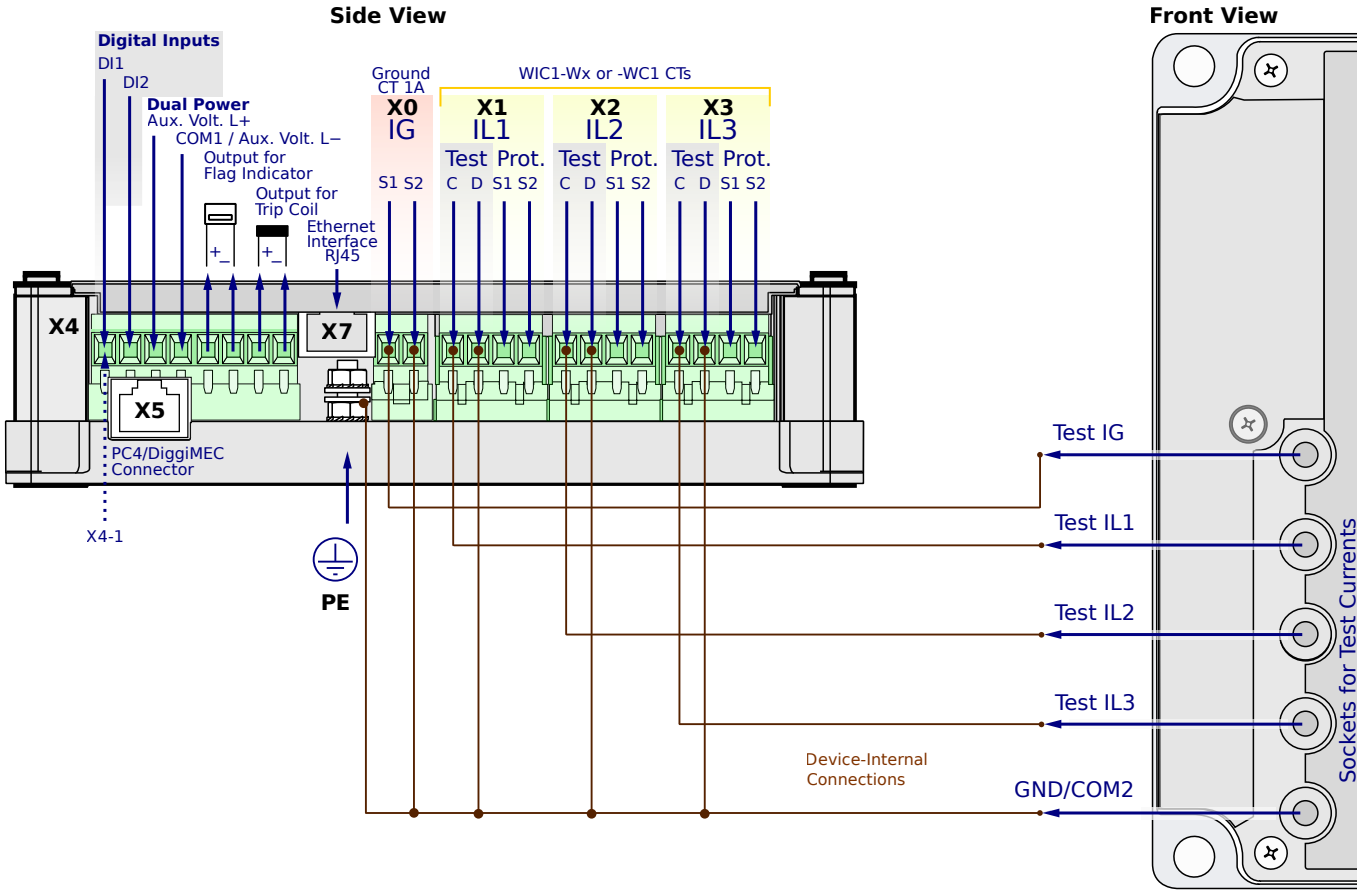


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2SCH

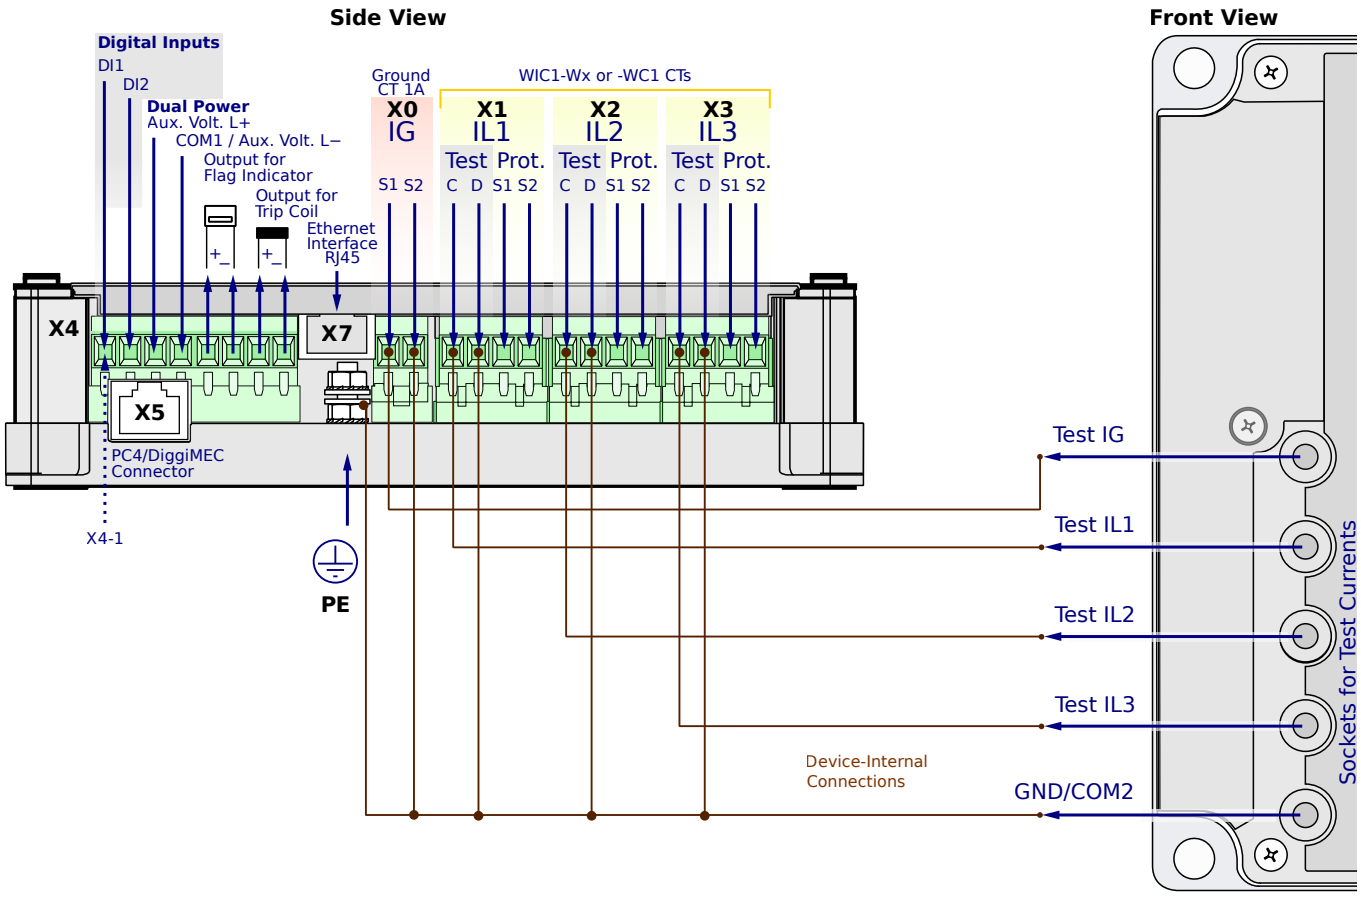


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2SL0

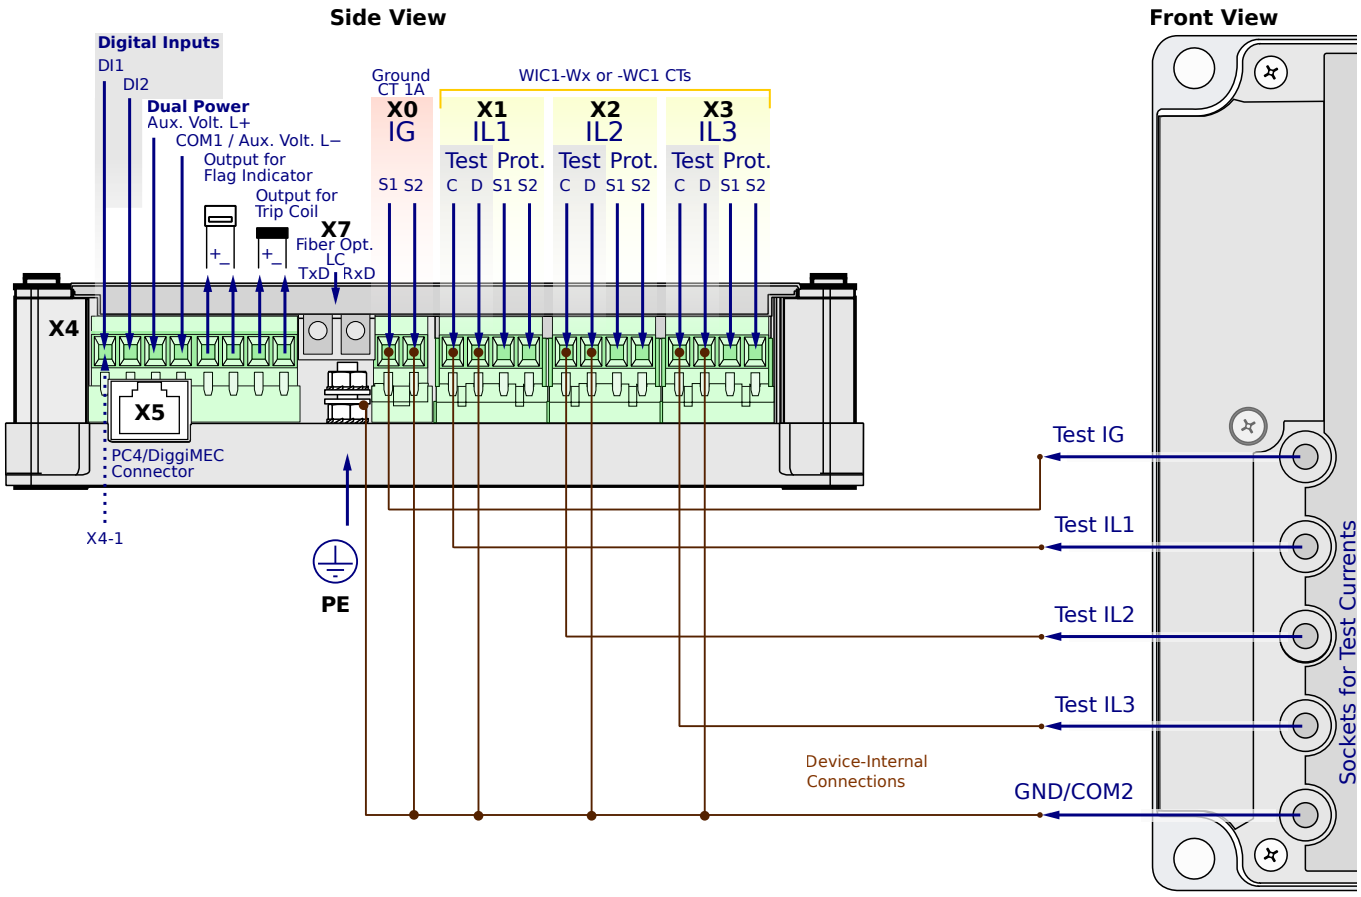


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2SLH

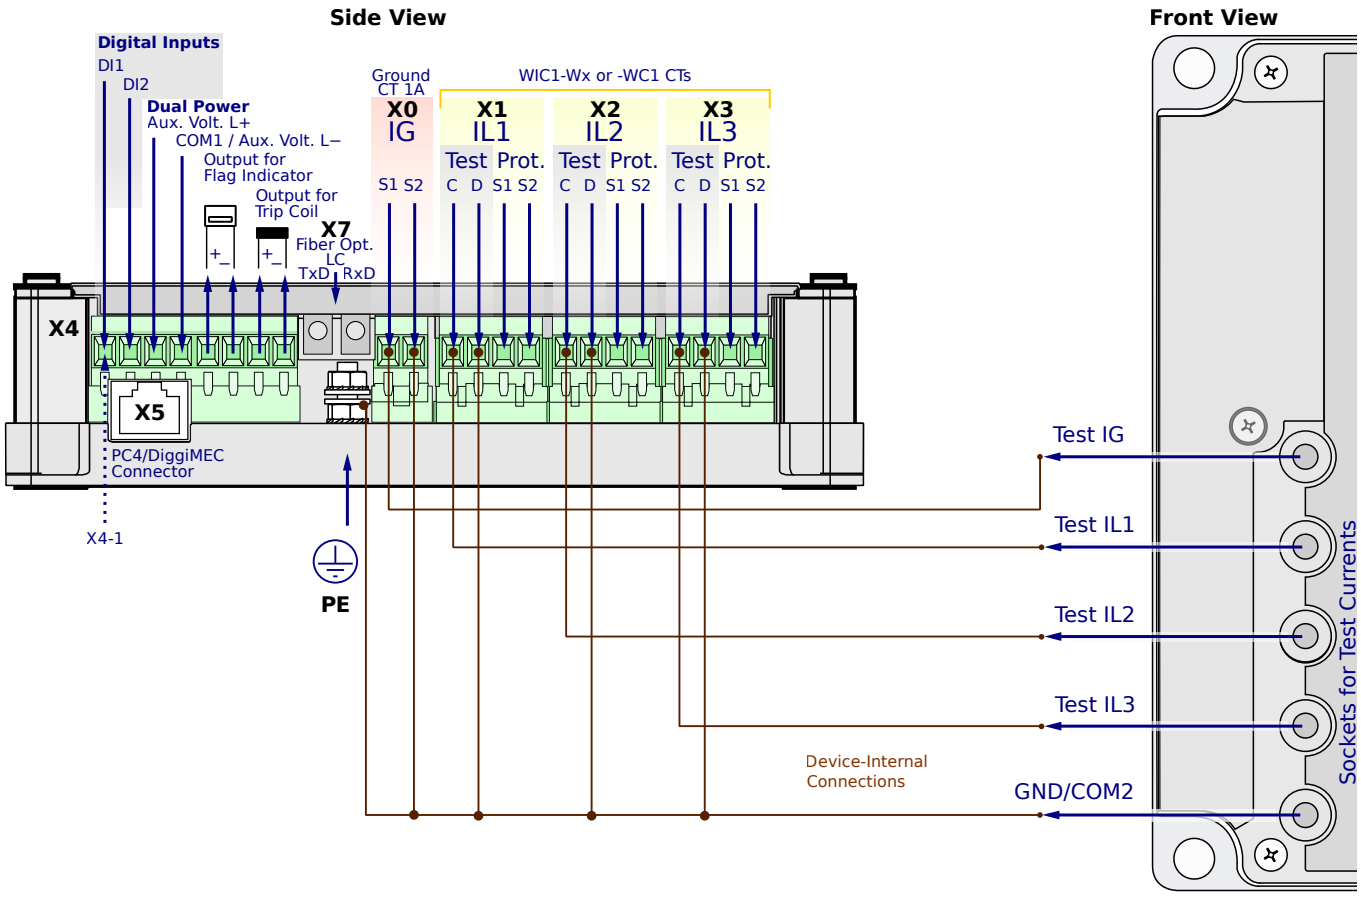


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2AA0

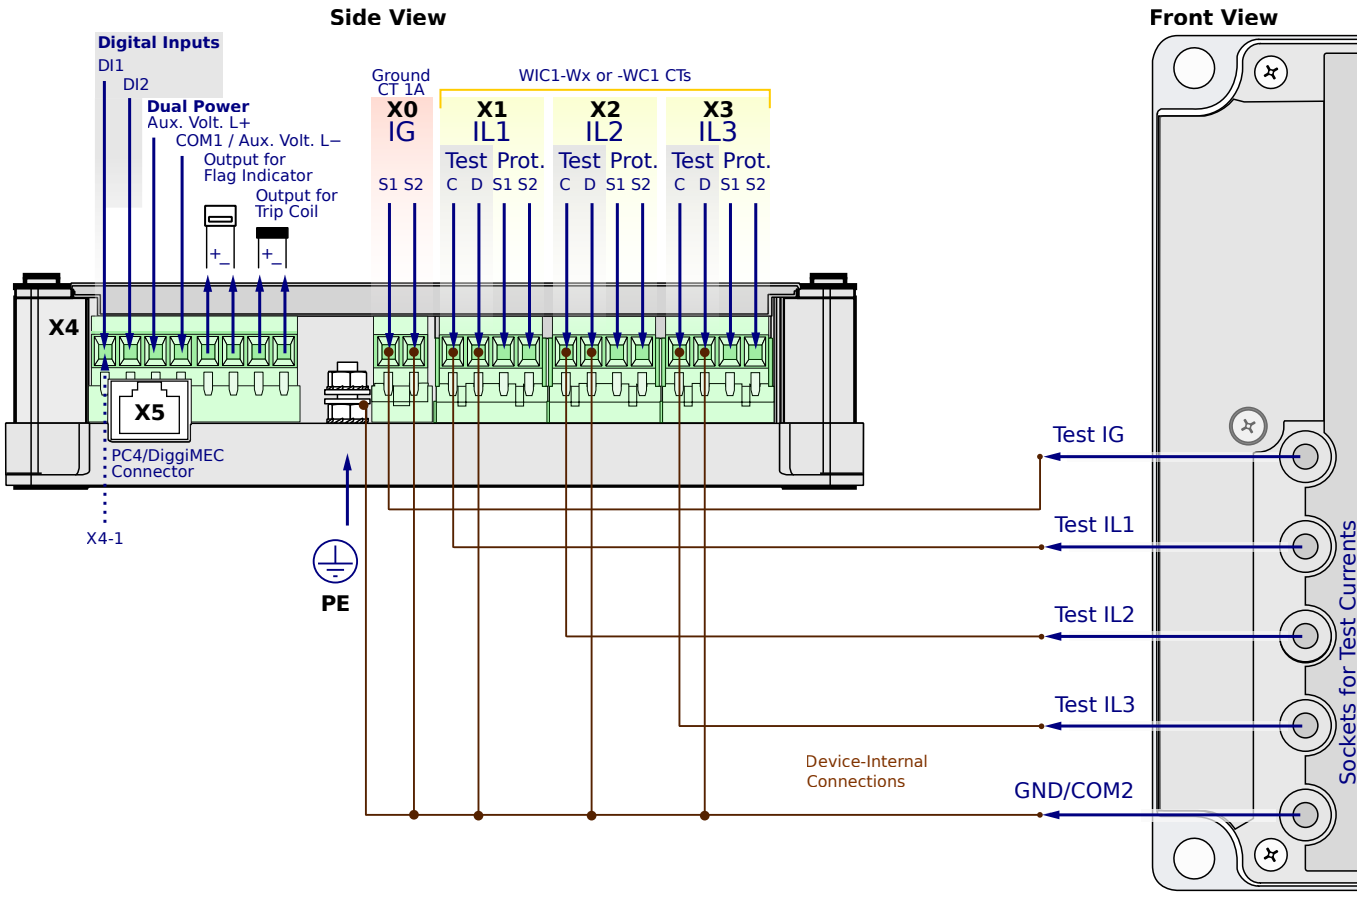


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2AAH

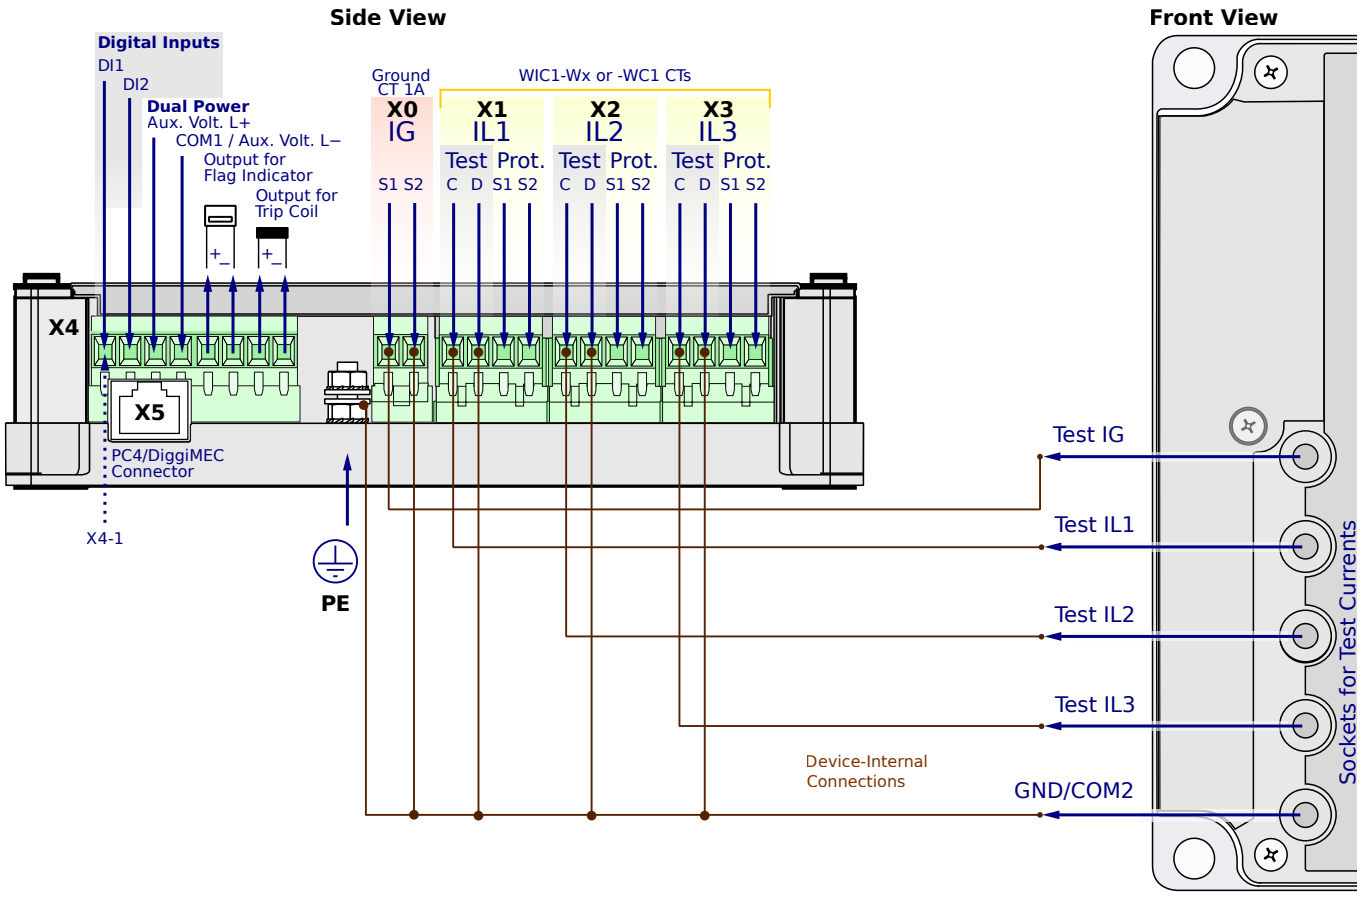


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2AB0

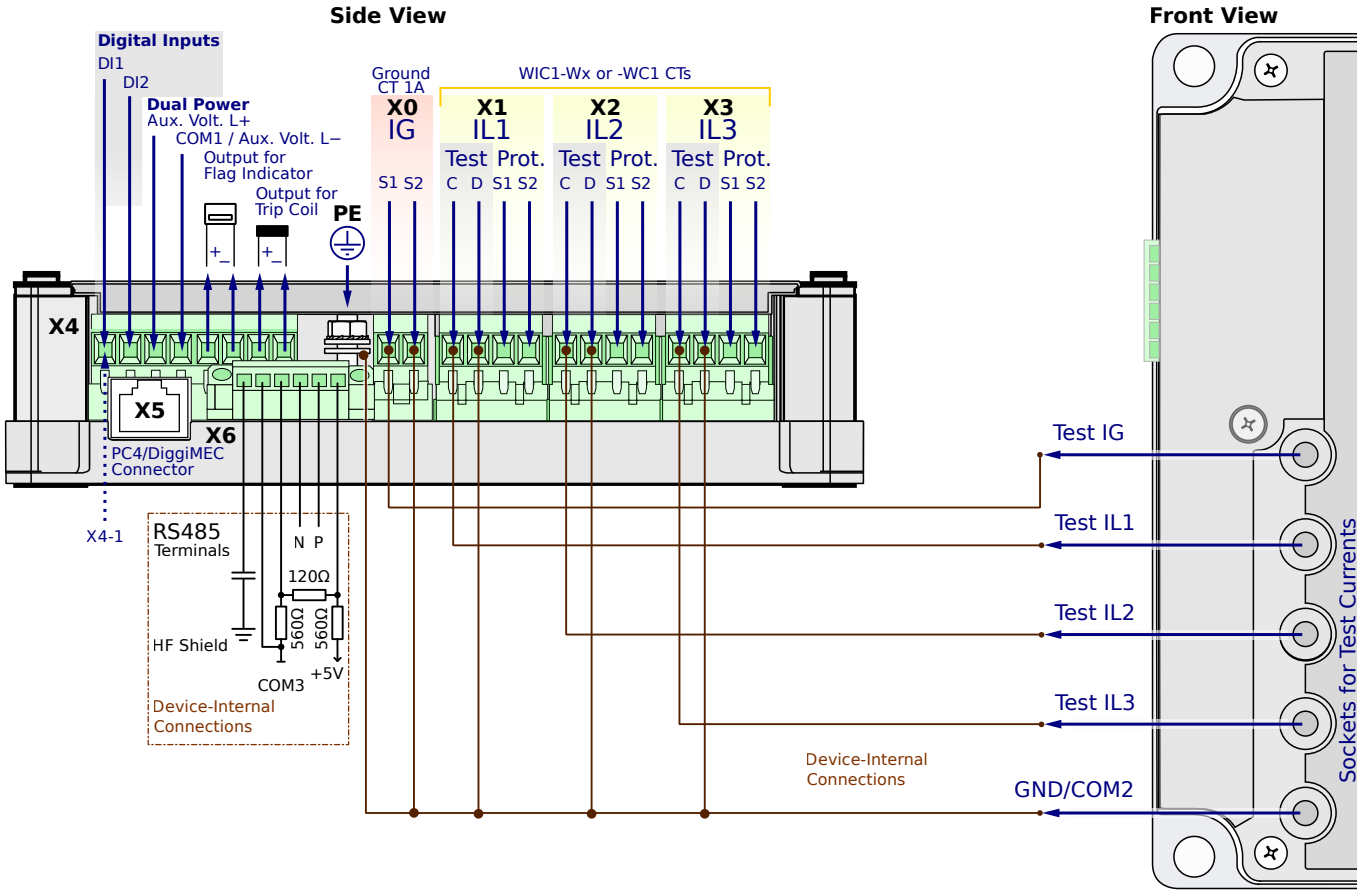


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2ABH

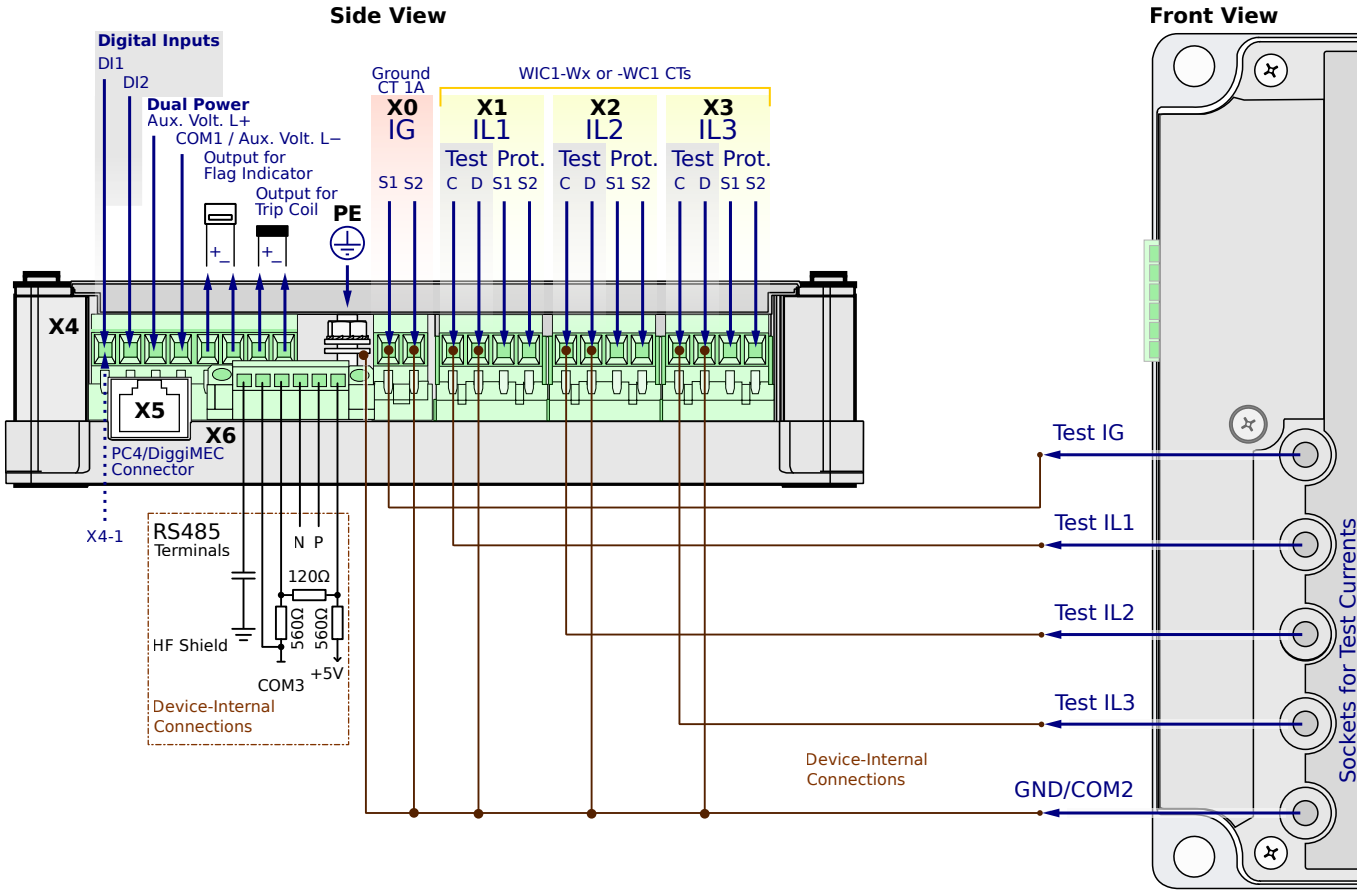


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2AC0

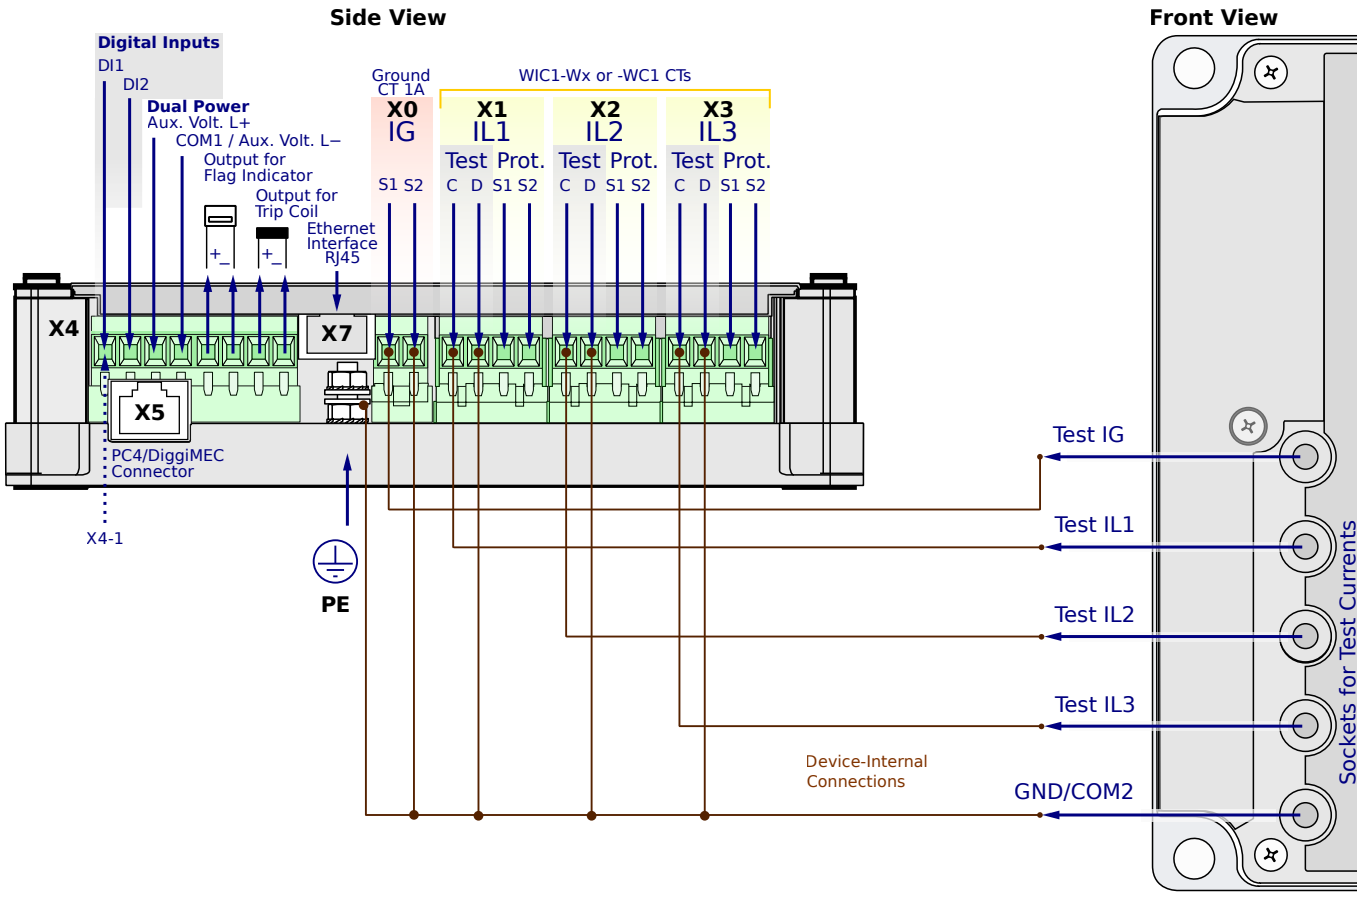


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2ACH

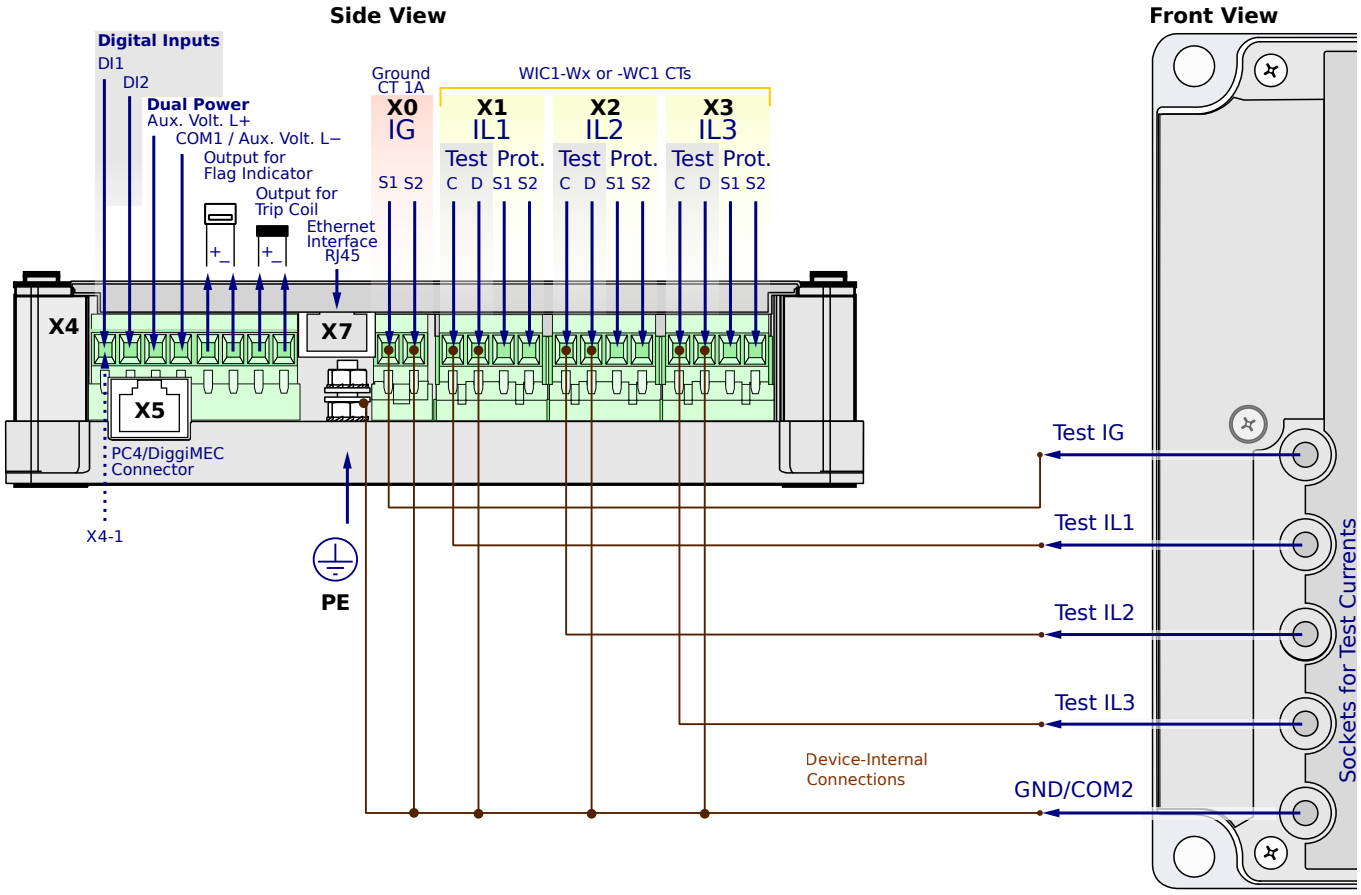


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2AL0

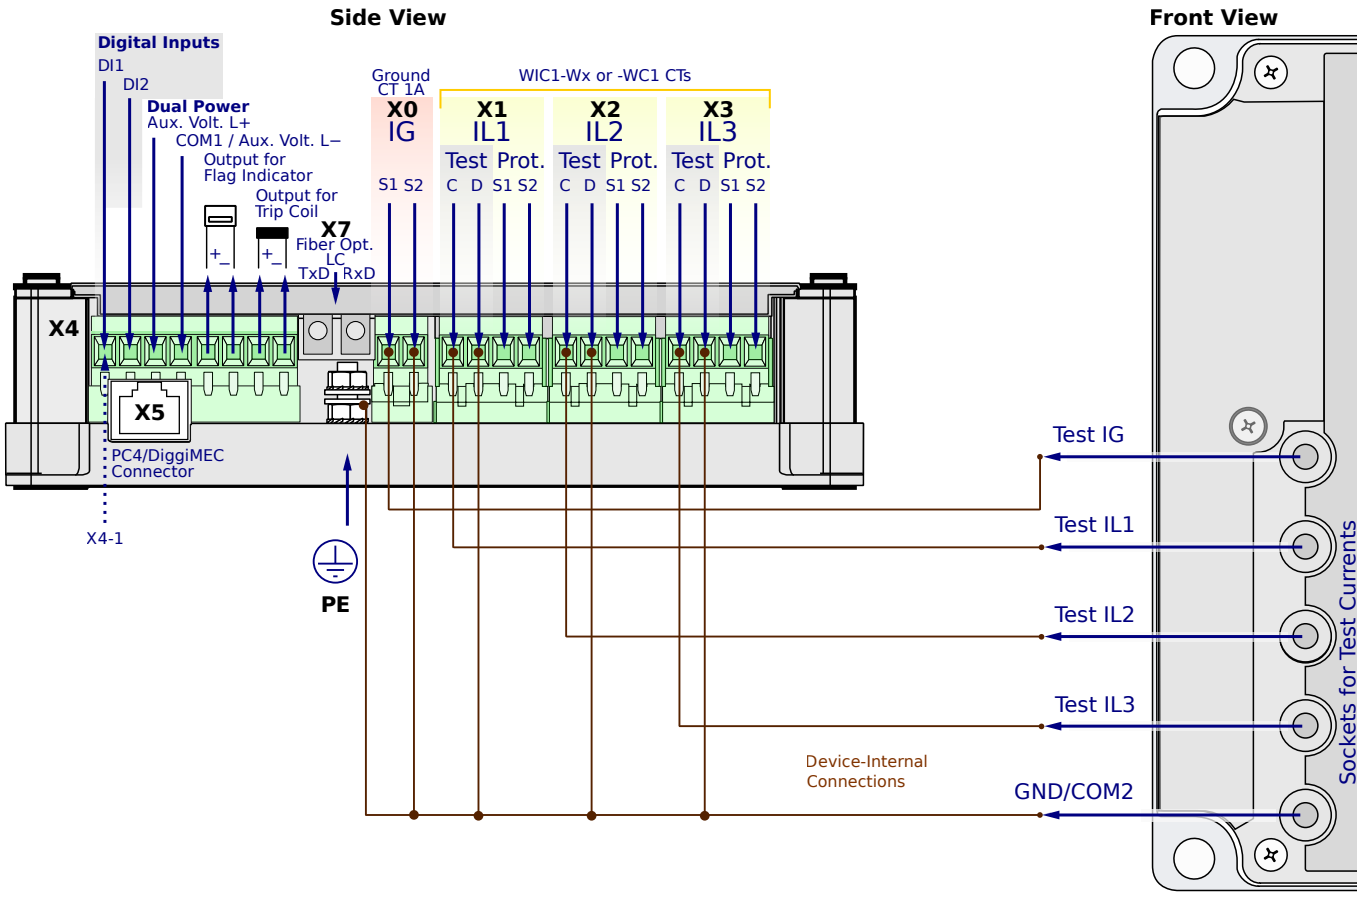


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2ALH

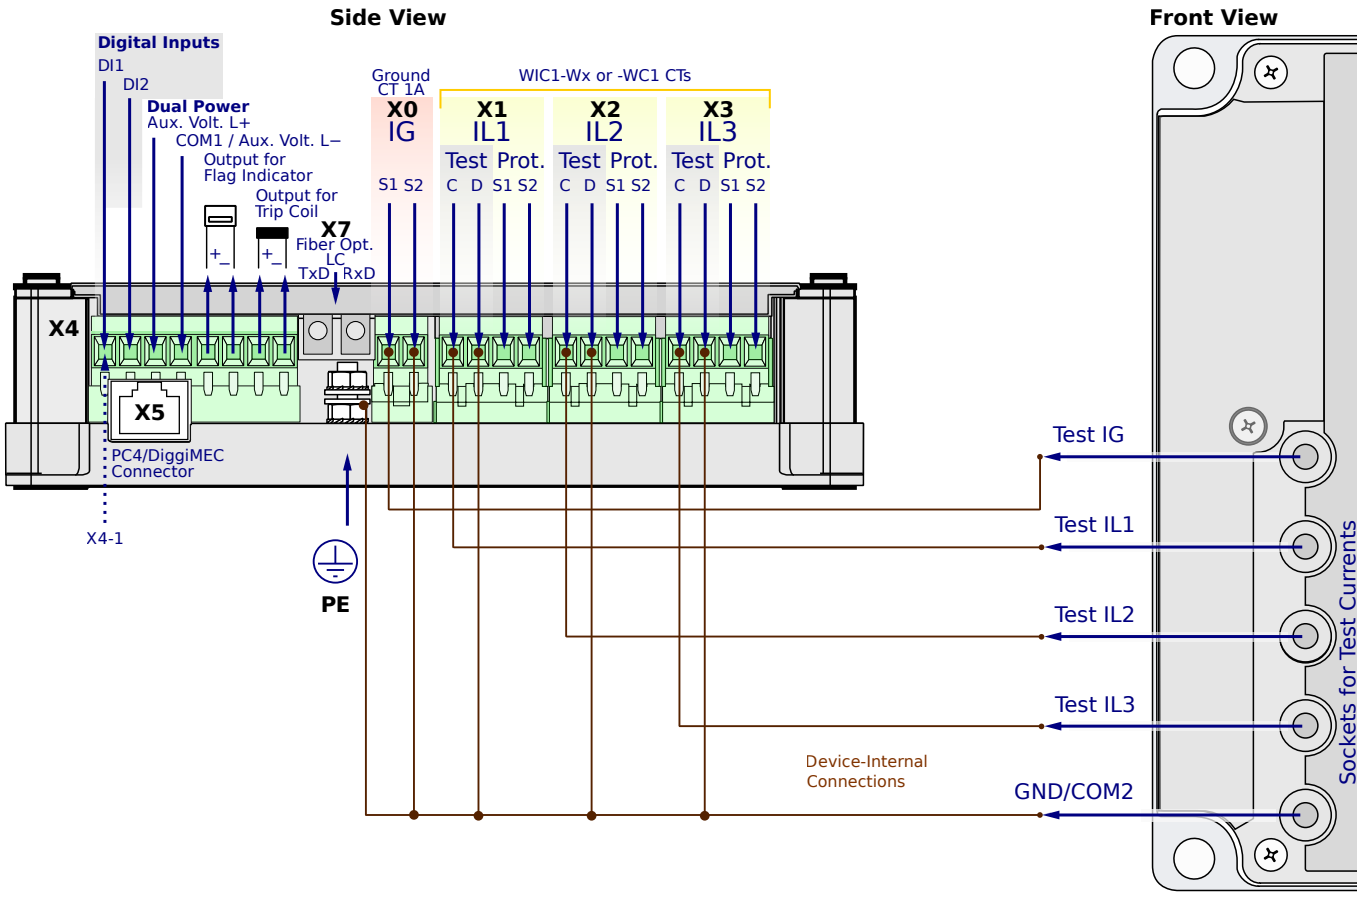


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2PA0

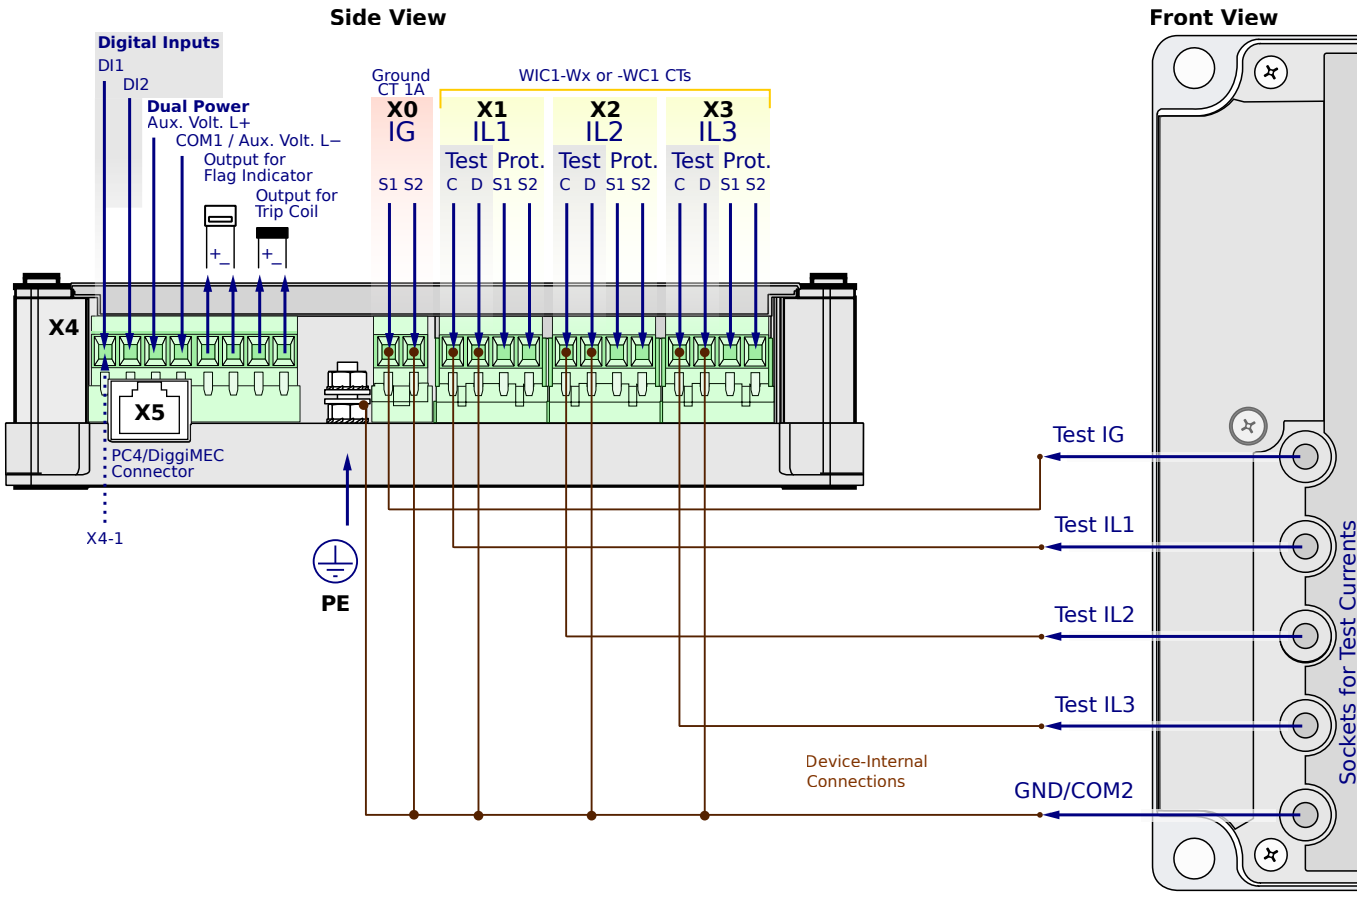


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2PAH

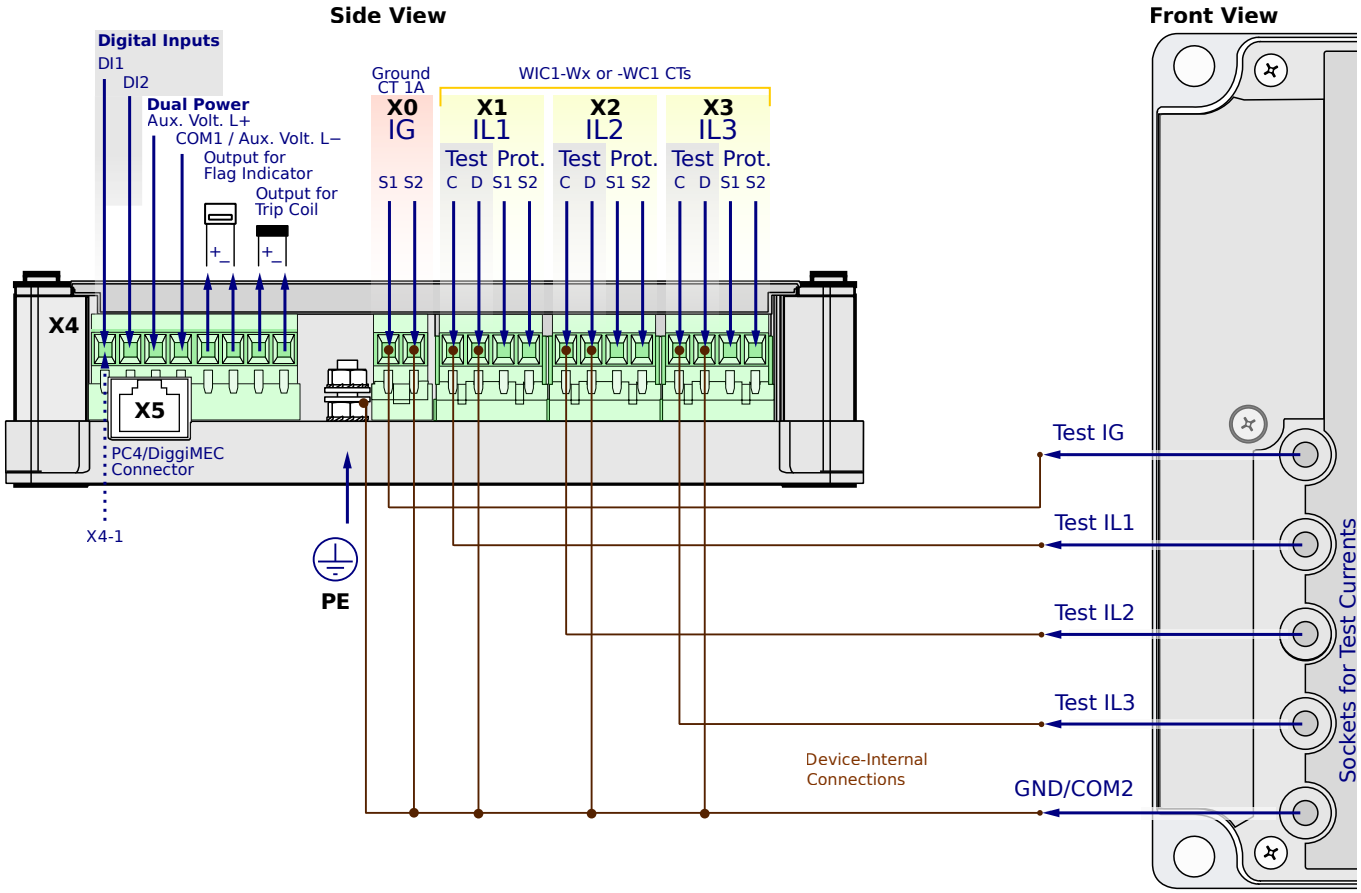


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0ND2PB0

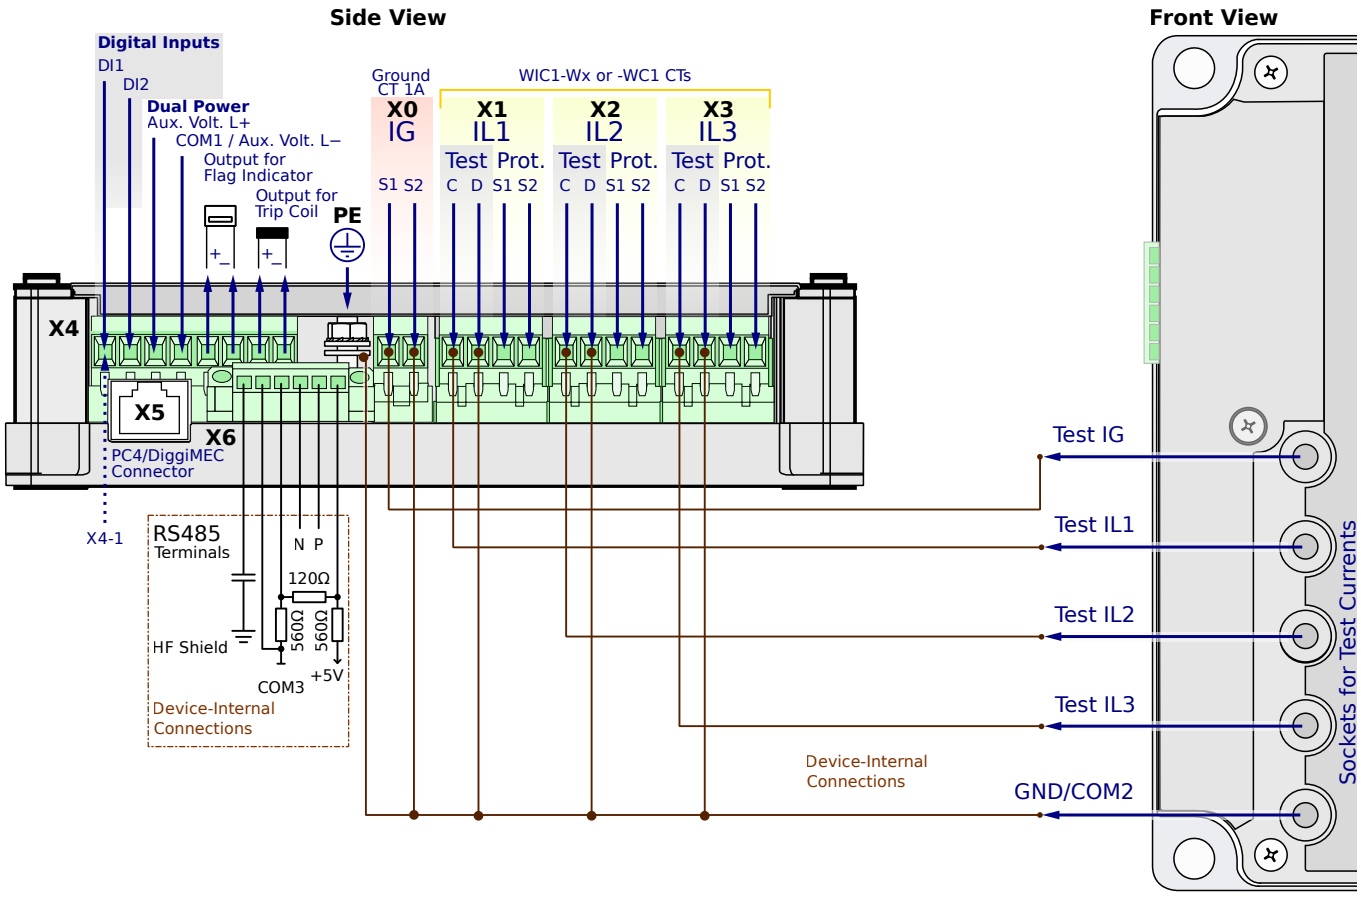


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2PBH

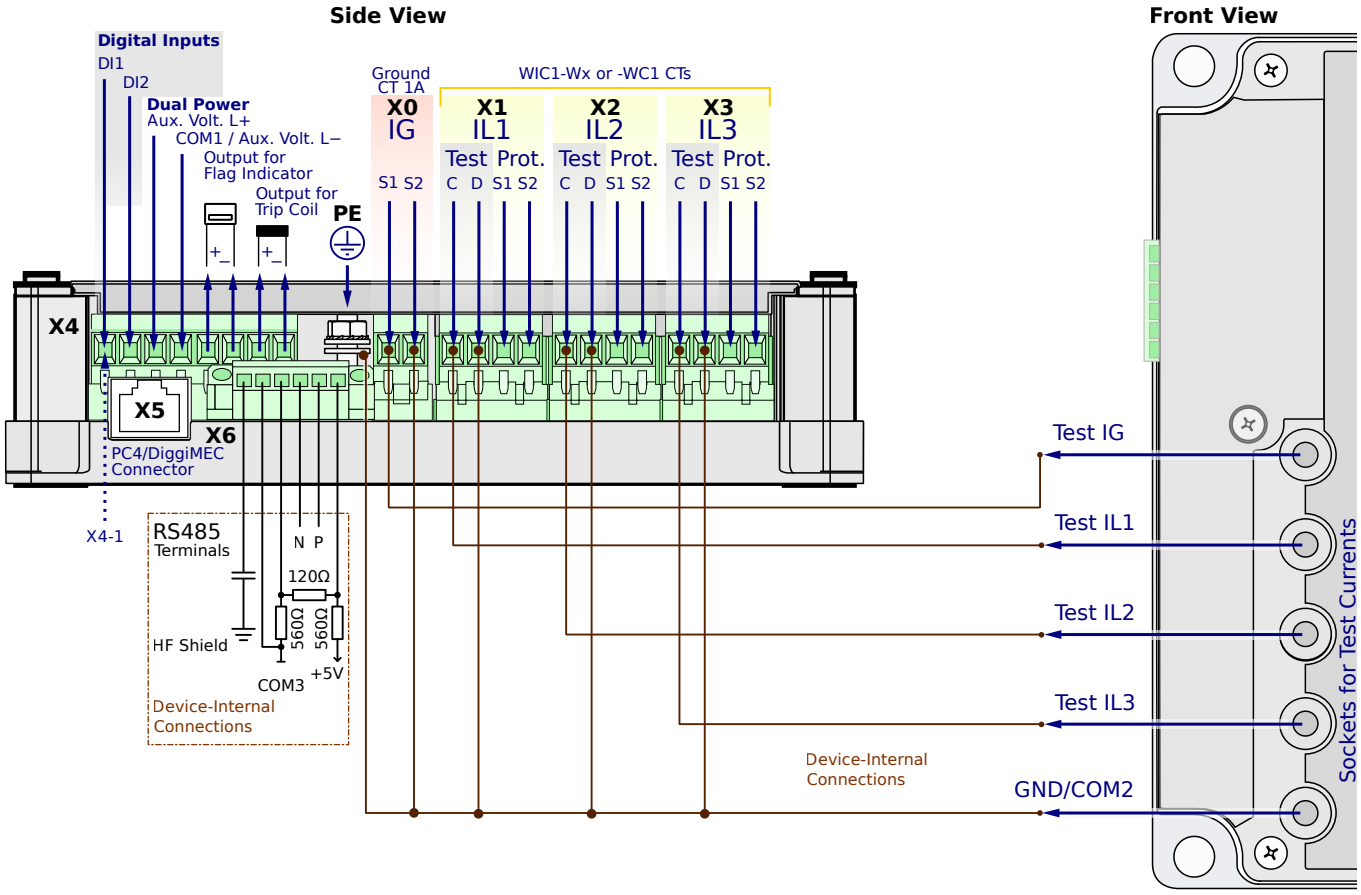


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0ND2PC0

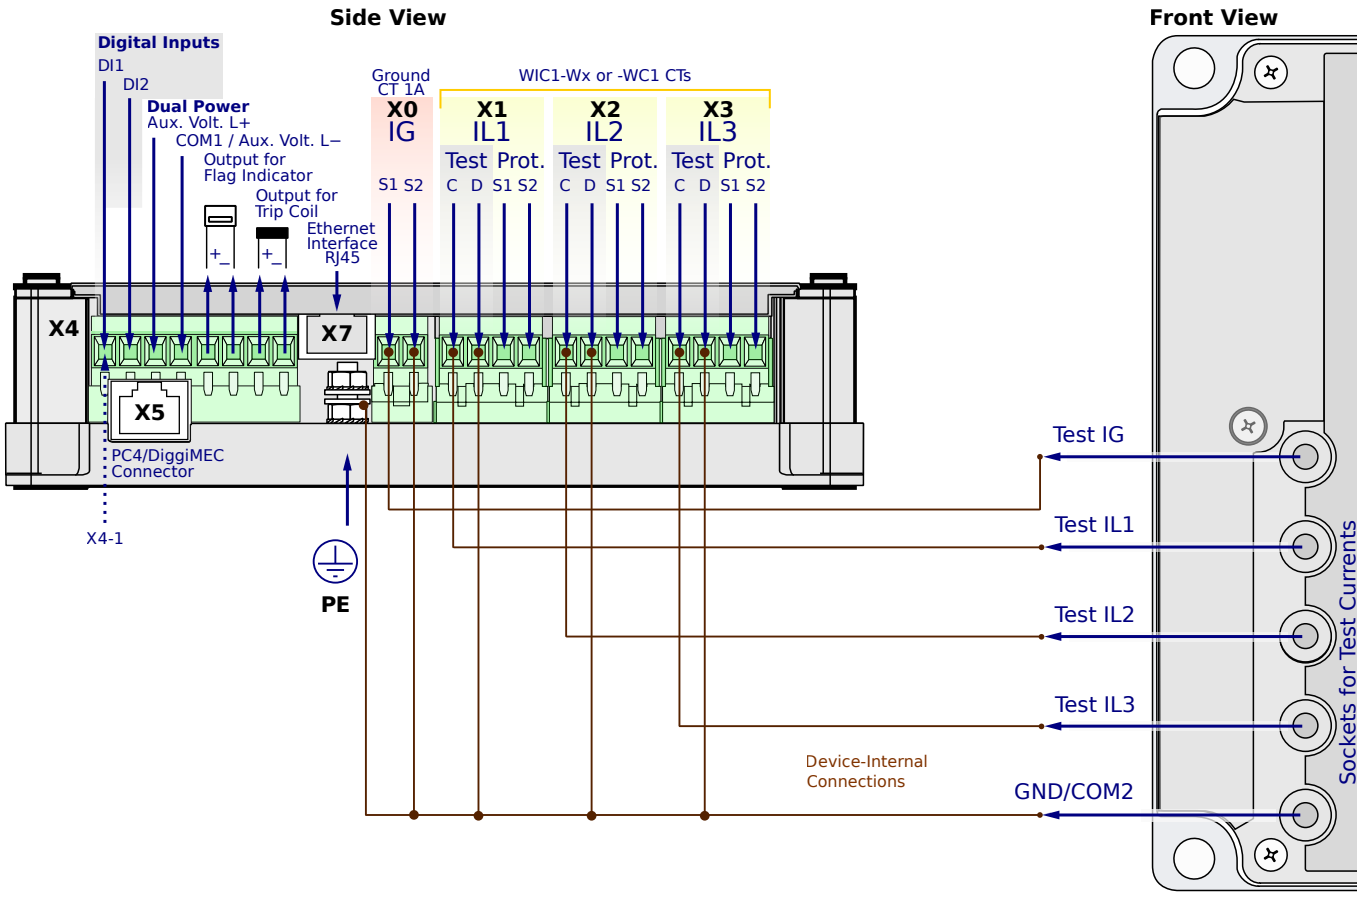


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2PCH

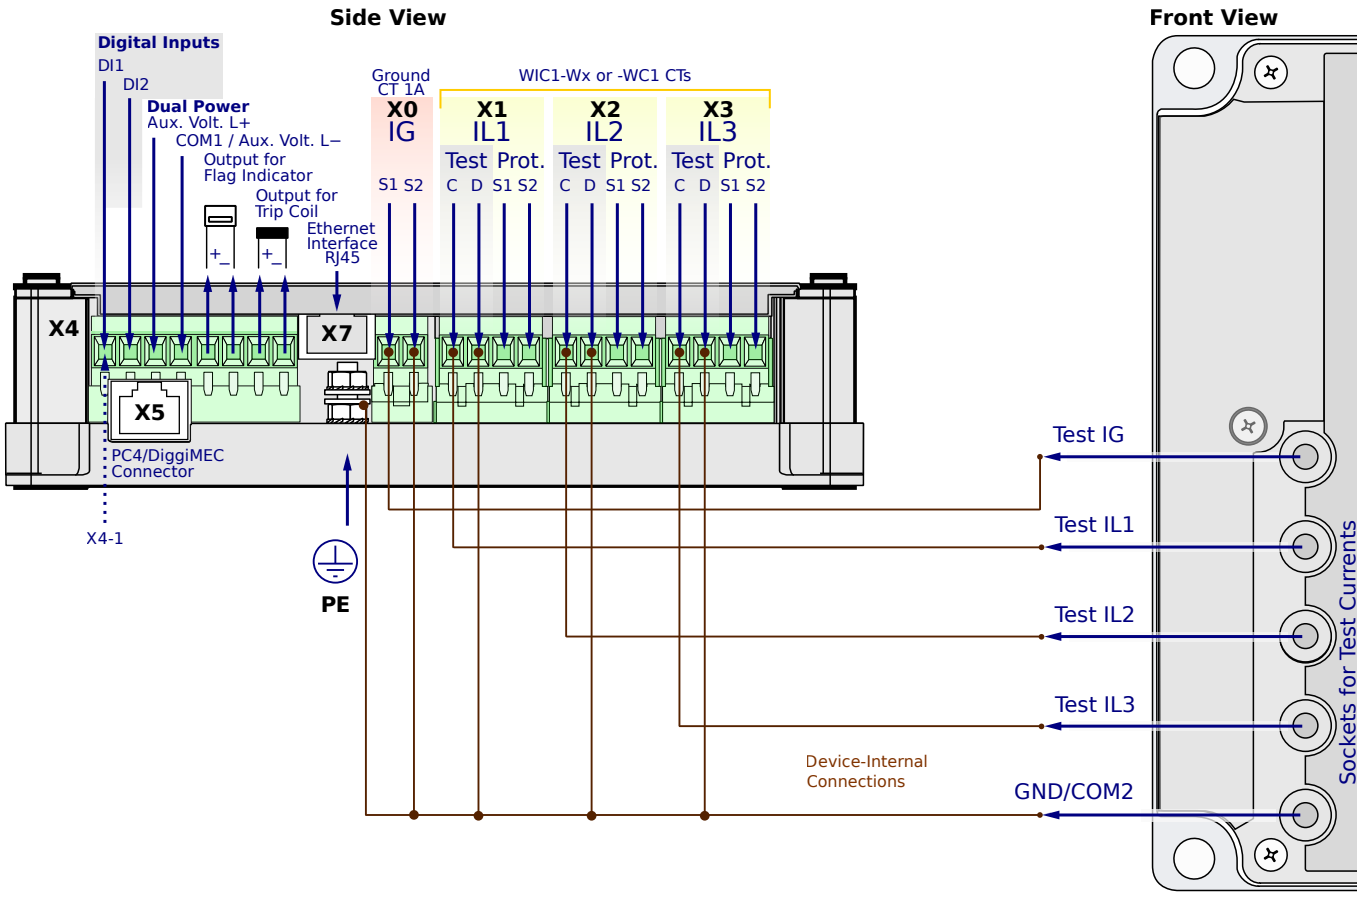


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0ND2PL0

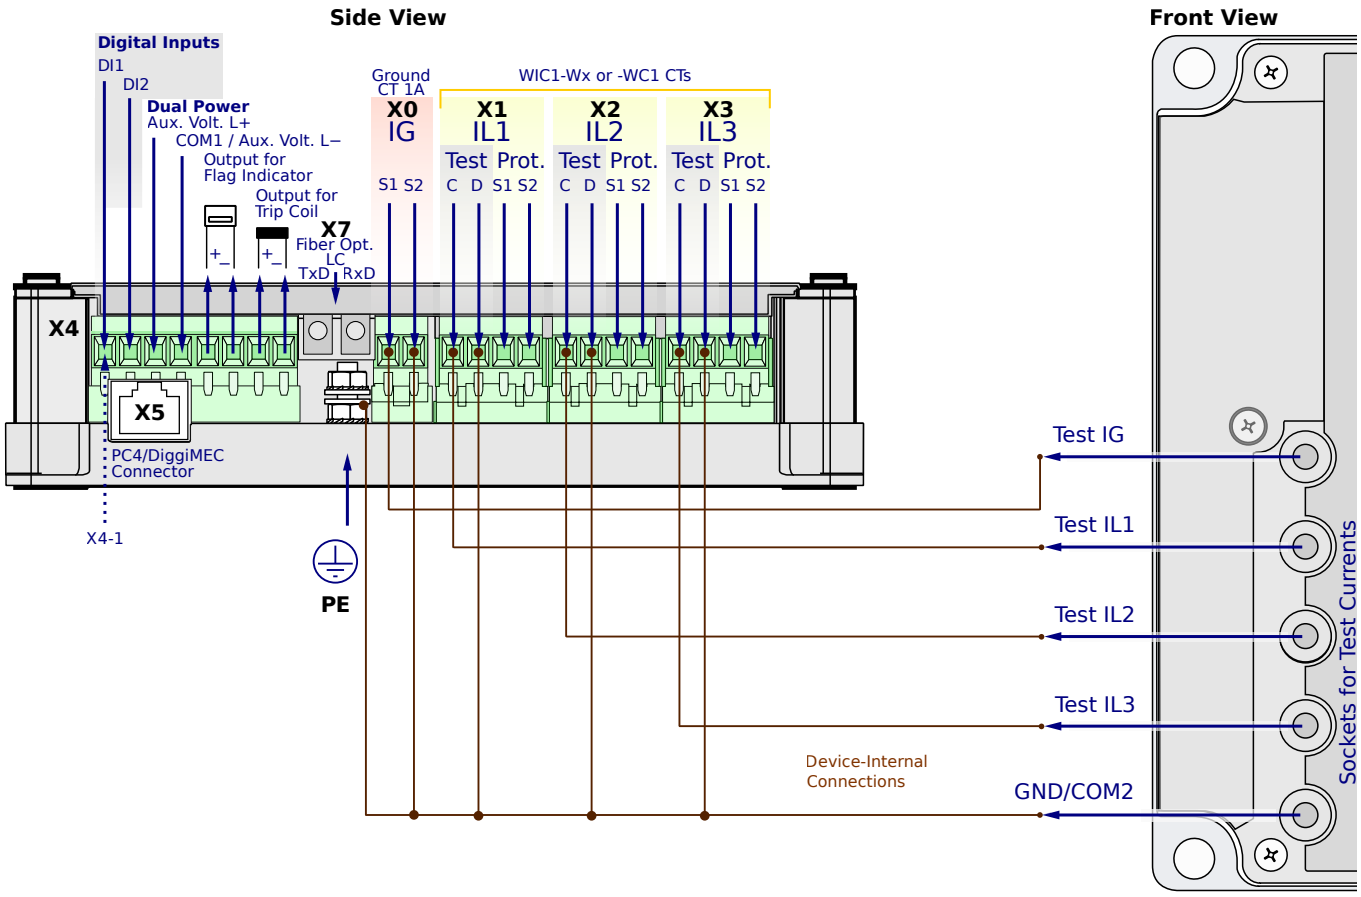


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0ND2PLH

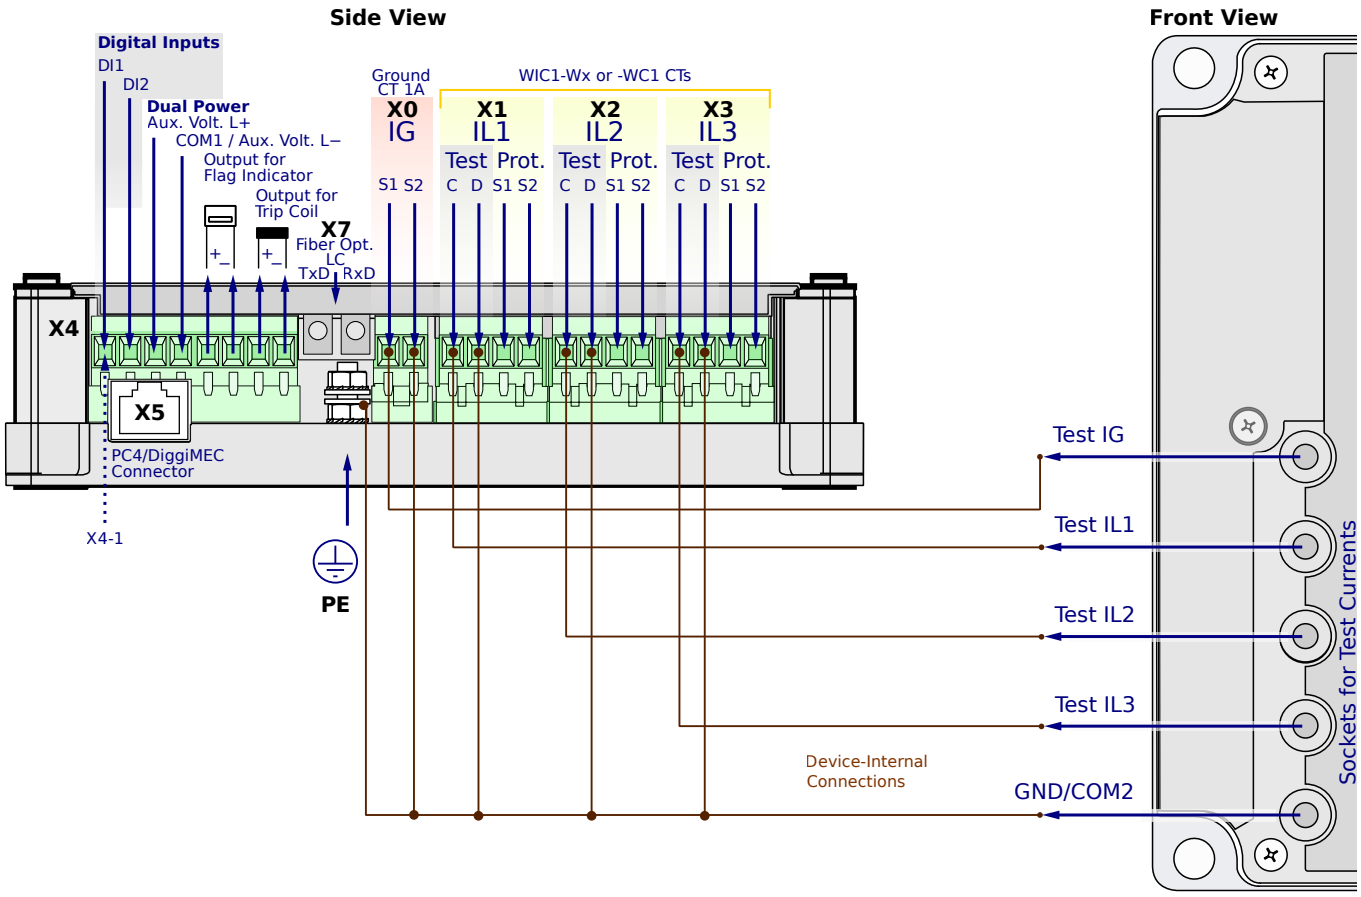


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1SA0

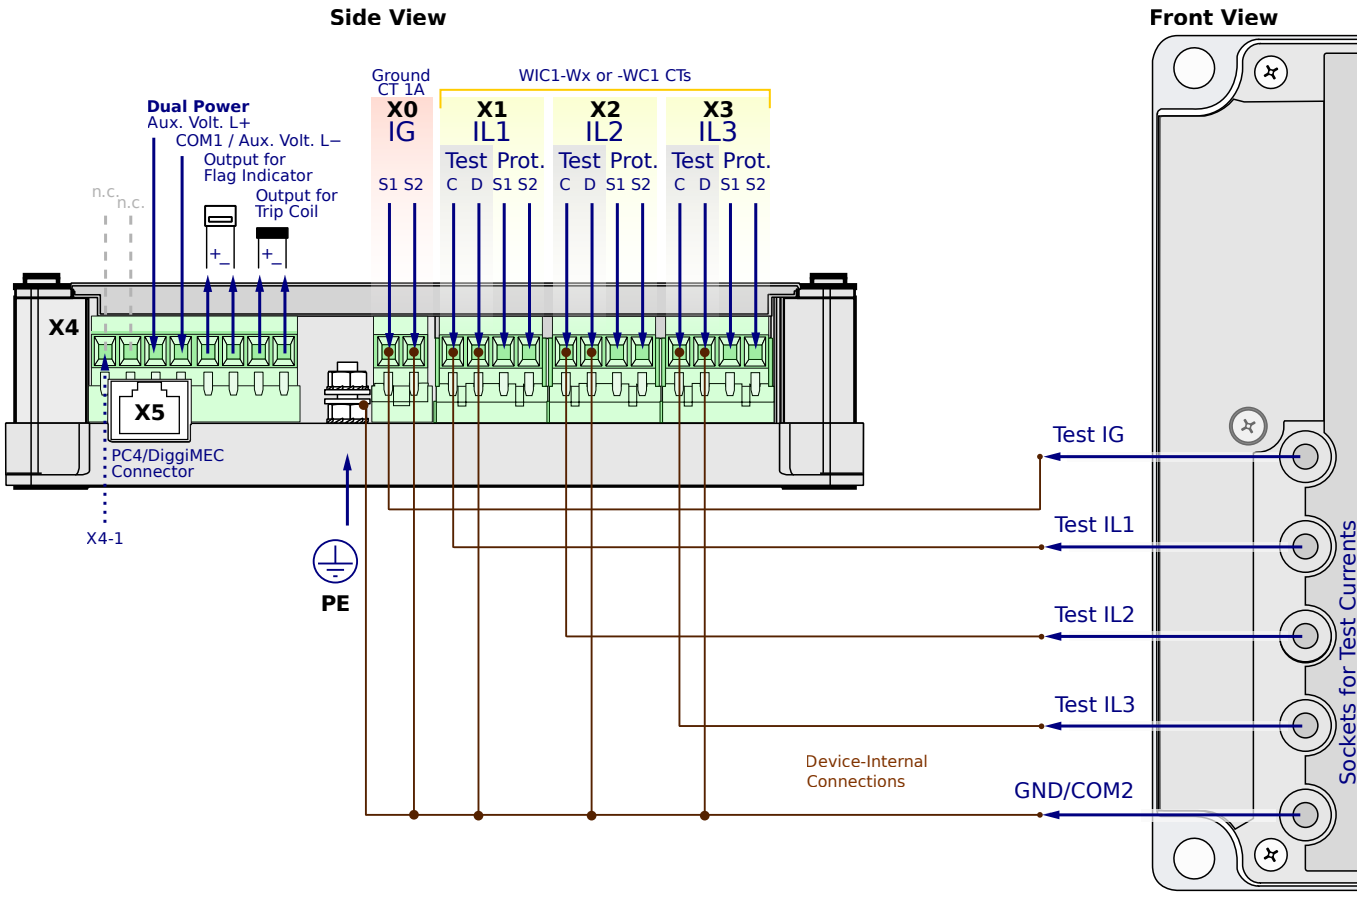


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1SAH

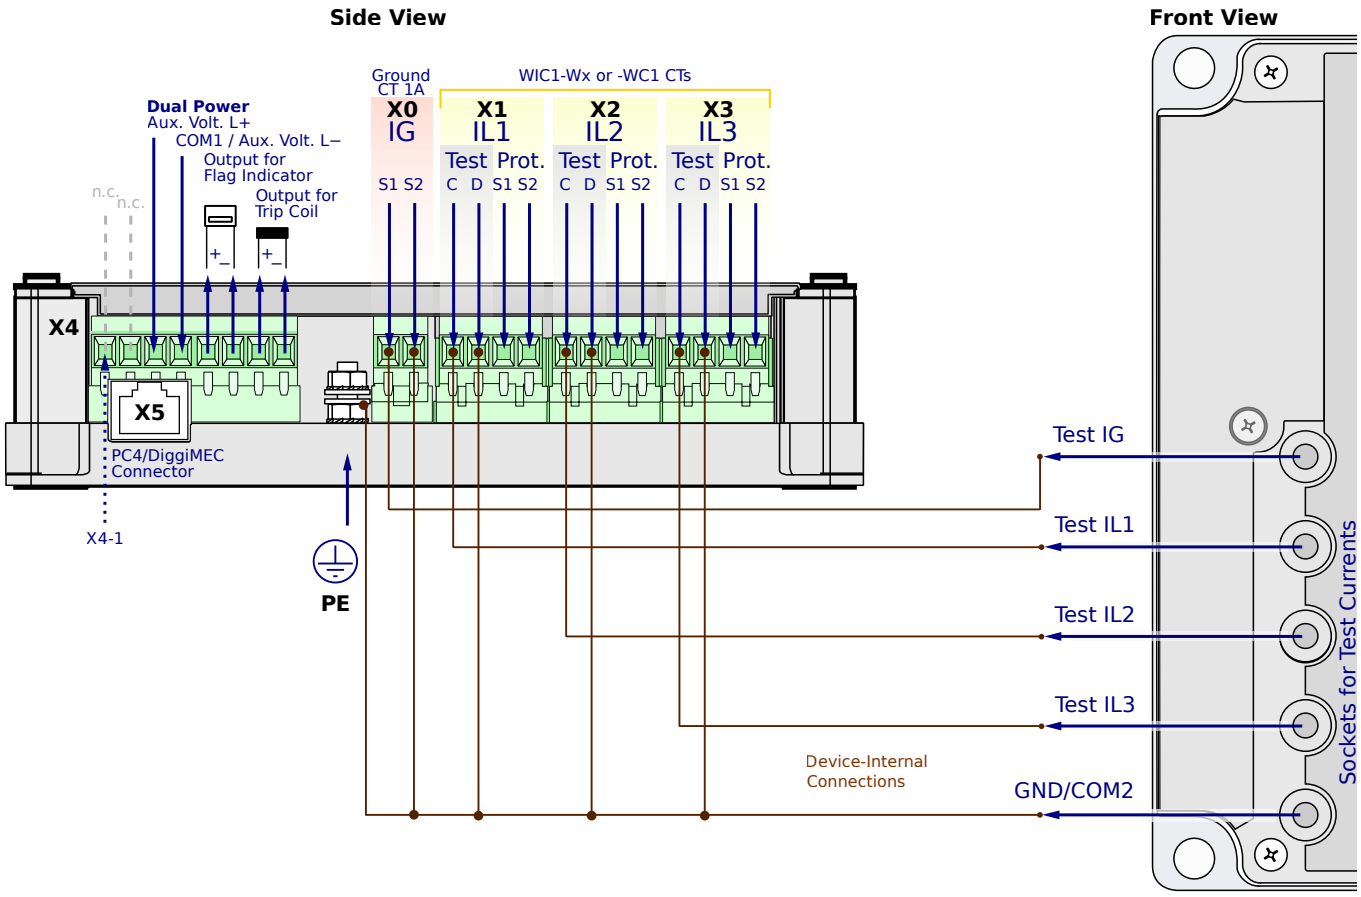


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1SB0

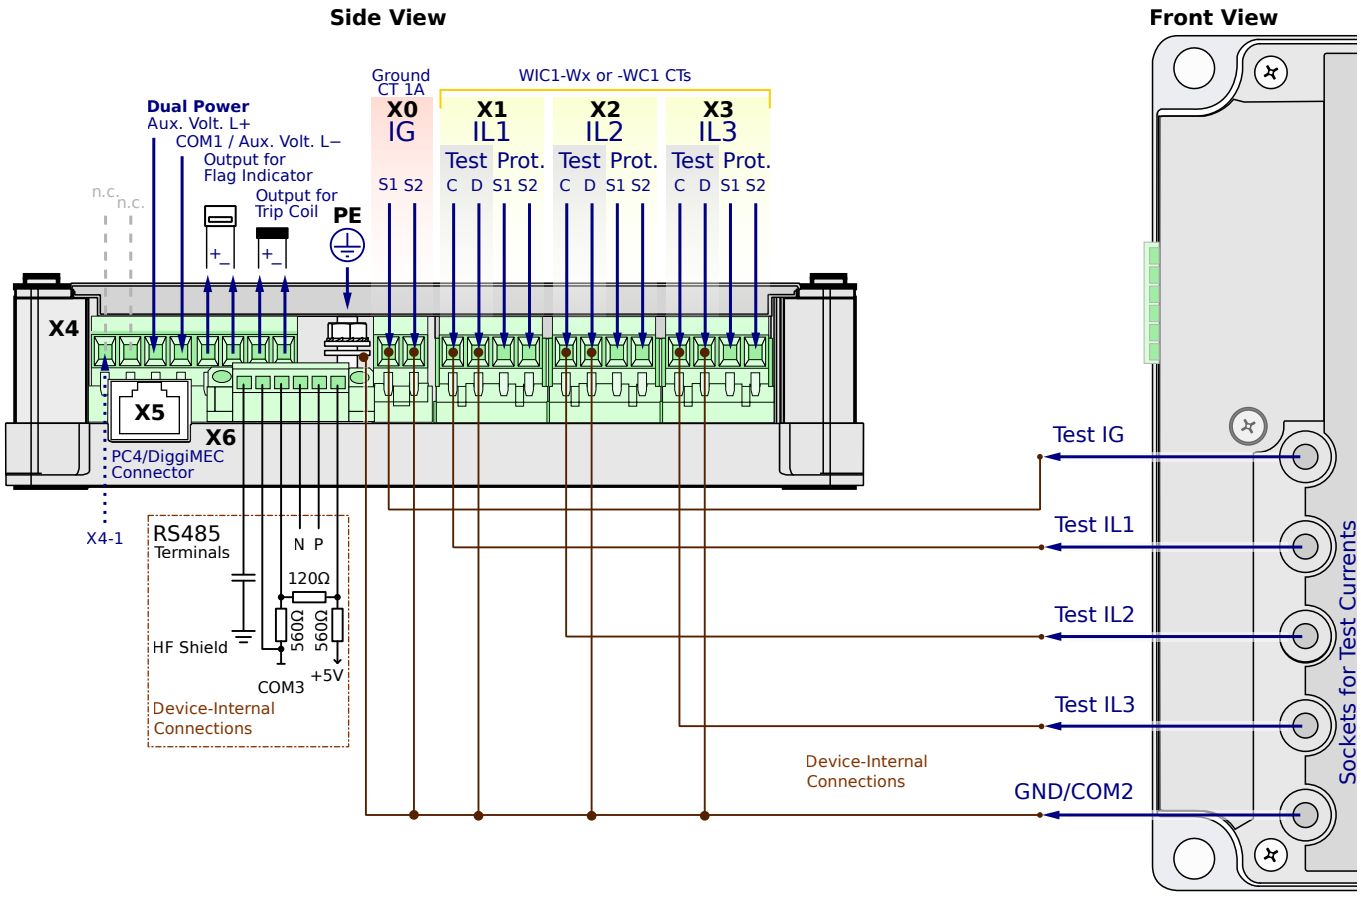


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1SBH

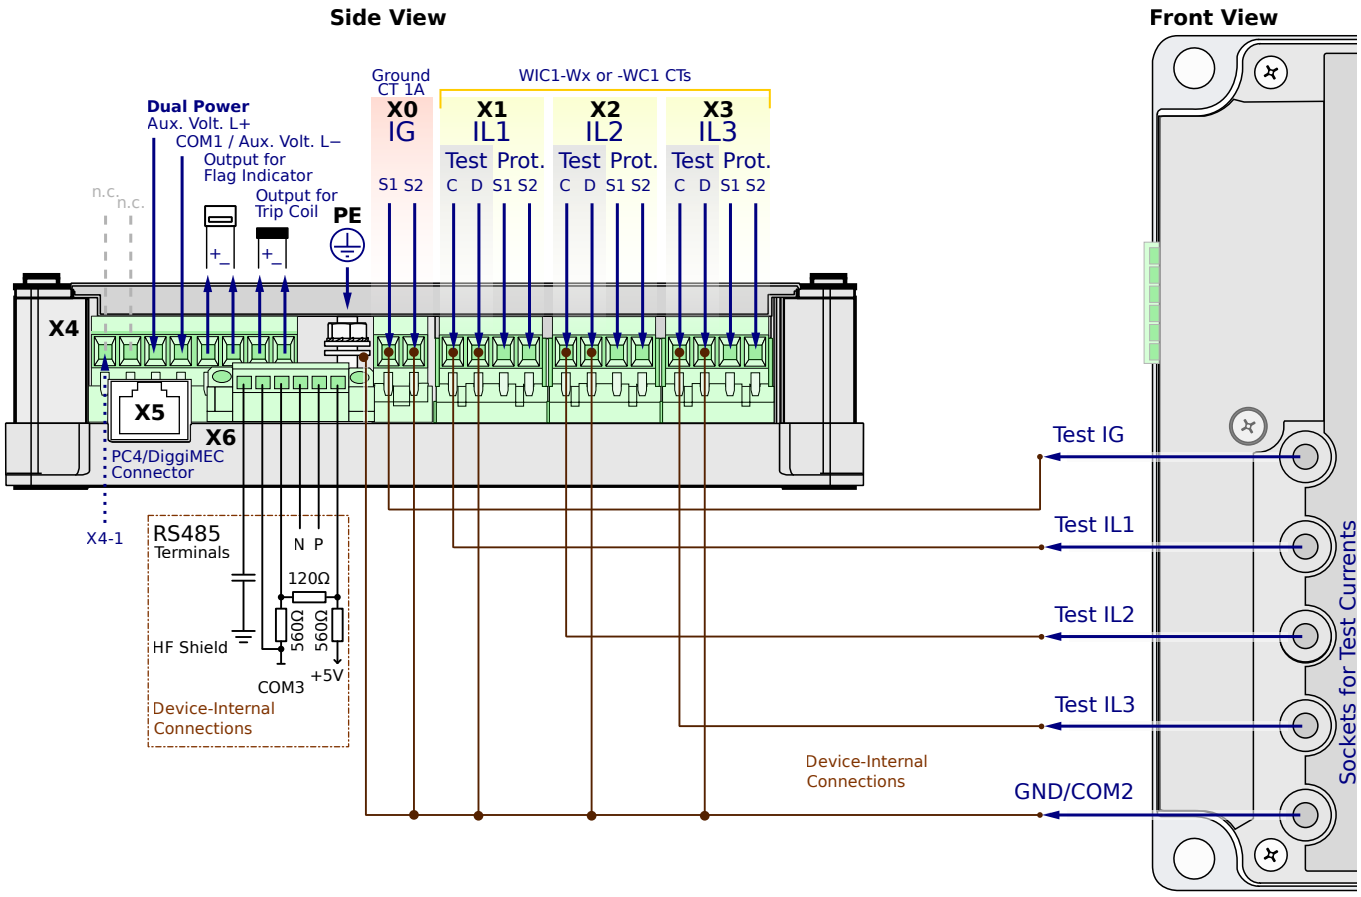


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1SC0

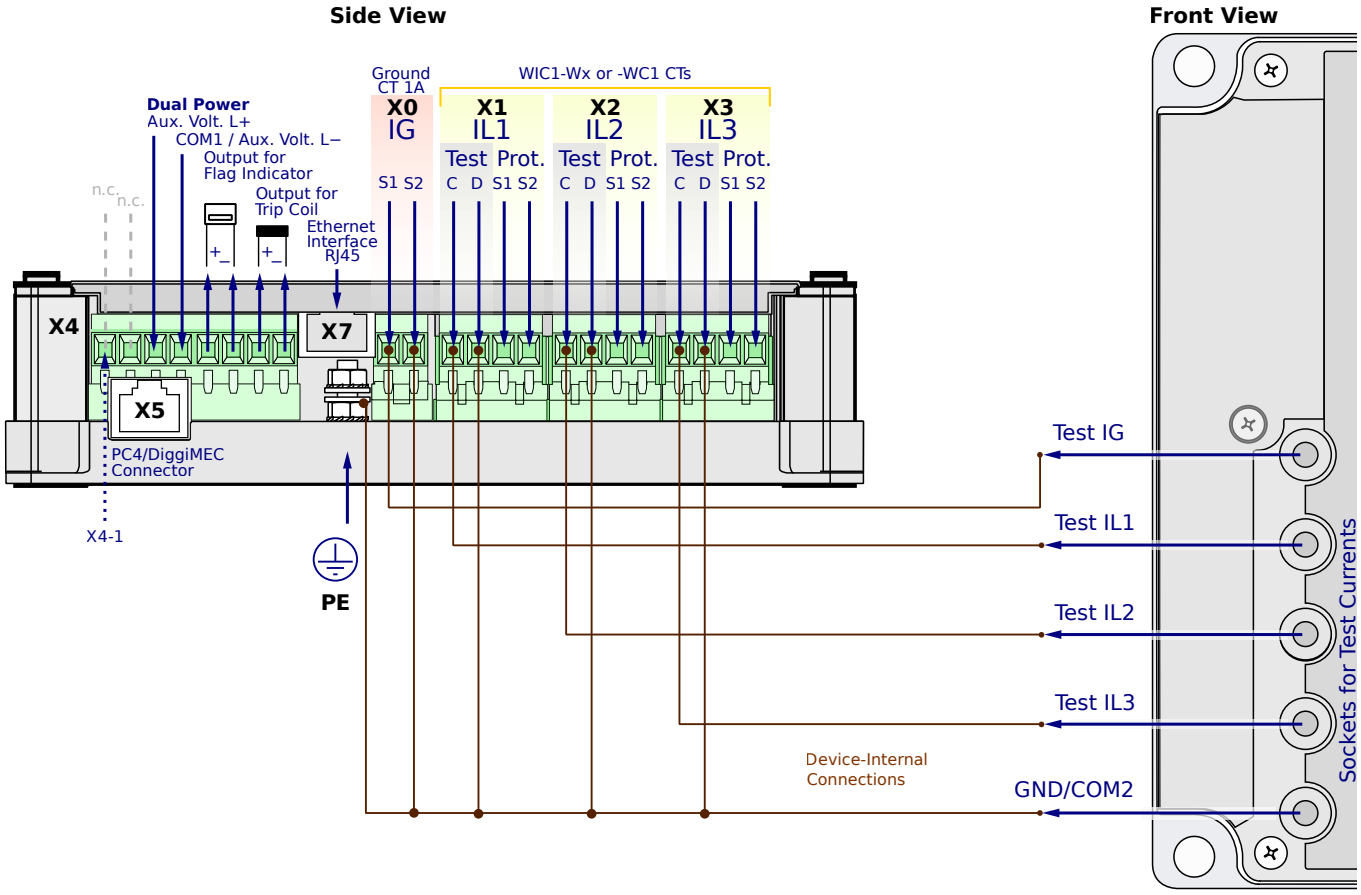


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1SCH

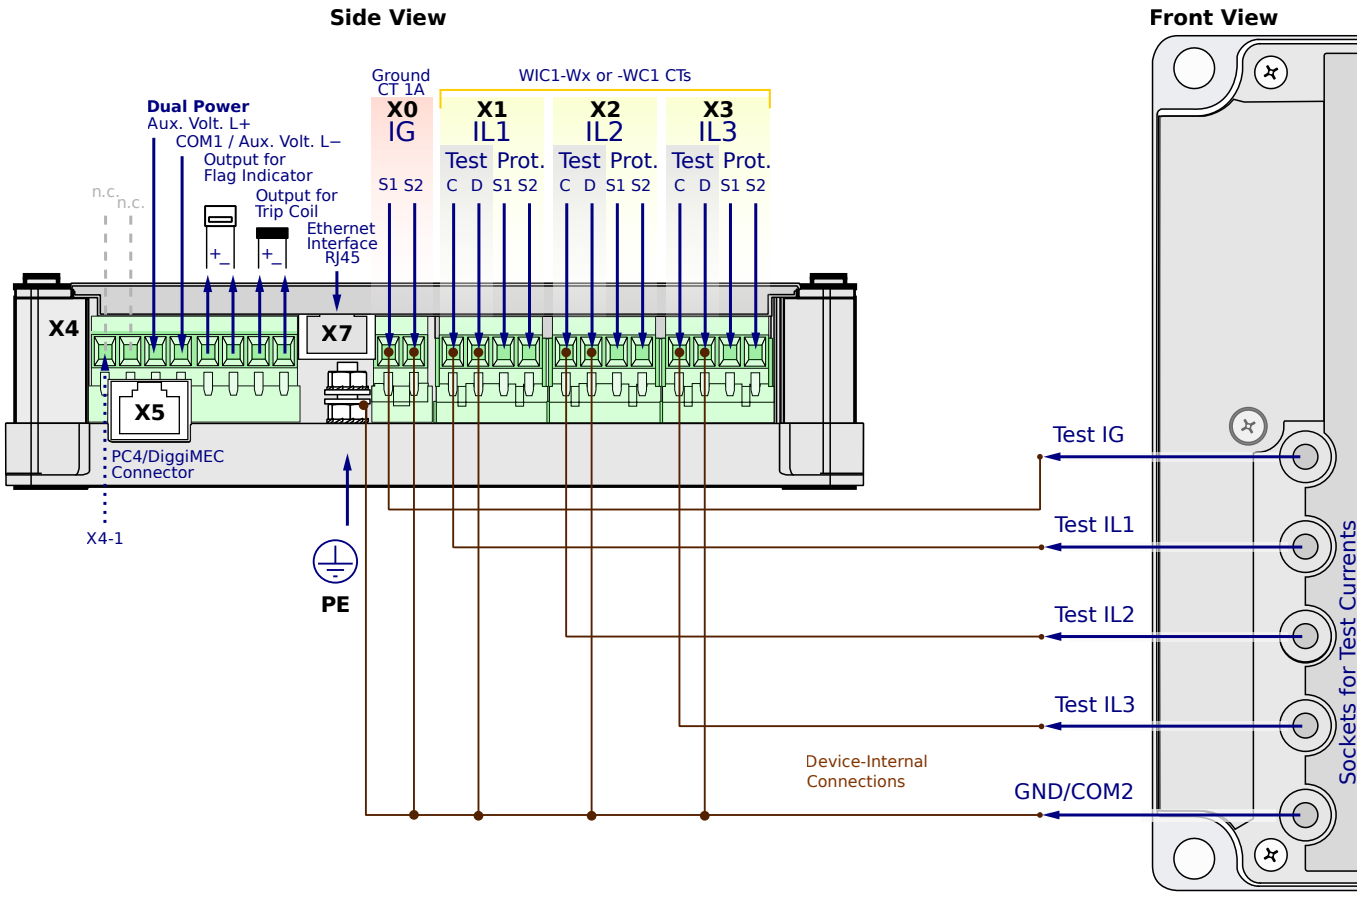


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1SL0

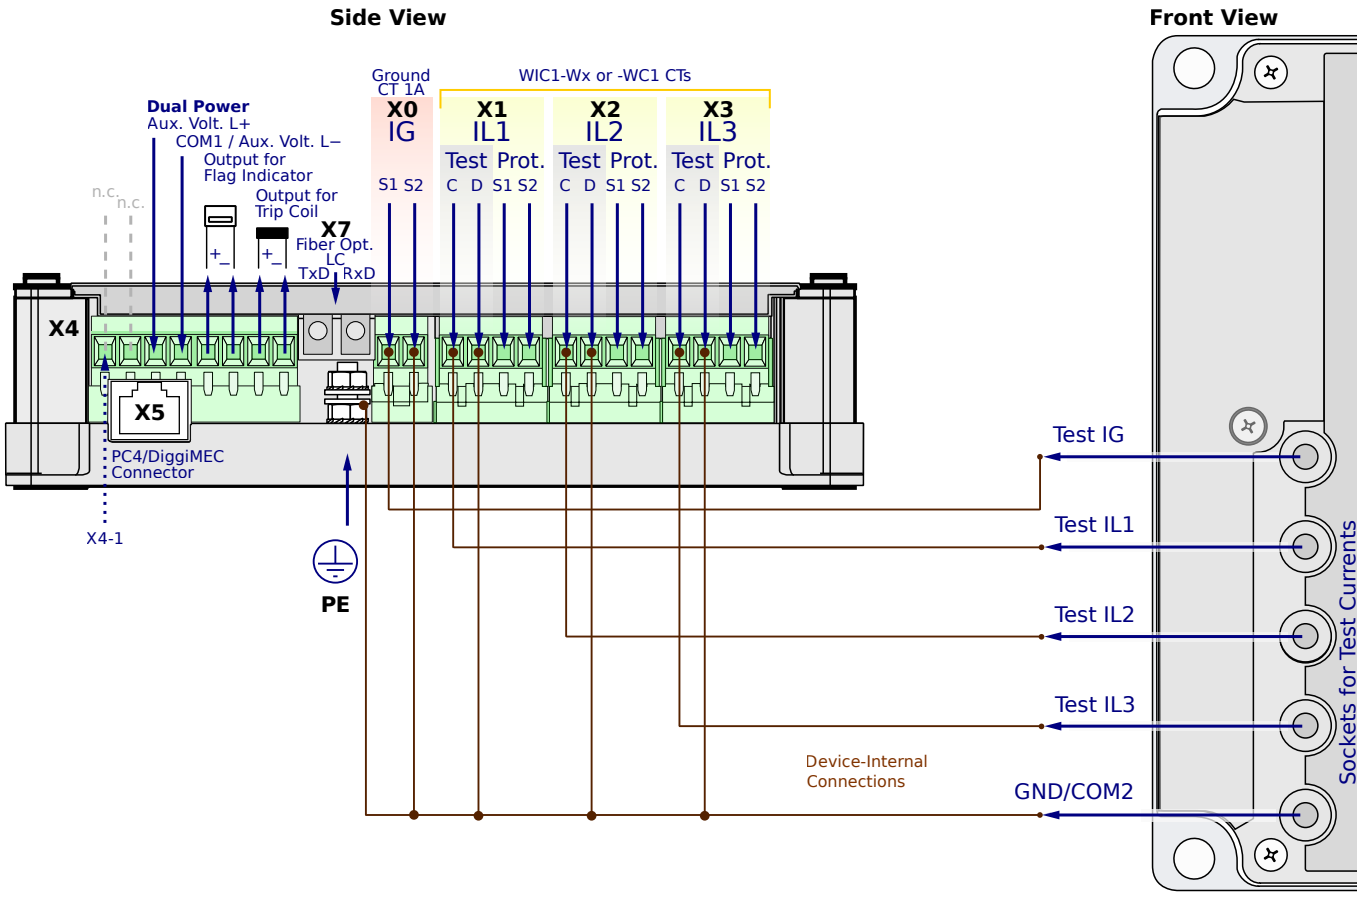


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1SLH

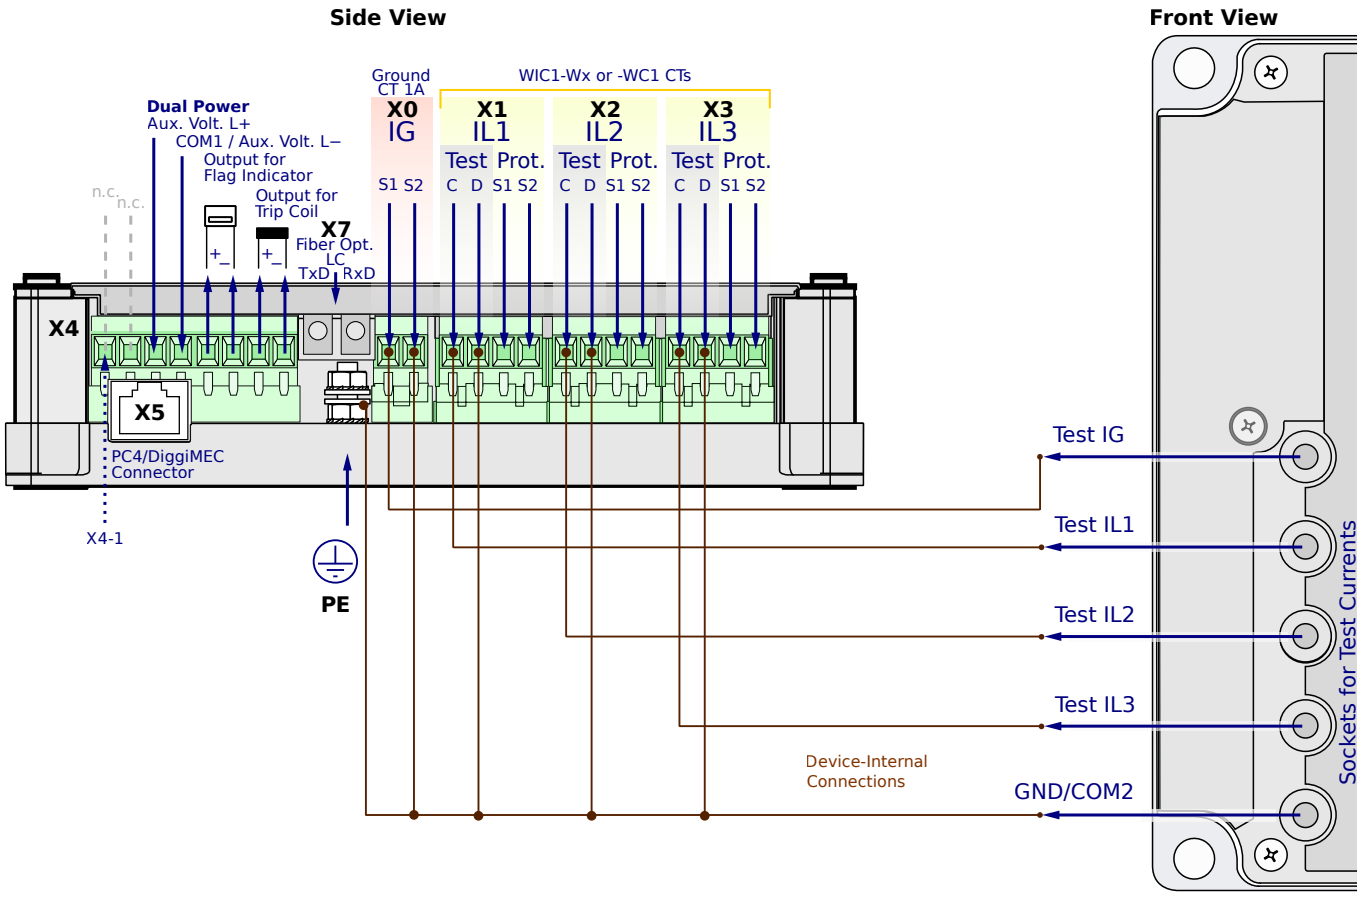


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1AA0

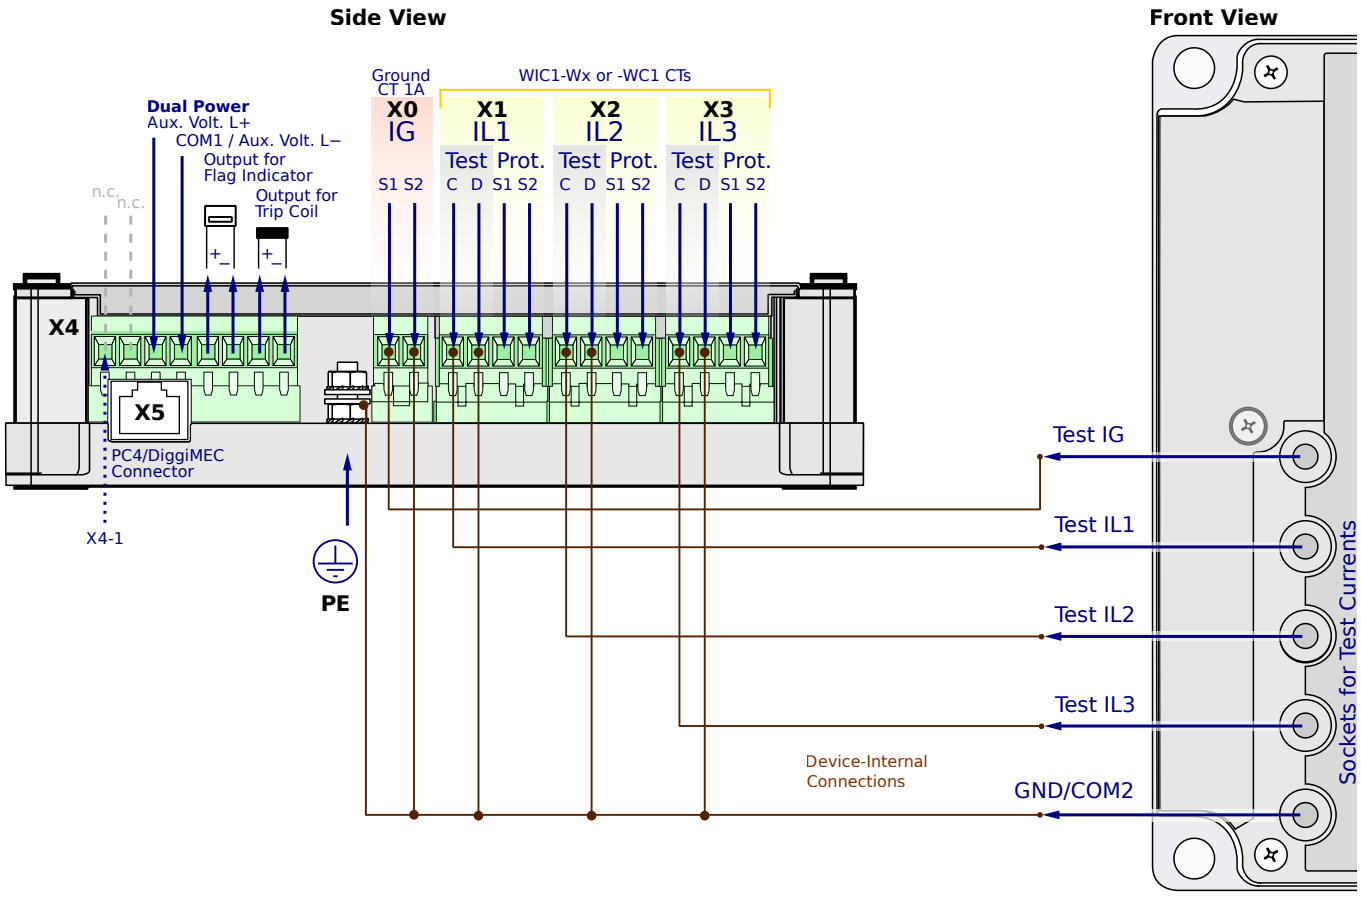


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1AAH

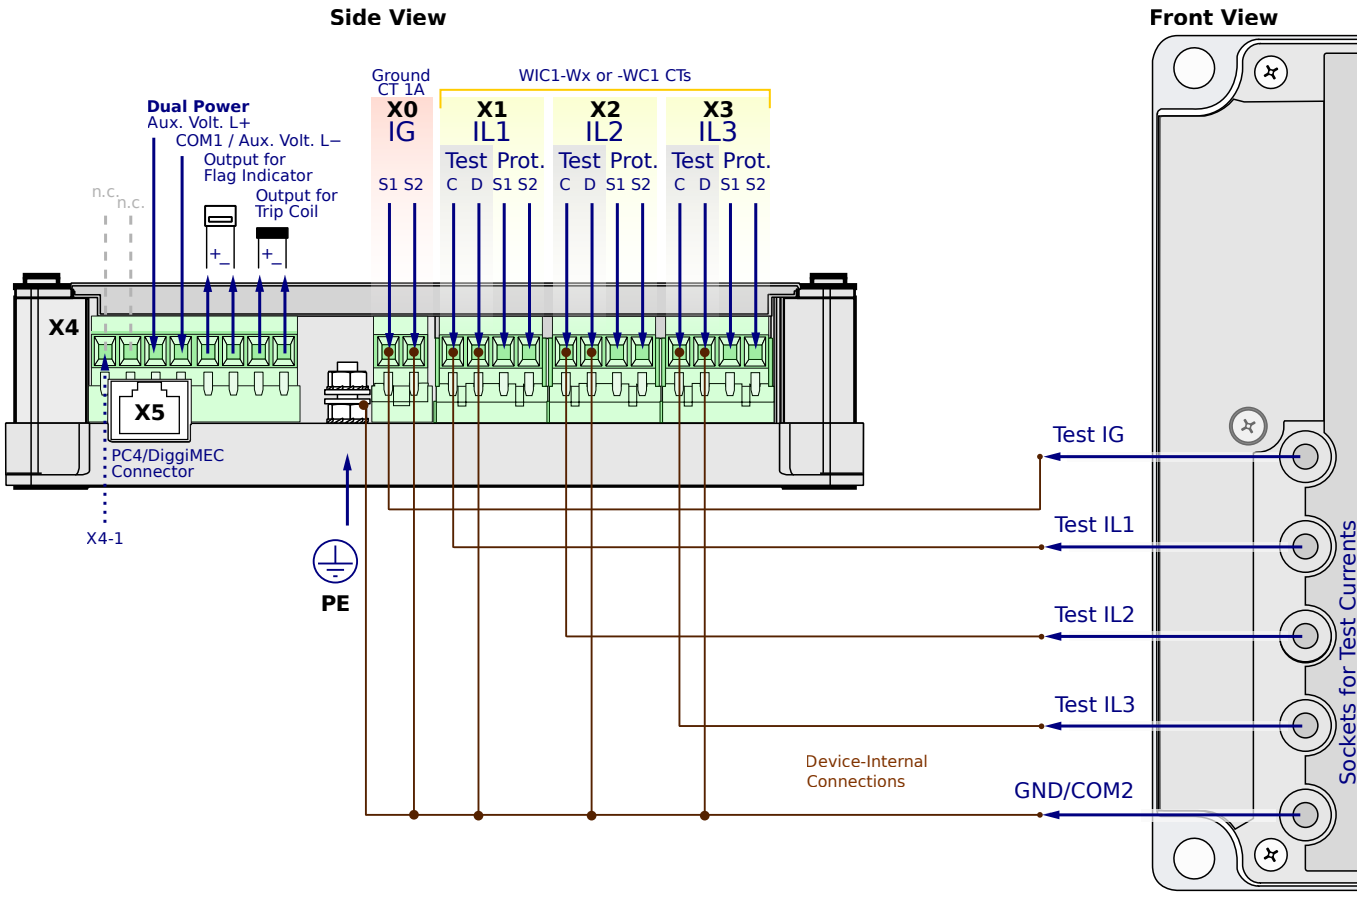


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1AB0

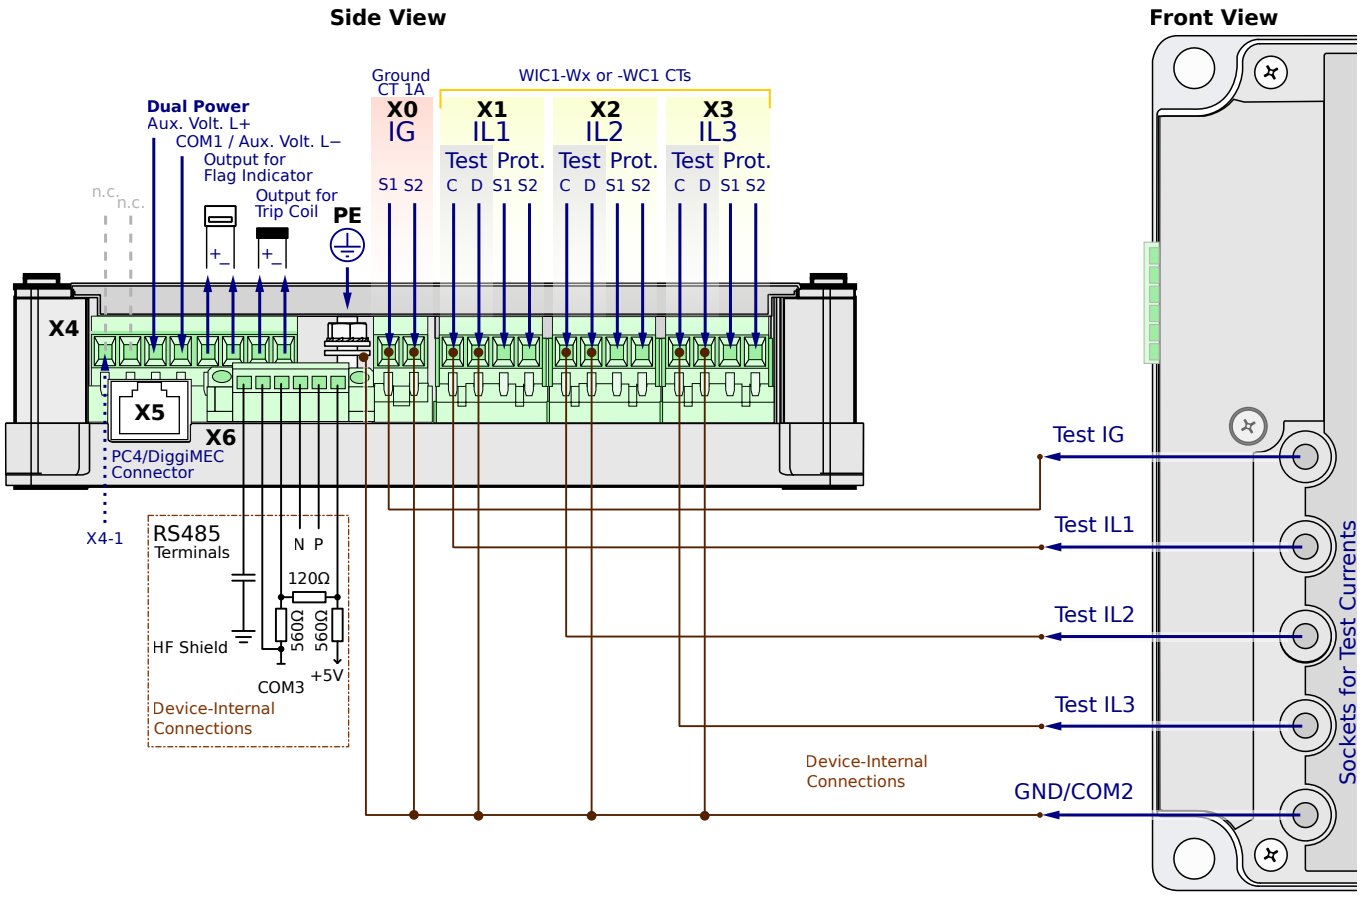


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1ABH

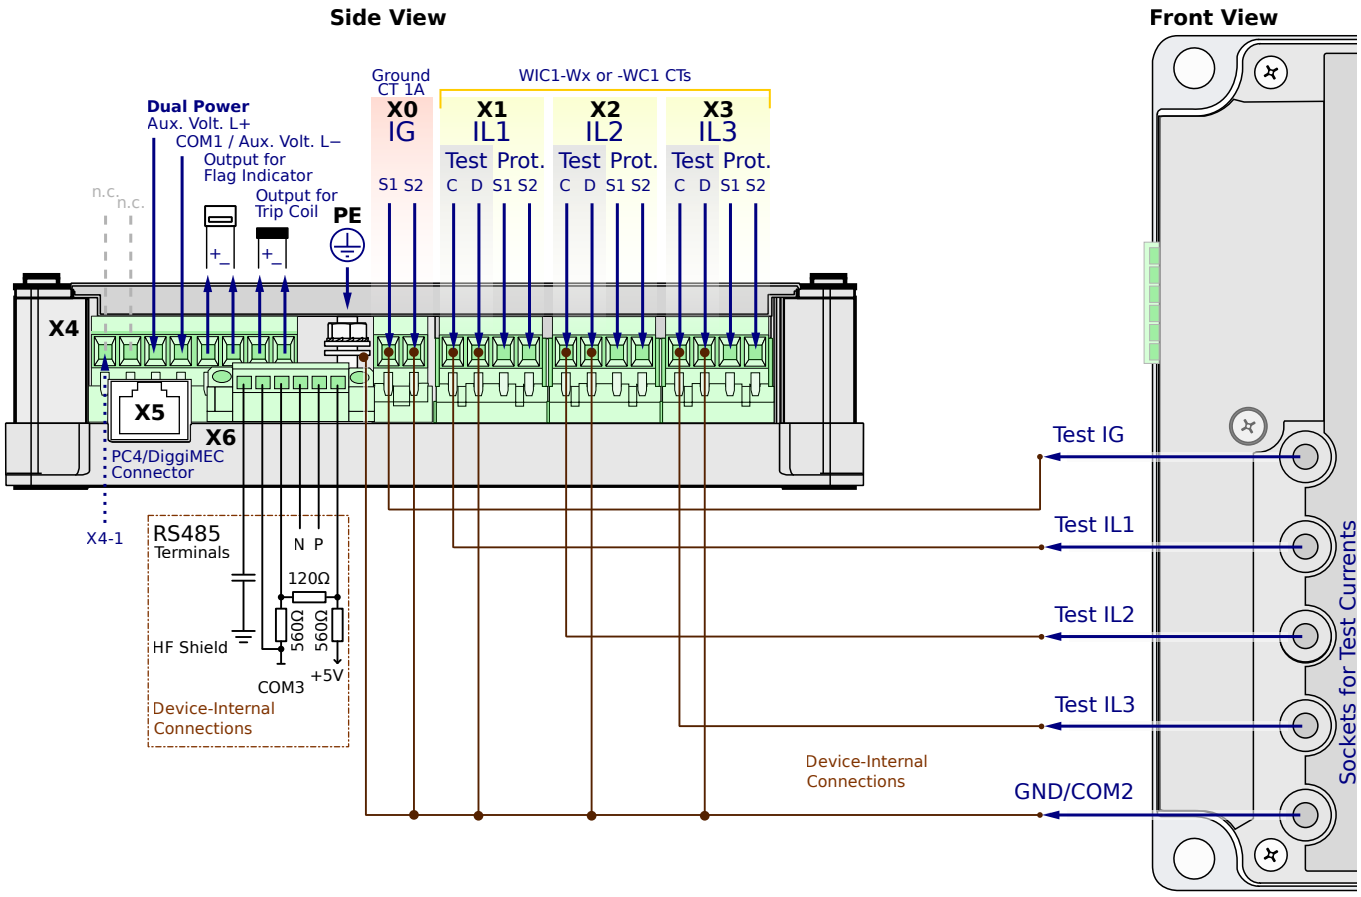


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1AC0

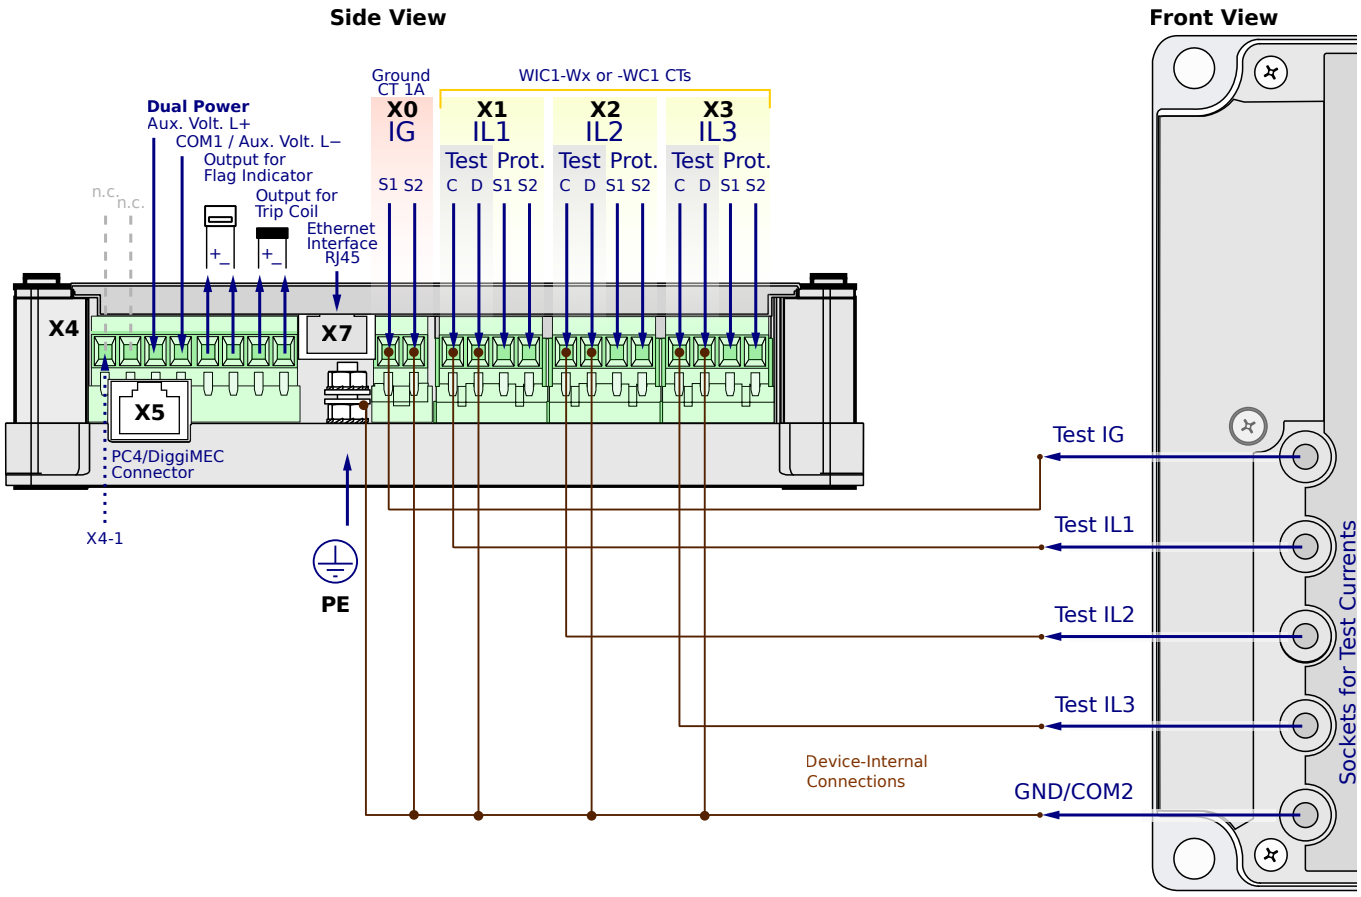


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1ACH

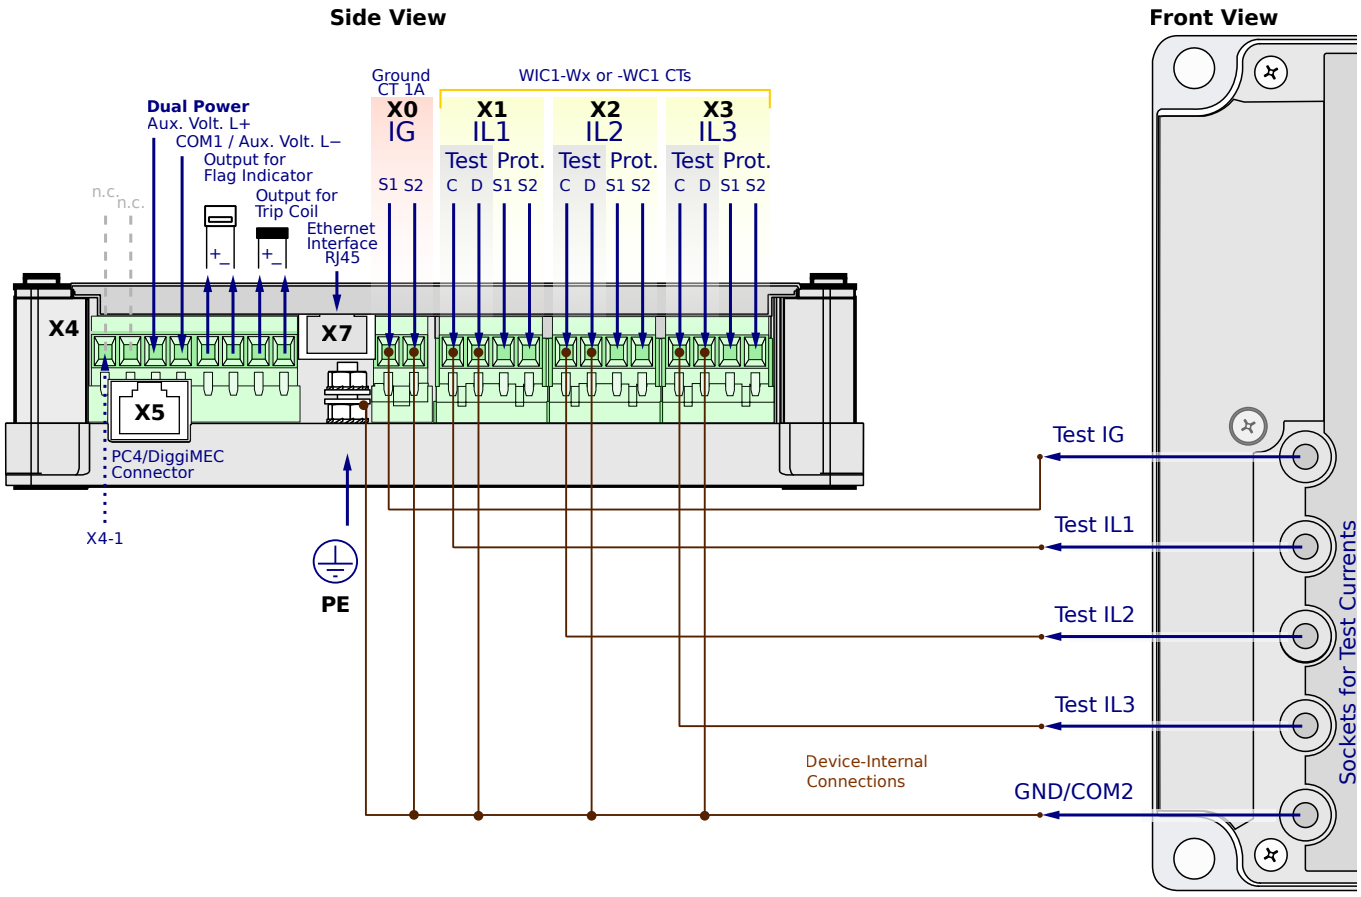


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1AL0

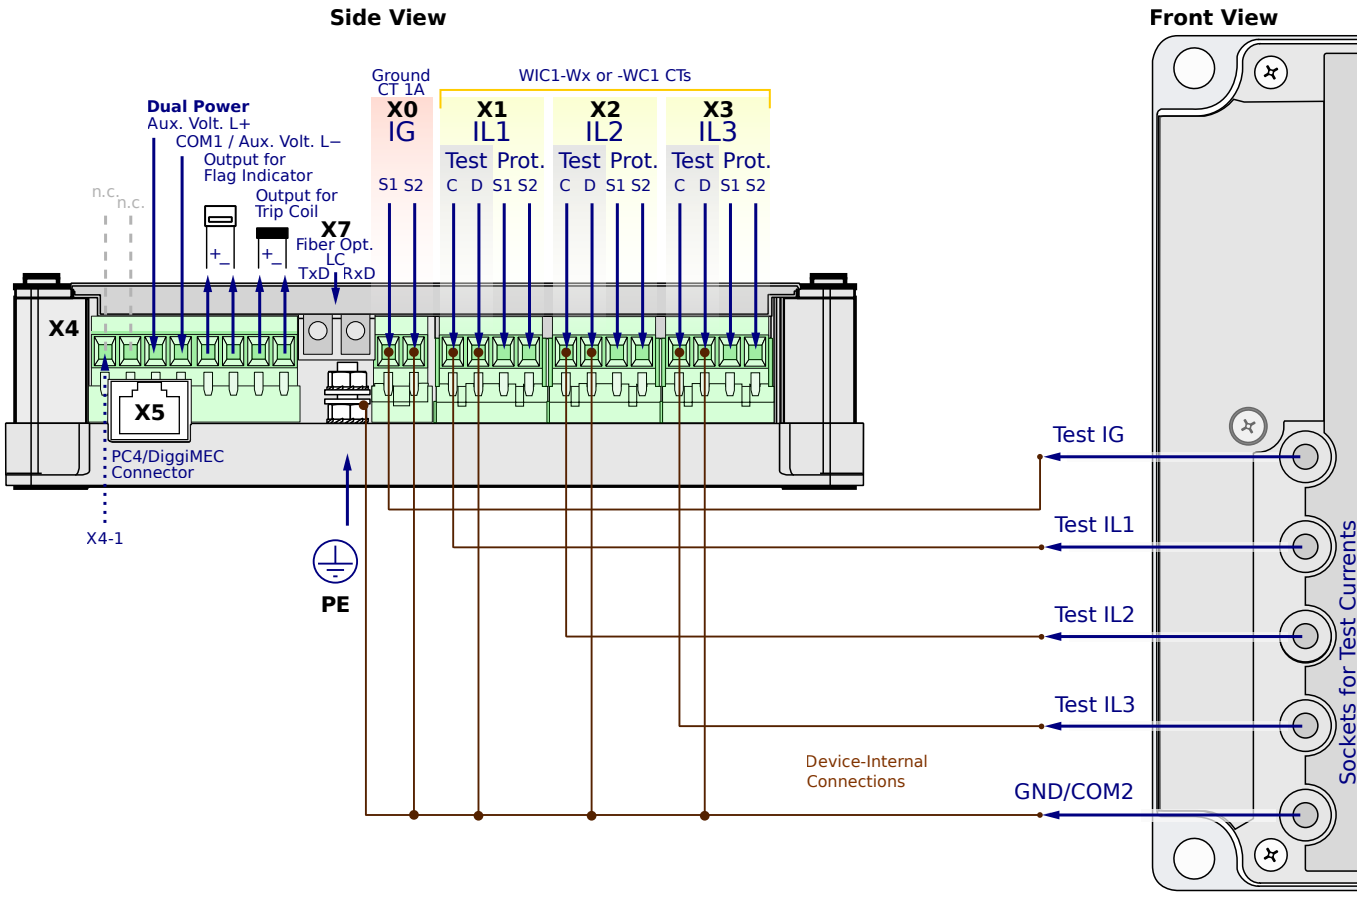


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1ALH

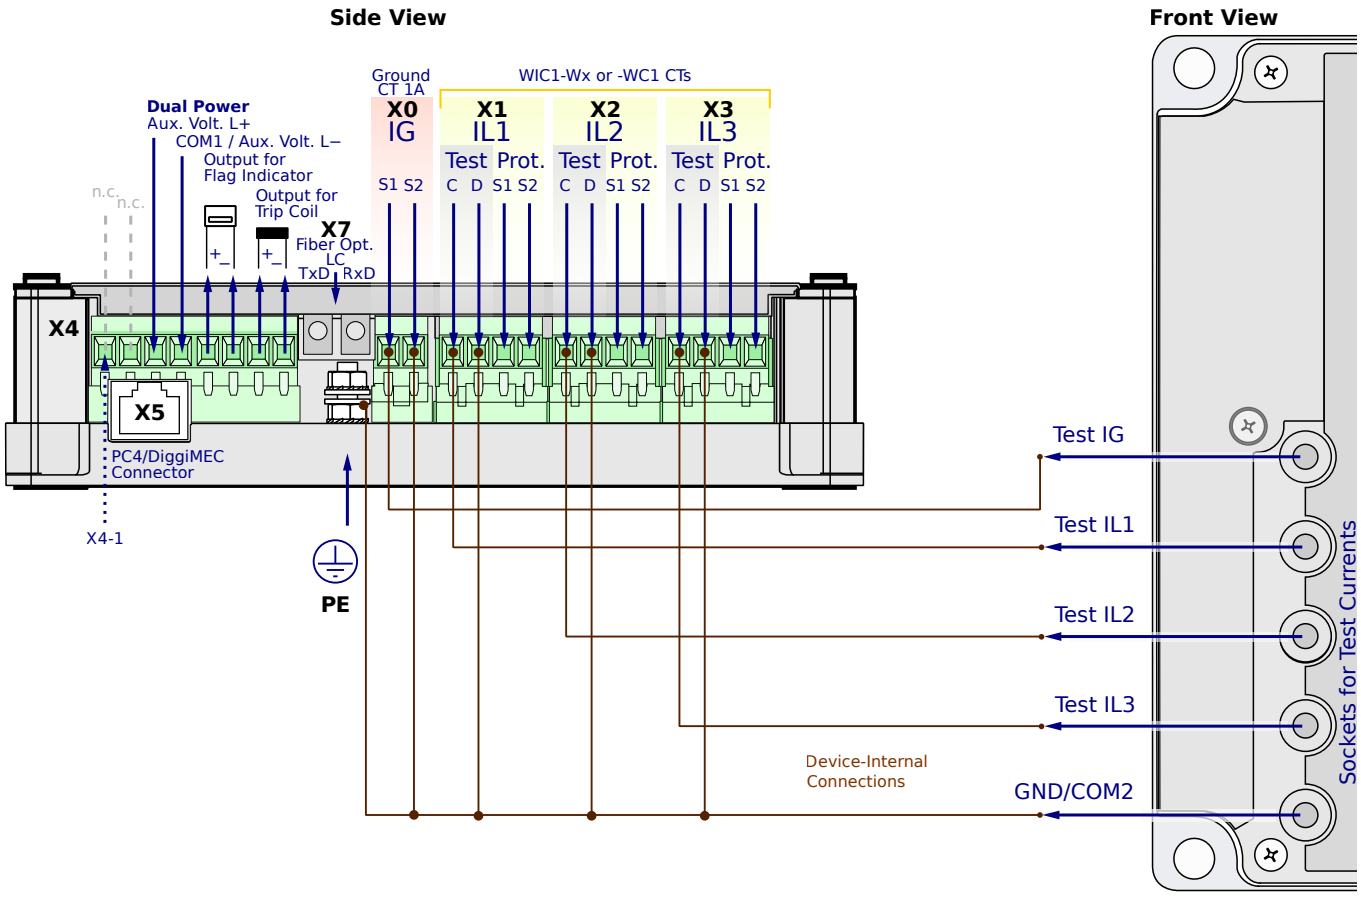


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1PA0

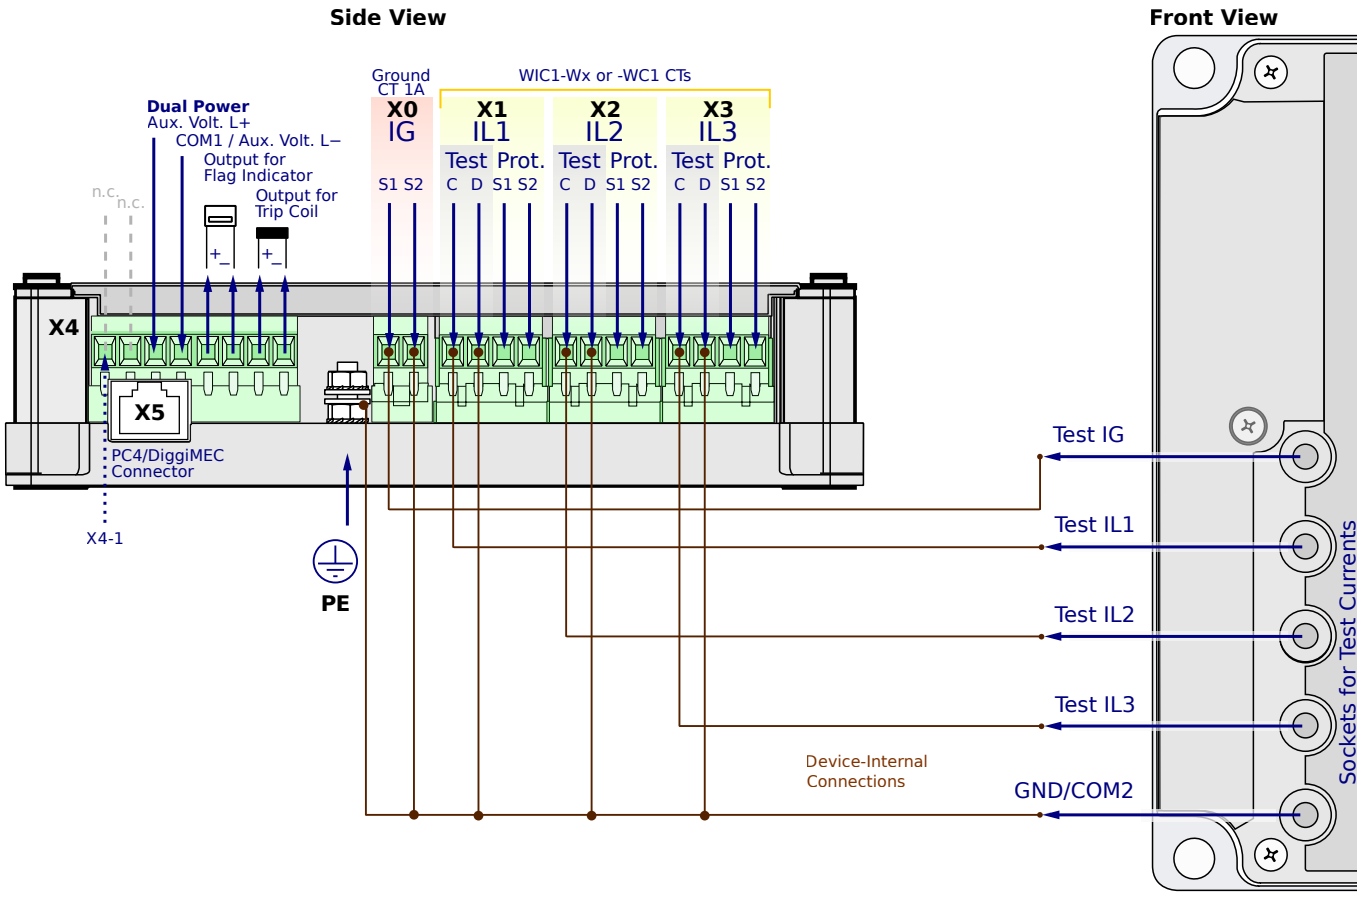


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1PAH

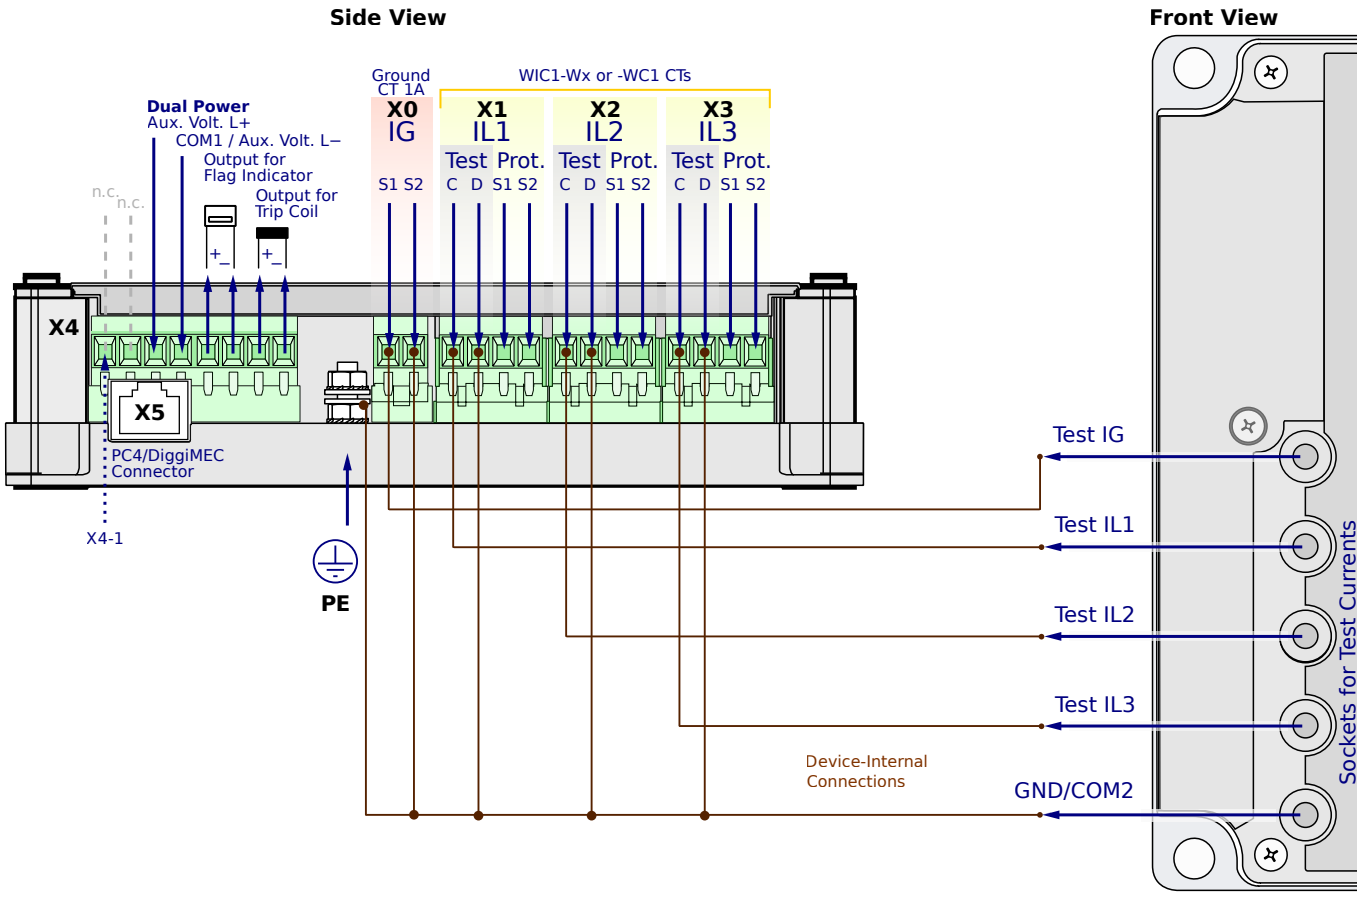


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM1PB0

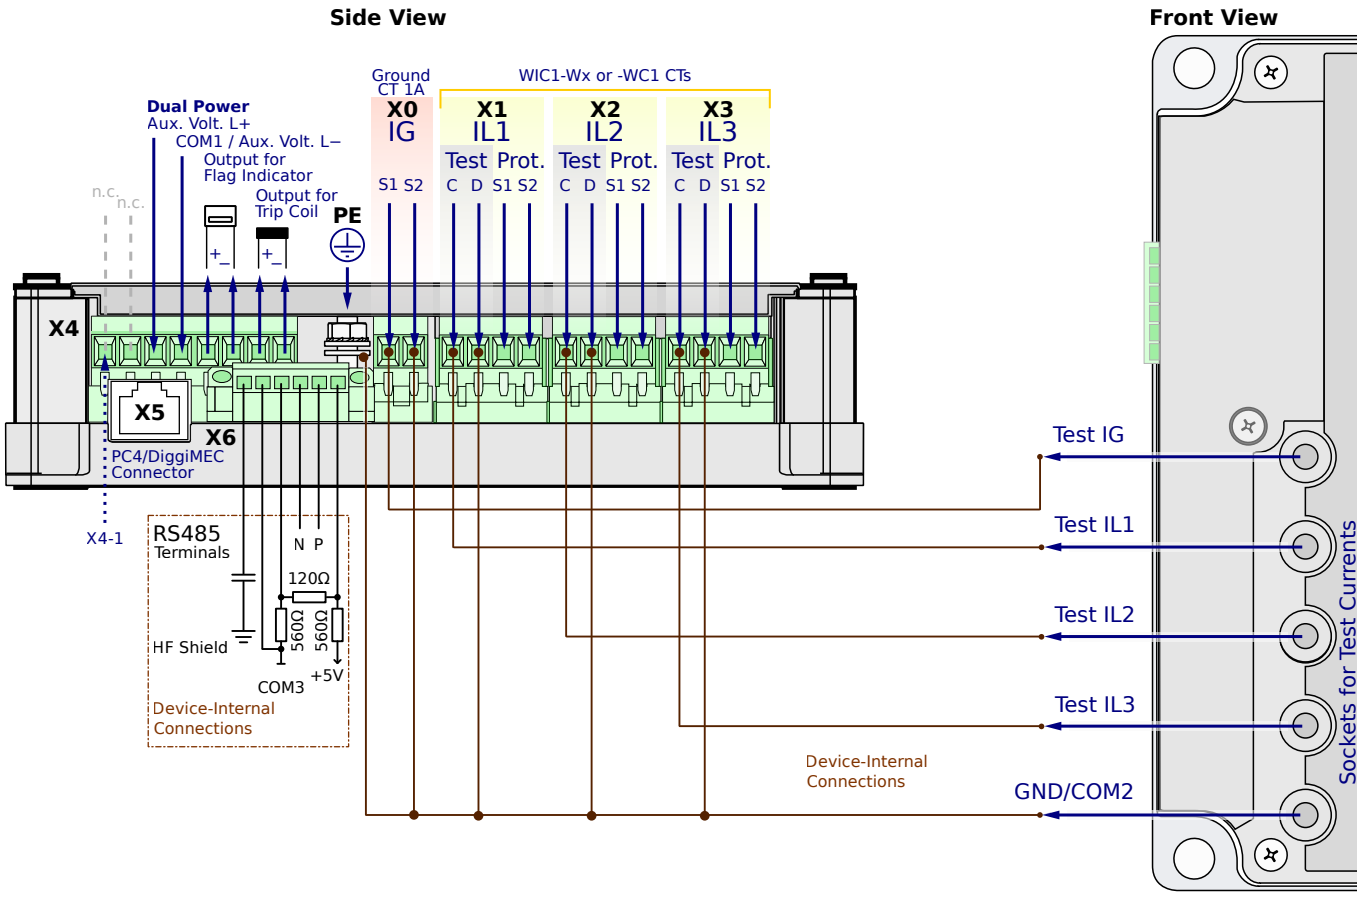


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1PBH

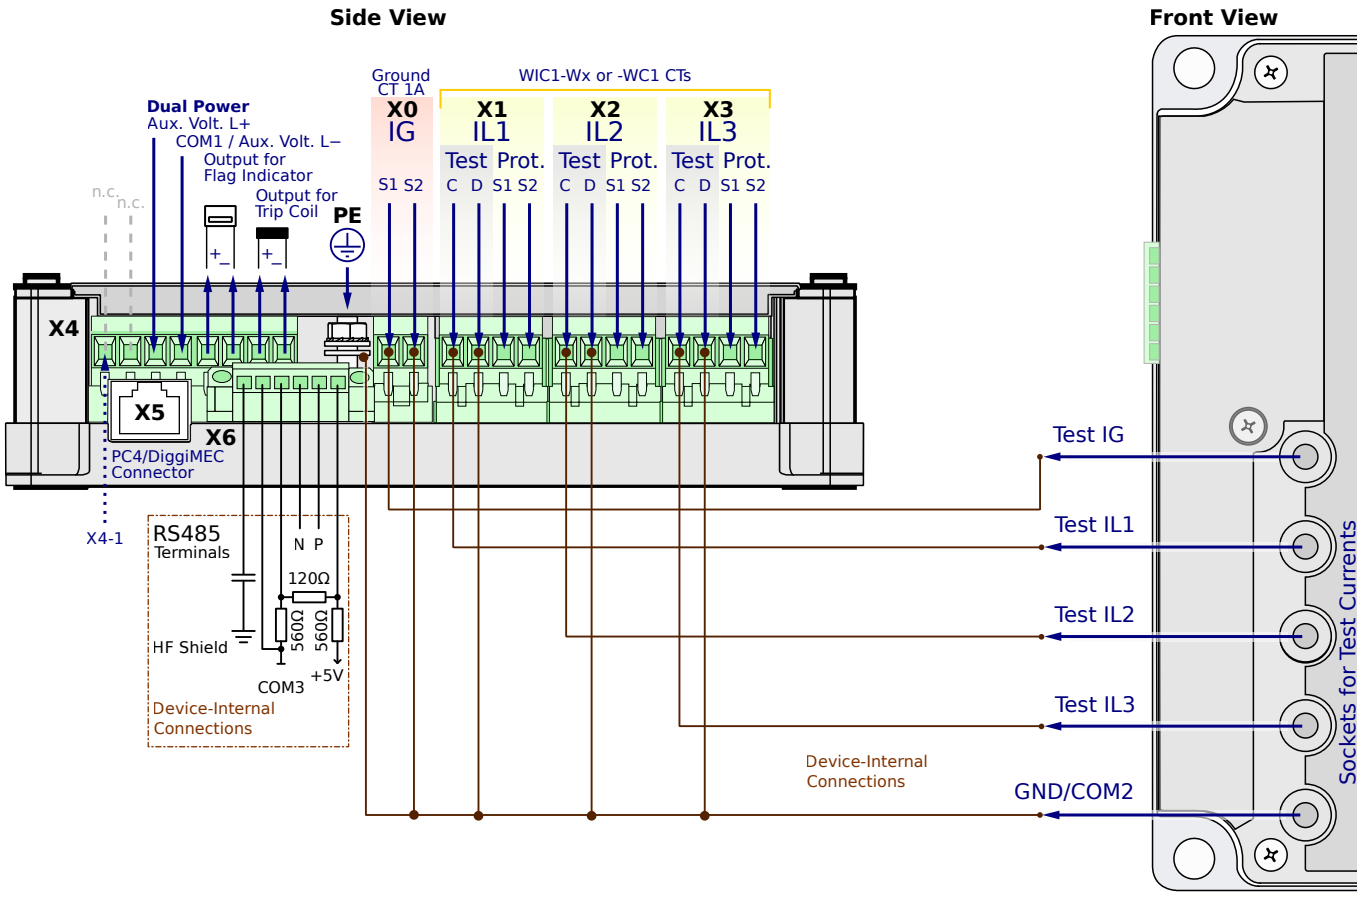


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM1PC0

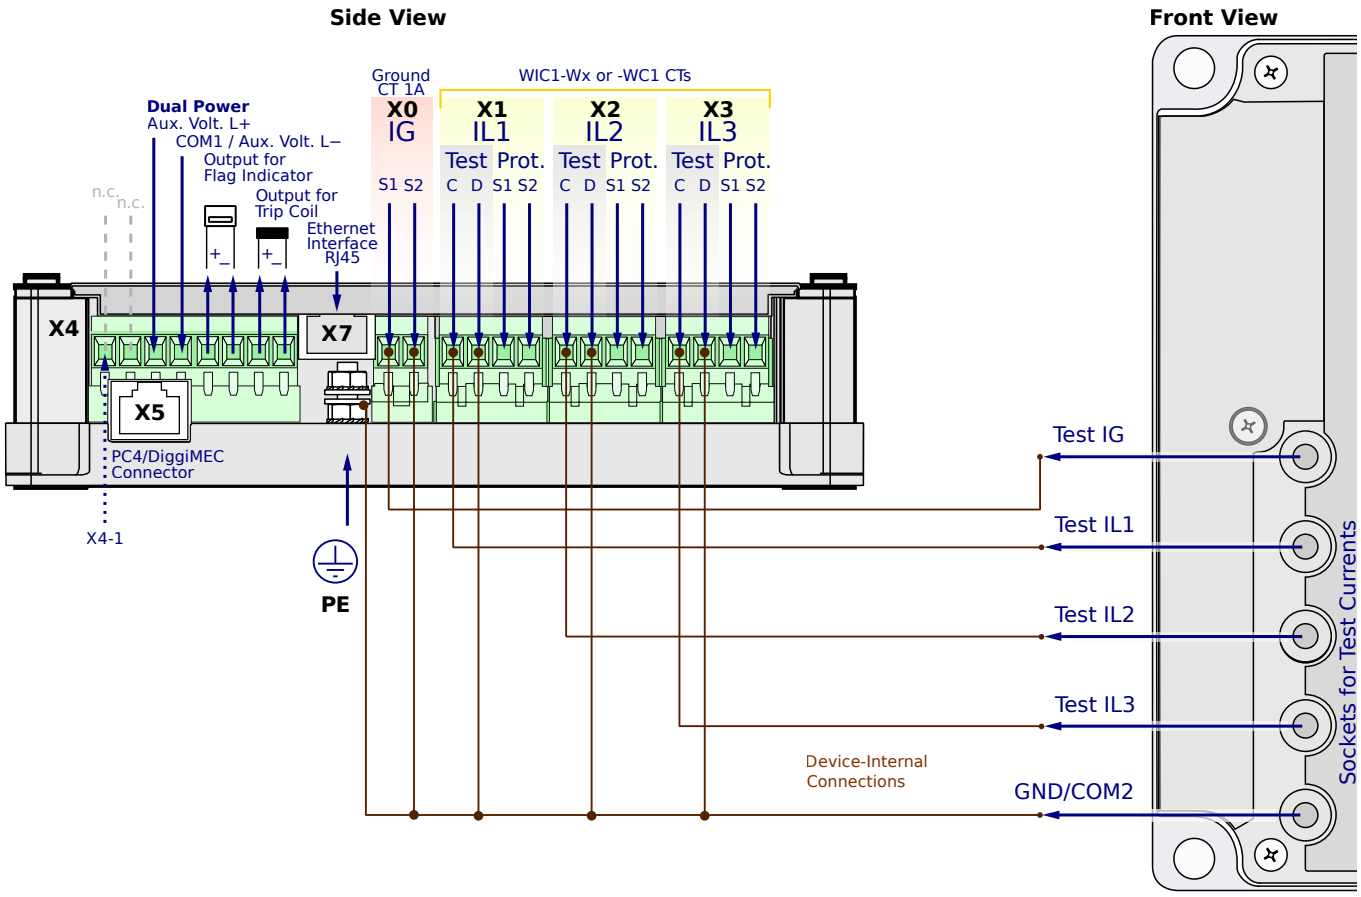


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1PCH

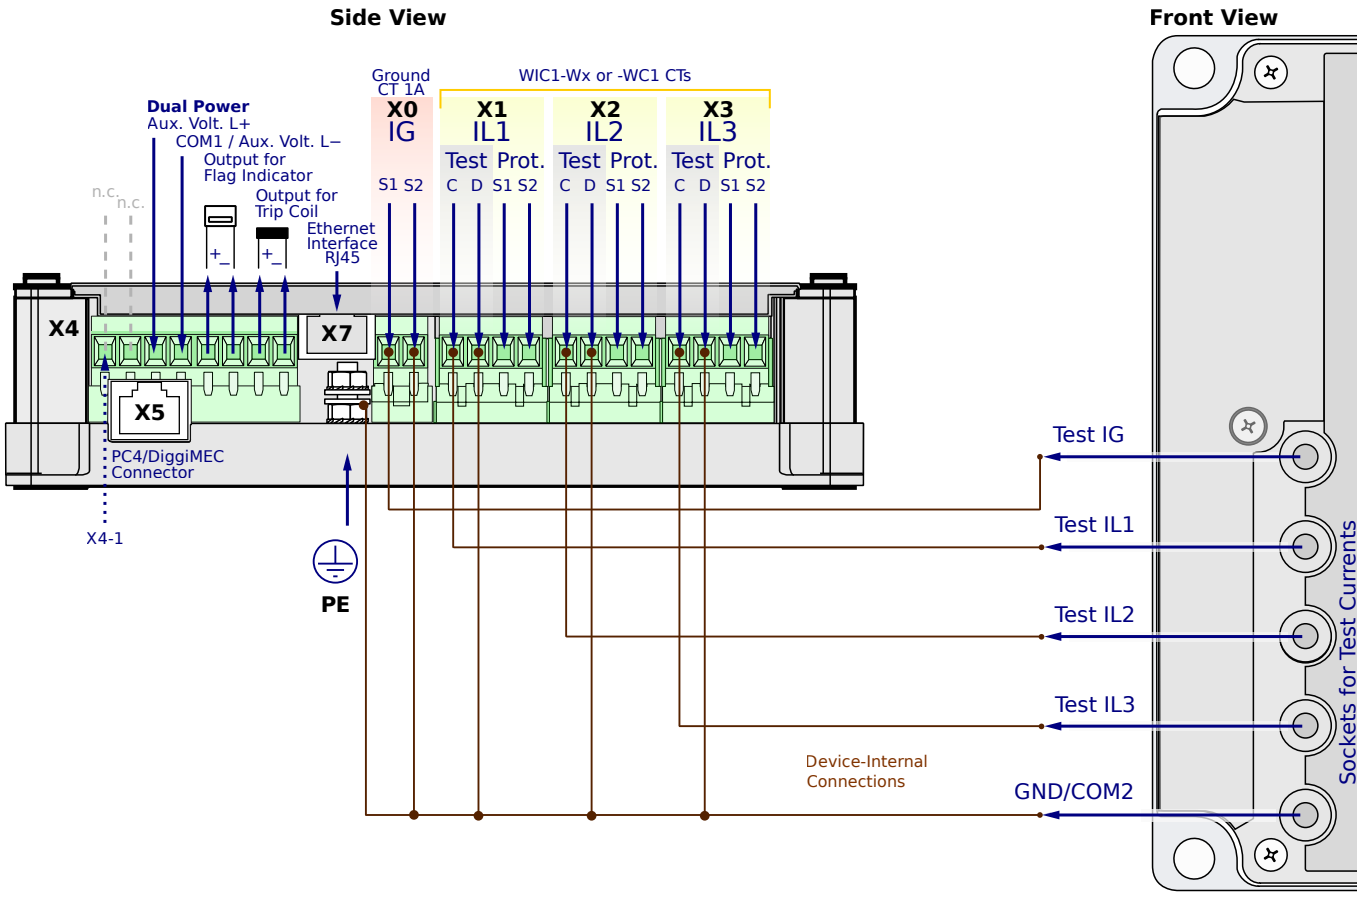


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM1PL0

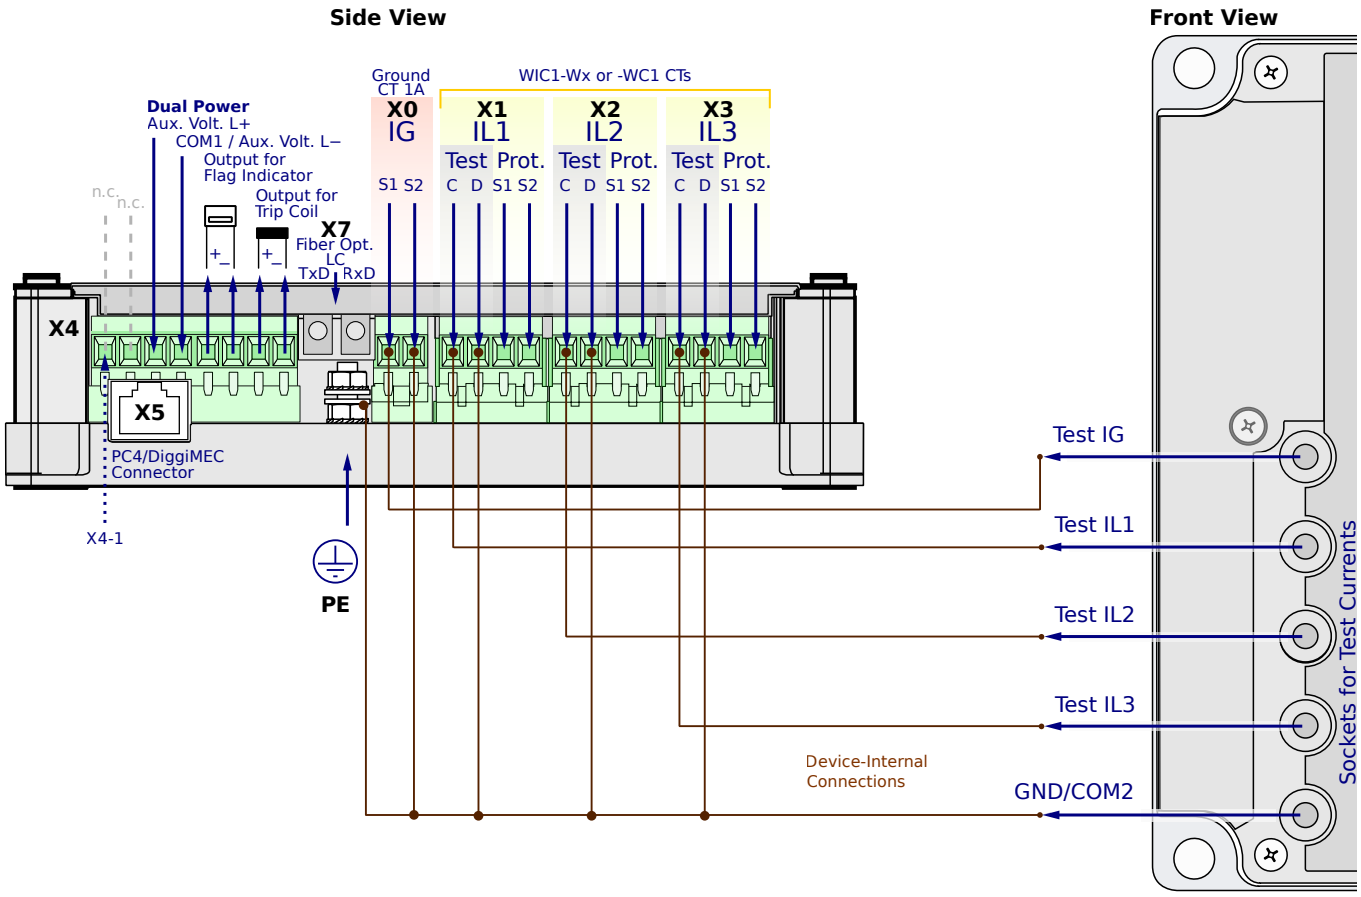


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM1PLH

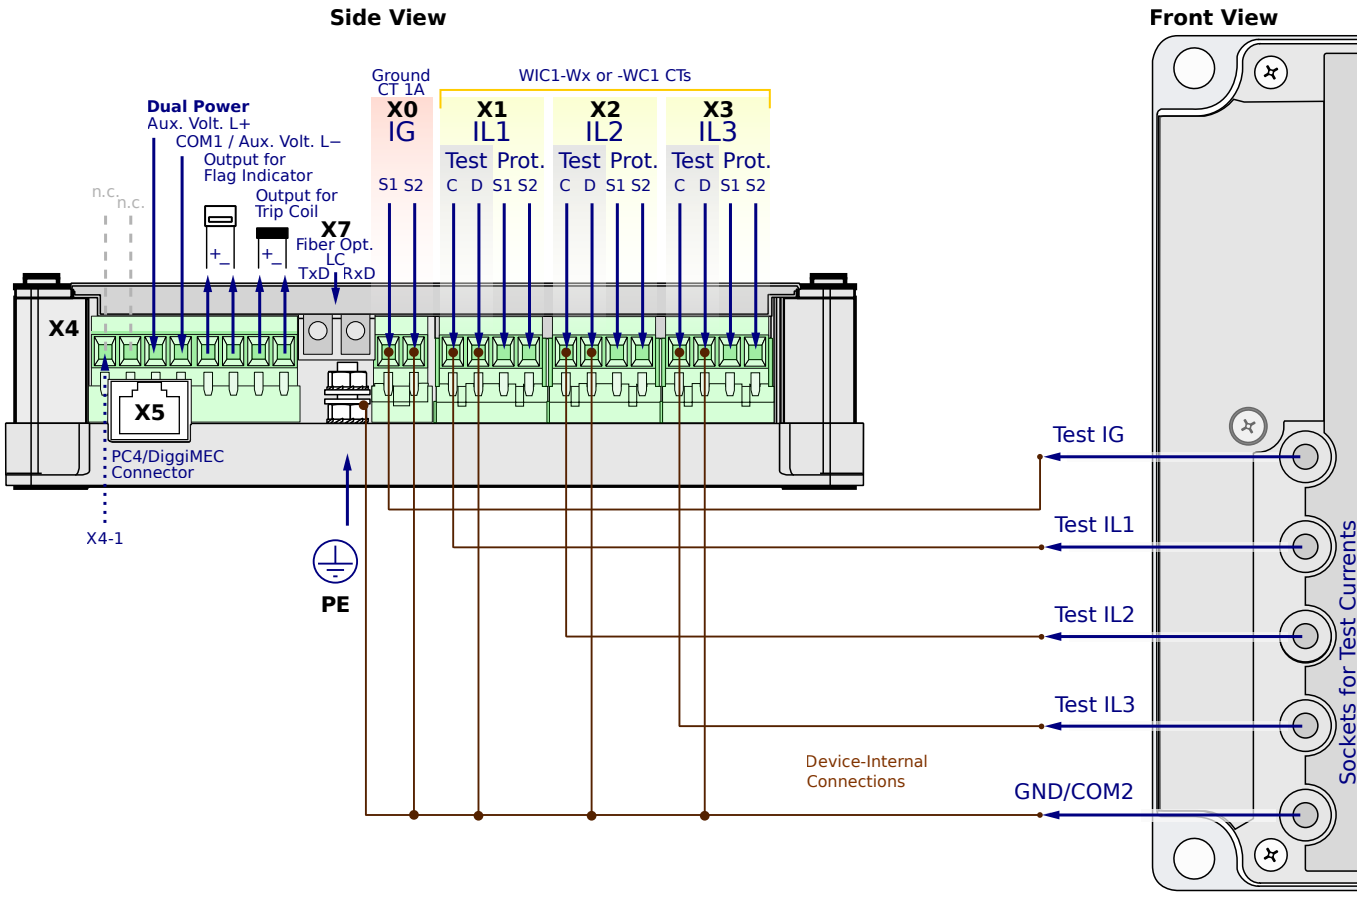


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2SA0

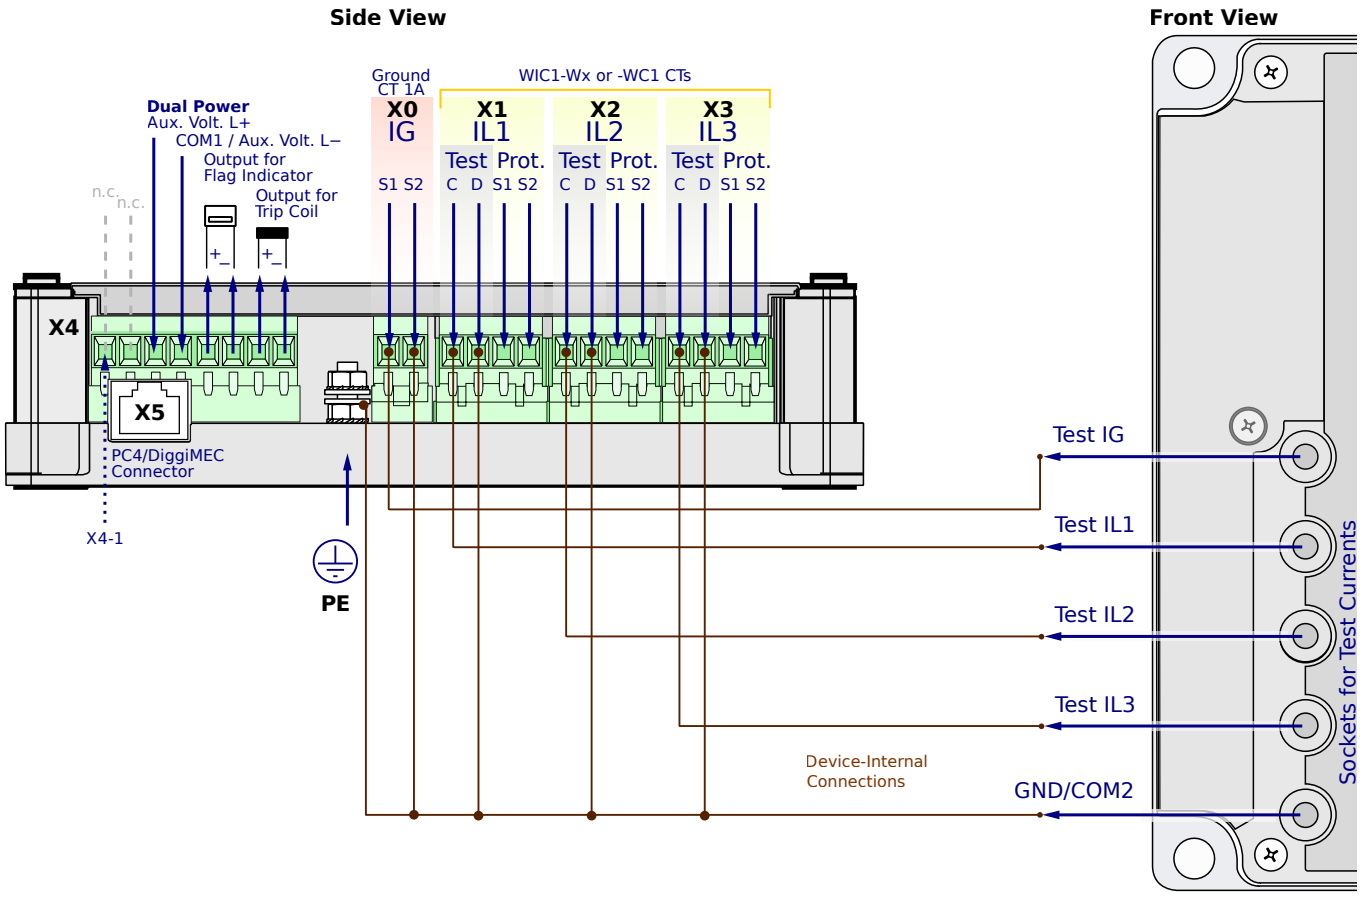


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2SAH

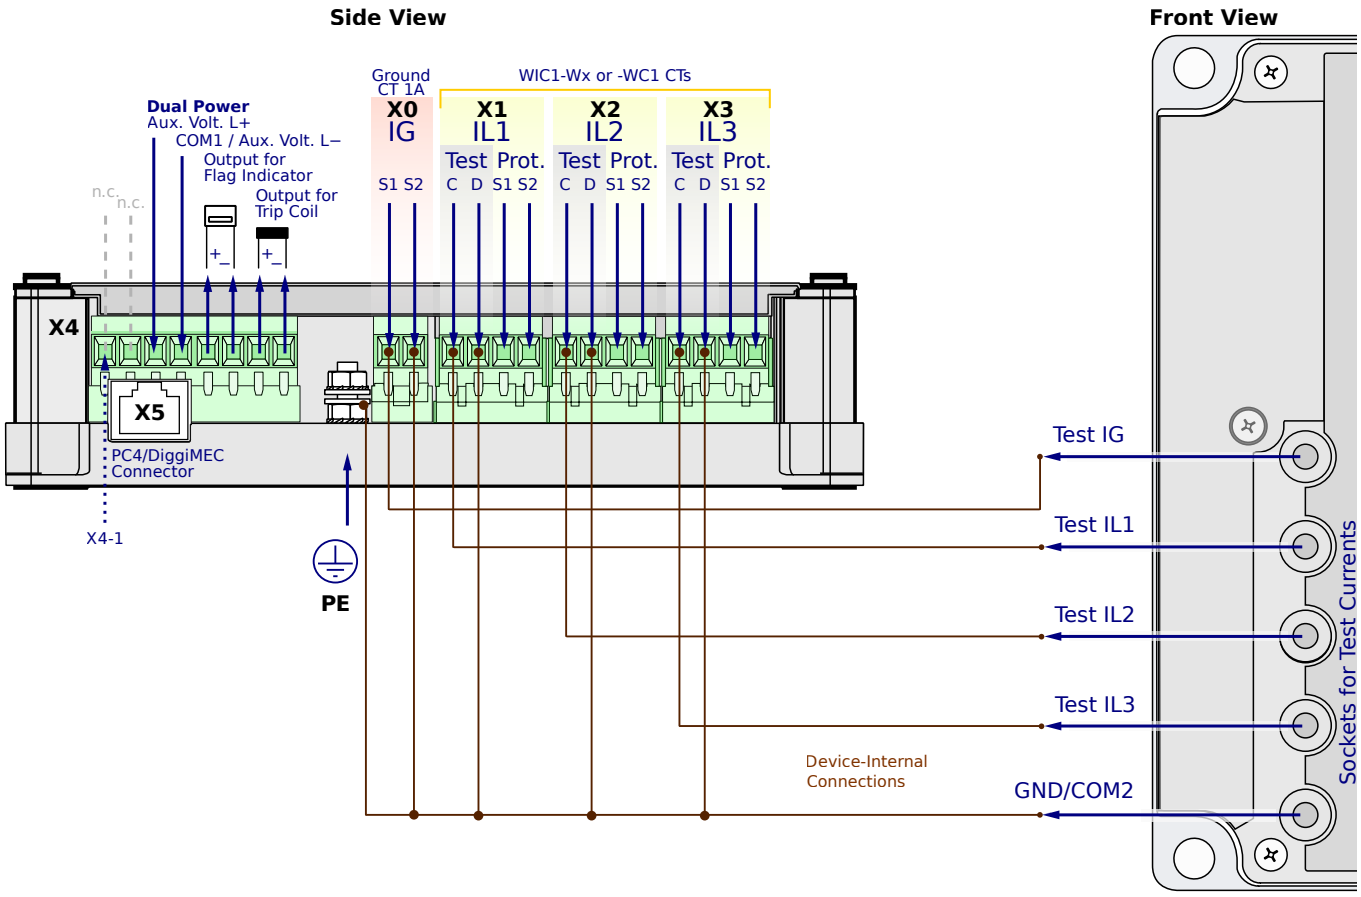


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2SB0

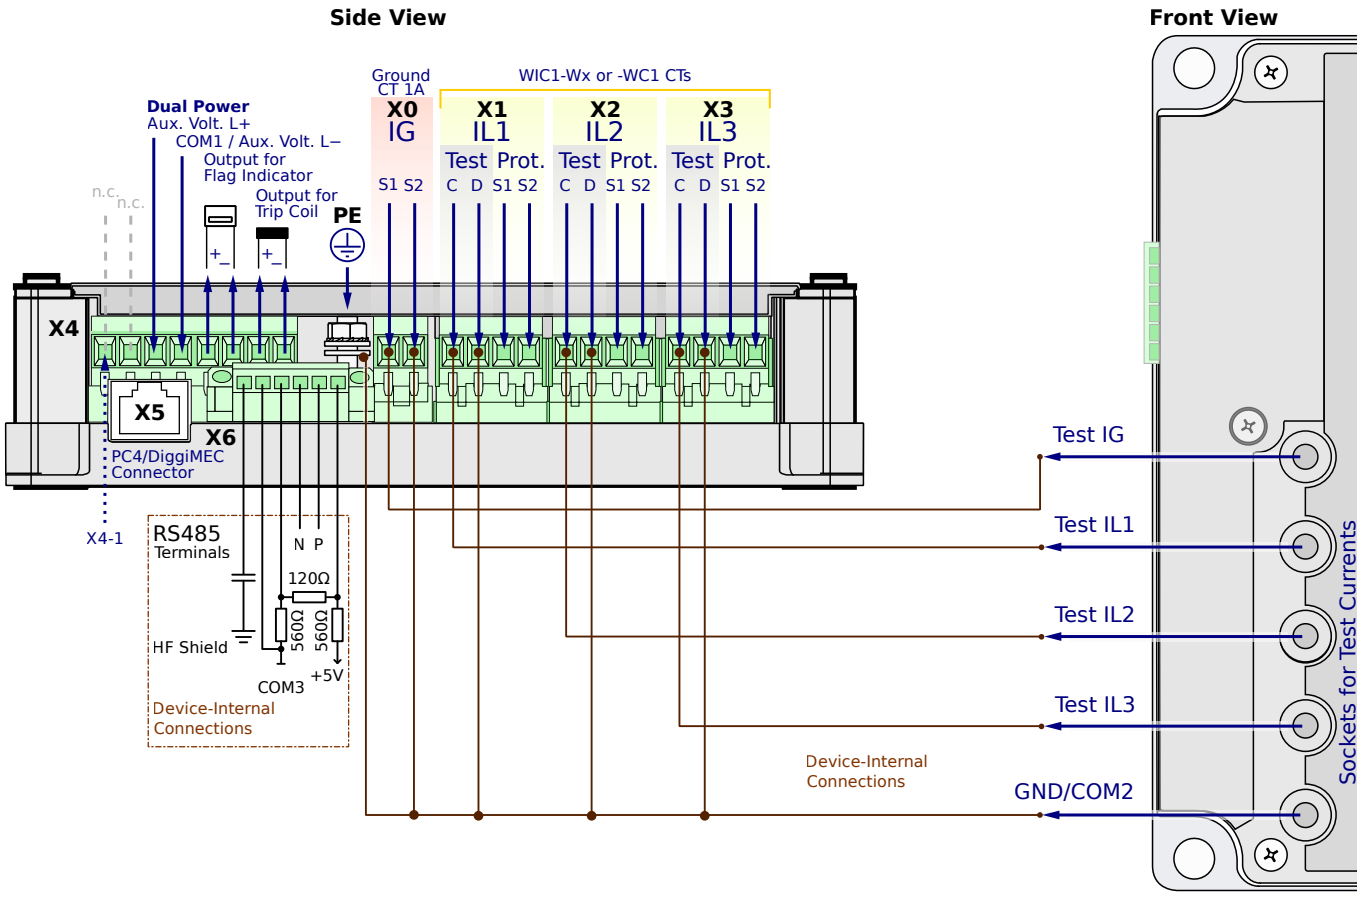


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2SBH

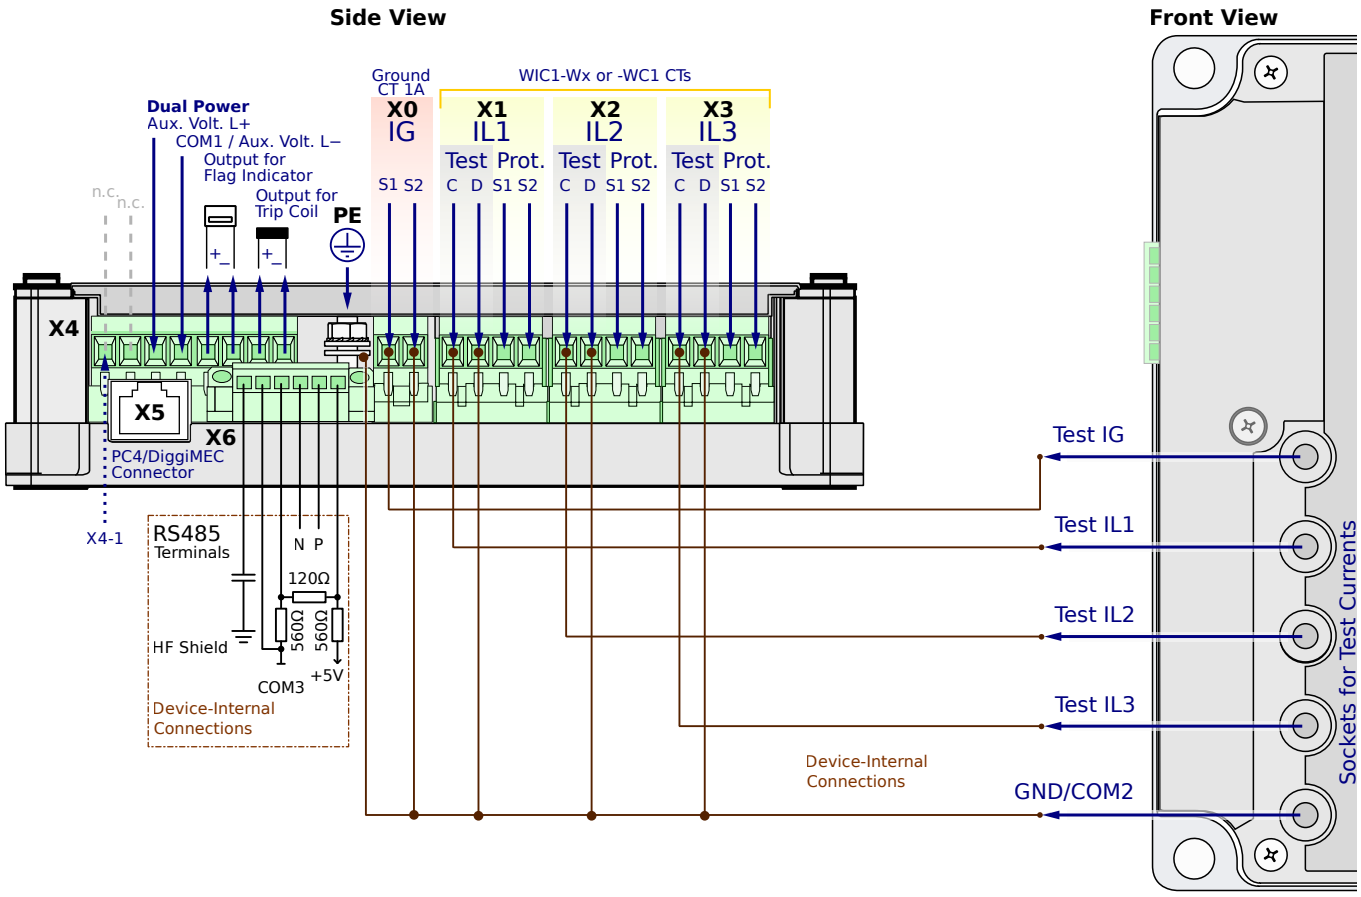


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2SC0

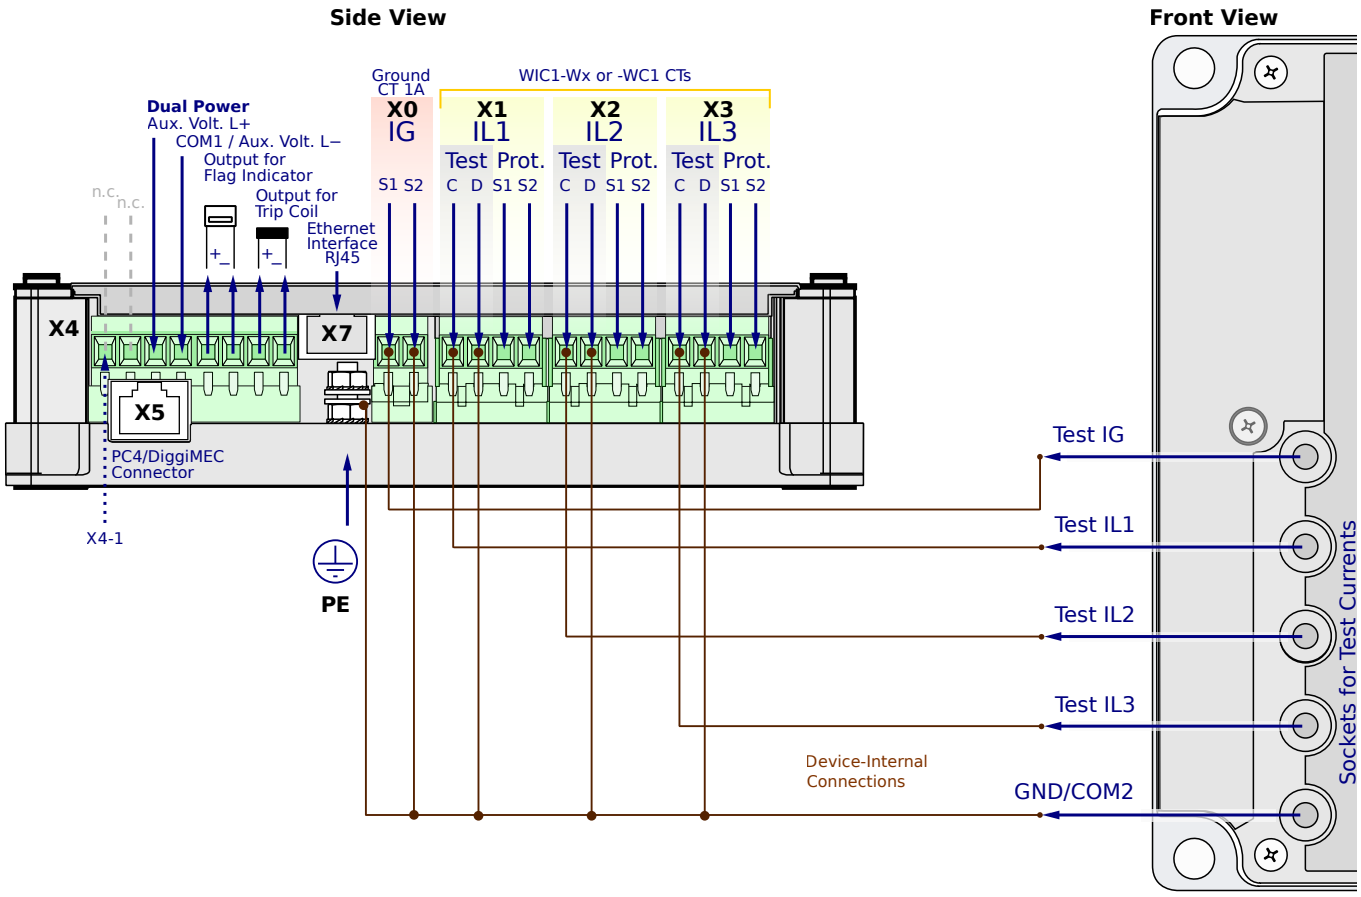


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2SCH

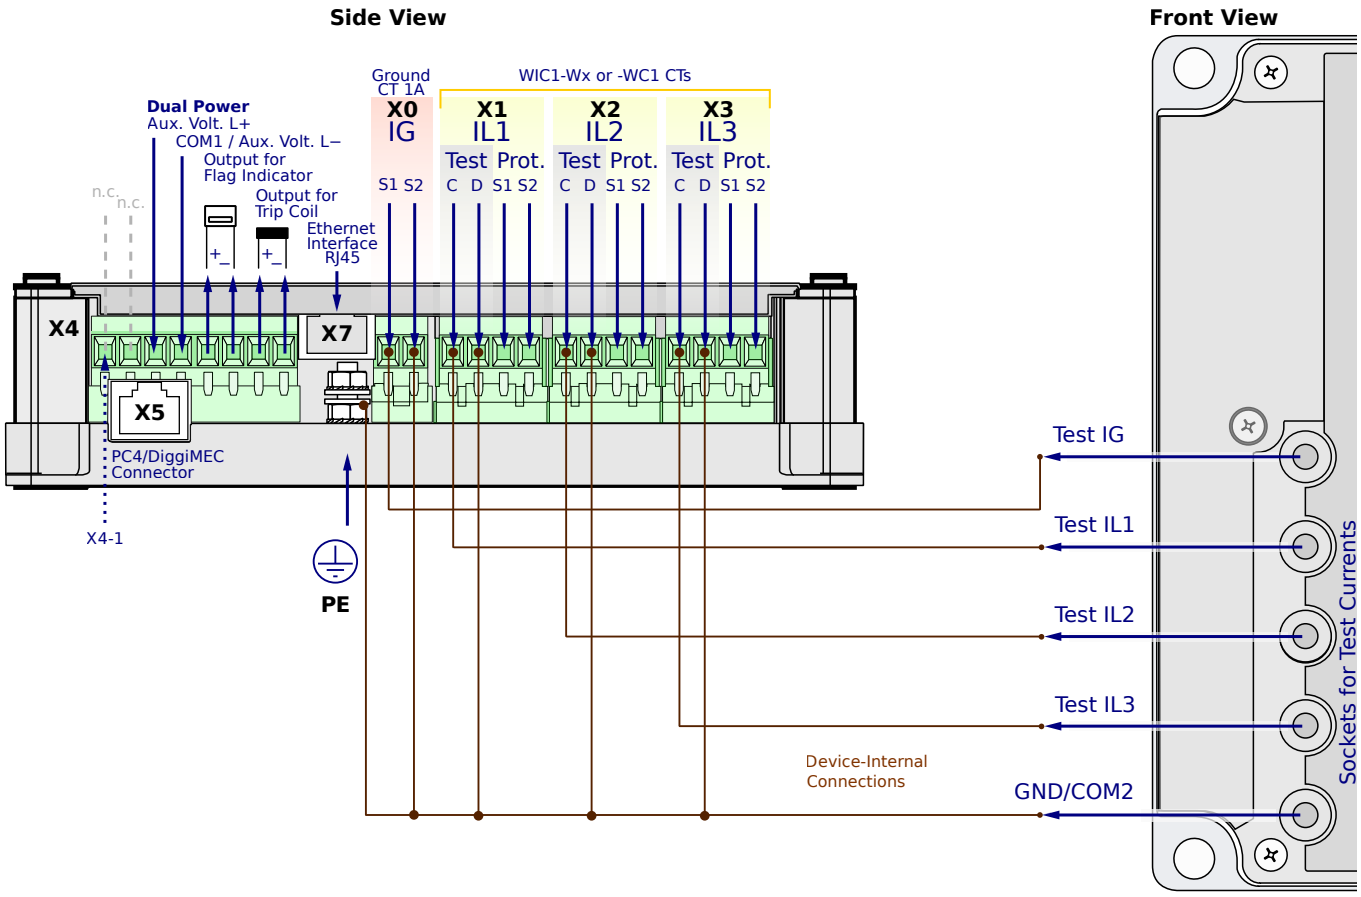


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2SL0

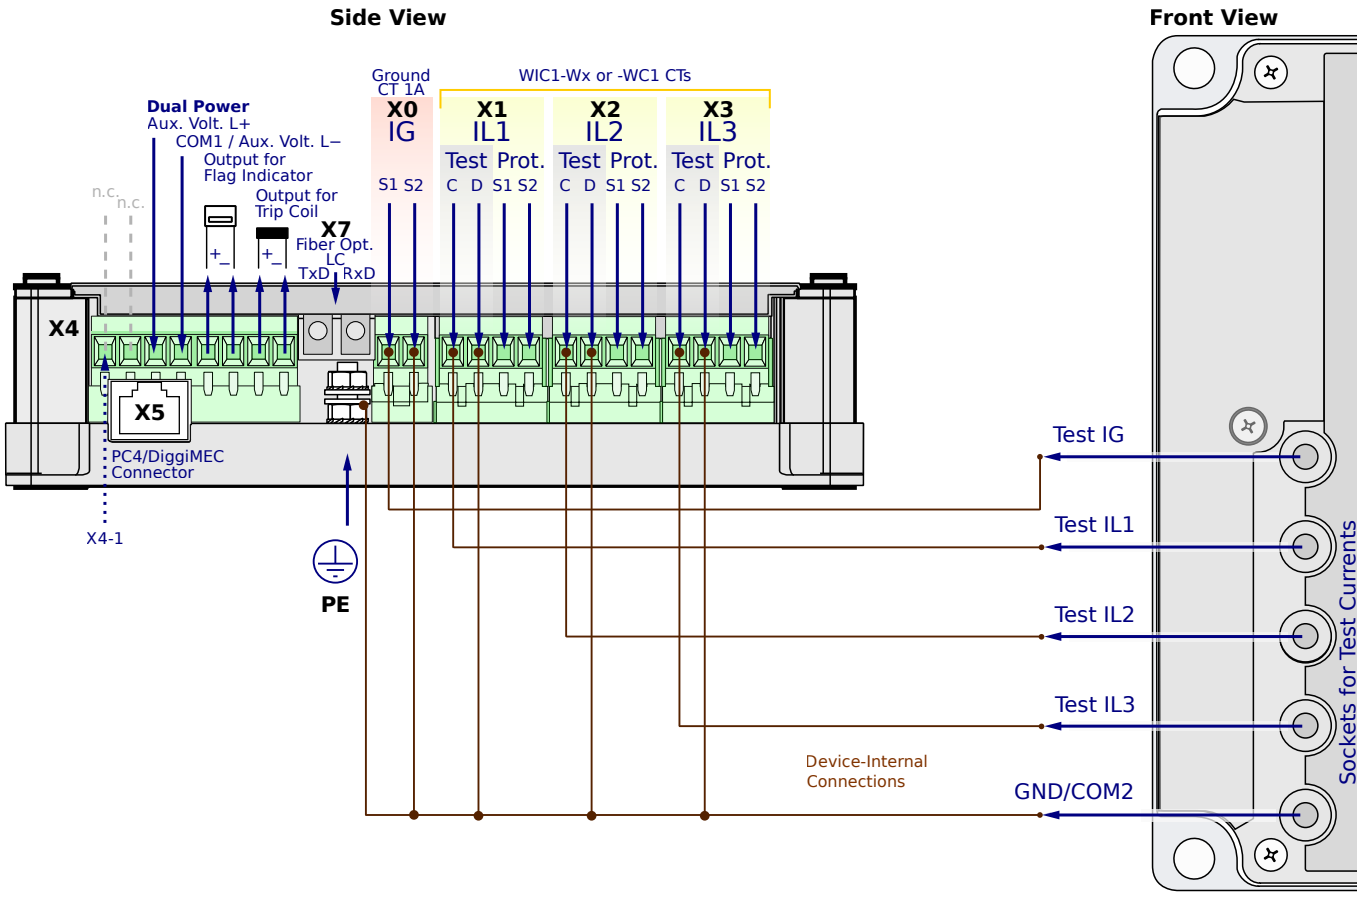


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2SLH

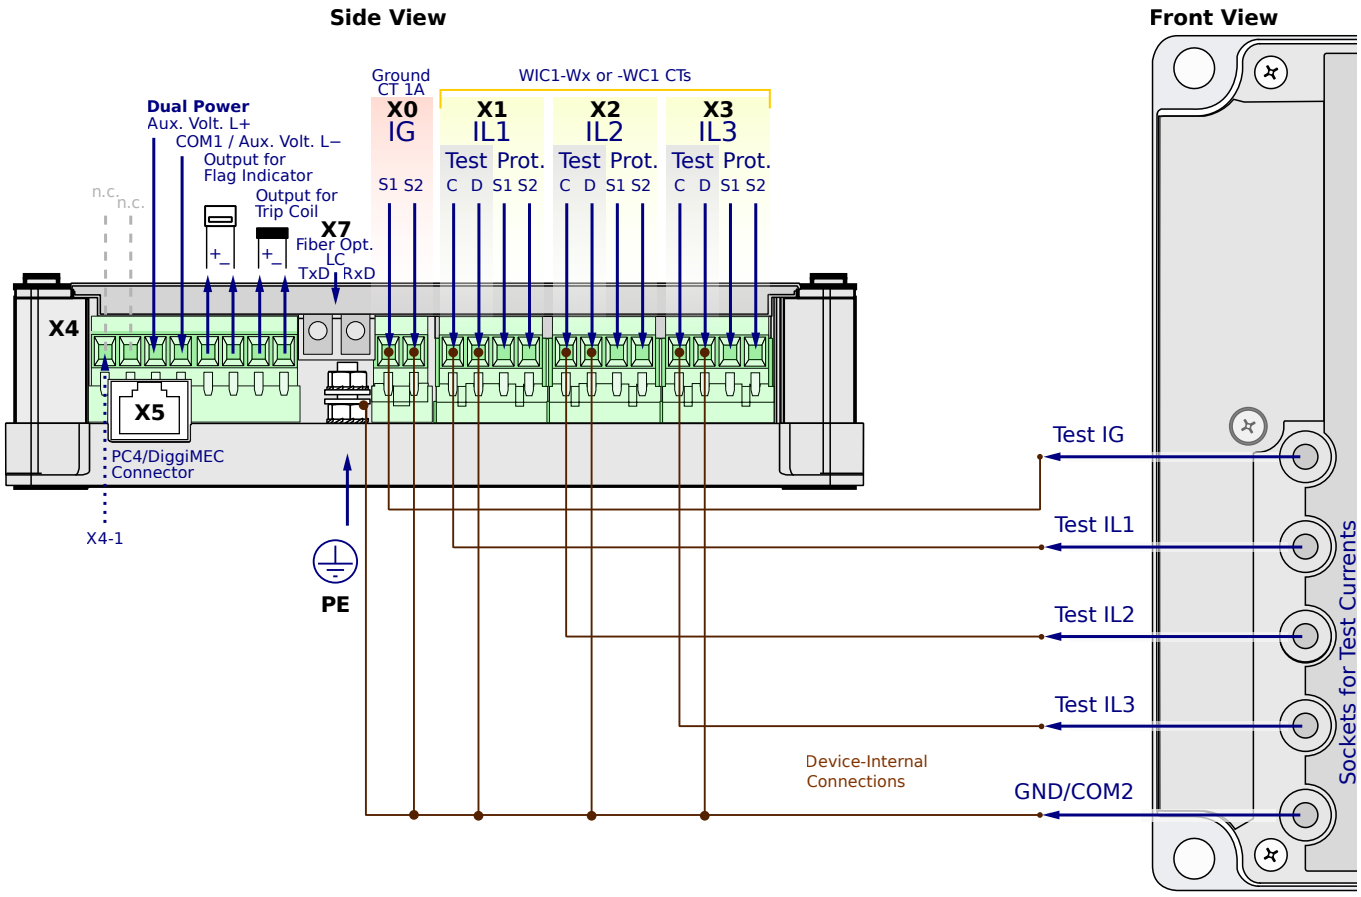


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2AA0

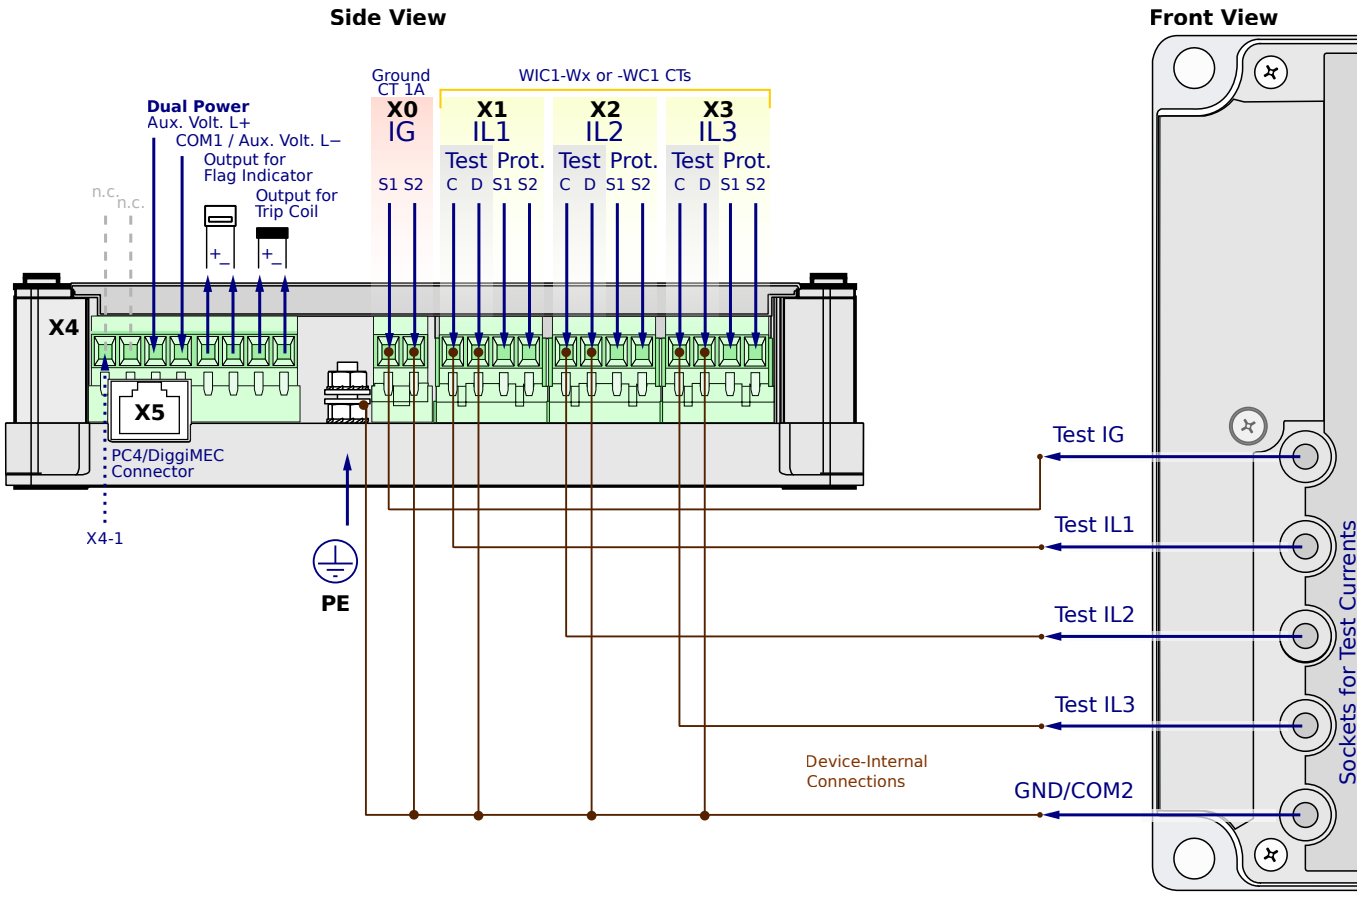


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2AAH

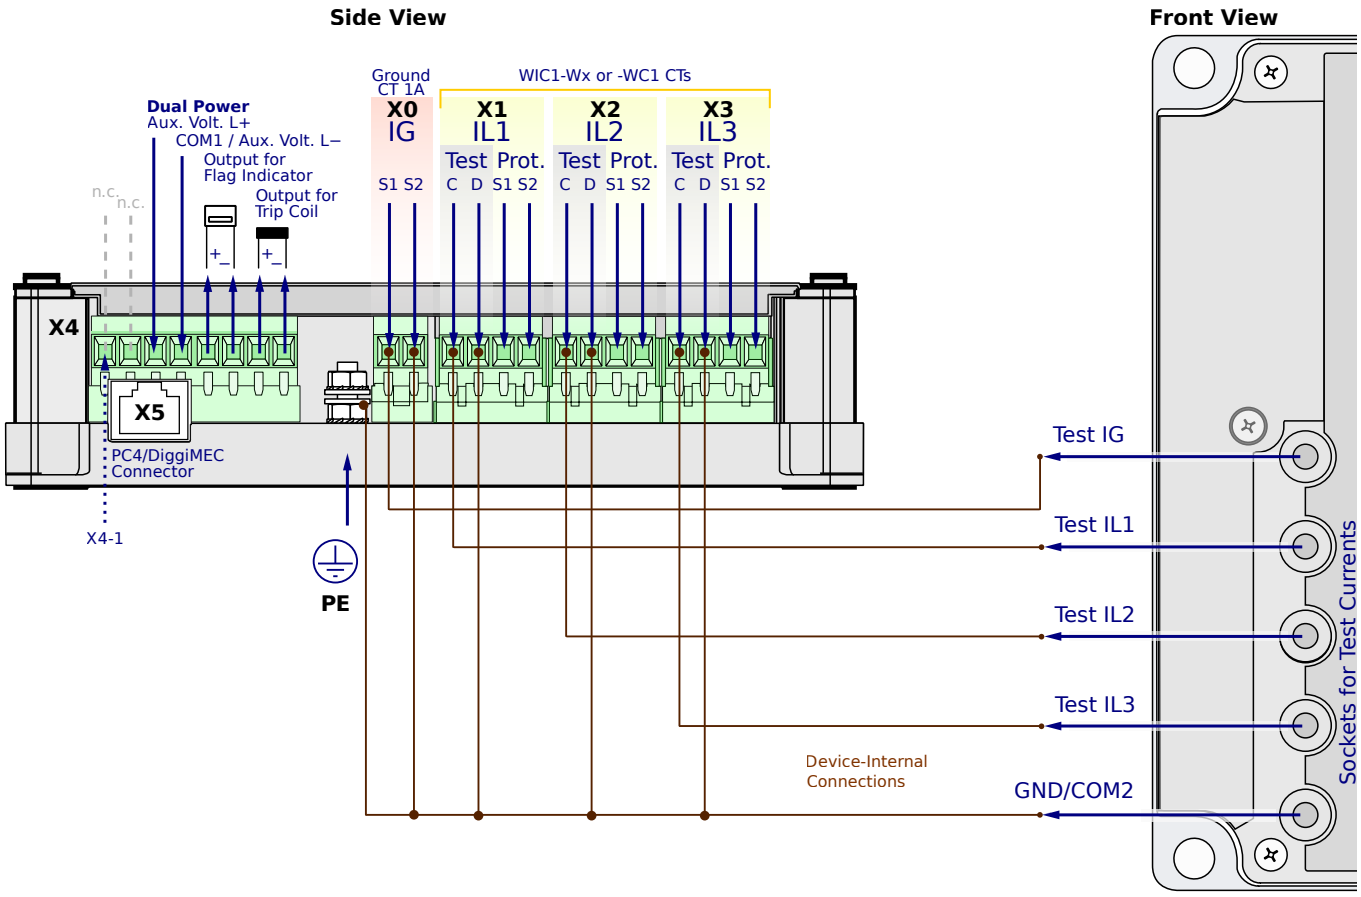


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2AB0

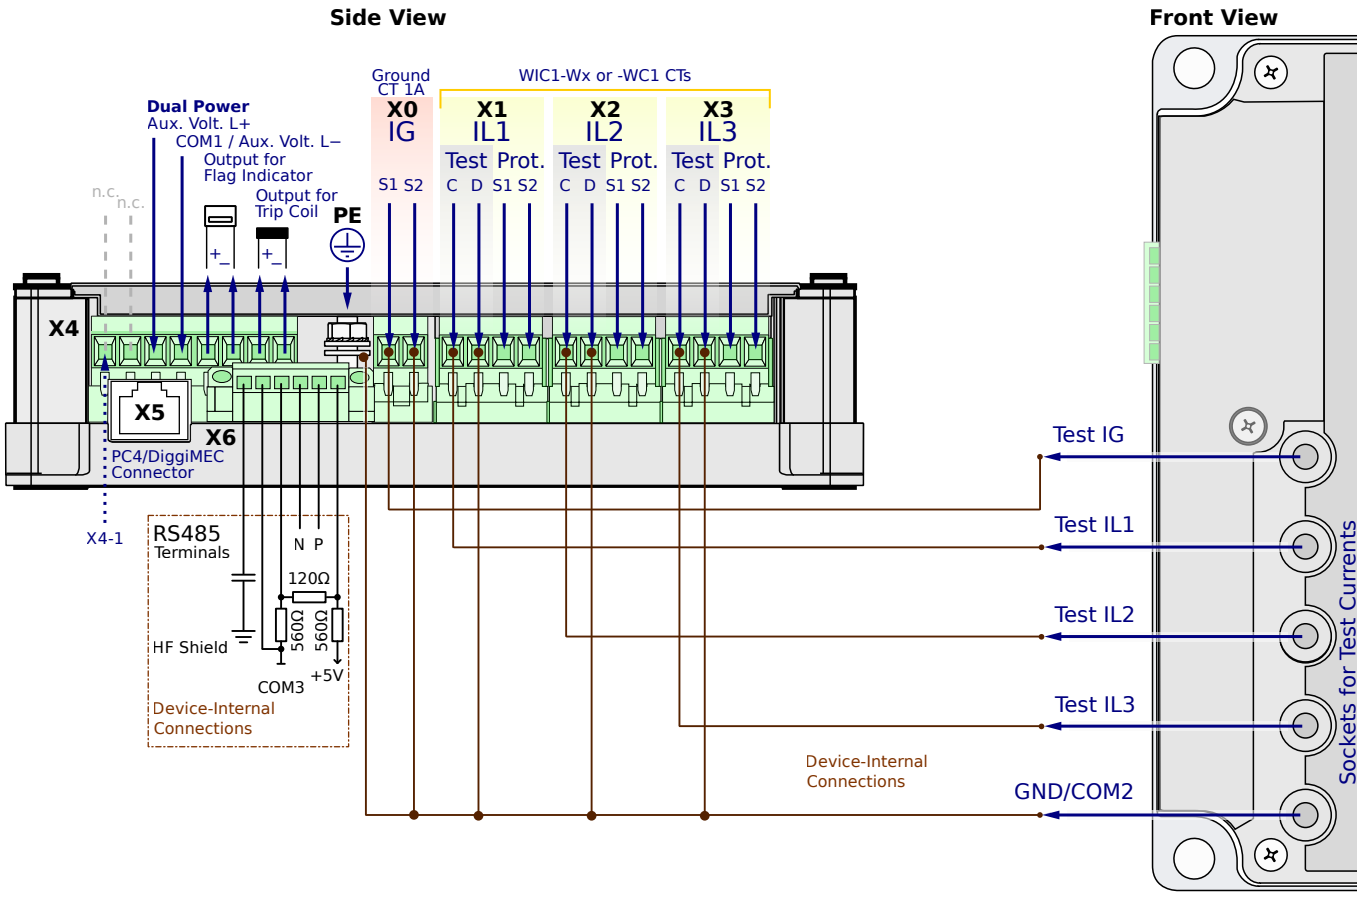


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2ABH

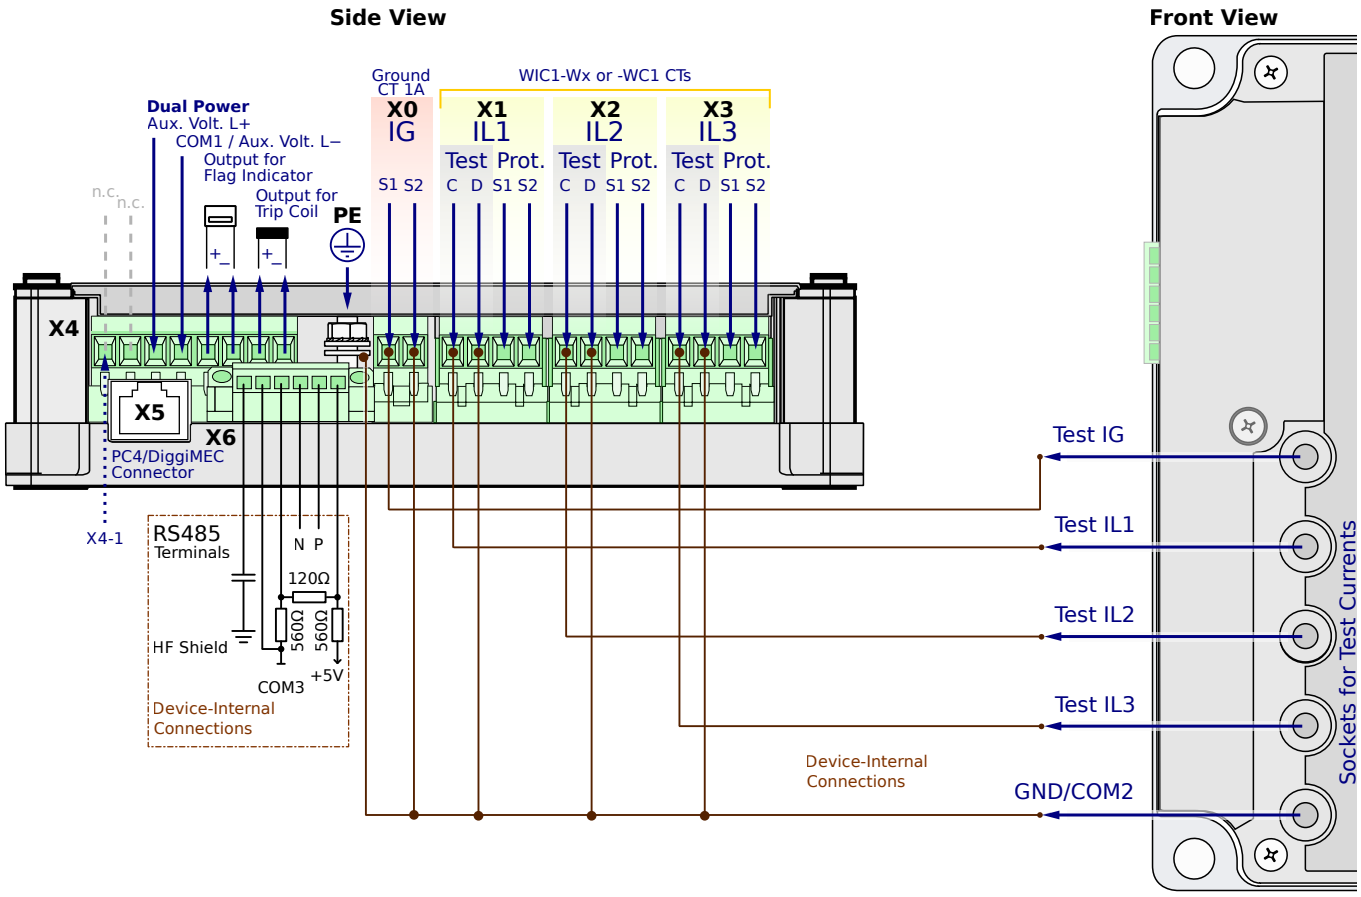


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2AC0

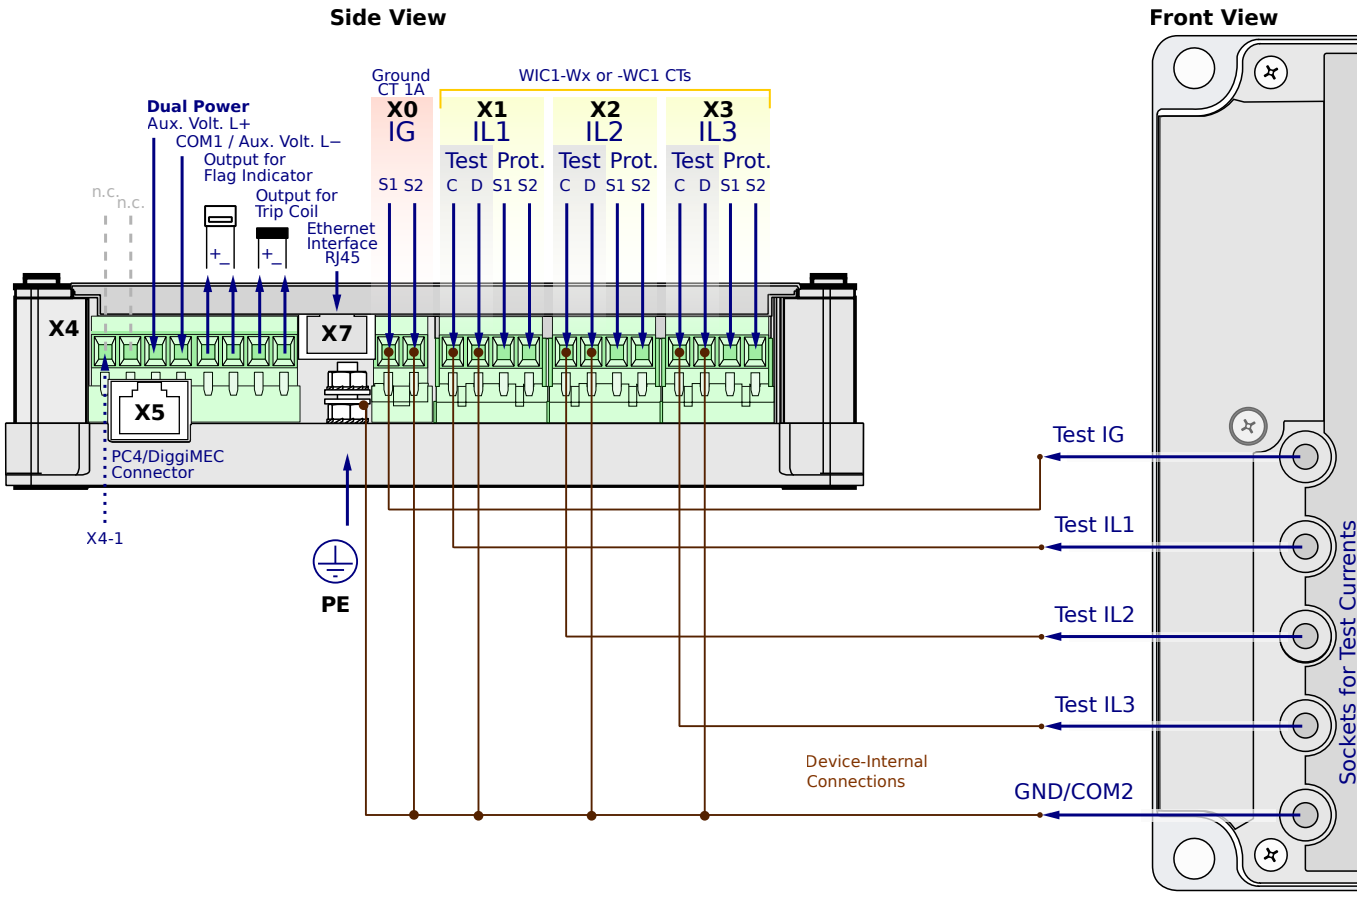


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2ACH

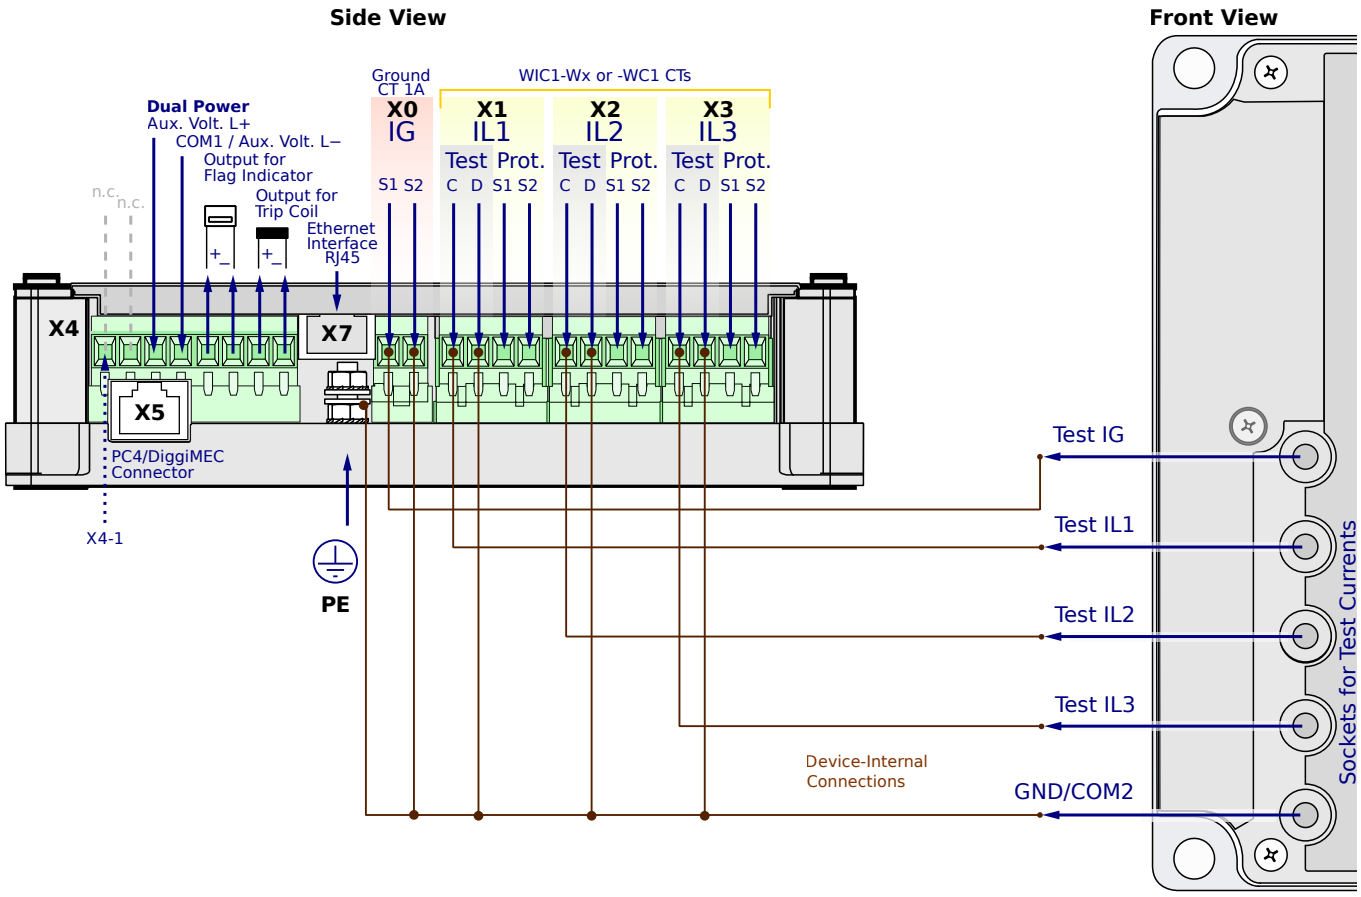


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2AL0

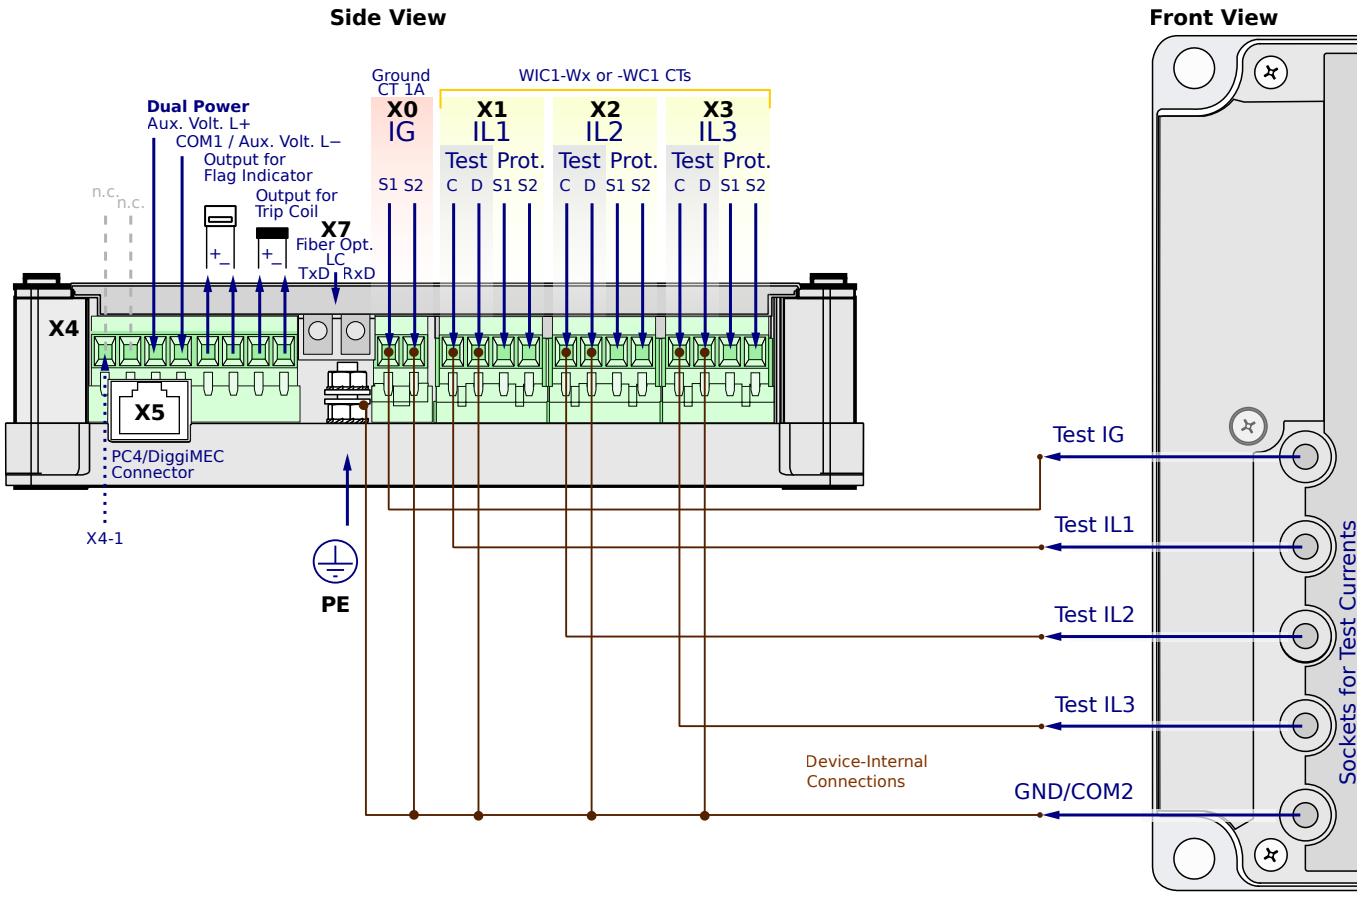


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2ALH

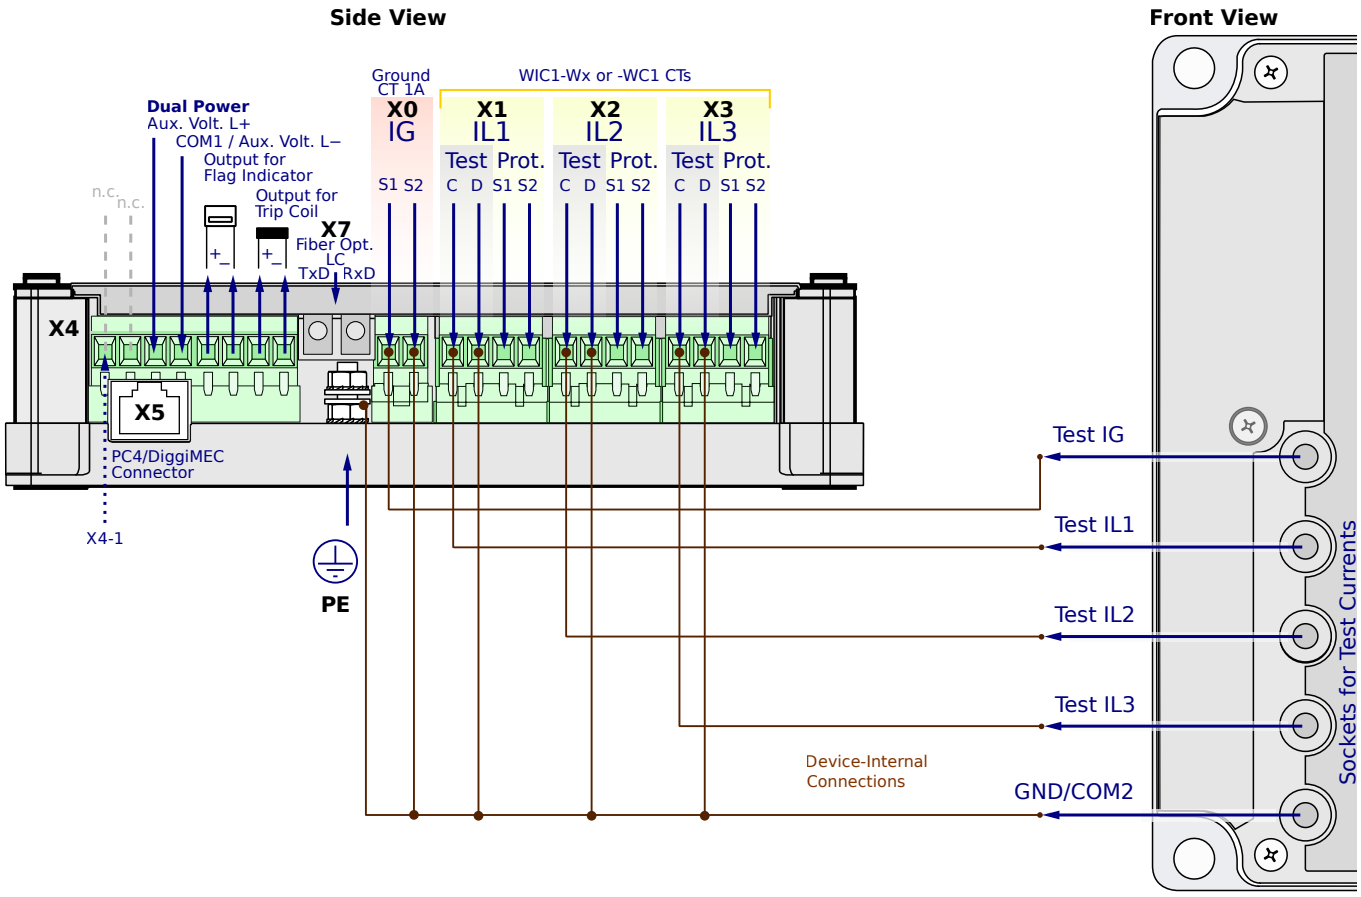


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2PA0

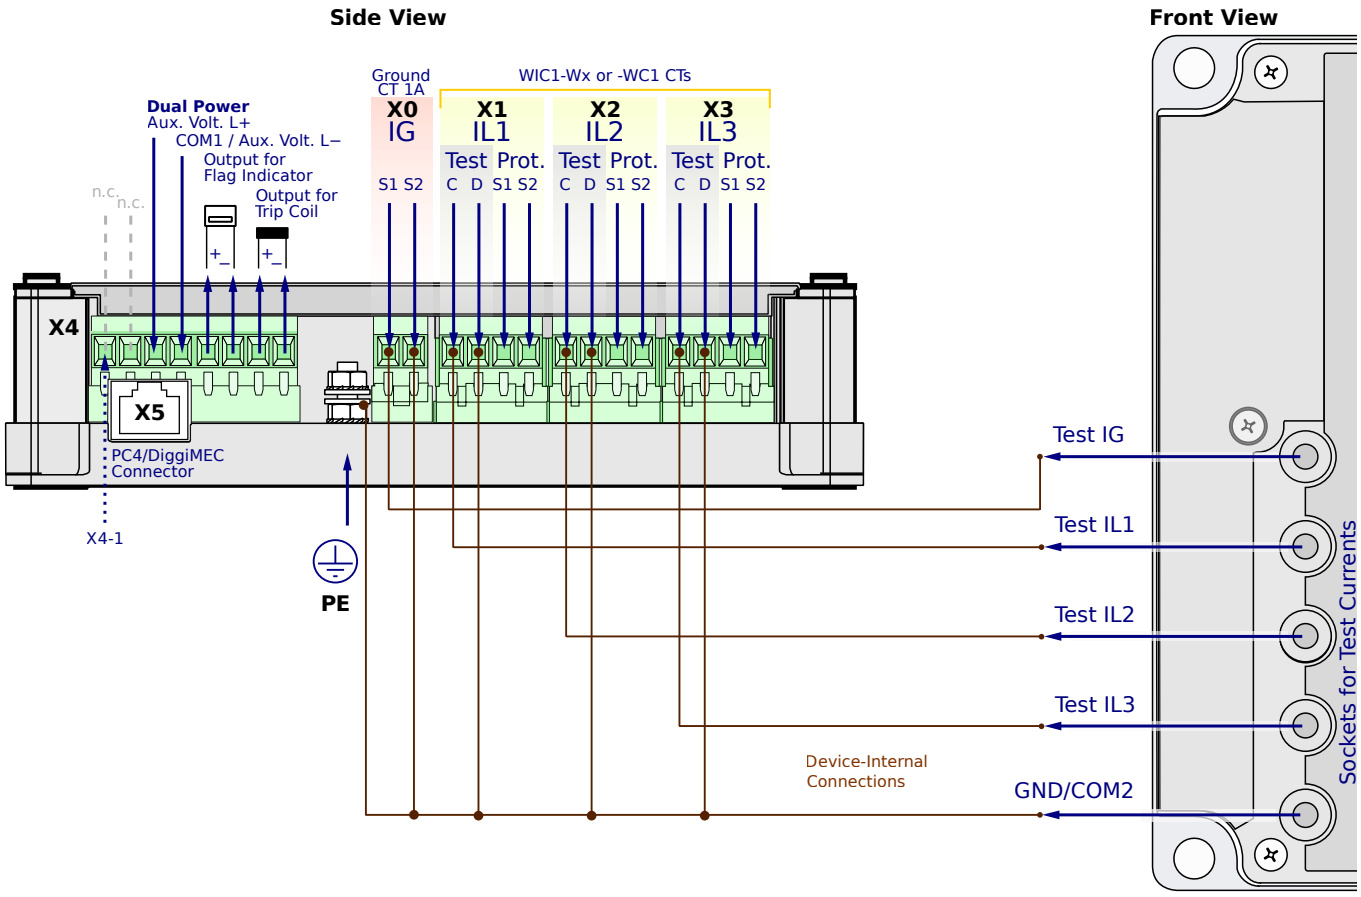


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2PAH

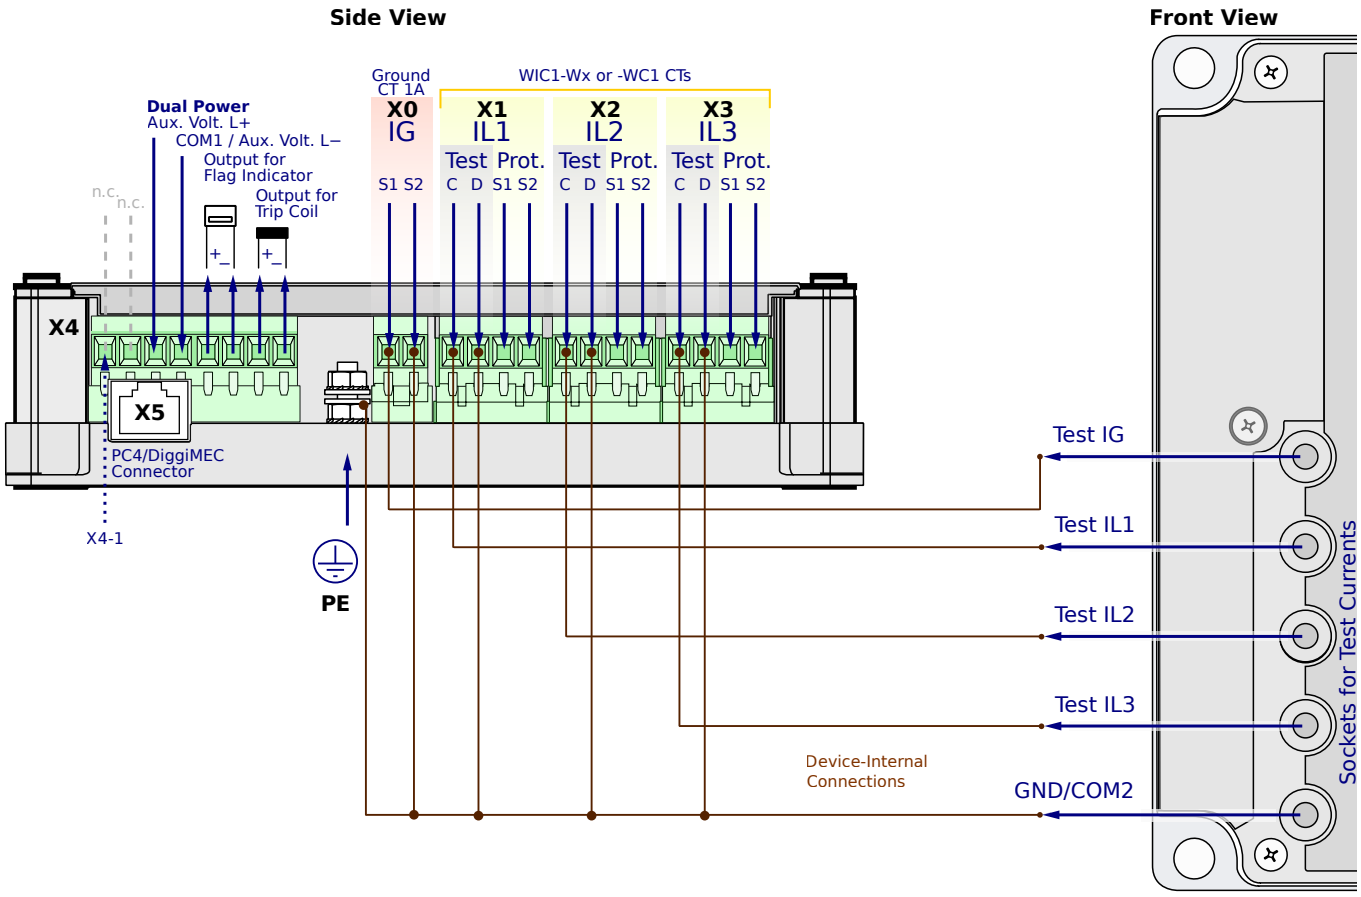


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FM2PB0

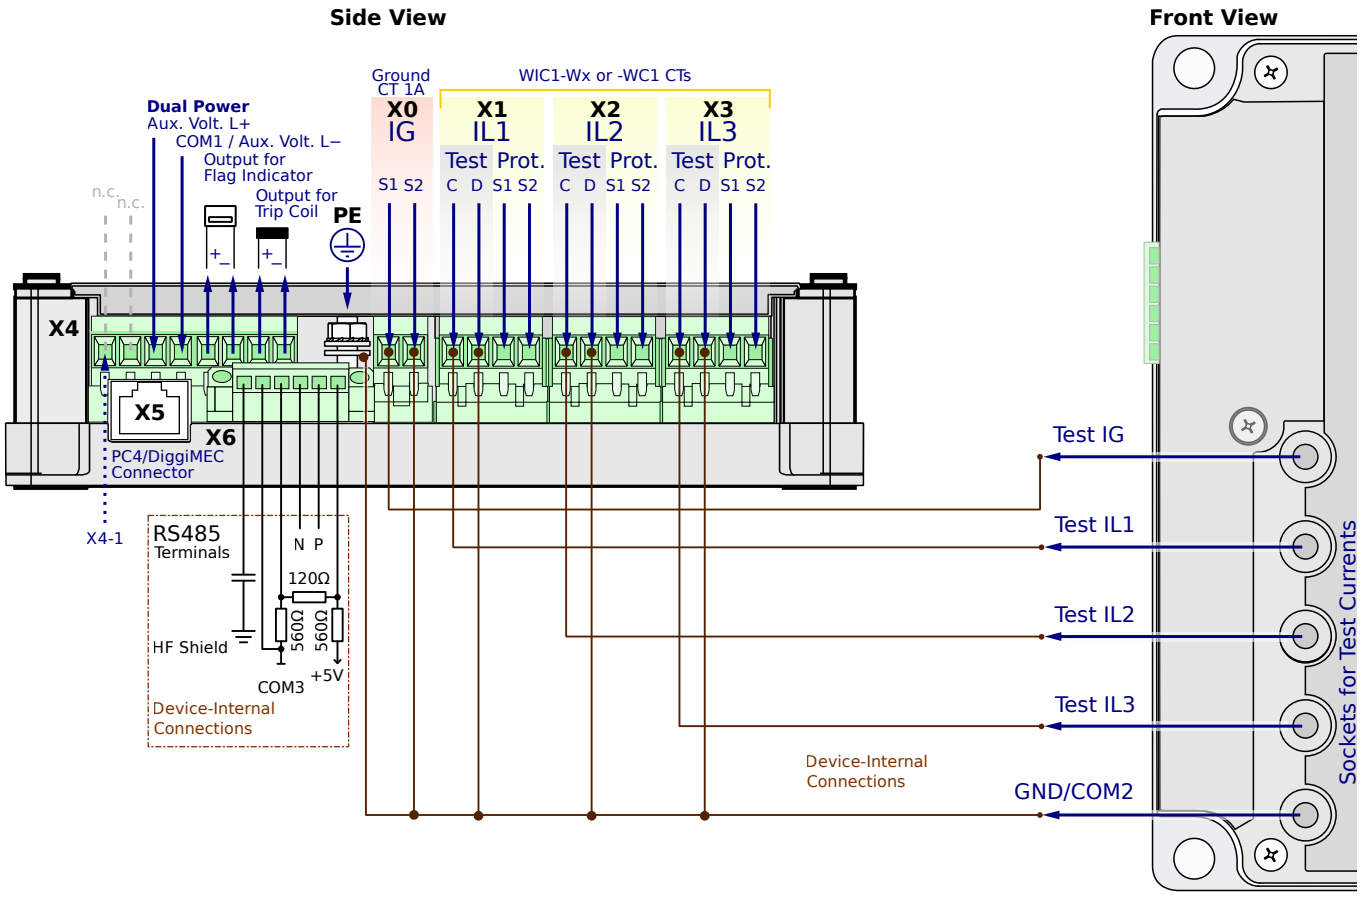


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2PBH

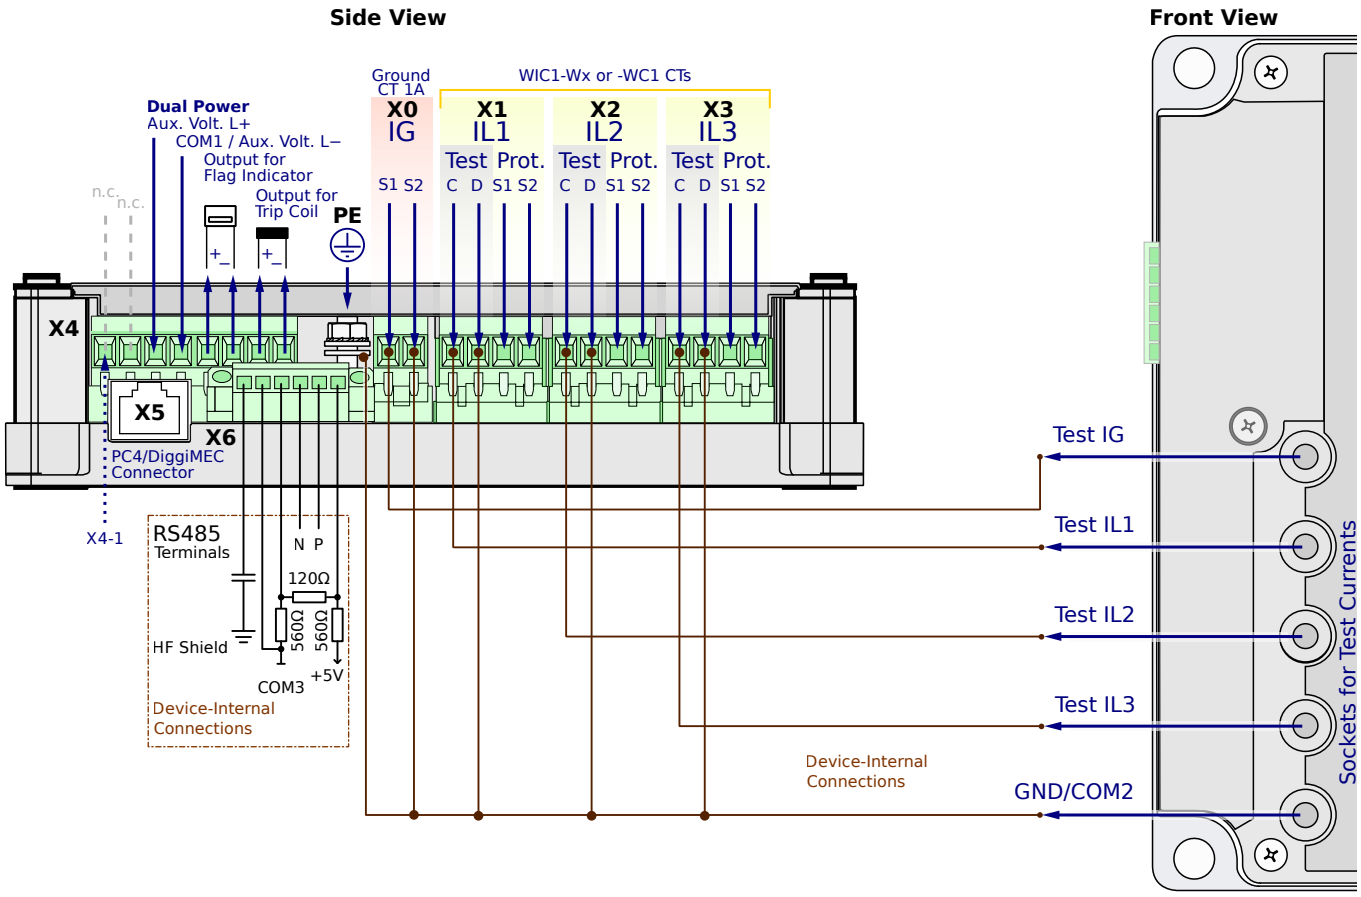


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FM2PC0

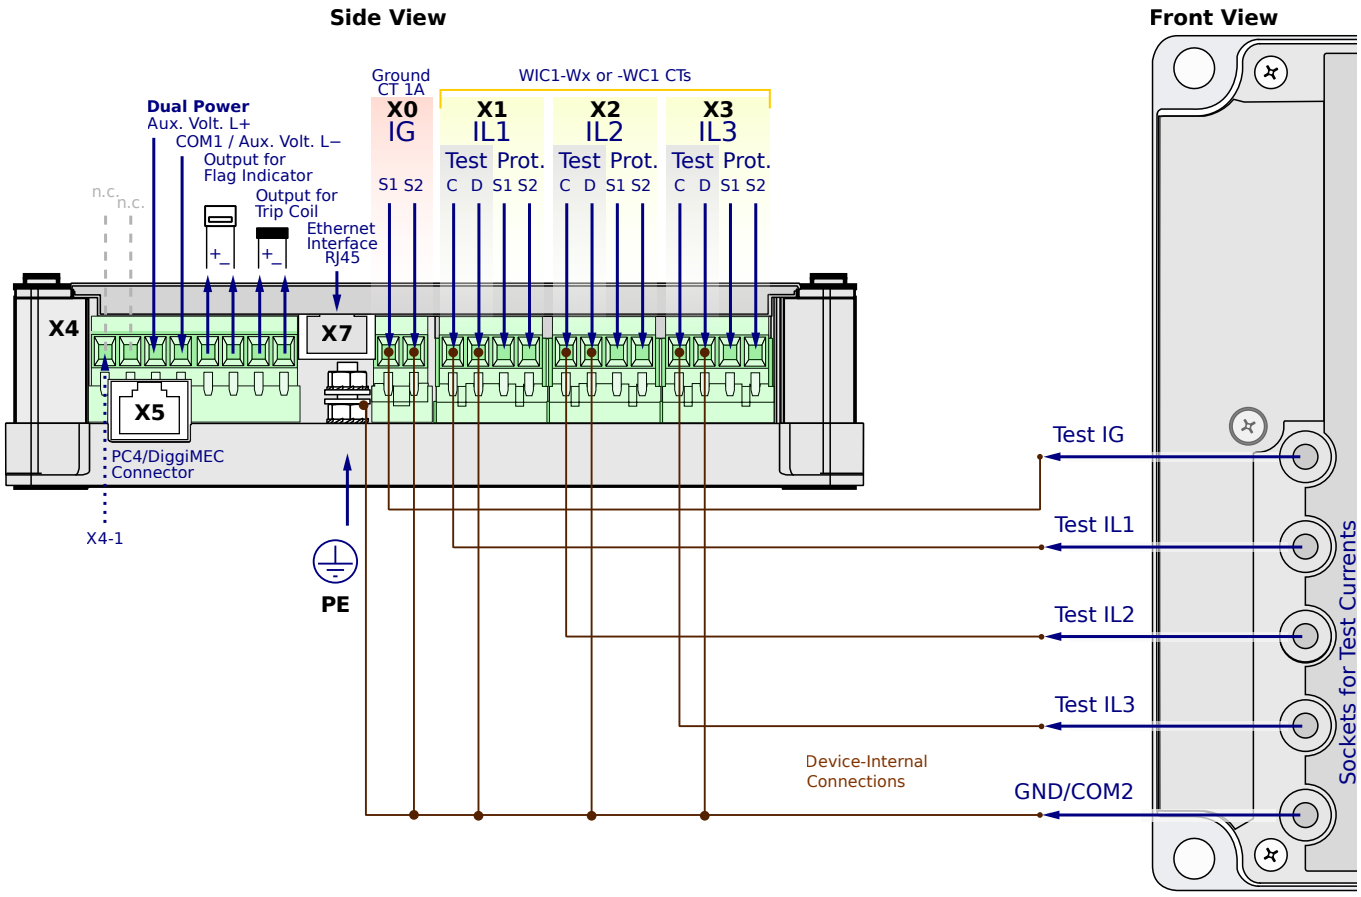


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2PCH

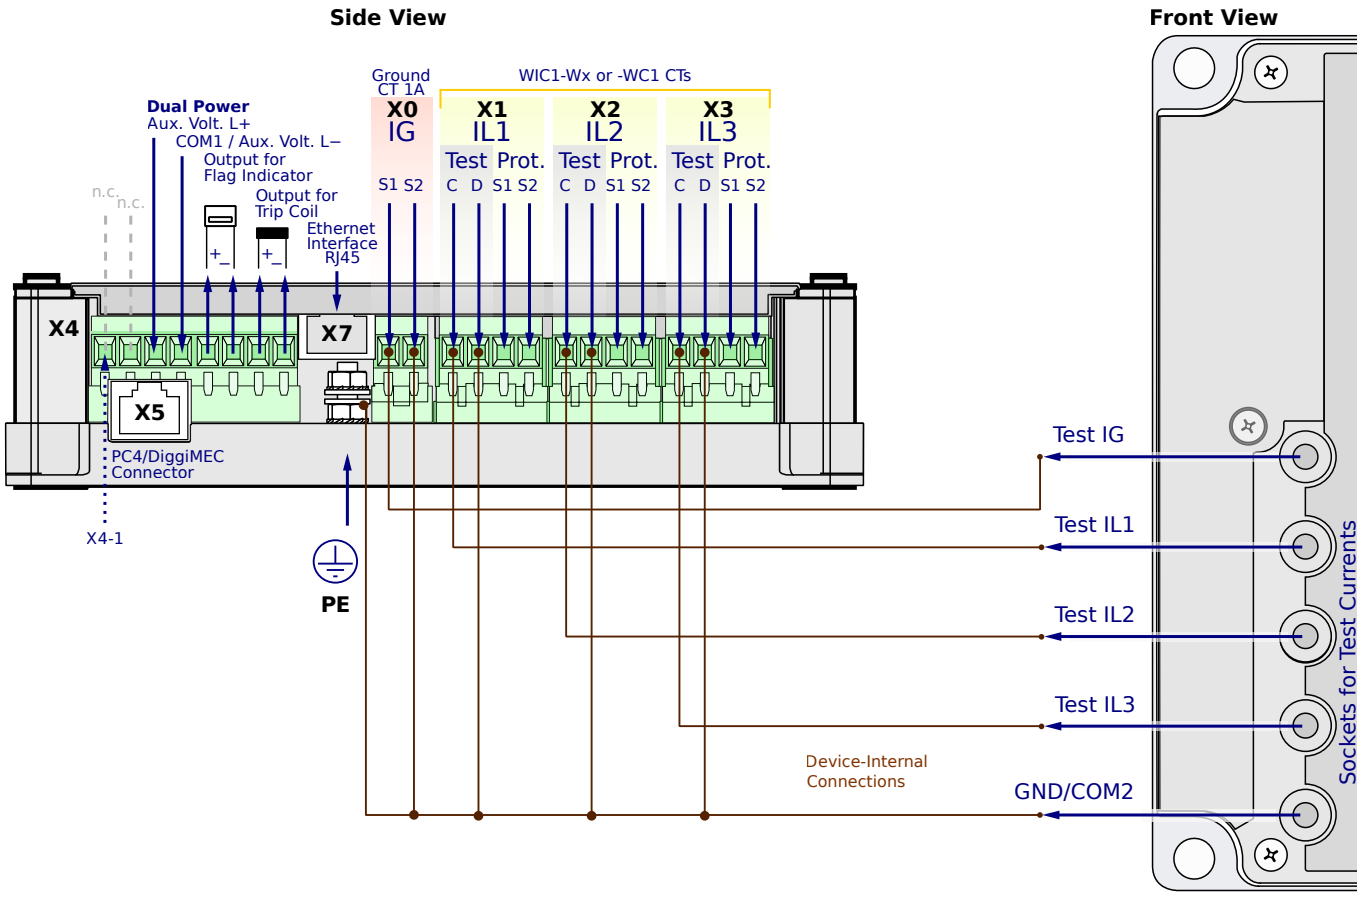


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FM2PL0

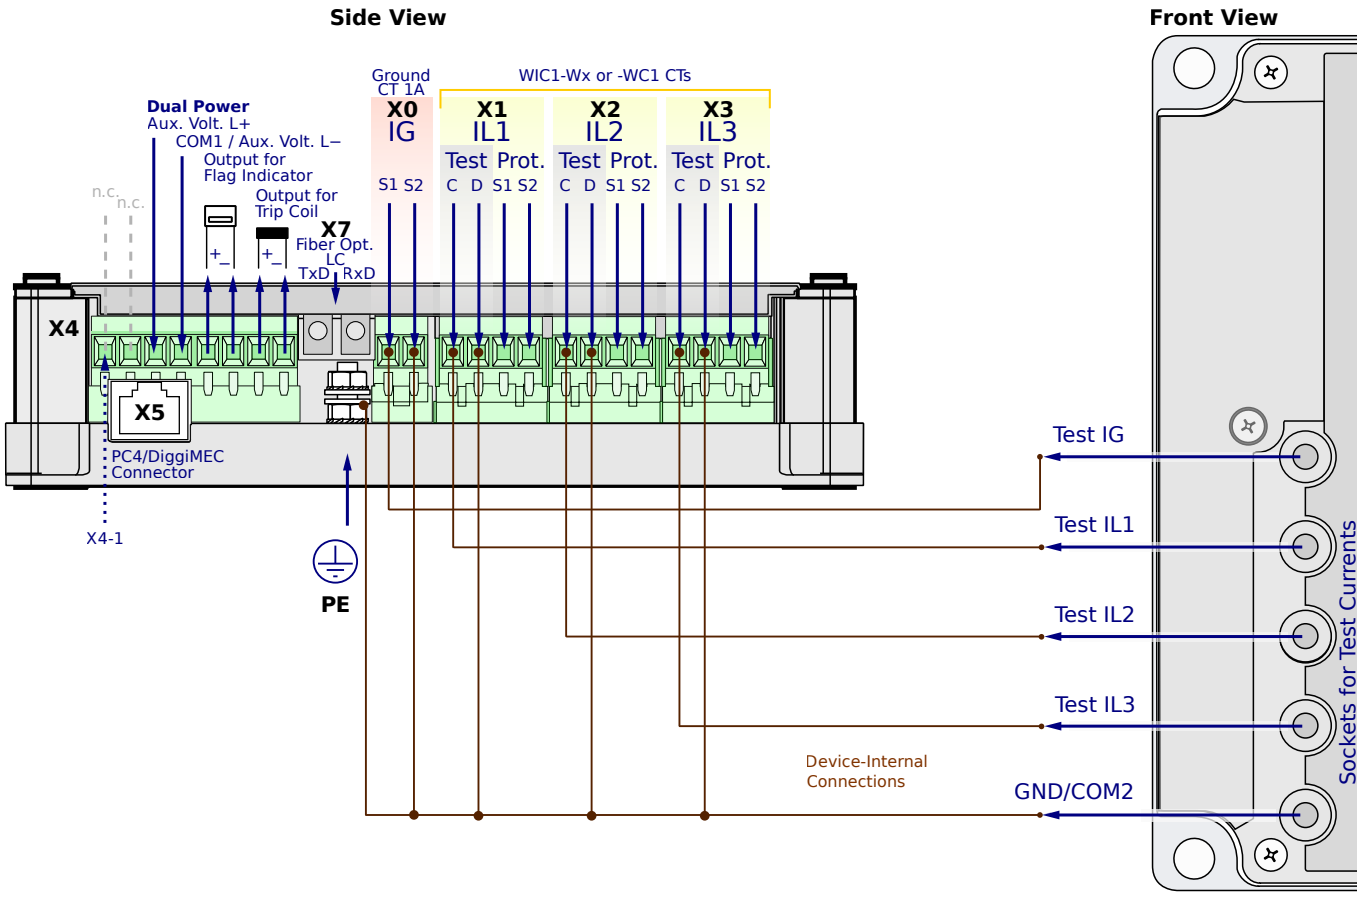


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FM2PLH

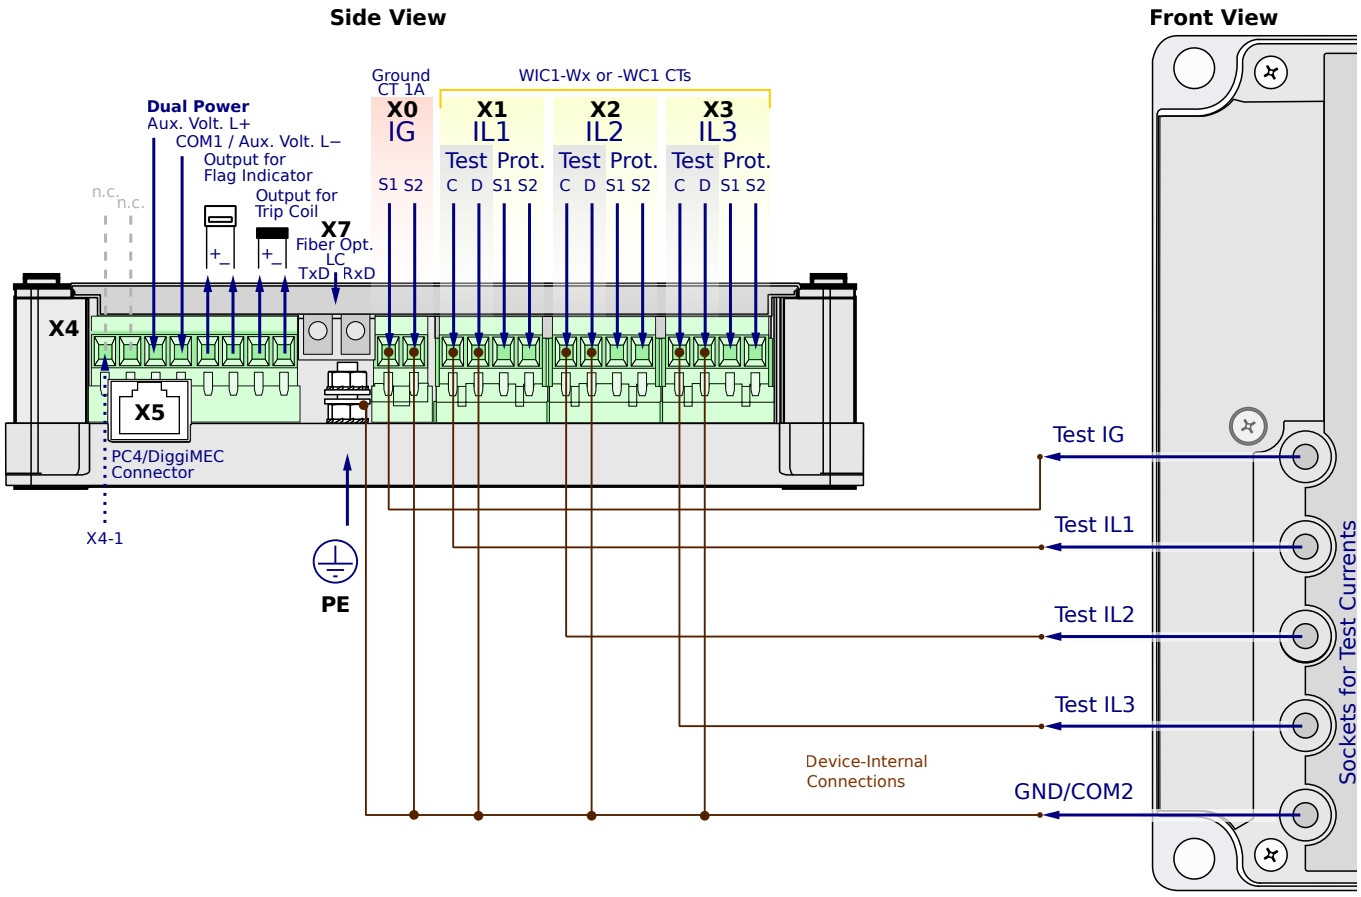


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1SA0

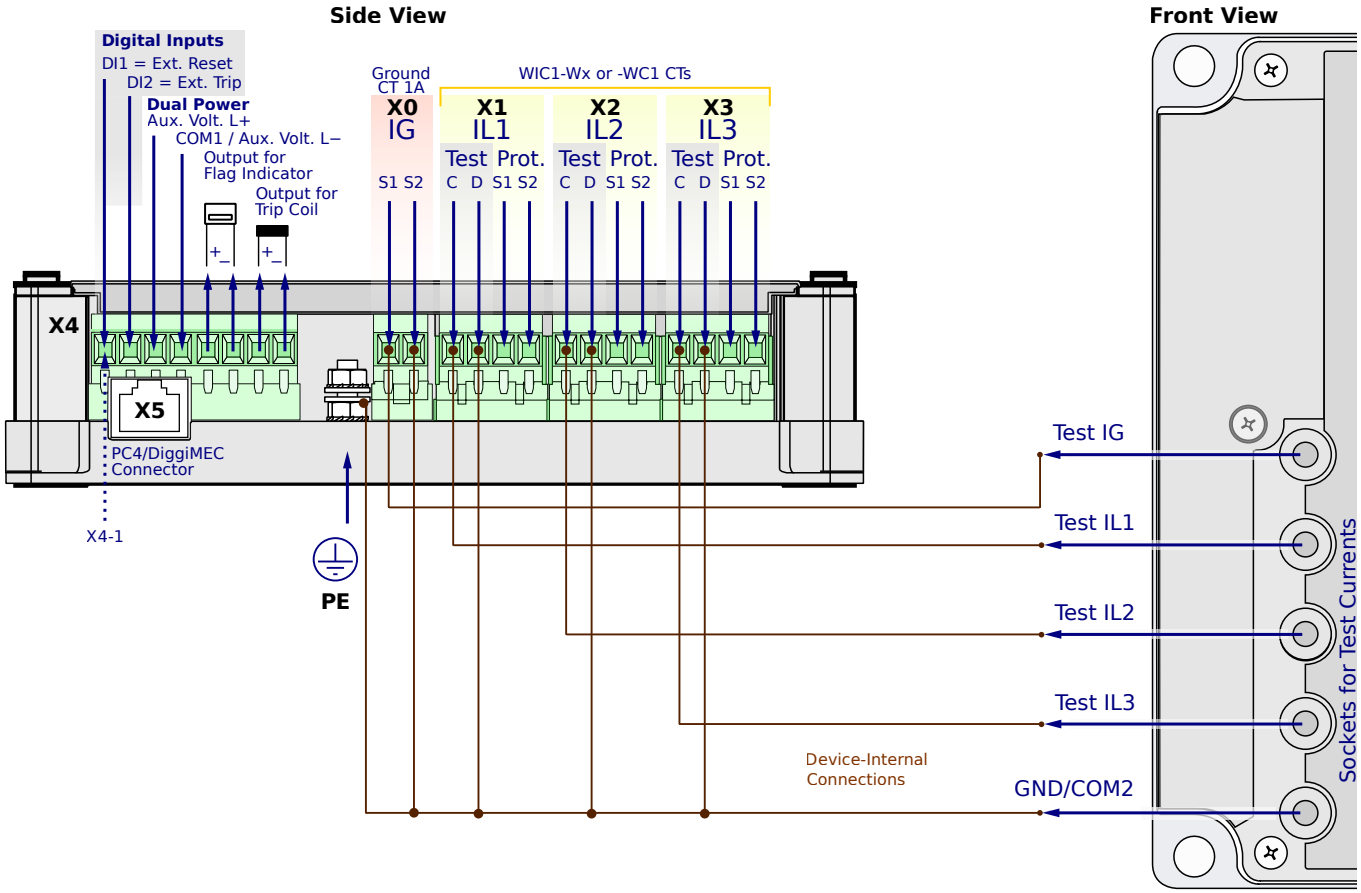


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1SAH

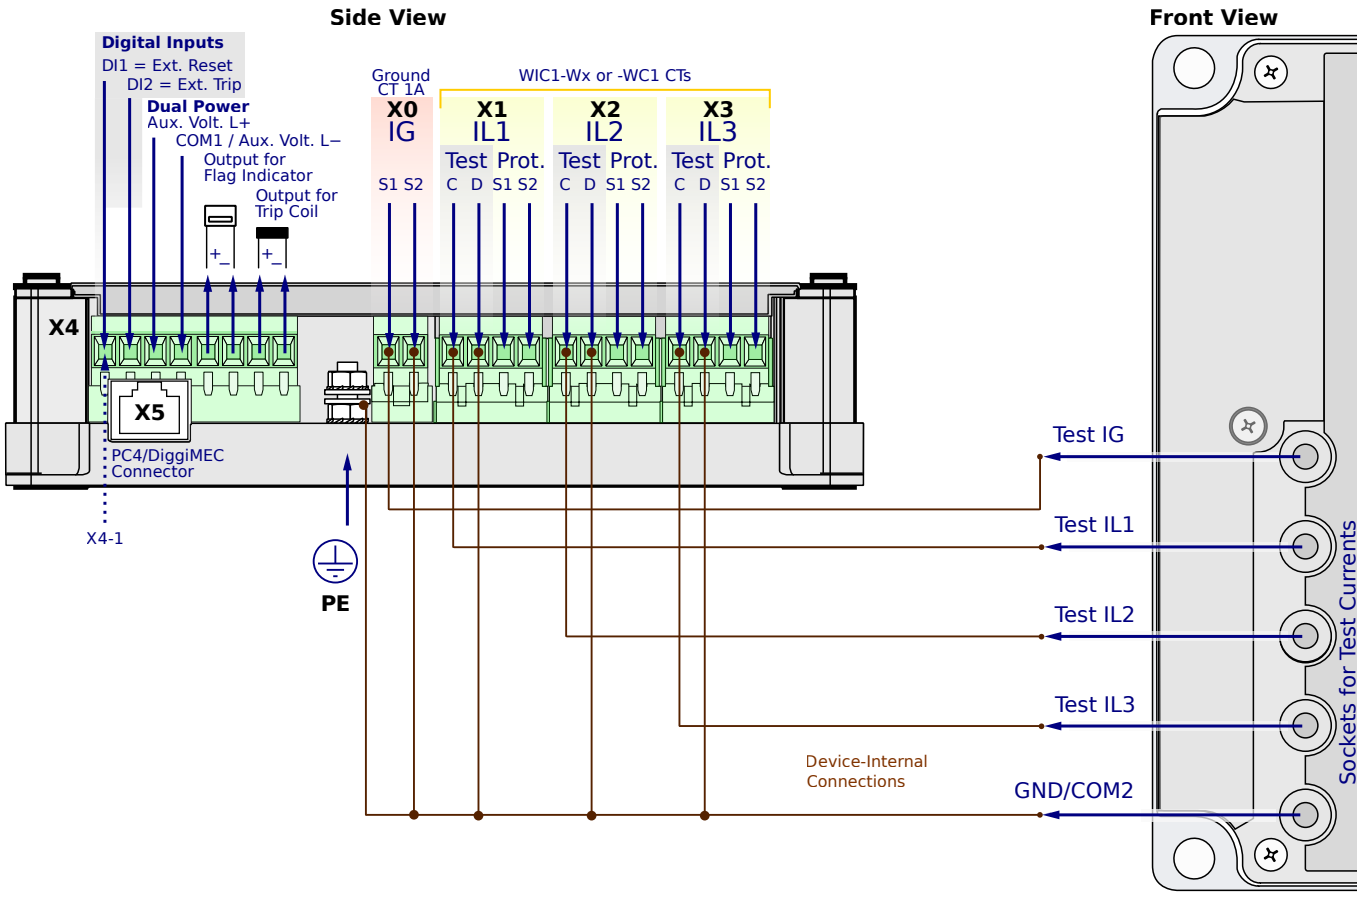


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1SB0

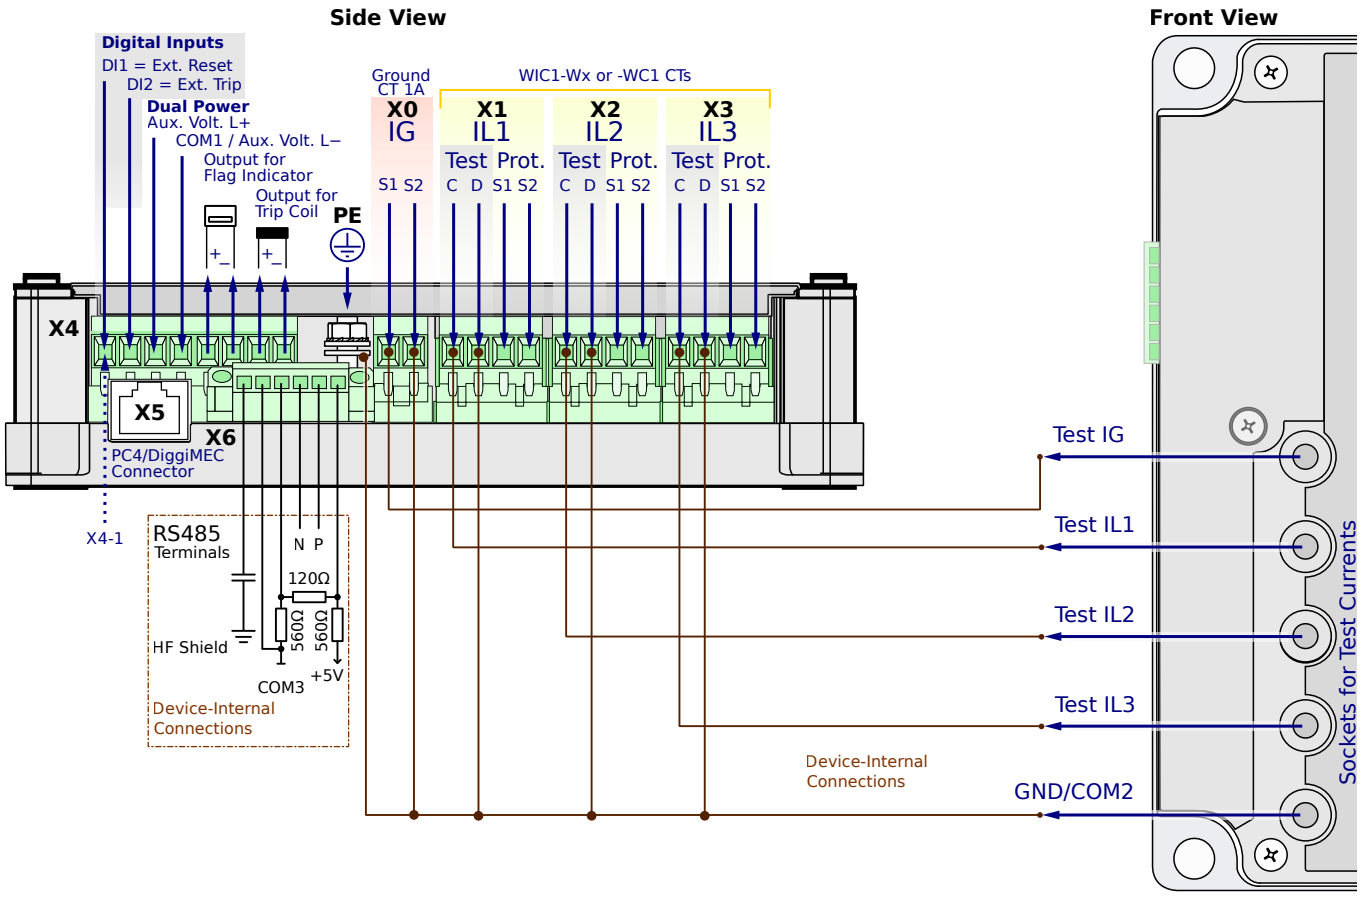


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1SBH

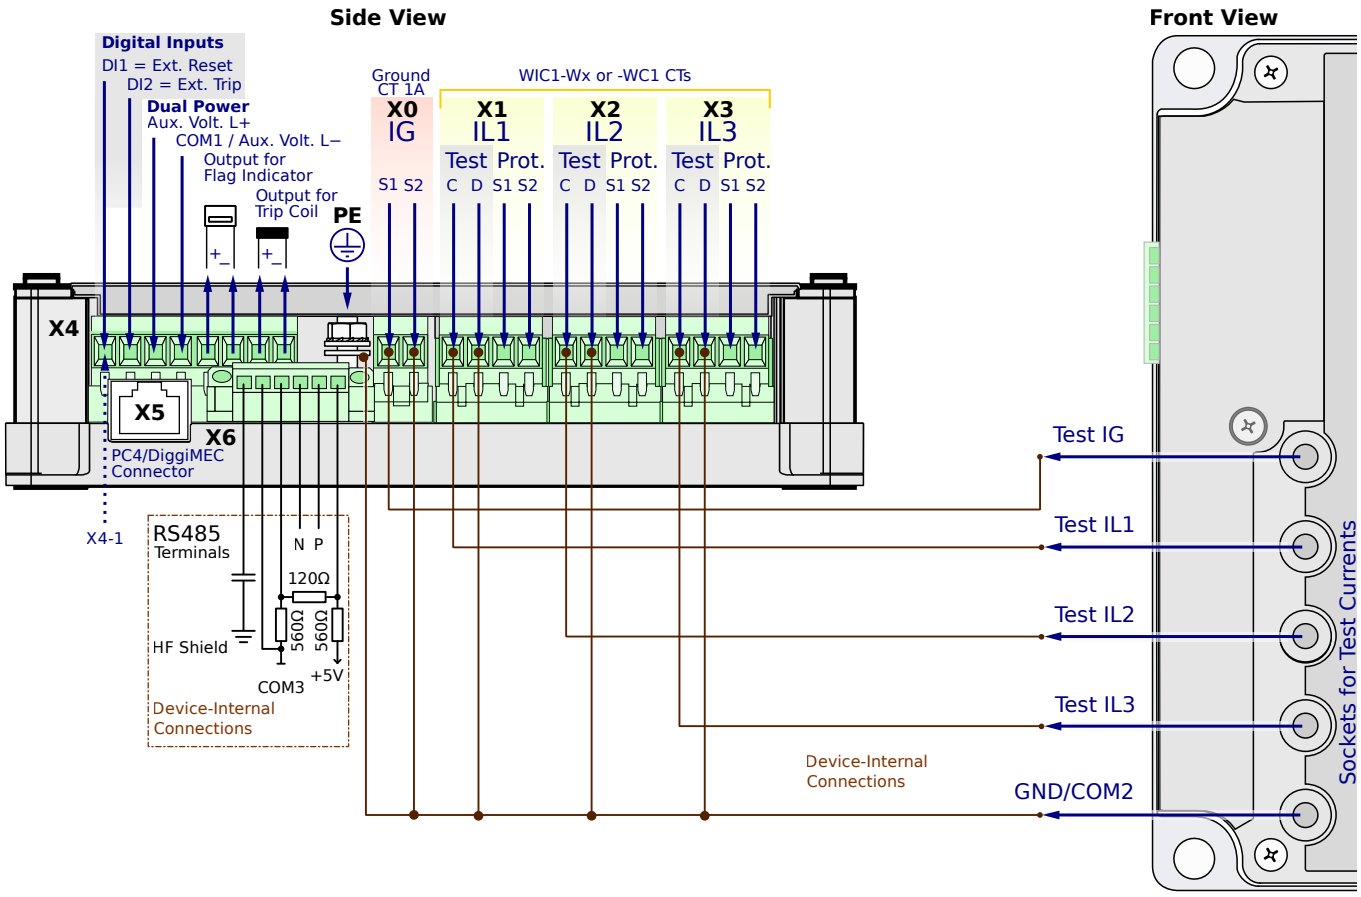


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1SC0

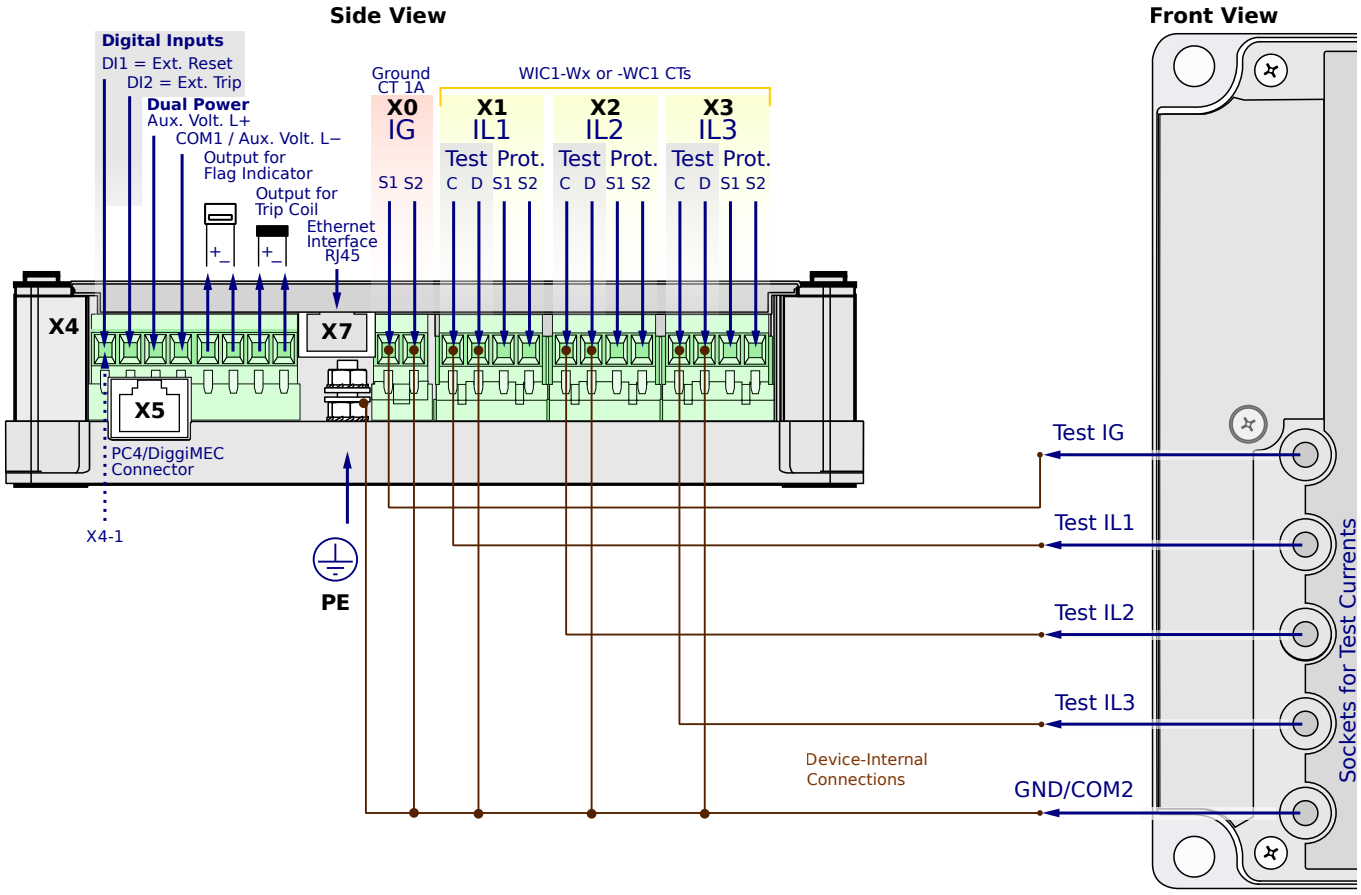


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1SCH

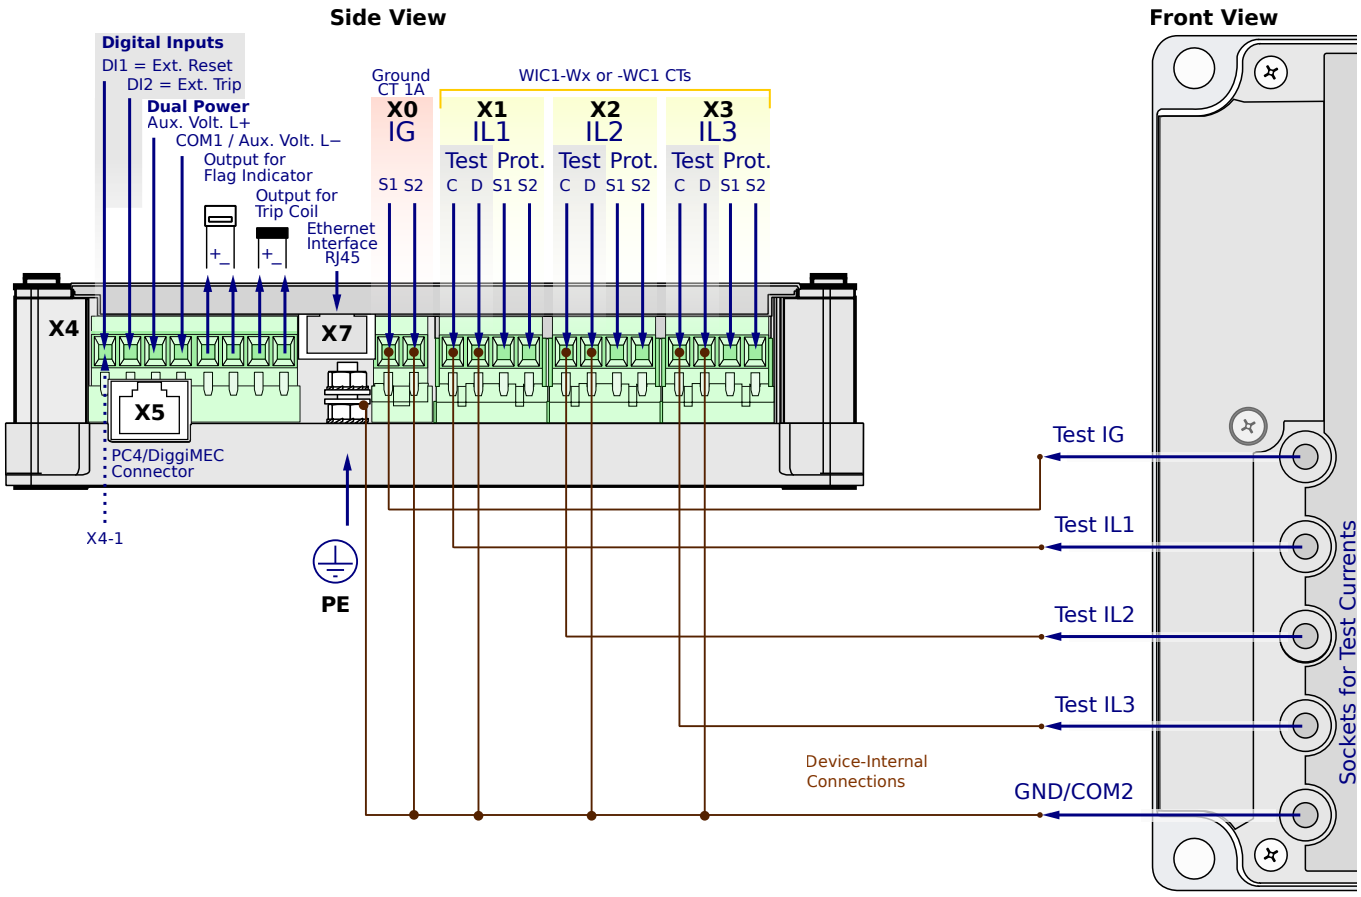


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1SL0

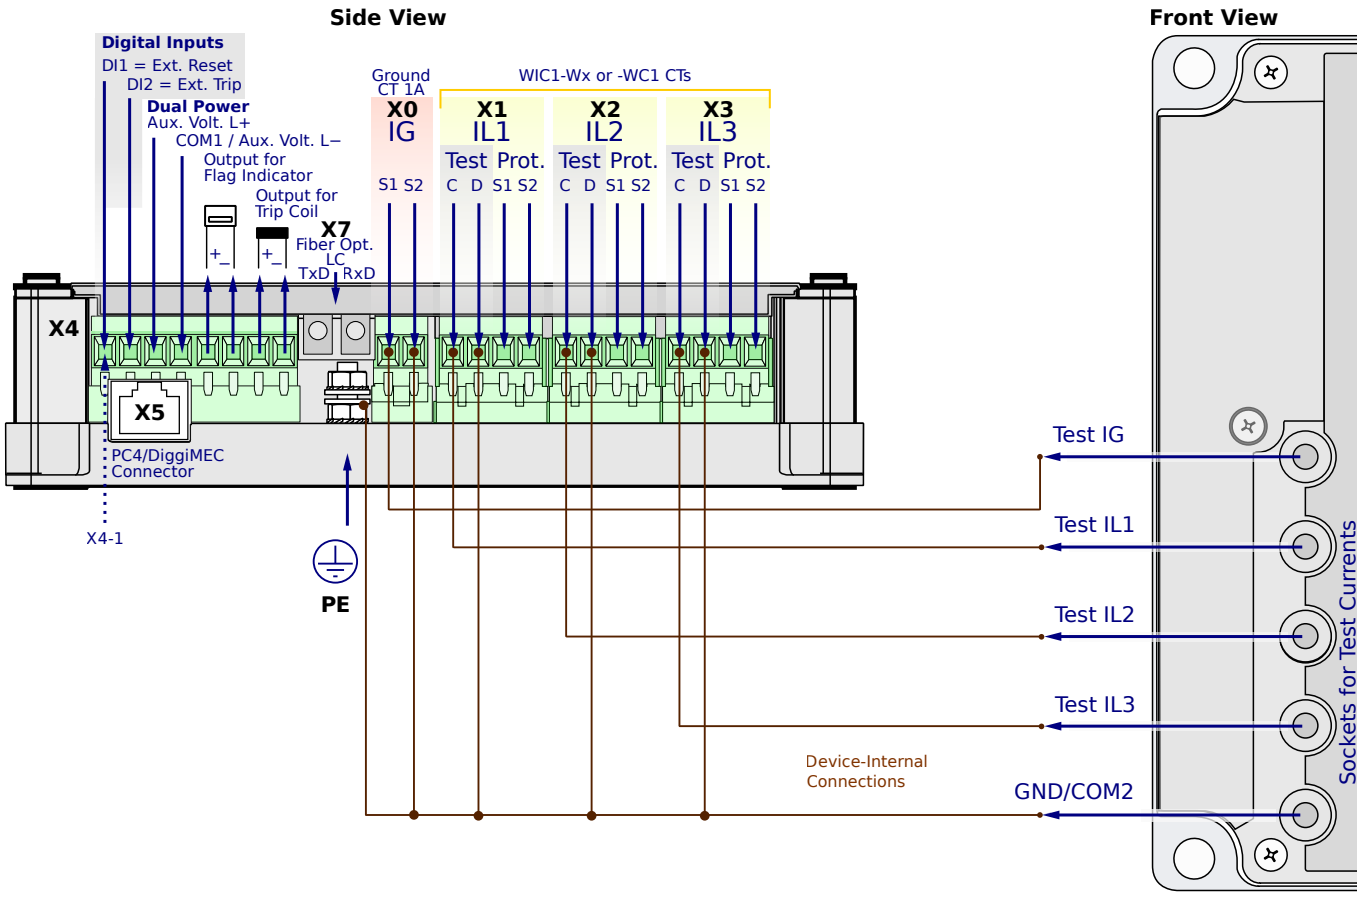


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1SLH

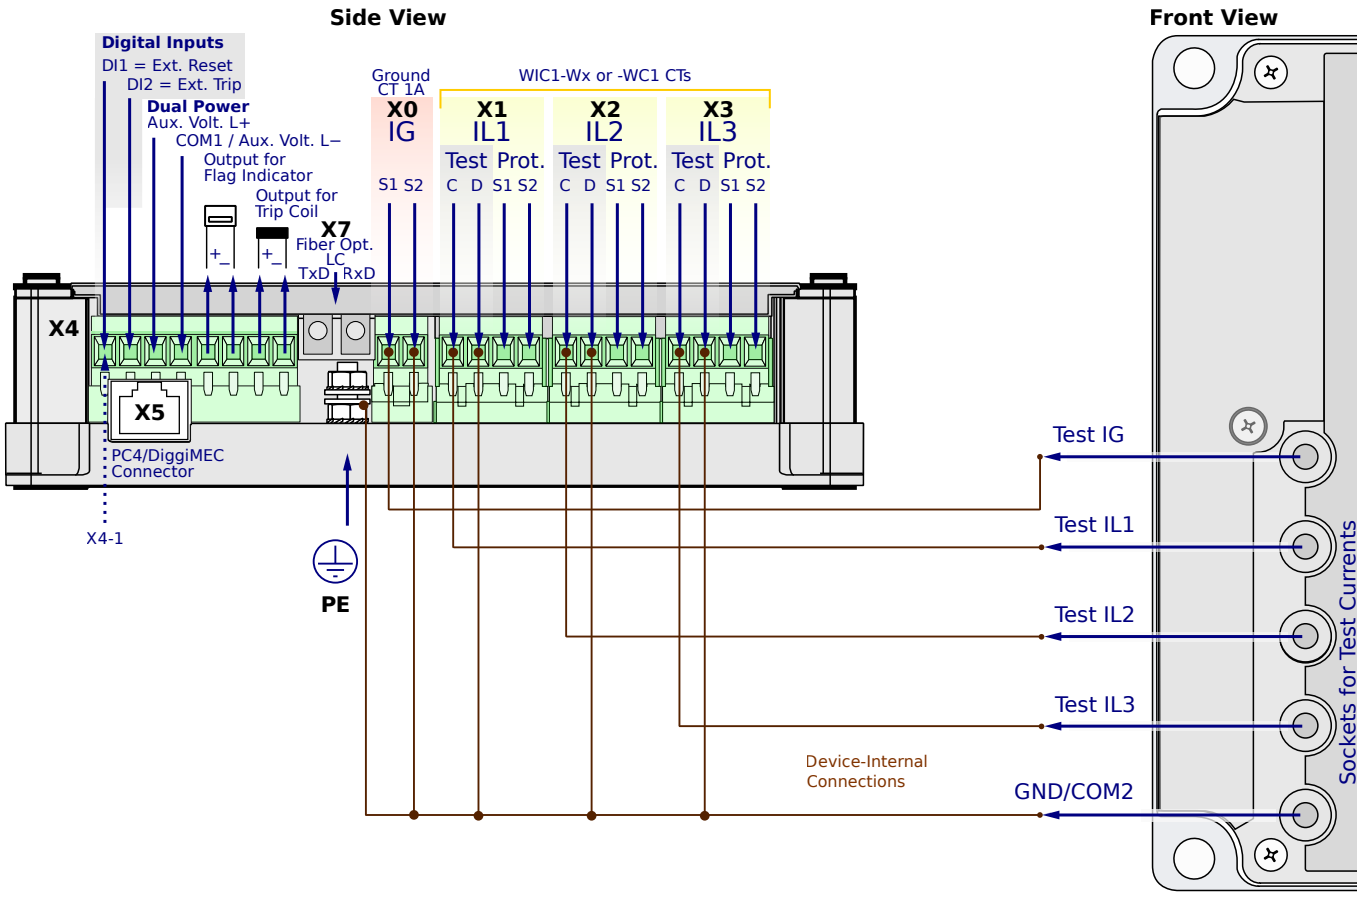


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1AA0

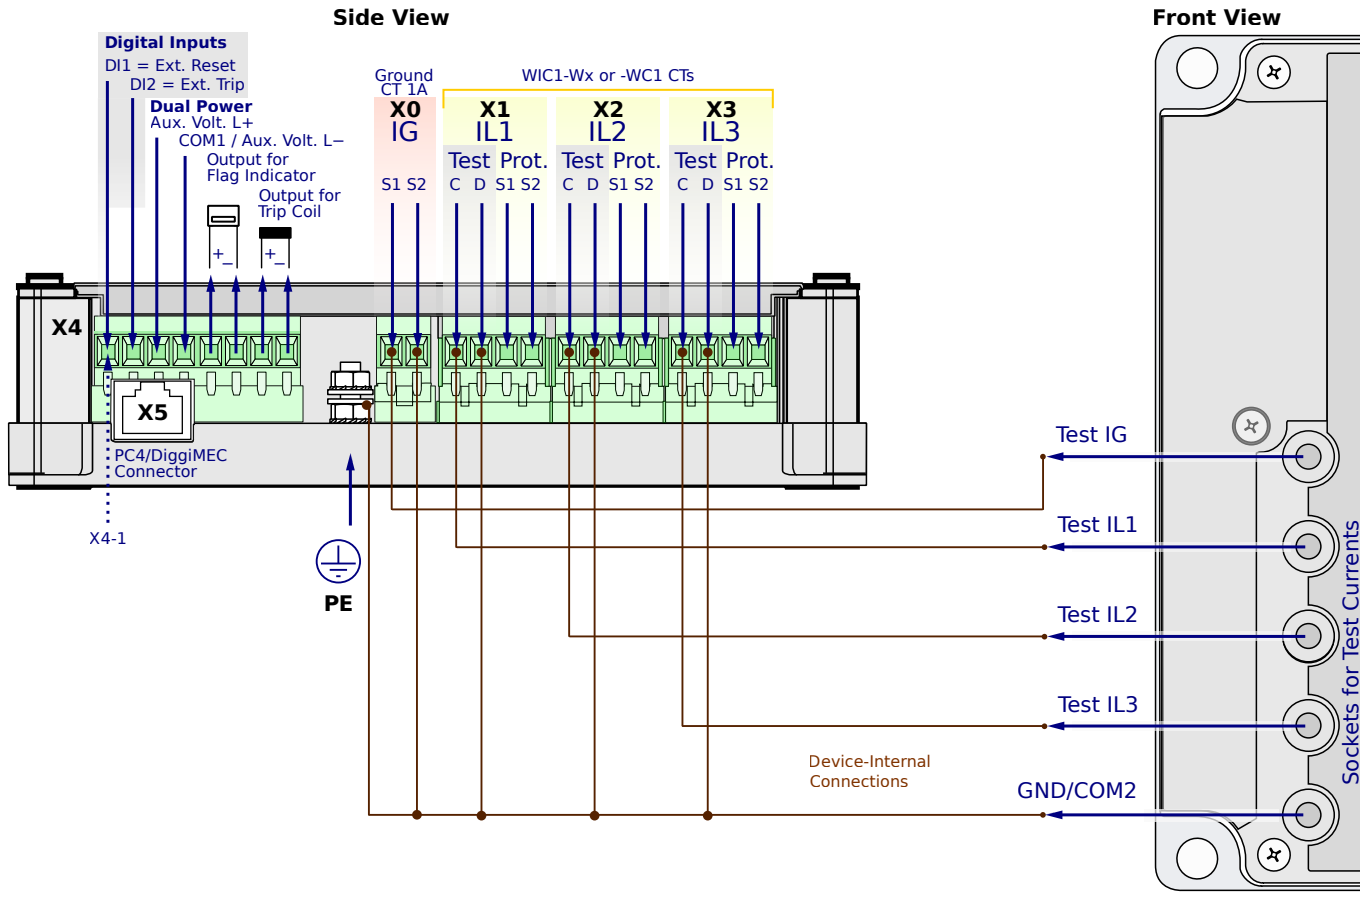


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1AAH

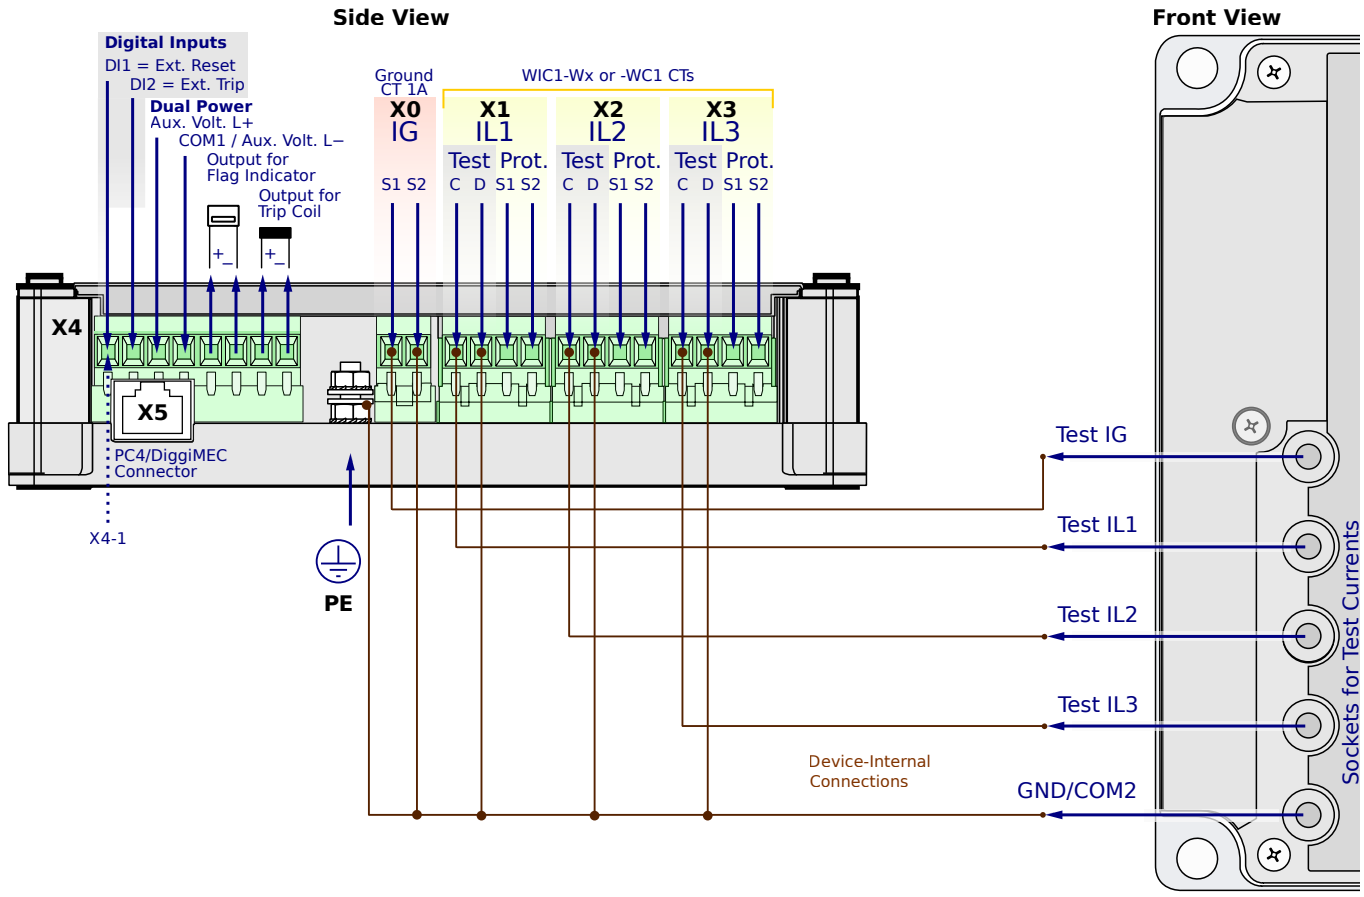


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1AB0

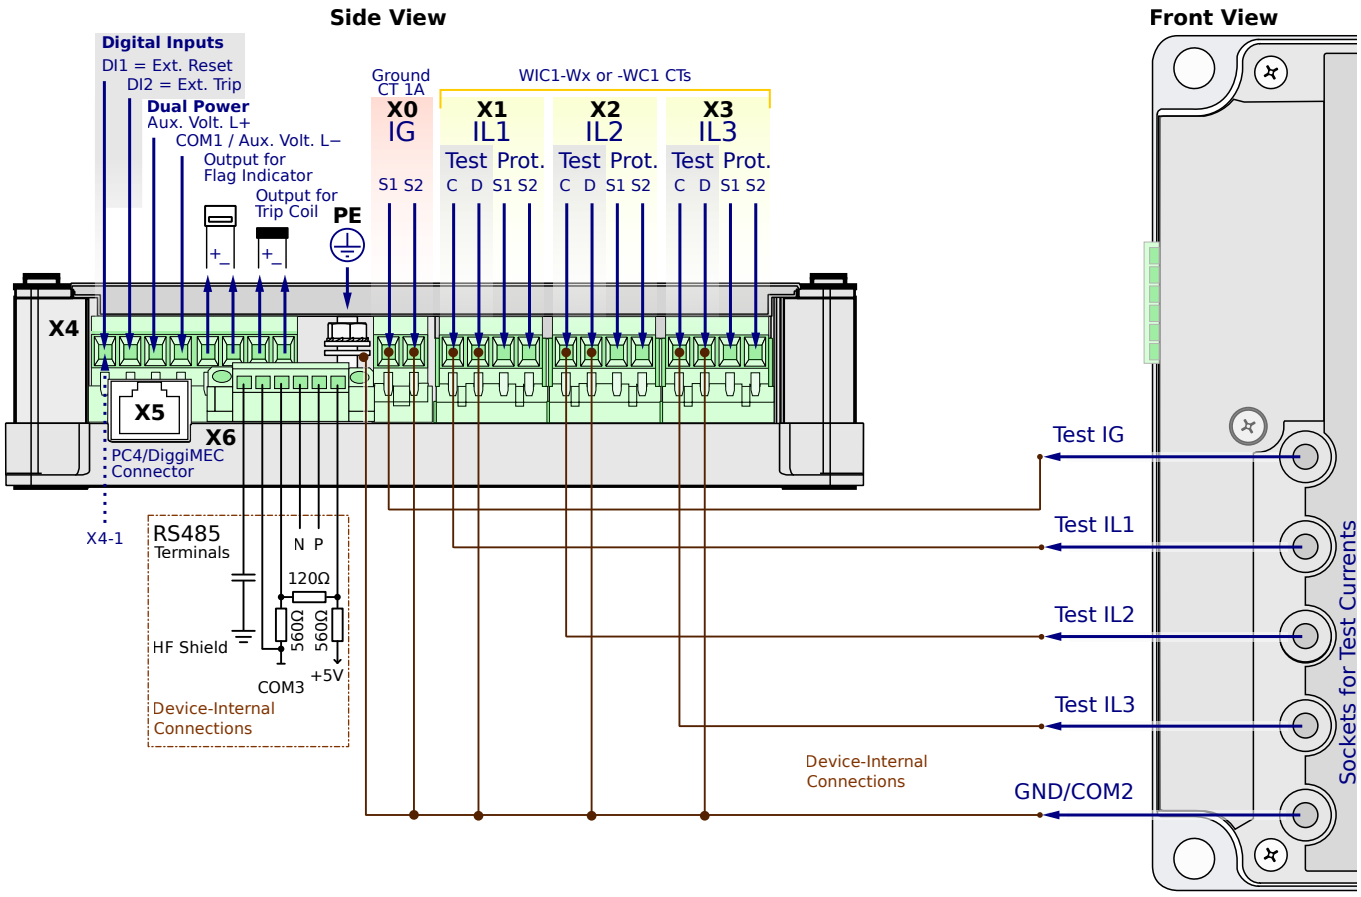


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1ABH

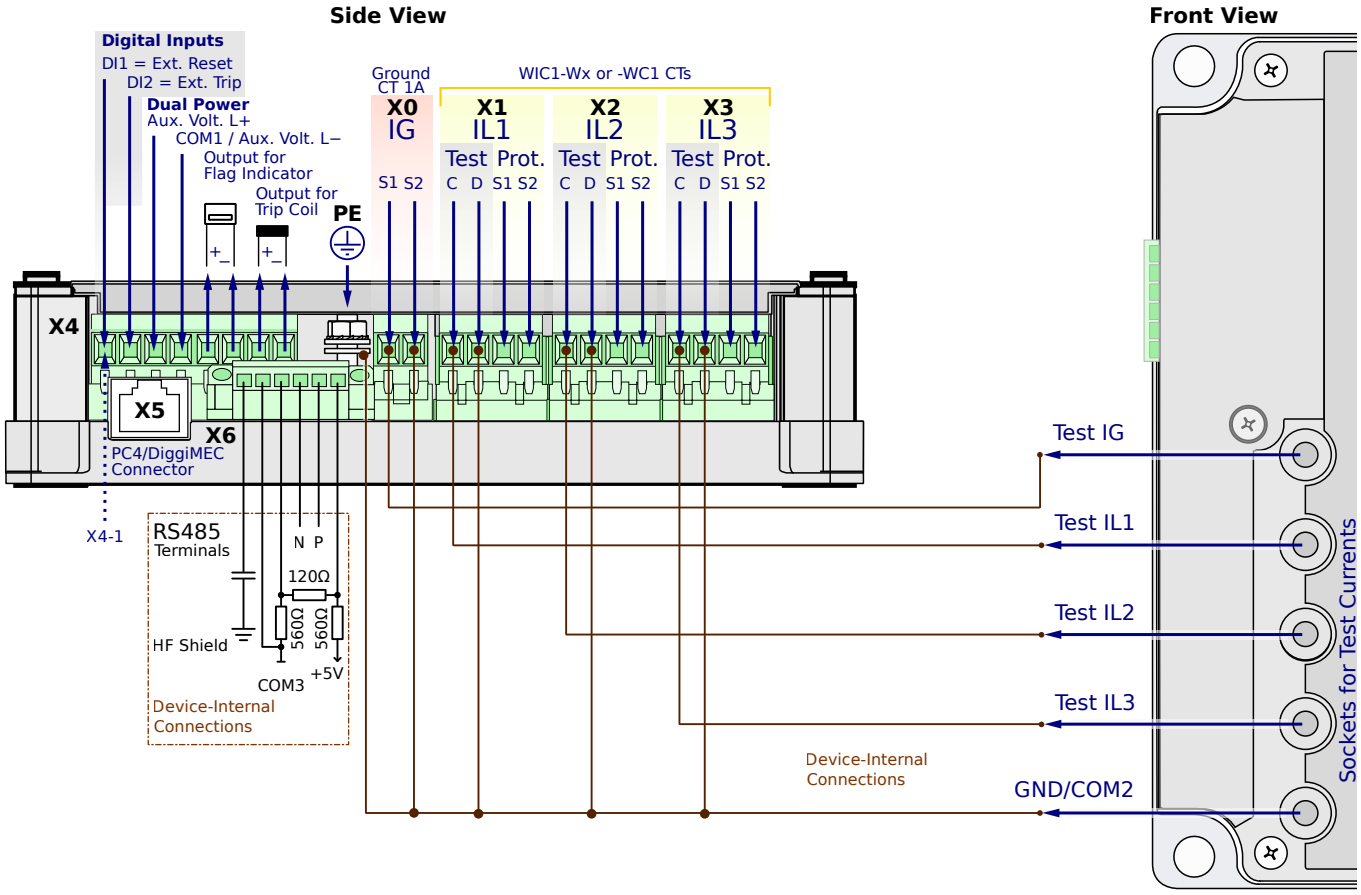


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1AC0

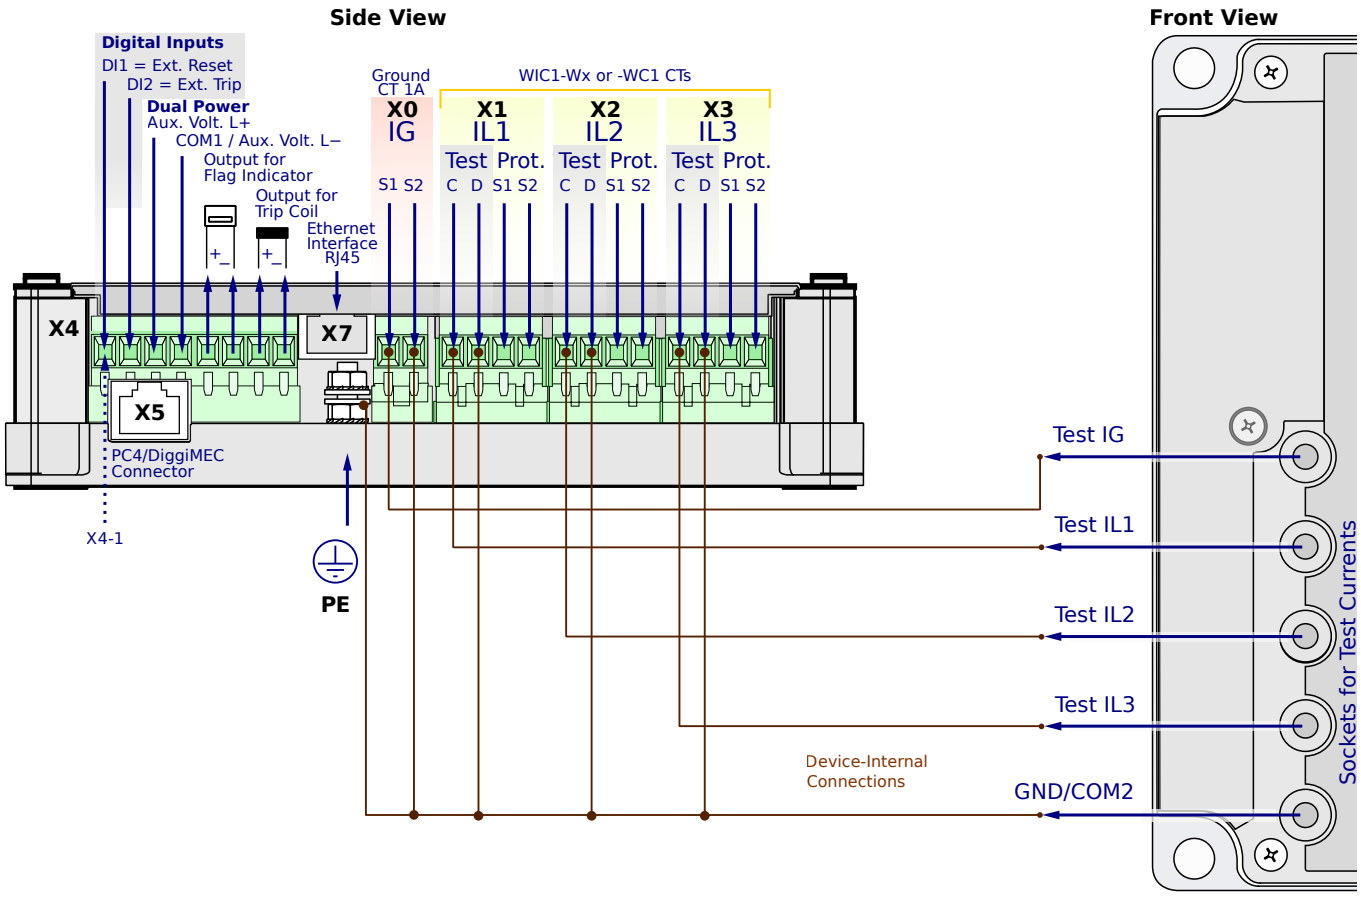


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1ACH

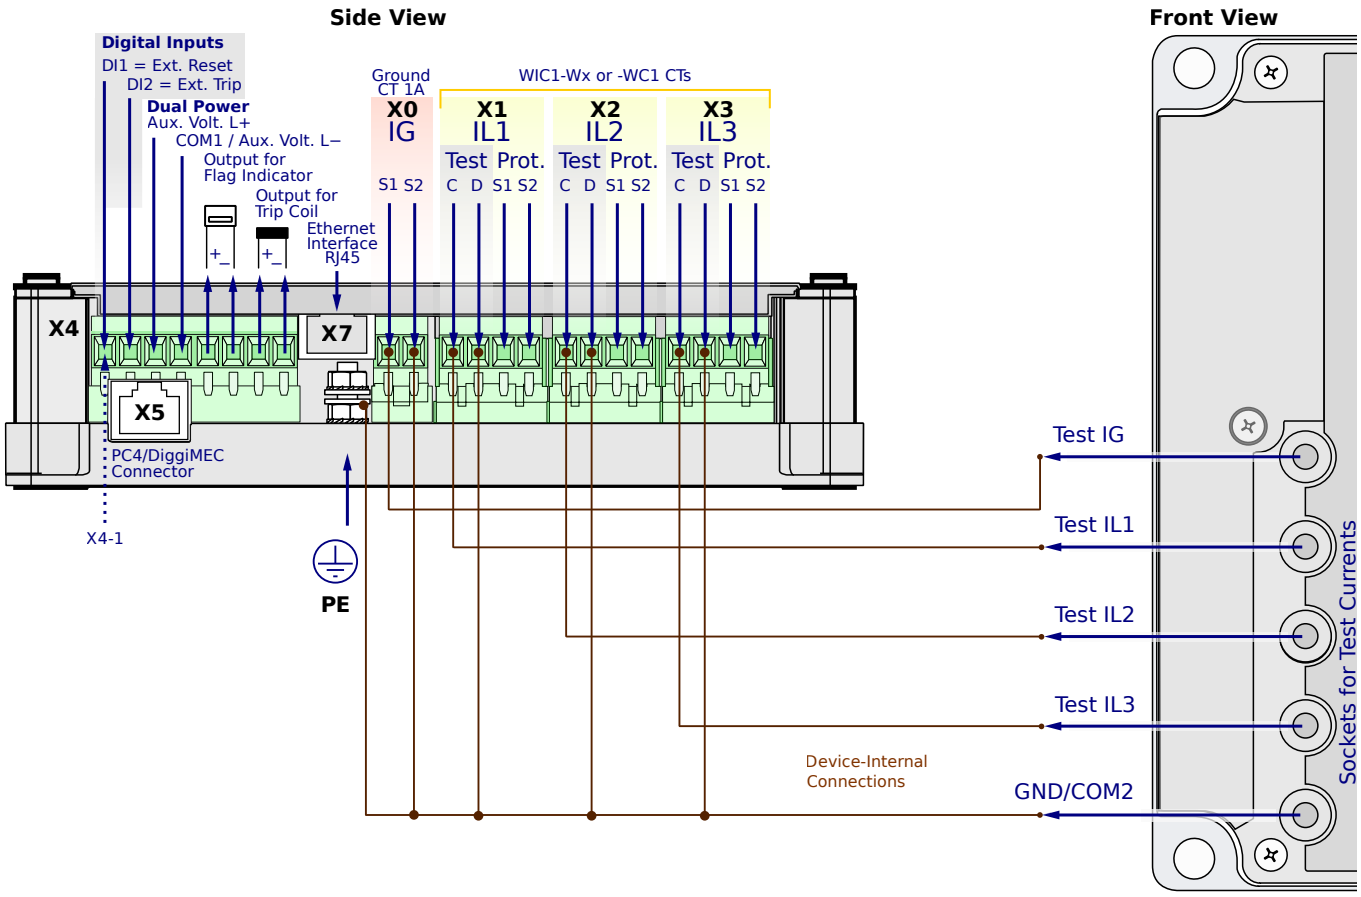


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1AL0

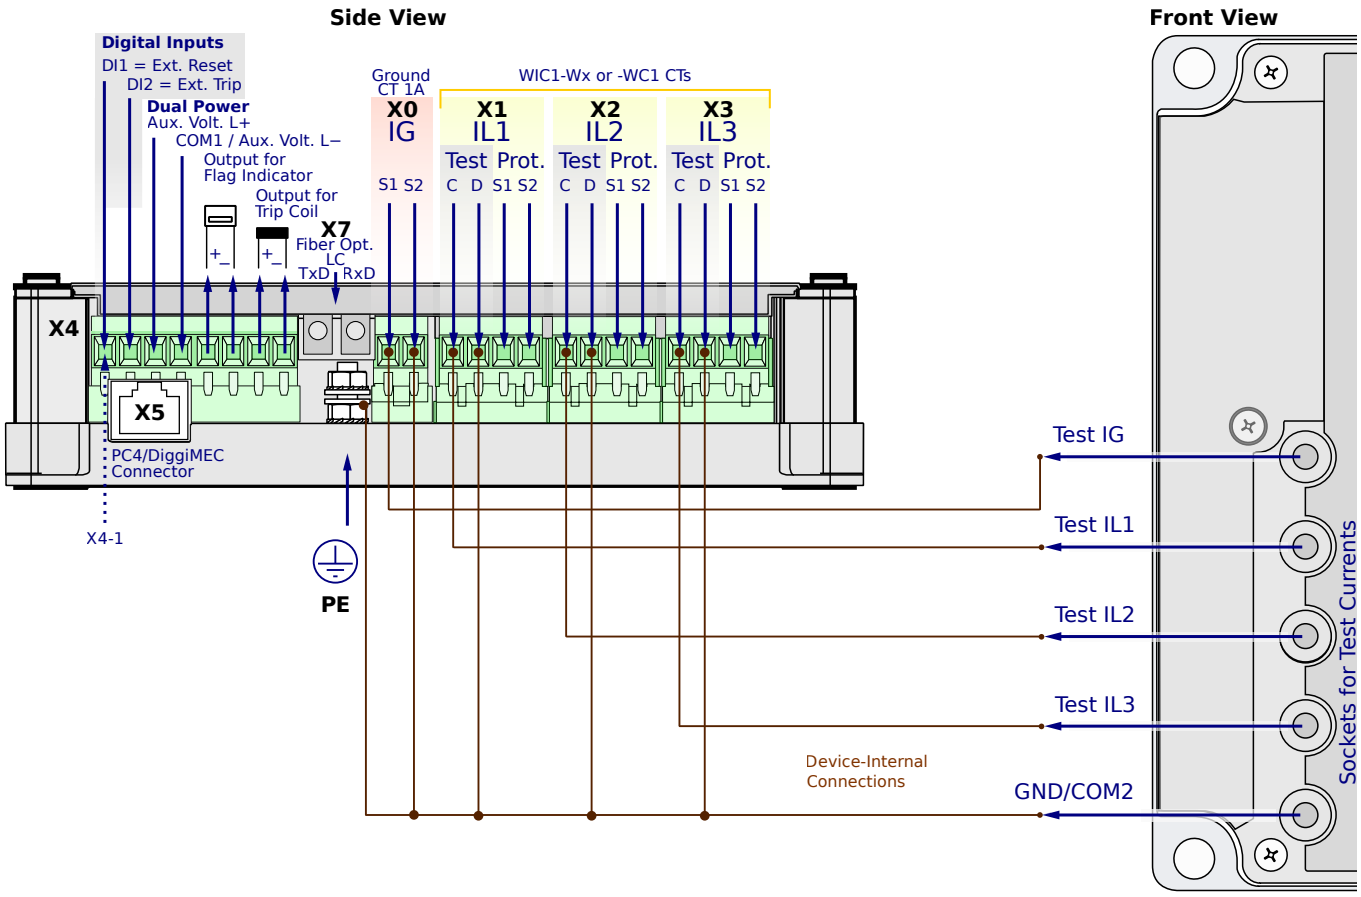


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1ALH

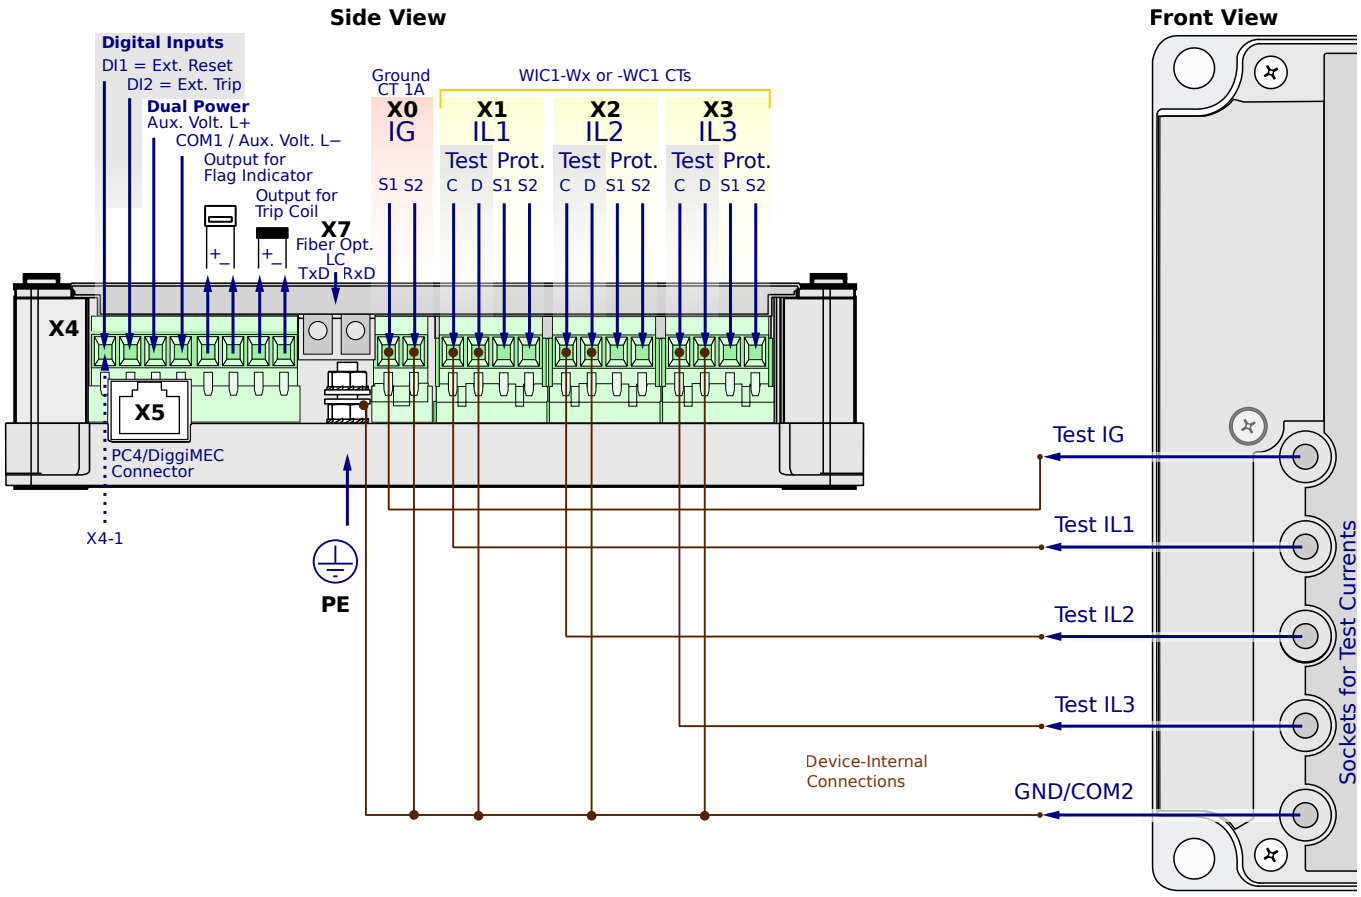


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1PA0

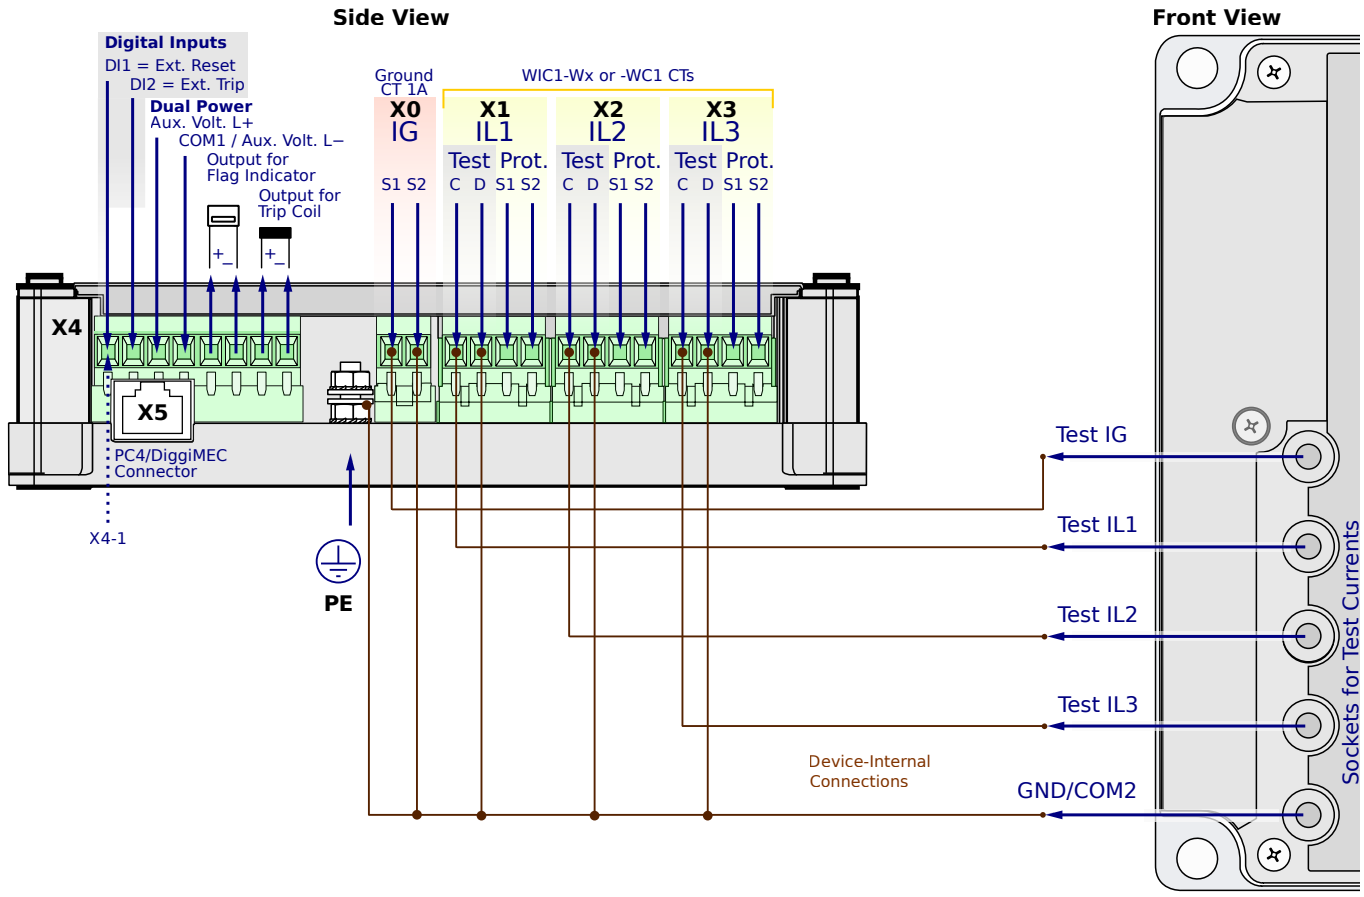


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1PAH

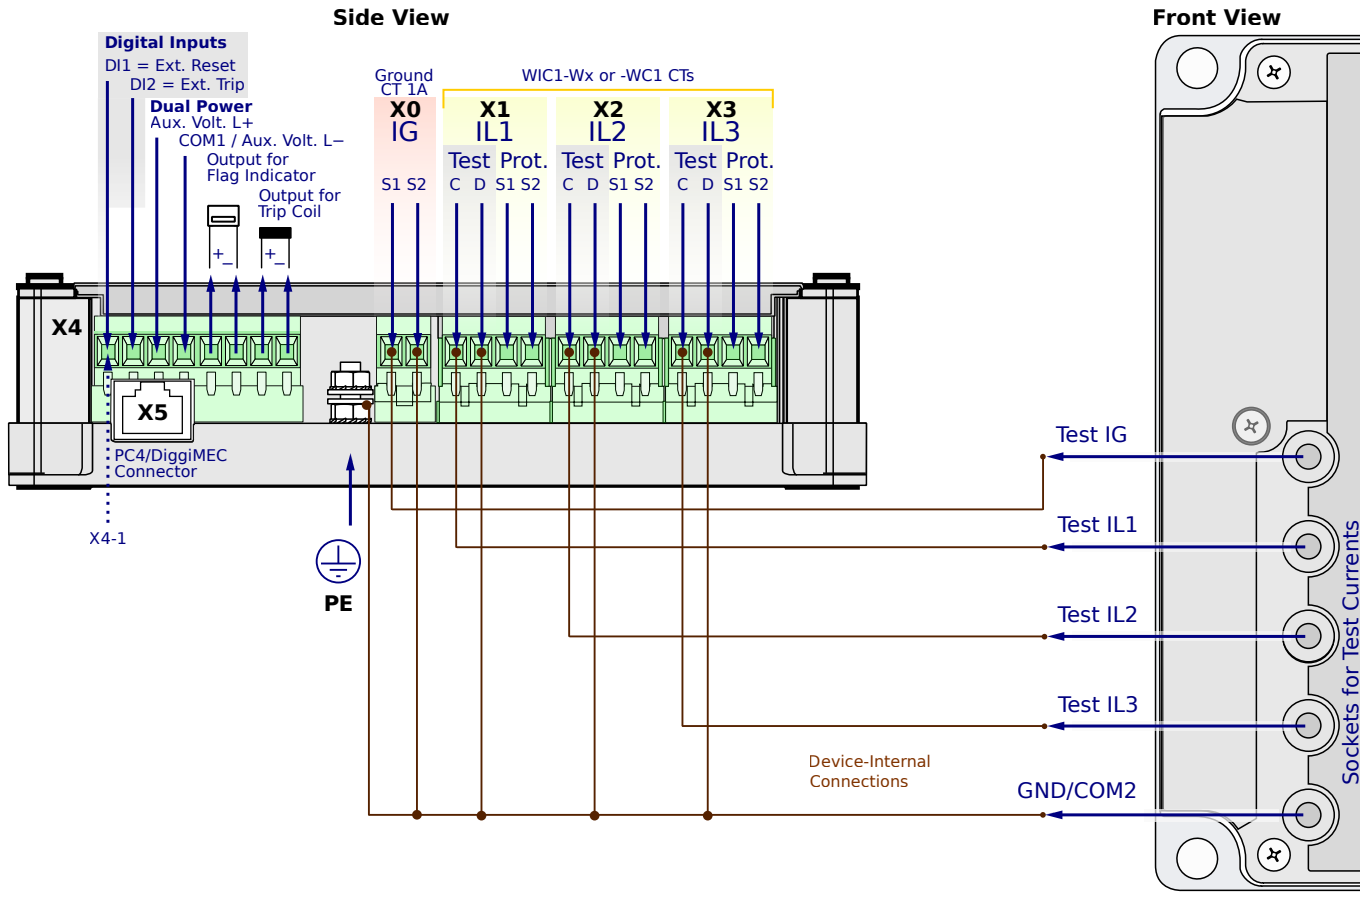


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG1PB0

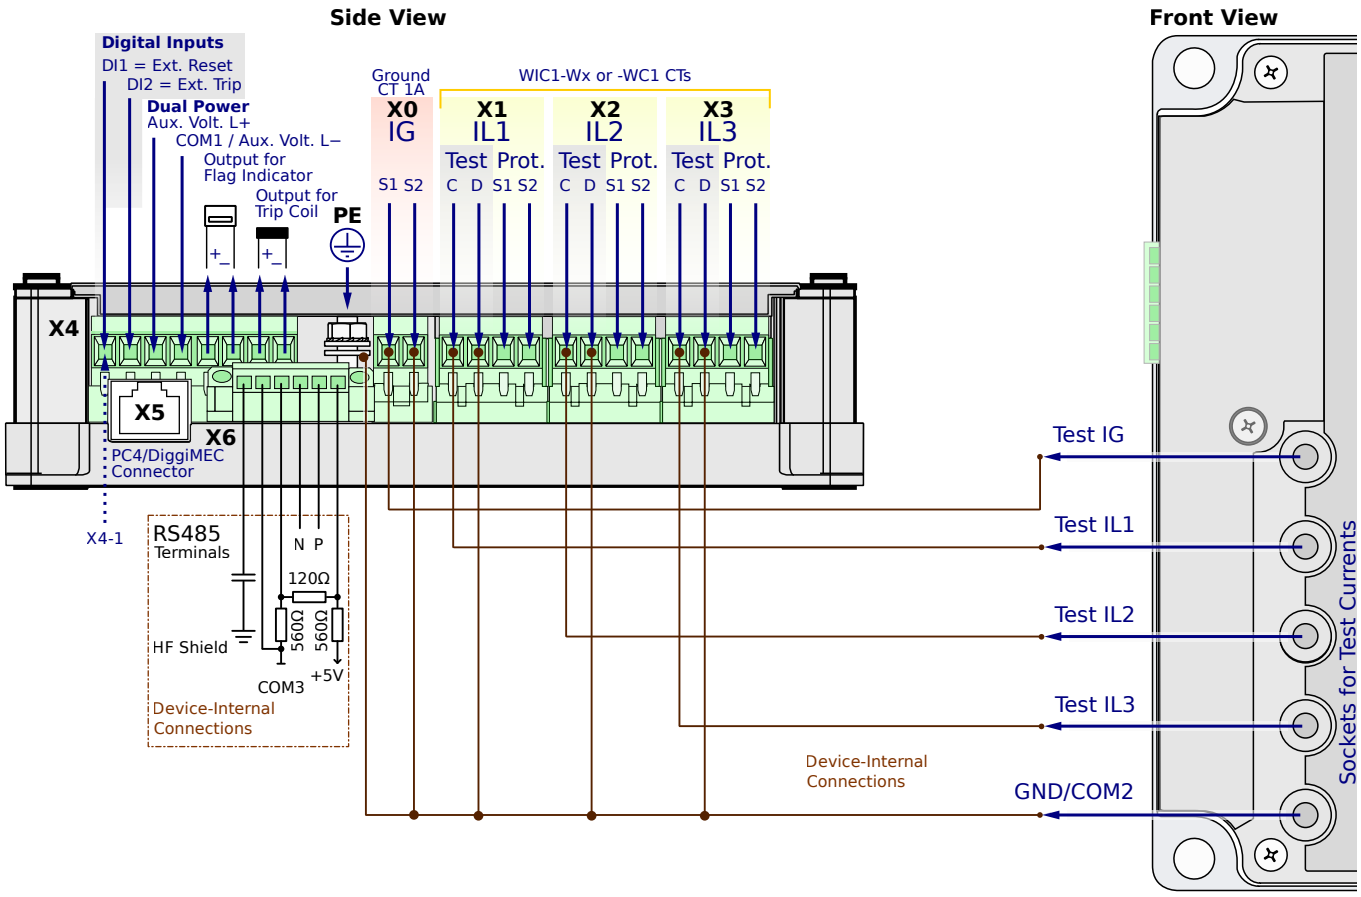


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1PBH

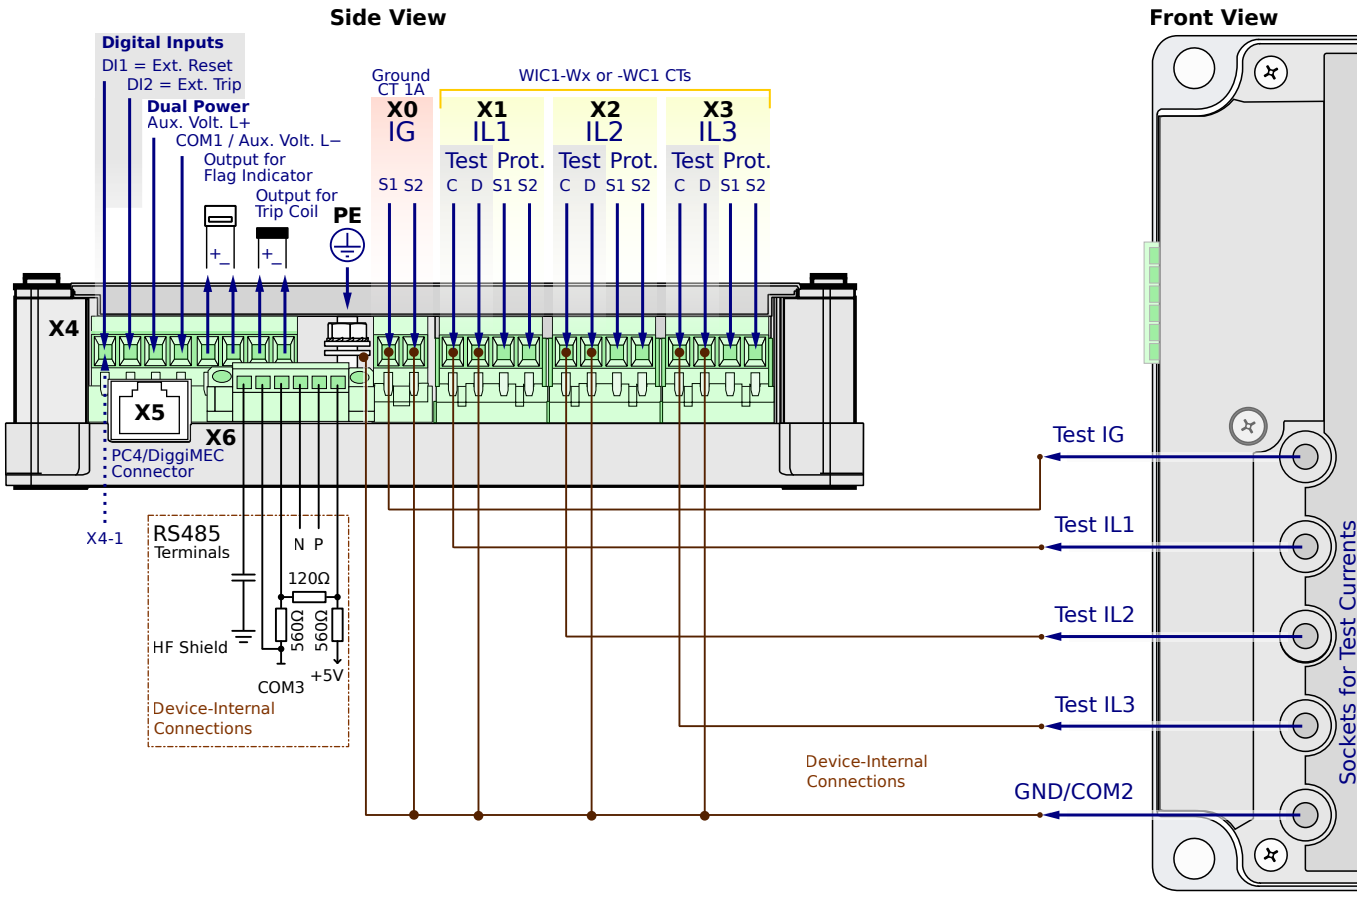


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG1PC0

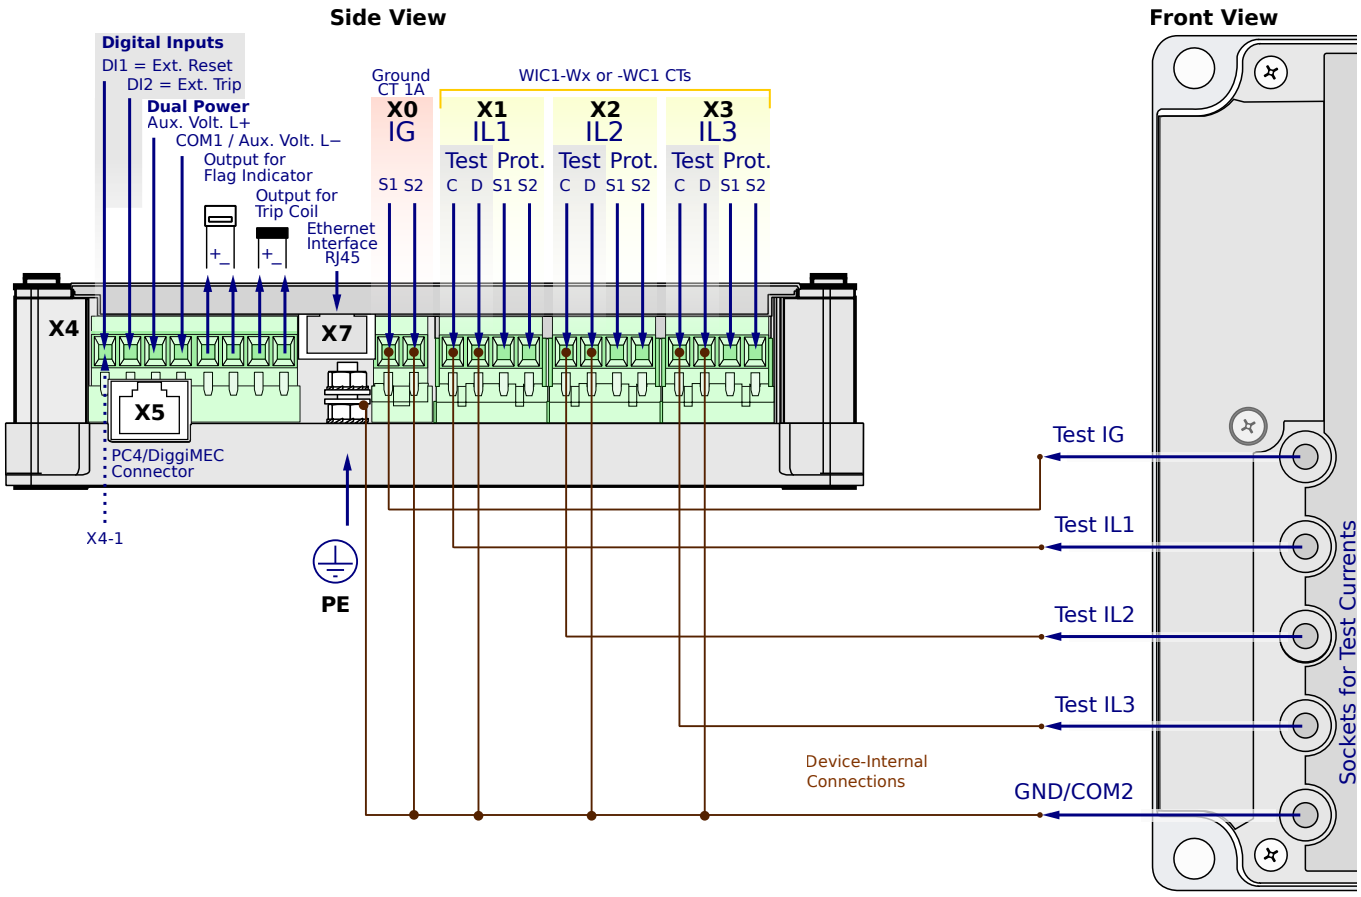


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1PCH

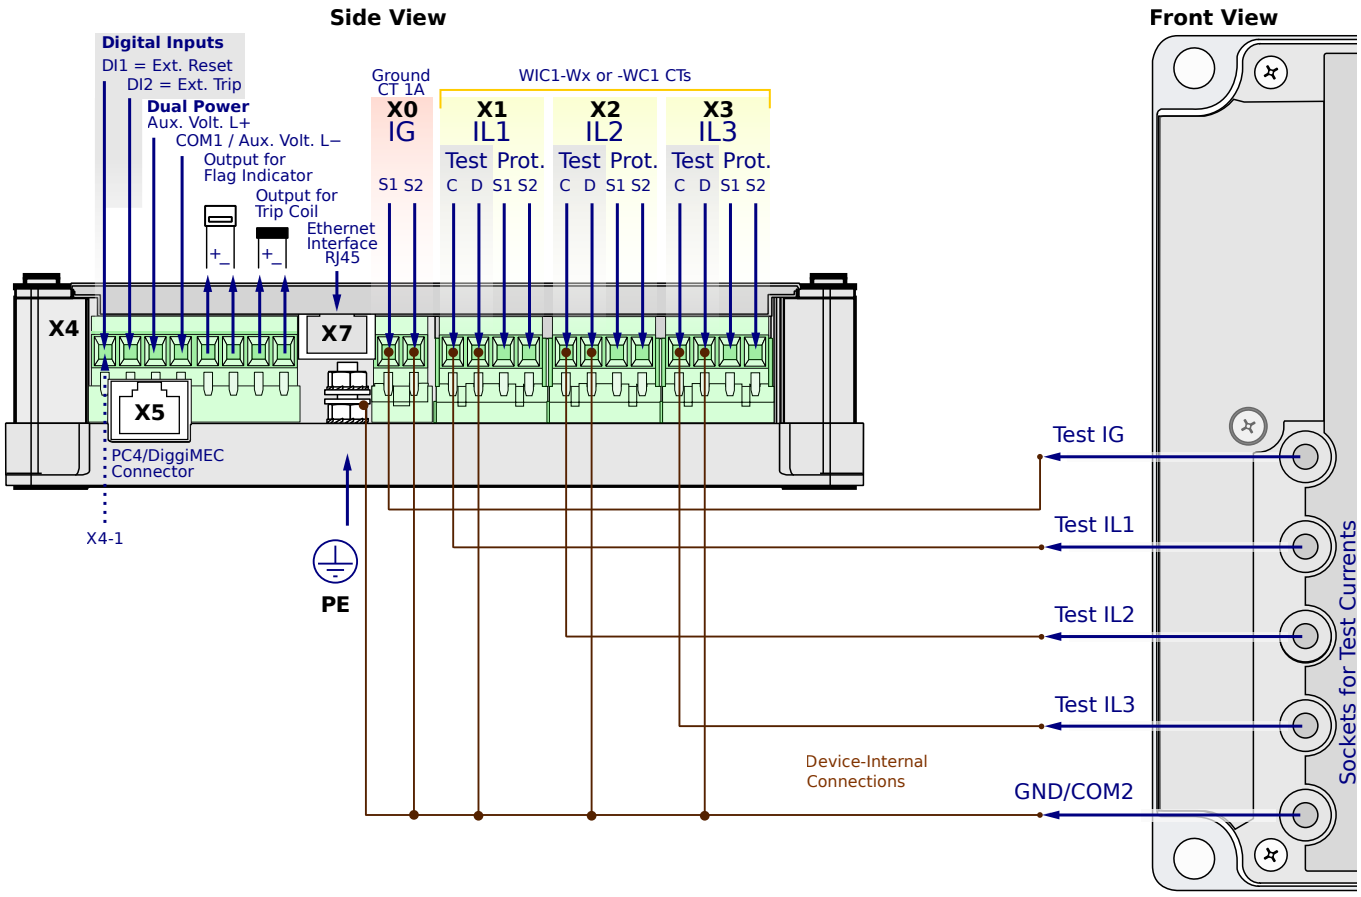


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG1PL0

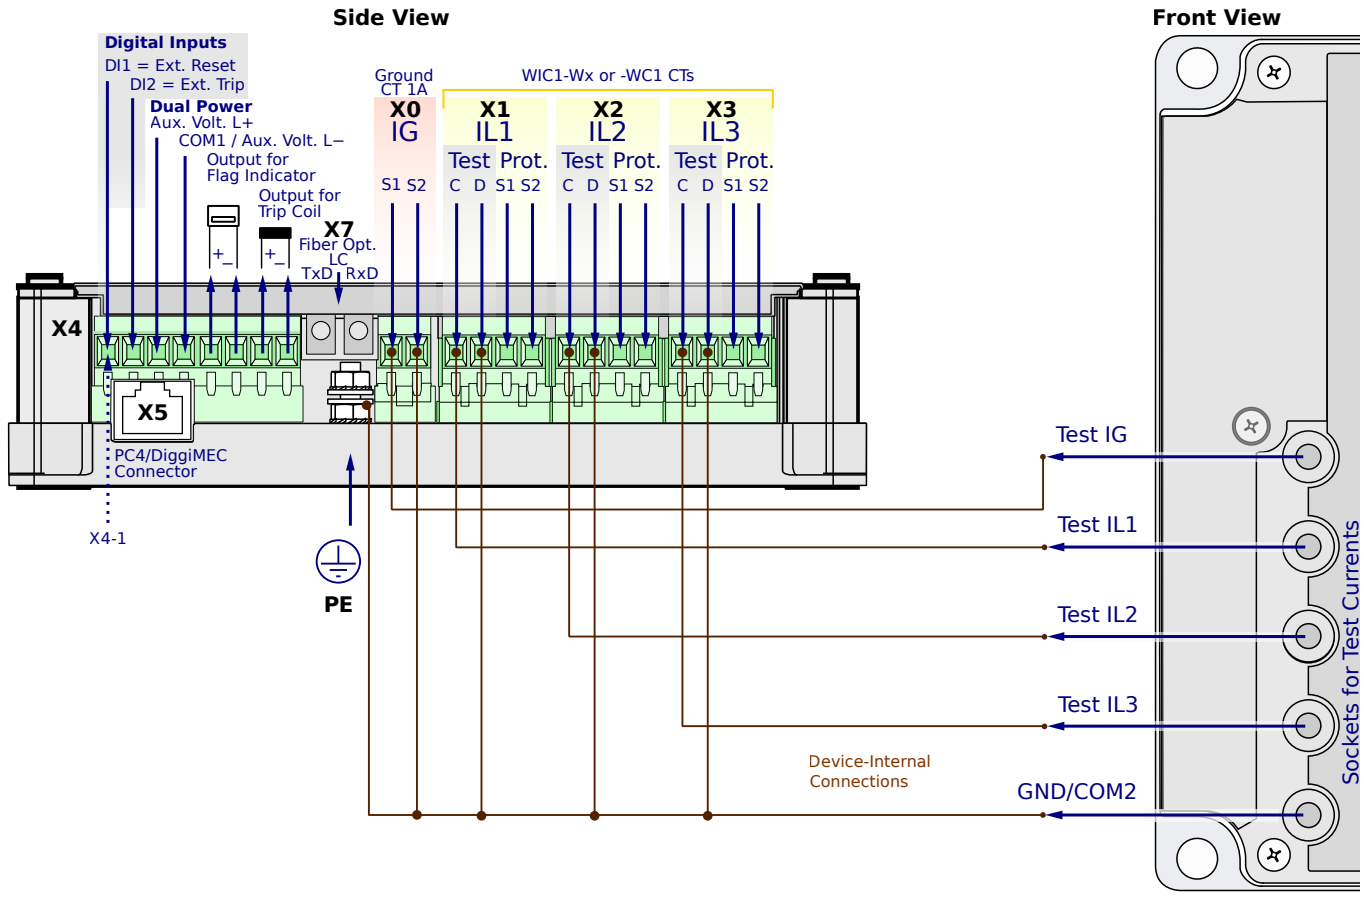


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG1PLH

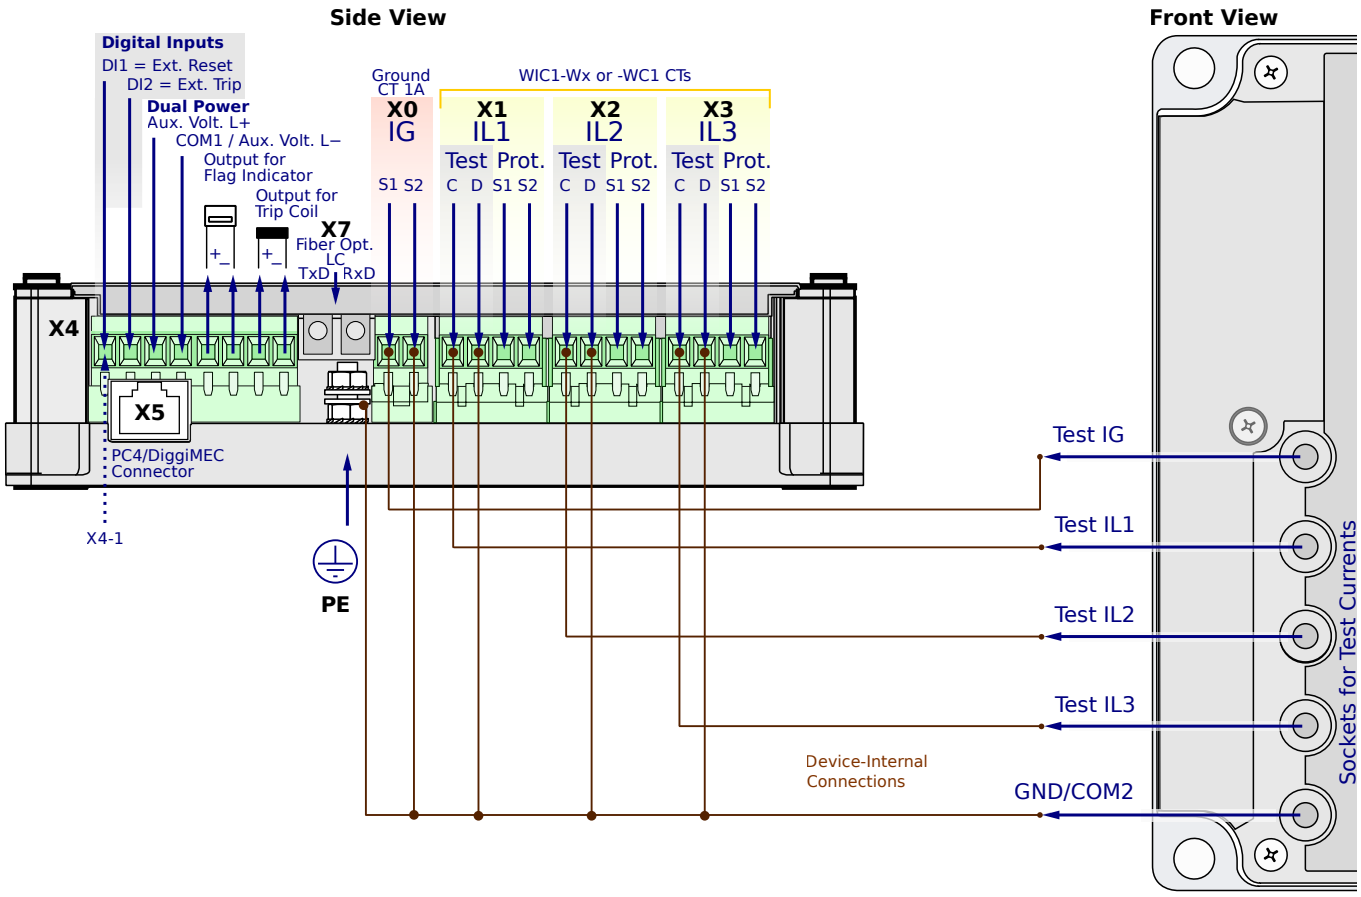


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2SA0

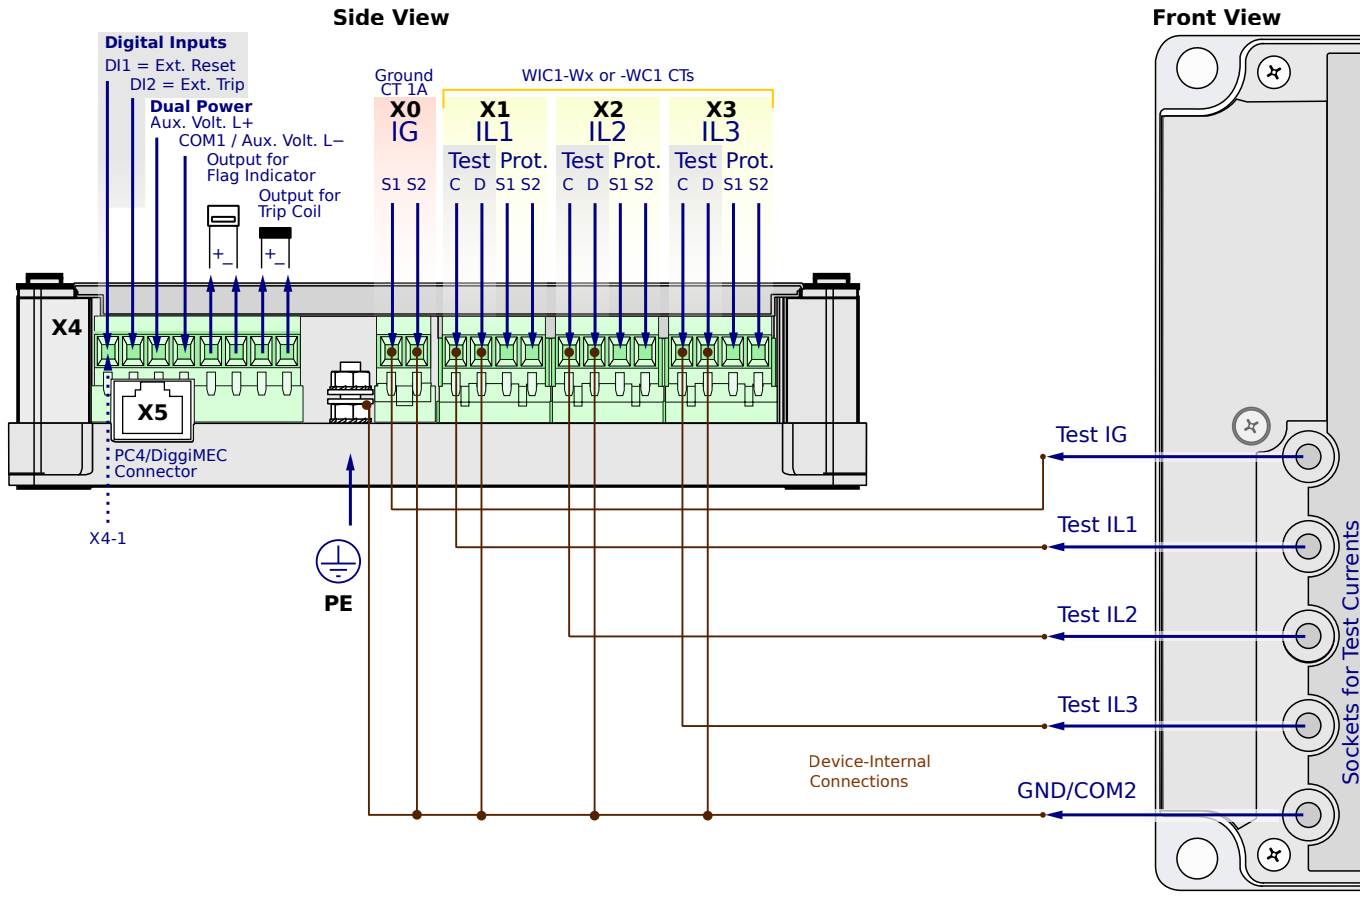


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2SAH

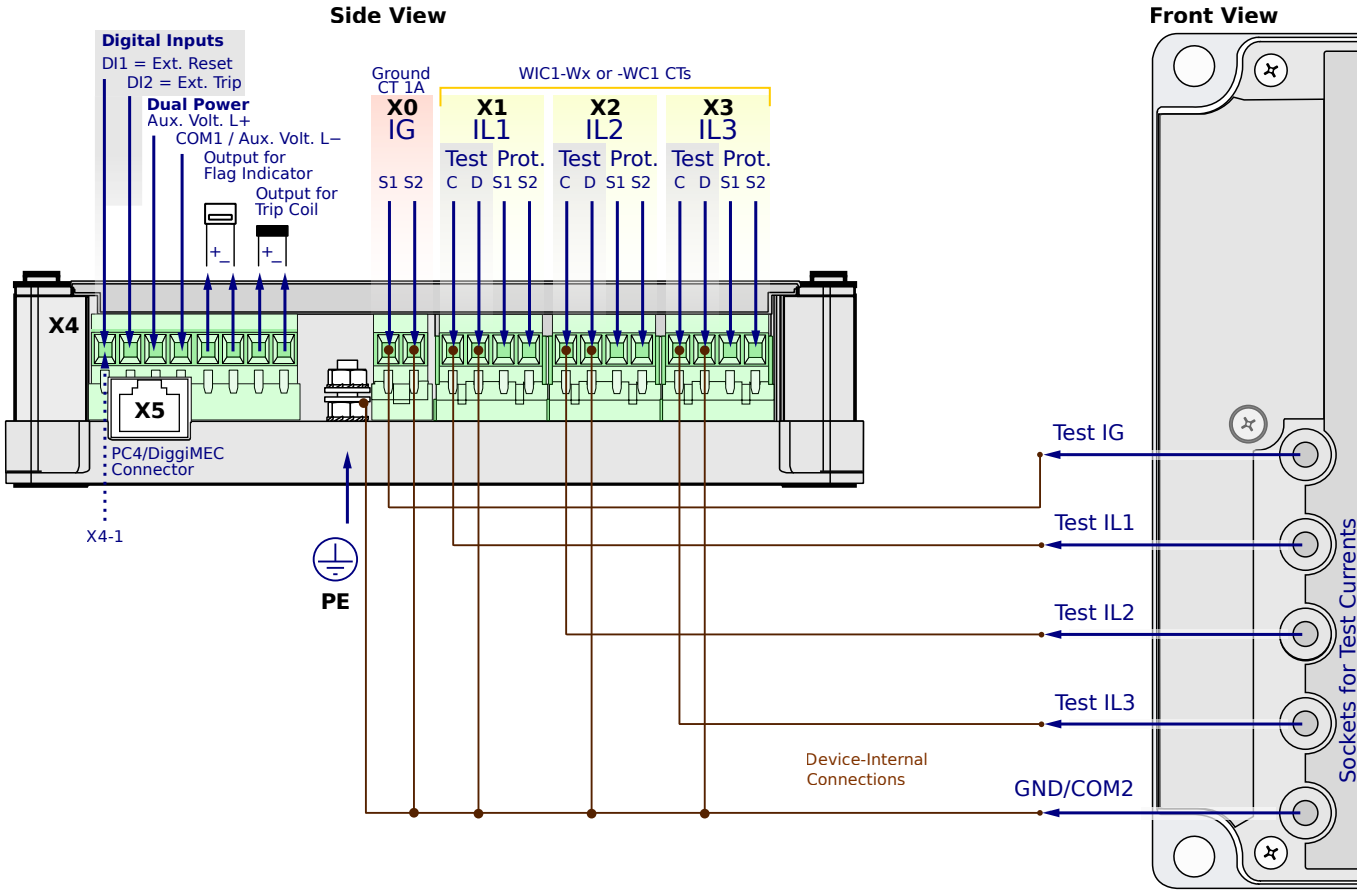


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2SB0

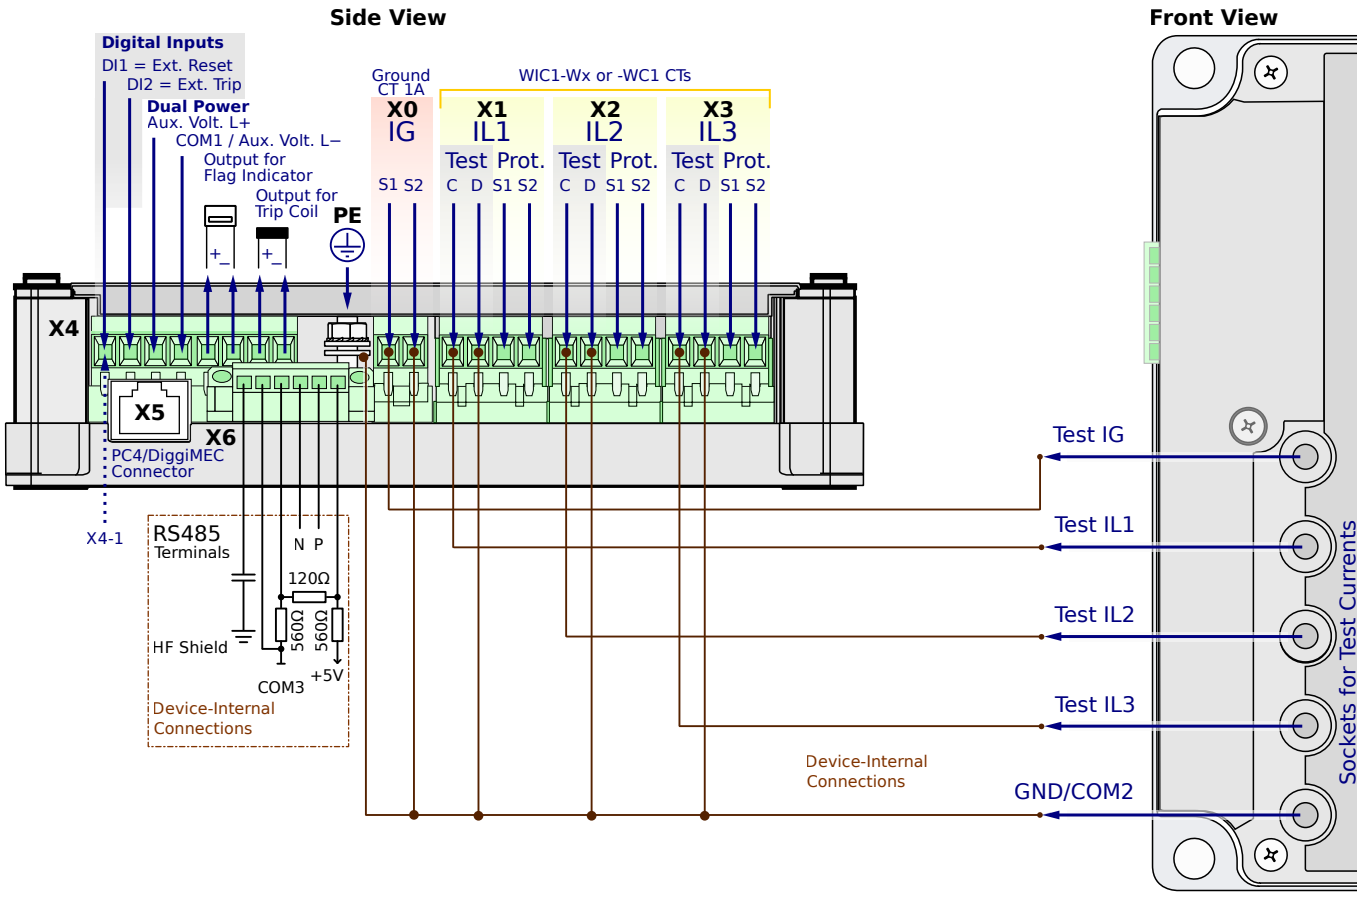


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2SBH

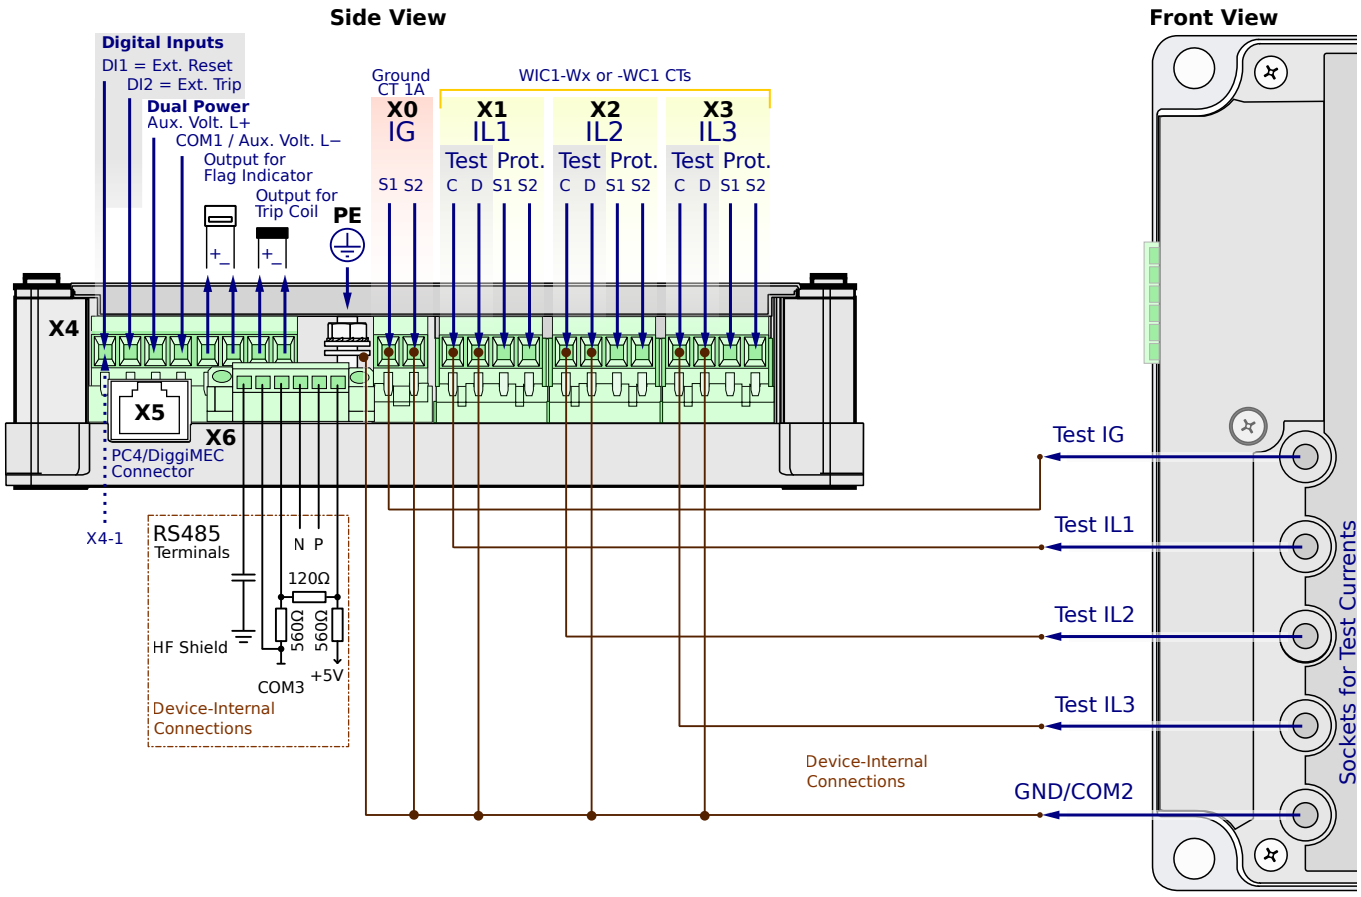


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2SC0

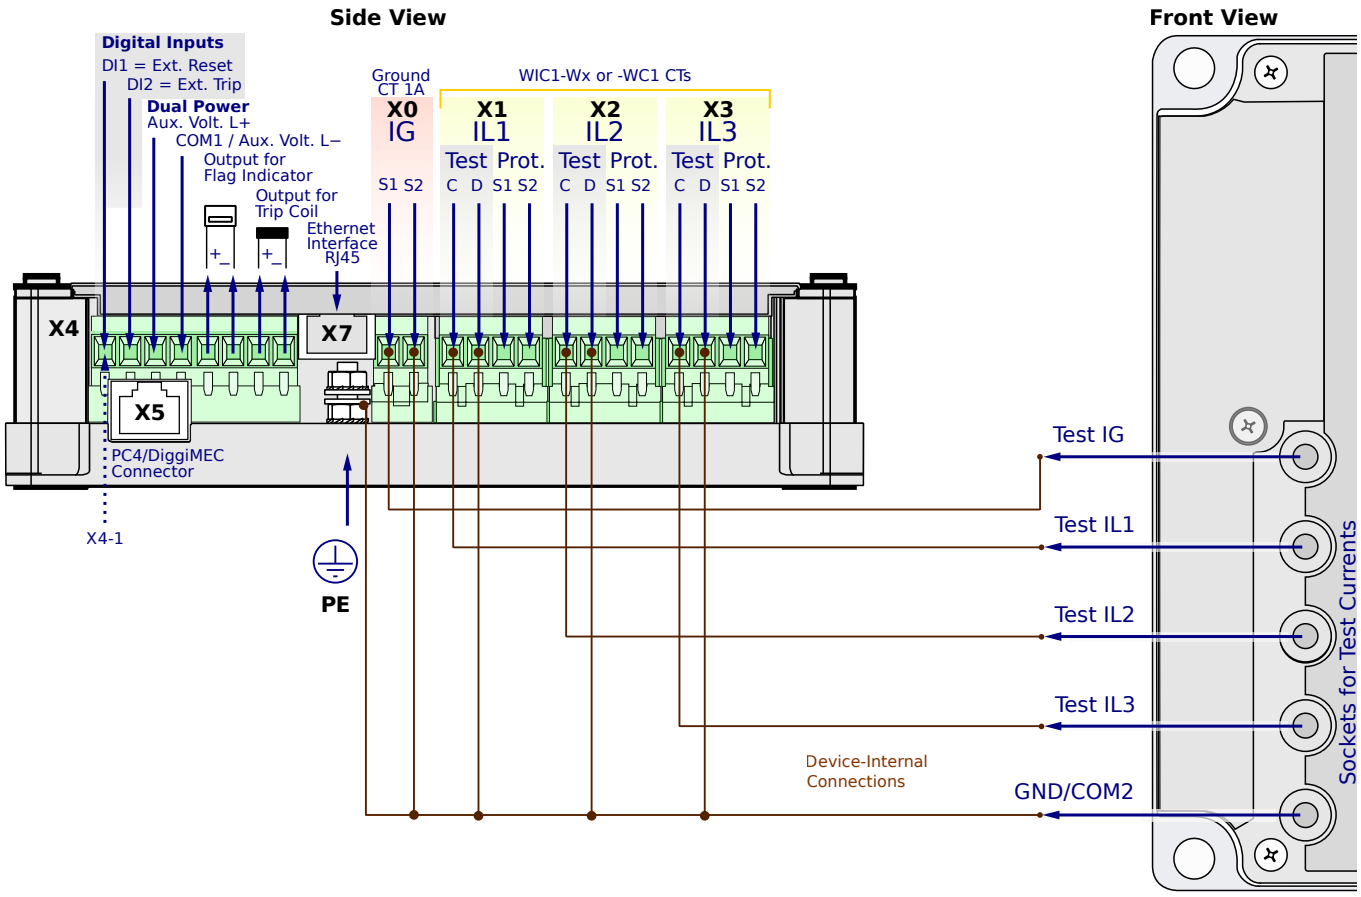


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2SCH

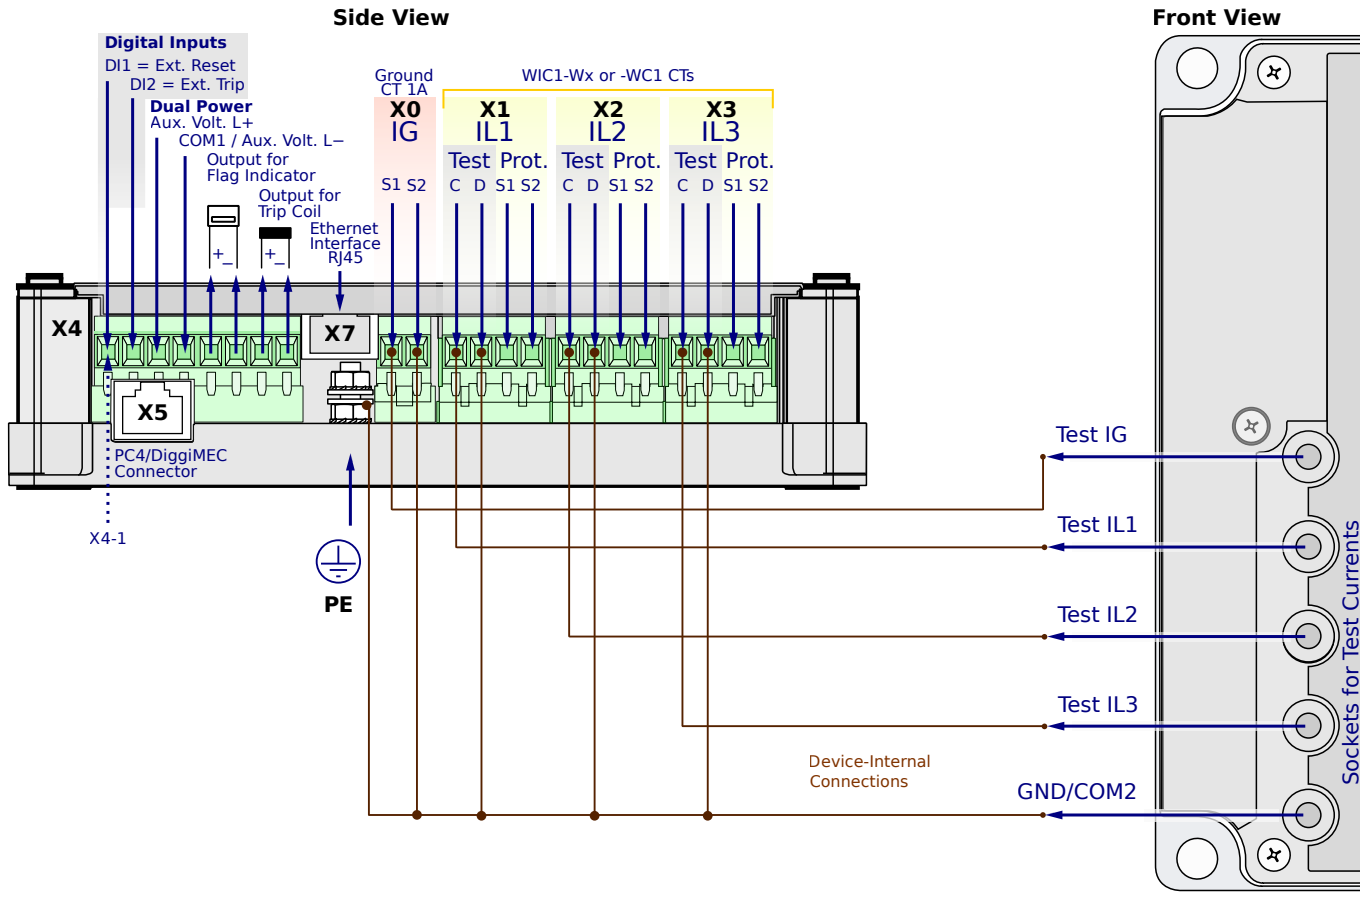


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2SL0

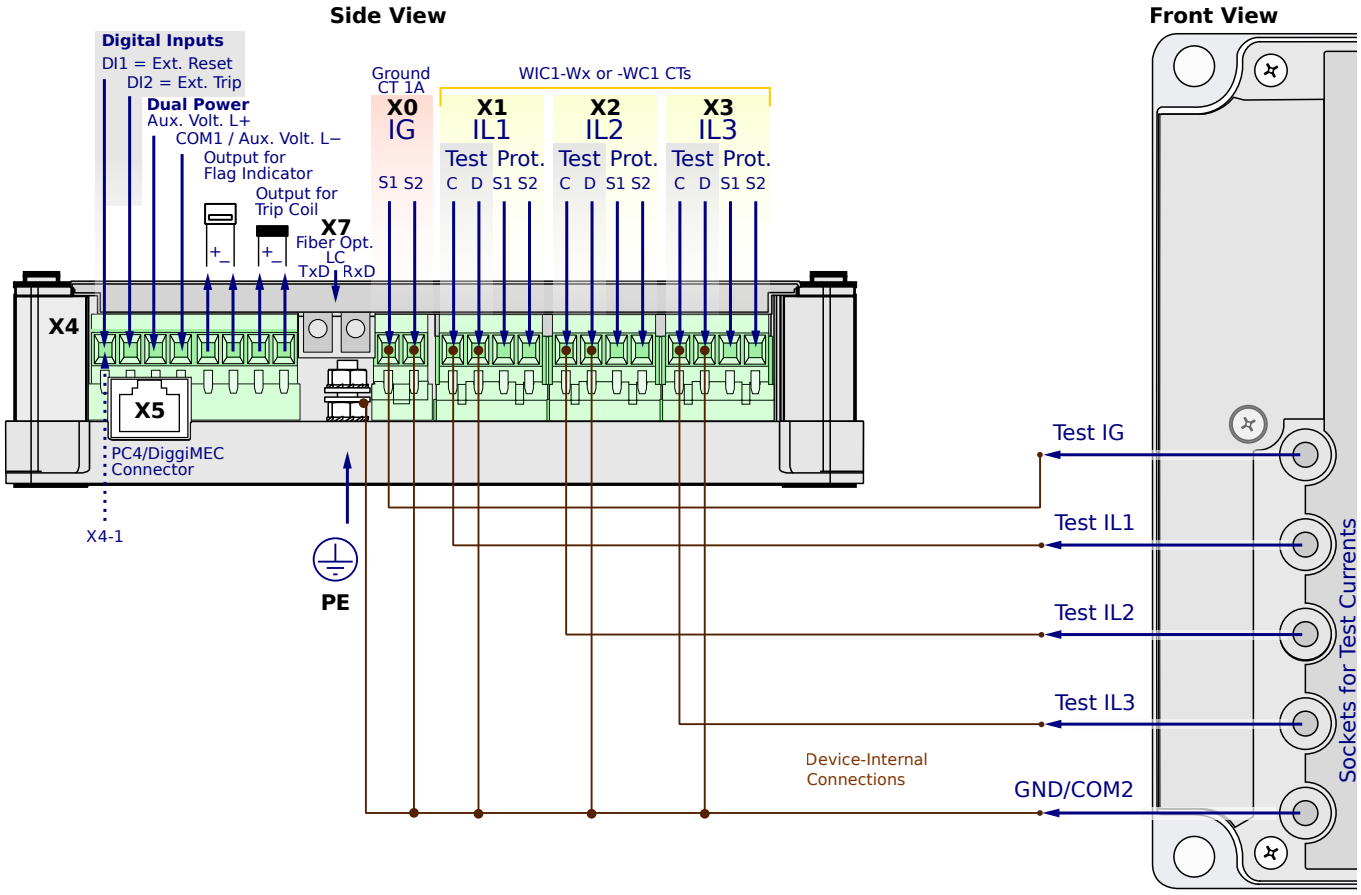


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2SLH

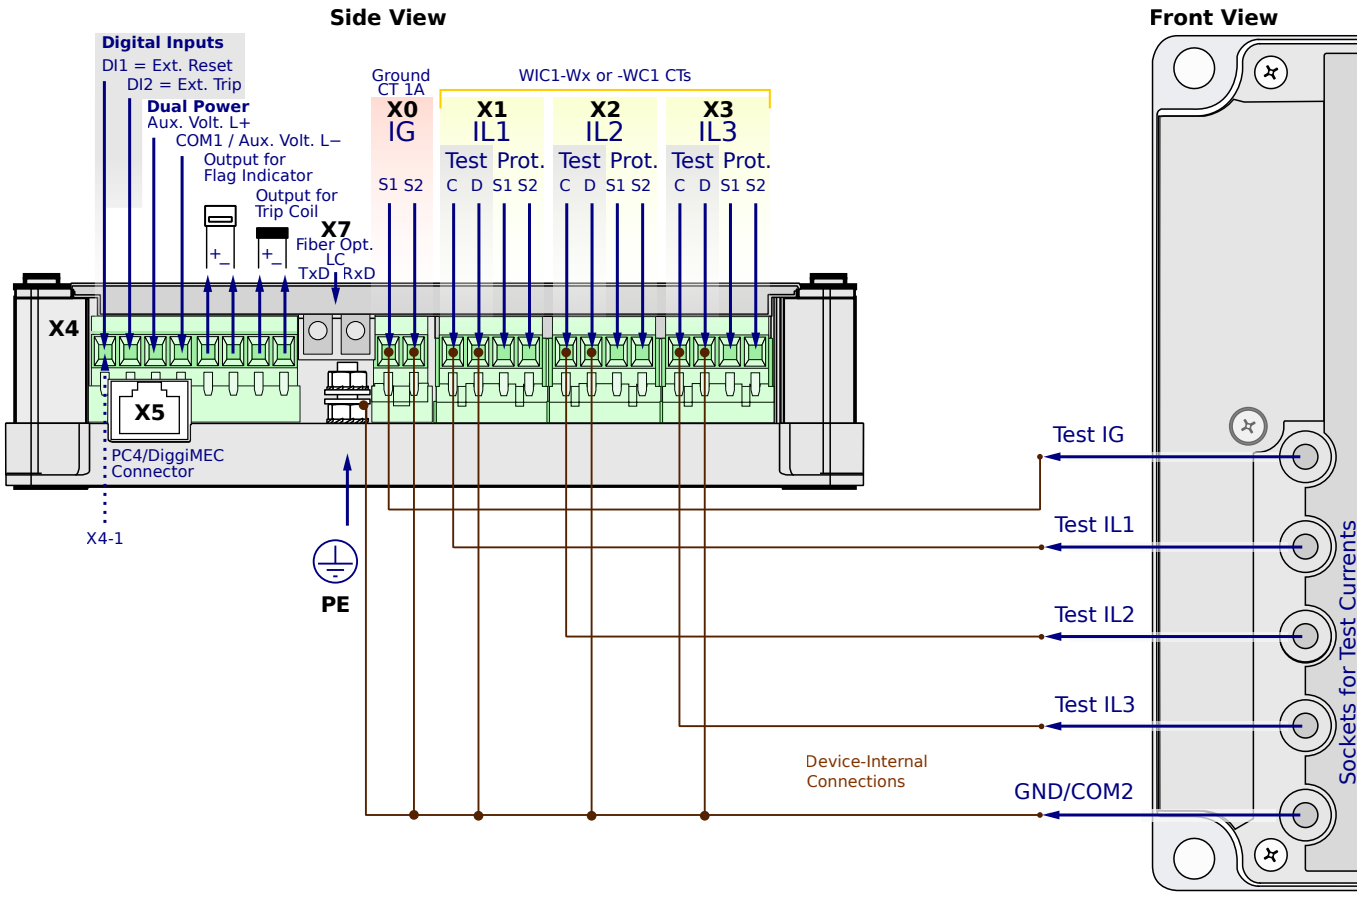


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2AA0

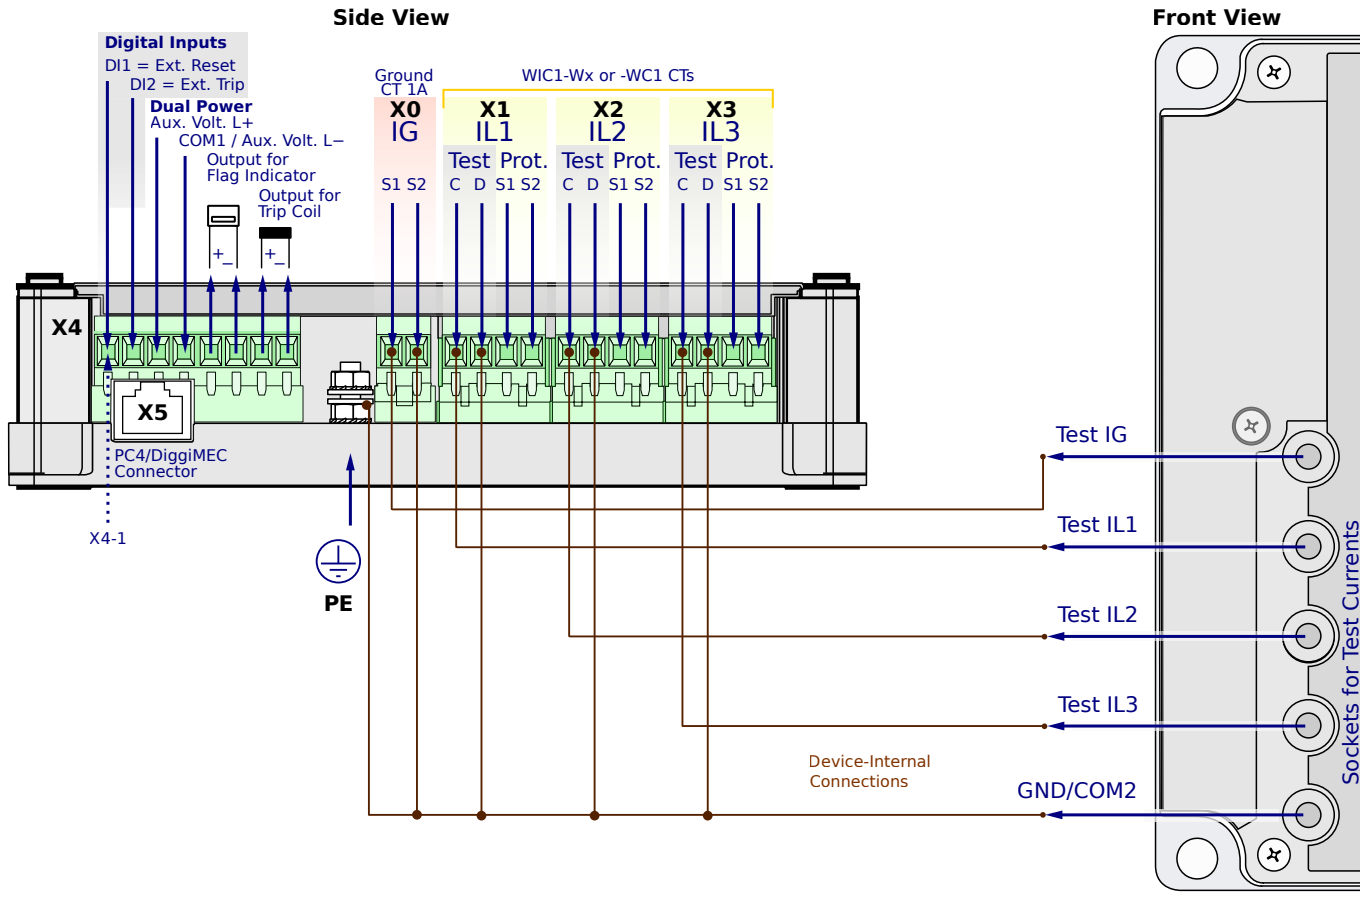


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2AAH

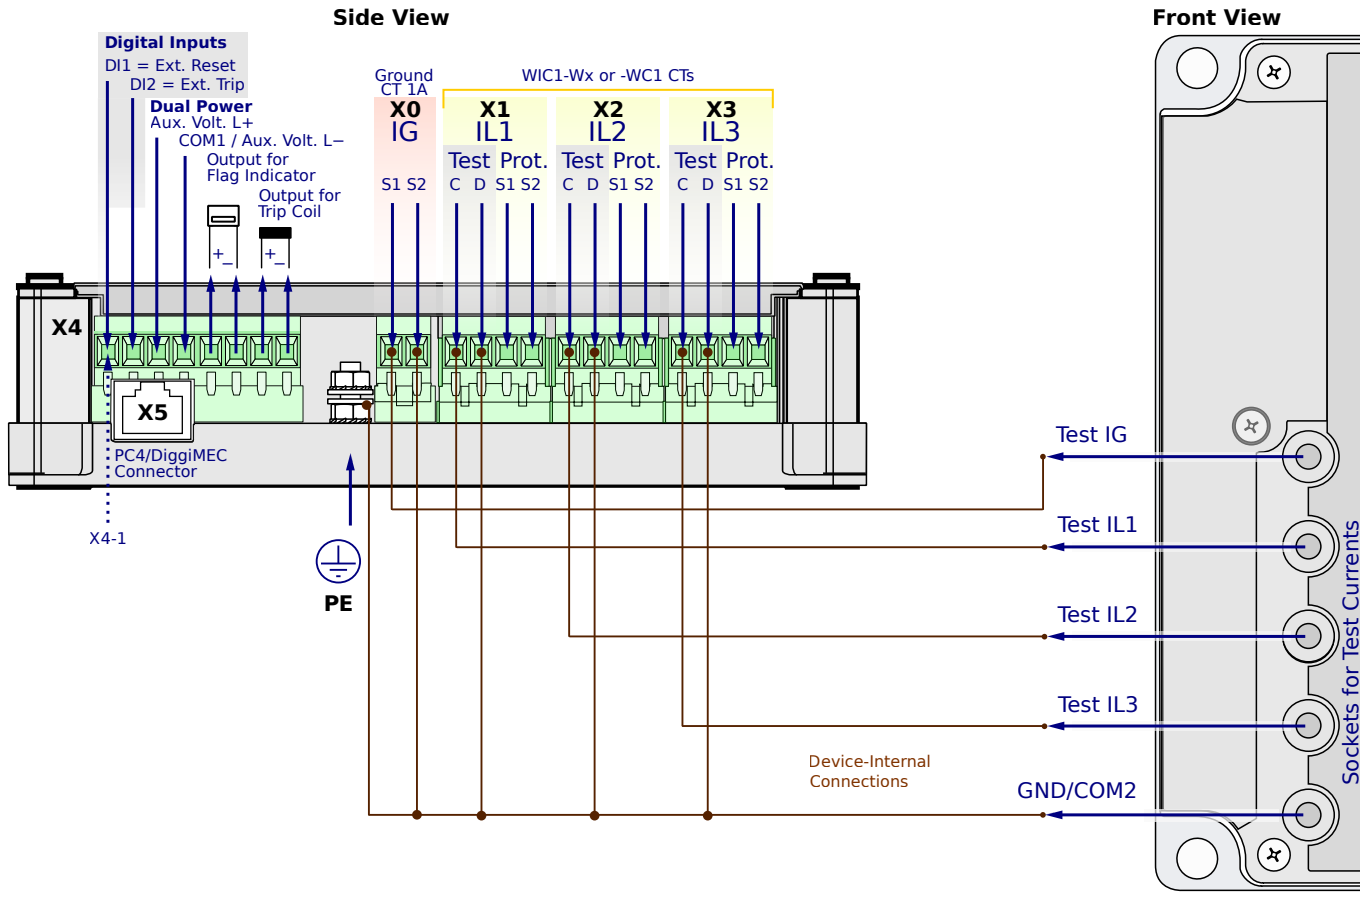


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2AB0

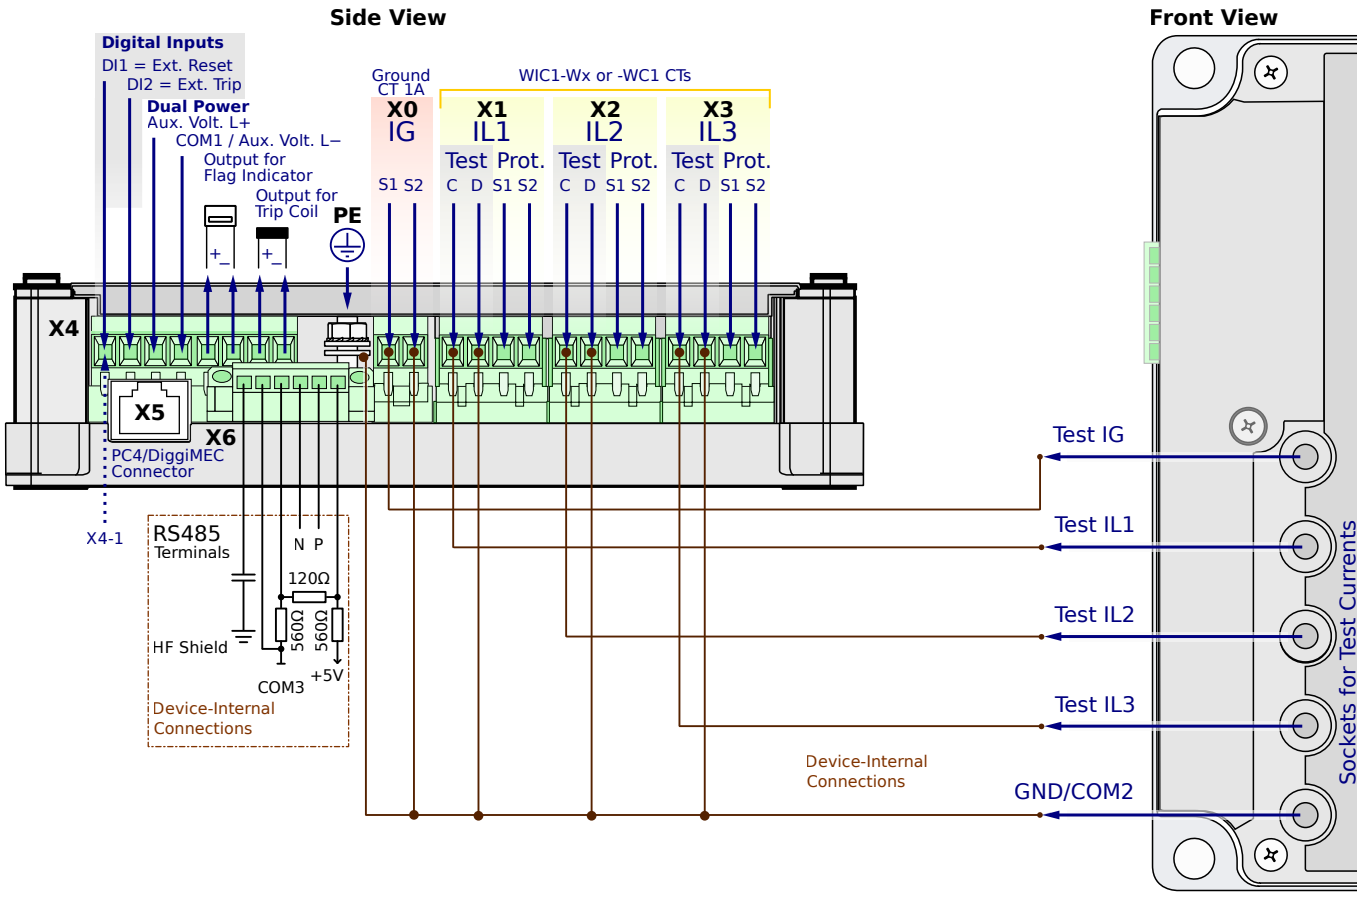


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2ABH

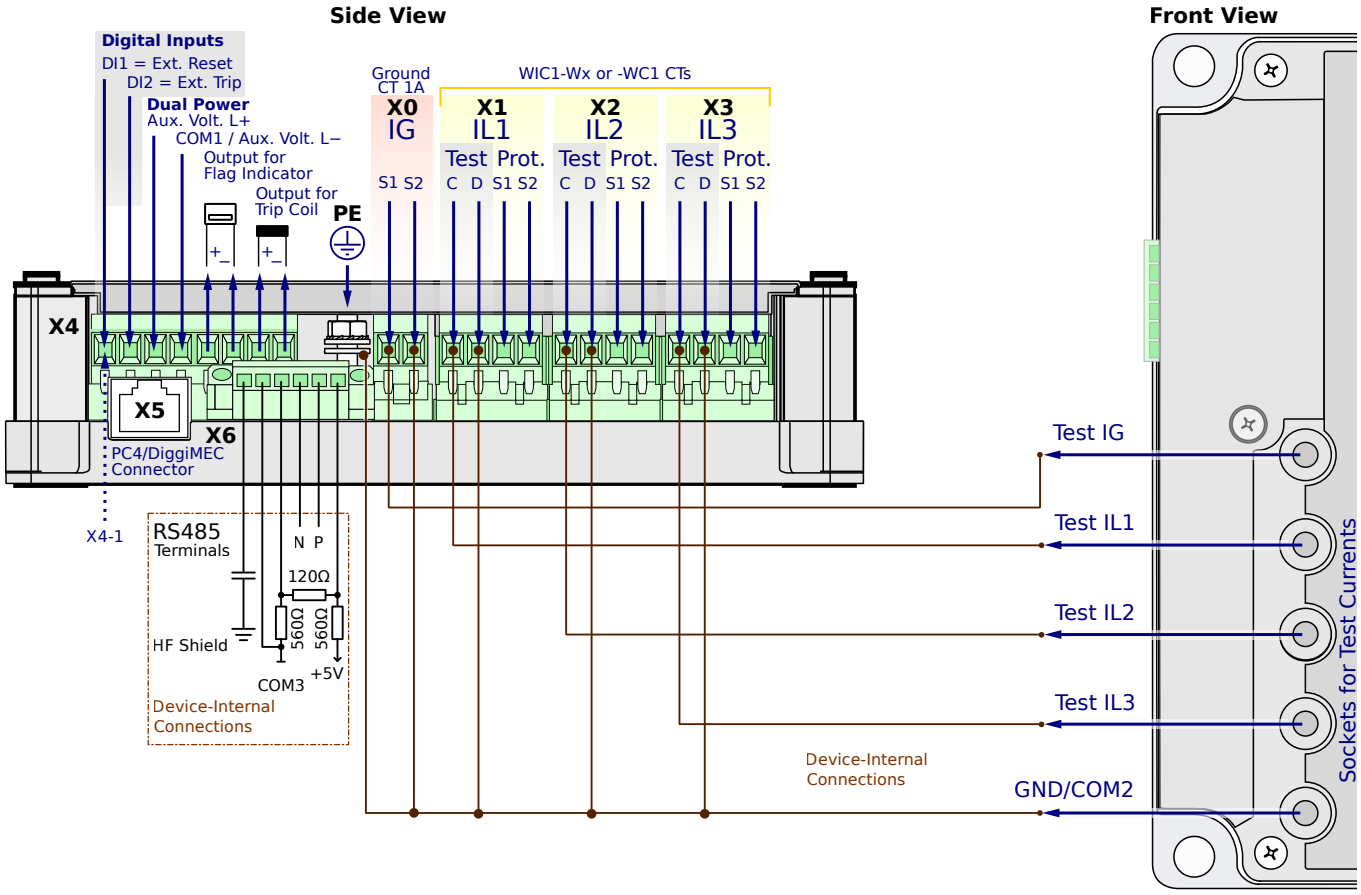


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2AC0

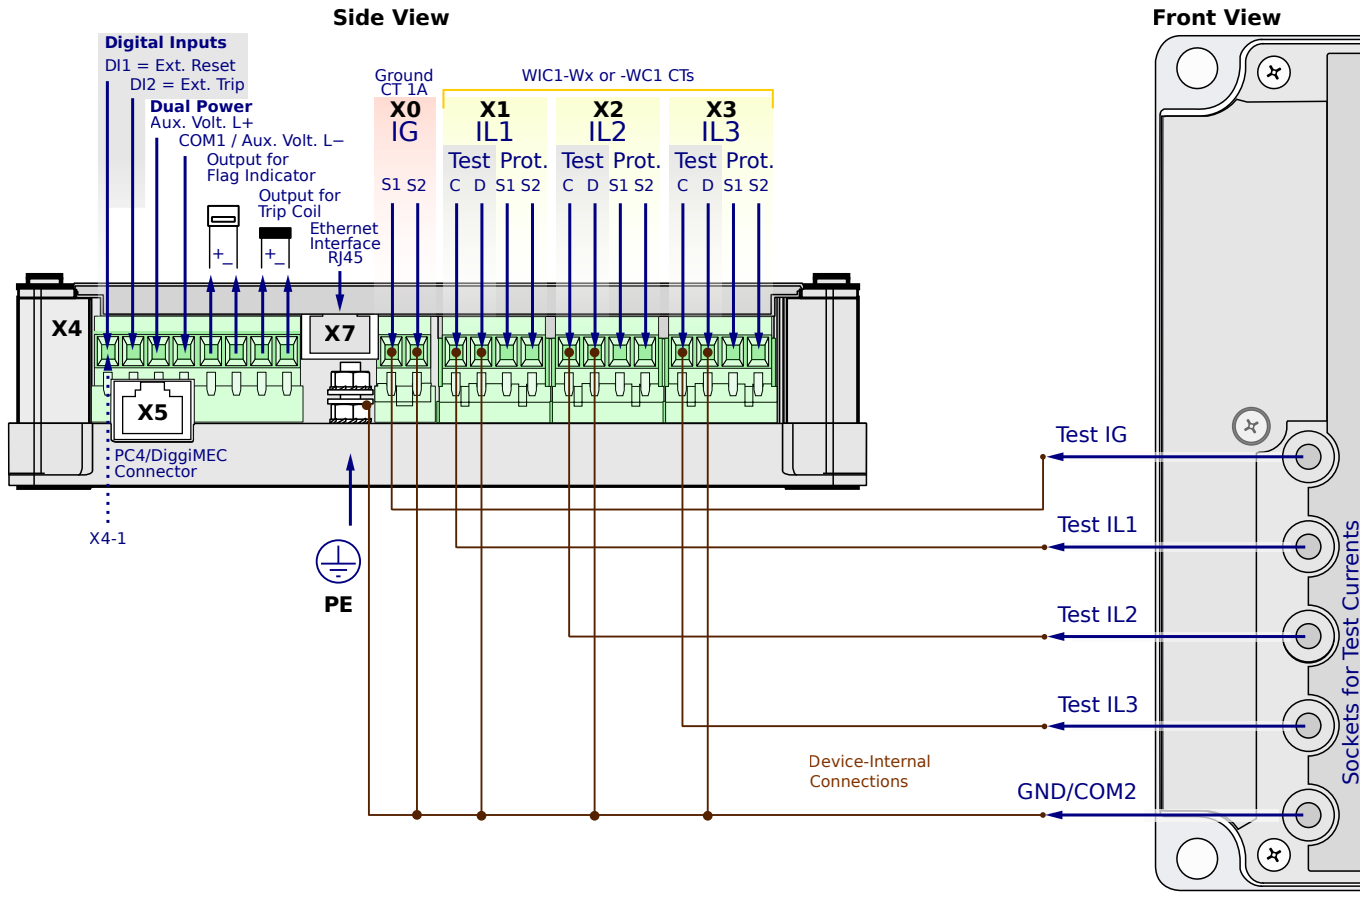


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2ACH

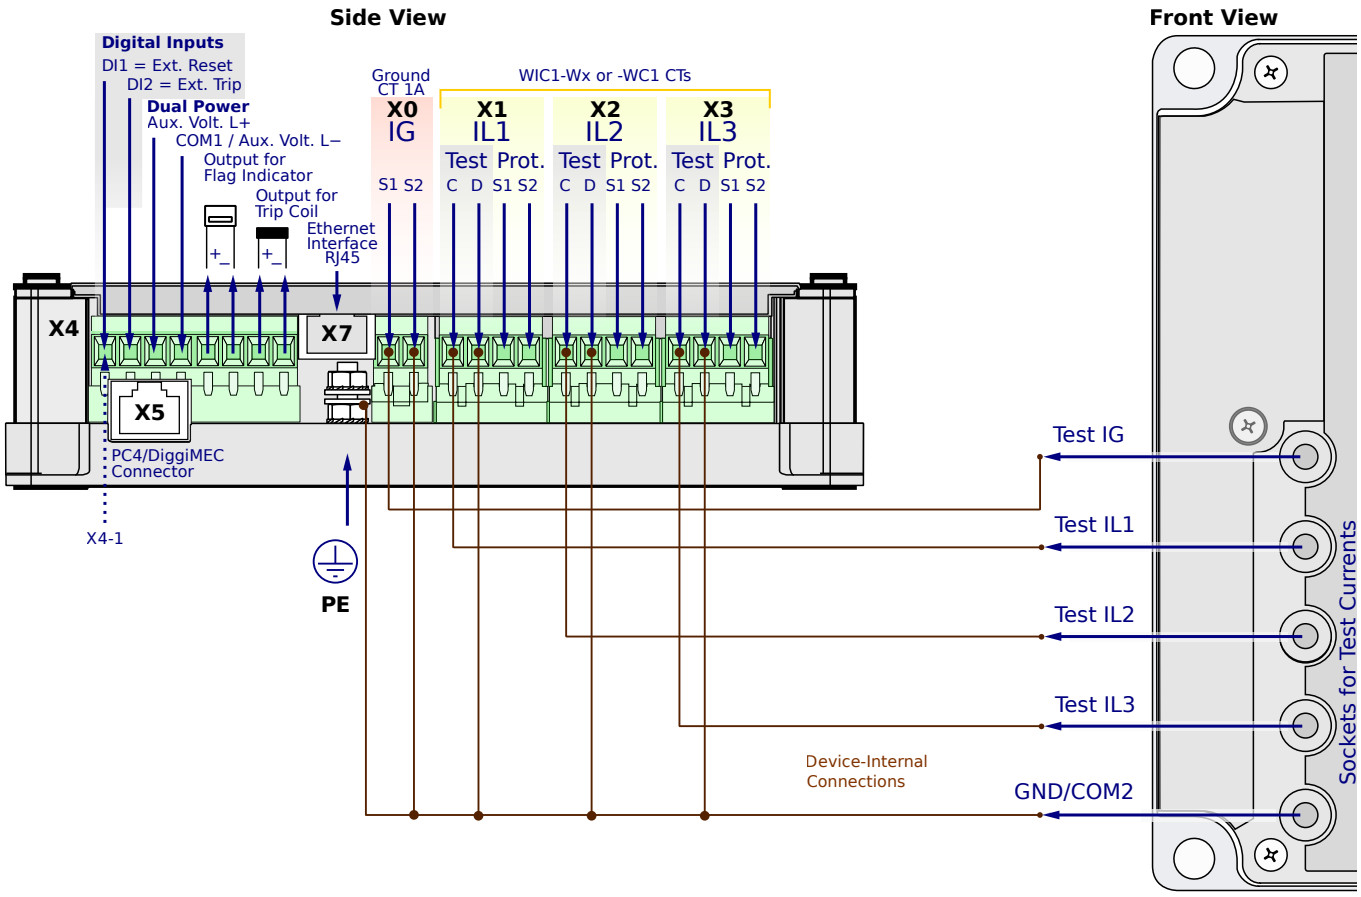


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2AL0

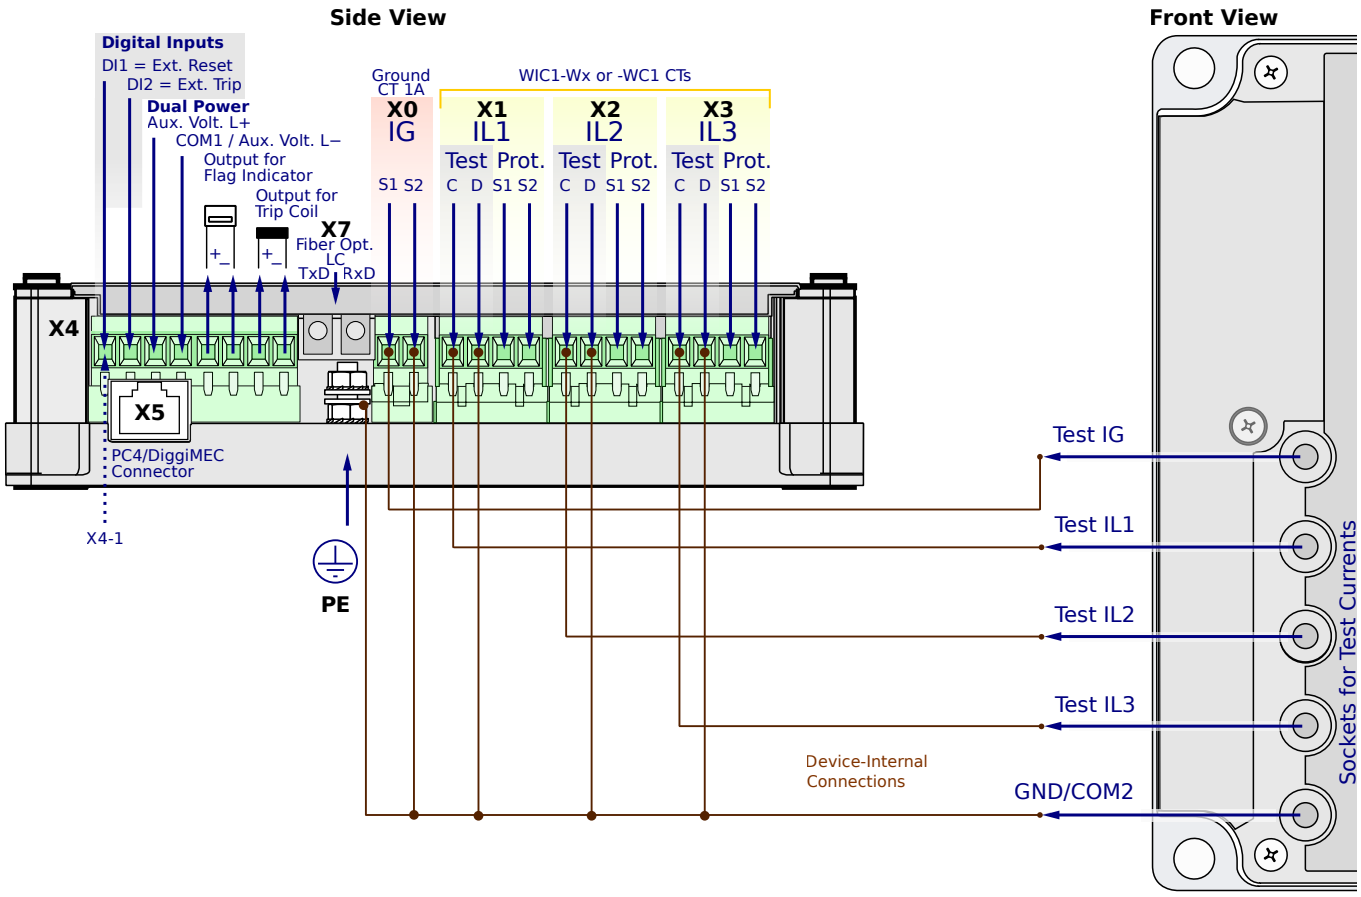


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2ALH

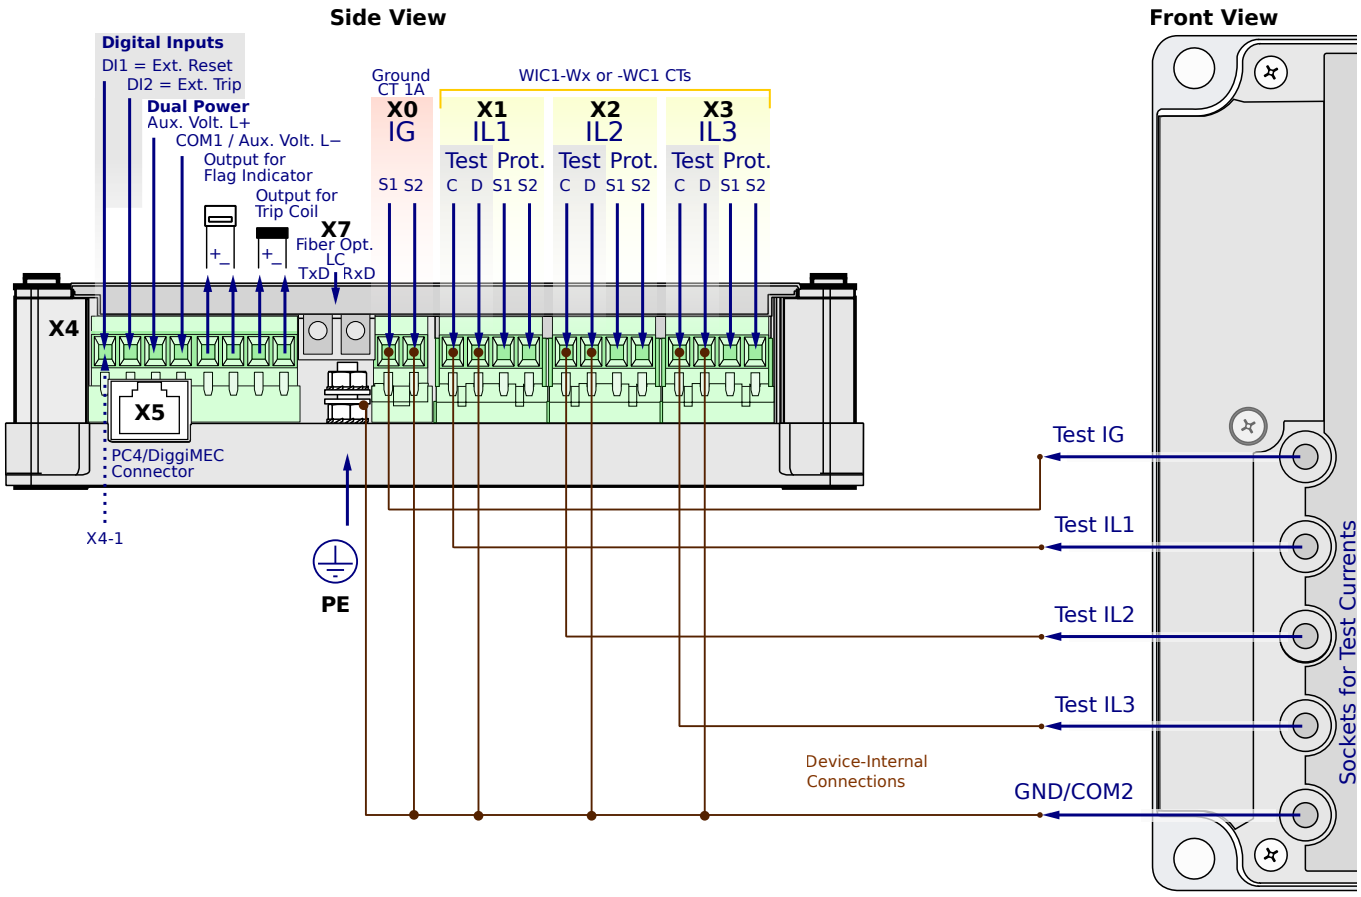


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2PA0

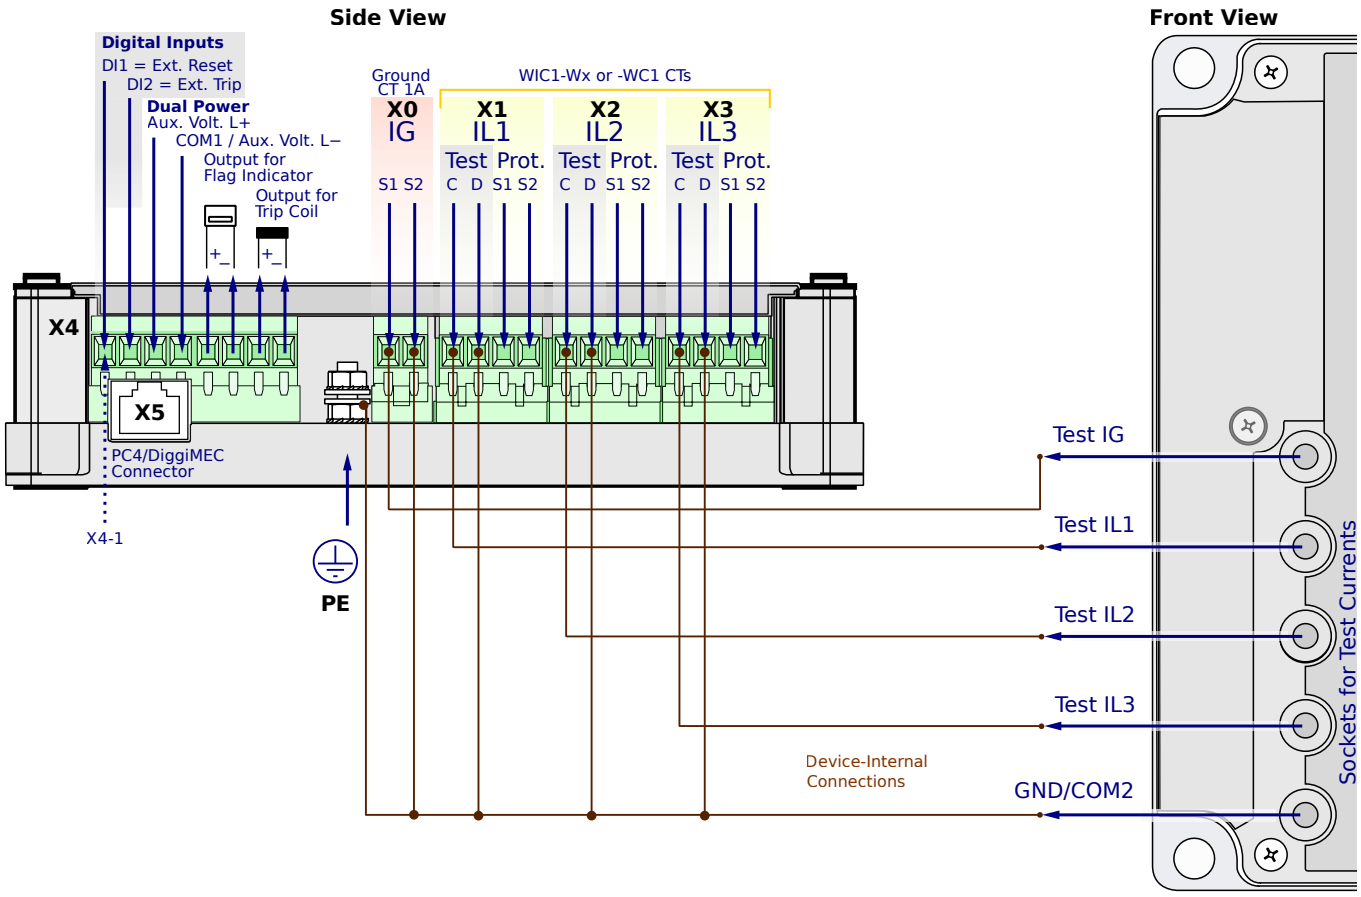


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2PAH

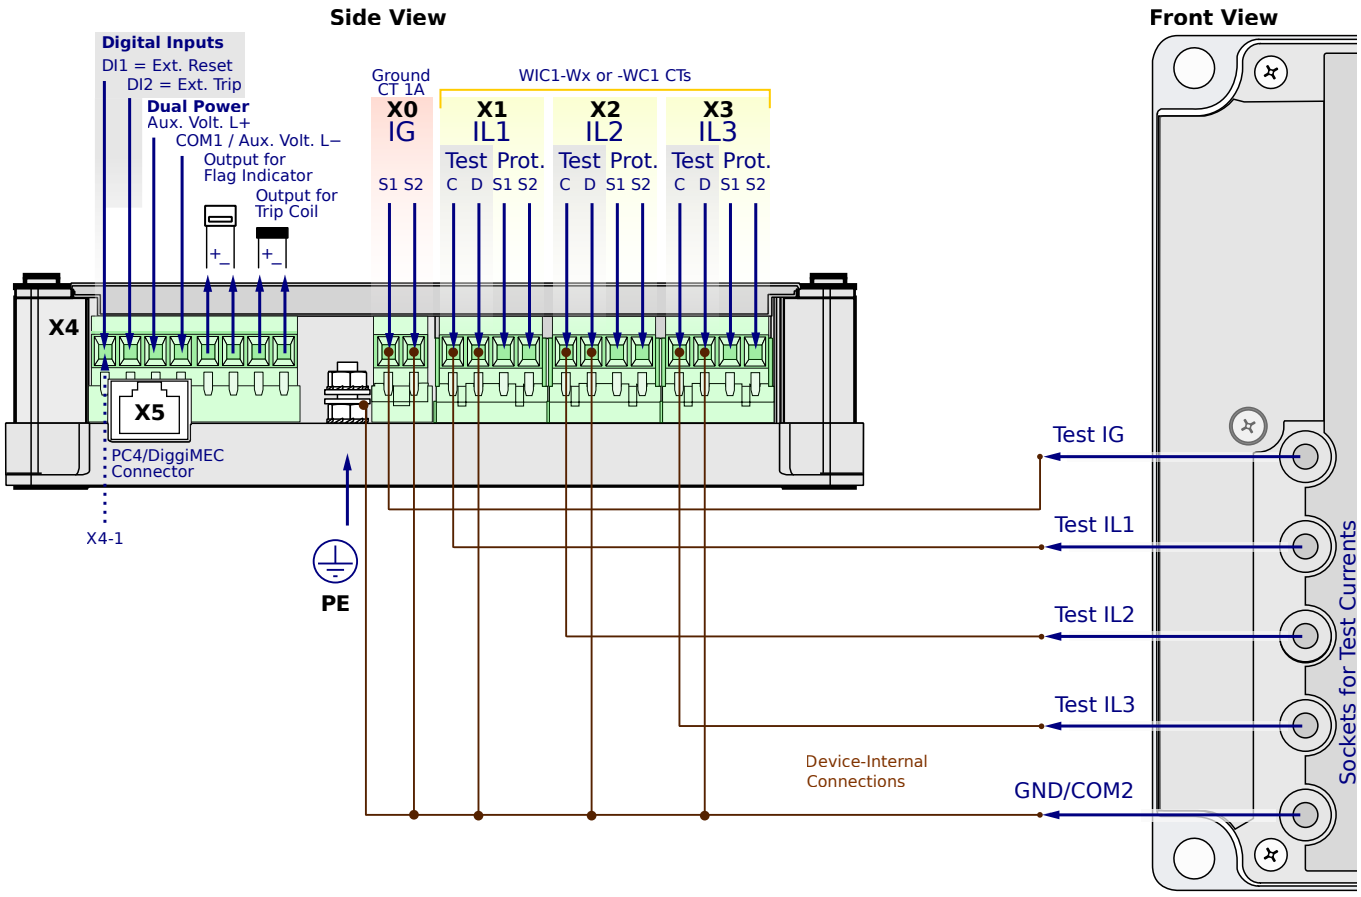


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FG2PB0

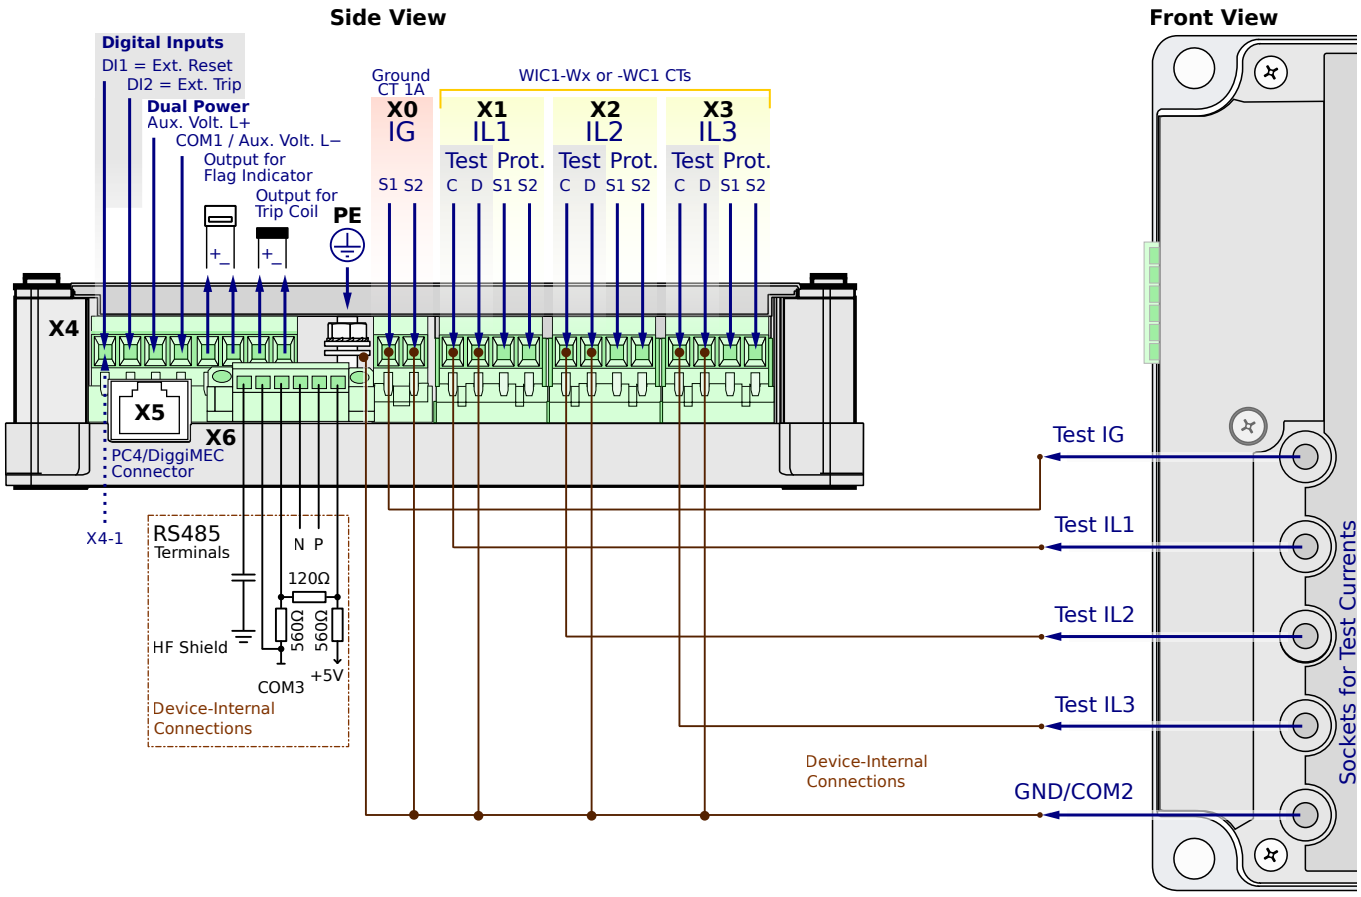


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2PBH

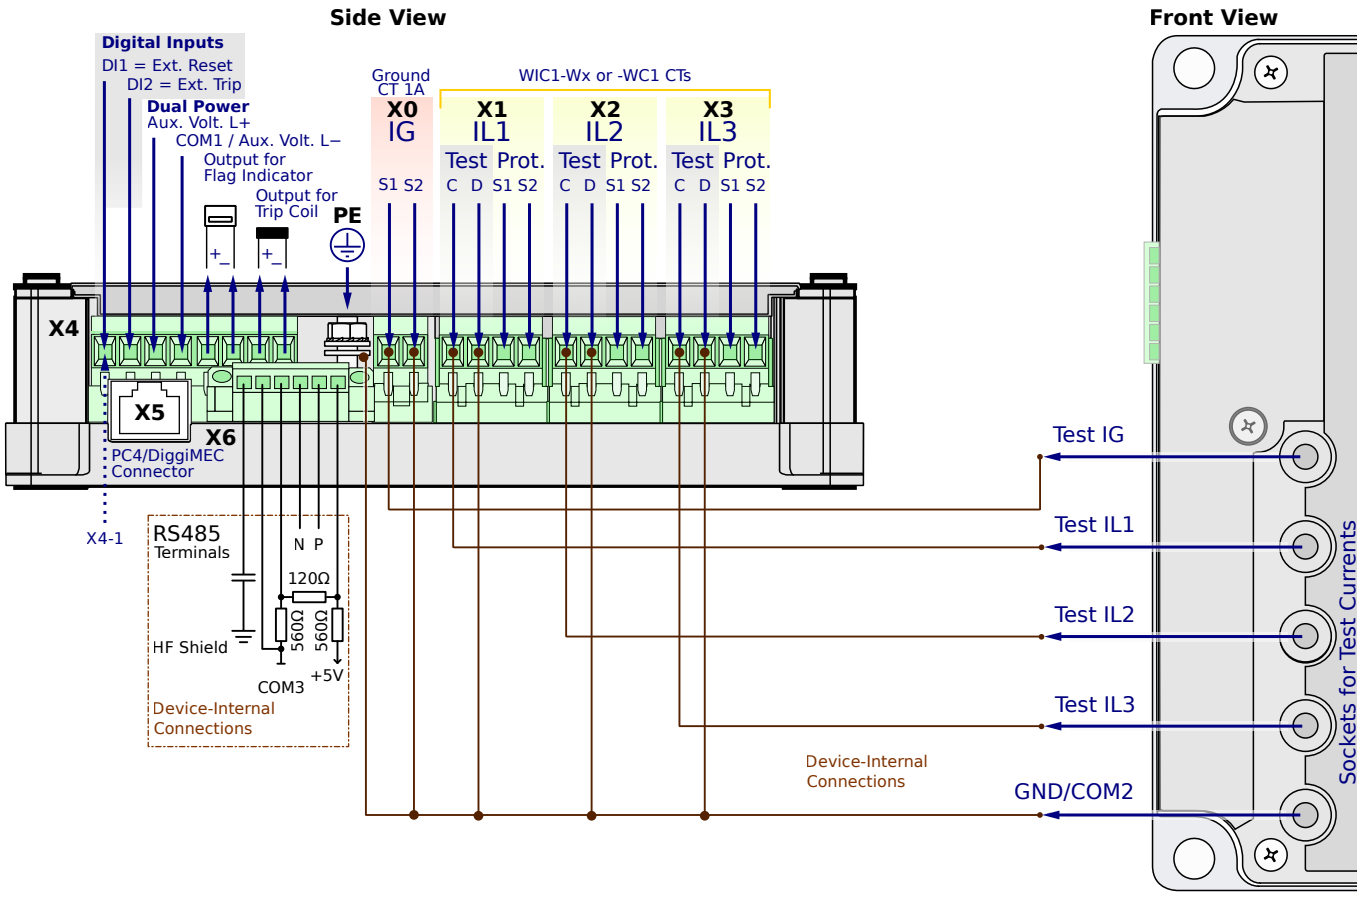


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FG2PC0

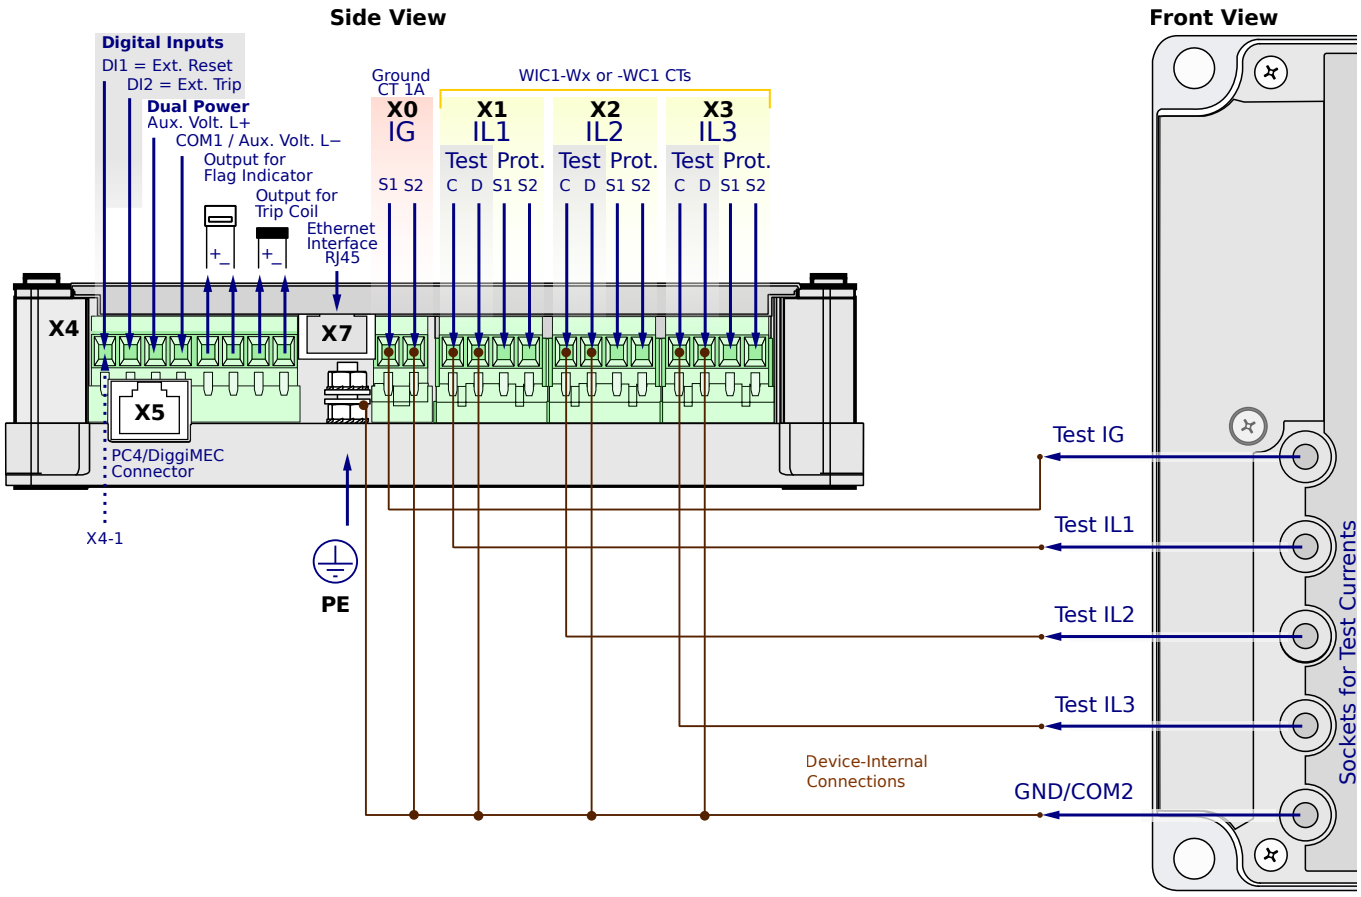


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2PCH

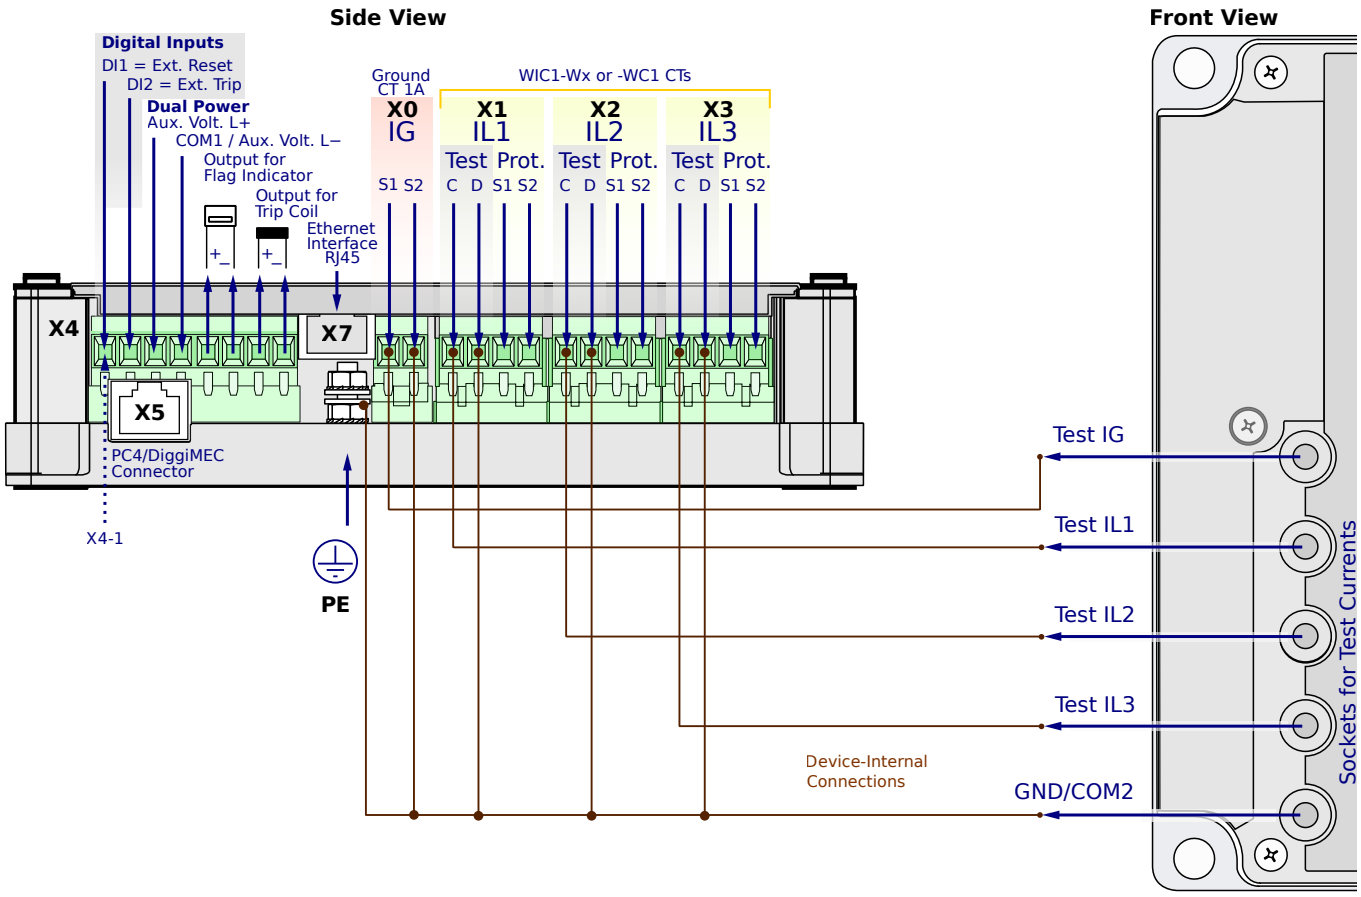


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FG2PL0

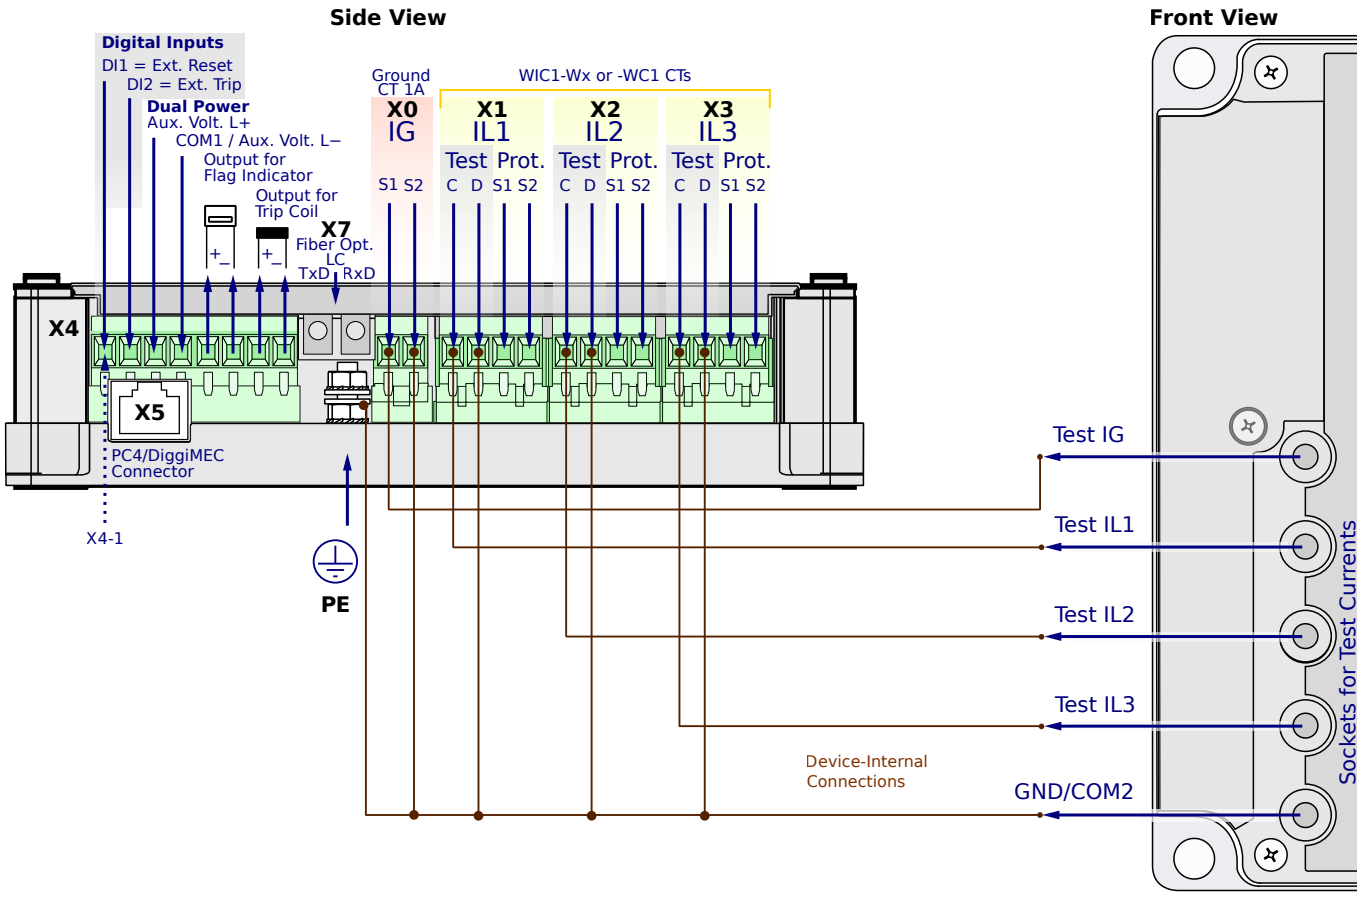


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FG2PLH

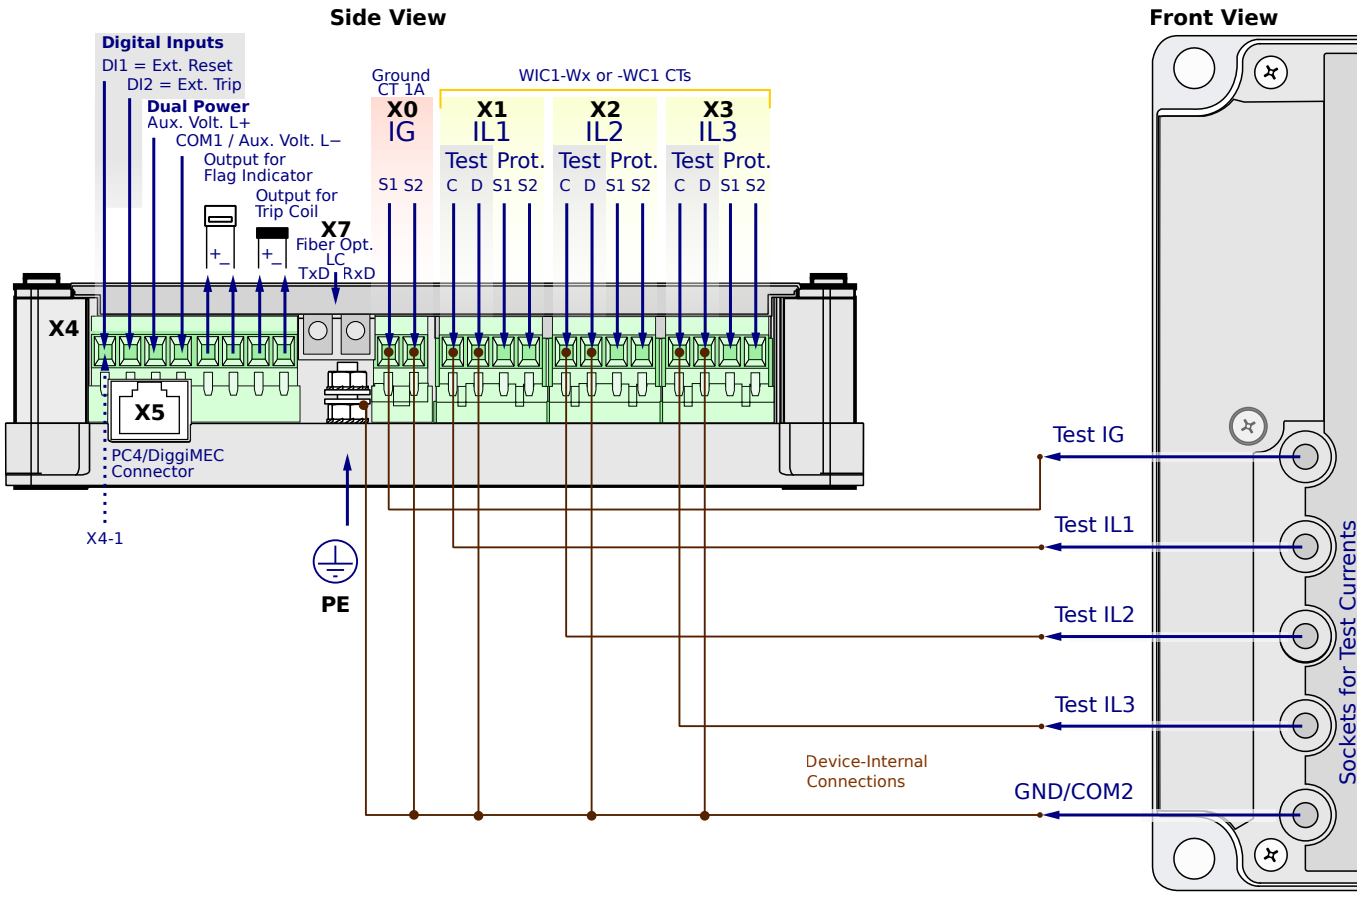


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1SA0

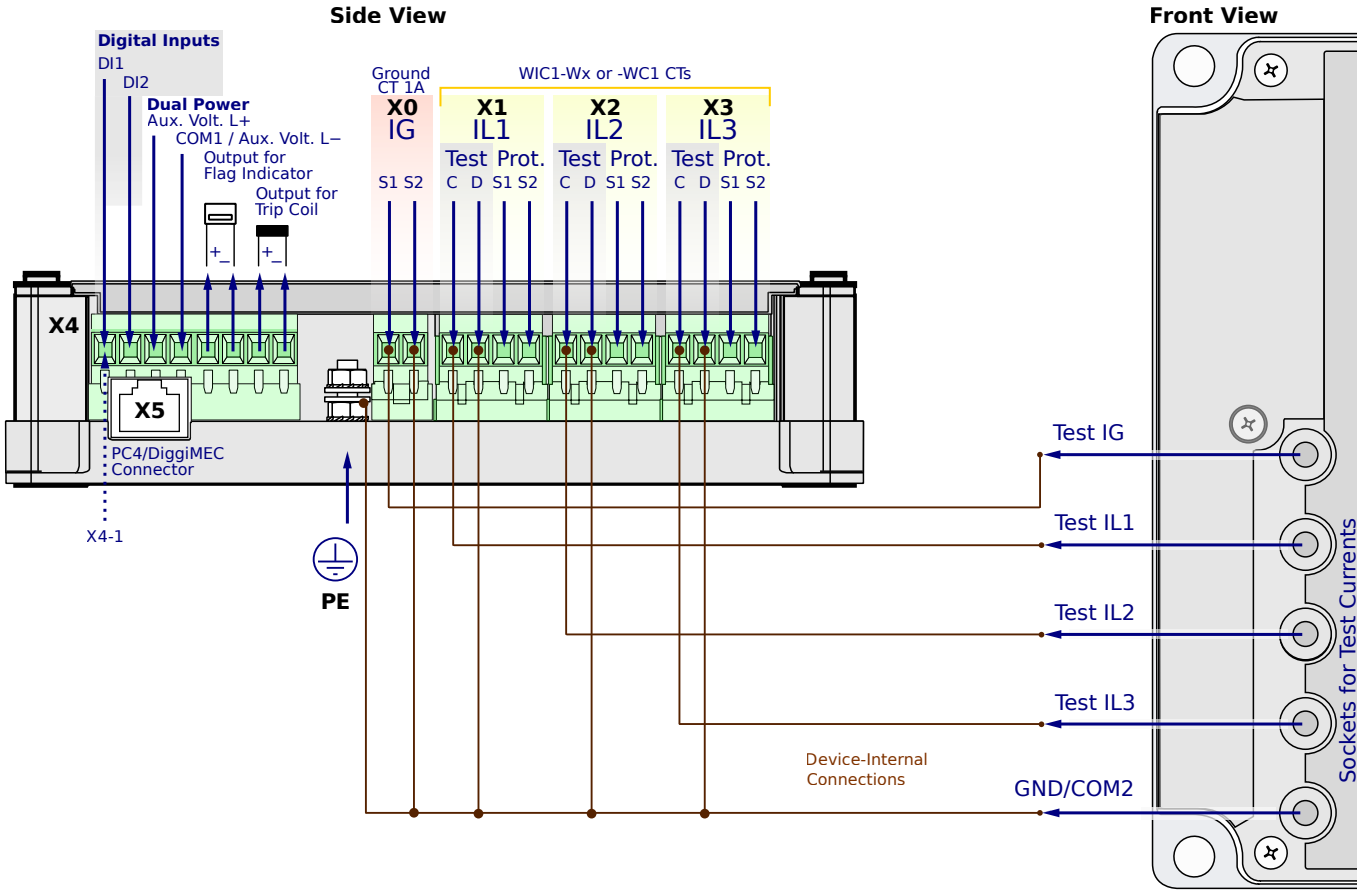


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1SAH

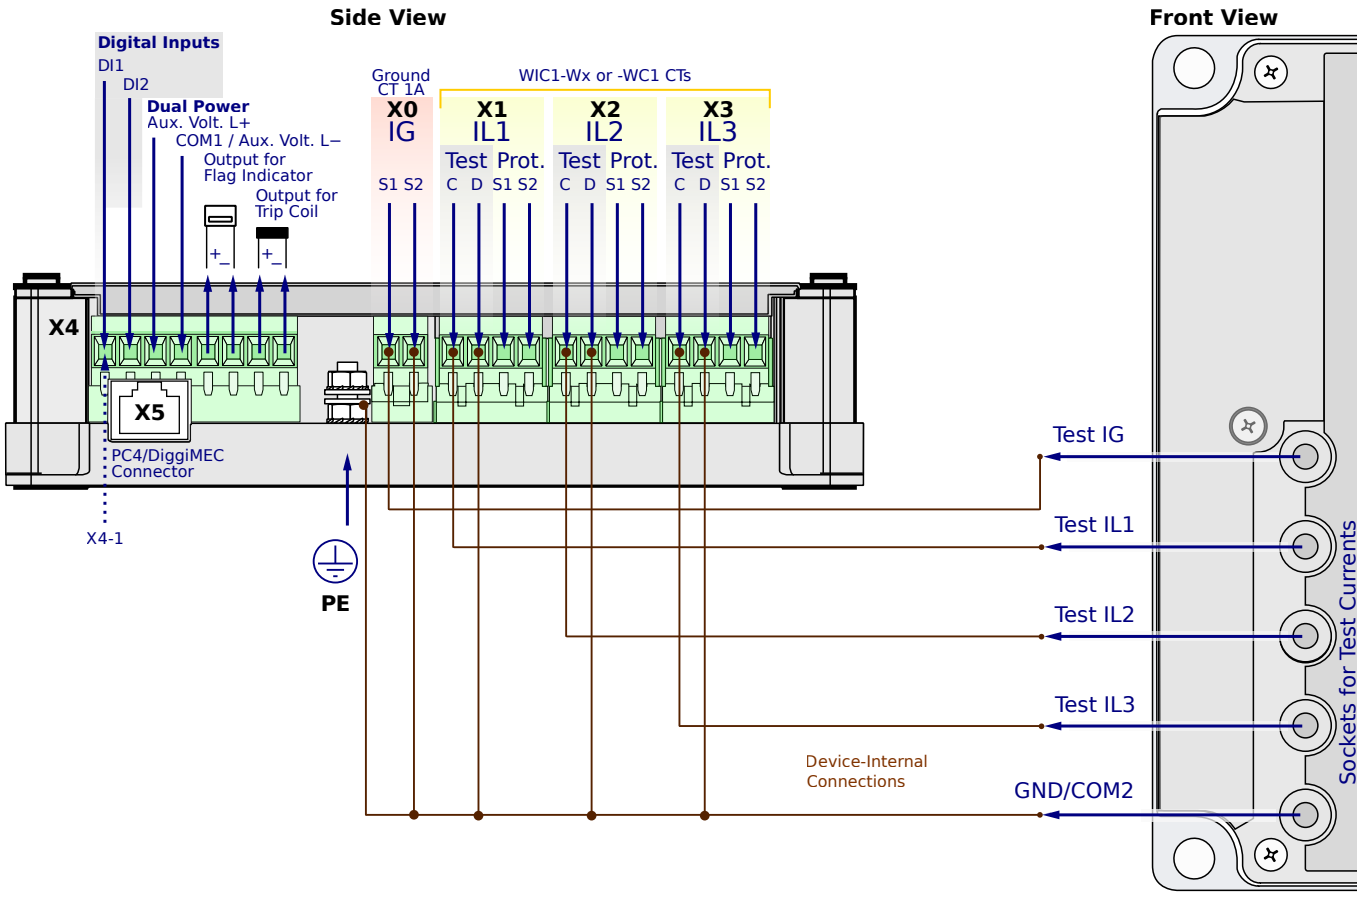


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1SB0

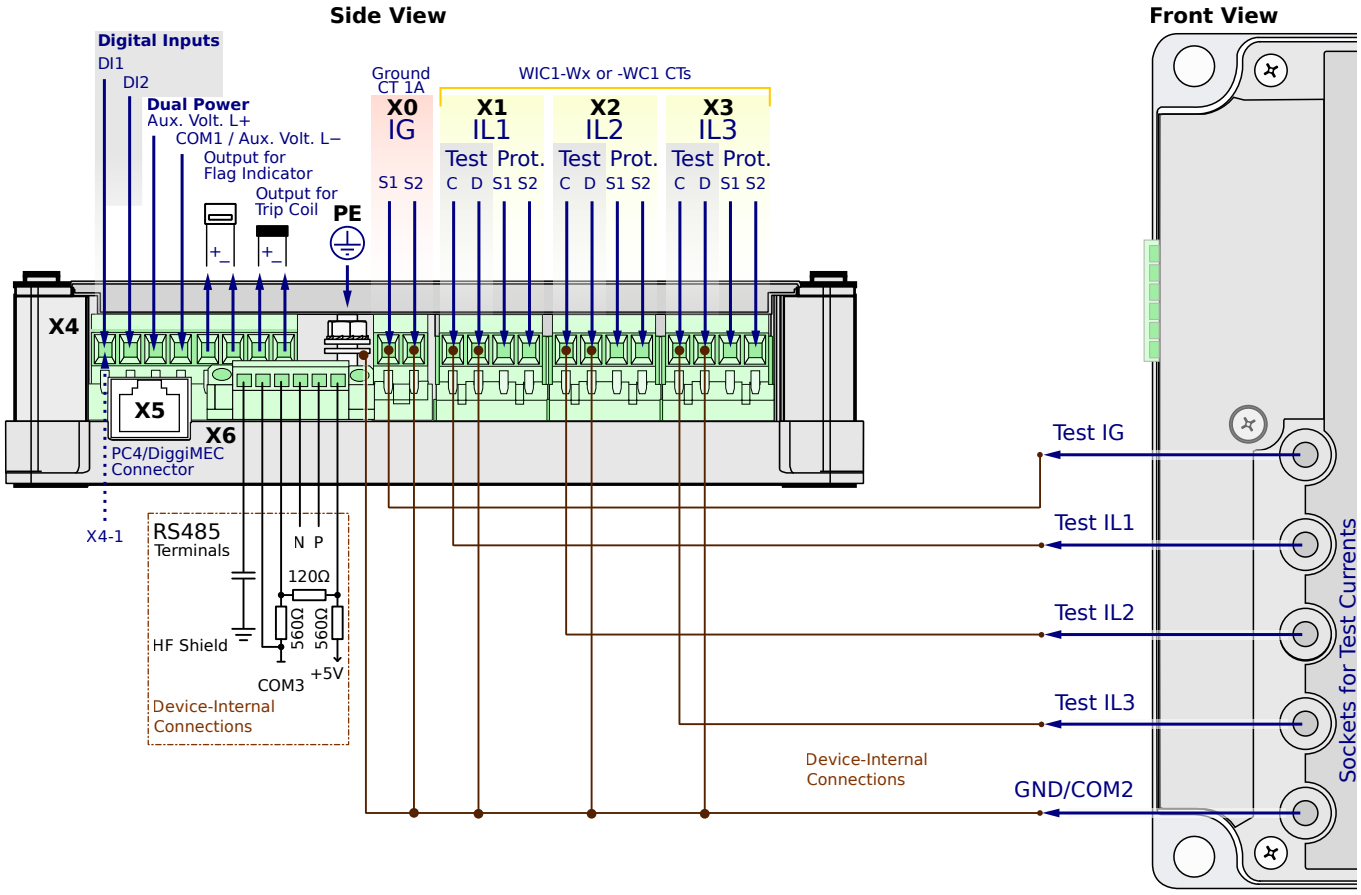


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1SBH

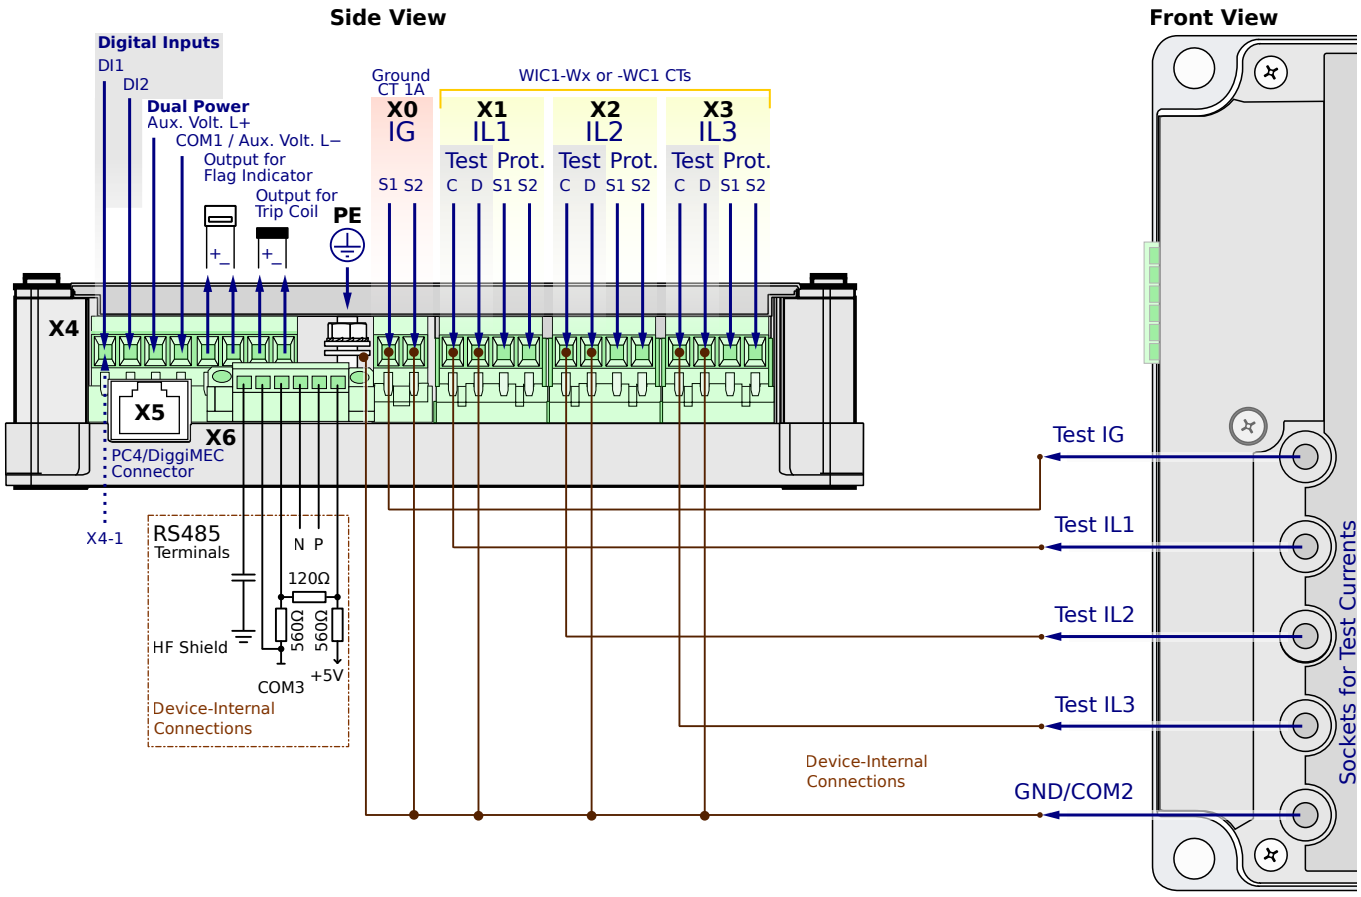


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1SC0

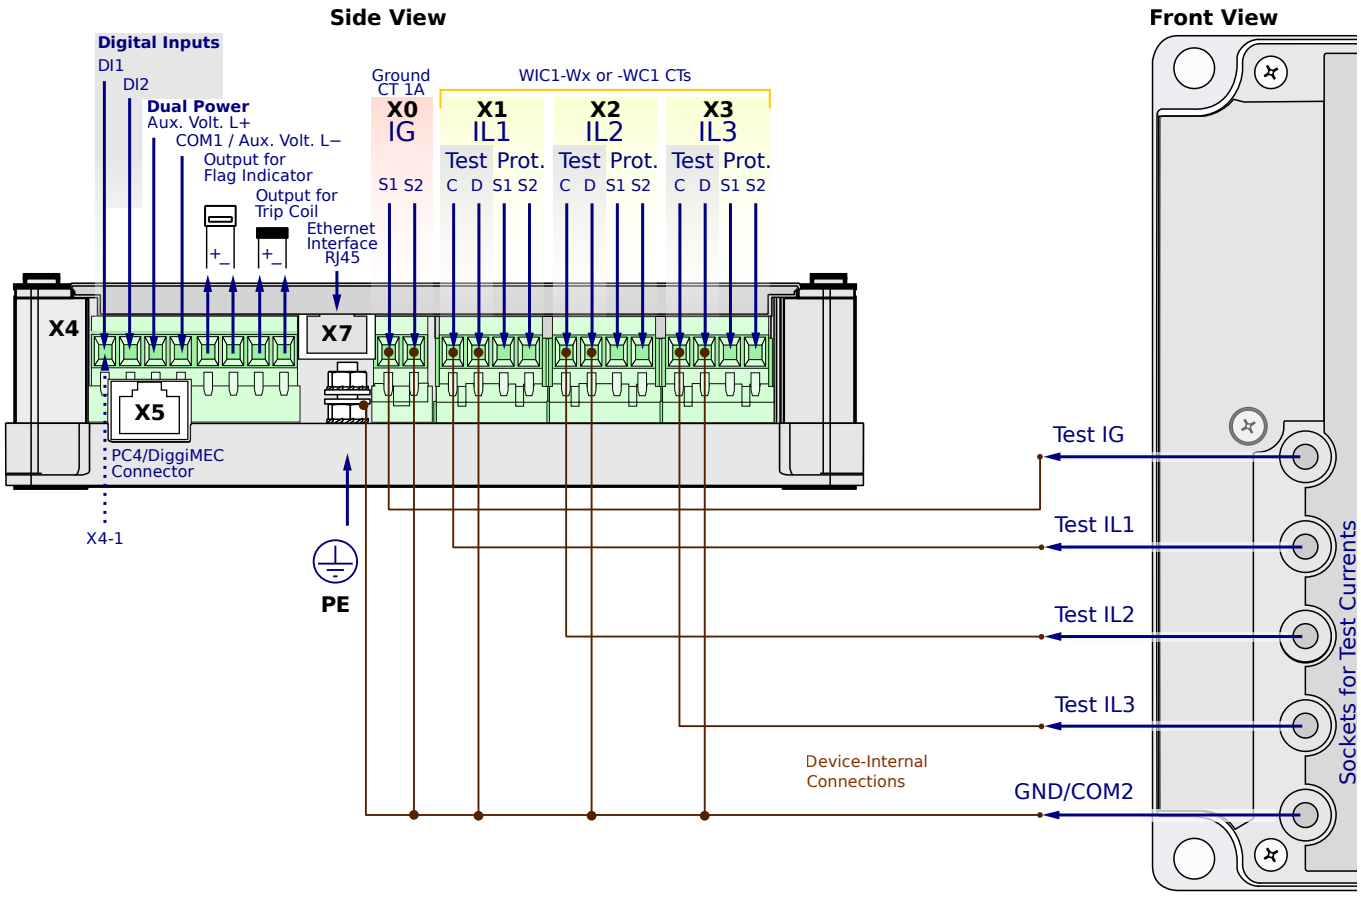


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1SCH

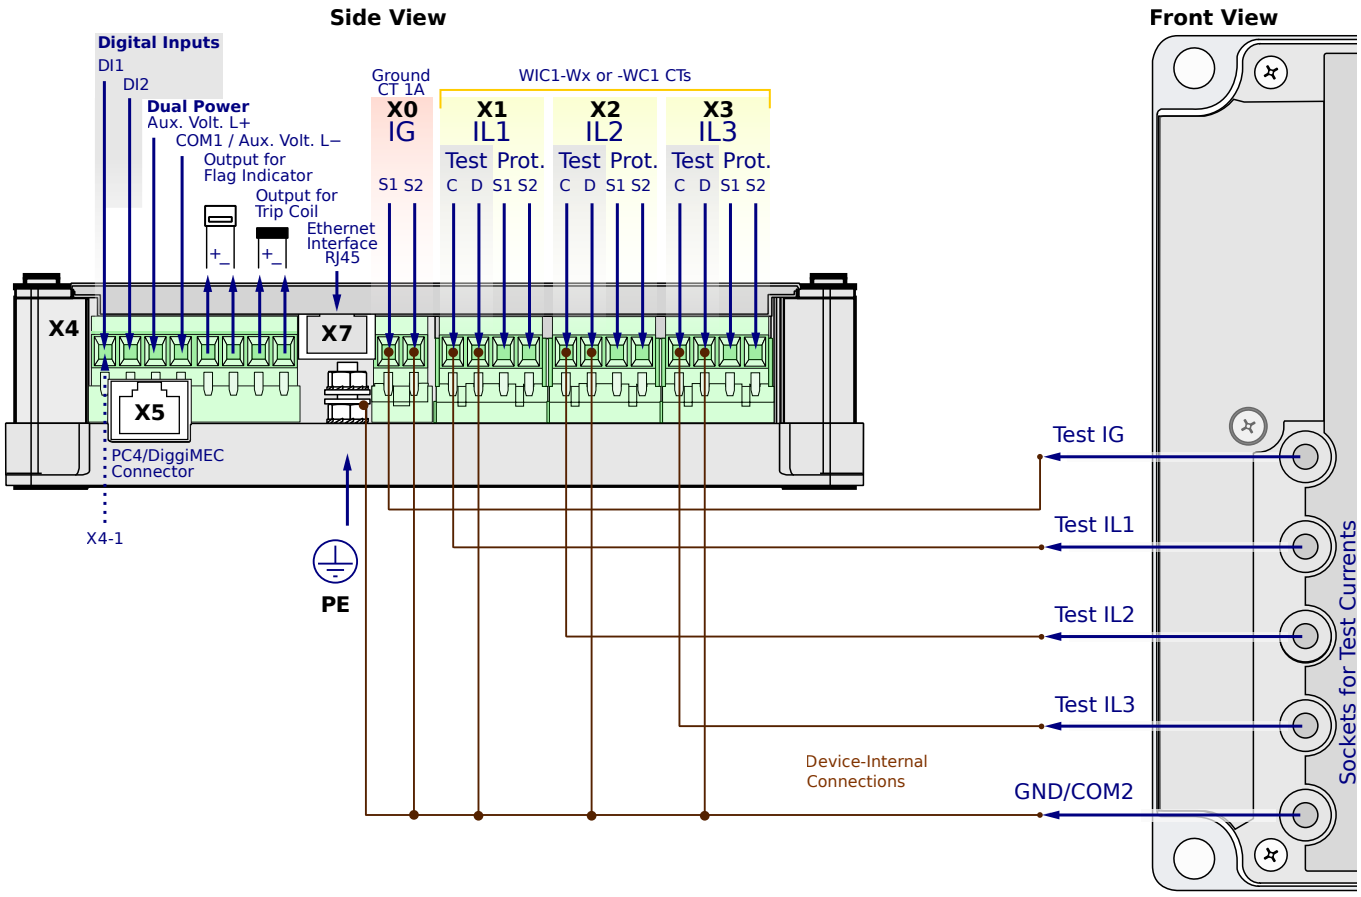


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1SL0

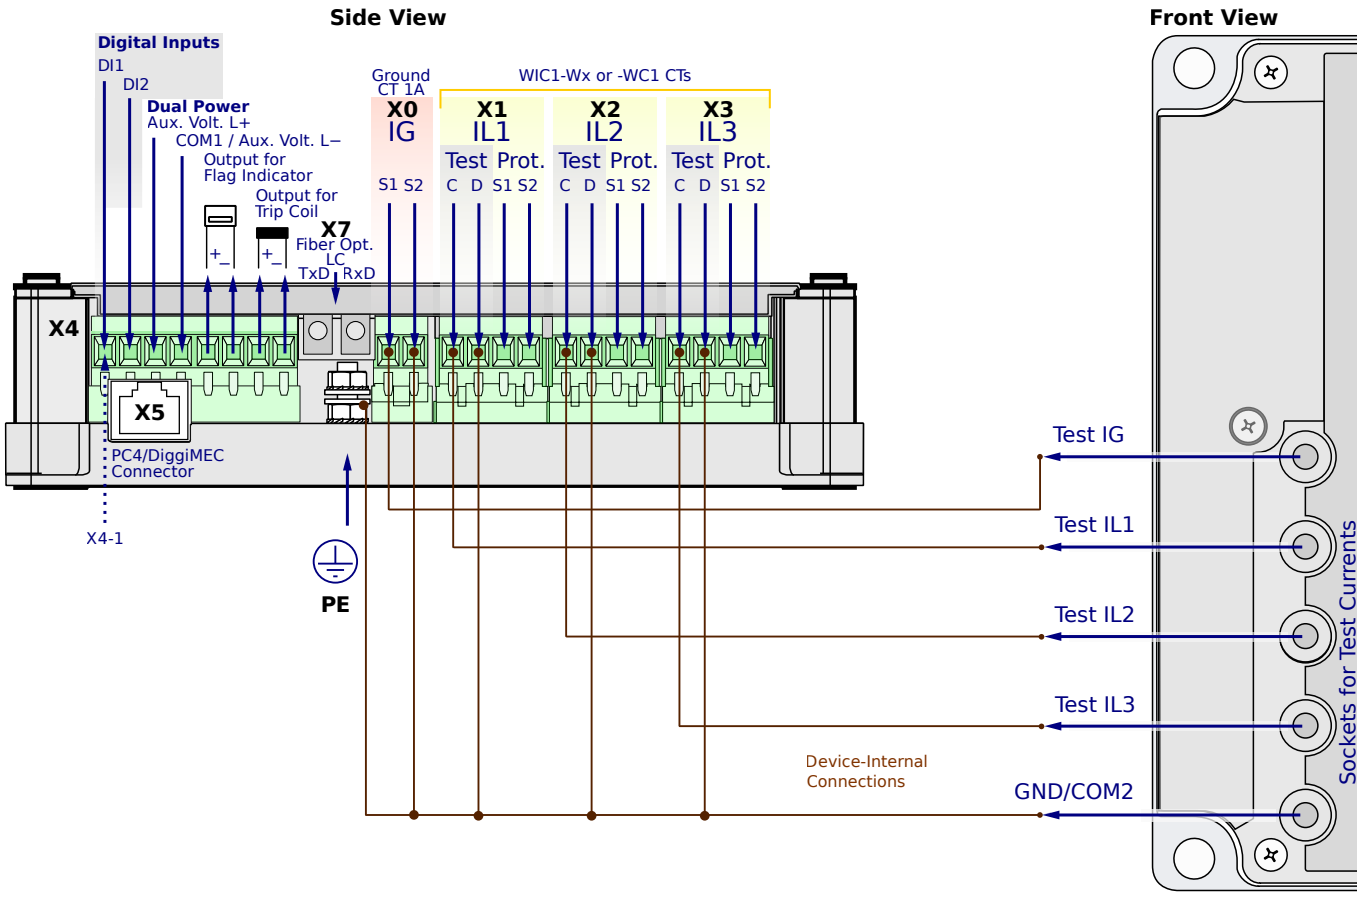


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1SLH

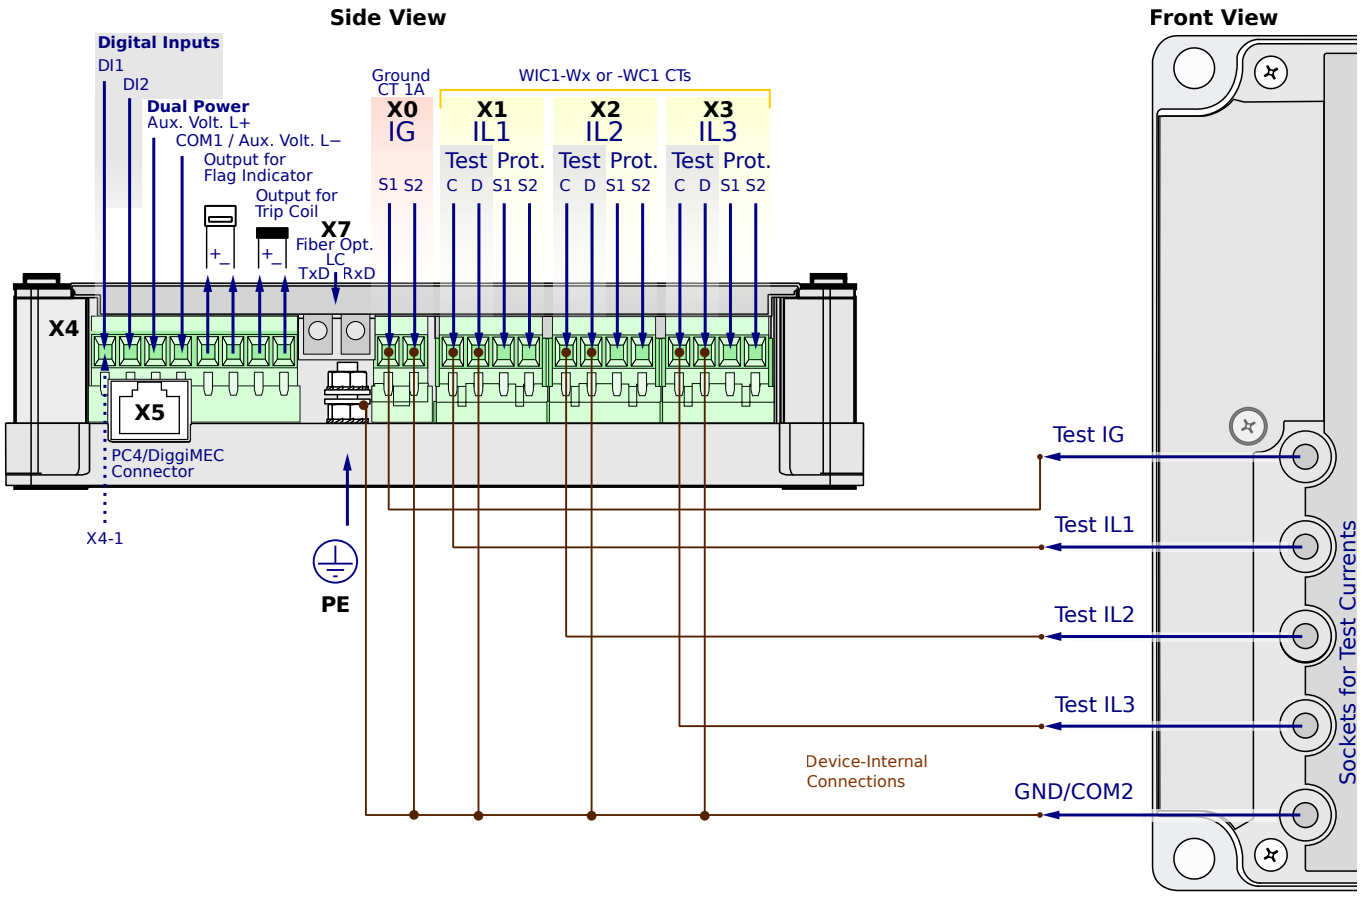


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1AA0

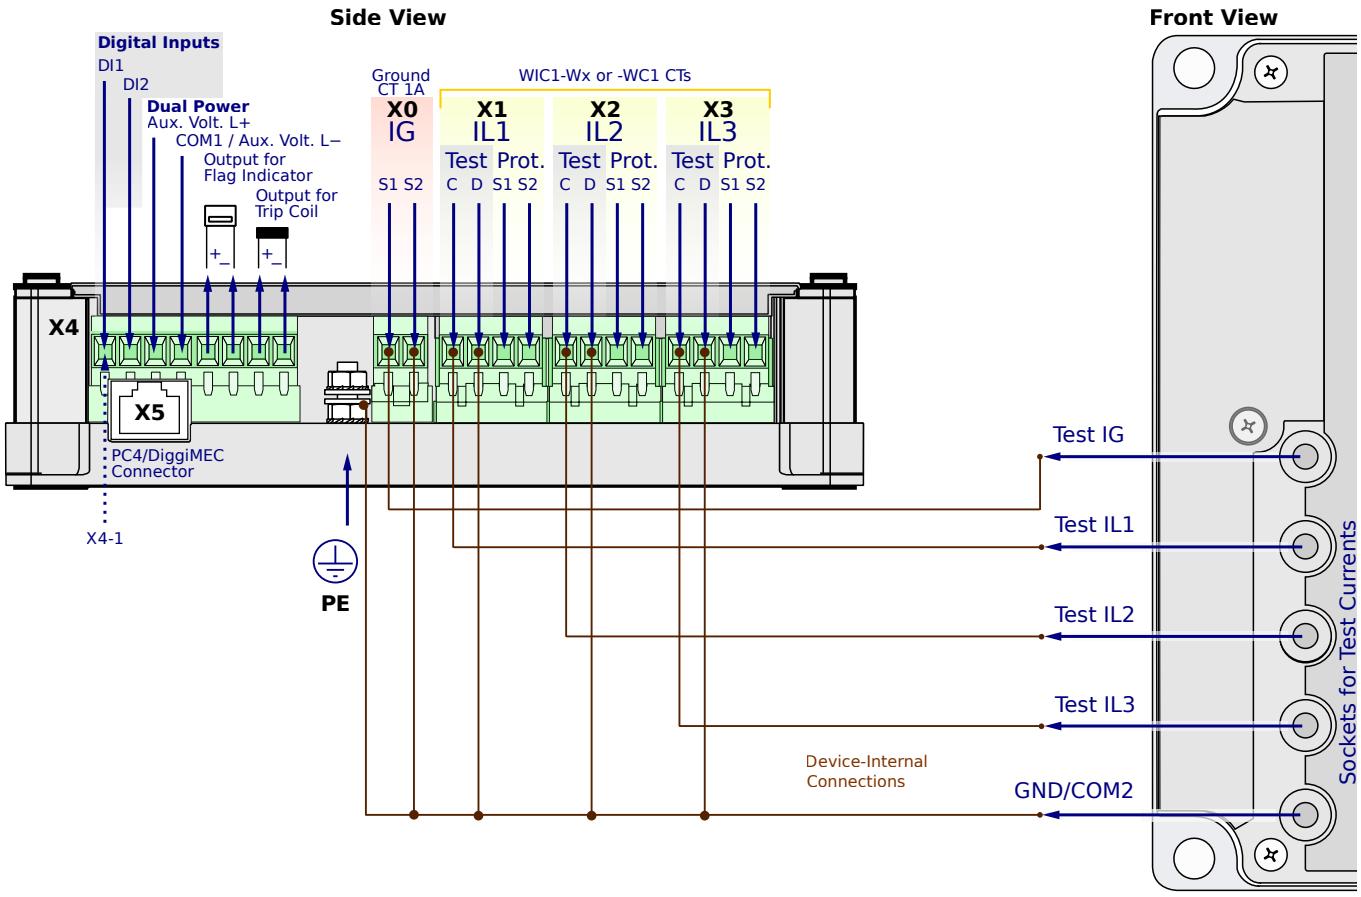


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1AAH

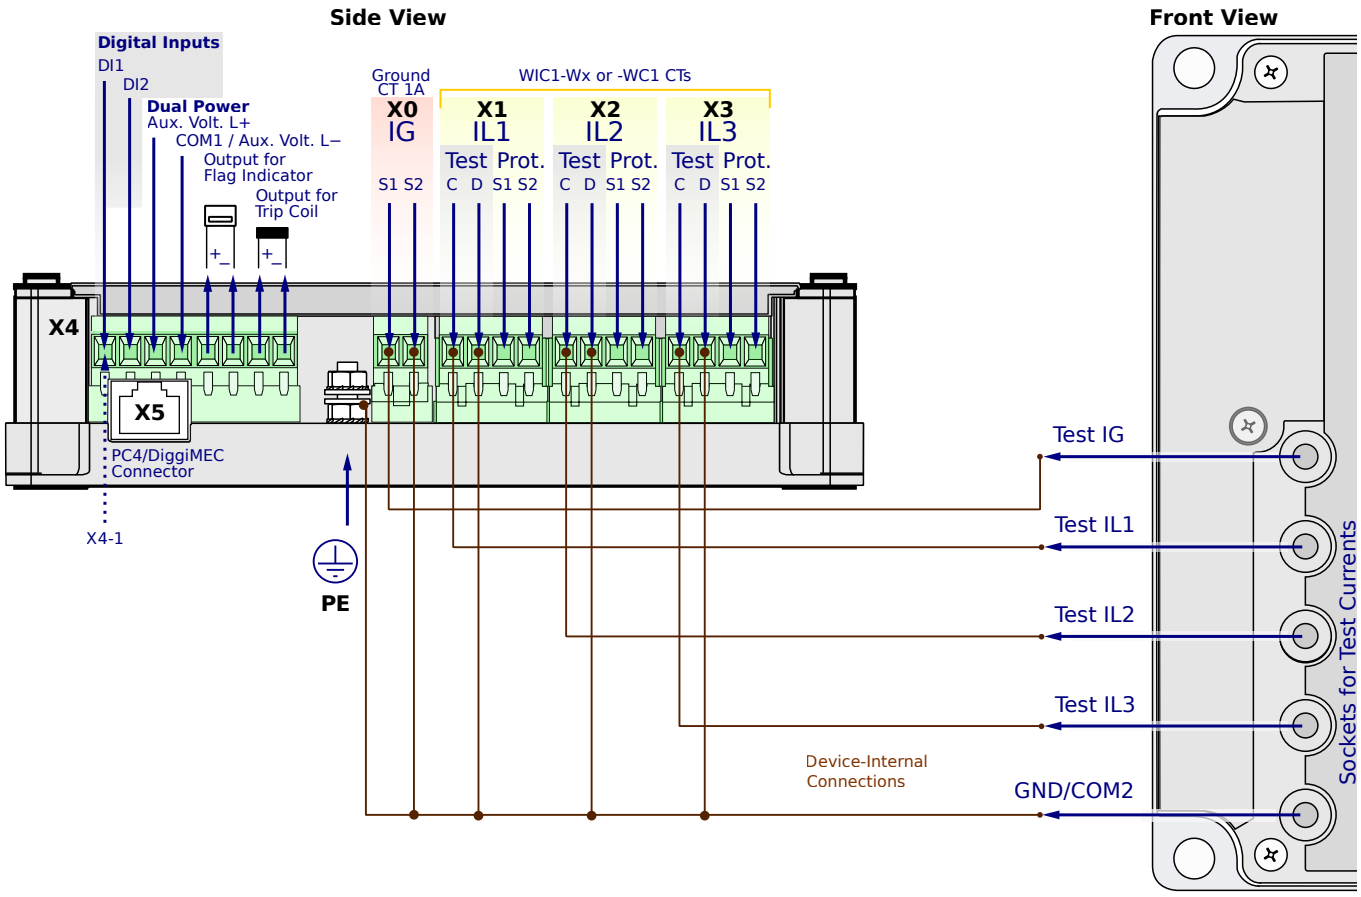


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1AB0

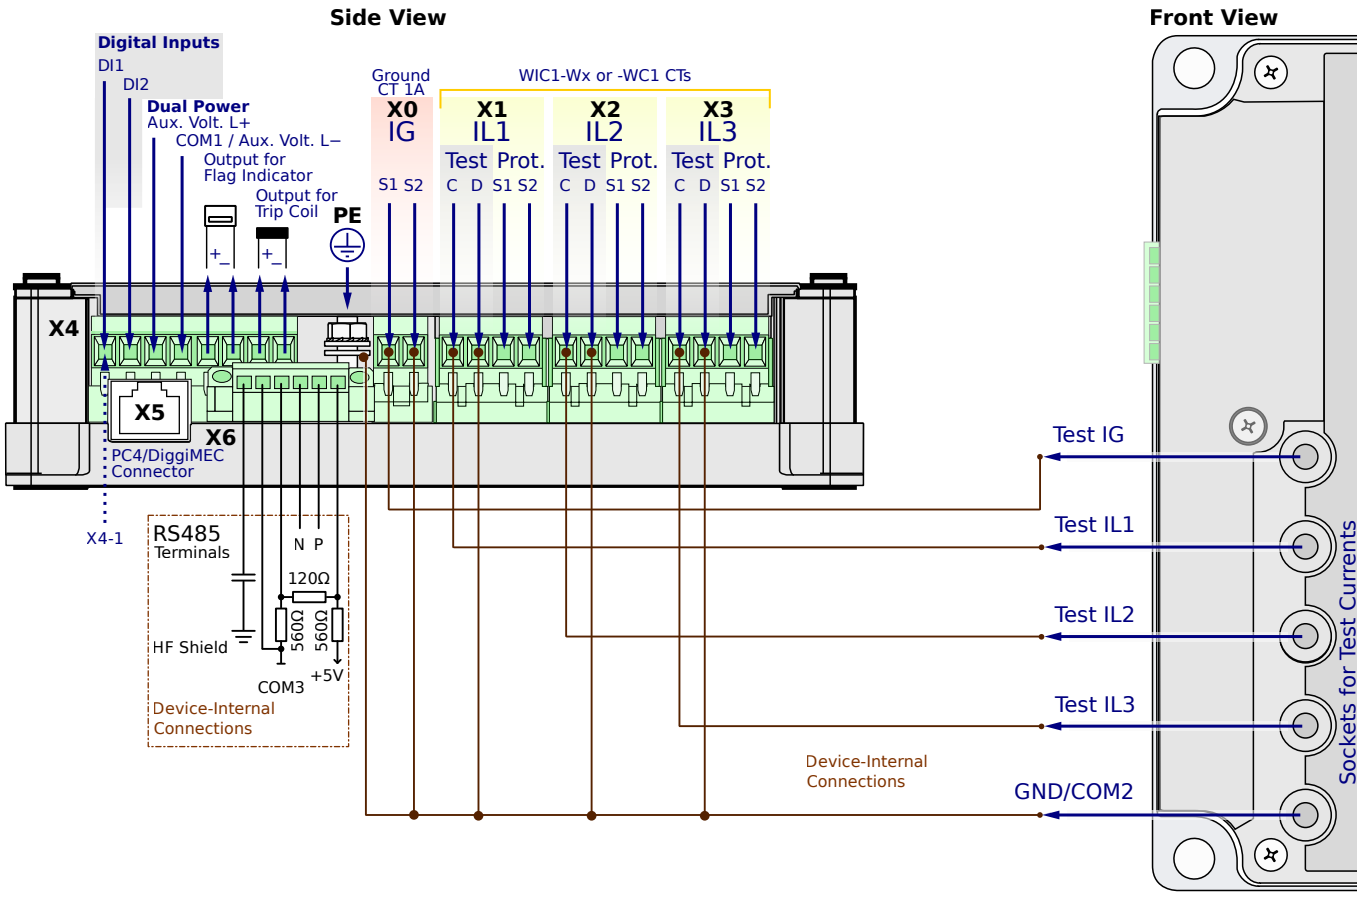


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1ABH

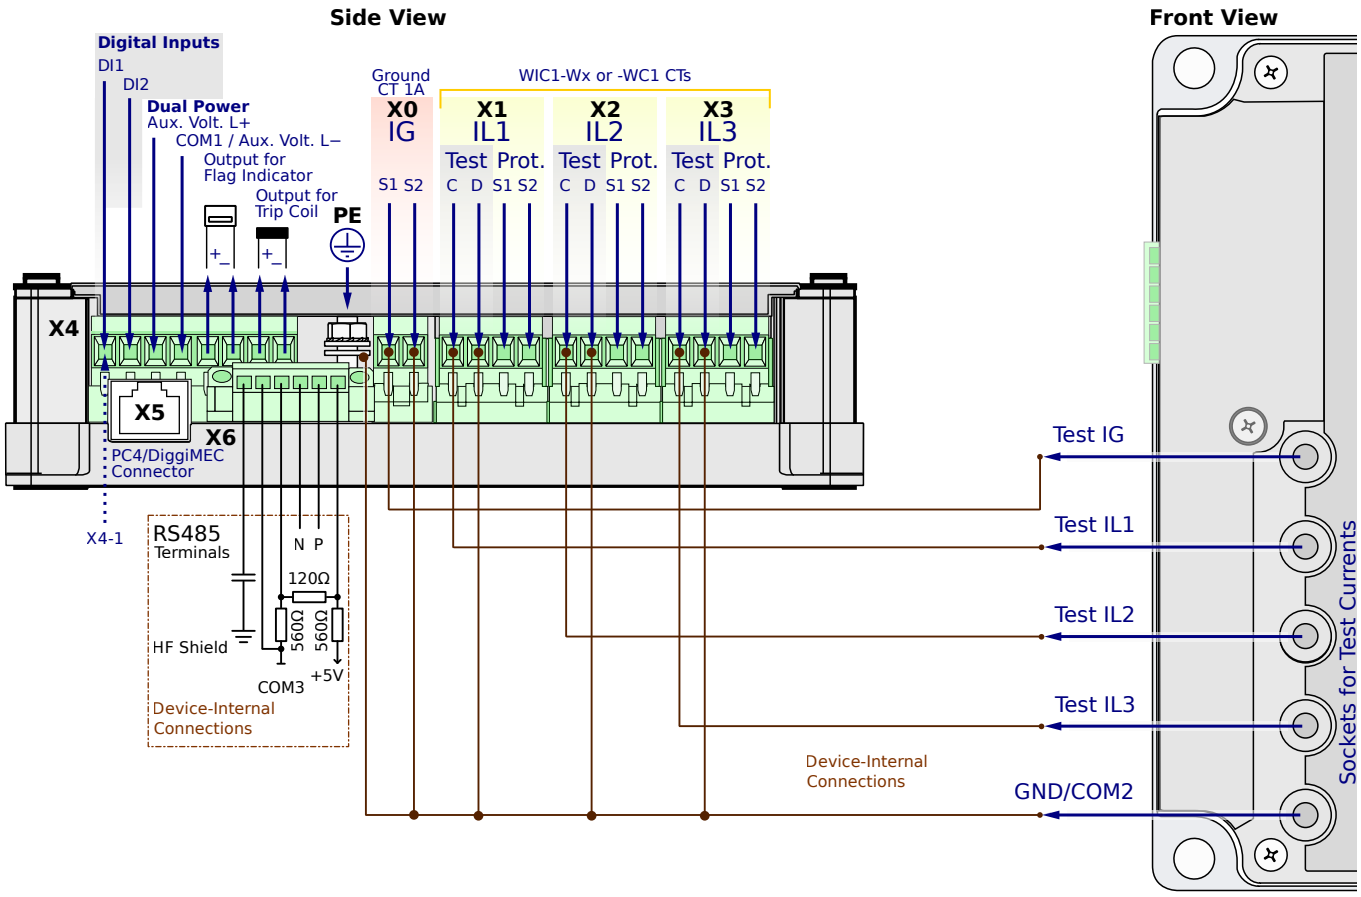


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1AC0

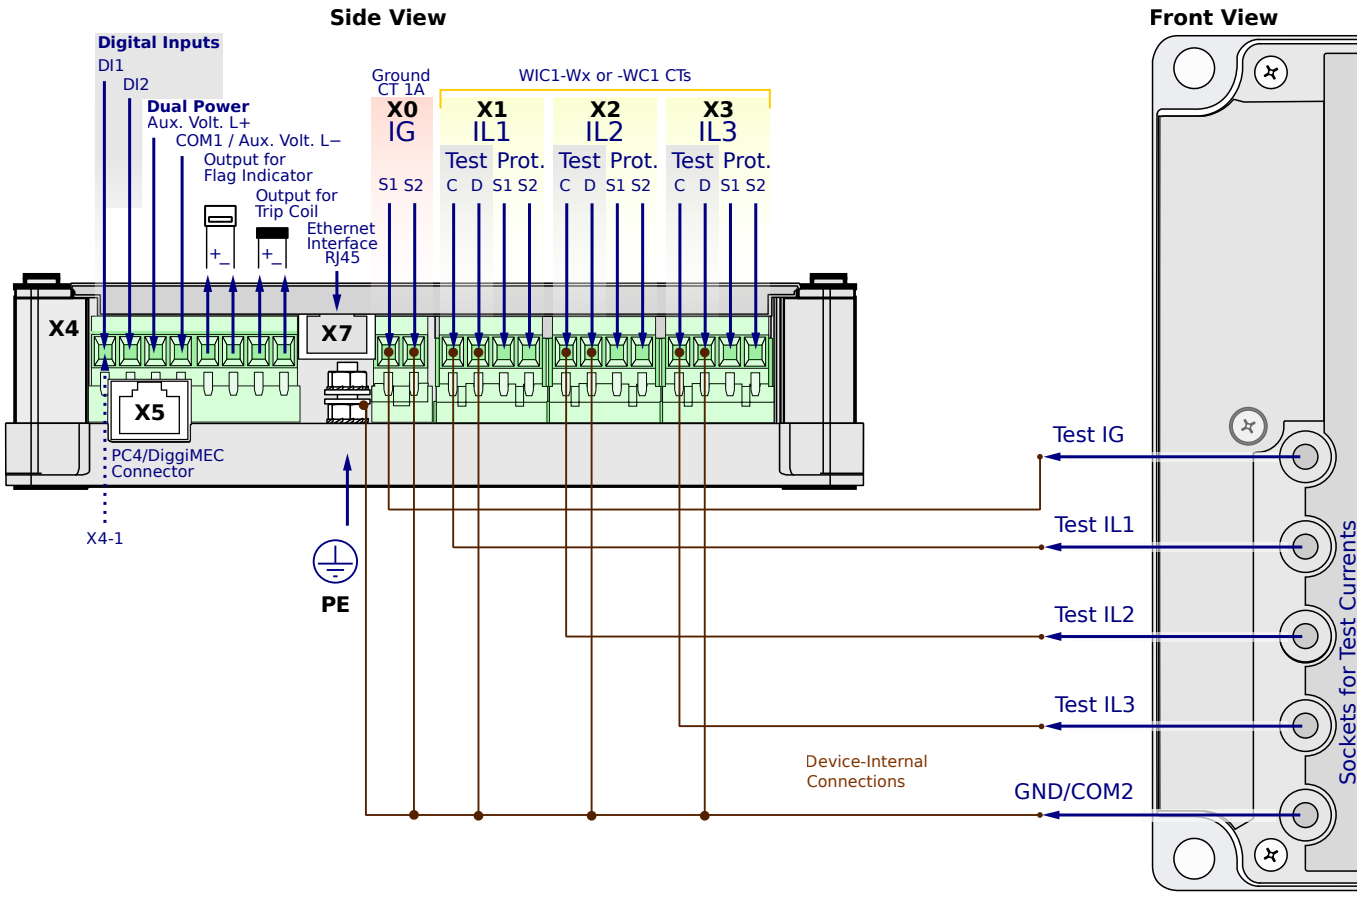


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1ACH

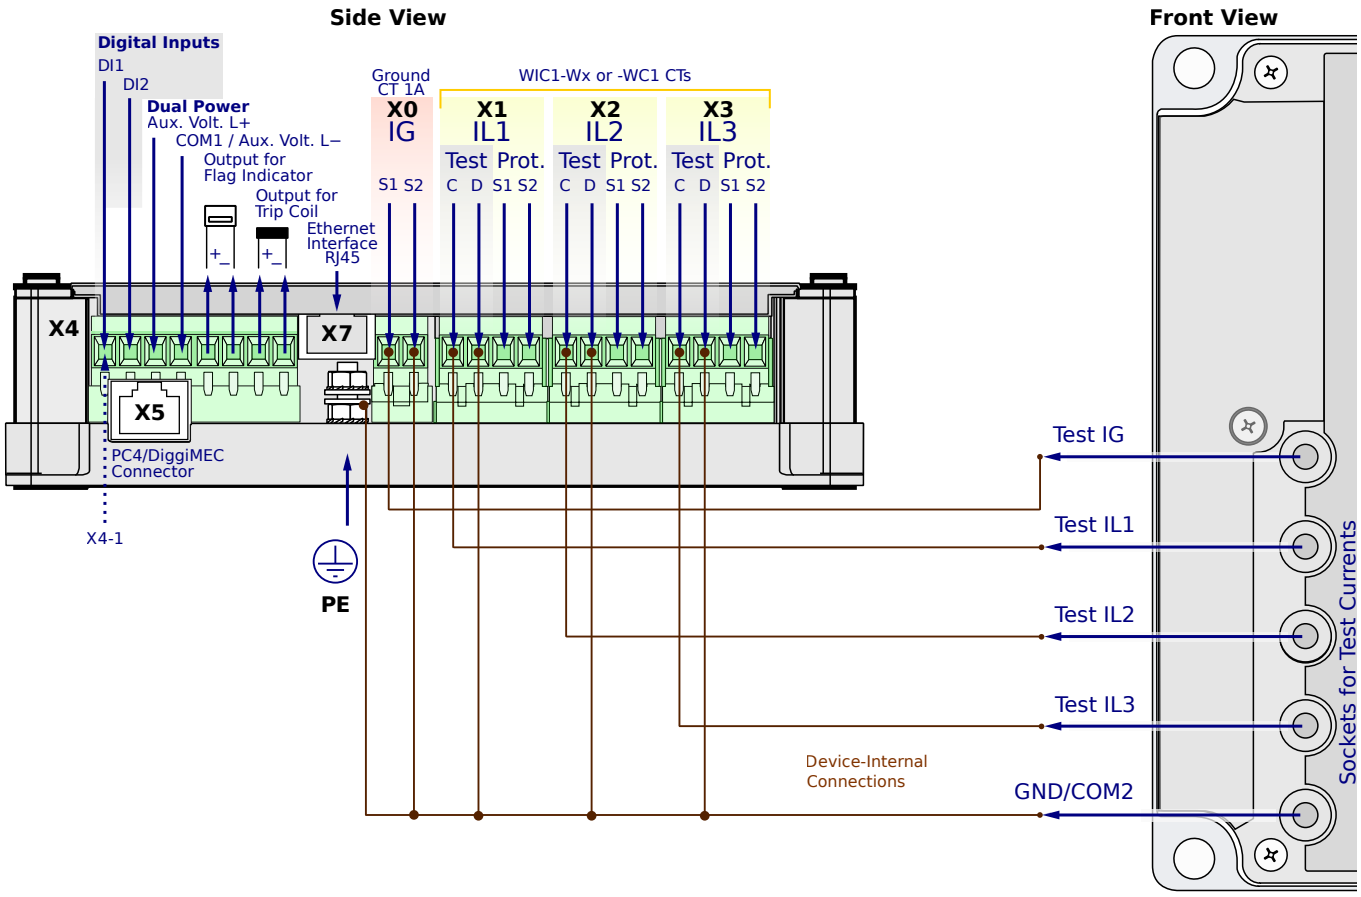


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1AL0

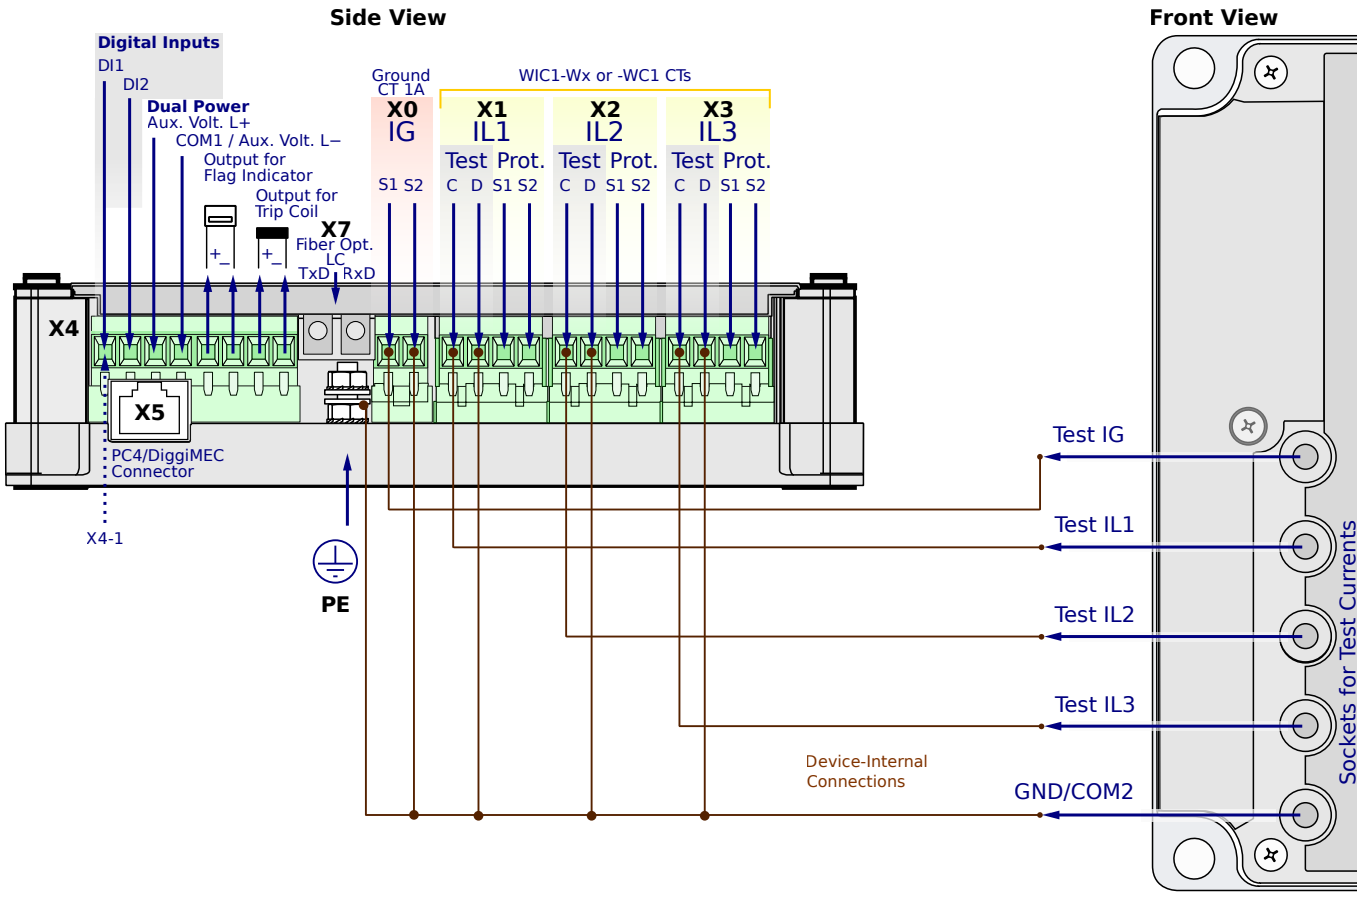


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1ALH

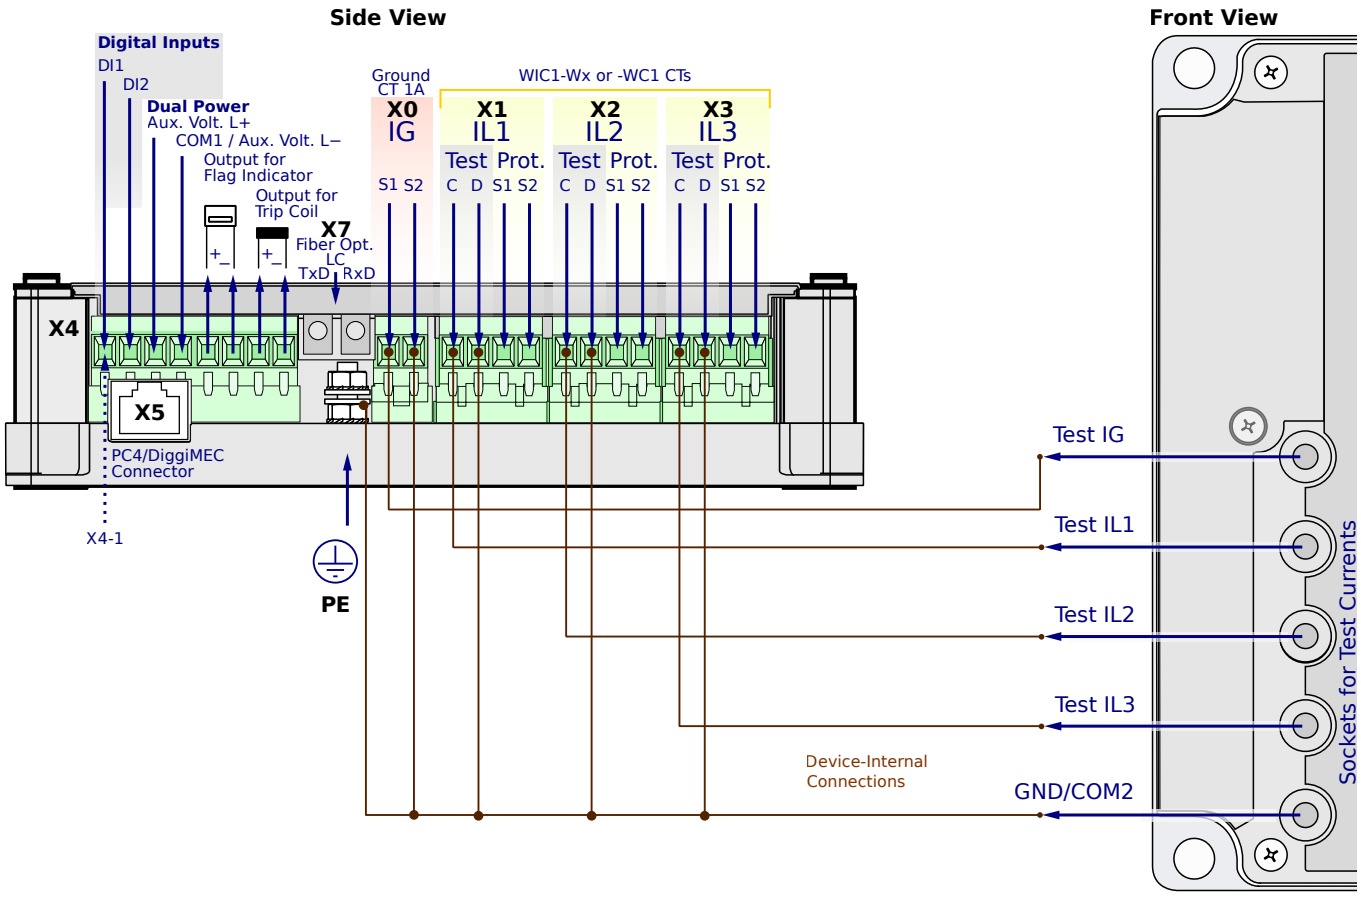


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1PA0

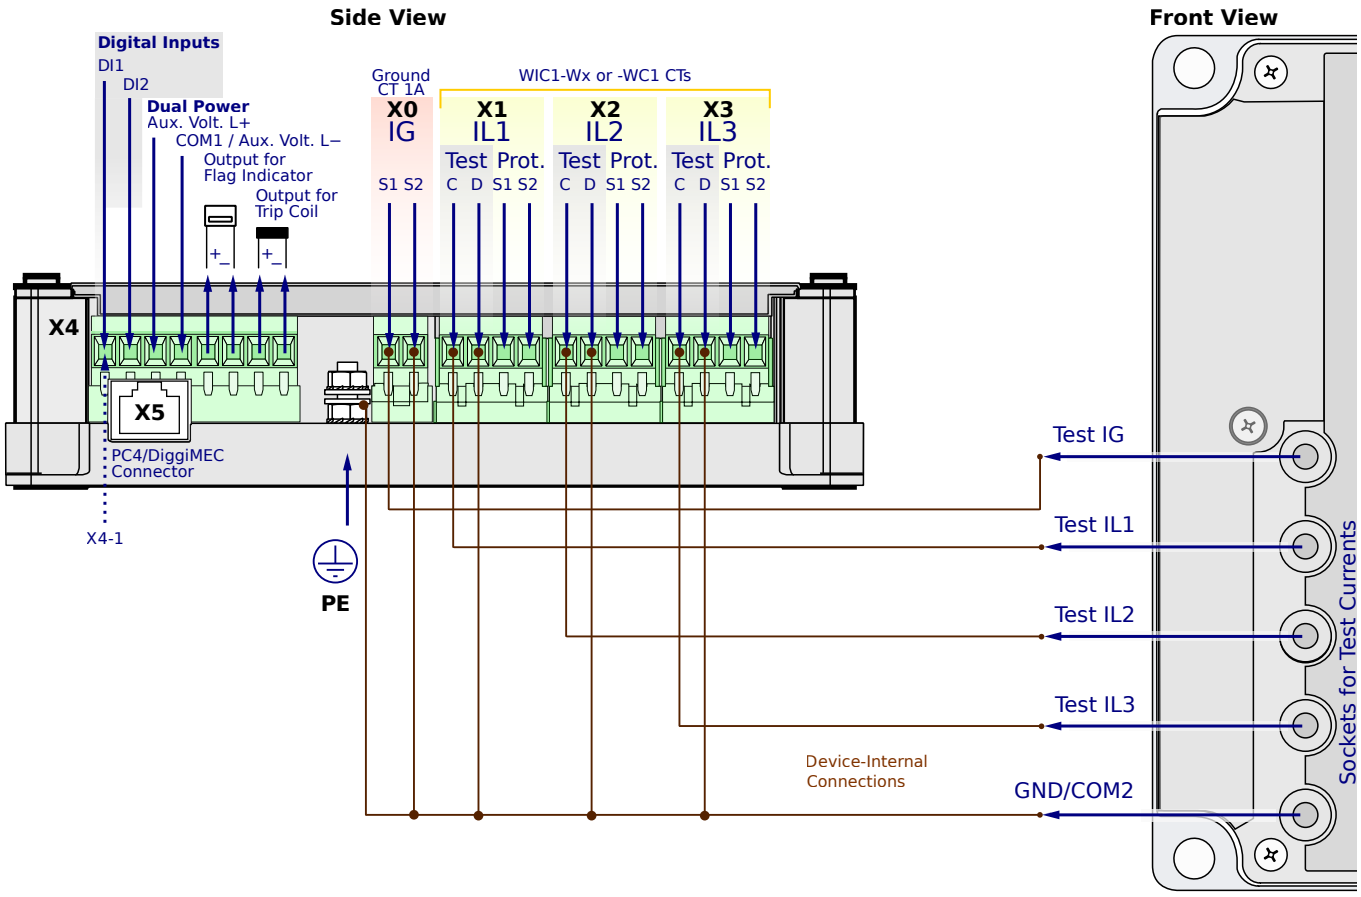


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1PAH

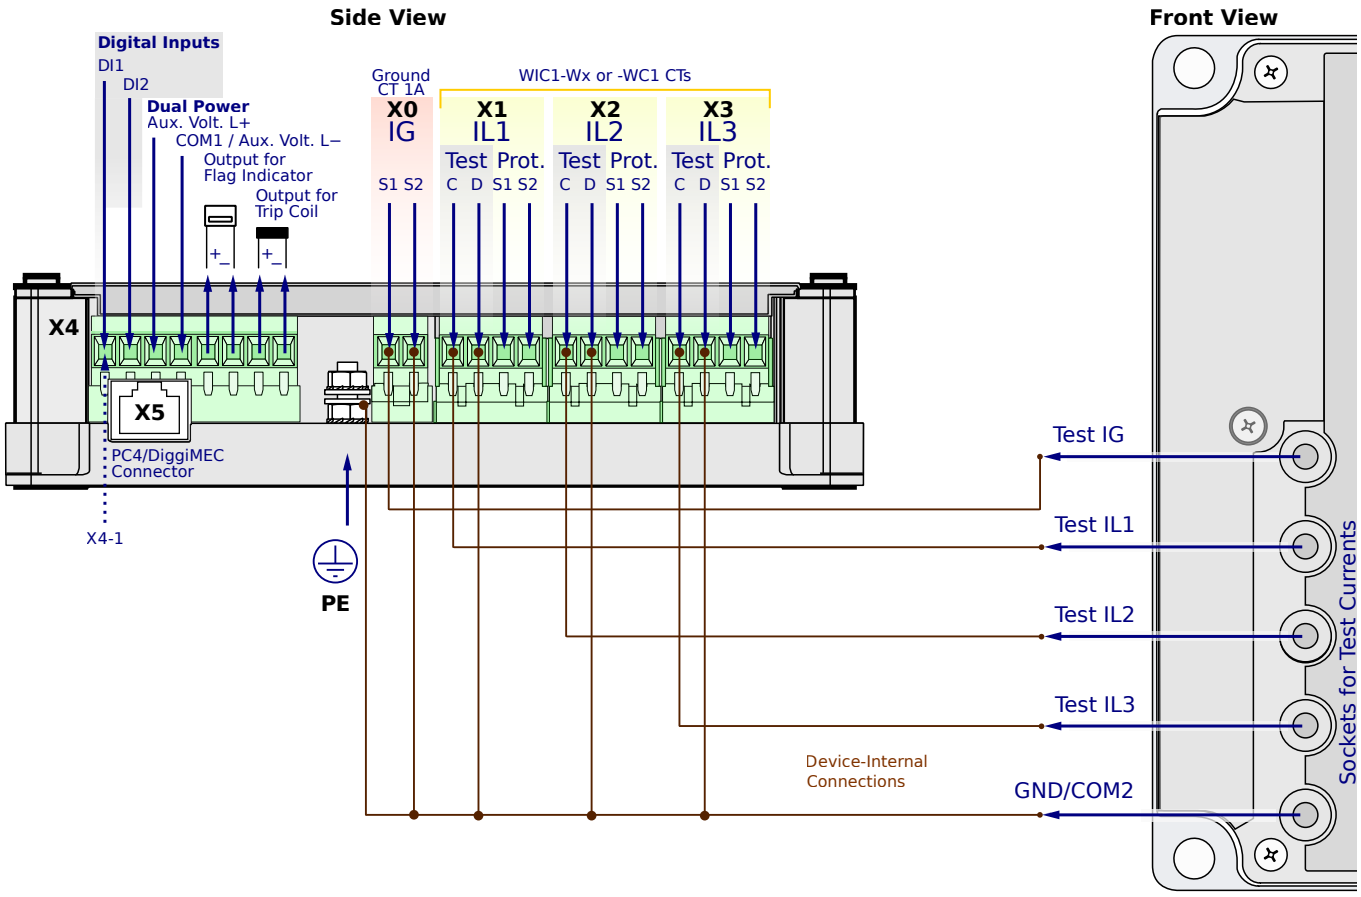


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD1PB0

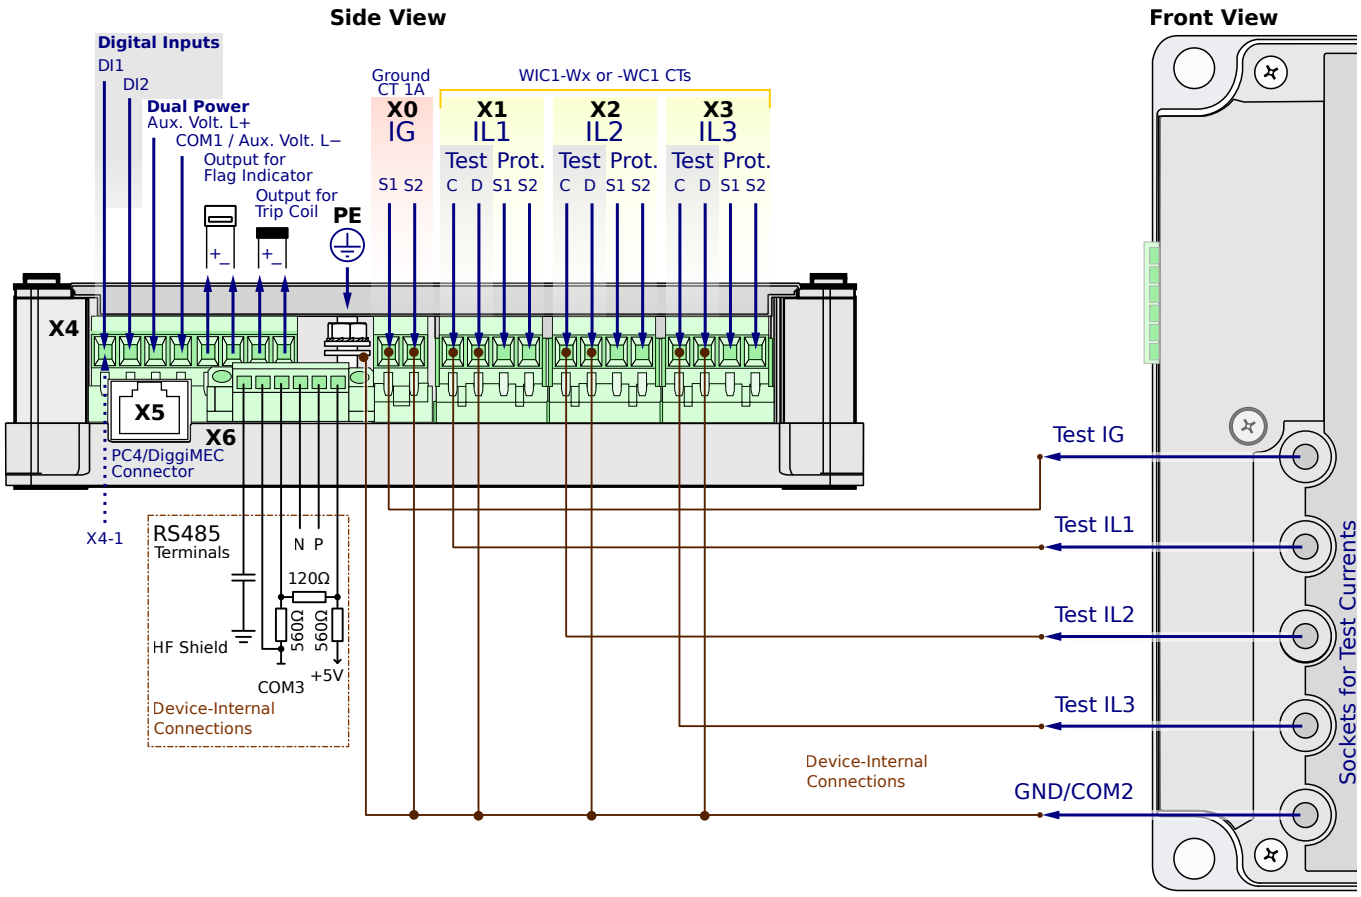


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1PBH

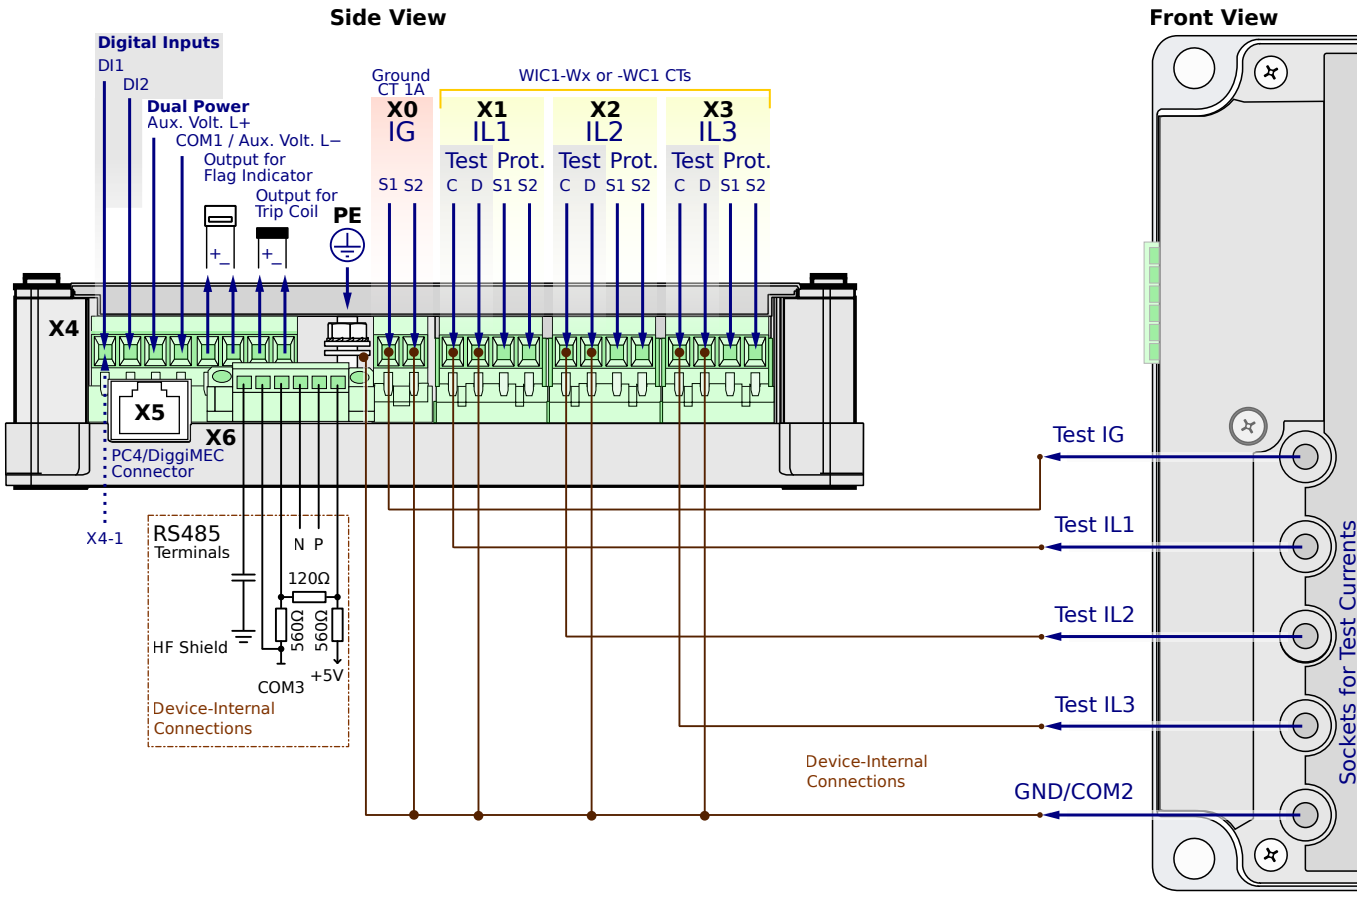


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD1PC0

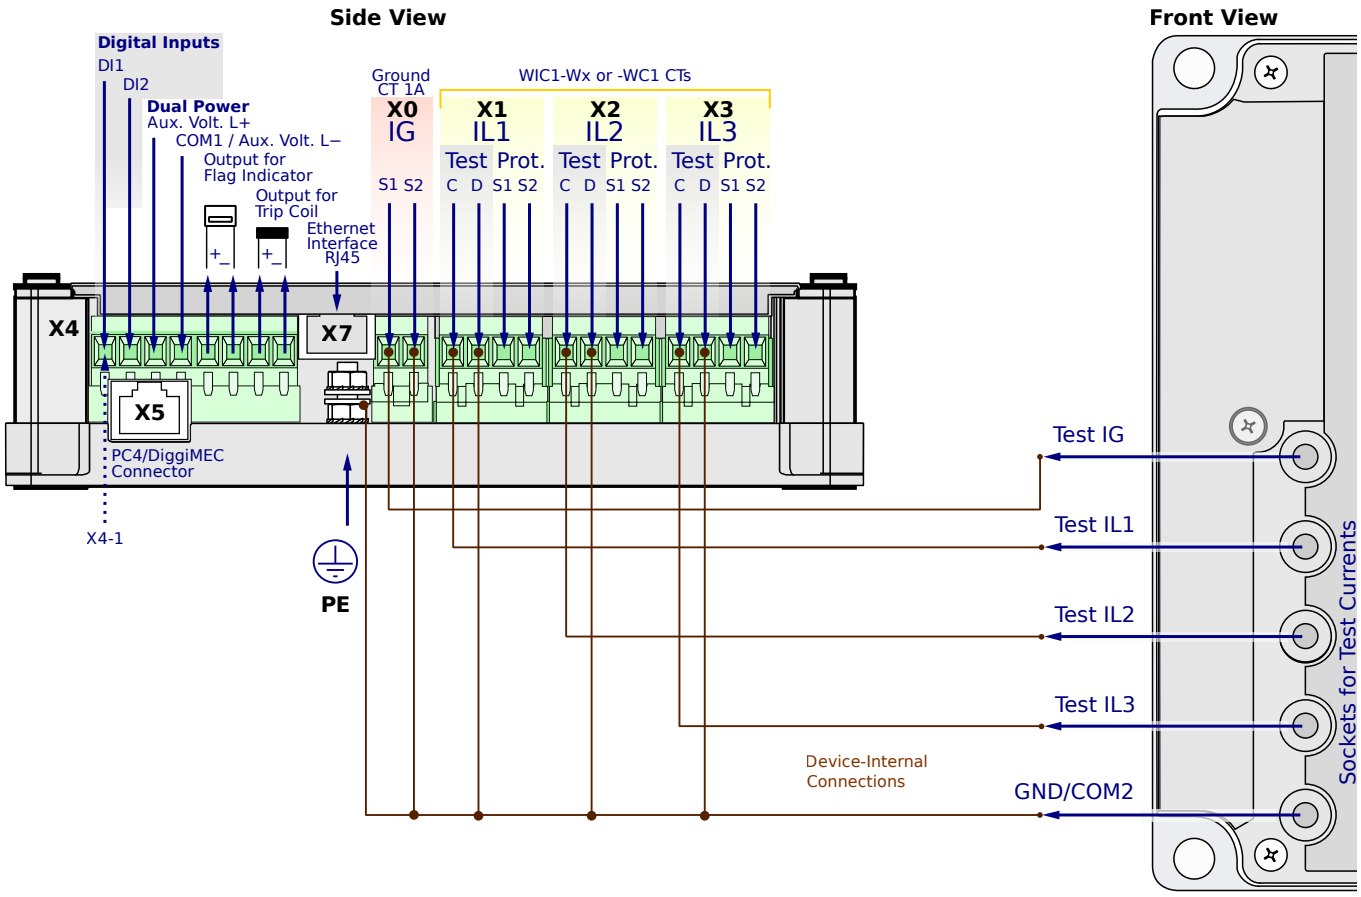


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1PCH

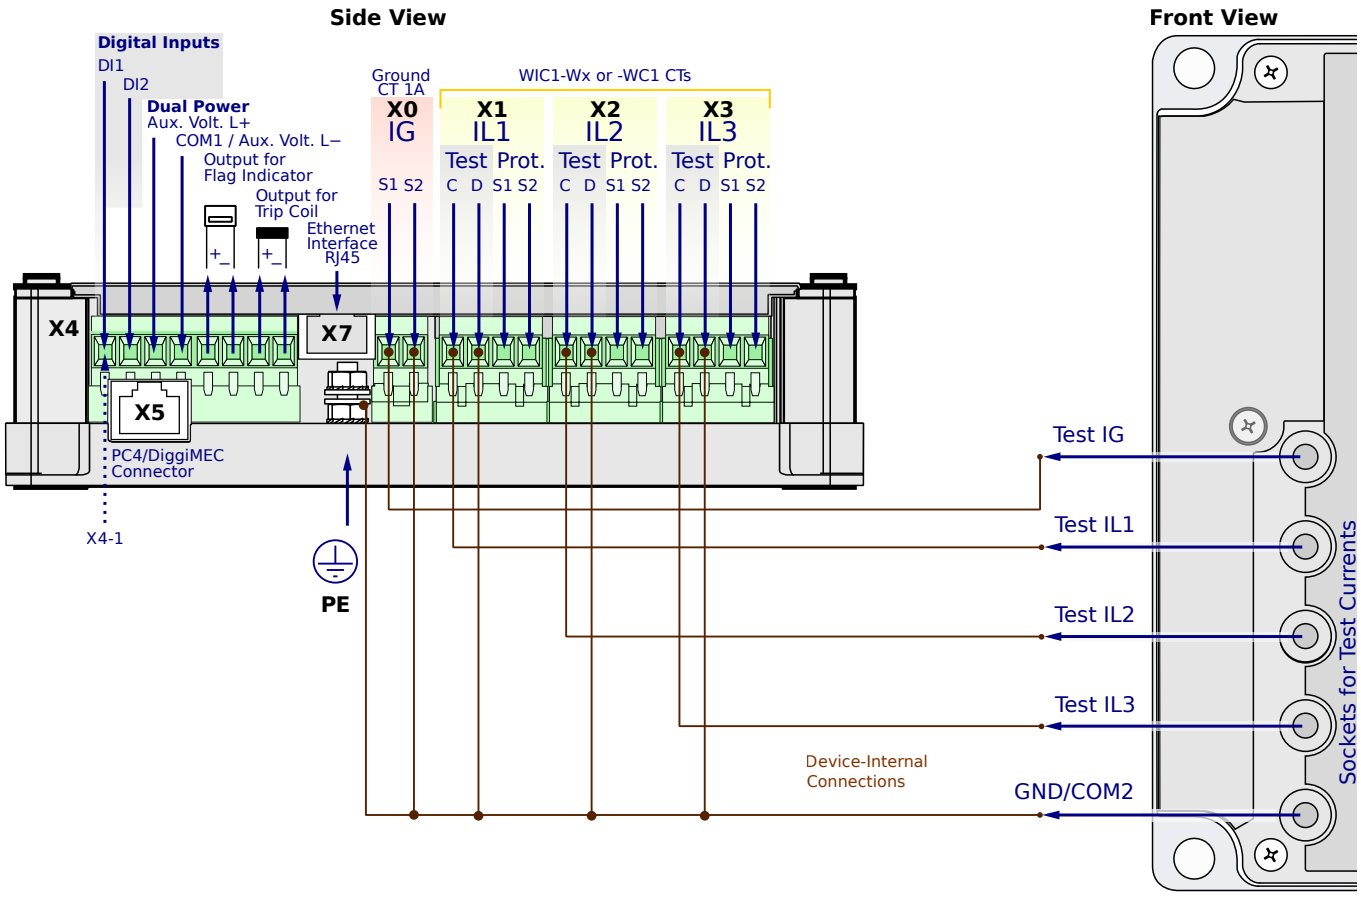


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD1PL0

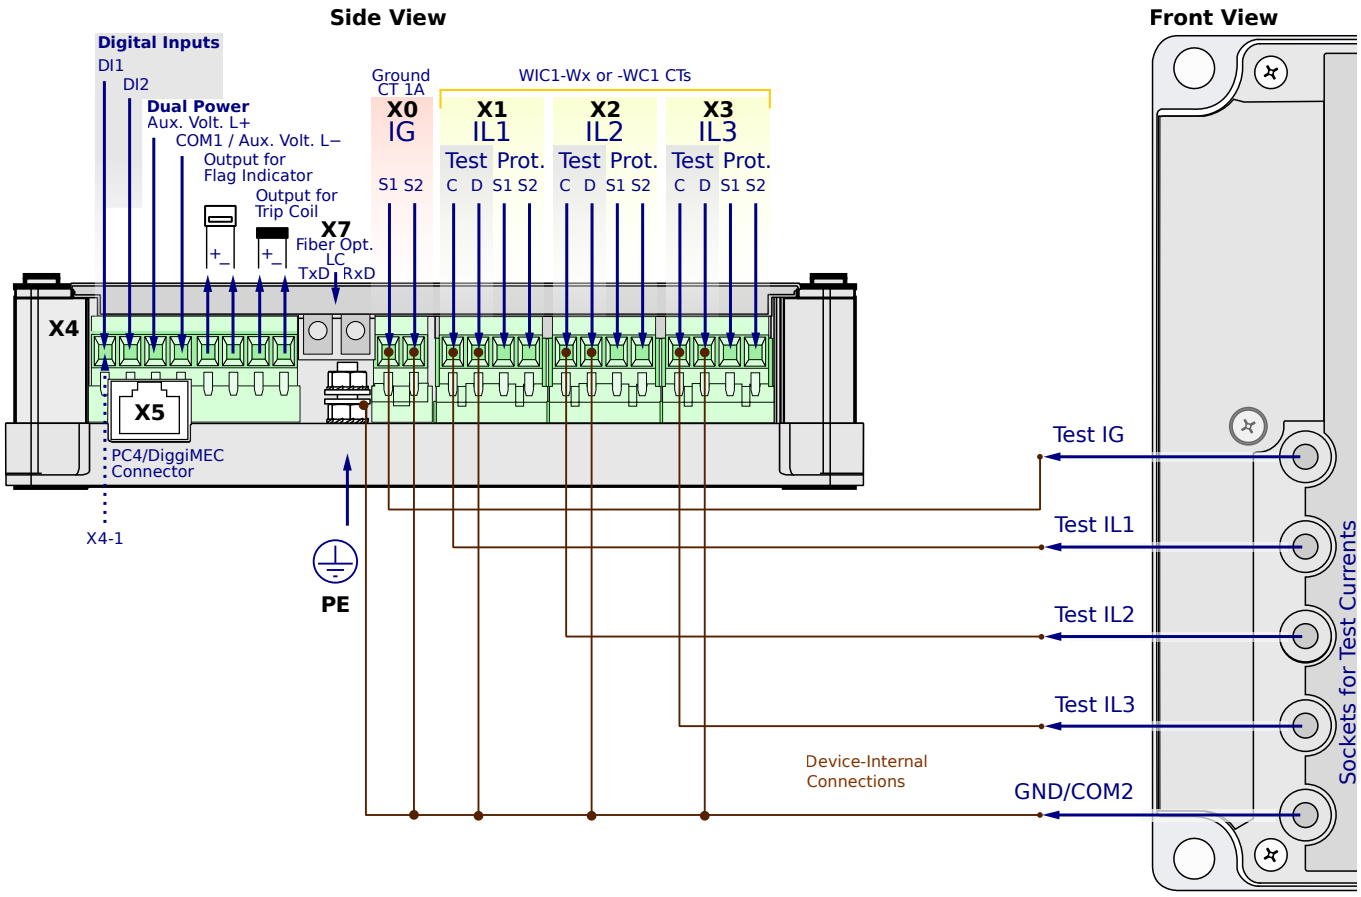


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD1PLH

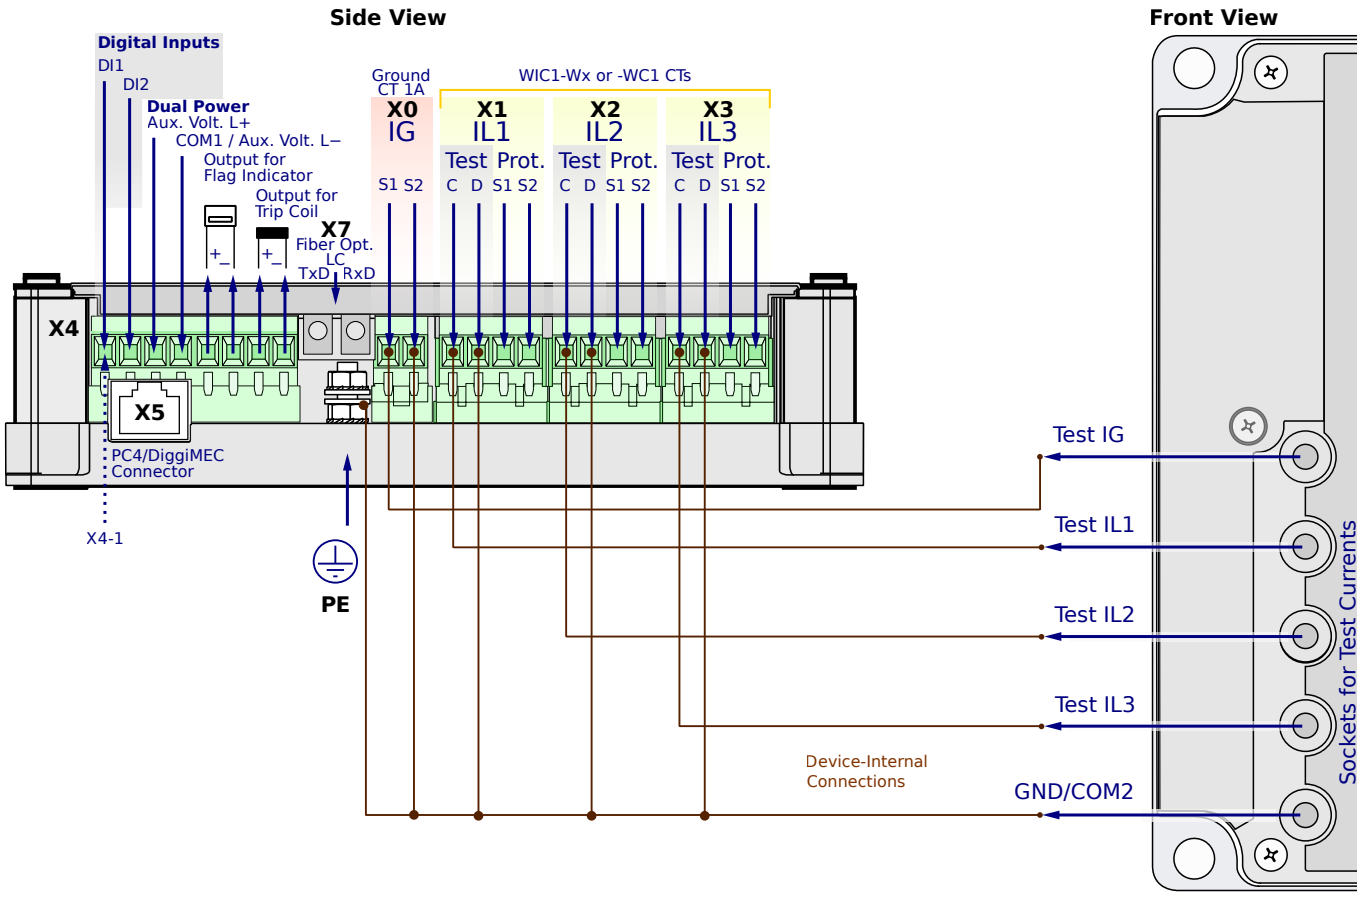


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2SA0

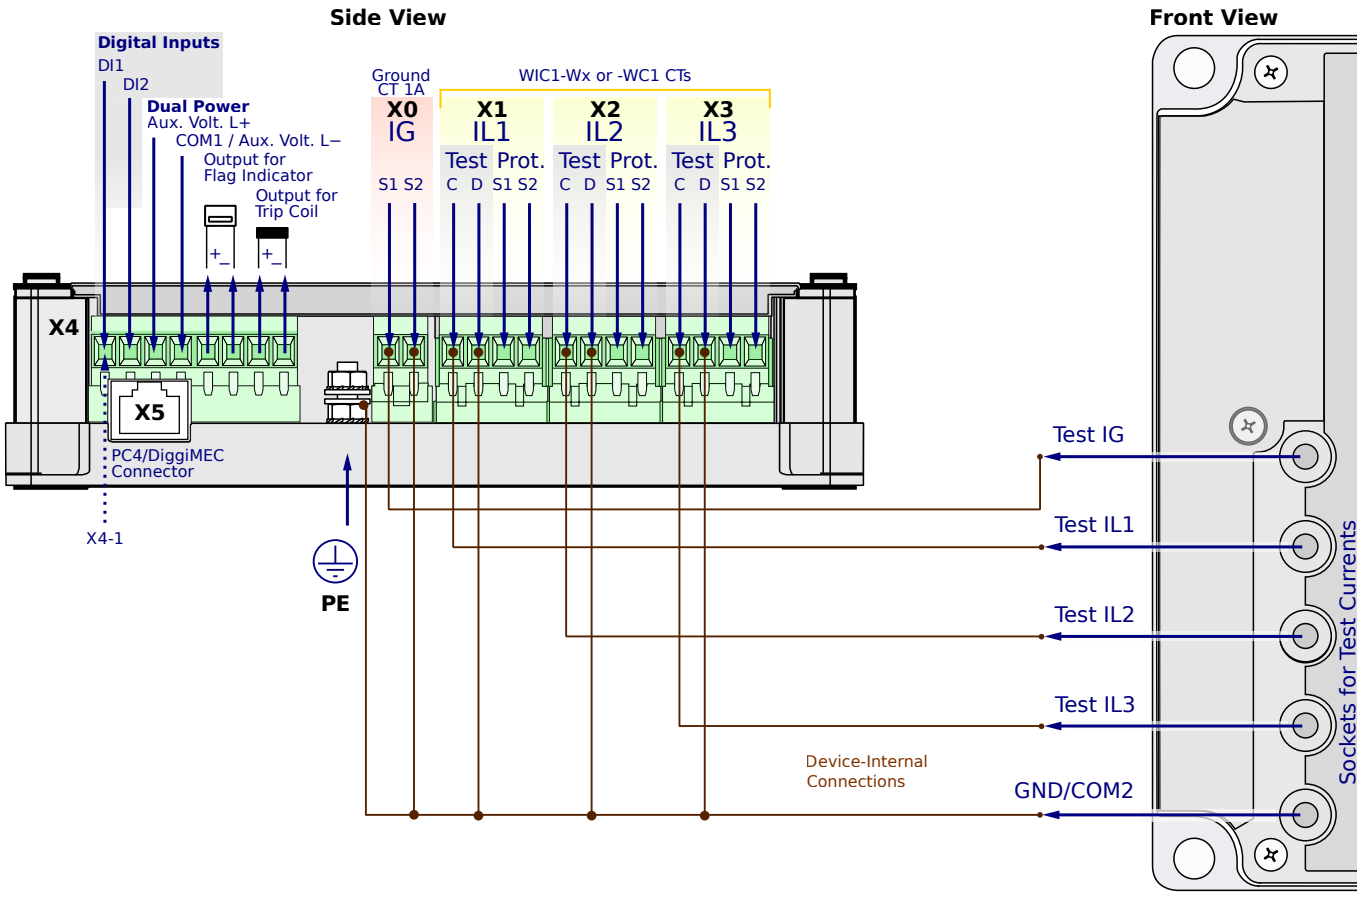


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2SAH

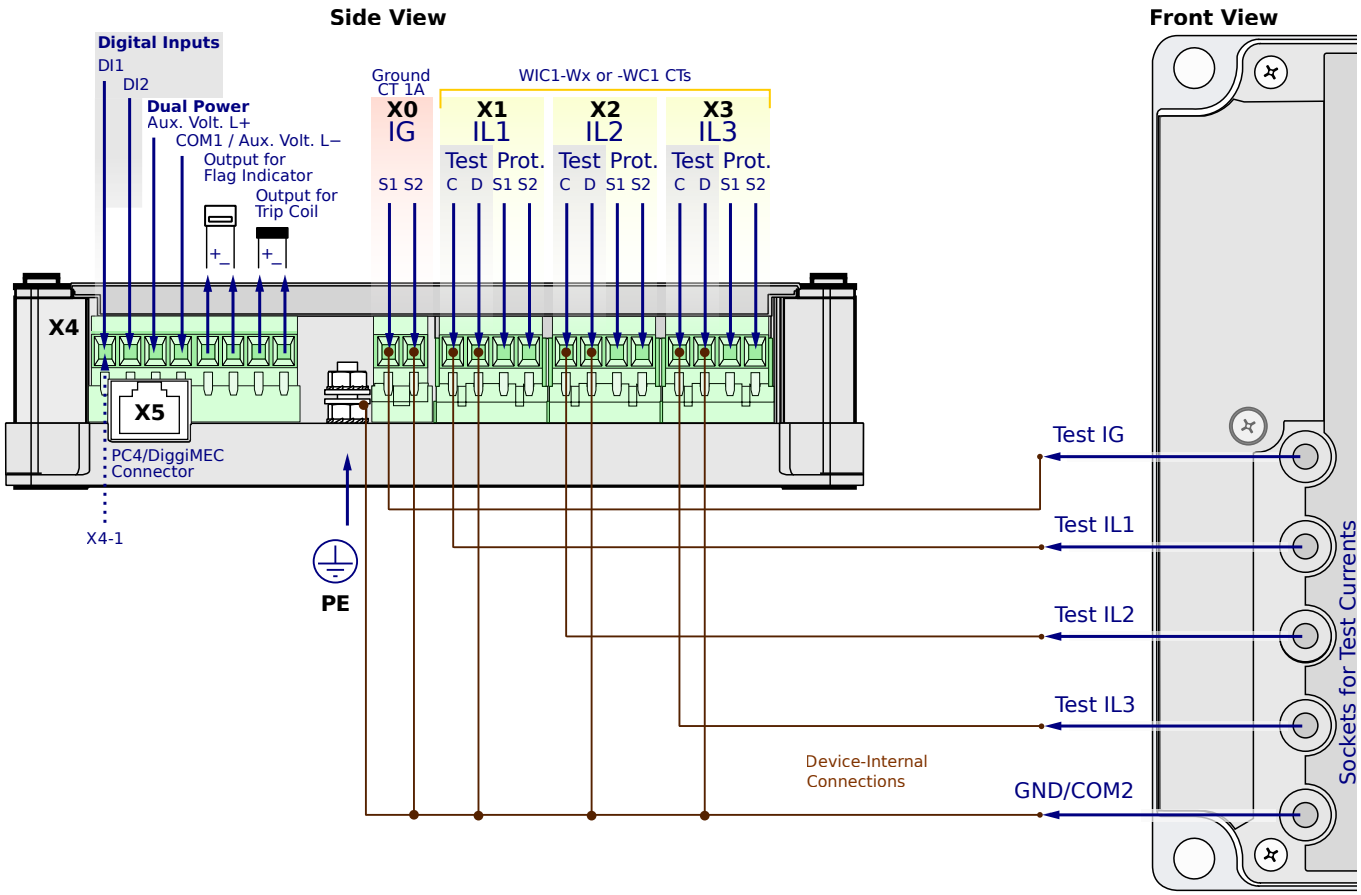


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2SB0

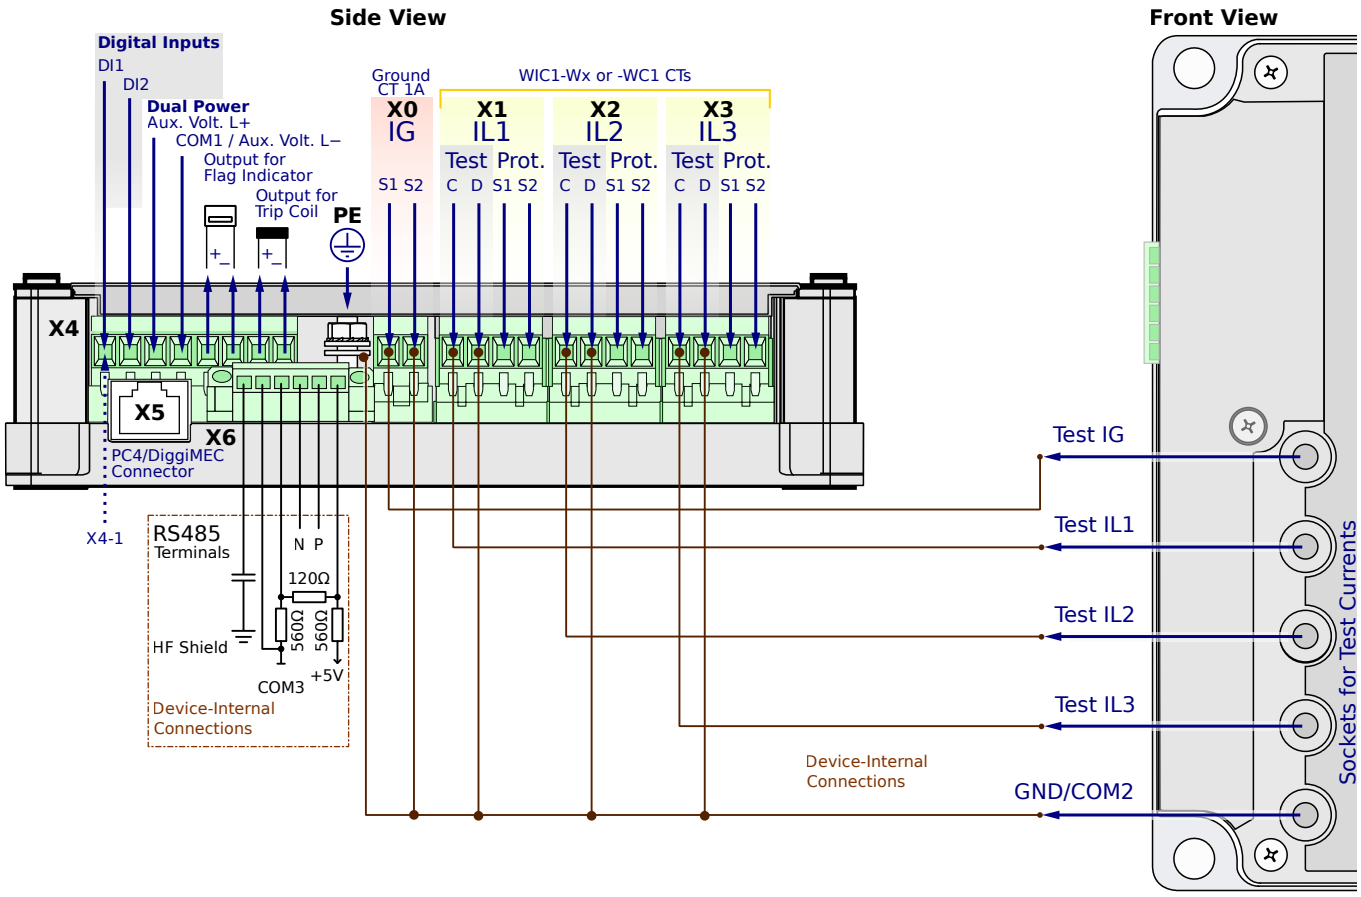


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2SBH

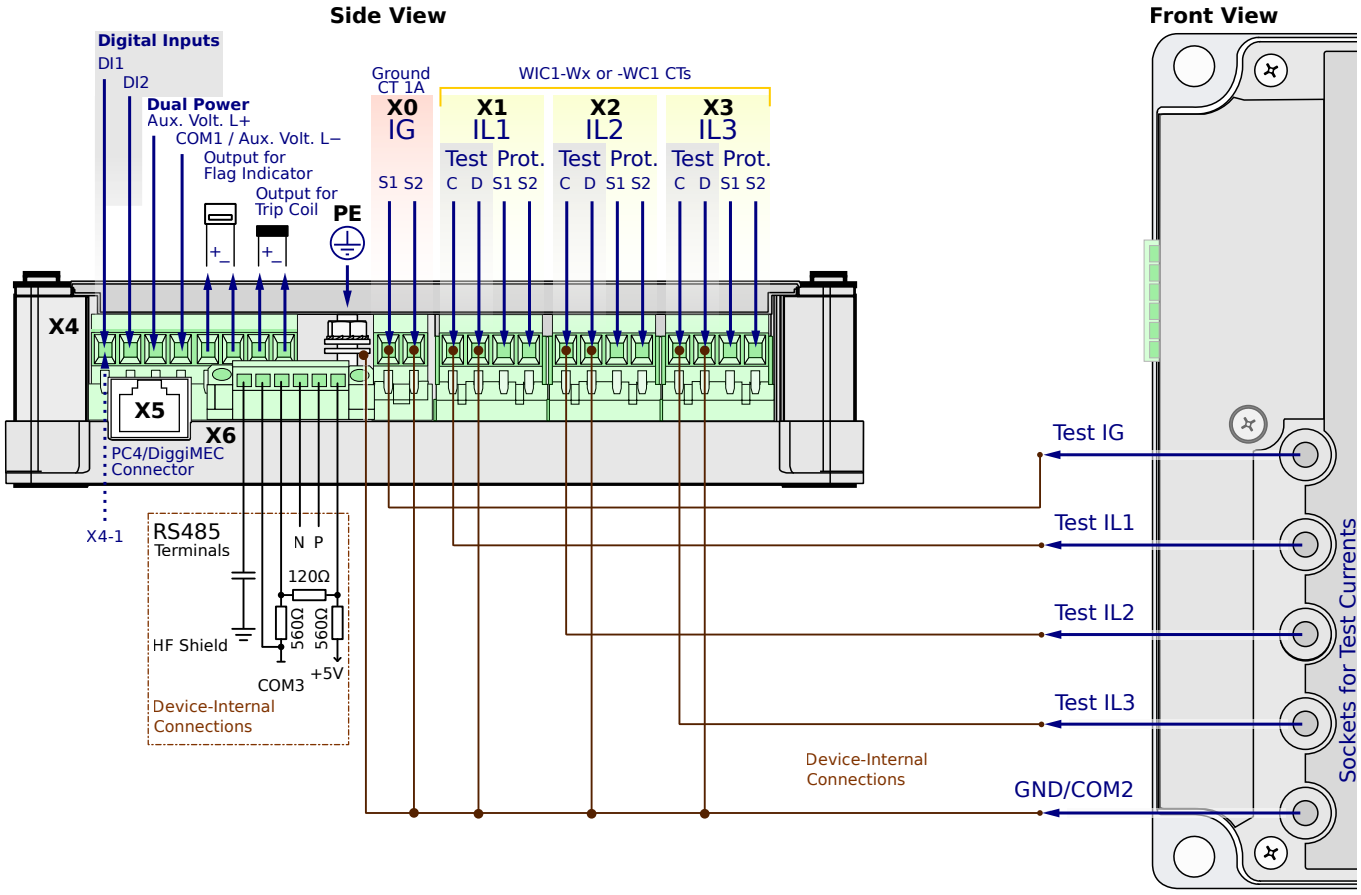


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2SC0

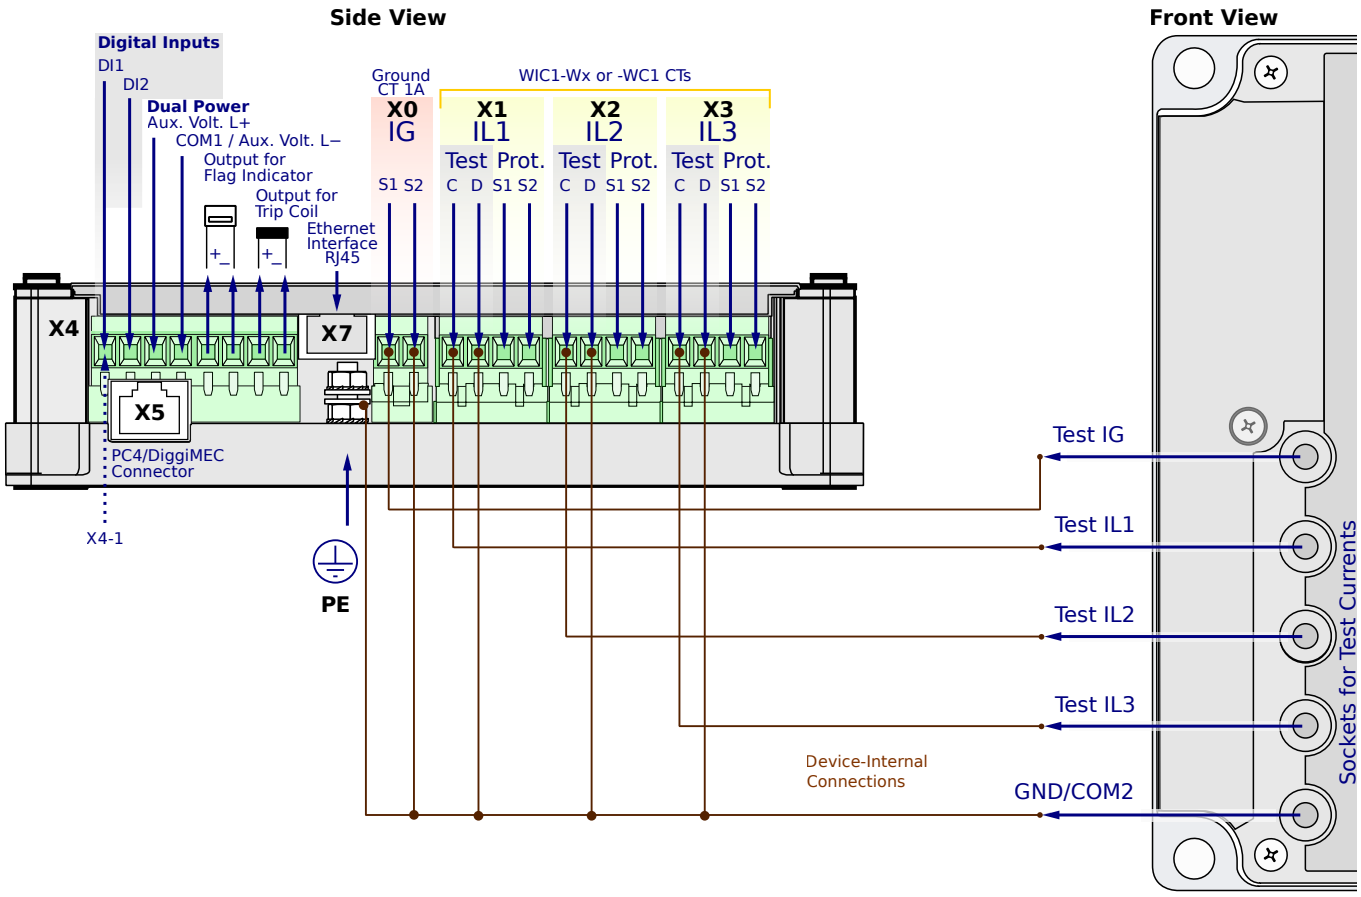


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2SCH

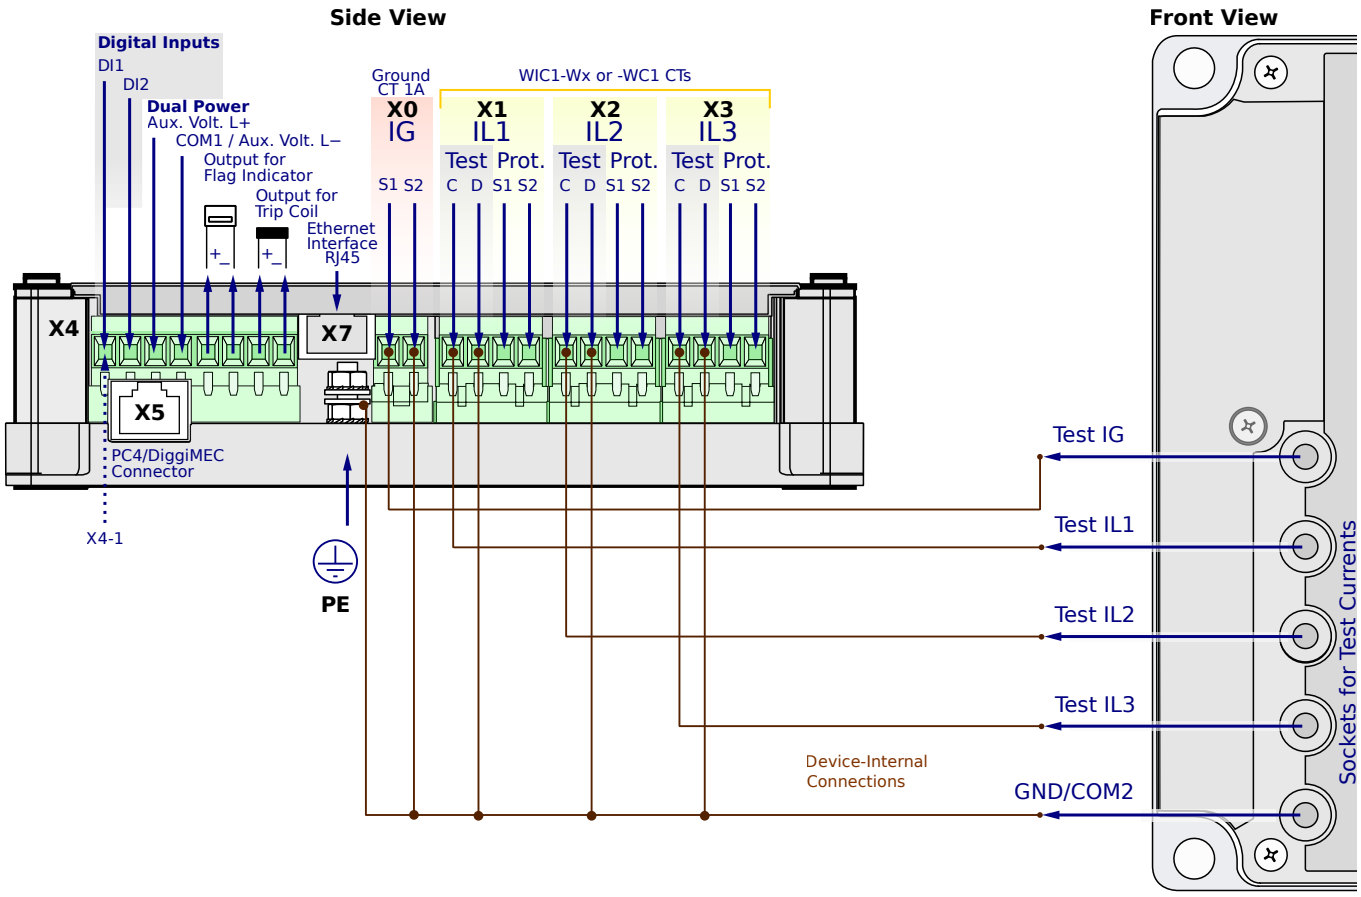


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2SL0

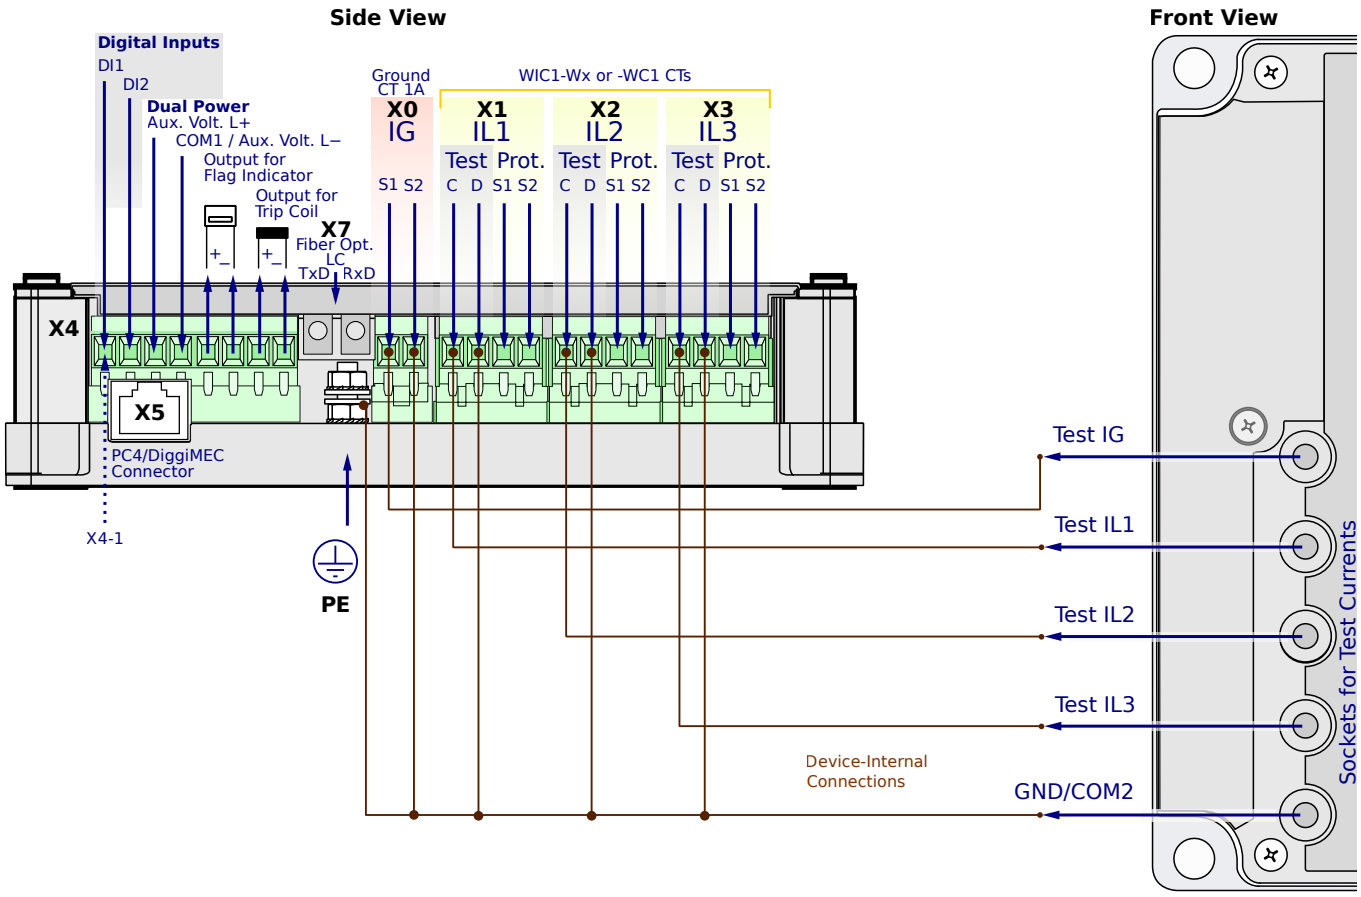


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2SLH

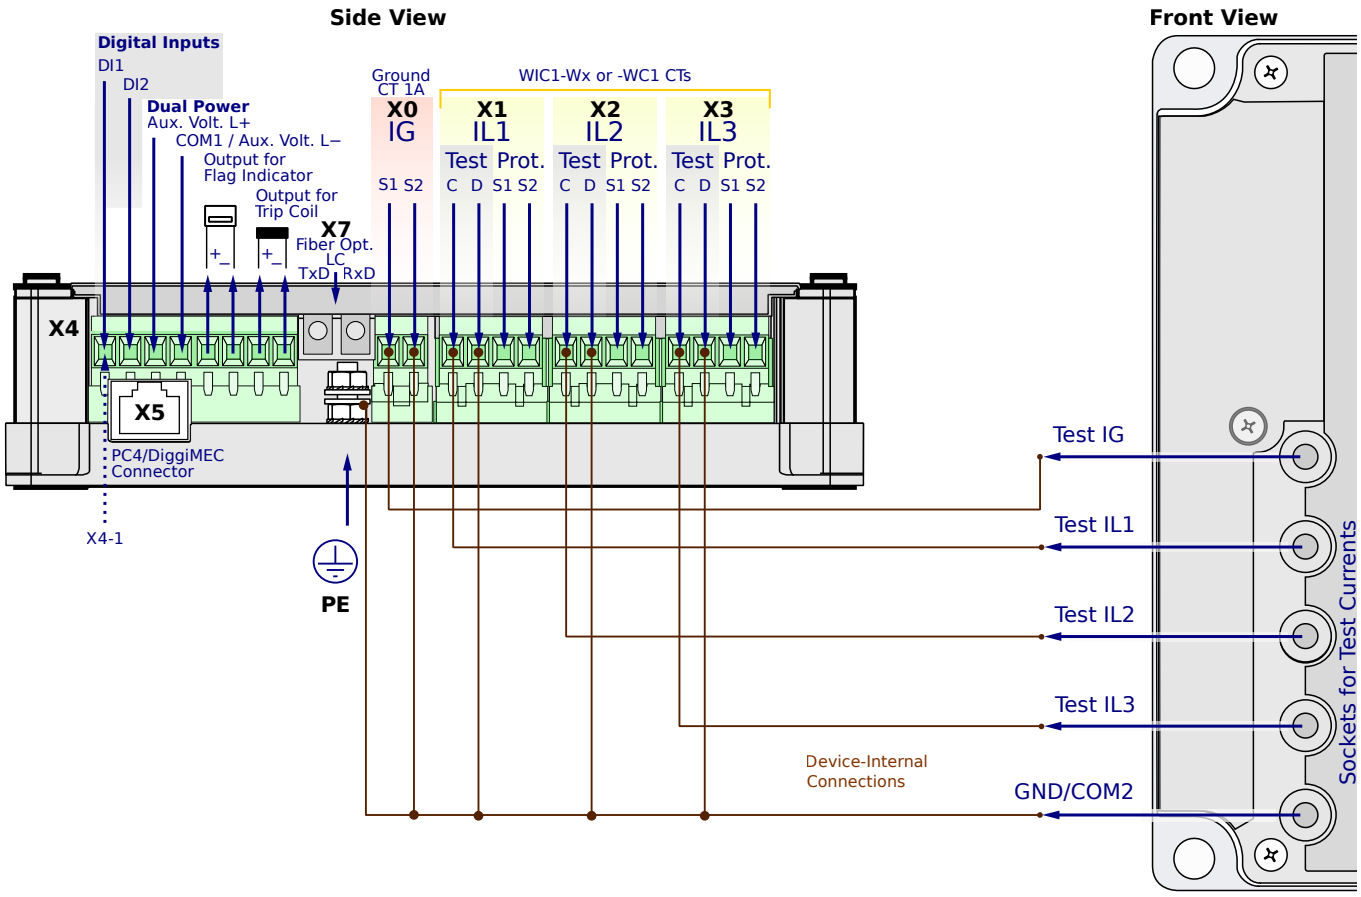


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2AA0

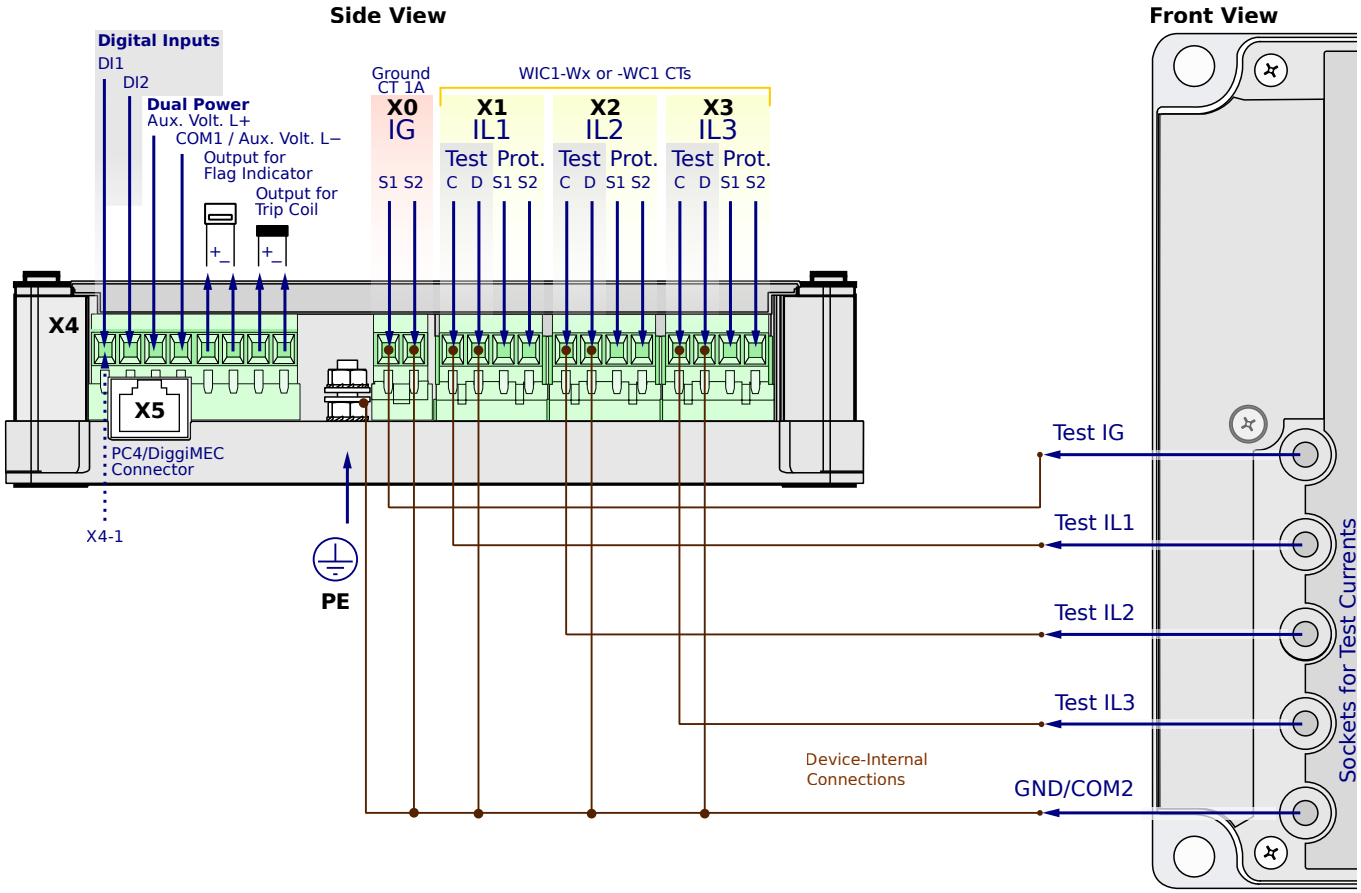


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2AAH

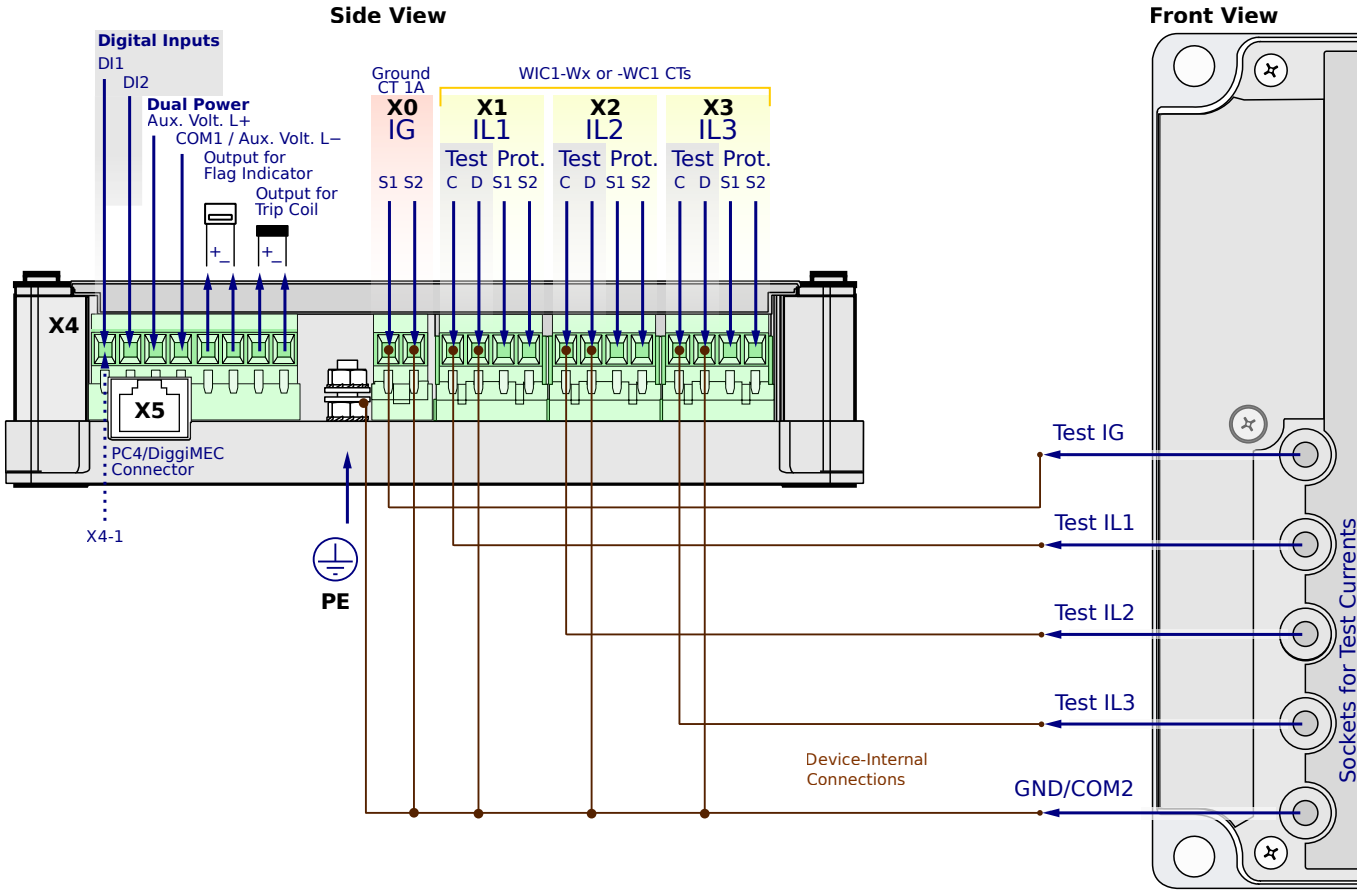


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2AB0

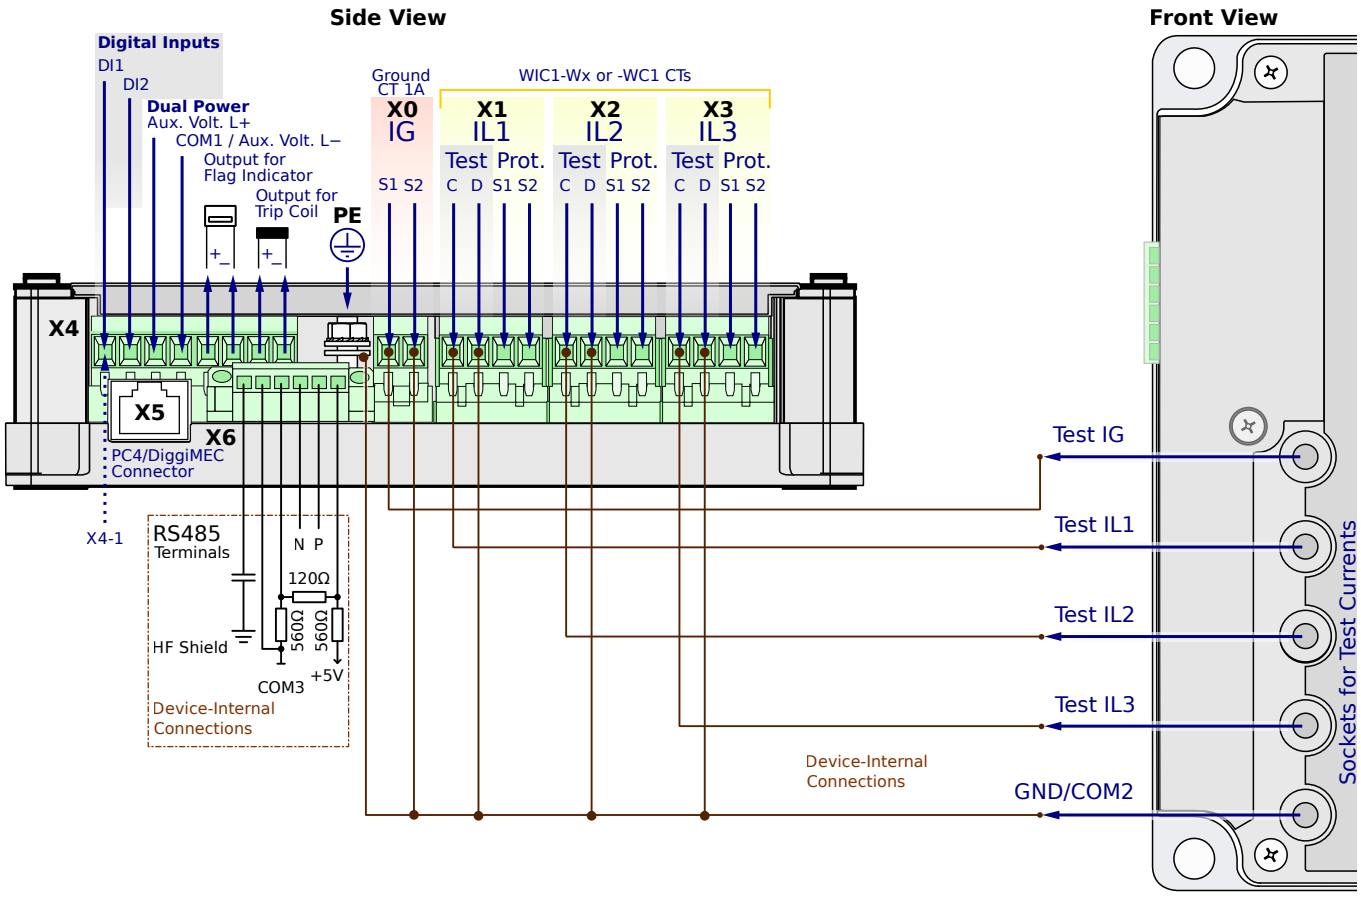


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2ABH

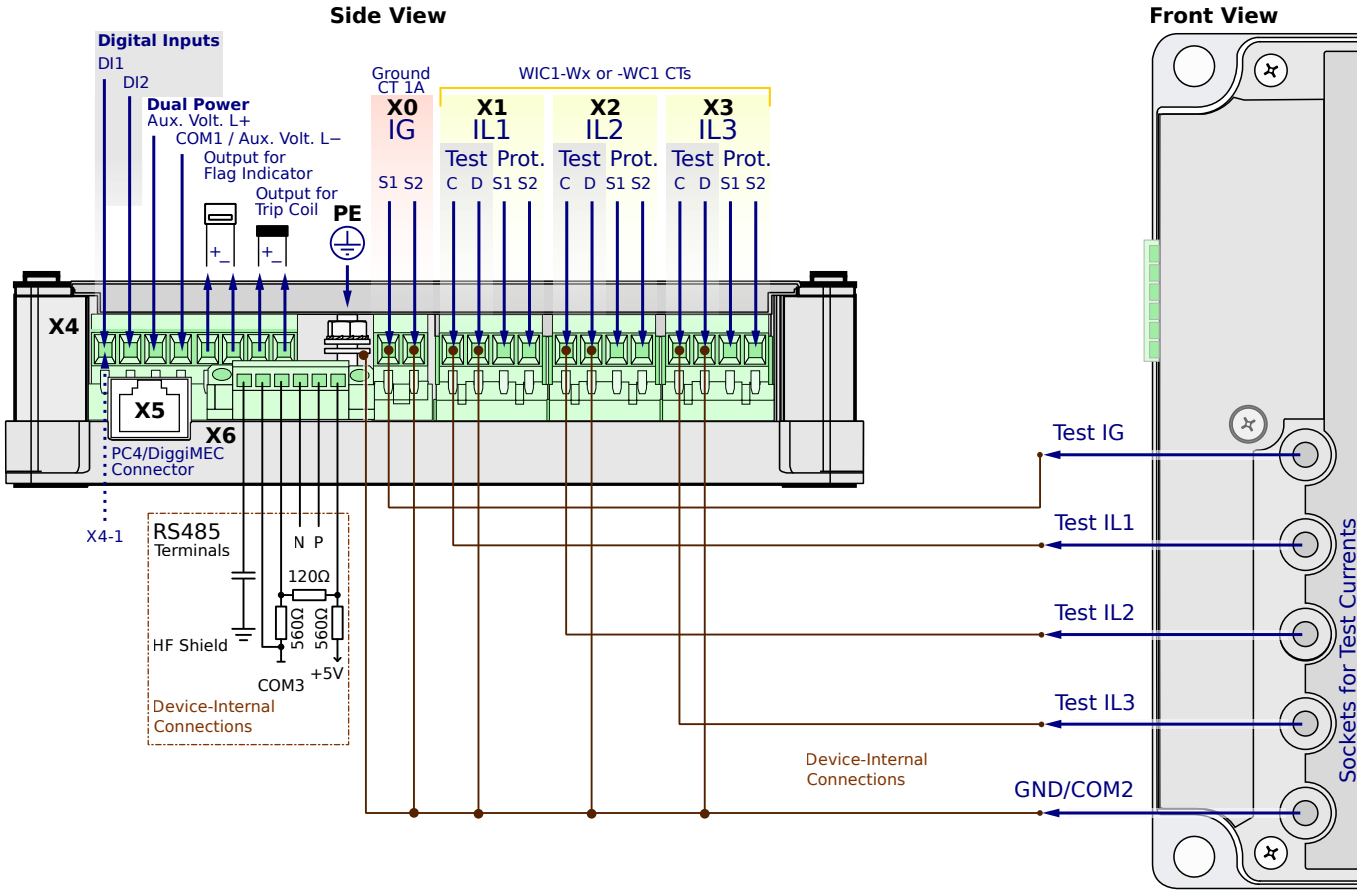


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2AC0

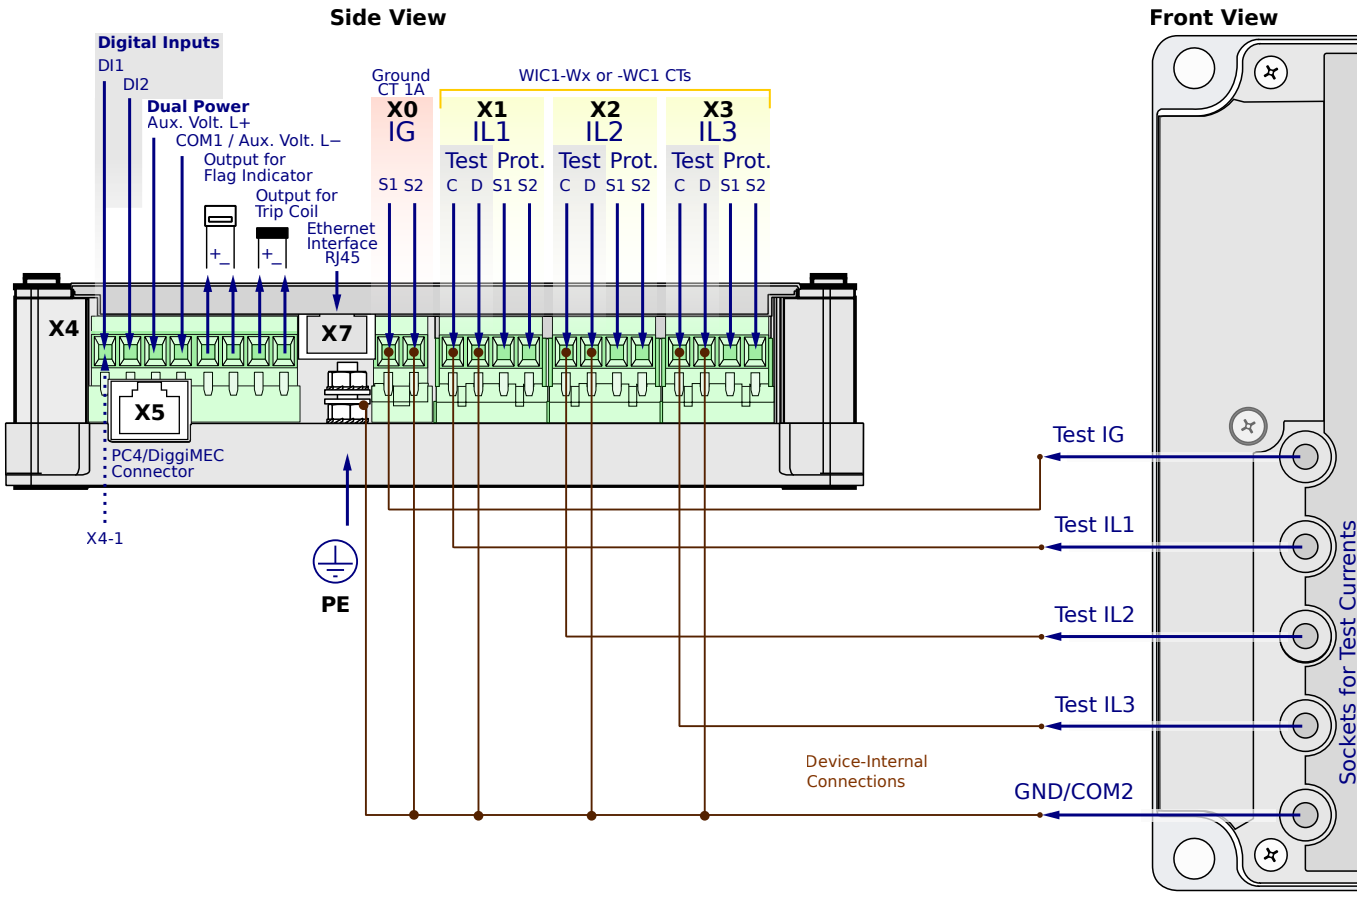


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2ACH

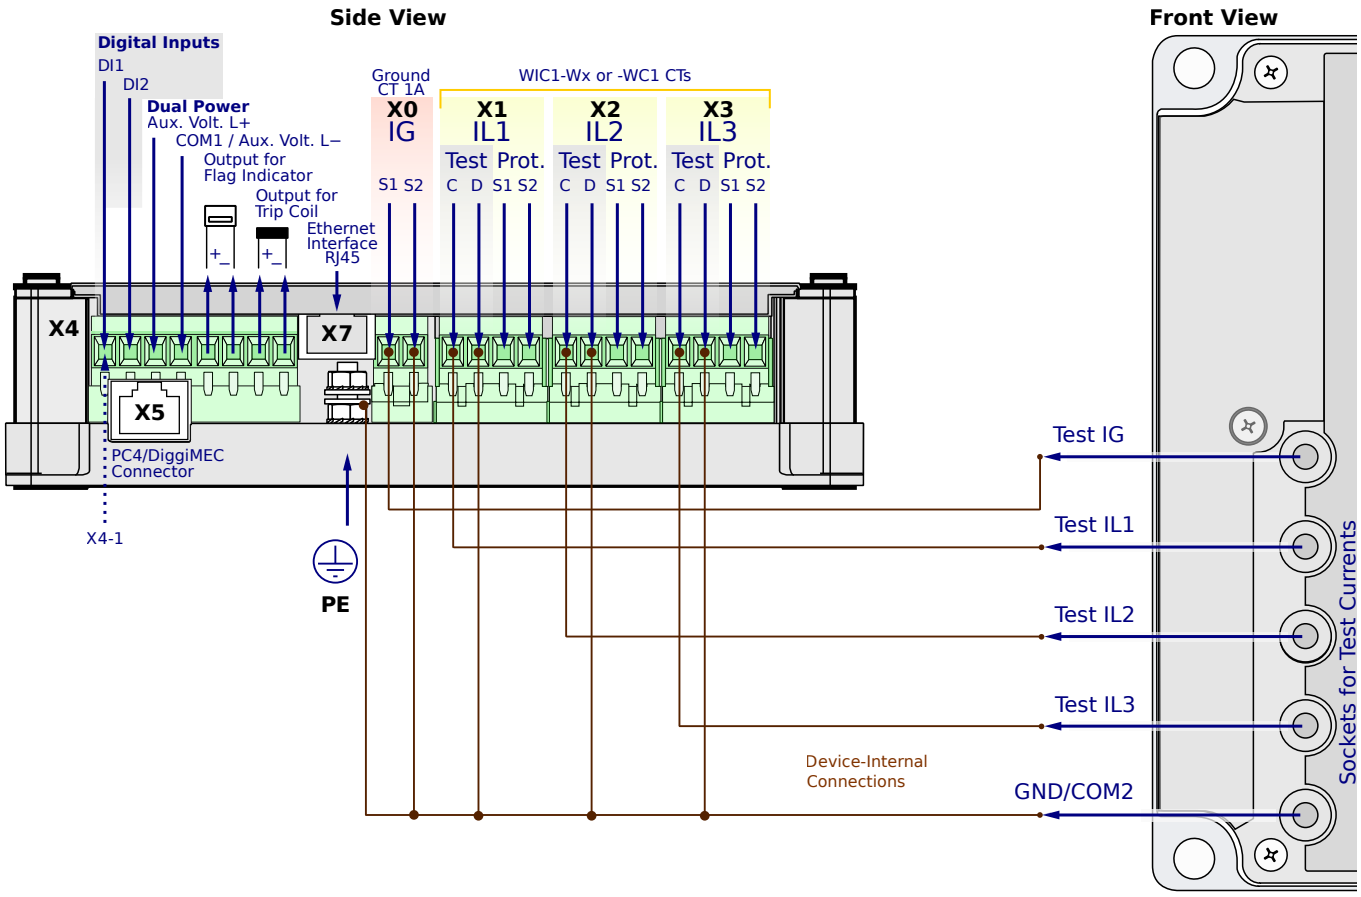


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2AL0

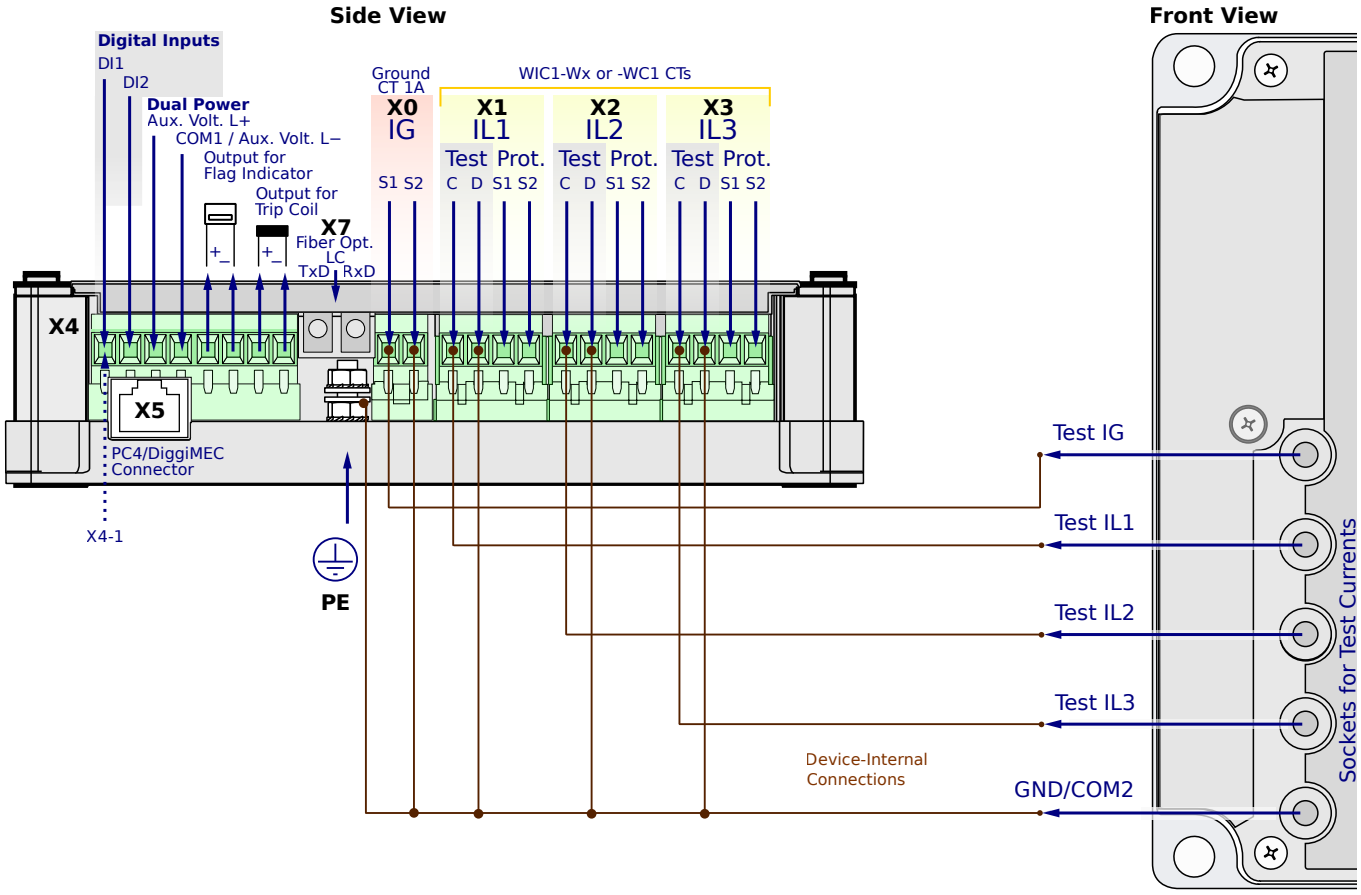


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2ALH

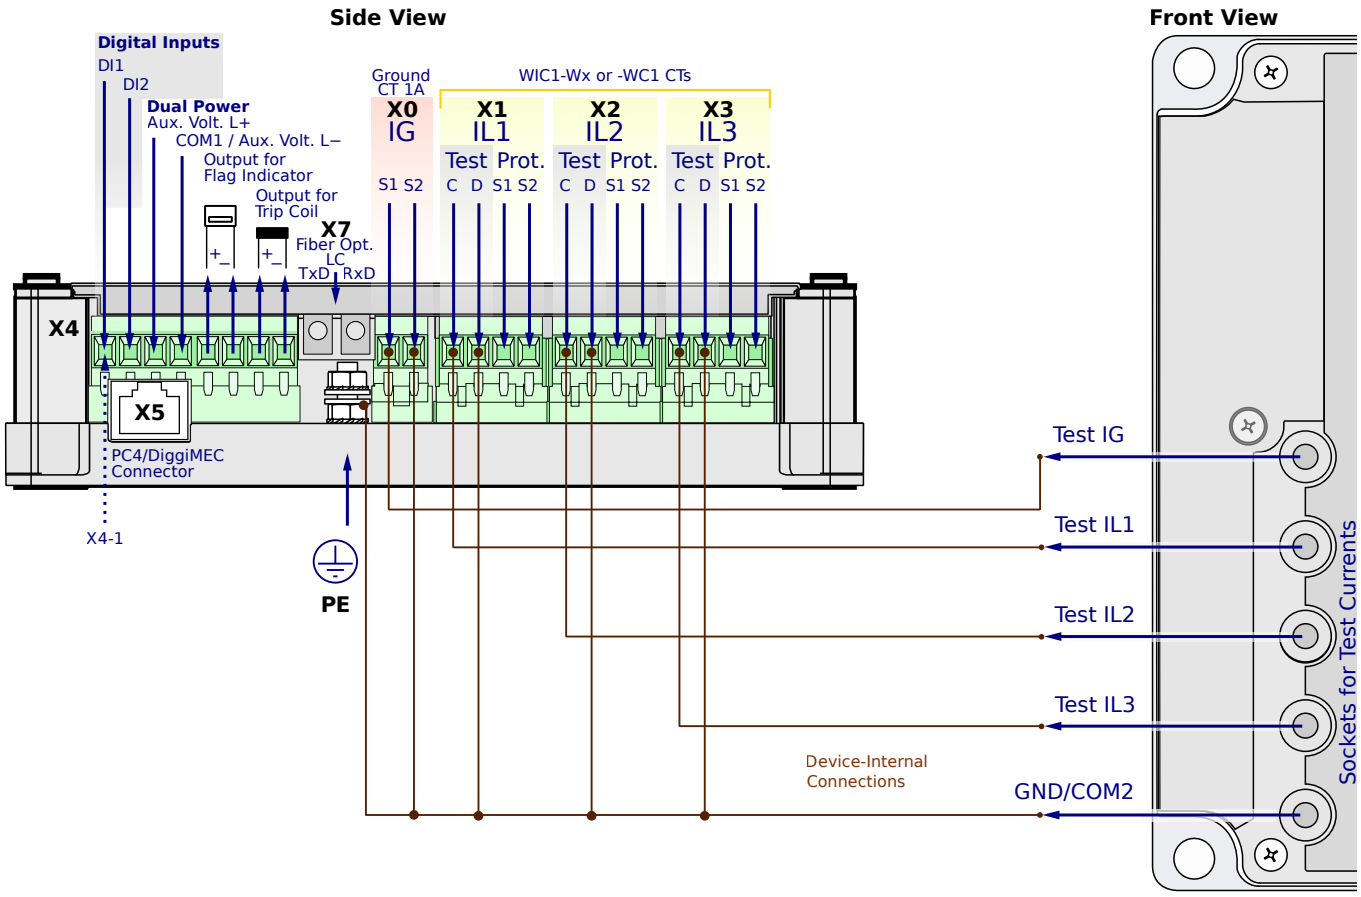


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2PA0

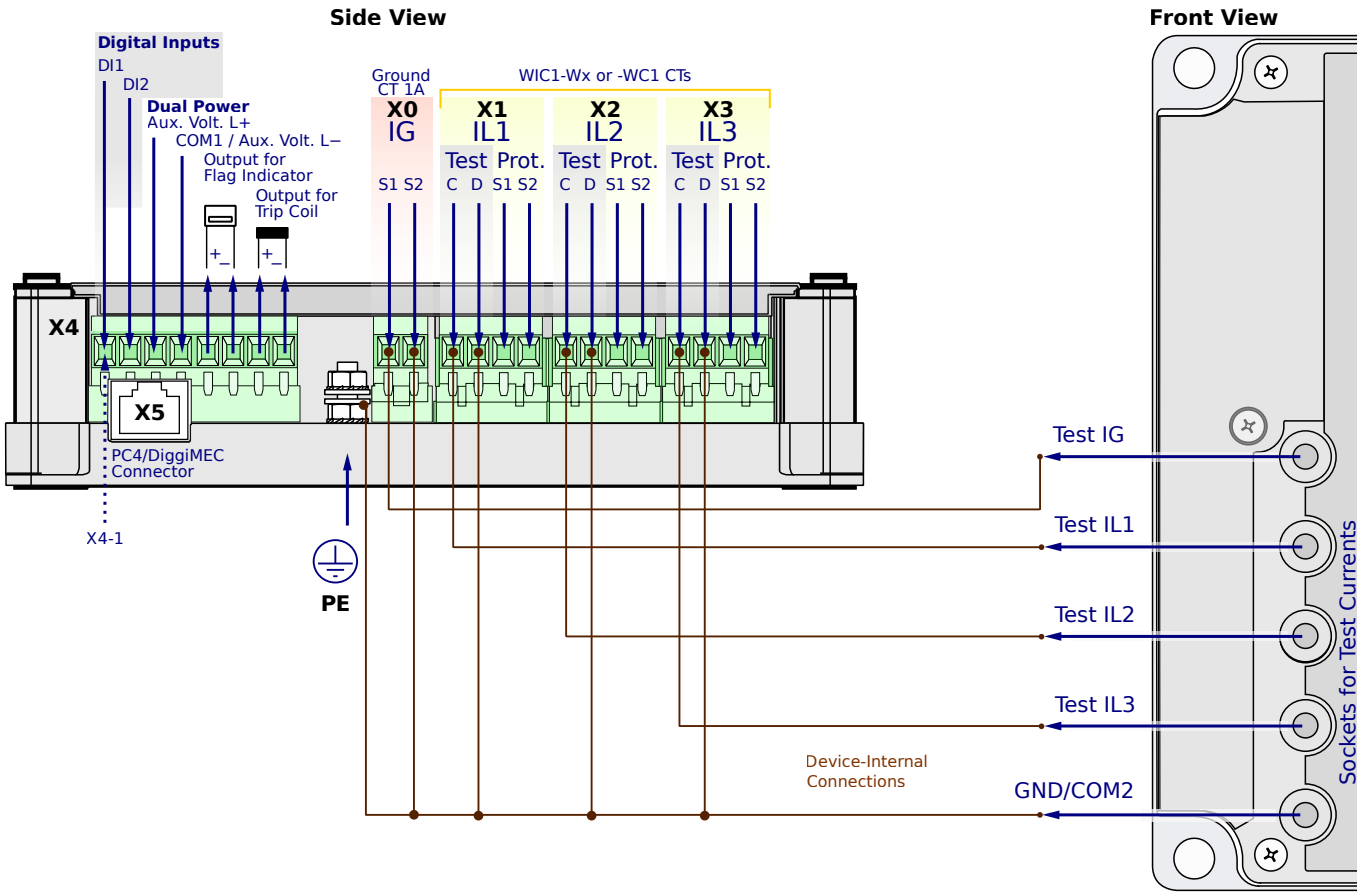


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2PAH

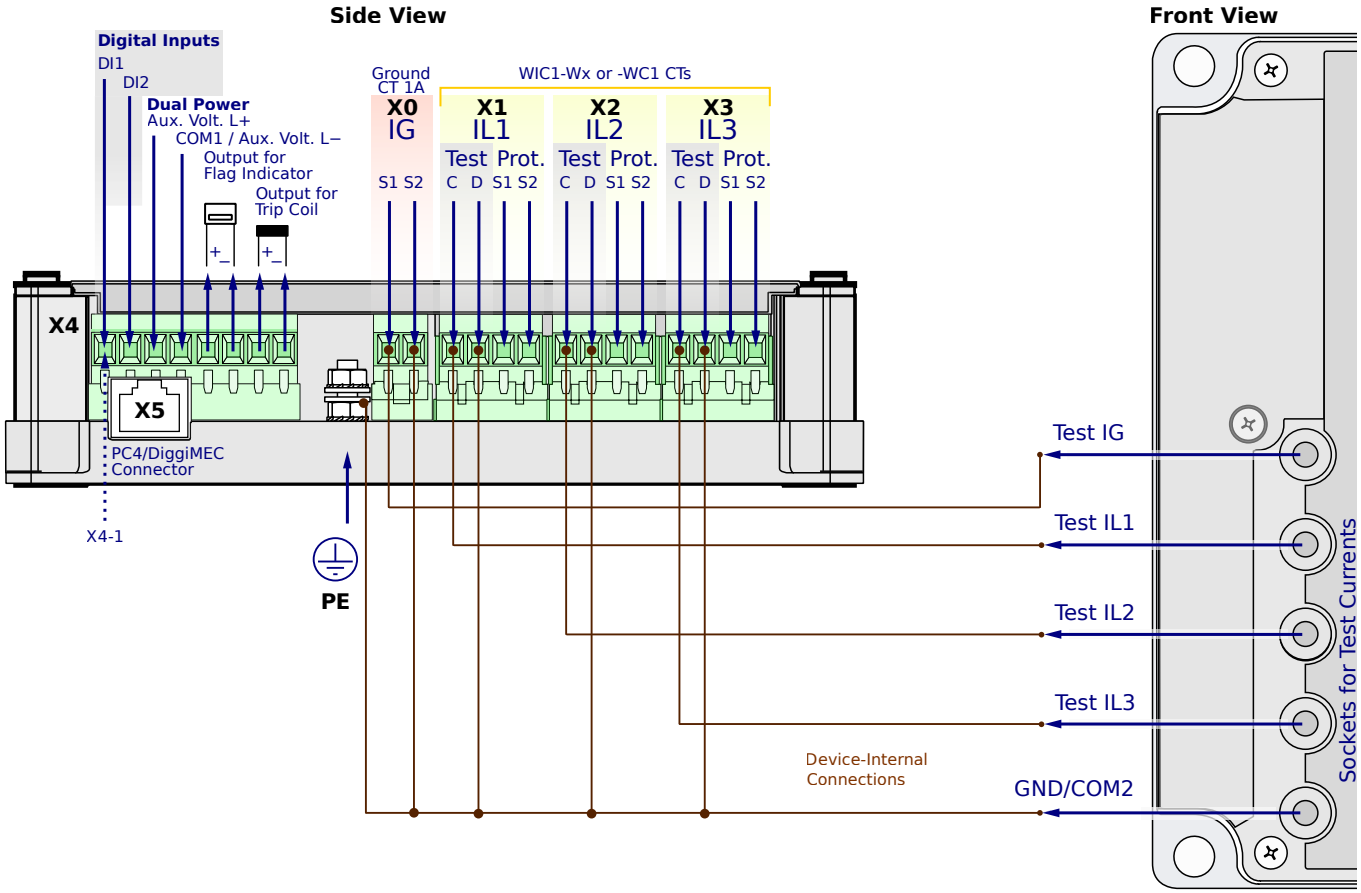


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0FD2PB0

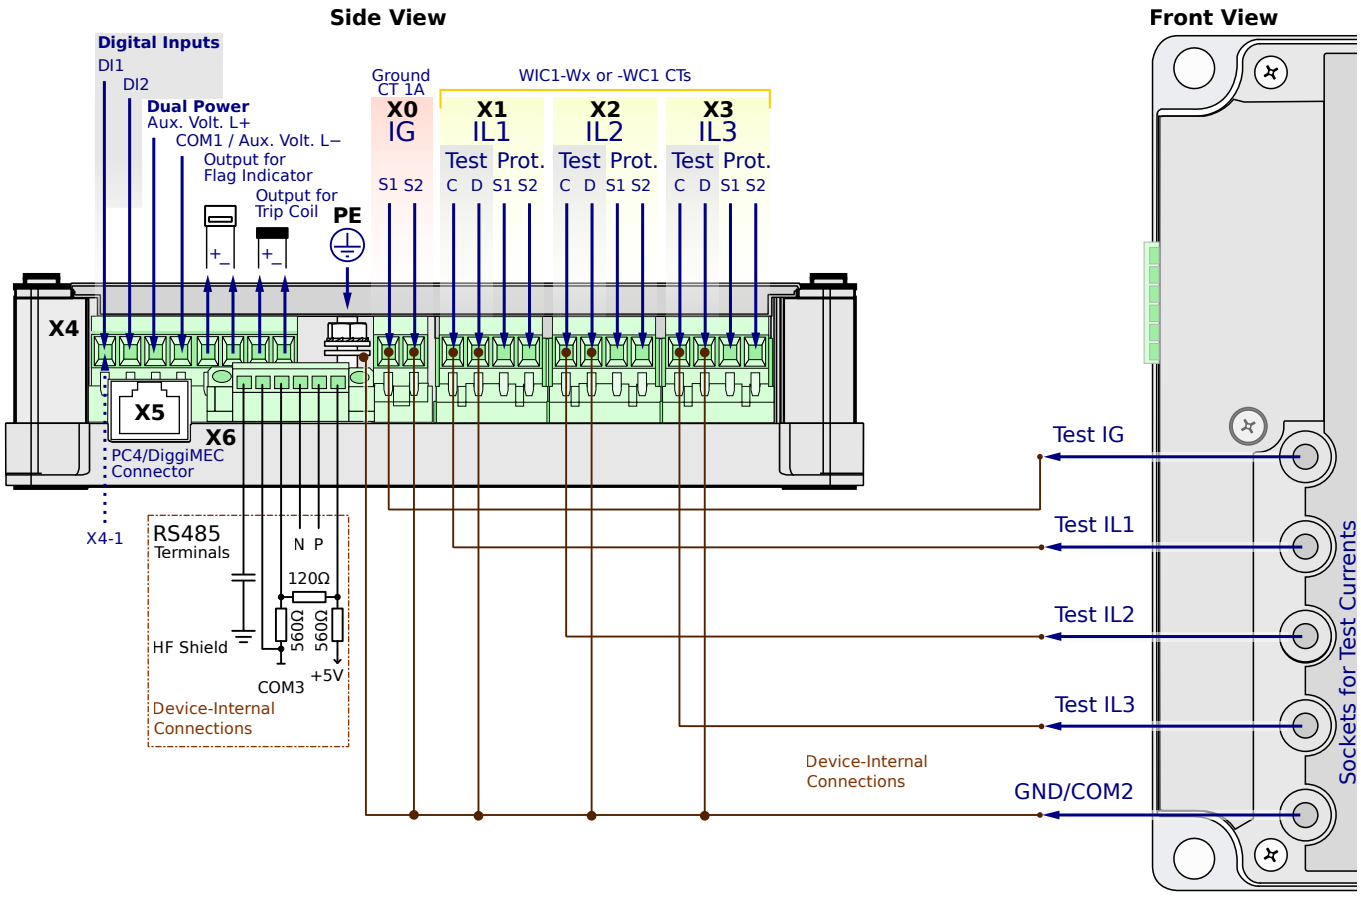


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2PBH

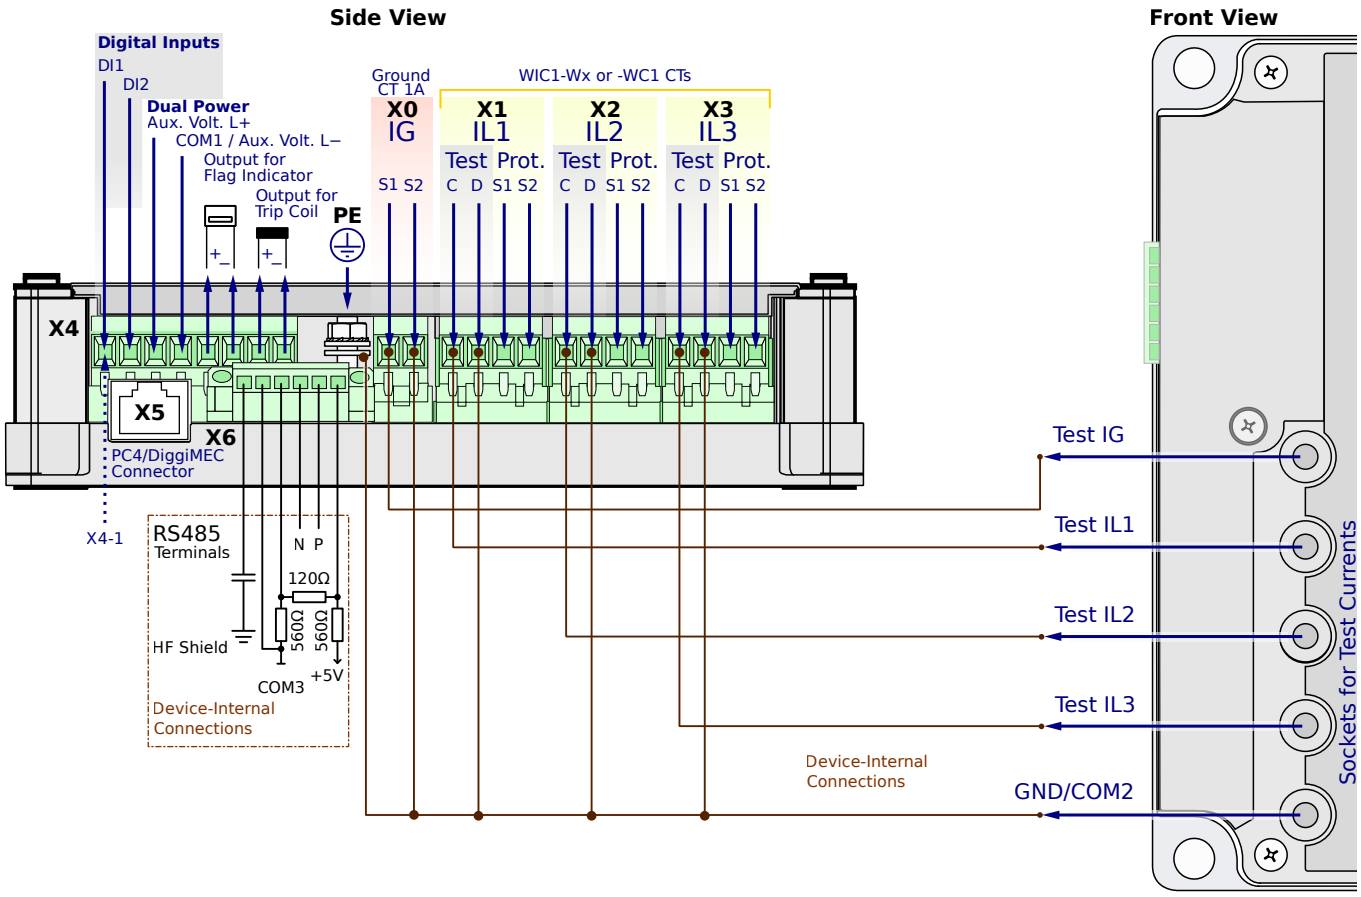


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0FD2PC0

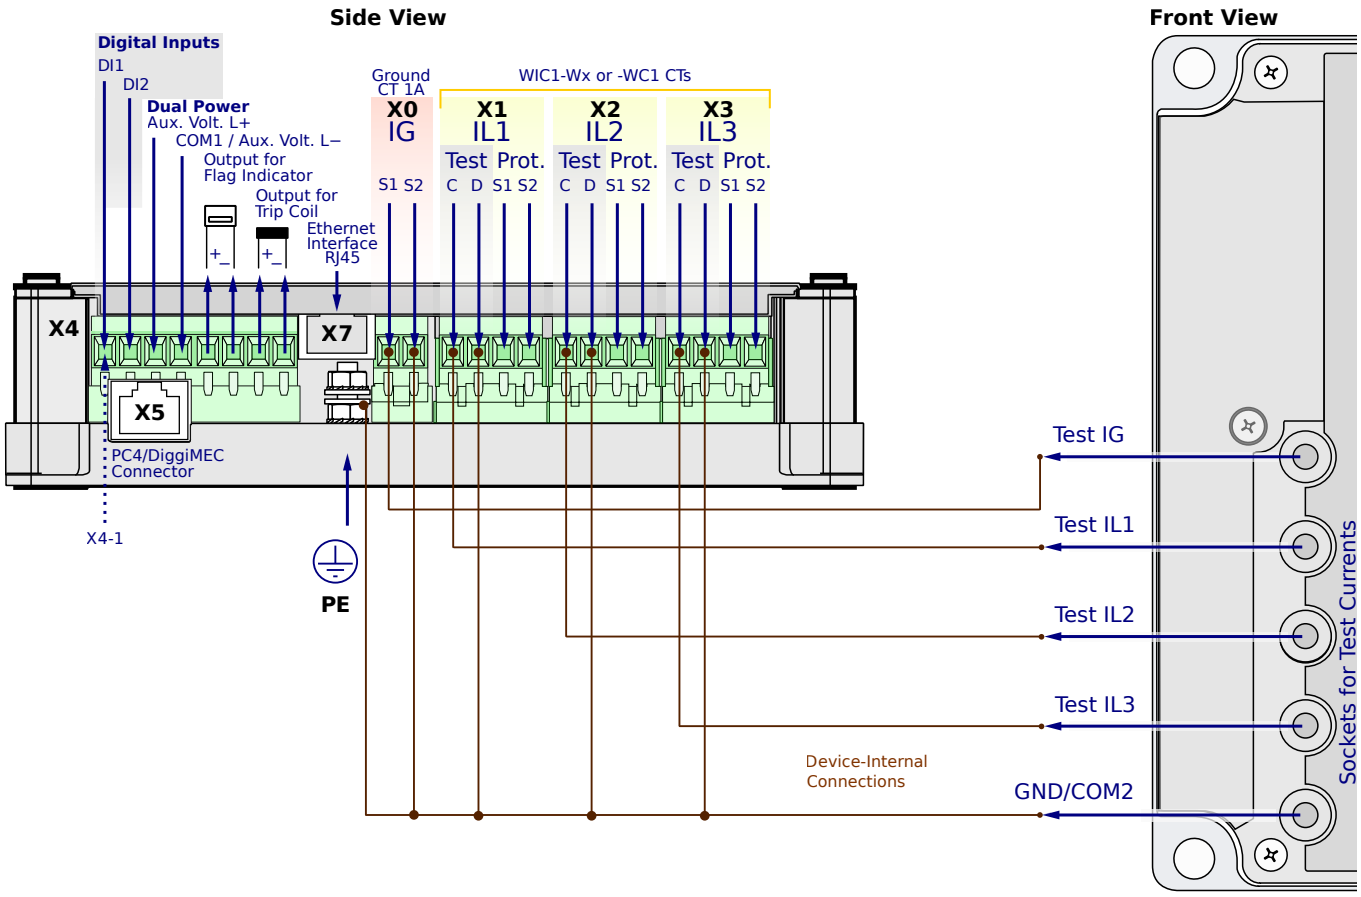


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2PCH

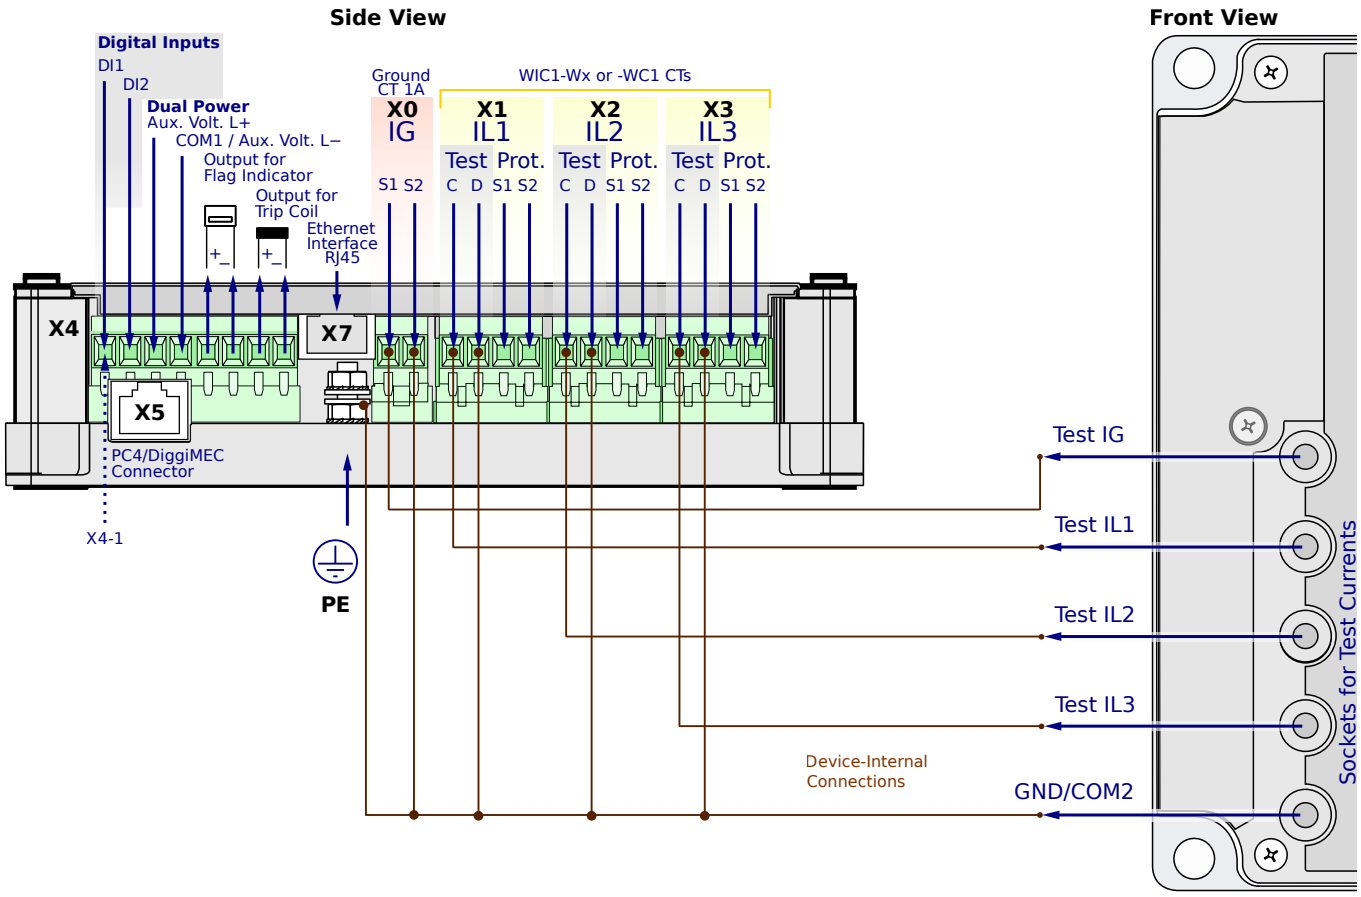


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0FD2PL0

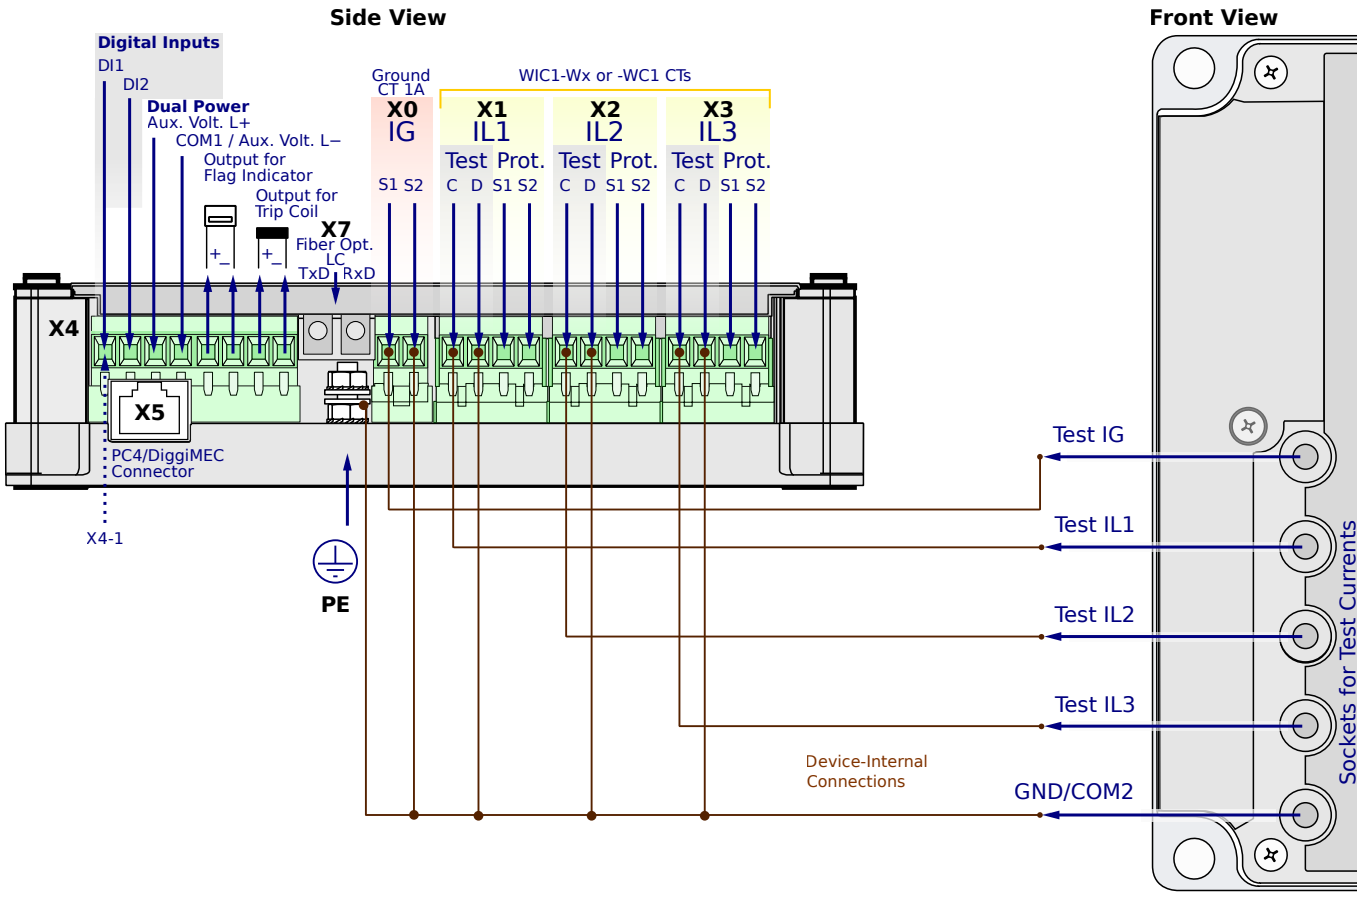


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0FD2PLH

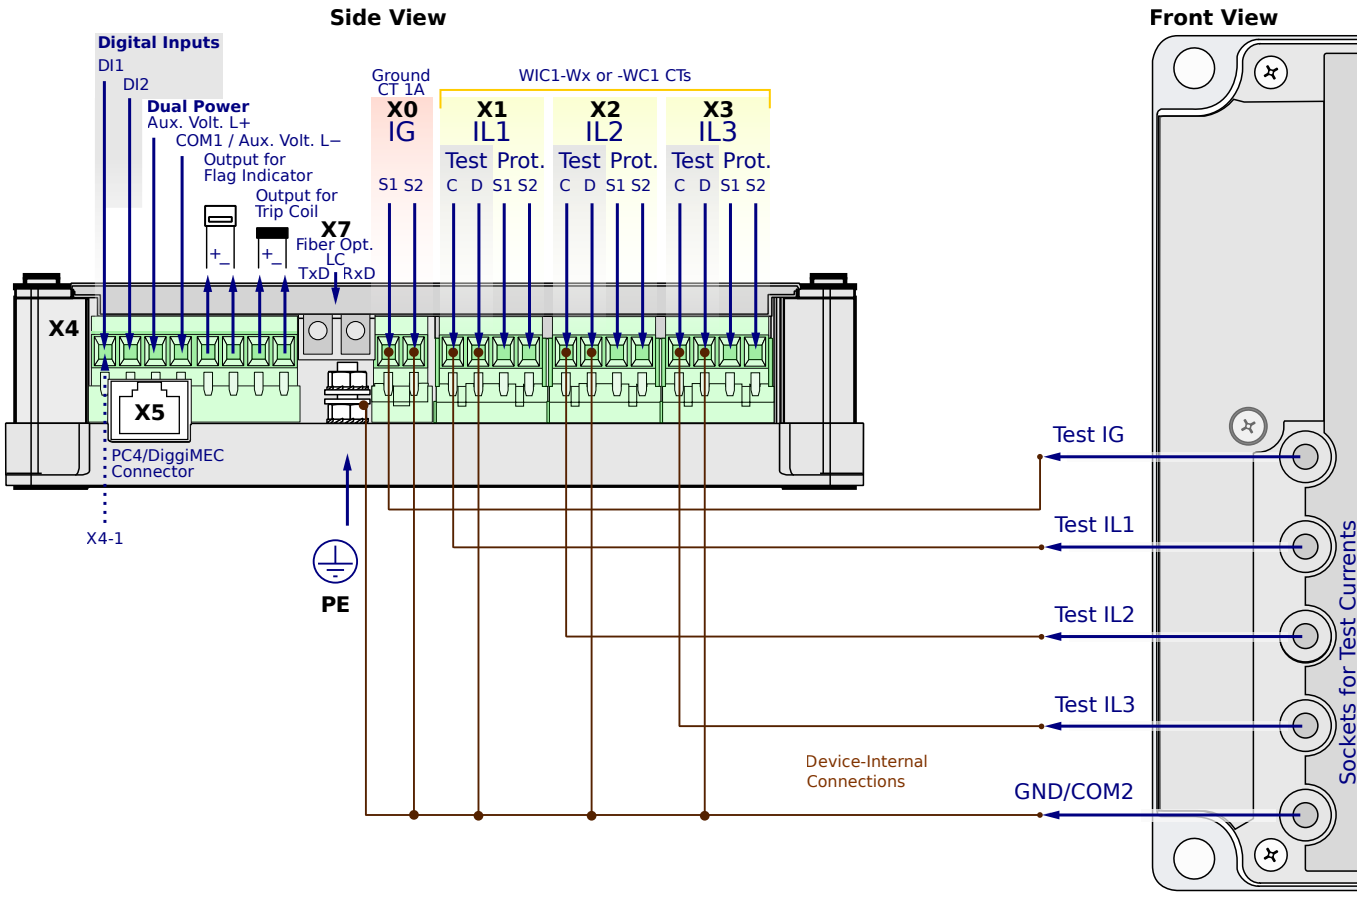


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1SA0

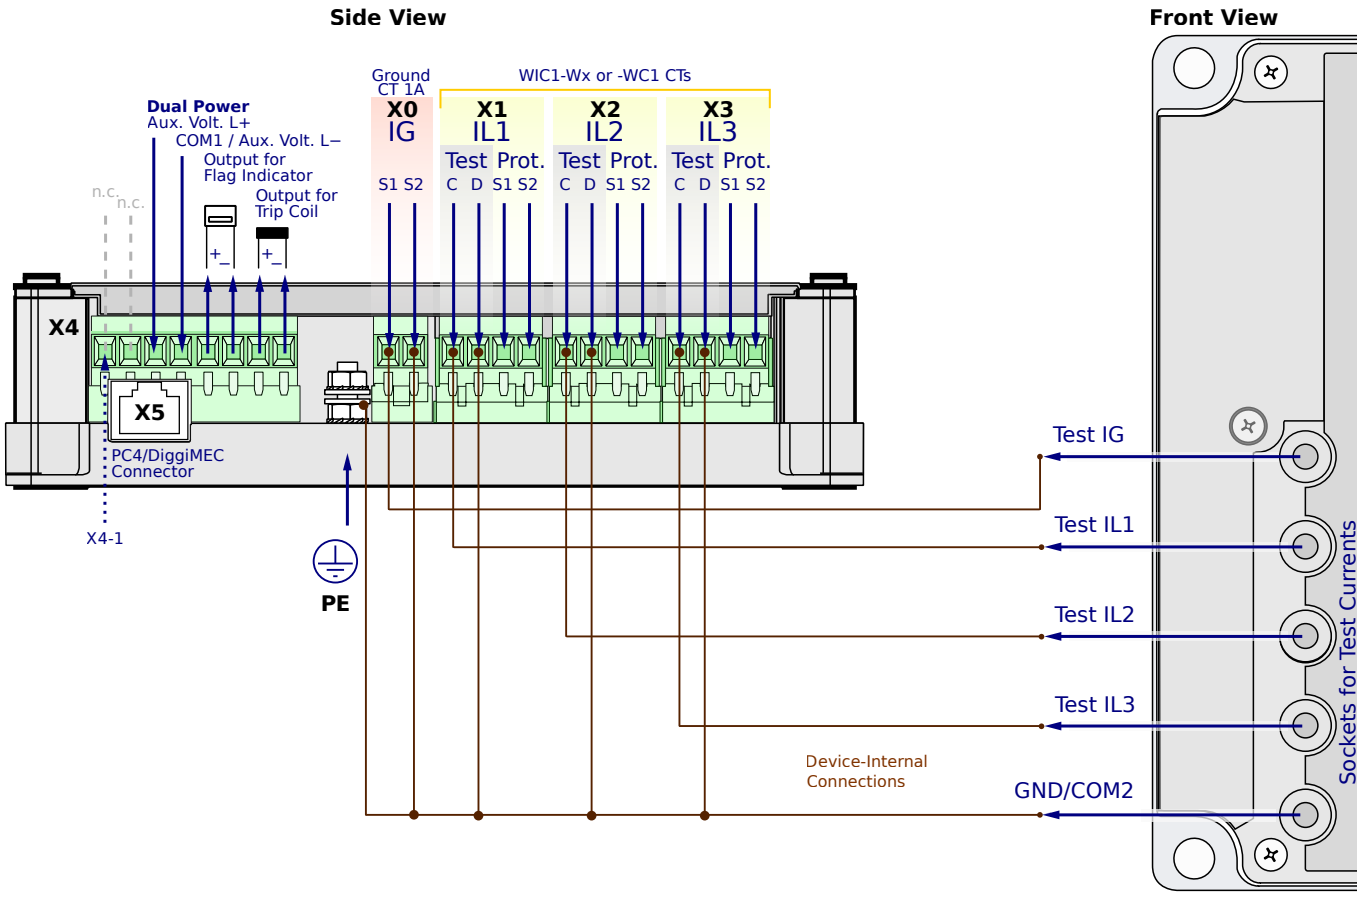


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1SAH

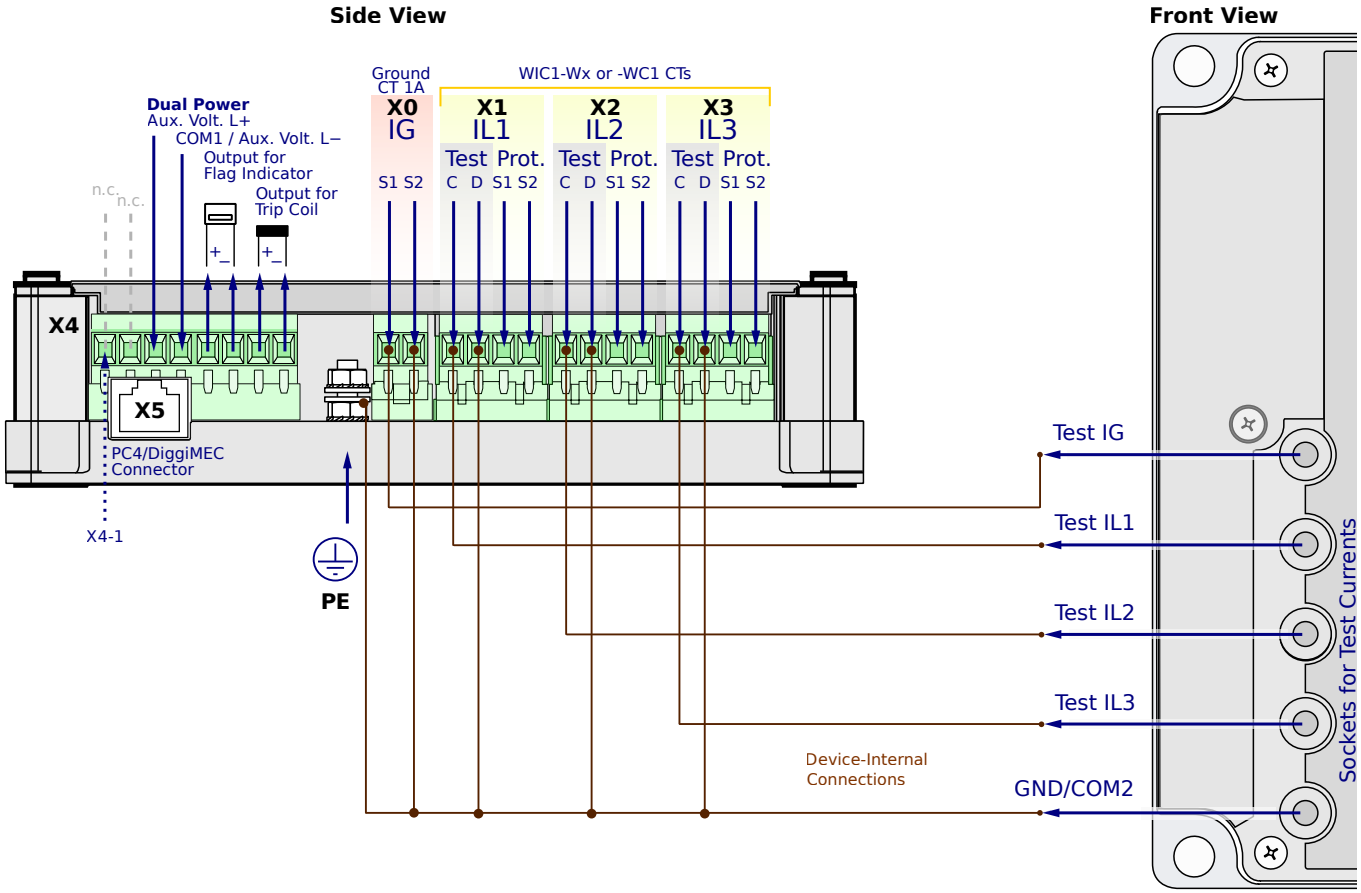


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1SB0

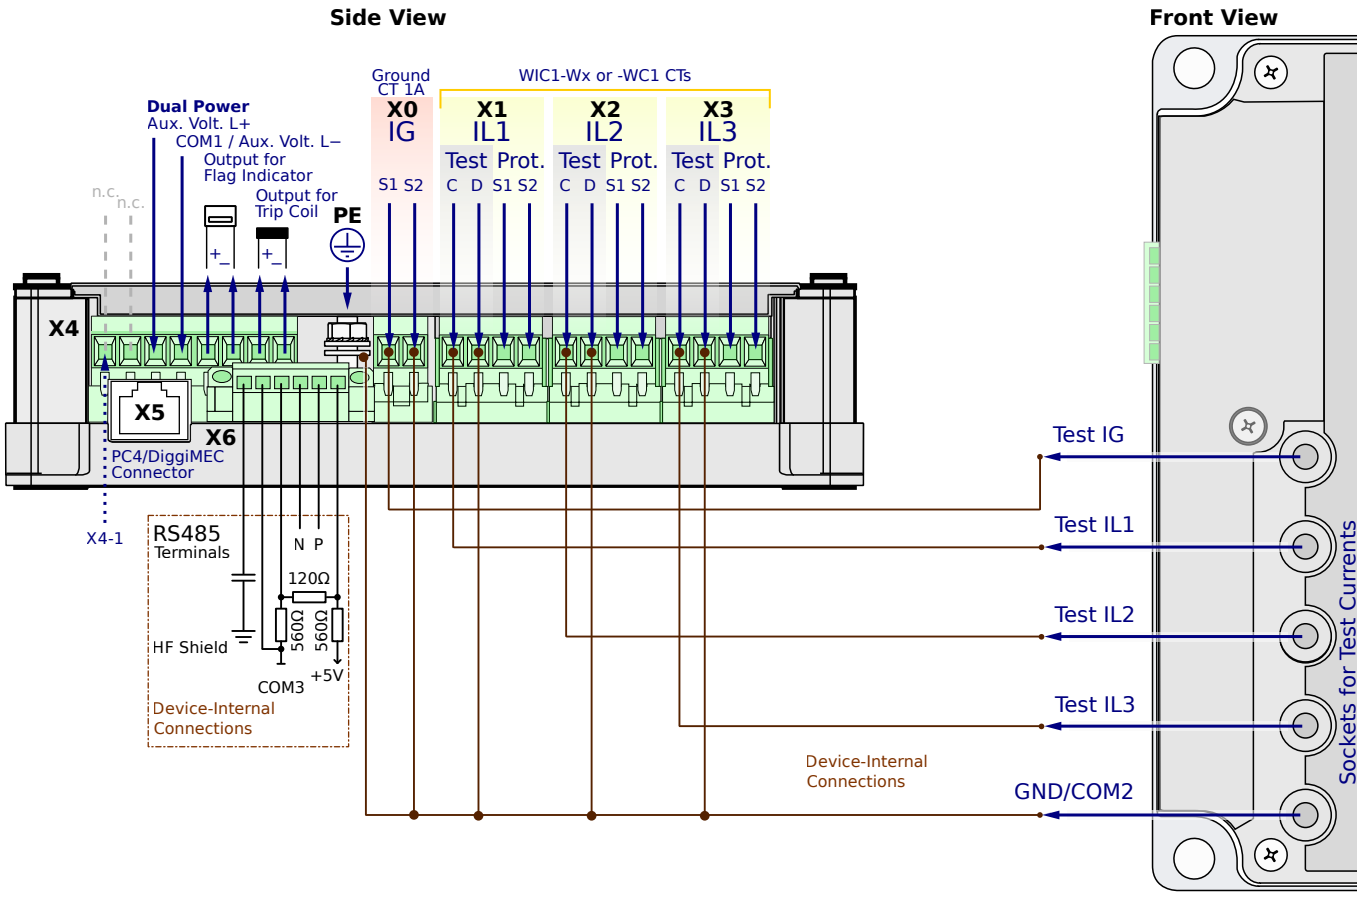


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1SBH

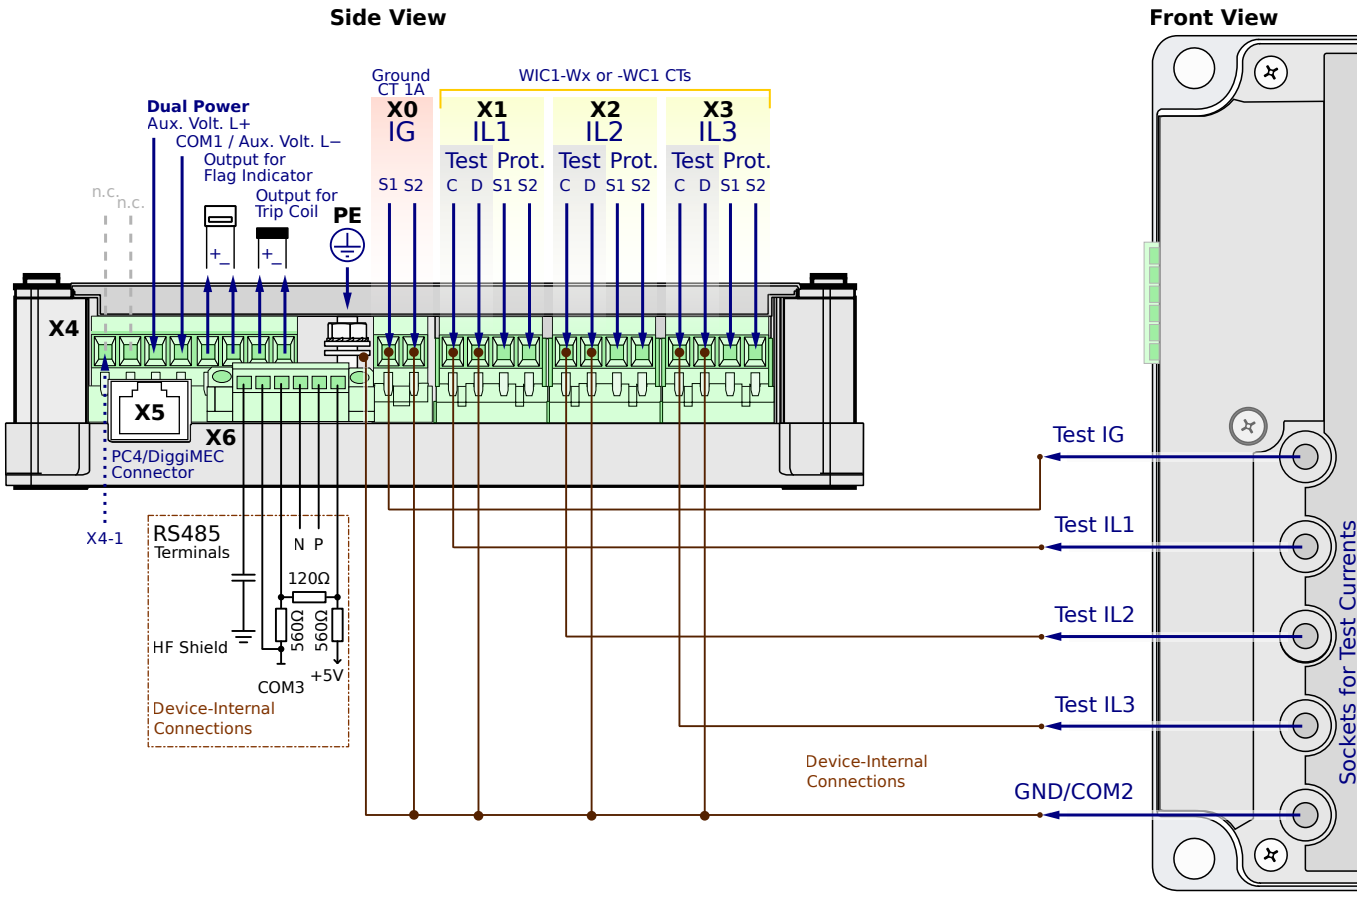


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1SC0

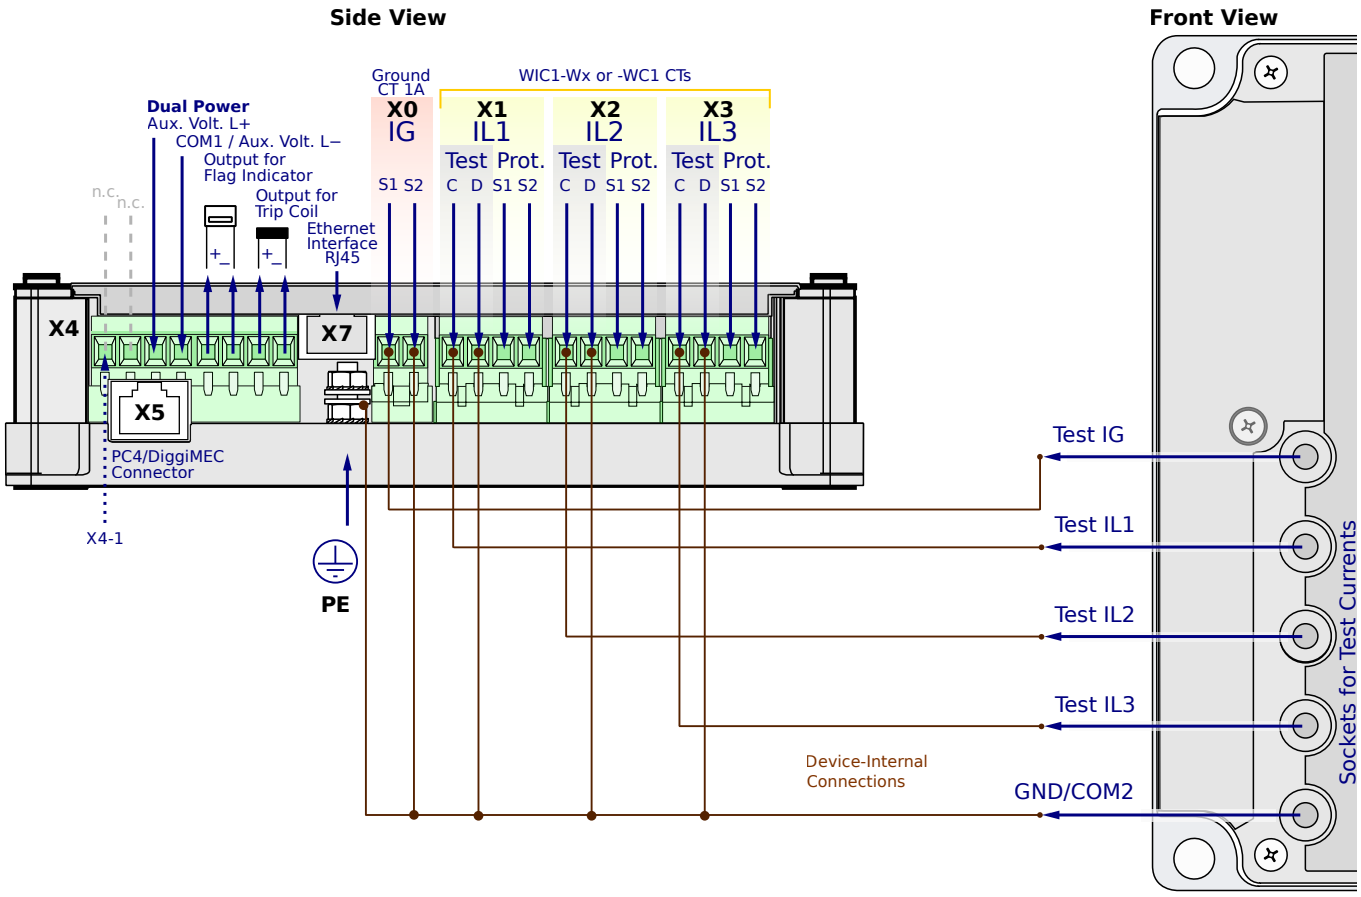


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1SCH

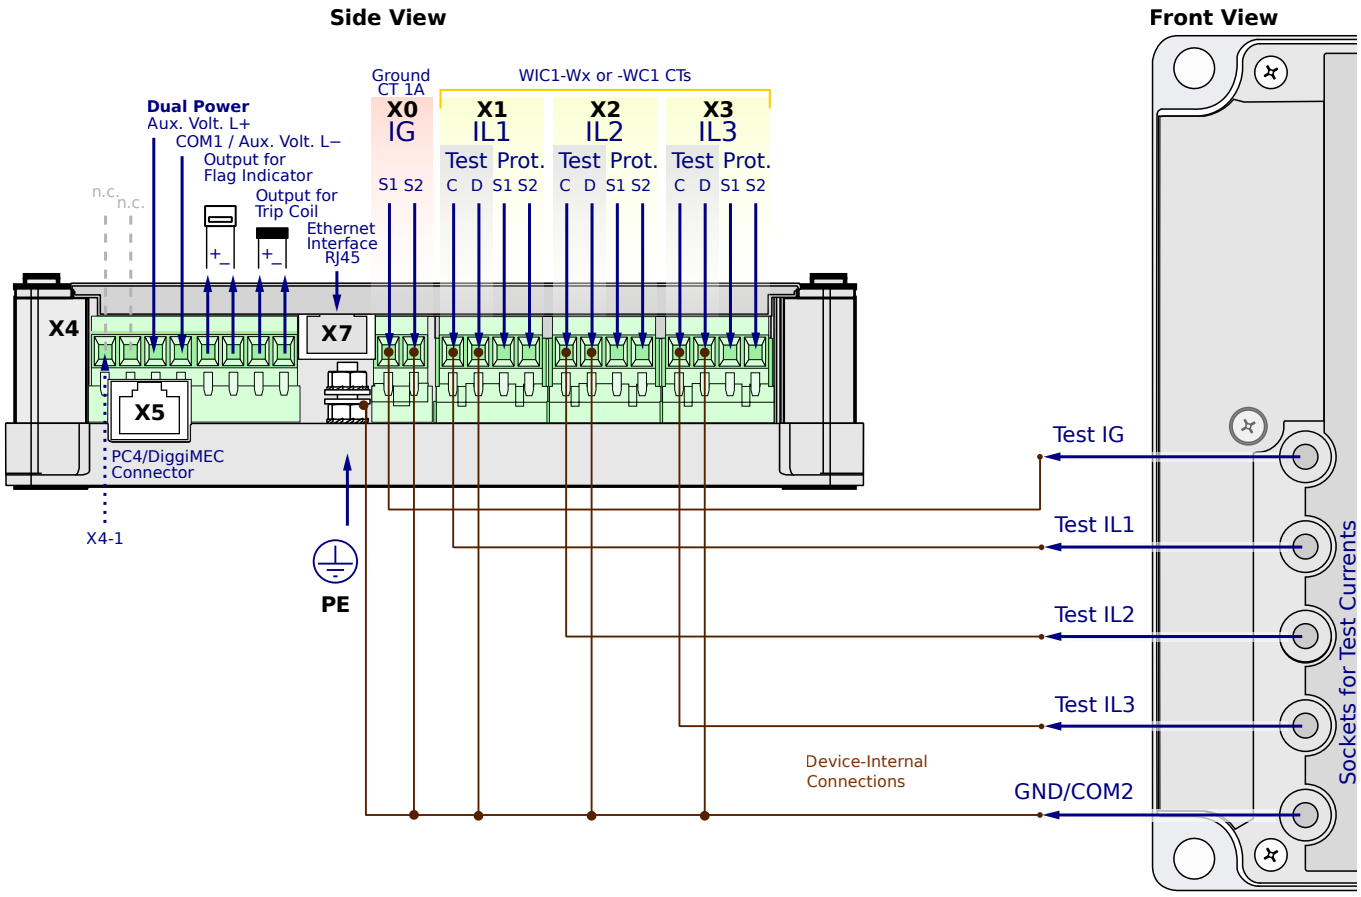


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1SL0

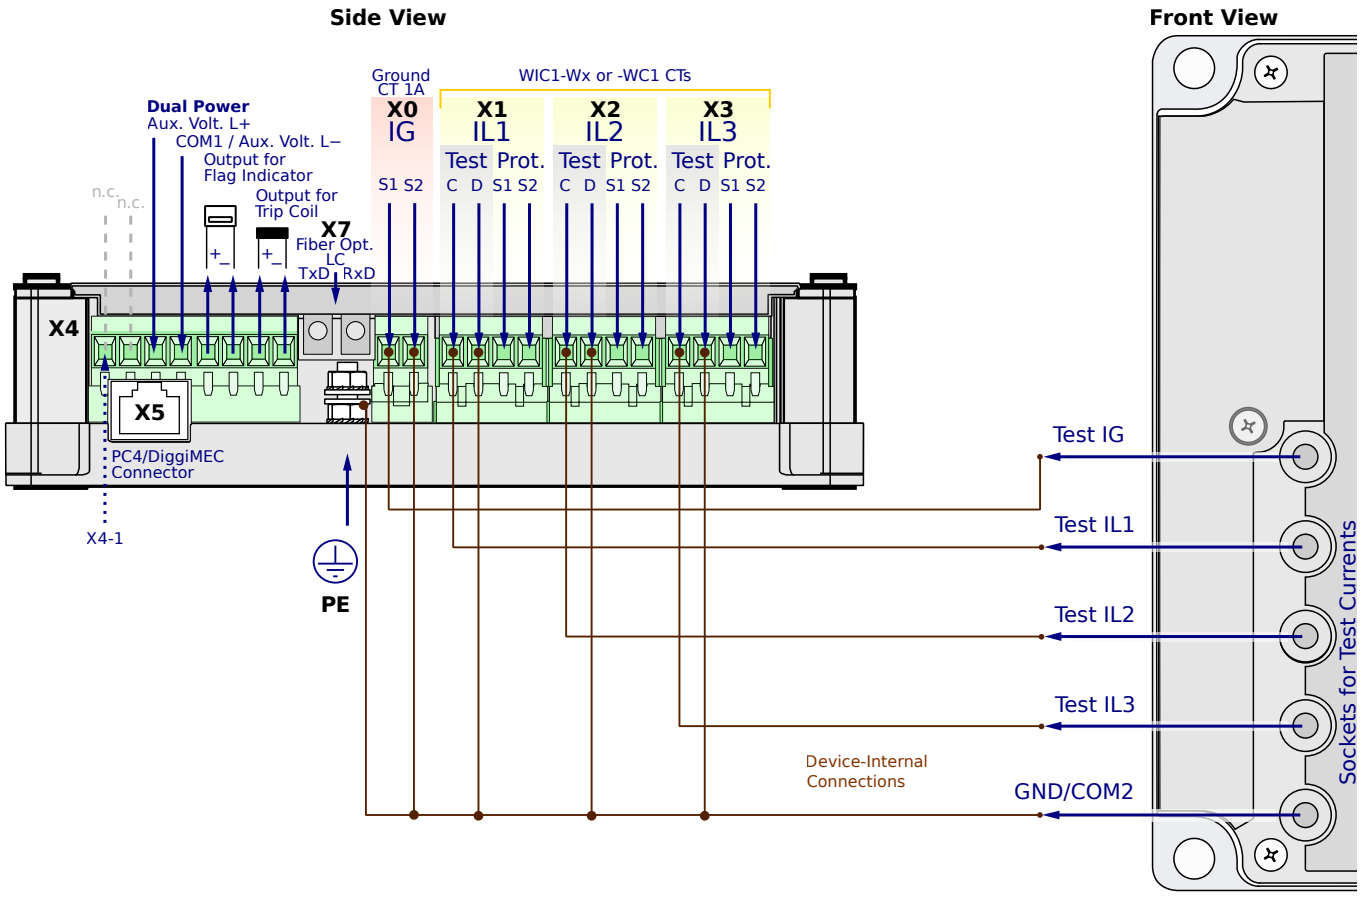


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1SLH

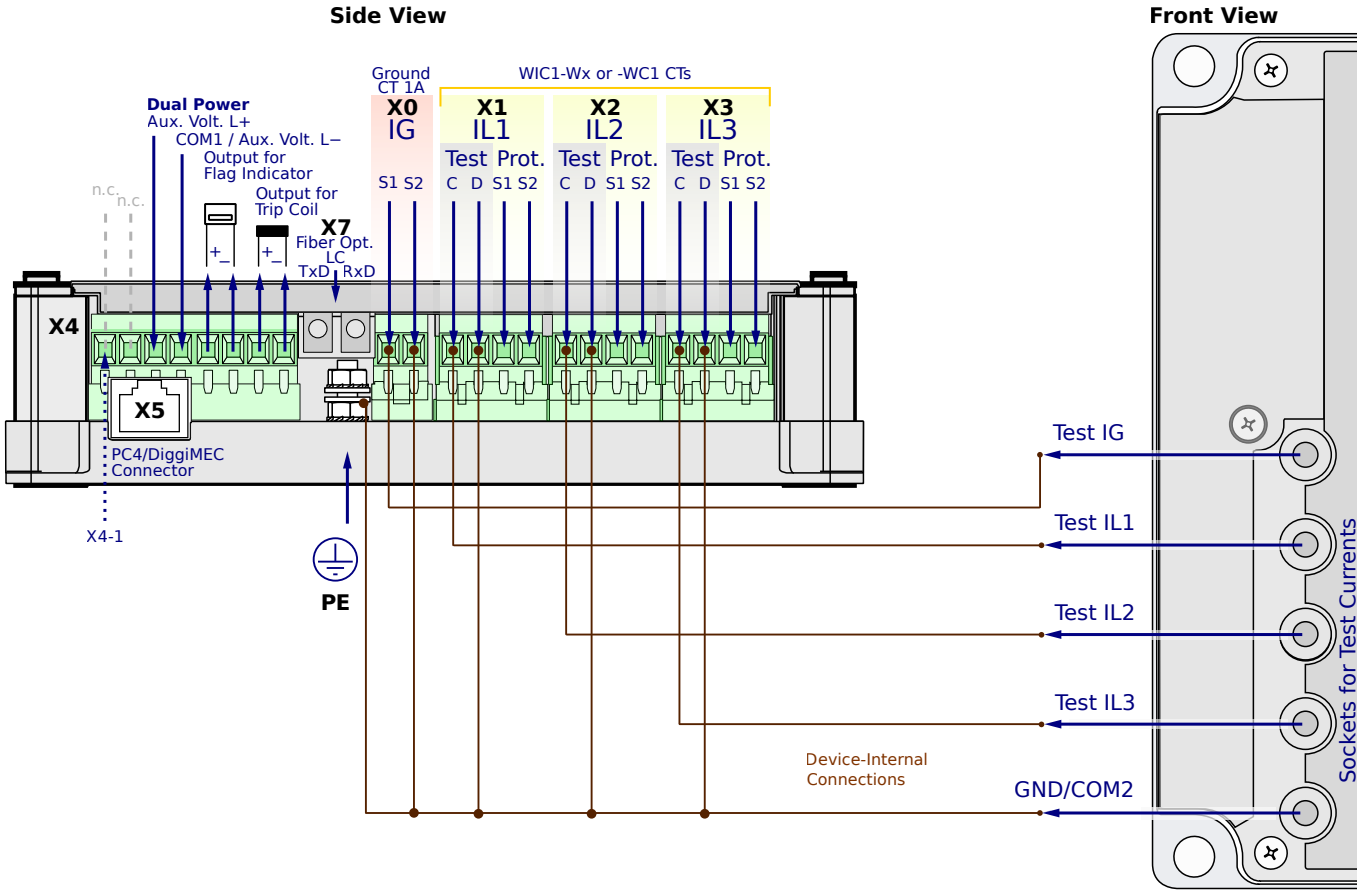


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1AA0

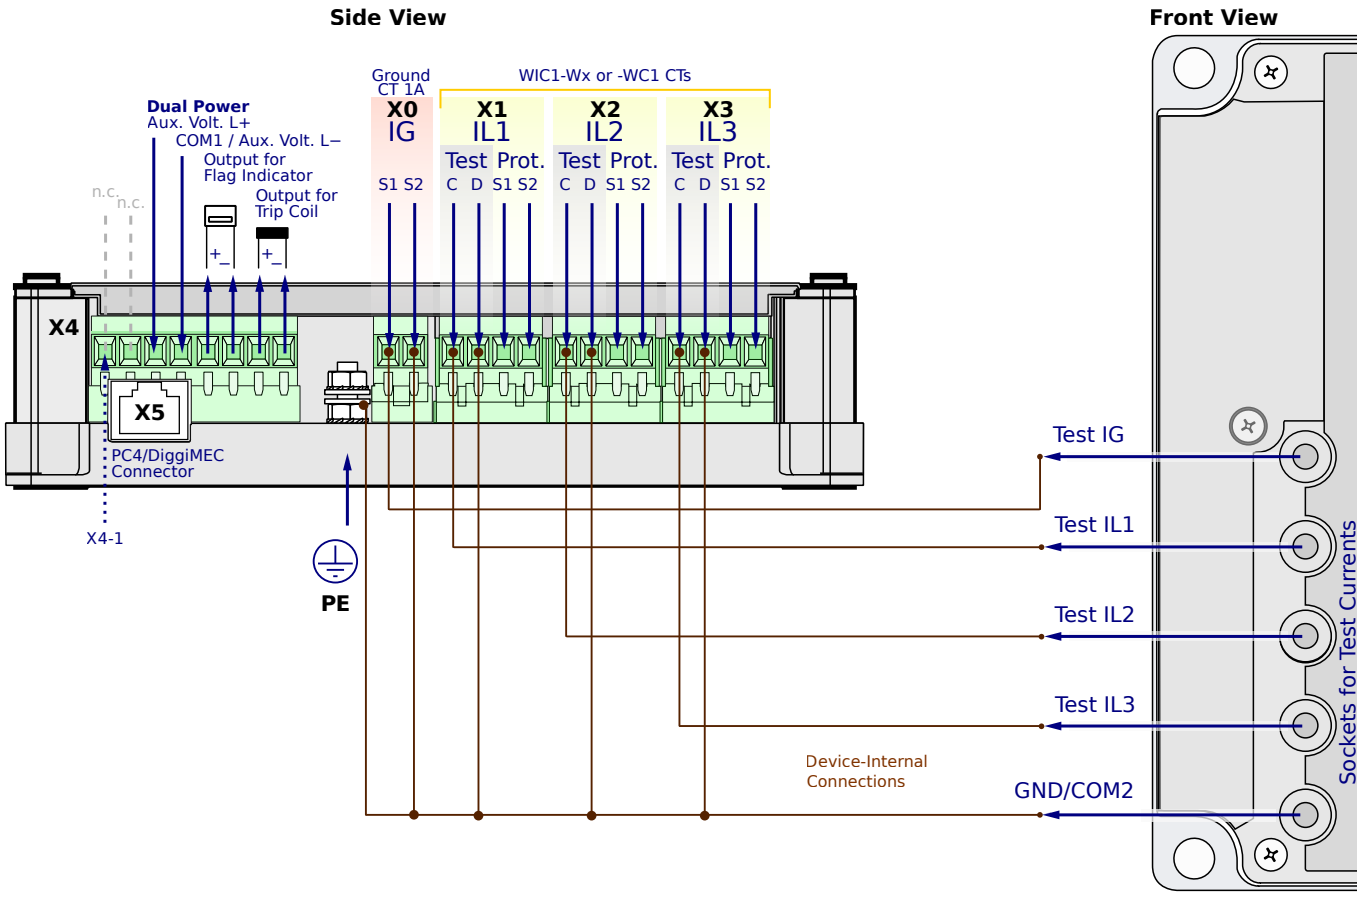


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1AAH

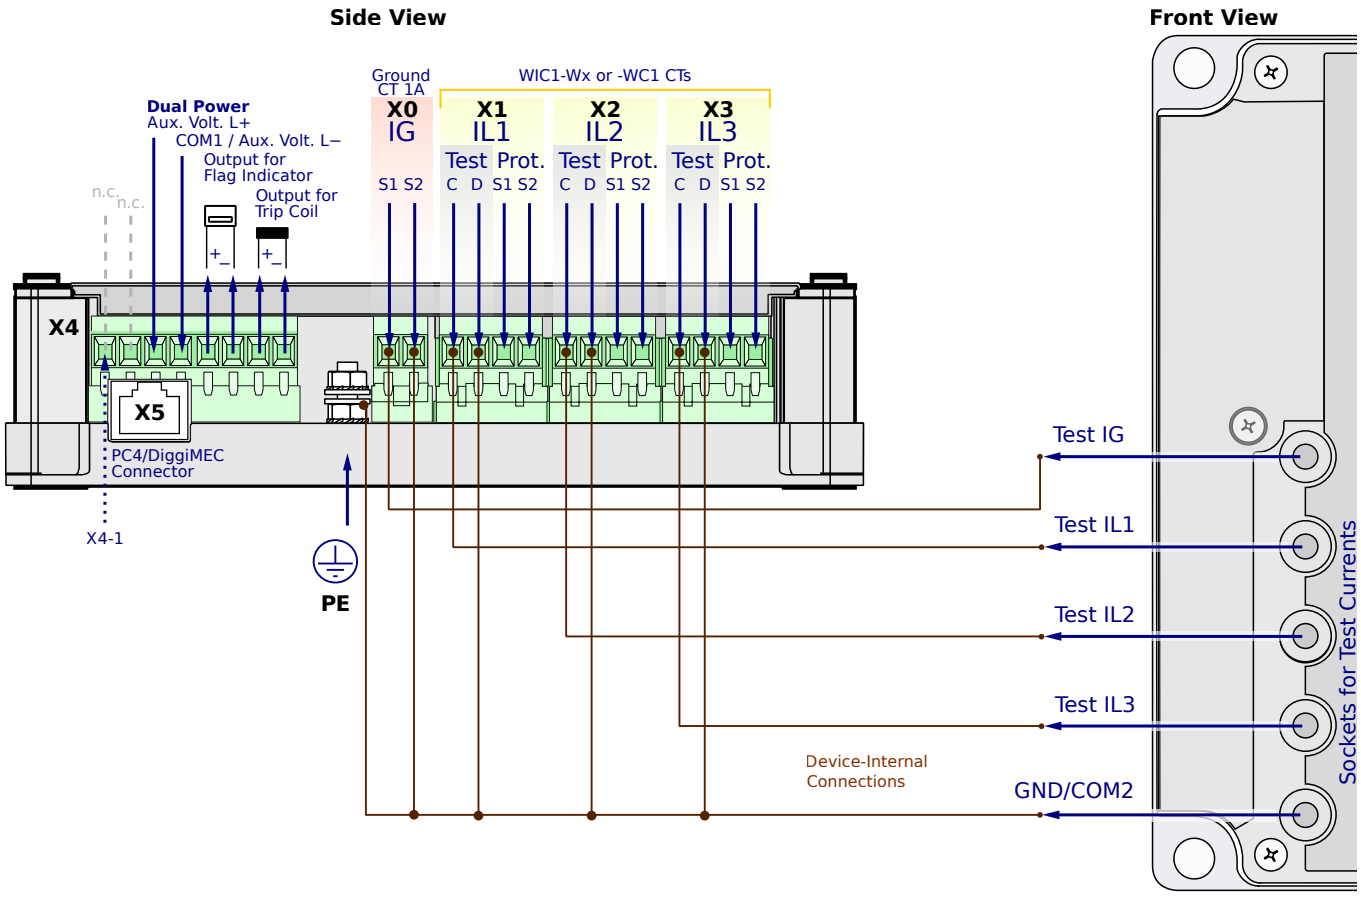


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1AB0

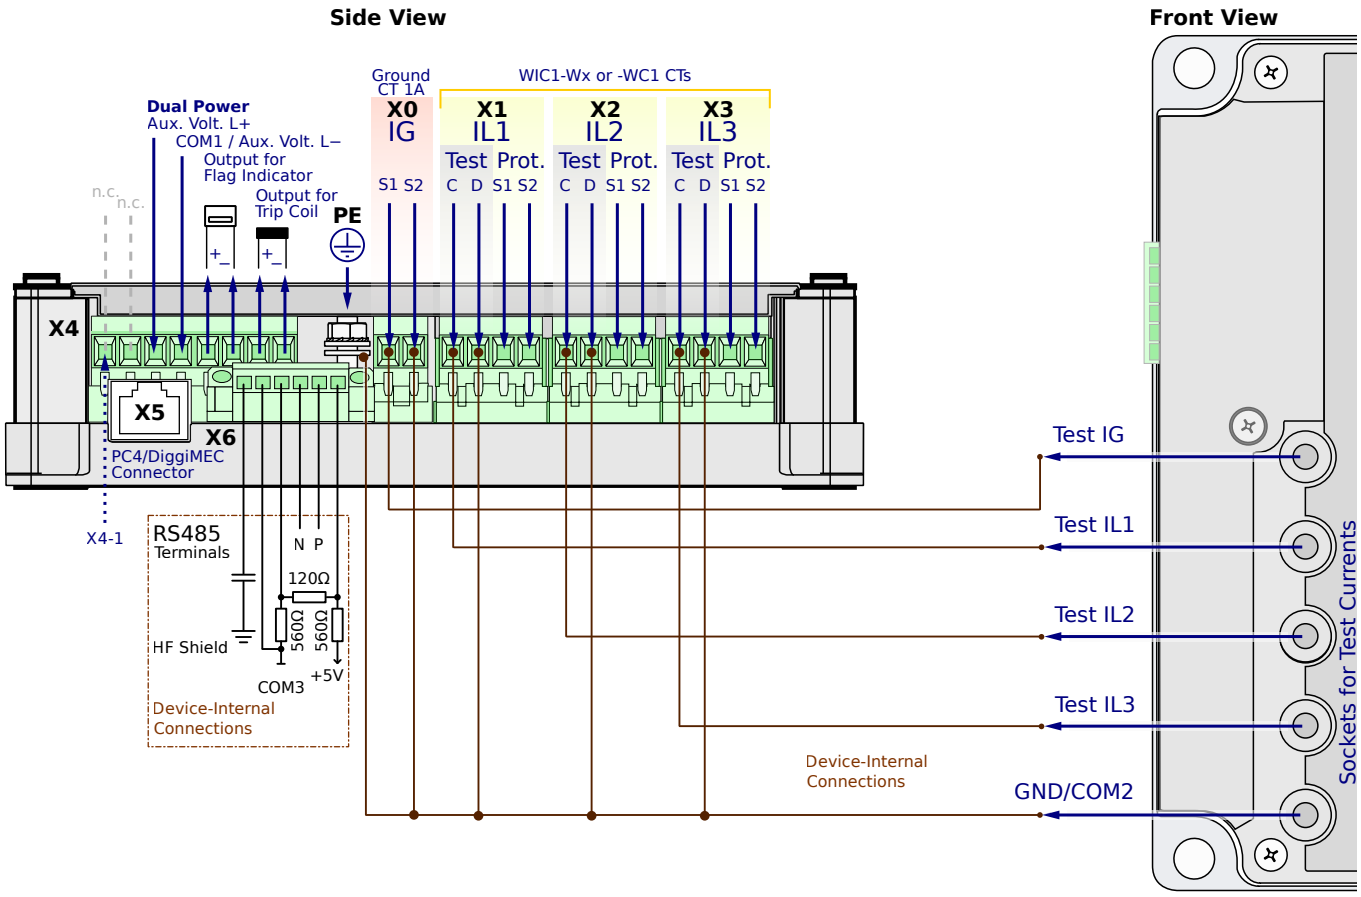


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1ABH

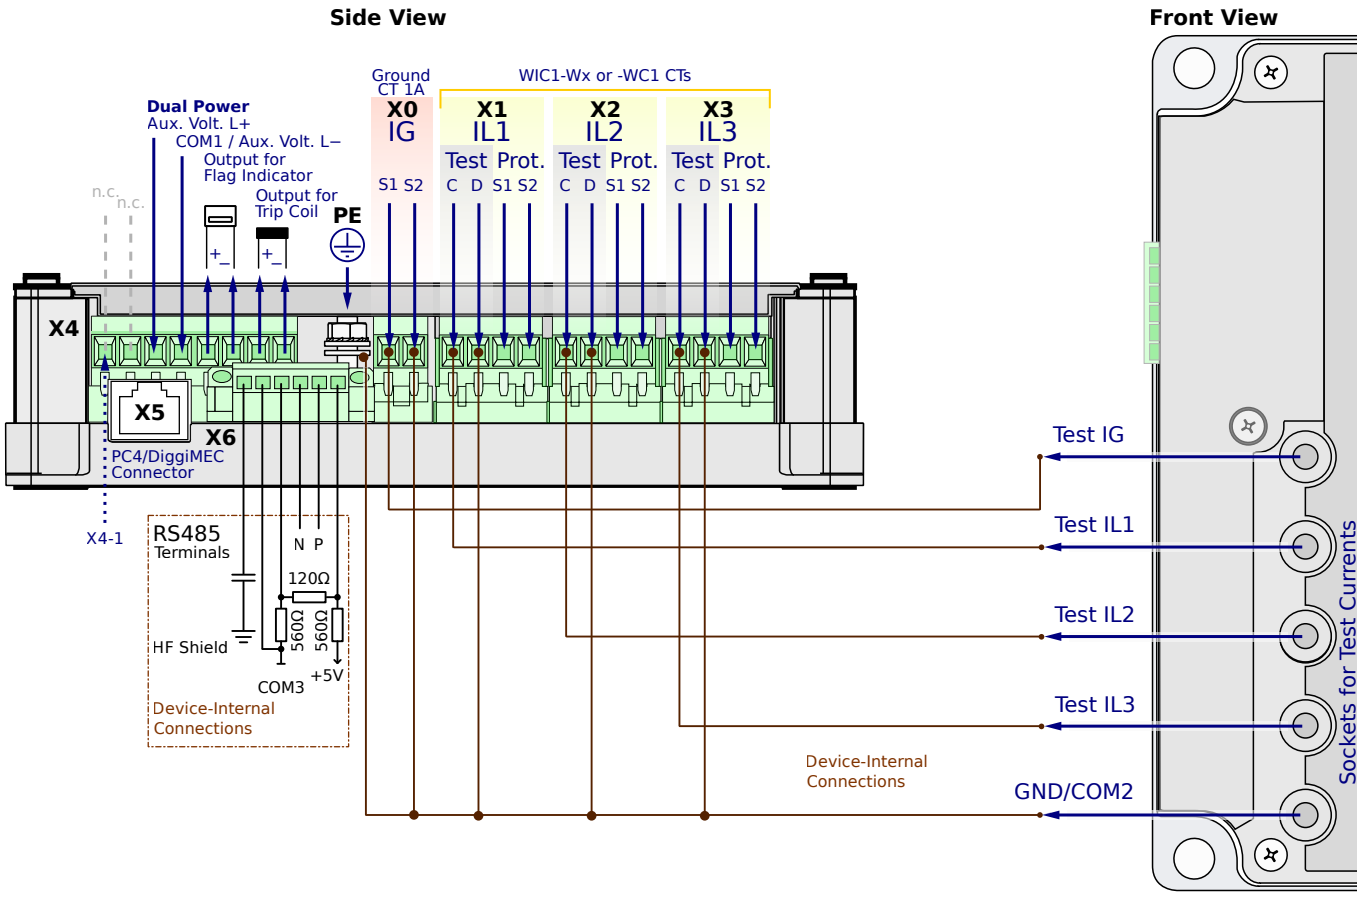


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1AC0

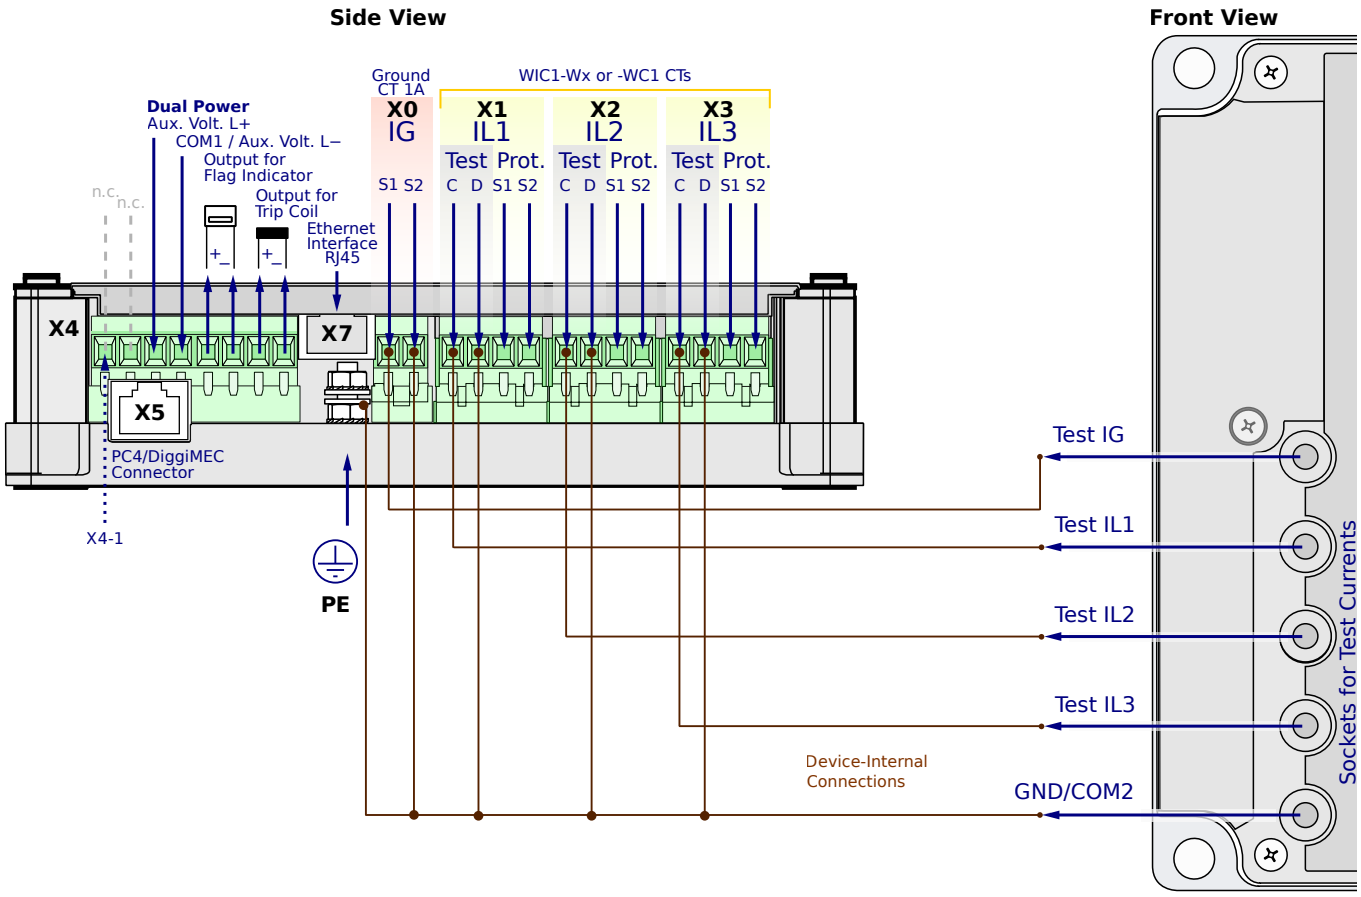


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1ACH

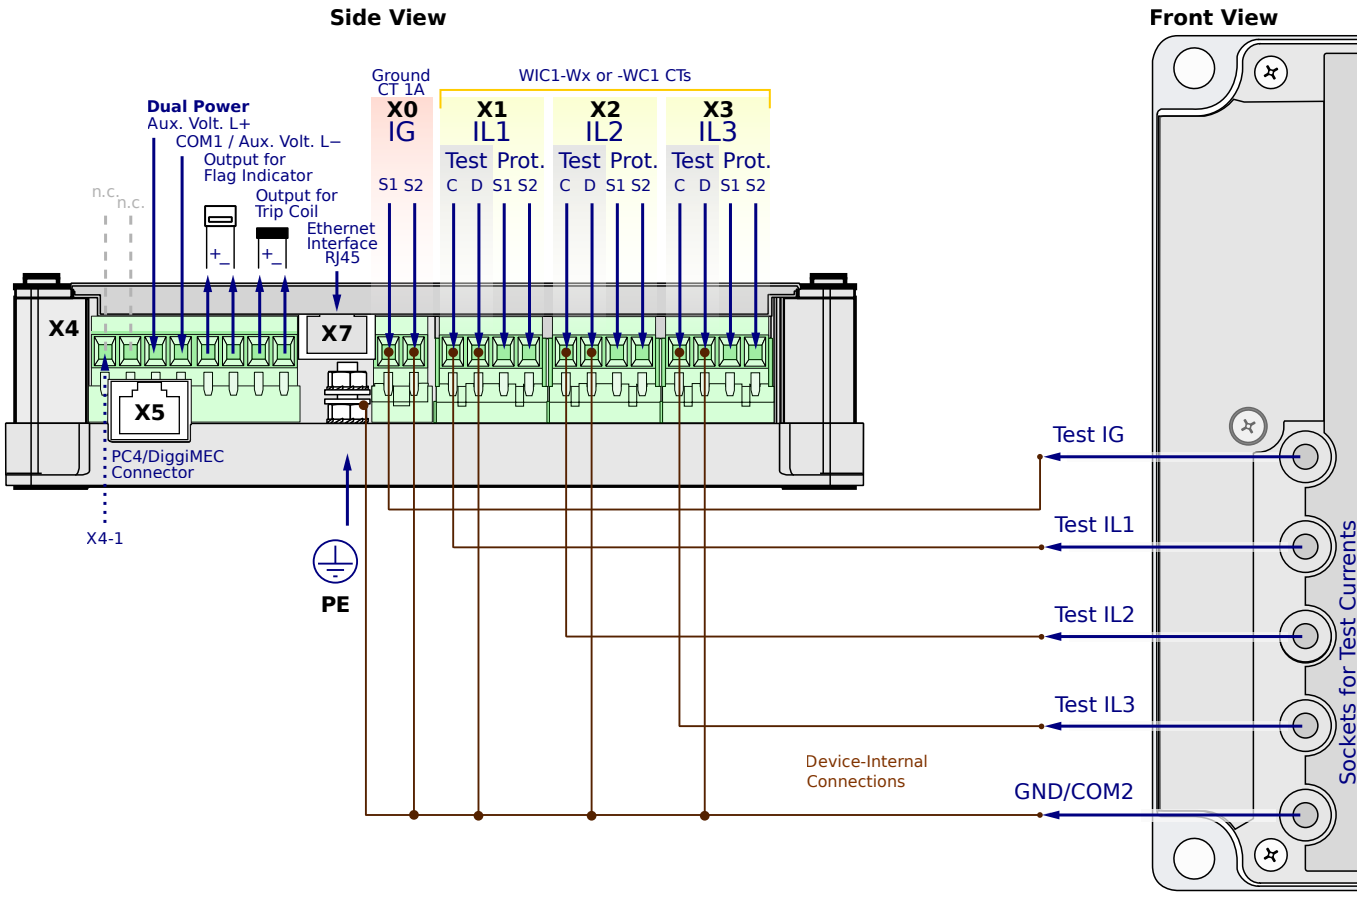


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1AL0

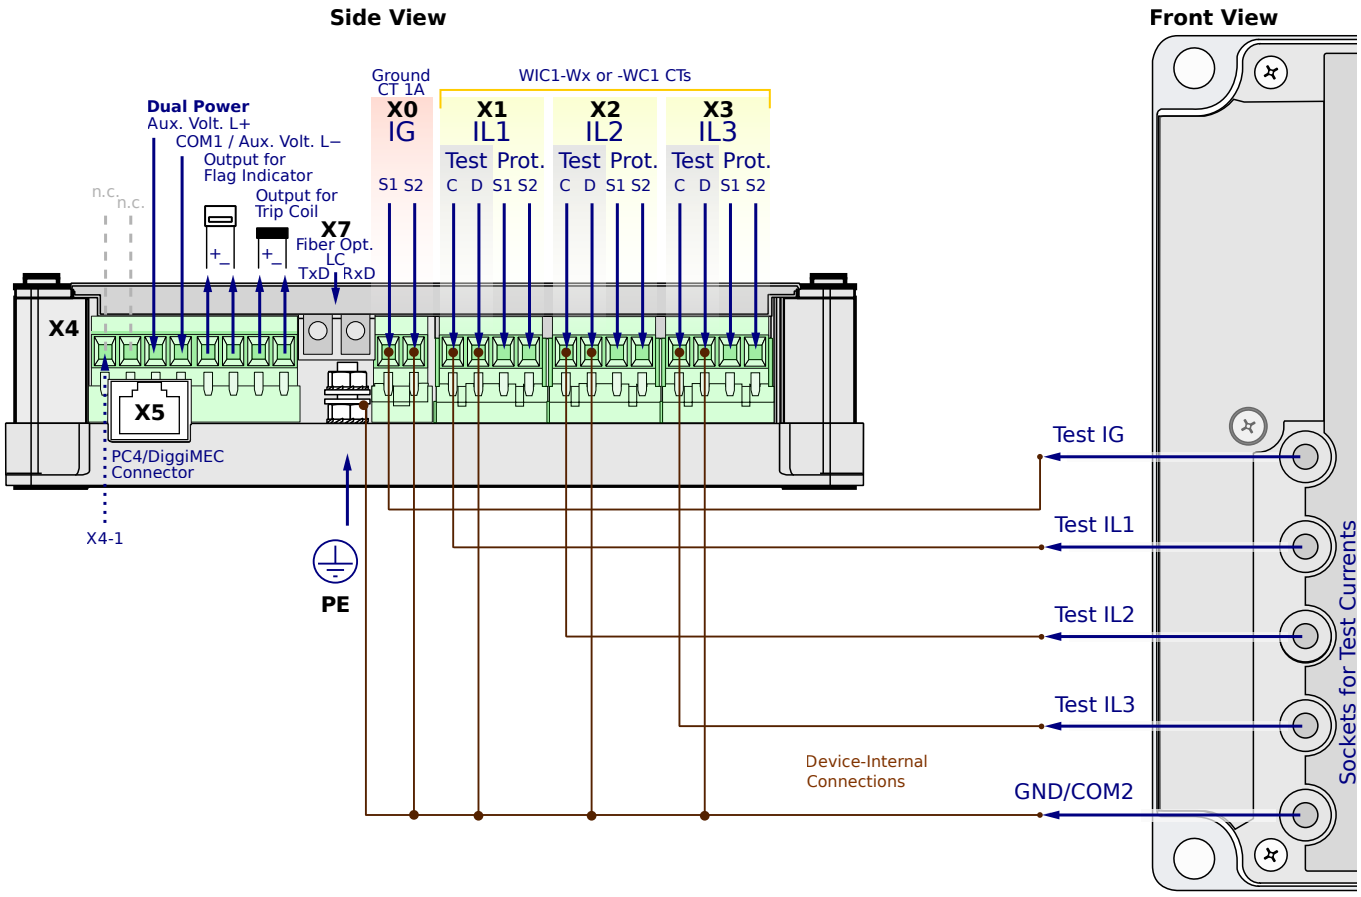


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1ALH

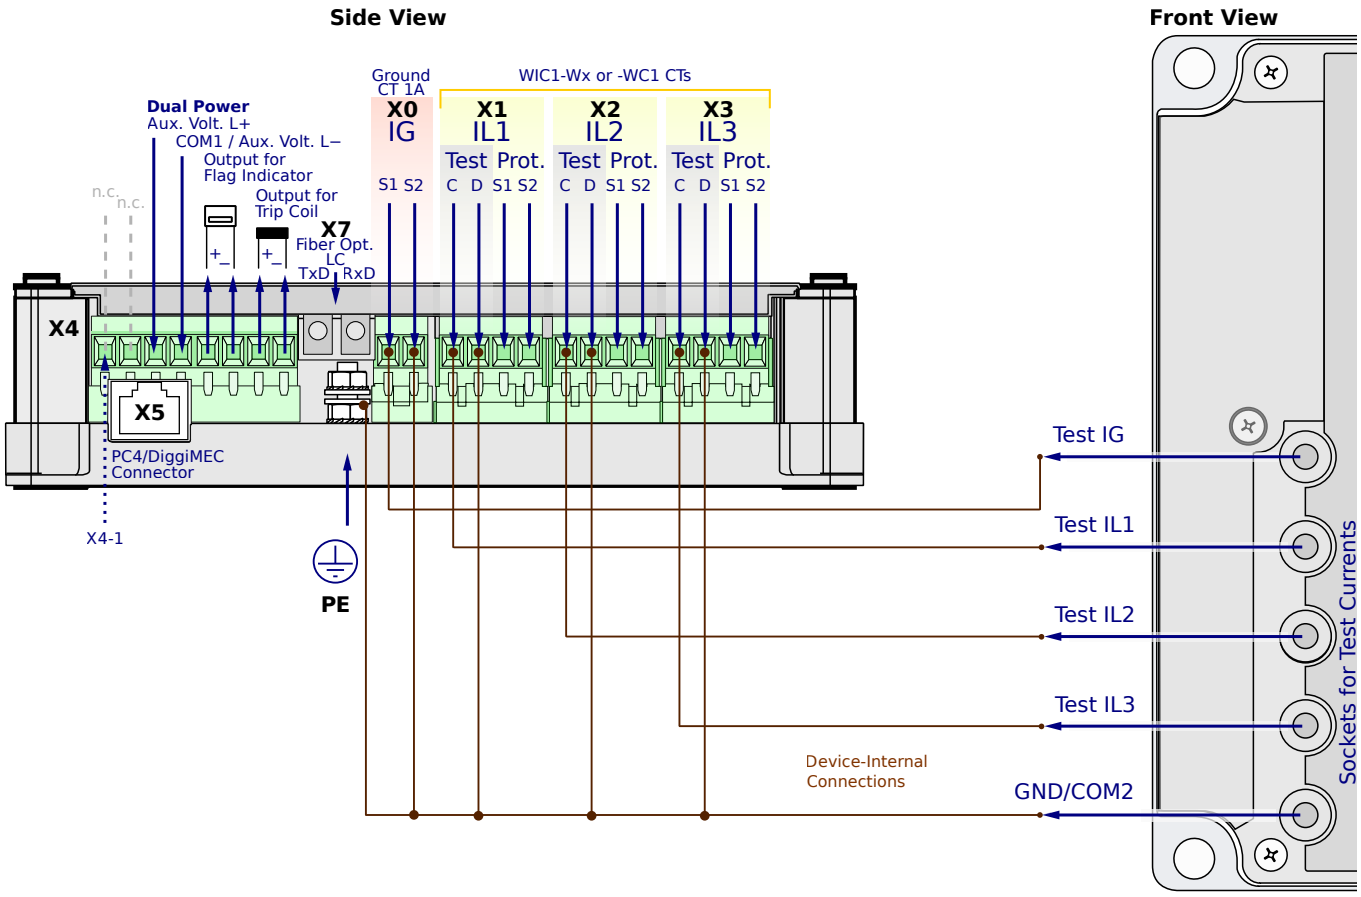


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1PA0

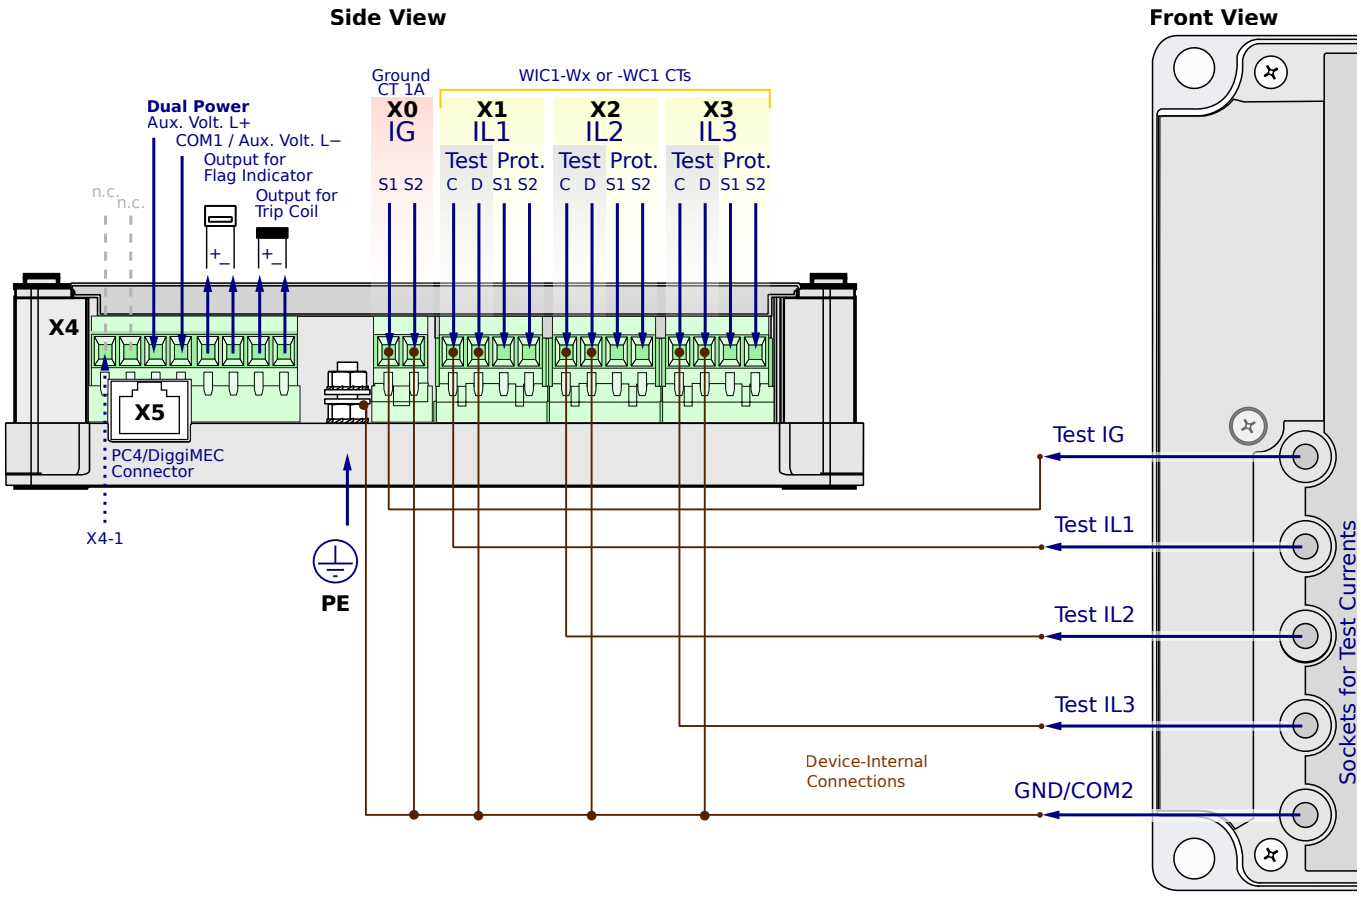


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1PAH

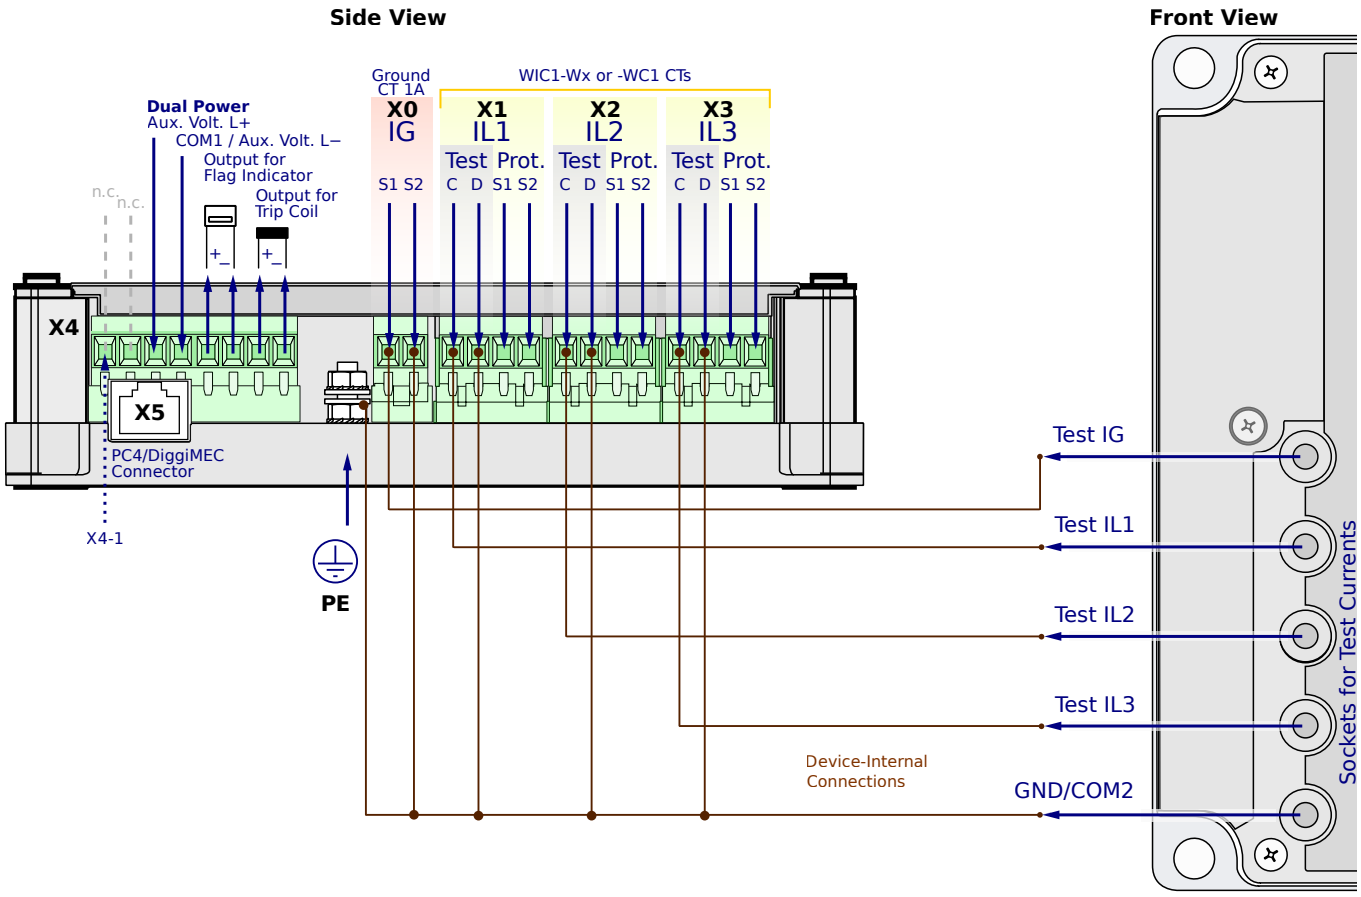


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM1PB0

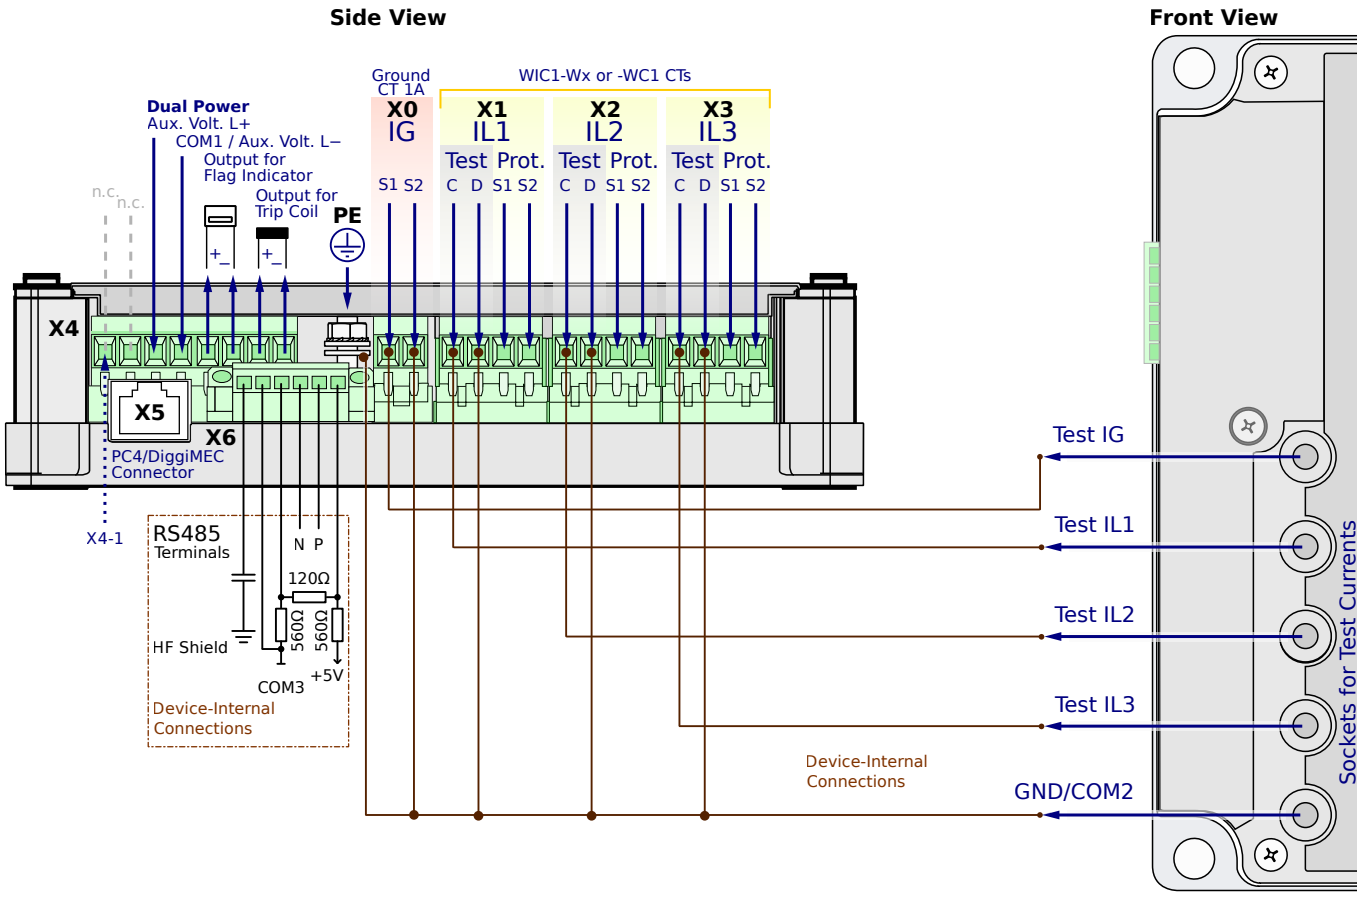


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1PBH

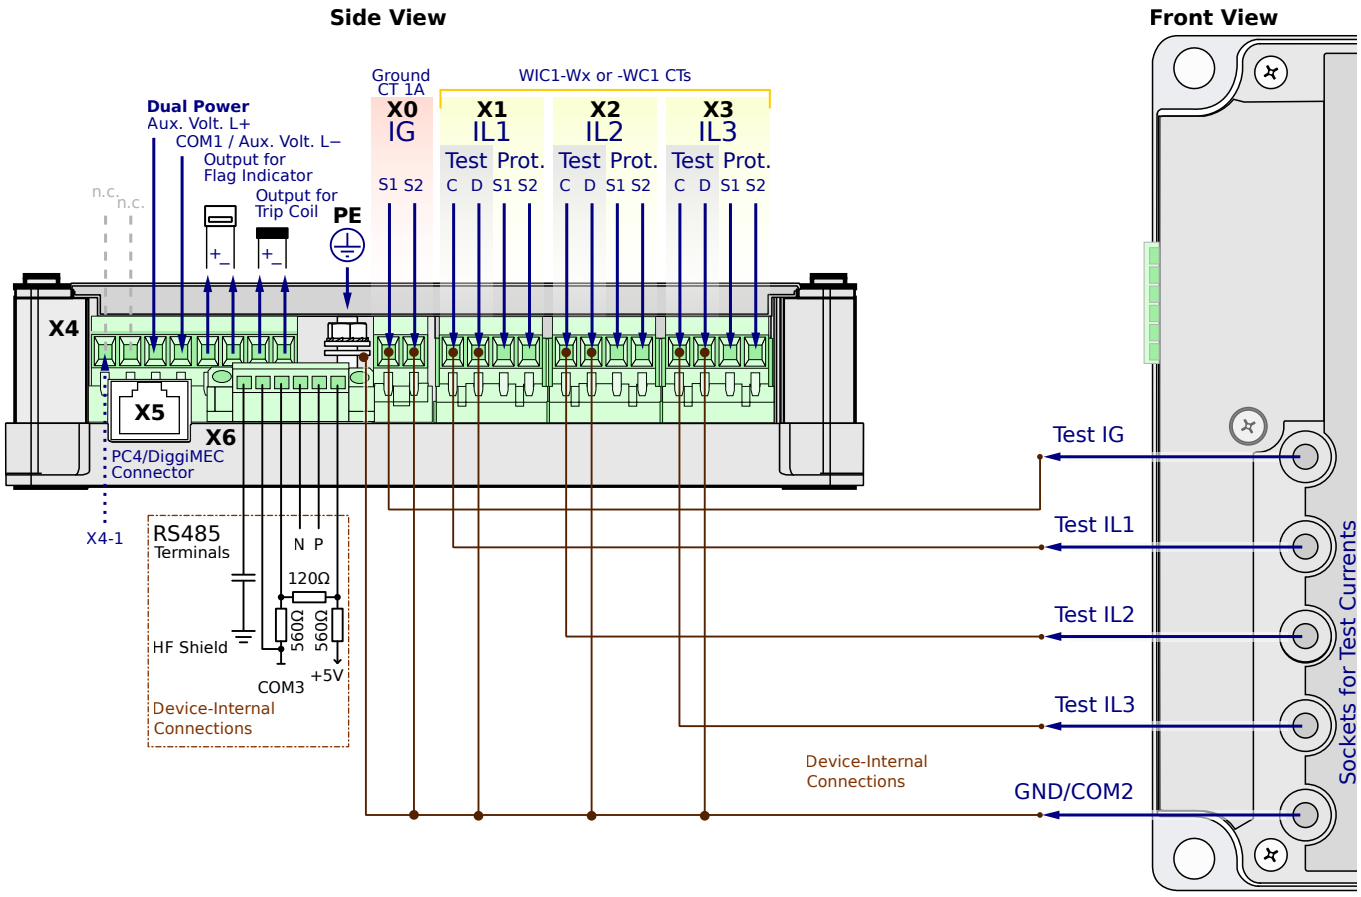


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM1PC0

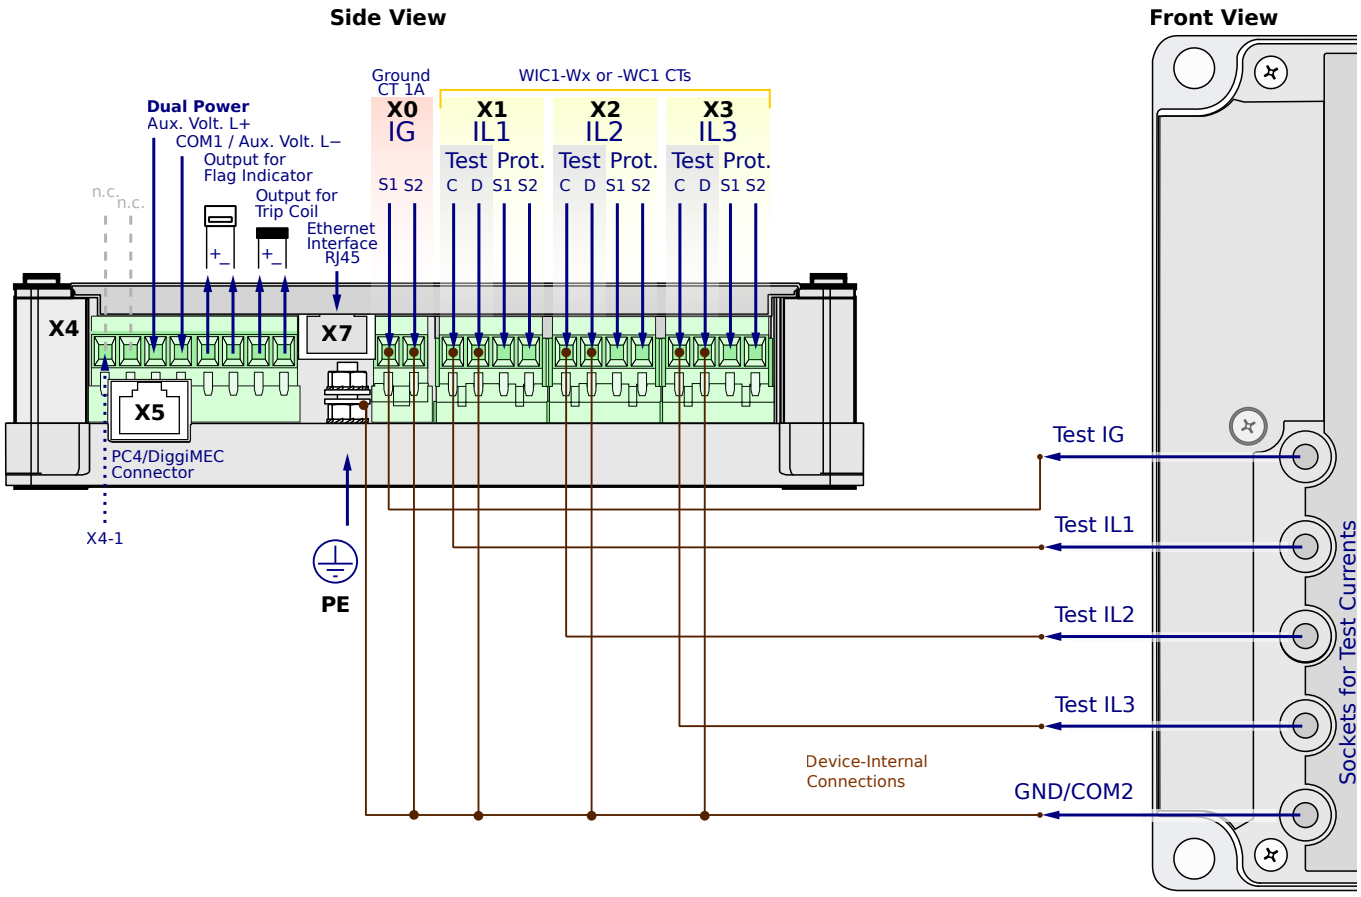


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1PCH

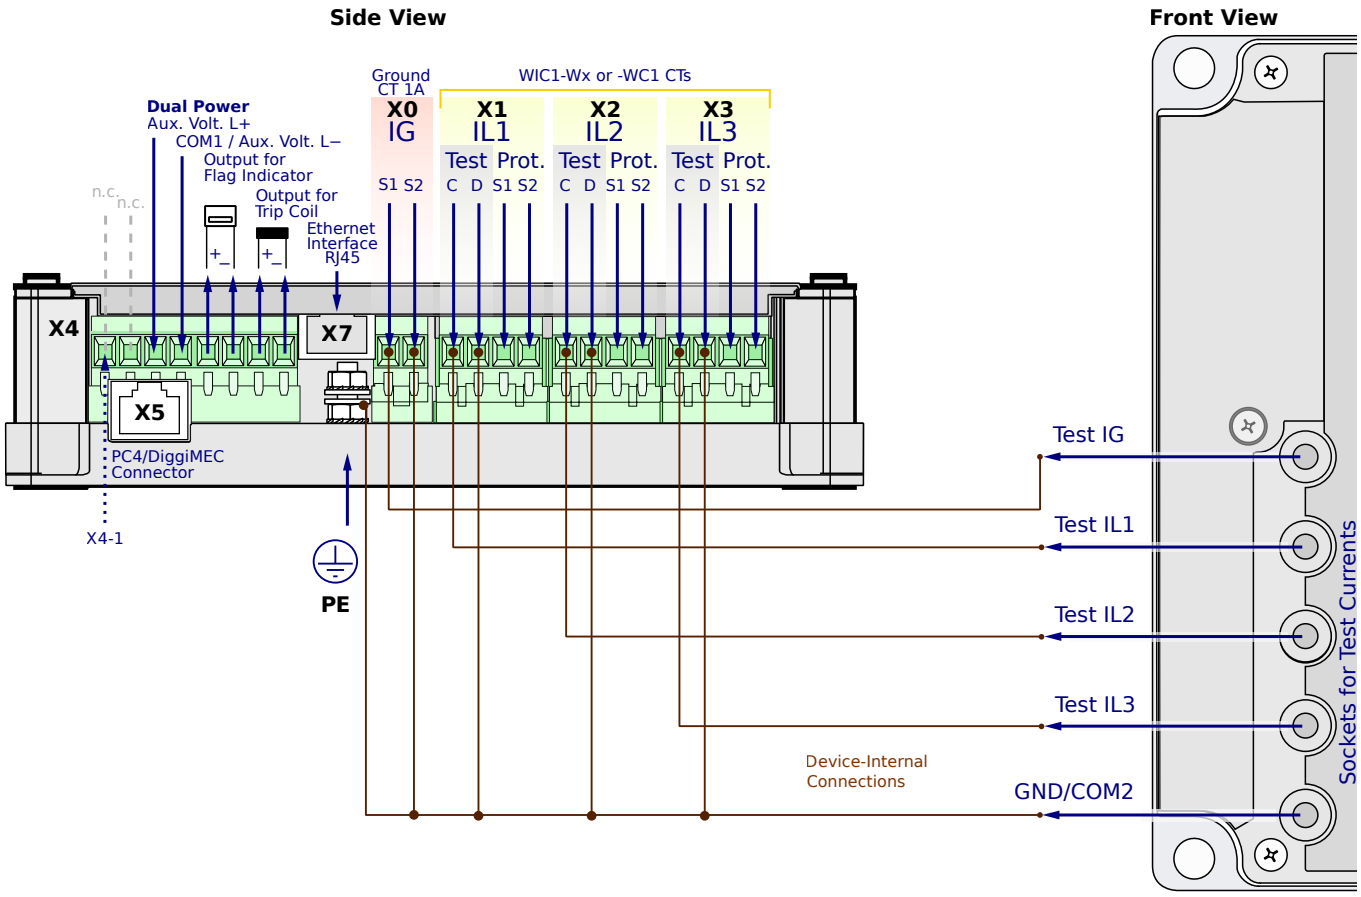


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM1PL0

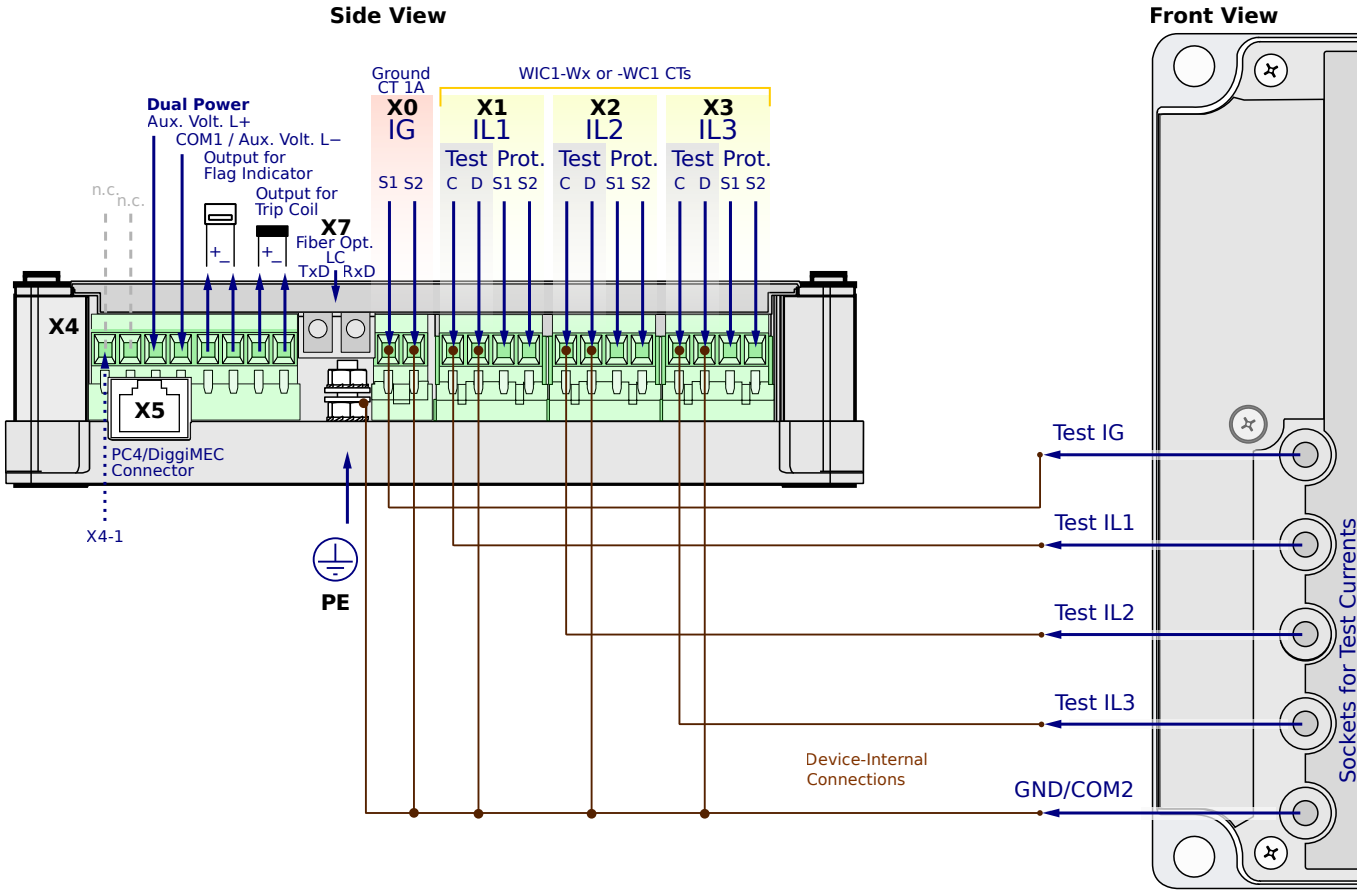


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM1PLH

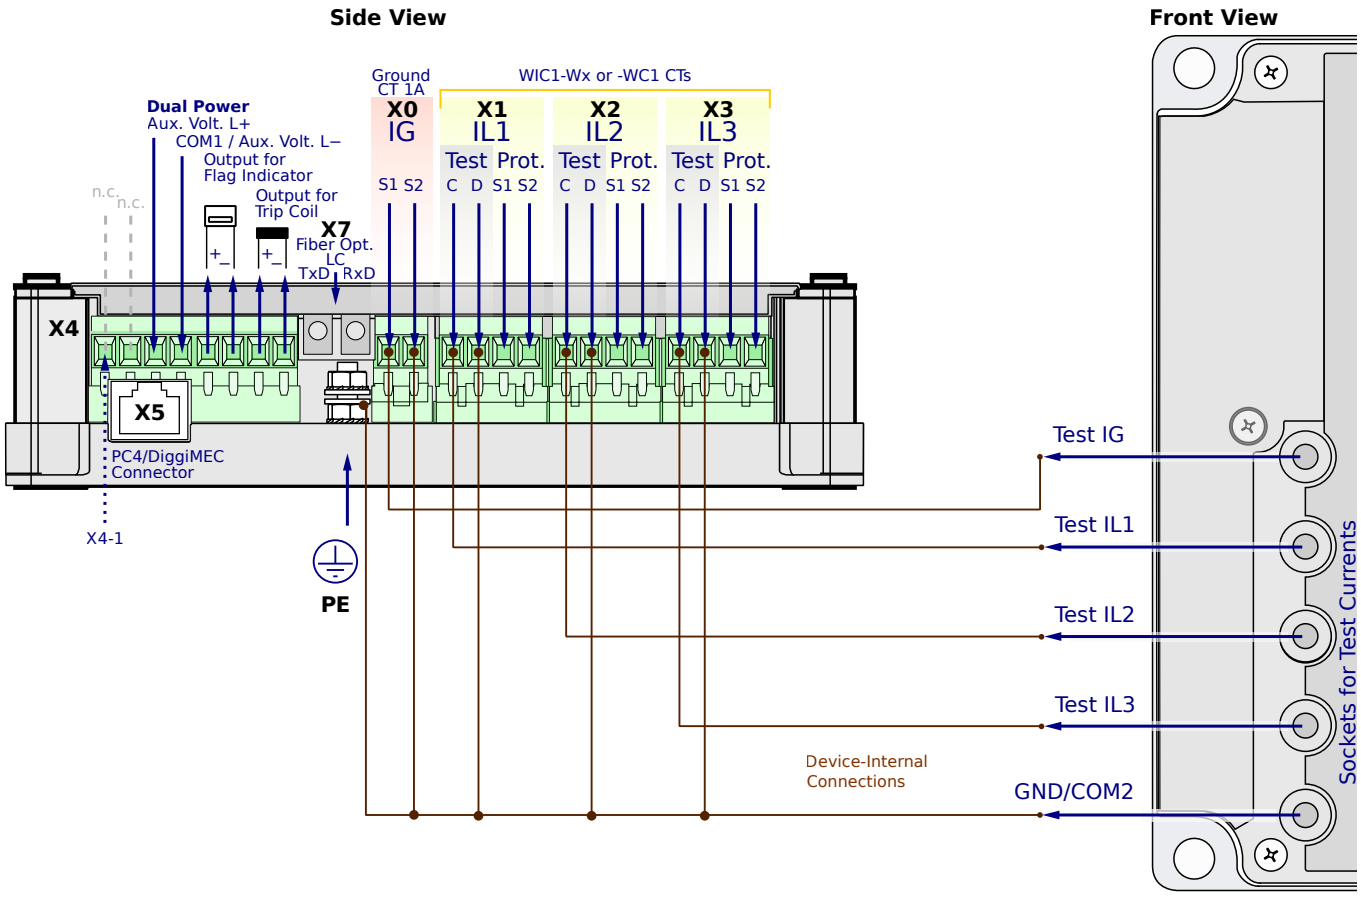


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2SA0

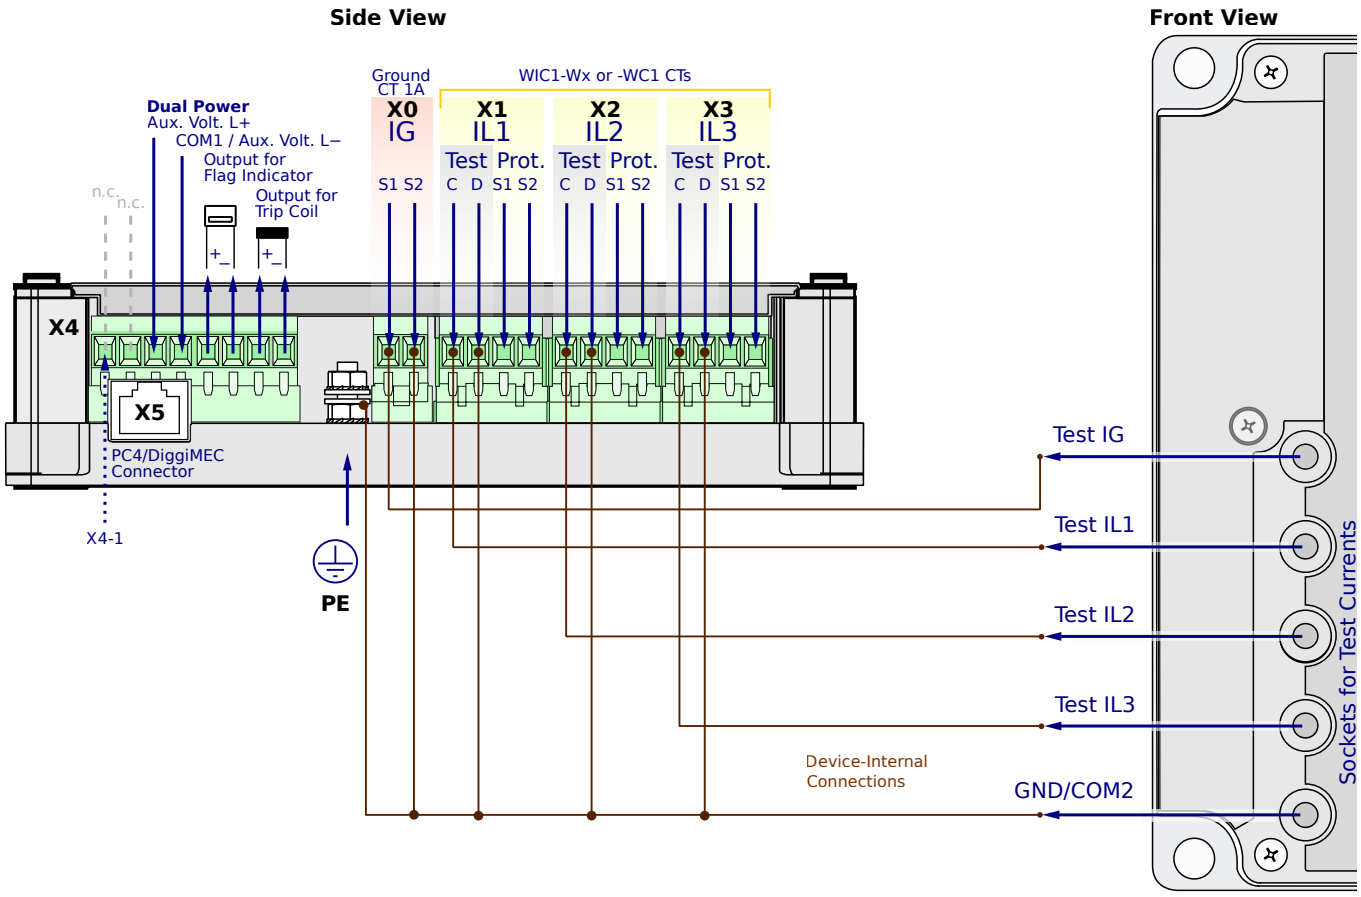


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2SAH

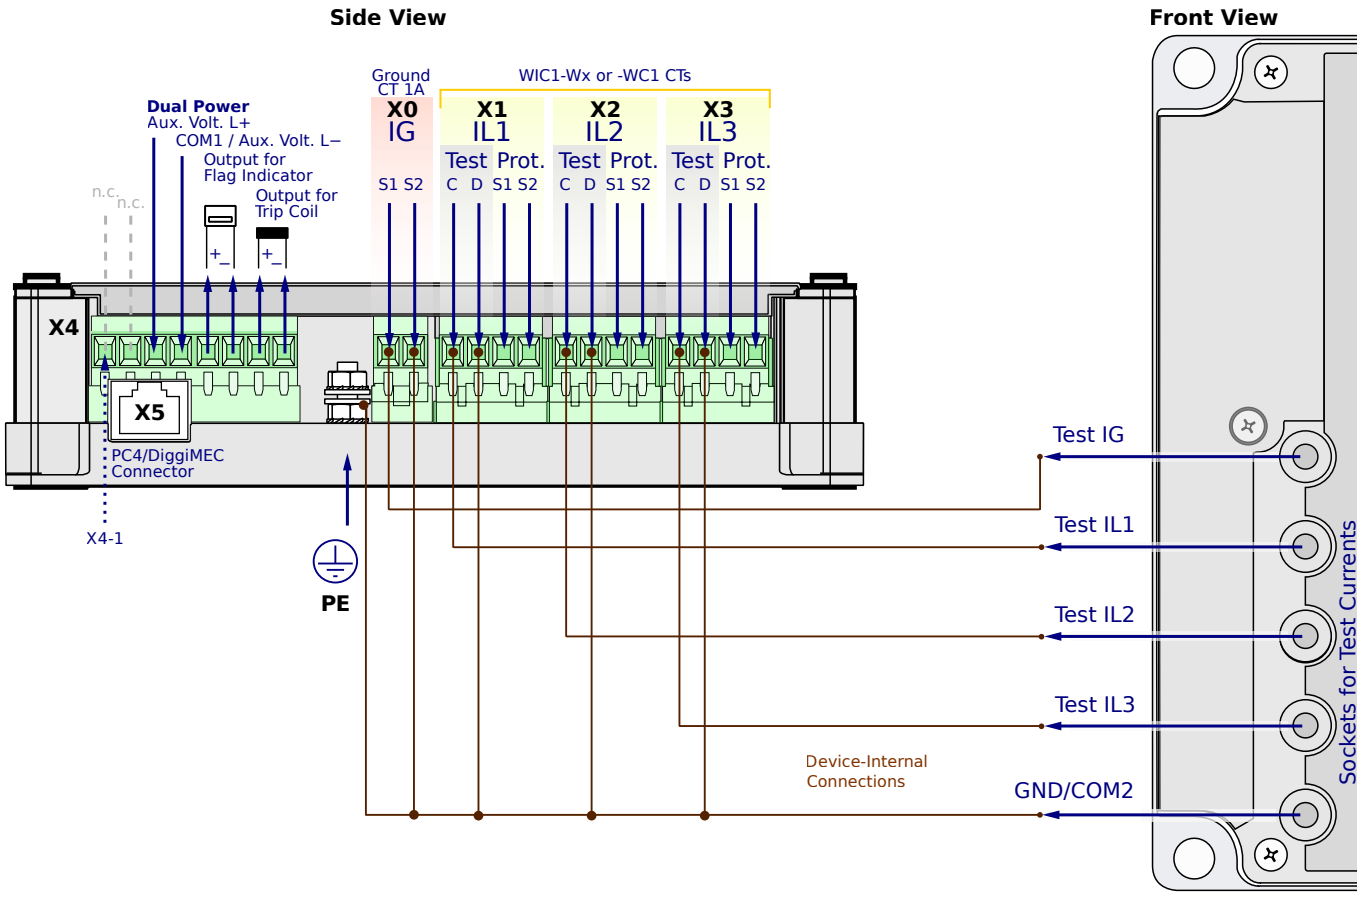


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2SB0

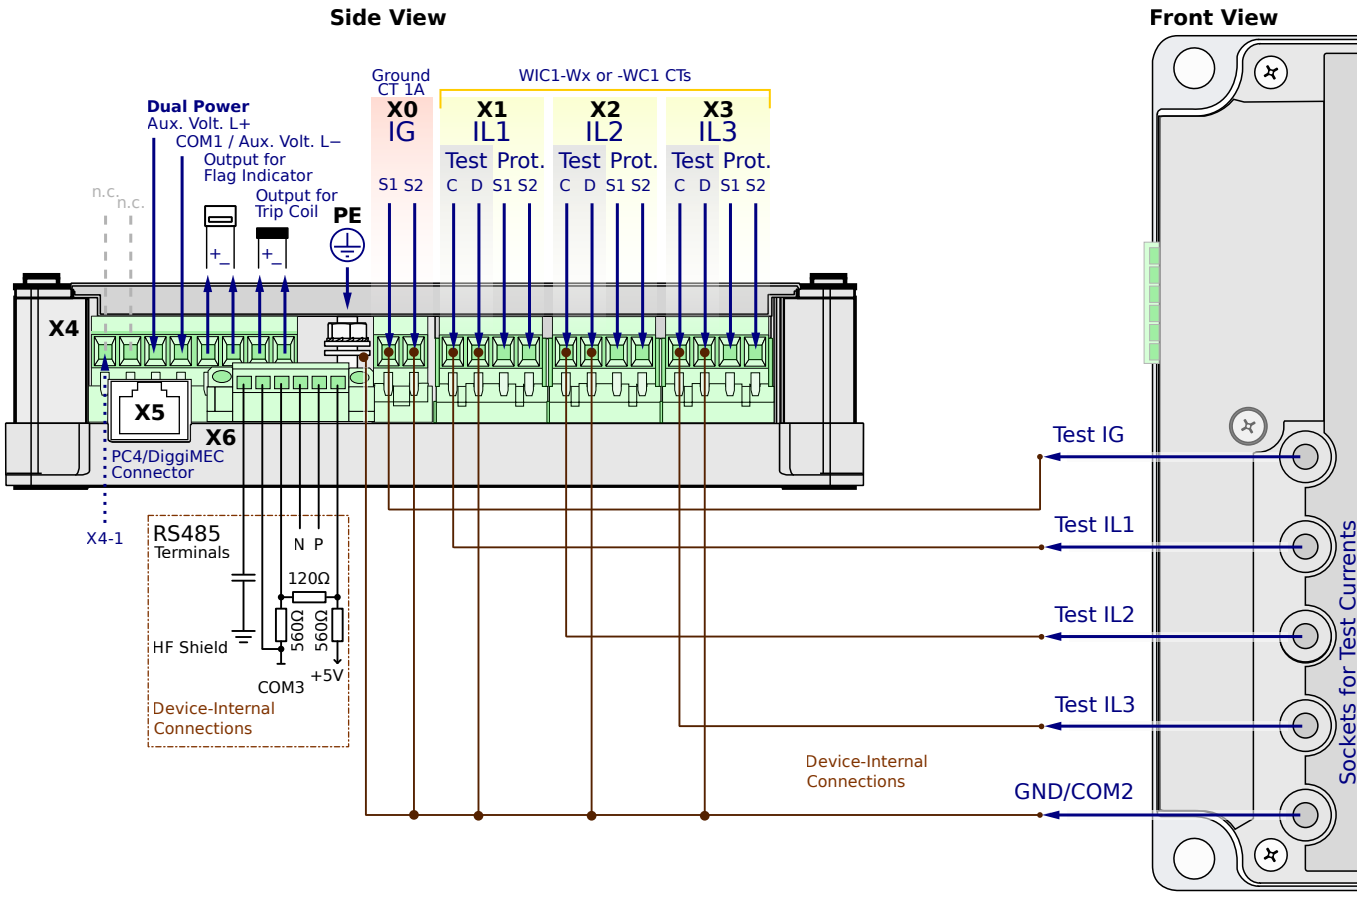


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2SBH

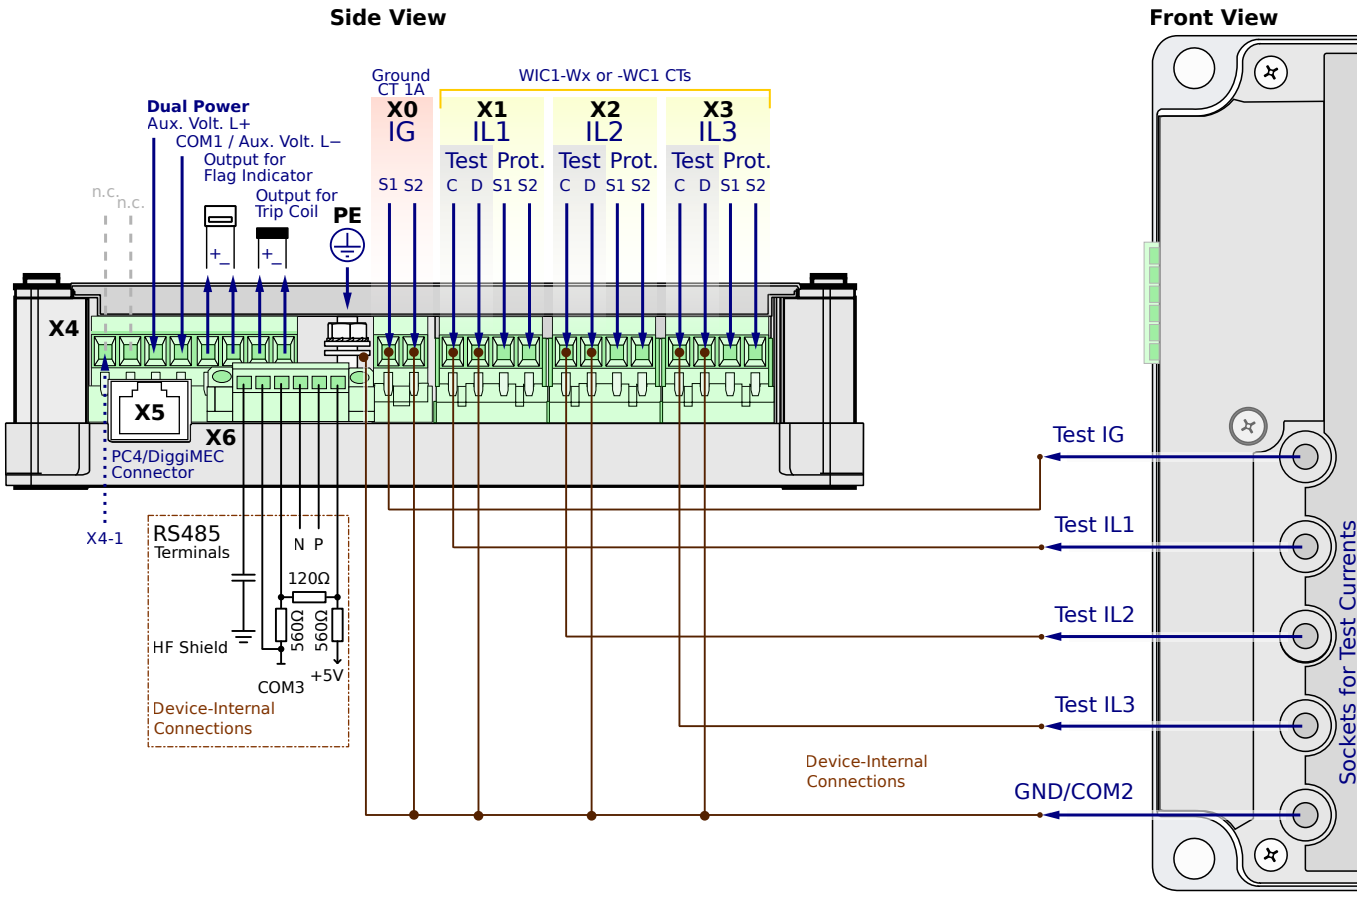


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2SC0

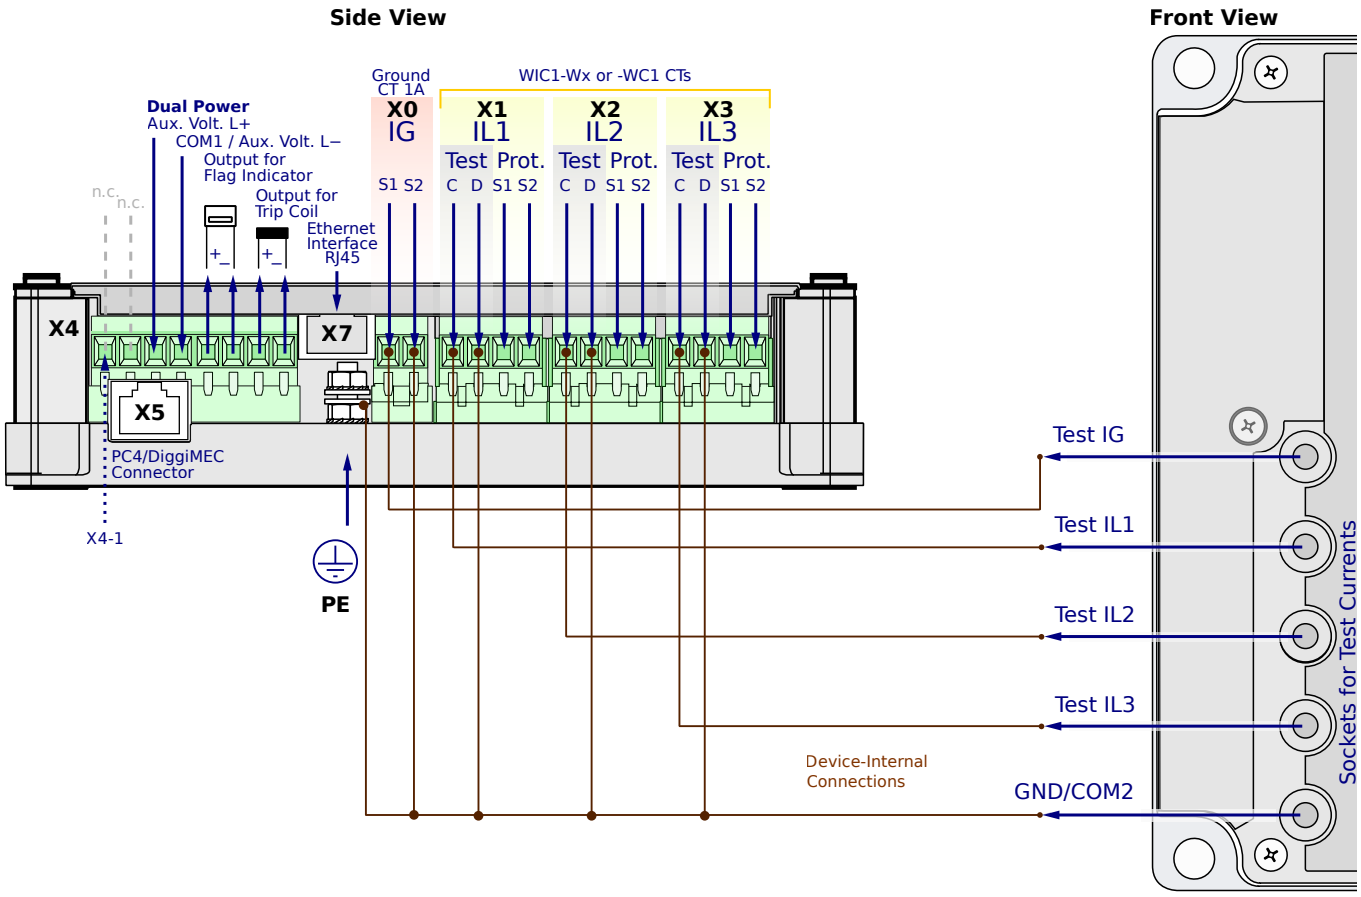


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2SCH

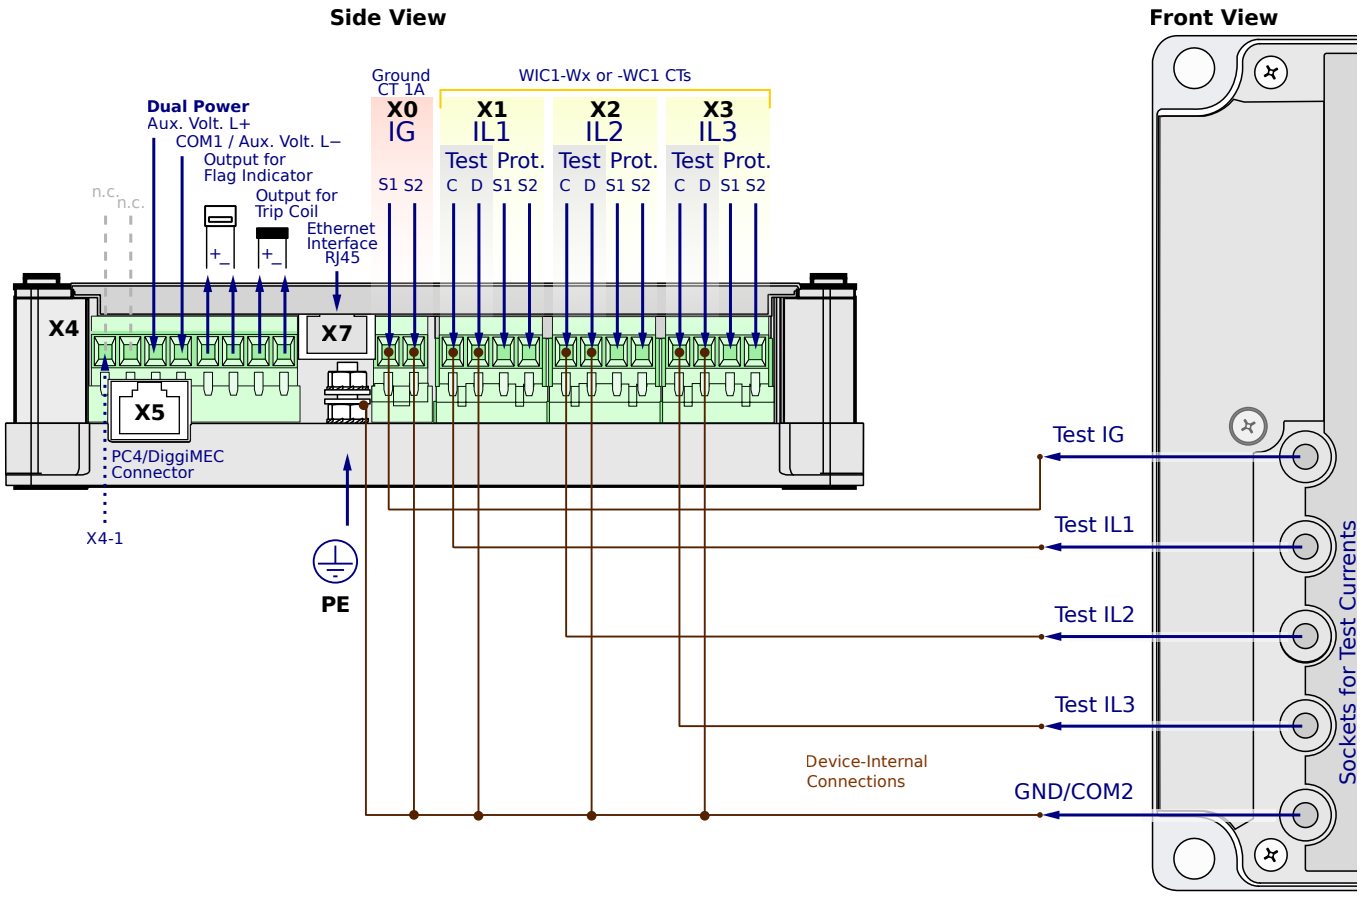


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2SL0

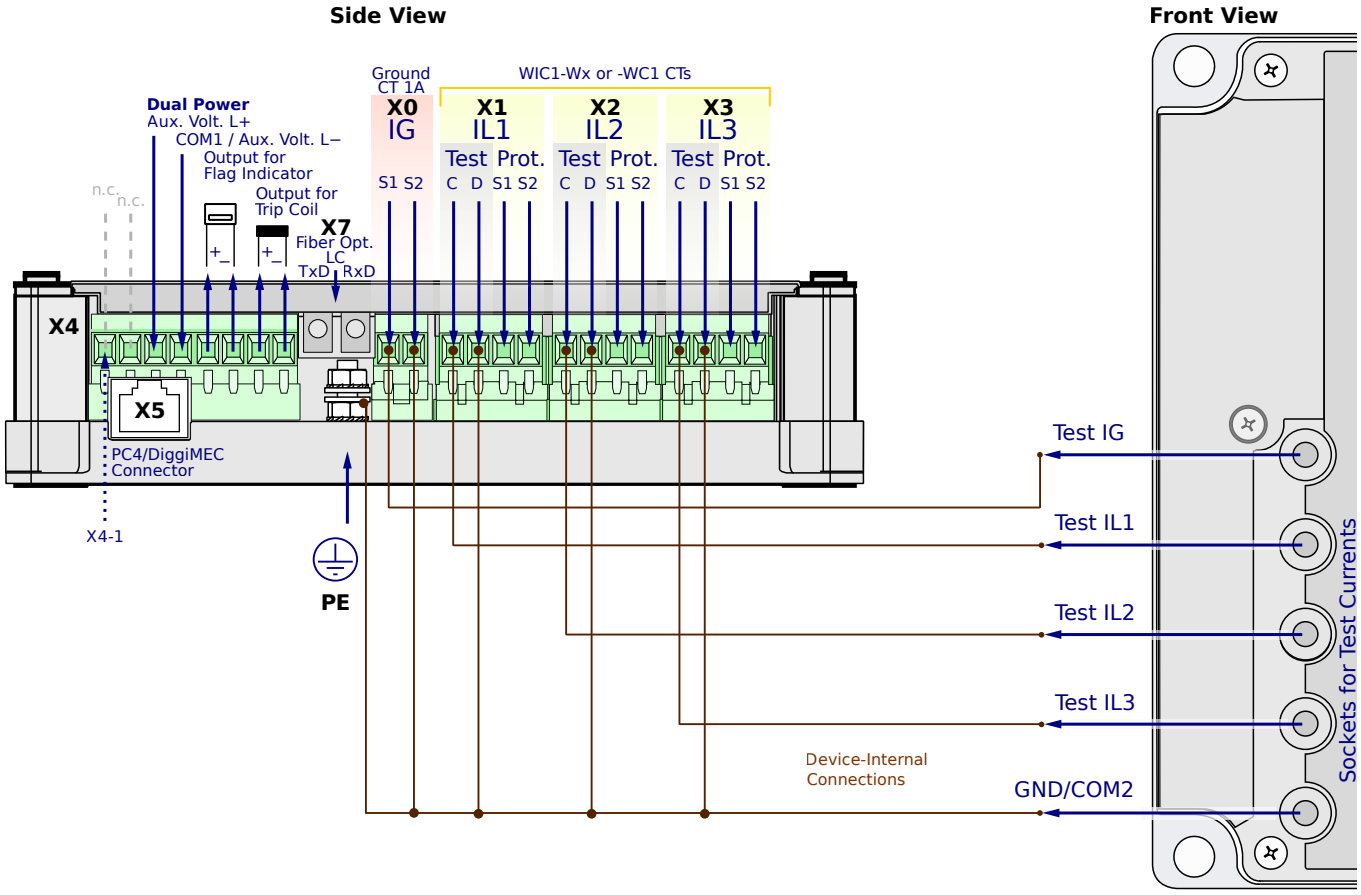


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2SLH

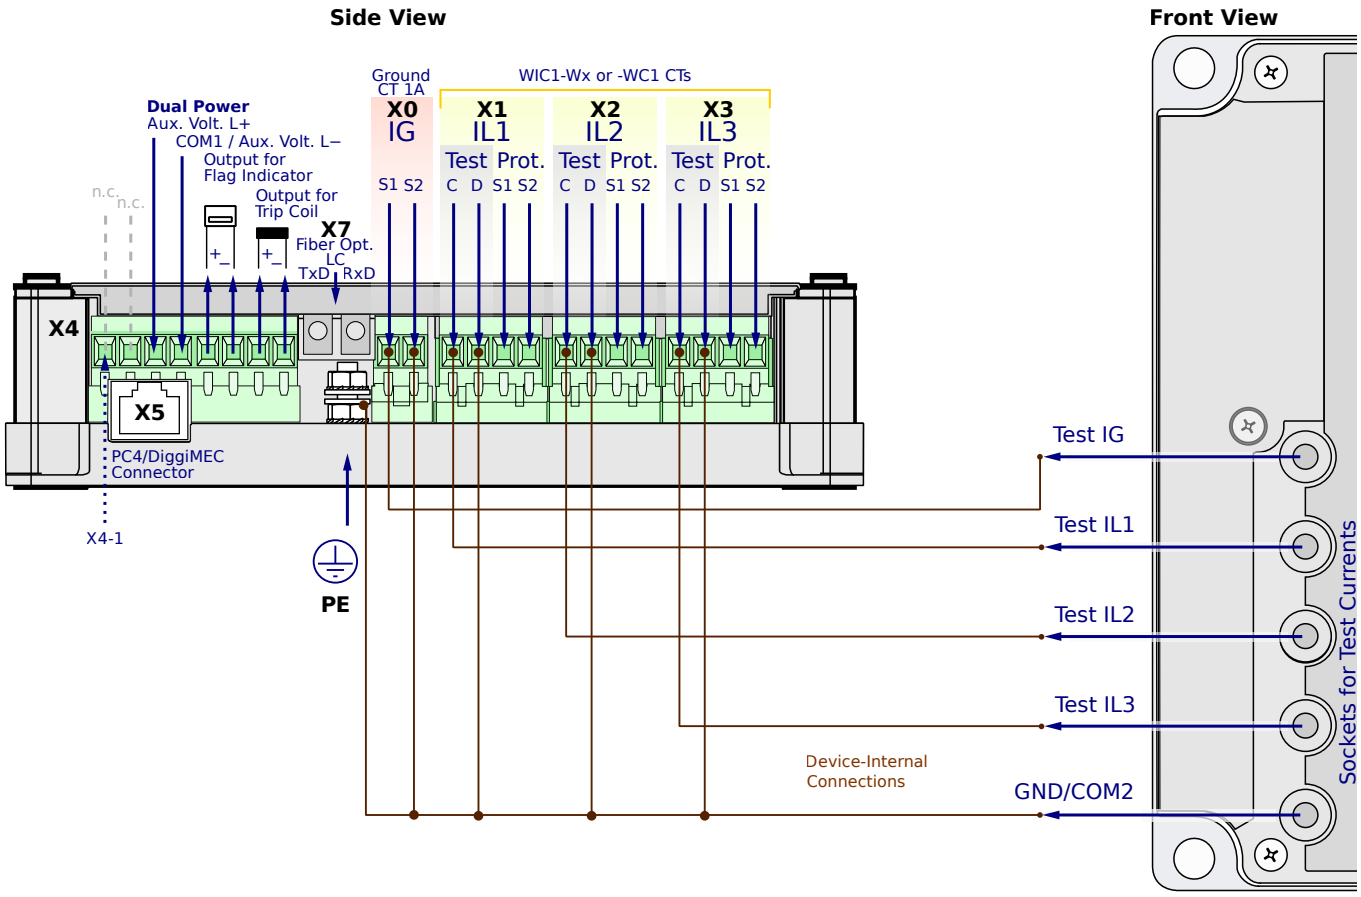


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2AA0

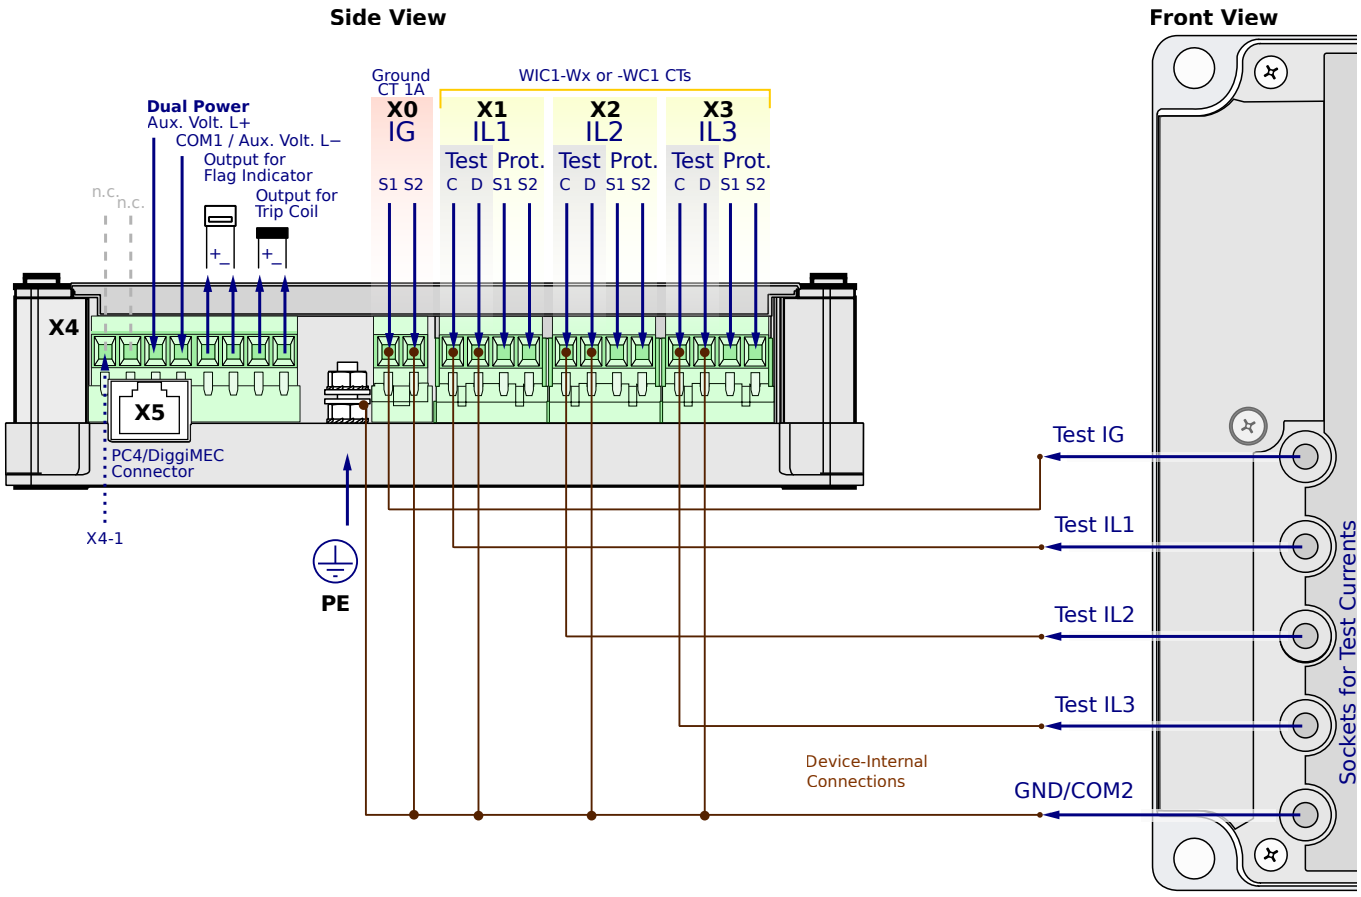


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2AAH

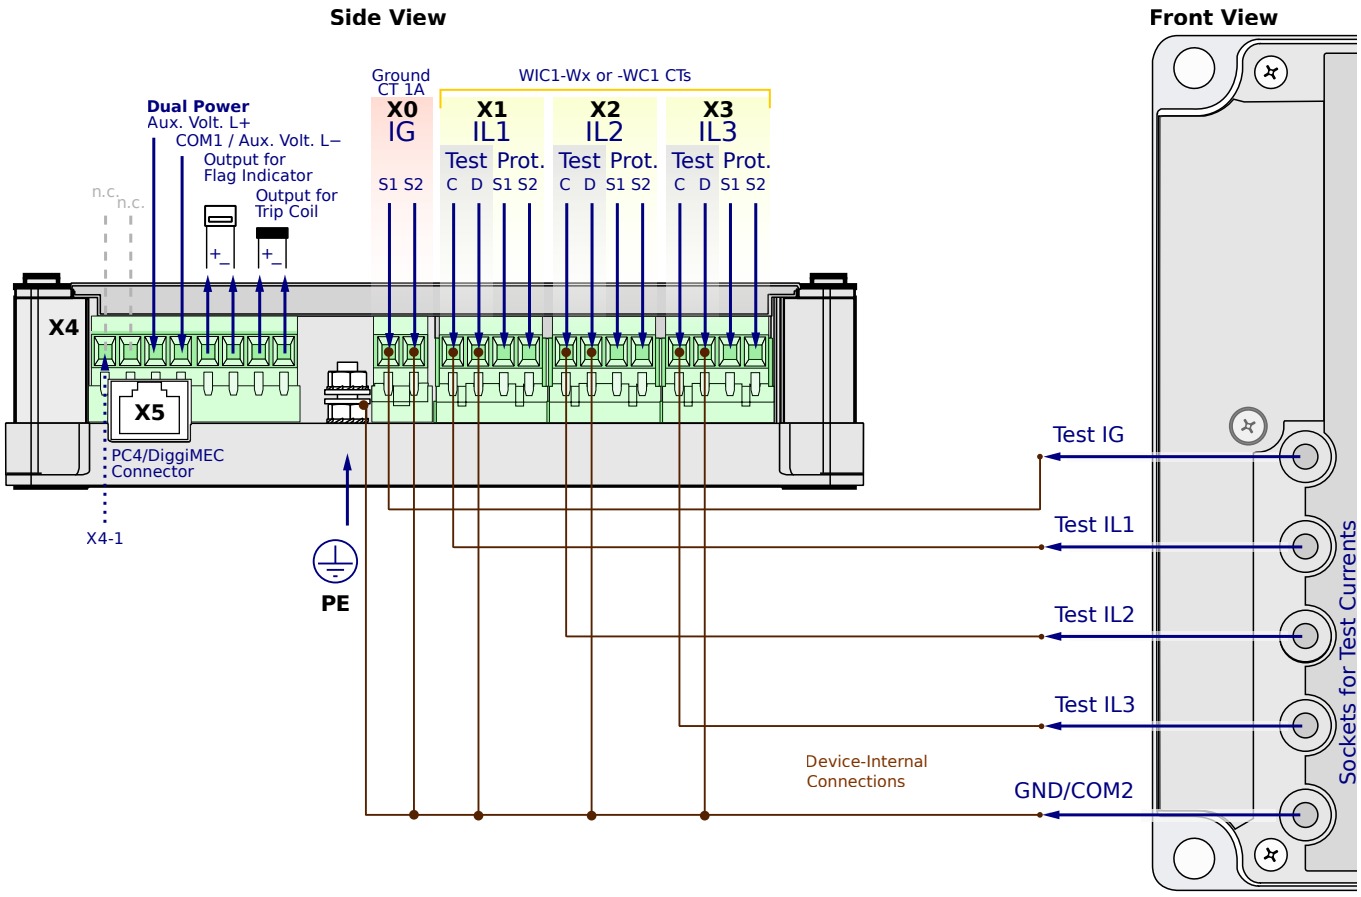


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2AB0

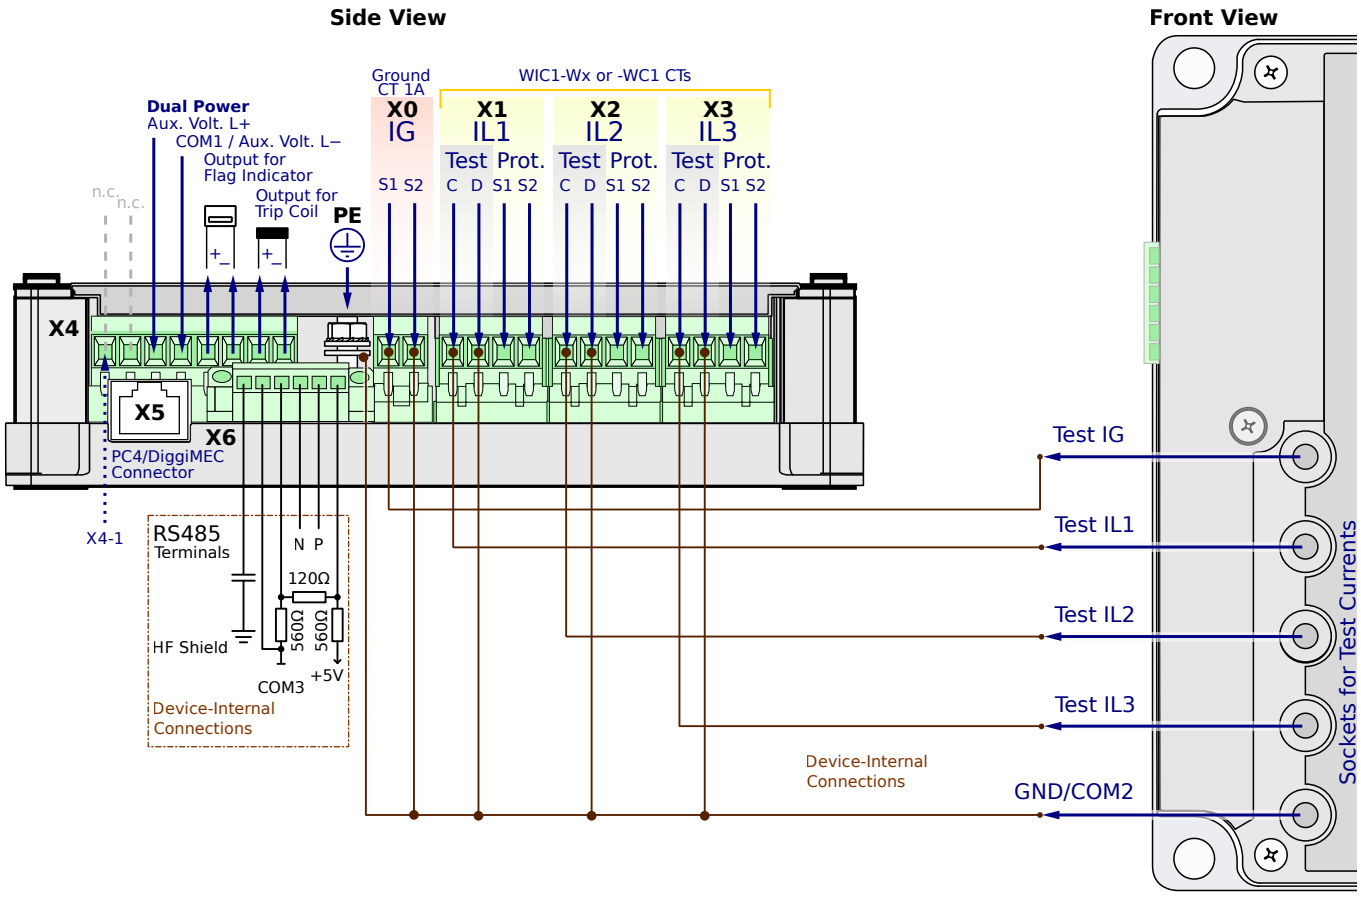


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2ABH

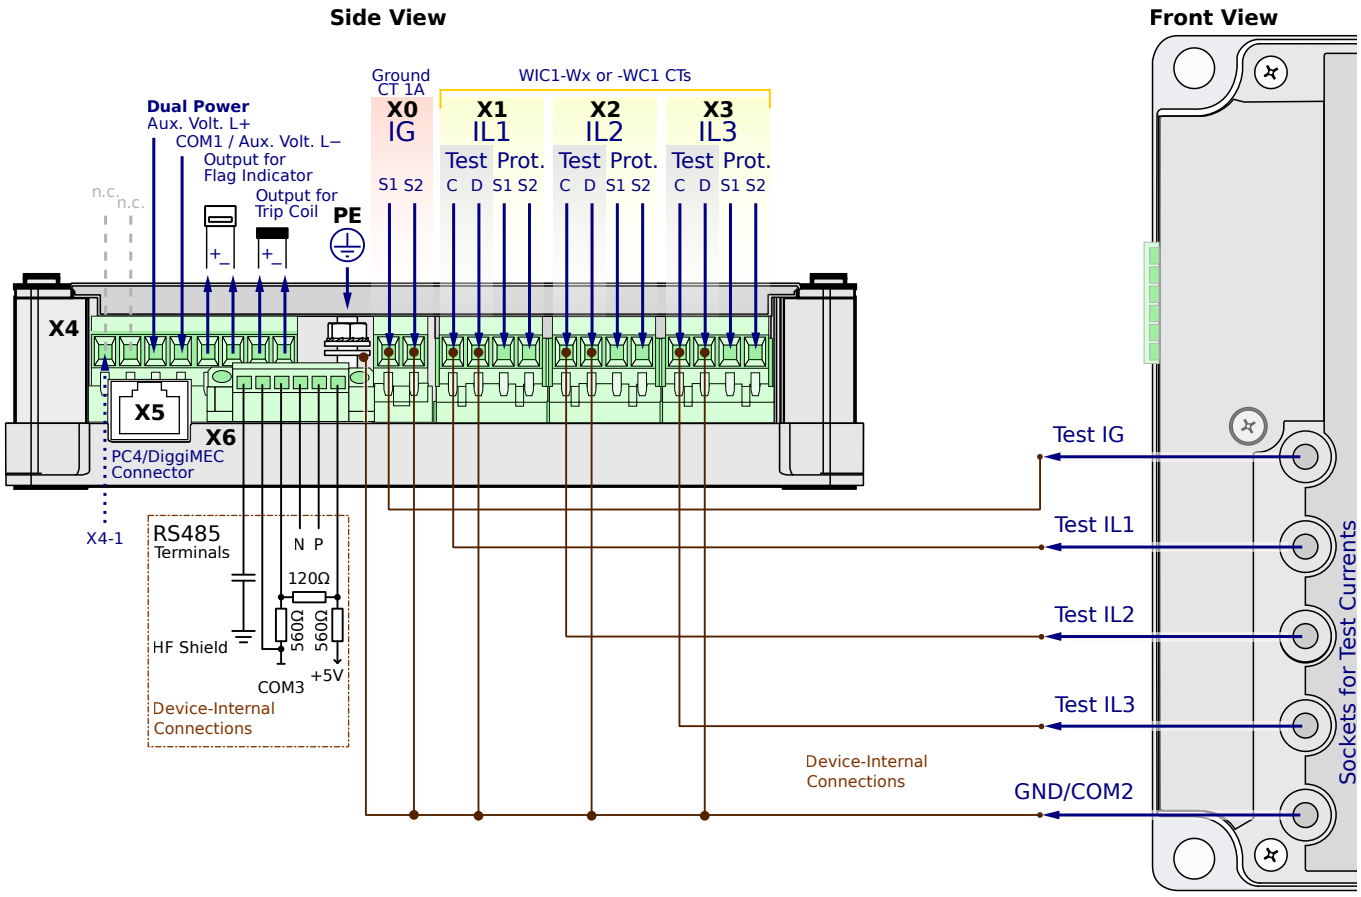


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2AC0

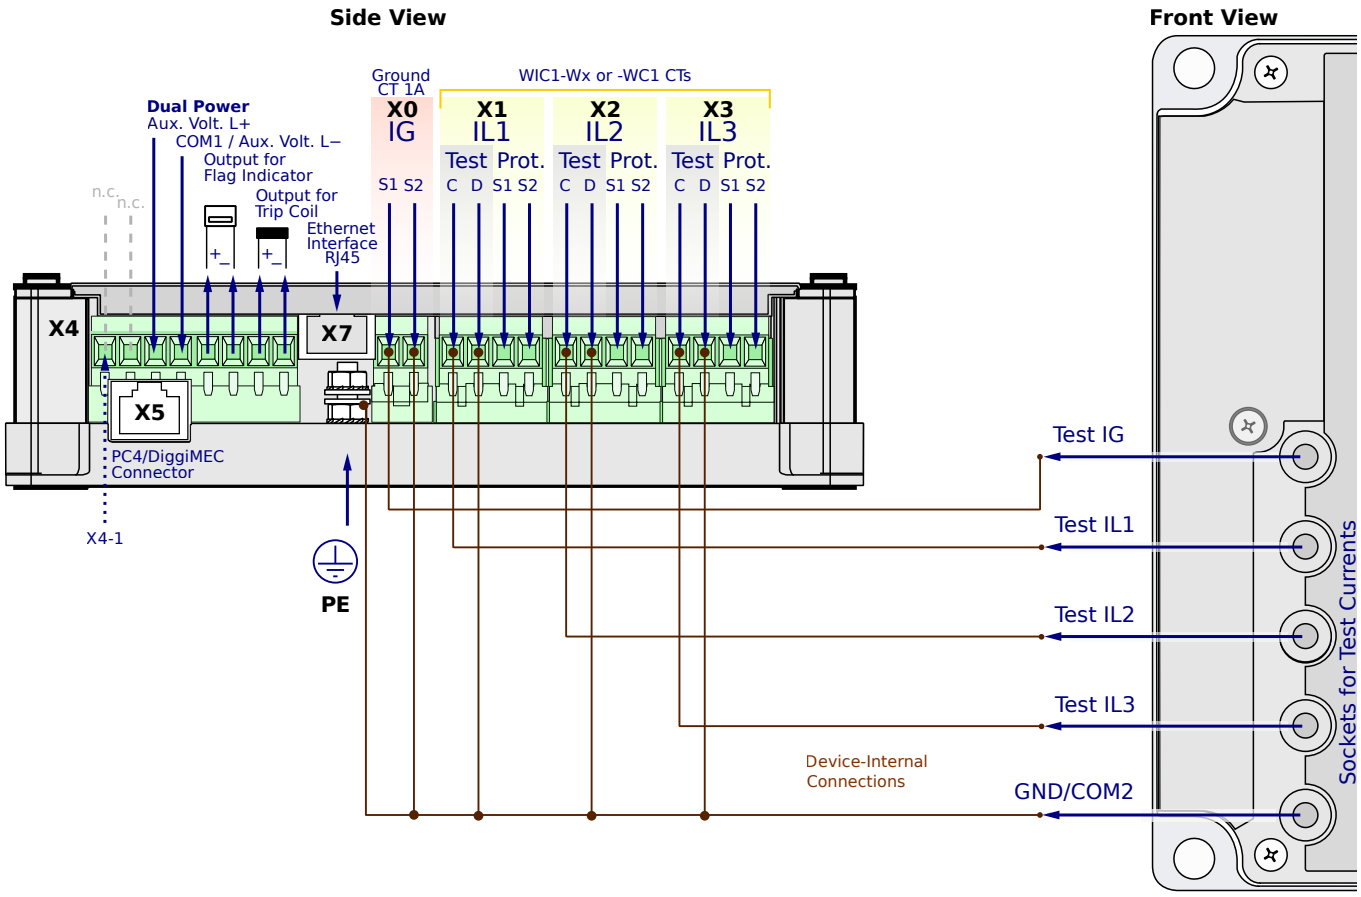


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2ACH

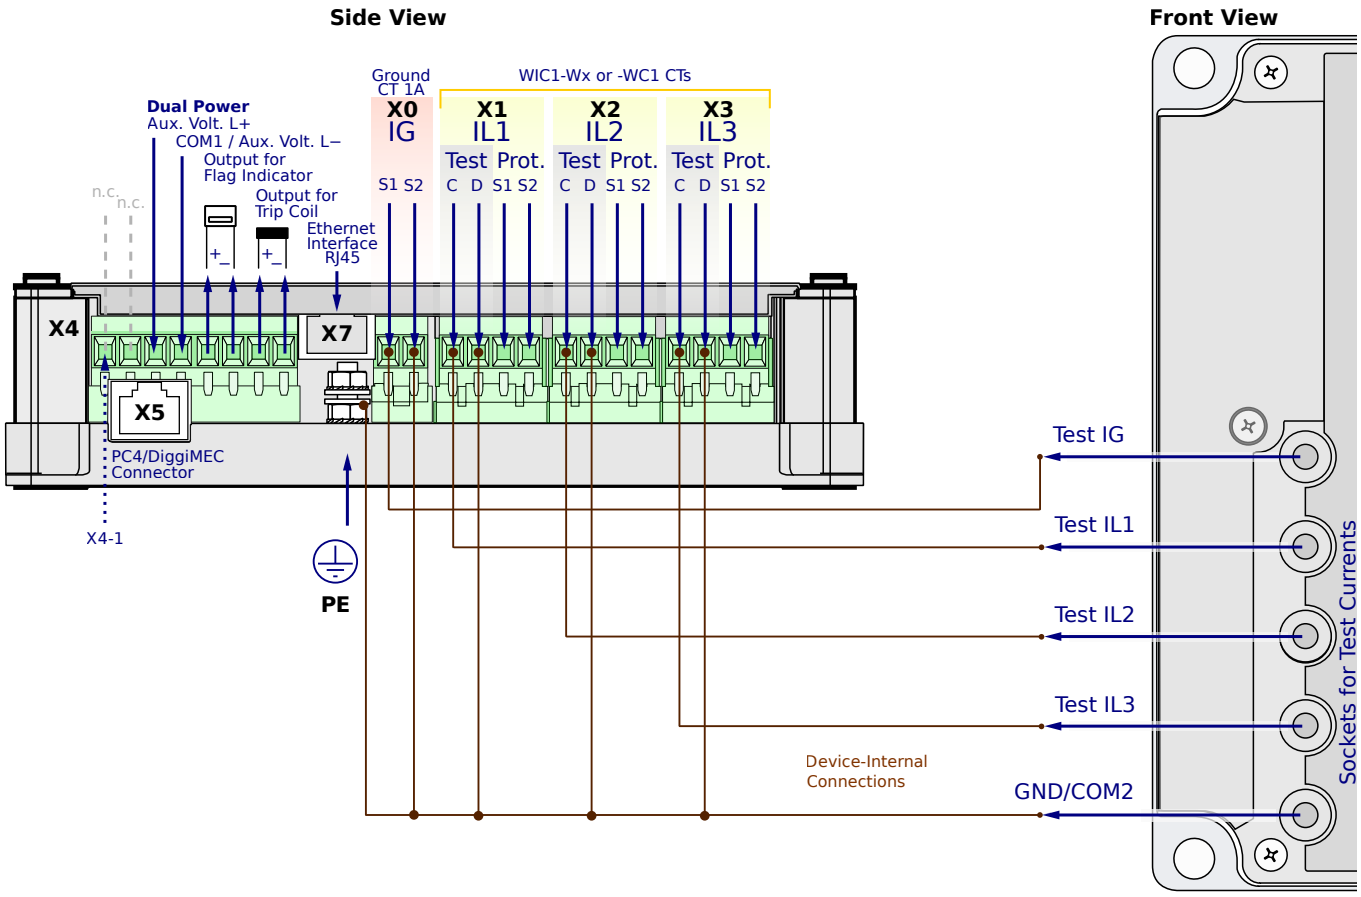


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2AL0

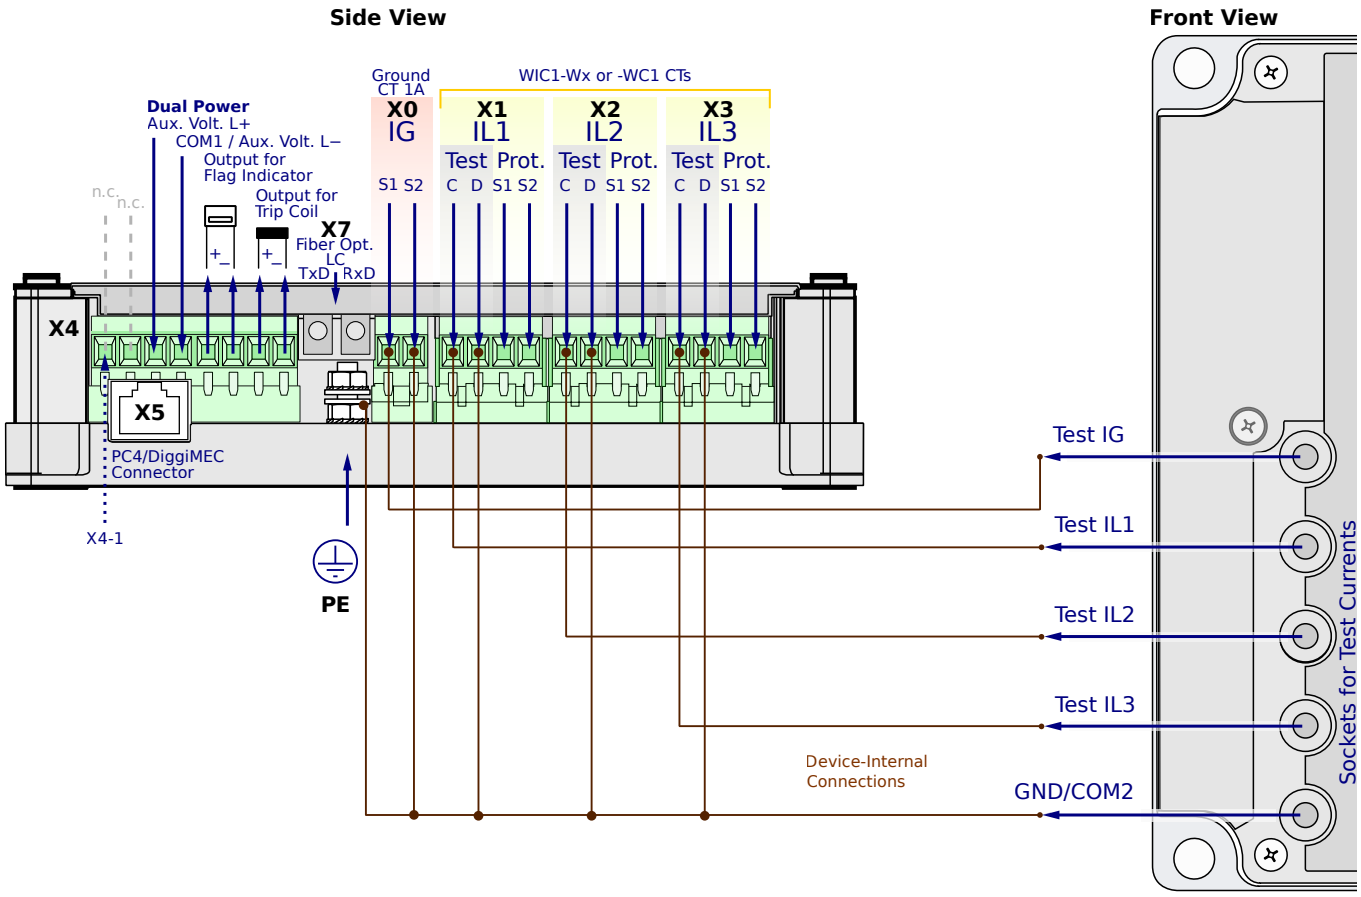


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2ALH

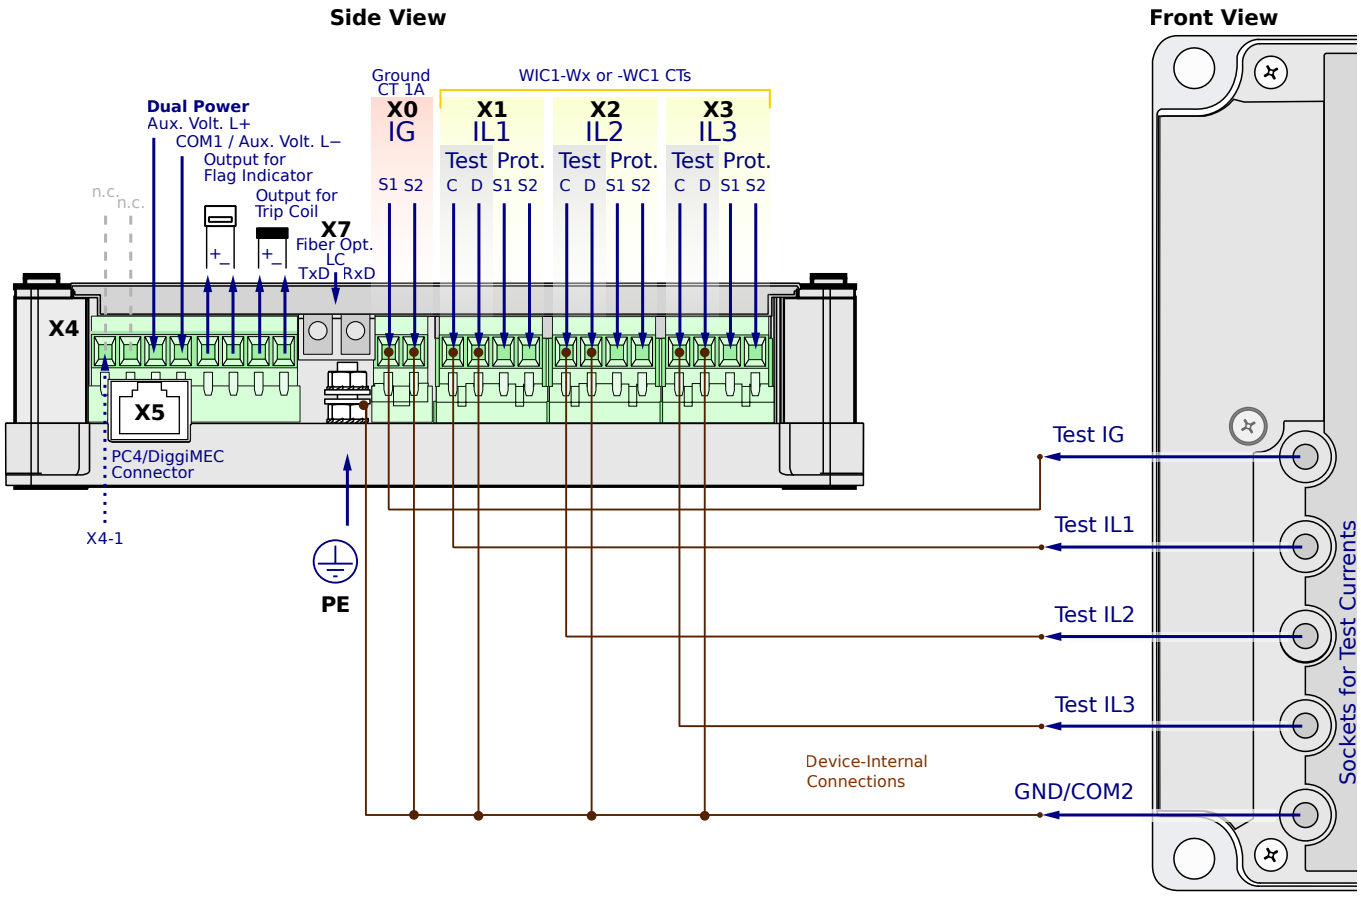


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2PA0

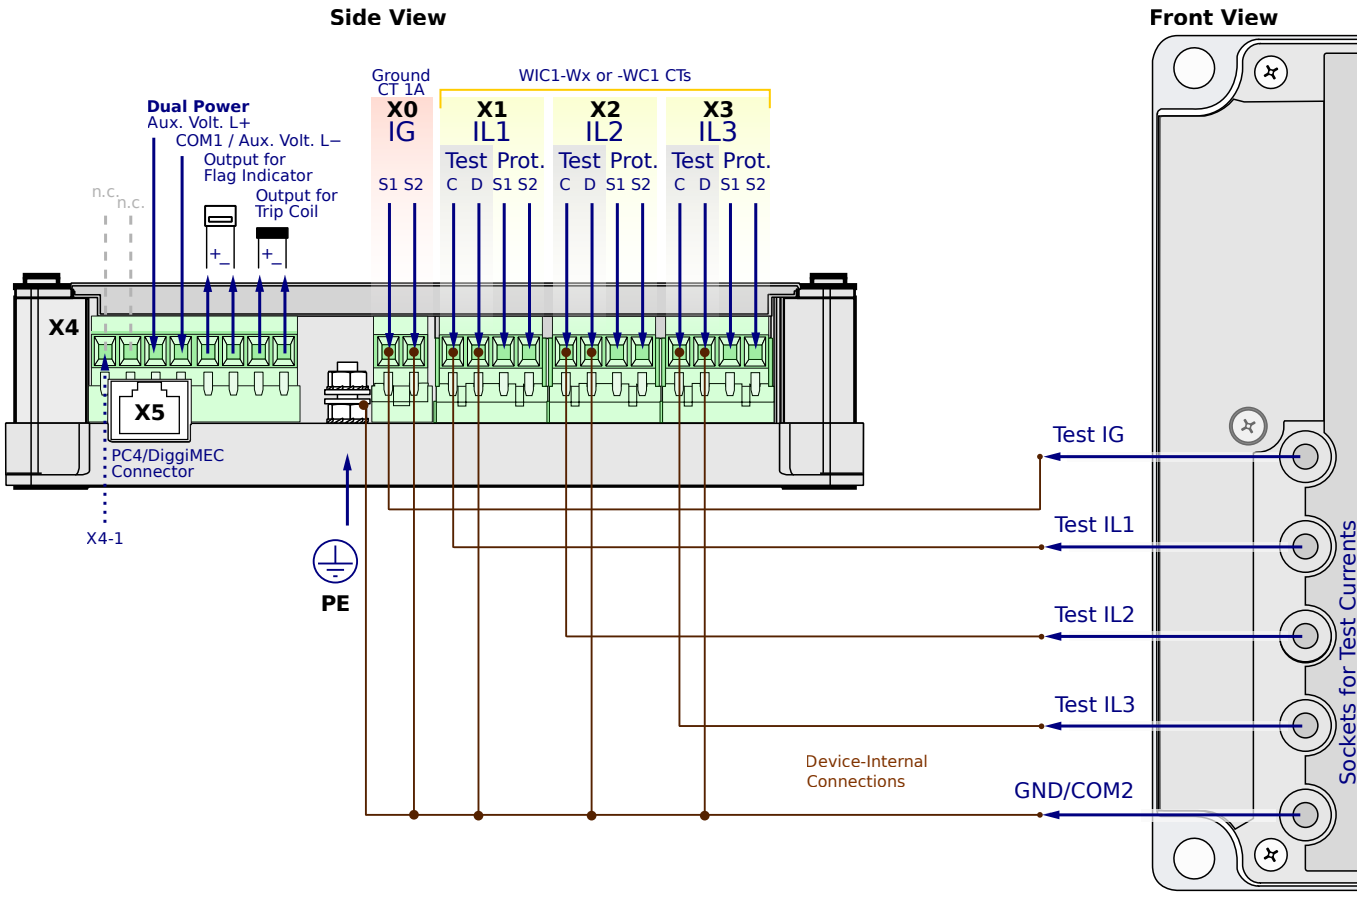


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2PAH

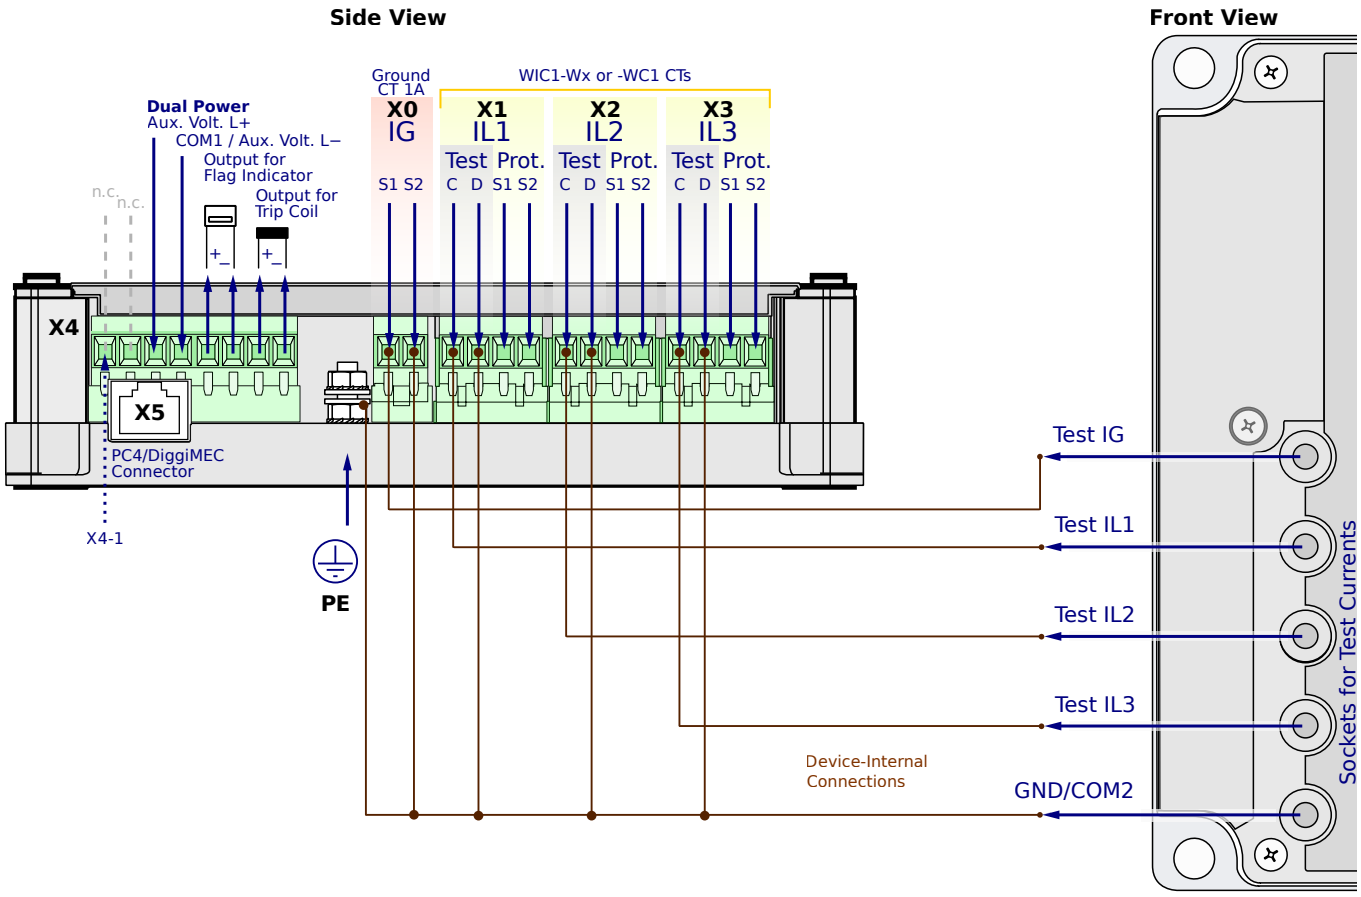


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CM2PB0

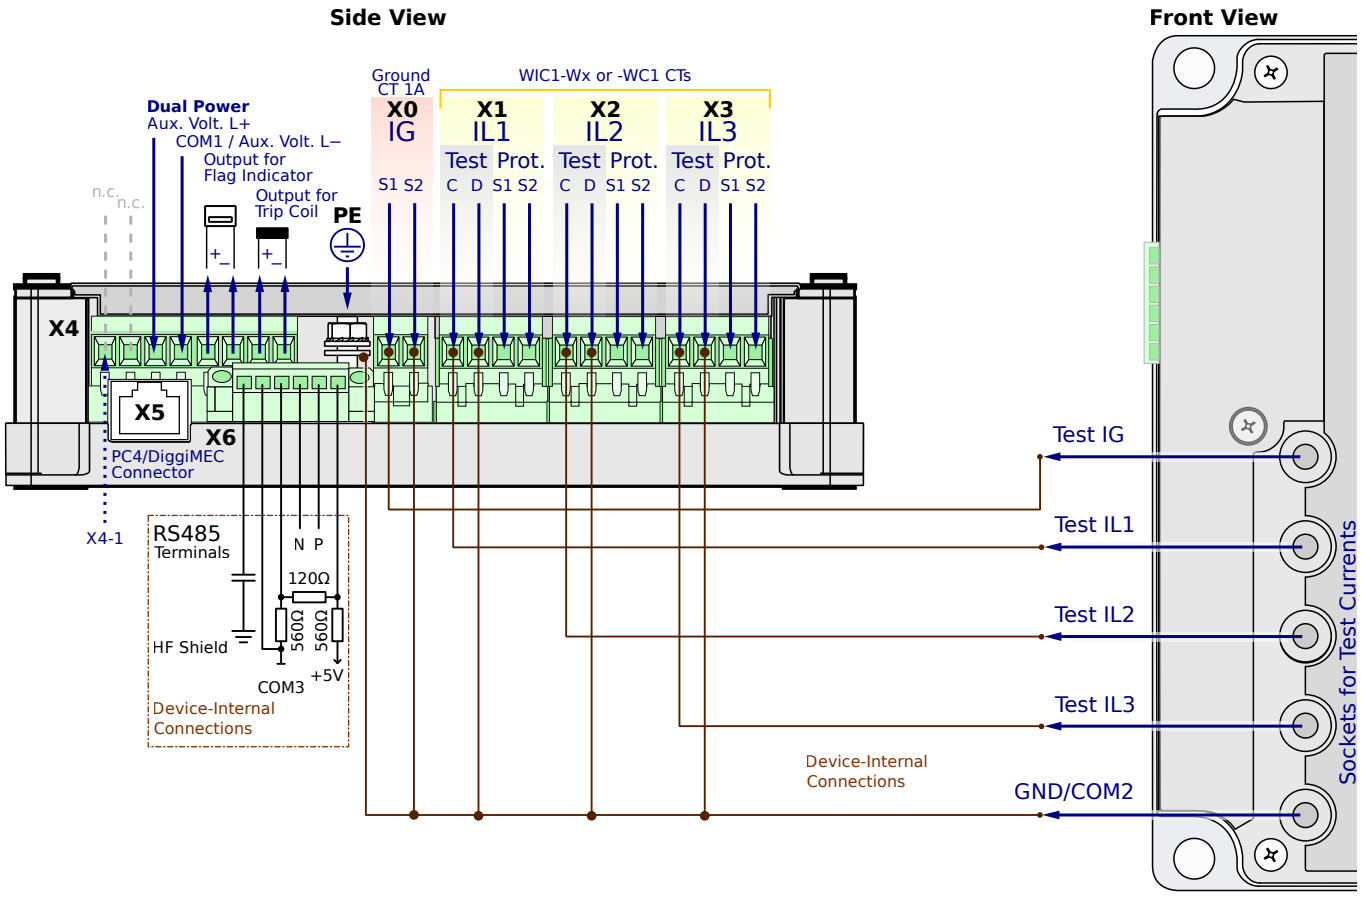


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2PBH

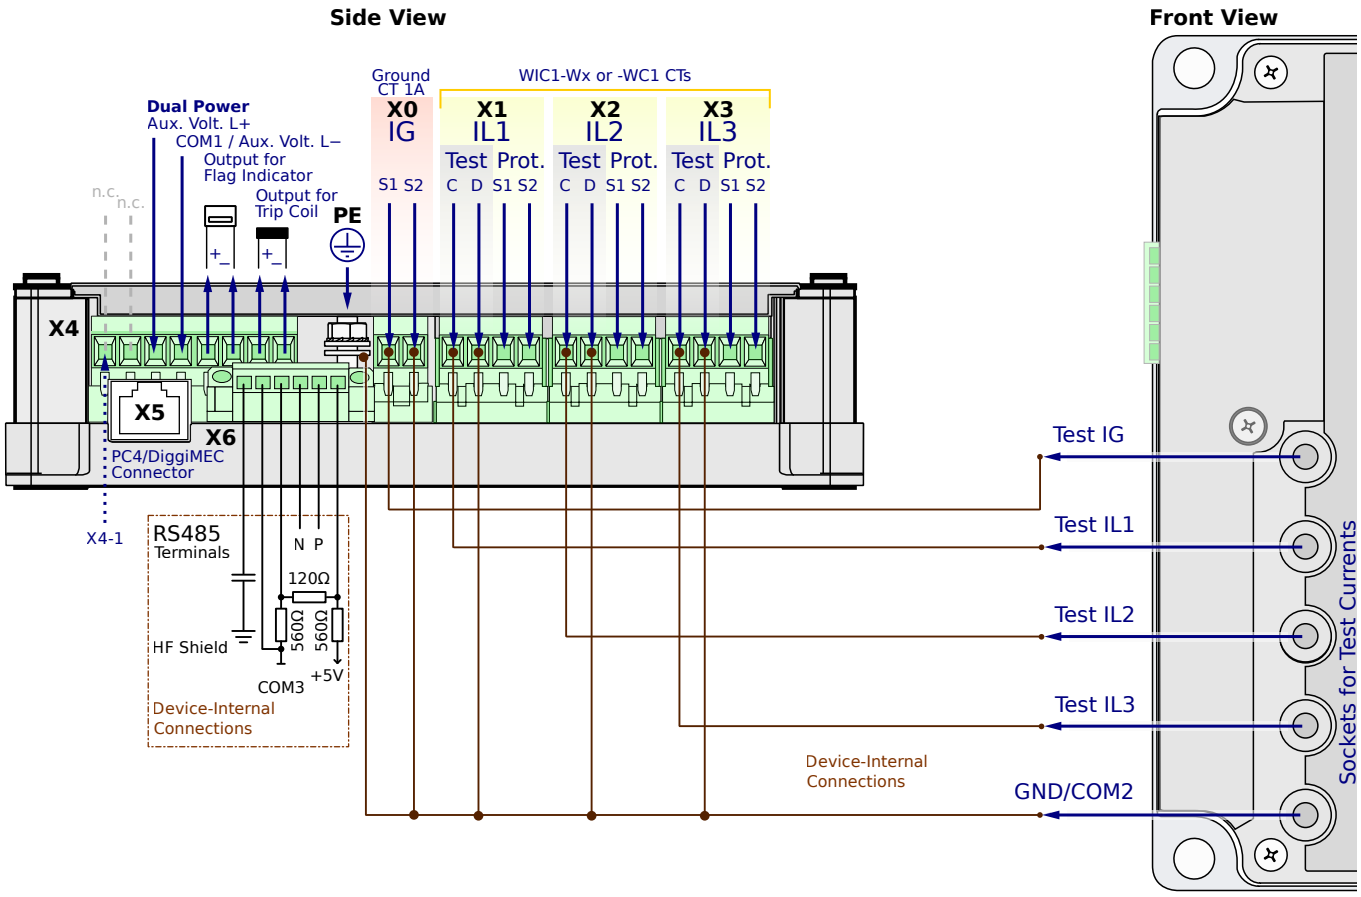


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CM2PC0

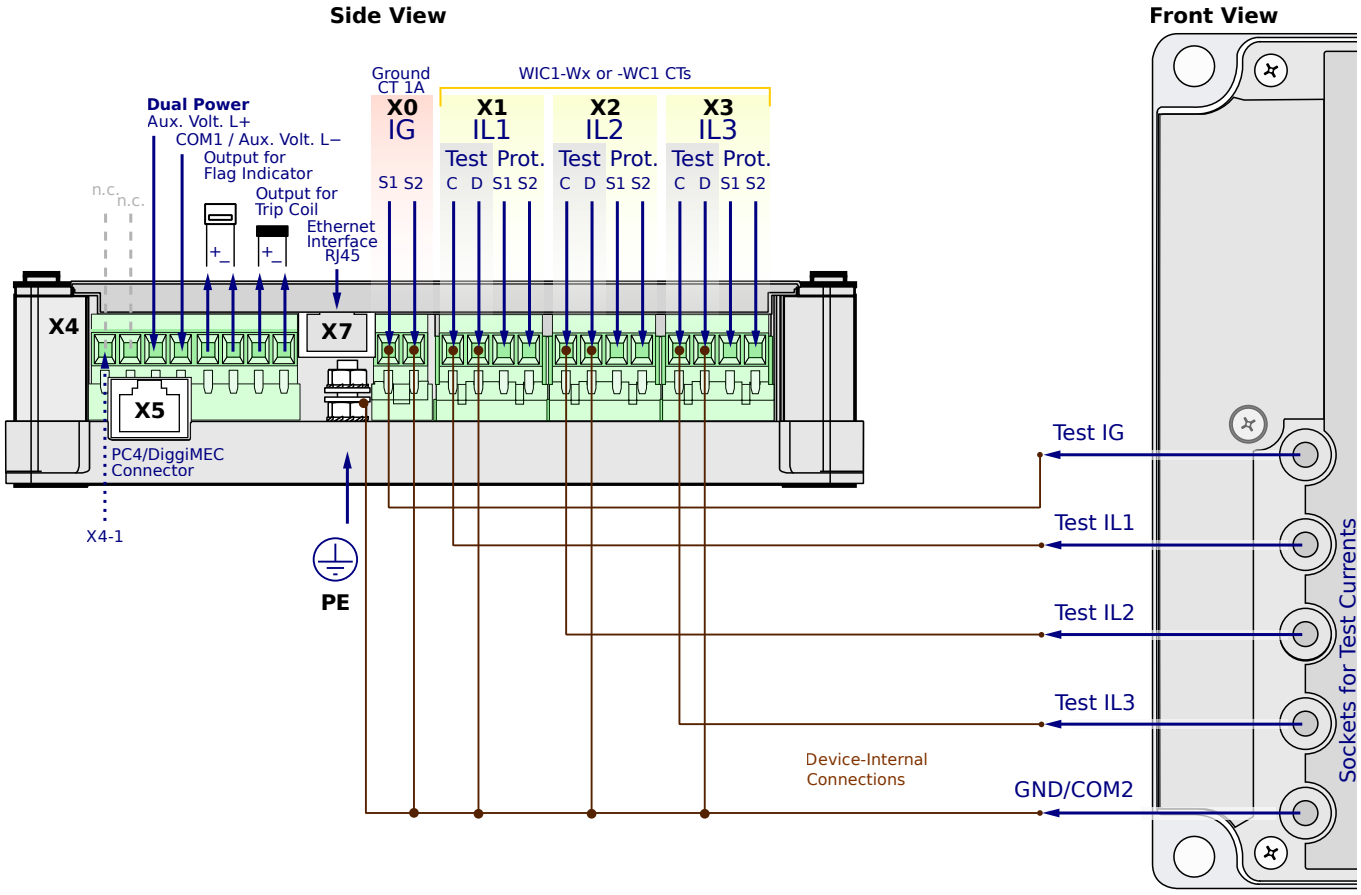


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2PCH

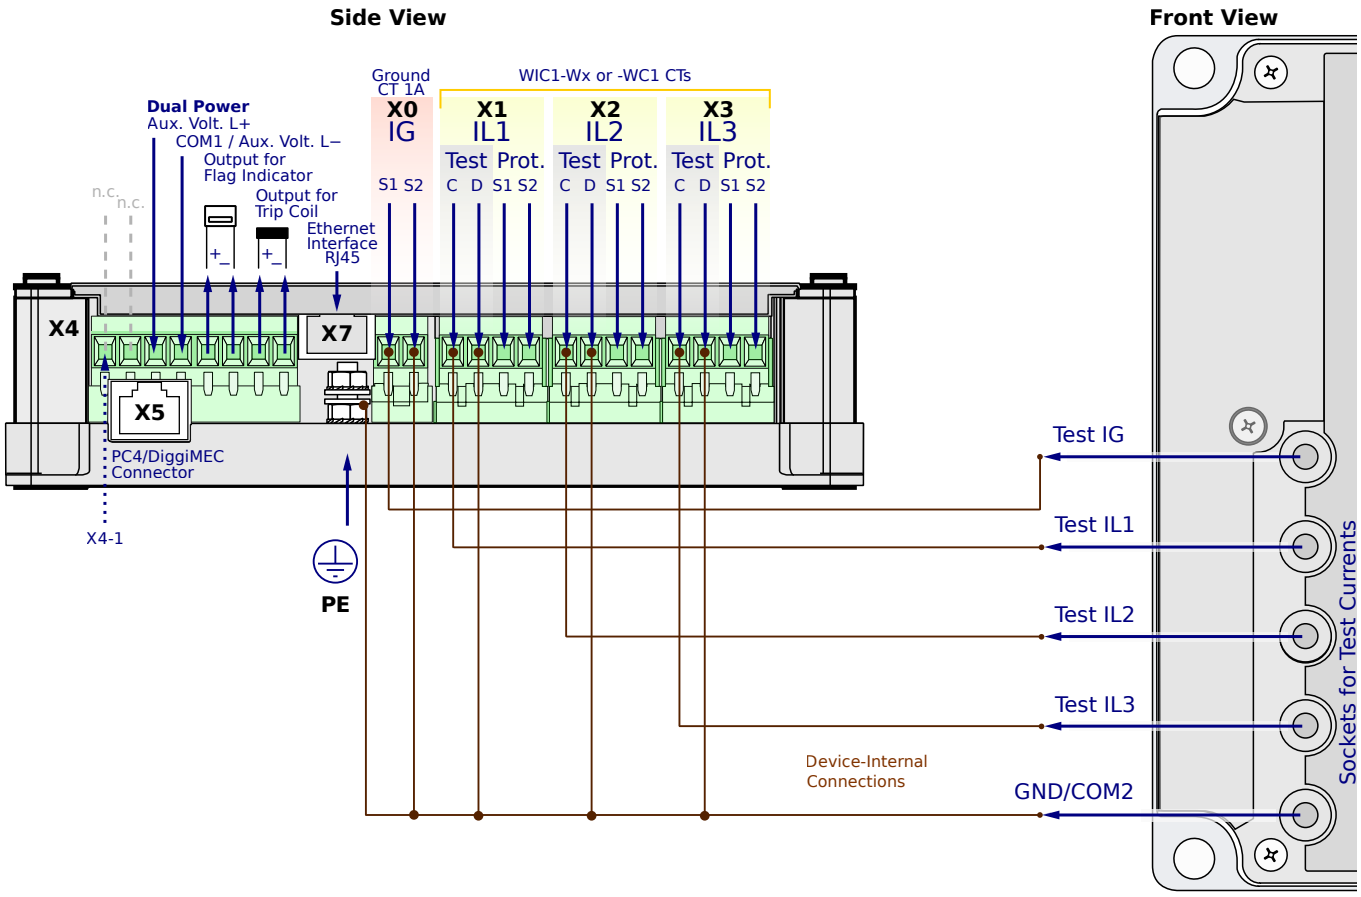


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CM2PL0

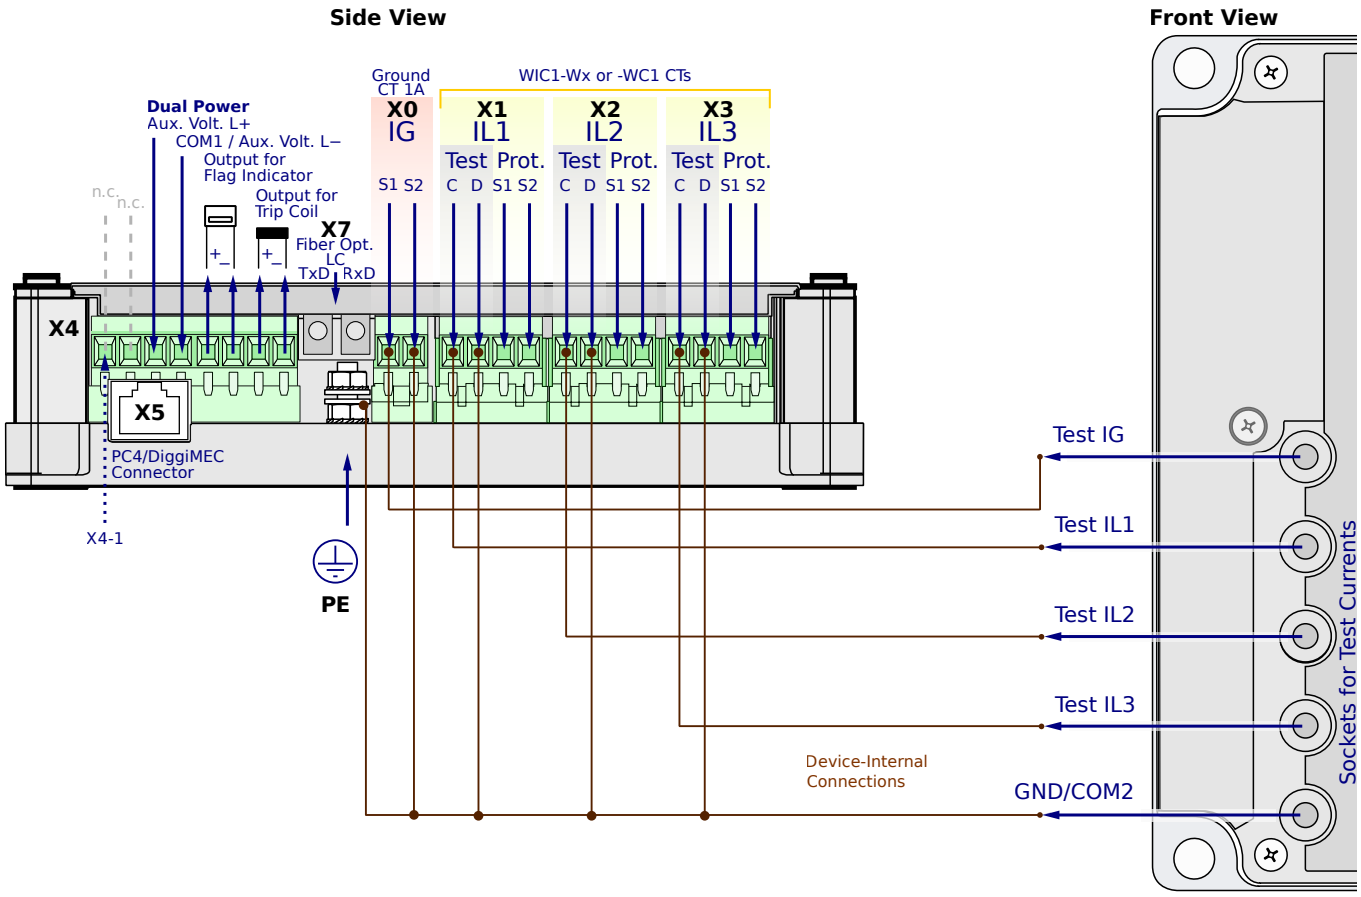


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CM2PLH

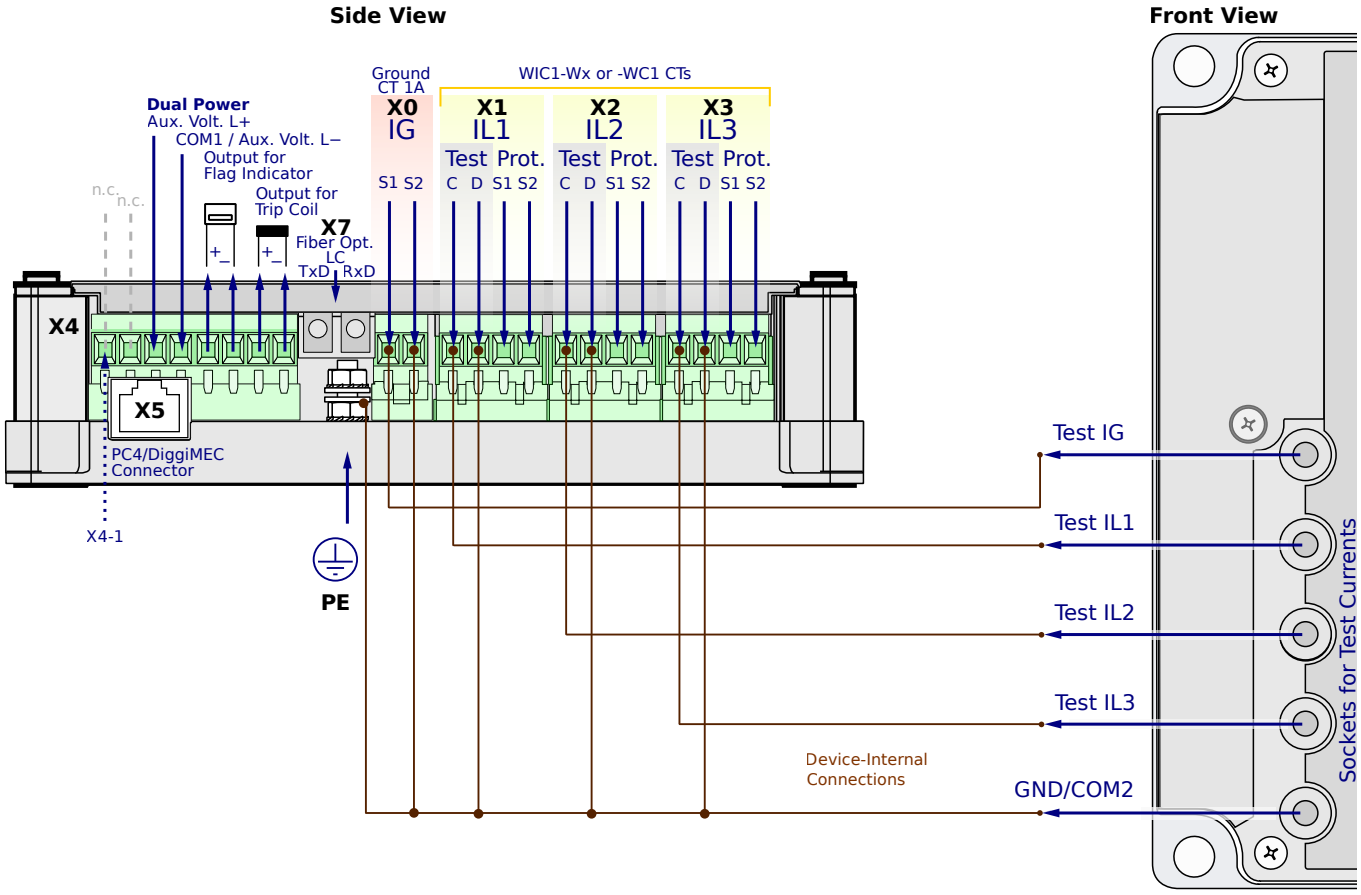


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1SA0

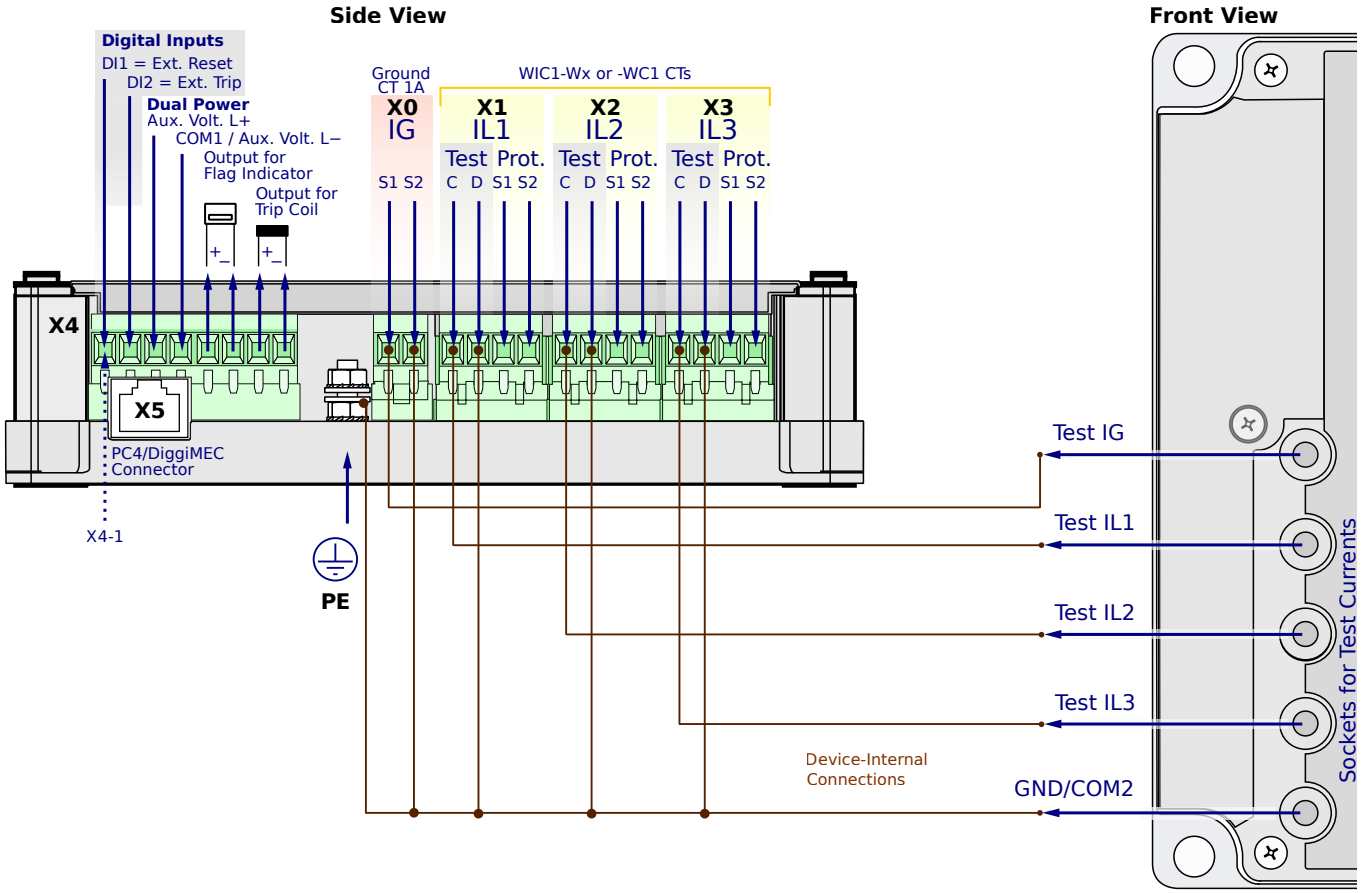


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1SAH

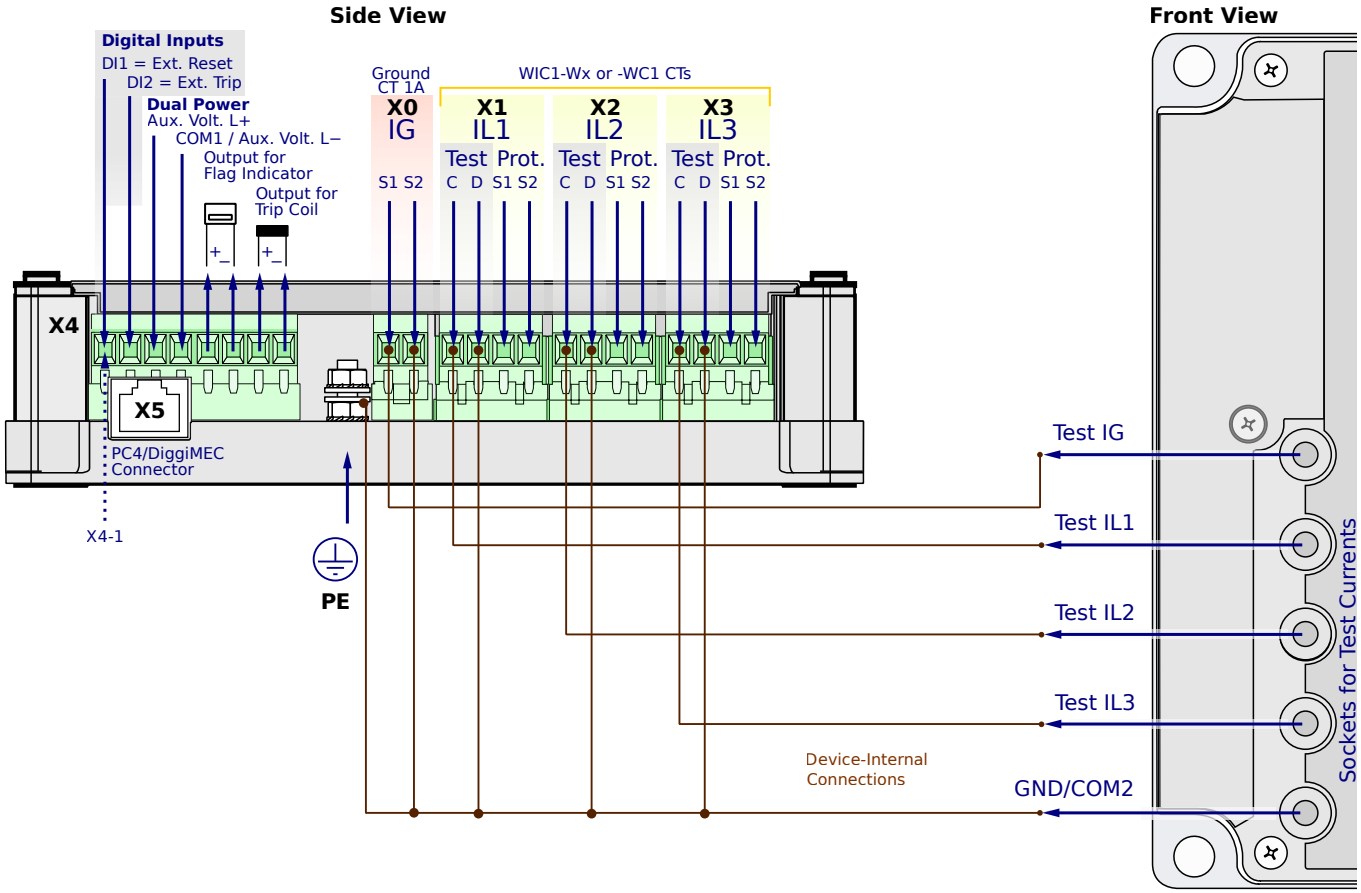


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1SB0

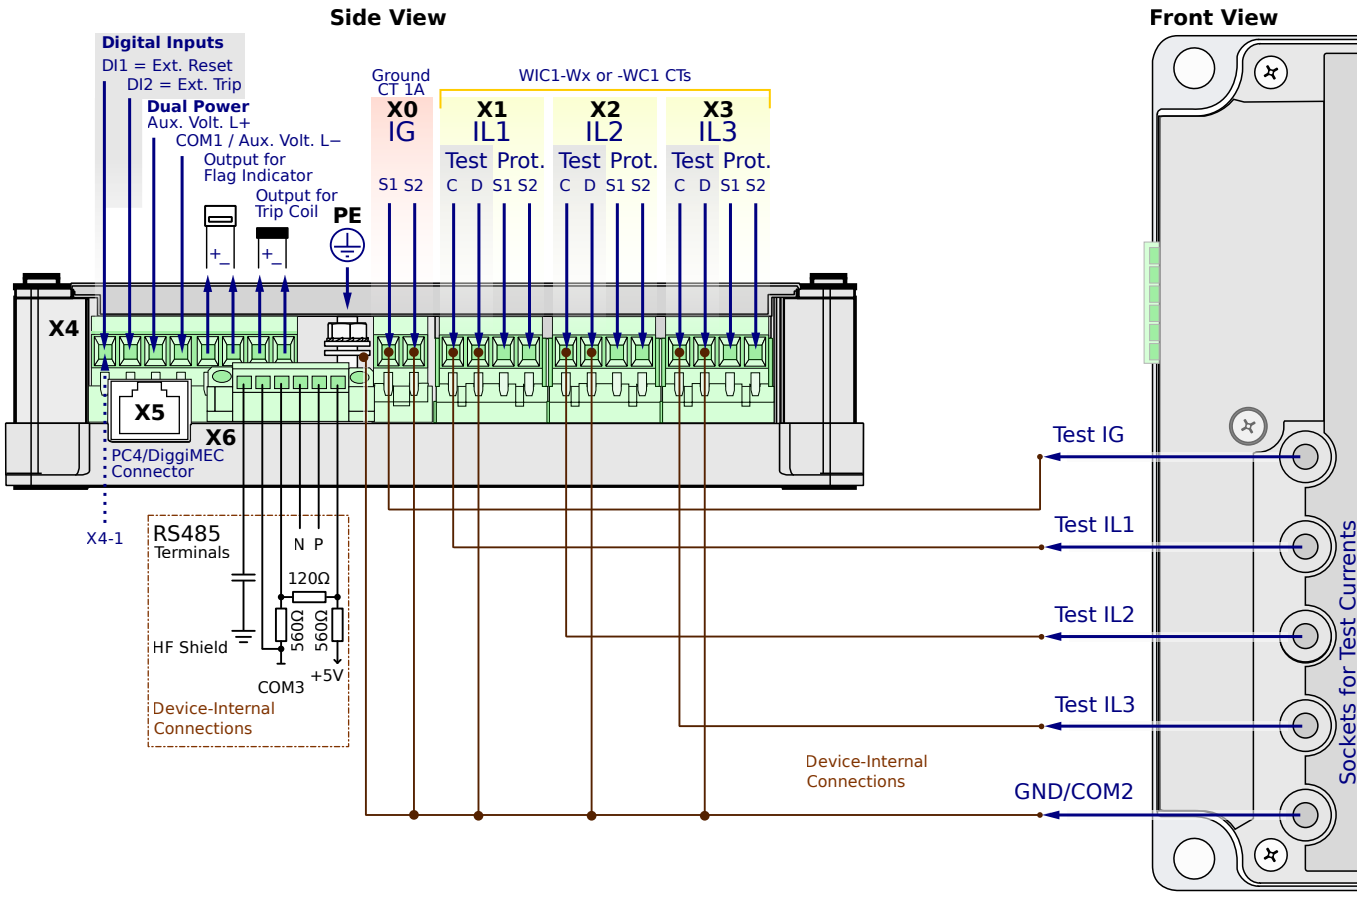


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1SBH

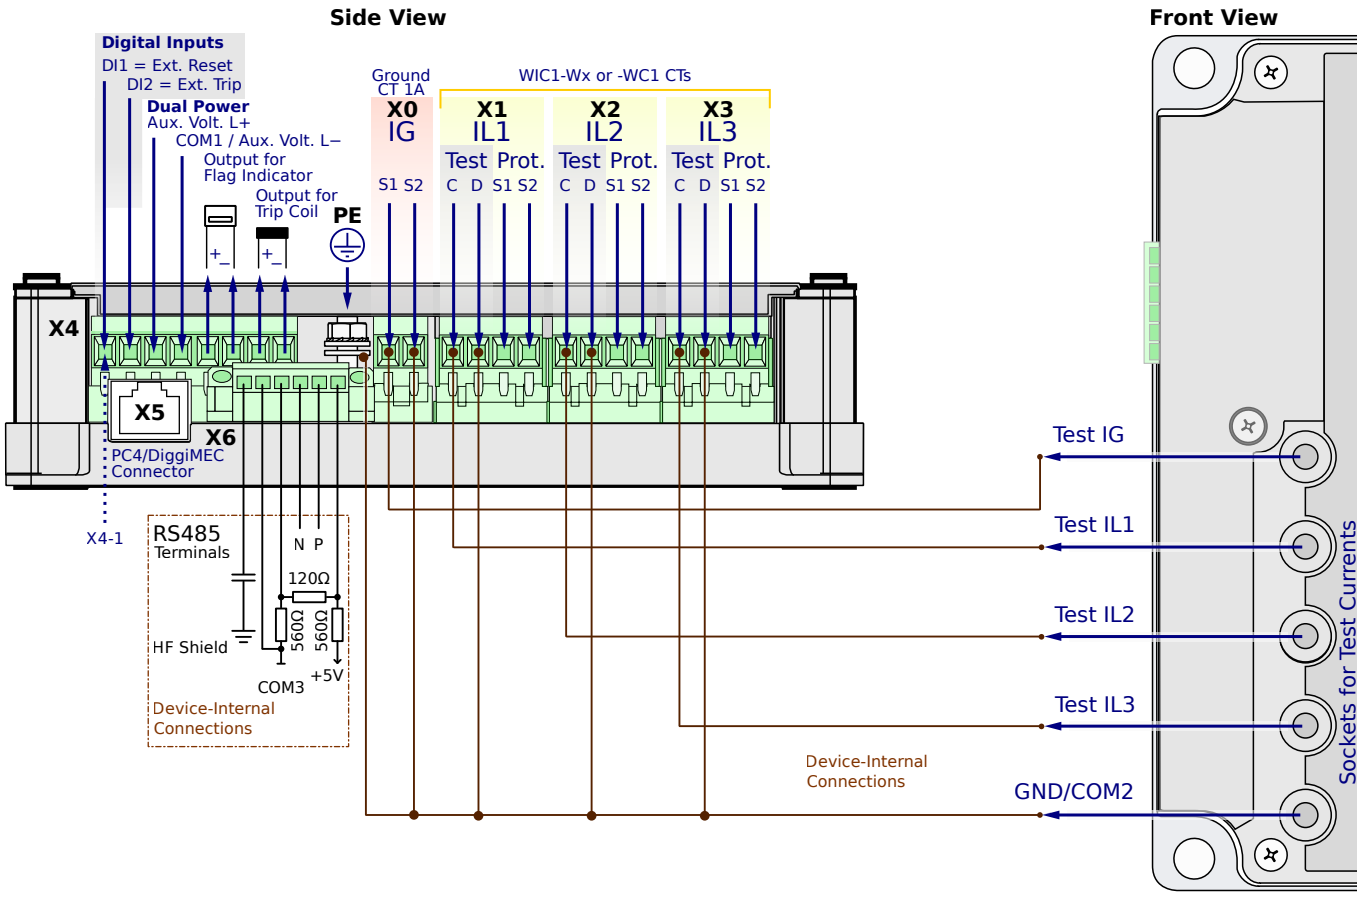


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1SC0

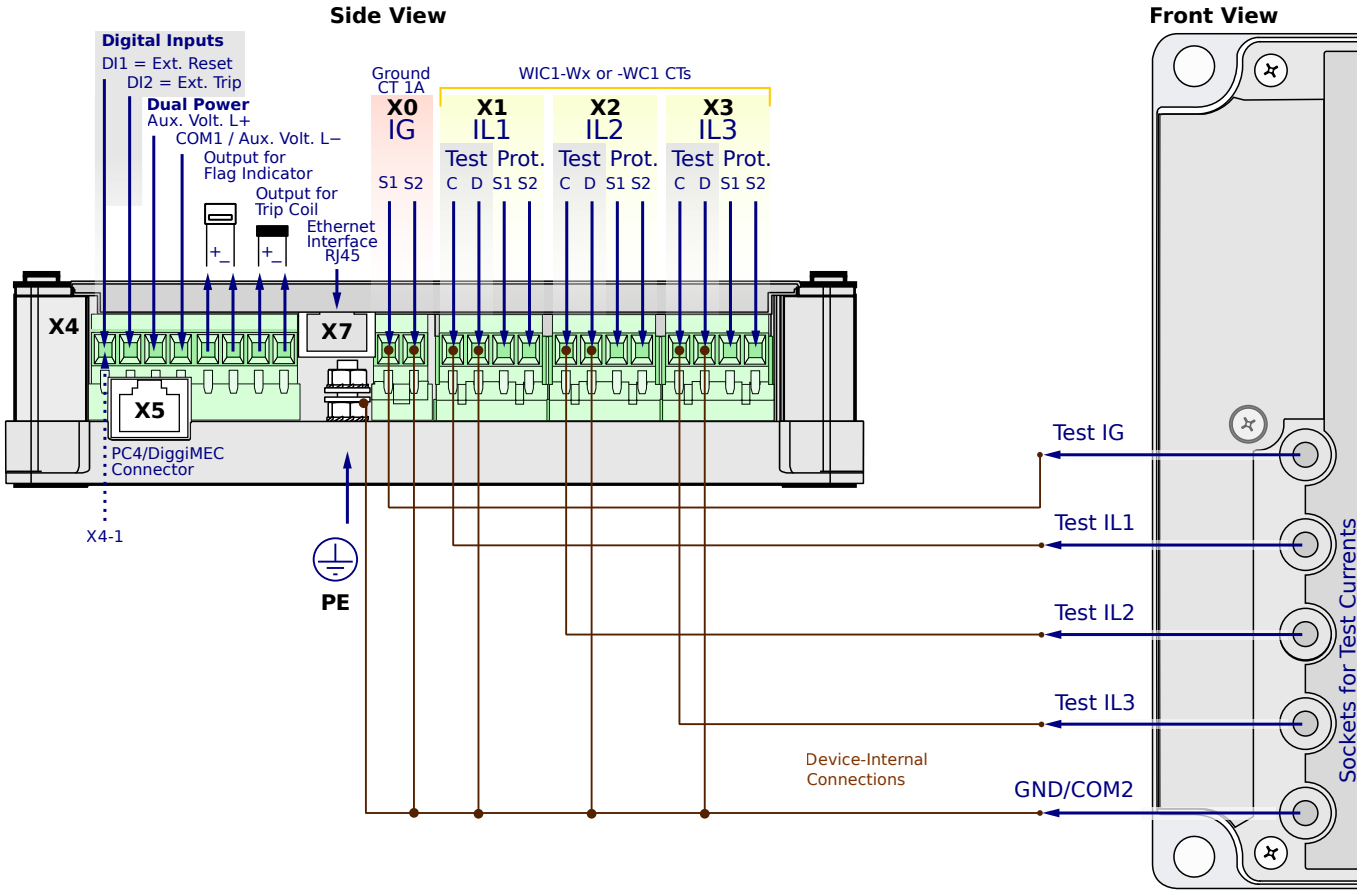


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1SCH

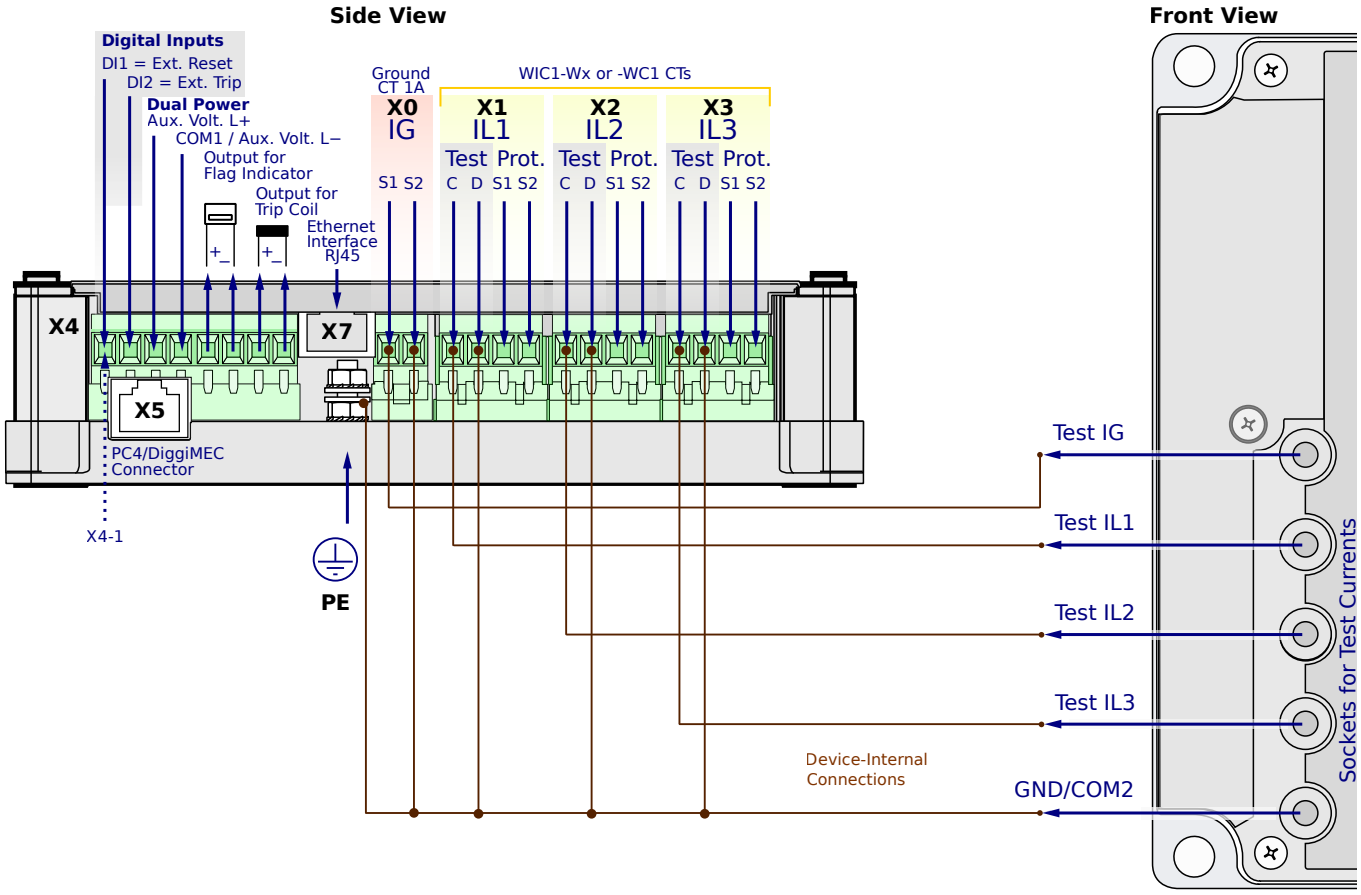


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1SL0

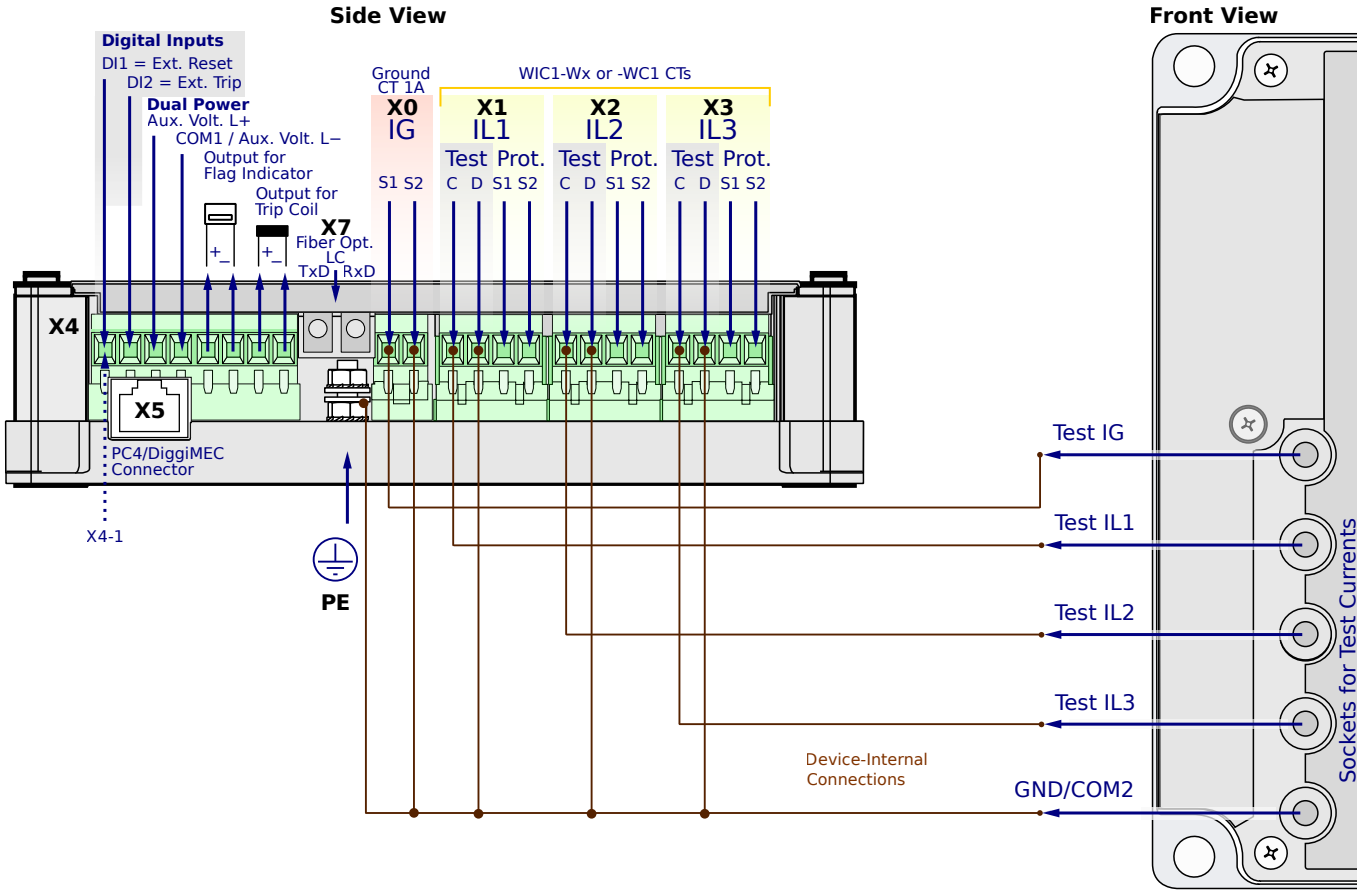


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1SLH

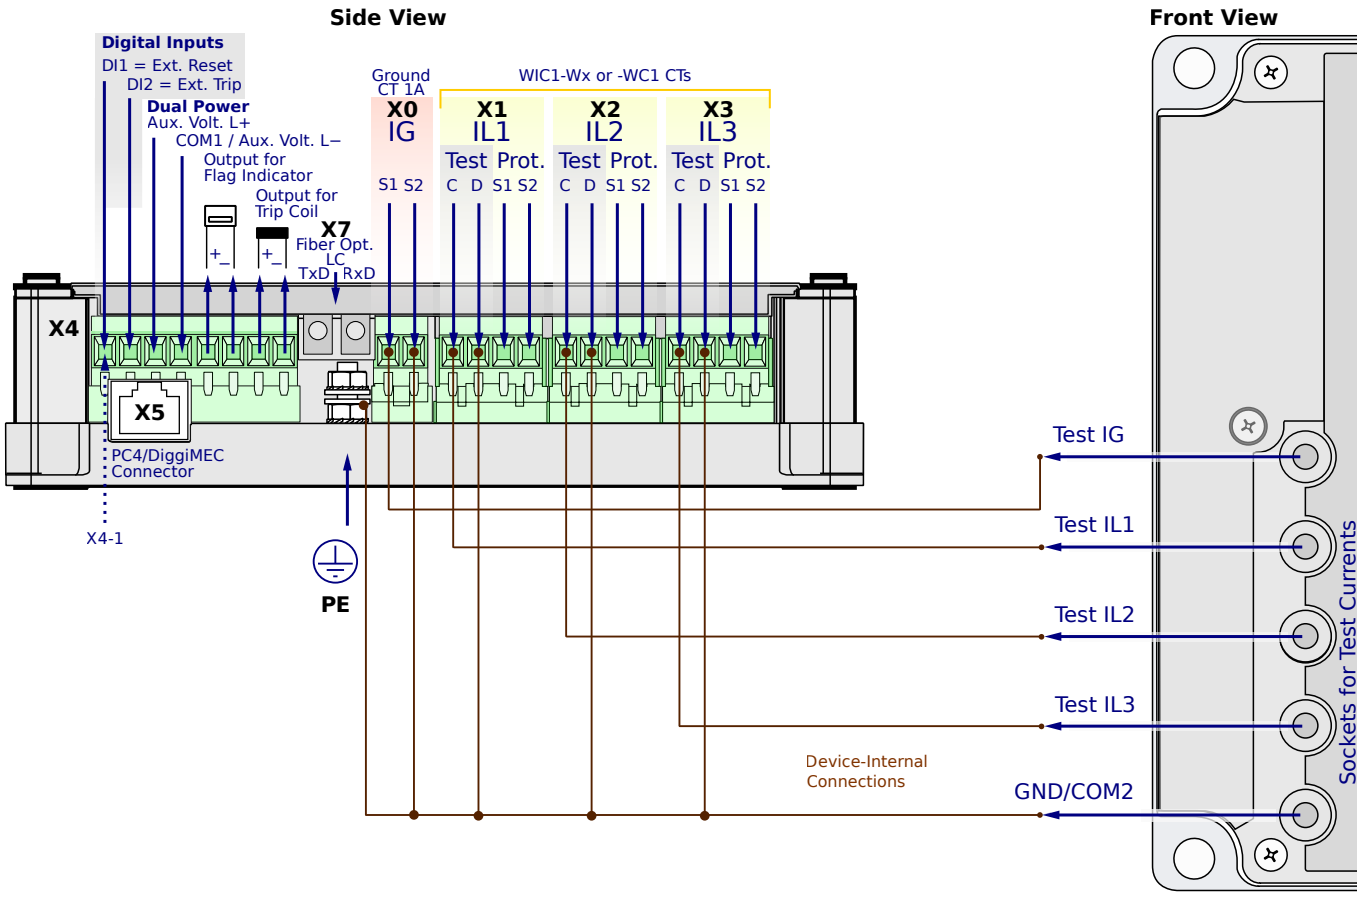


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1AA0

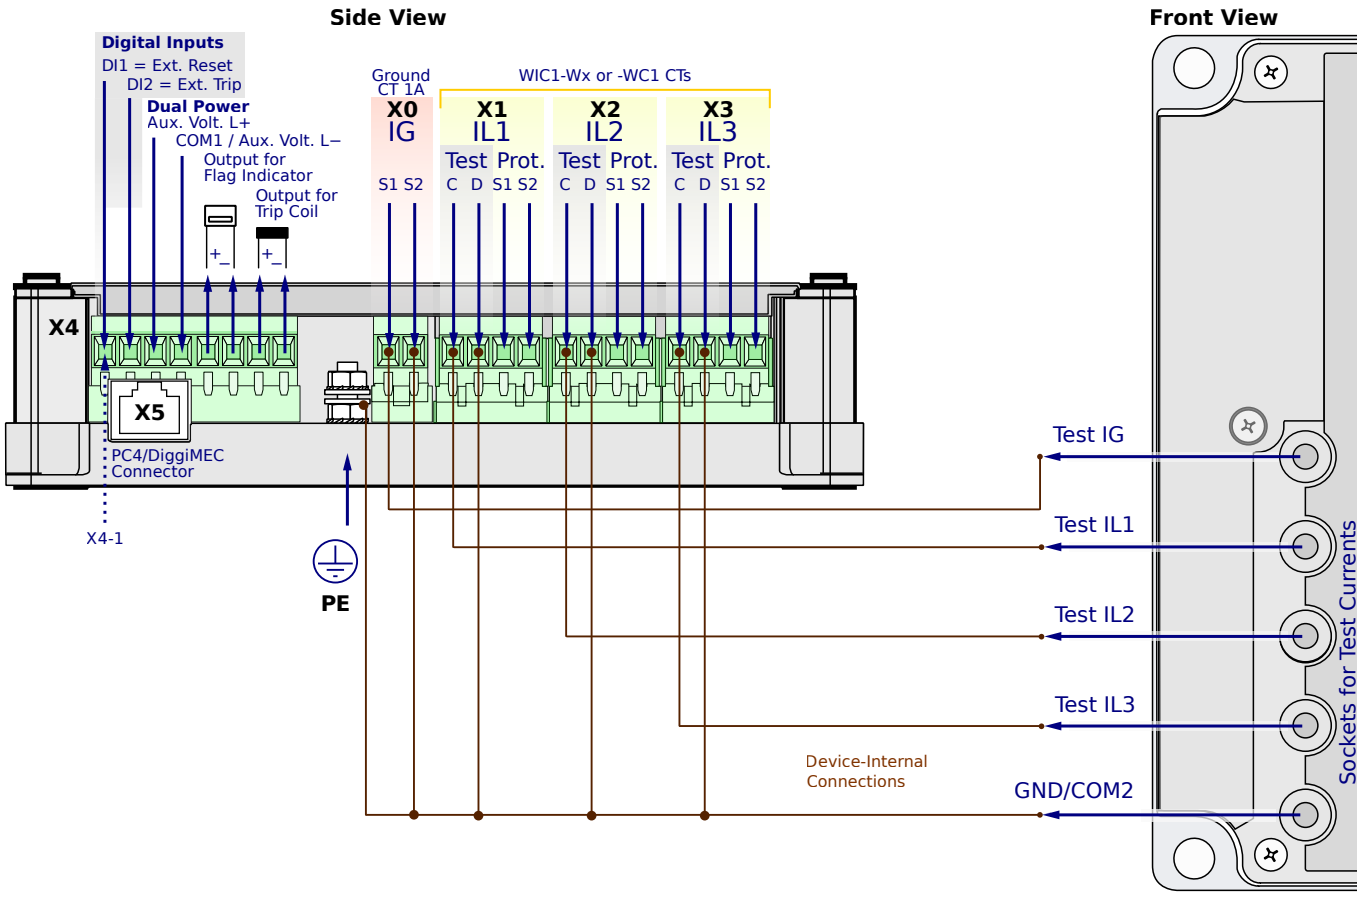


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1AAH

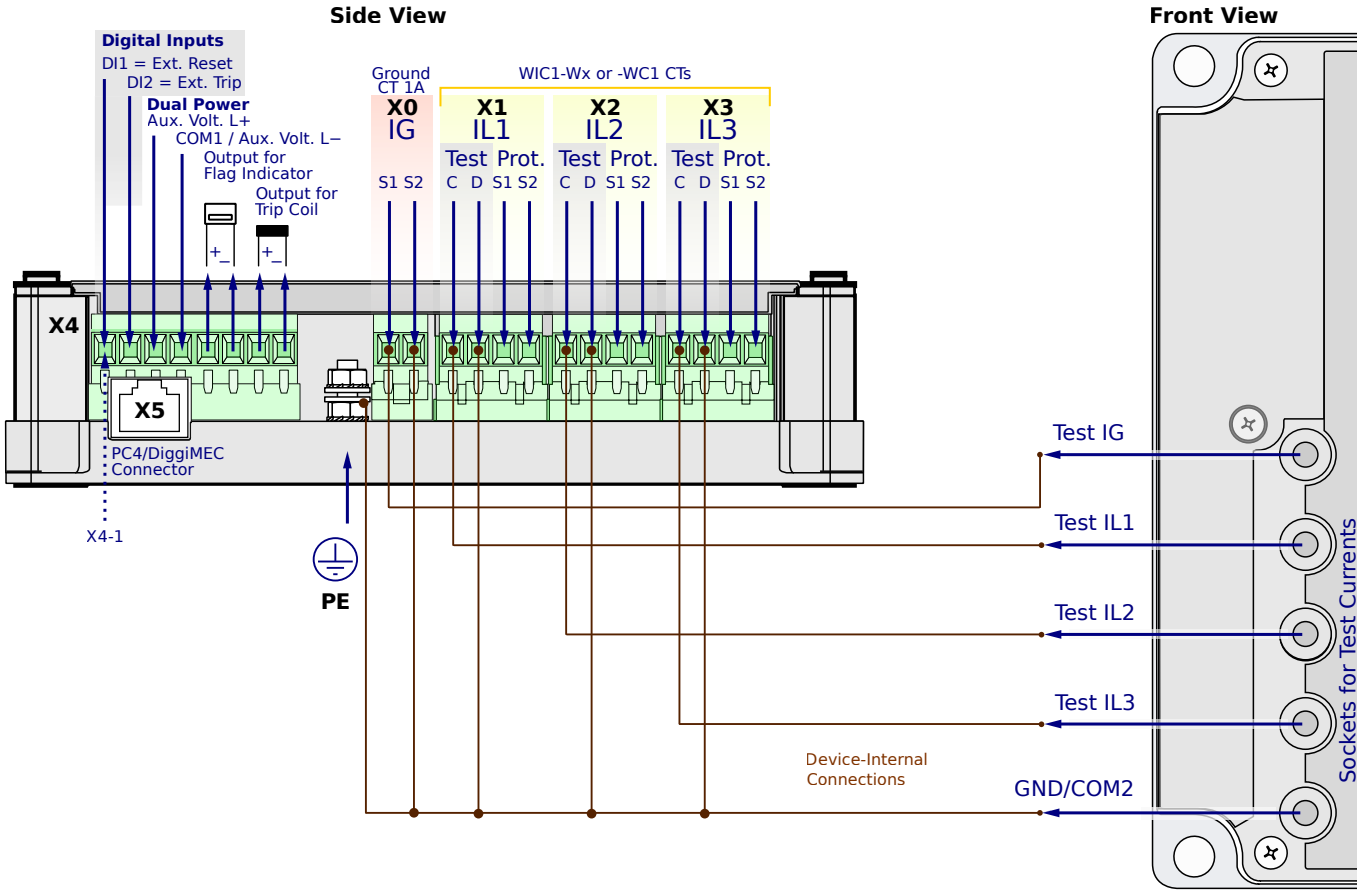


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1AB0

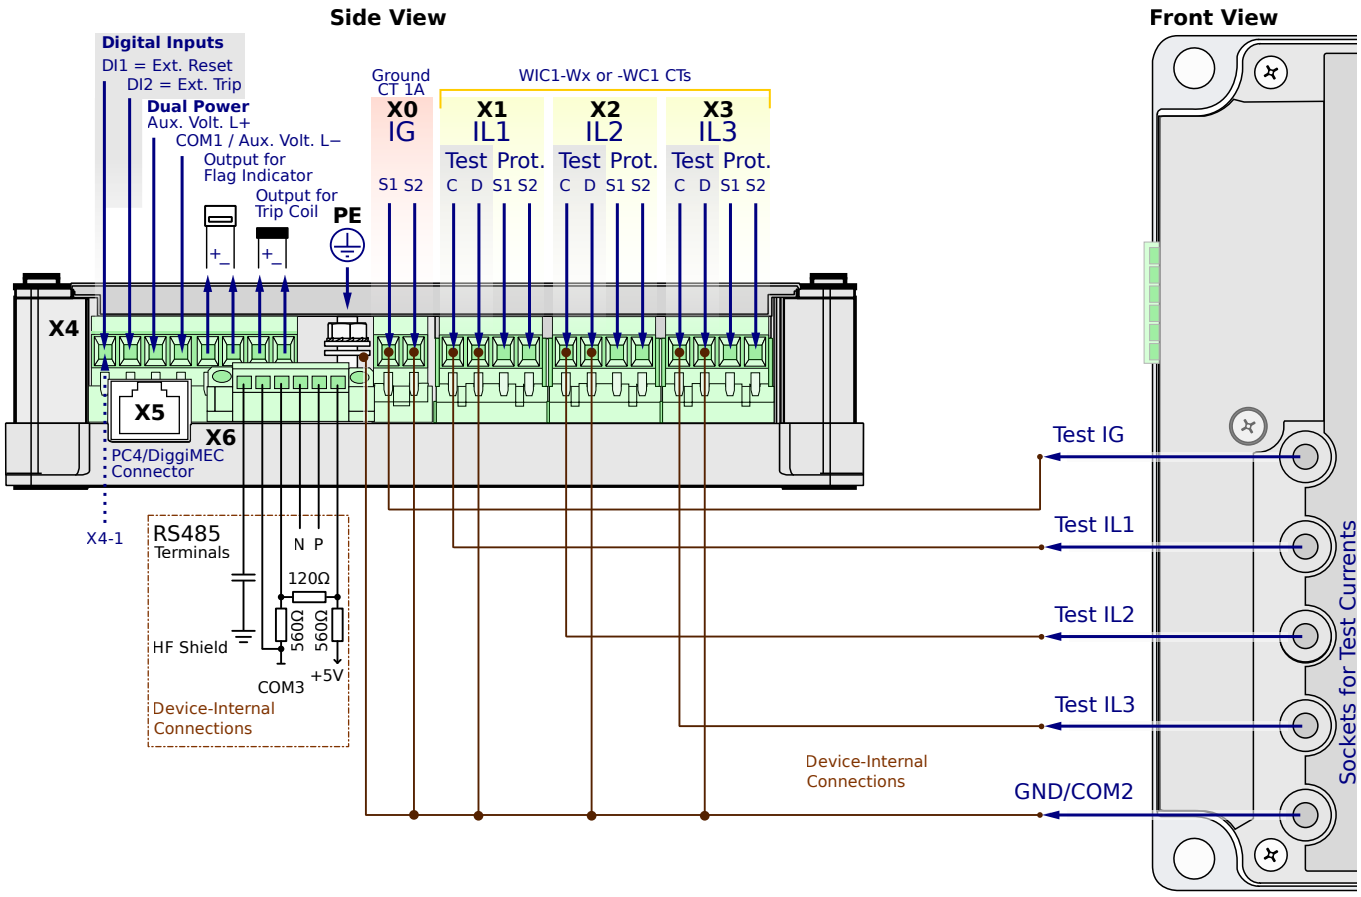


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1ABH

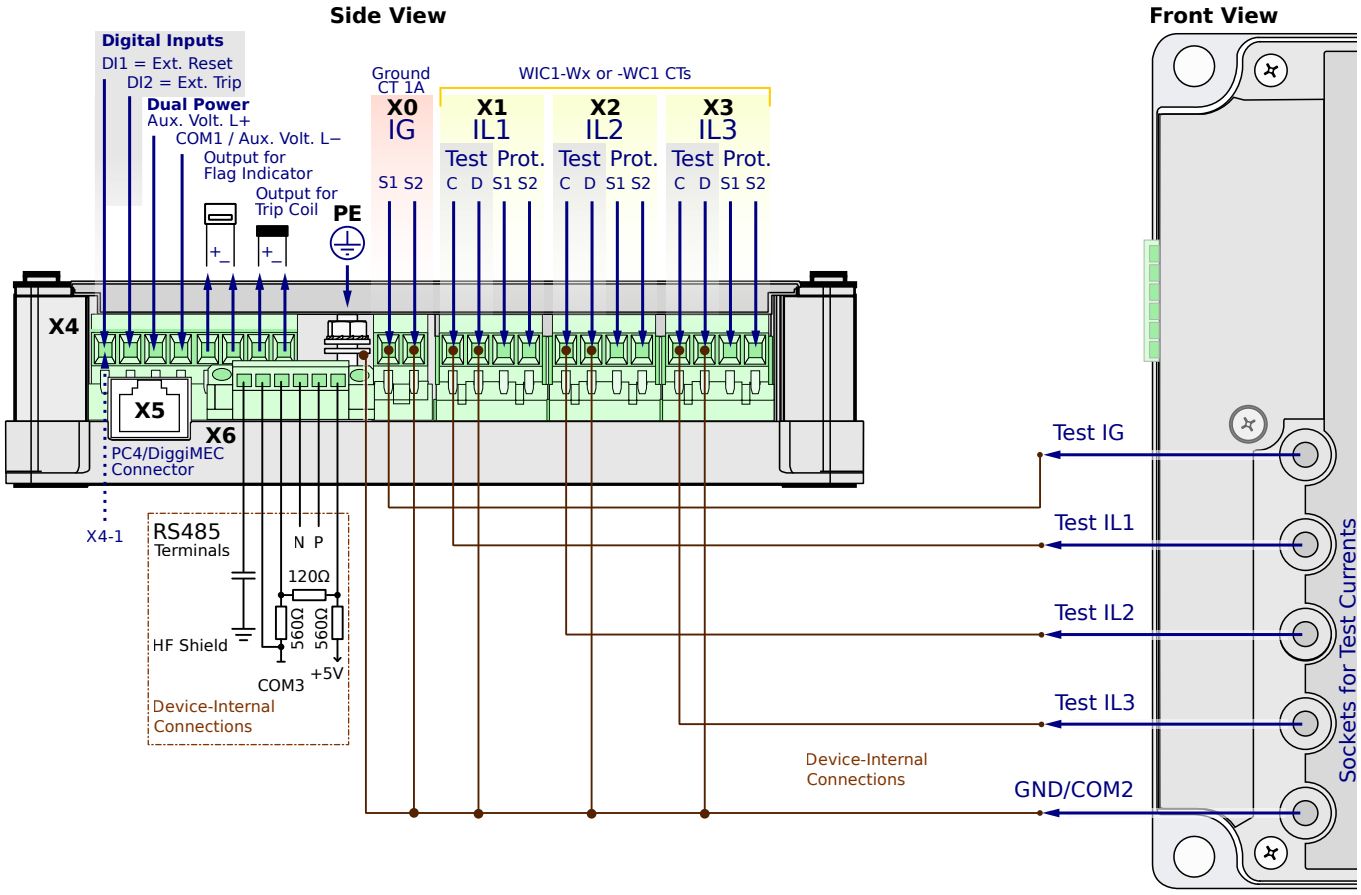


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1AC0

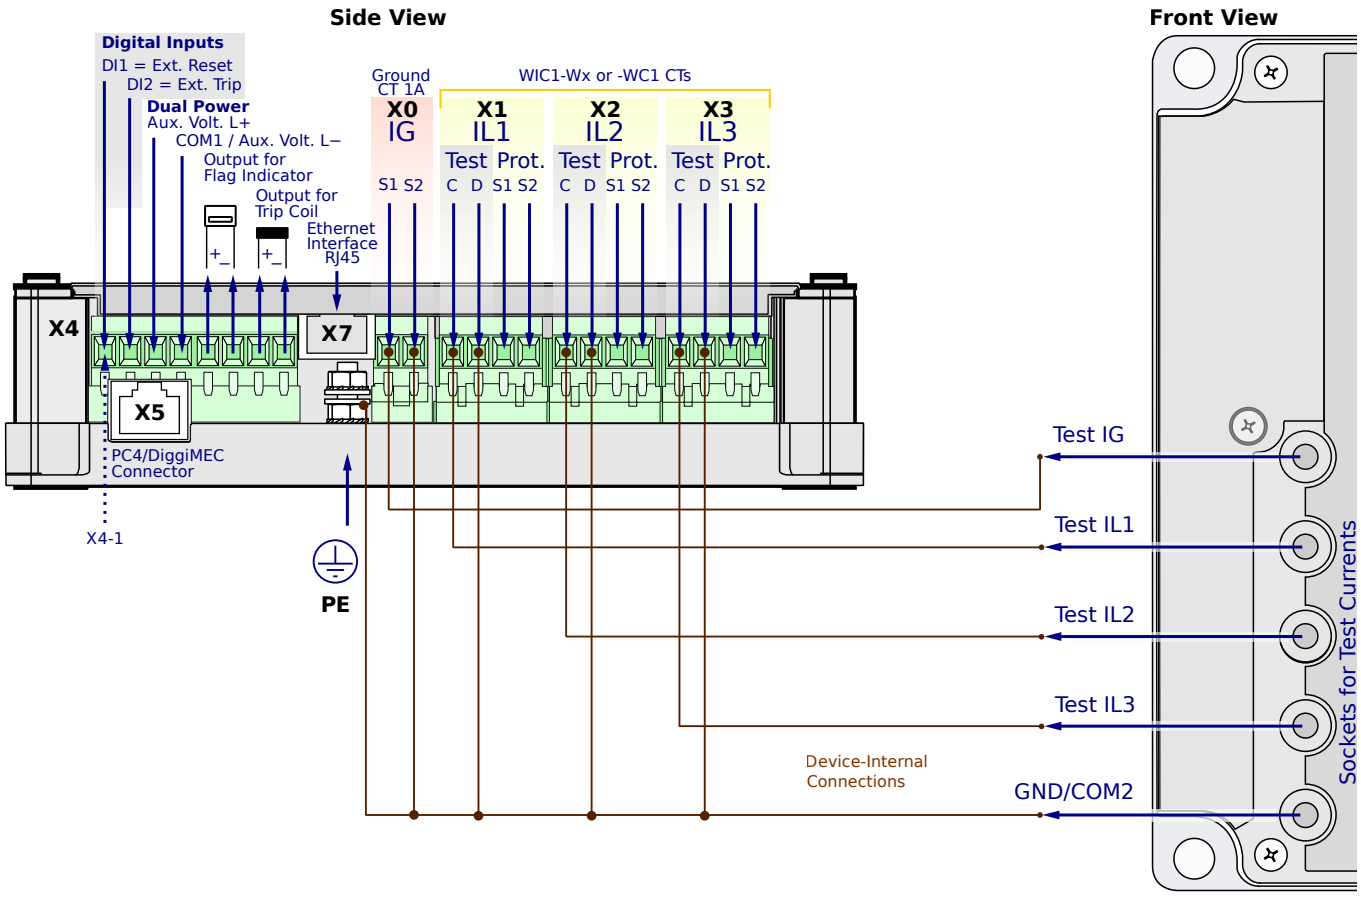


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1ACH

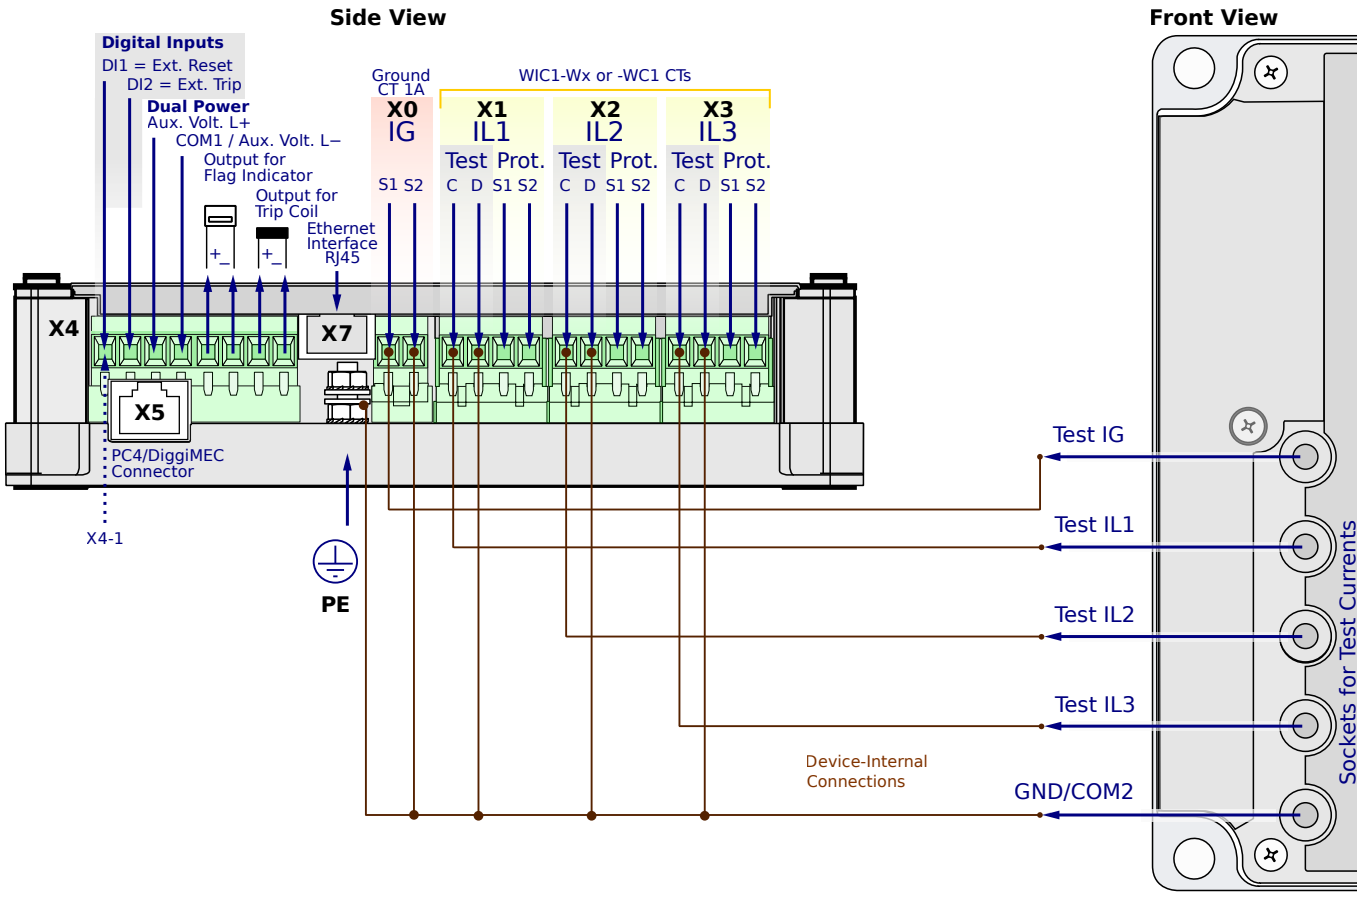


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1AL0

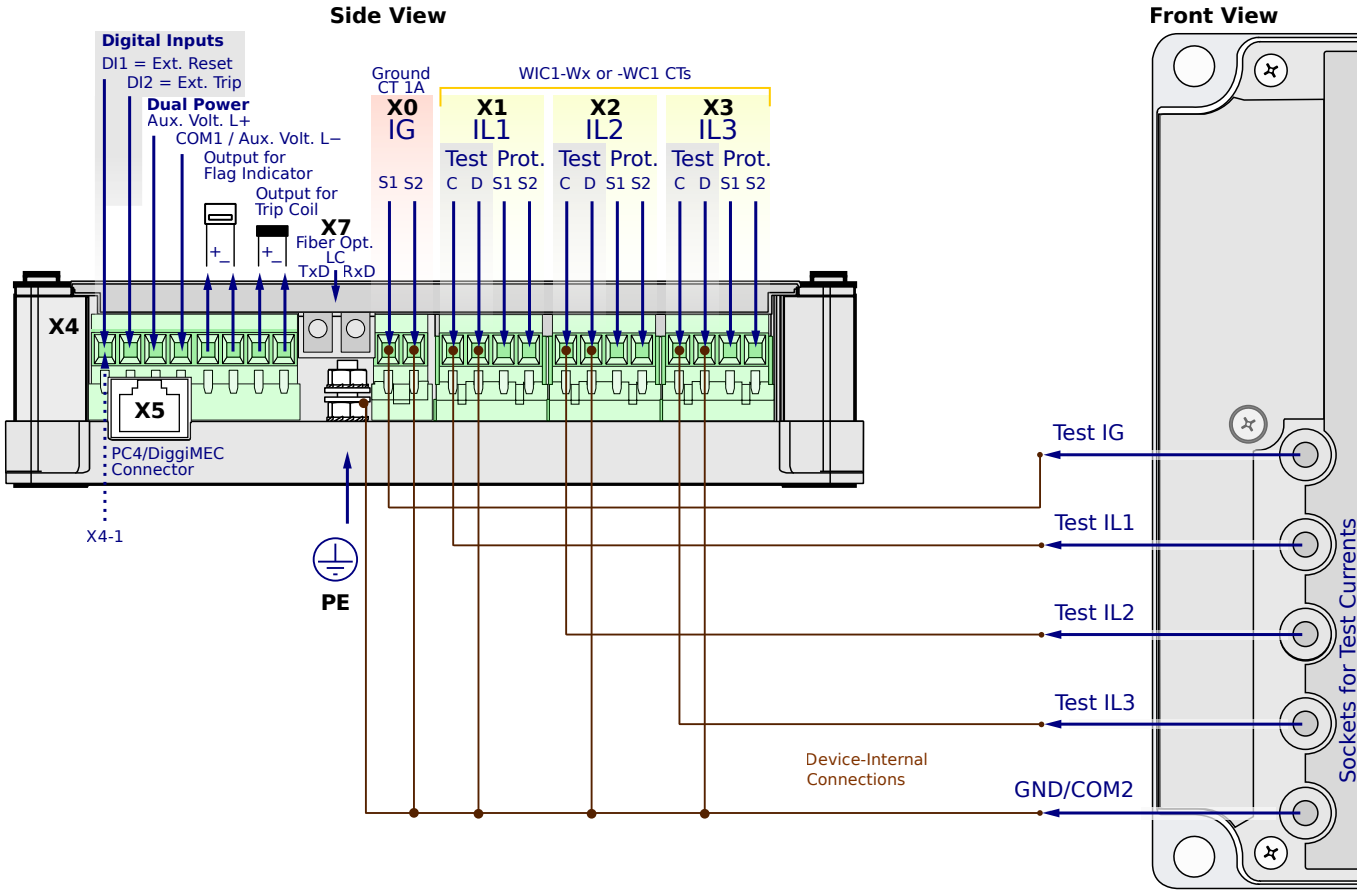


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1ALH

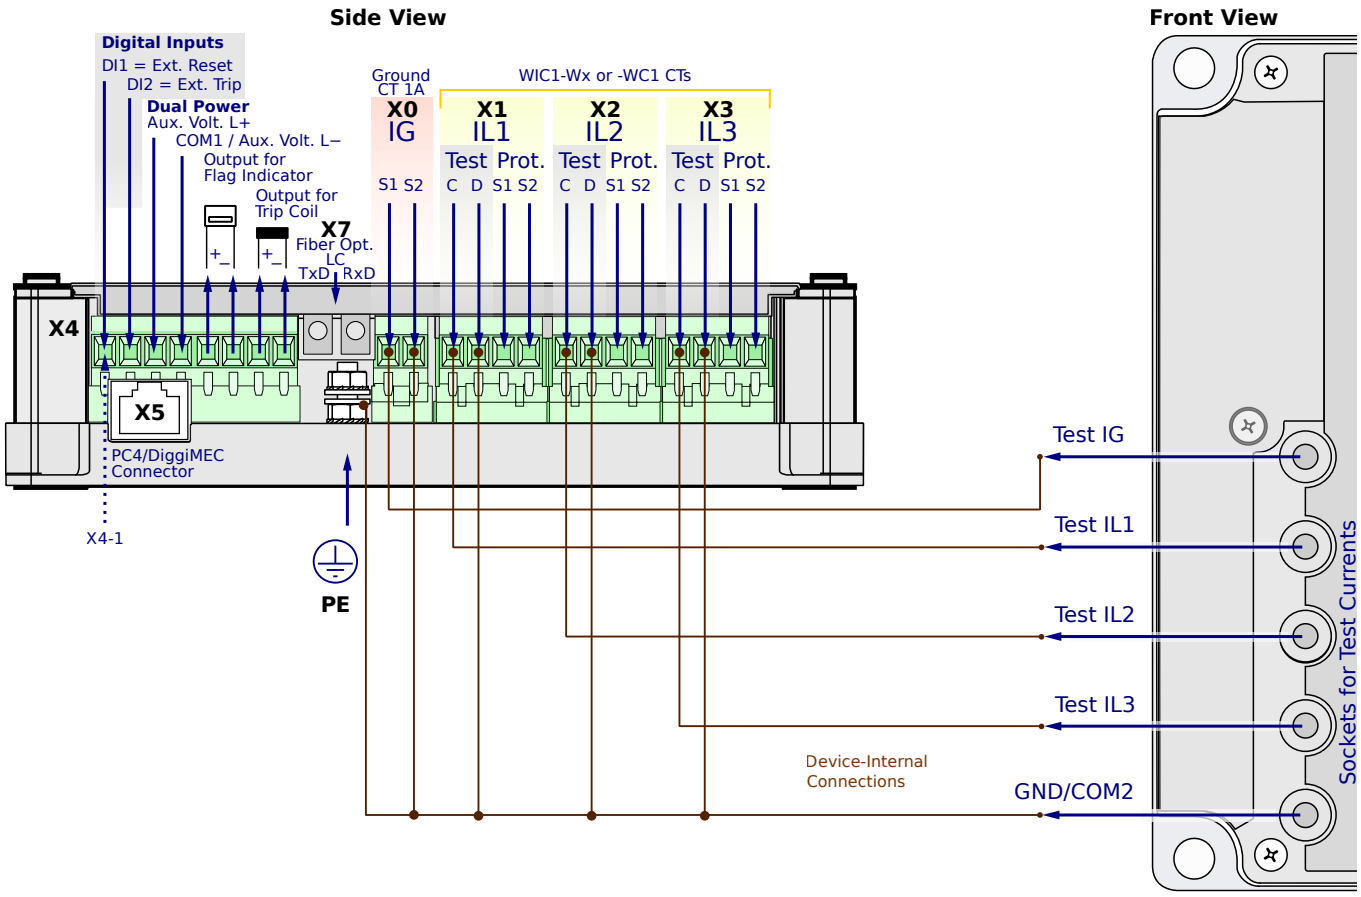


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1PA0

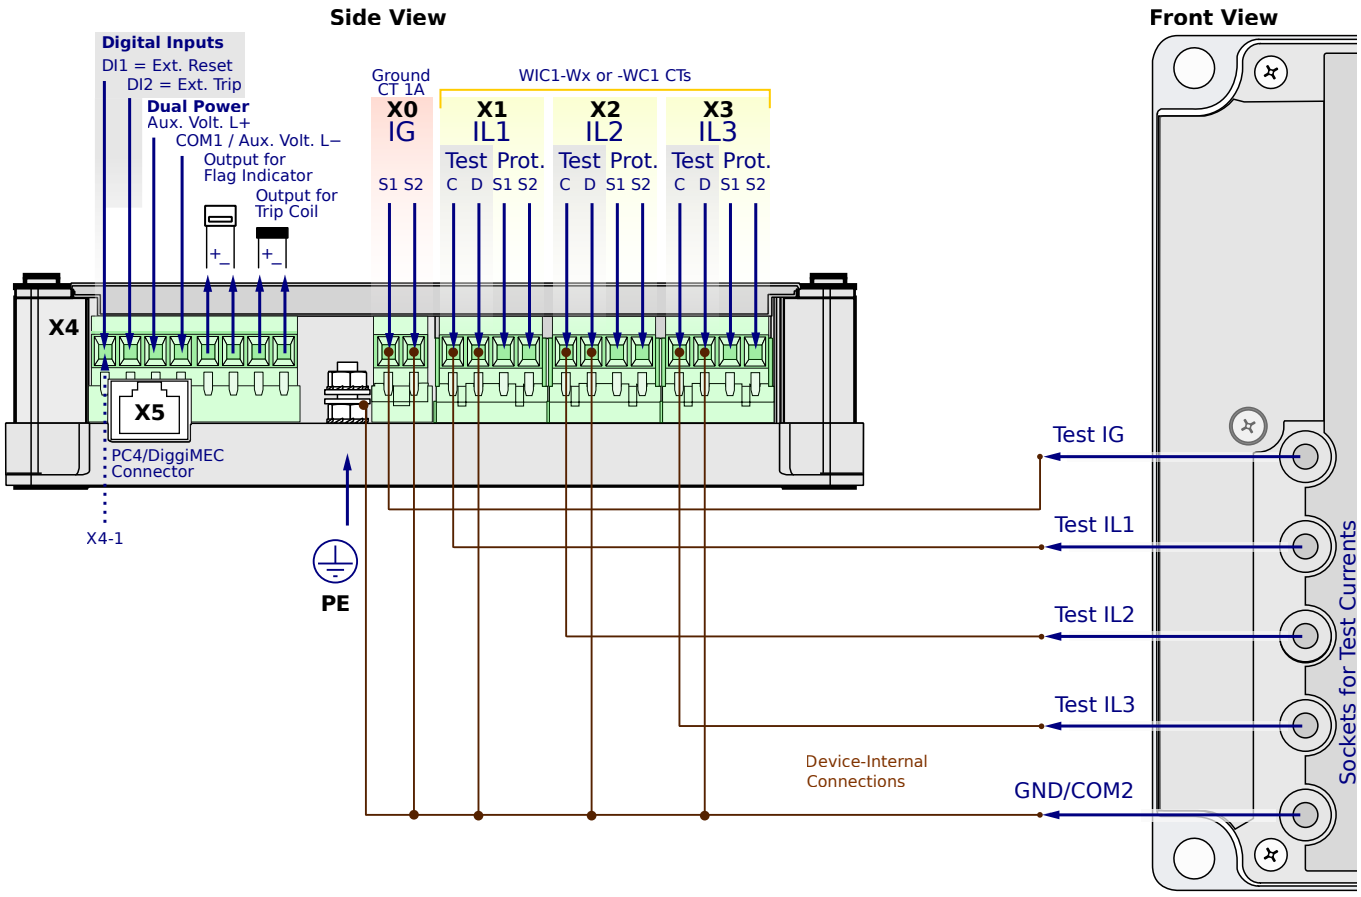


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1PAH

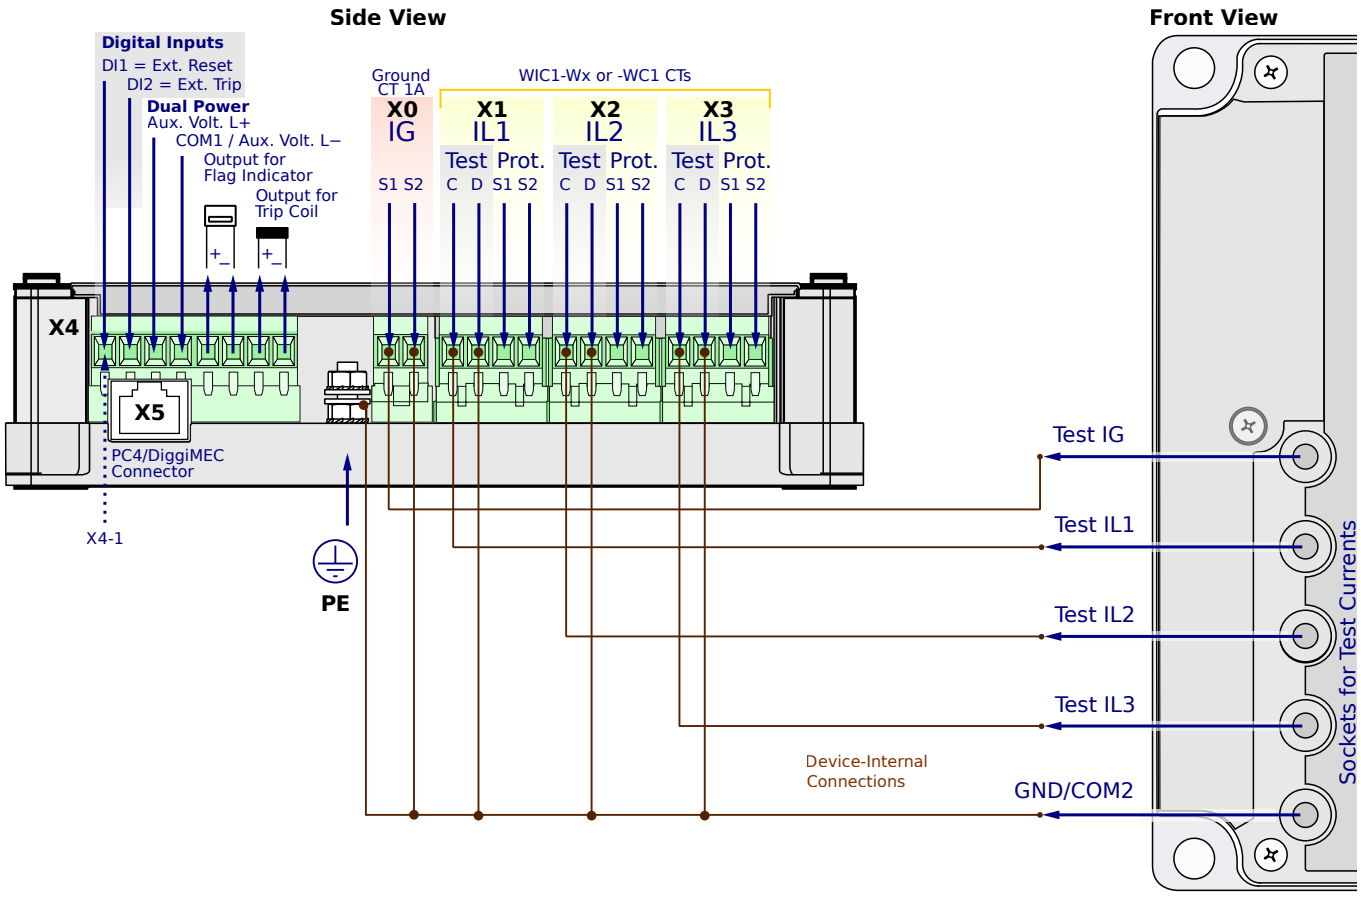


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG1PB0

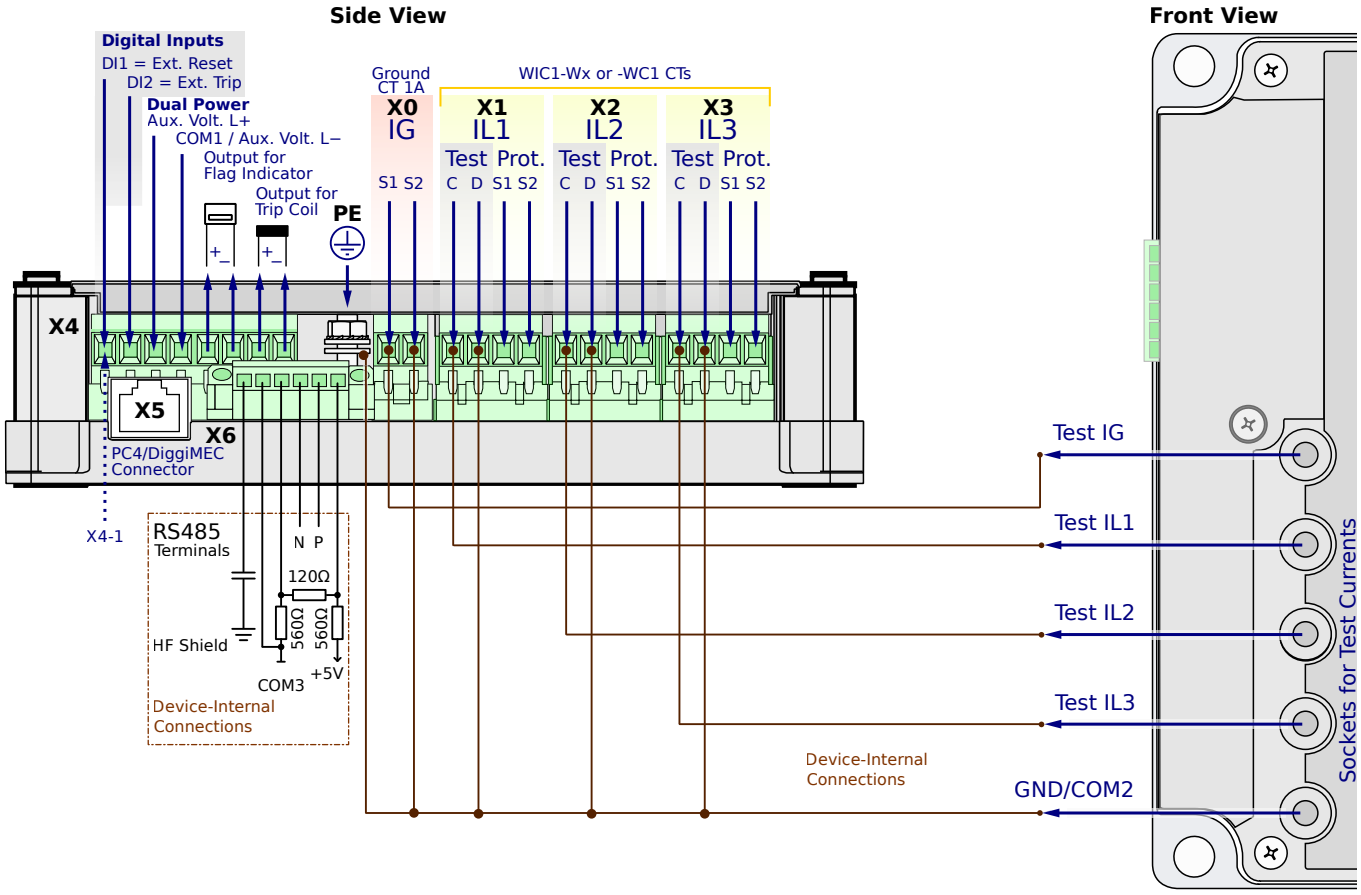


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1PBH

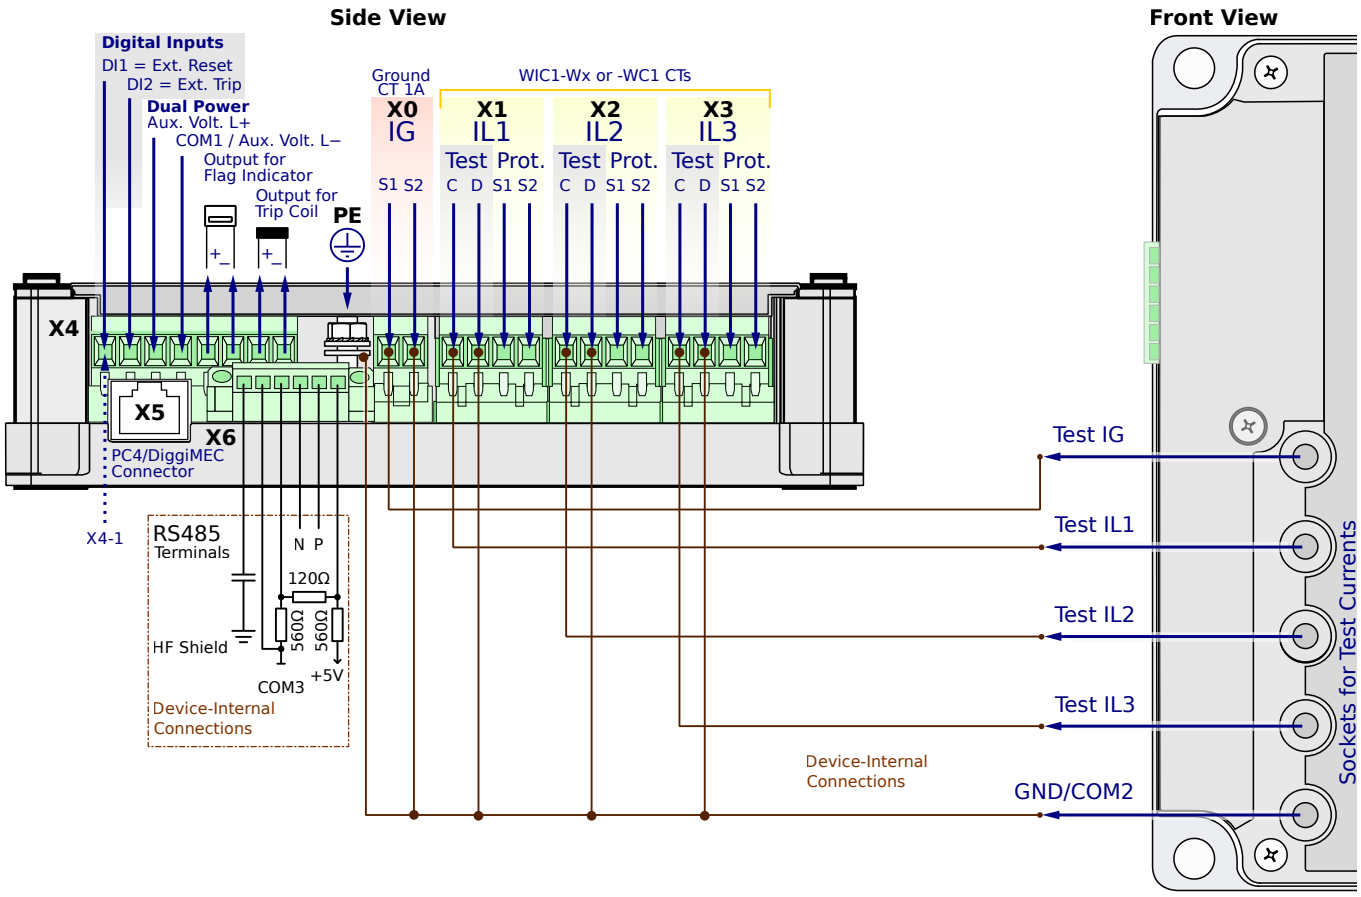


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG1PC0

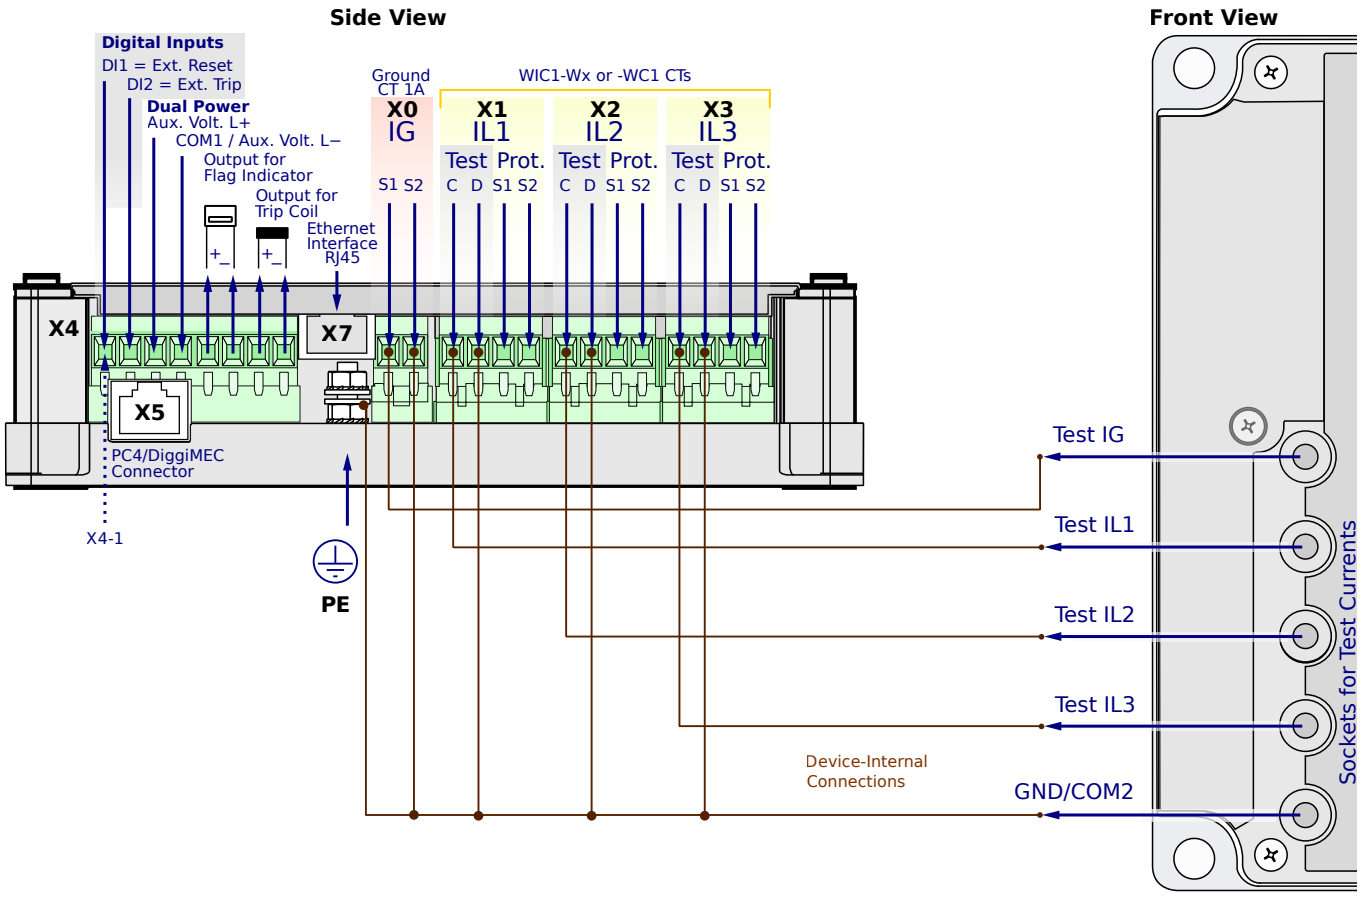


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1PCH

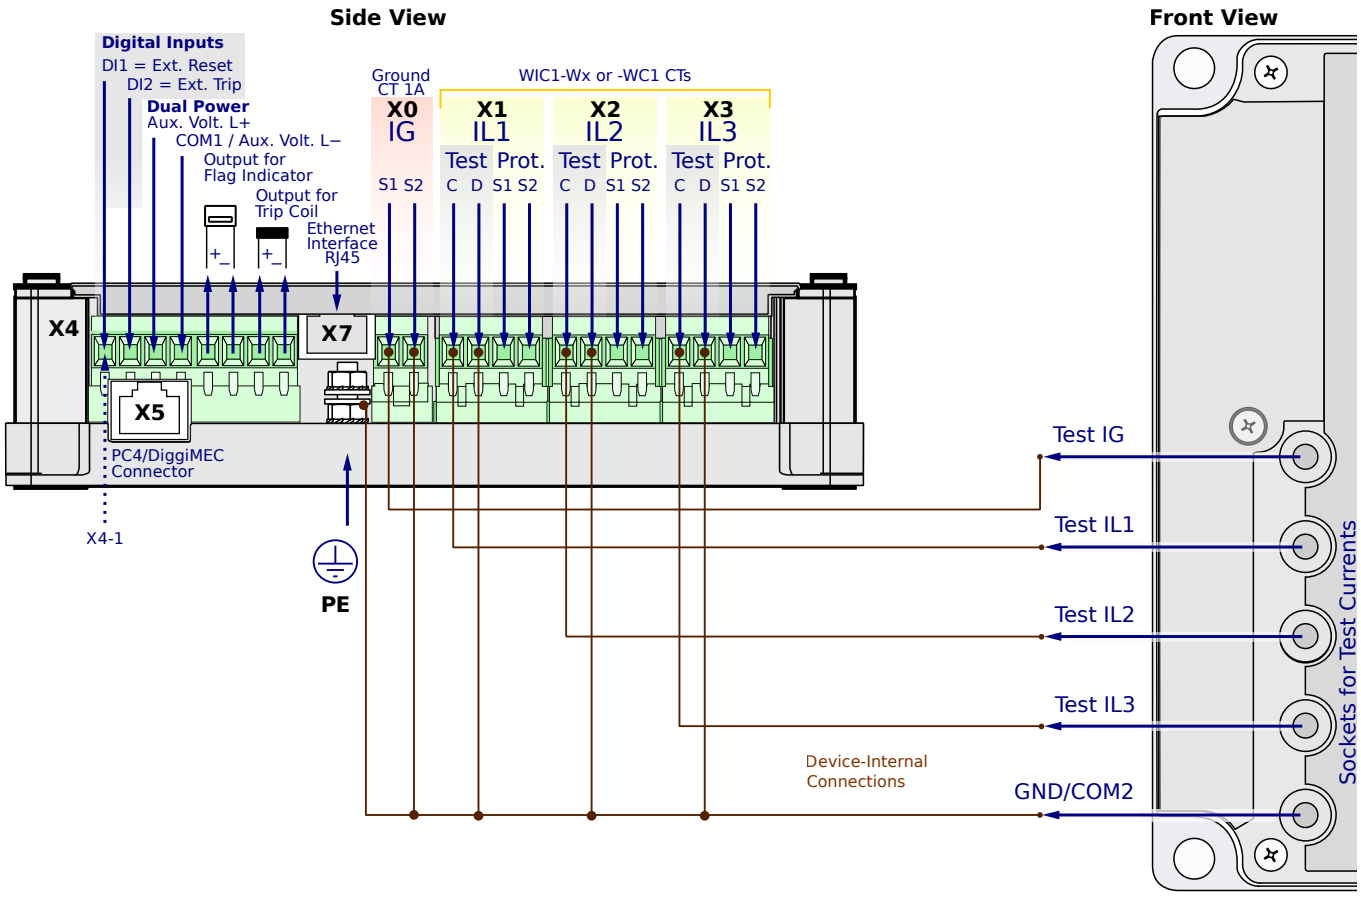


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG1PL0

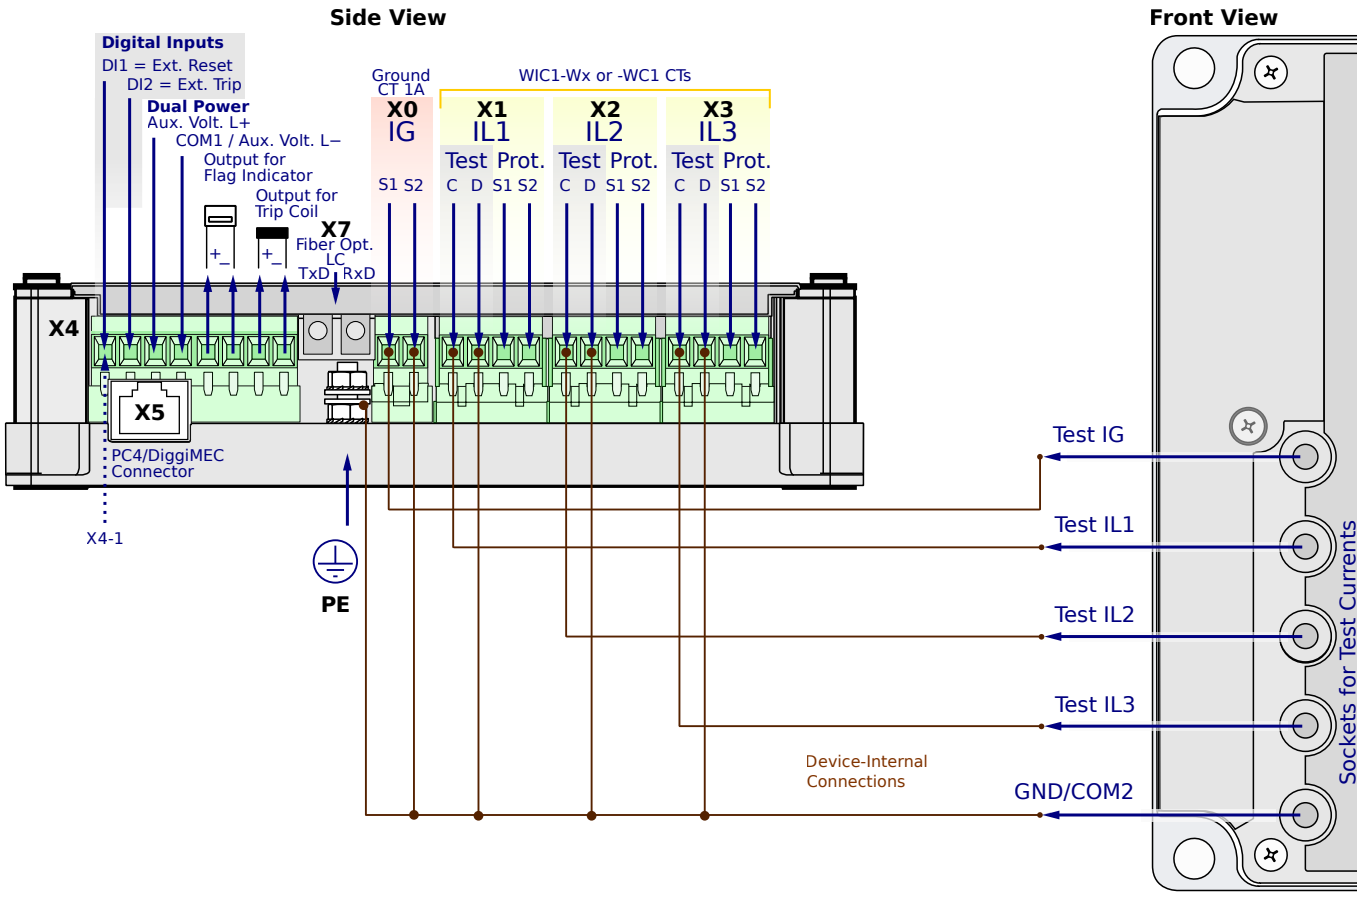


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG1PLH

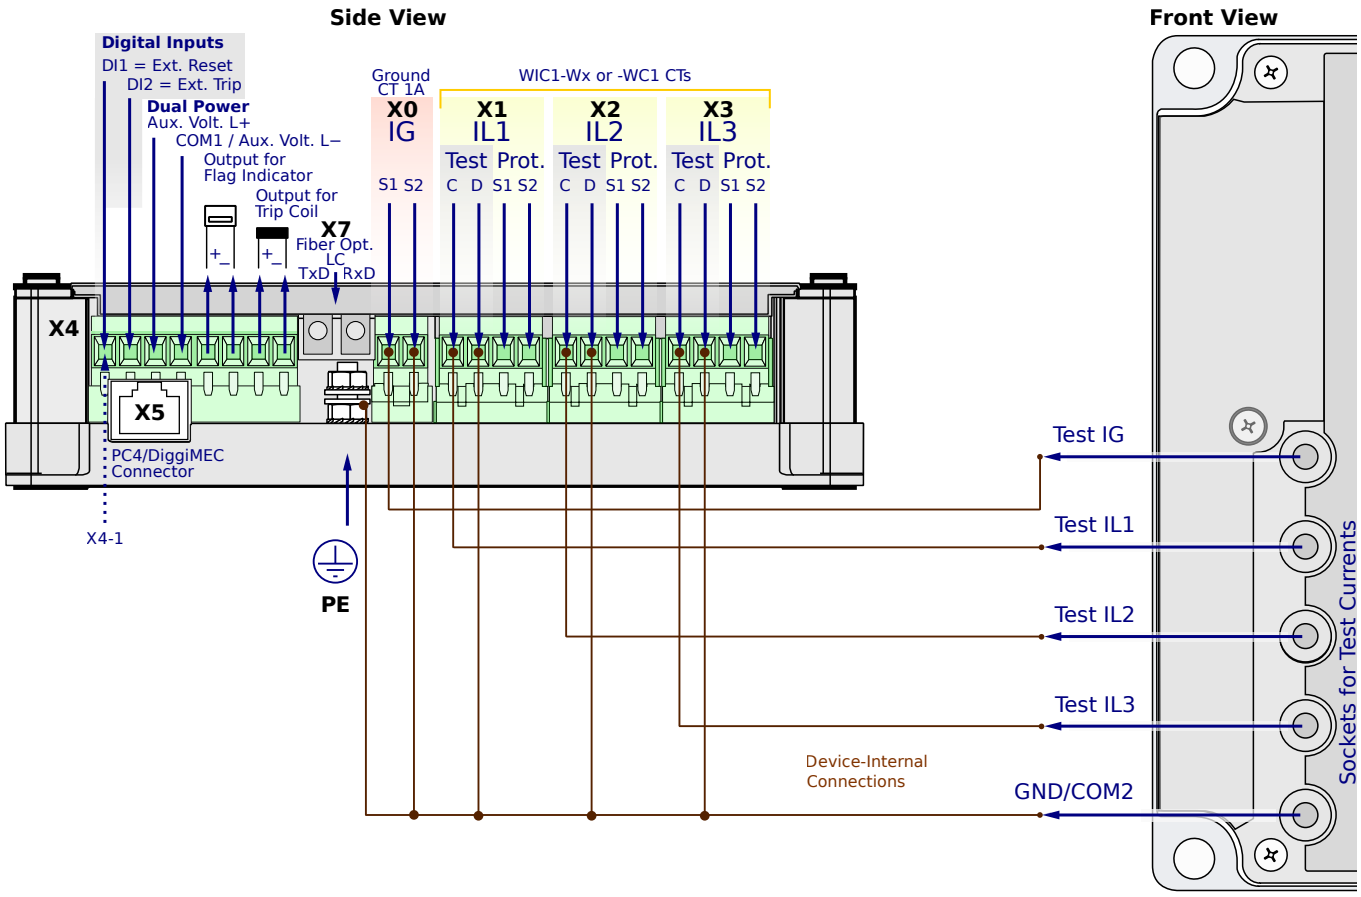


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2SA0

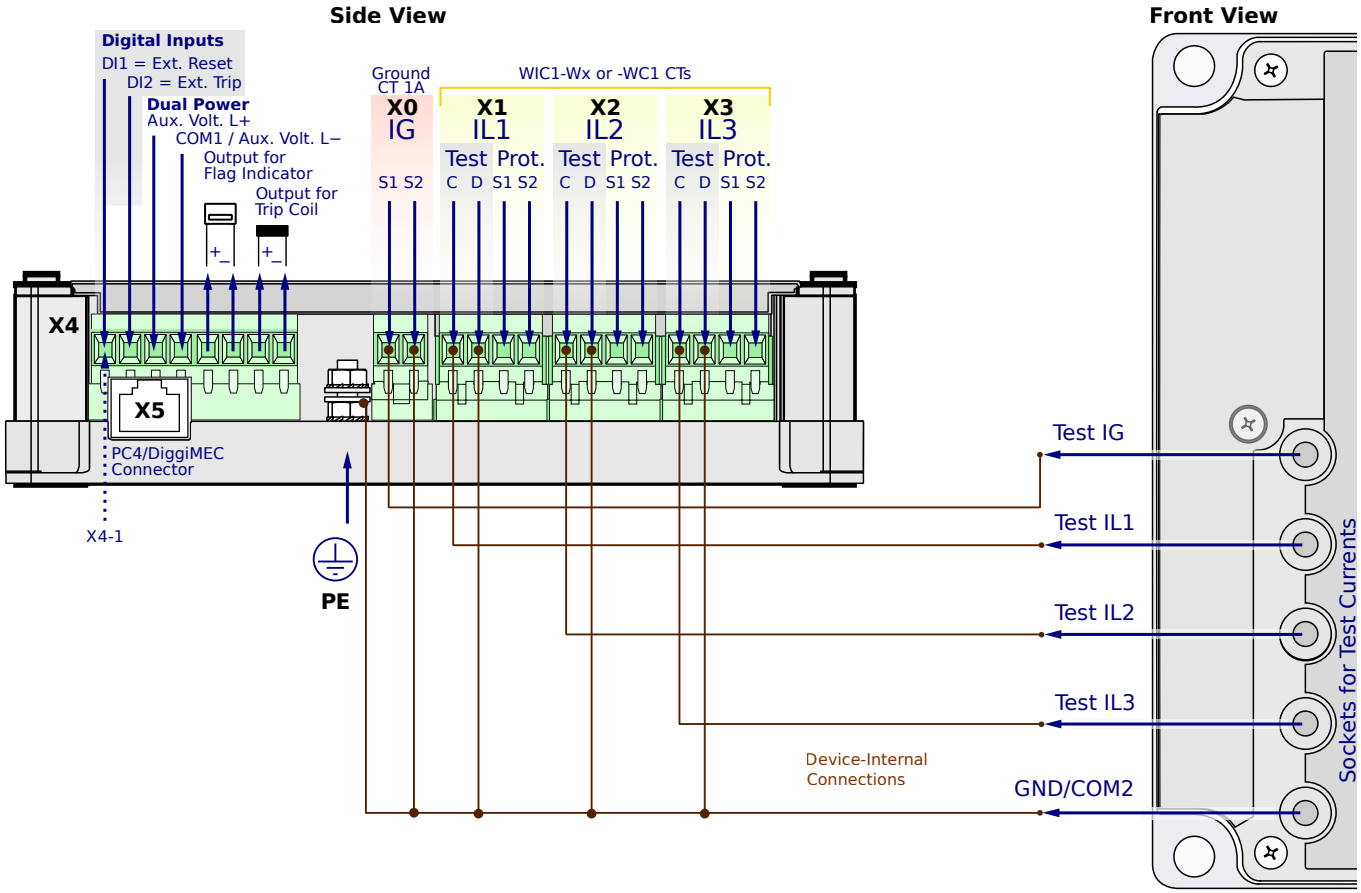


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2SAH

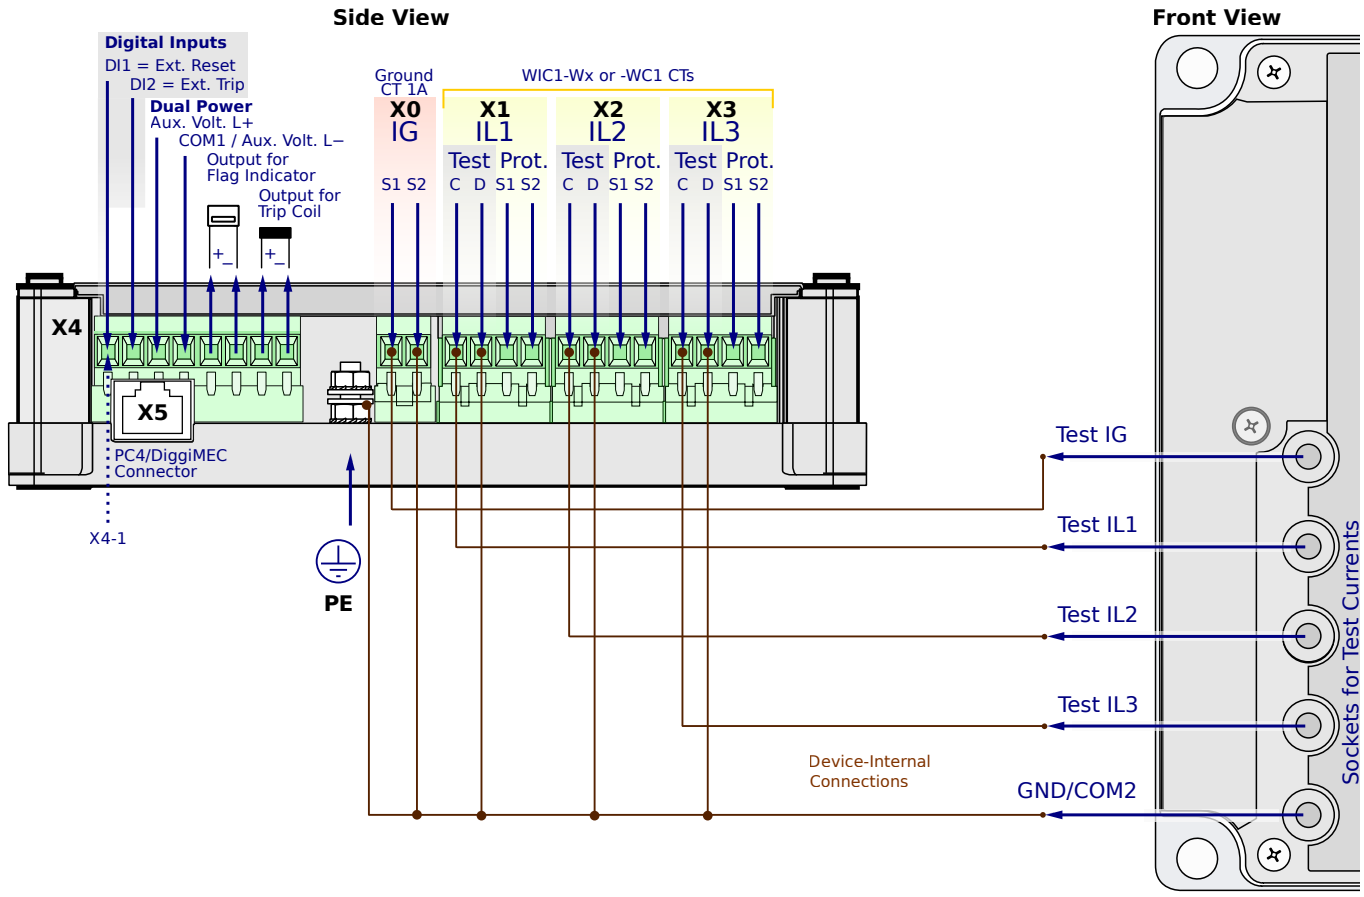


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2SB0

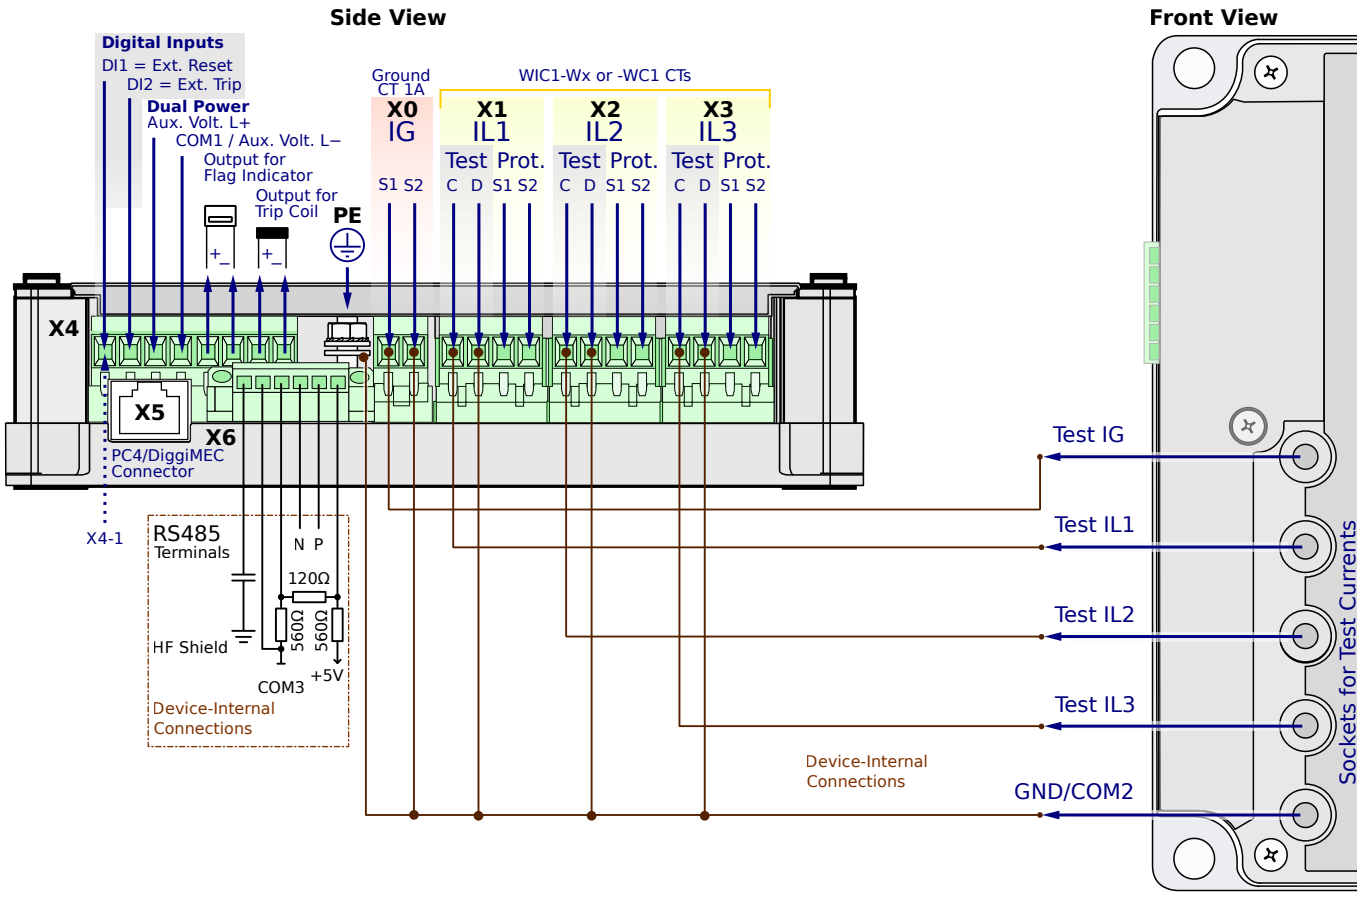


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2SBH

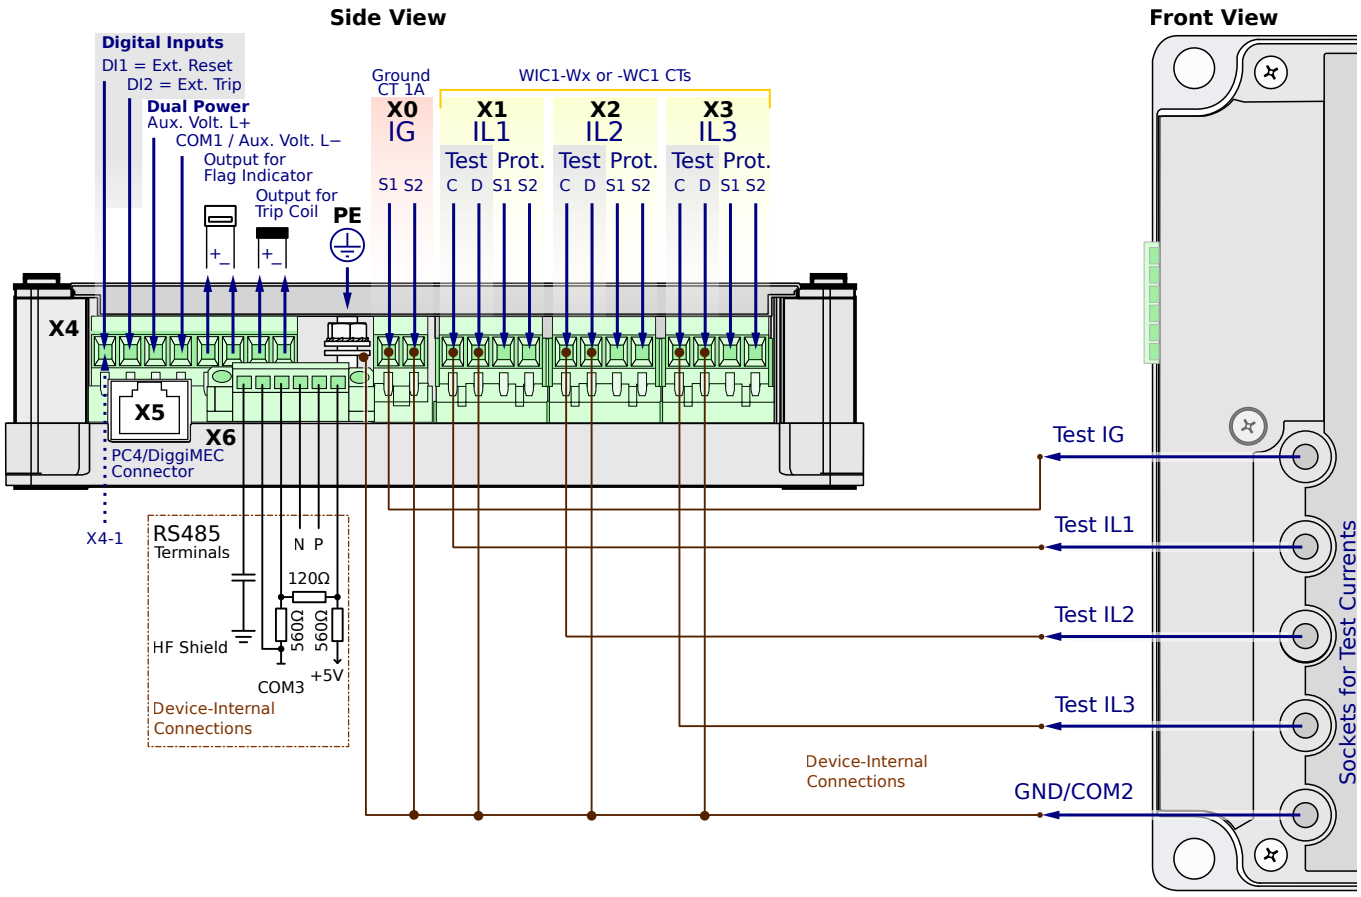


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2SC0

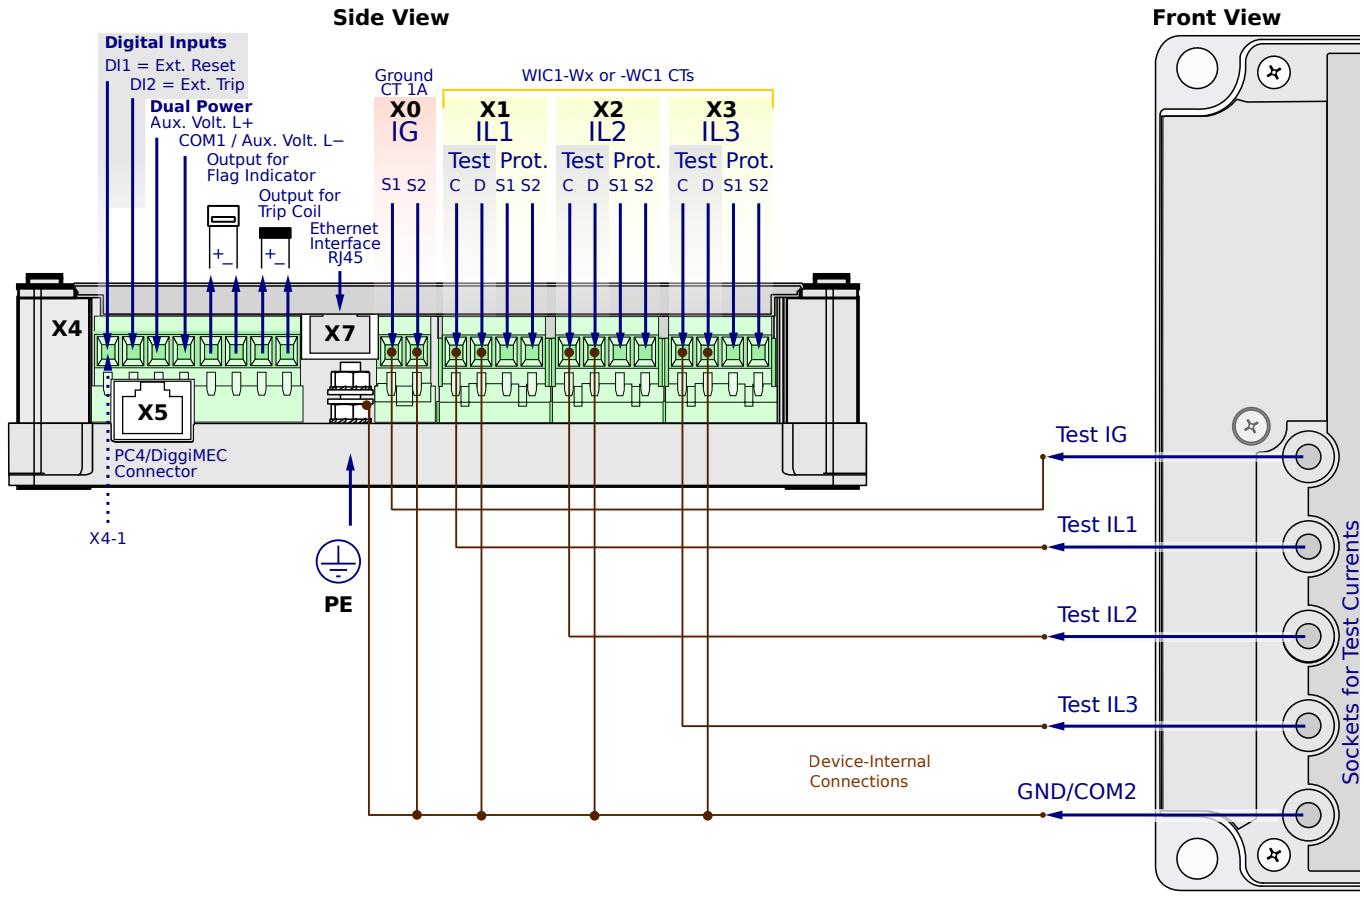


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2SCH

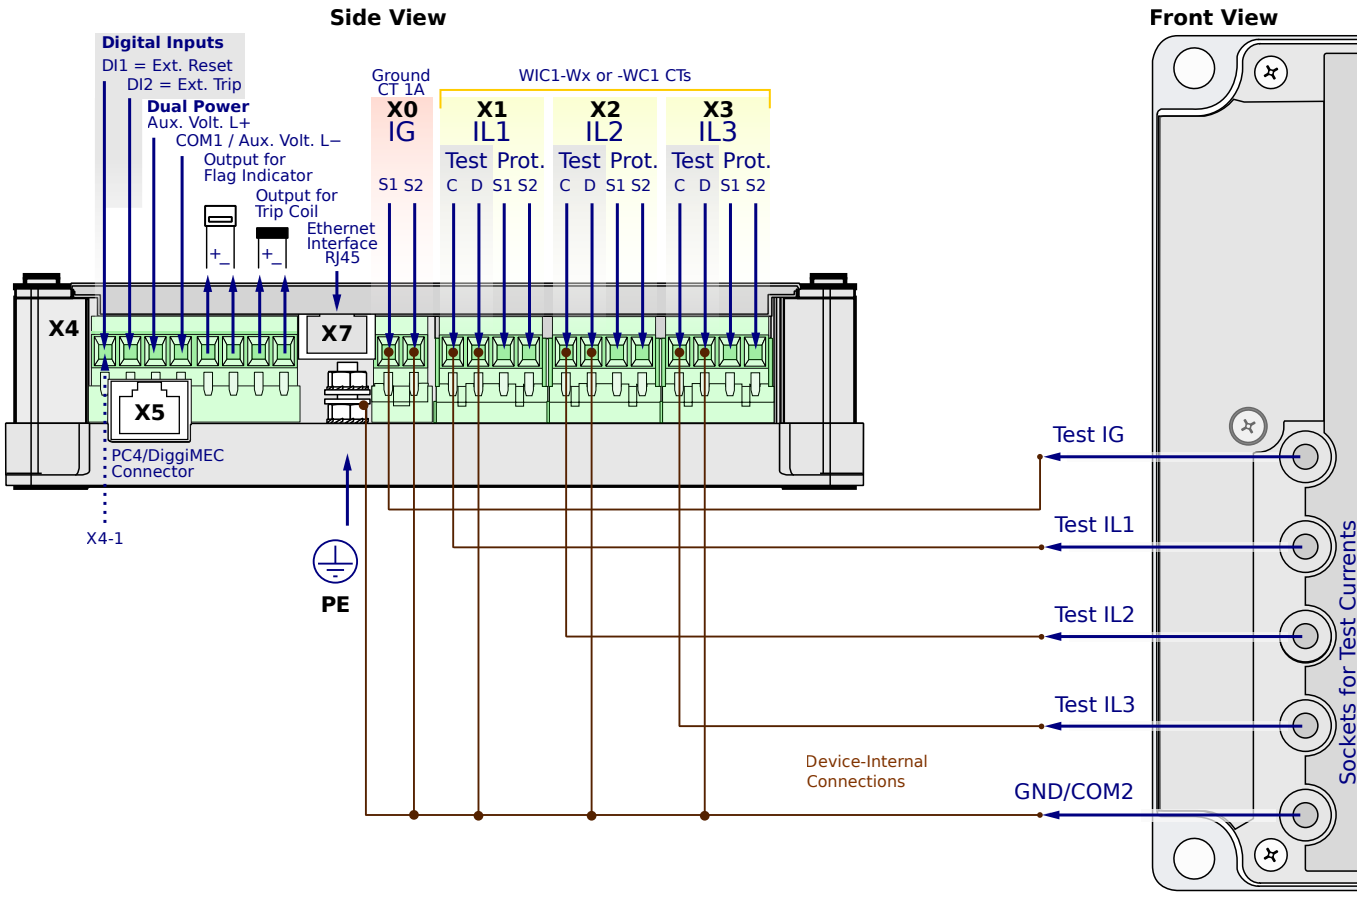


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2SL0

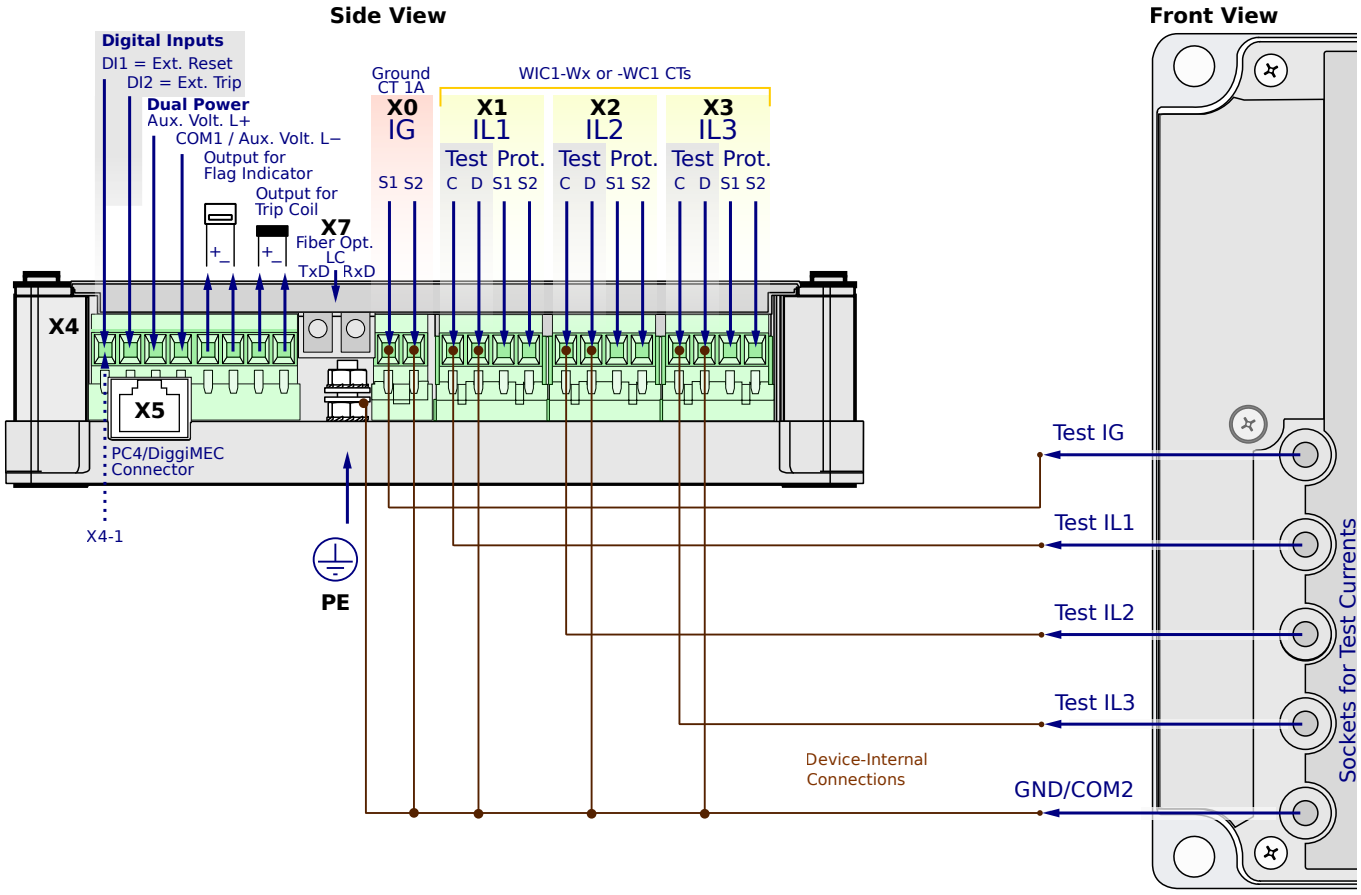


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2SLH

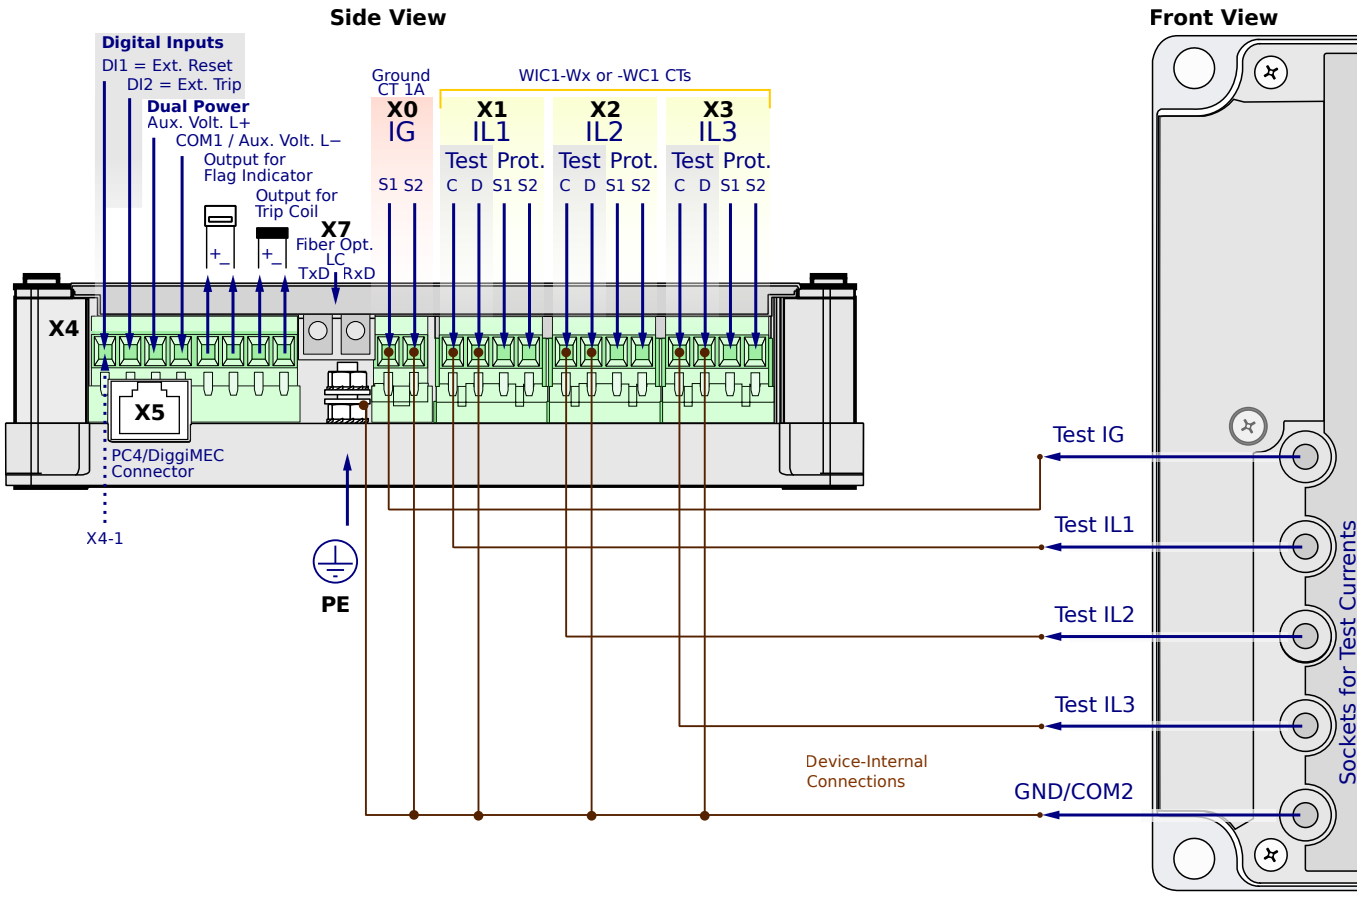


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2AA0

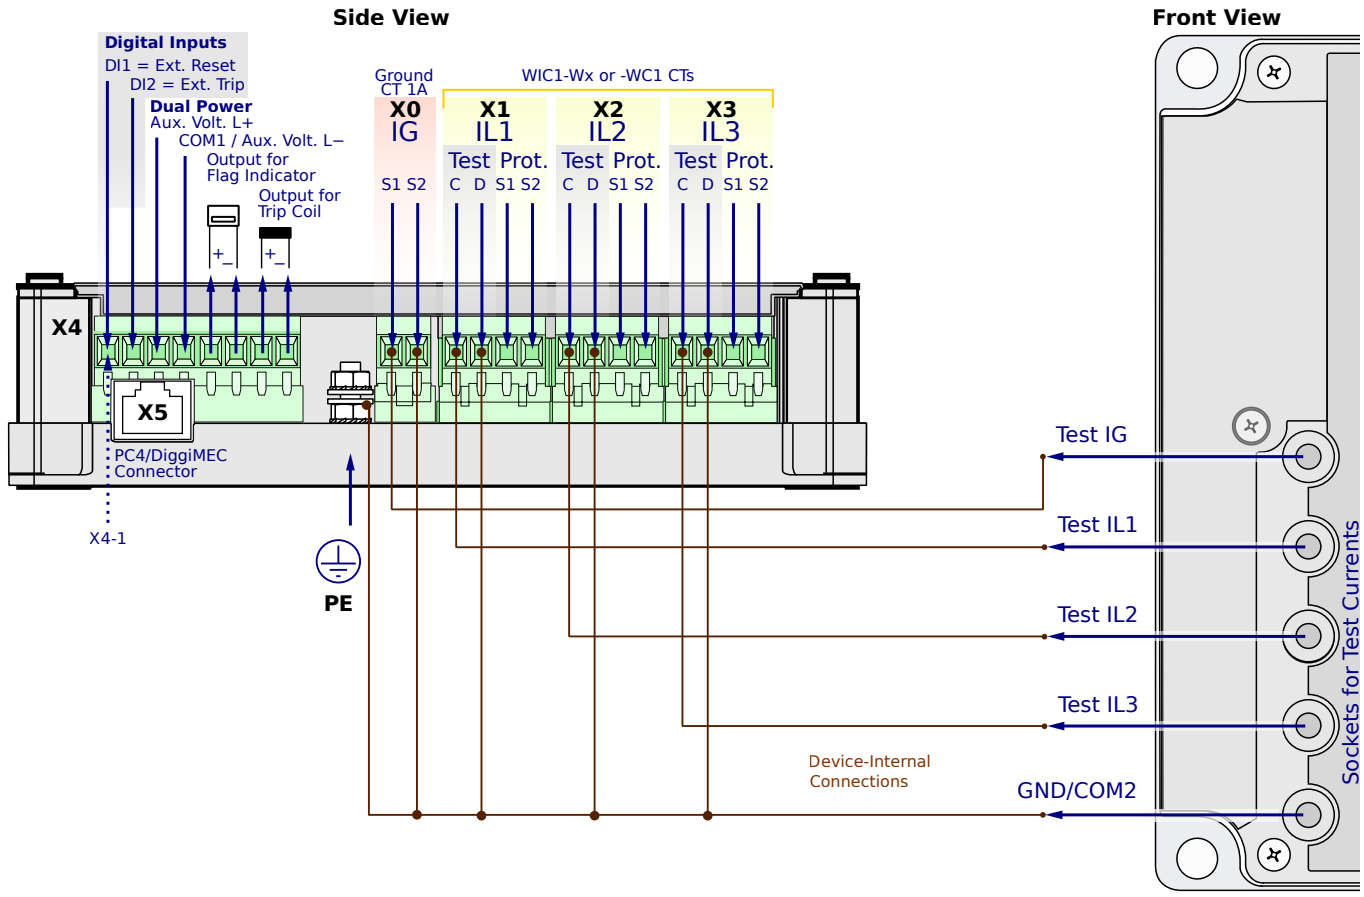


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2AAH

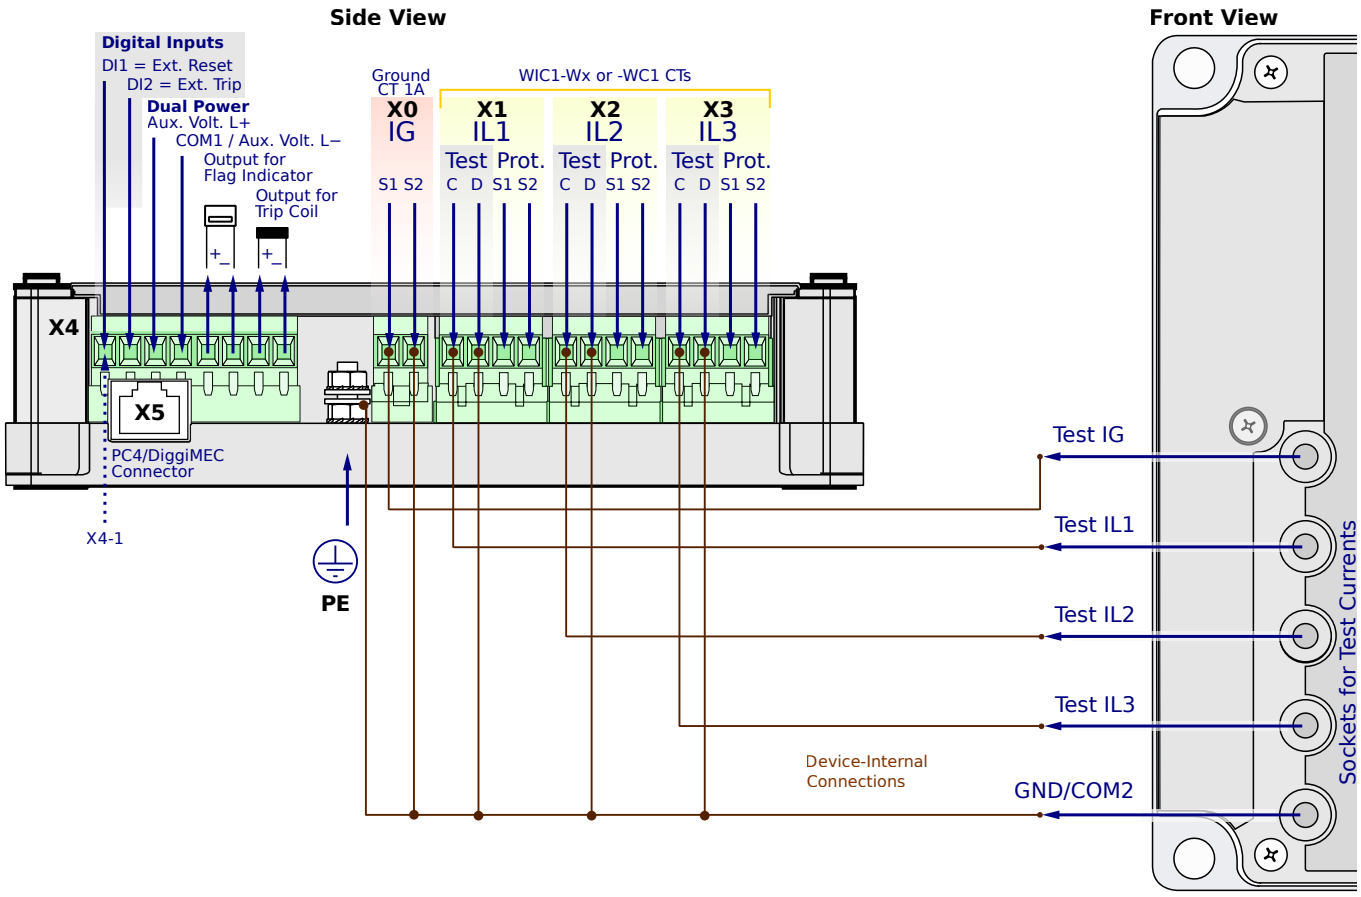


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2AB0

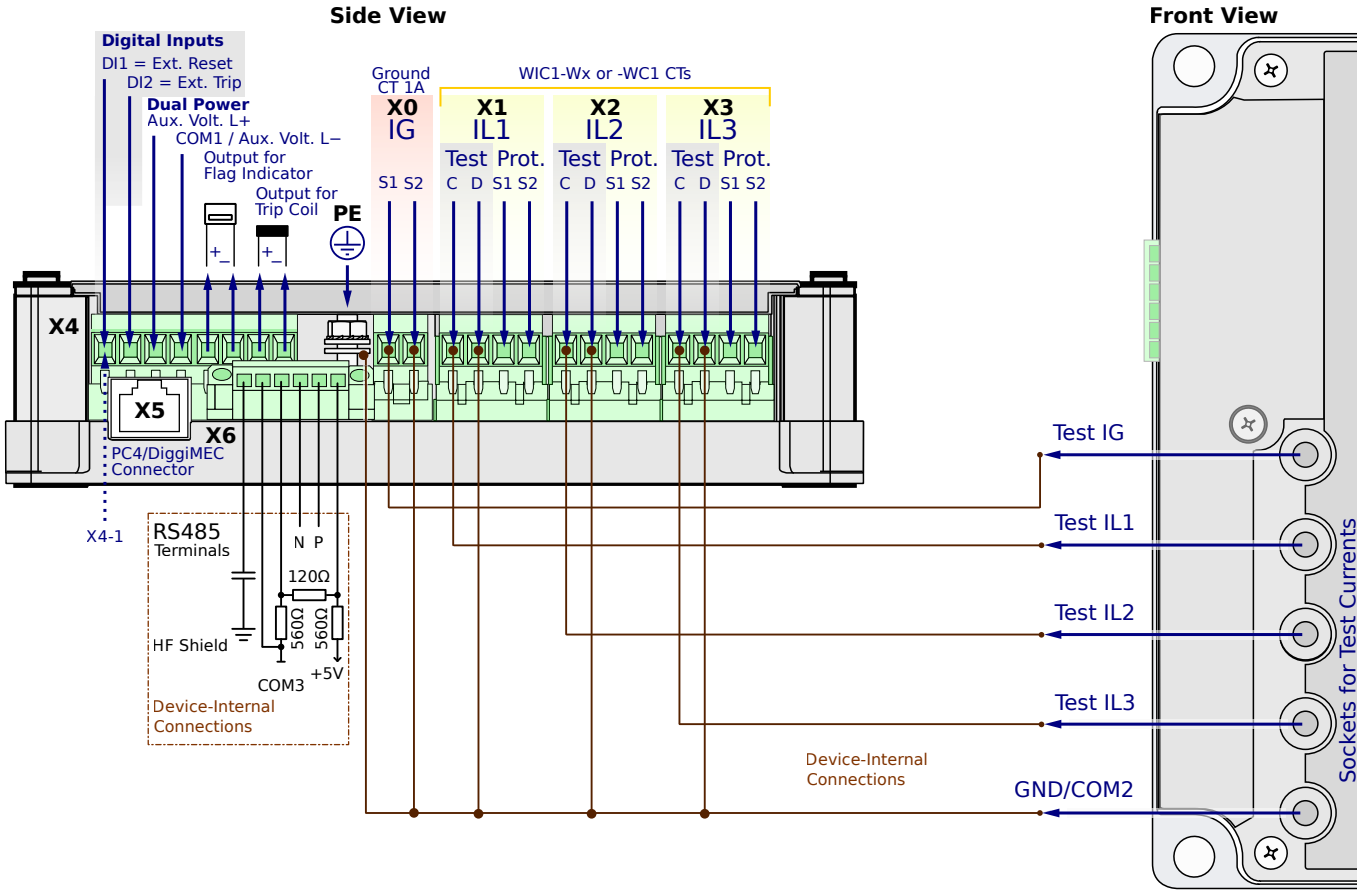


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2ABH

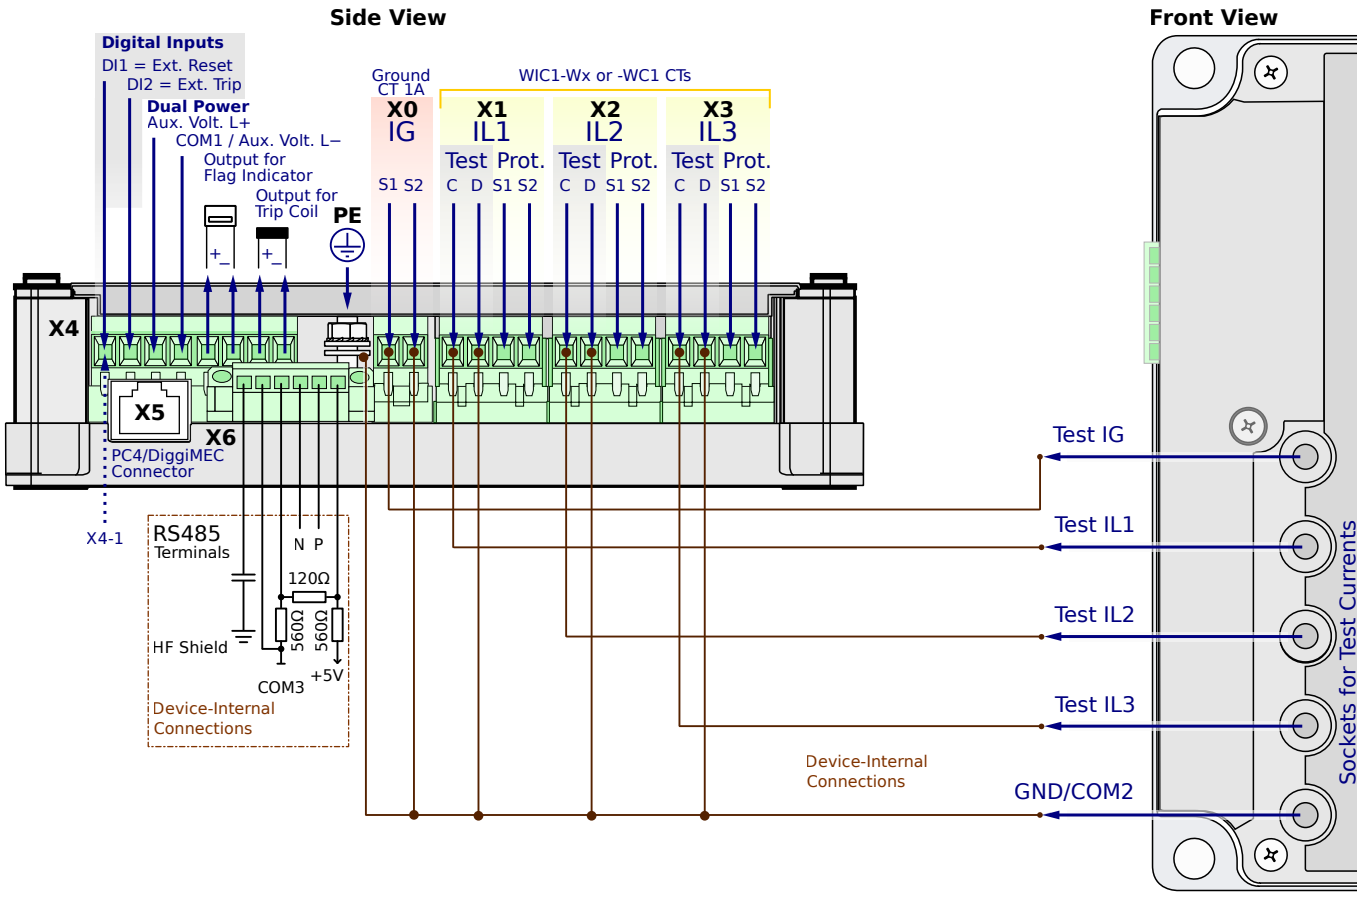


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2AC0

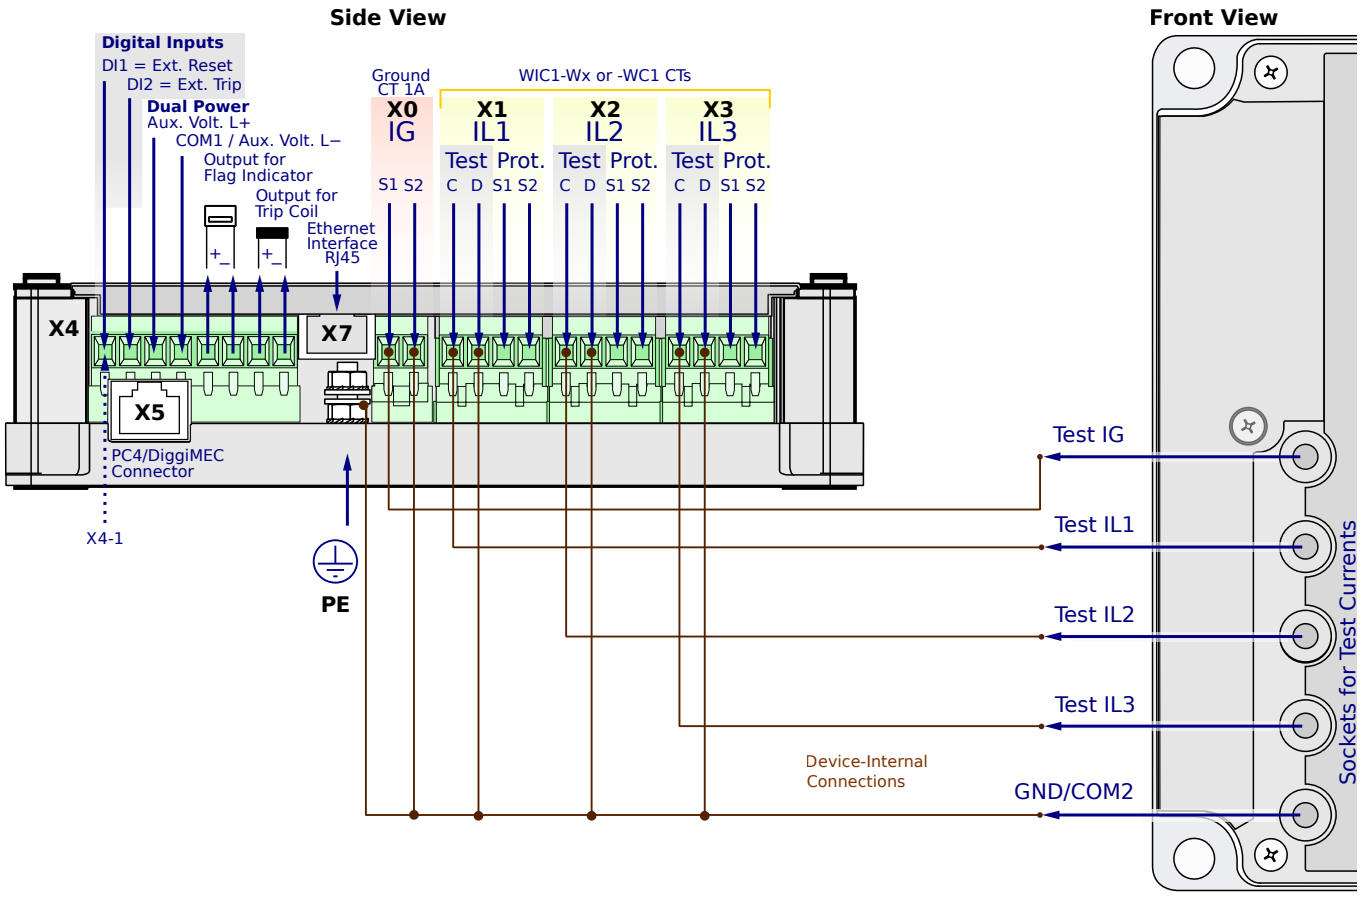


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2ACH

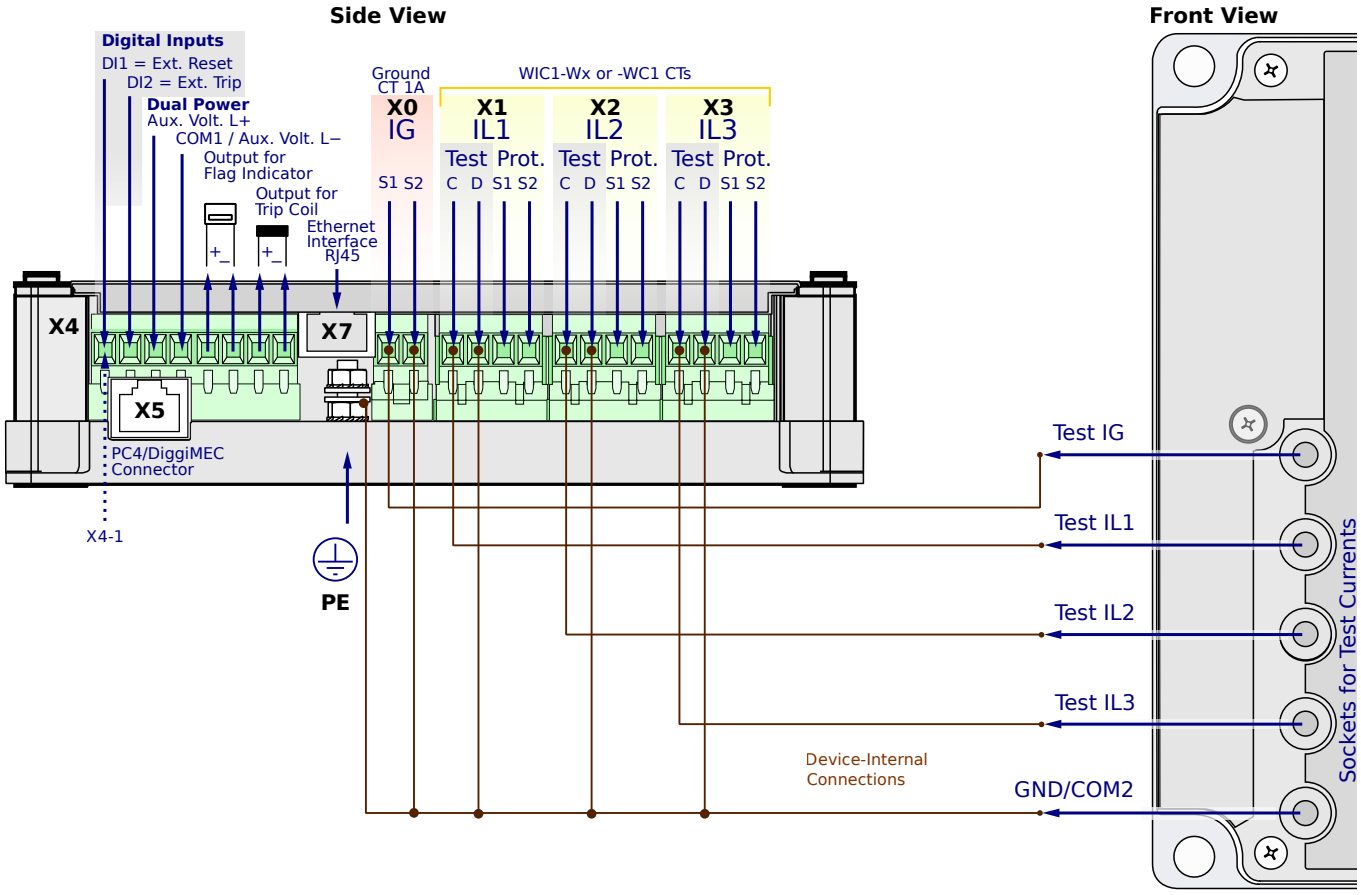


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2AL0

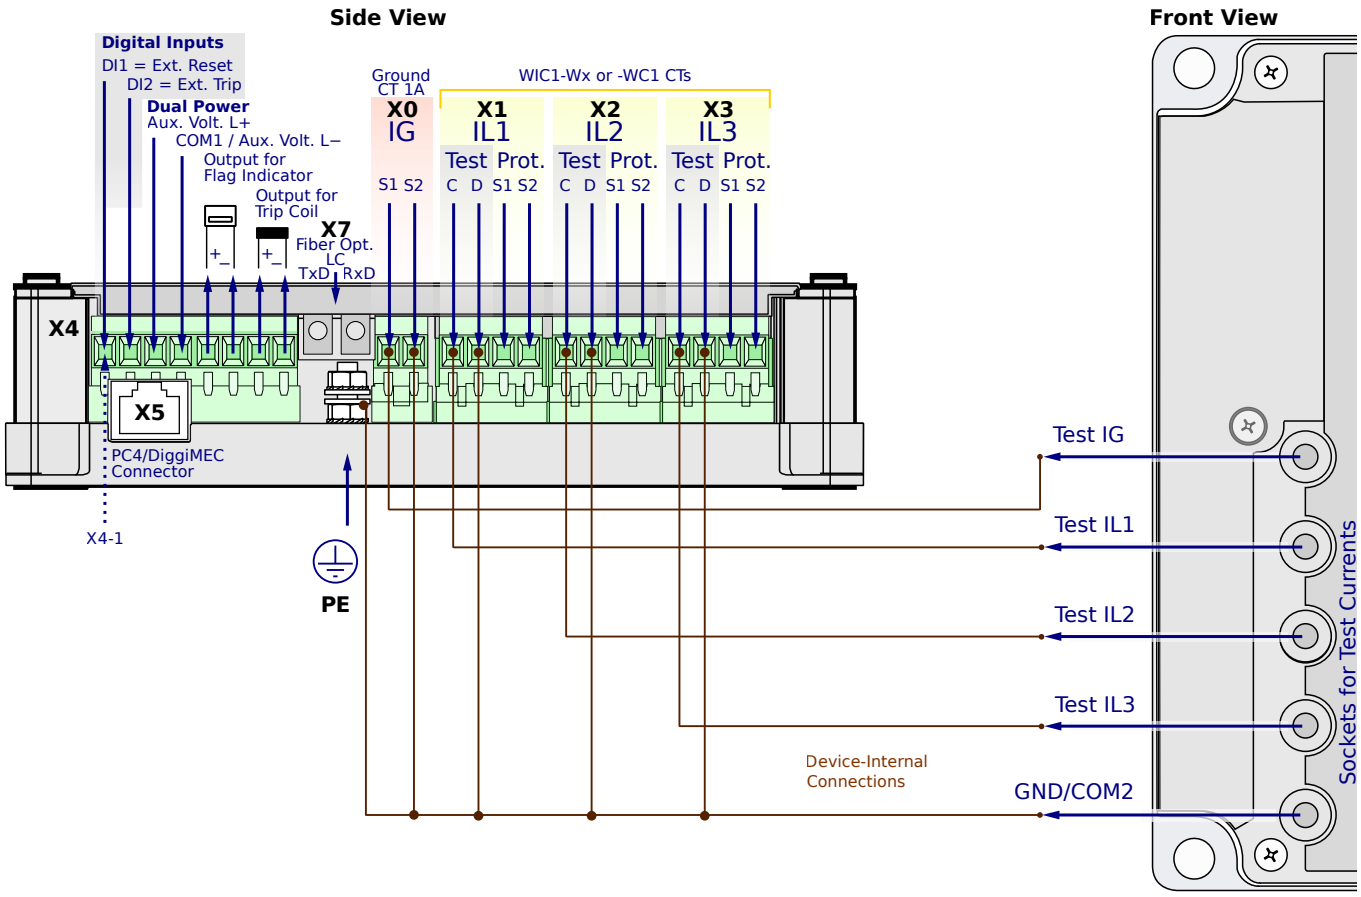


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2ALH

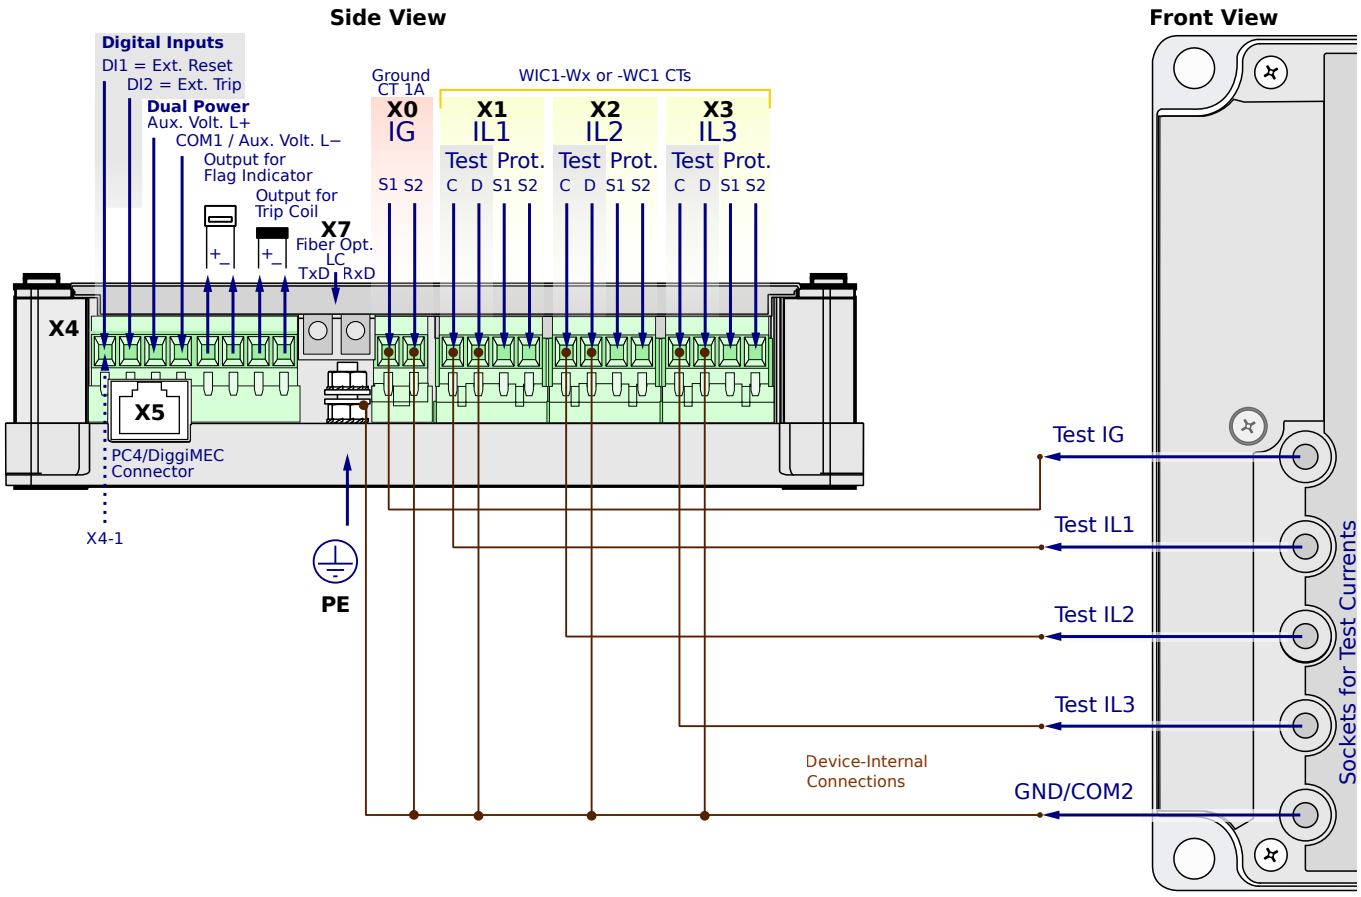


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2PA0

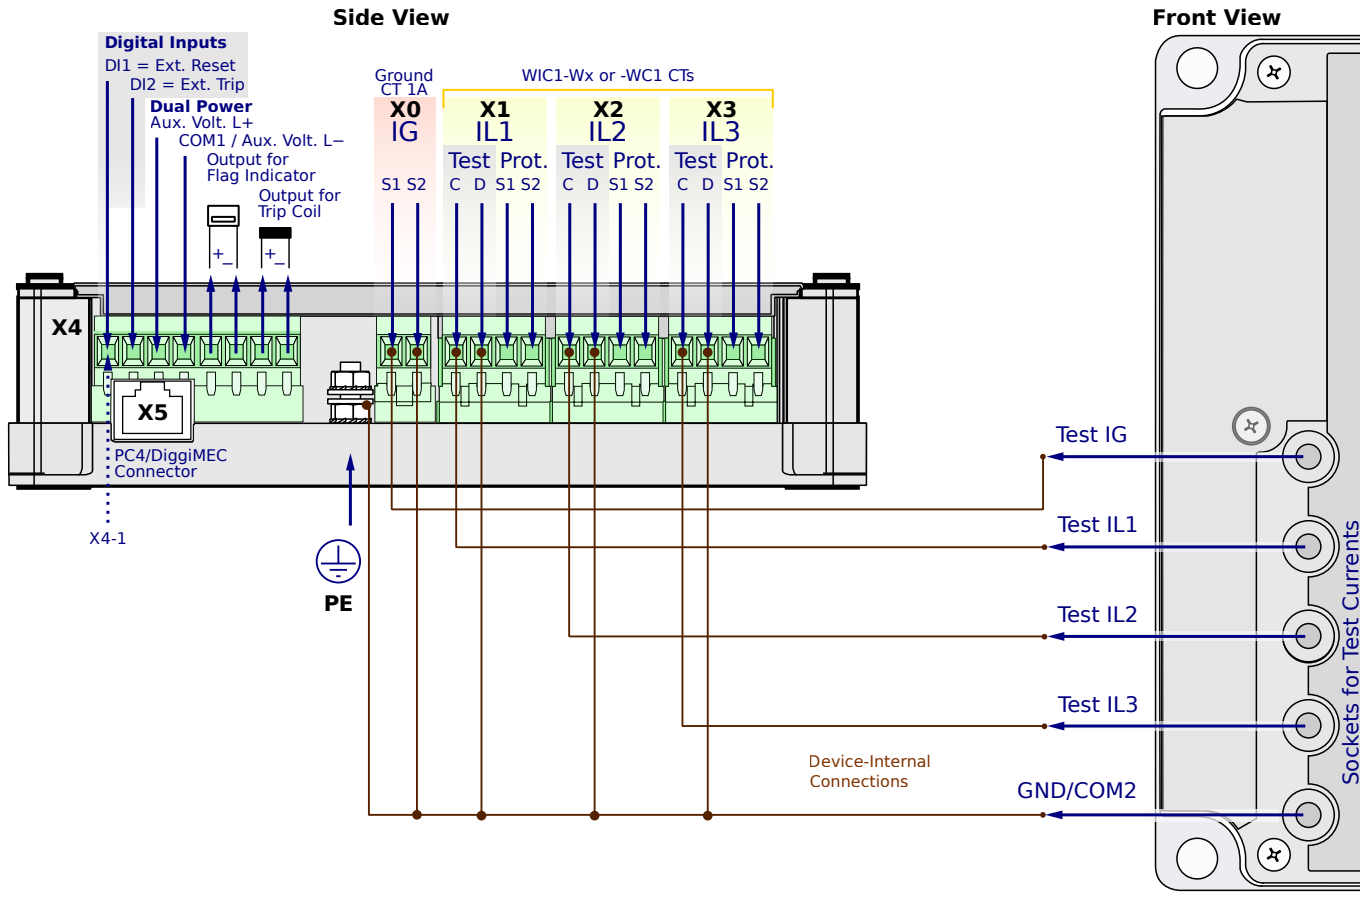


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2PAH

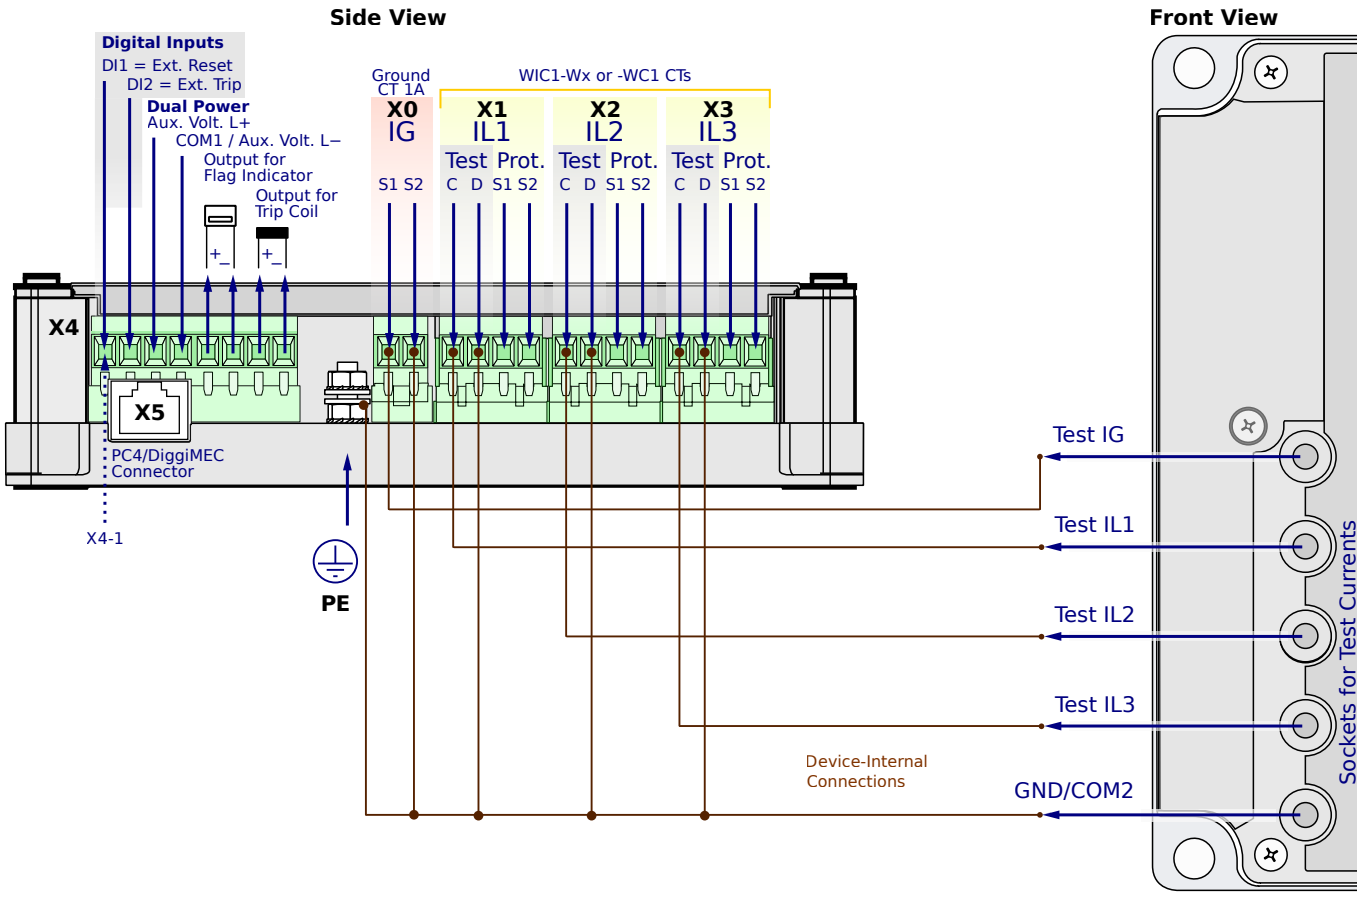


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CG2PB0

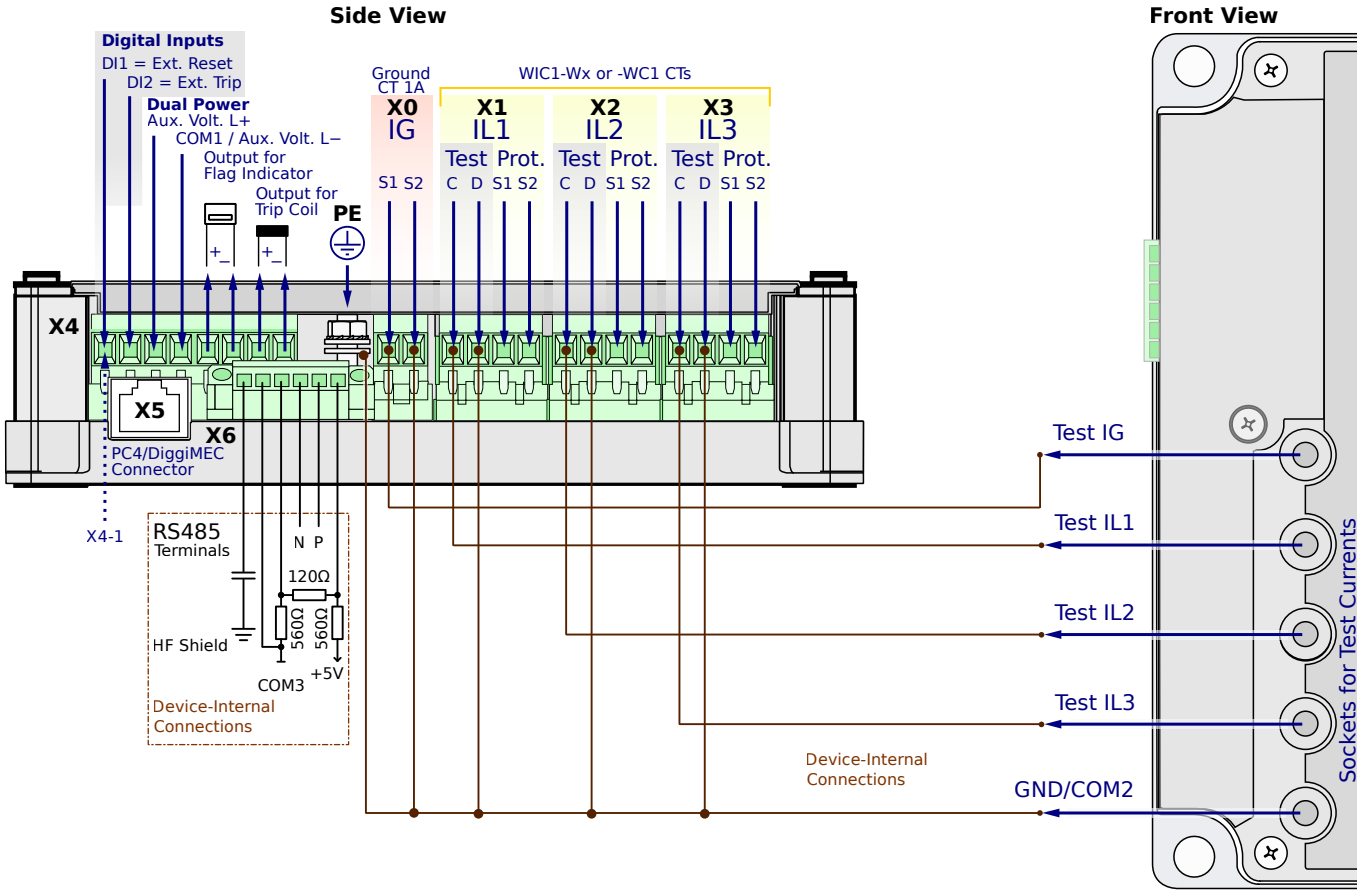


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2PBH

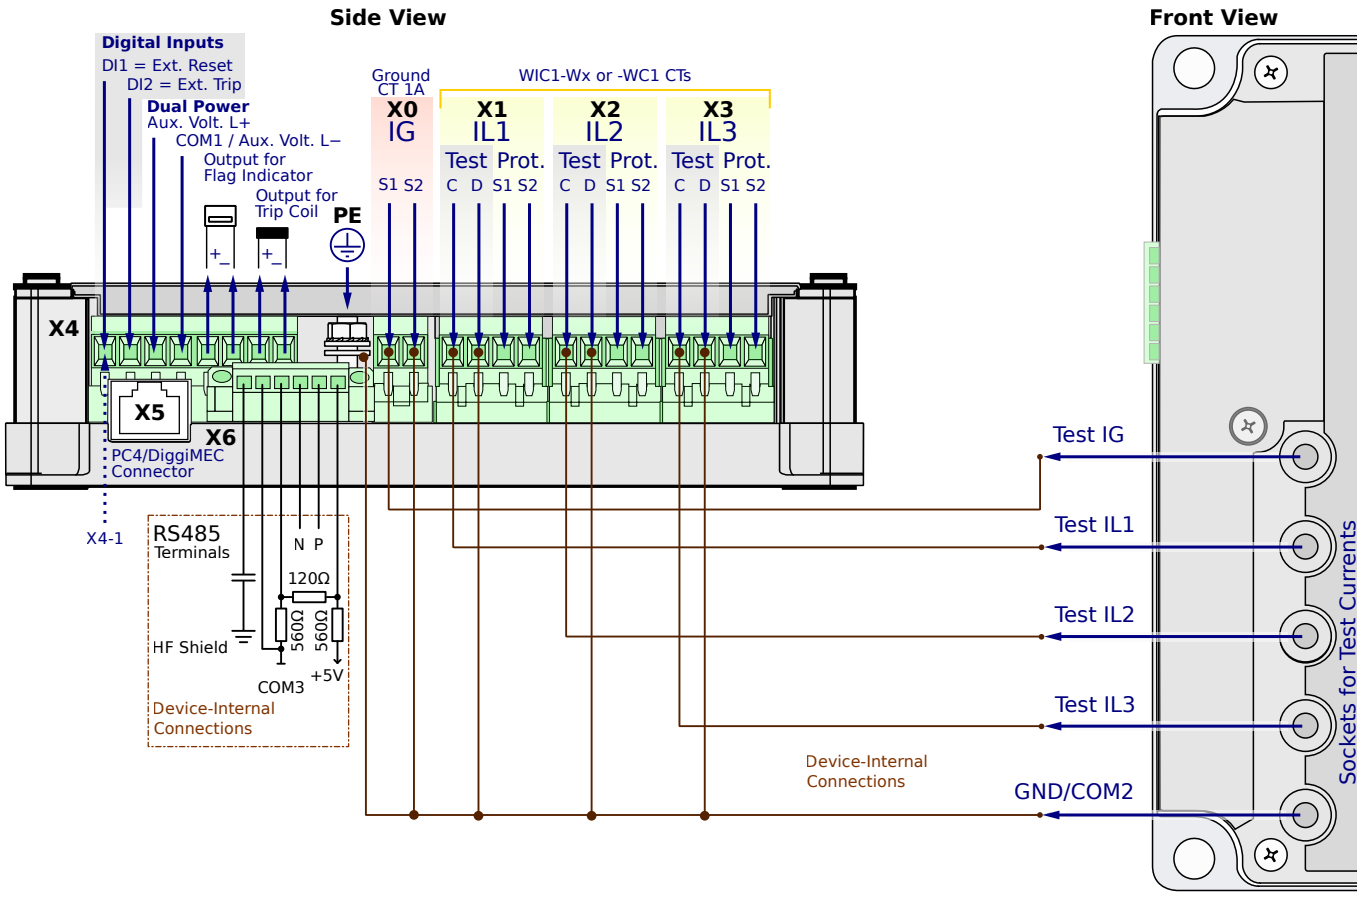


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CG2PC0

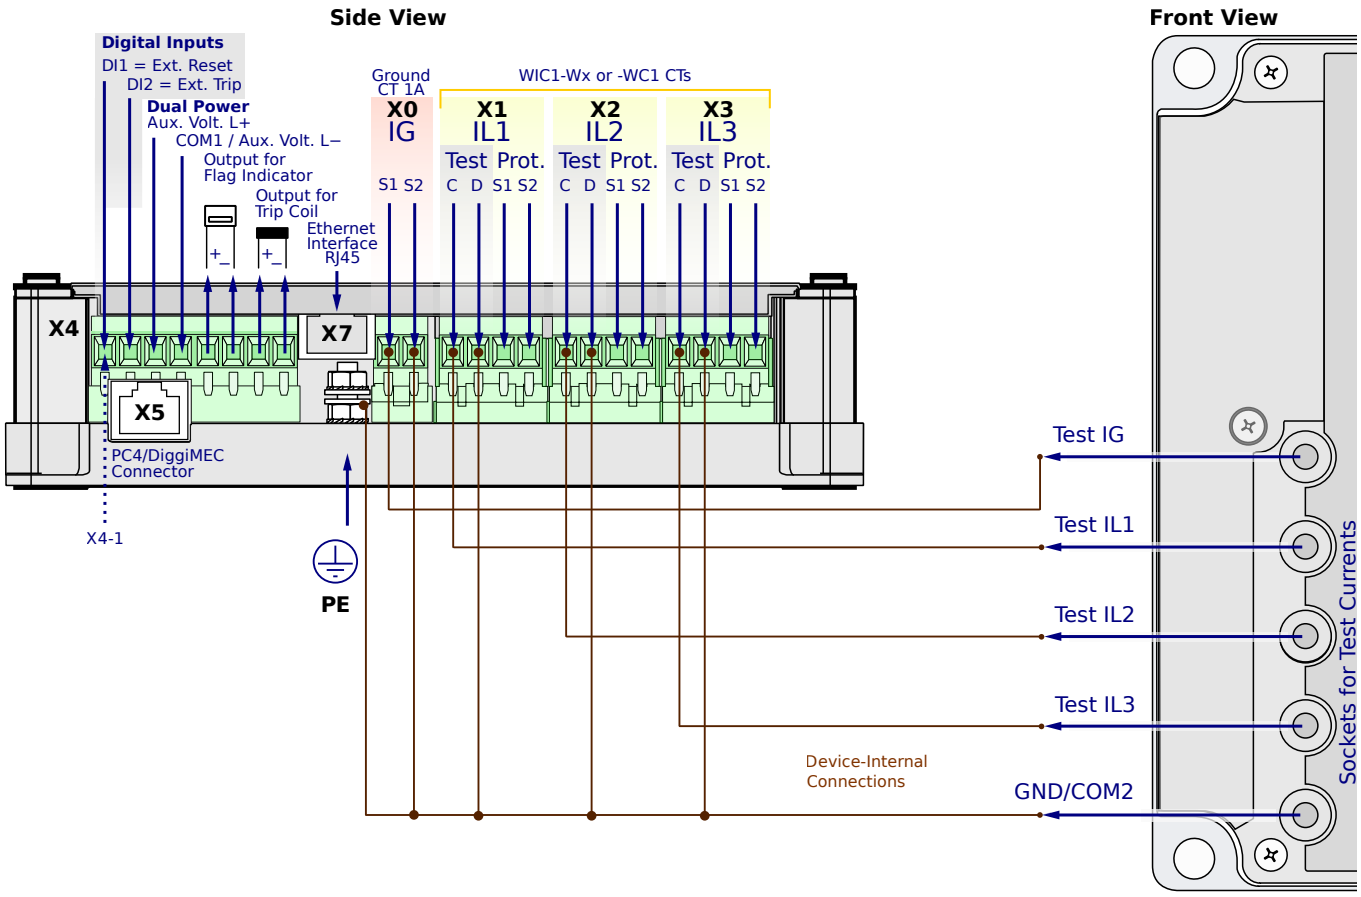


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2PCH

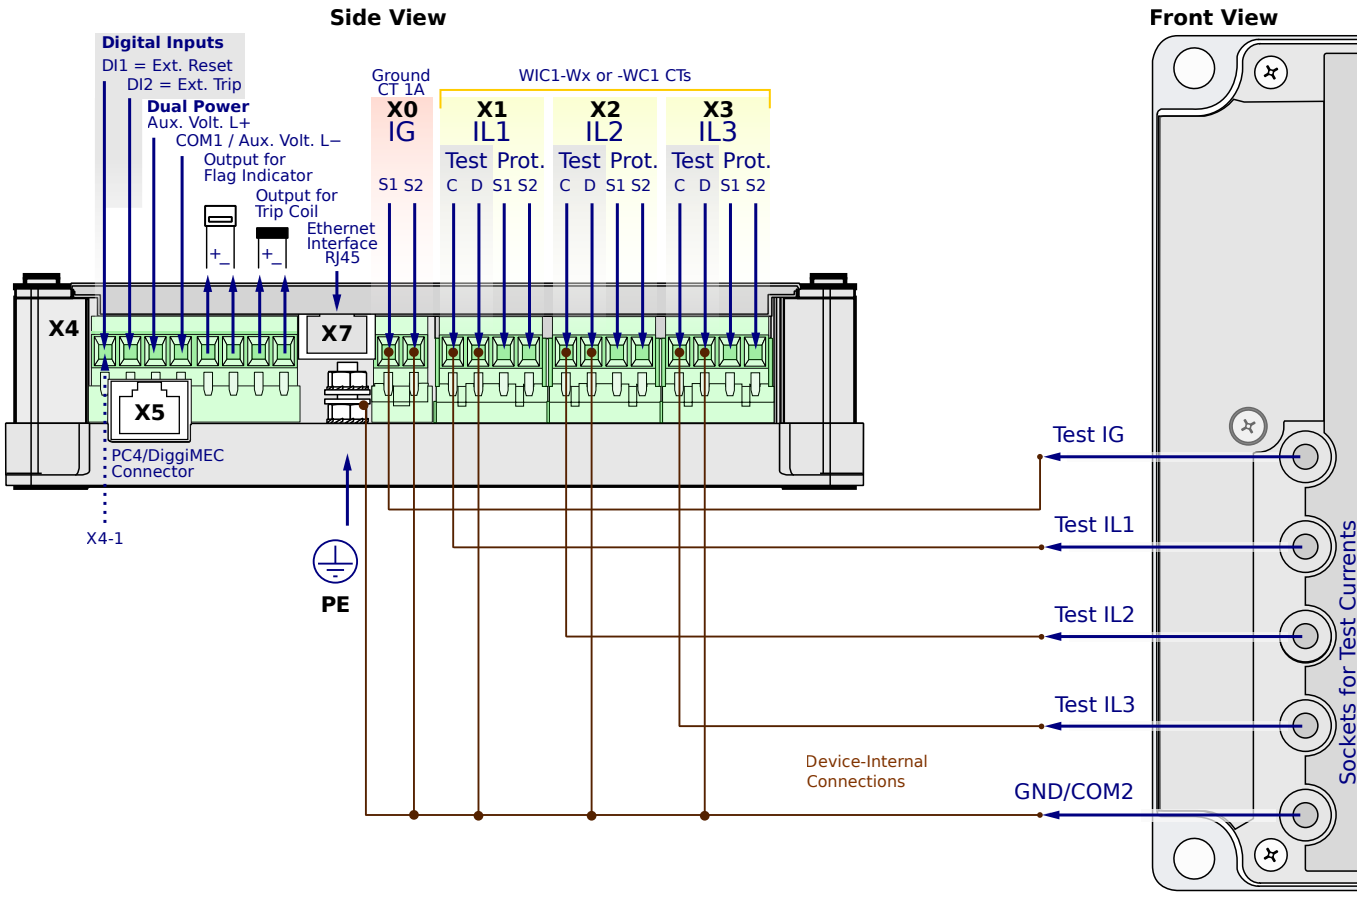


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CG2PL0

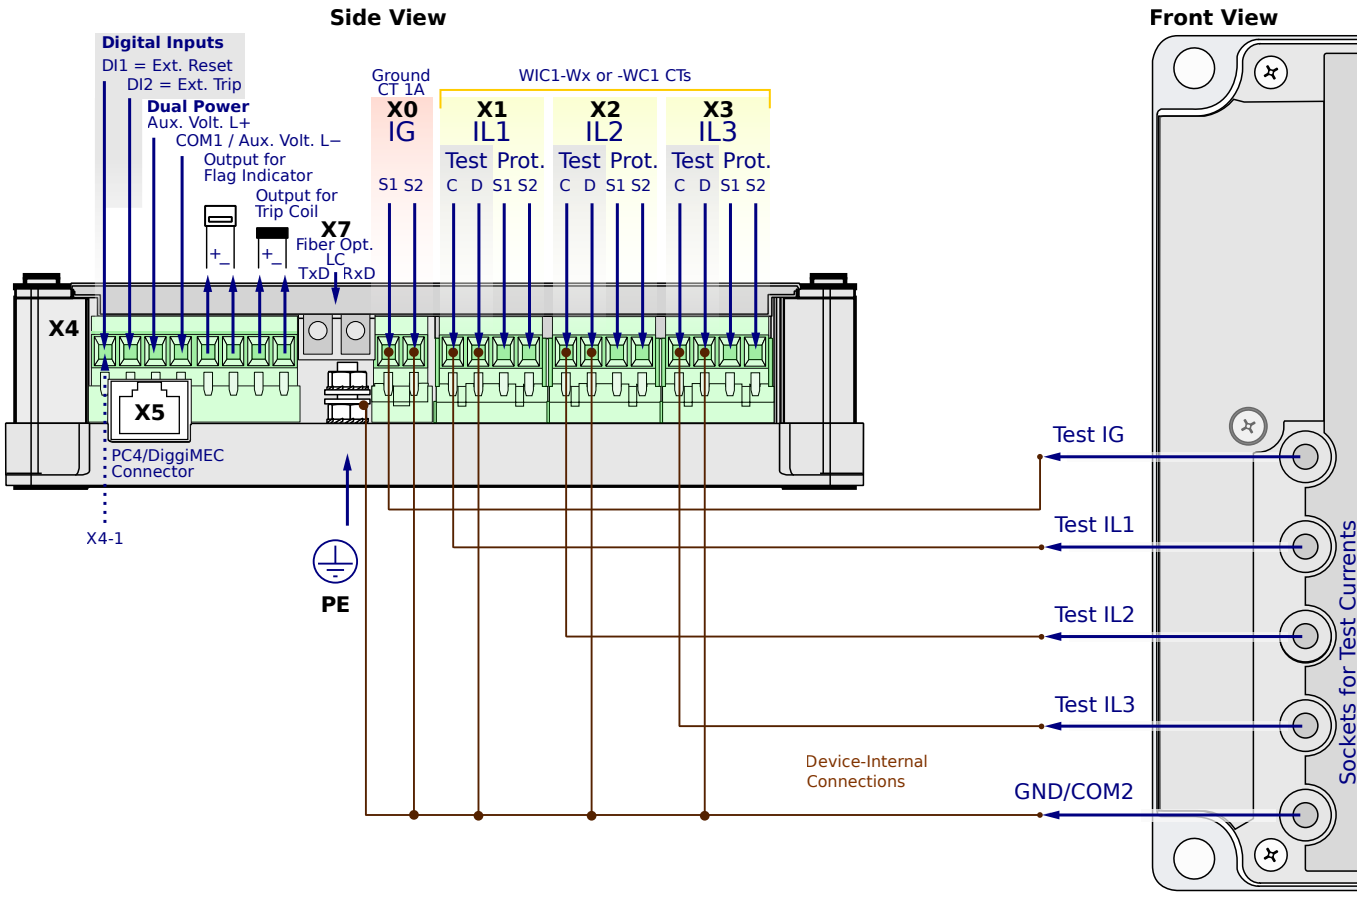


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CG2PLH

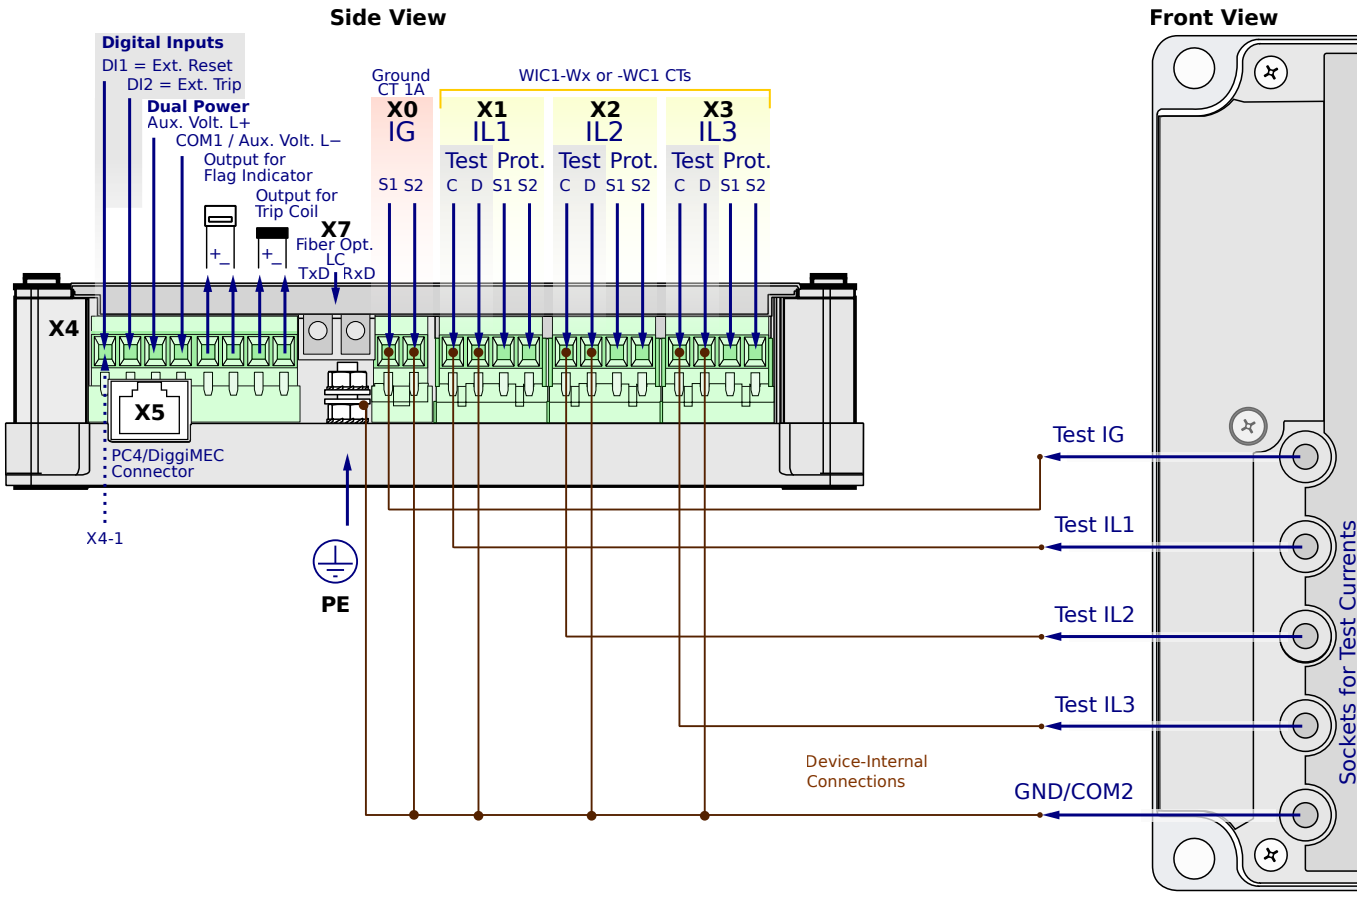


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1SA0

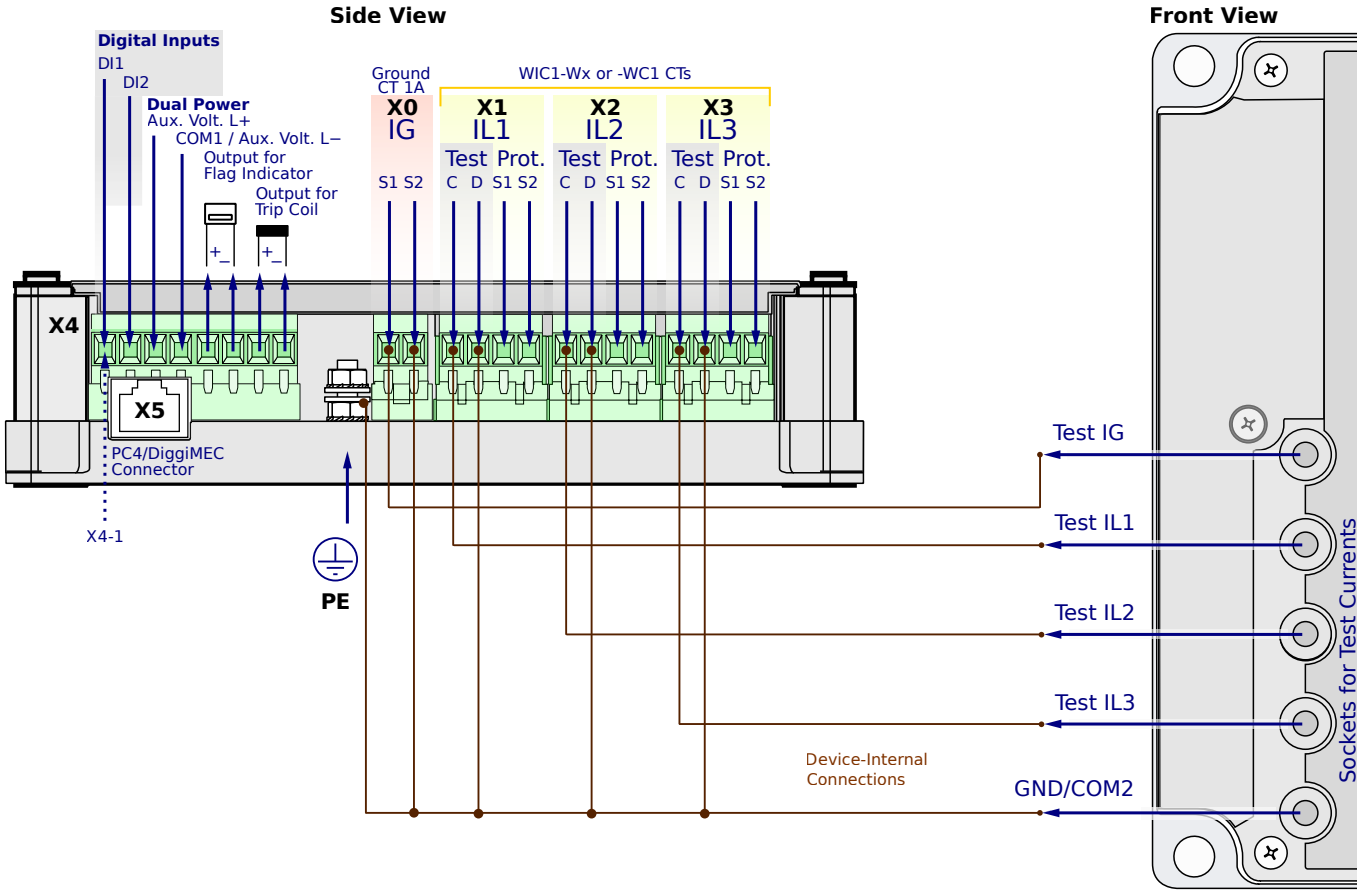


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1SAH

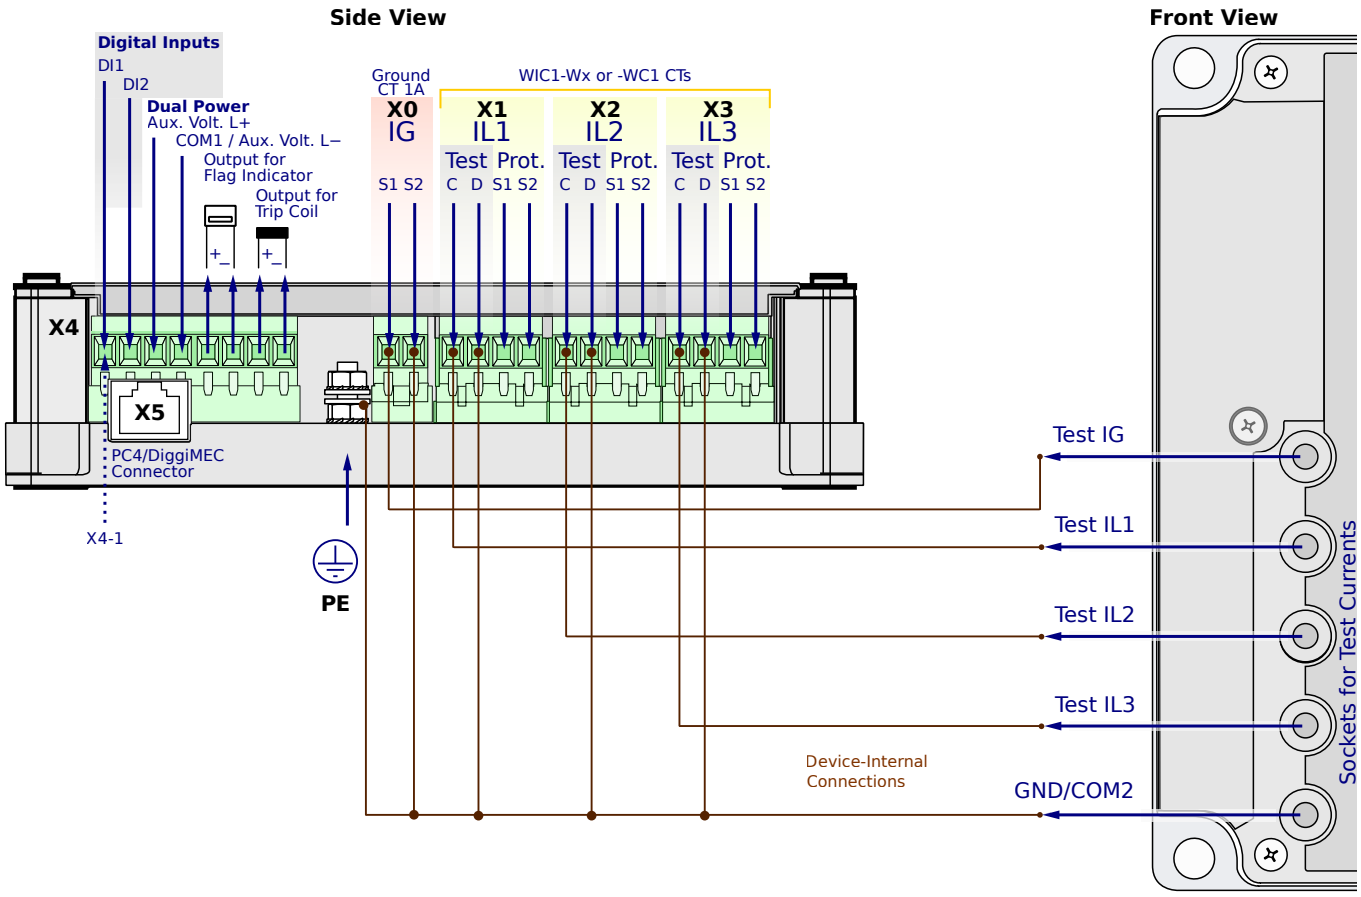


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1SB0

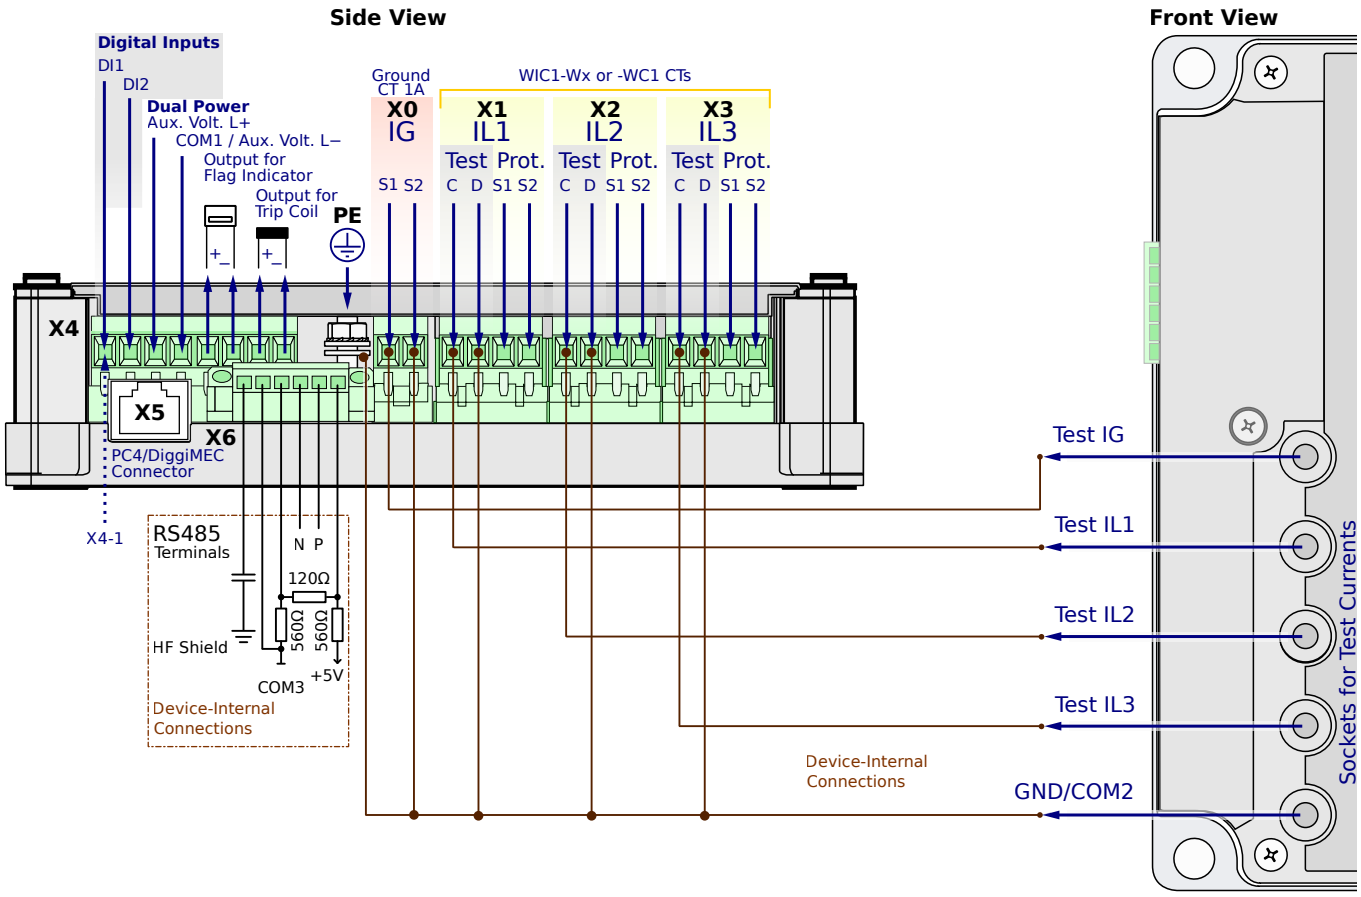


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1SBH

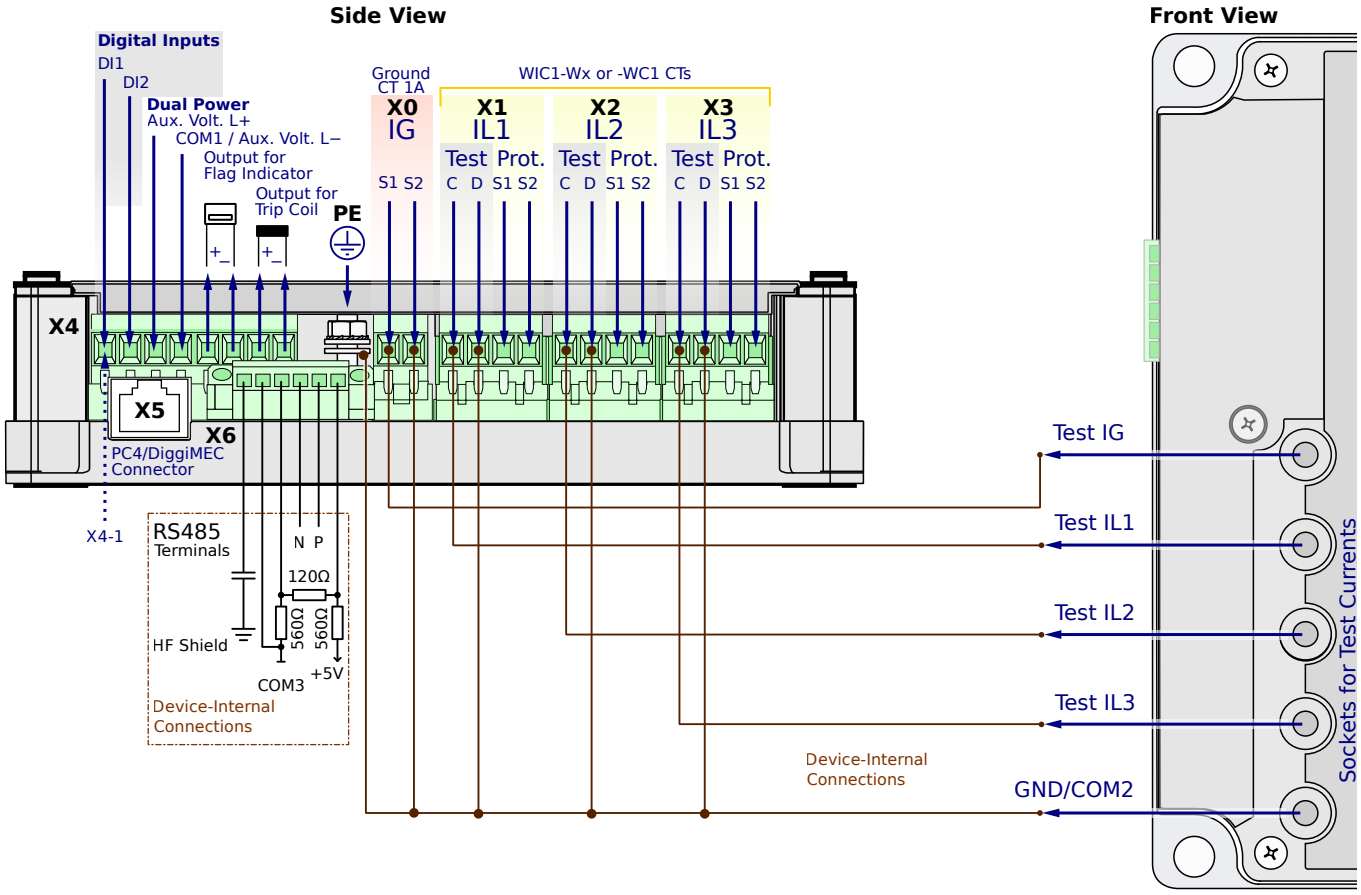


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1SC0

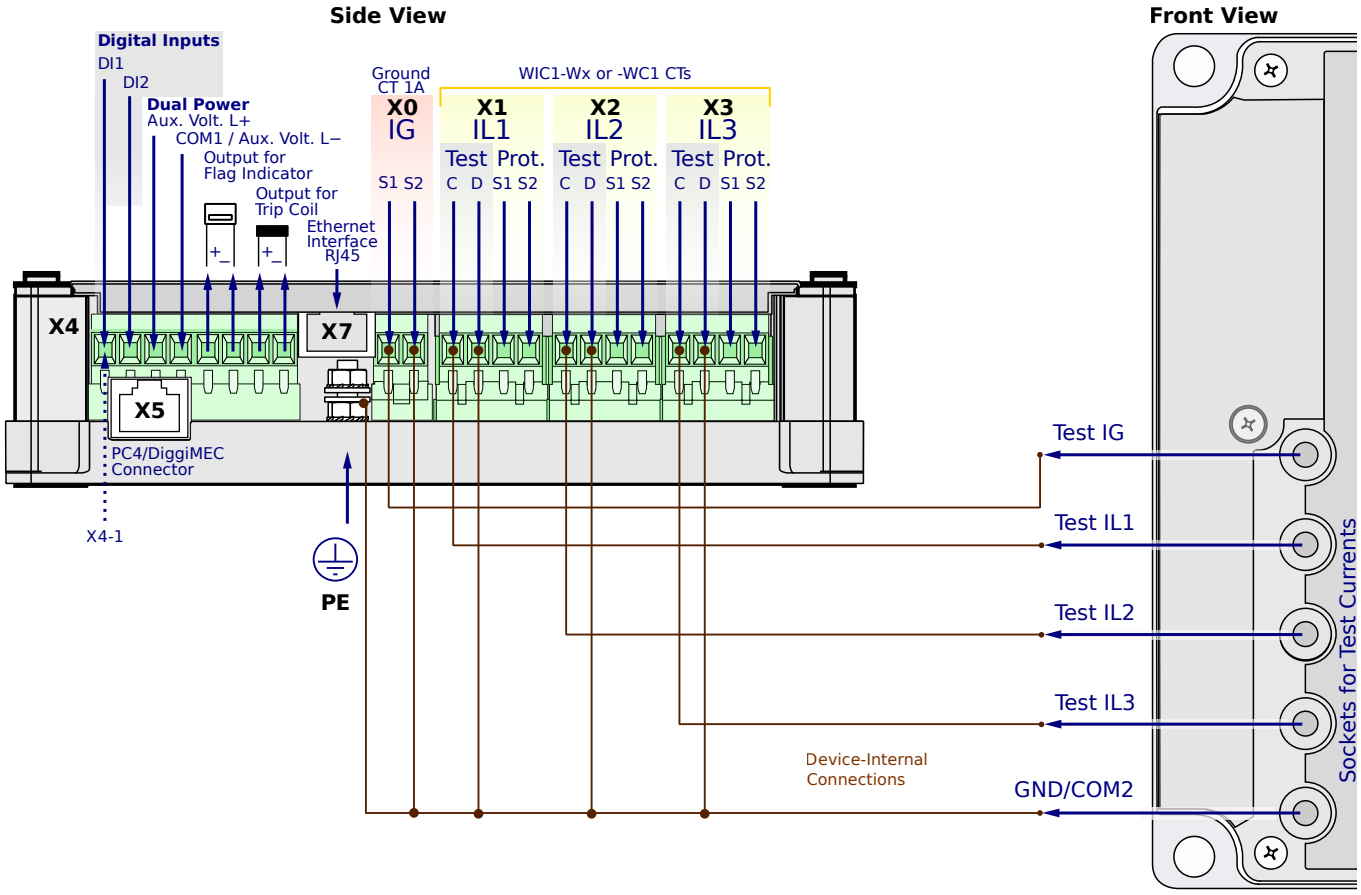


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1SCH

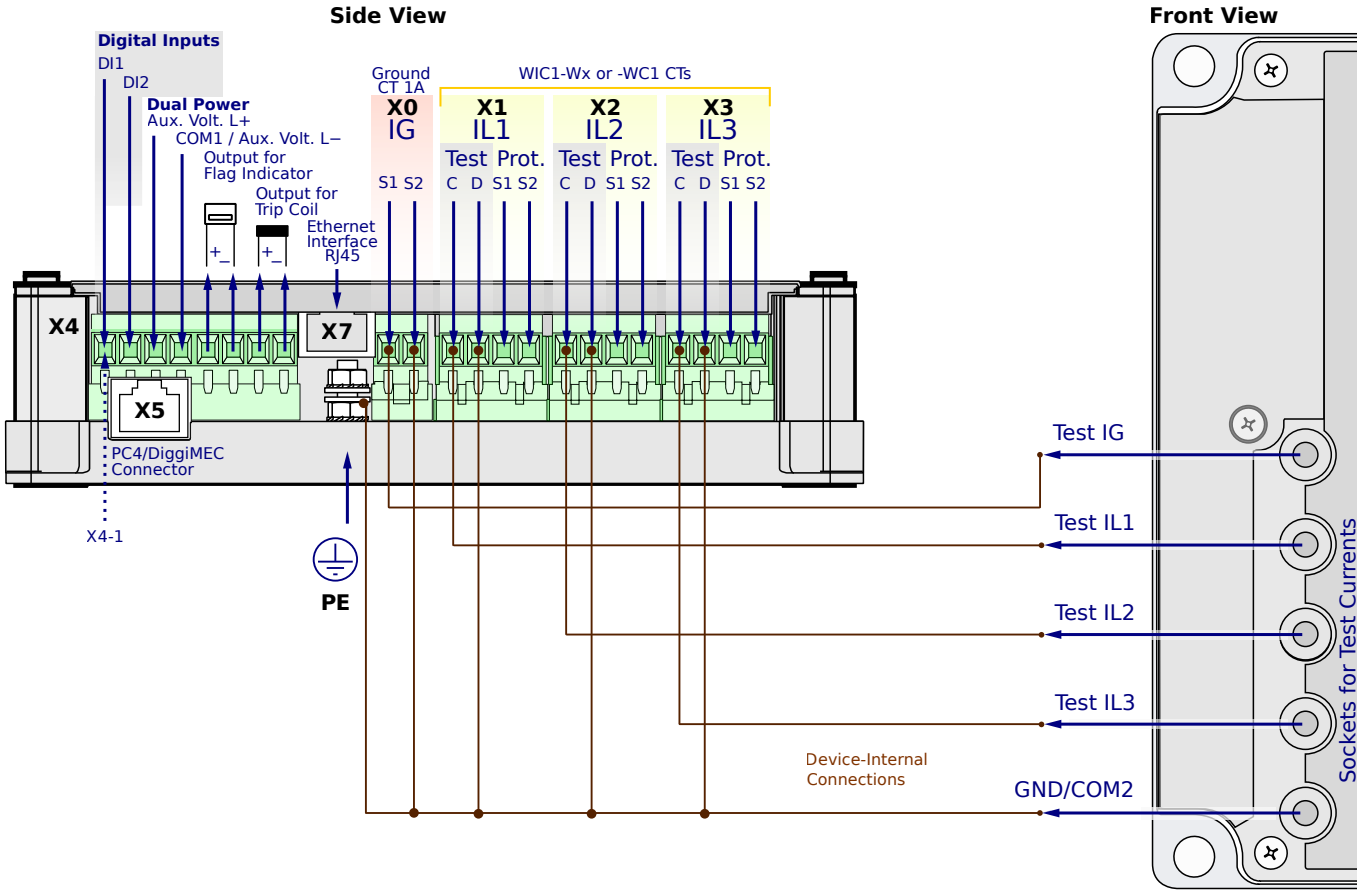


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1SL0

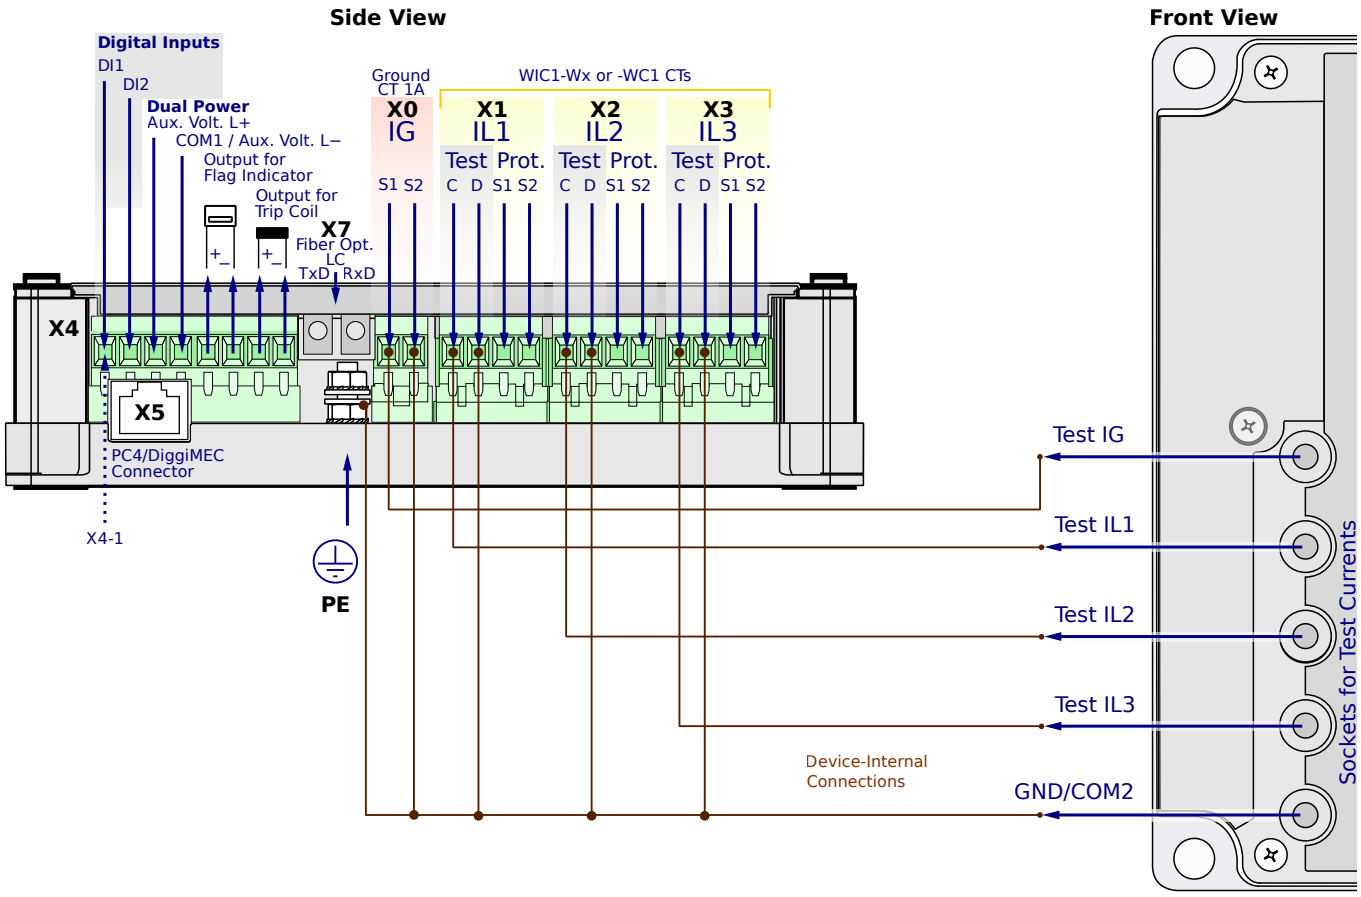


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1SLH

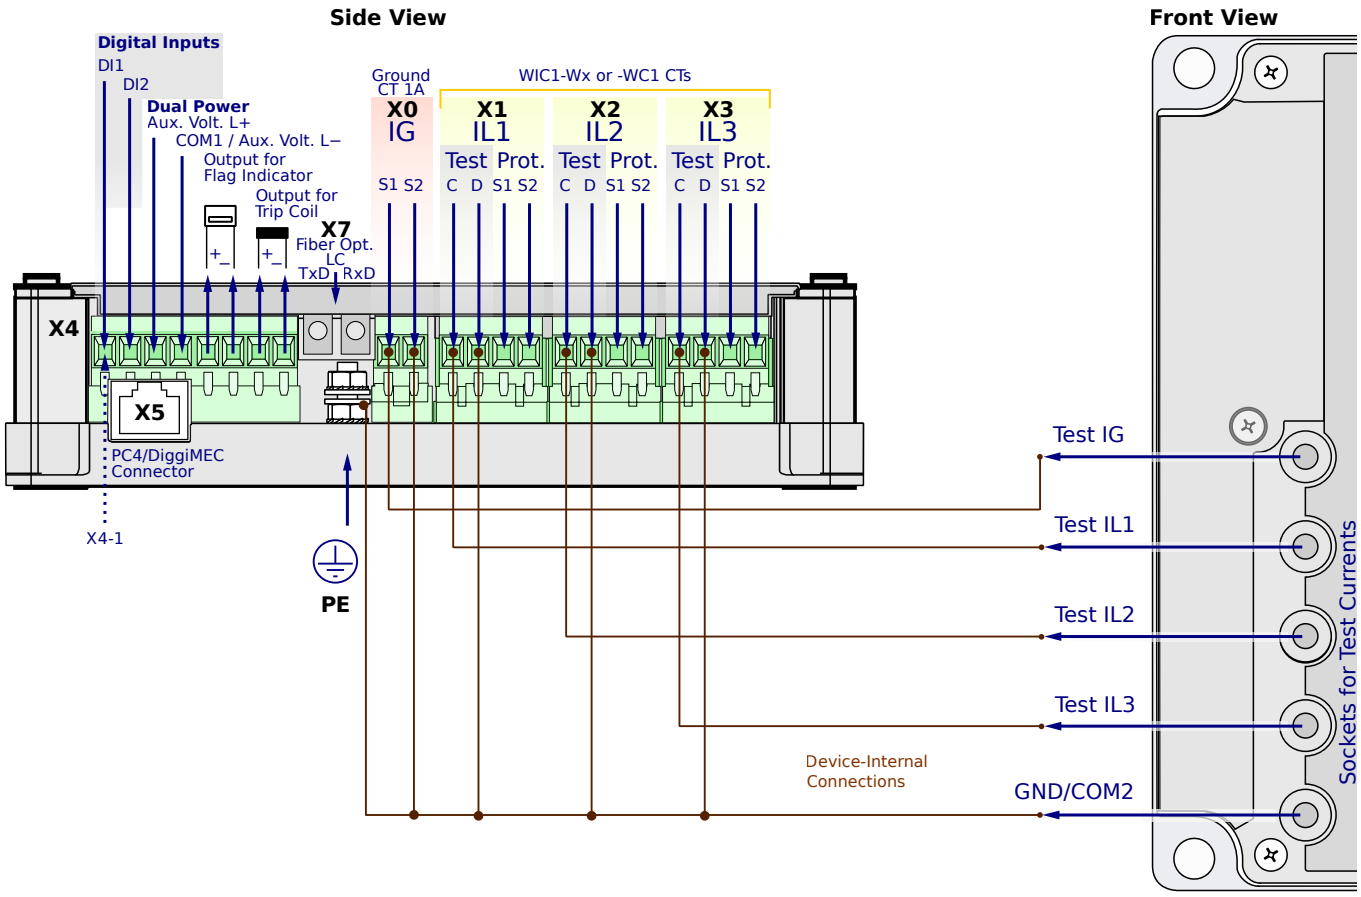


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1AA0

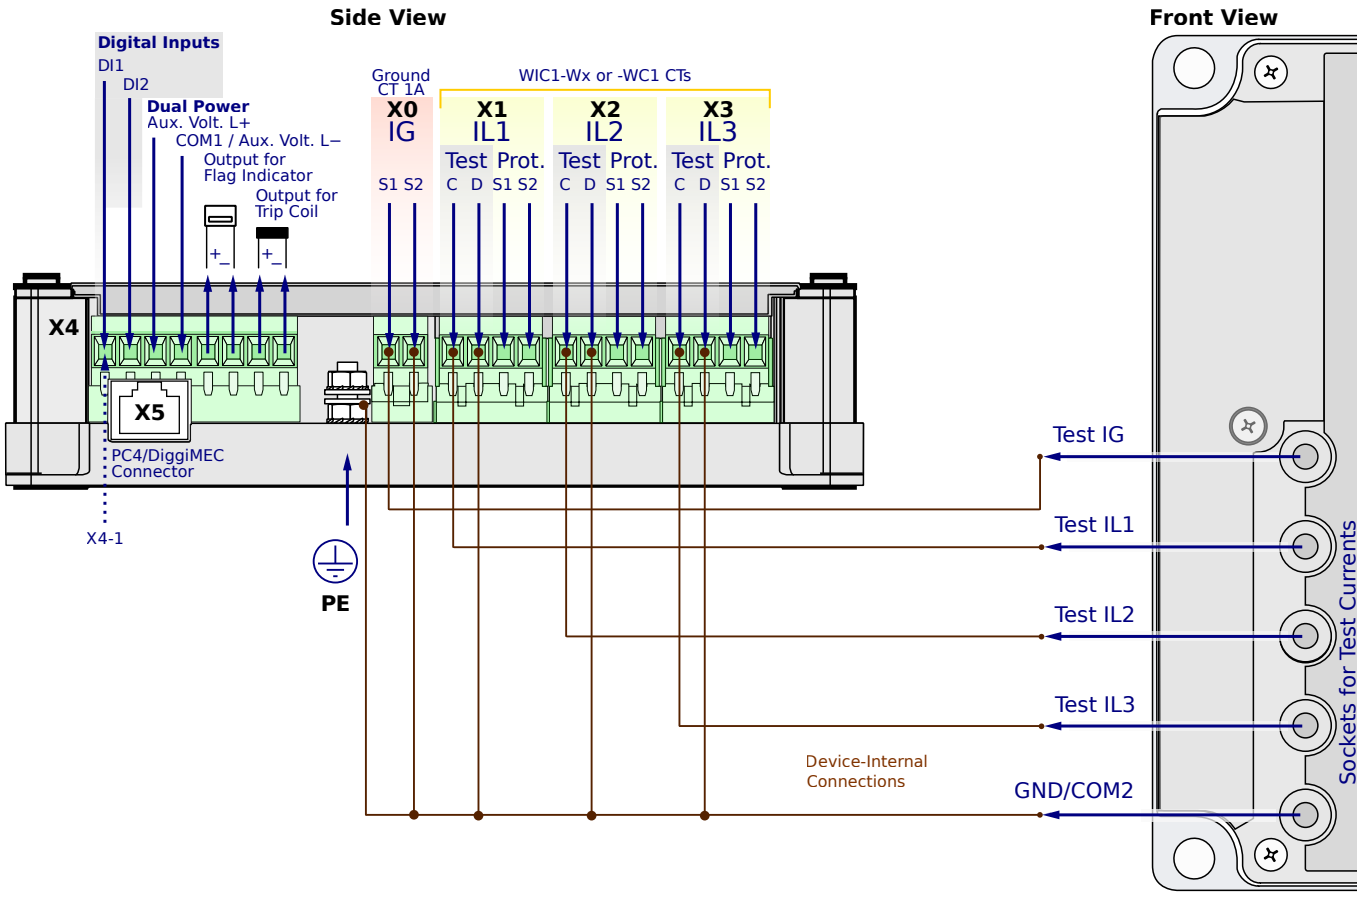


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1AAH

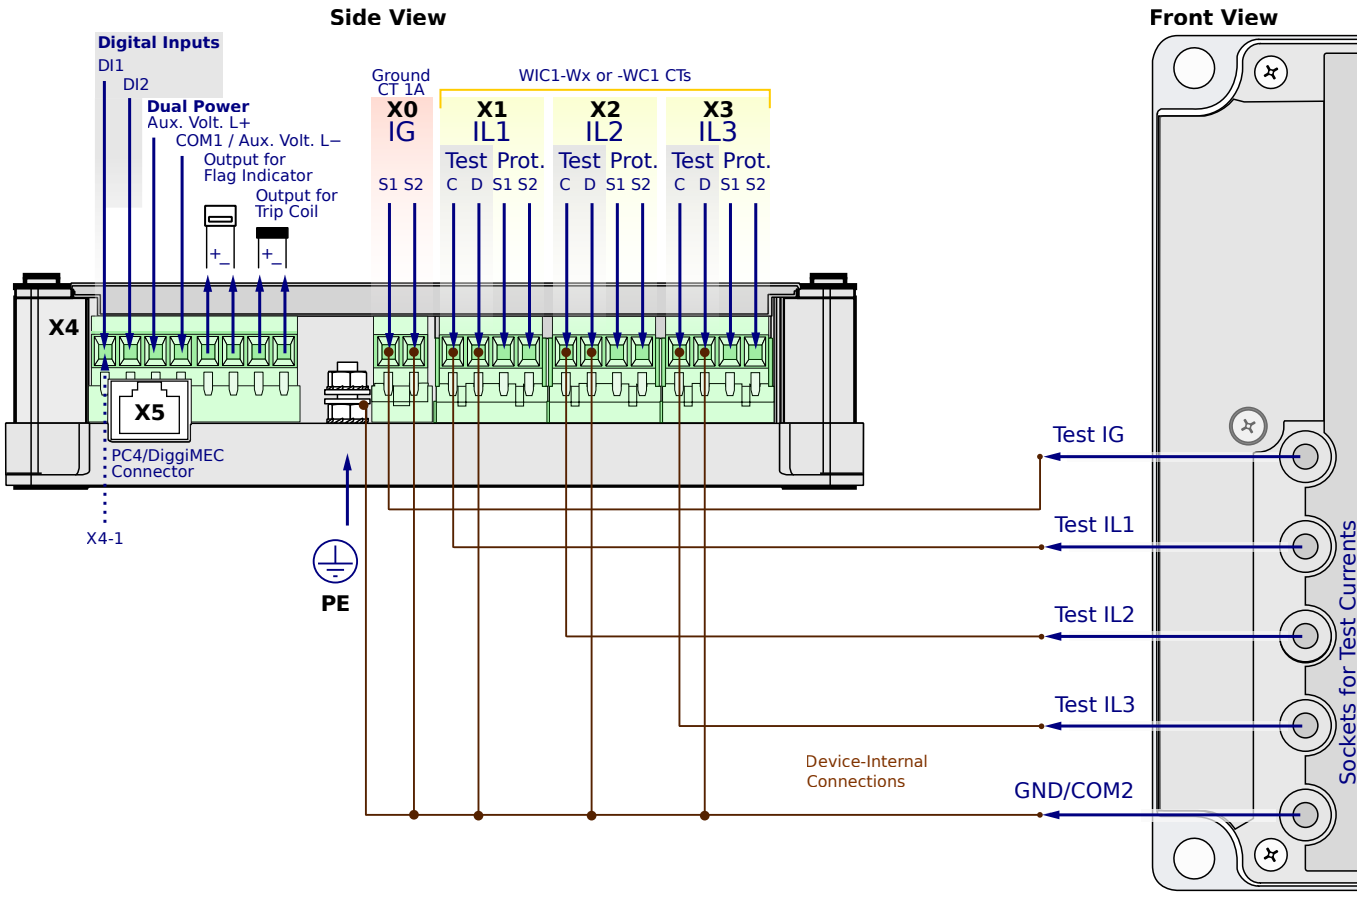


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1AB0

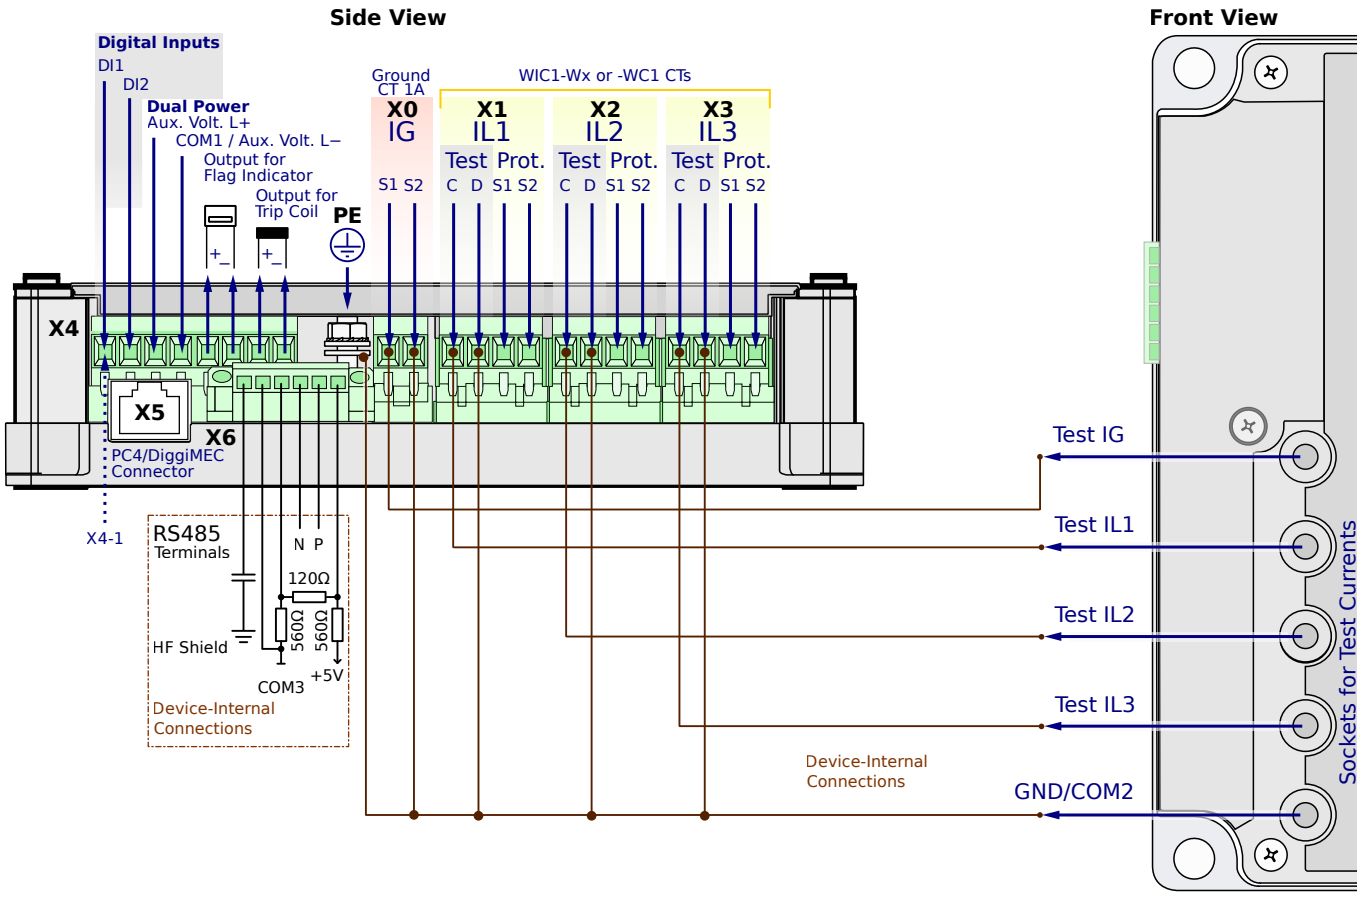


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1ABH

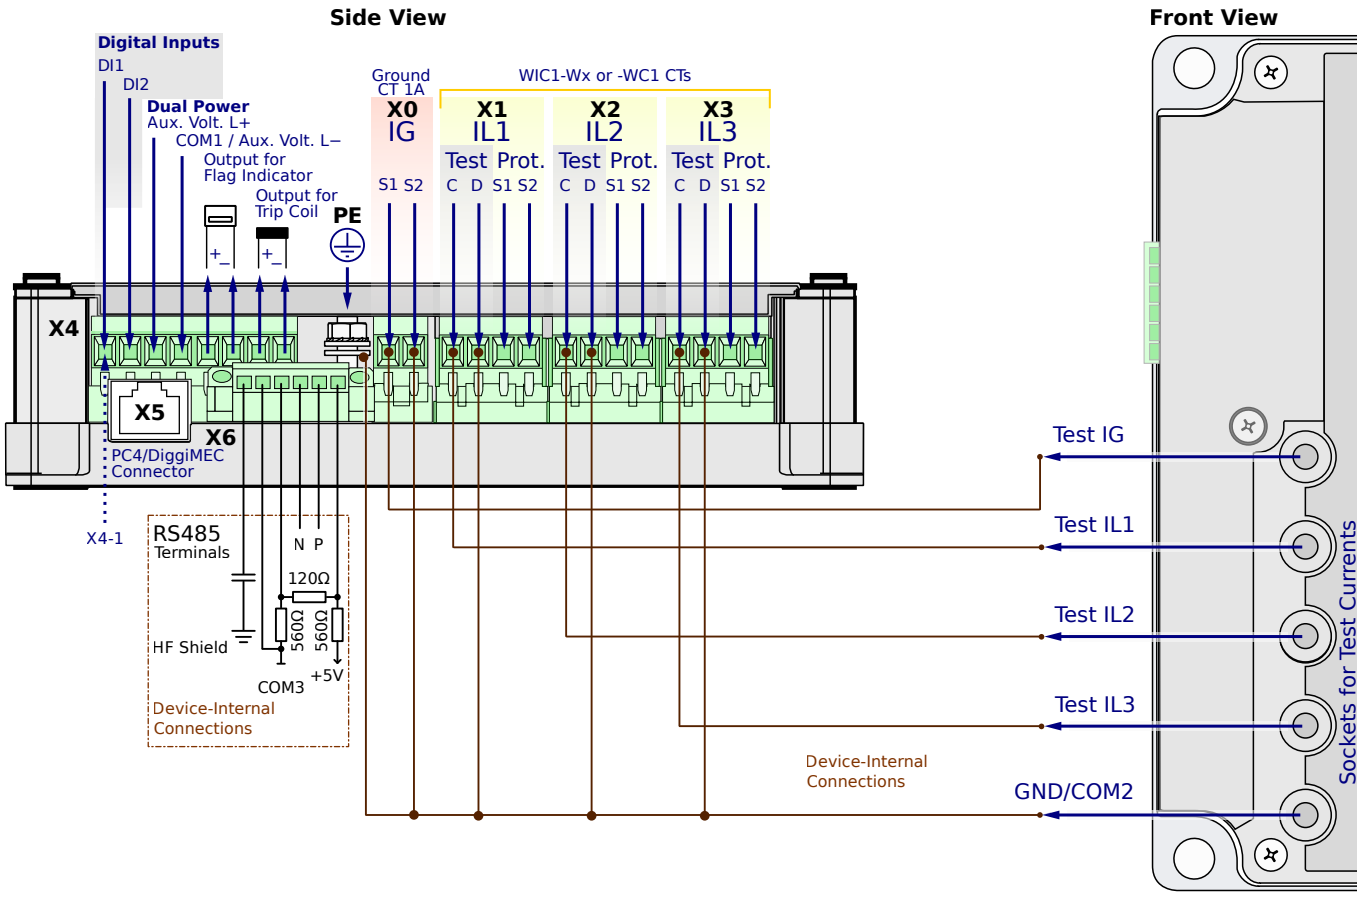


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1AC0

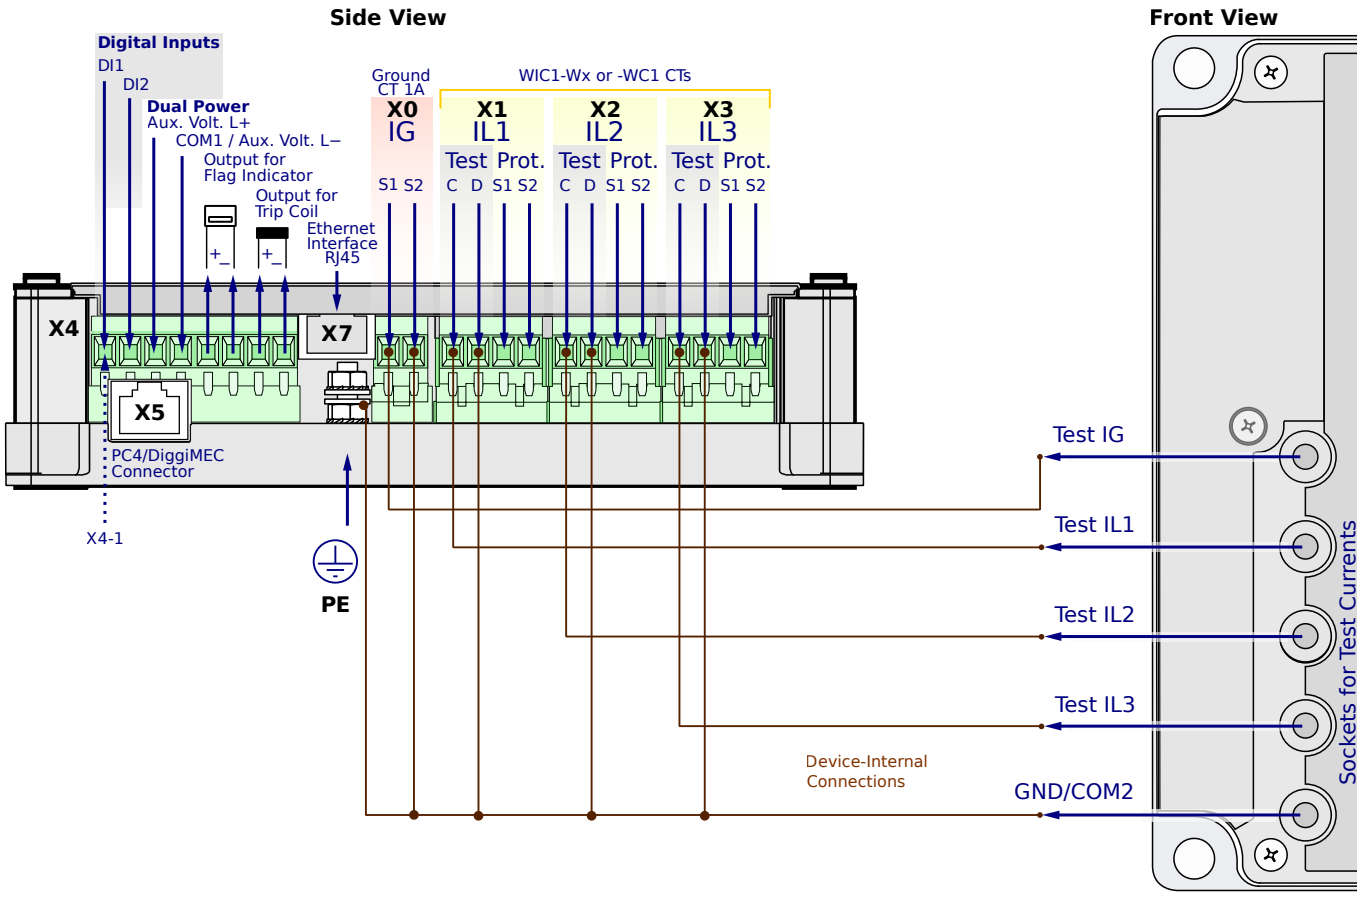


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1ACH

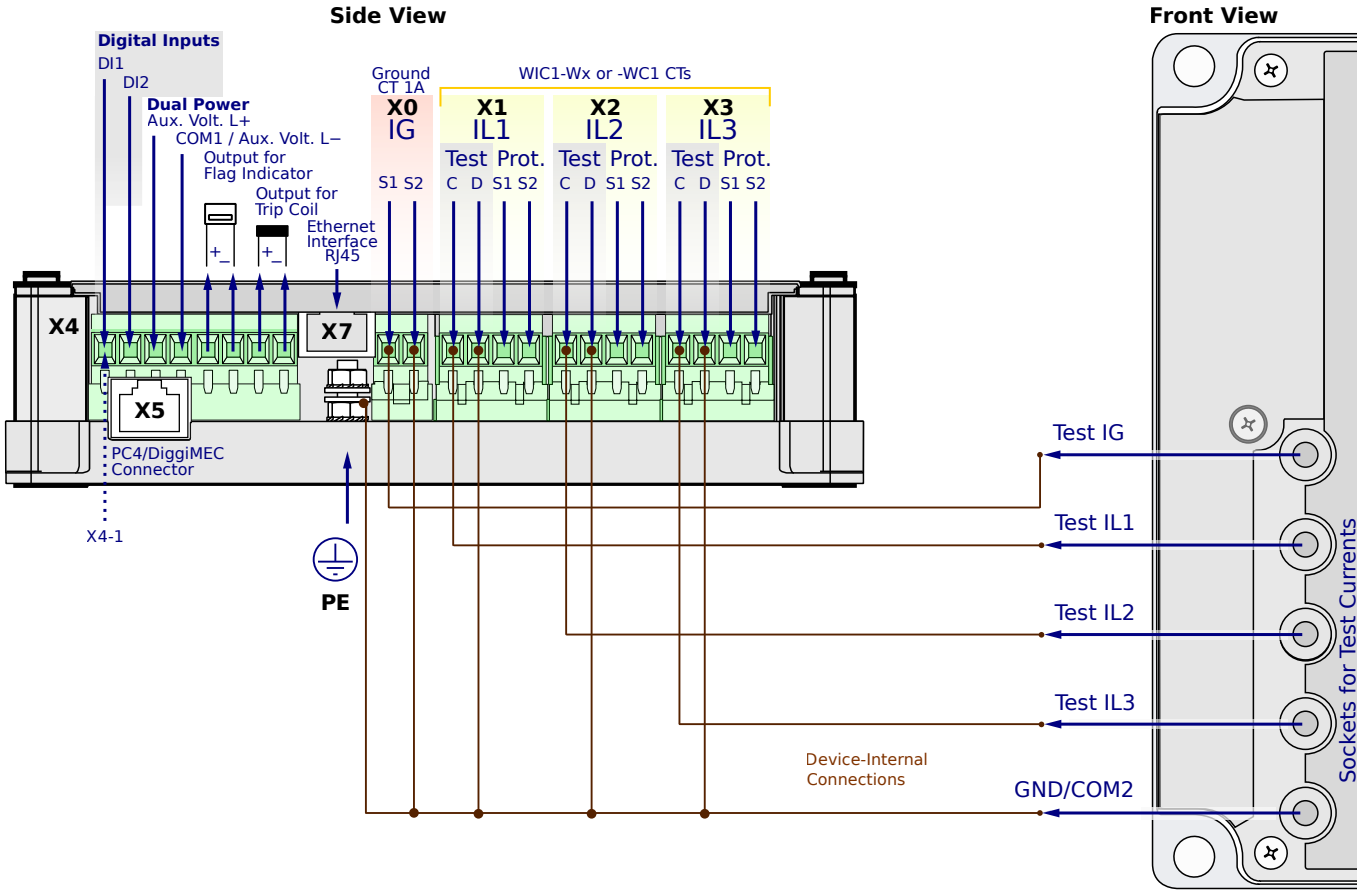


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1AL0

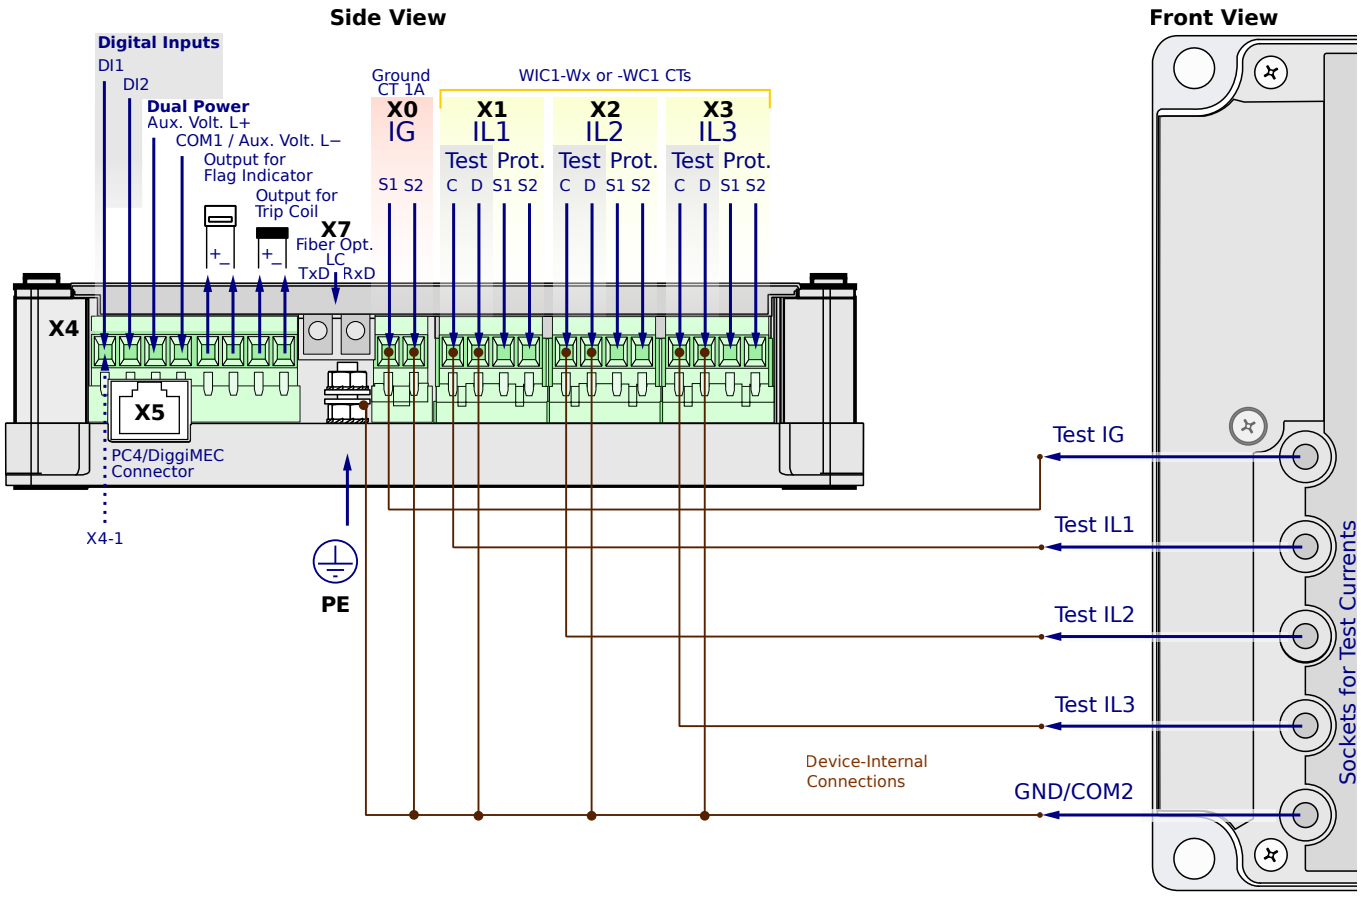


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1ALH

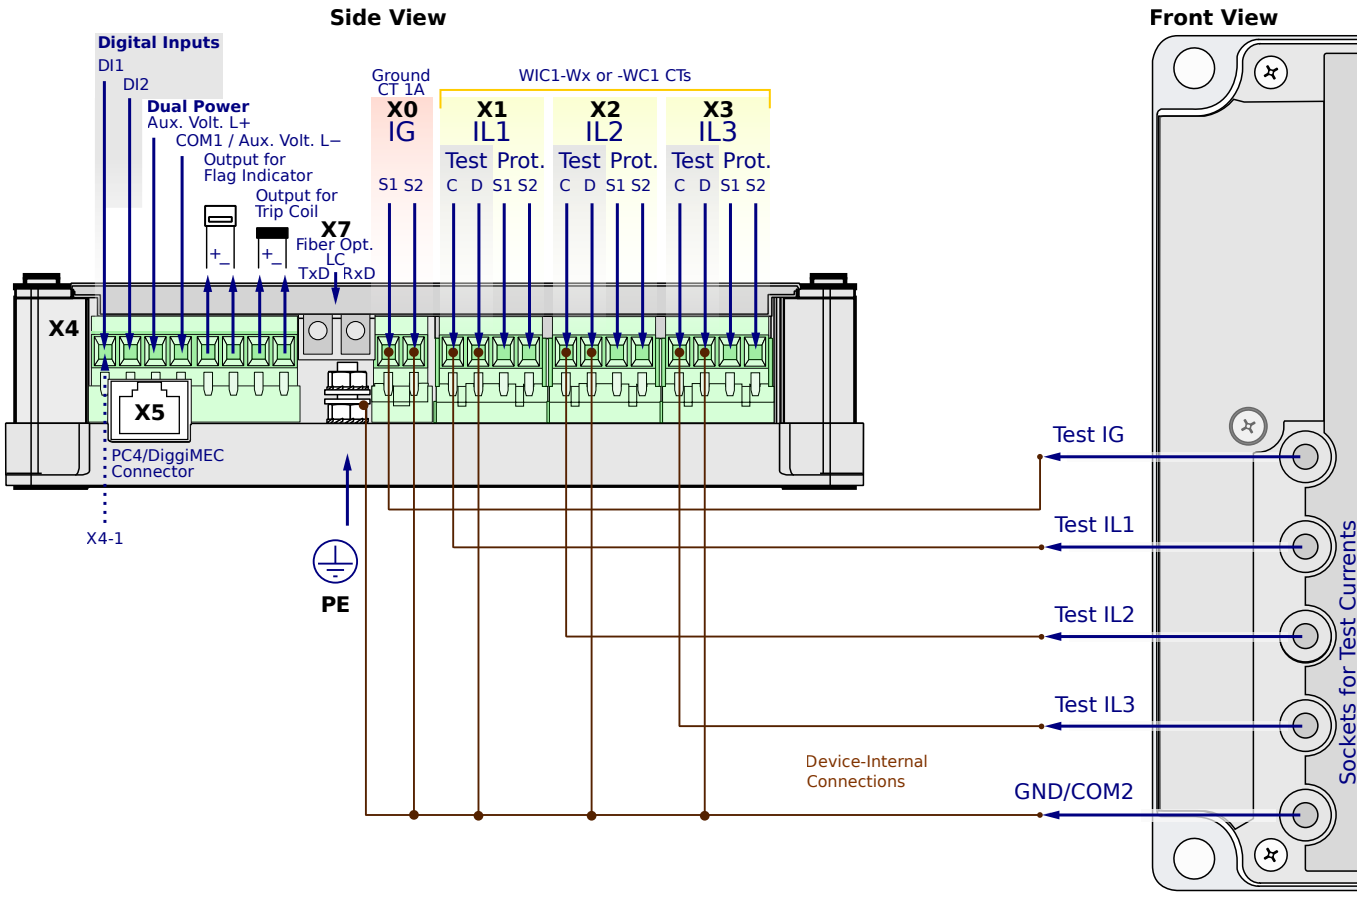


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1PA0

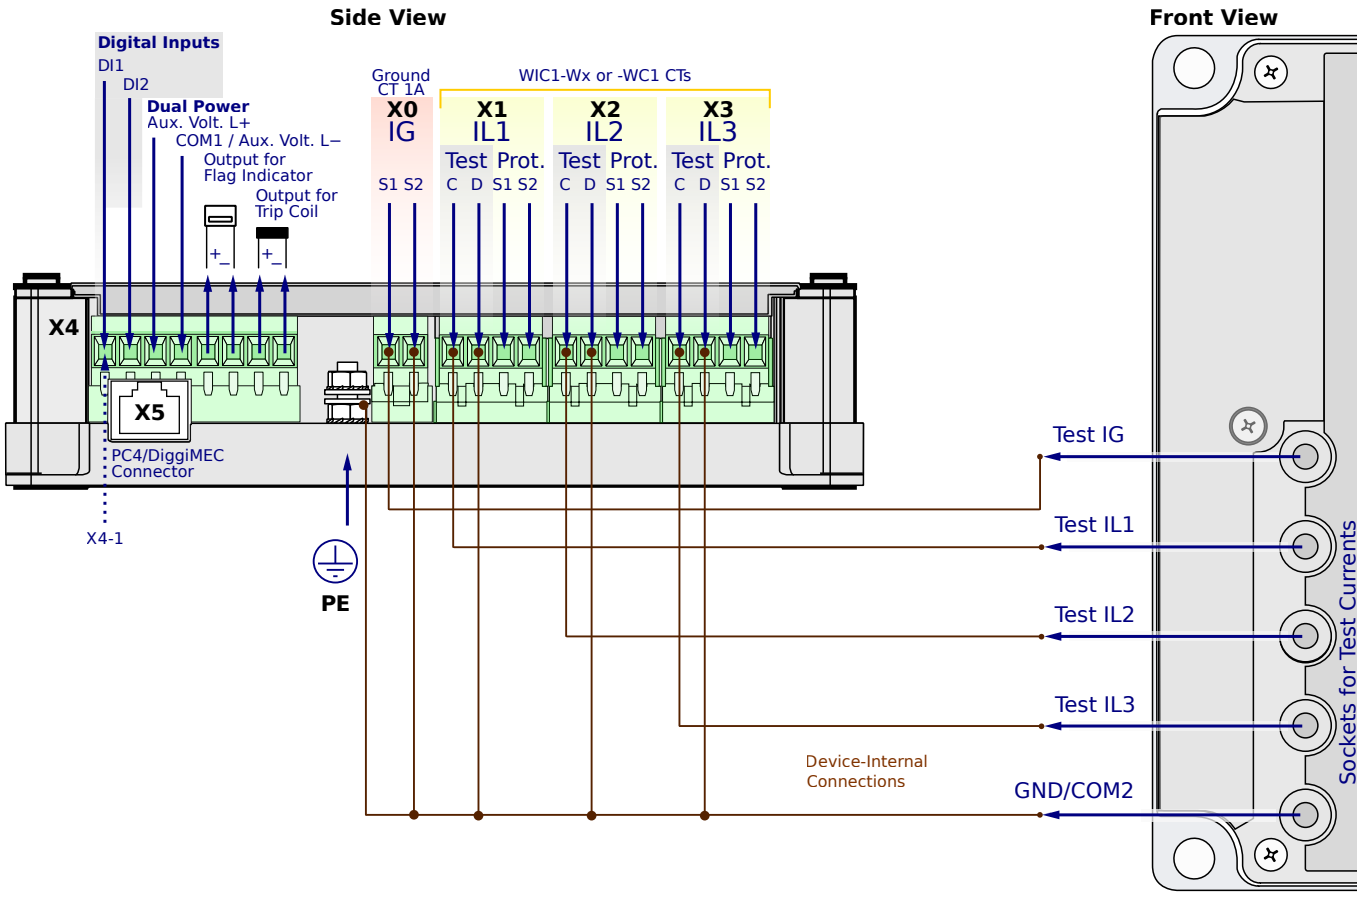


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1PAH

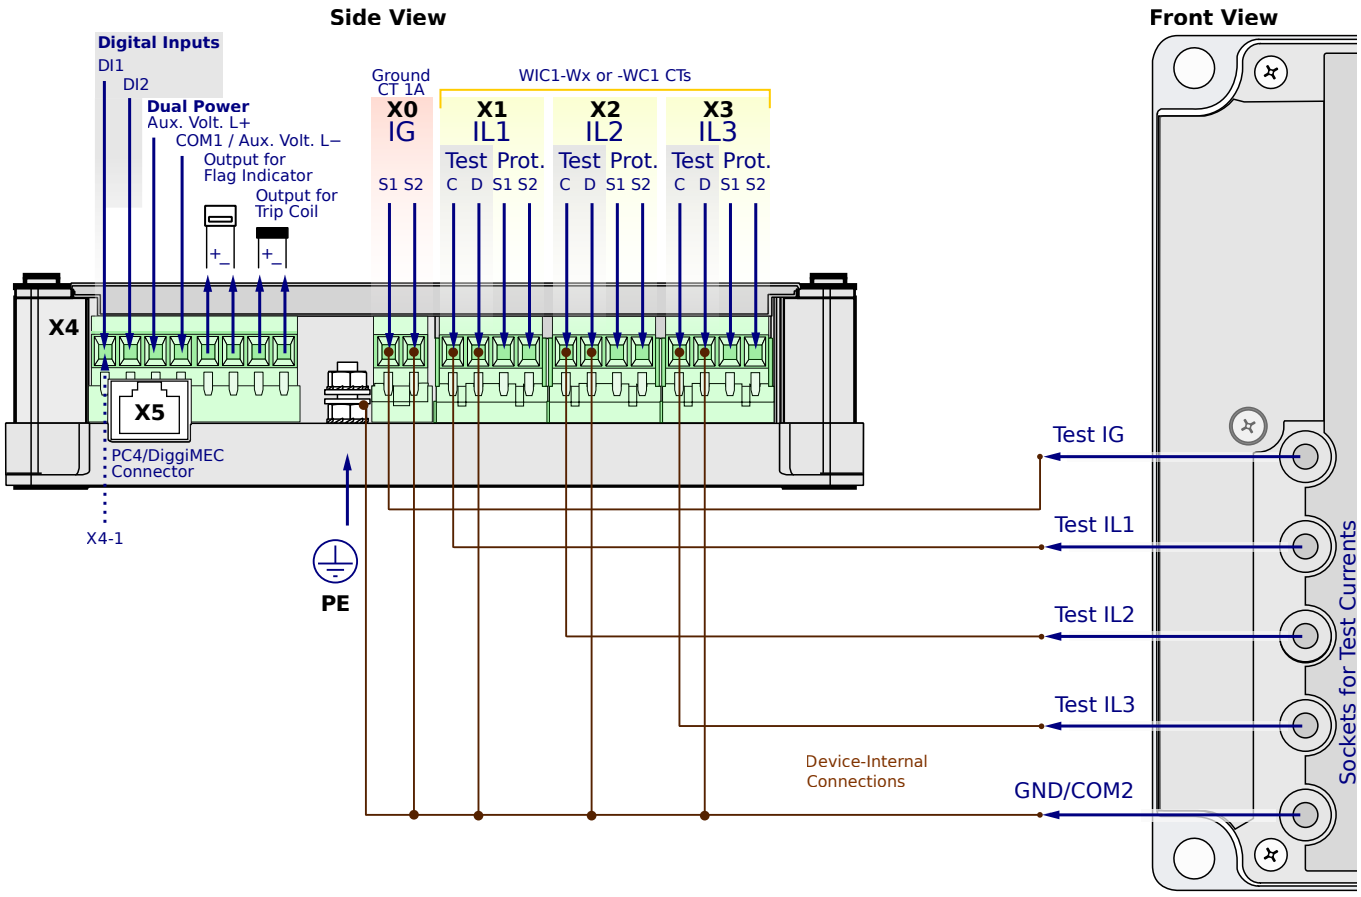


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD1PB0

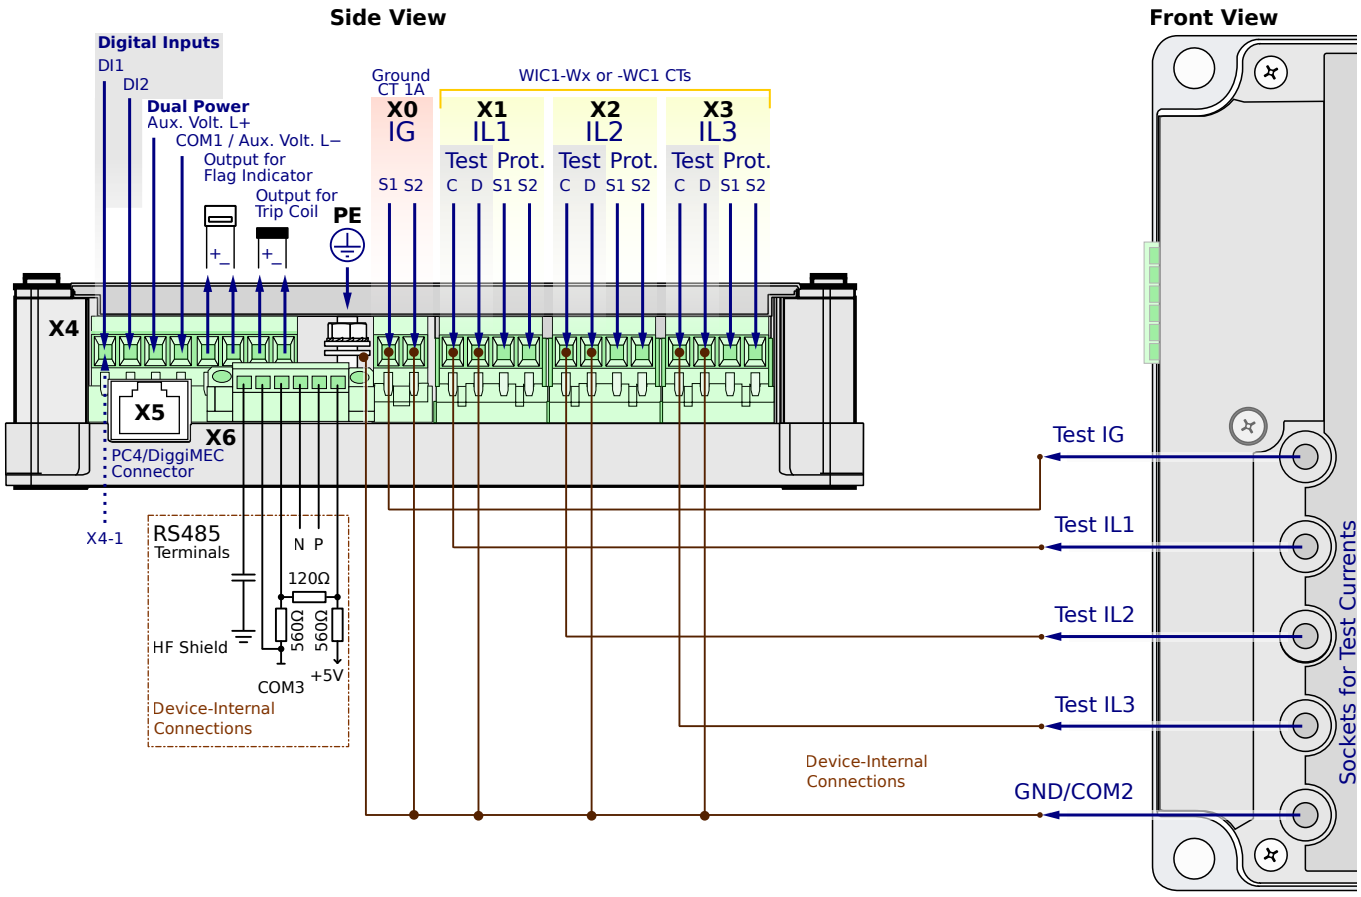


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1PBH

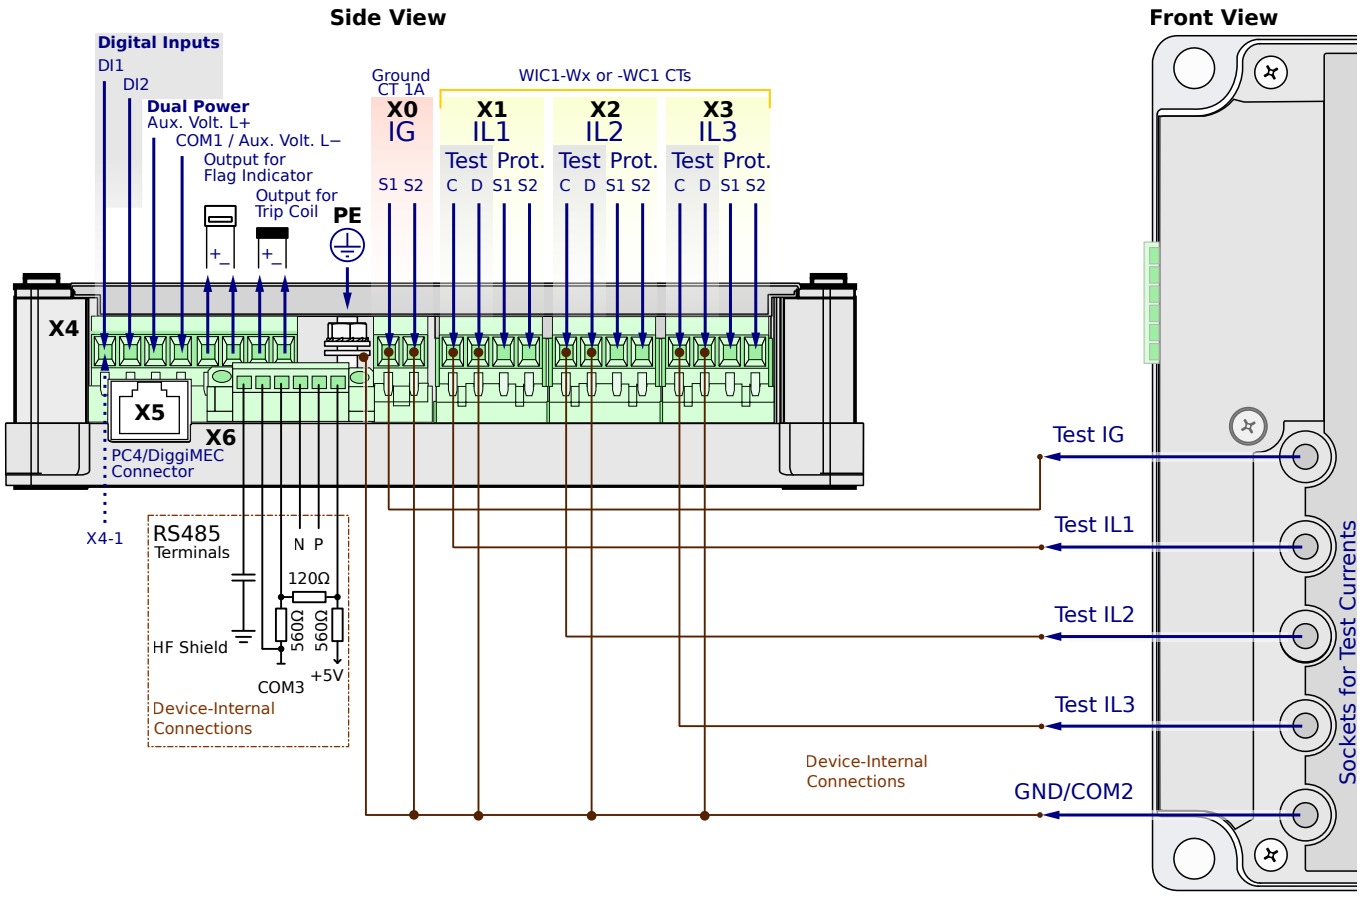


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD1PC0

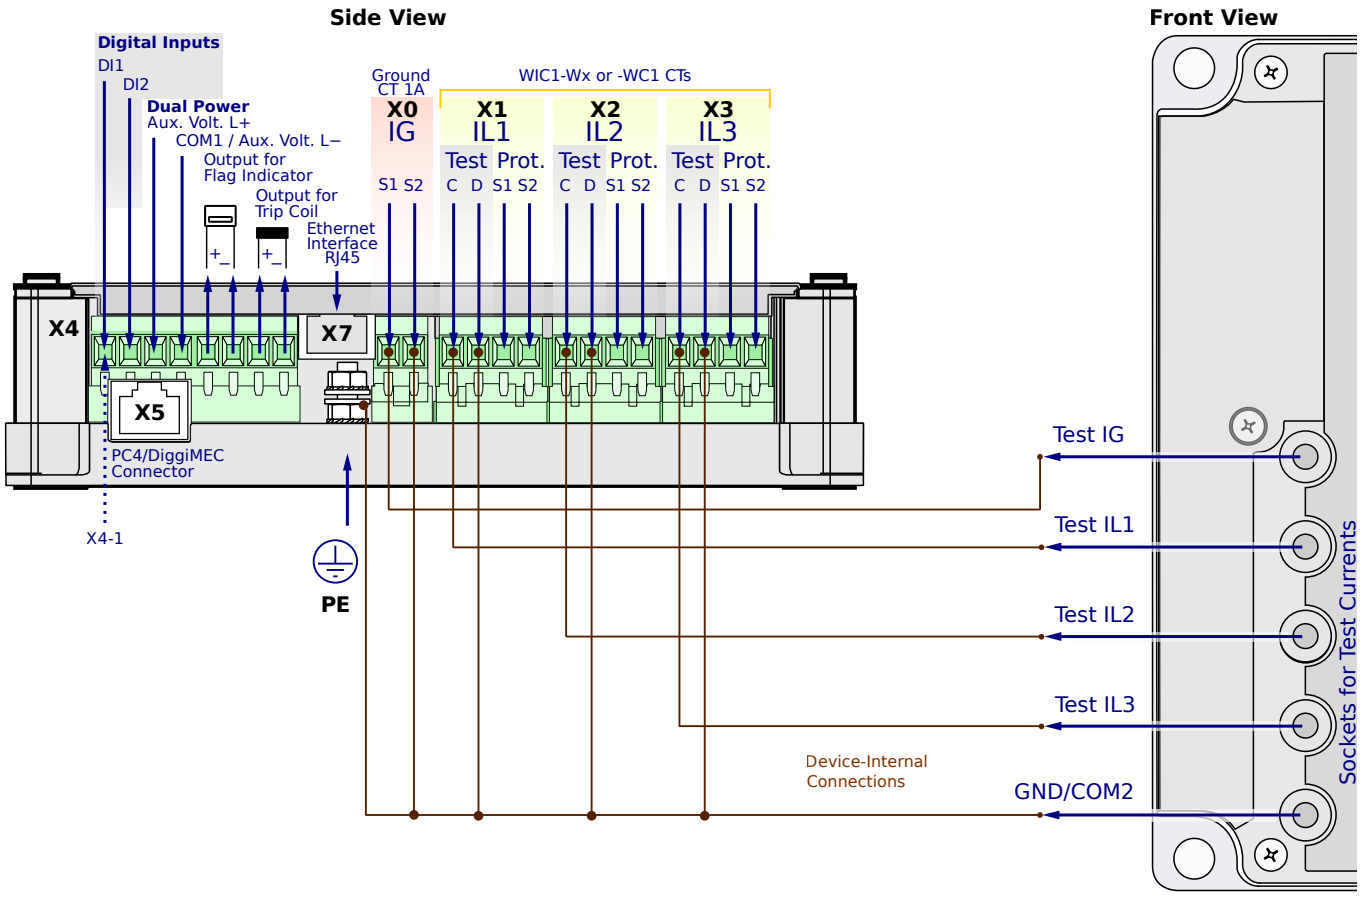


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1PCH

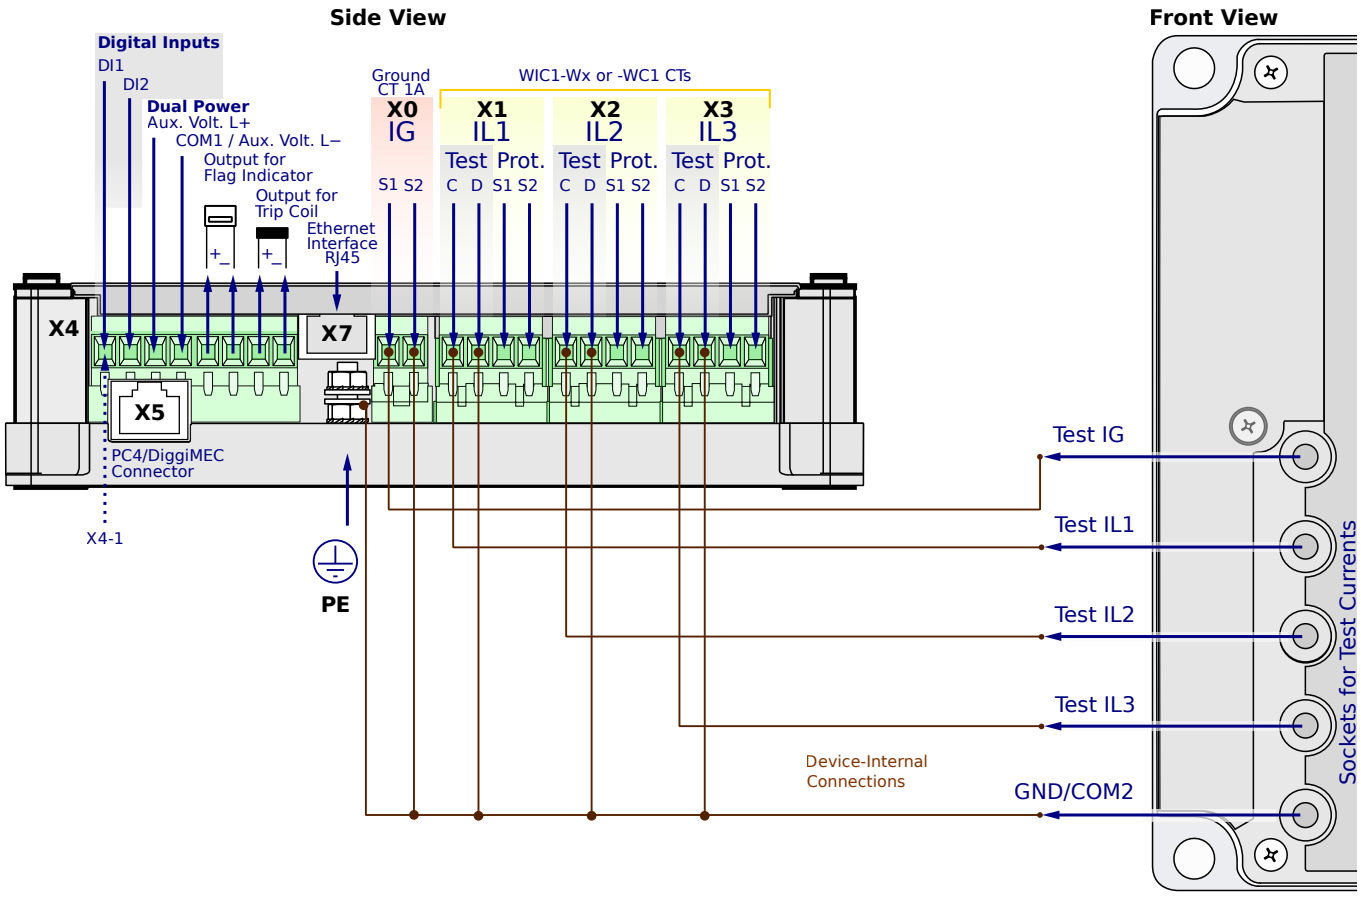


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD1PL0

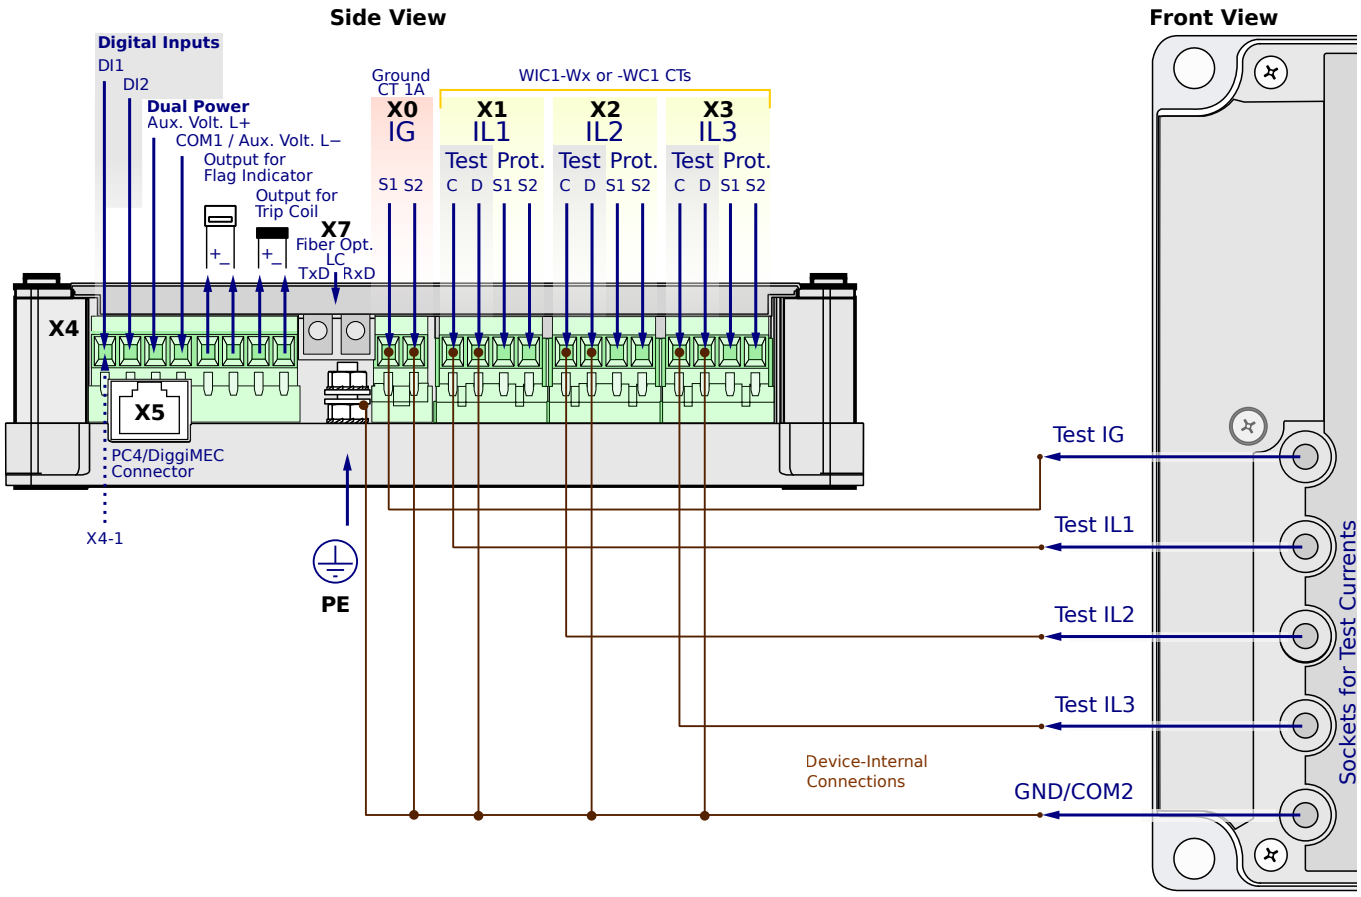


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD1PLH

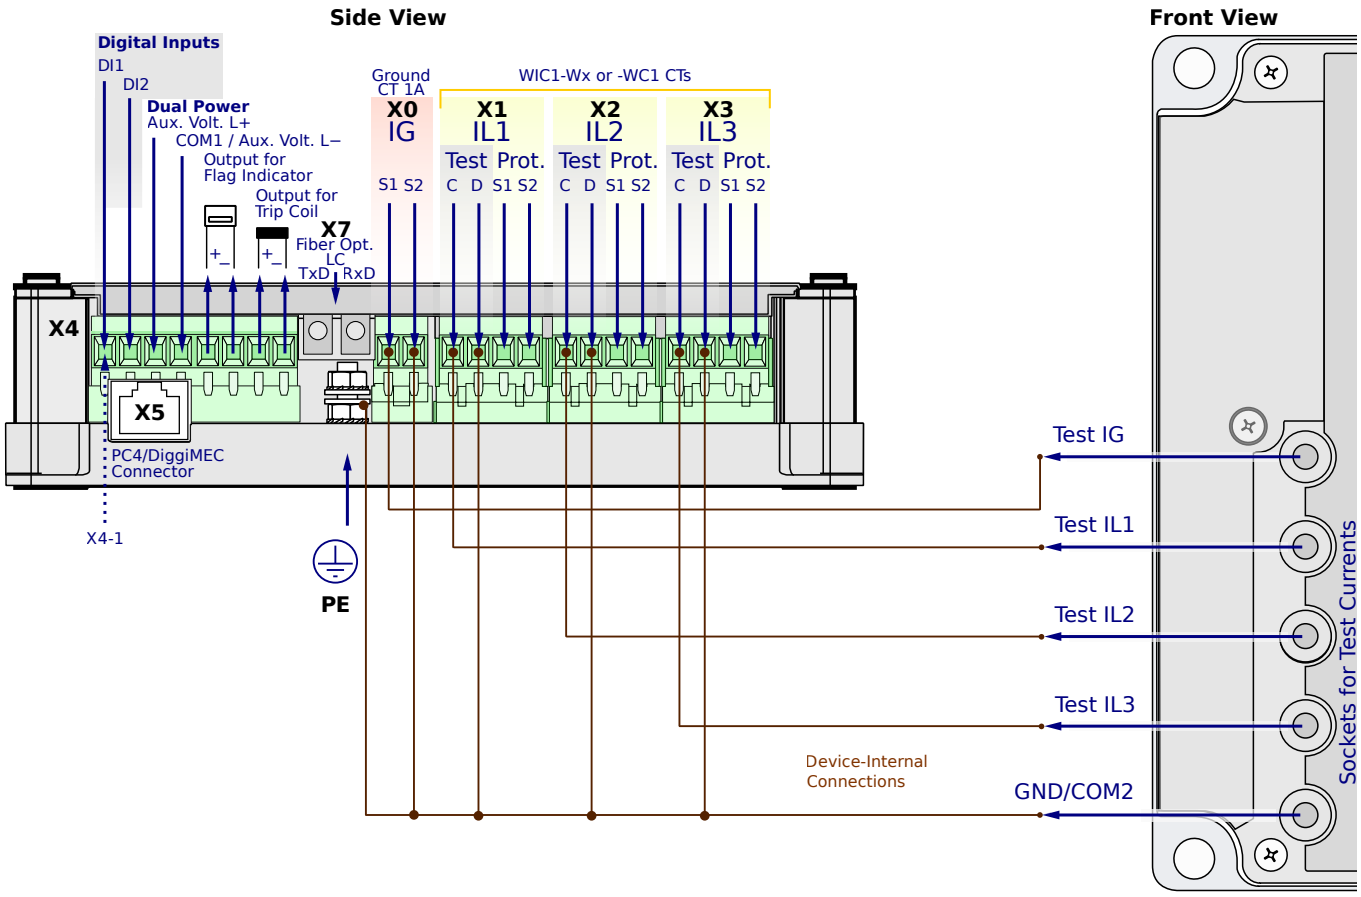


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2SA0

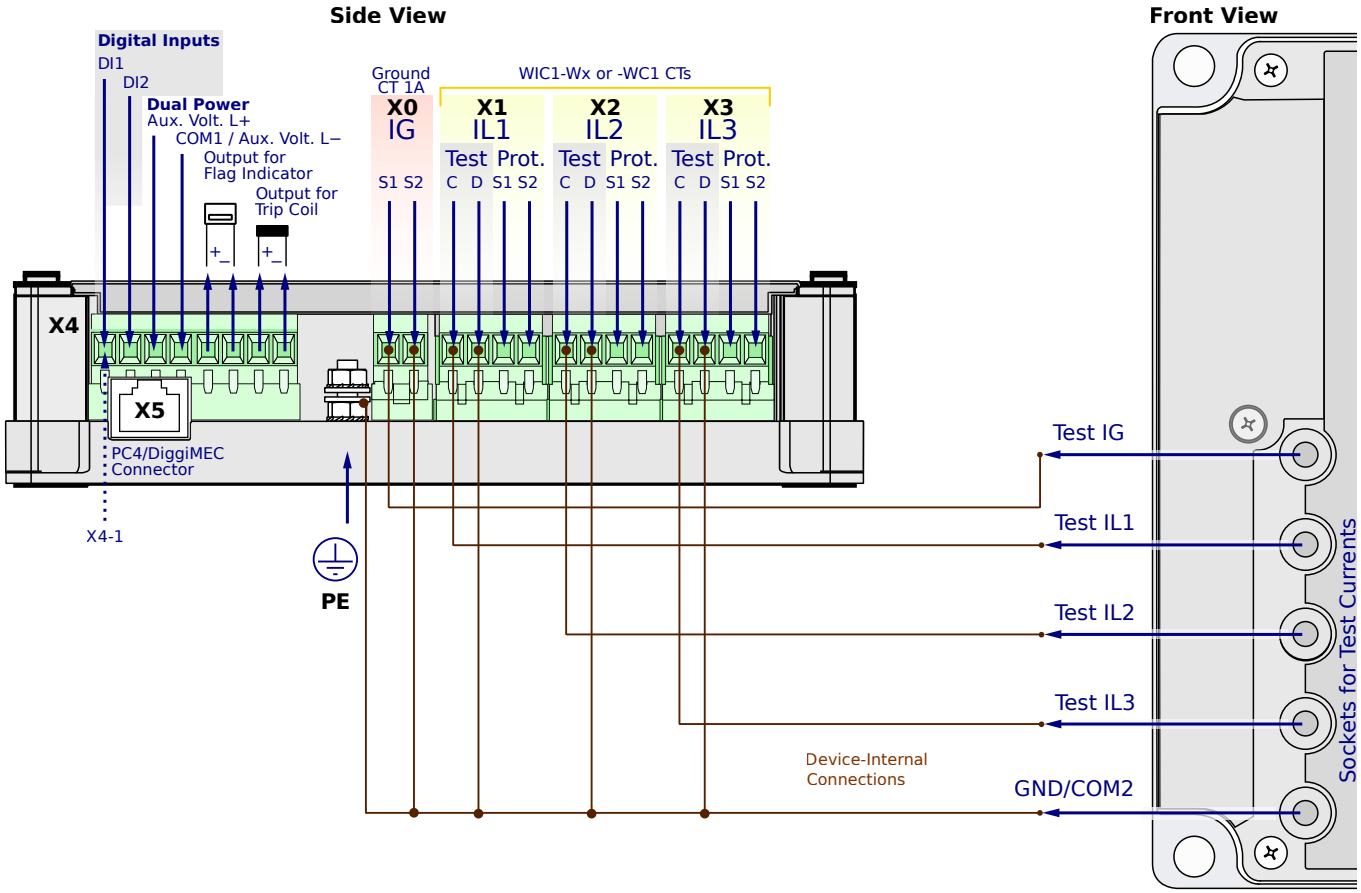


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2SAH

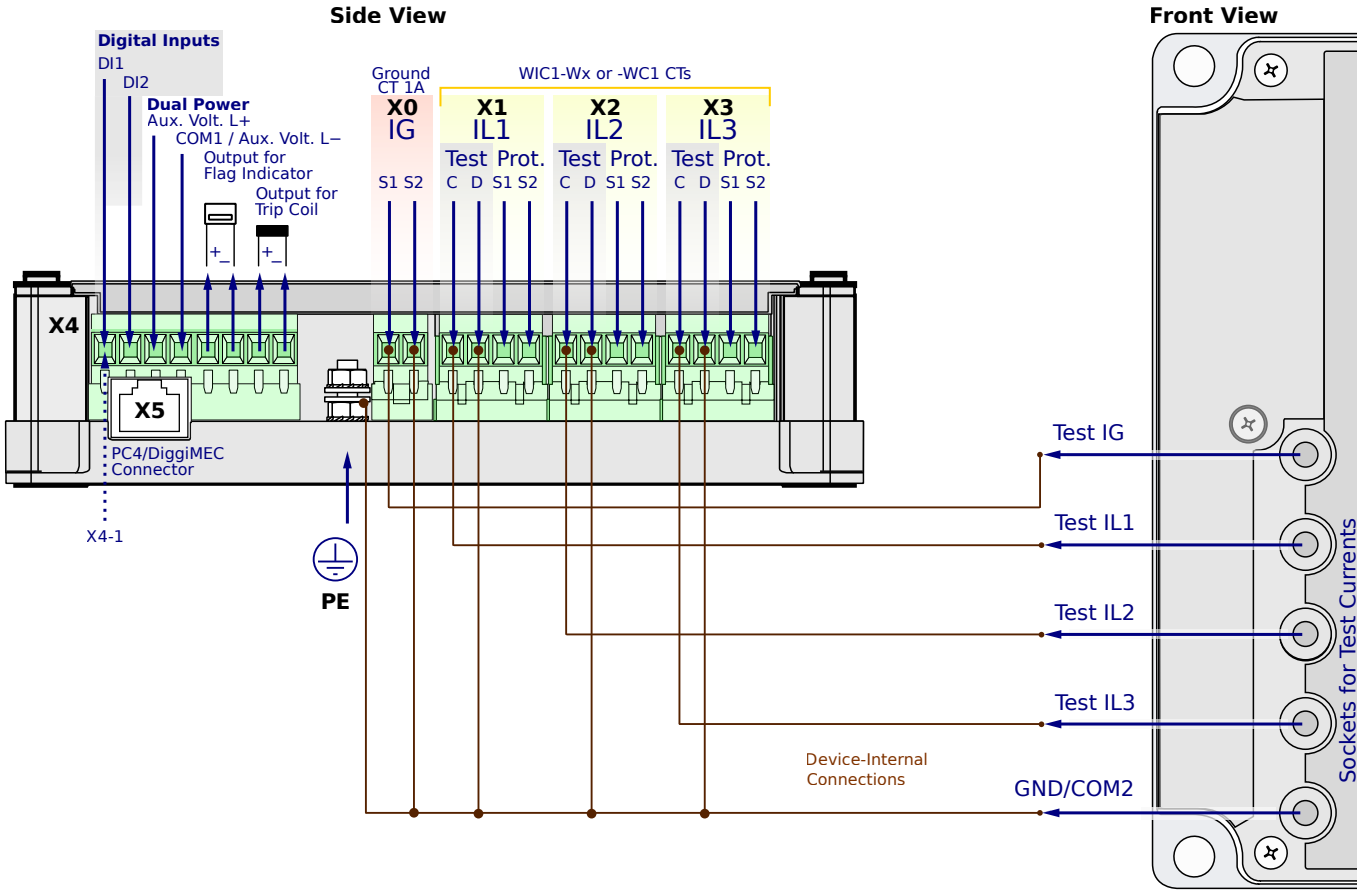


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2SB0

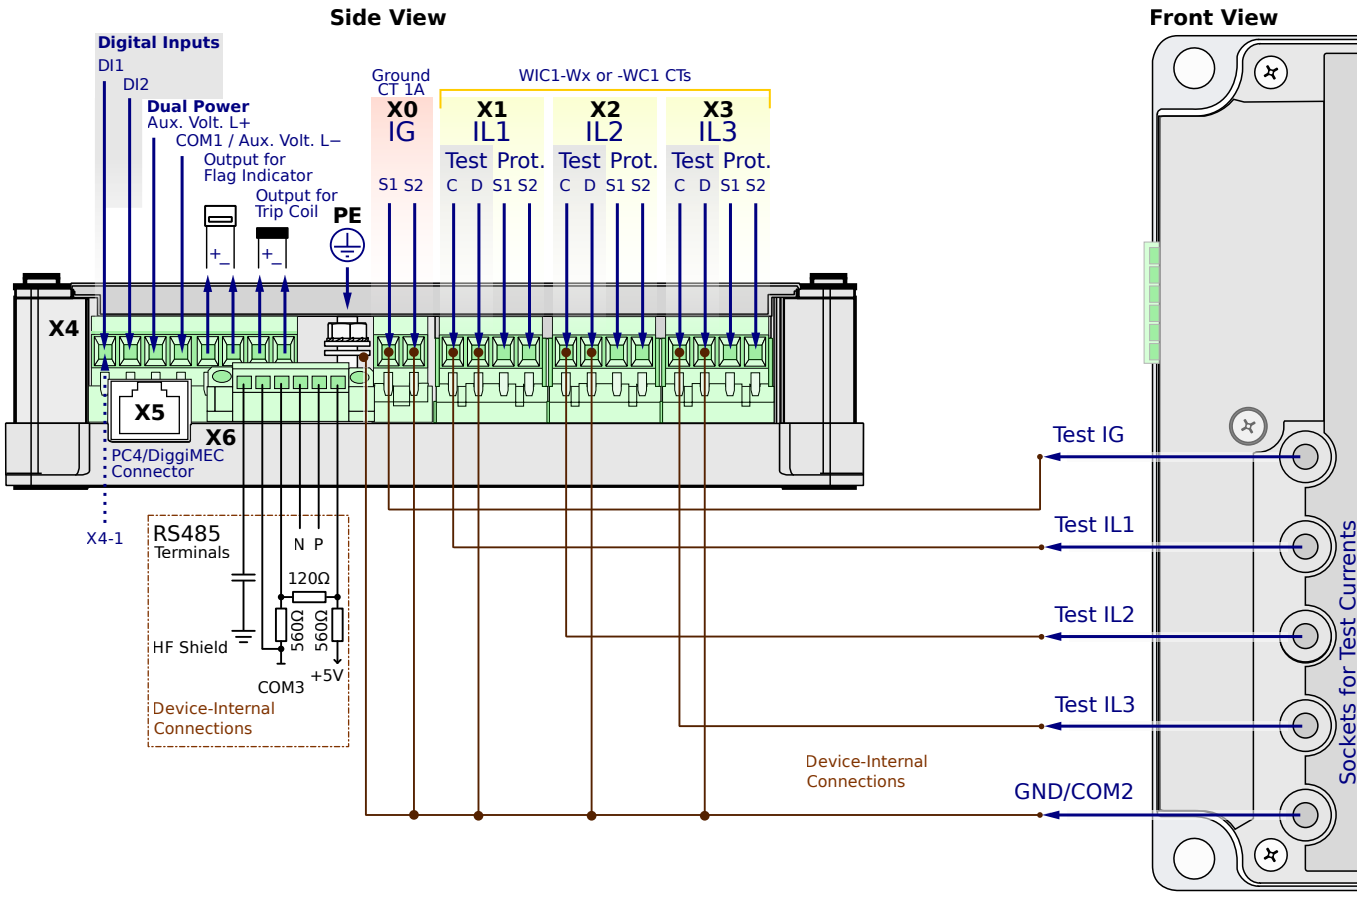


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2SBH

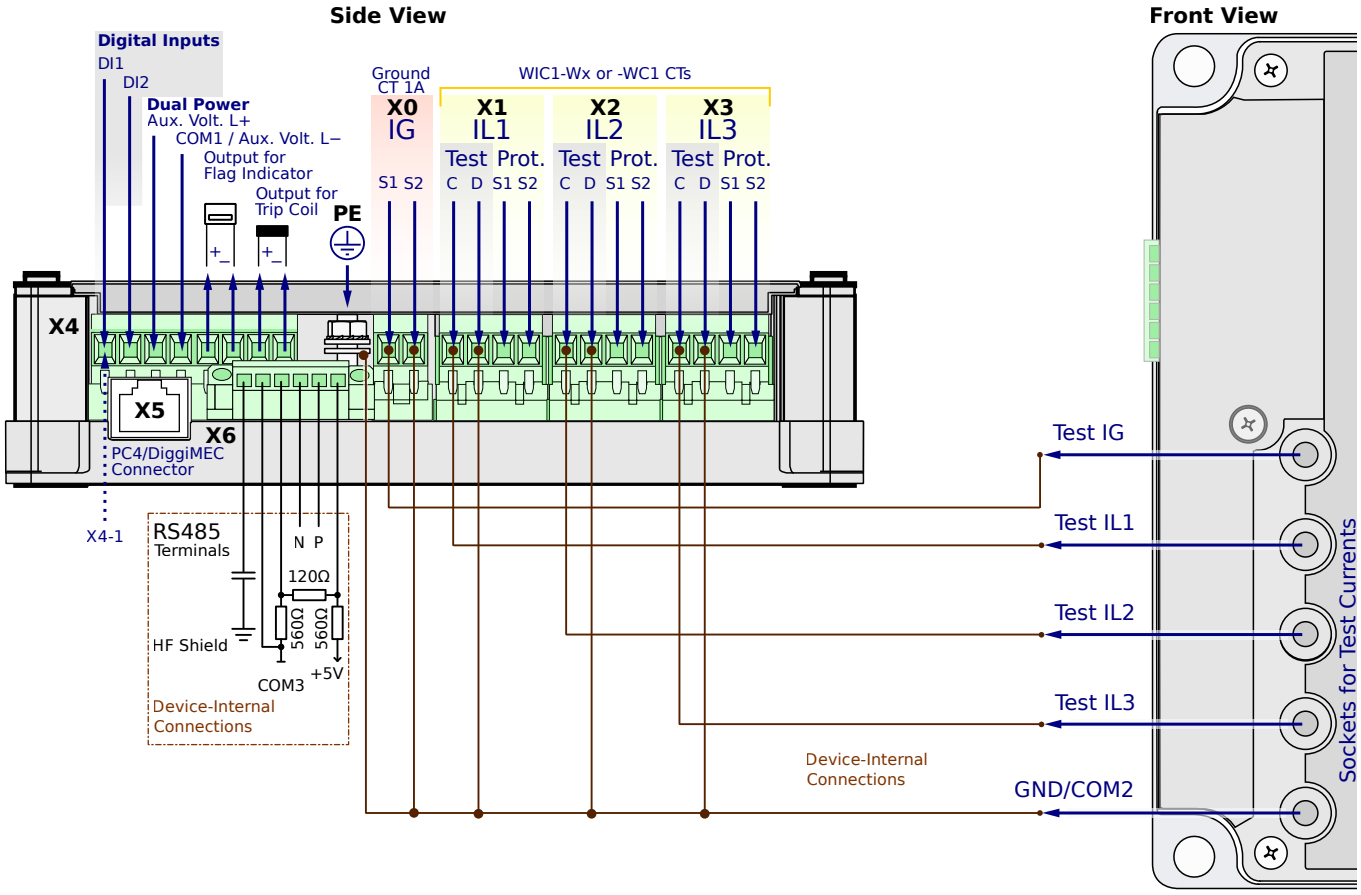


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2SC0

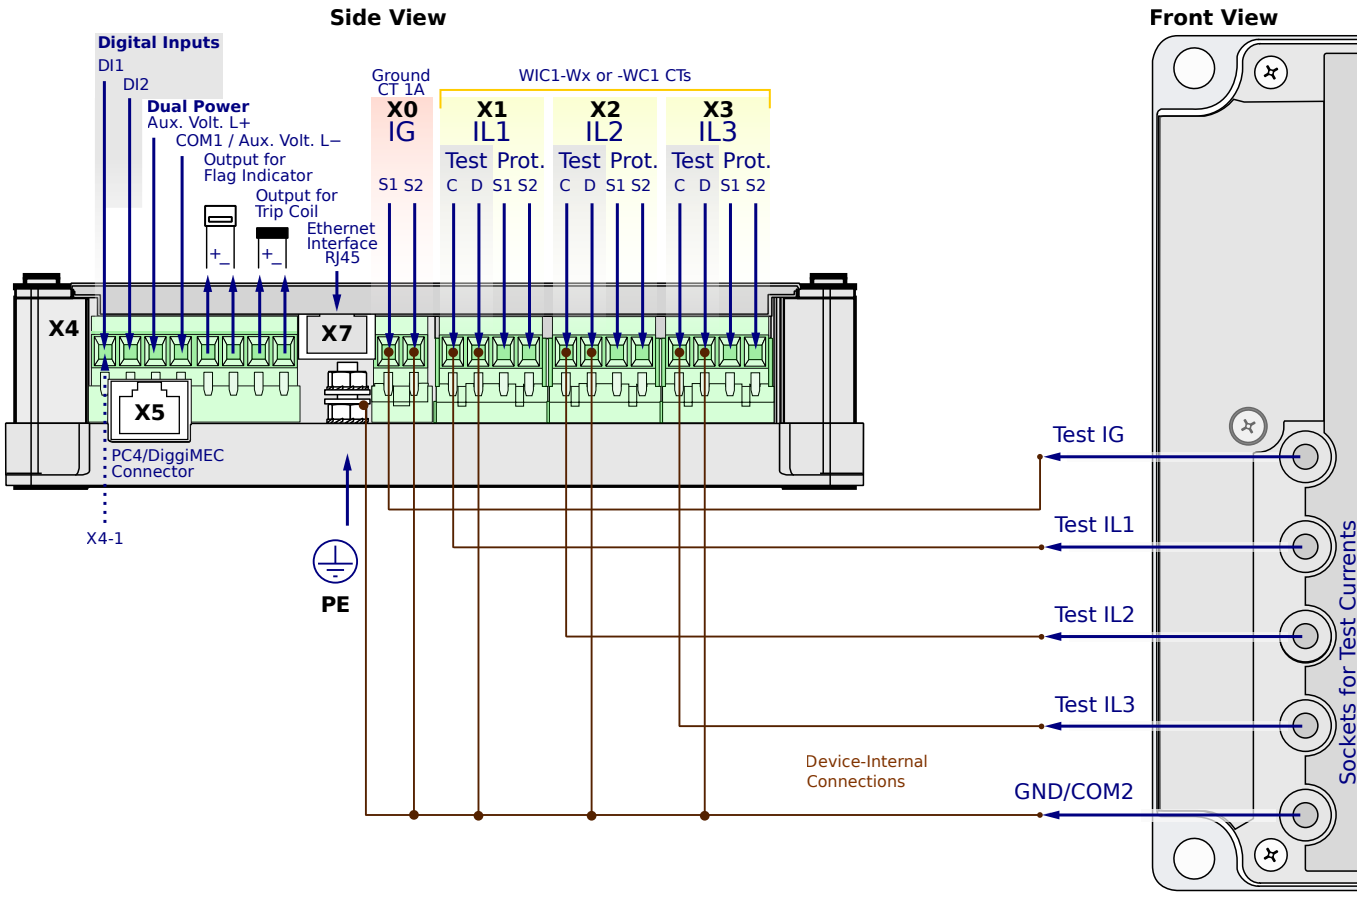


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2SCH

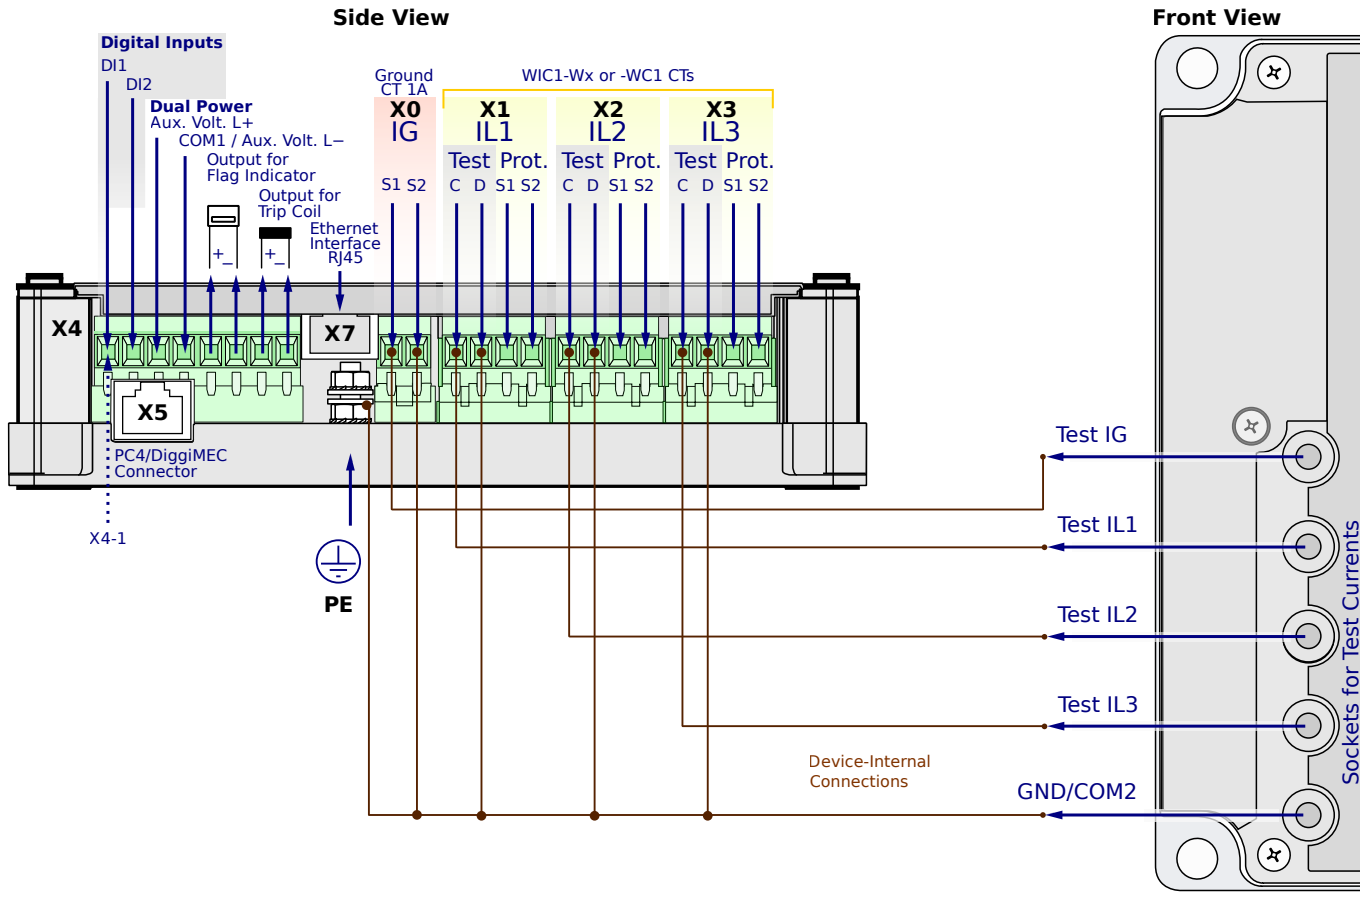


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2SL0

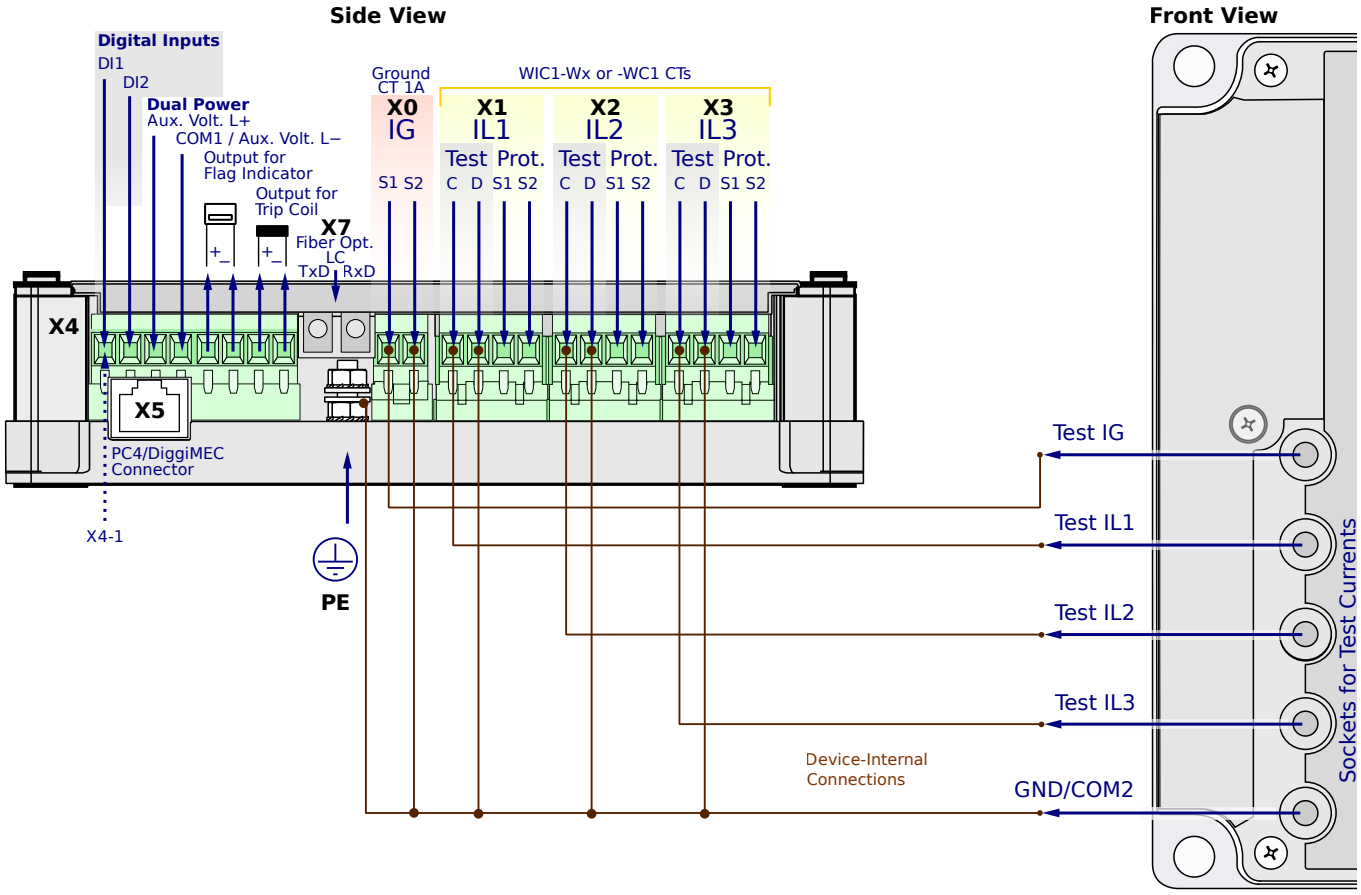


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2SLH

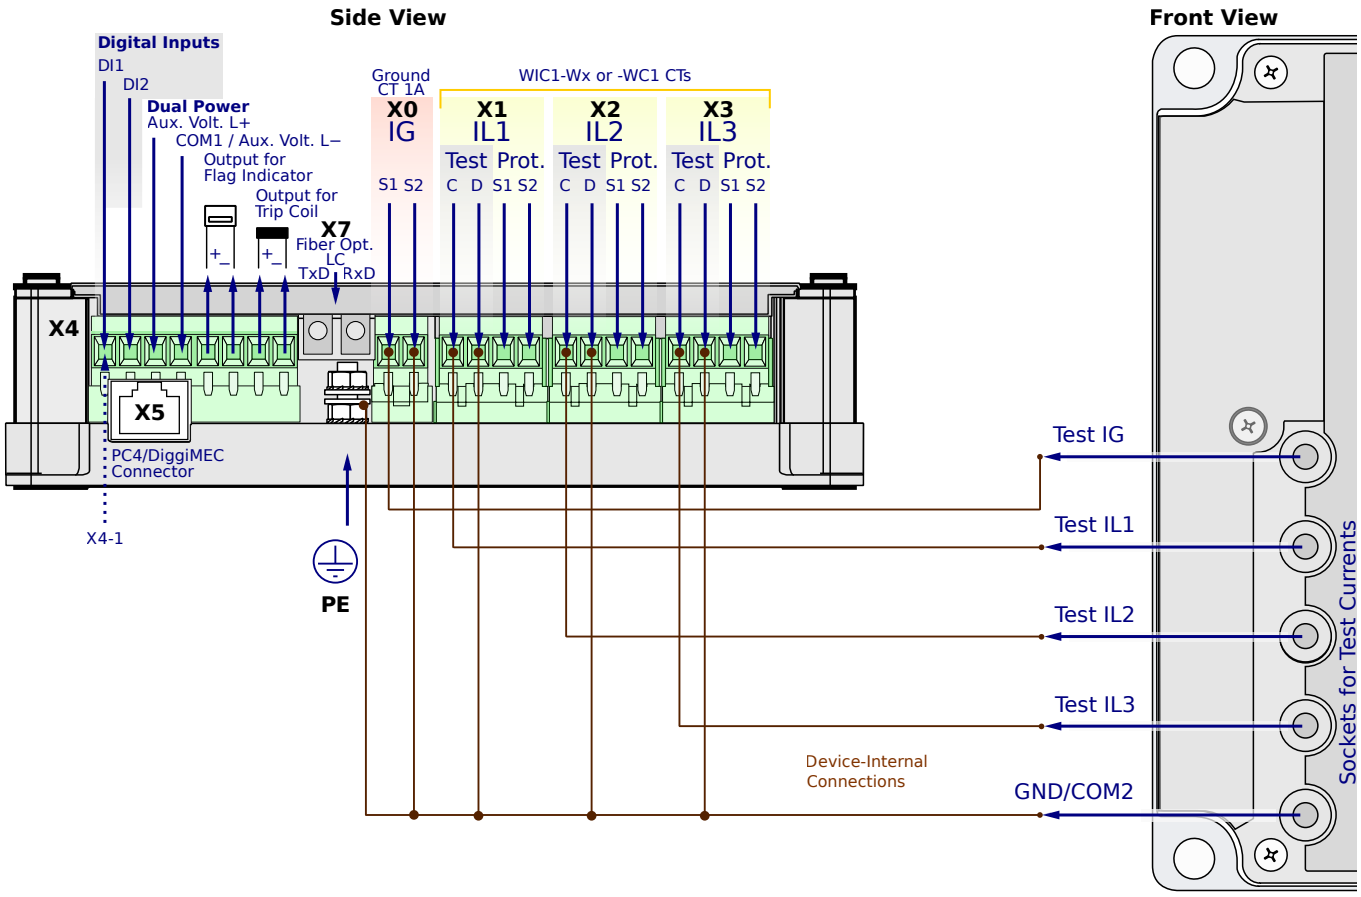


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2AA0

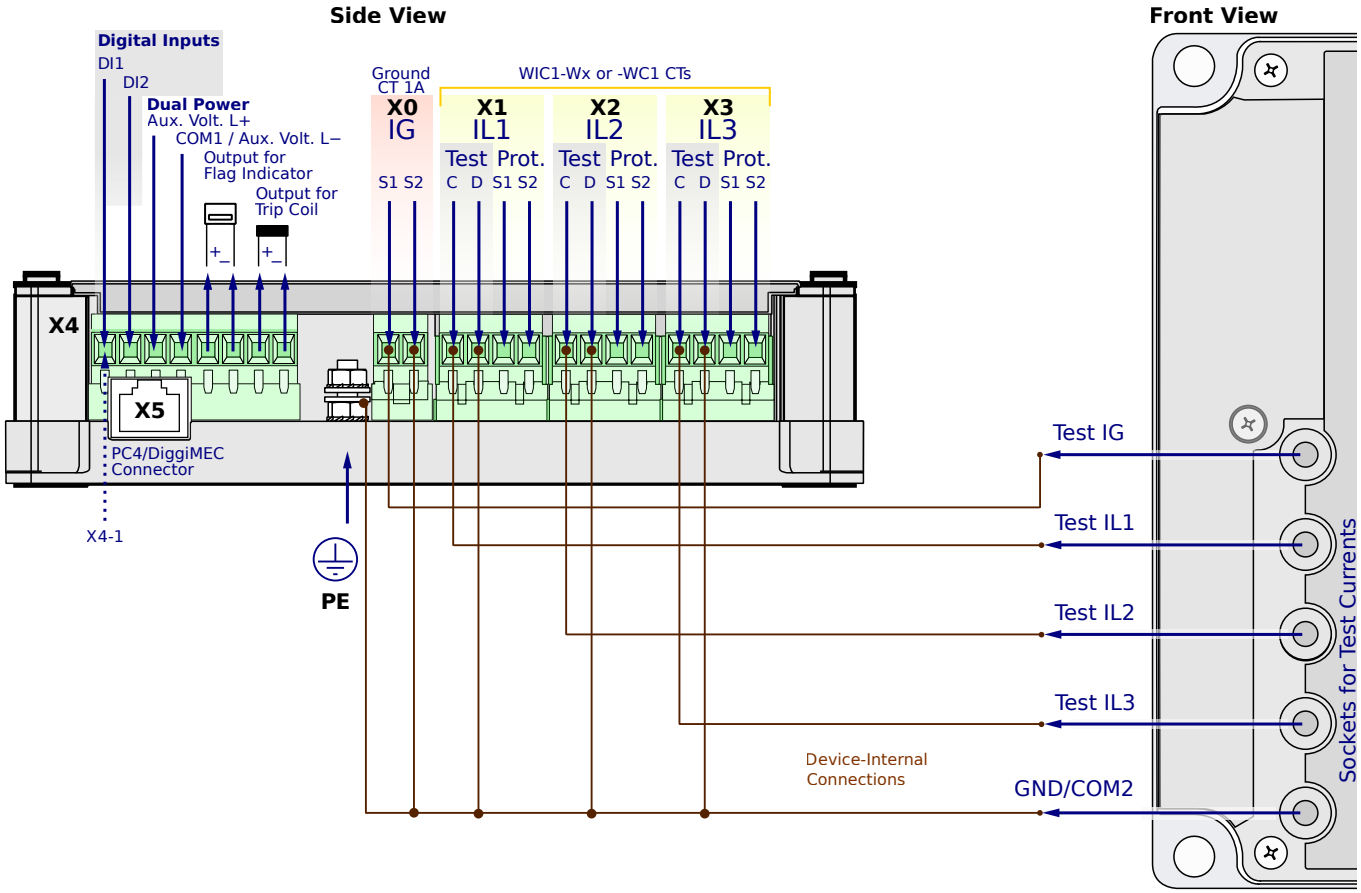


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2AAH

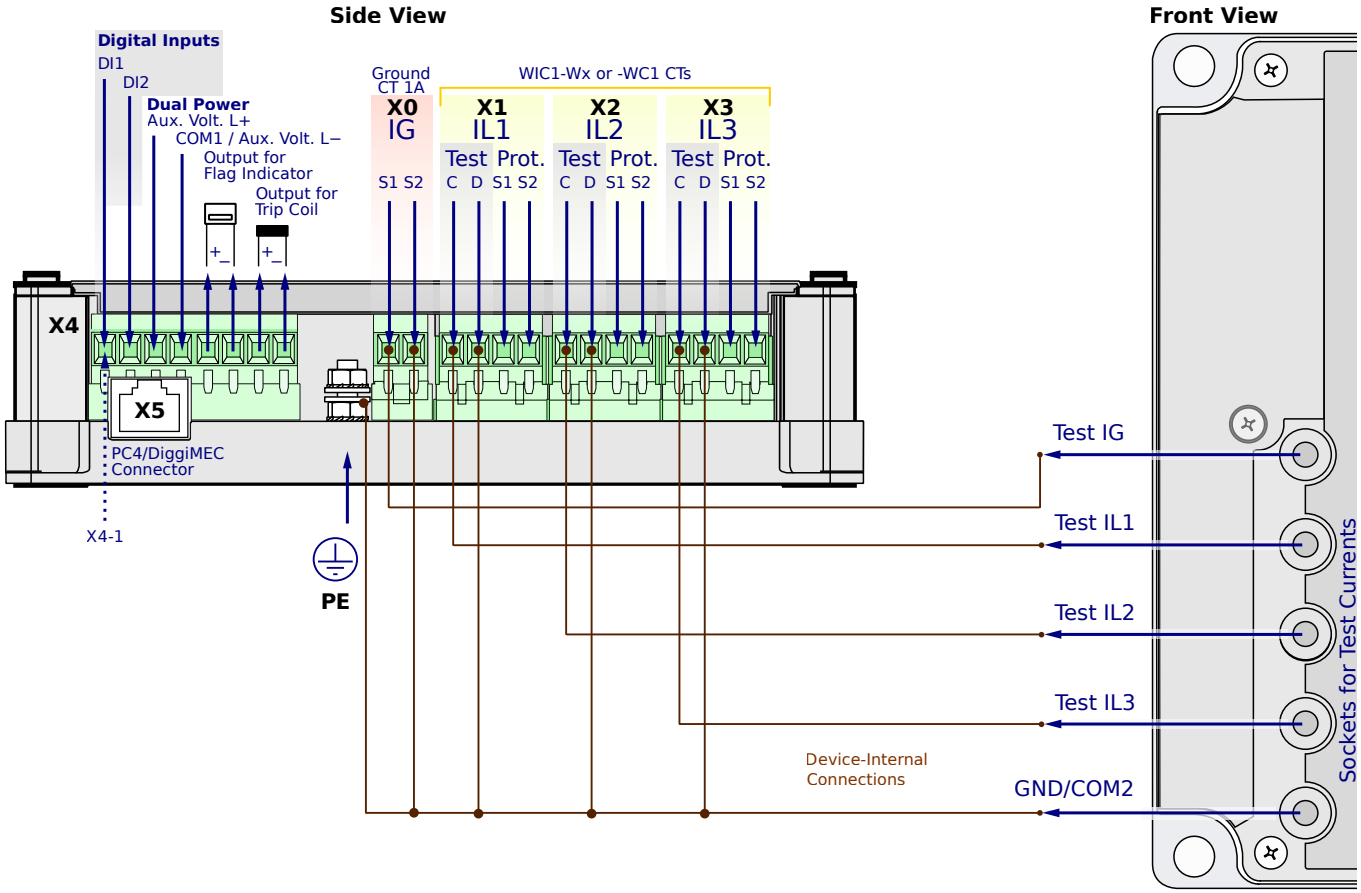


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2AB0

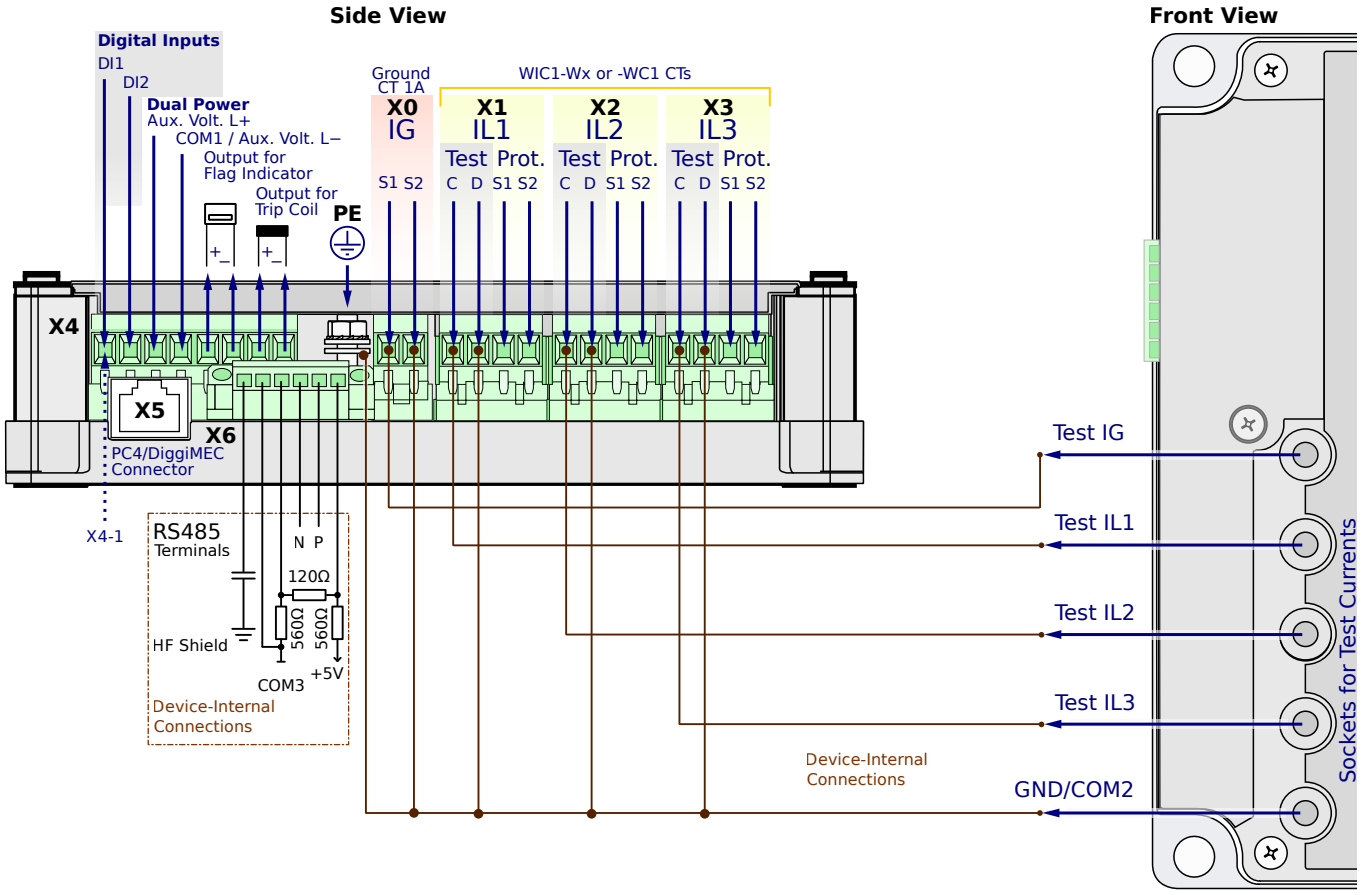


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2ABH

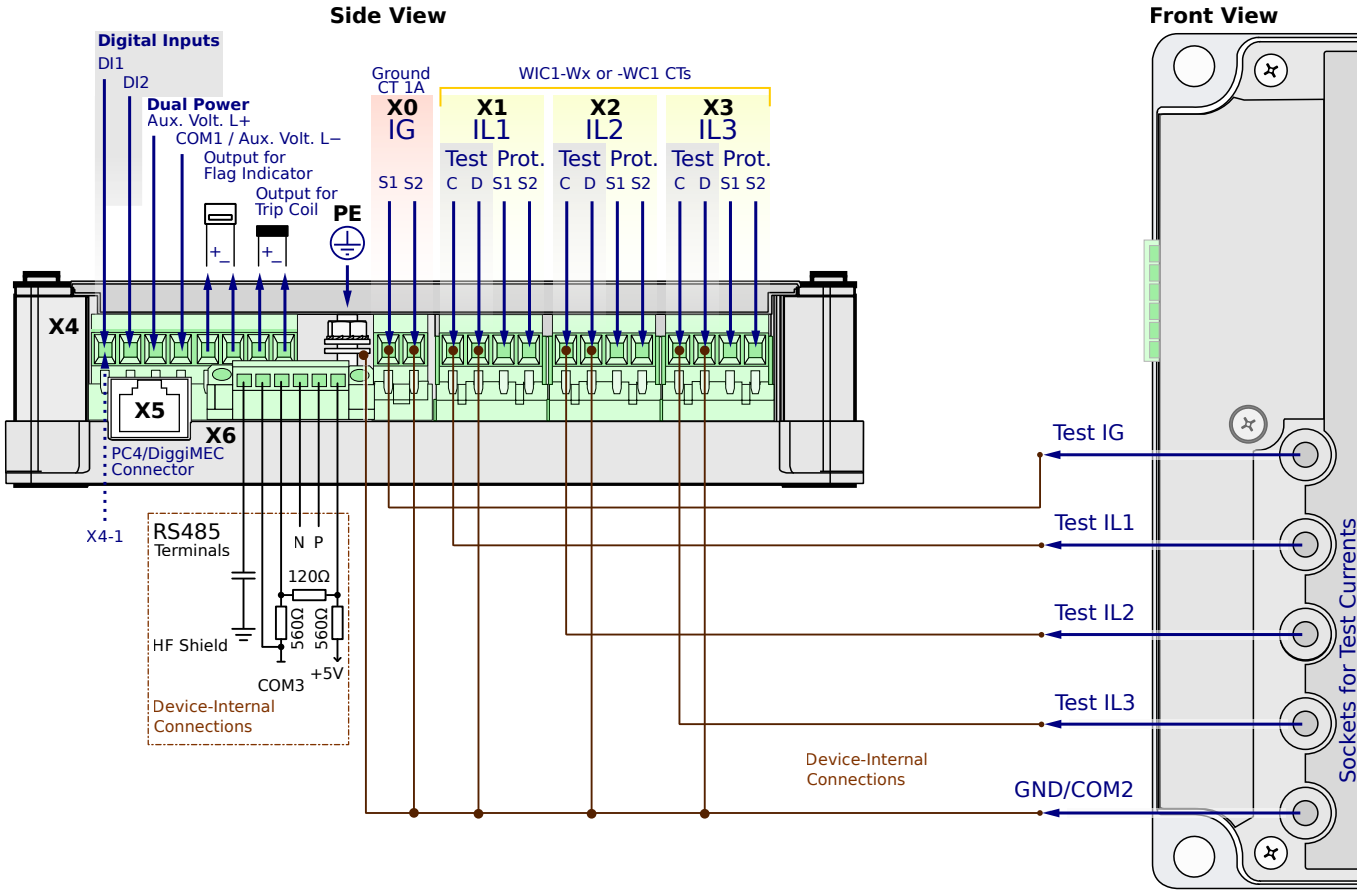


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2AC0

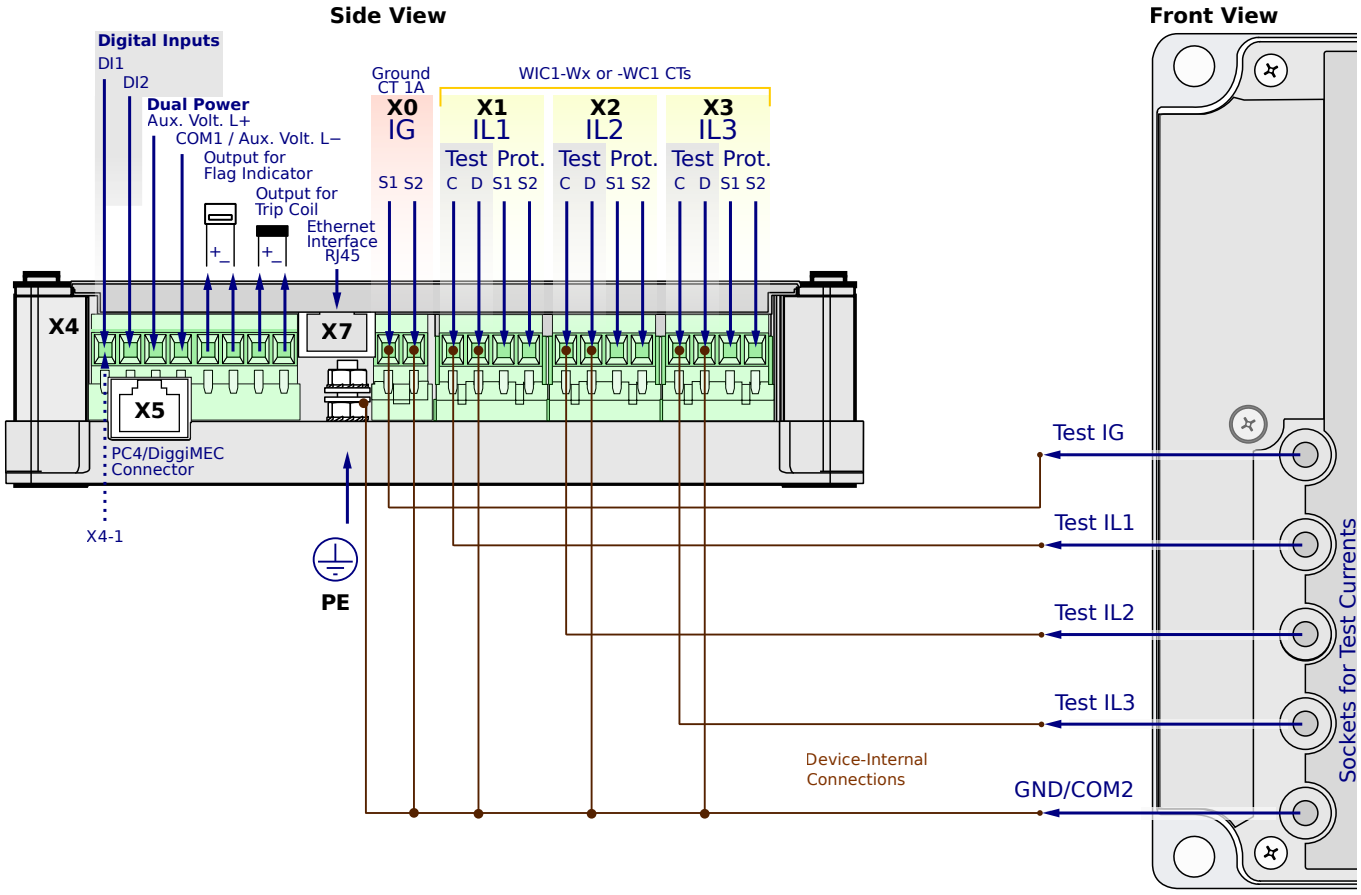


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2ACH

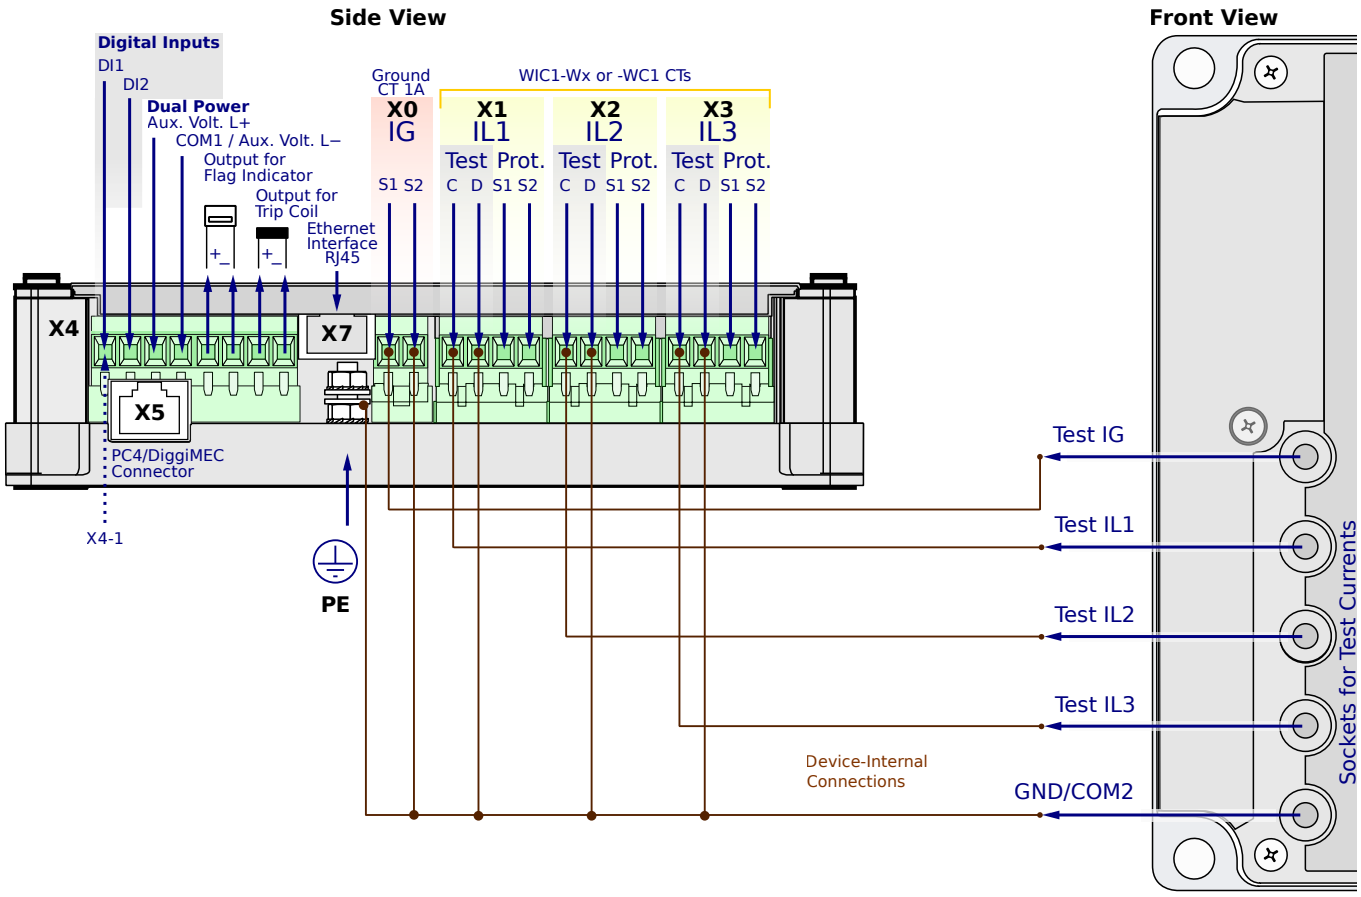


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2AL0

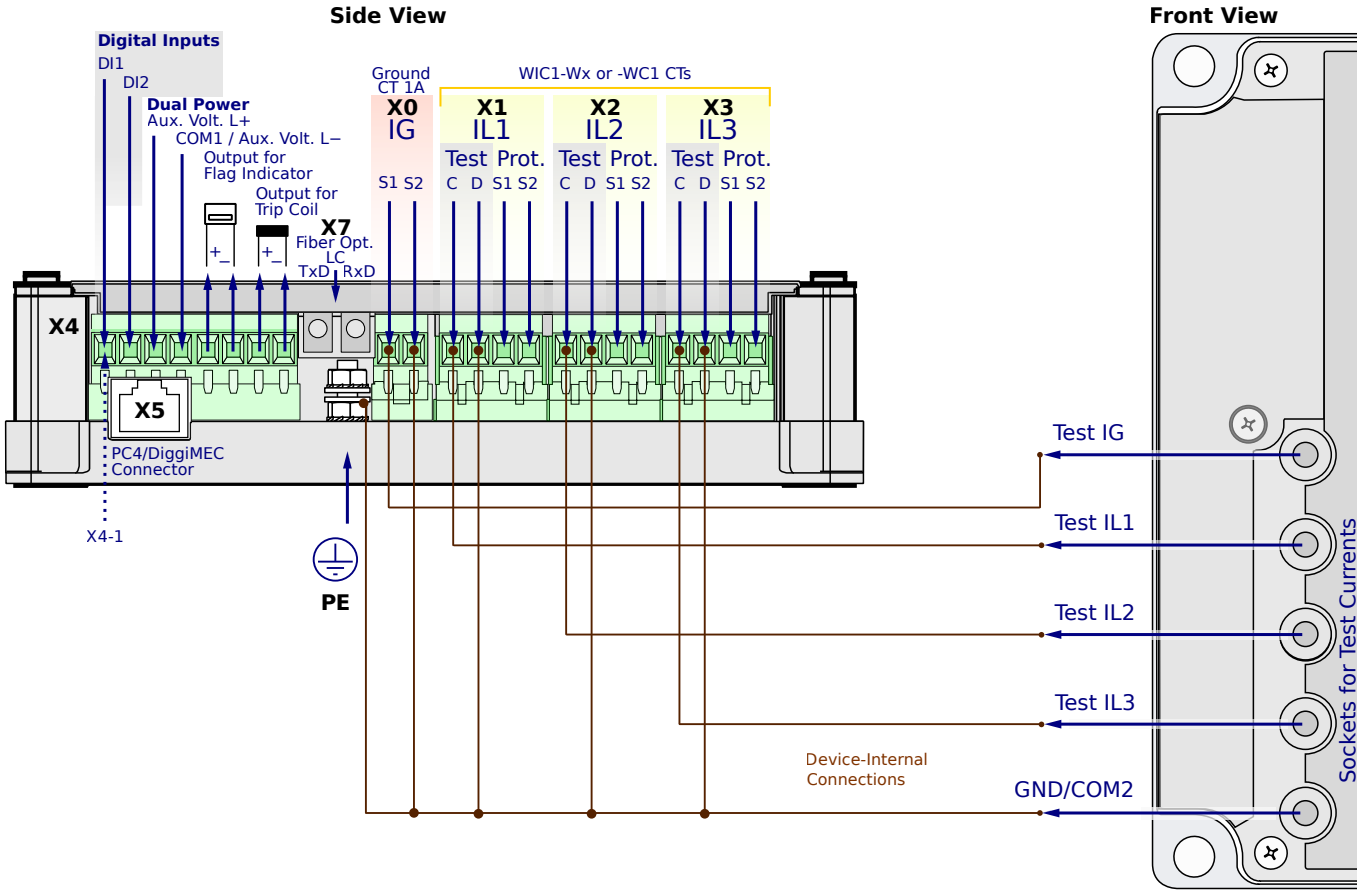


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2ALH

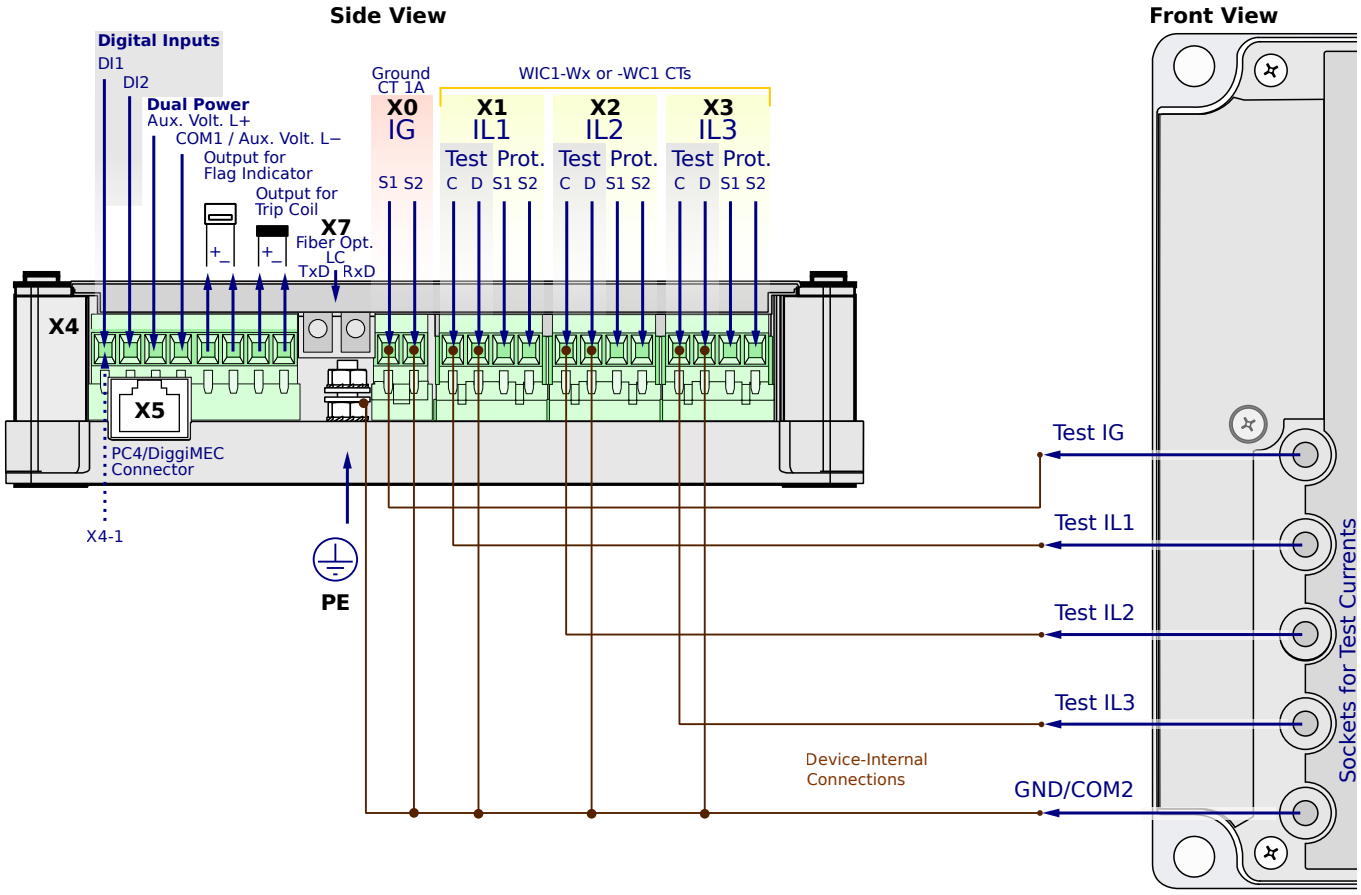


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2PA0

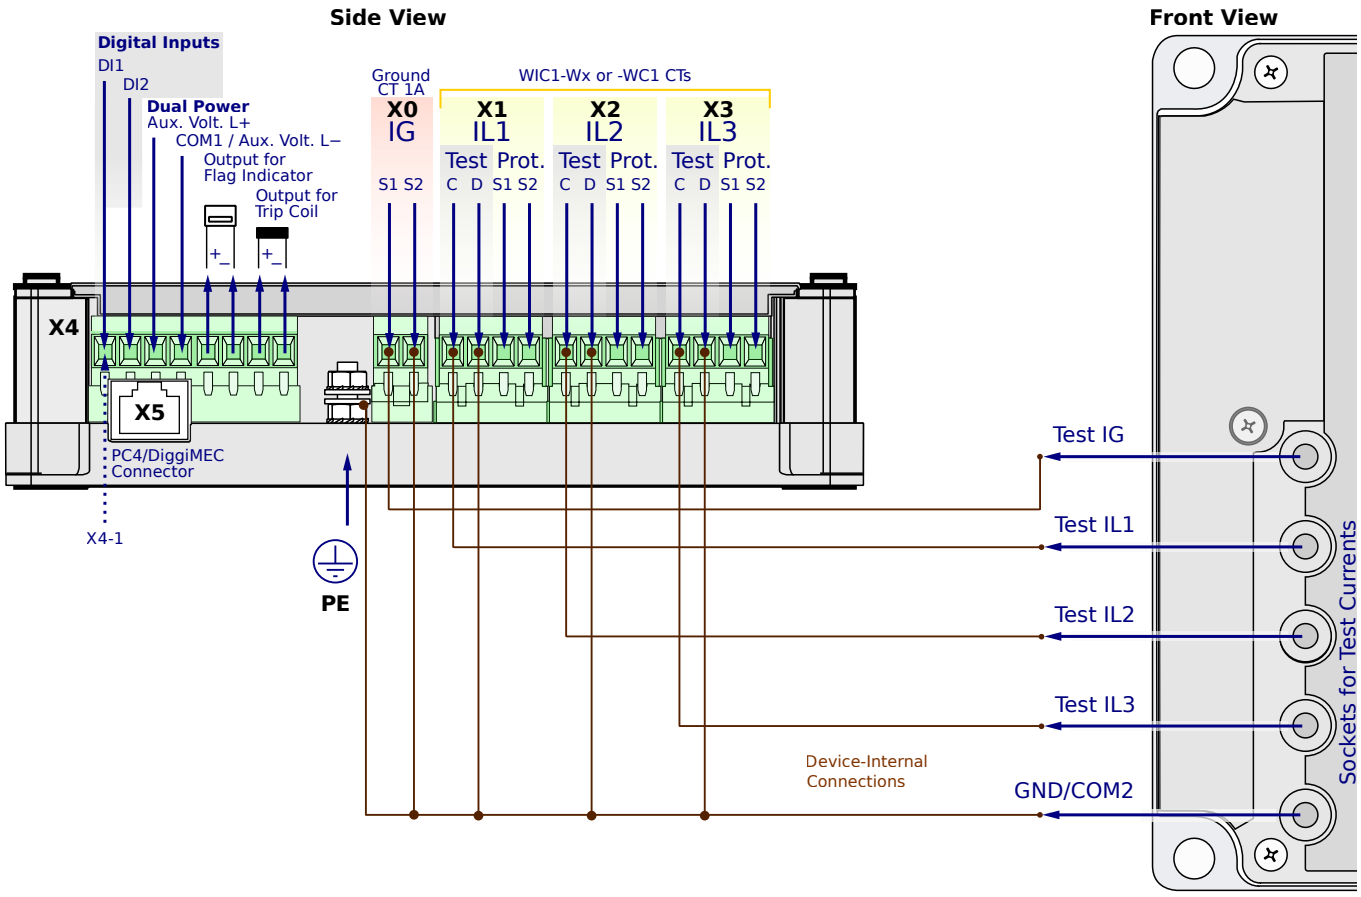


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2PAH

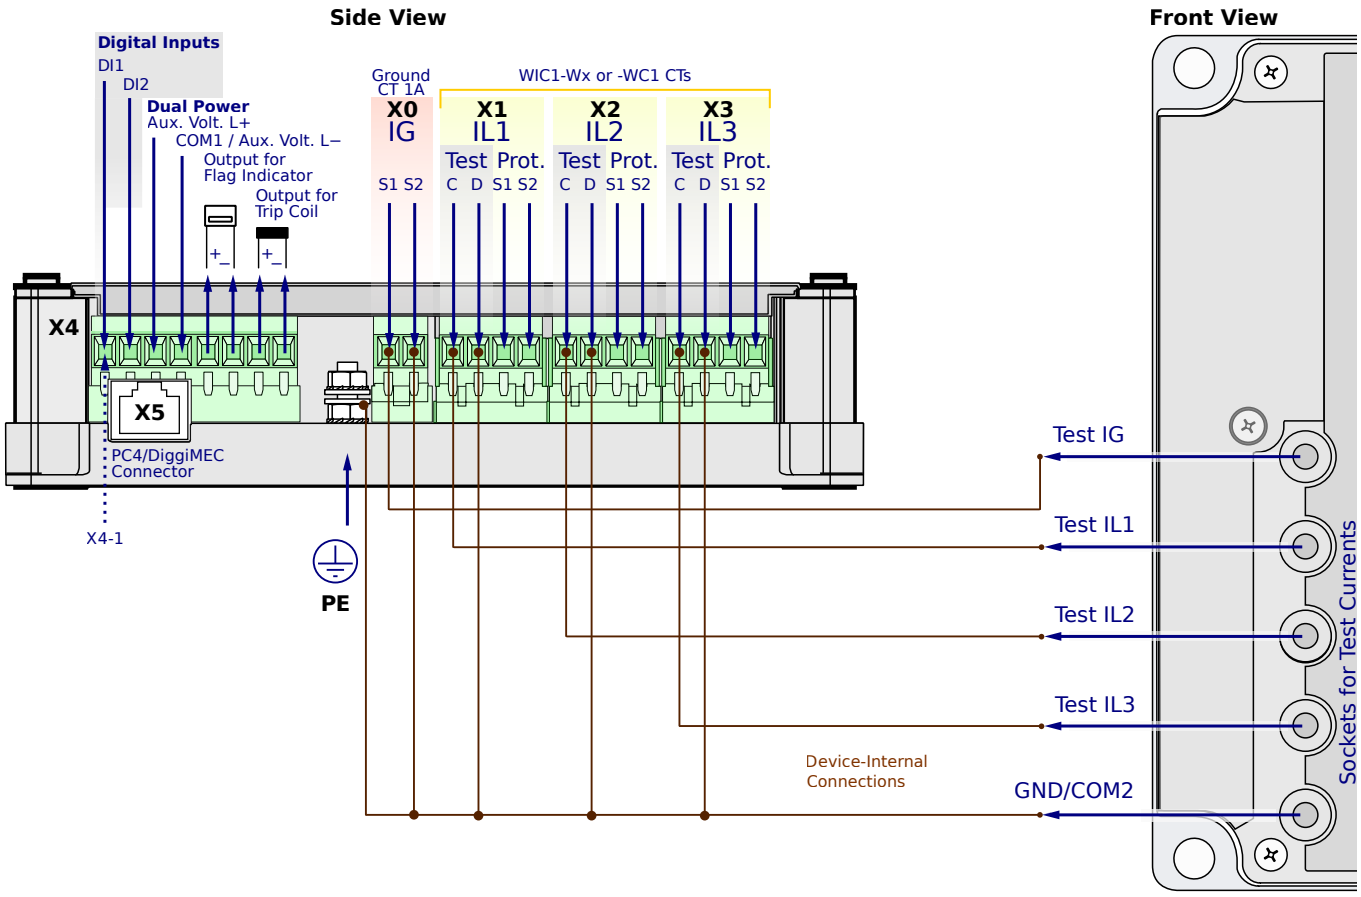


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SG0CD2PB0

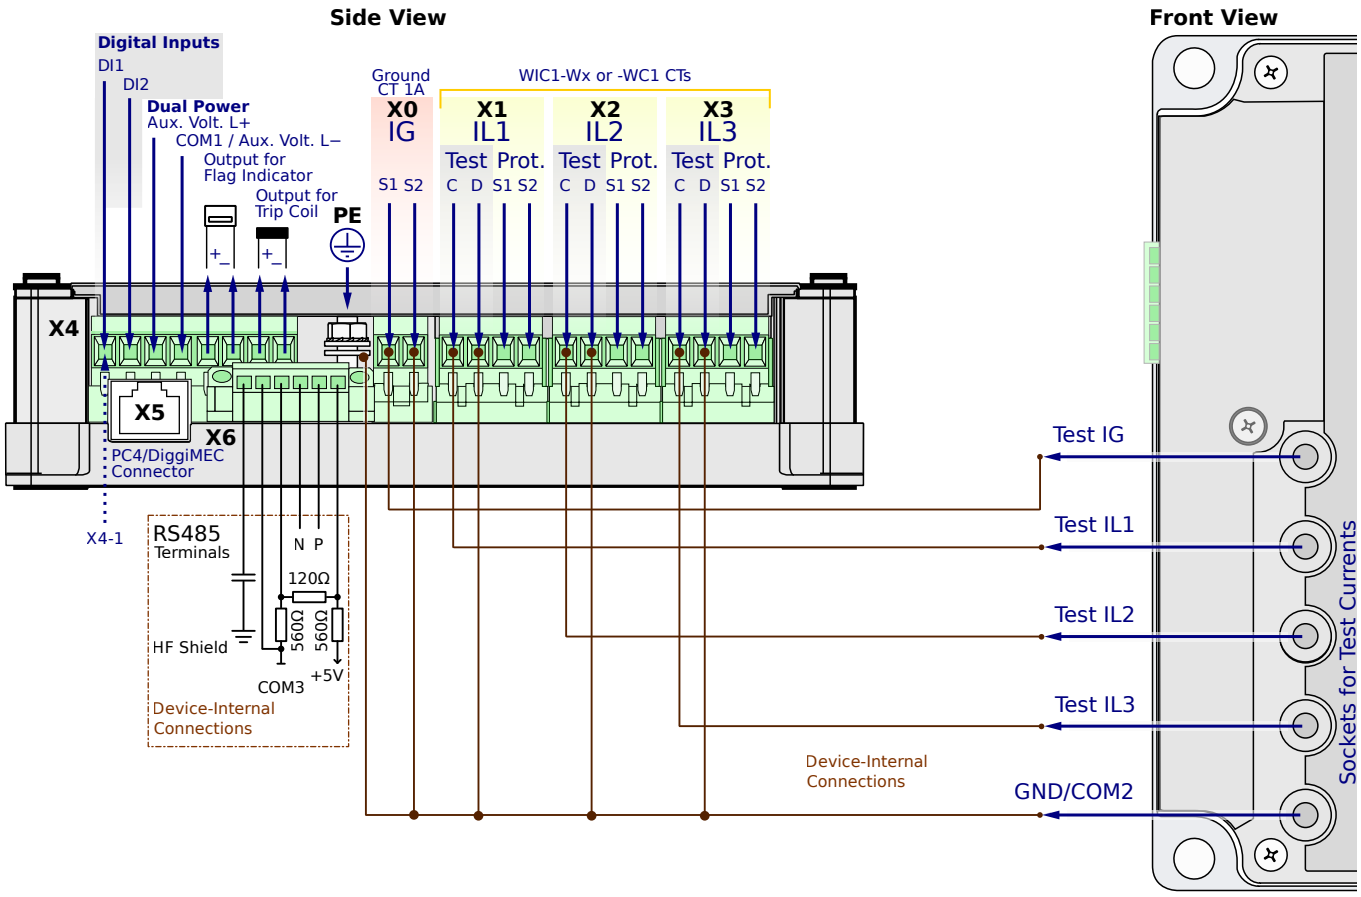


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2PBH

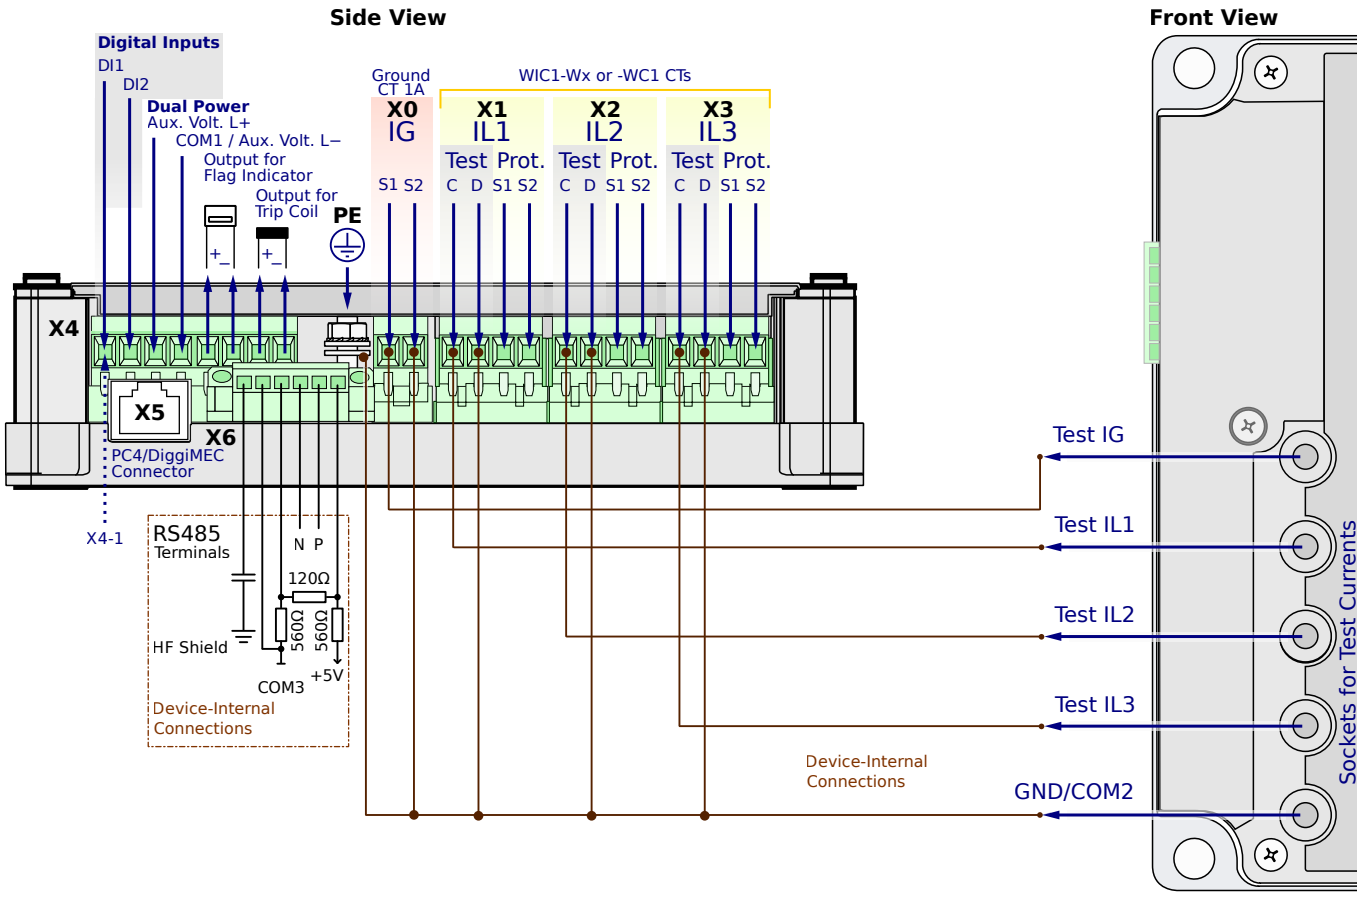


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SG0CD2PC0

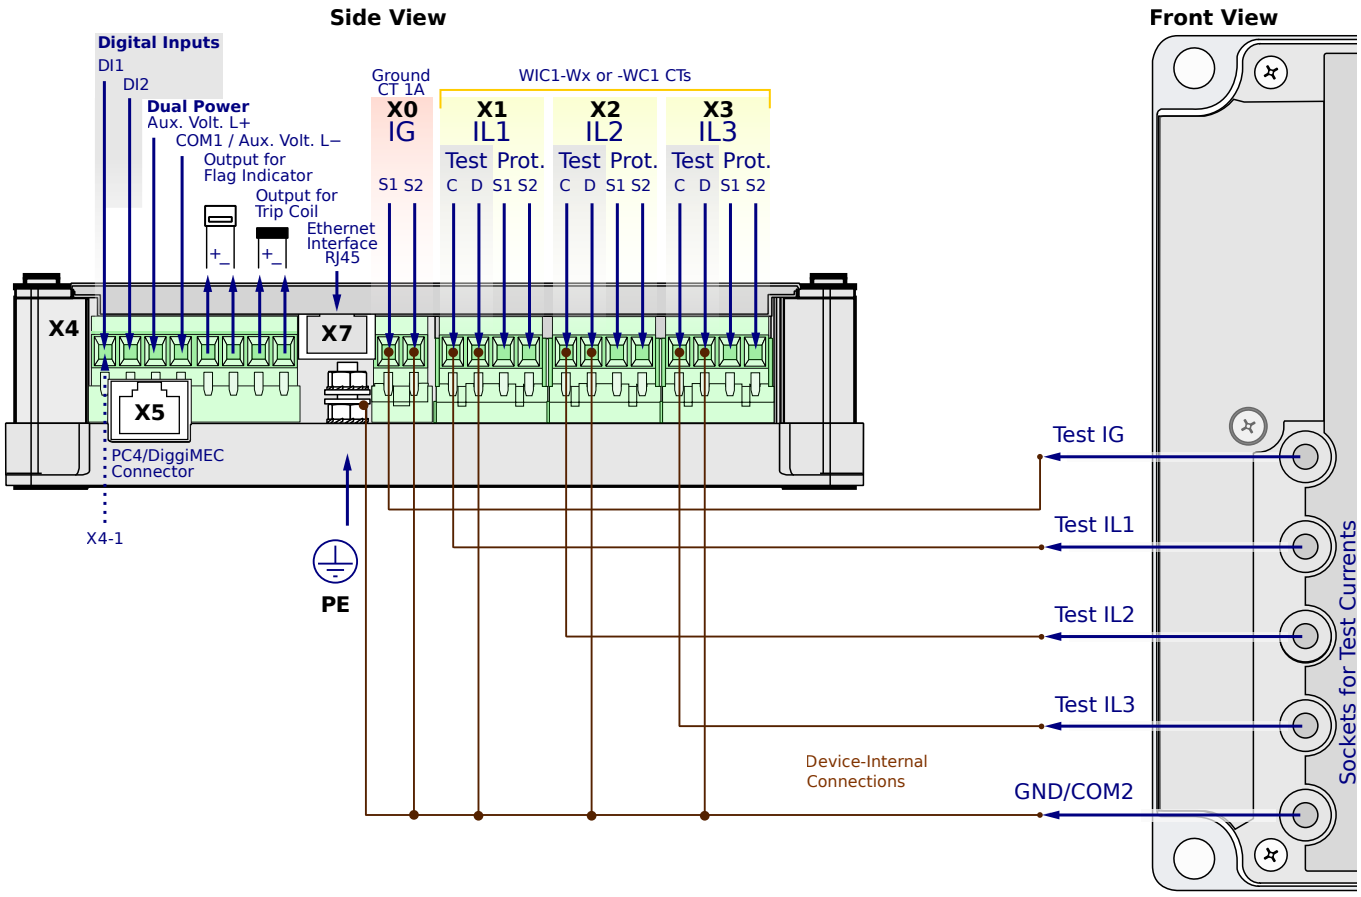


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2PCH

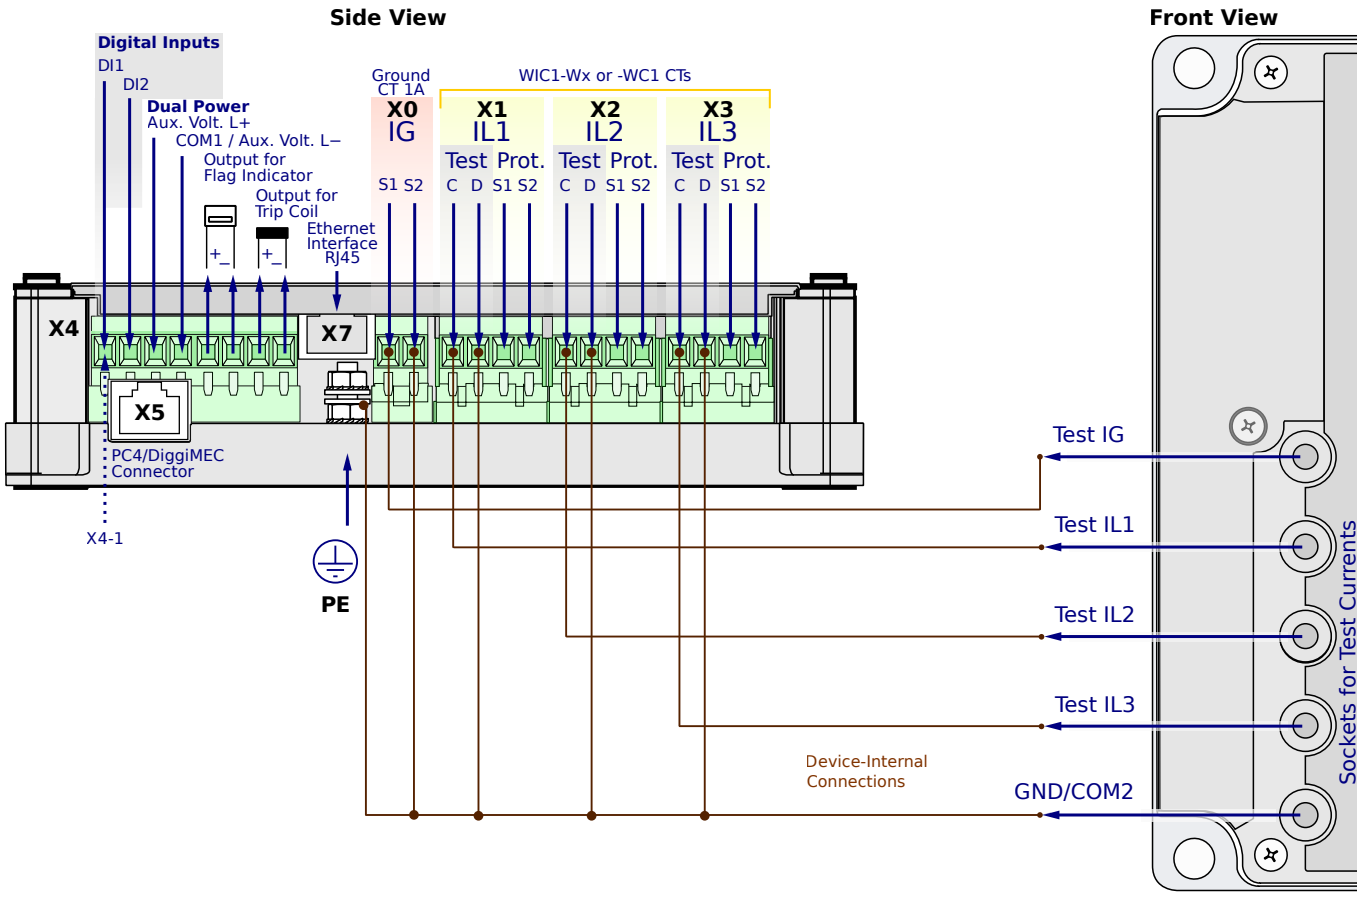


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SG0CD2PL0

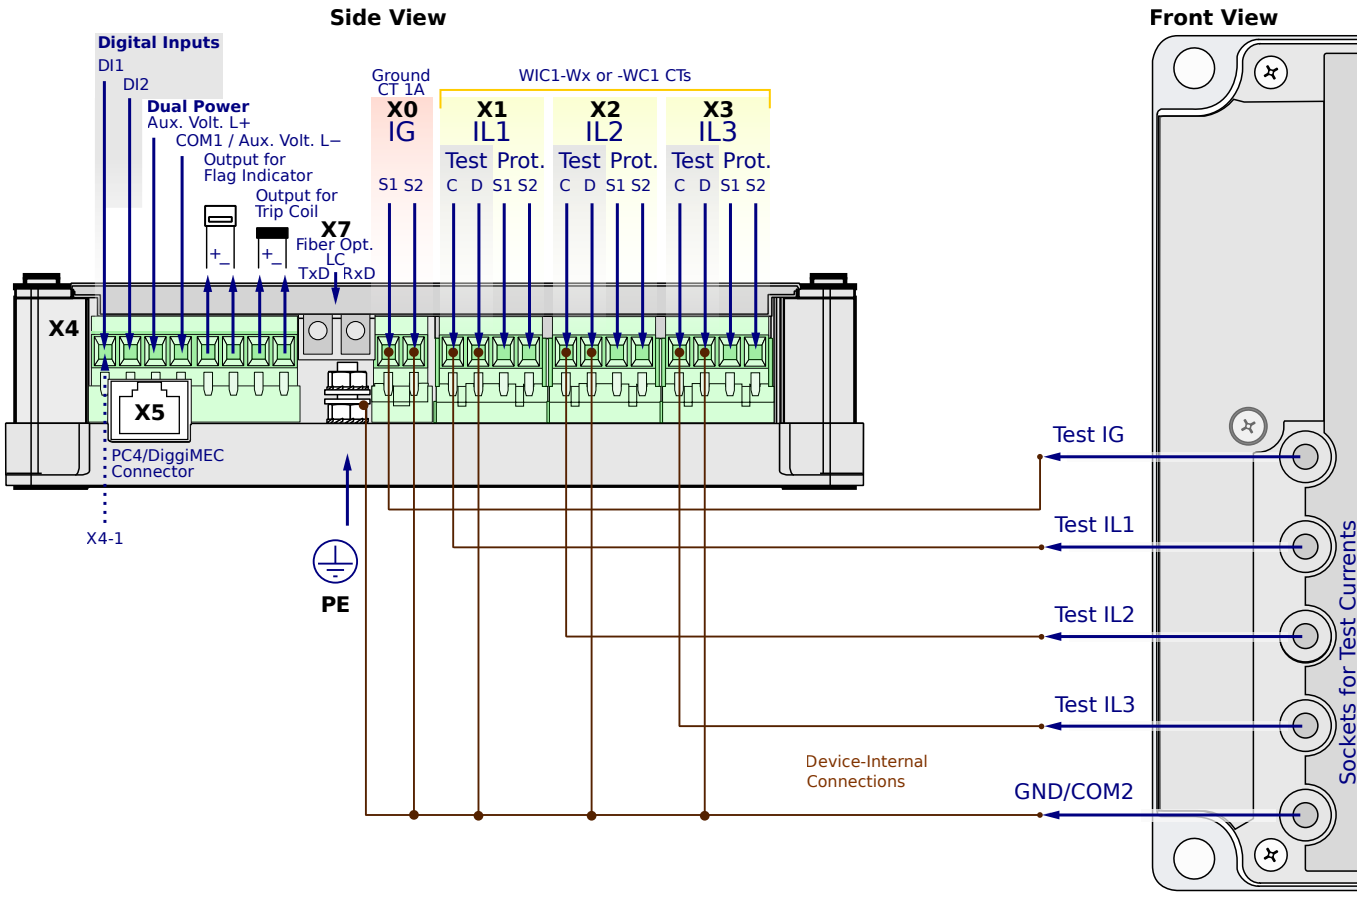


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SG0CD2PLH

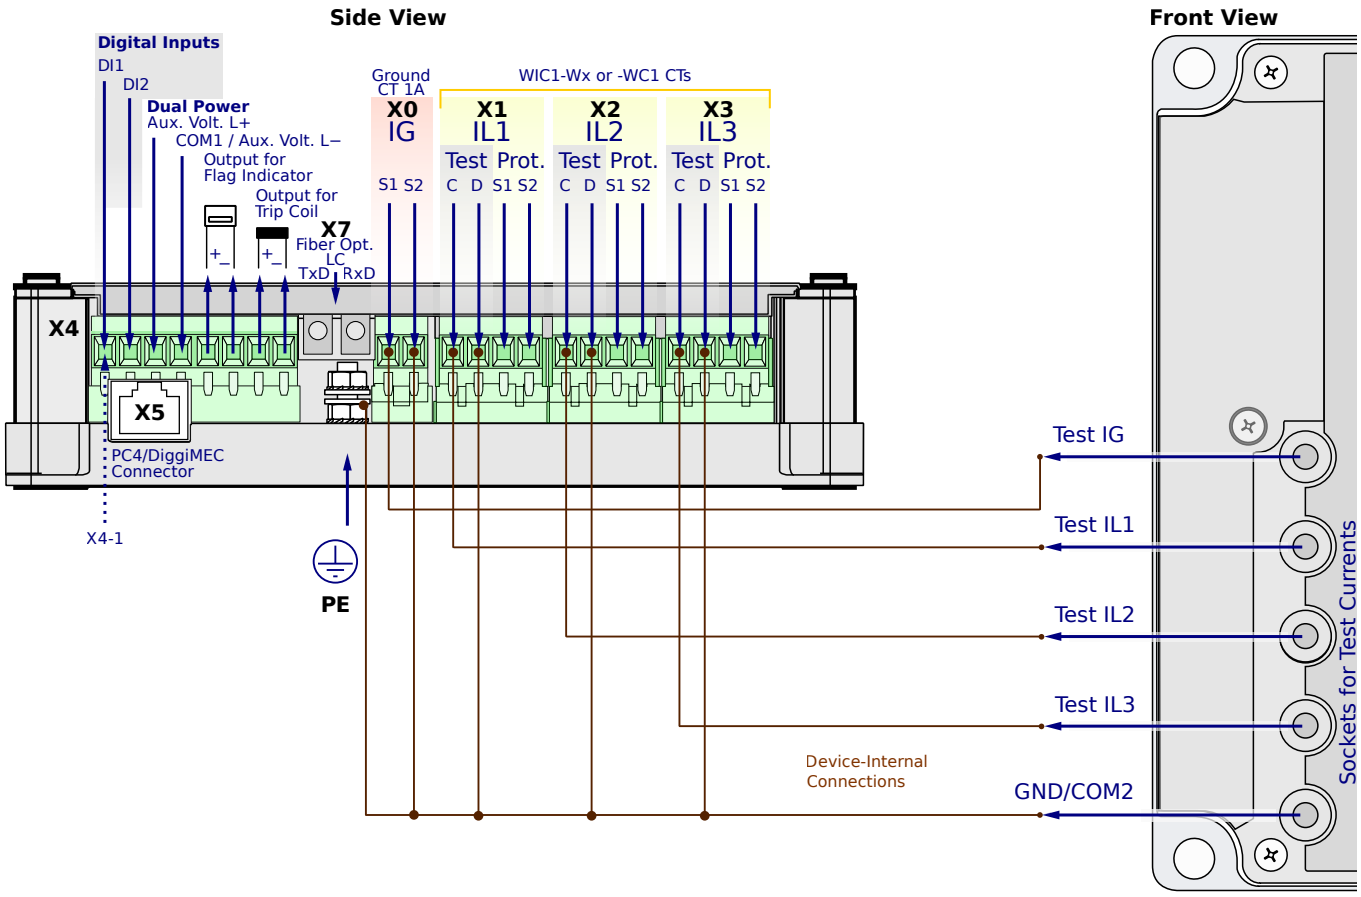


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0SA0

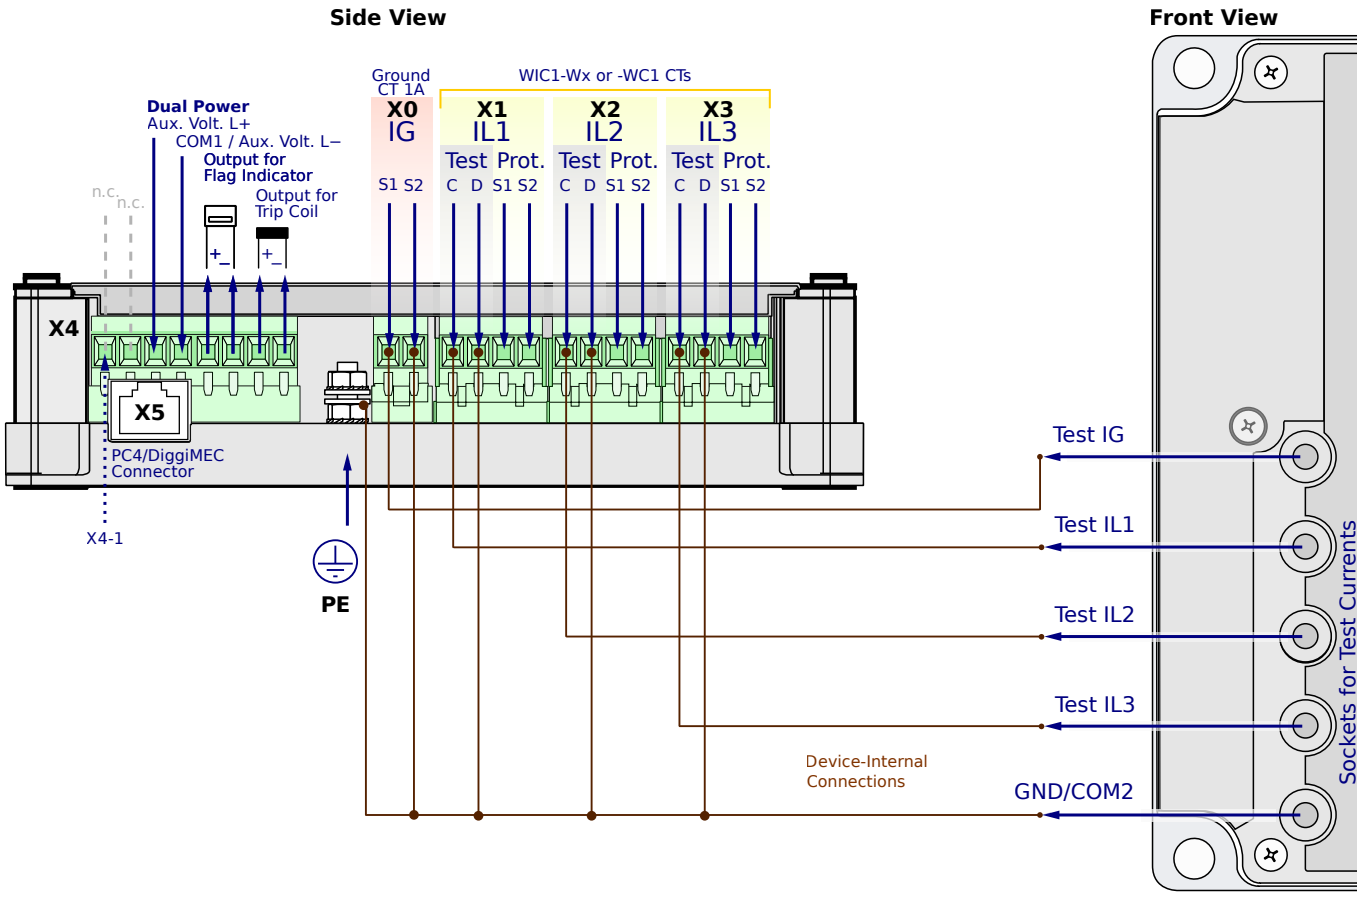


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0SAH

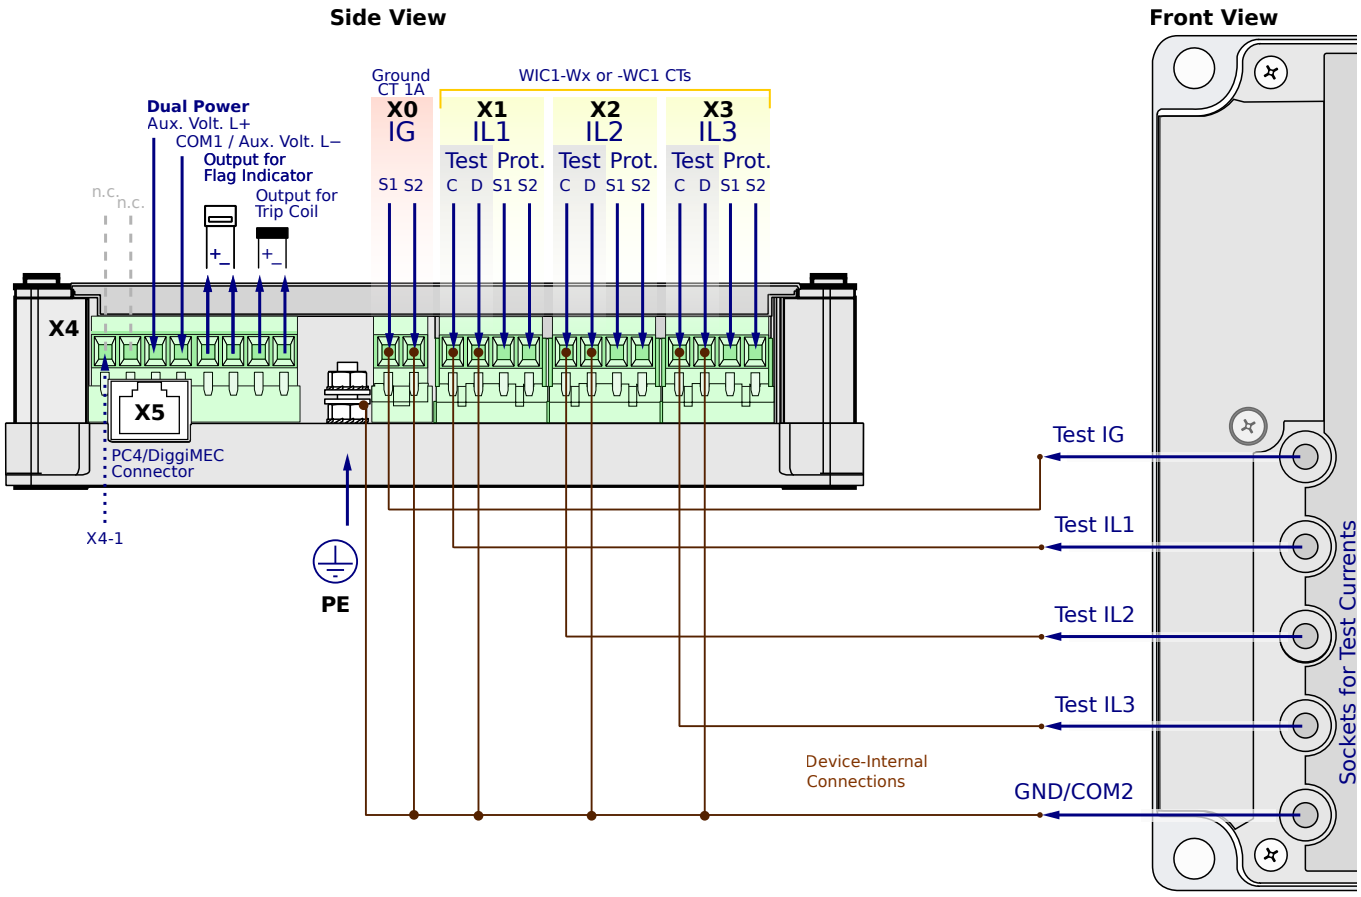


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0SB0

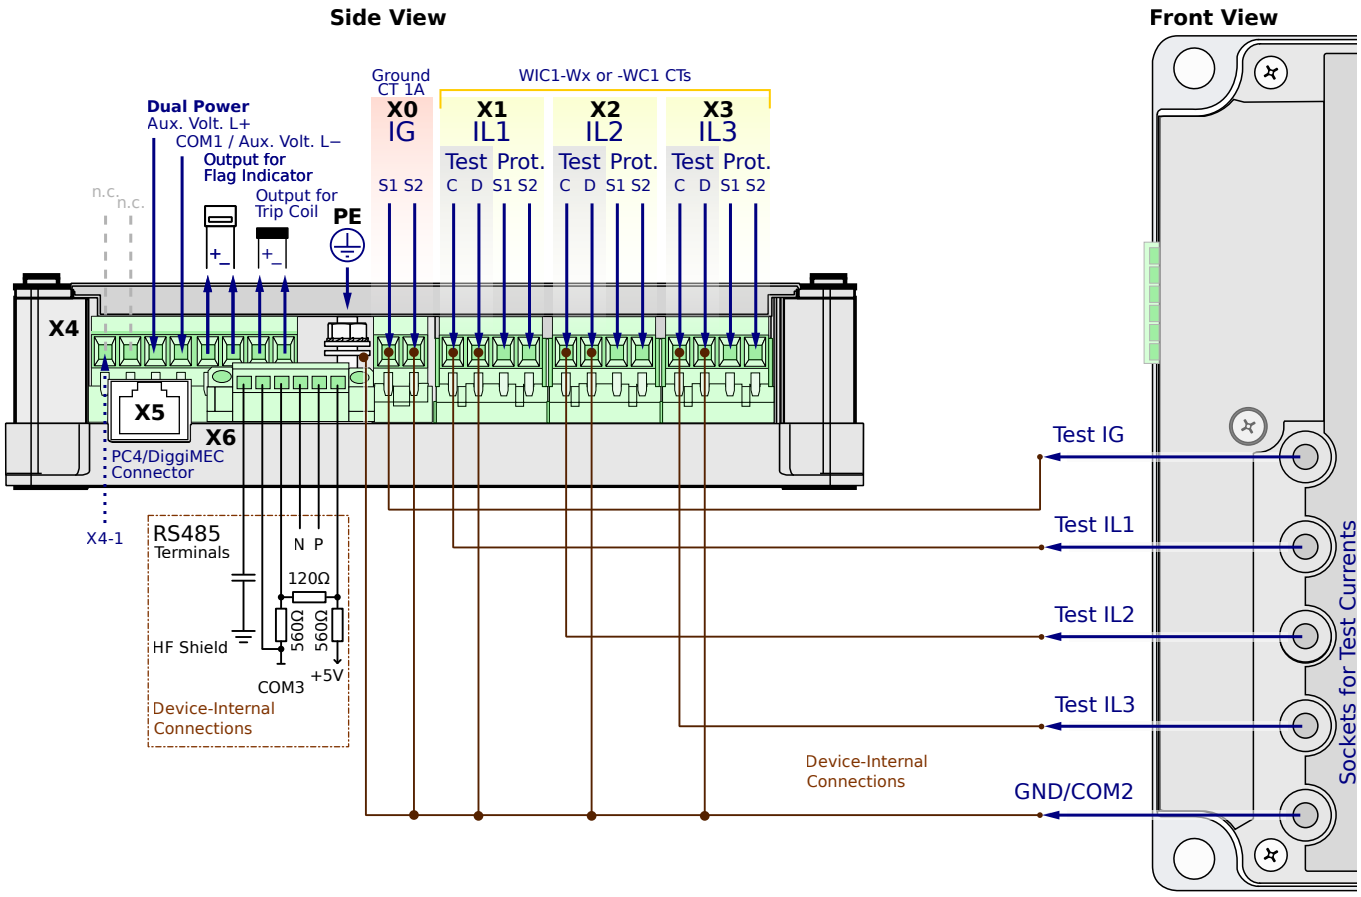


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0SBH

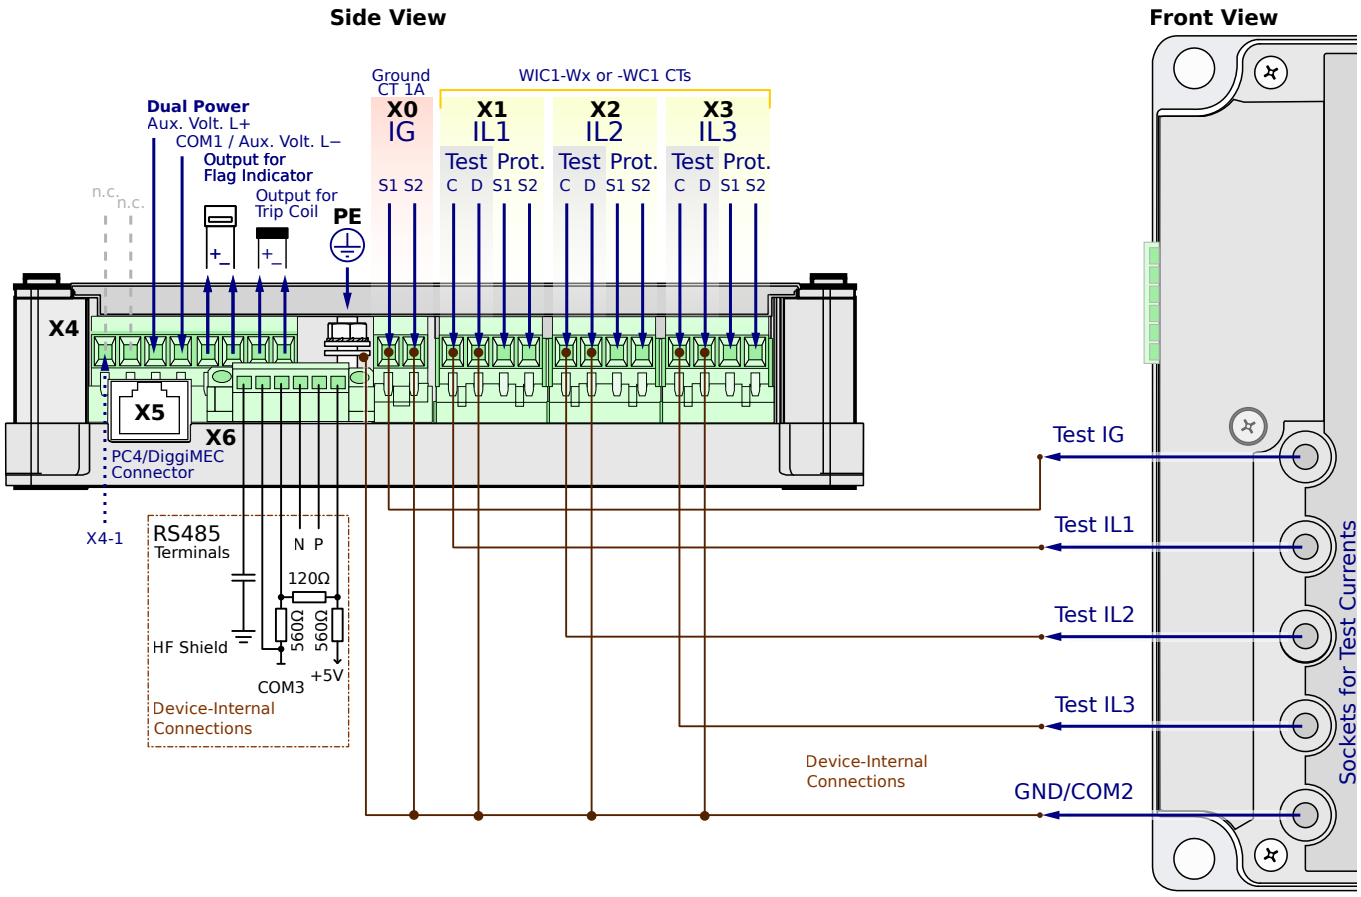


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0SC0

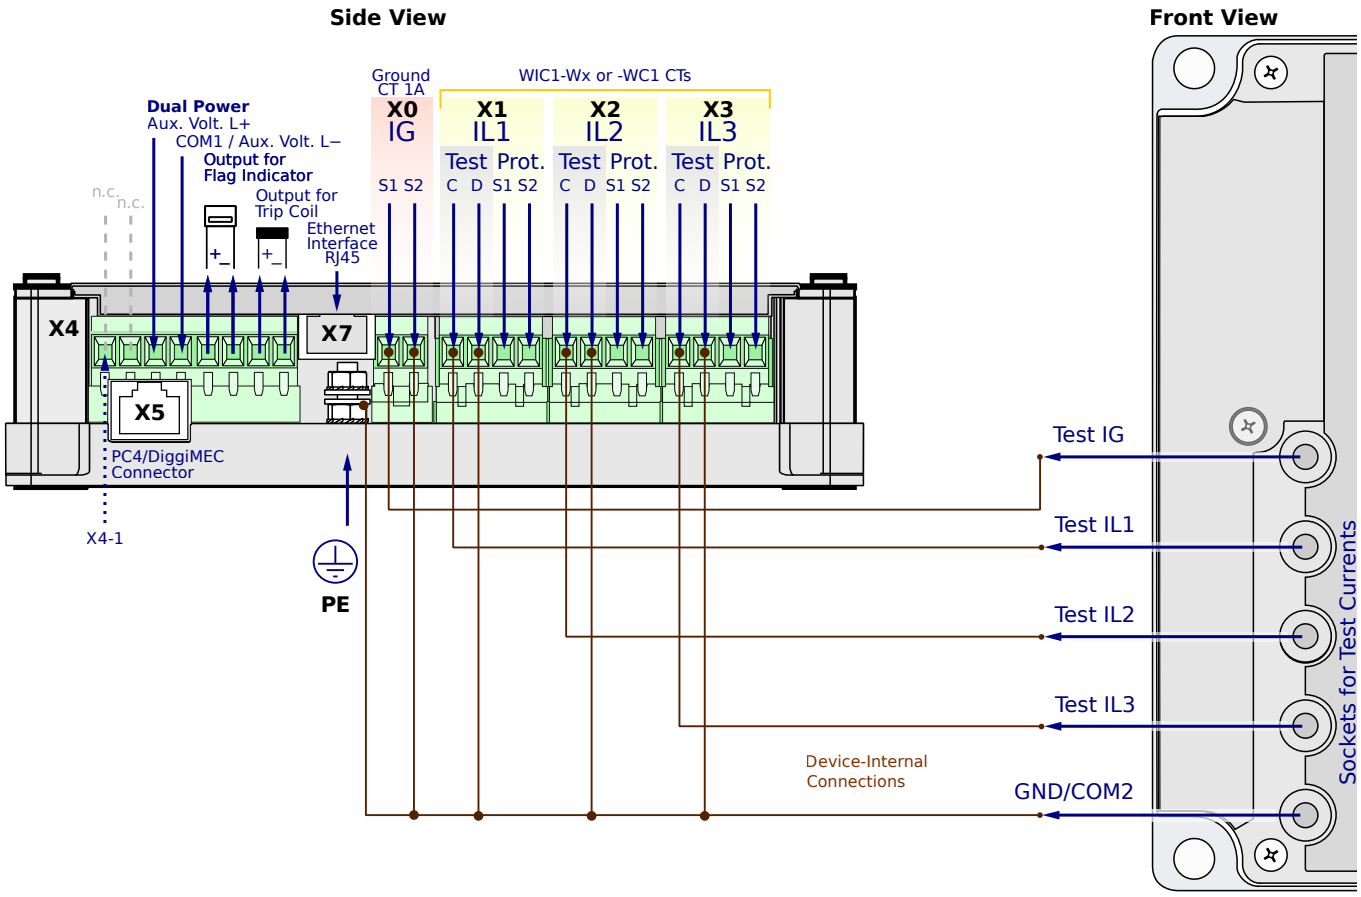


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0SCH

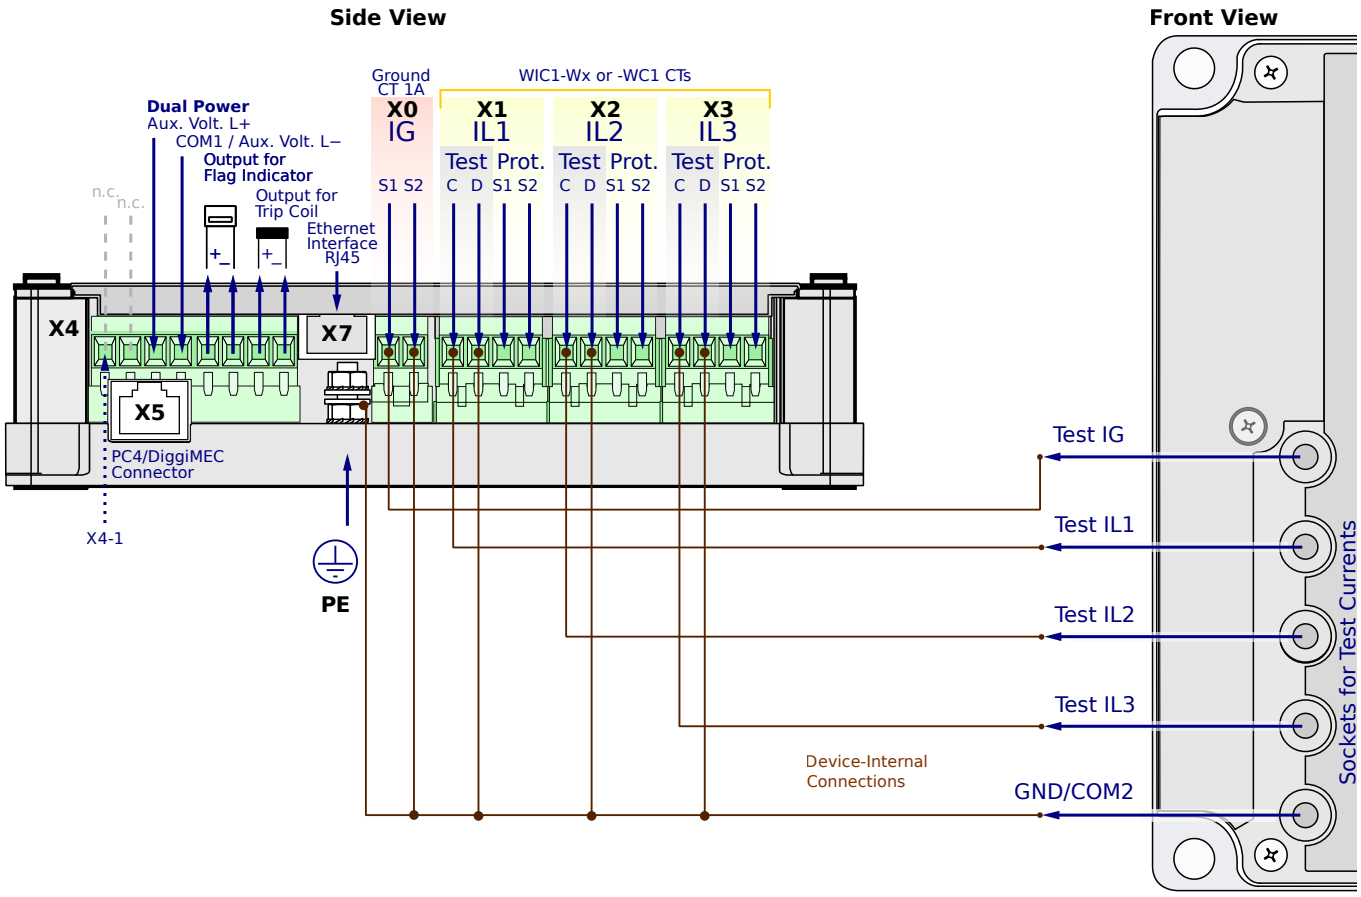


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0SL0

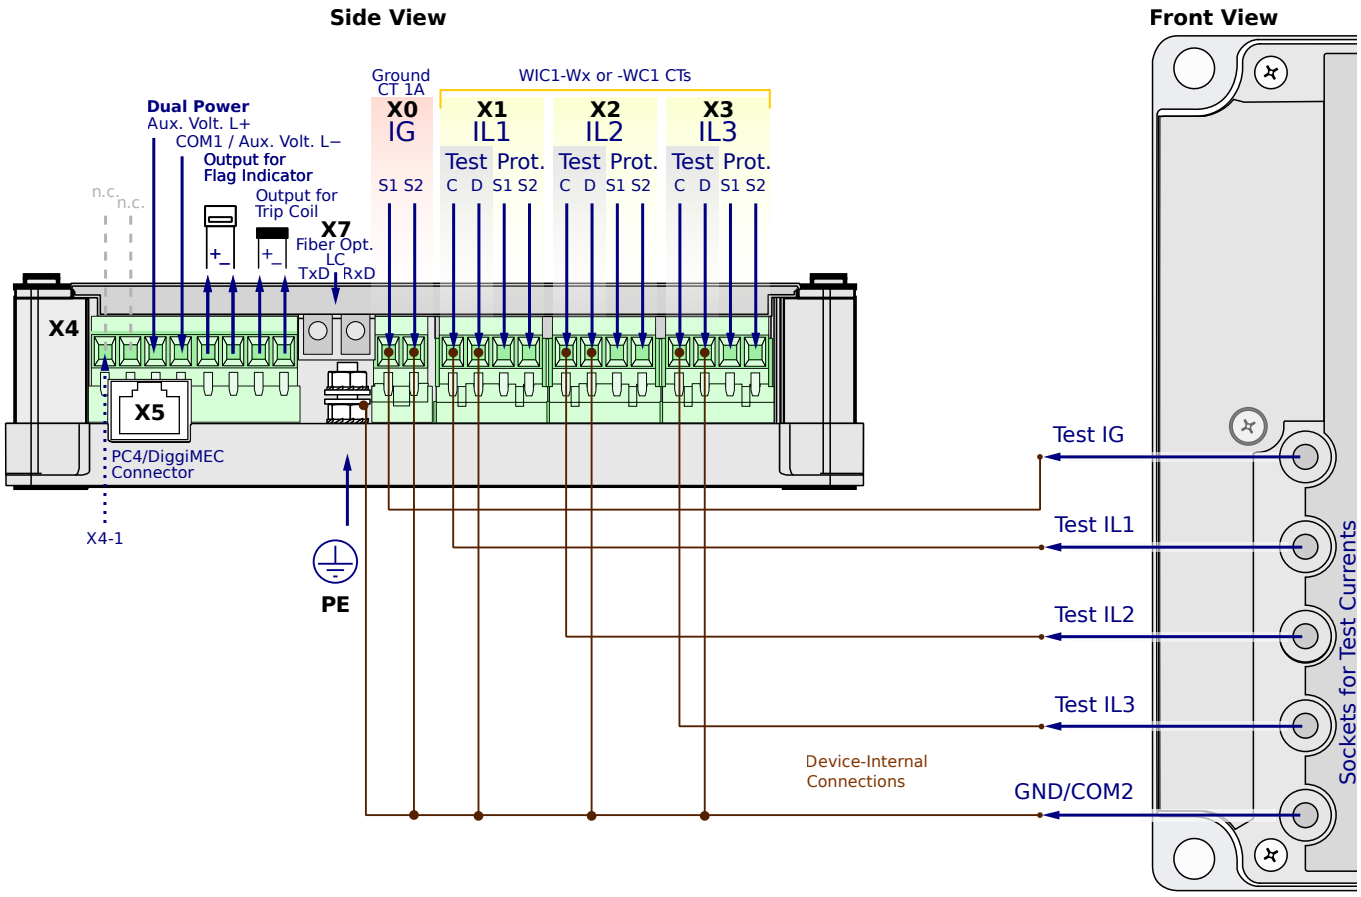


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0SLH

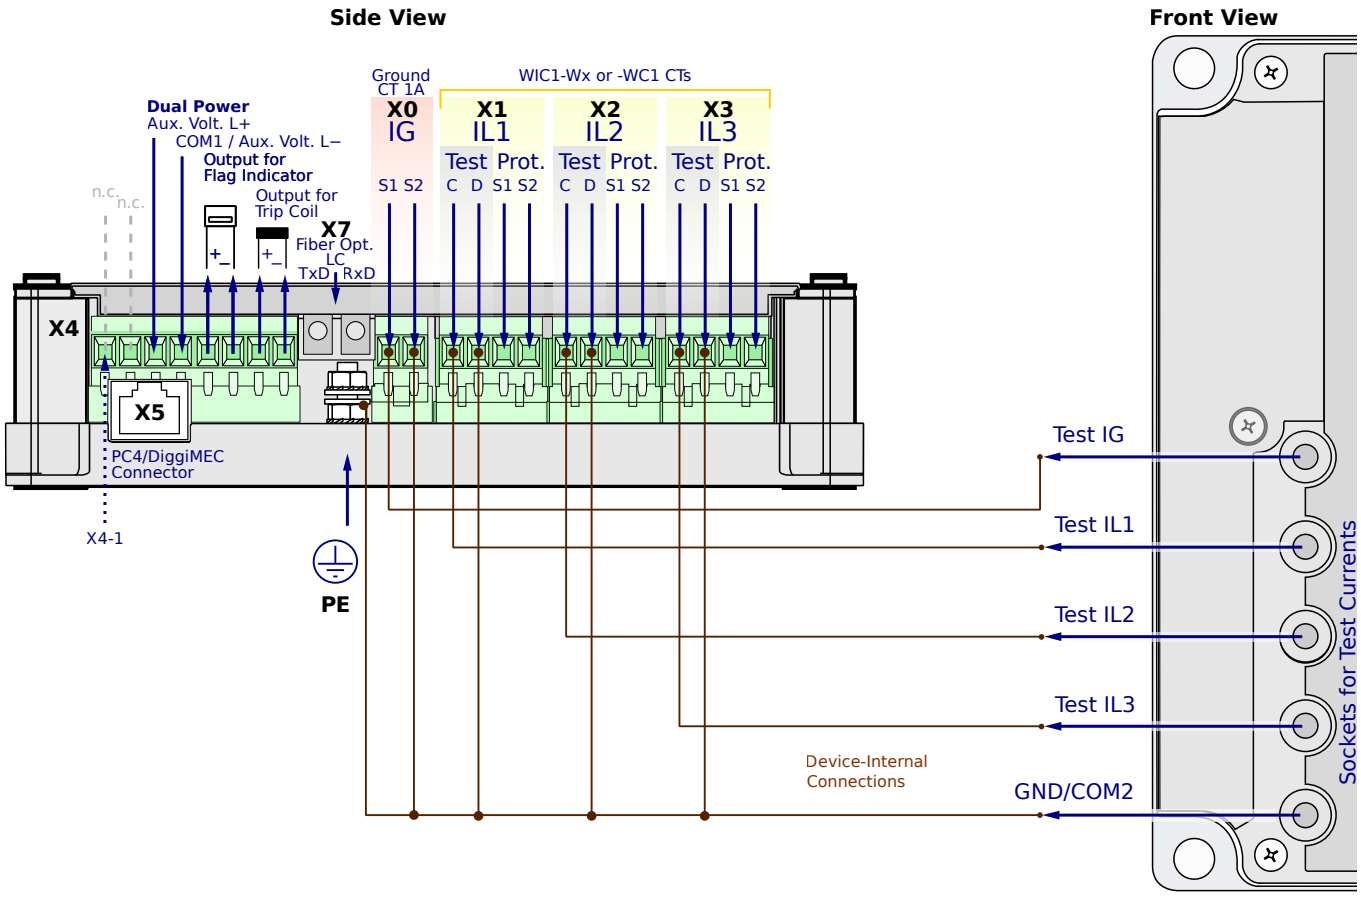


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0AA0

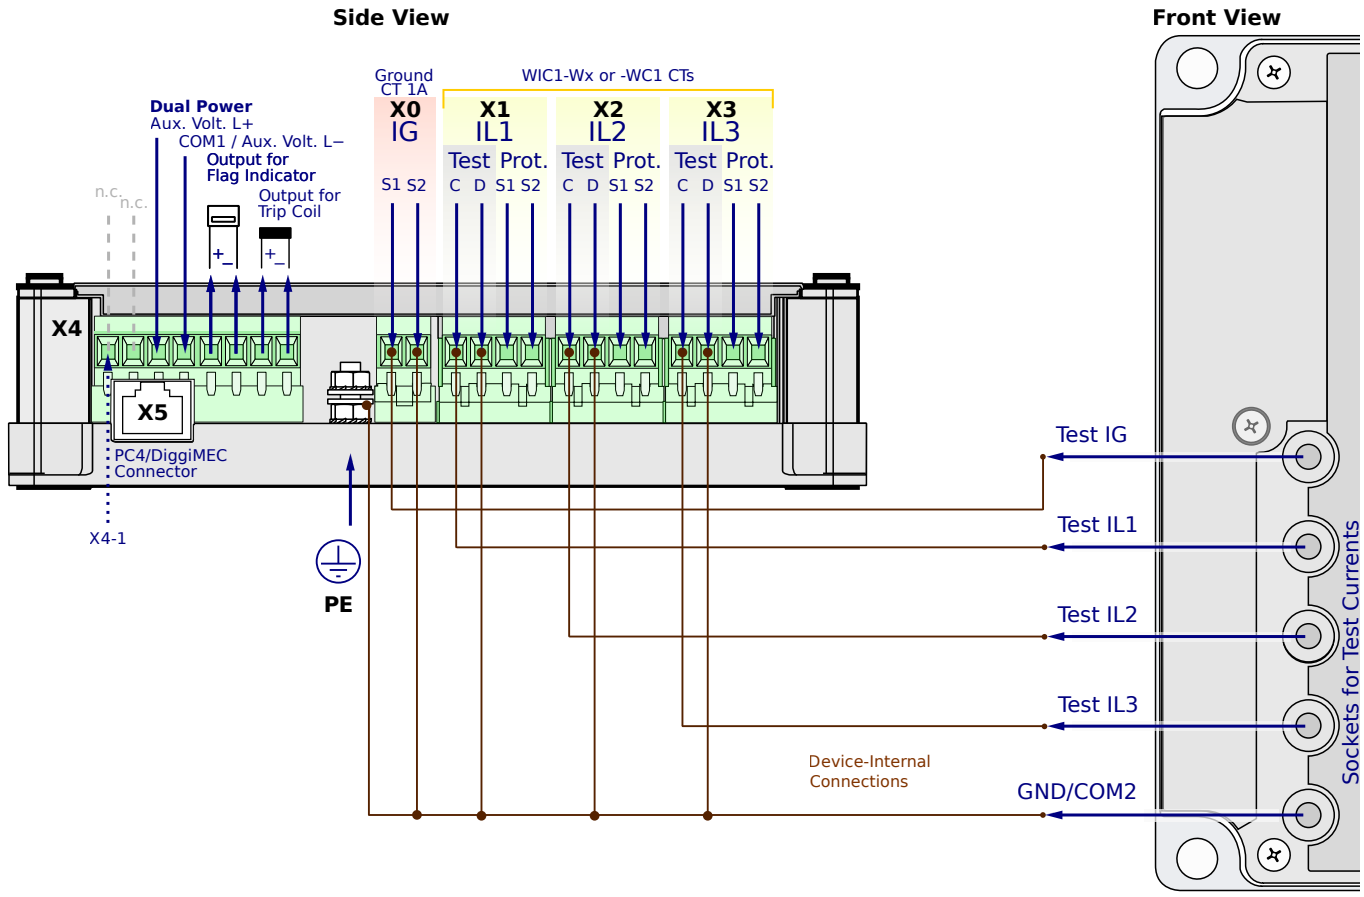


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0AAH

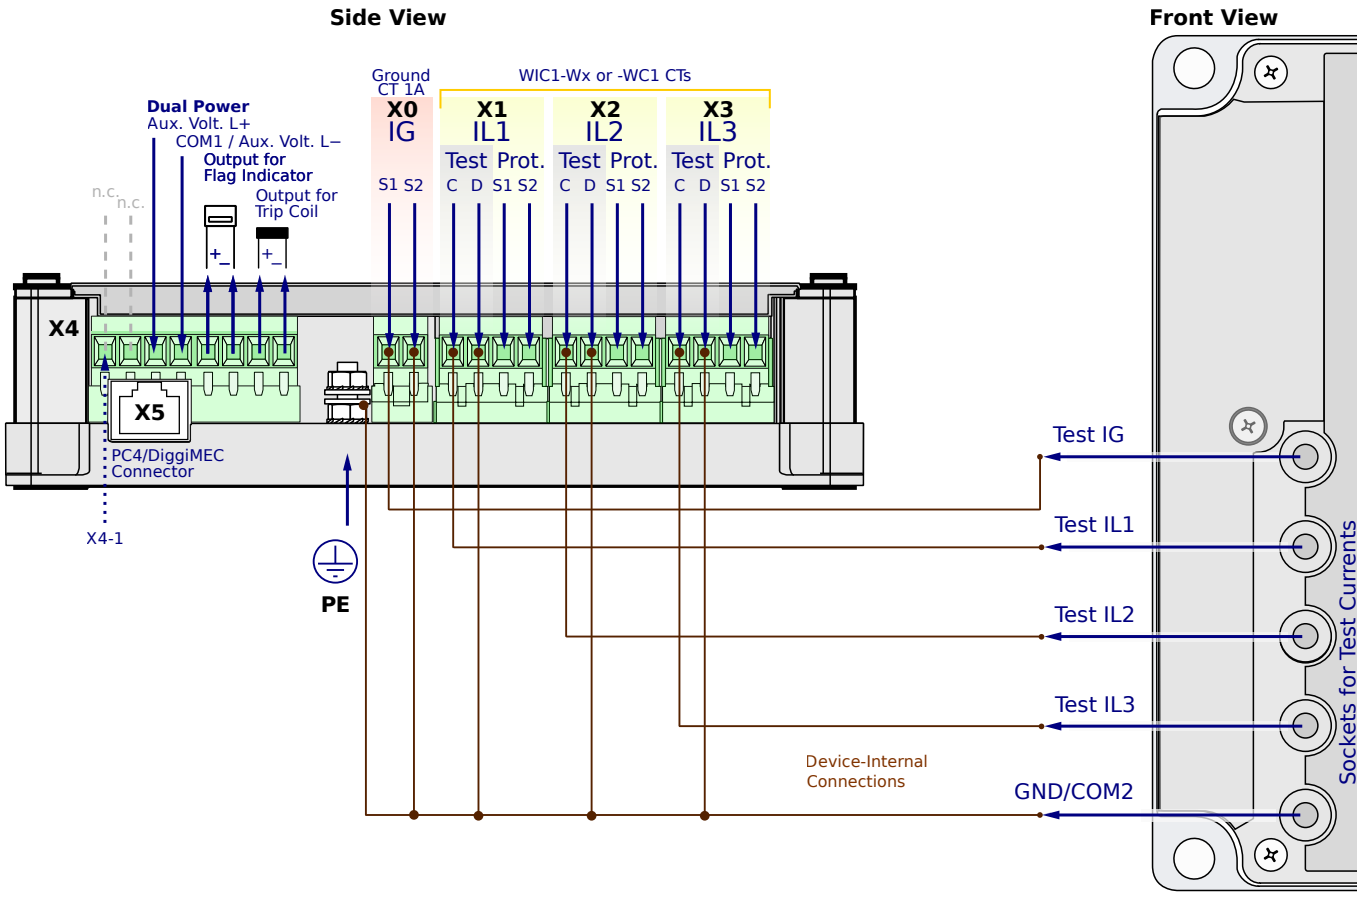


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0AB0

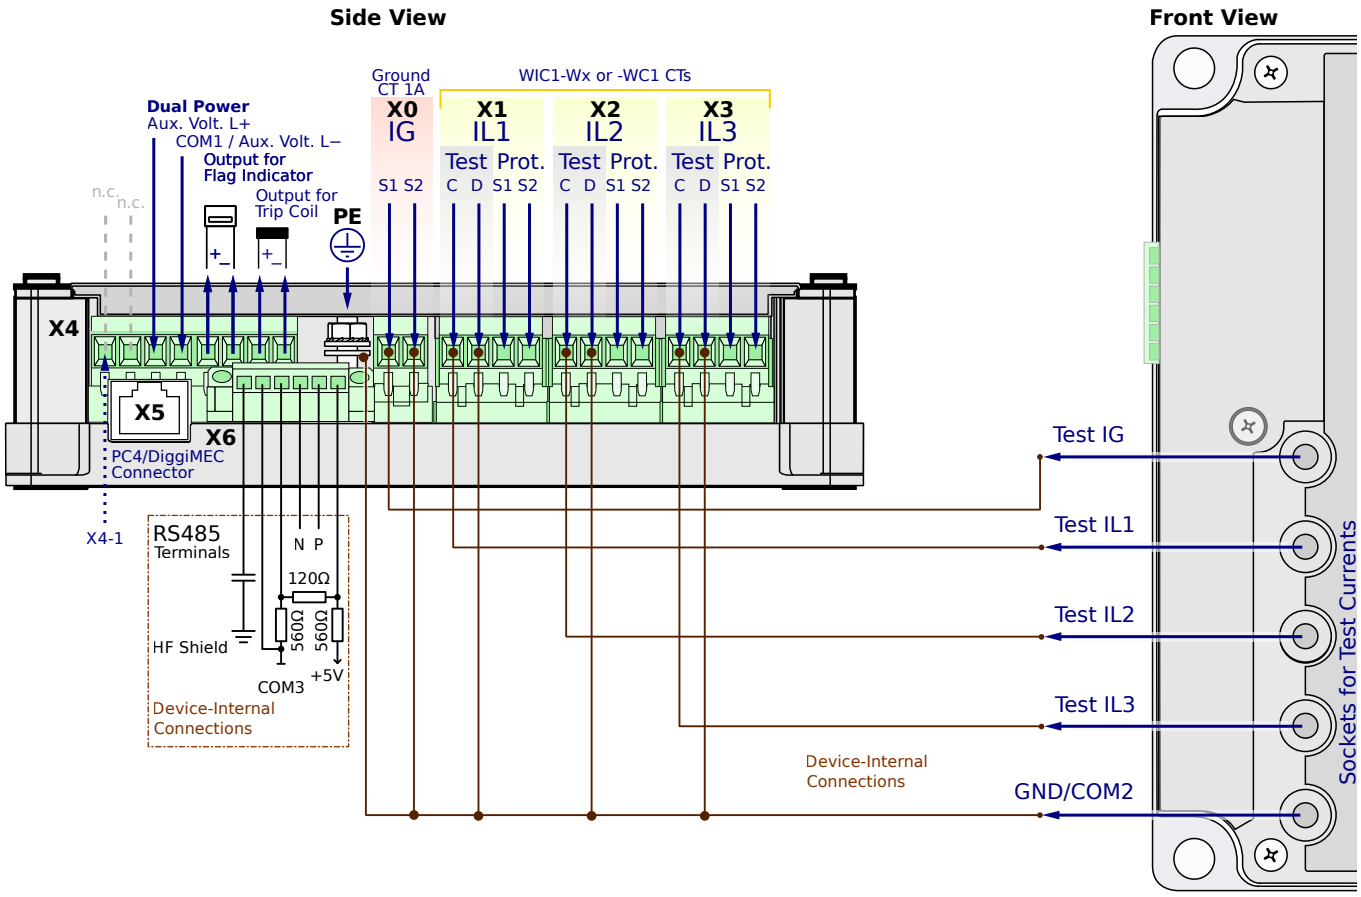


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0ABH

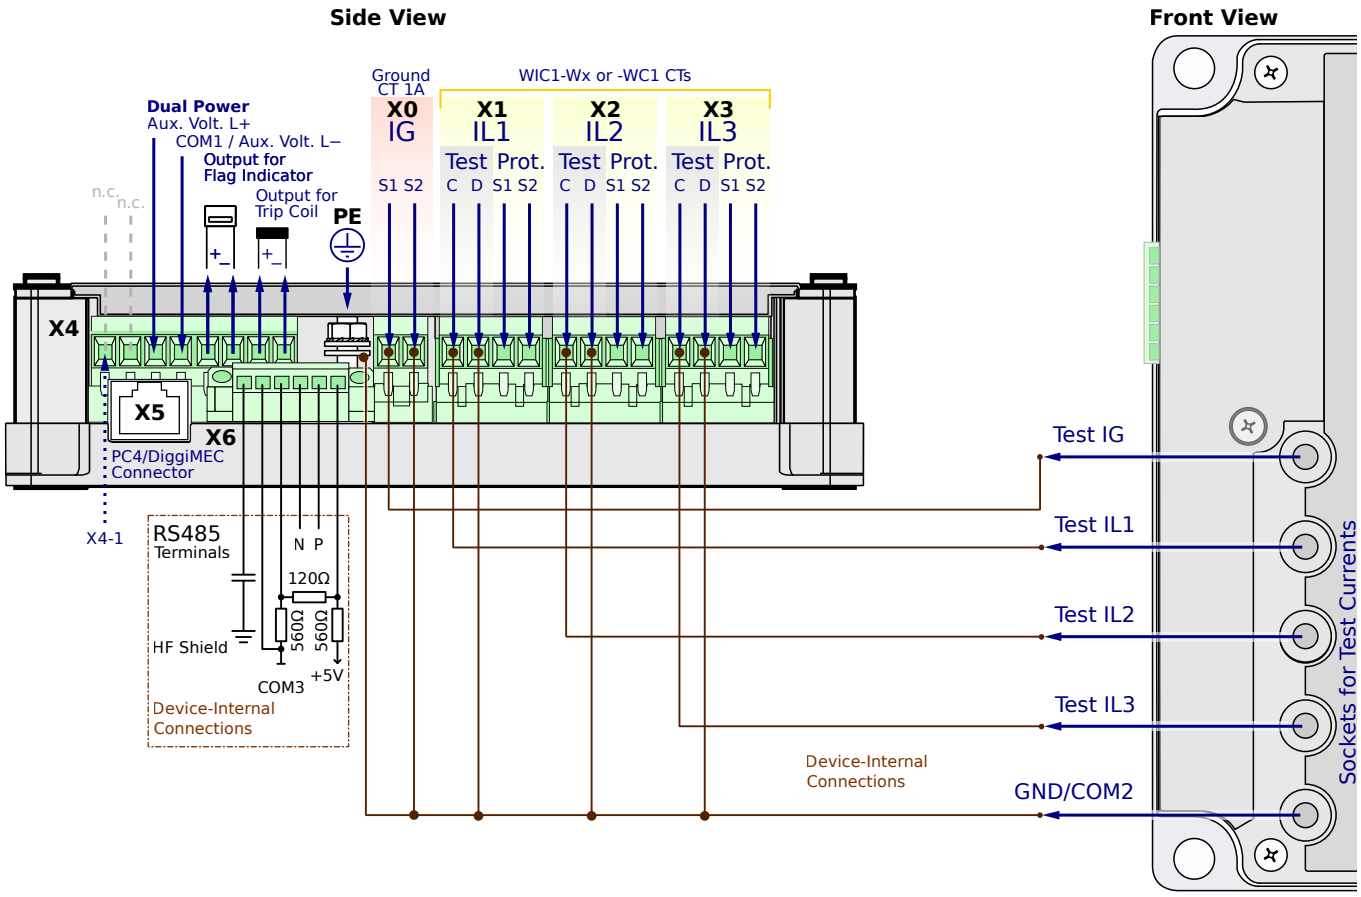


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0AC0

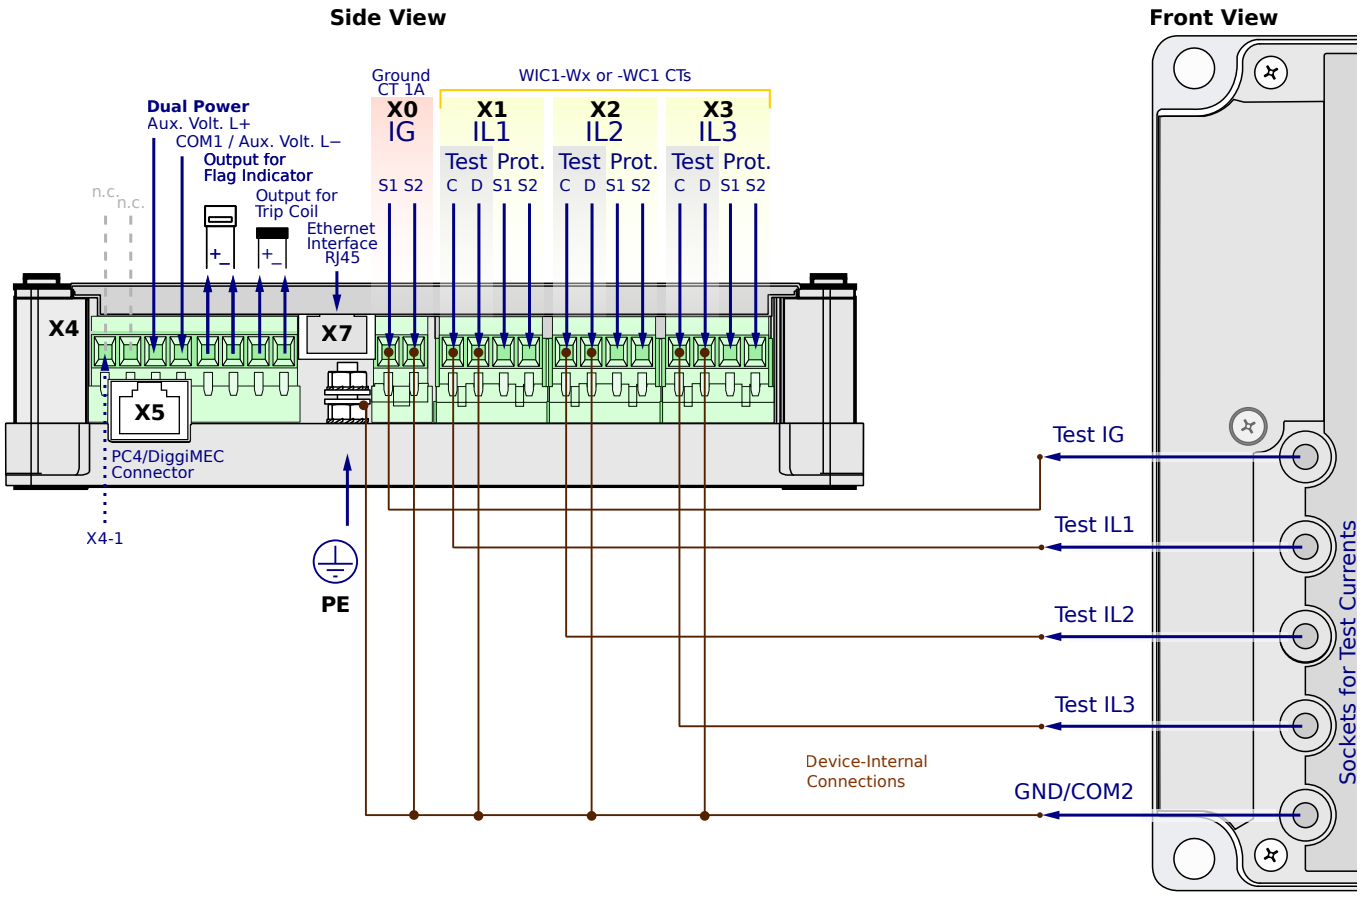


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0ACH

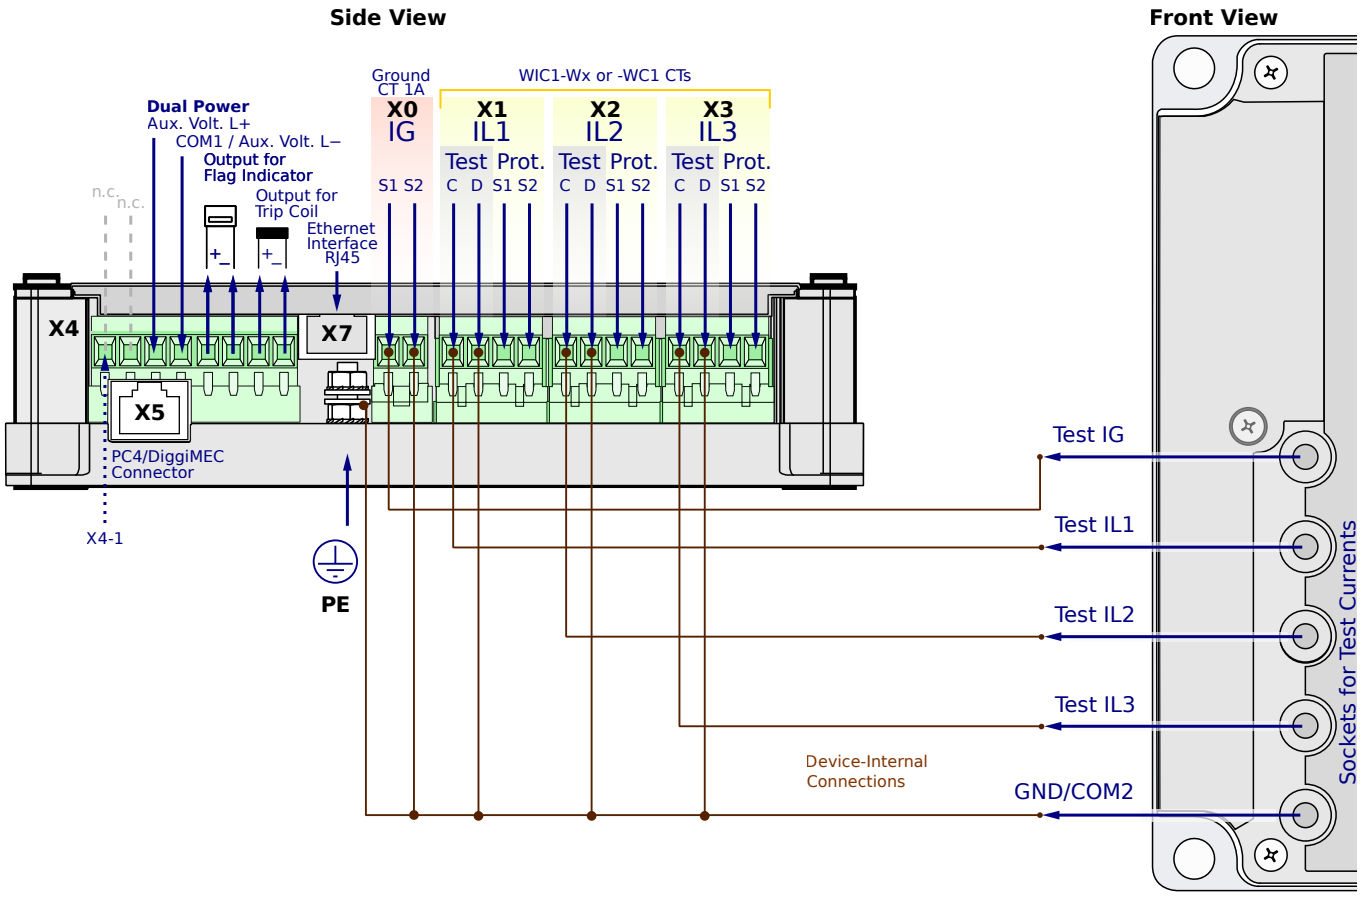


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0AL0

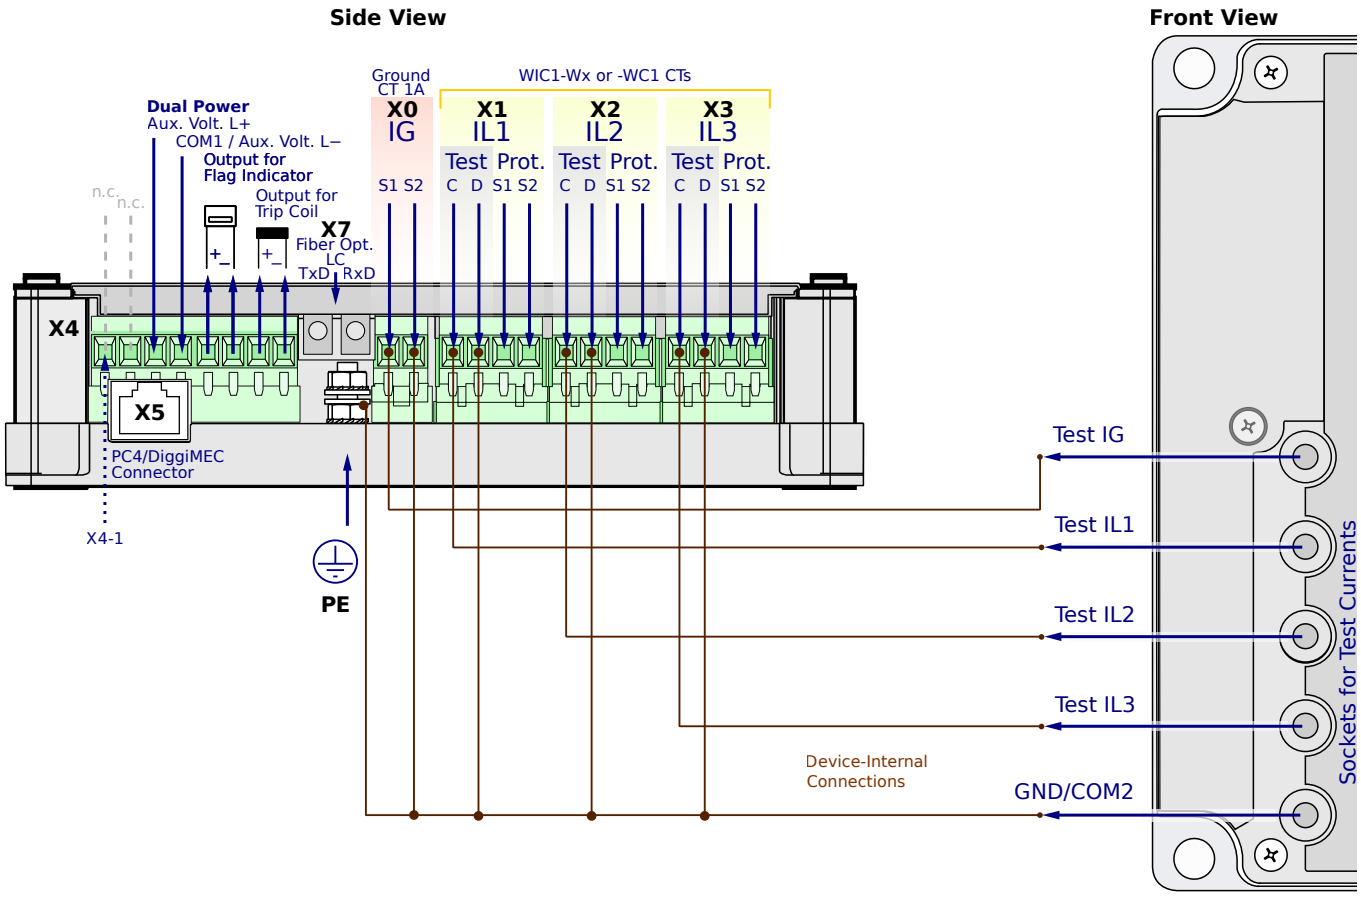


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0ALH

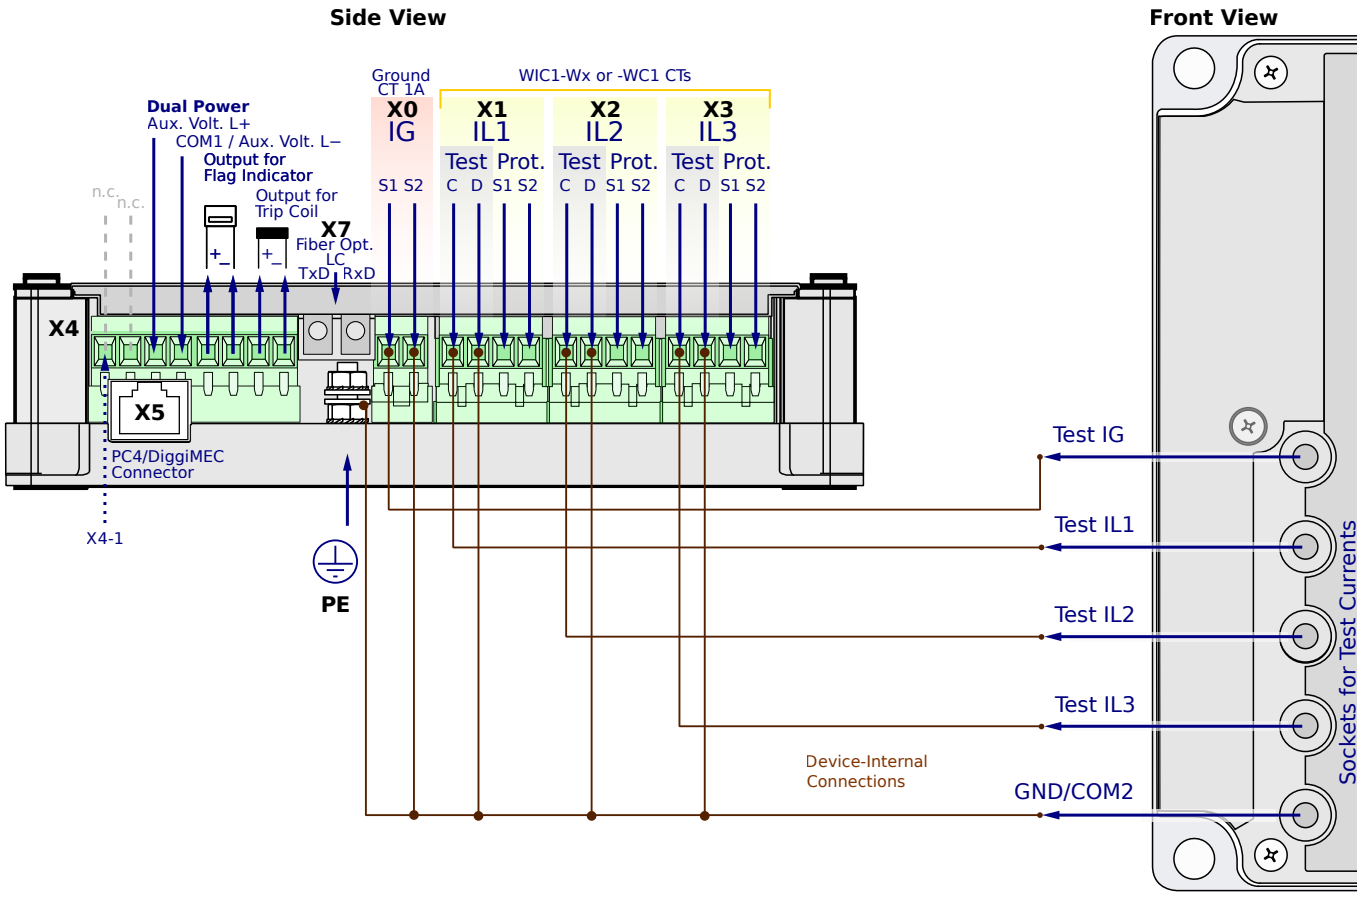


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Self-Supervision operates "FI"-output
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0PA0

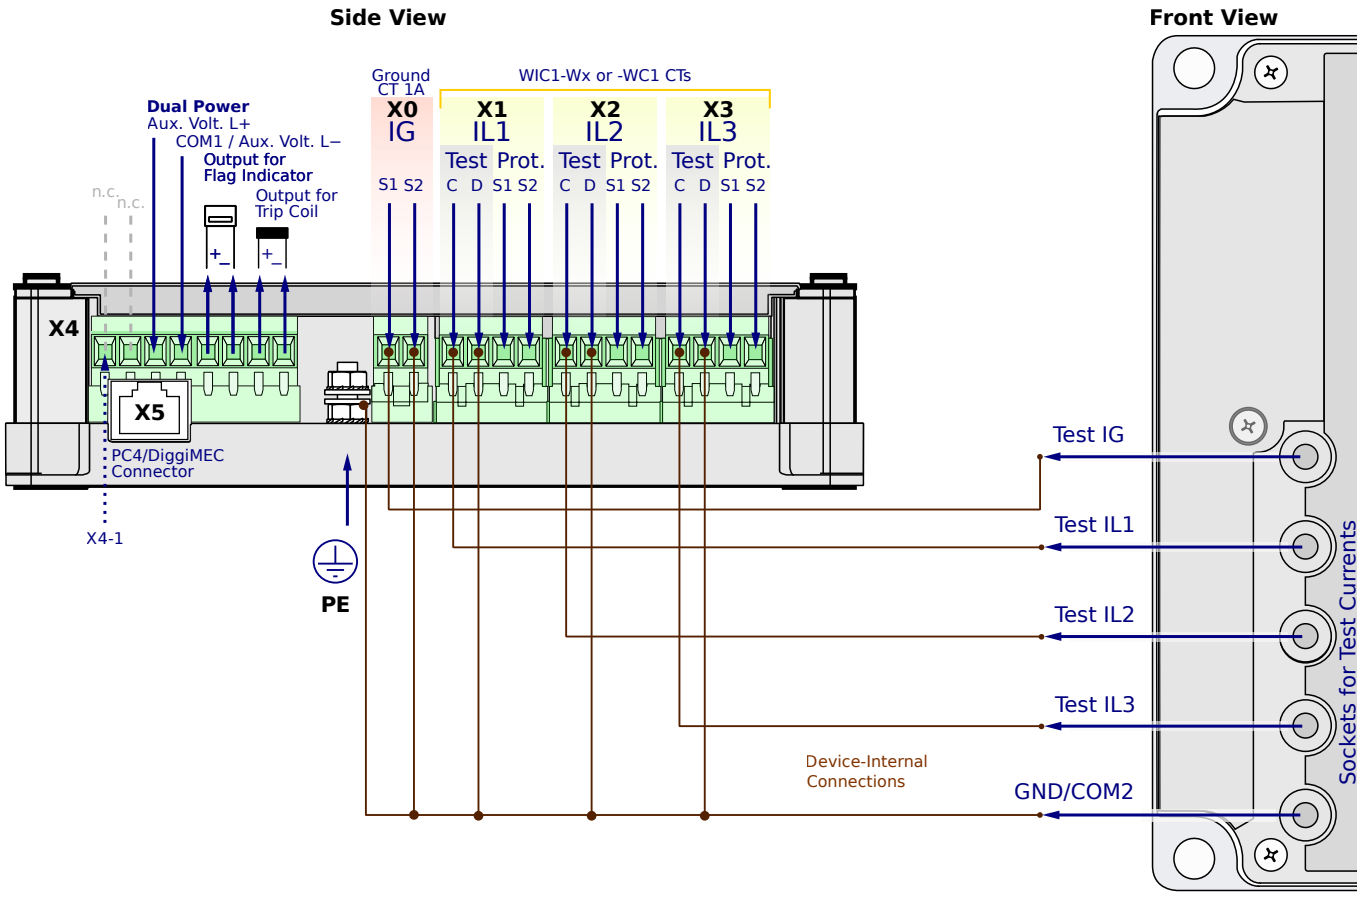


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0PAH

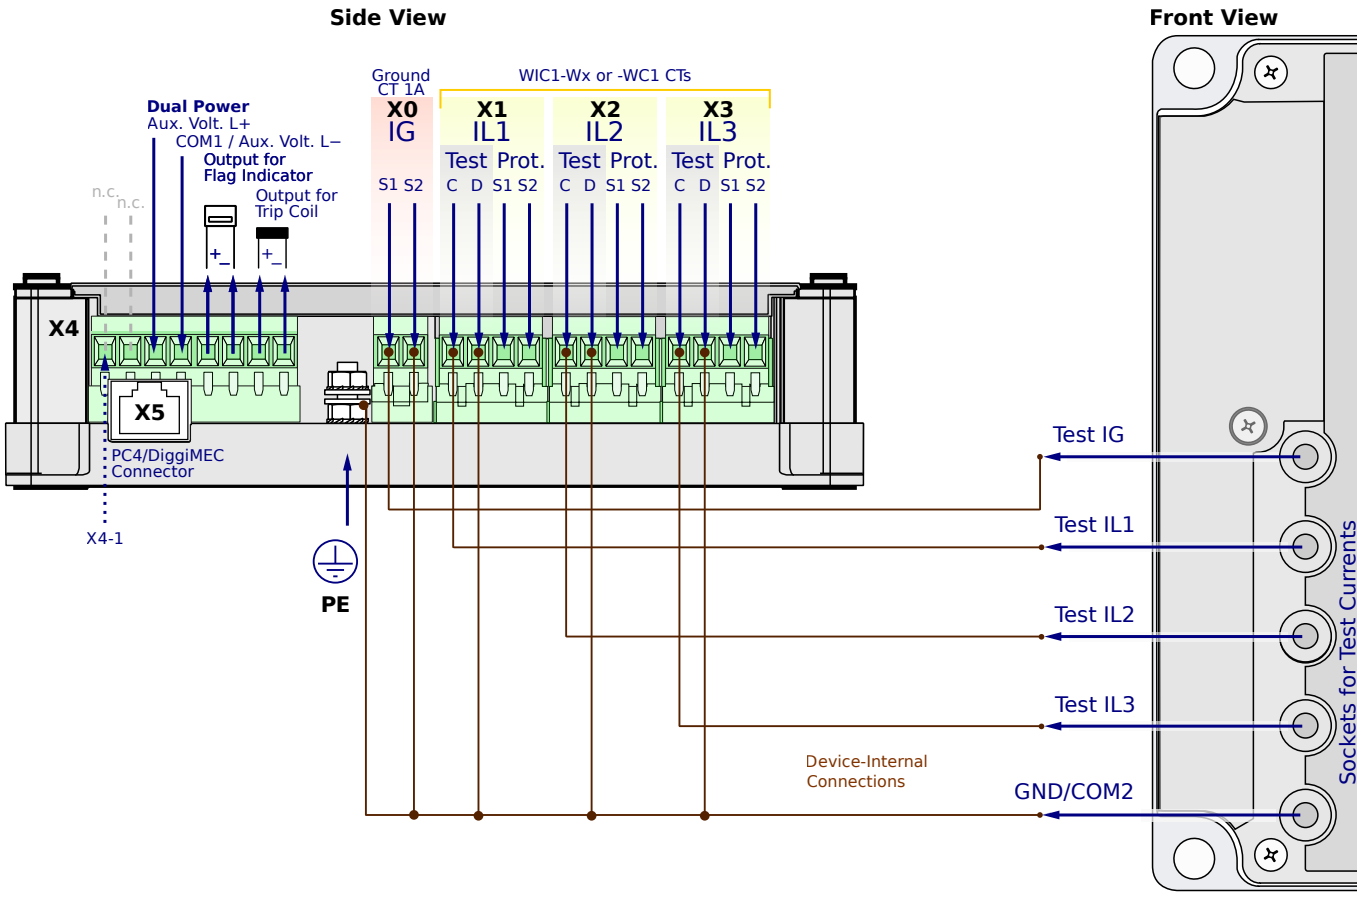


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM0PB0

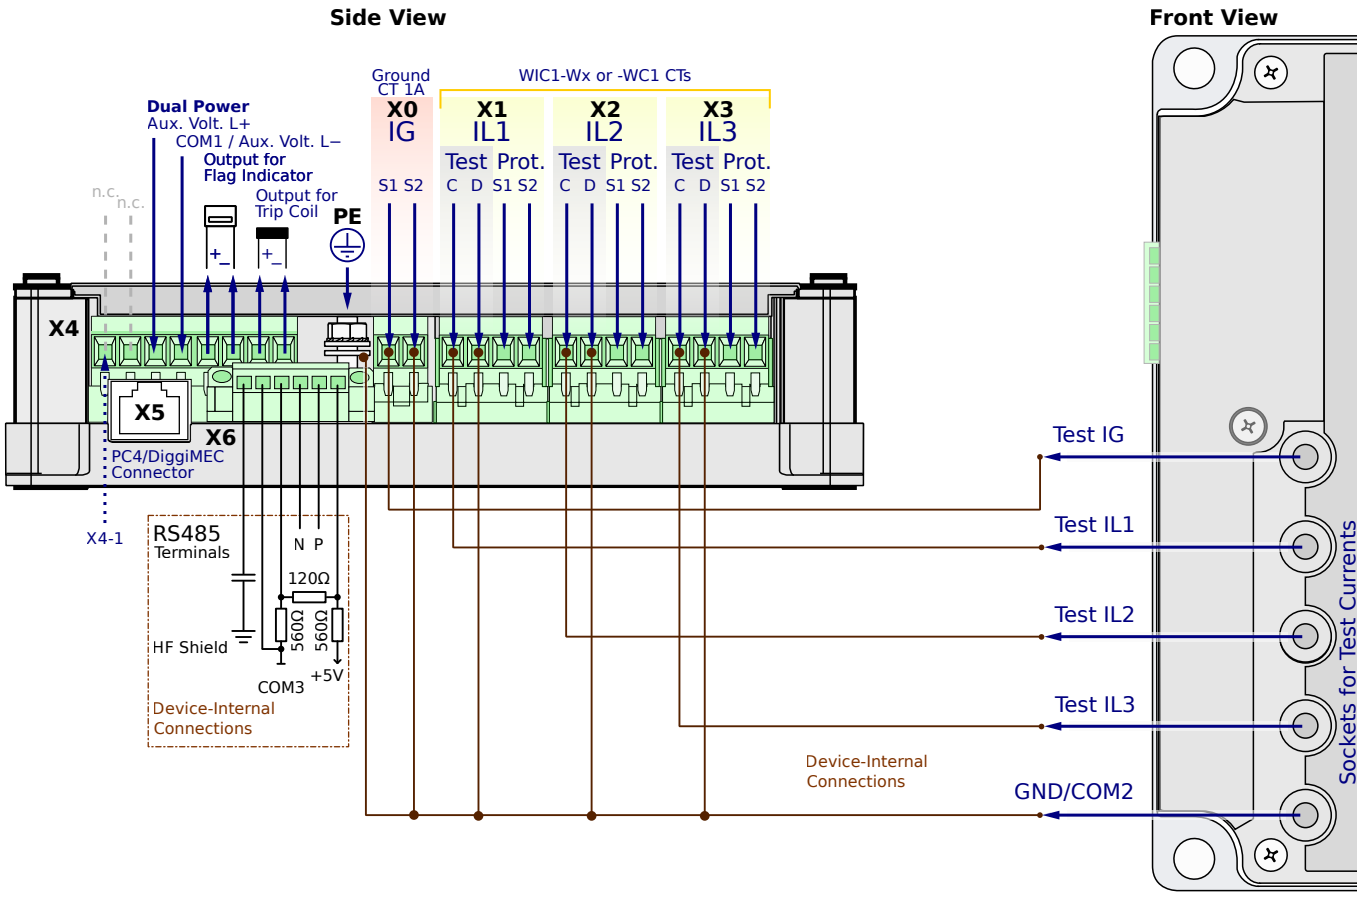


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0PBH

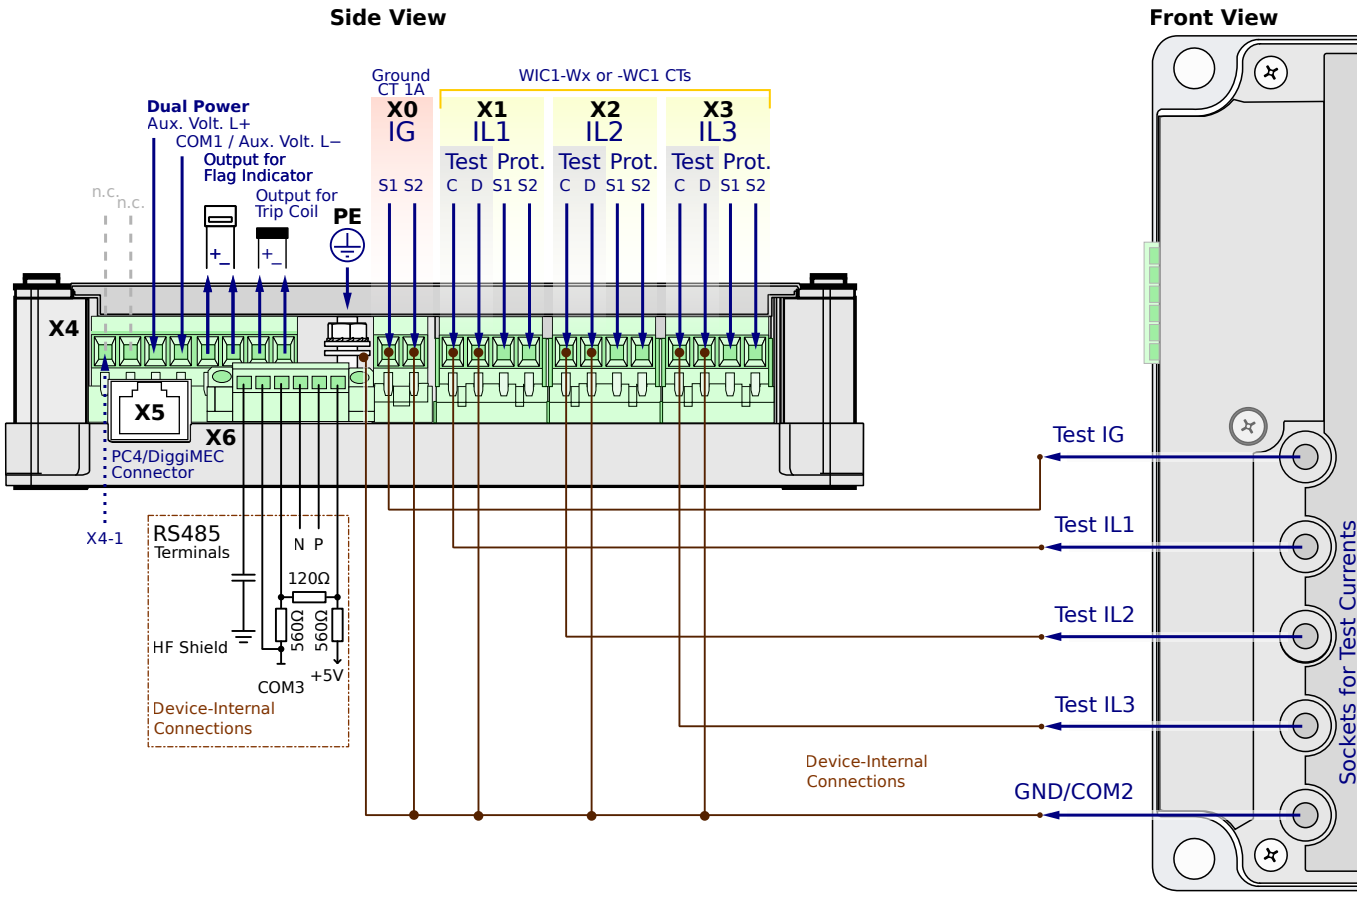


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM0PC0

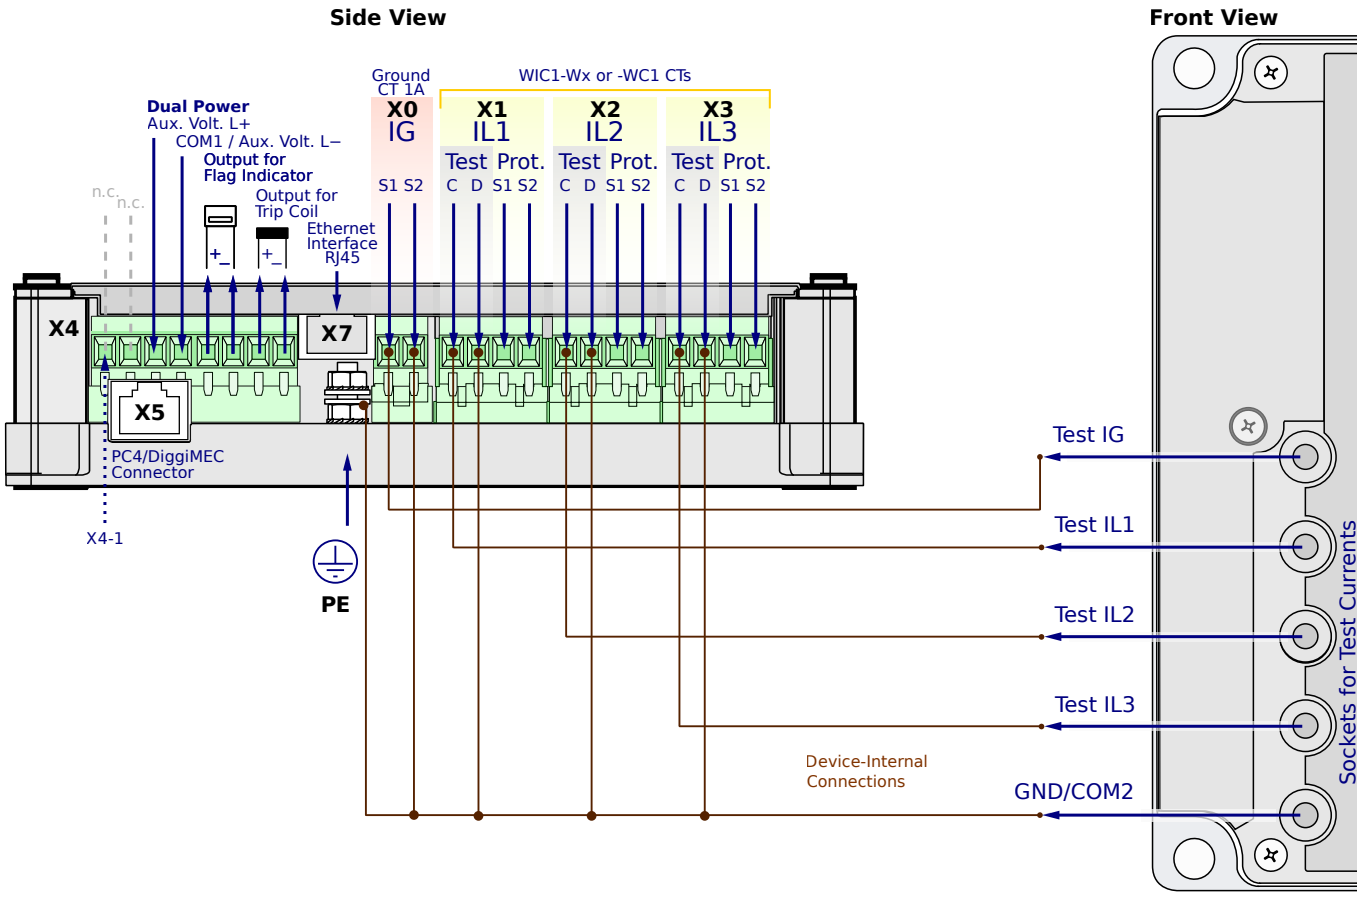


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0PCH

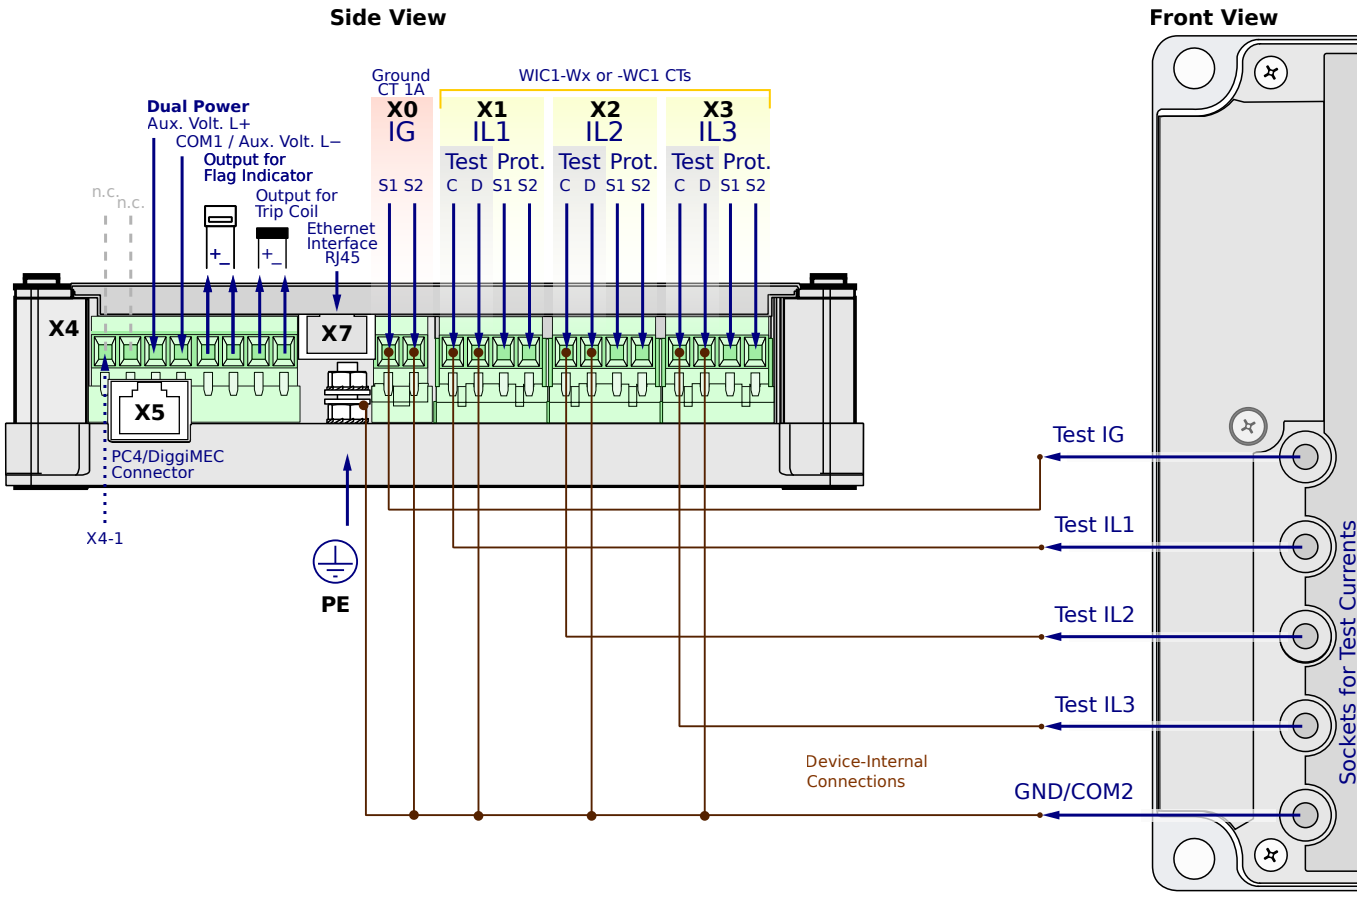


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM0PL0

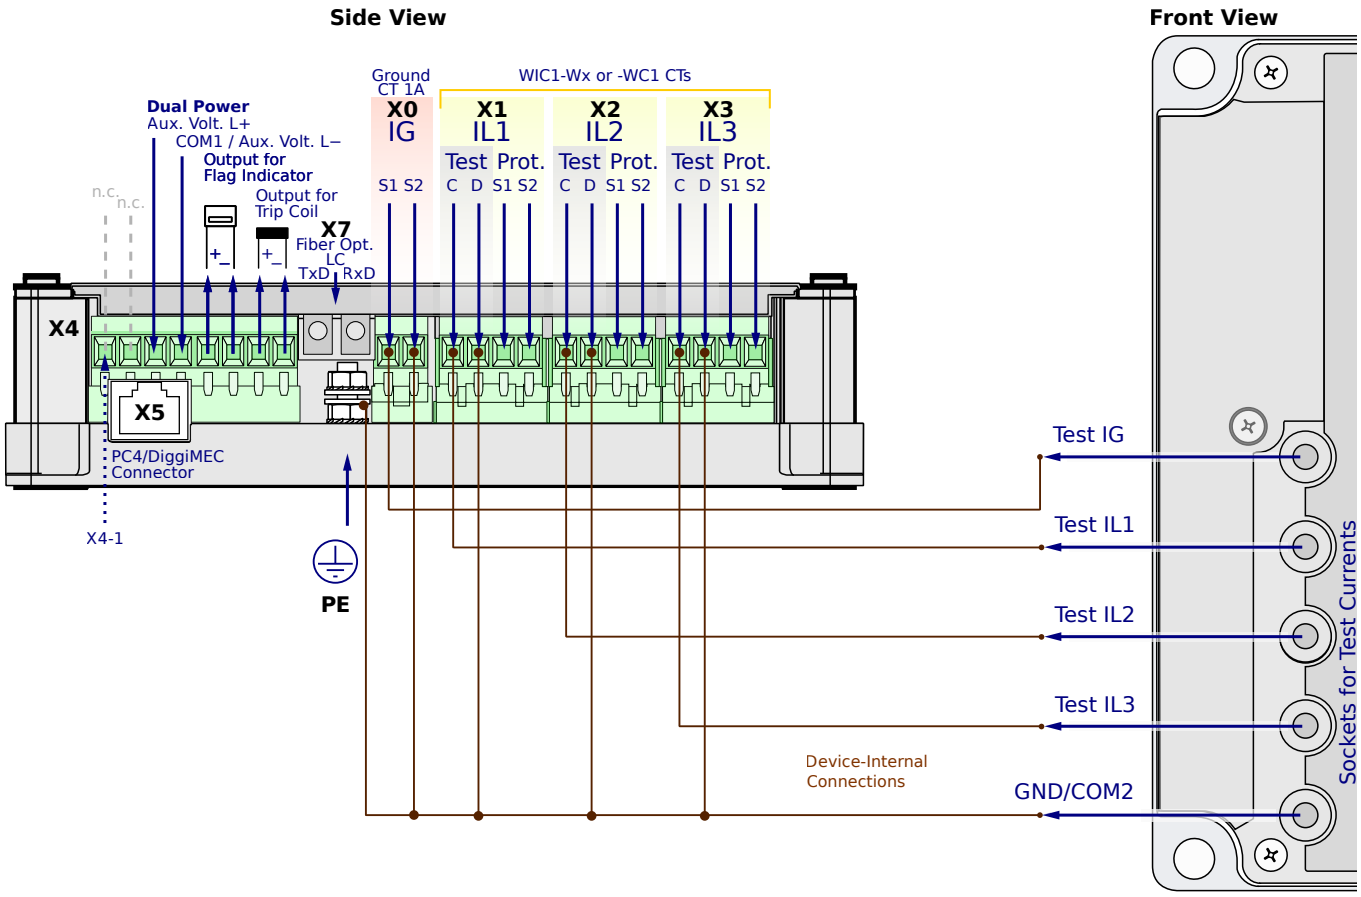


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM0PLH

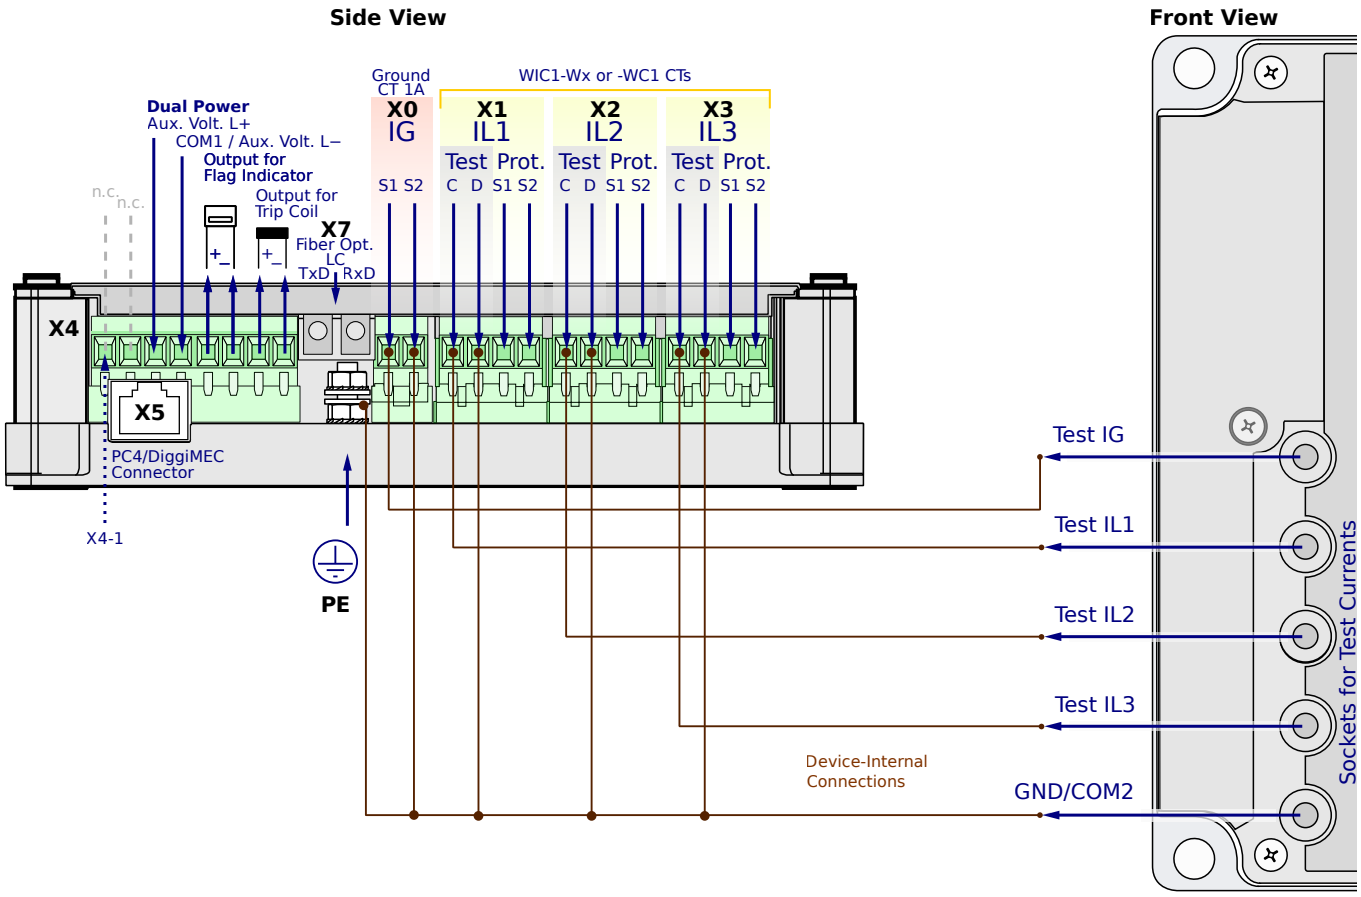


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1SA0

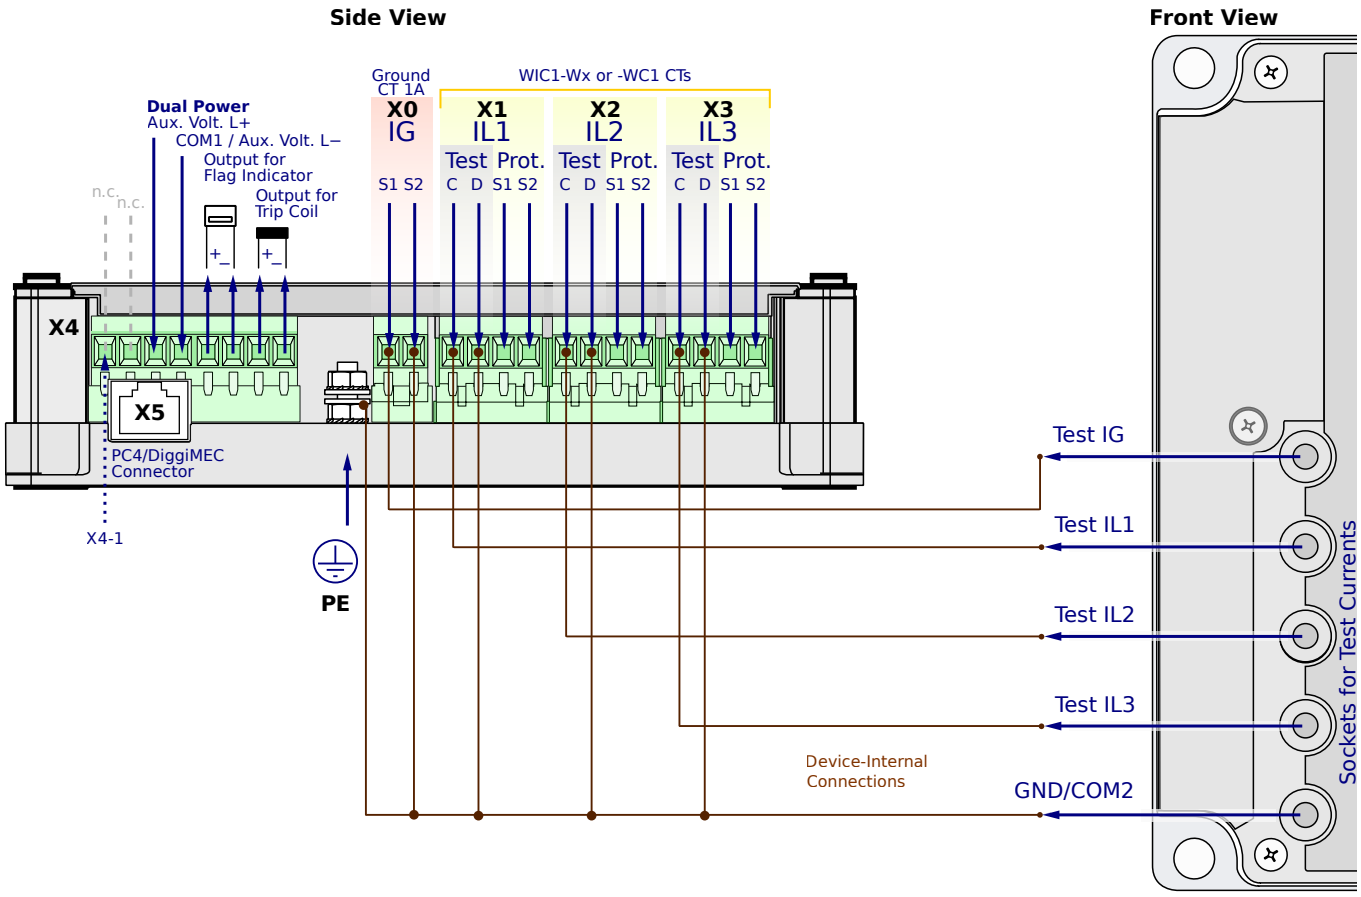


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1SAH

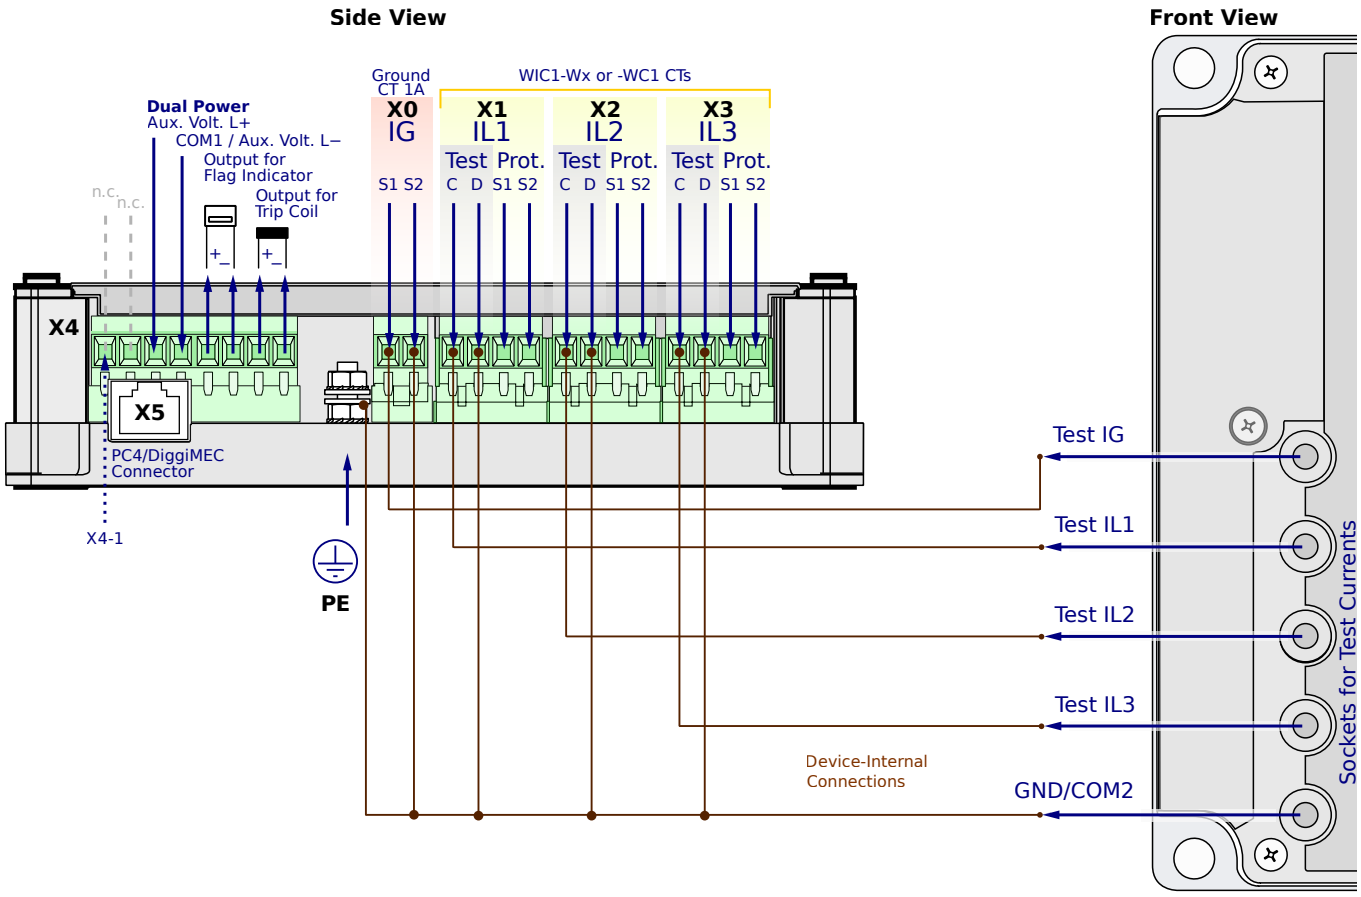


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1SB0

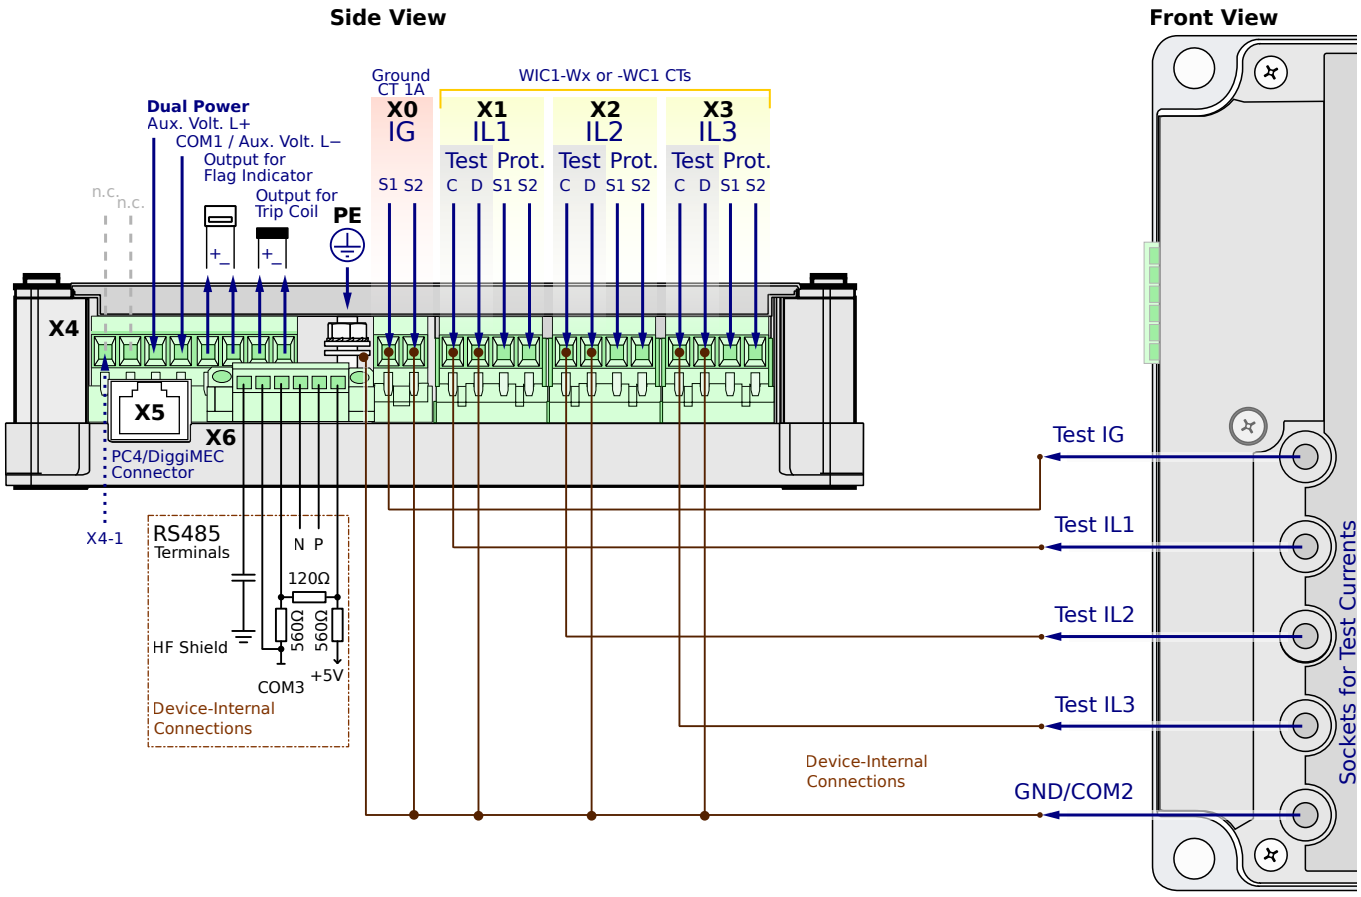


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1SBH

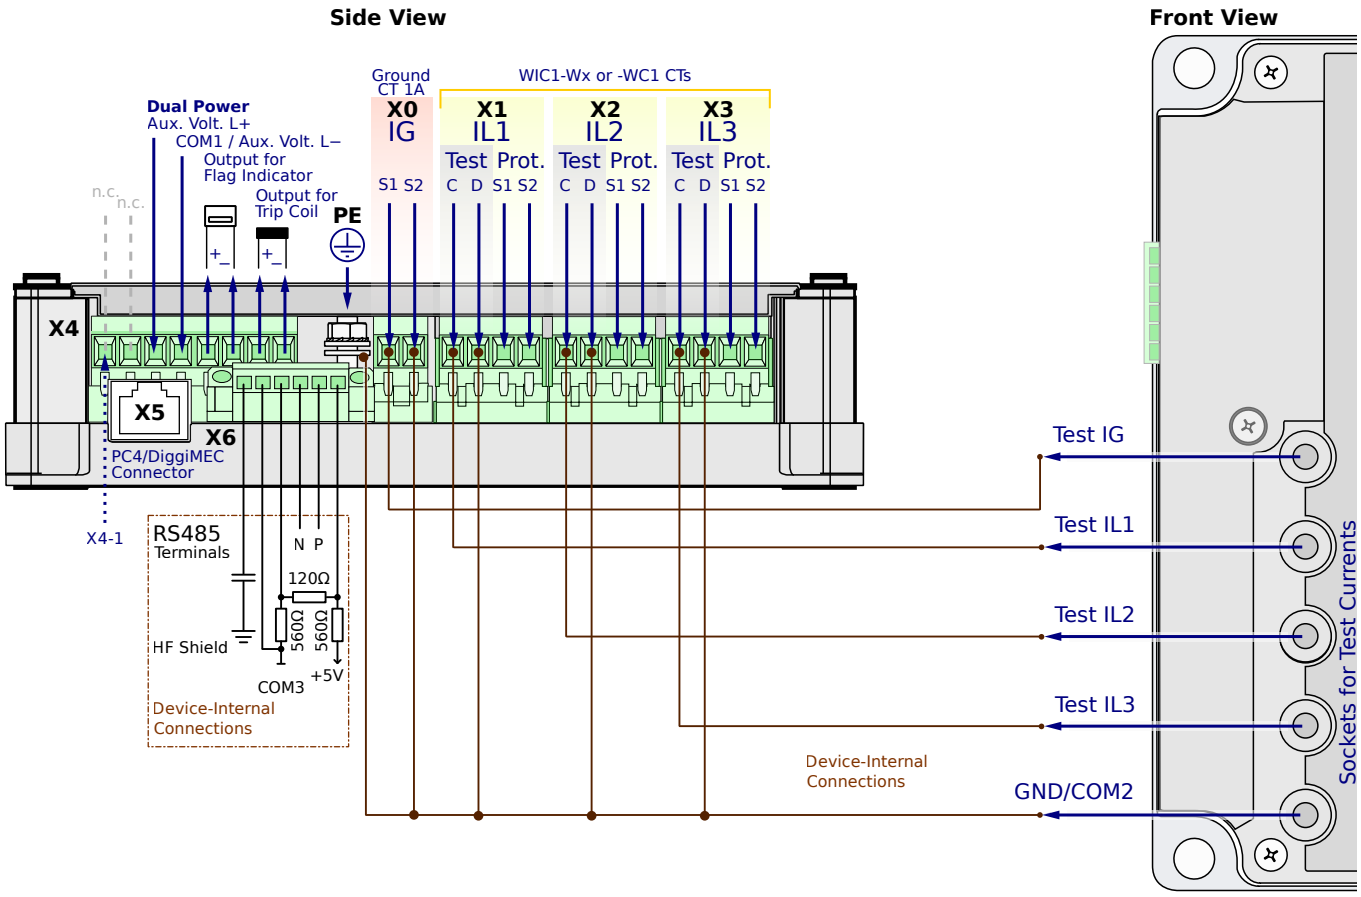


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1SC0

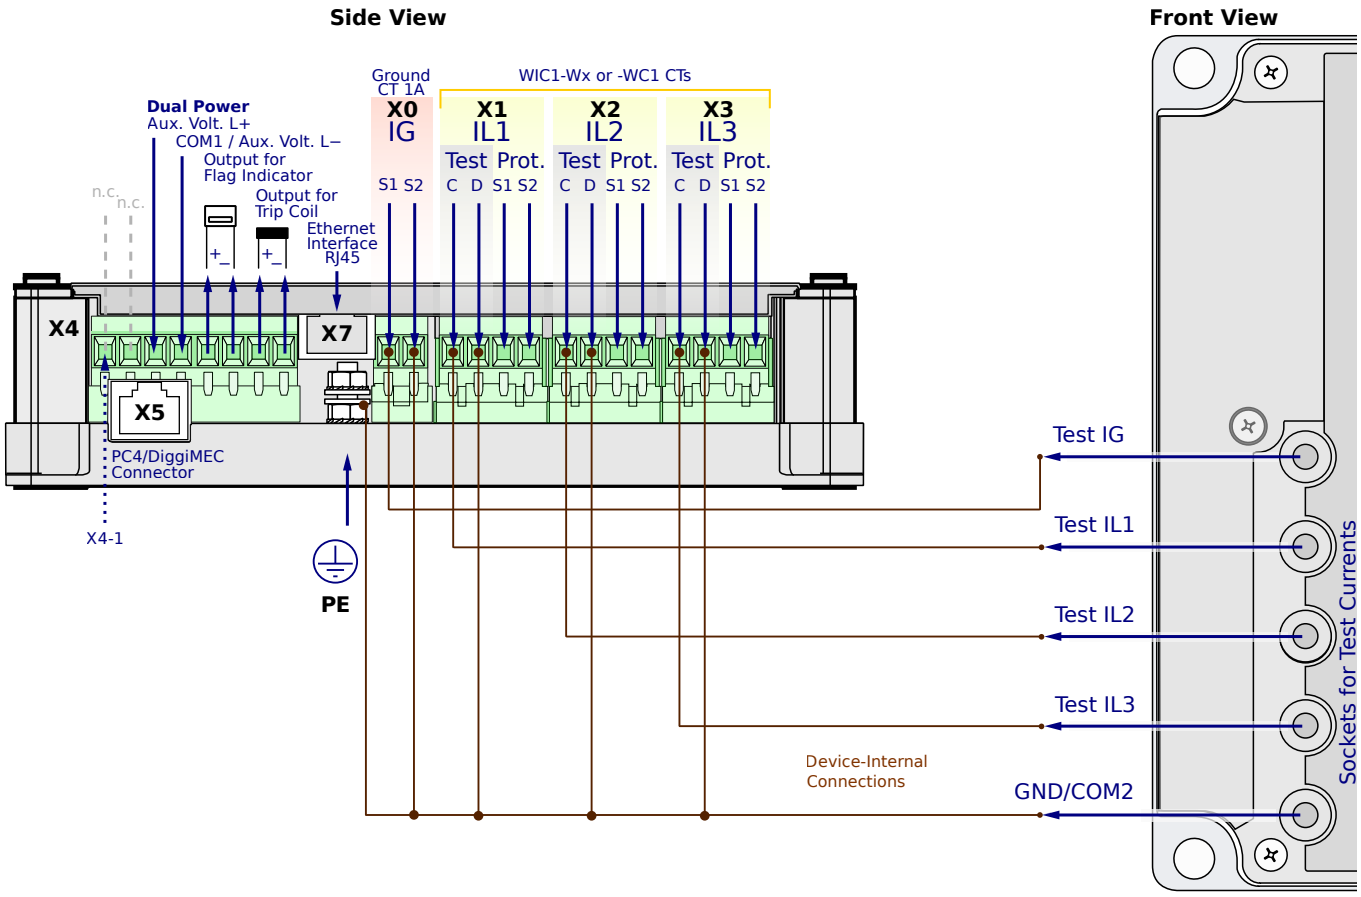


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1SCH

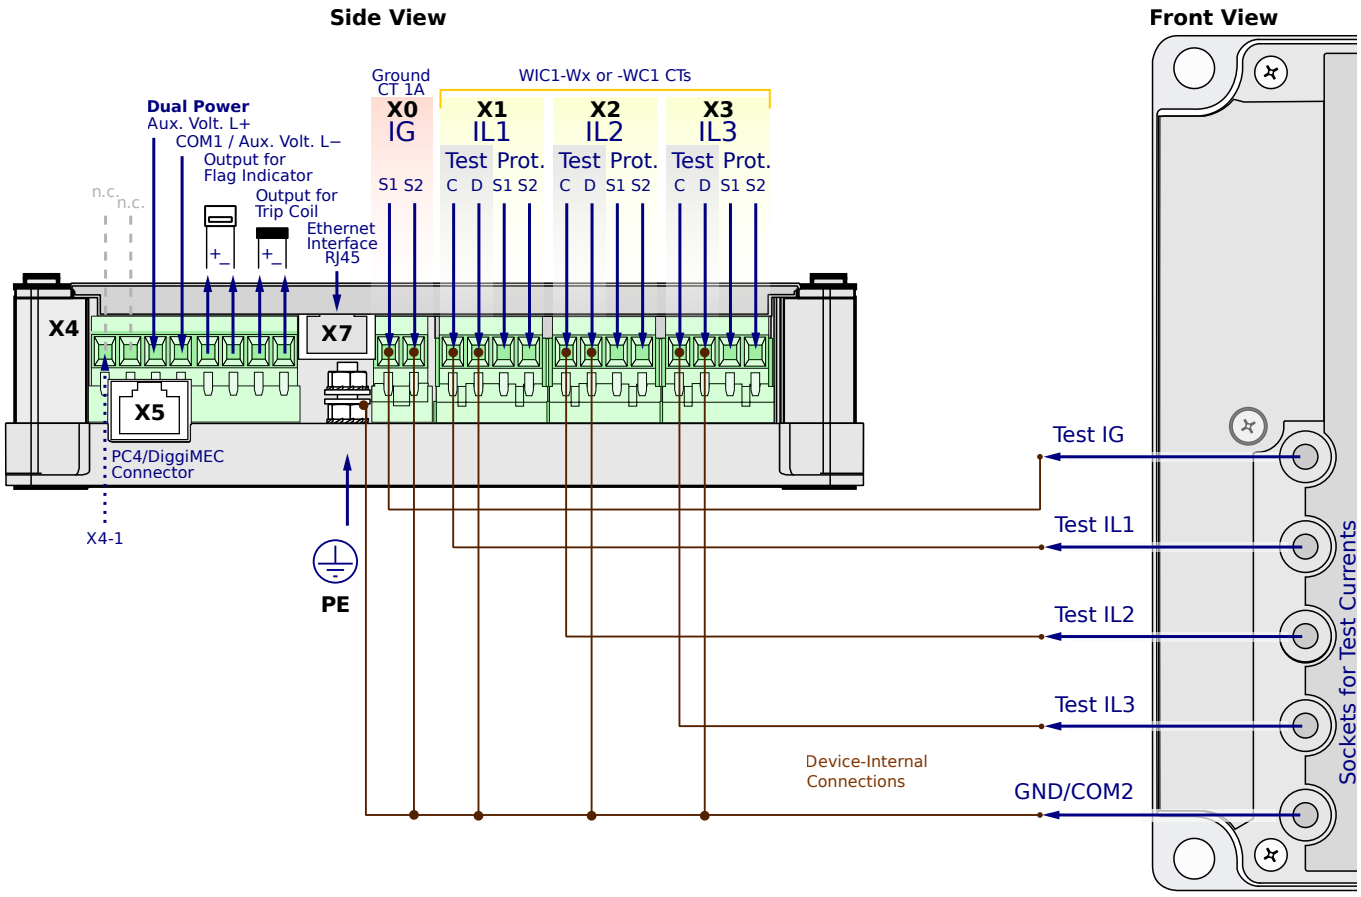


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1SL0

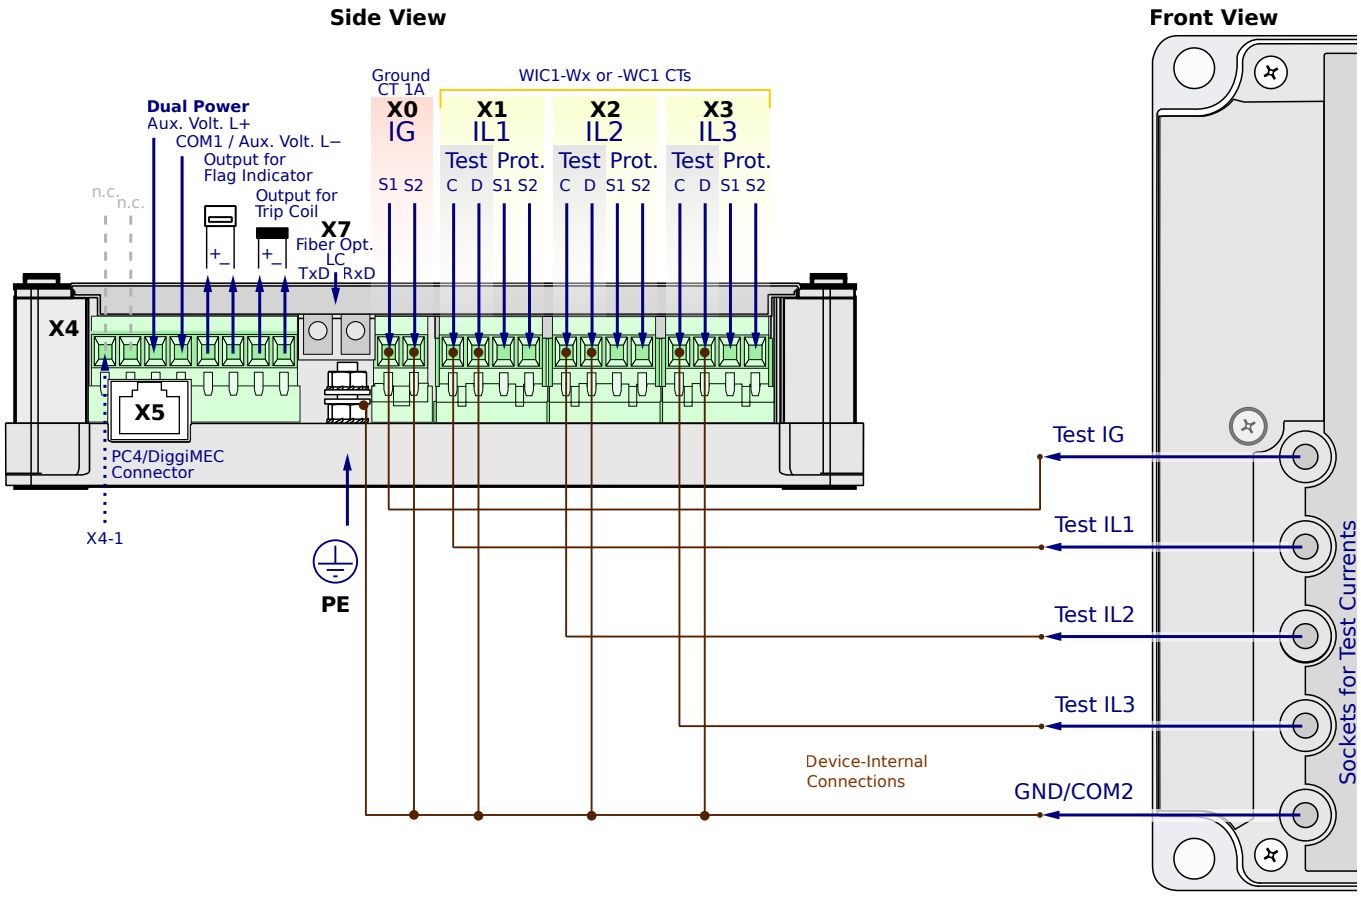


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1SLH

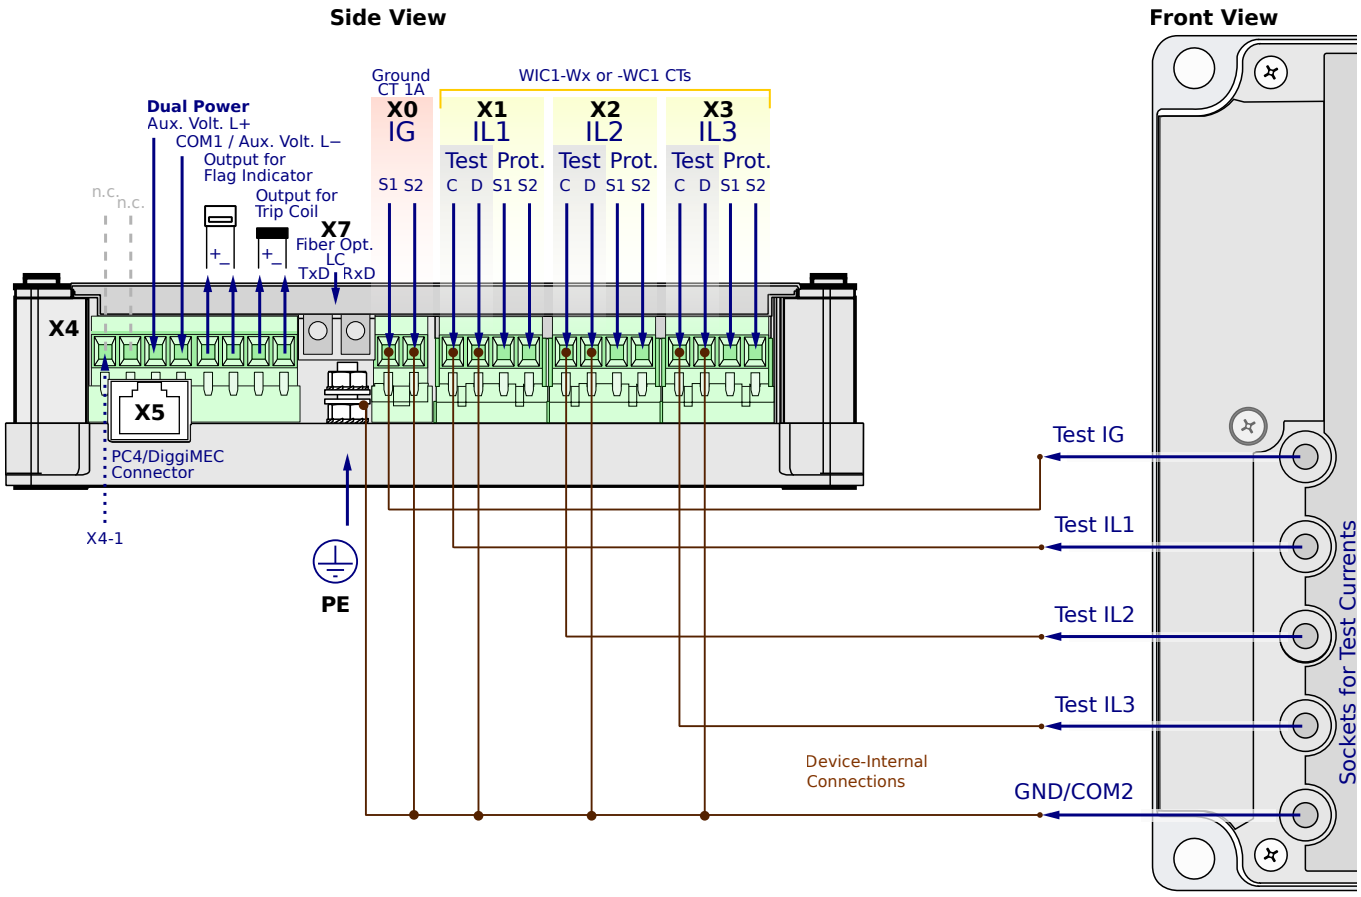


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1AA0

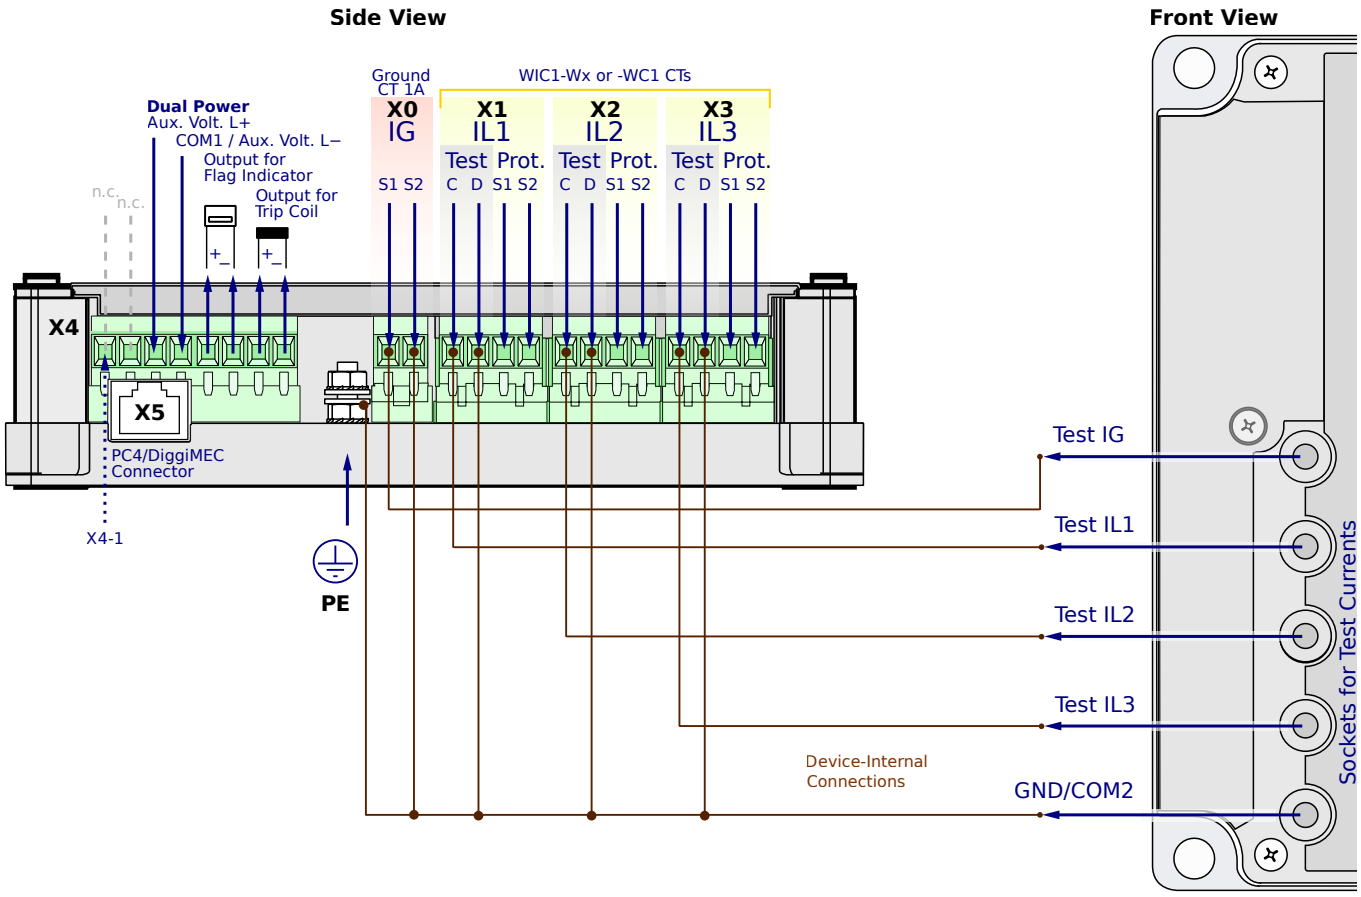


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1AAH

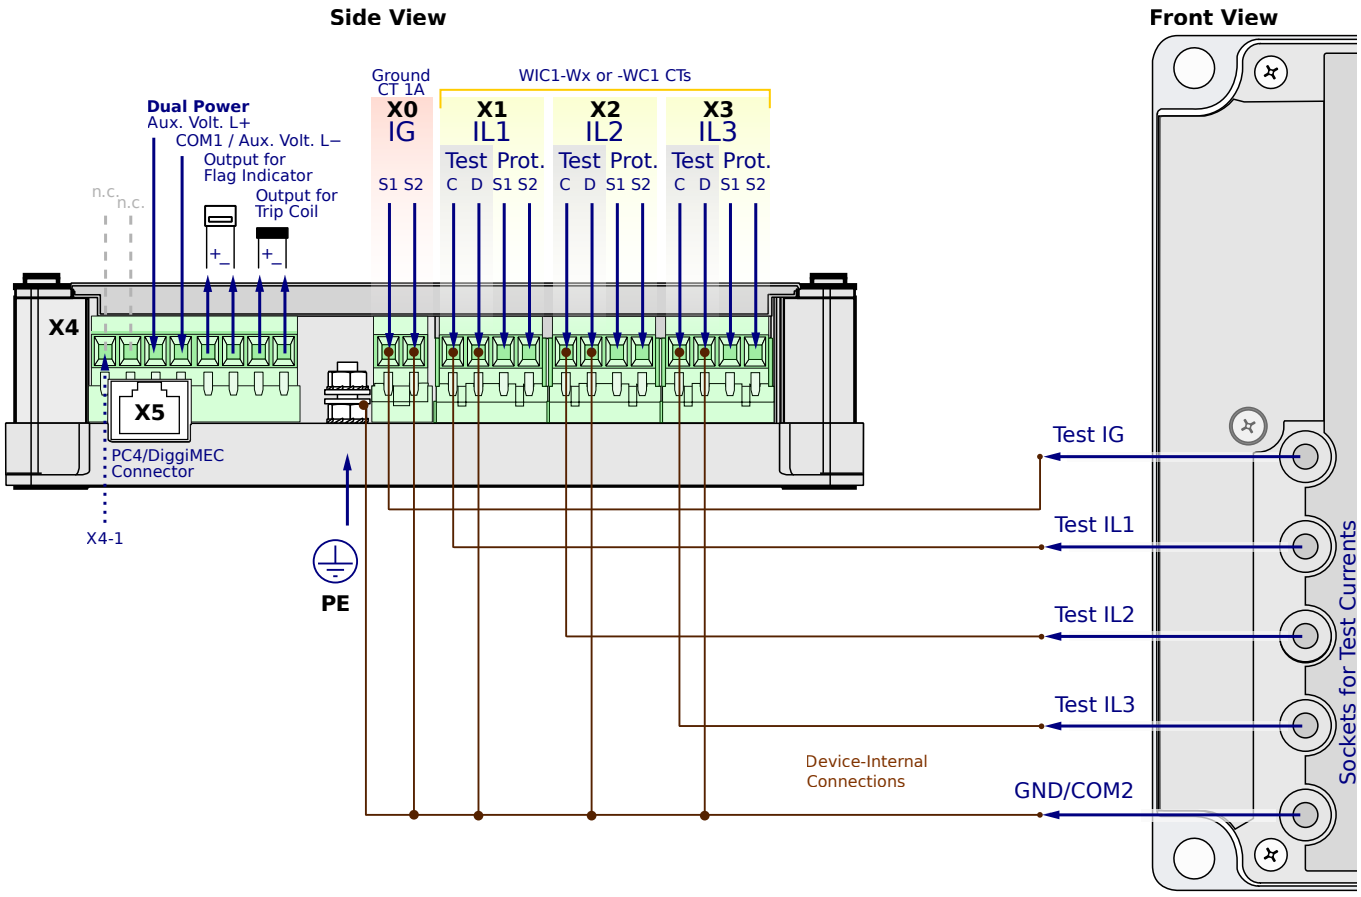


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1AB0

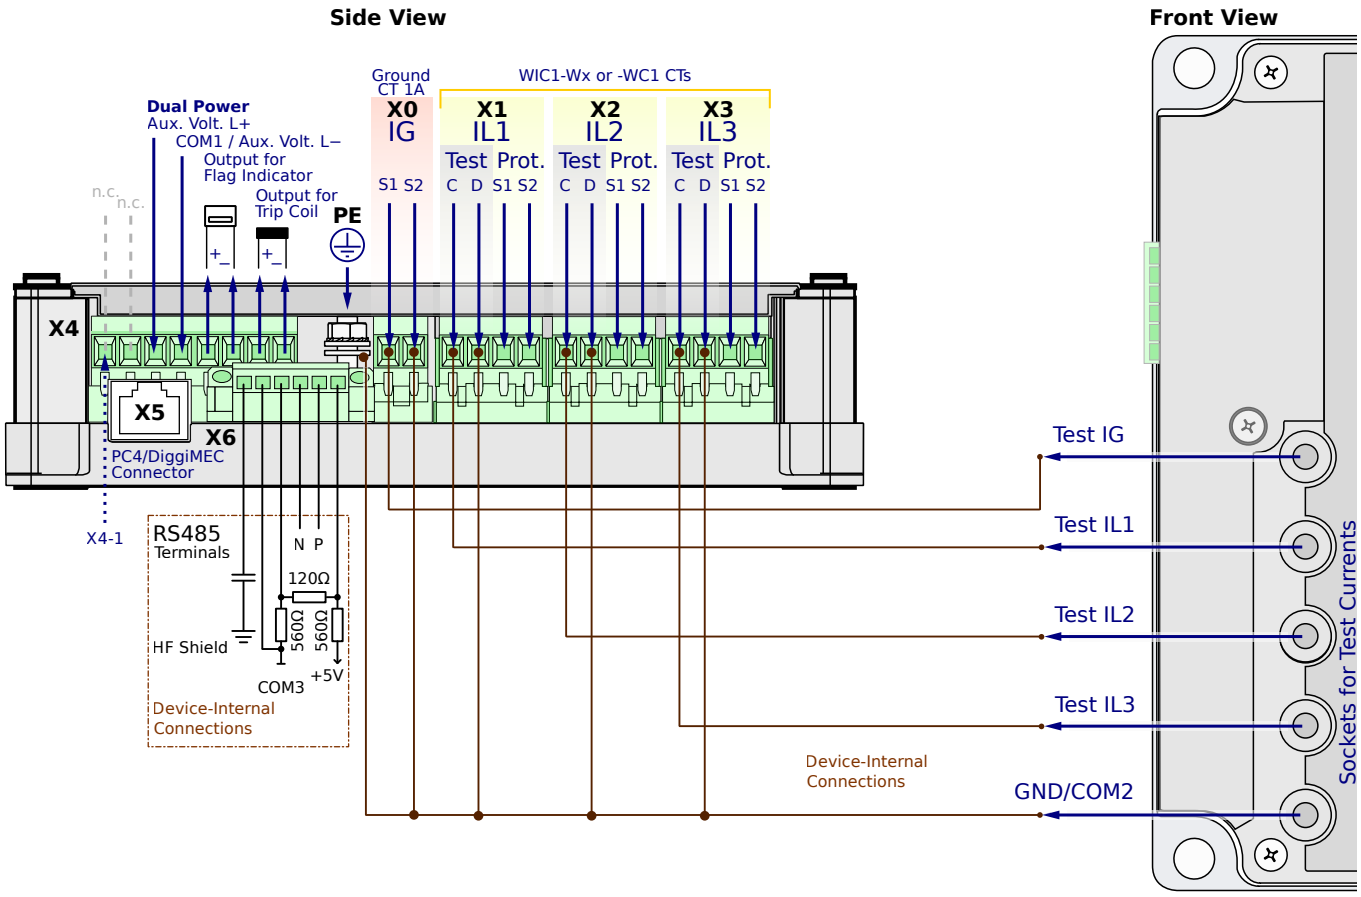


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1ABH

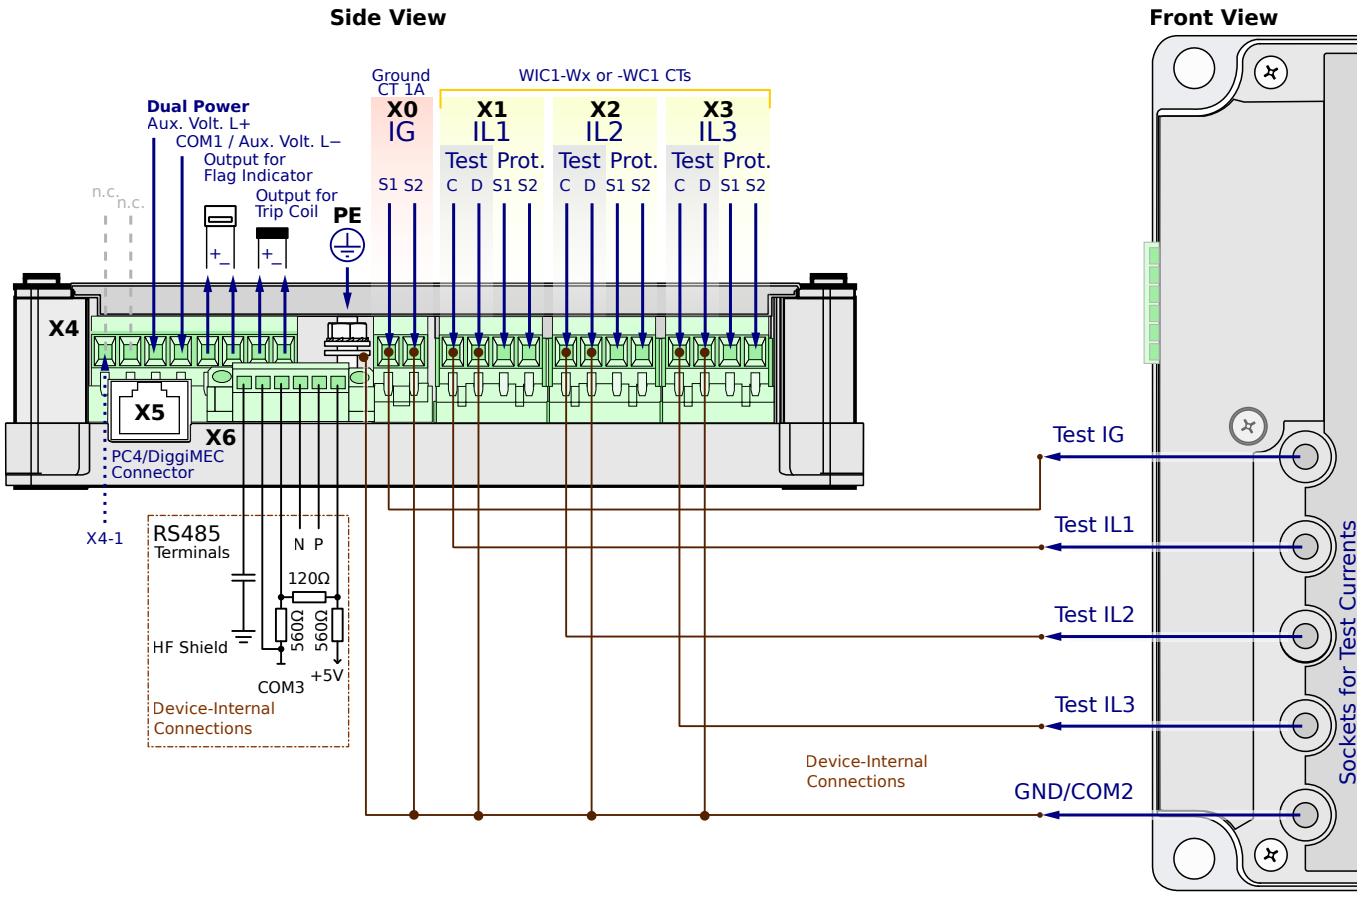


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1AC0

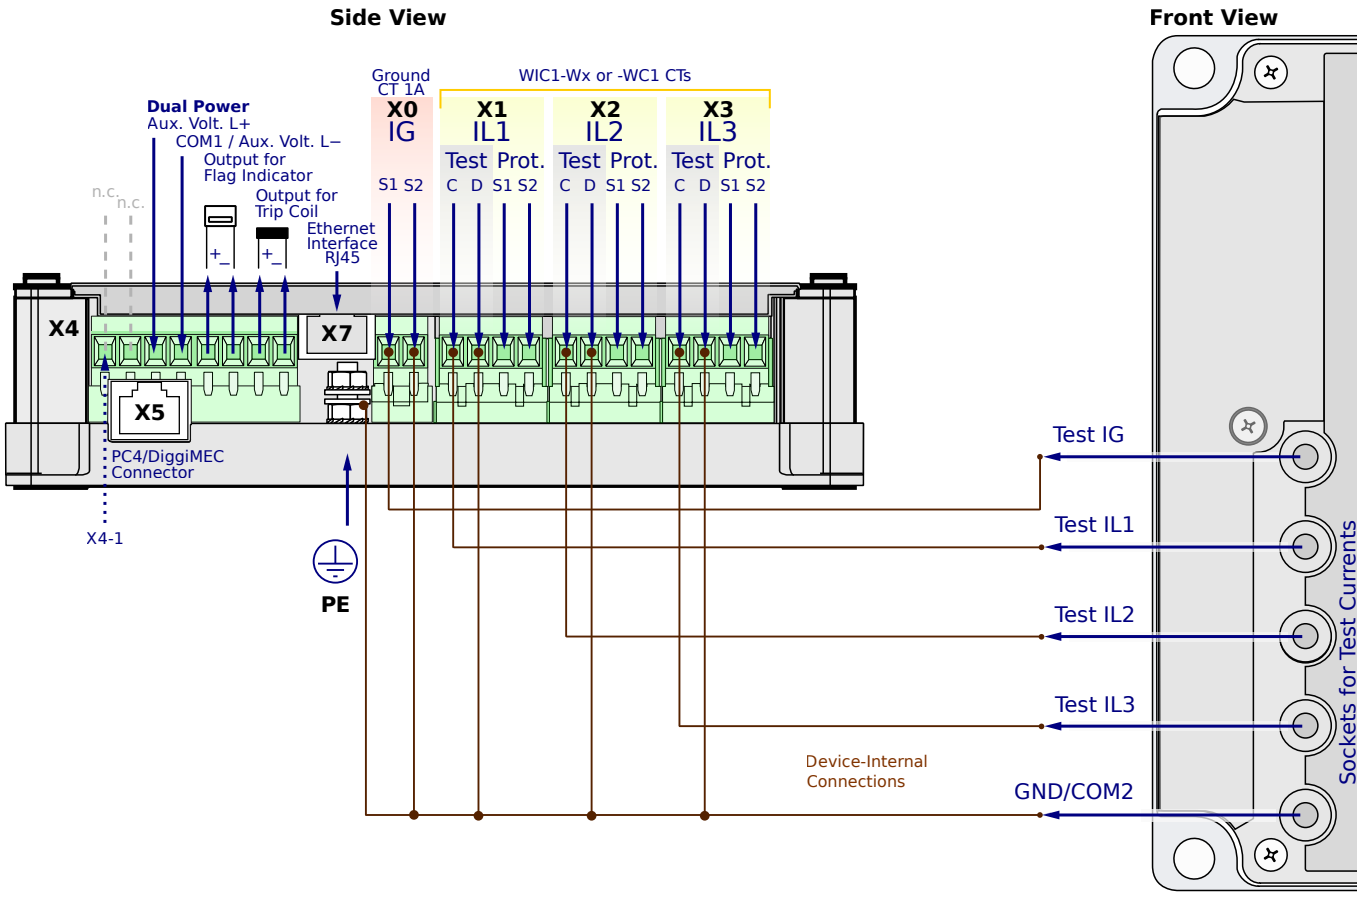


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1ACH

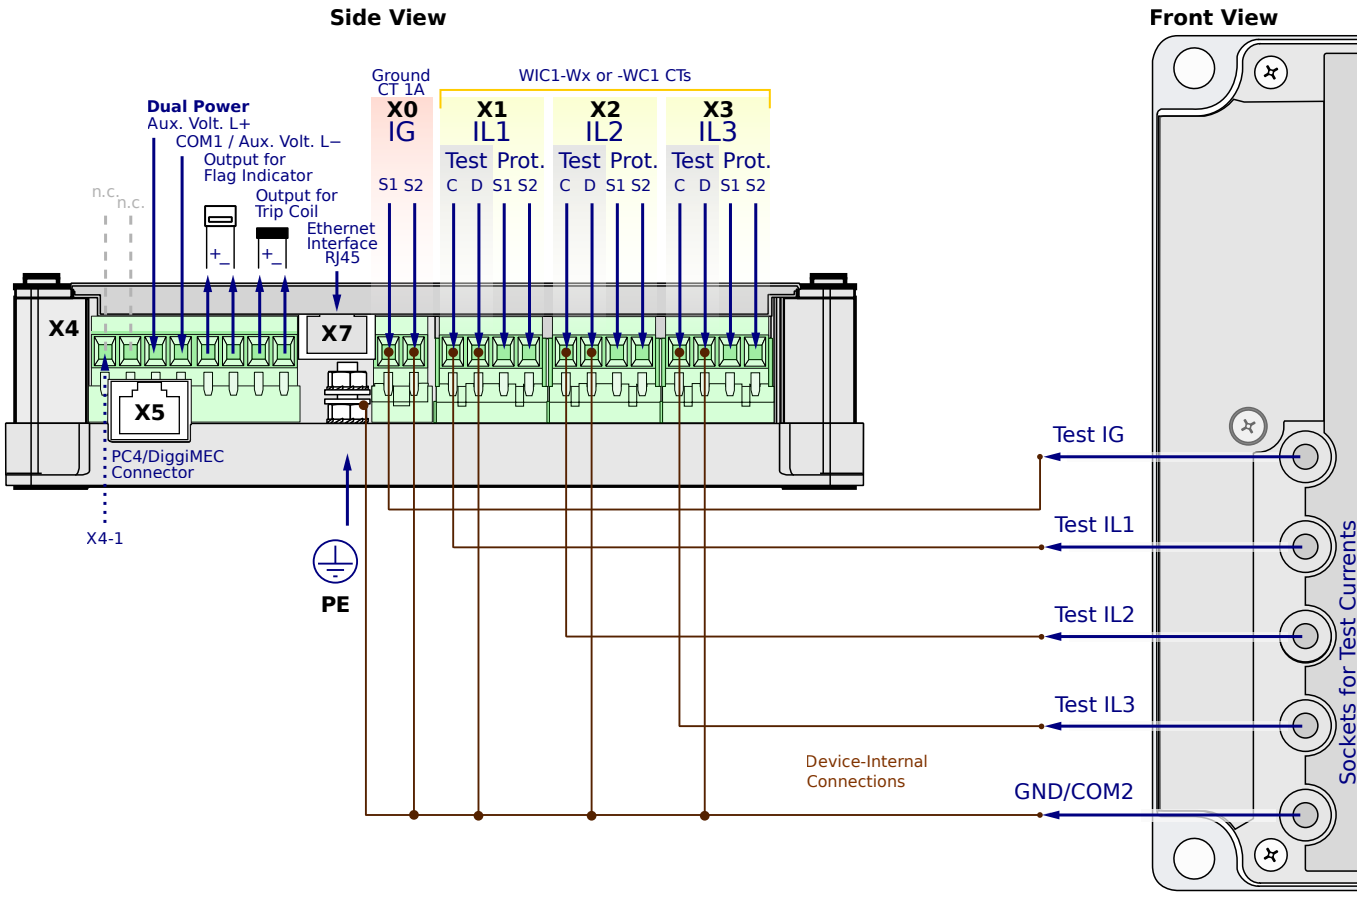


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1AL0

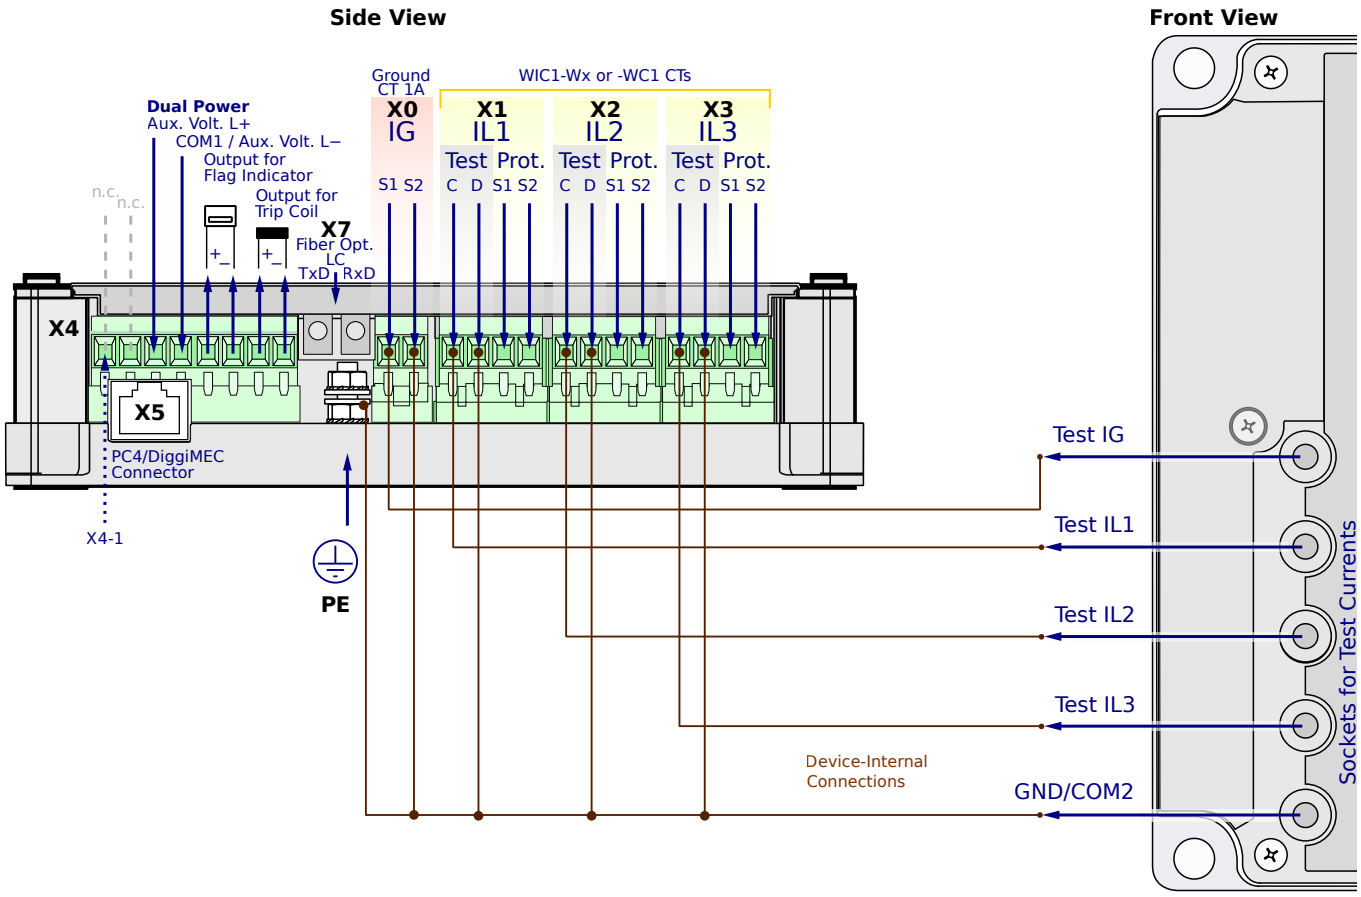


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1ALH

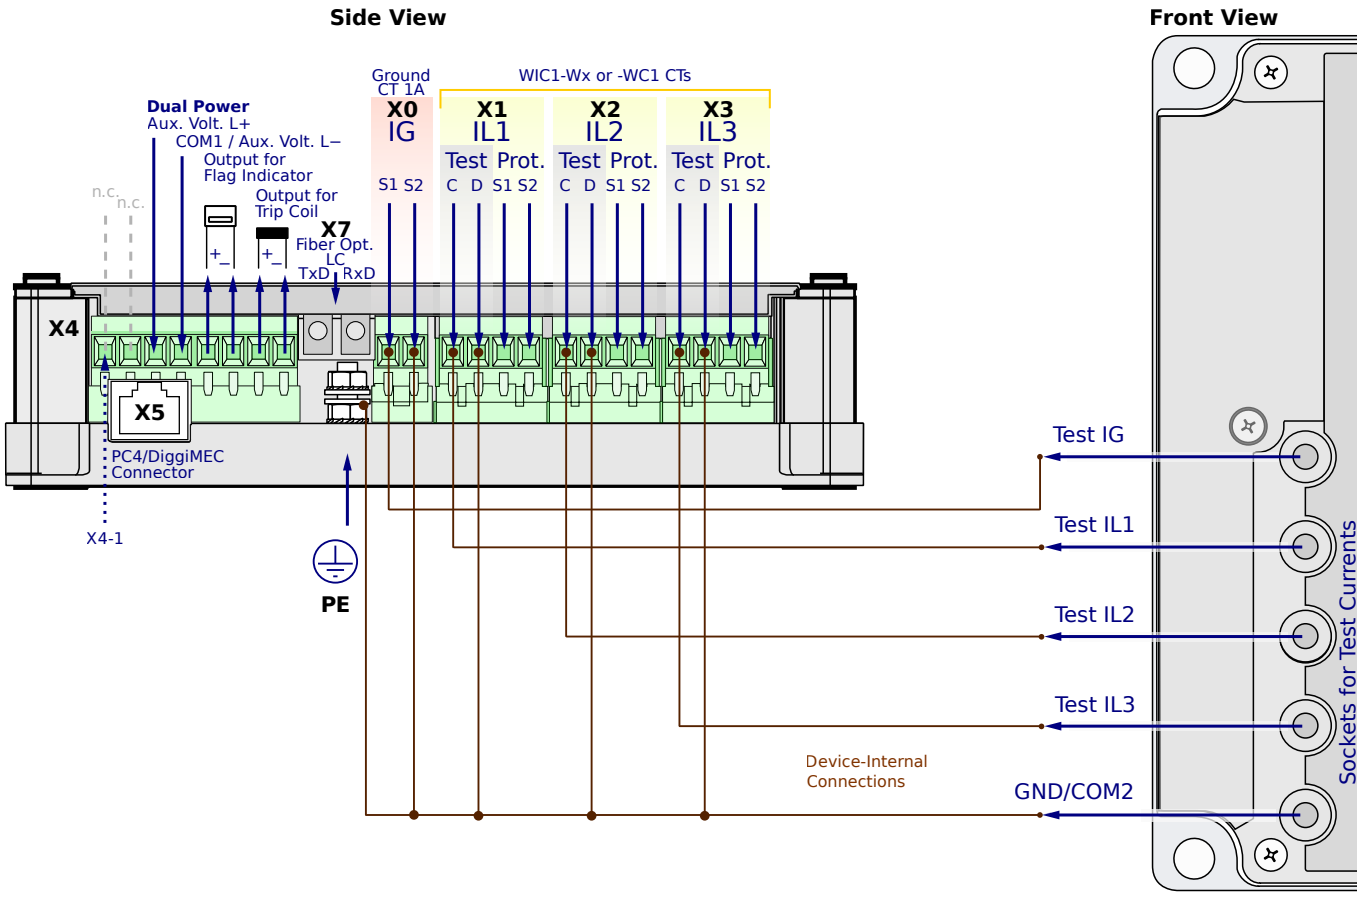


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1PA0

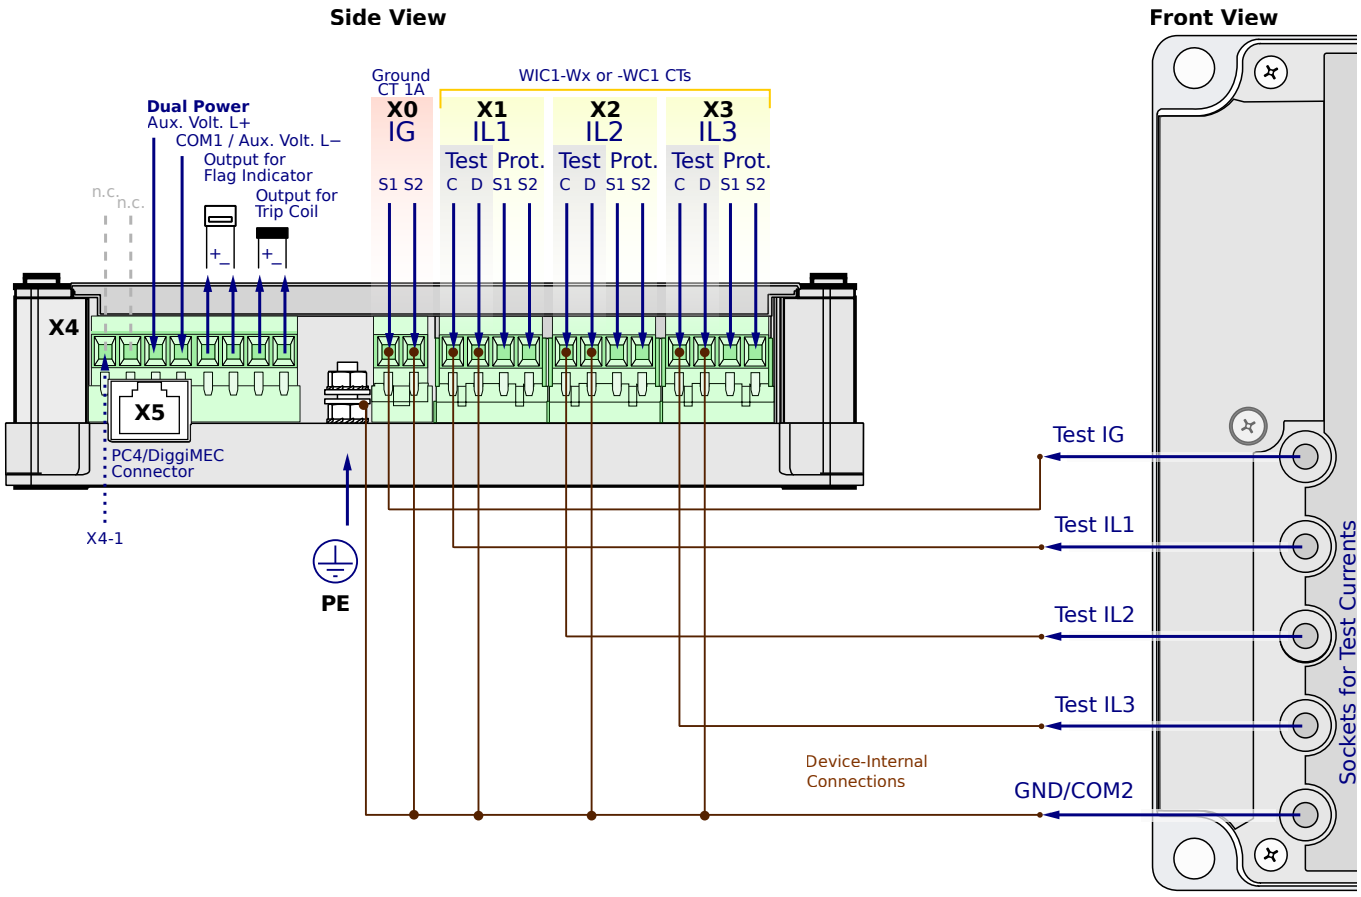


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1PAH

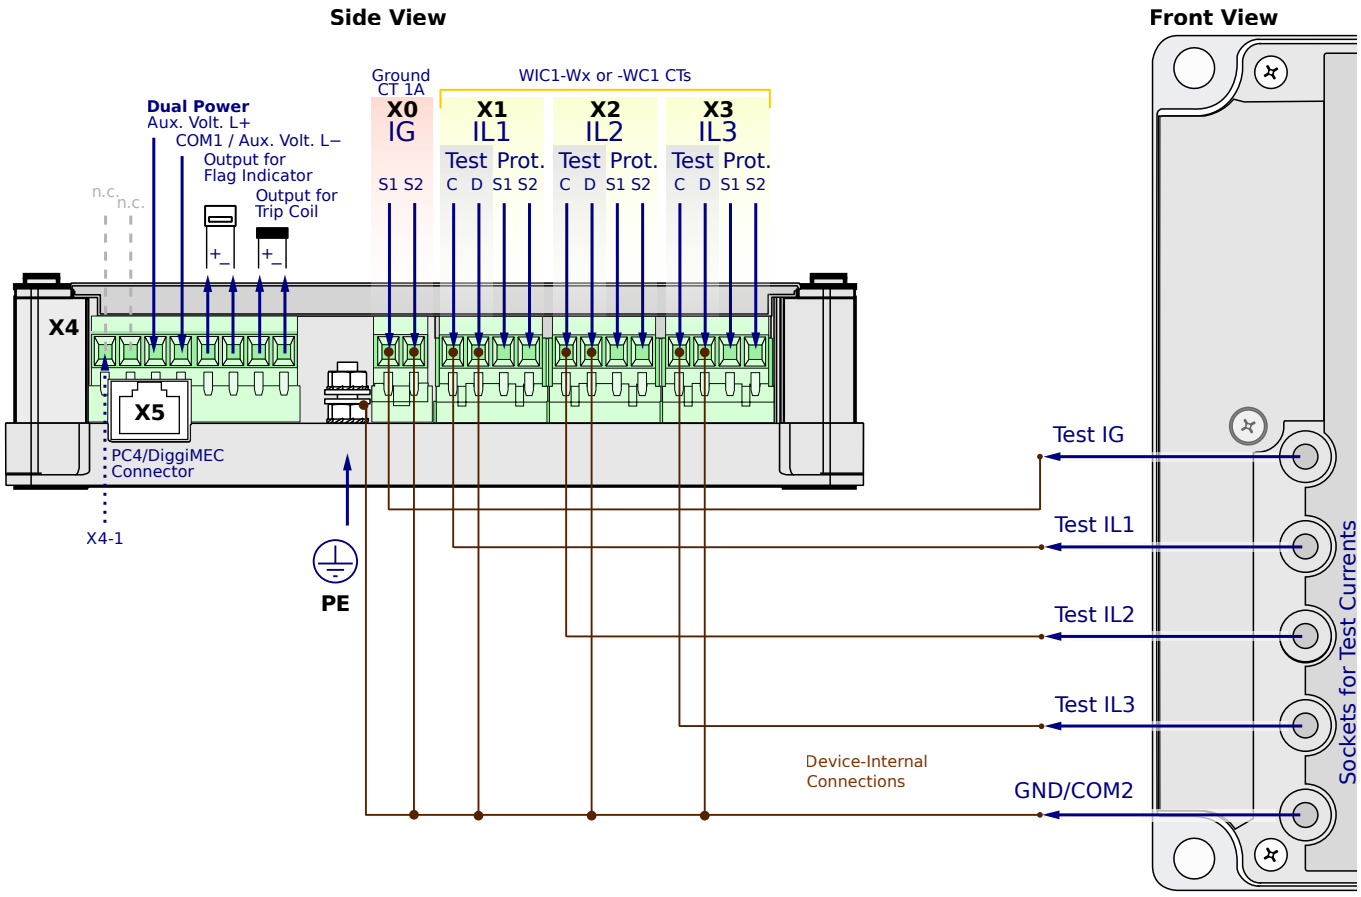


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM1PB0

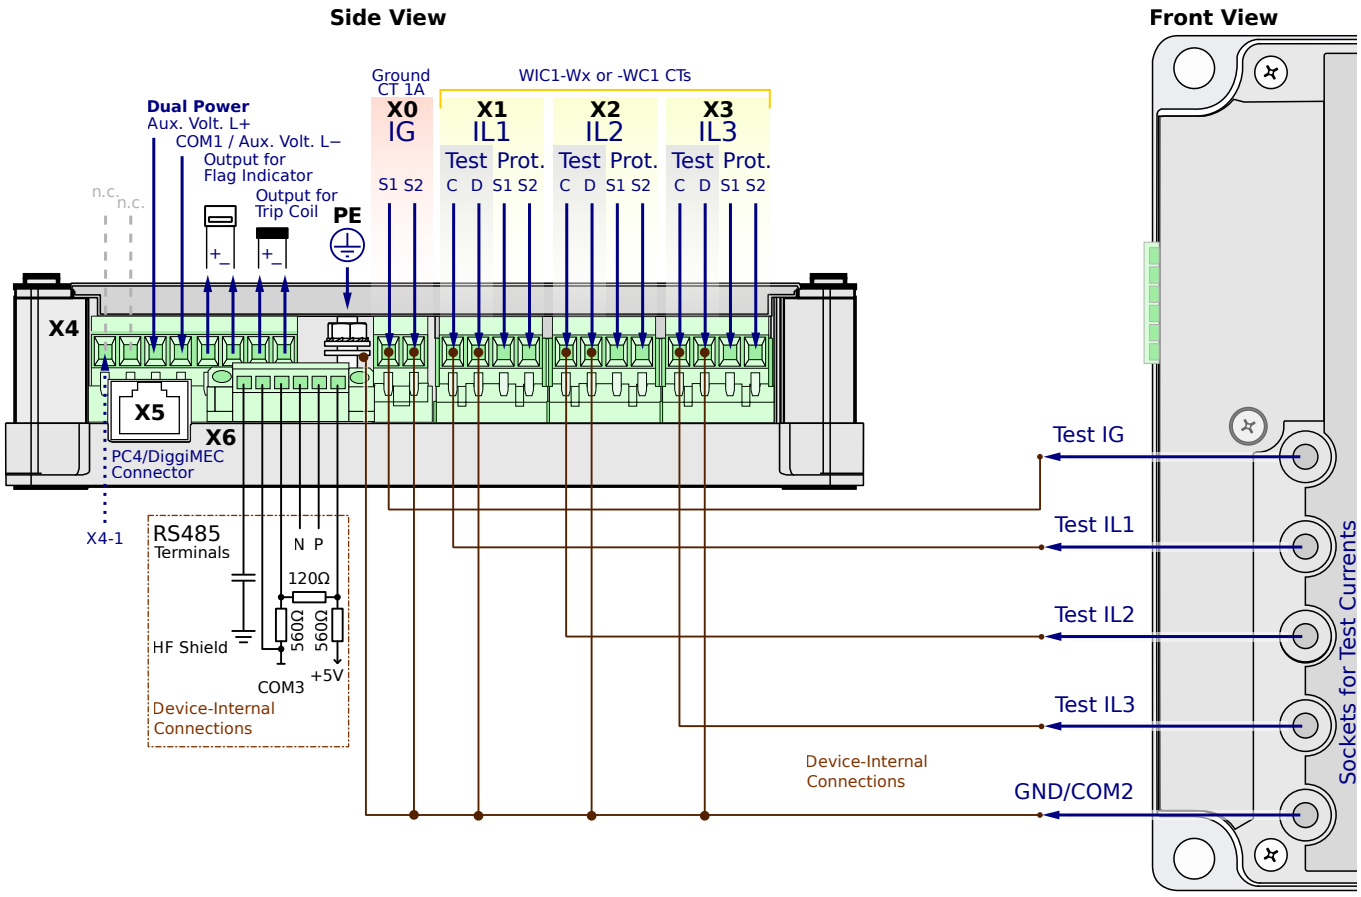


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1PBH

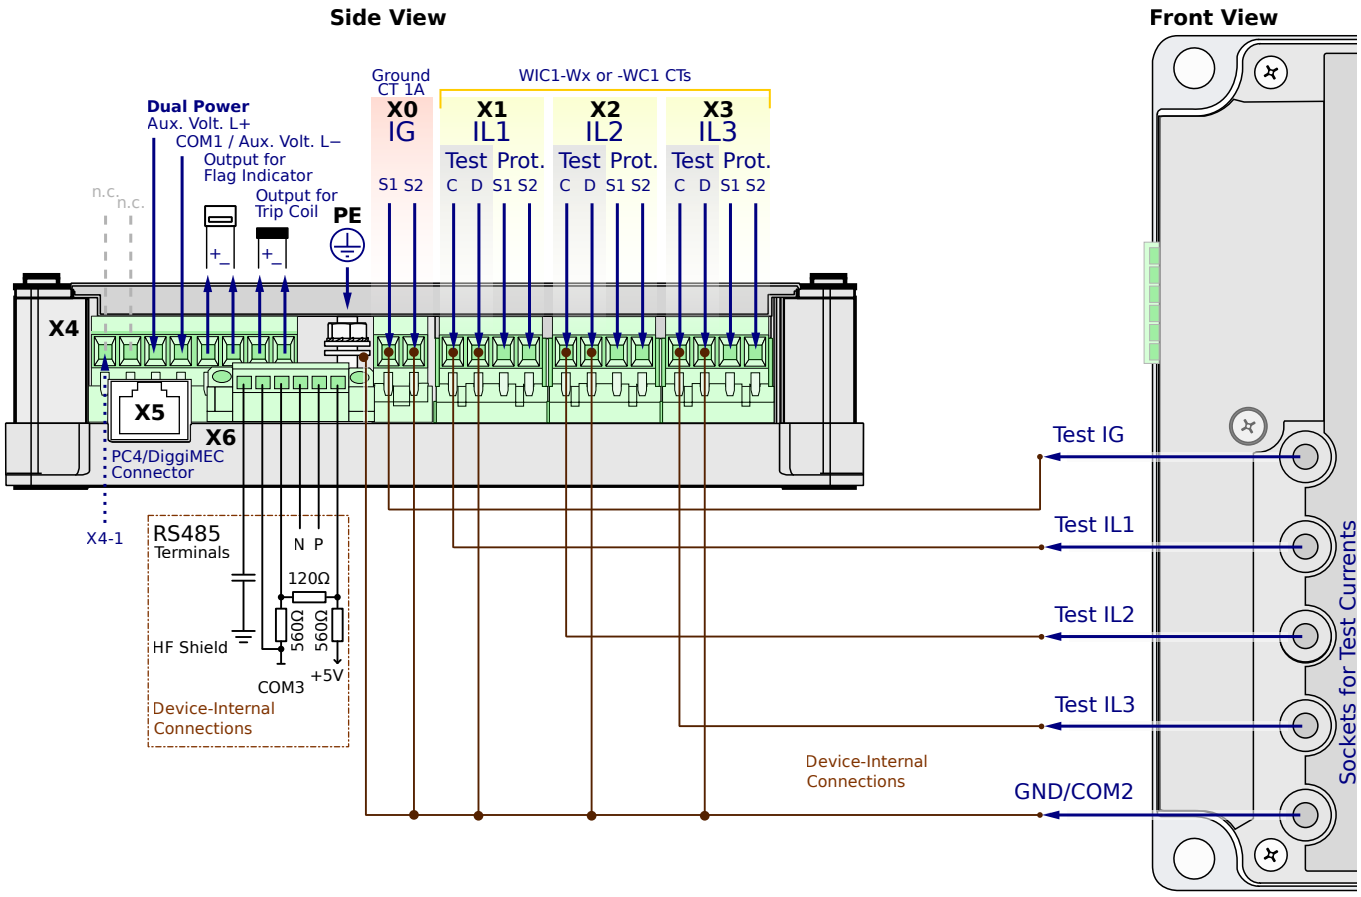


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM1PC0

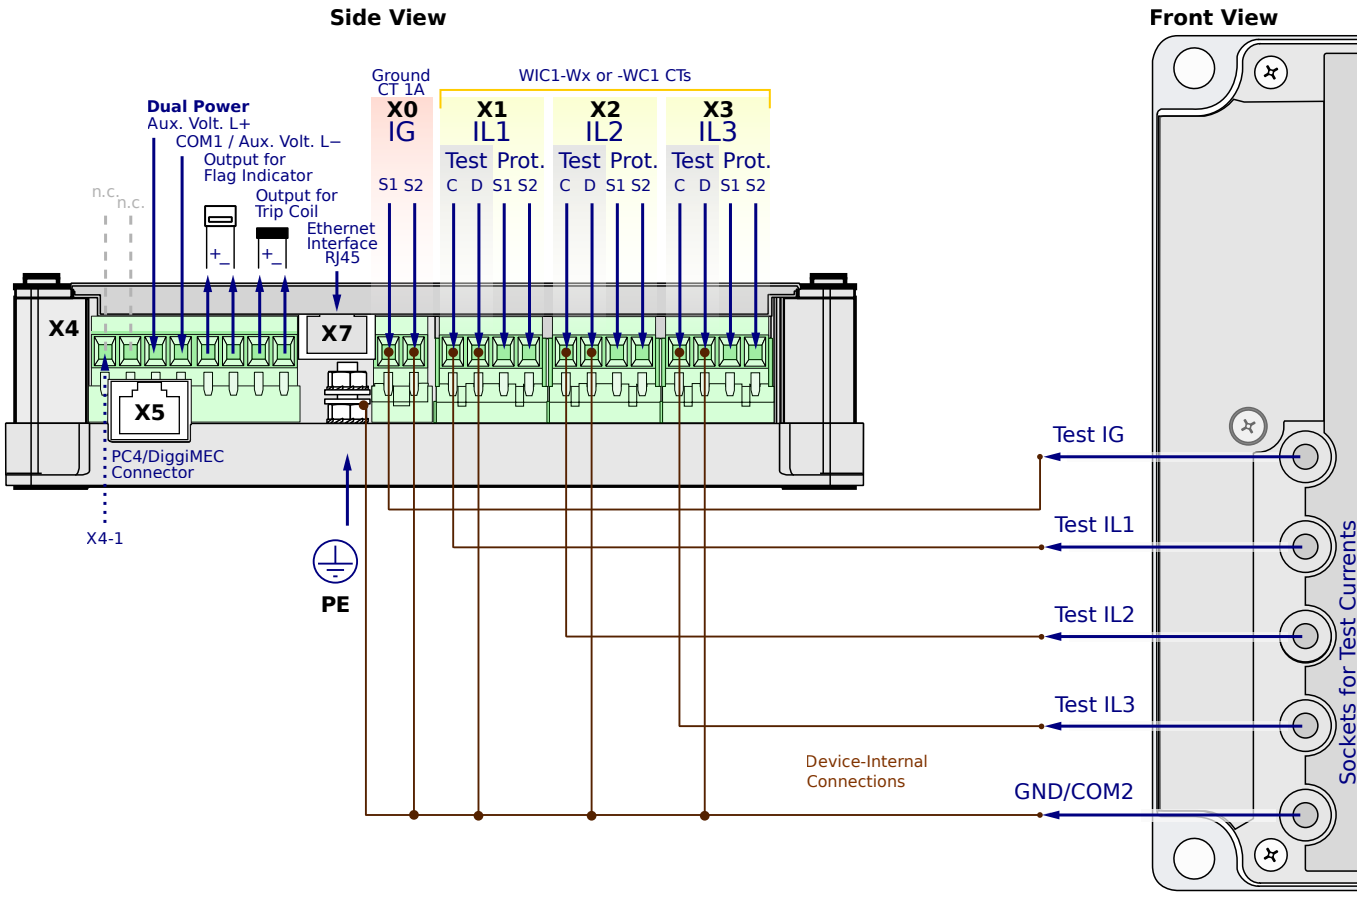


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1PCH

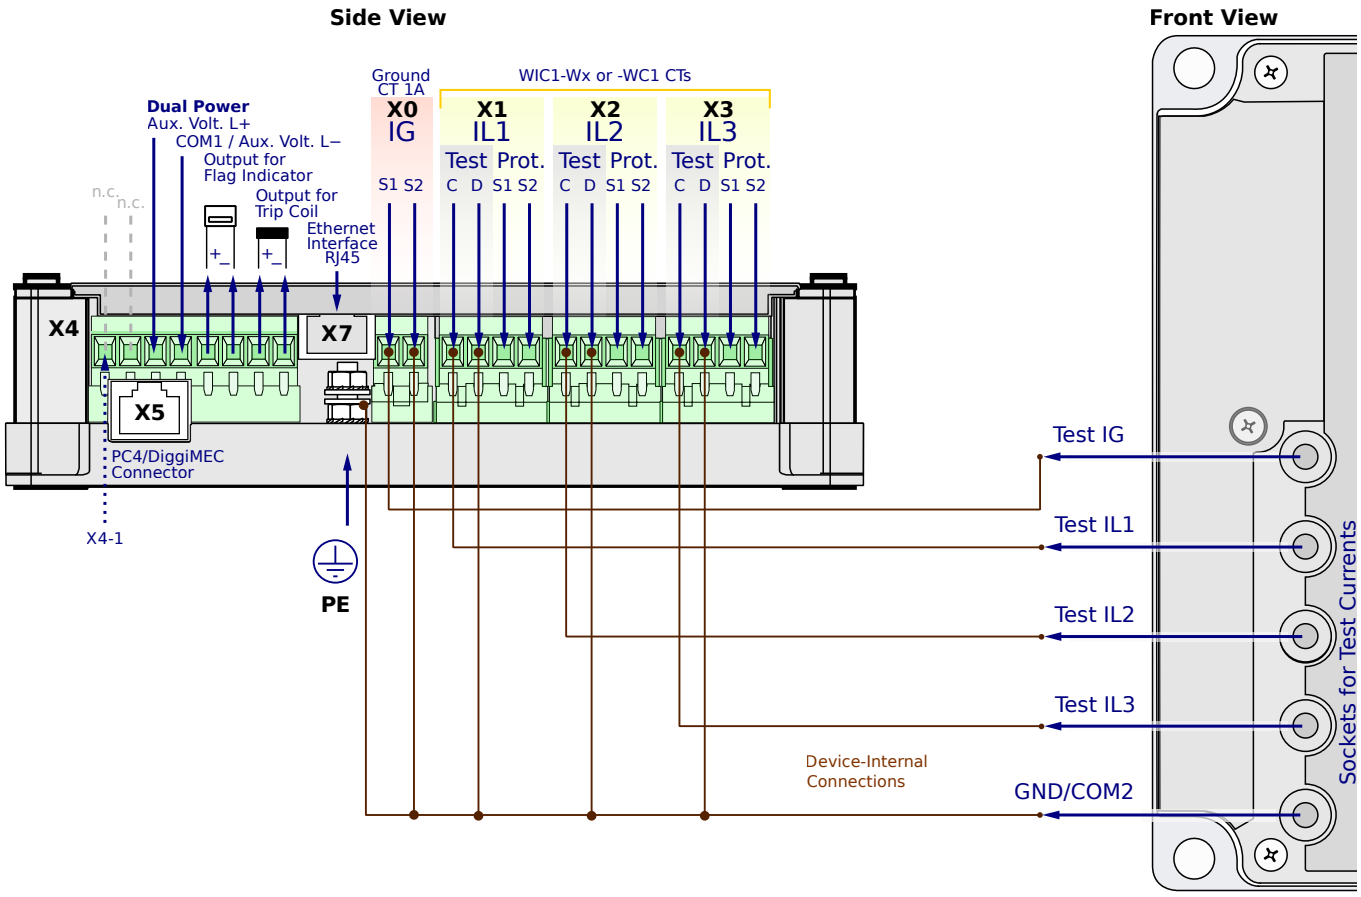


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM1PL0

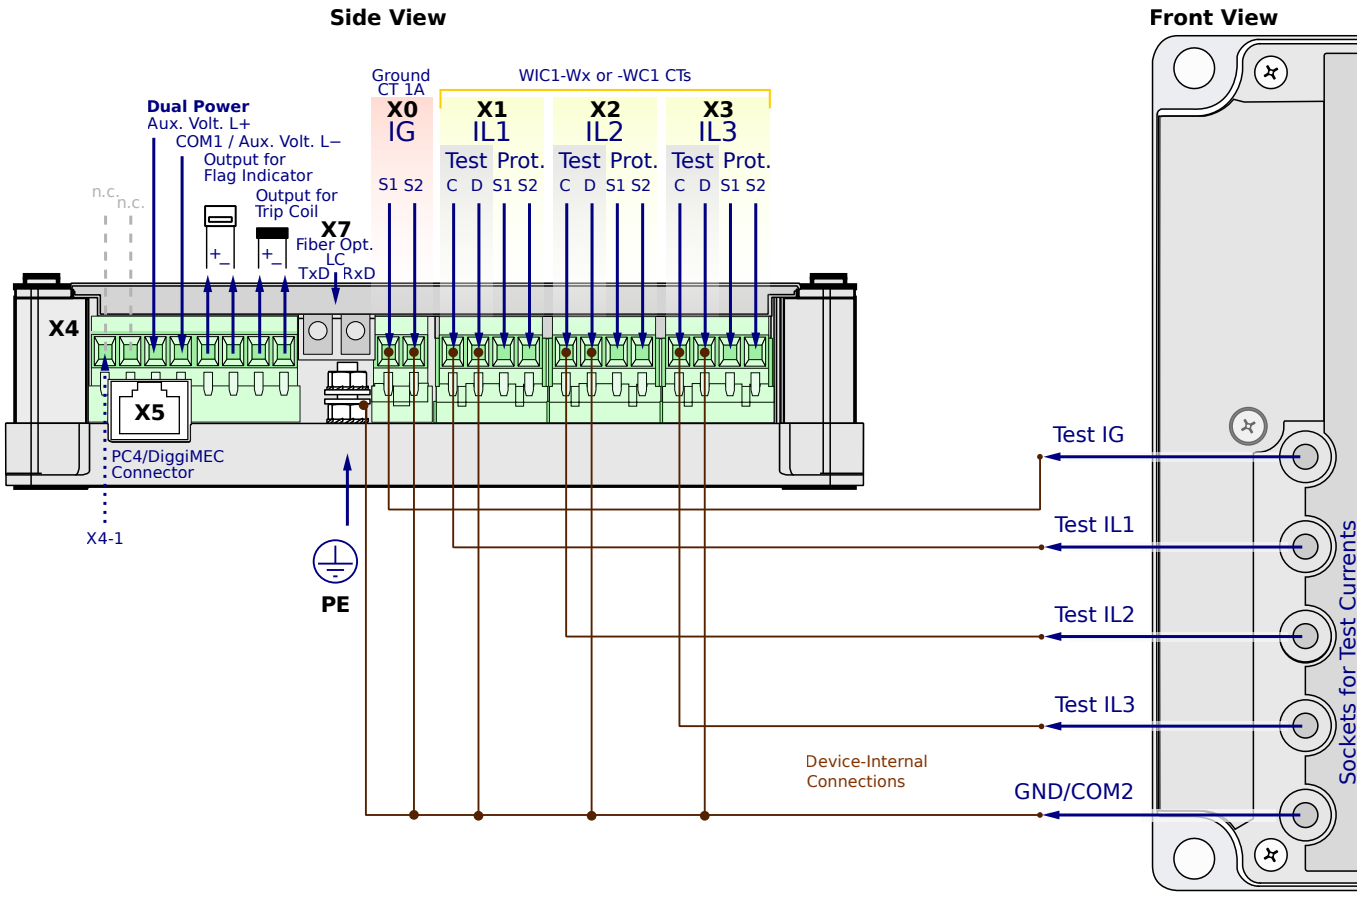


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM1PLH

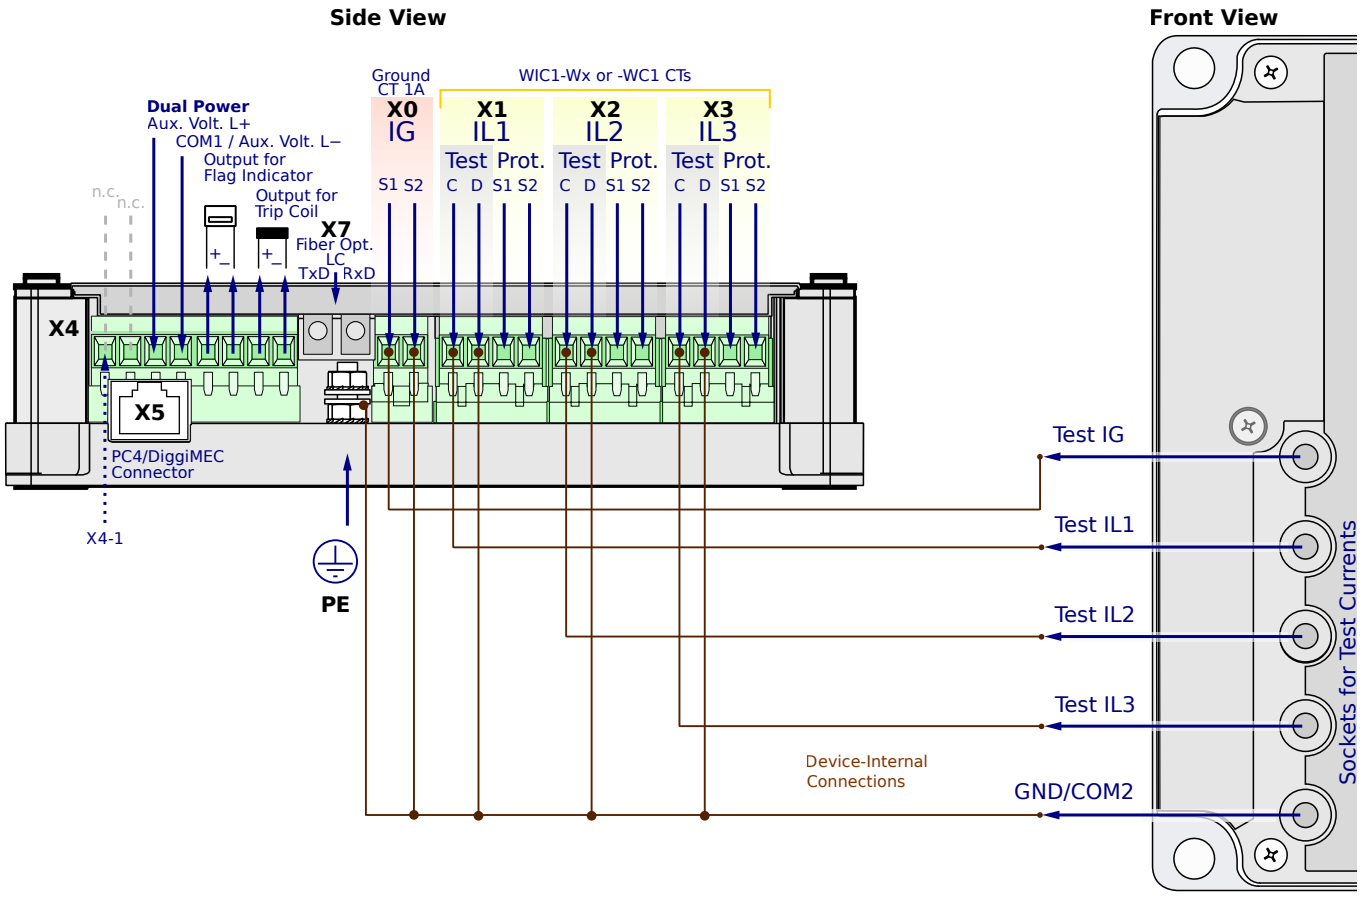


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2SA0

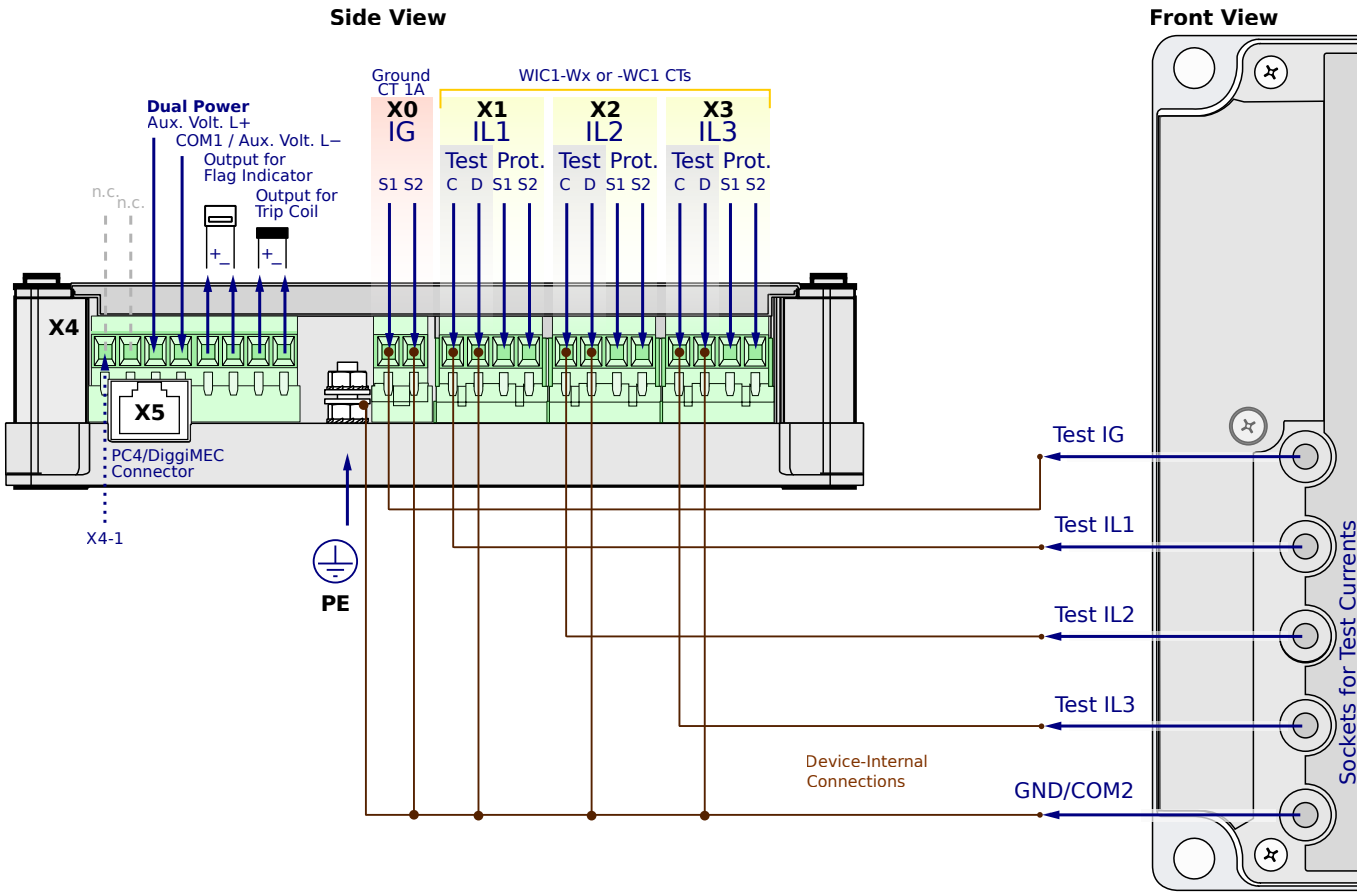


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2SAH

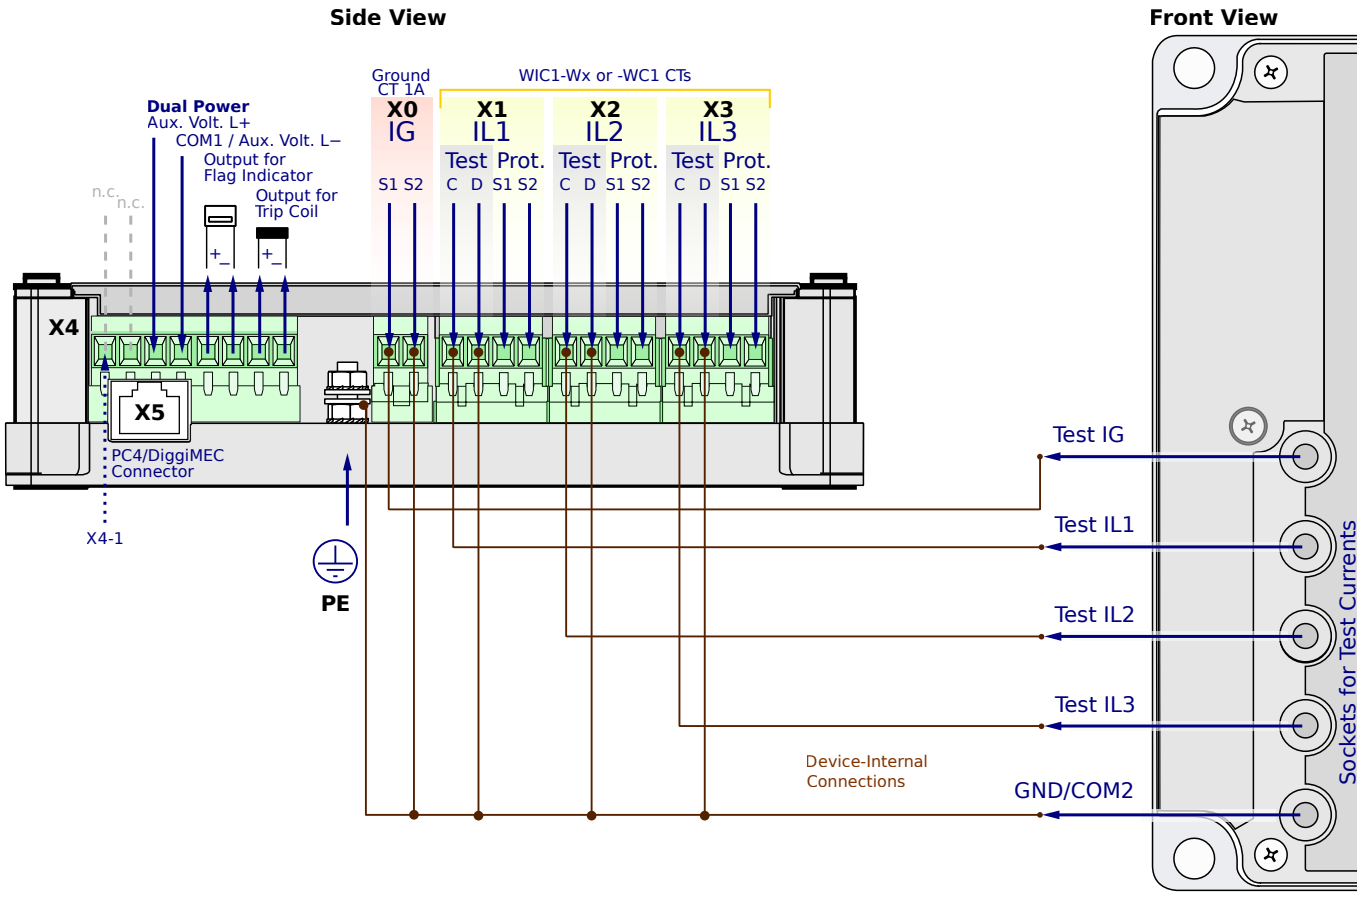


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2SB0

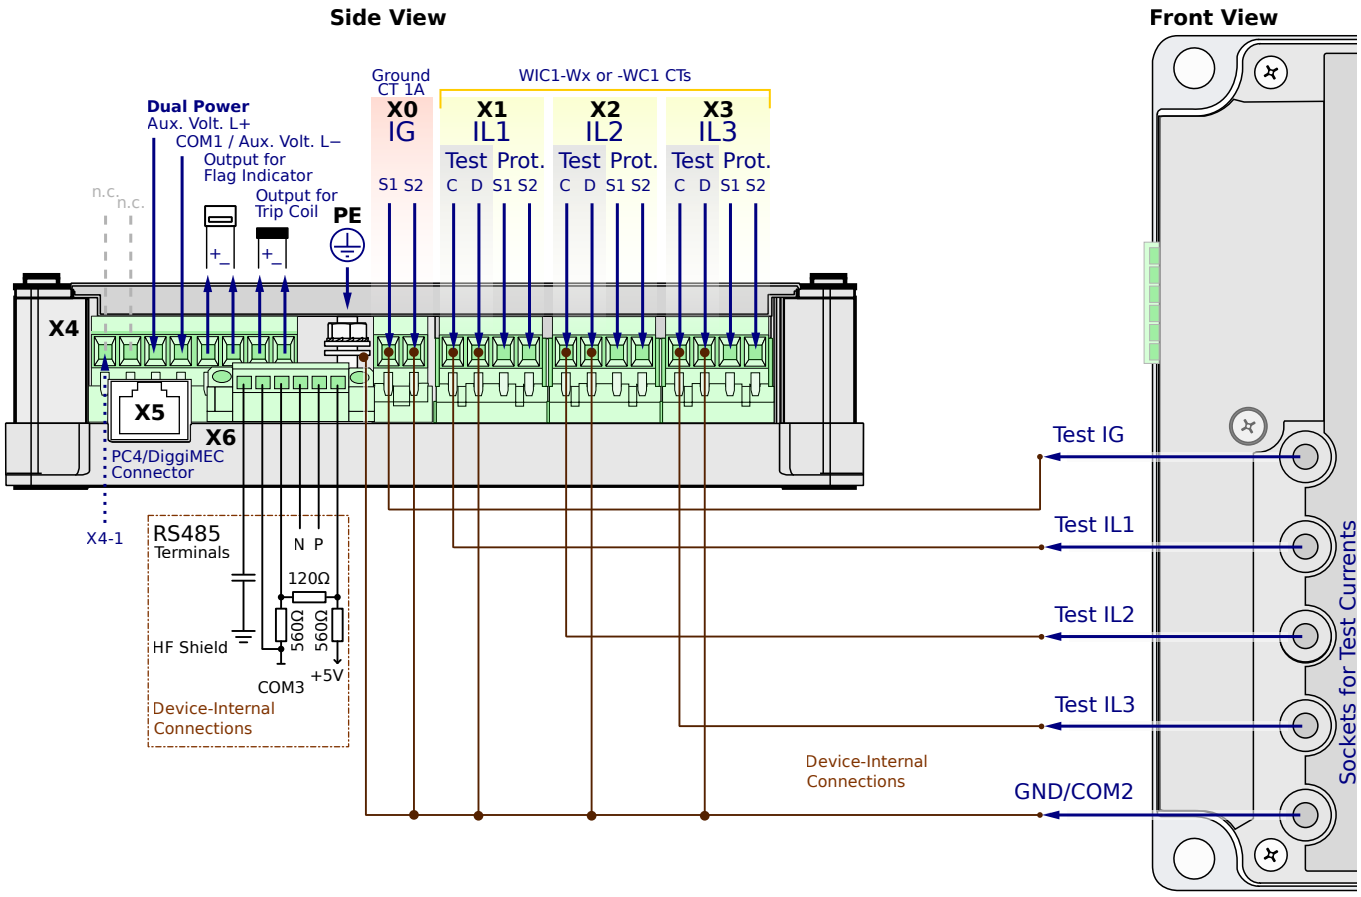


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2SBH

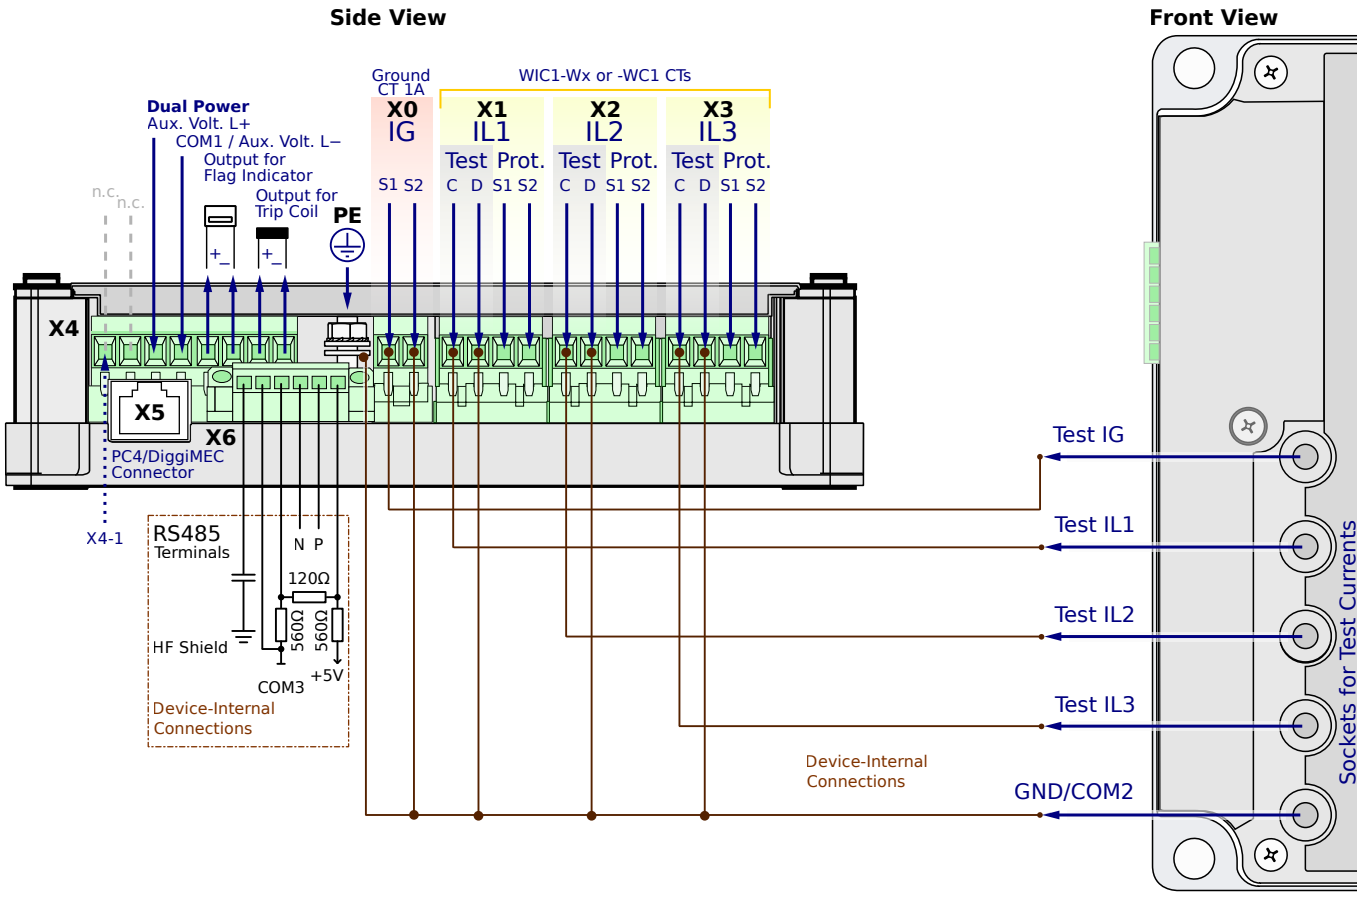


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2SC0

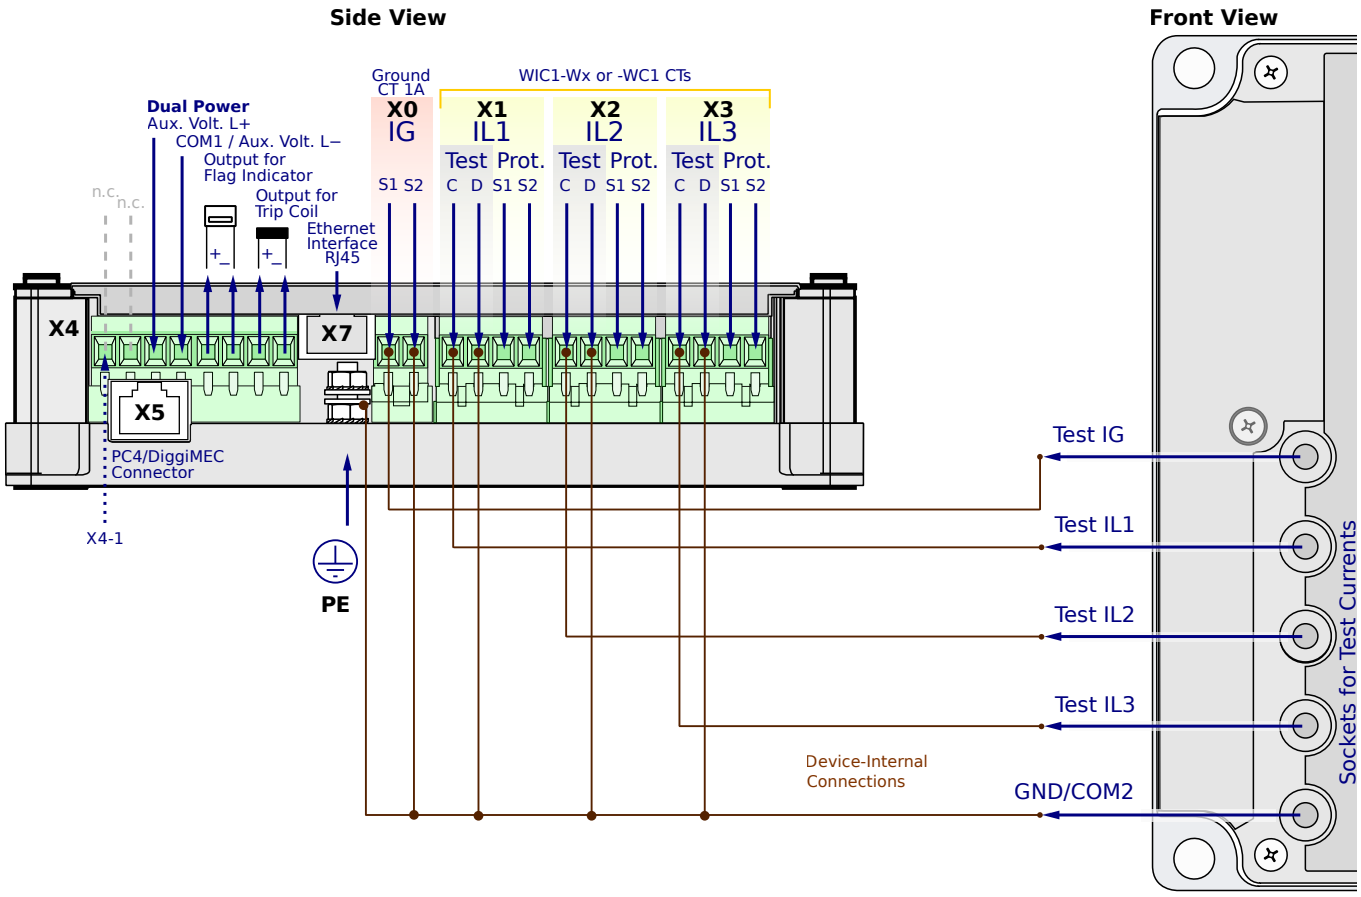


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2SCH

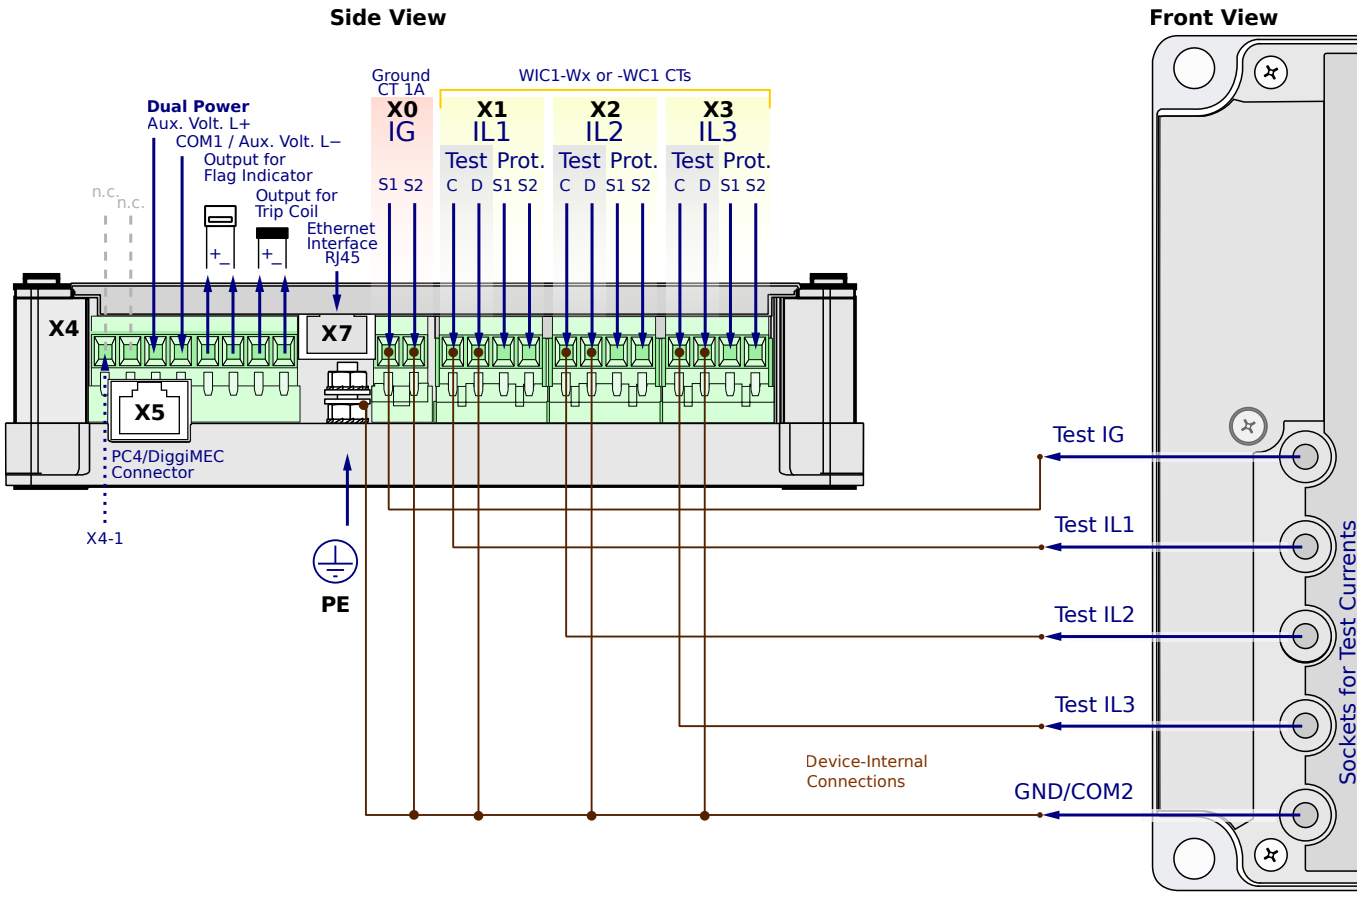


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2SL0

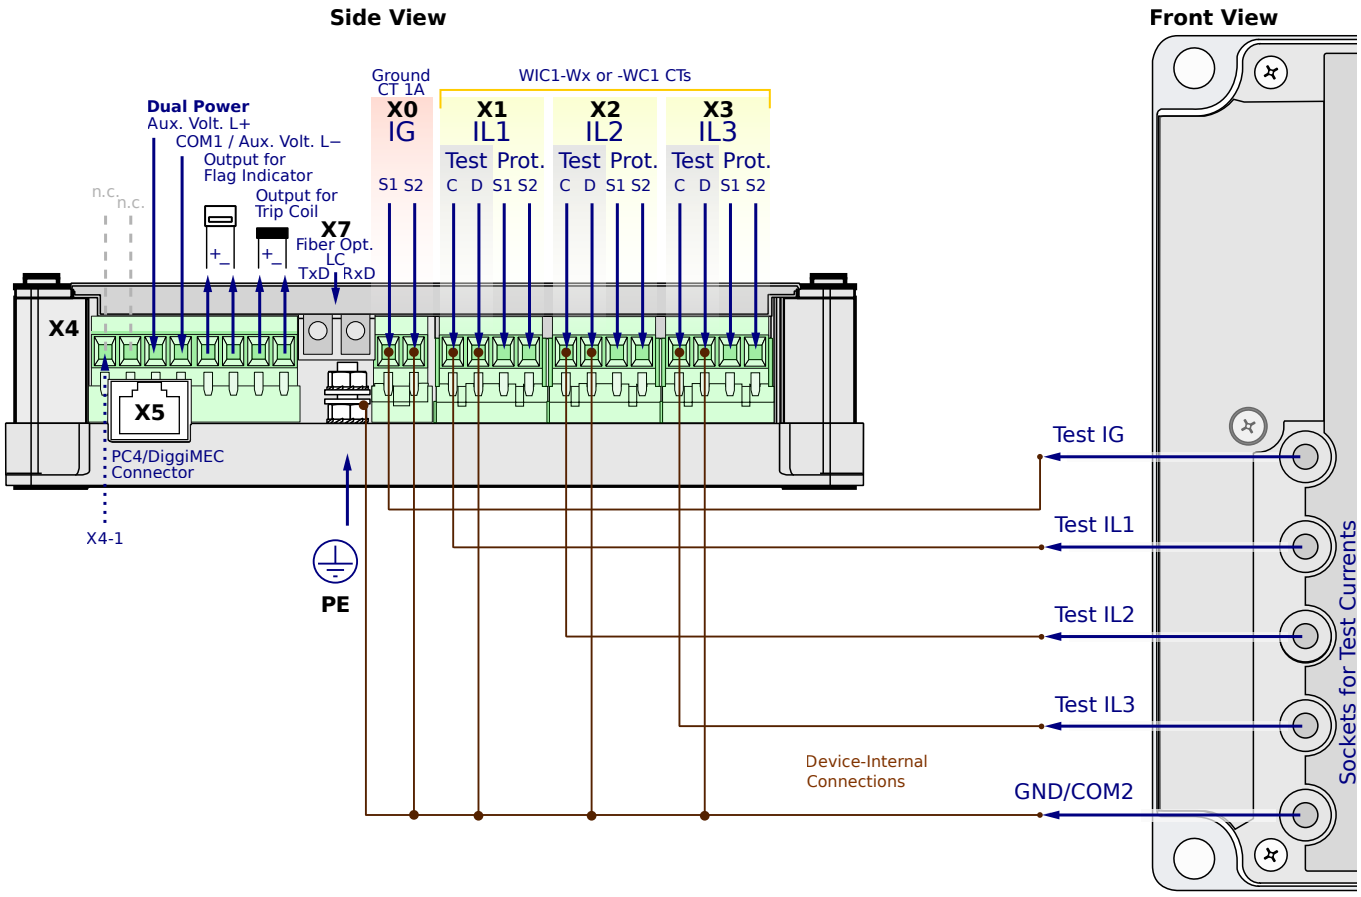


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2SLH

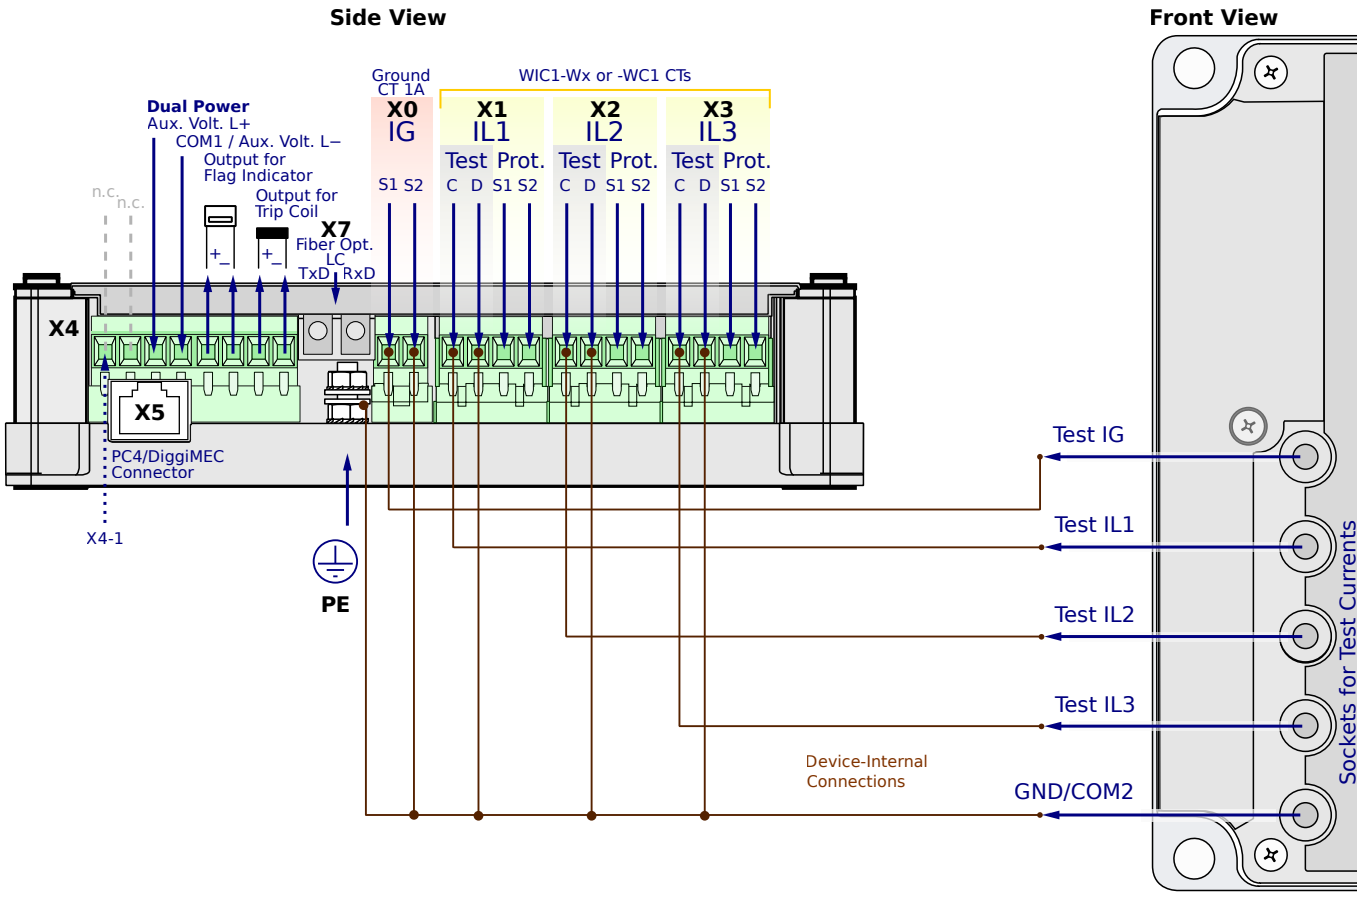


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2AA0

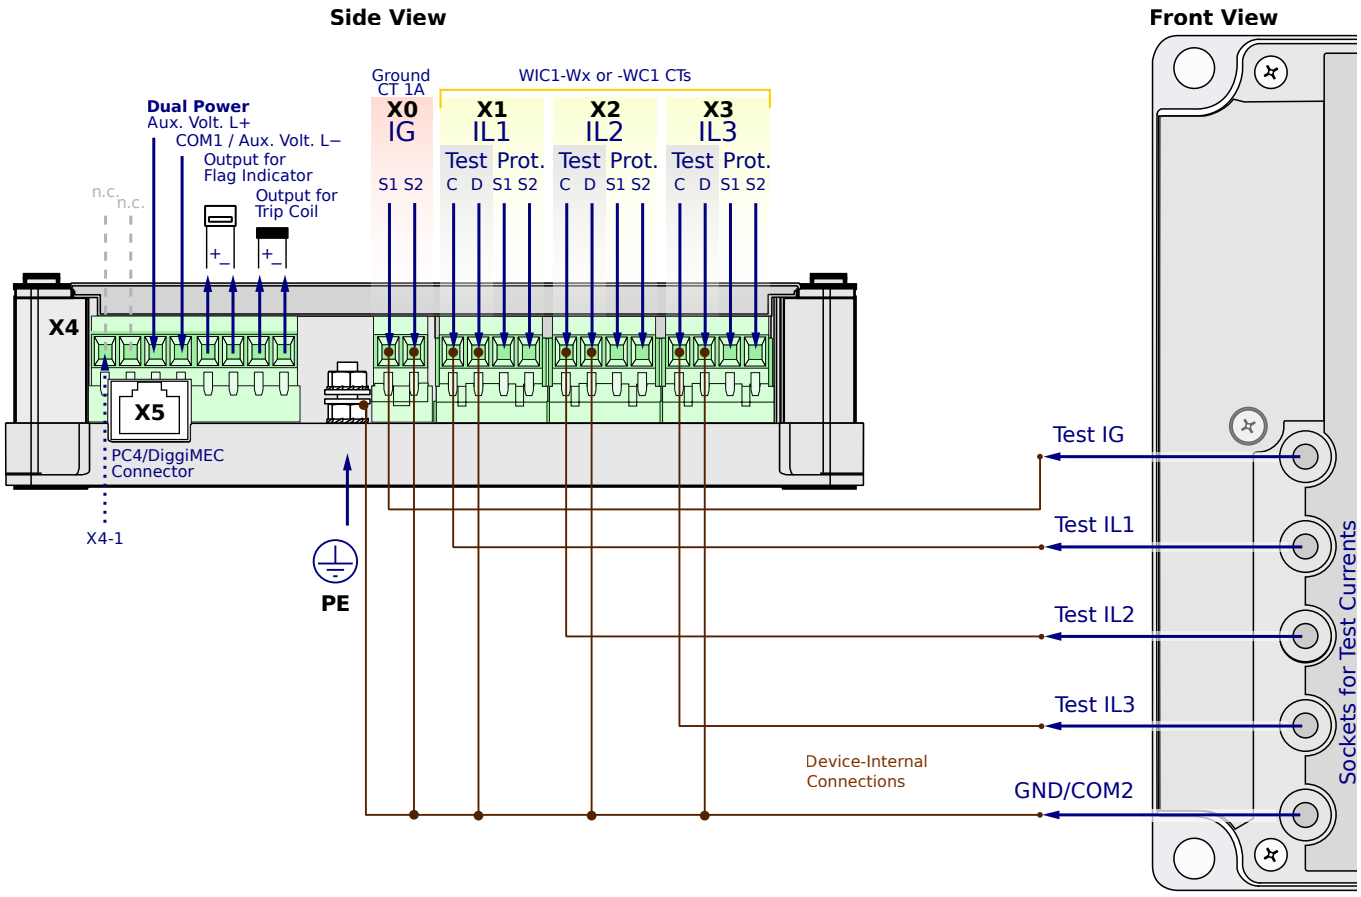


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2AAH

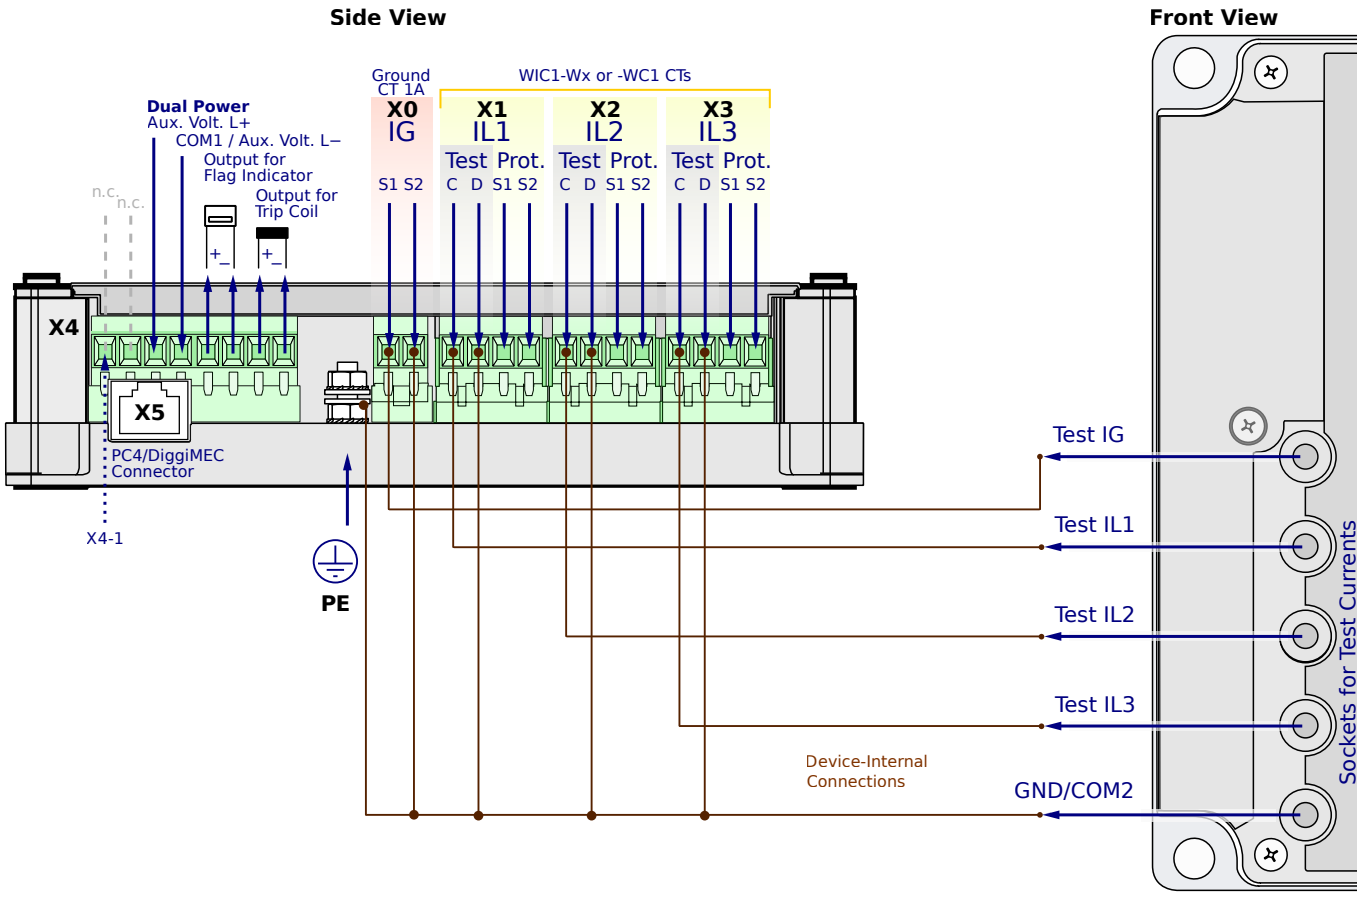


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2AB0

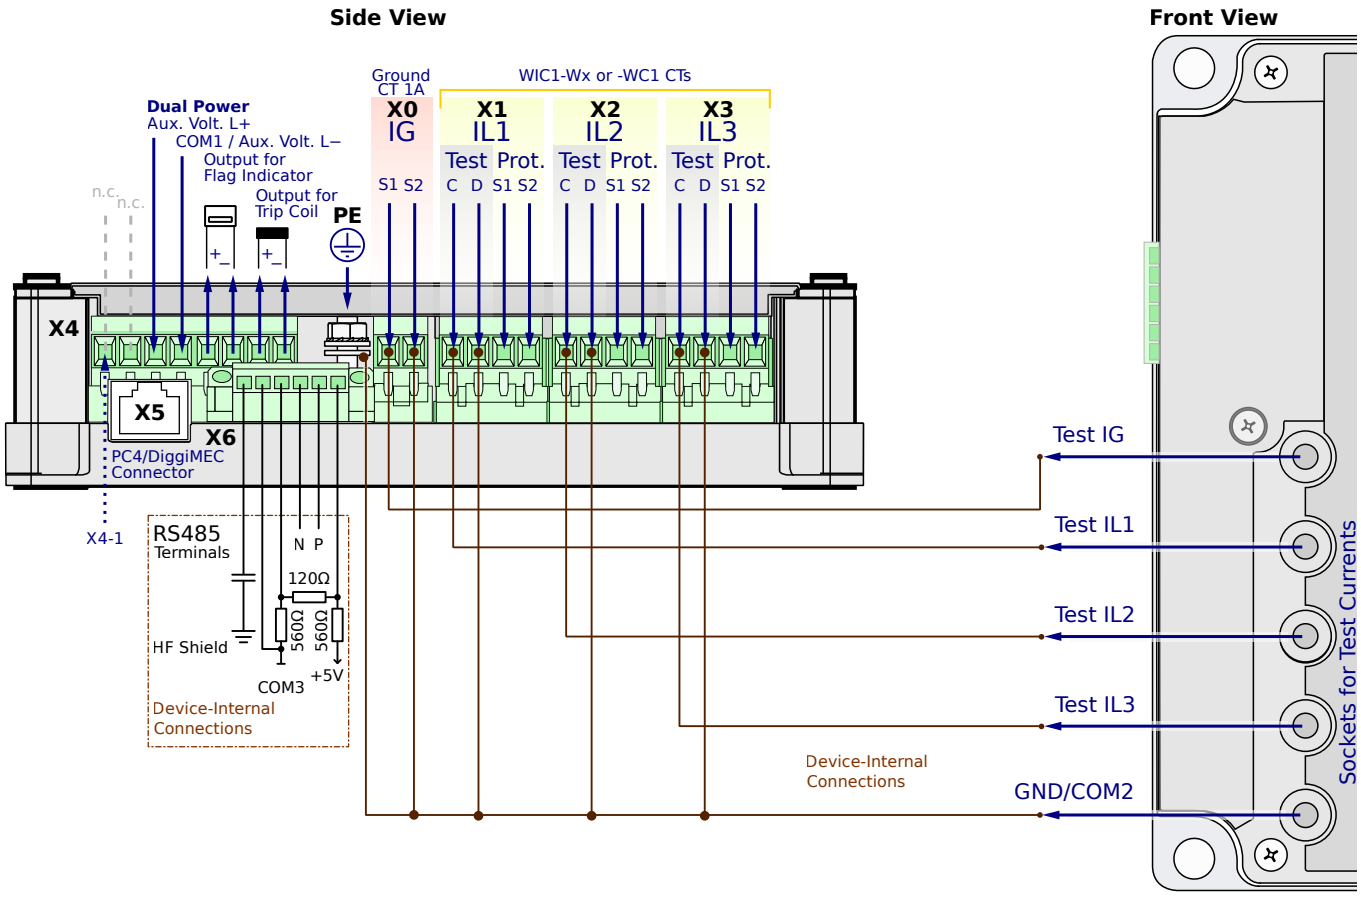


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2ABH

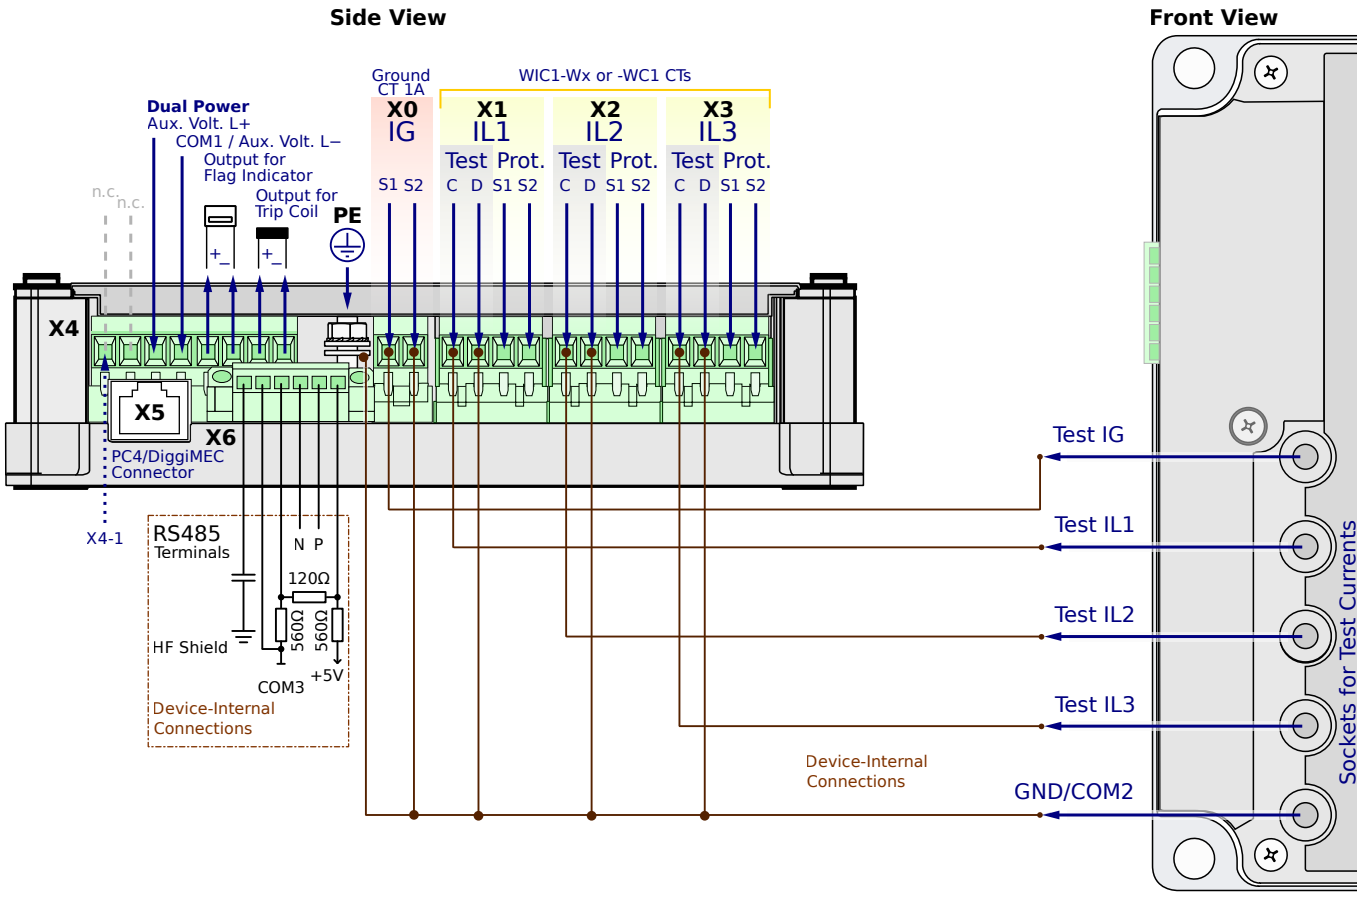


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2AC0

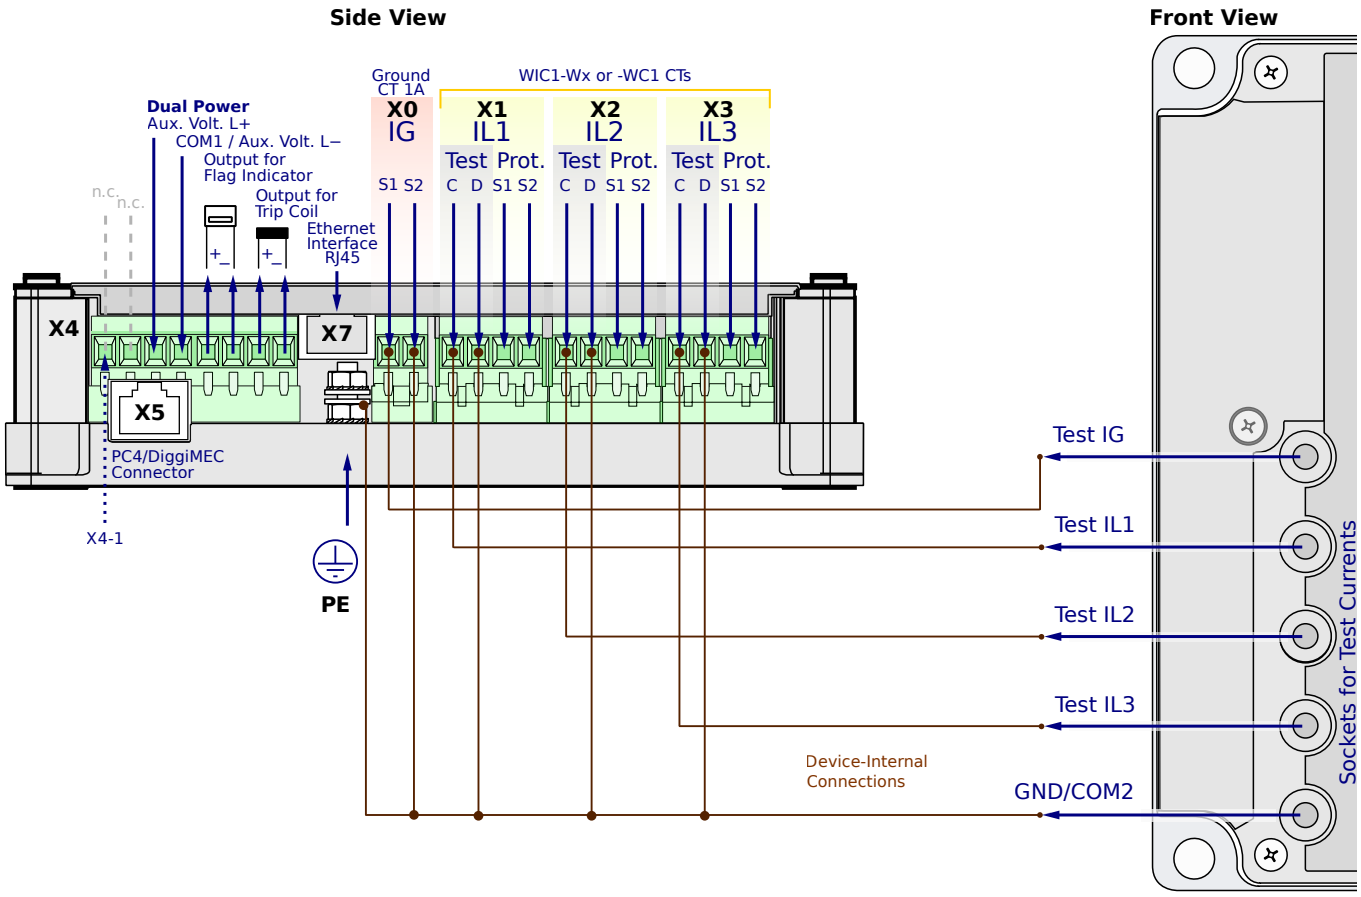


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2ACH

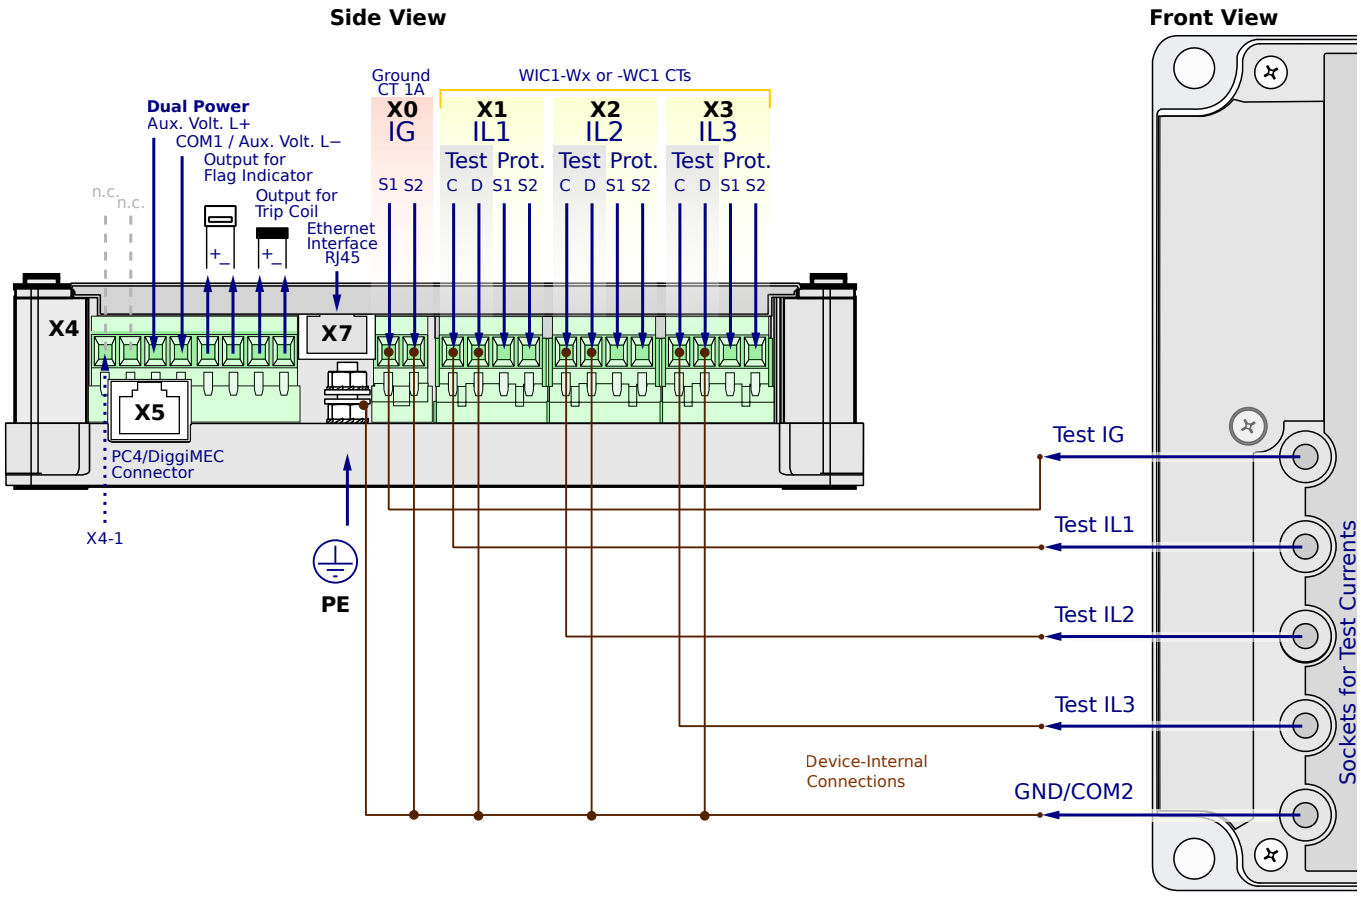


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2AL0

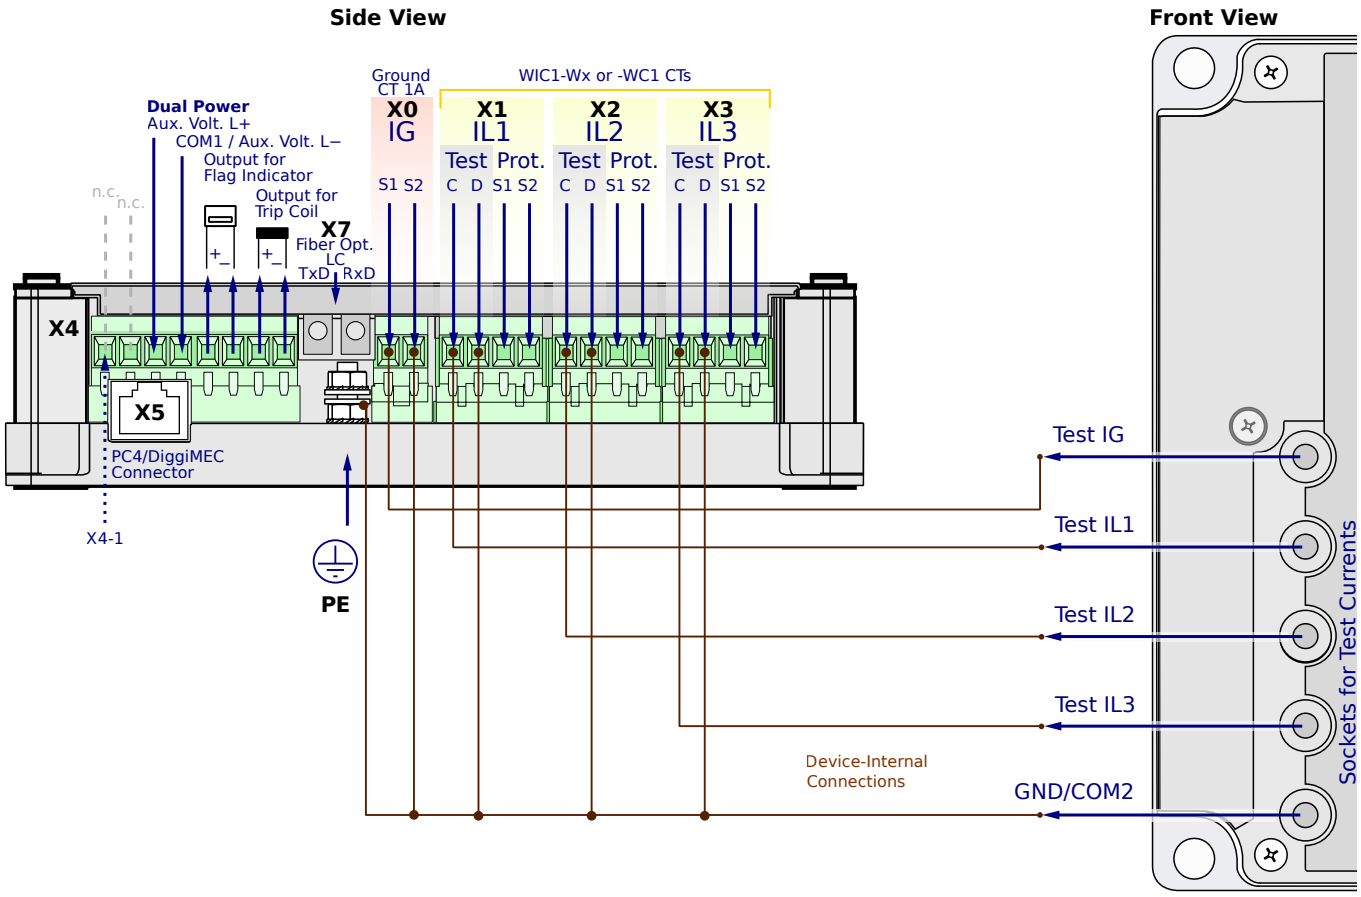


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2ALH

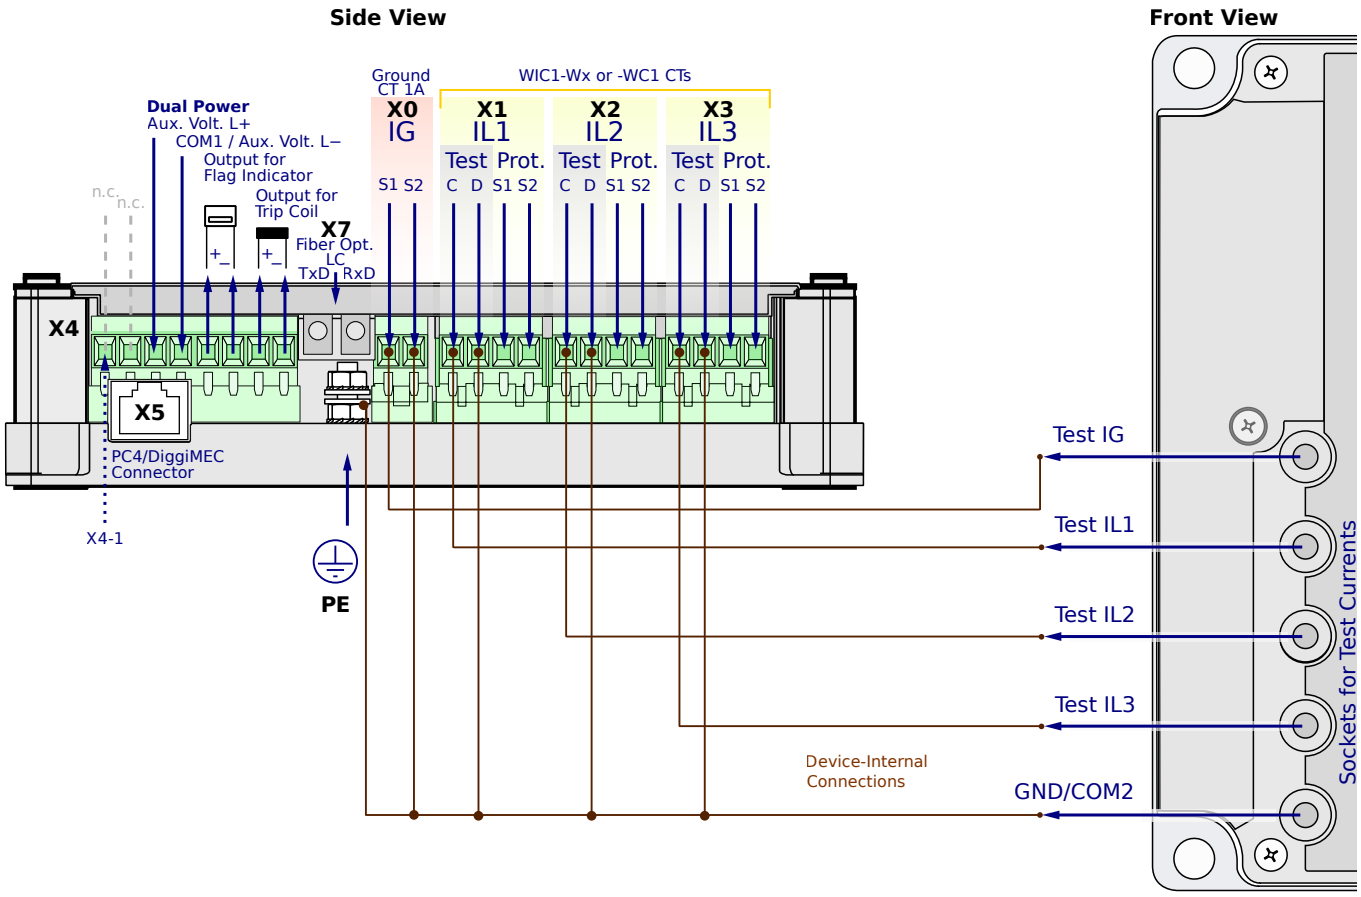


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2PA0

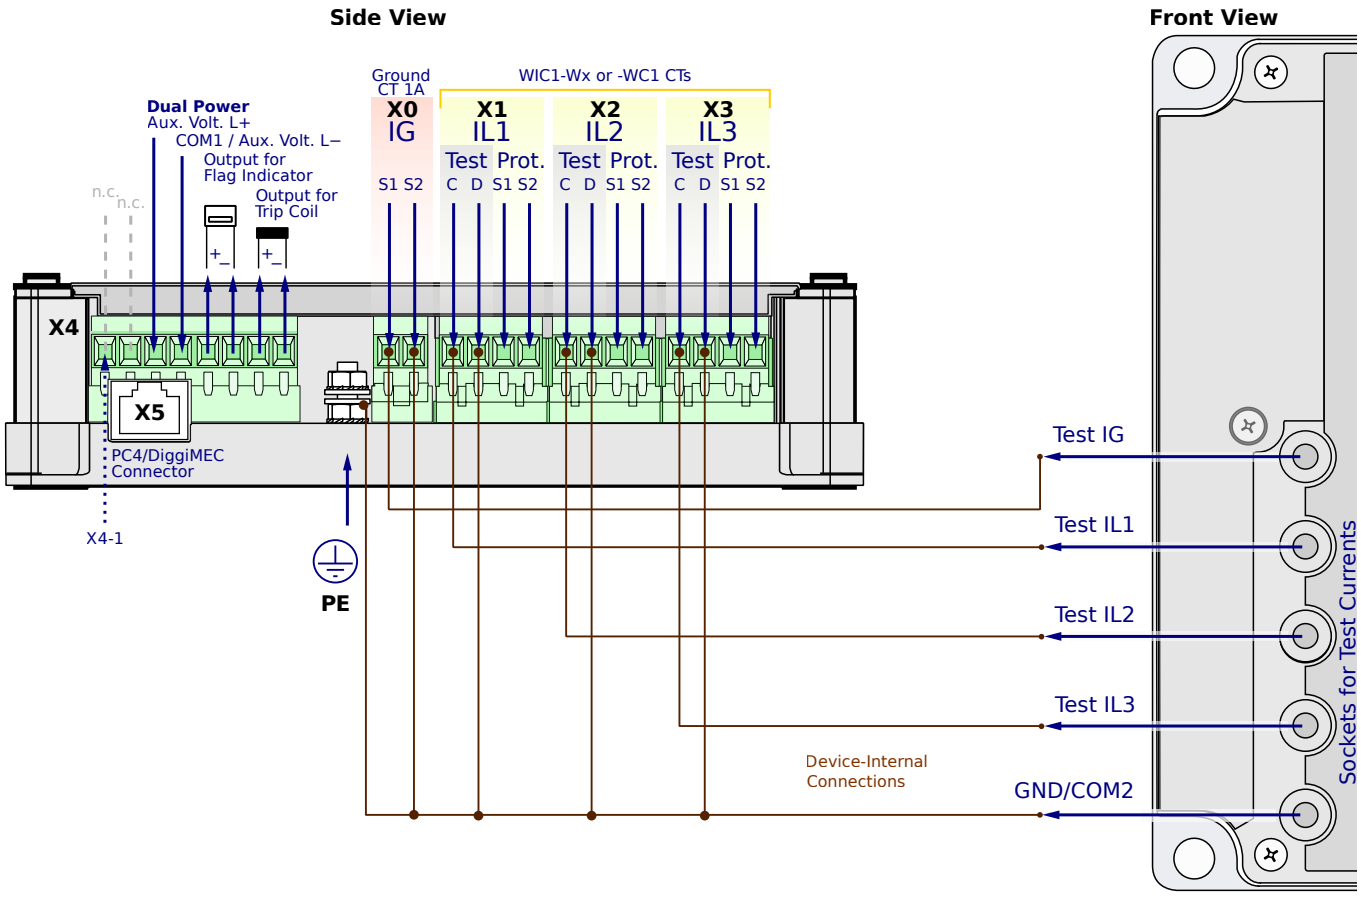


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2PAH

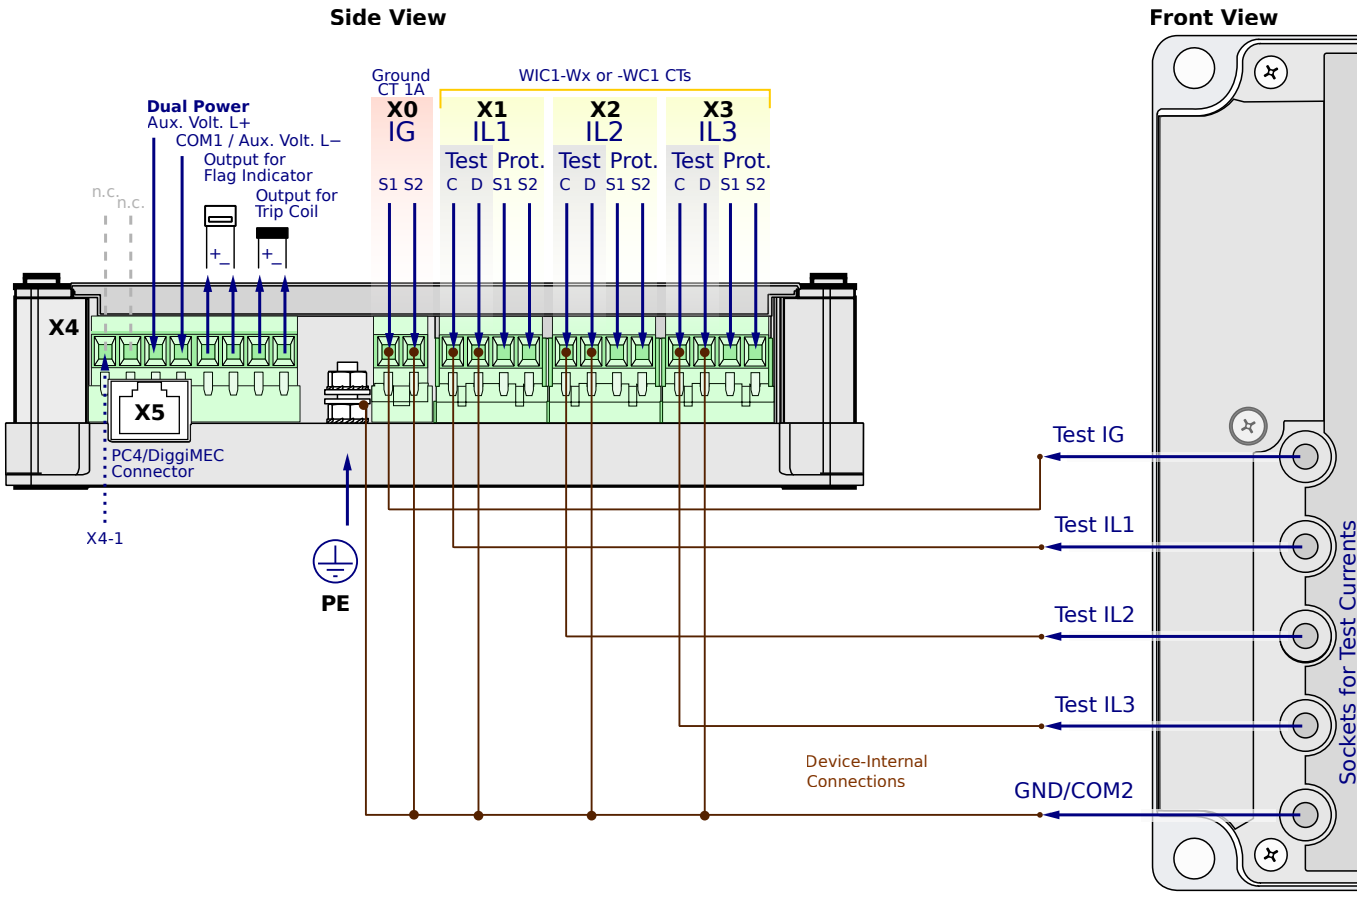


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NM2PB0

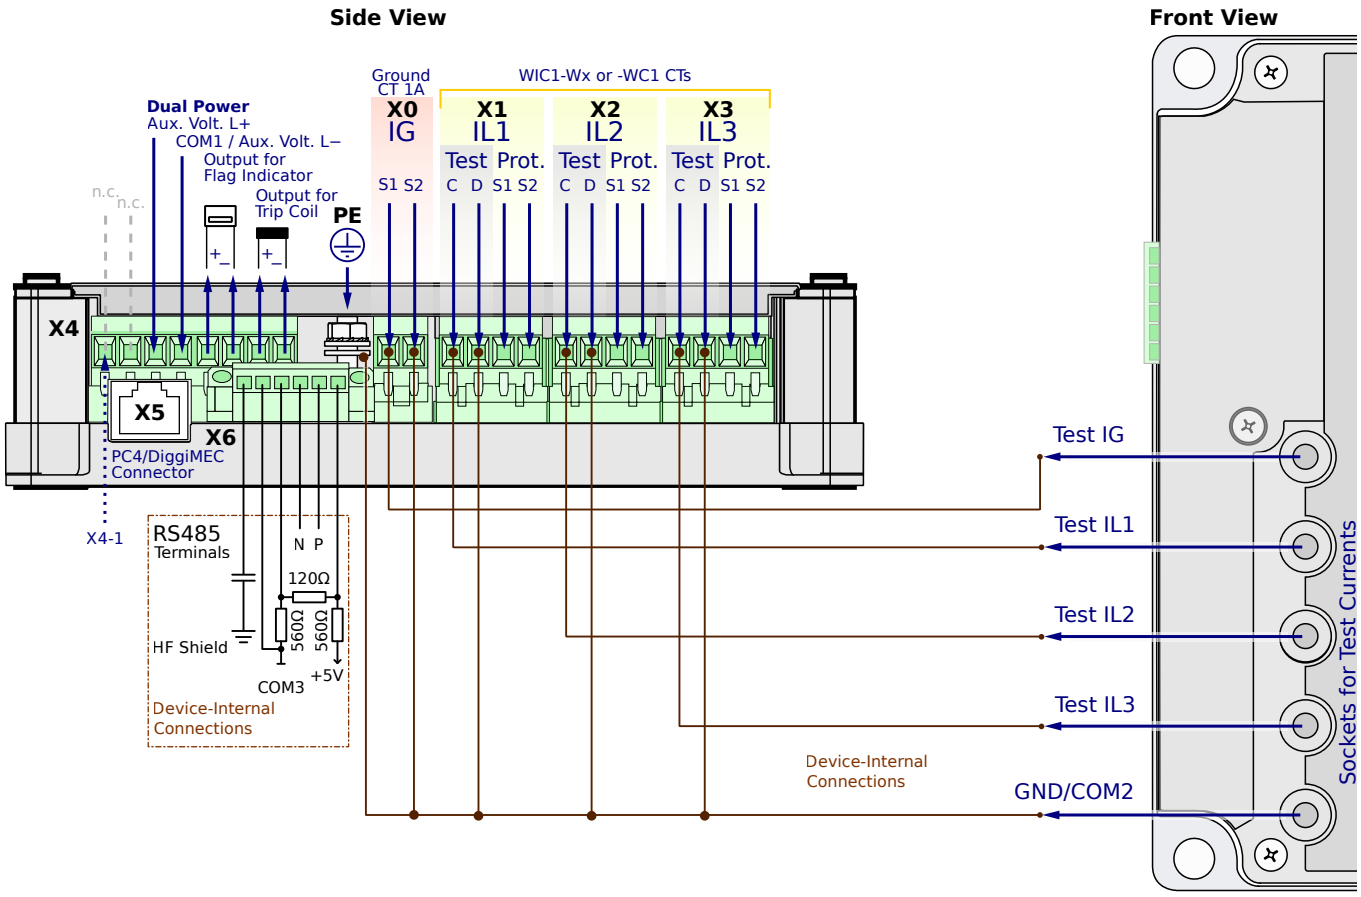


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2PBH

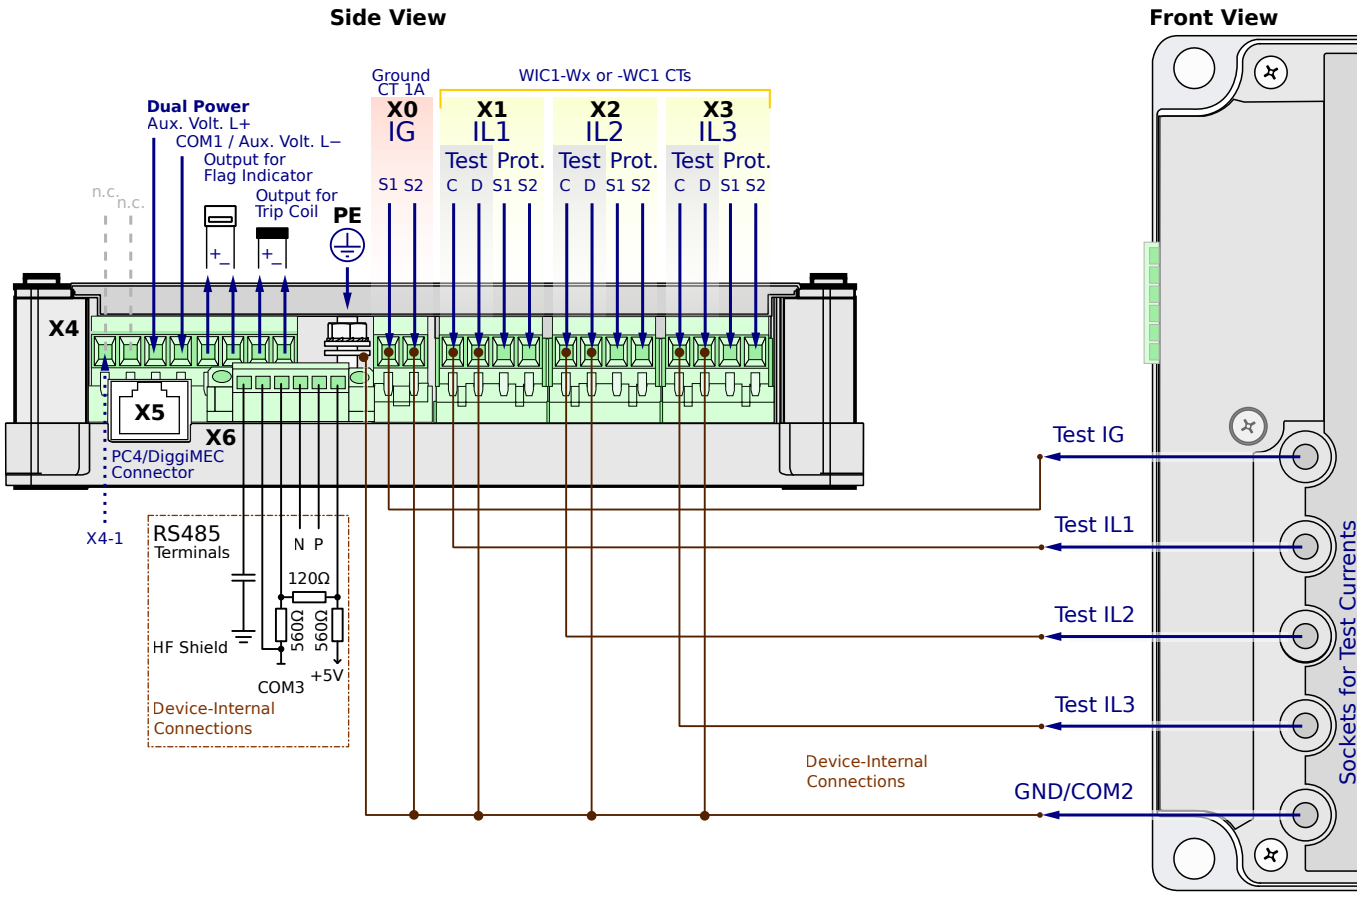


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NM2PC0

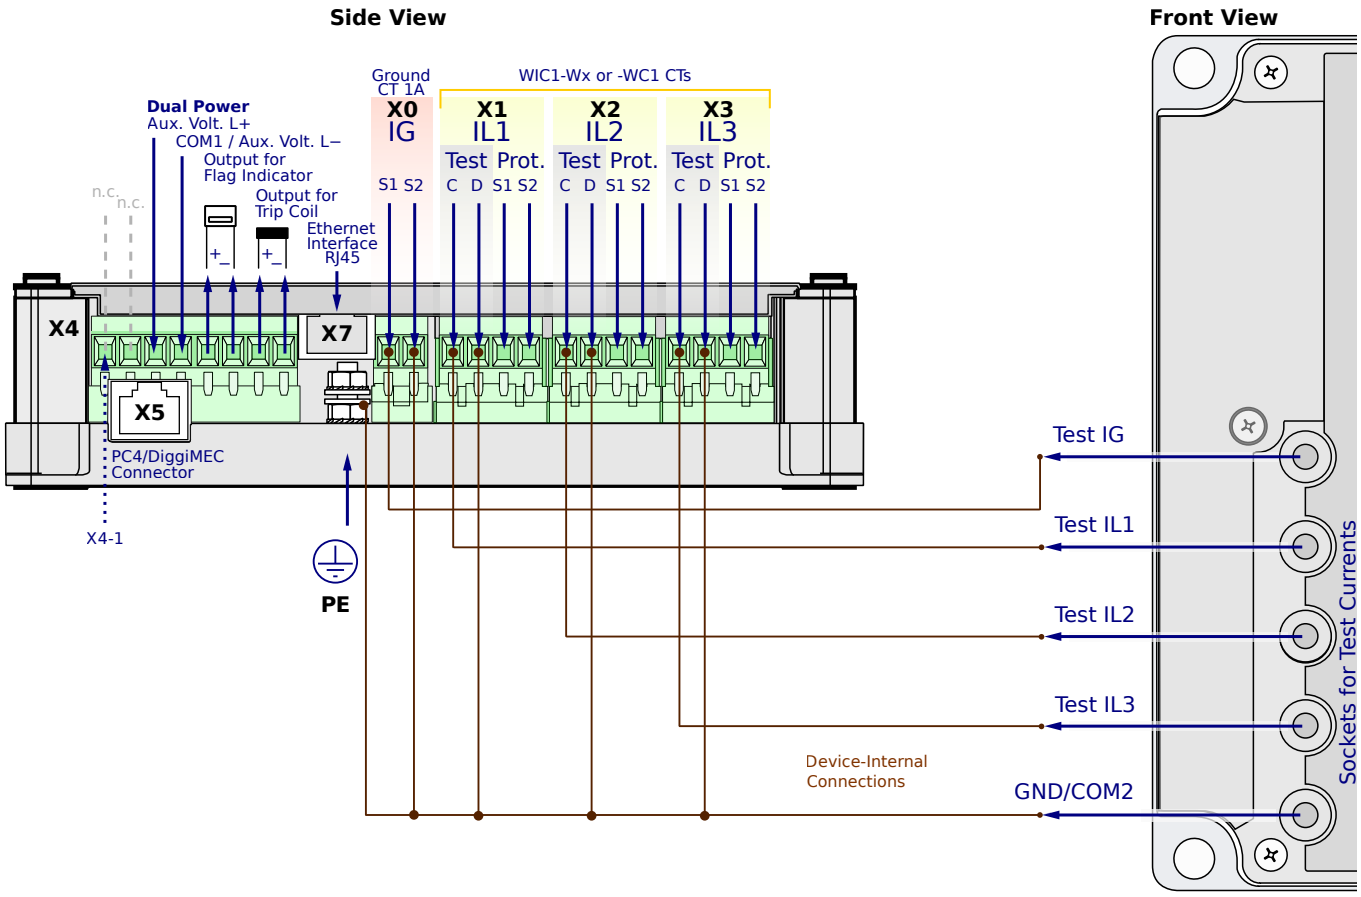


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2PCH

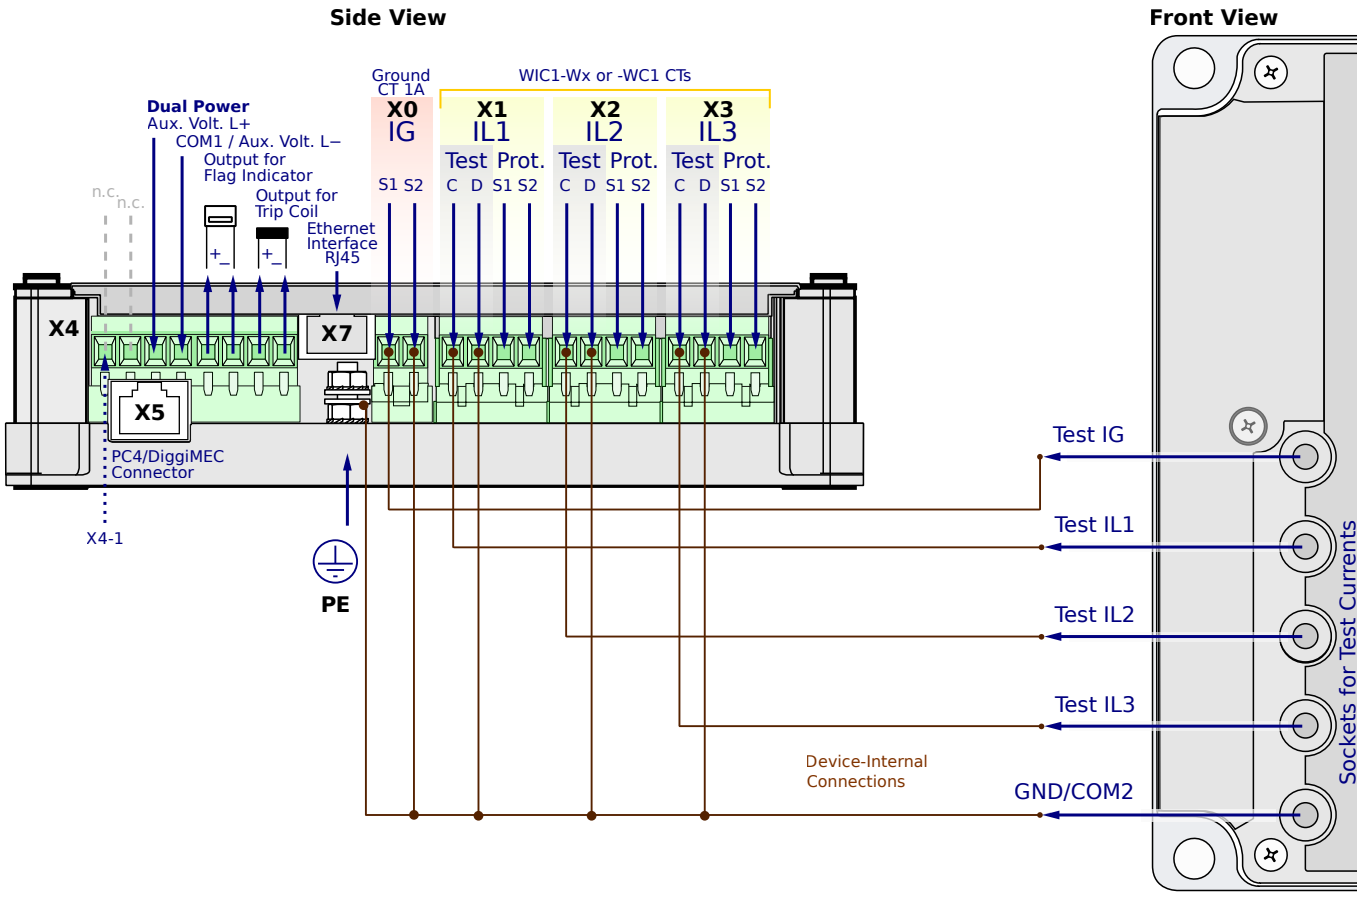


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NM2PL0

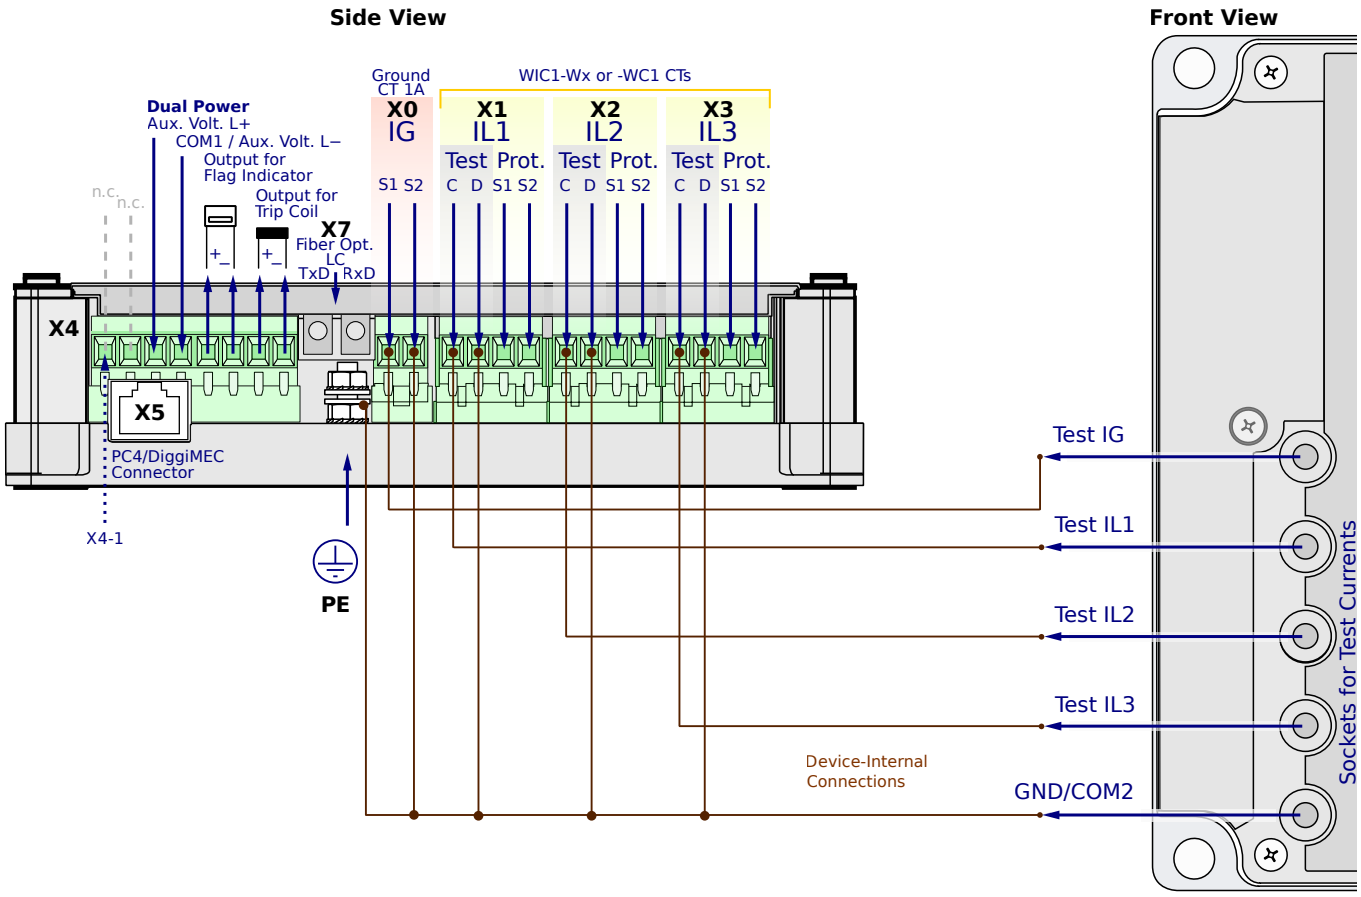


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NM2PLH

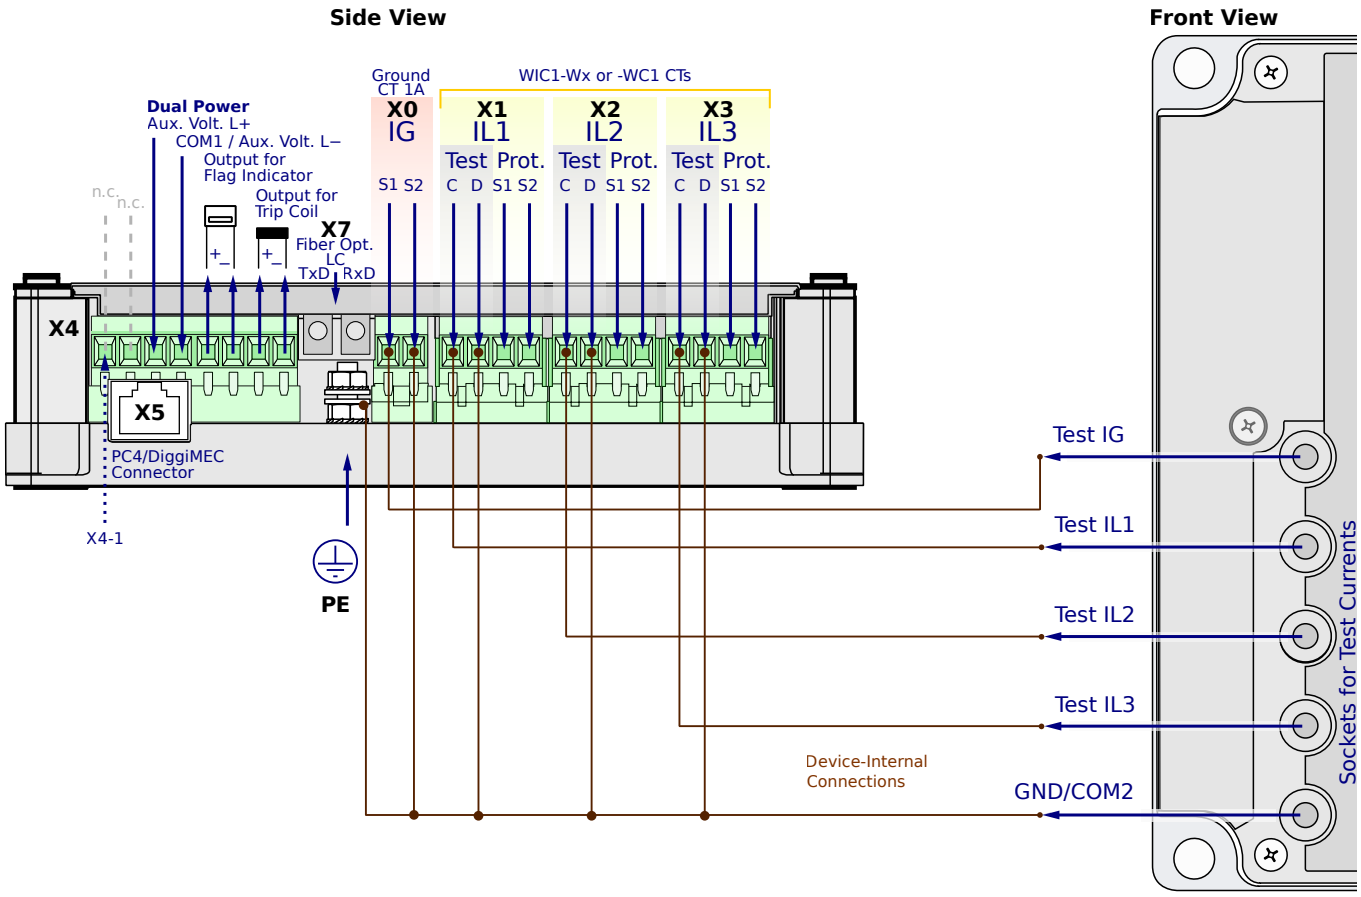


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0SA0

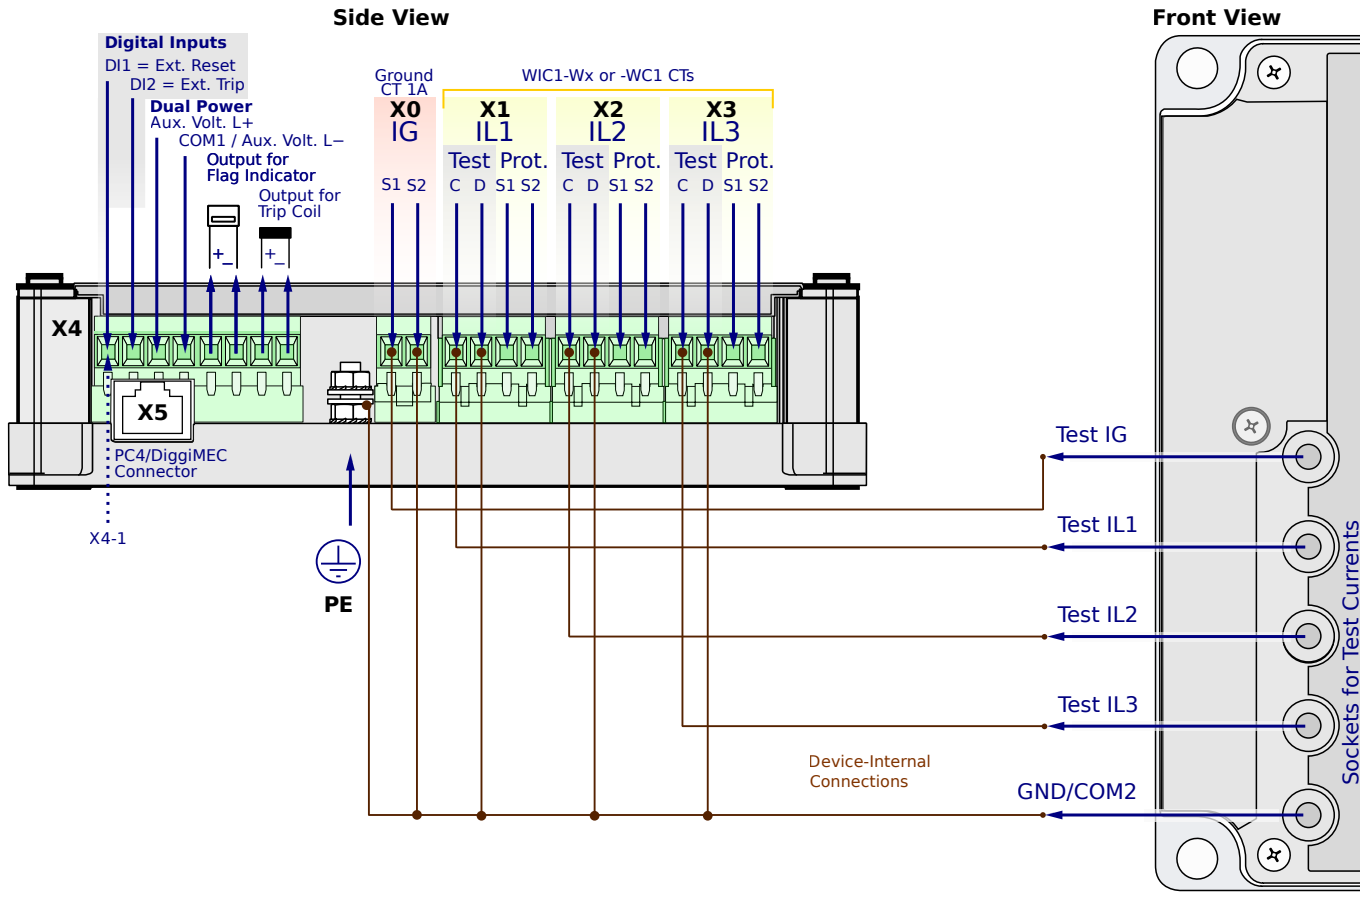


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0SAH

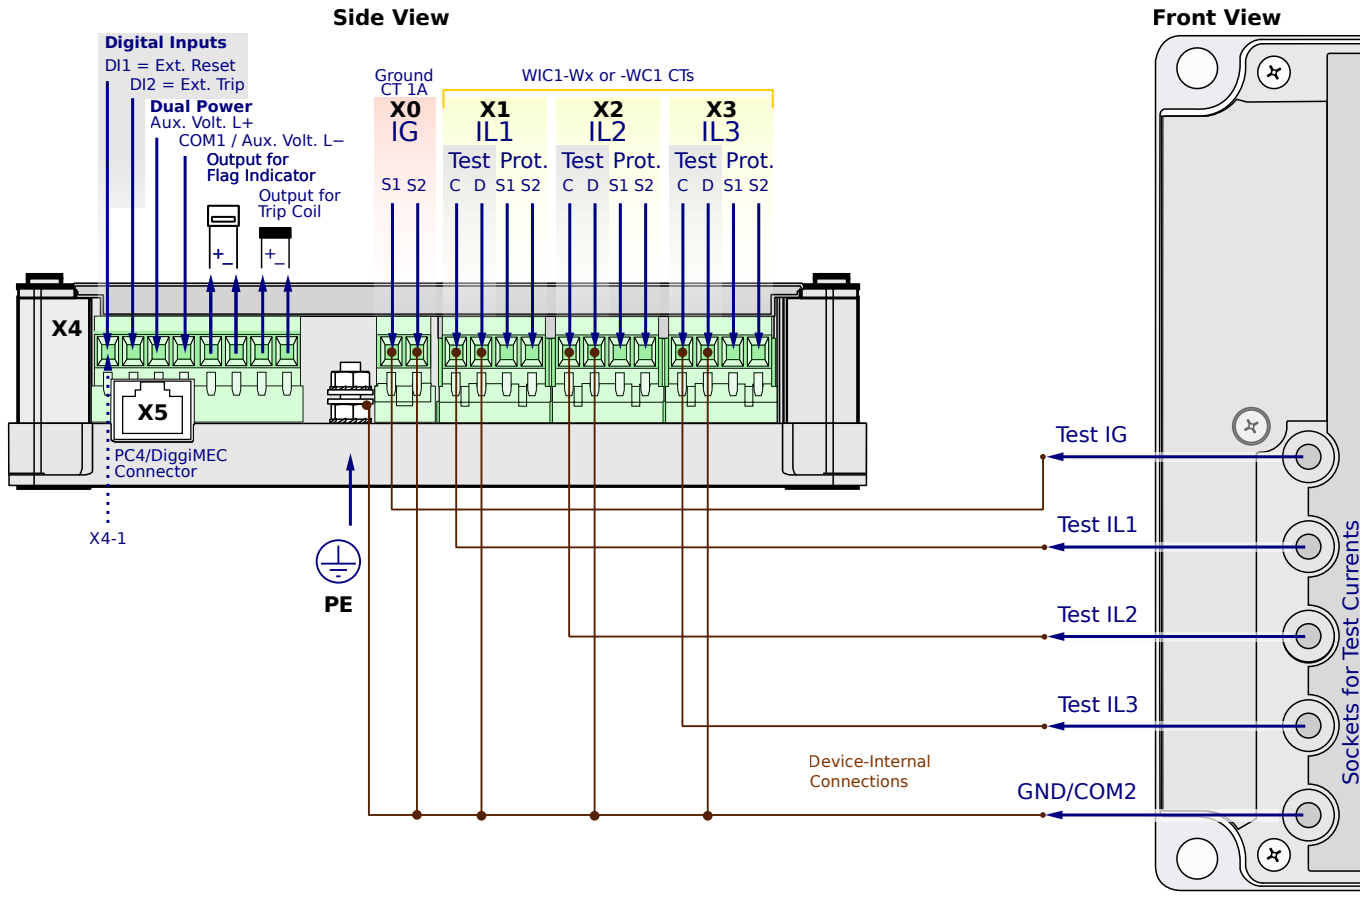


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0SB0

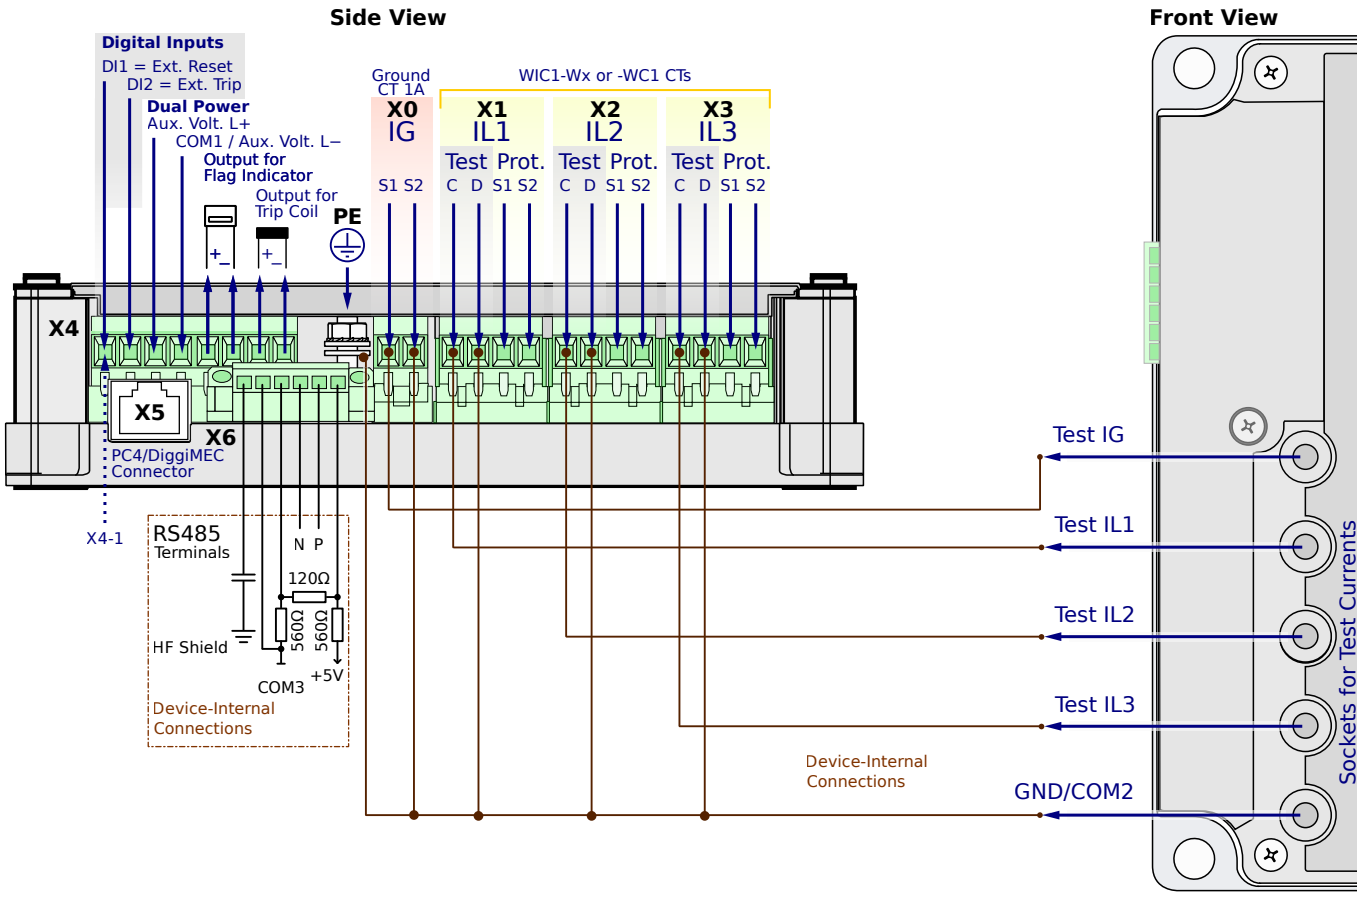


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0SBH

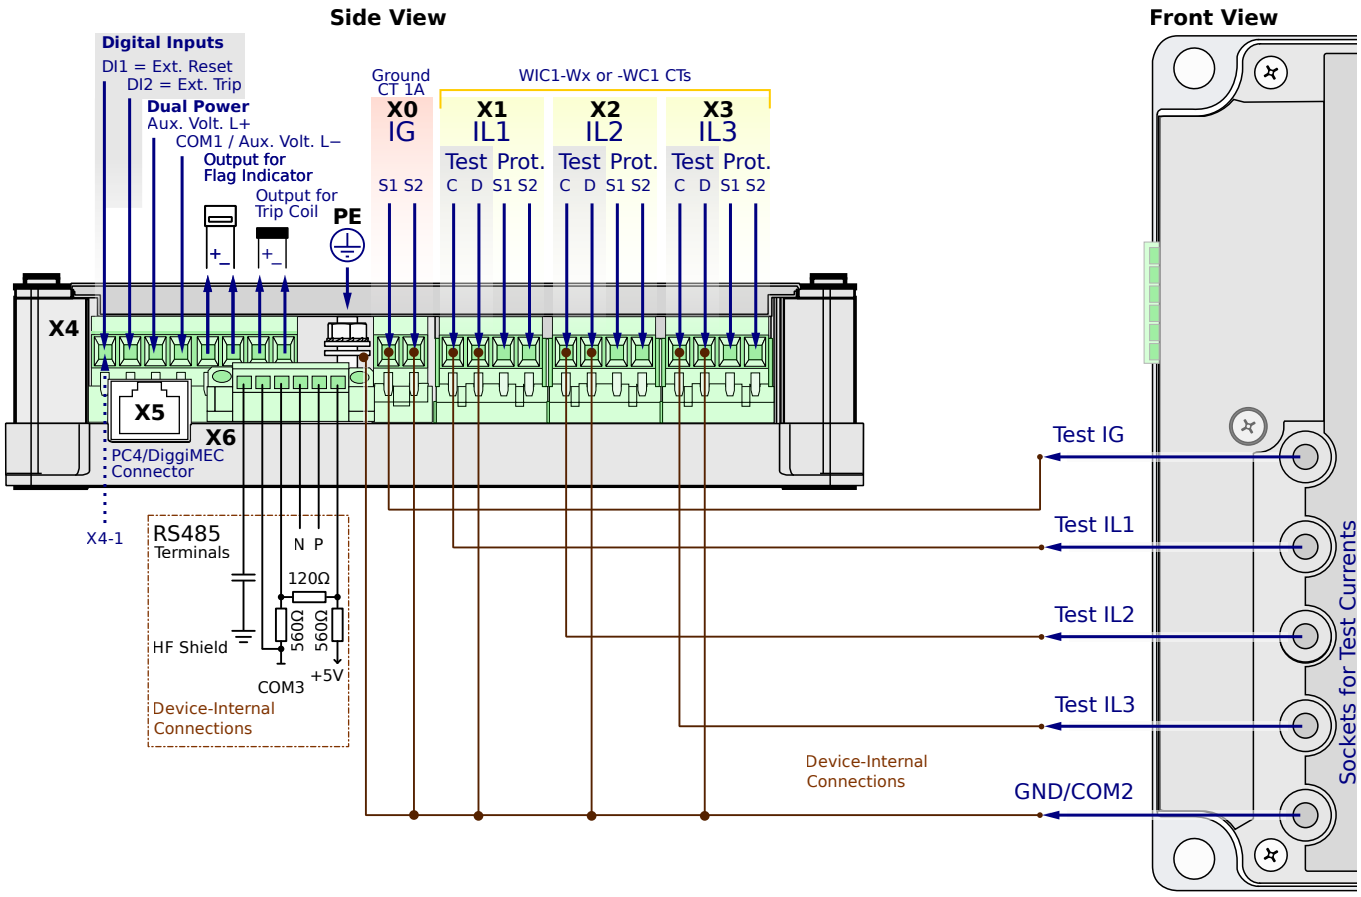


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0SC0

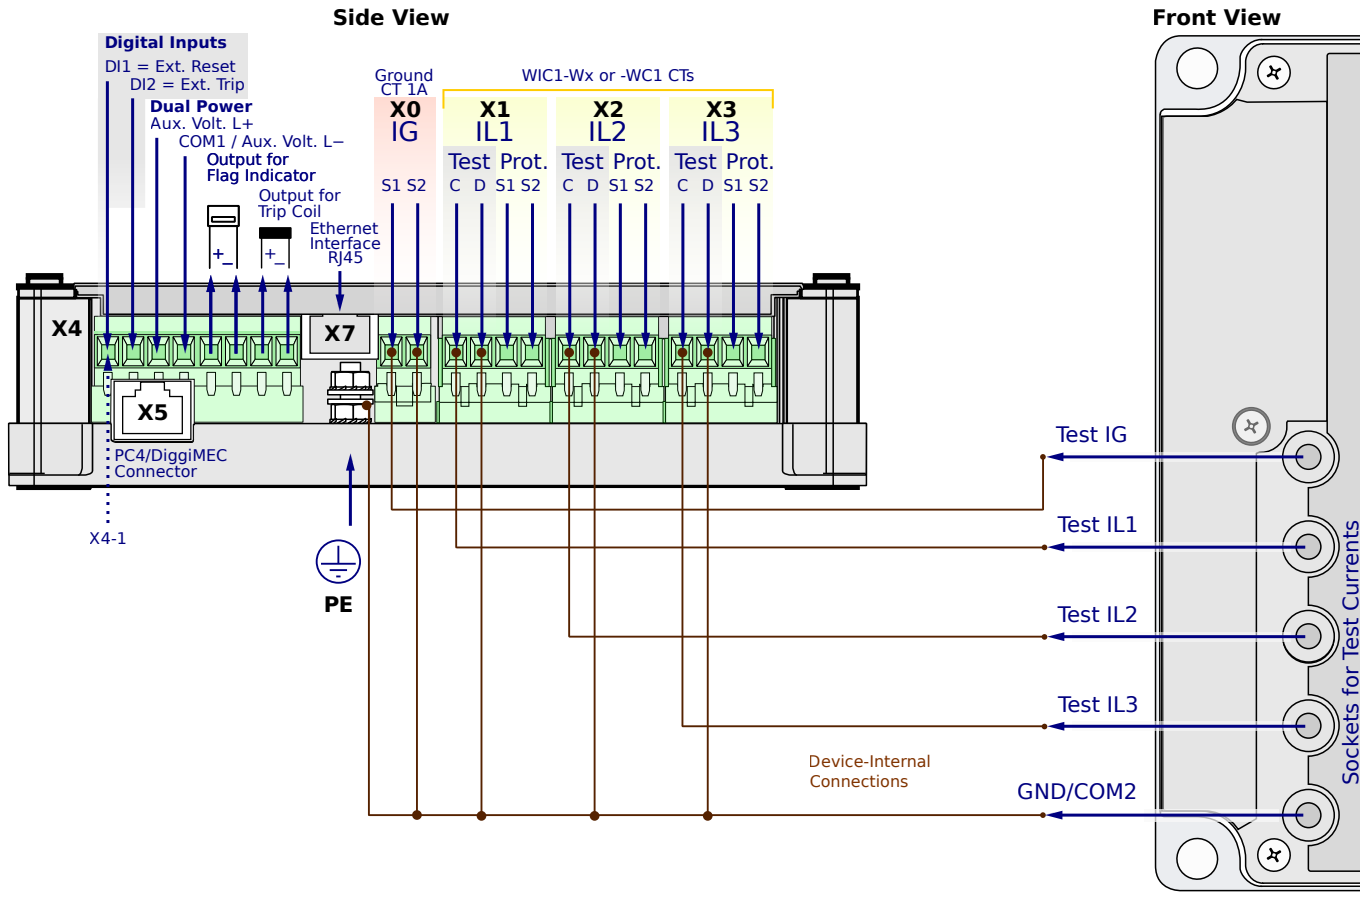


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0SCH

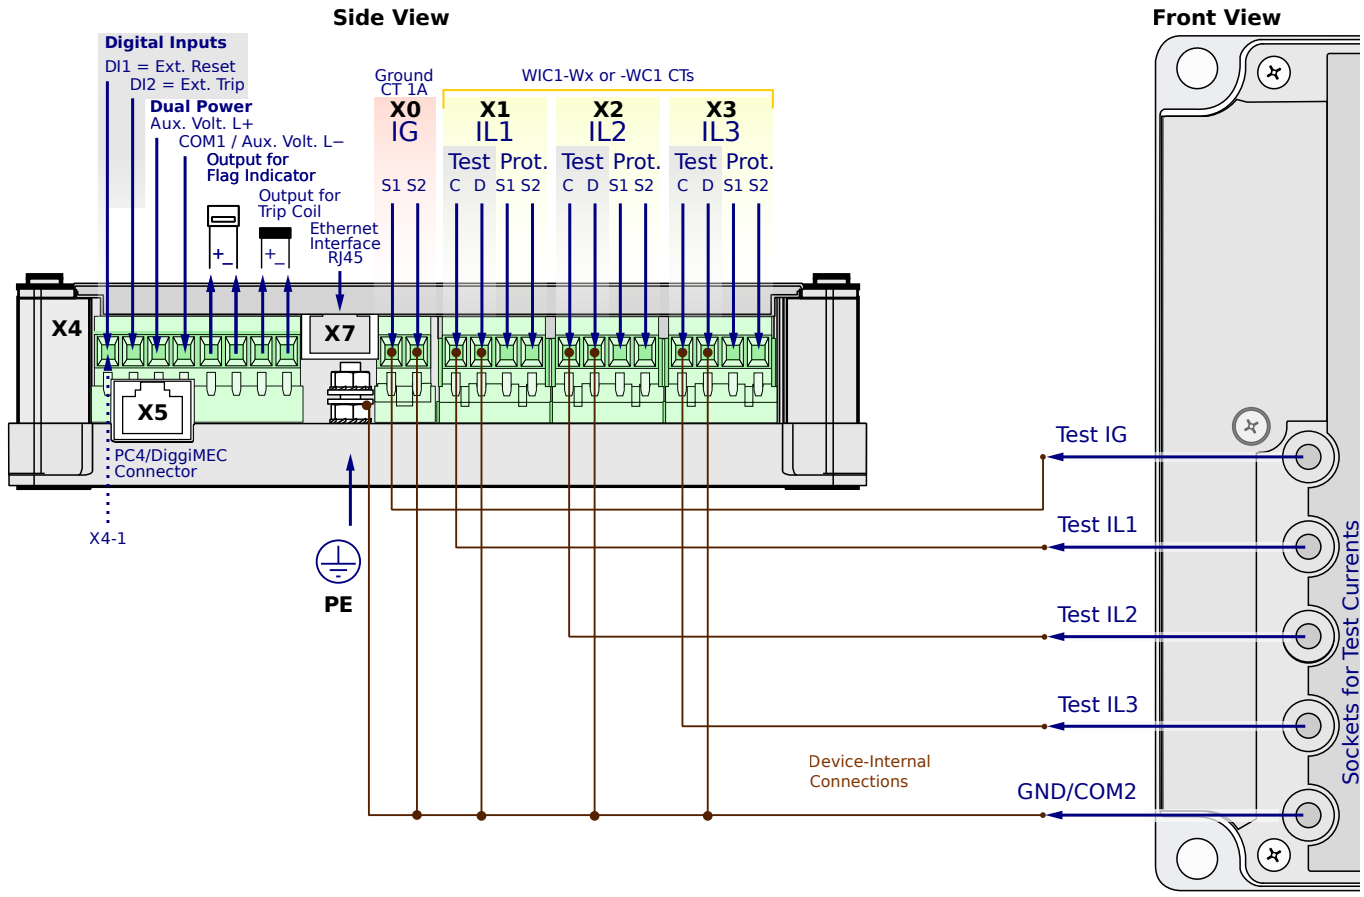


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0SL0

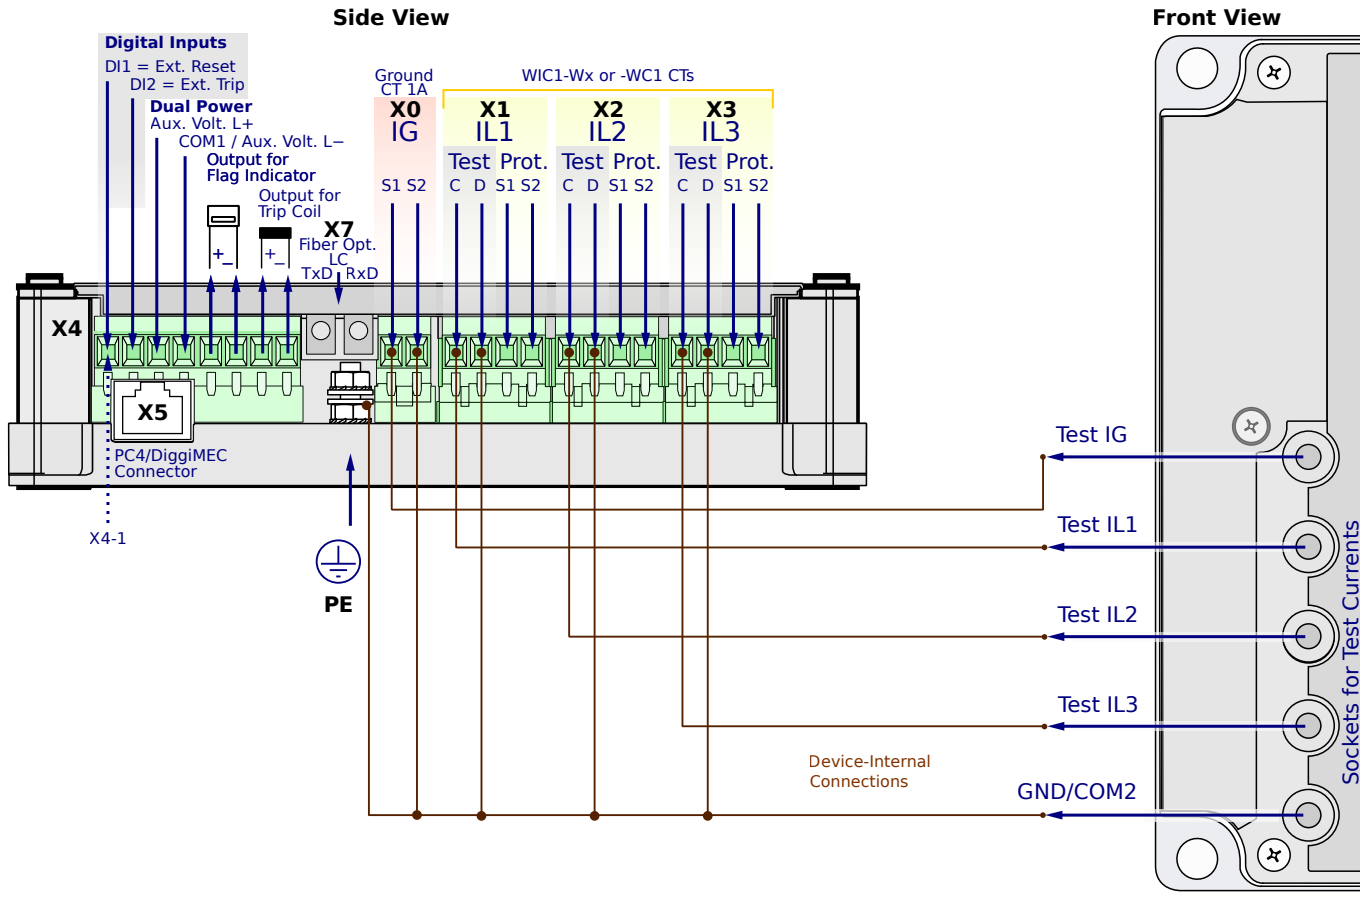


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0SLH

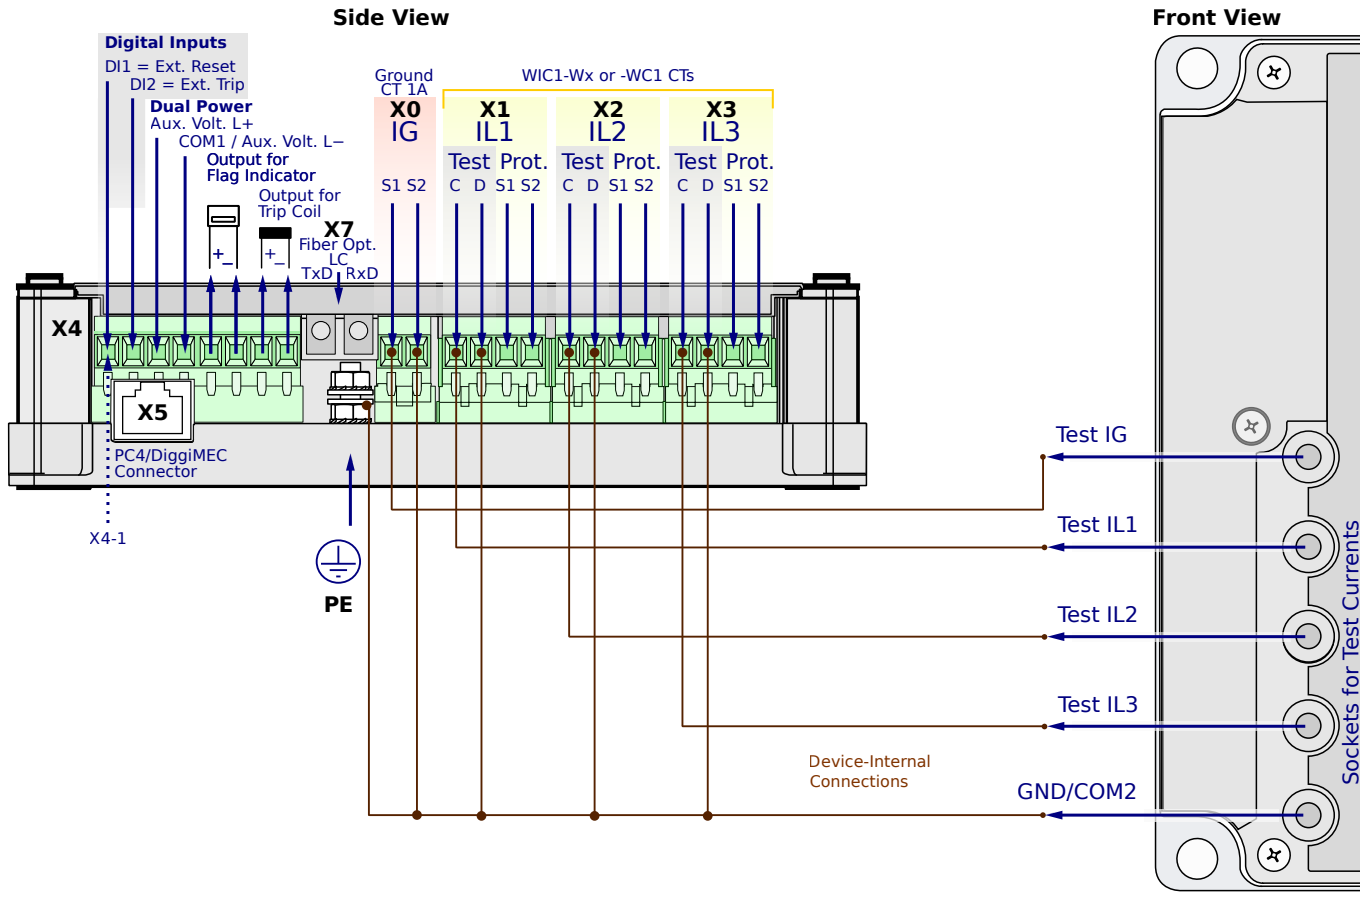


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0AA0

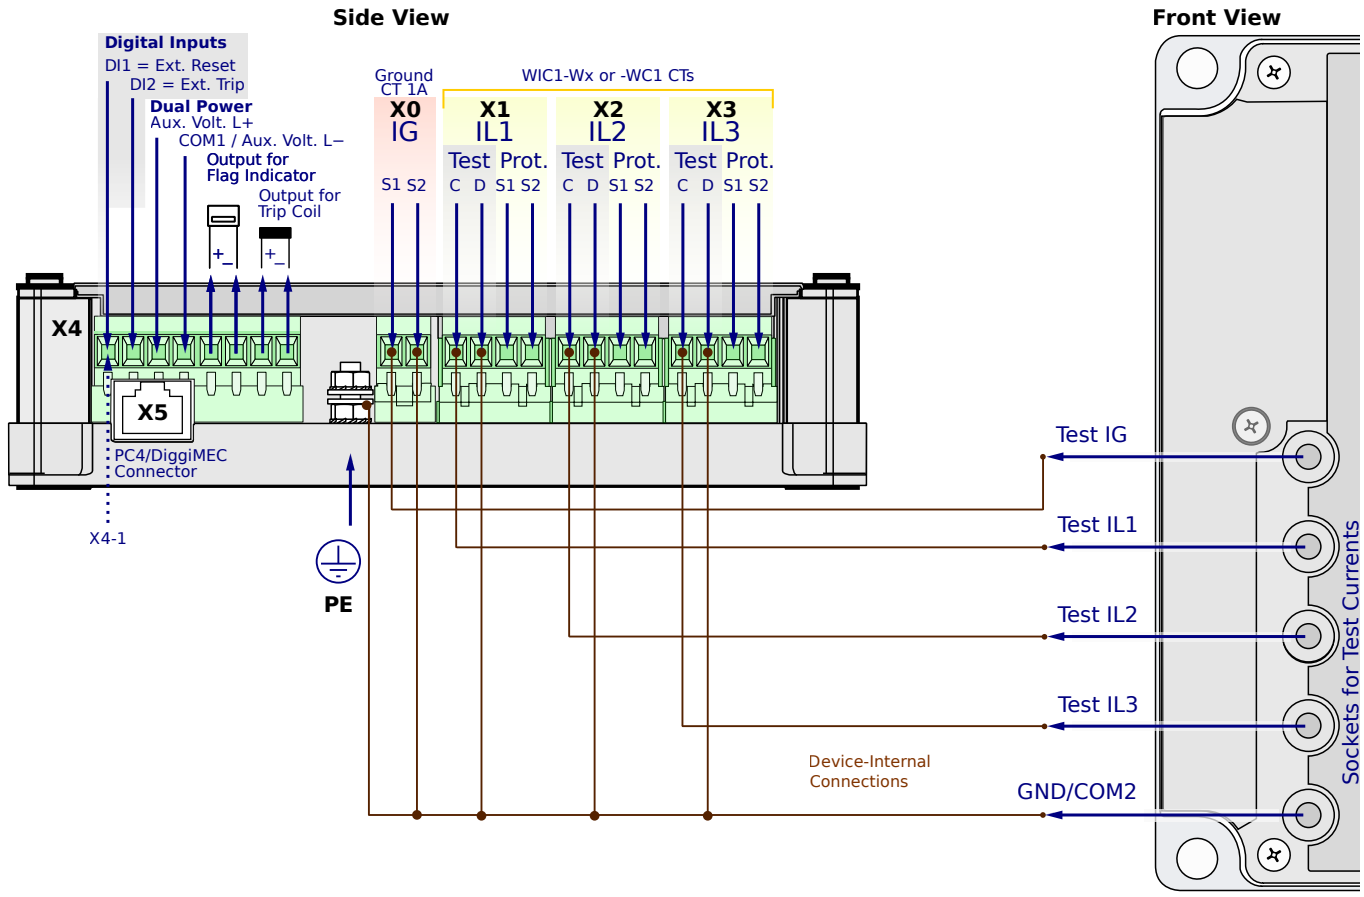


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0AAH

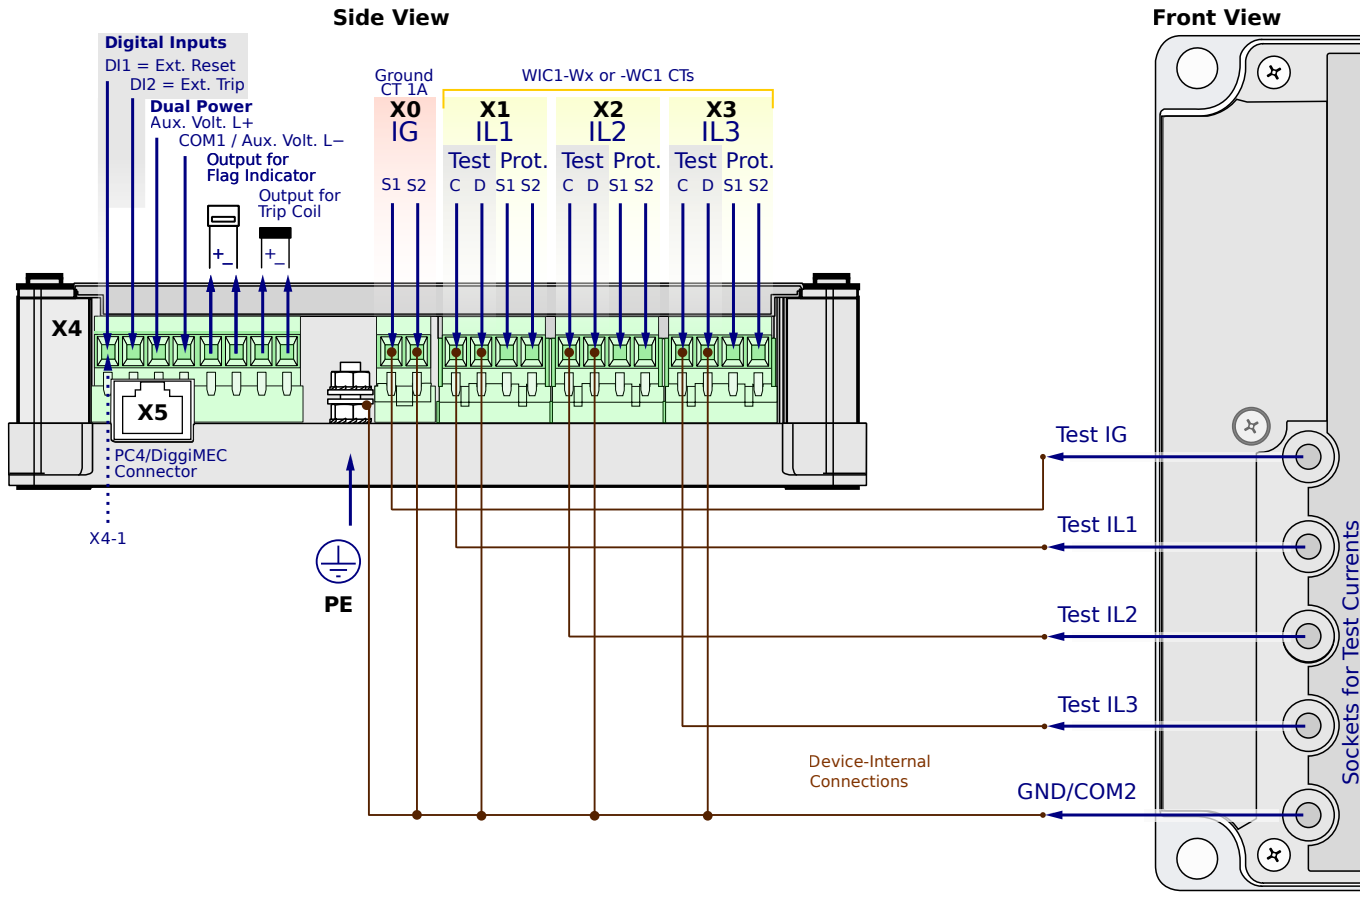


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0AB0

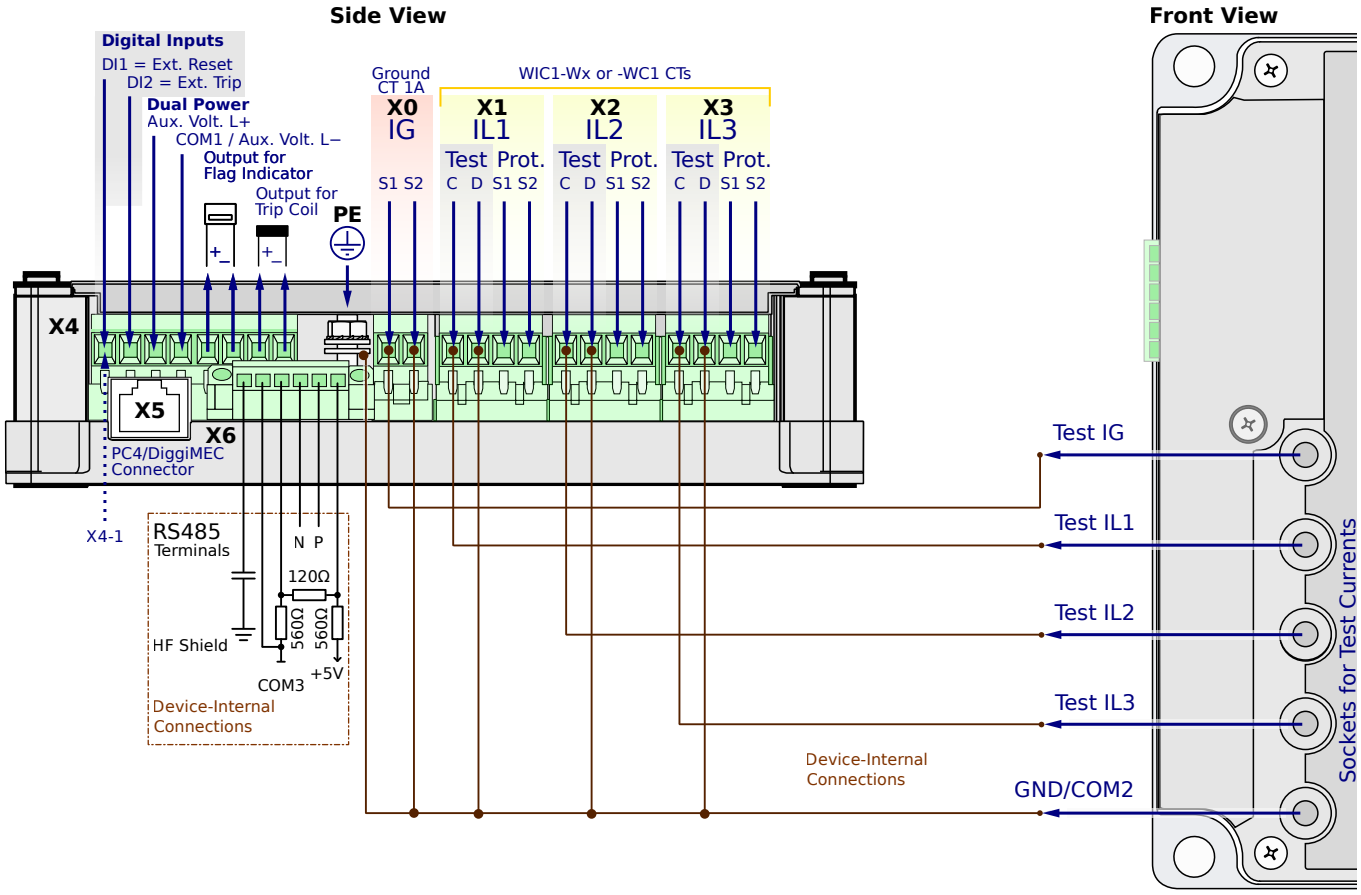


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0ABH

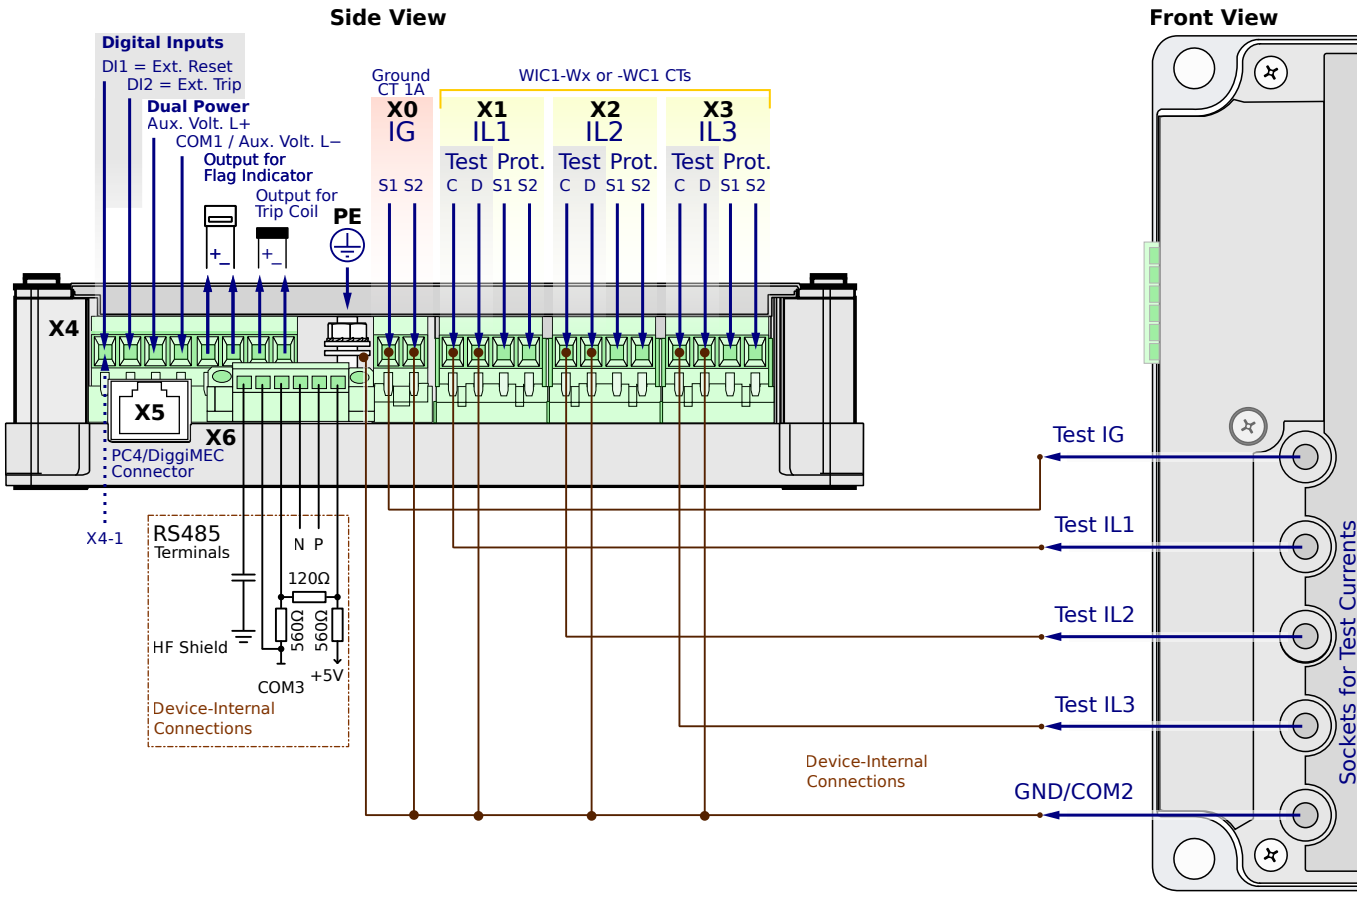


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0AC0

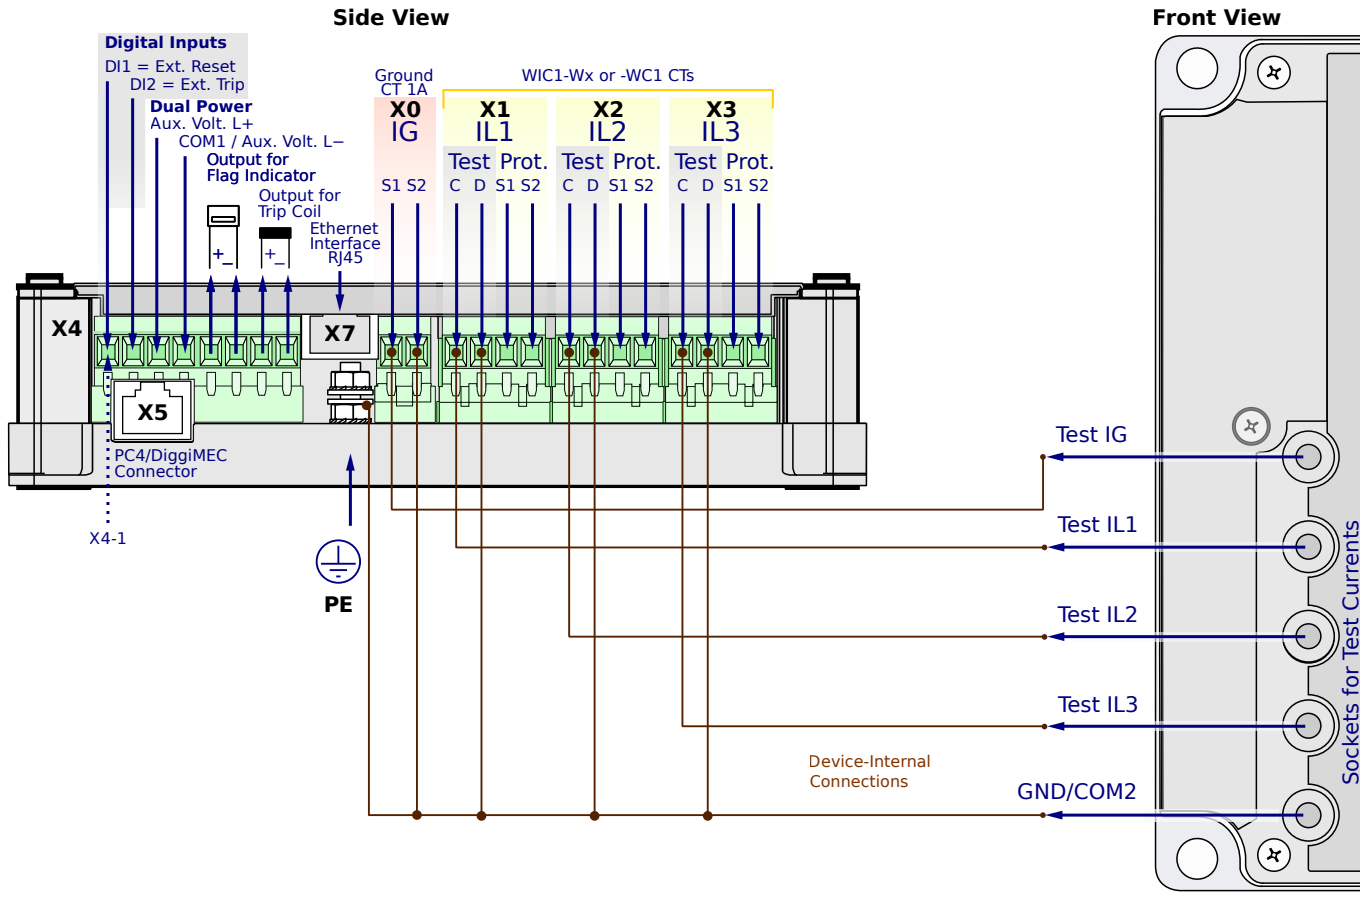


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0ACH

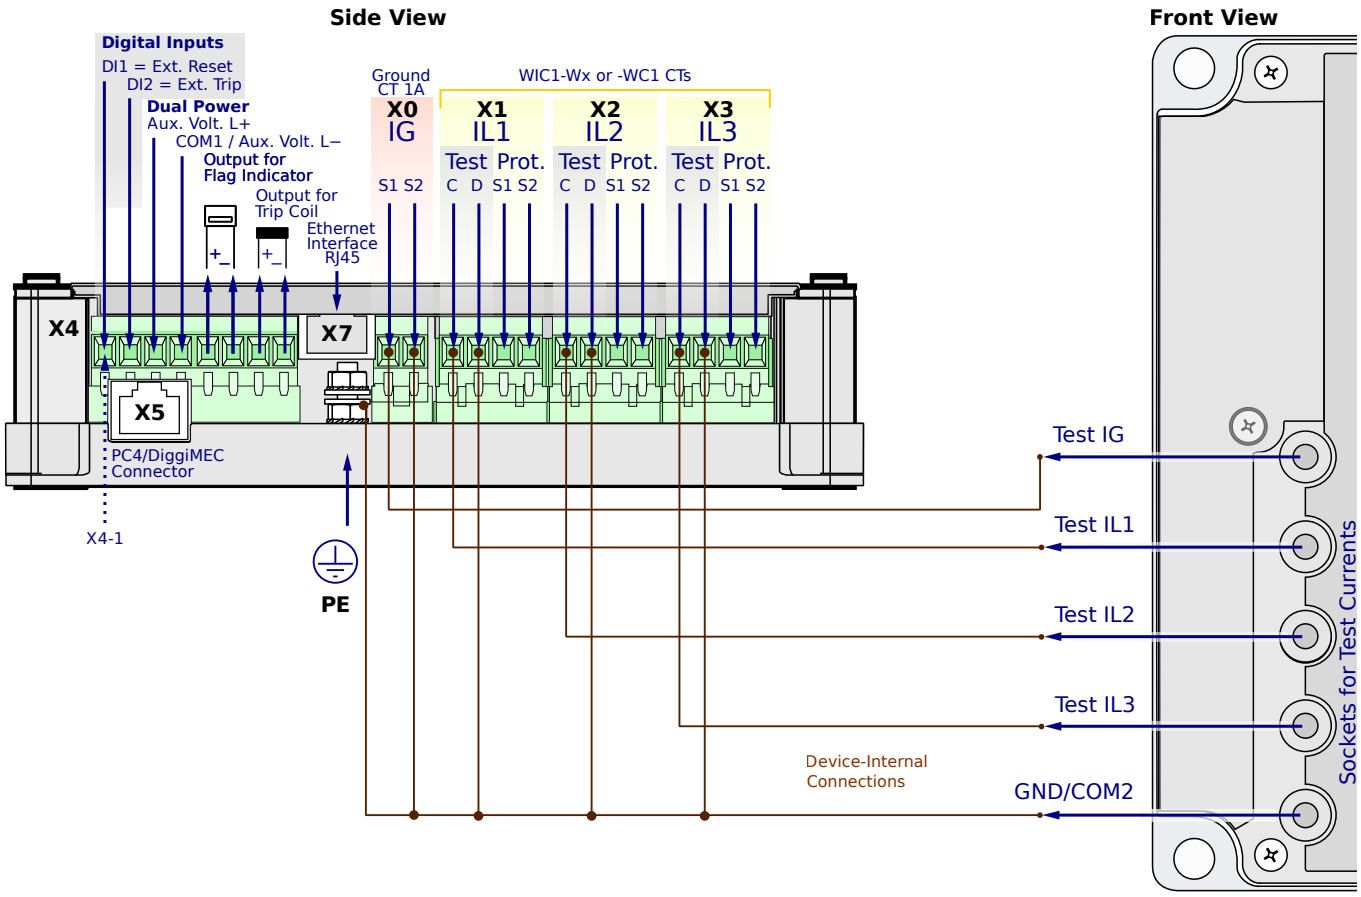


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0AL0

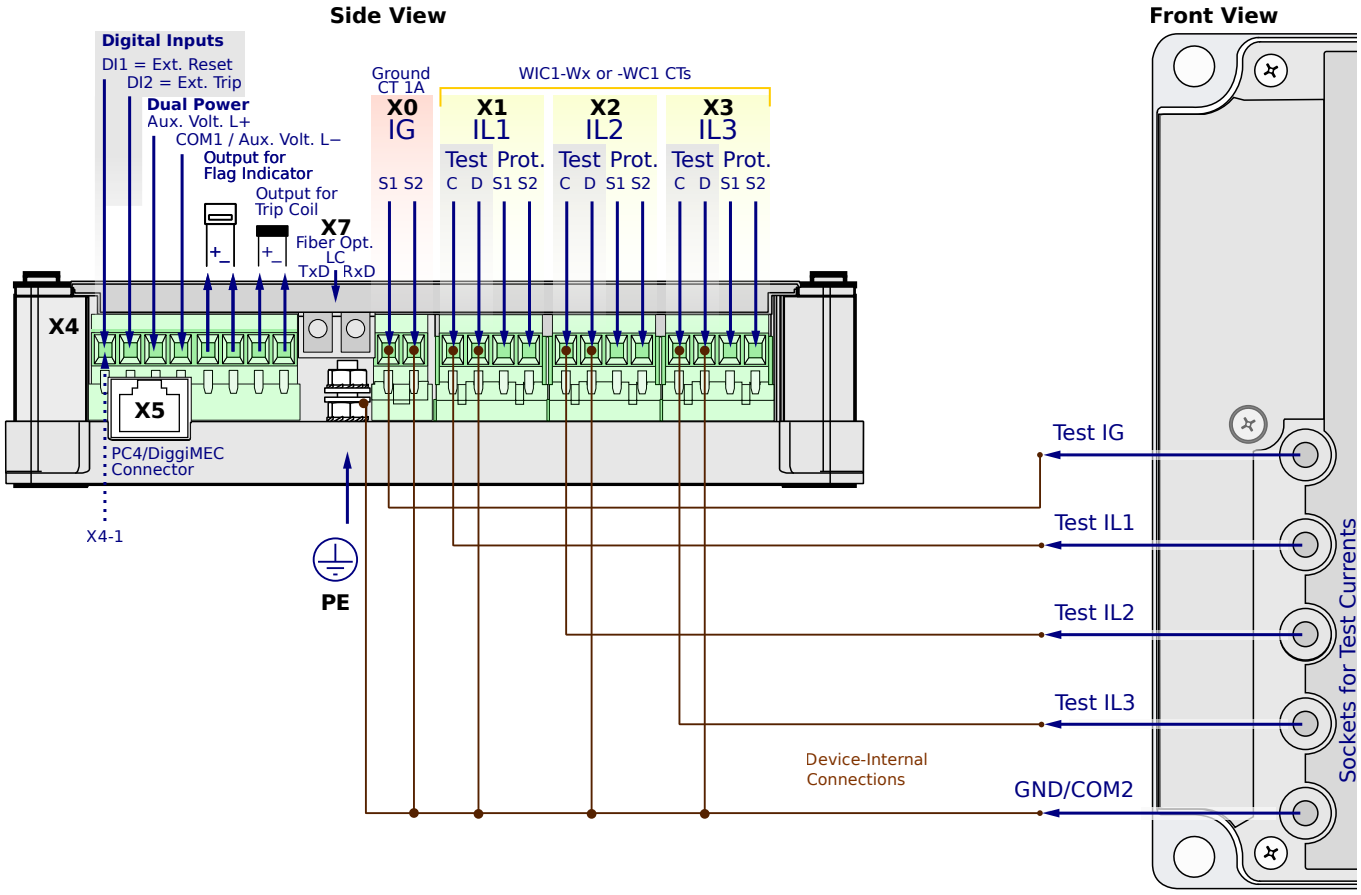


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0ALH

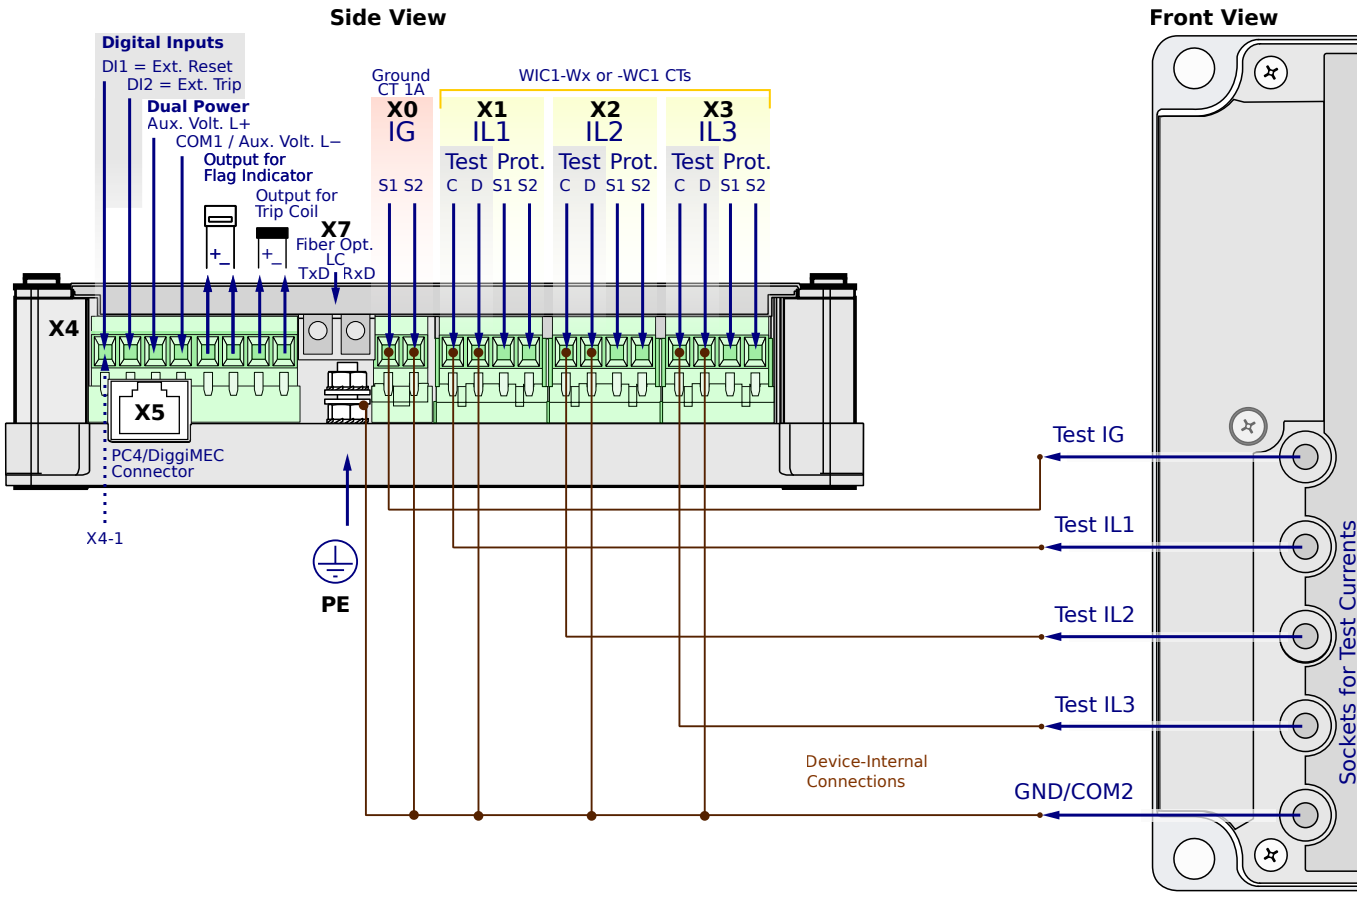


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0PA0

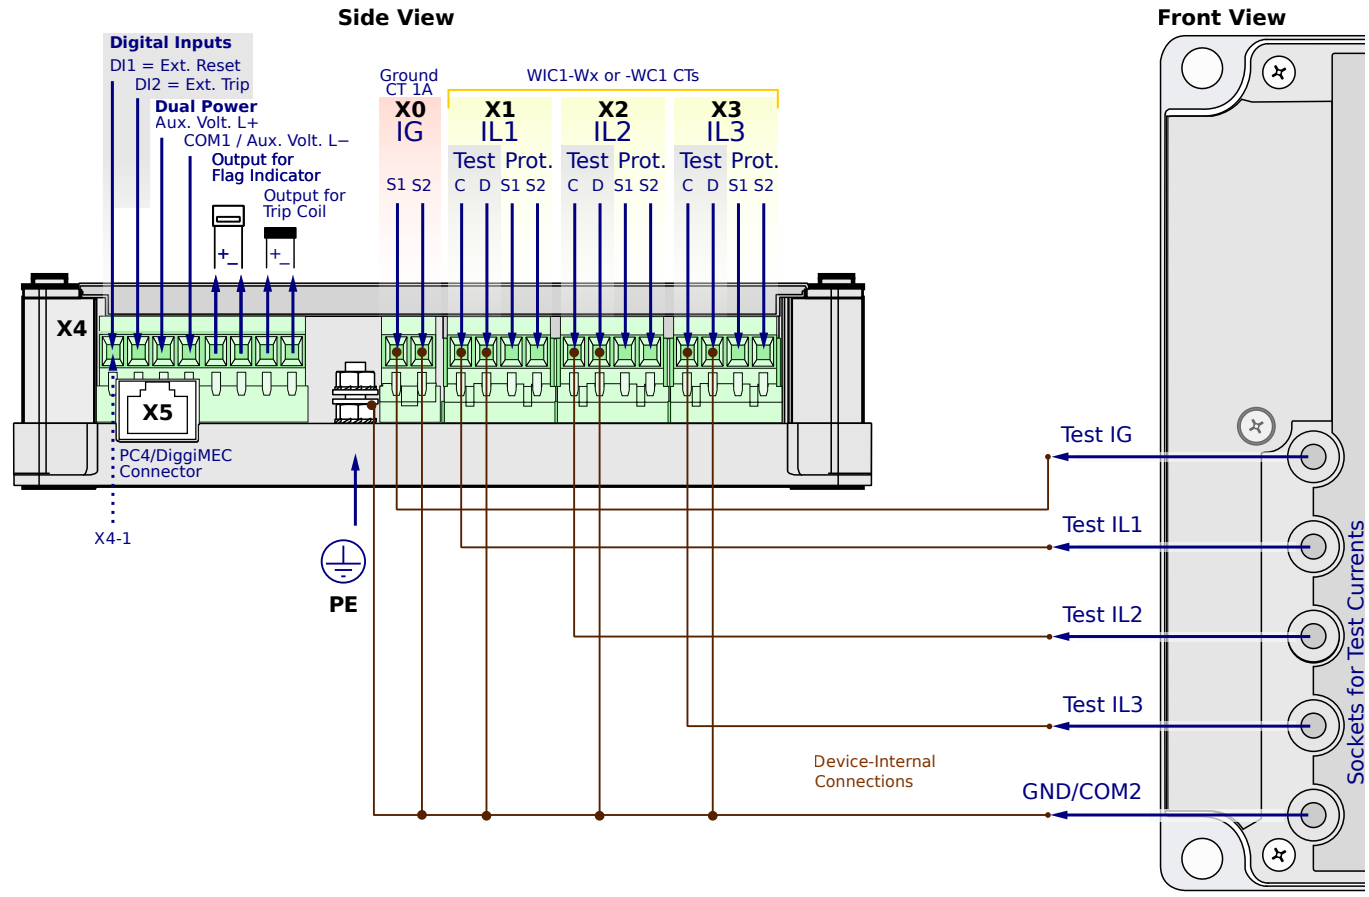


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0PAH

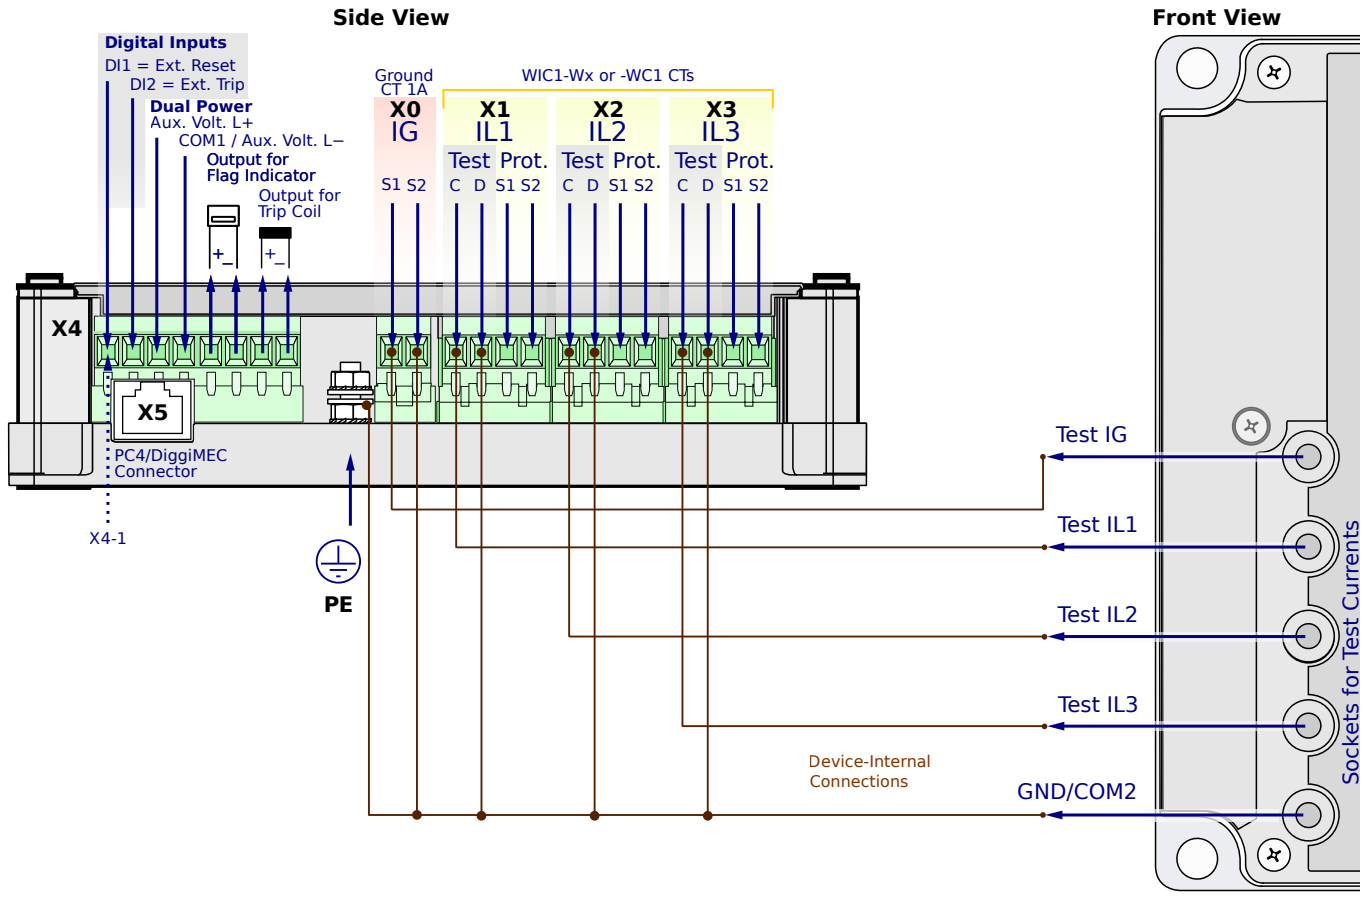


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG0PB0

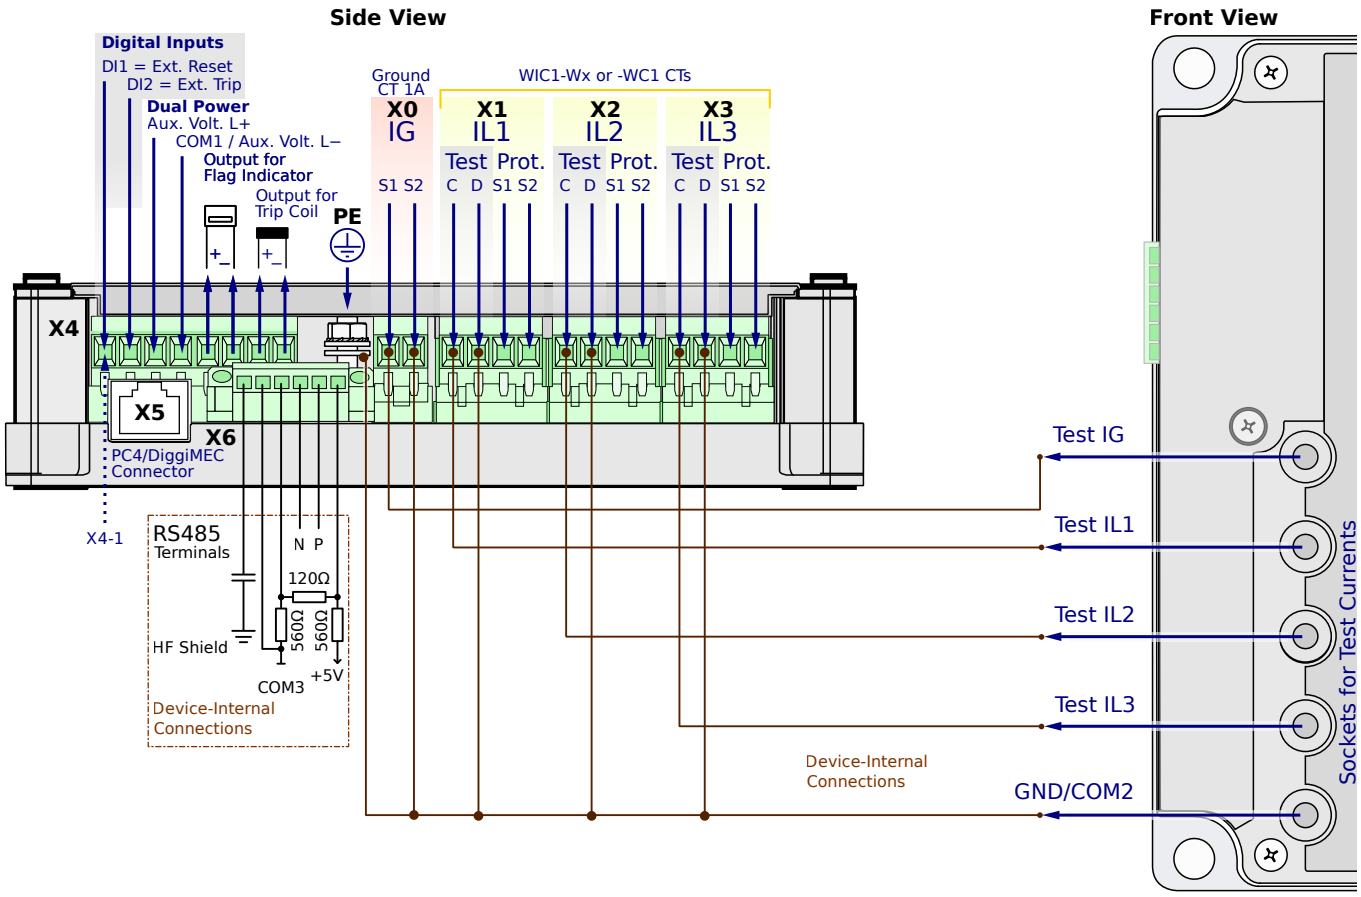


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0PBH

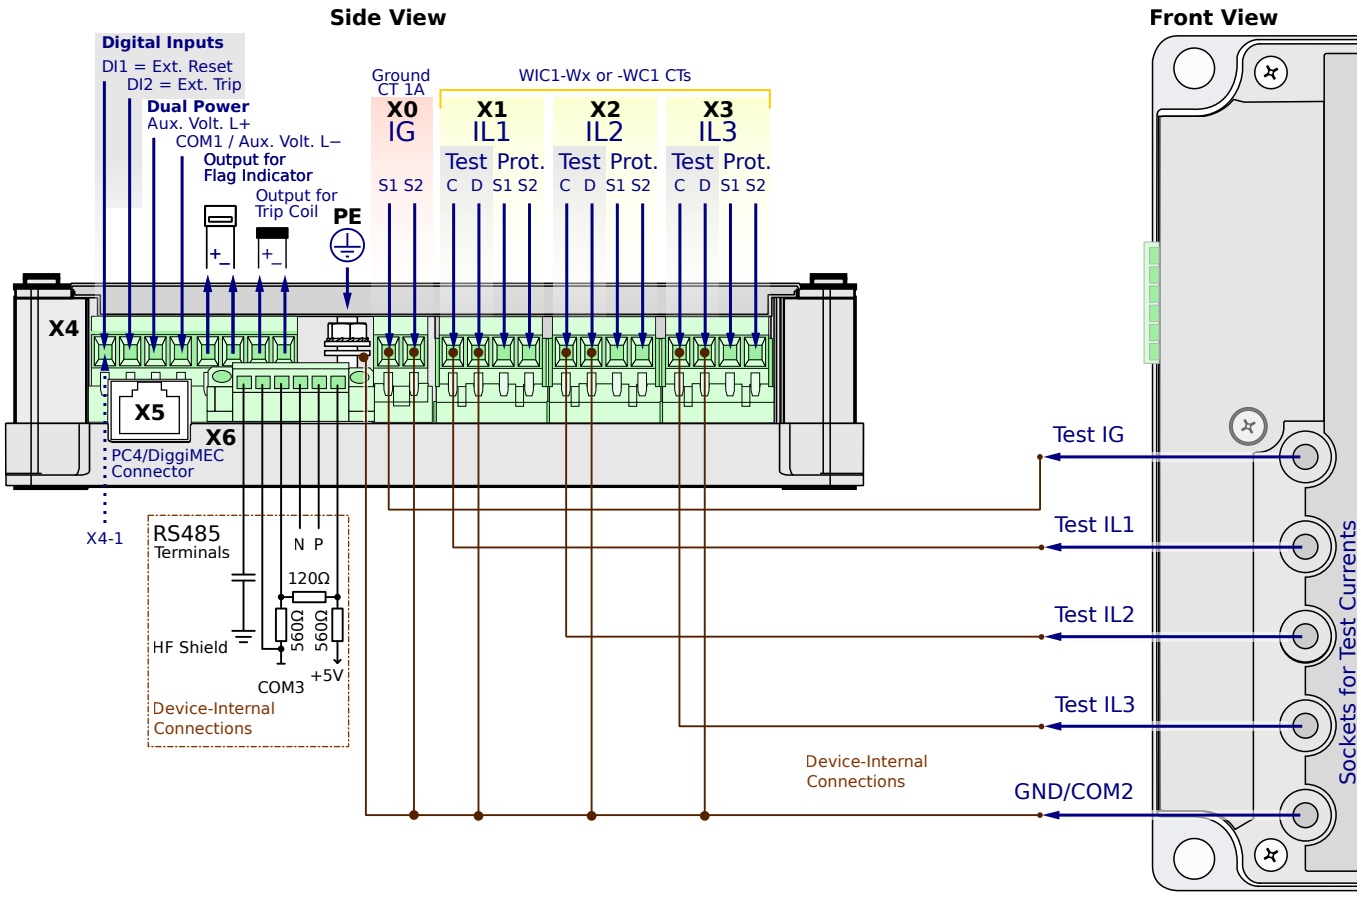


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG0PC0

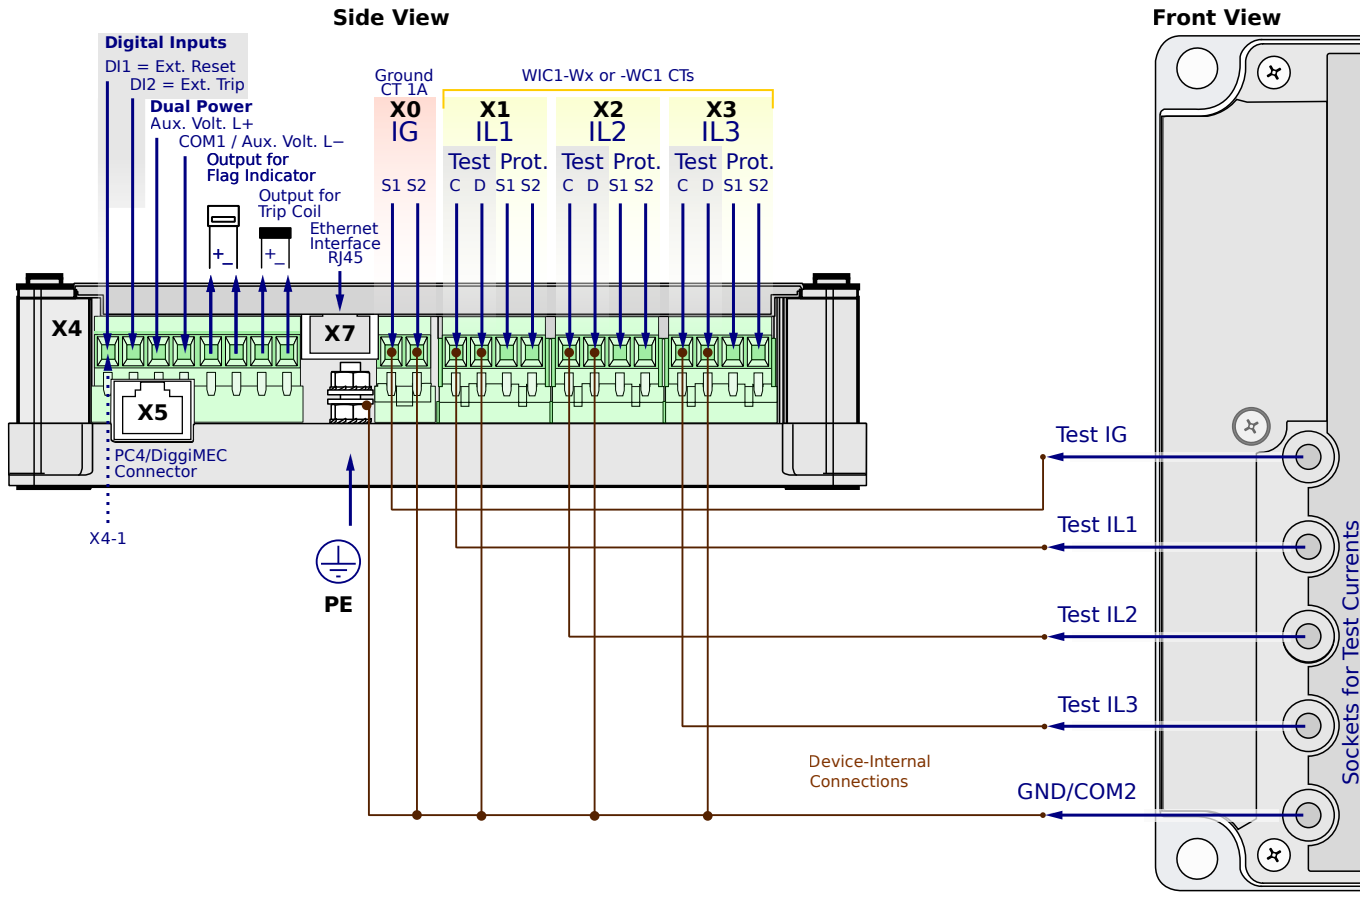


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0PCH

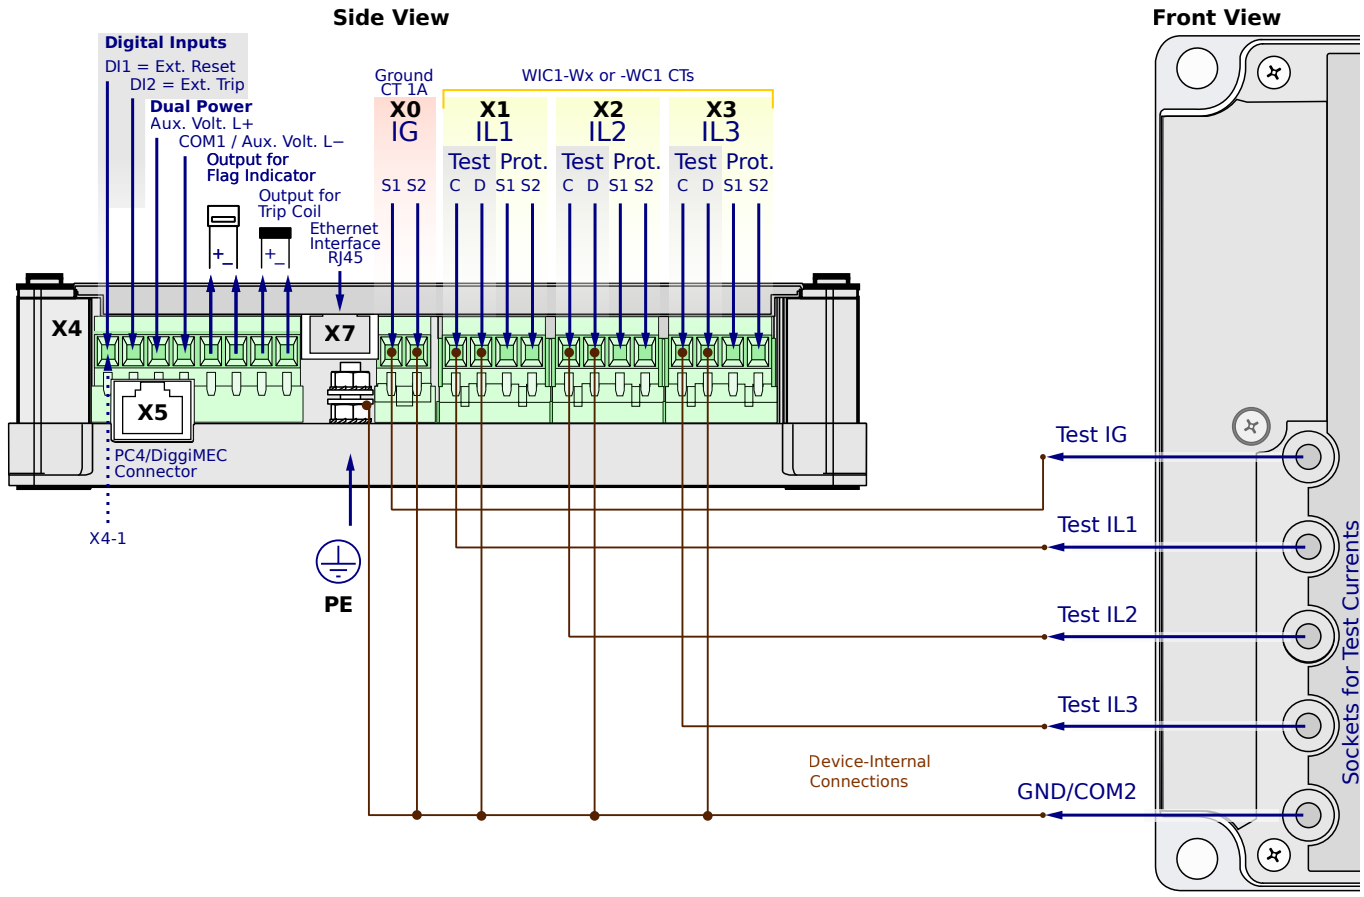


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG0PL0

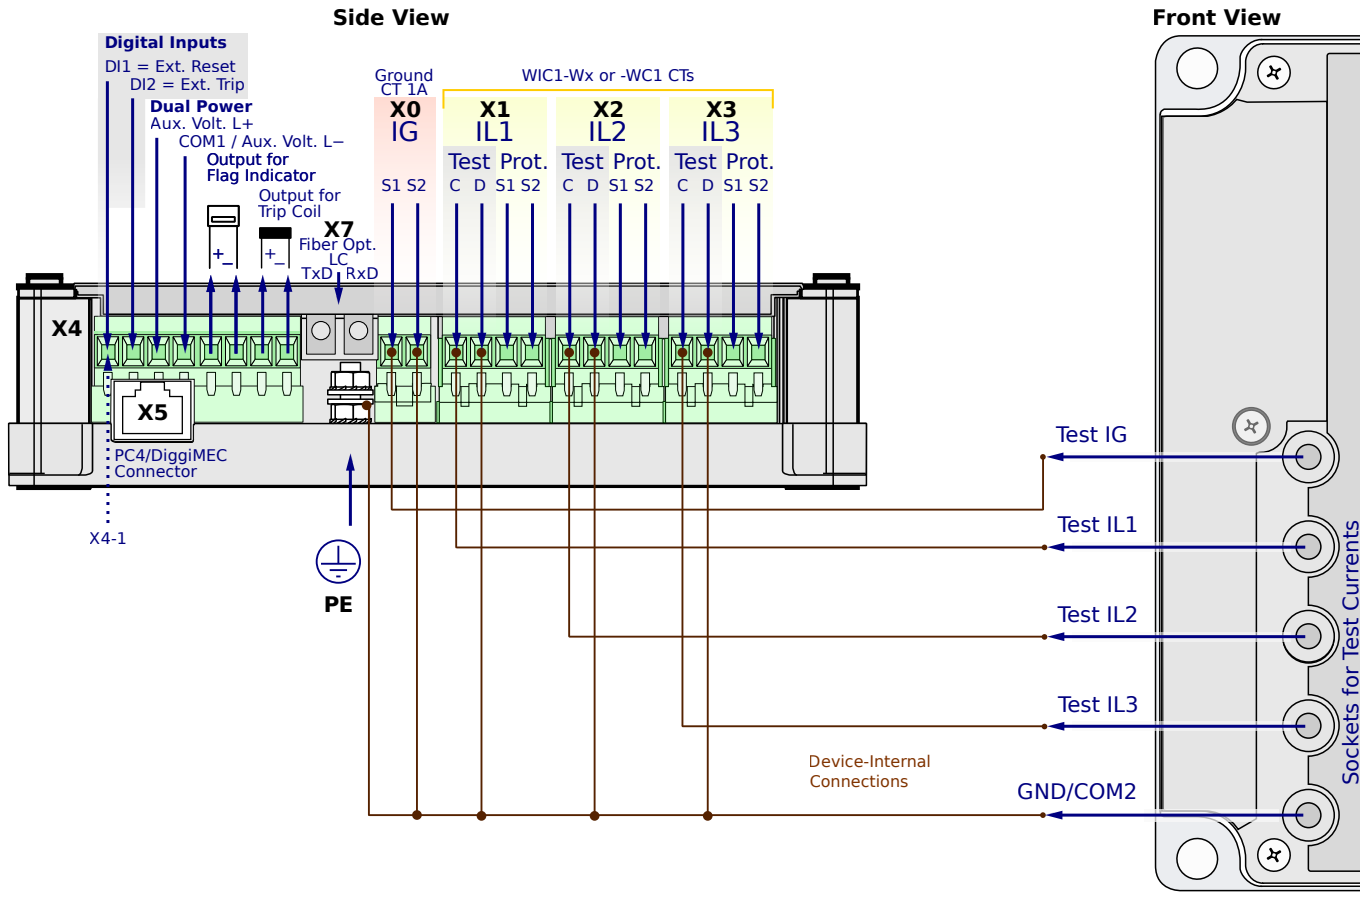


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG0PLH

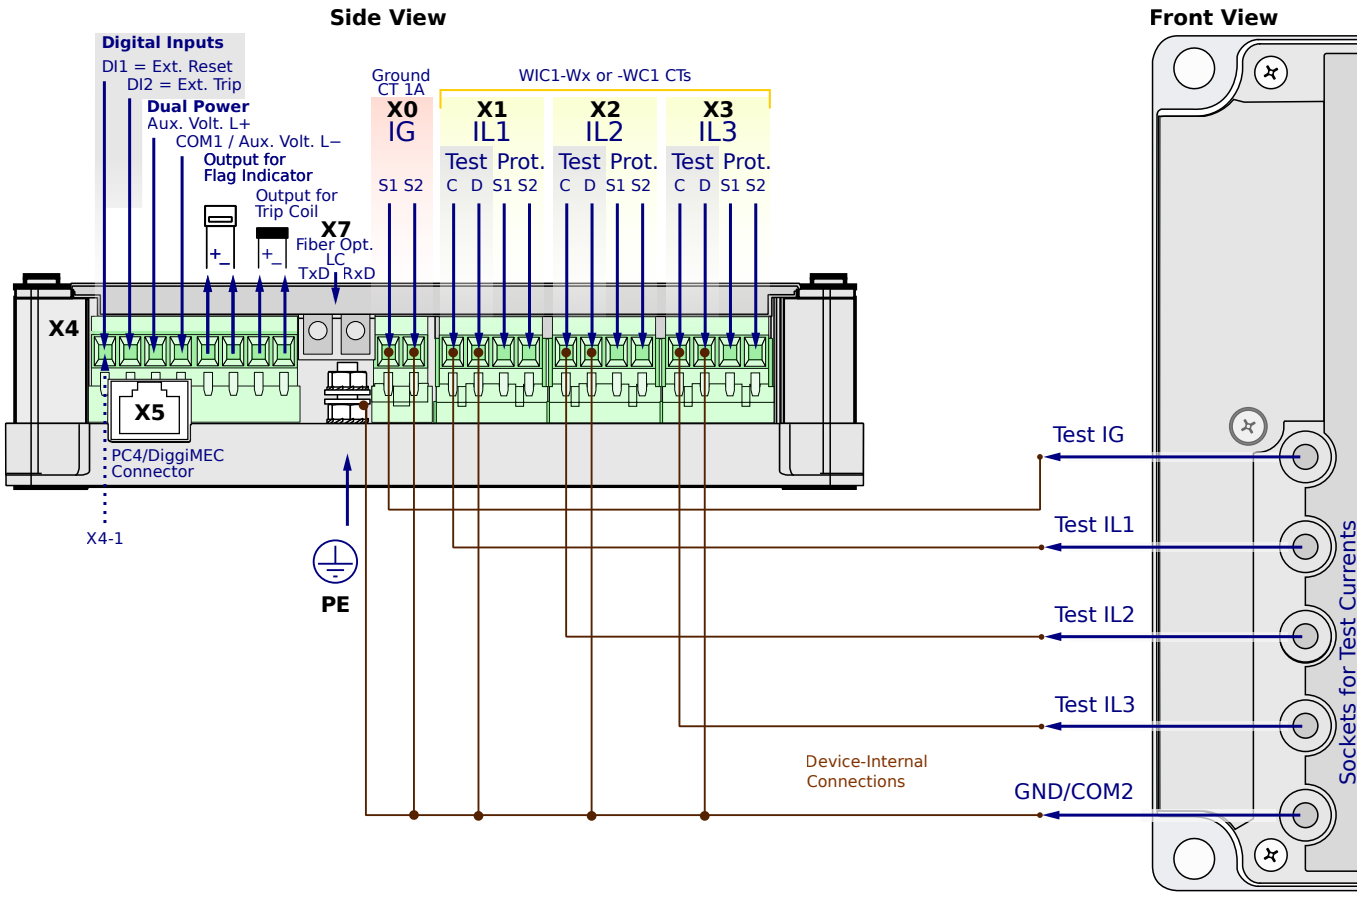


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1SA0

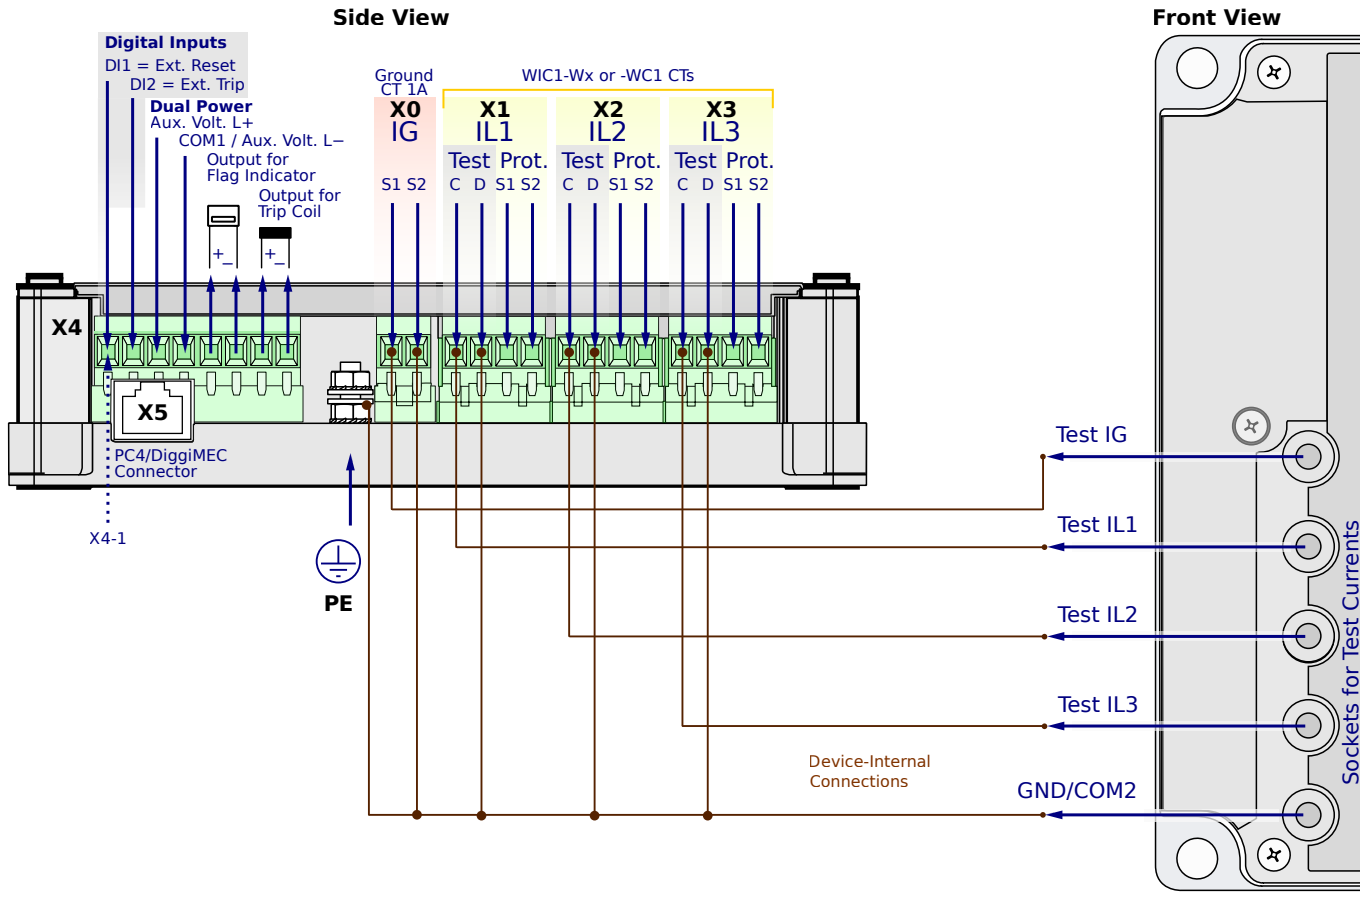


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1SAH

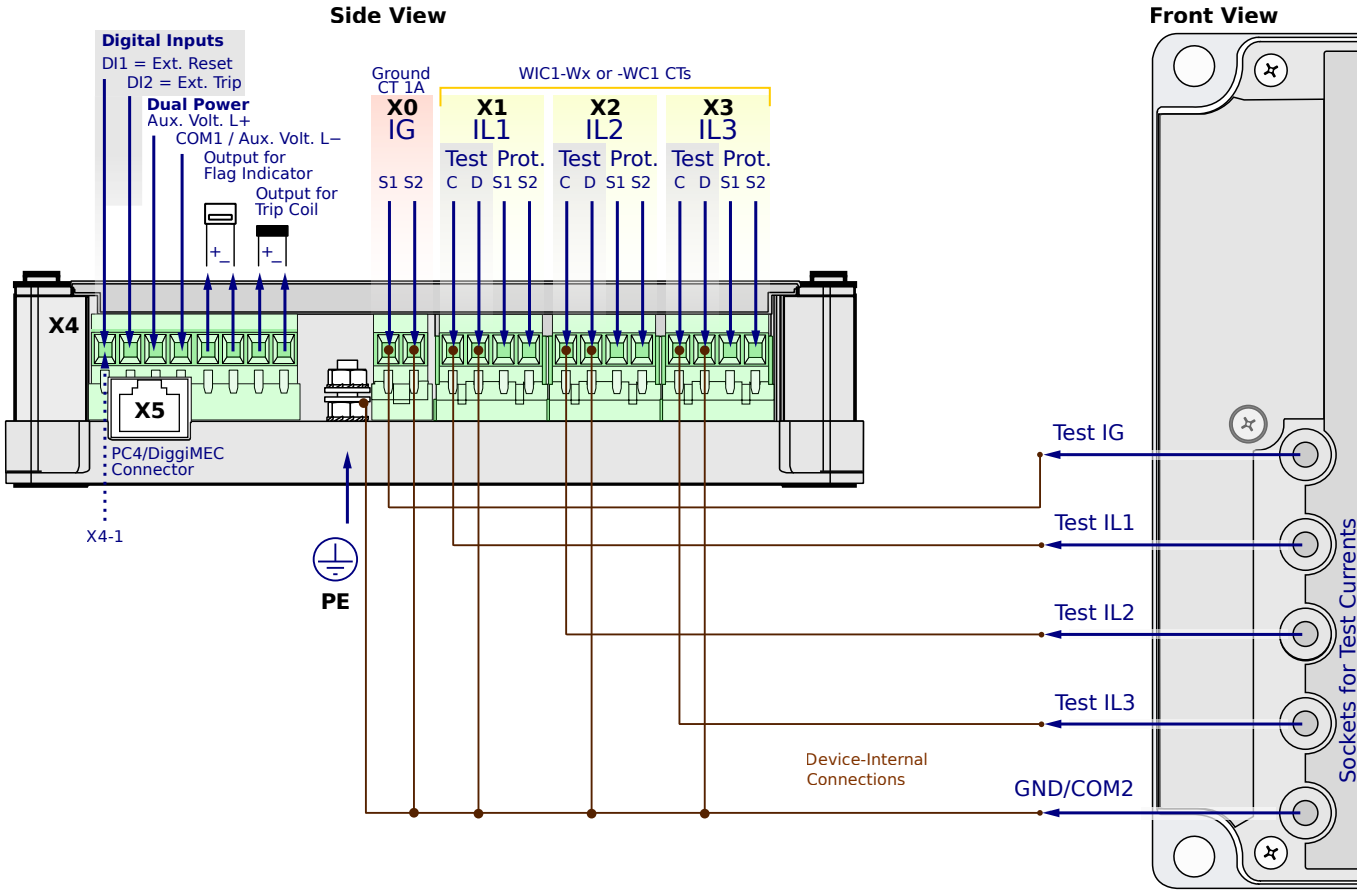


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1SB0

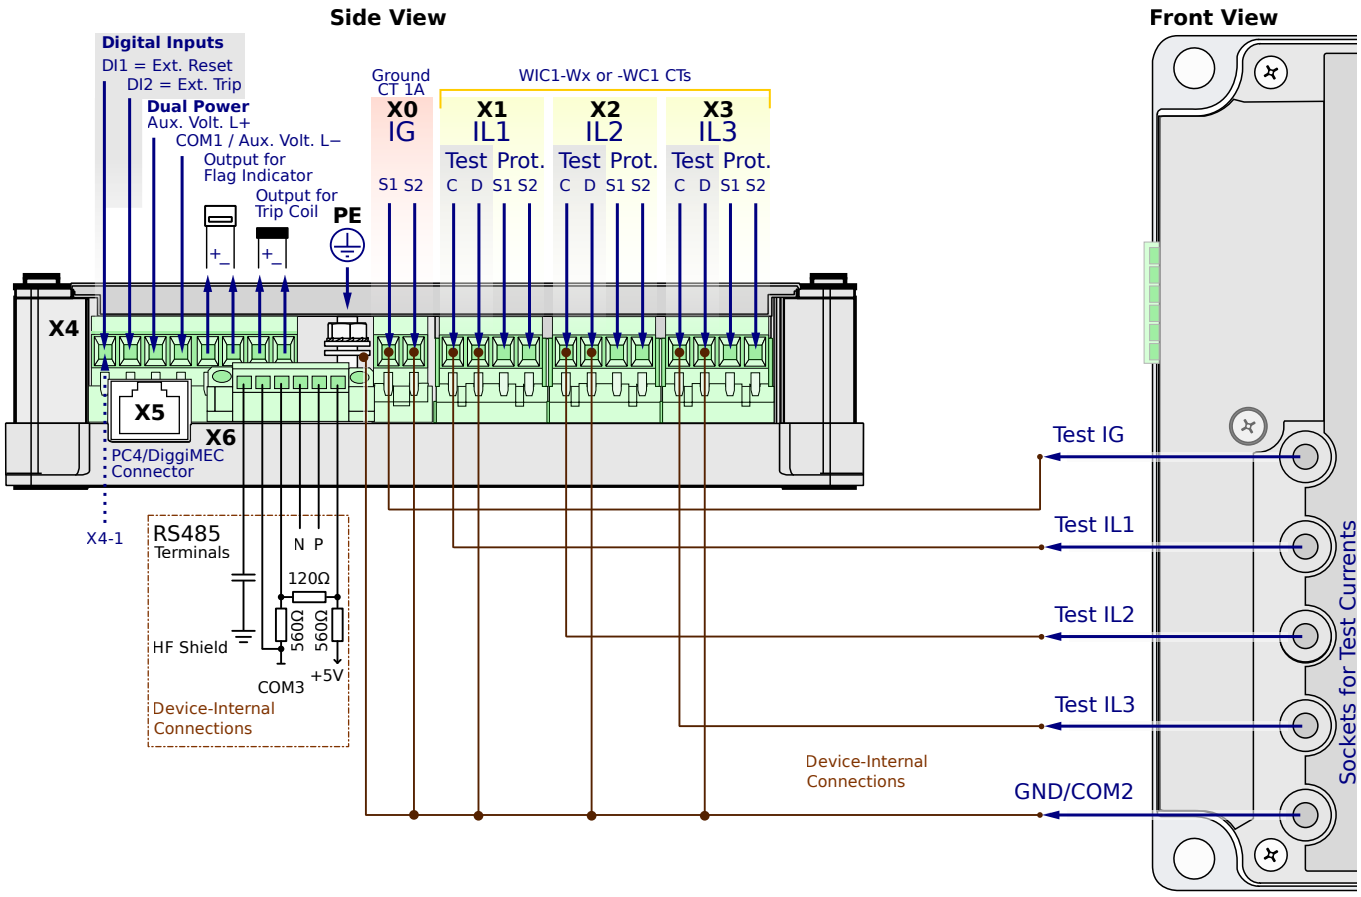


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1SBH

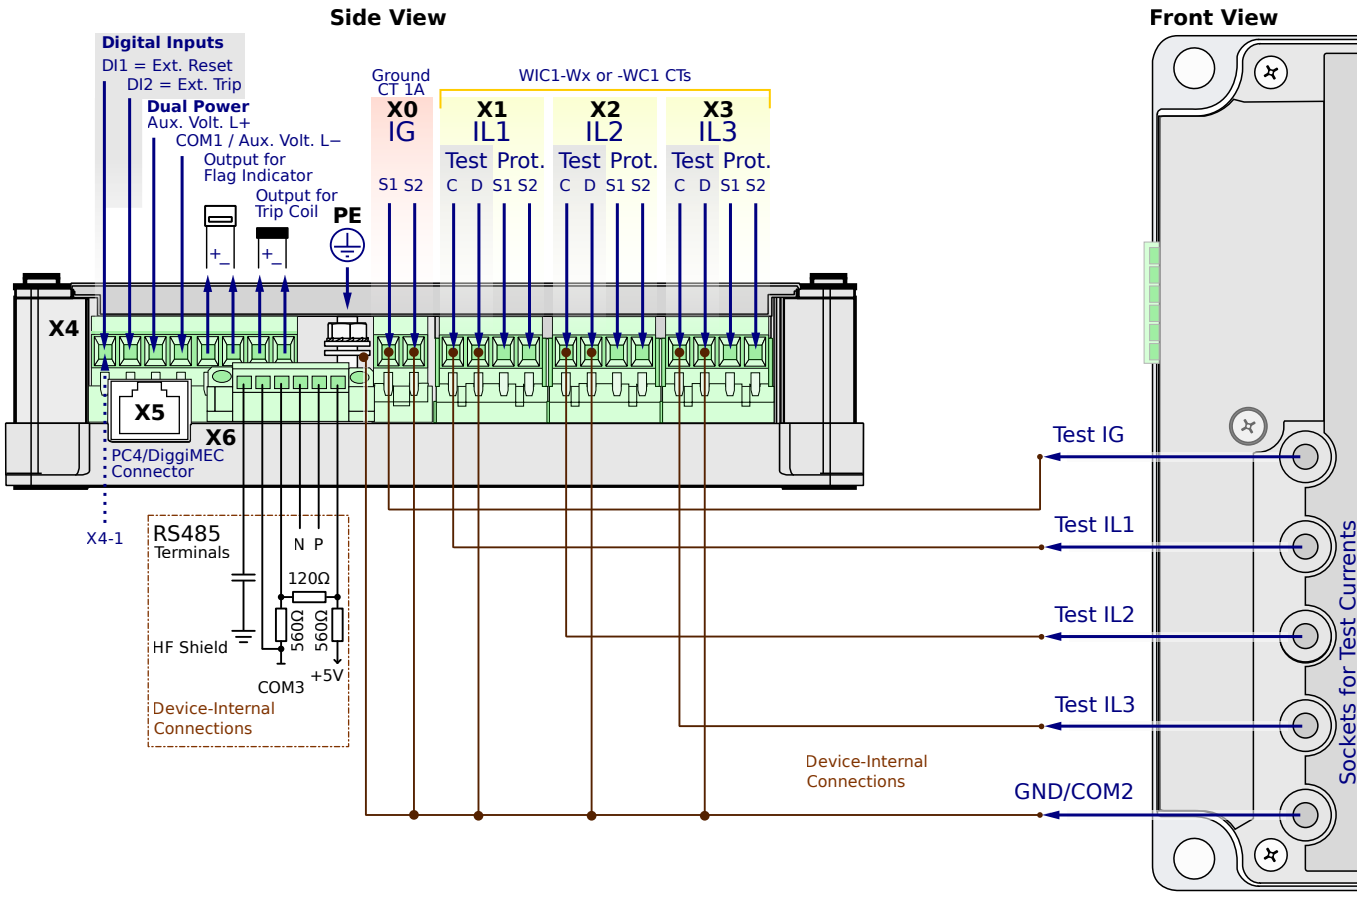


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1SC0

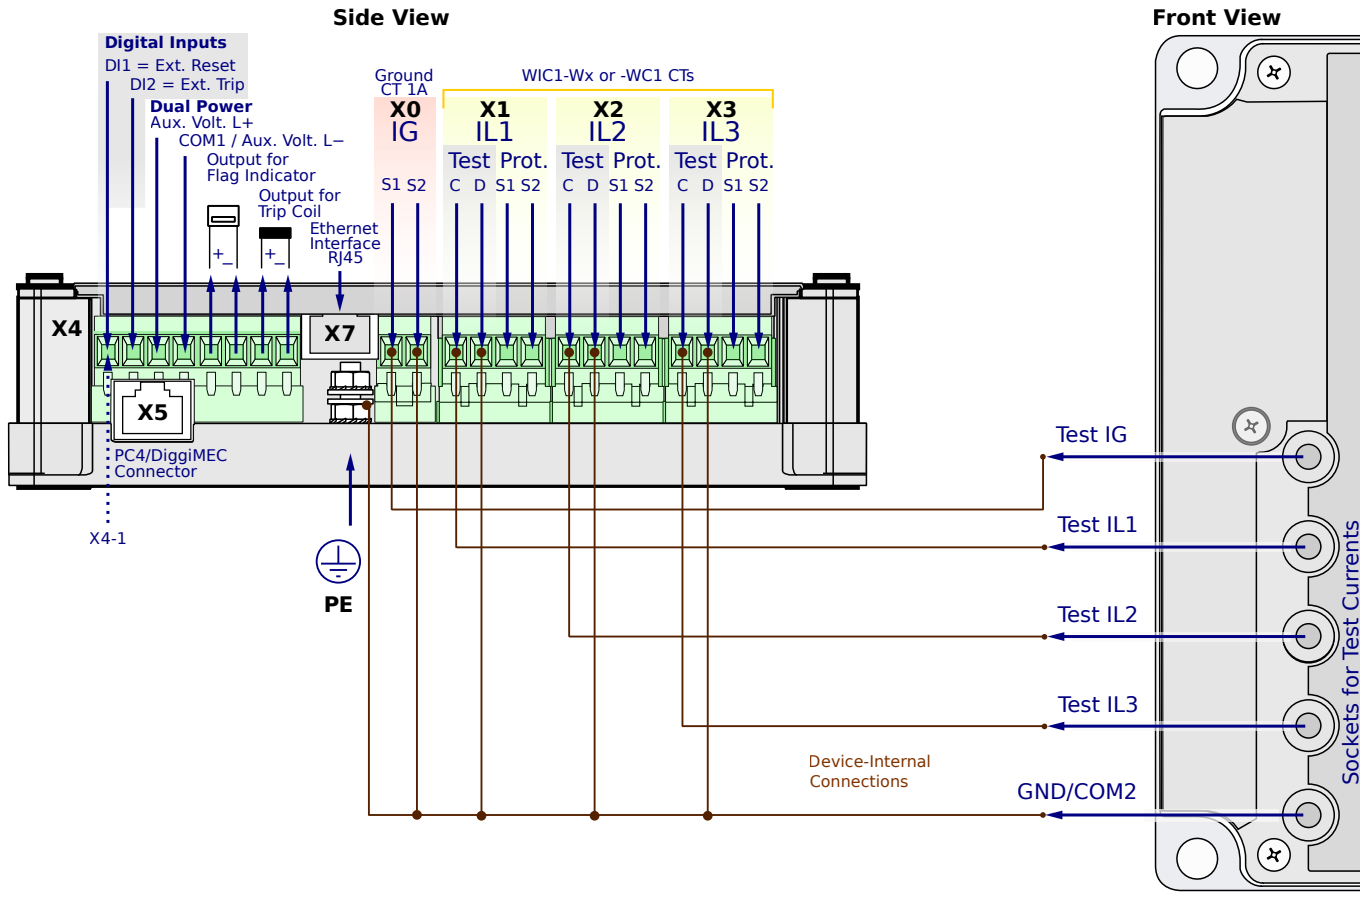


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1SCH

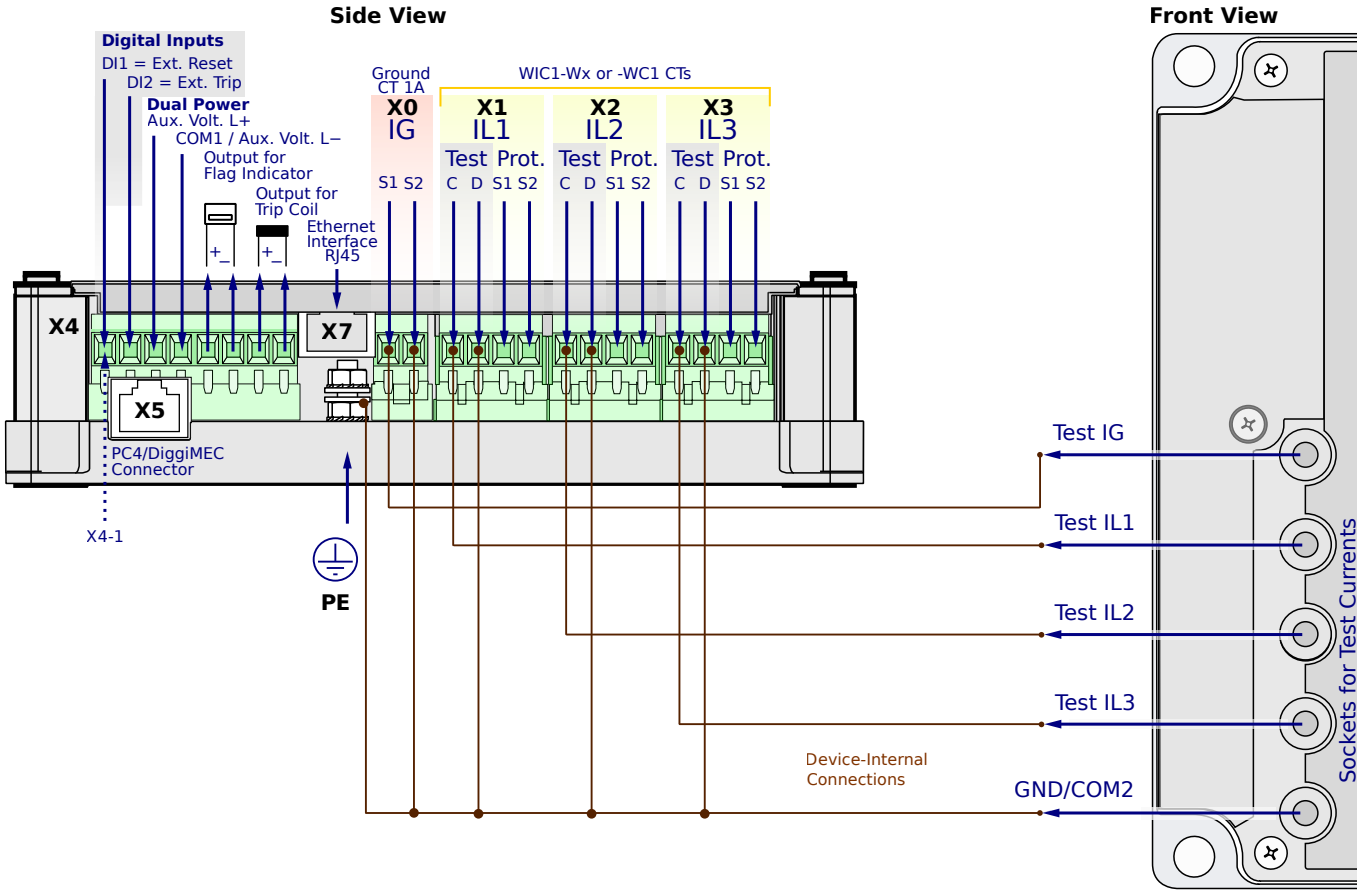


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1SL0

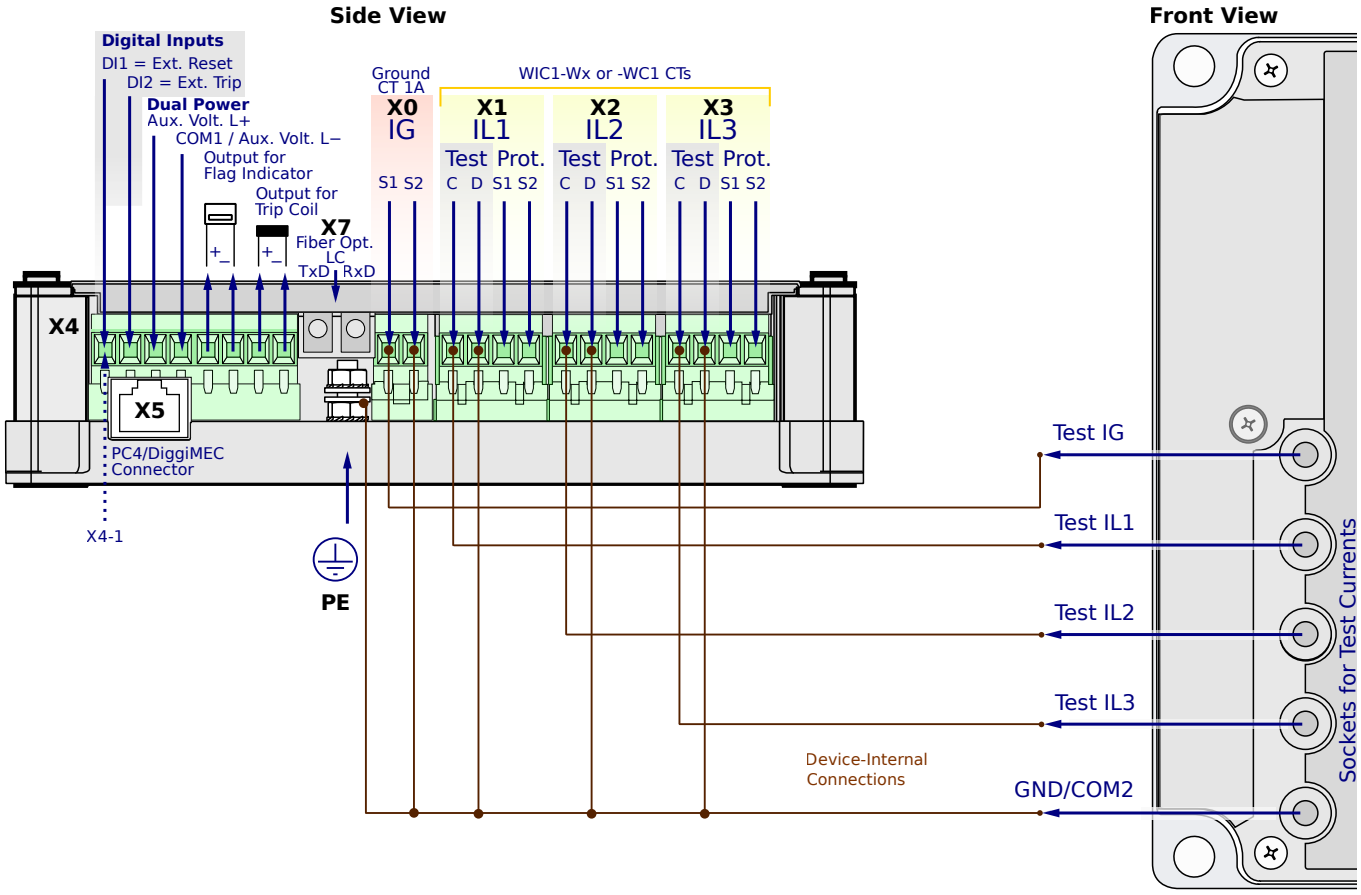


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1SLH

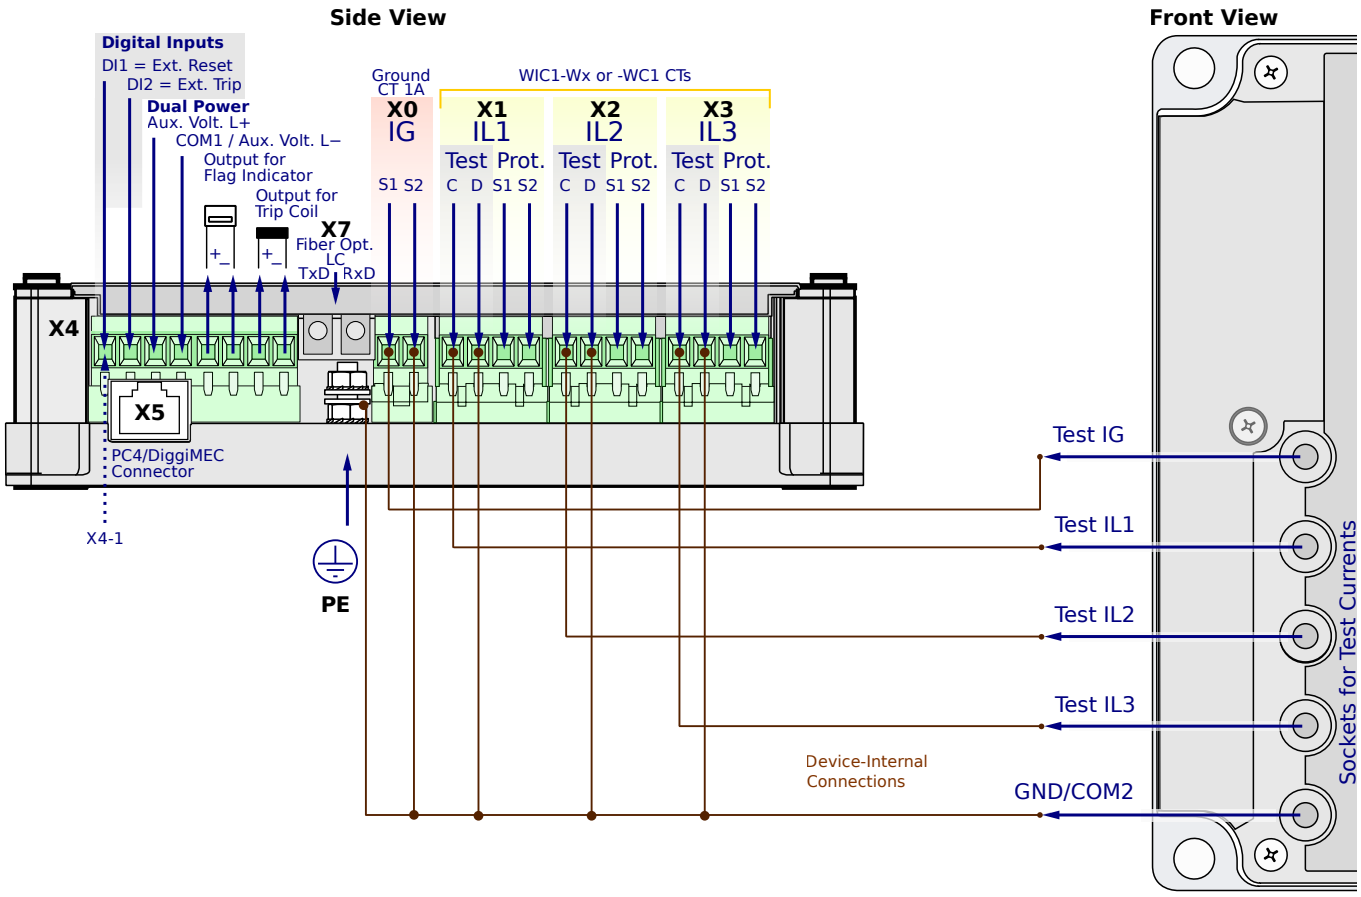


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1AA0

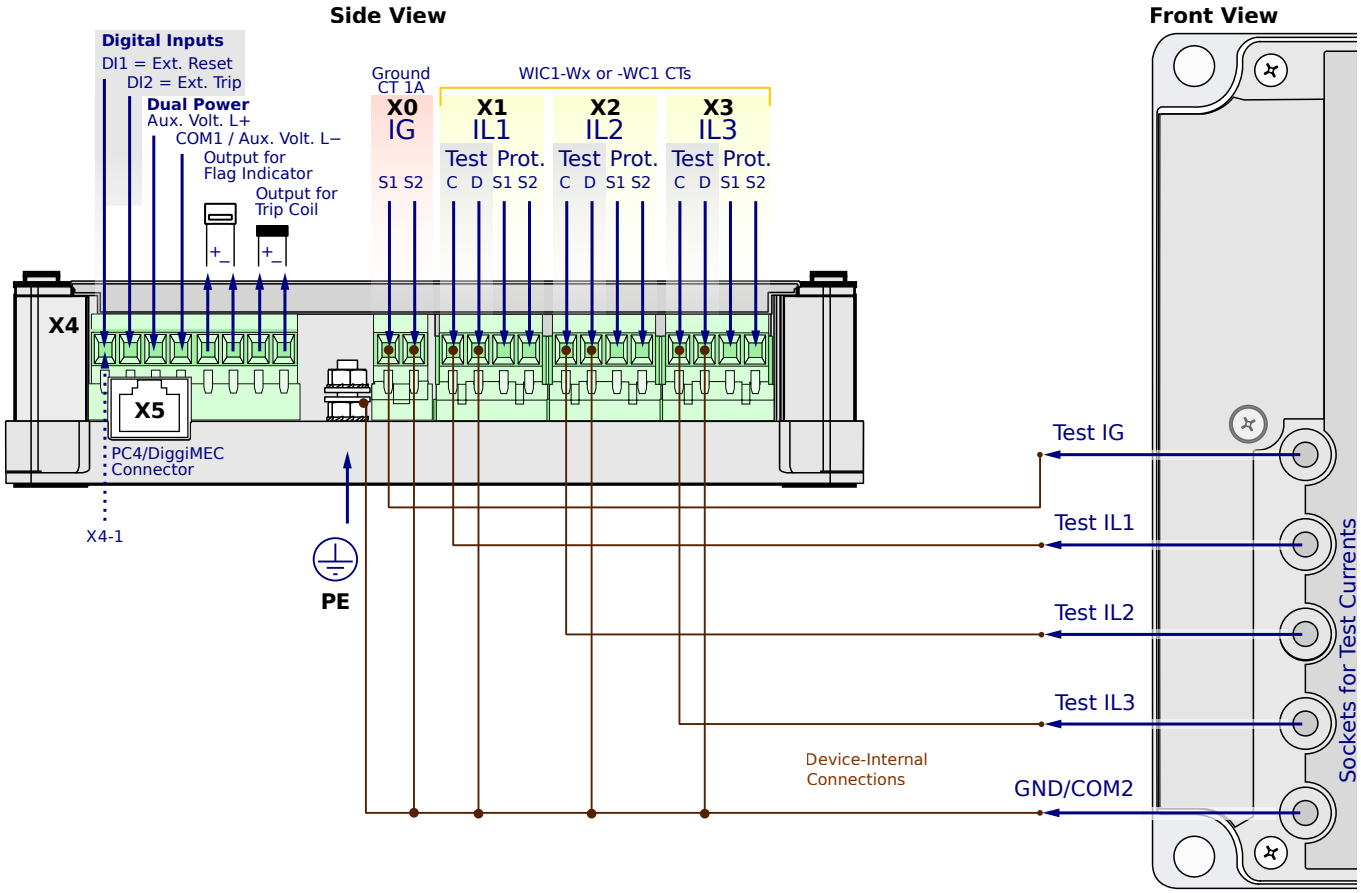


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1AAH

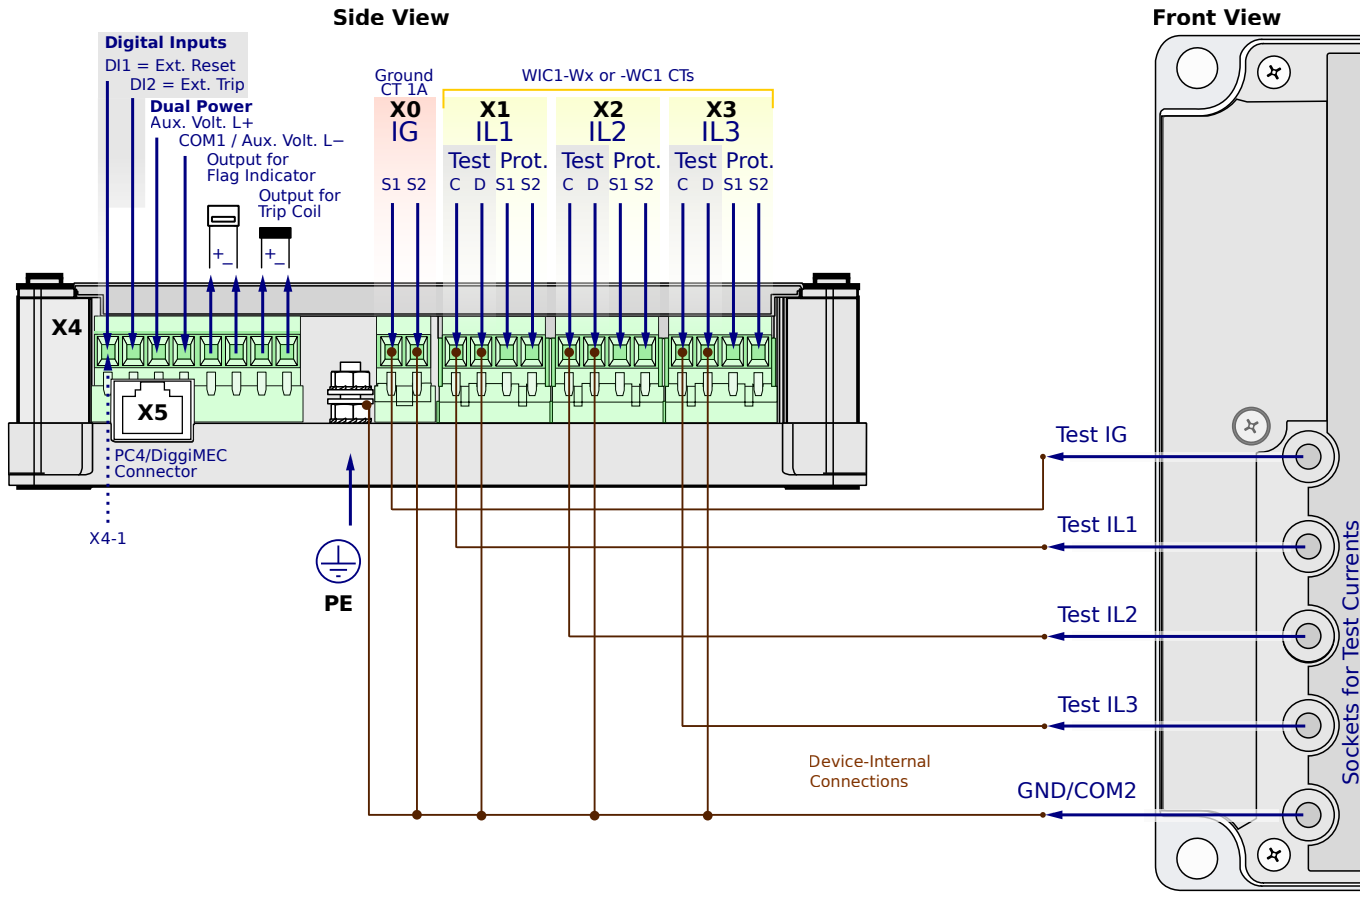


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1AB0

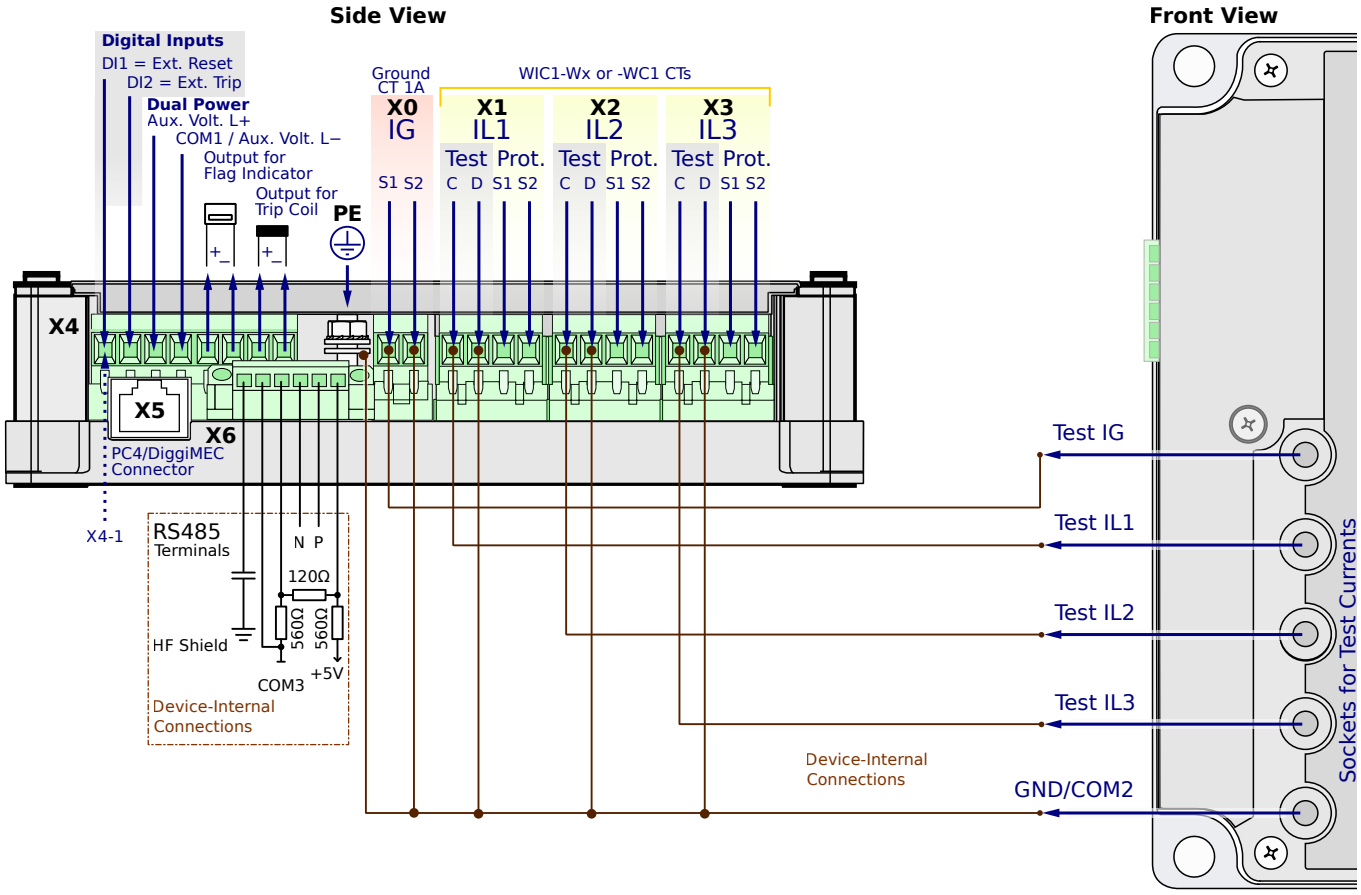


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1ABH

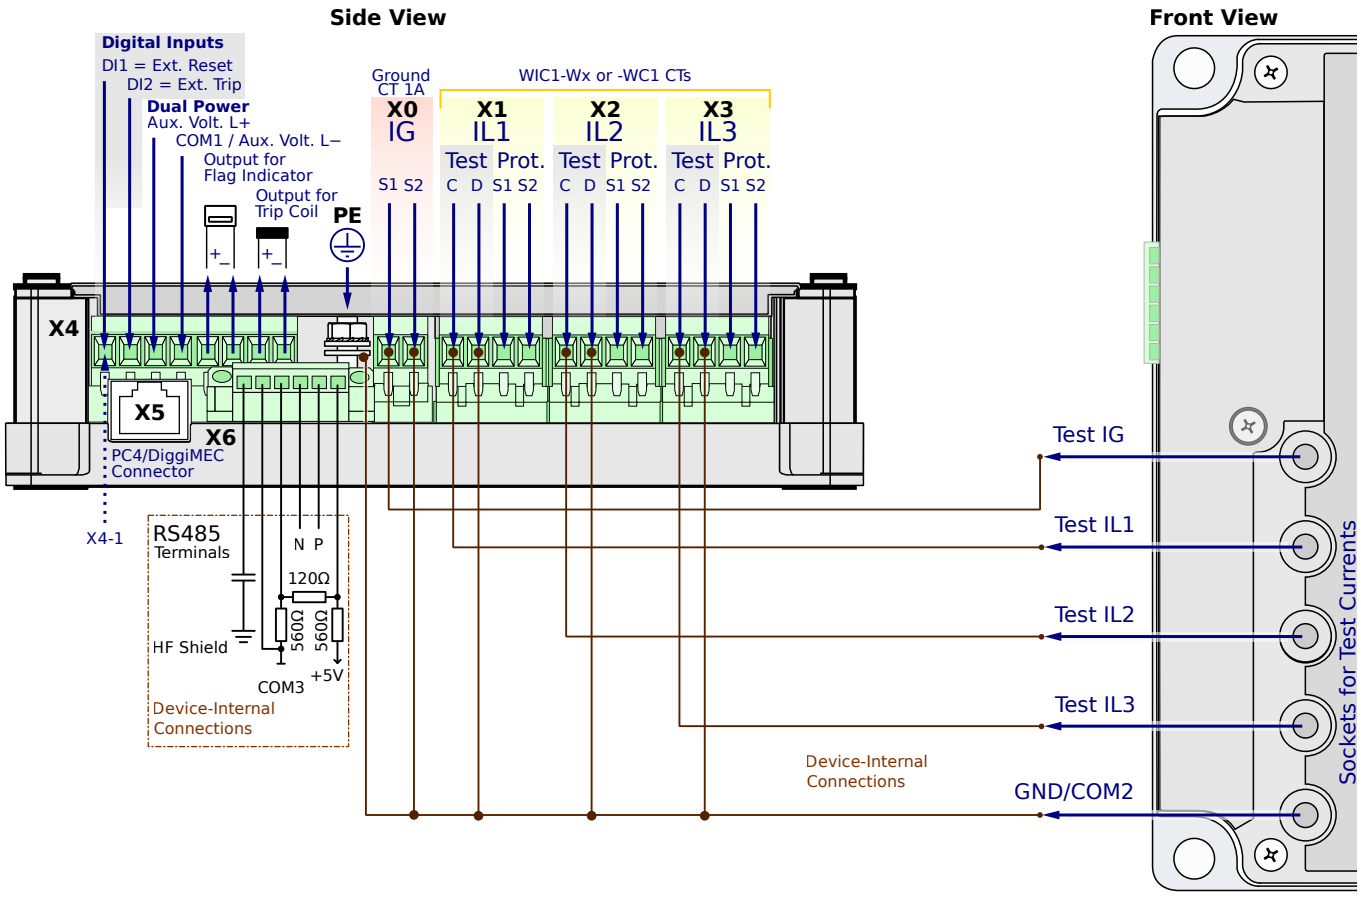


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1AC0

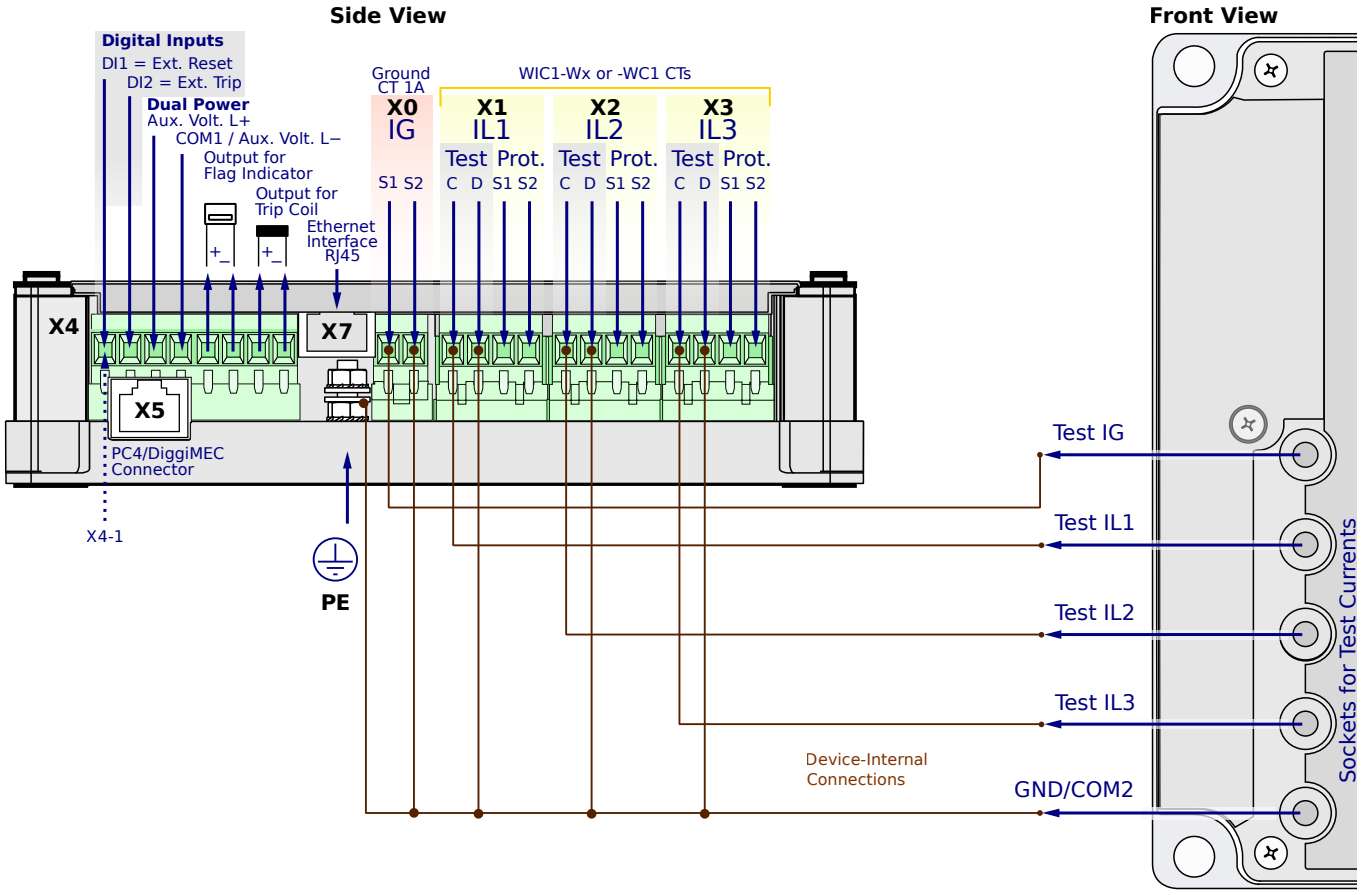


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1ACH

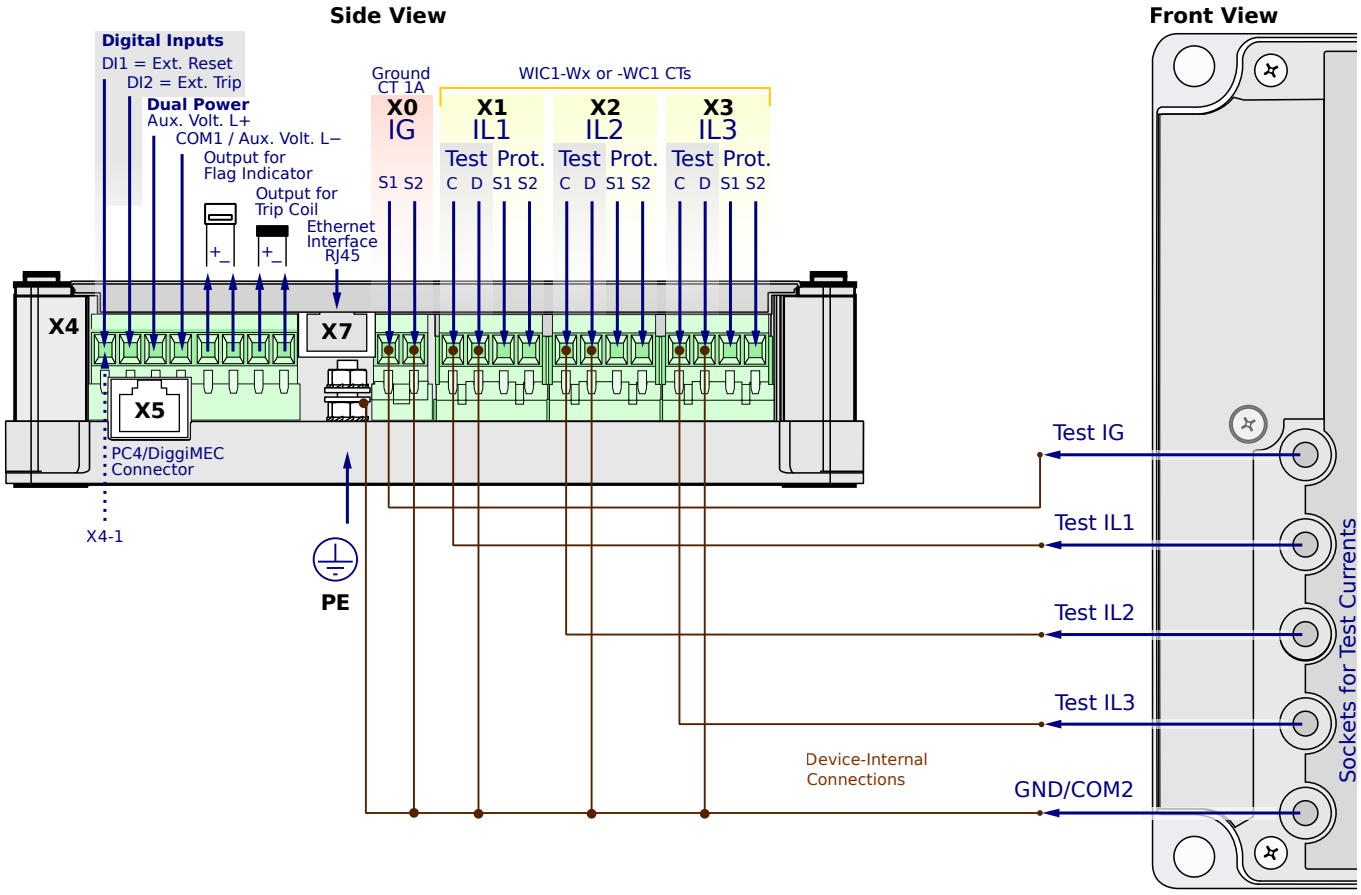


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1AL0

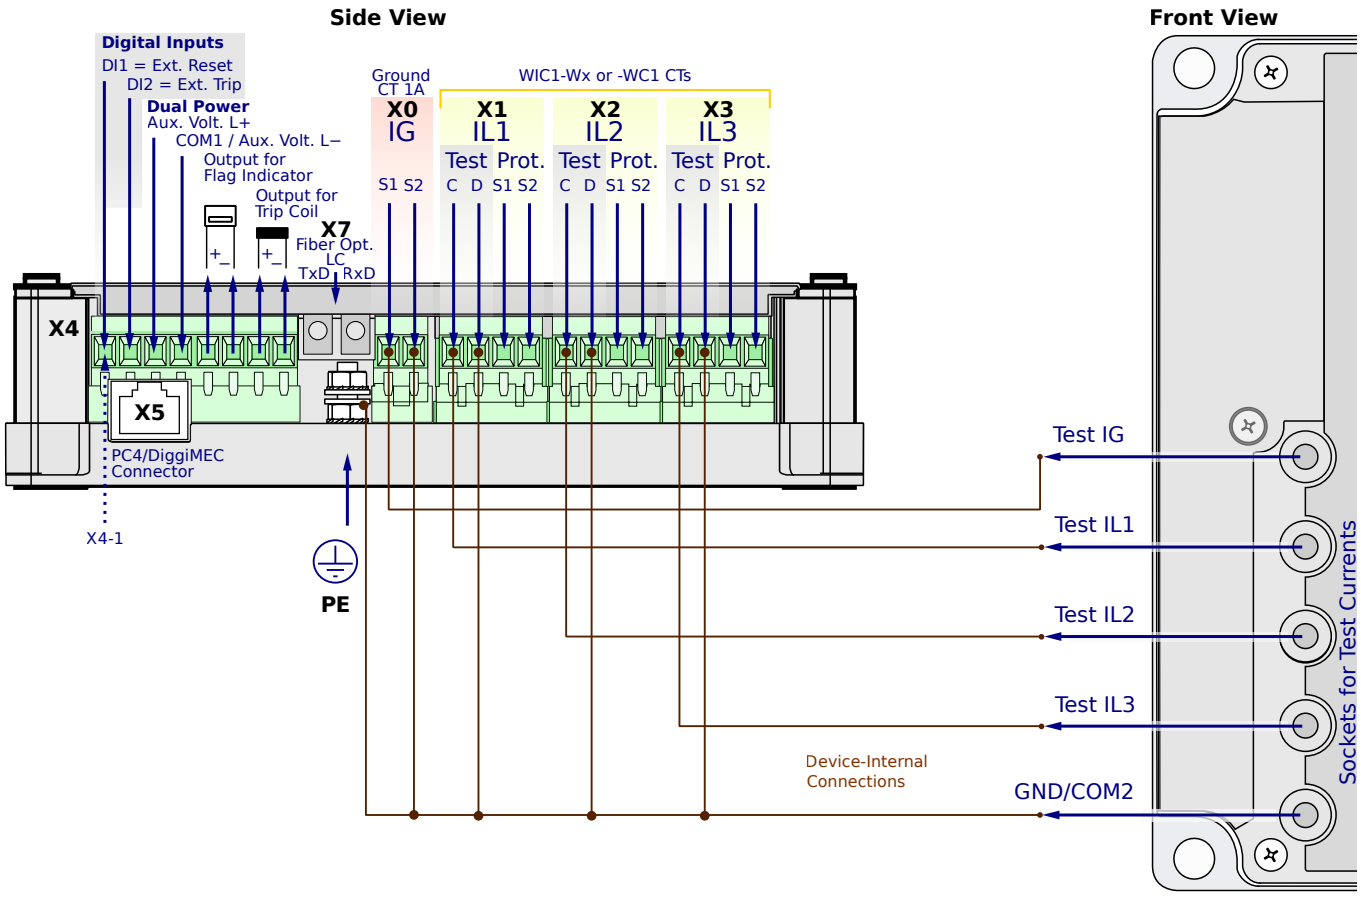


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1ALH

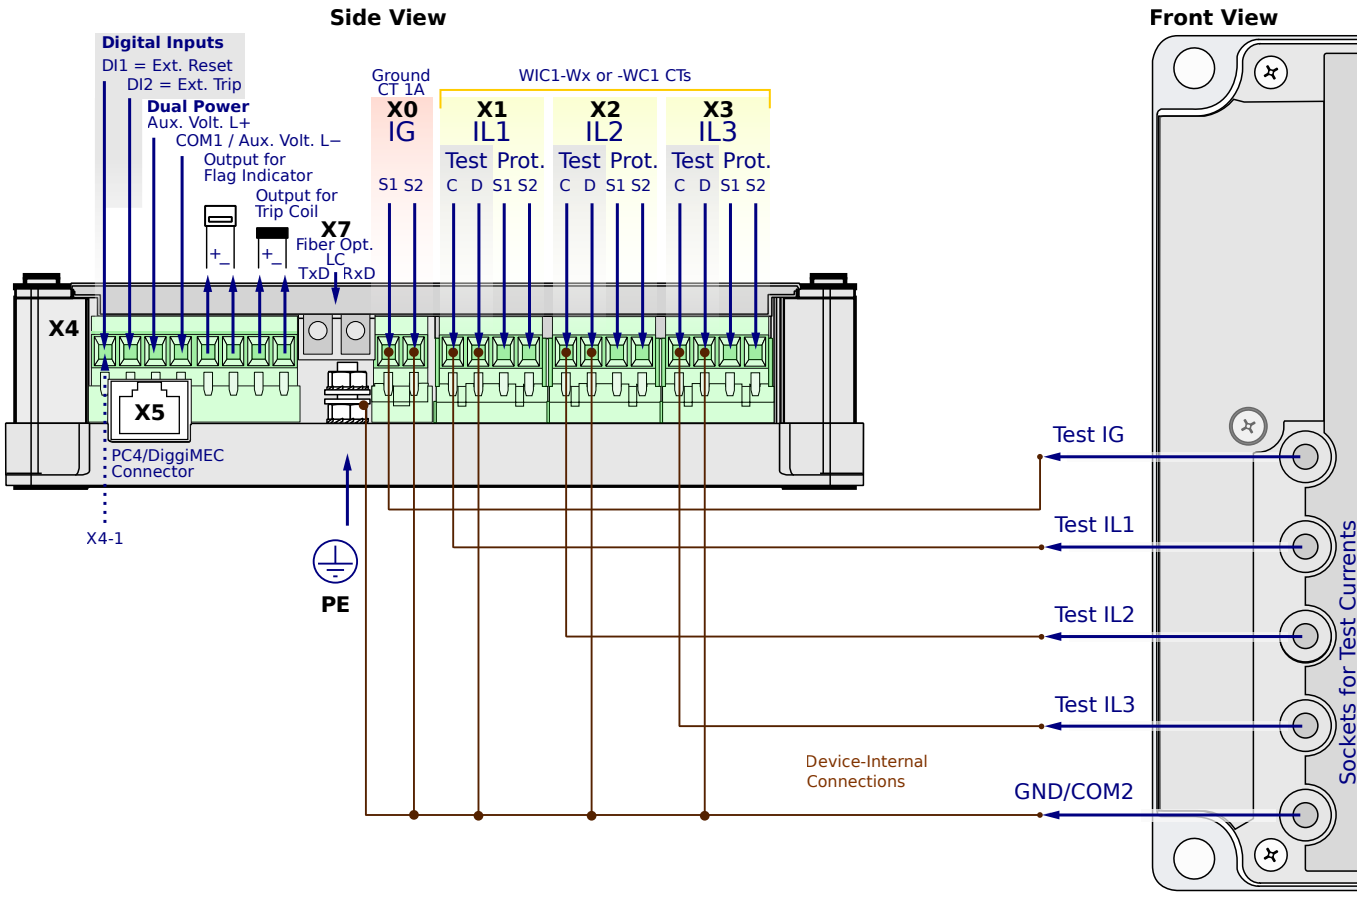


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1PA0

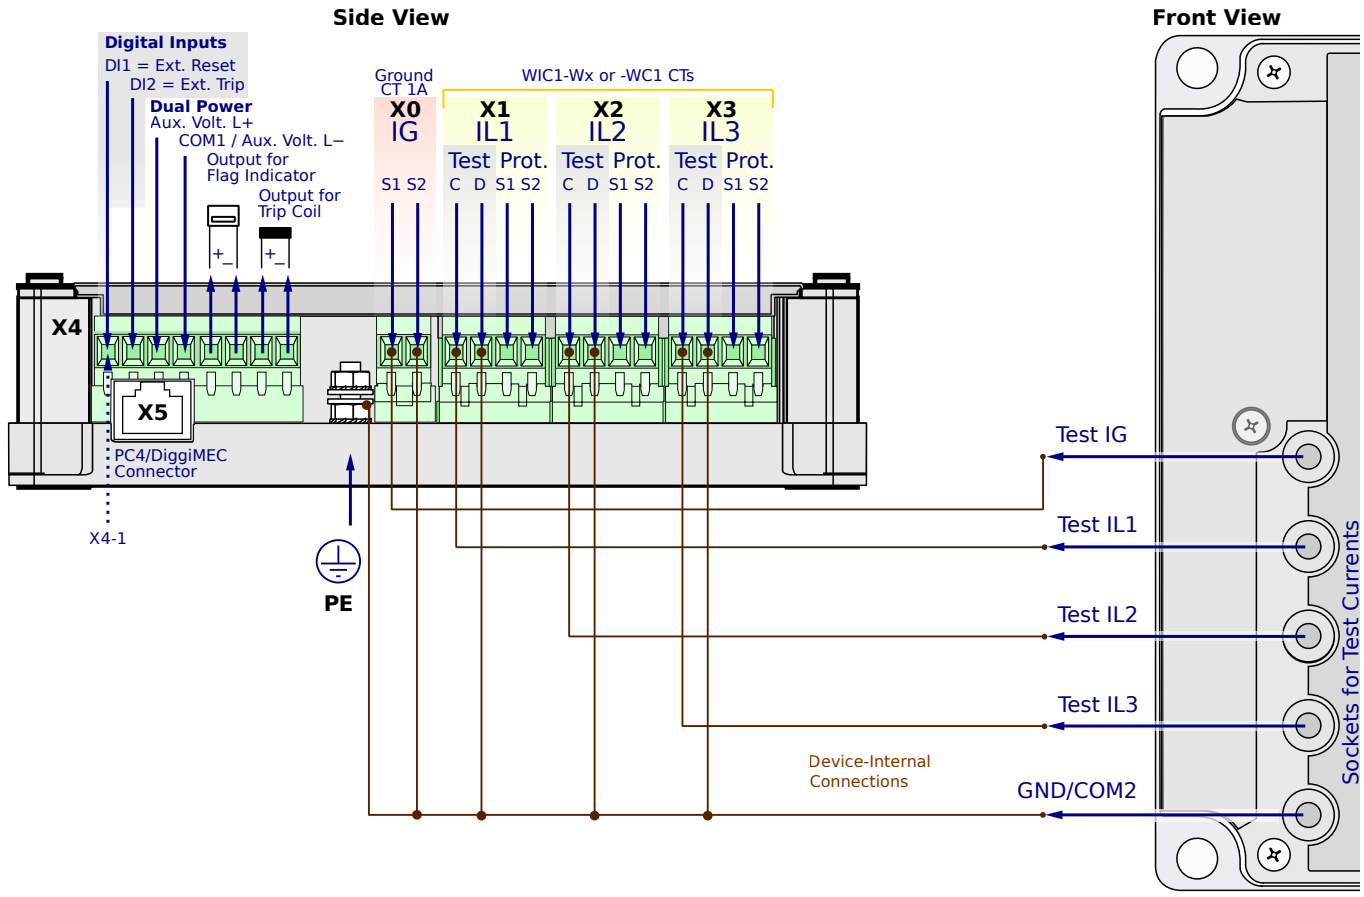


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1PAH

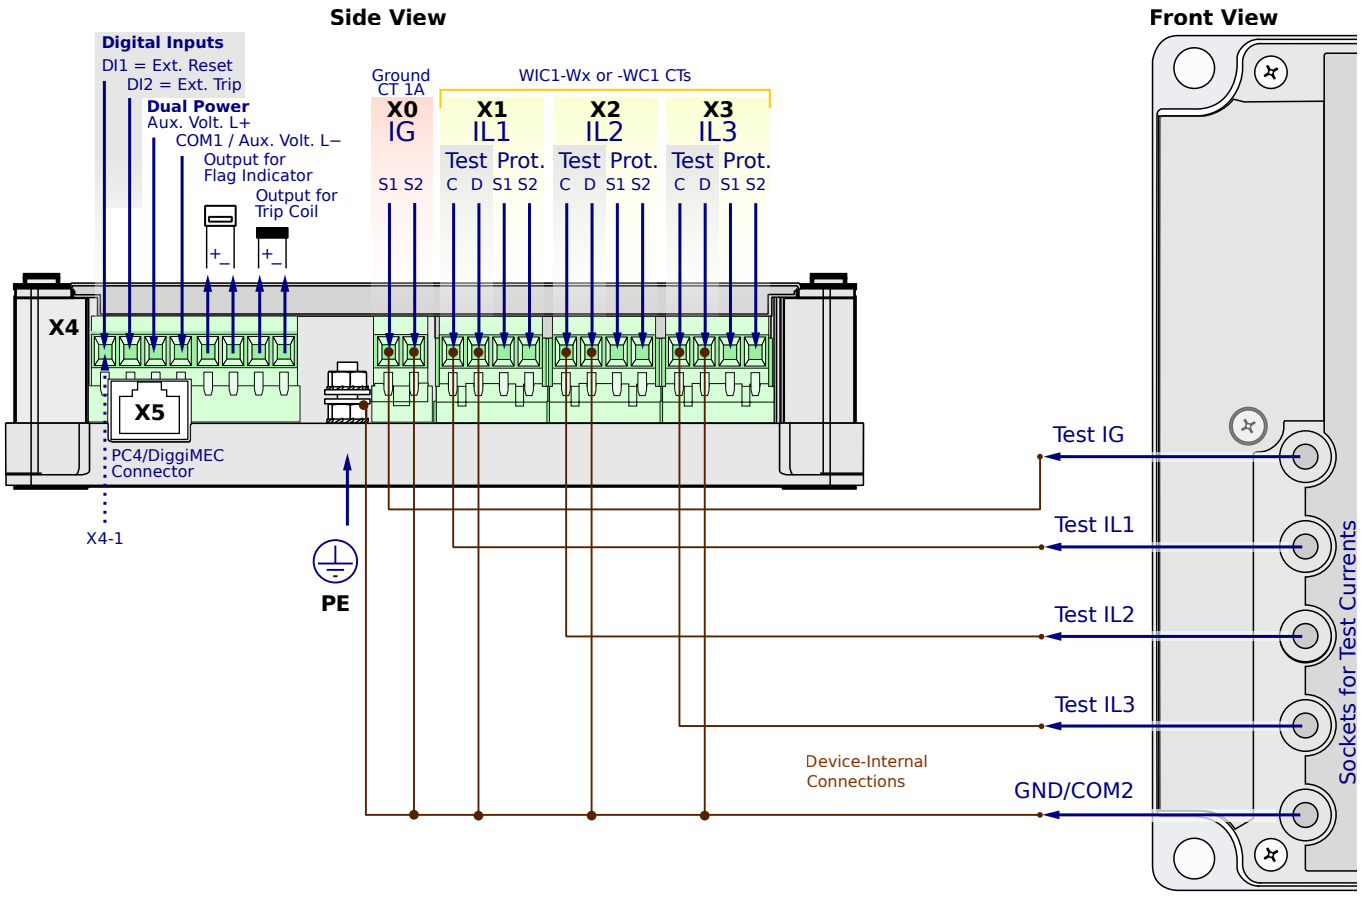


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG1PB0

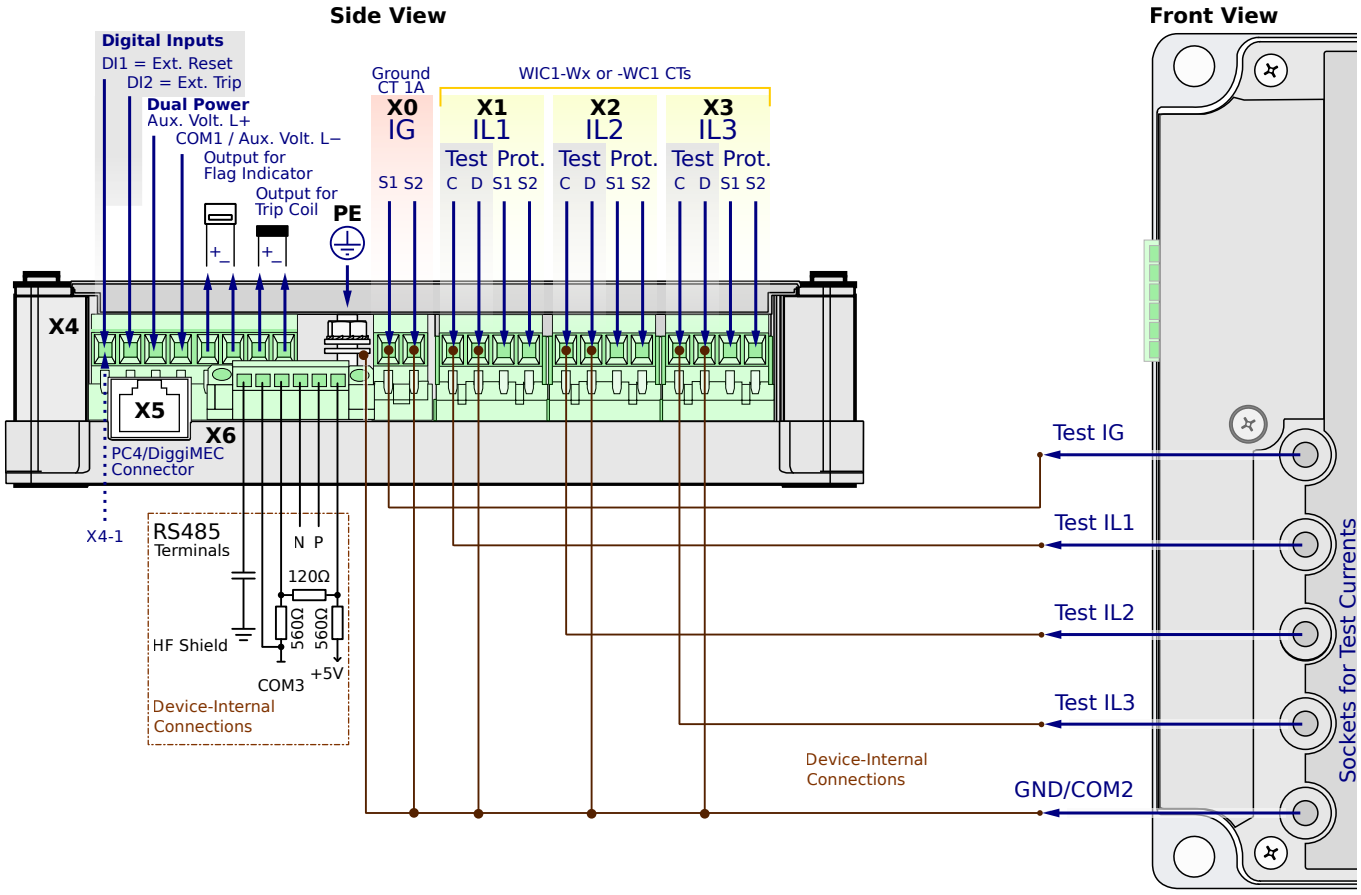


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1PBH

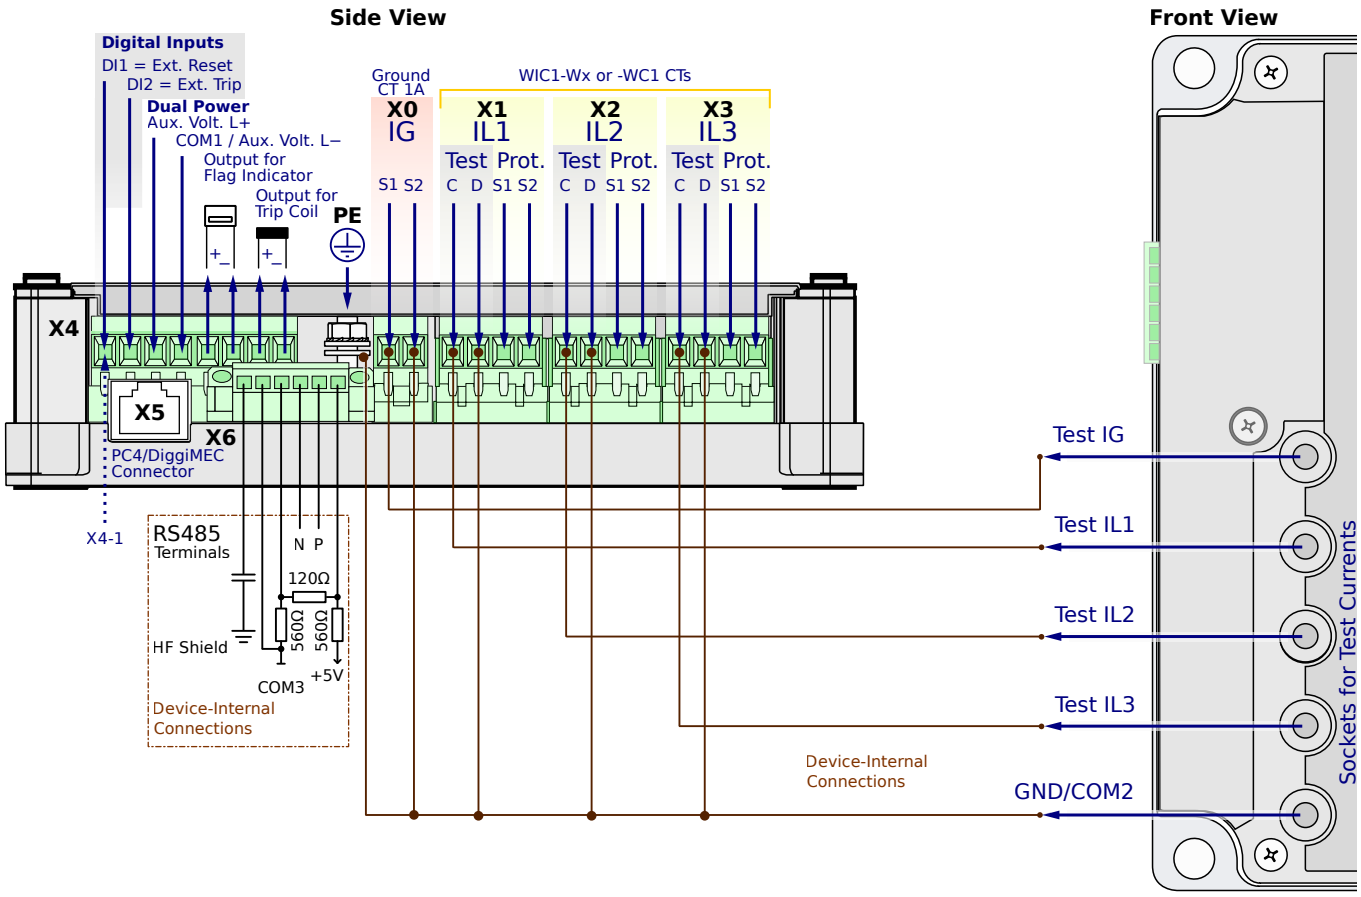


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG1PC0

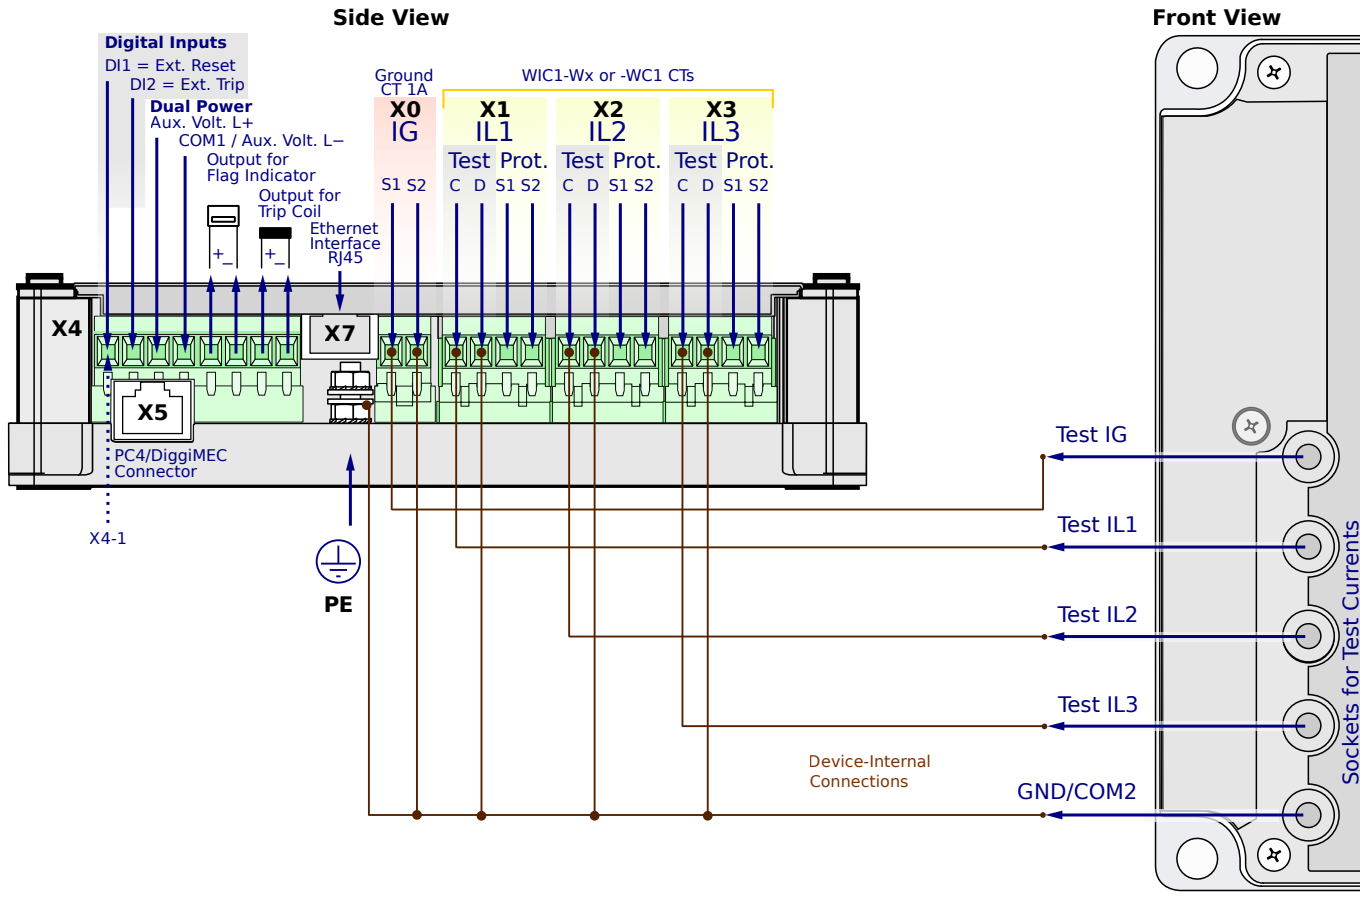


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1PCH

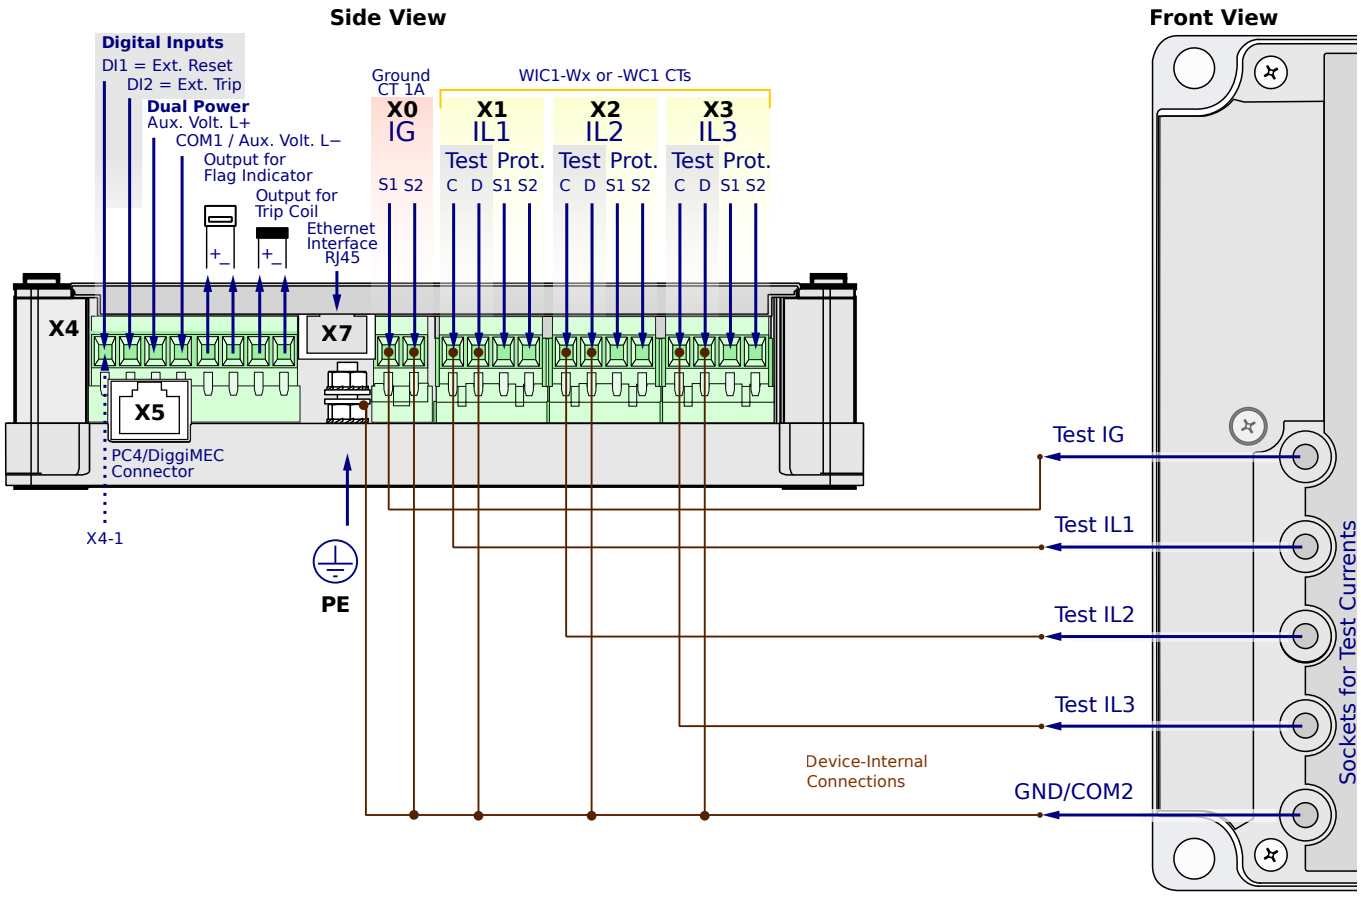


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG1PL0

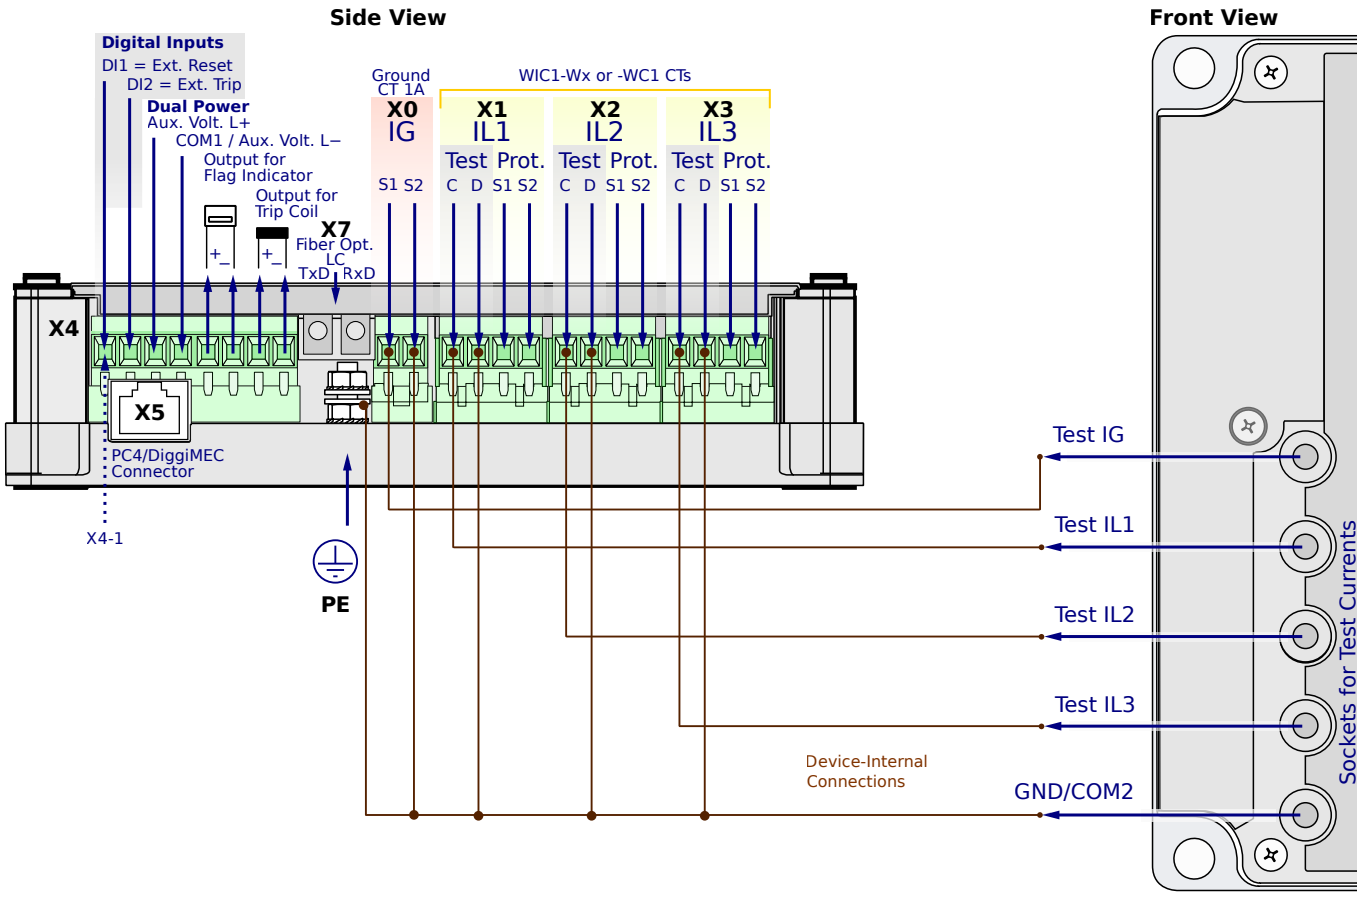


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG1PLH

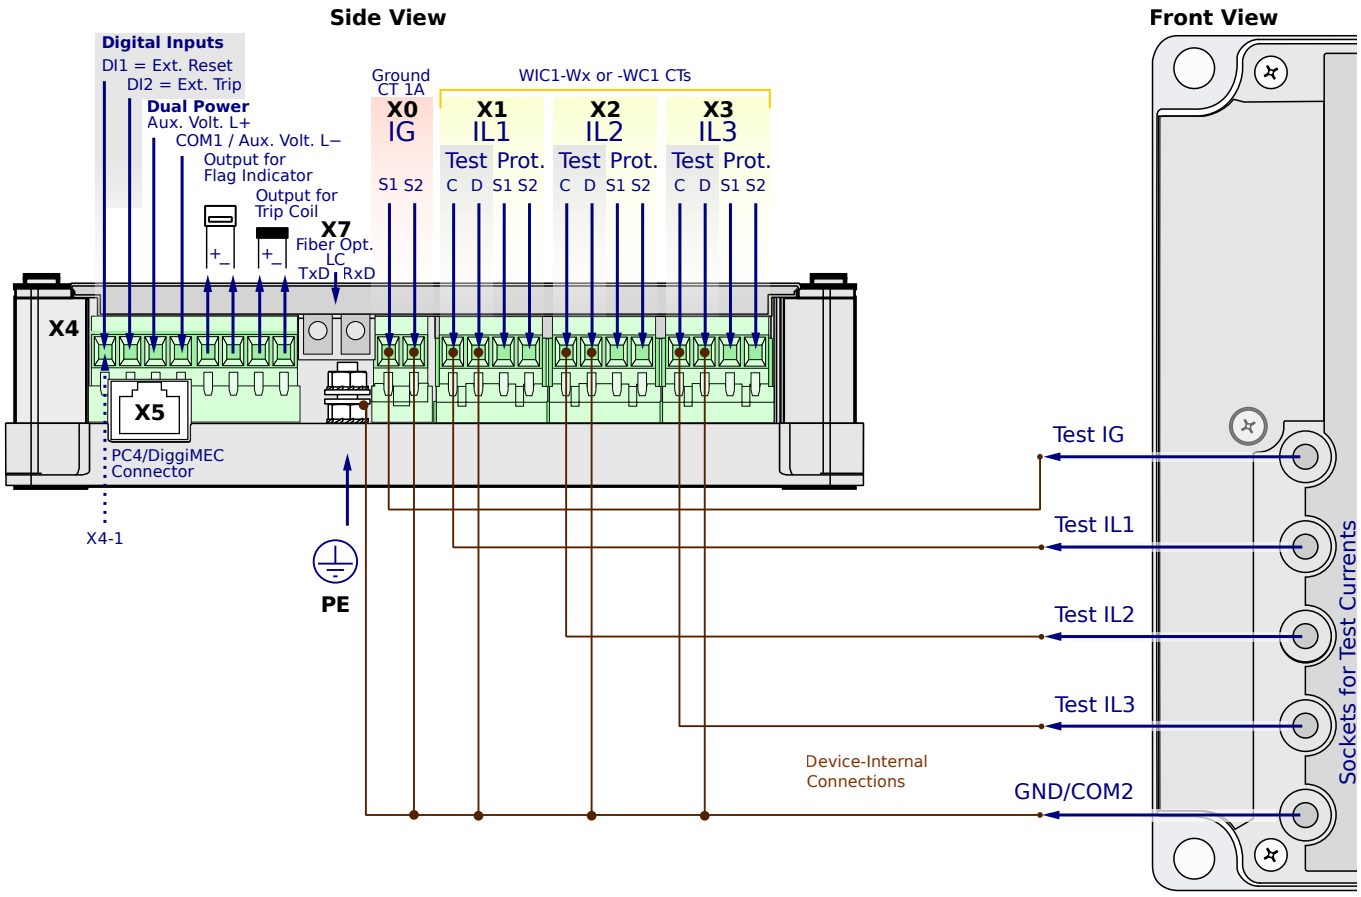


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2SA0

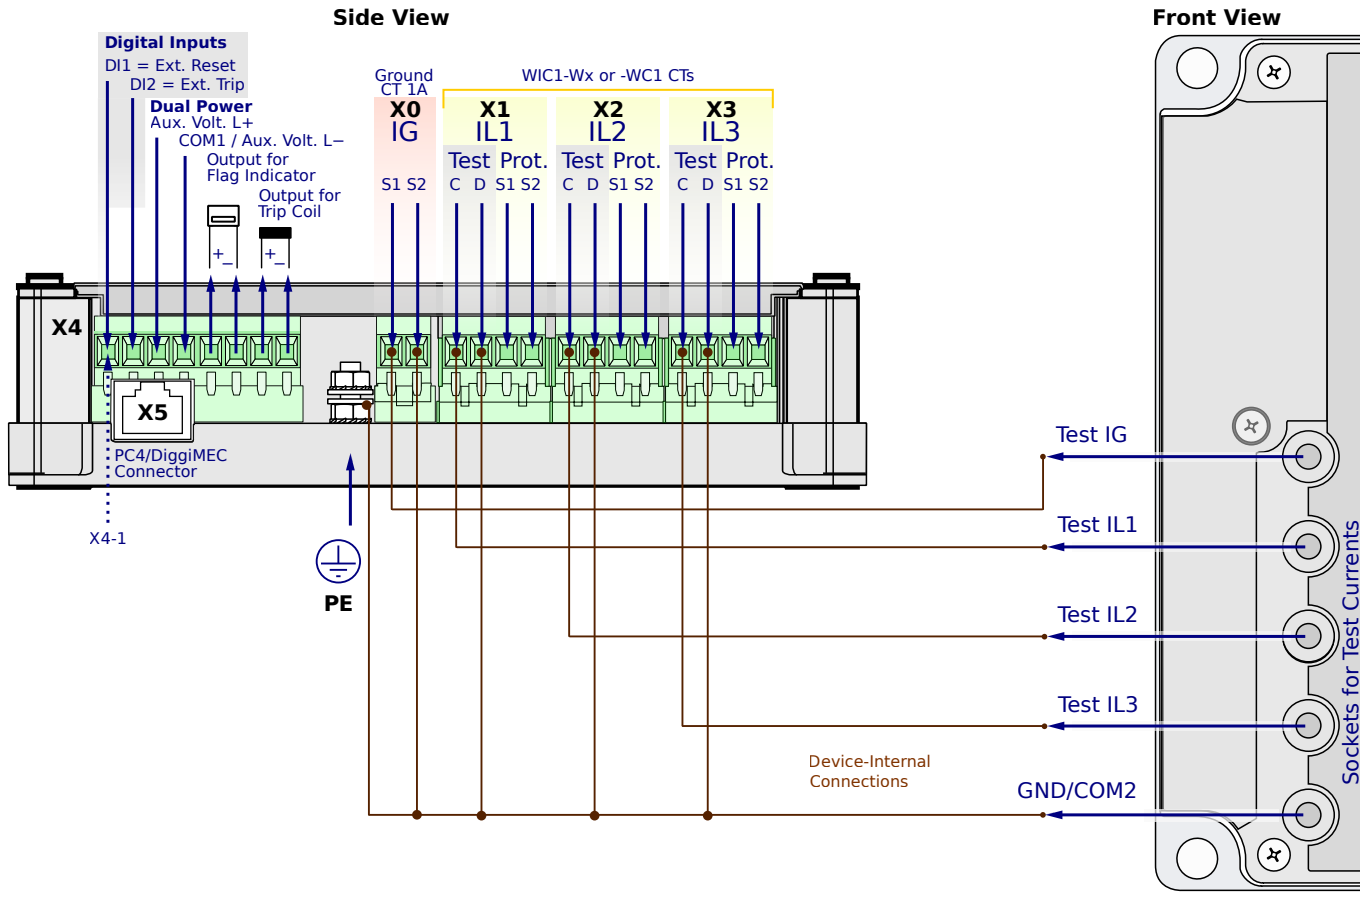


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2SAH

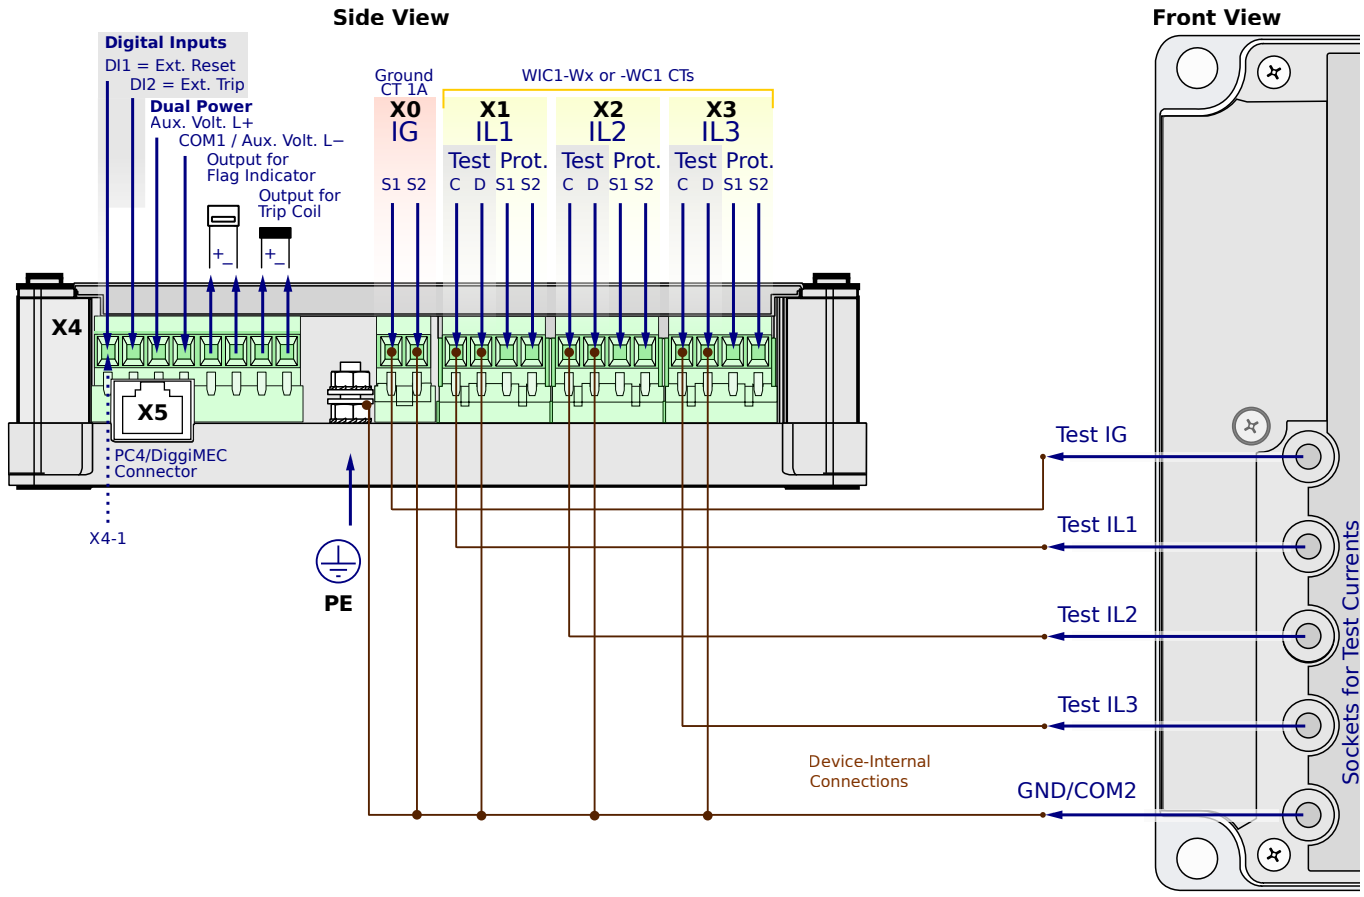


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2SB0

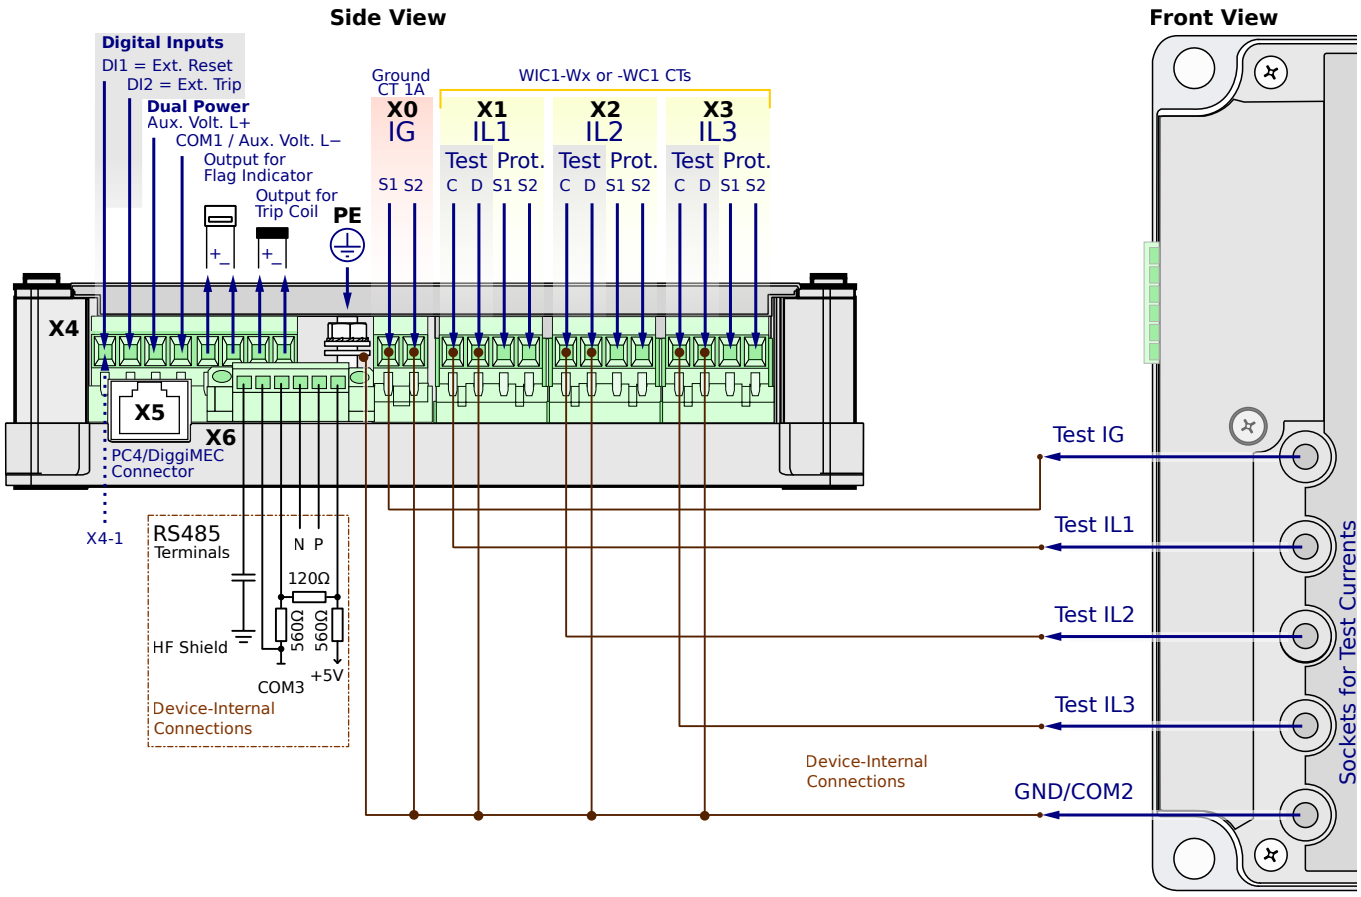


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2SBH

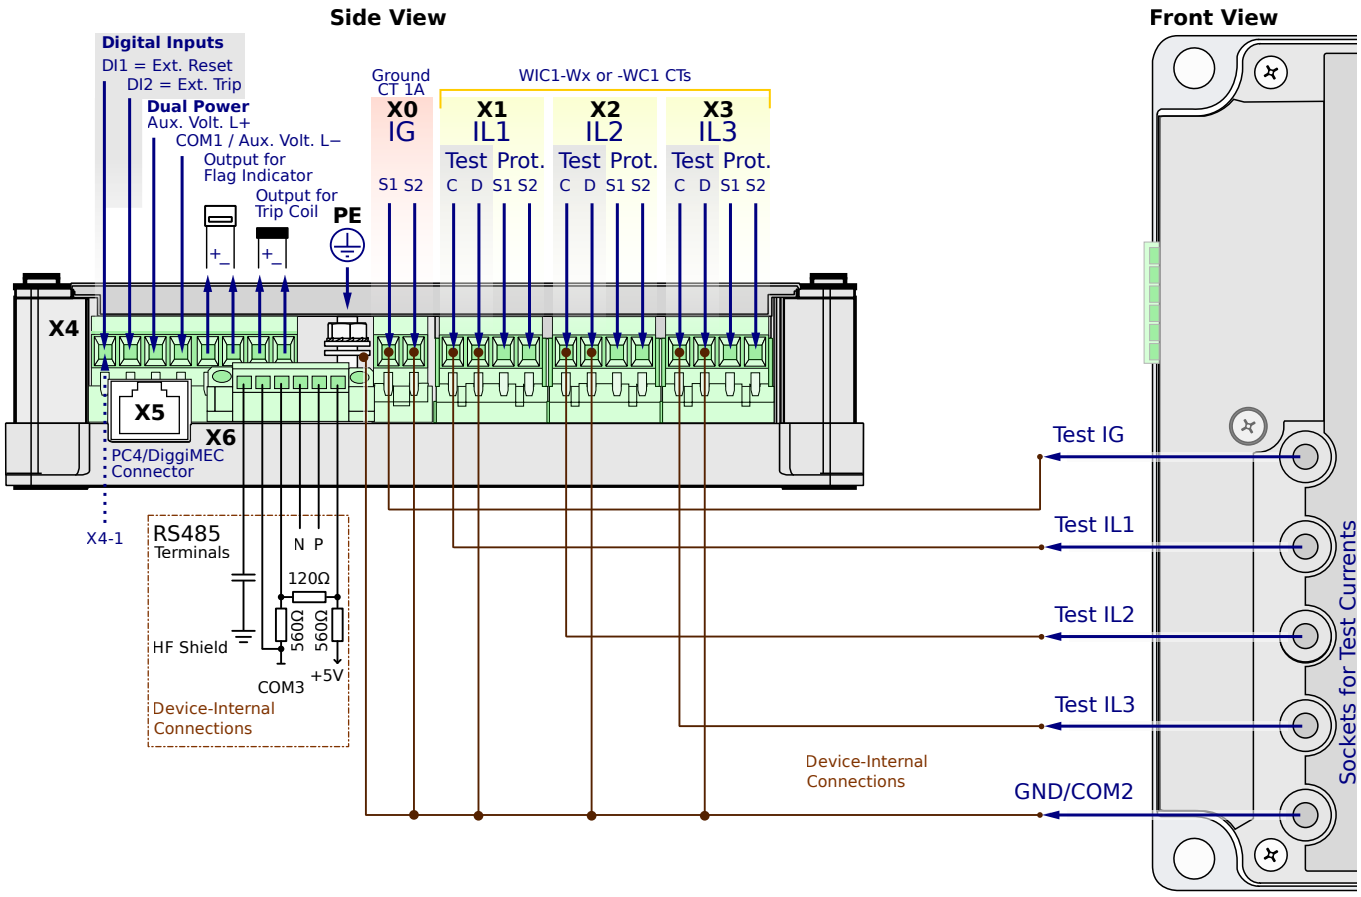


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2SC0

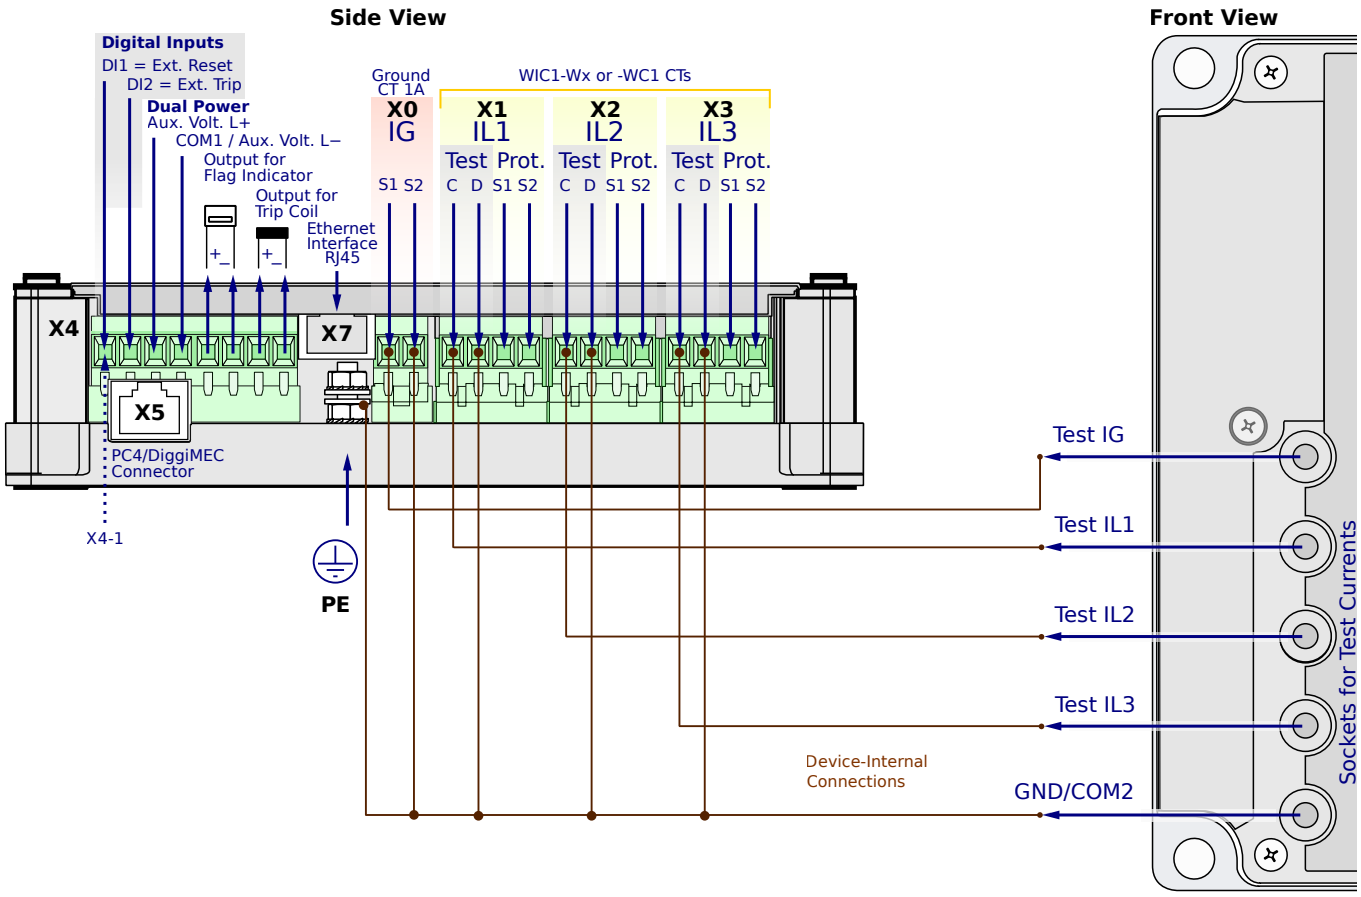


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2SCH

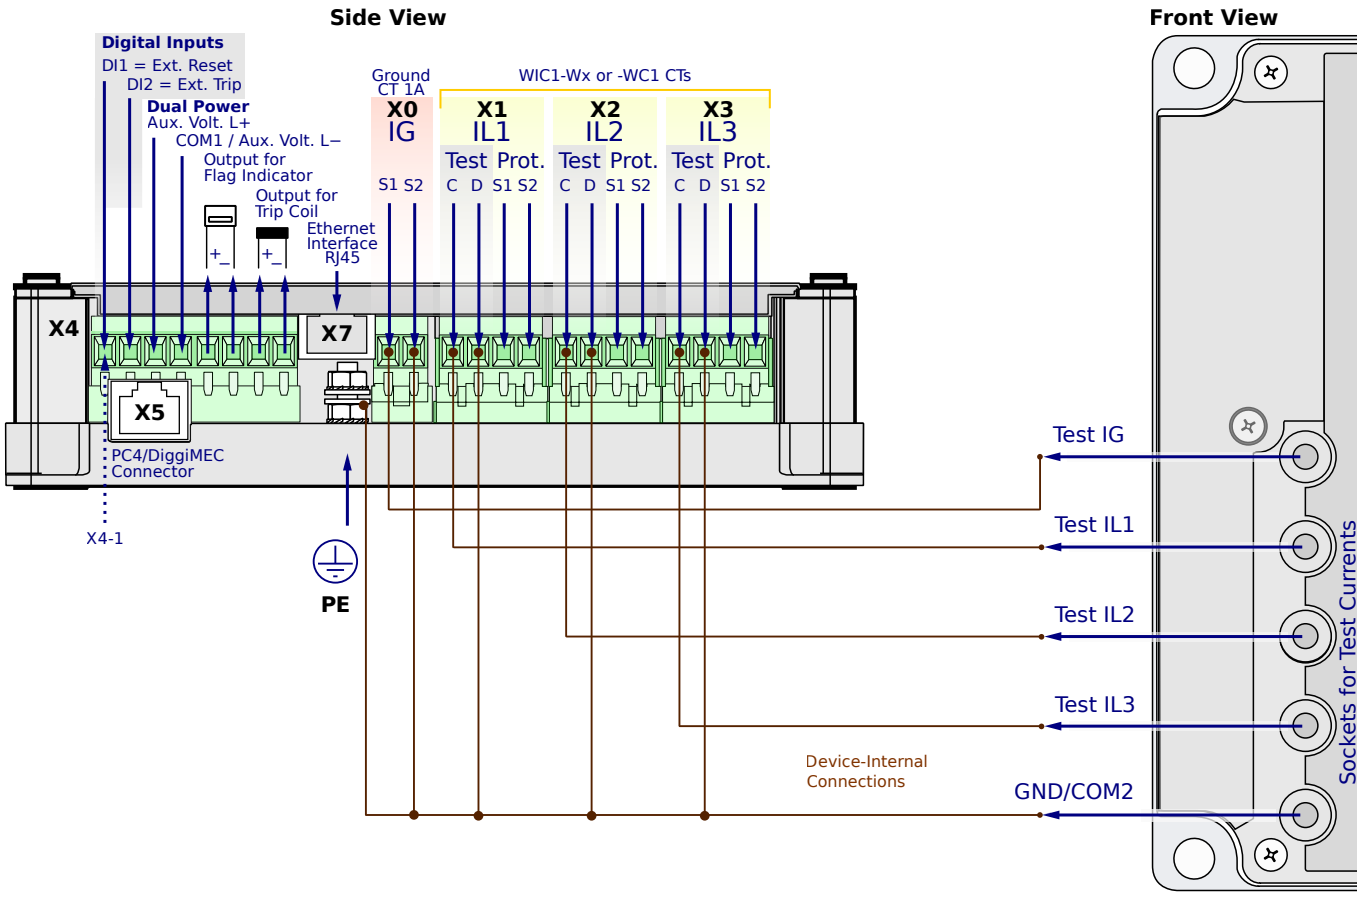


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2SL0

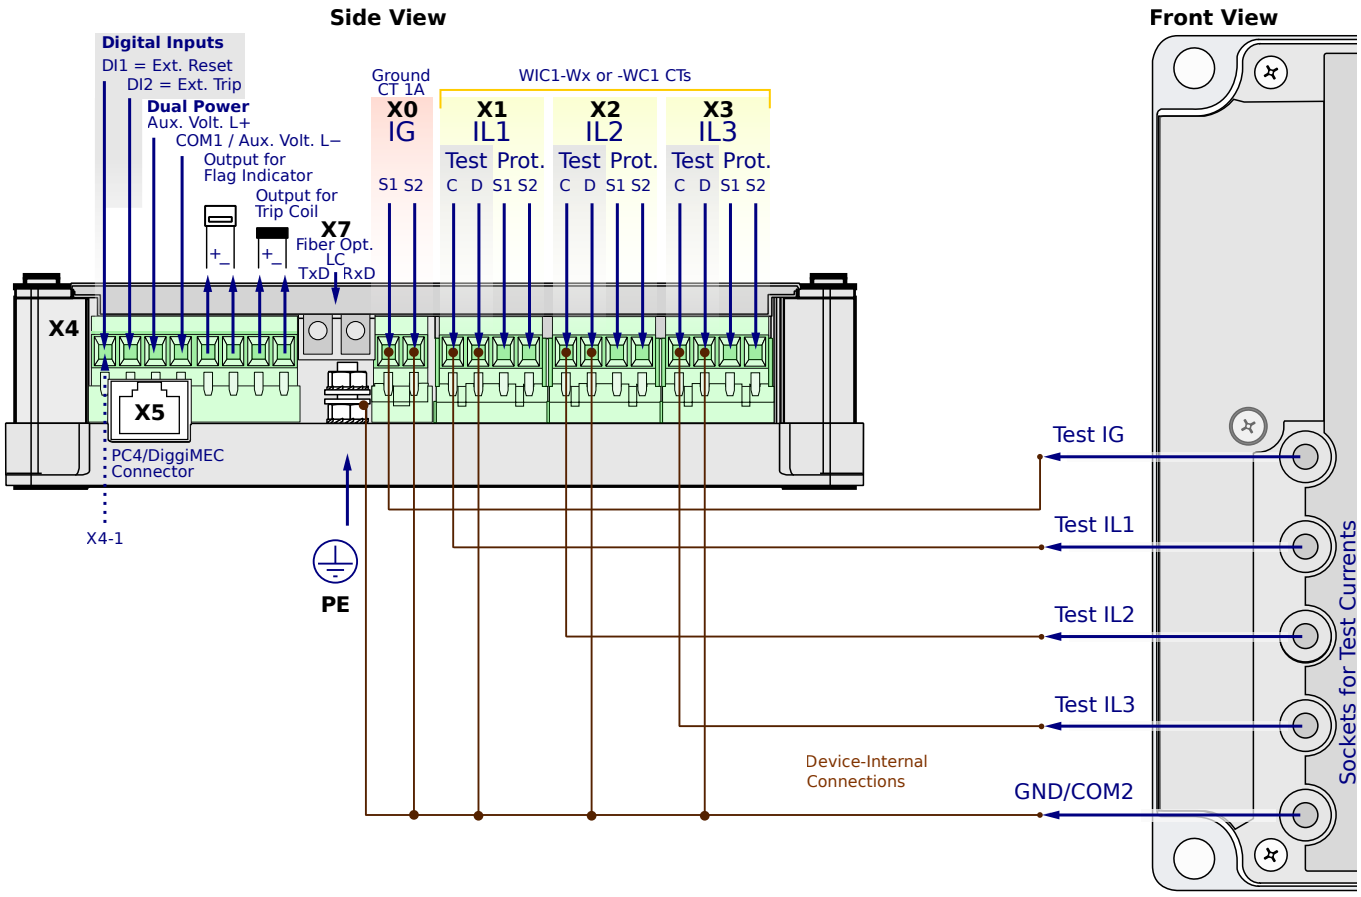


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2SLH

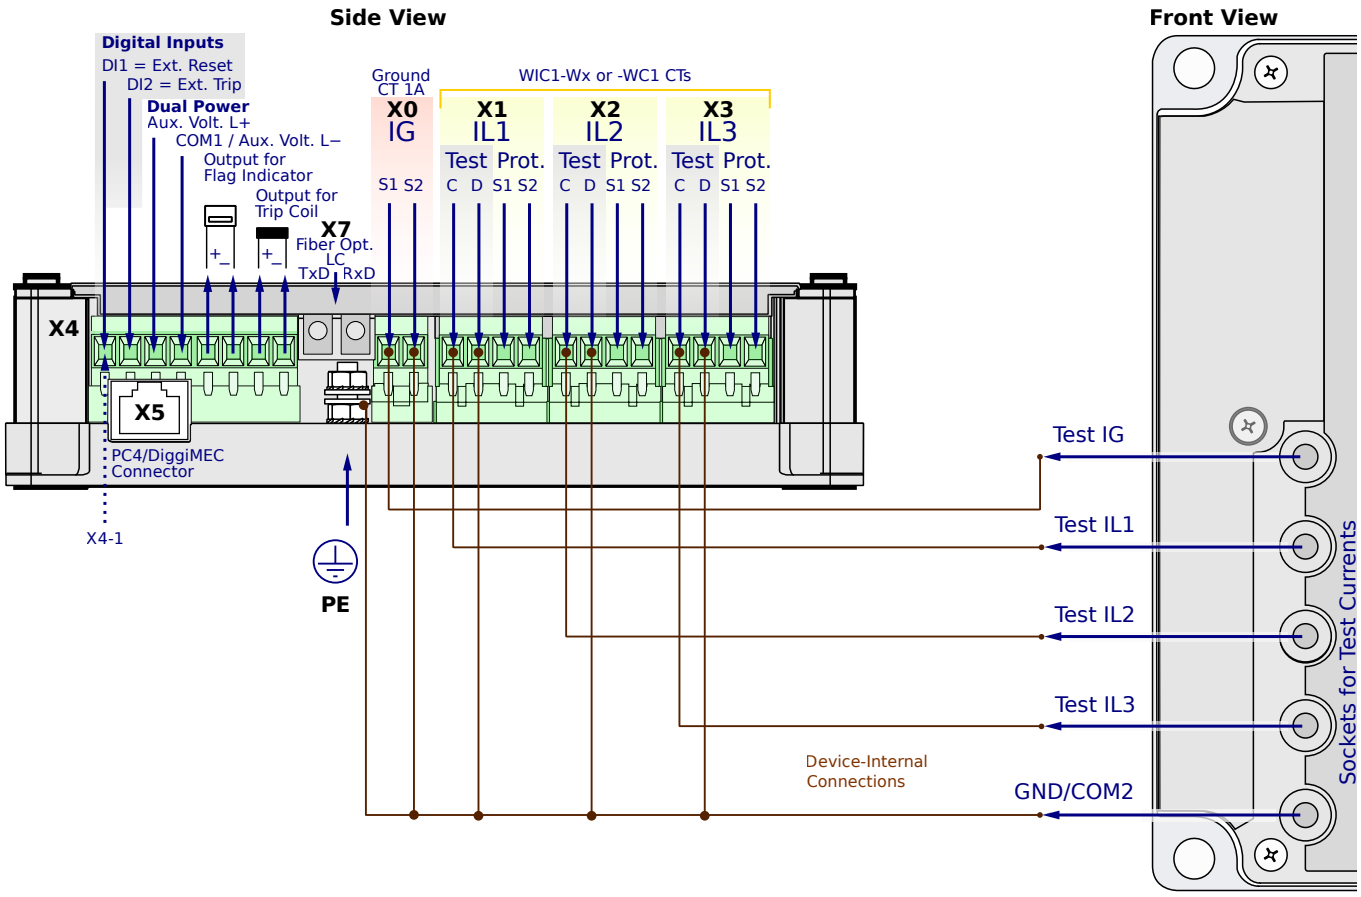


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2AA0

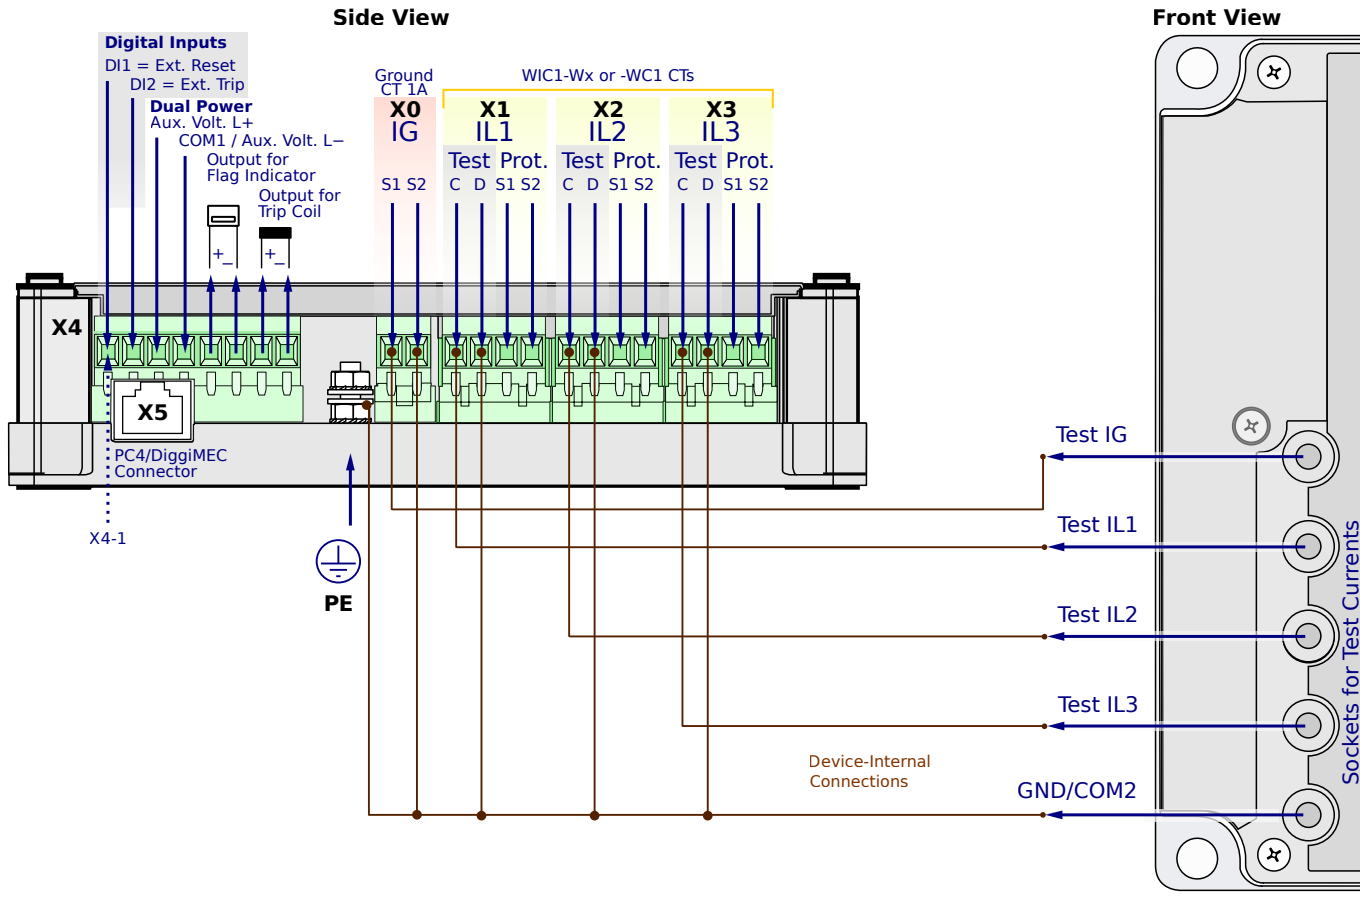


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2AAH

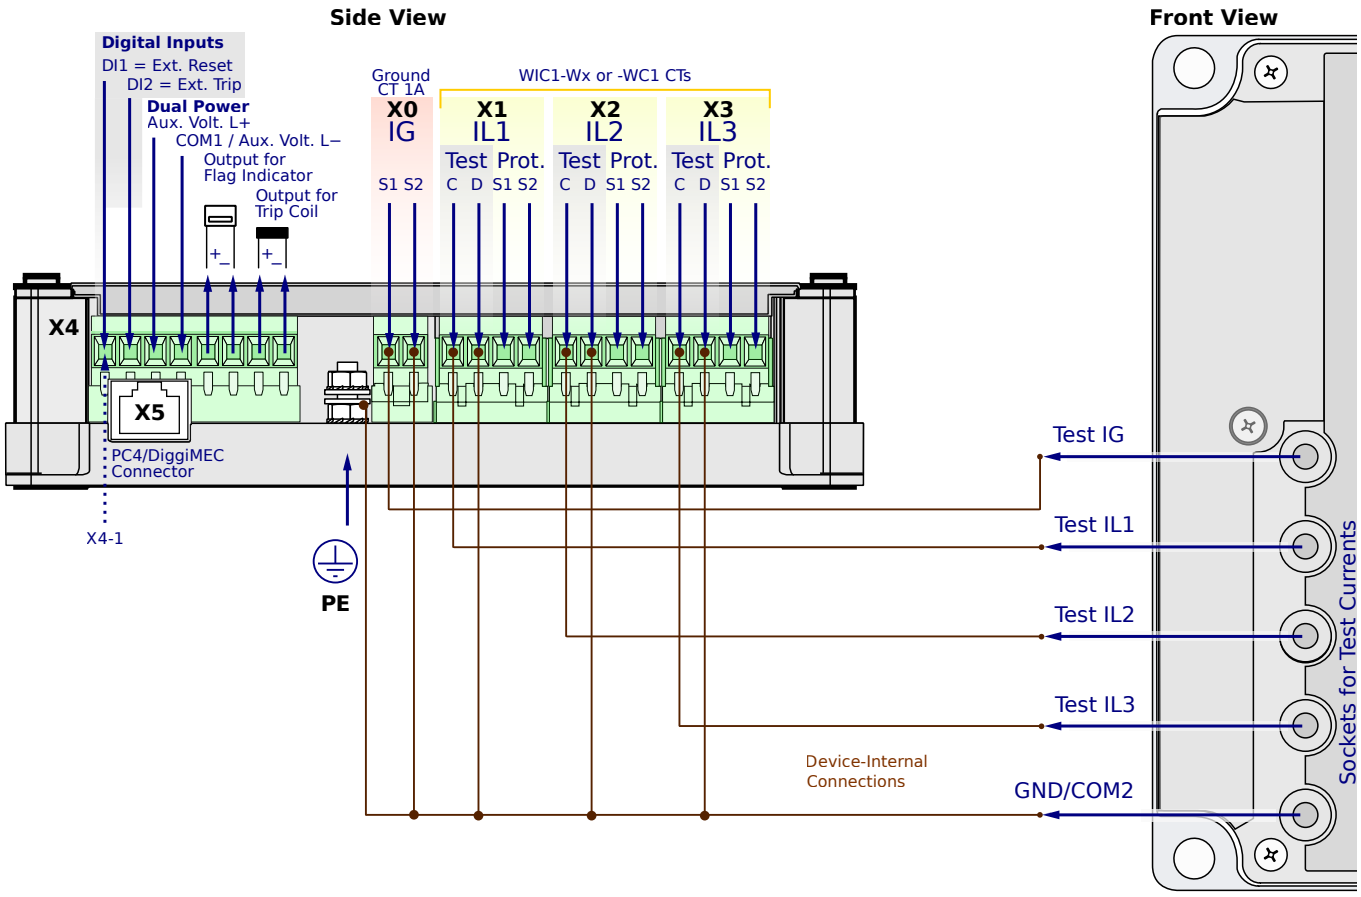


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2AB0

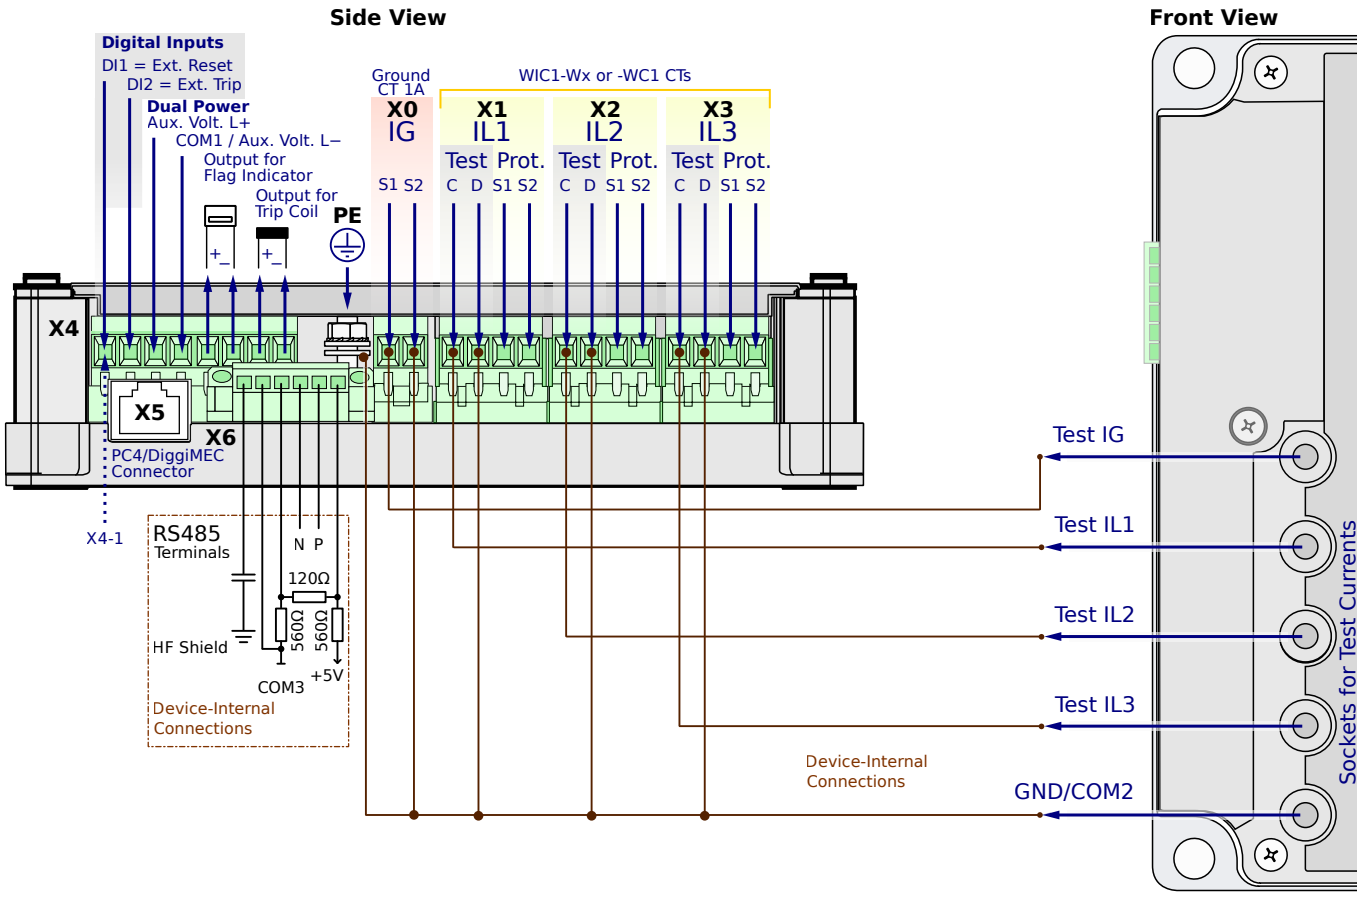


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2ABH

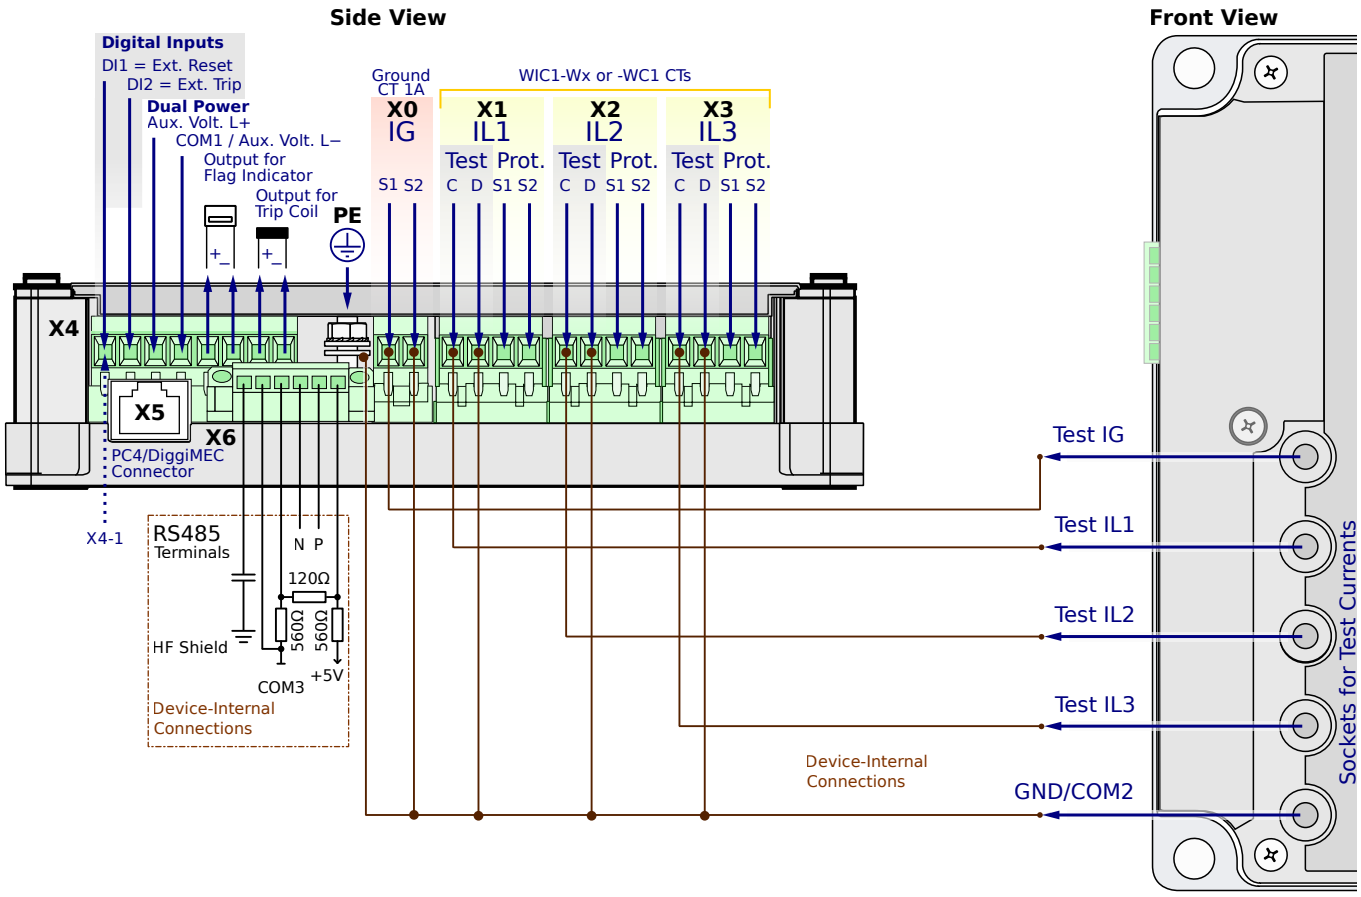


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2AC0

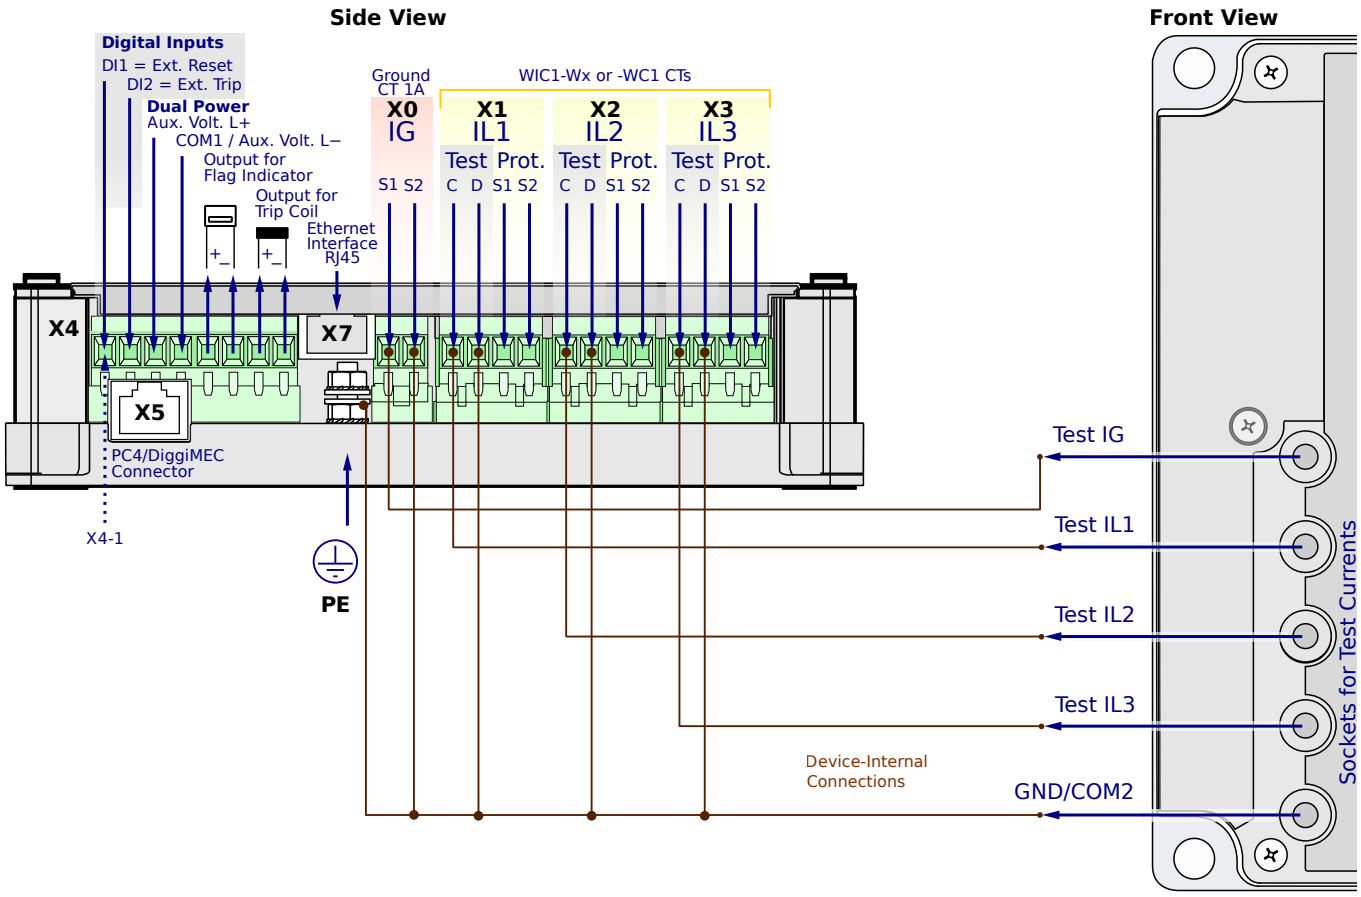


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2ACH

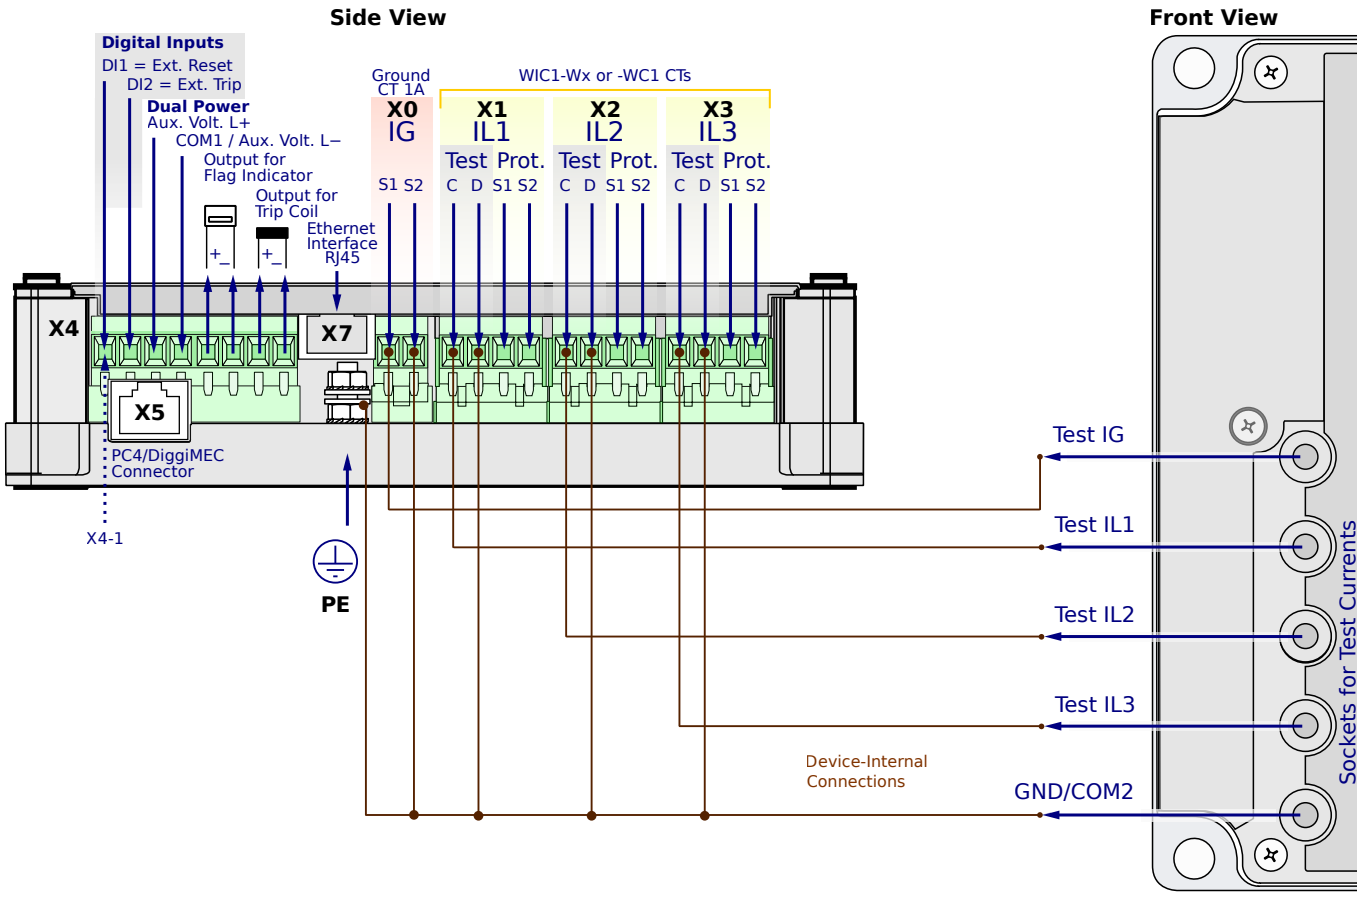


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2AL0

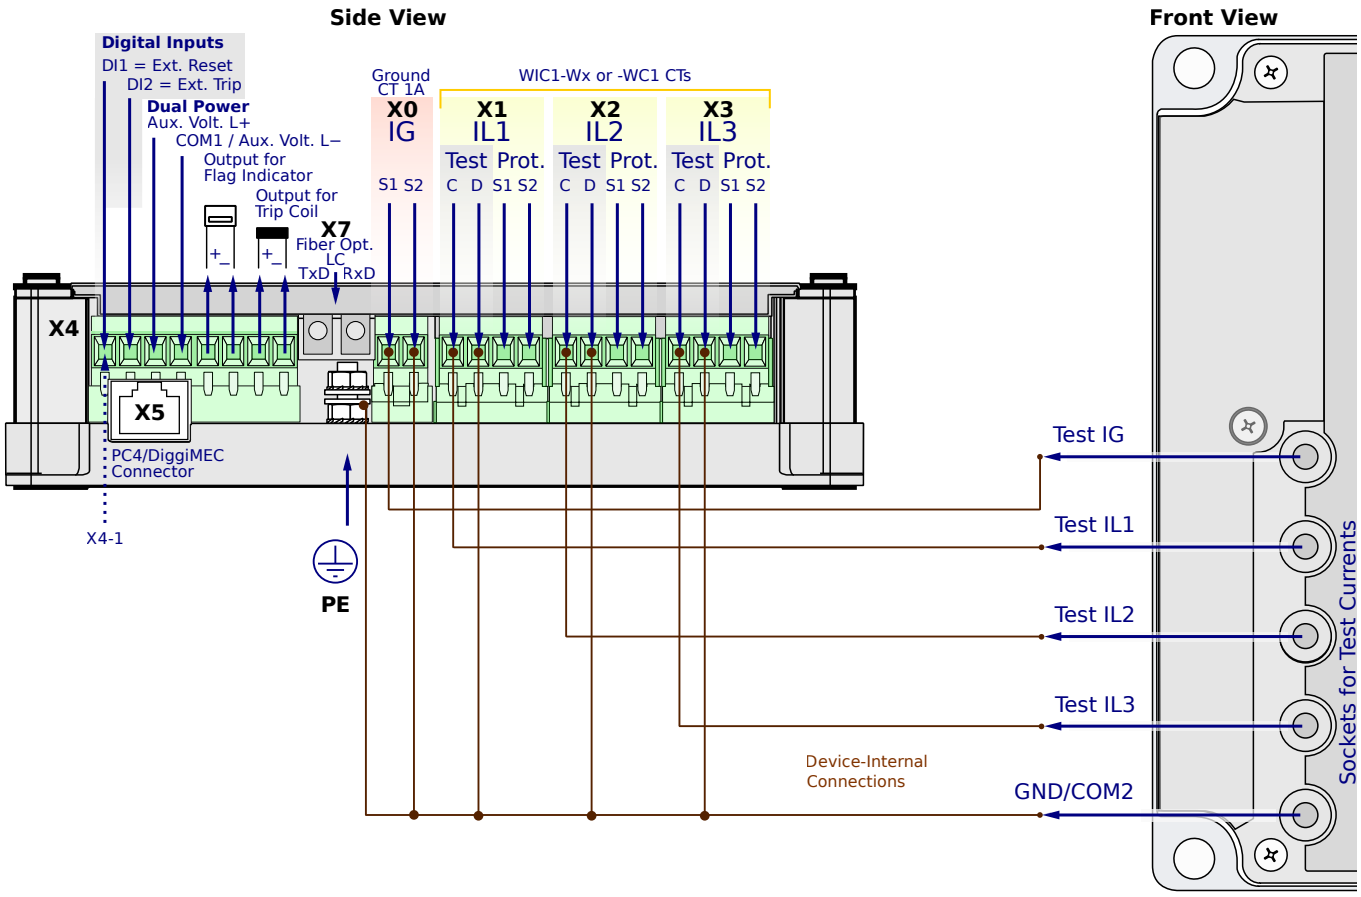


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2ALH

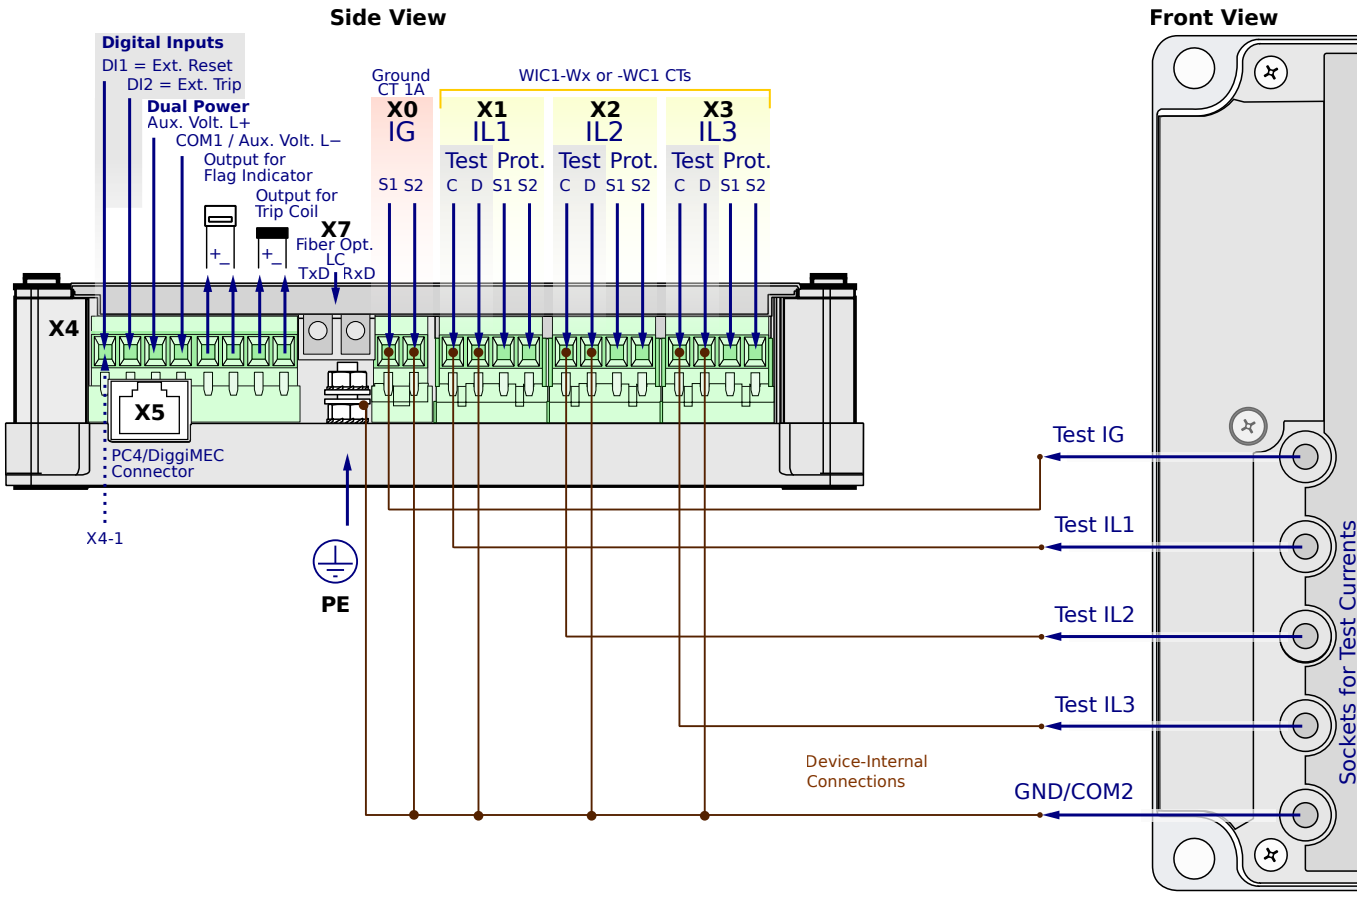


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2PA0

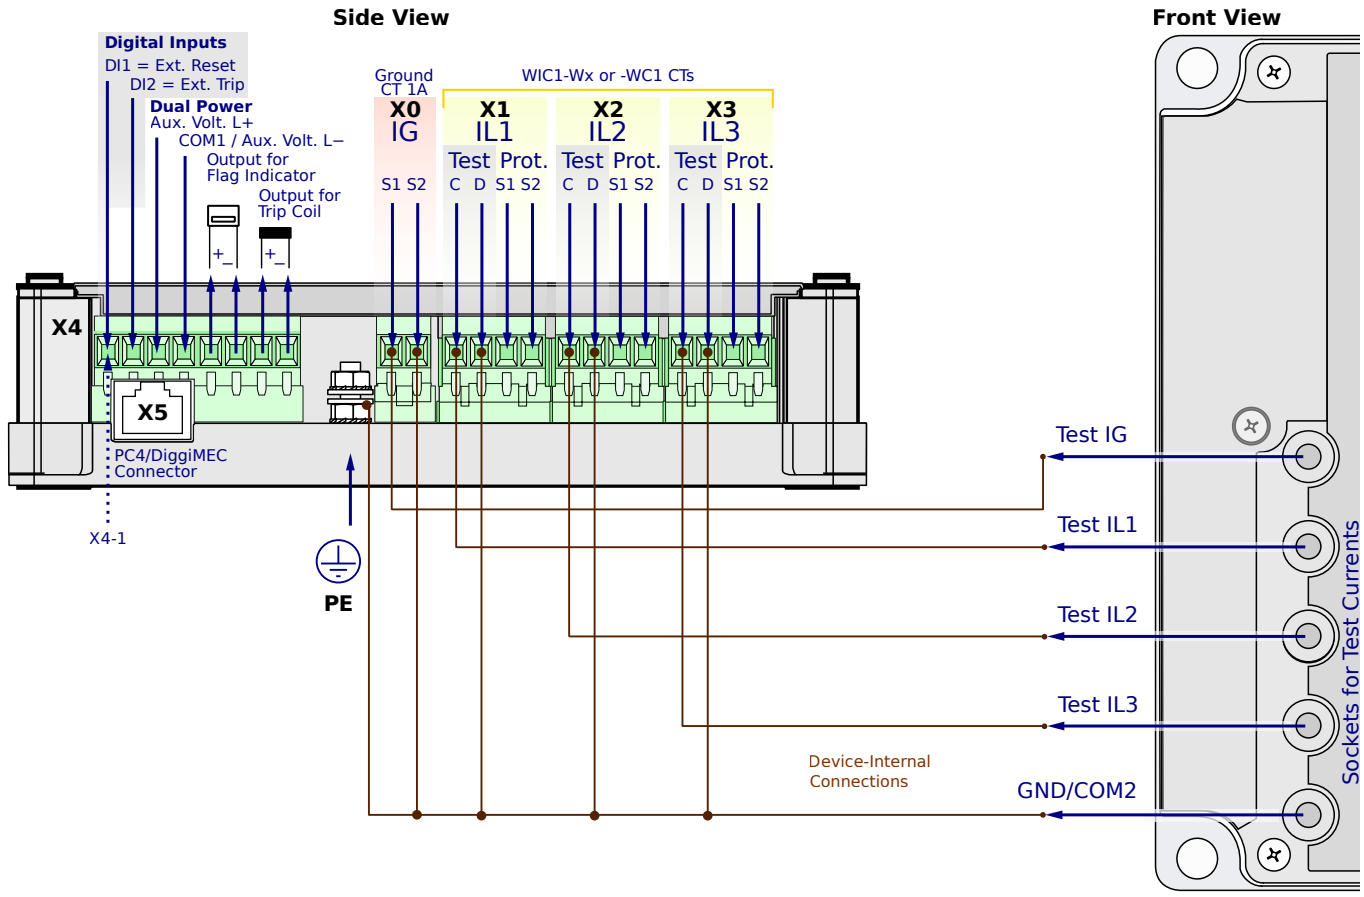


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2PAH

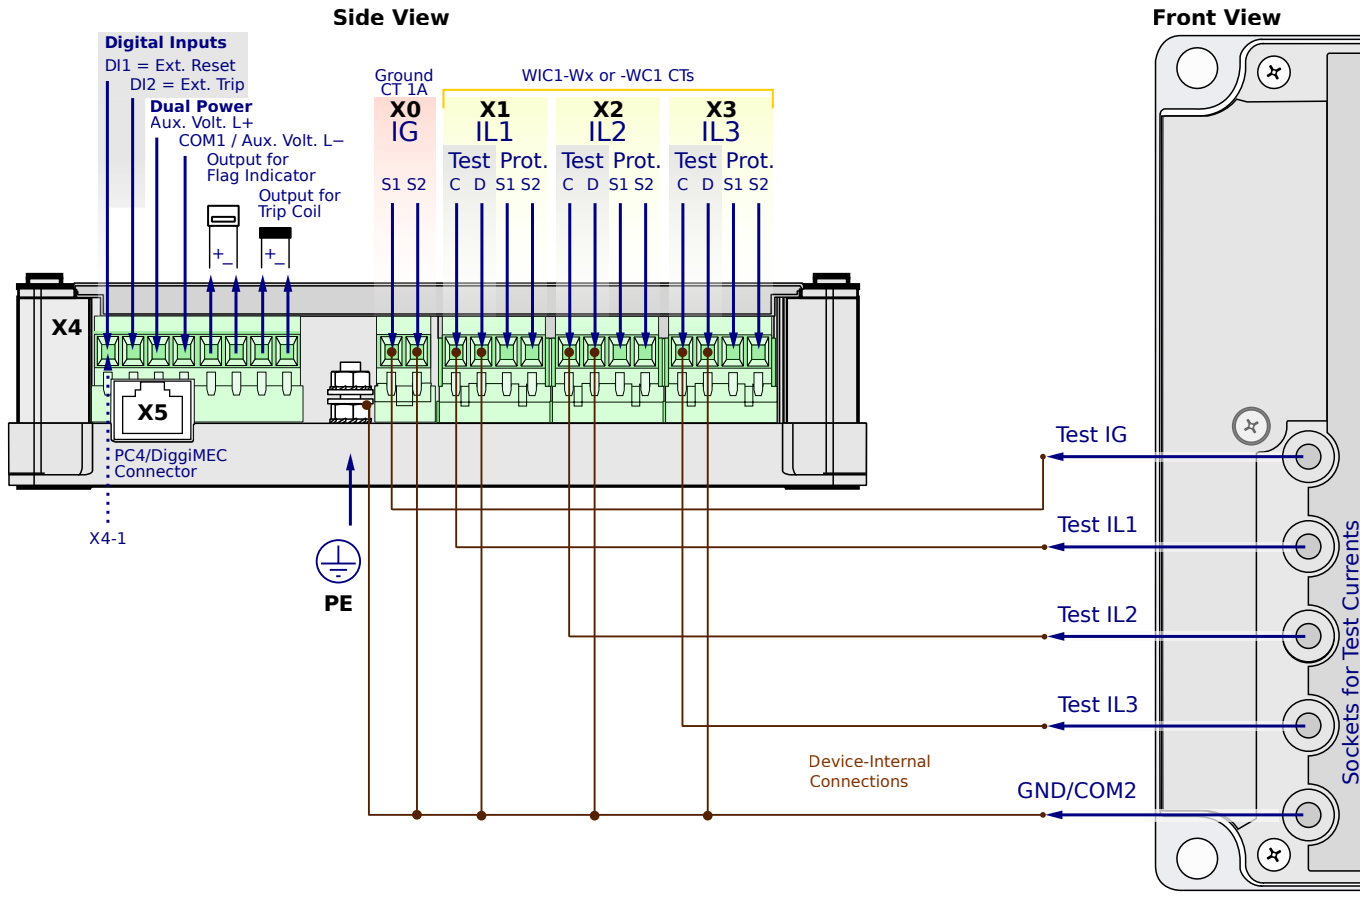


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0NG2PB0

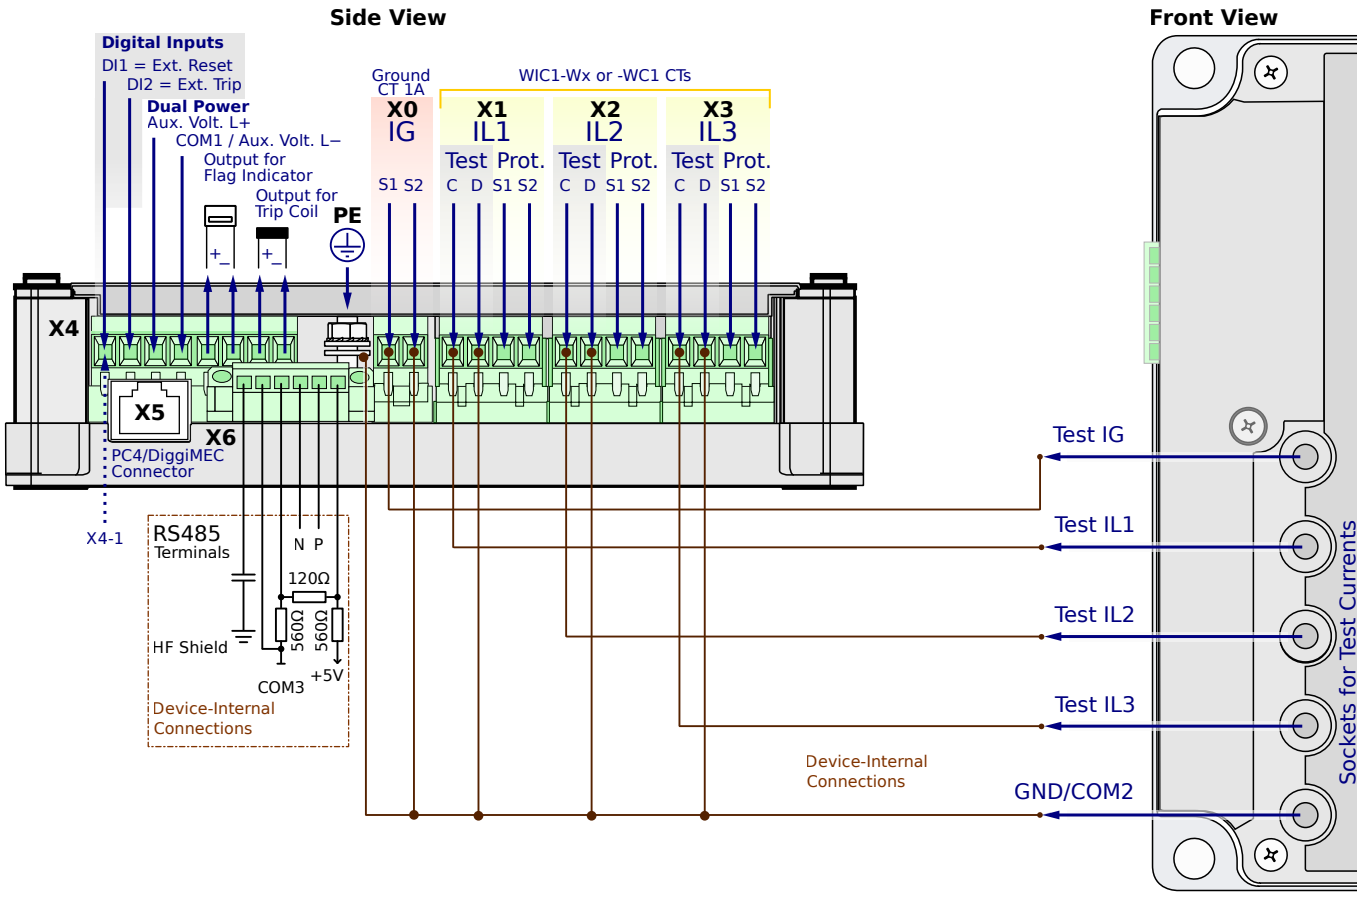


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2PBH

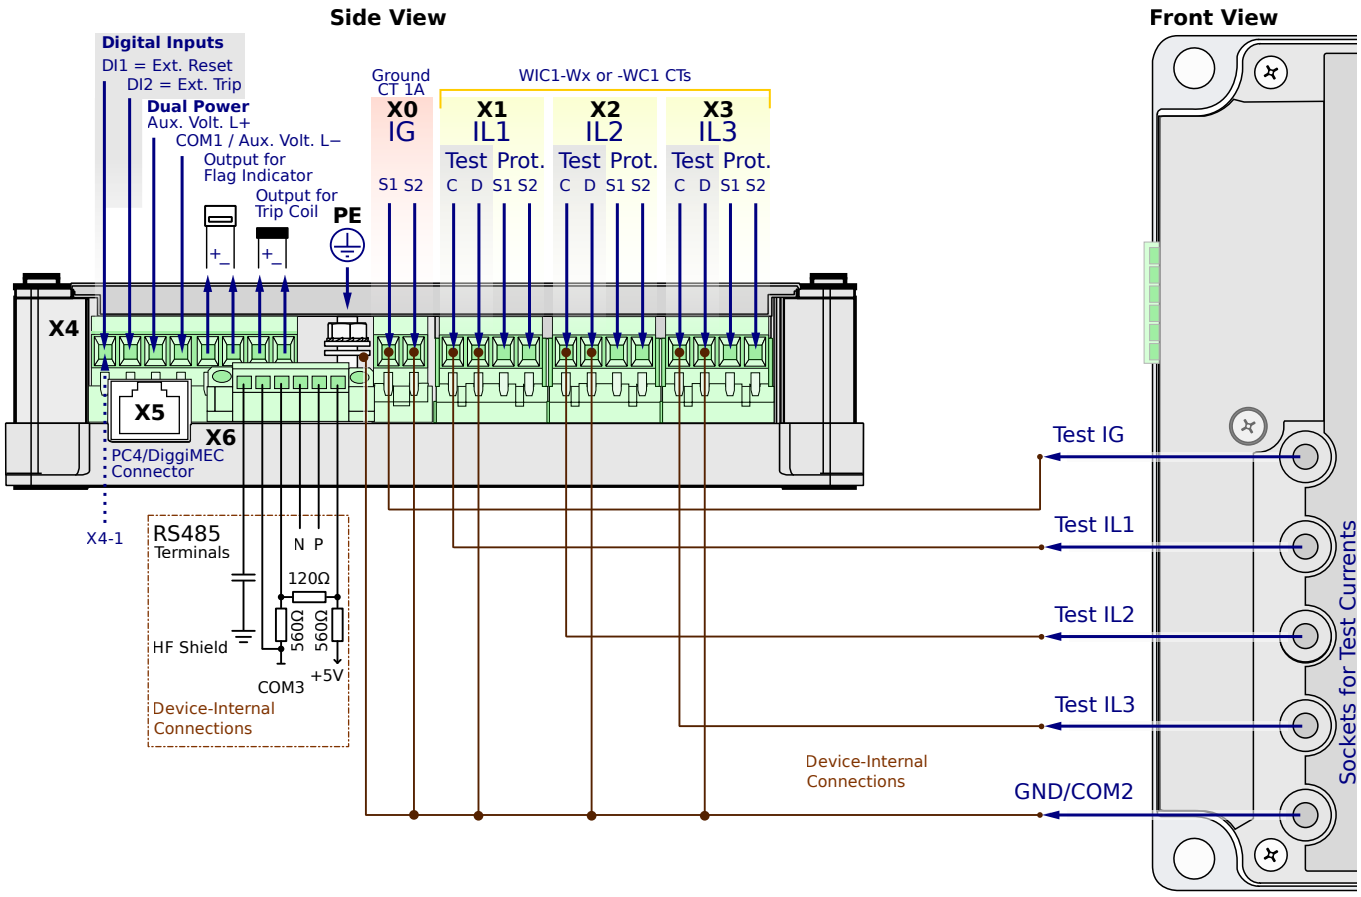


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0NG2PC0

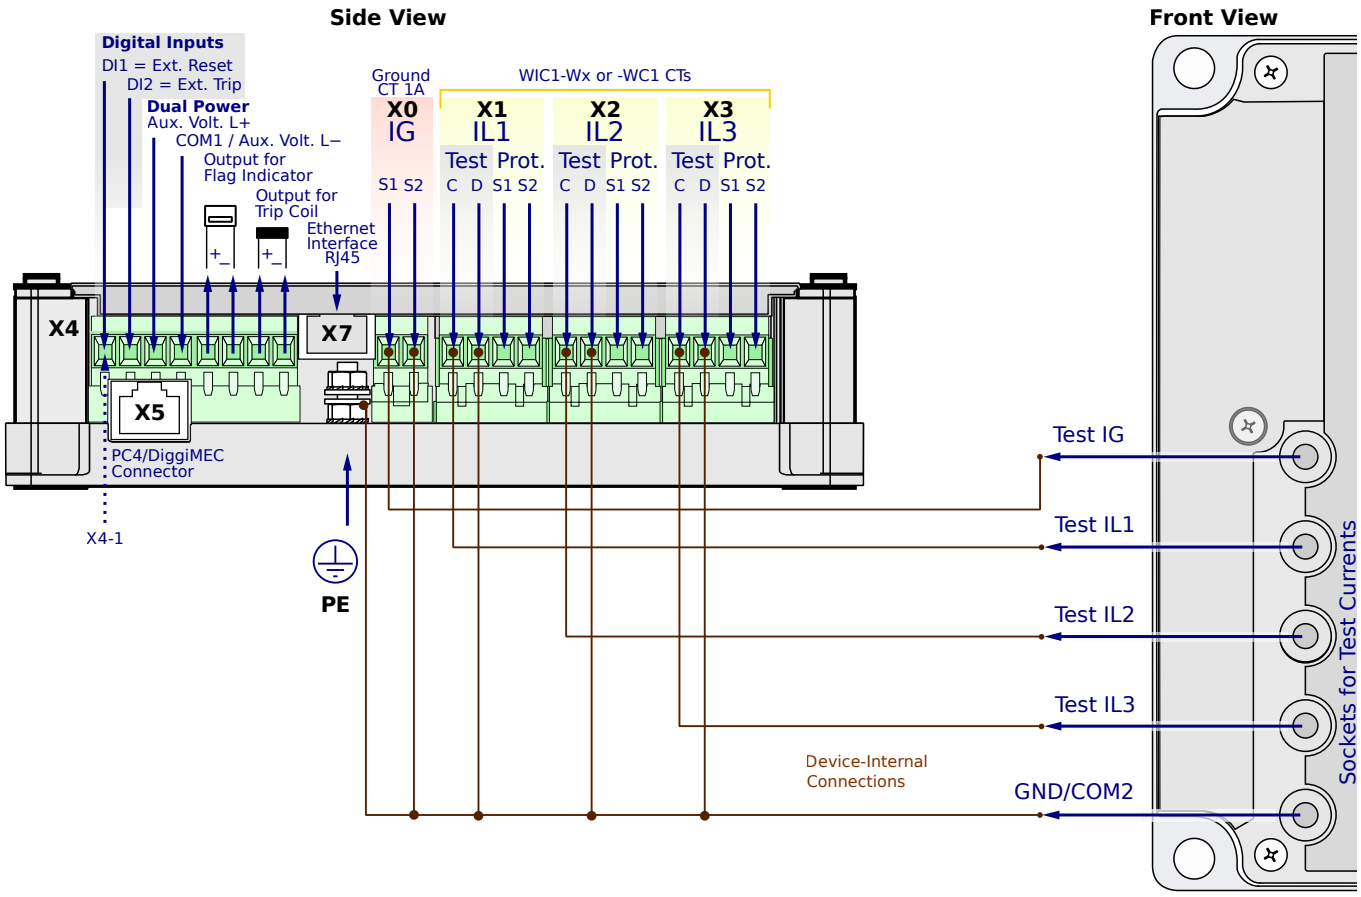


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2PCH

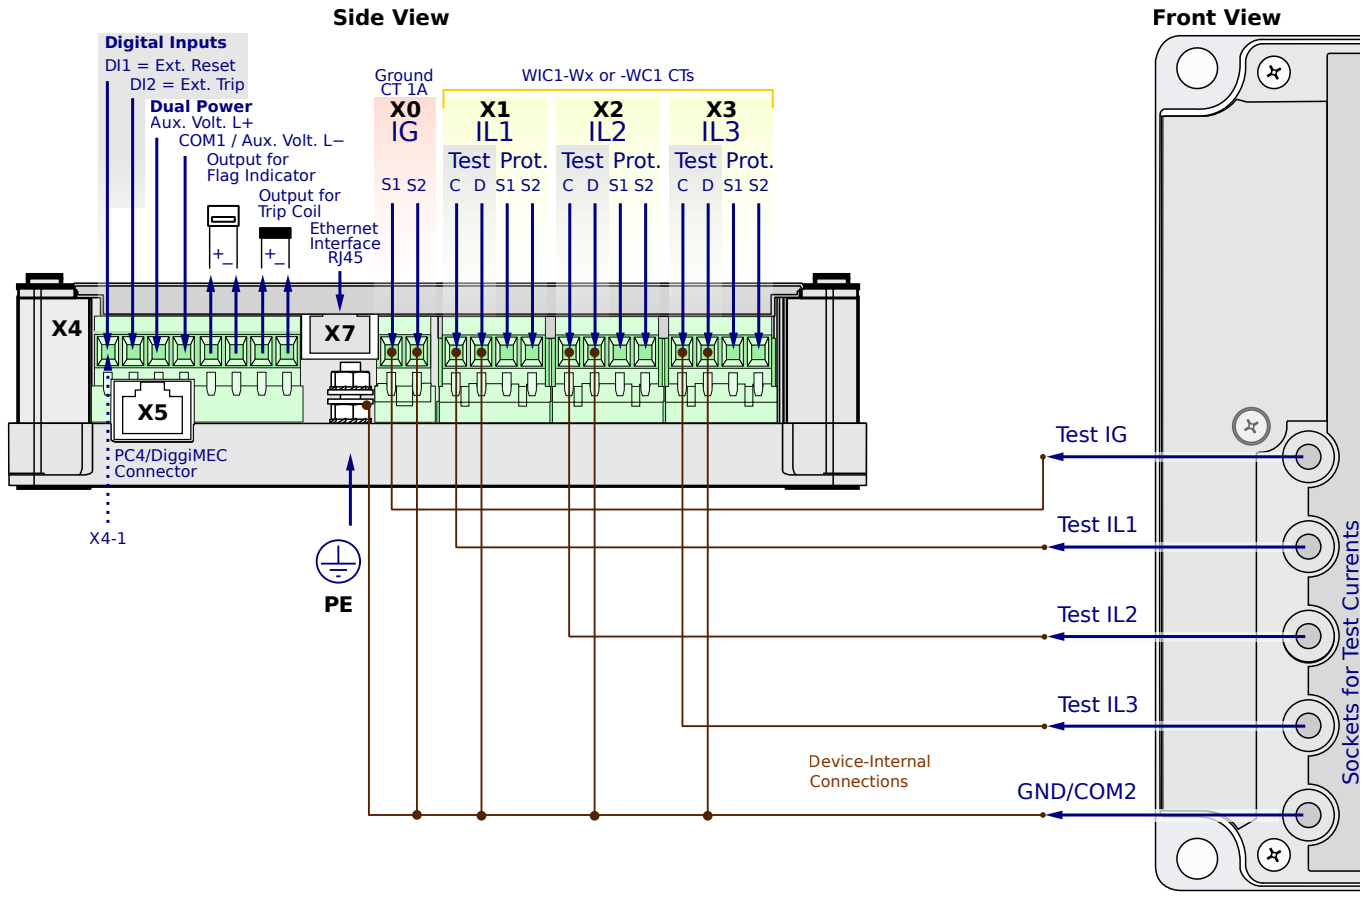


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0NG2PL0

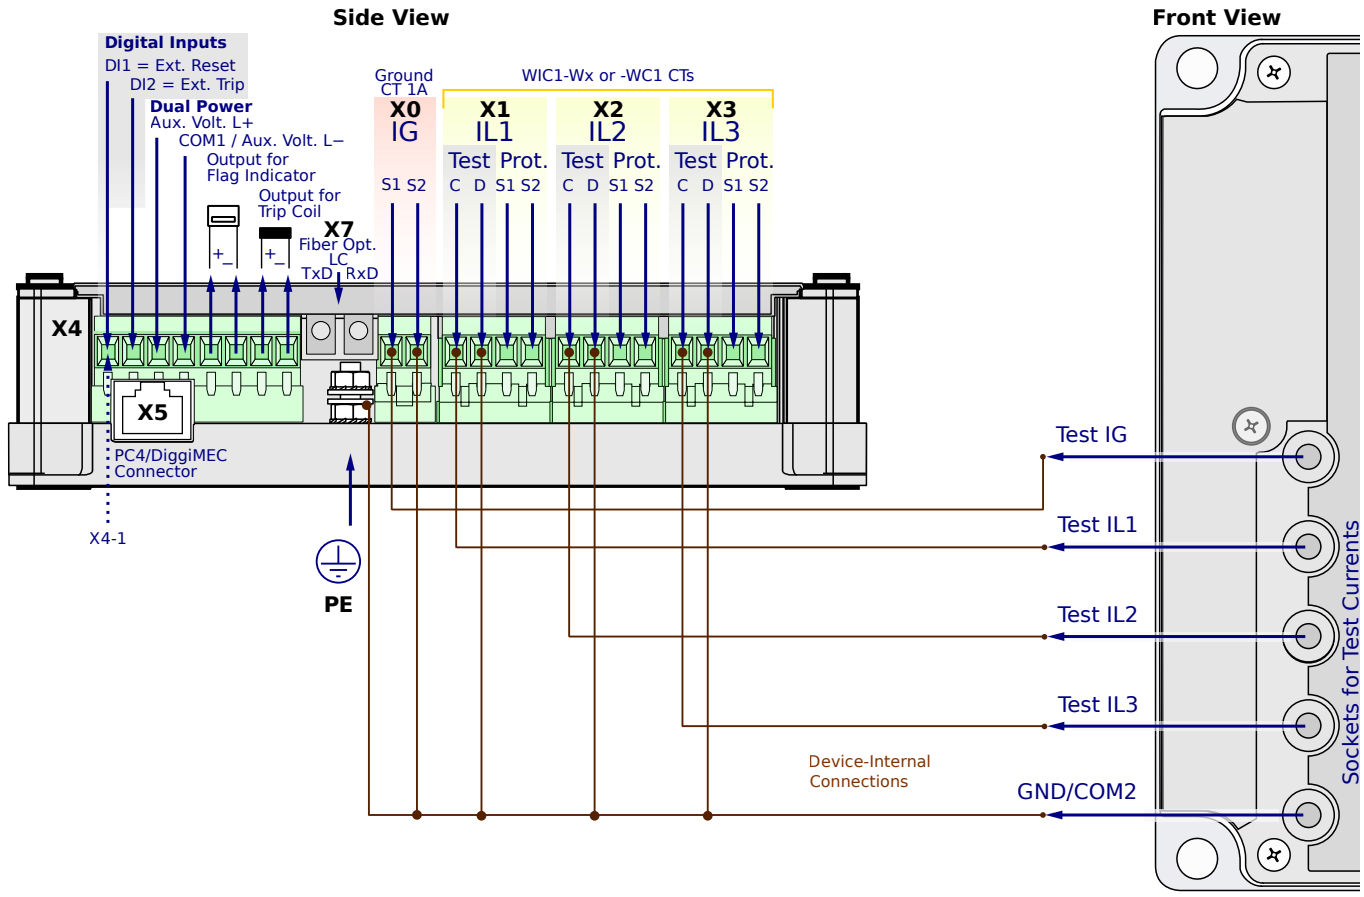


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0NG2PLH

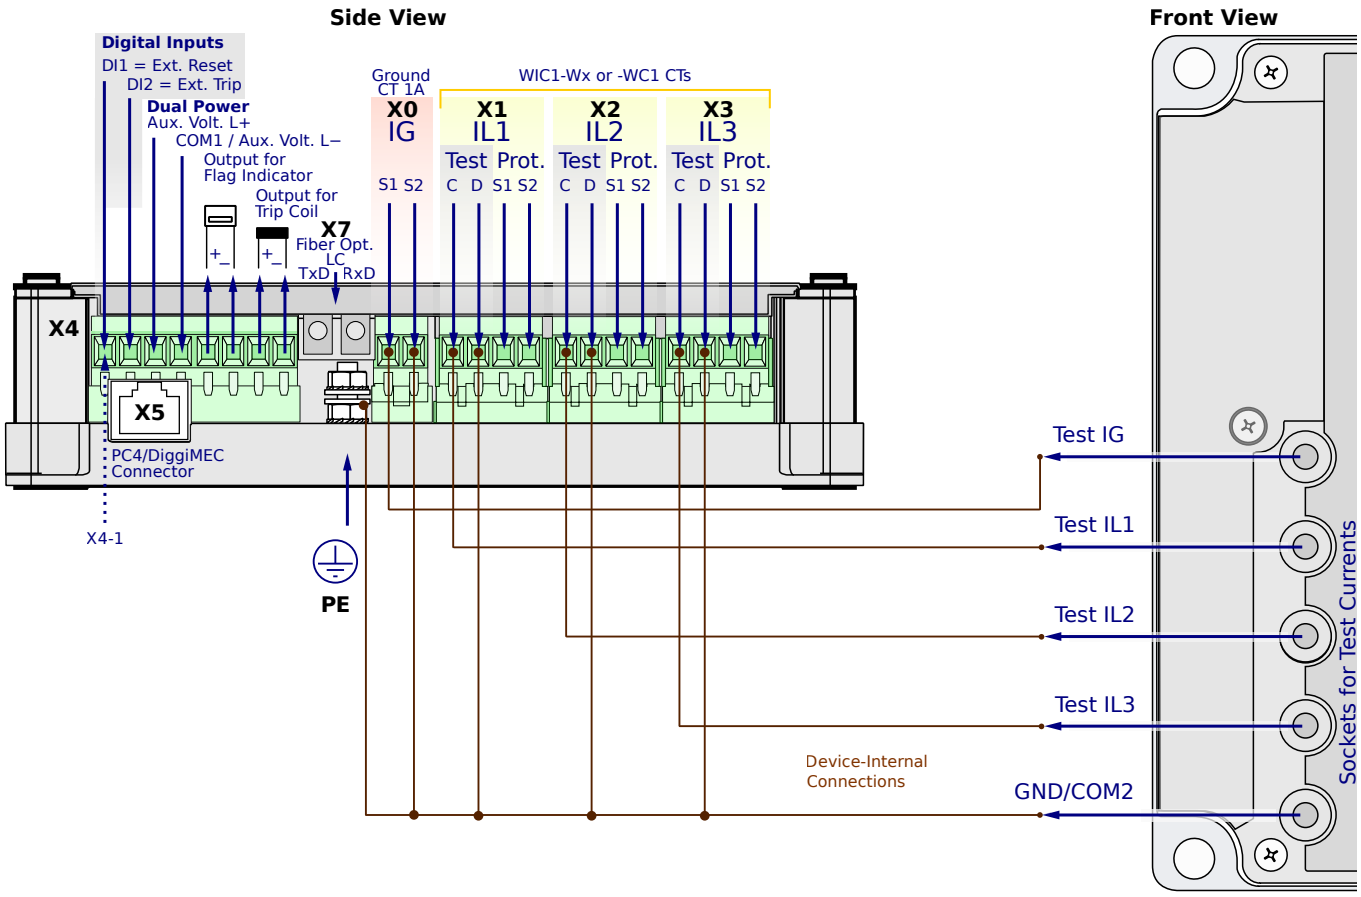


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0SA0

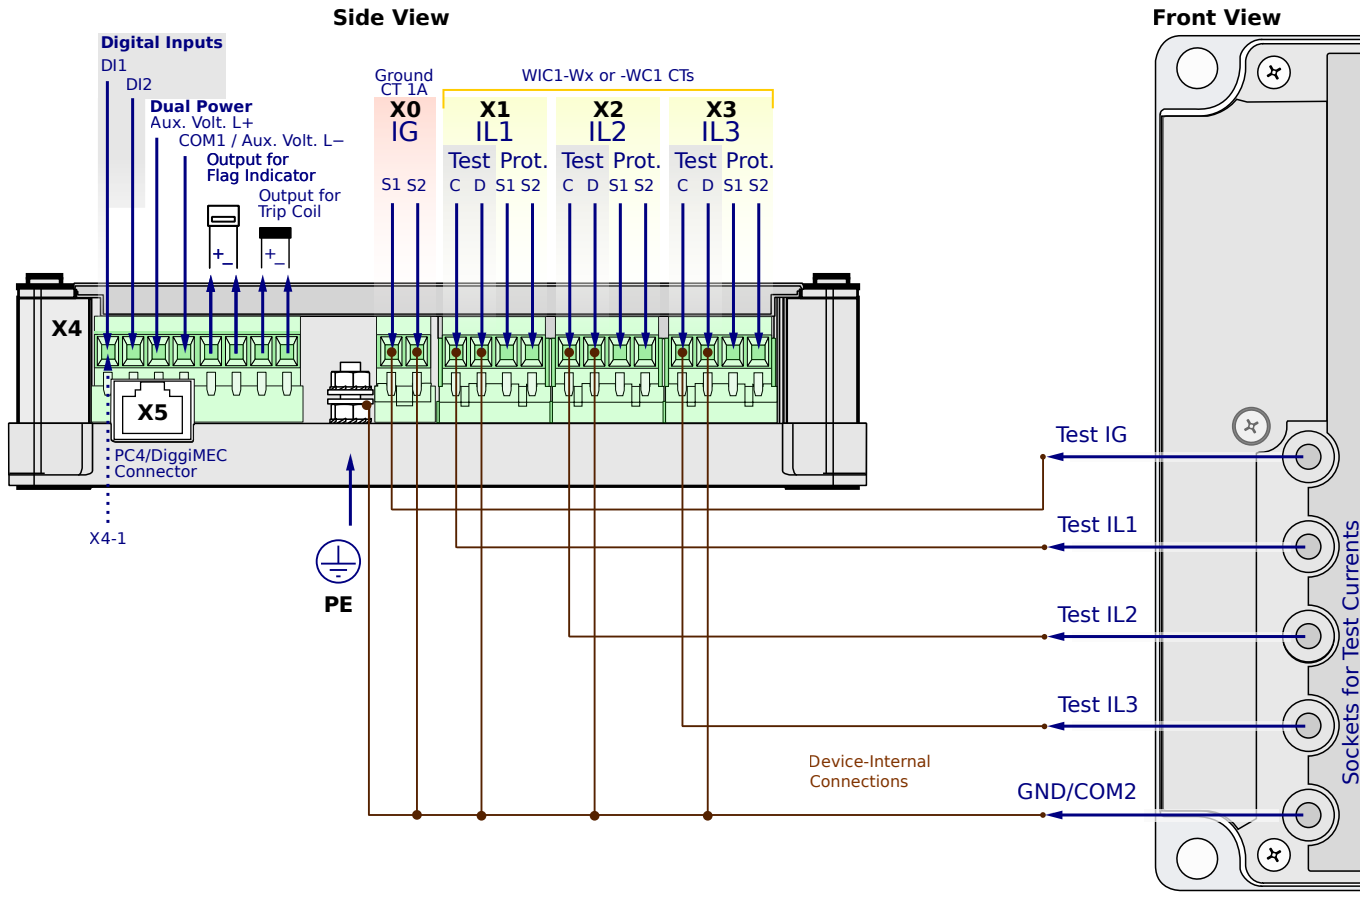


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0SAH

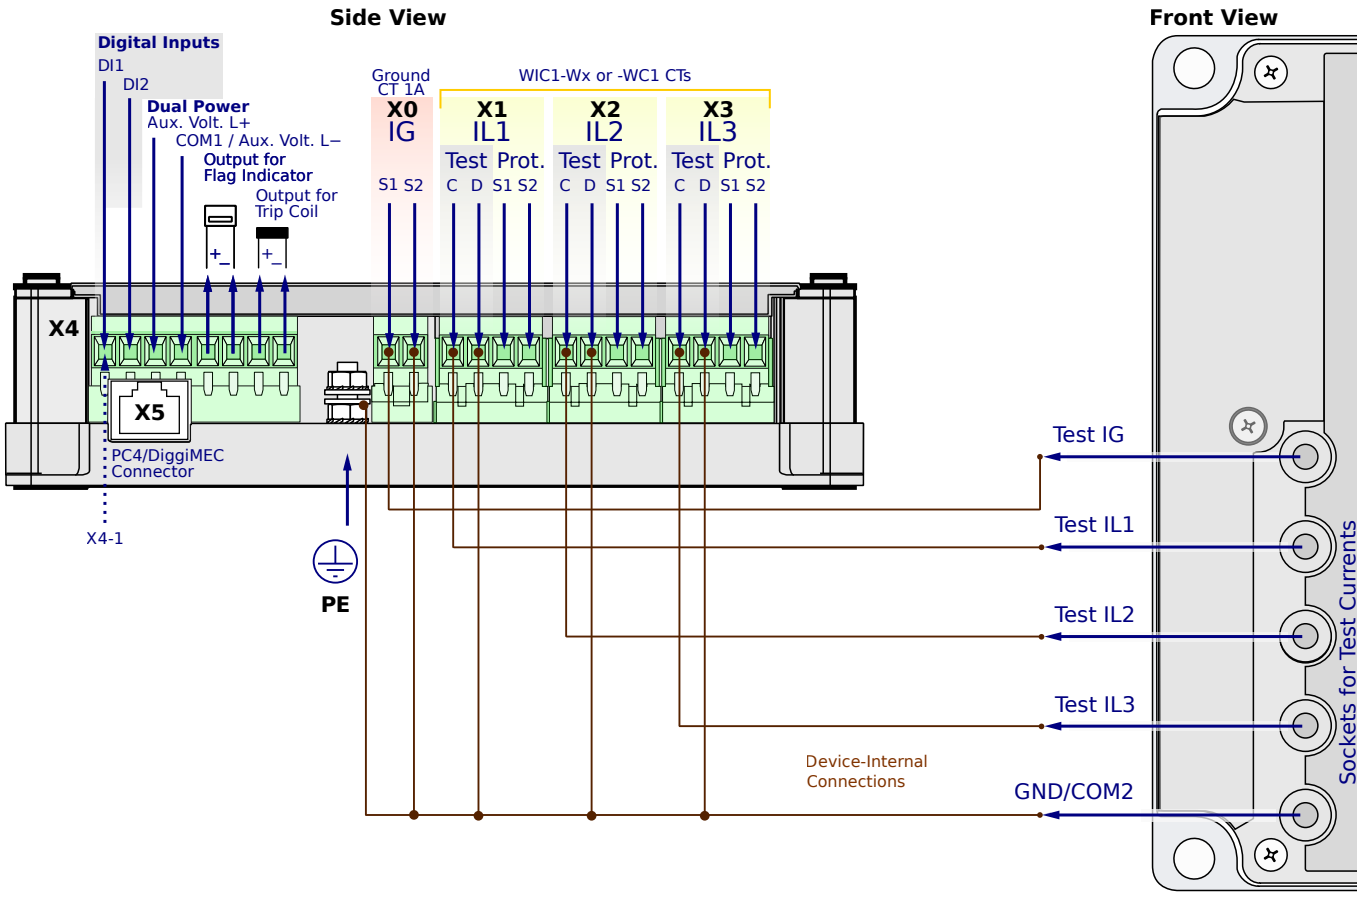


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0SB0

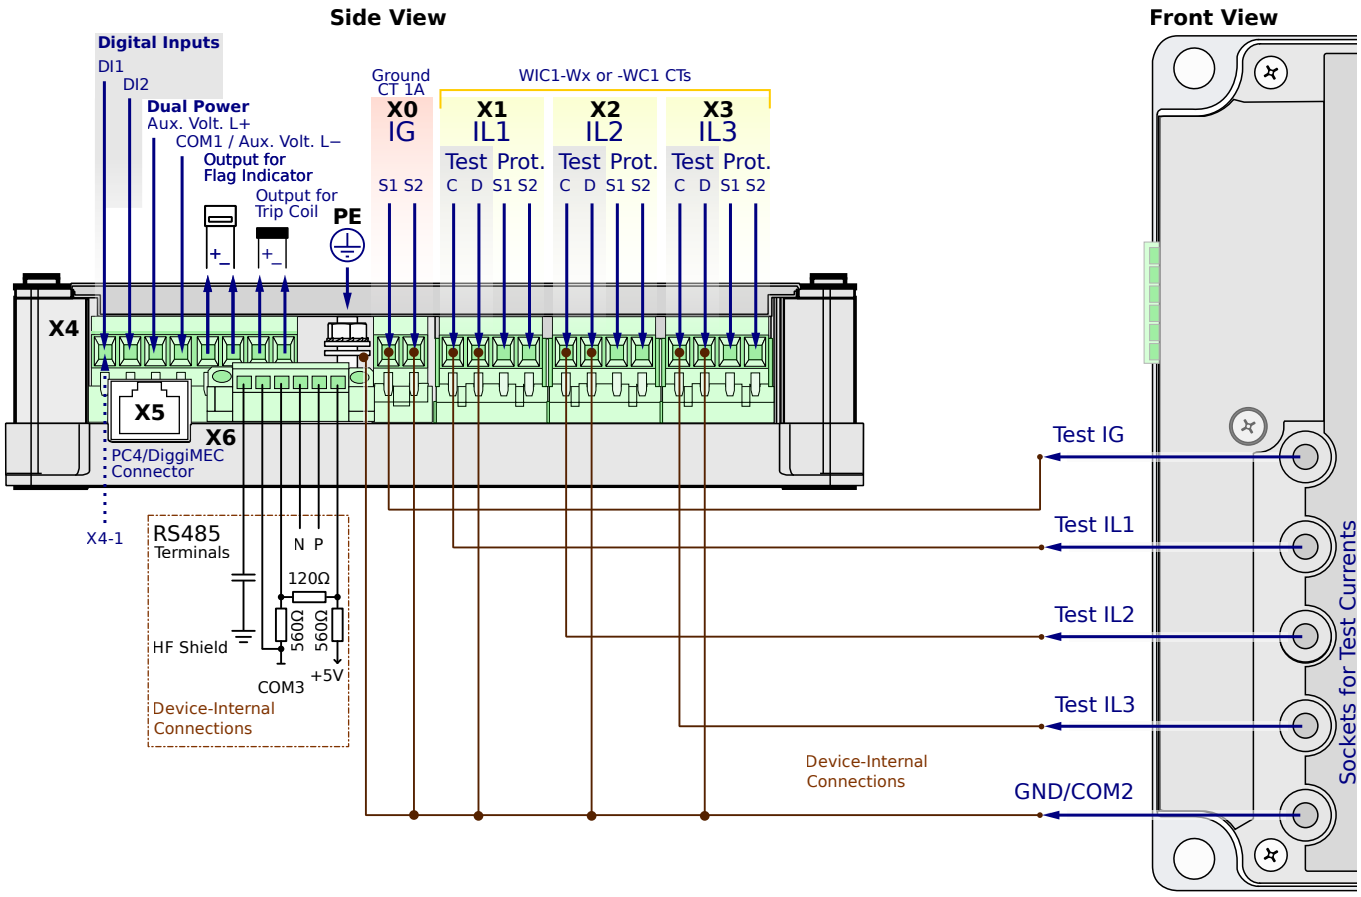


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0SBH

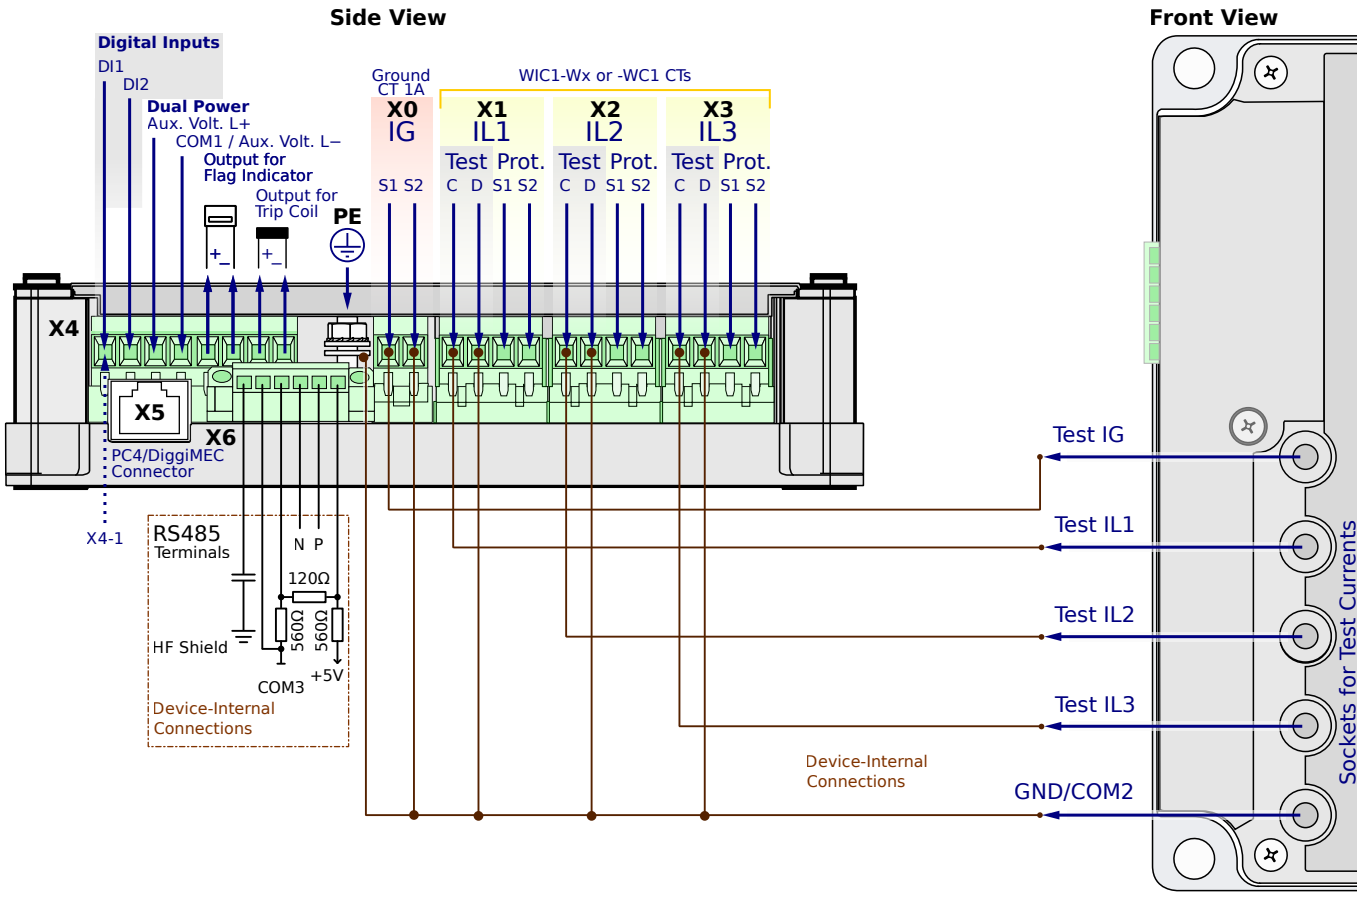


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0SC0

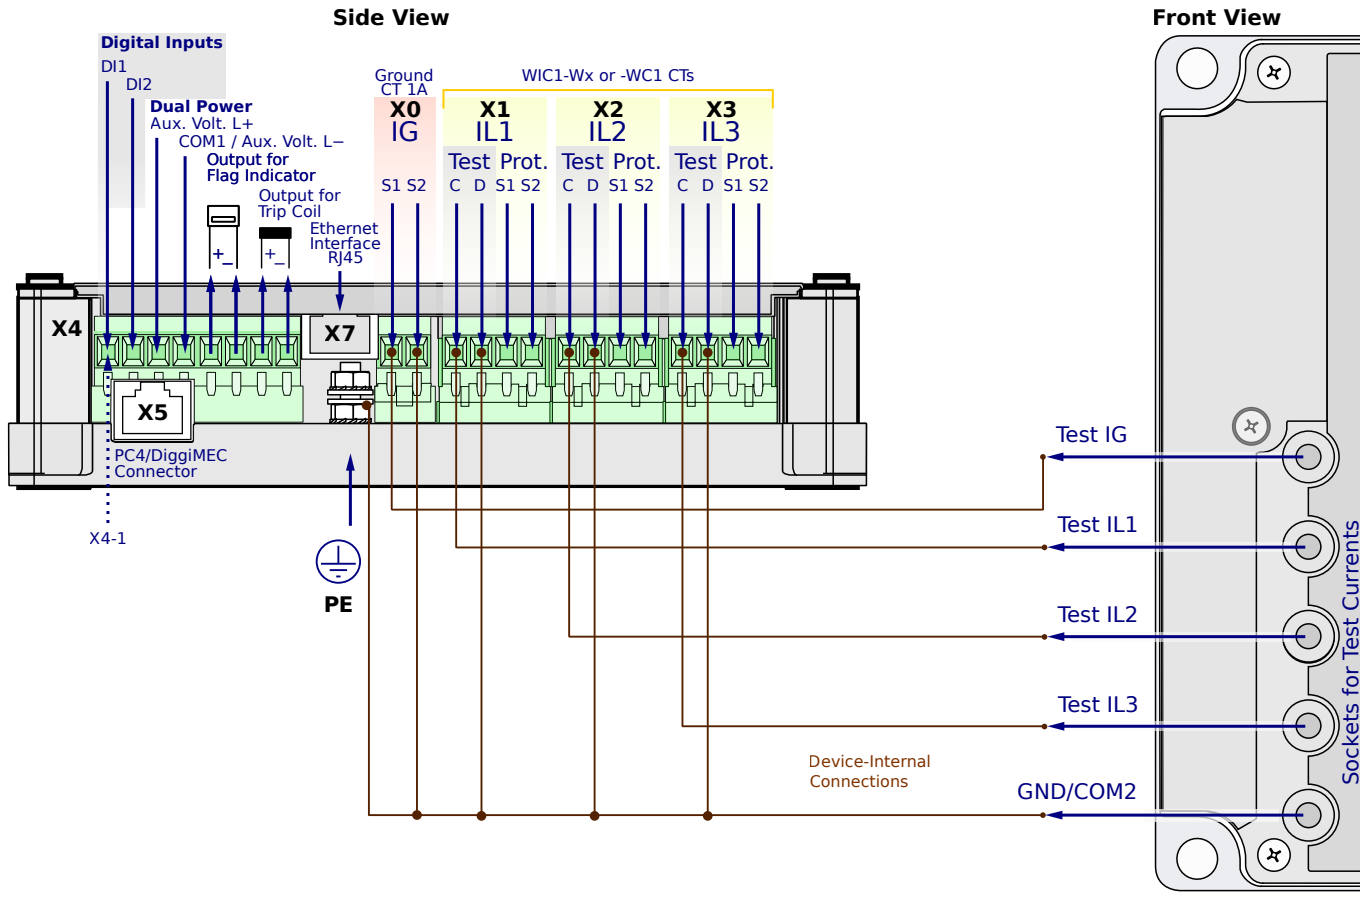


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0SCH

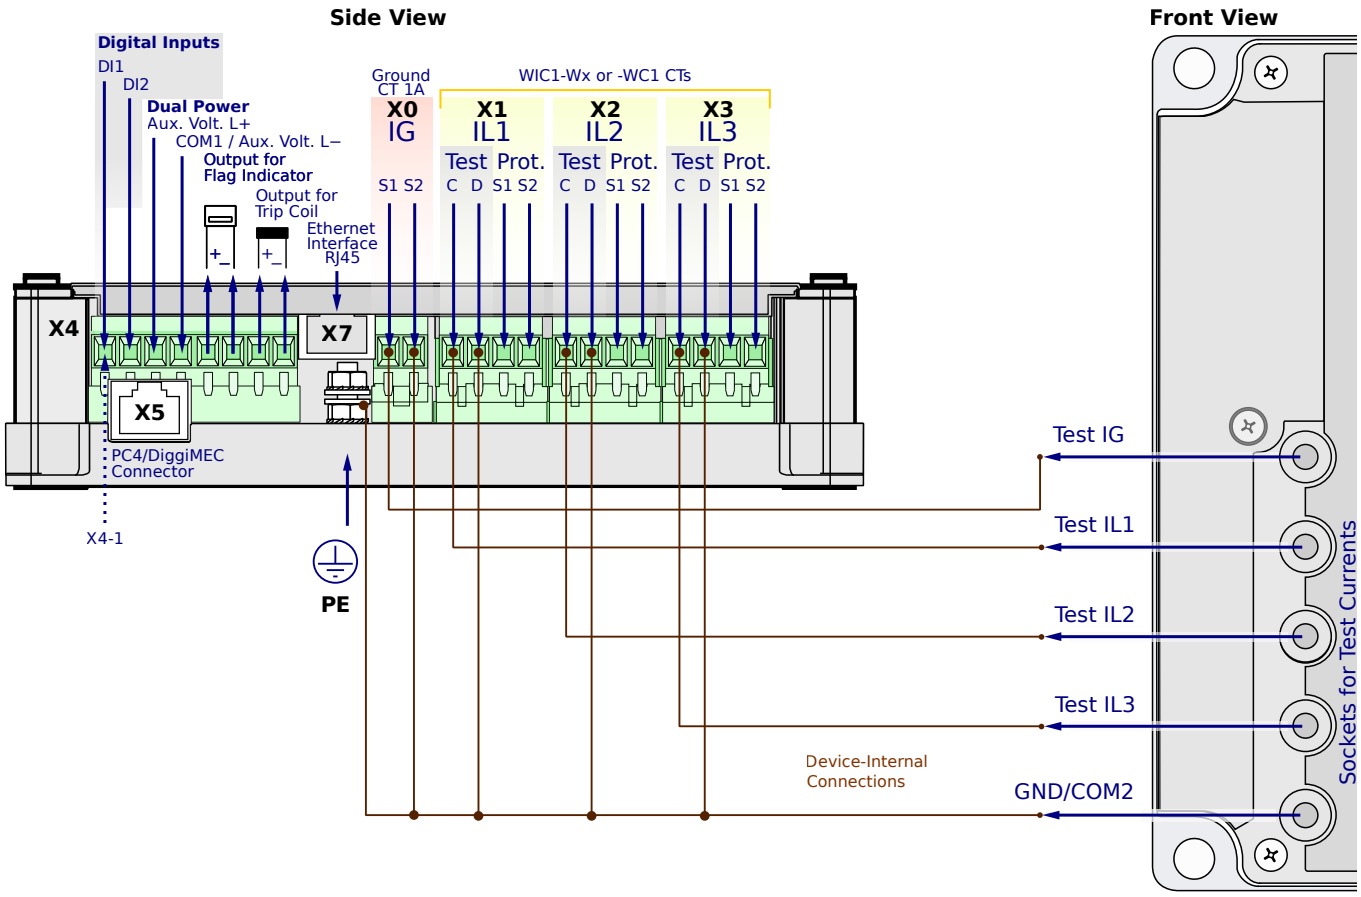


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0SL0

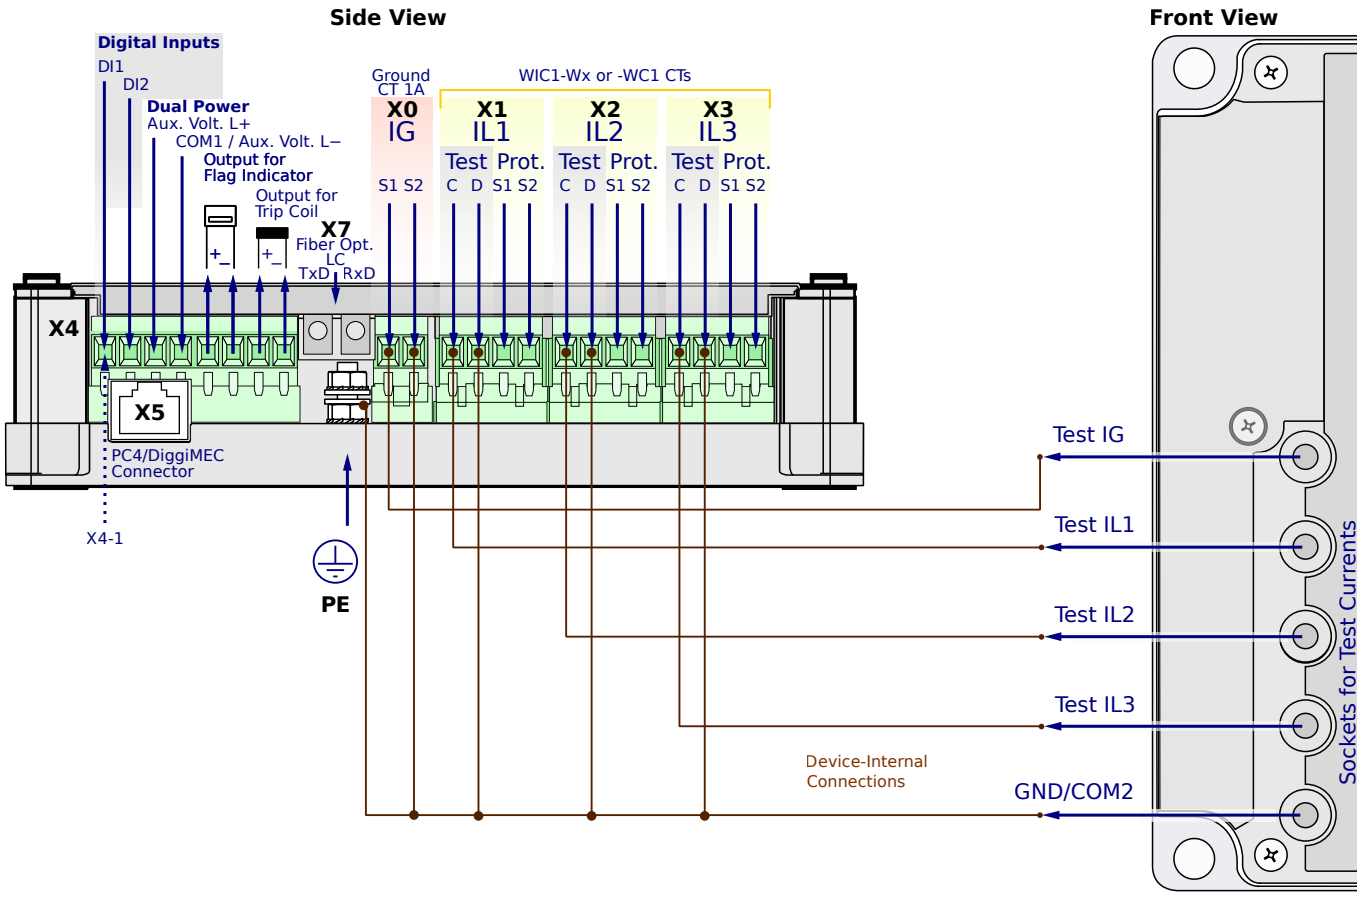


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0SLH

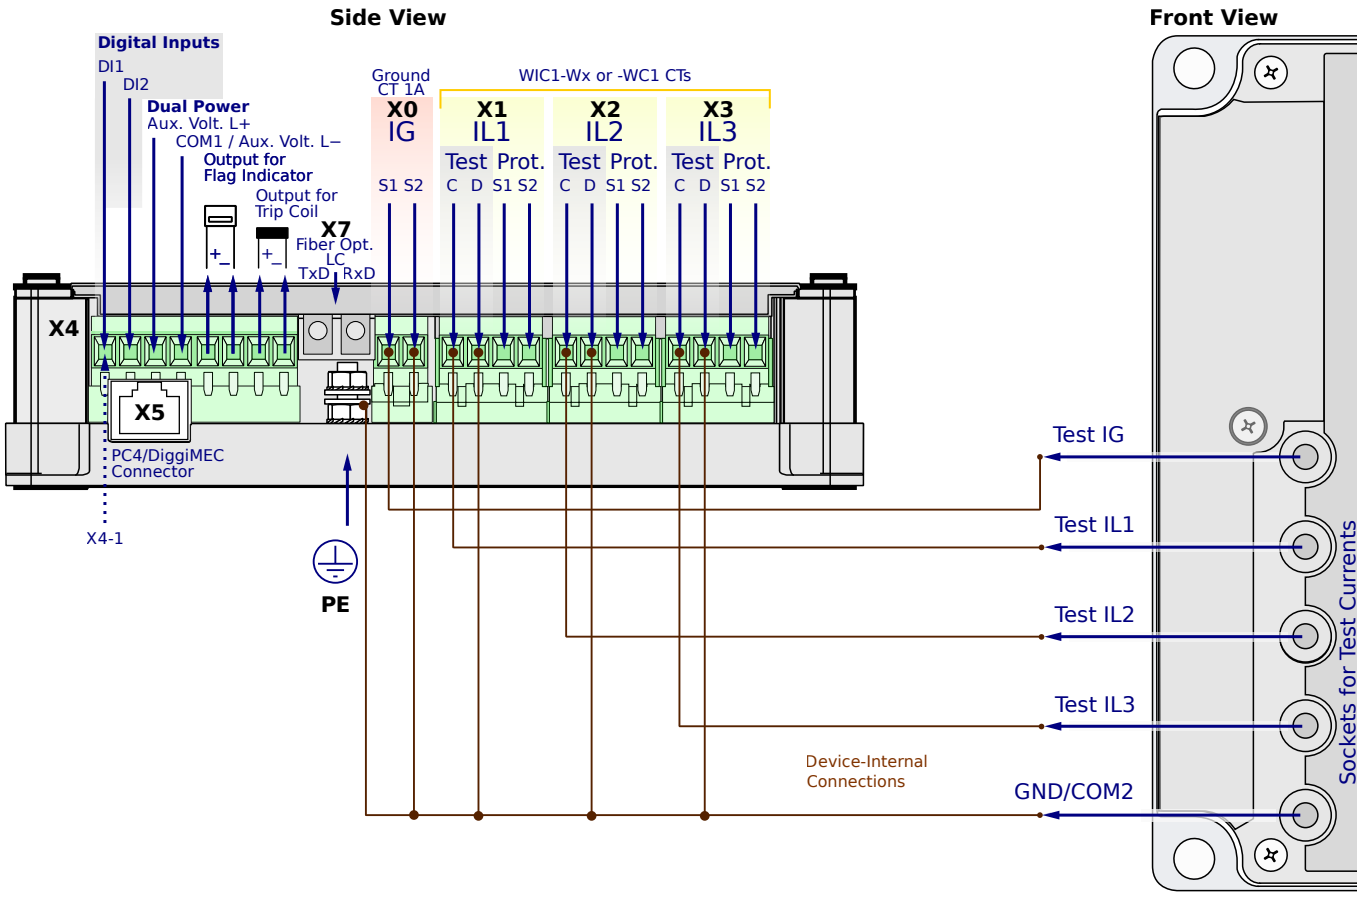


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0AA0

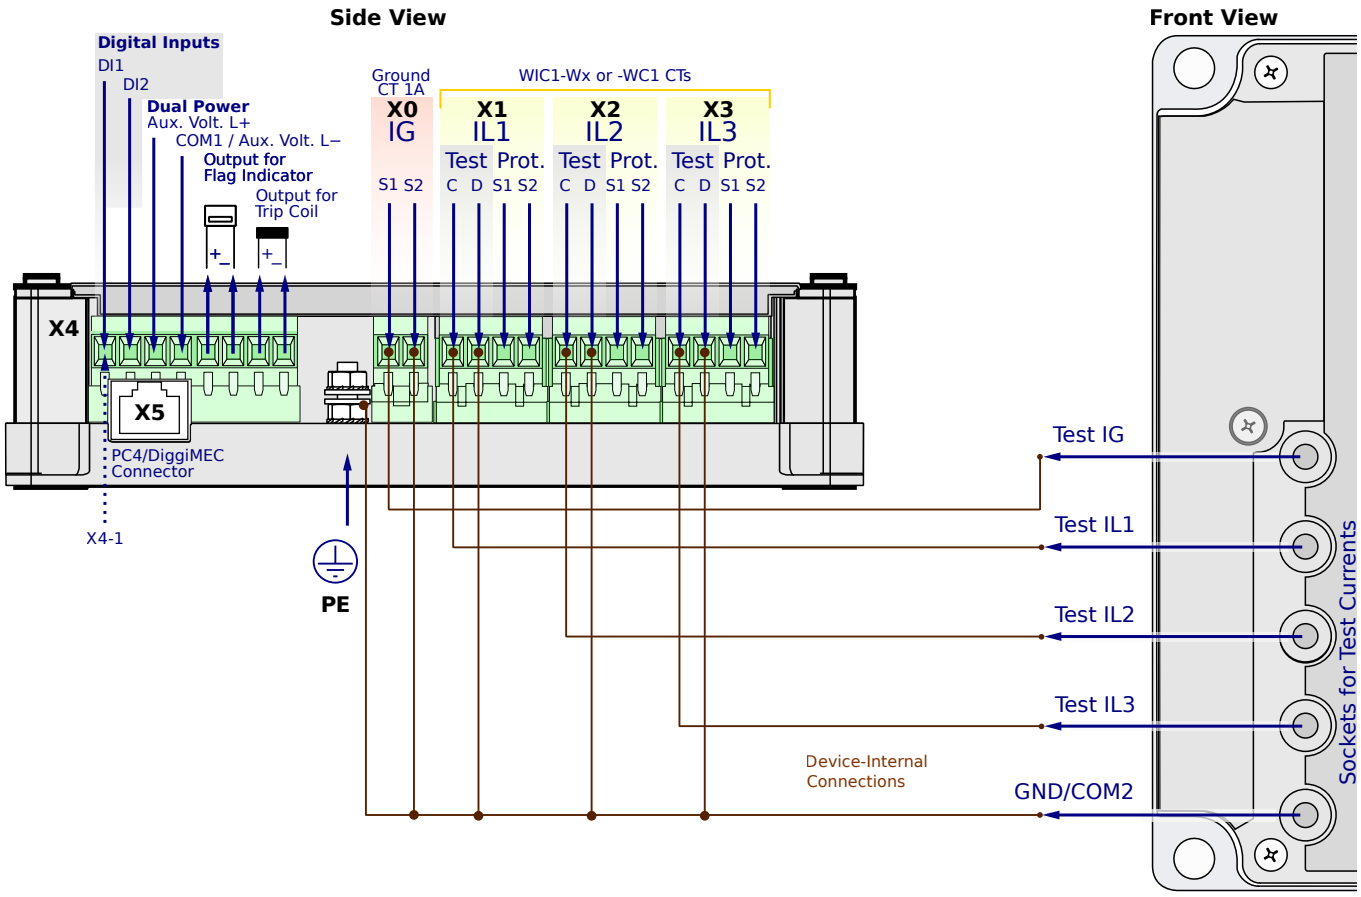


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0AAH

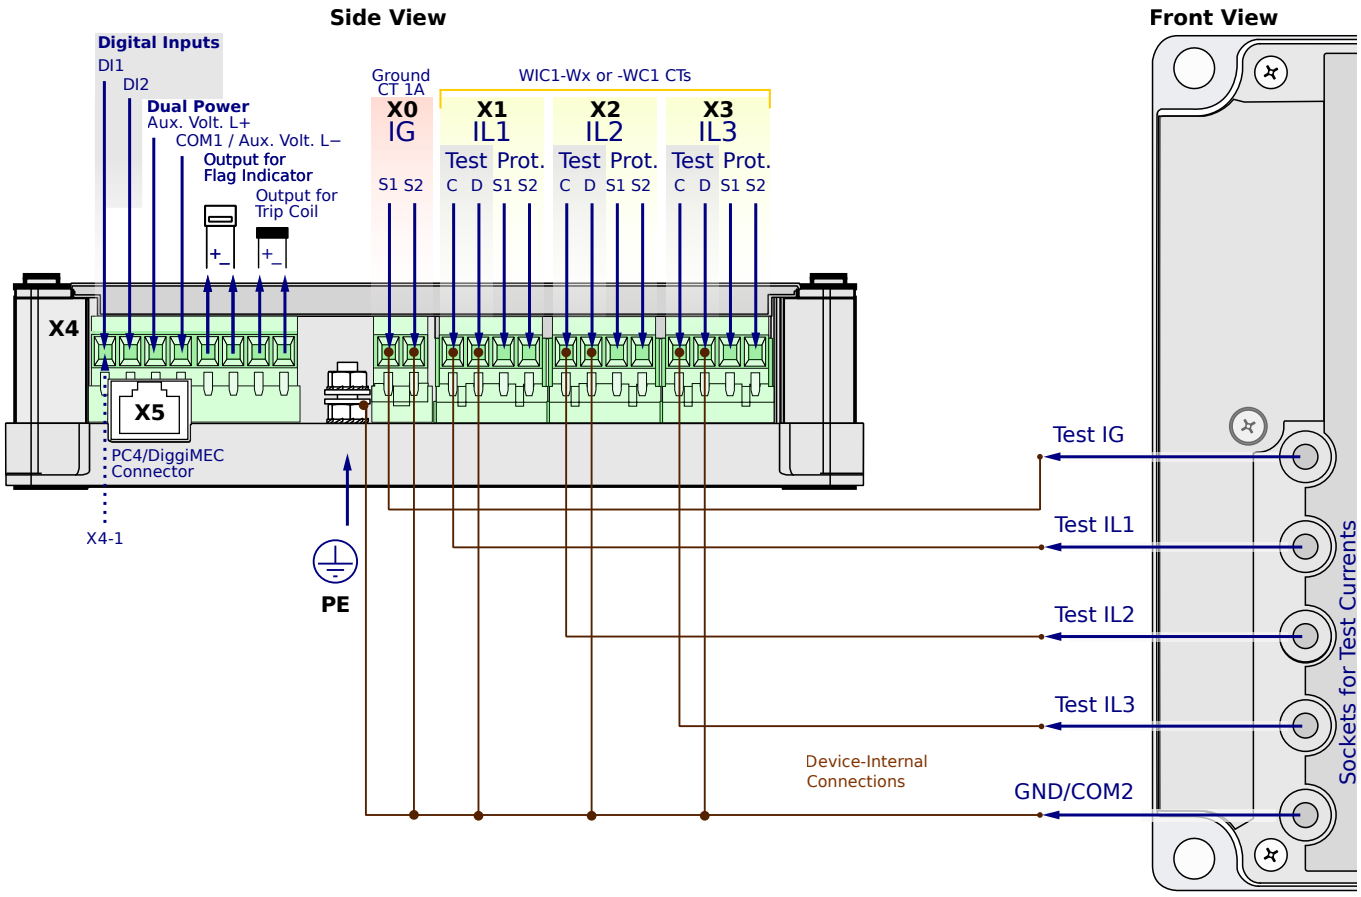


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0AB0

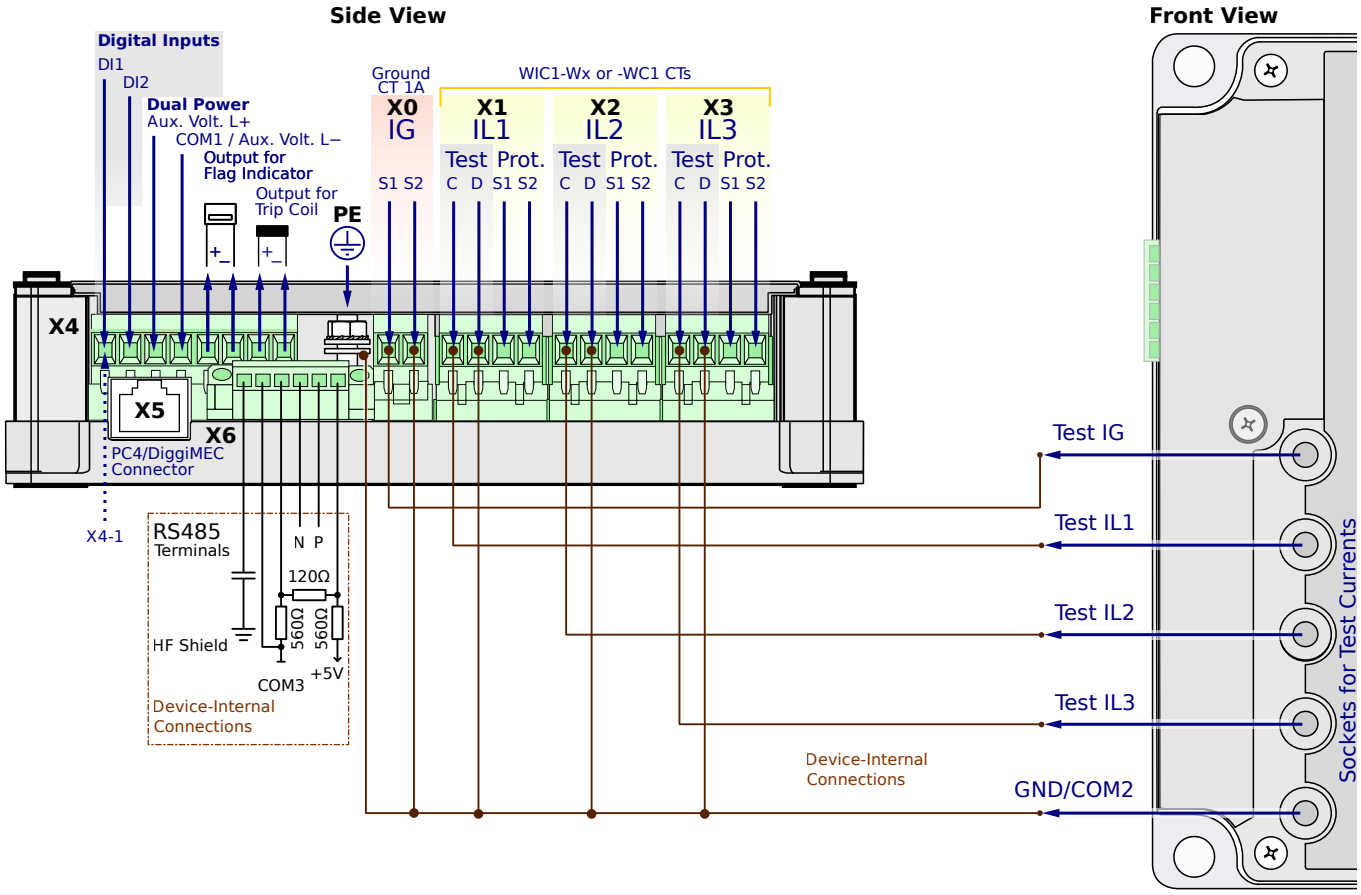


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0ABH

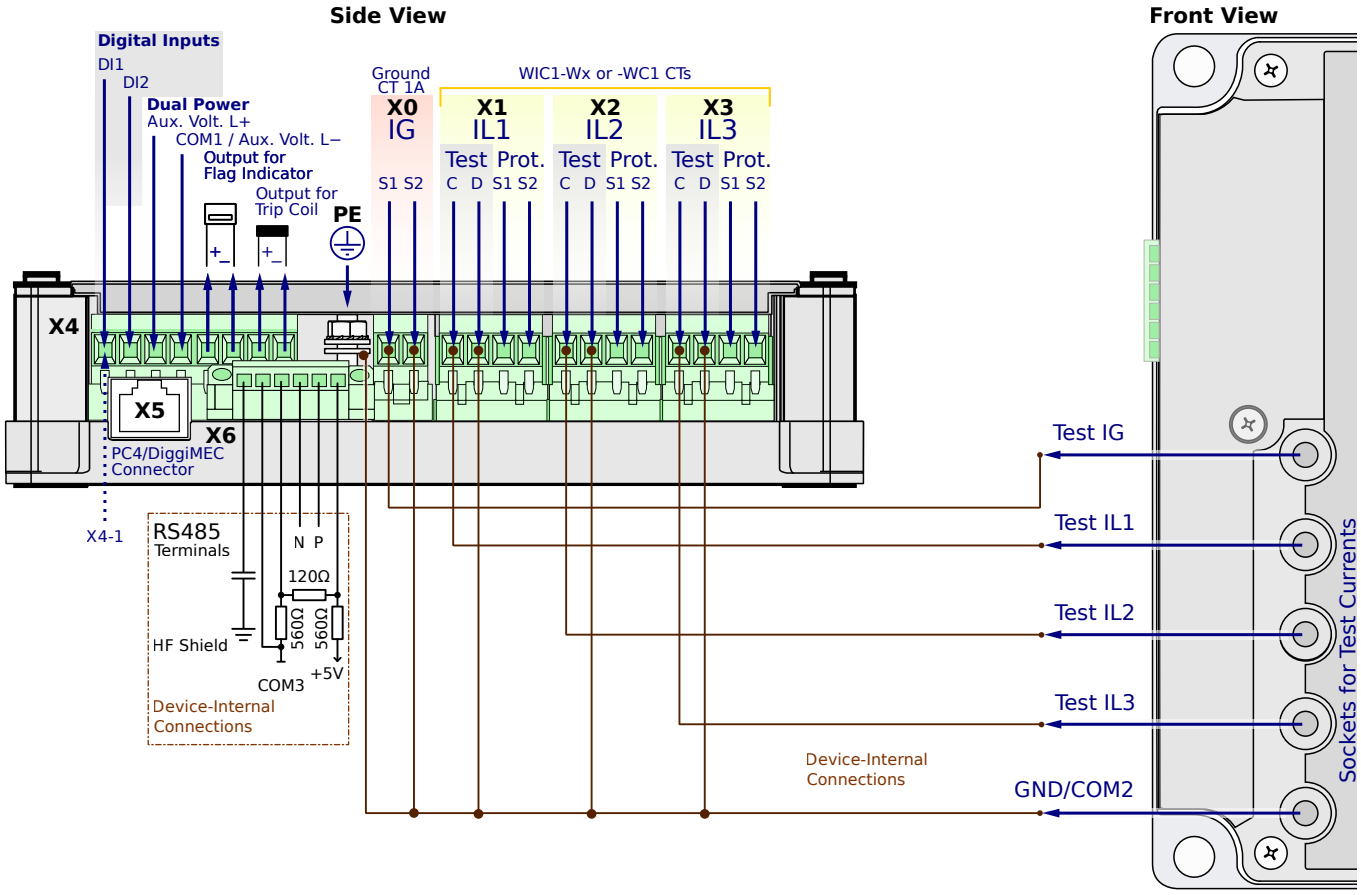


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0AC0

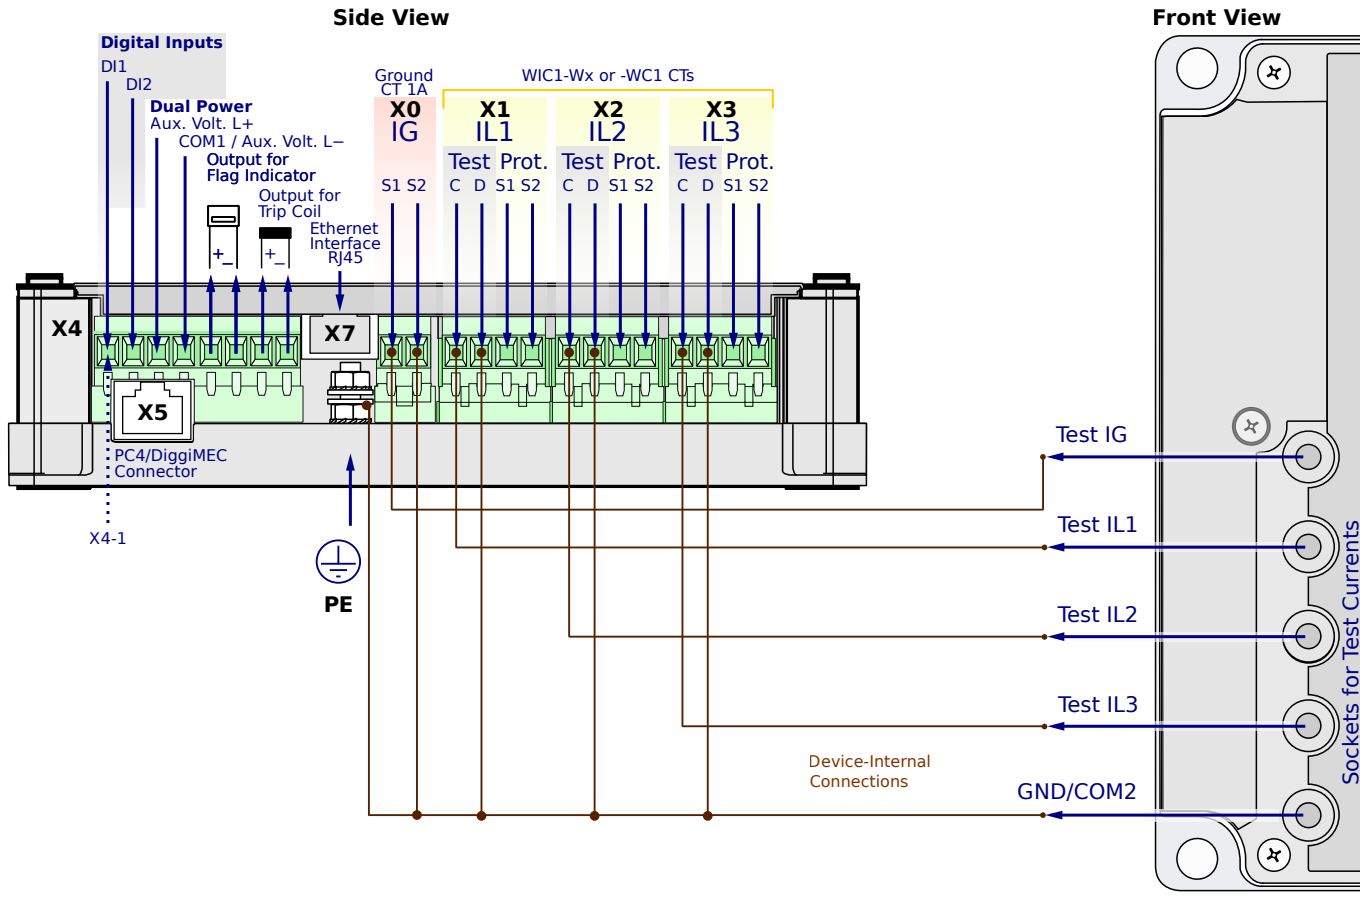


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0ACH

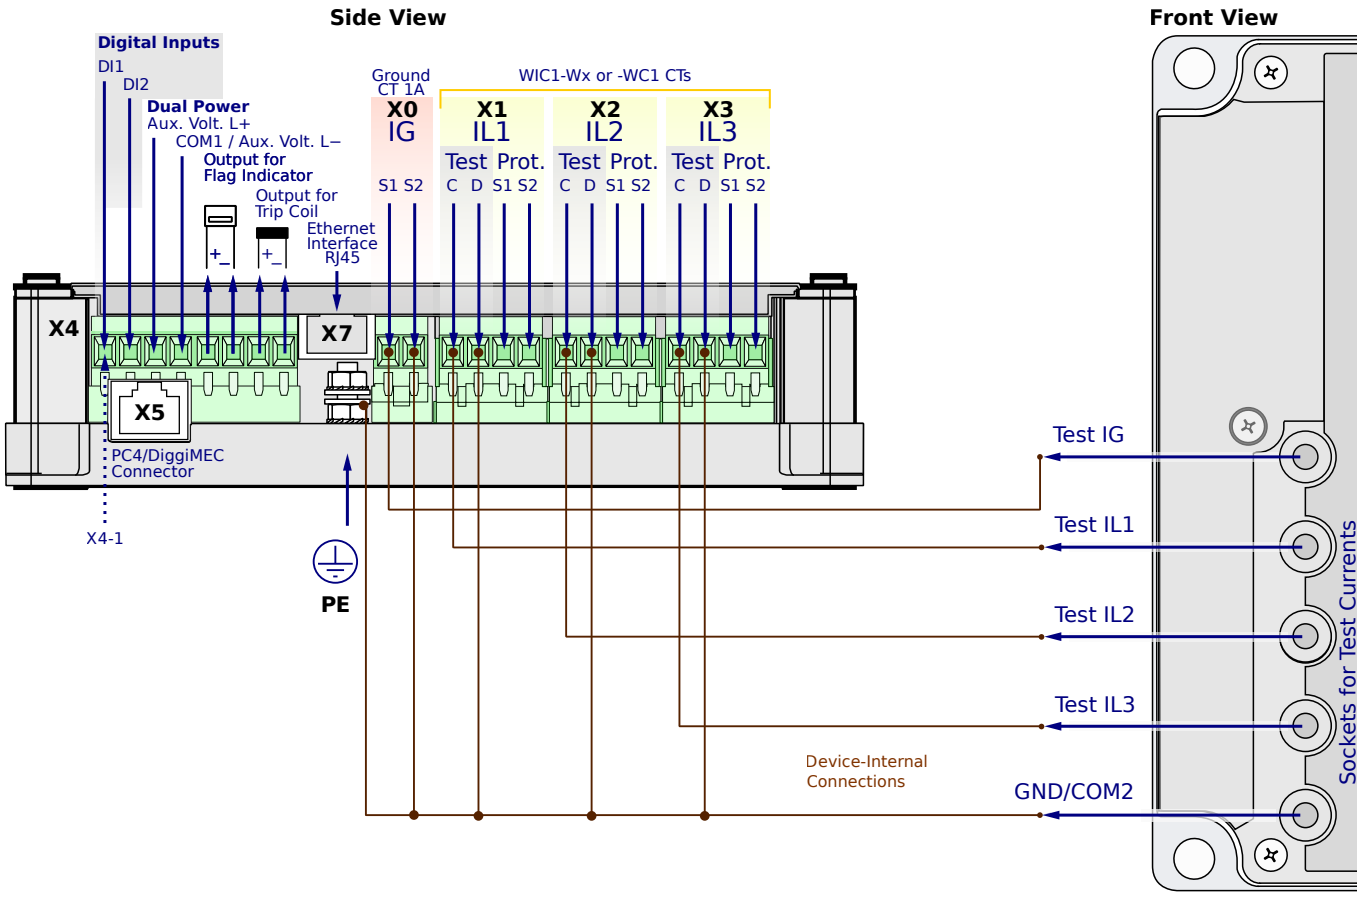


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0AL0

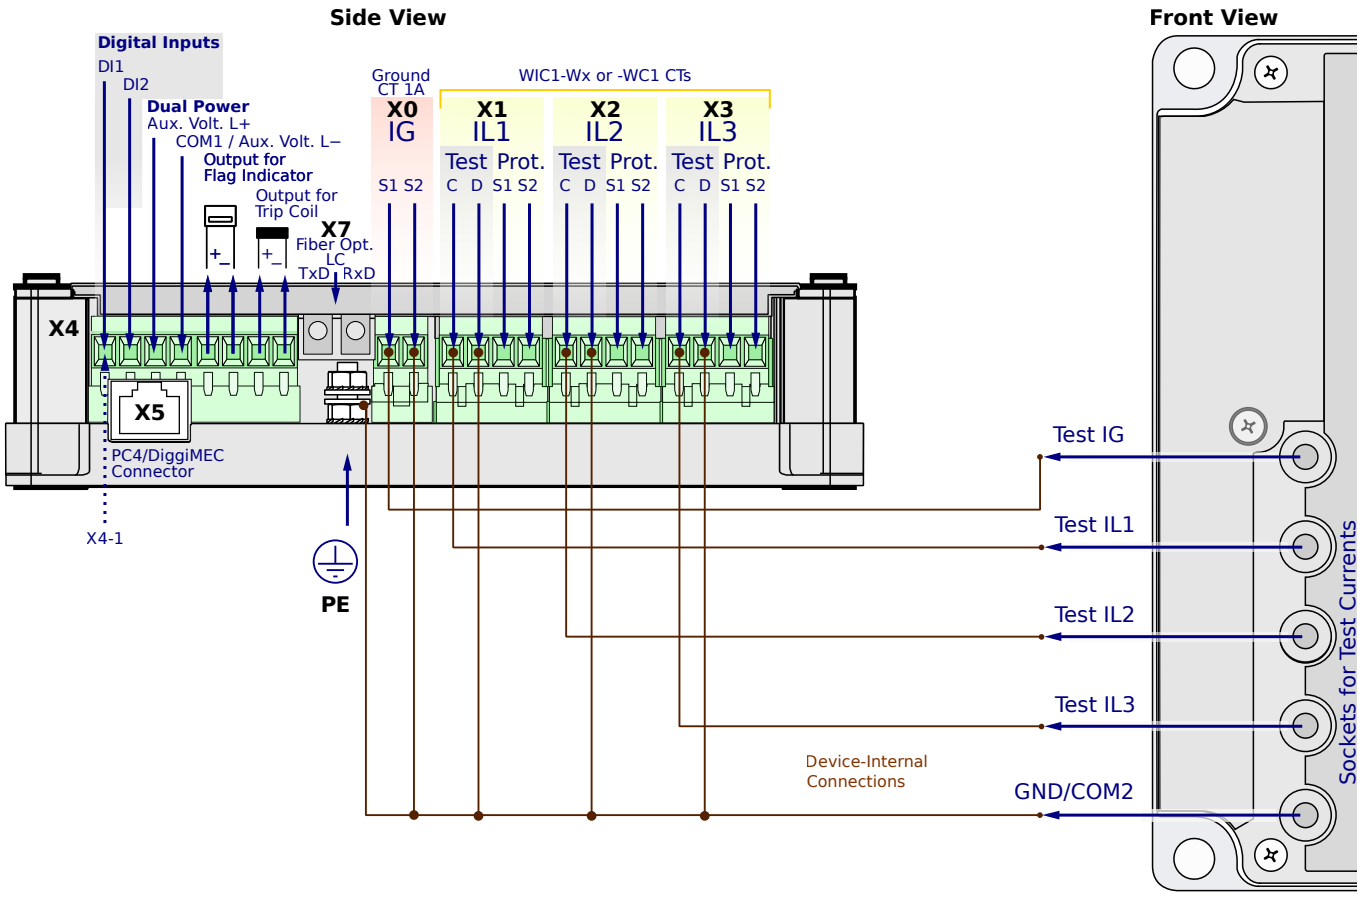


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0ALH

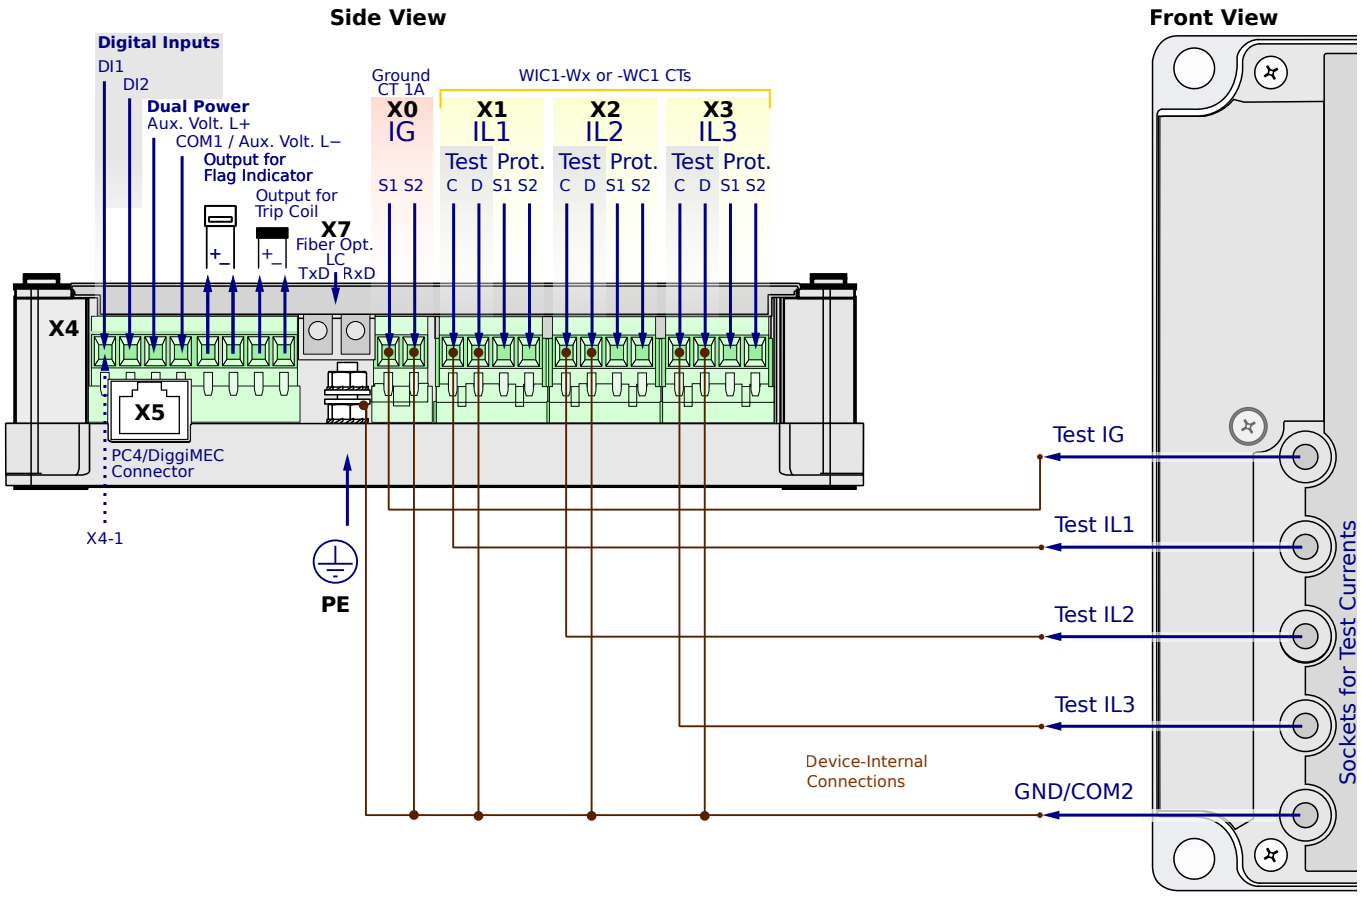


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0PA0

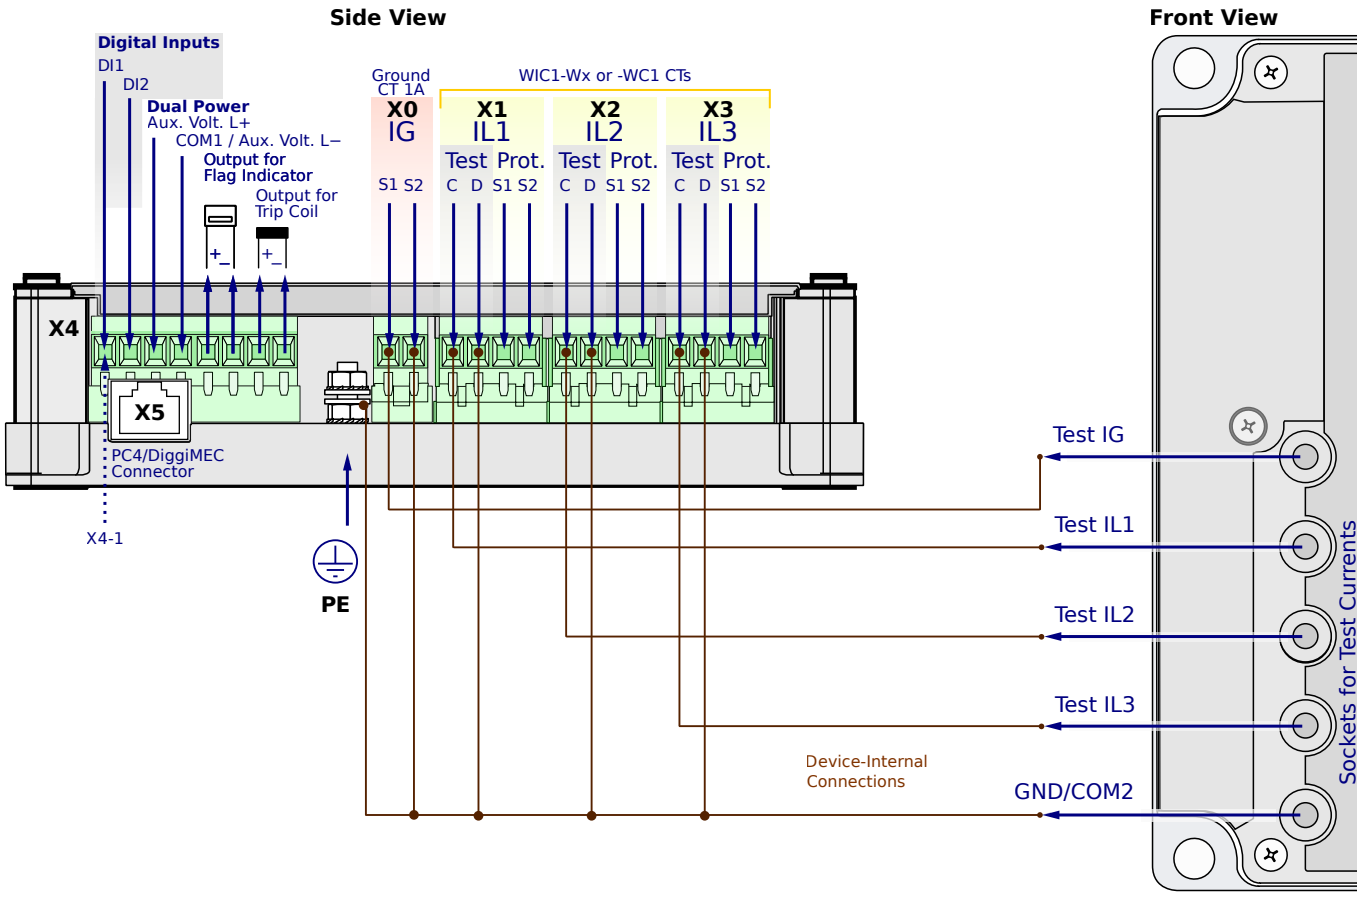


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0PAH

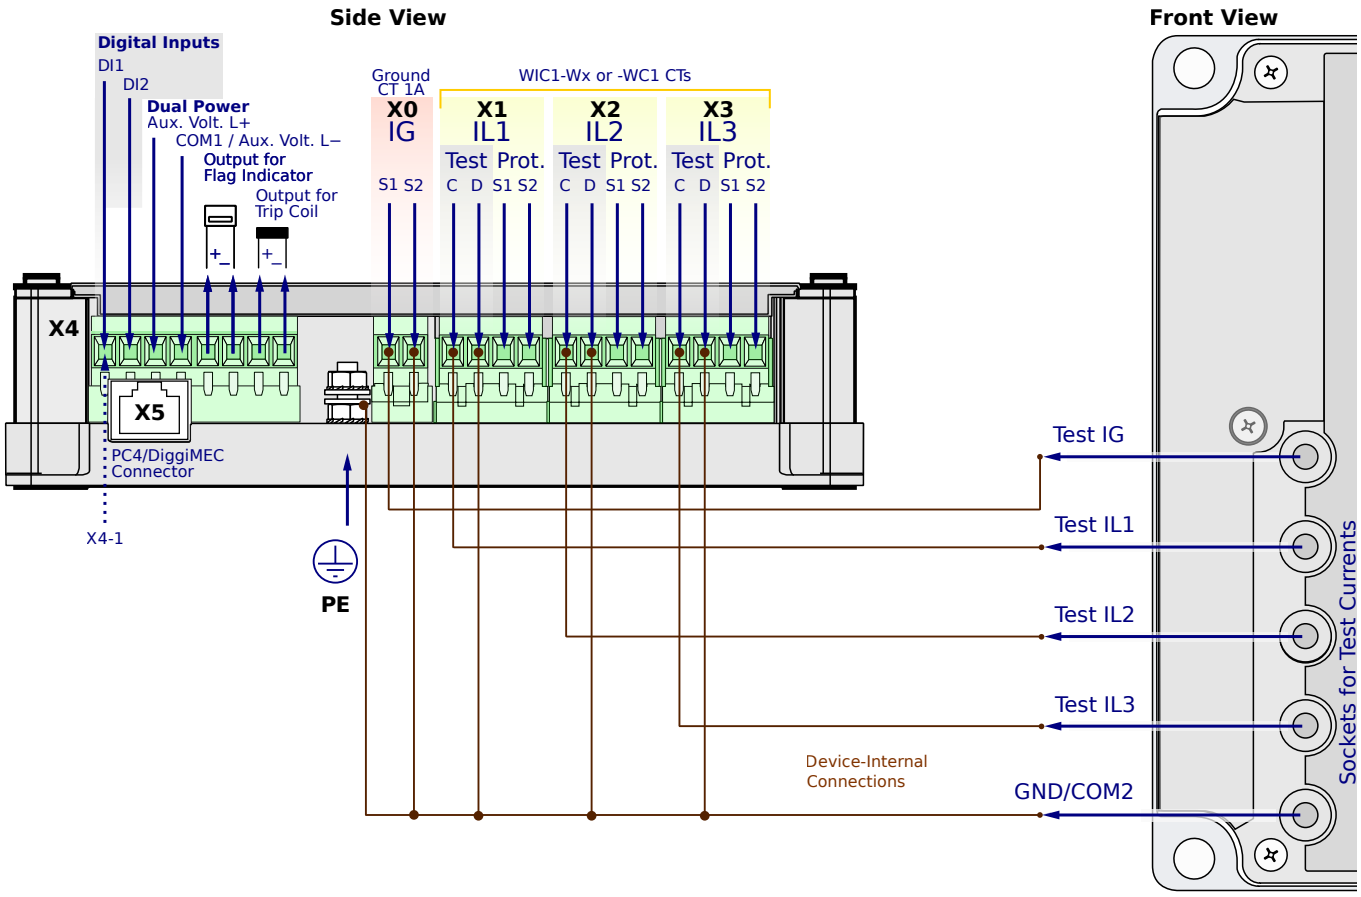


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND0PB0

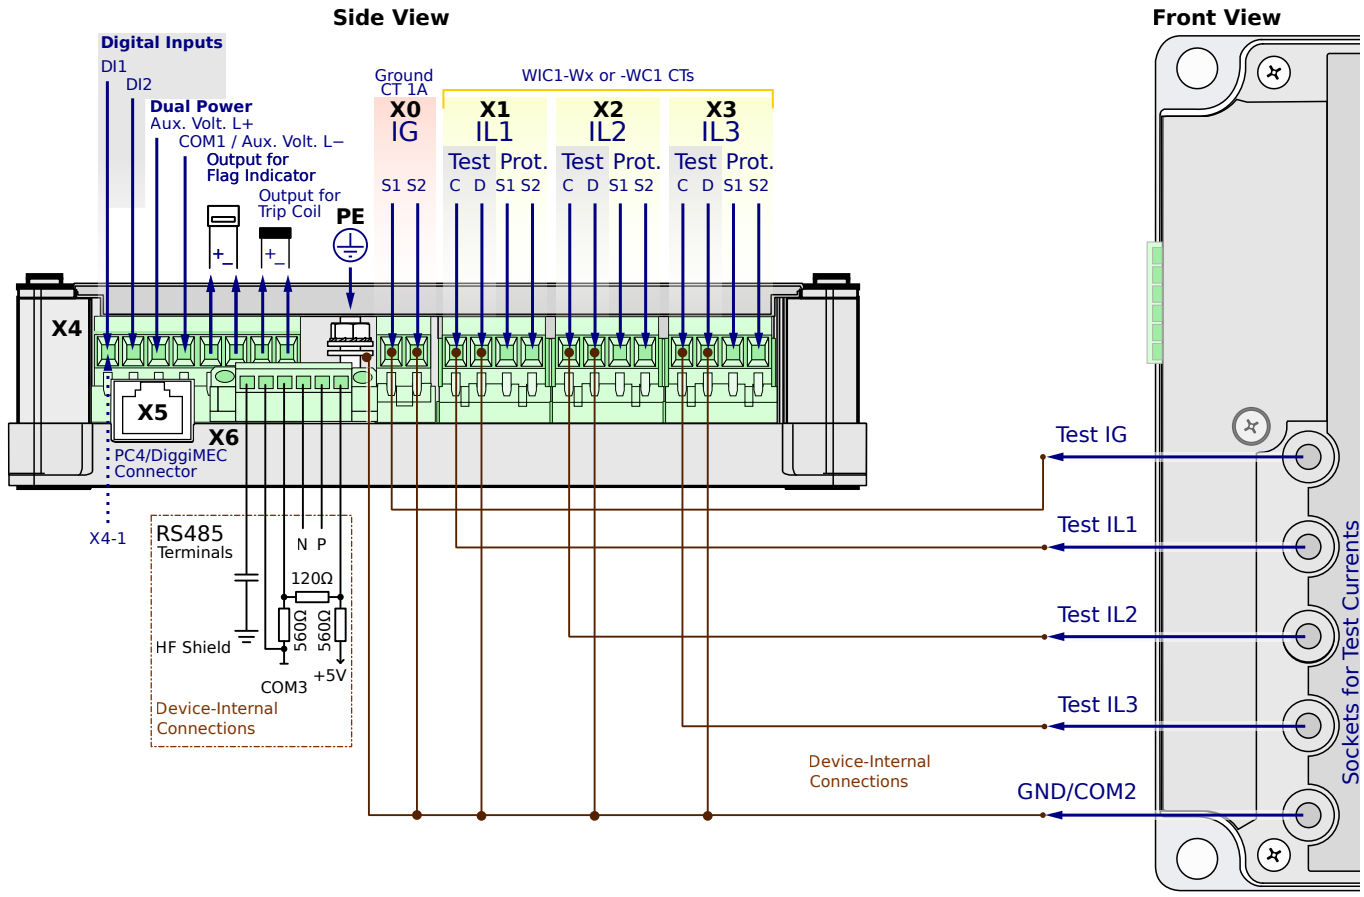


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0PBH

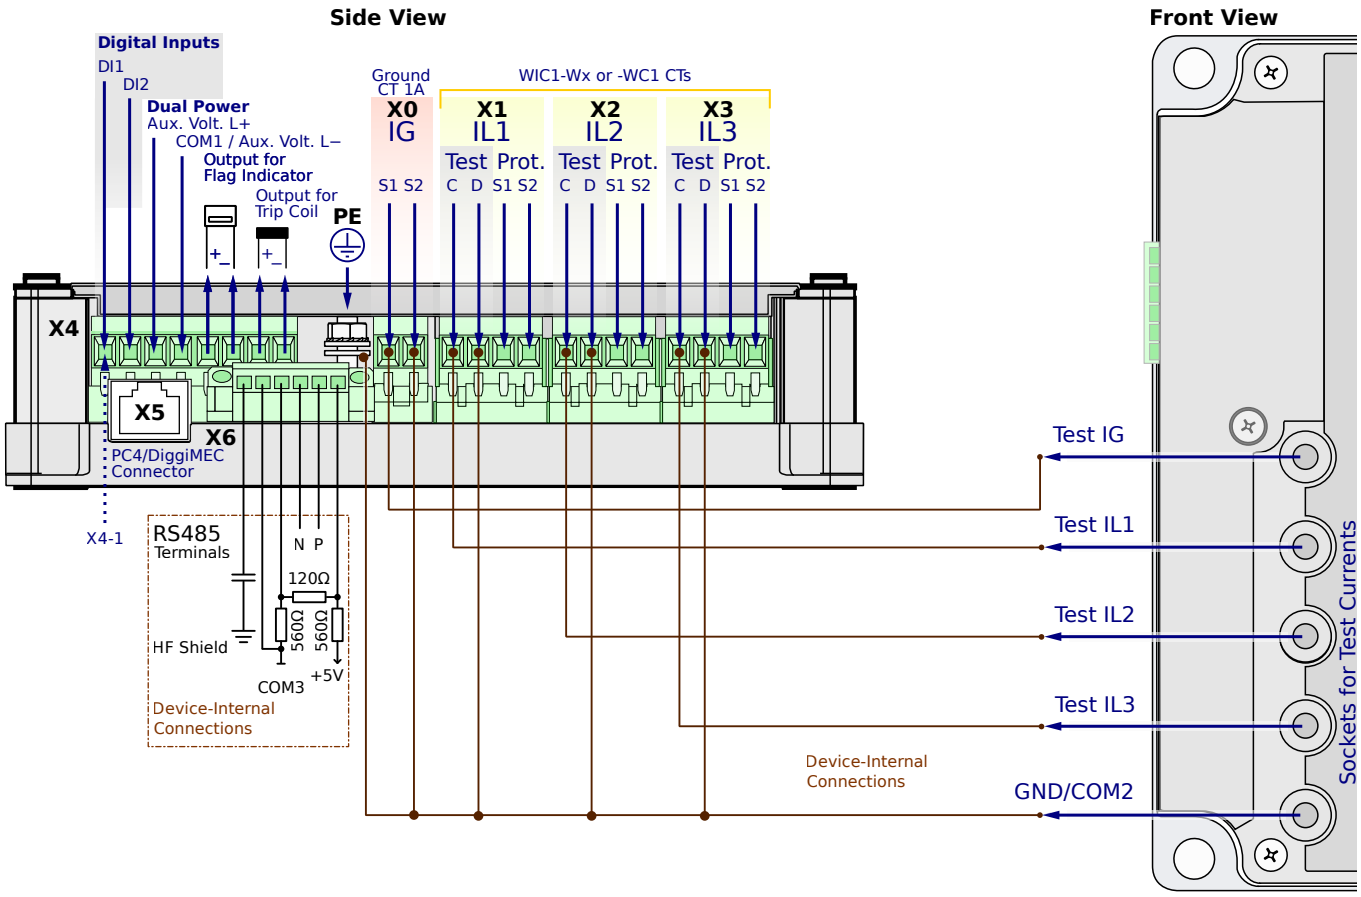


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND0PC0

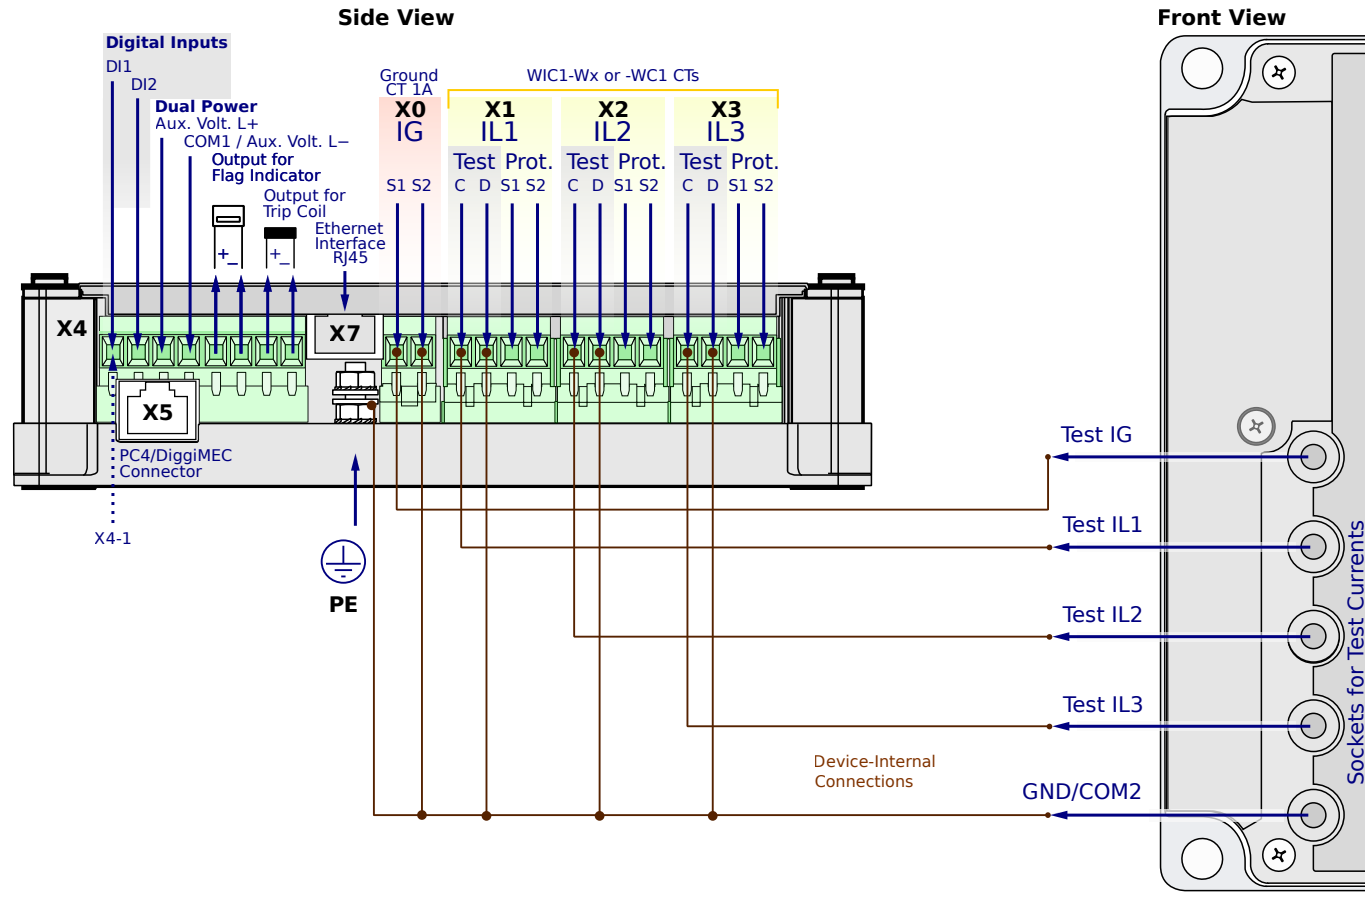


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0PCH

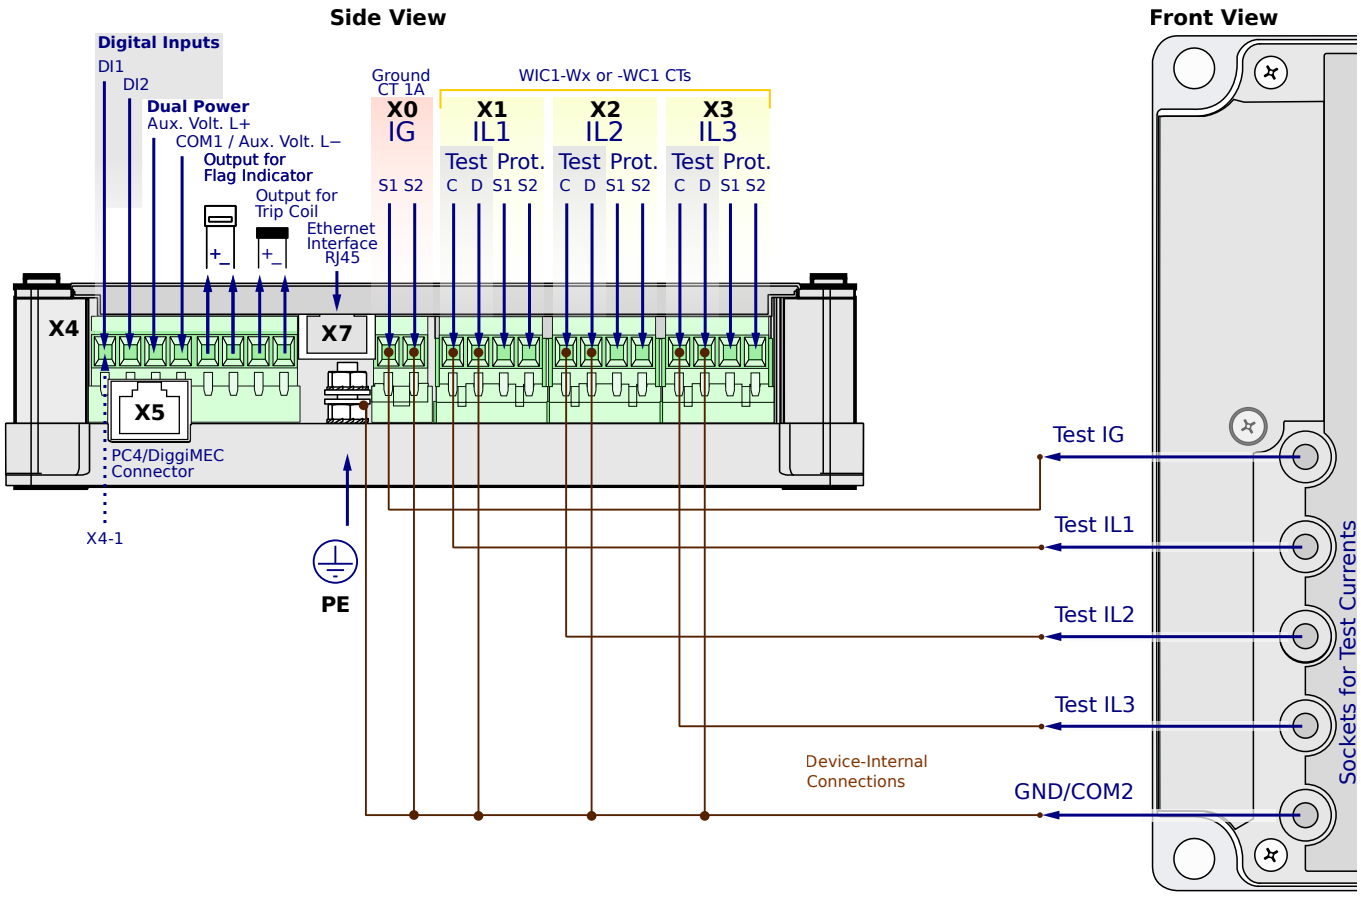


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND0PL0

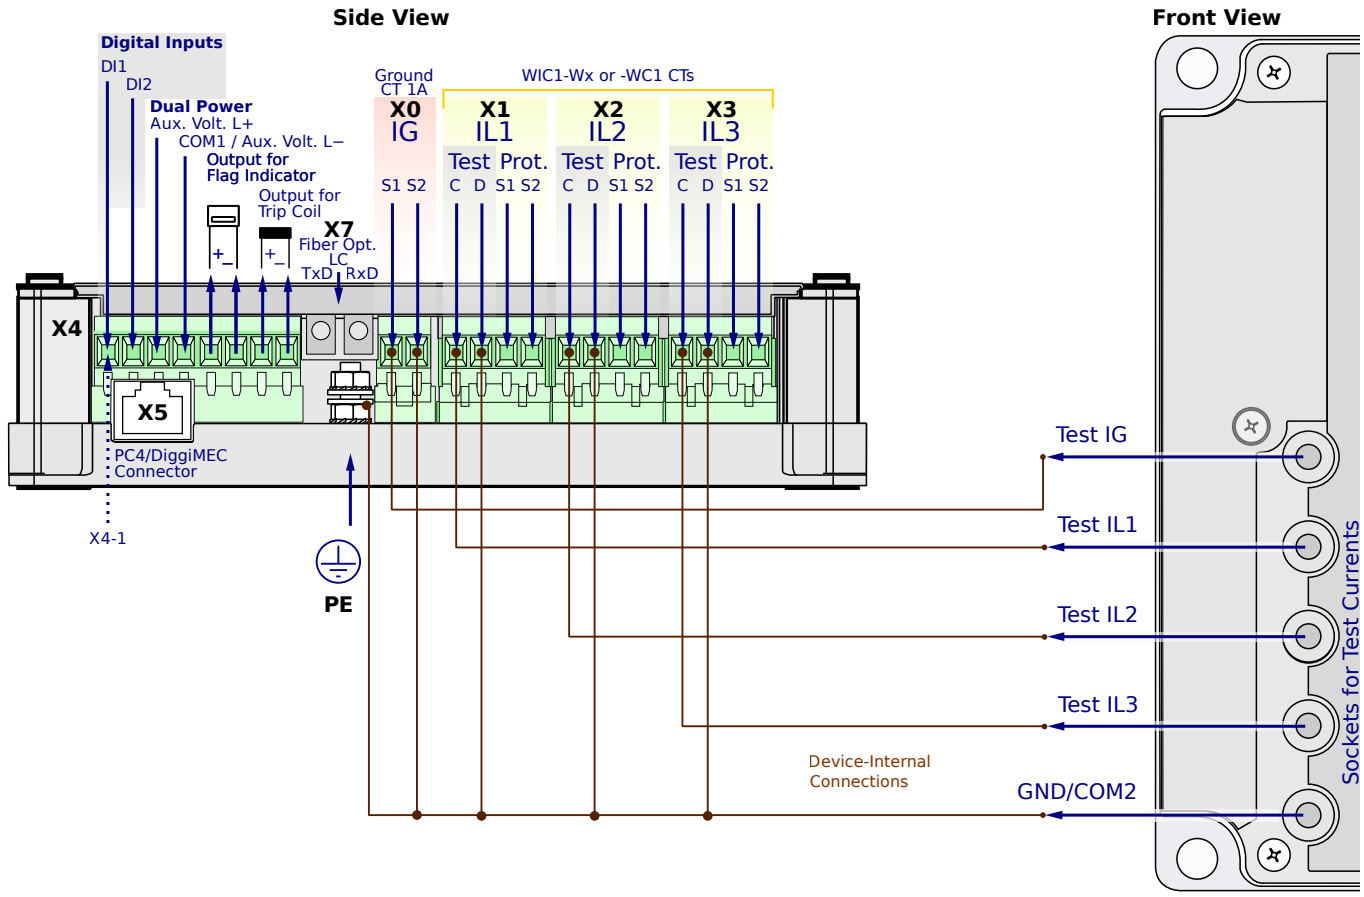


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND0PLH

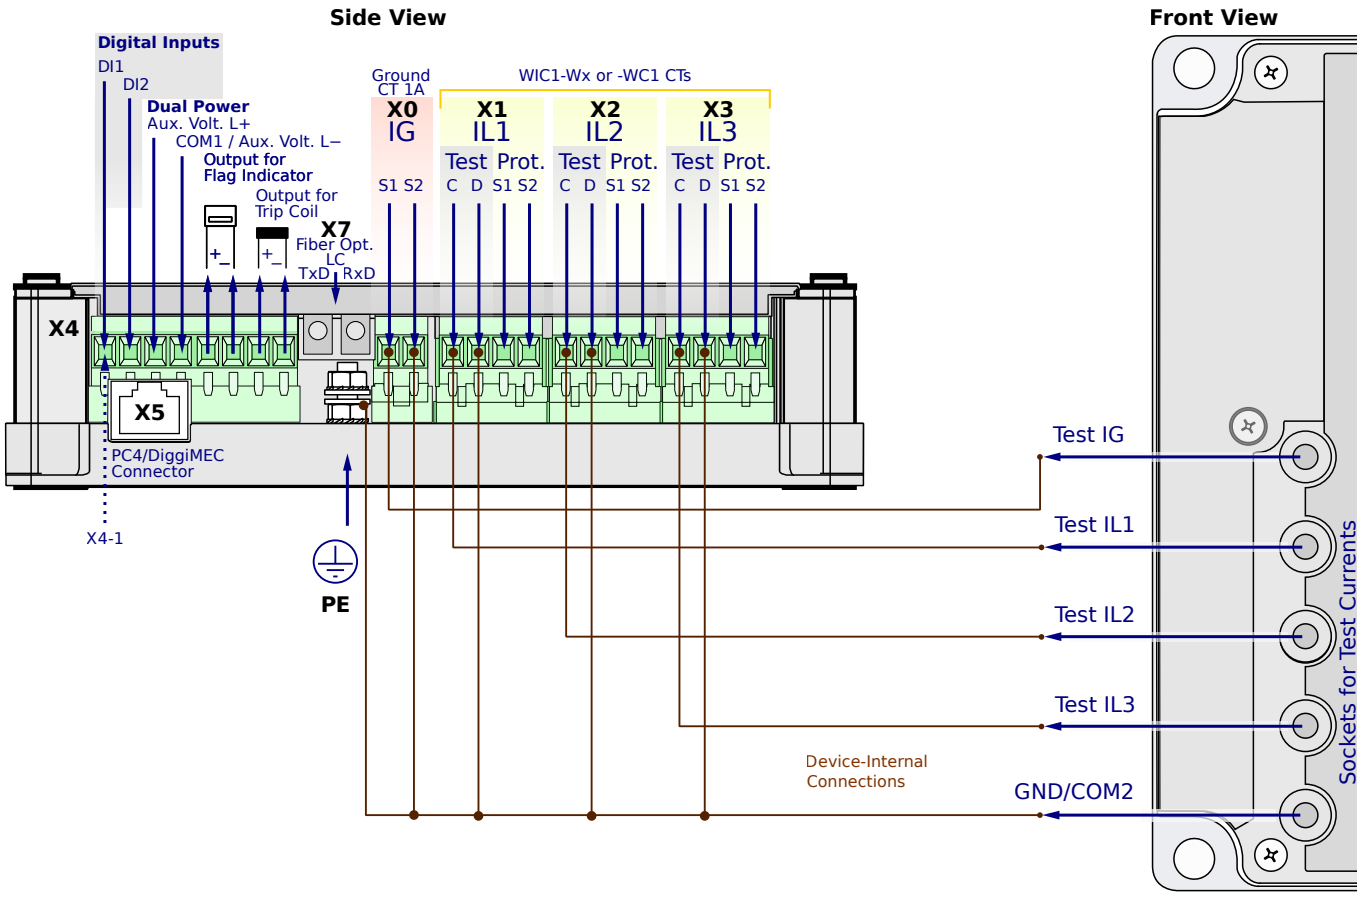


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1SA0

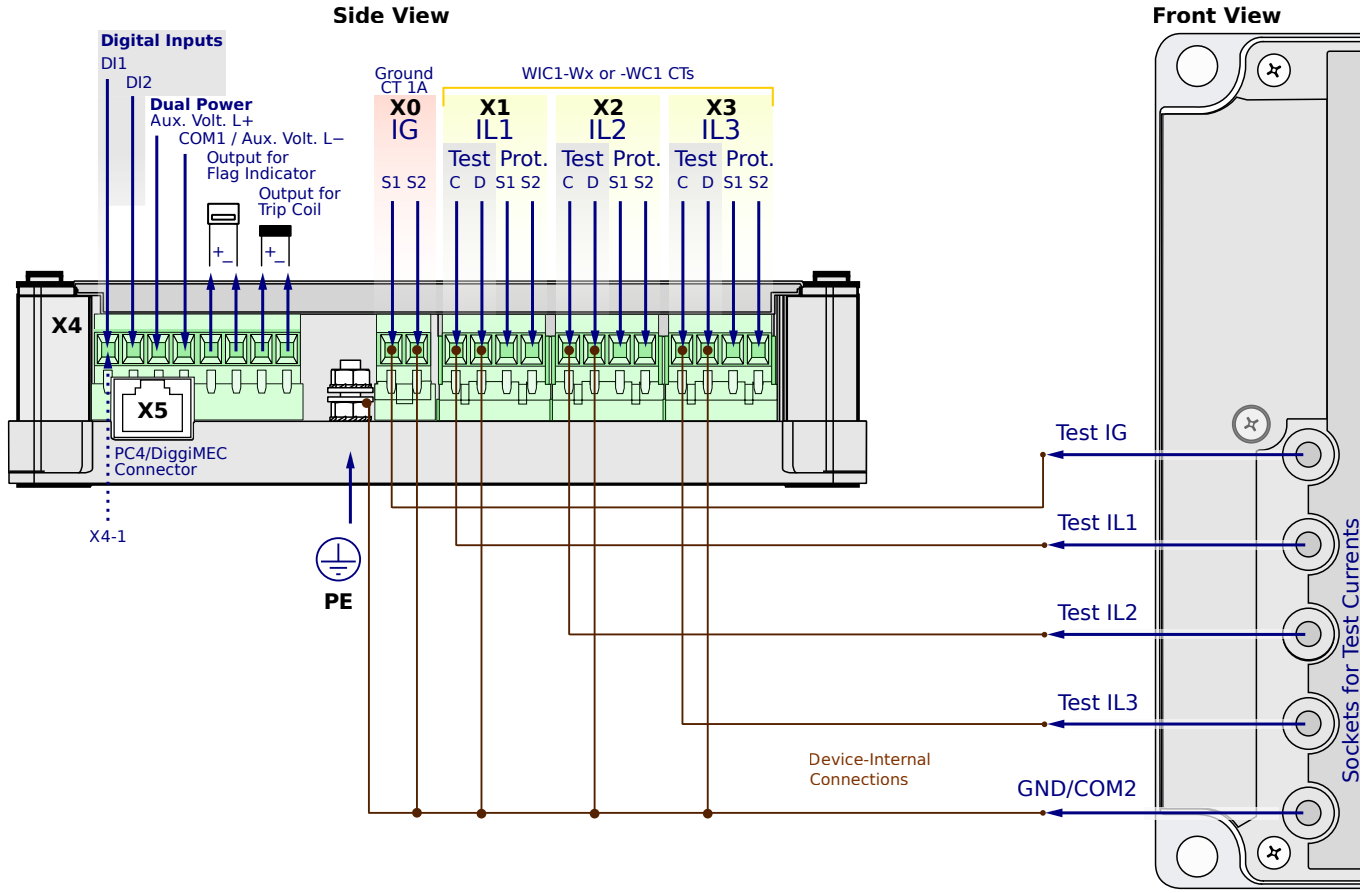


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1SAH

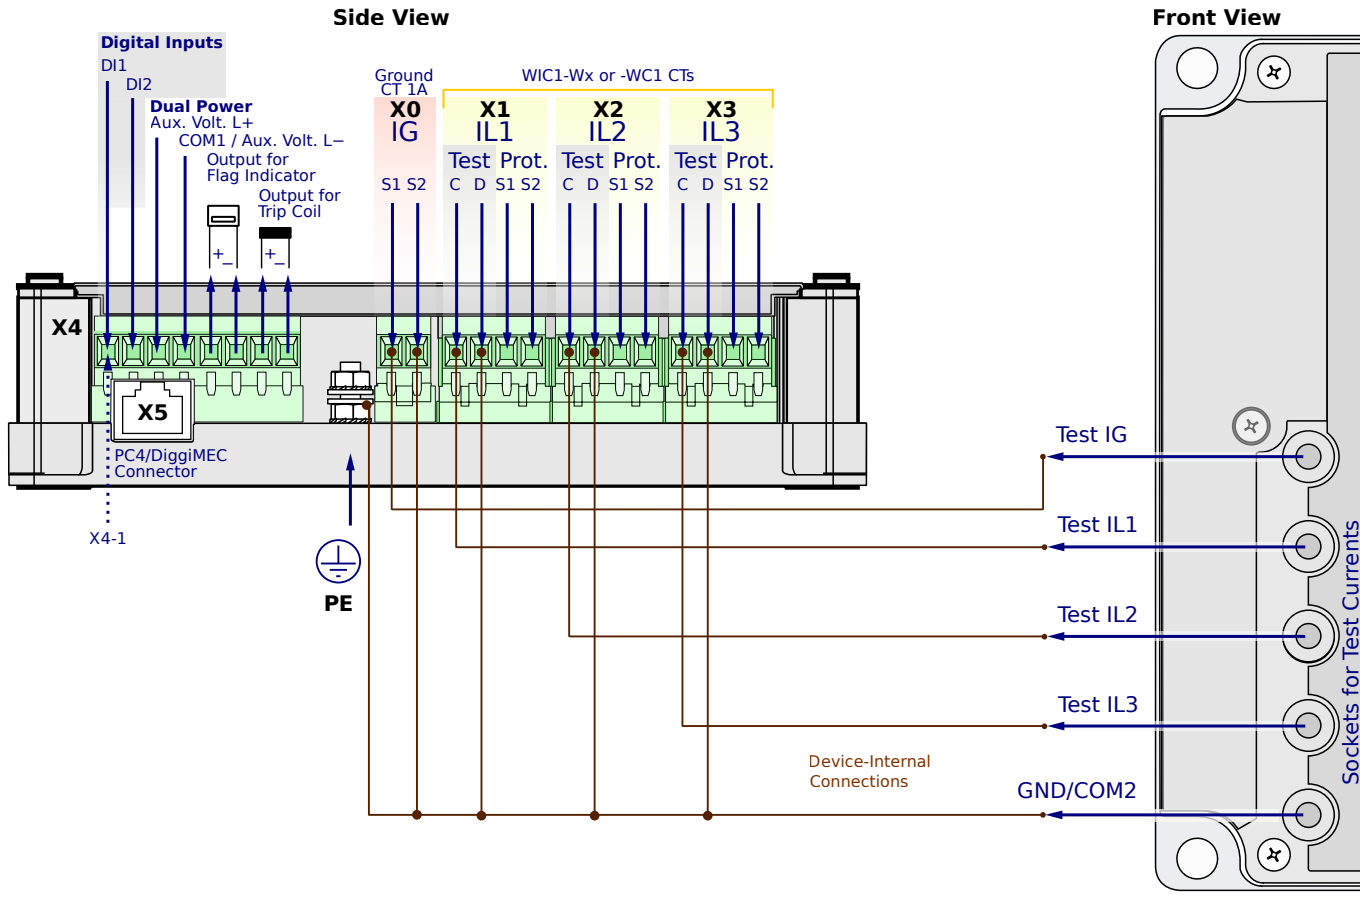


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1SB0

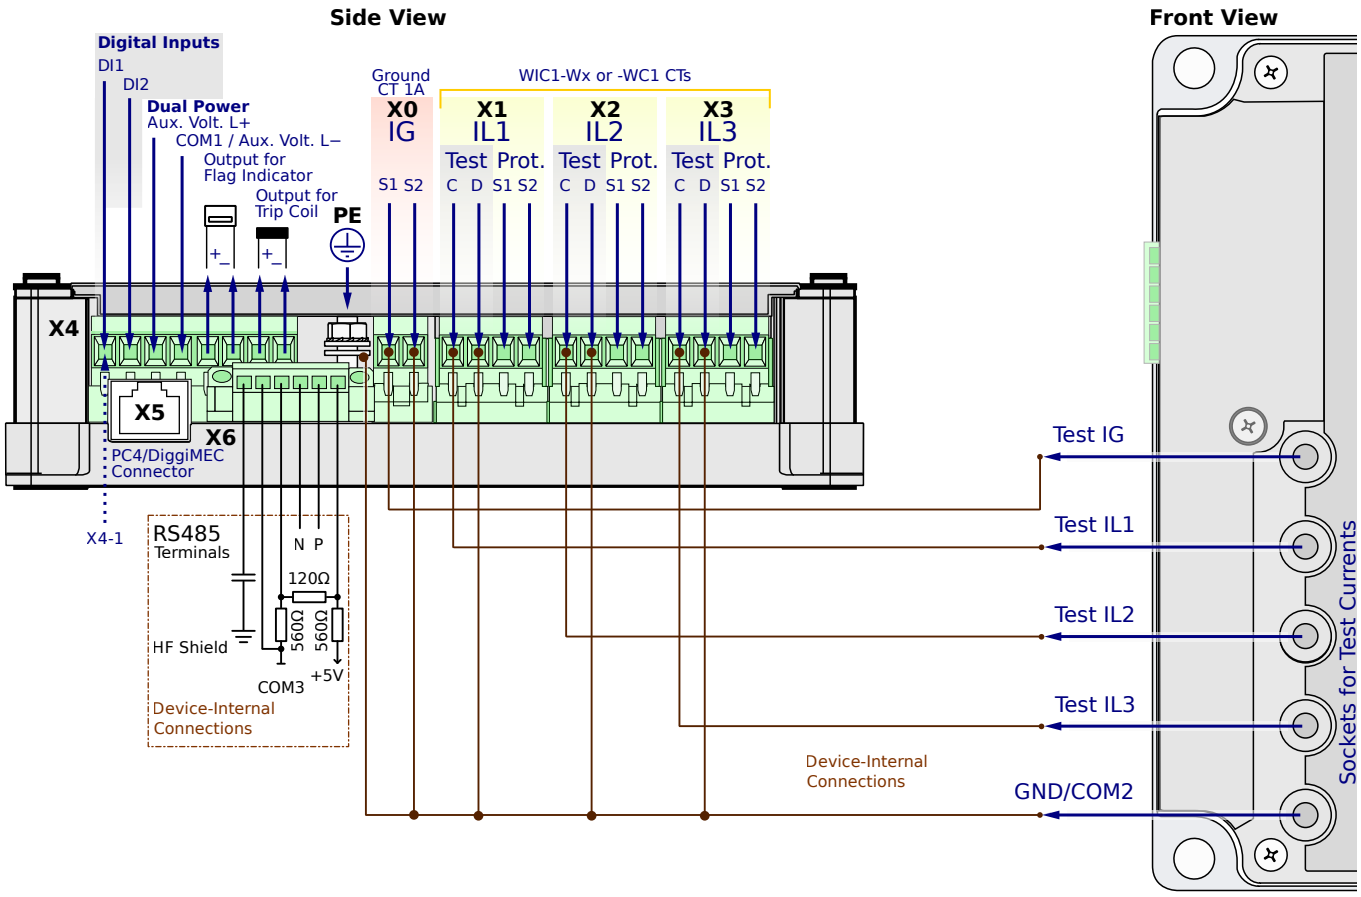


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1SBH

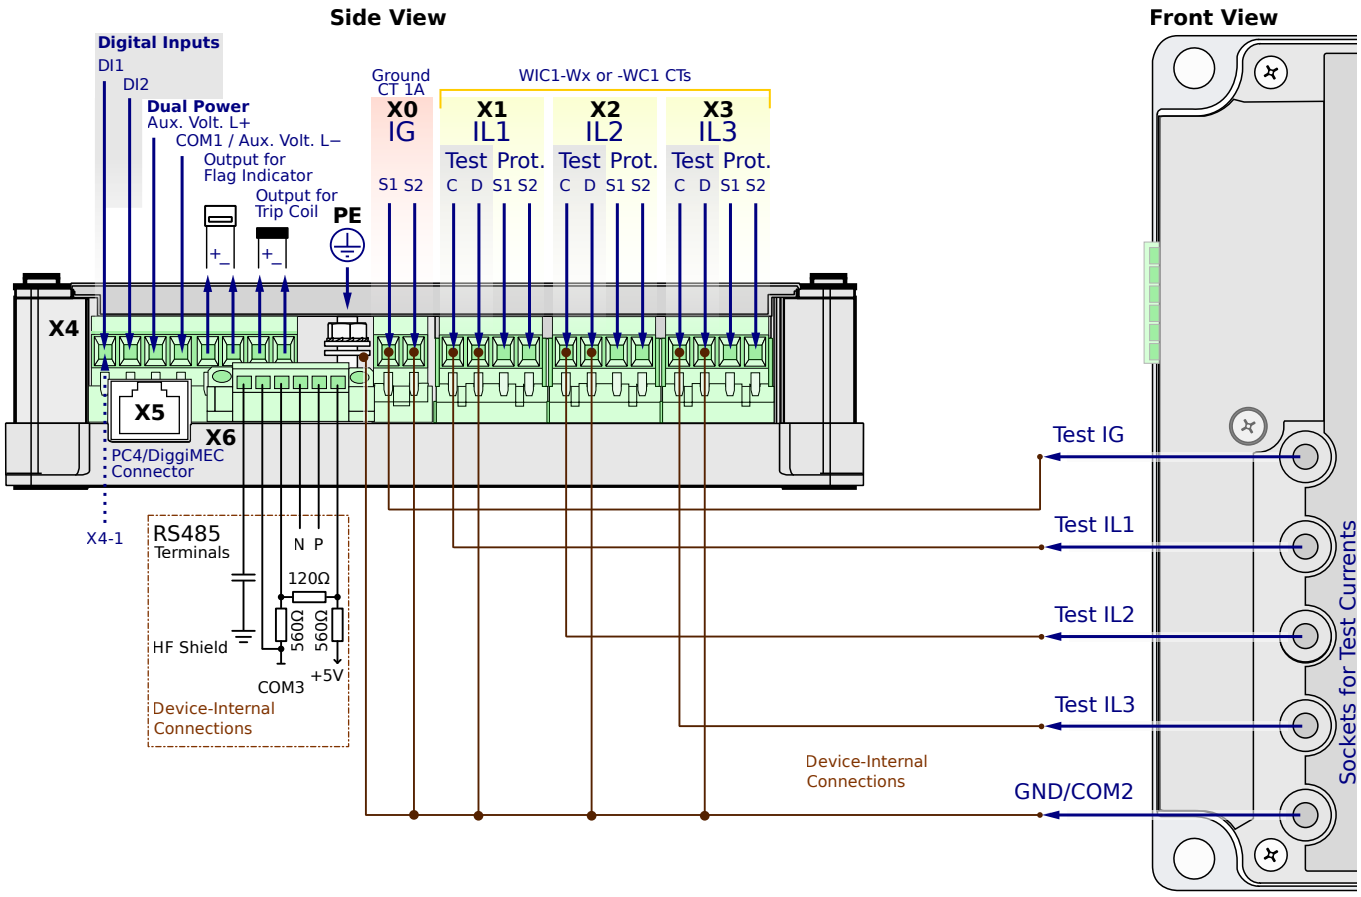


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1SC0

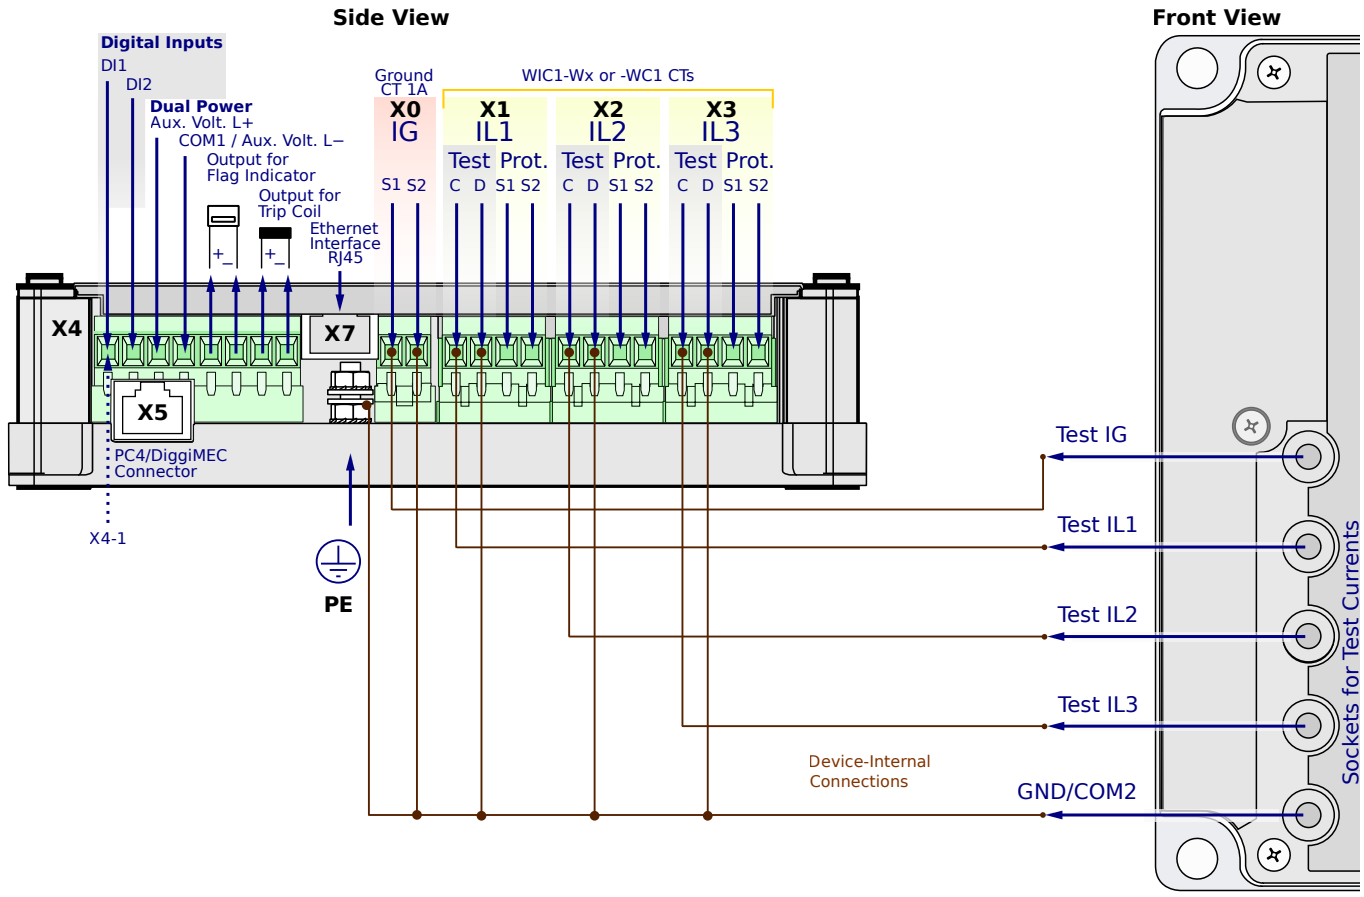


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1SCH

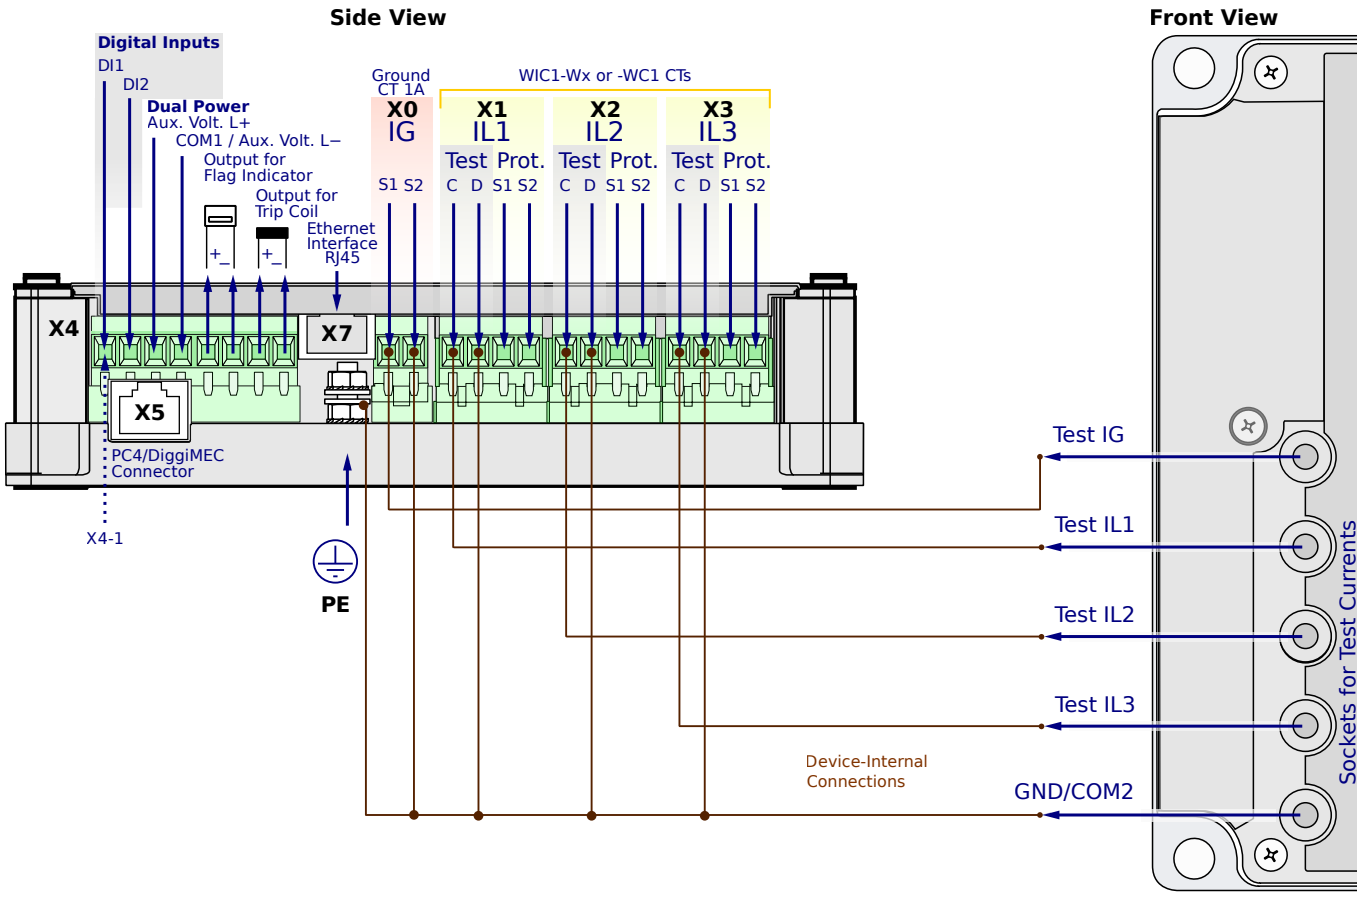


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1SL0

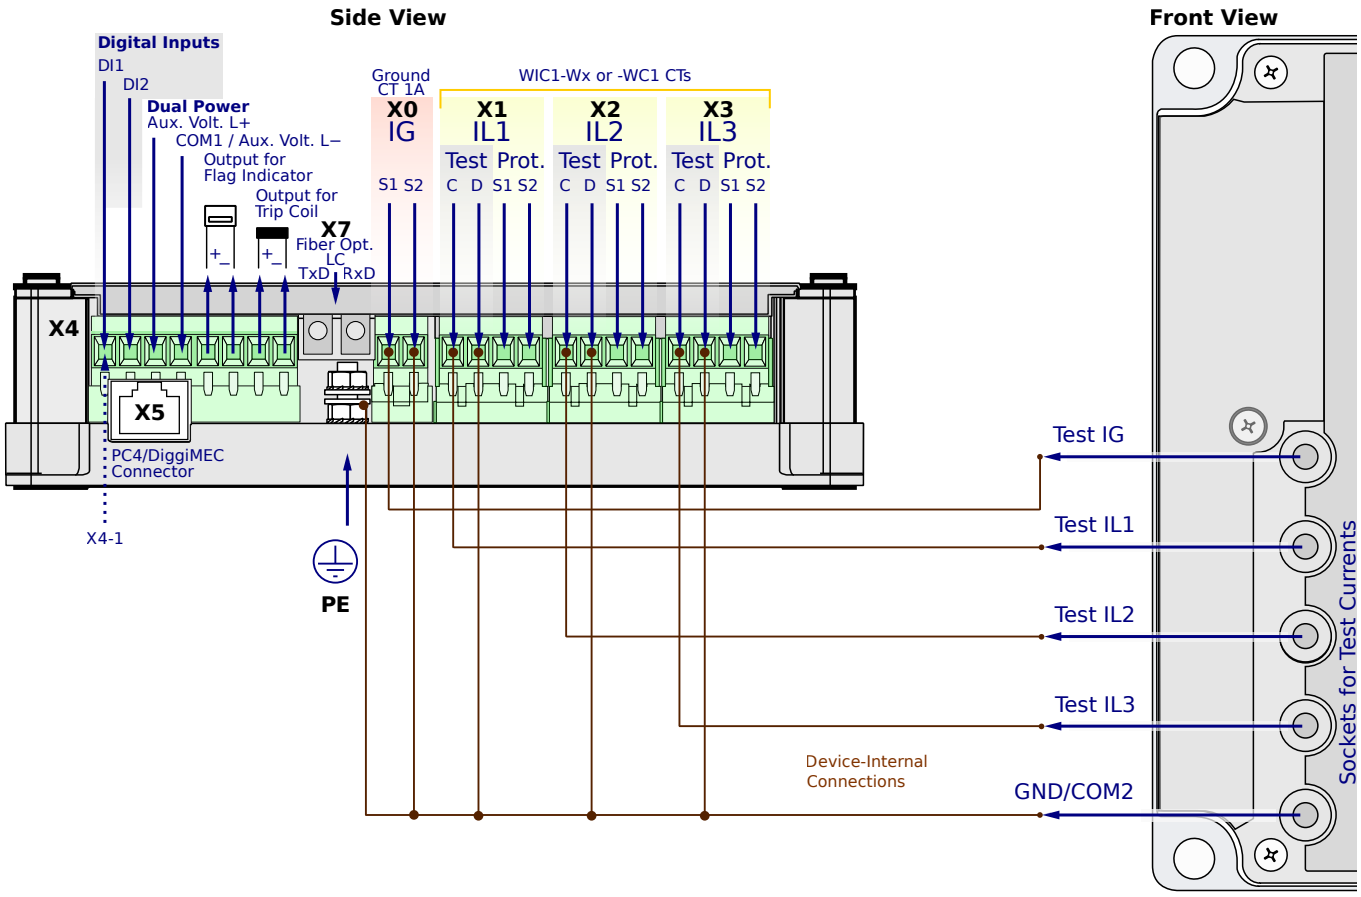


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1SLH

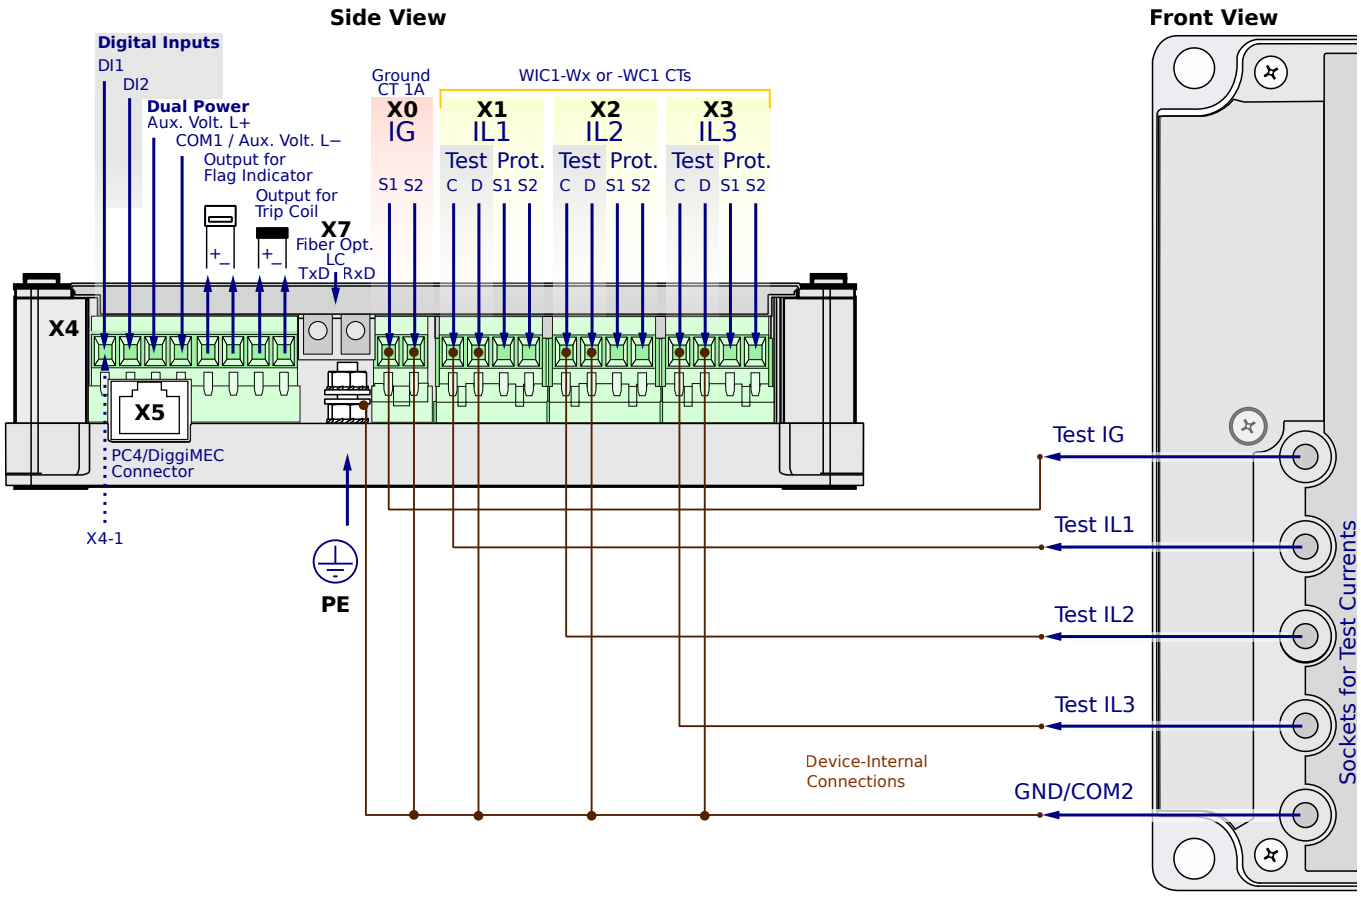


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1AA0

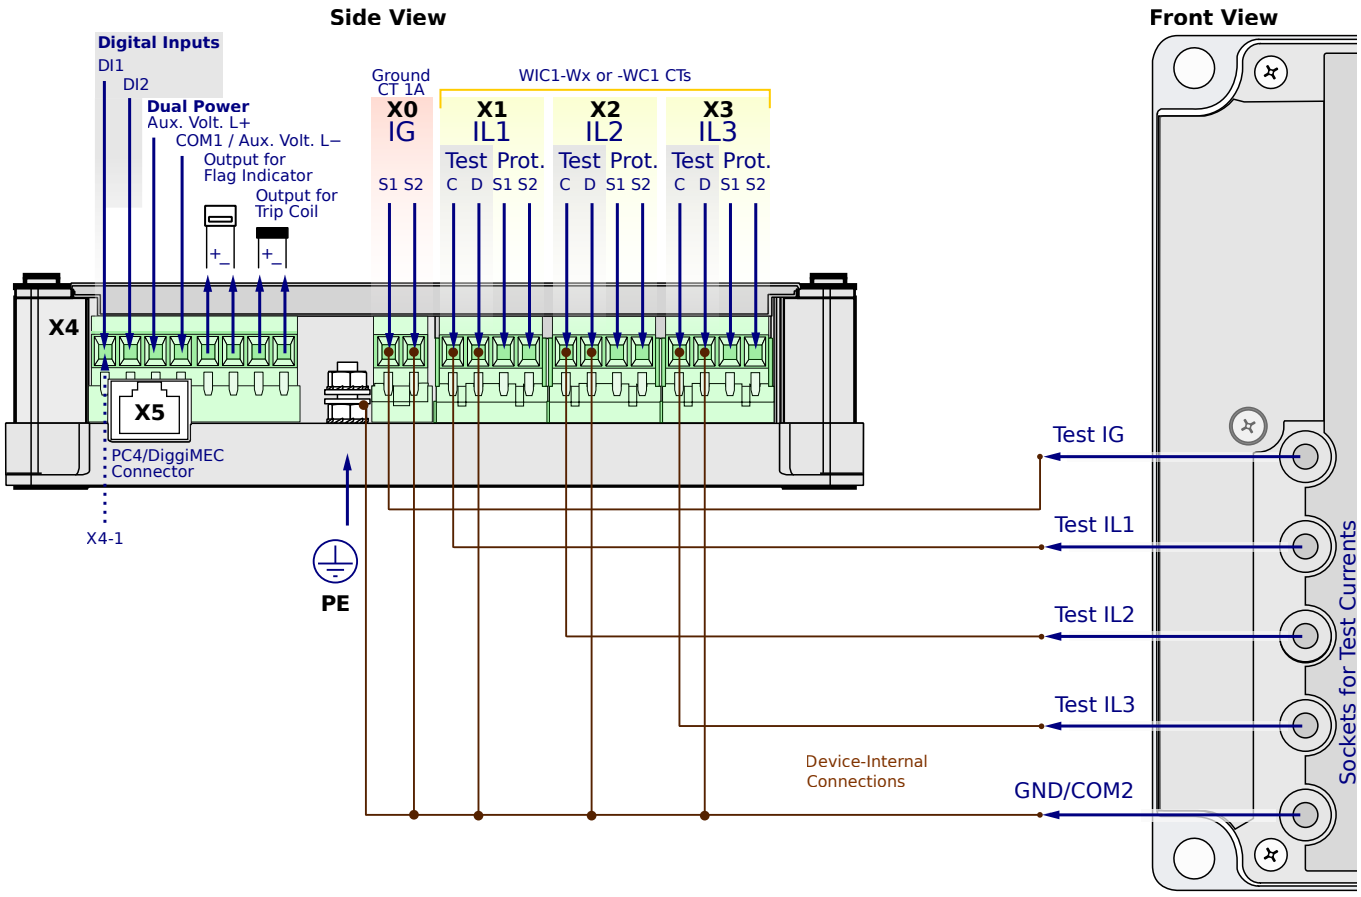


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1AAH

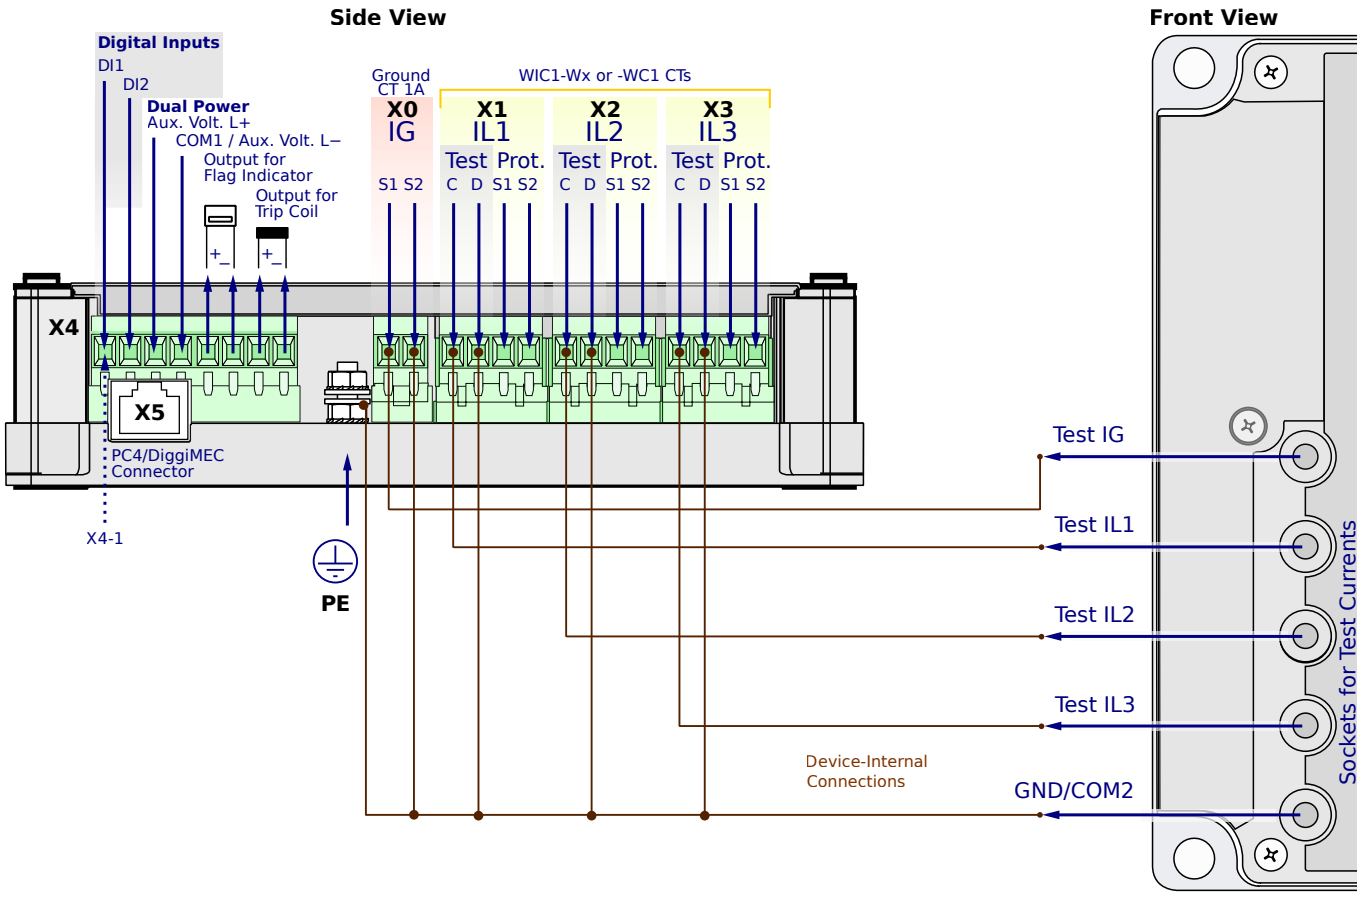


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1AB0

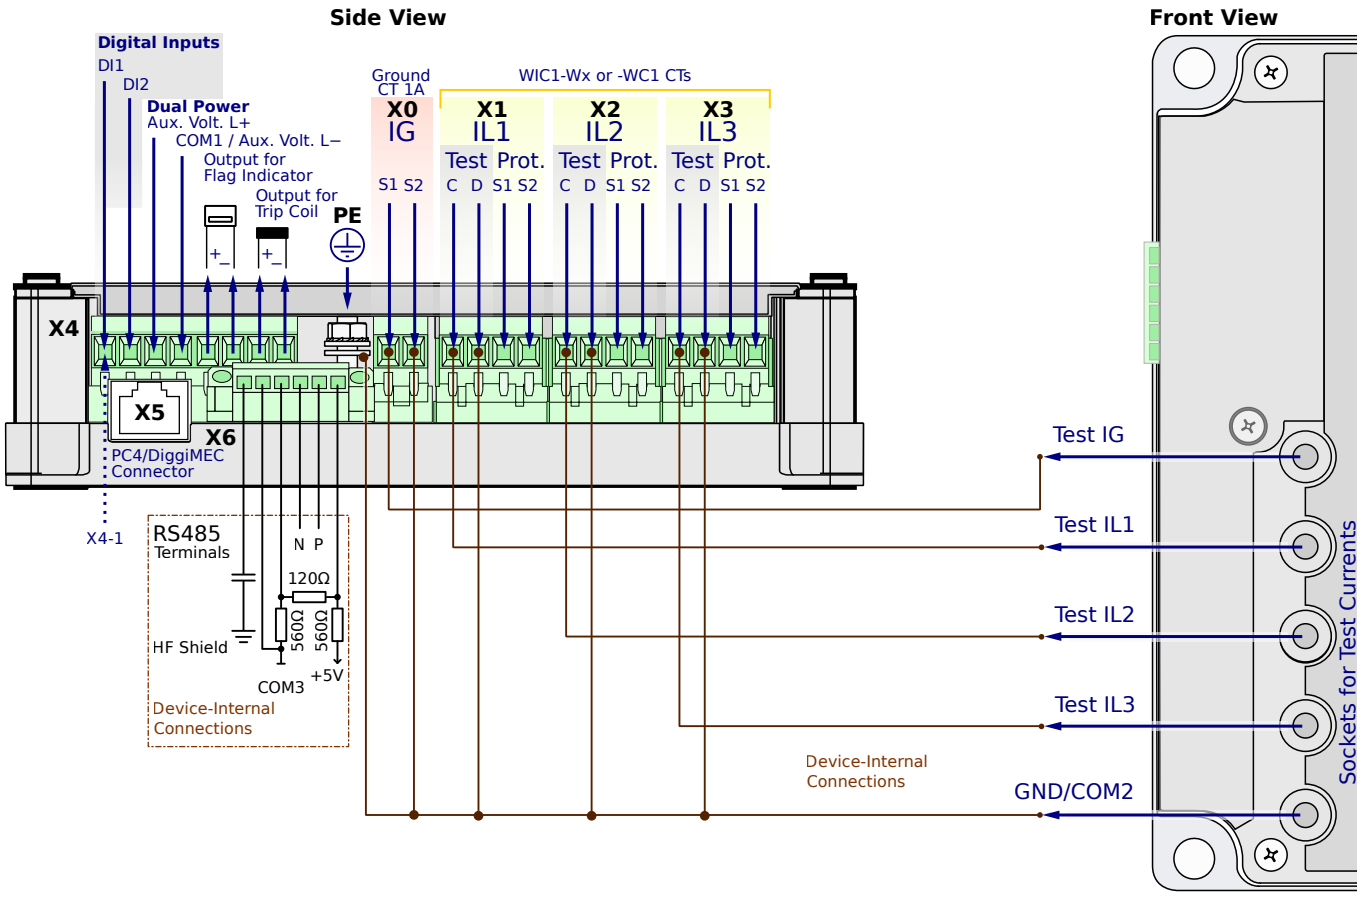


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1ABH

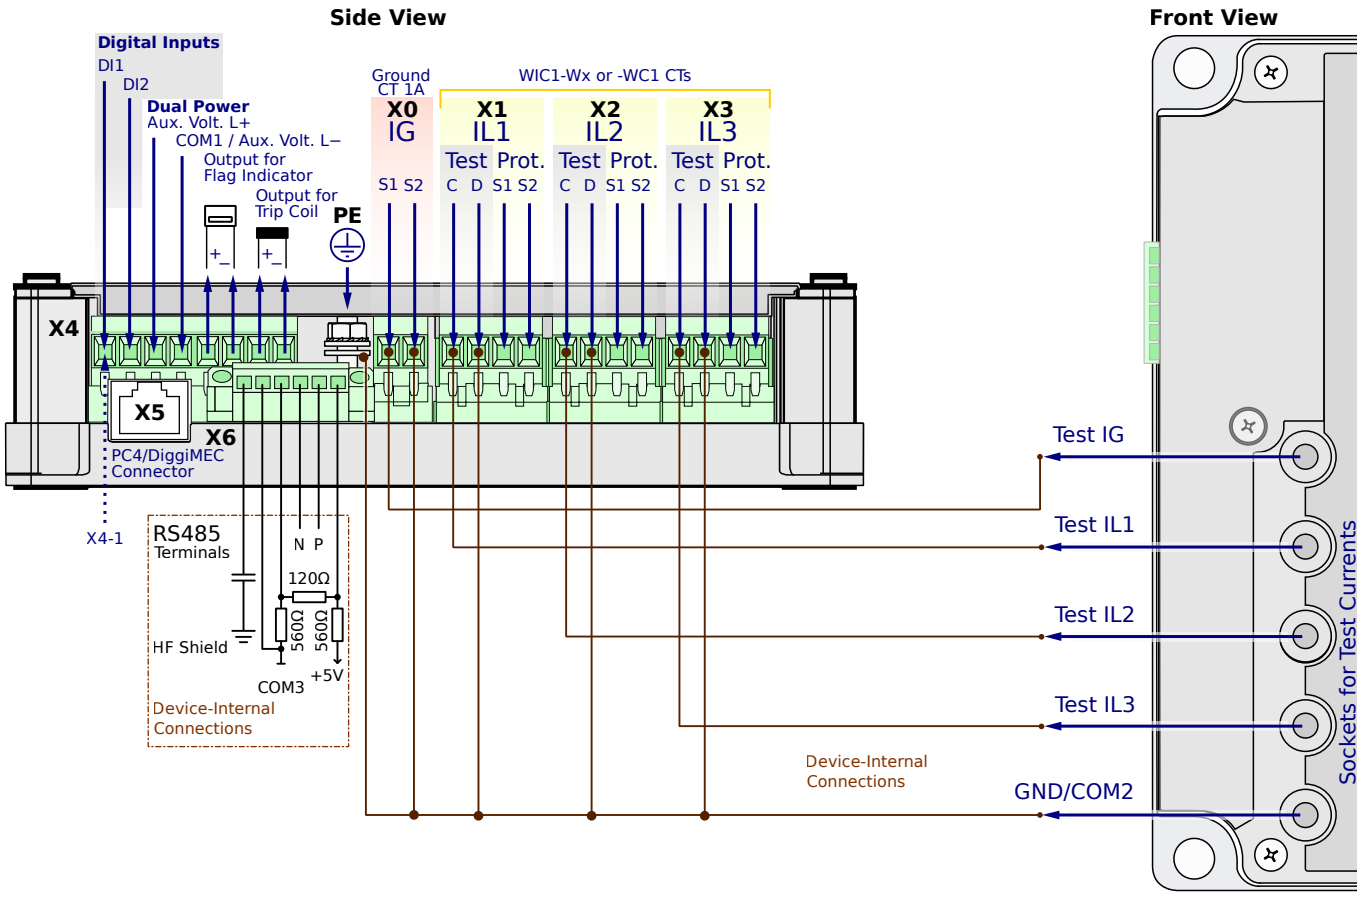


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1AC0

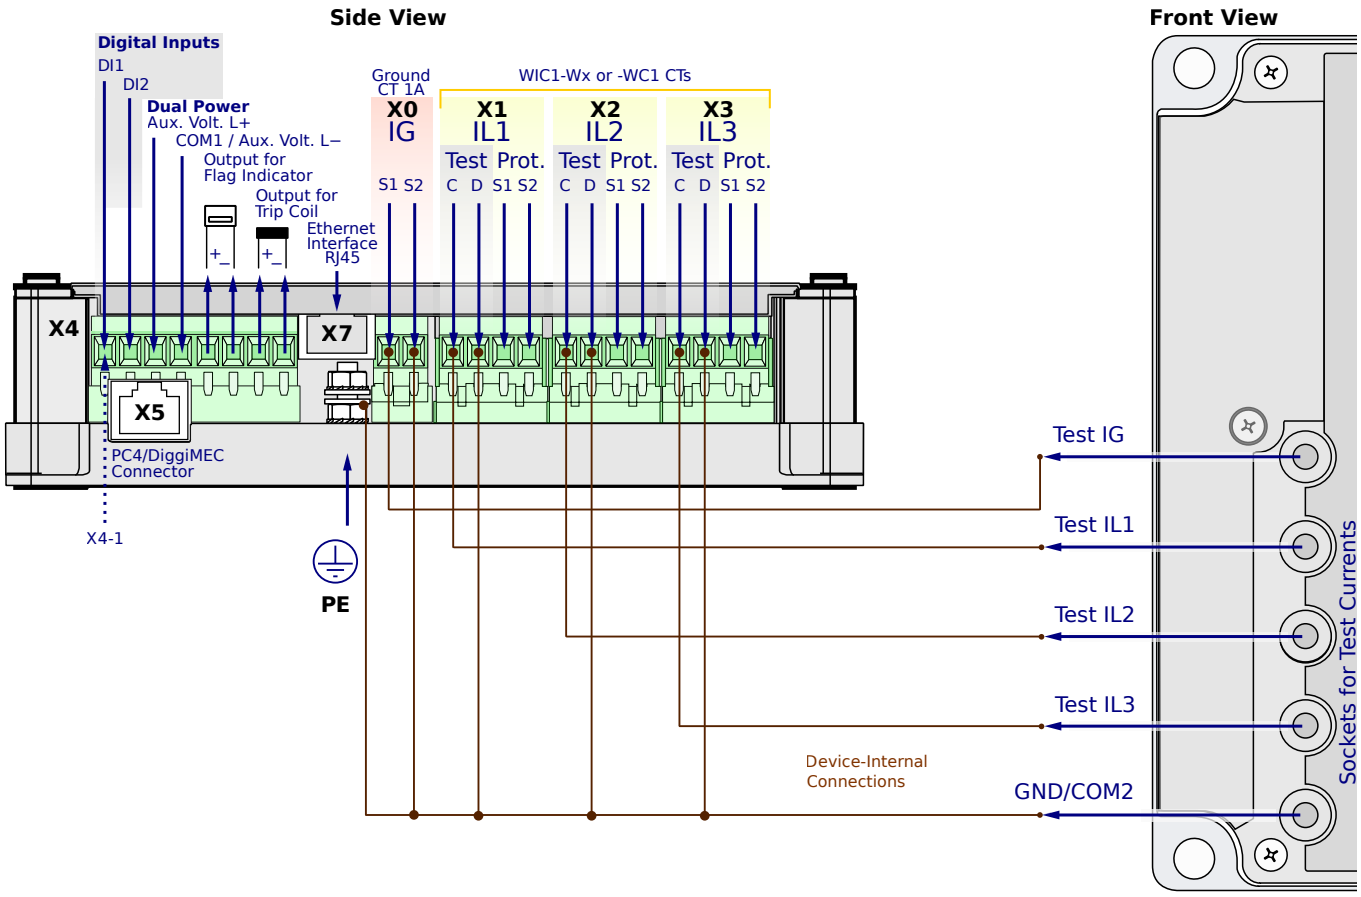


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1ACH

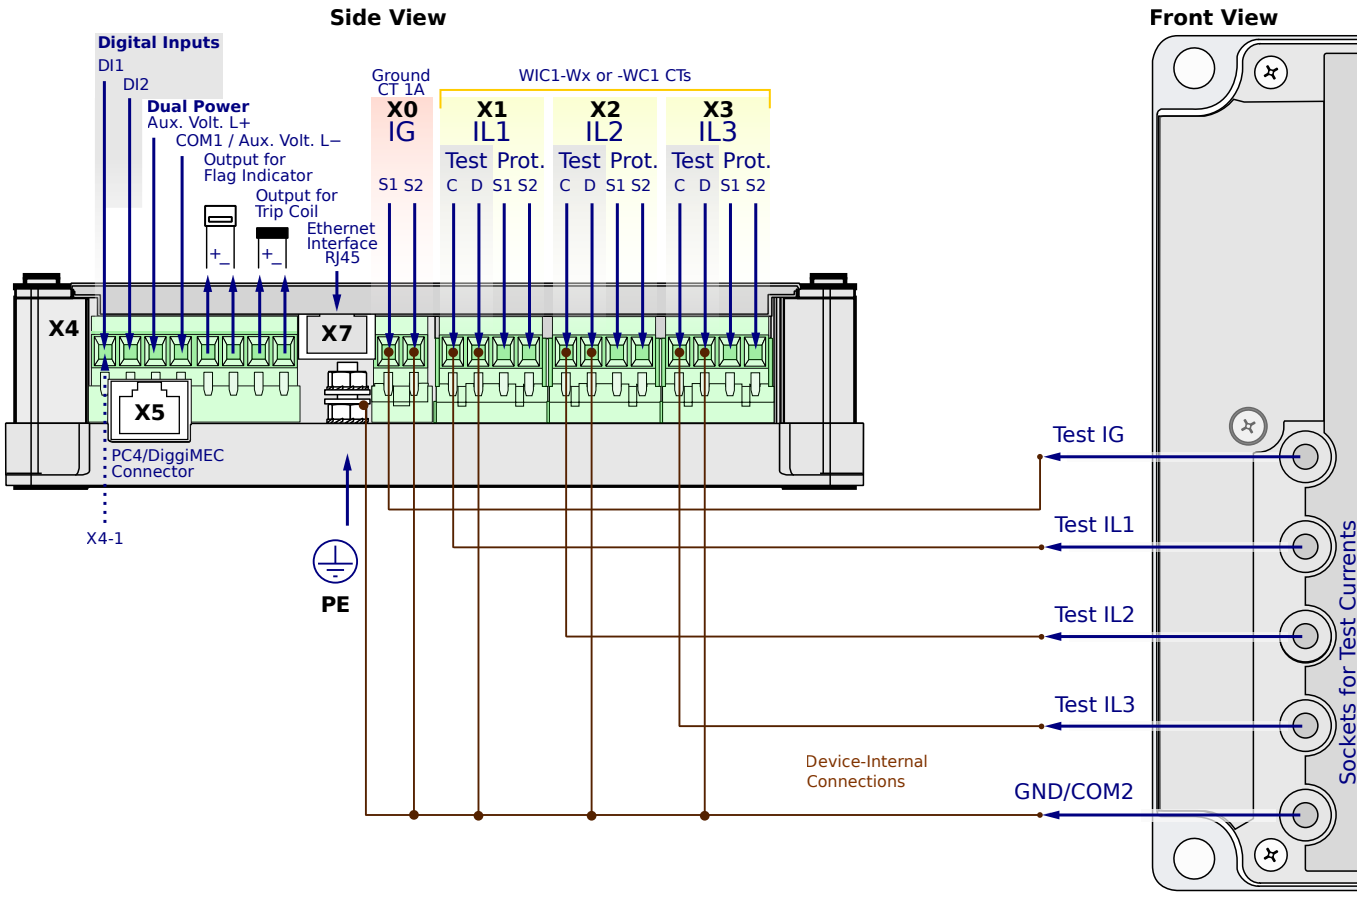


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1AL0

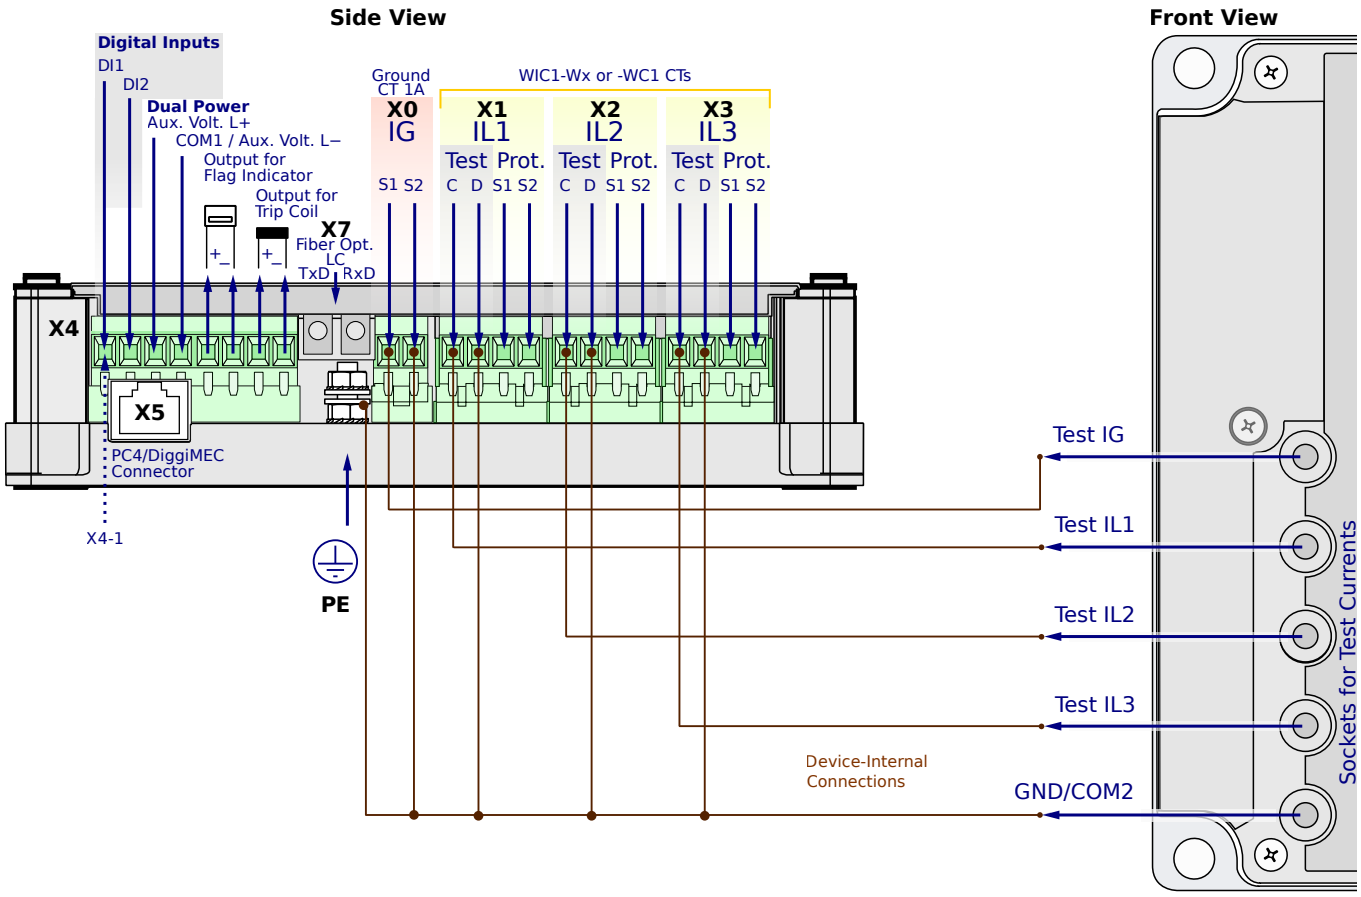


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1ALH

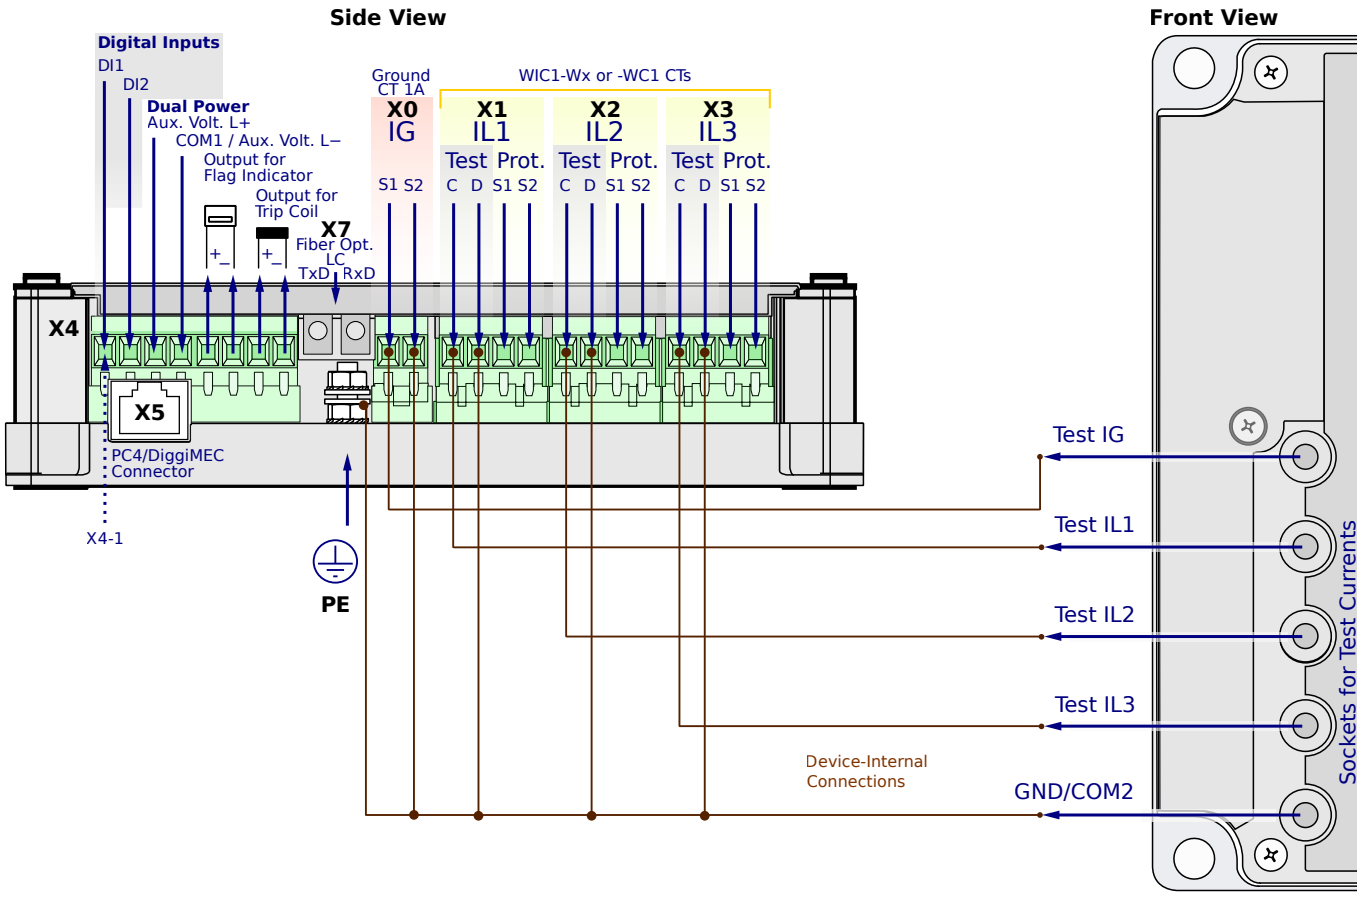


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1PA0

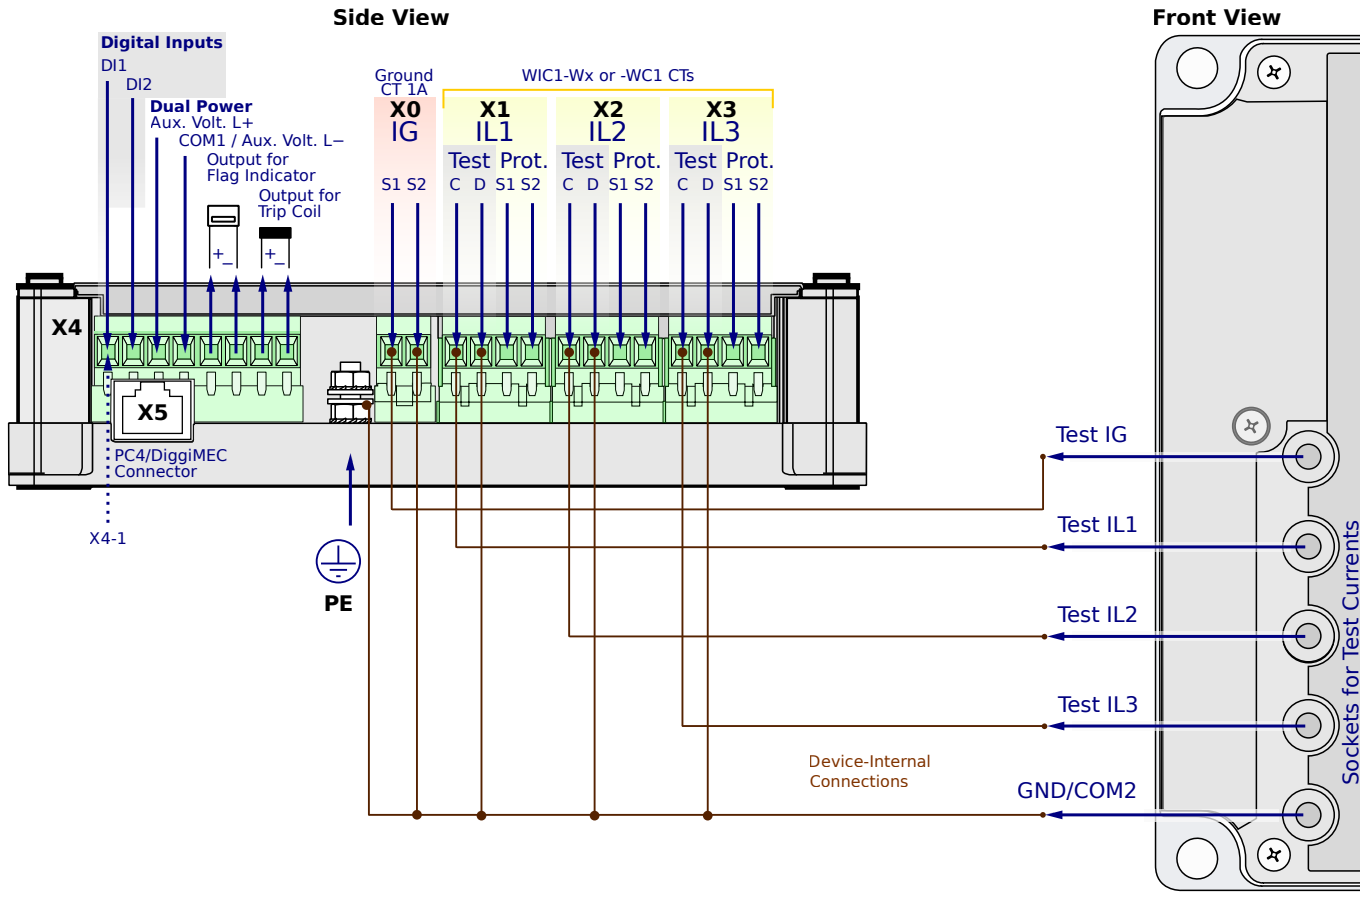


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1PAH

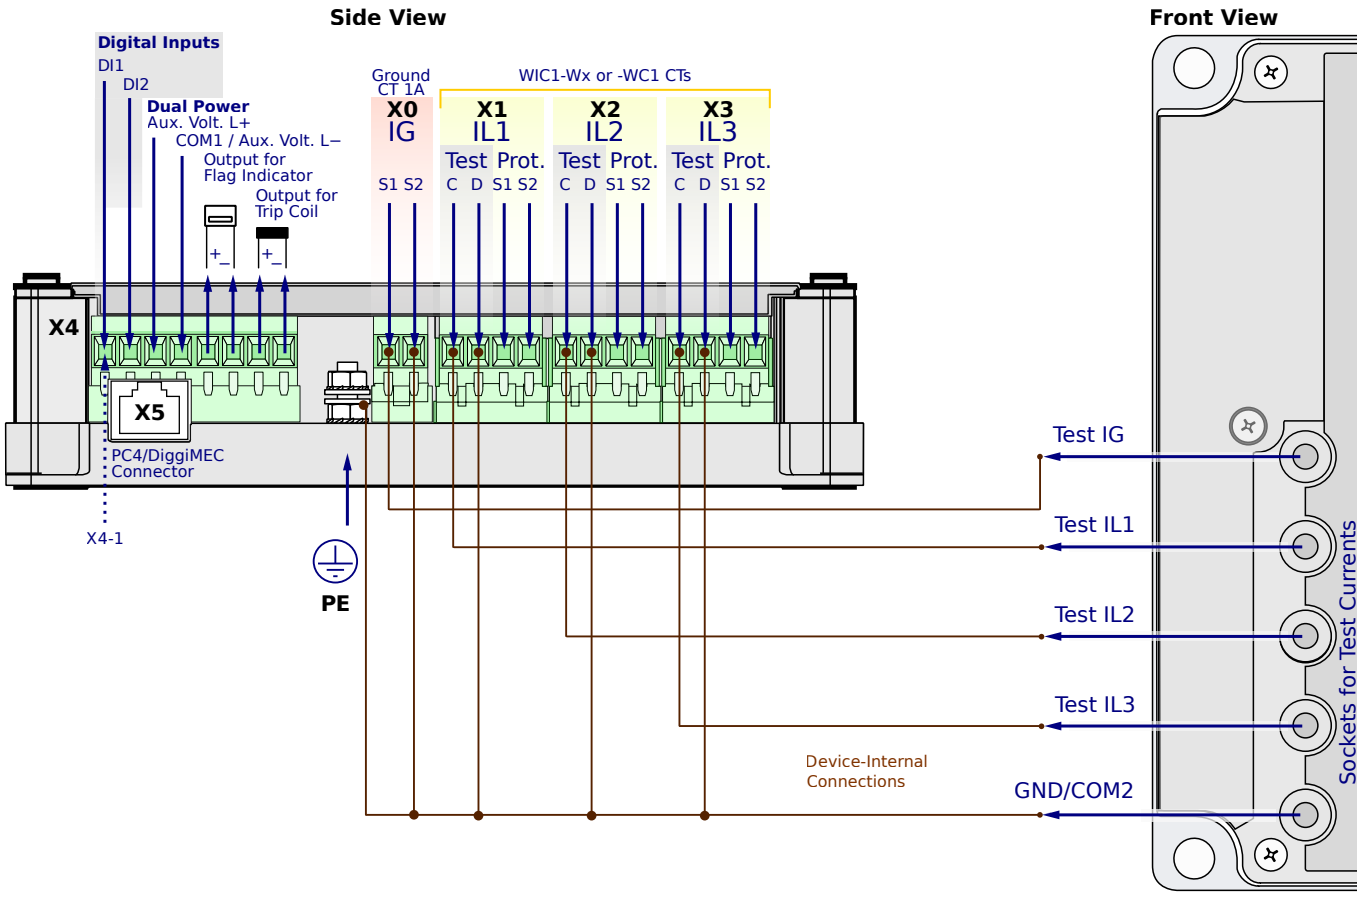


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND1PB0

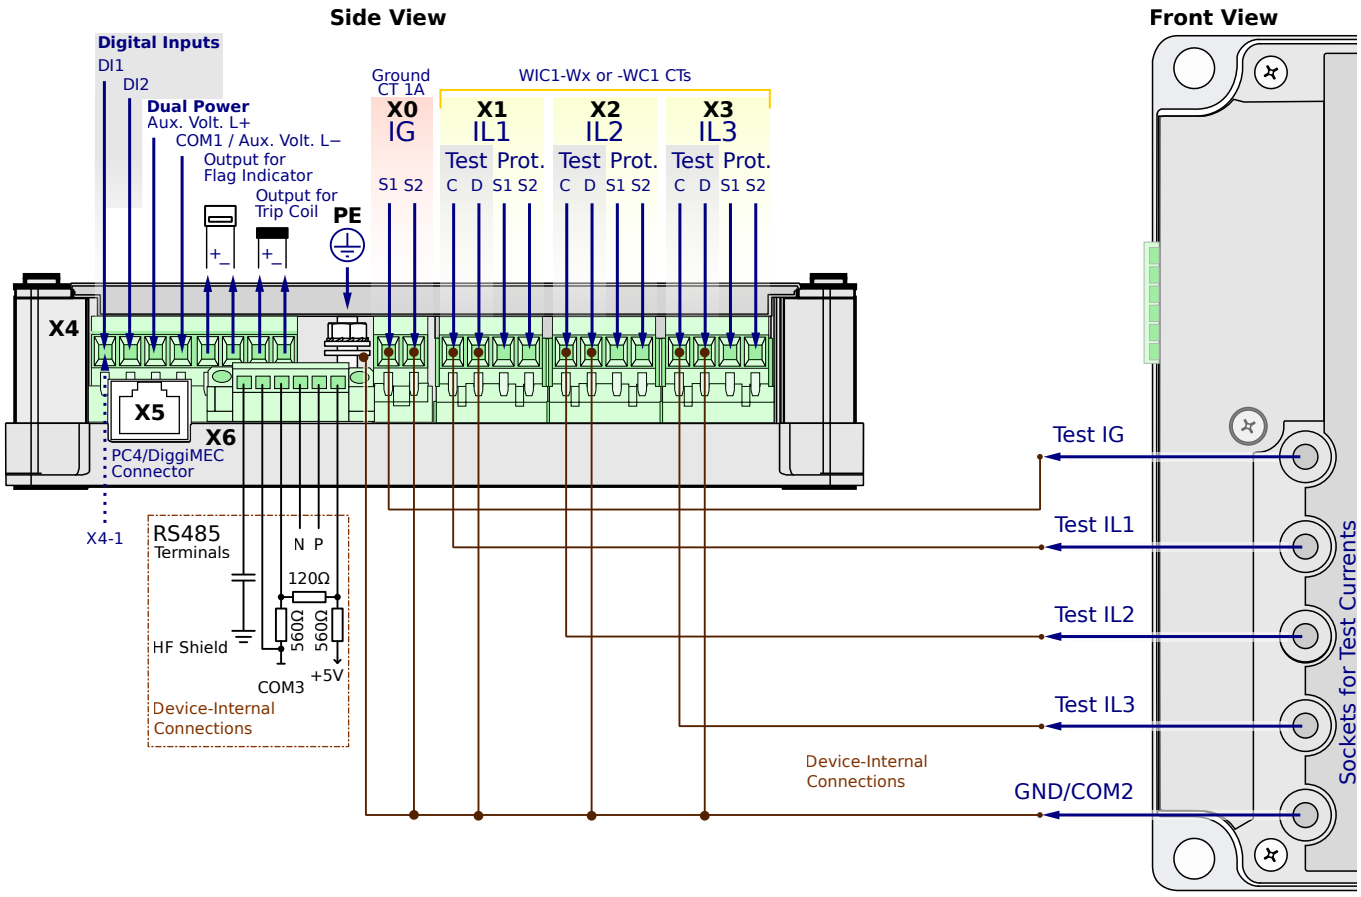


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1PBH

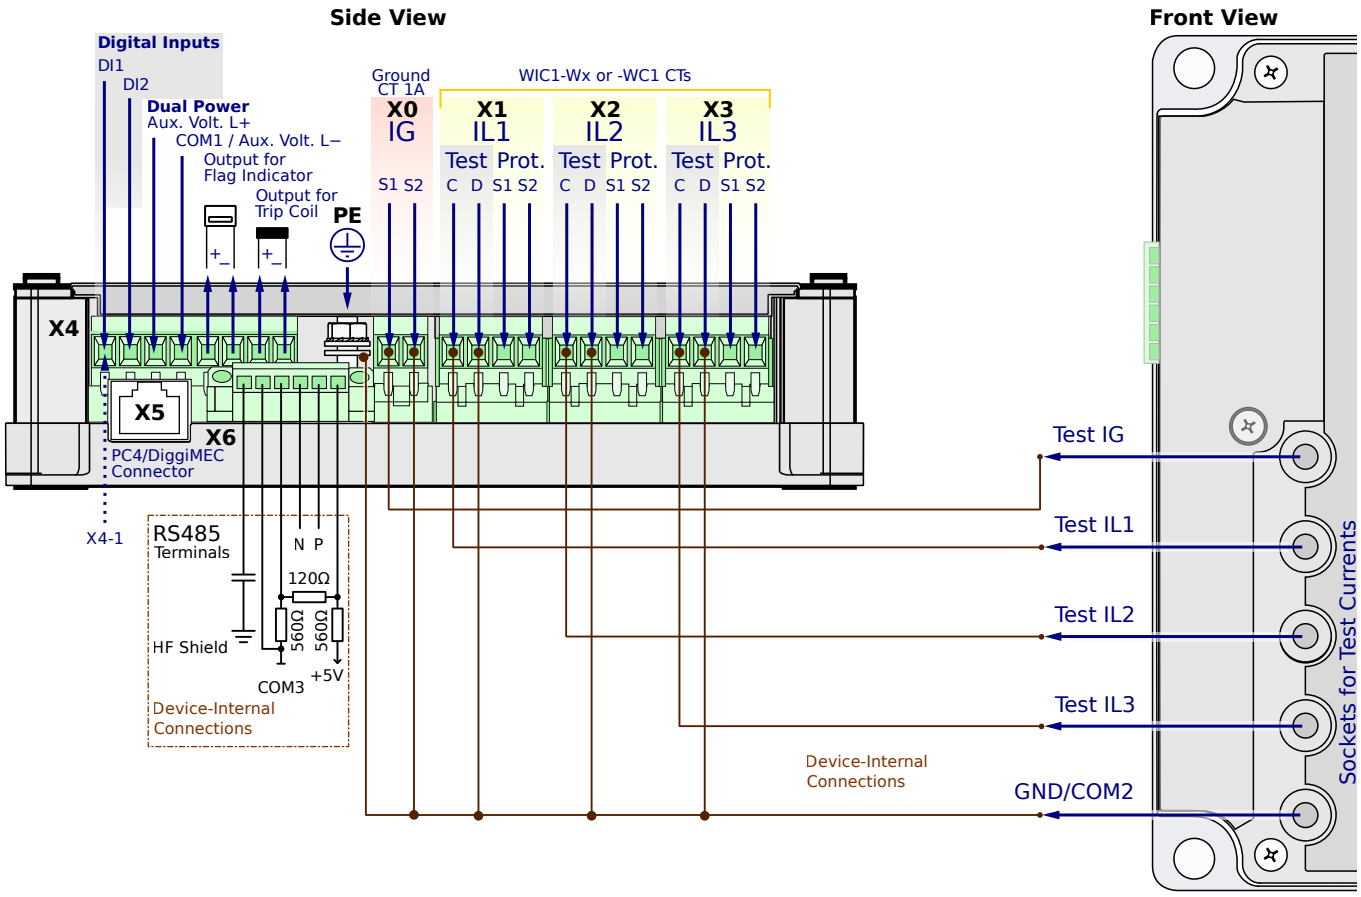


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND1PC0

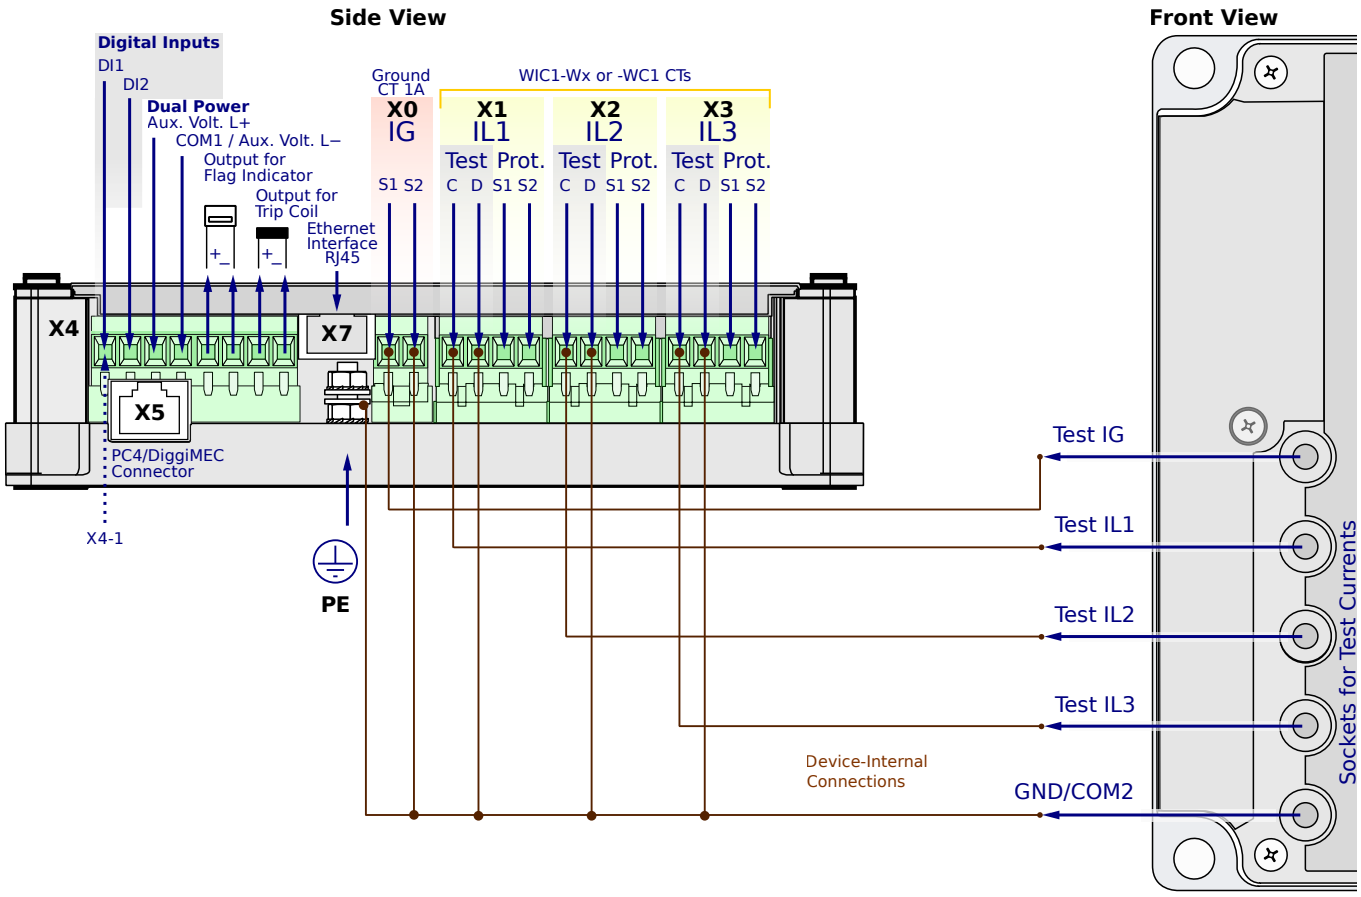


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1PCH

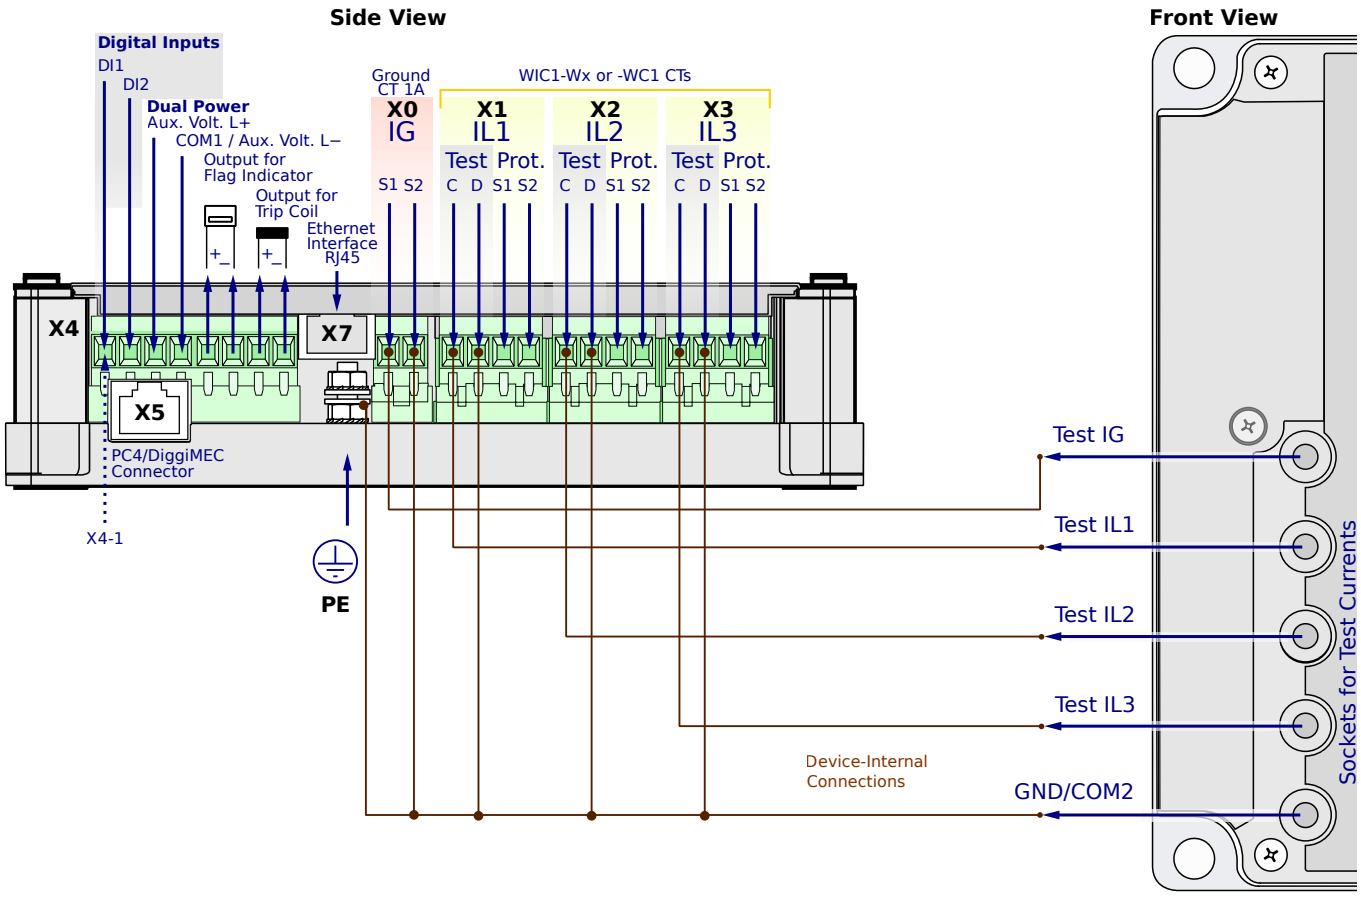


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND1PL0

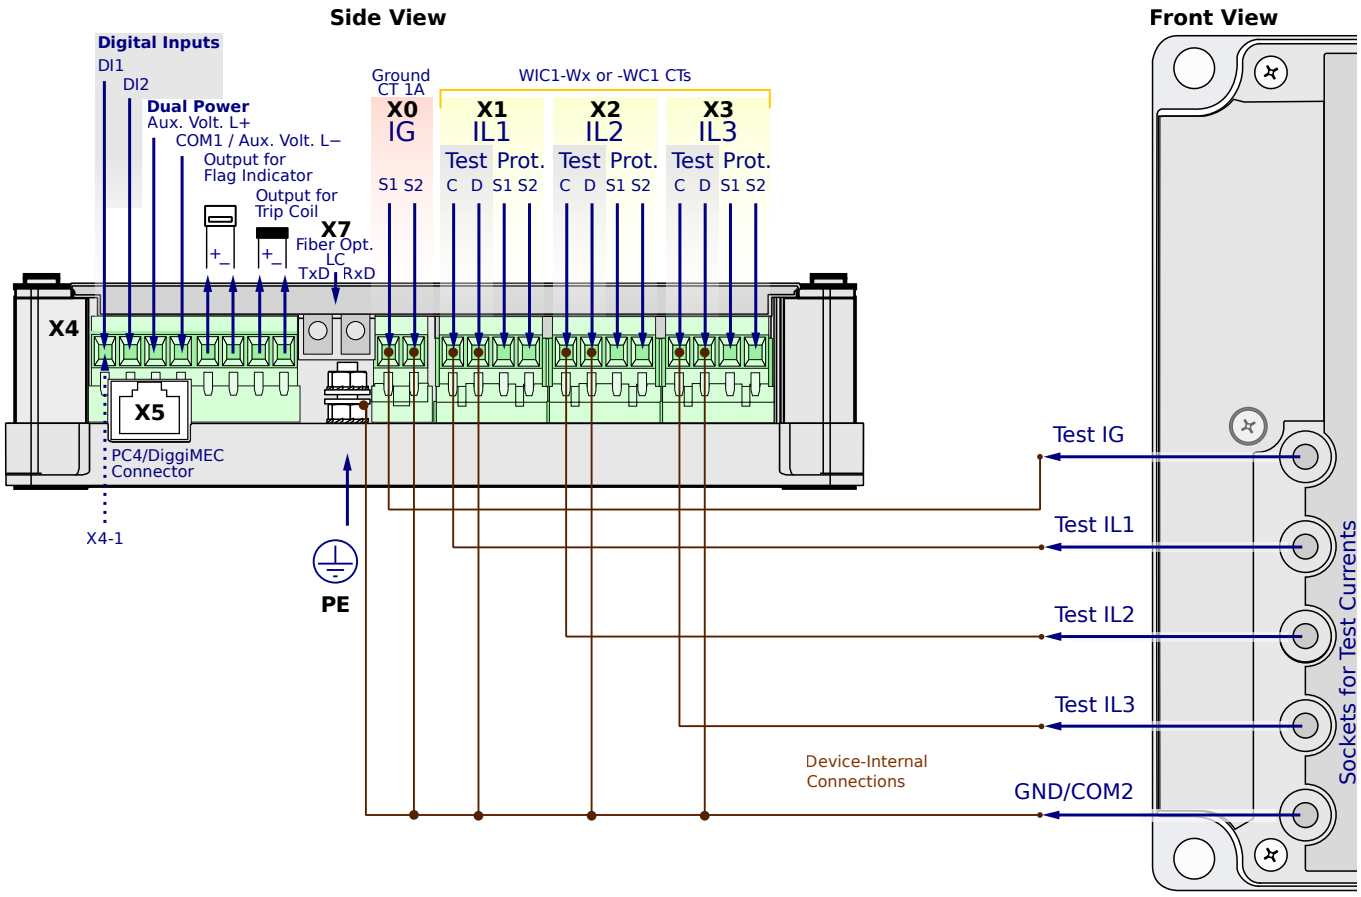


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND1PLH

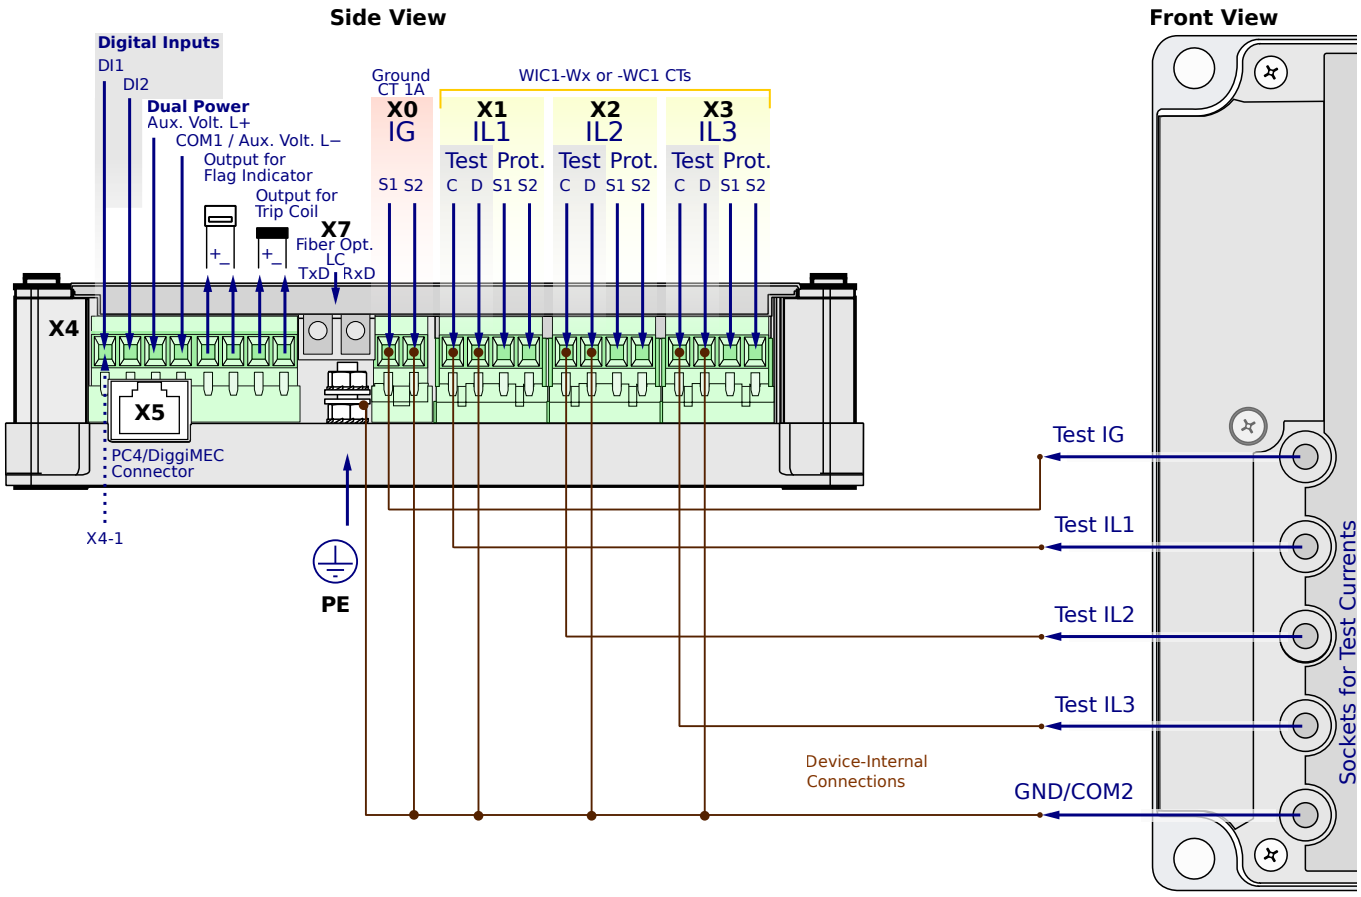


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2SA0

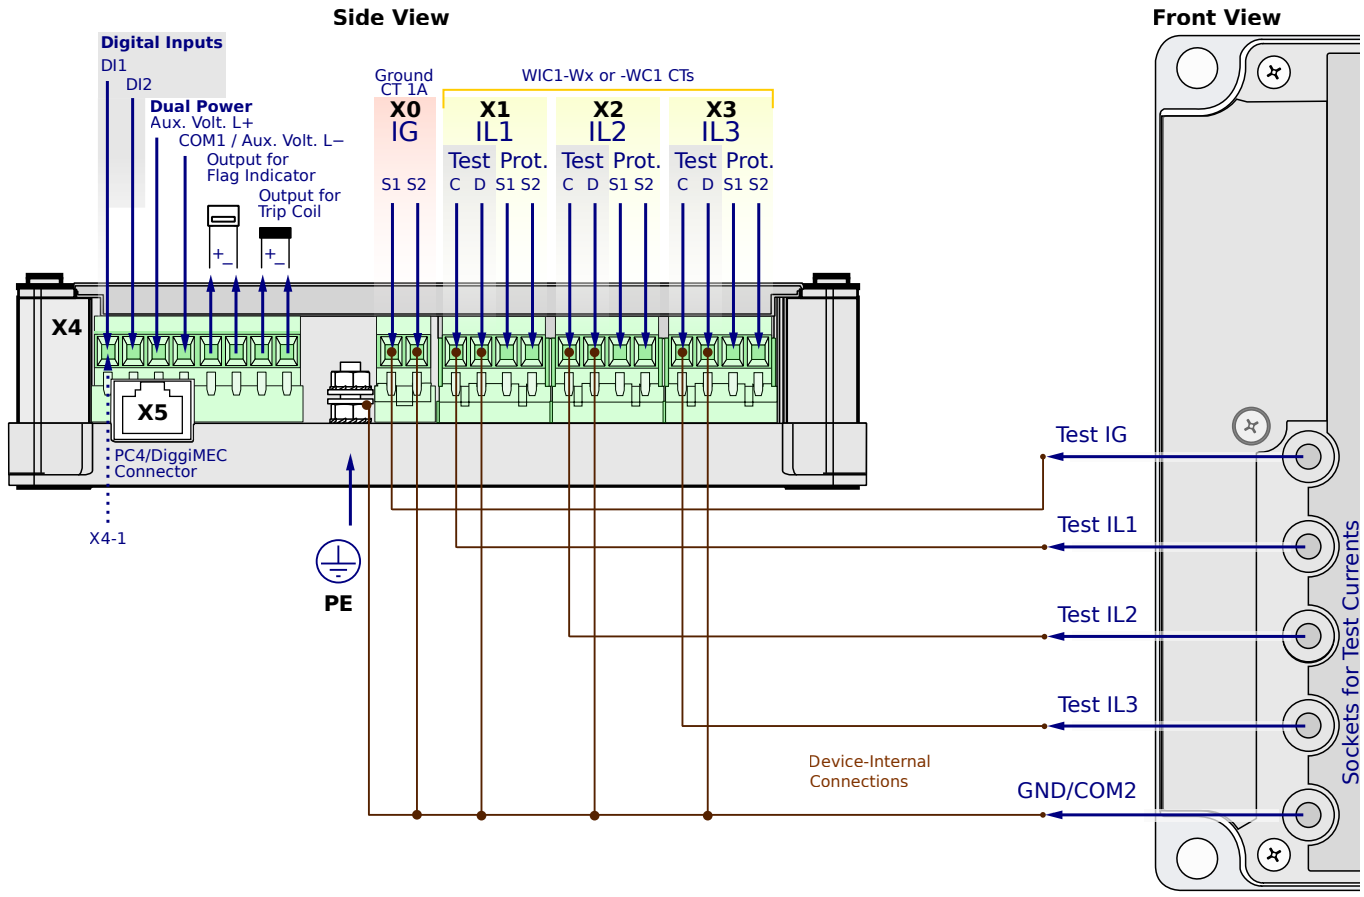


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2SAH

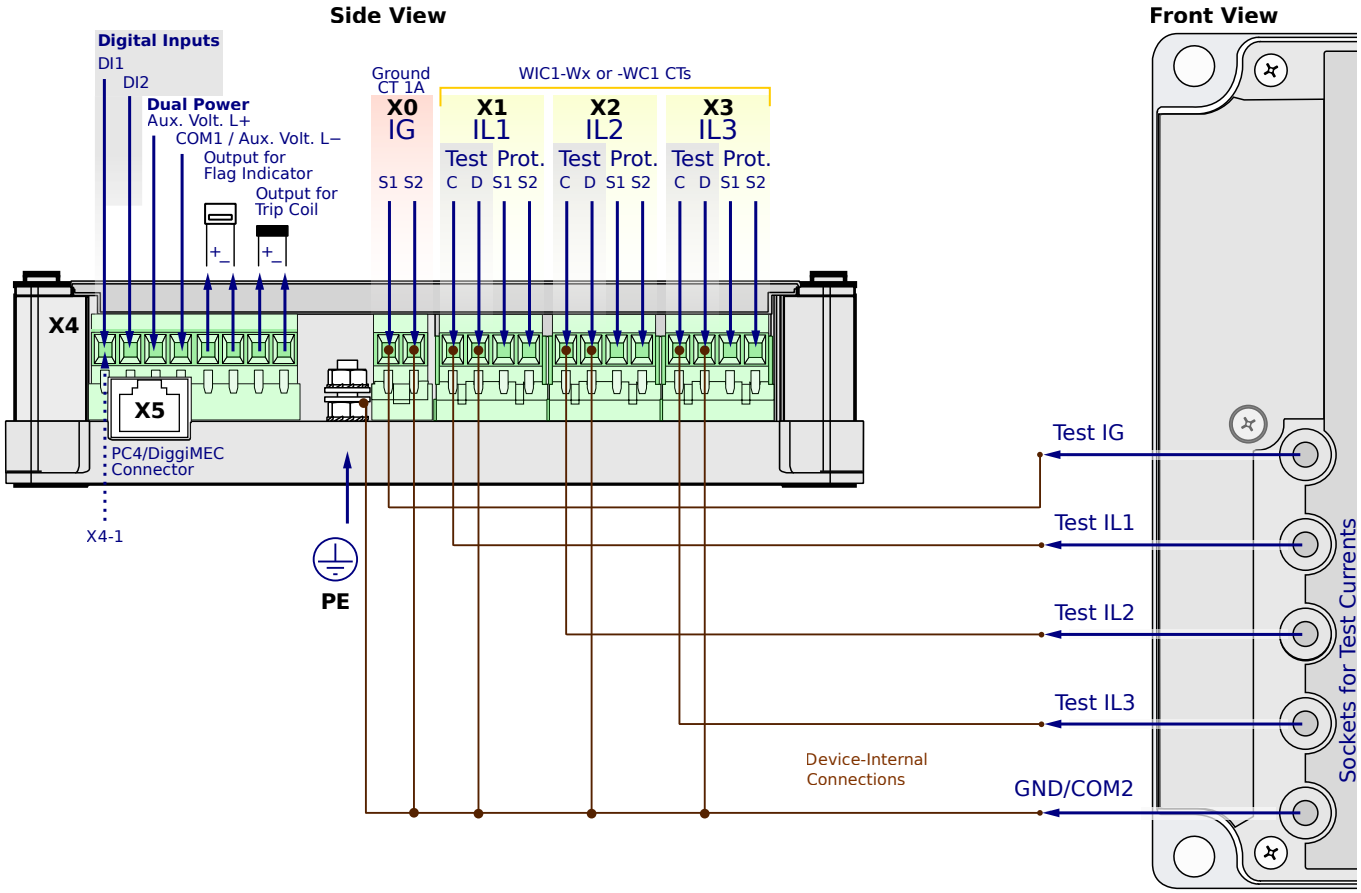


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2SB0

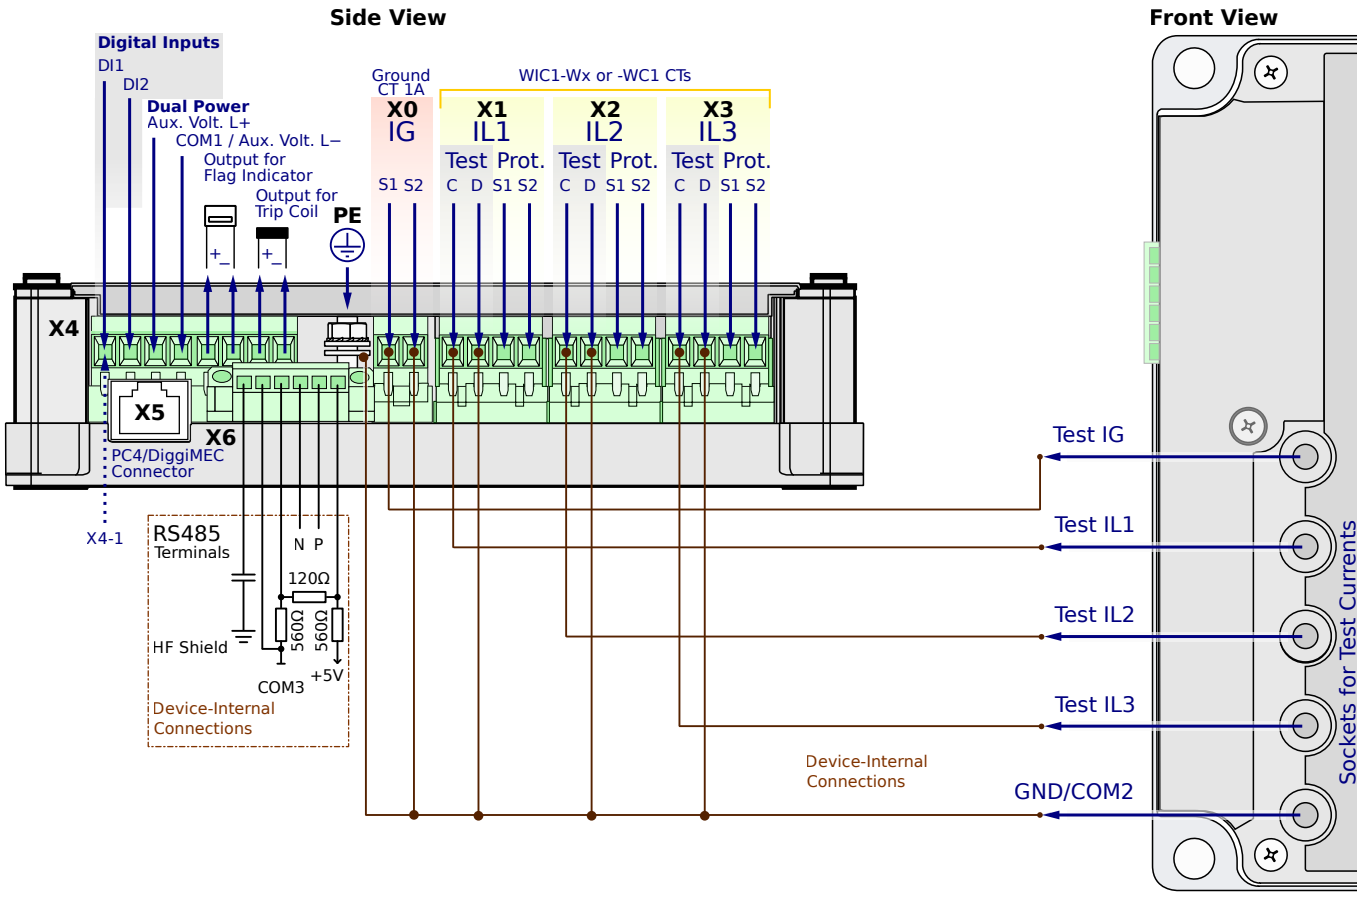


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2SBH

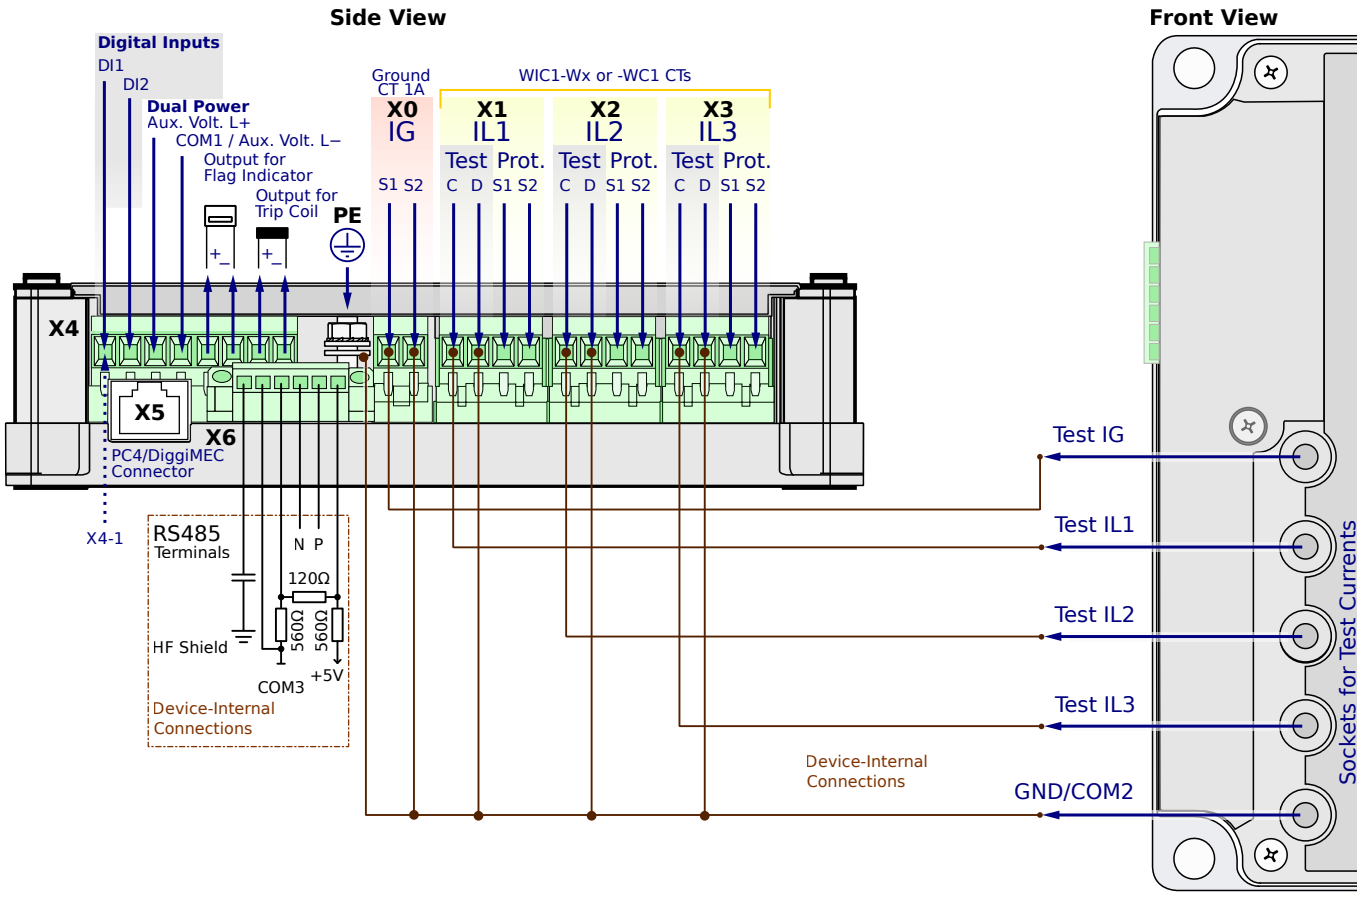


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2SC0

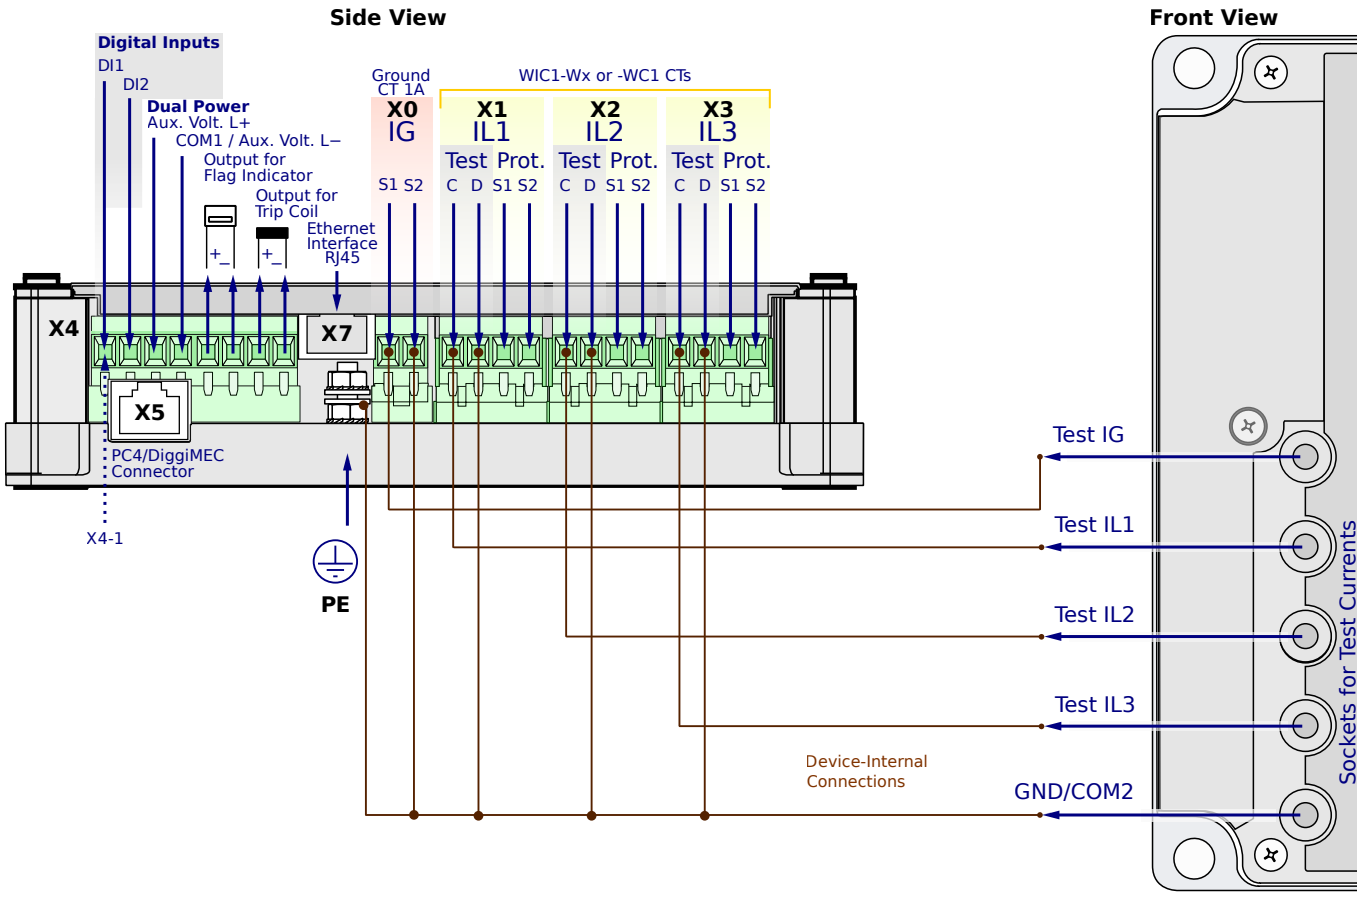


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2SCH

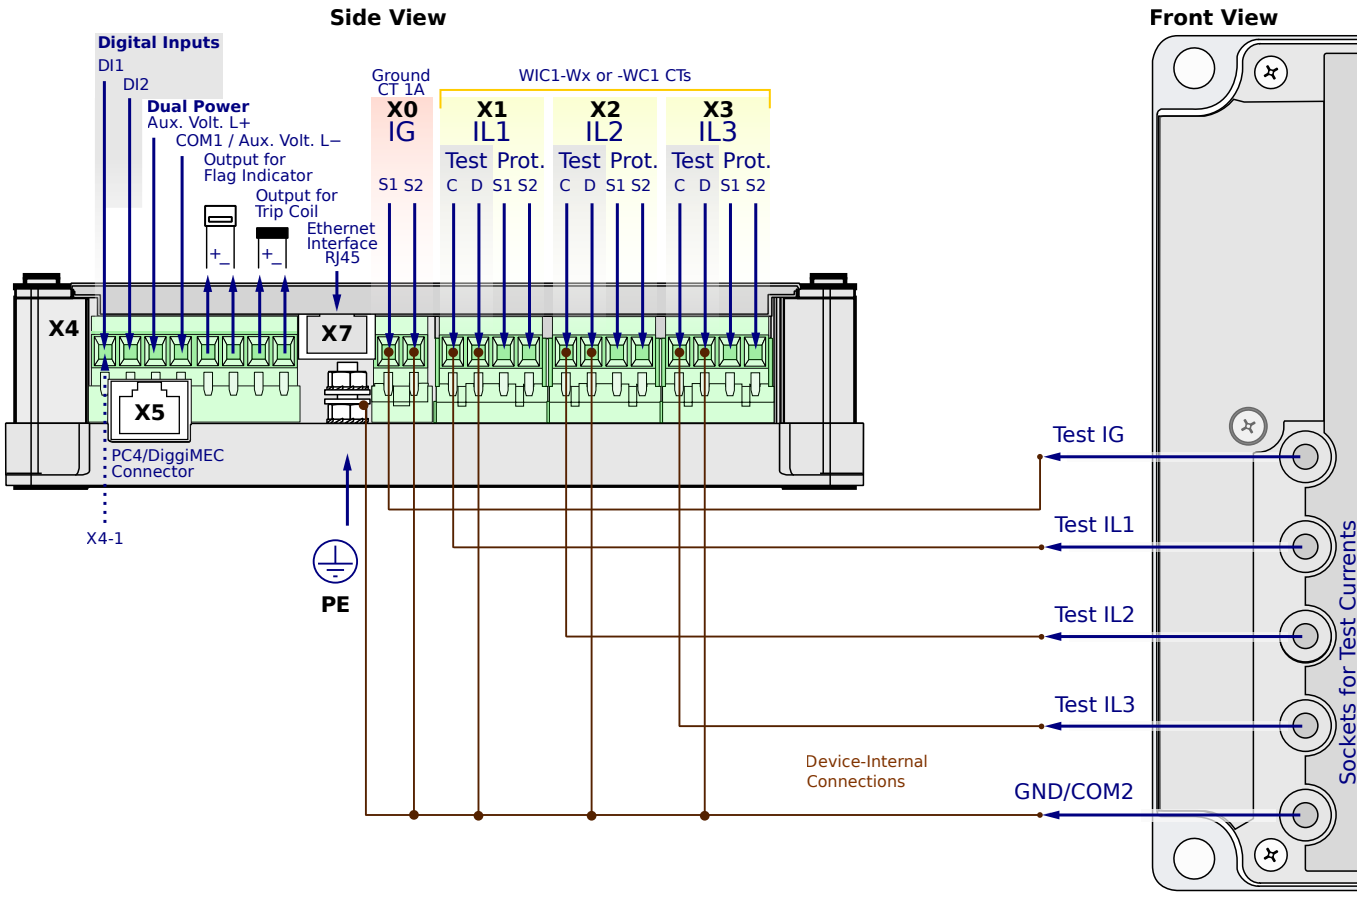


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2SL0

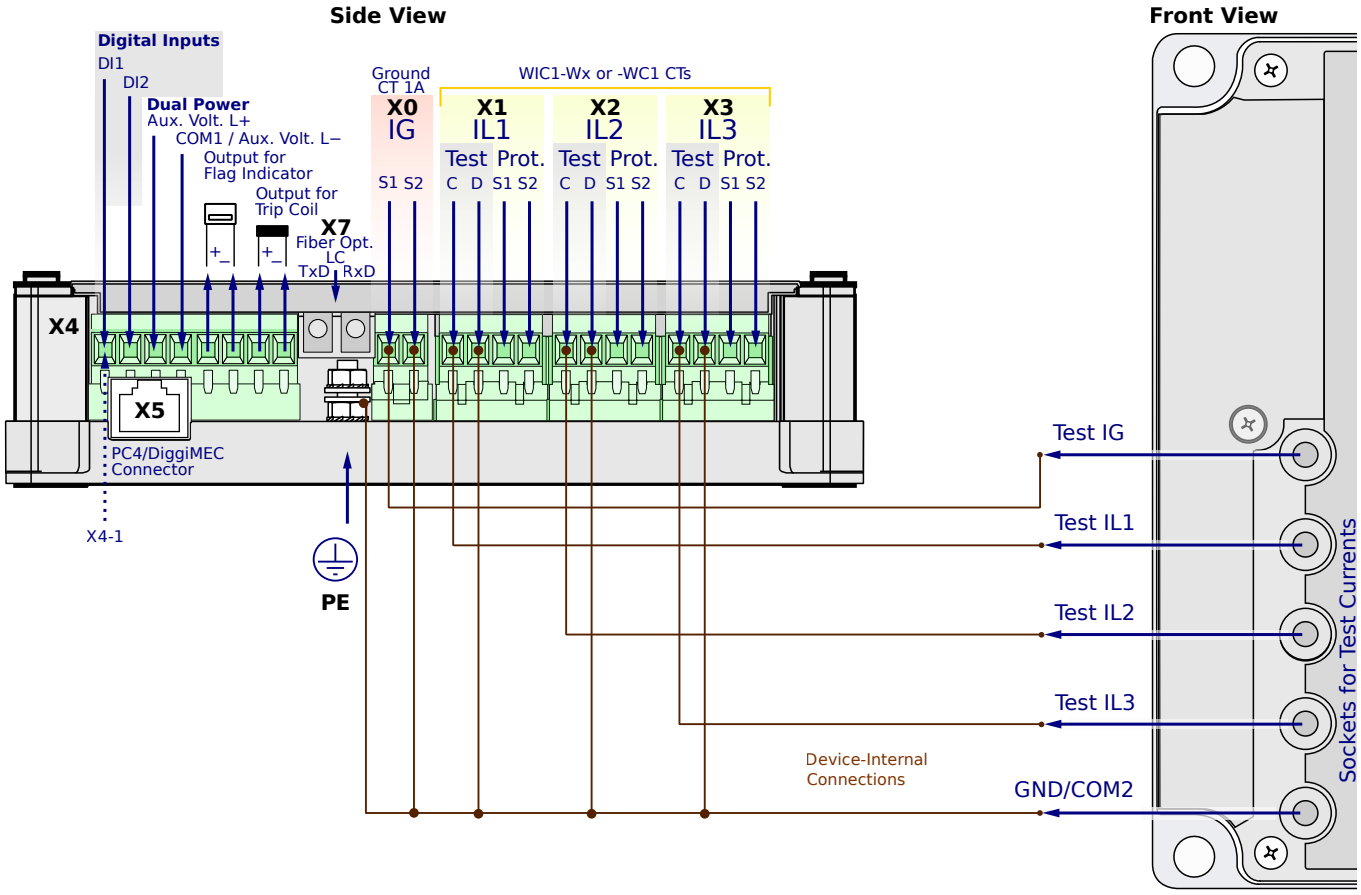


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2SLH

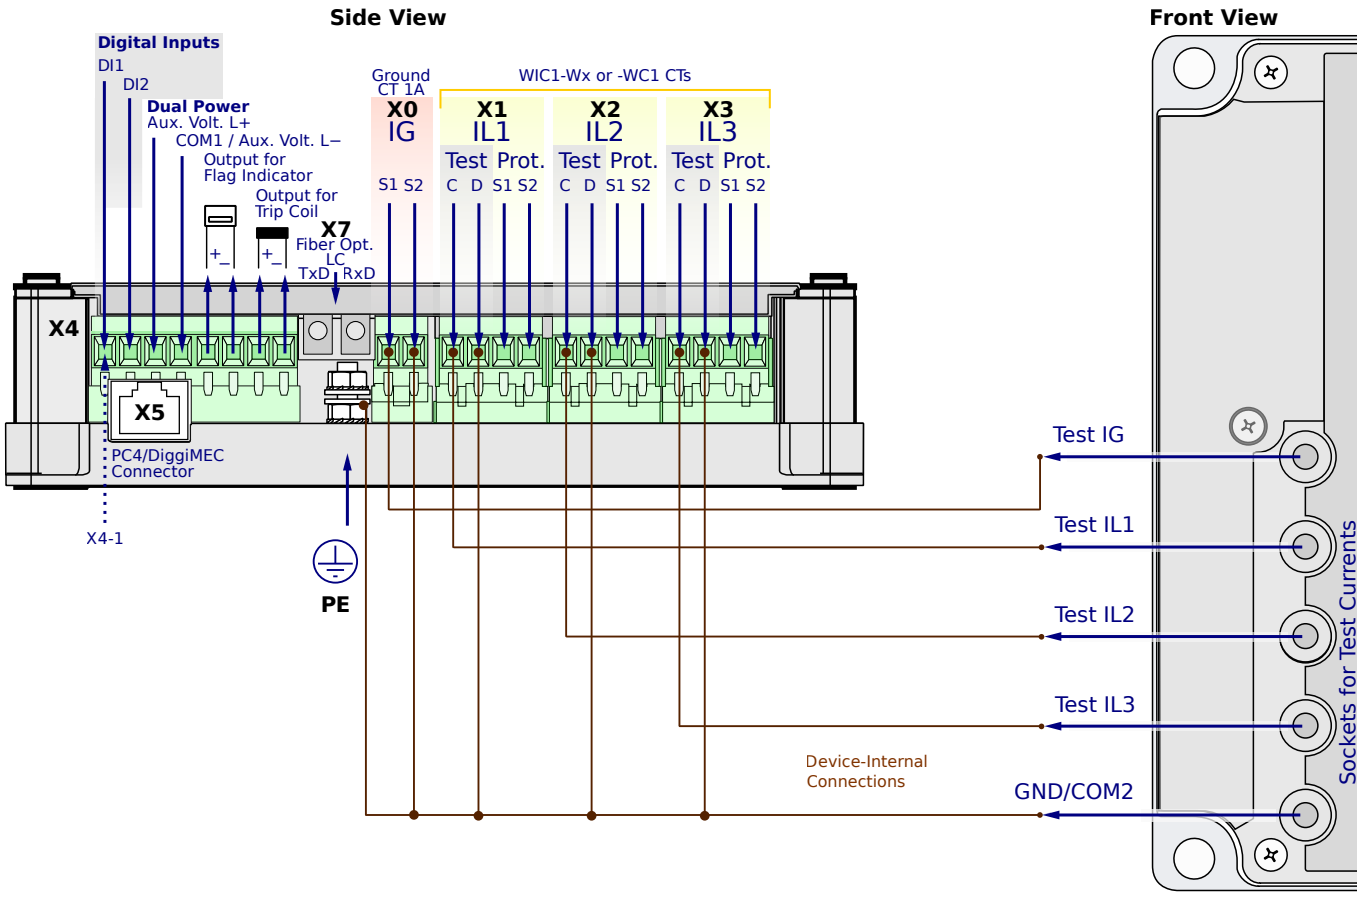


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2AA0

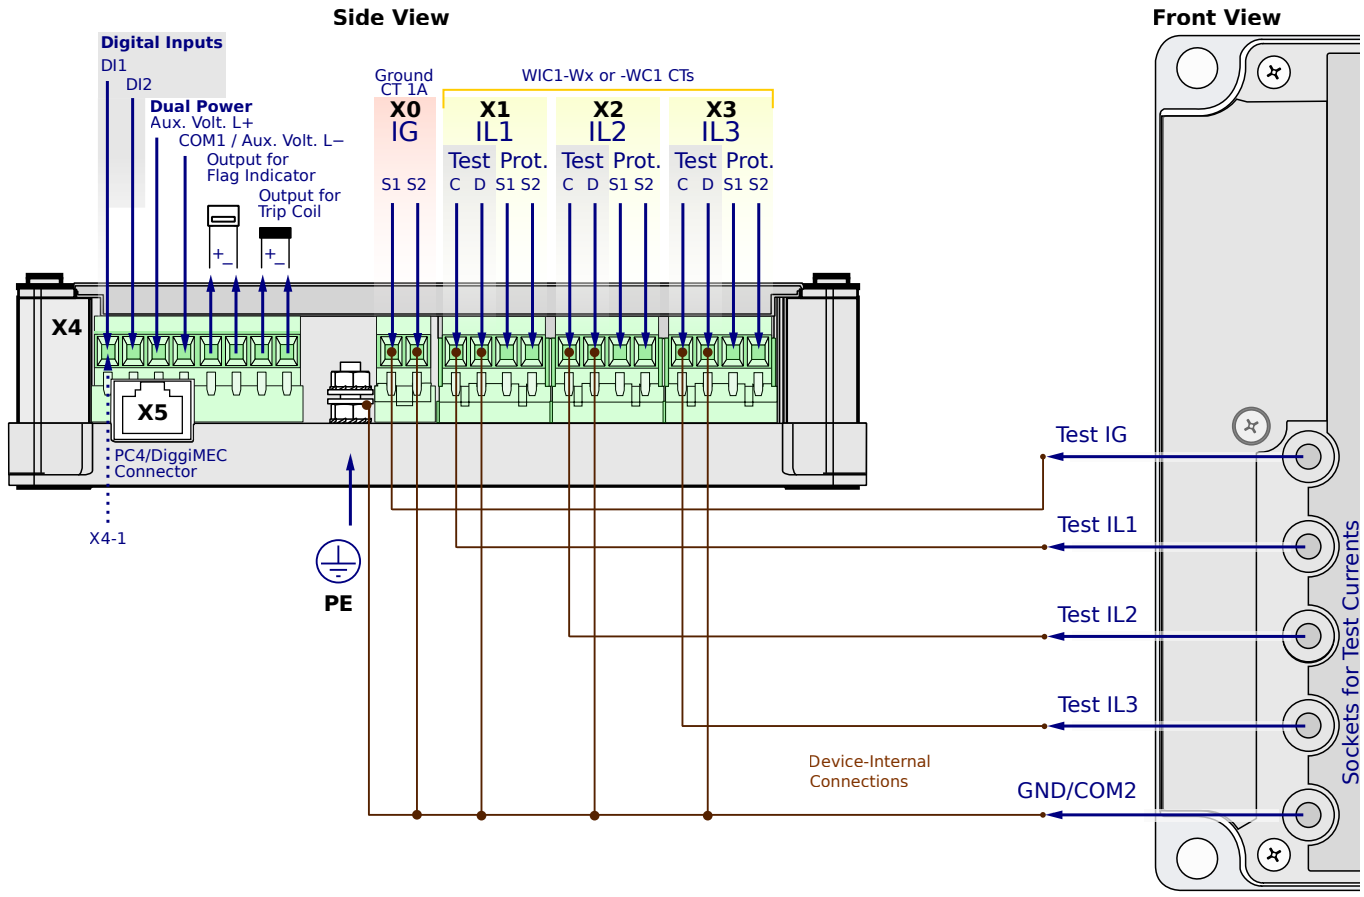


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2AAH

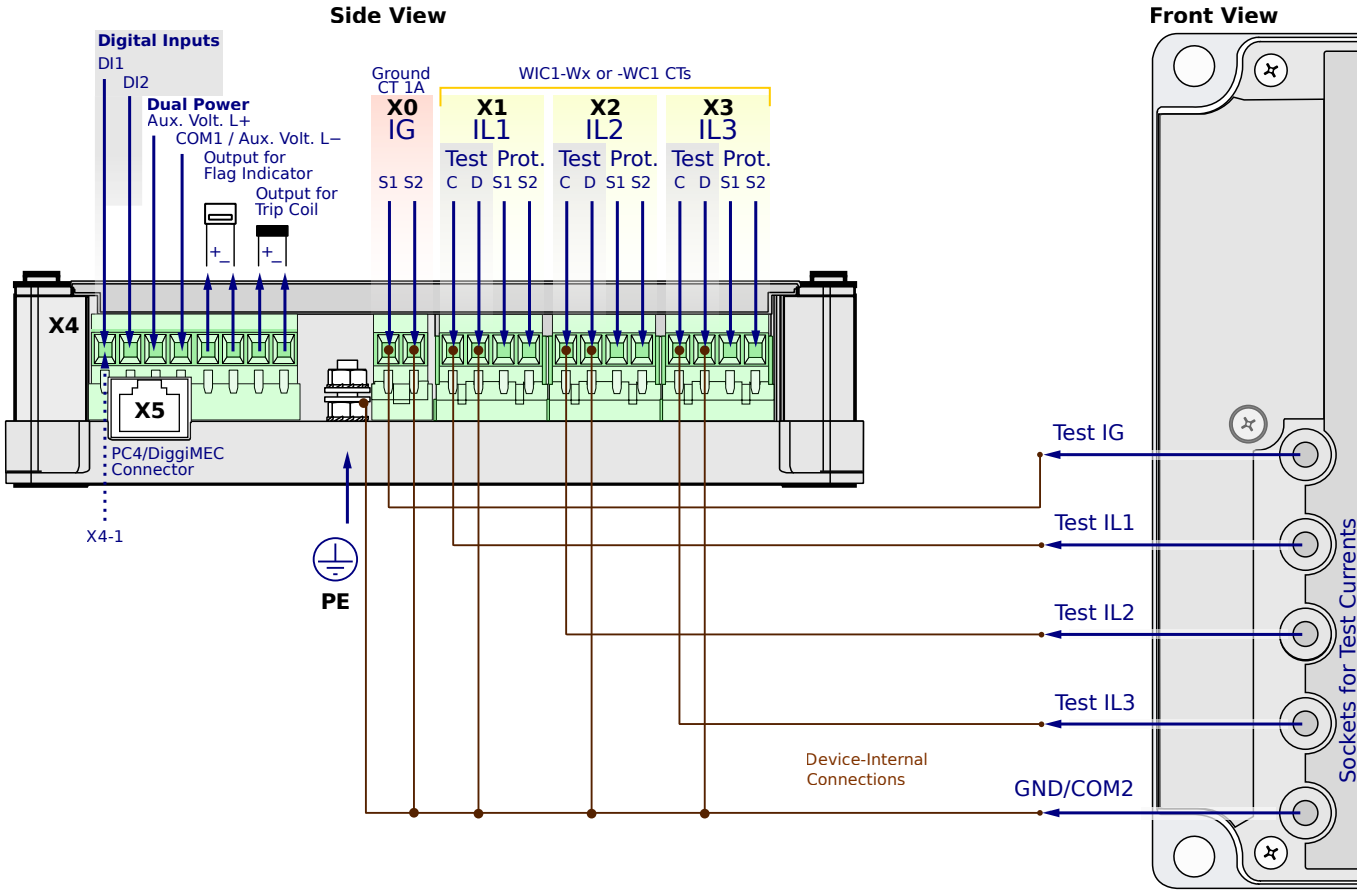


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2AB0

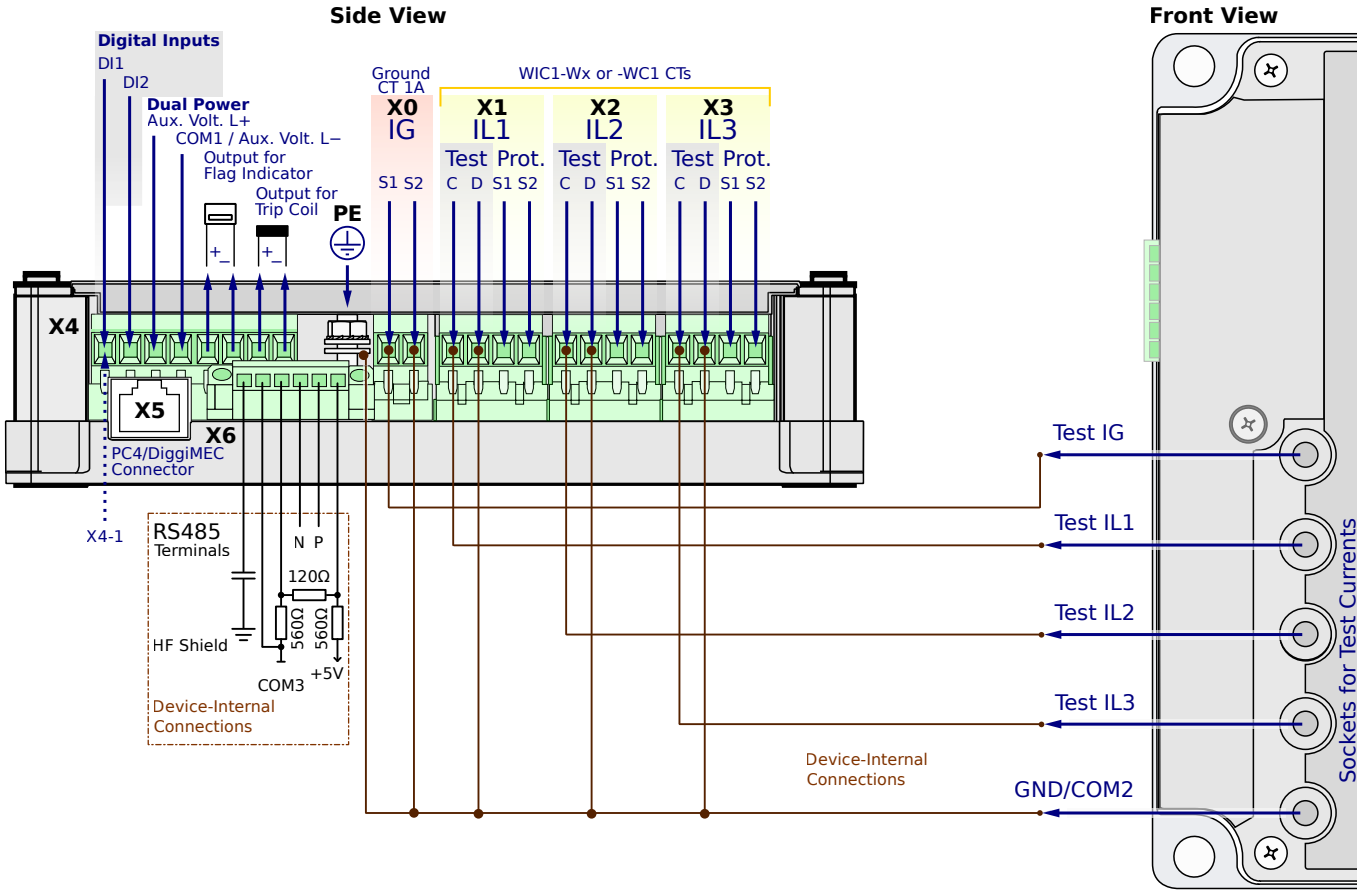


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2ABH

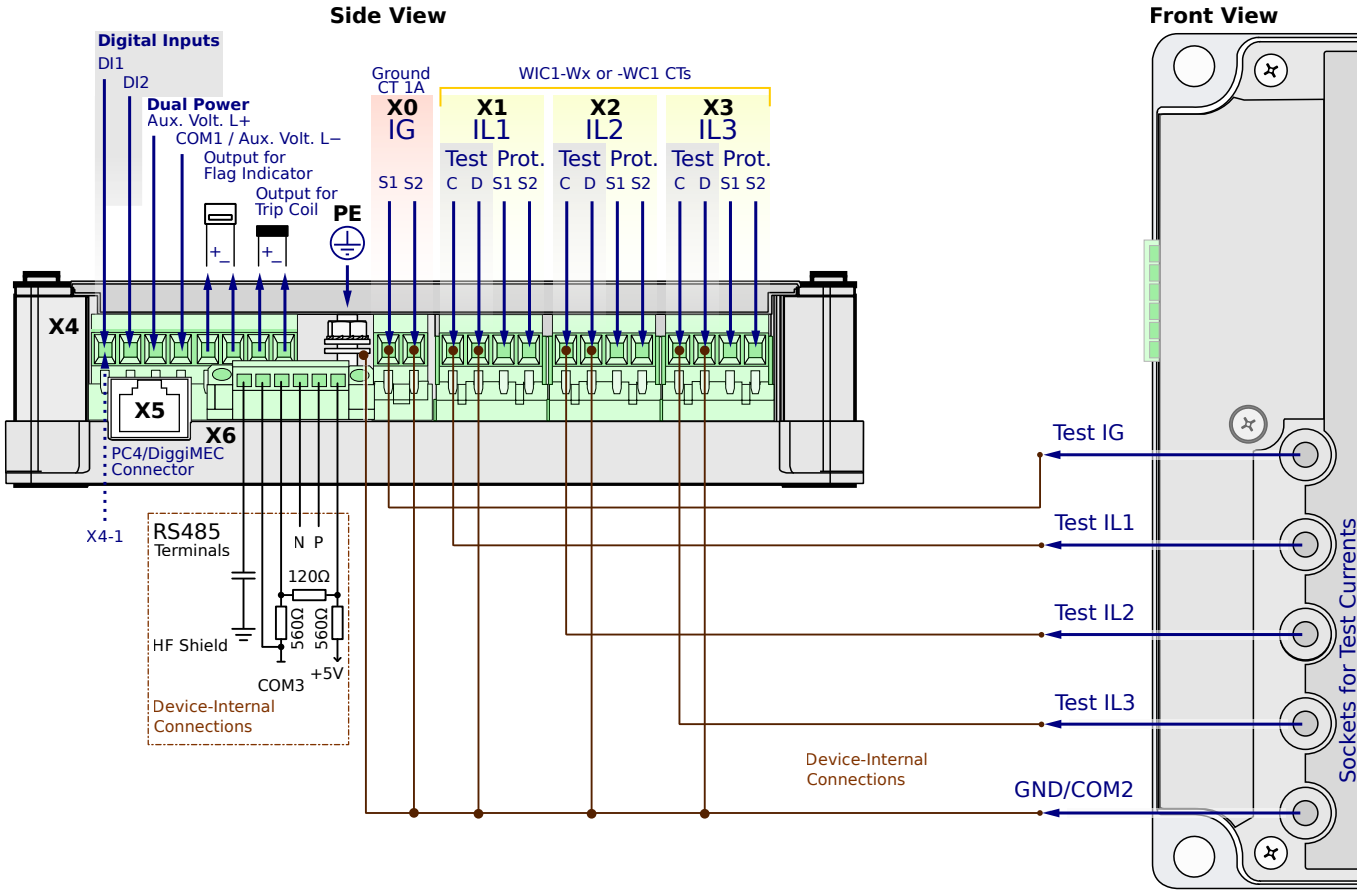


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2AC0

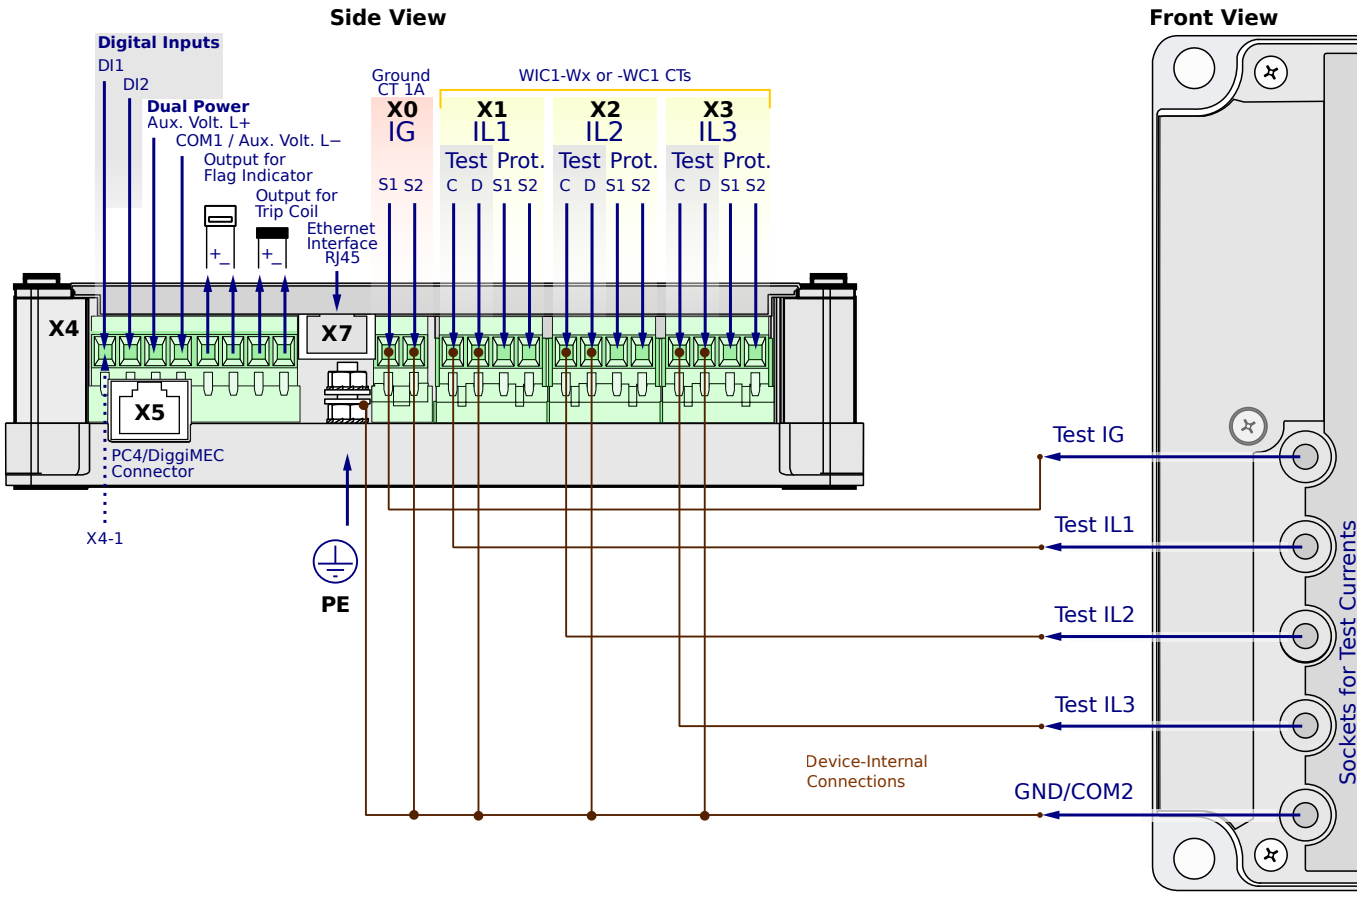


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2ACH

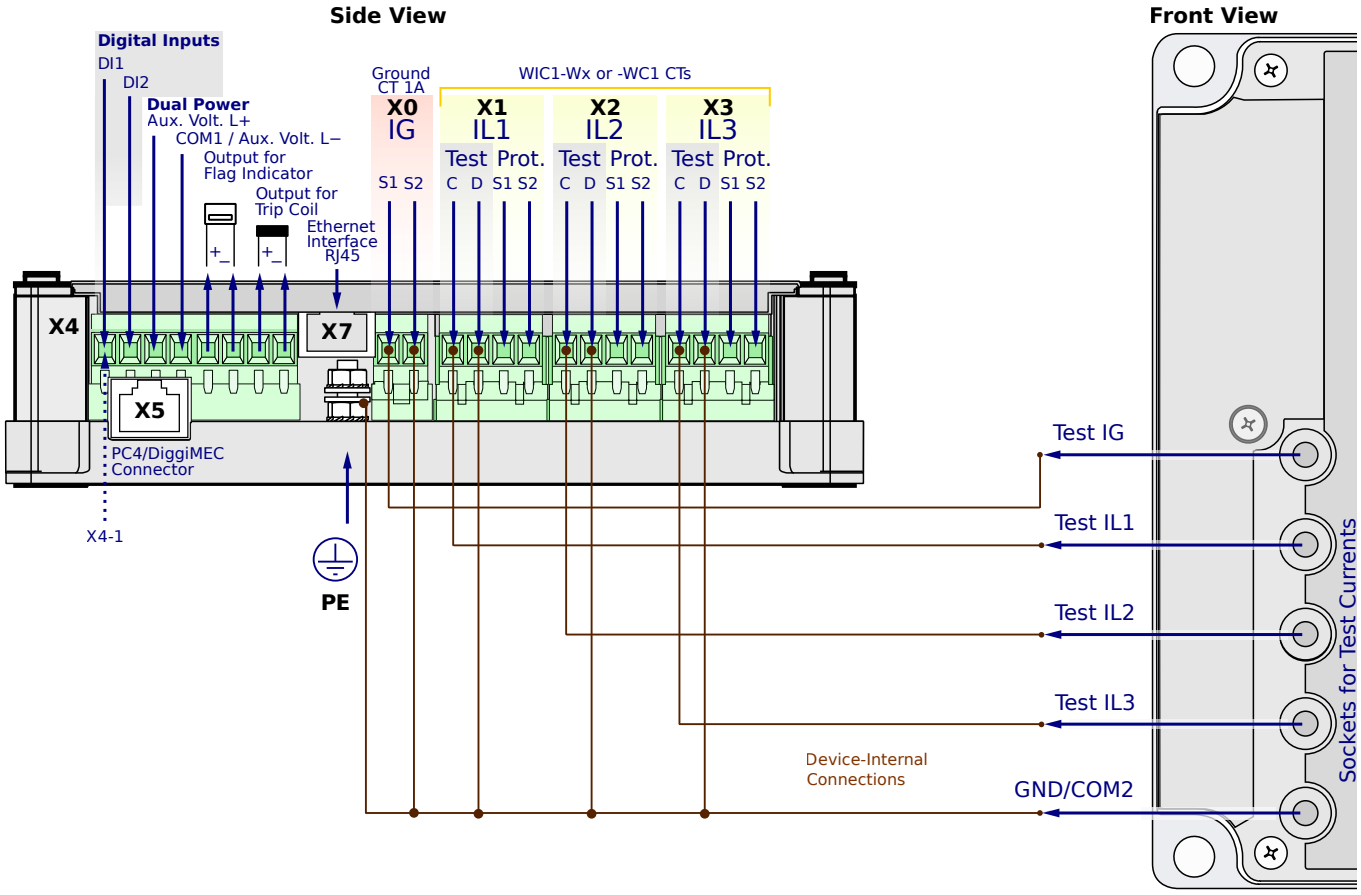


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2AL0

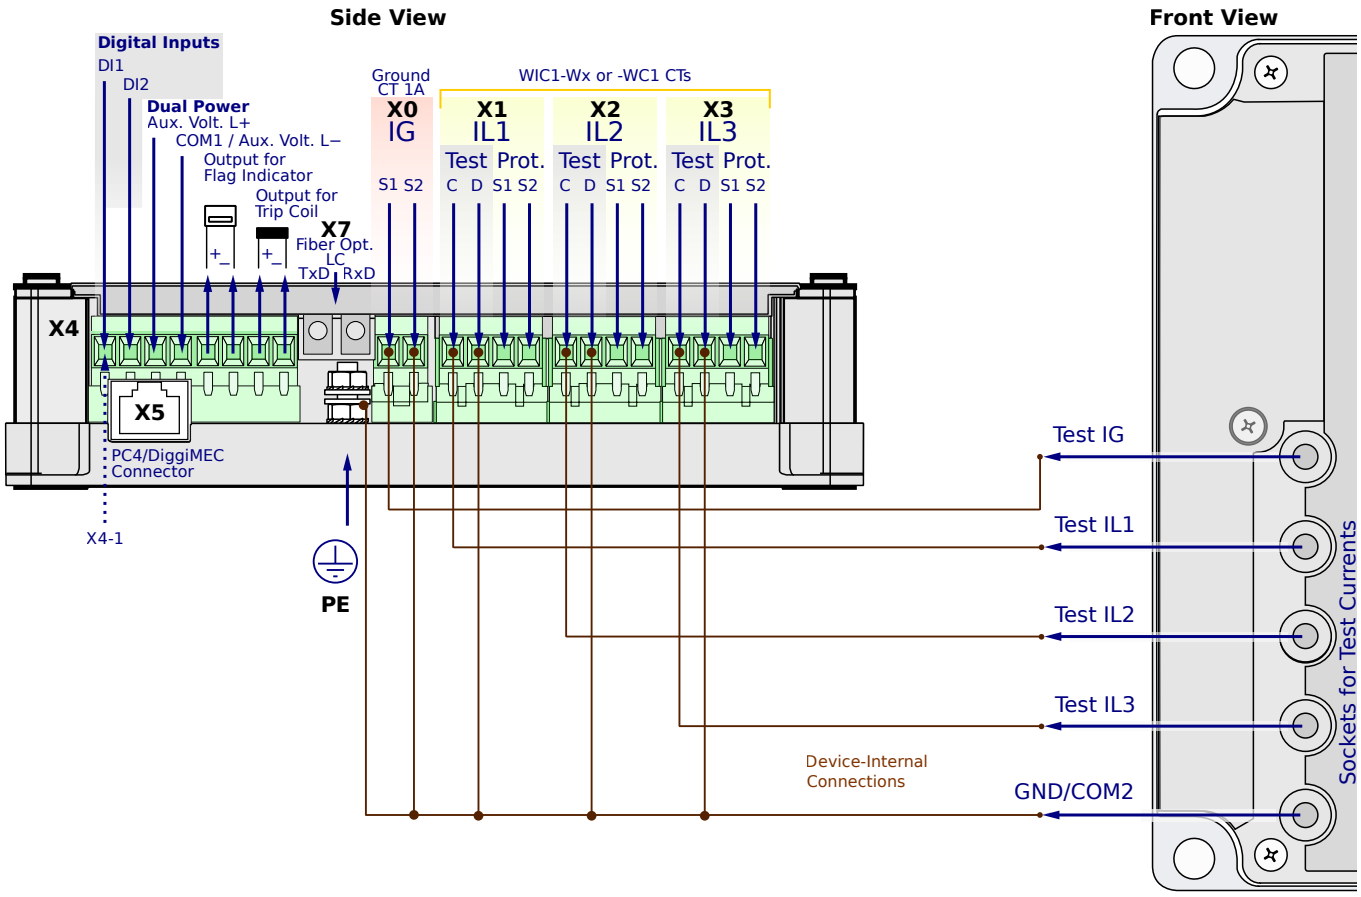


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2ALH

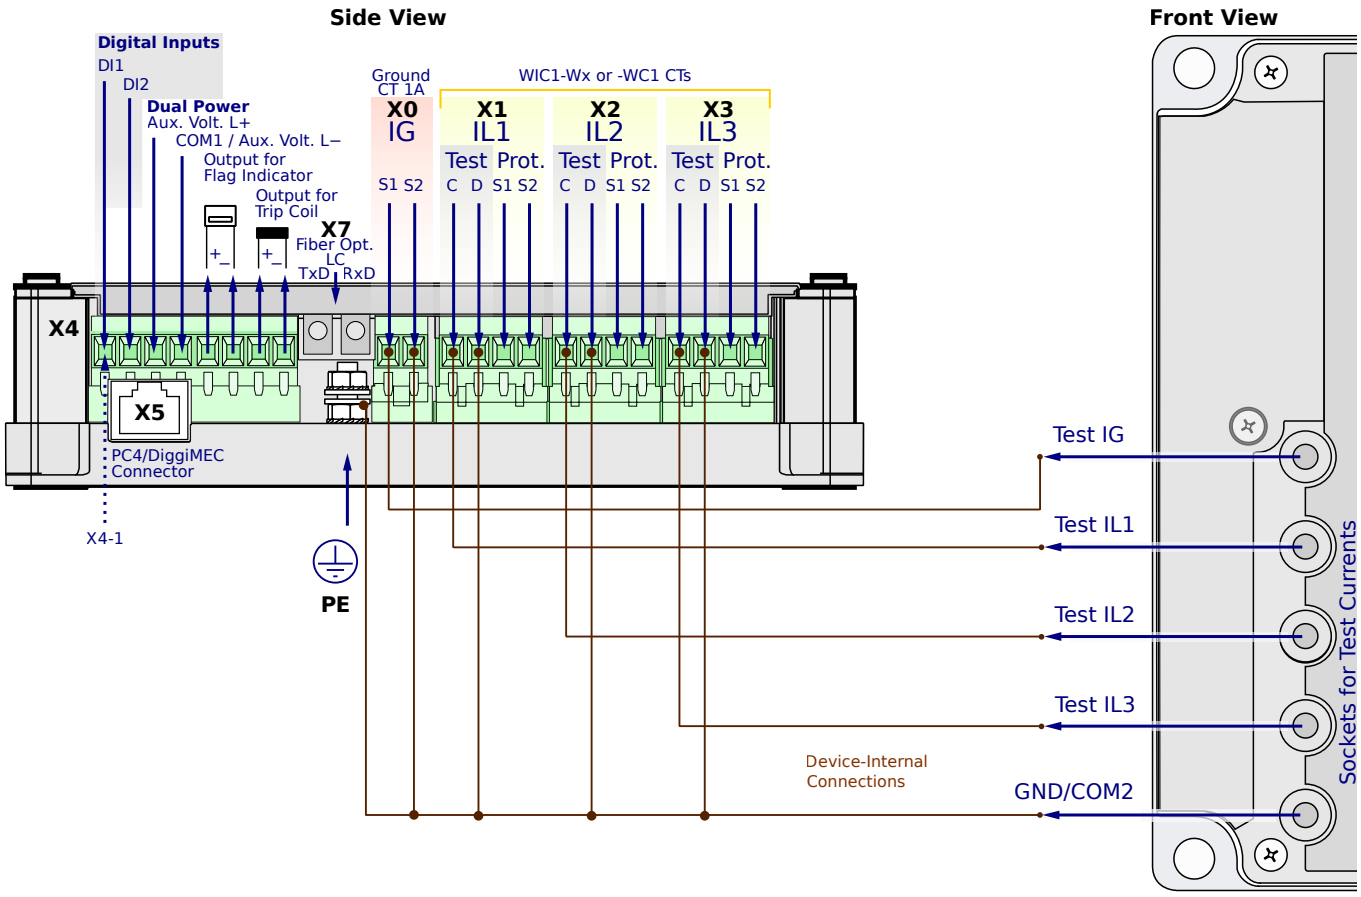


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2PA0

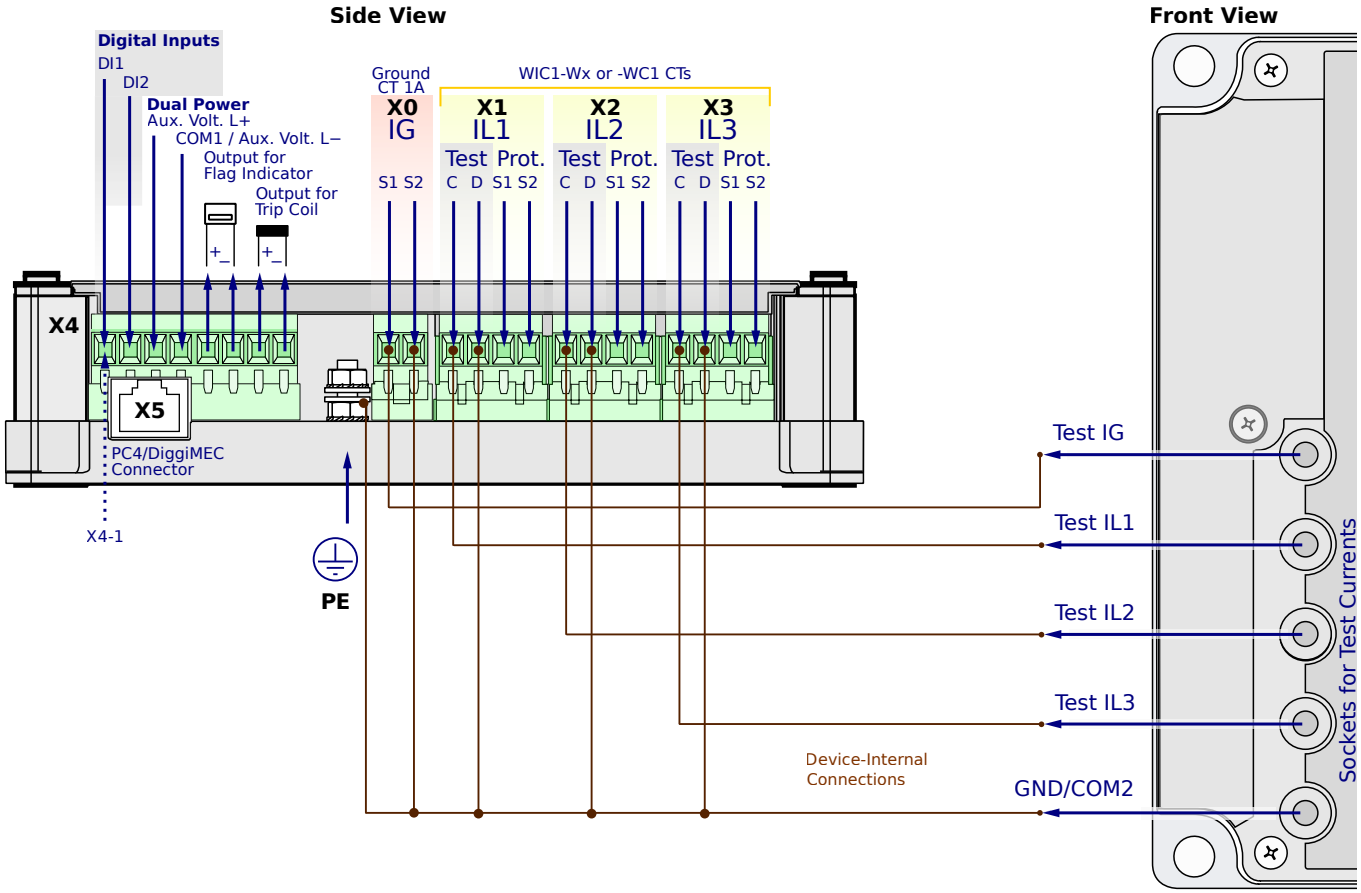


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2PAH

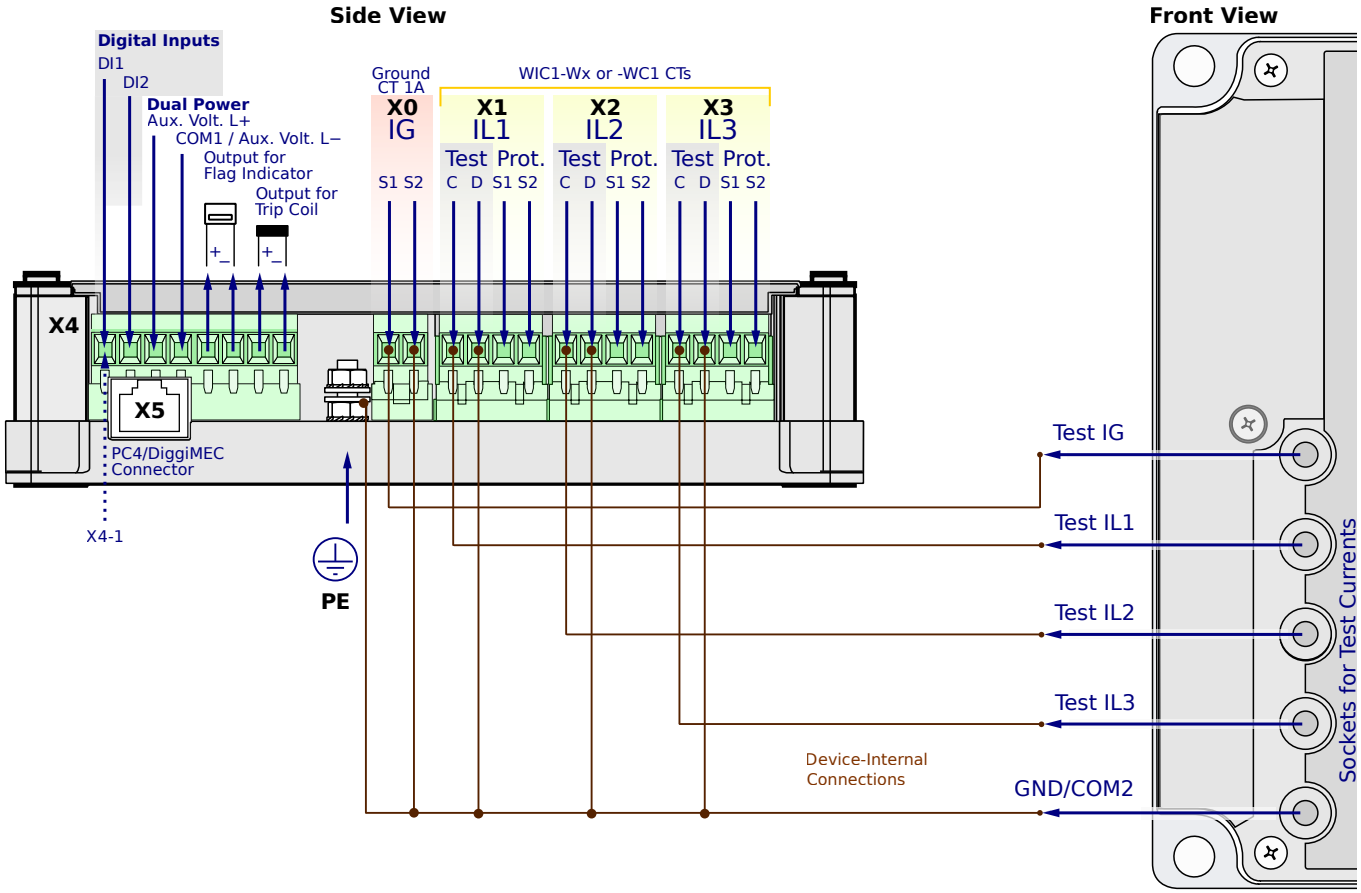


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0ND2PB0

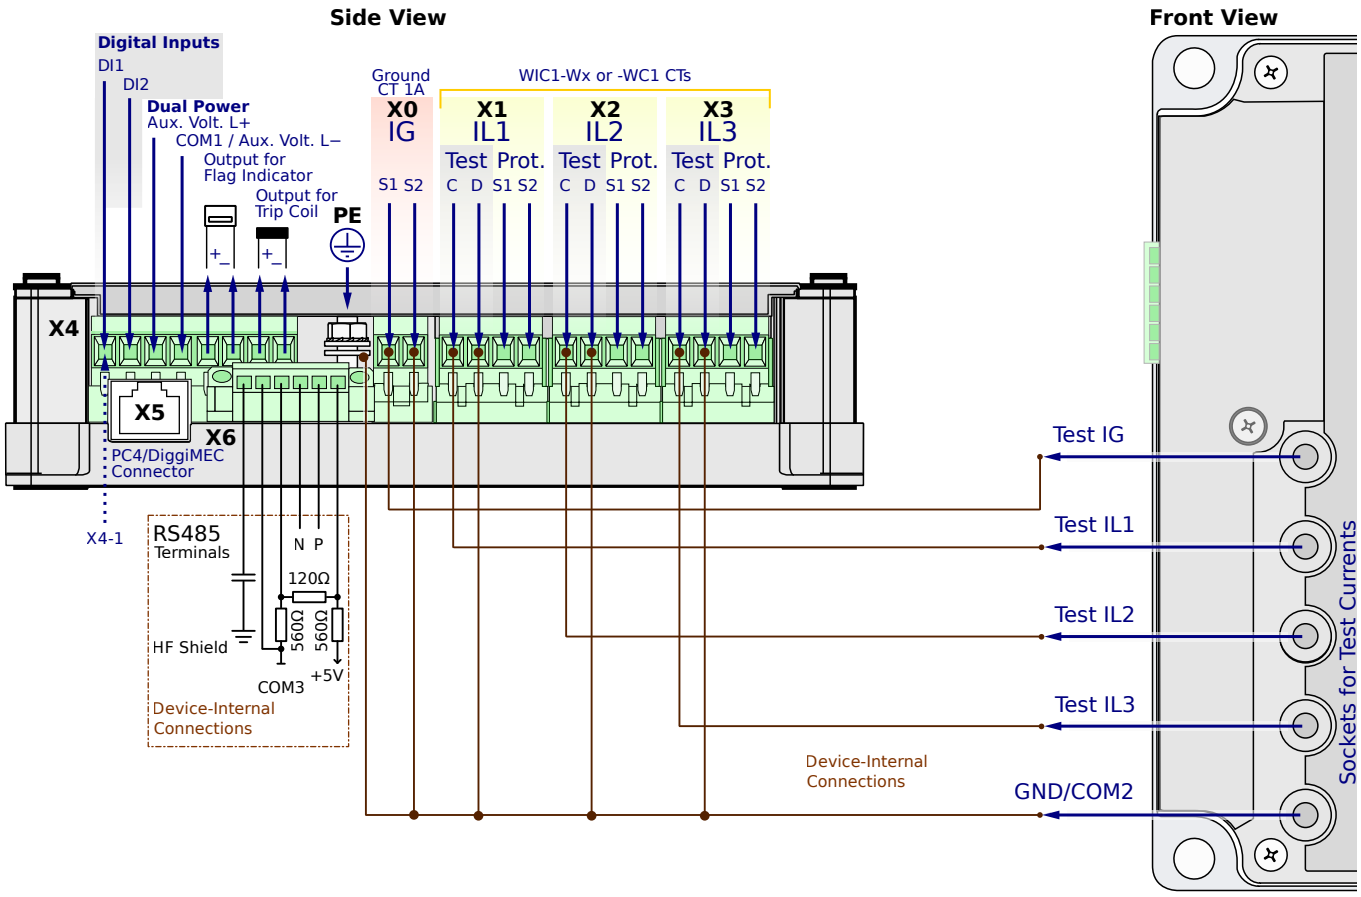


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2PBH

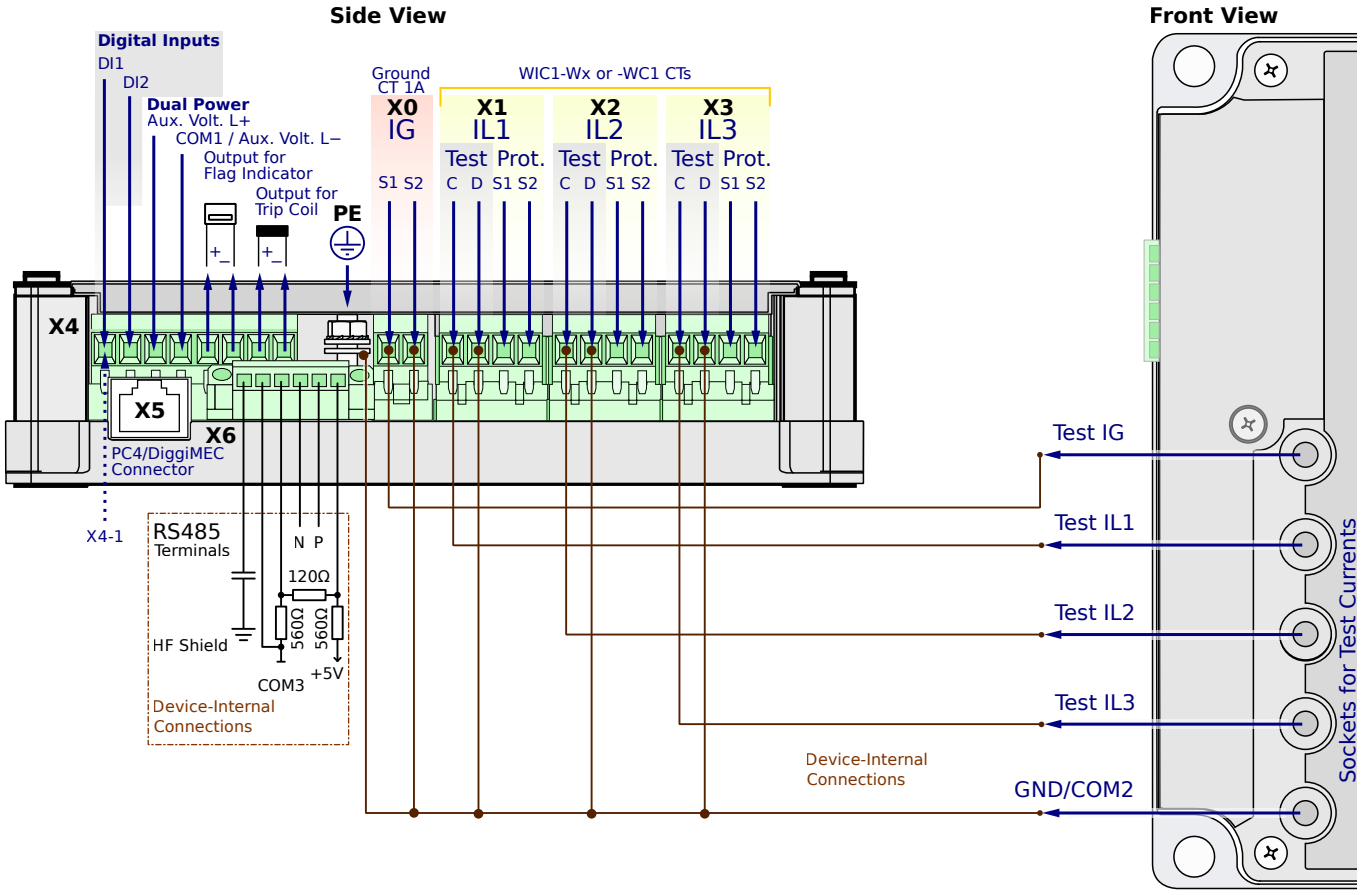


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0ND2PC0

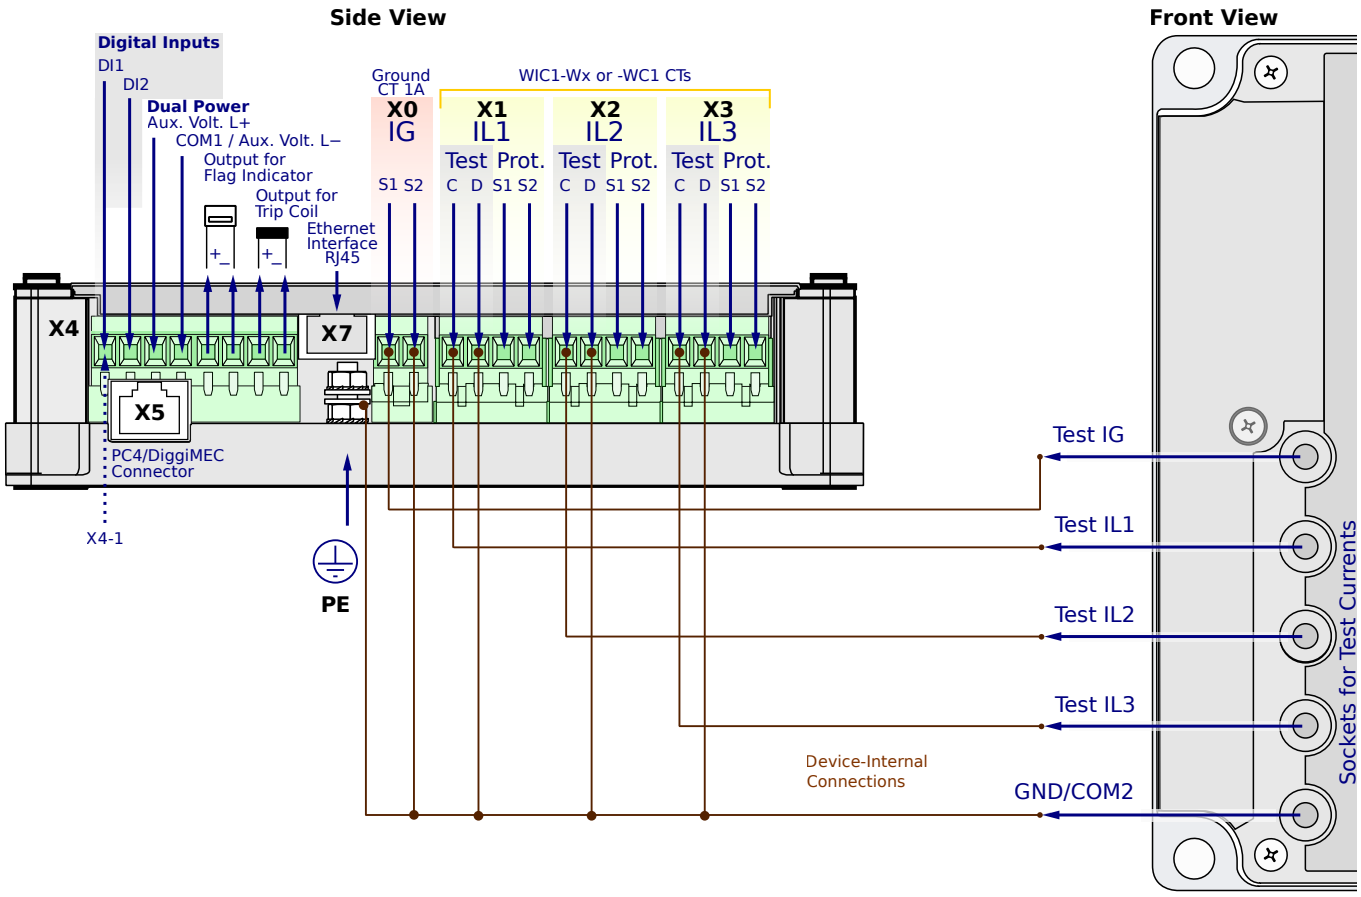


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2PCH

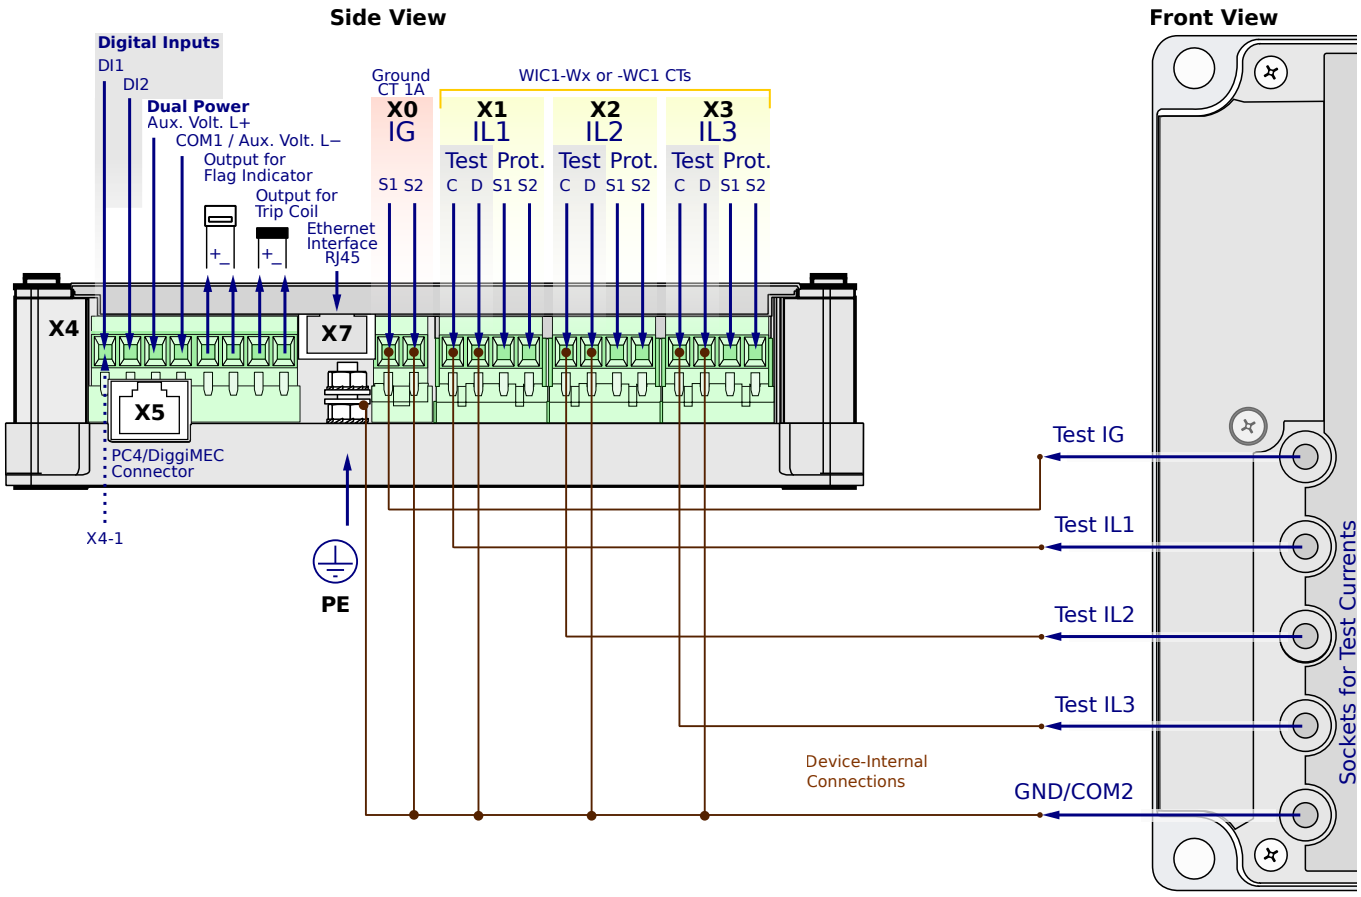


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0ND2PL0

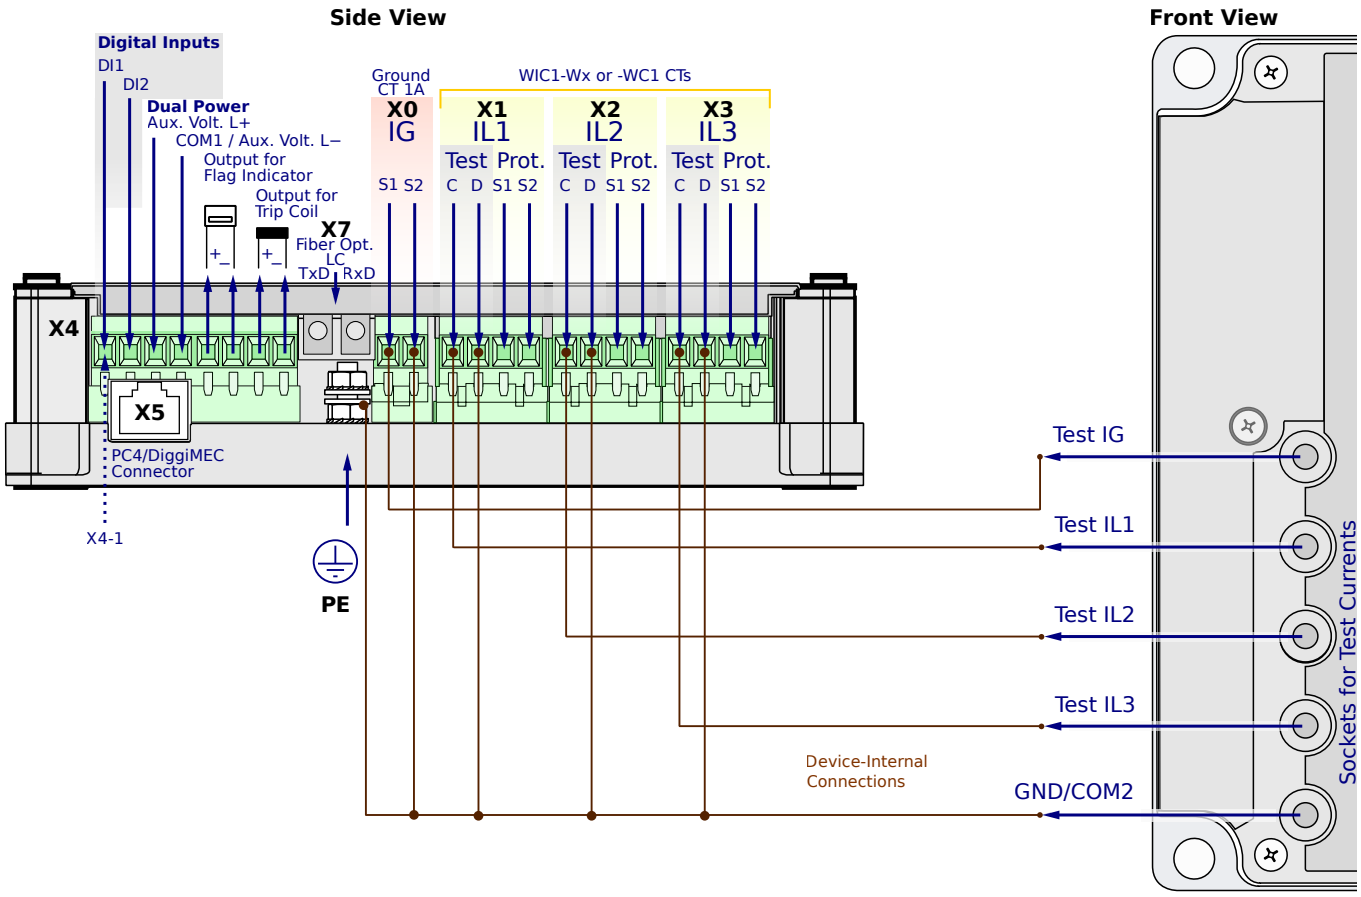


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0ND2PLH

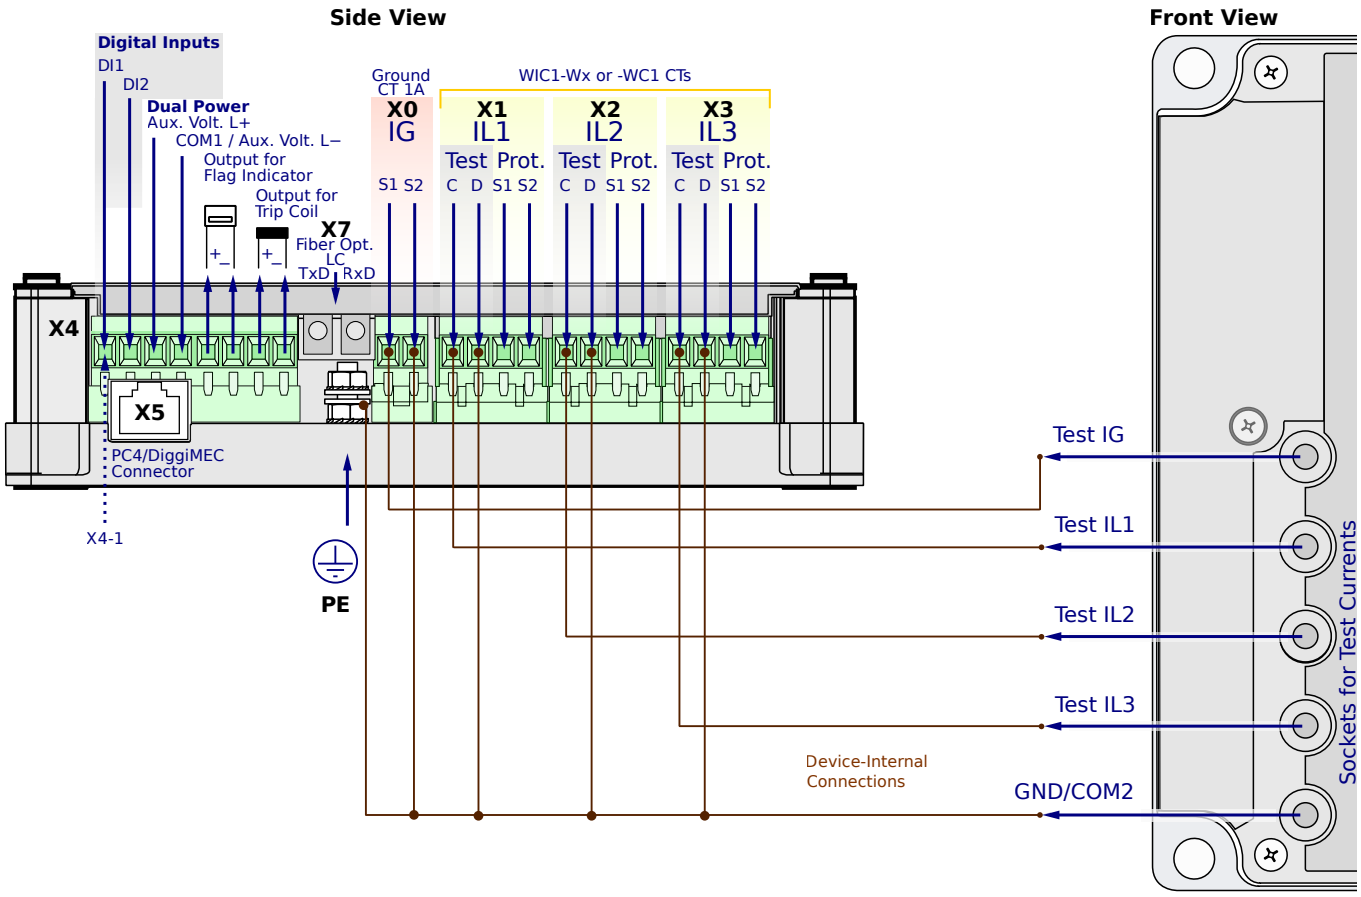


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1SA0

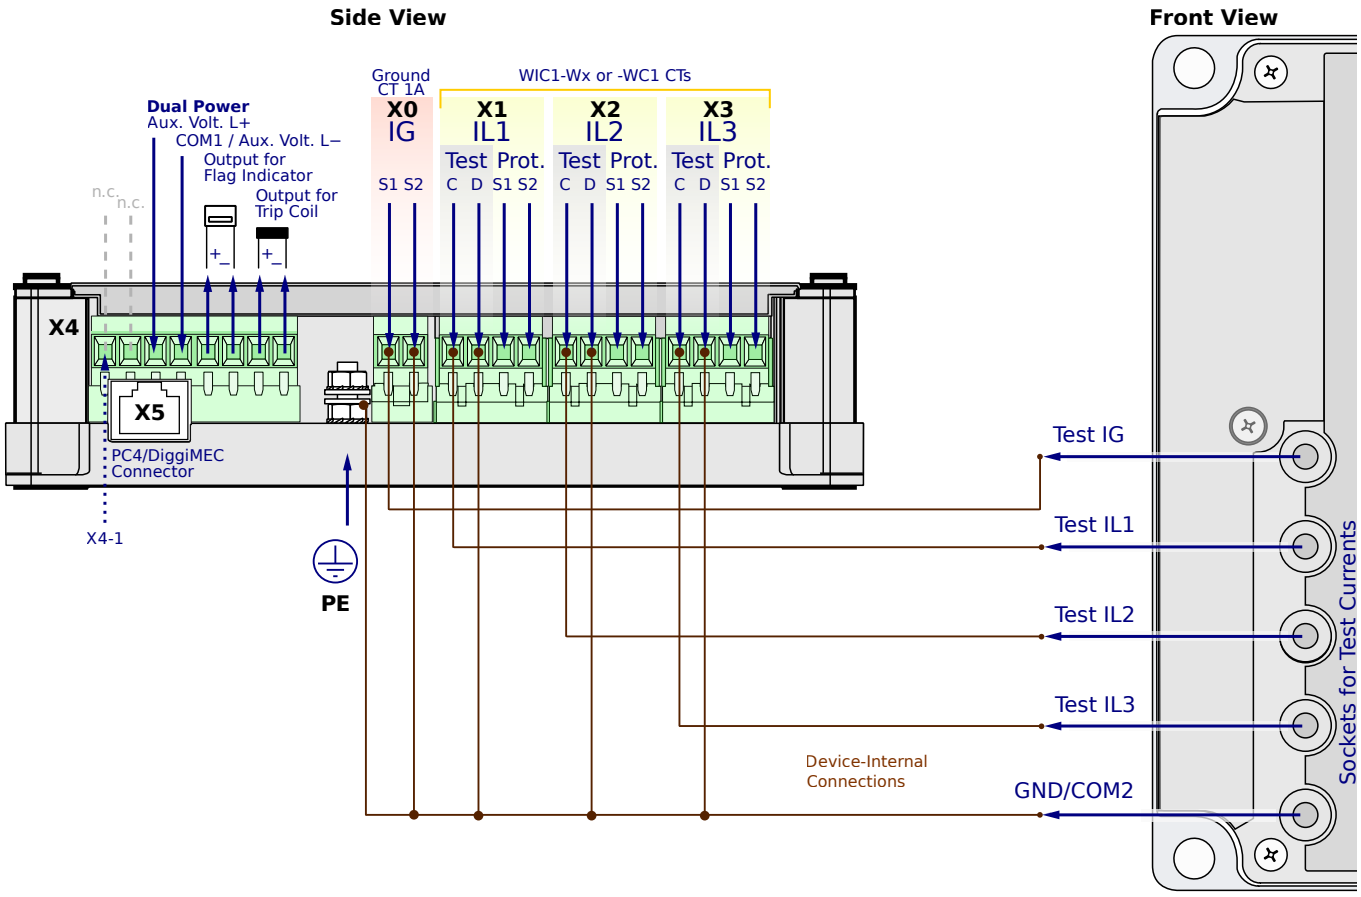


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1SAH

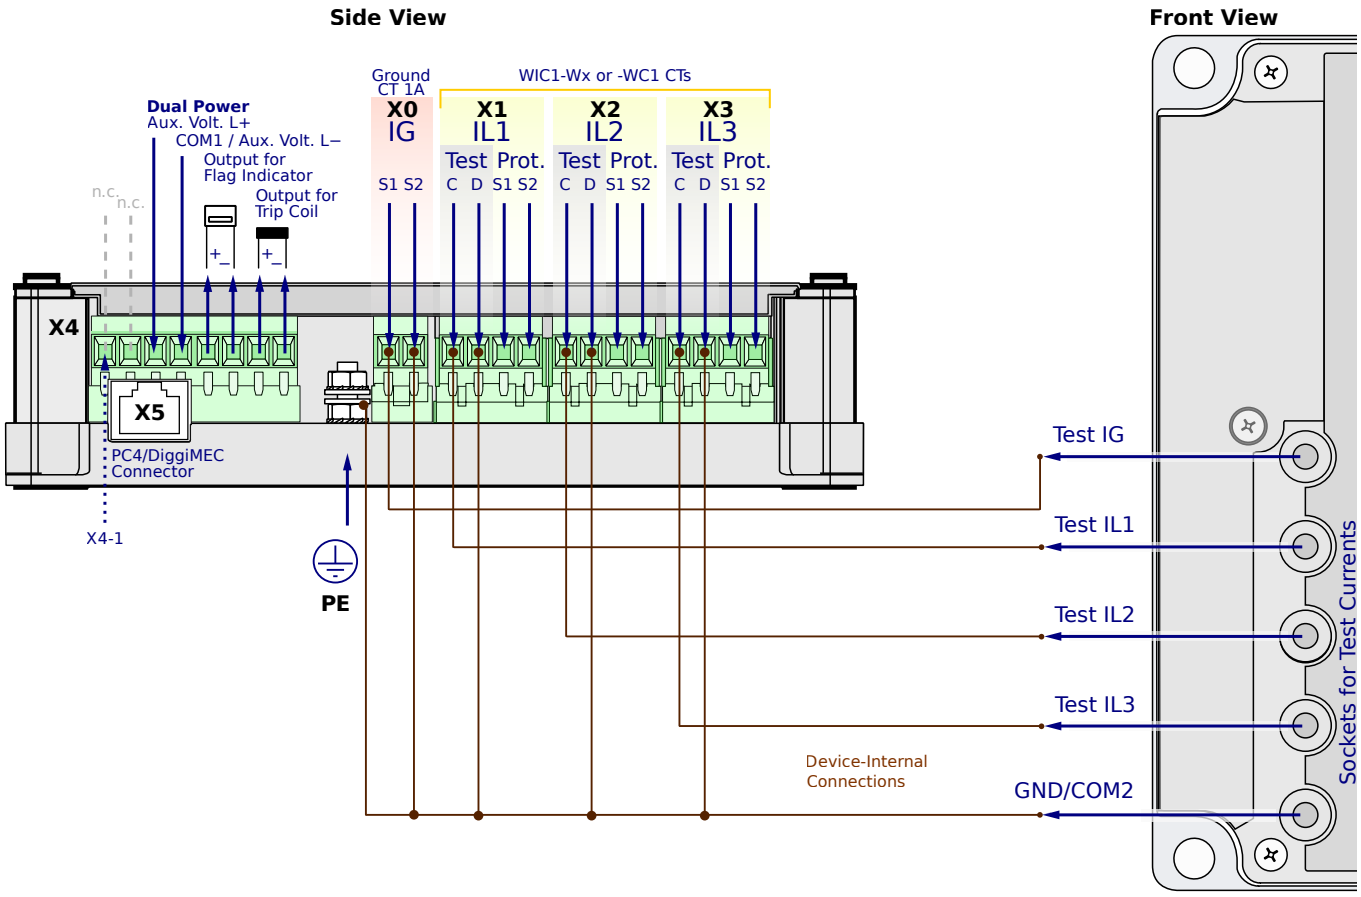


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1SB0

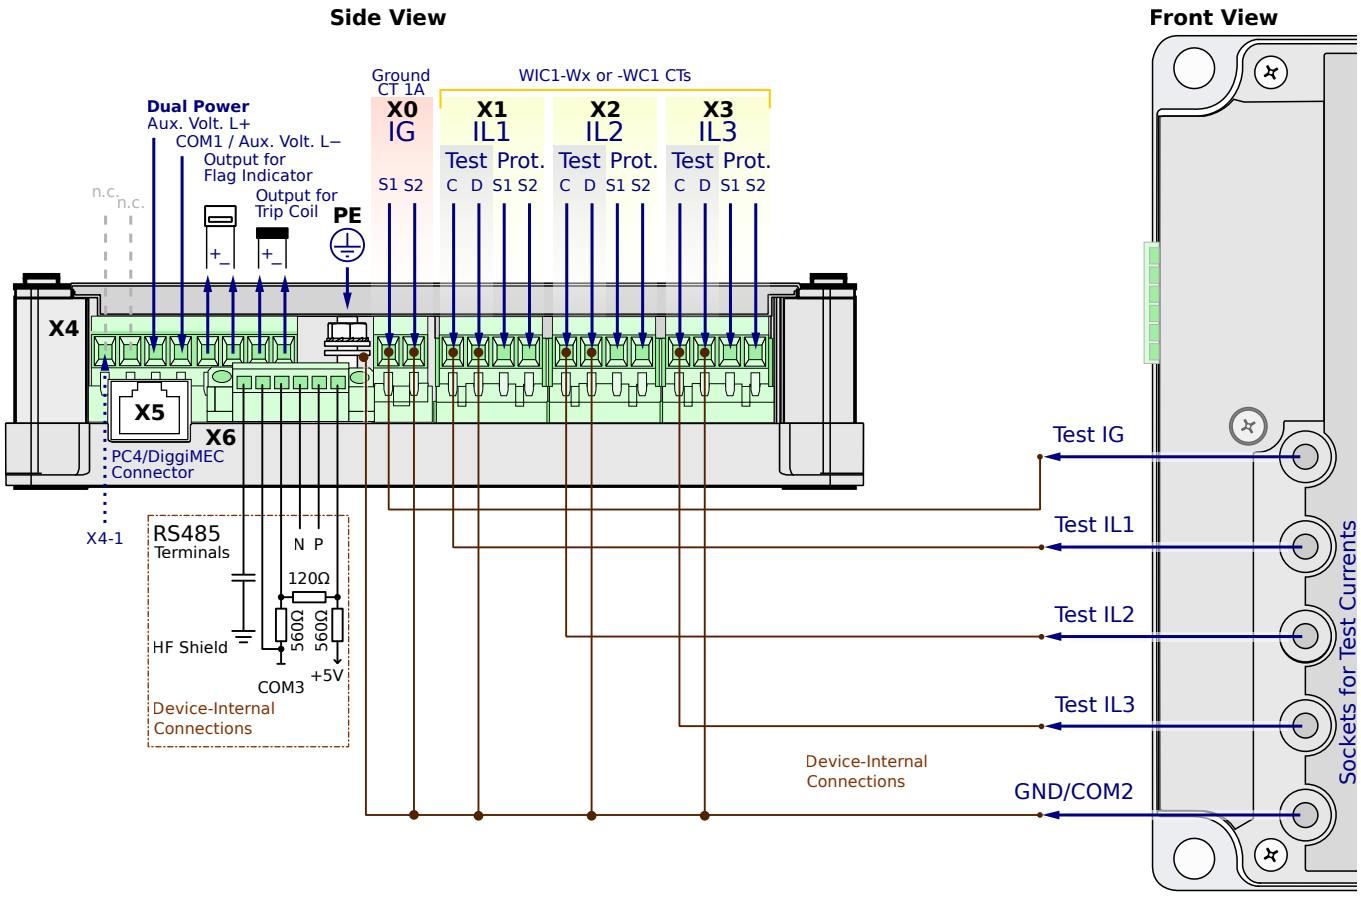


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1SBH

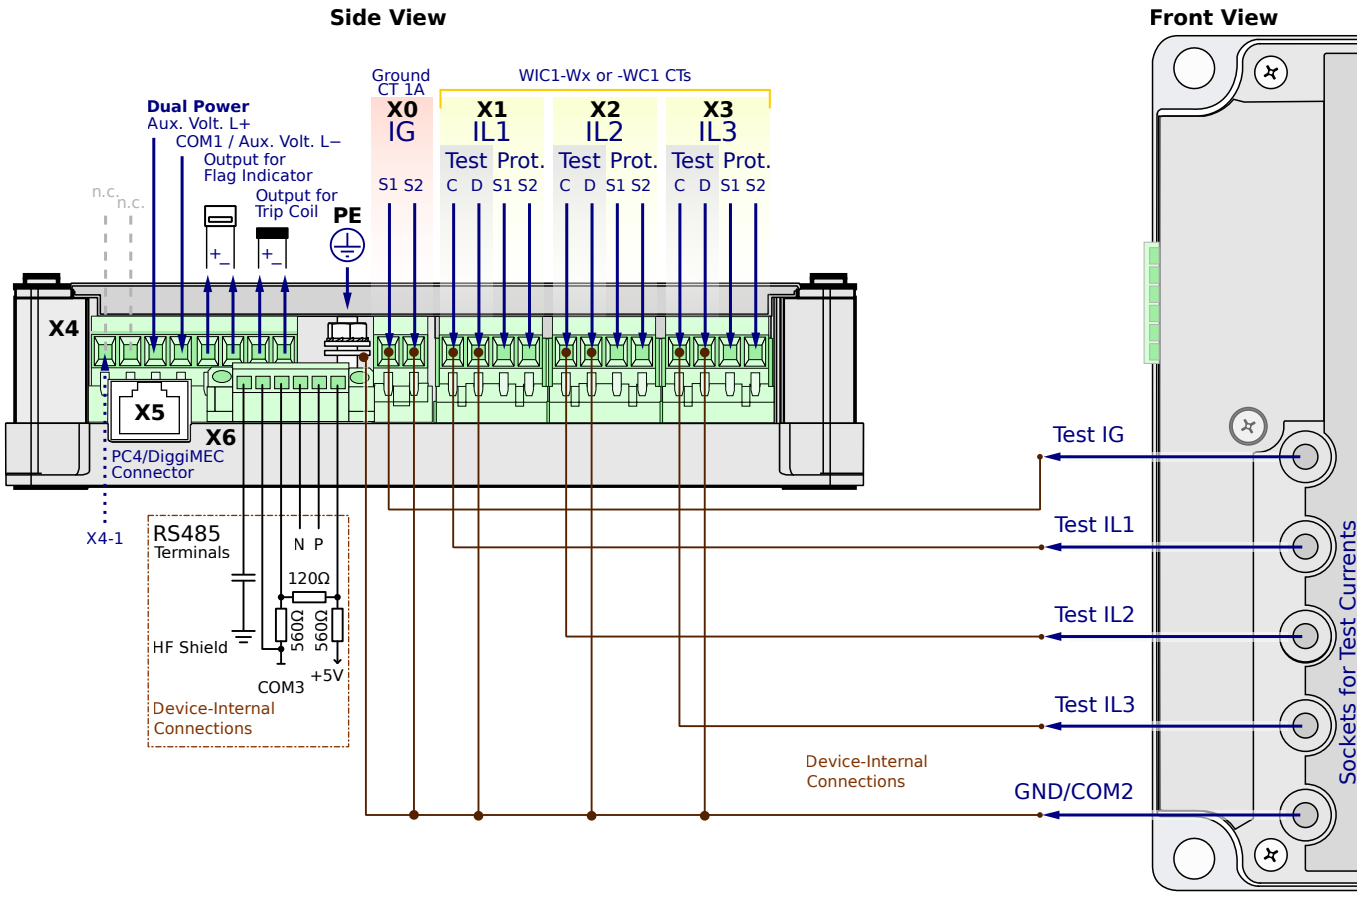


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1SC0

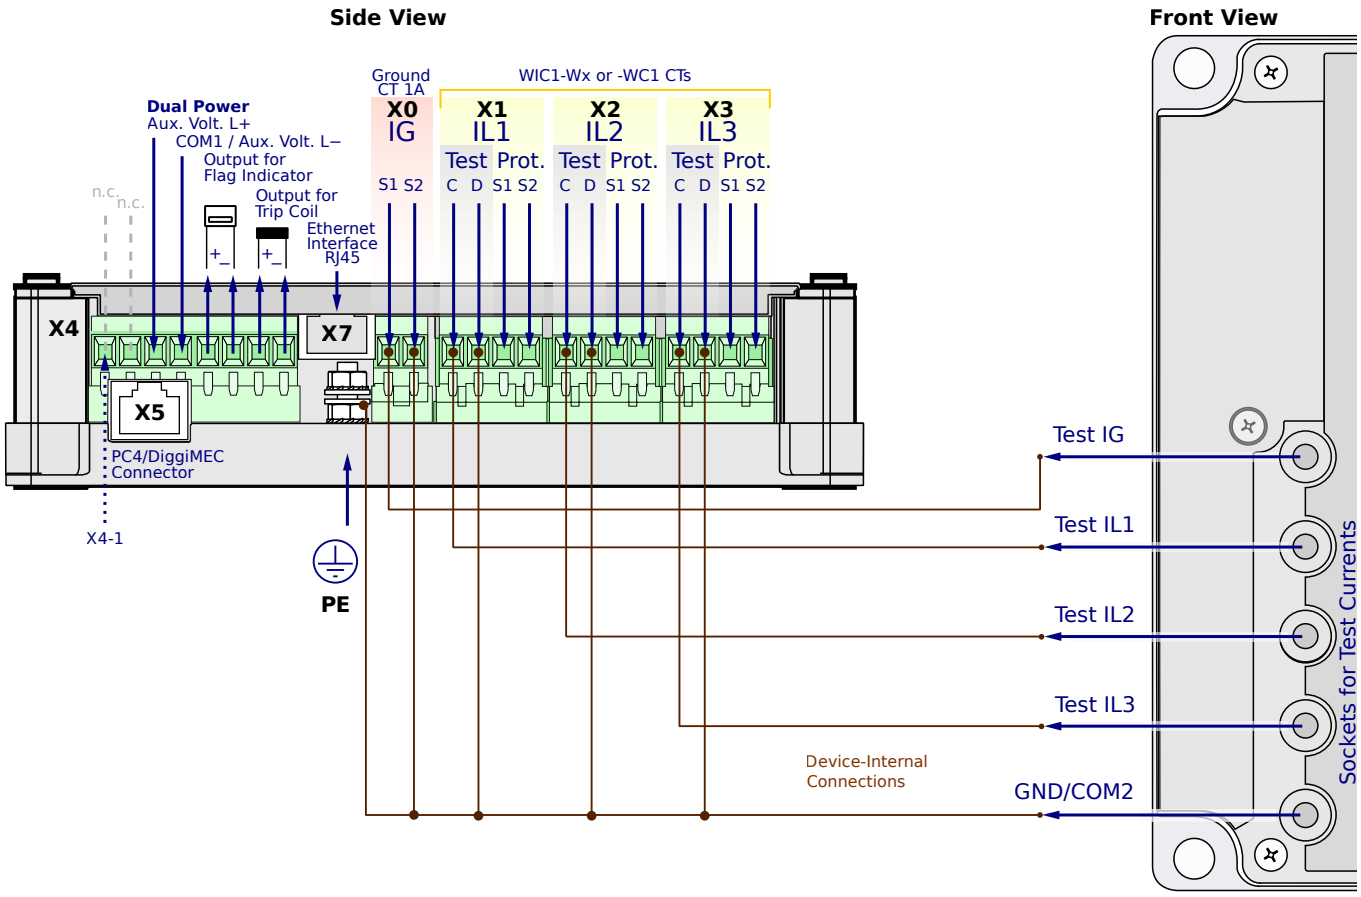


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1SCH

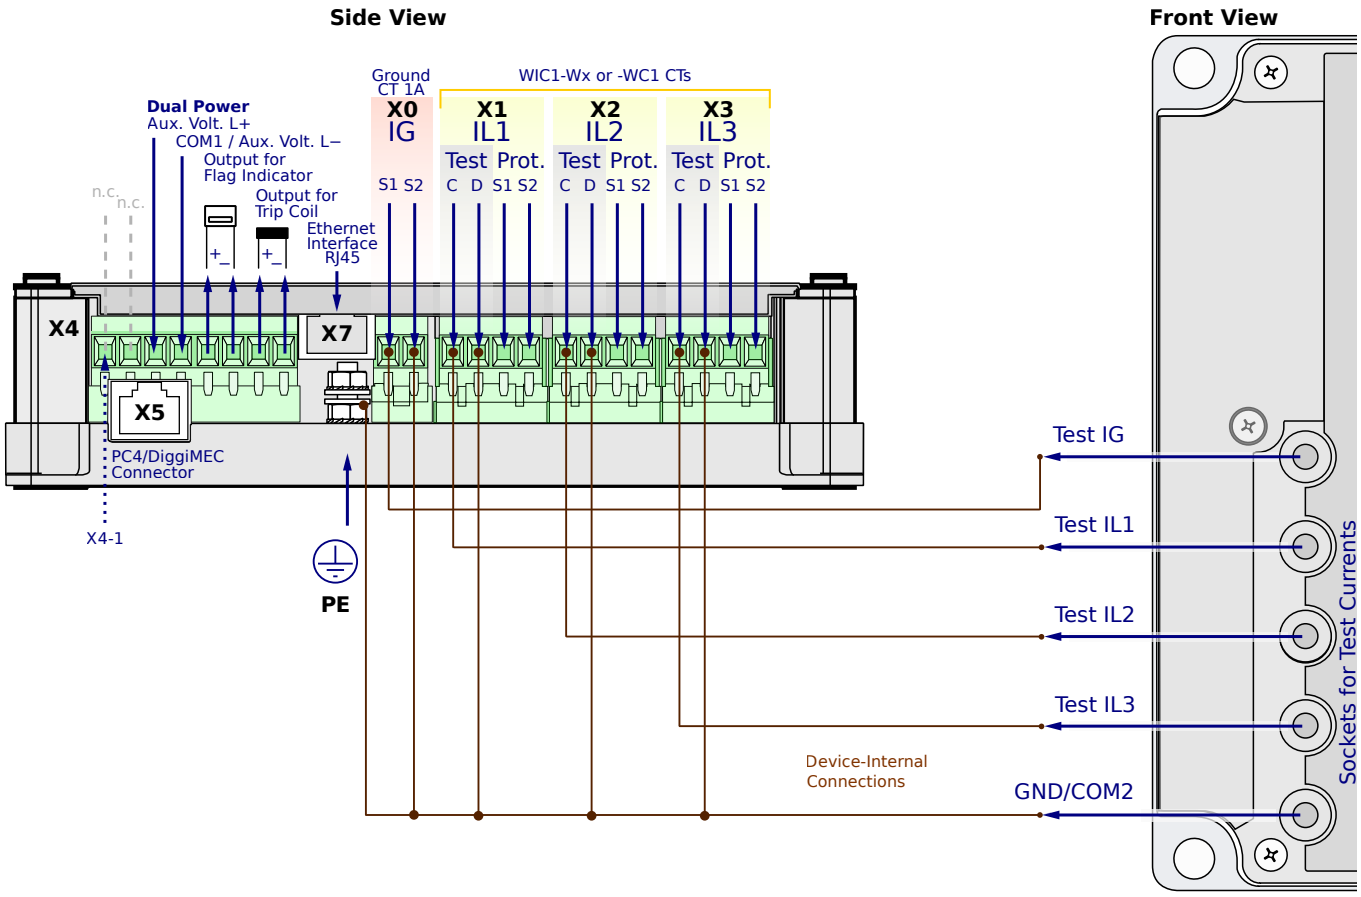


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1SL0

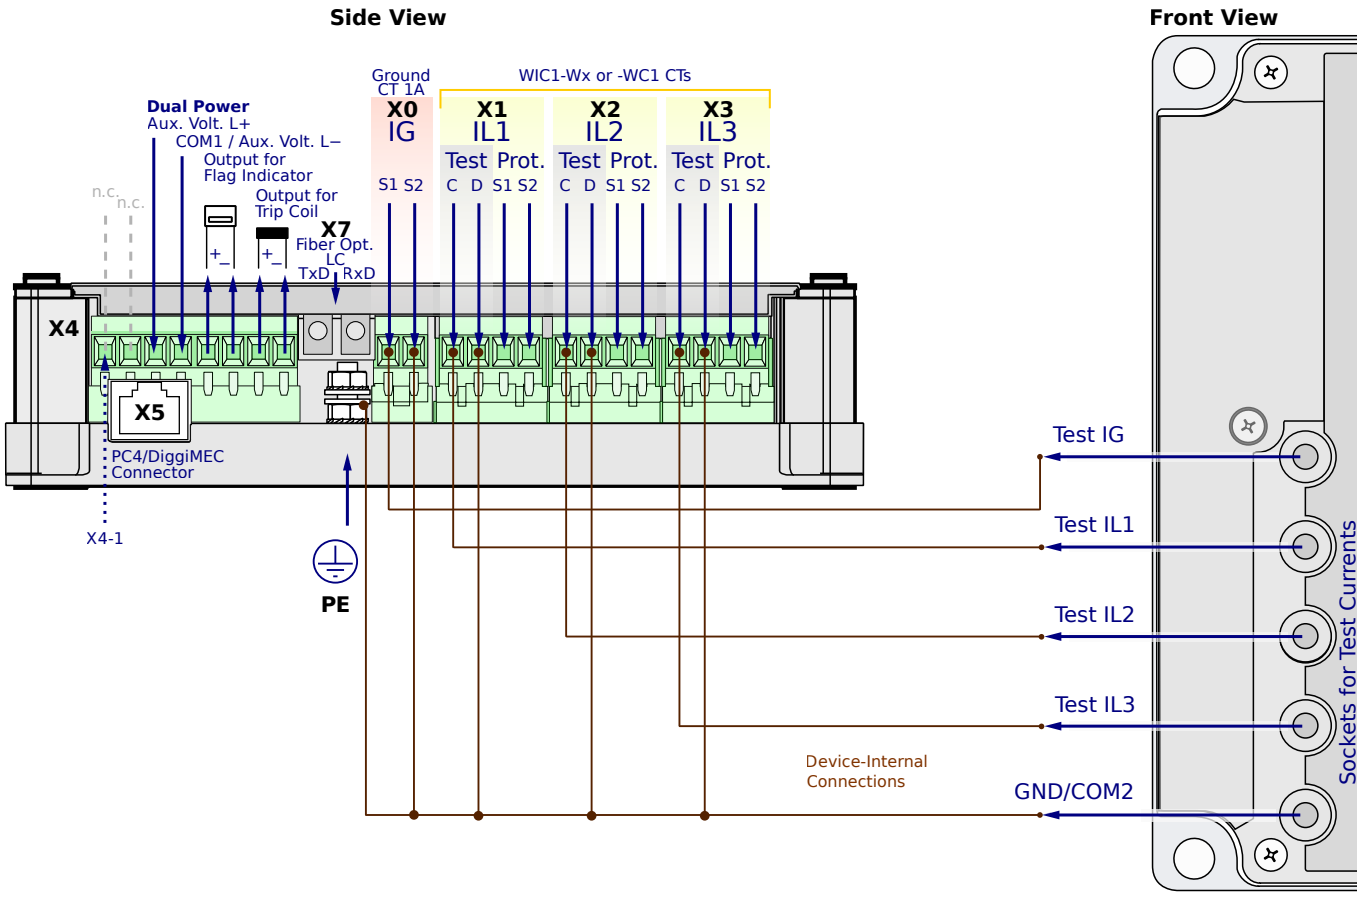


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1SLH

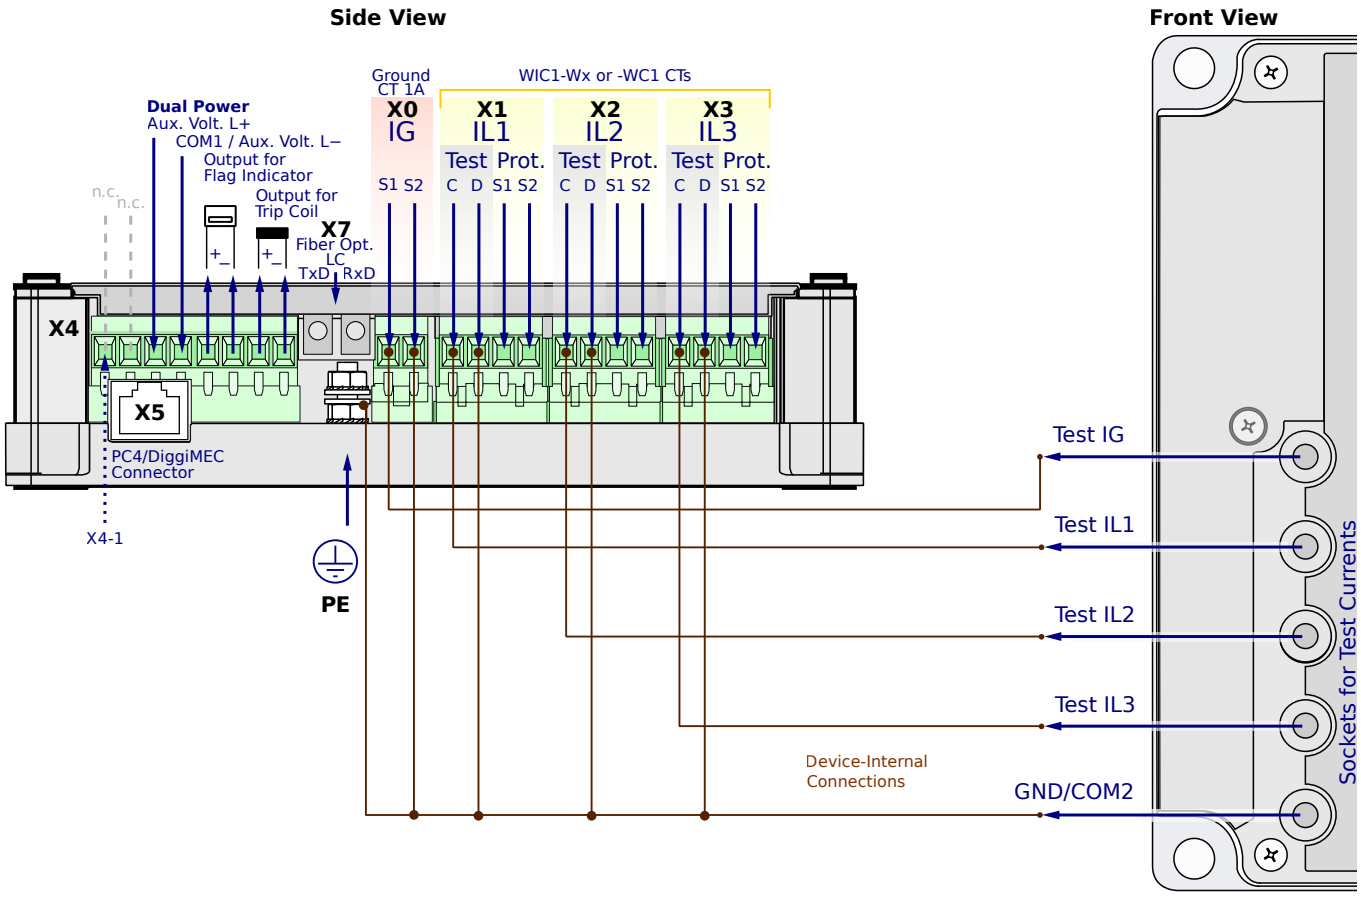


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1AA0

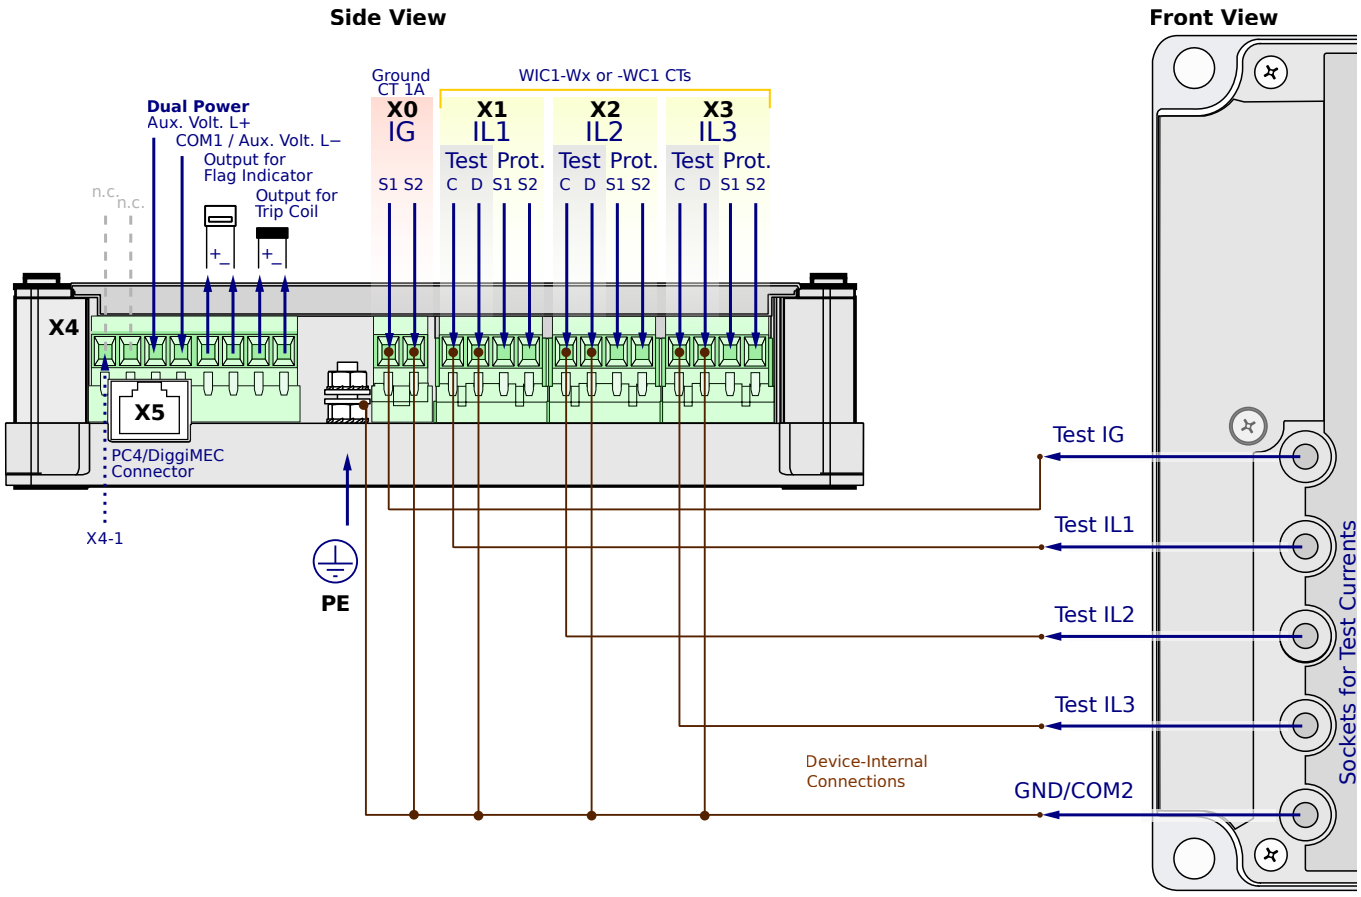


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1AAH

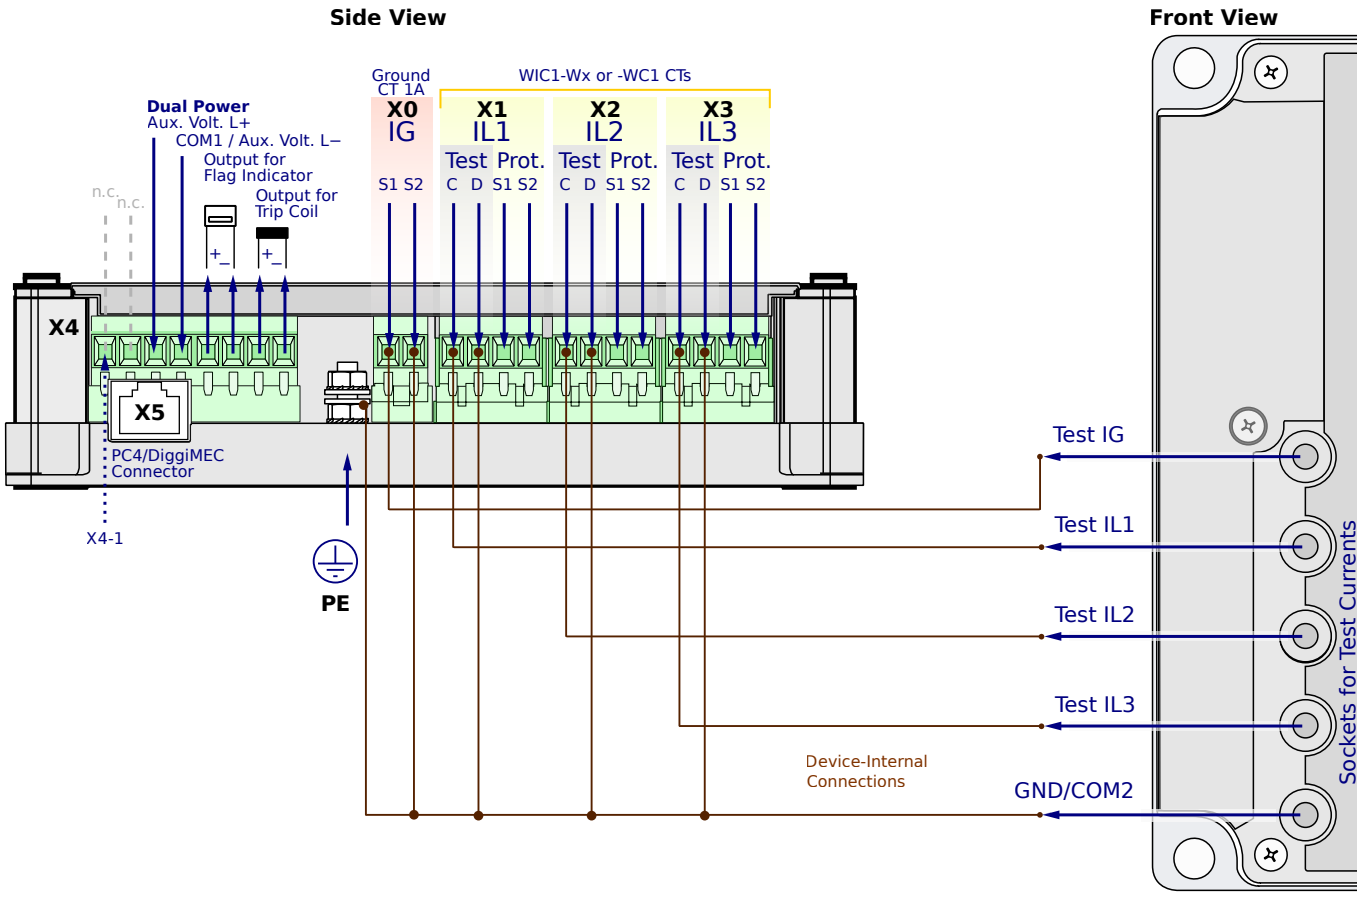


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1AB0

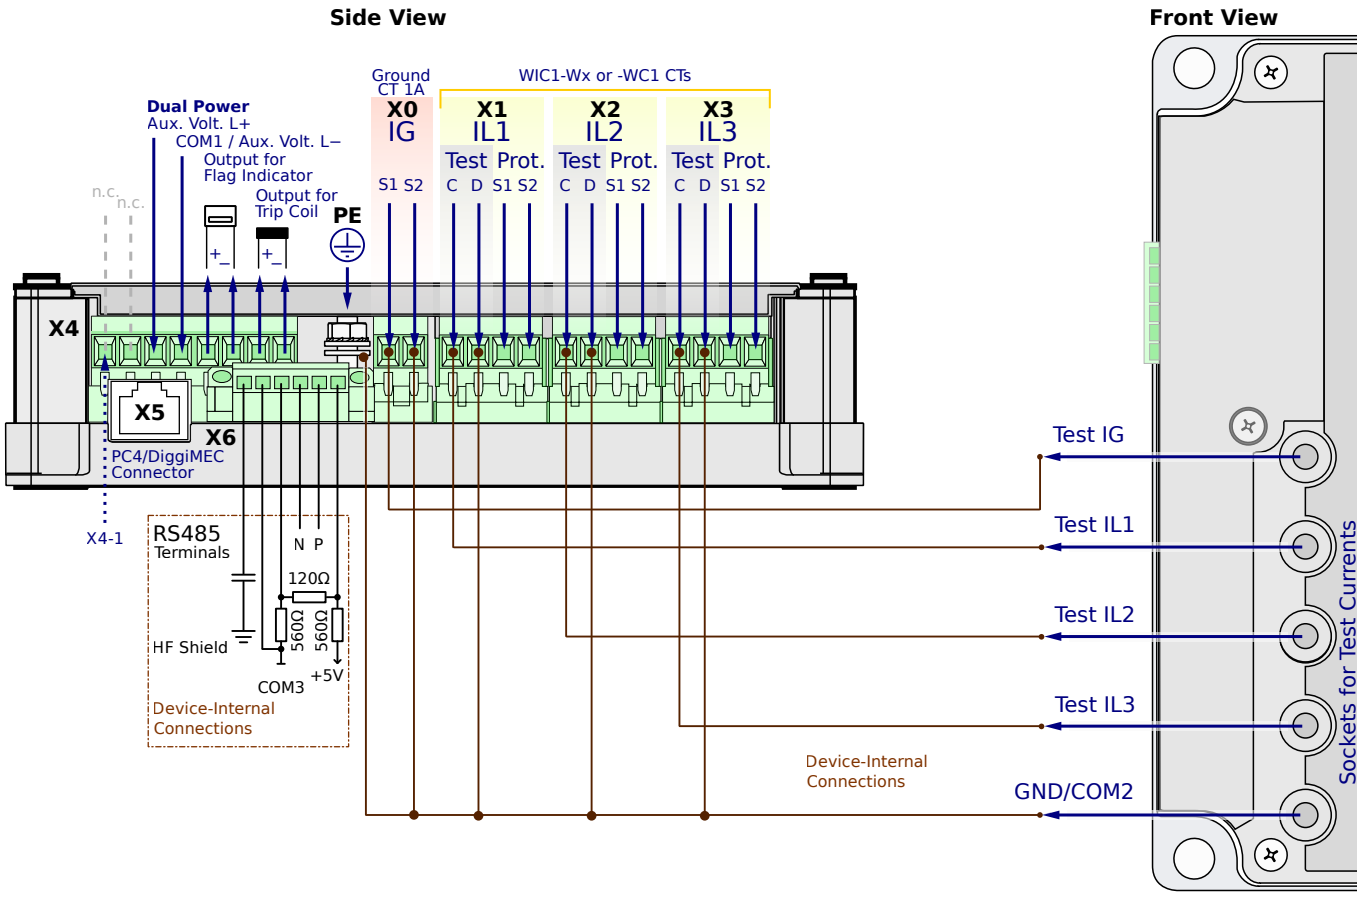


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1ABH

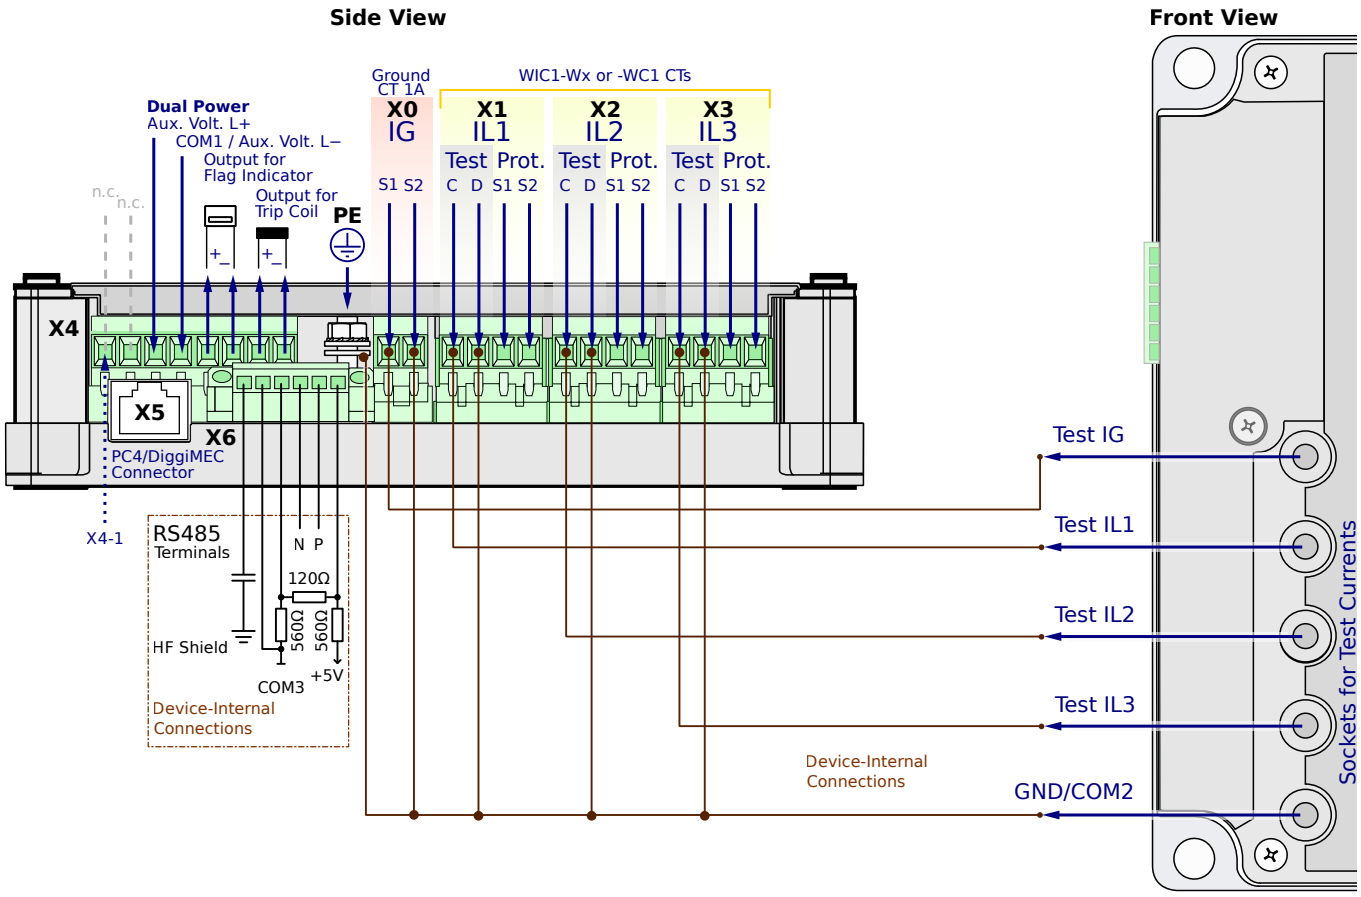


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1AC0

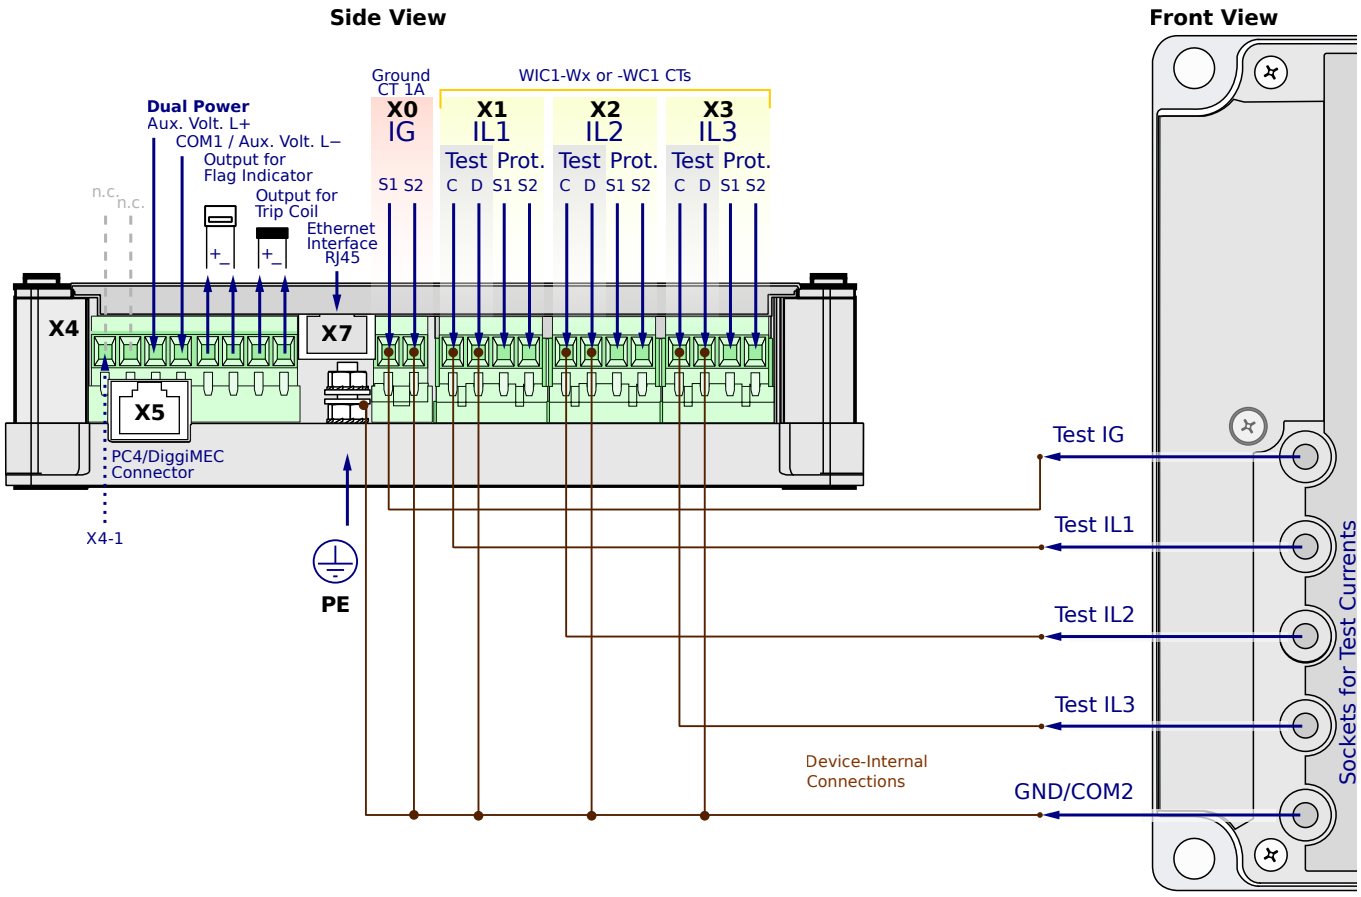


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1ACH

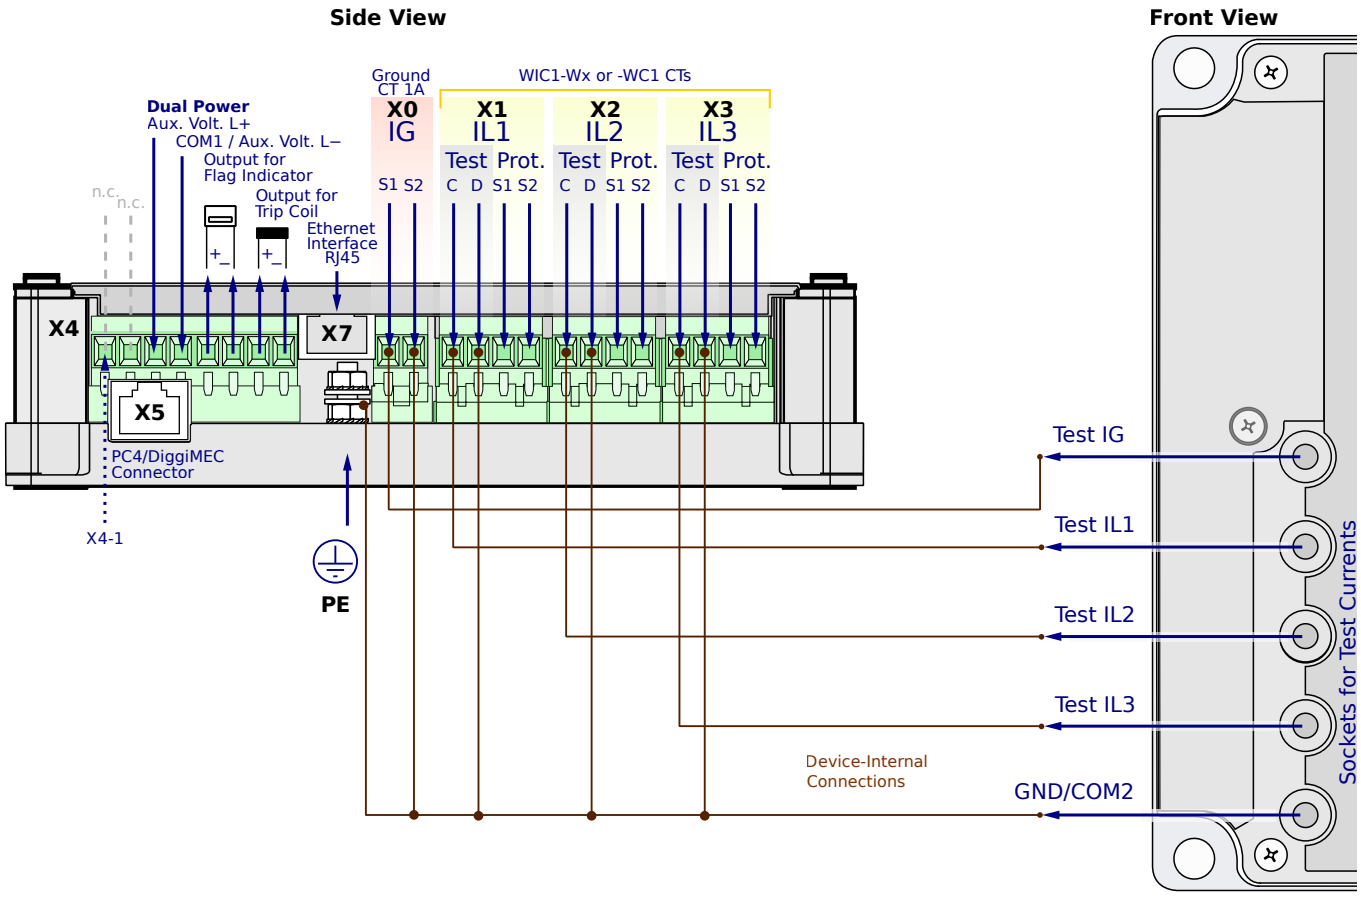


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1AL0

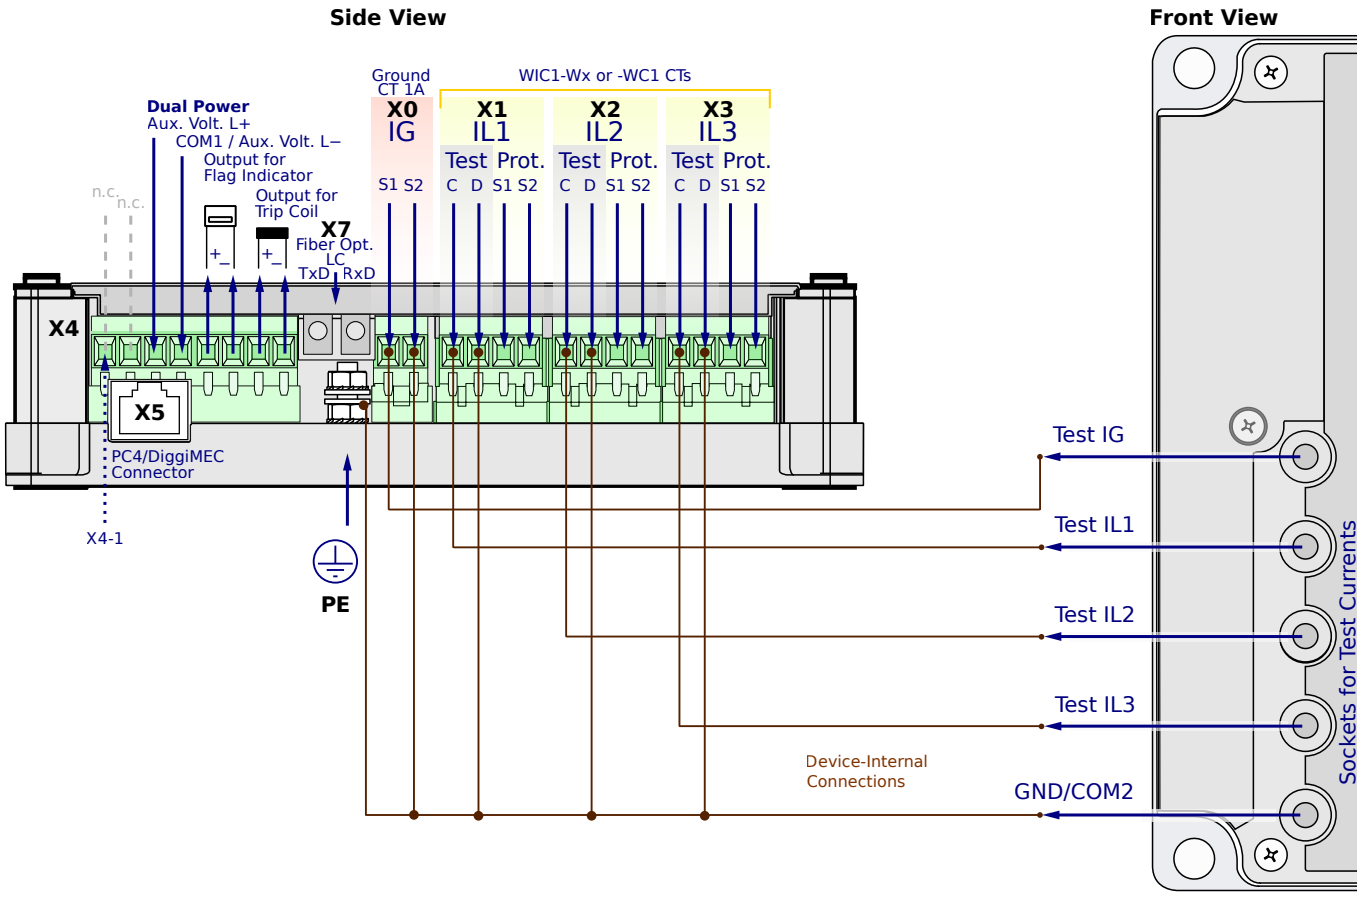


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1ALH

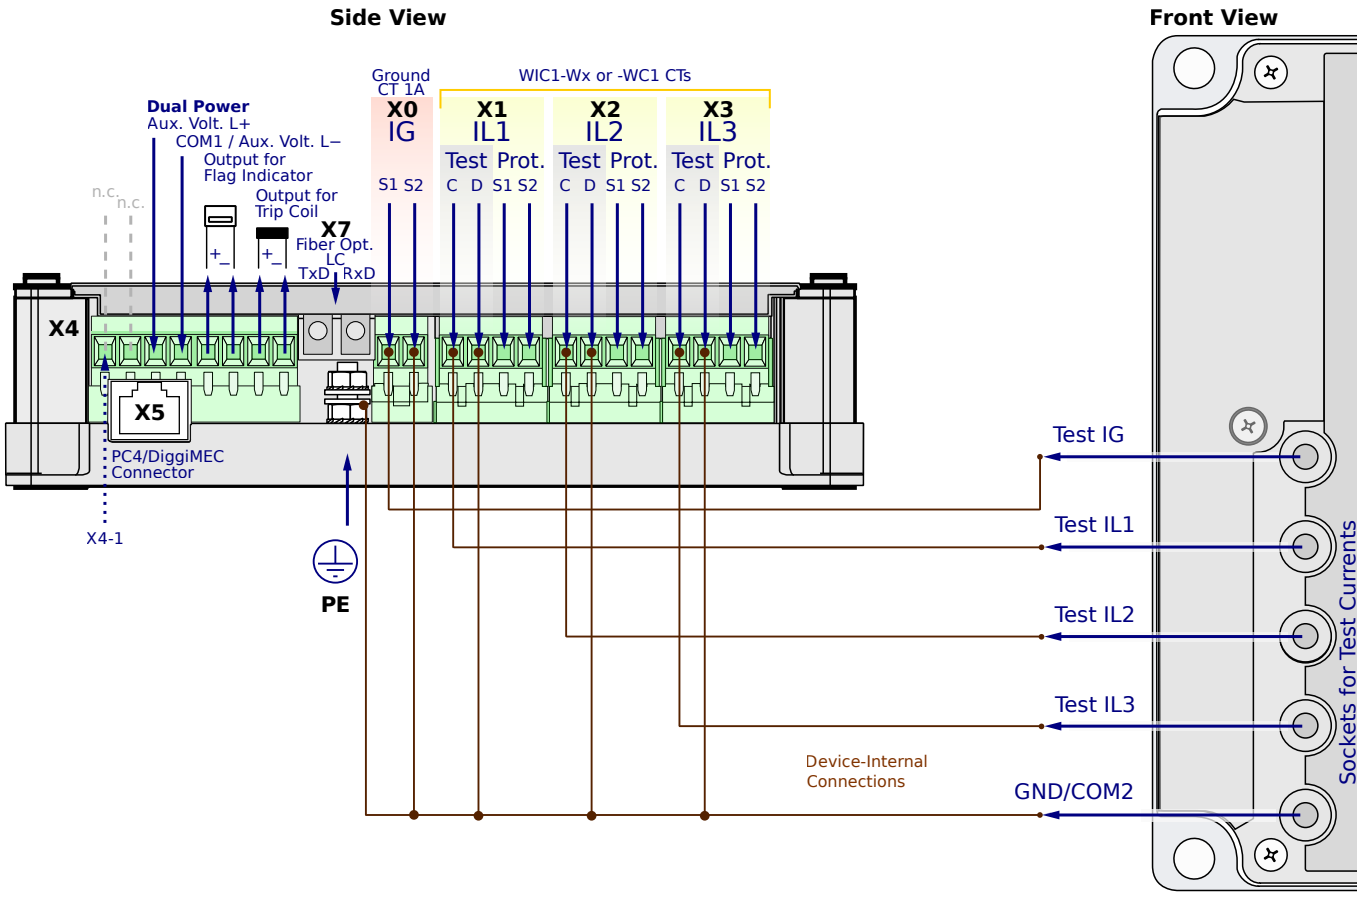


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1PA0

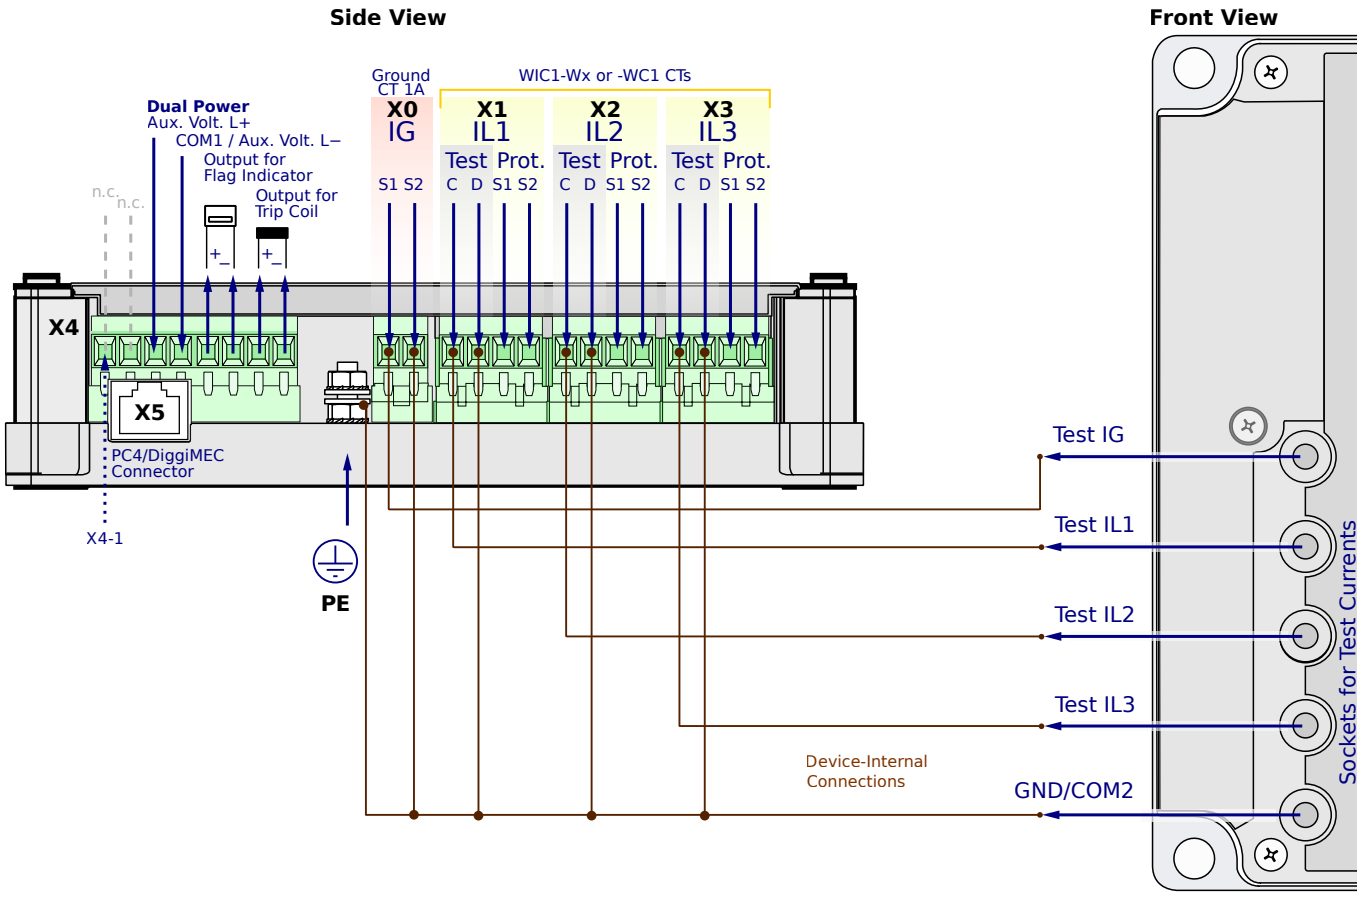


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1PAH

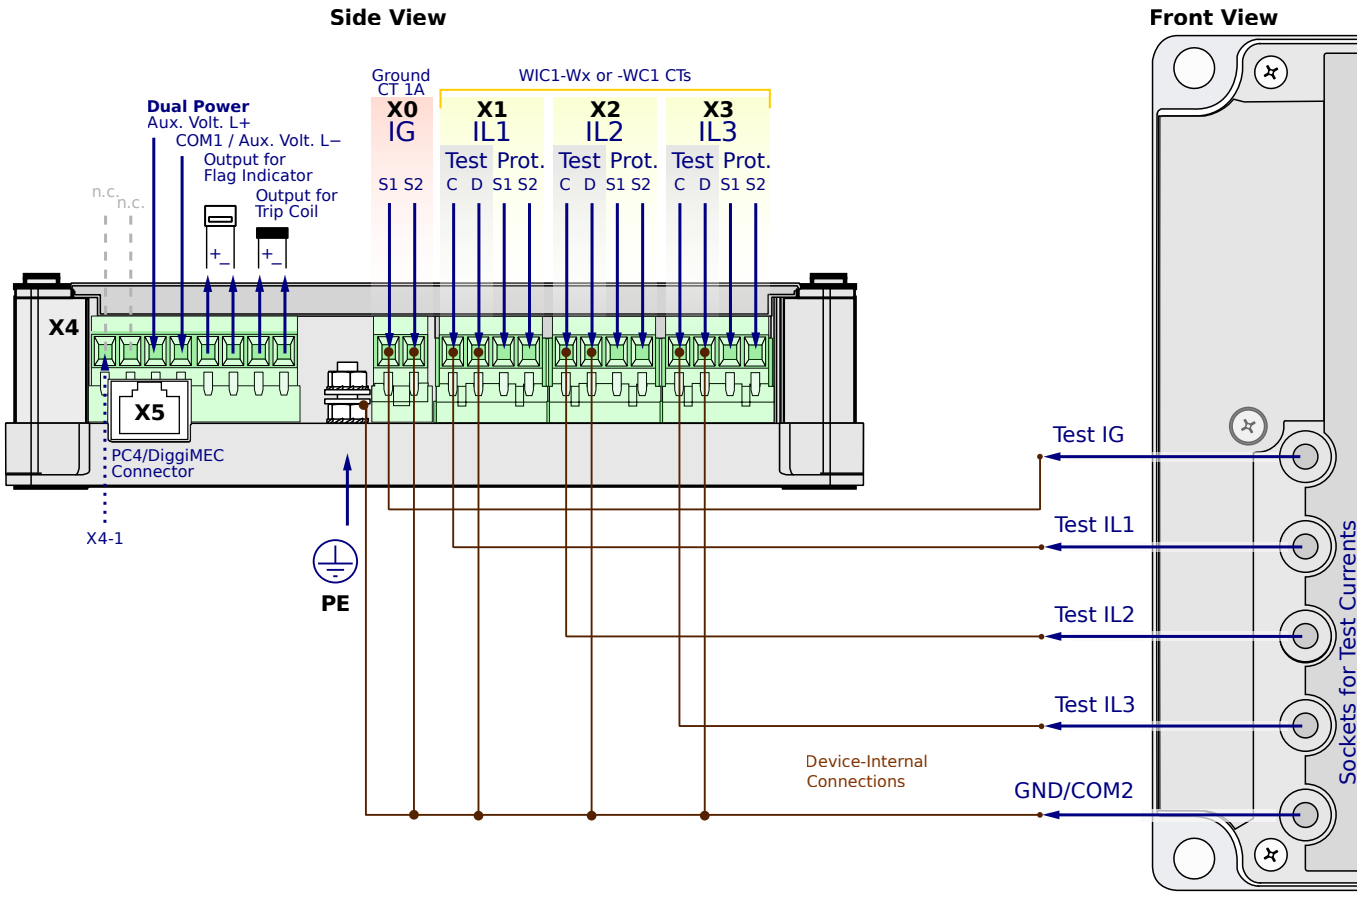


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM1PB0

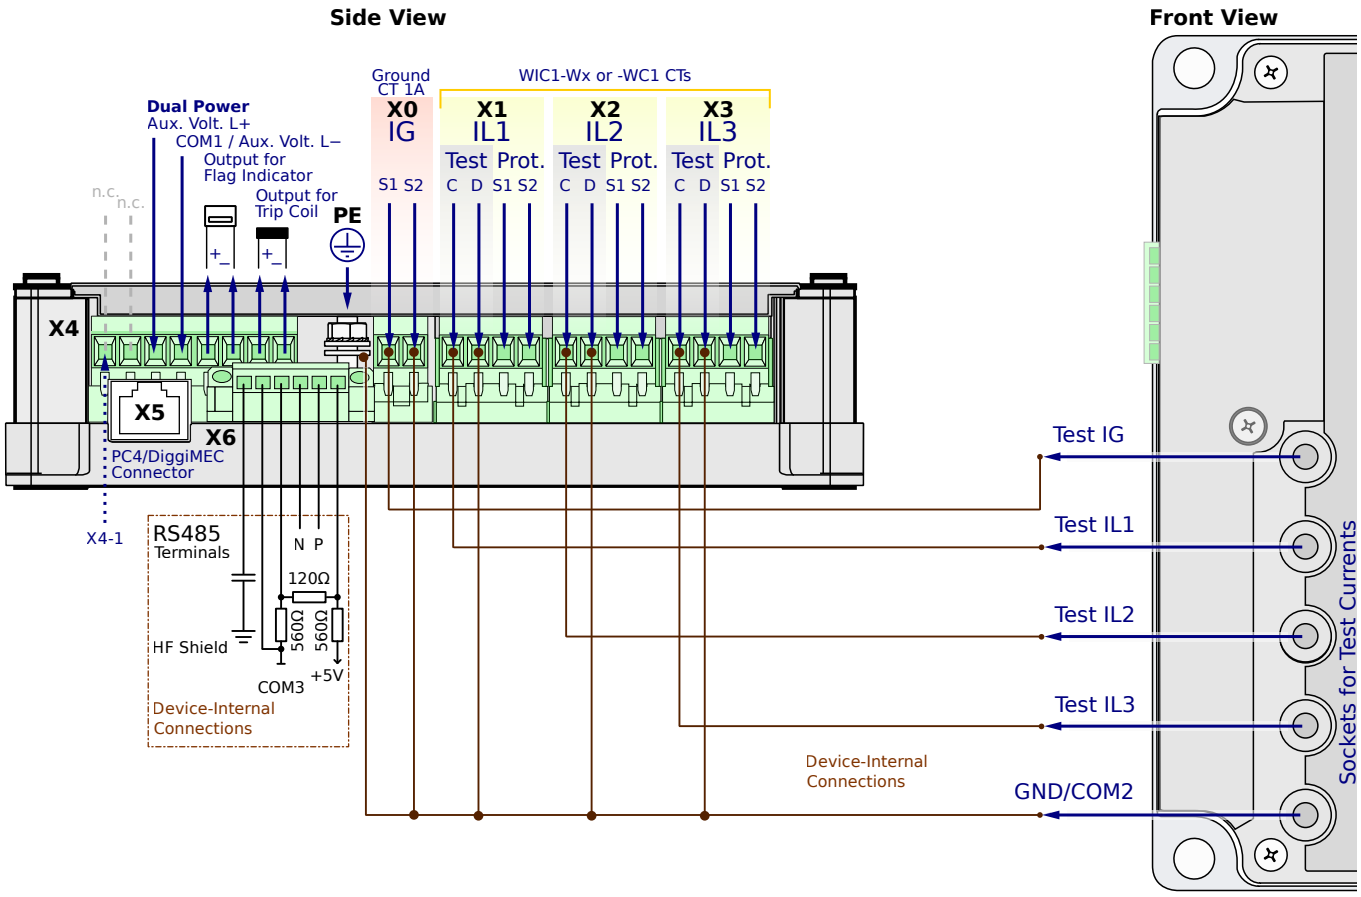


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1PBH

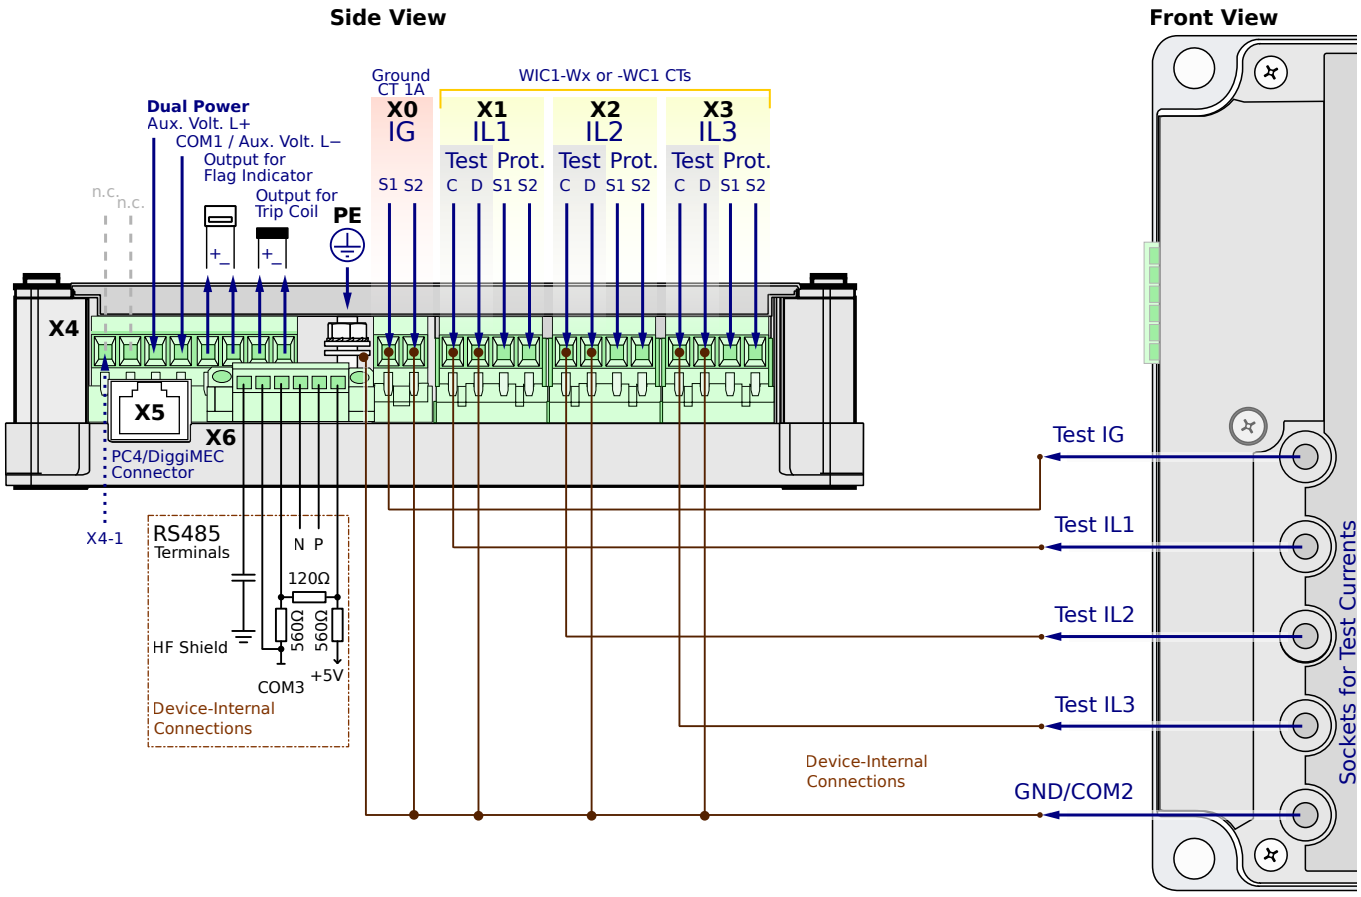


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM1PC0

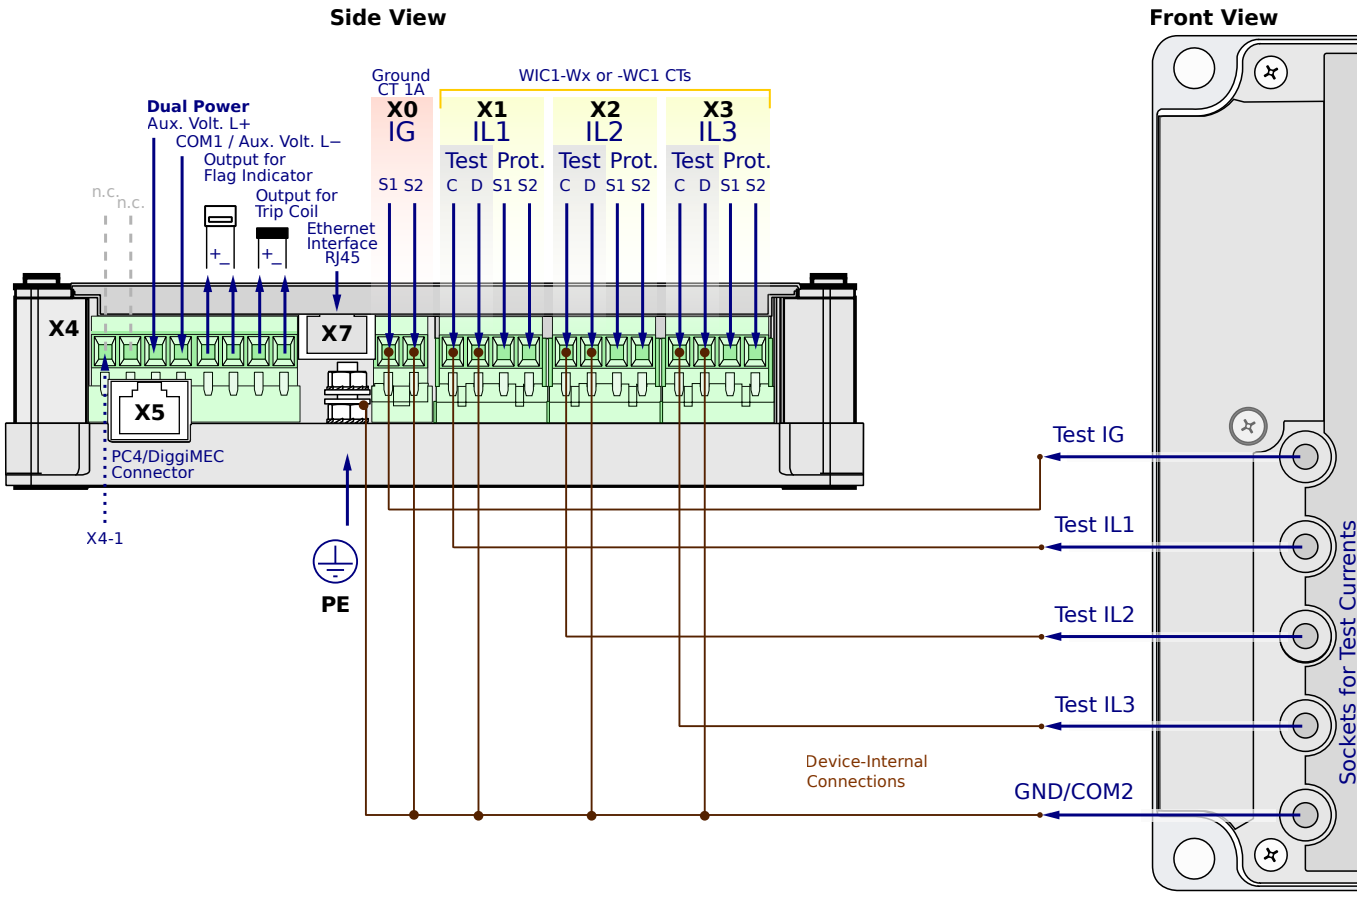


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1PCH

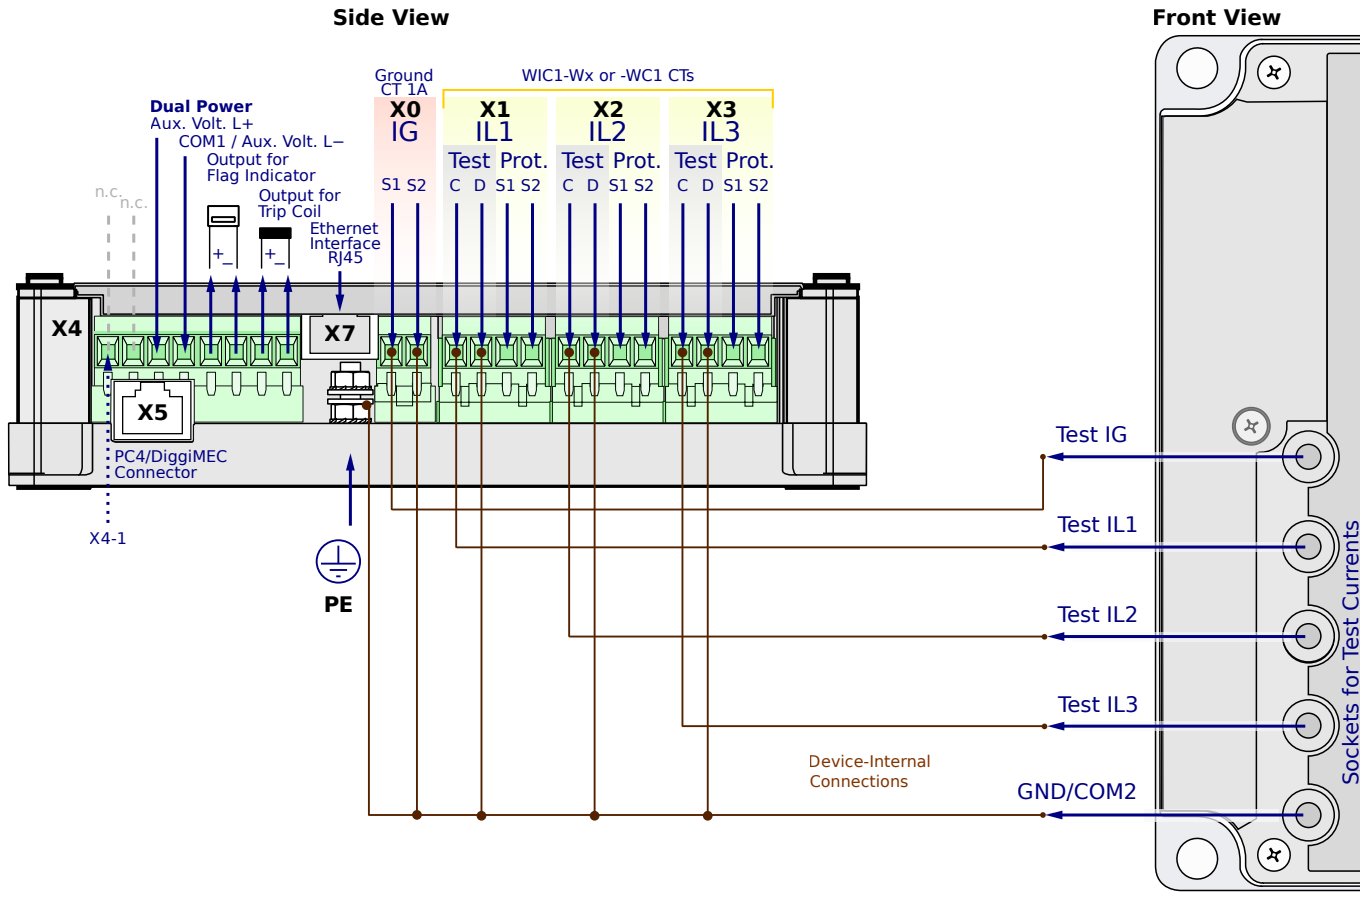


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM1PL0

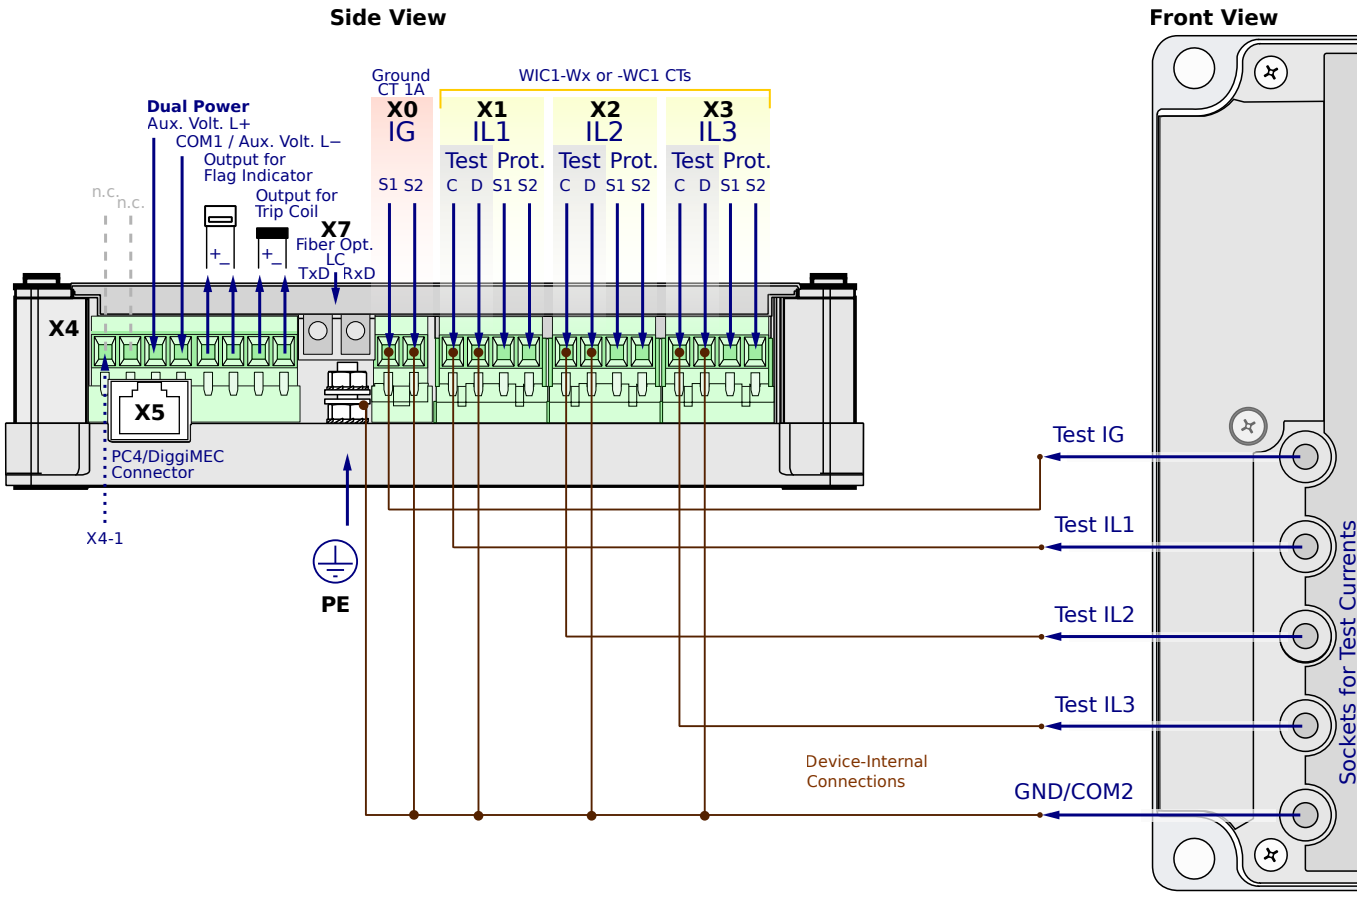


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM1PLH

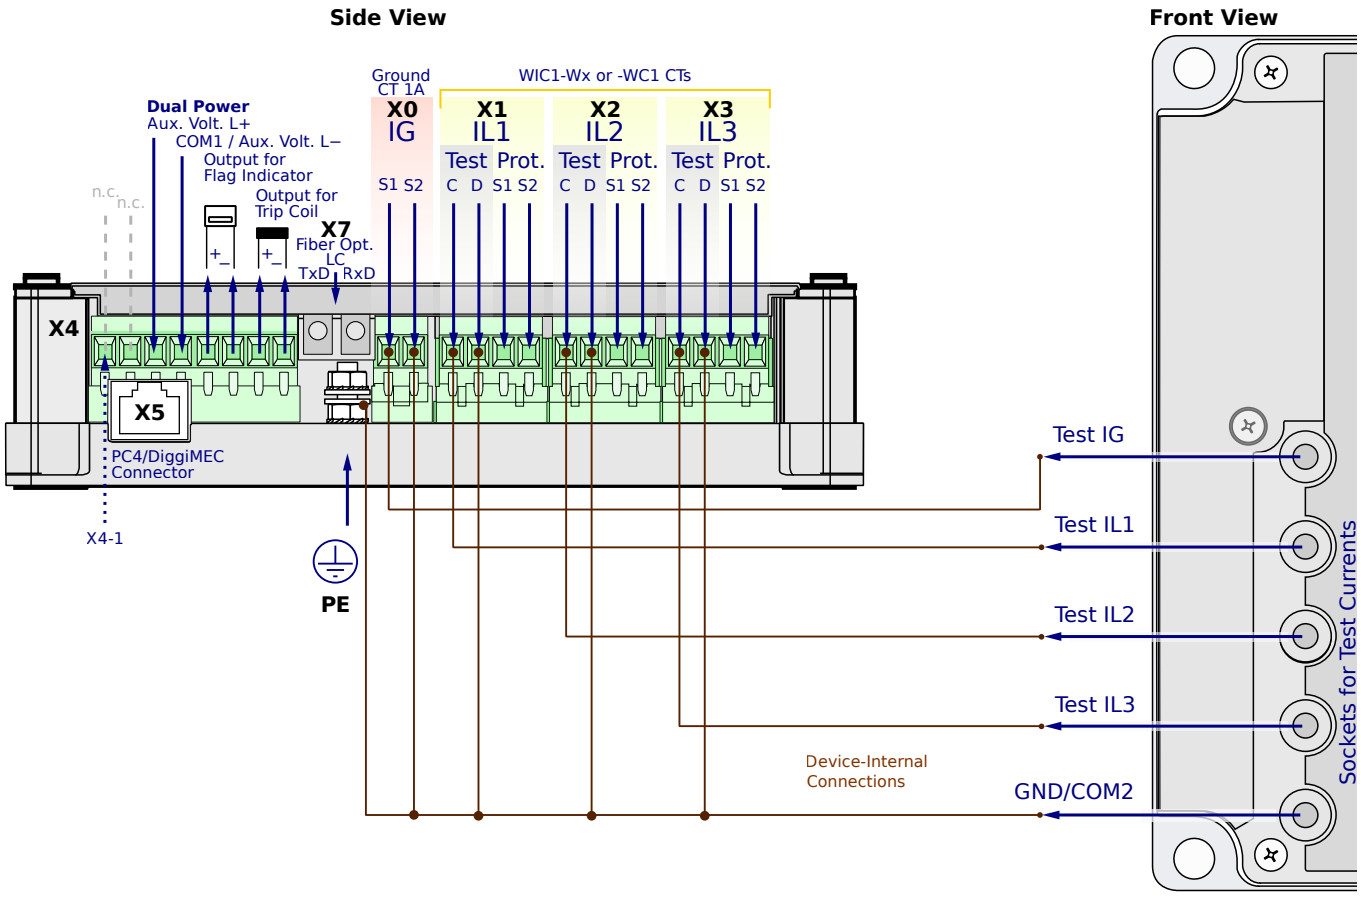


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2SA0

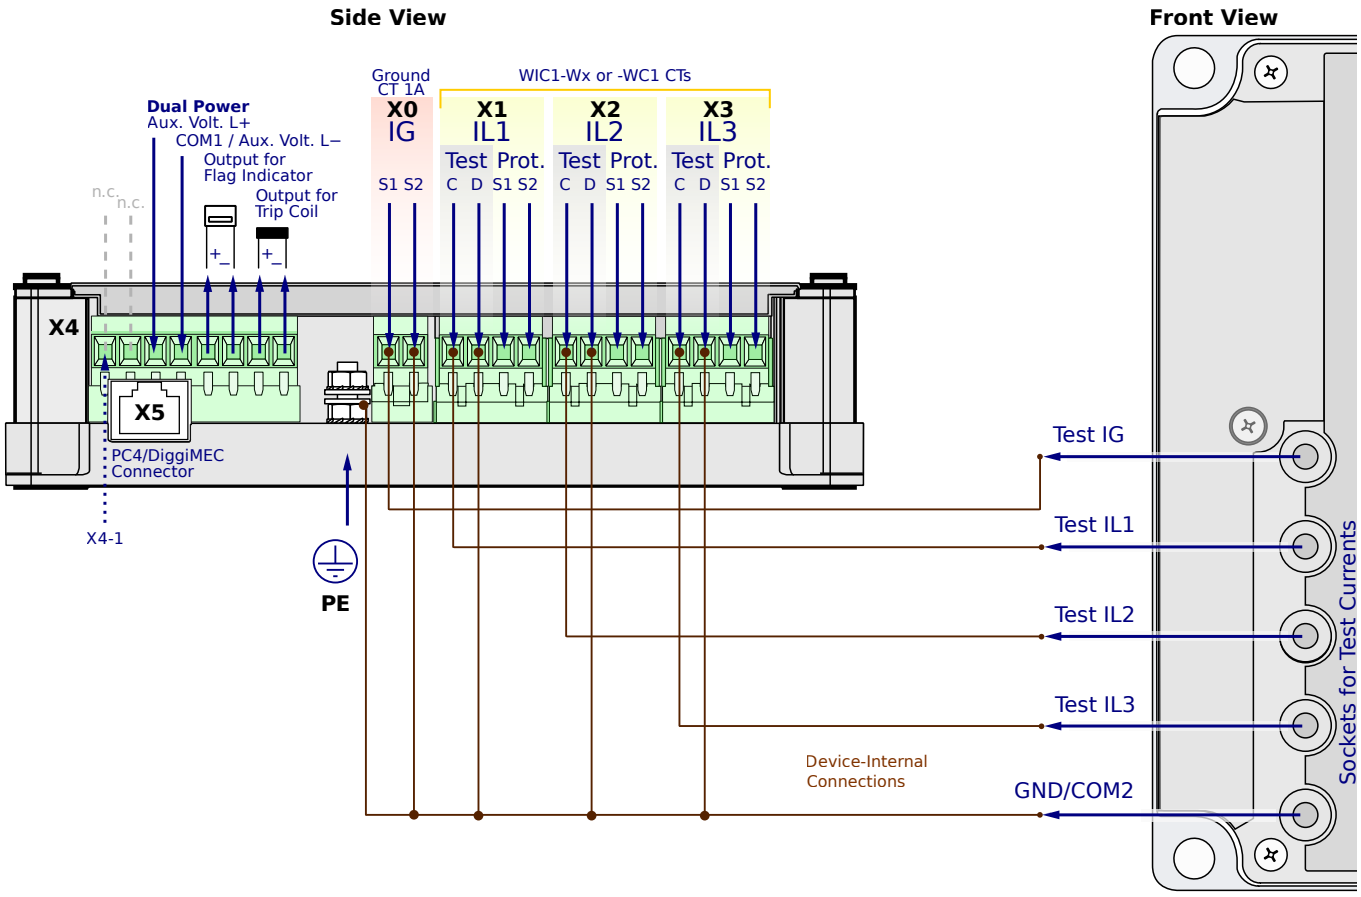


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2SAH

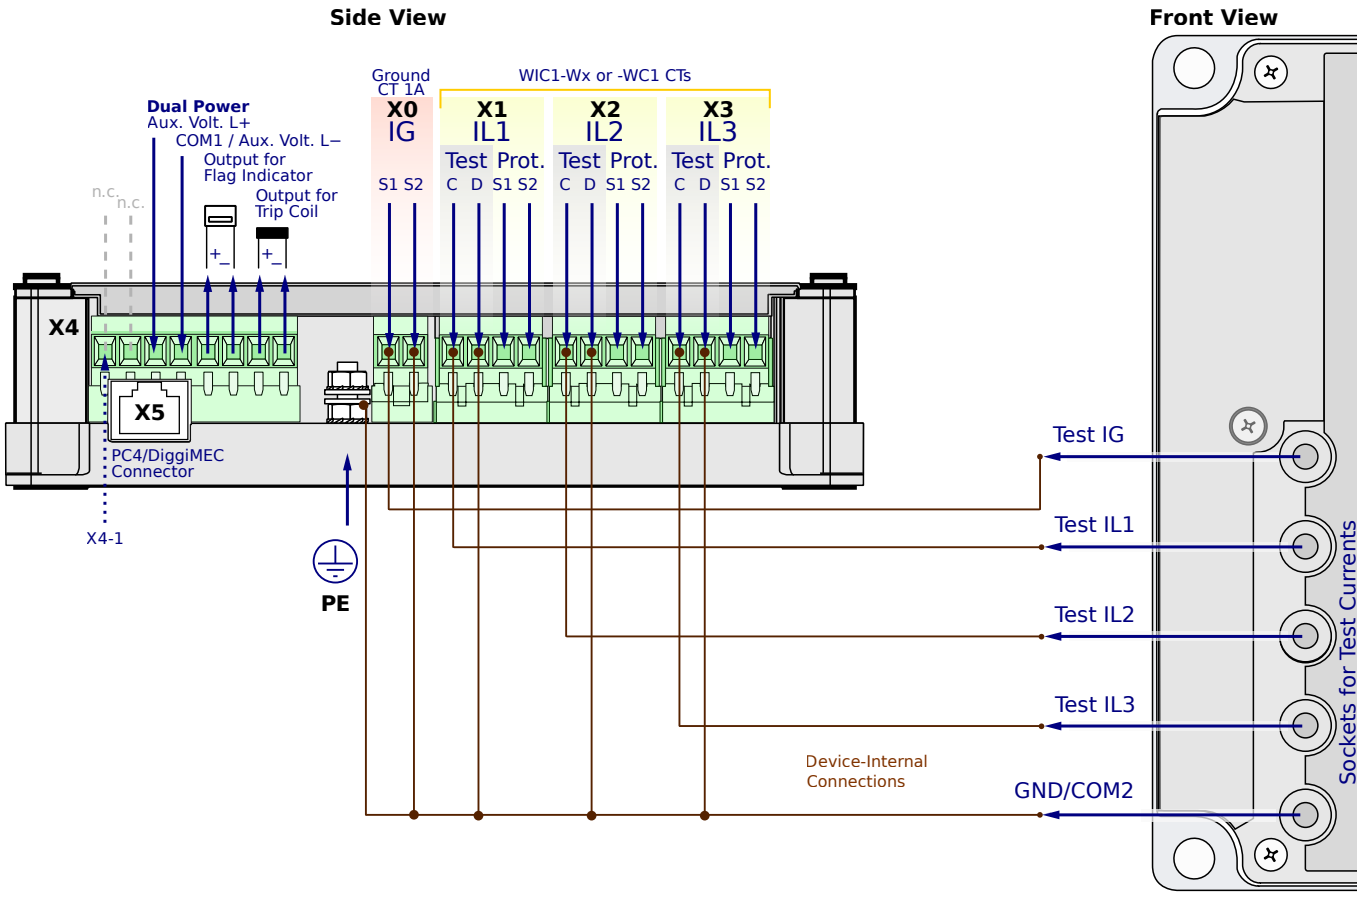


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2SB0

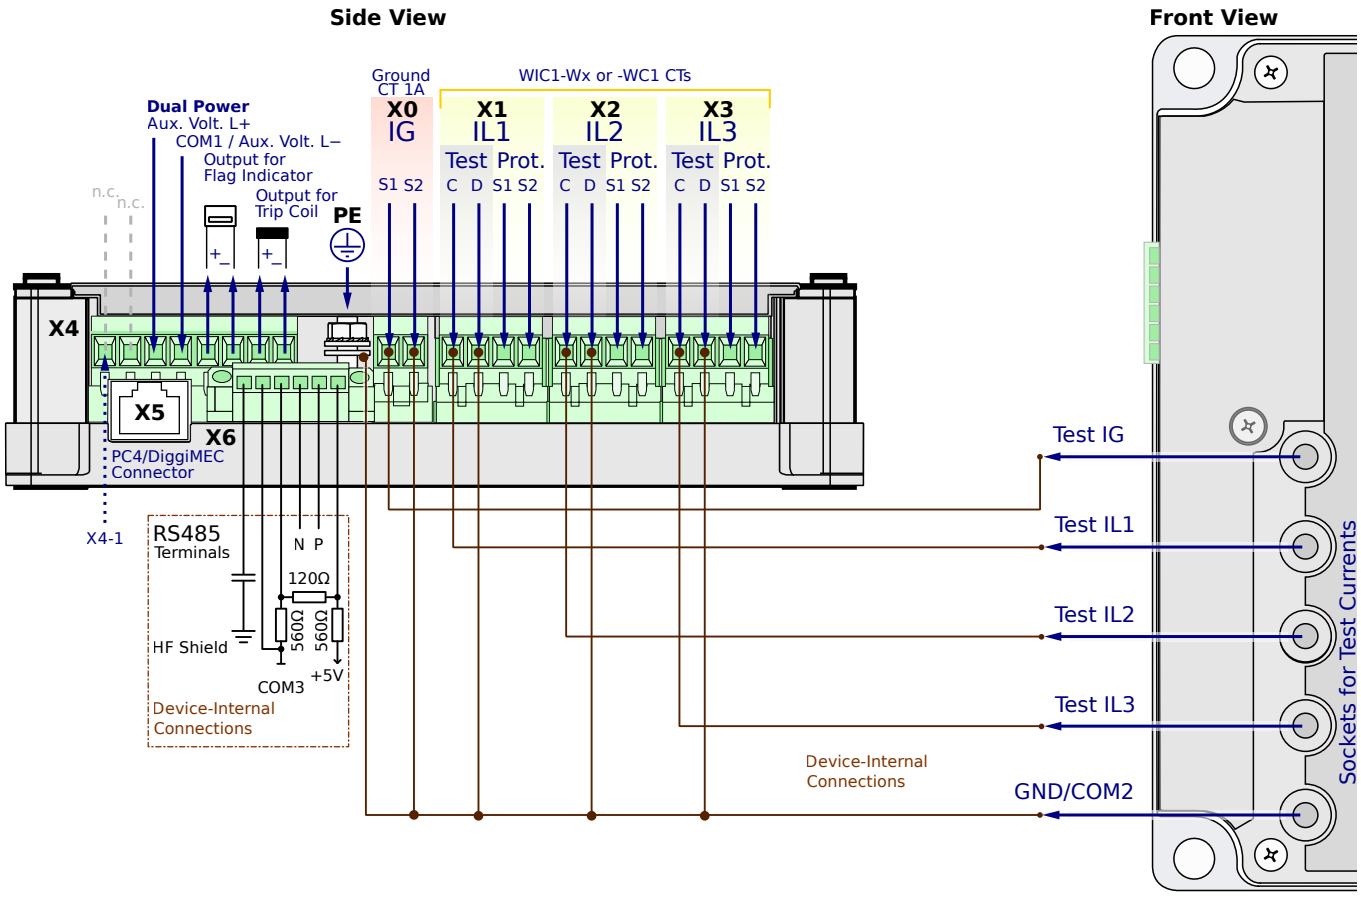


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2SBH

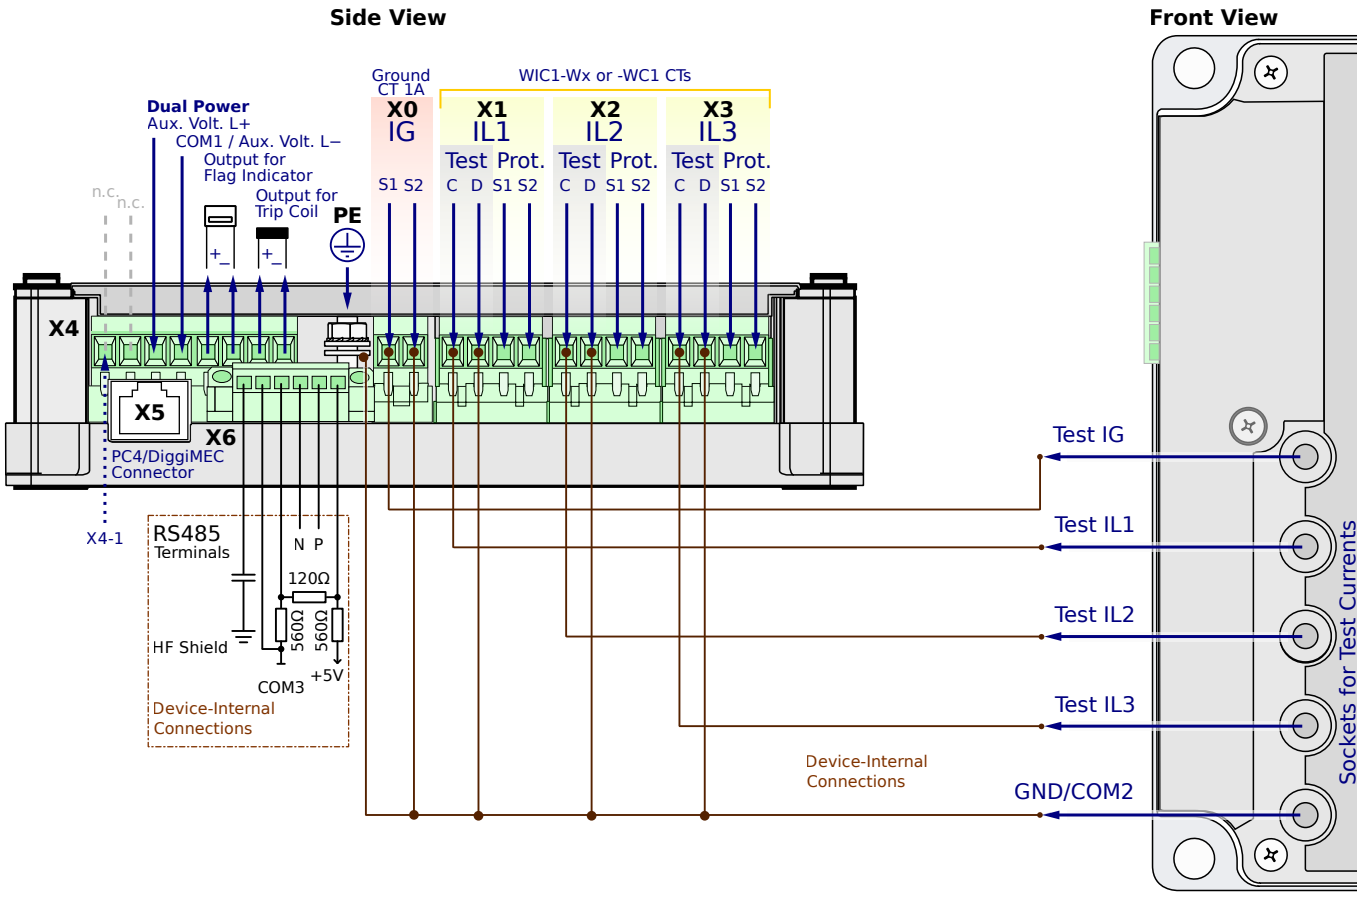


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2SC0

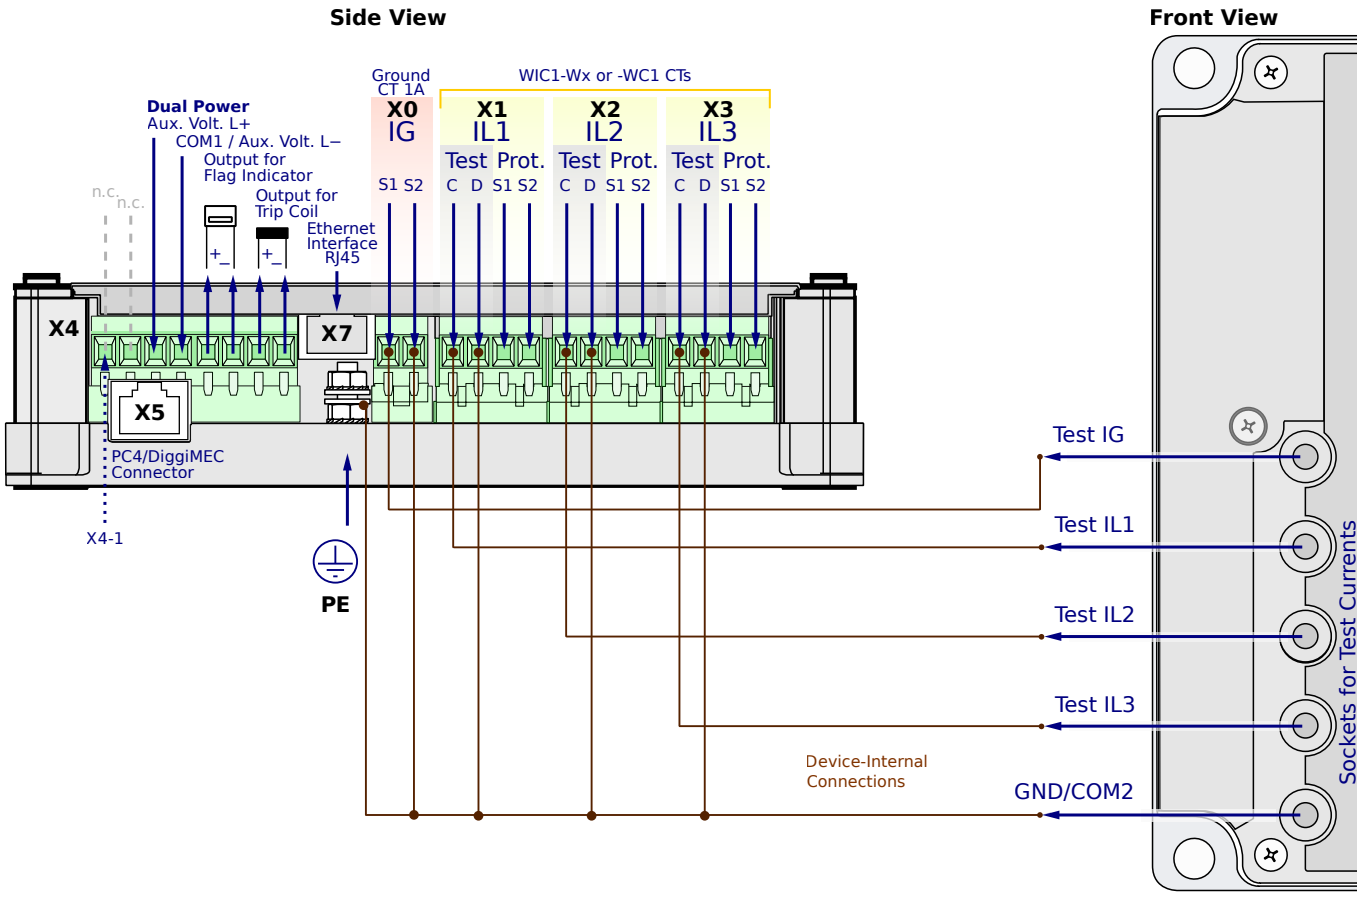


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2SCH

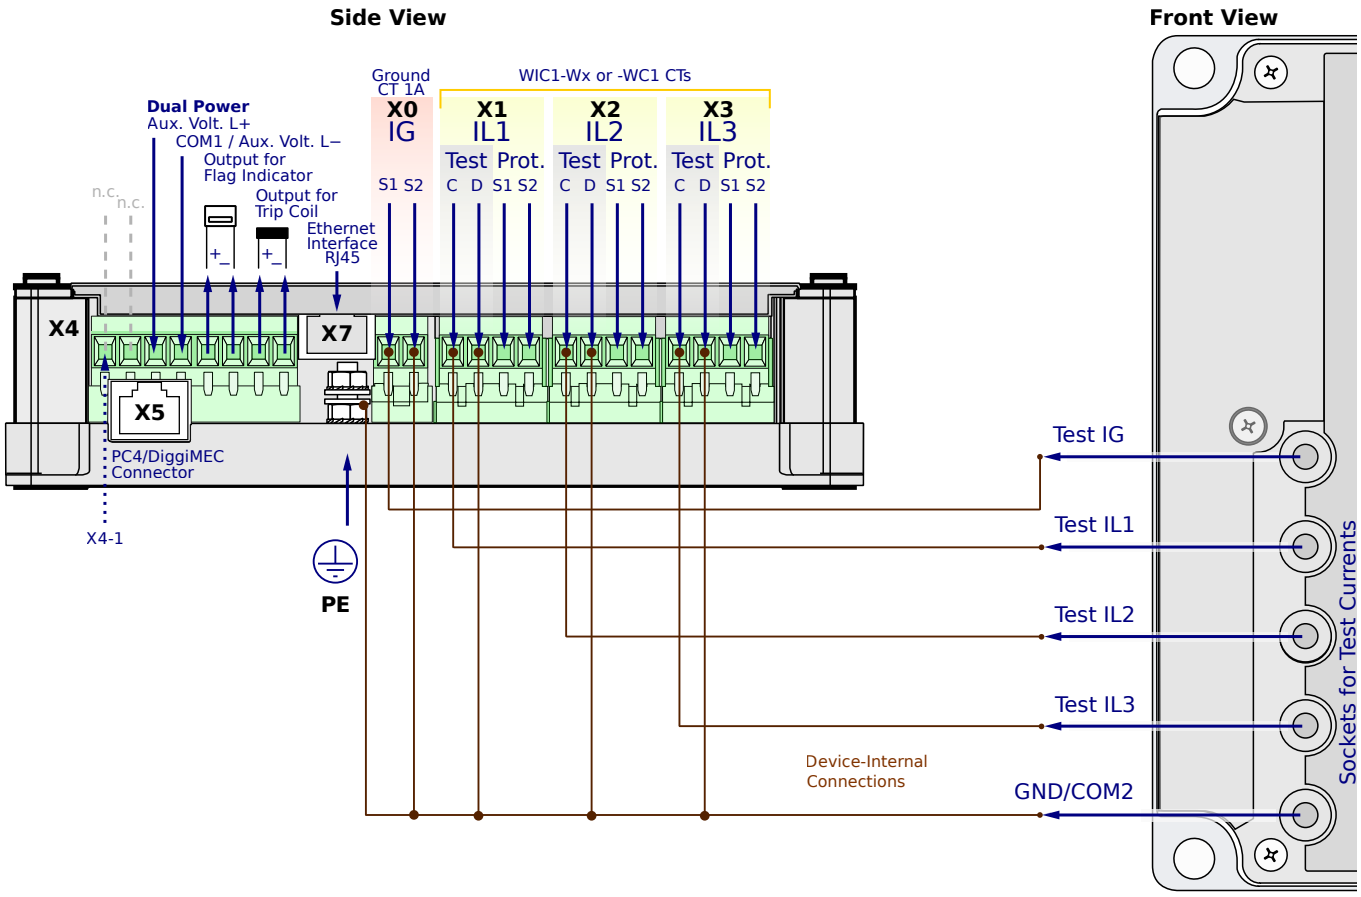


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2SL0

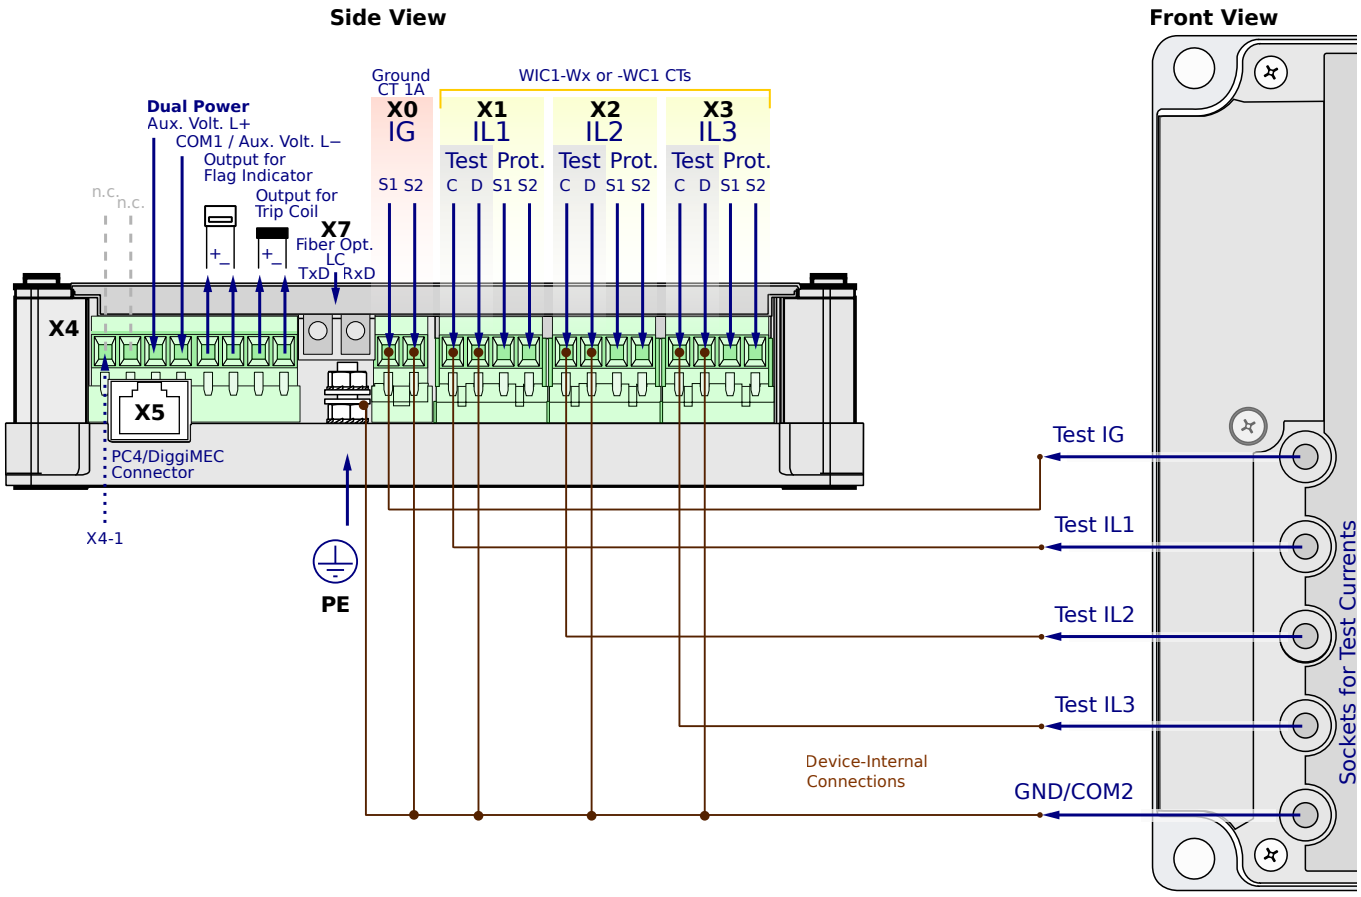


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2SLH

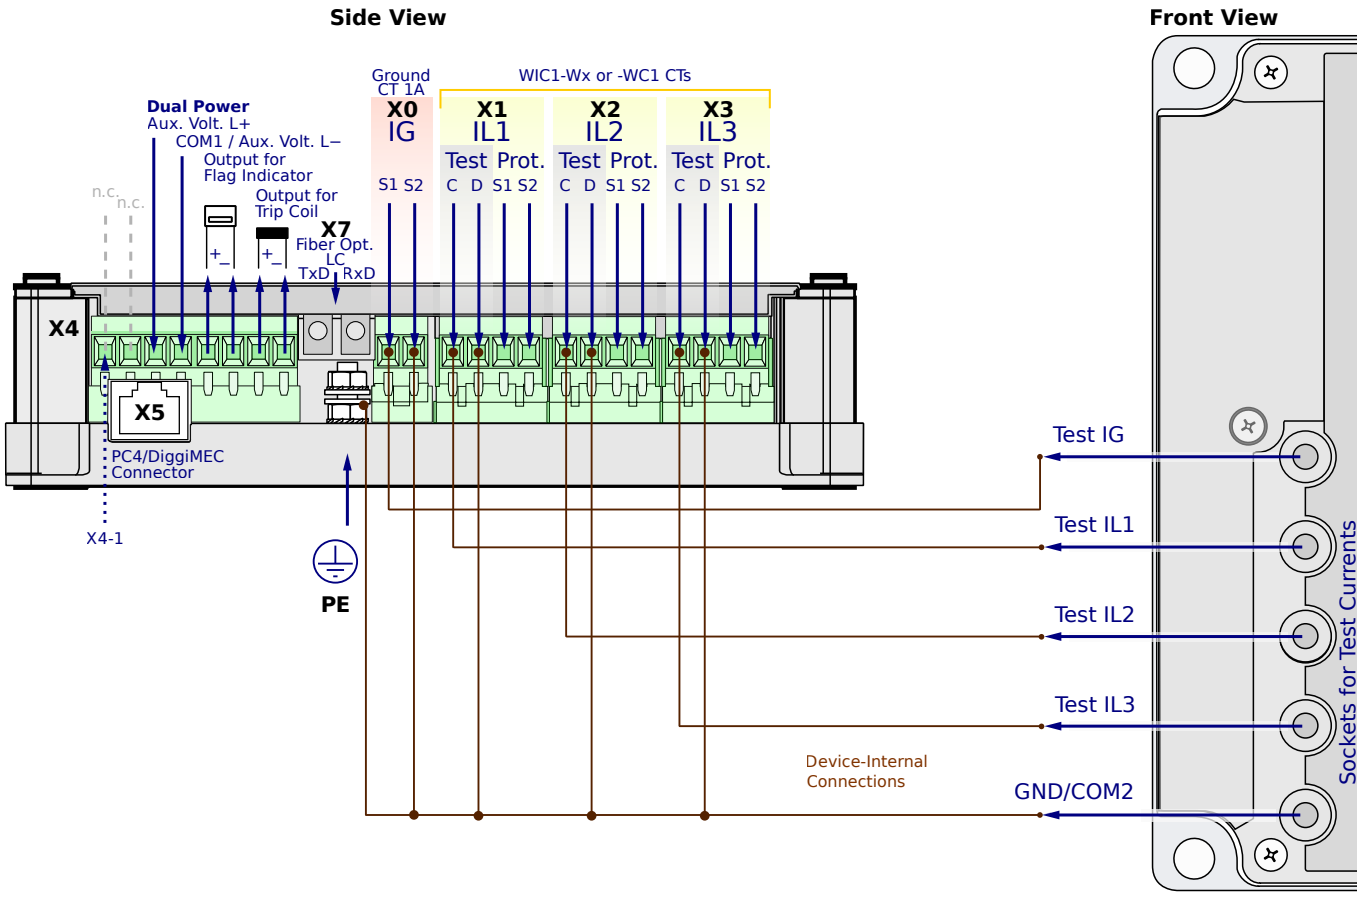


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2AA0

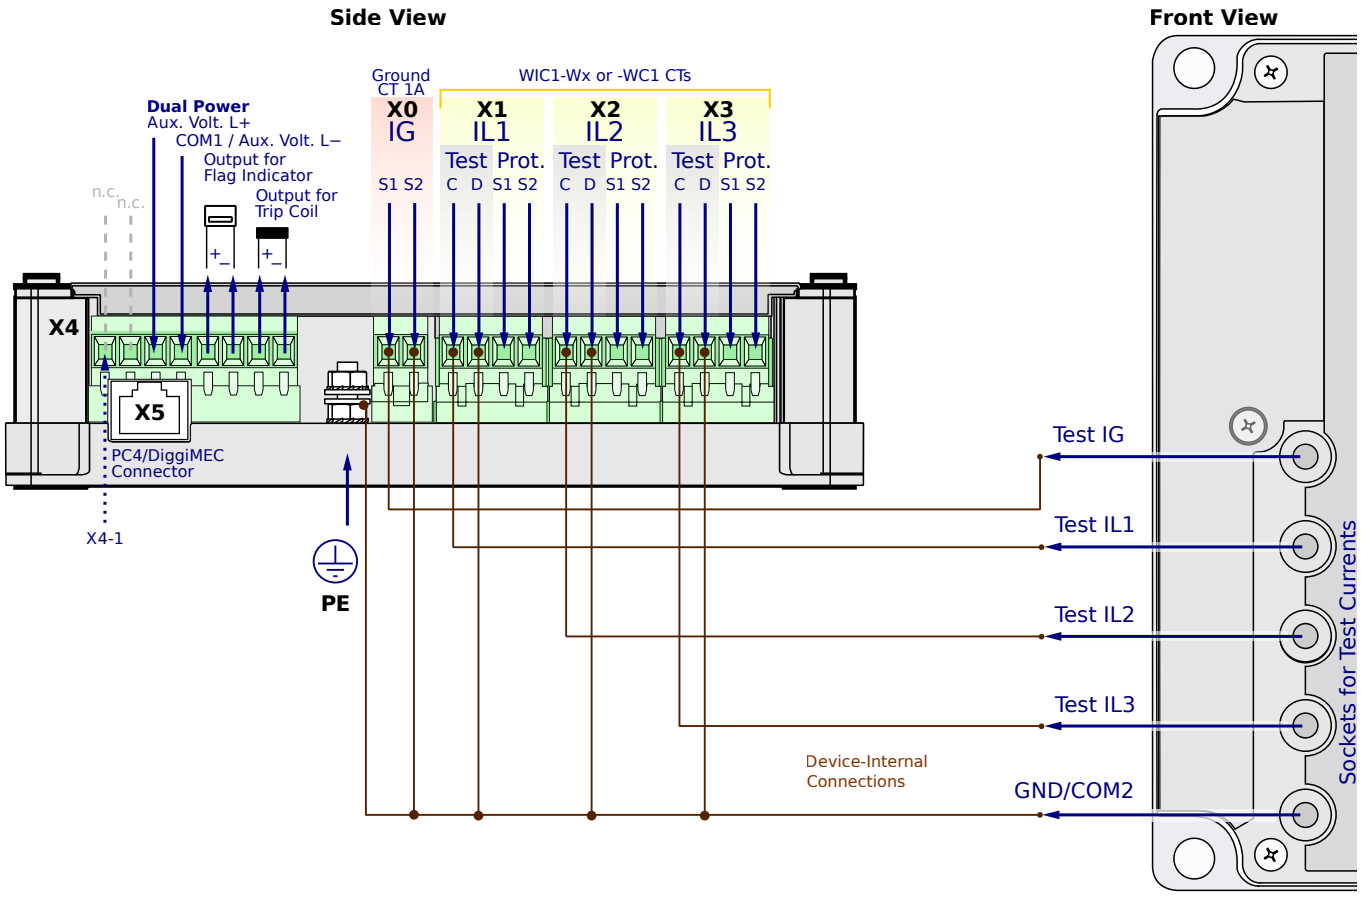


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2AAH

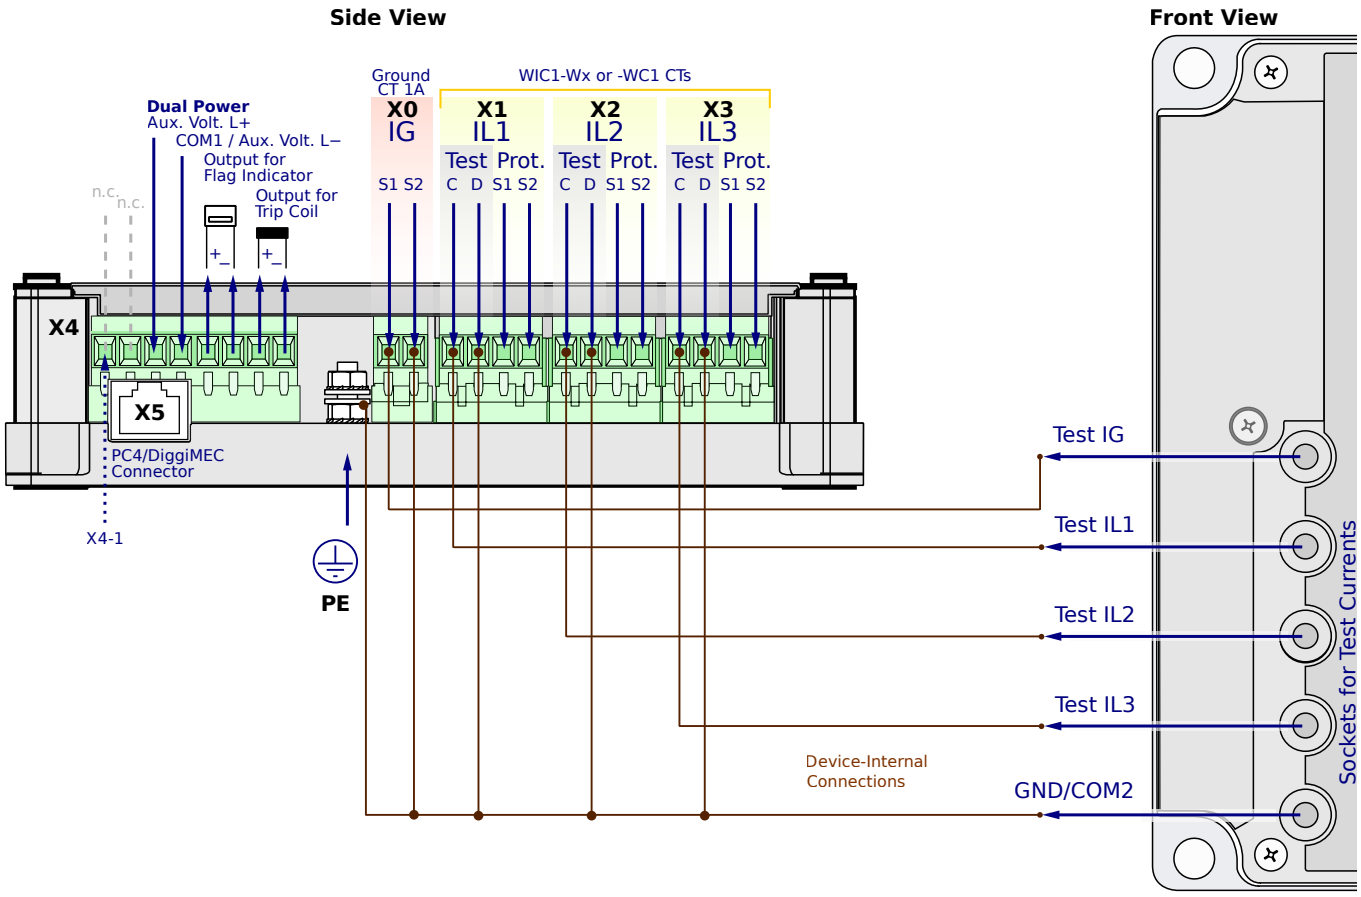


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2AB0

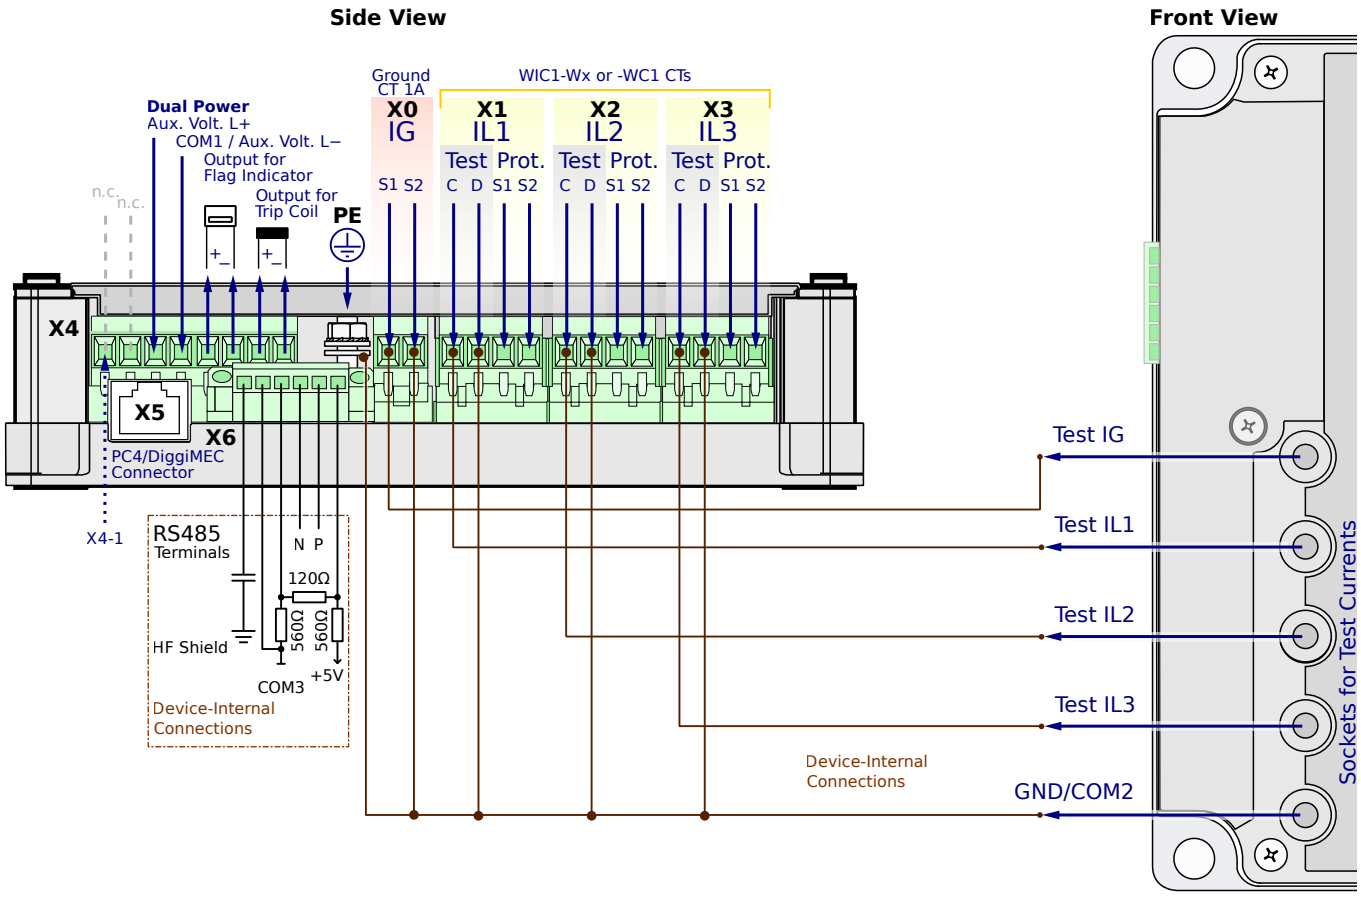


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2ABH

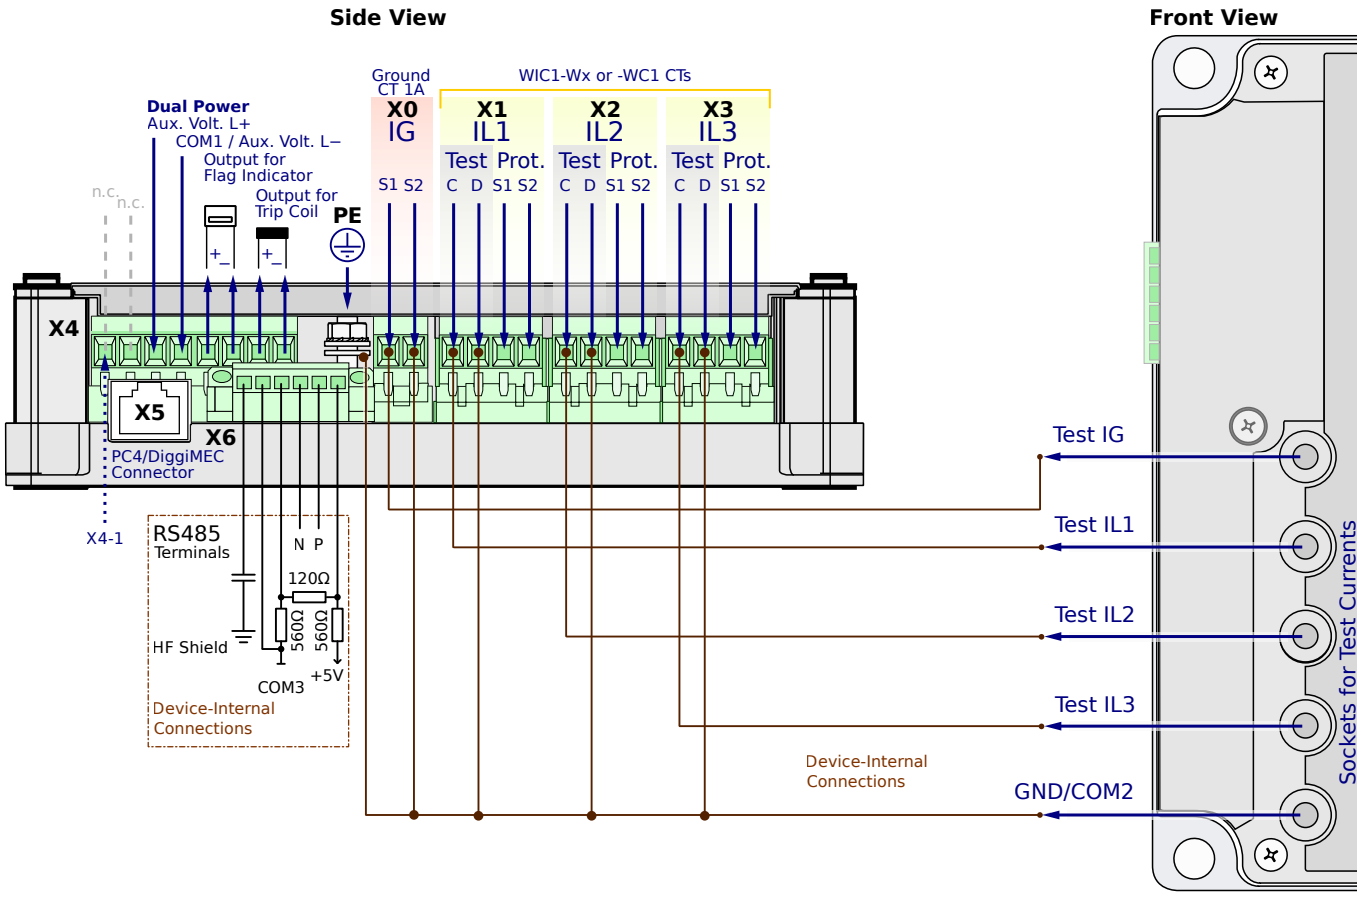


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2AC0

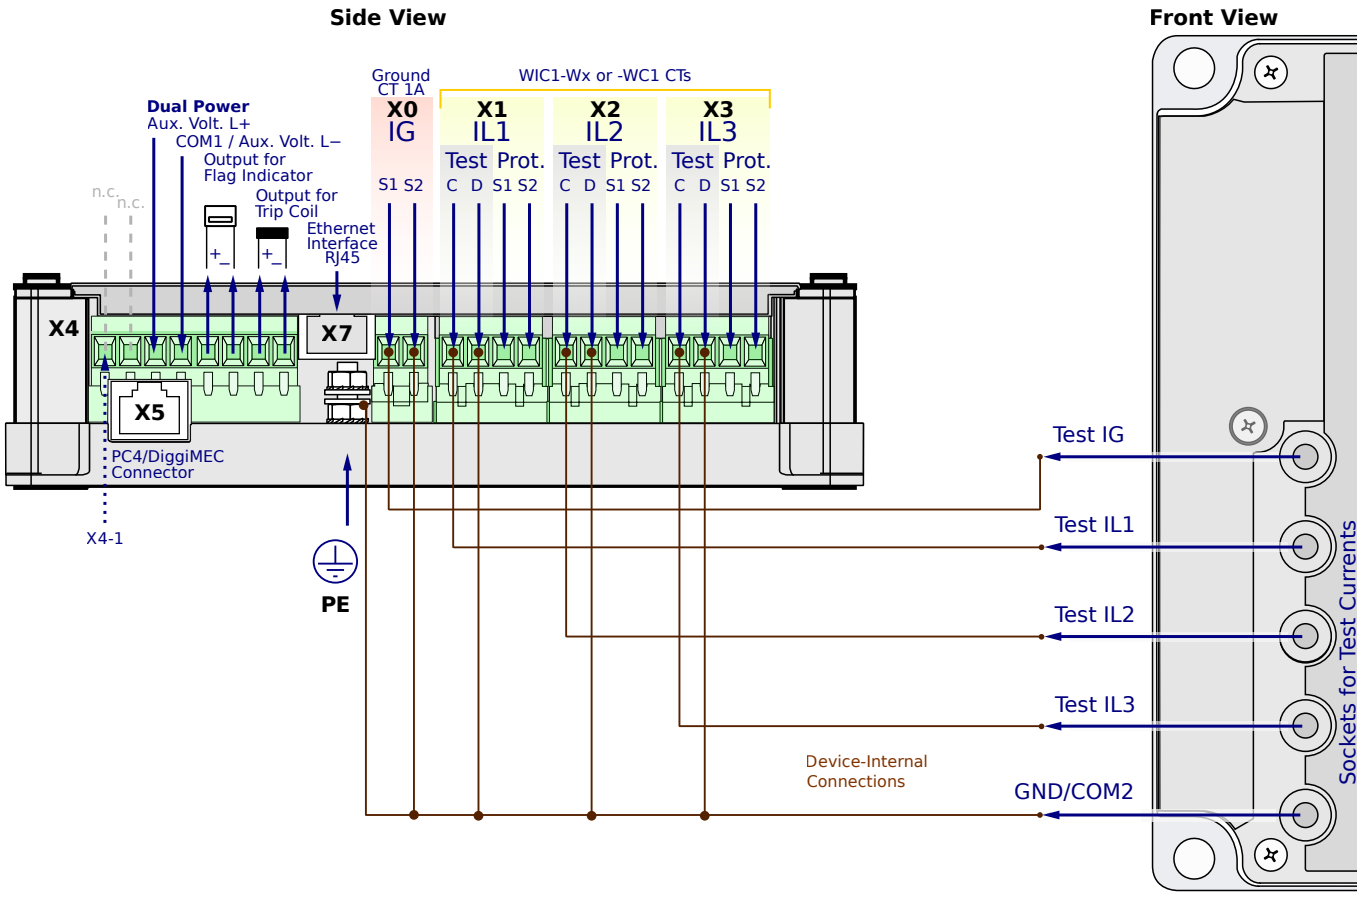


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2ACH

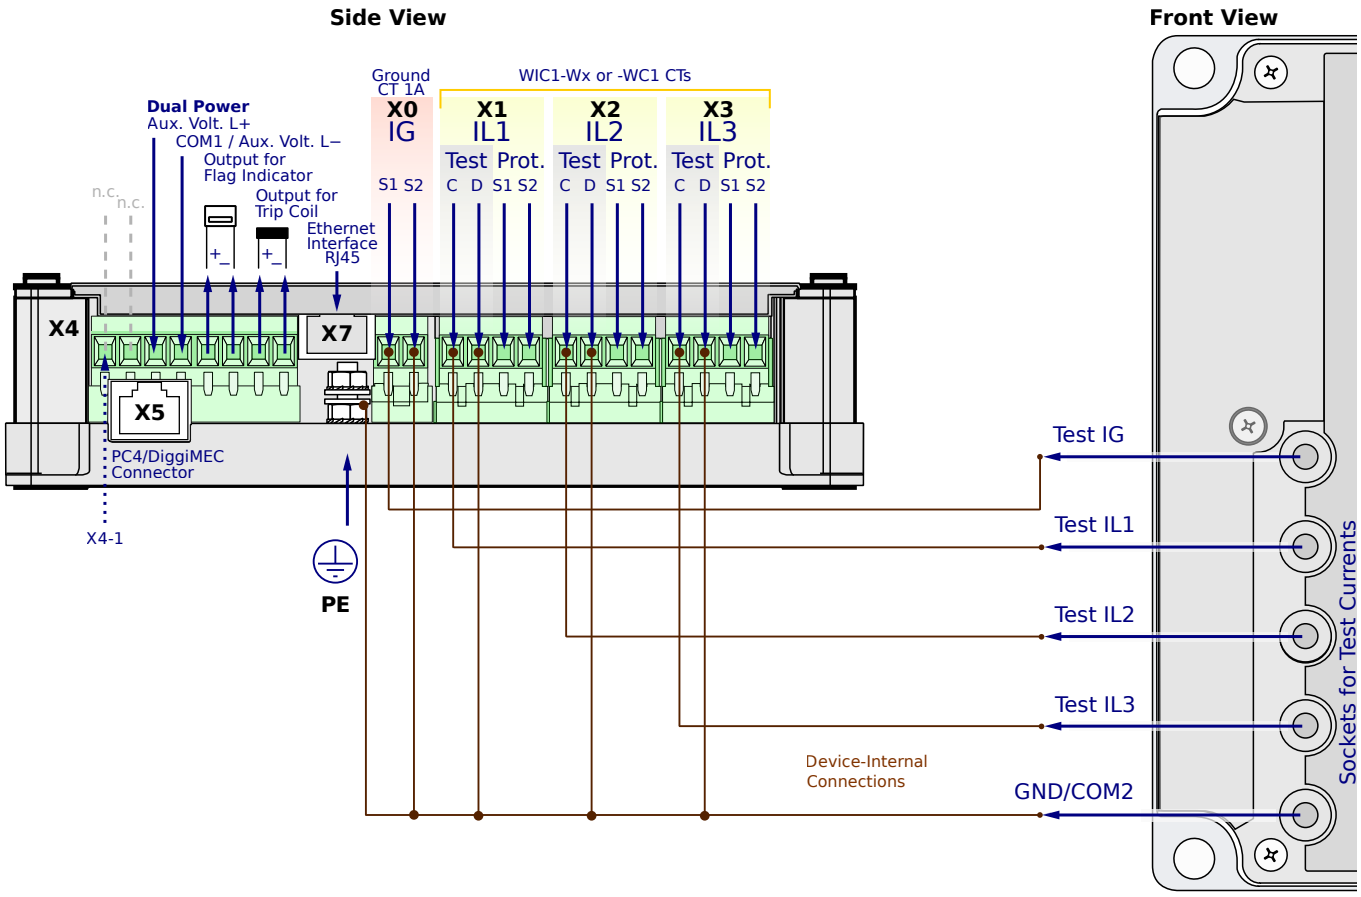


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2AL0

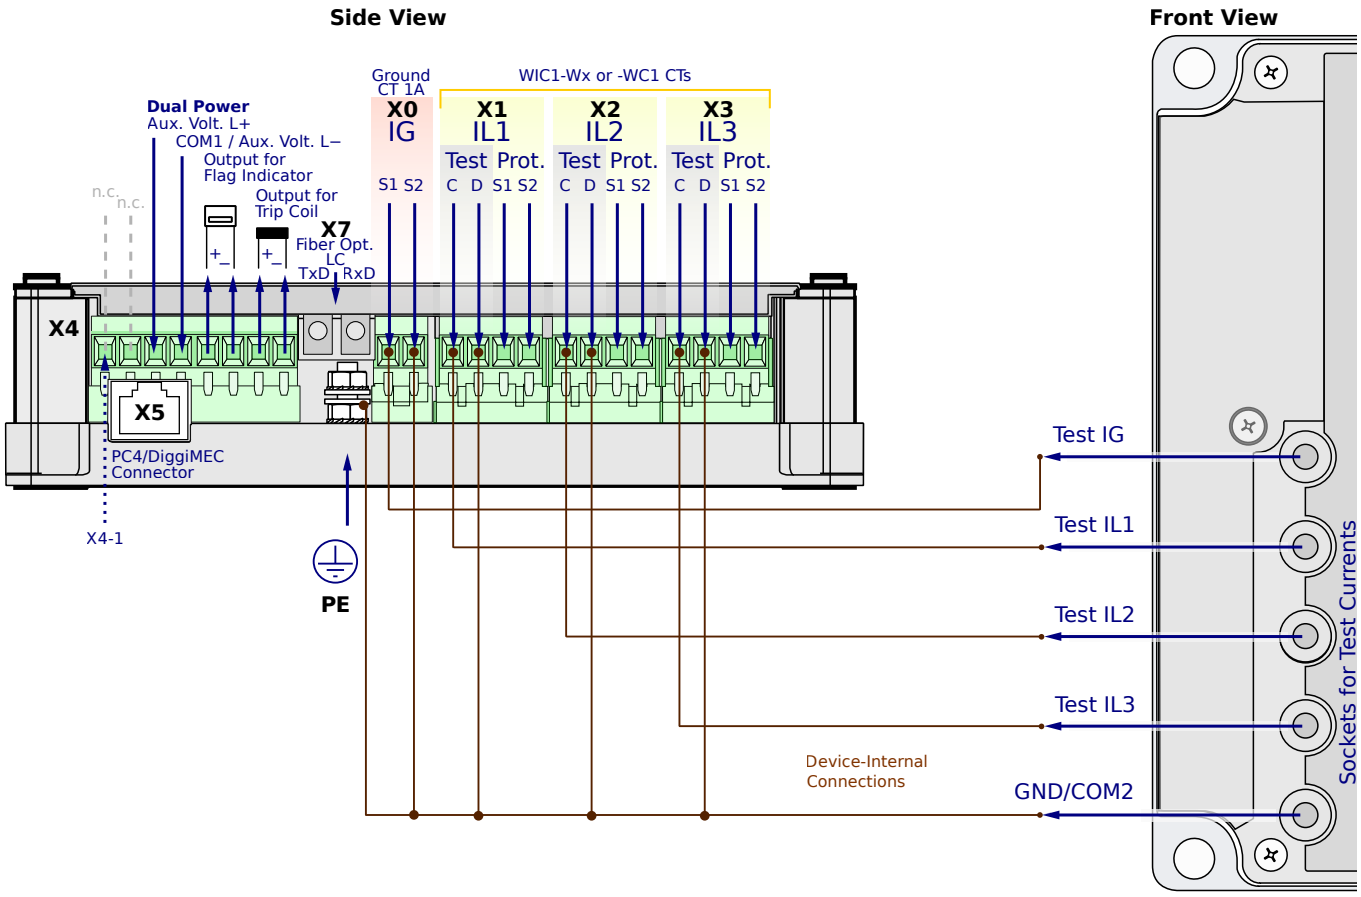


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2ALH

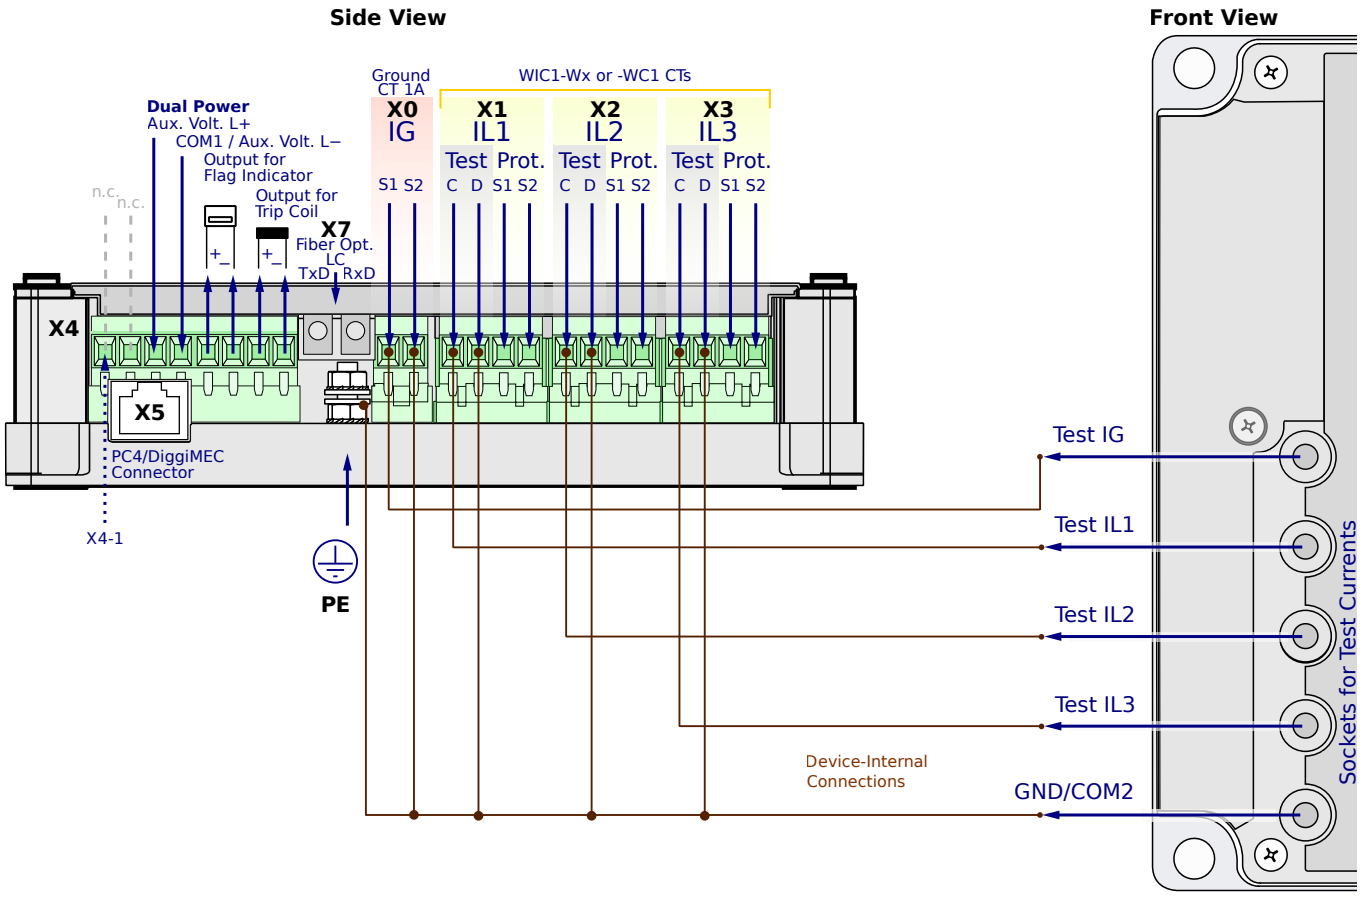


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2PA0

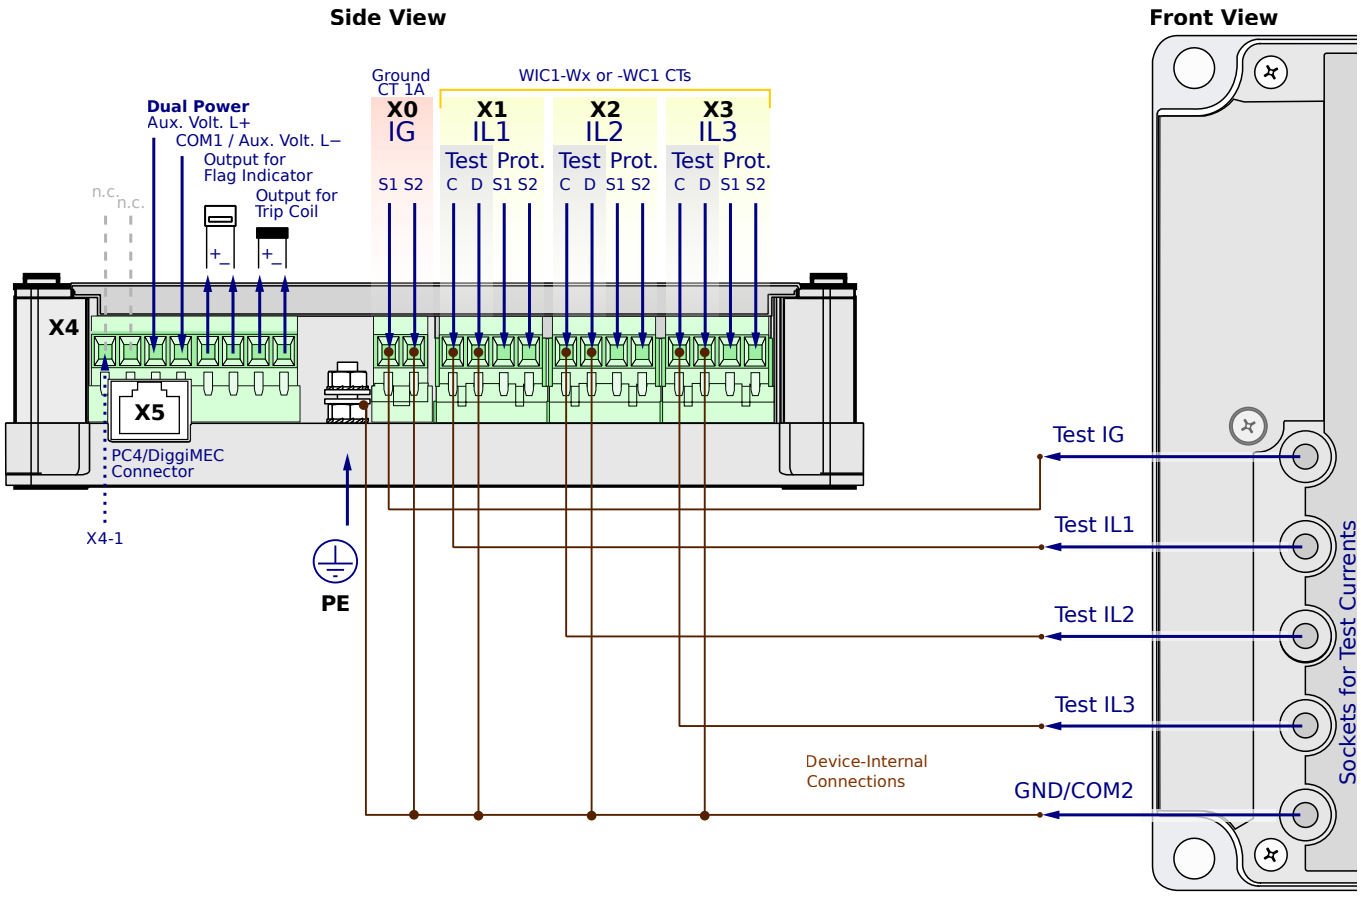


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2PAH

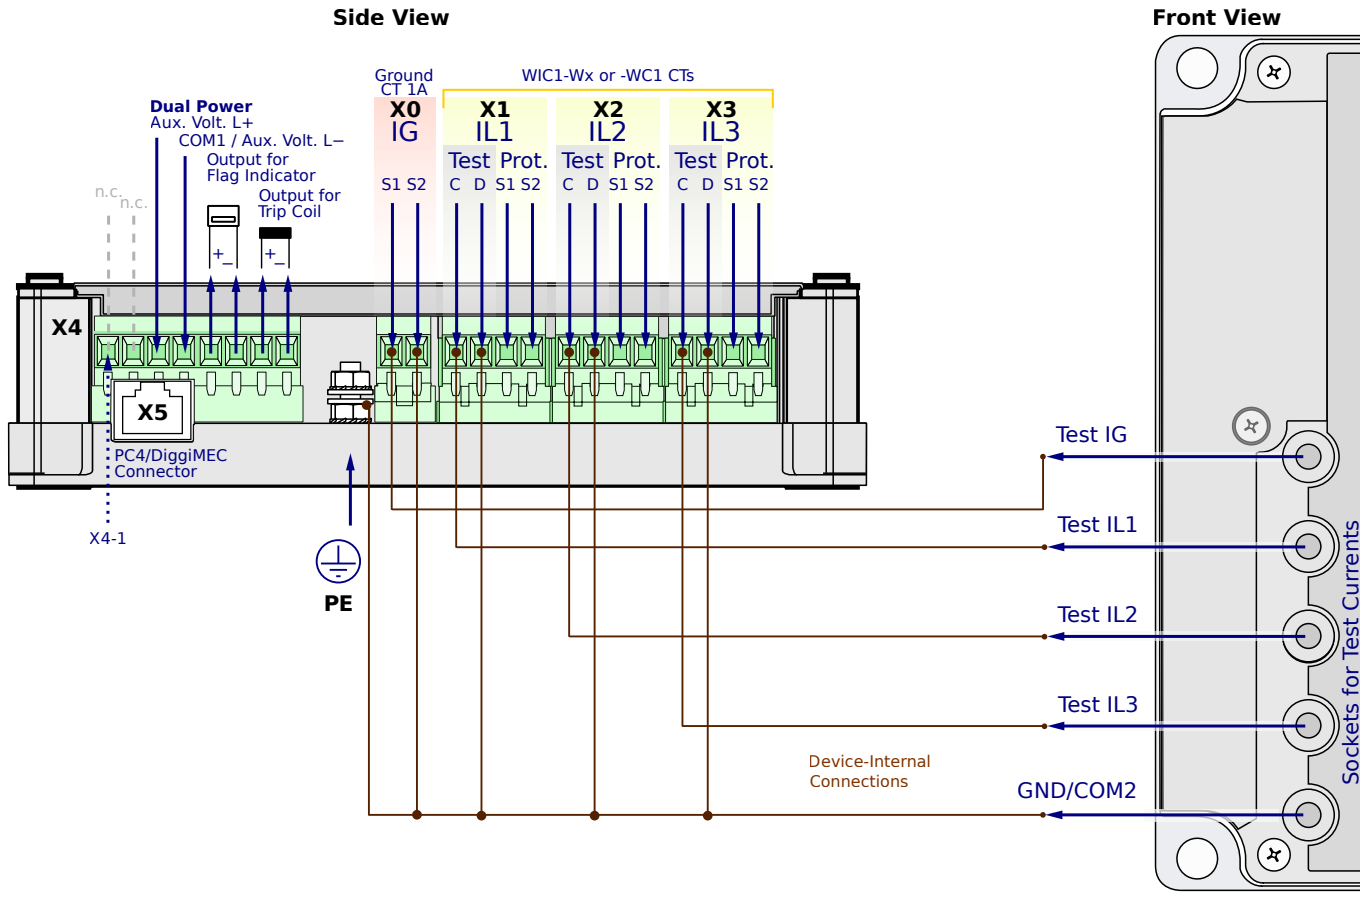


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FM2PB0

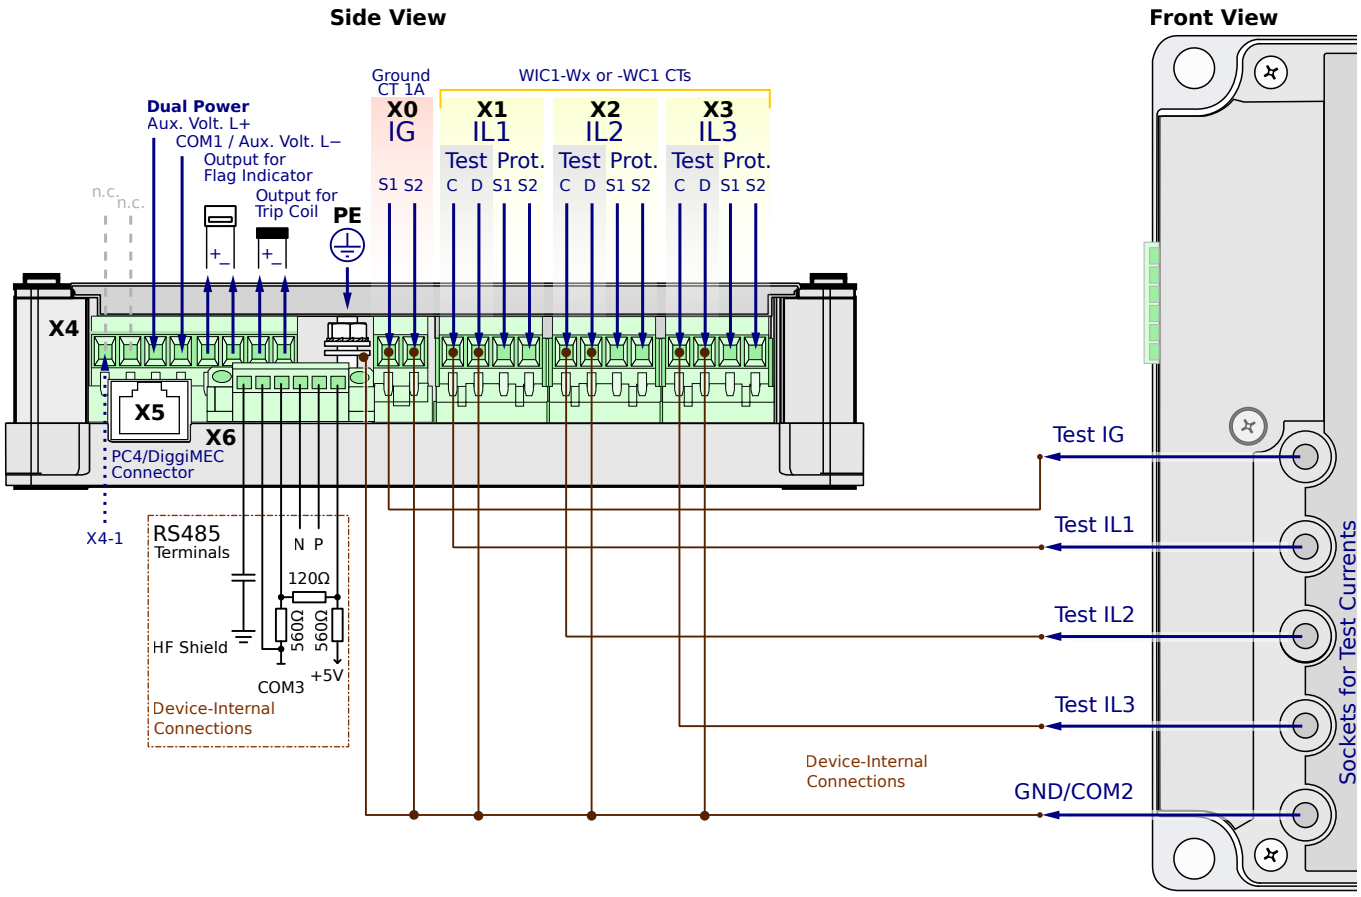


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2PBH

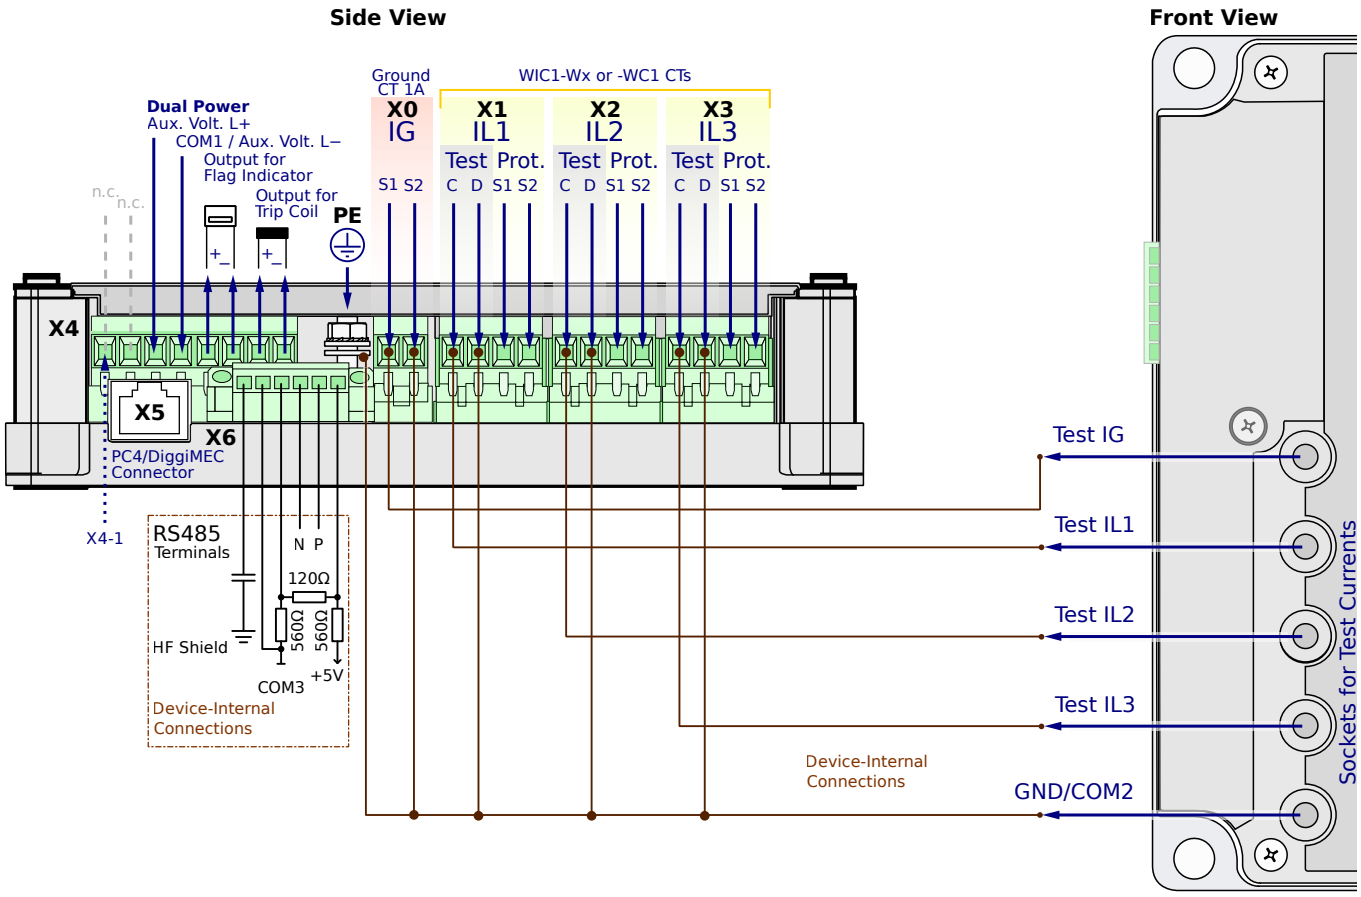


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FM2PC0

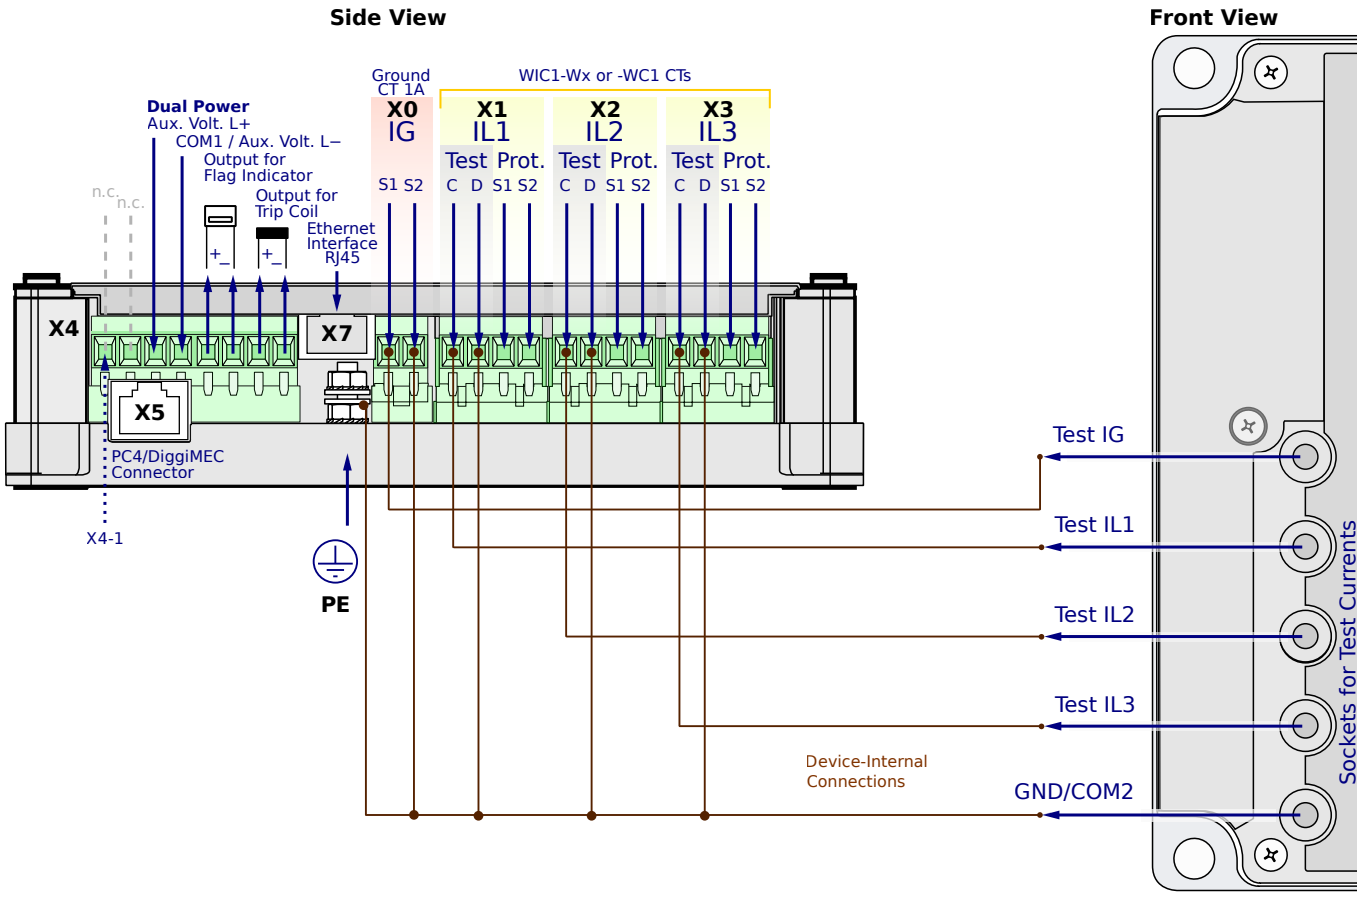


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2PCH

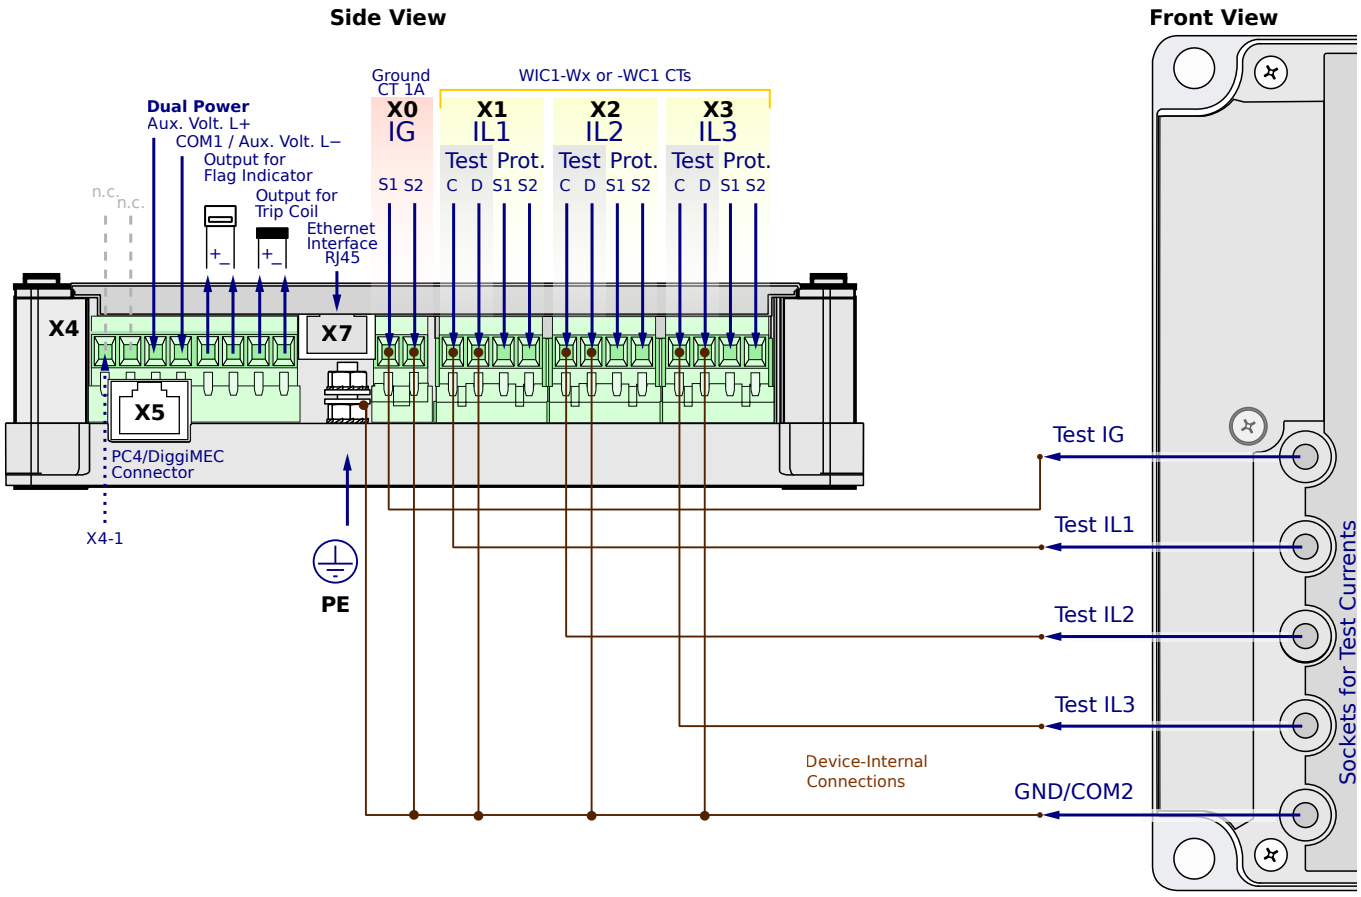


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FM2PL0

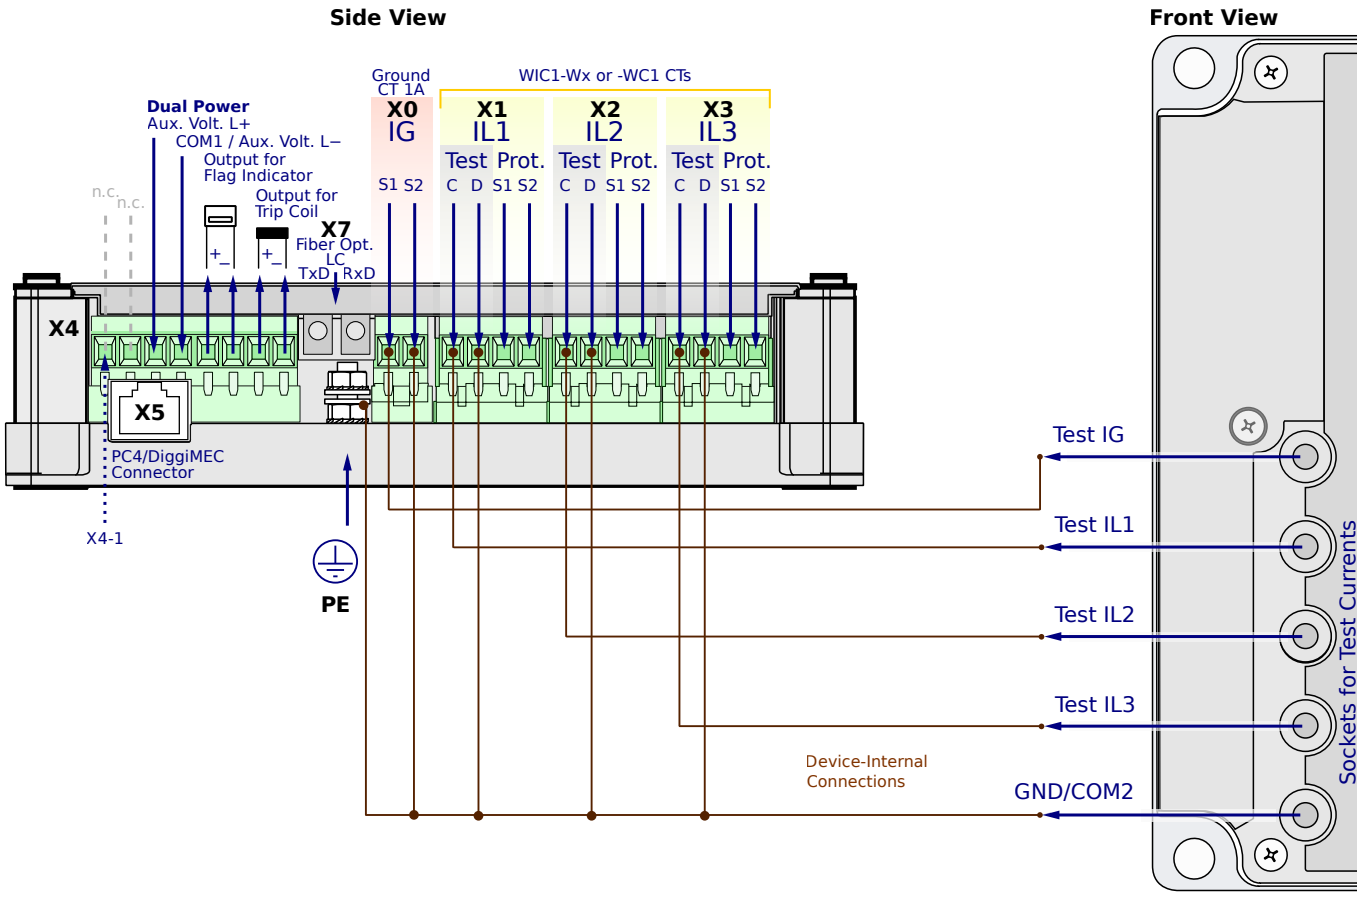


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FM2PLH

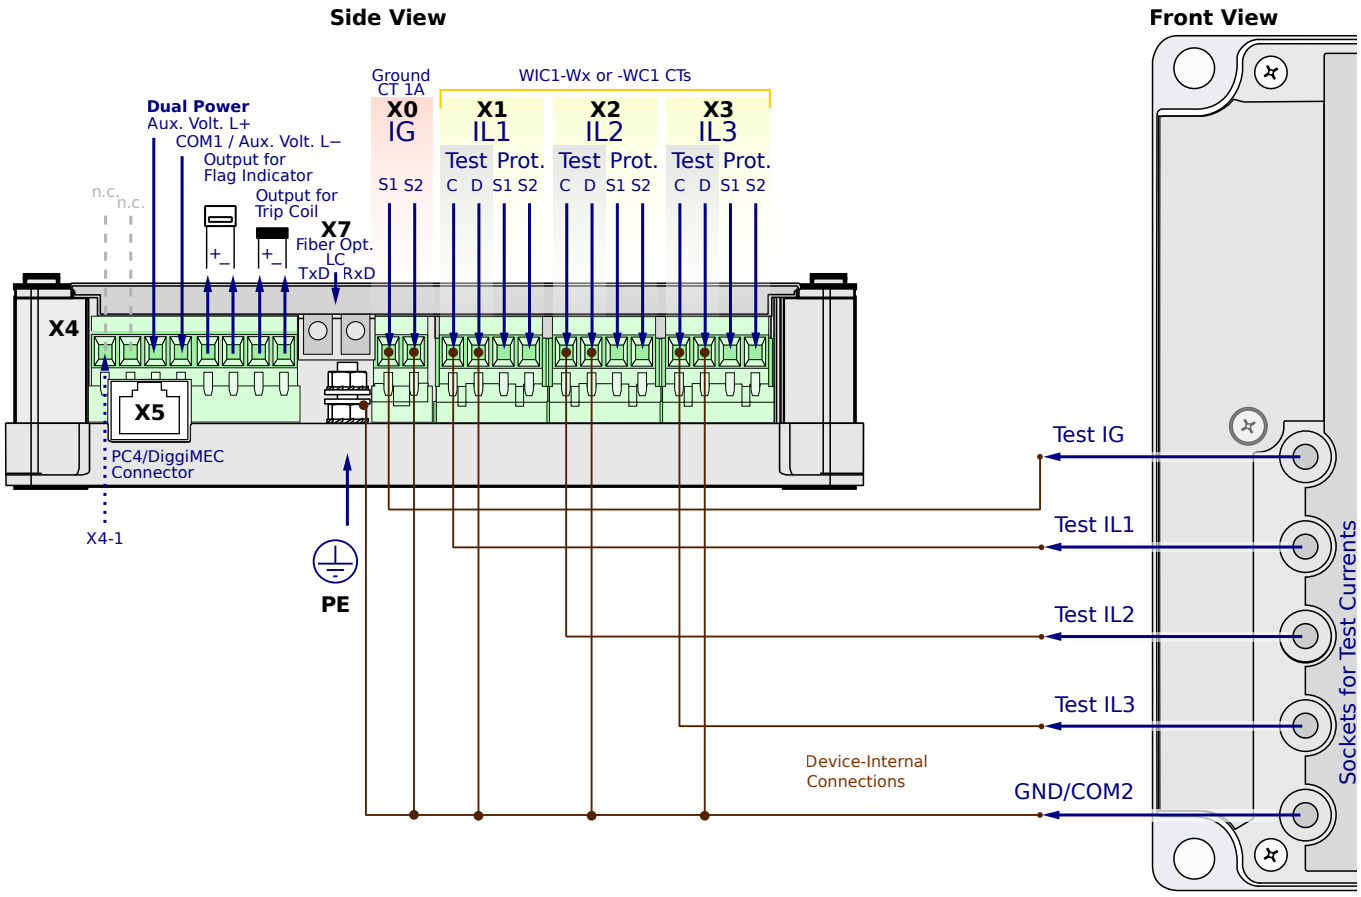


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1SA0

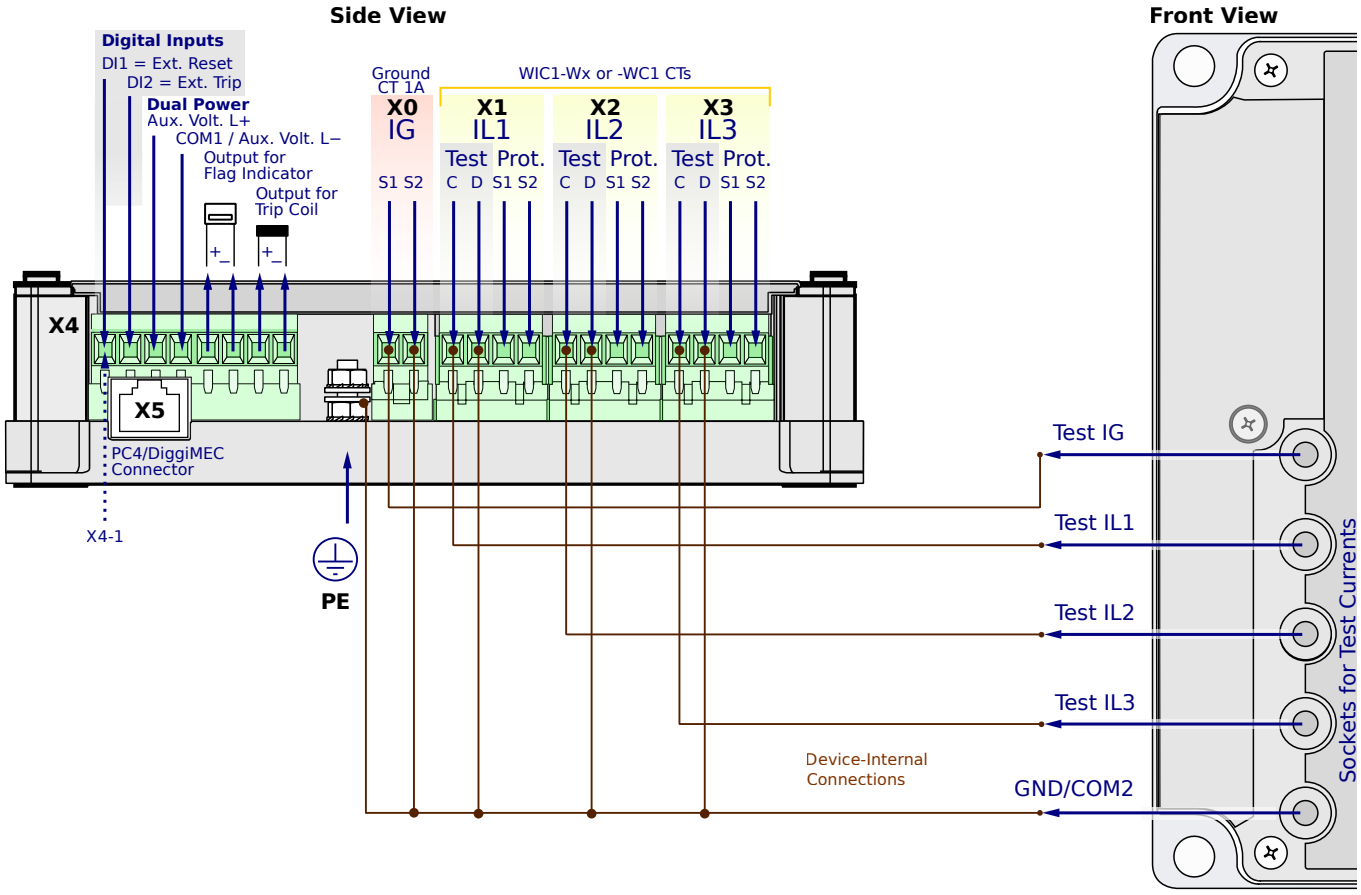


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1SAH

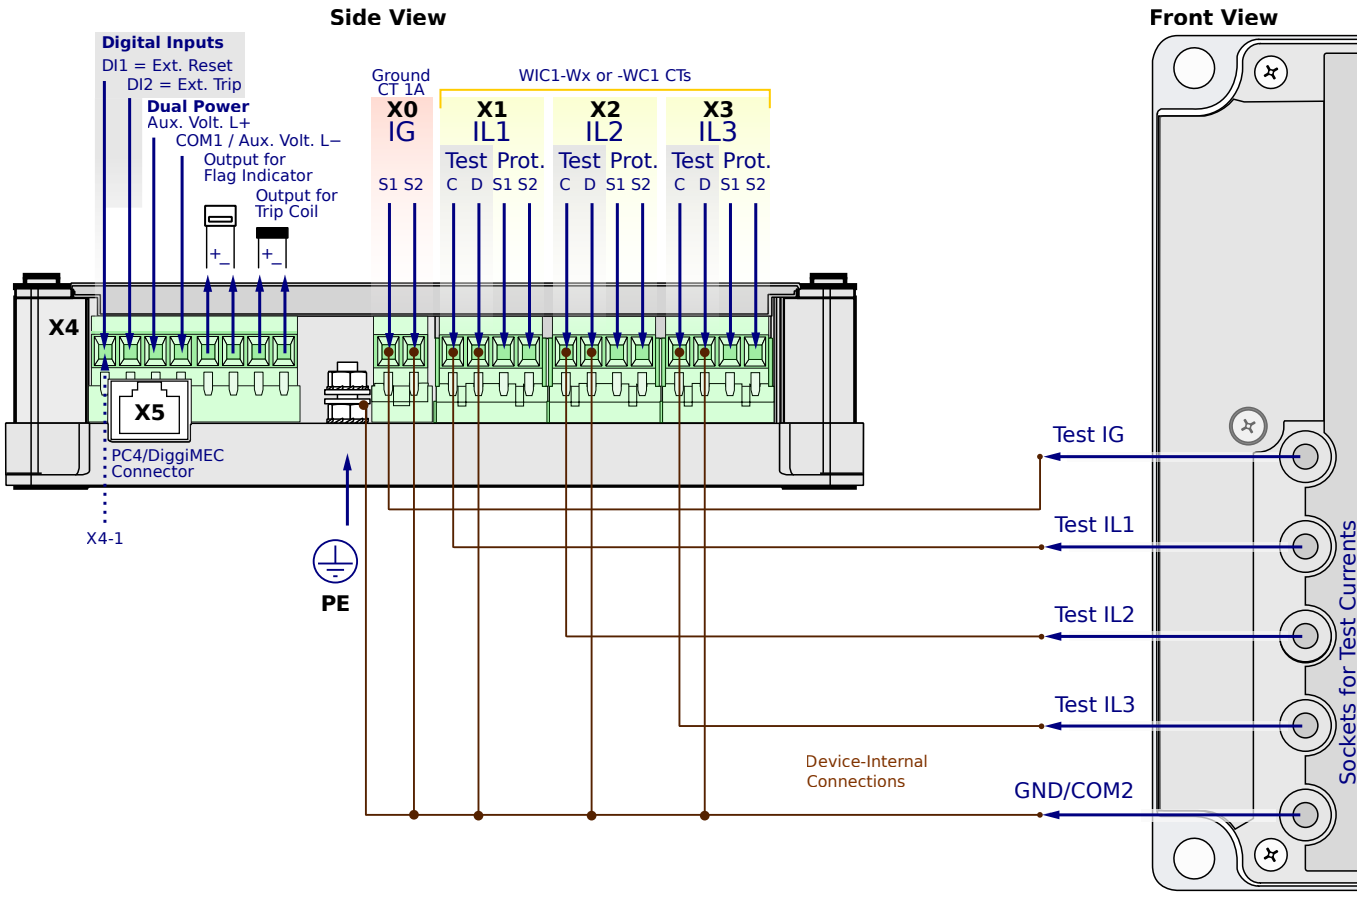


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1SB0

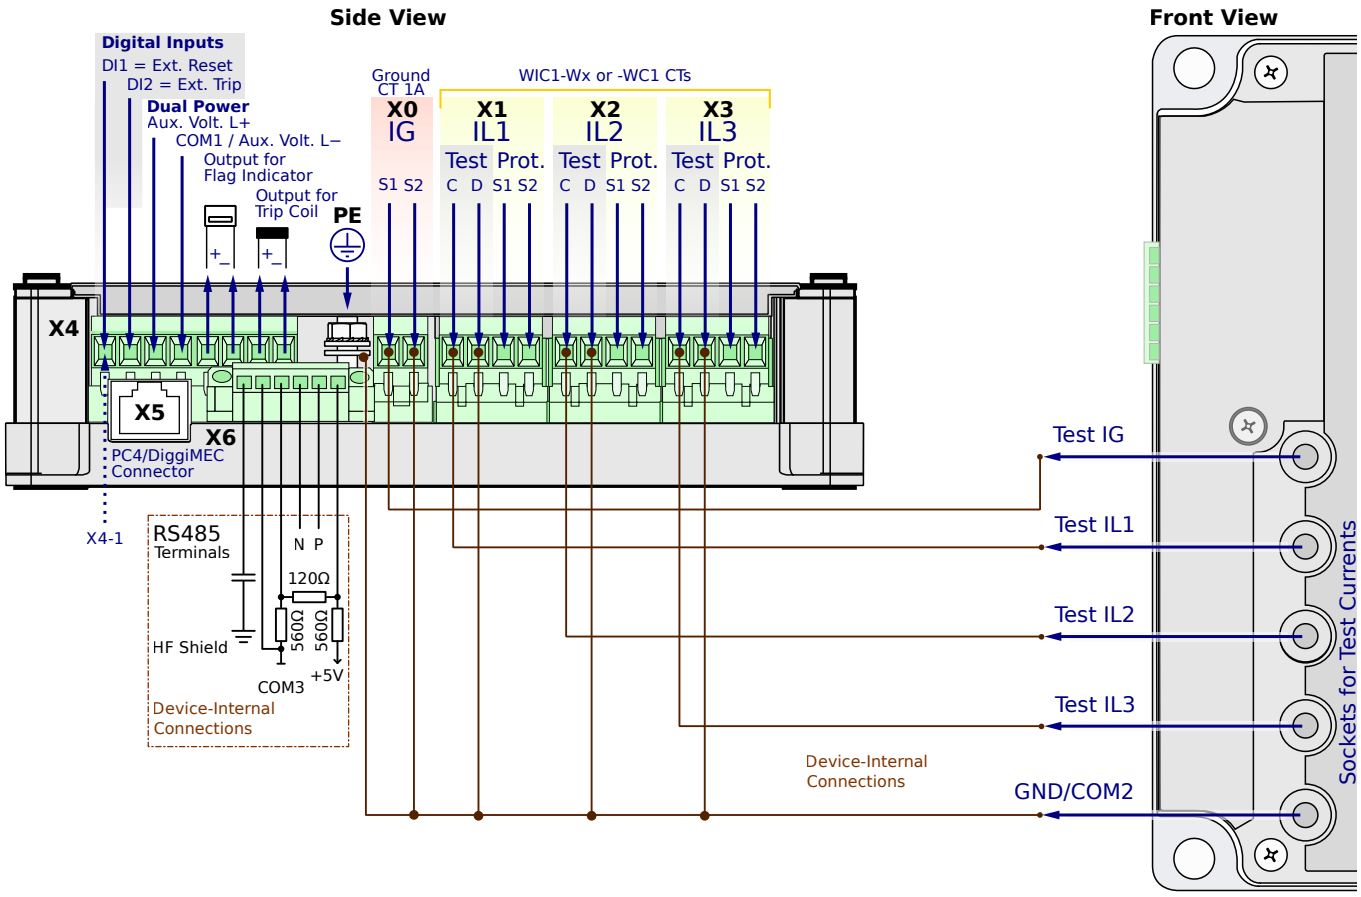


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1SBH

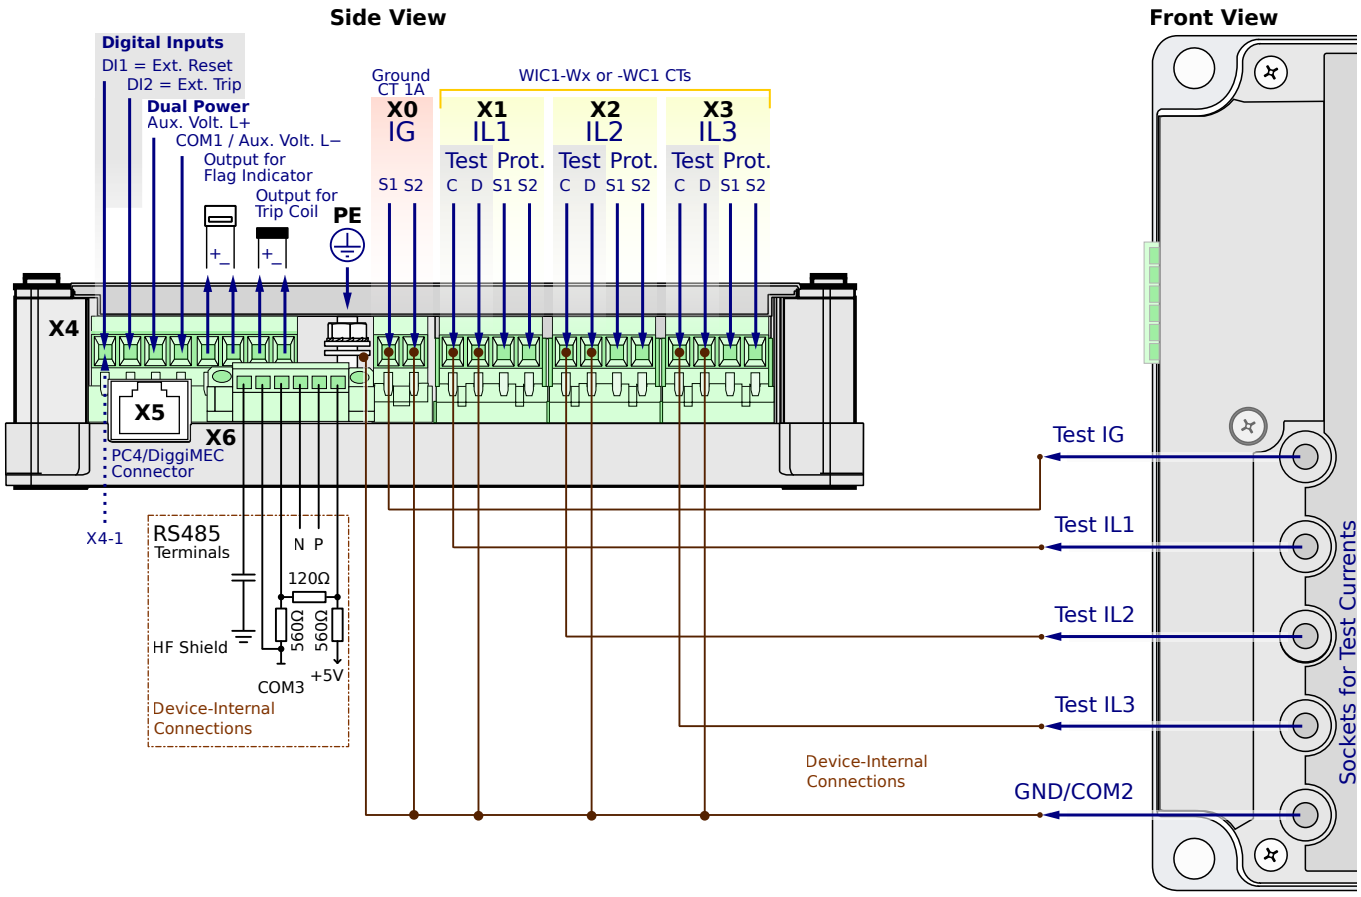


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1SC0

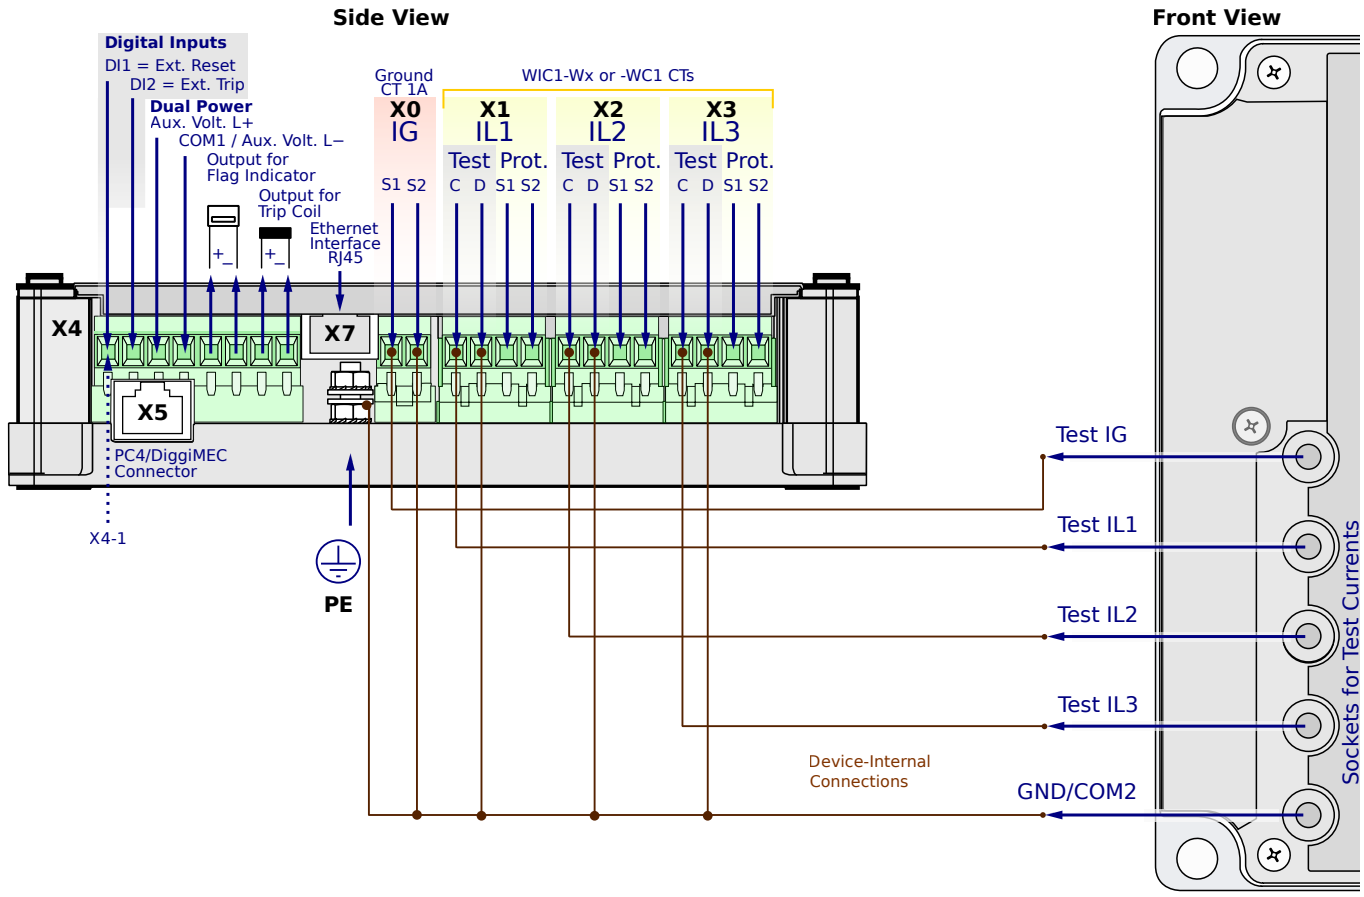


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1SCH

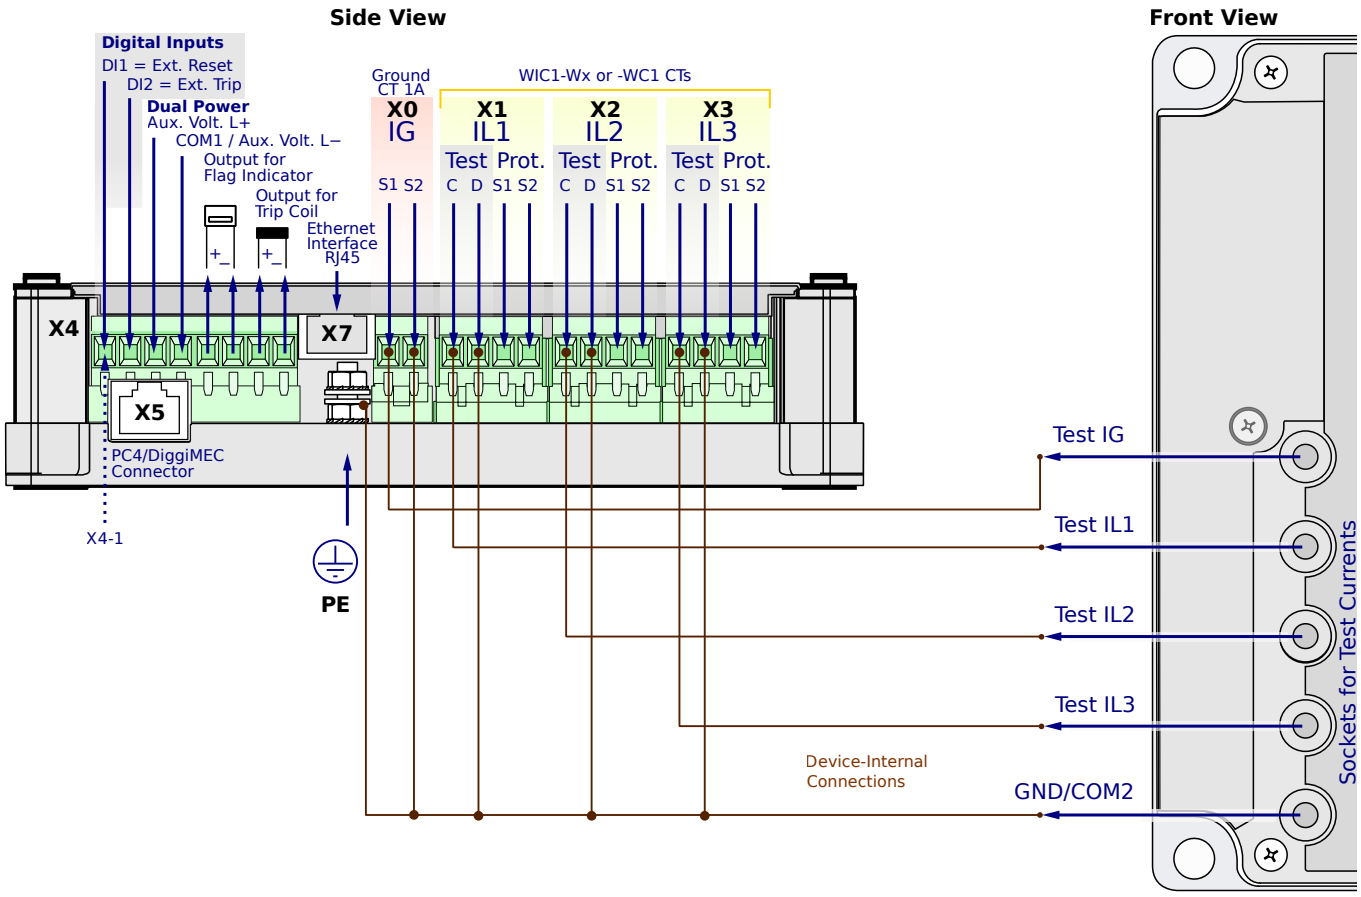


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1SL0

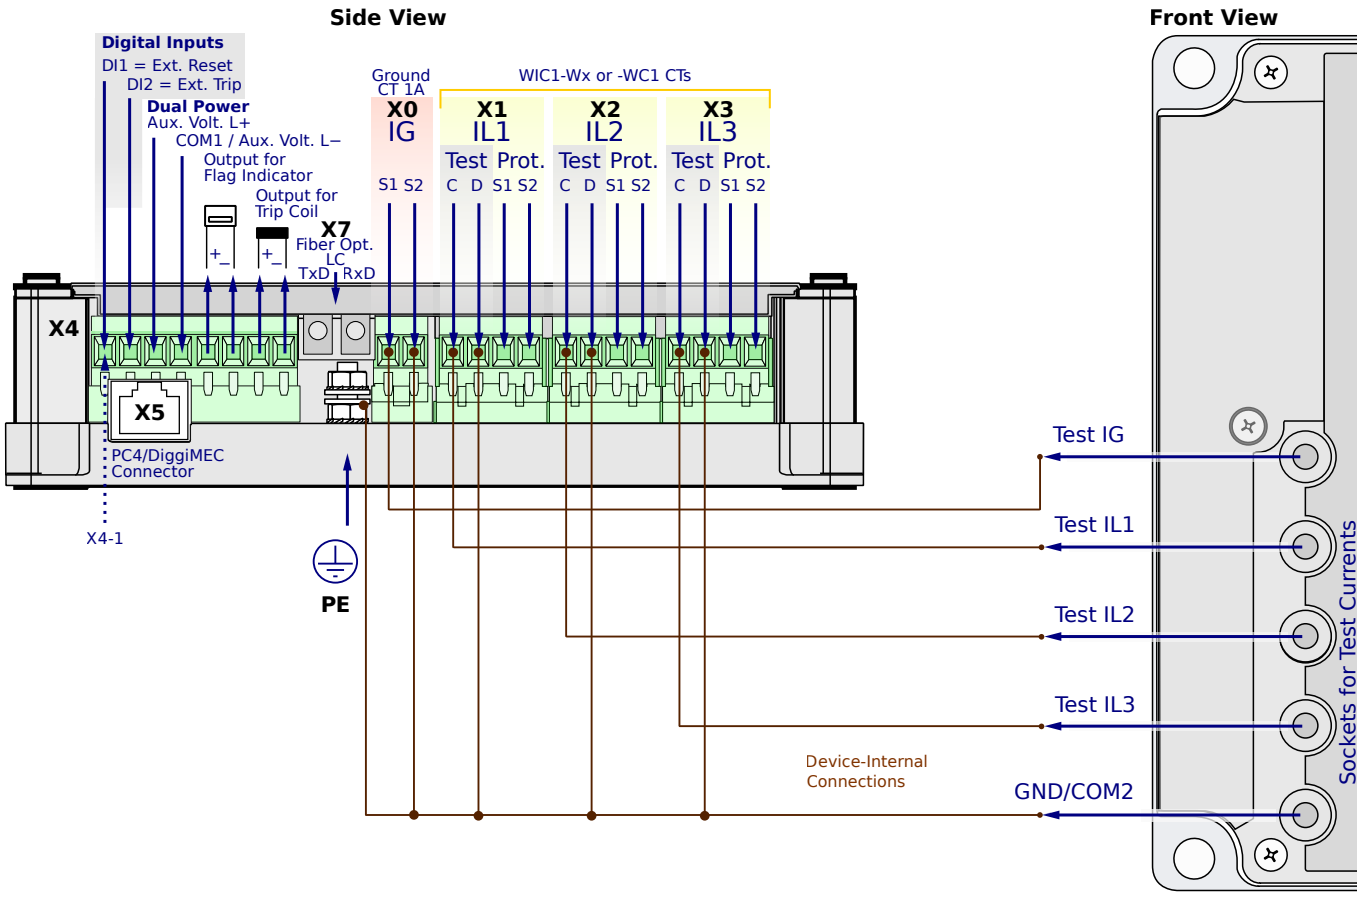


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1SLH

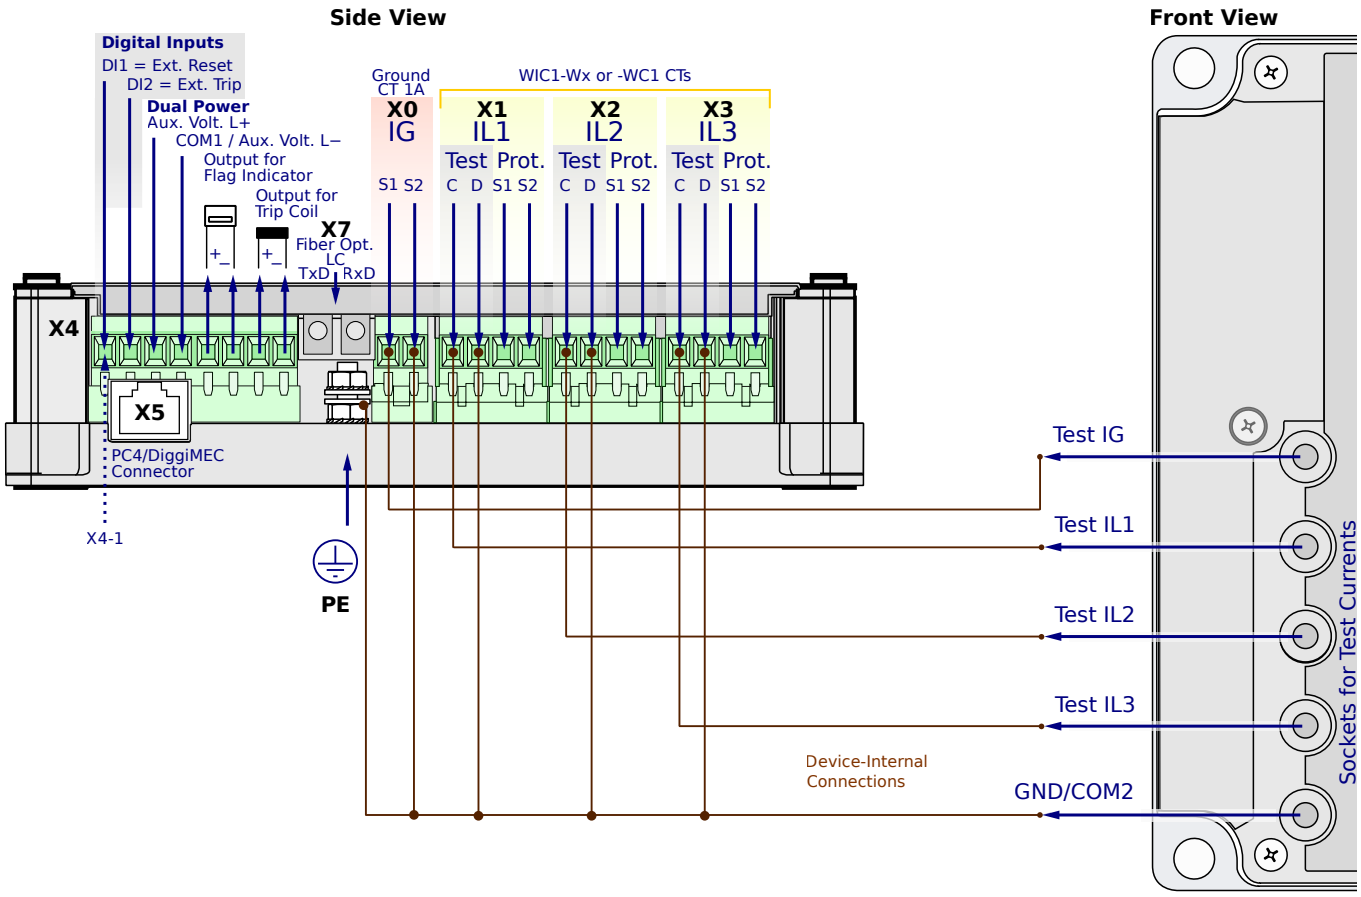


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1AA0

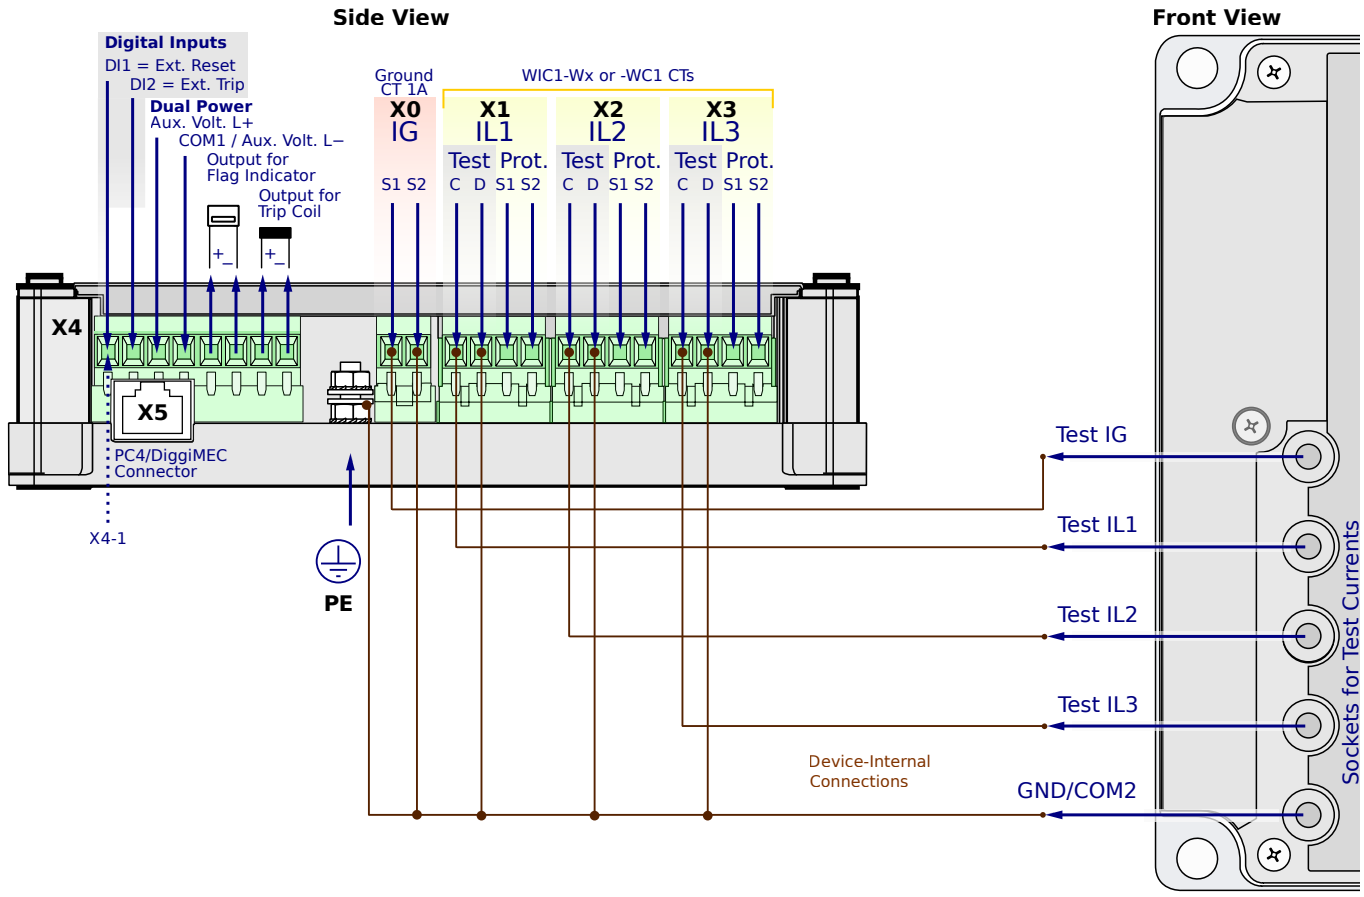


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1AAH

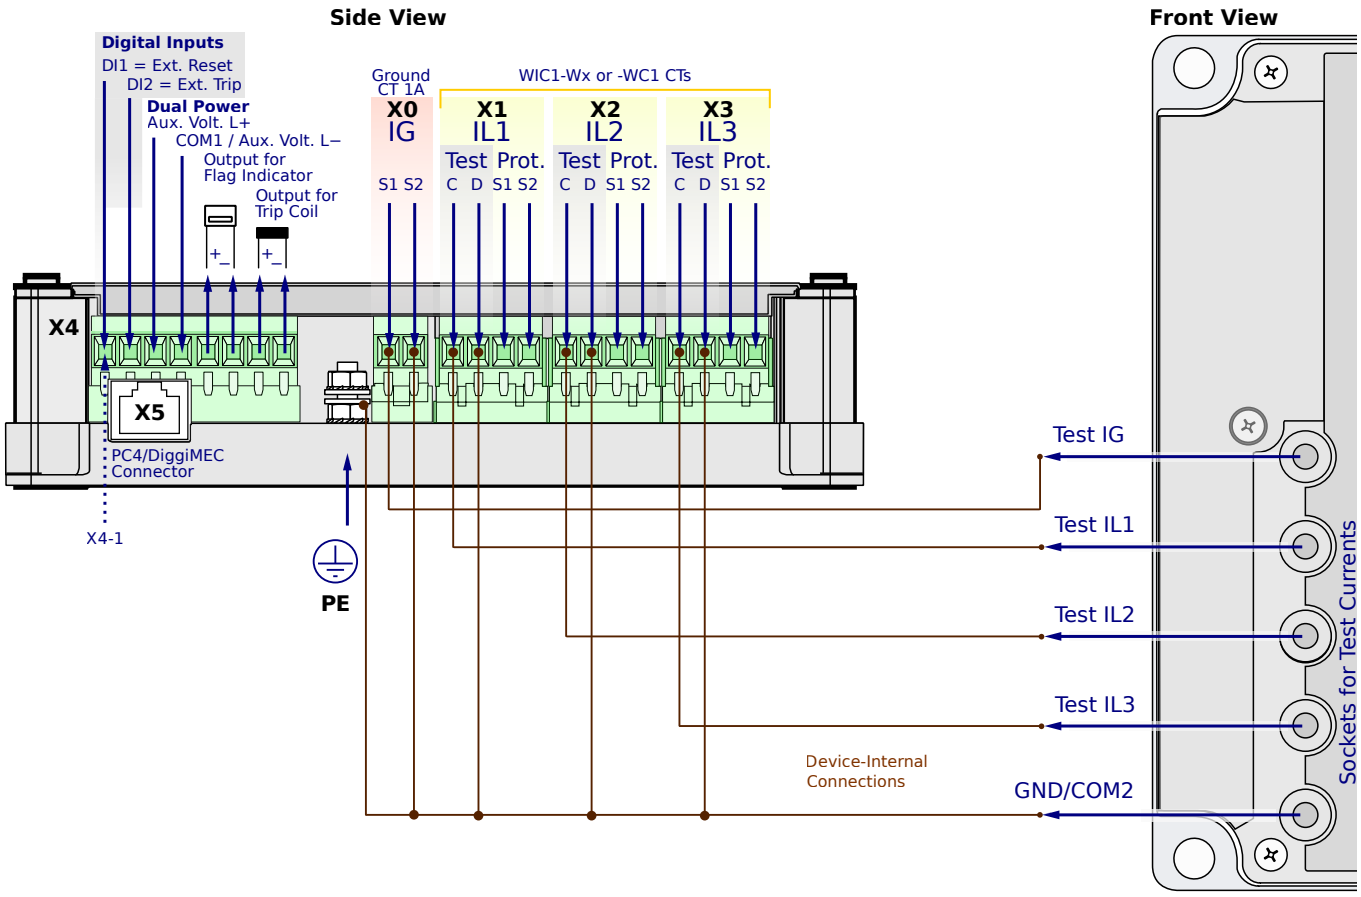


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1AB0

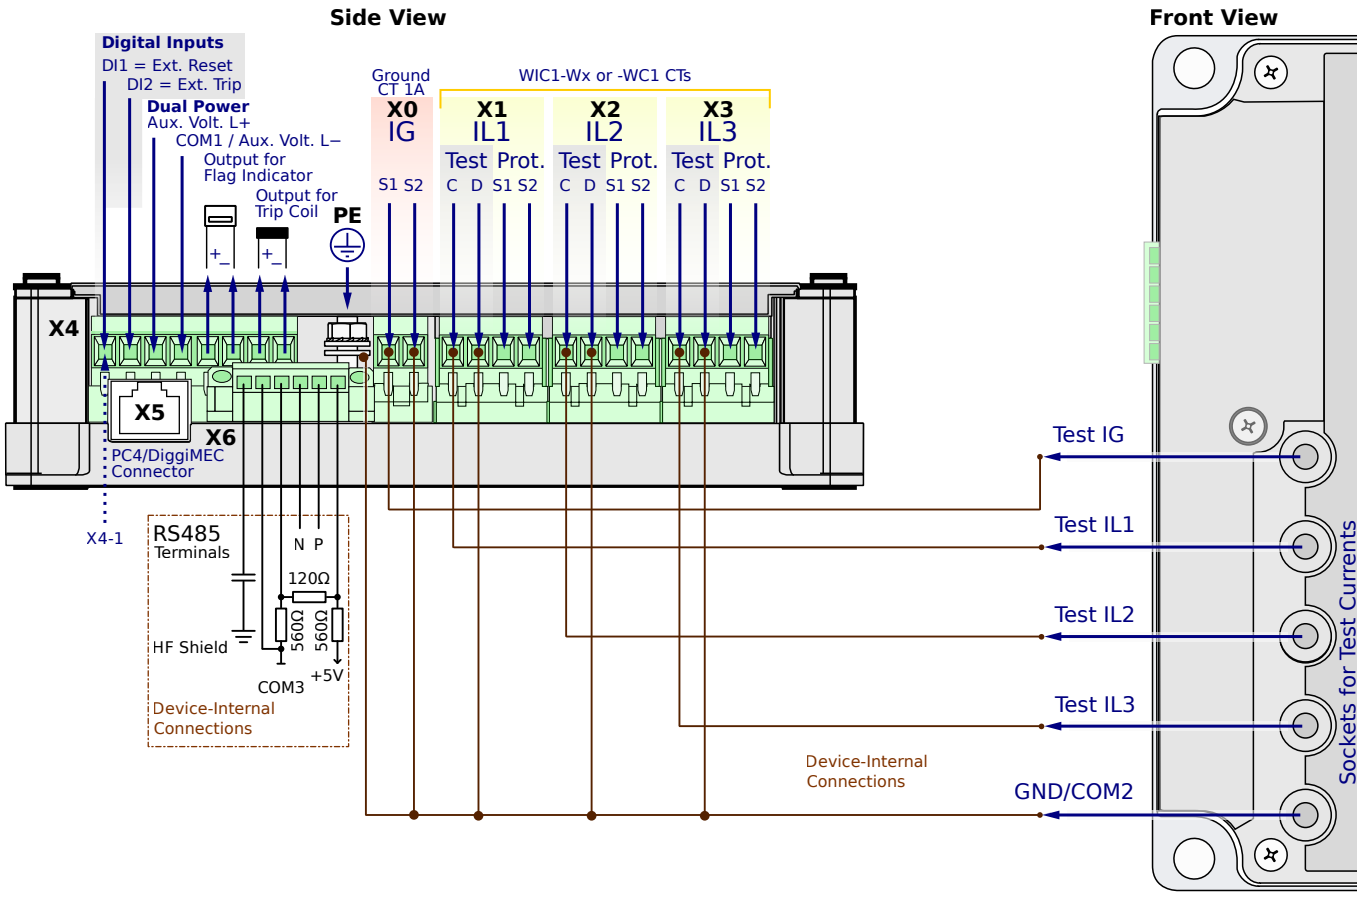


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1ABH

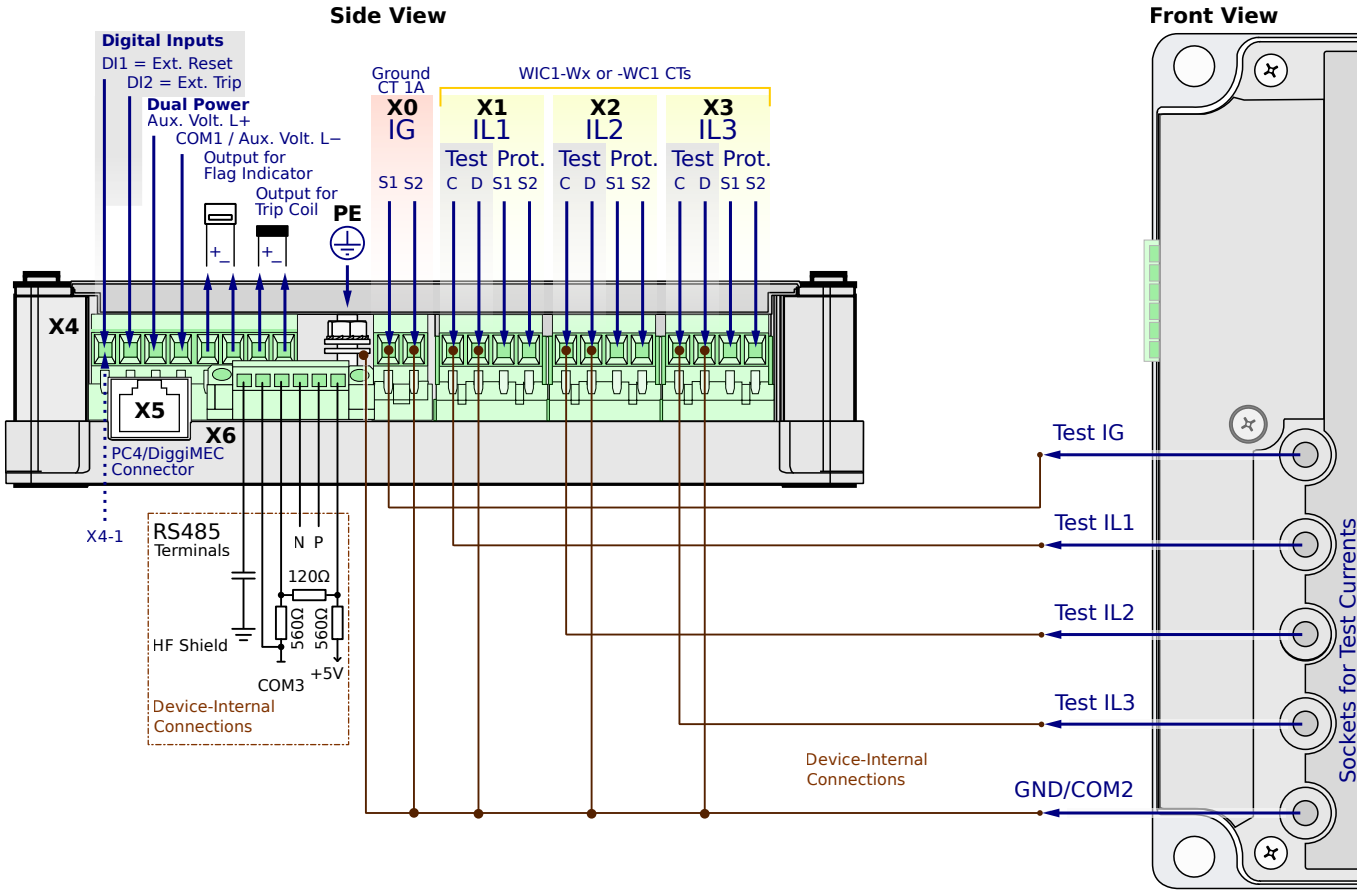


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1AC0

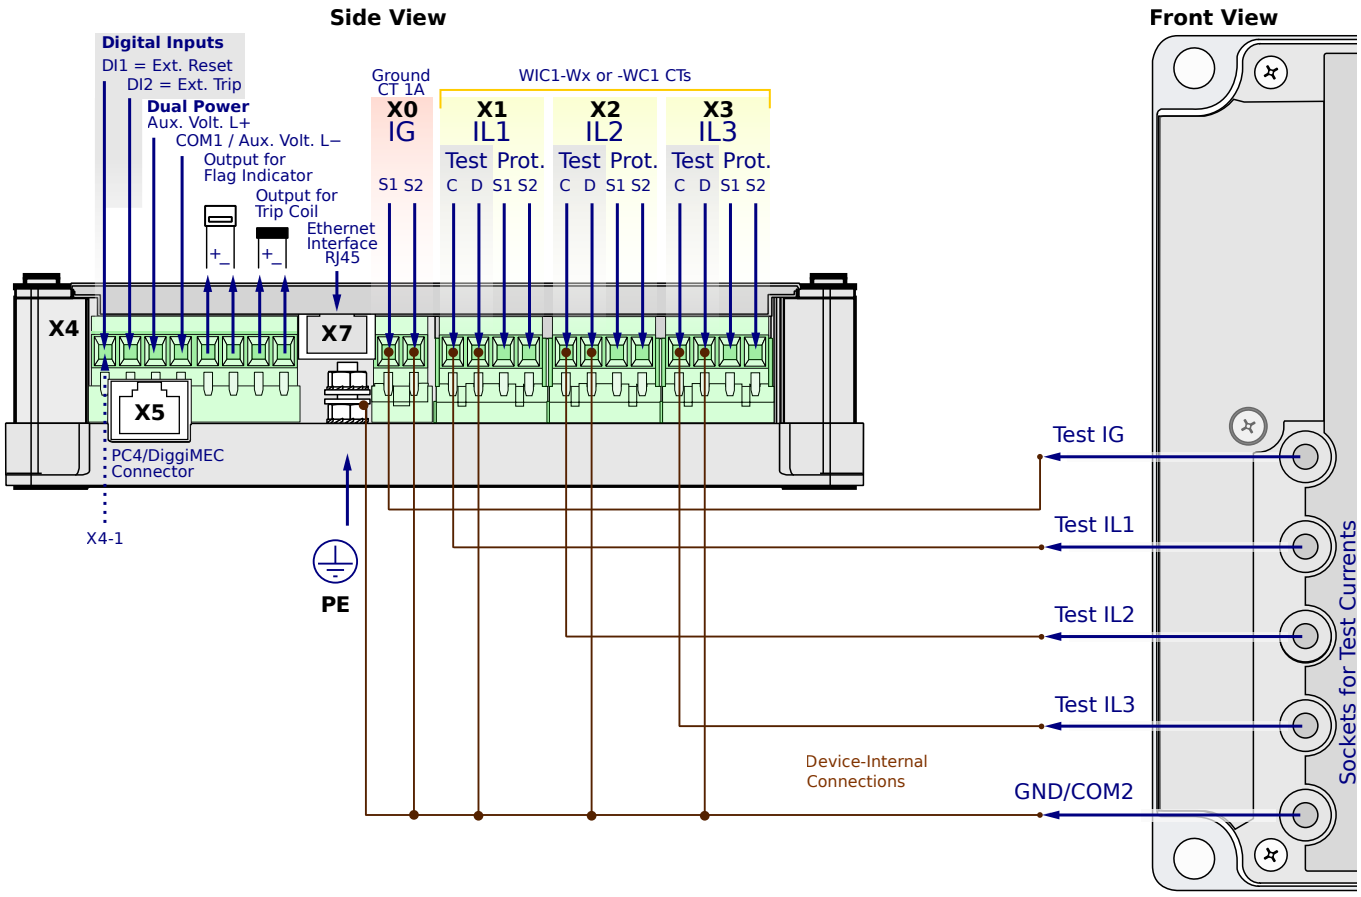


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1ACH

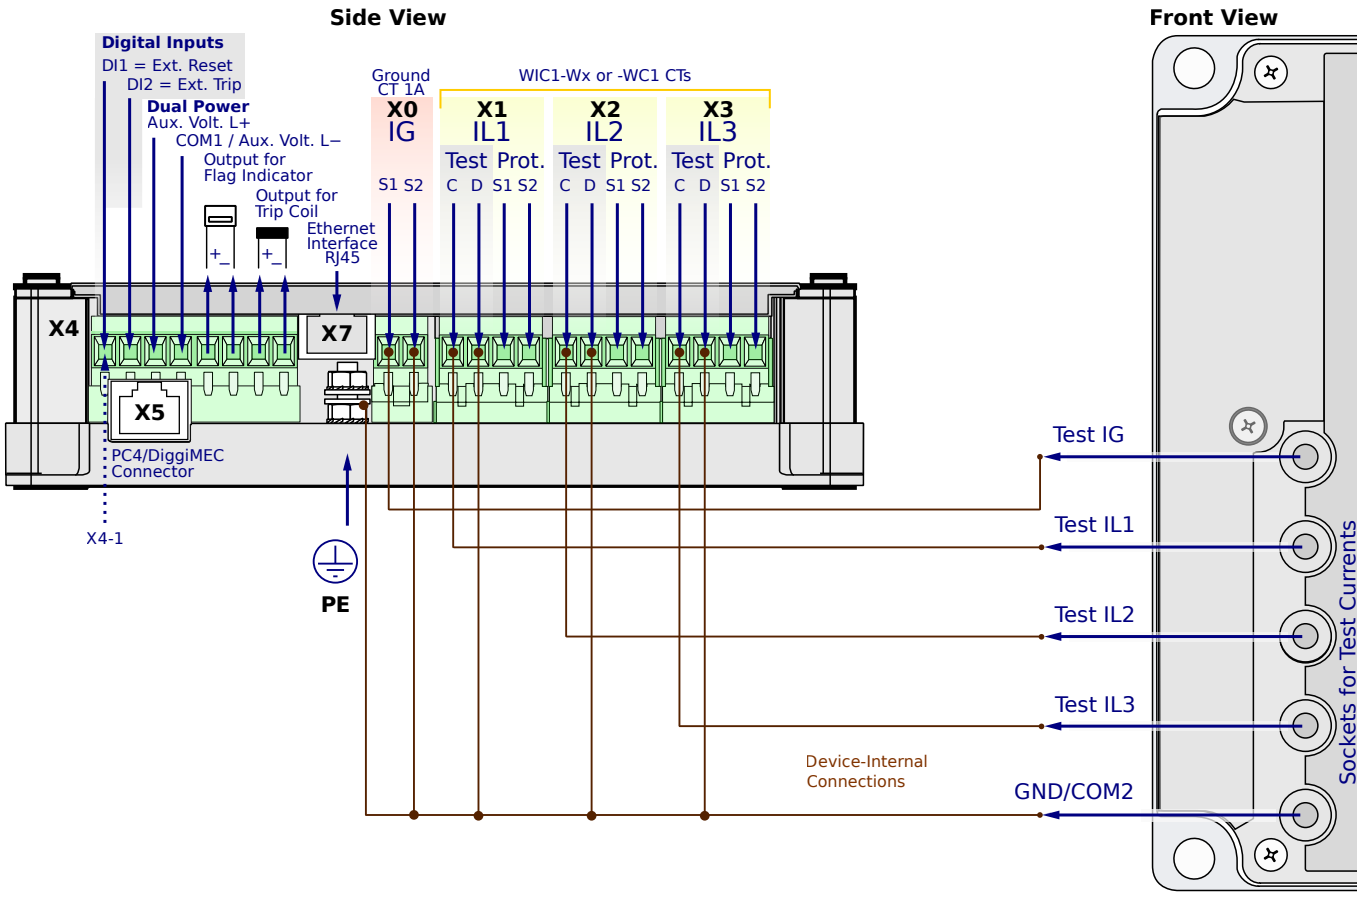


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1AL0

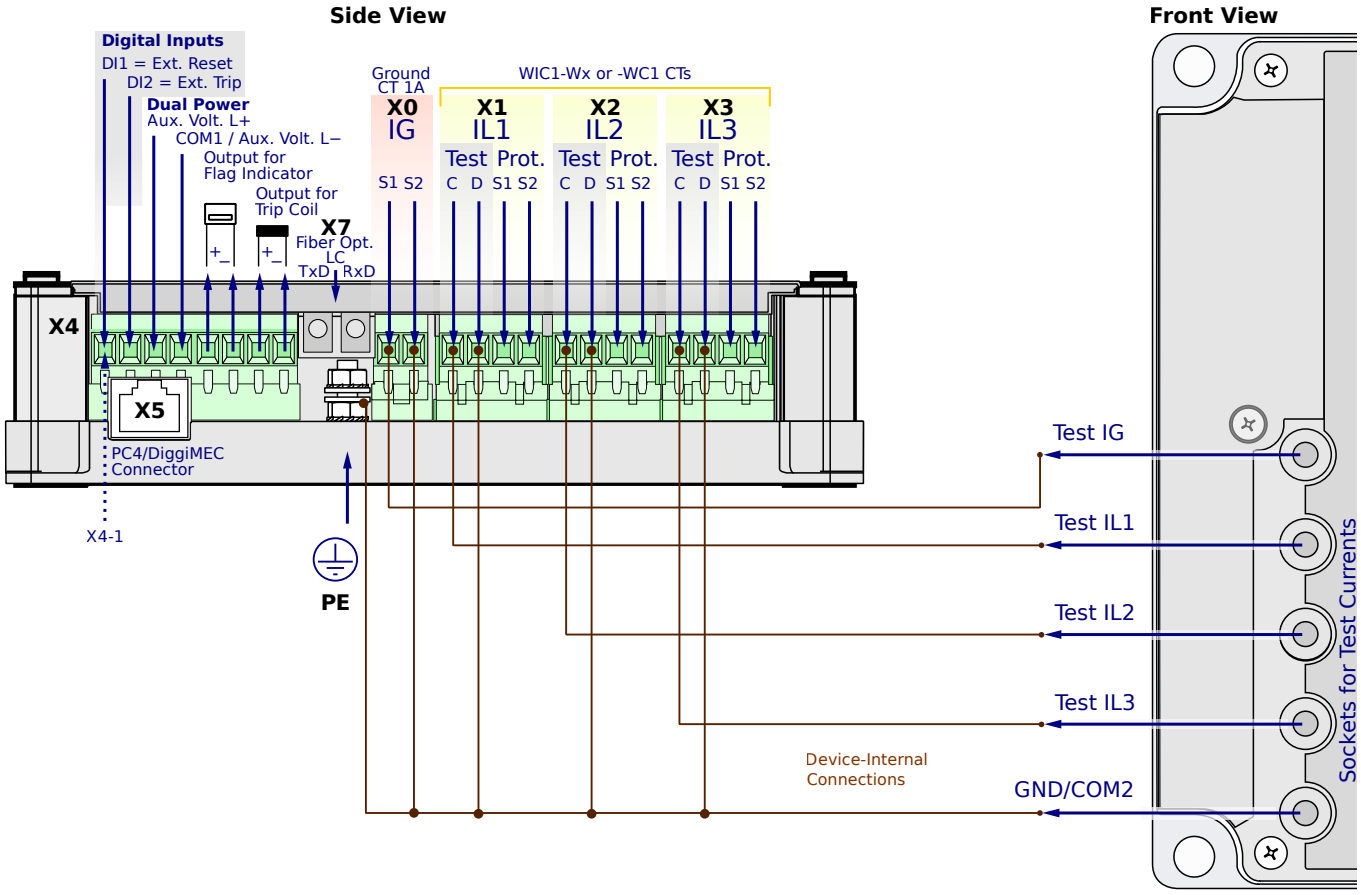


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1ALH

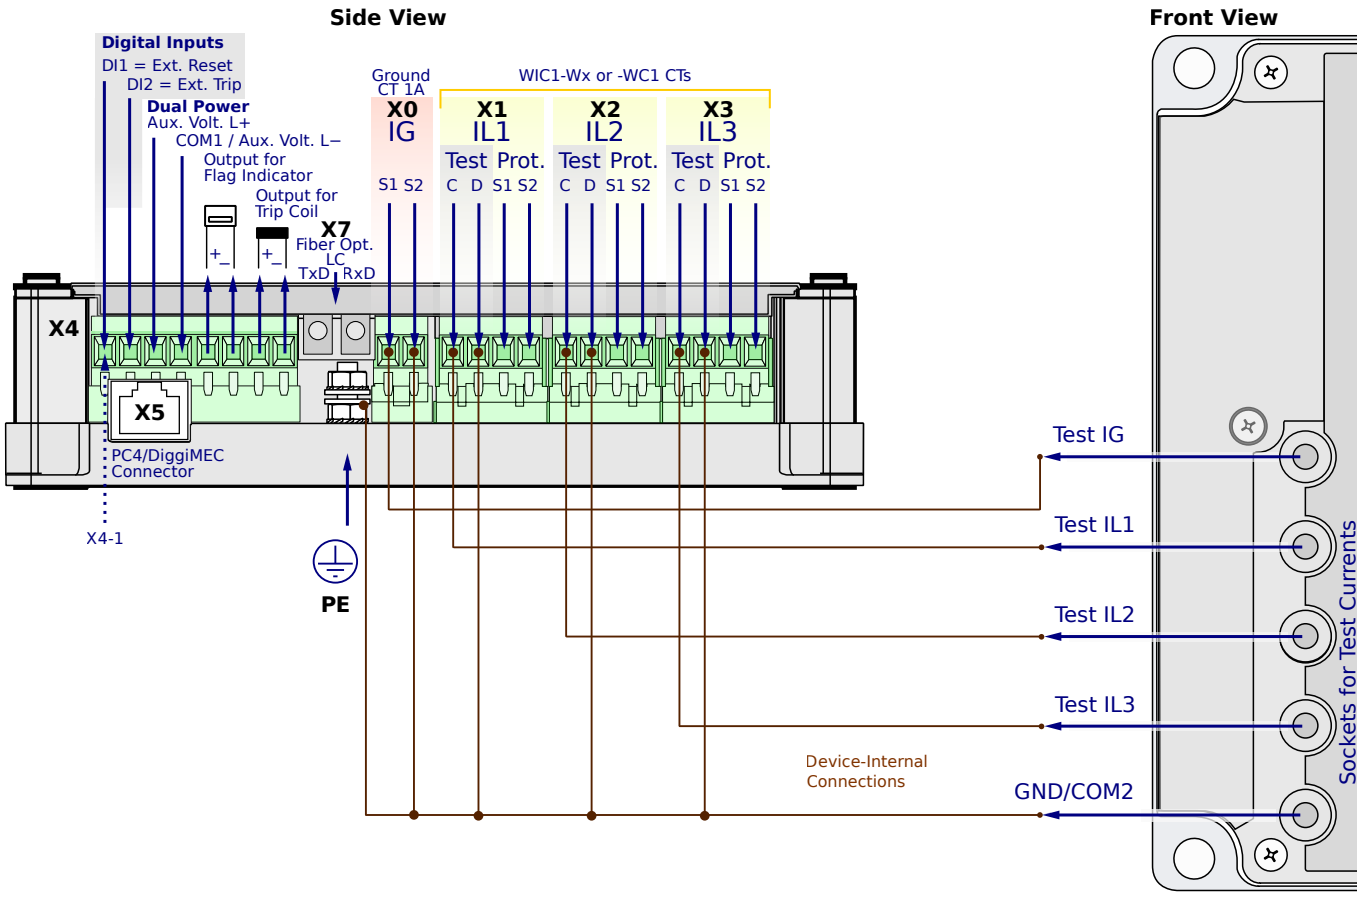


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1PA0

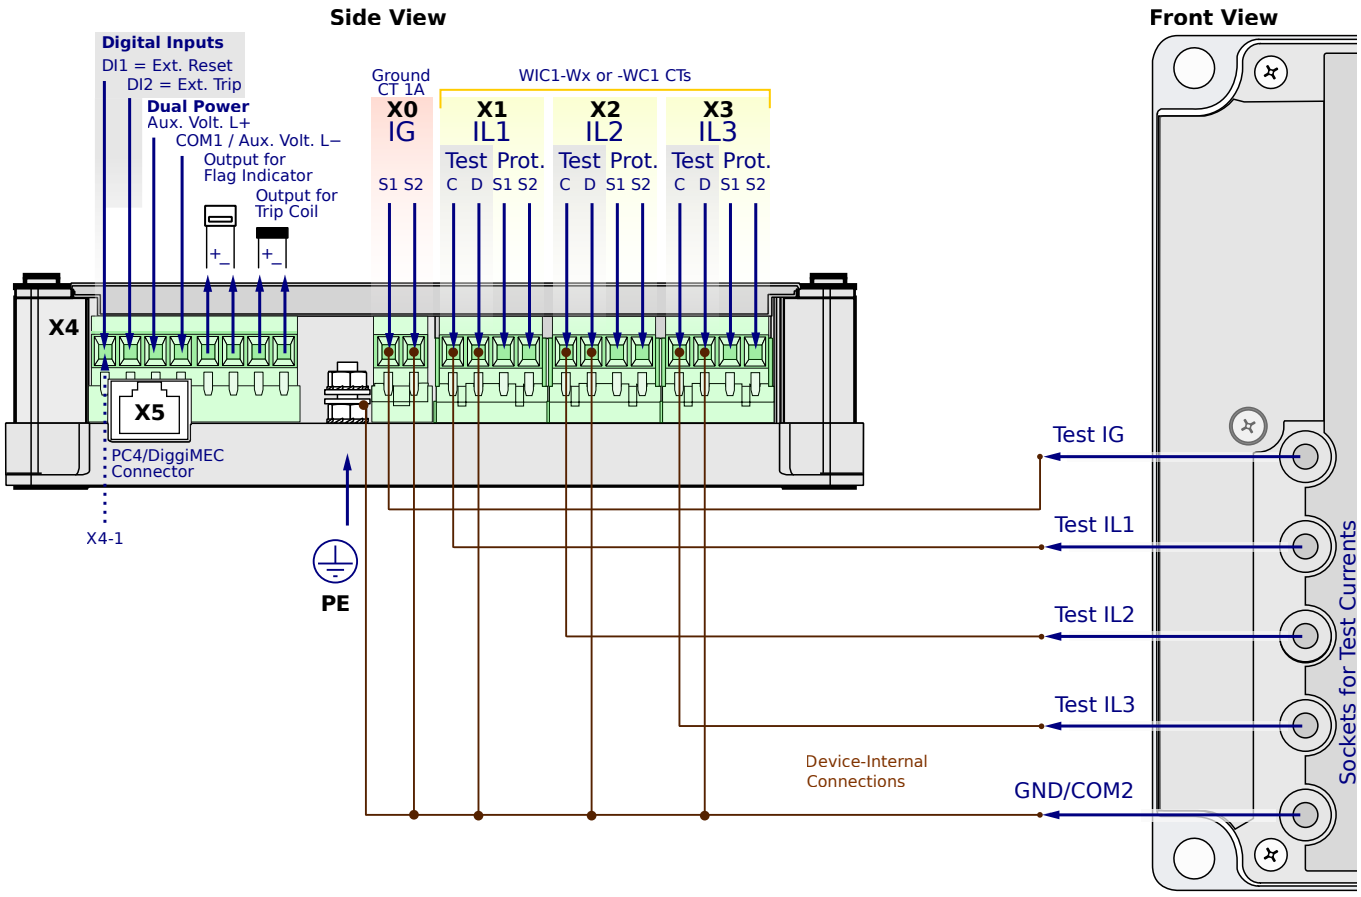


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1PAH

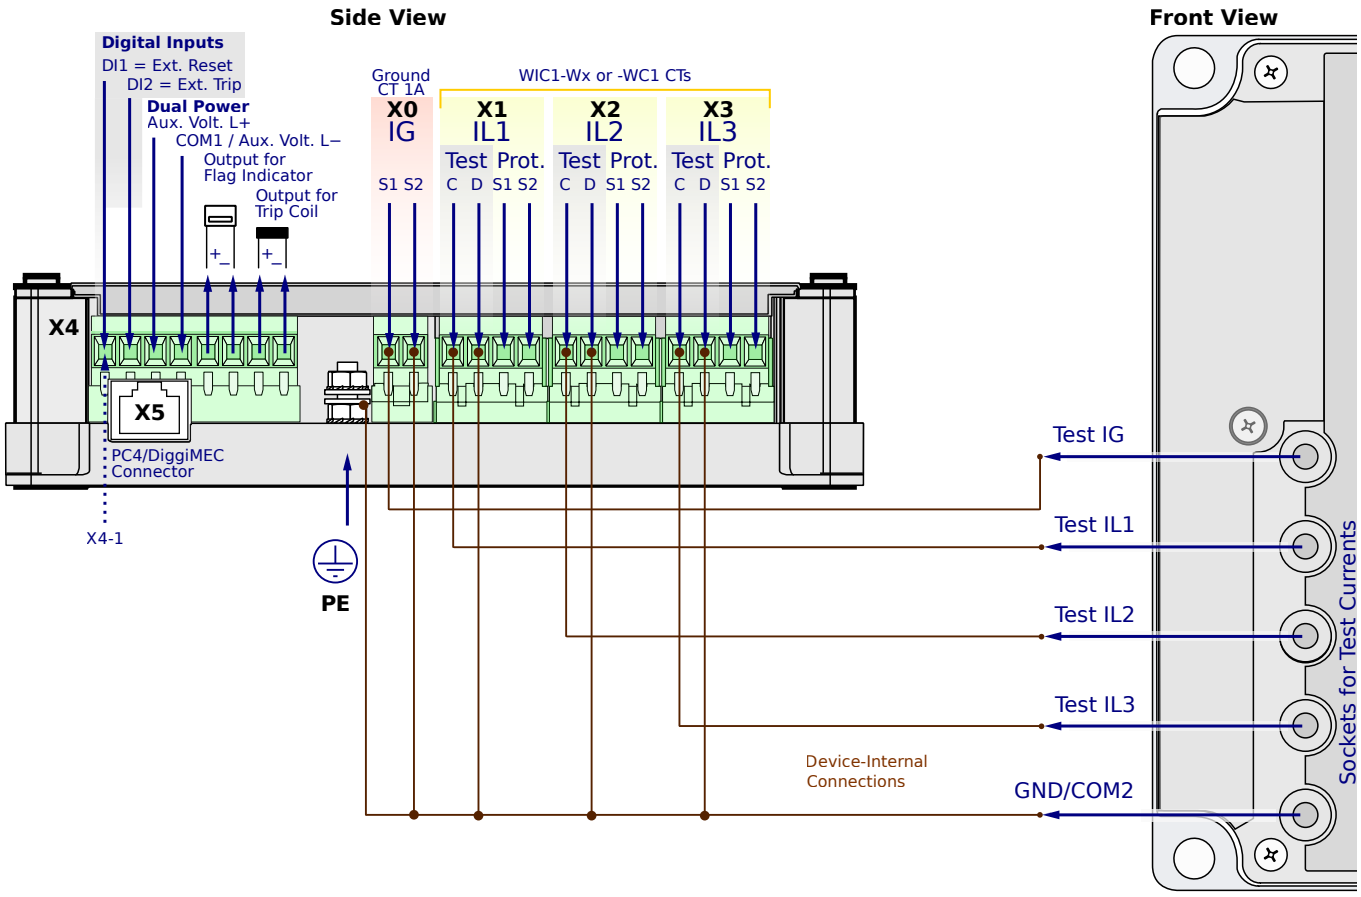


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG1PB0

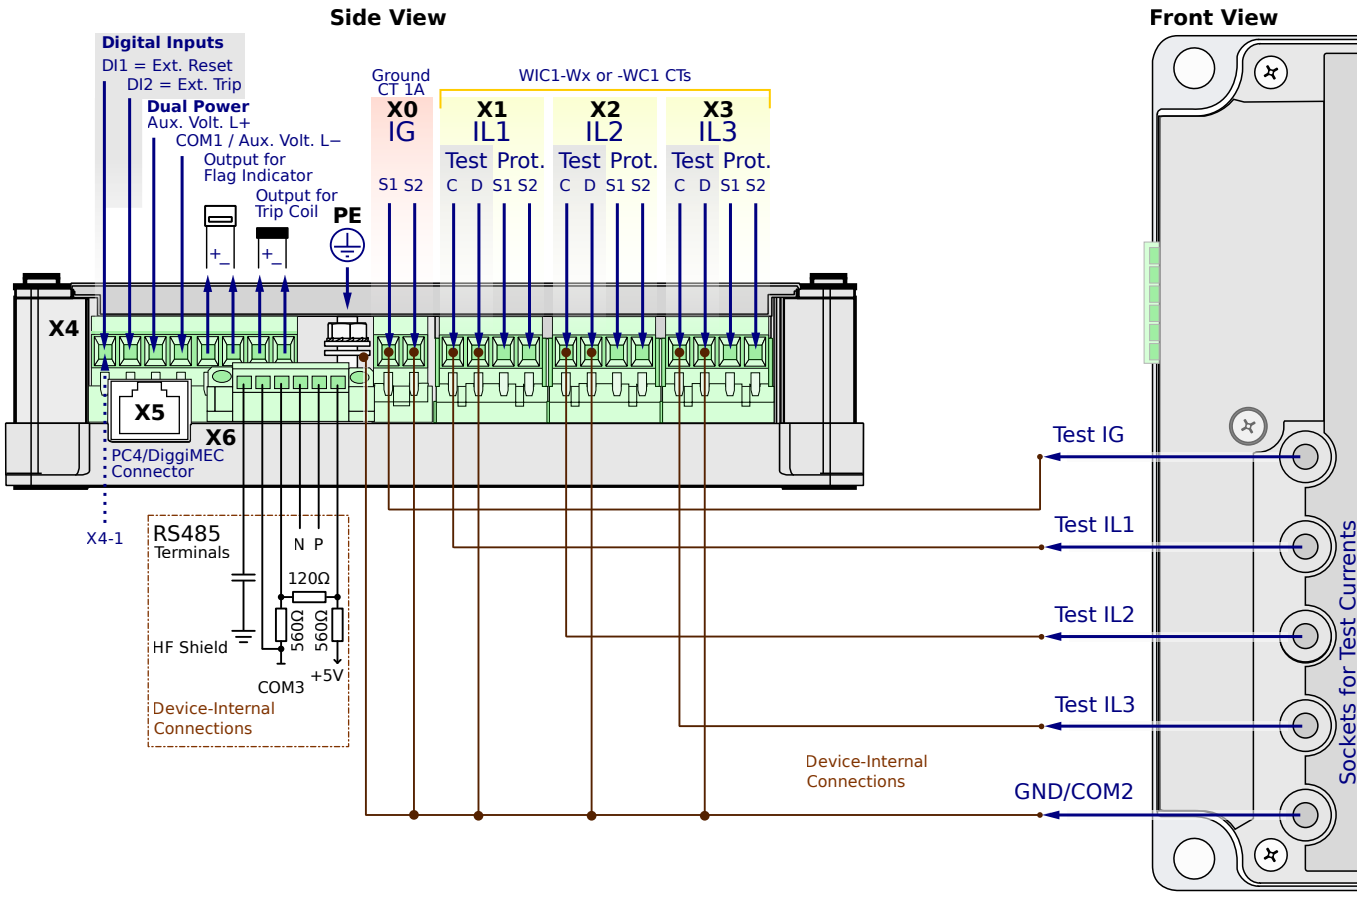


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1PBH

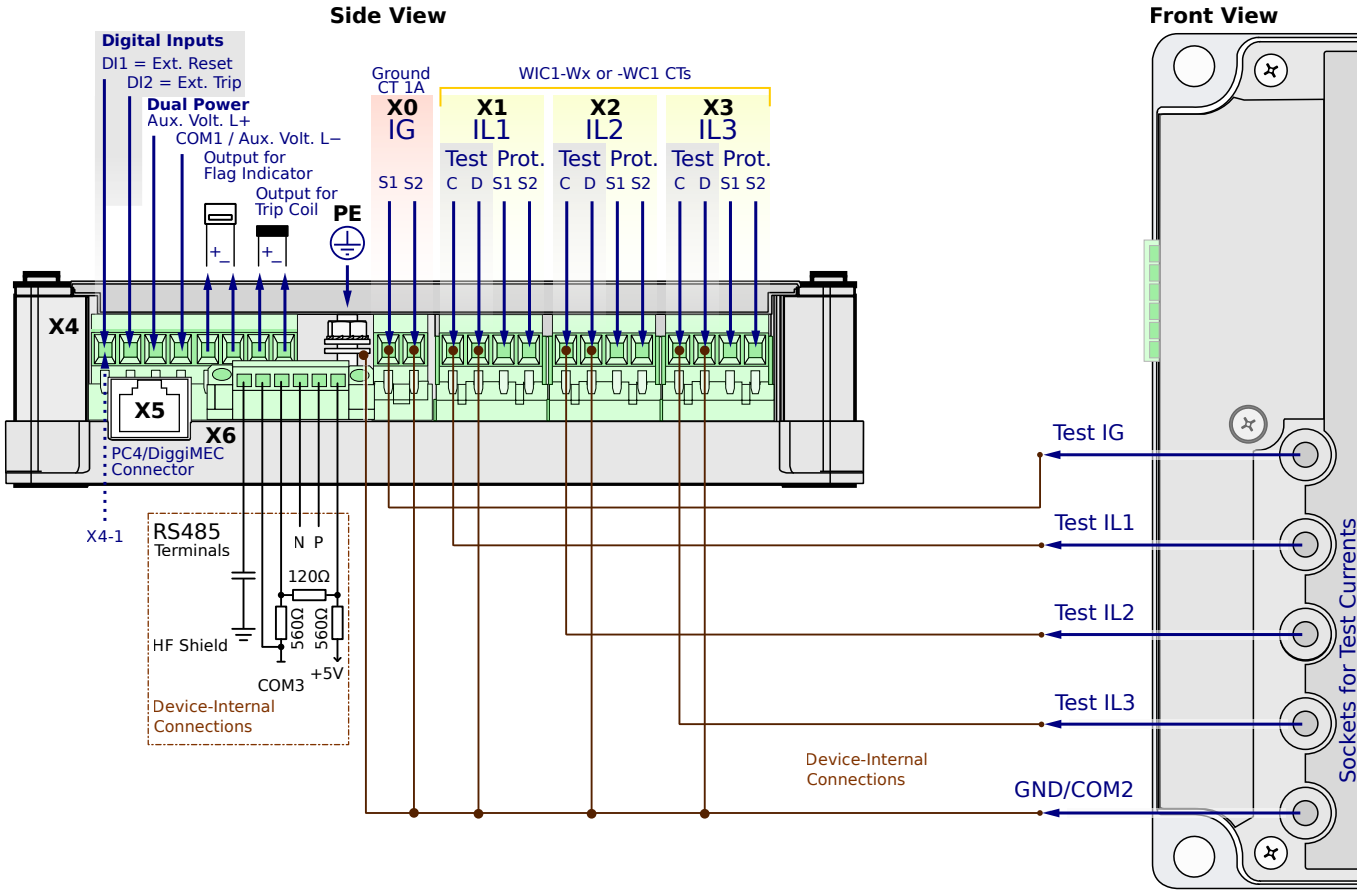


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG1PC0

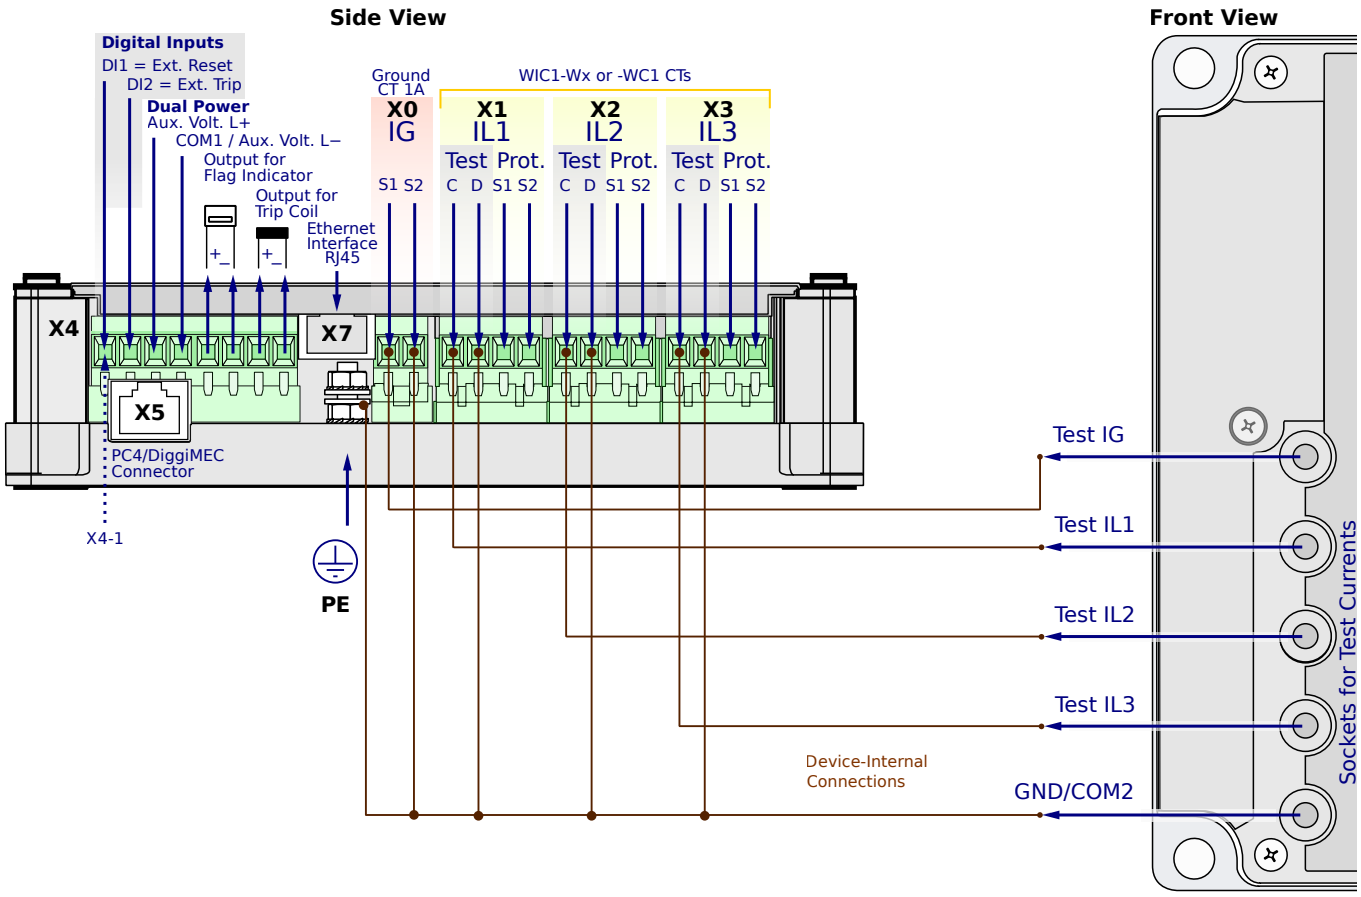


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1PCH

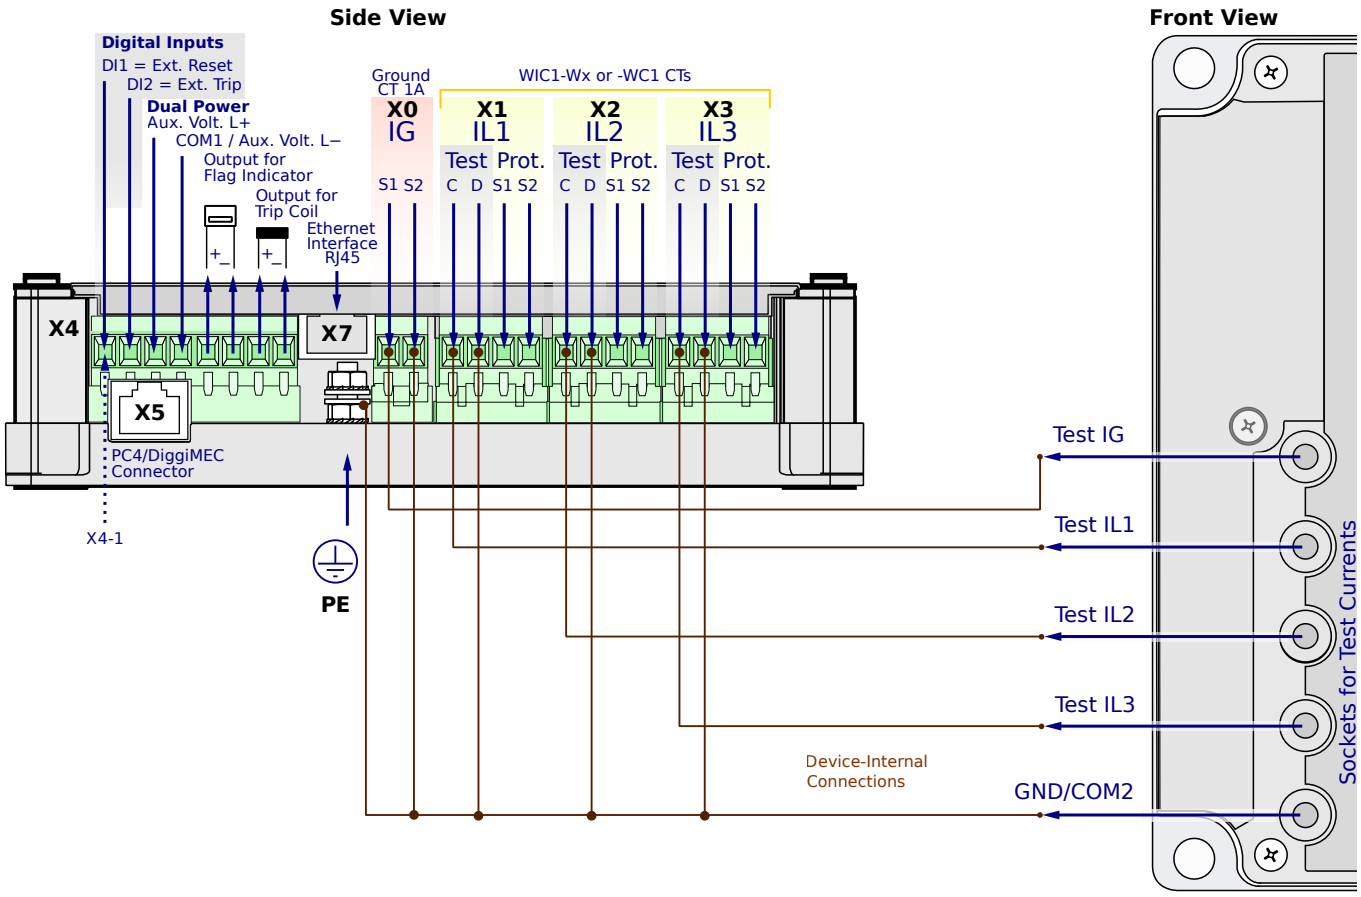


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG1PL0

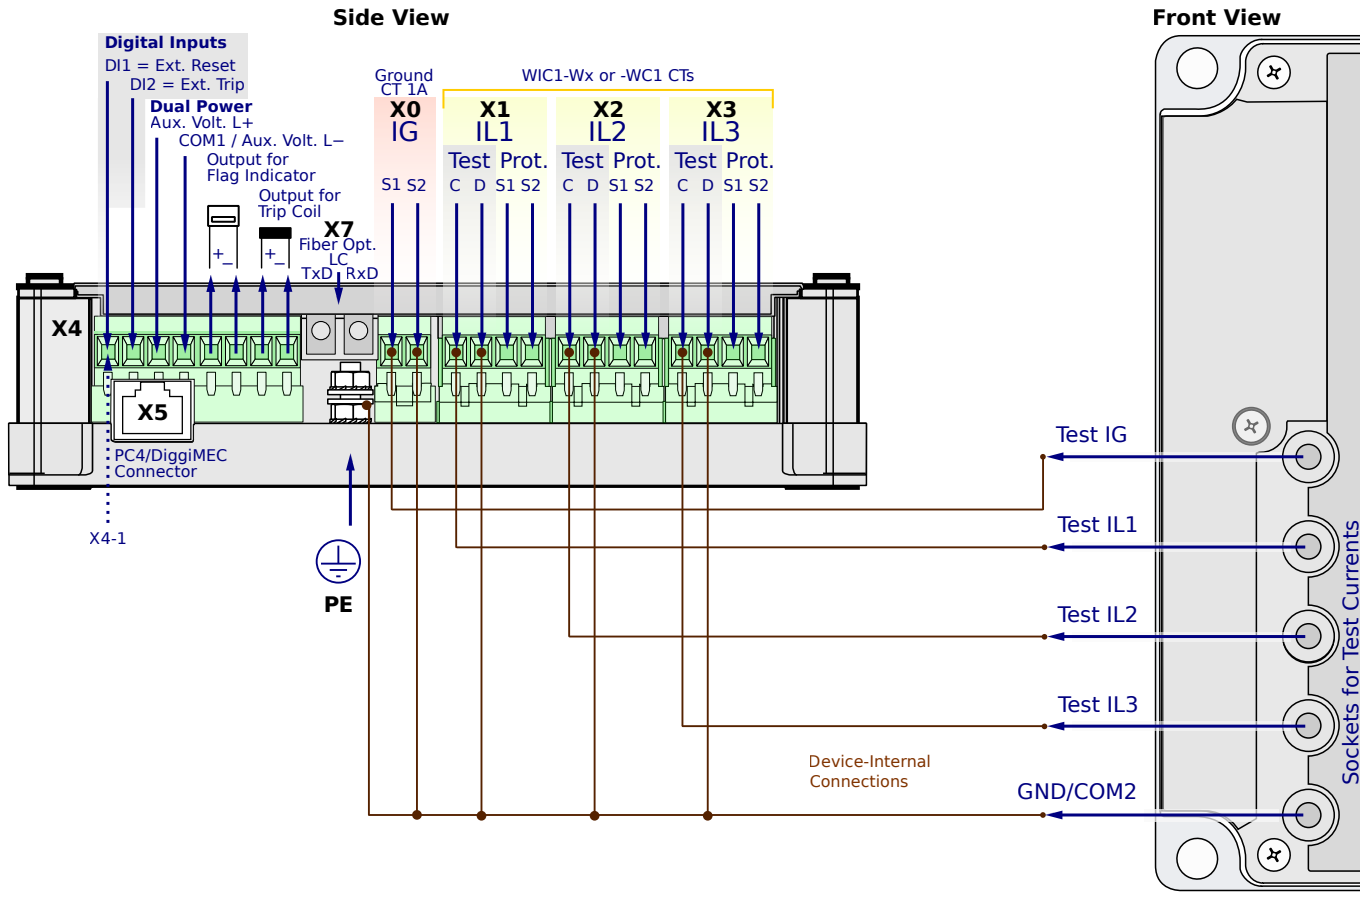


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG1PLH

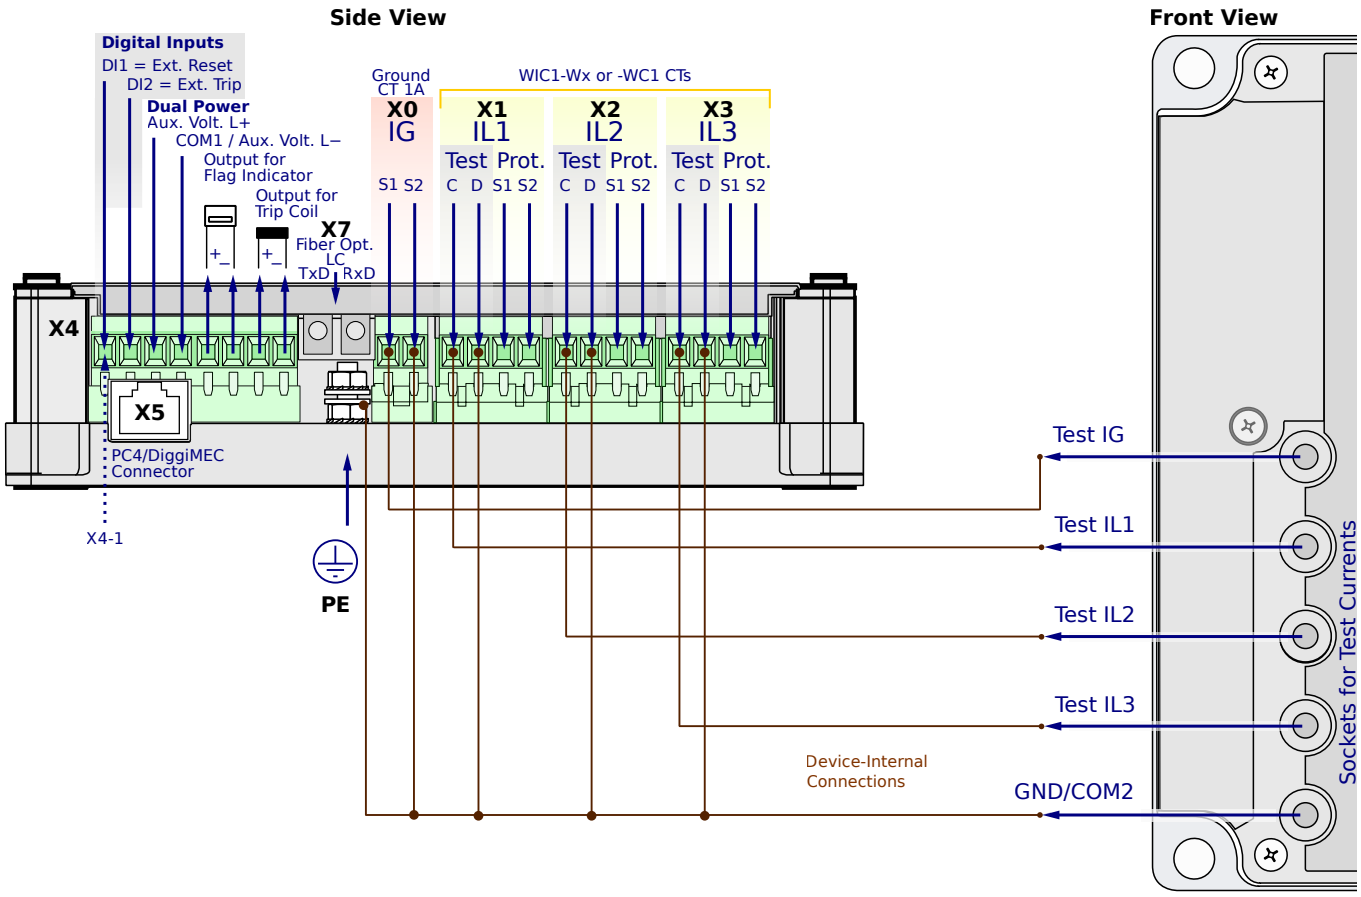


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2SA0

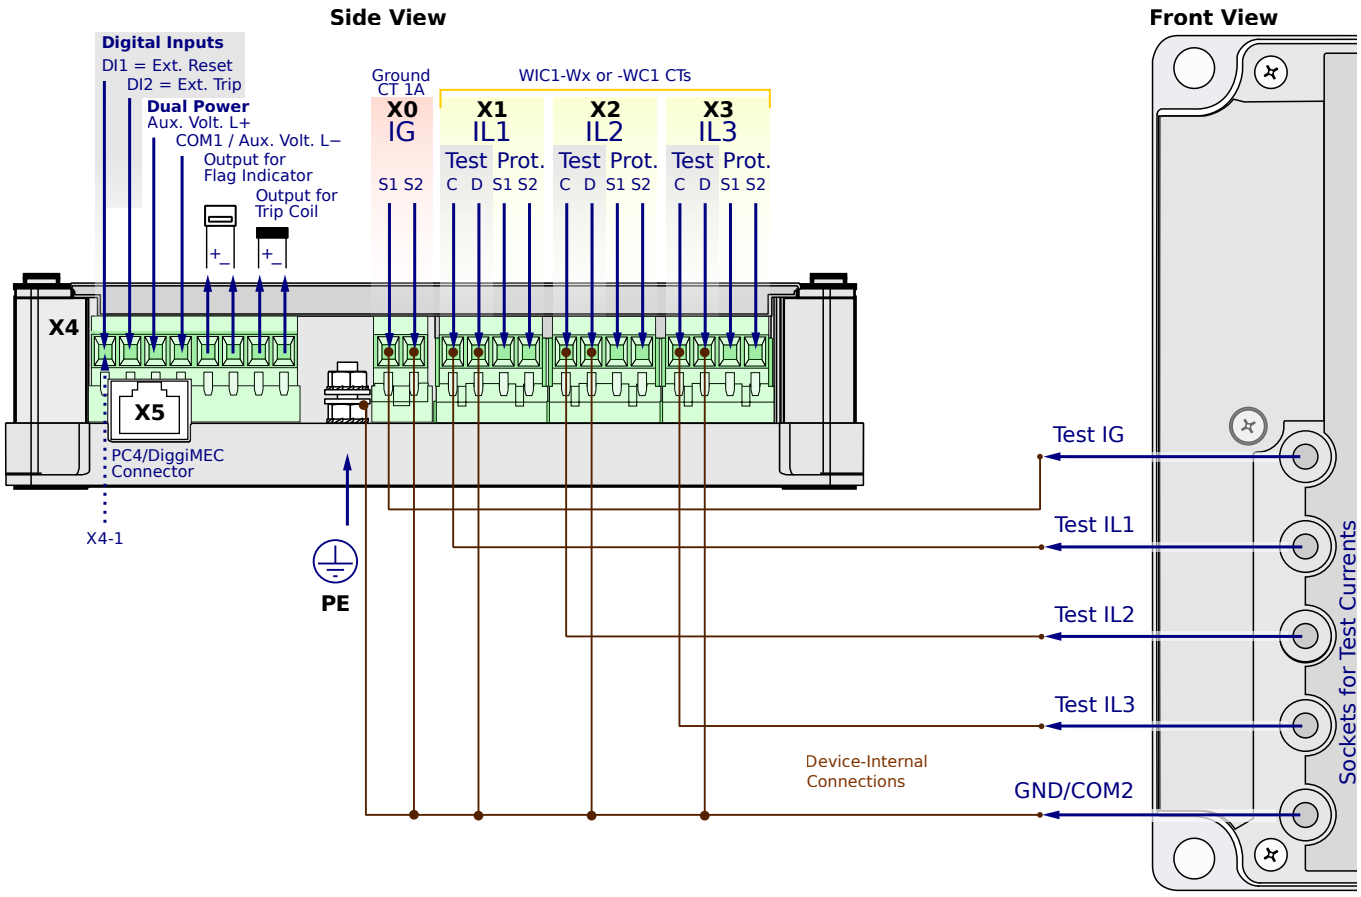


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2SAH

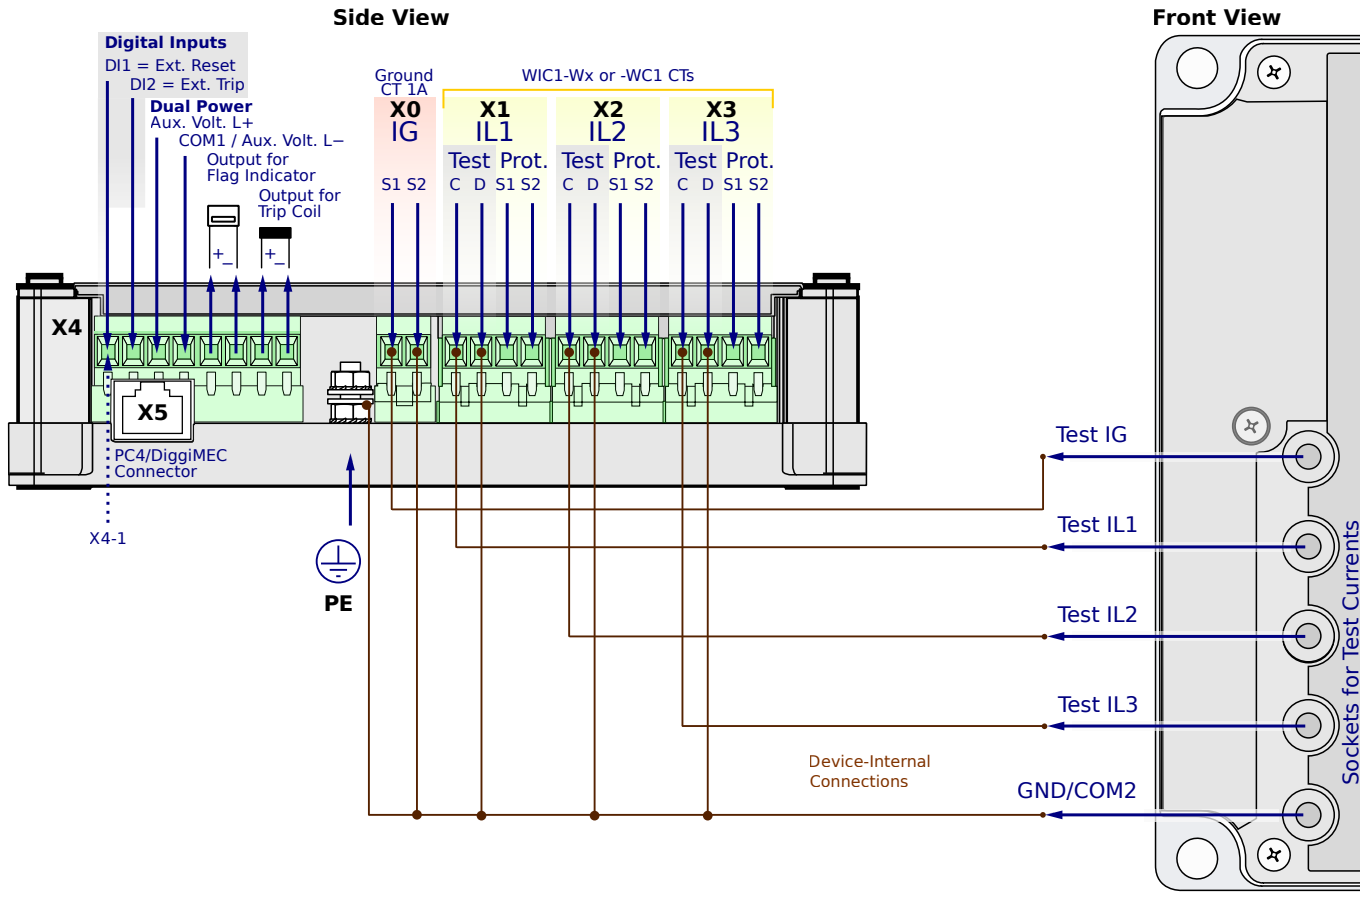


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2SB0

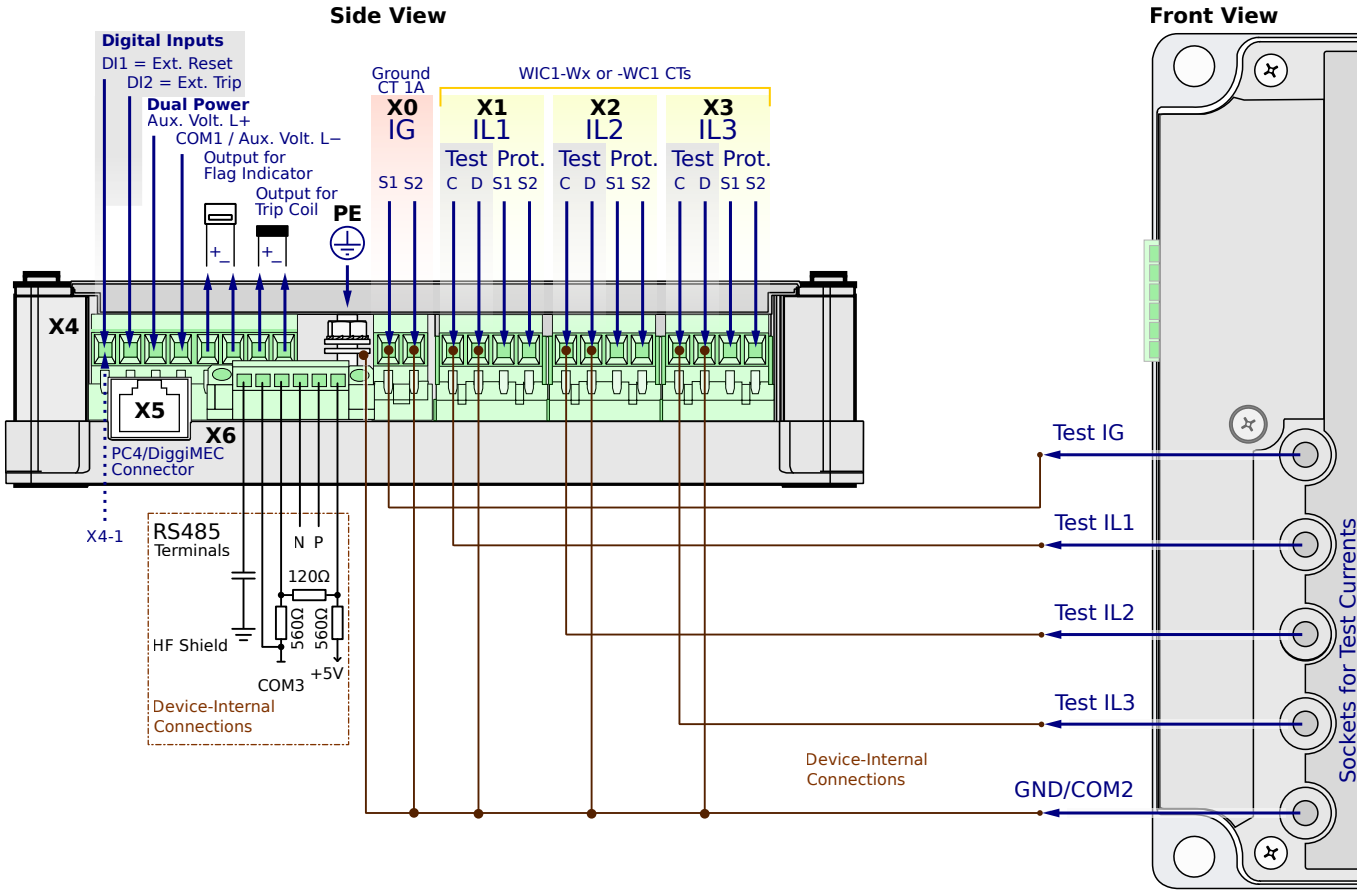


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2SBH

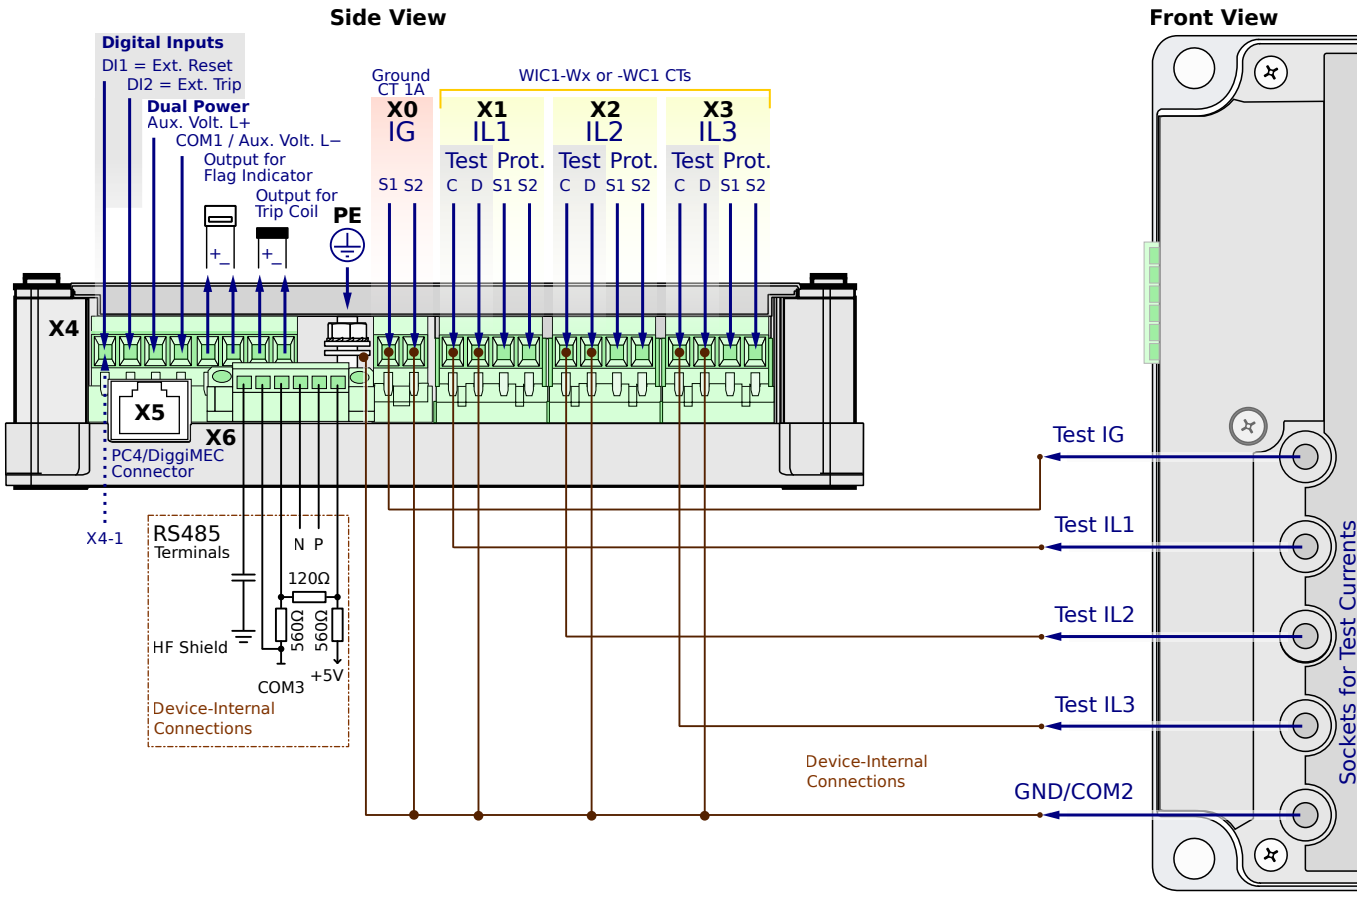


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2SC0

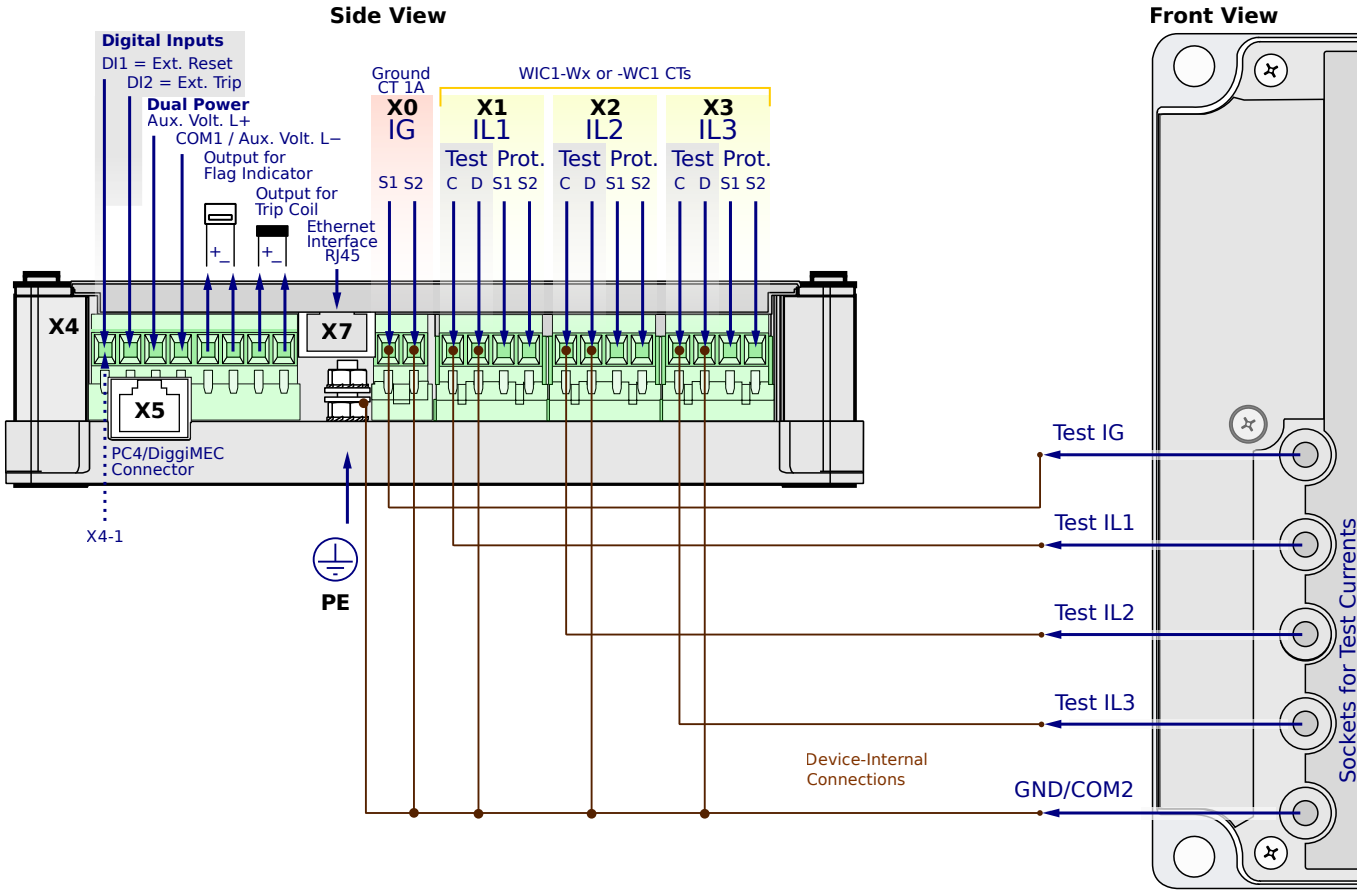


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2SCH

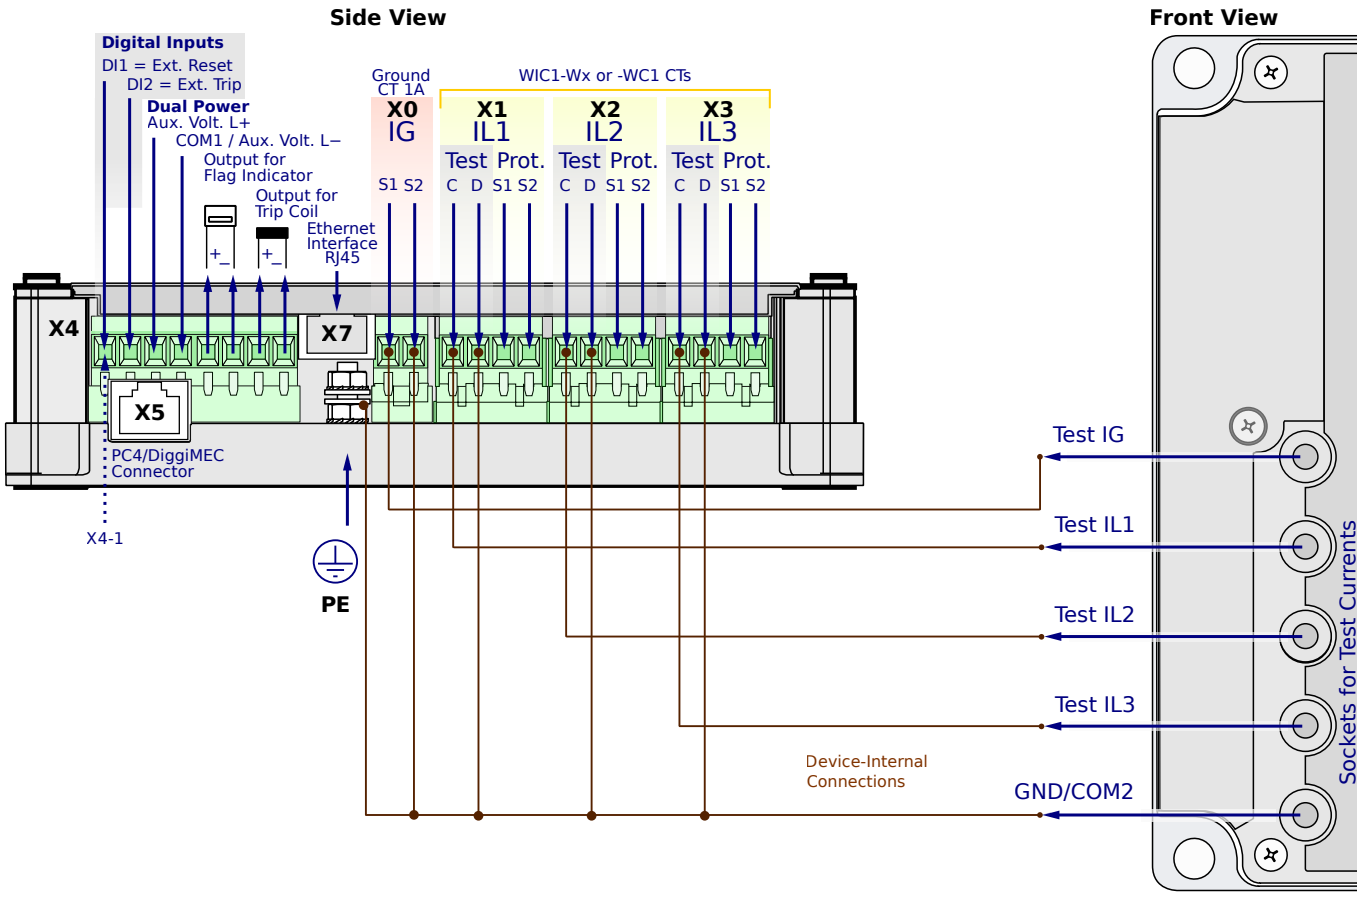


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2SL0

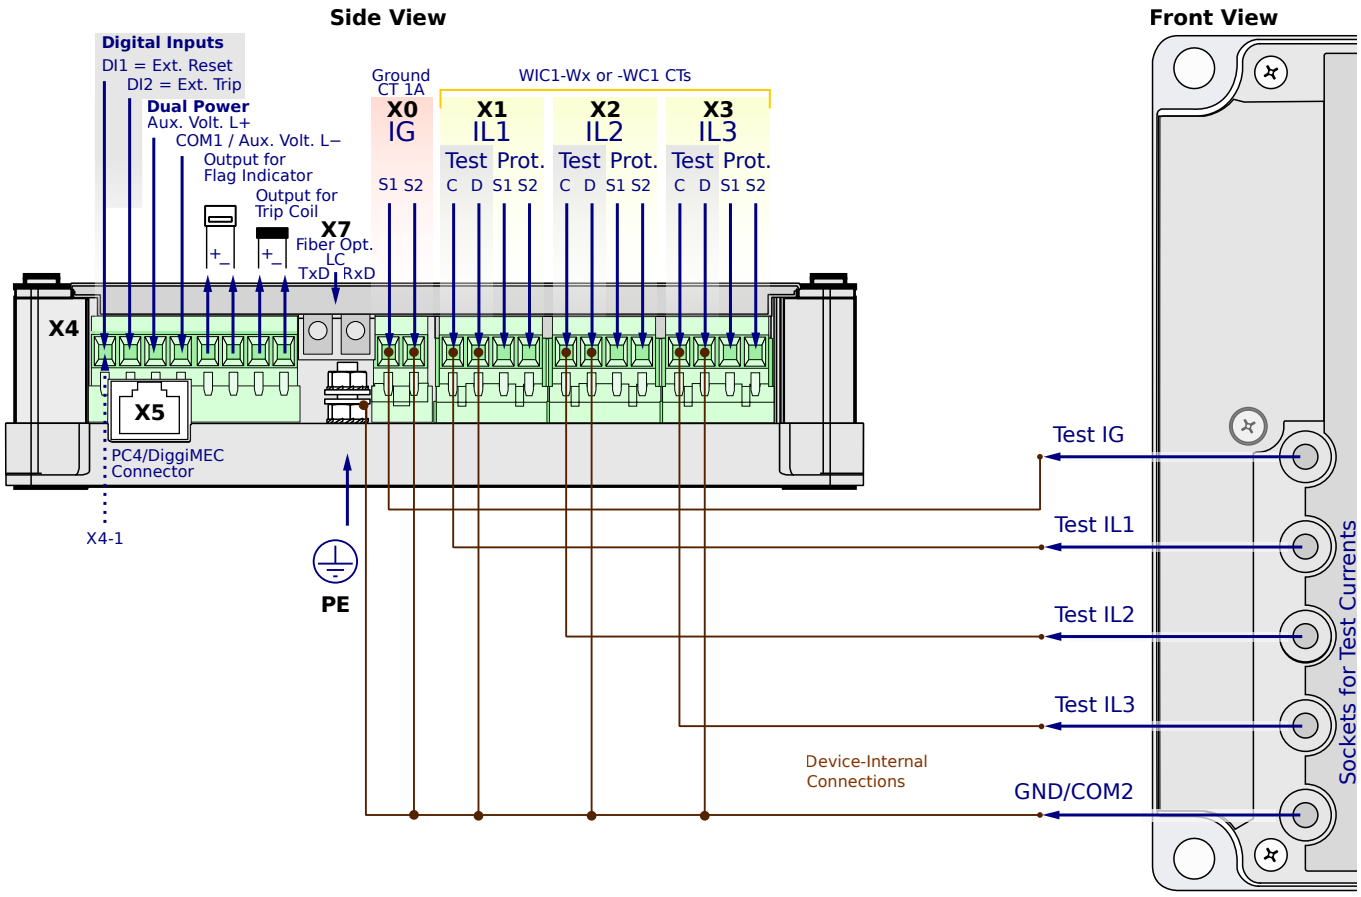


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2SLH

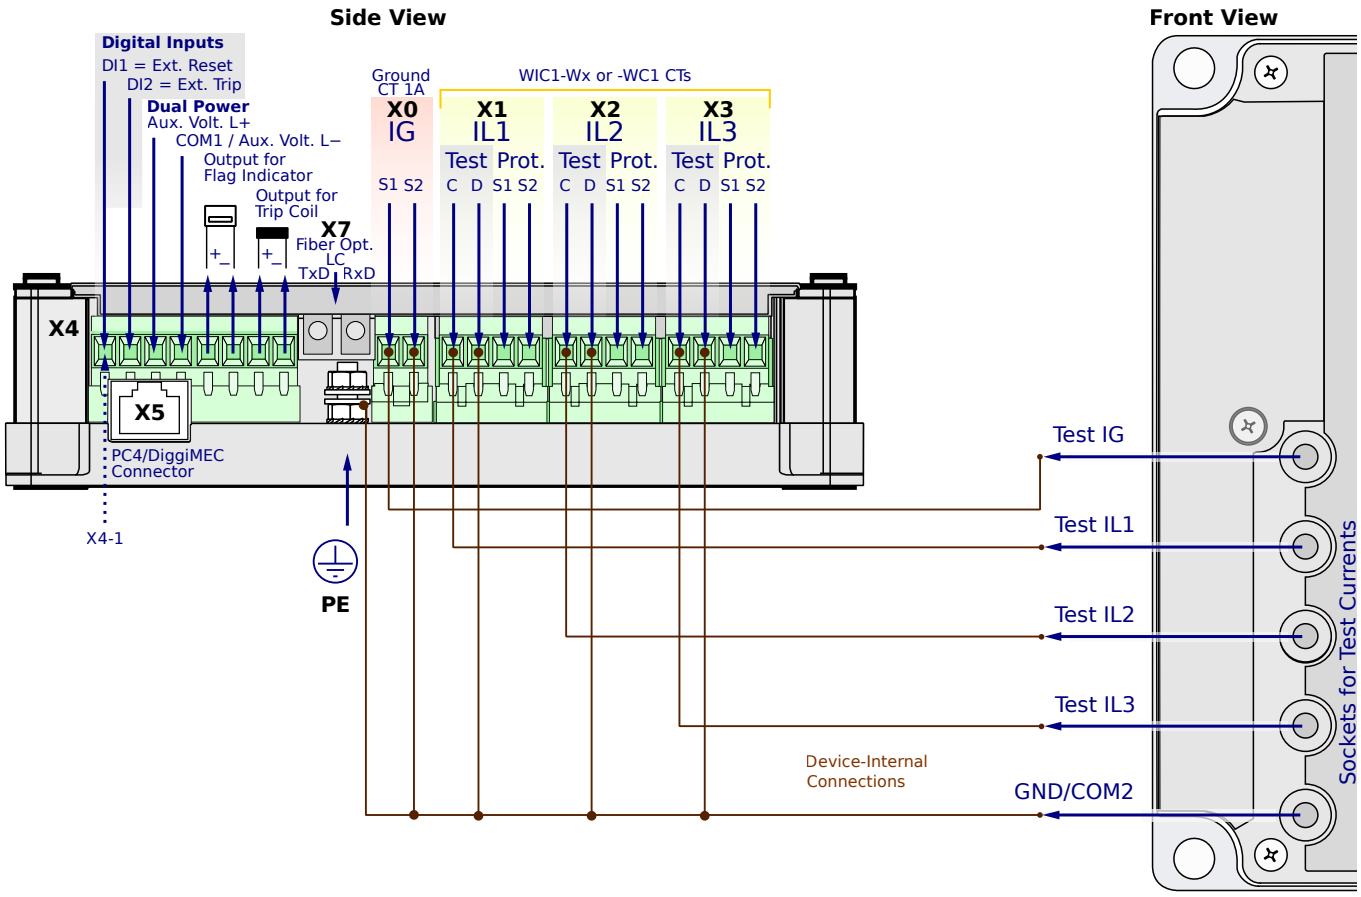


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2AA0

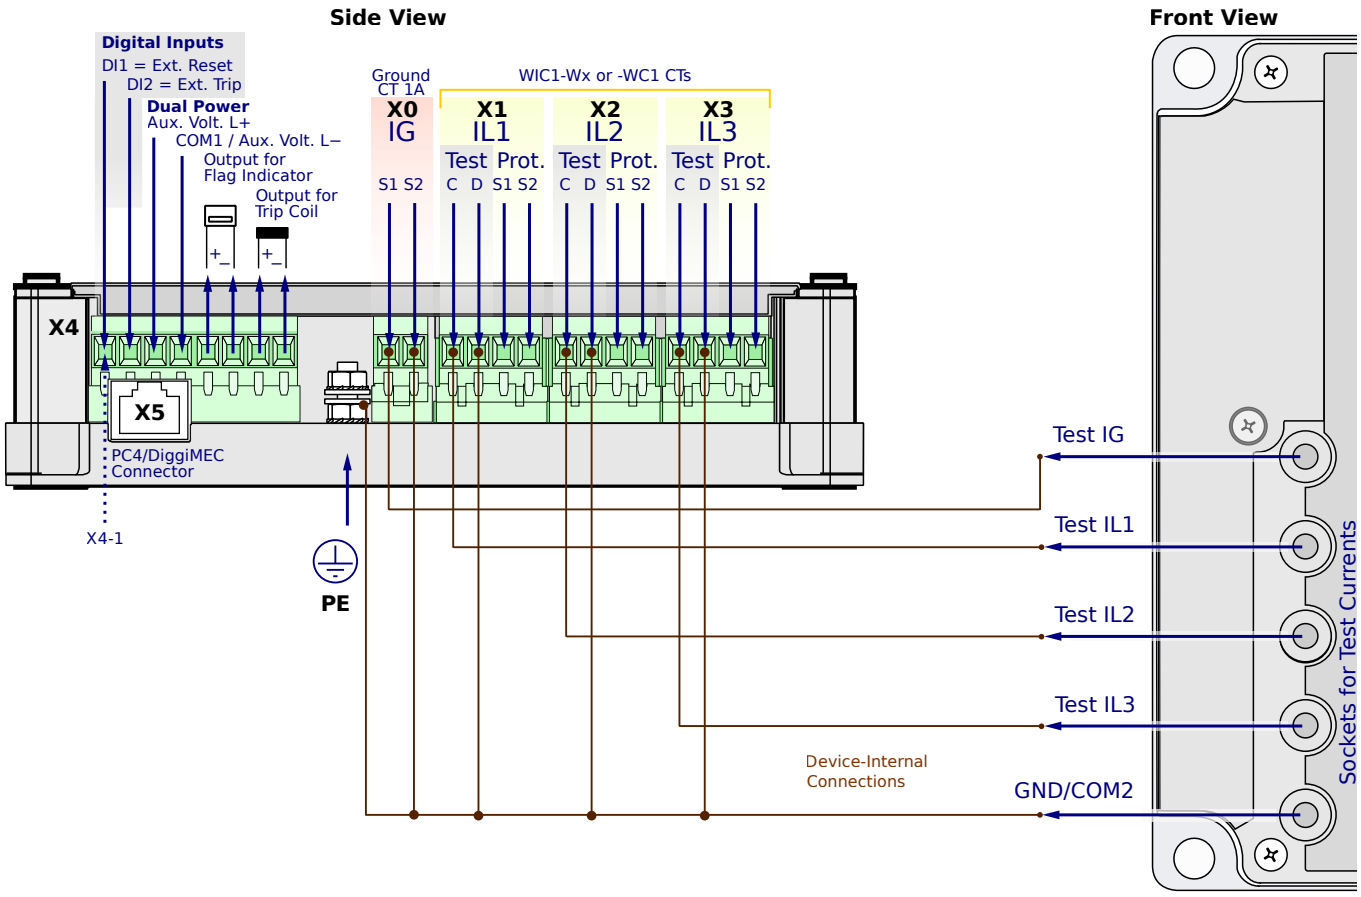


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2AAH

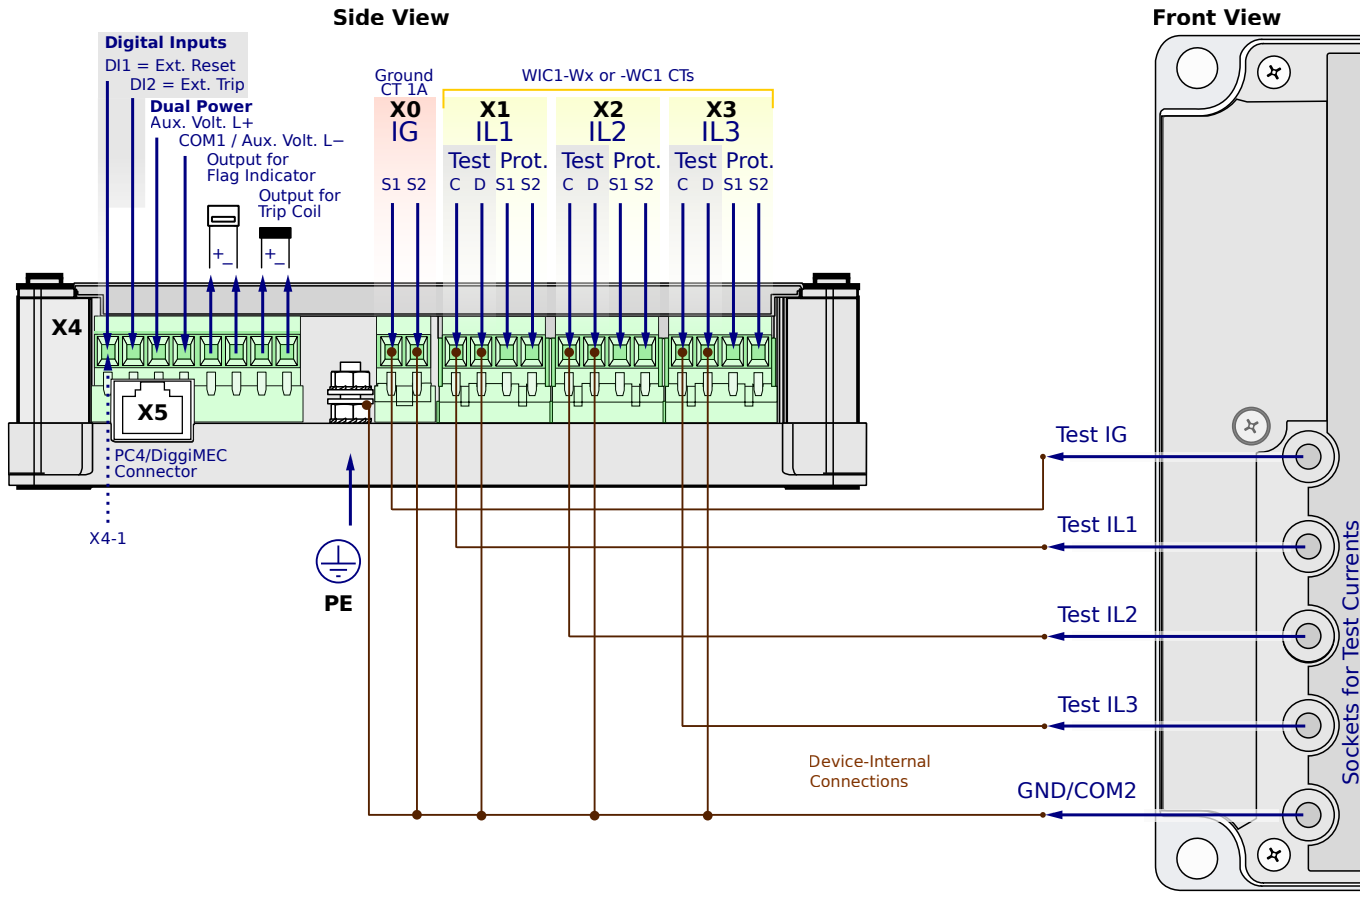


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2AB0

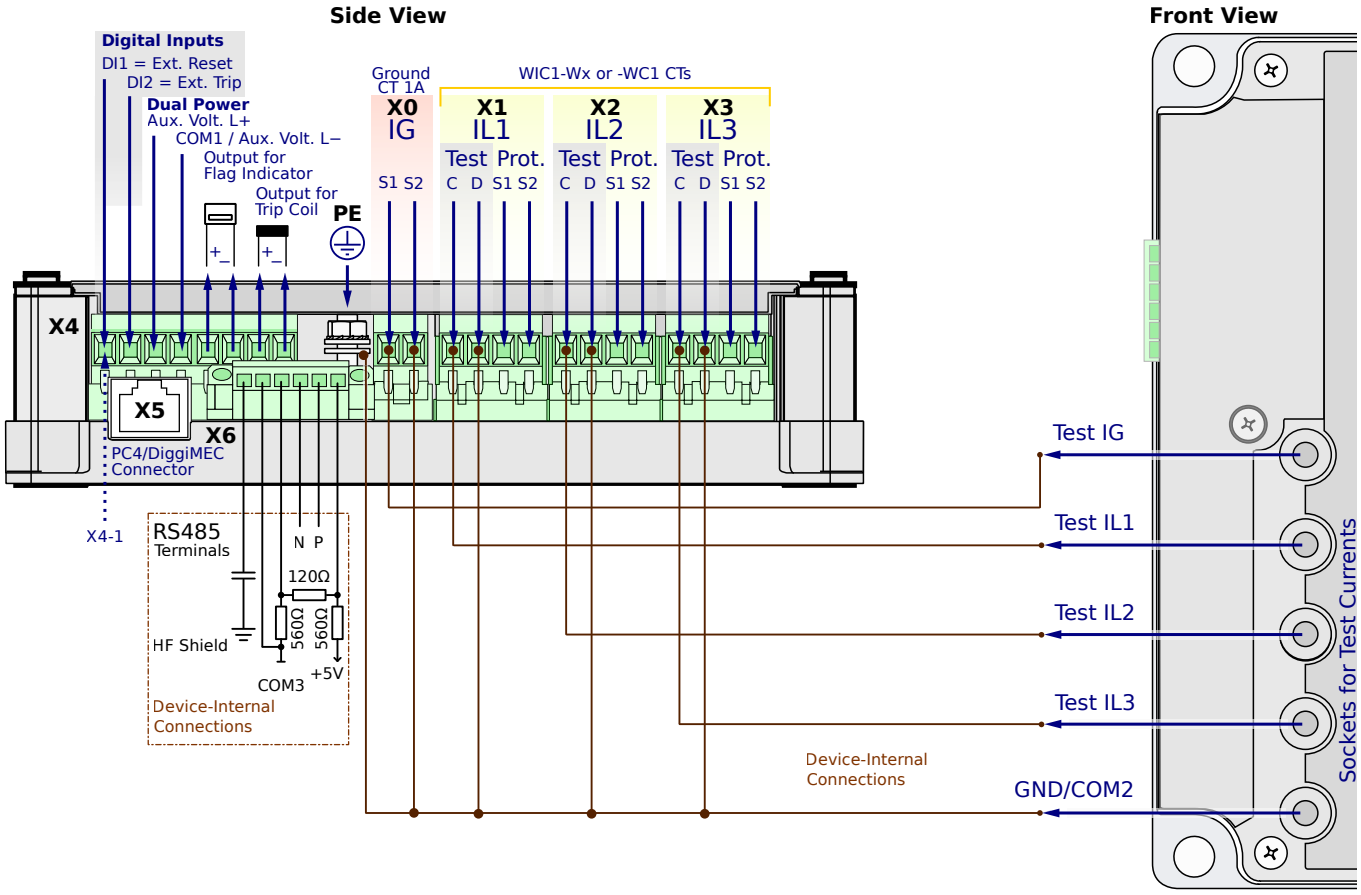


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2ABH

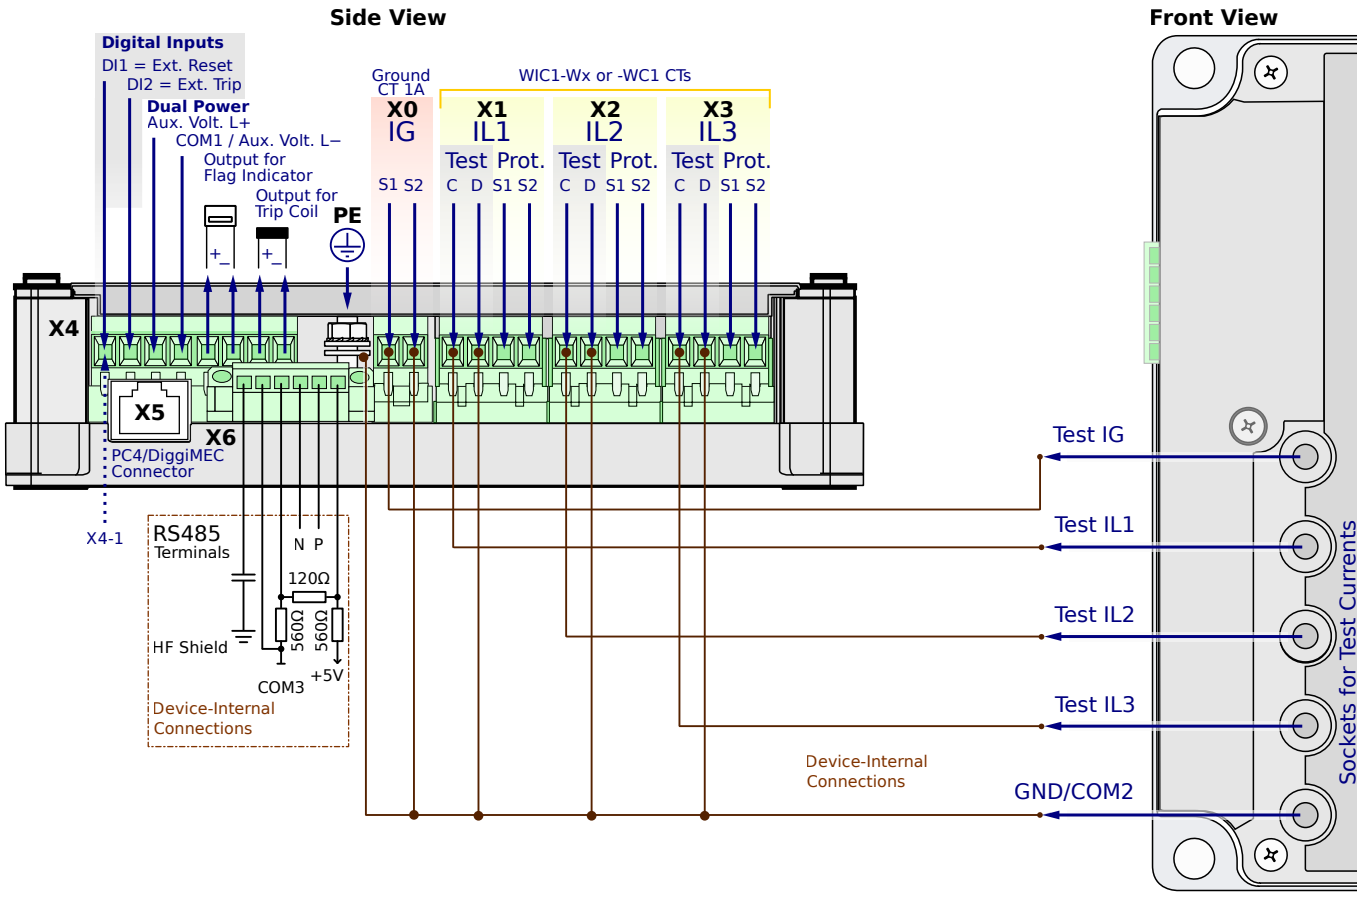


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2AC0

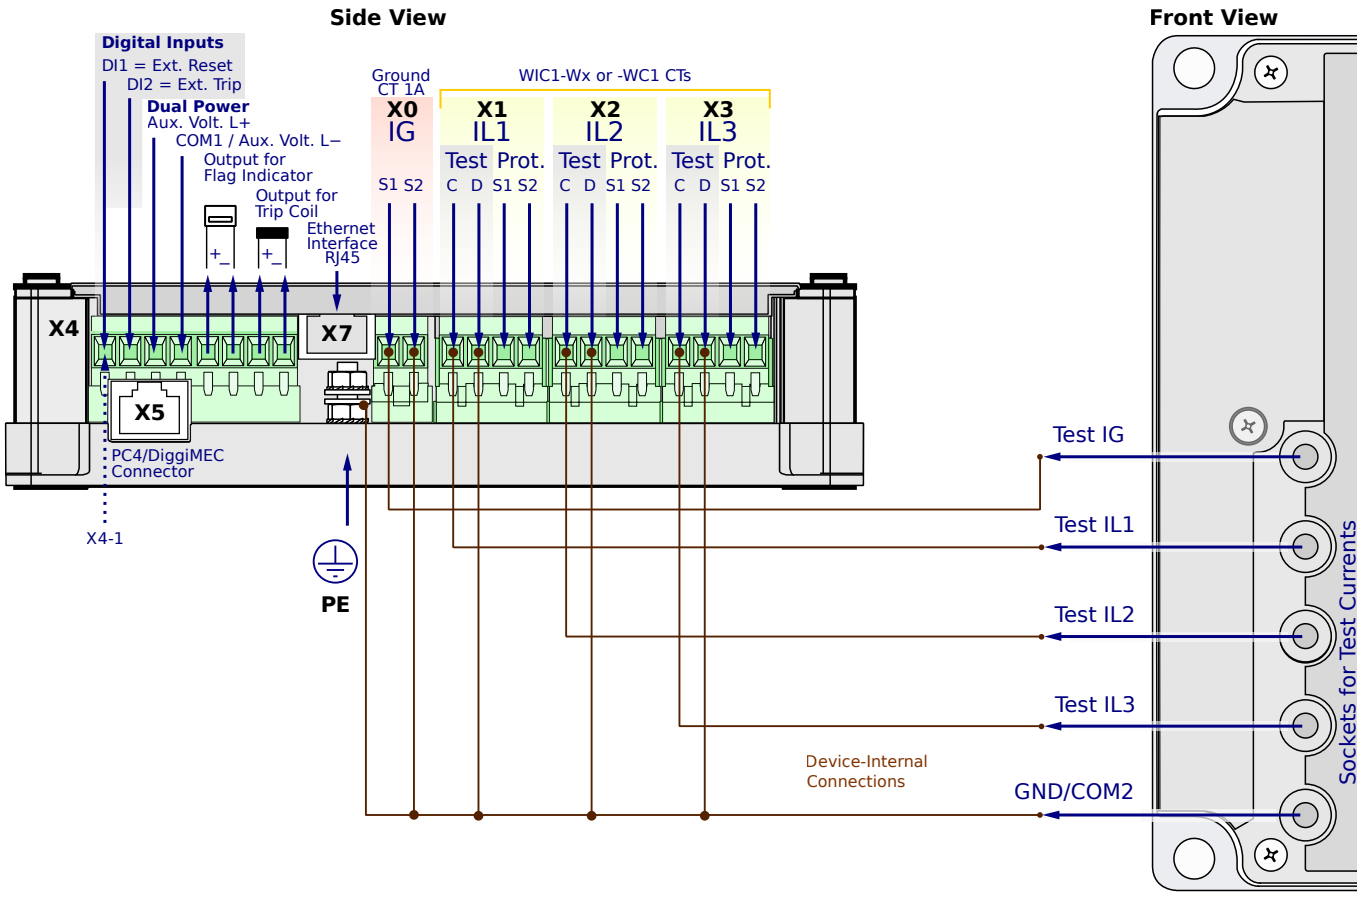


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2ACH

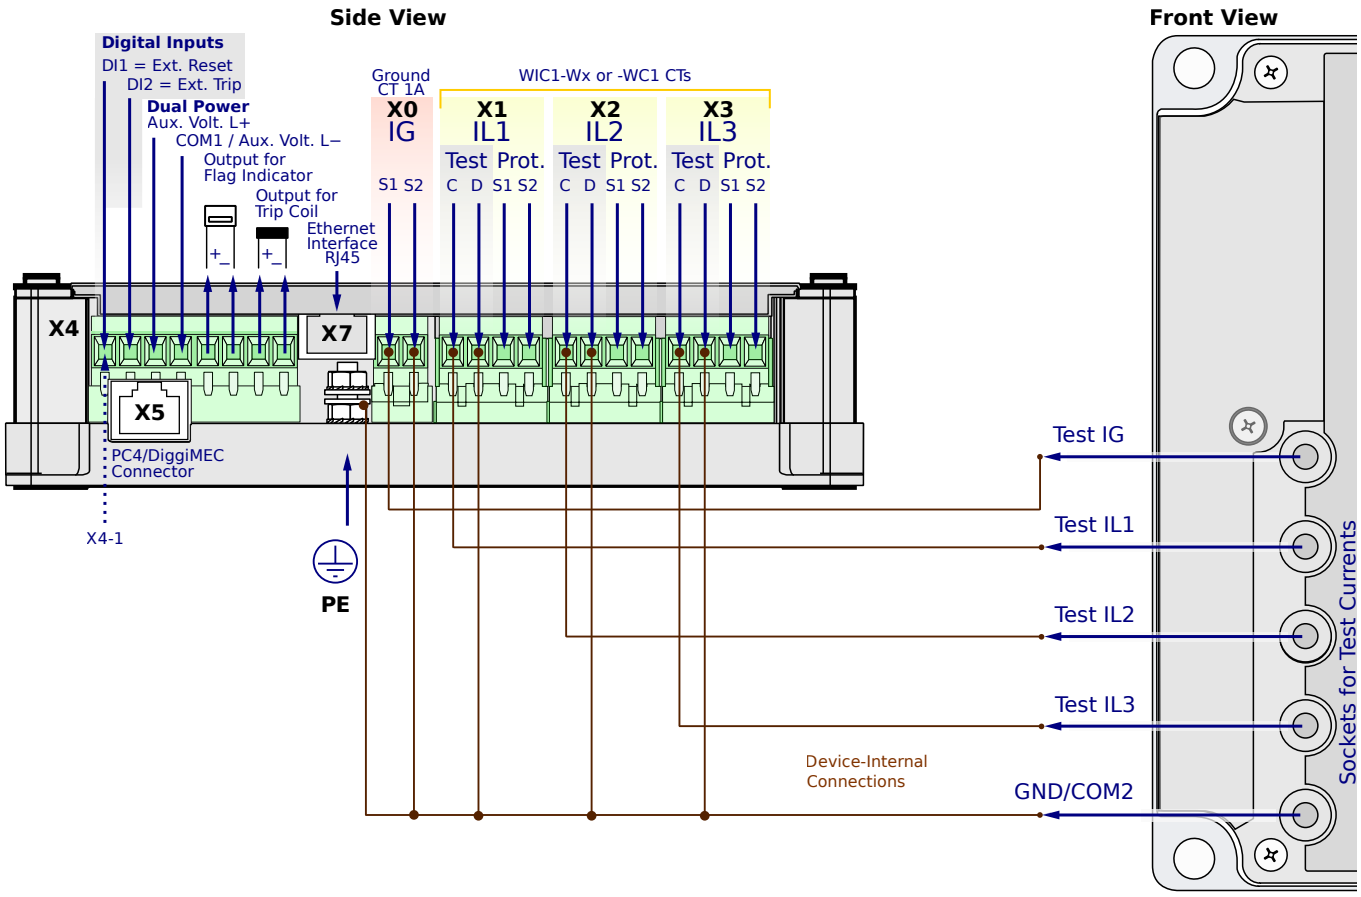


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2AL0

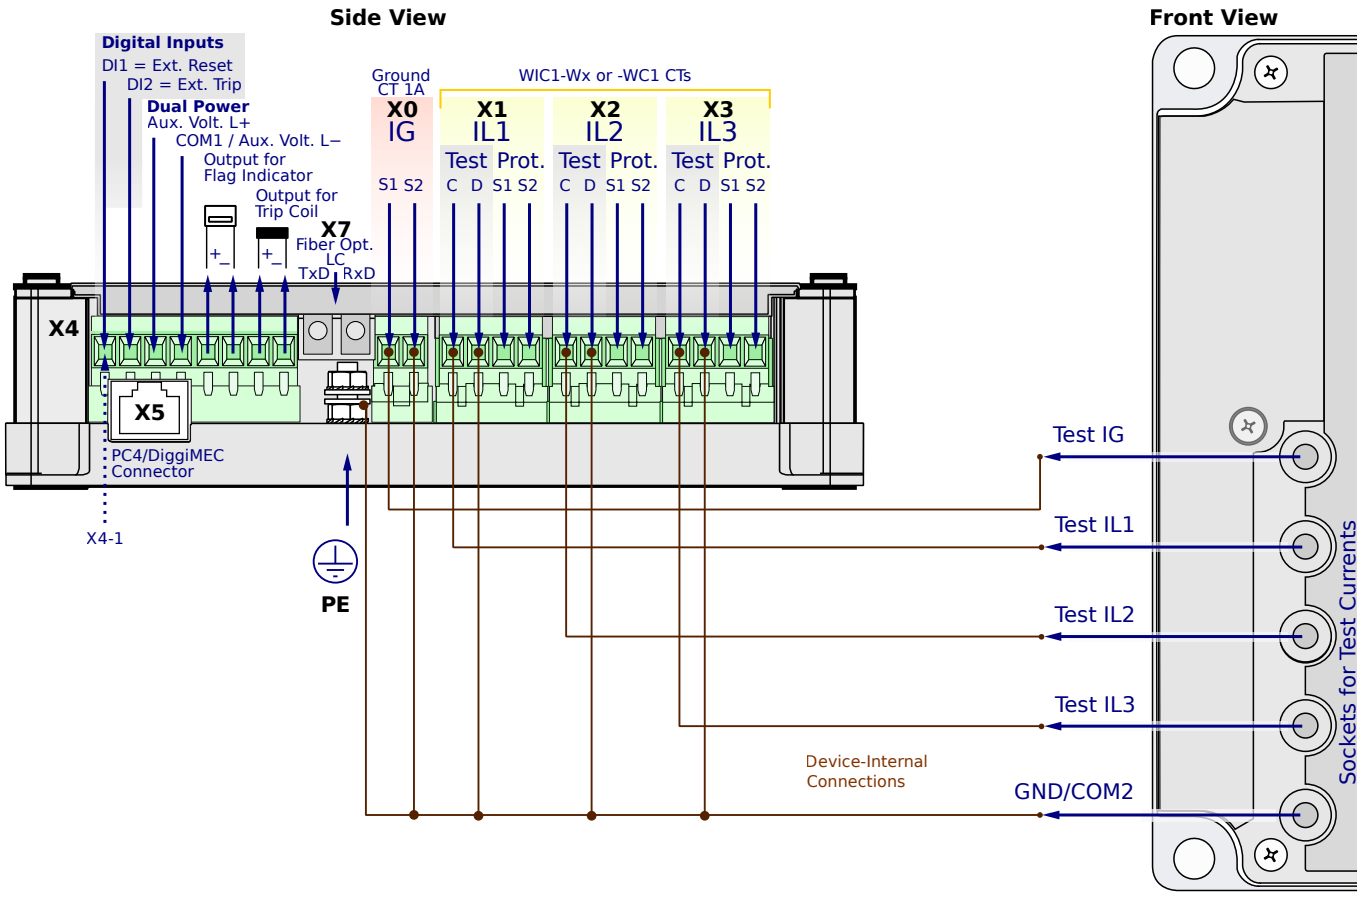


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2ALH

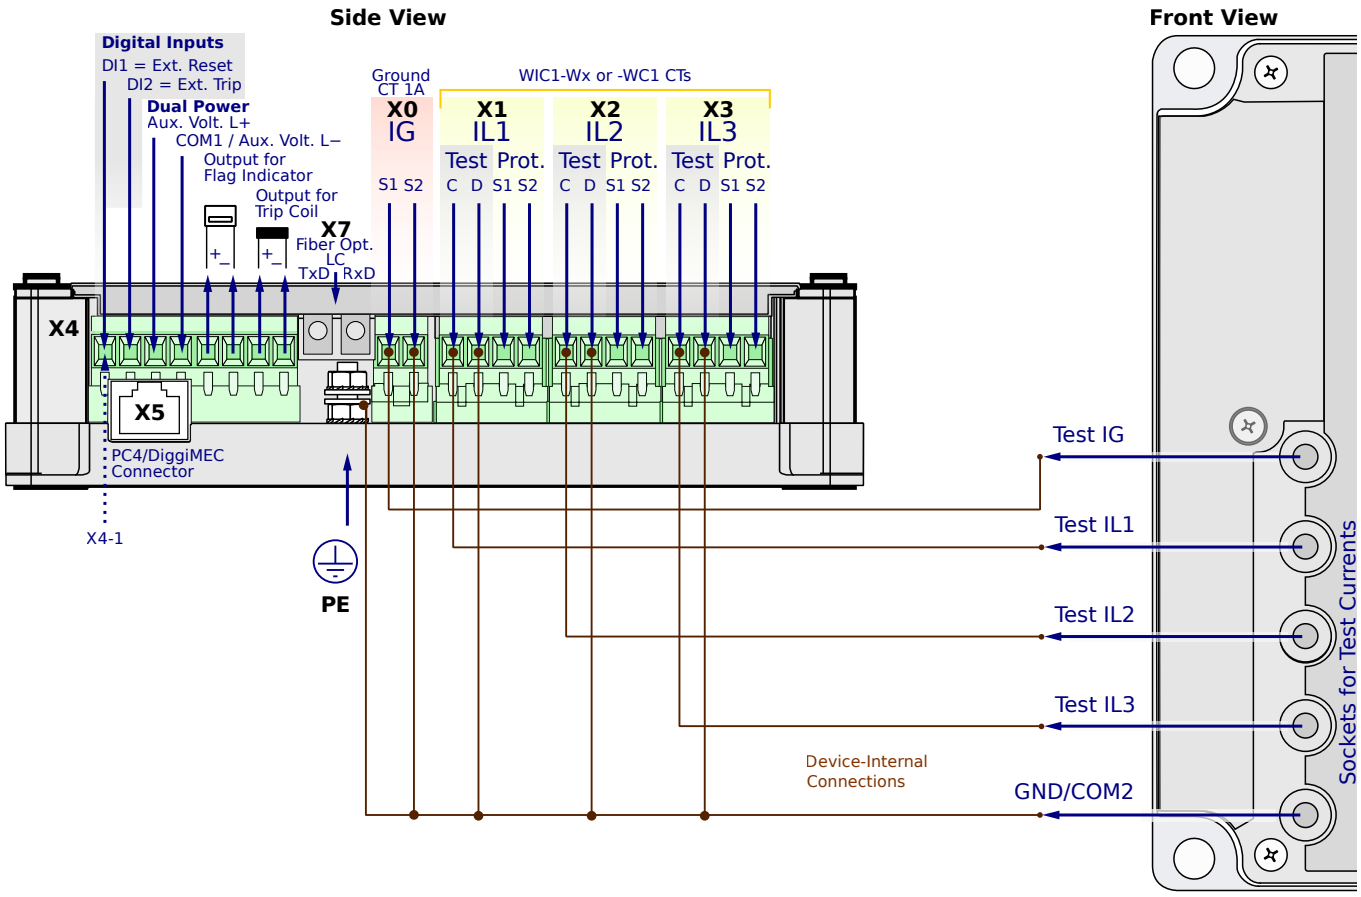


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2PA0

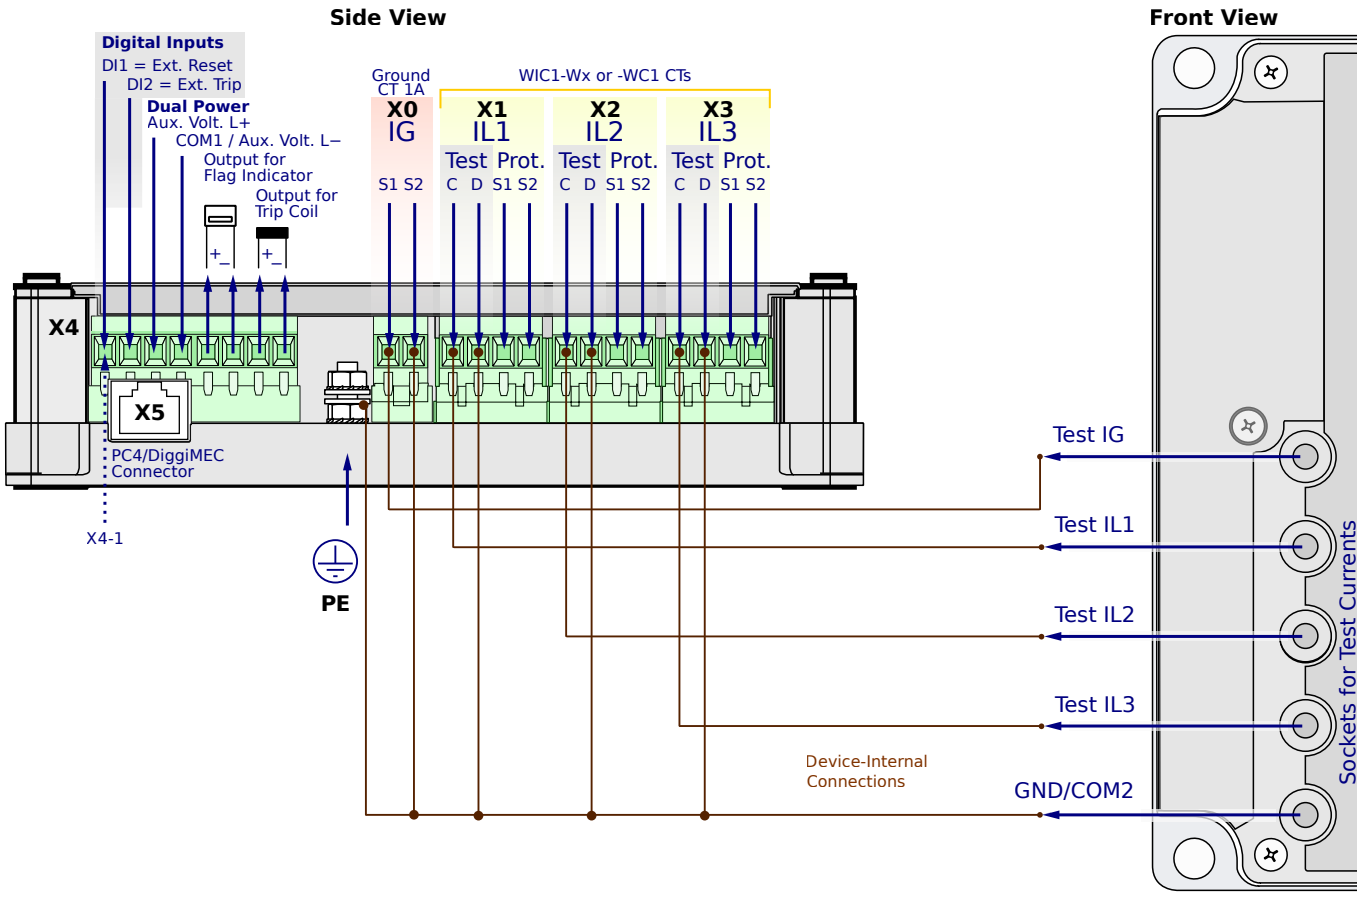


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2PAH

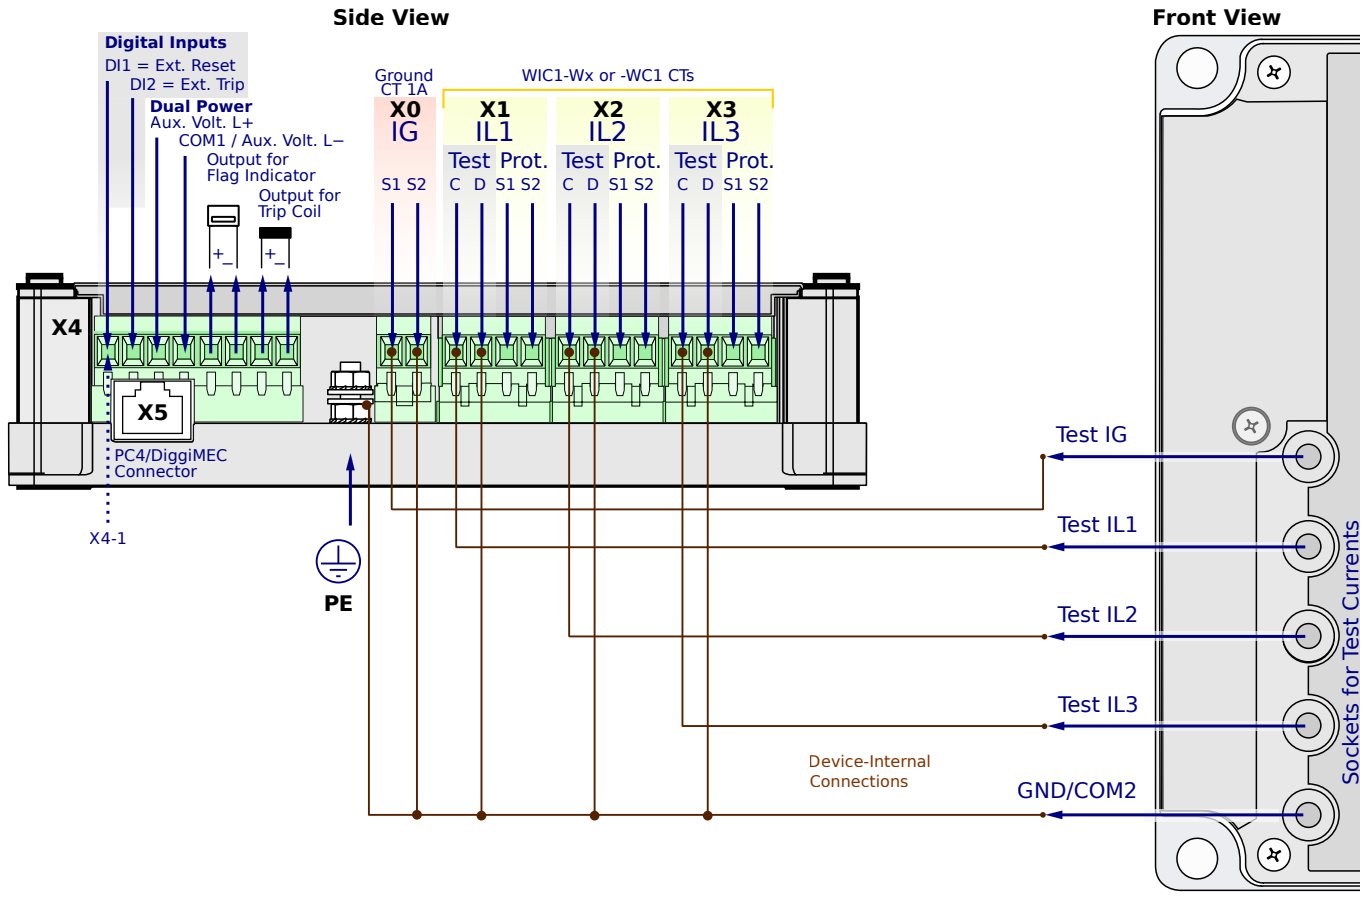


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FG2PB0

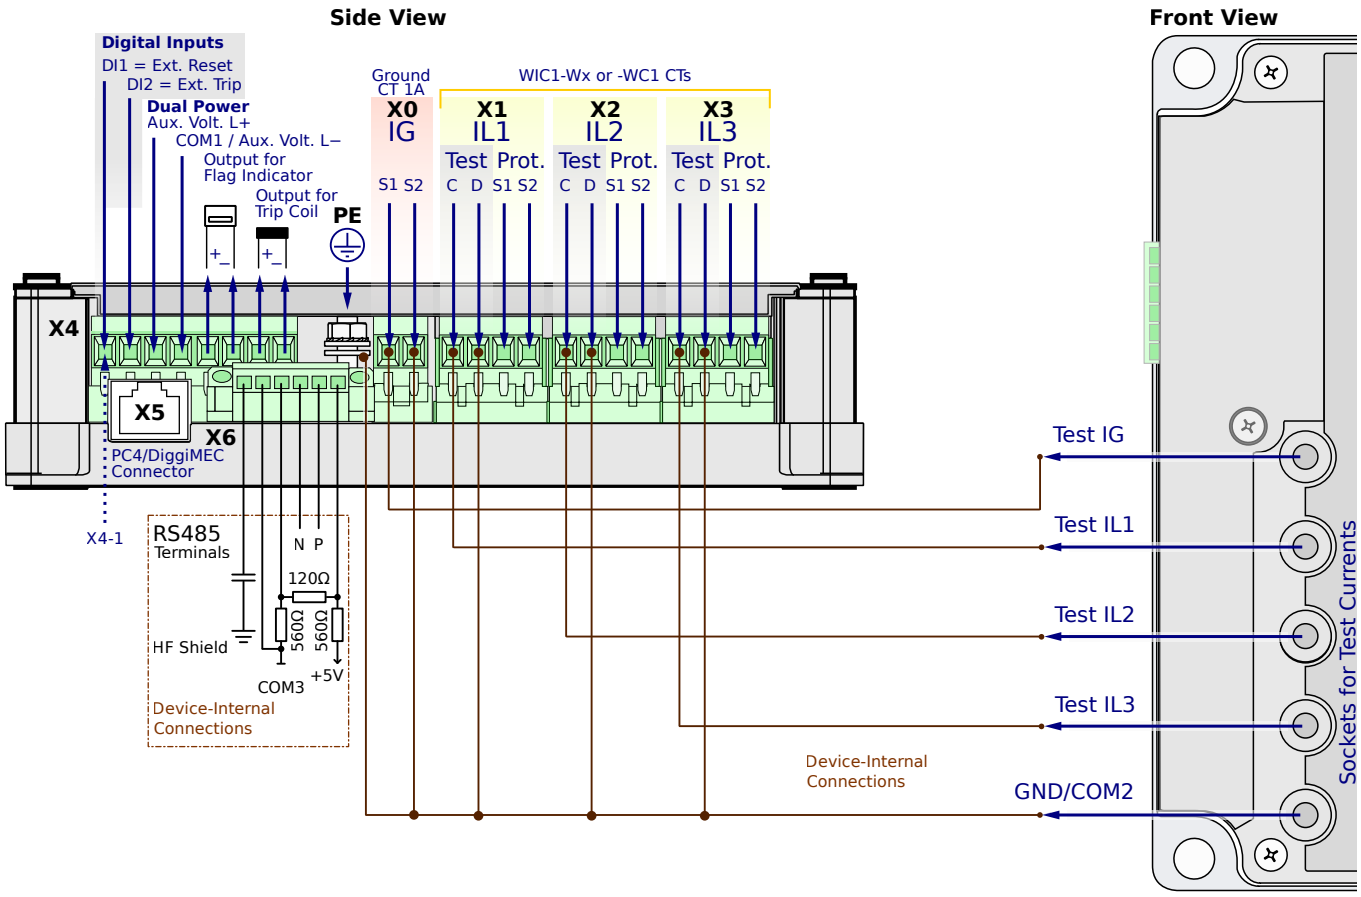


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2PBH

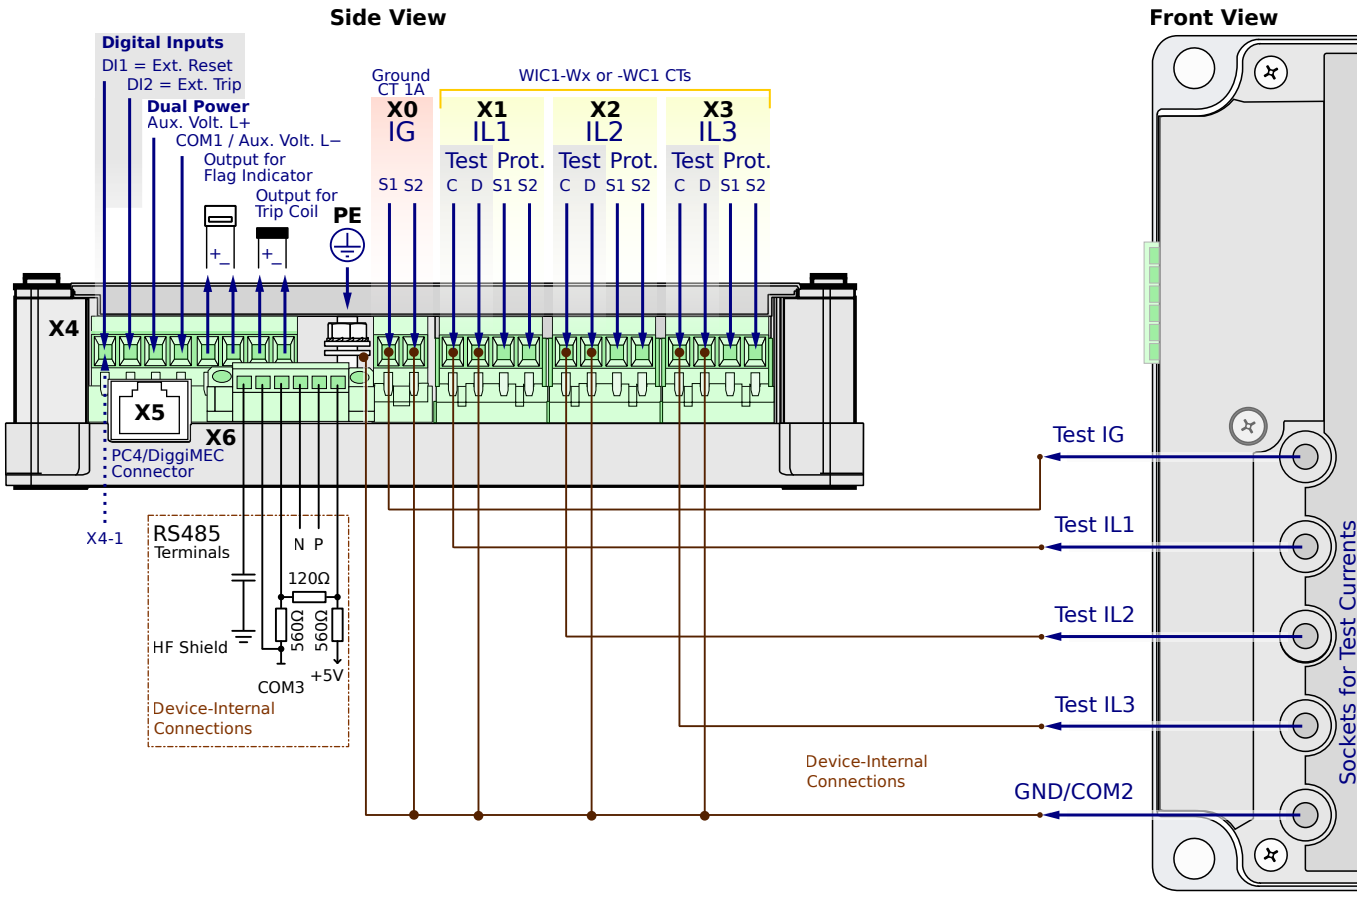


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FG2PC0

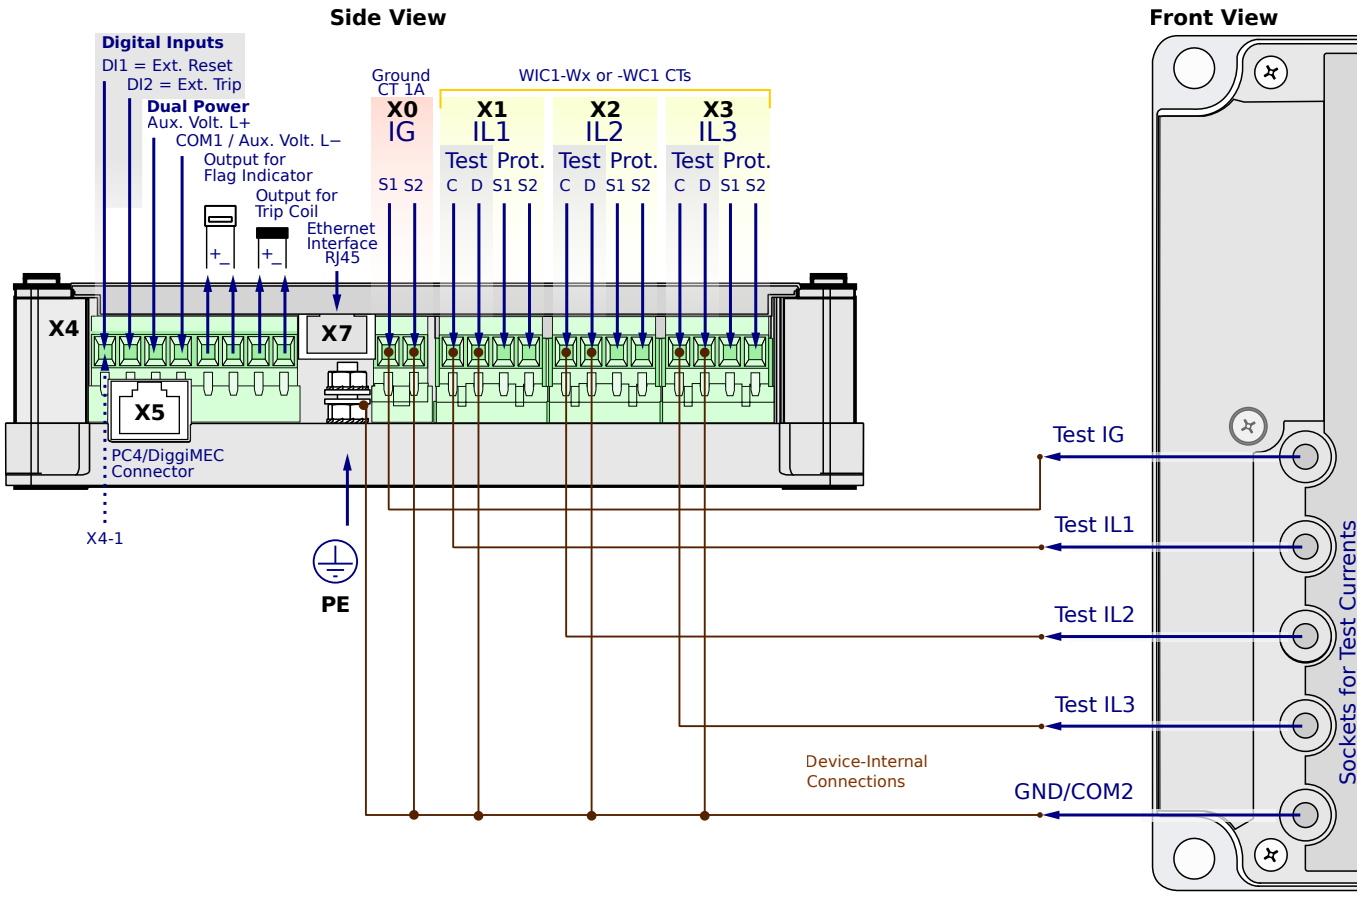


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2PCH

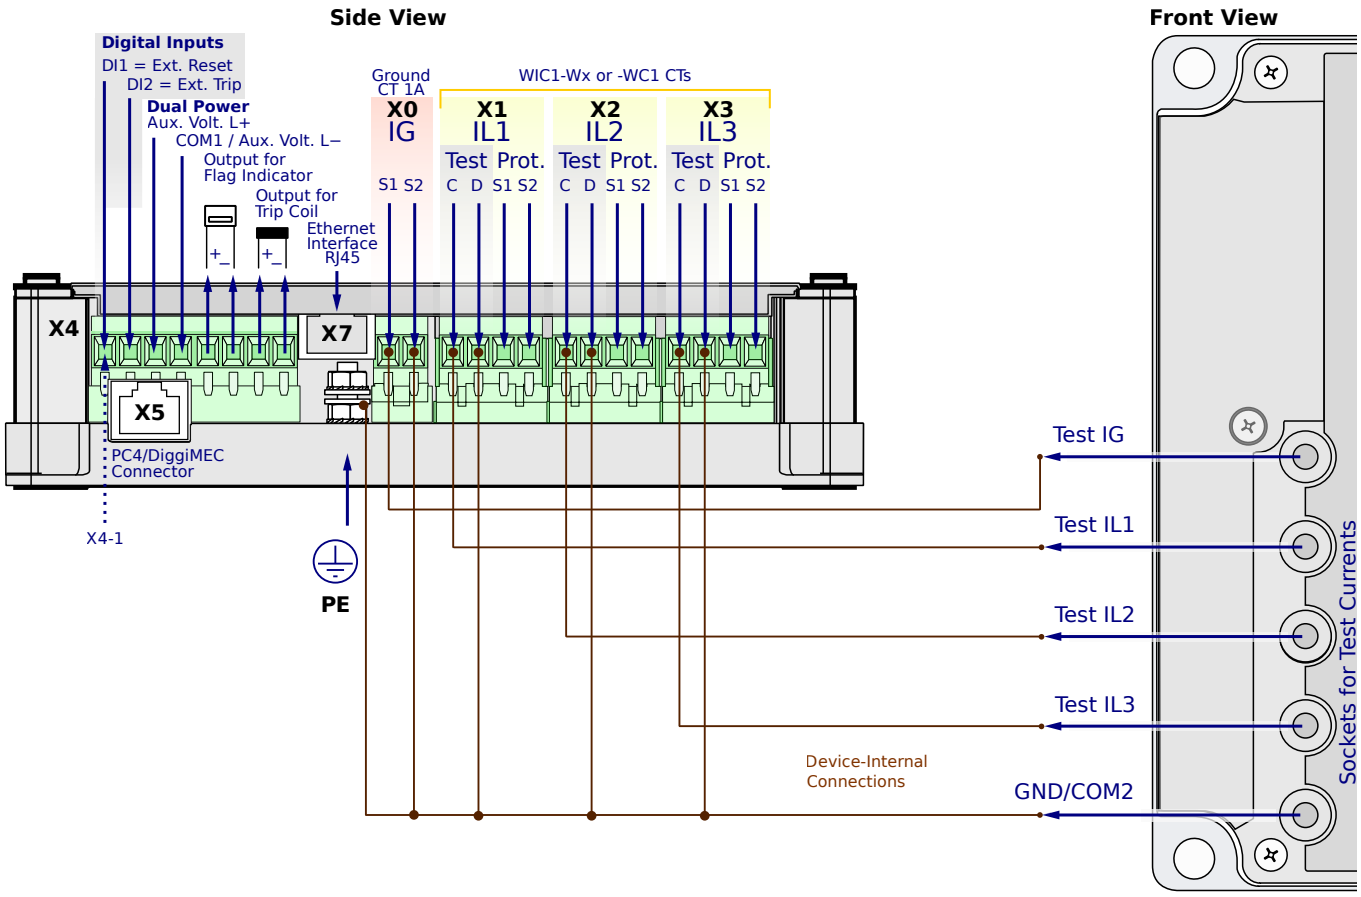


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FG2PL0

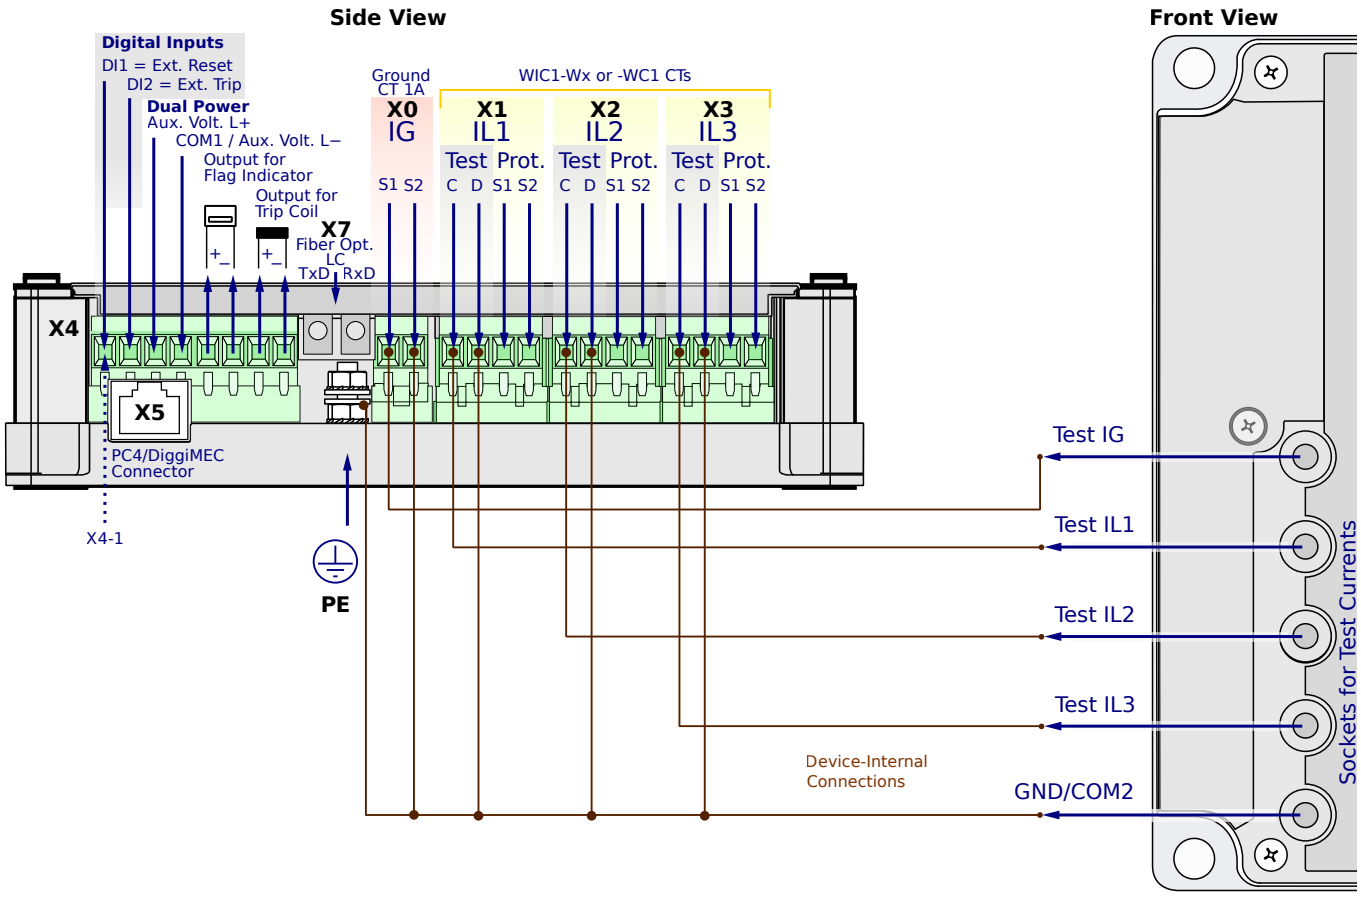


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FG2PLH

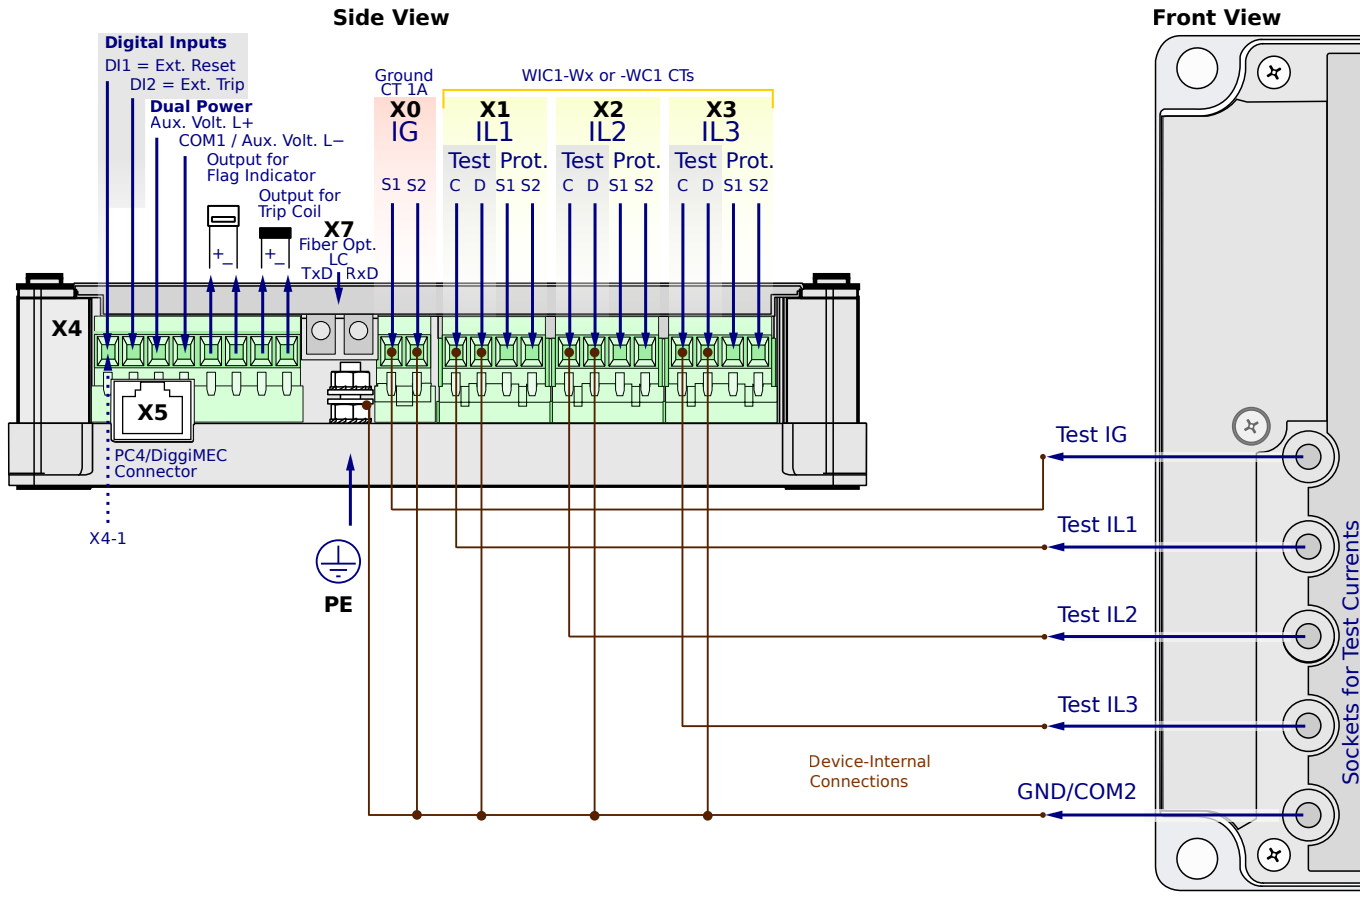


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1SA0

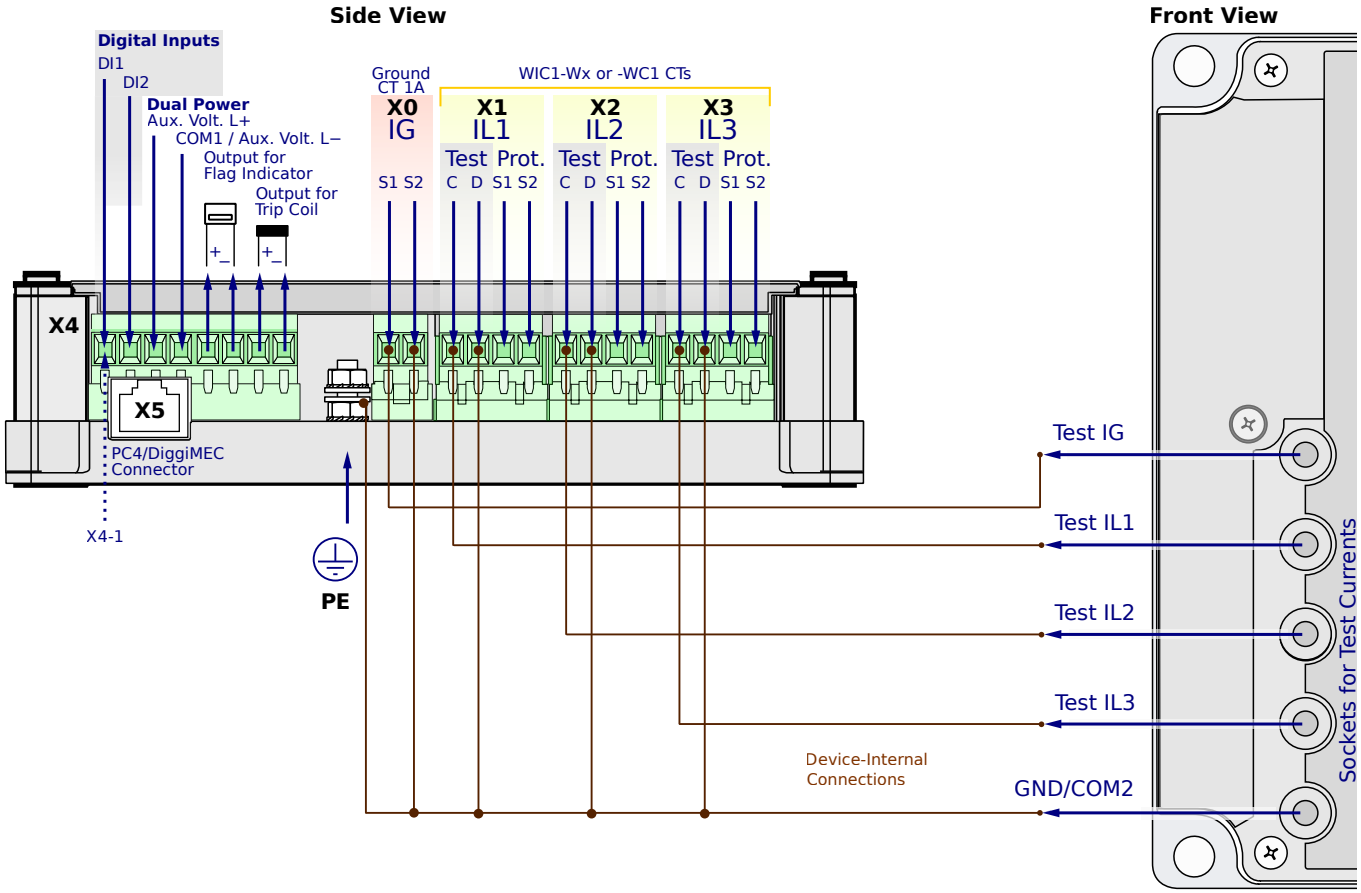


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1SAH

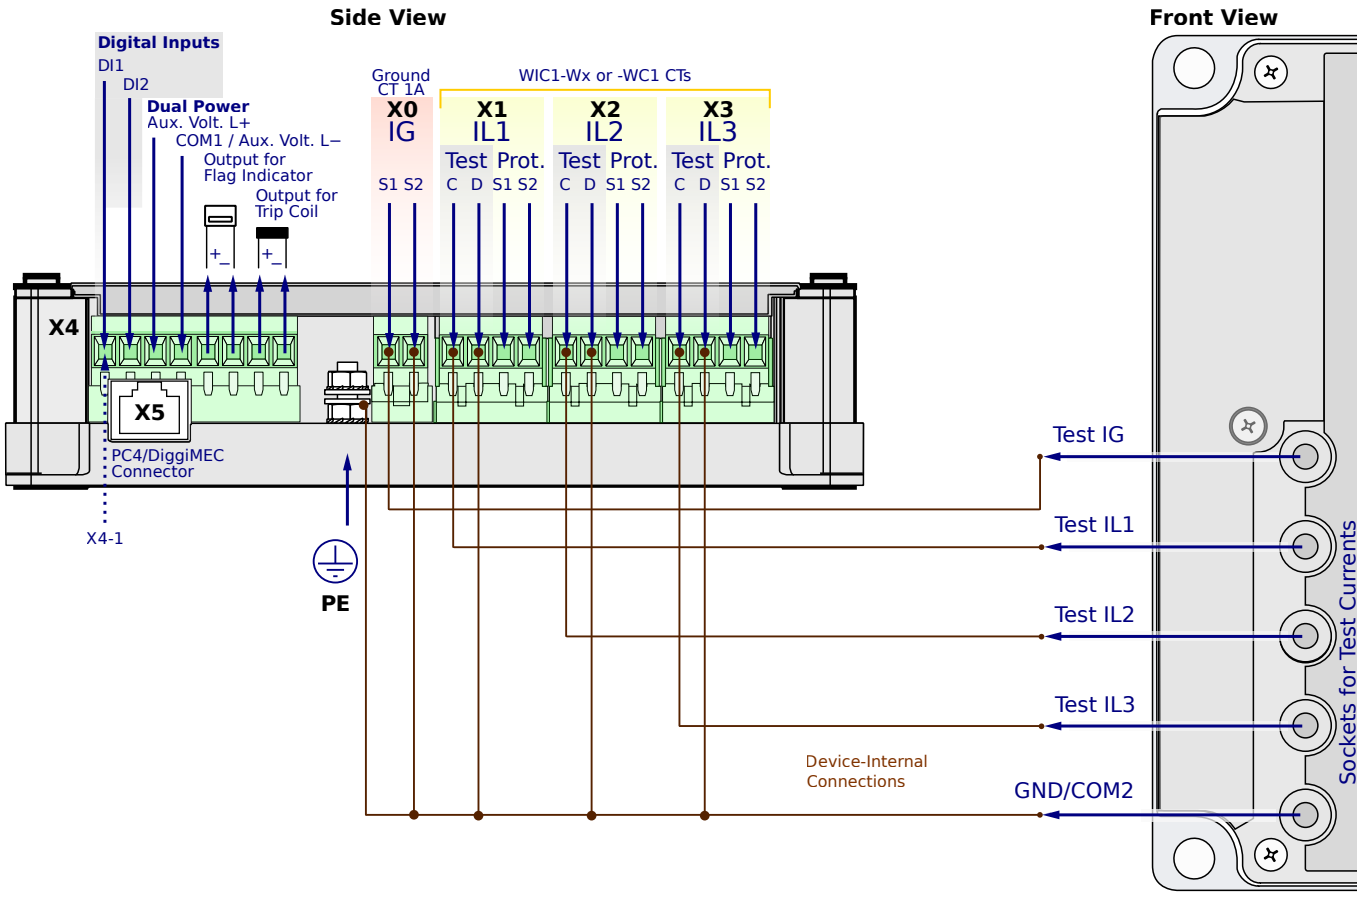


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1SB0

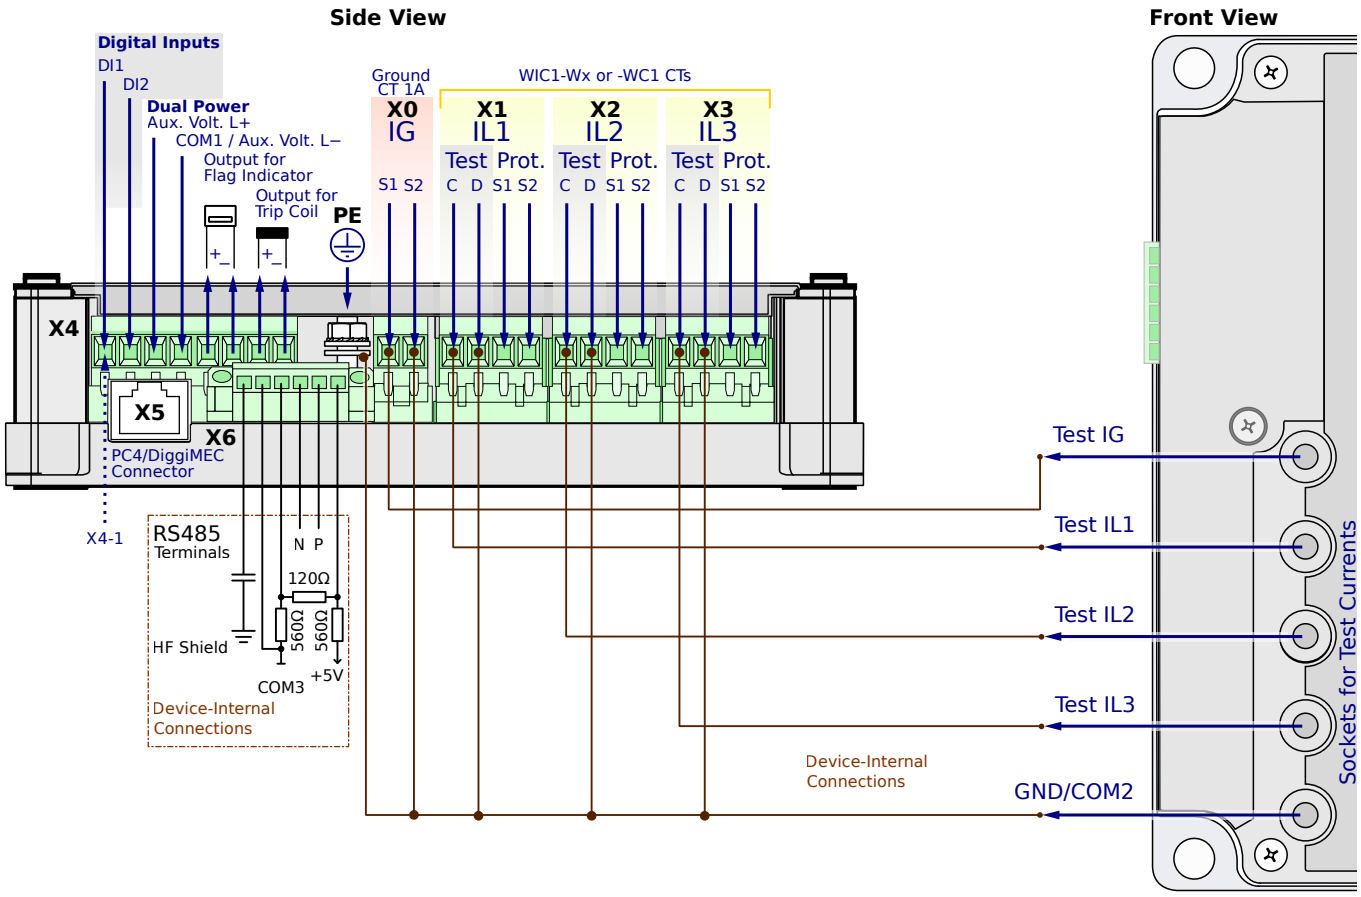


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1SBH

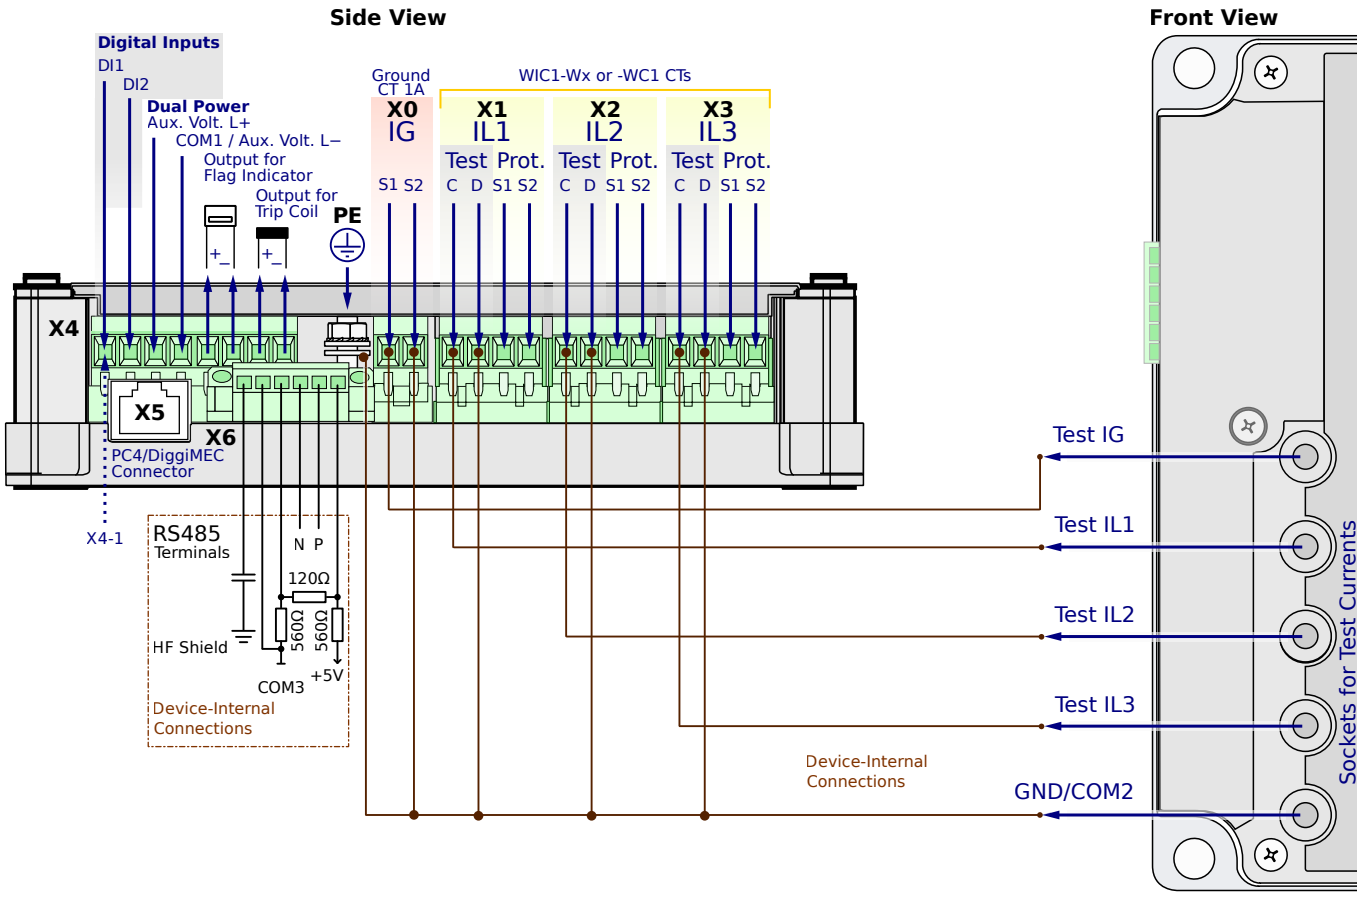


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1SC0

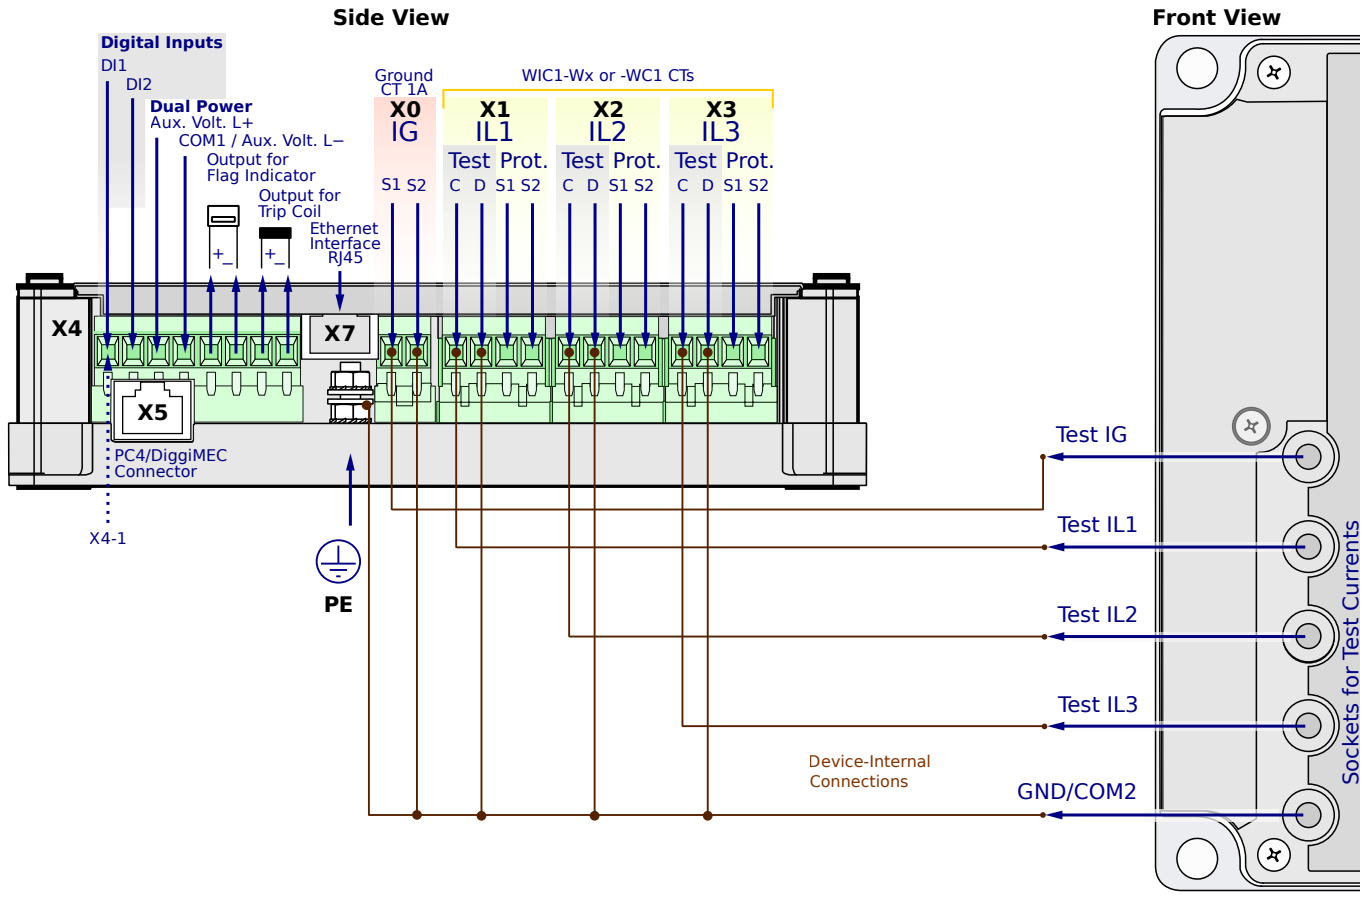


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1SCH

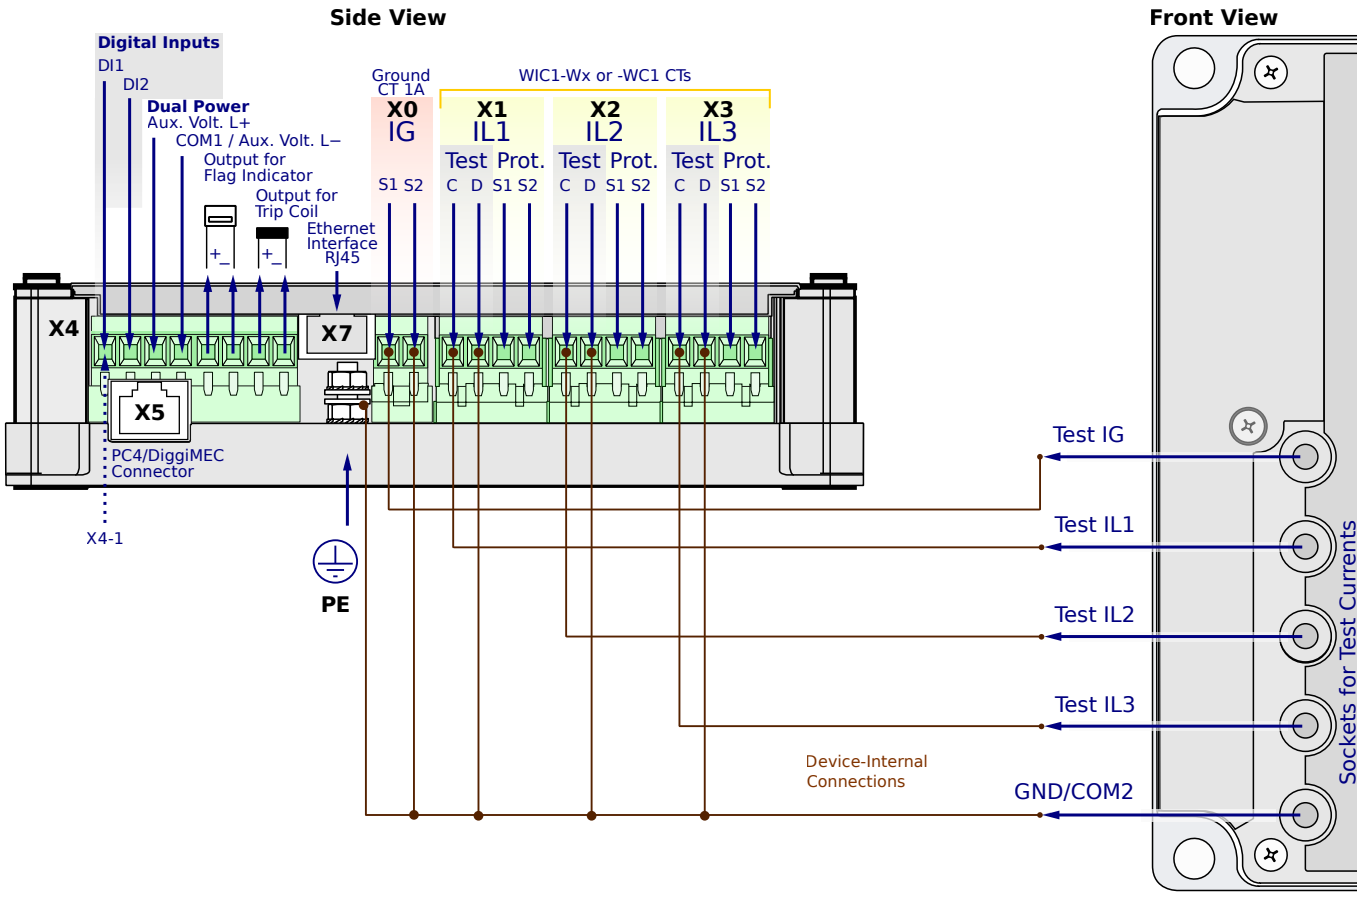


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1SL0

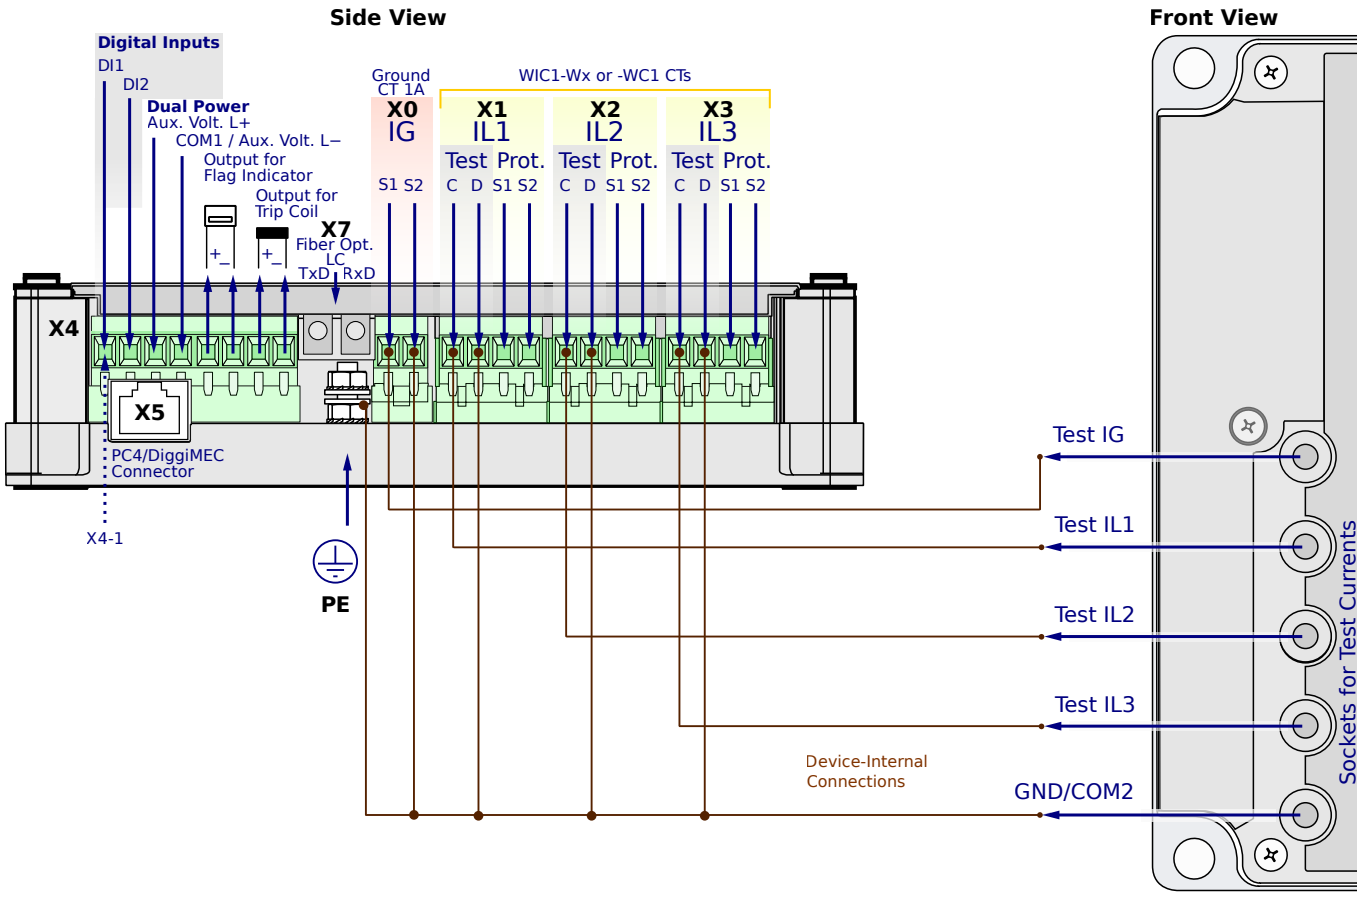


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1SLH

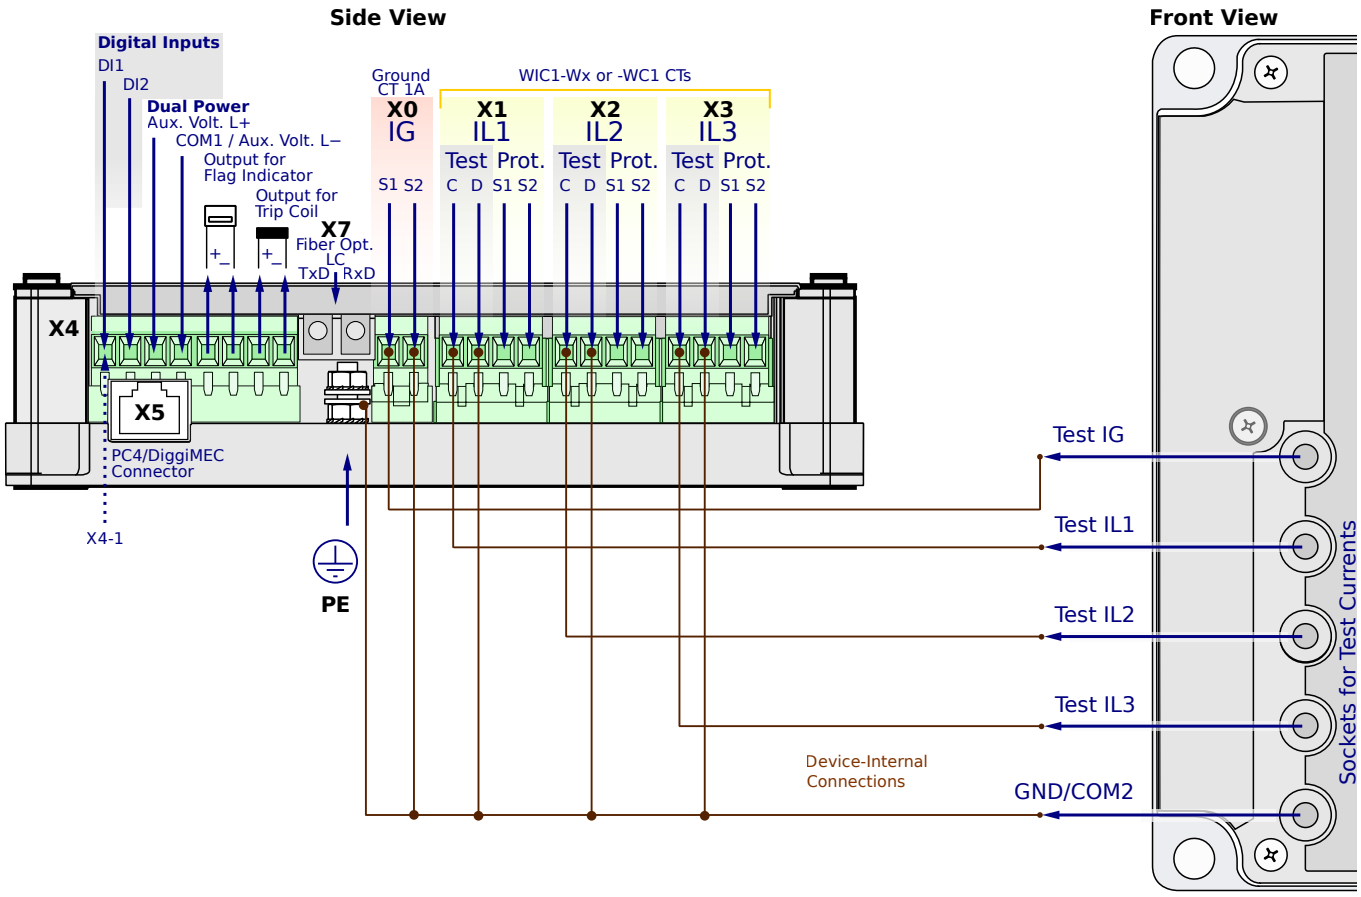


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1AA0

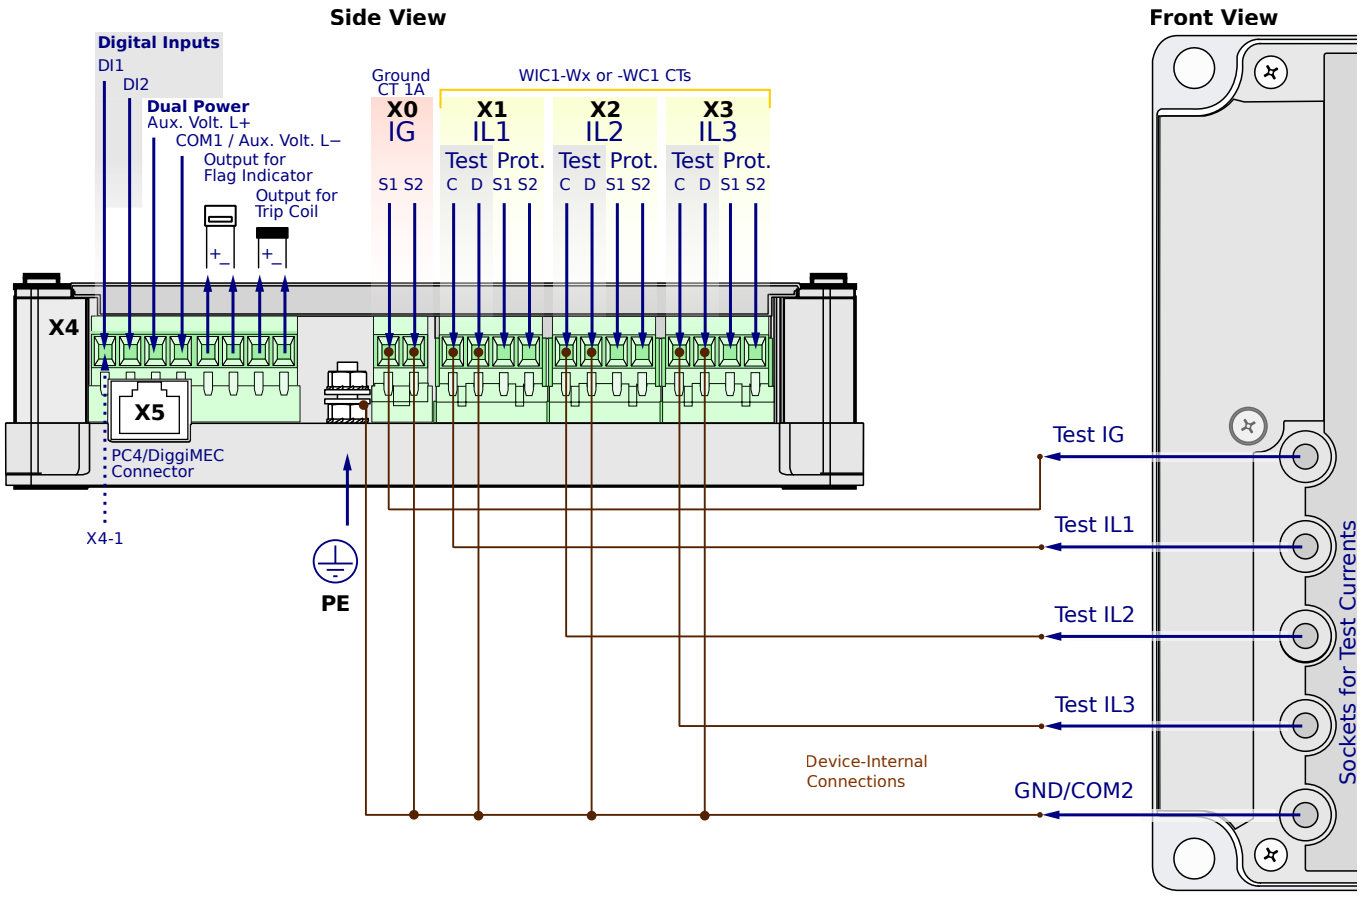


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1AAH

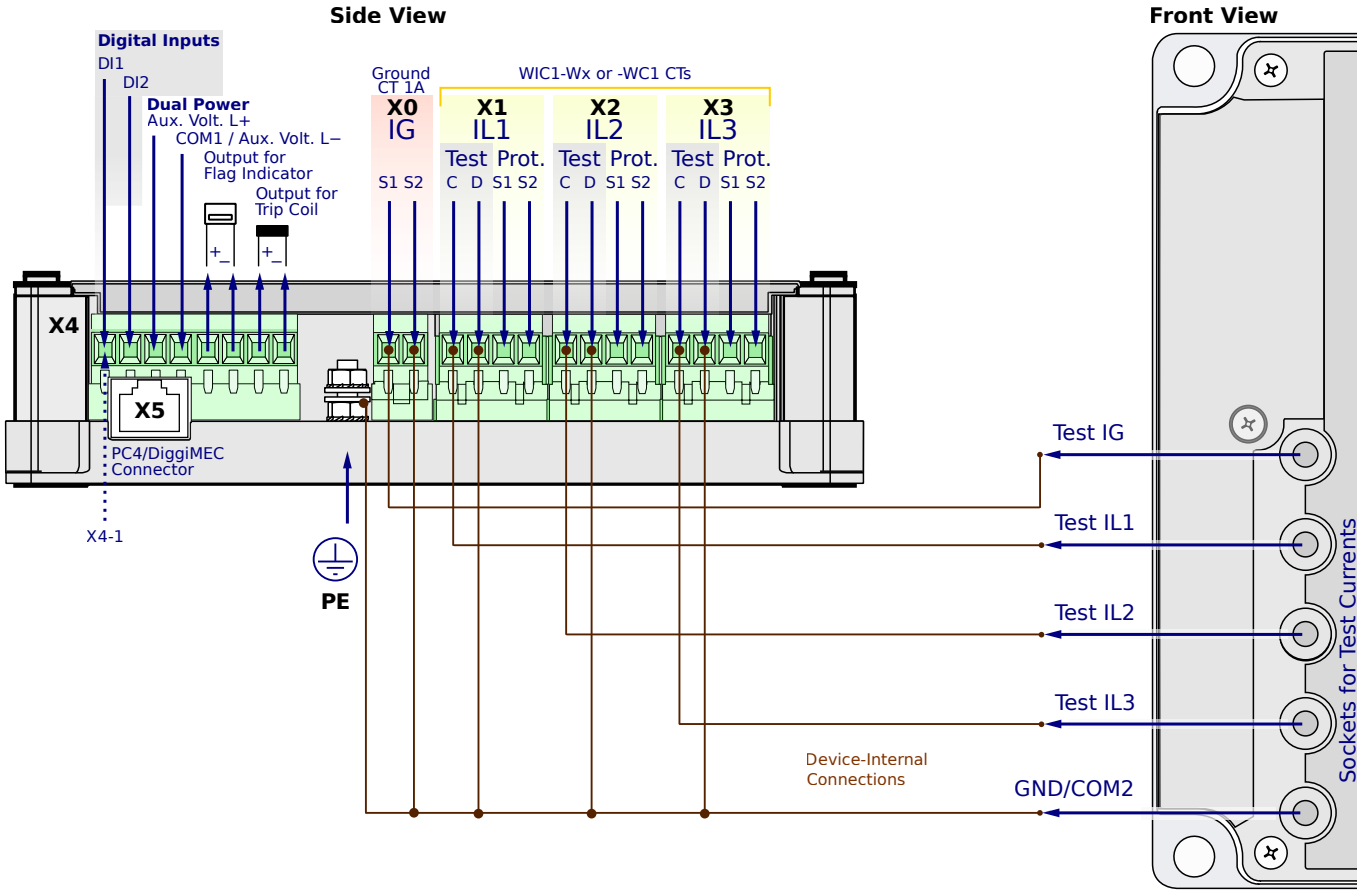


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1AB0

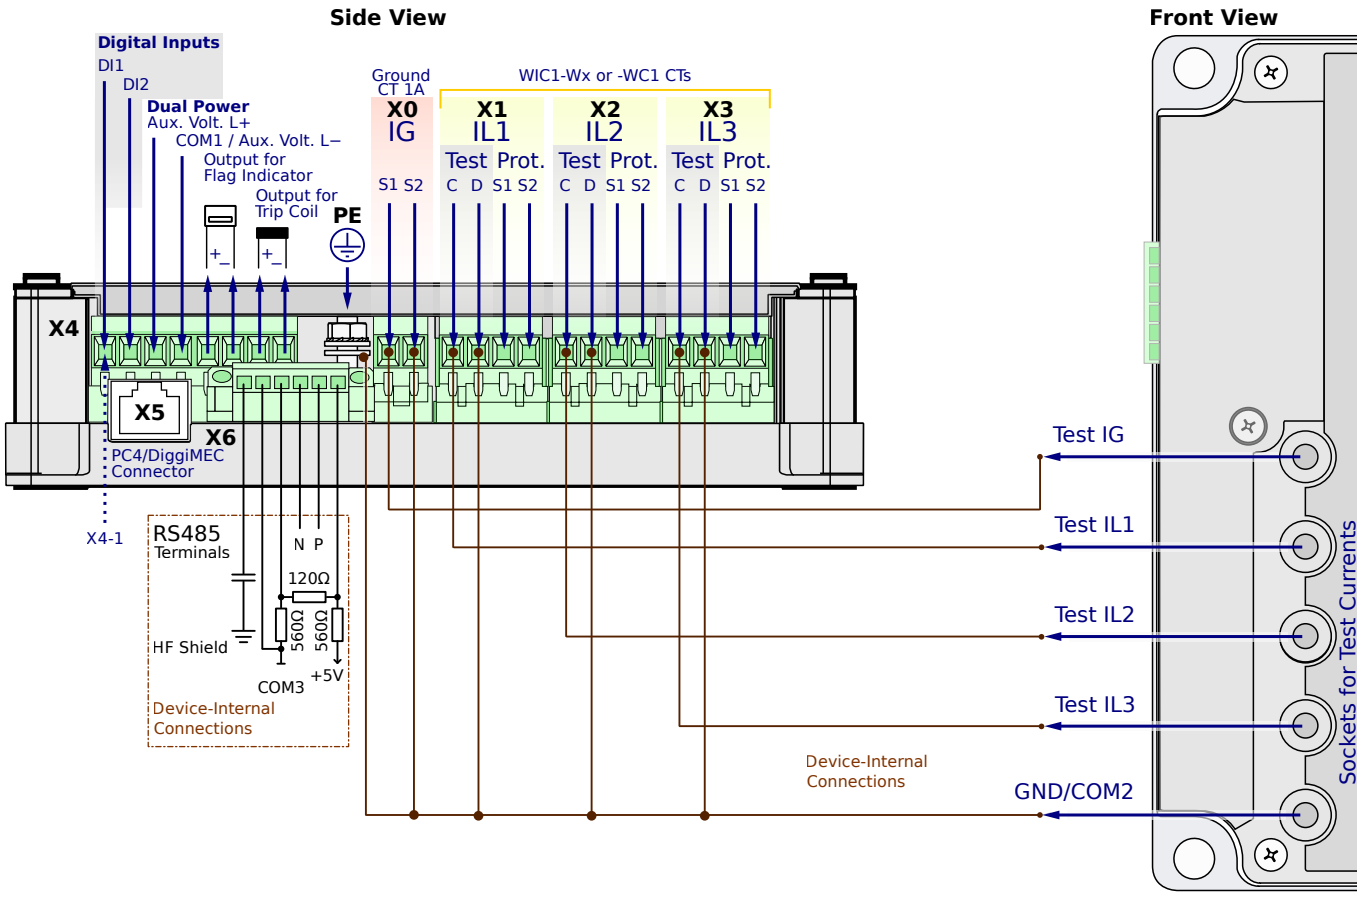


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1ABH

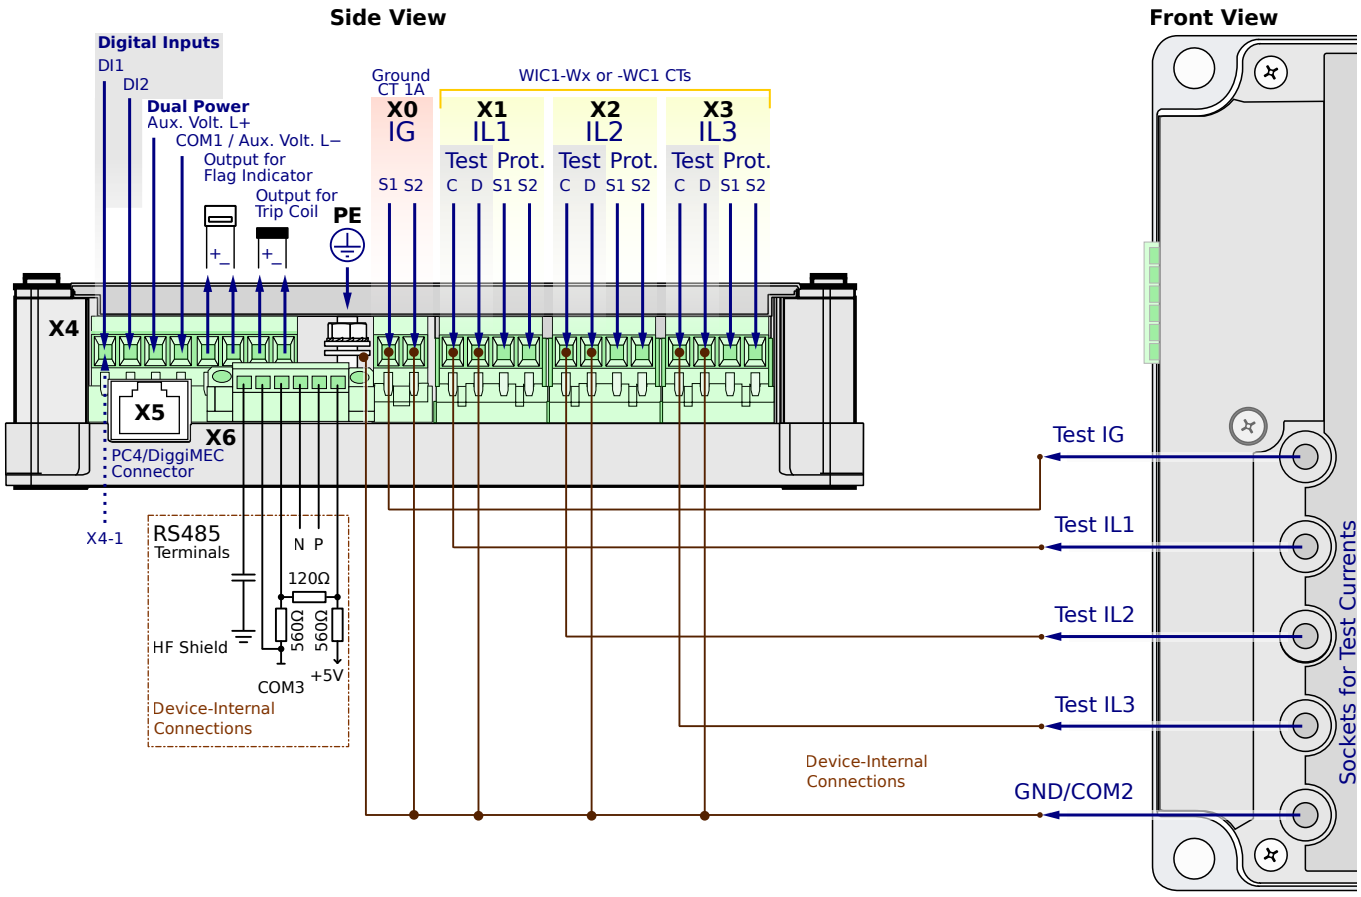


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1AC0

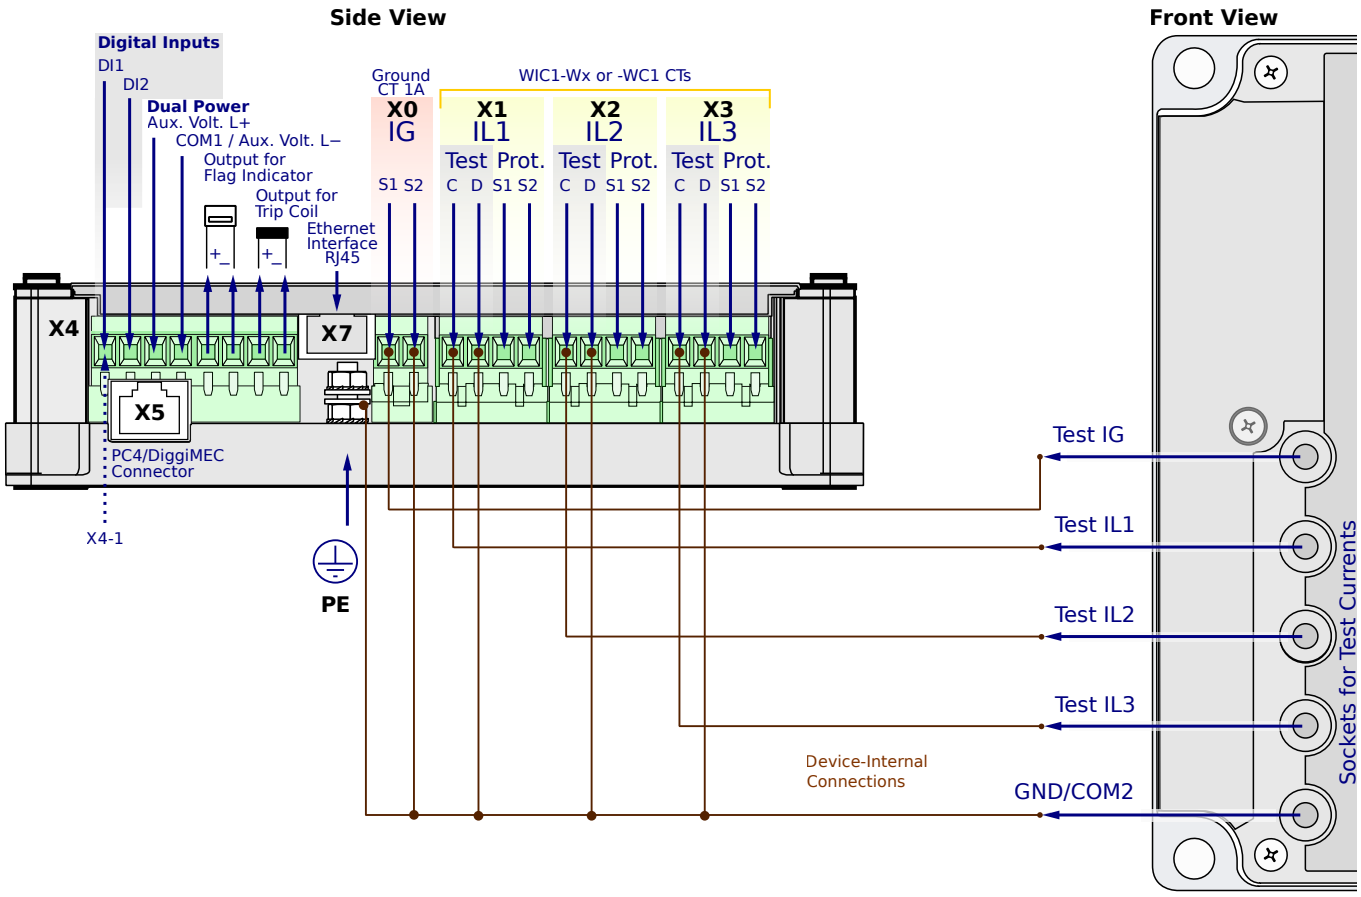


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1ACH

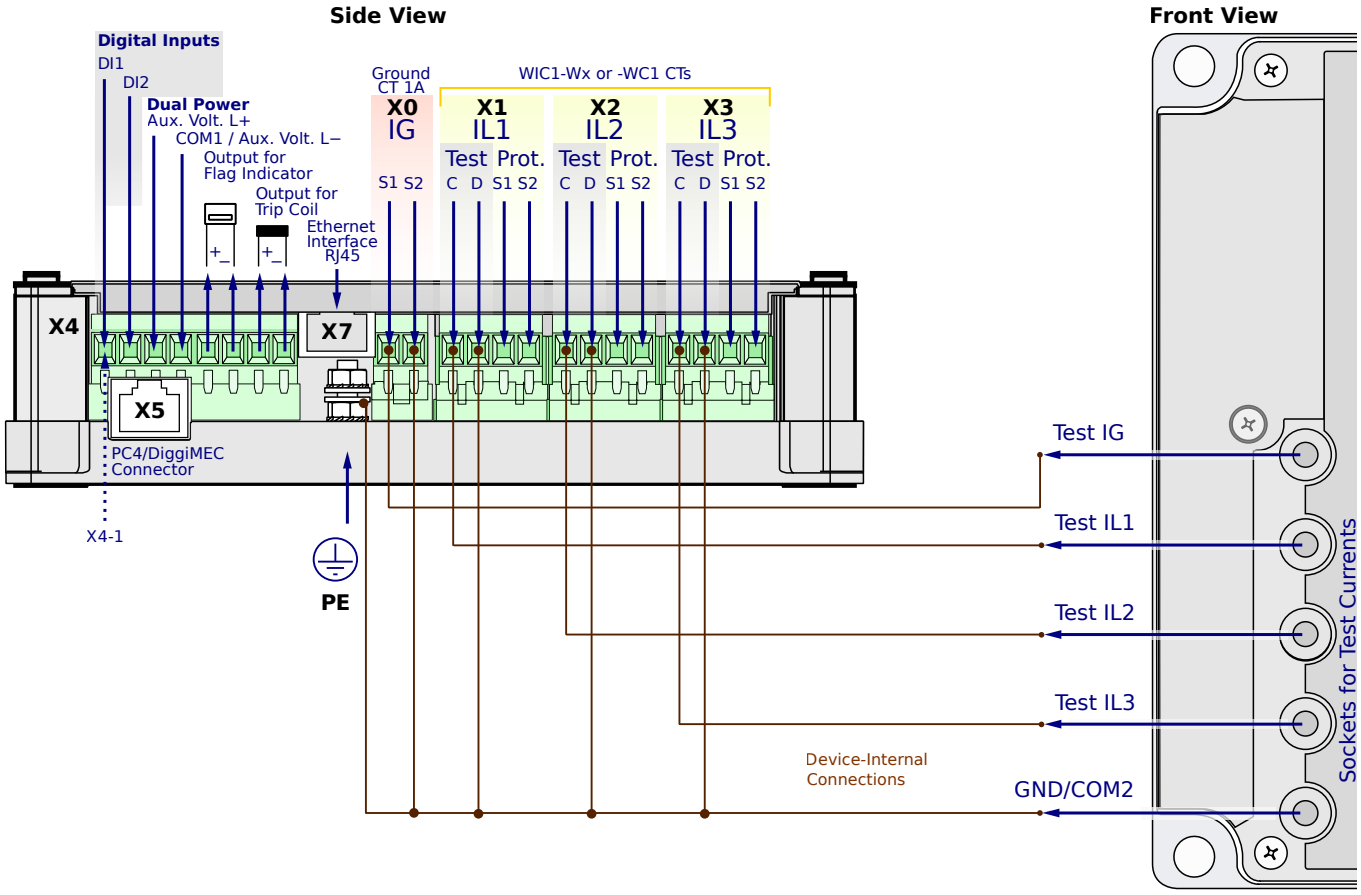


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1AL0

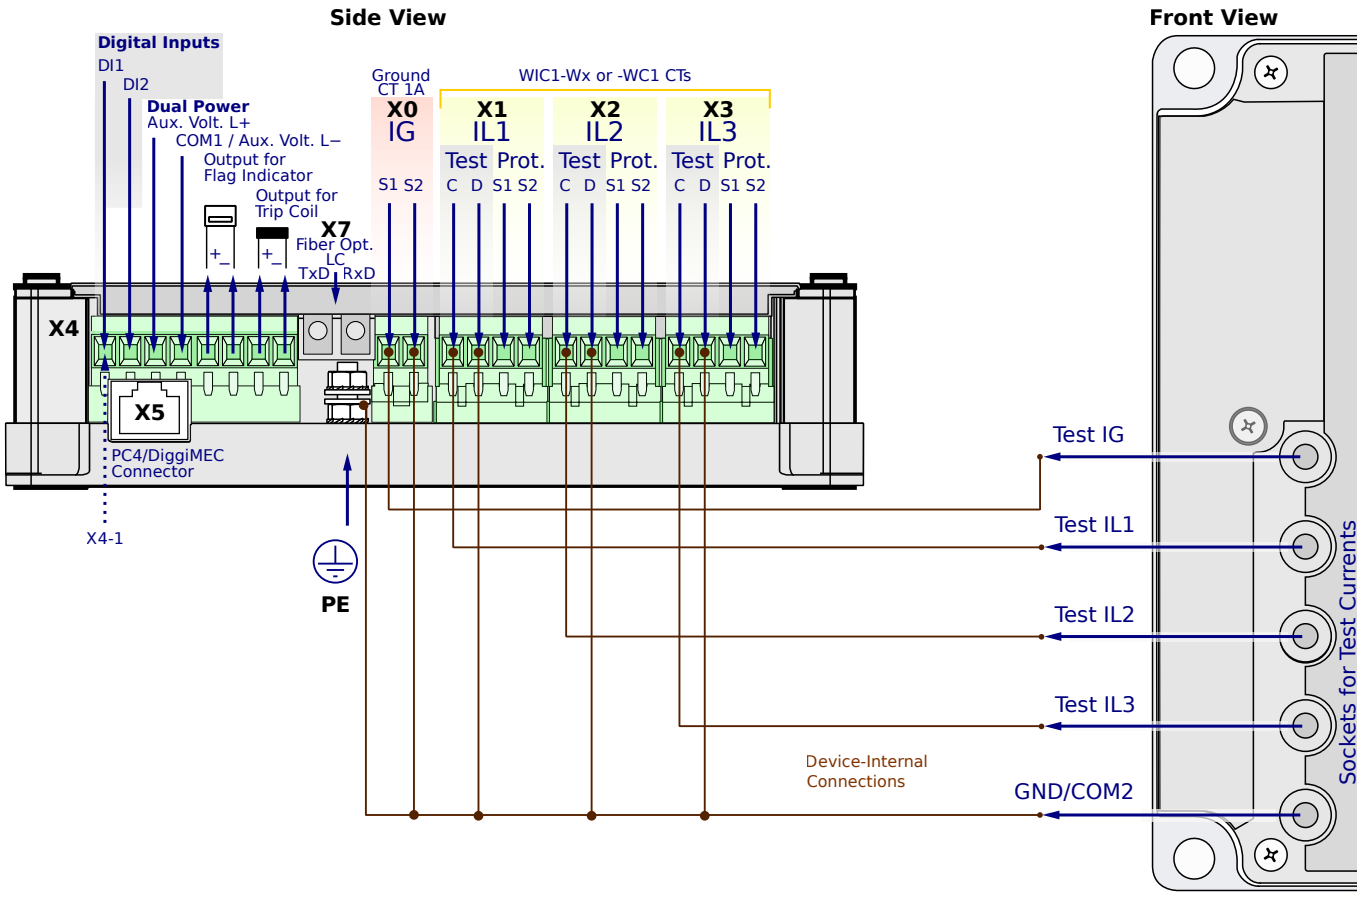


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1ALH

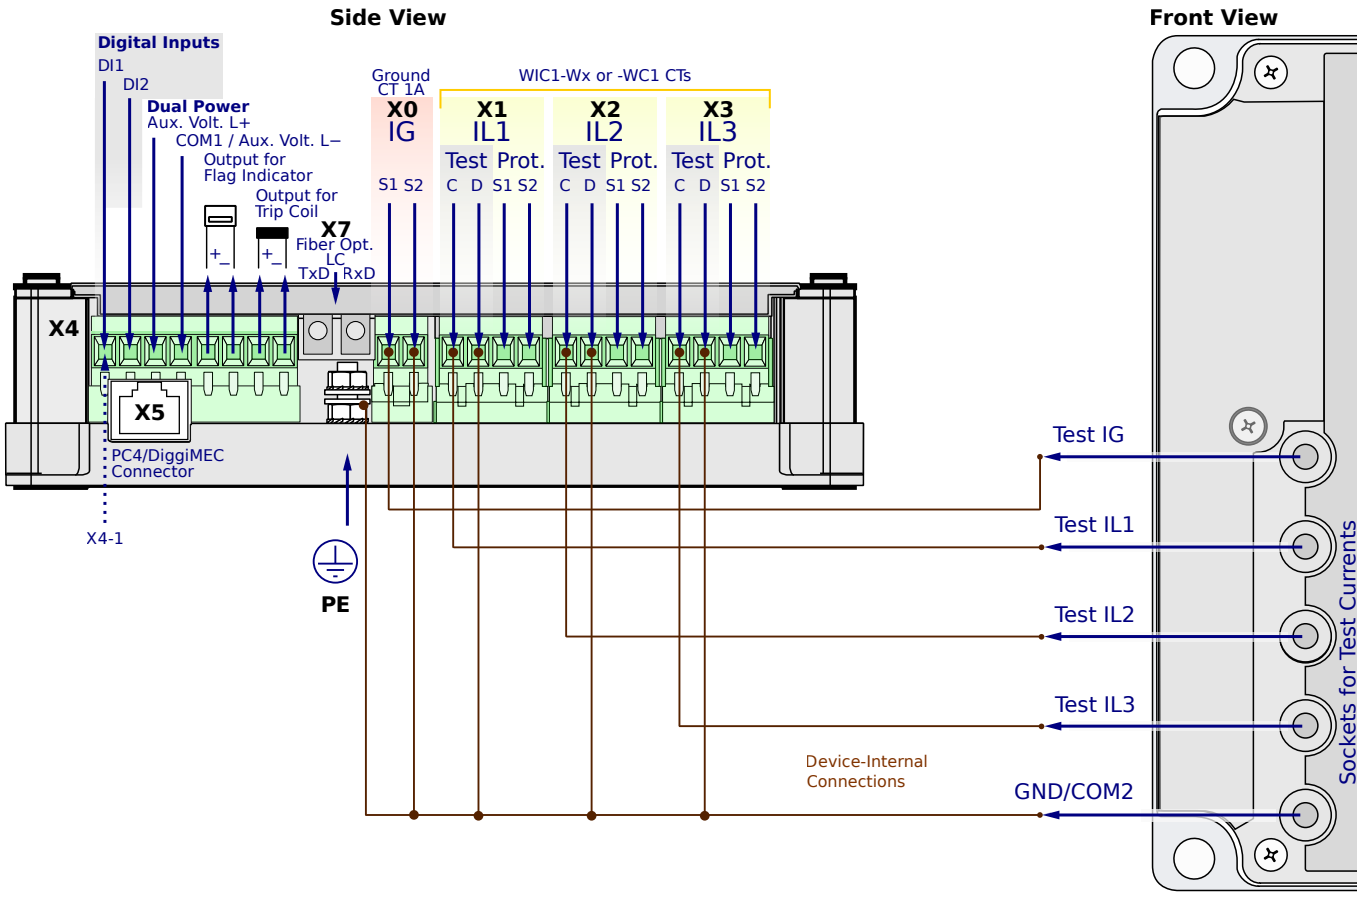


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1PA0

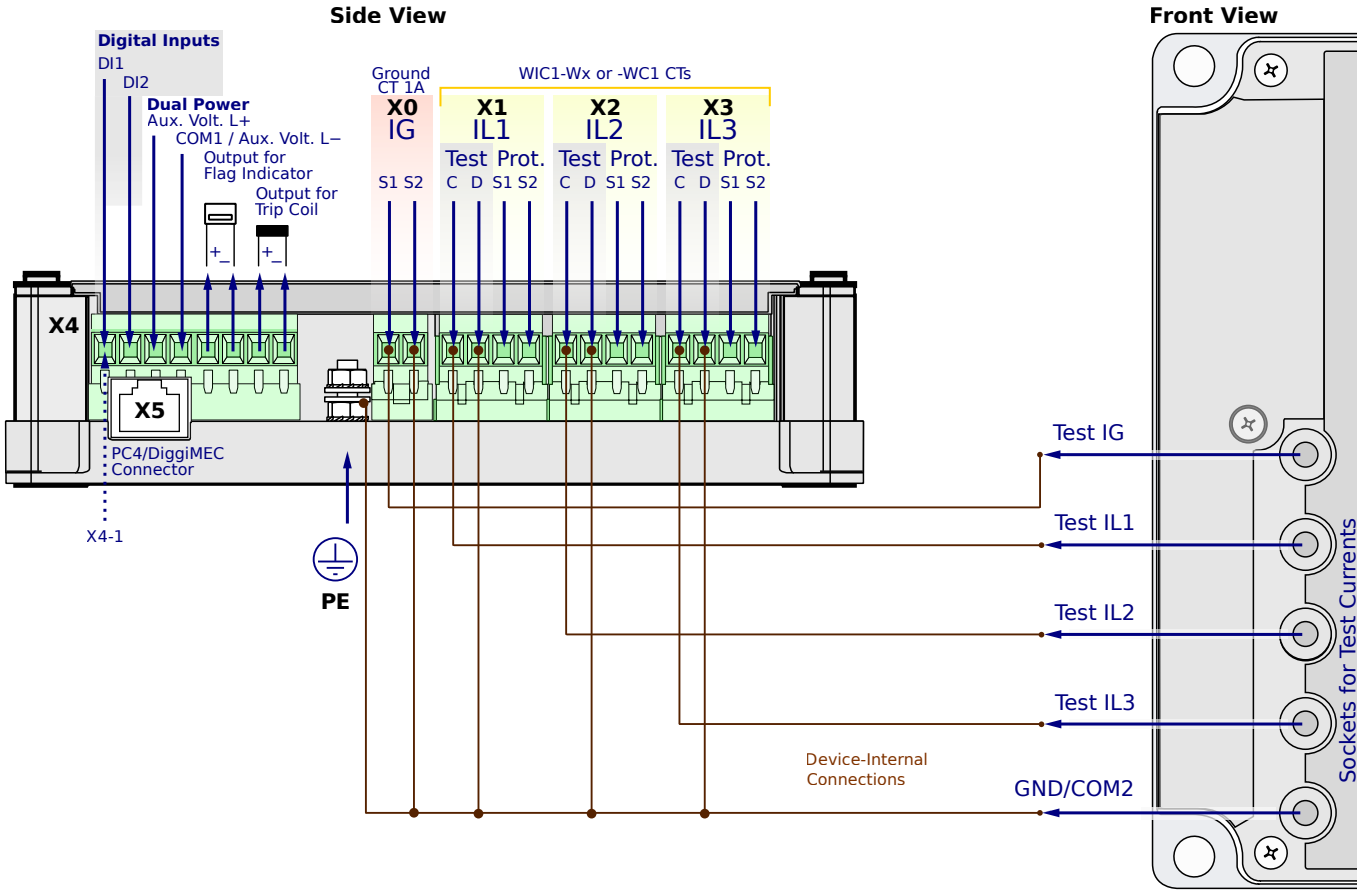


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1PAH

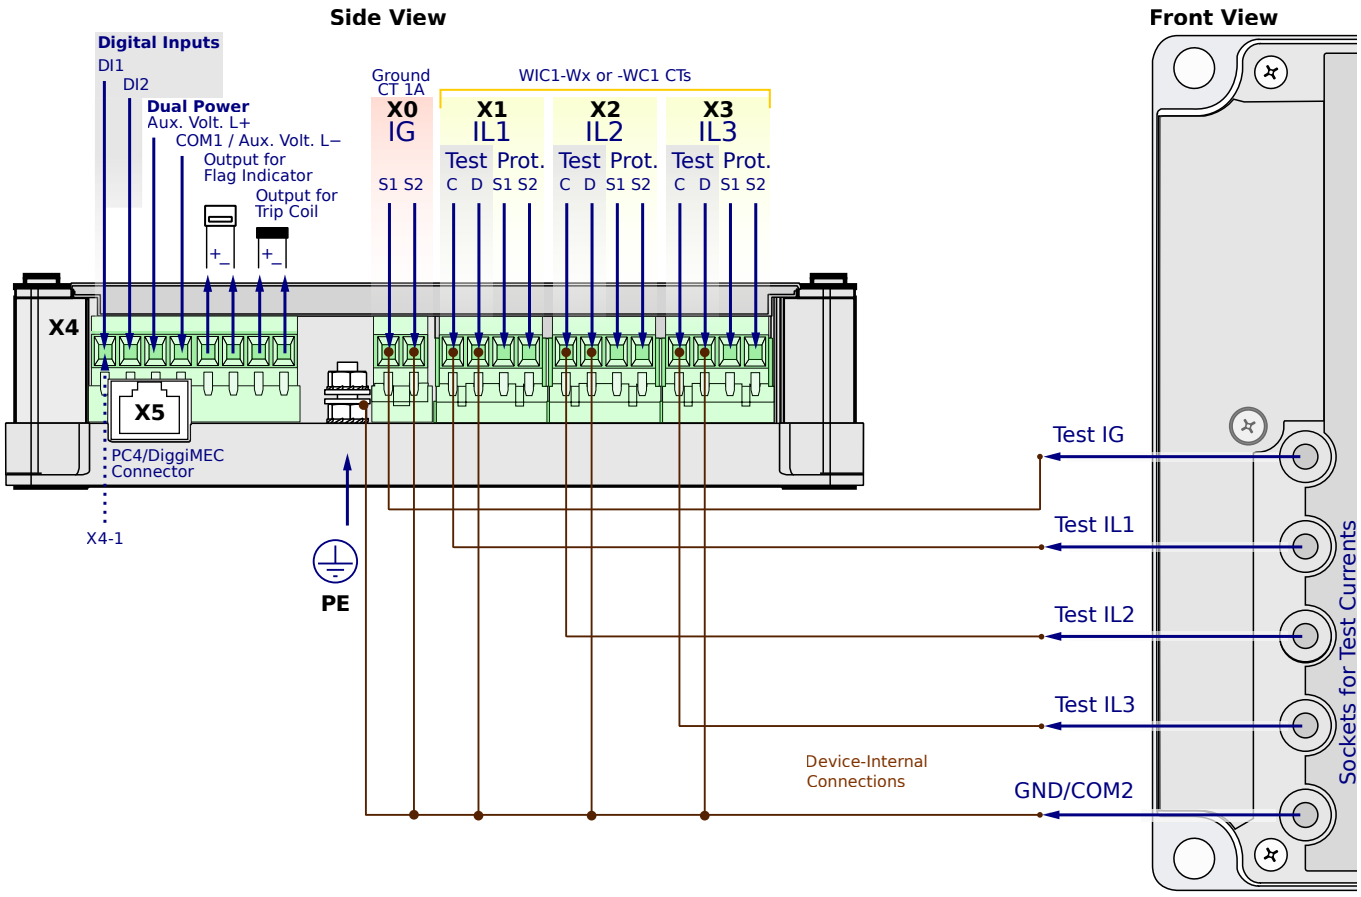


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD1PB0

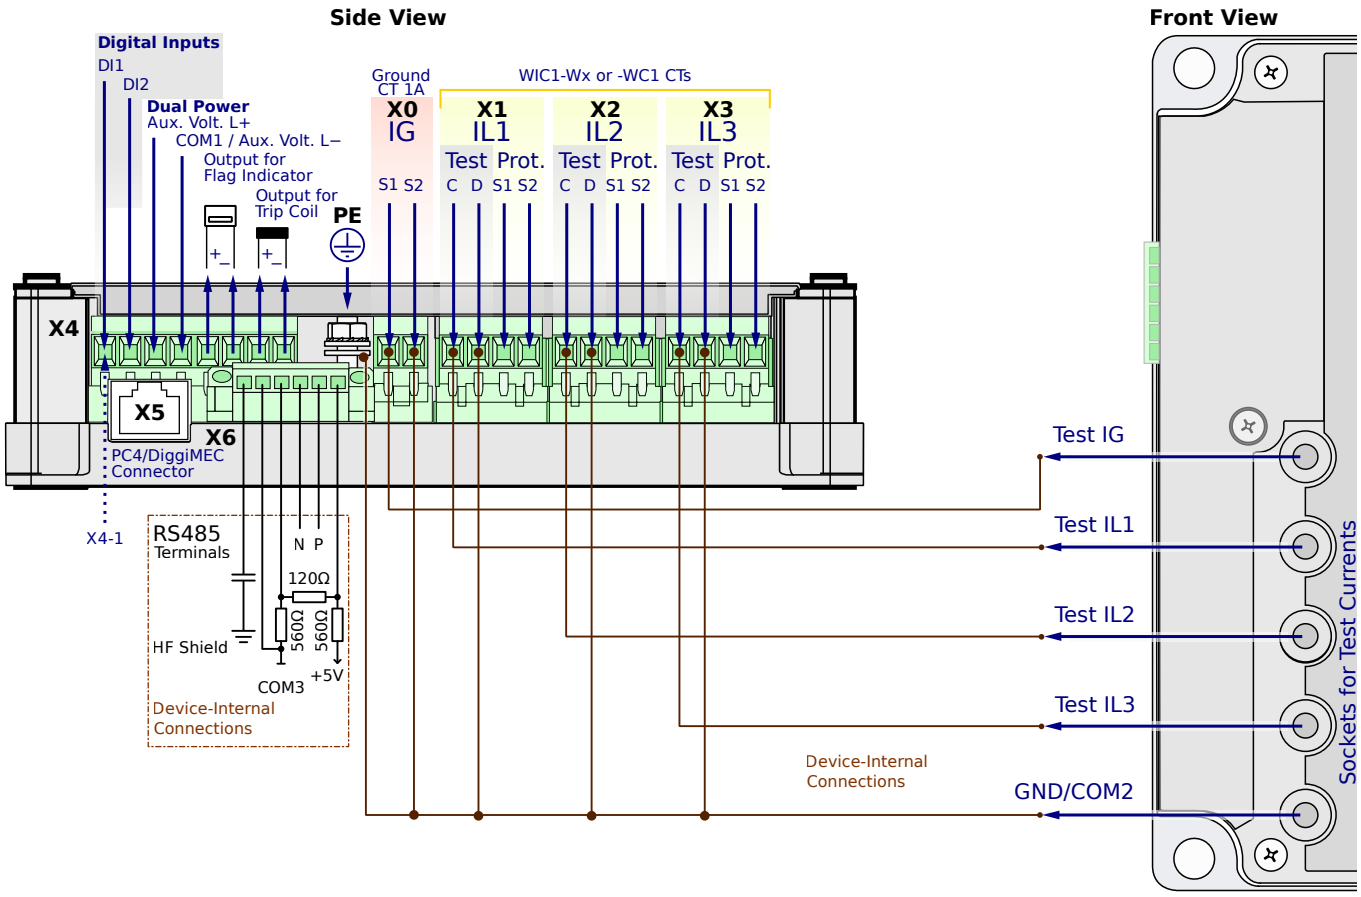


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1PBH

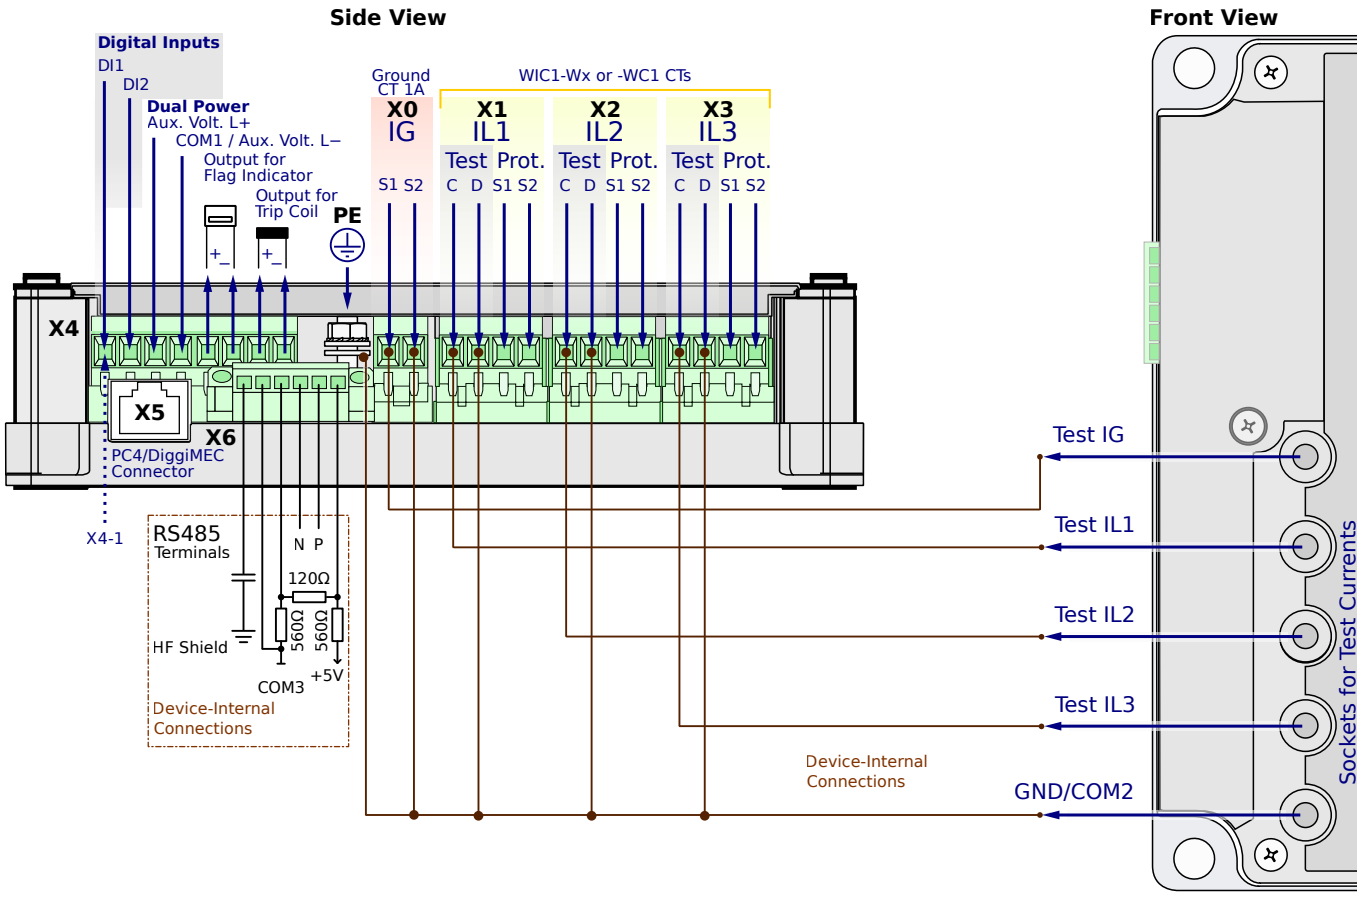


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD1PC0

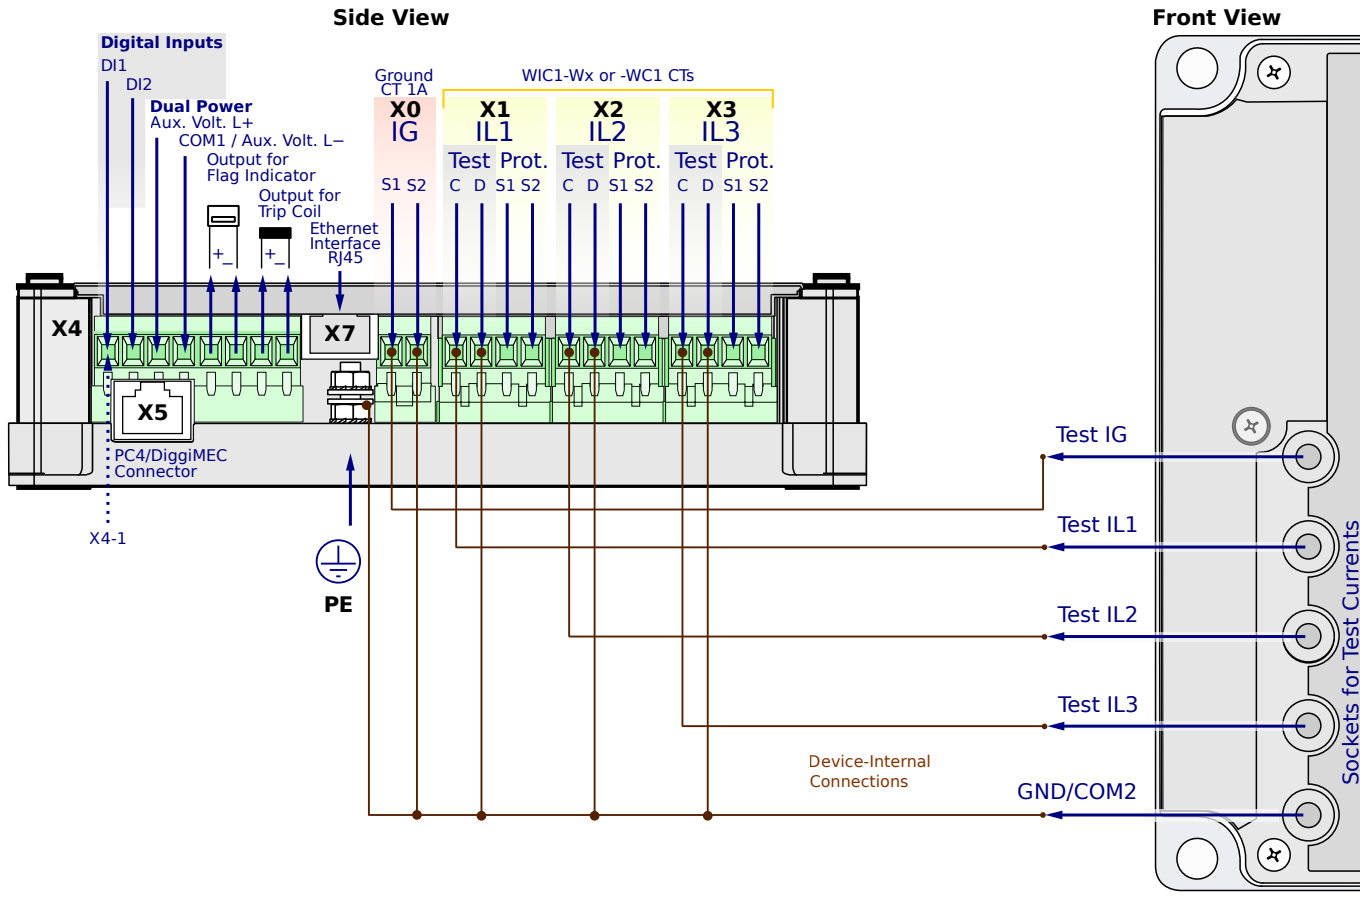


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1PCH

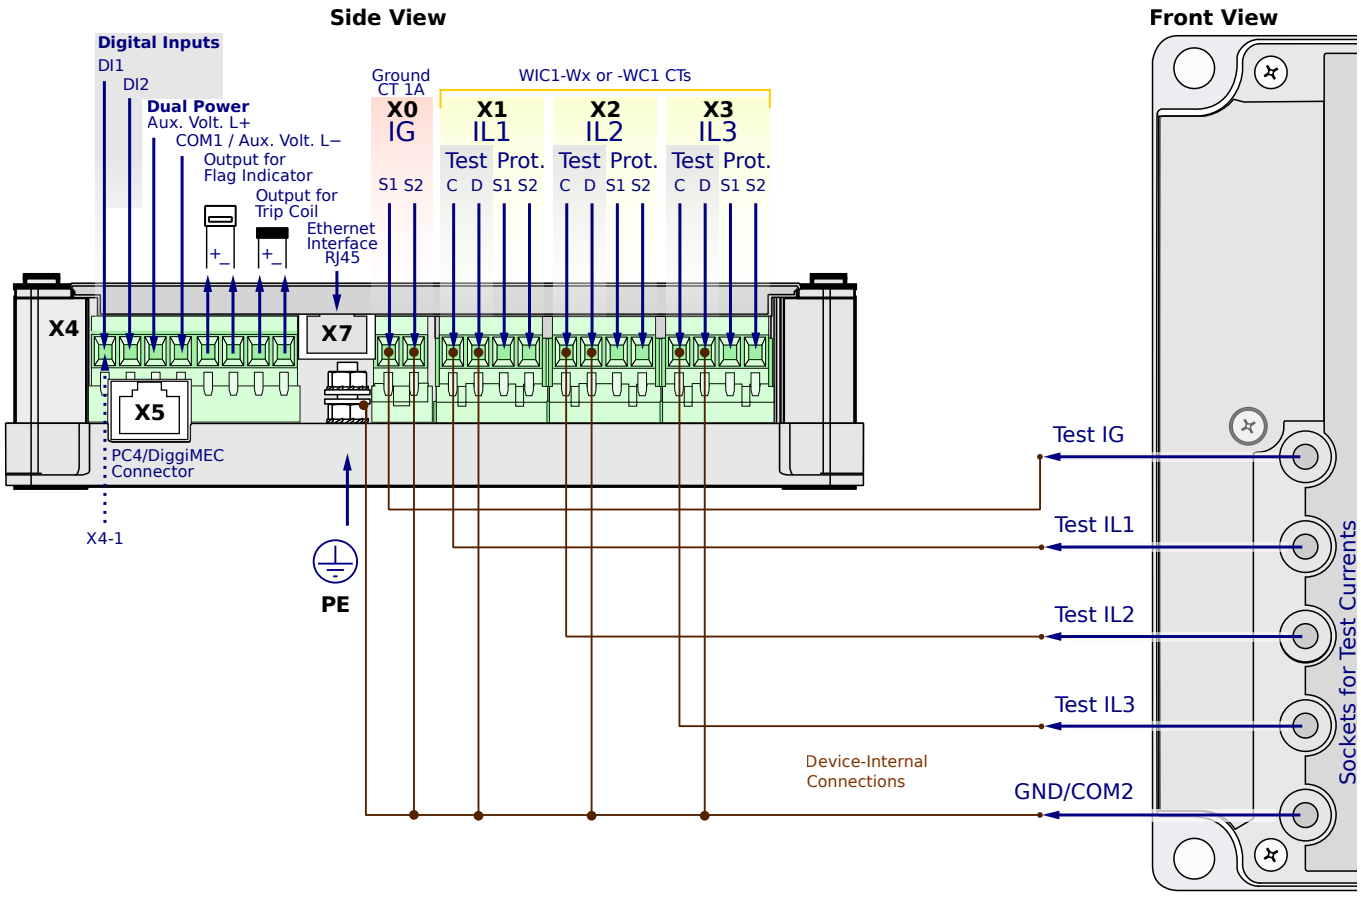


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD1PL0

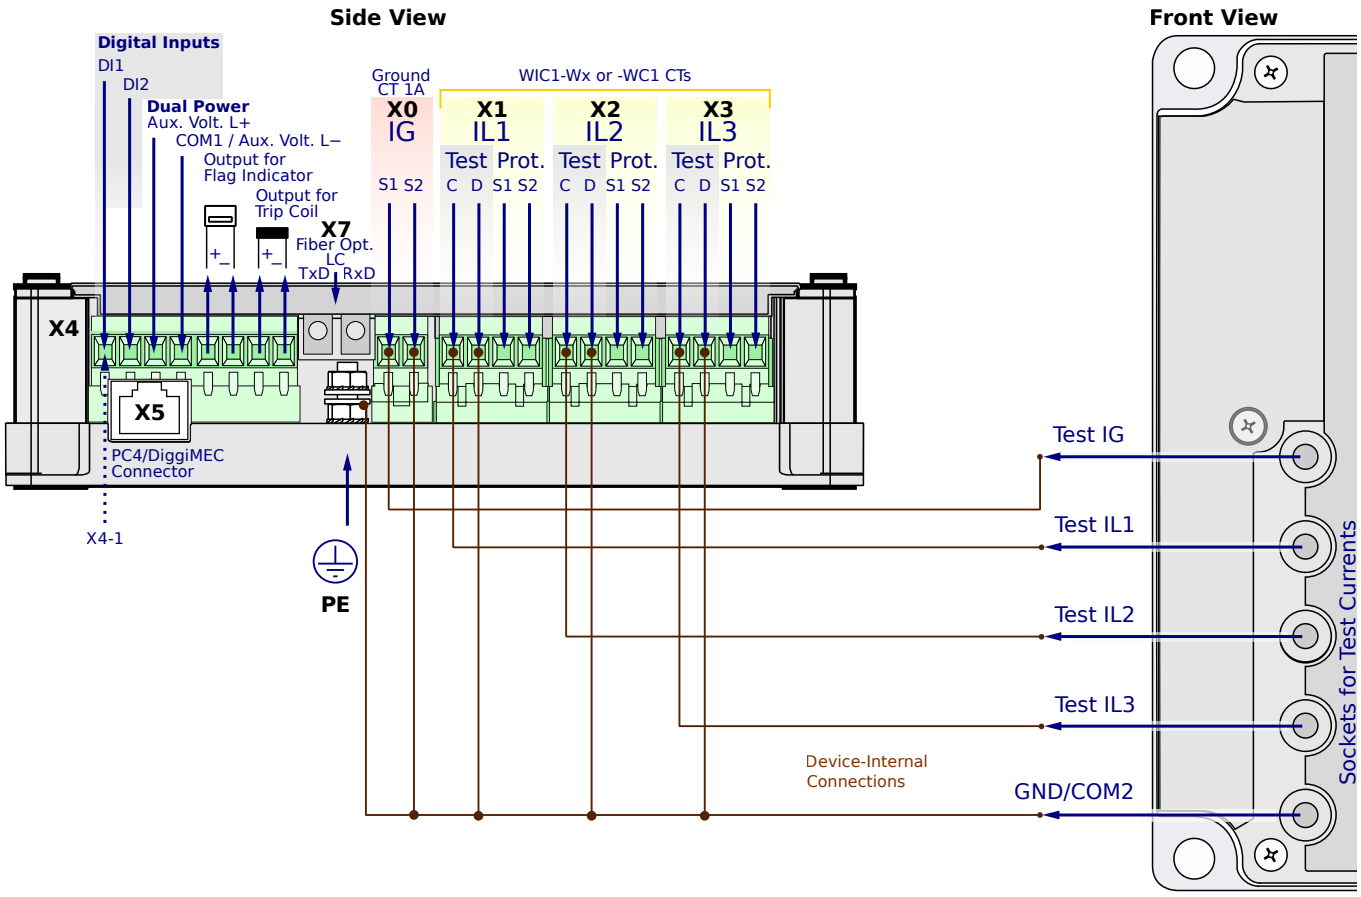


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD1PLH

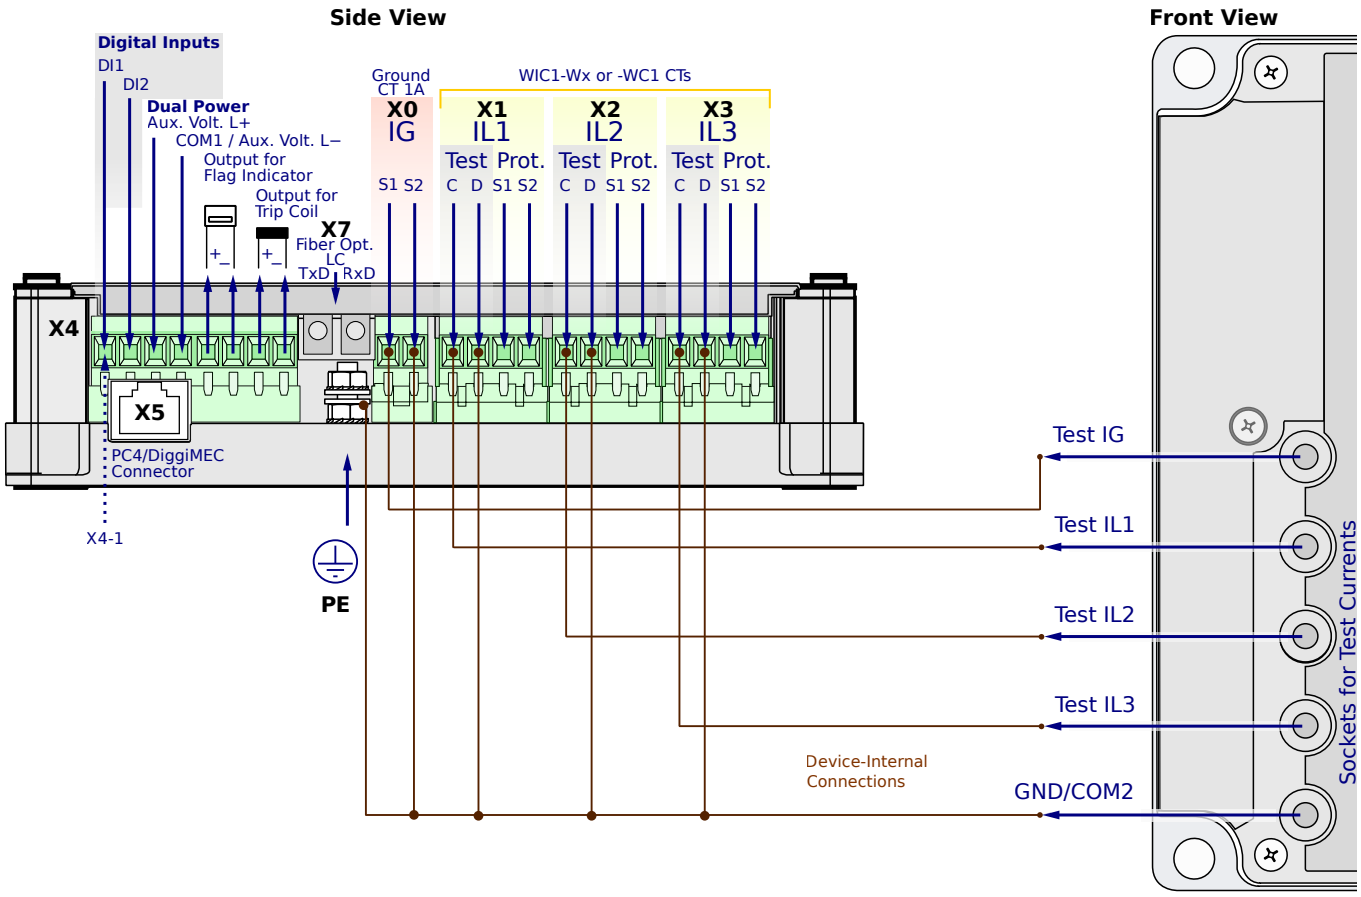


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2SA0

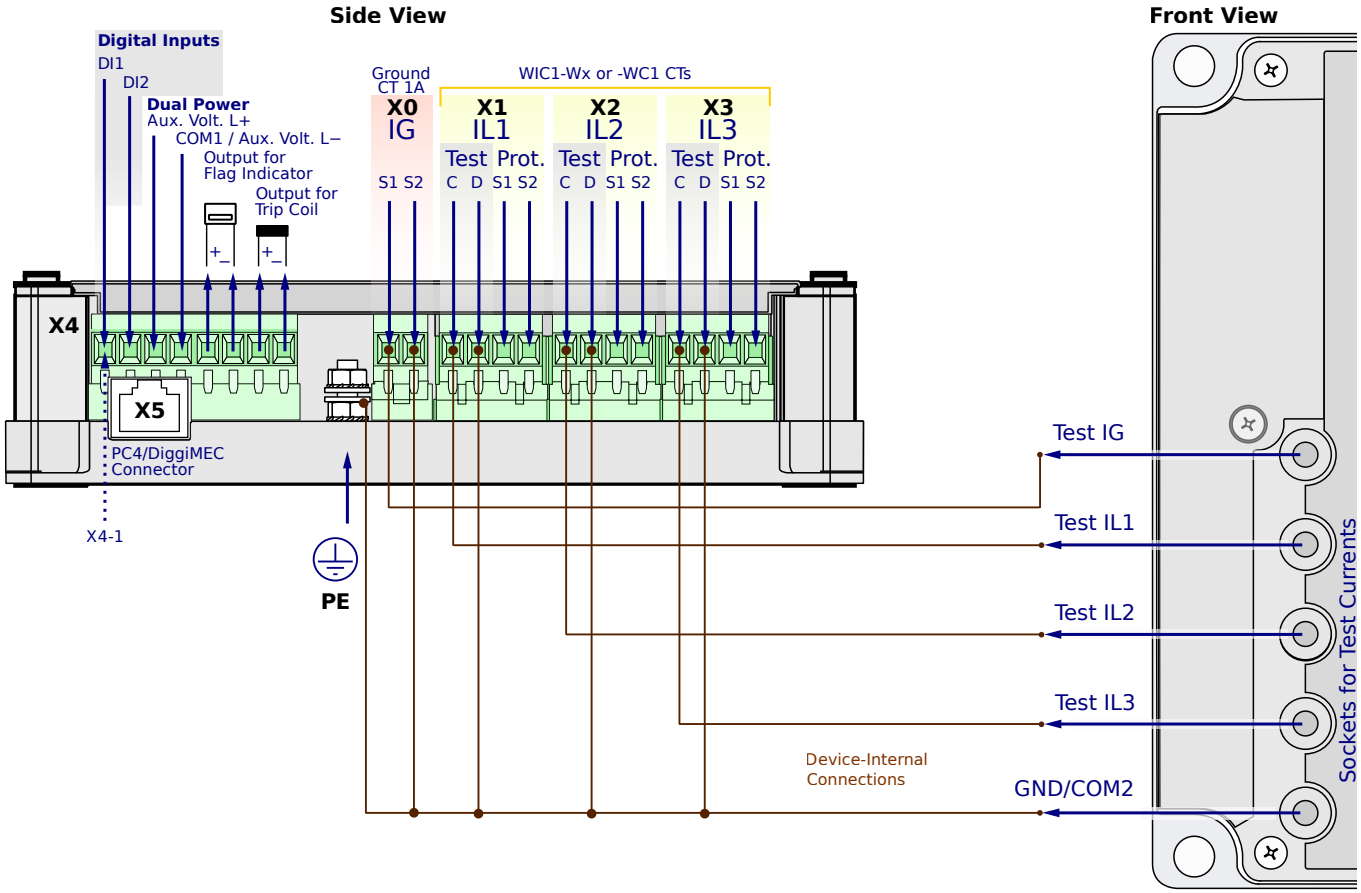


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2SAH

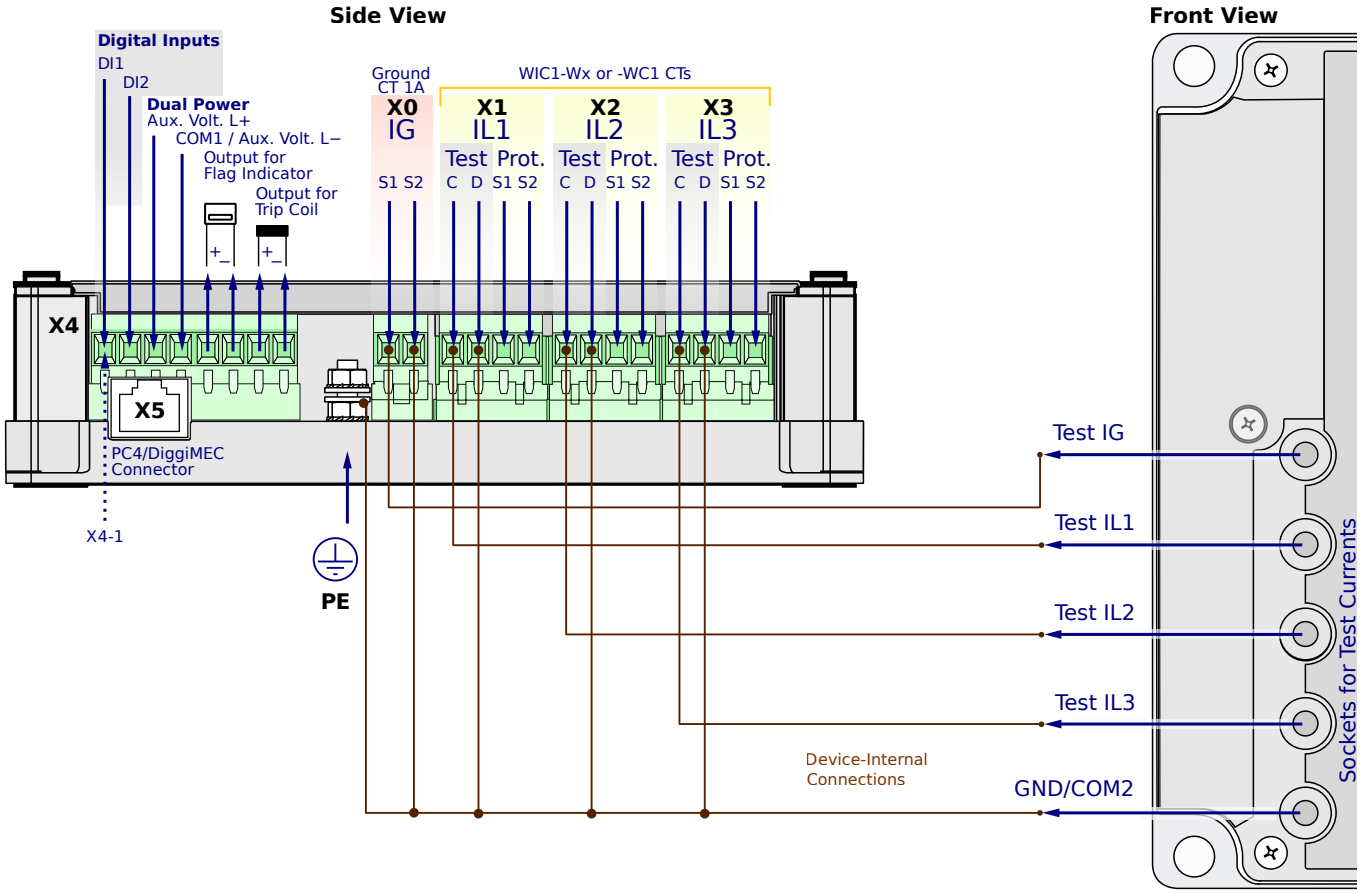


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2SB0

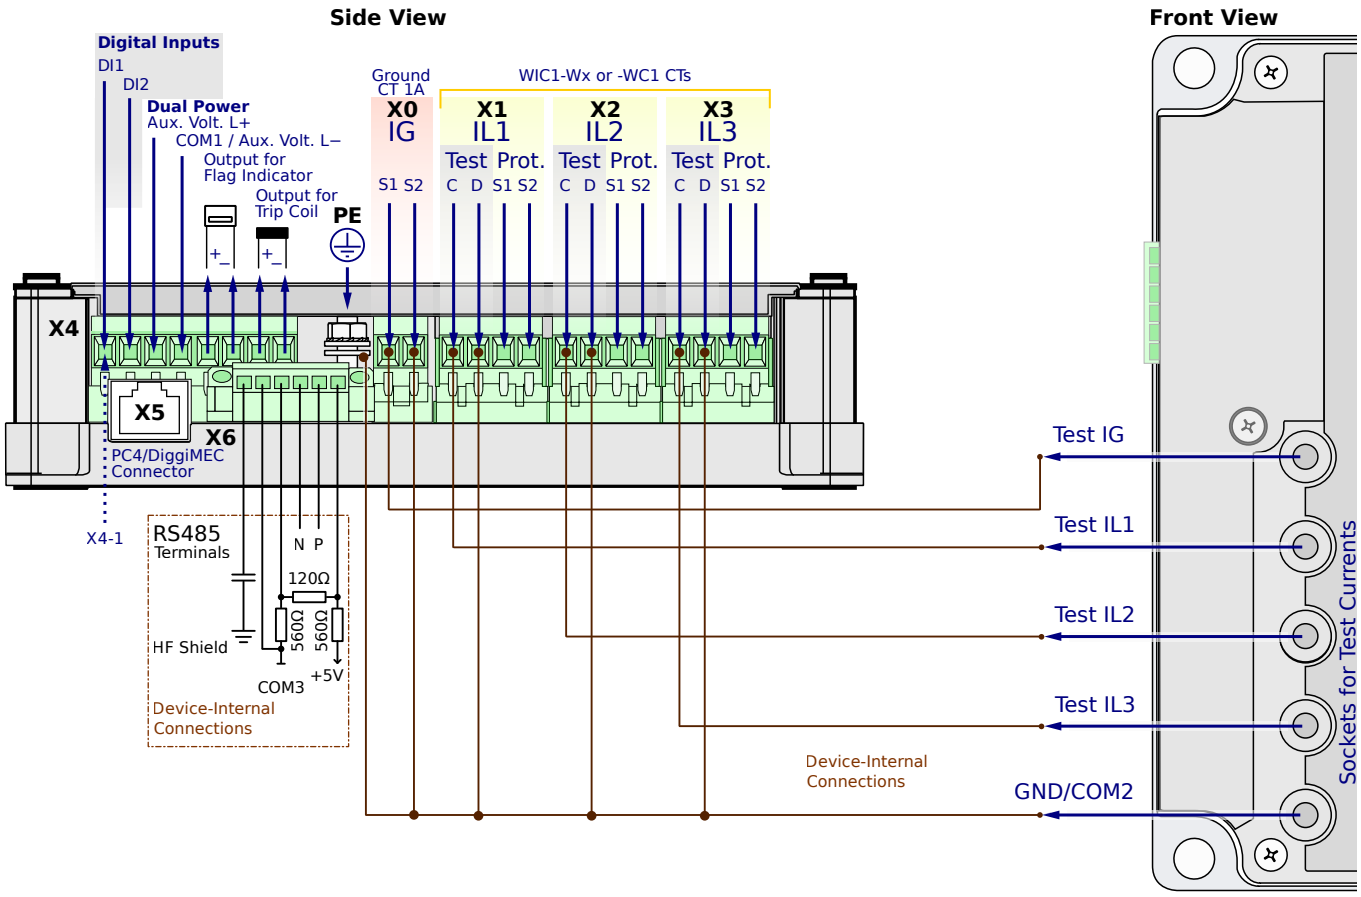


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2SBH

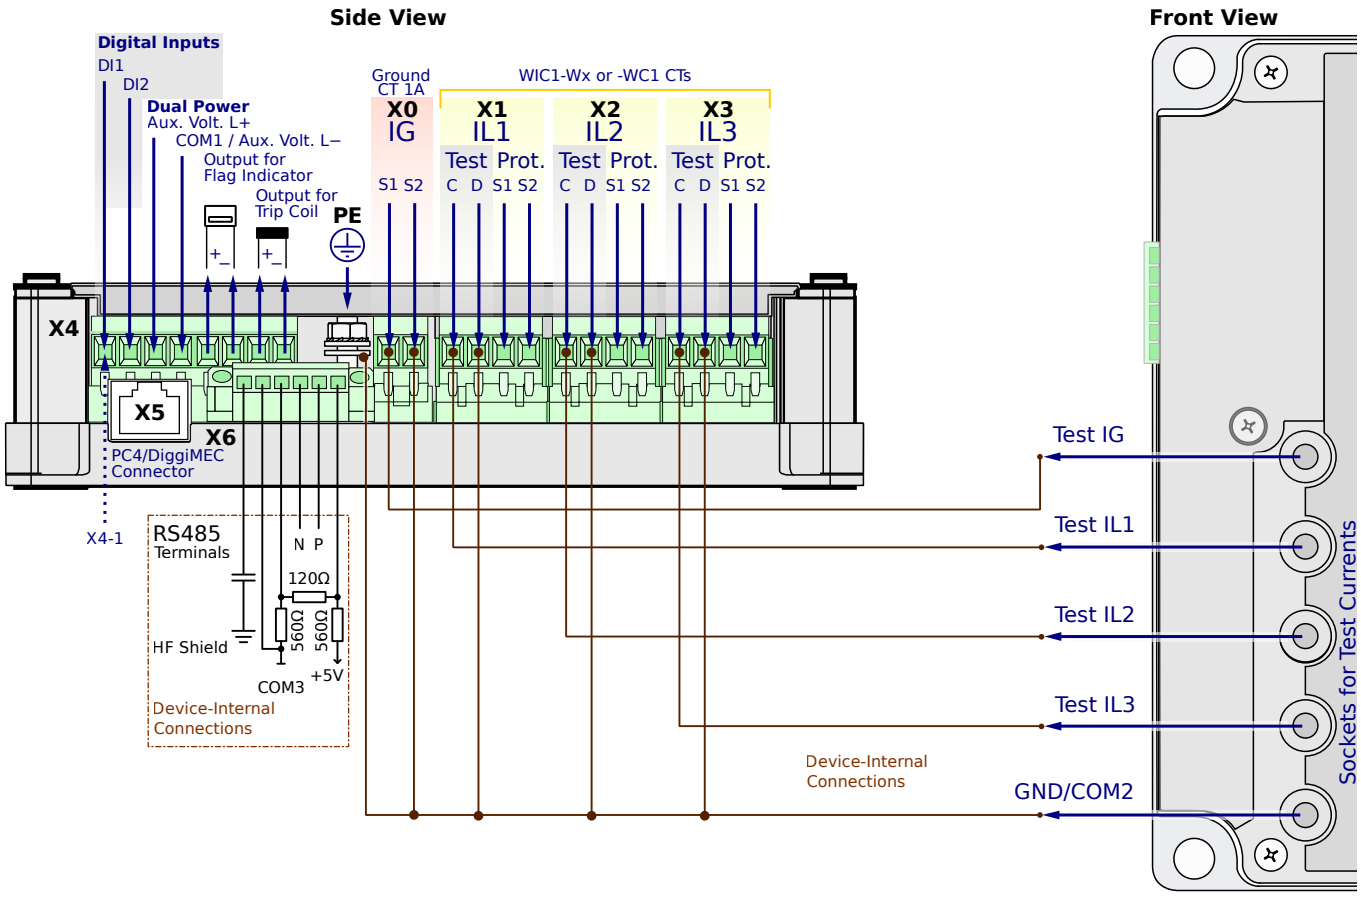


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2SC0

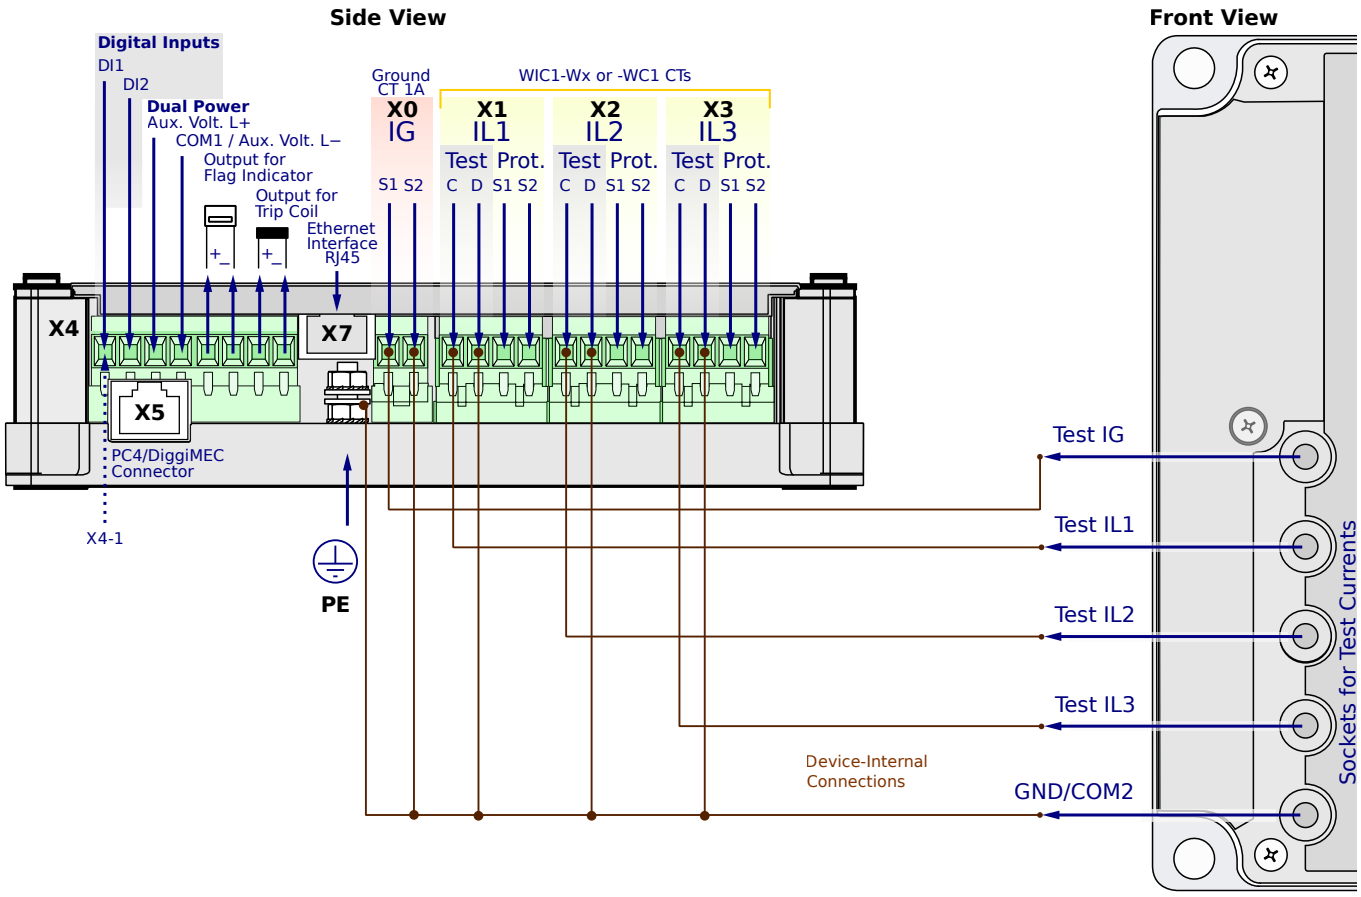


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2SCH

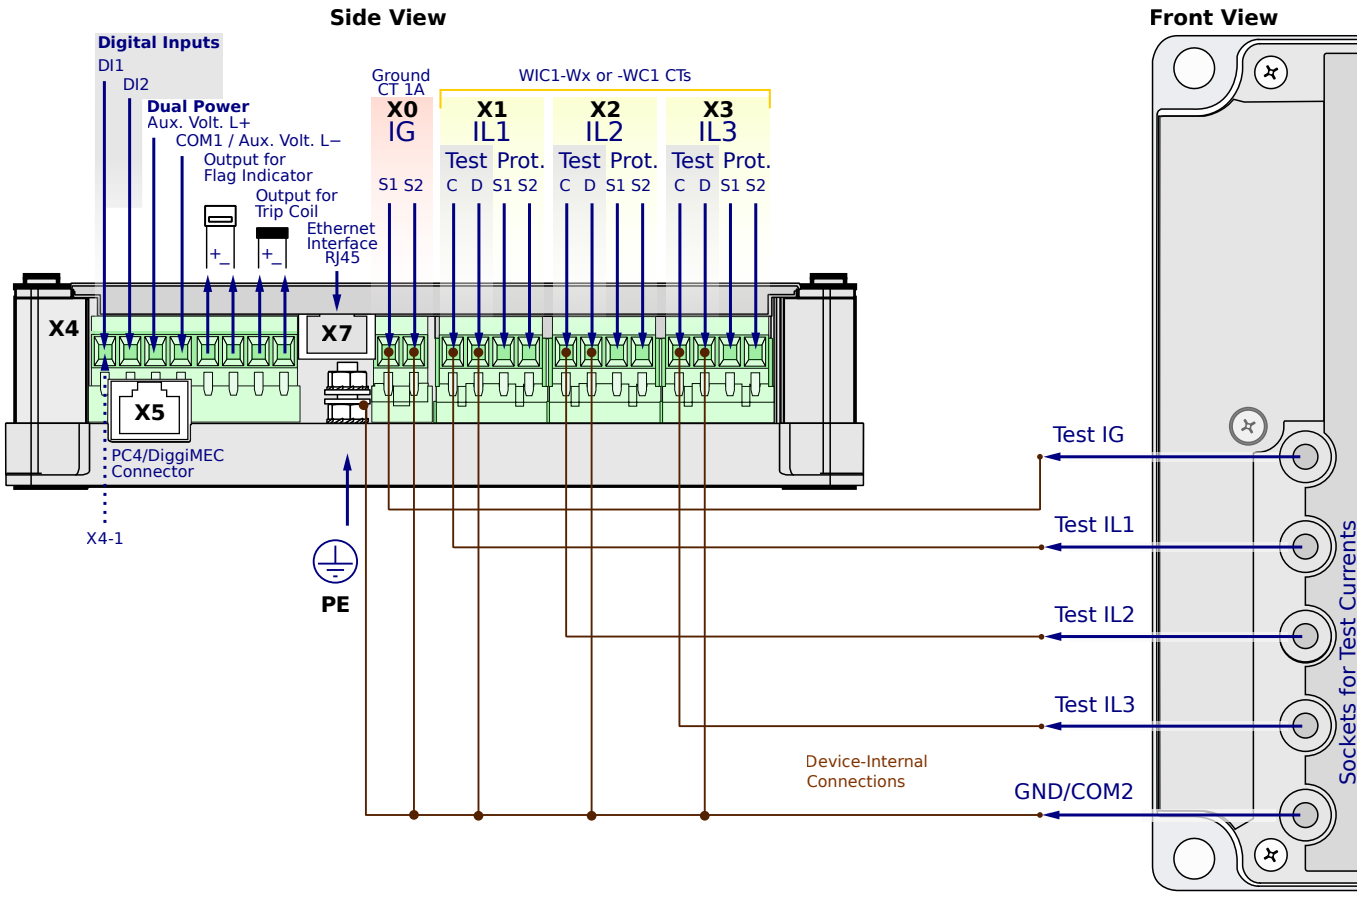


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2SL0

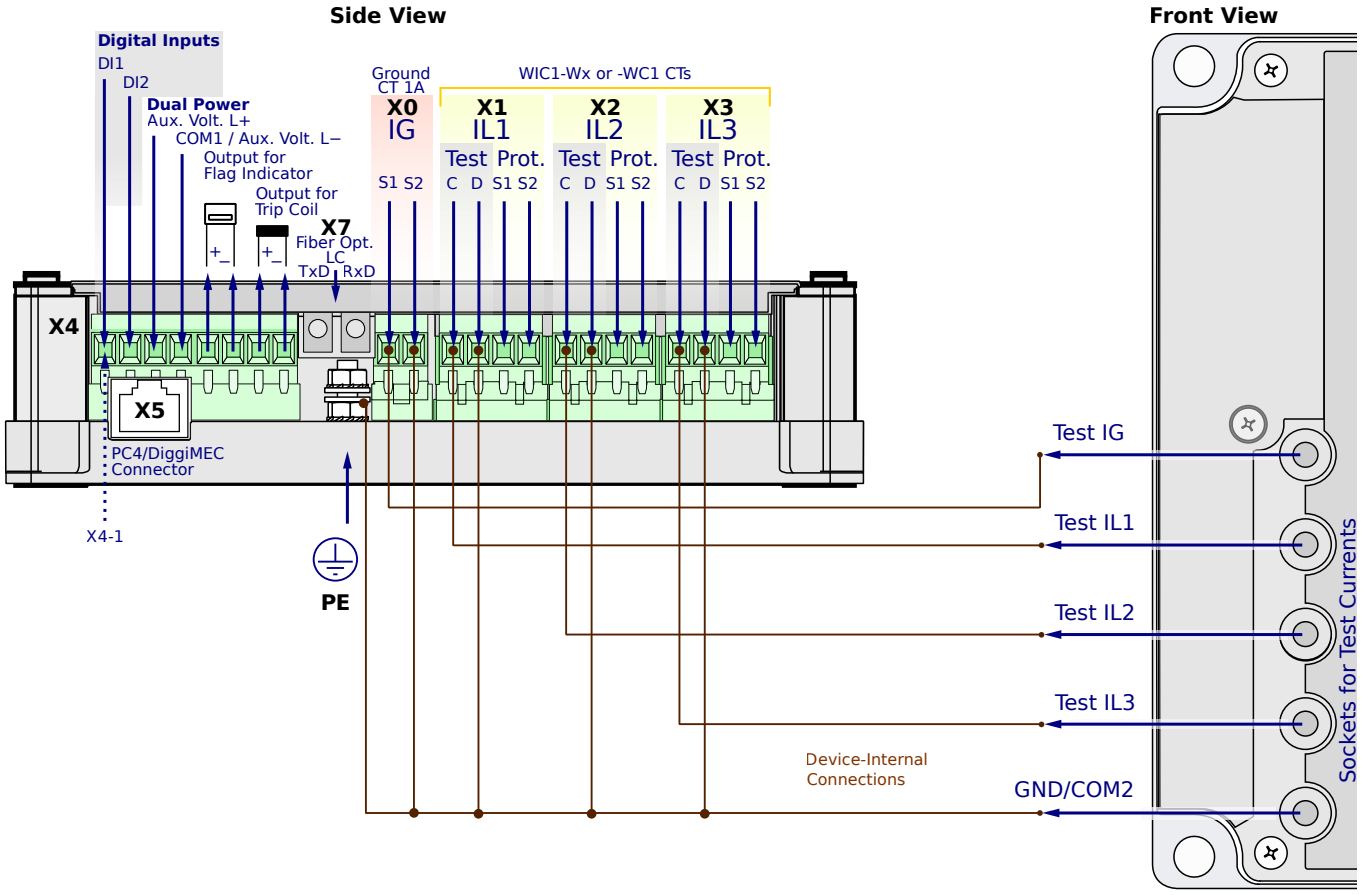


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2SLH

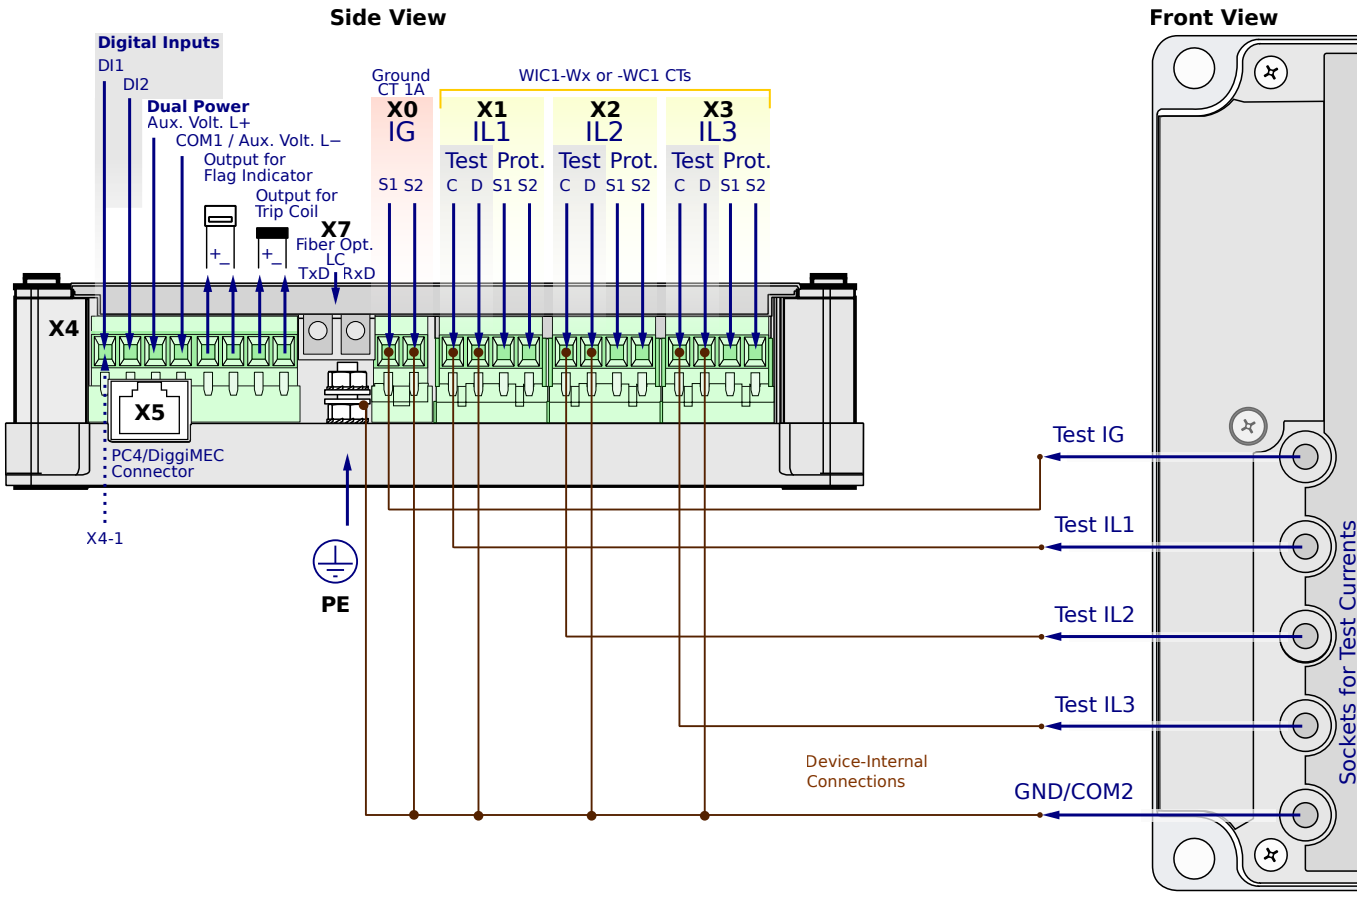


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2AA0

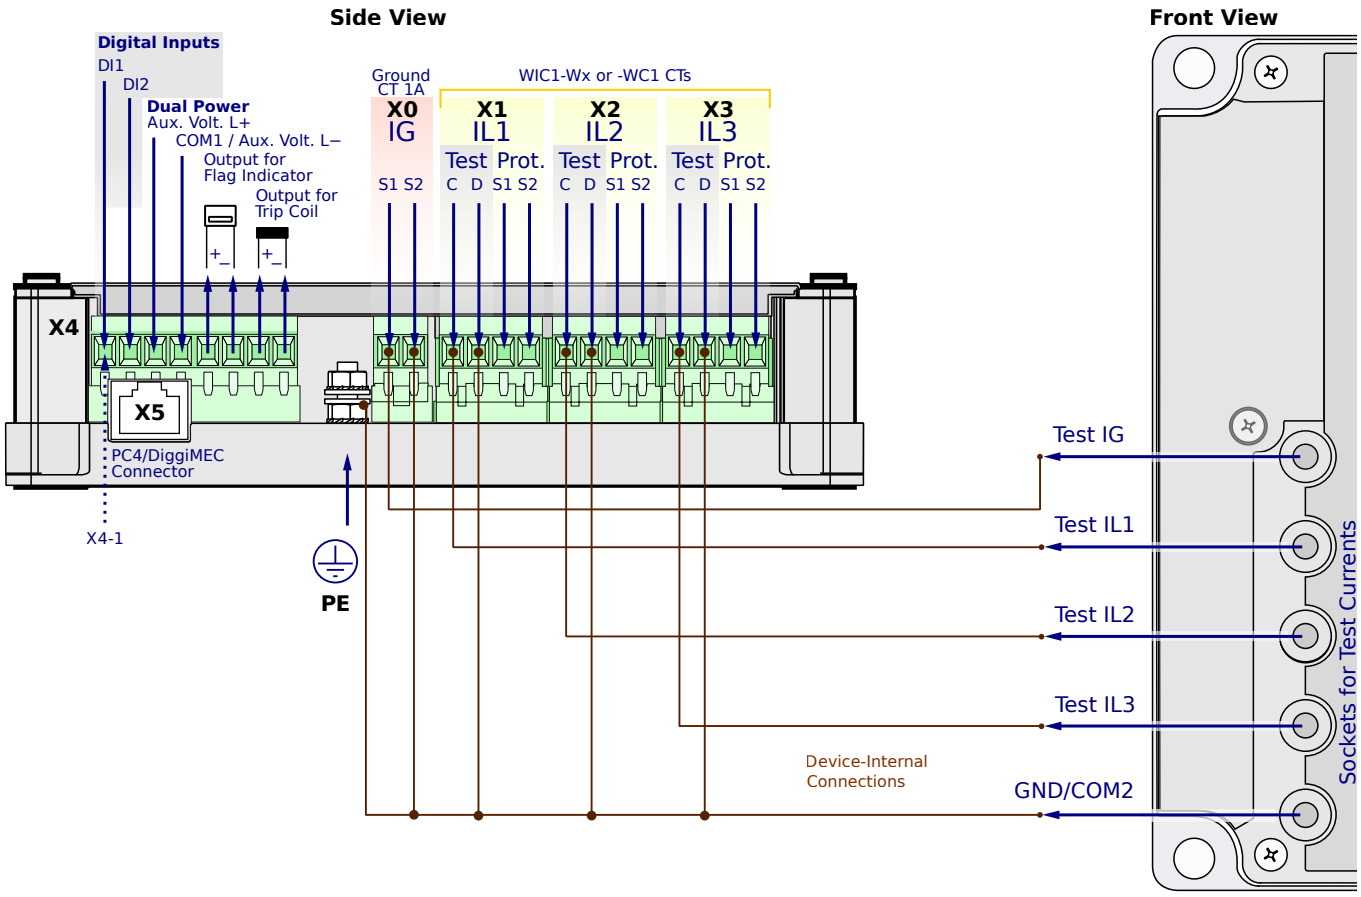


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2AAH

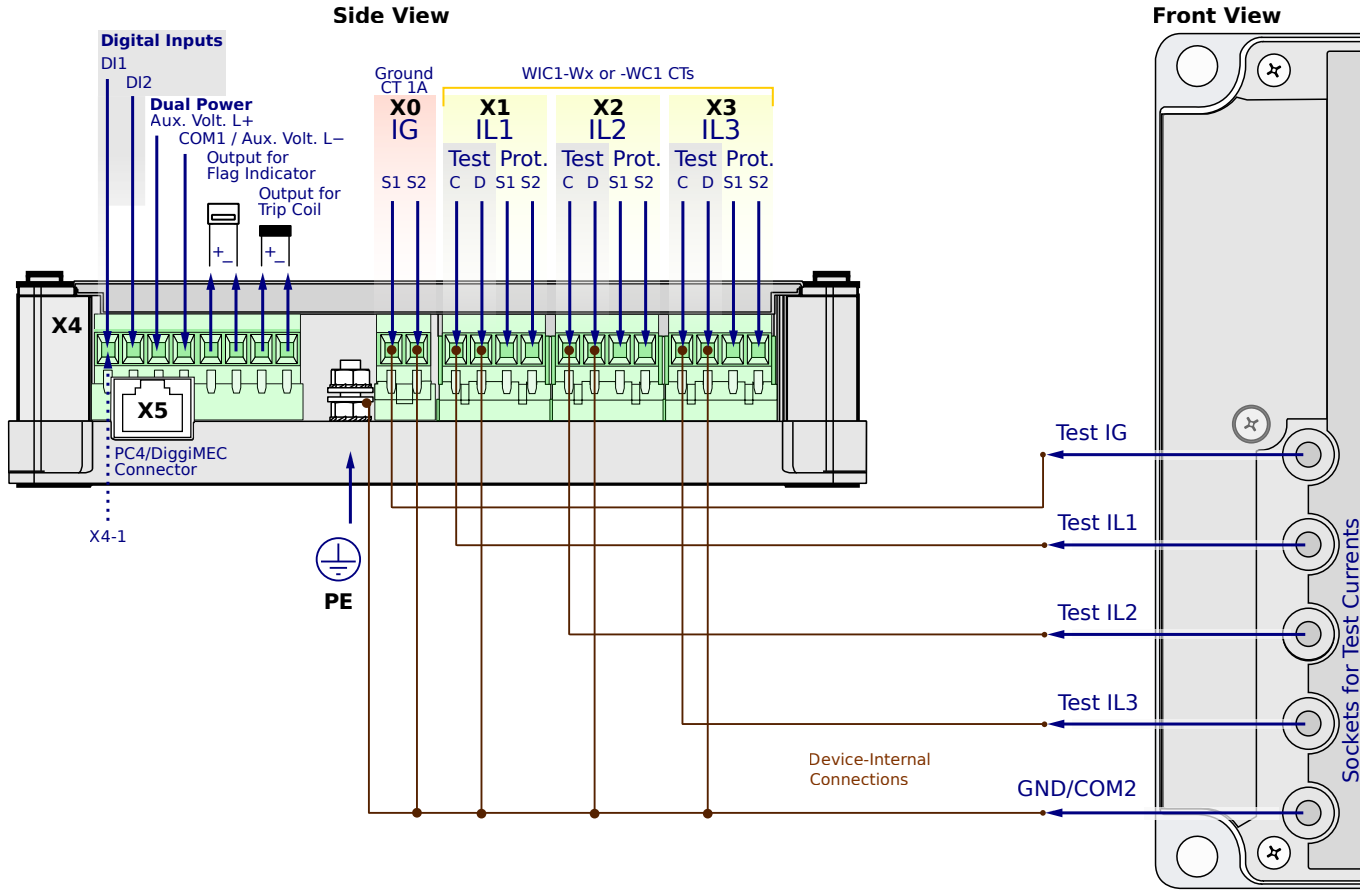


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2AB0

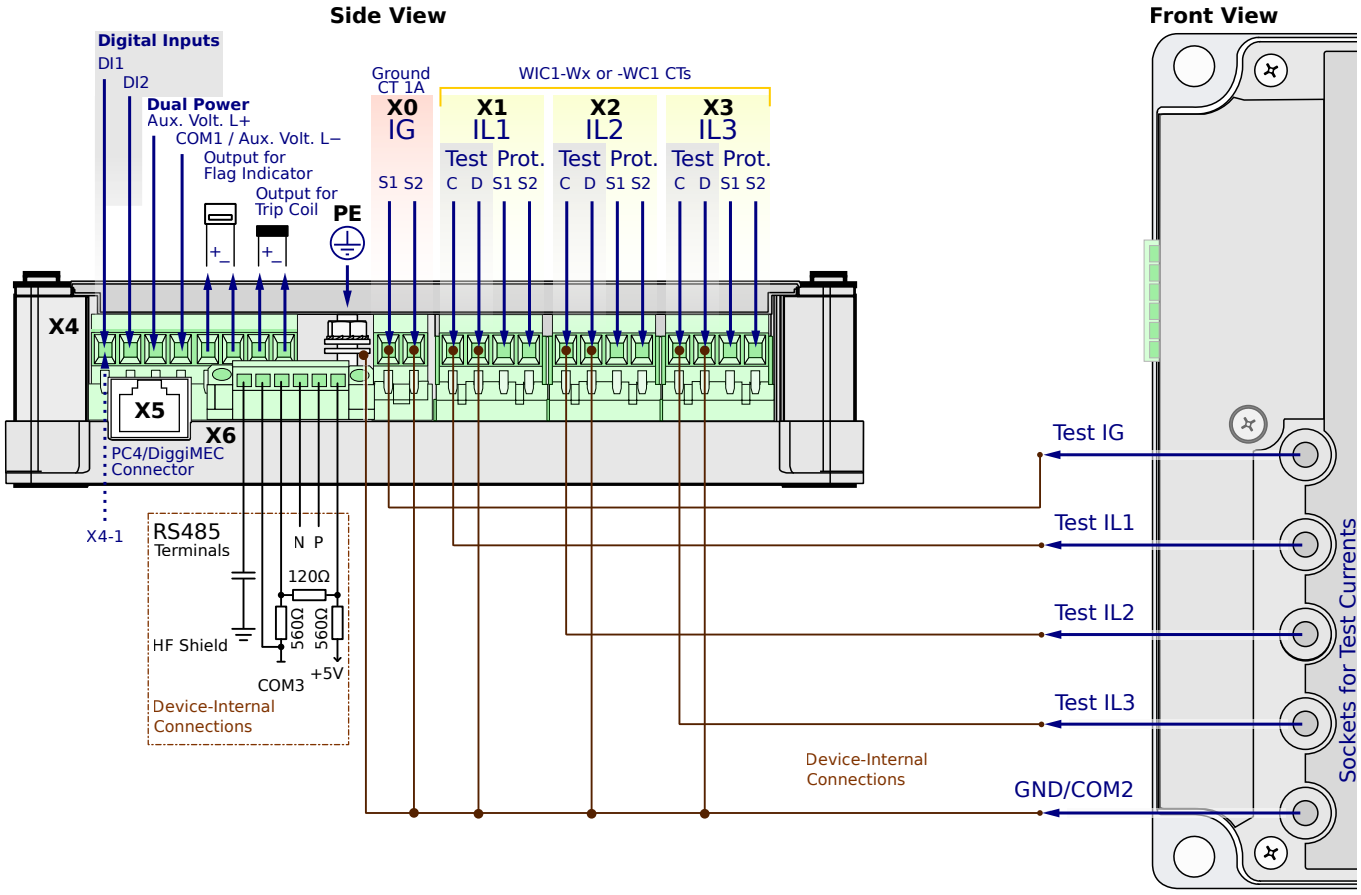


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2ABH

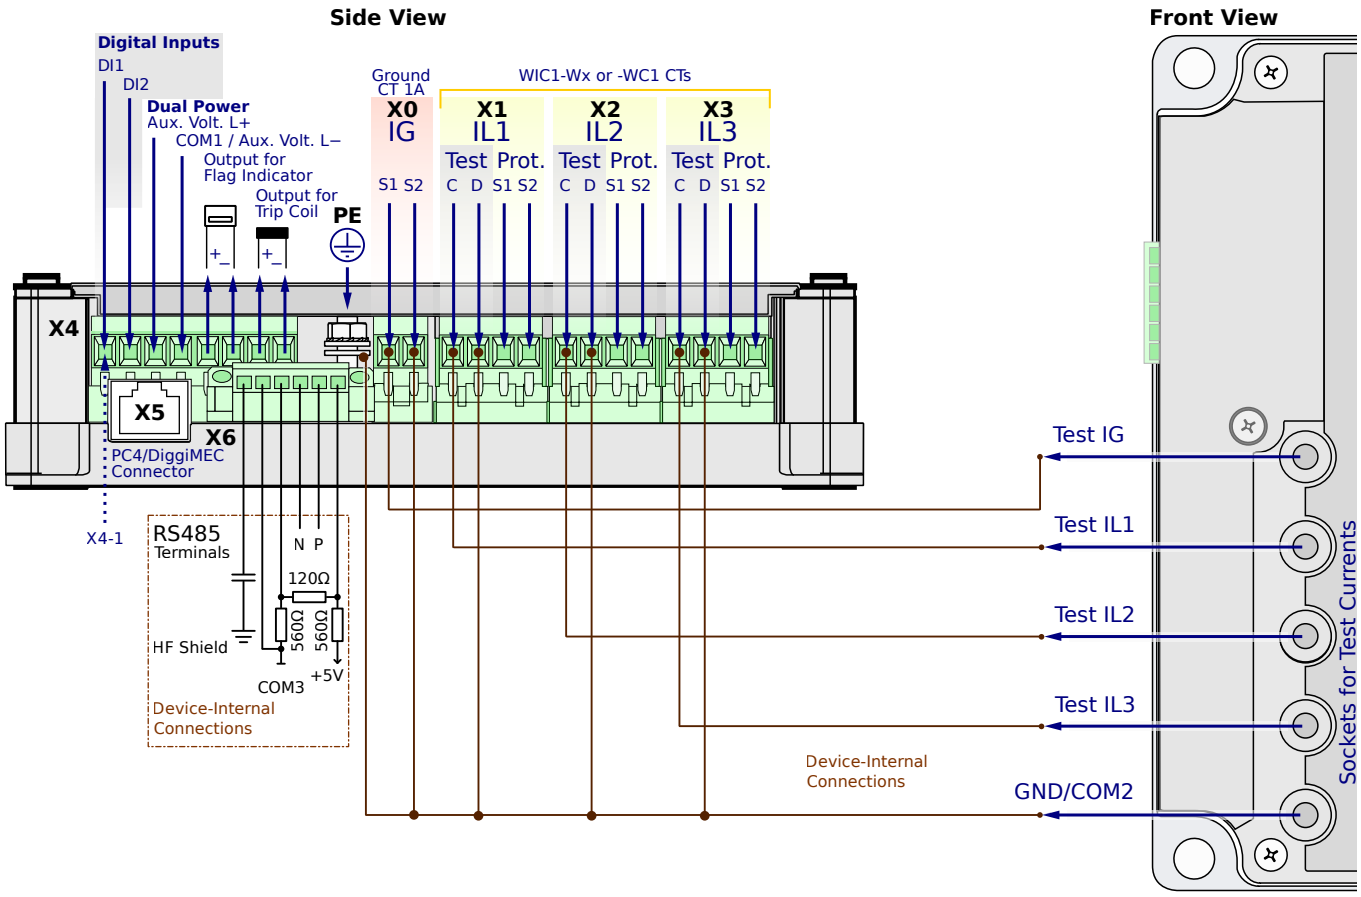


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2AC0

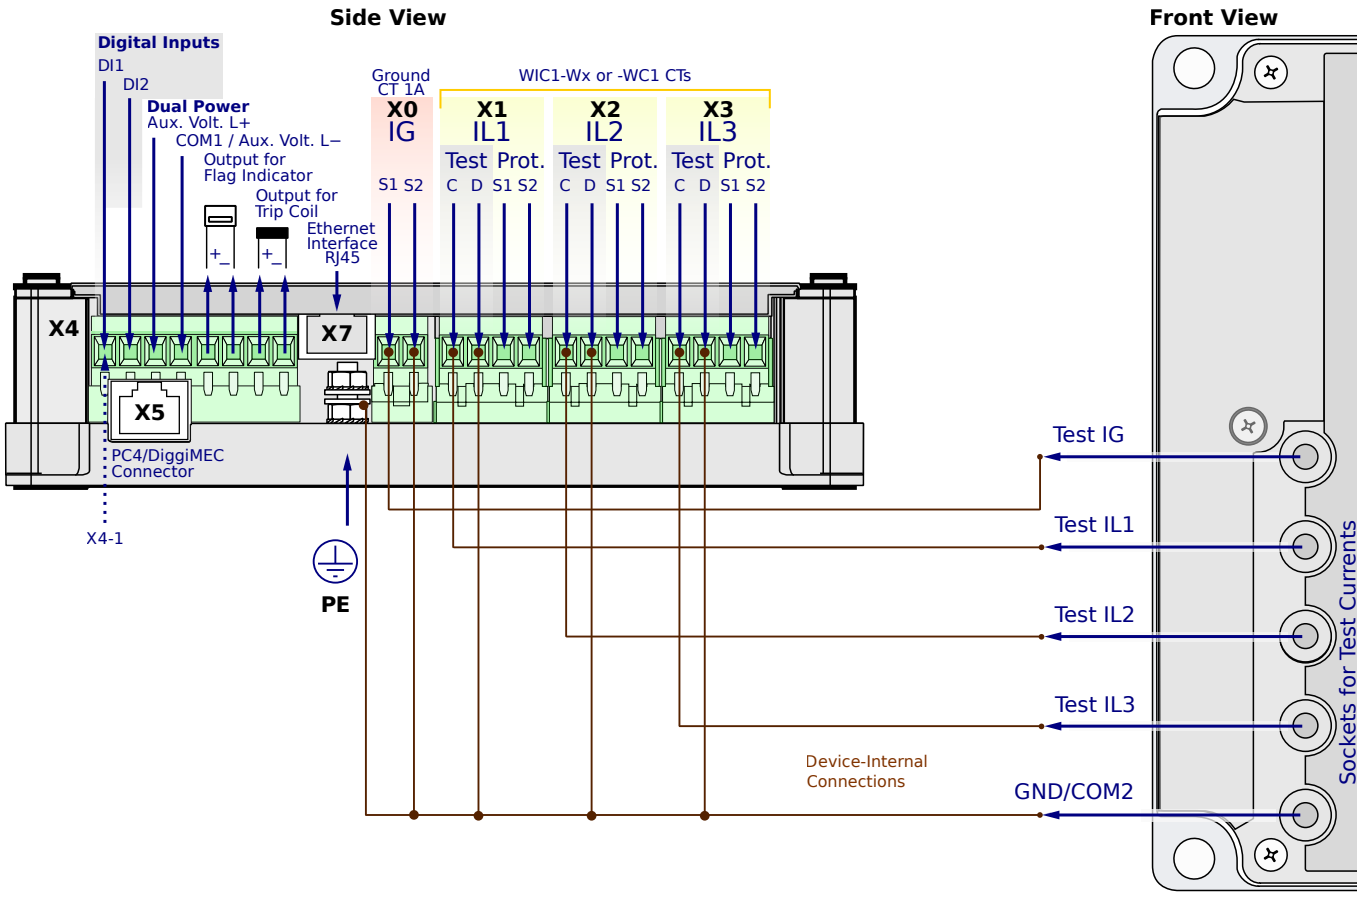


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2ACH

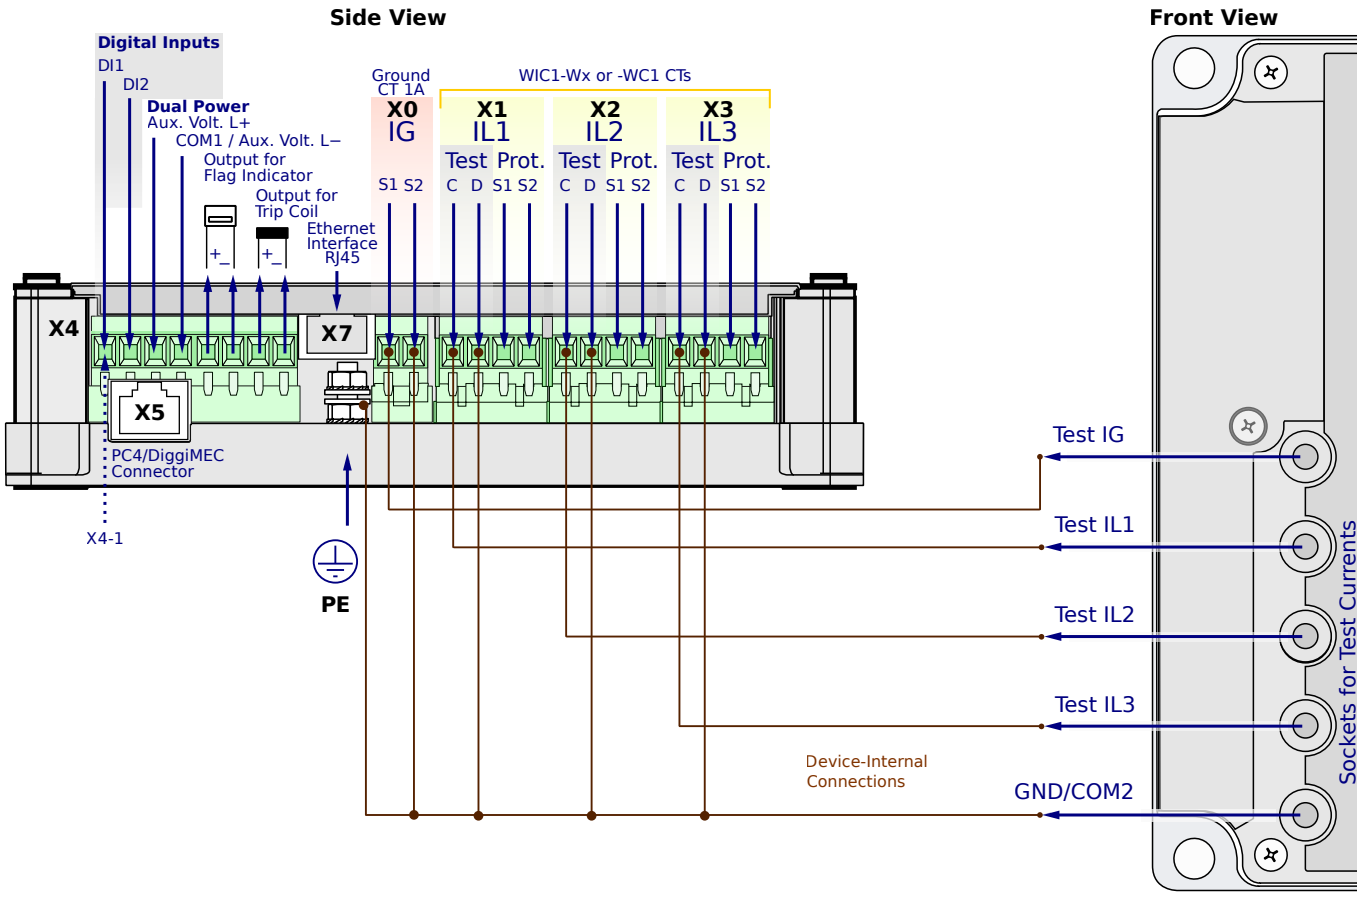


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2AL0

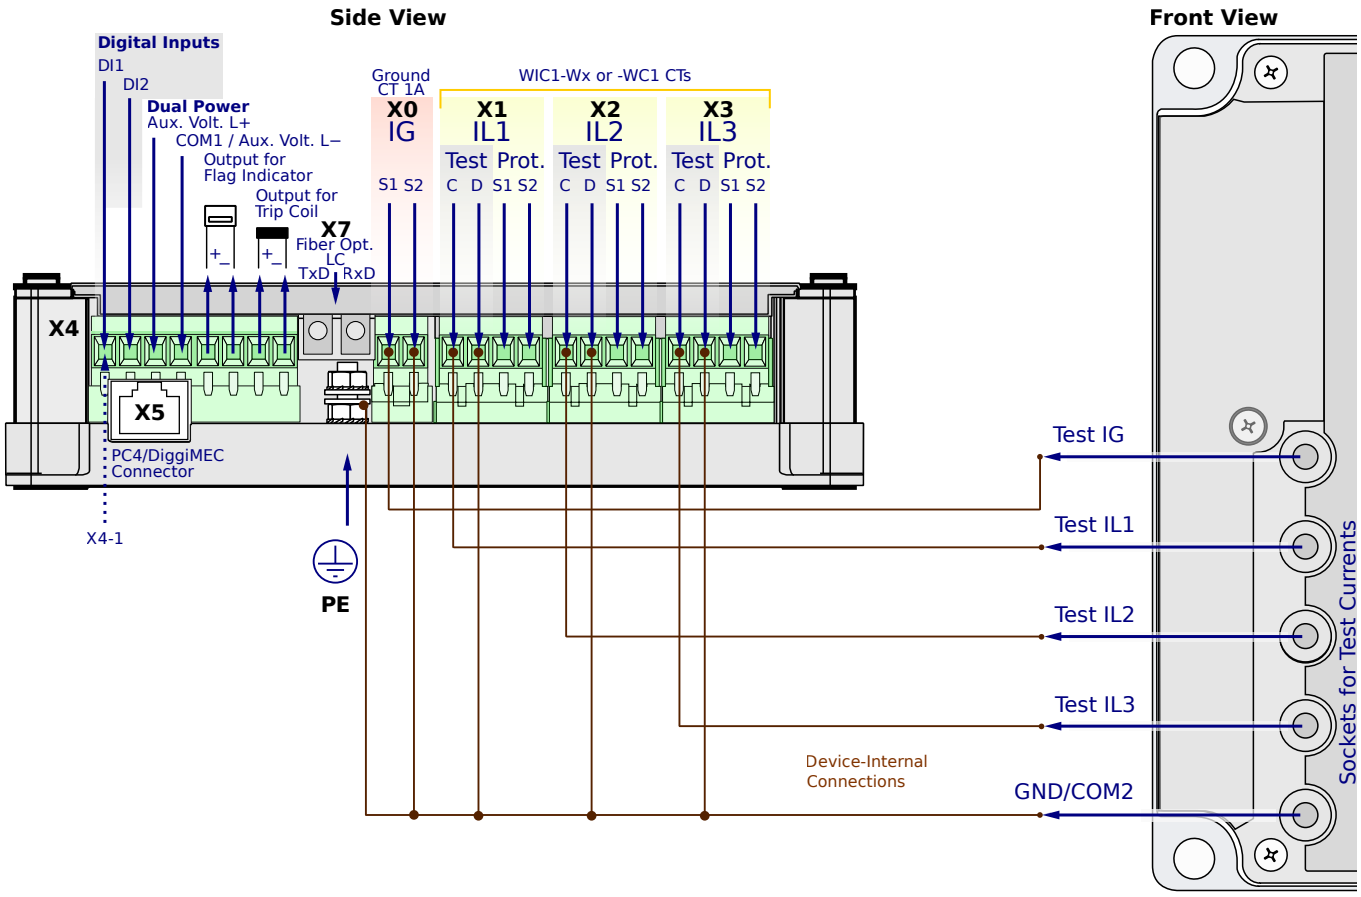


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2ALH

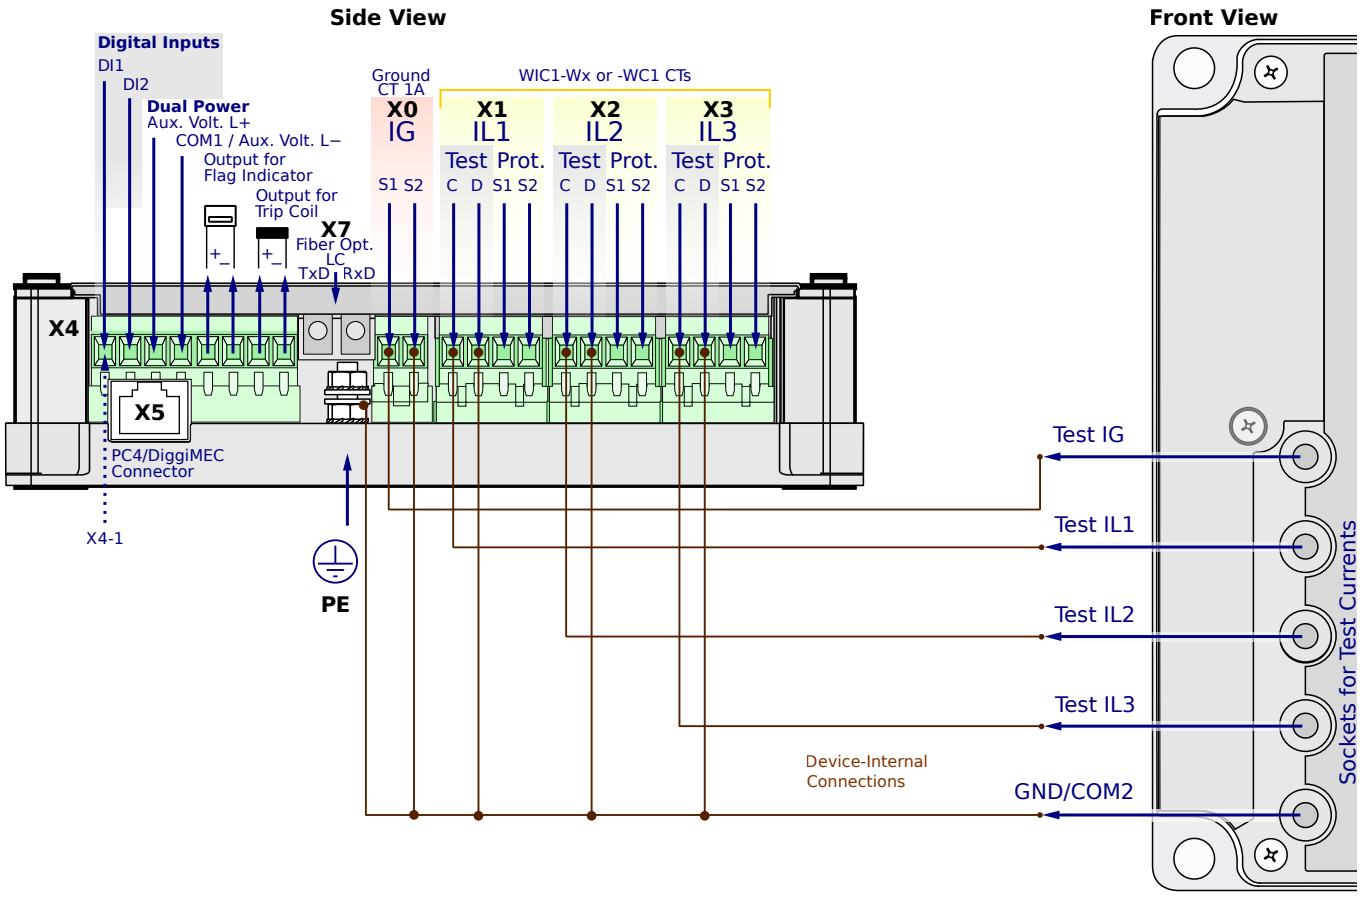


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2PA0

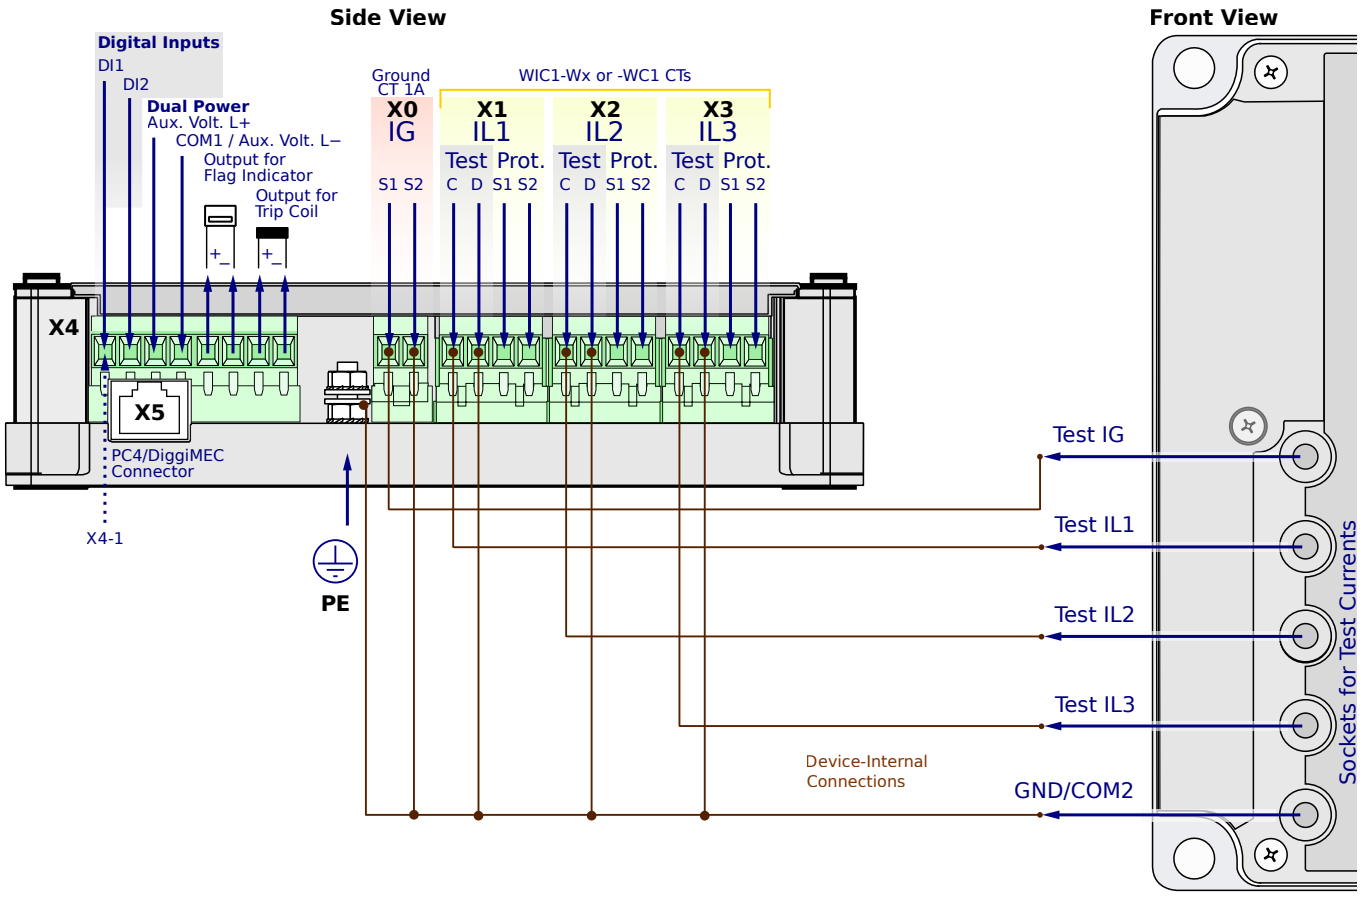


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2PAH

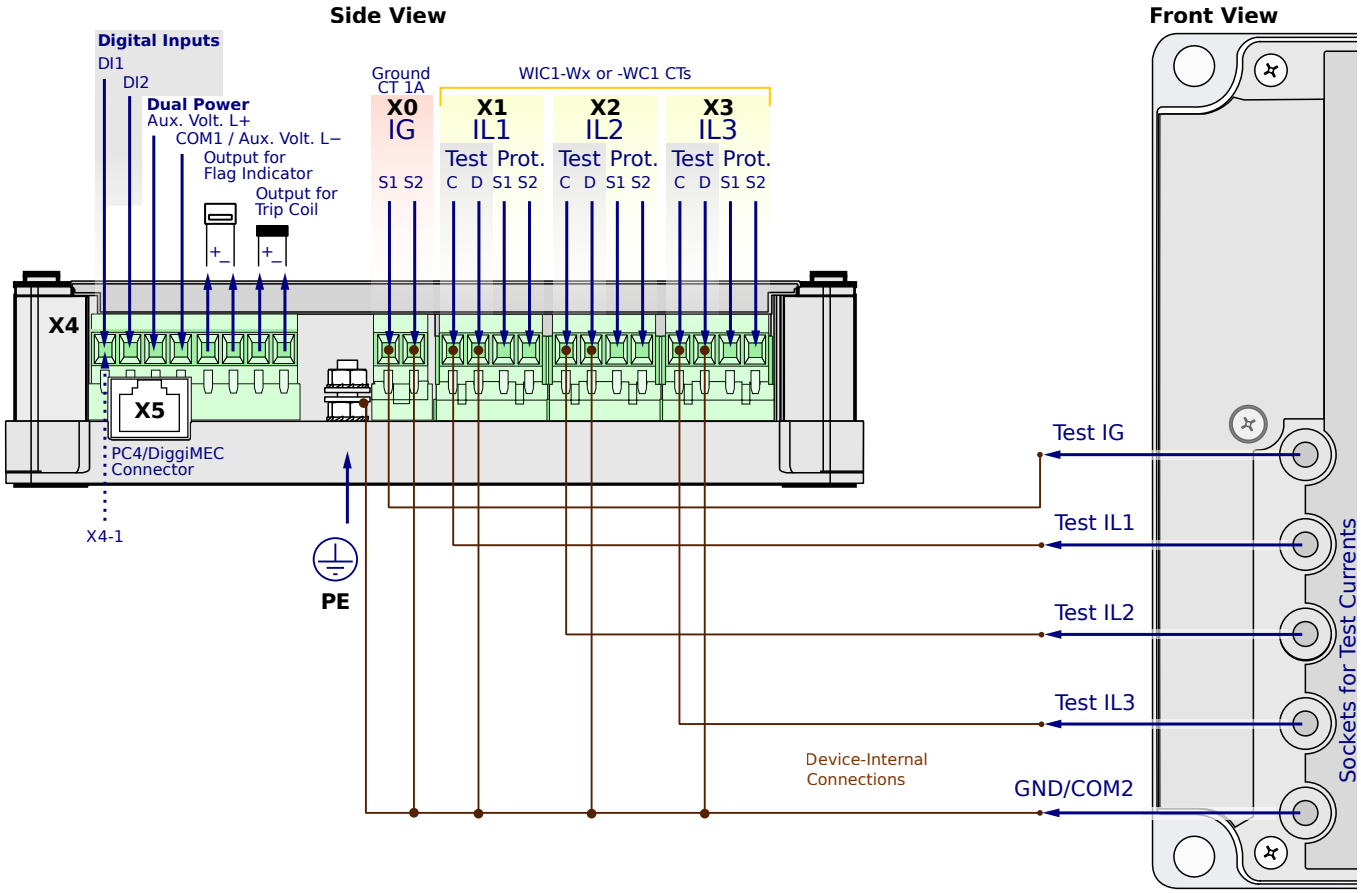


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0FD2PB0

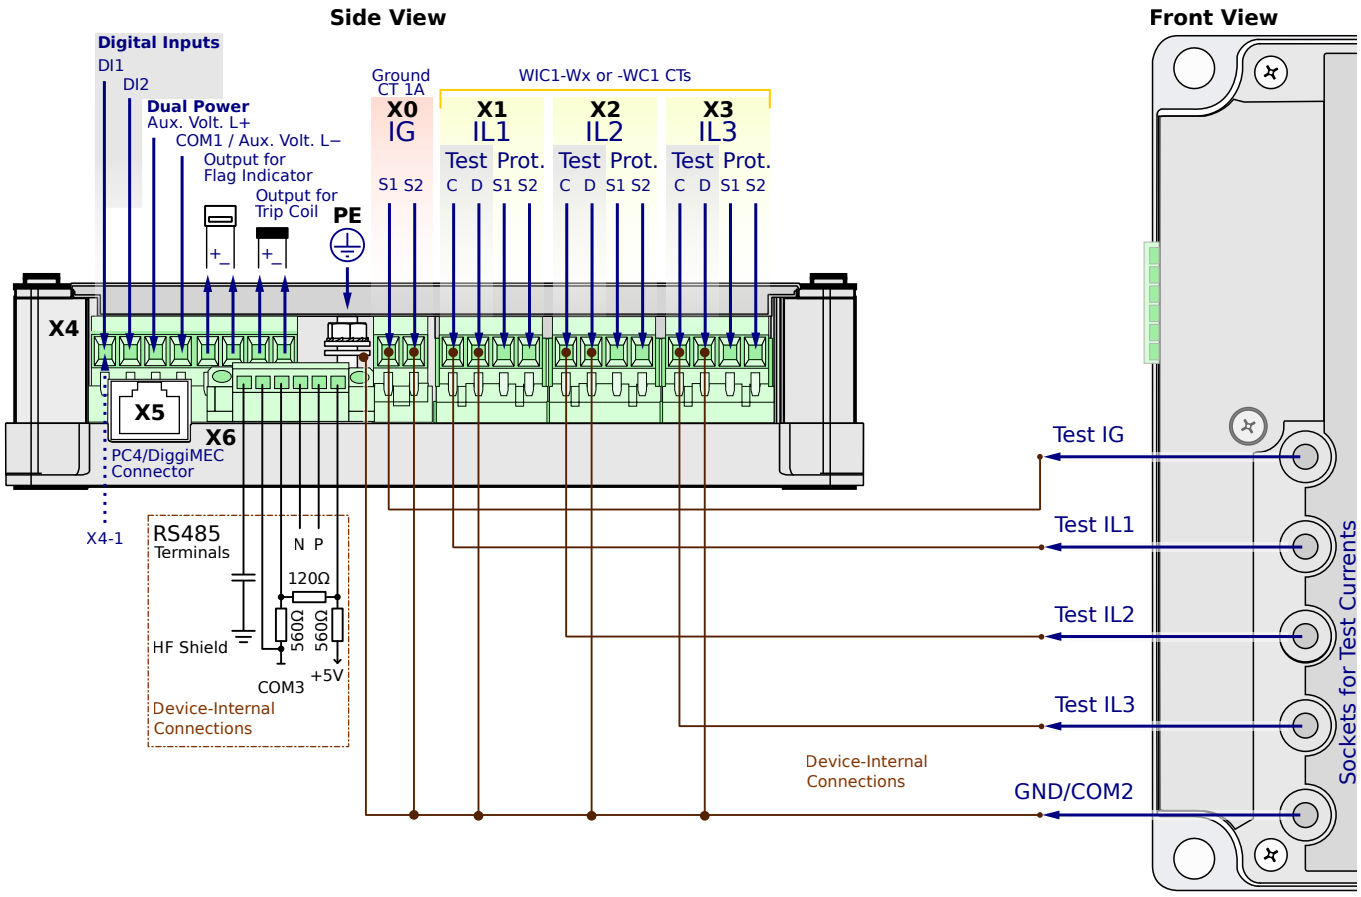


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2PBH

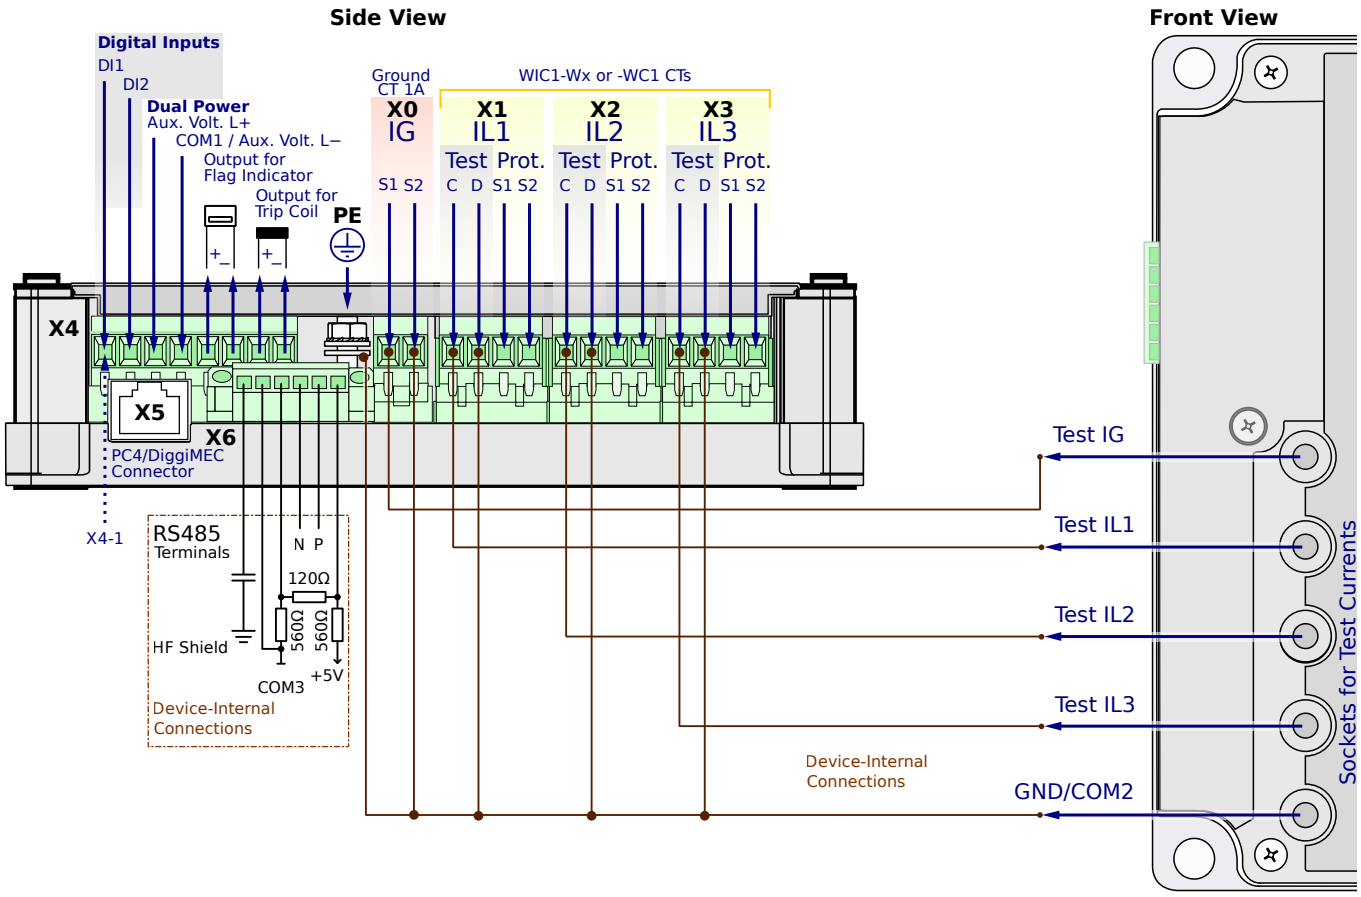


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0FD2PC0

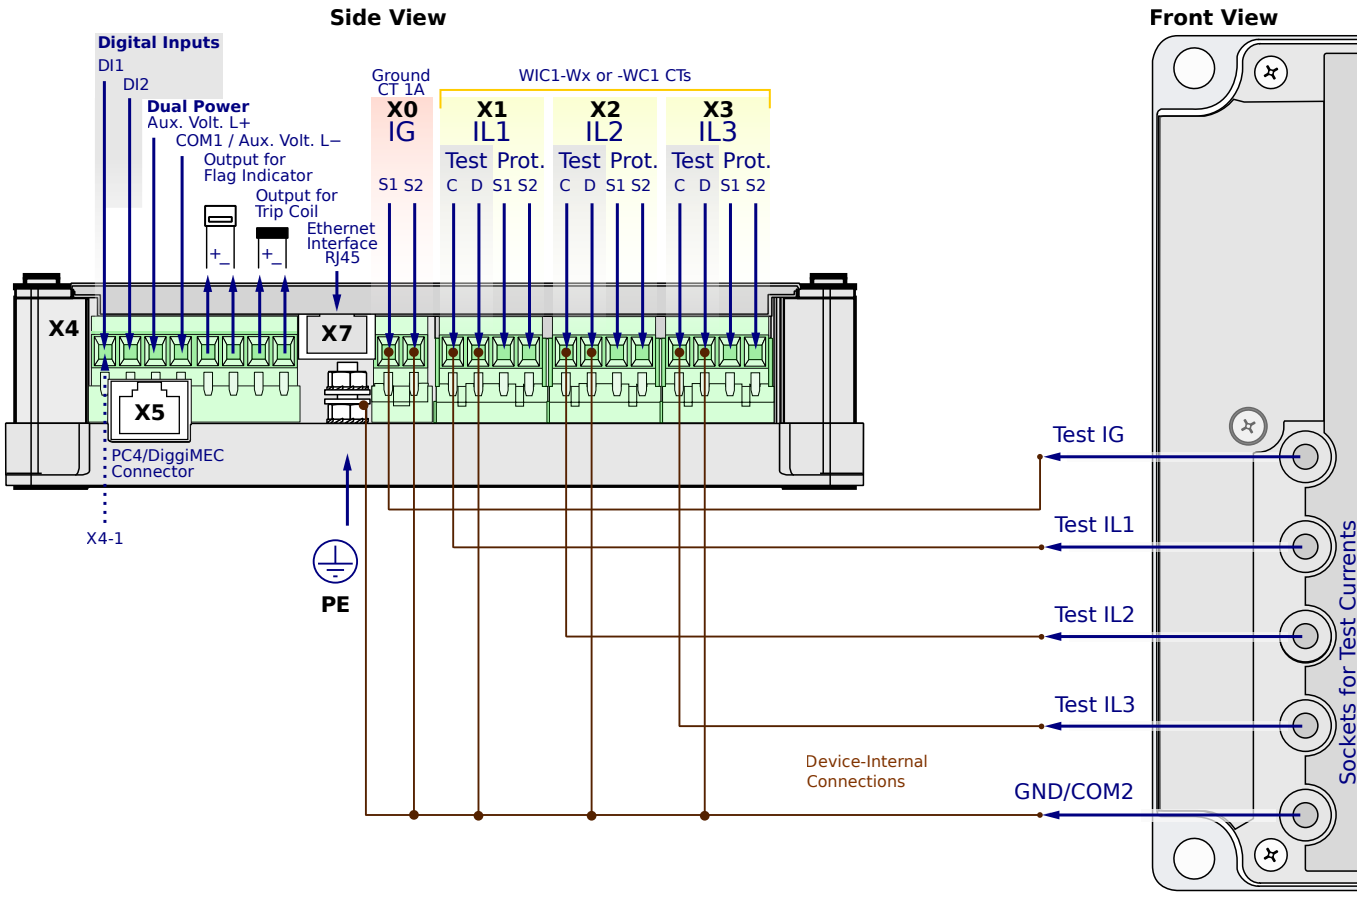


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2PCH

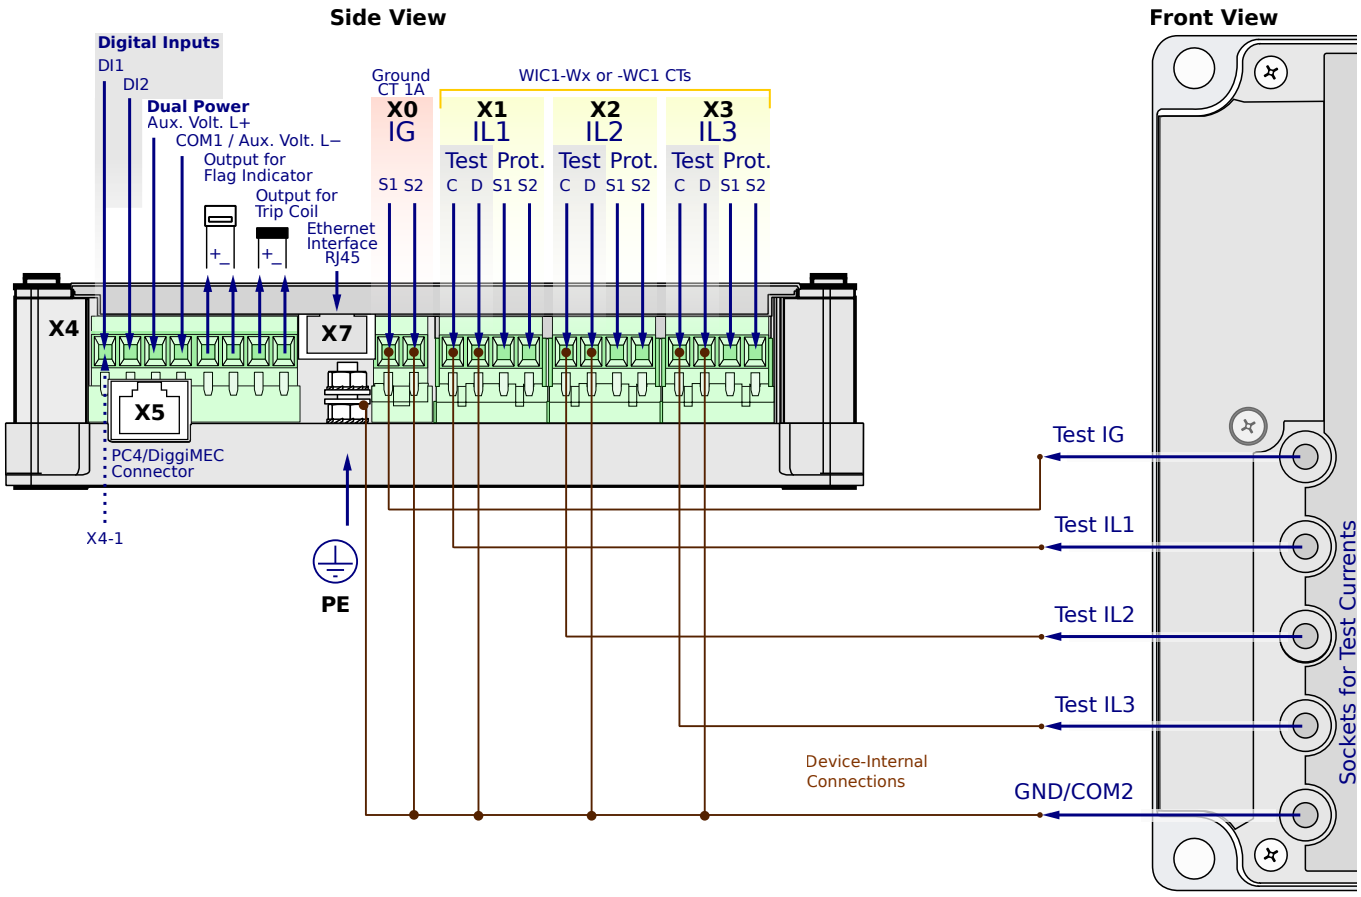


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0FD2PL0

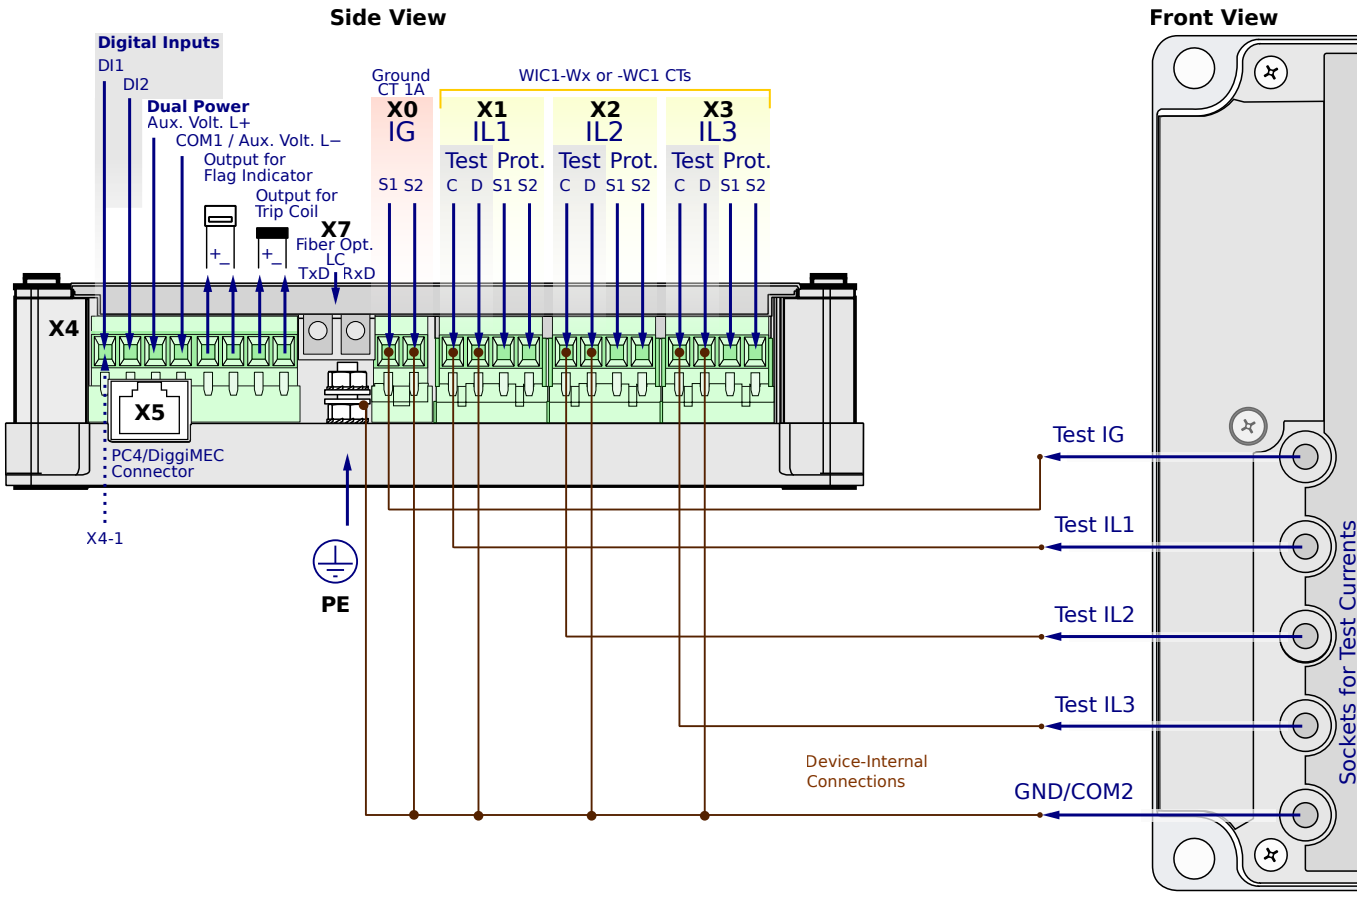


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0FD2PLH

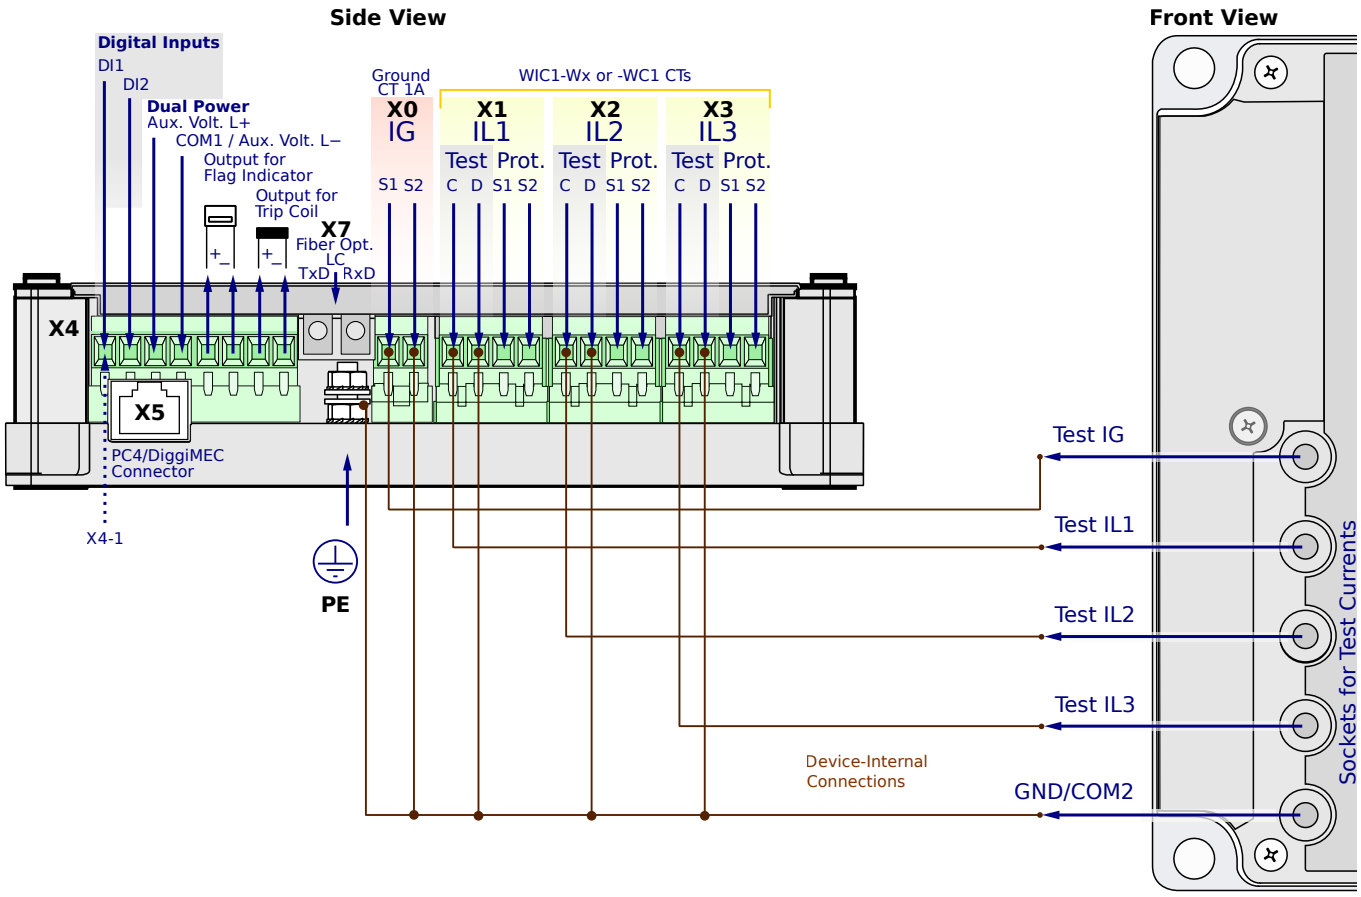


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1SA0

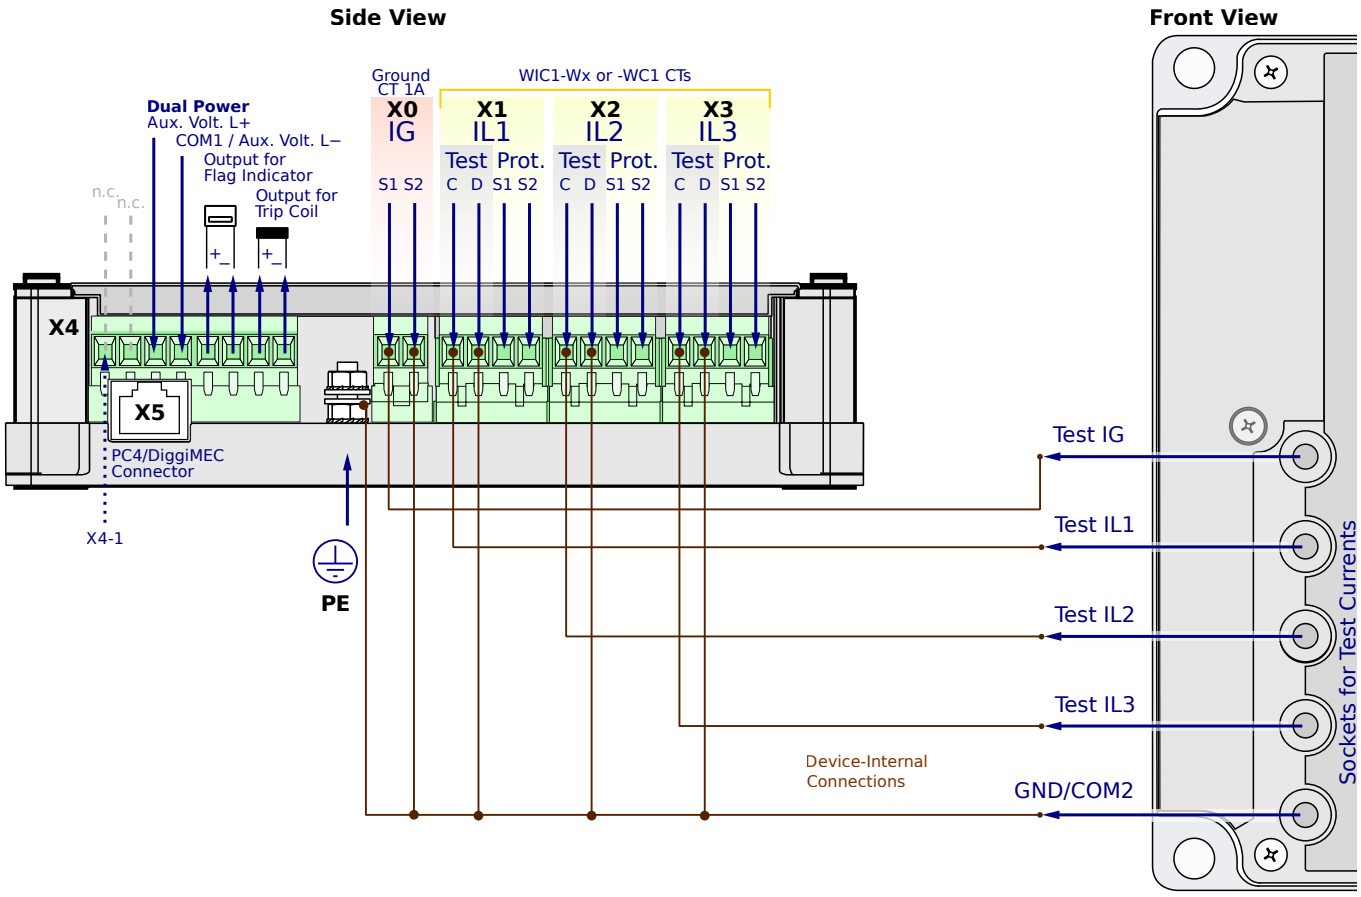


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1SAH

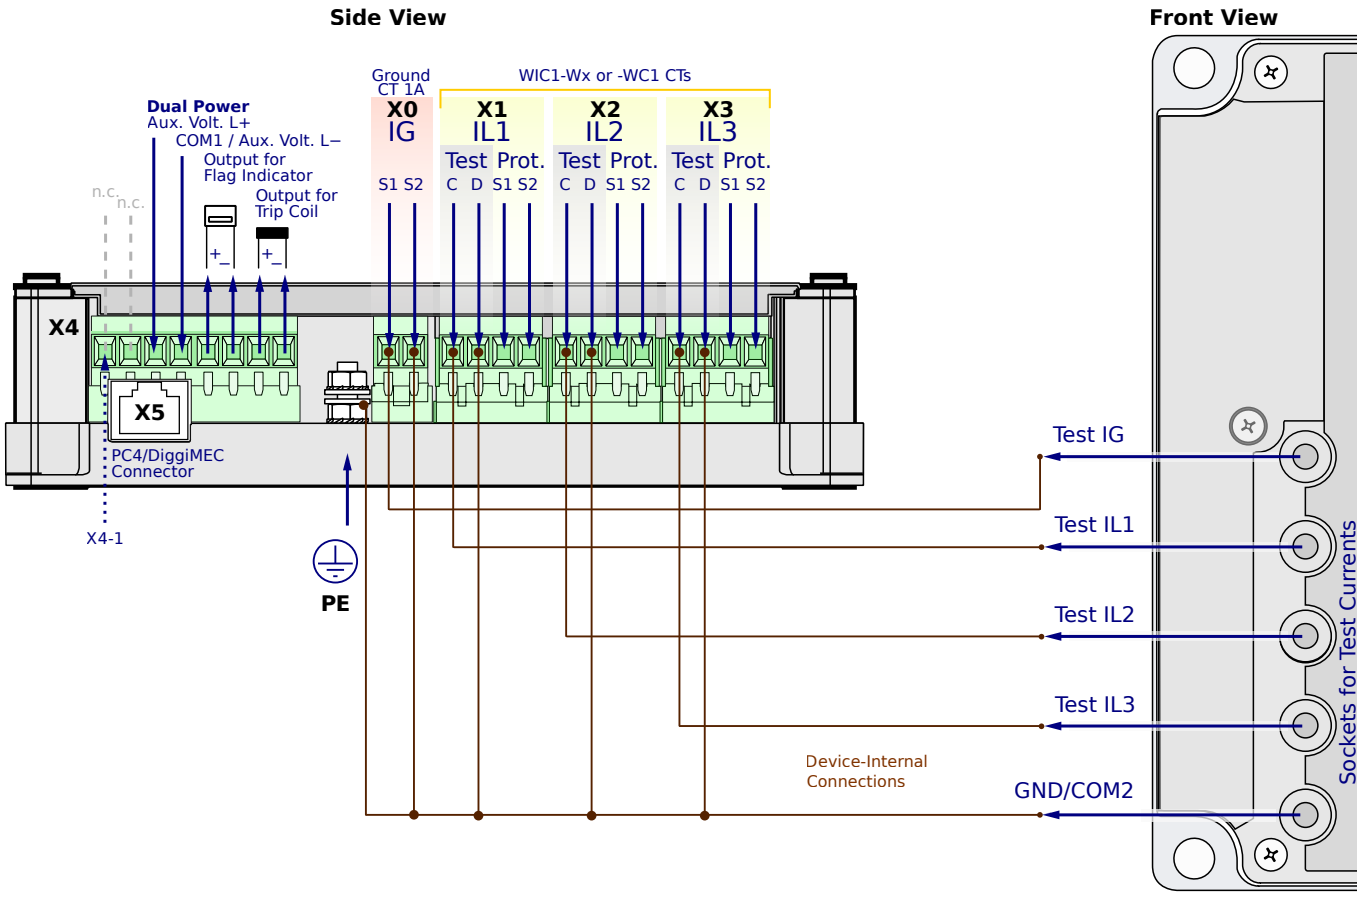


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1SB0

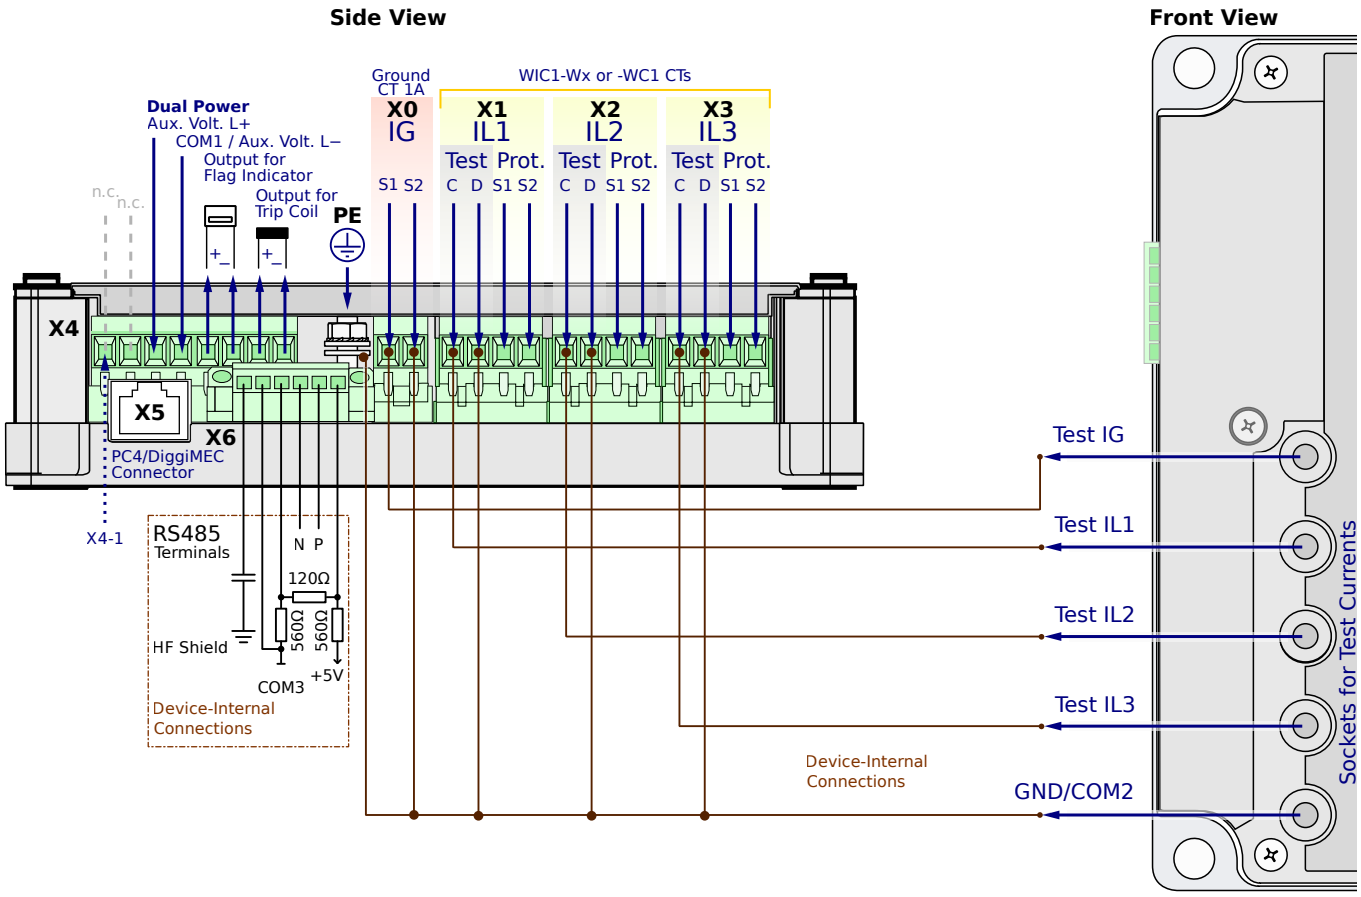


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1SBH

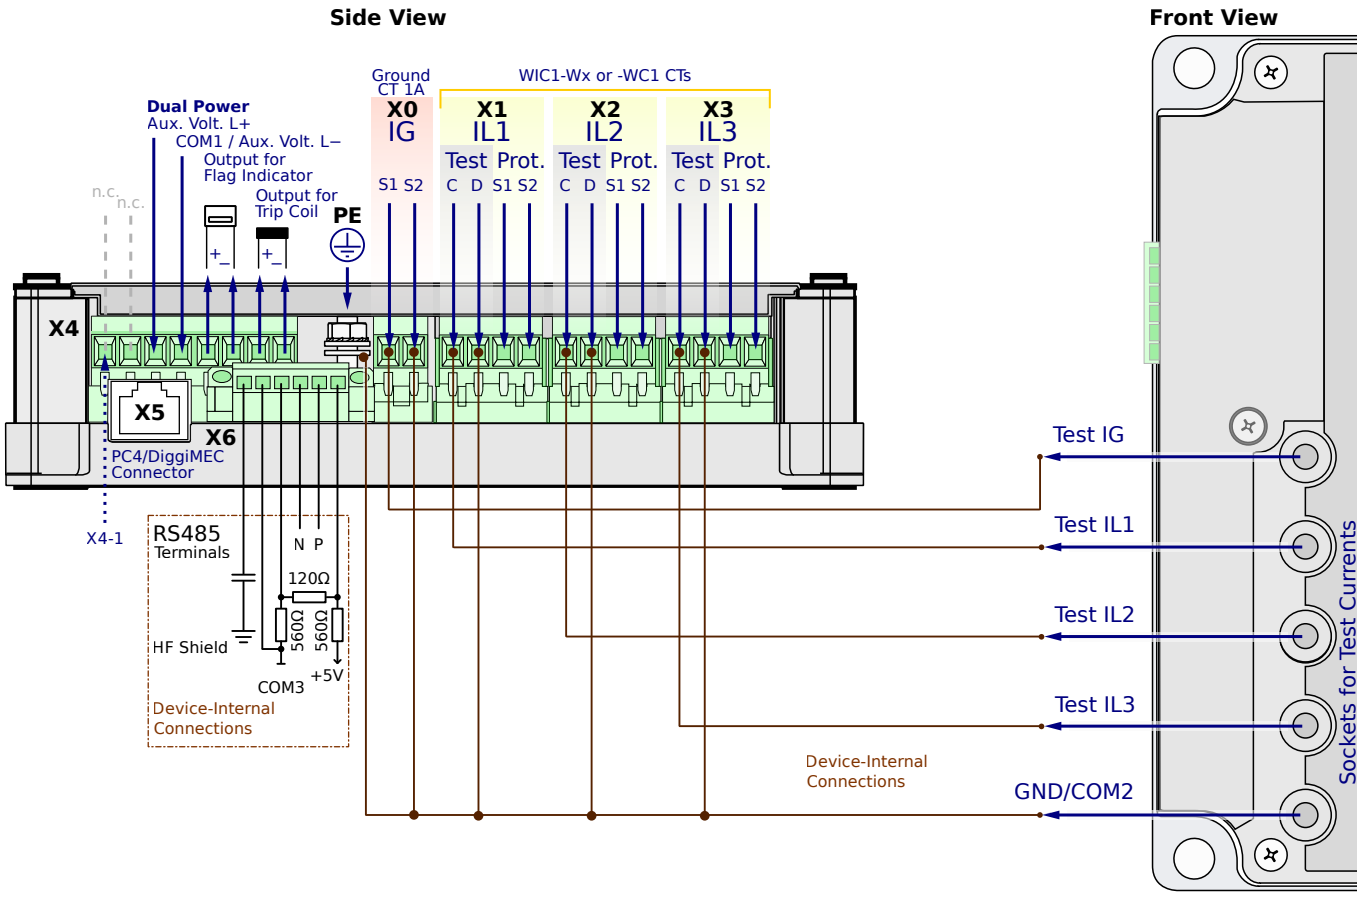


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1SC0

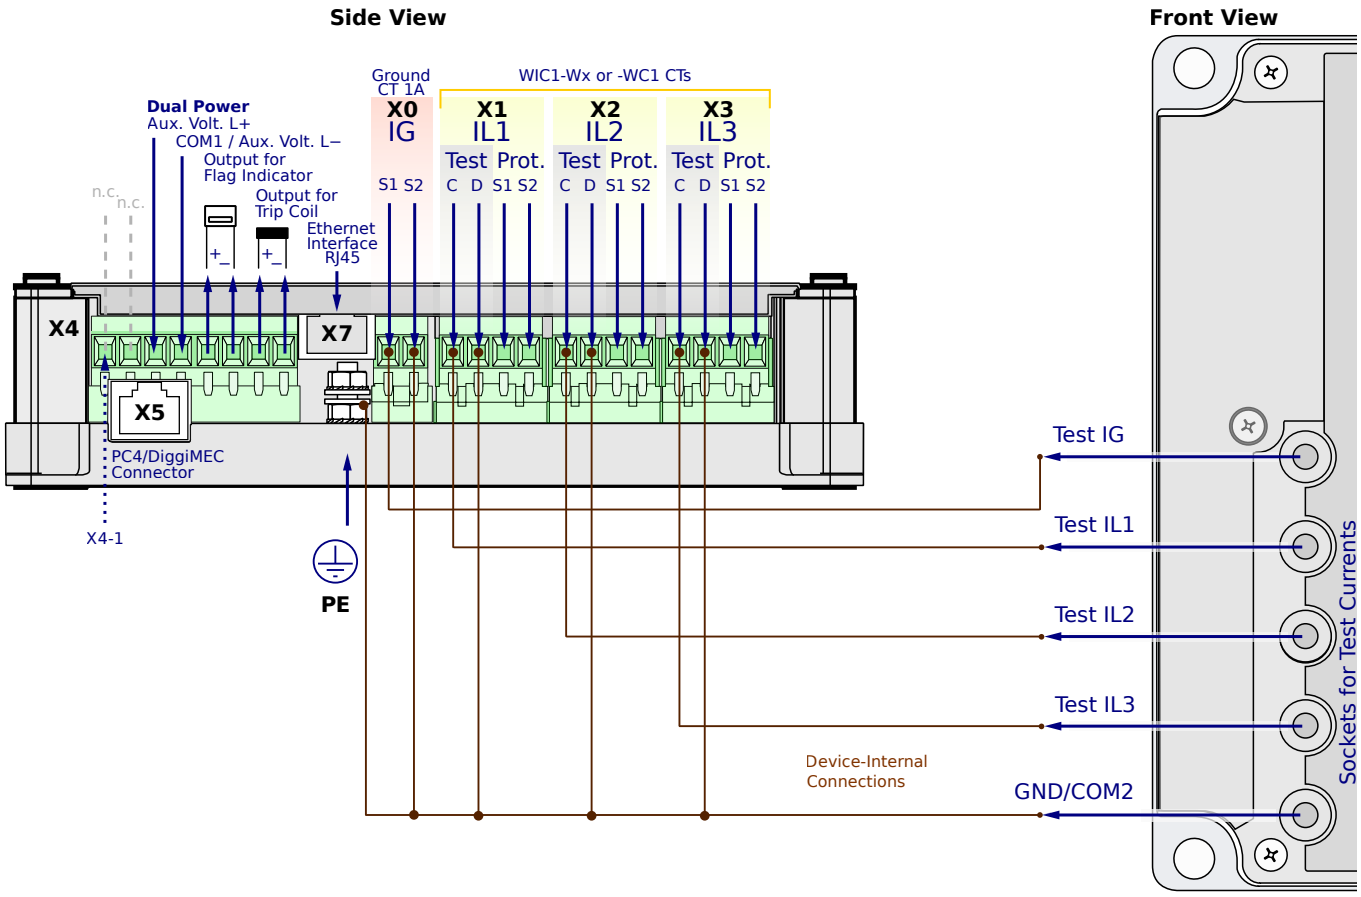


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1SCH

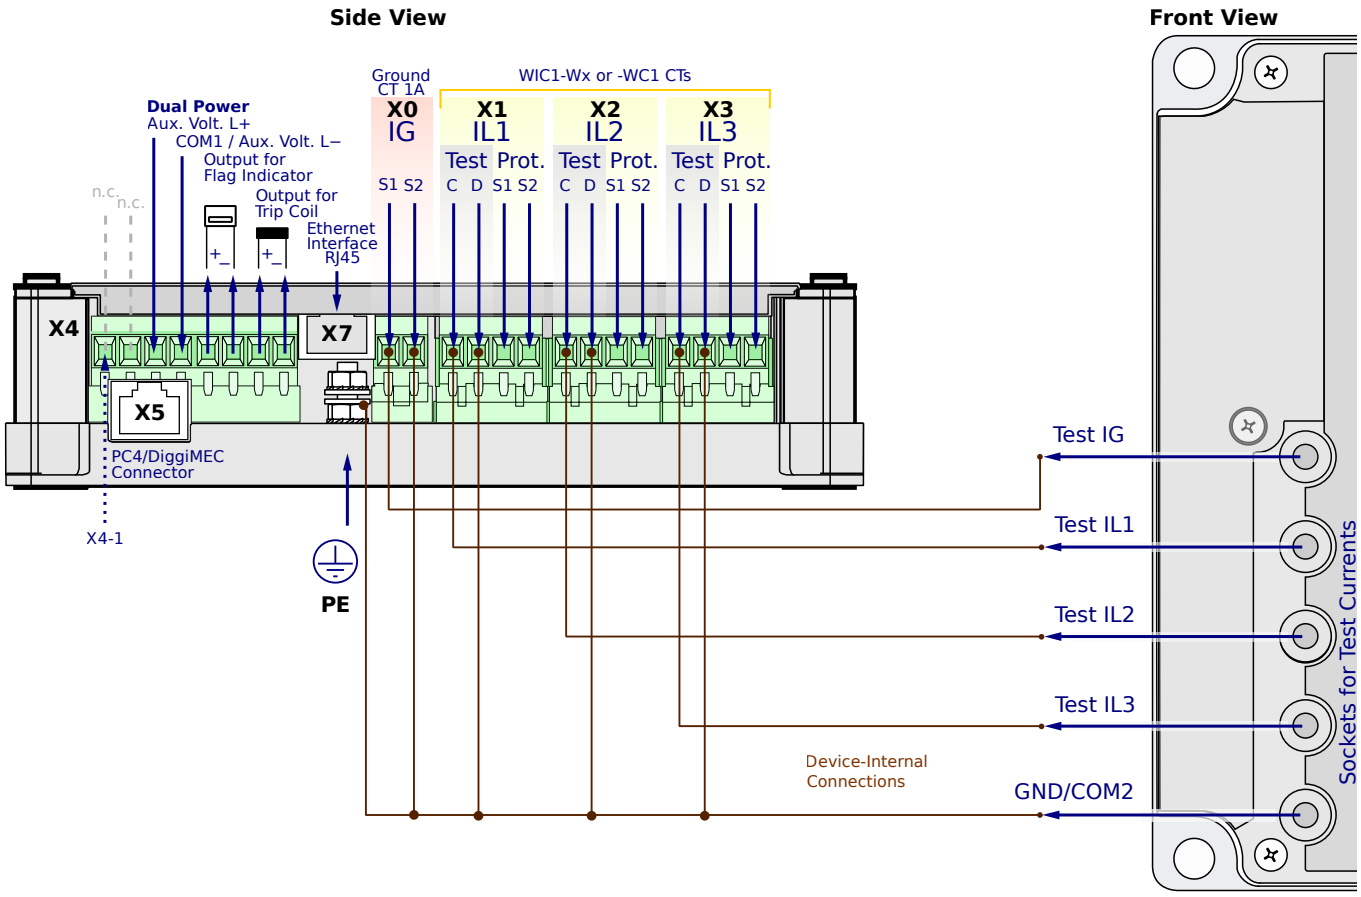


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1SL0

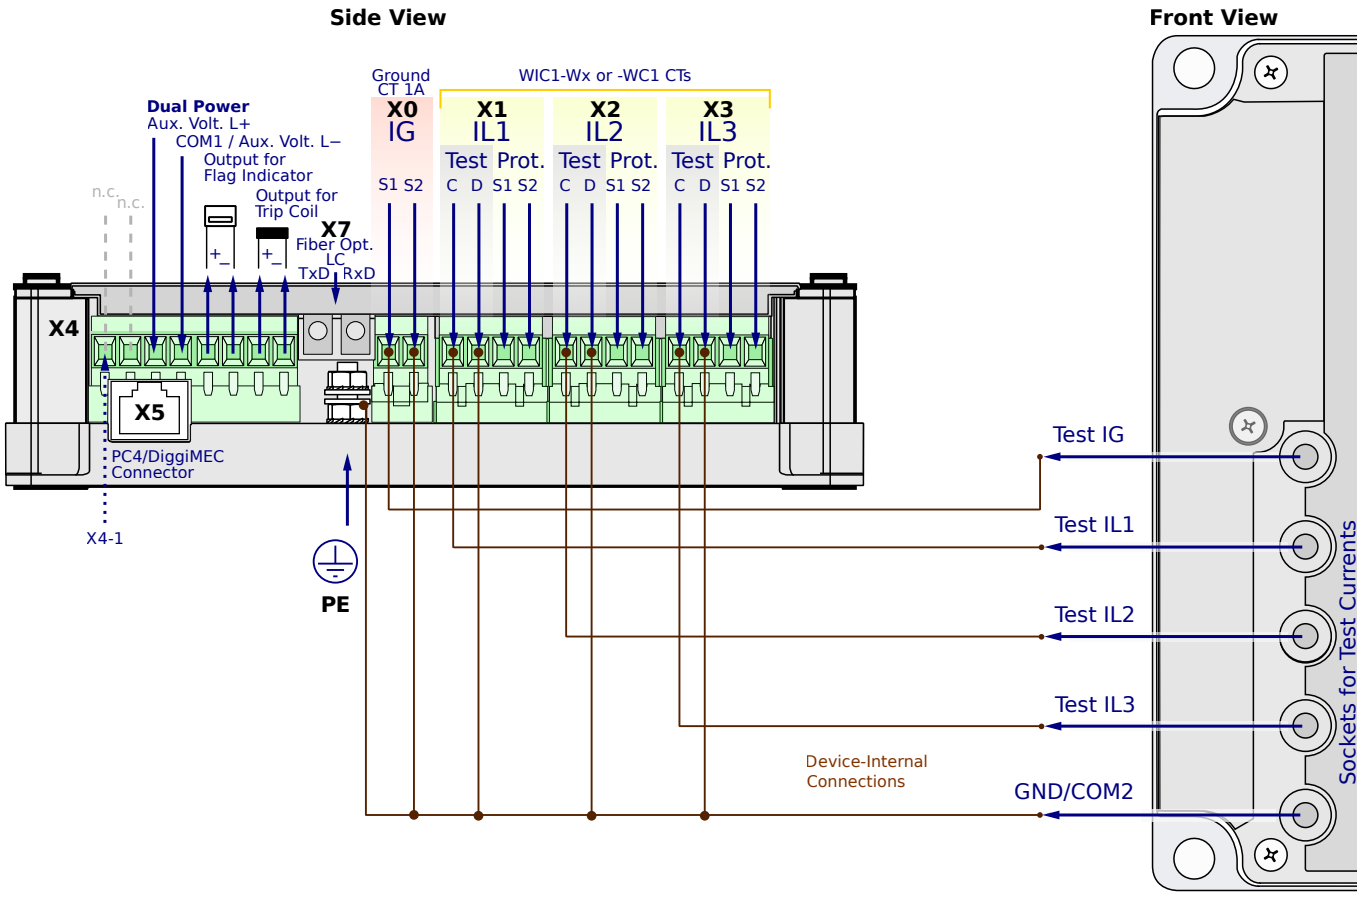


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1SLH

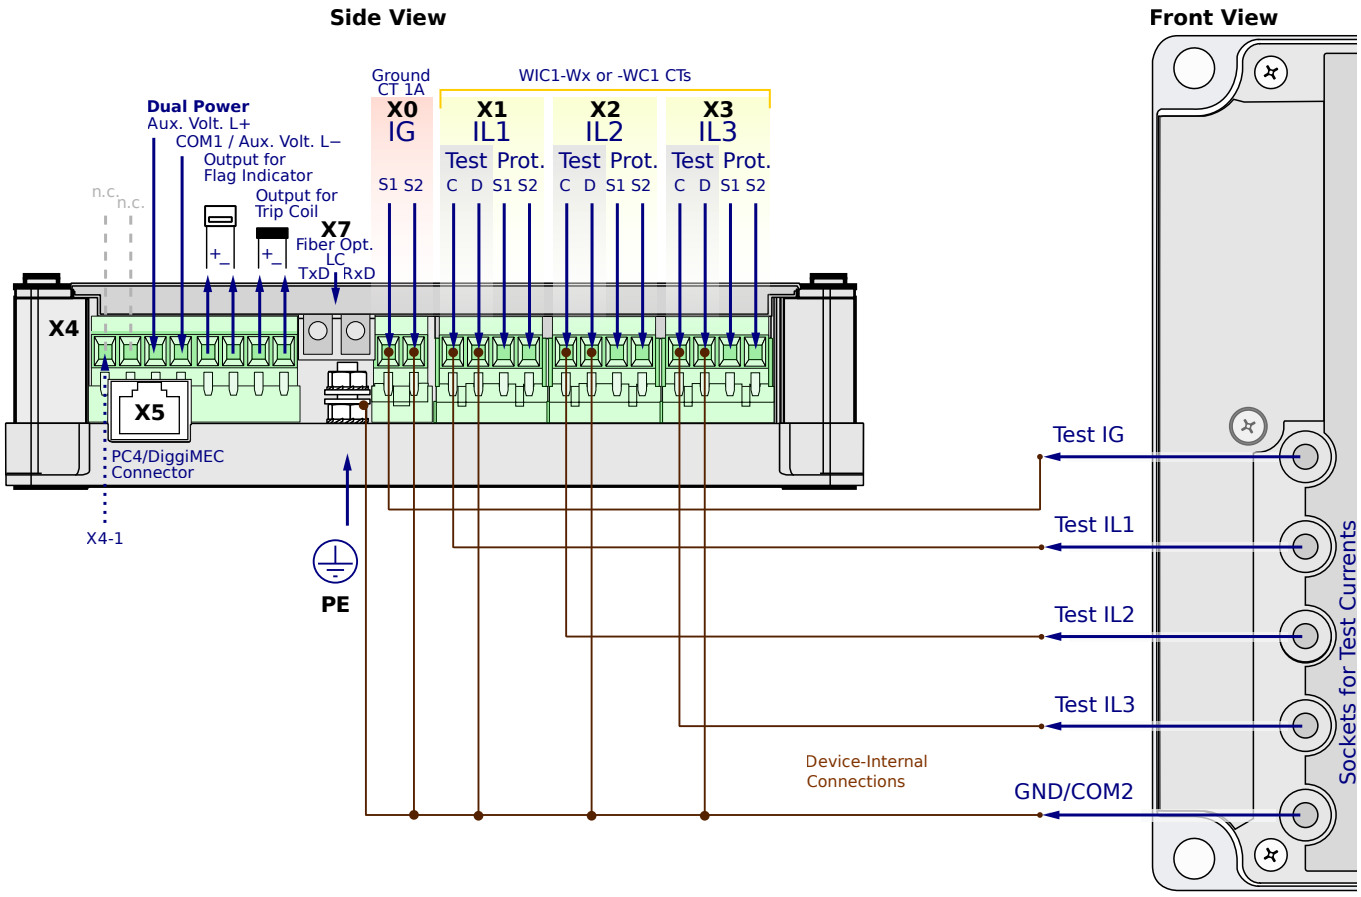


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1AA0

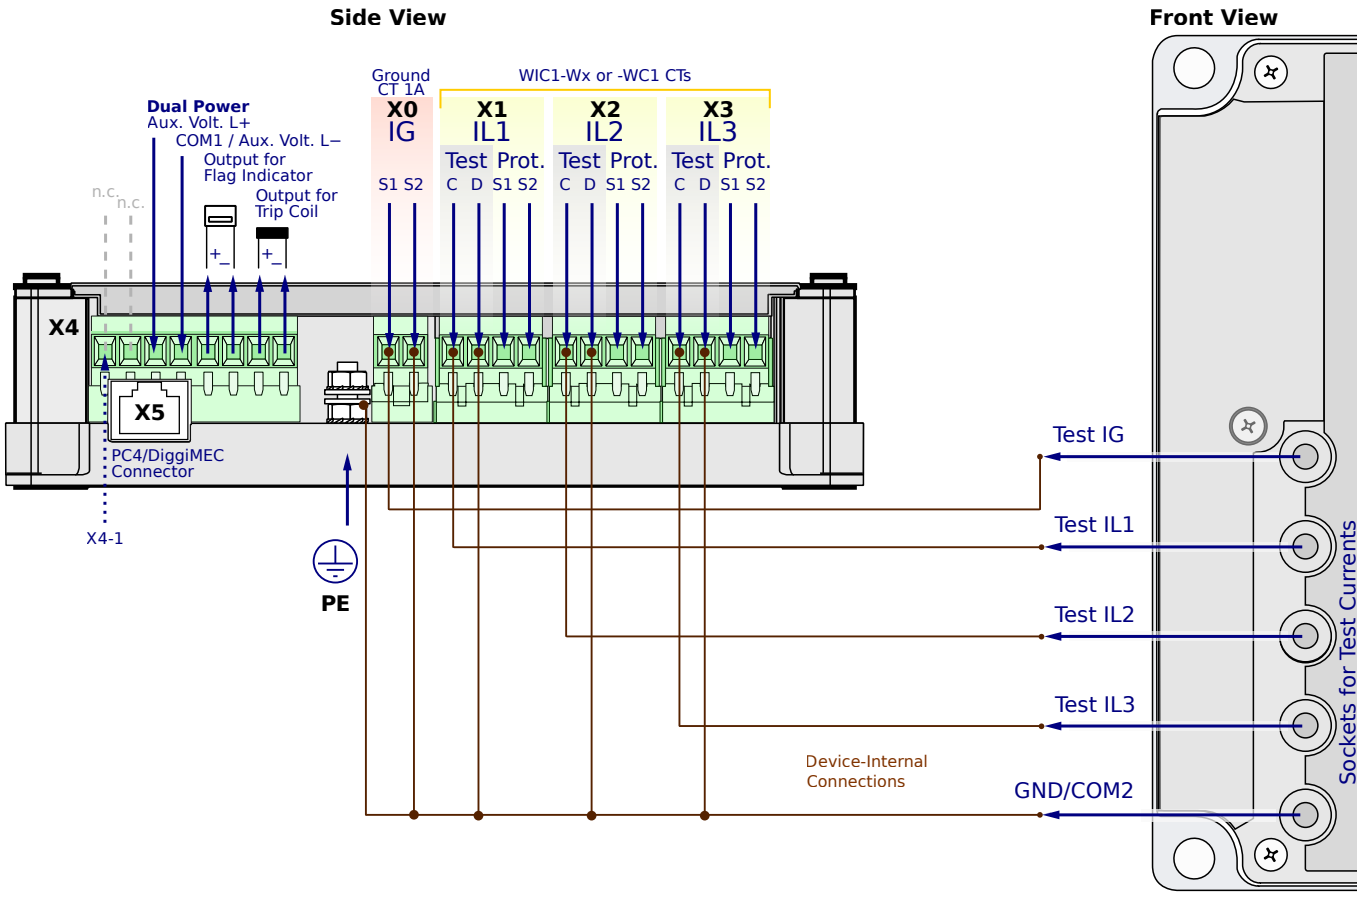


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1AAH

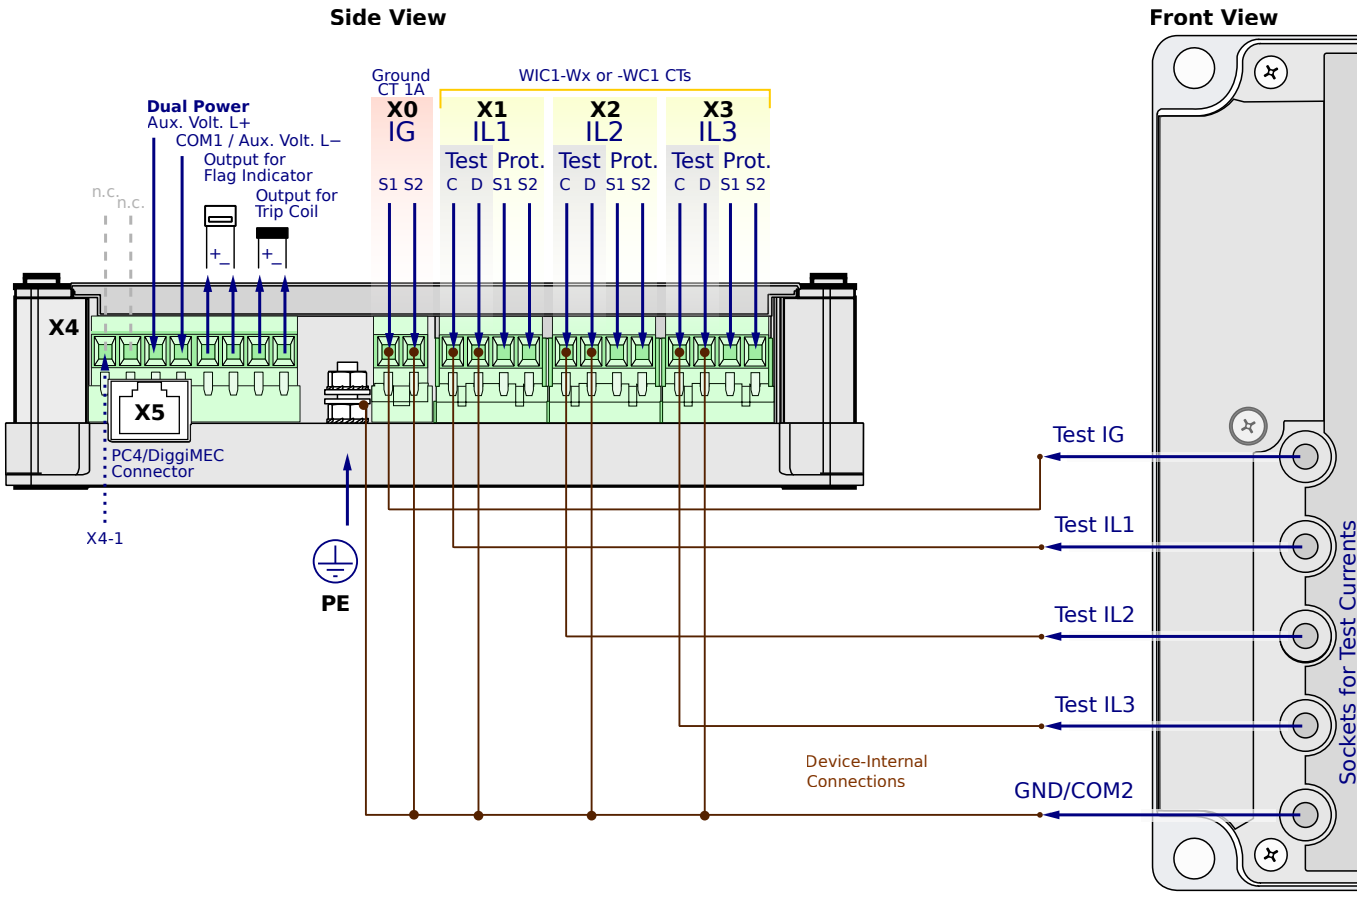


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1AB0

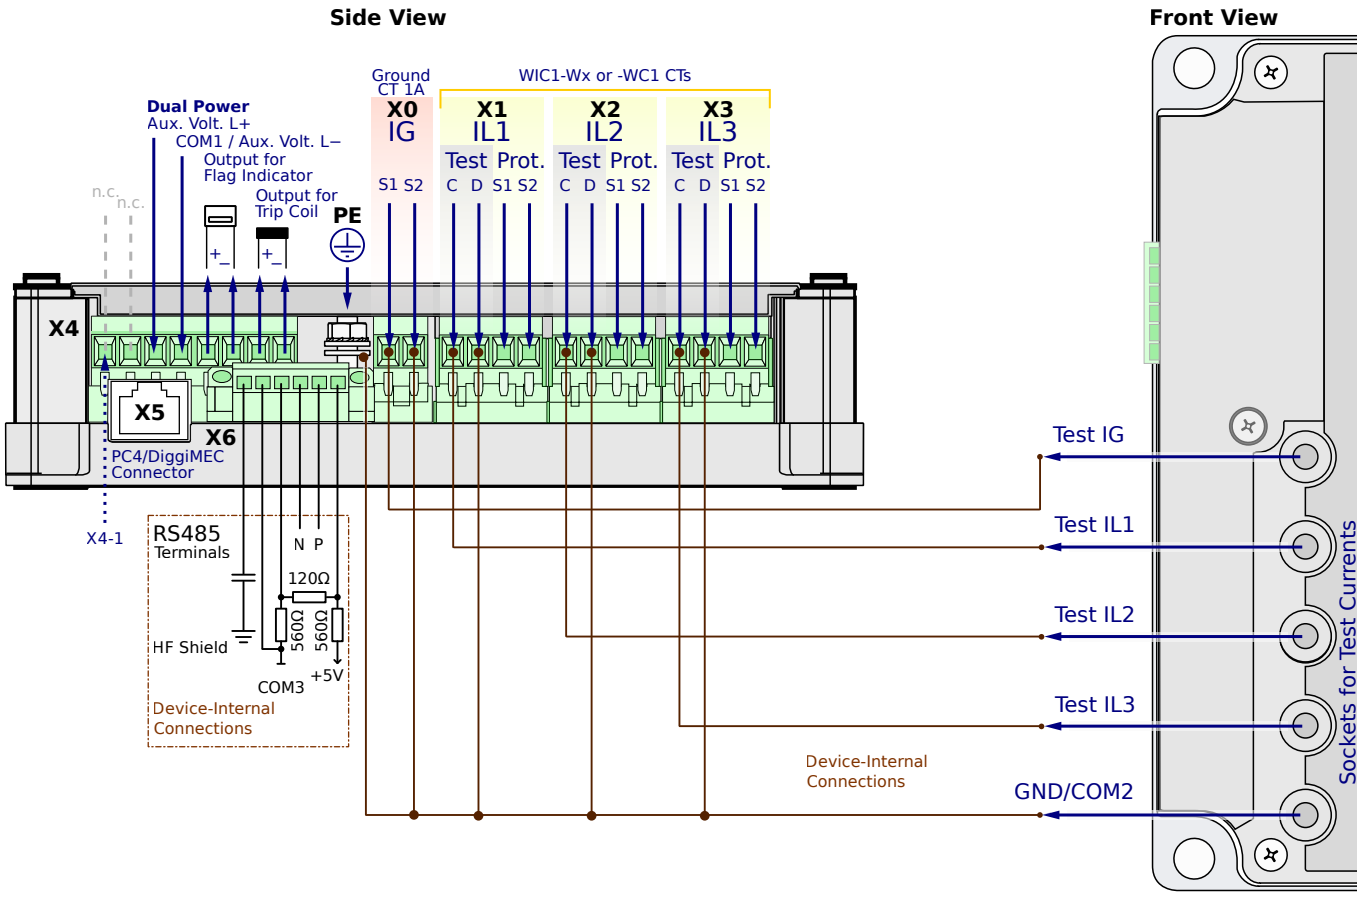


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1ABH

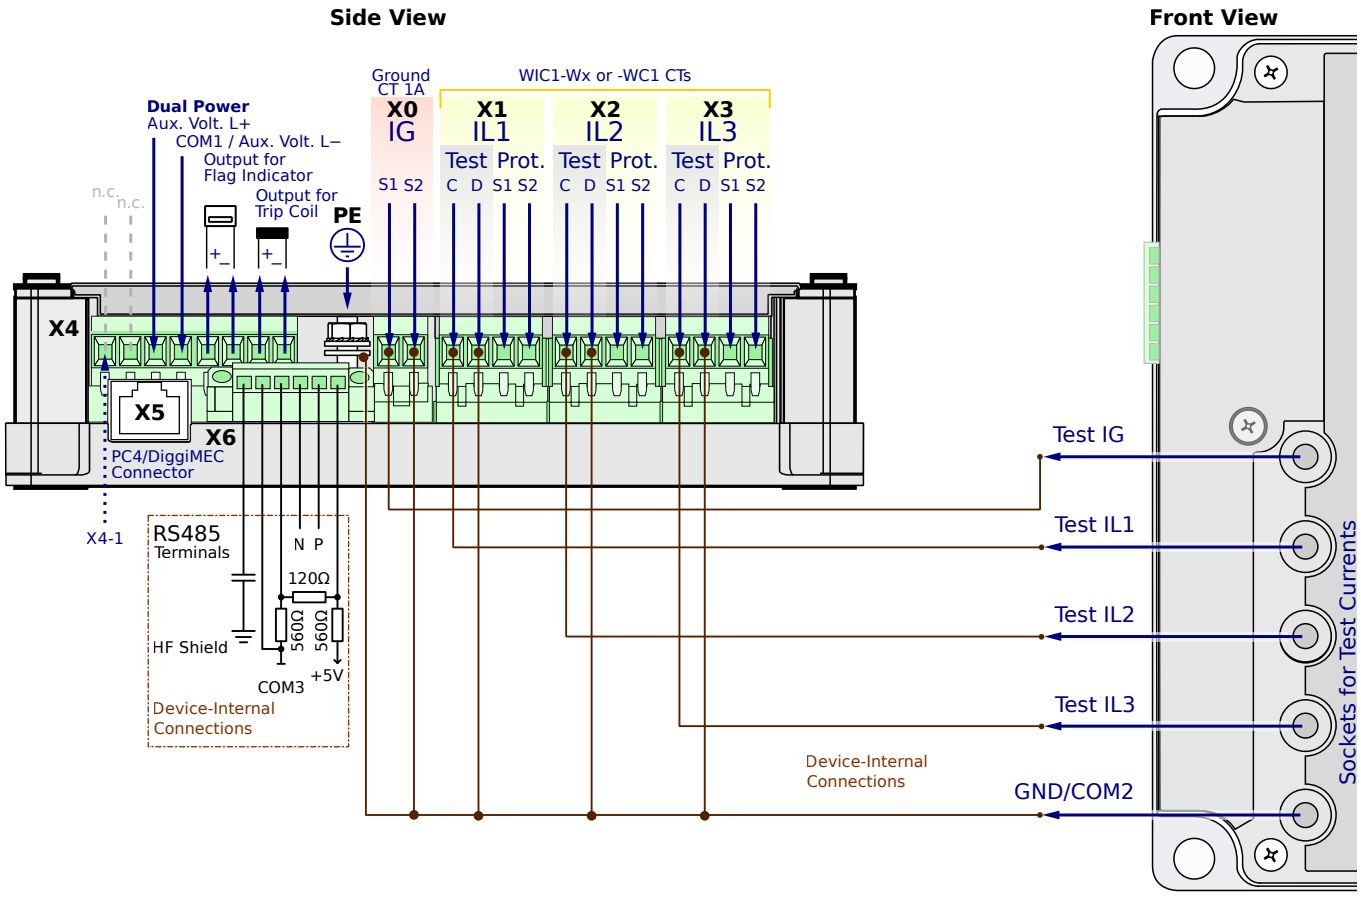


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1AC0

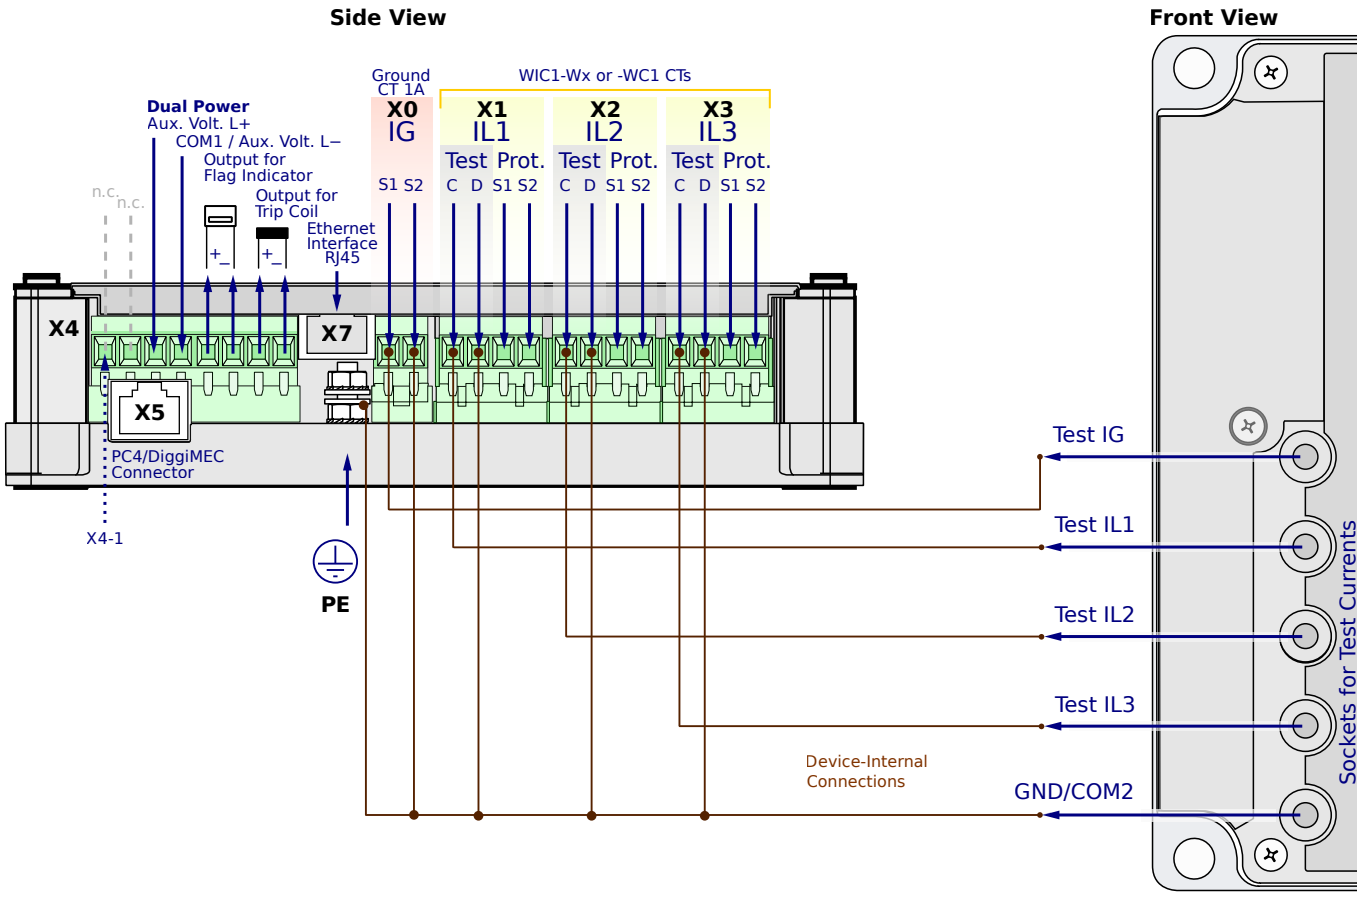


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1ACH

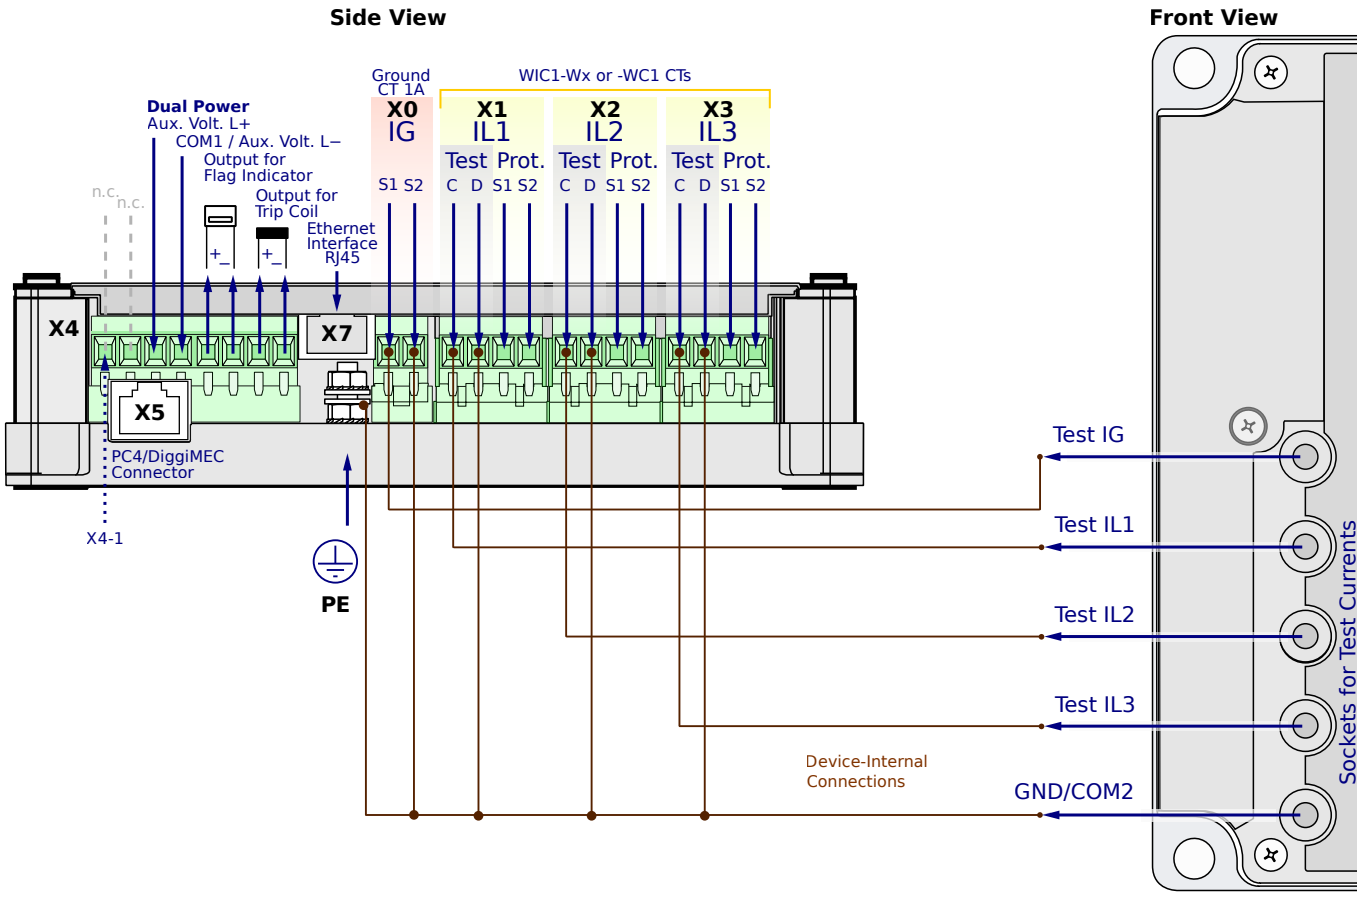


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1AL0

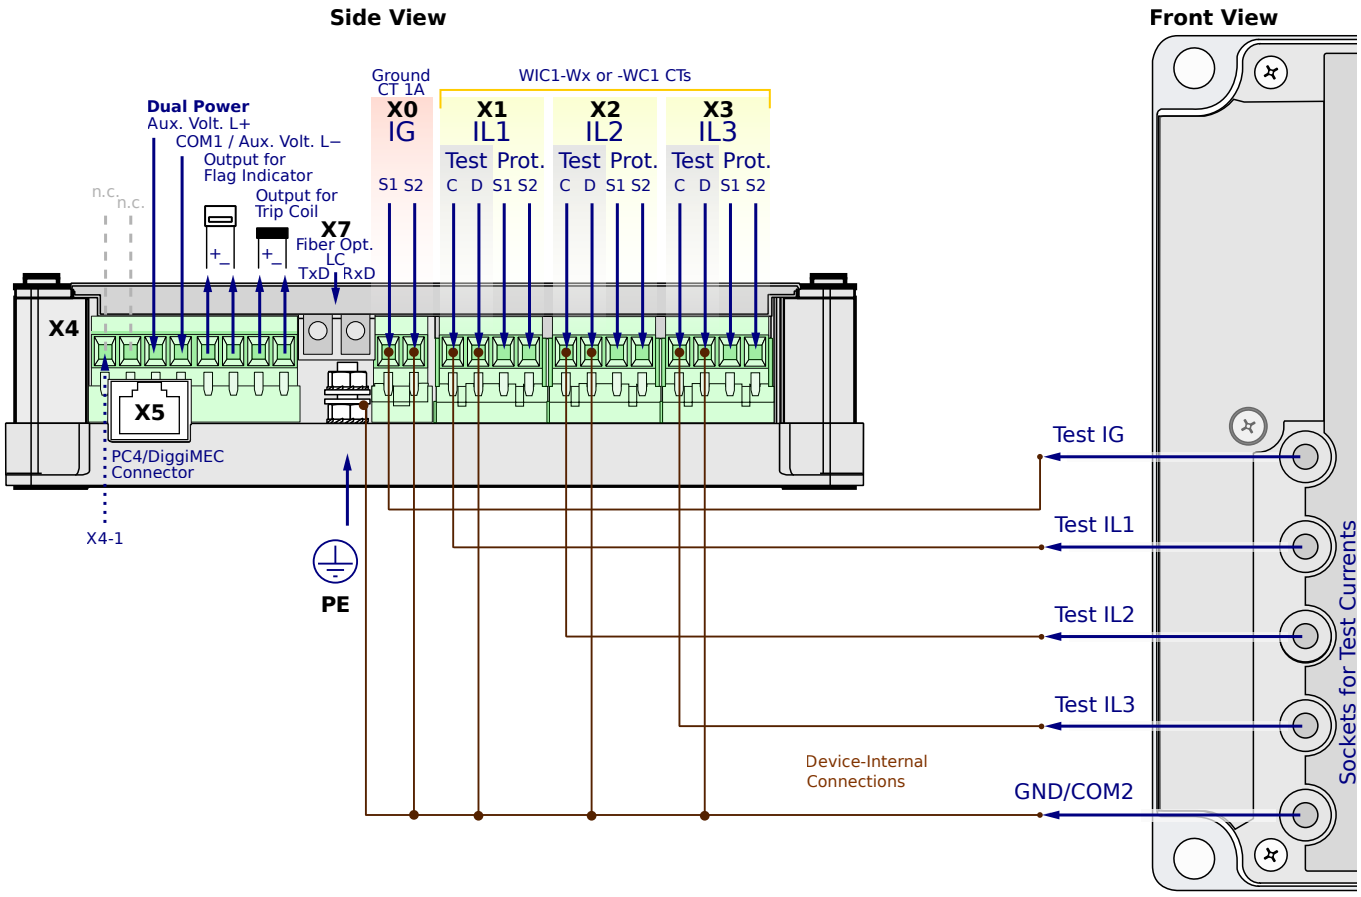


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1ALH

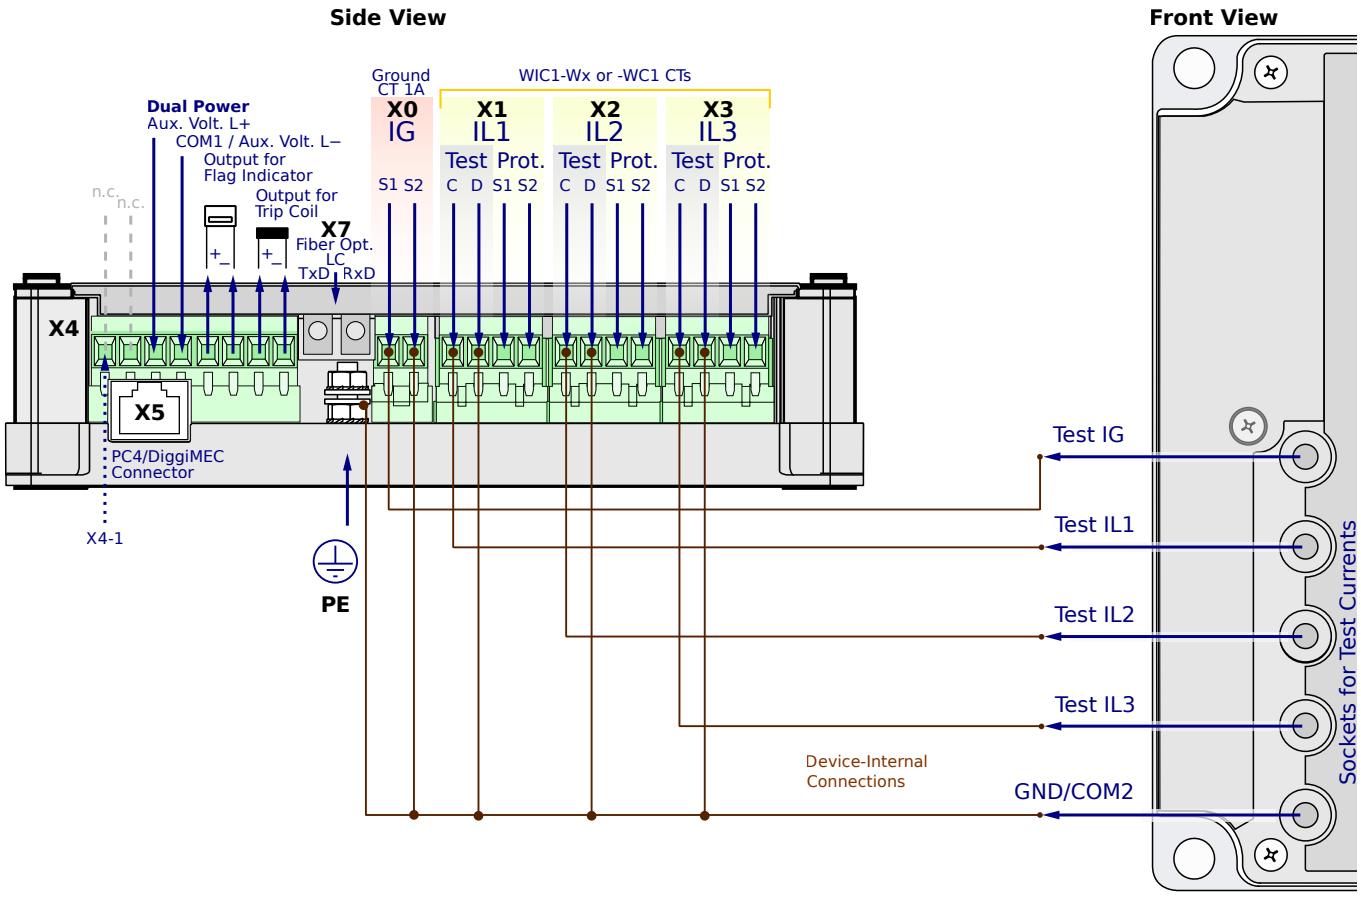


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1PA0

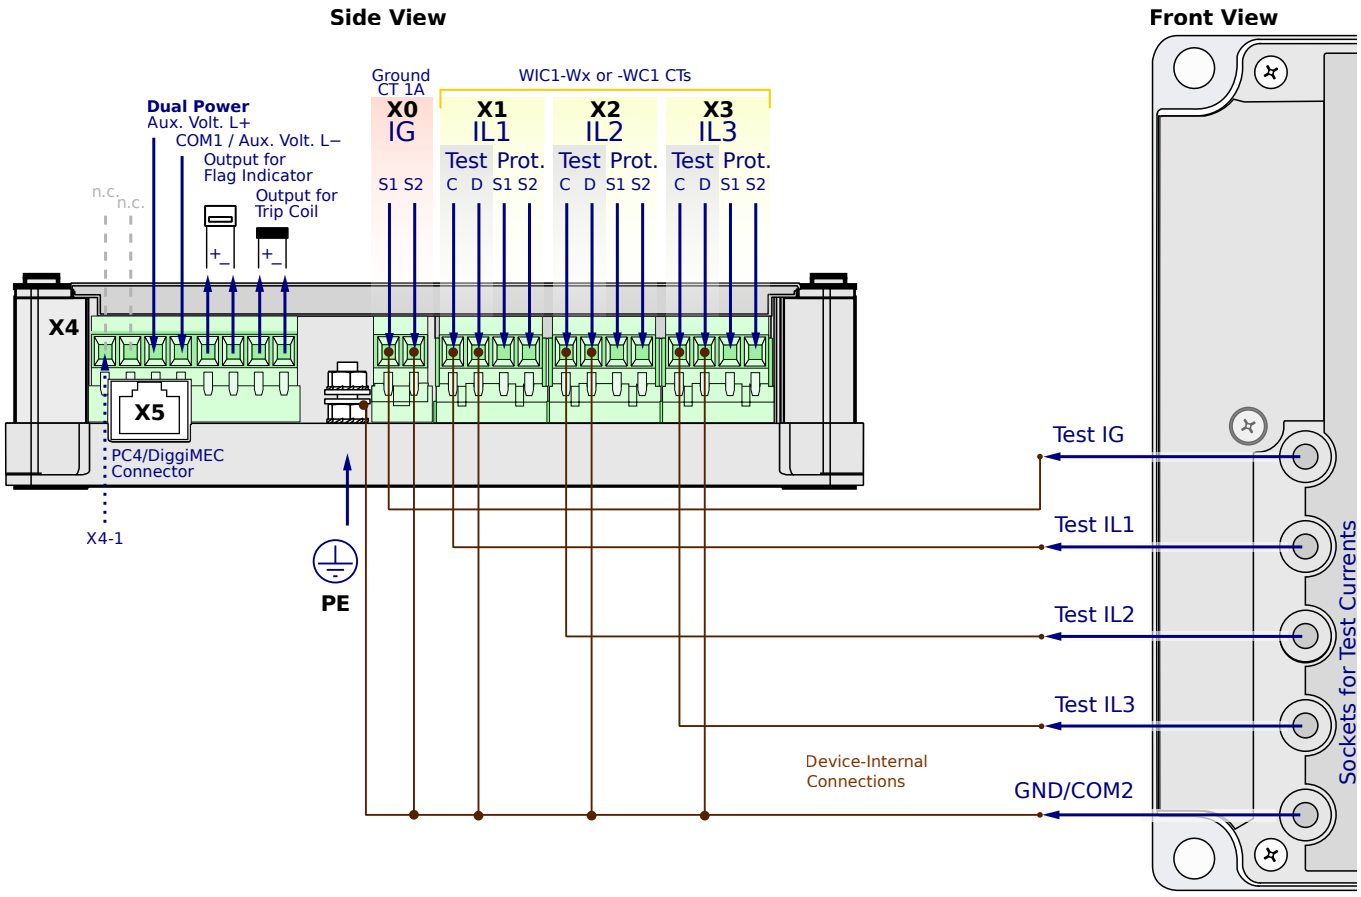


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1PAH

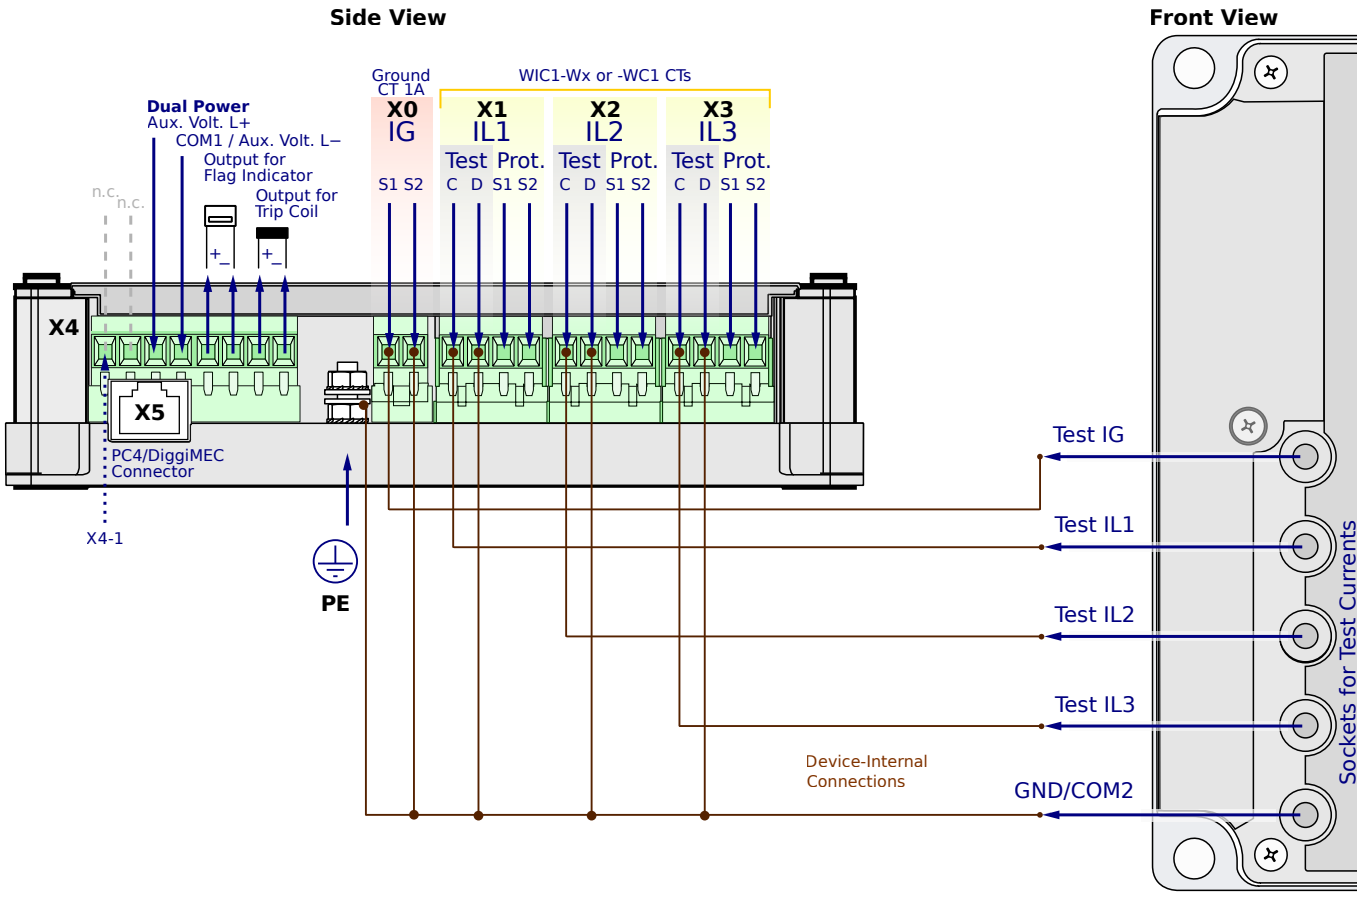


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM1PB0

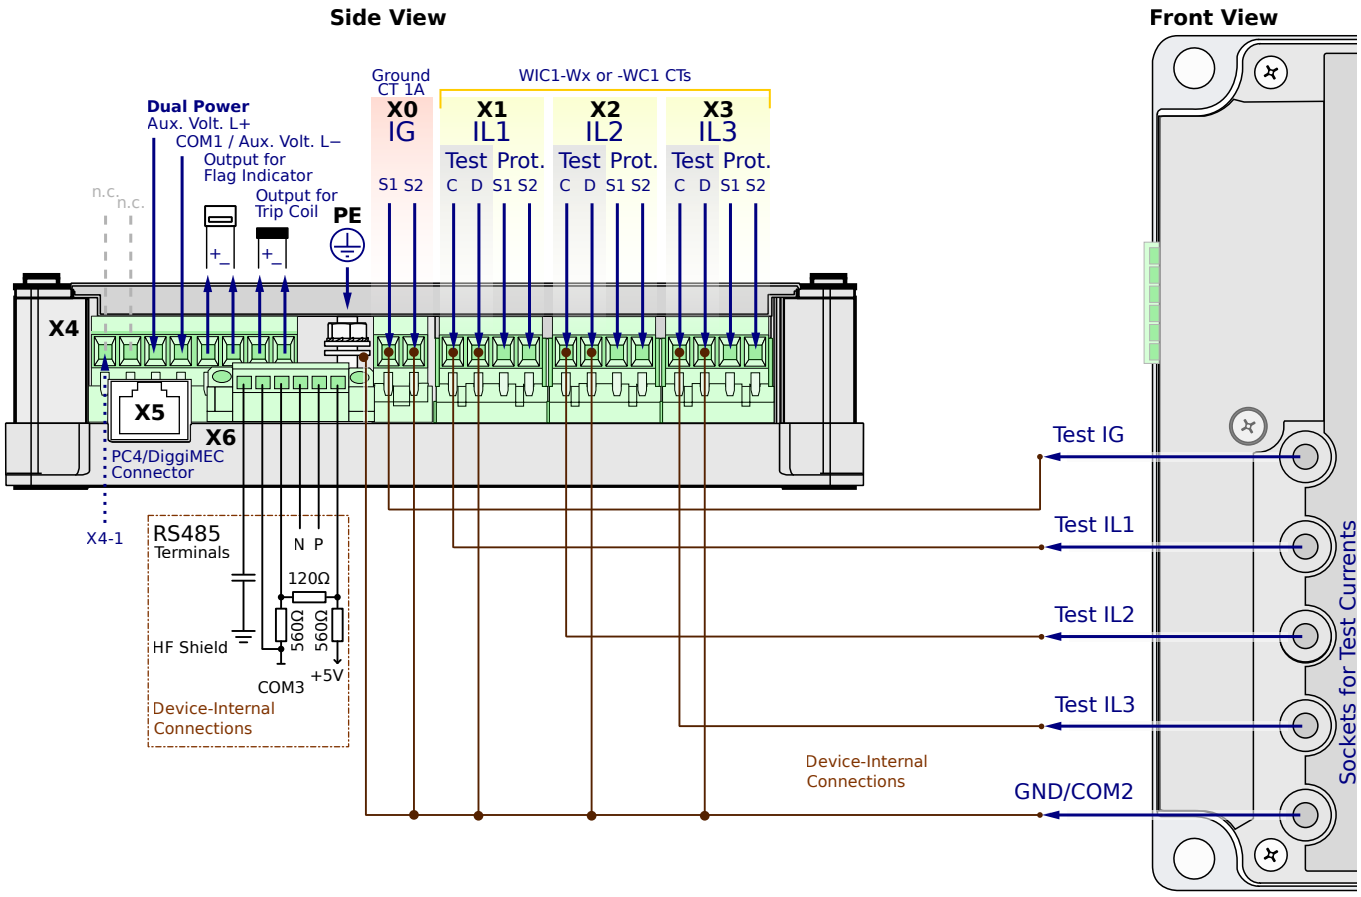


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1PBH

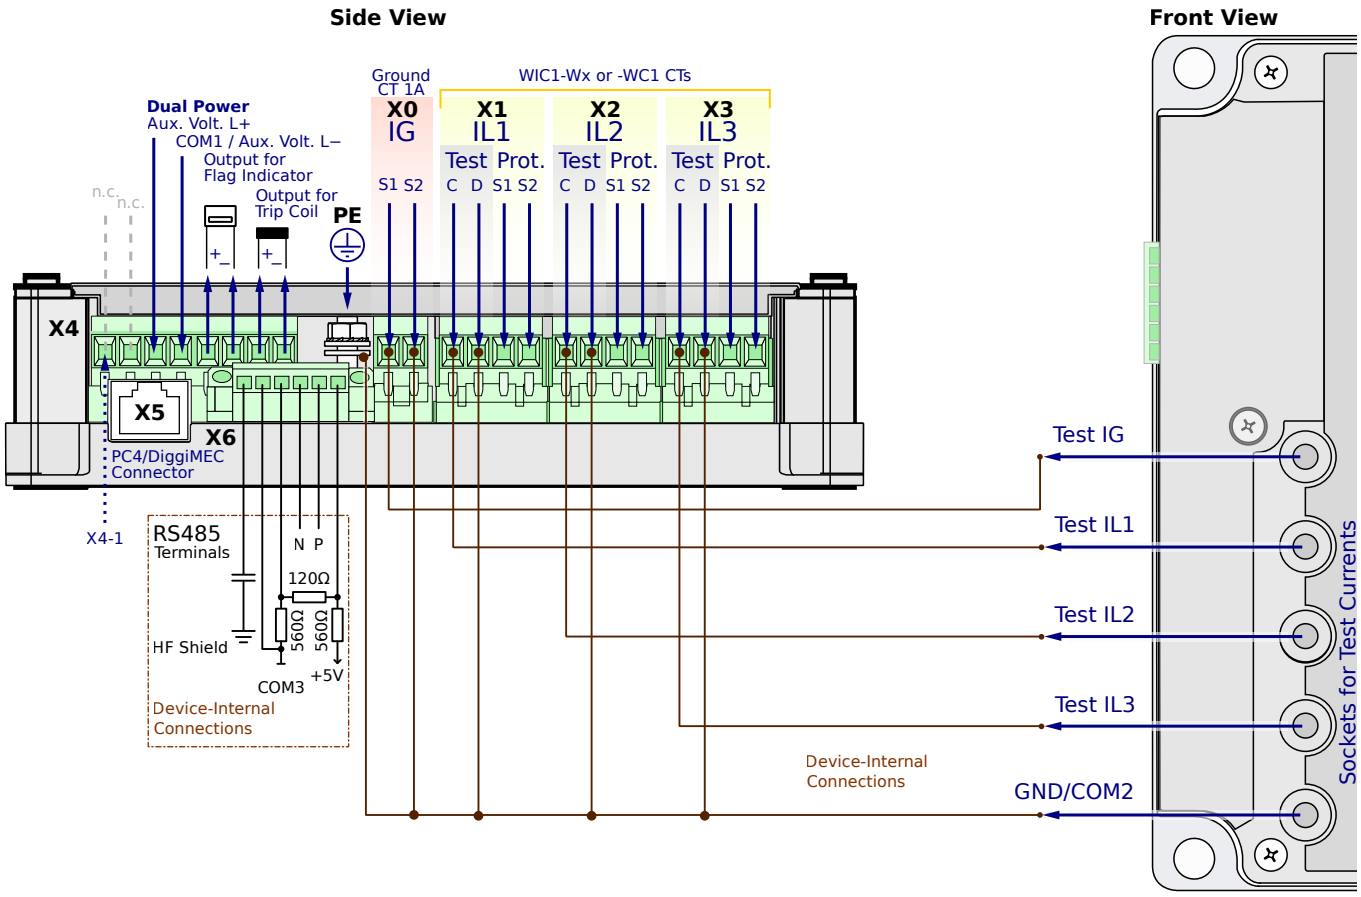


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM1PC0

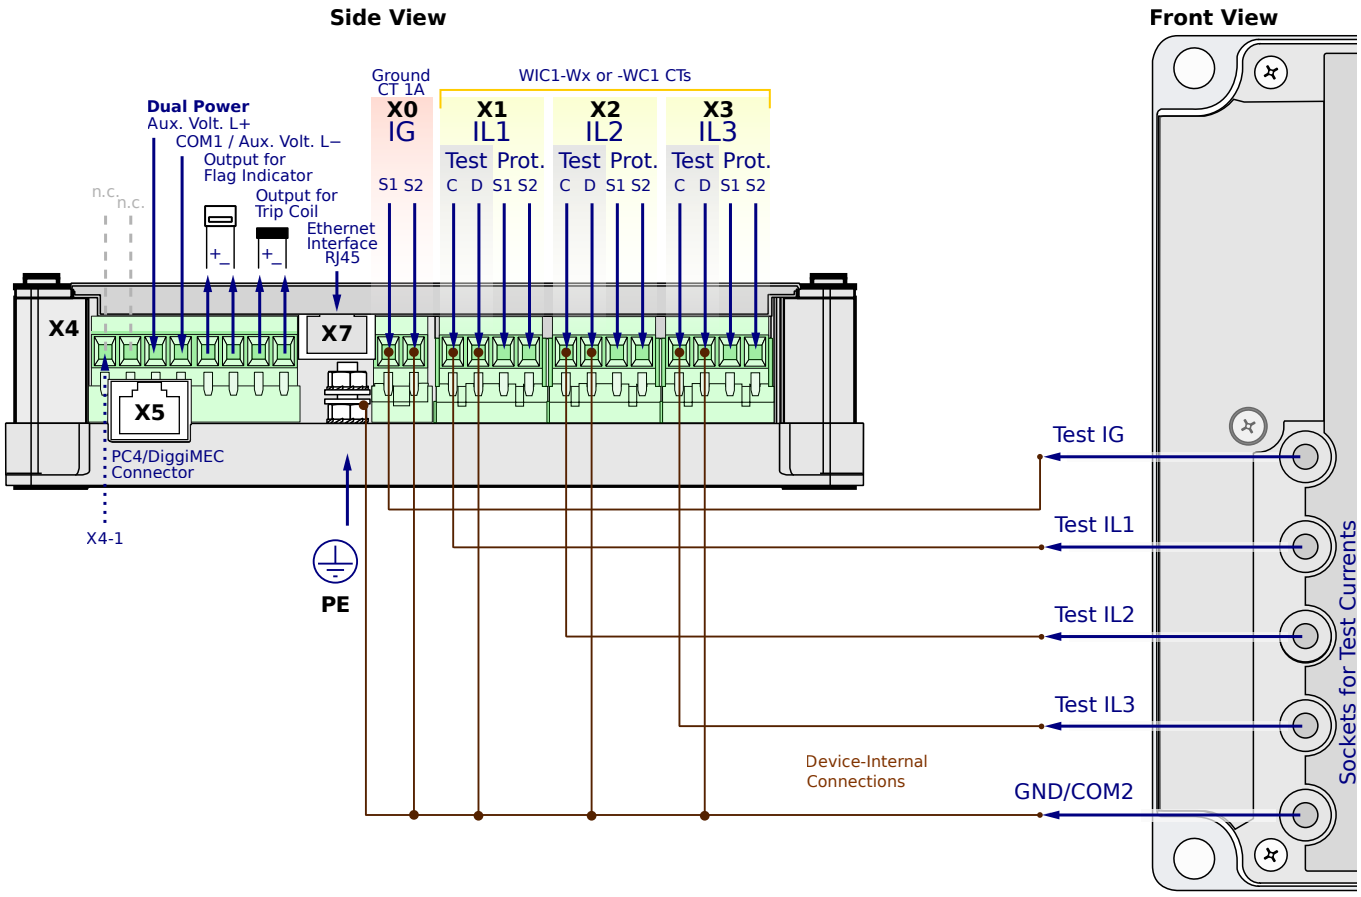


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1PCH

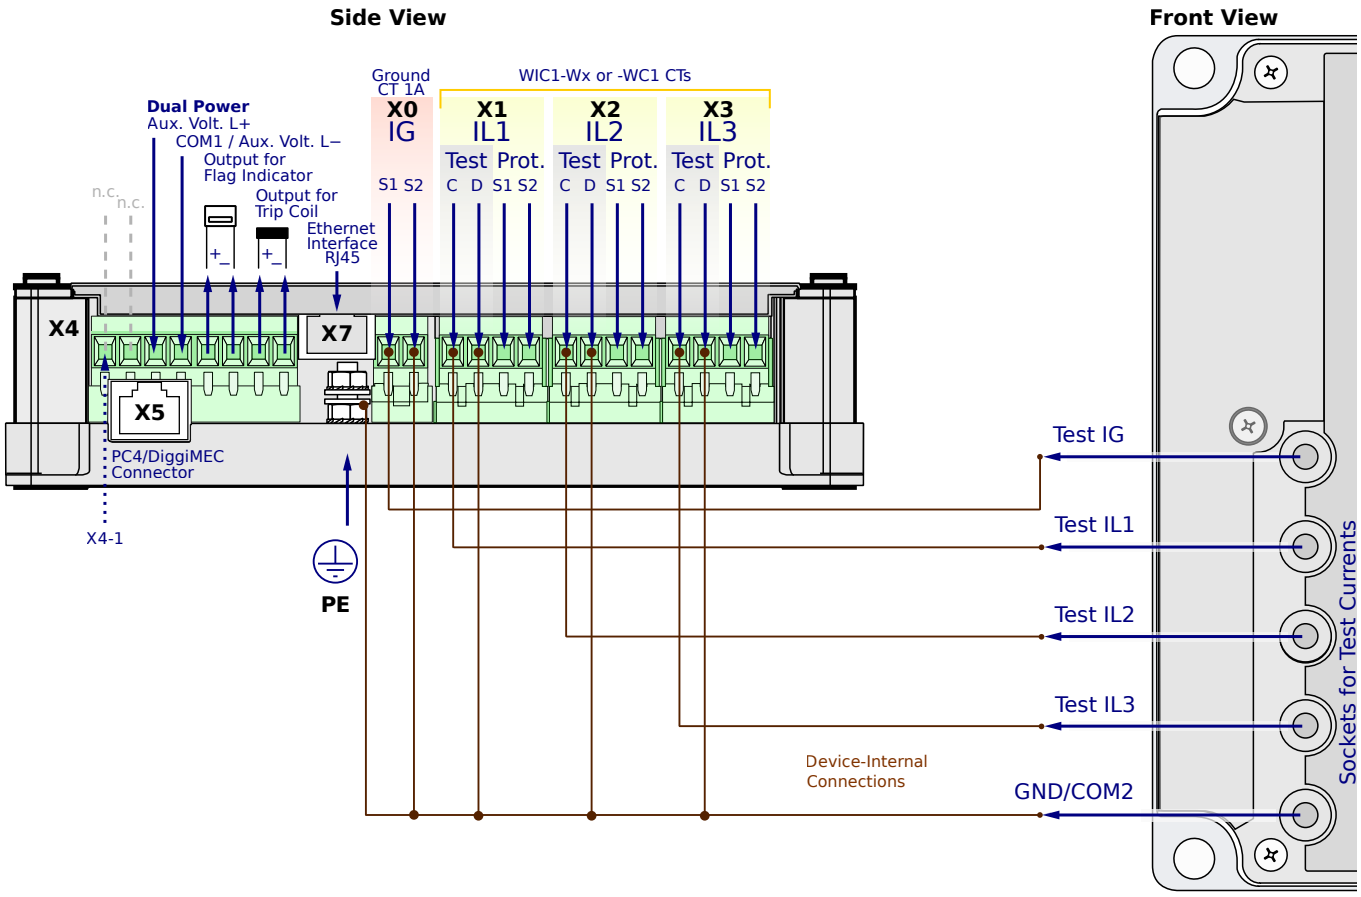


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM1PL0

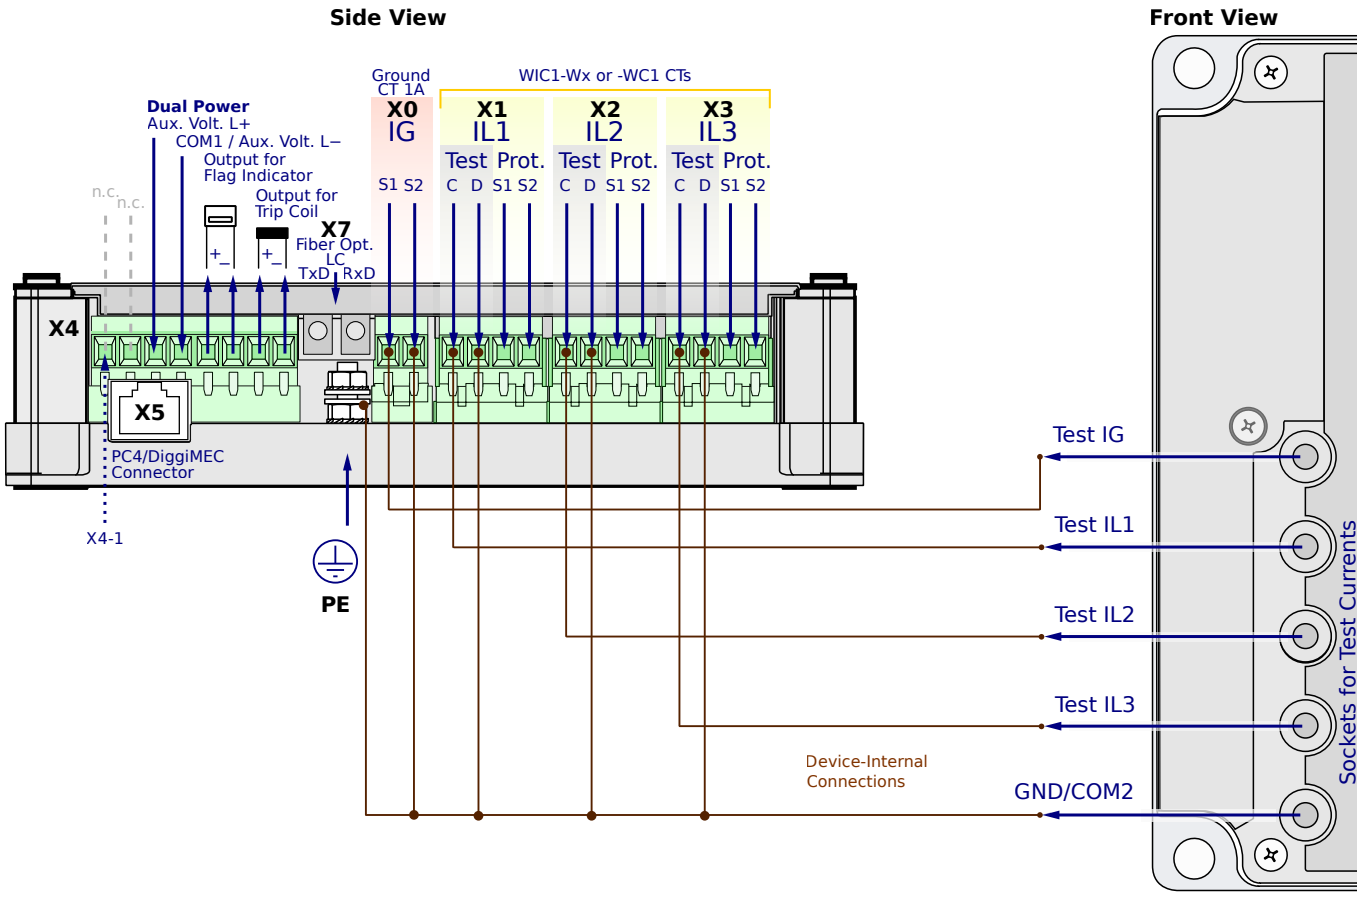


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM1PLH

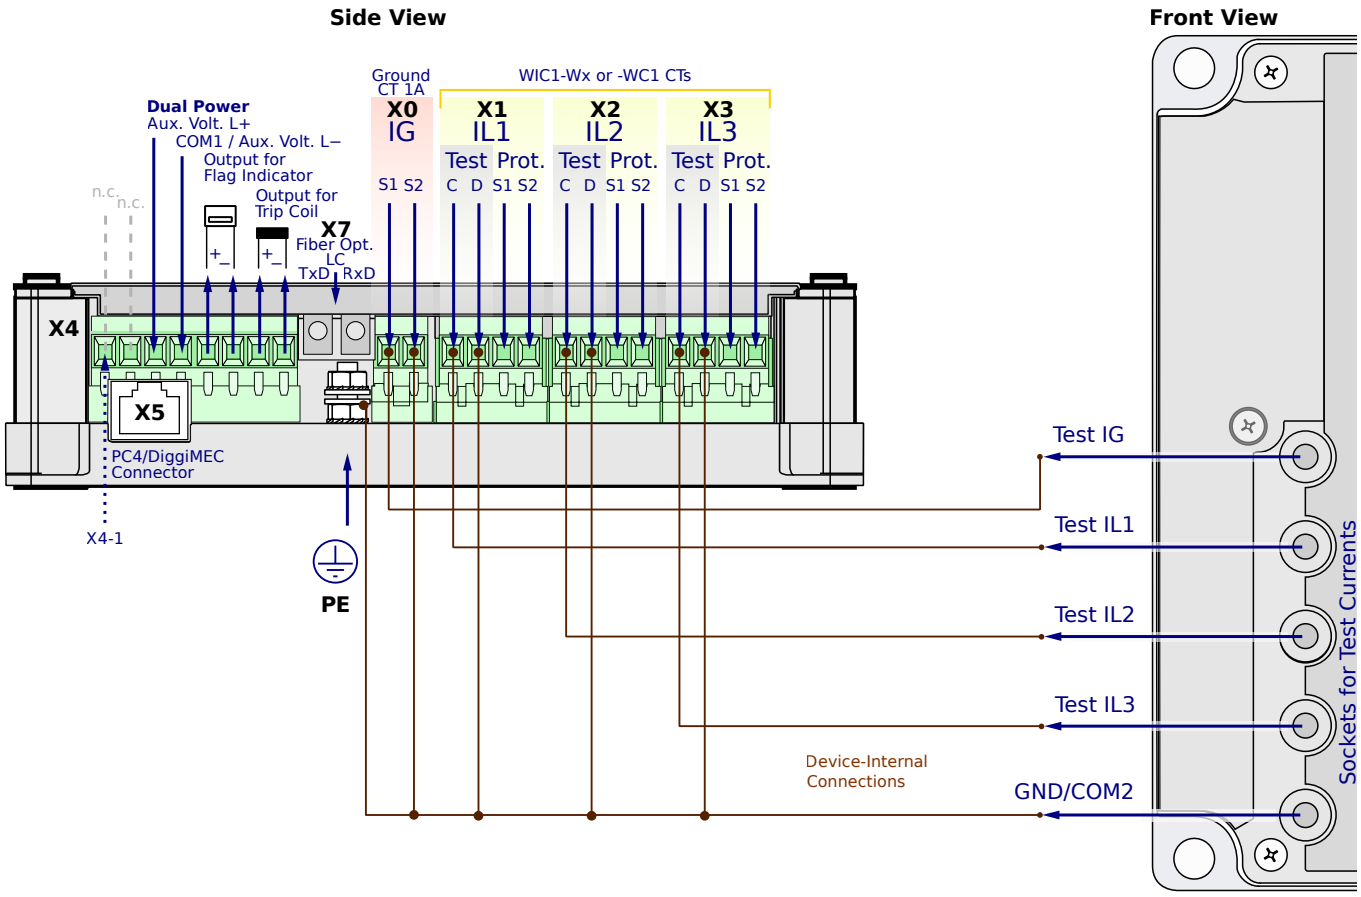


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2SA0

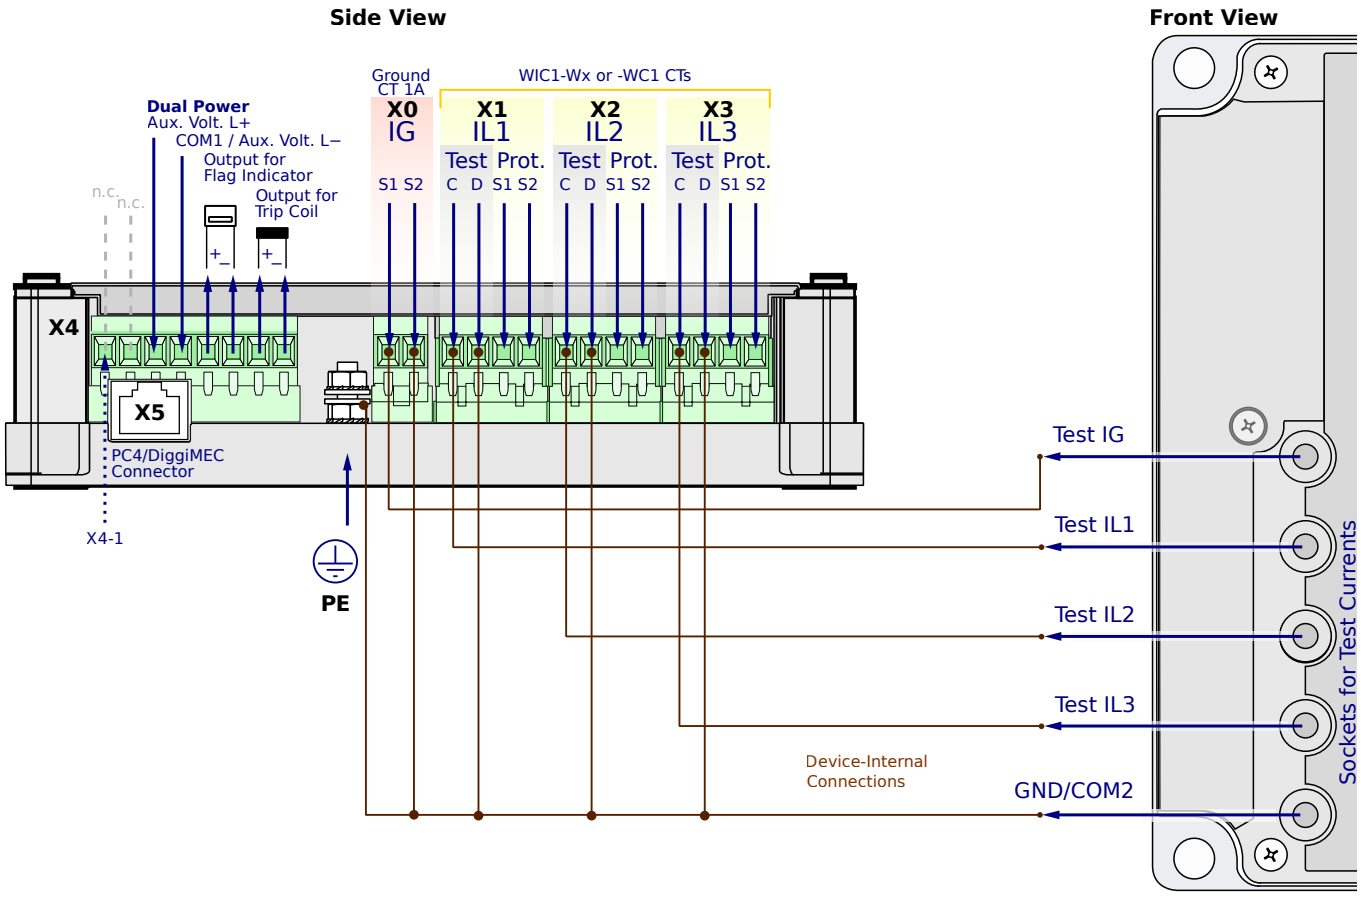


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2SAH

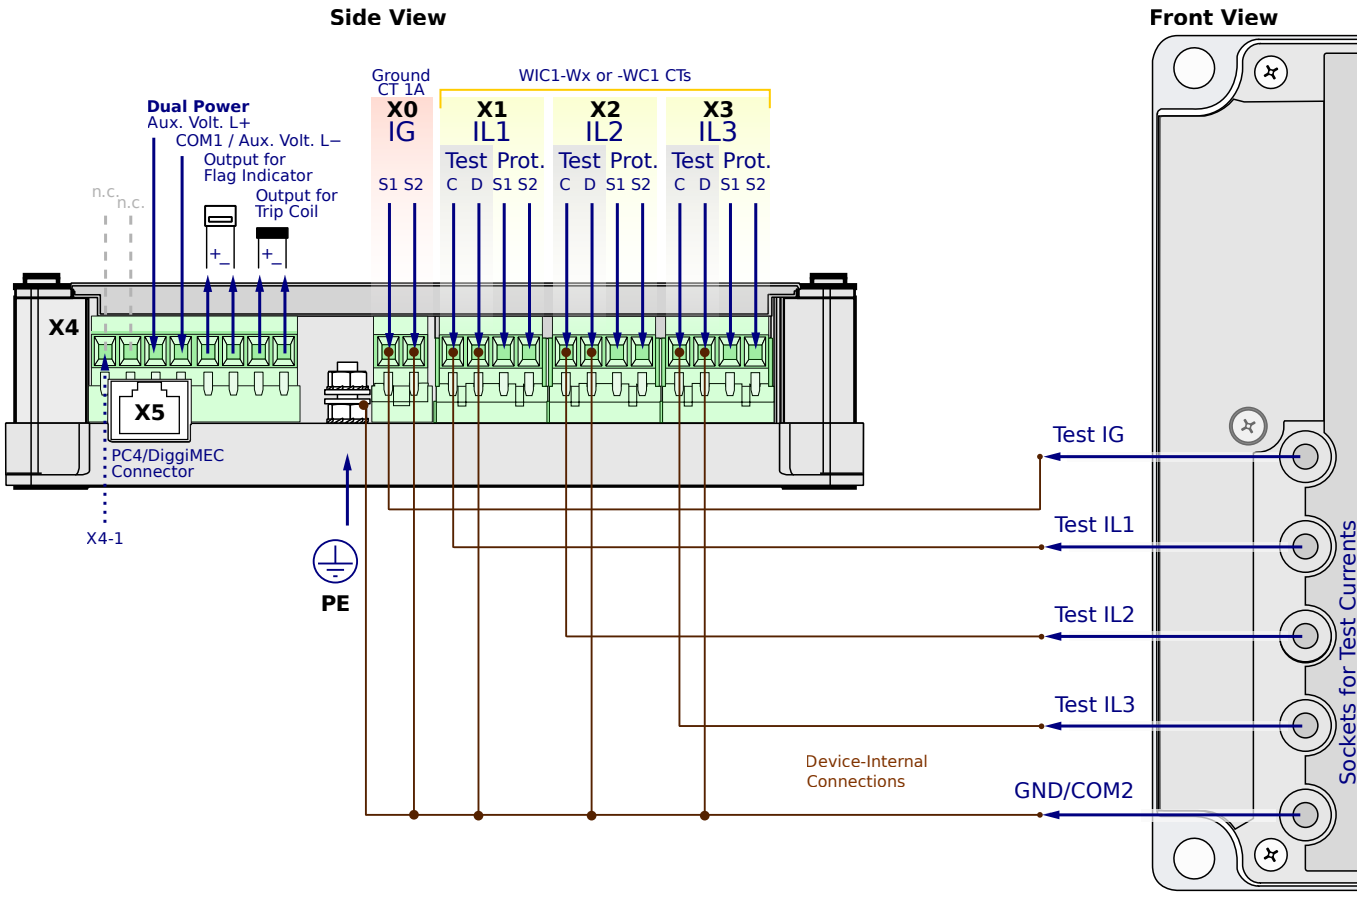


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2SB0

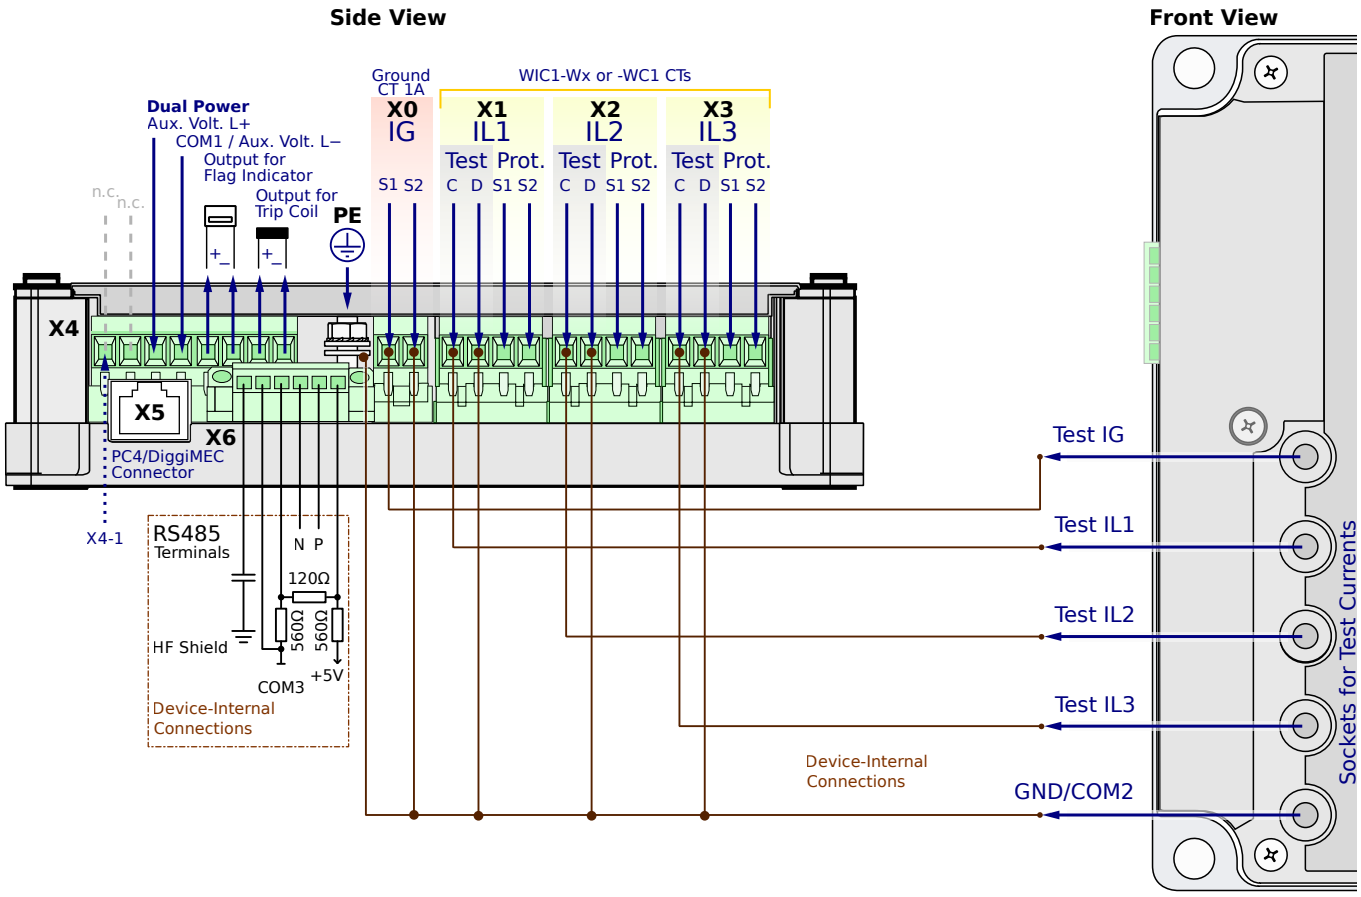


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2SBH

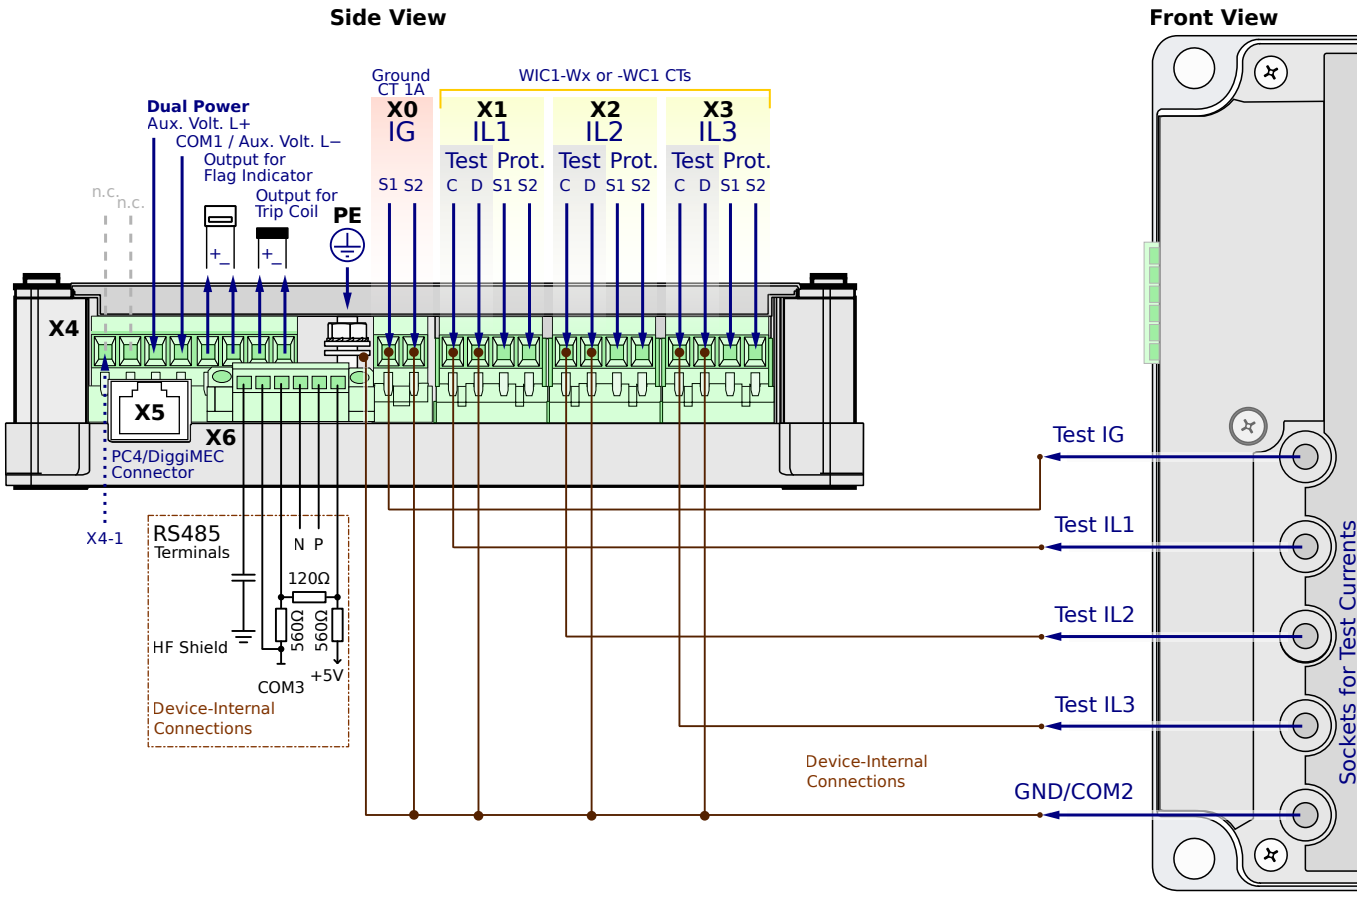


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2SC0

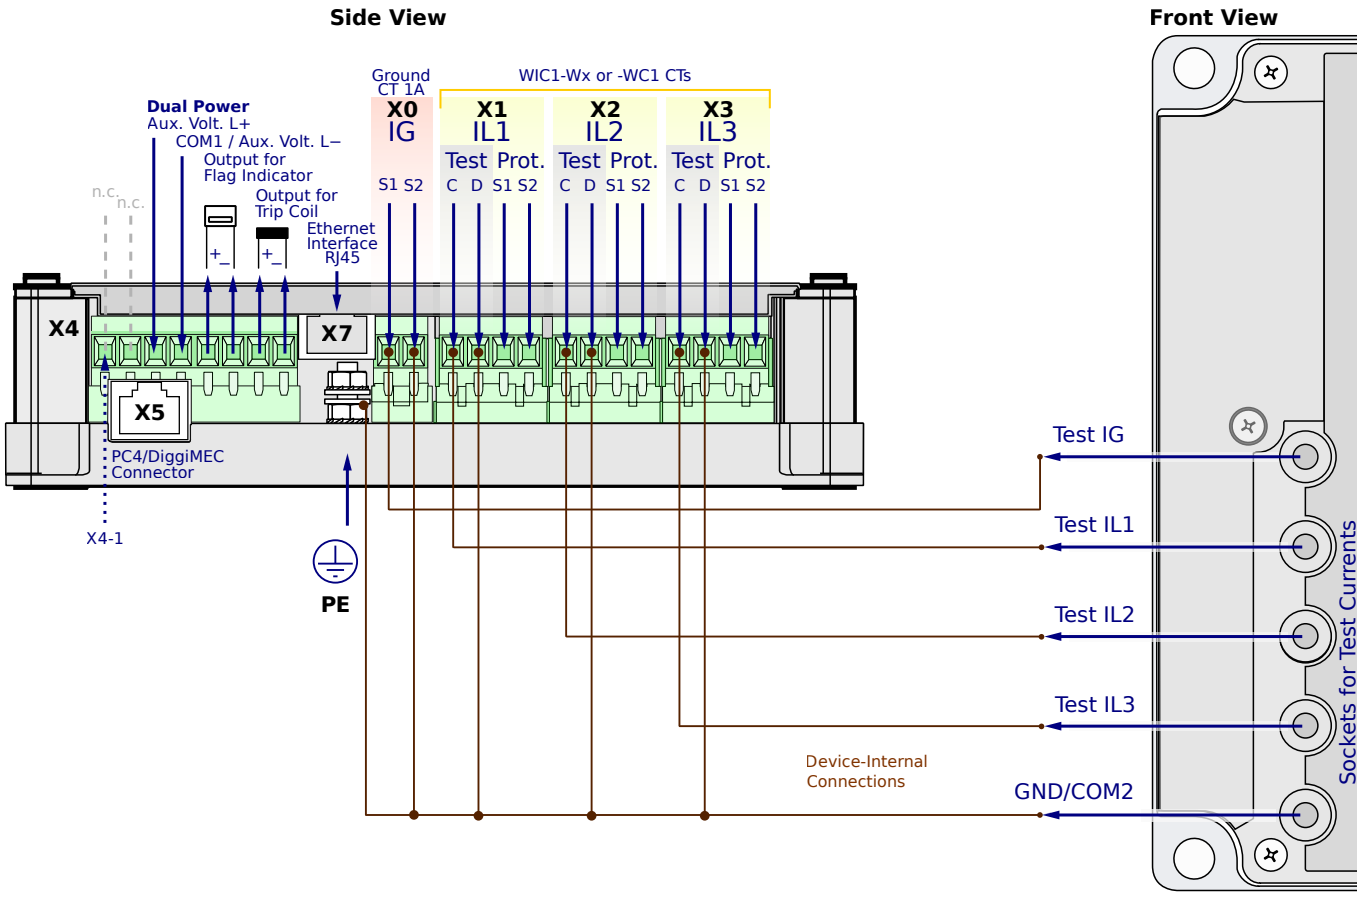


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2SCH

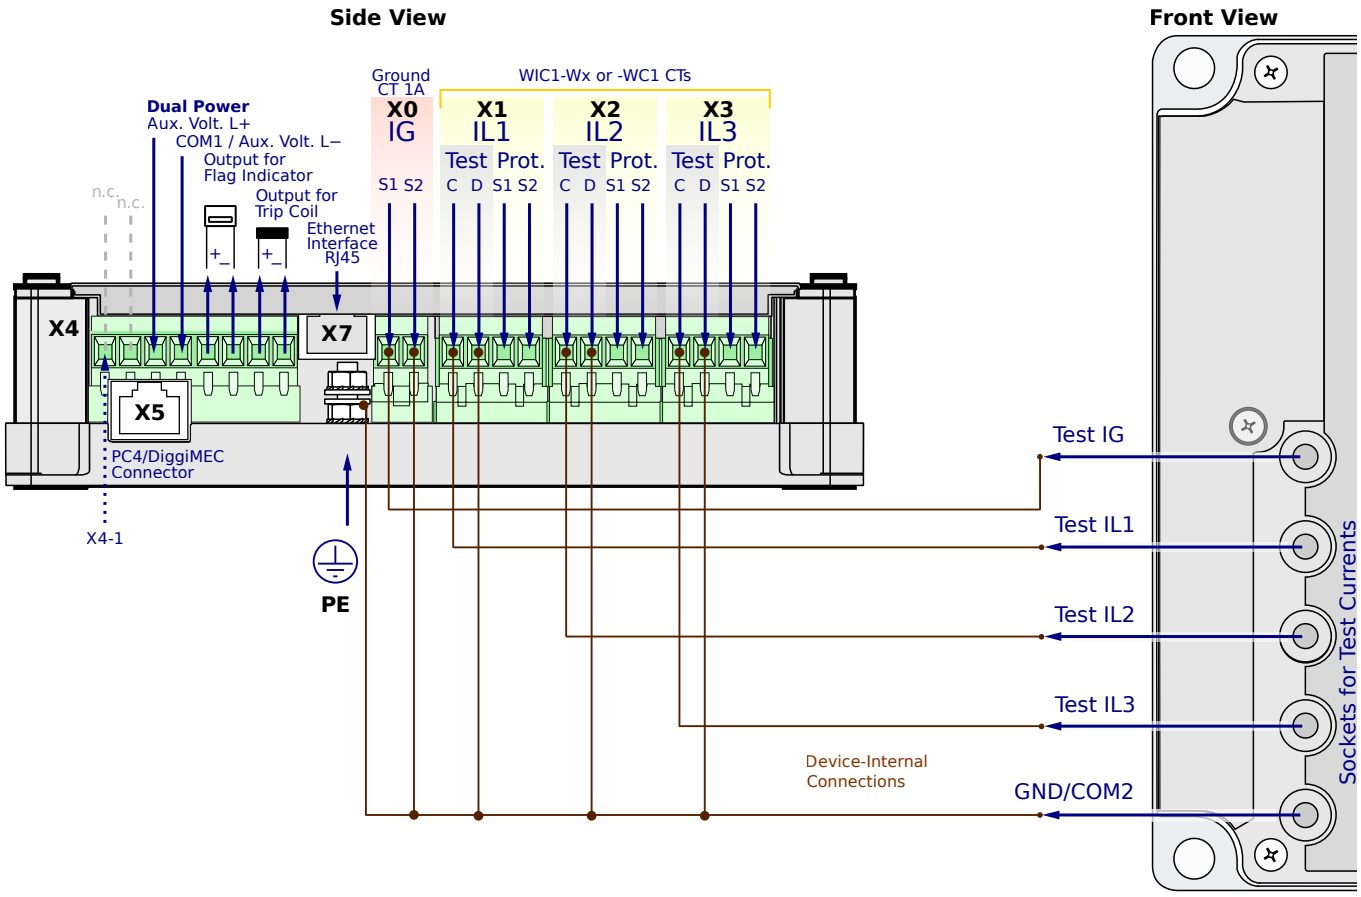


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2SL0

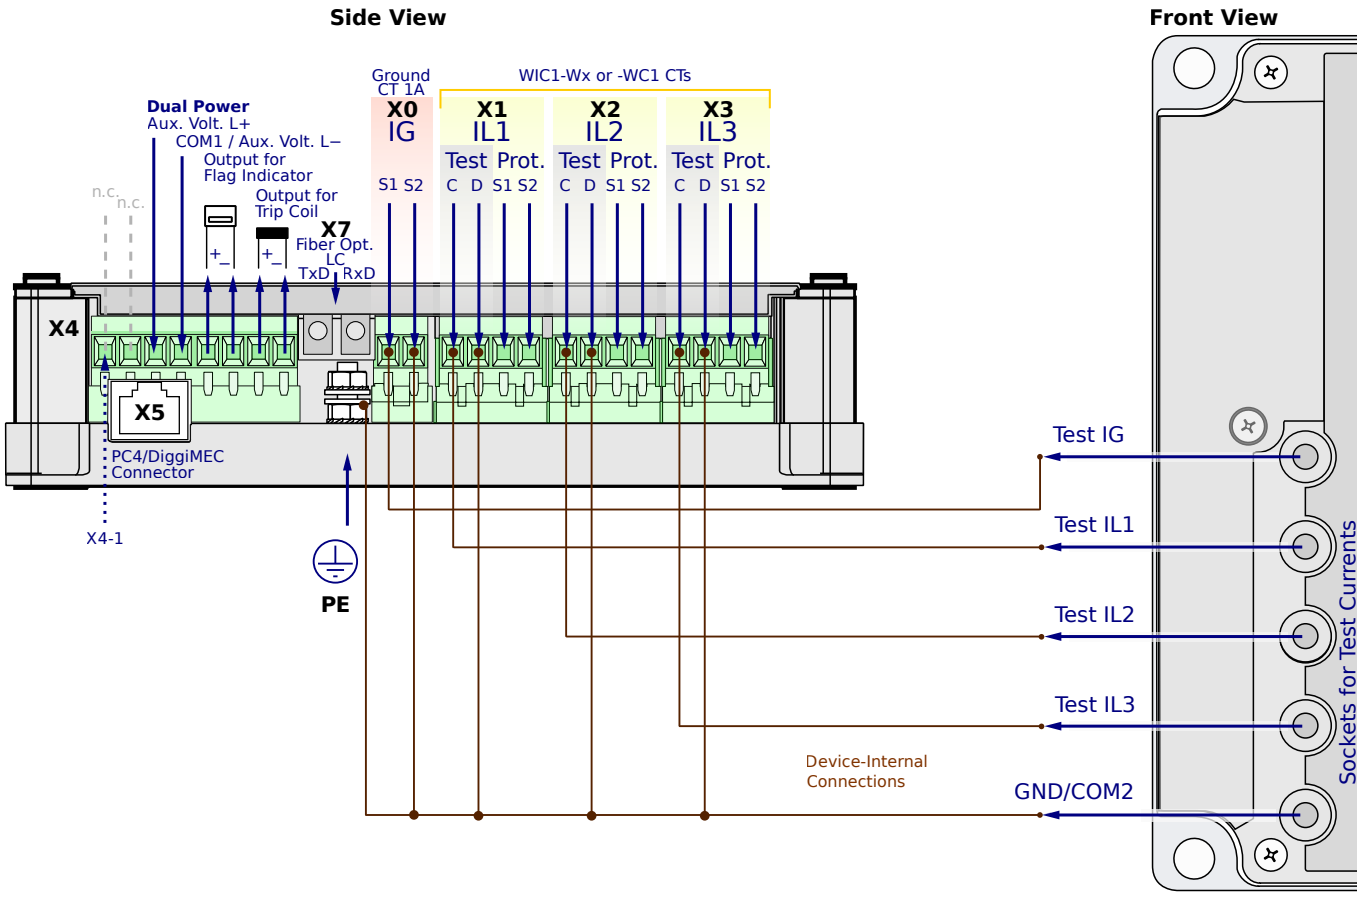


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2SLH

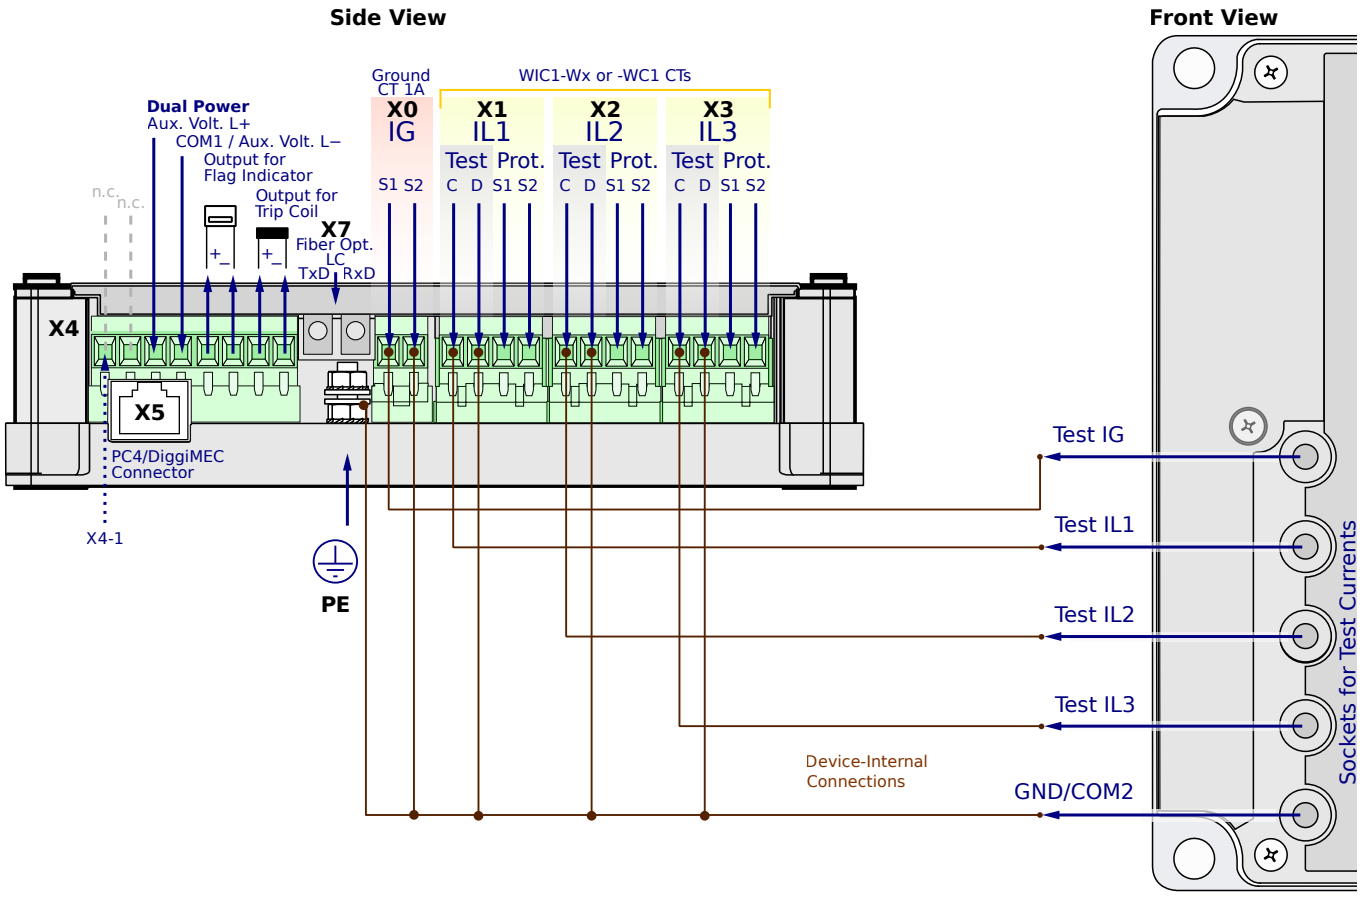


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2AA0

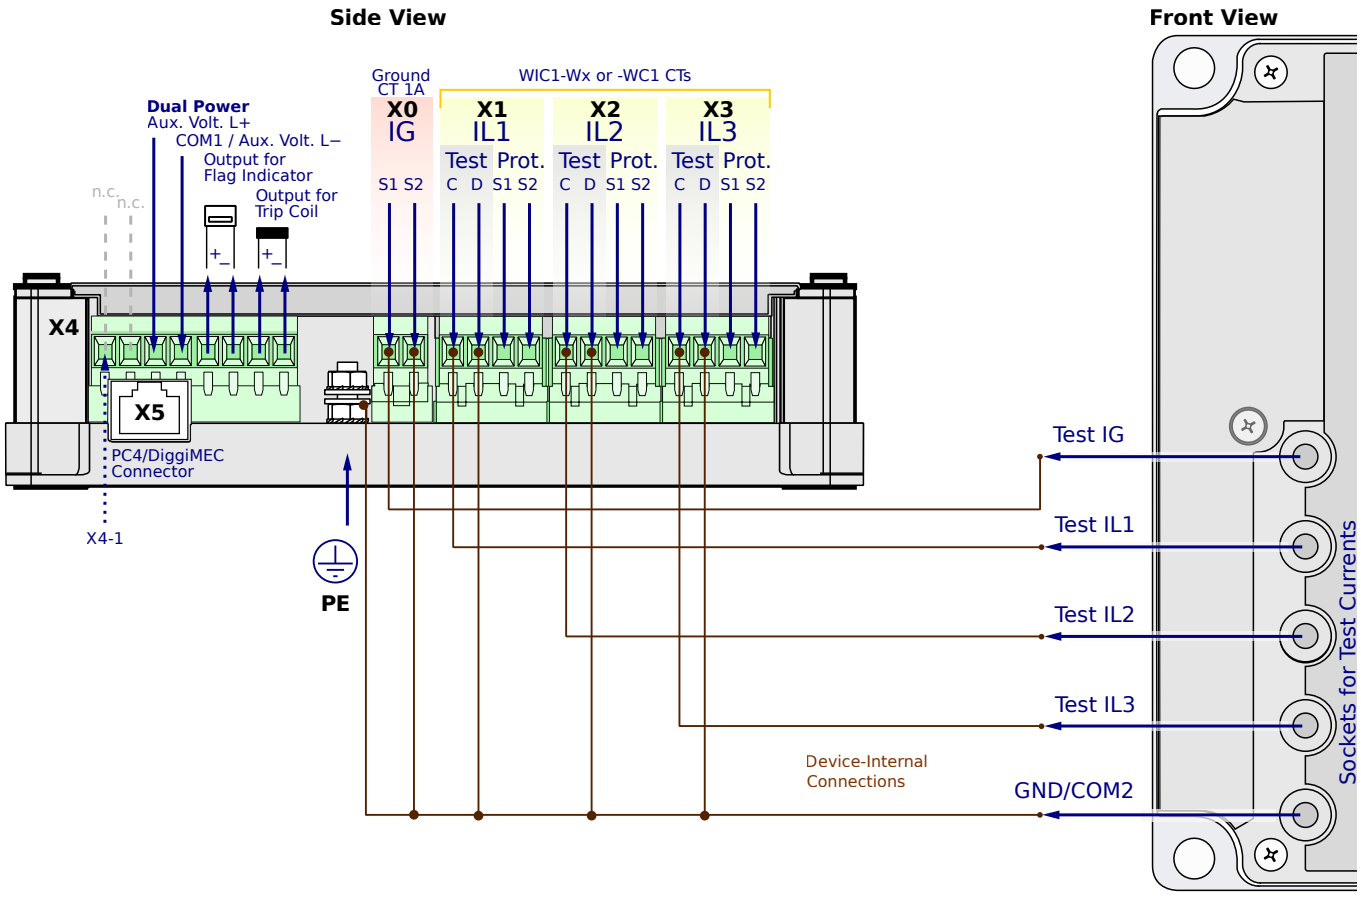


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2AAH

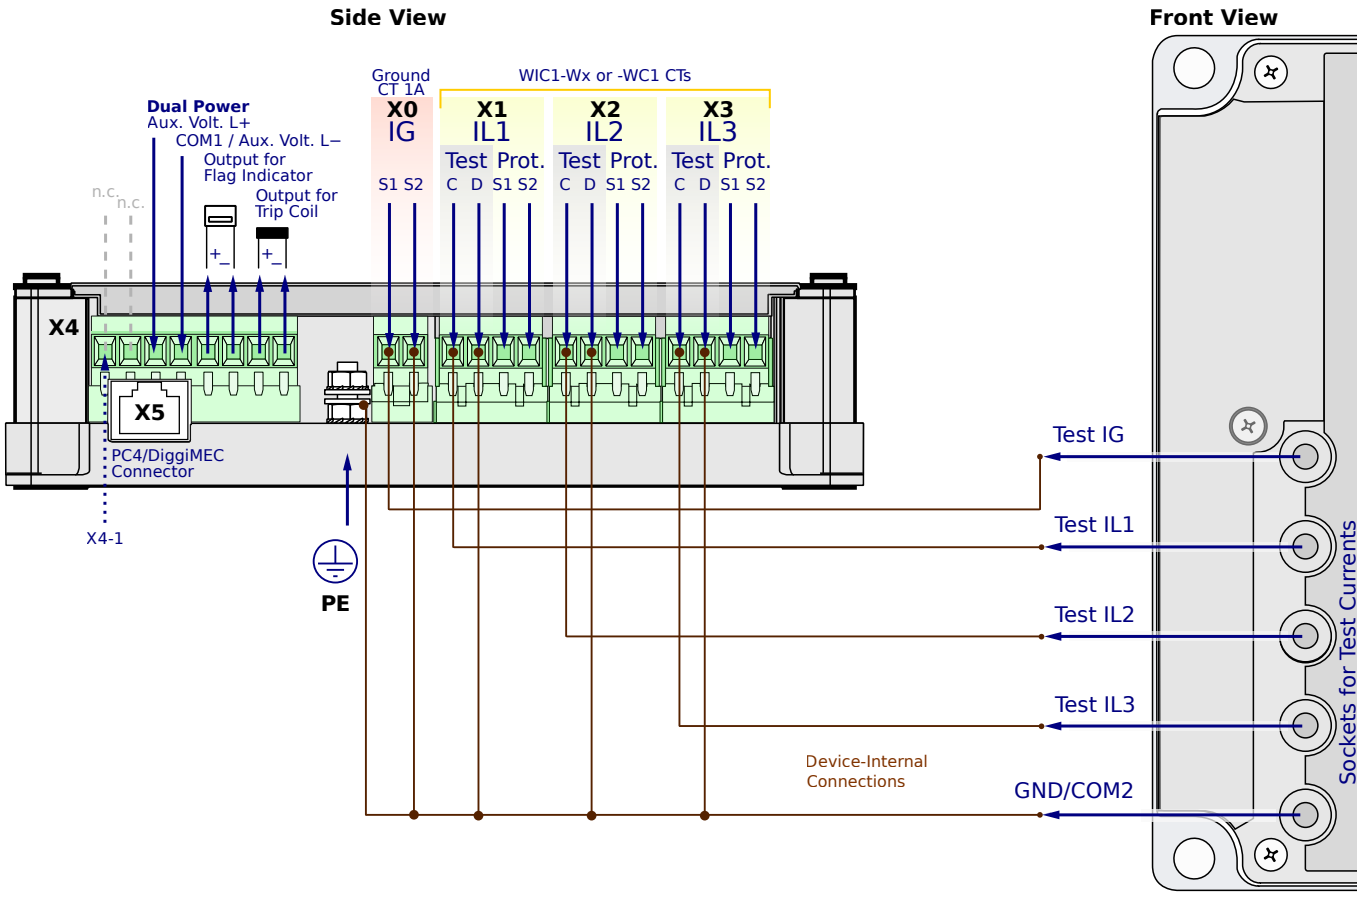


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2AB0

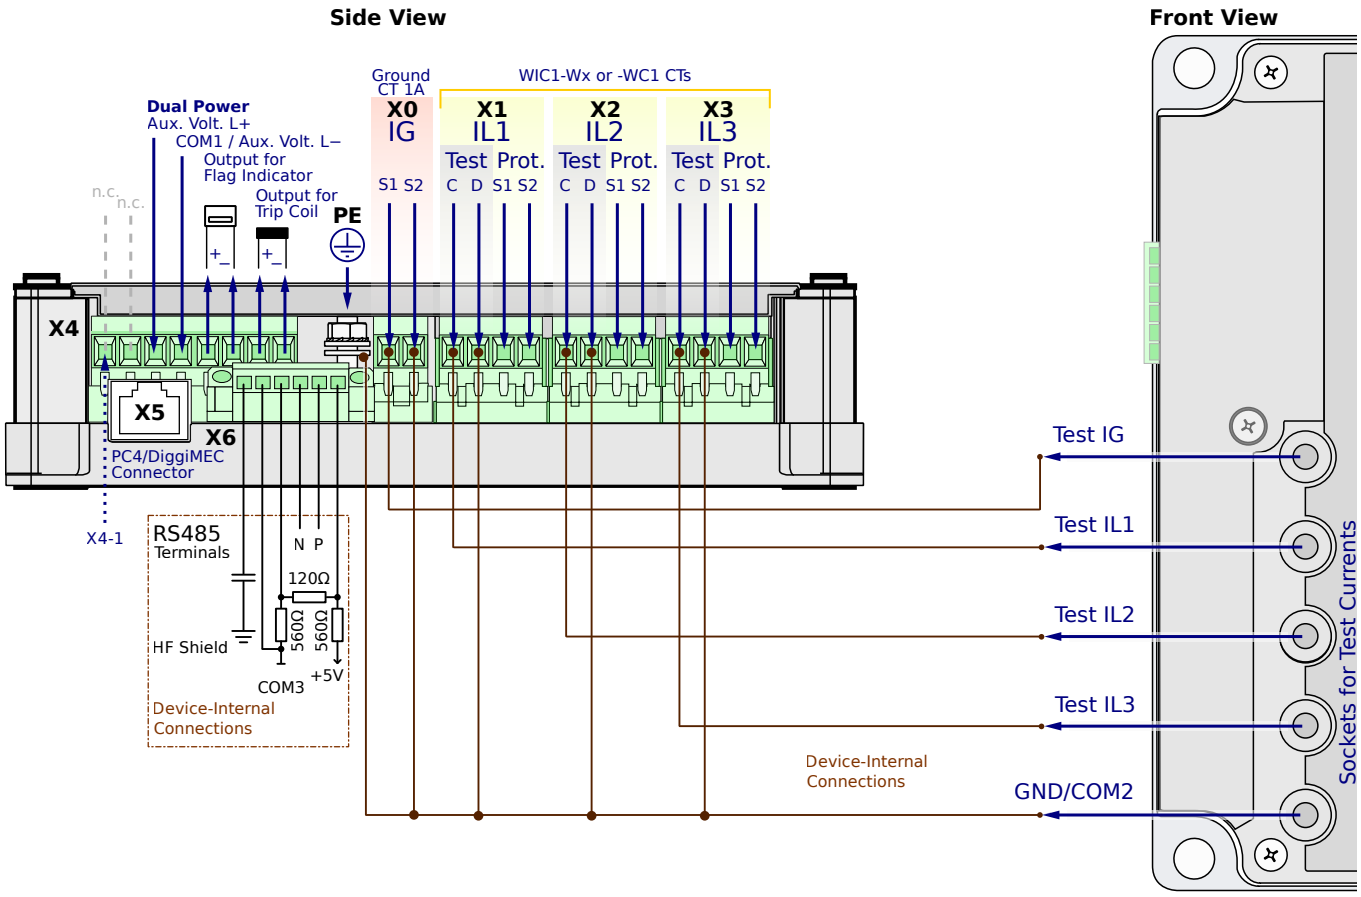


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2ABH

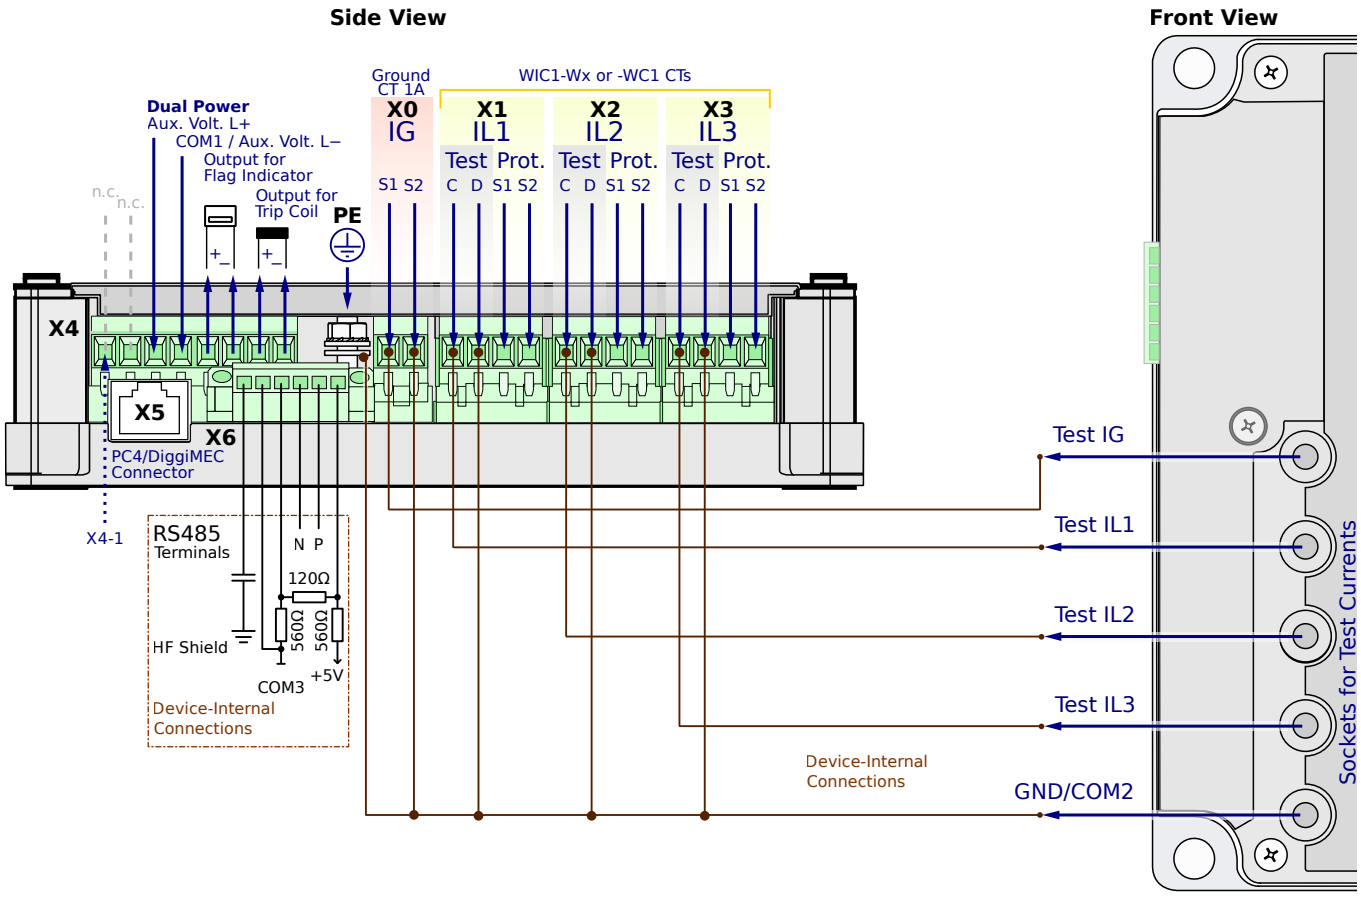


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2AC0

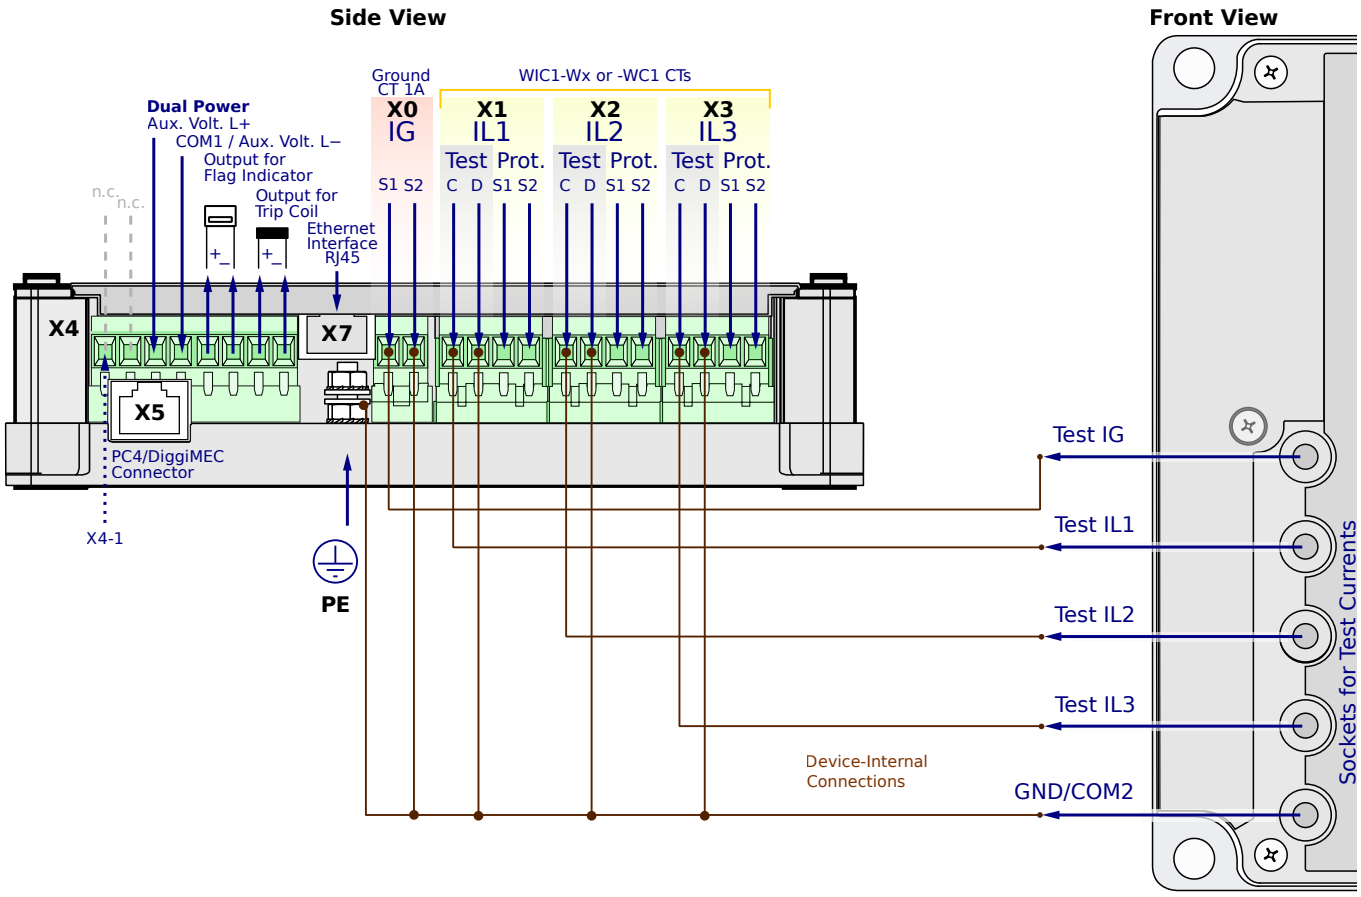


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2ACH

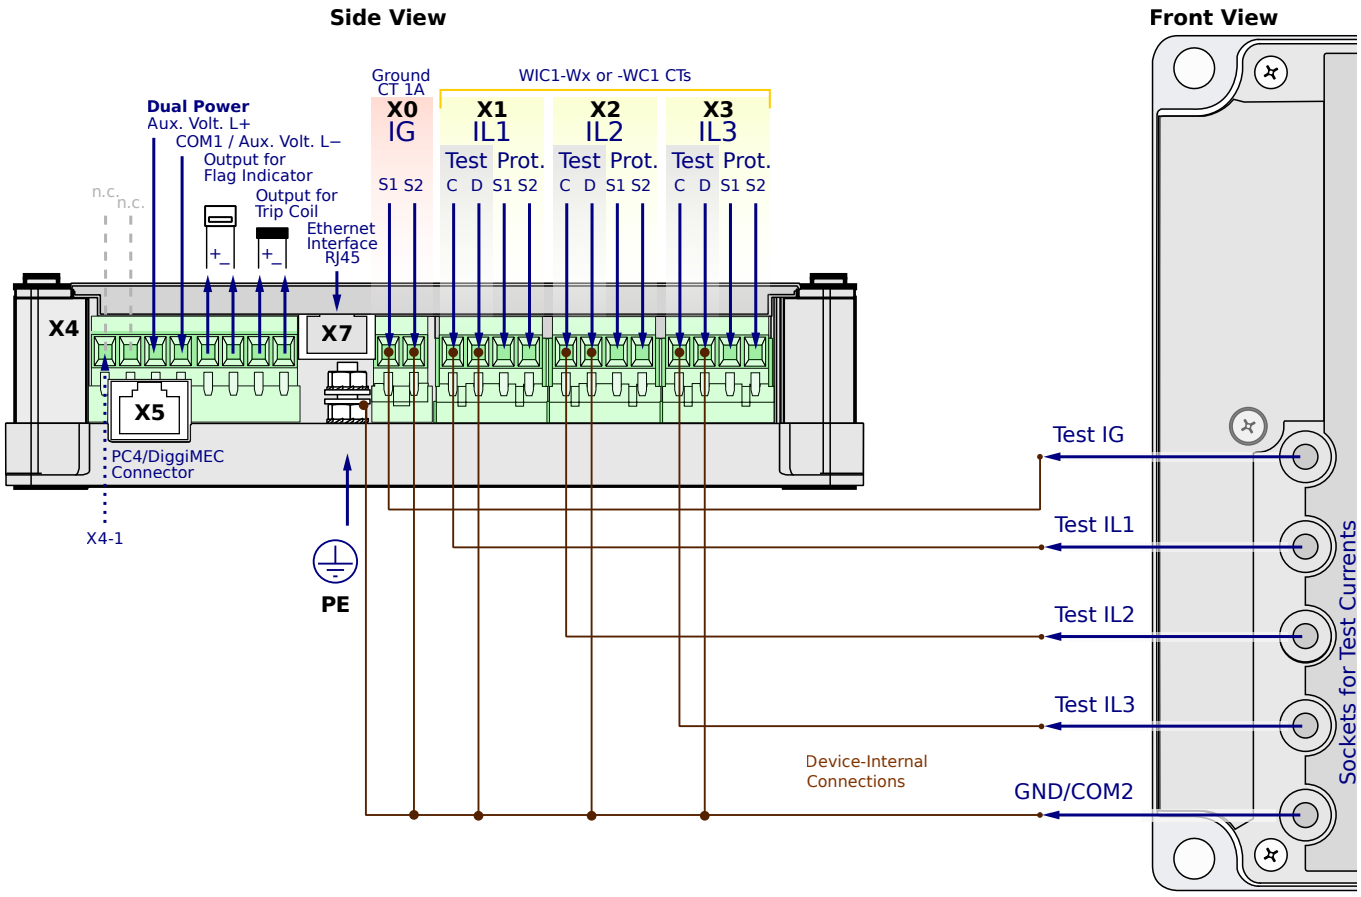


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2AL0

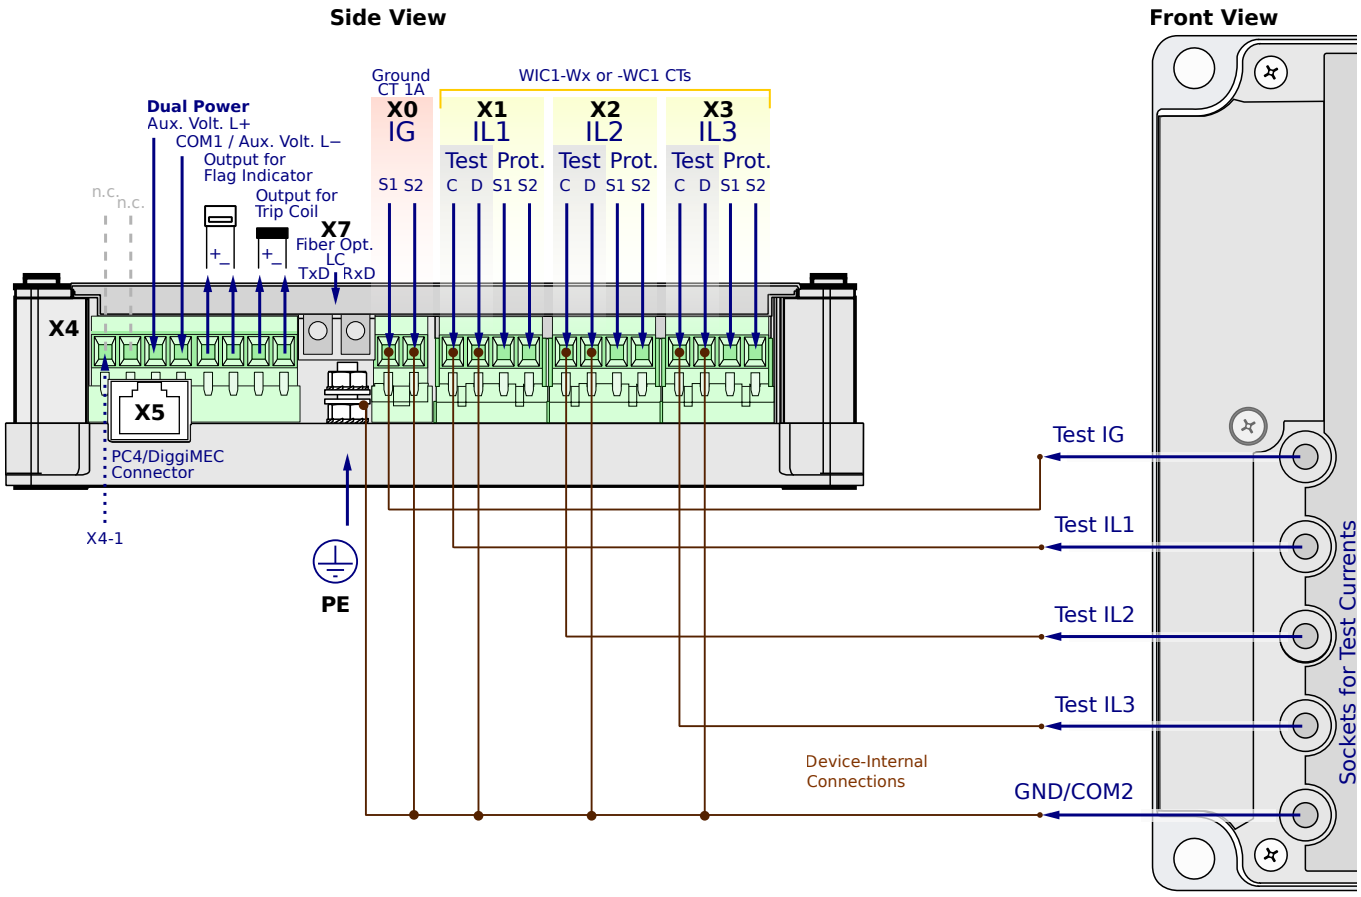


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2ALH

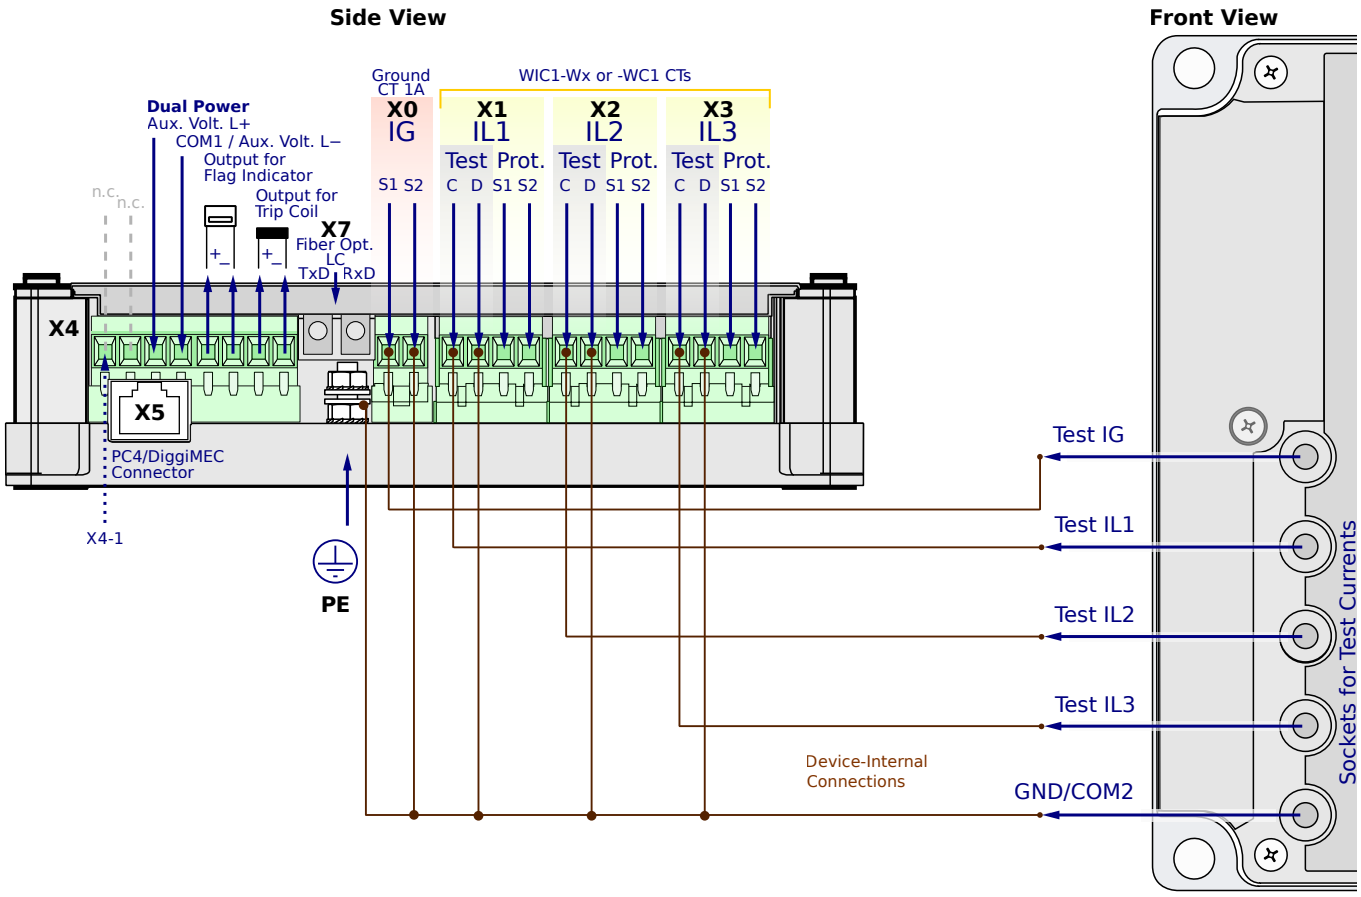


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2PA0

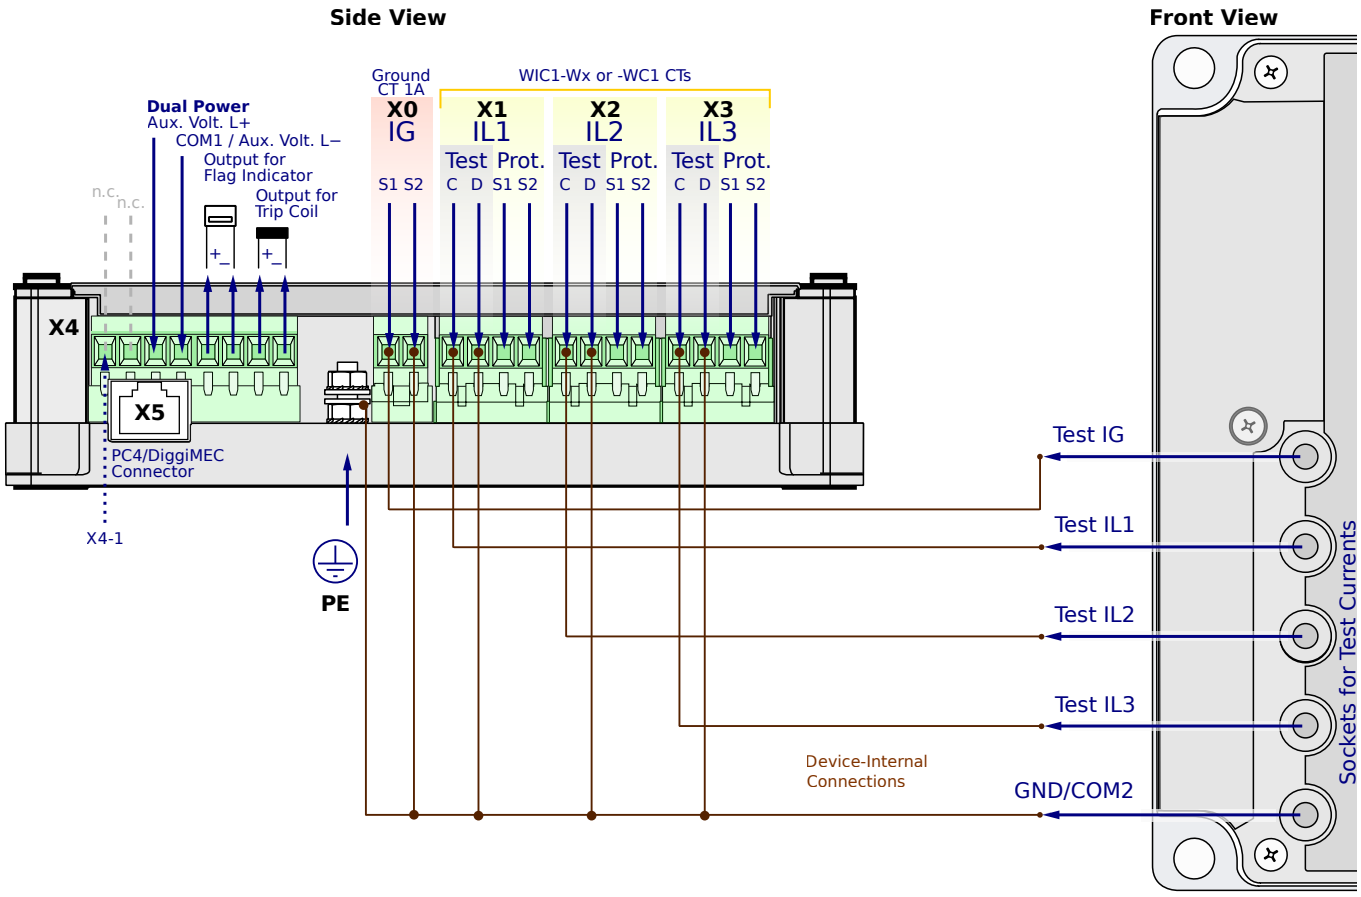


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2PAH

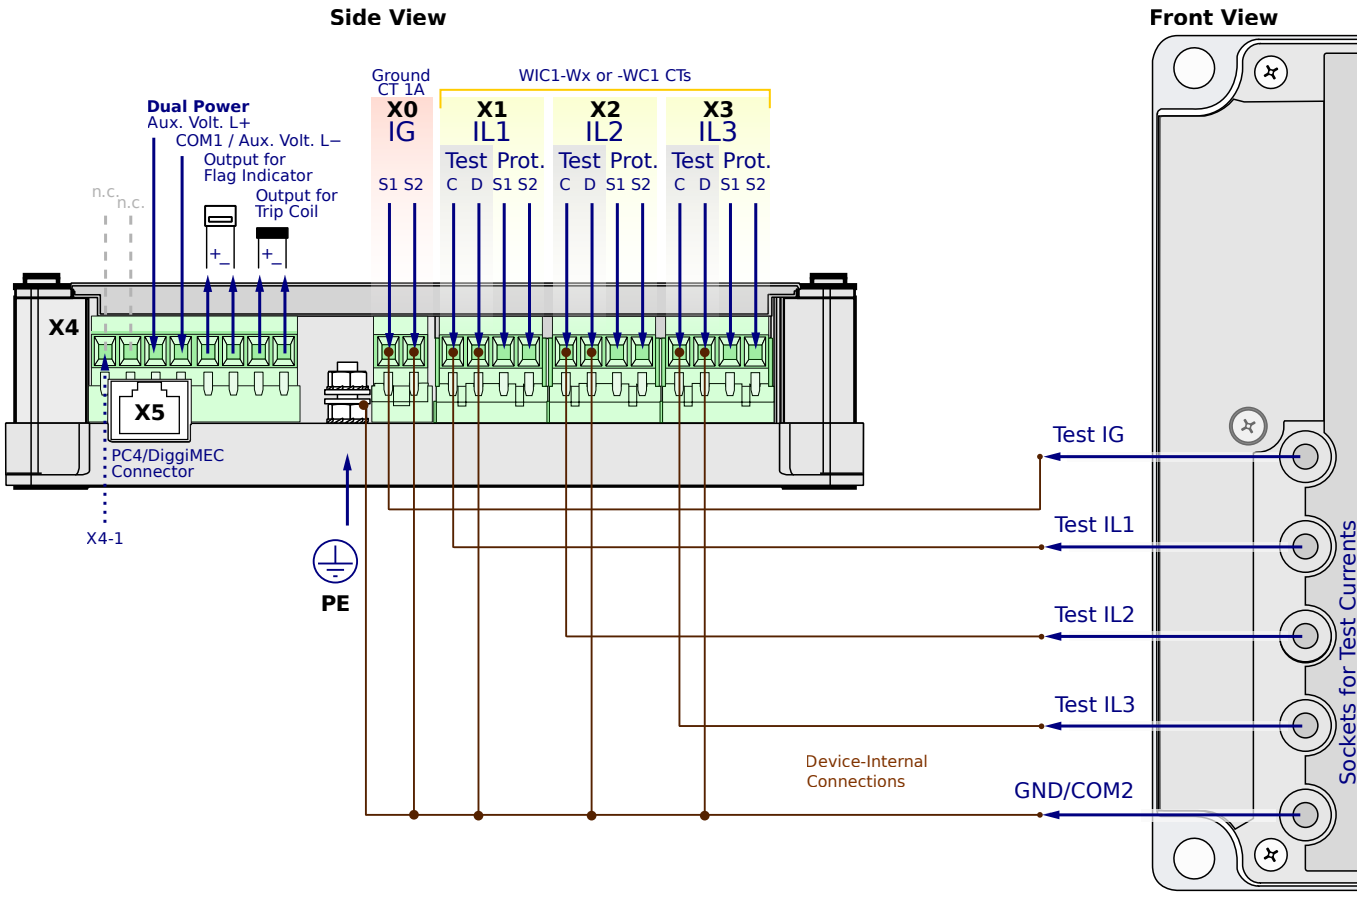


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CM2PB0

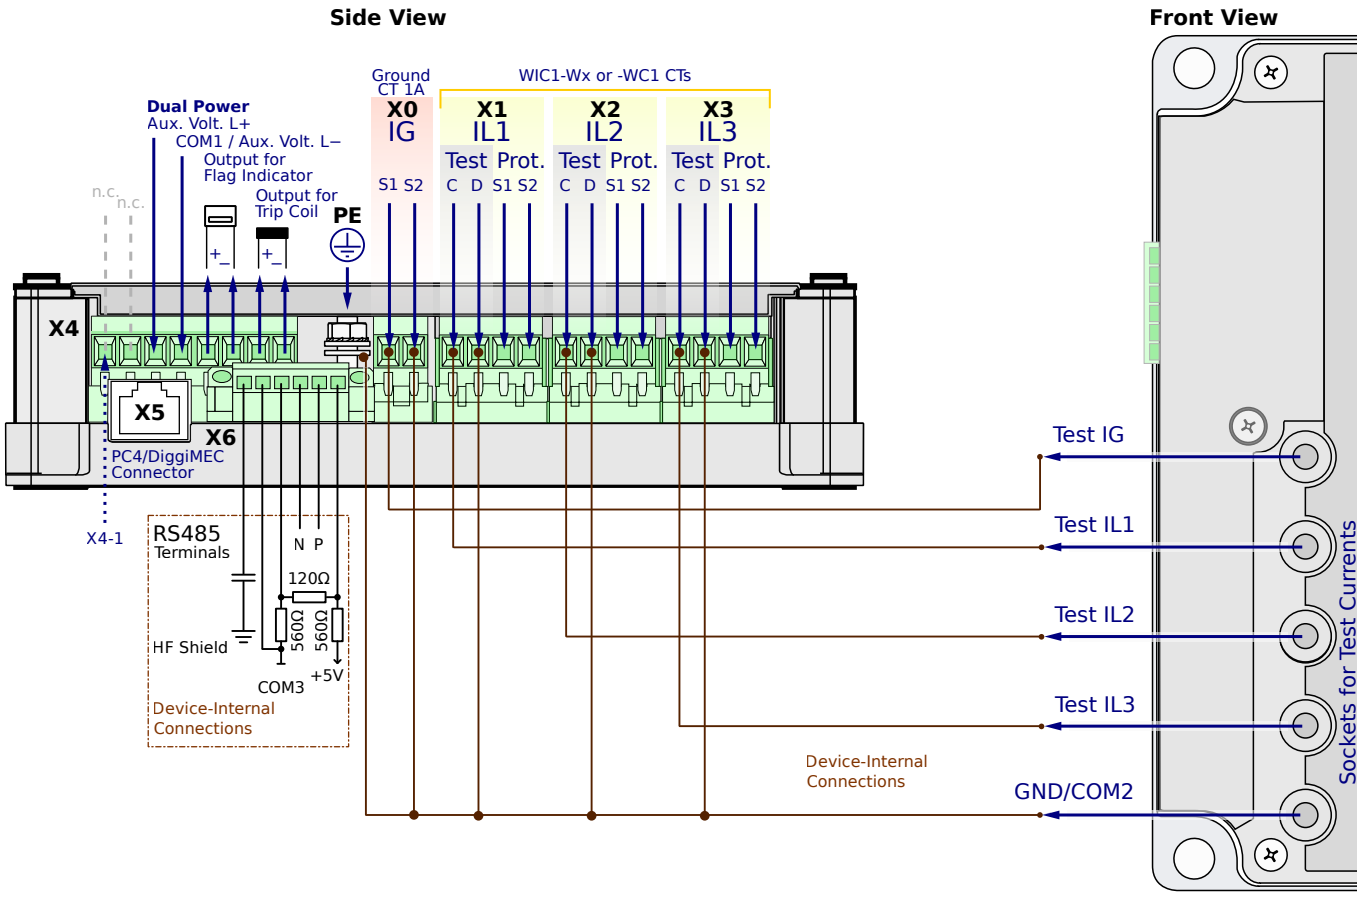


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2PBH

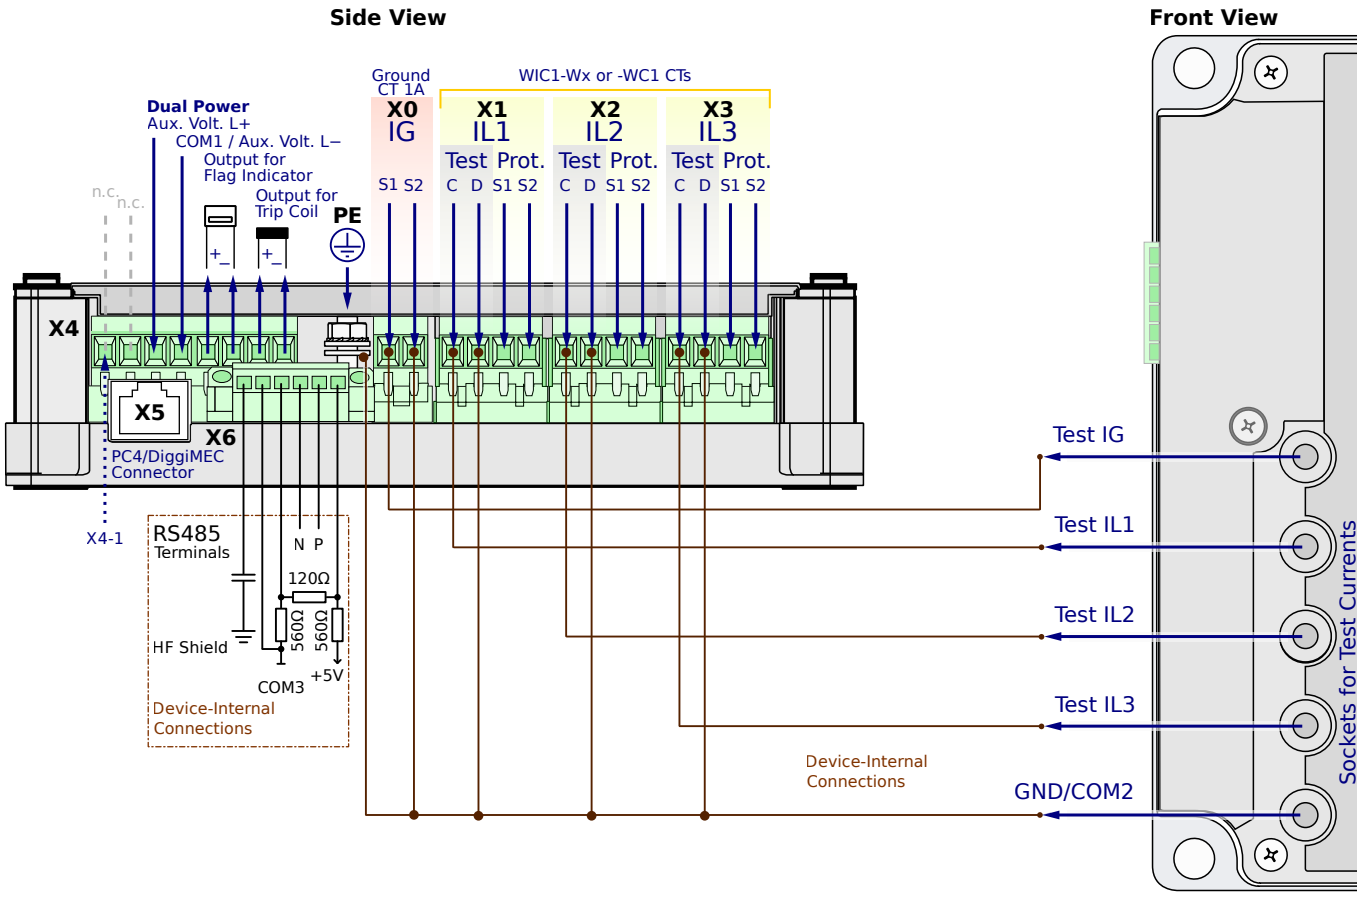


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CM2PC0

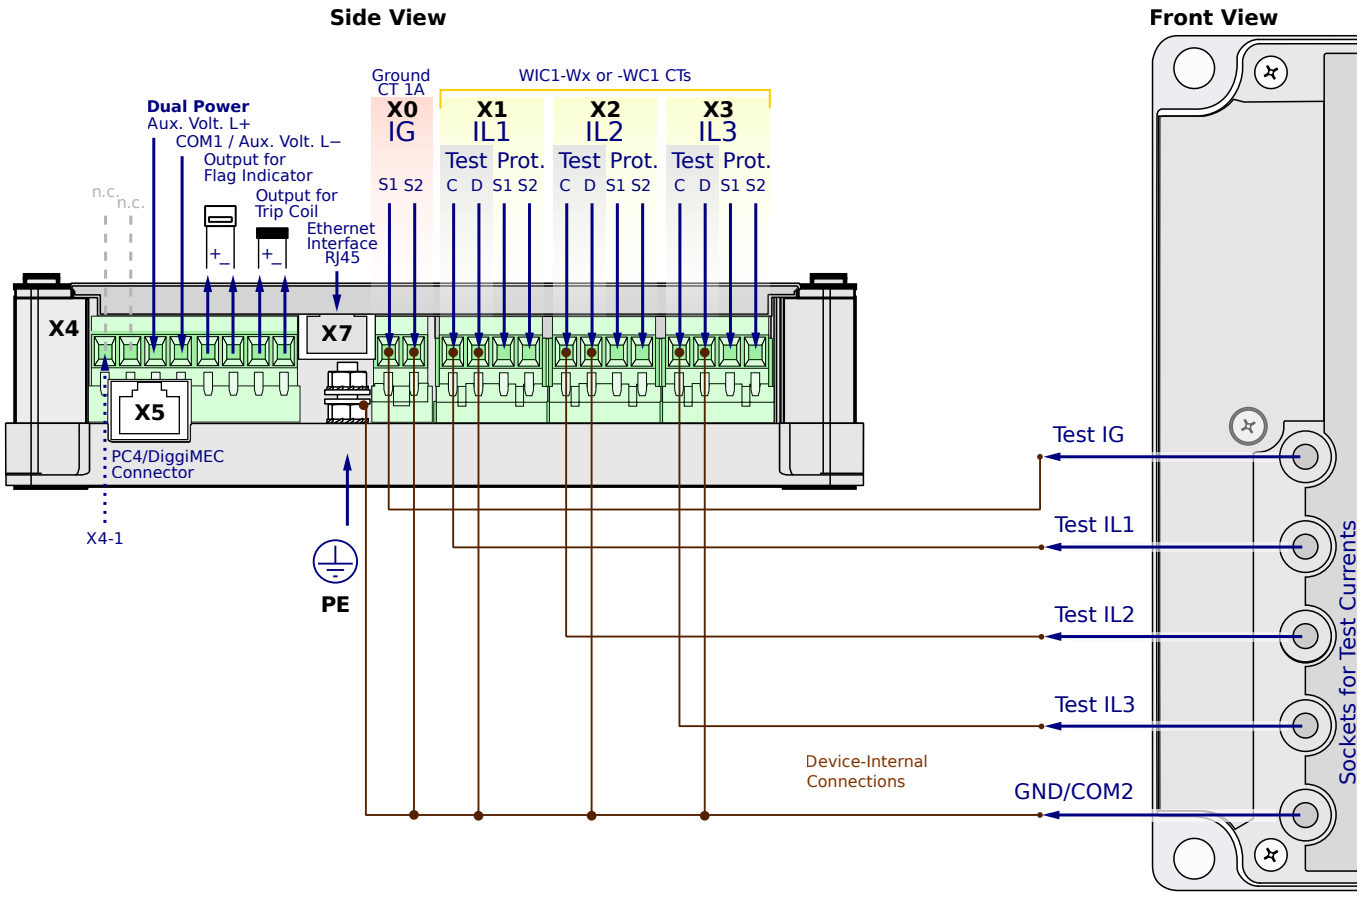


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2PCH

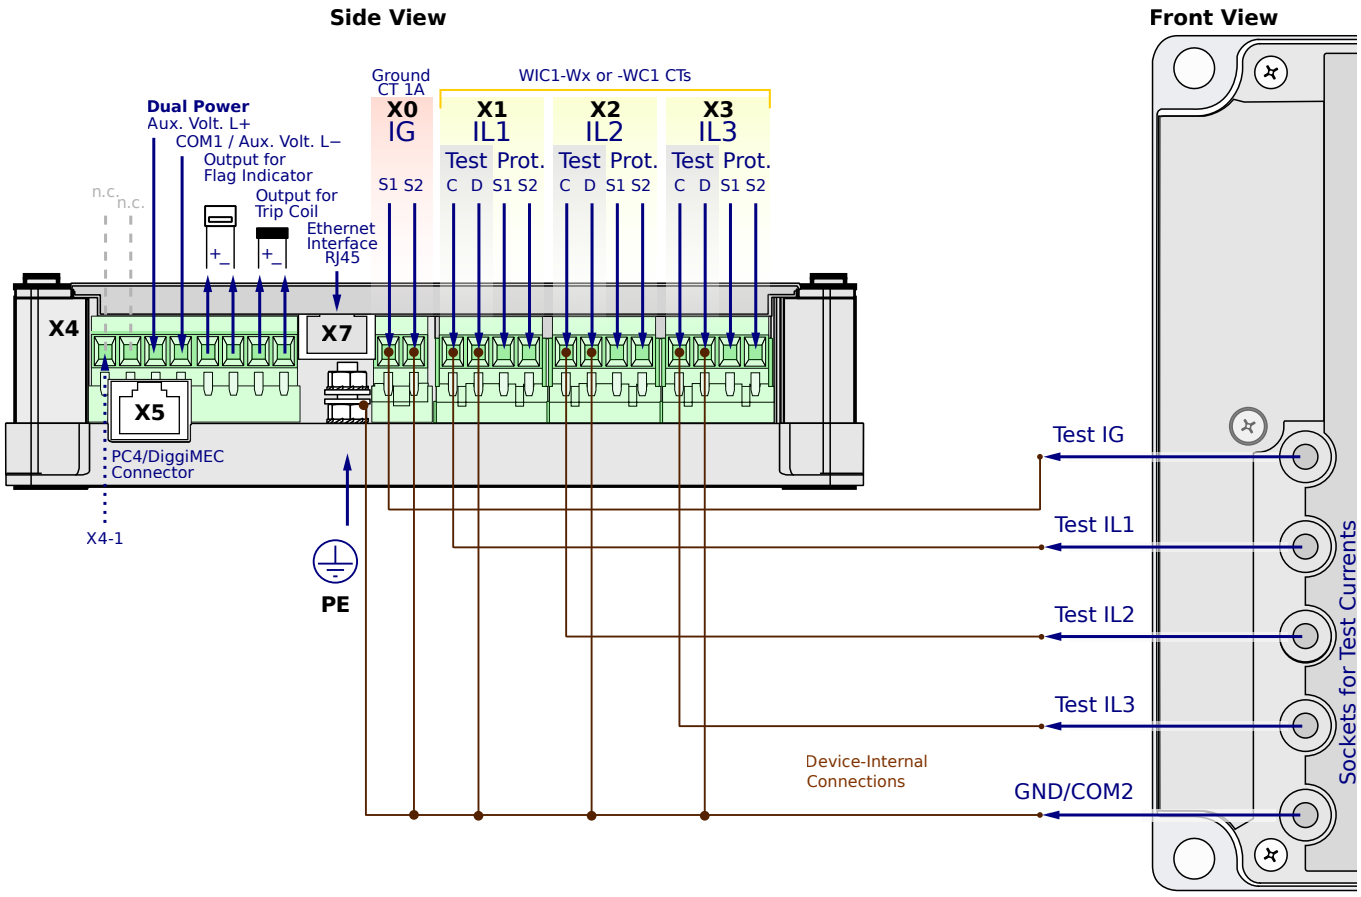


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CM2PL0

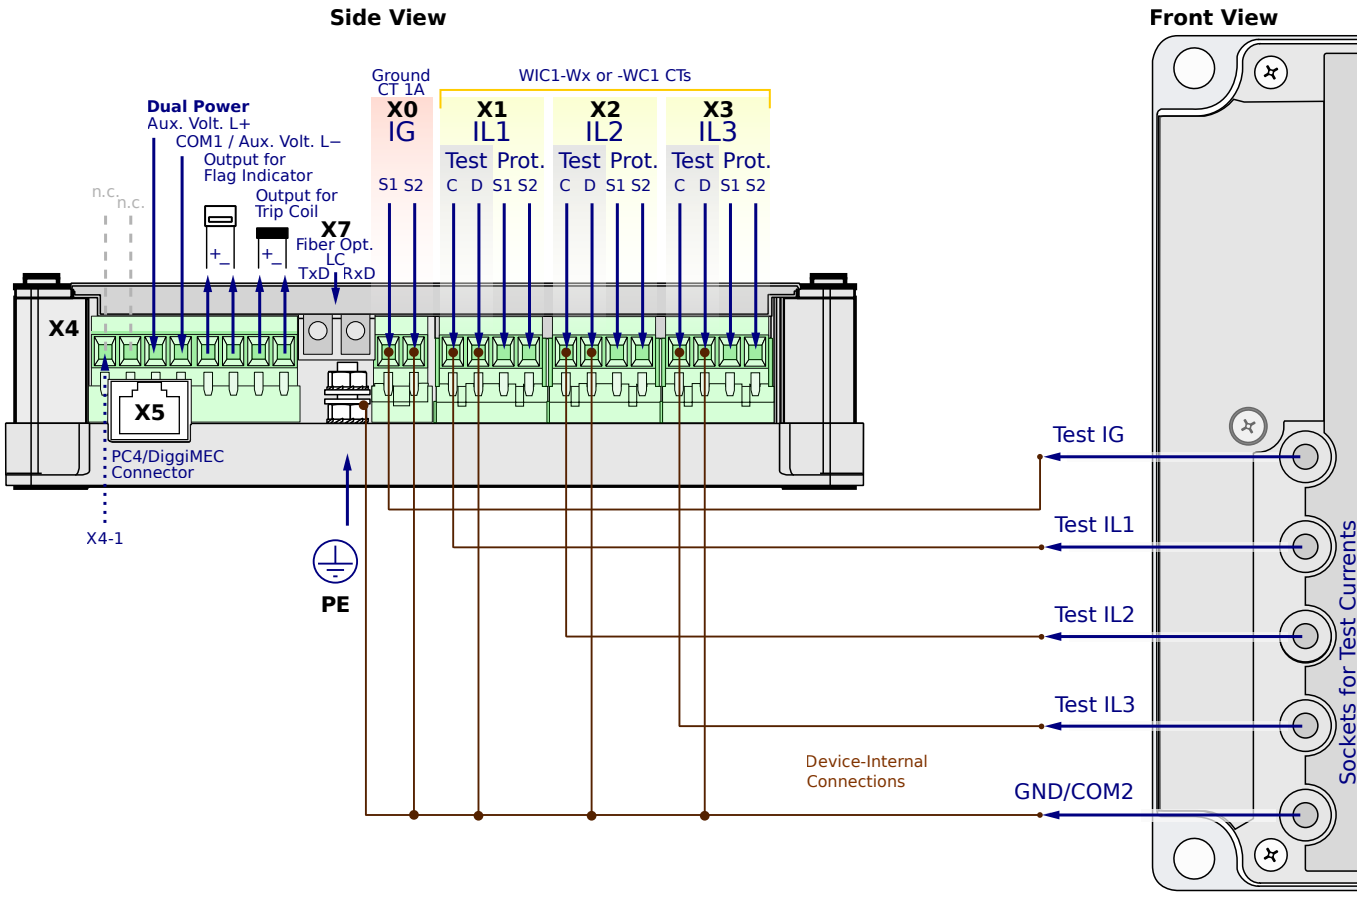


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CM2PLH

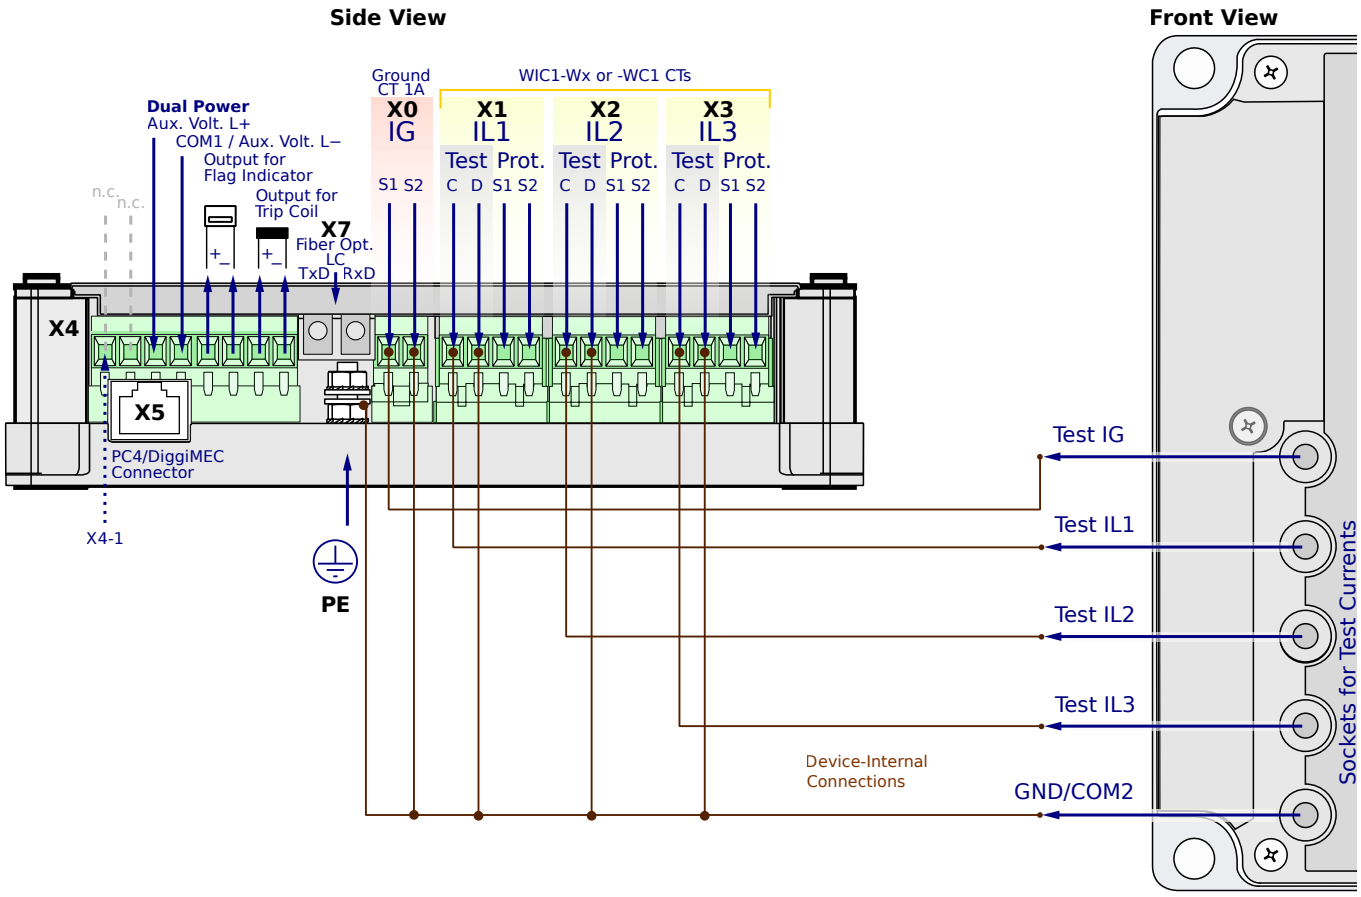


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1SA0

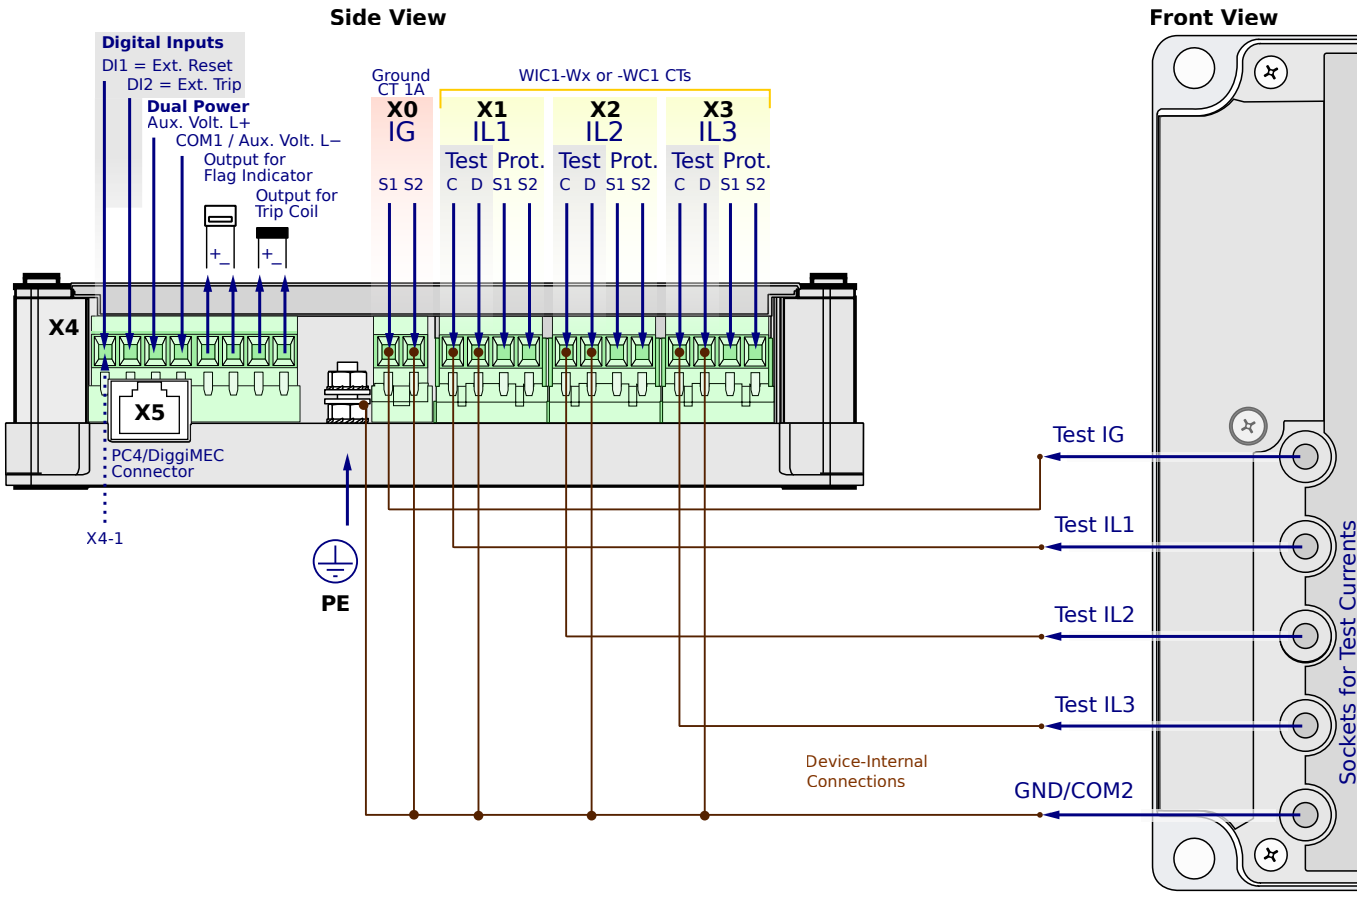


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1SAH

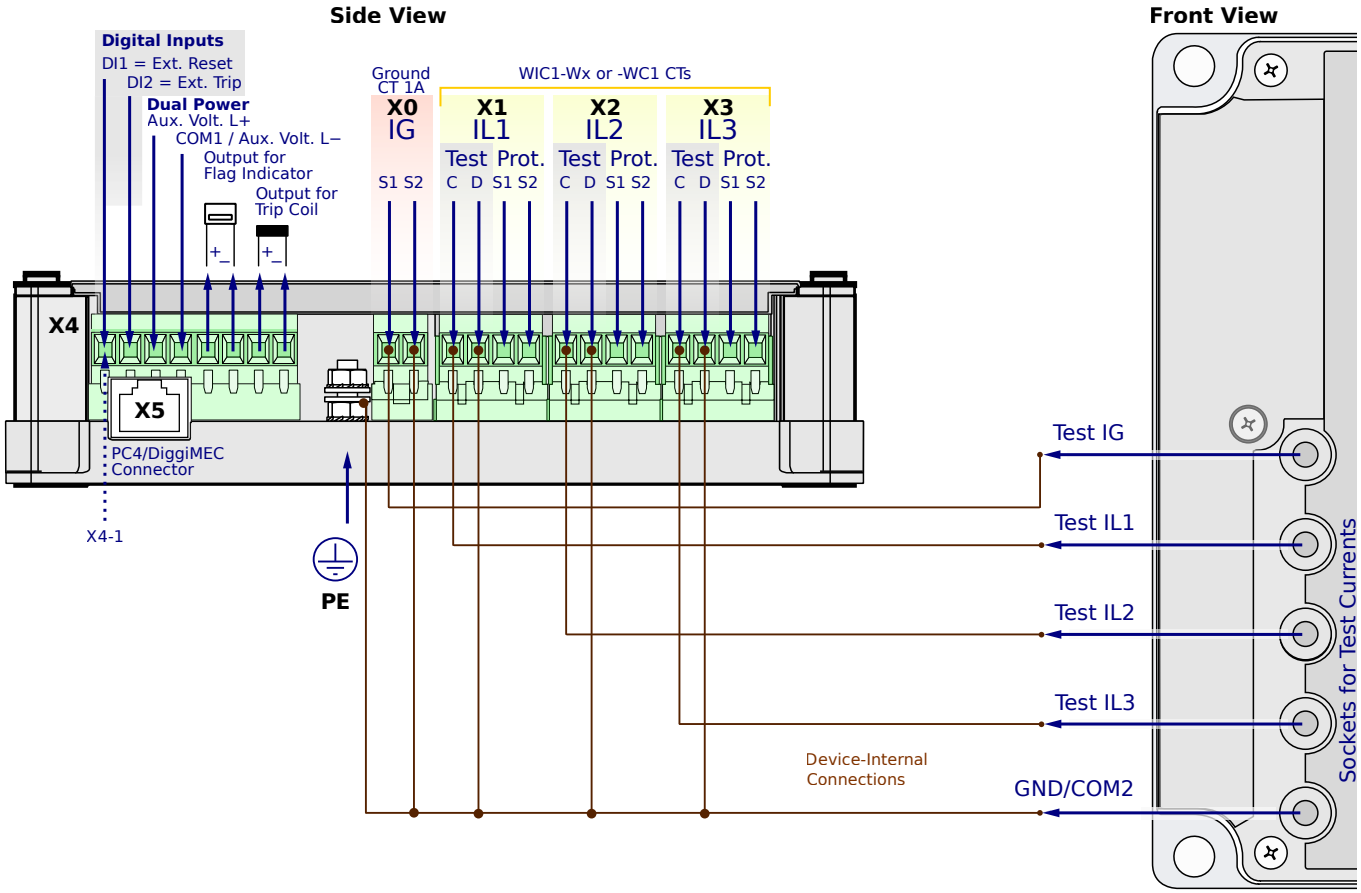


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1SB0

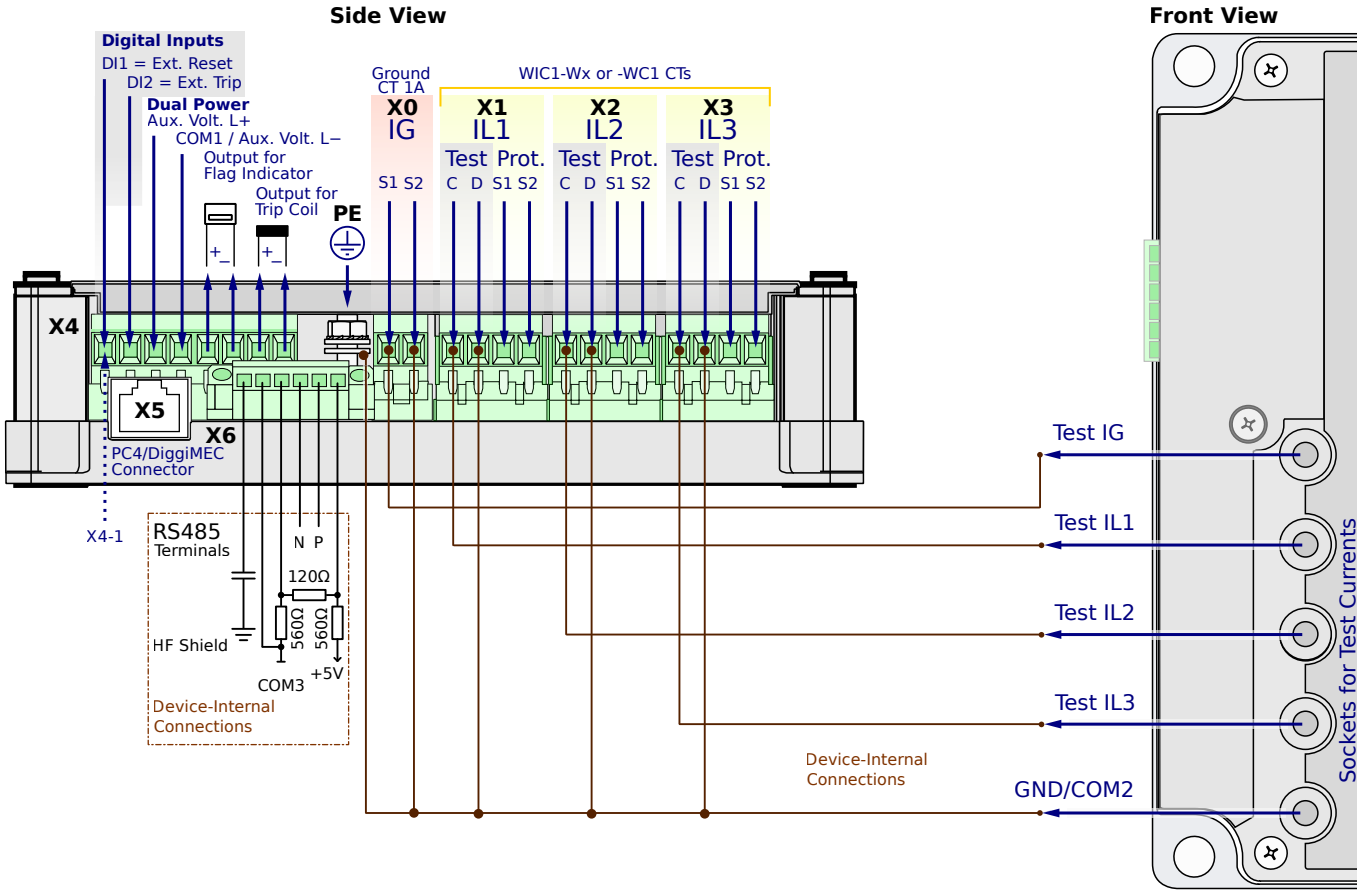


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1SBH

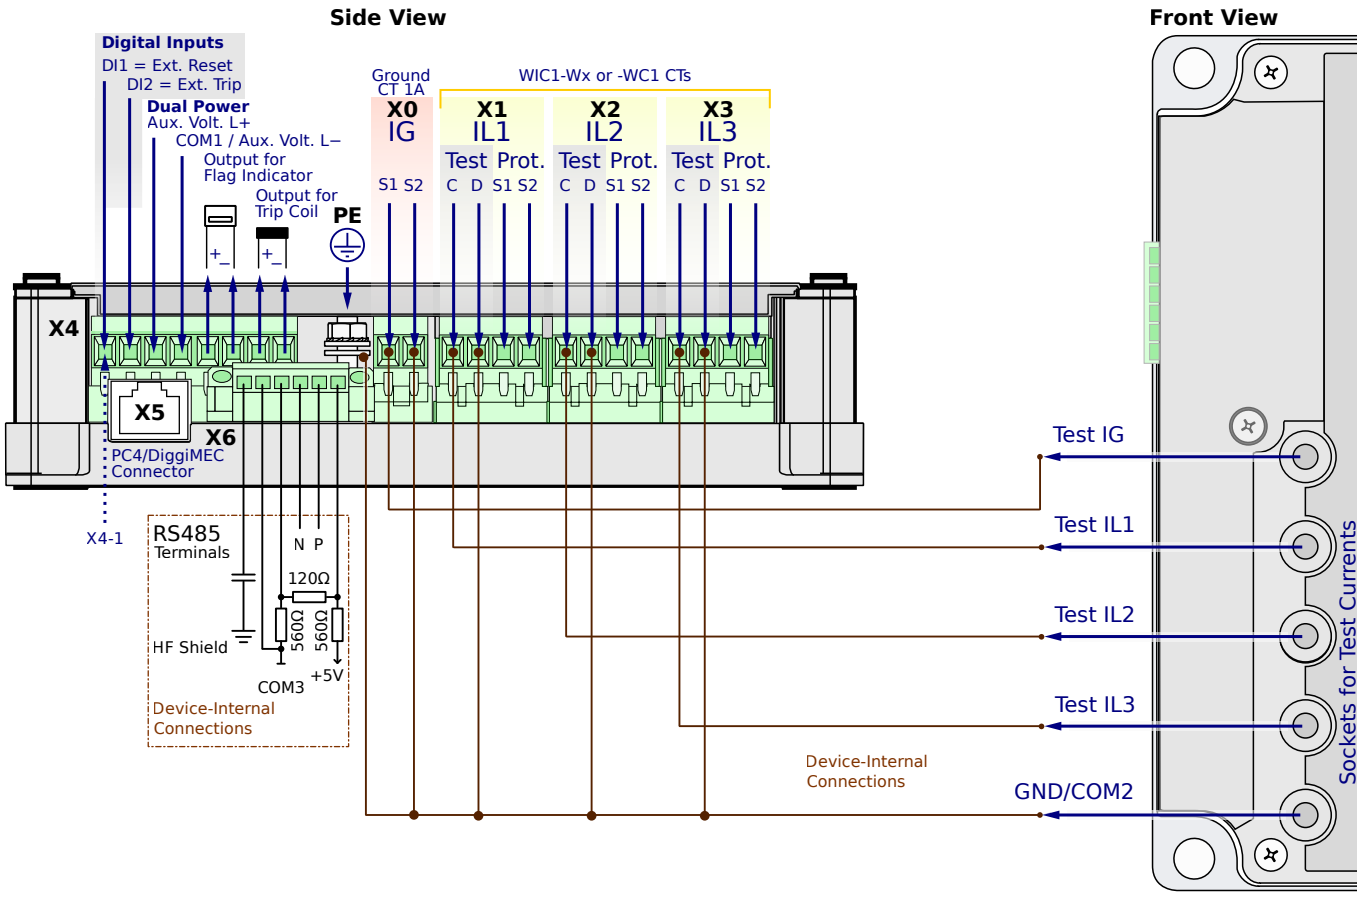


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1SC0

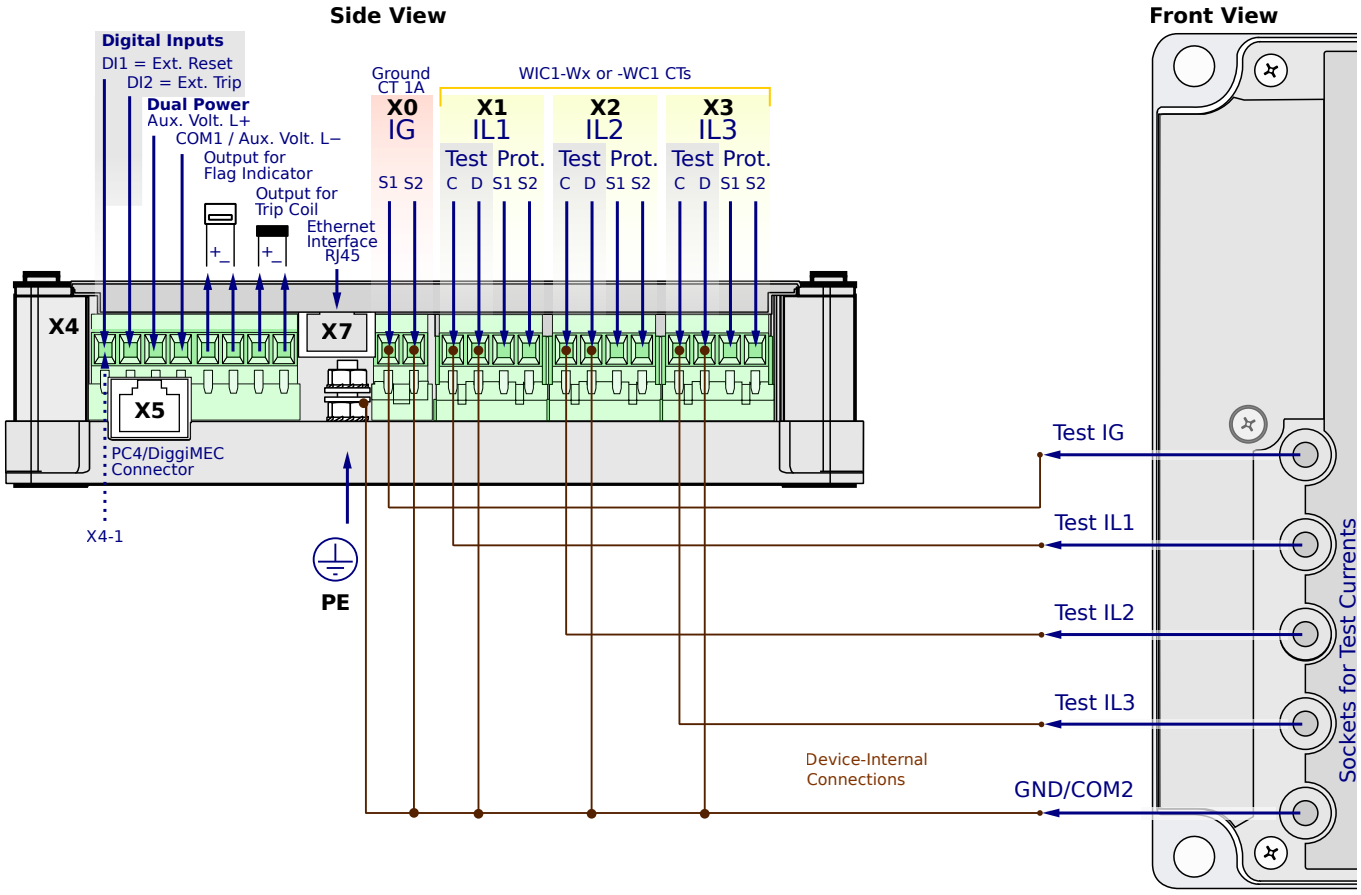


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1SCH

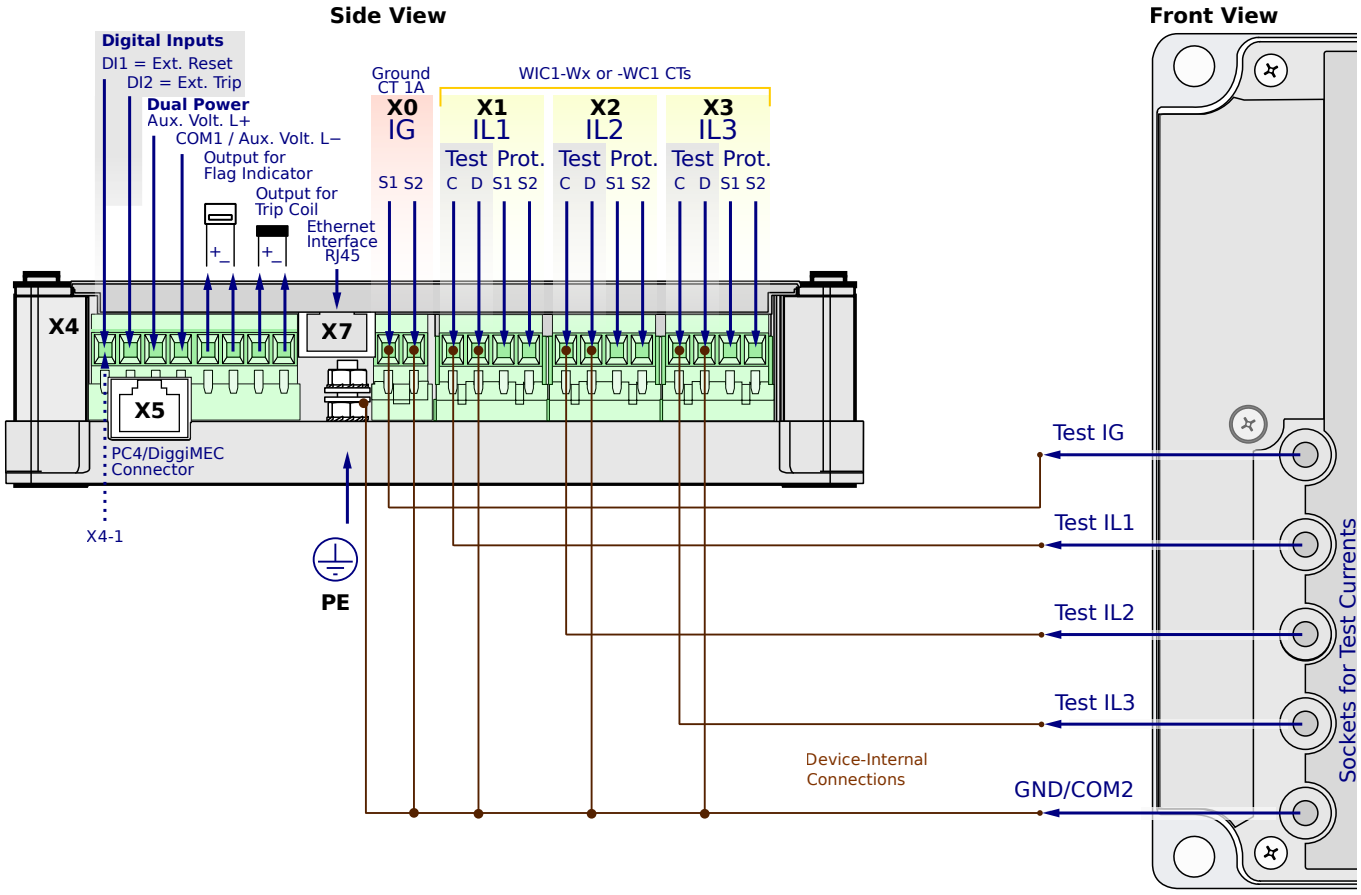


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1SL0

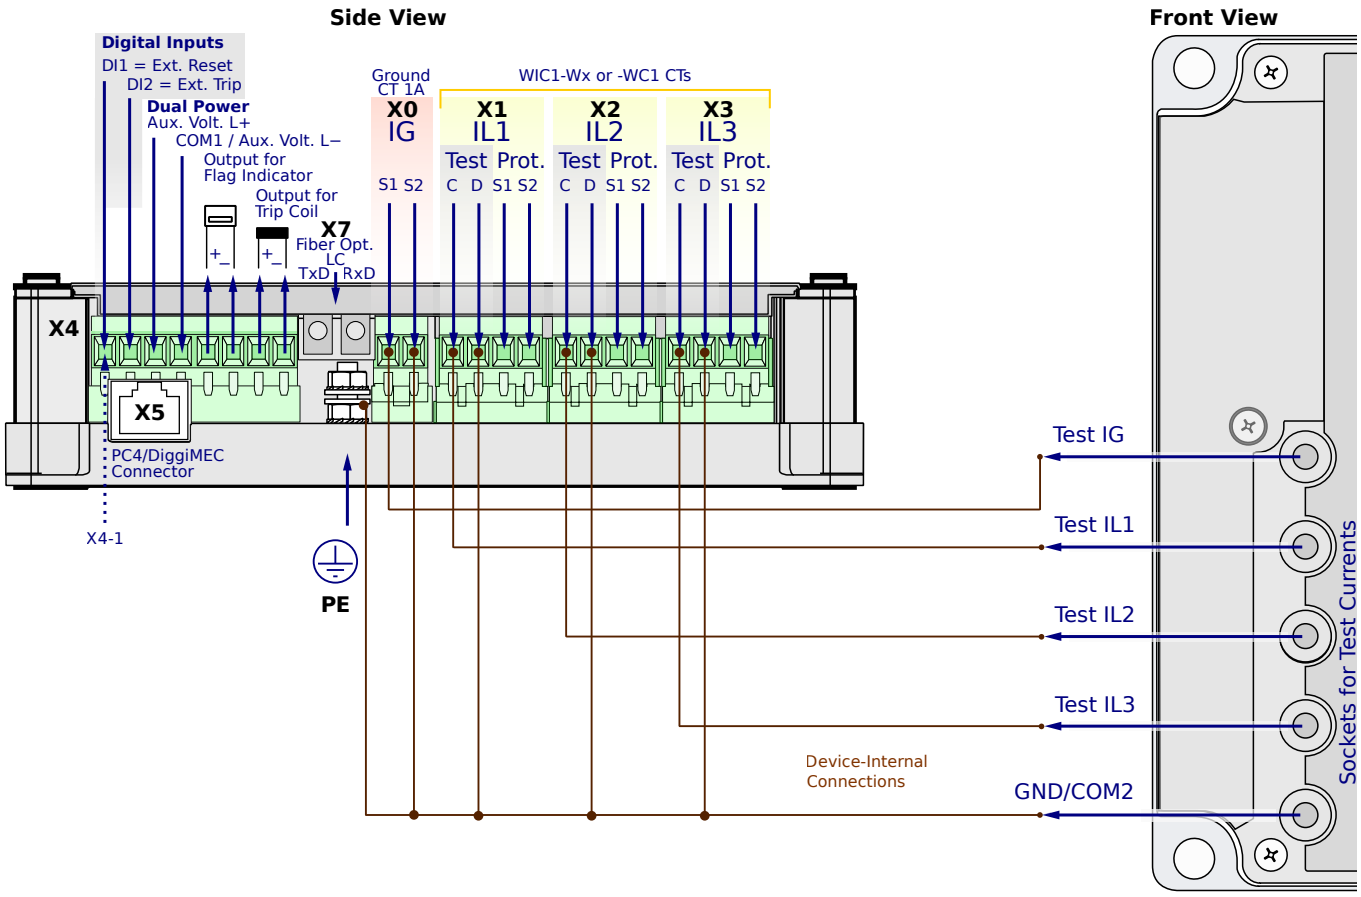


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1SLH

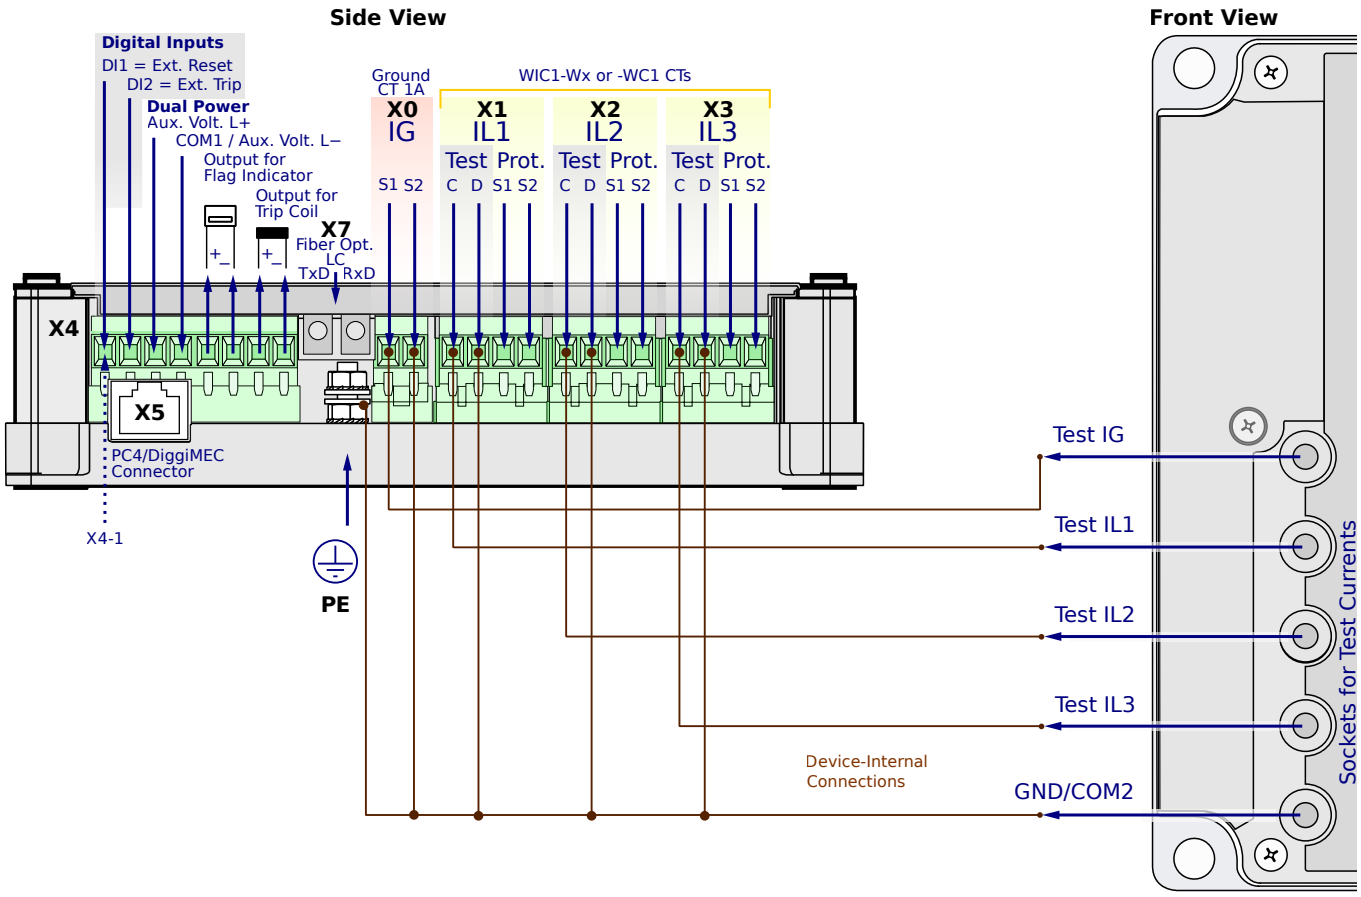


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1AA0

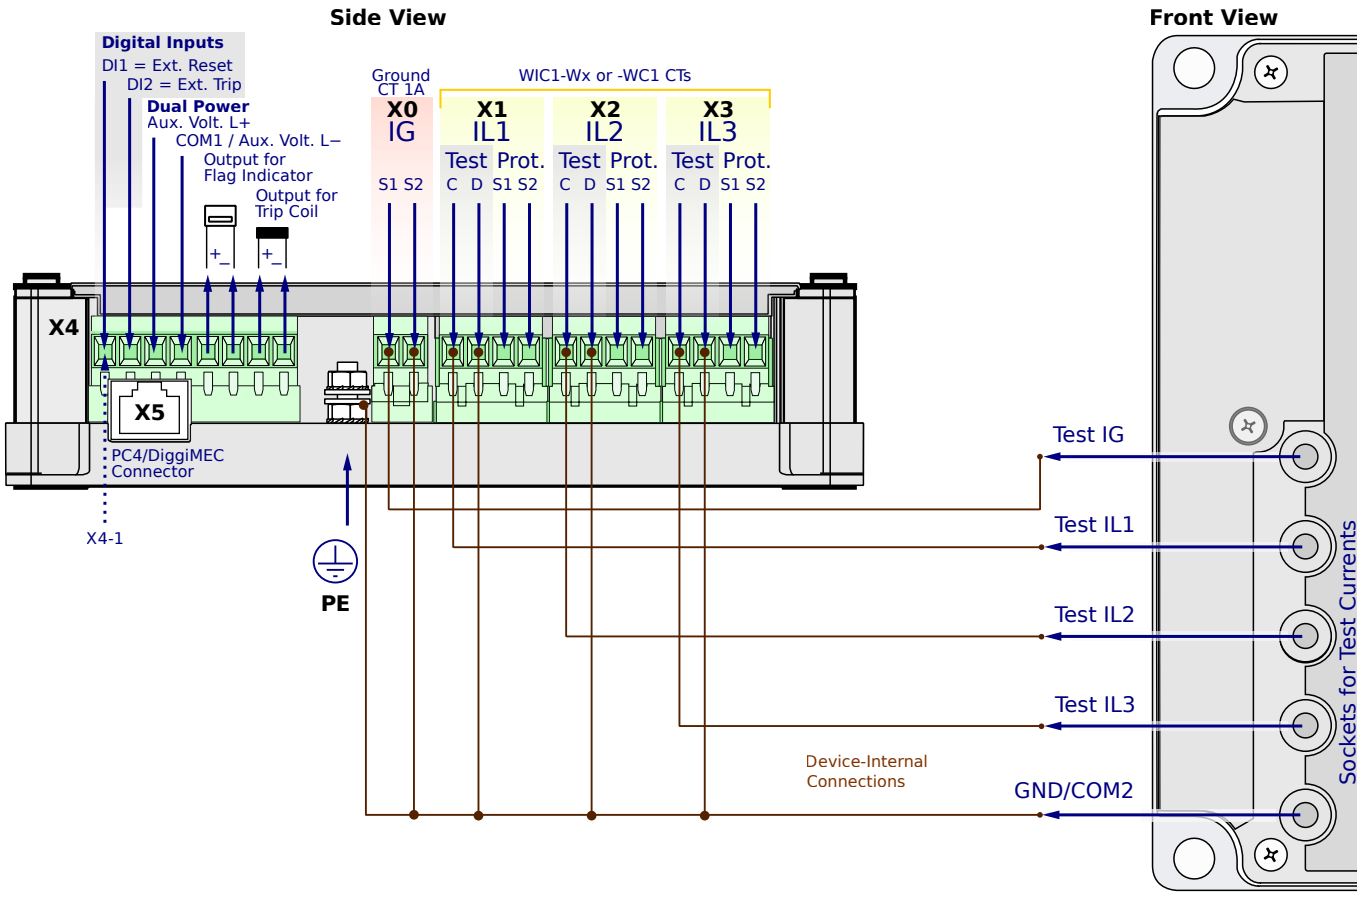


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1AAH

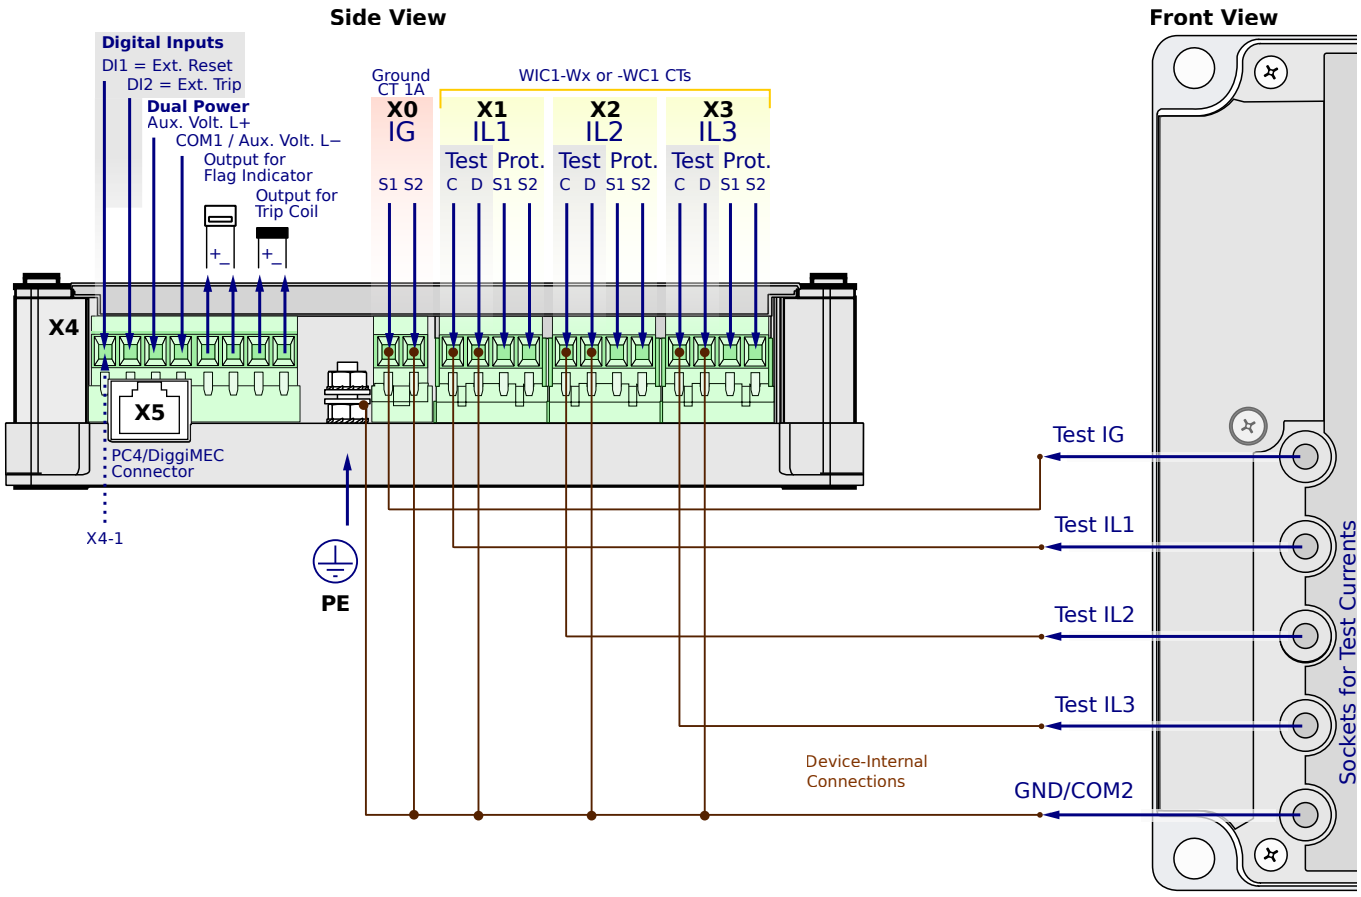


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1AB0

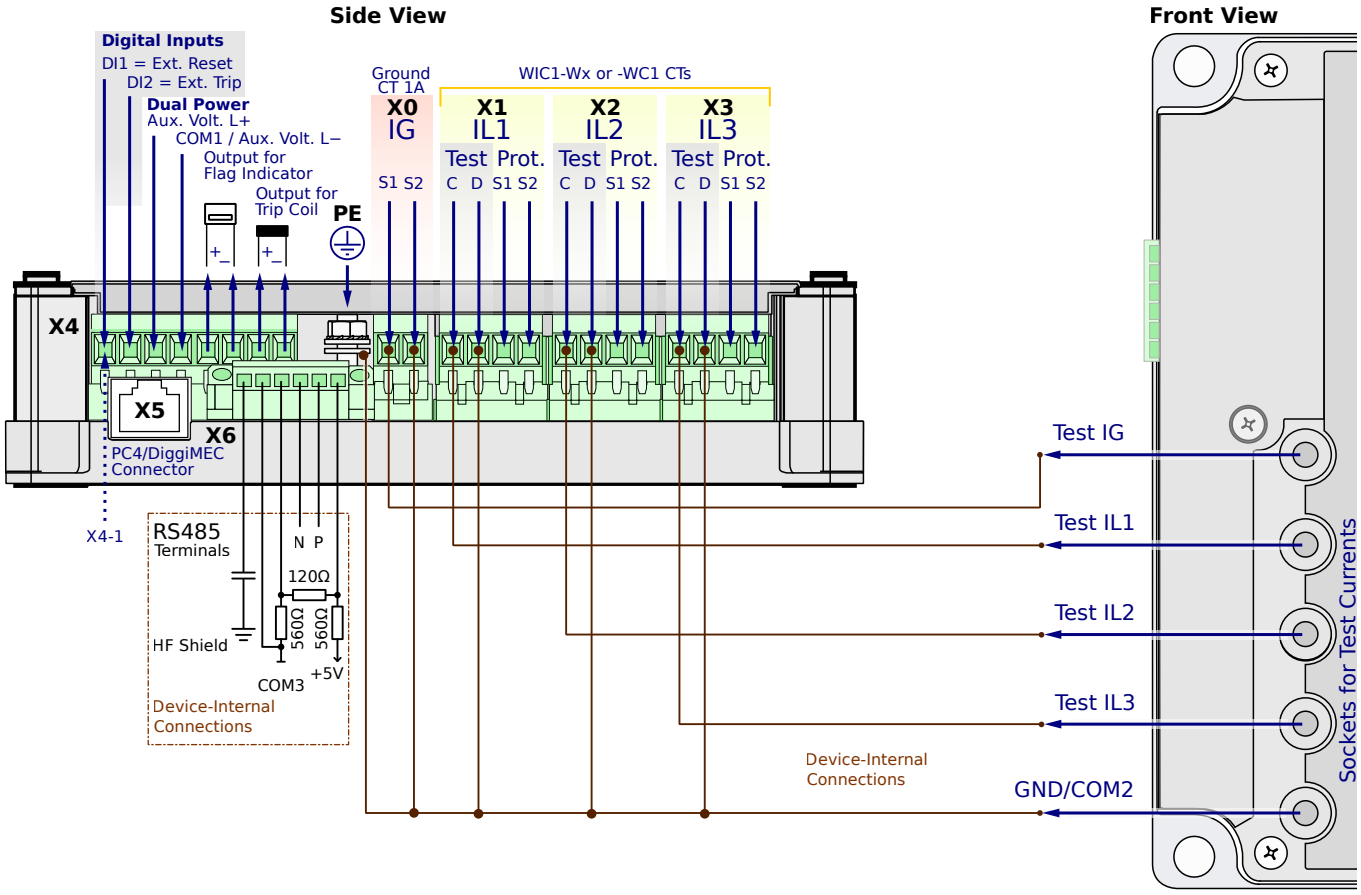


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1ABH

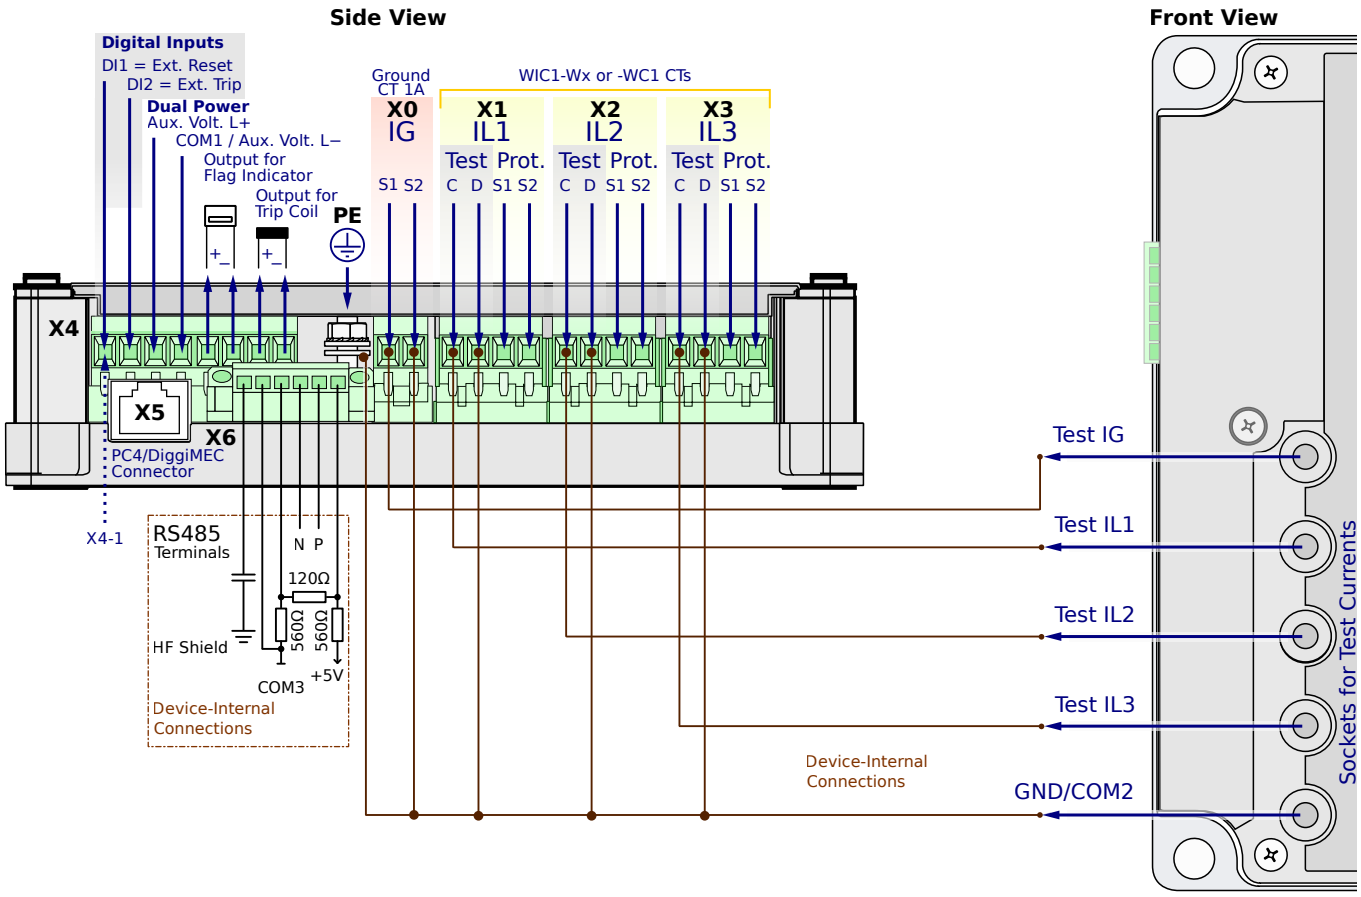


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1AC0

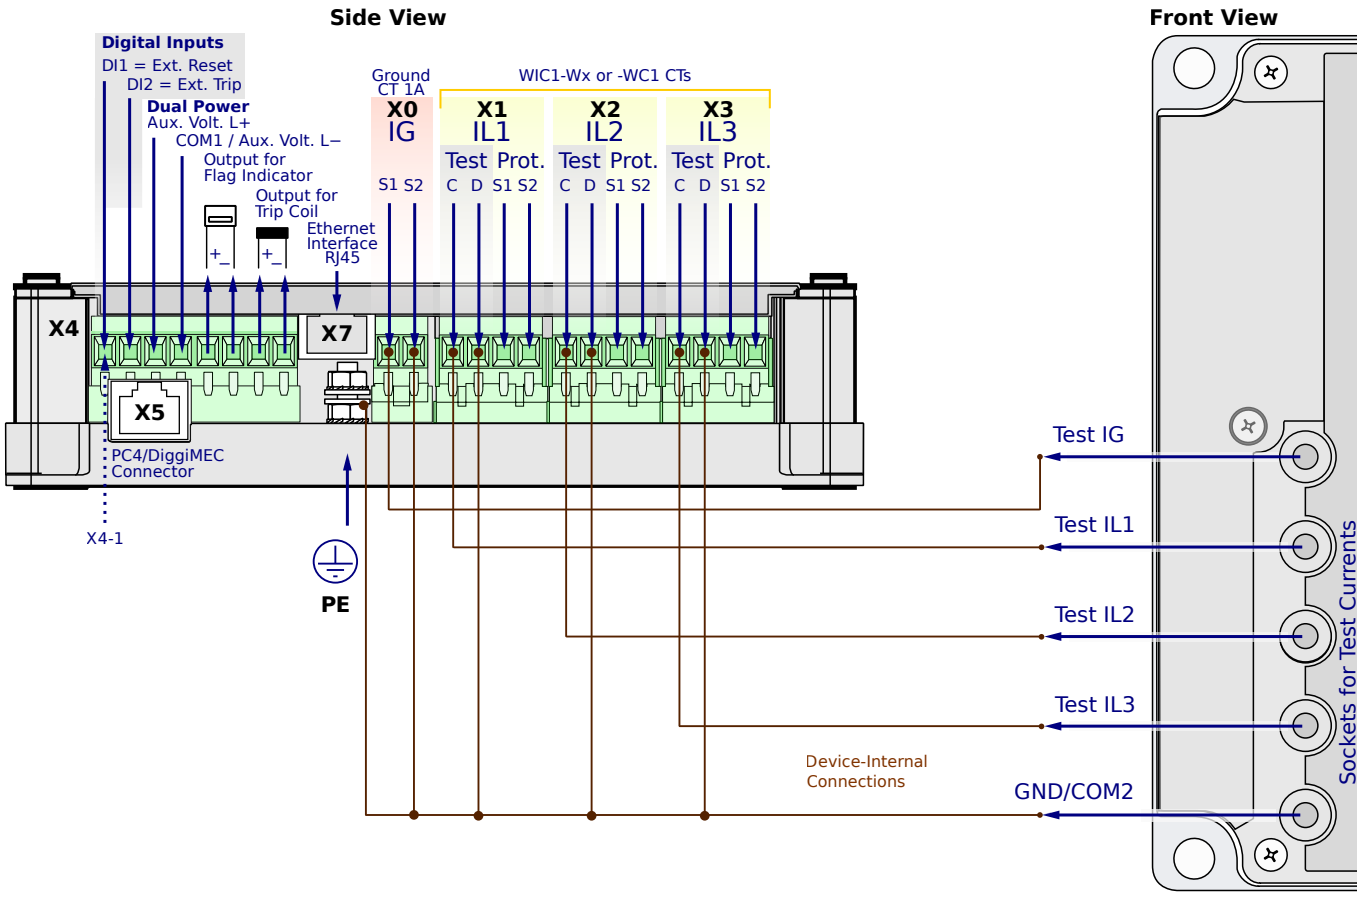


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1ACH

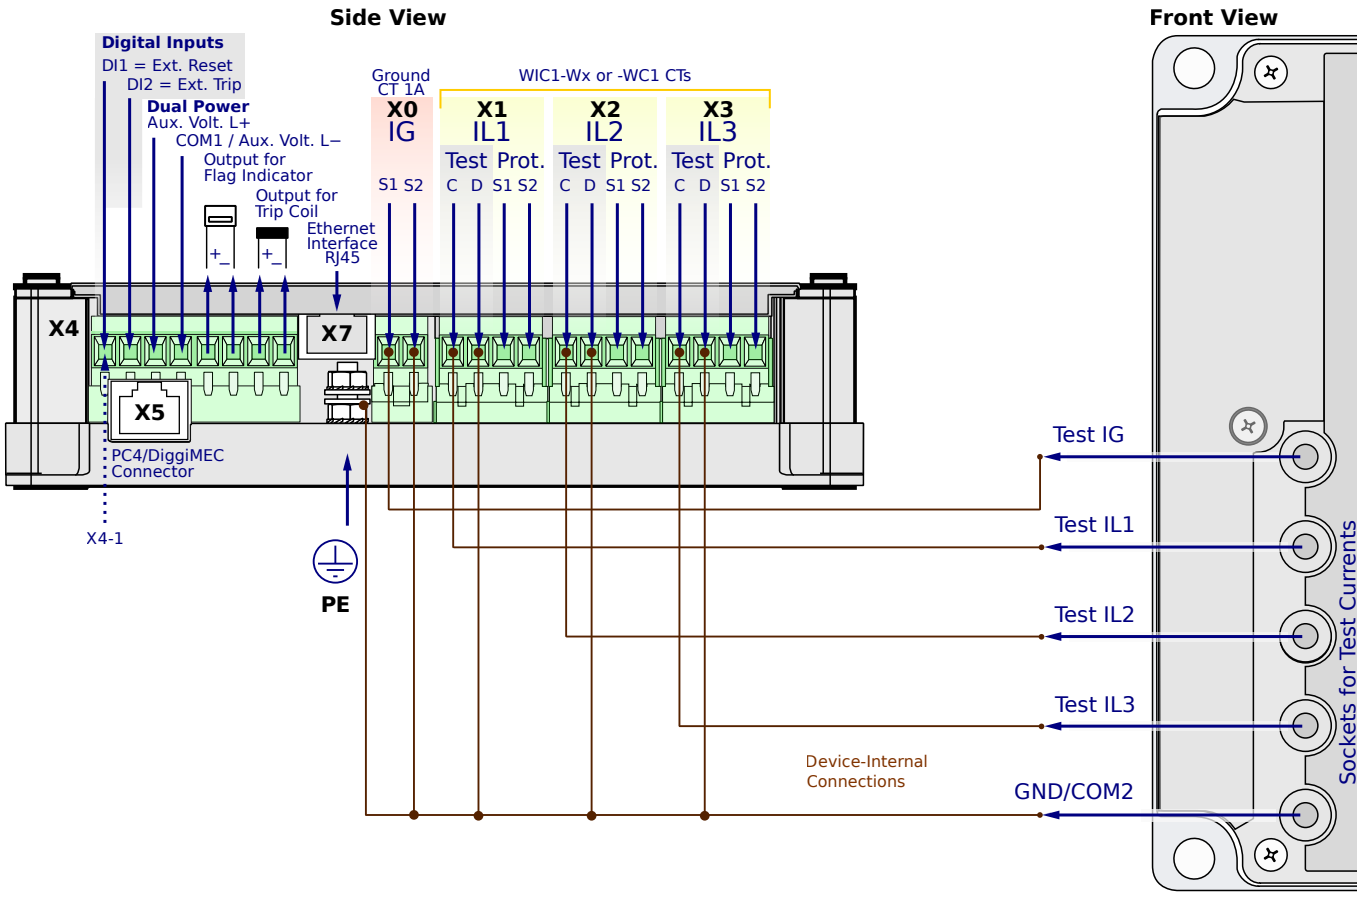


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1AL0

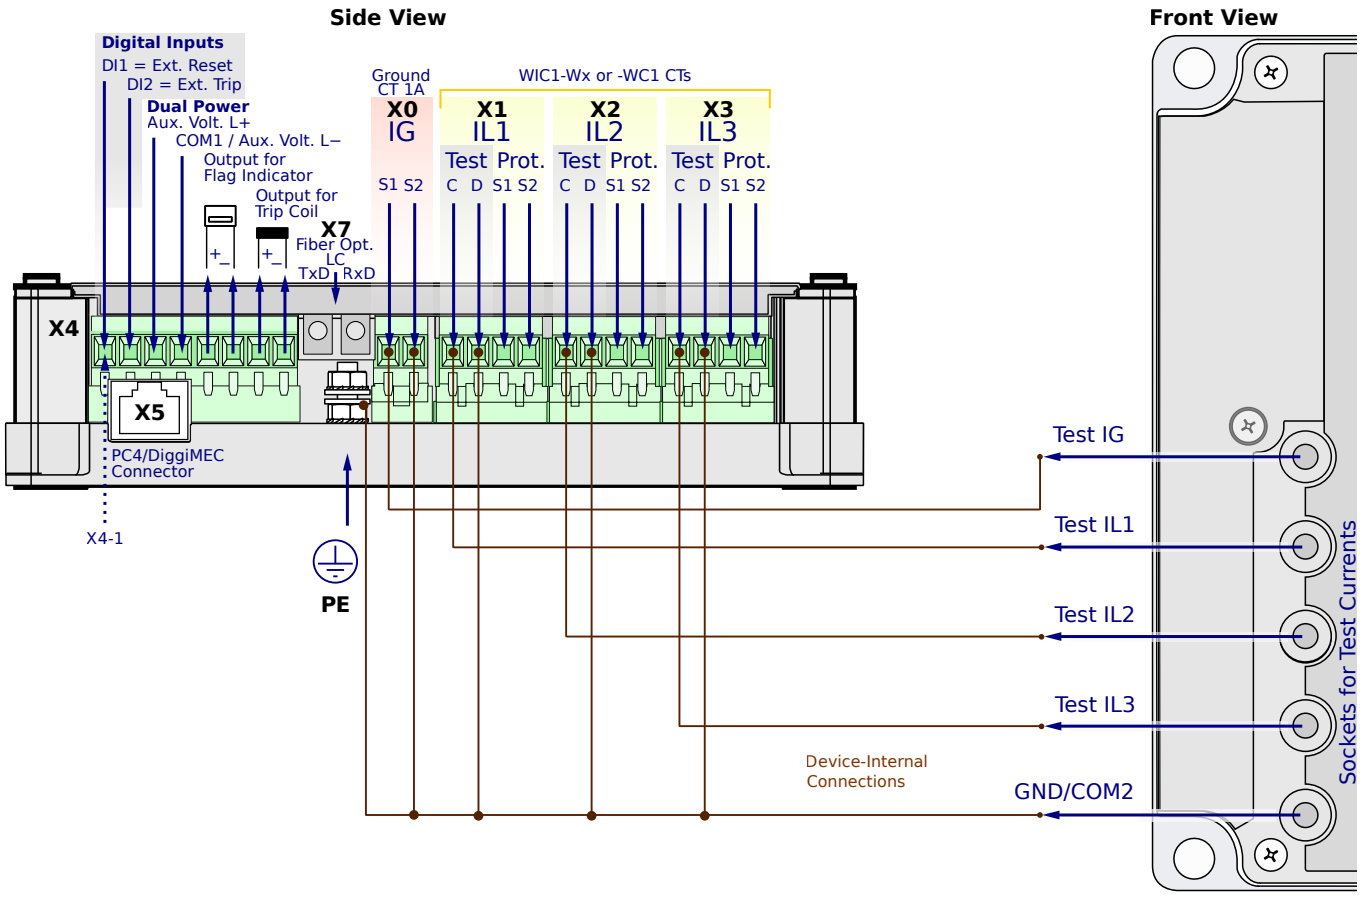


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1ALH

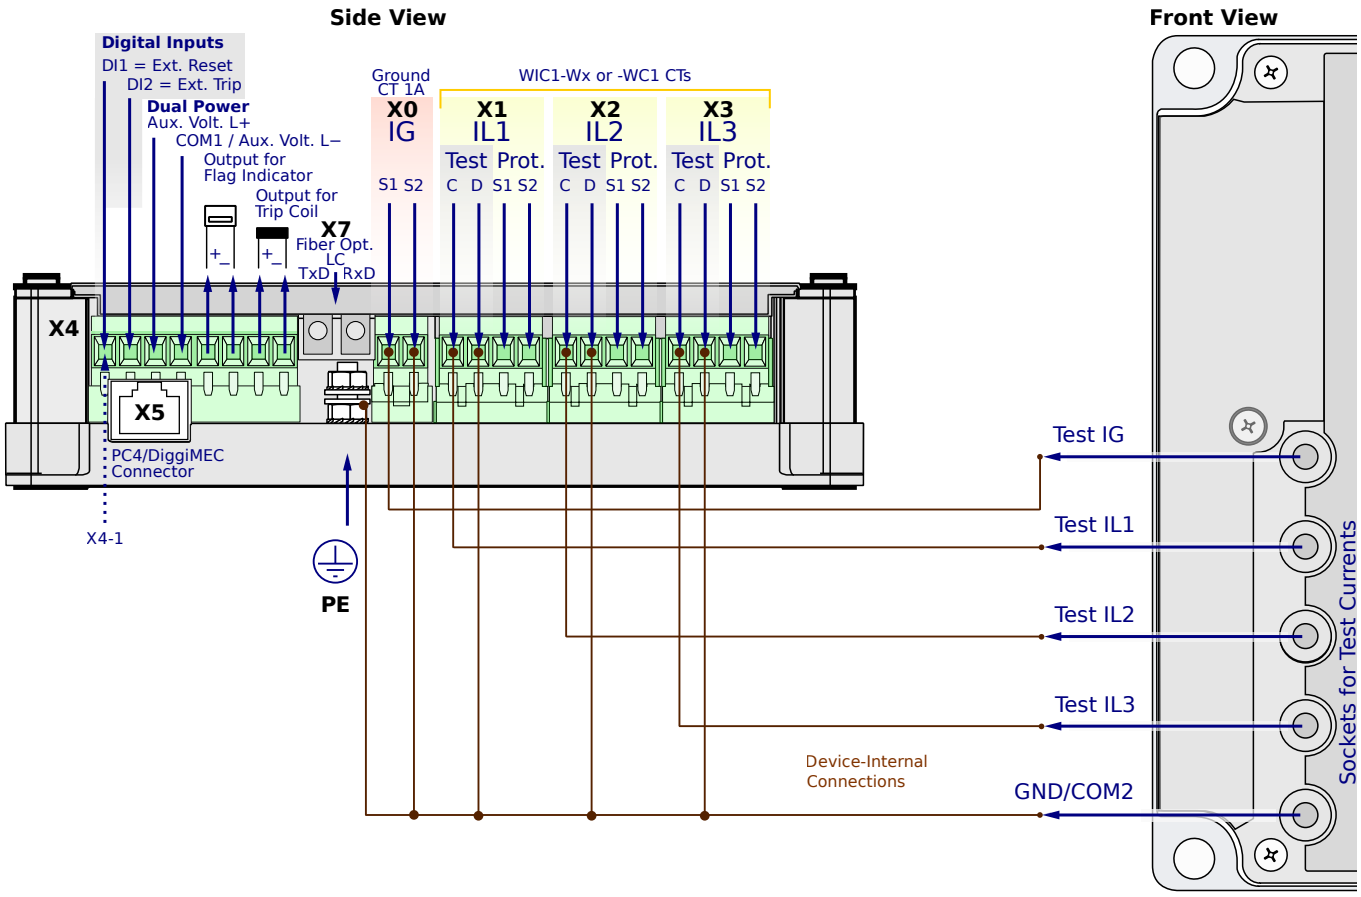


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1PA0

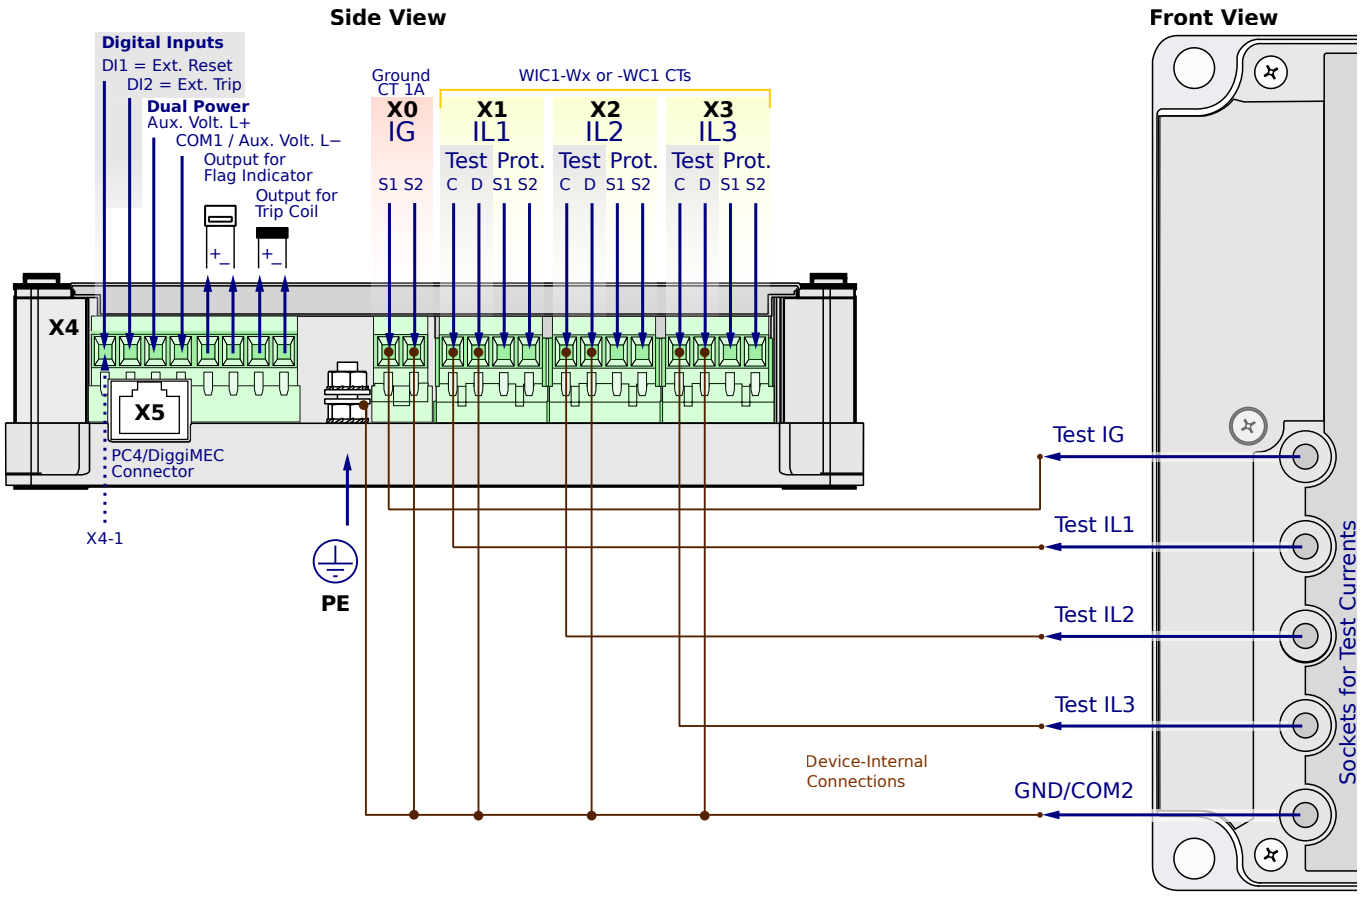


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1PAH

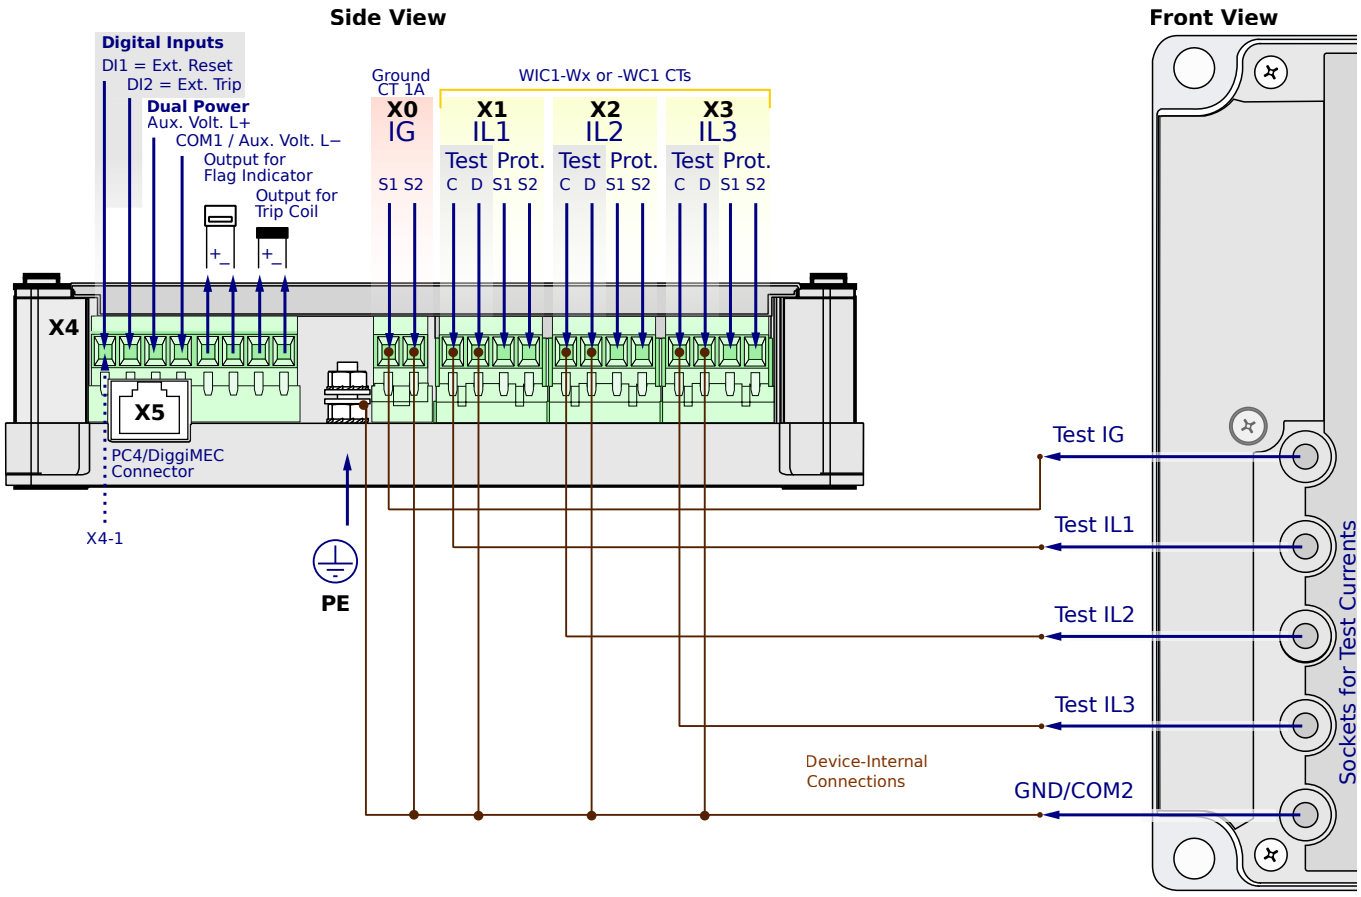


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG1PB0

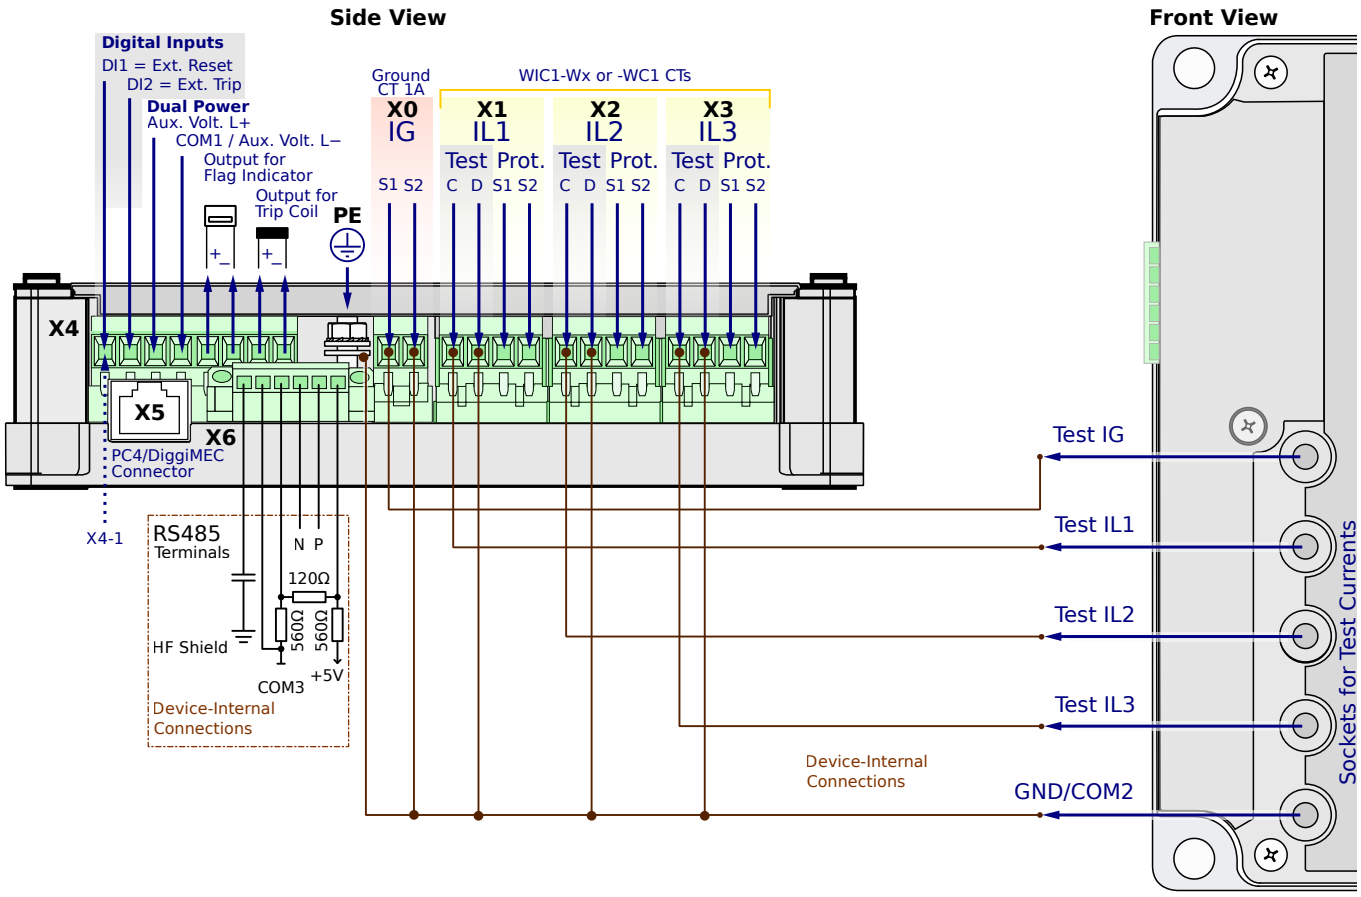


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1PBH

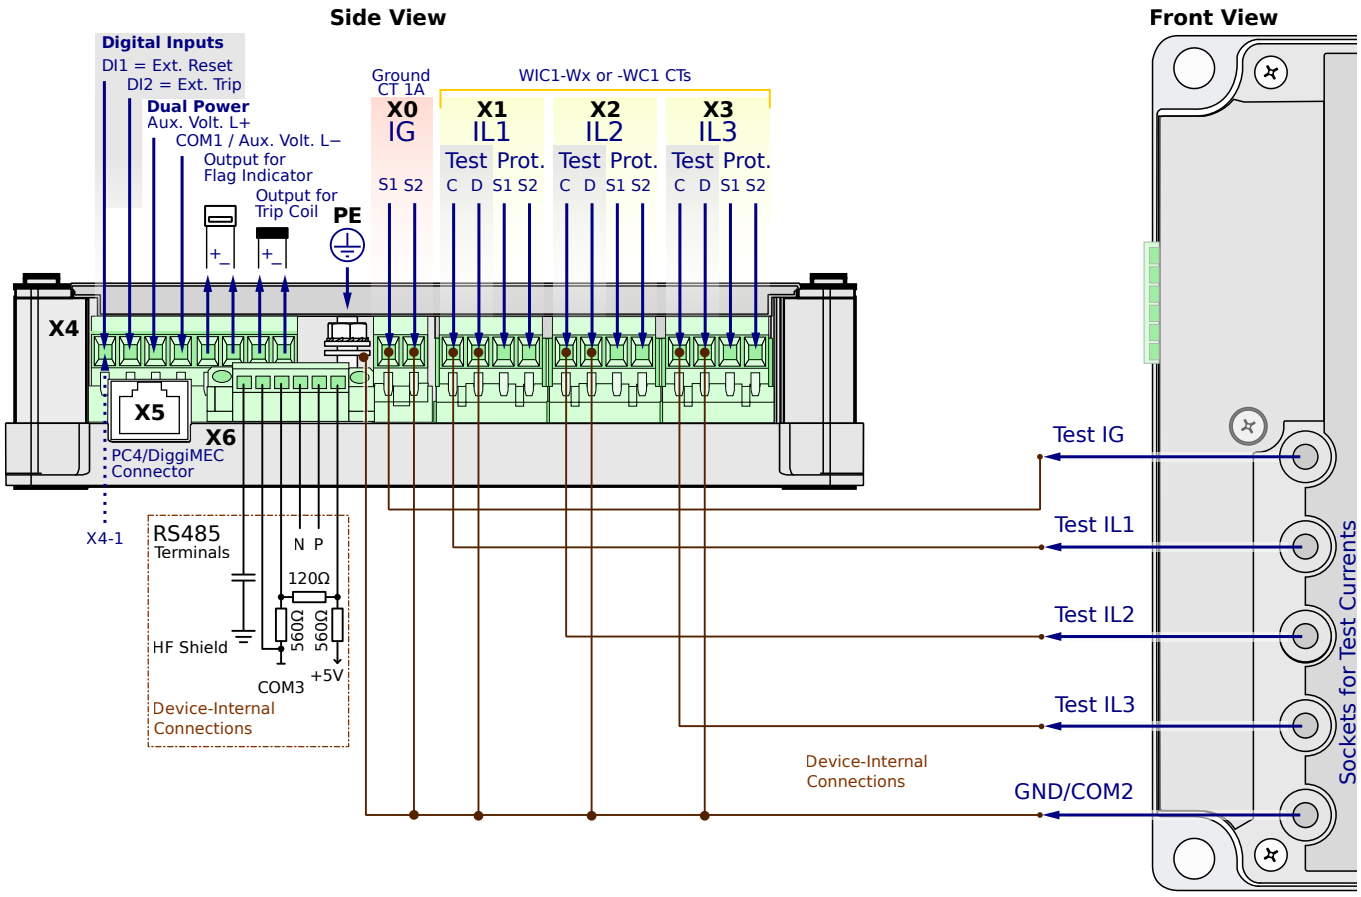


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG1PC0

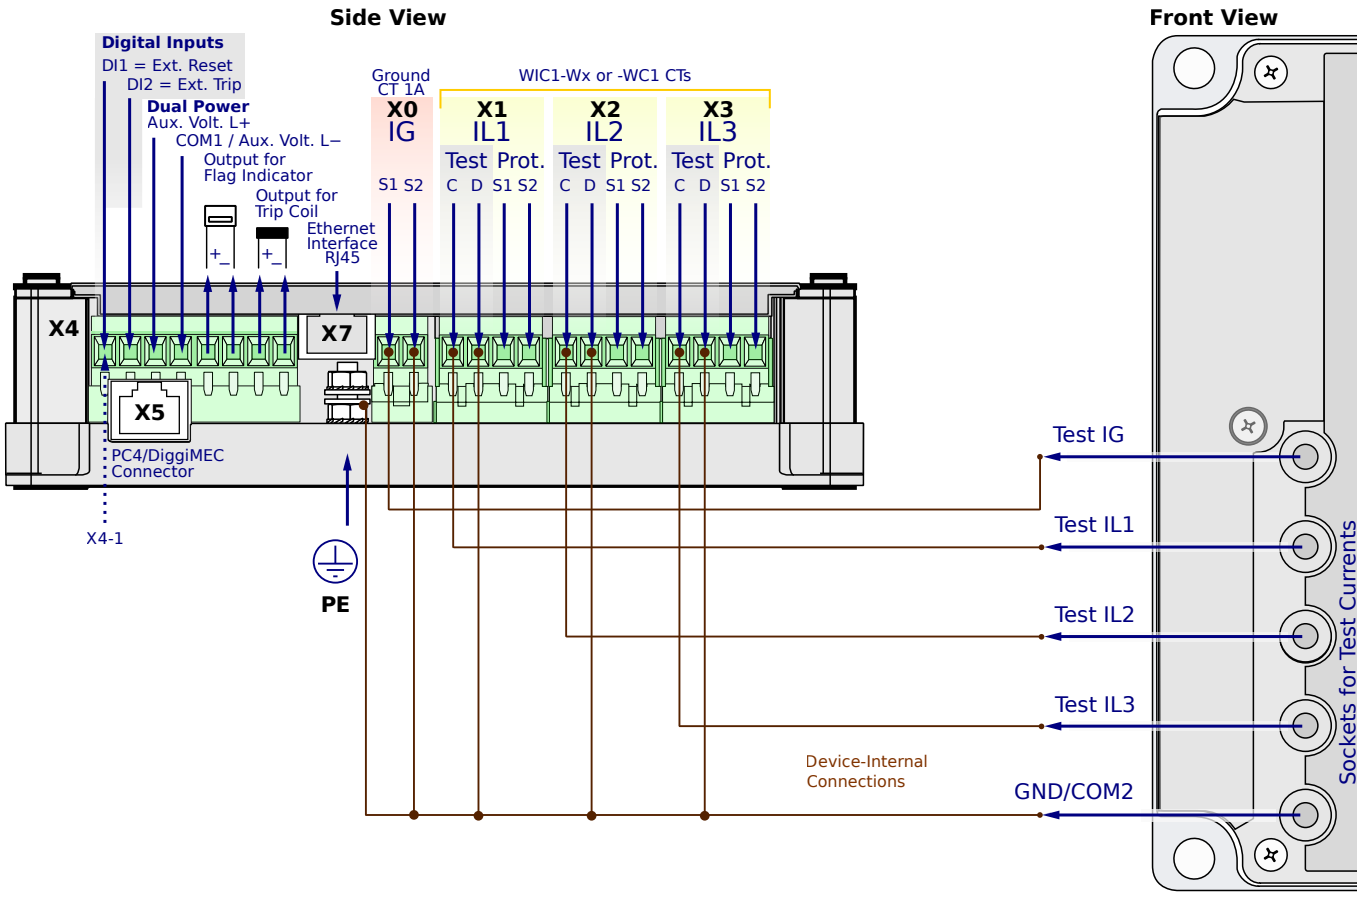


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1PCH

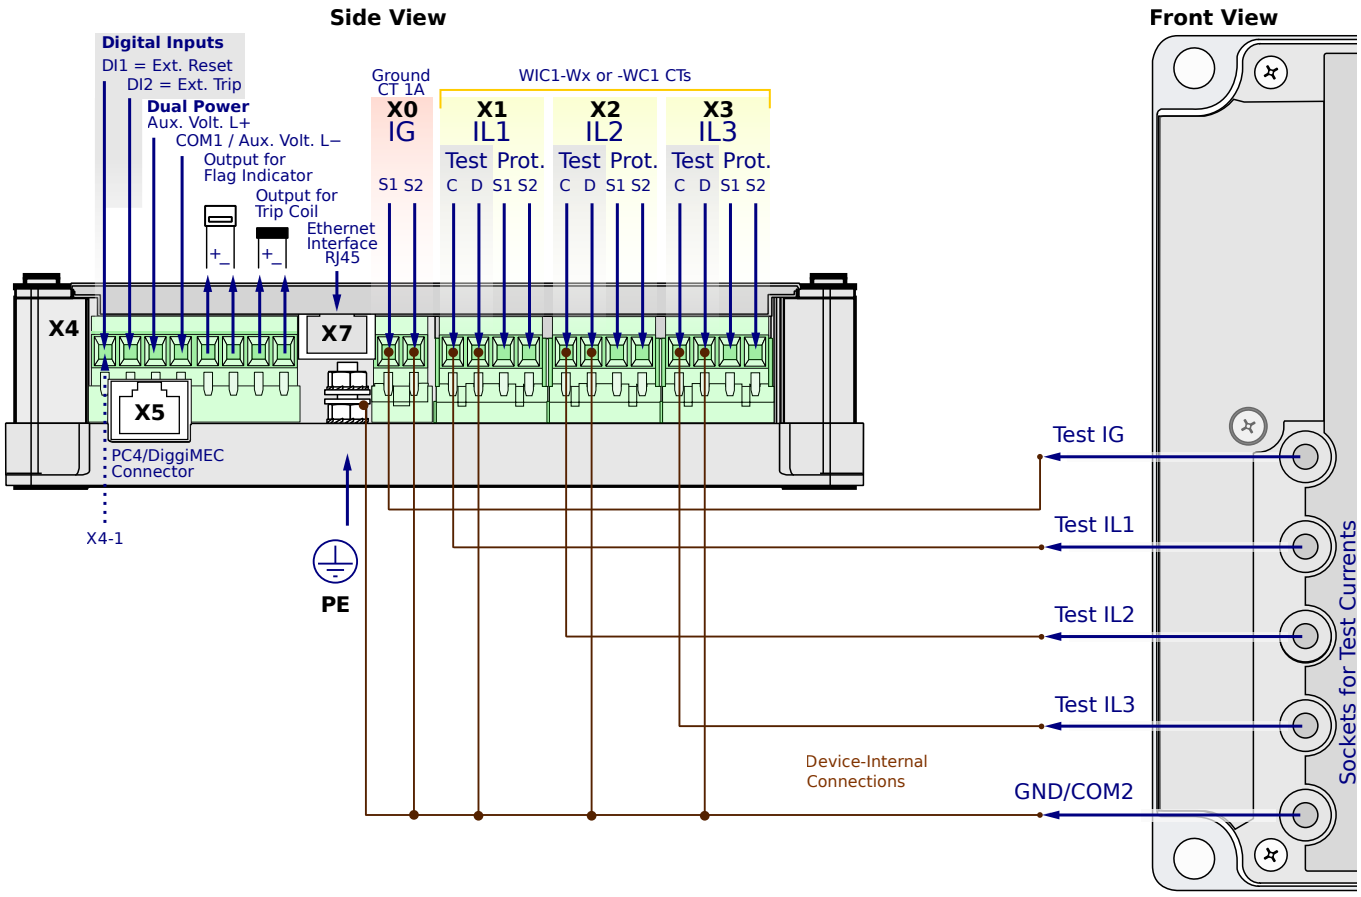


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG1PL0

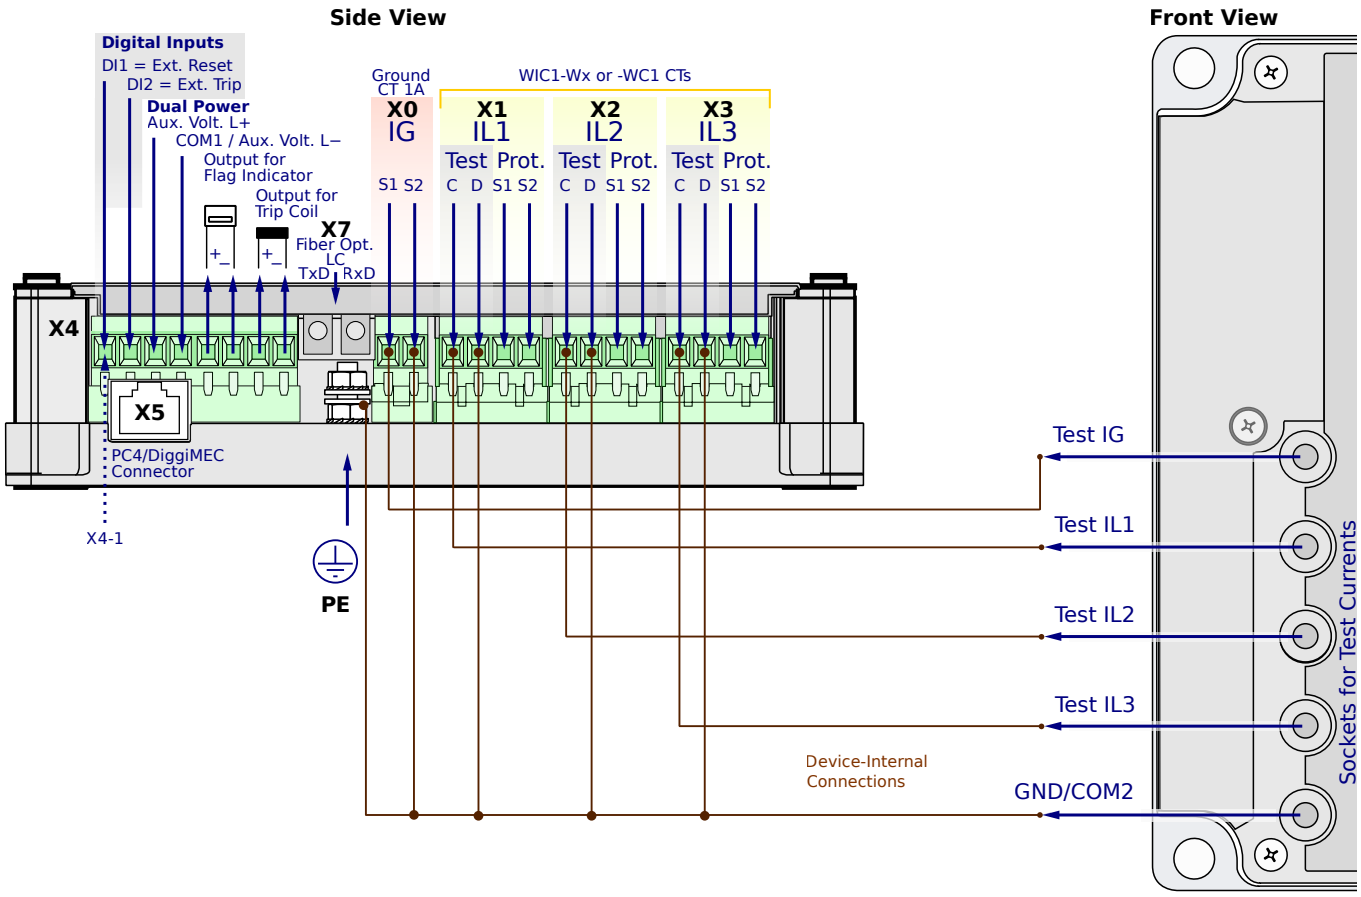


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG1PLH

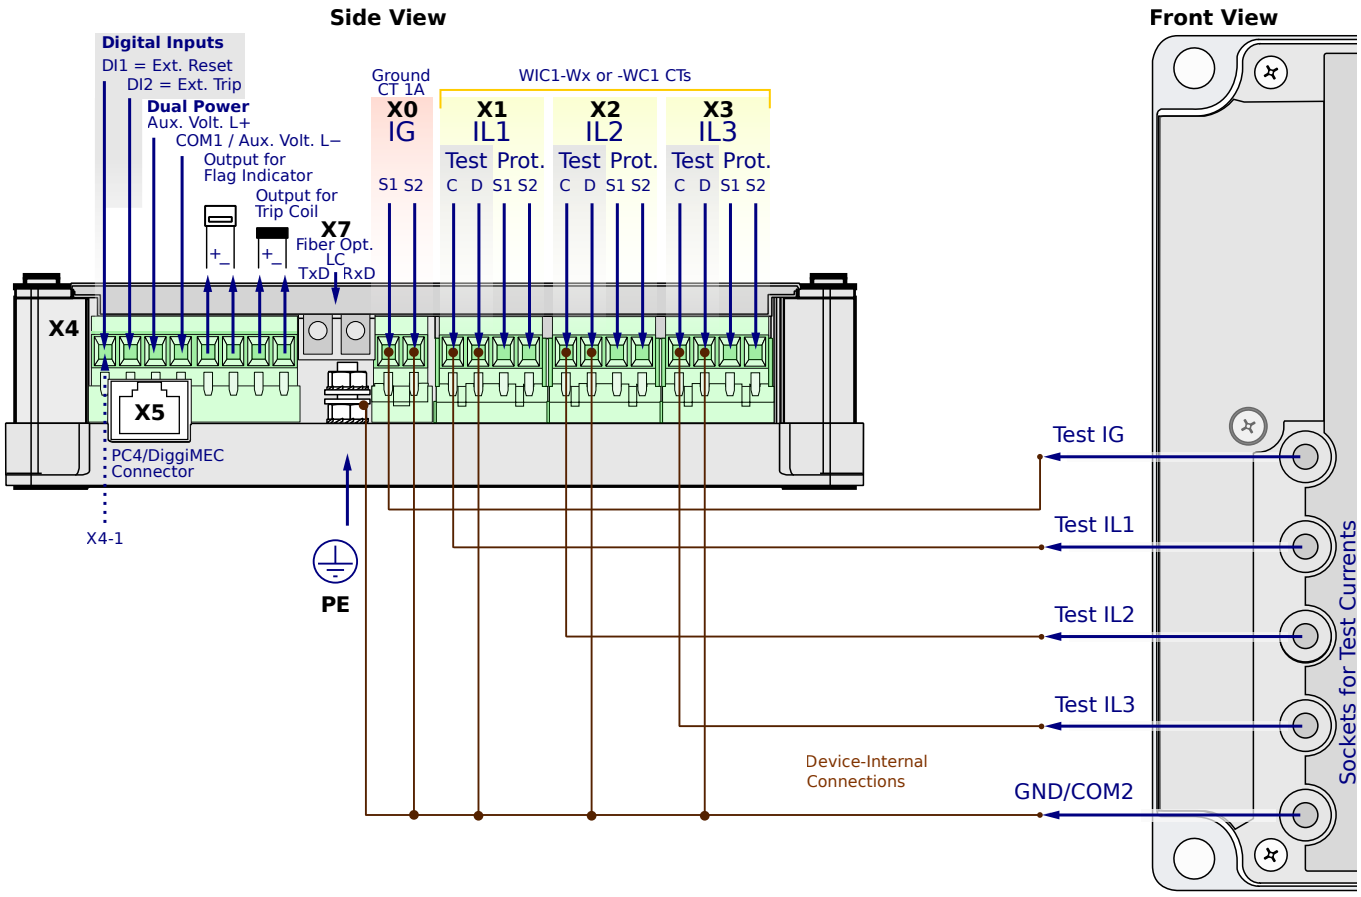


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2SA0

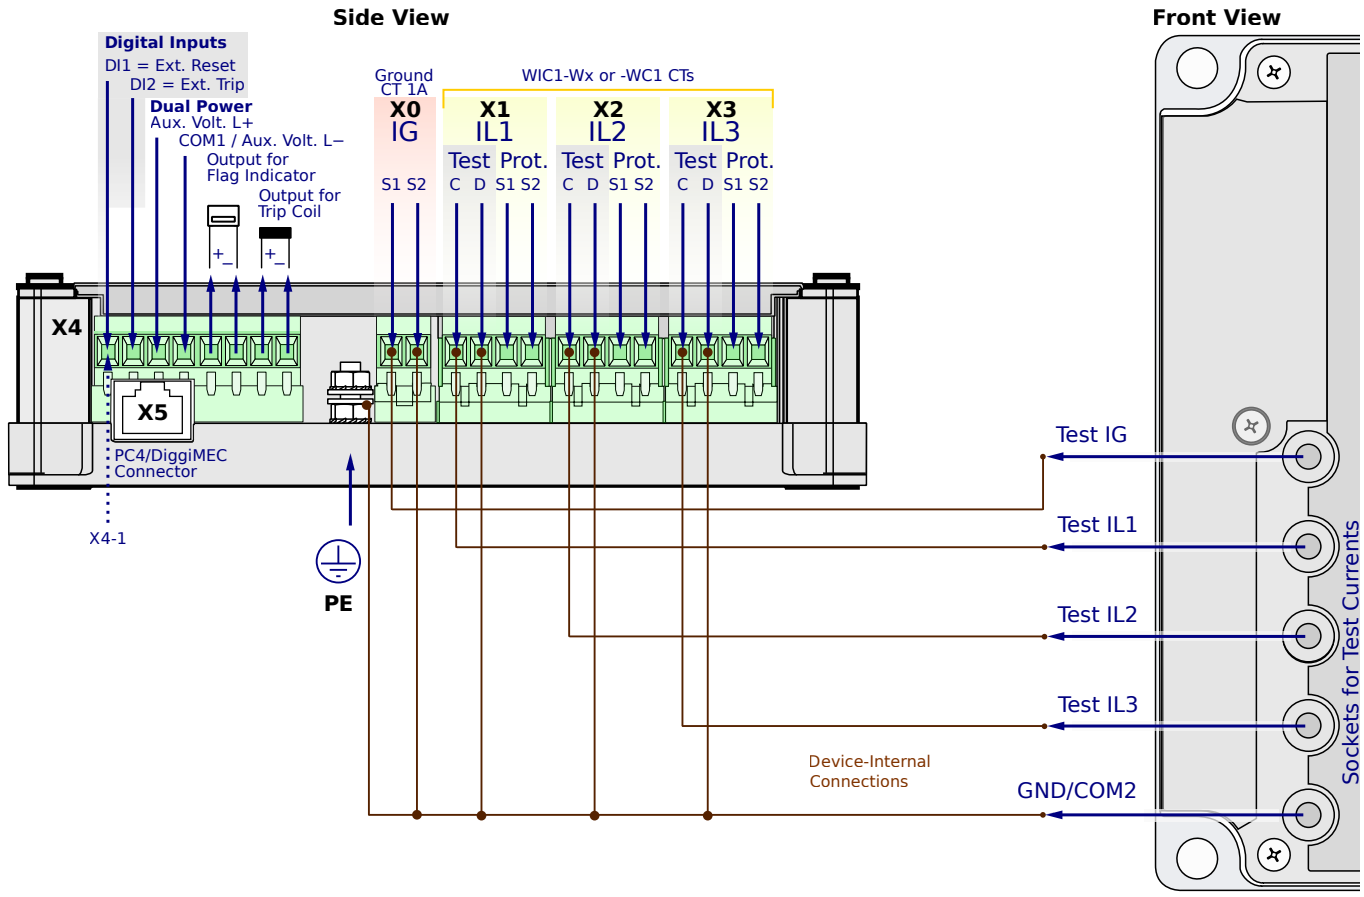


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2SAH

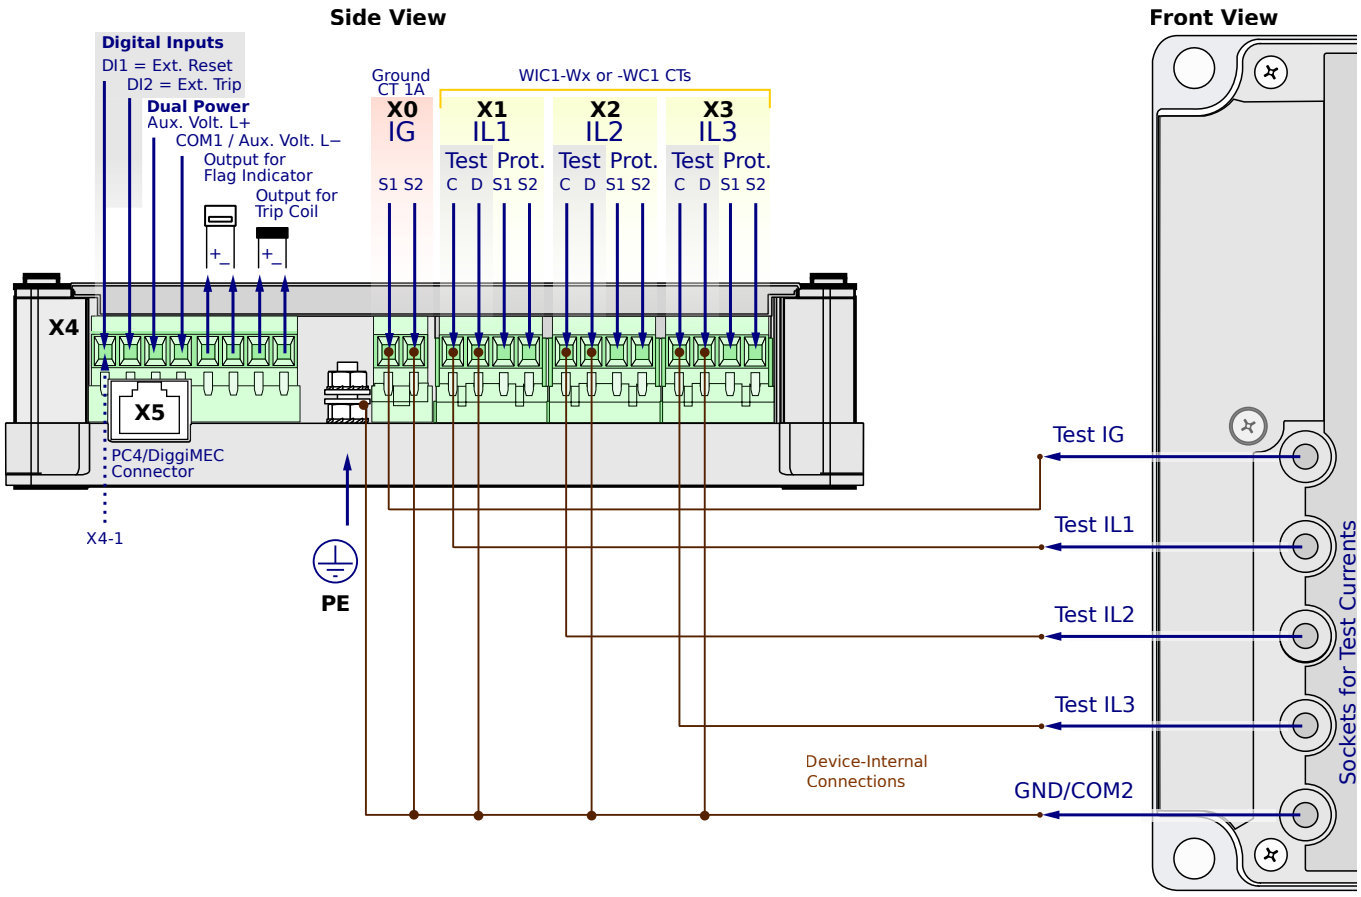


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2SB0

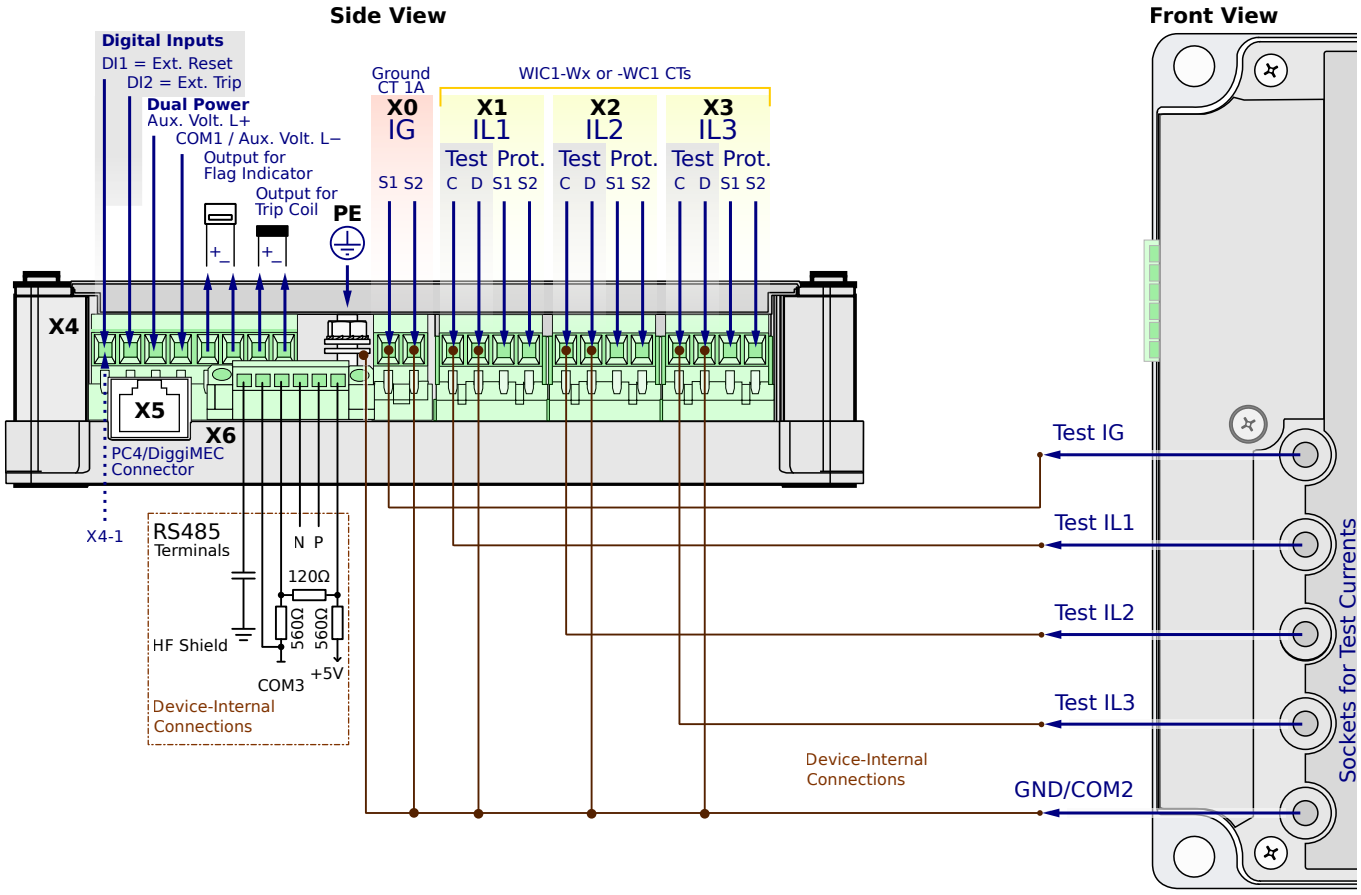


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2SBH

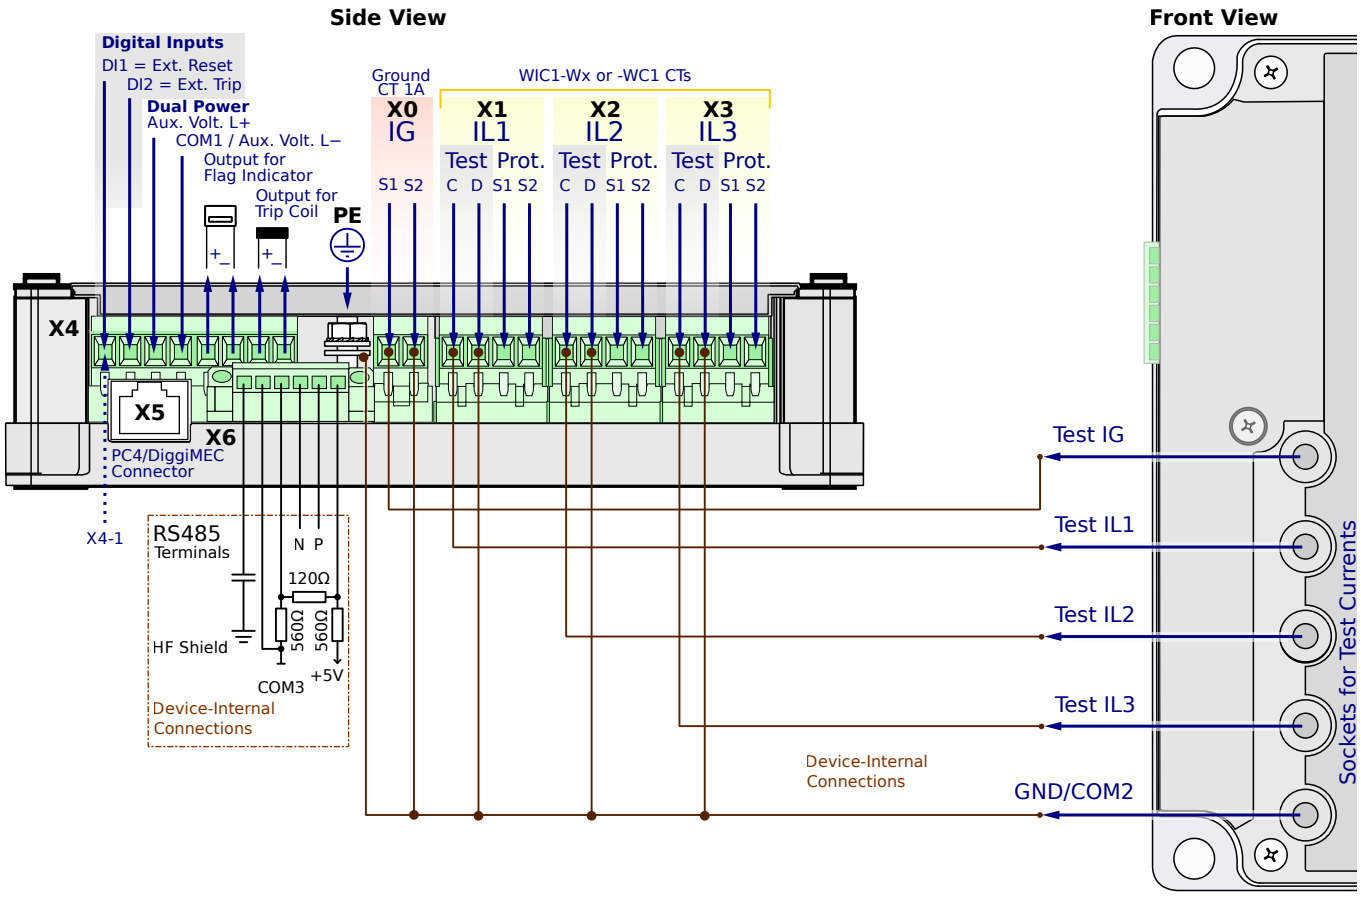


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2SC0

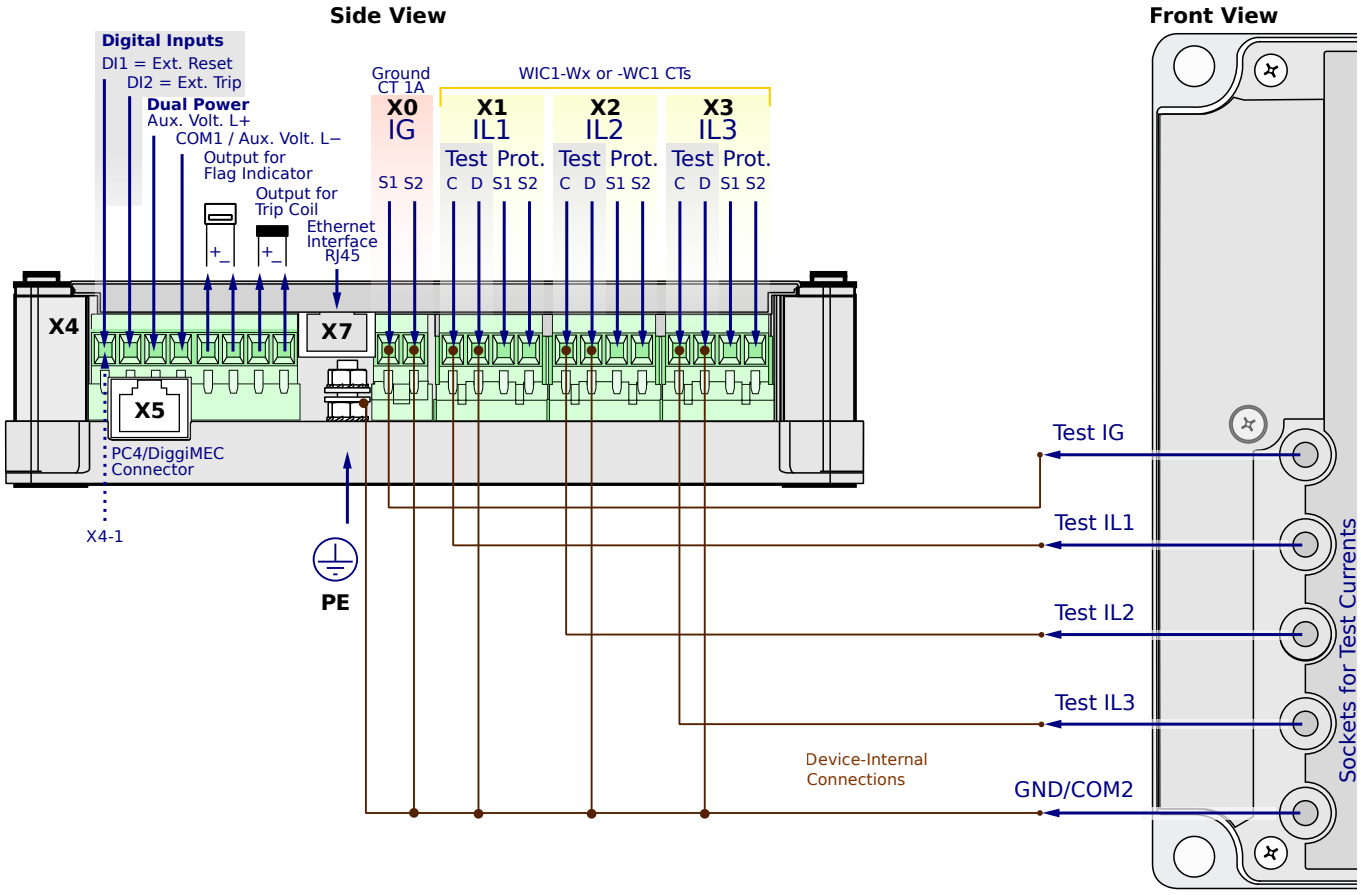


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2SCH

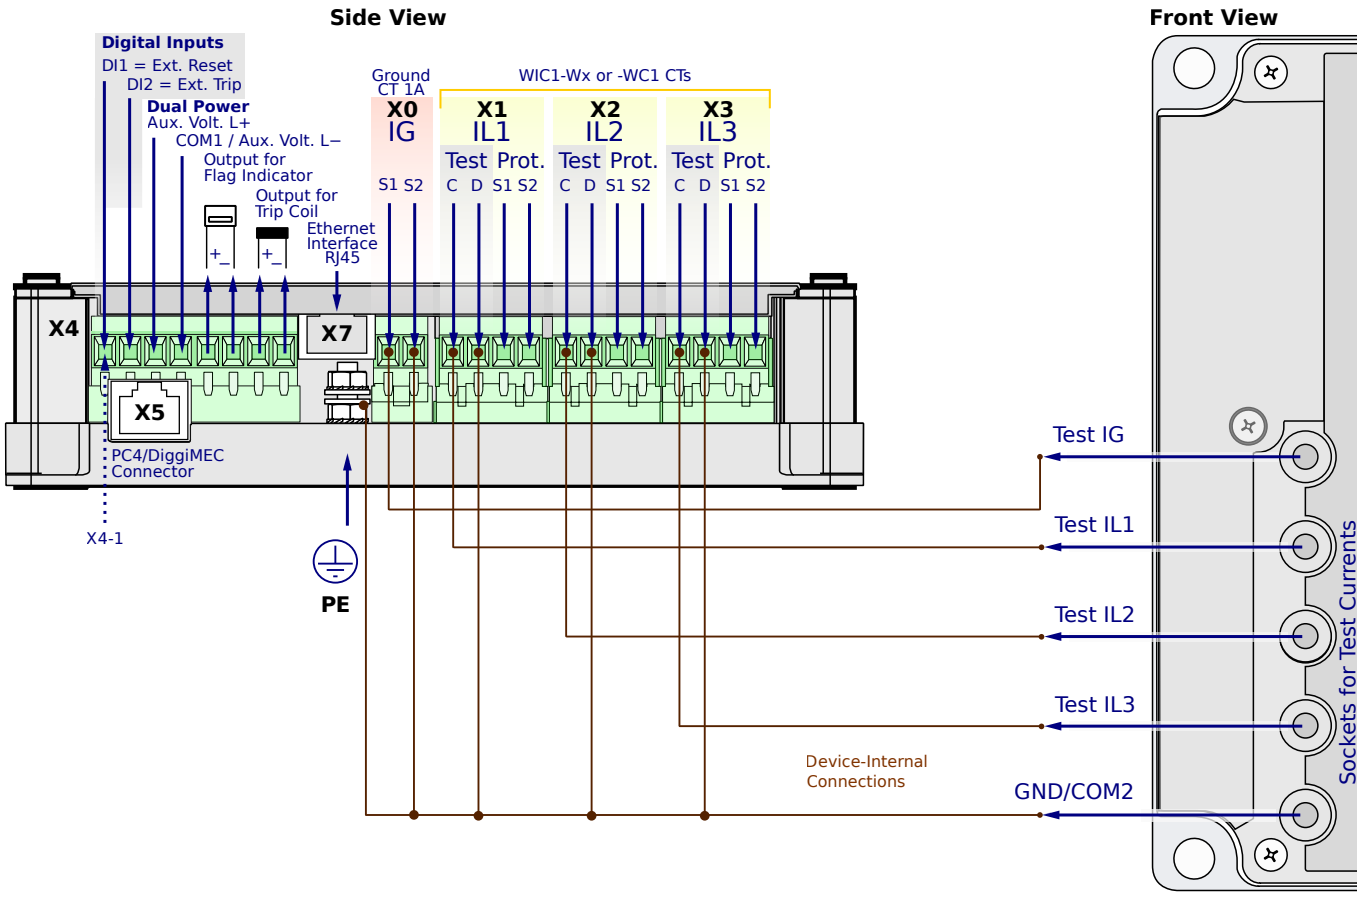


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2SL0

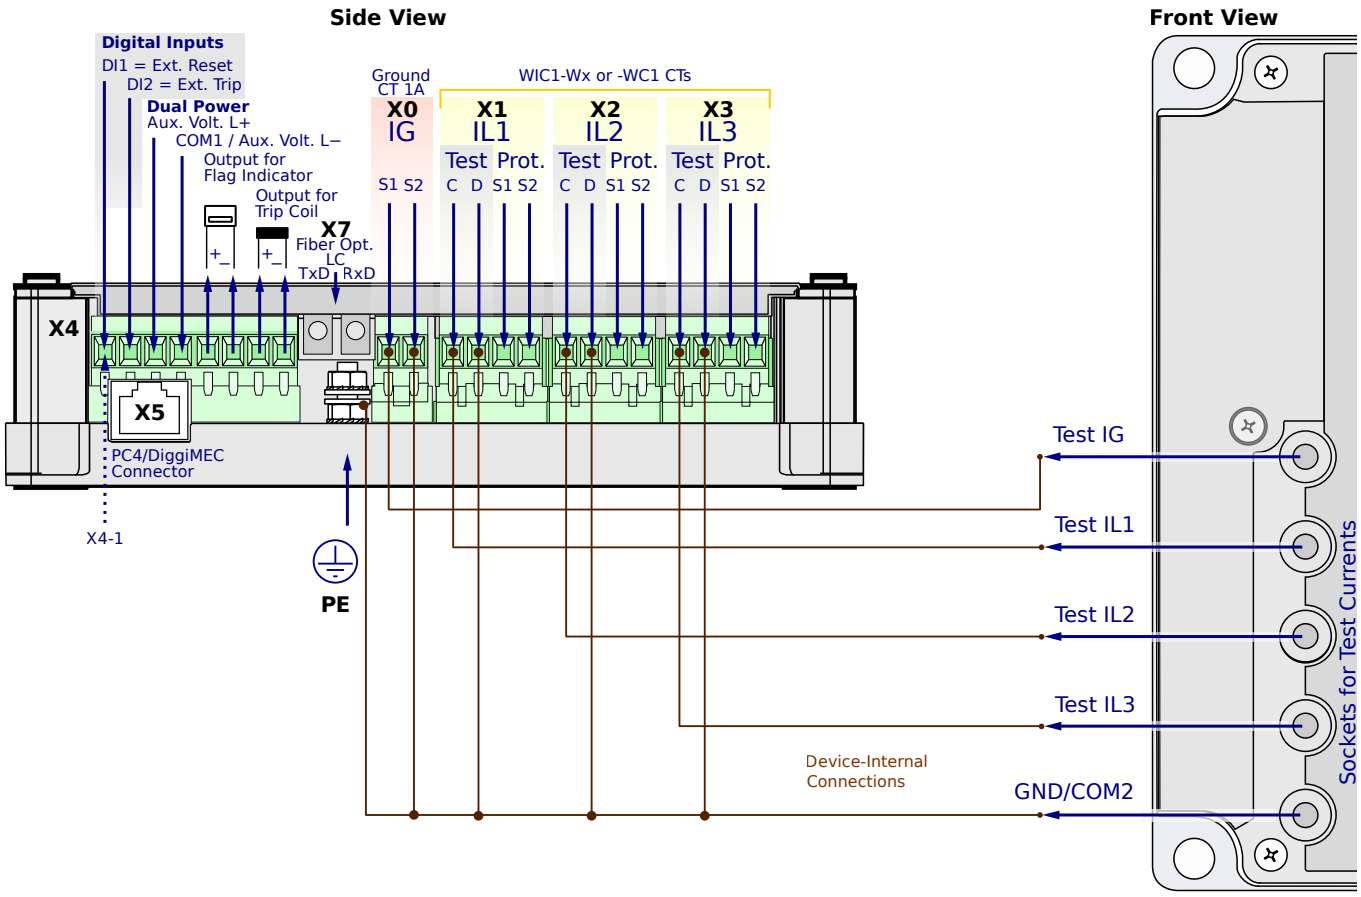


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2SLH

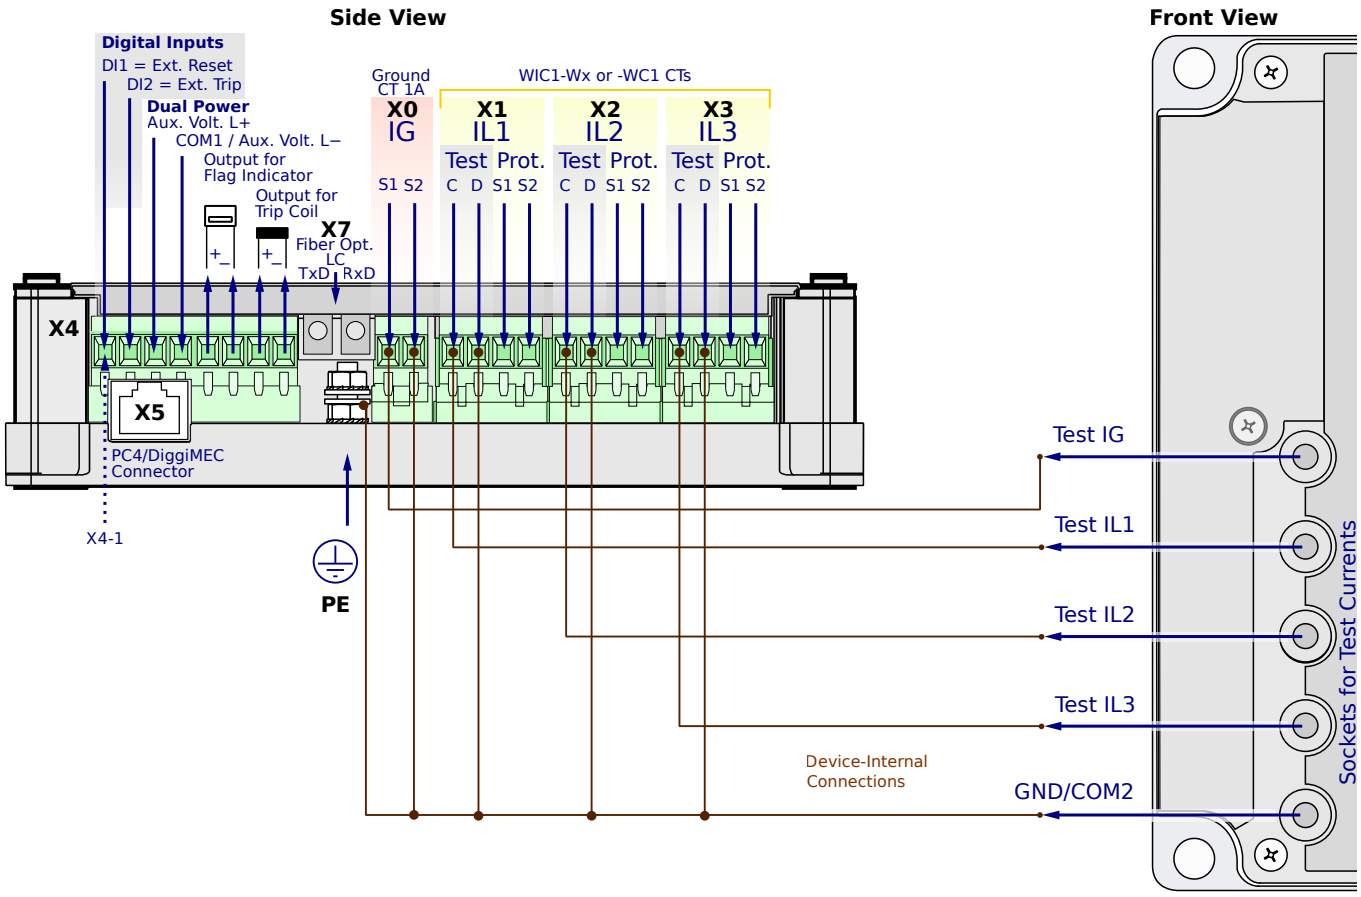


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2AA0

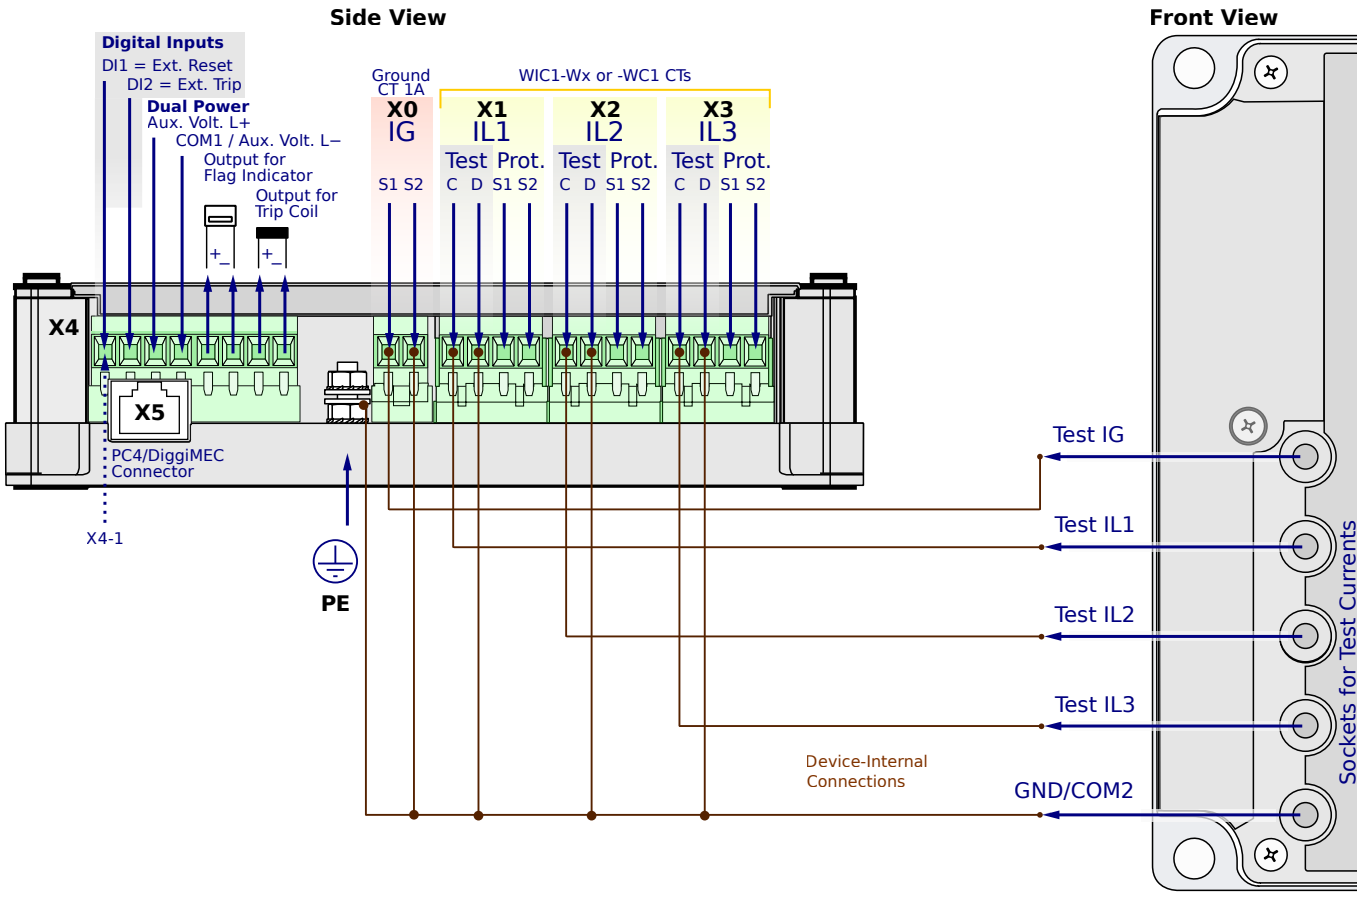


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2AAH

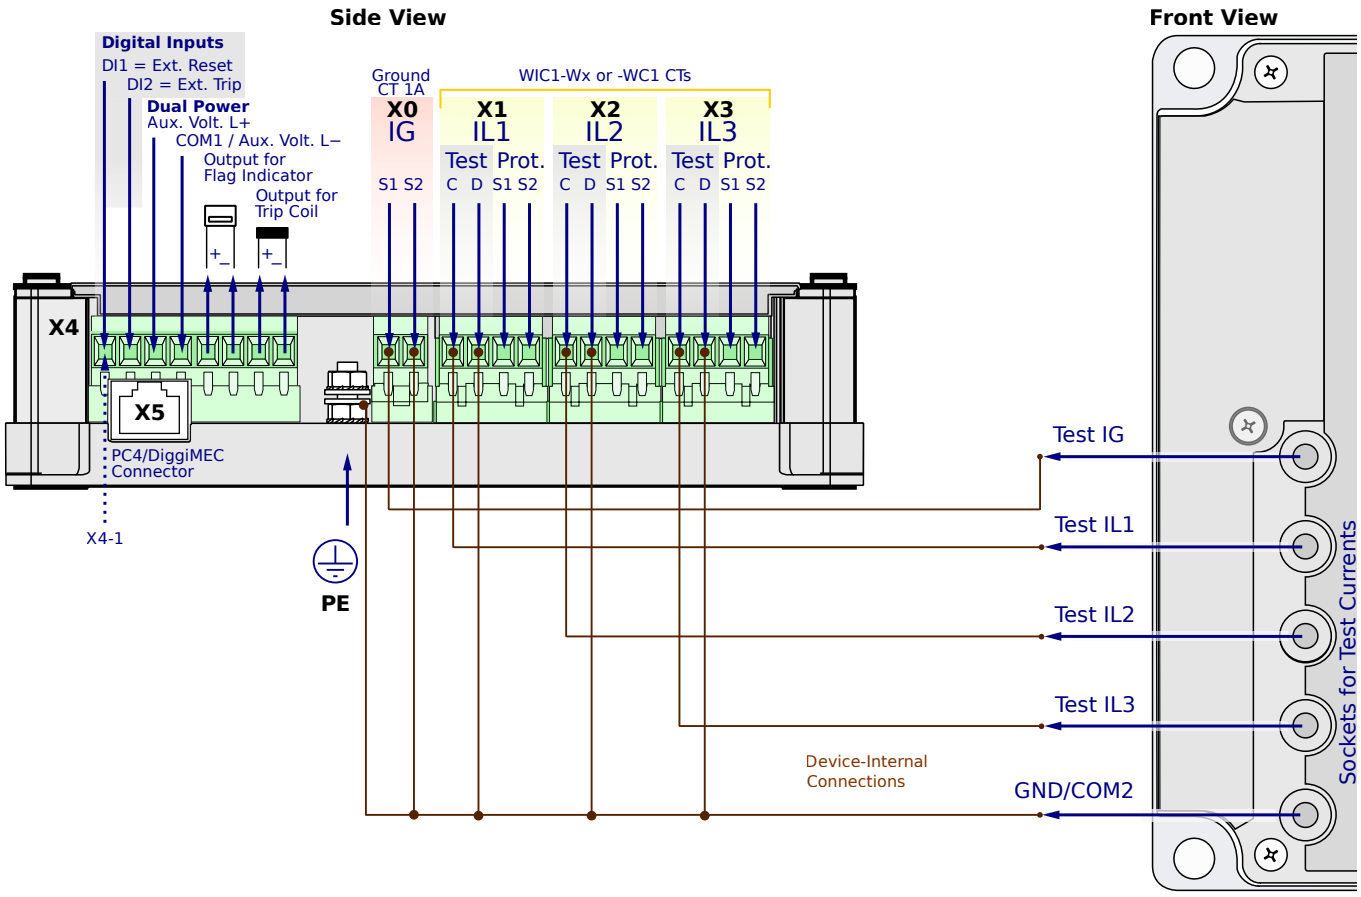


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2AB0

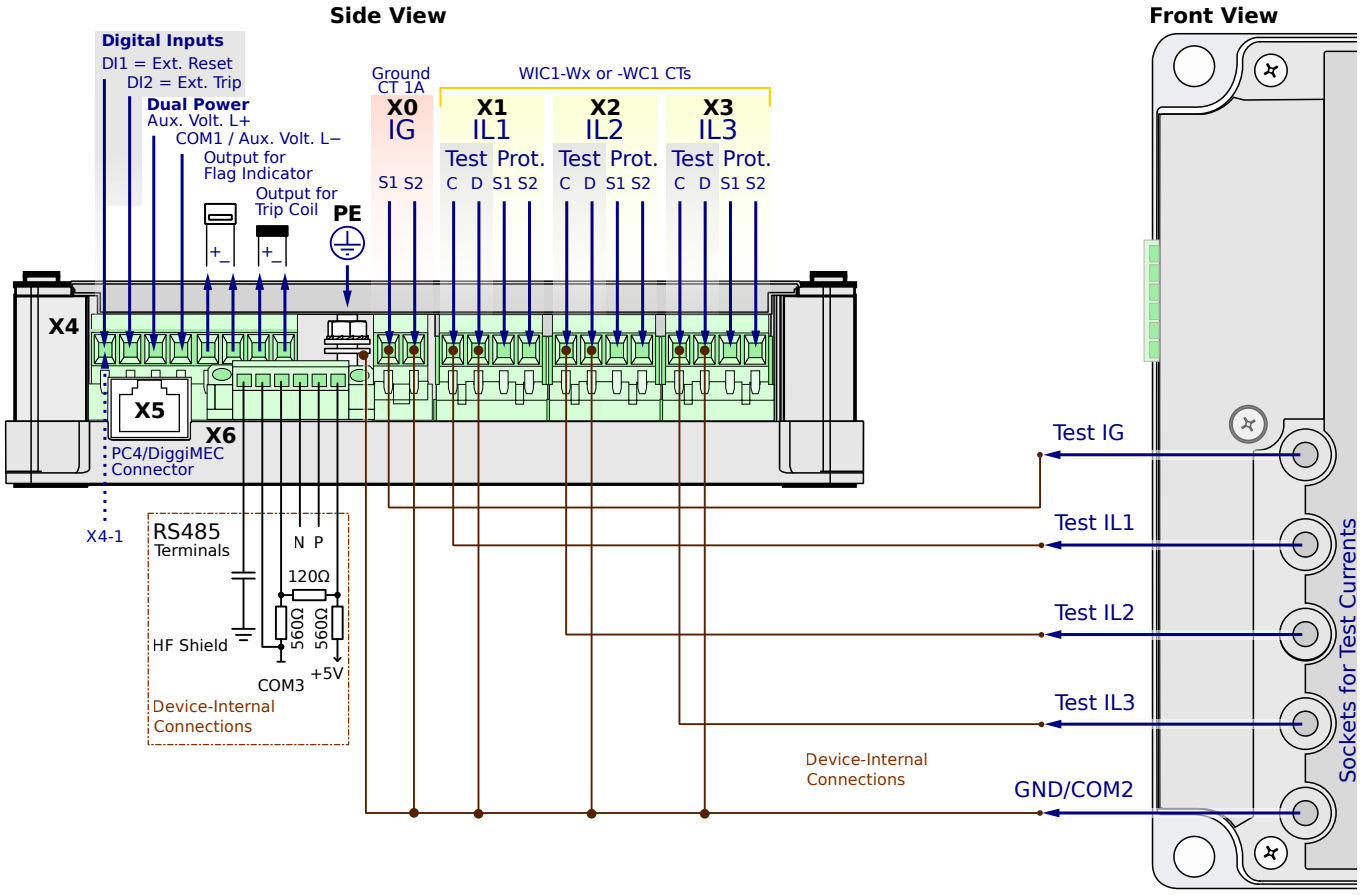


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2ABH

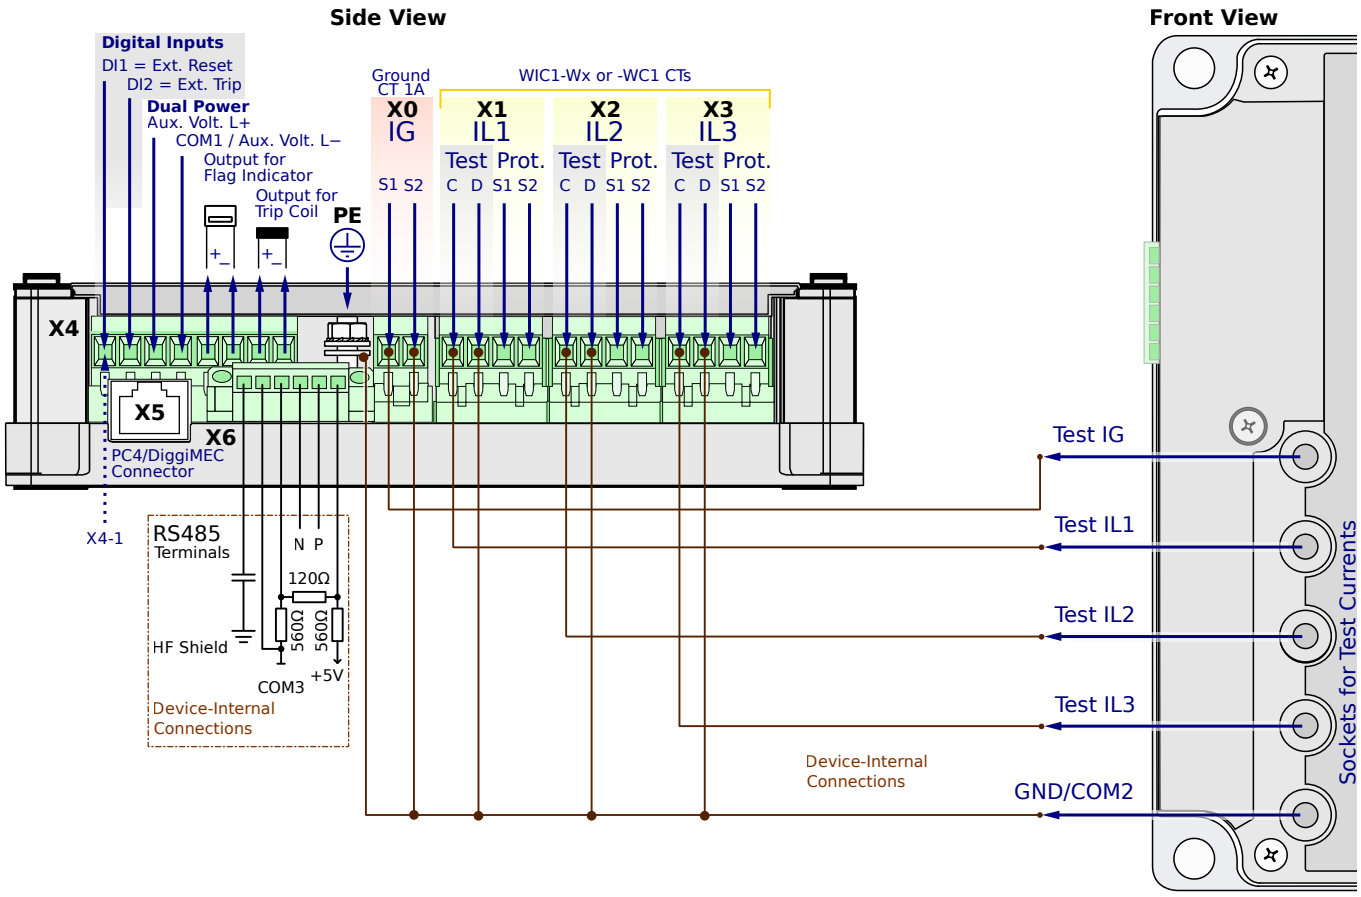


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2AC0

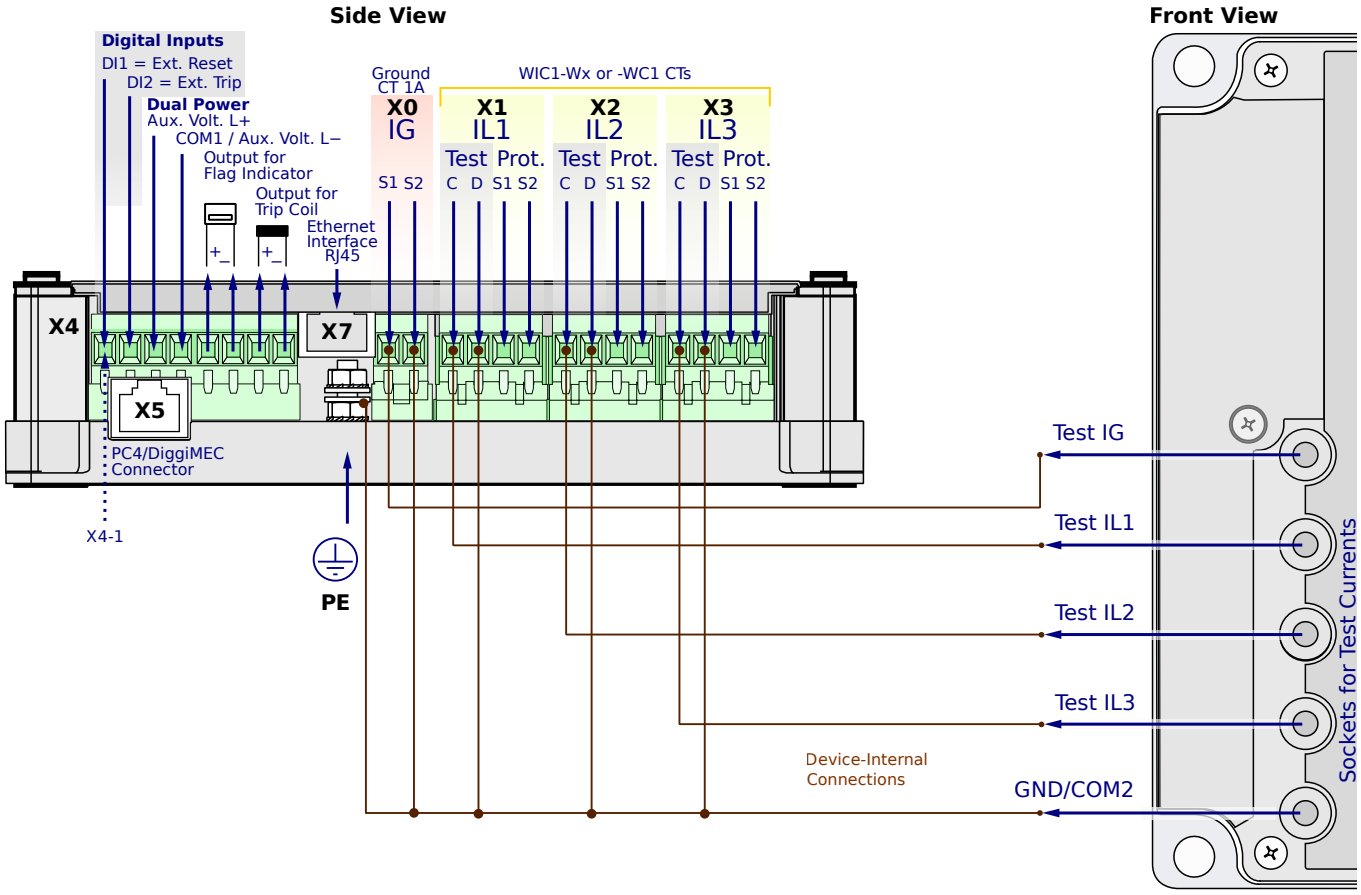


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2ACH

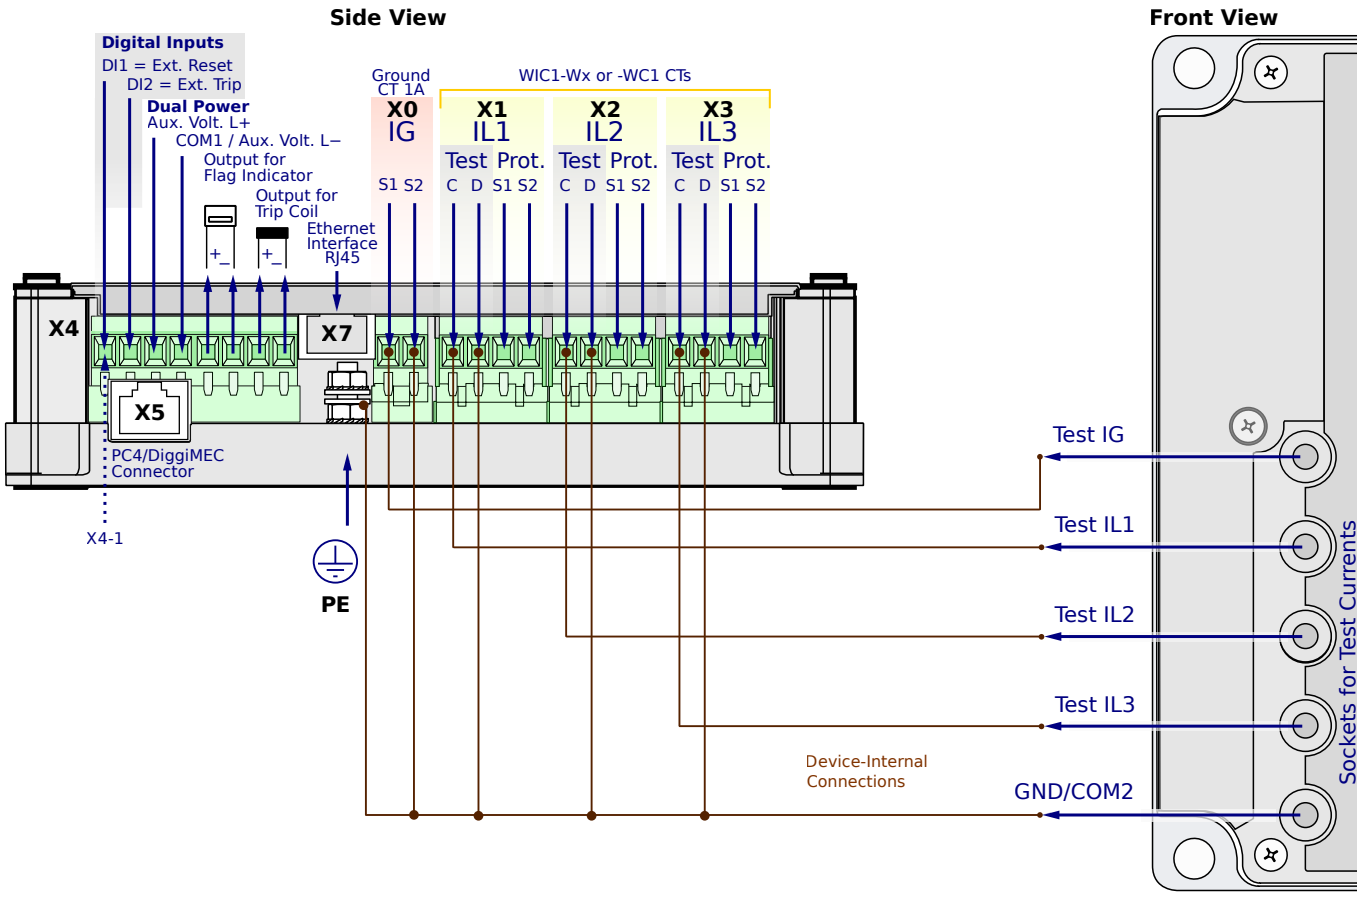


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2AL0

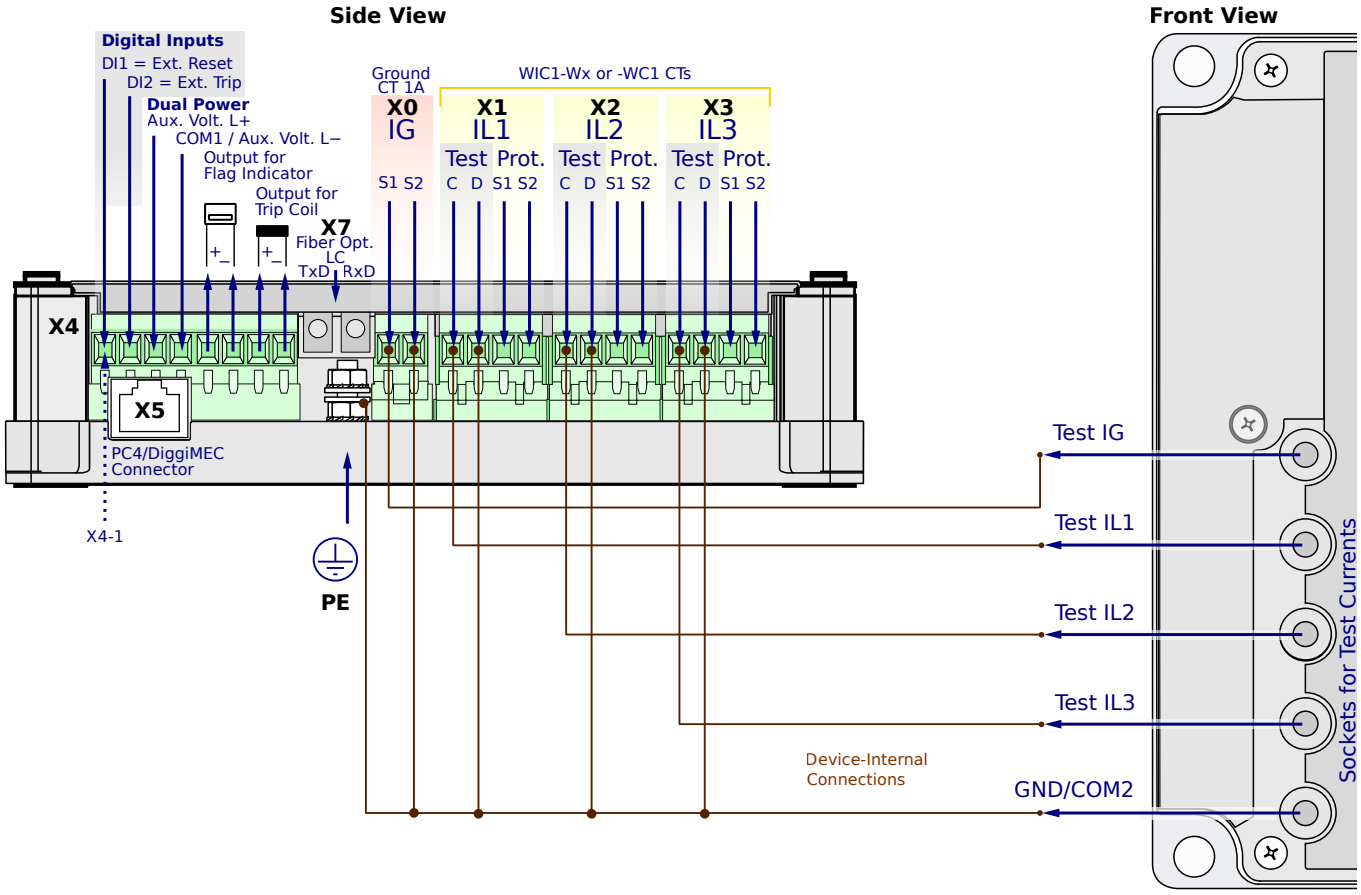


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2ALH

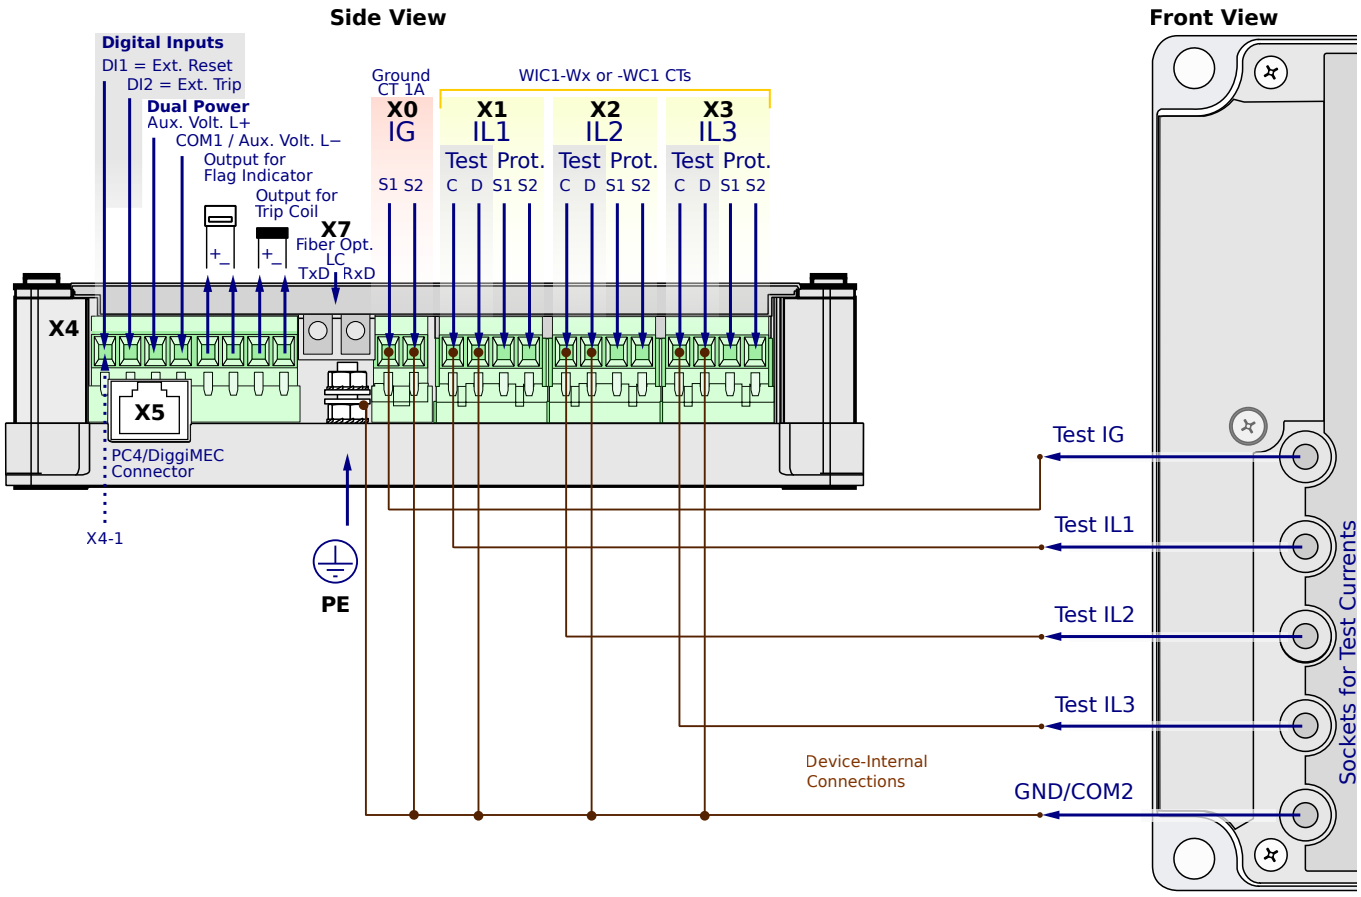


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2PA0

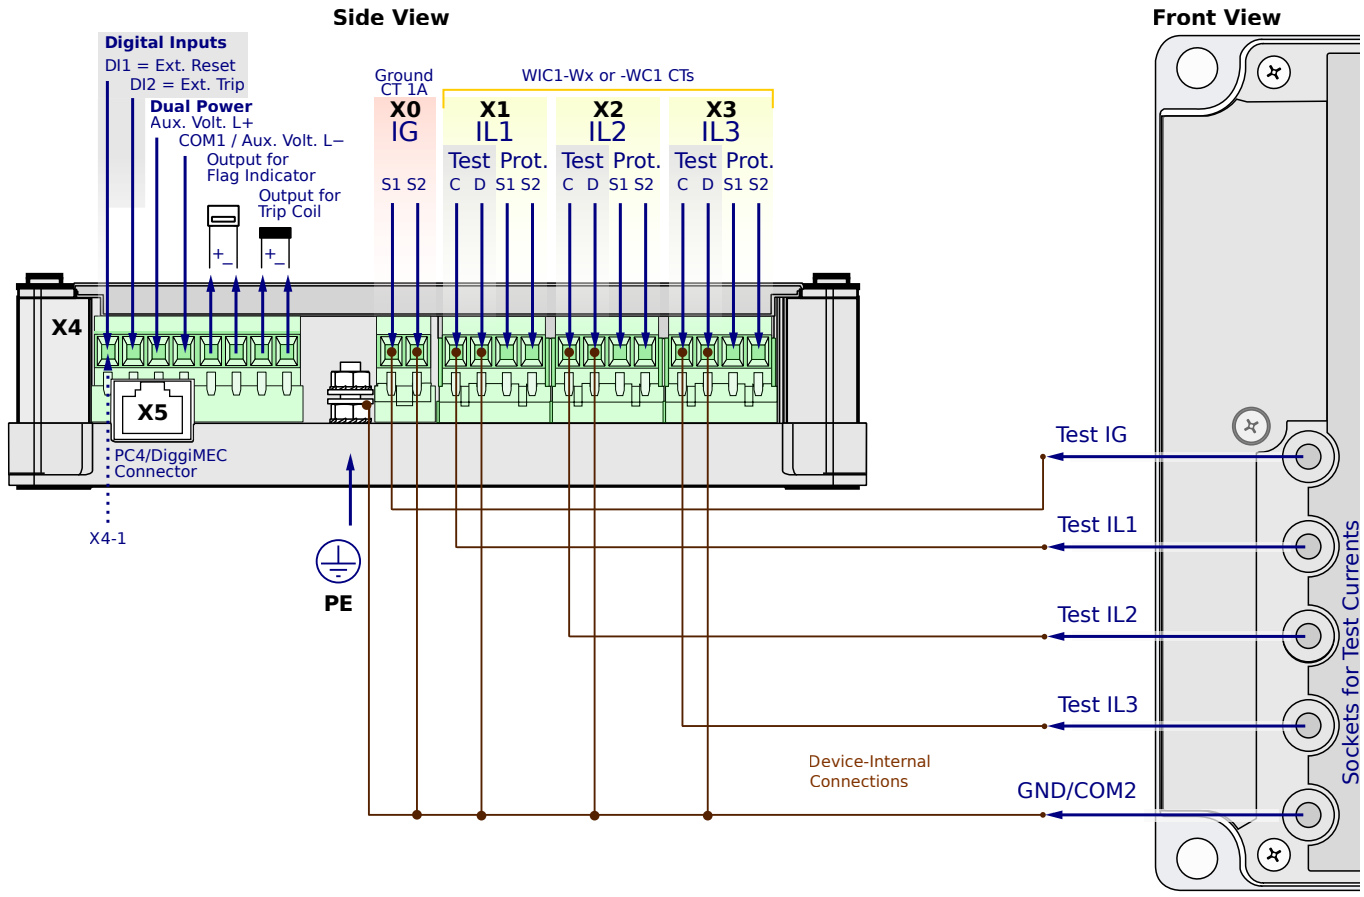


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2PAH

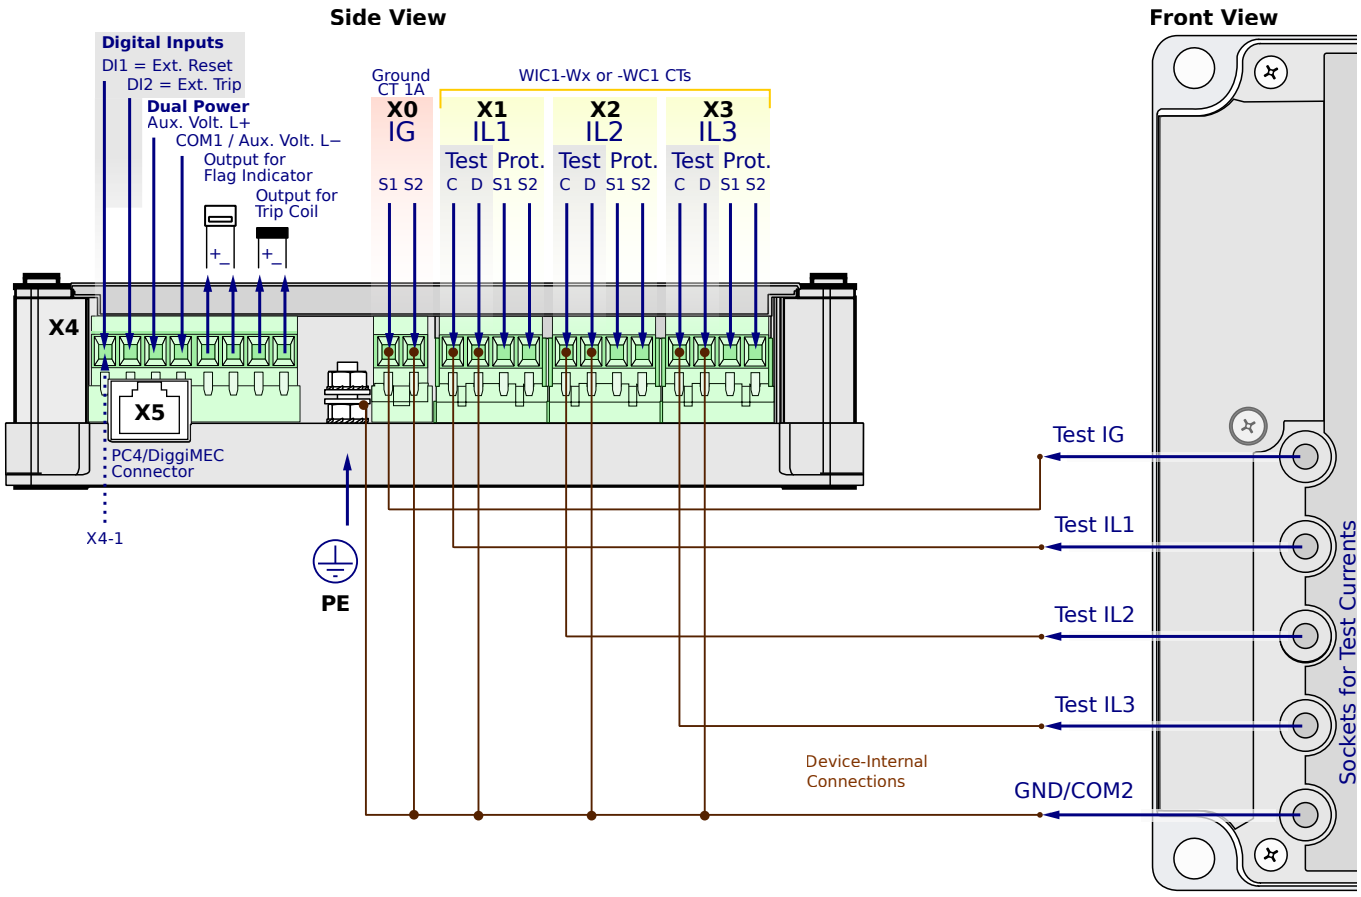


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CG2PB0

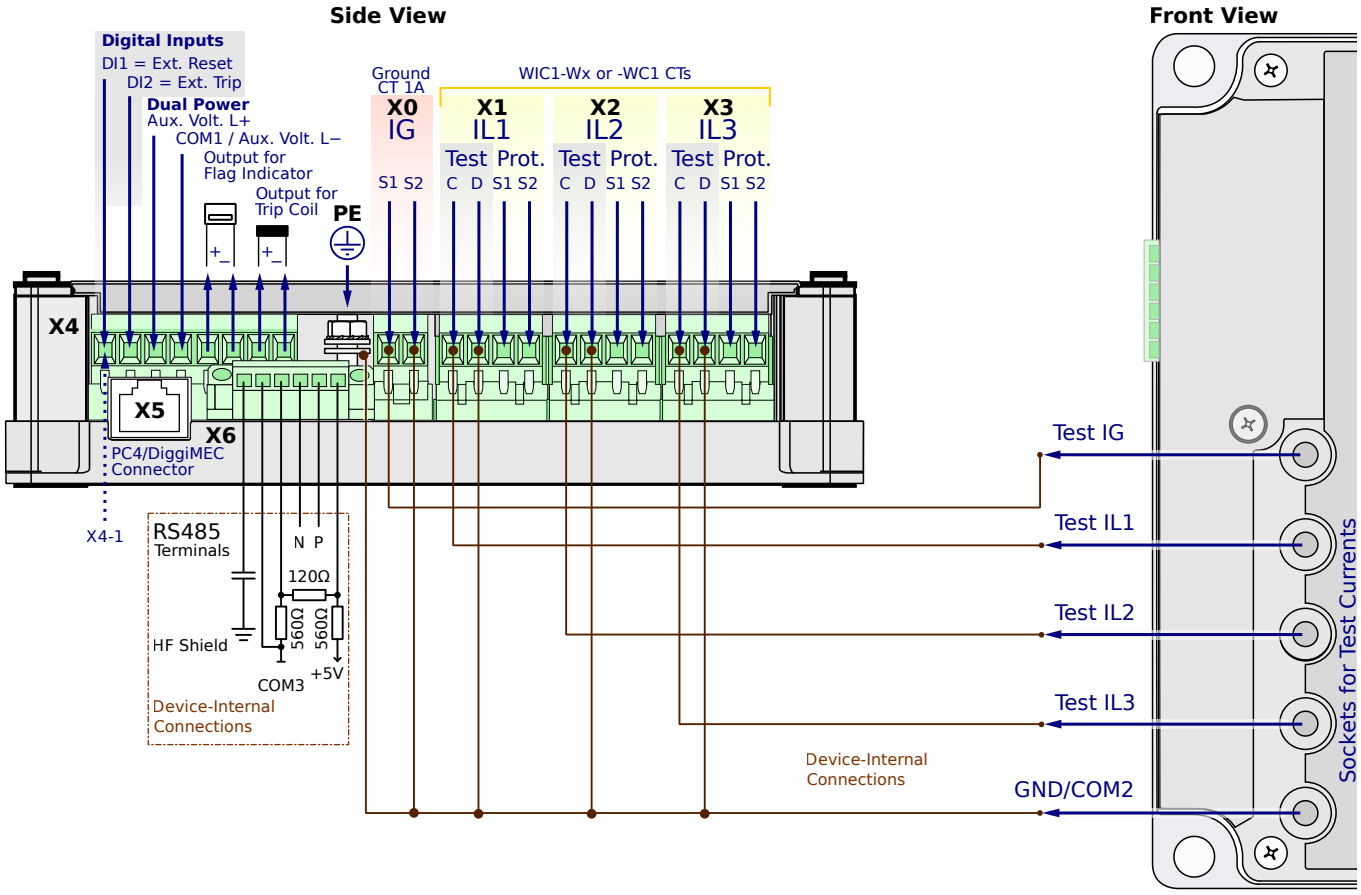


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2PBH

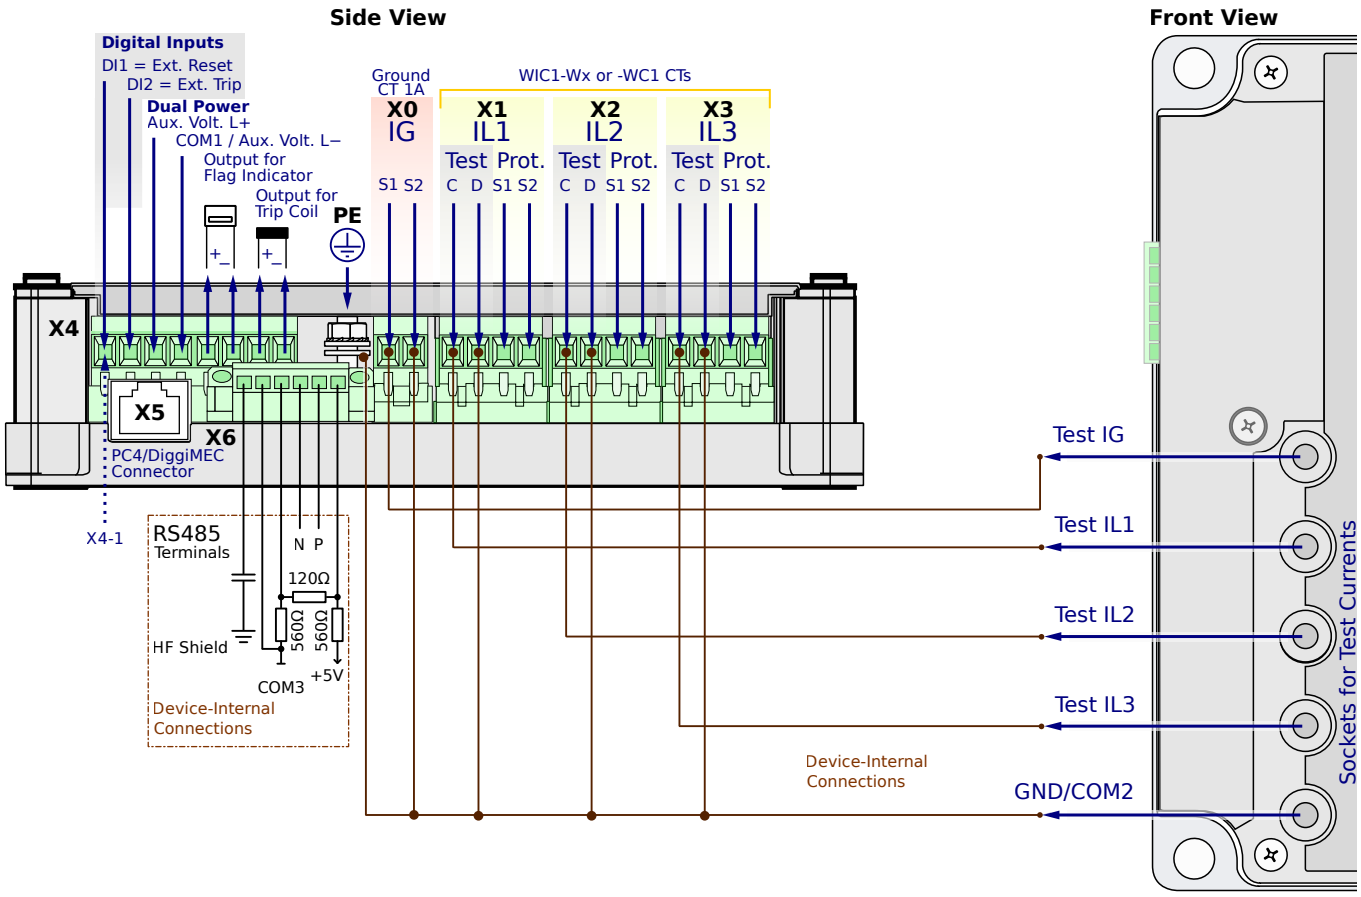


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CG2PC0

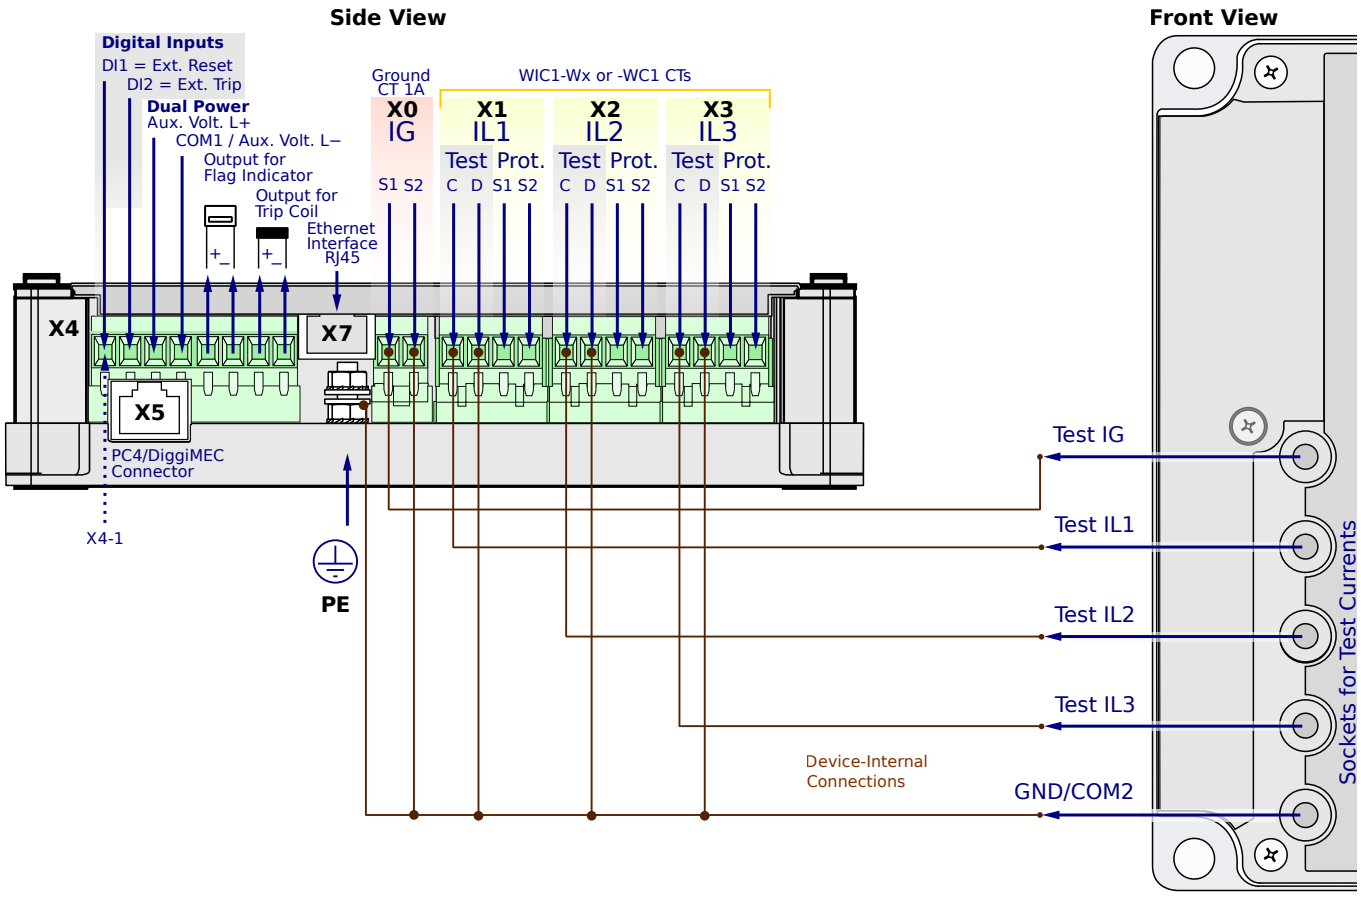


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2PCH

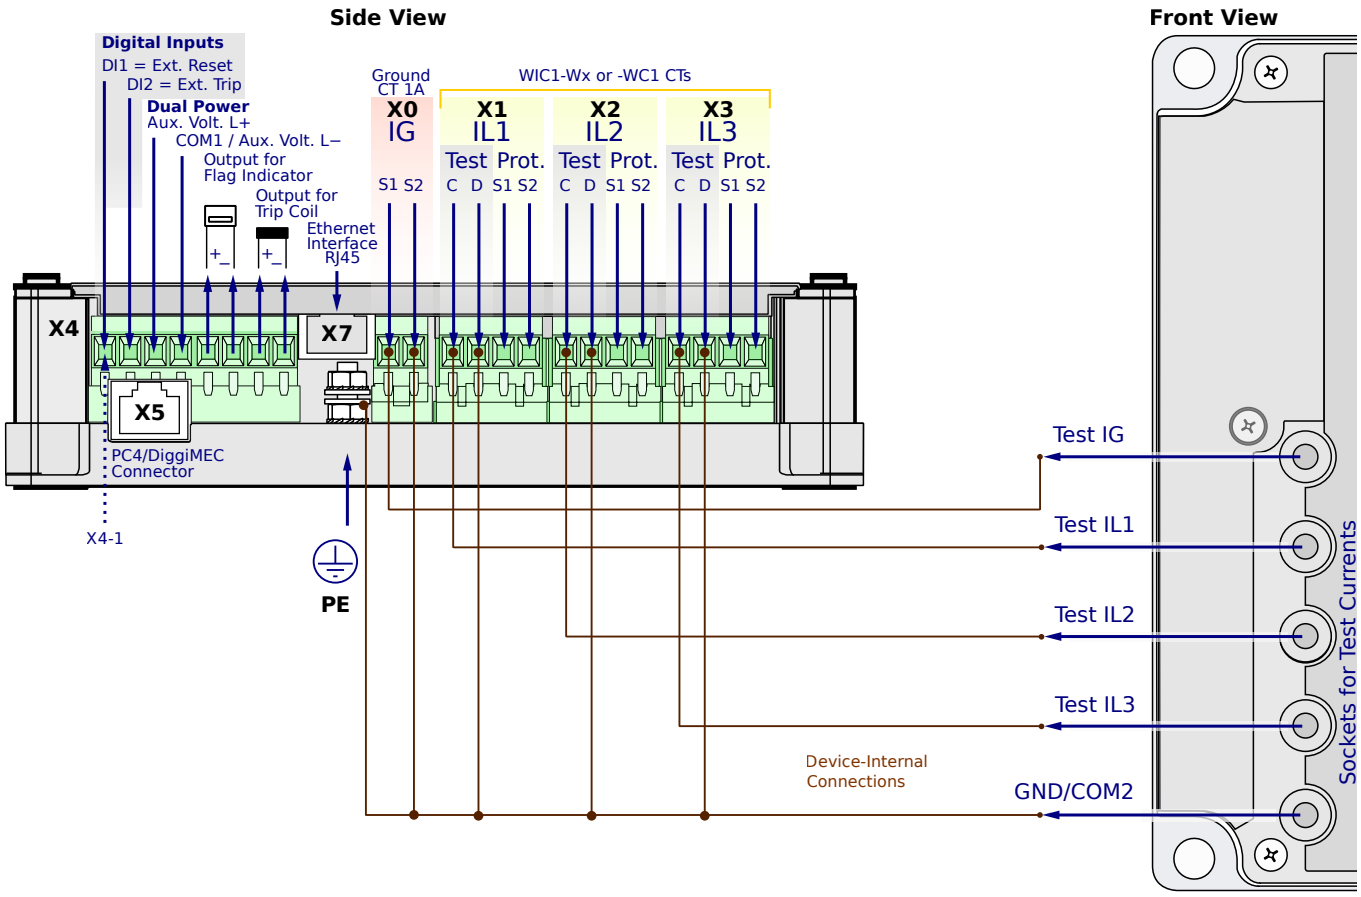


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CG2PL0

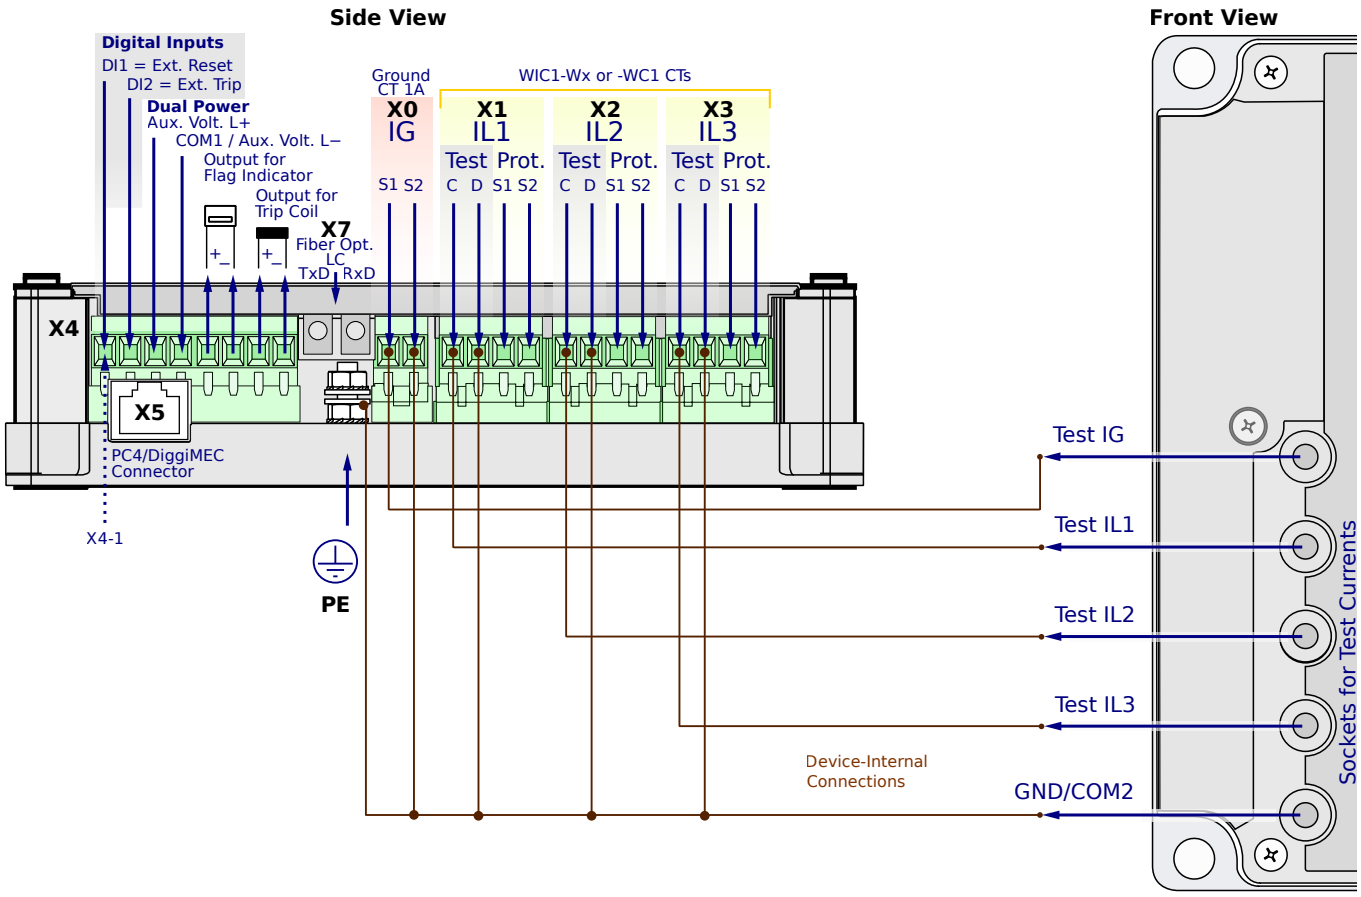


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CG2PLH

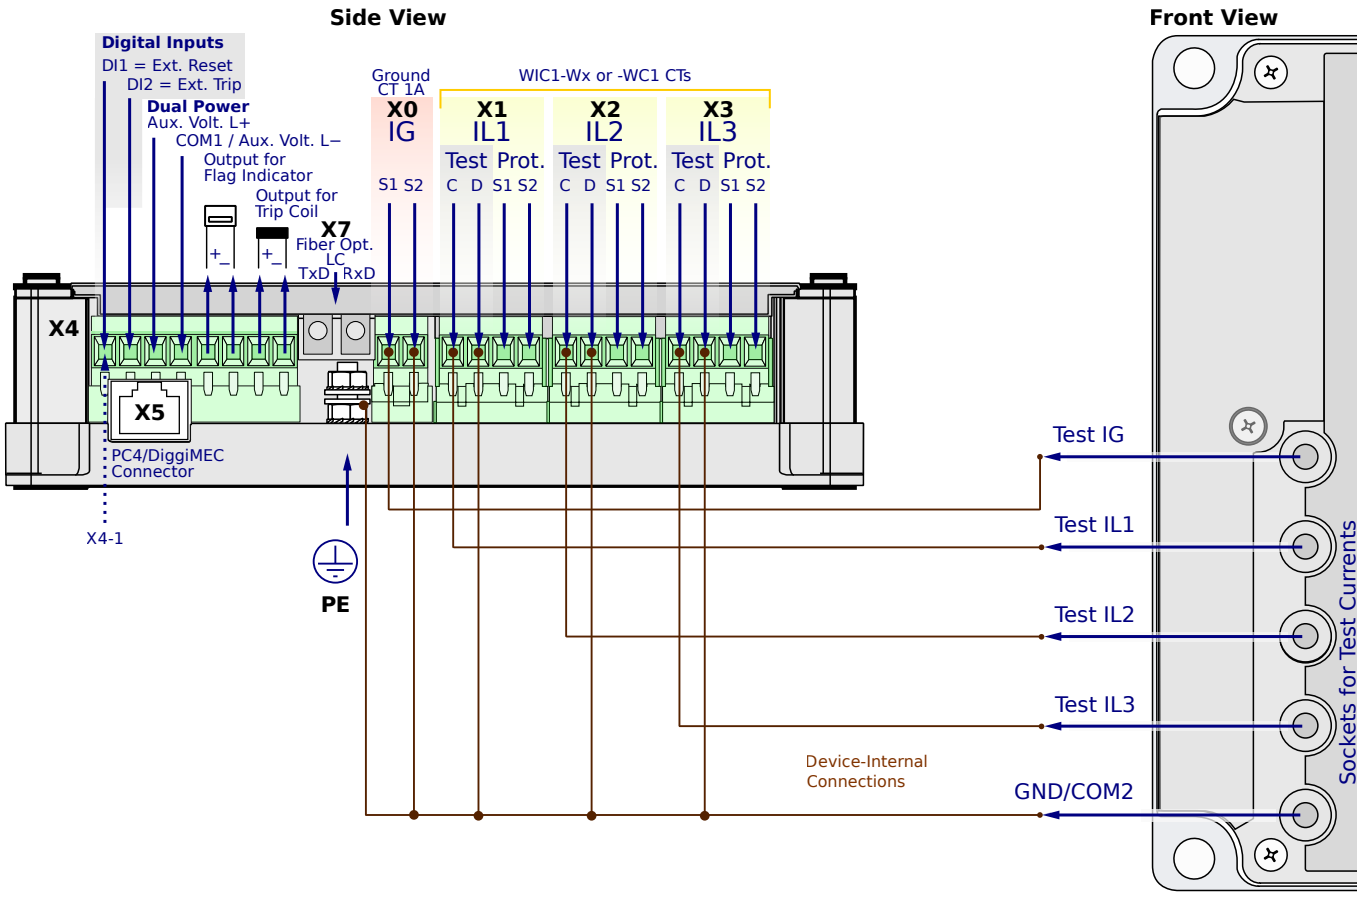


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1SA0

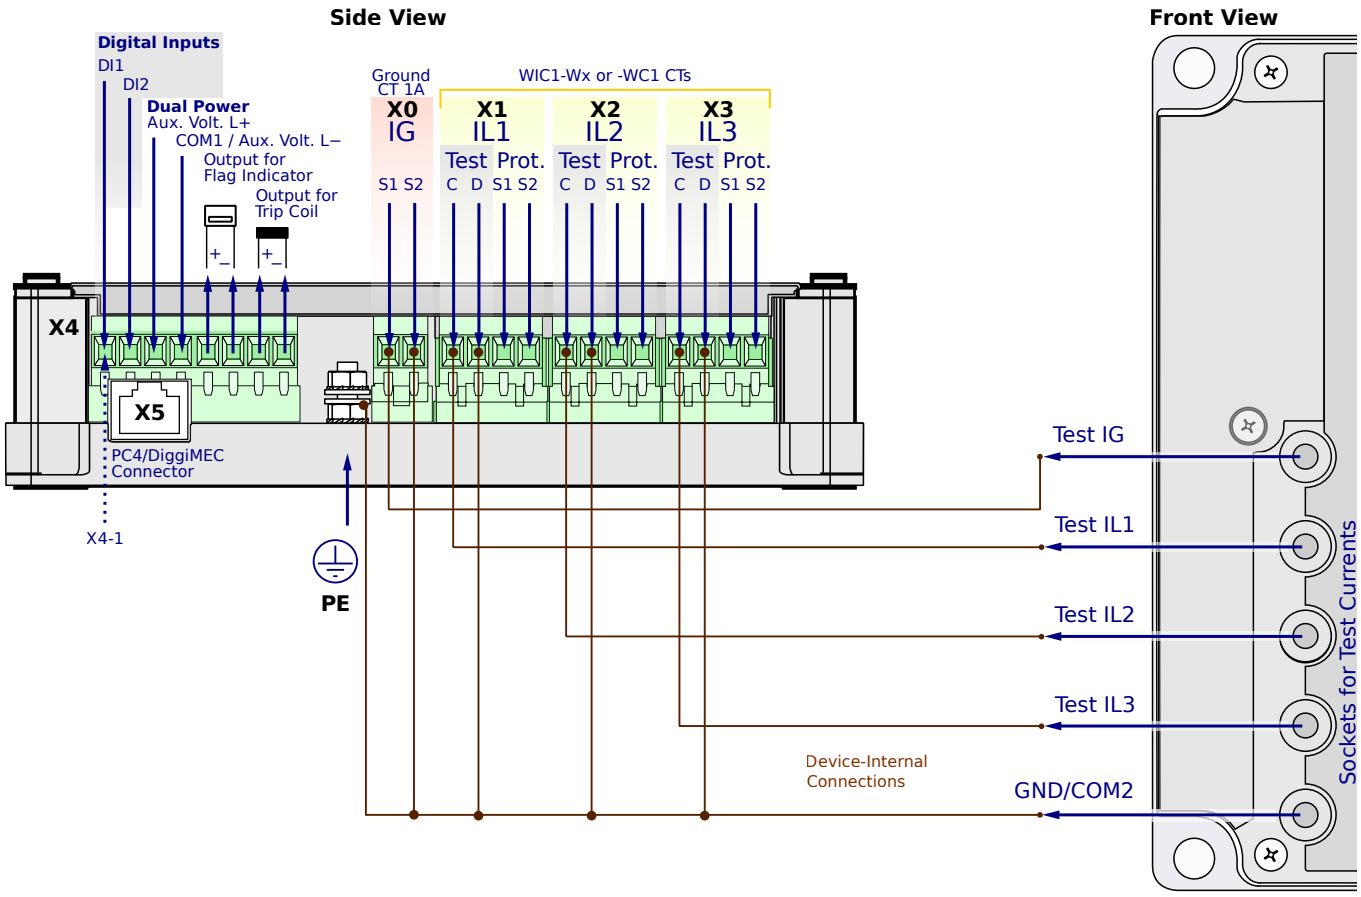


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1SAH

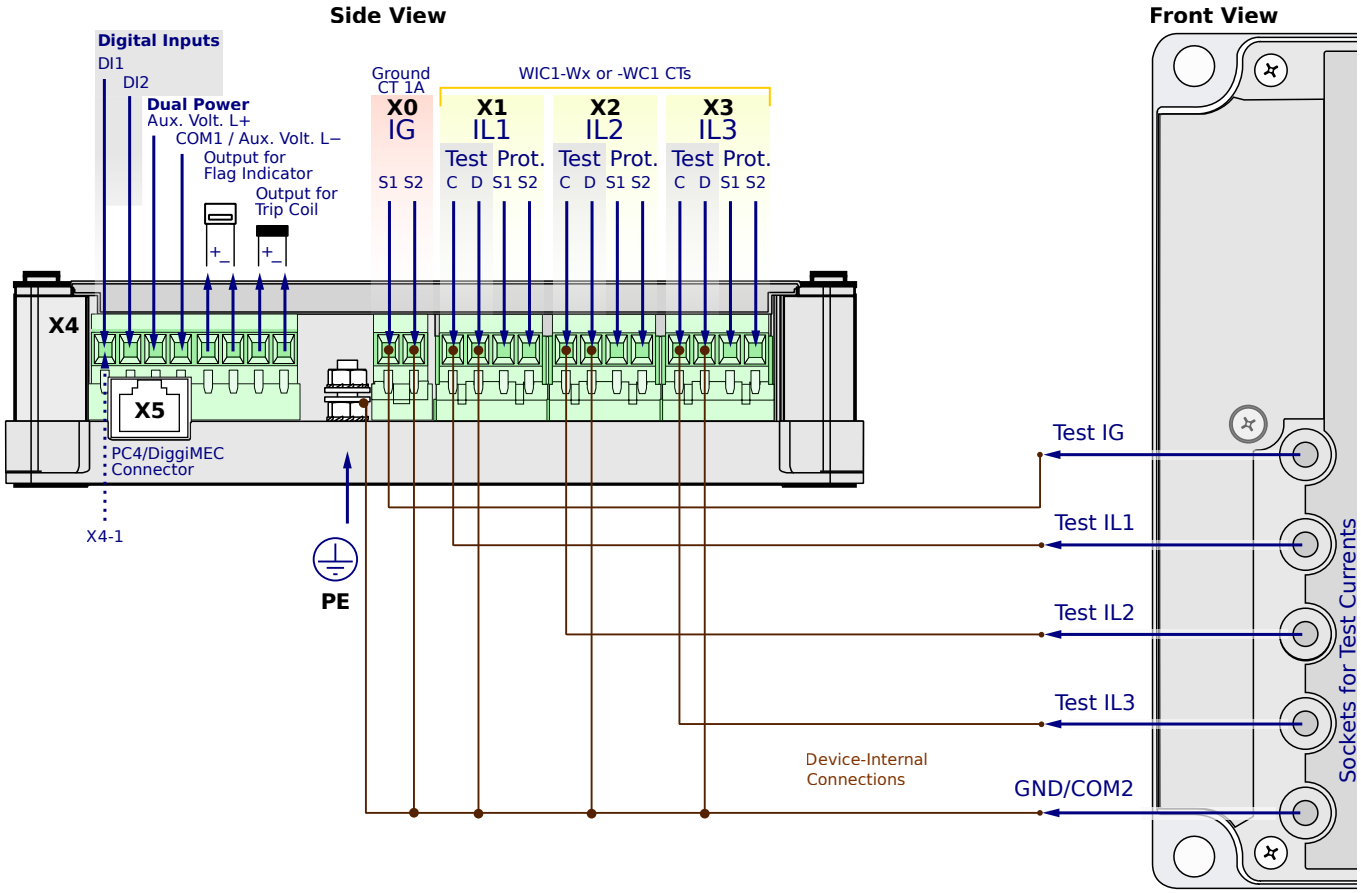


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1SB0

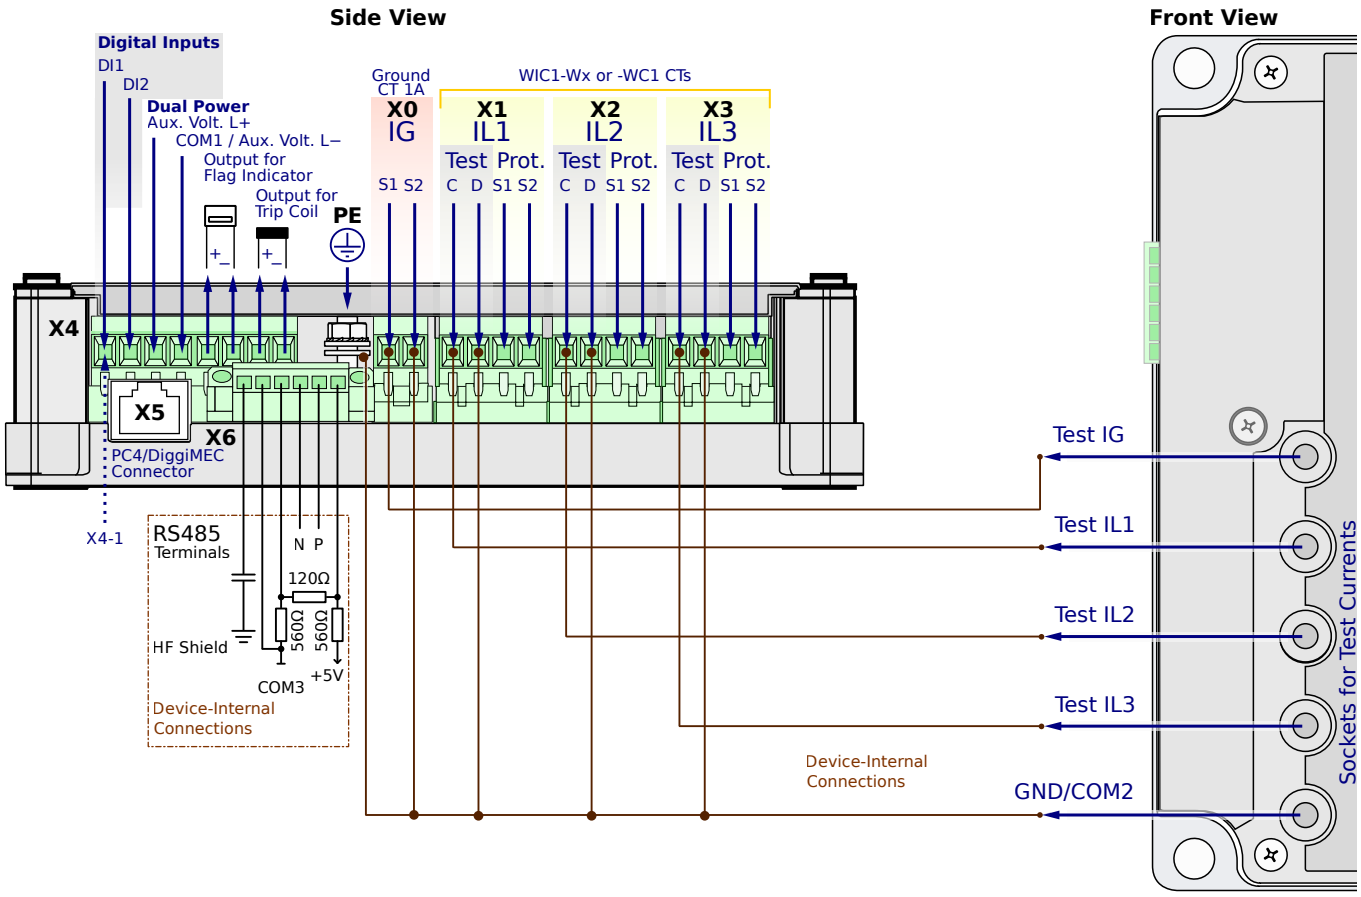


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1SBH

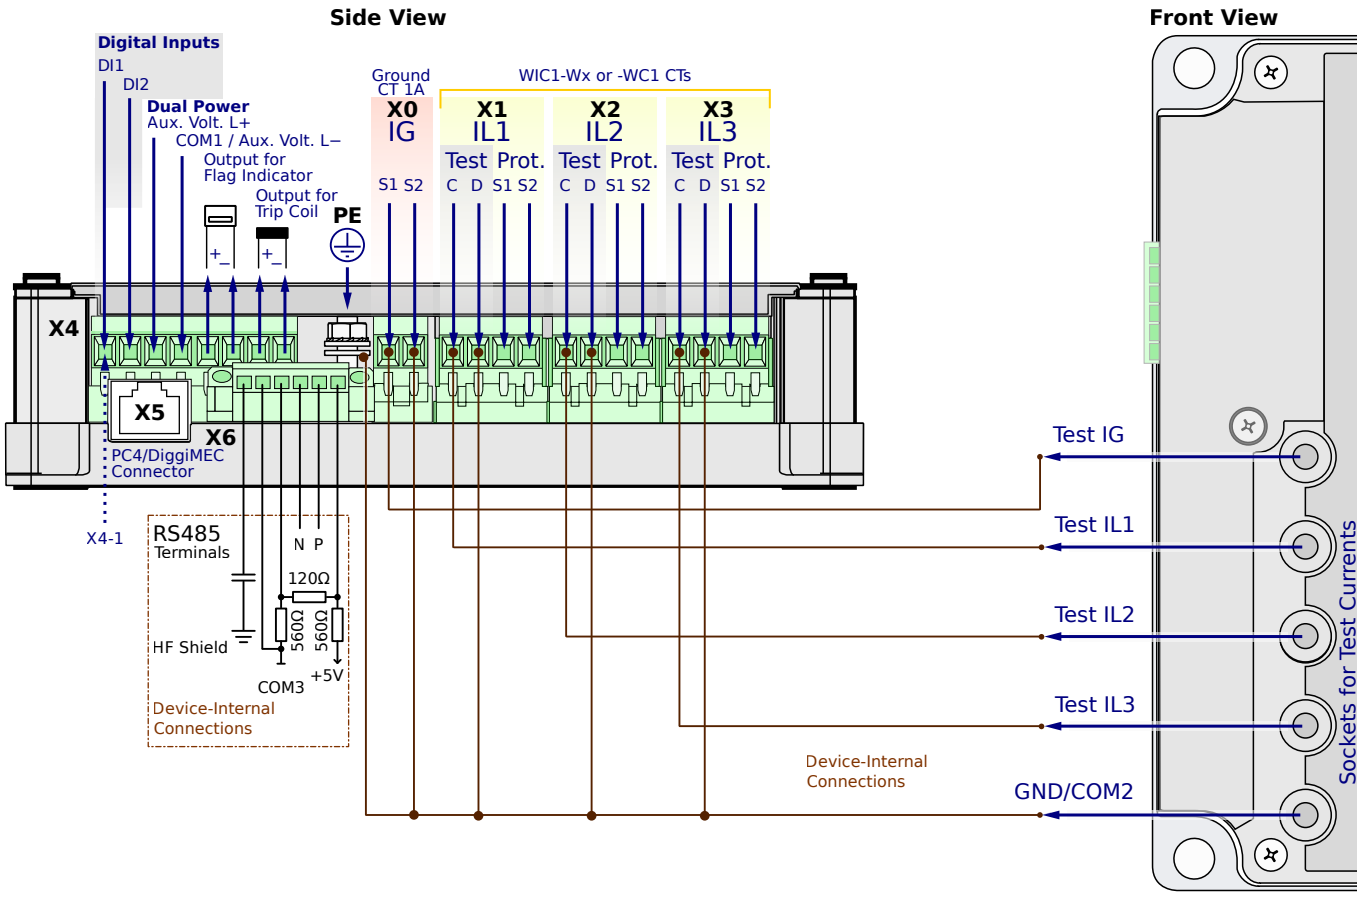


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1SC0

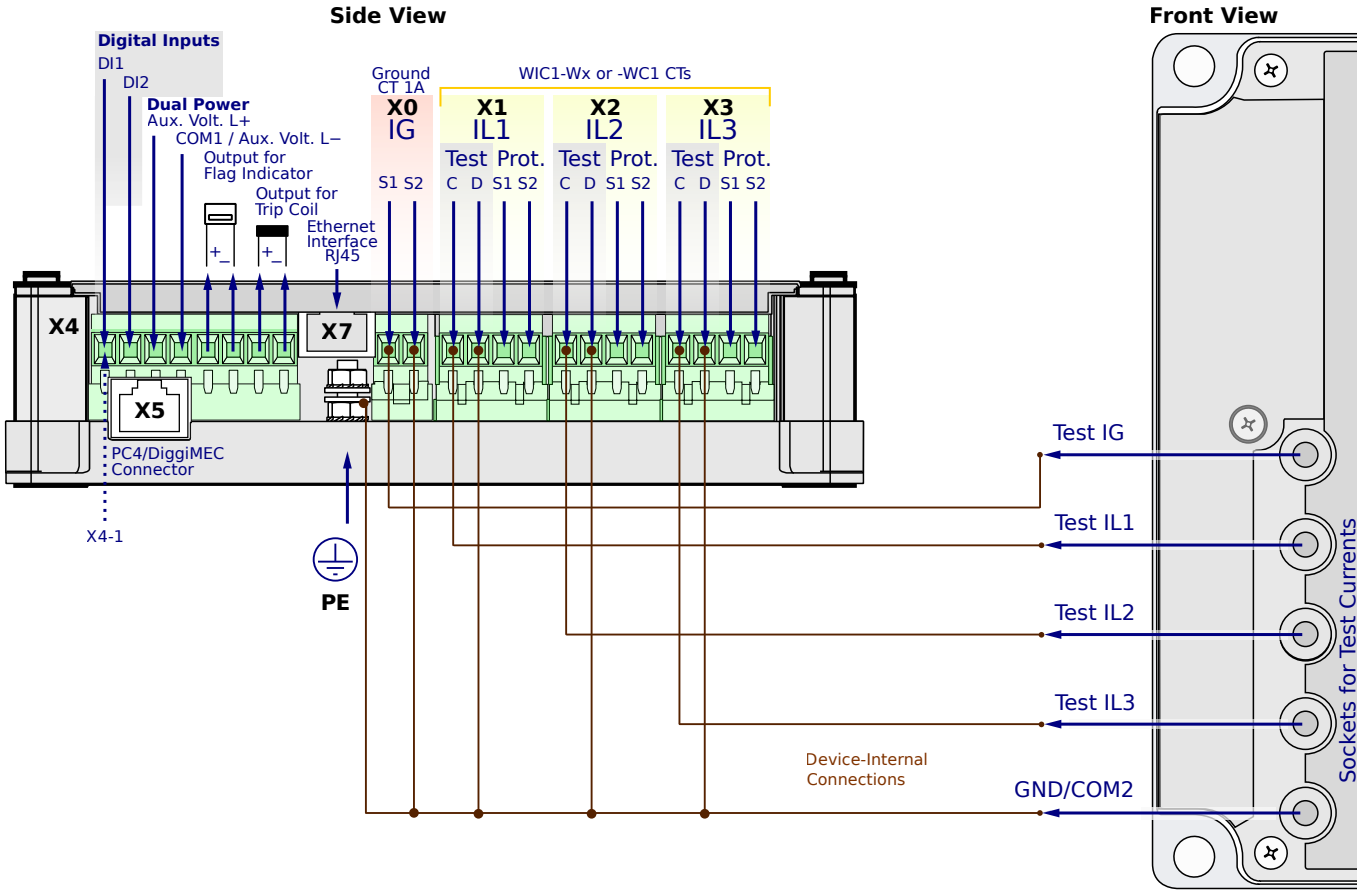


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1SCH

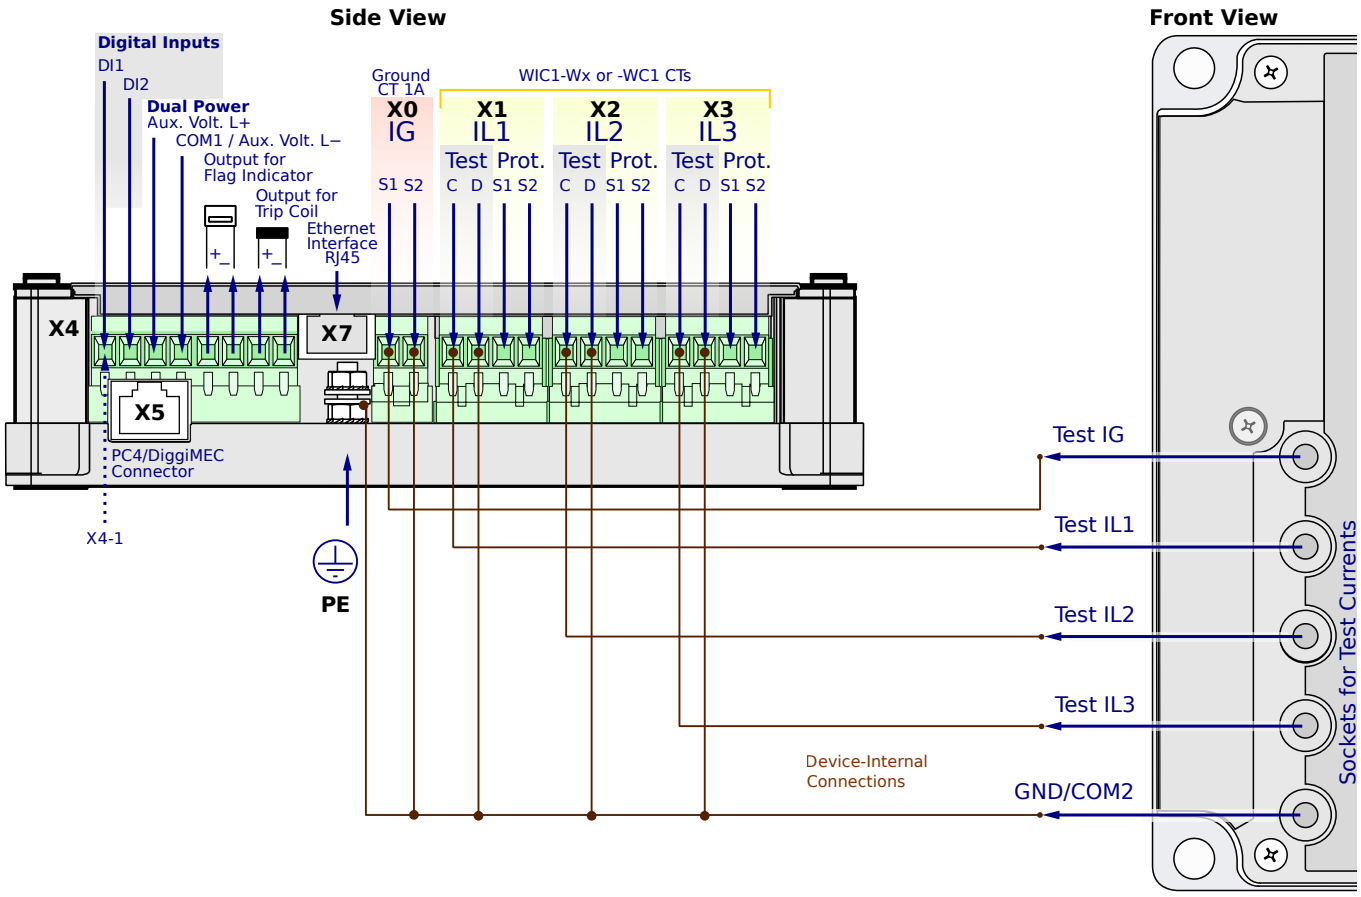


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1SL0

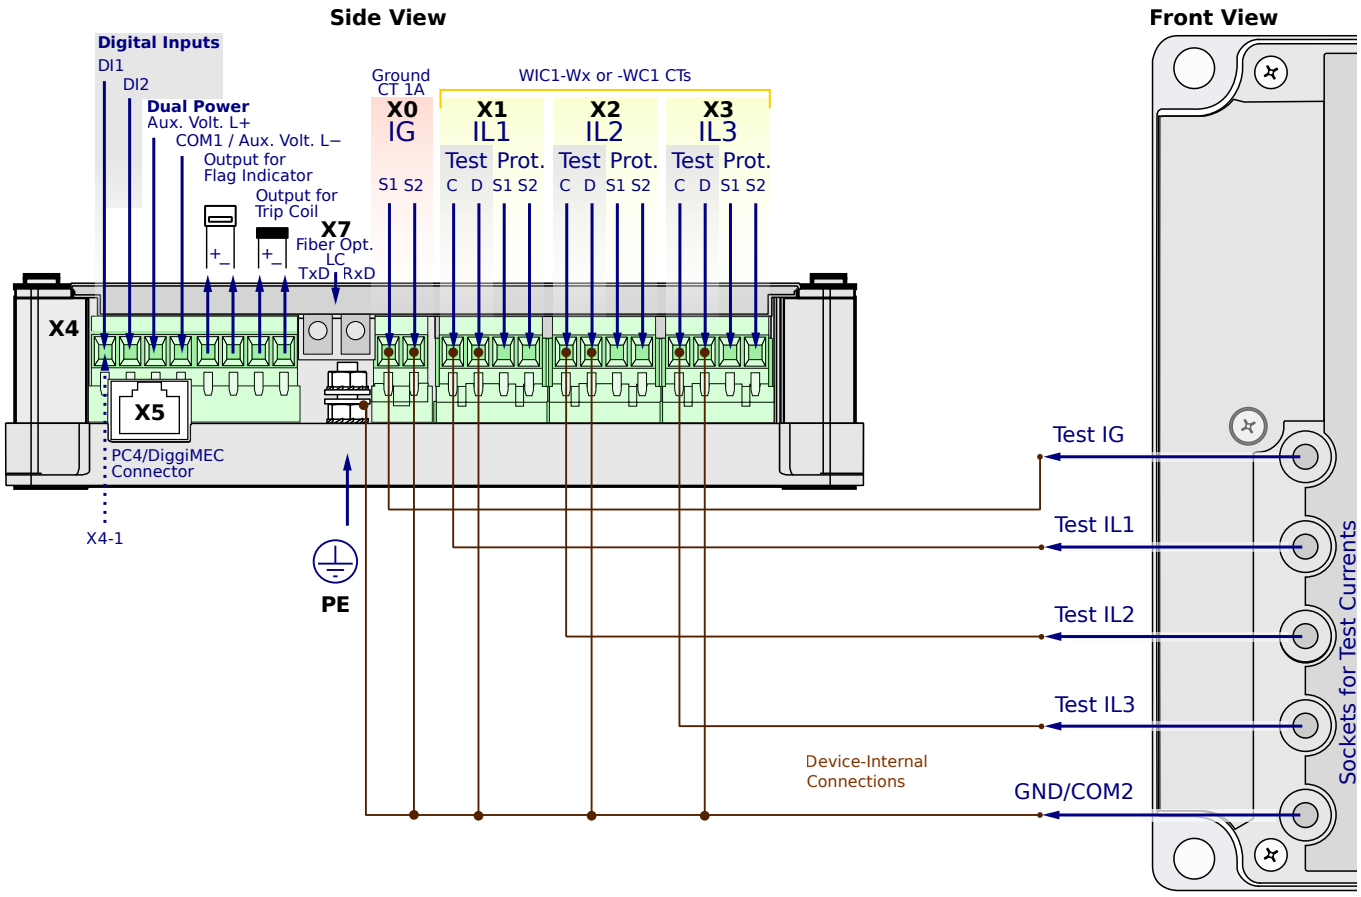


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1SLH

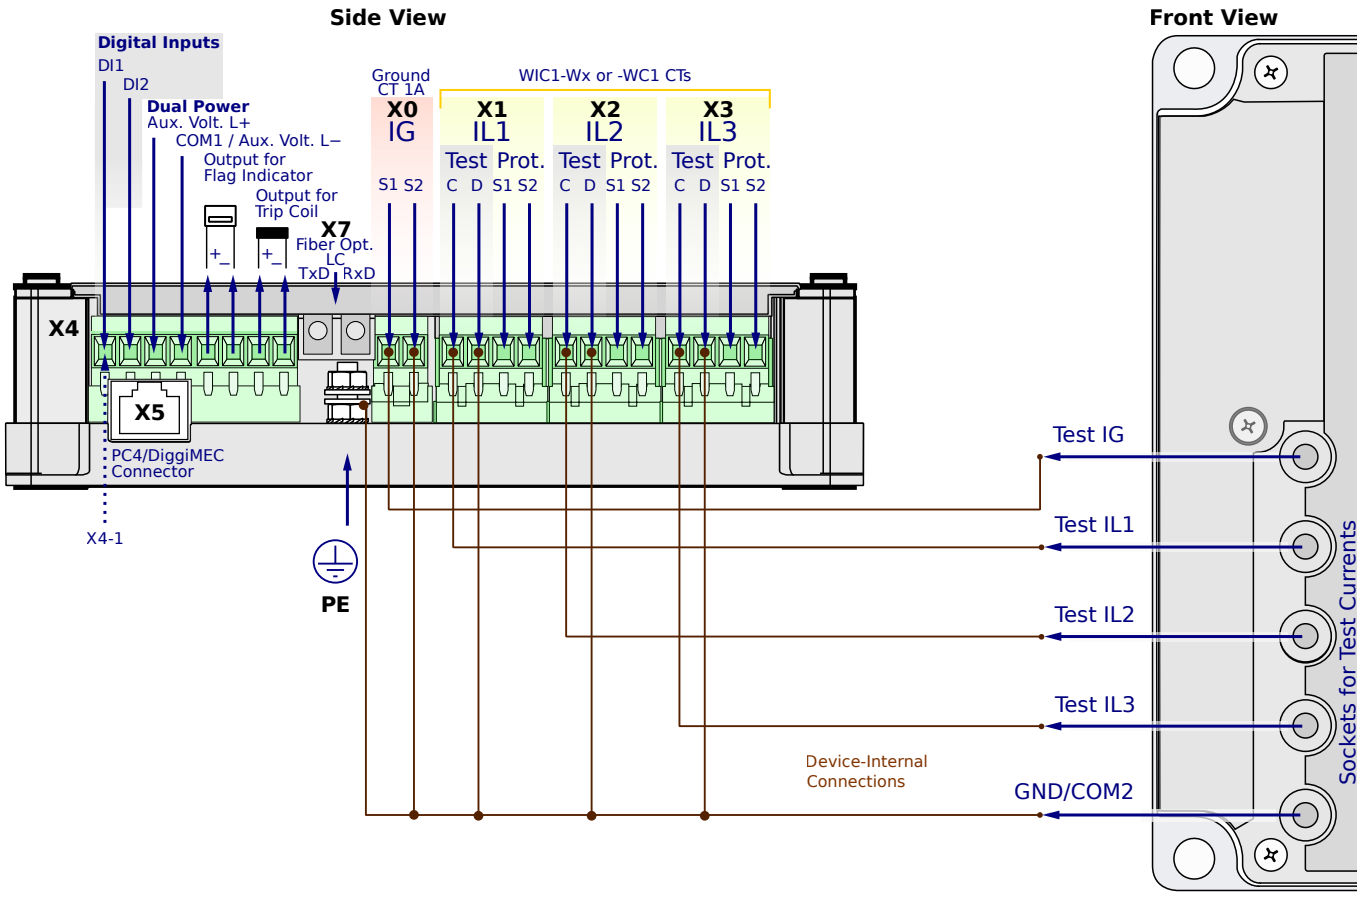


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1AA0

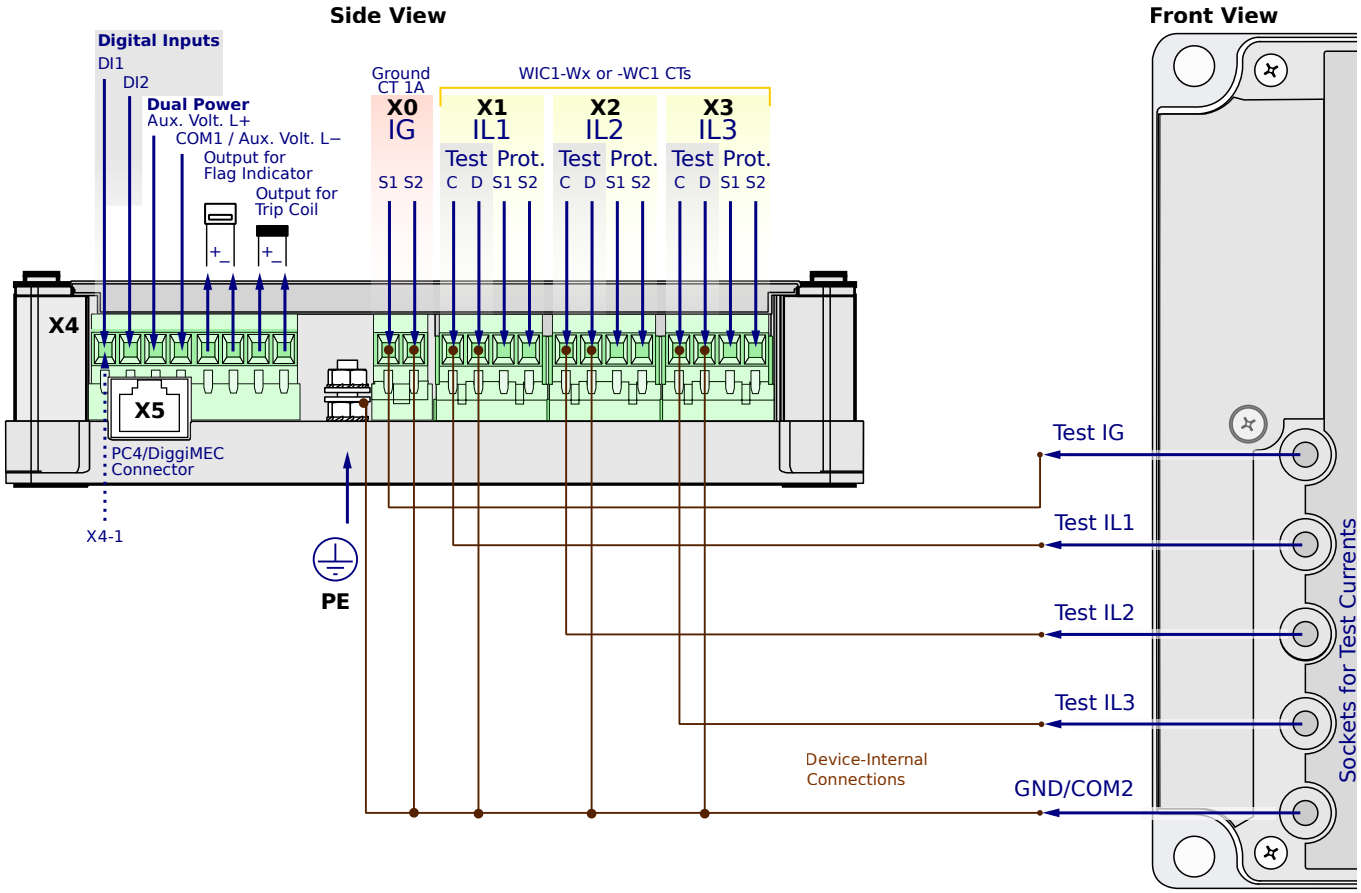


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1AAH

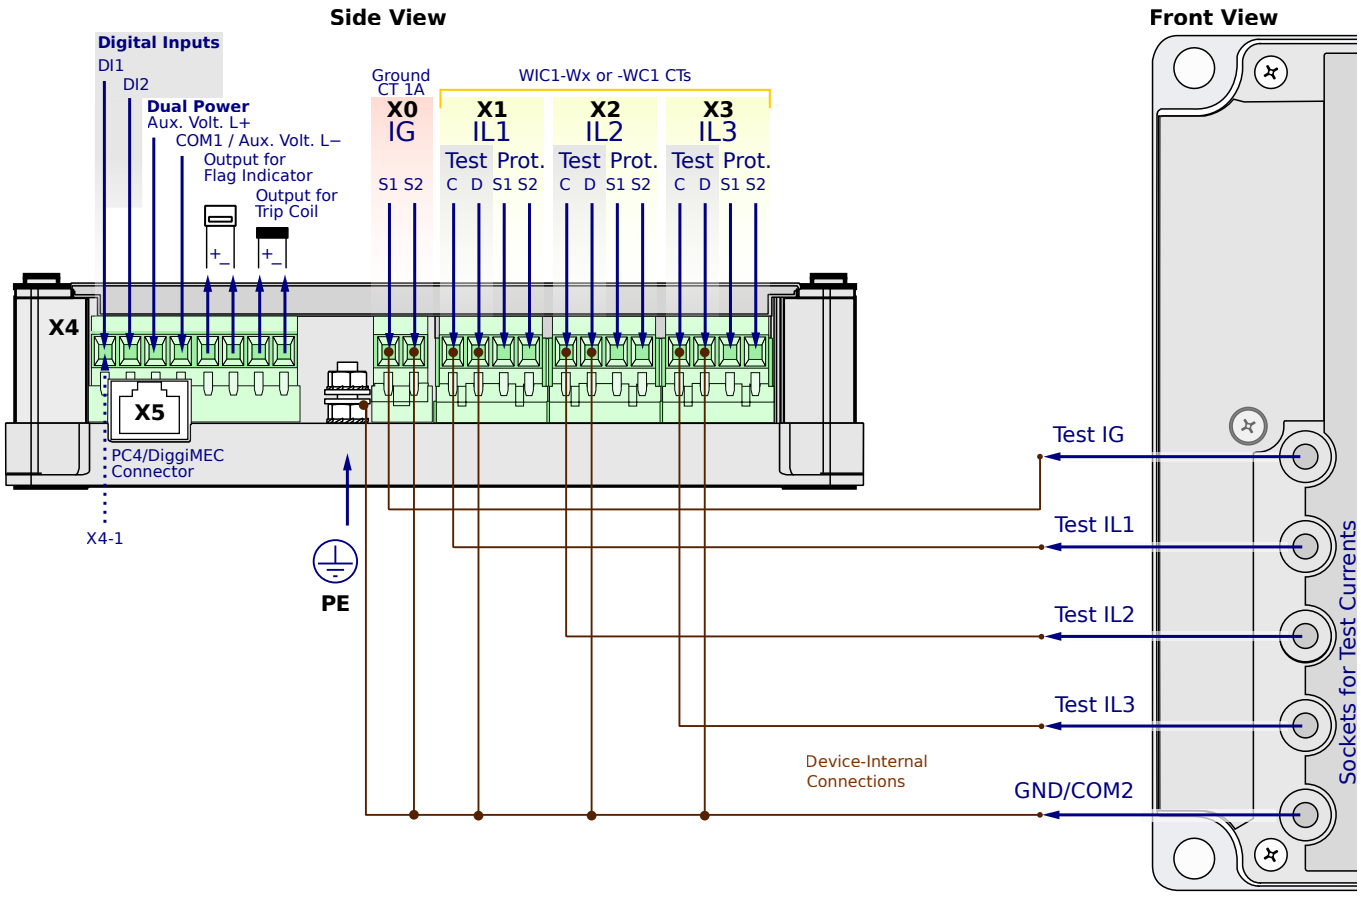


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1AB0

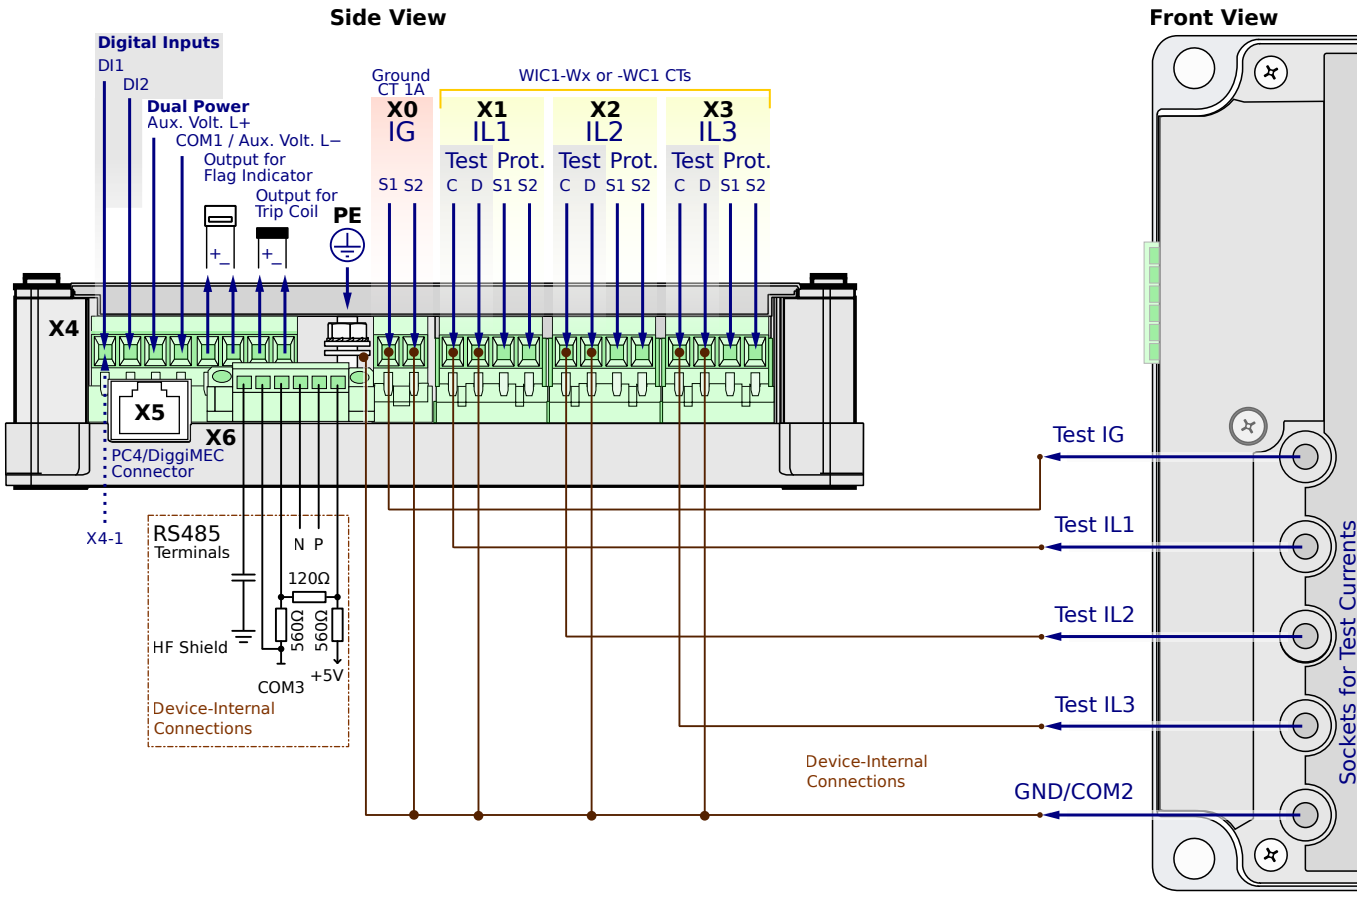


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1ABH

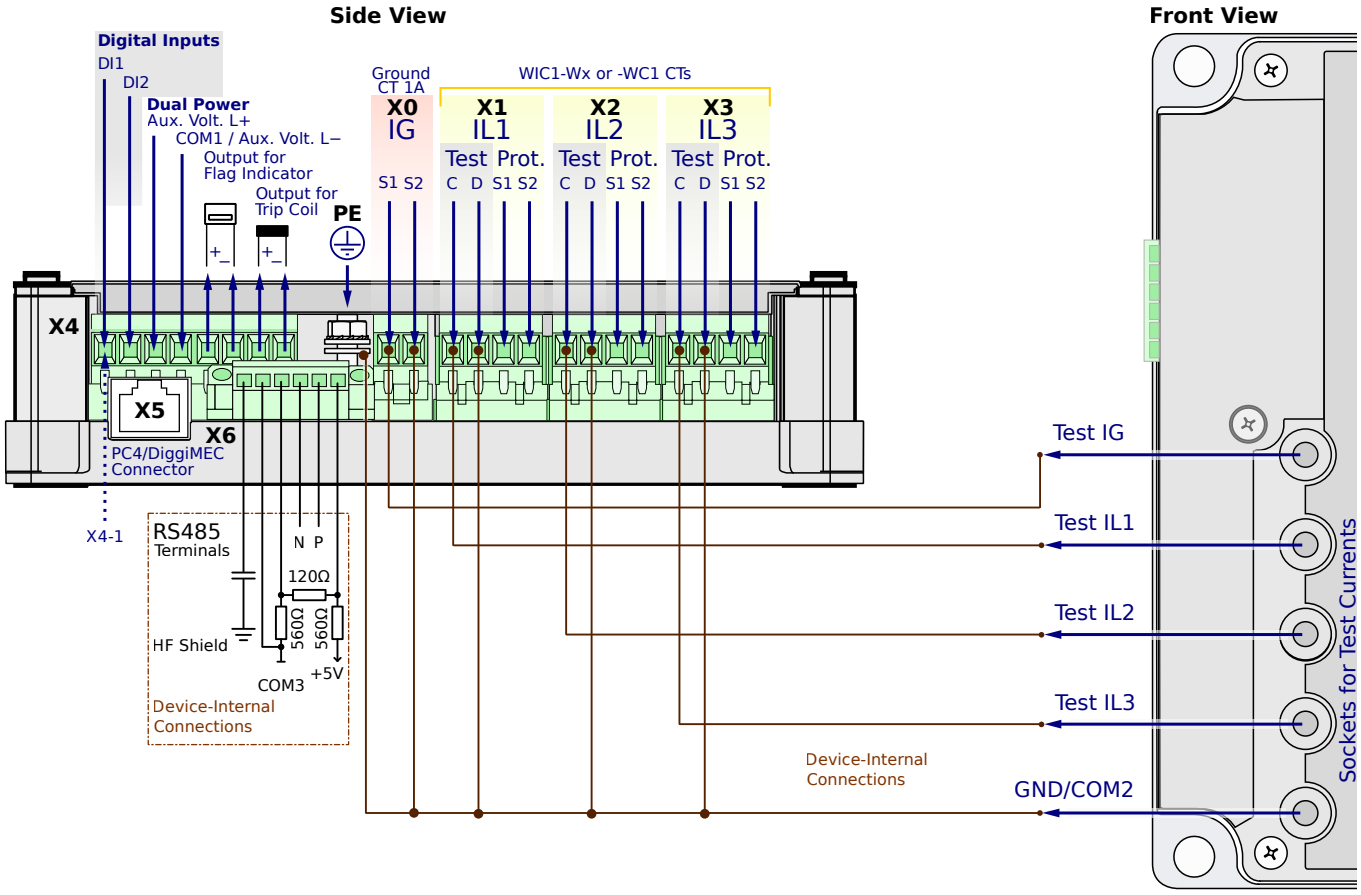


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1AC0

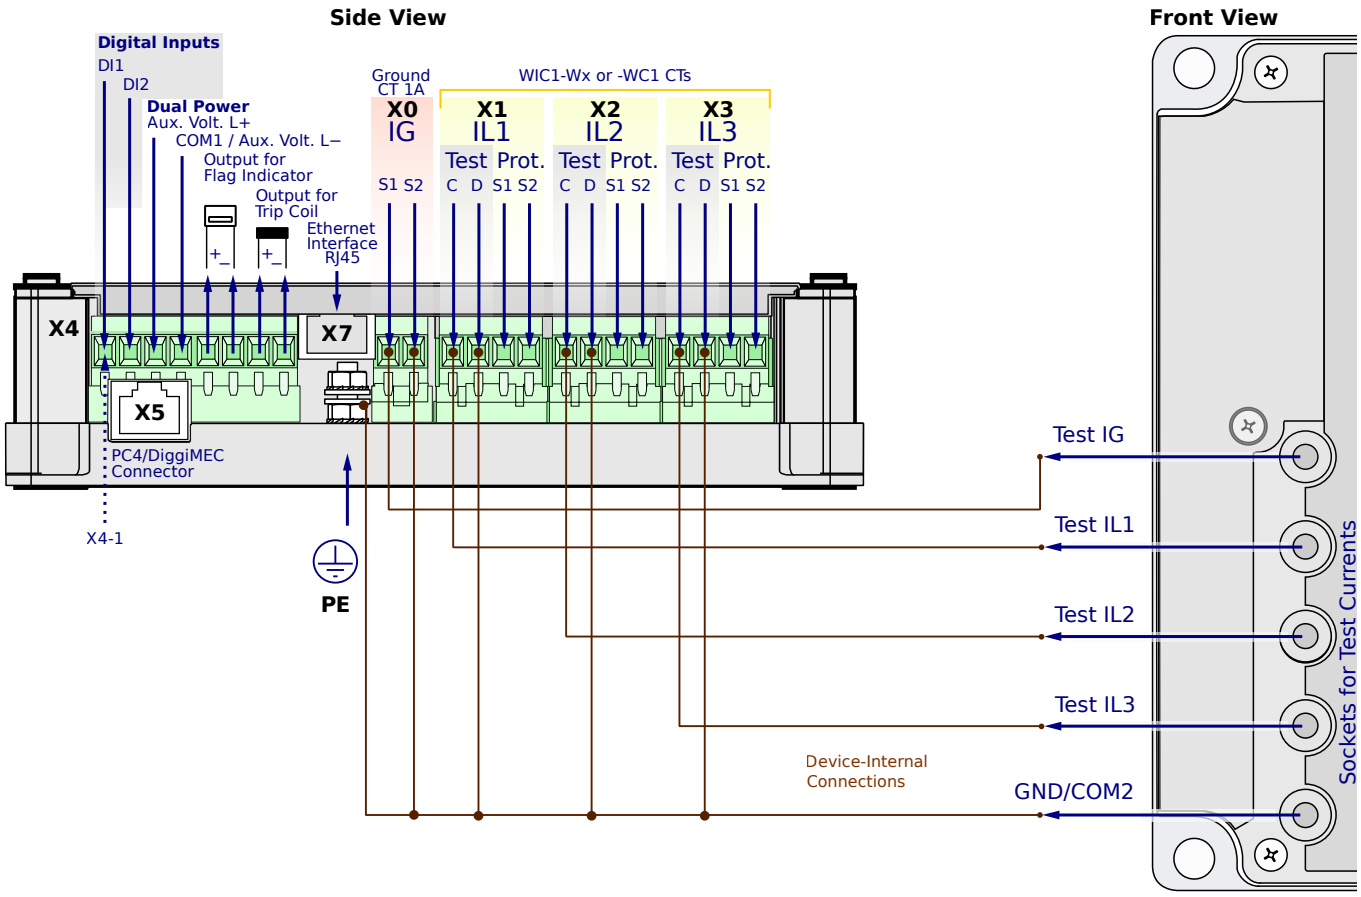


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1ACH

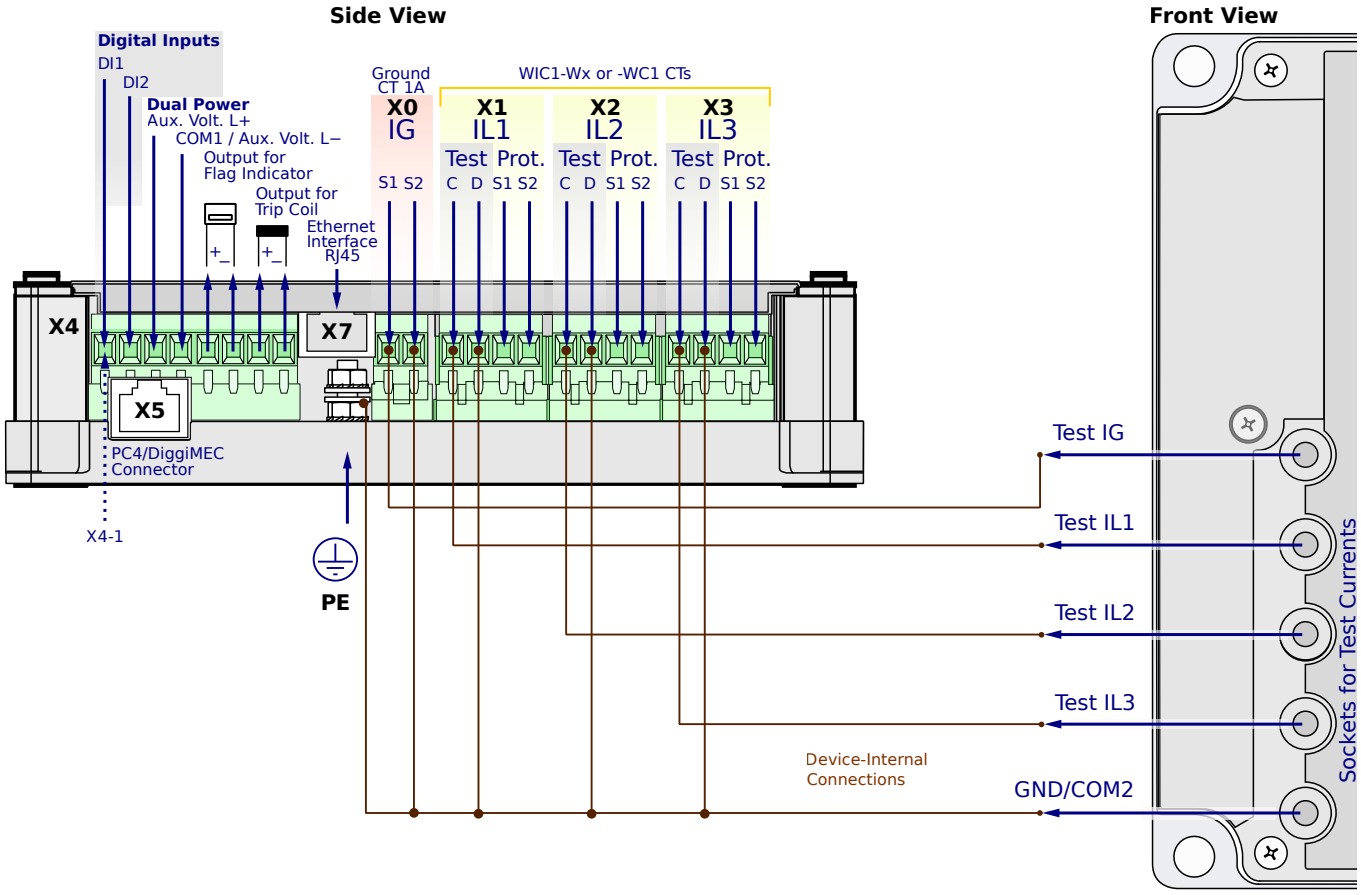


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1AL0

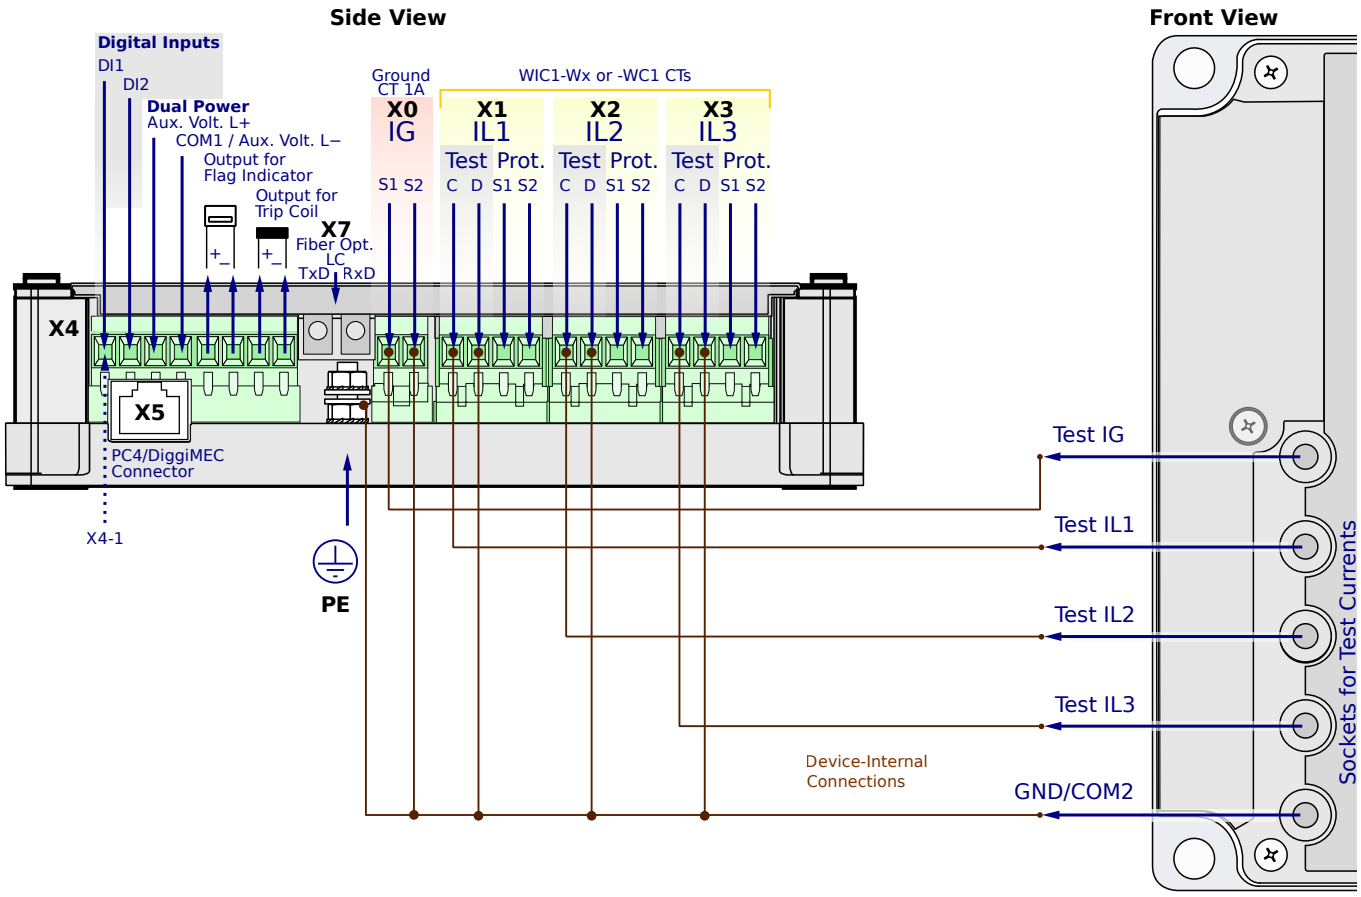


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1ALH

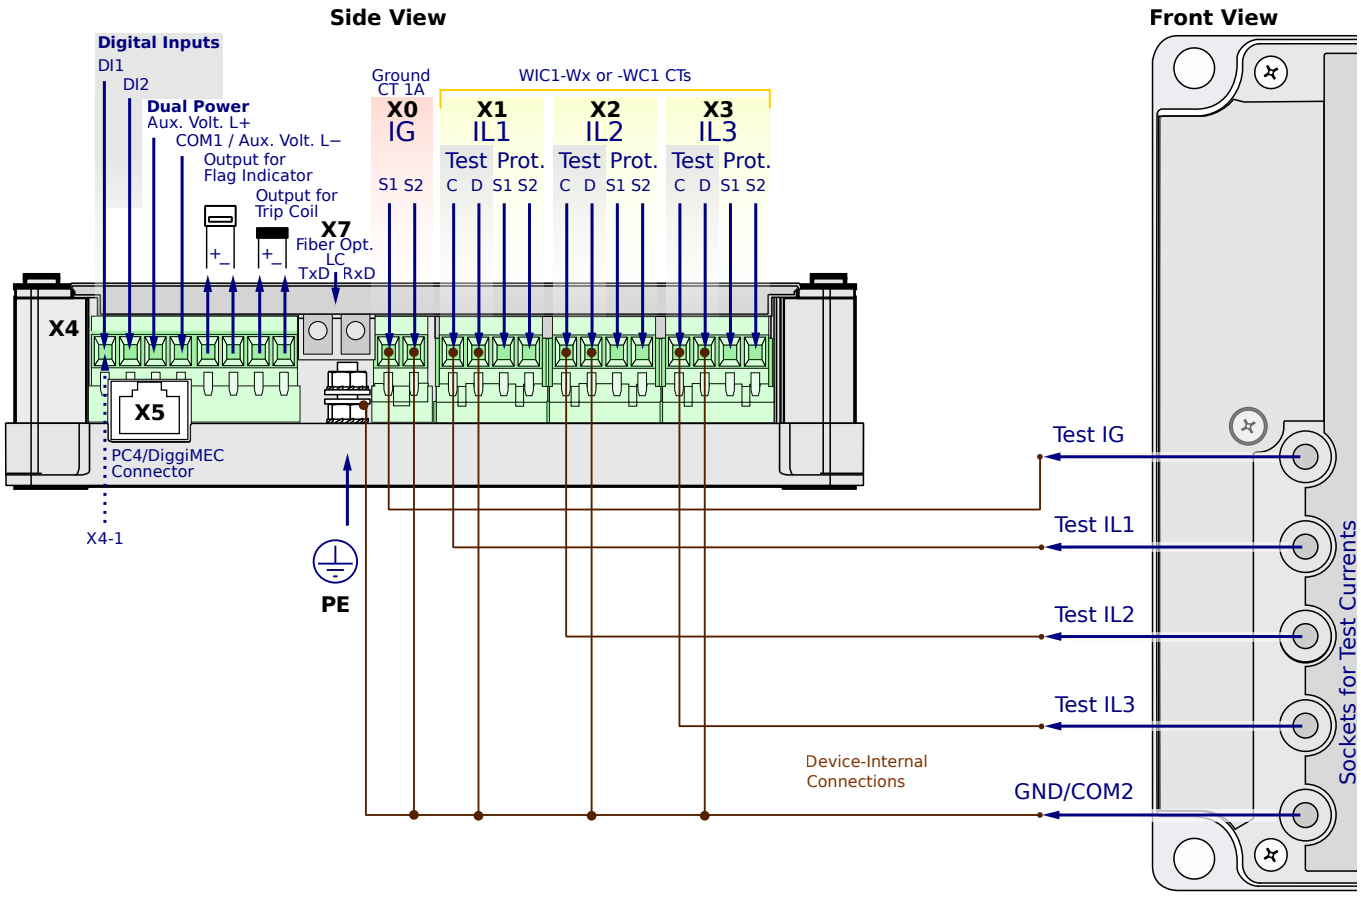


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1PA0

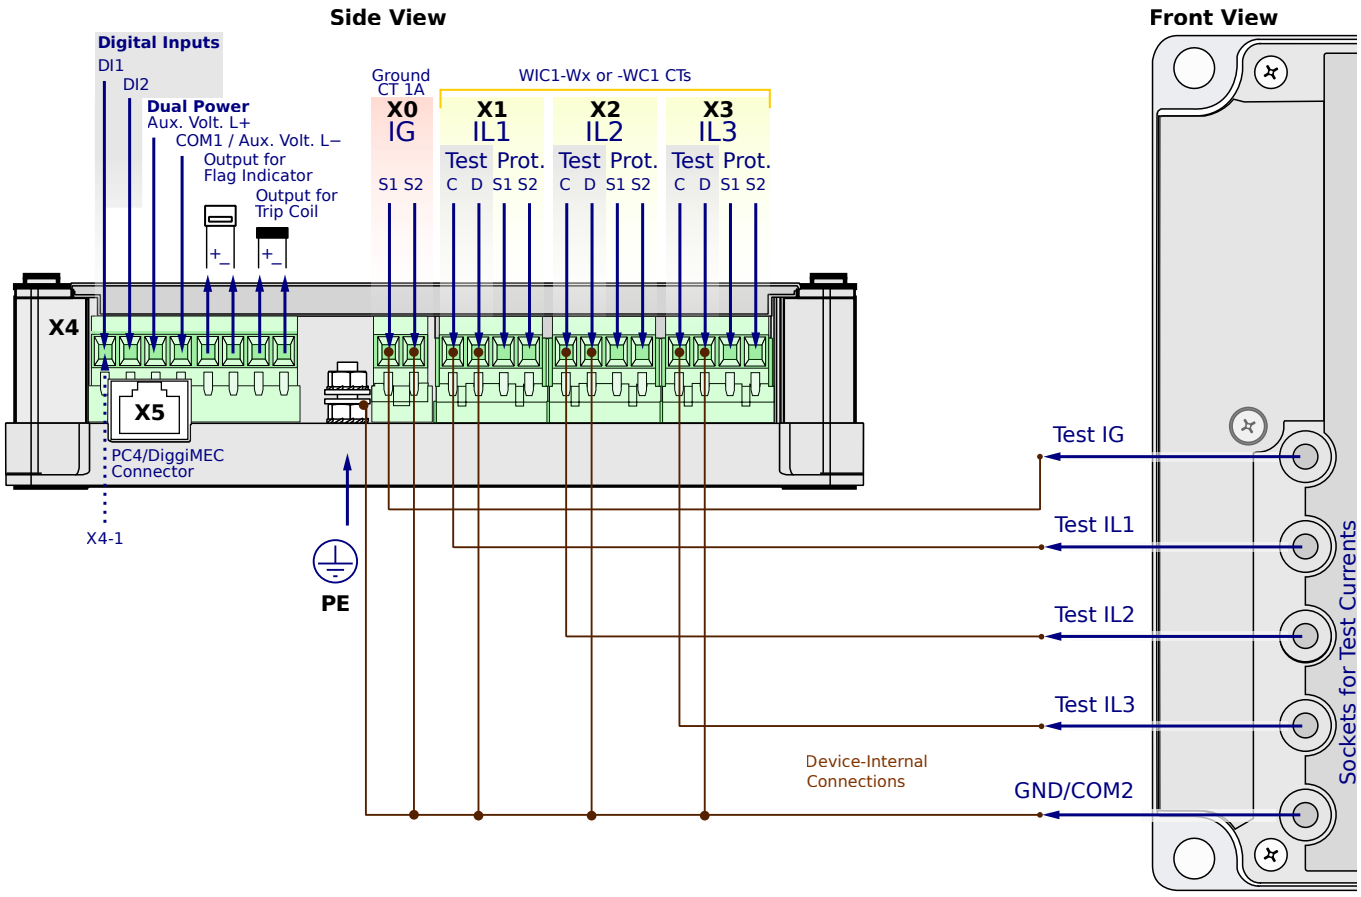


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1PAH

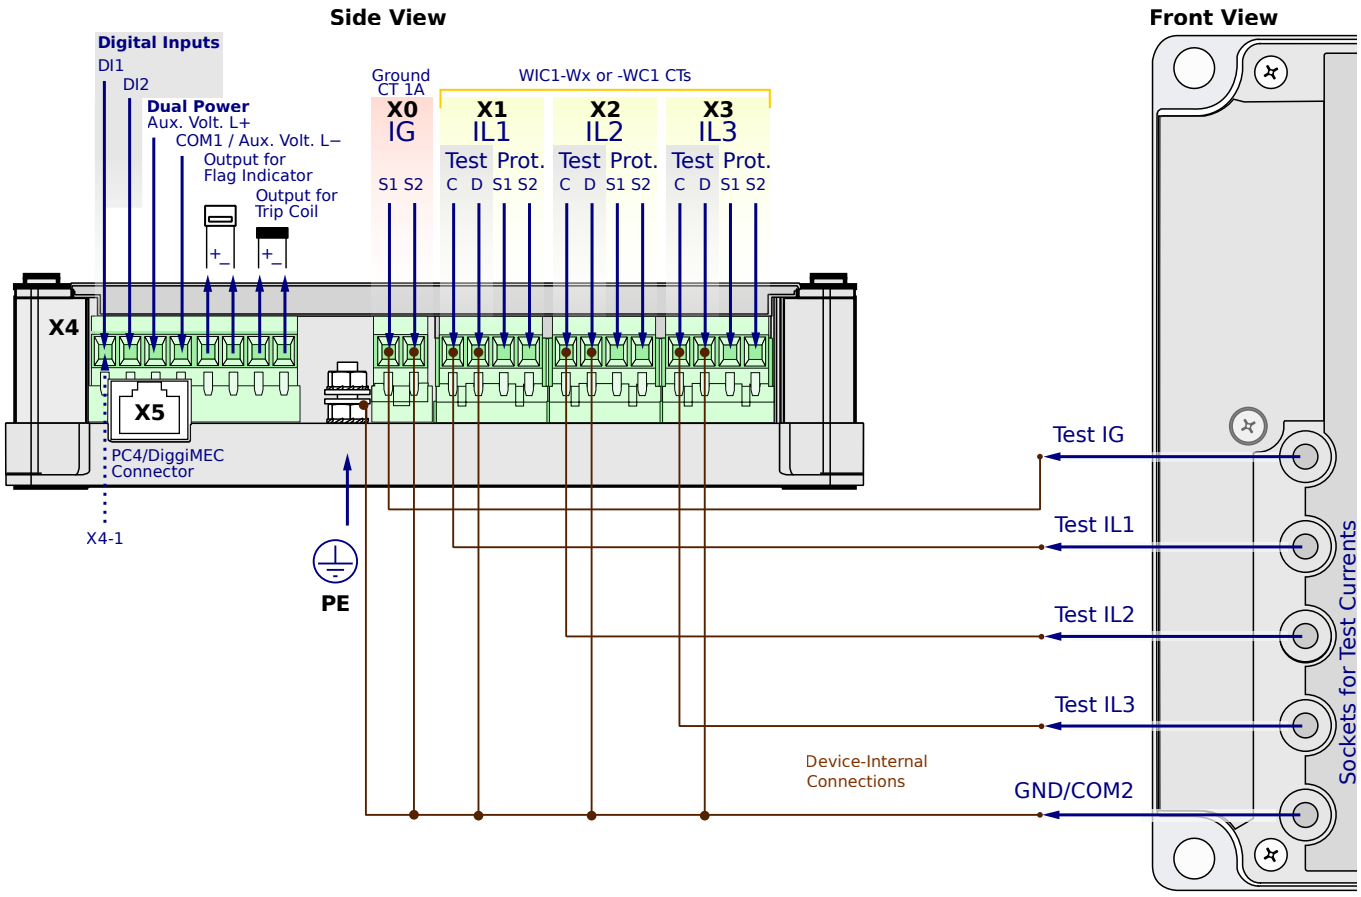


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD1PB0

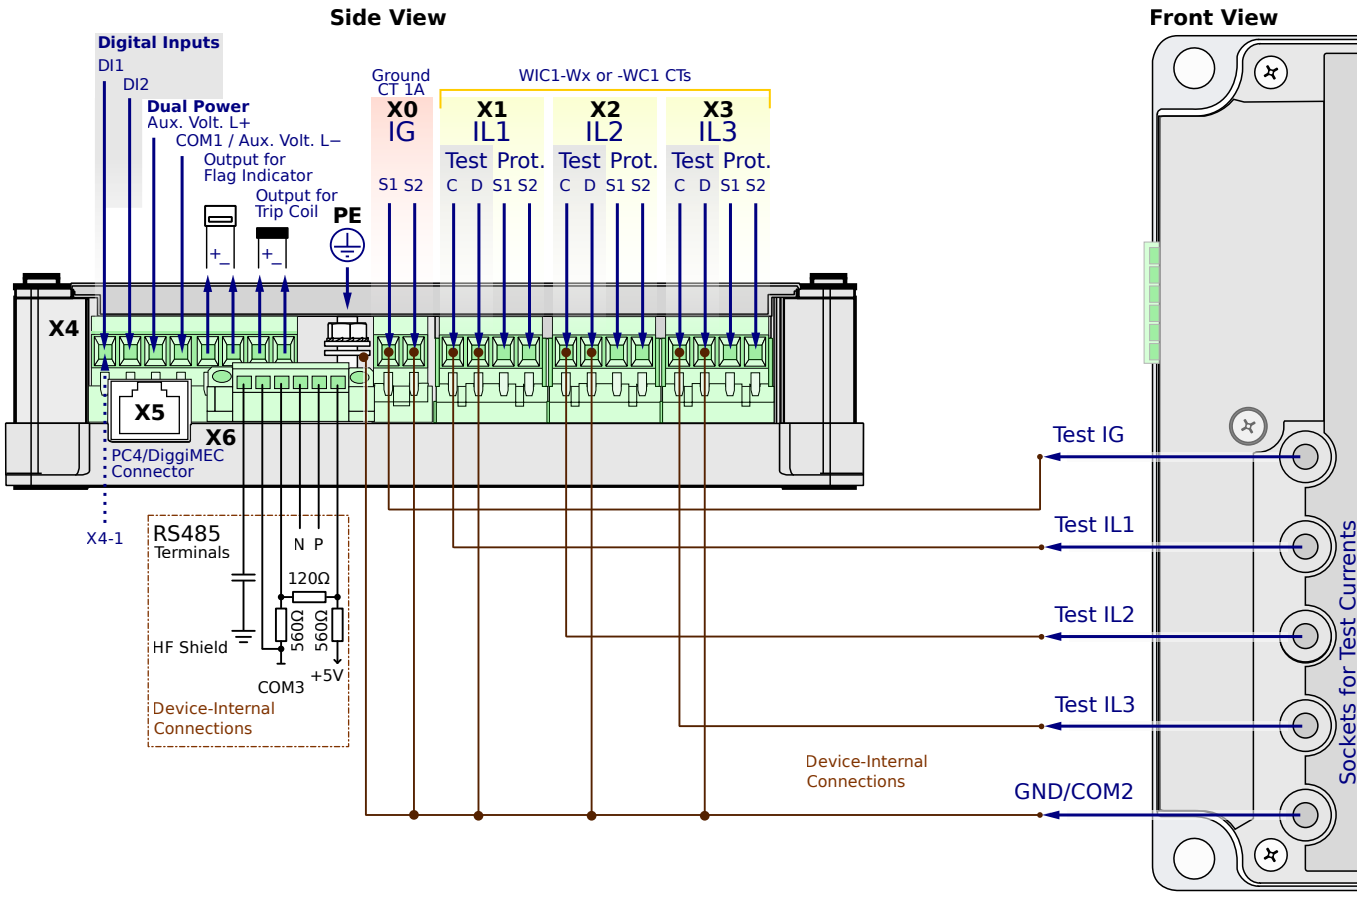


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1PBH

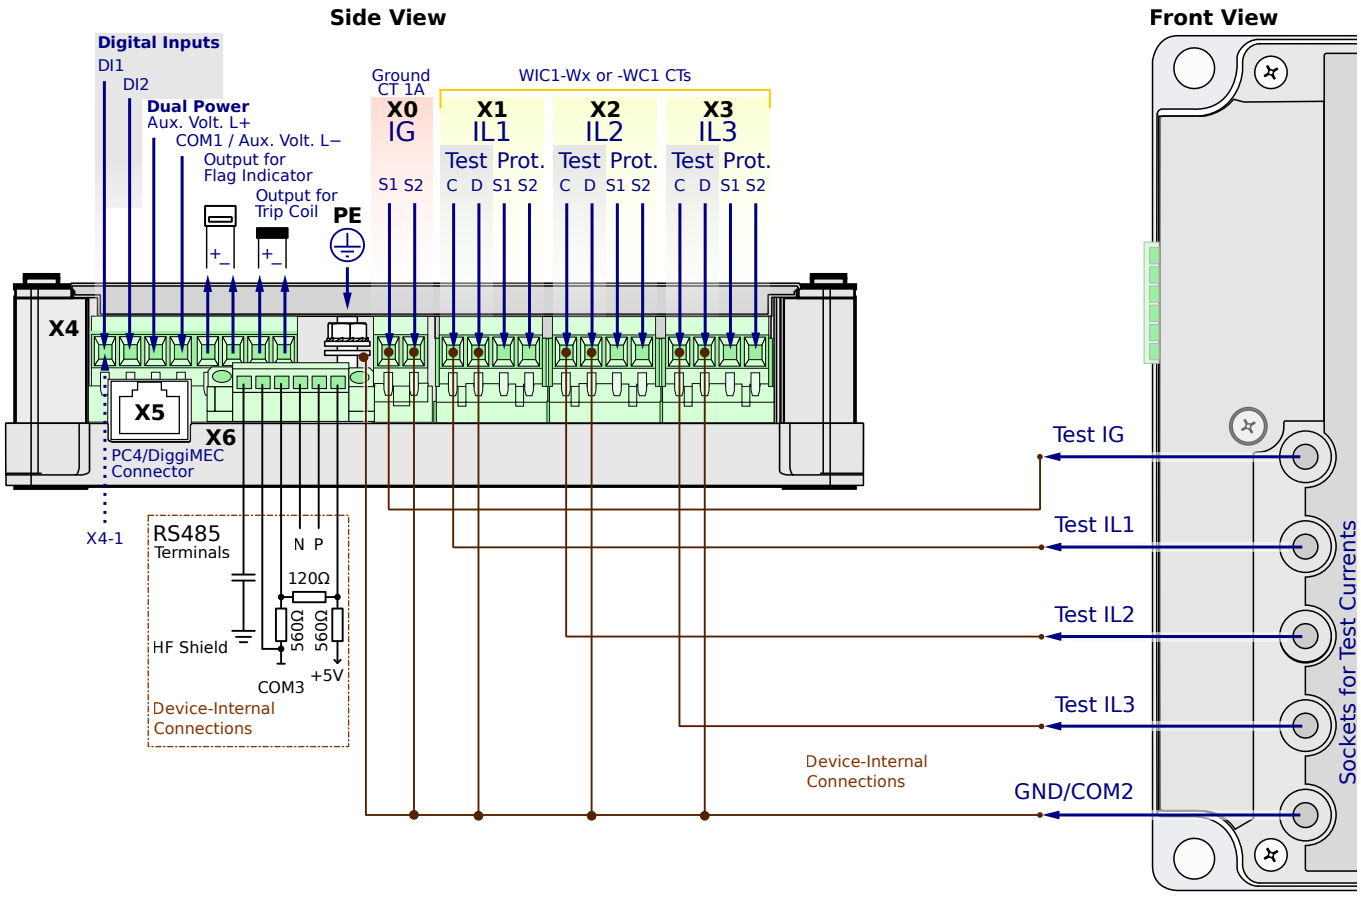


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD1PC0

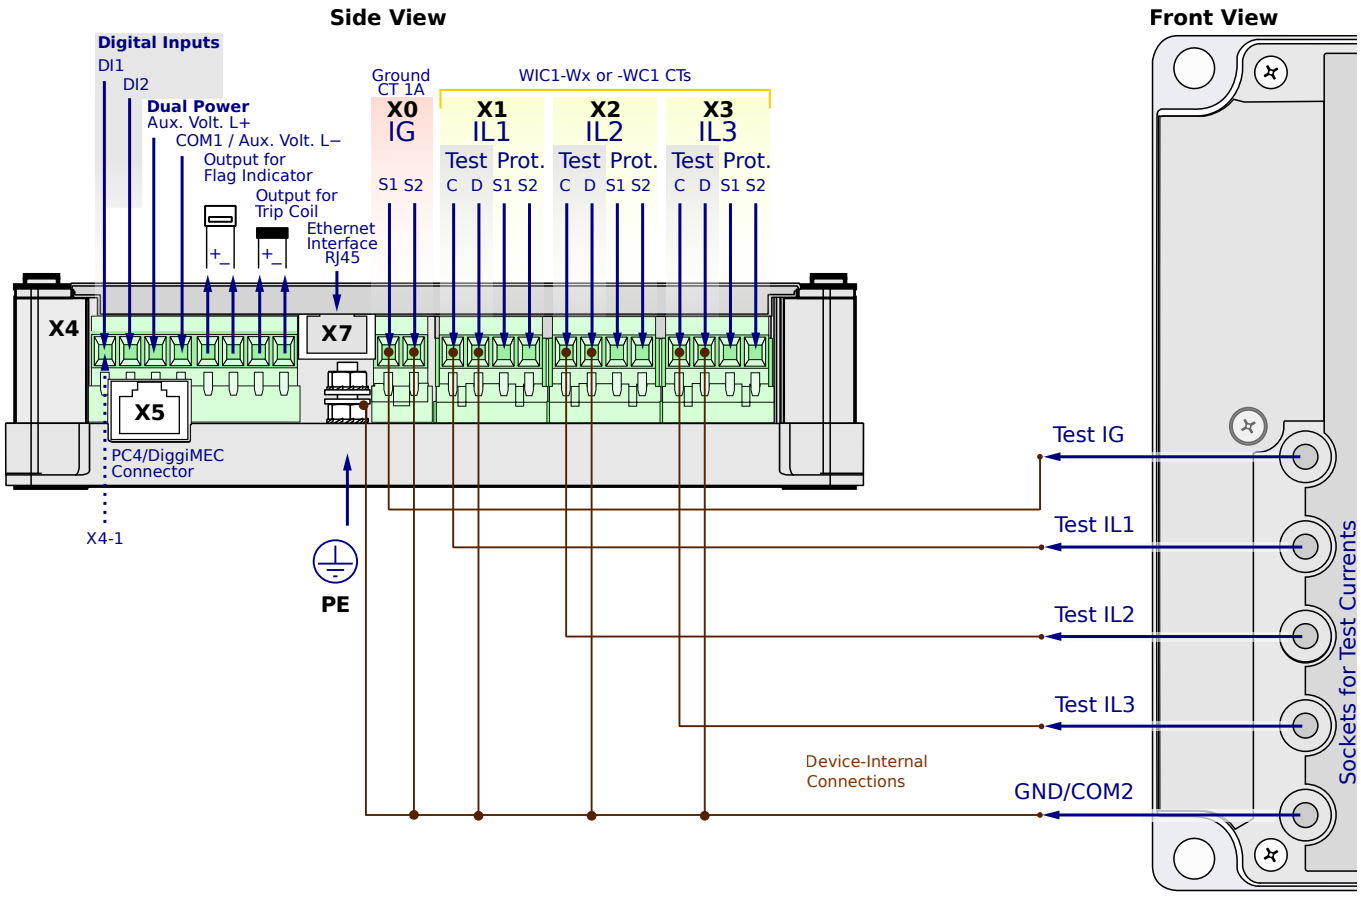


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1PCH

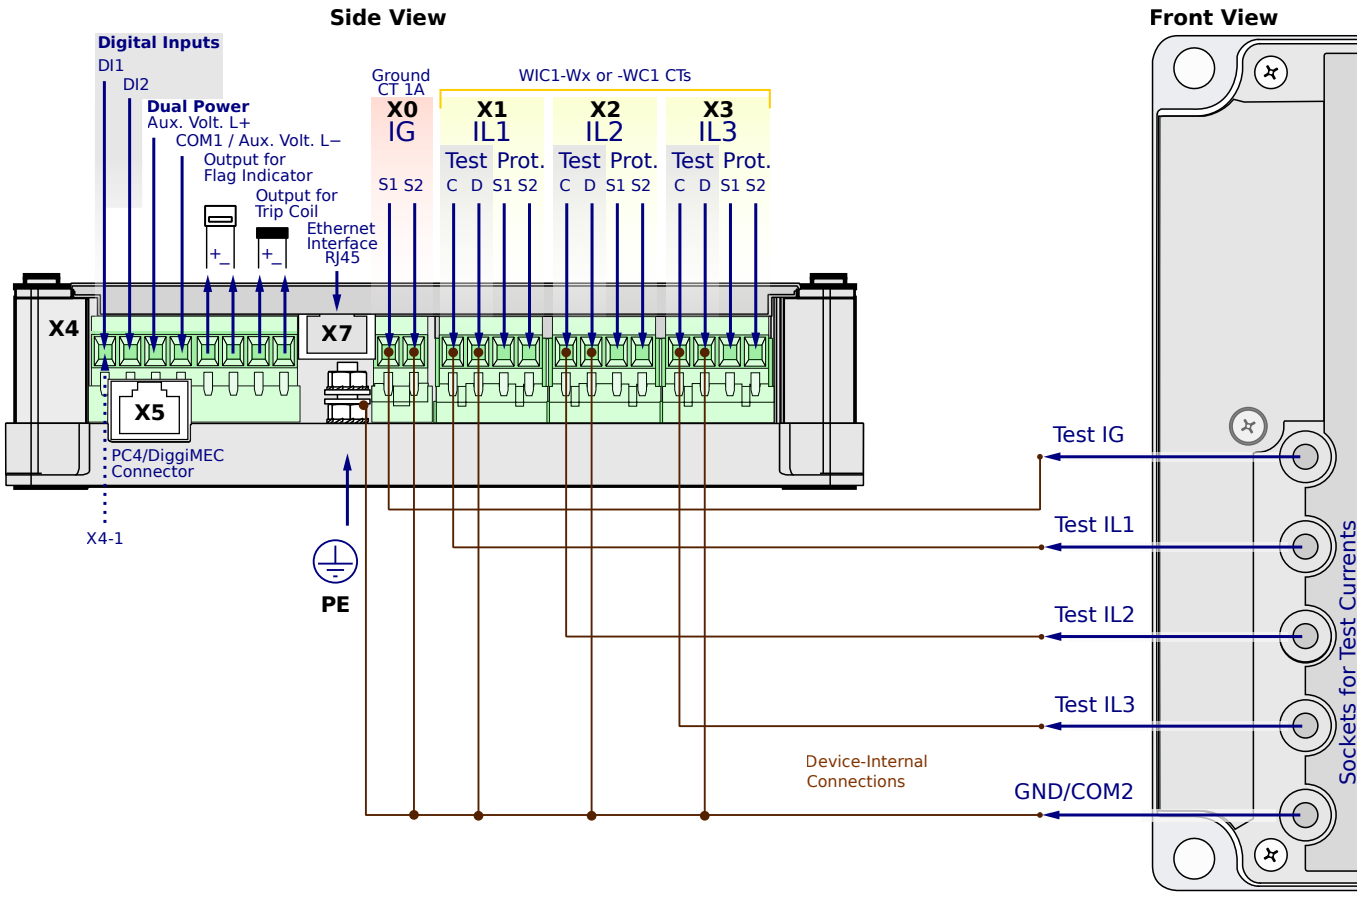


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD1PL0

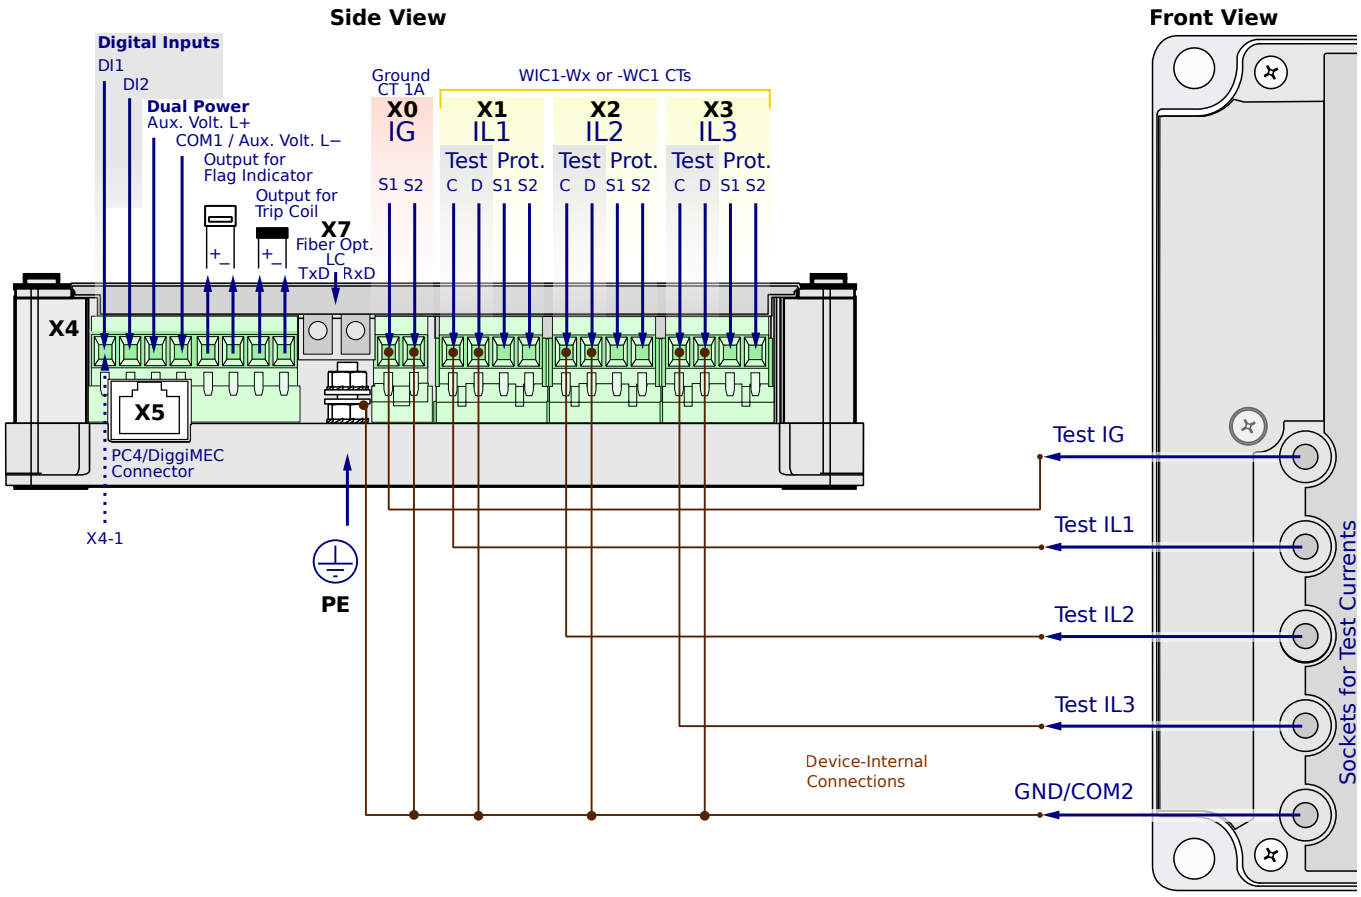


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD1PLH

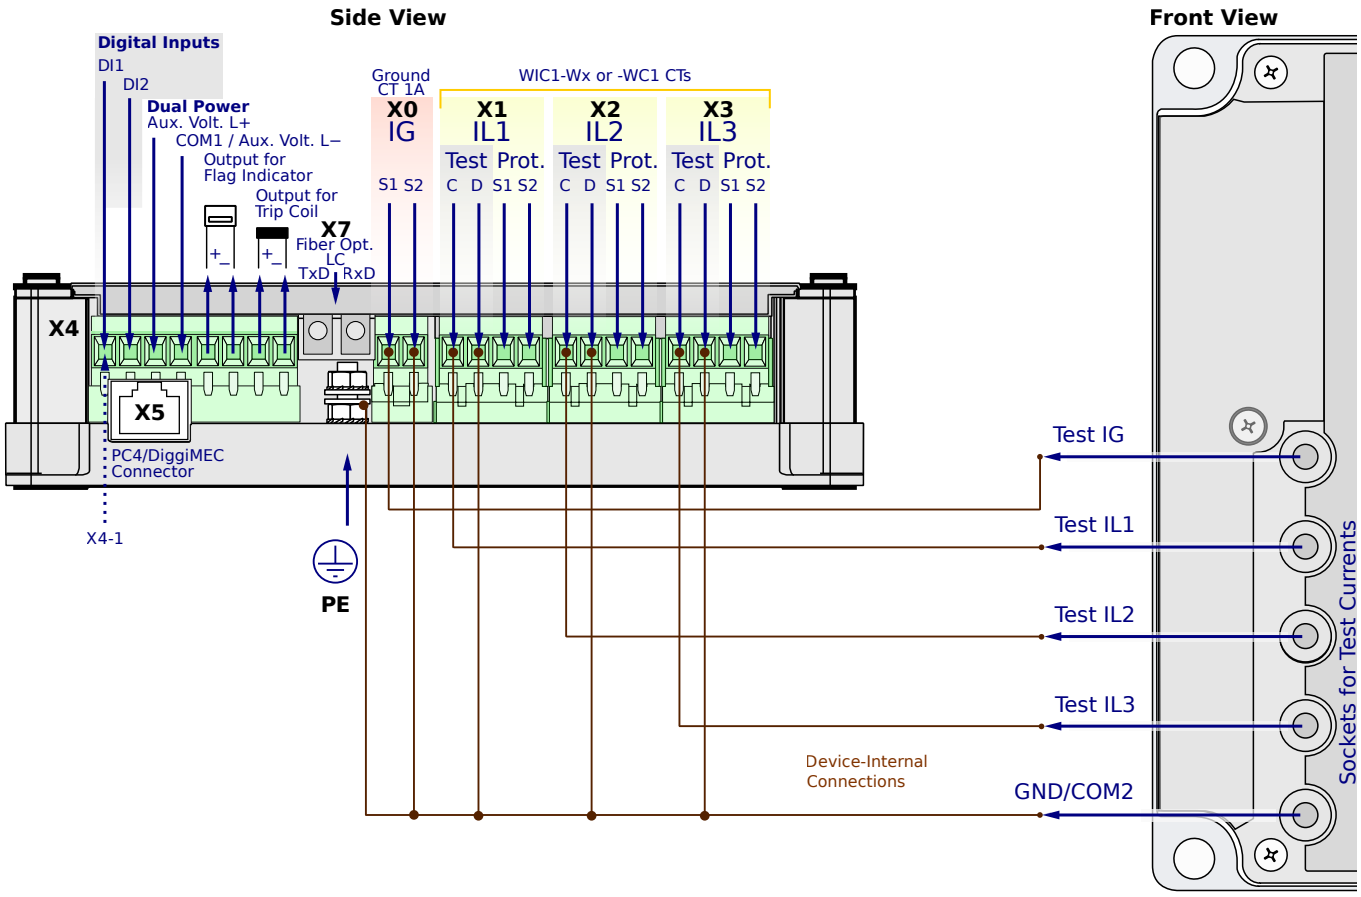


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2SA0

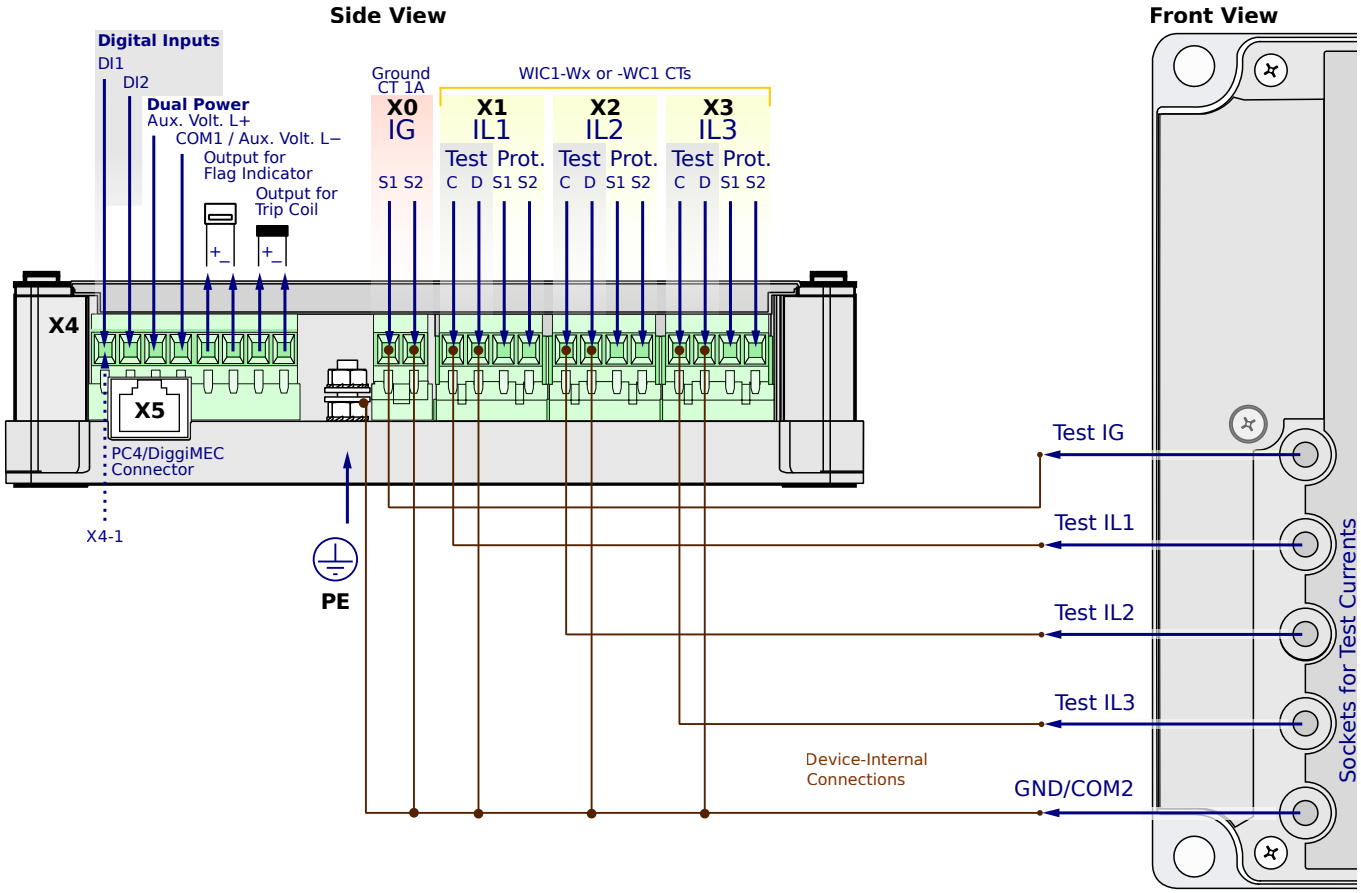


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2SAH

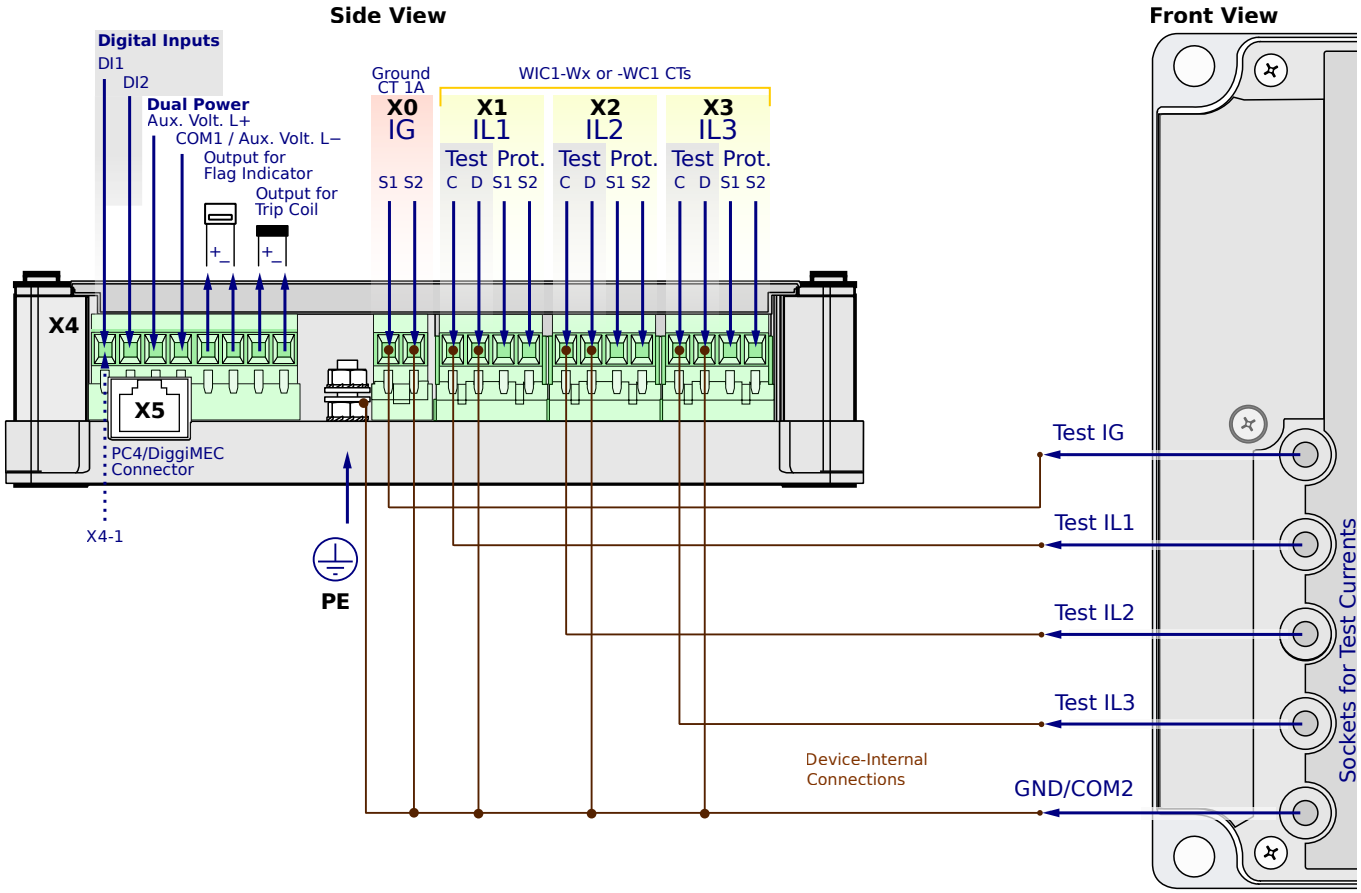


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2SB0

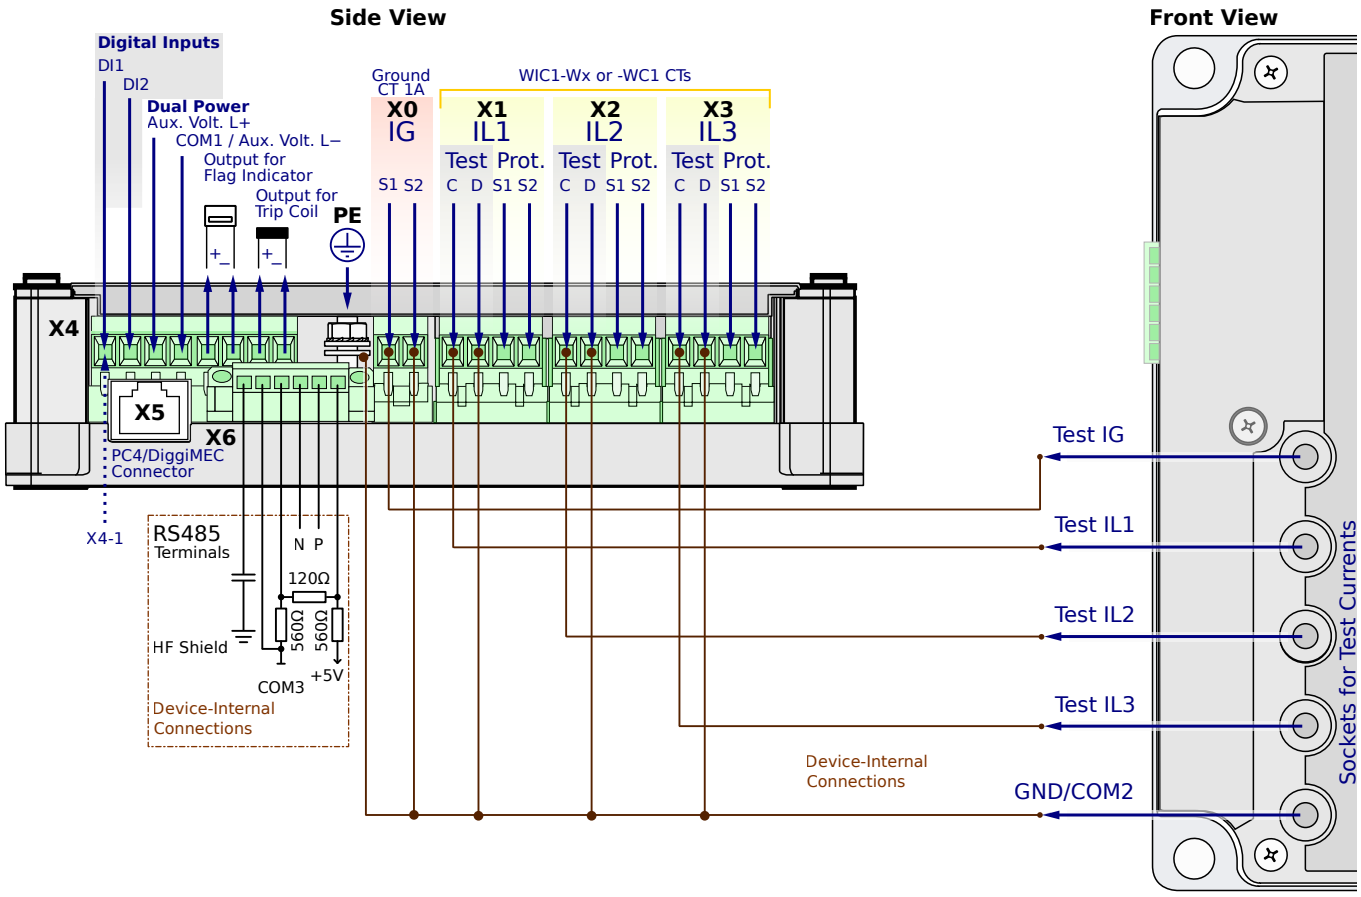


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2SBH

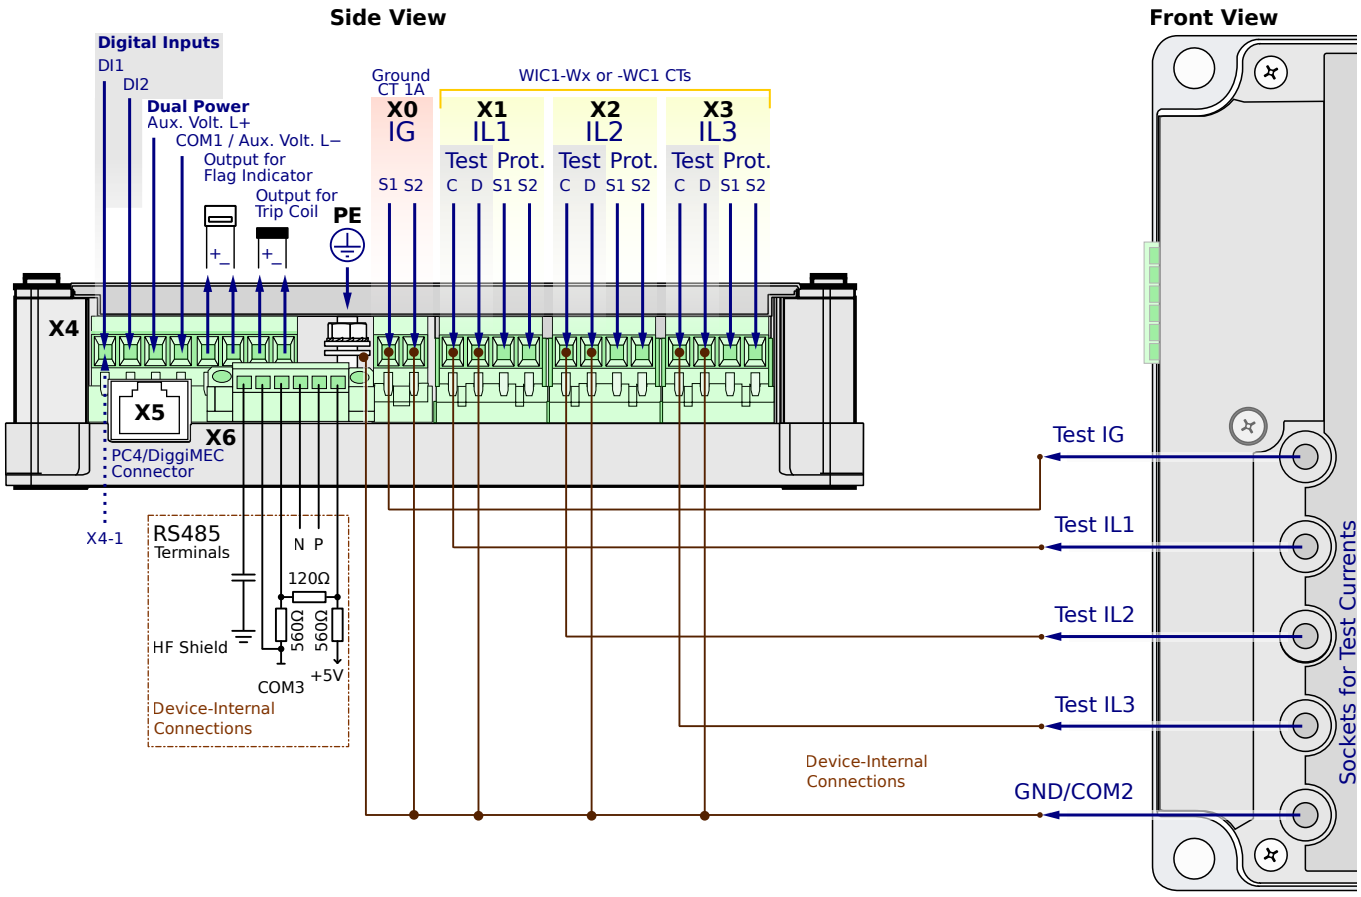


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2SC0

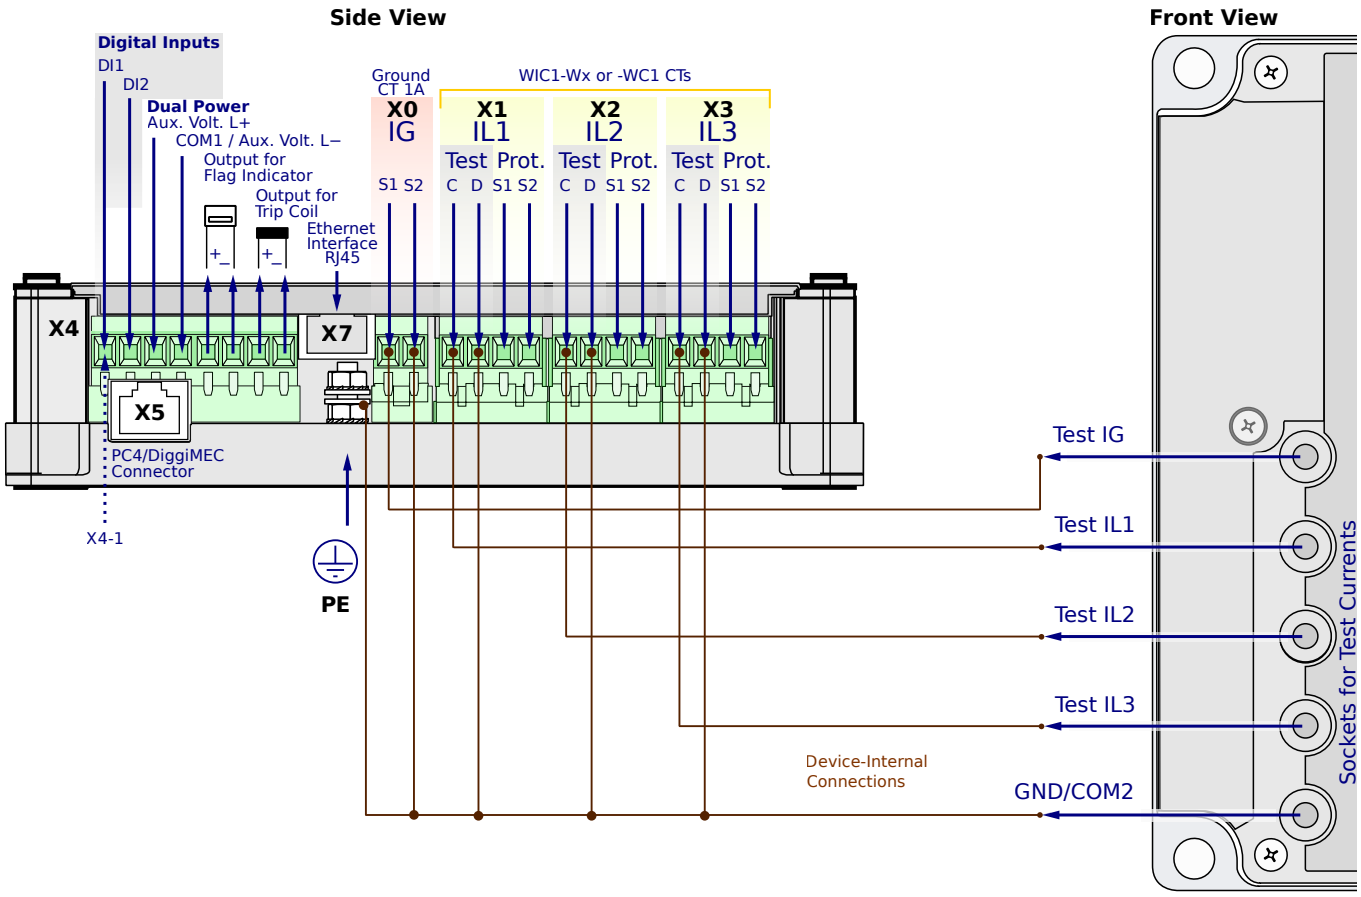


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2SCH

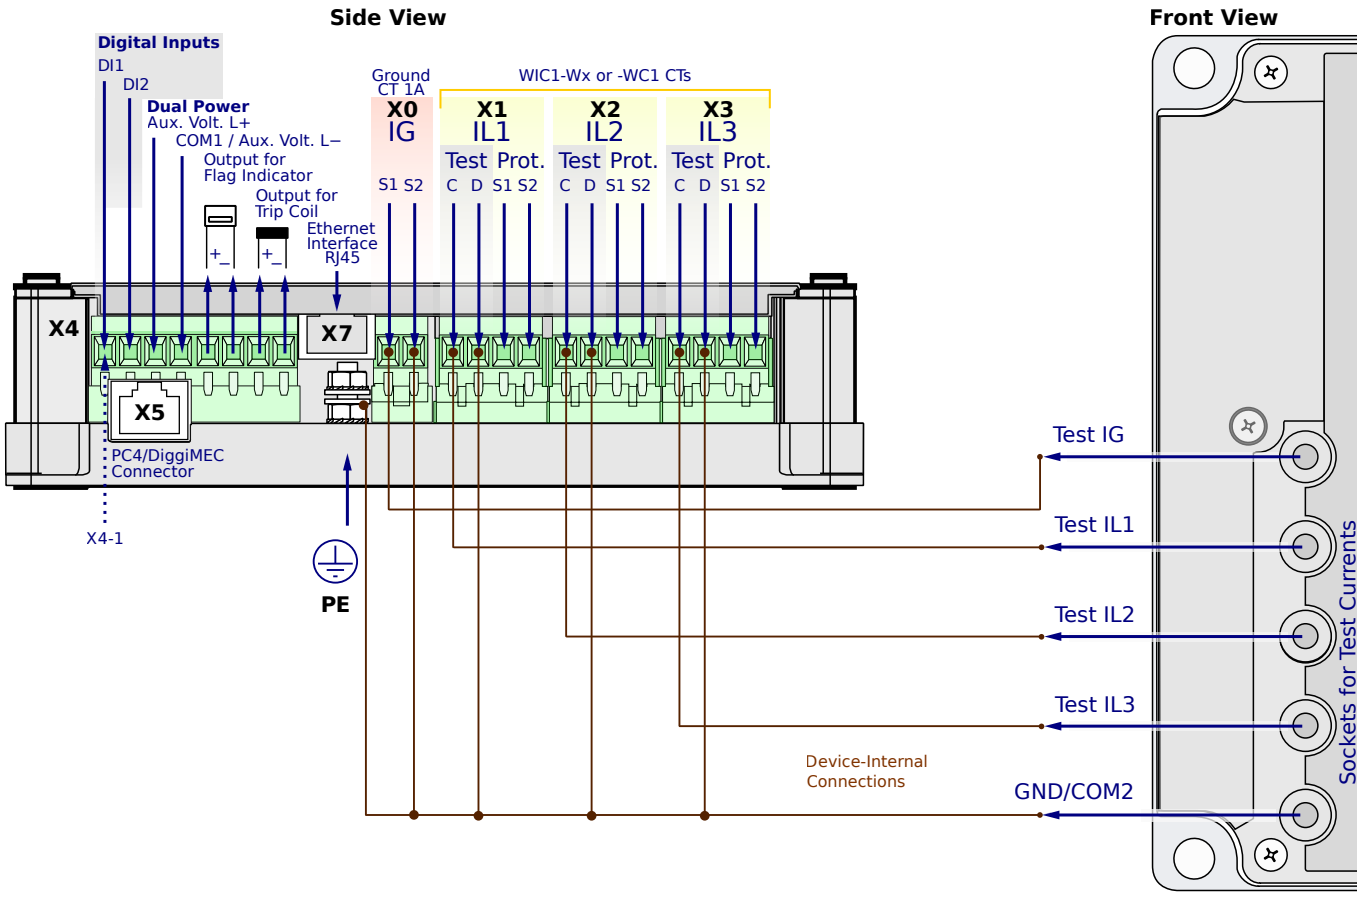


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2SL0

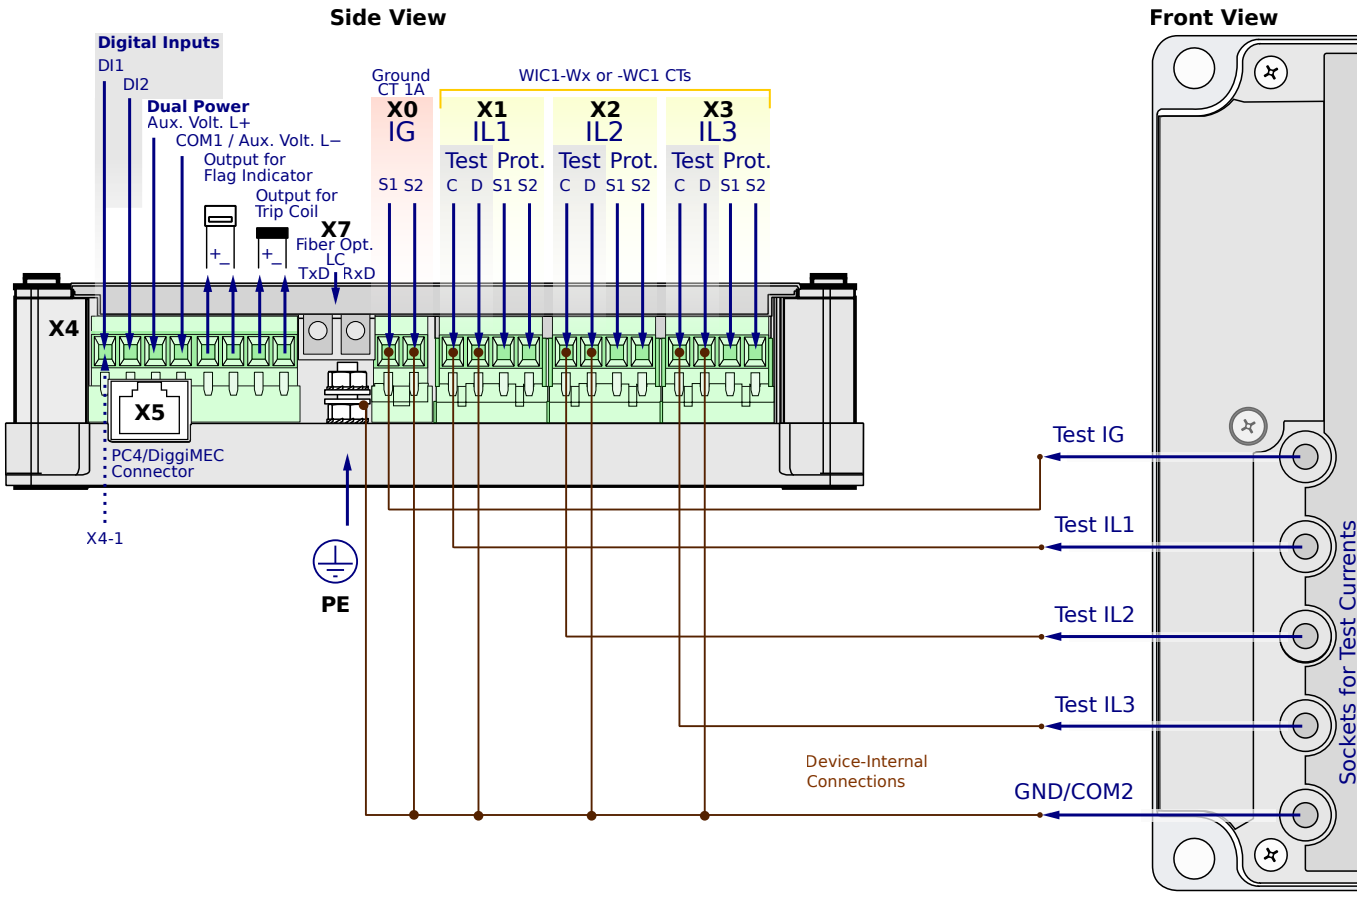


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2SLH

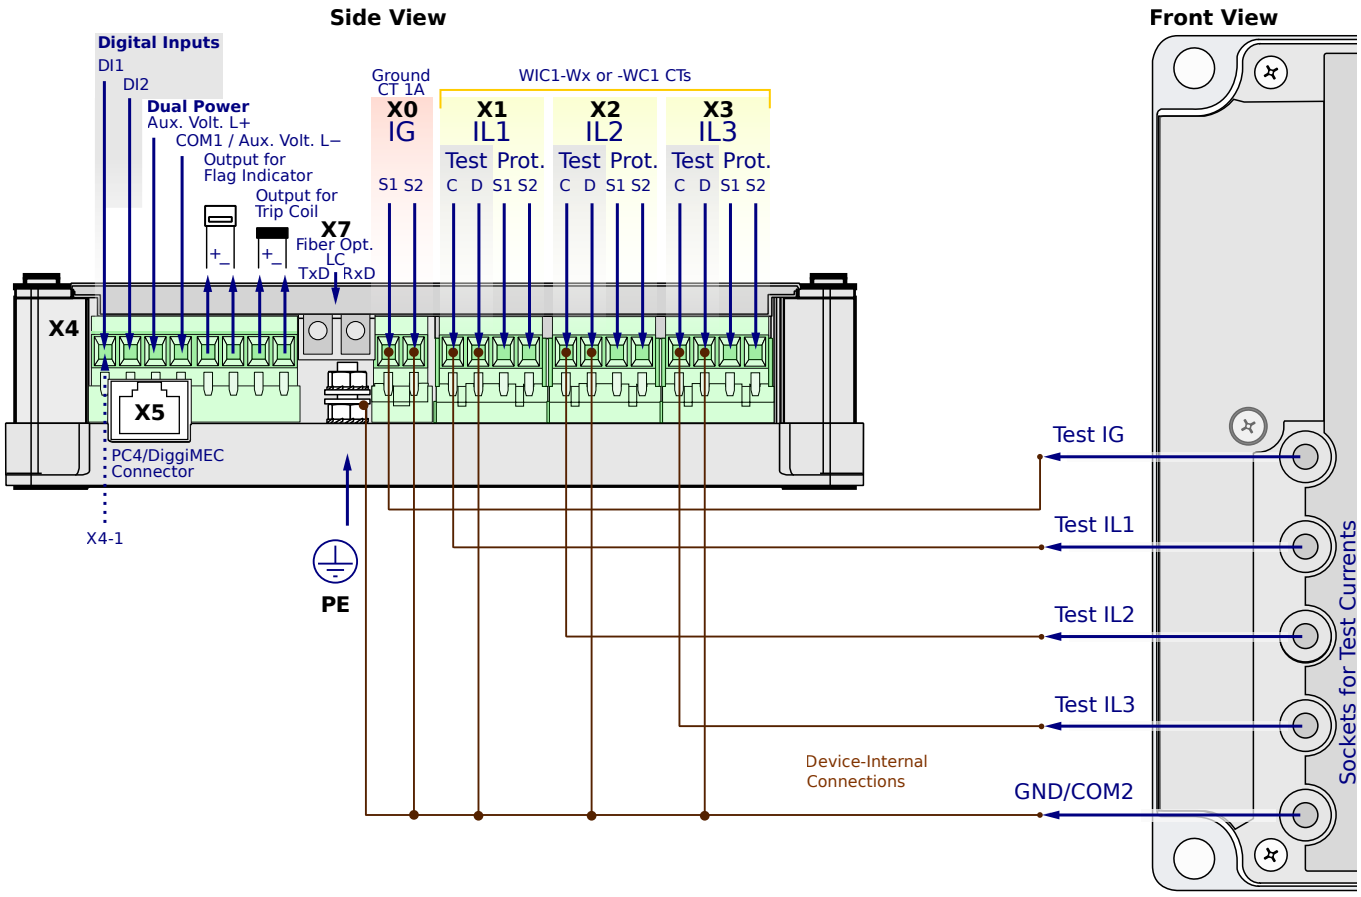


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2AA0

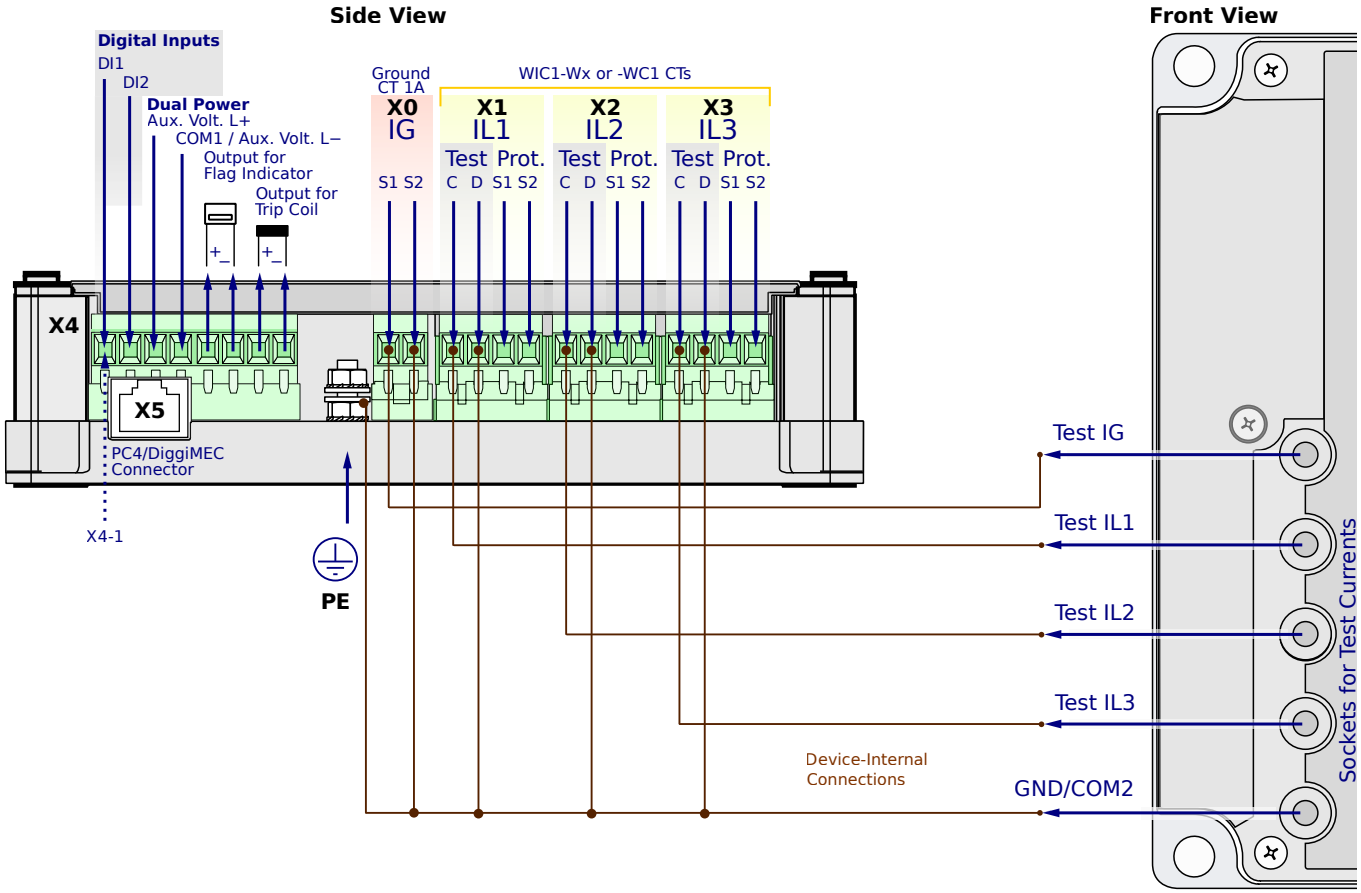


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2AAH

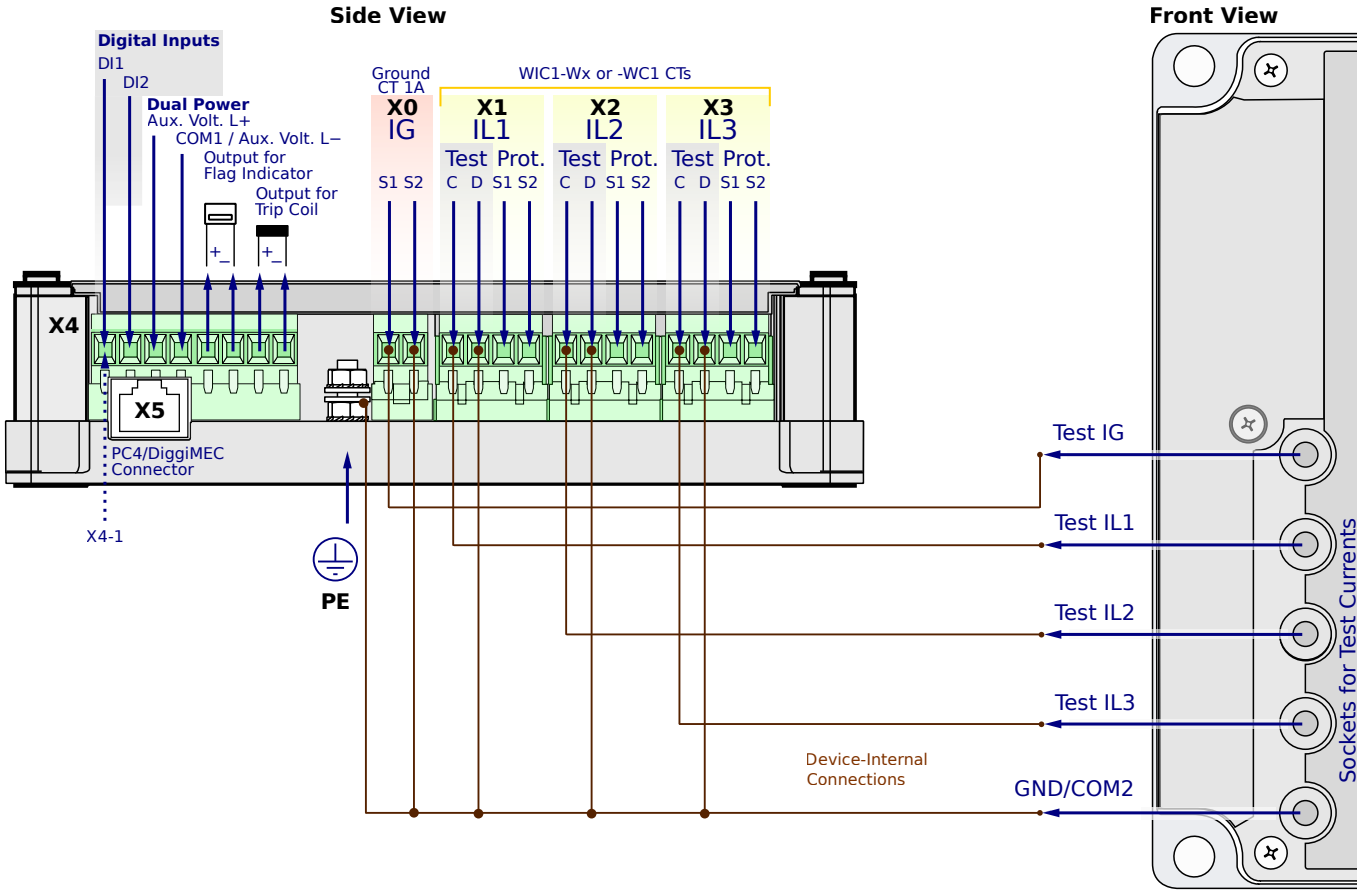


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2AB0

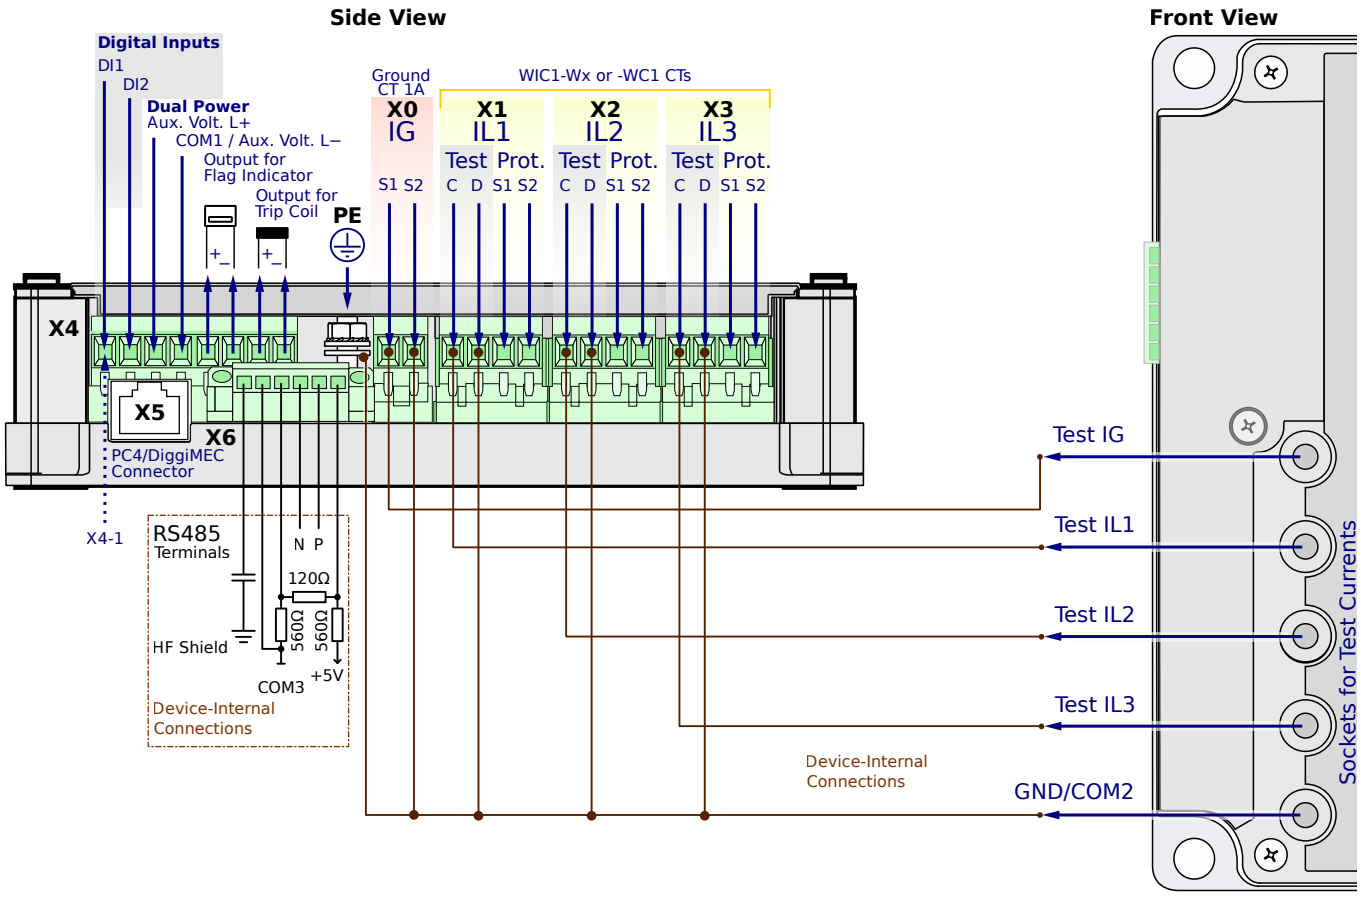


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2ABH

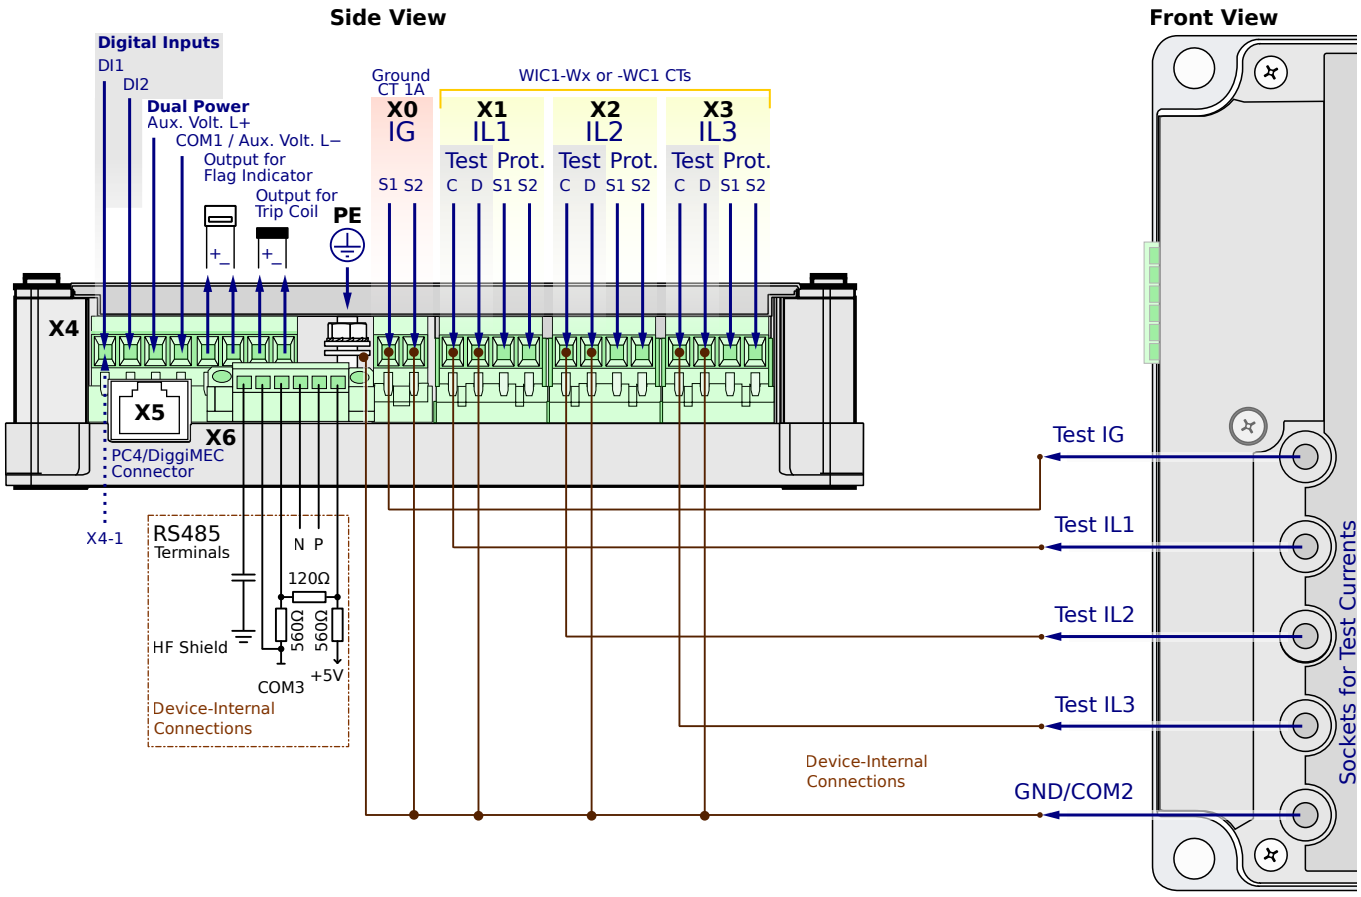


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2AC0

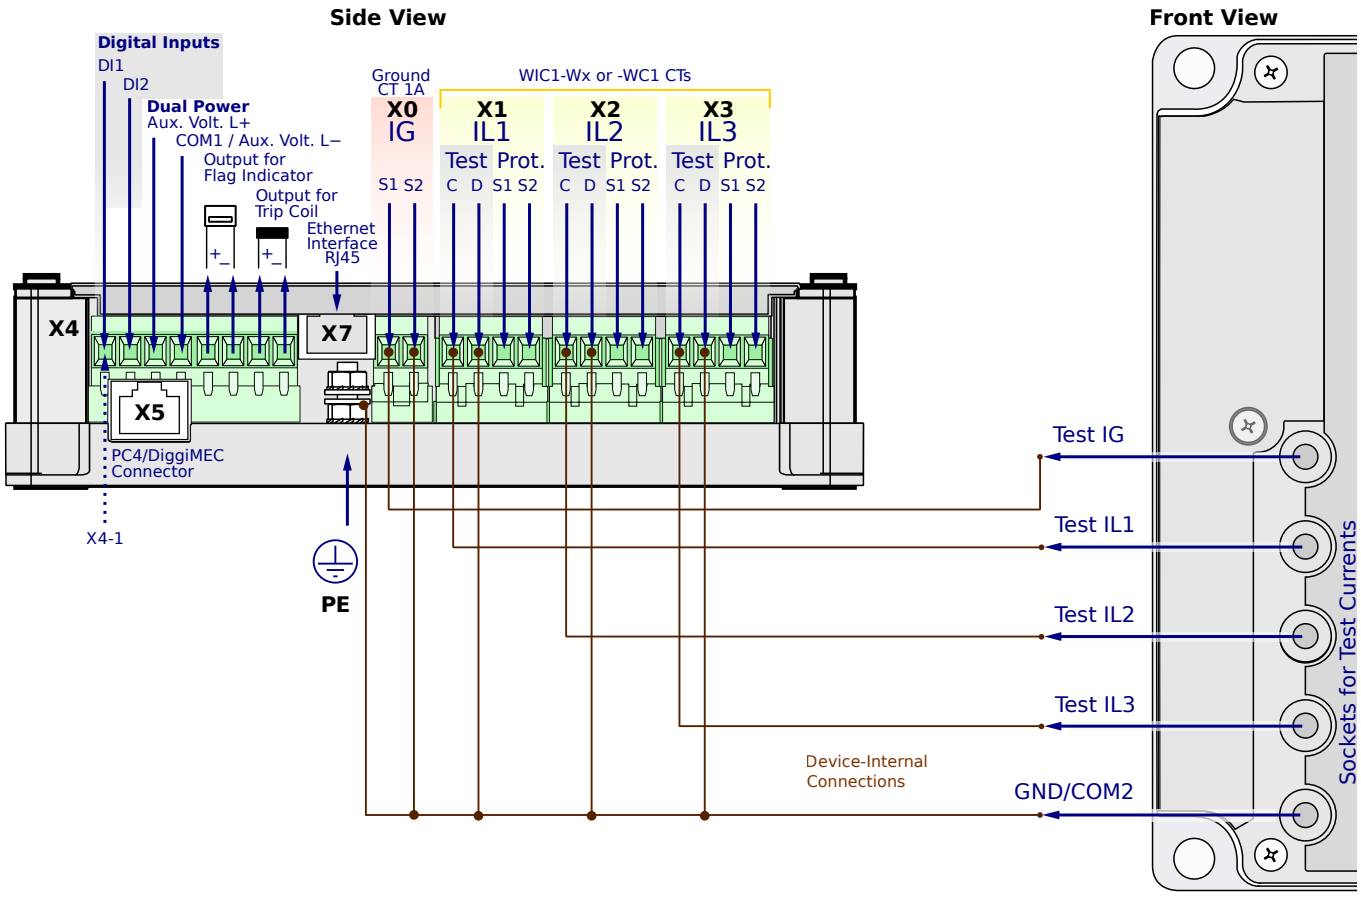


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2ACH

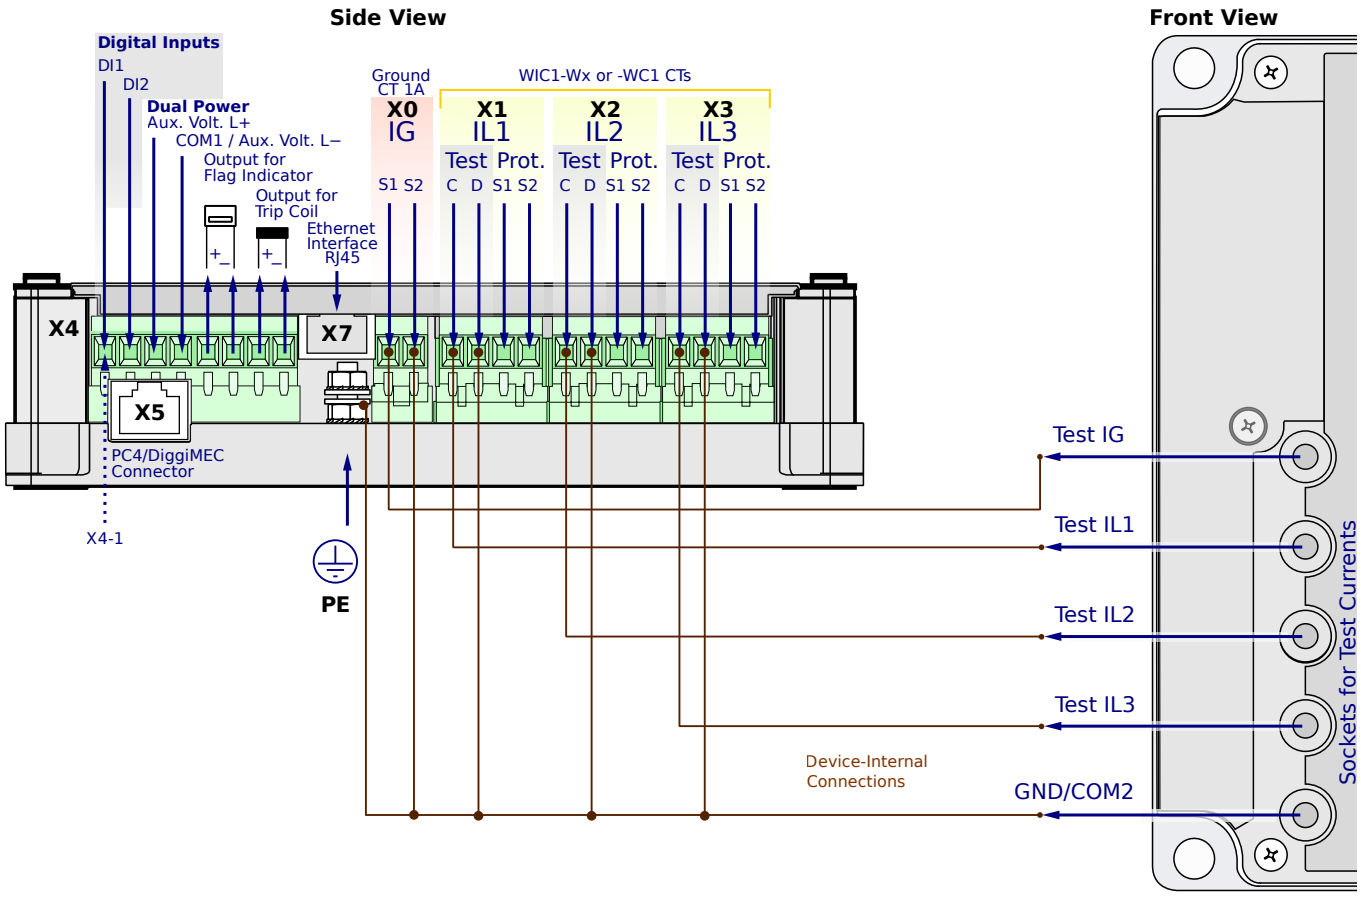


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2AL0

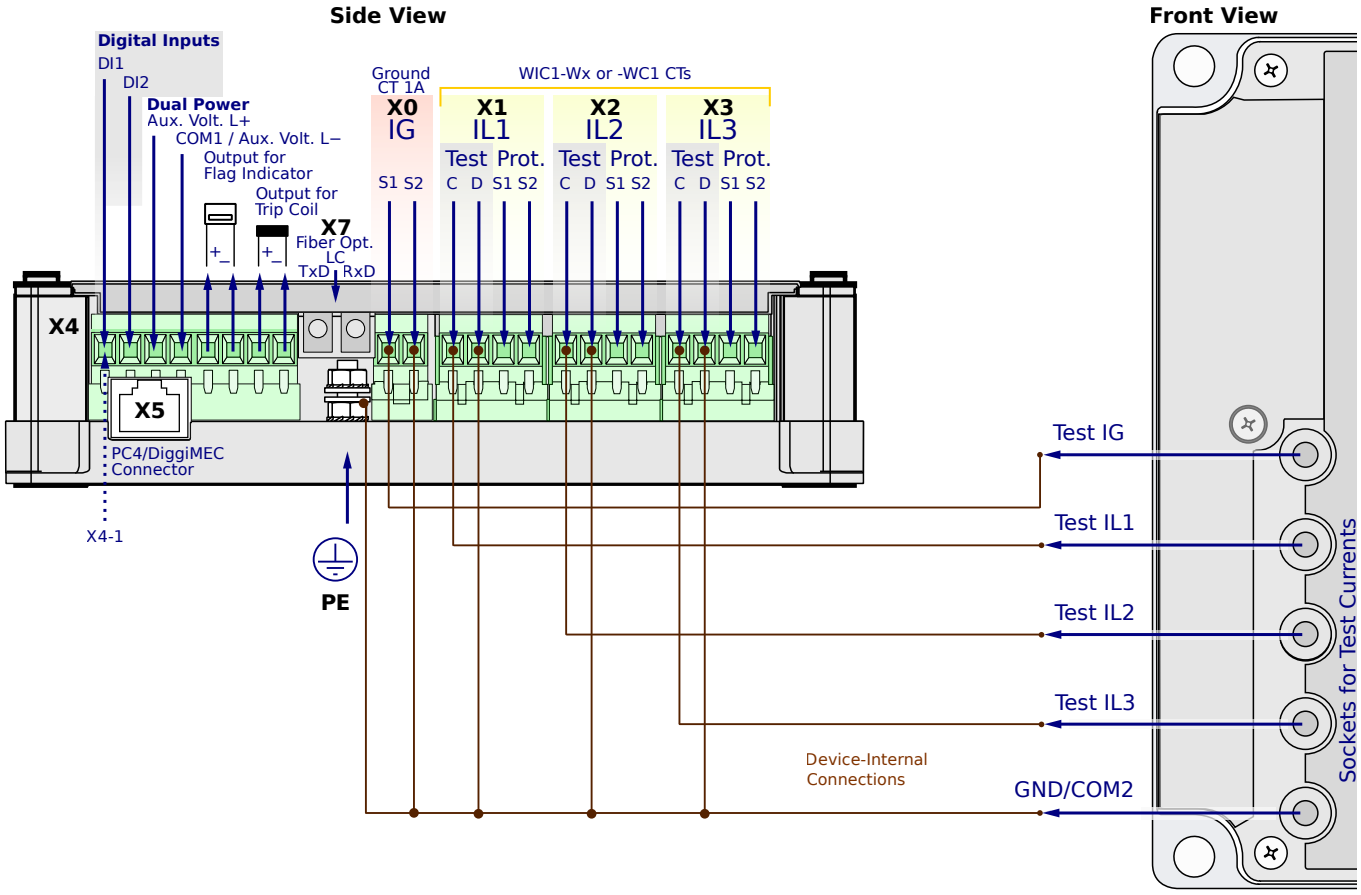


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2ALH

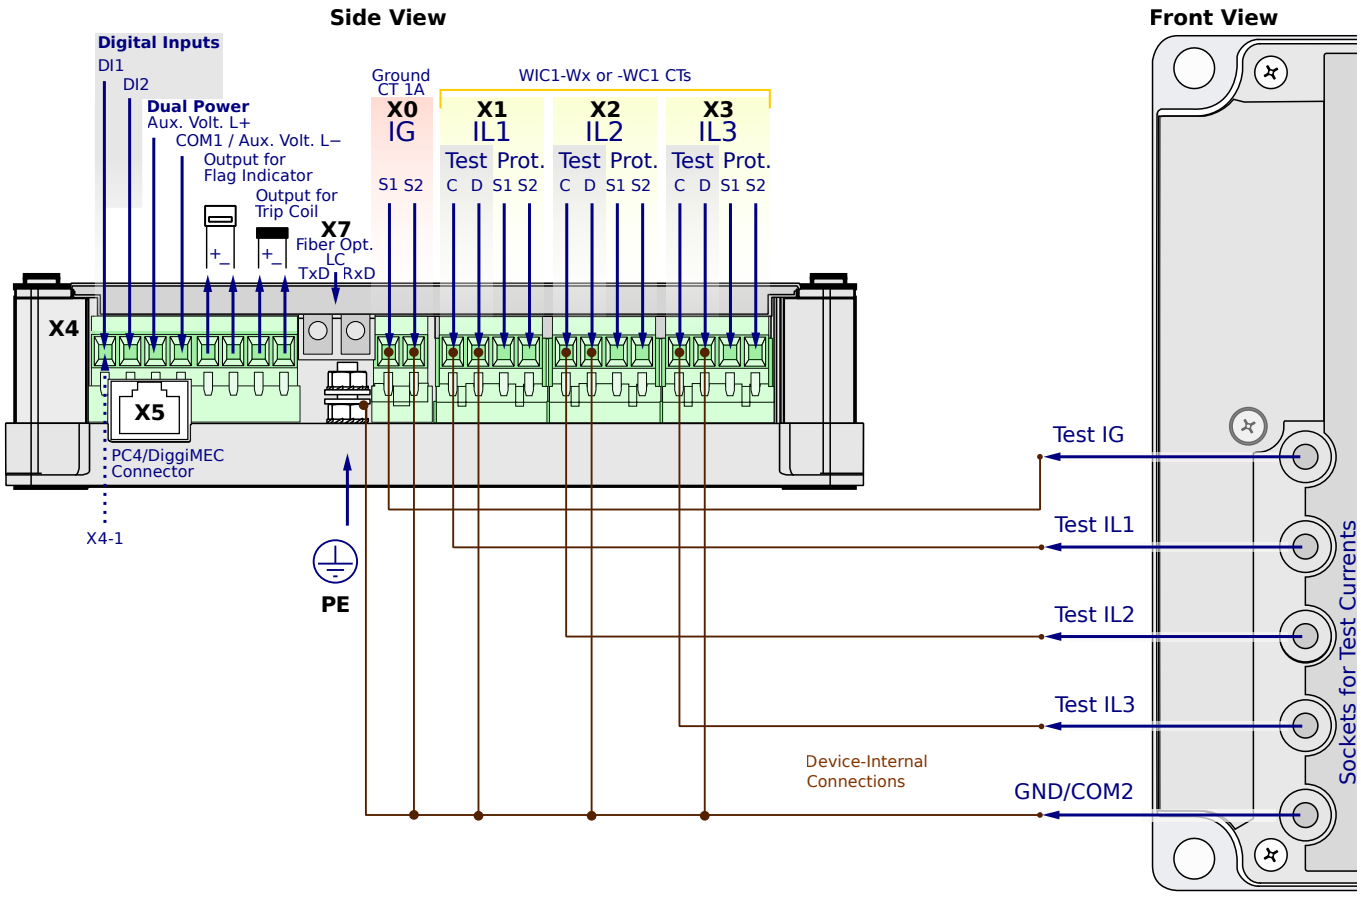


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2PA0

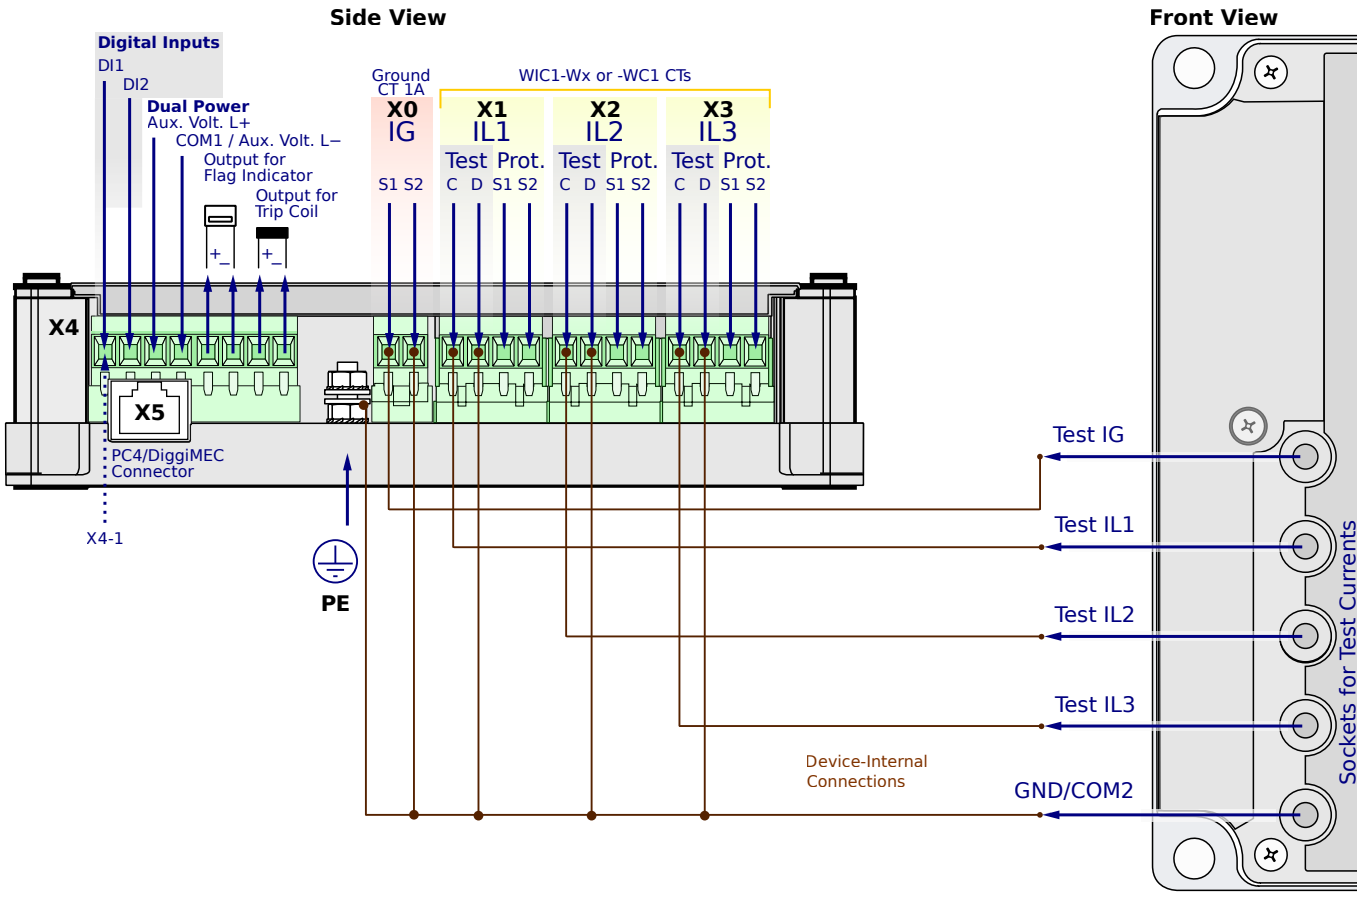


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2PAH

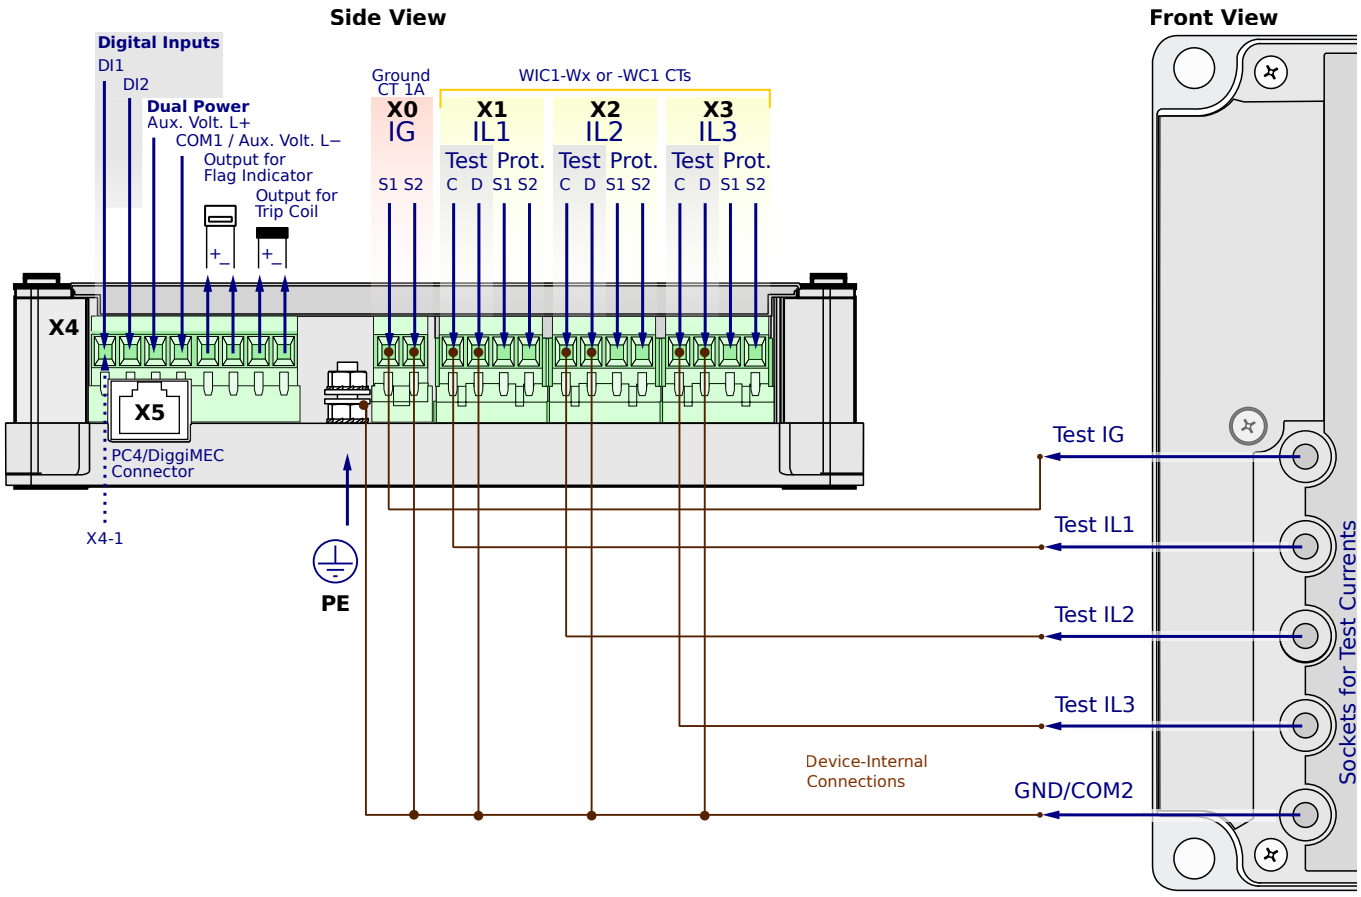


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4SB0CD2PB0

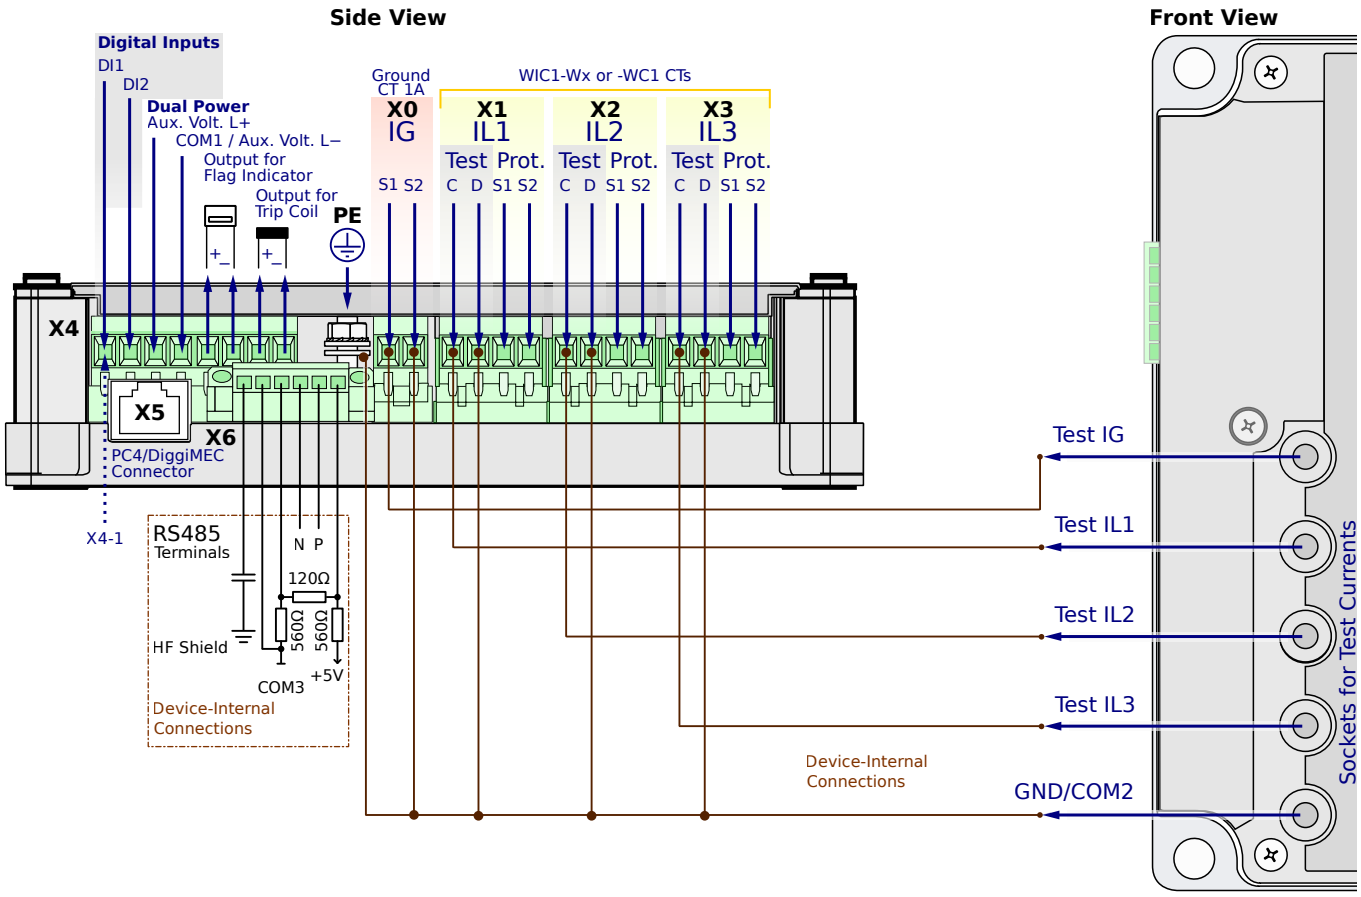


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2PBH

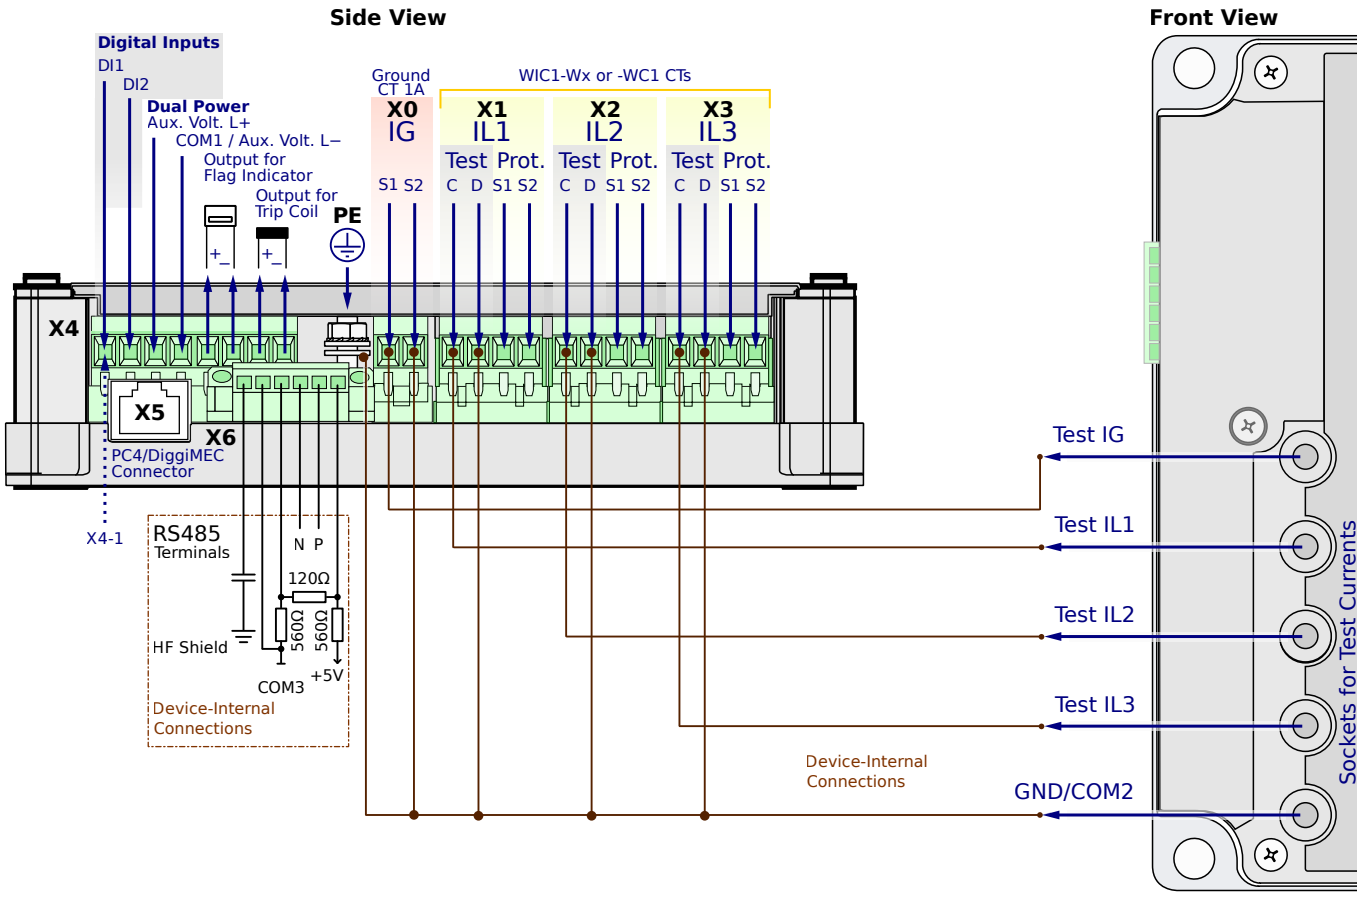


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4SB0CD2PC0

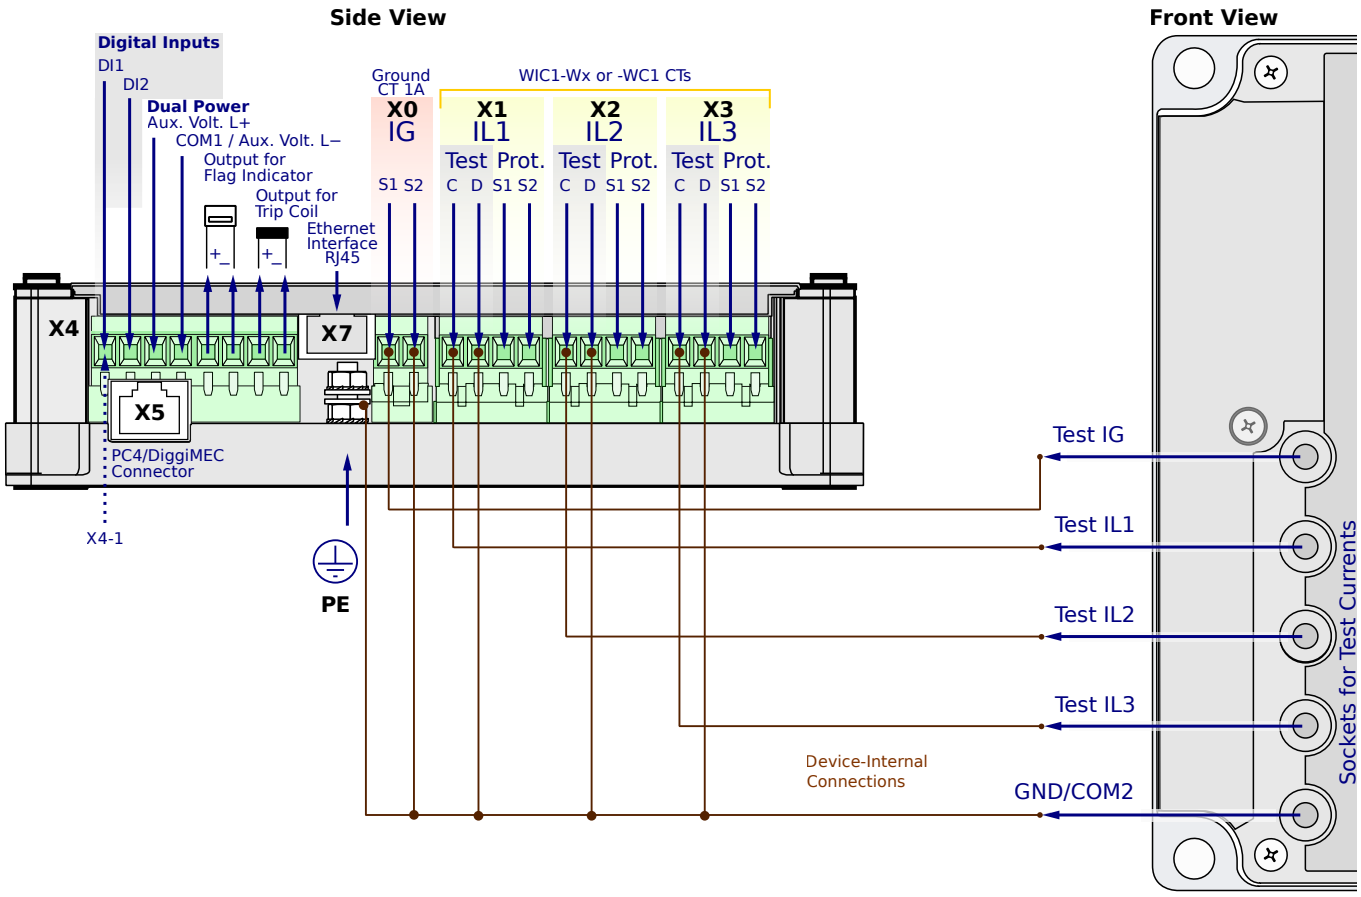


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2PCH

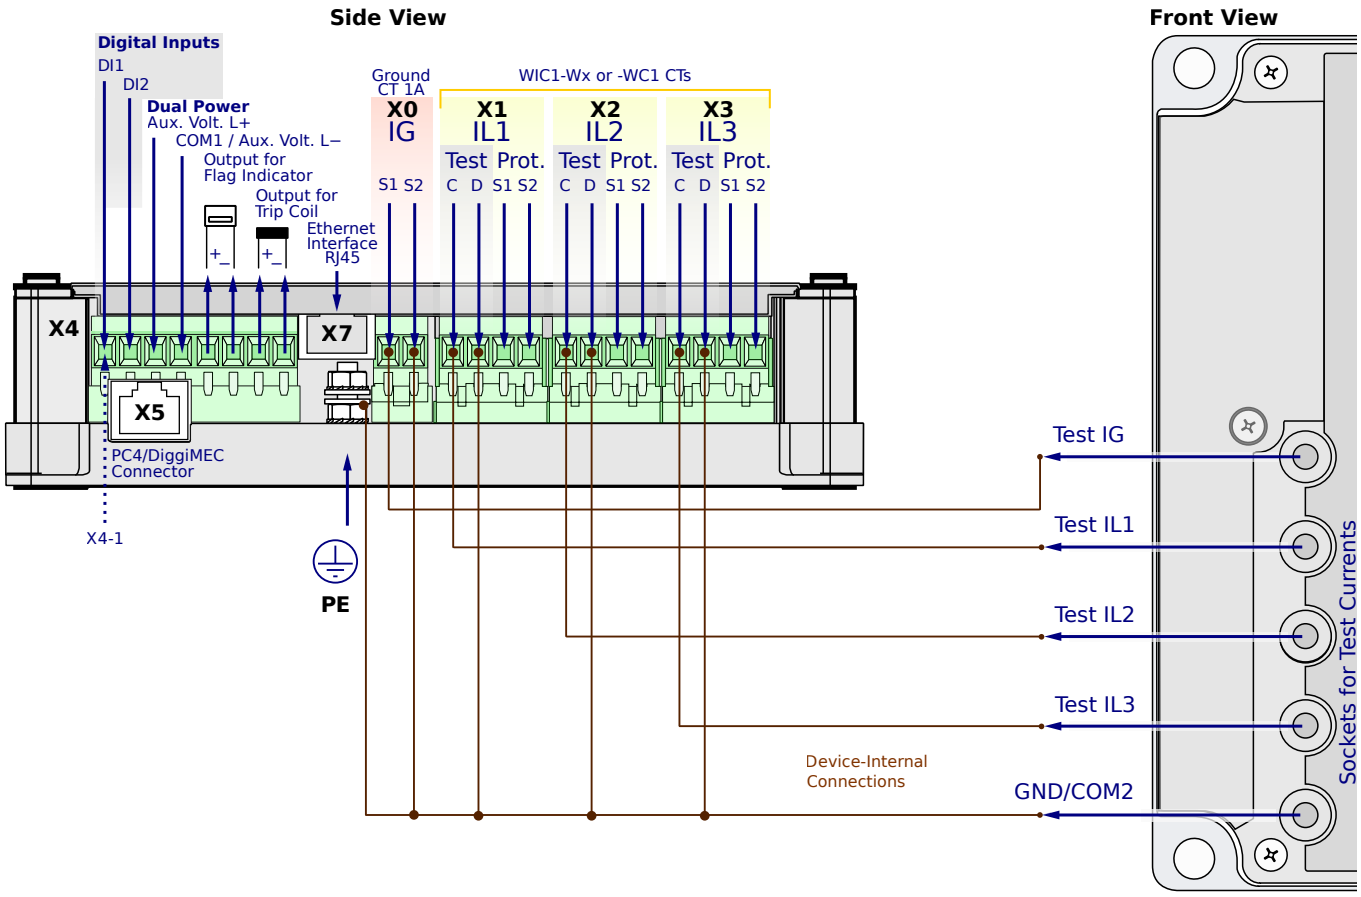


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4SB0CD2PL0

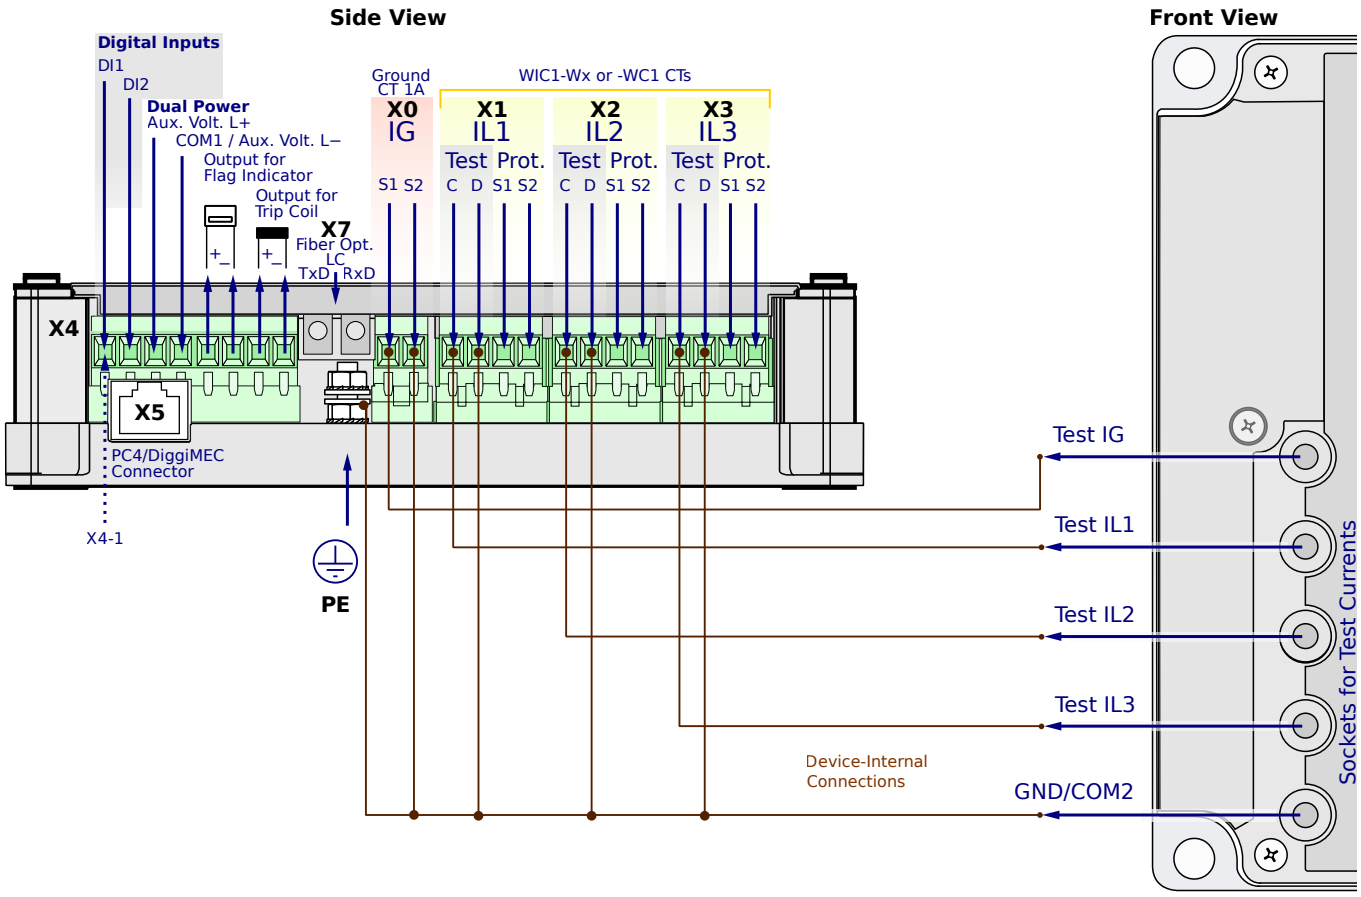


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4SB0CD2PLH

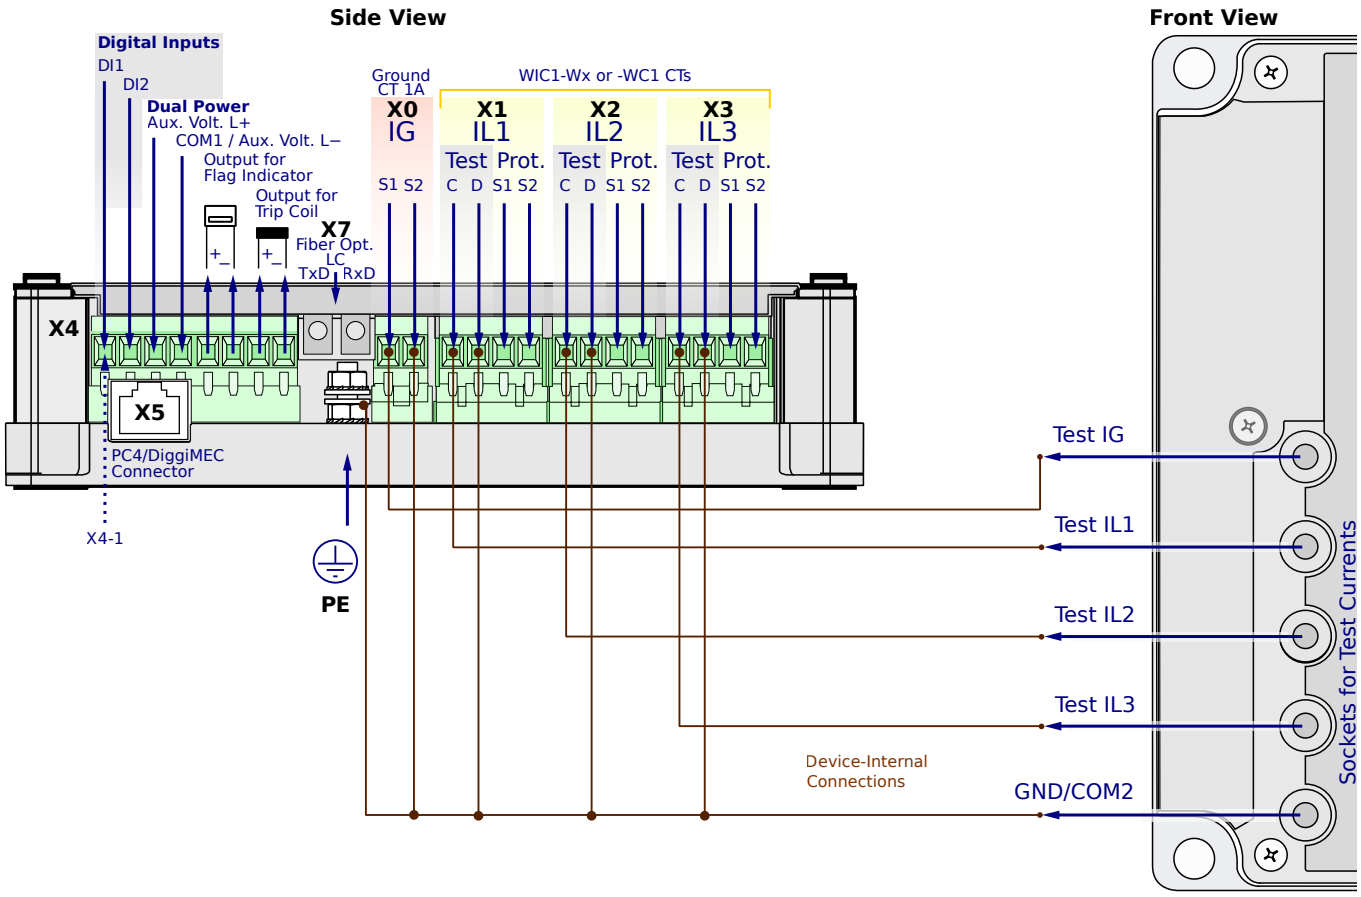


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is used as default.)
X1...X3 – WIC1-Wx or -WC1 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0SA0

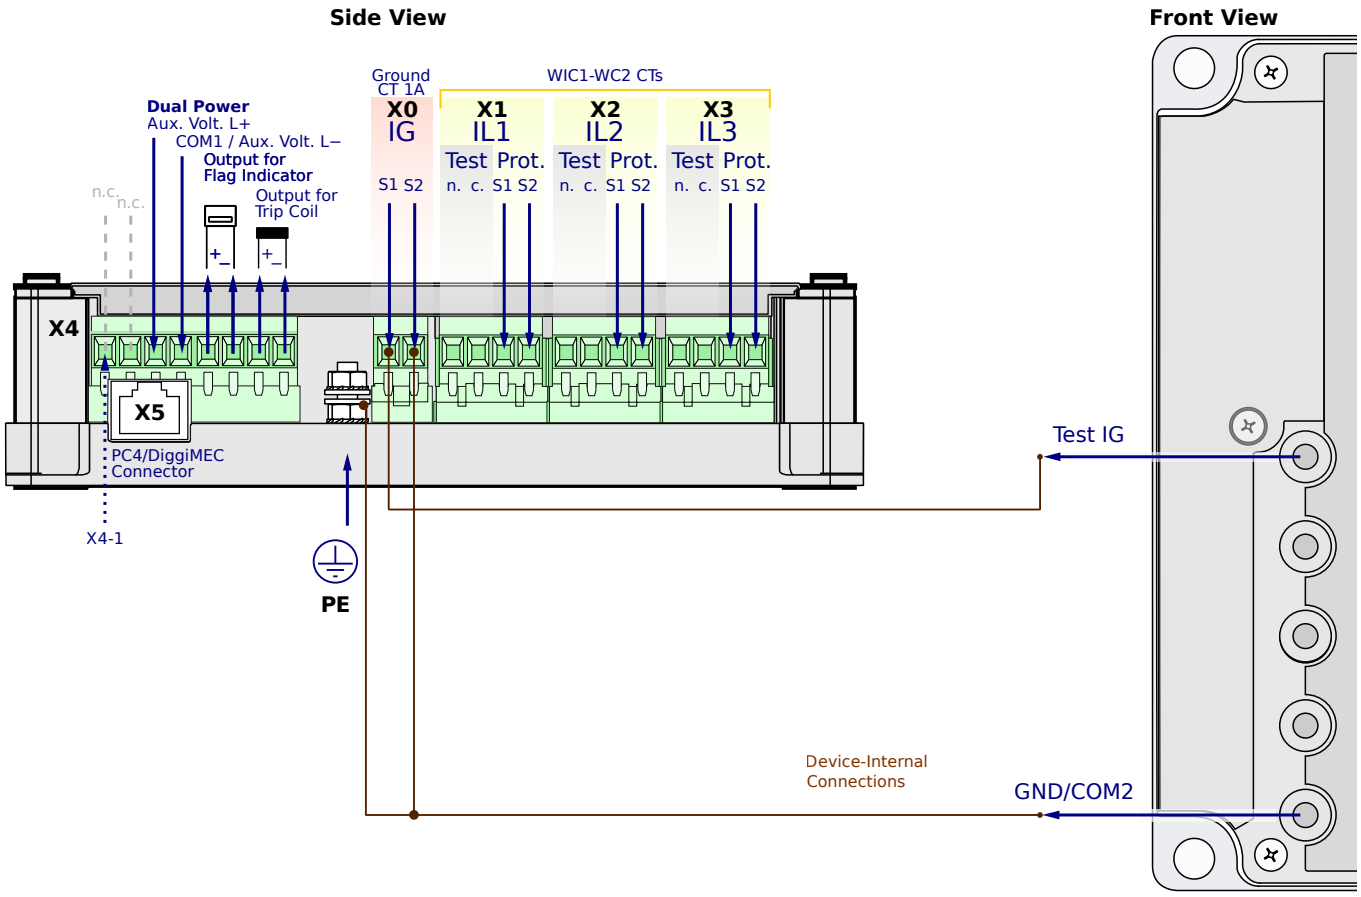


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0SAH

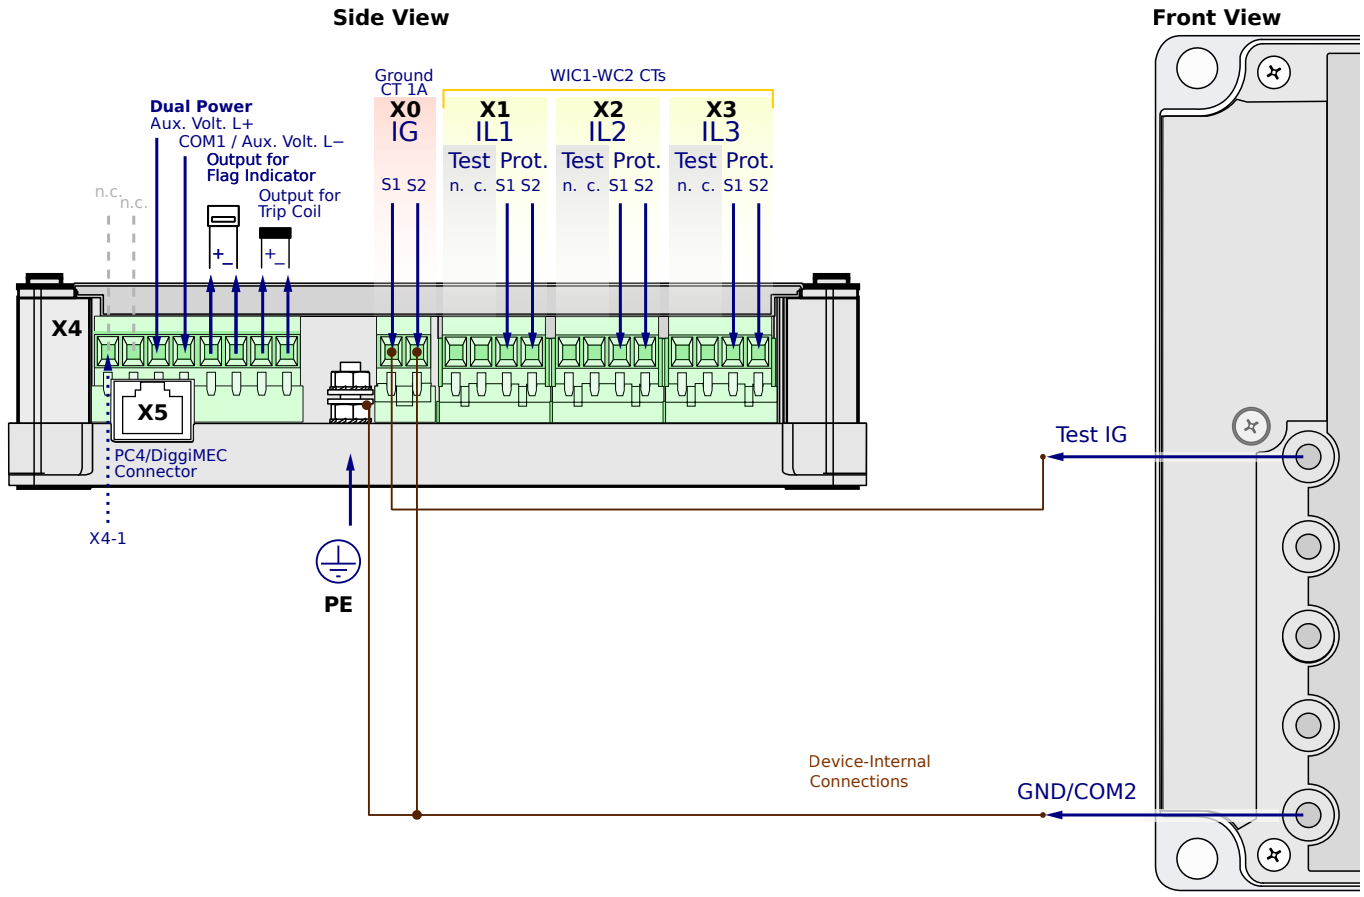


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0SB0

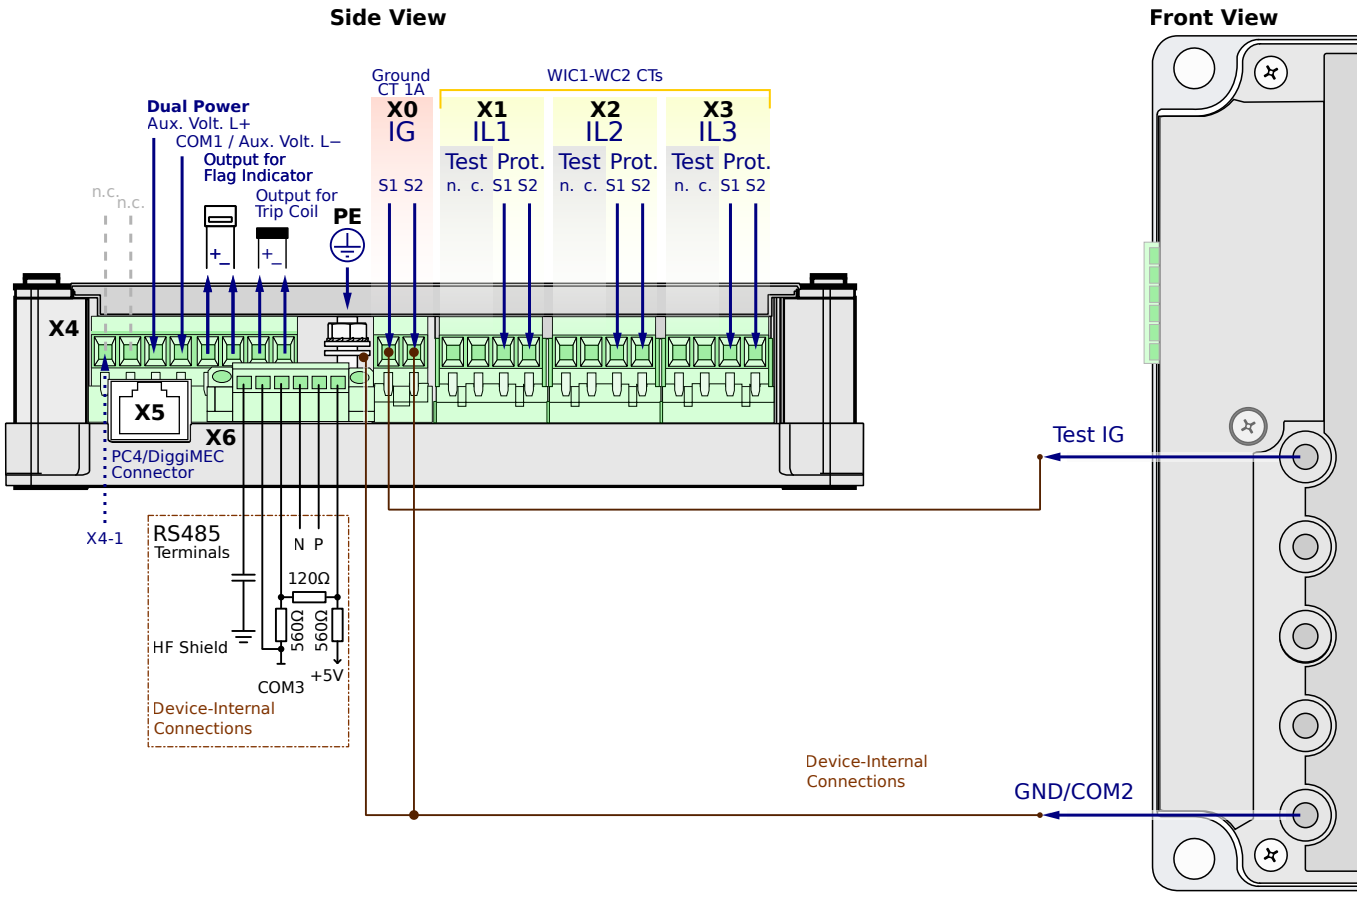


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0SBH

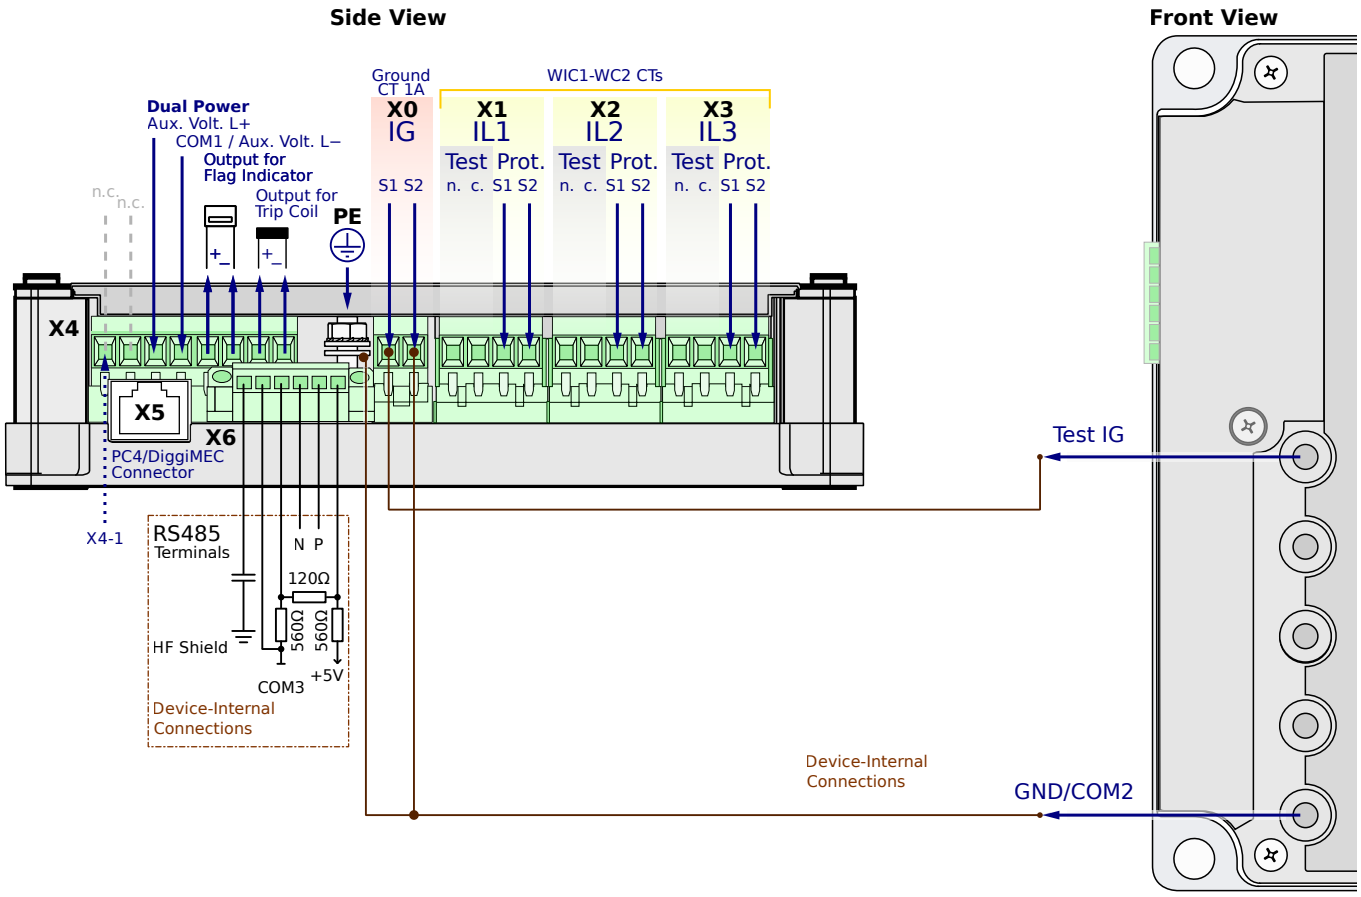


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0SC0

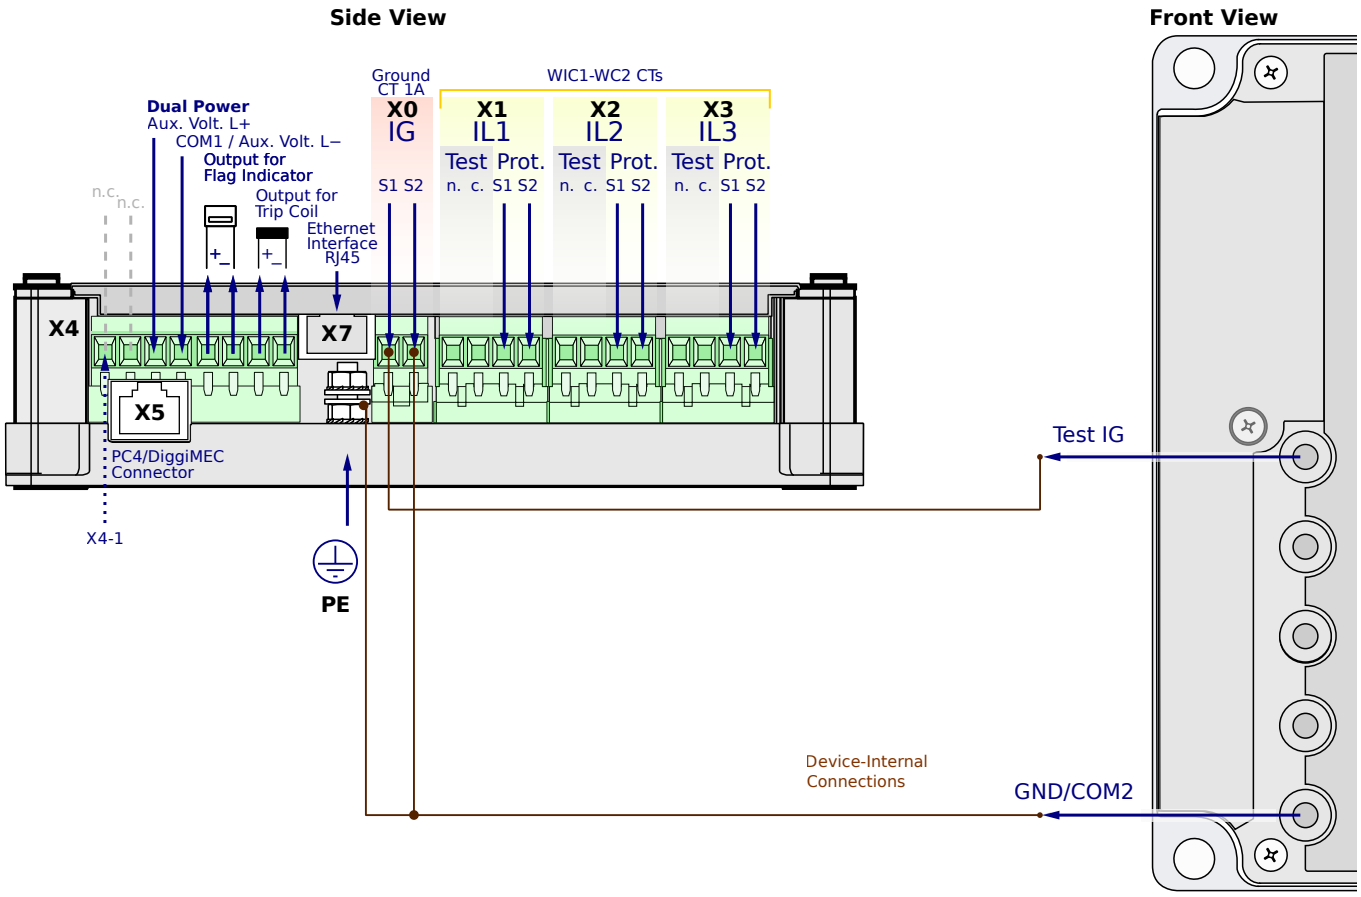


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0SCH

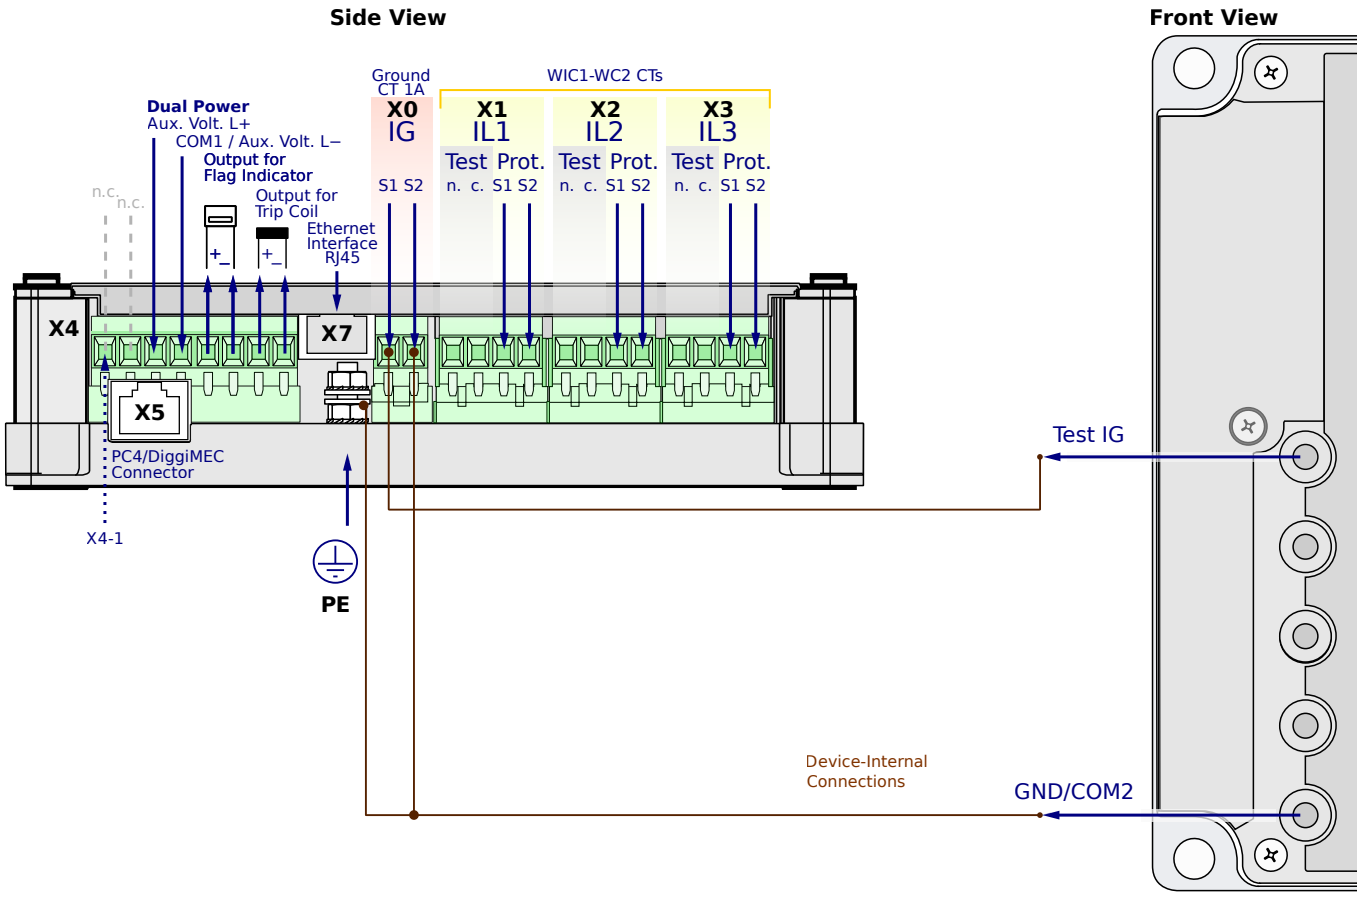


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0SL0

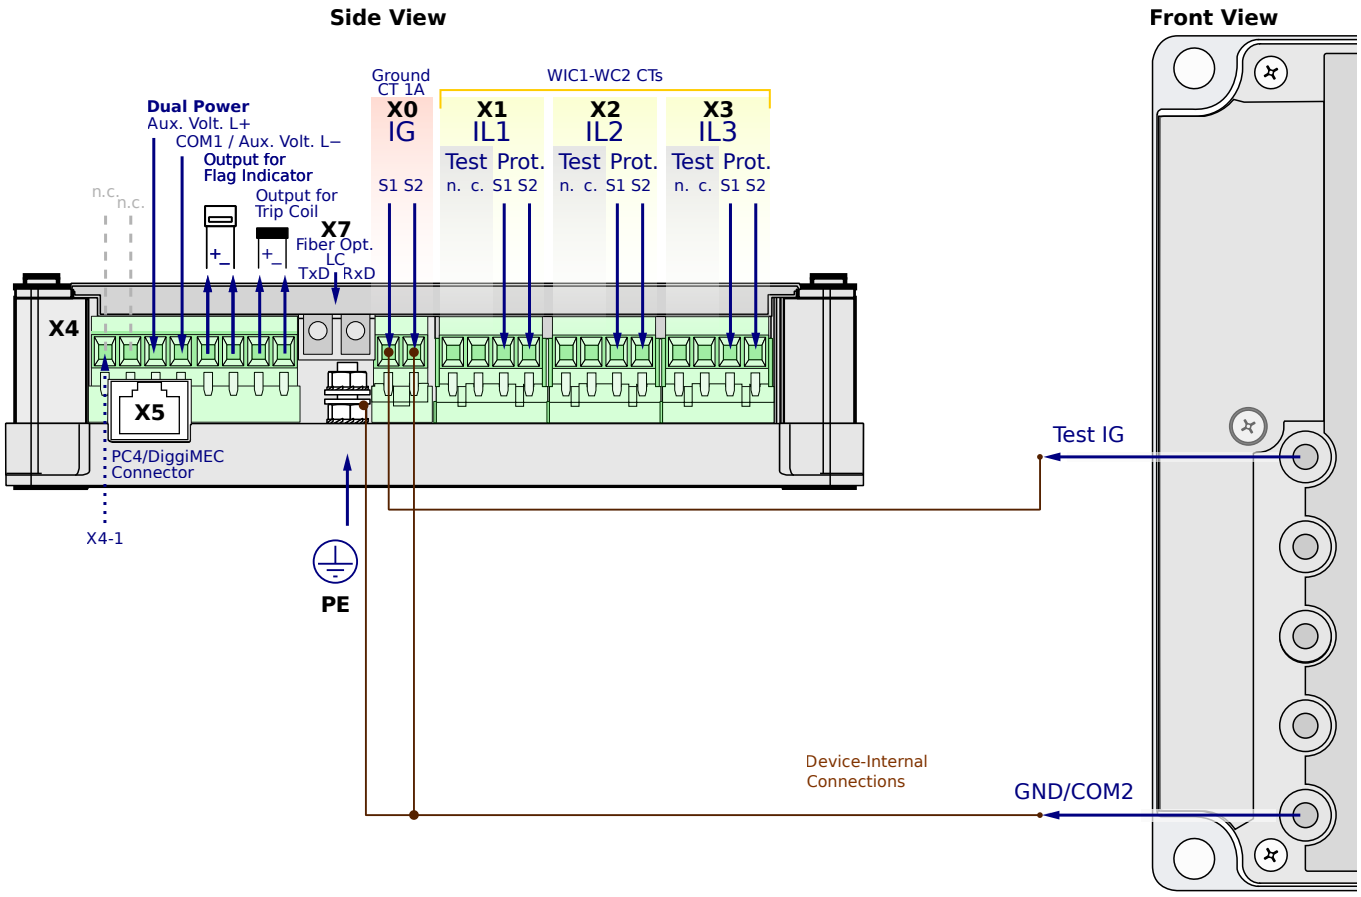


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0SLH

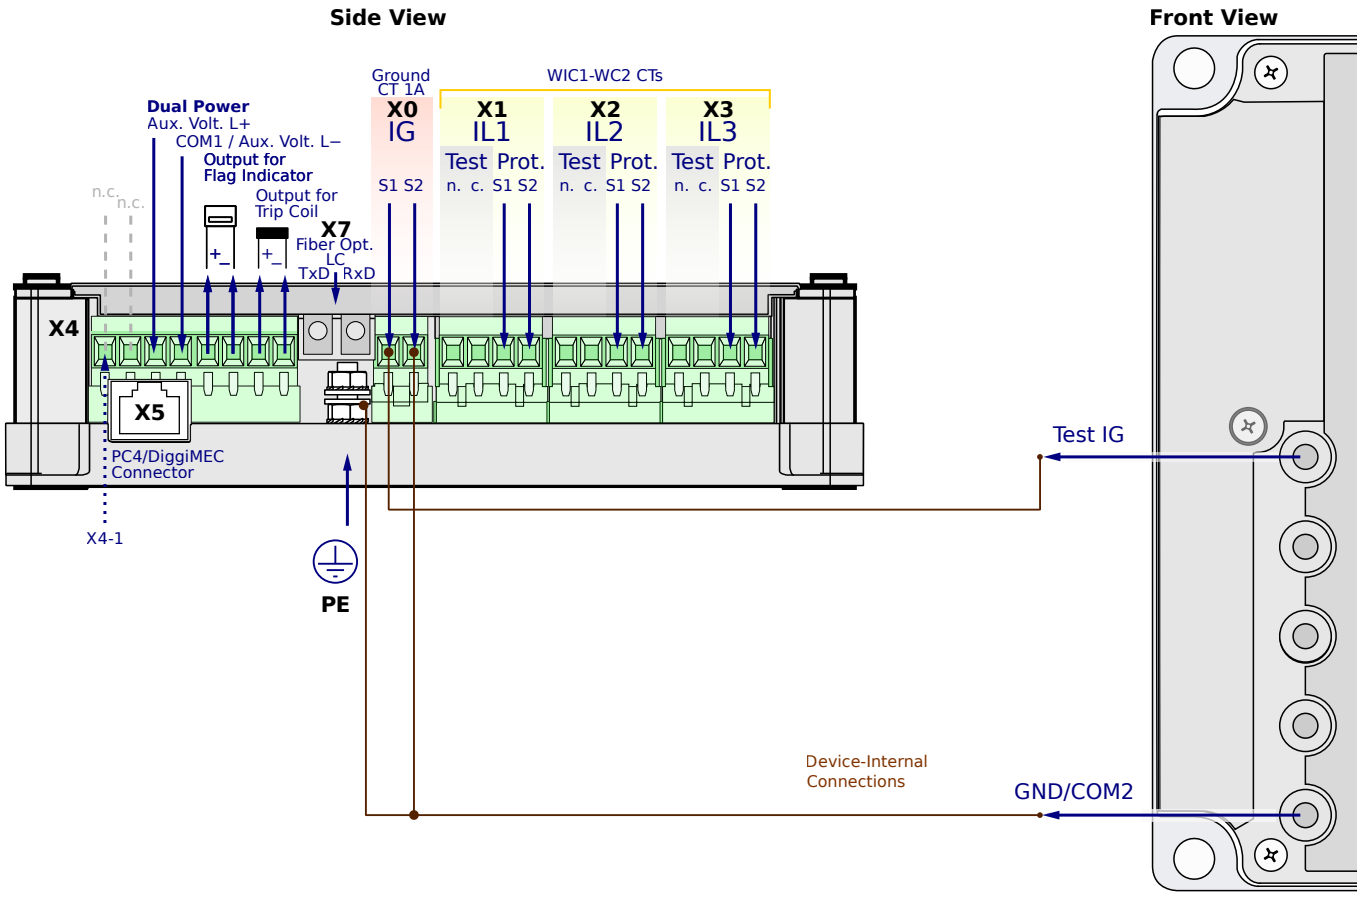


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0AA0

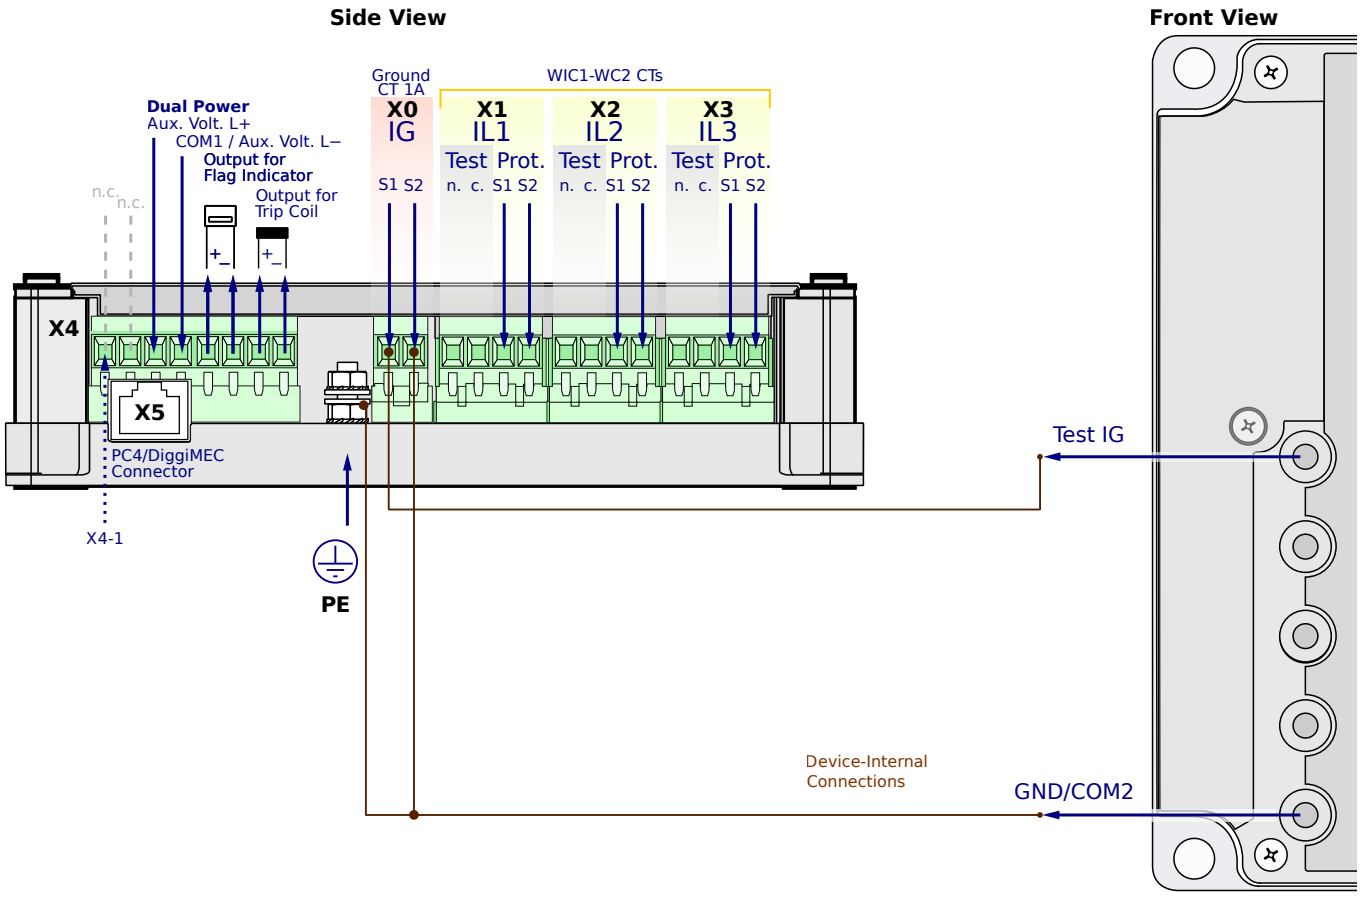


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0AAH

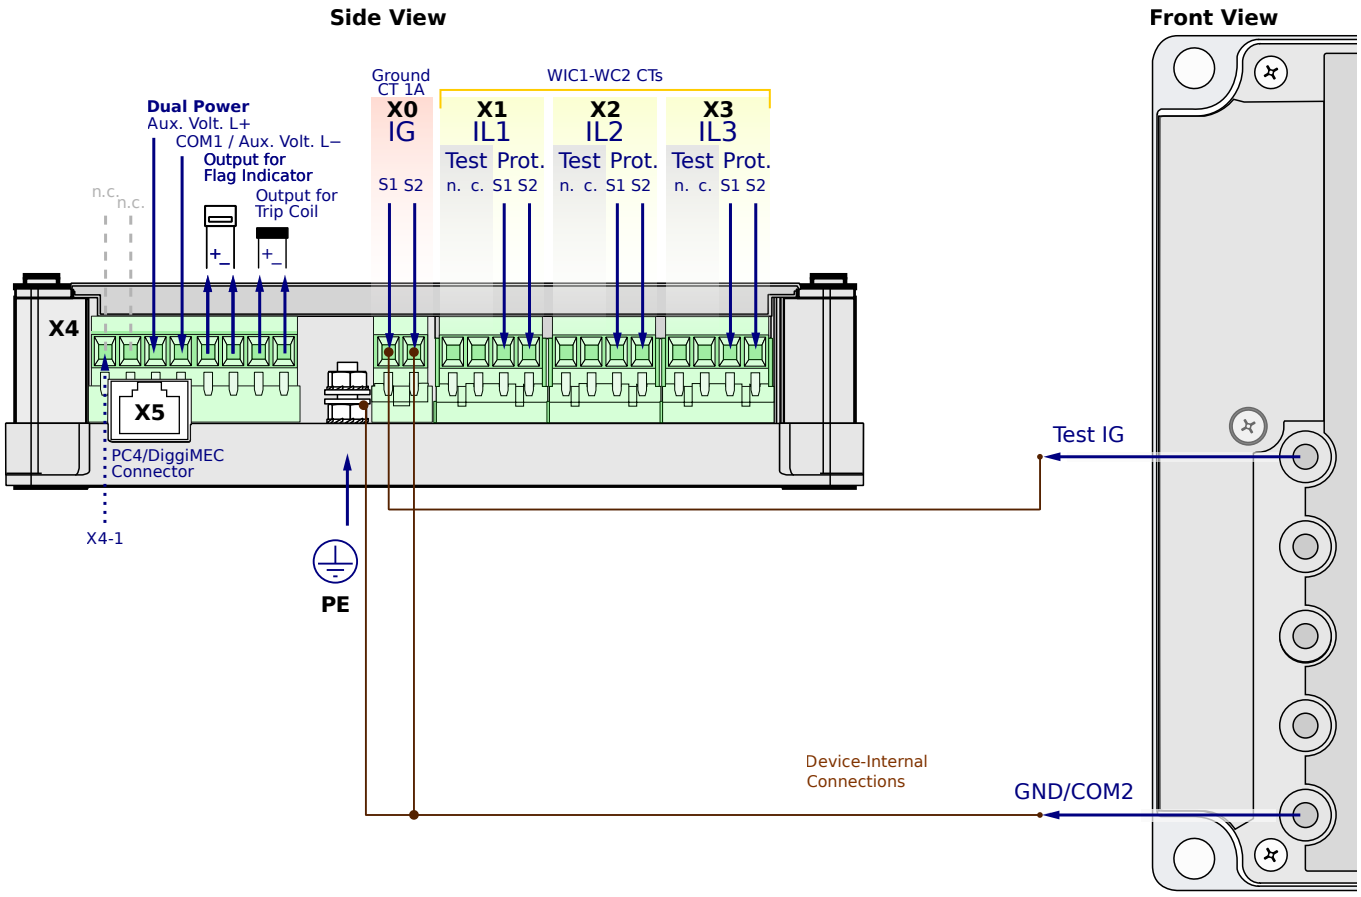


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Self-Supervision operates "FI"-output
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0AB0

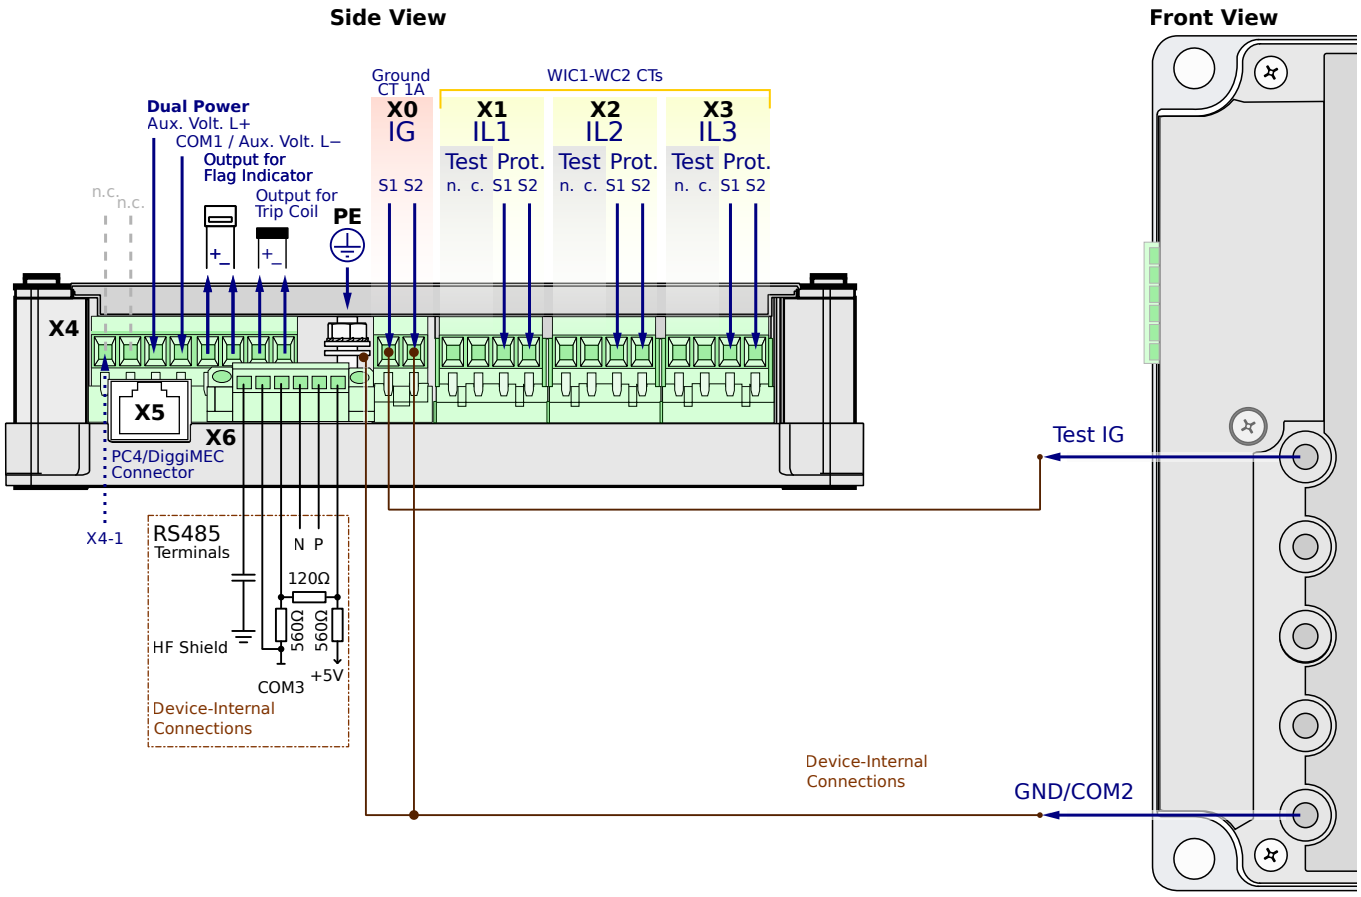


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0ABH

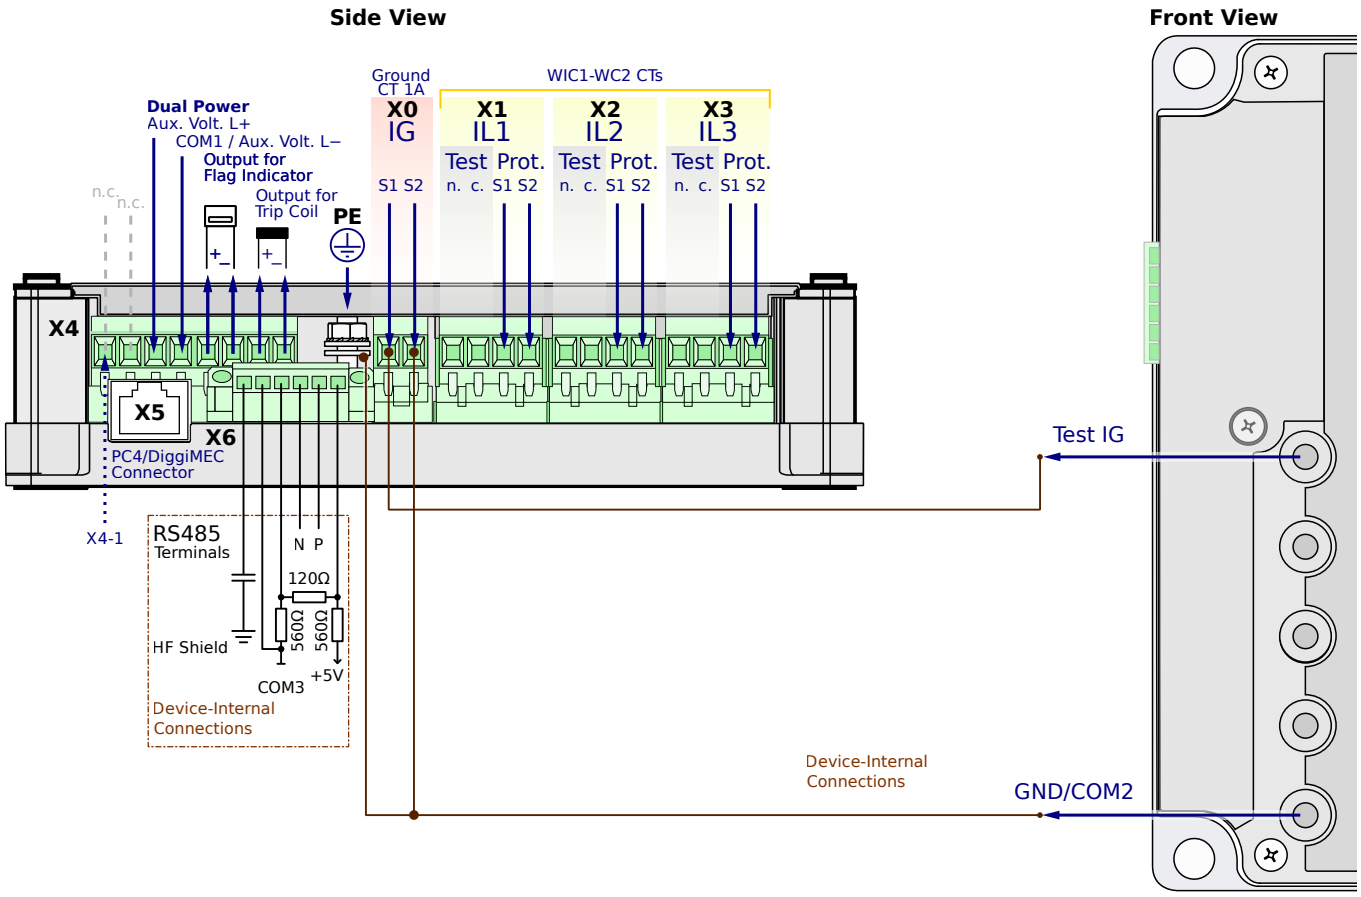


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0AC0

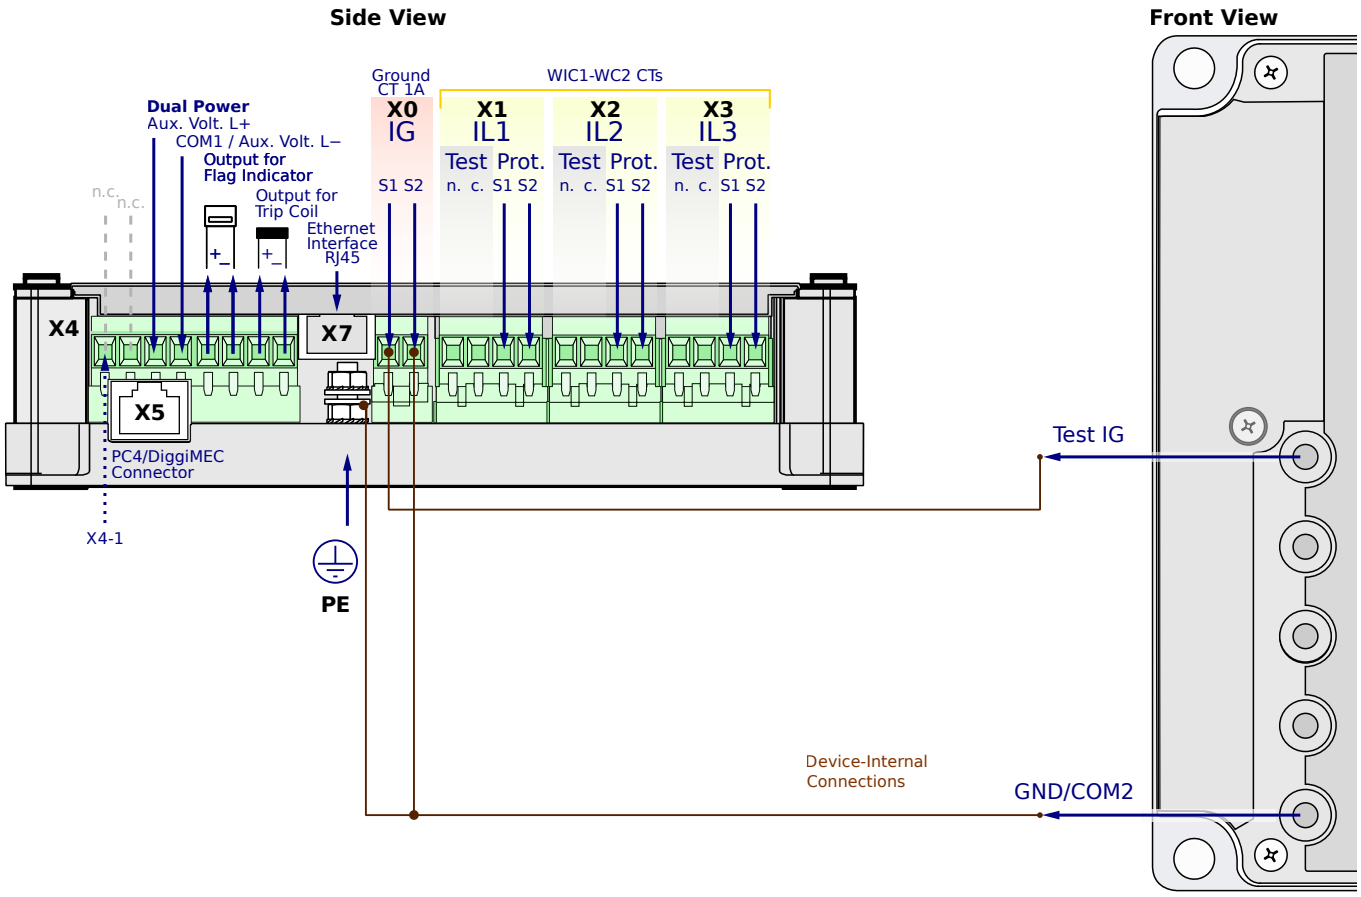


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0ACH

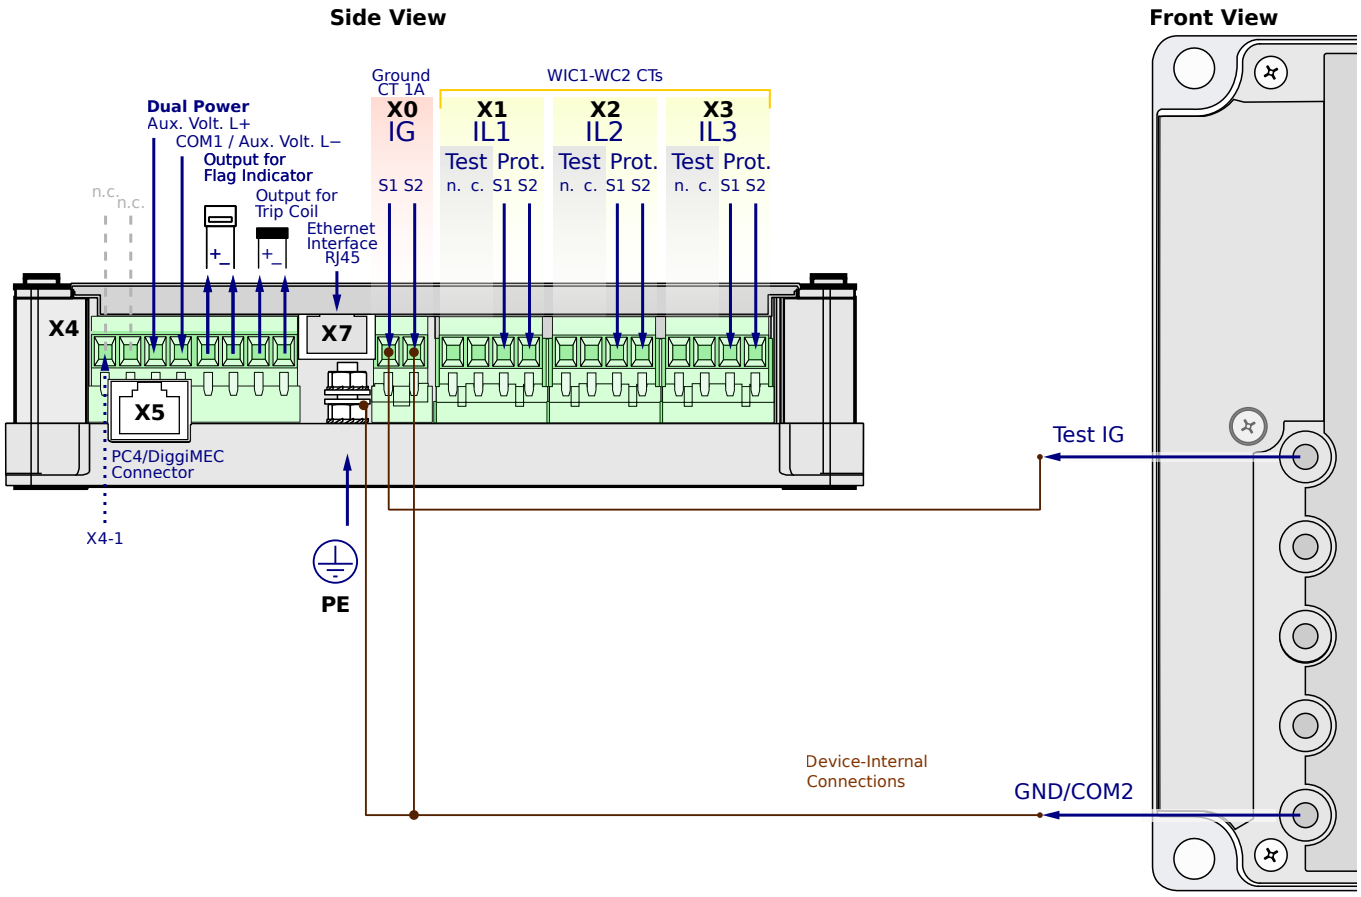


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0AL0

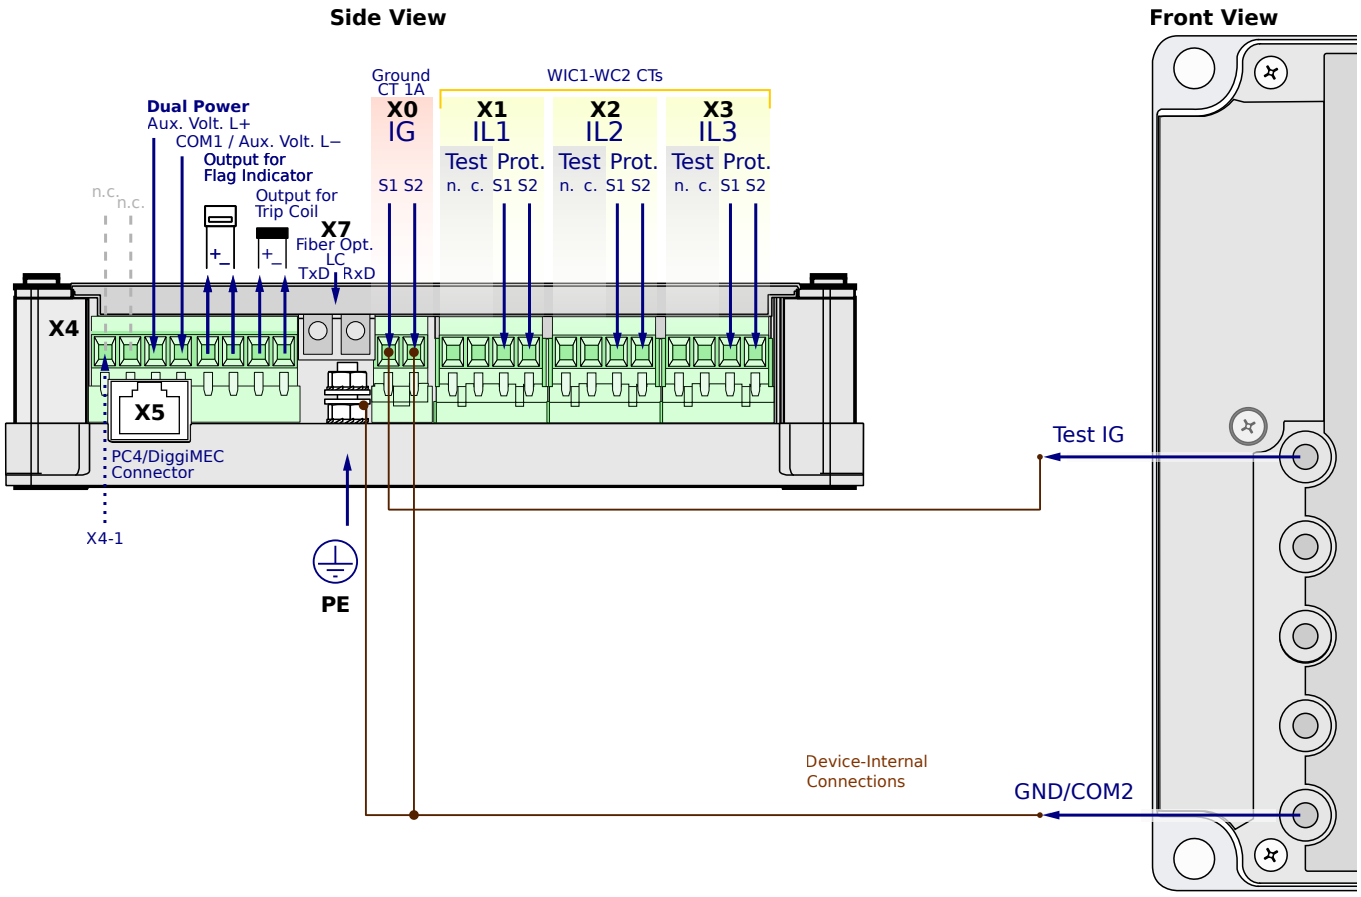


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0ALH

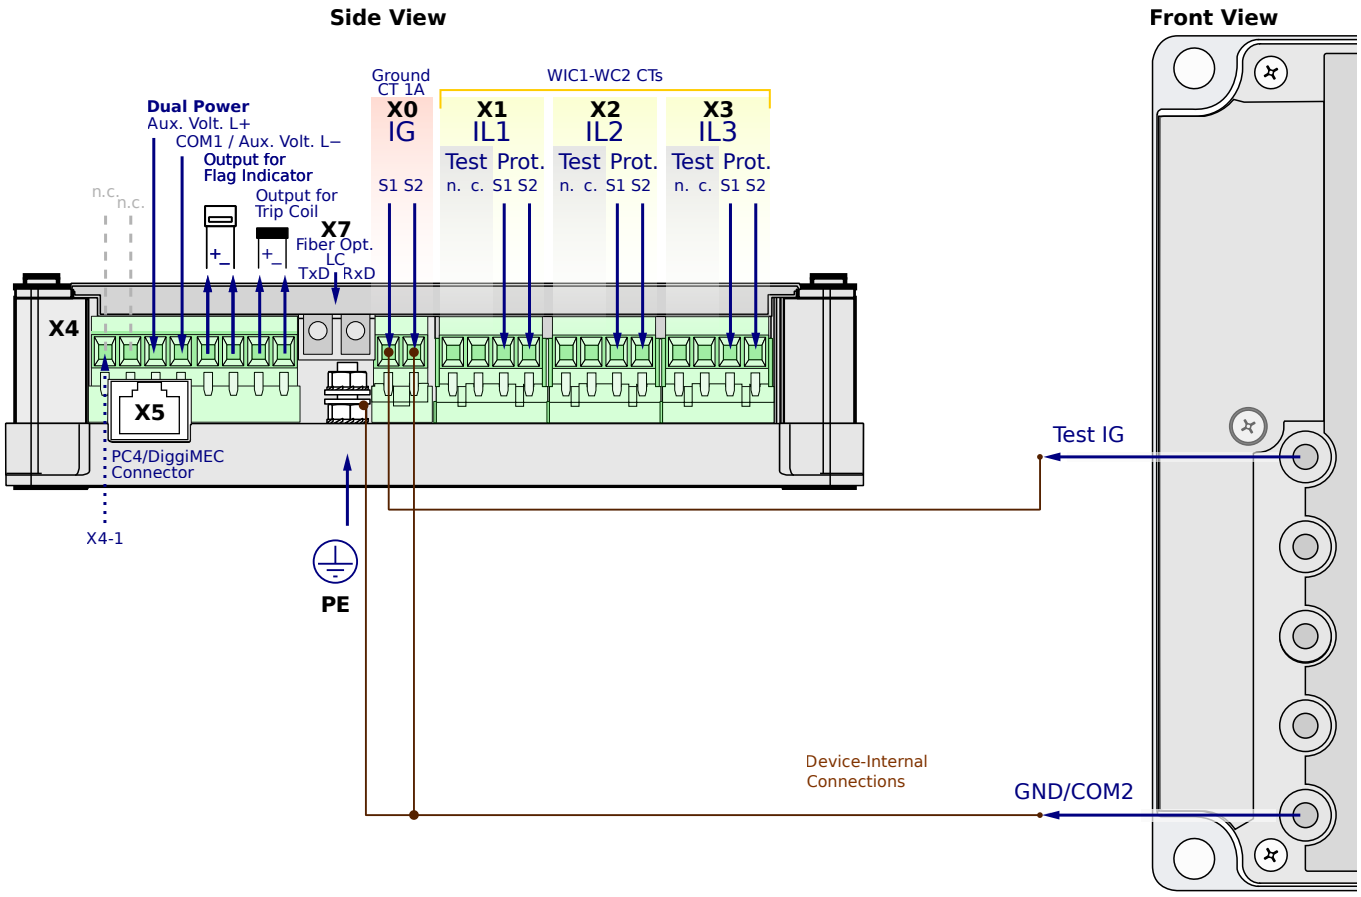


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0PA0

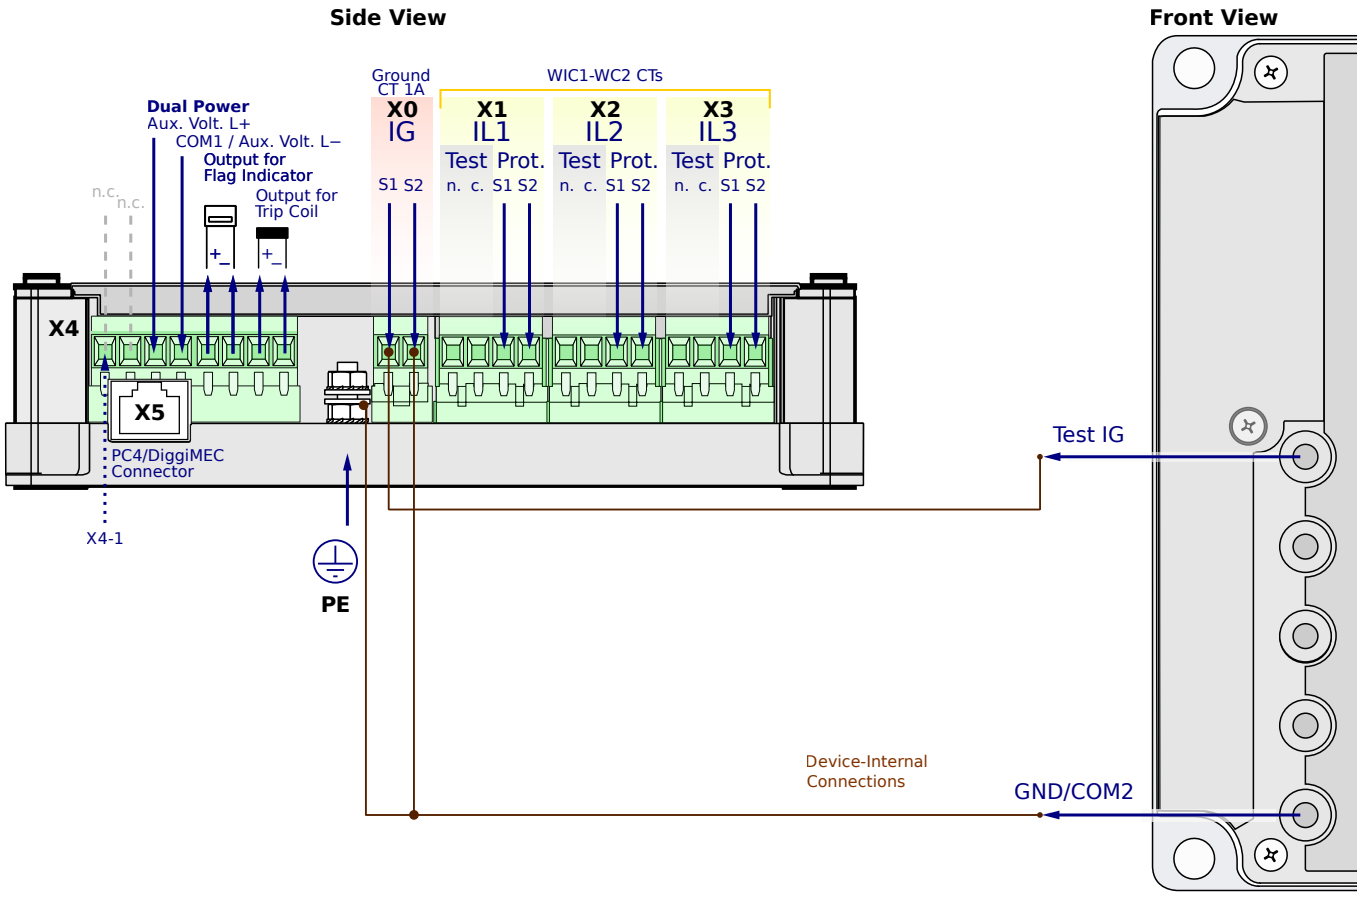


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0PAH

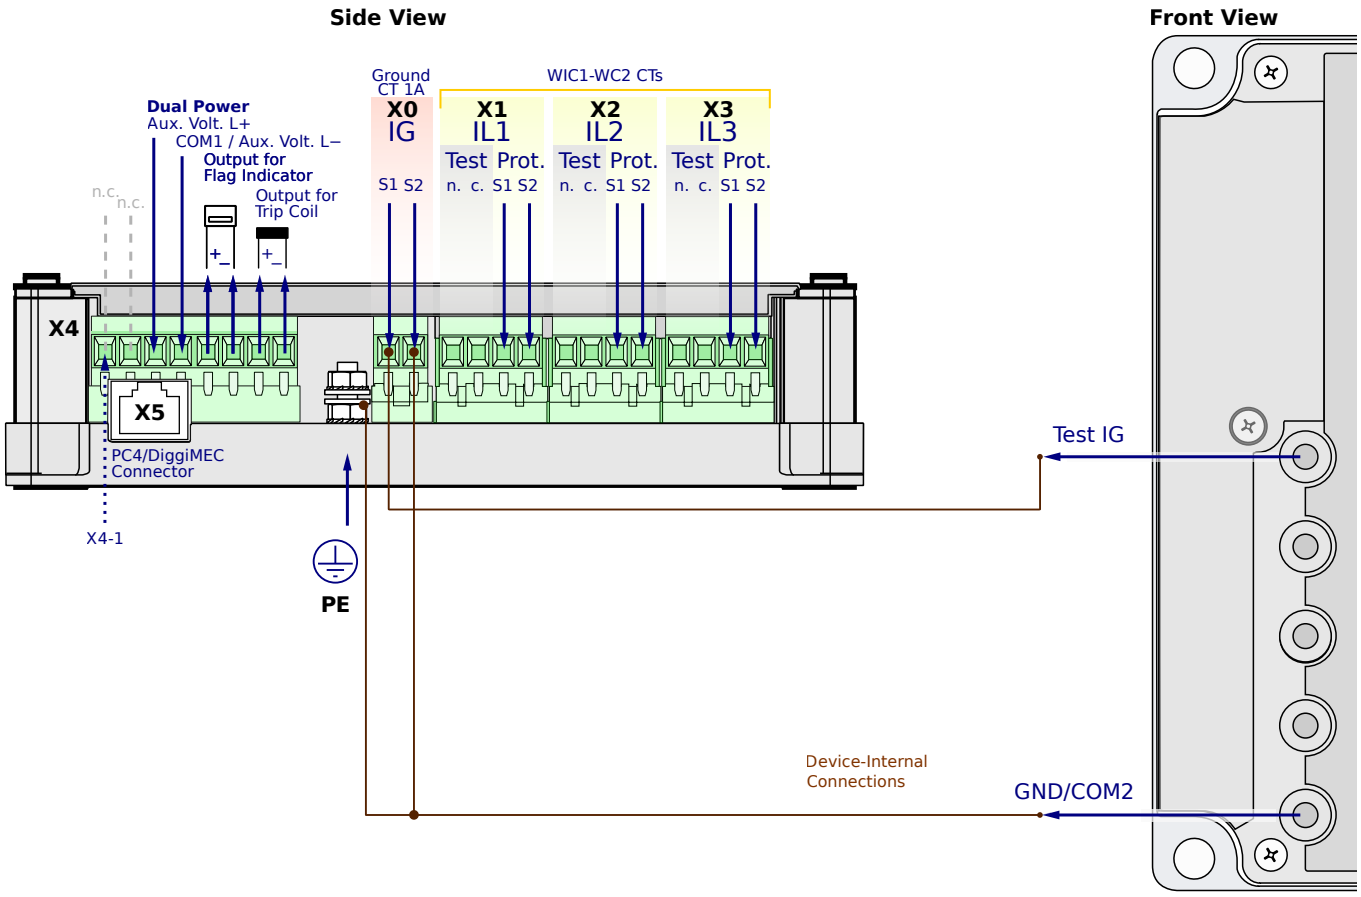


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM0PB0

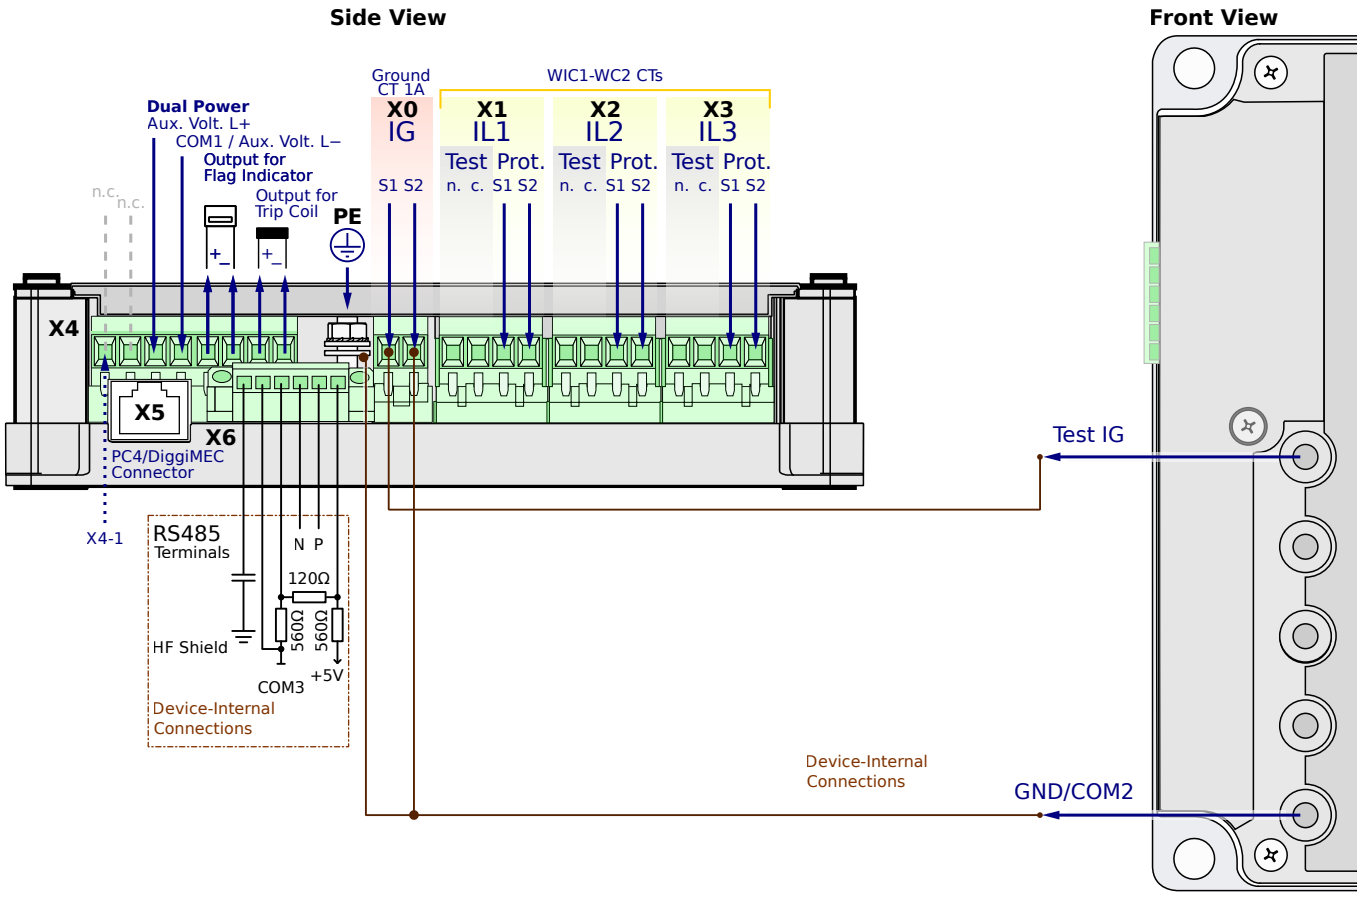


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0PBH

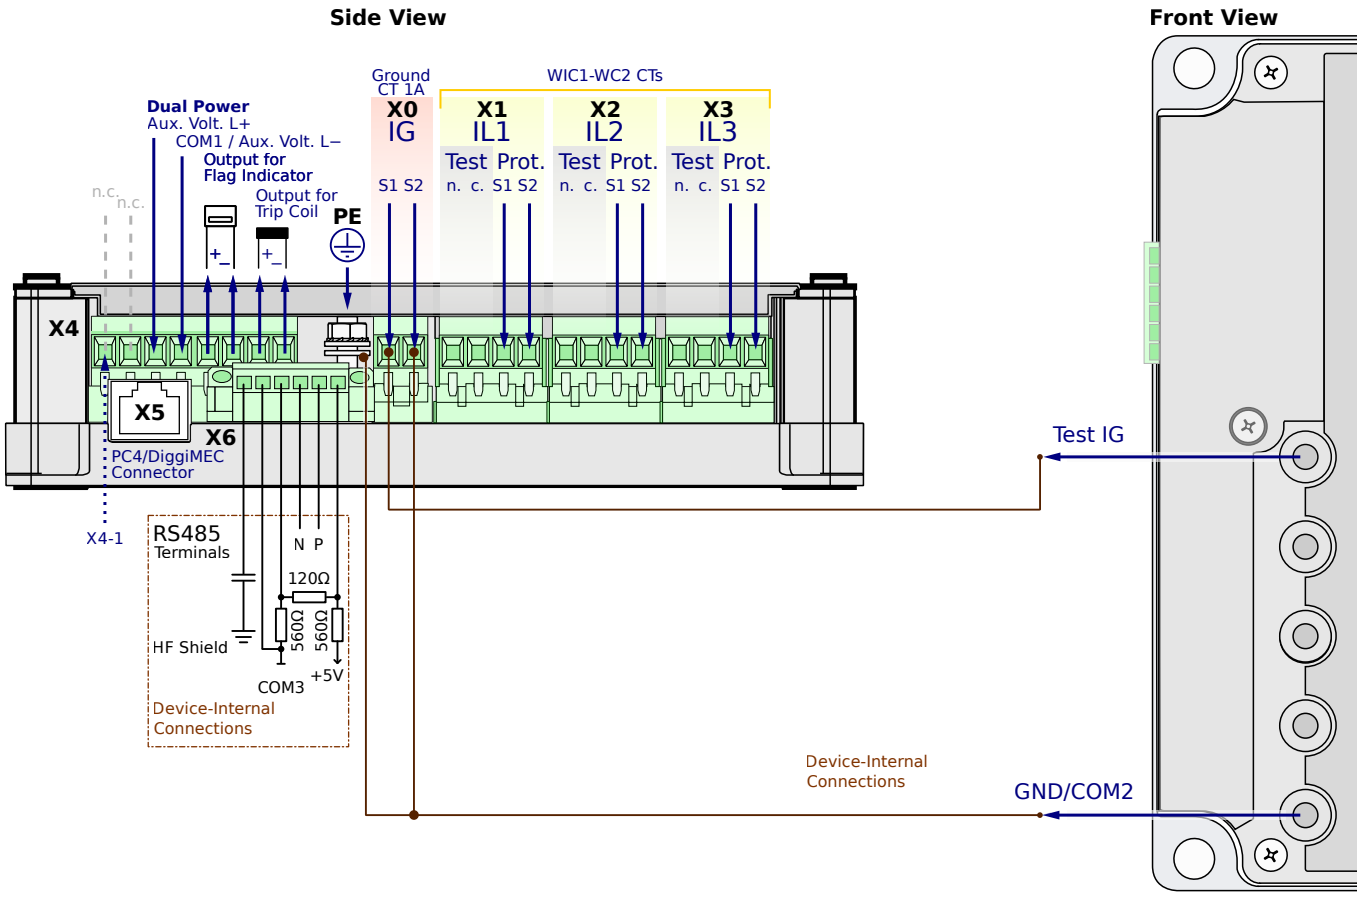


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM0PC0

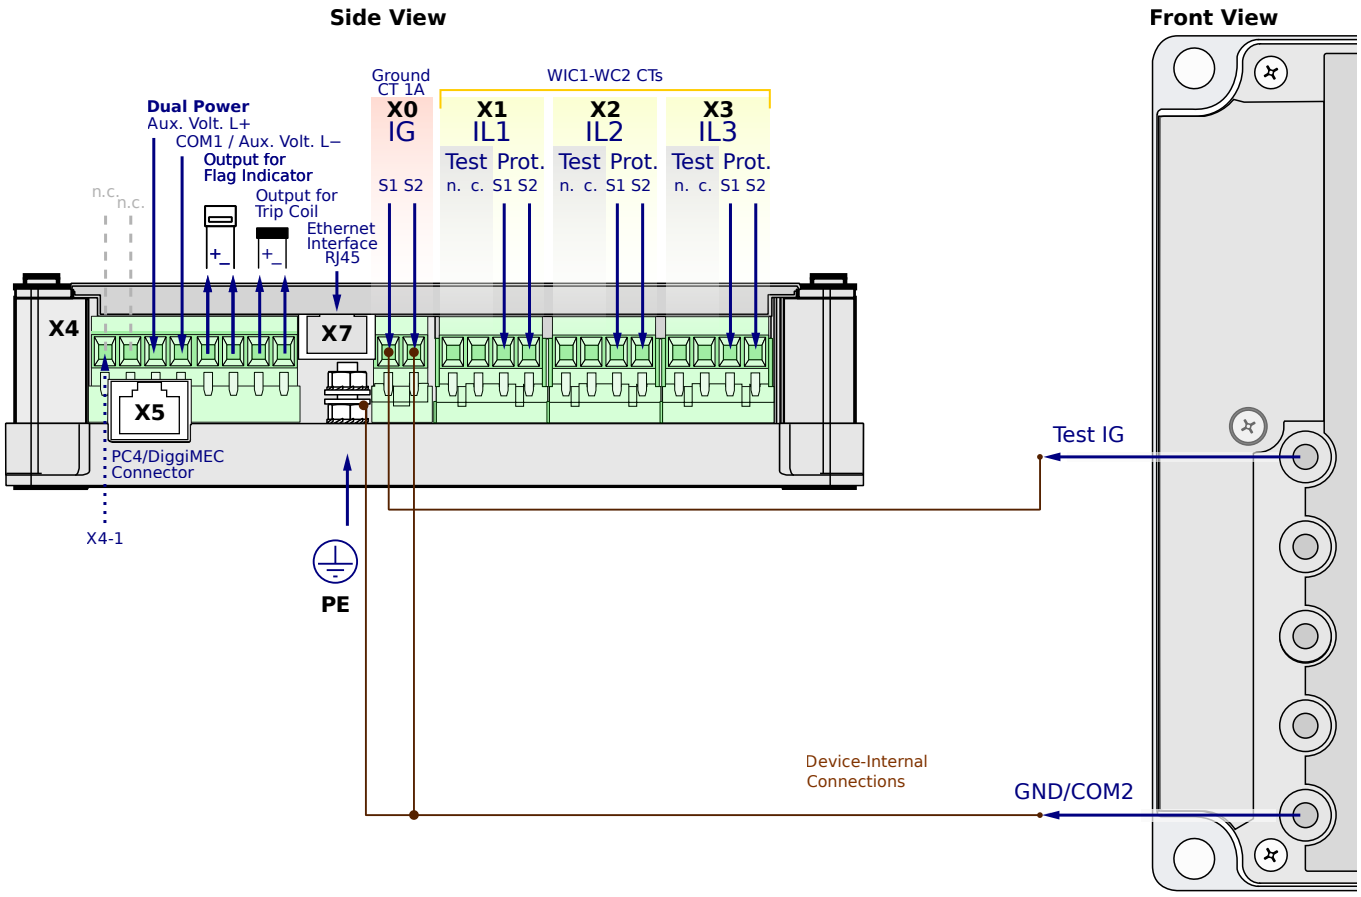


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0PCH

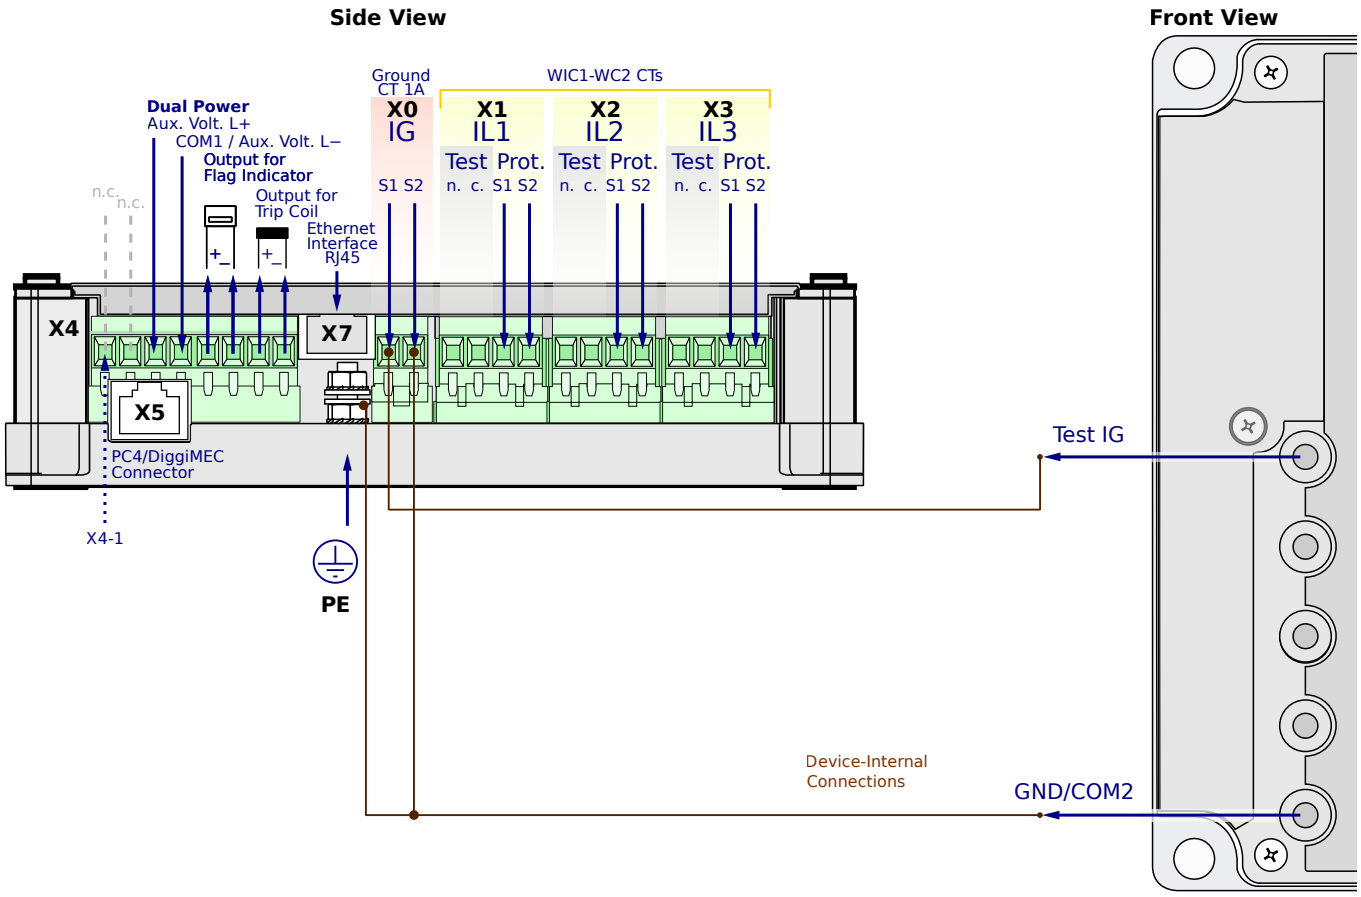


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM0PL0

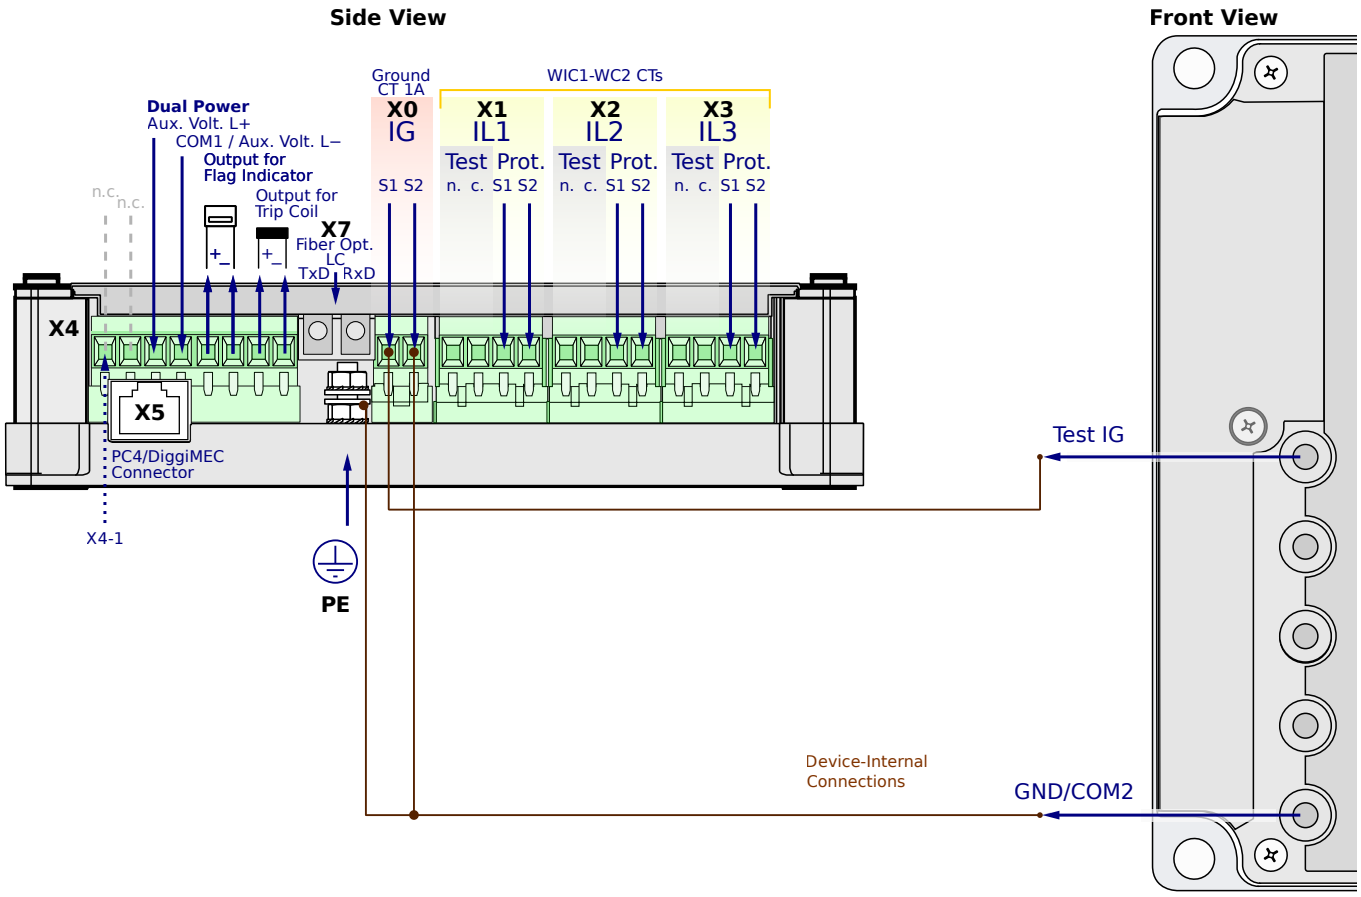


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM0PLH

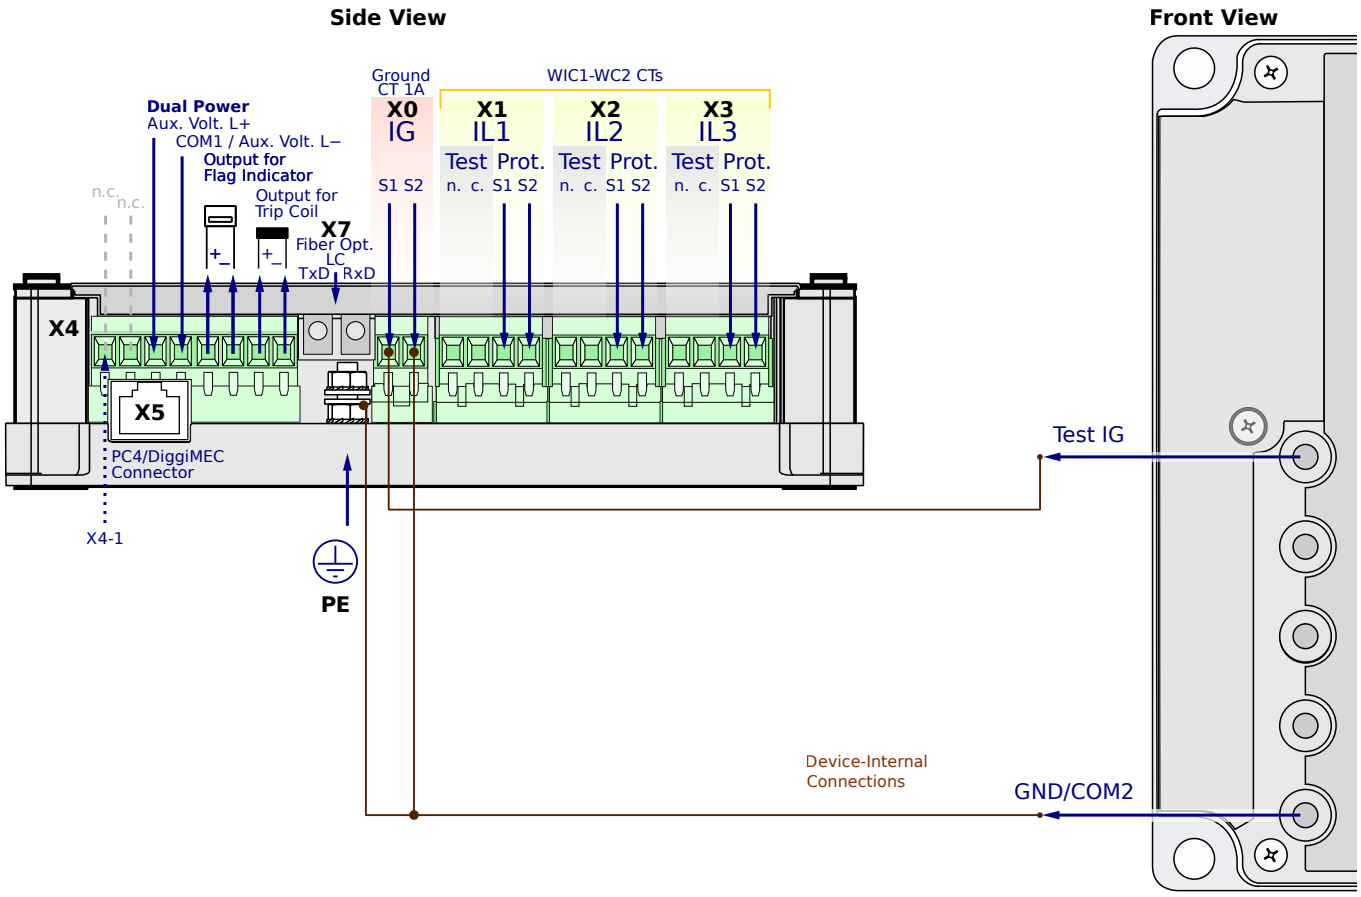


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1SA0

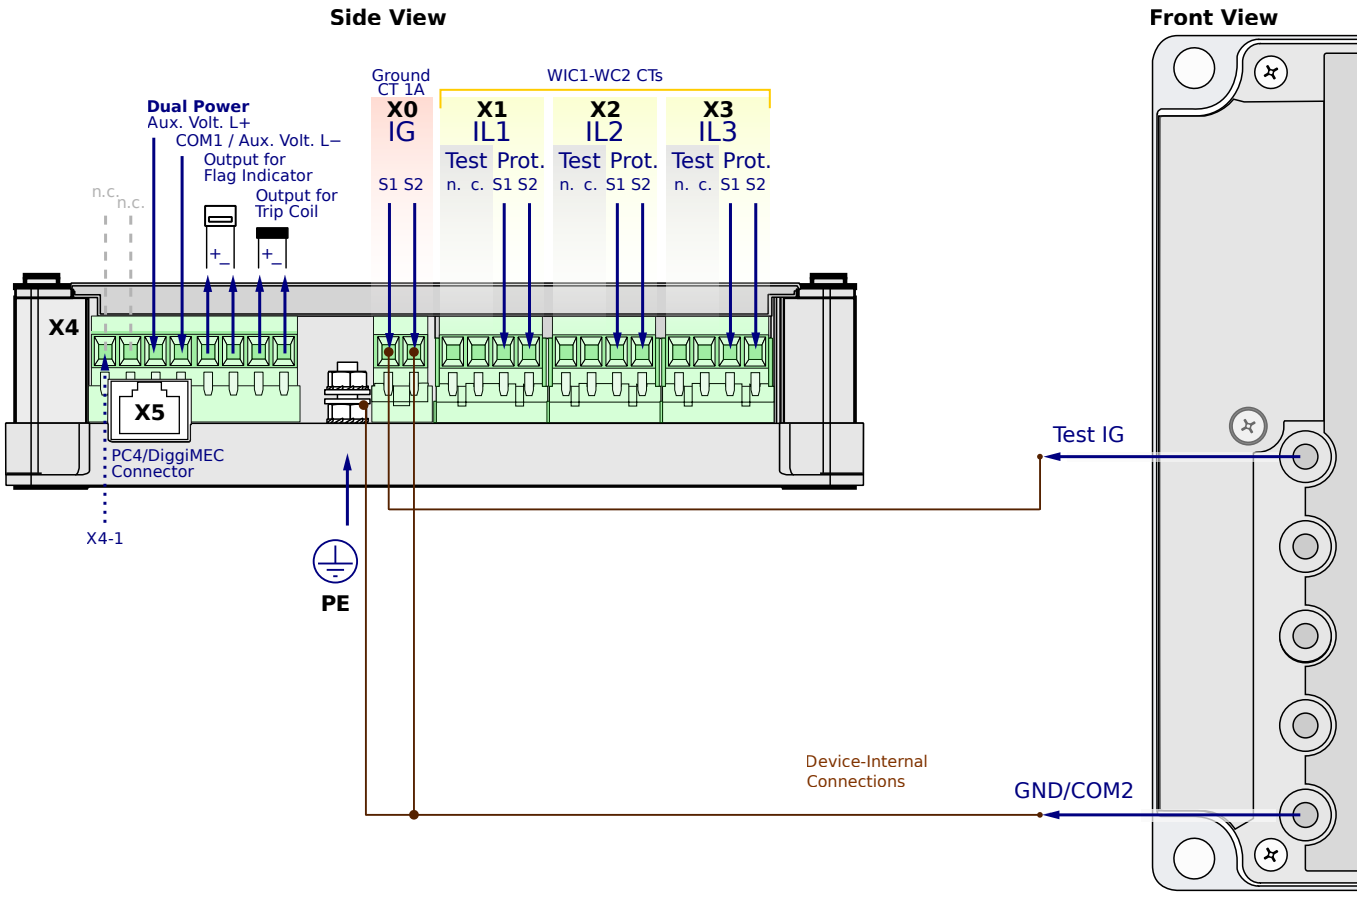


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1SAH

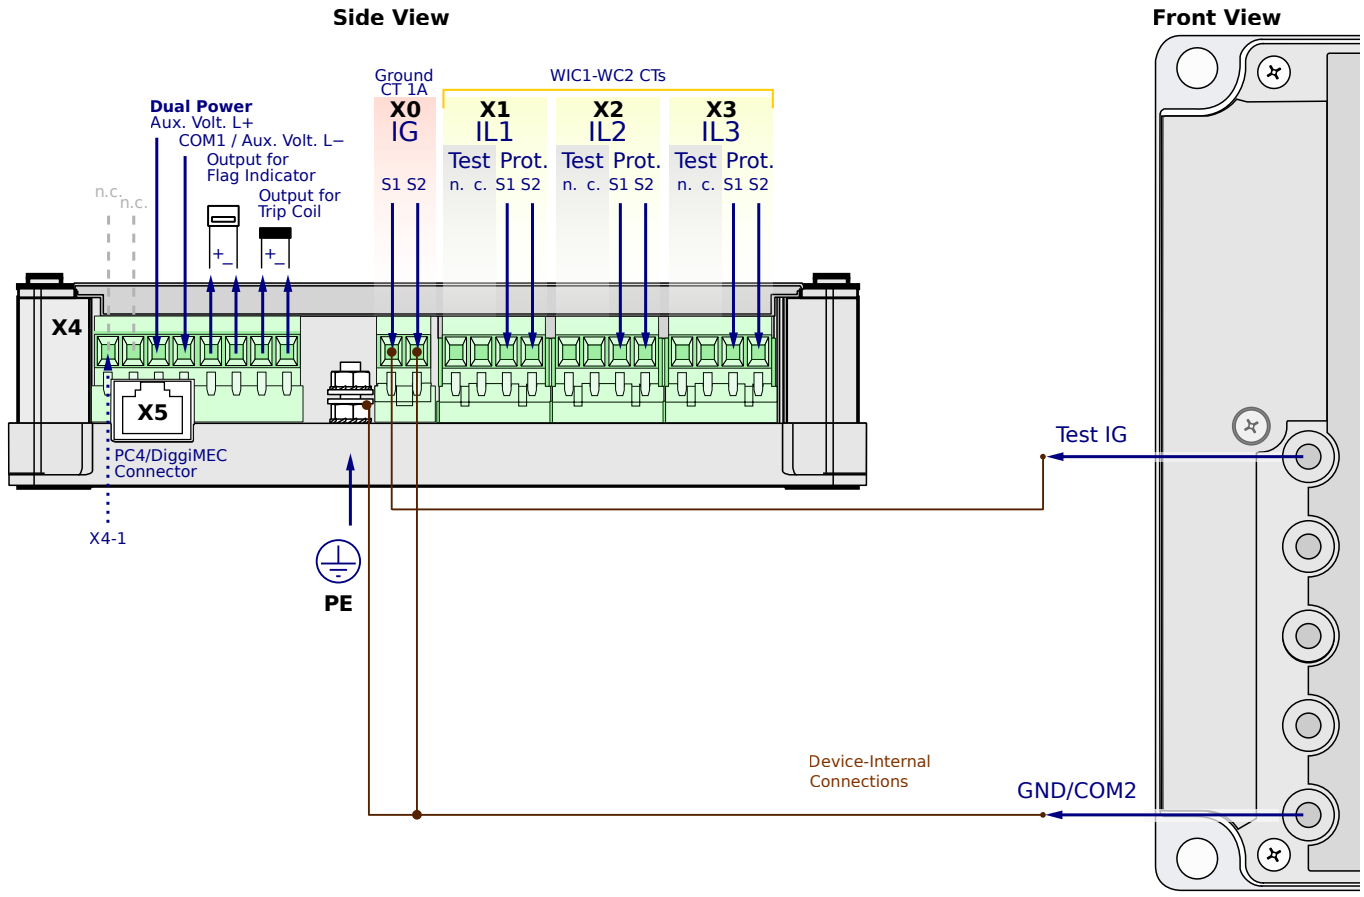


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1SB0

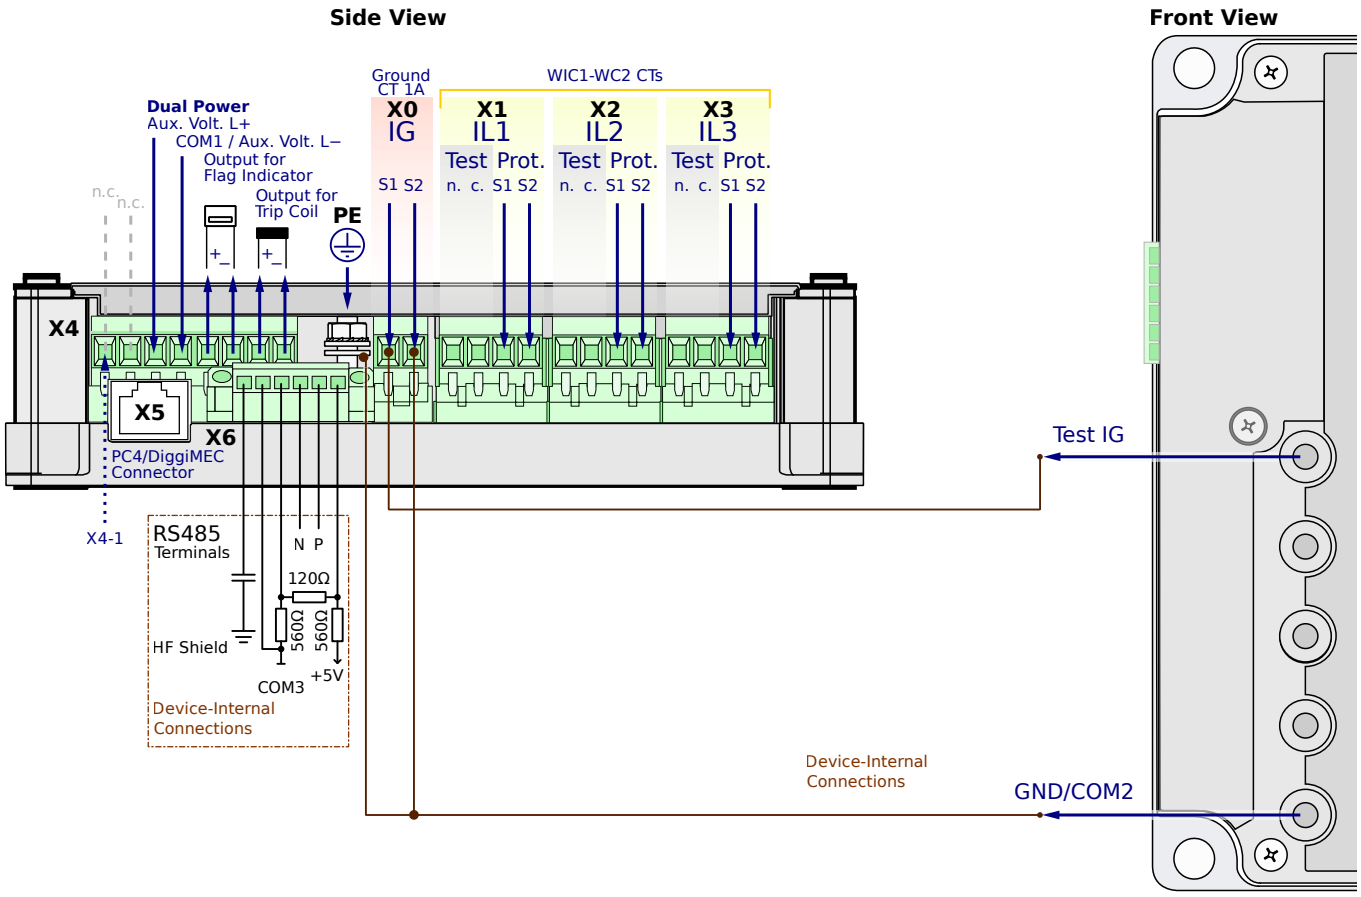


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1SBH

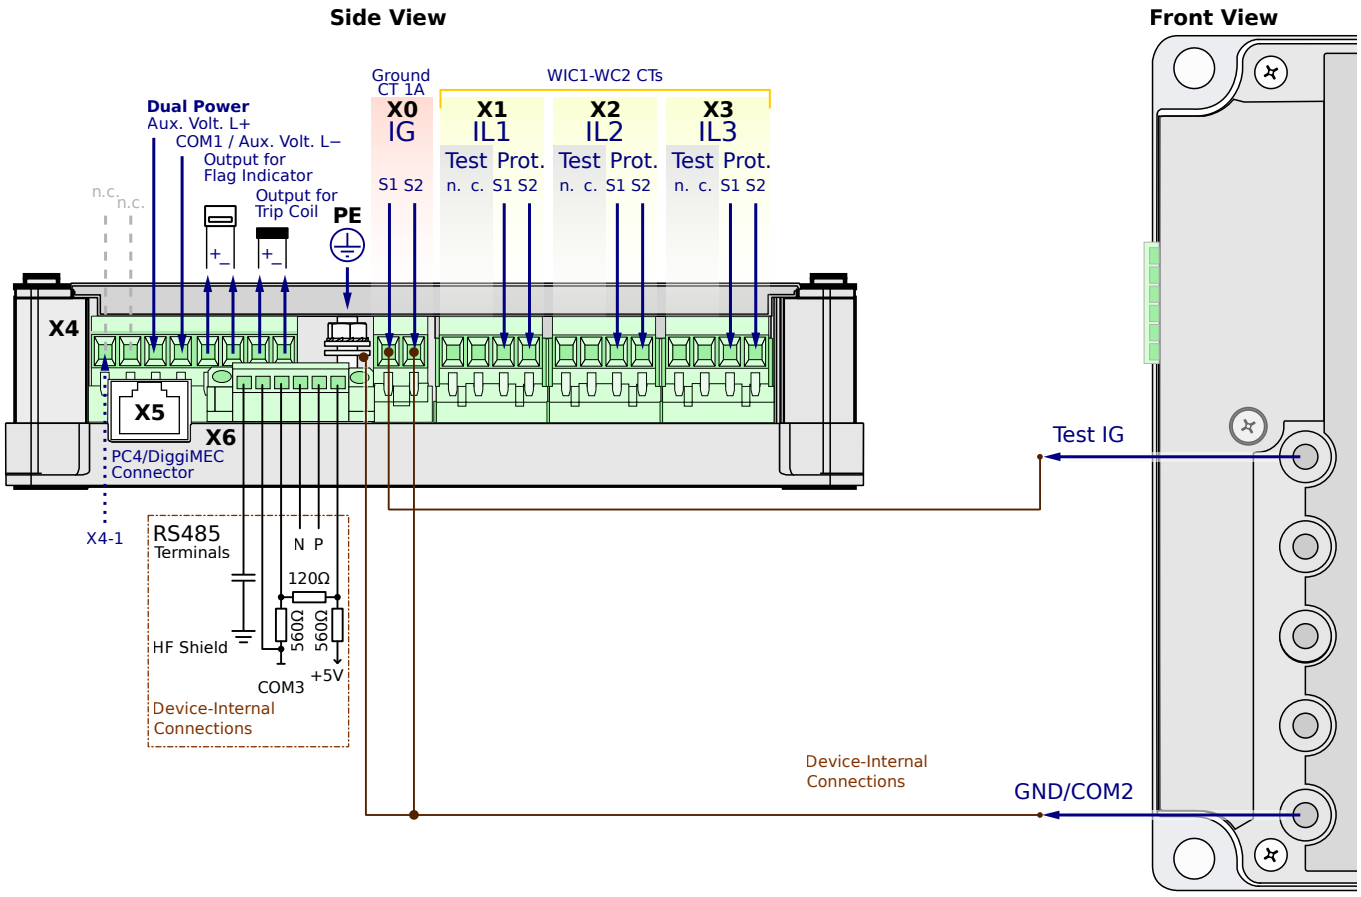


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1SC0

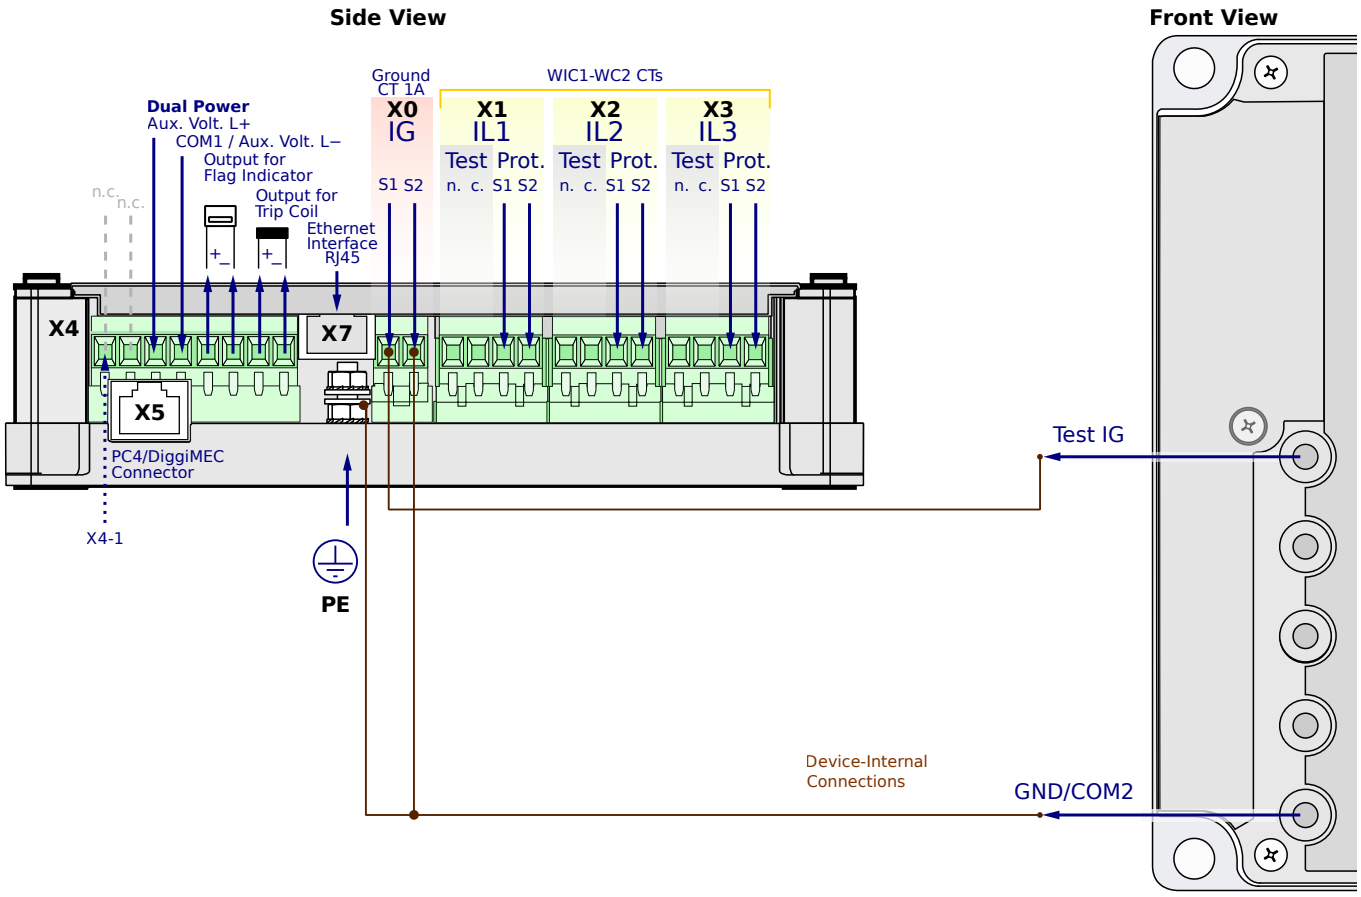


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1SCH

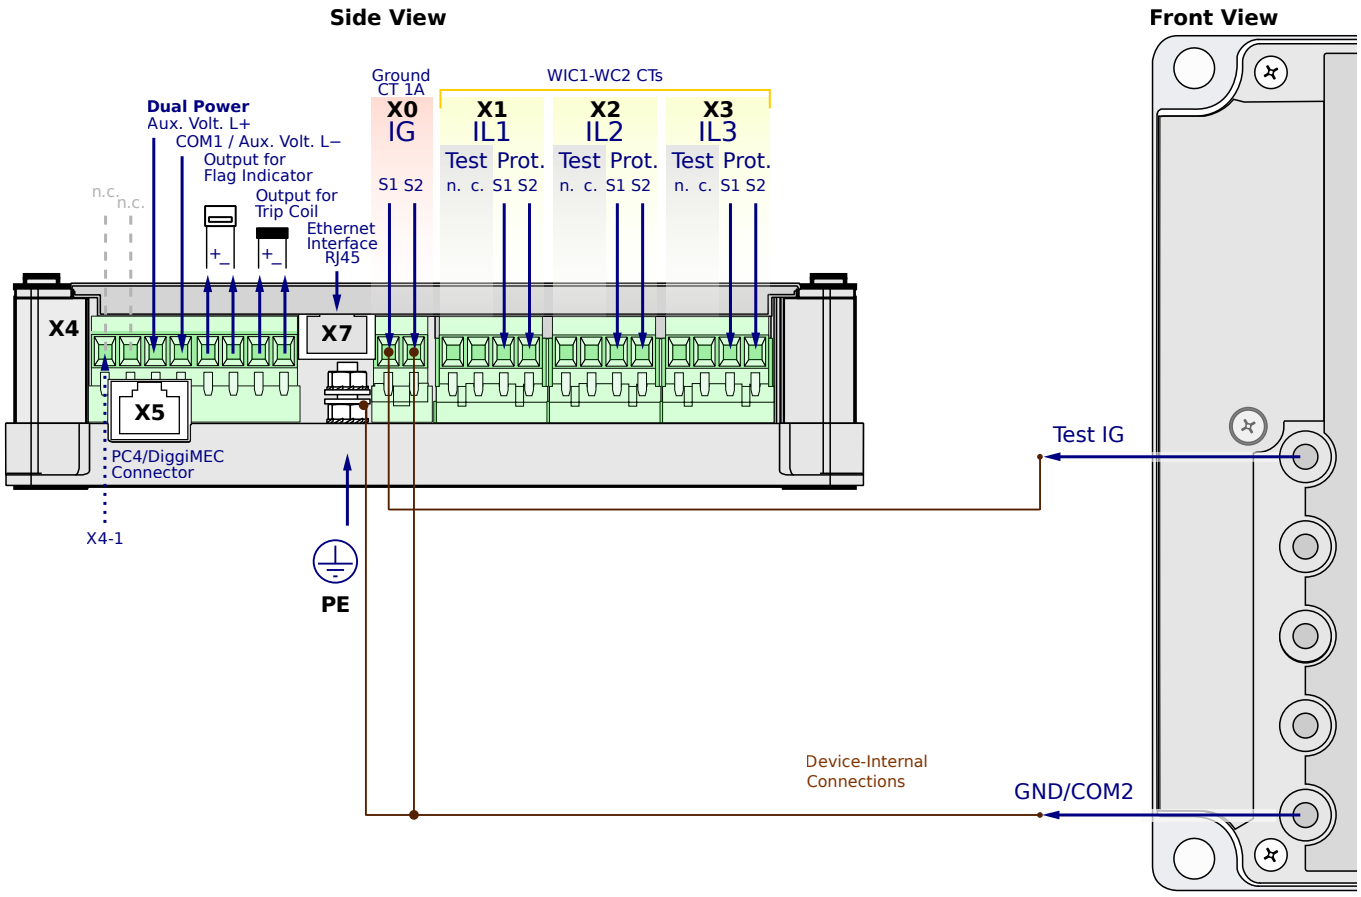


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1SL0

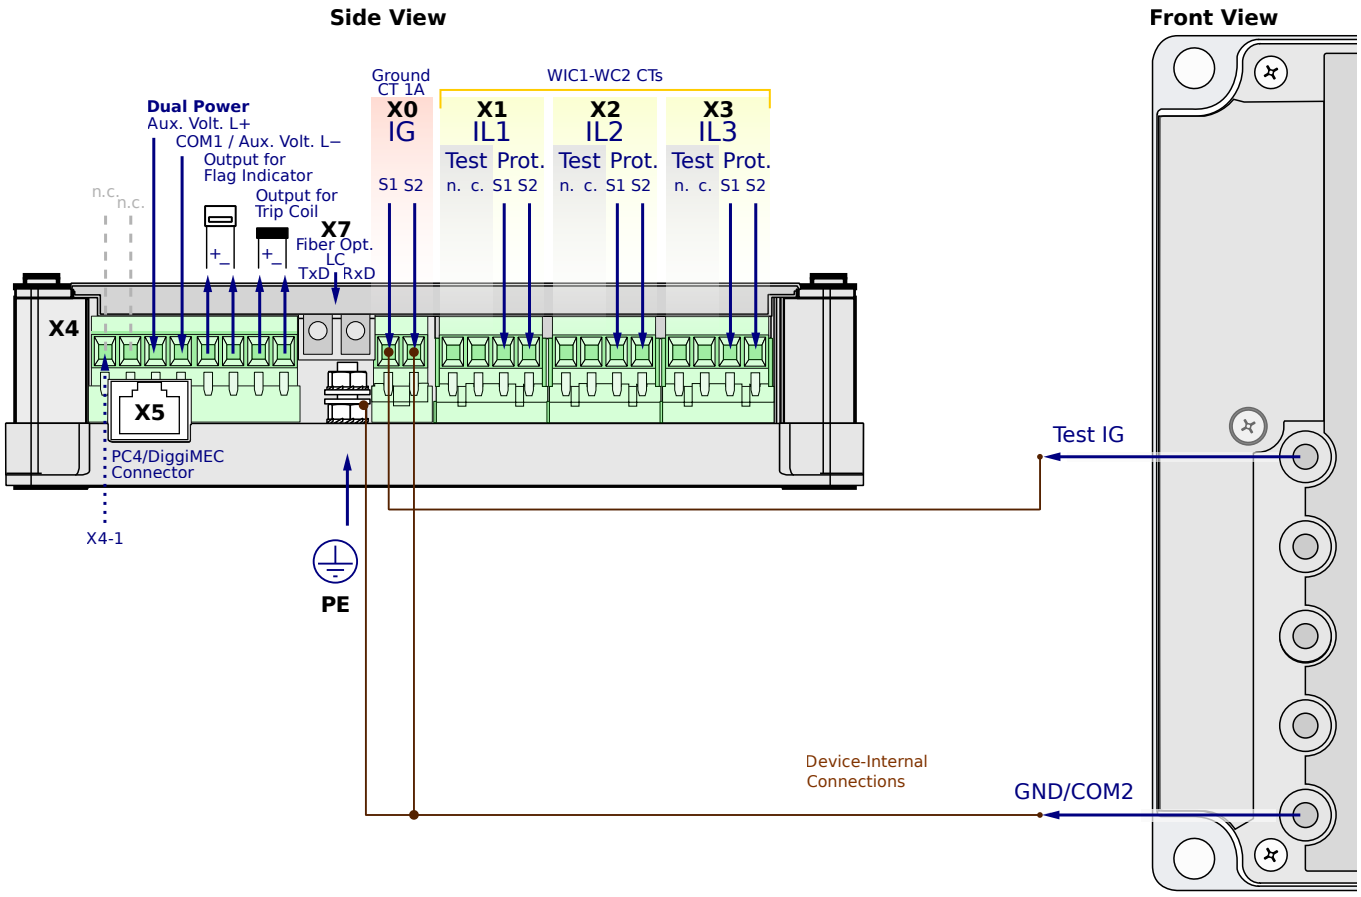


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1SLH

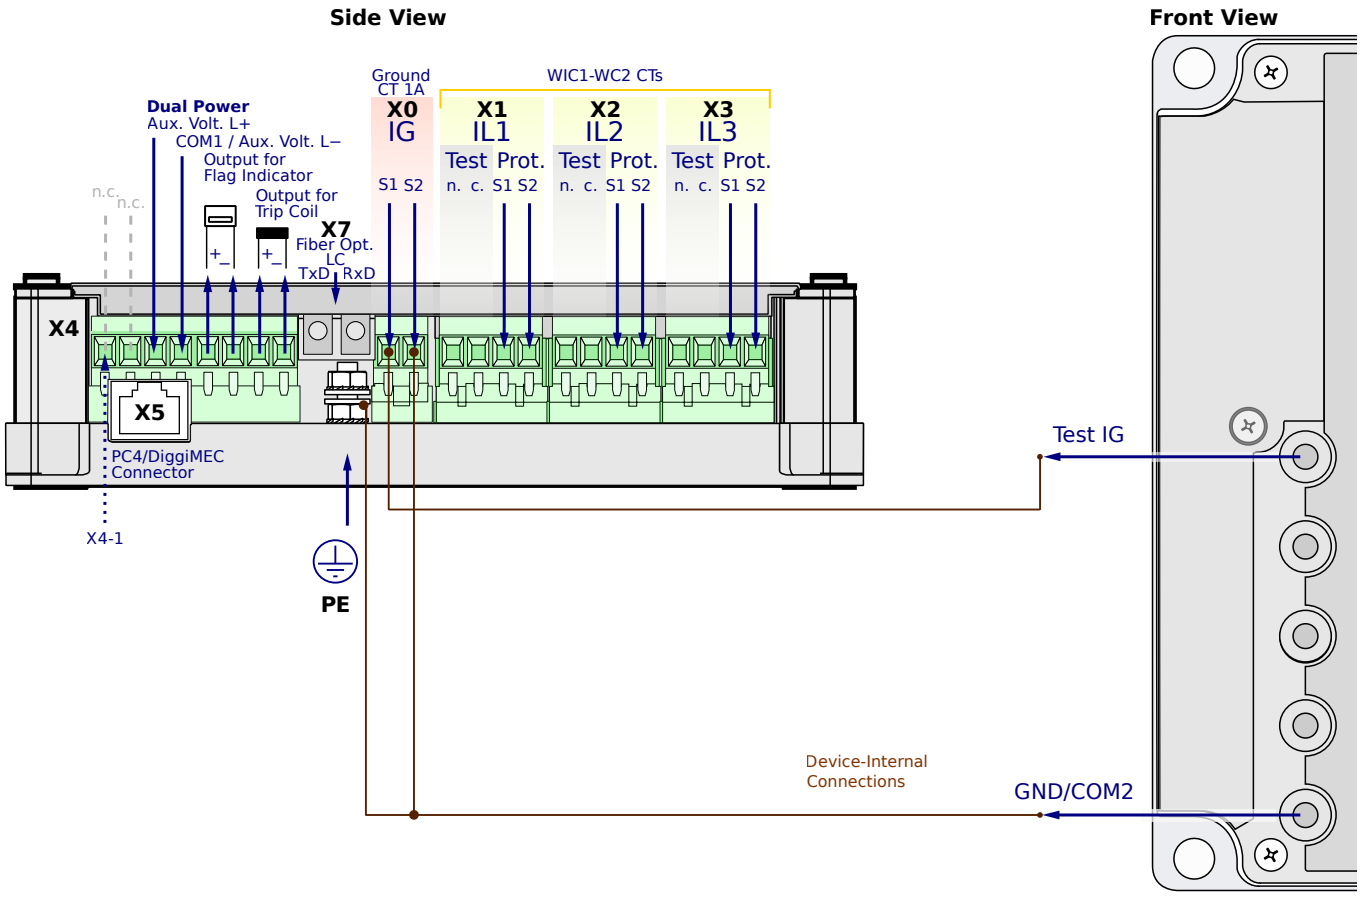


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1AA0

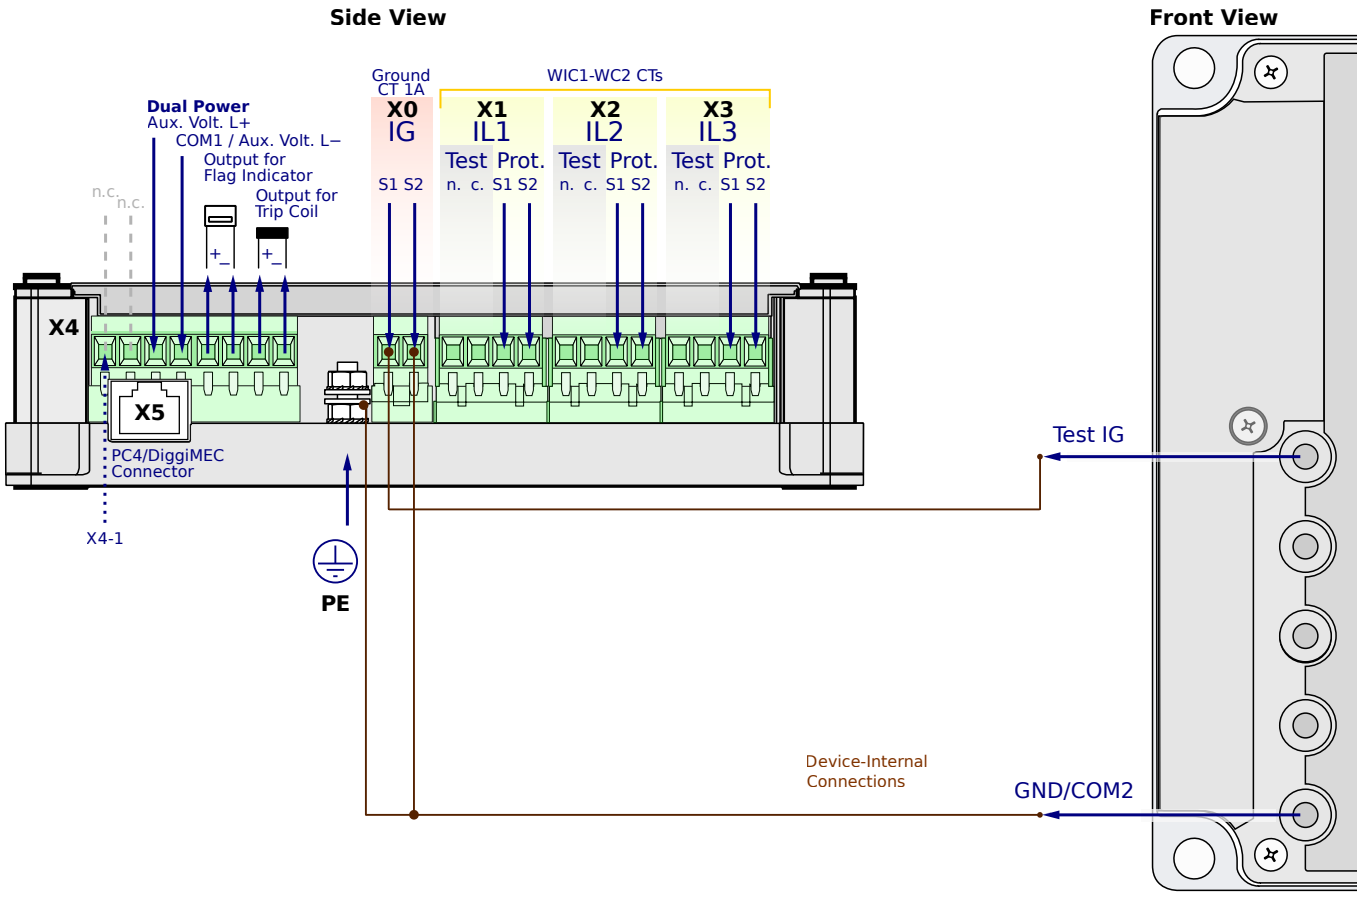


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1AAH

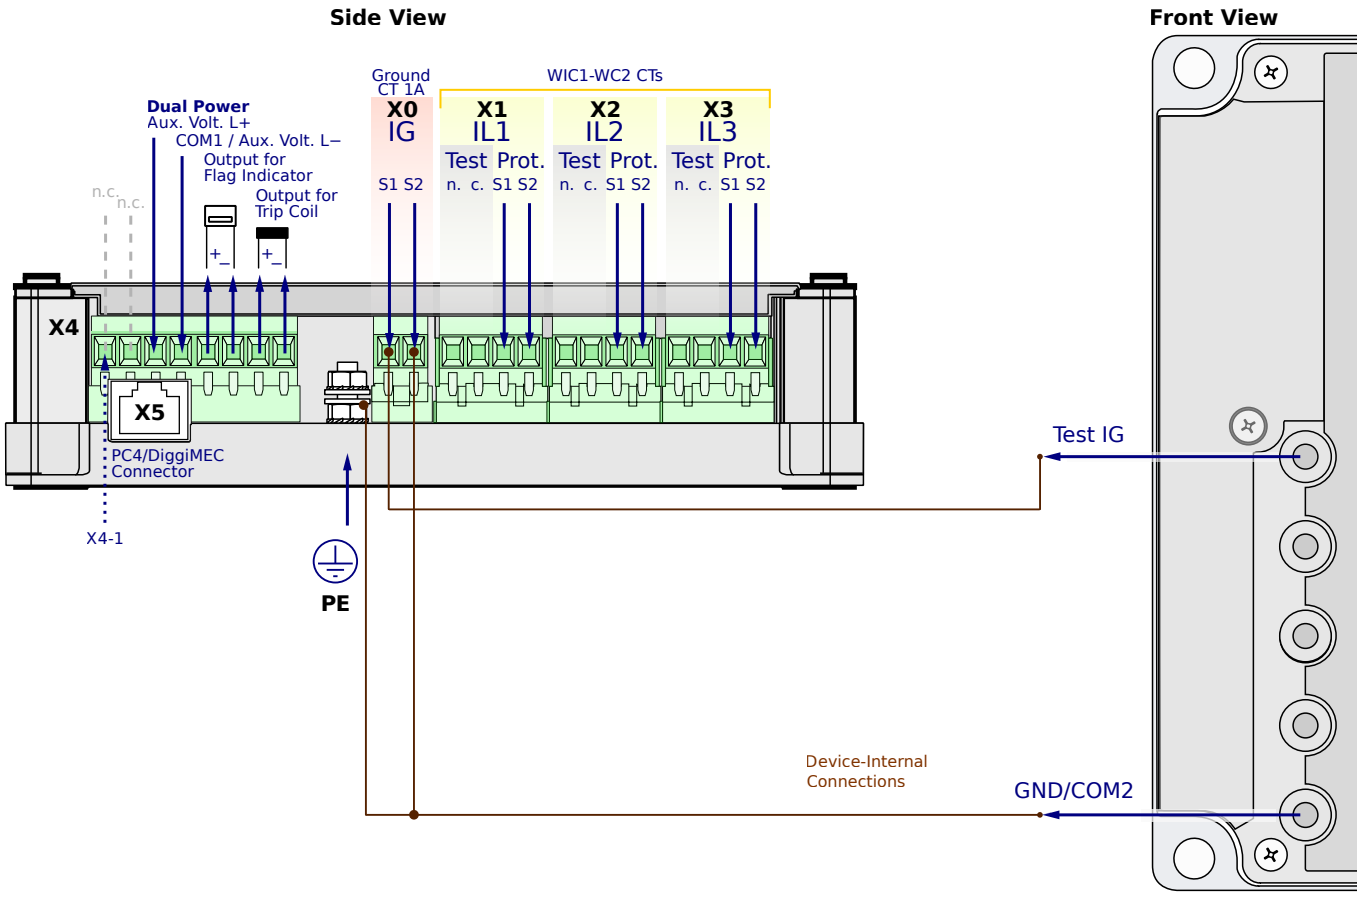


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1AB0

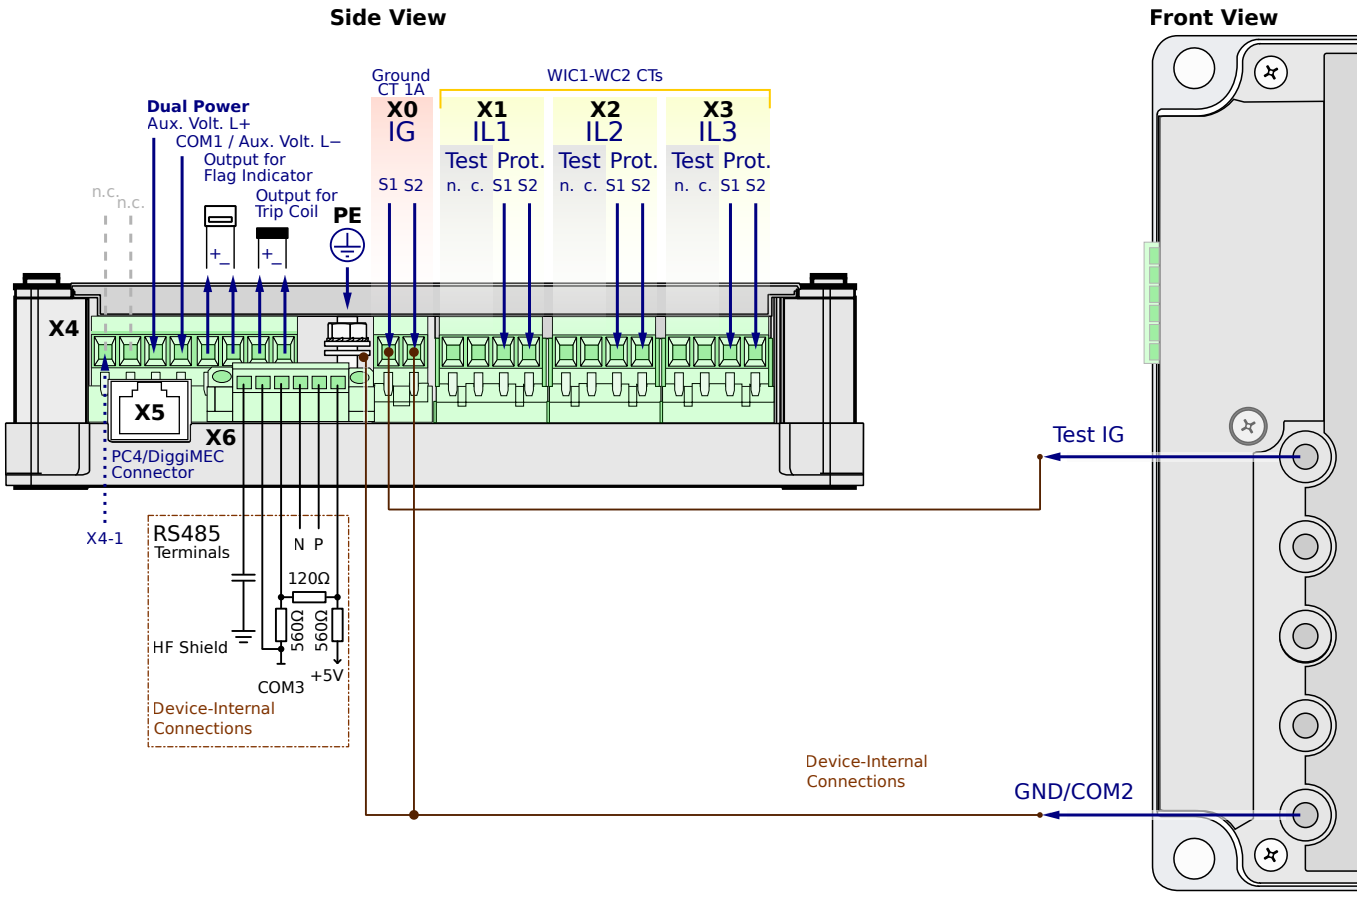


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1ABH

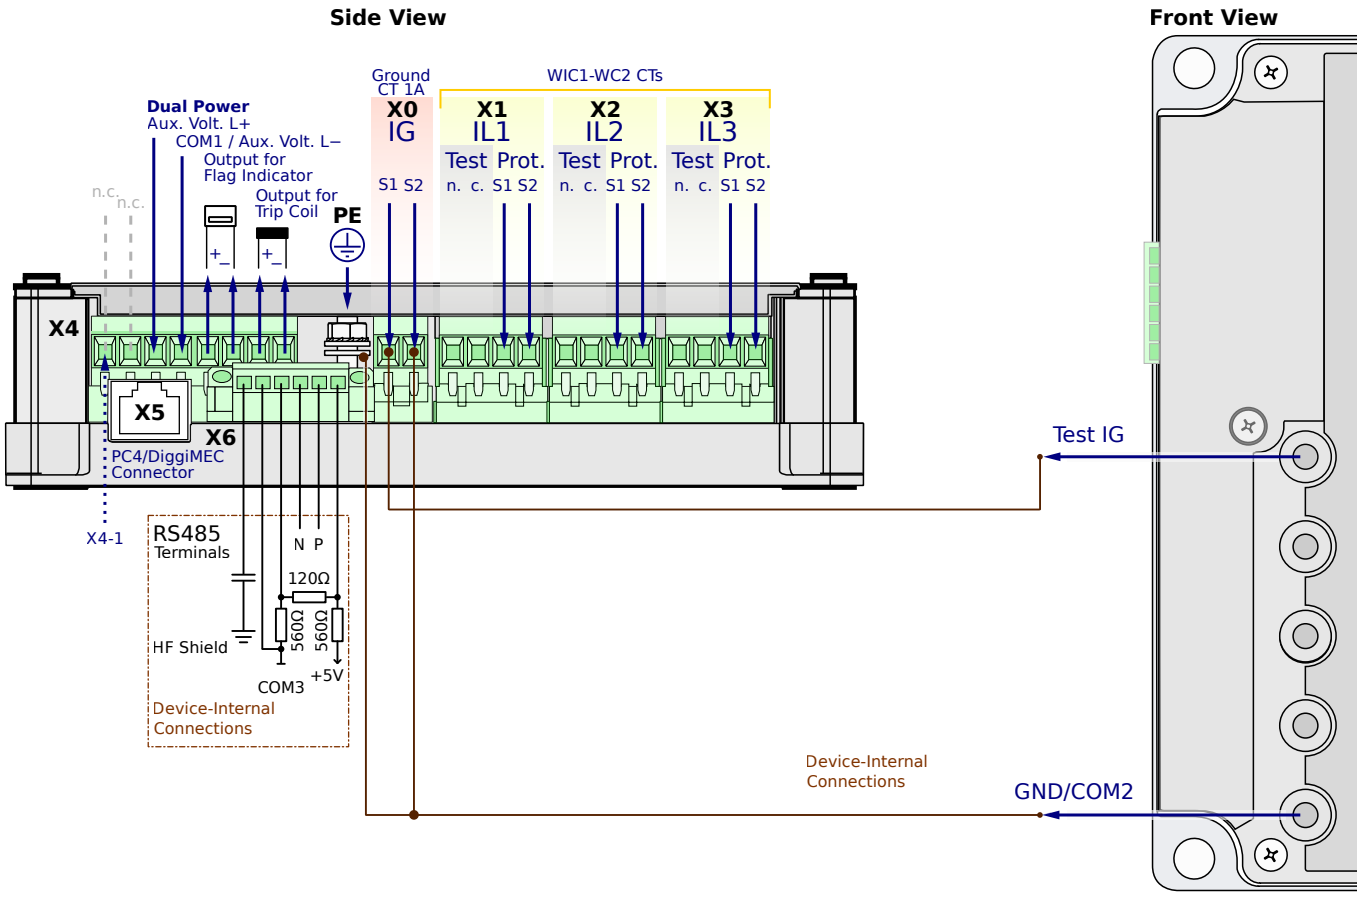


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1AC0

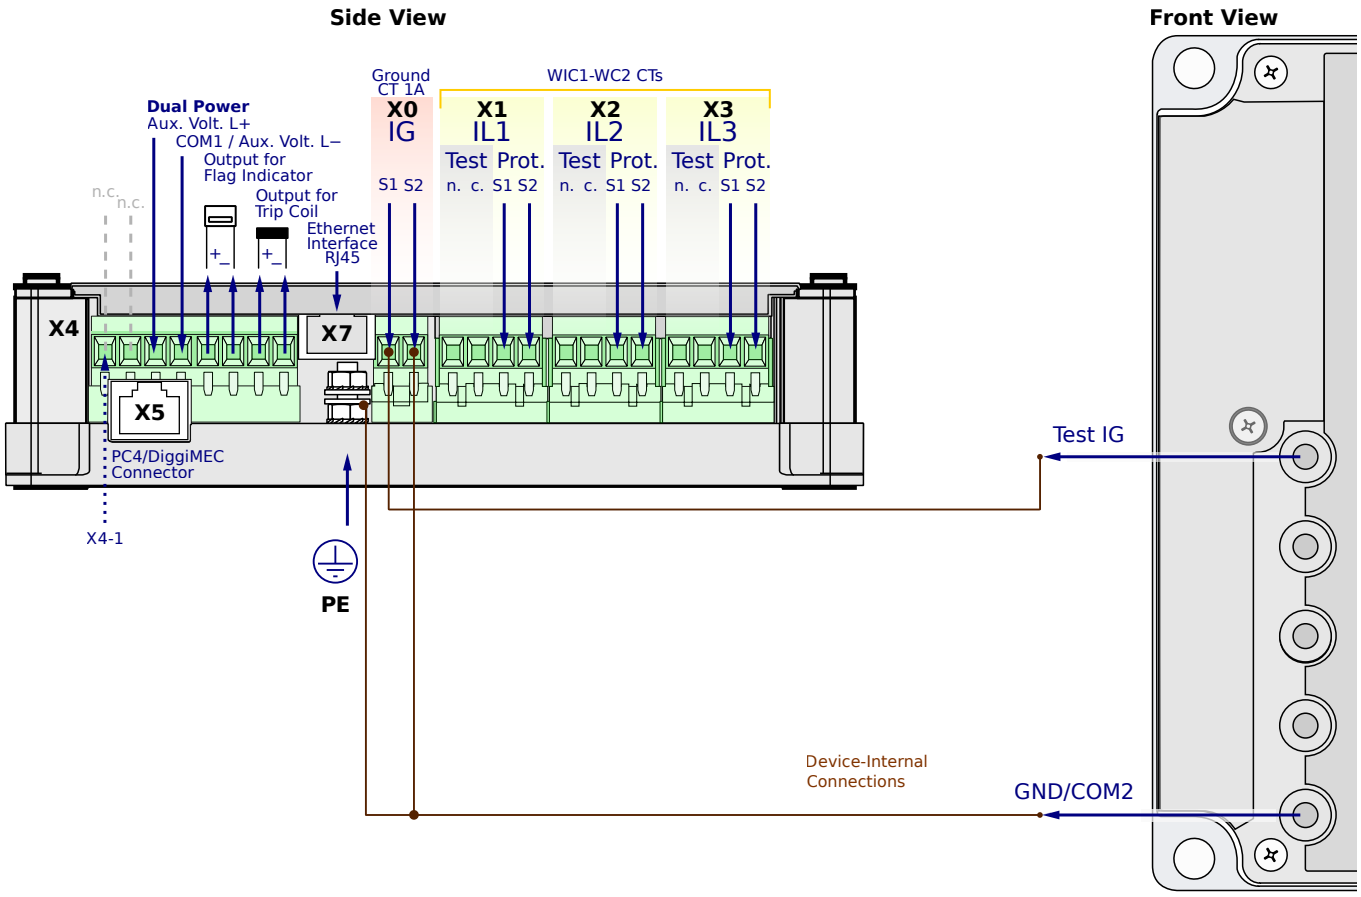


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1ACH

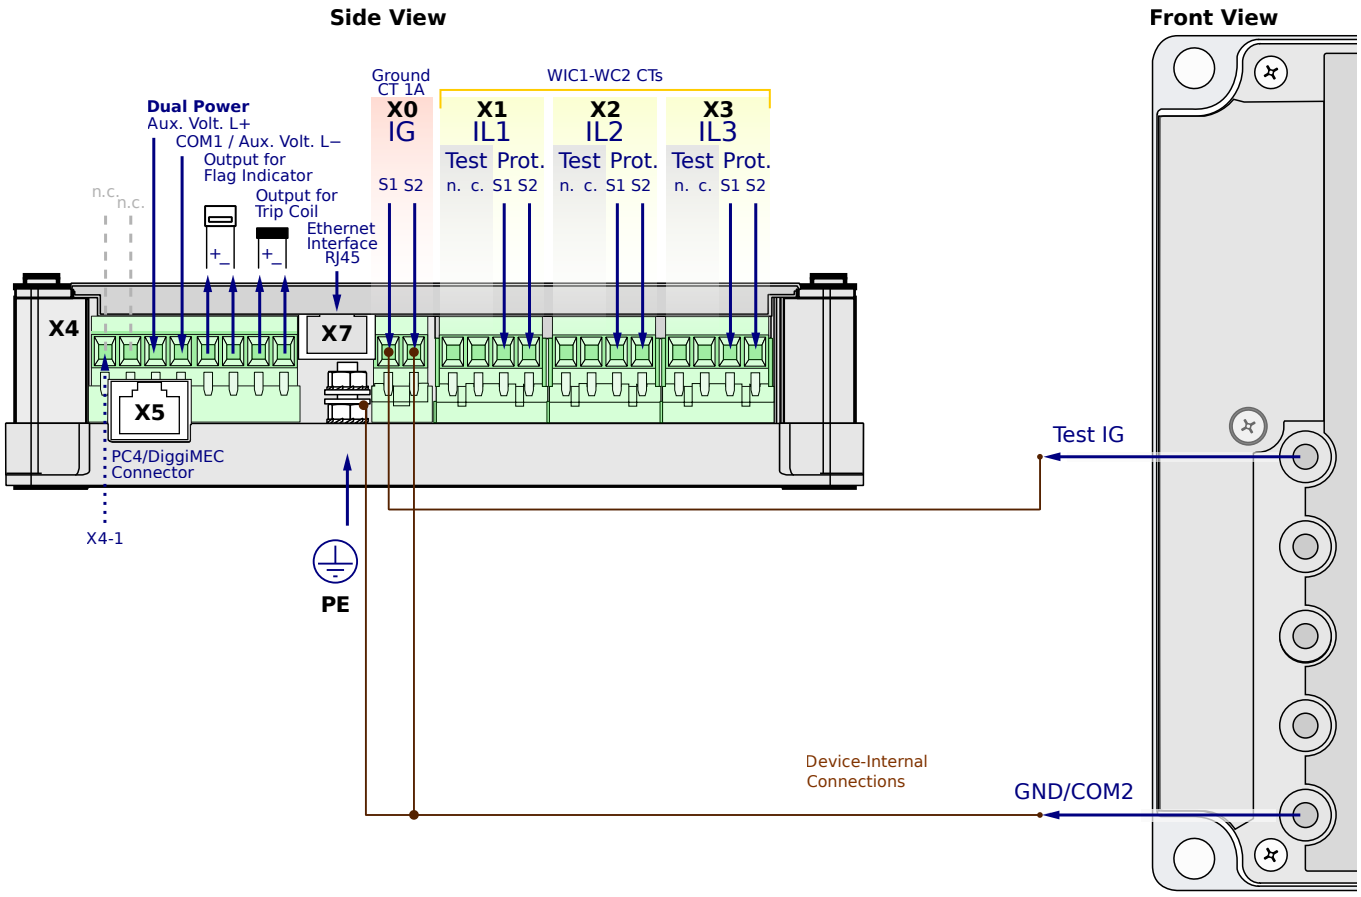


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1AL0

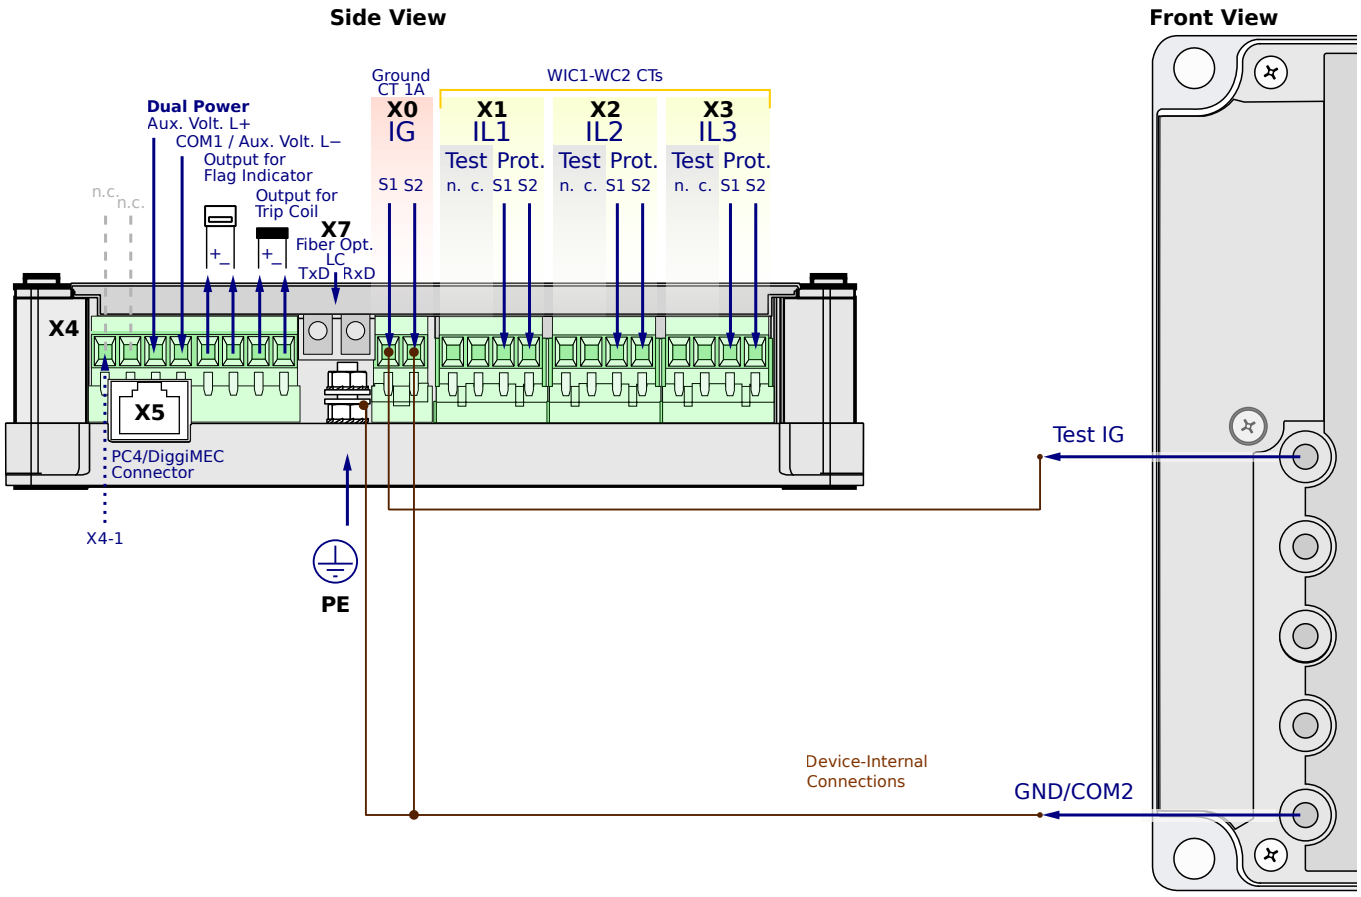


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1ALH

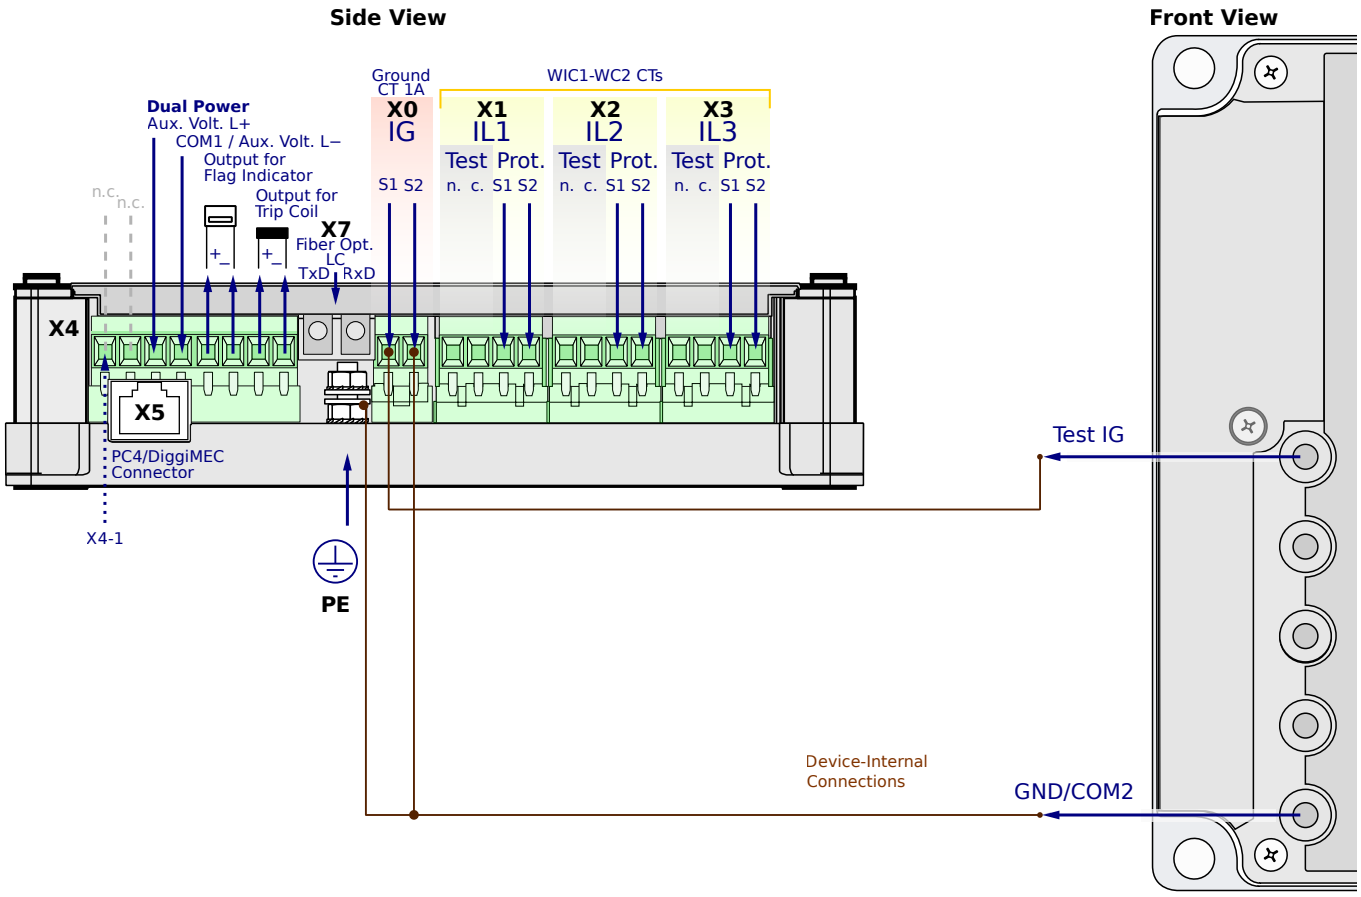


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1PA0

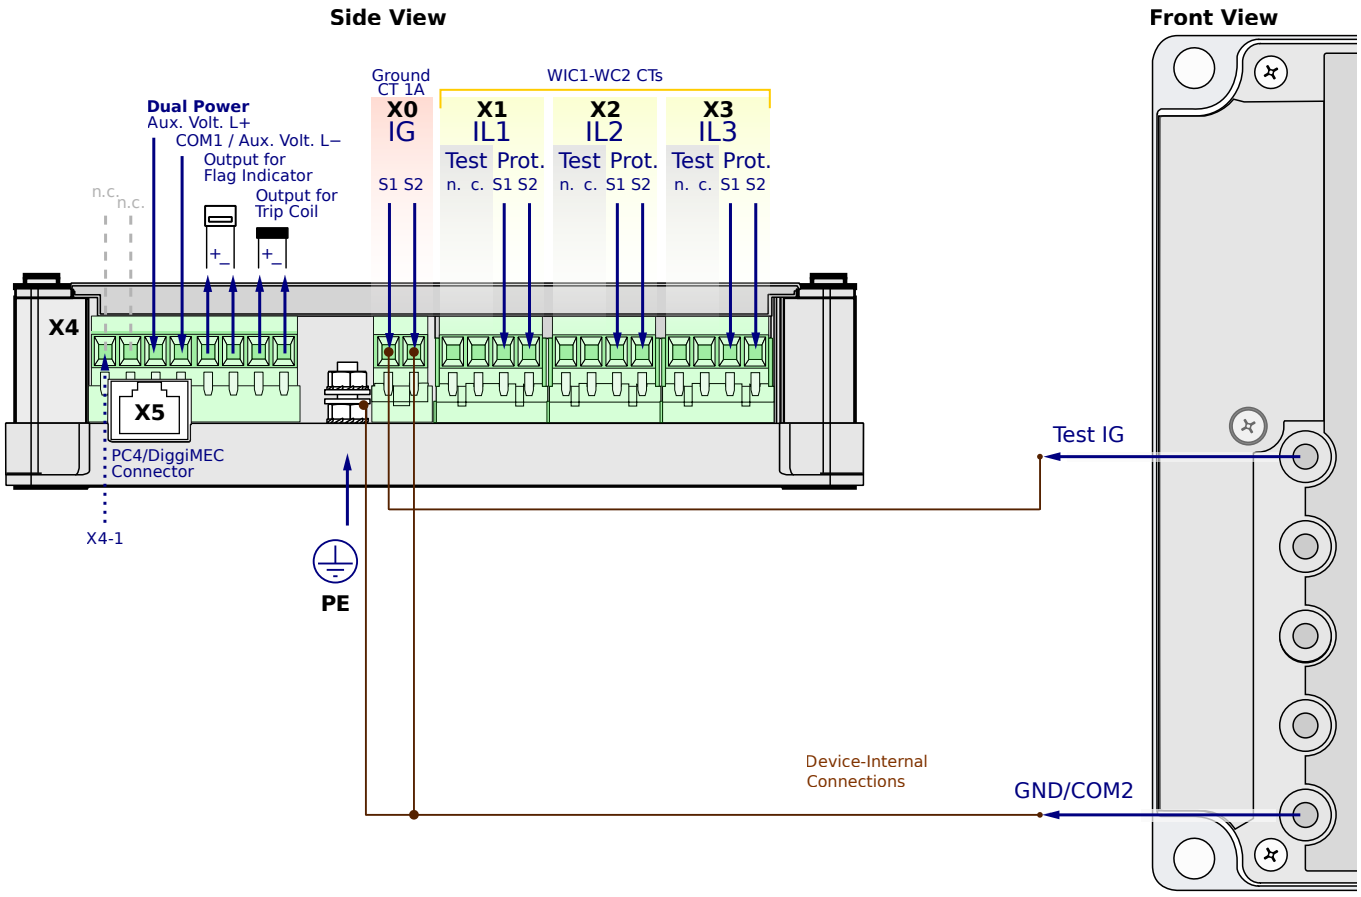


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1PAH

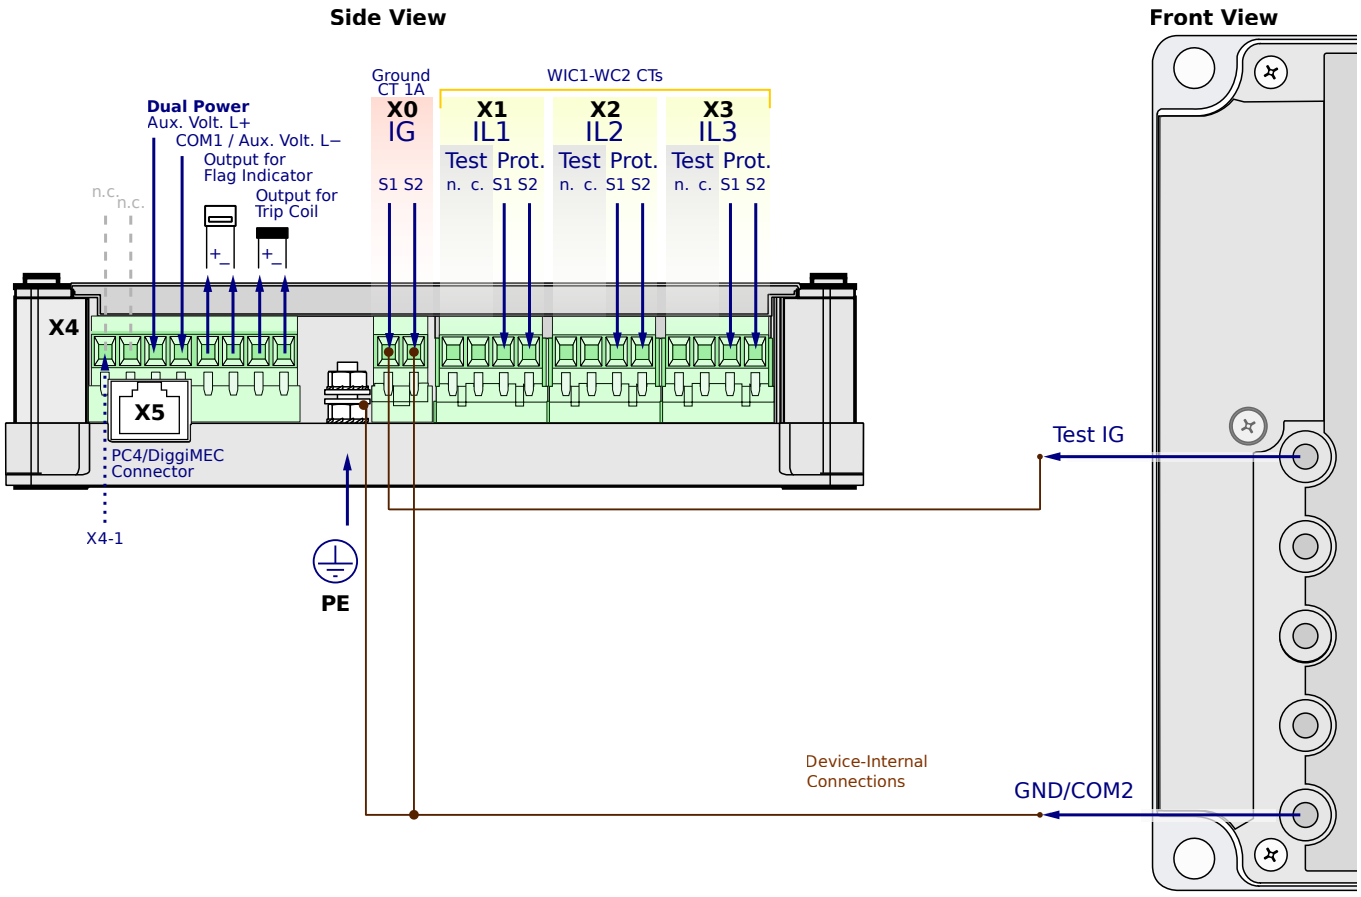


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM1PB0

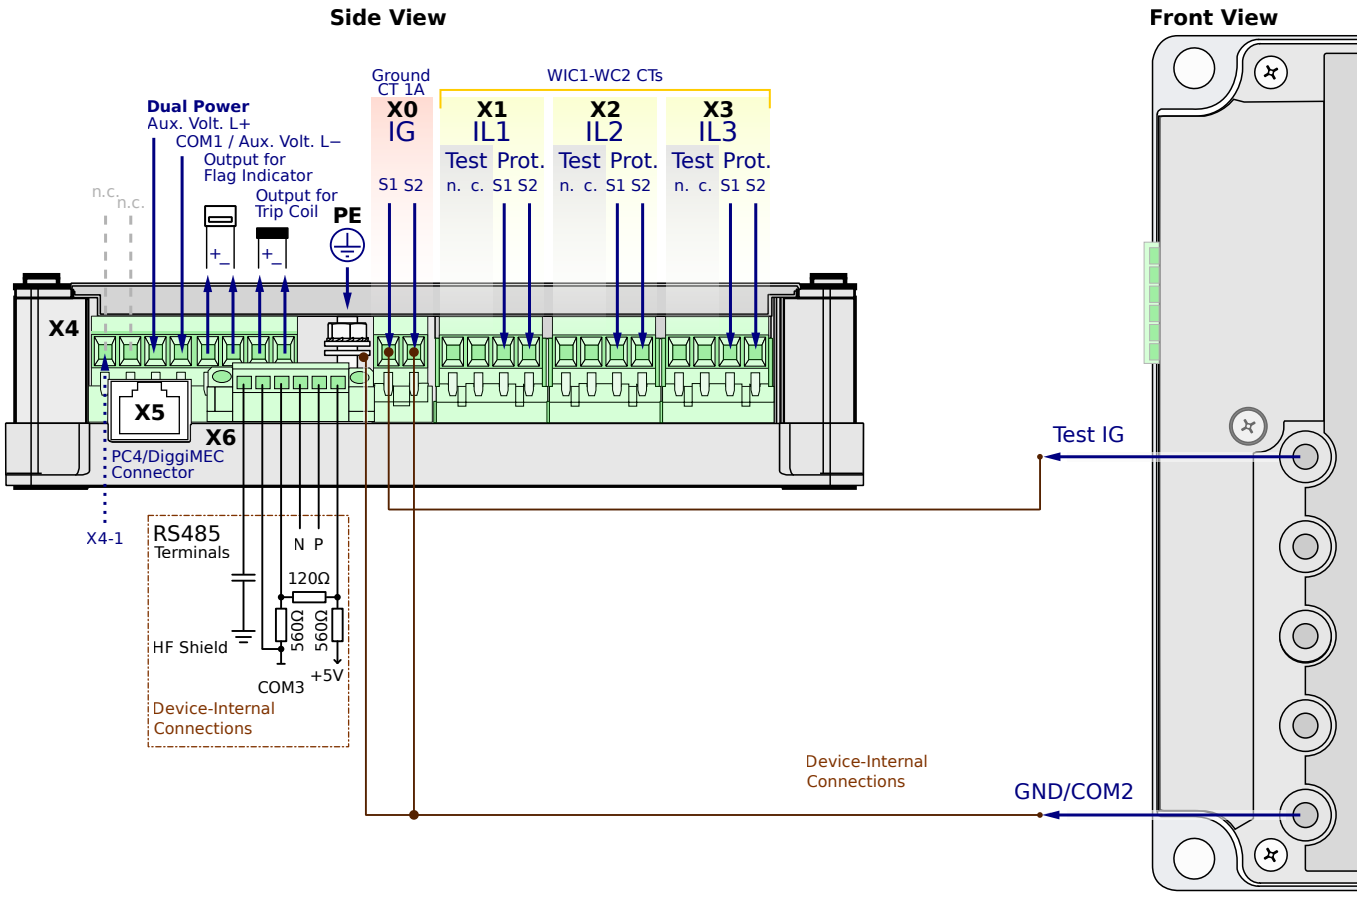


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1PBH

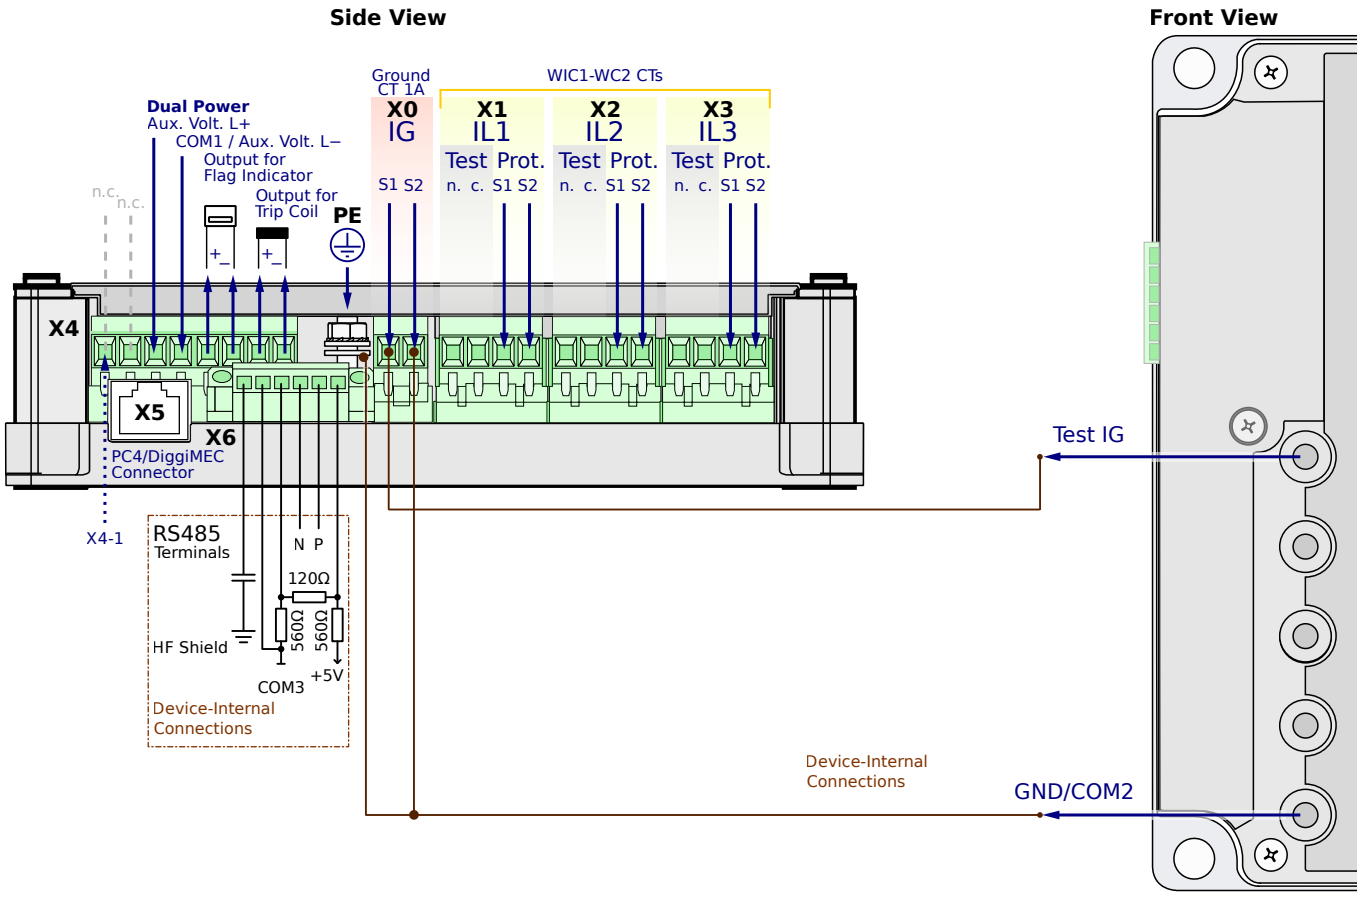


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM1PC0

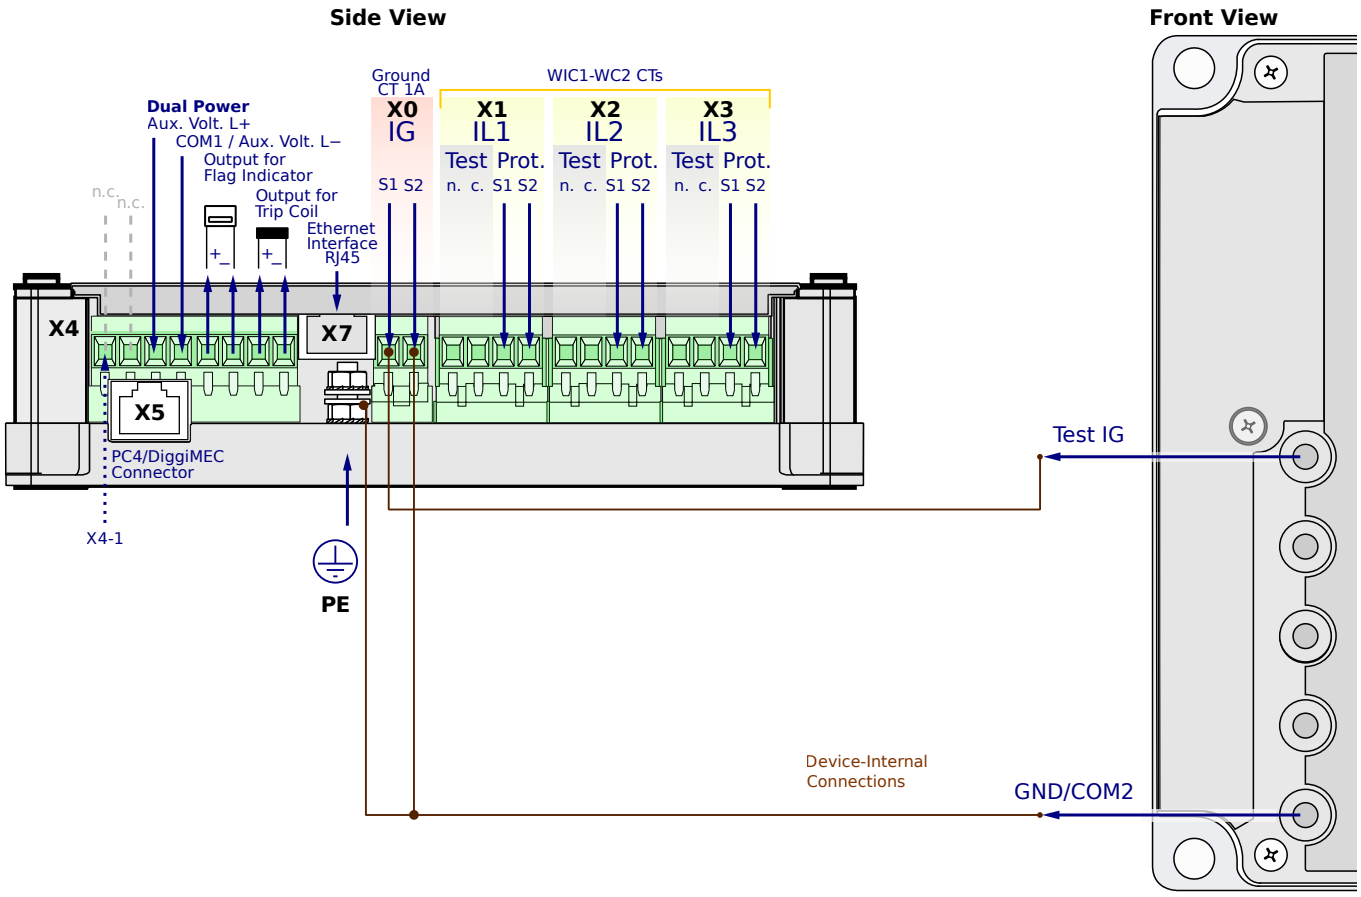


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1PCH

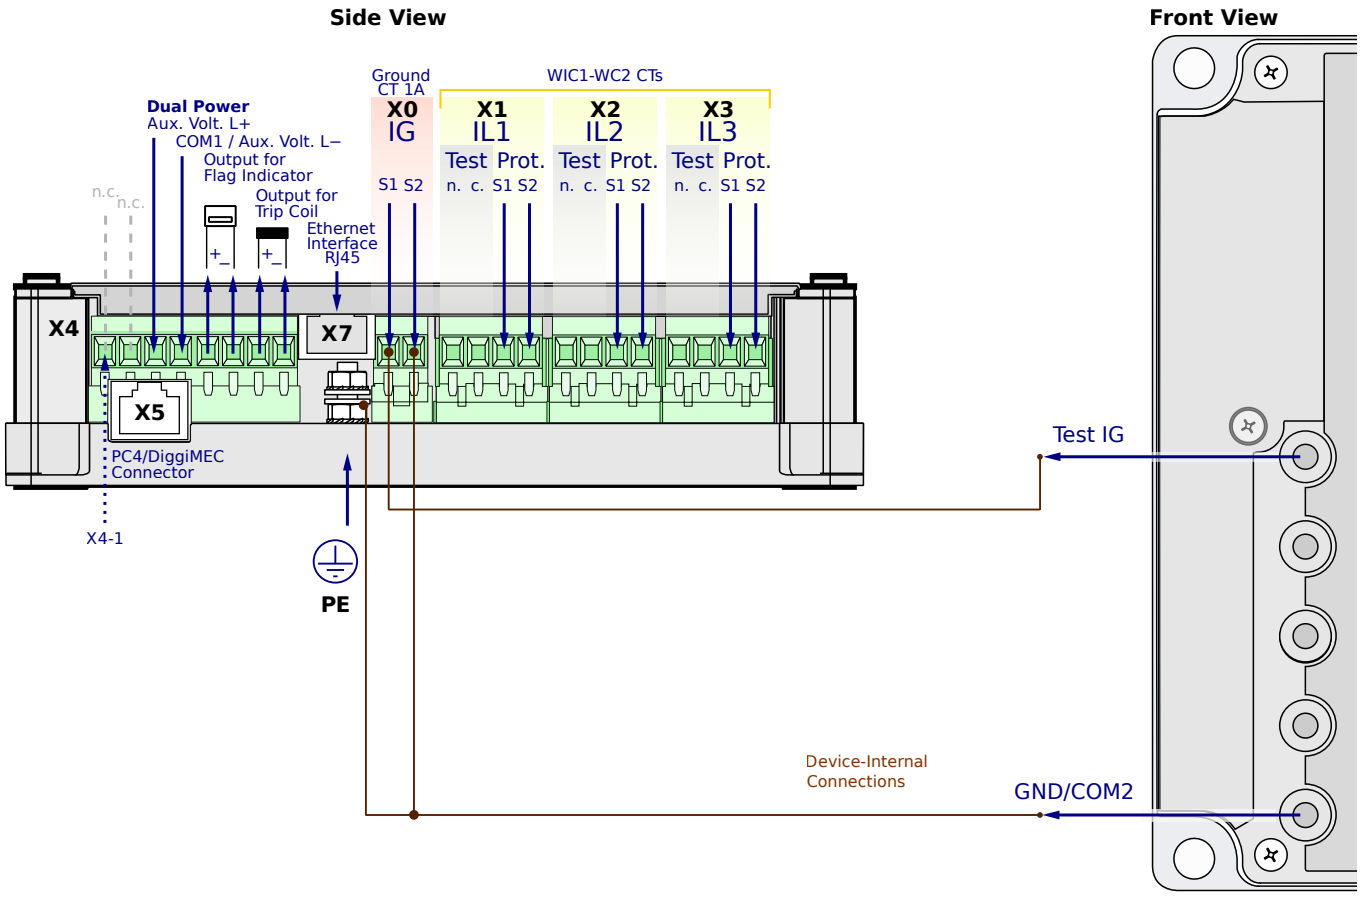


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM1PL0

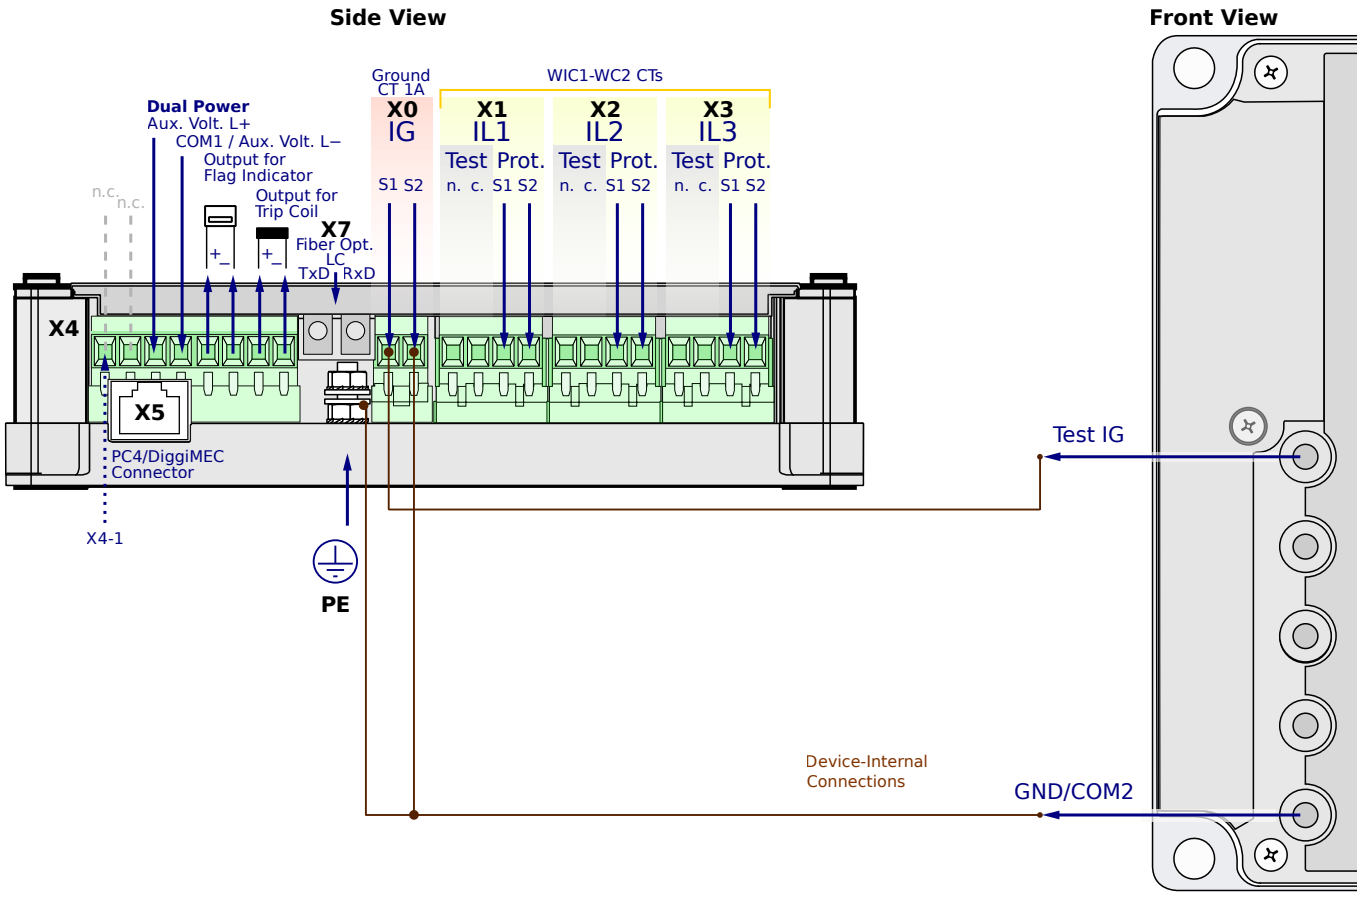


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM1PLH

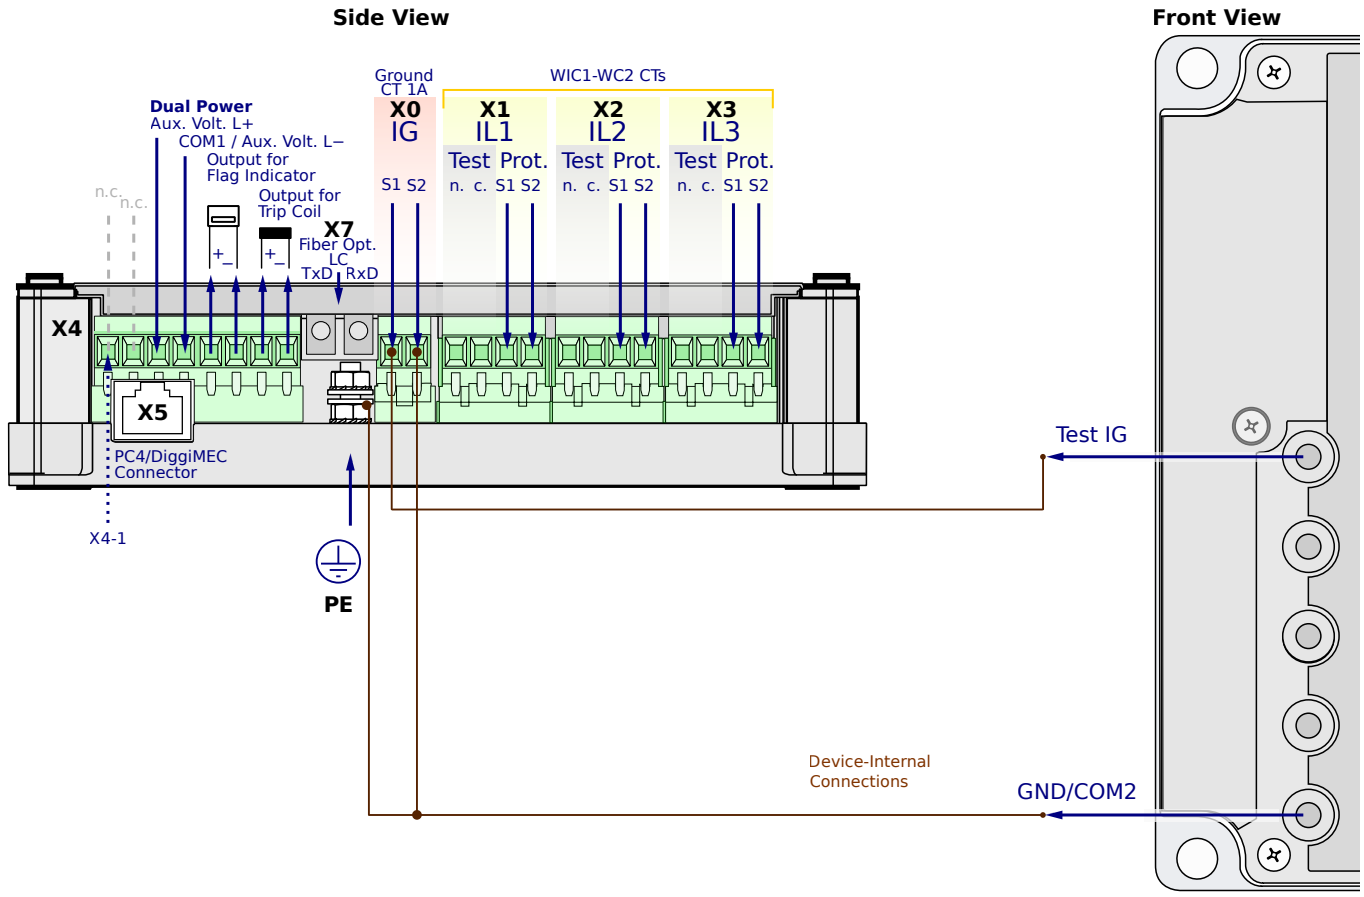


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2SA0

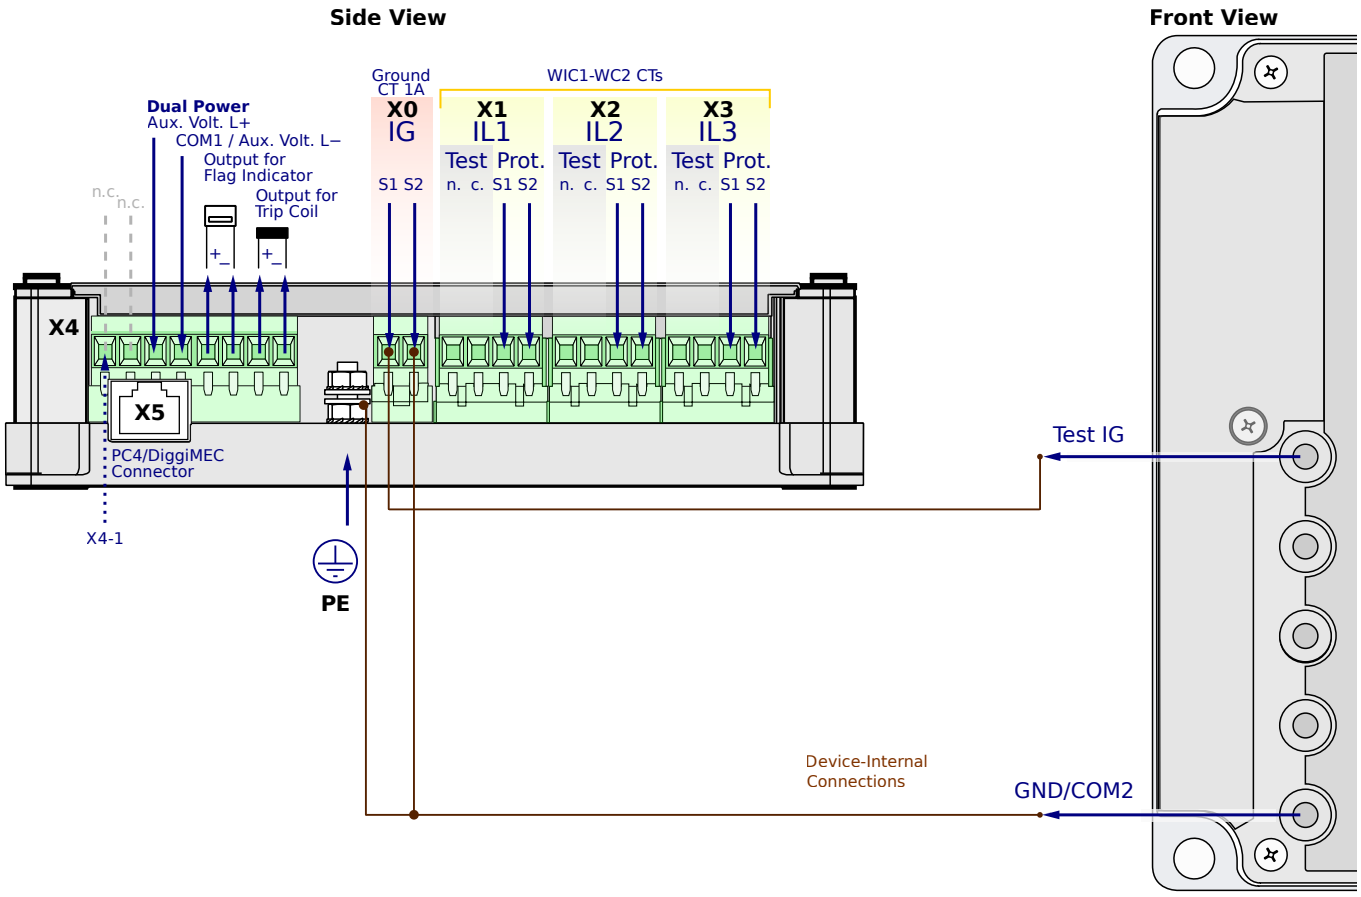


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2SAH

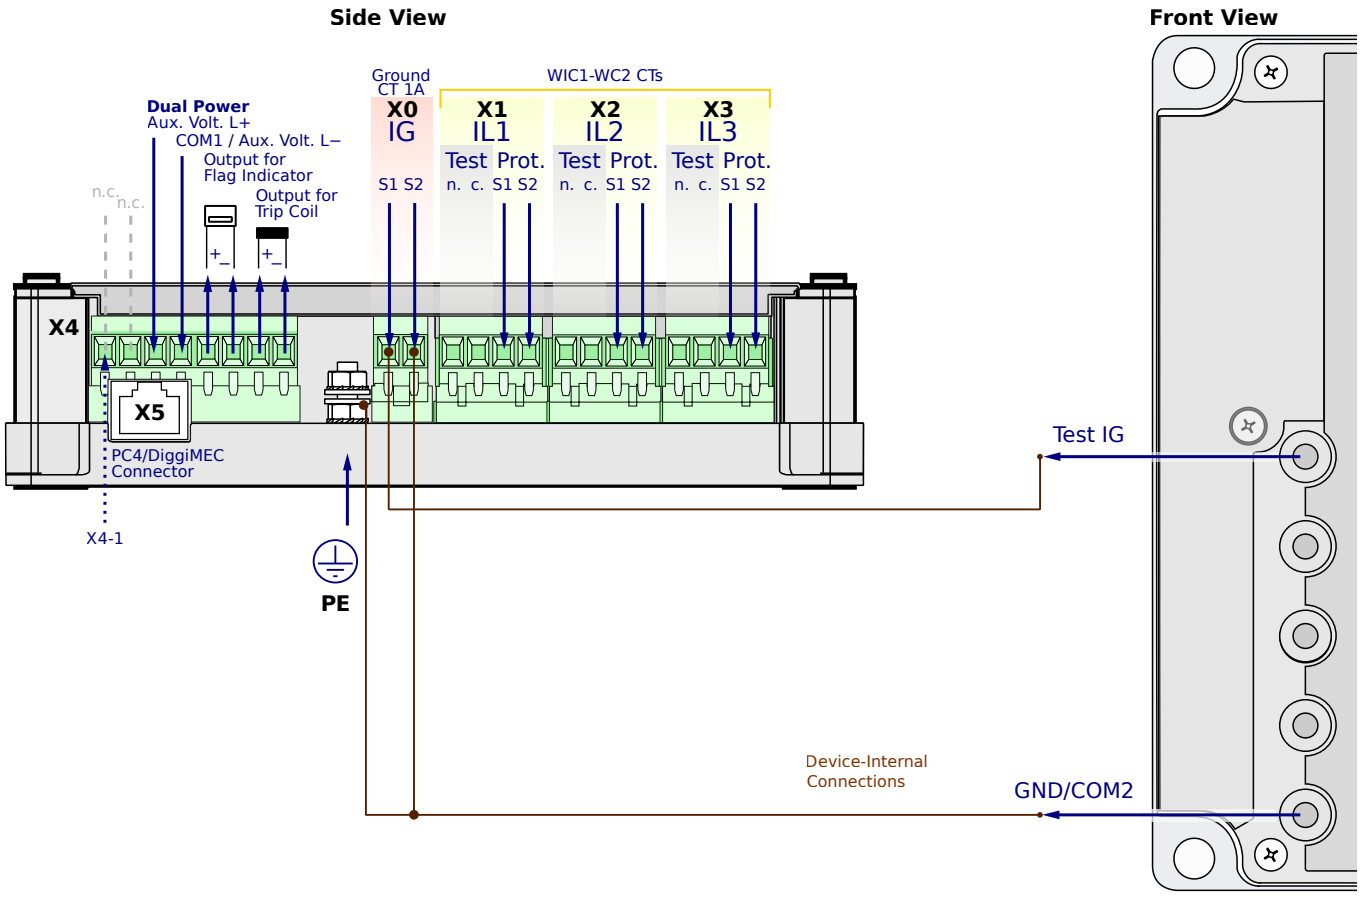


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2SB0

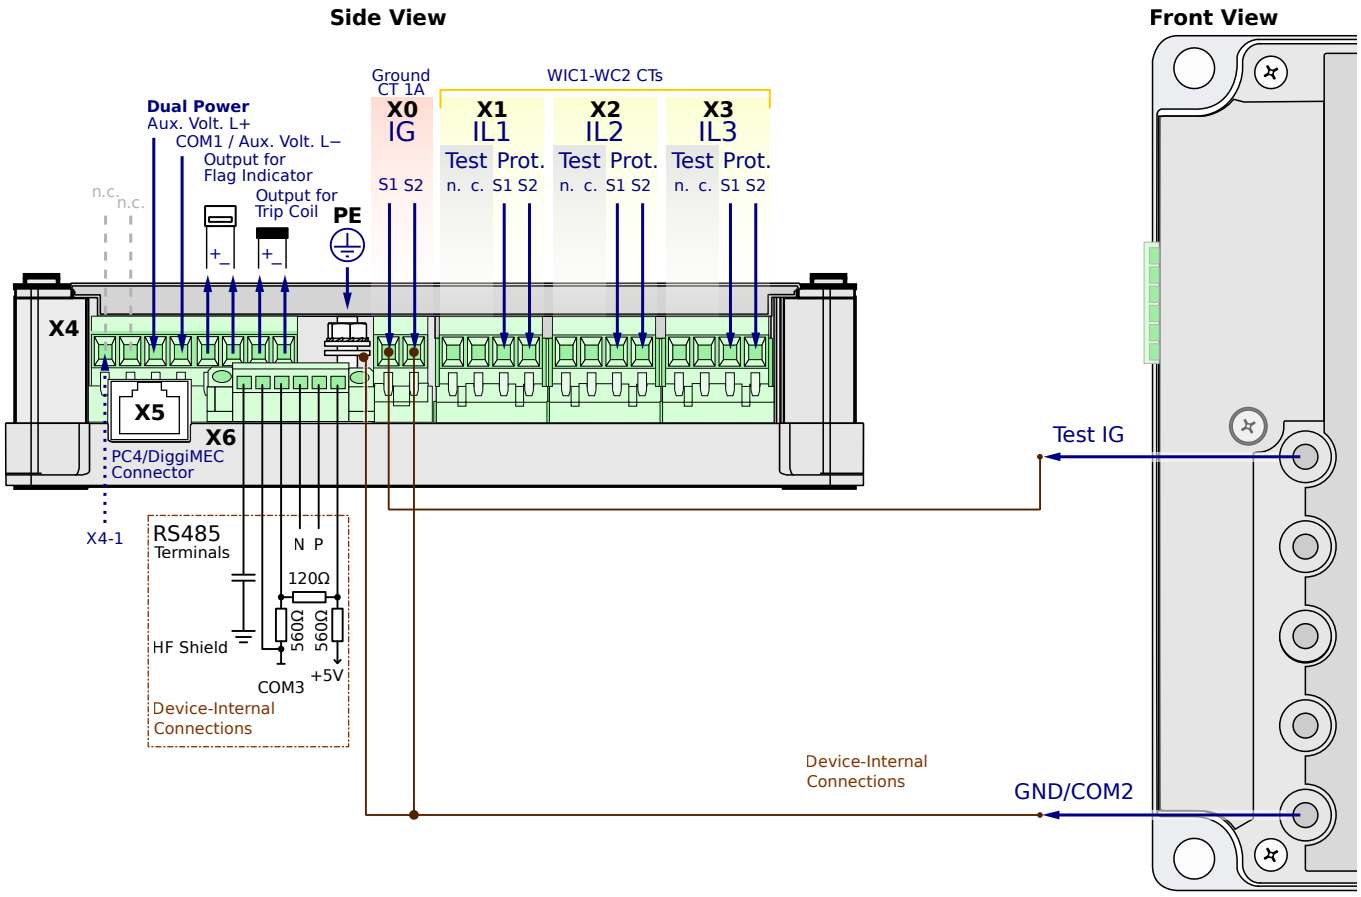


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2SBH

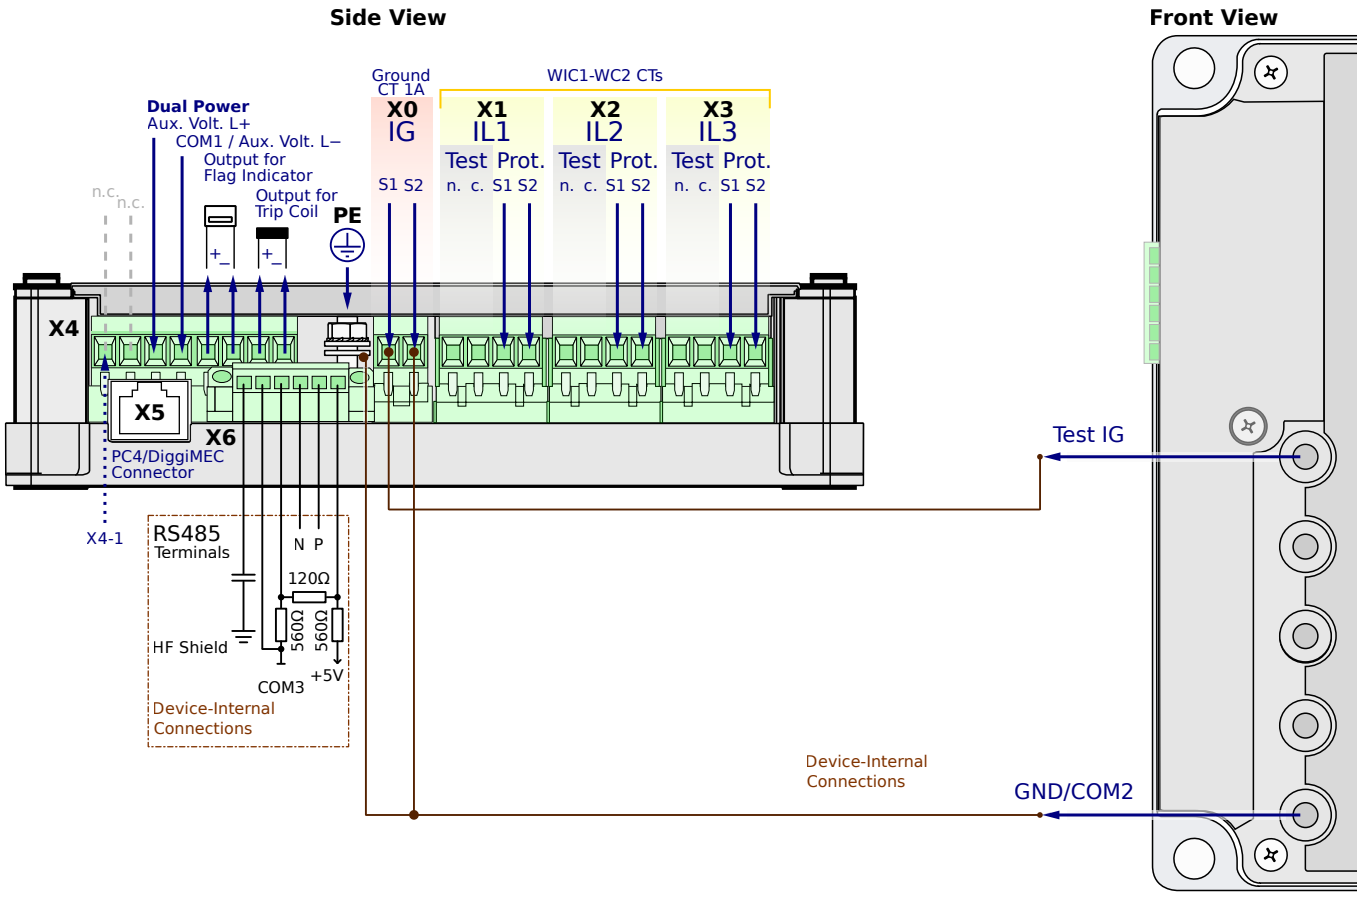


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2SC0

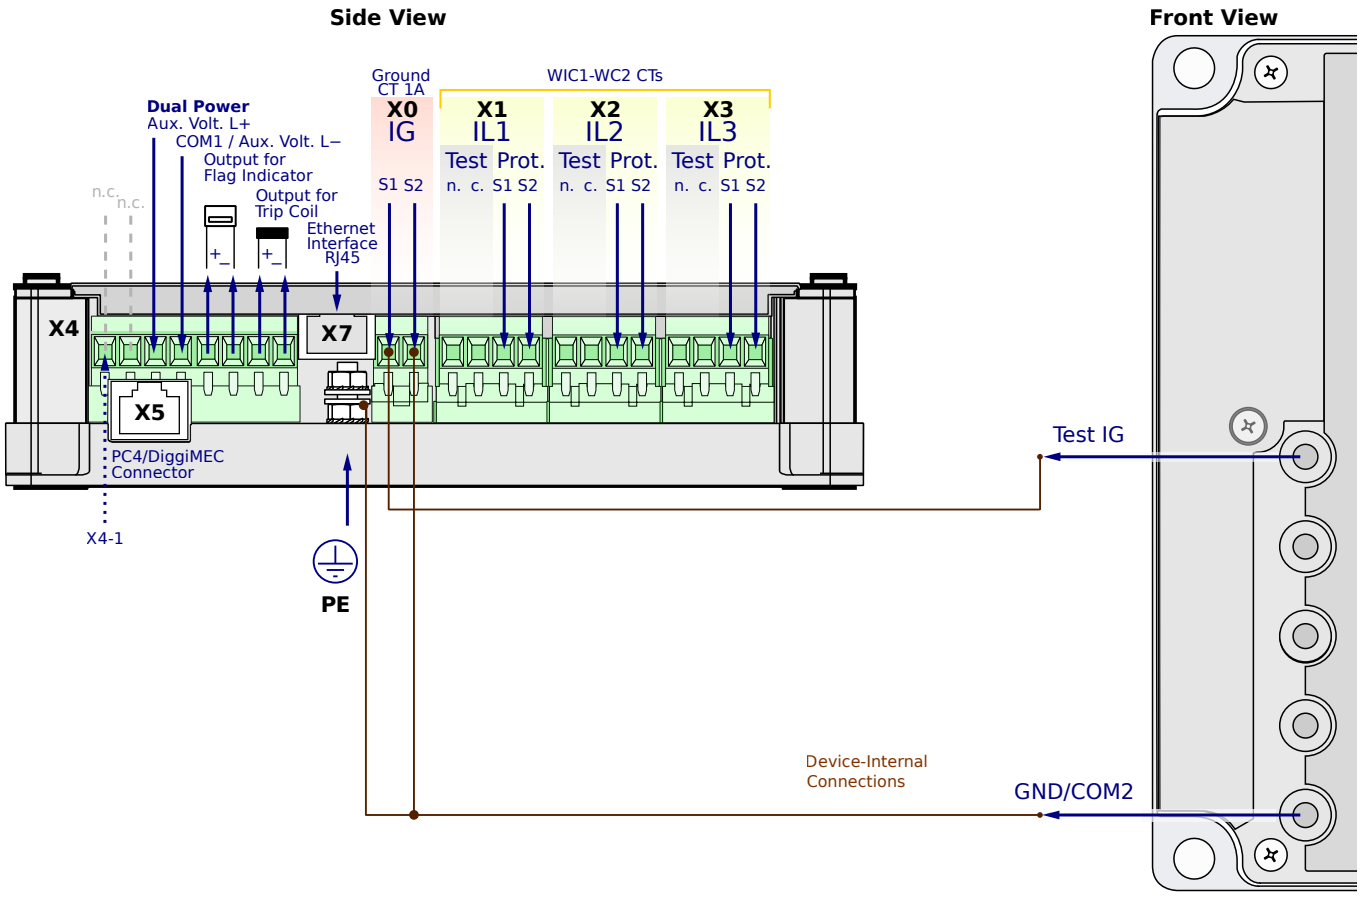


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2SCH

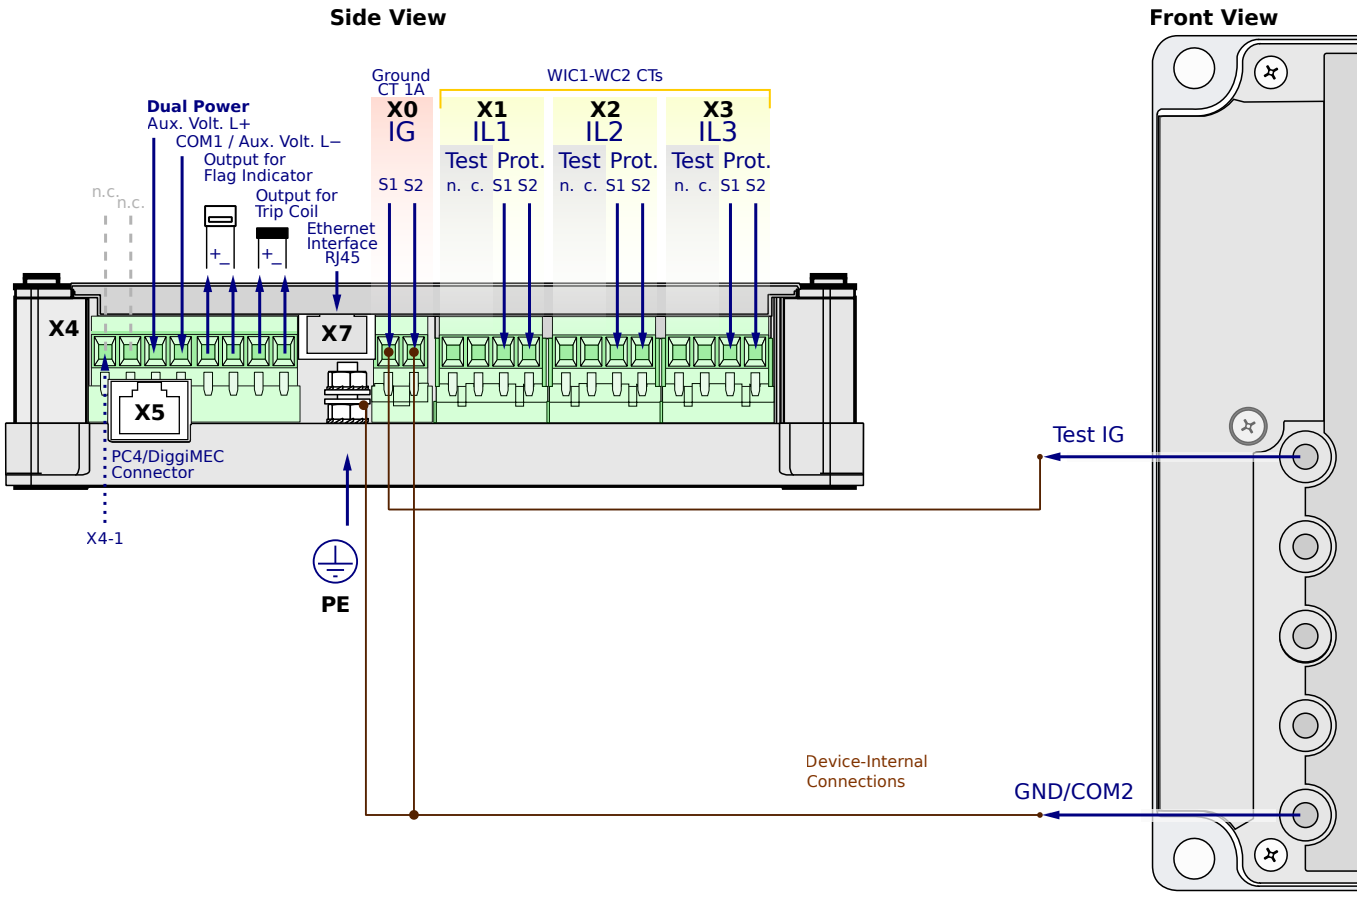


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2SL0

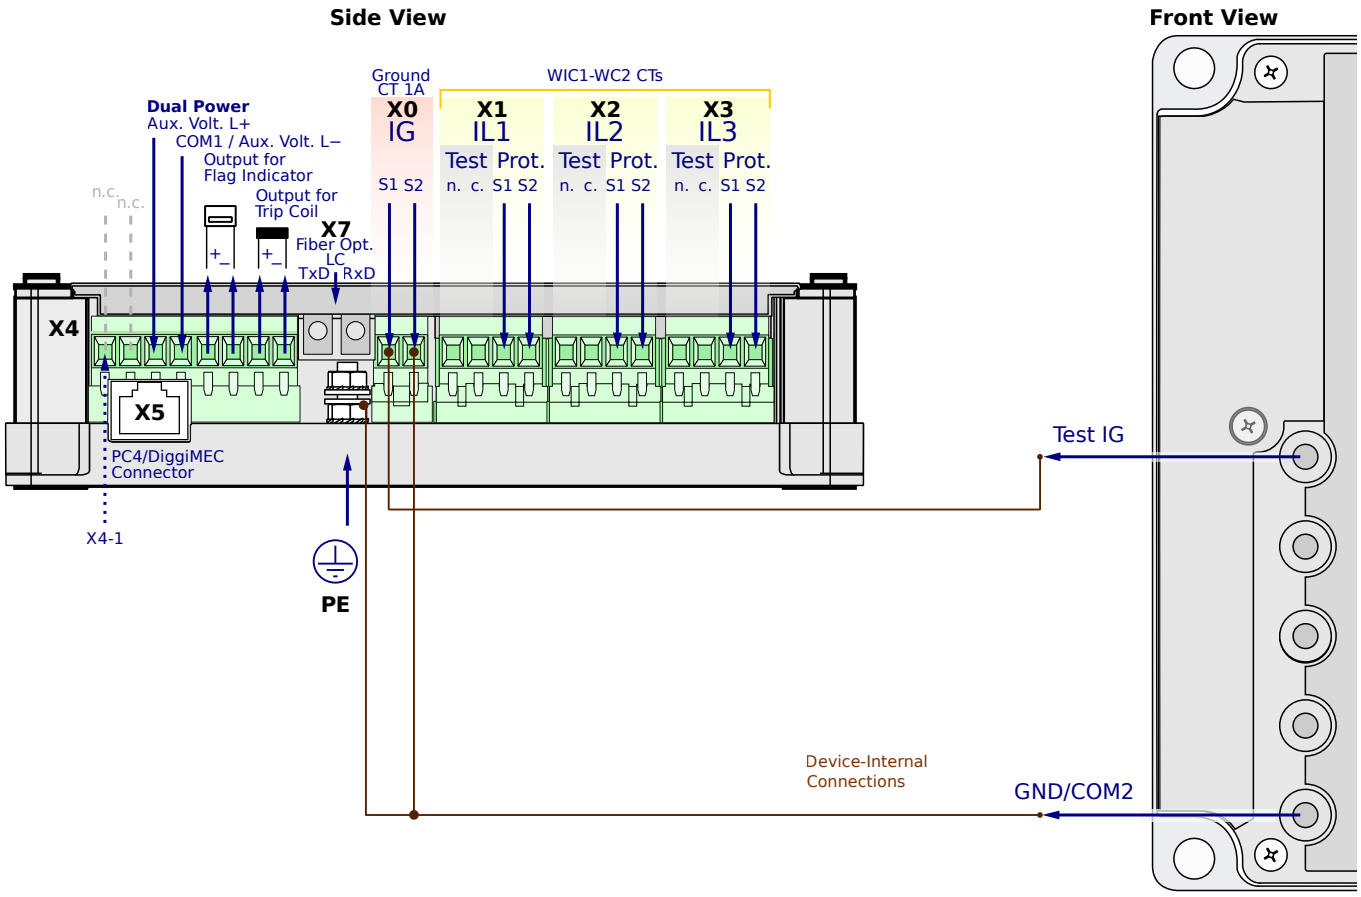


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2SLH

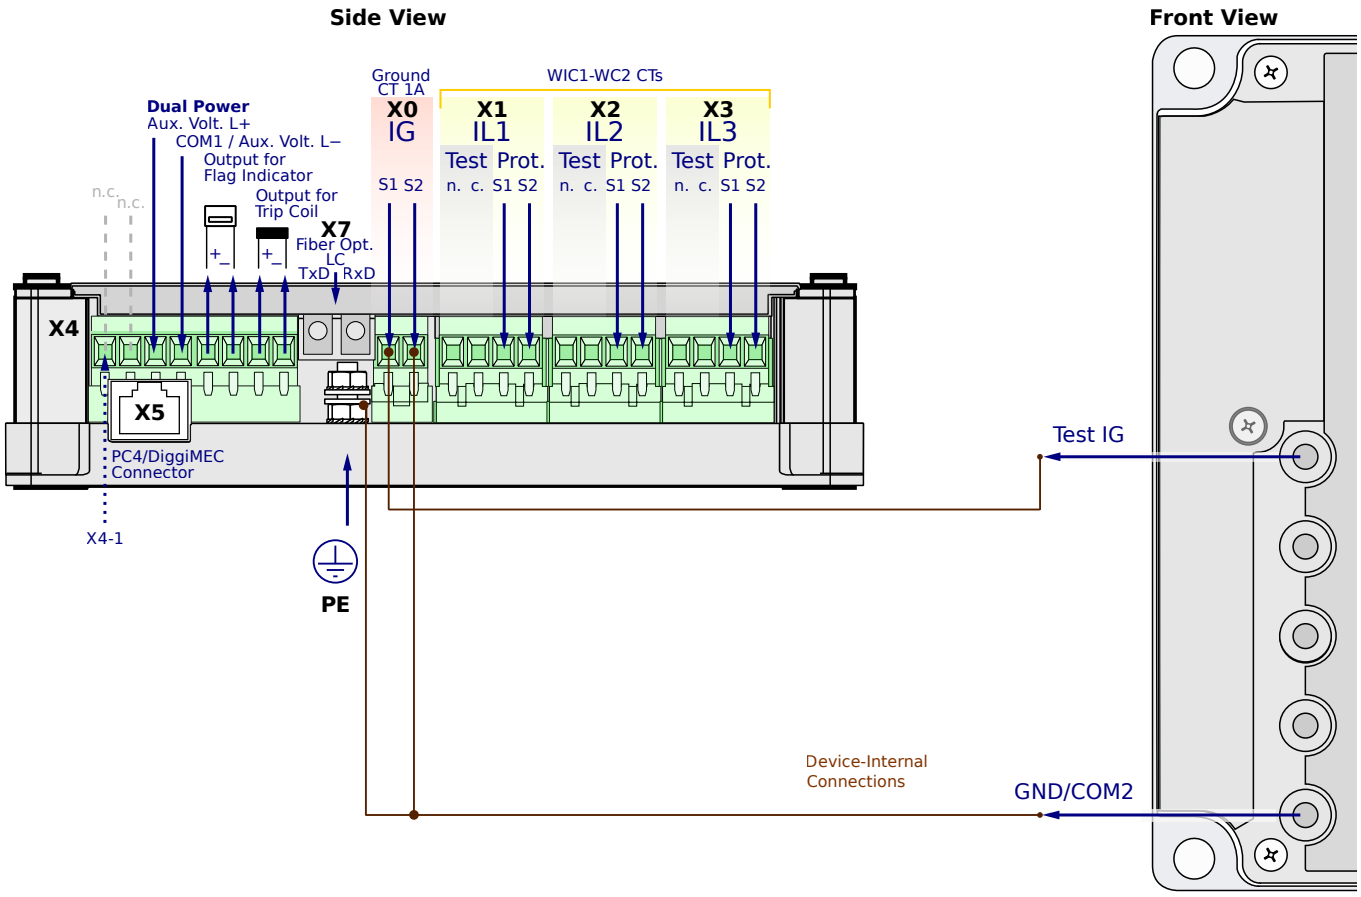


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2AA0

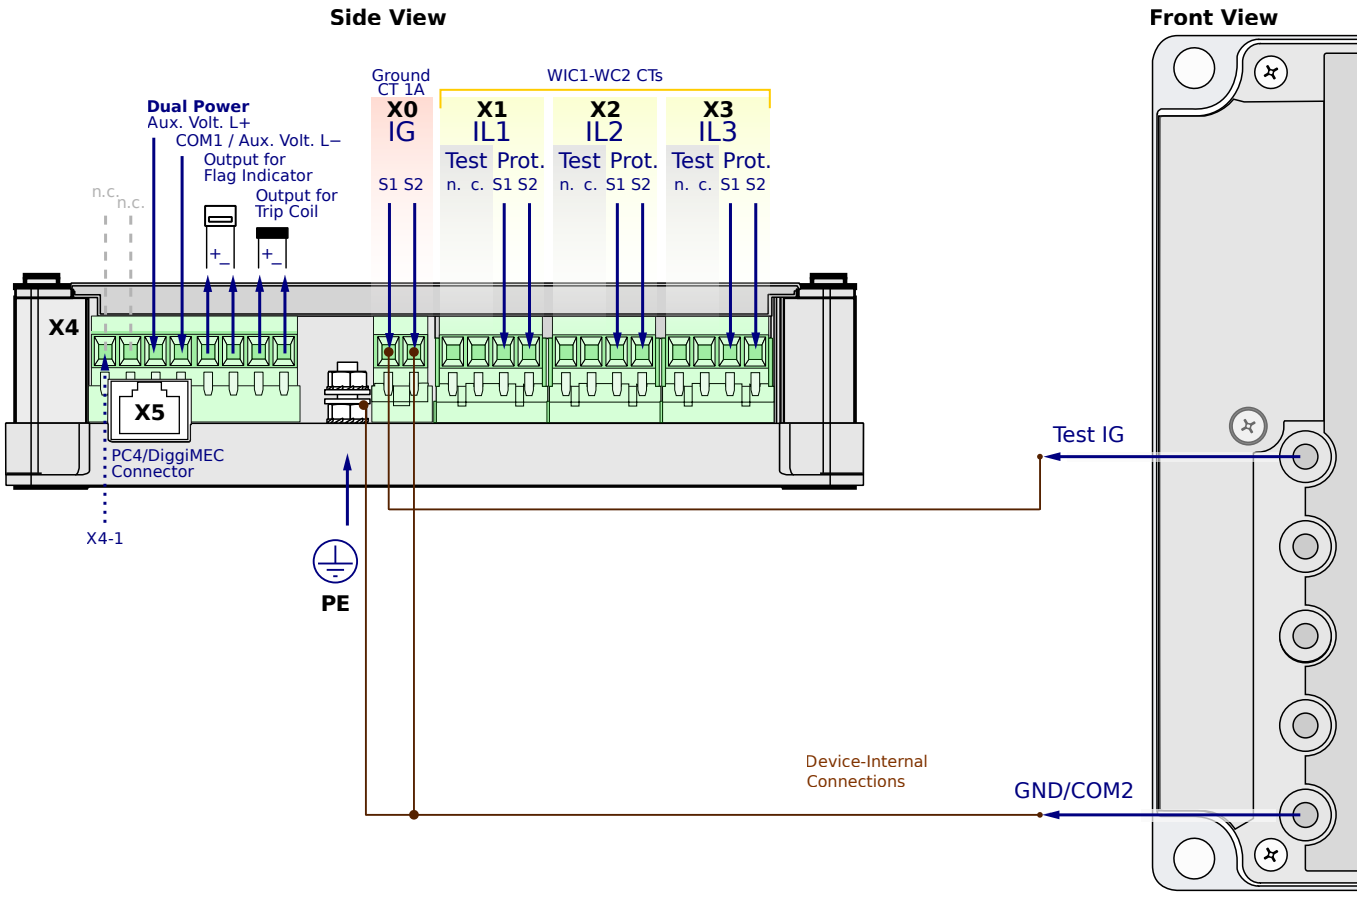


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2AAH

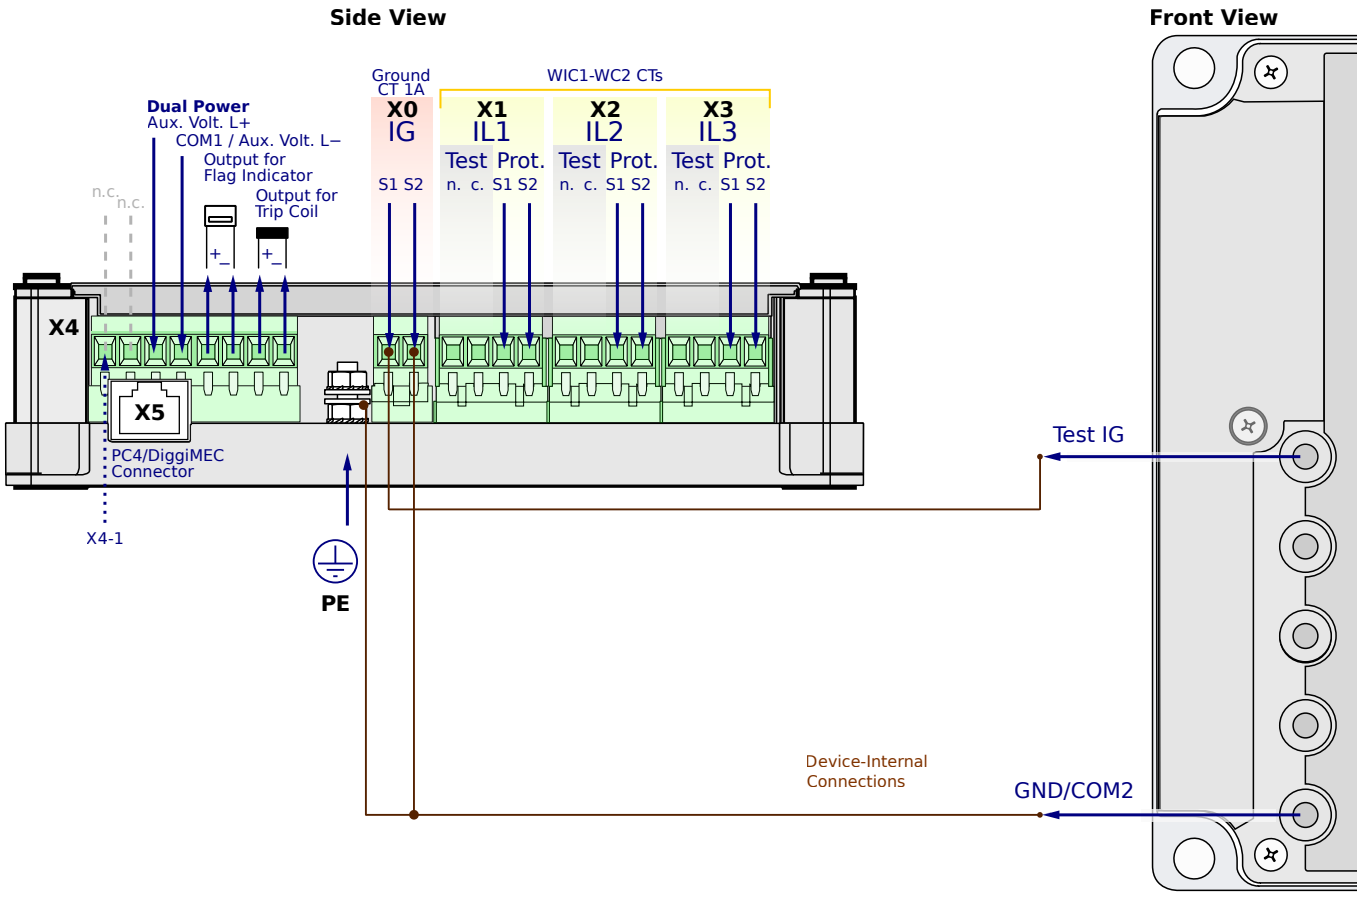


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2AB0

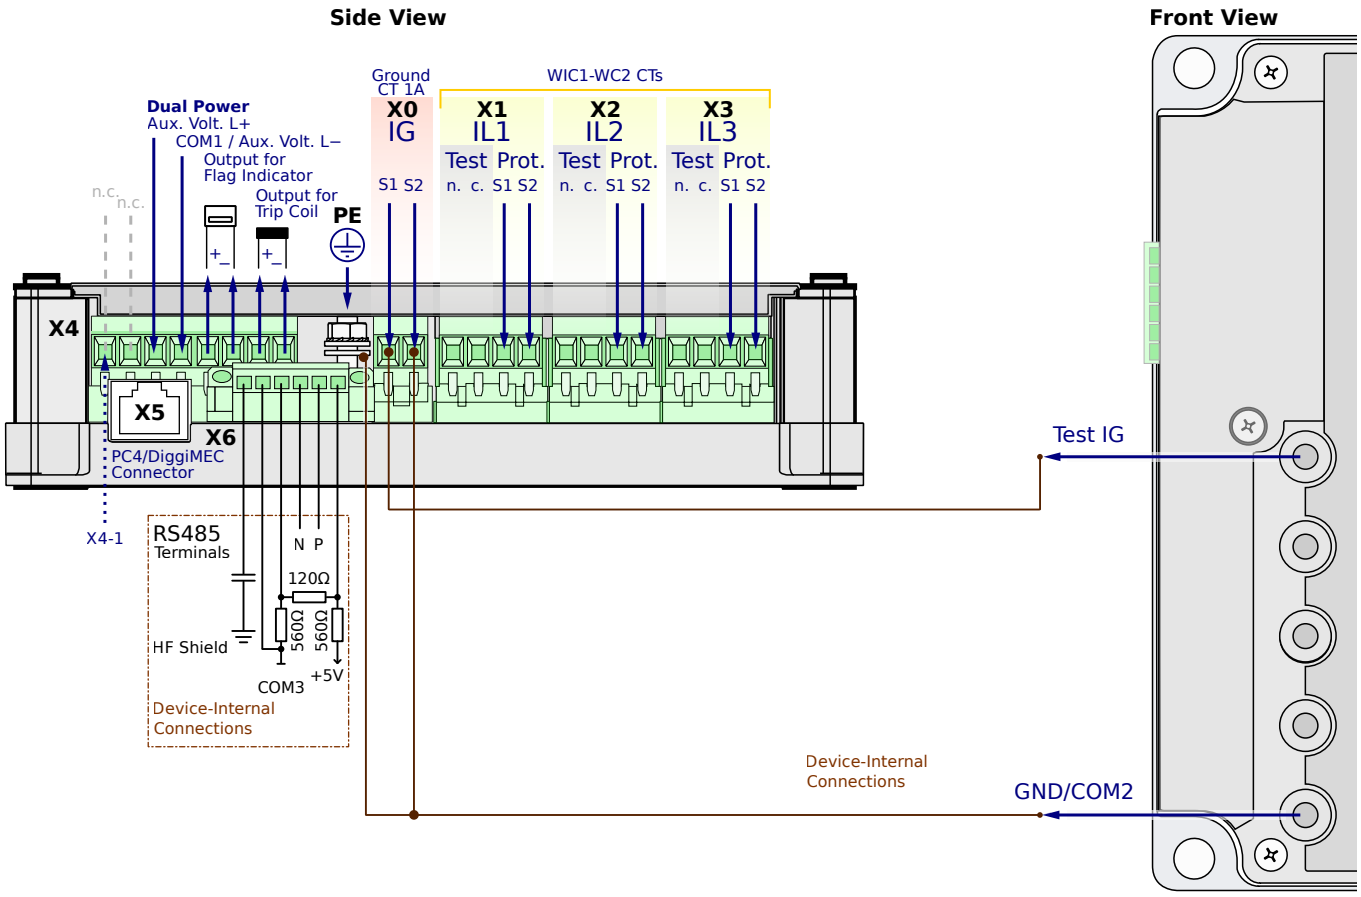


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2ABH

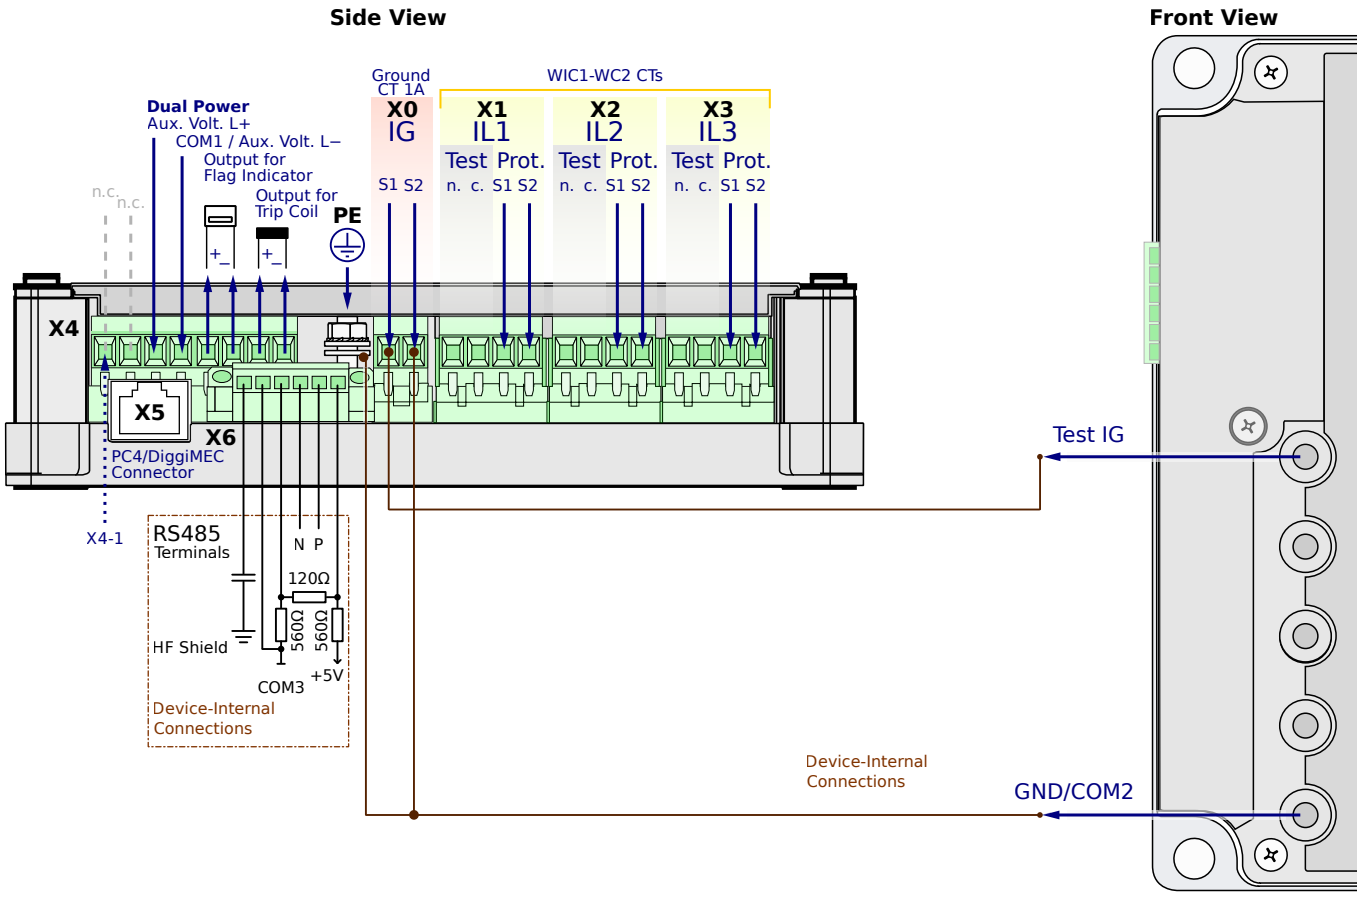


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2AC0

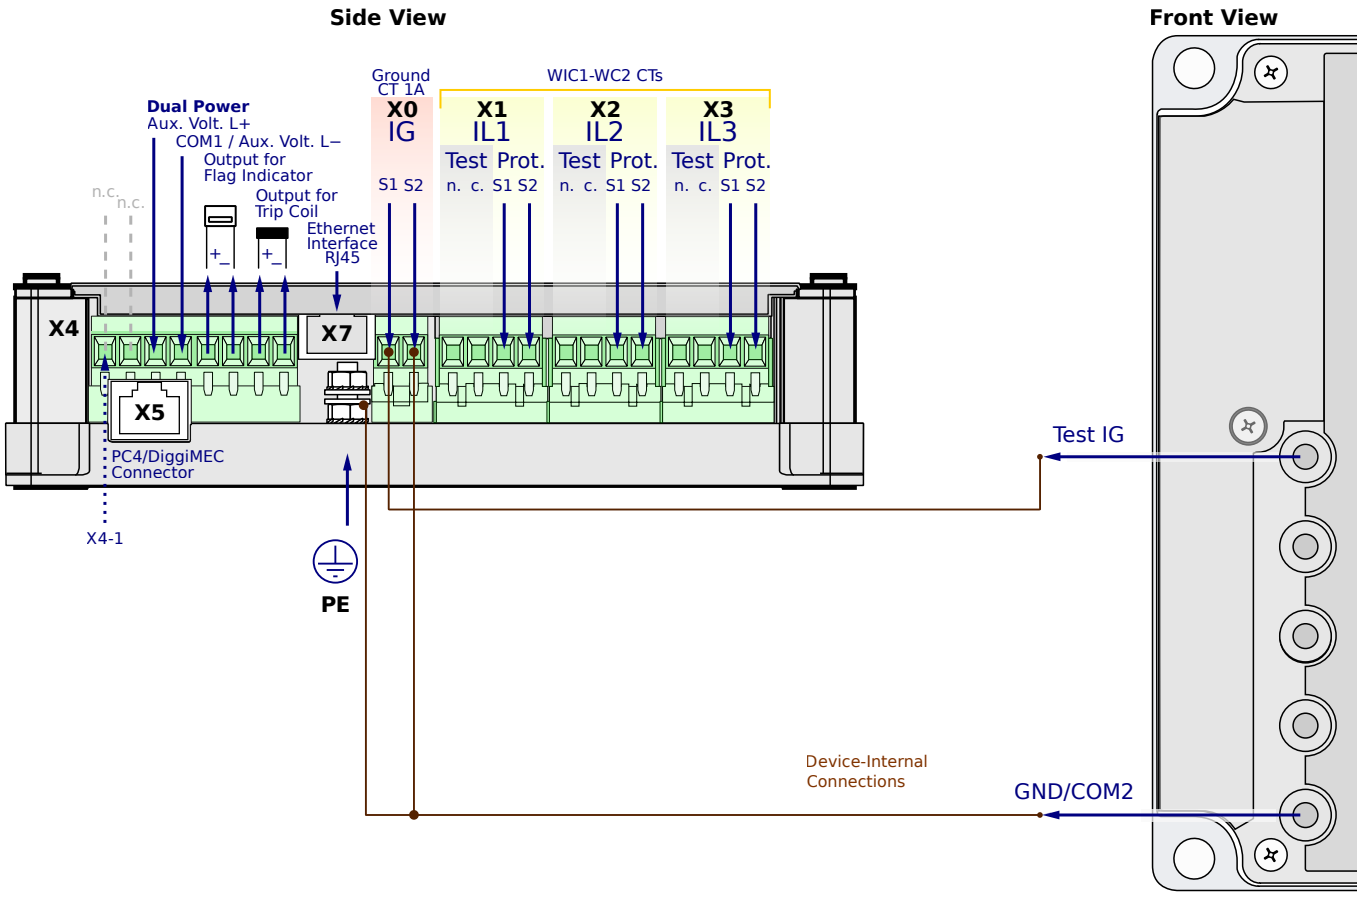


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2ACH

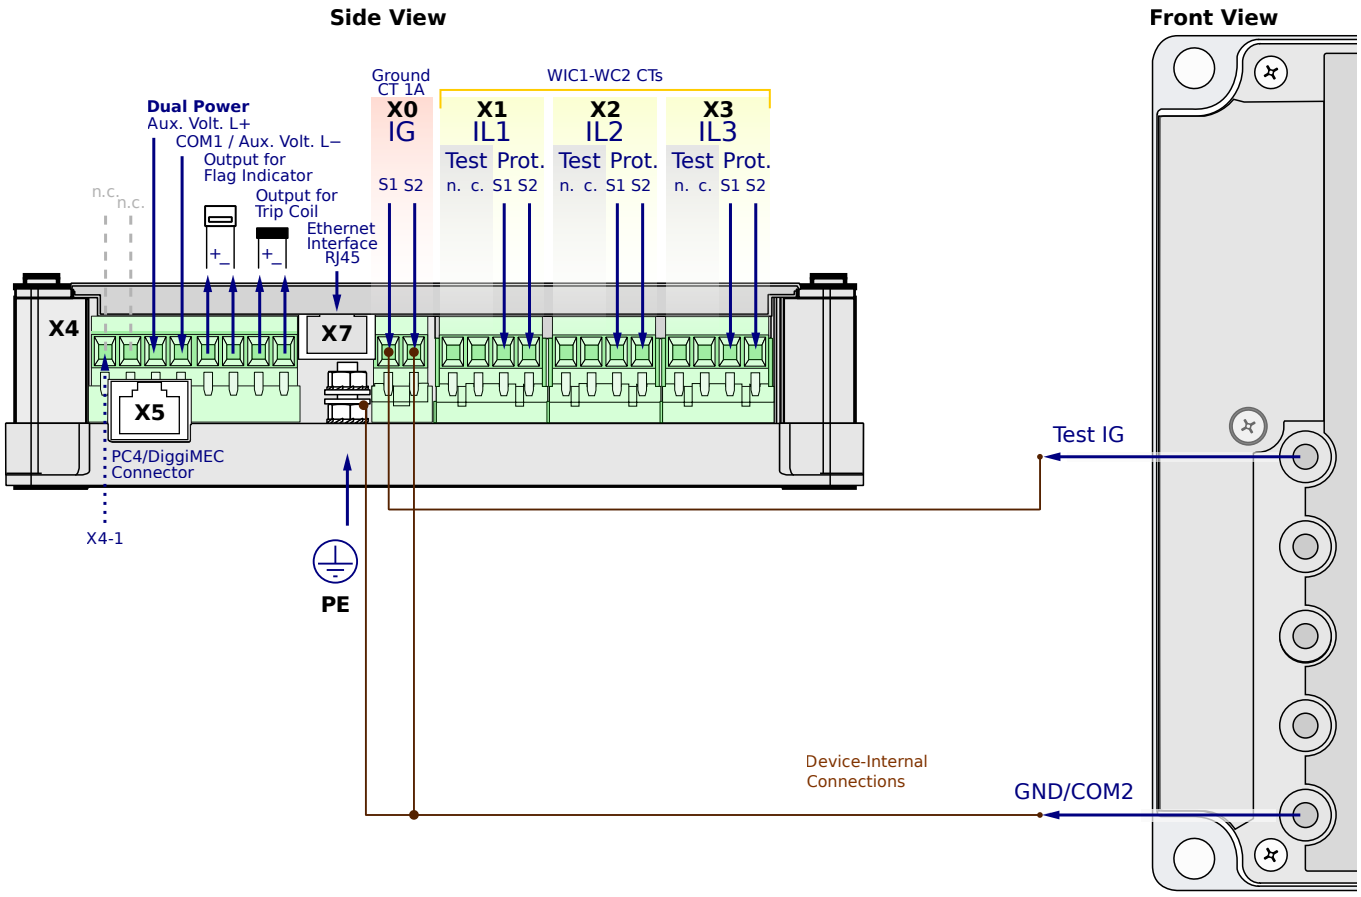


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2AL0

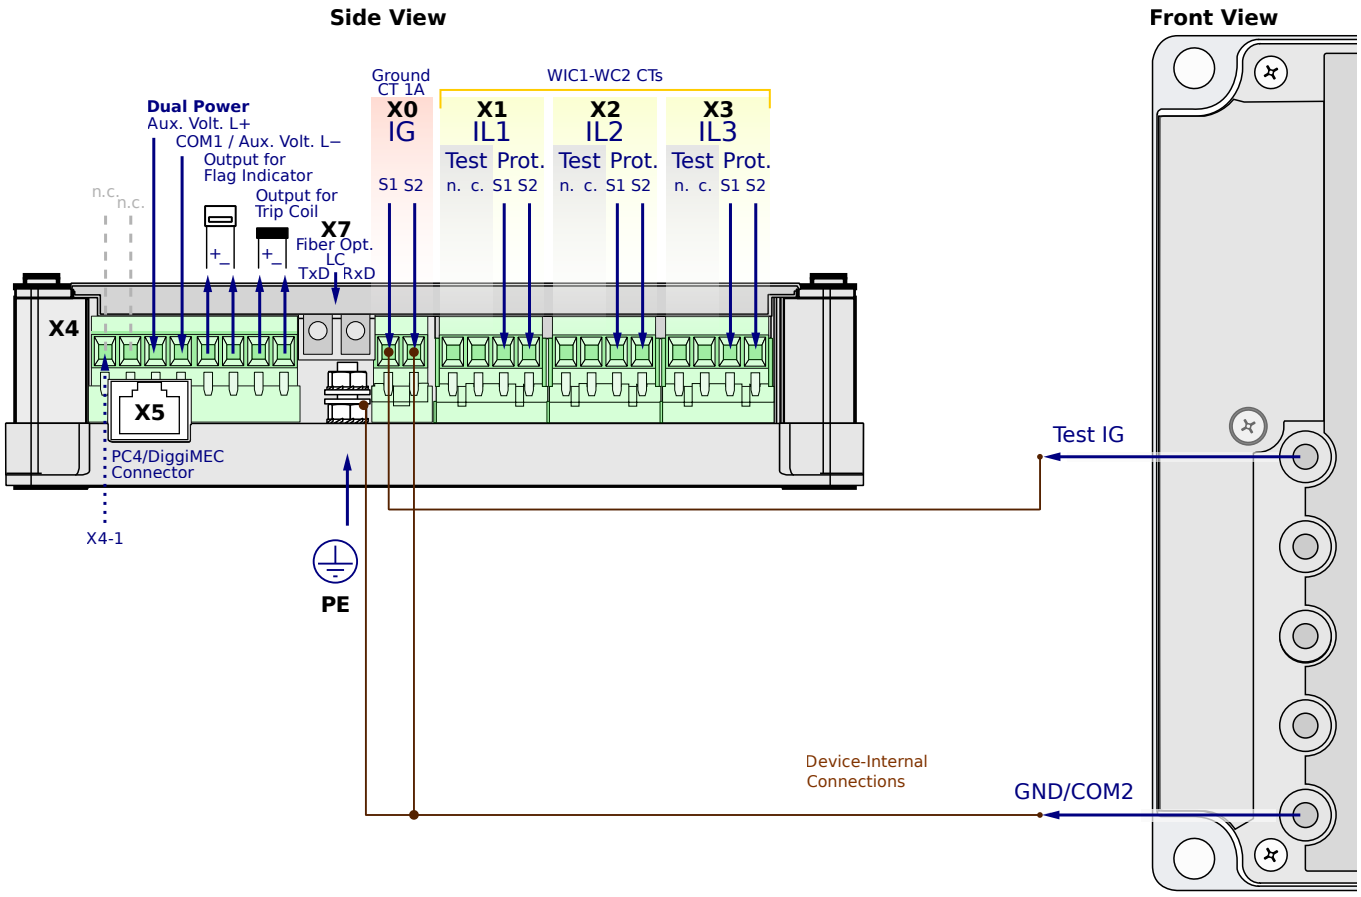


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2ALH

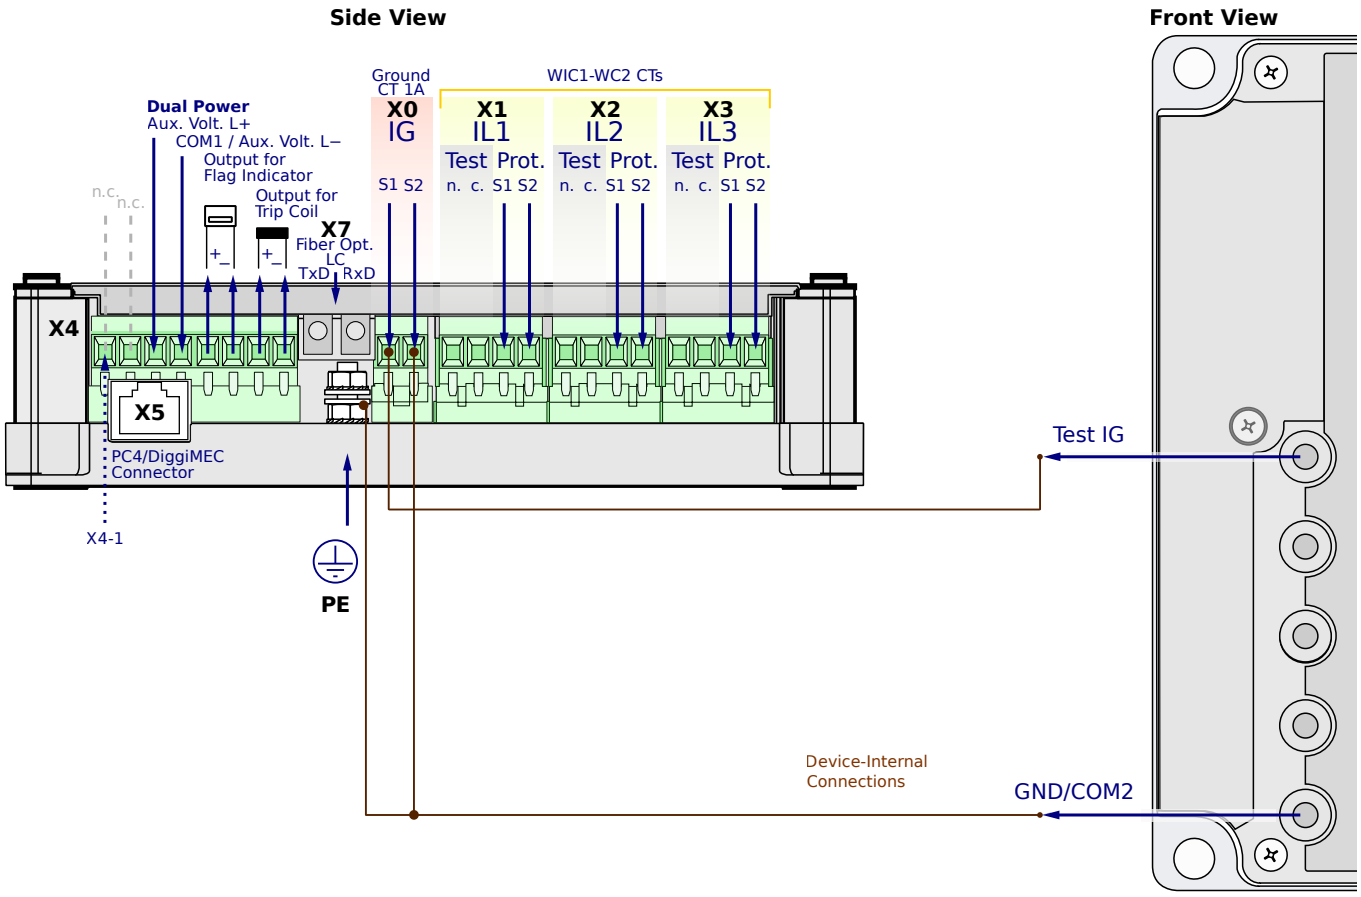


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2PA0

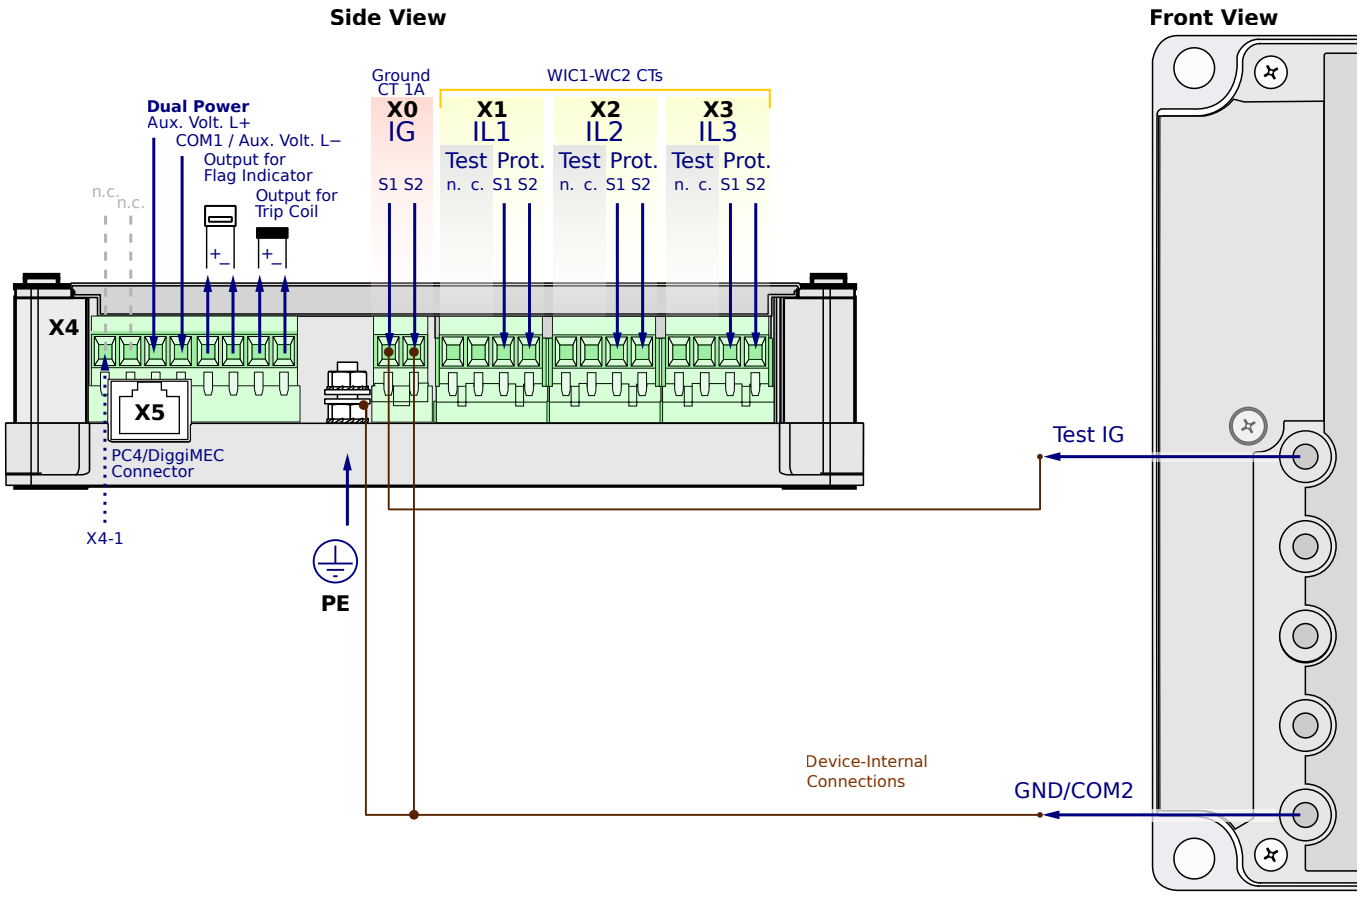


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2PAH

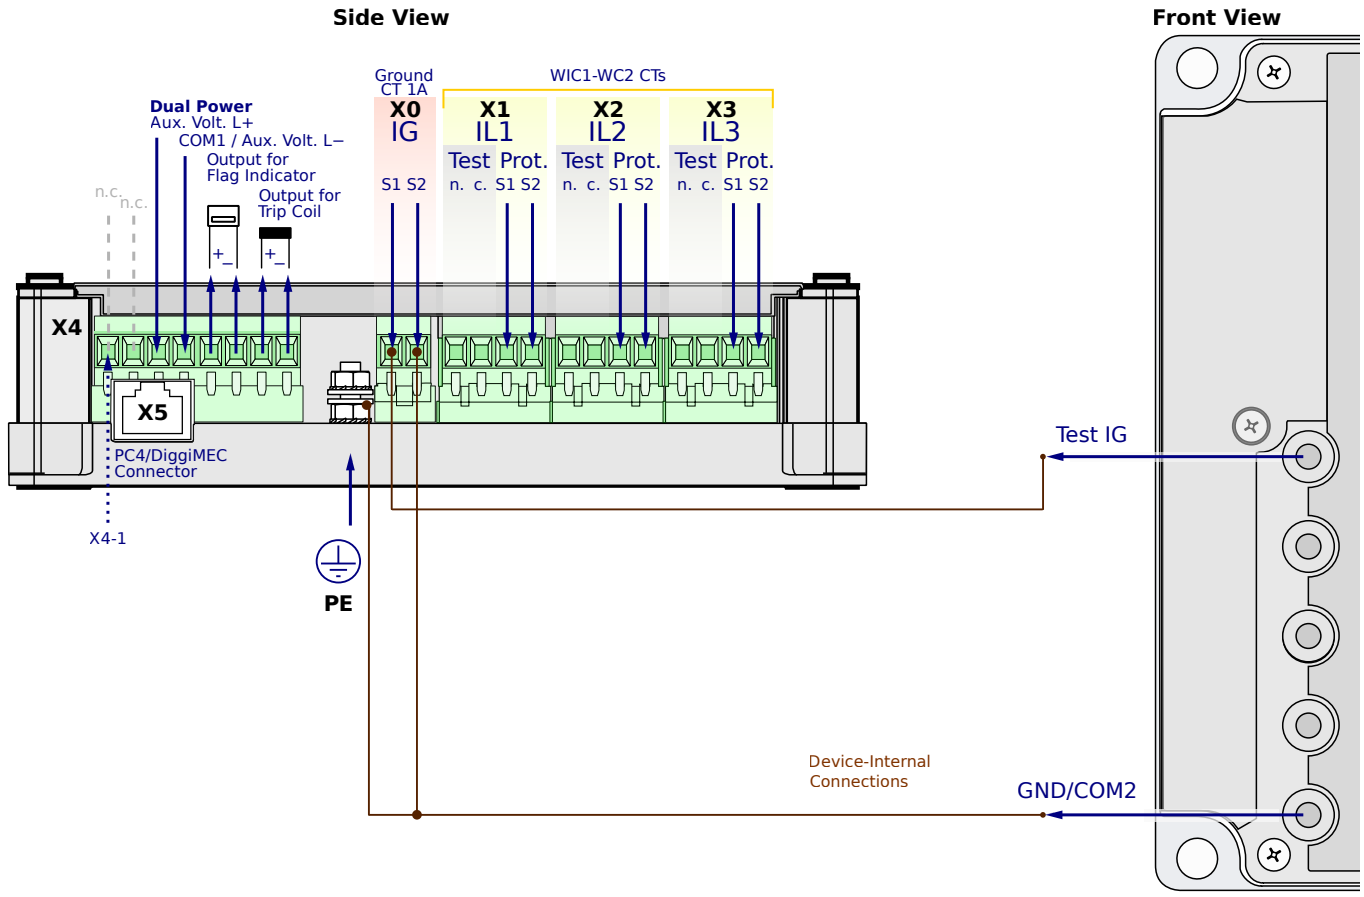


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NM2PB0

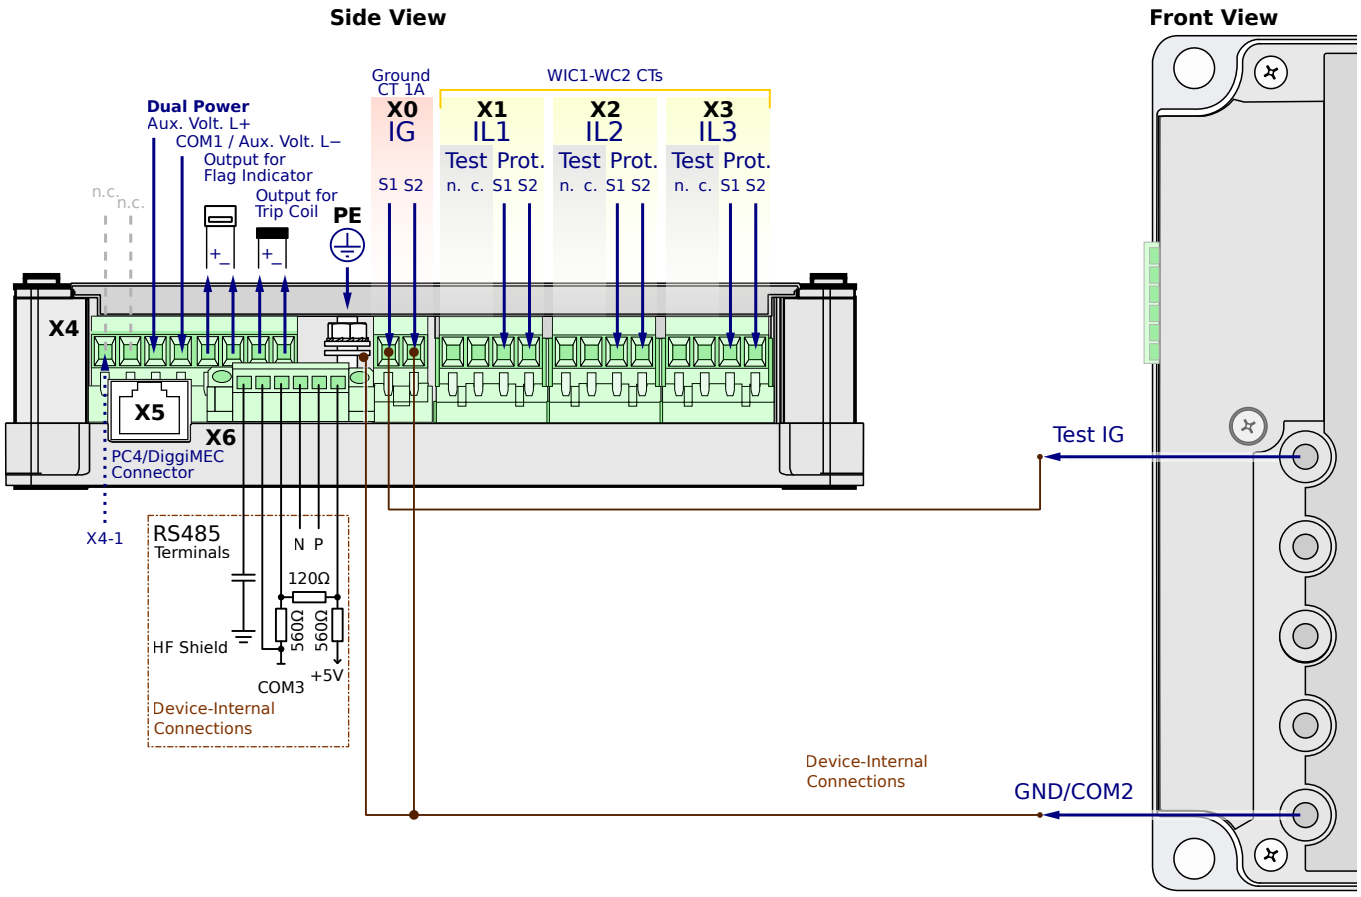


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2PBH

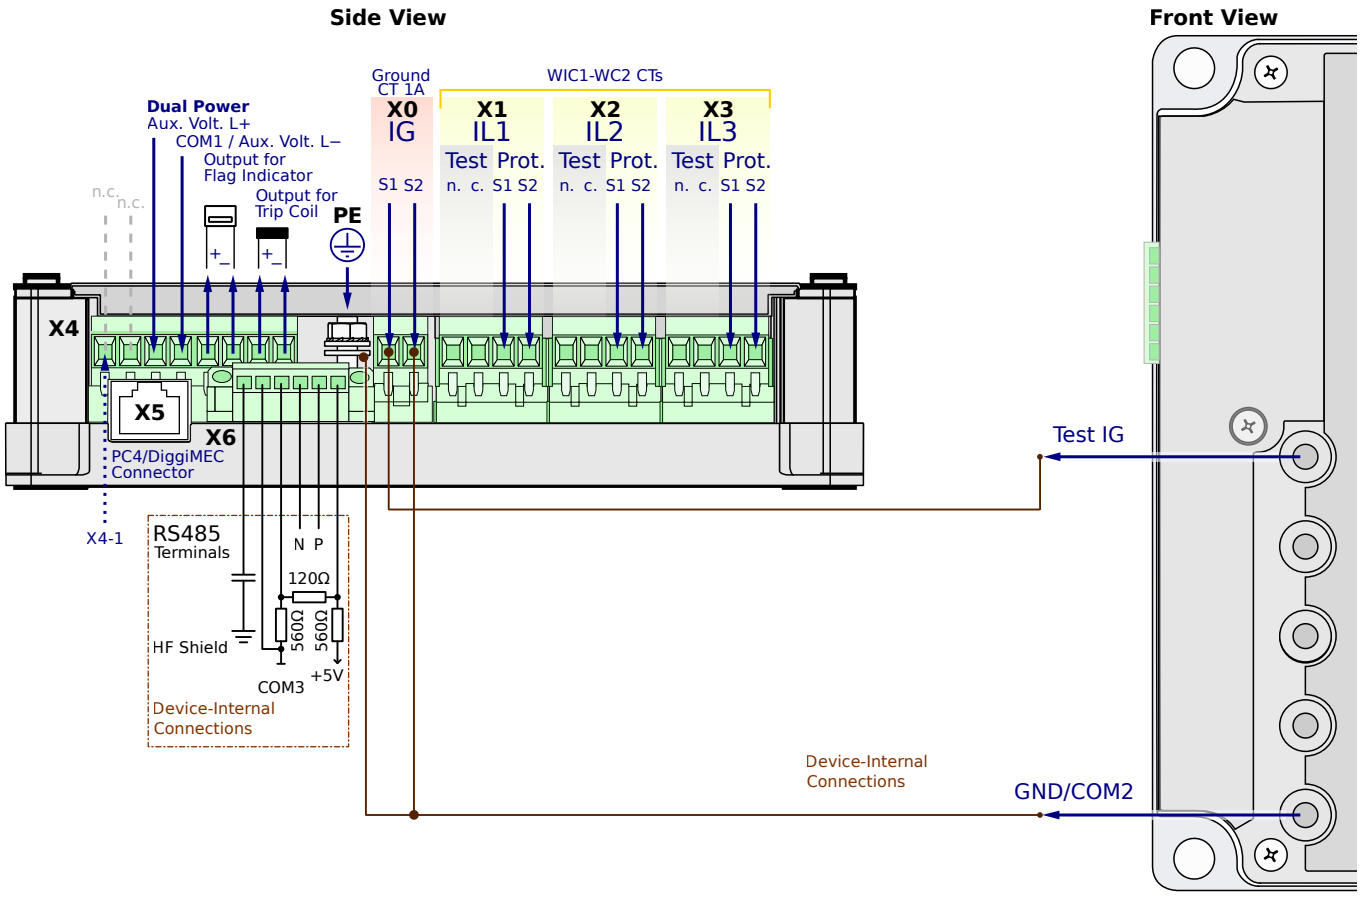


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NM2PC0

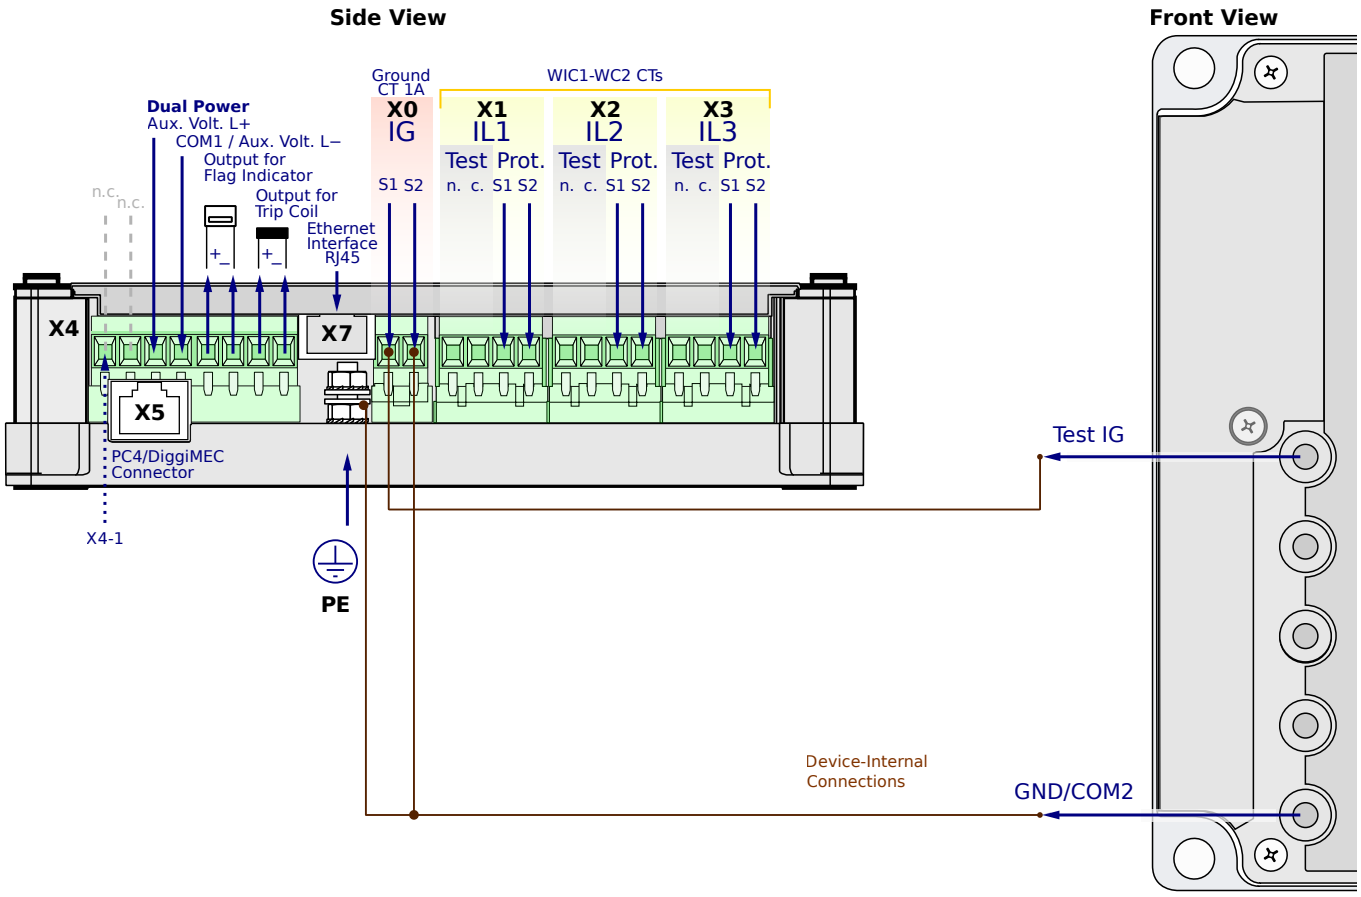


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2PCH

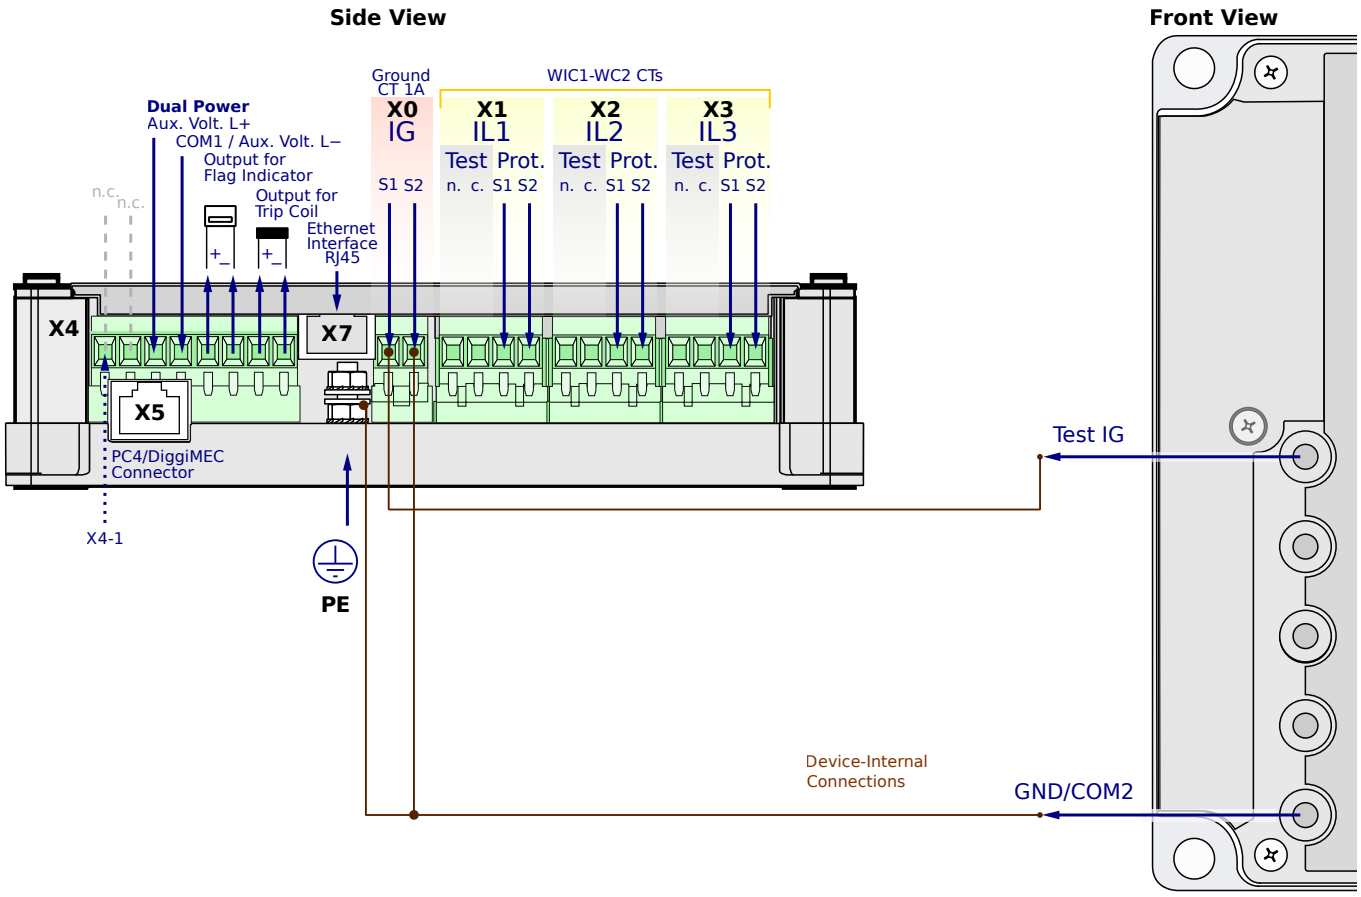


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NM2PL0

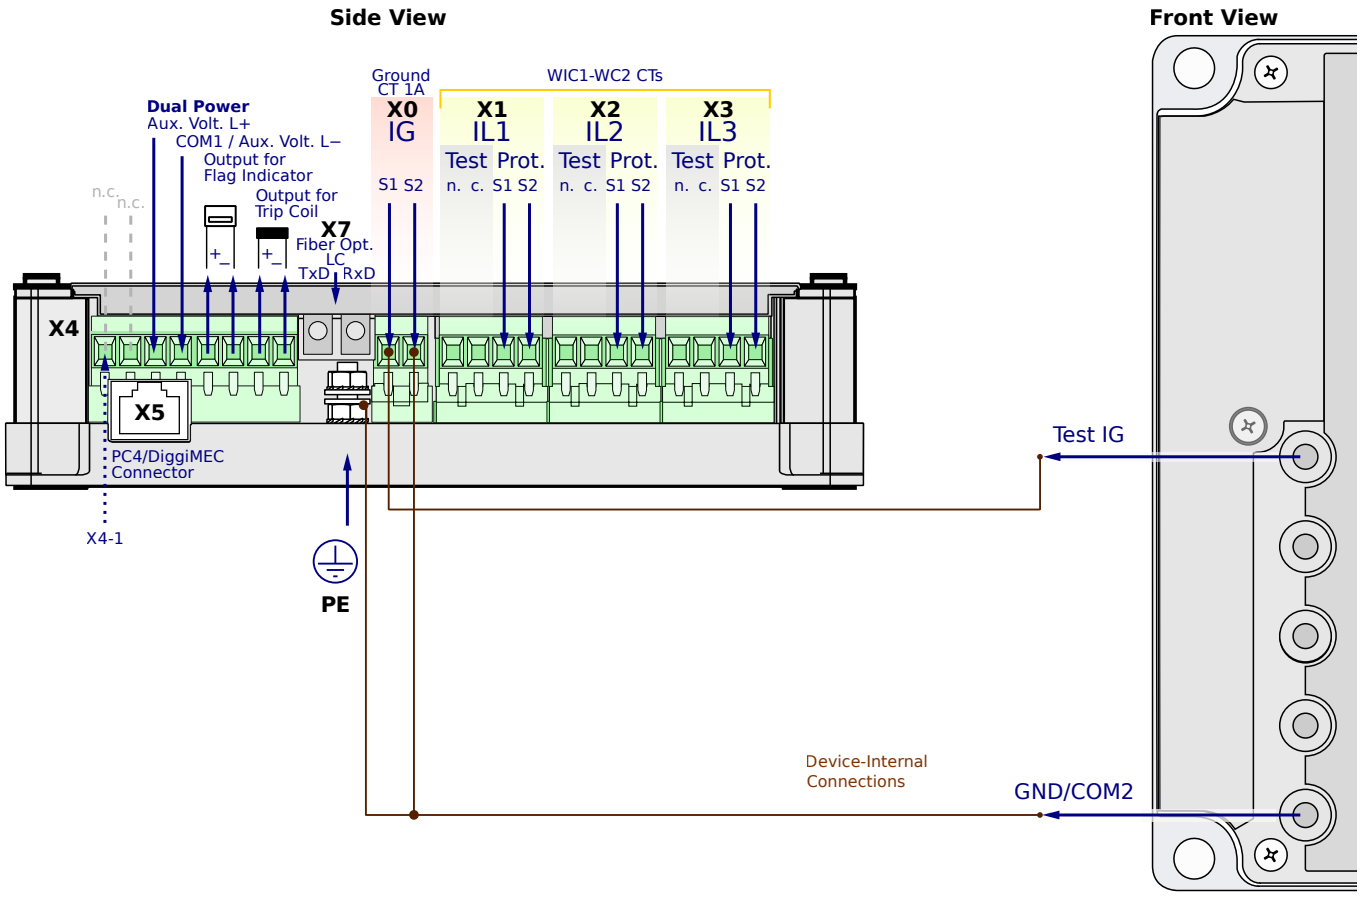


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NM2PLH

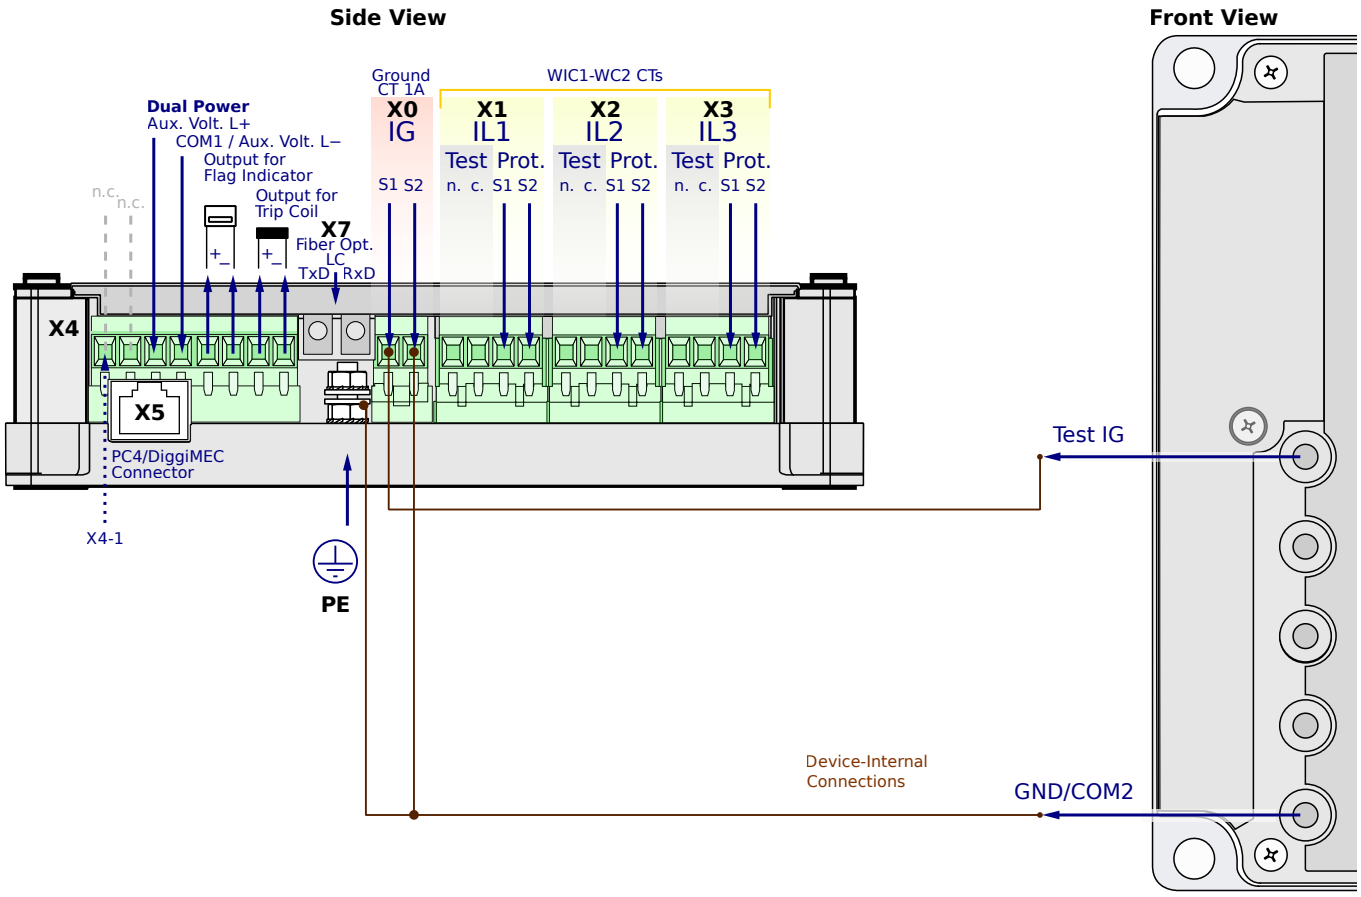


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0SA0

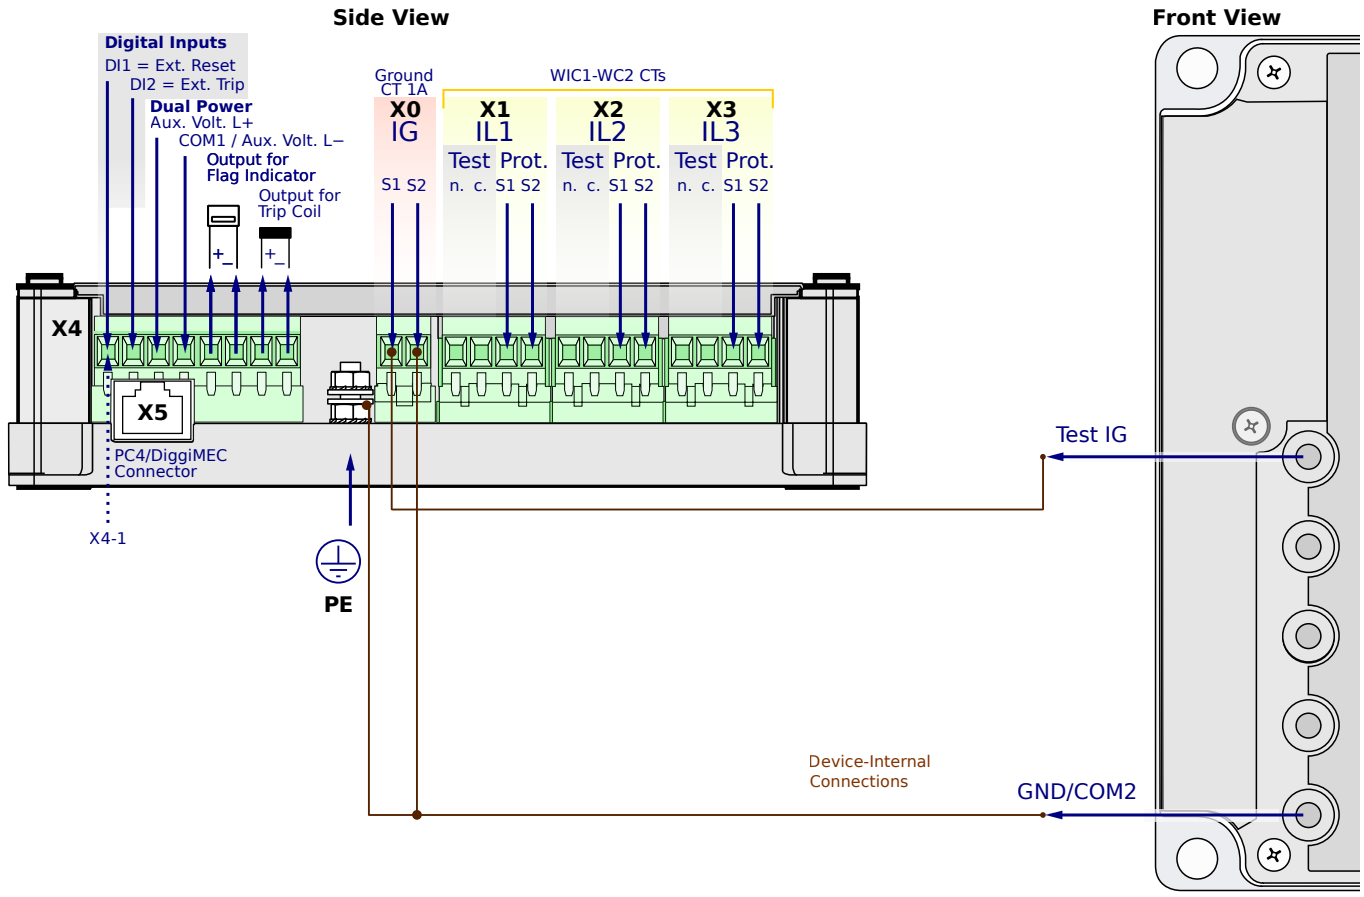


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0SAH

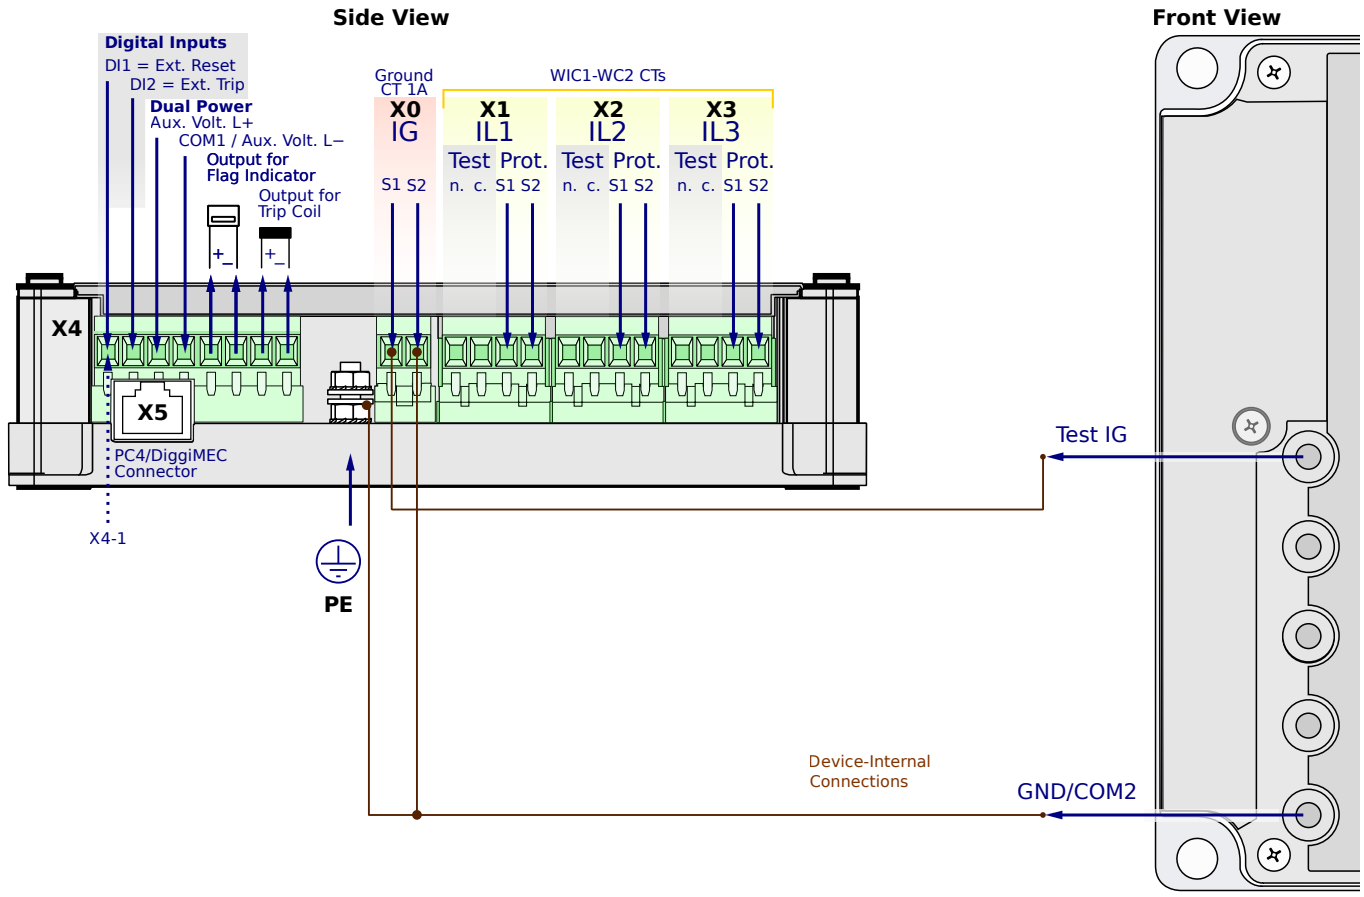


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0SB0

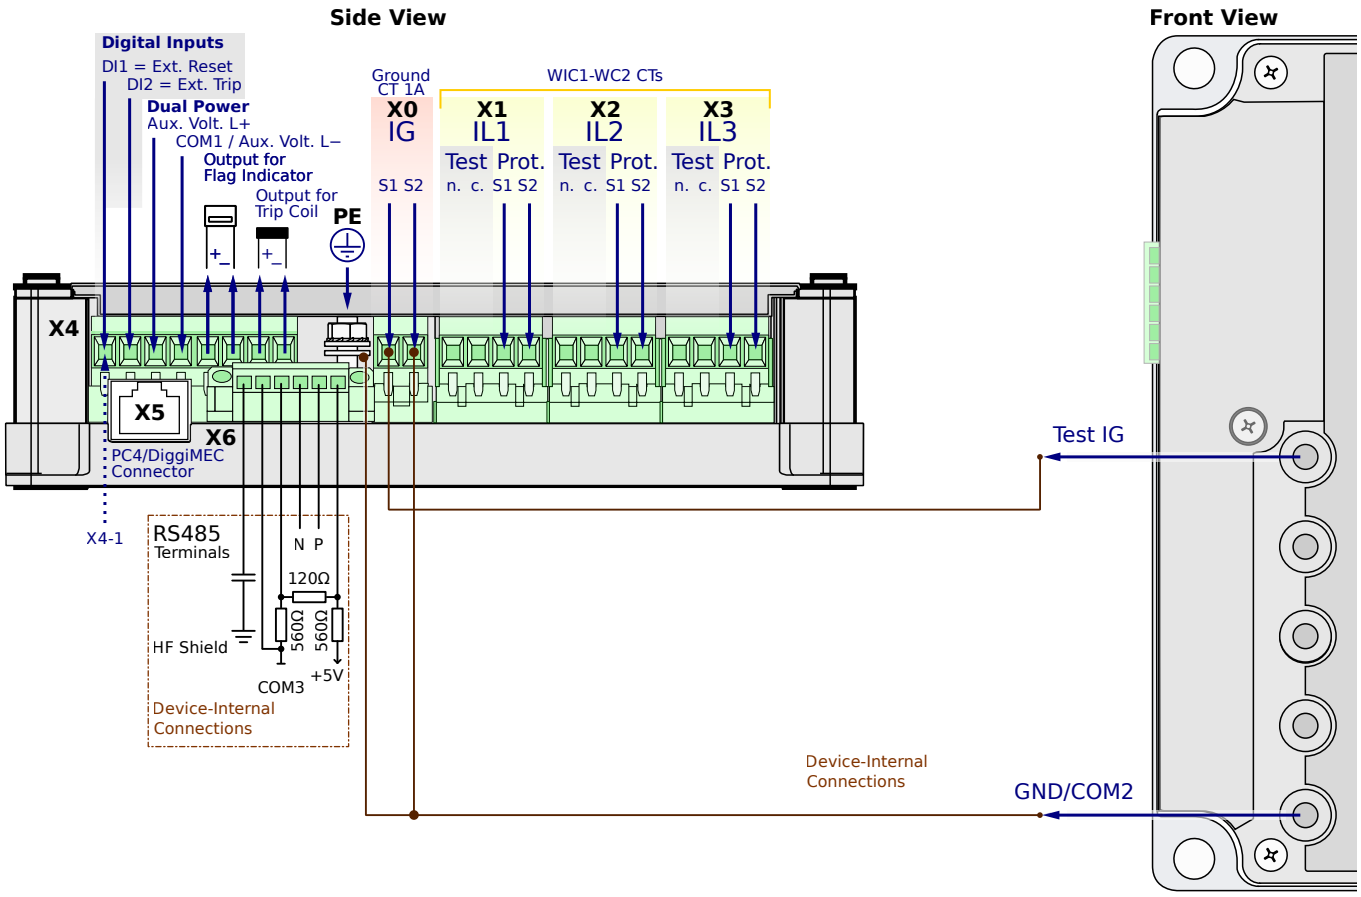


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0SBH

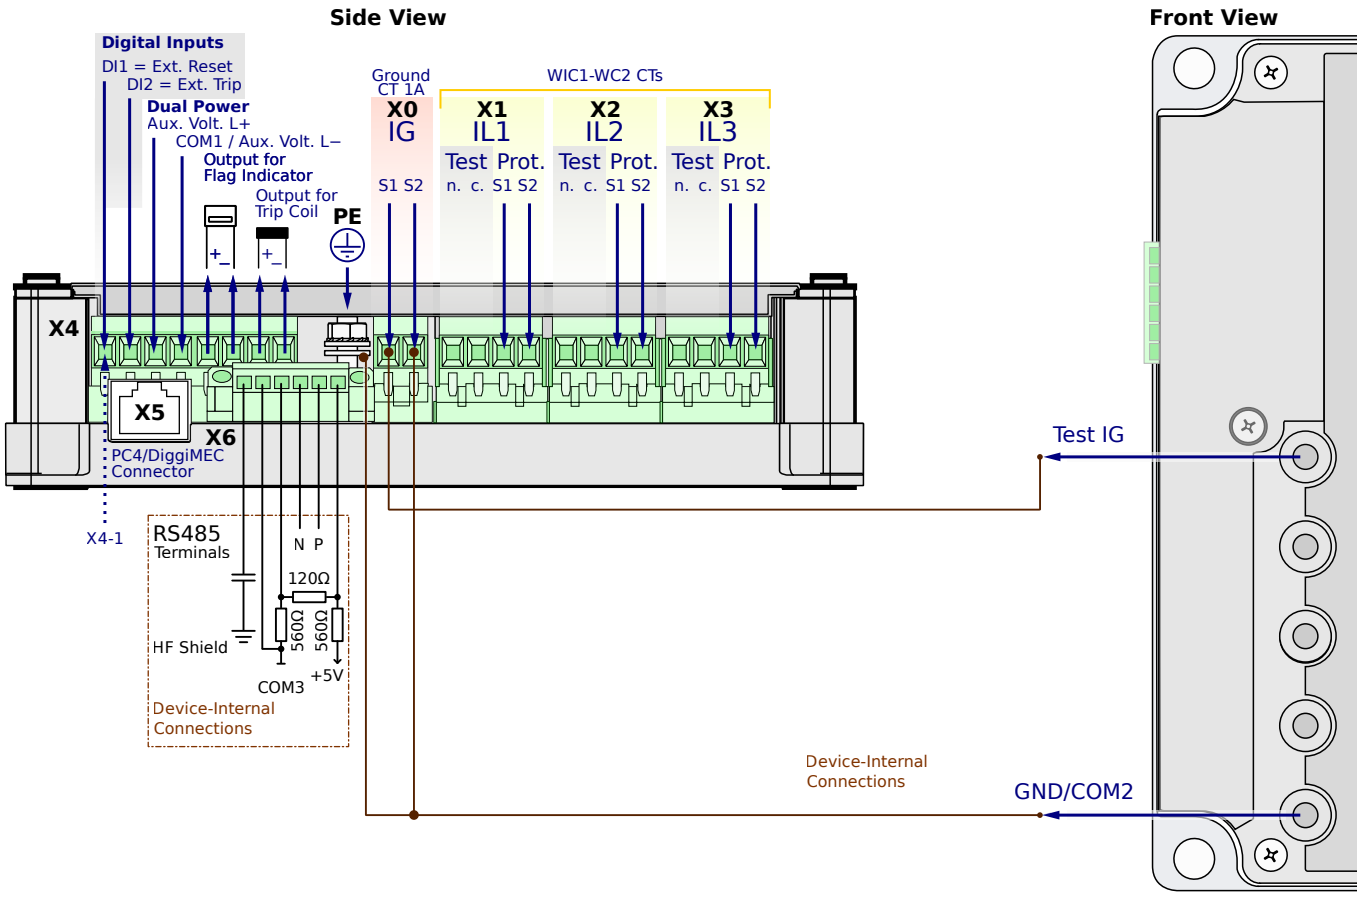


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0SC0

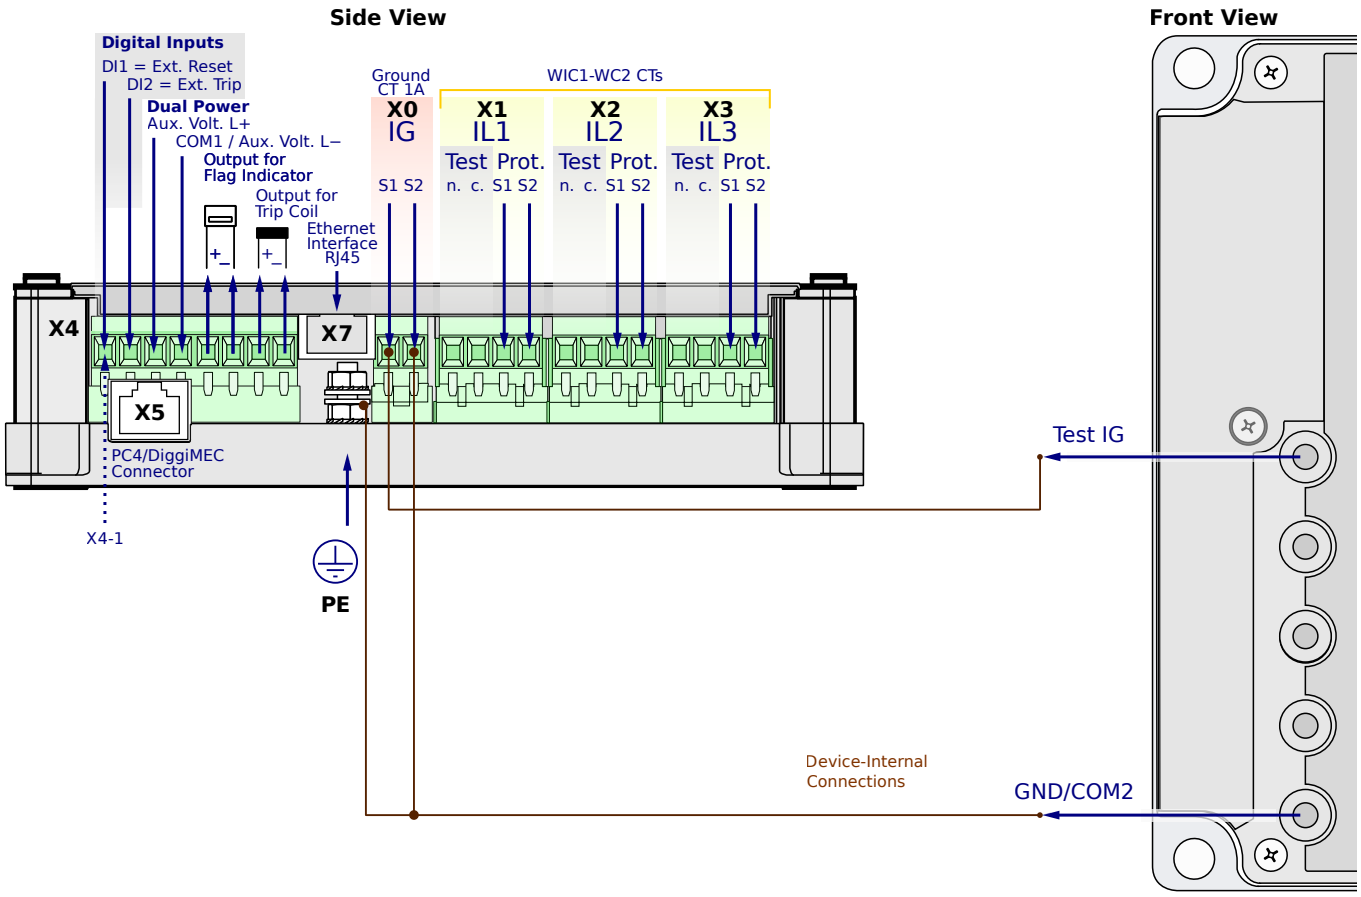


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0SCH

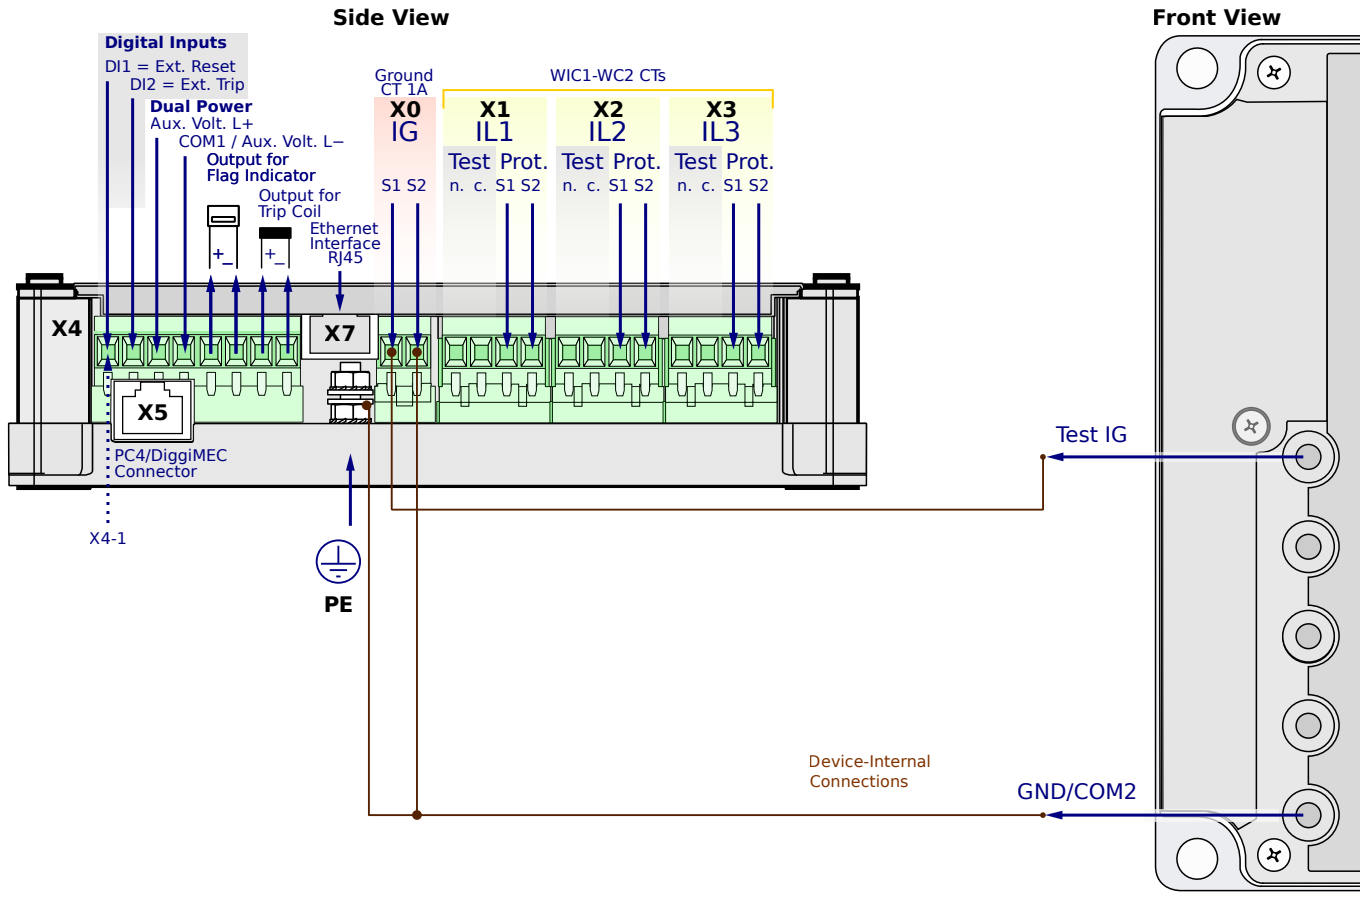


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0SL0

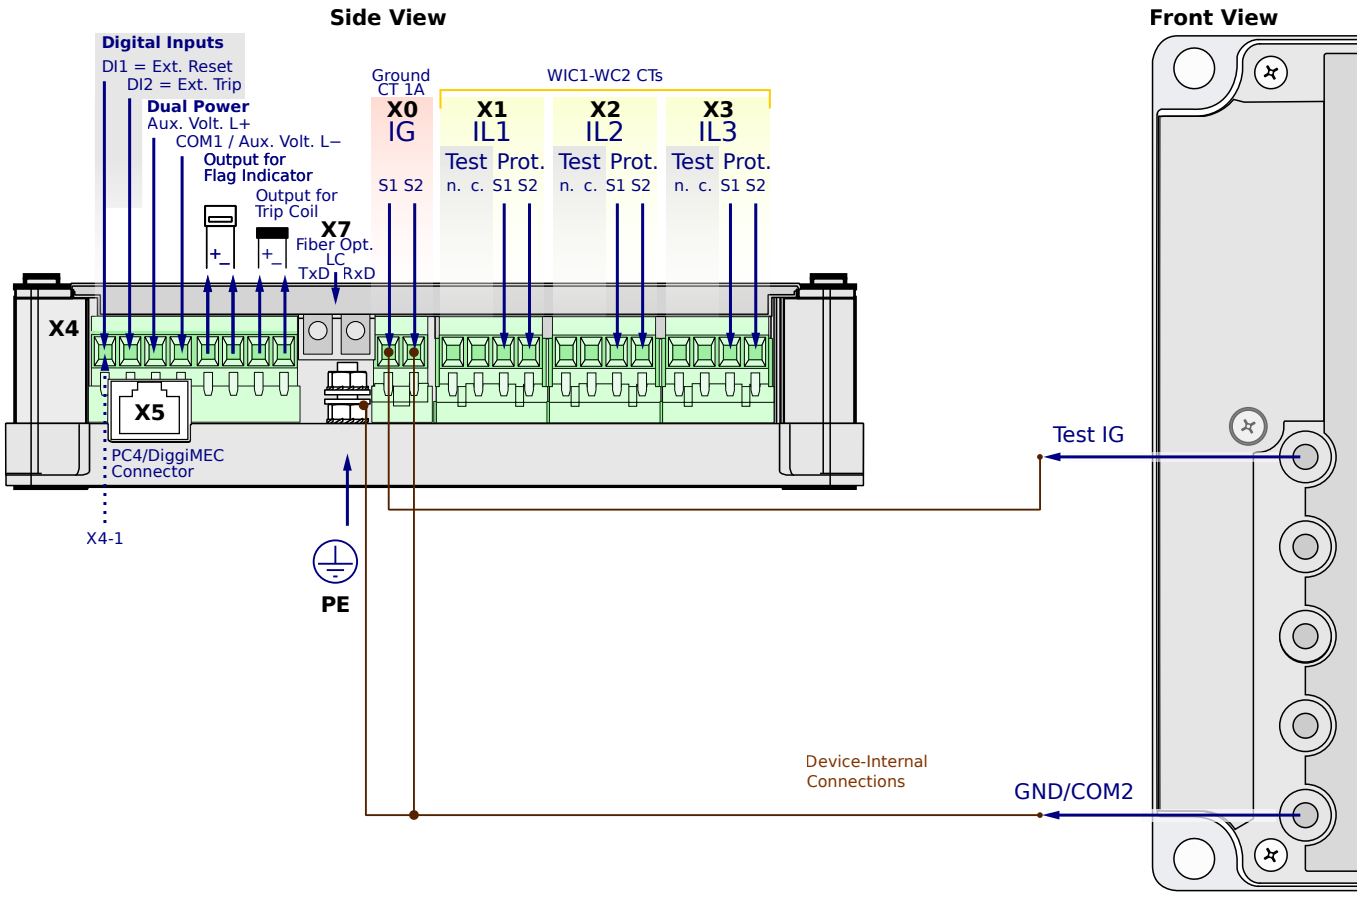


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0SLH

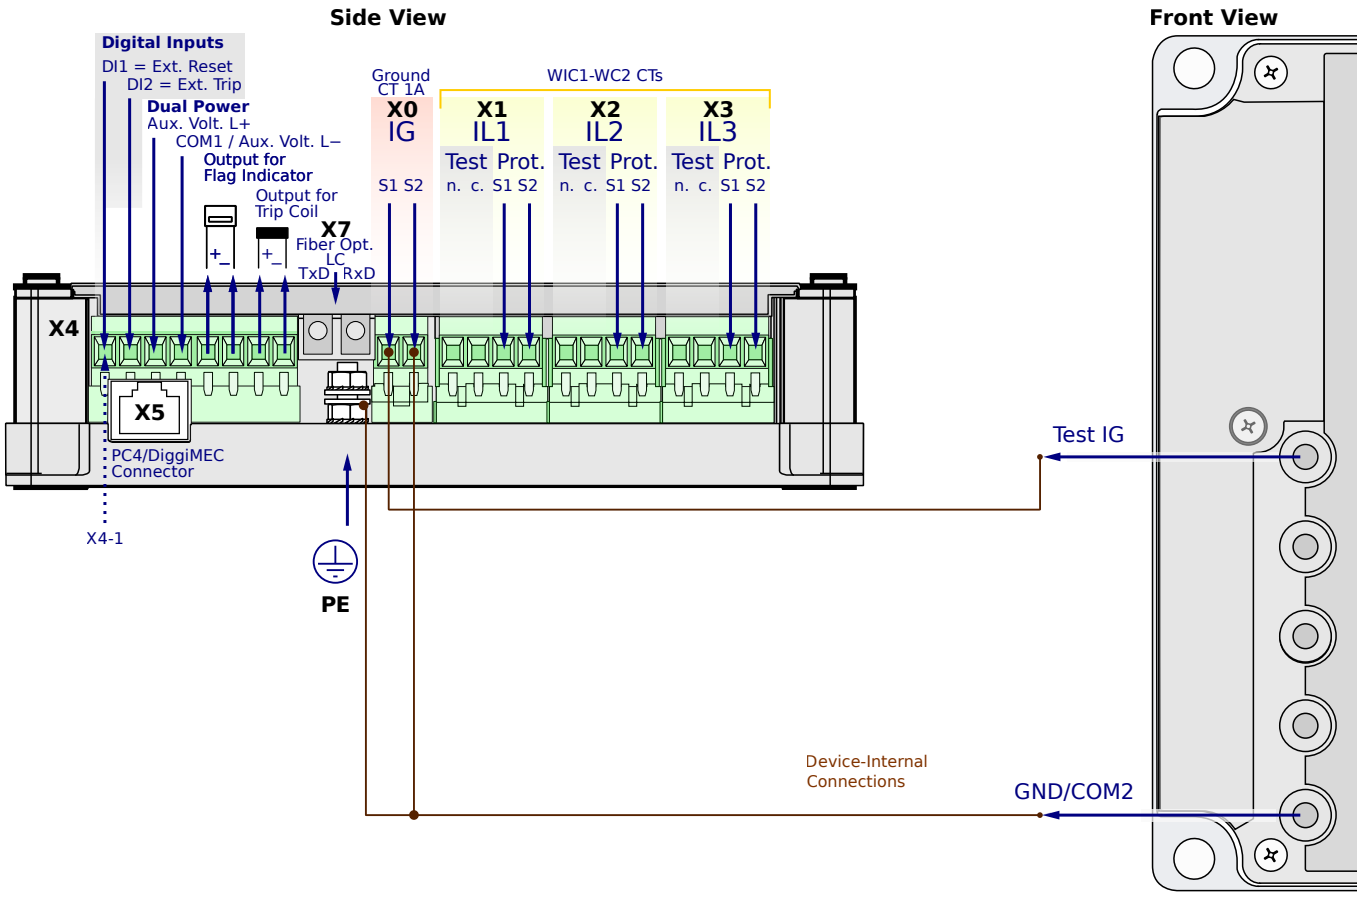


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0AA0

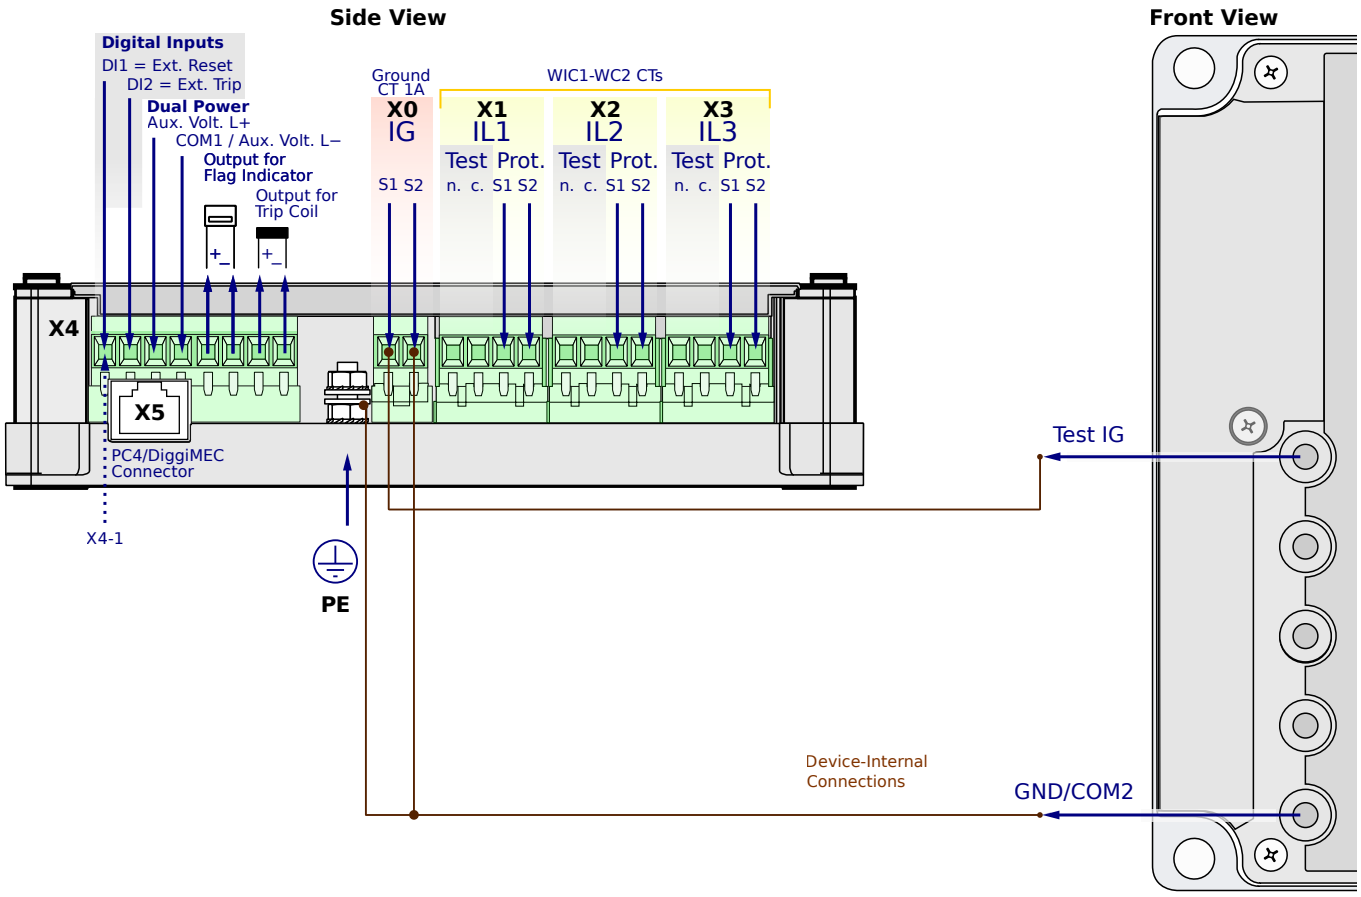


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0AAH

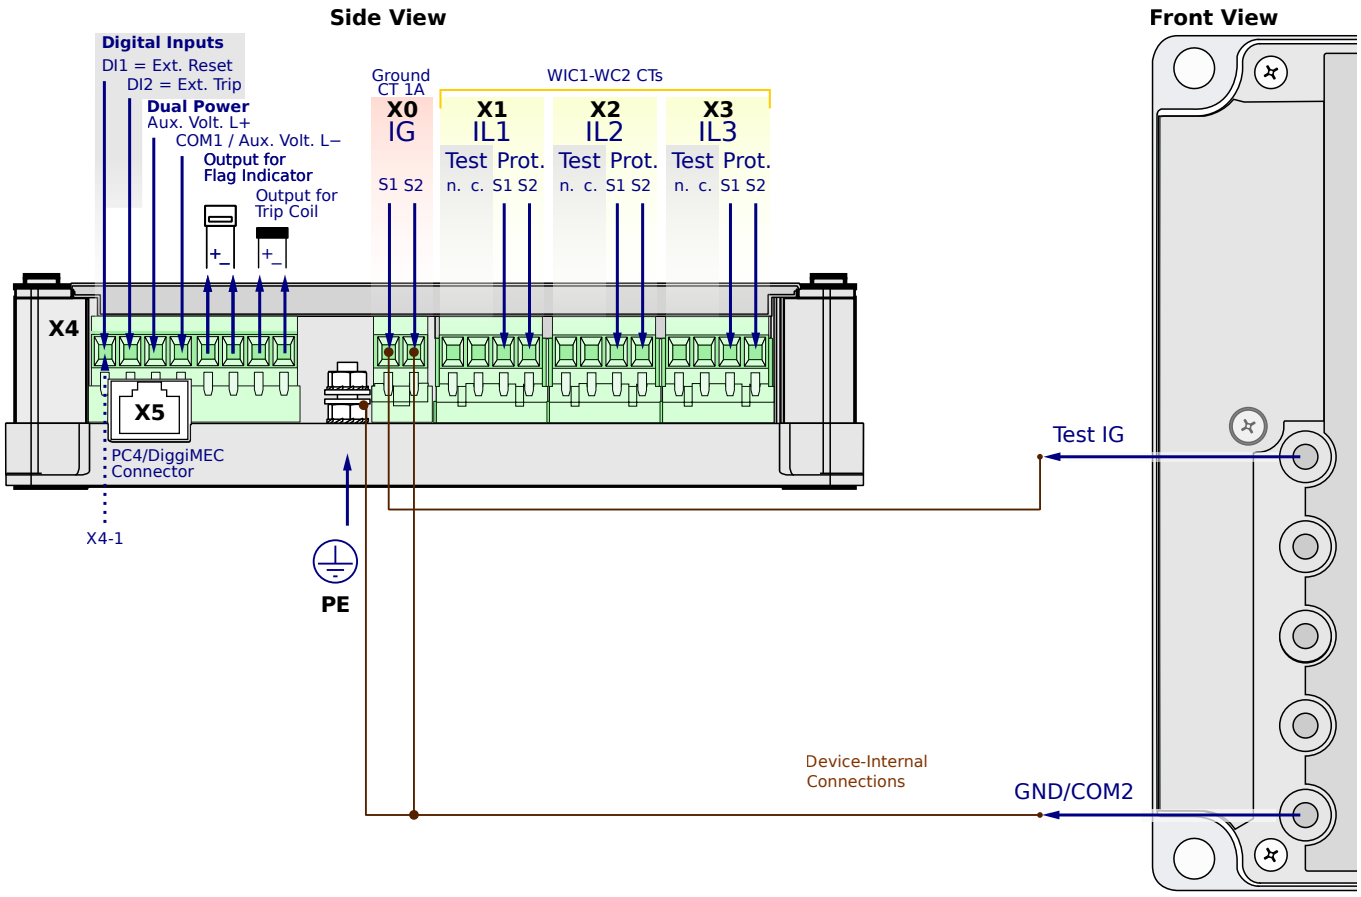


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0AB0

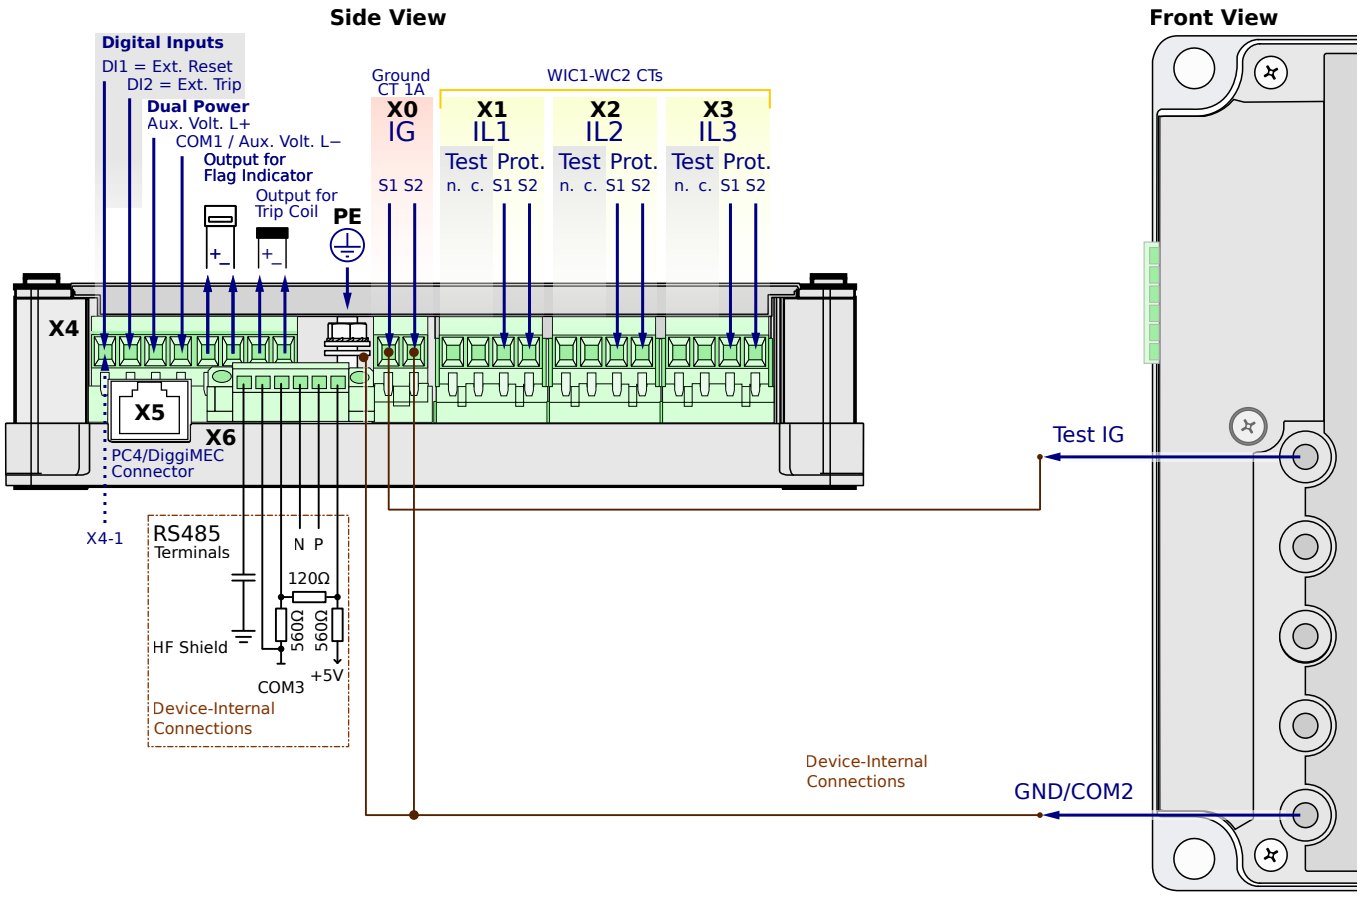


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0ABH

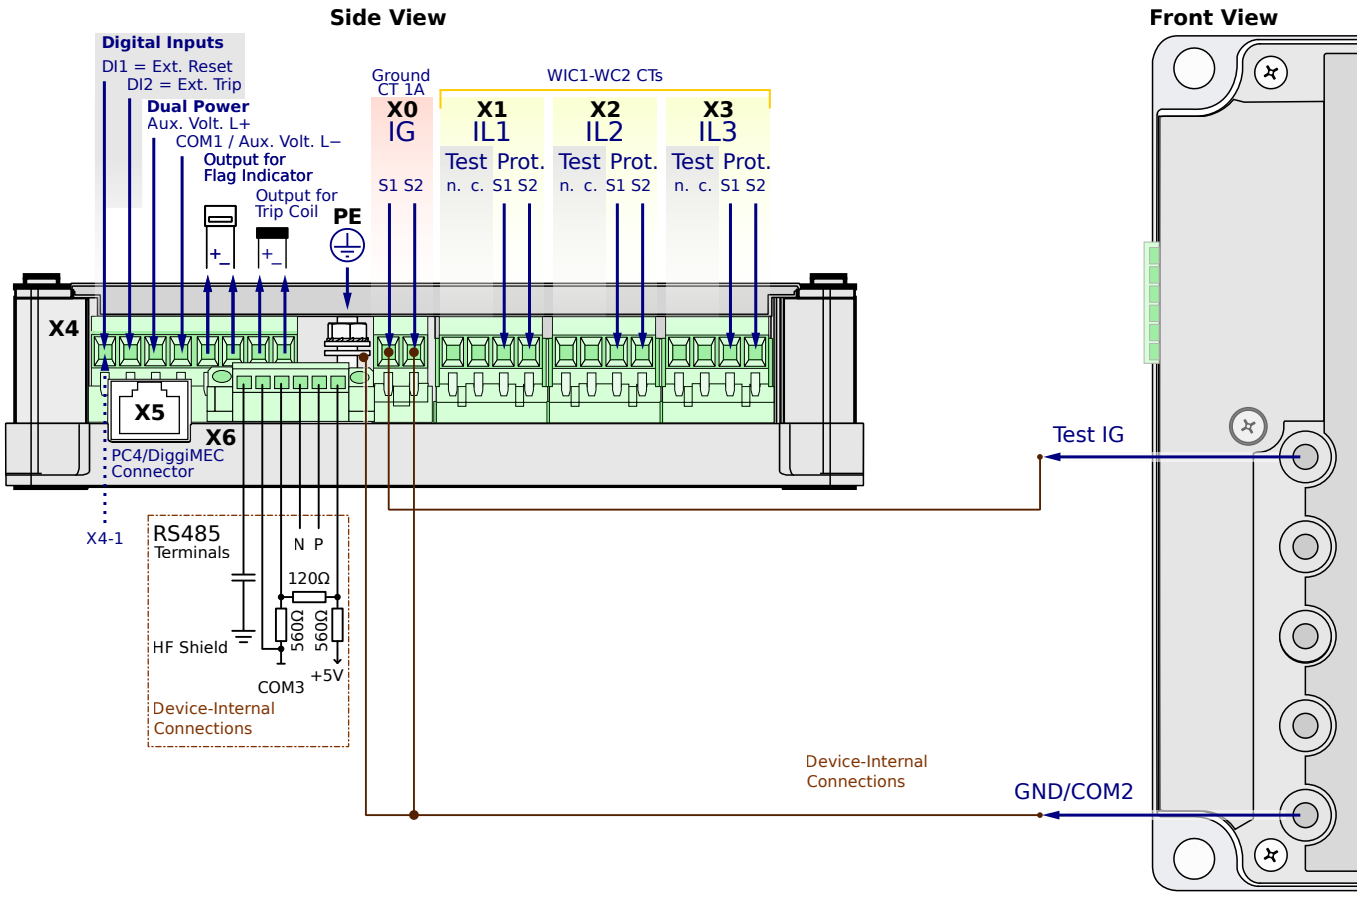


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0AC0

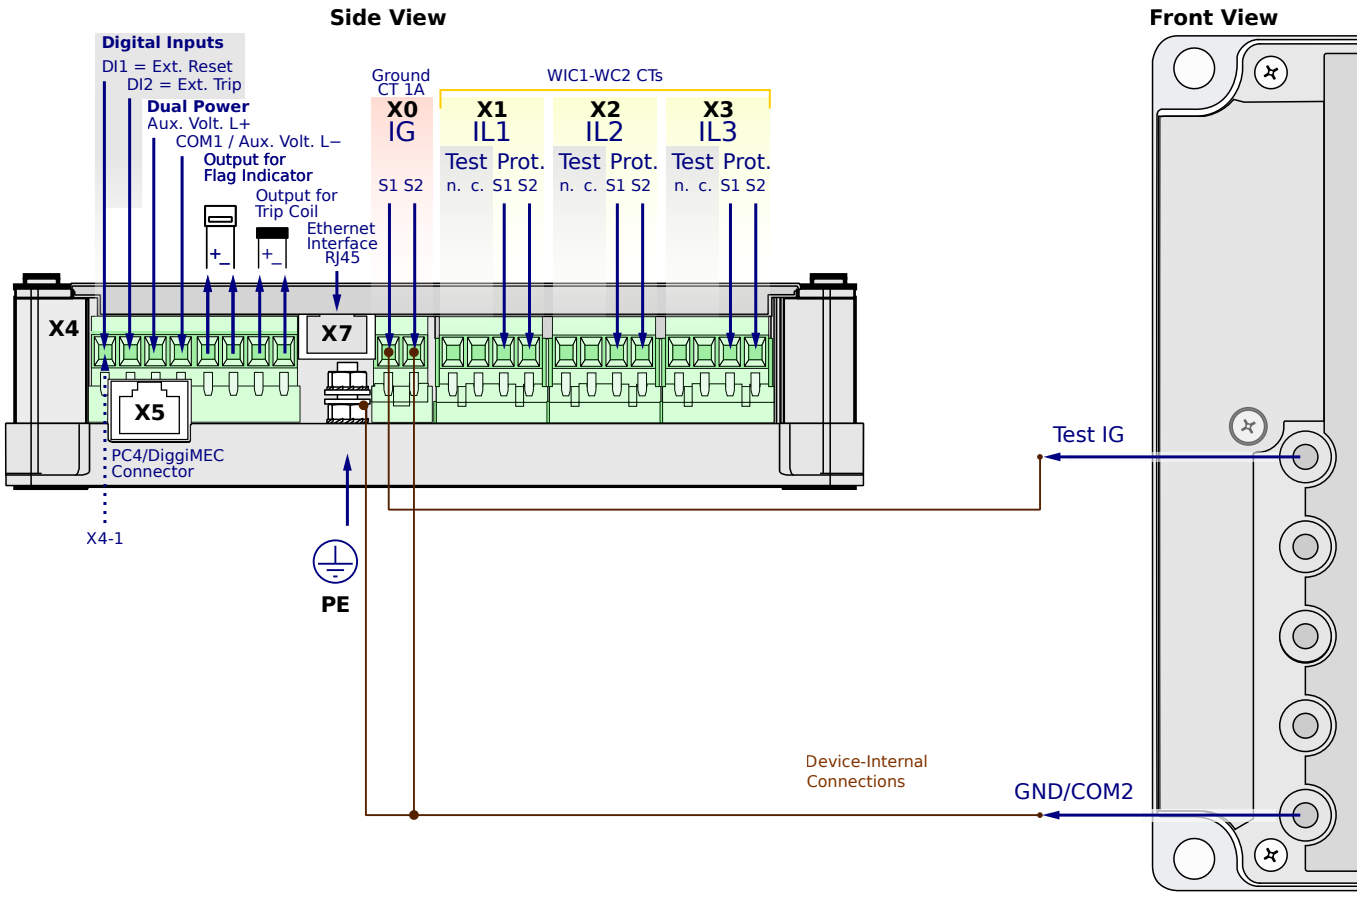


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0ACH

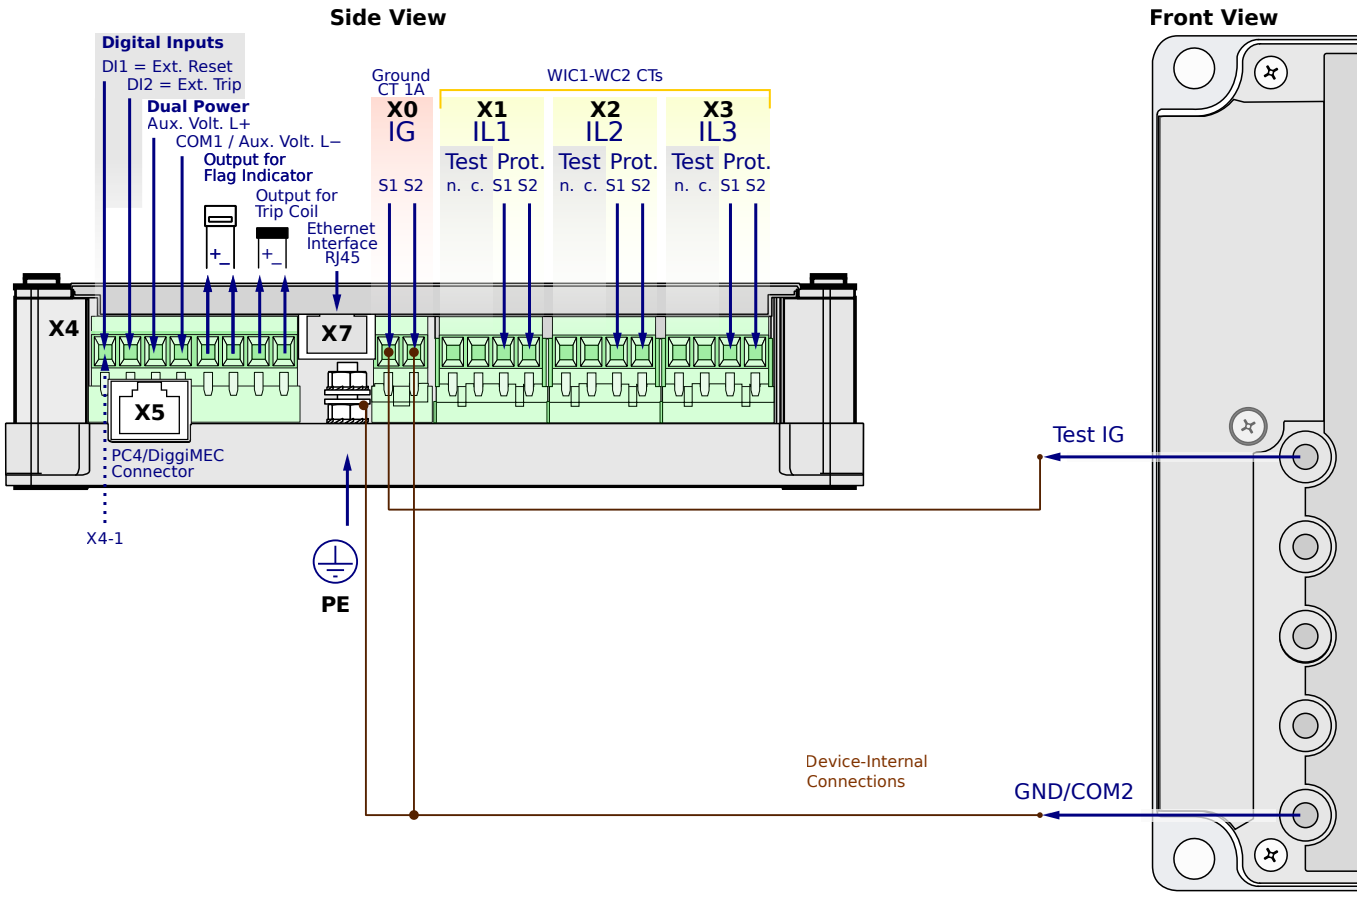


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0AL0

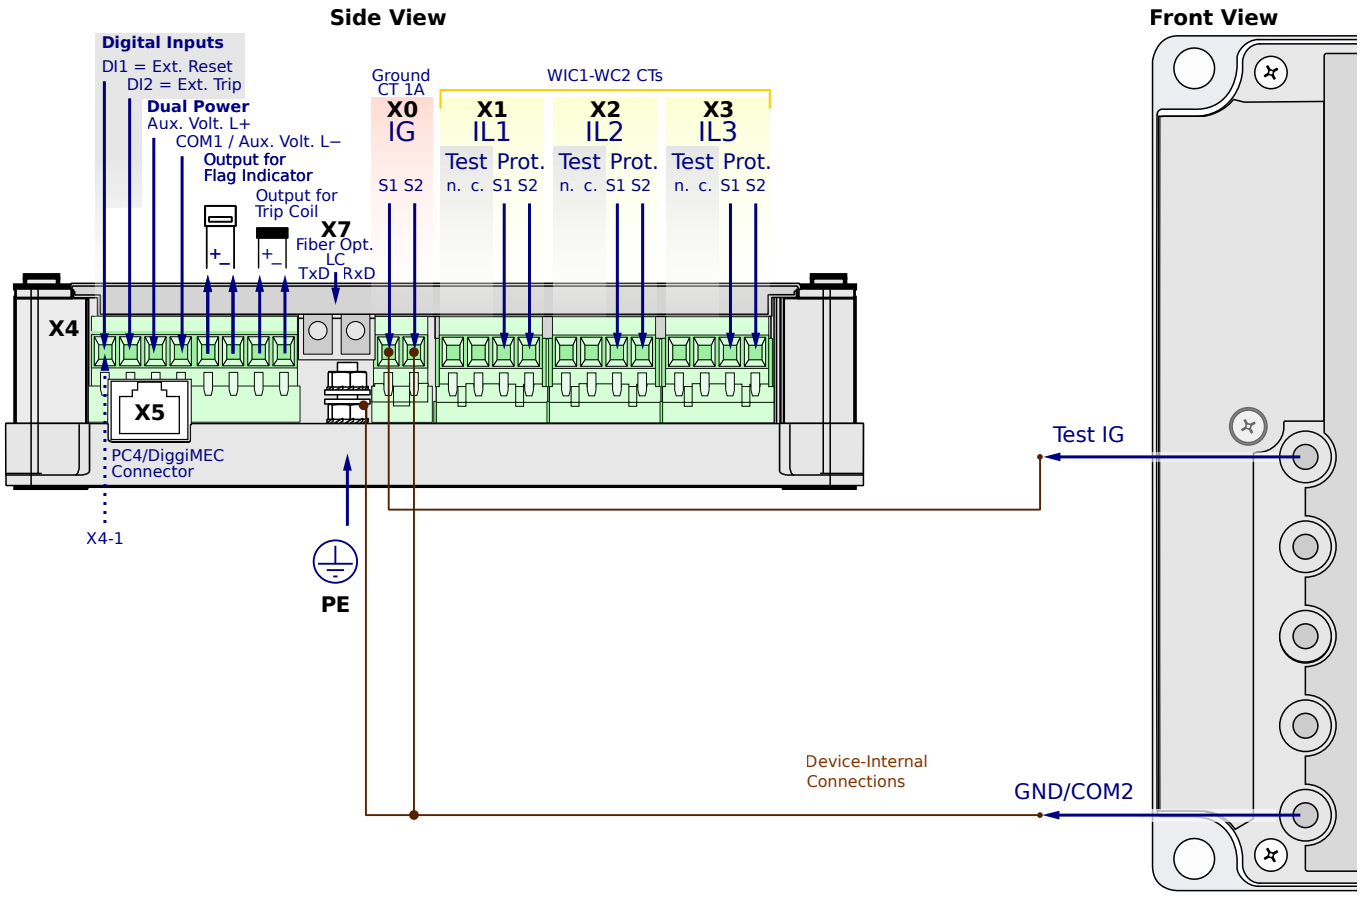


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0ALH

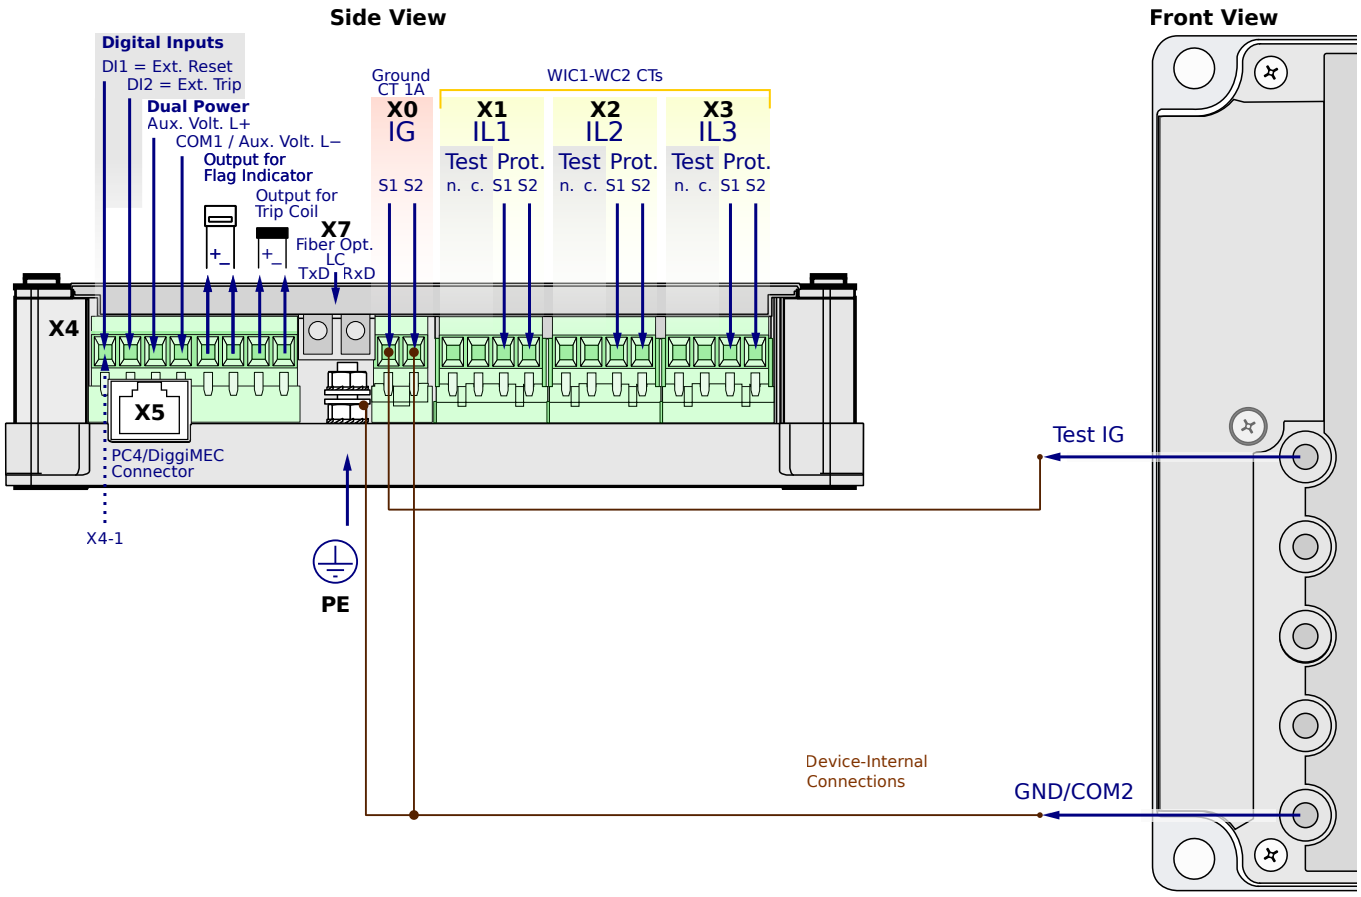


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0PA0

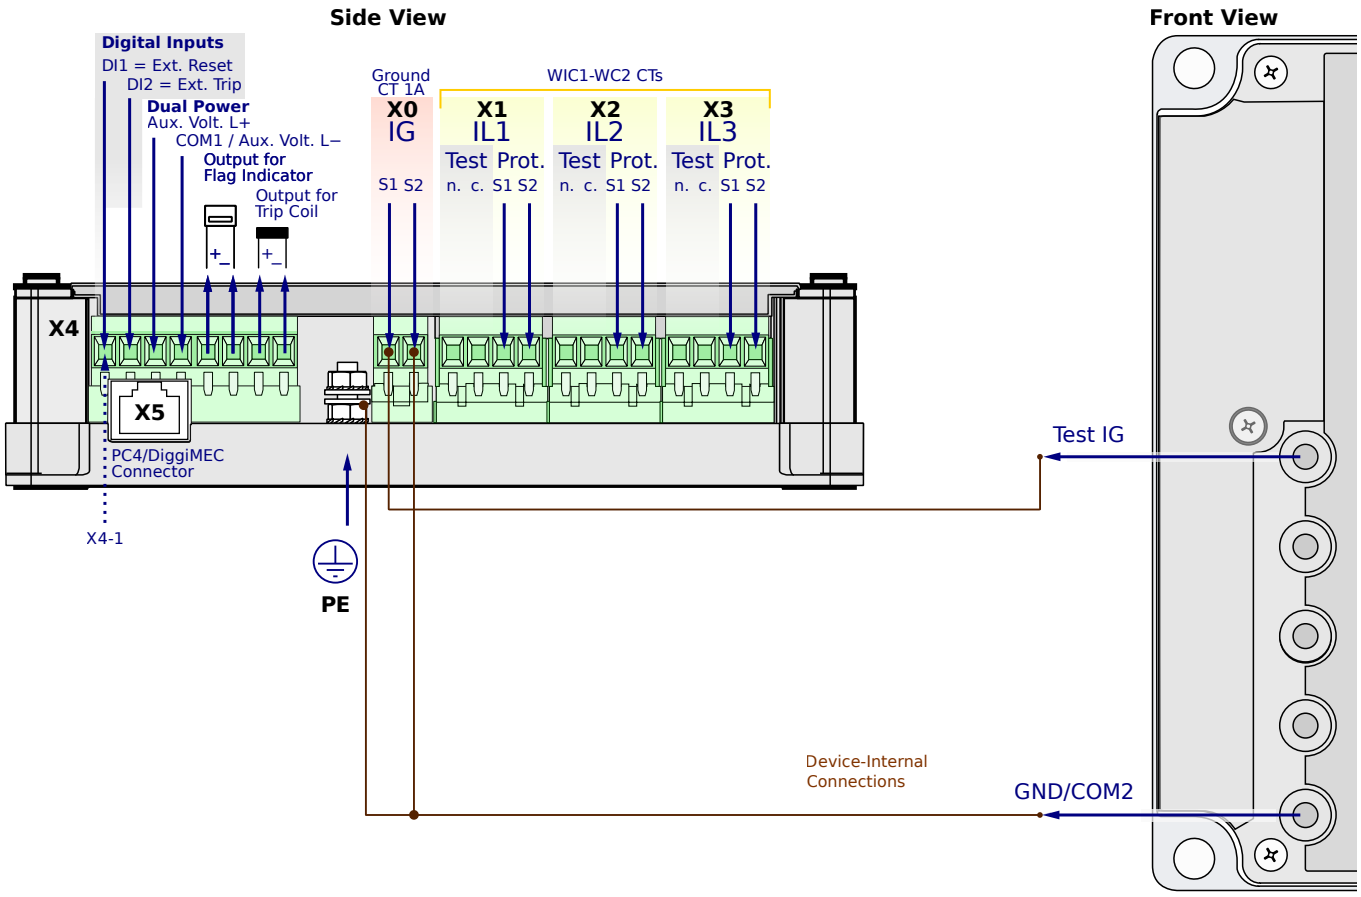


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0PAH

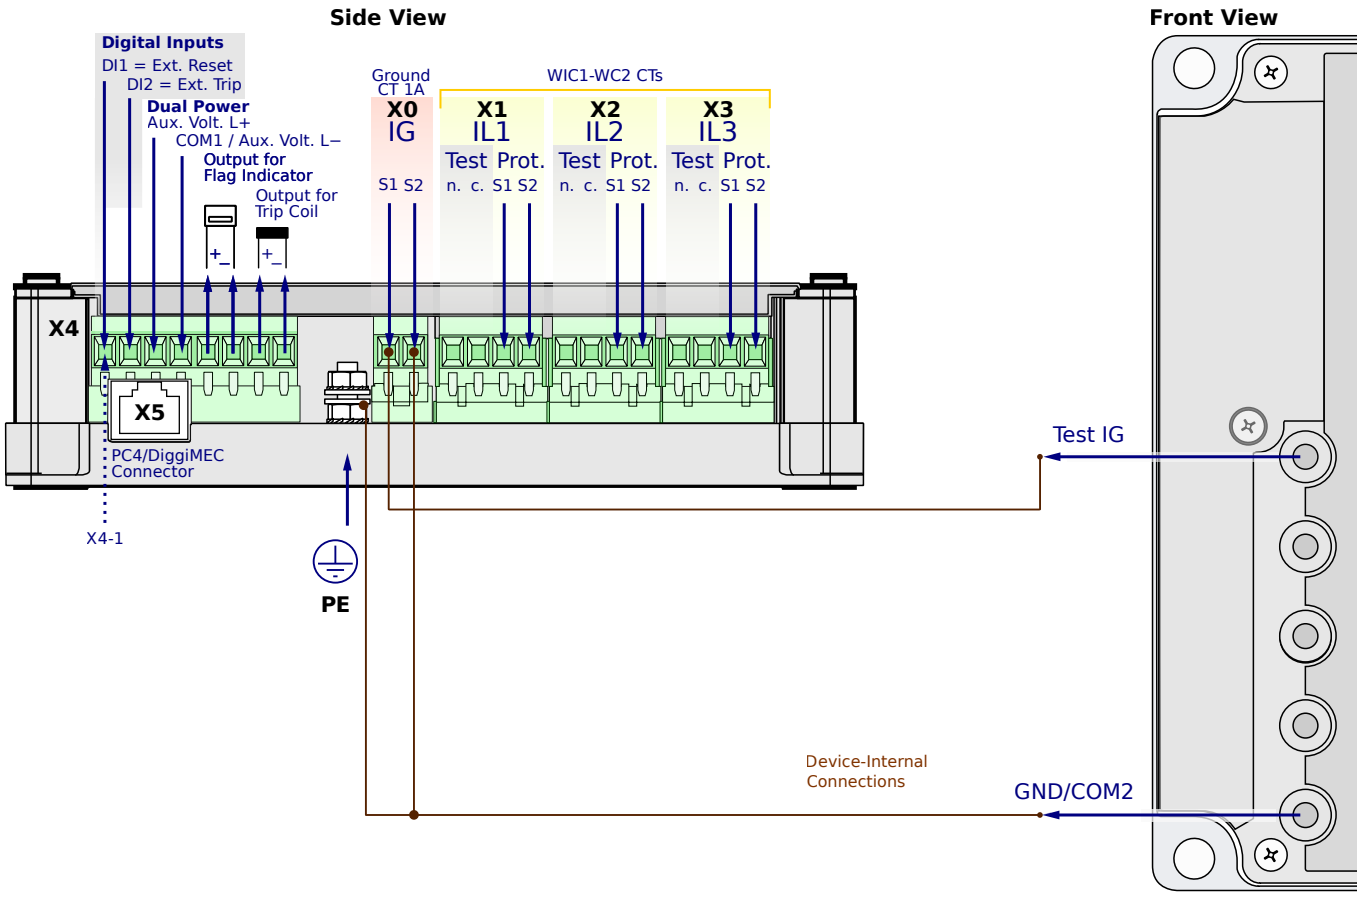


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG0PB0

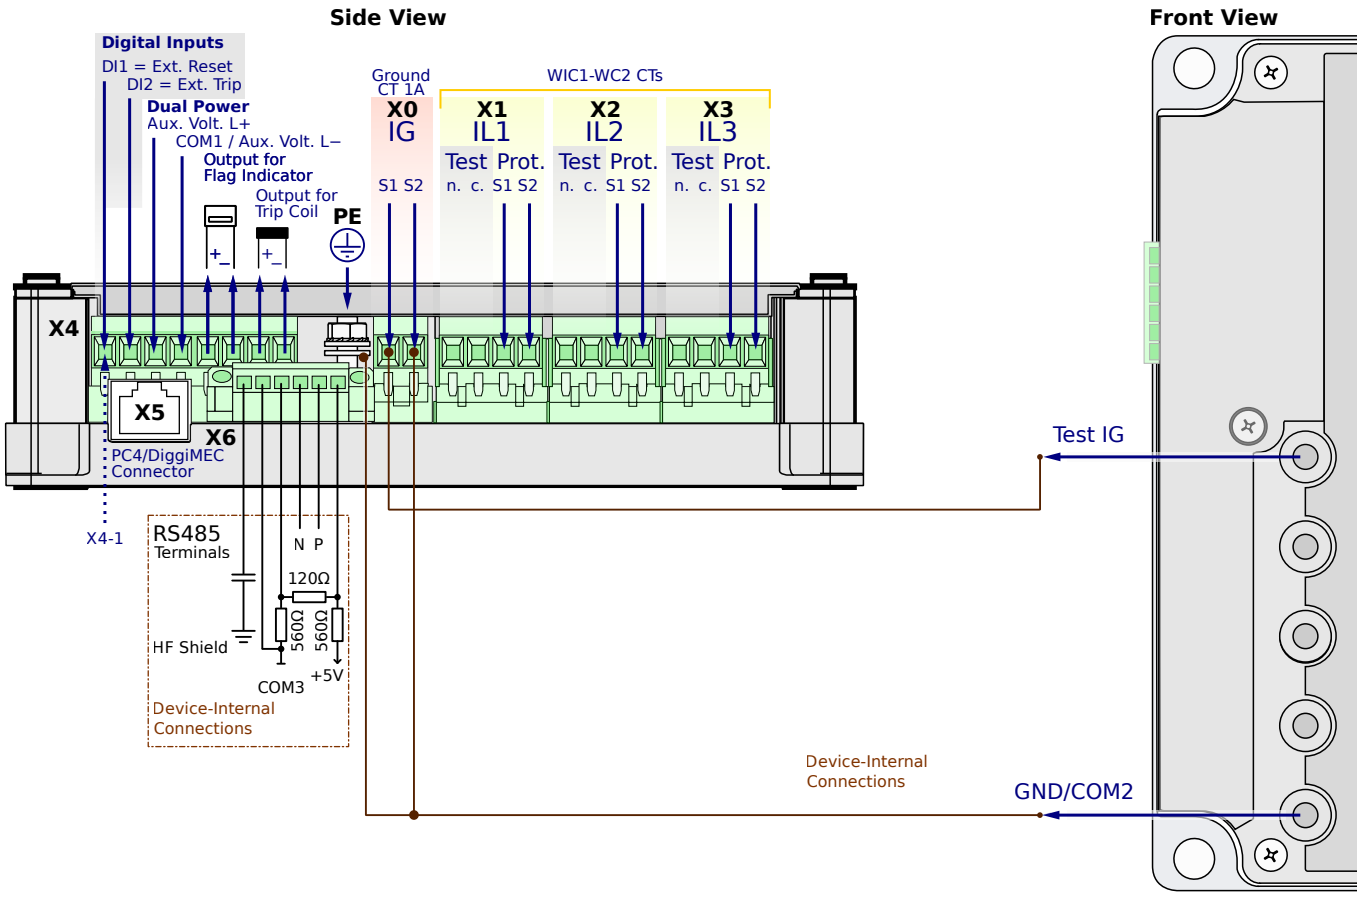


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0PBH

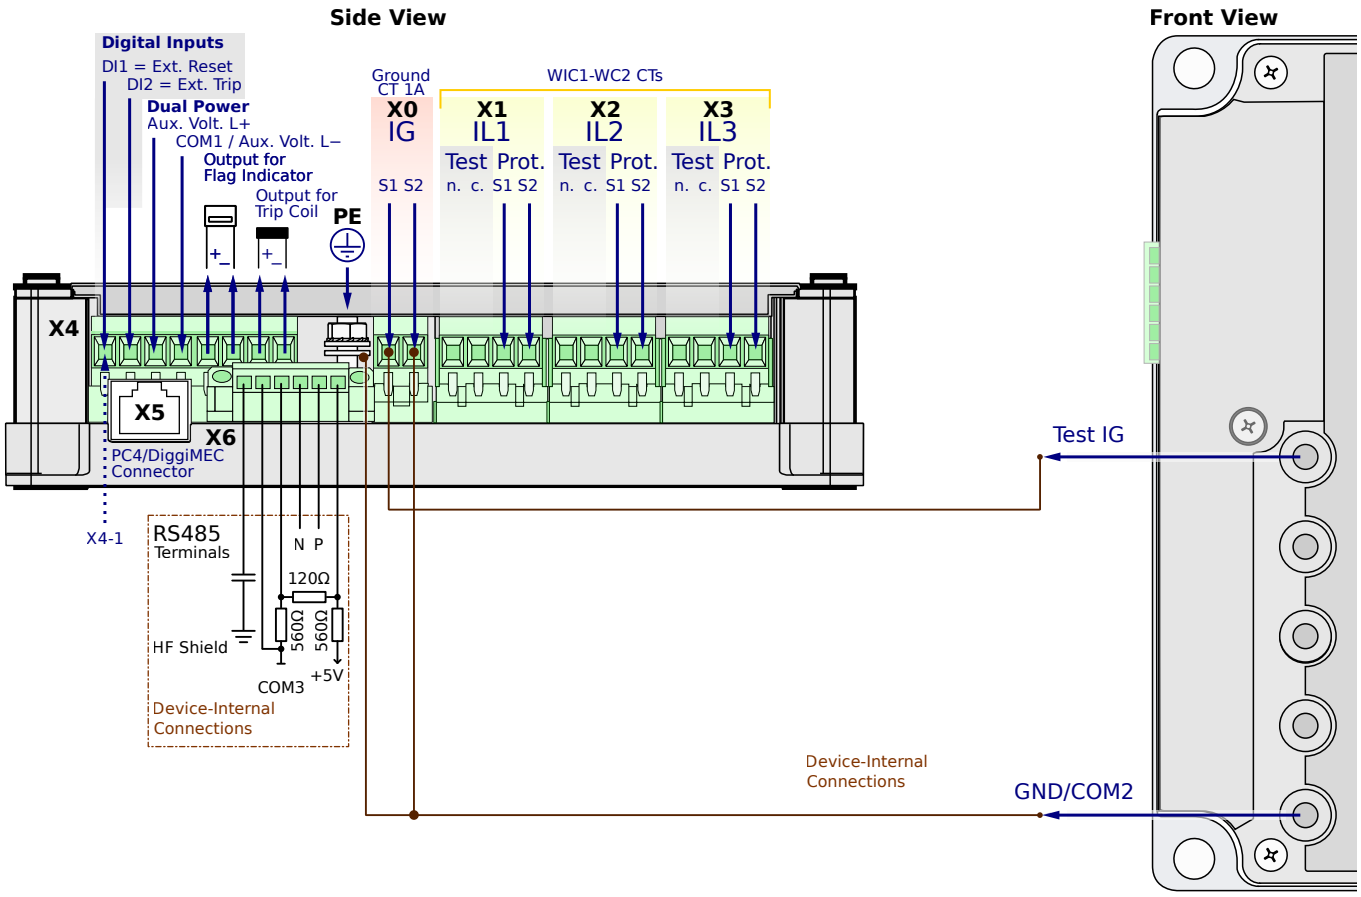


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG0PC0

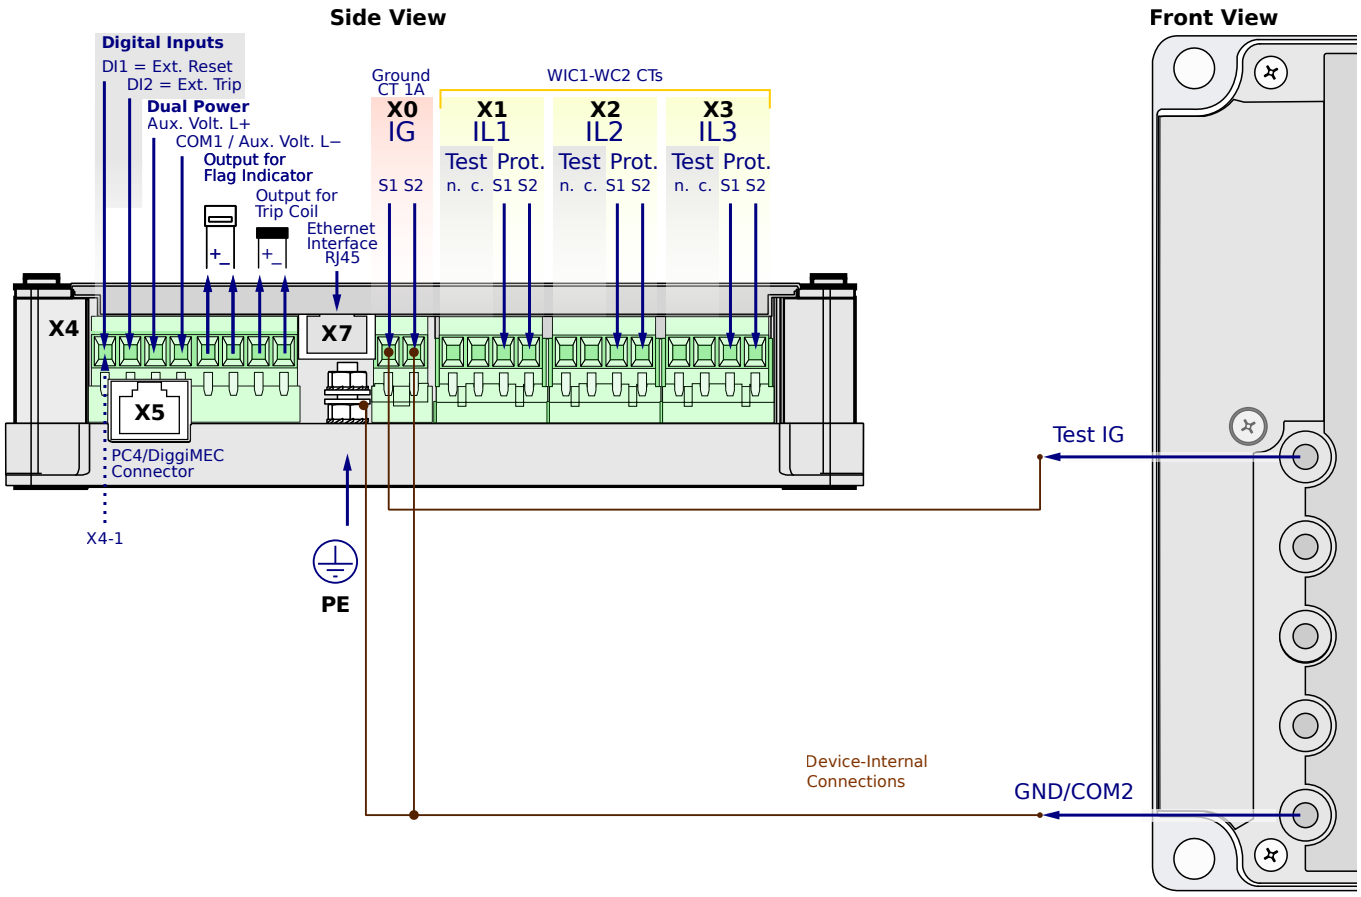


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0PCH

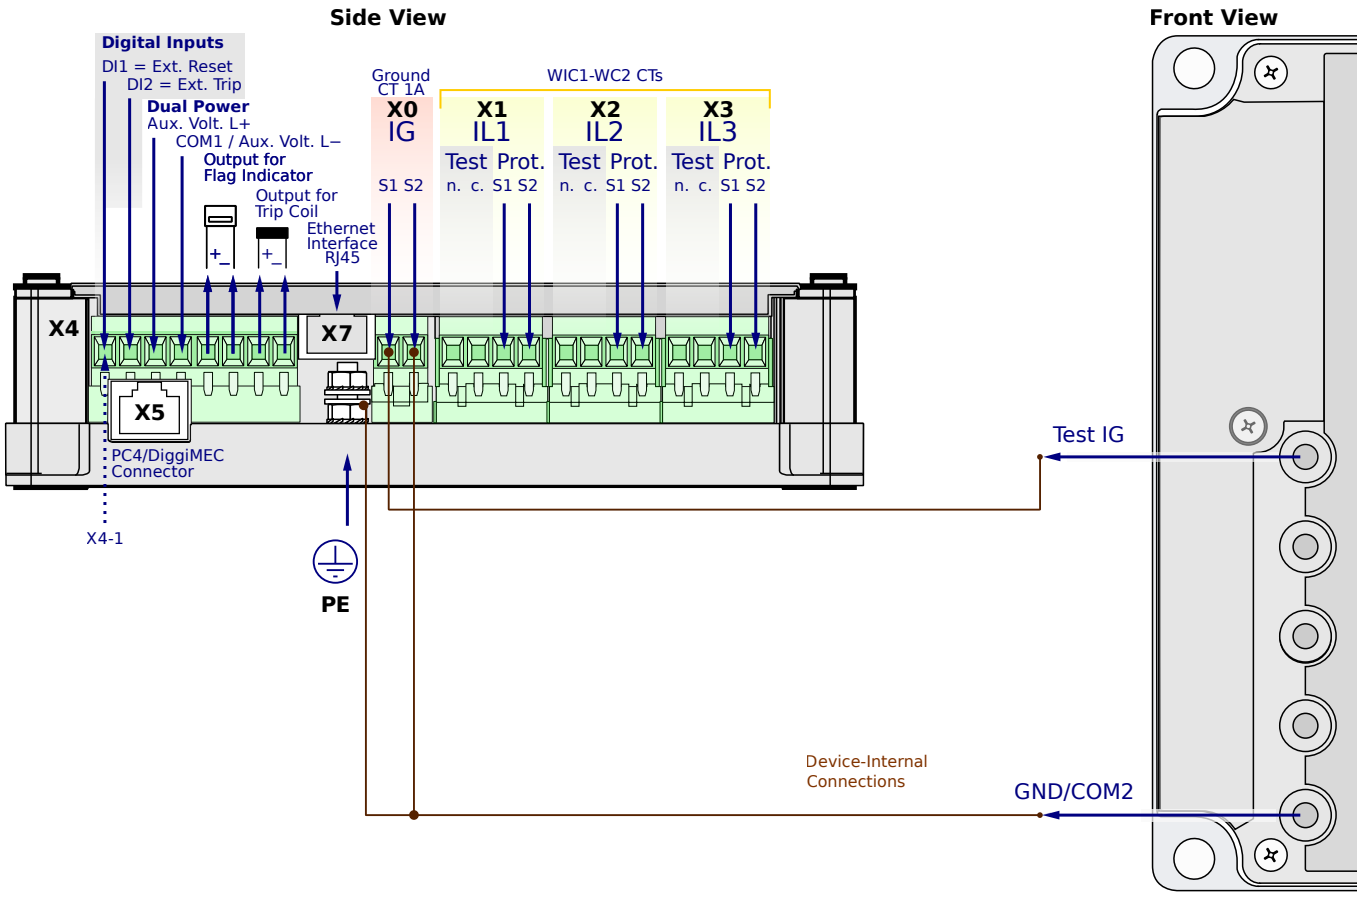


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG0PL0

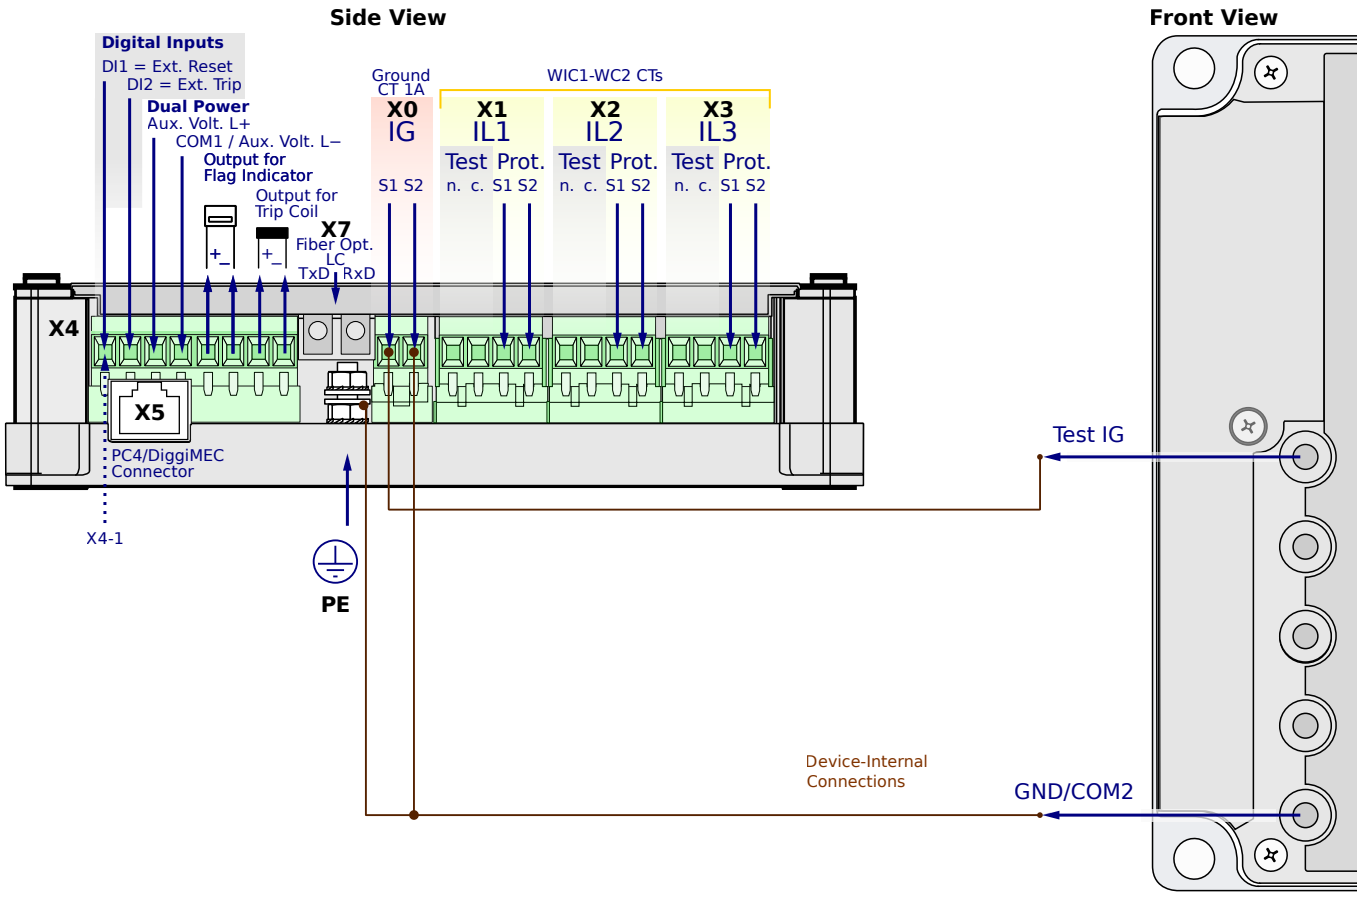


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG0PLH

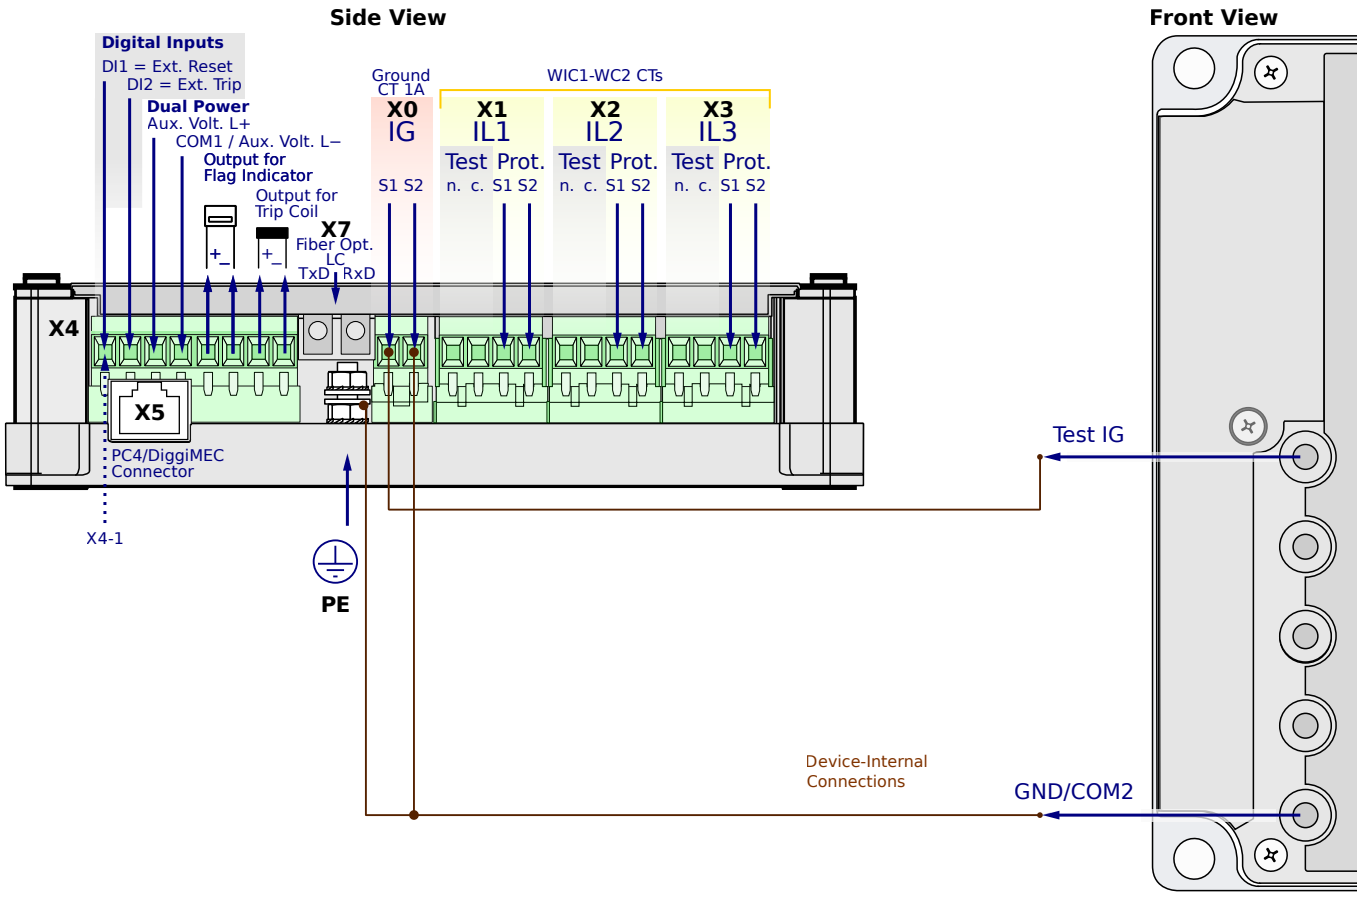


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1SA0

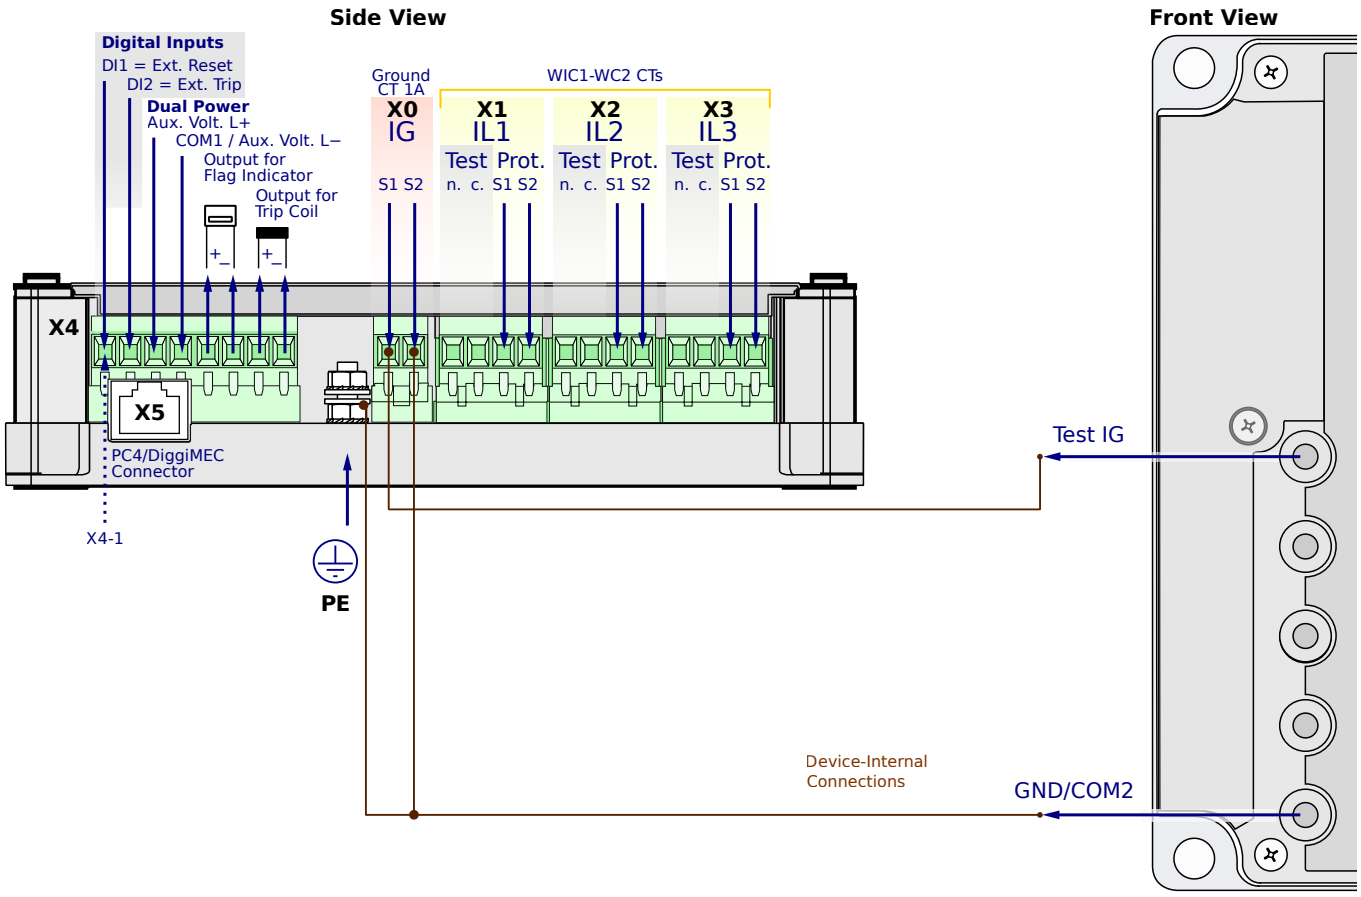


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1SAH

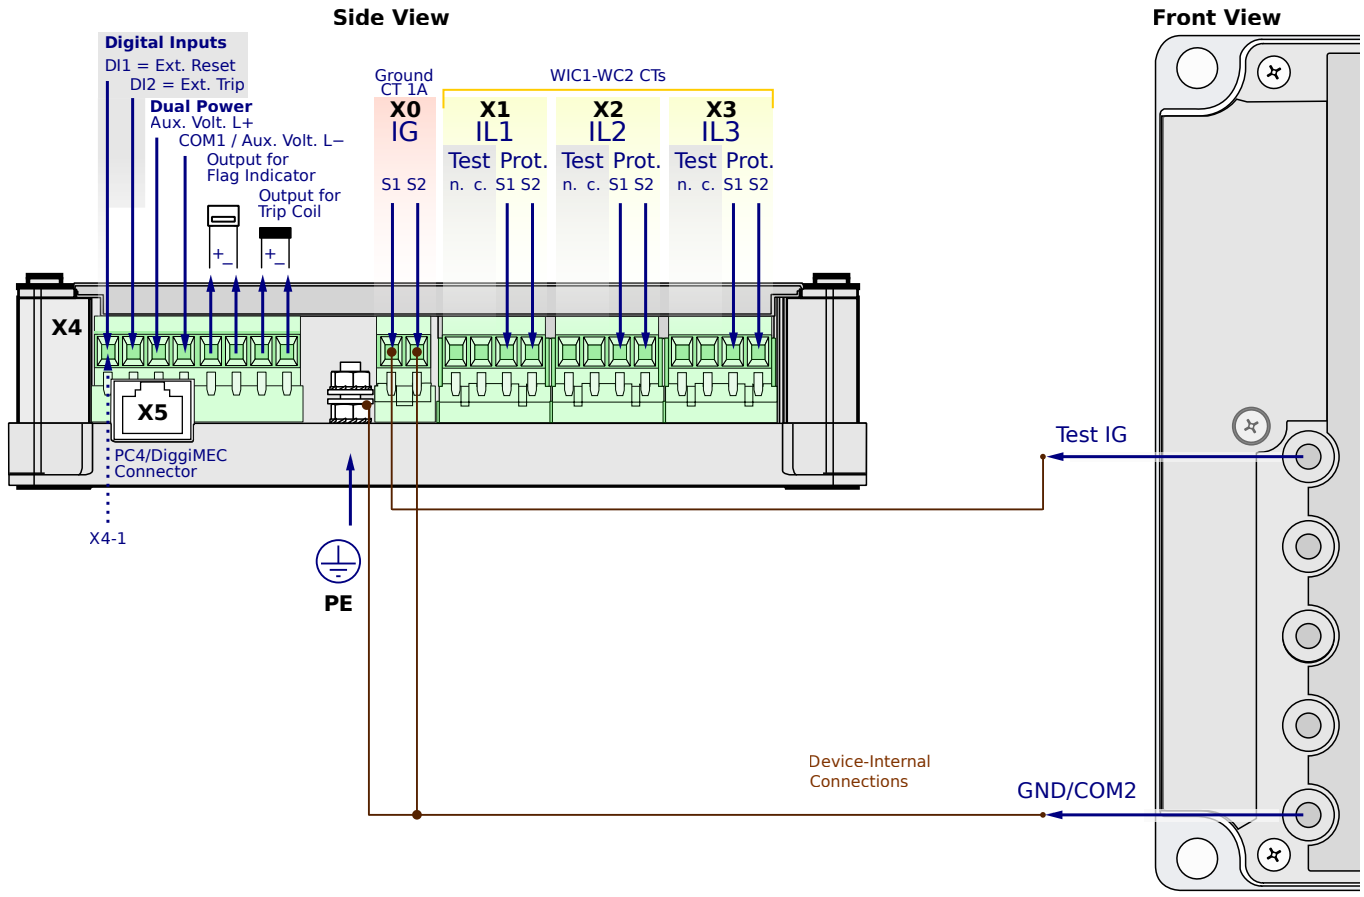


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1SB0

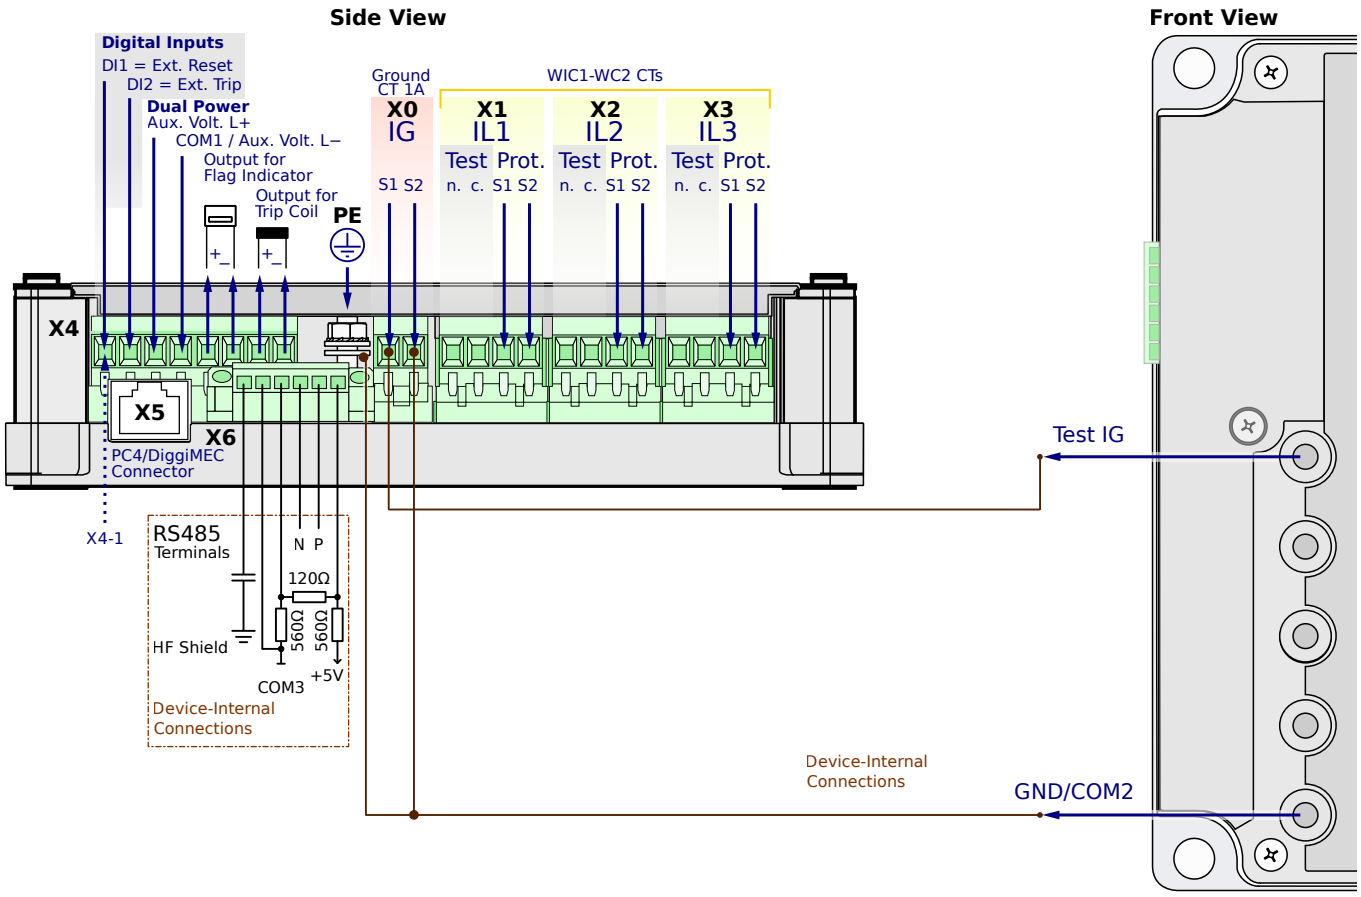


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1SBH

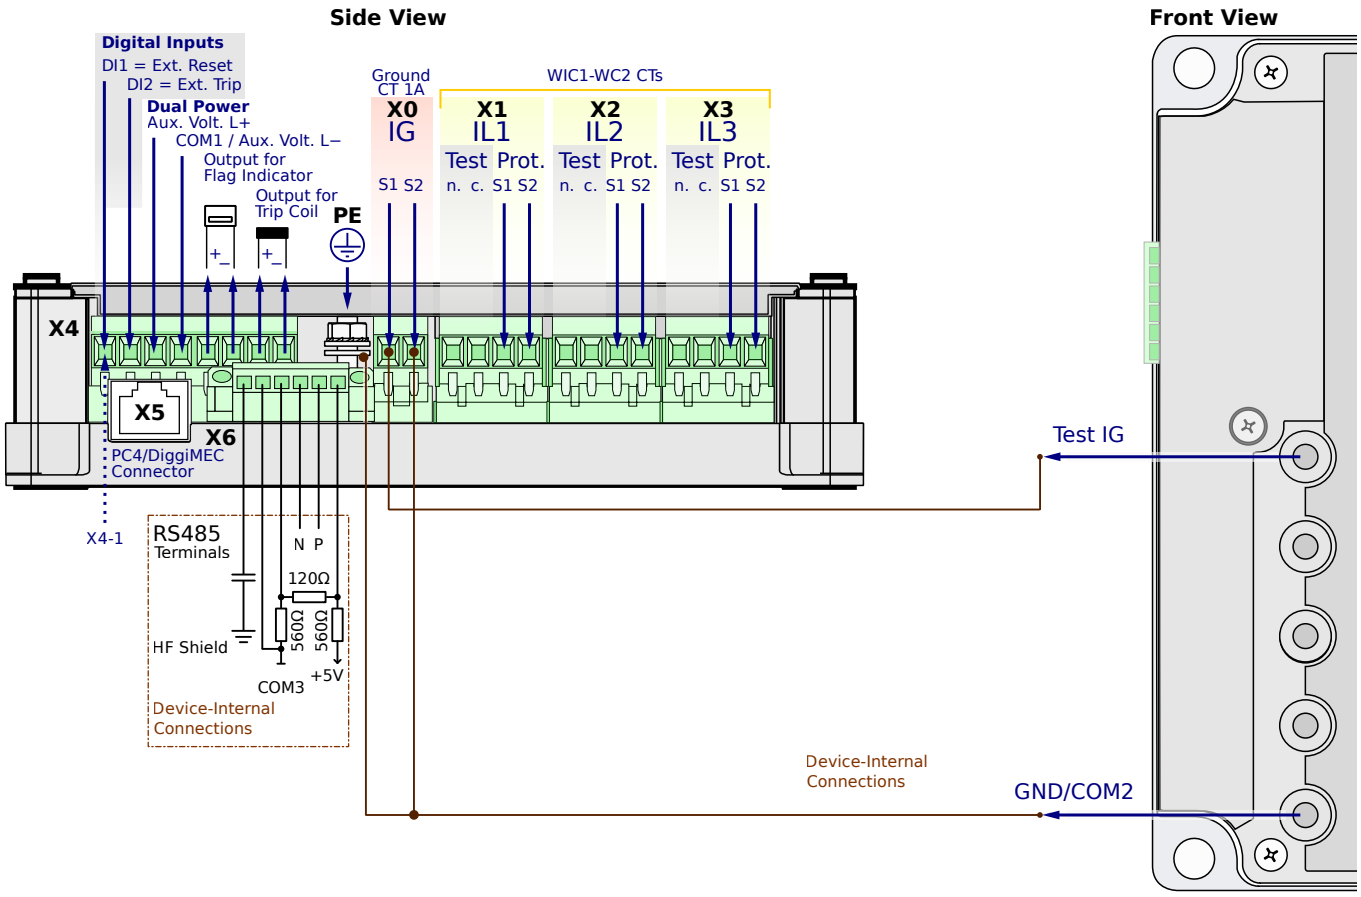


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1SC0

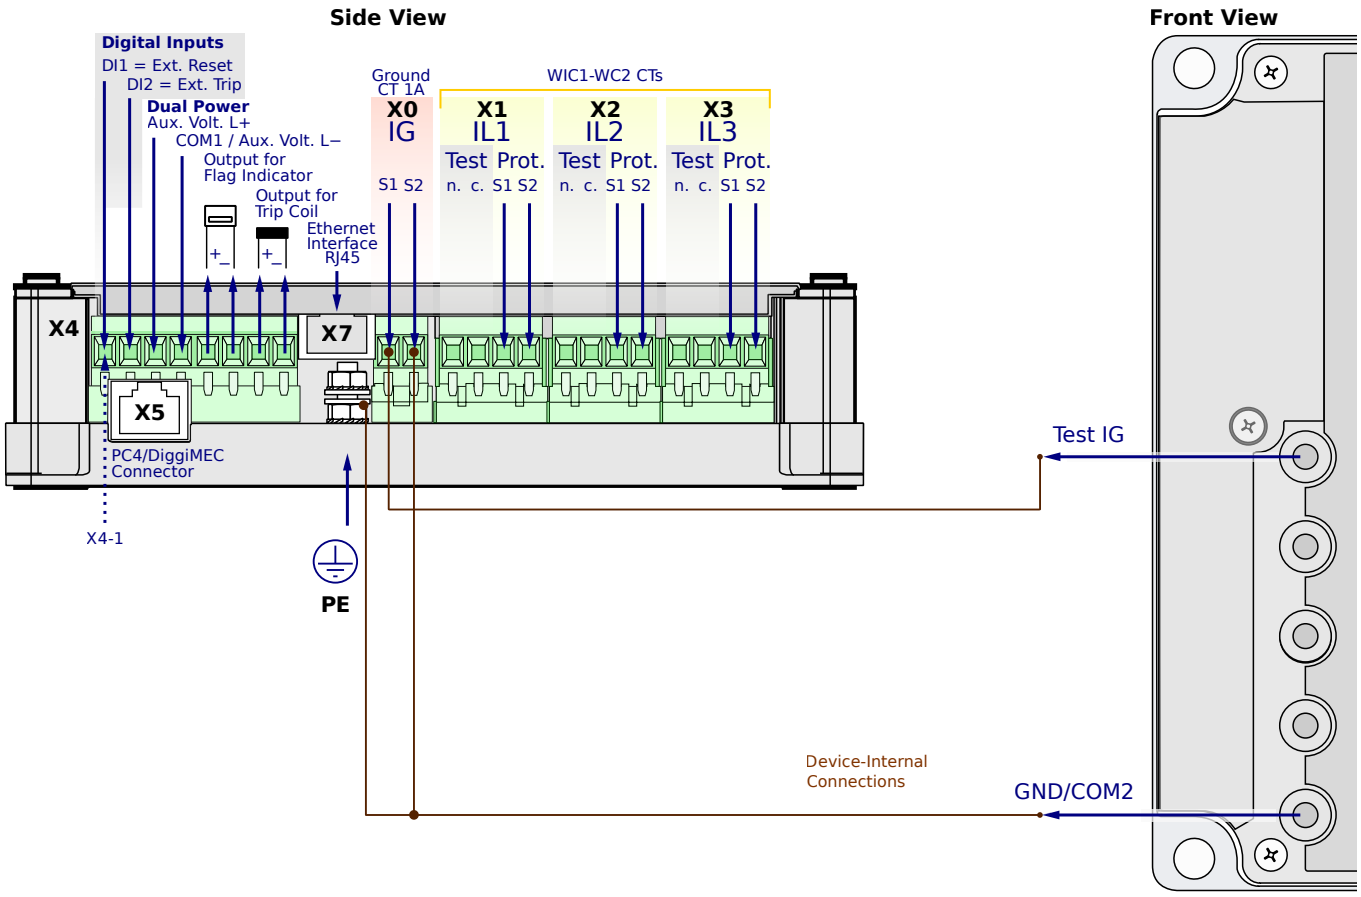


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1SCH

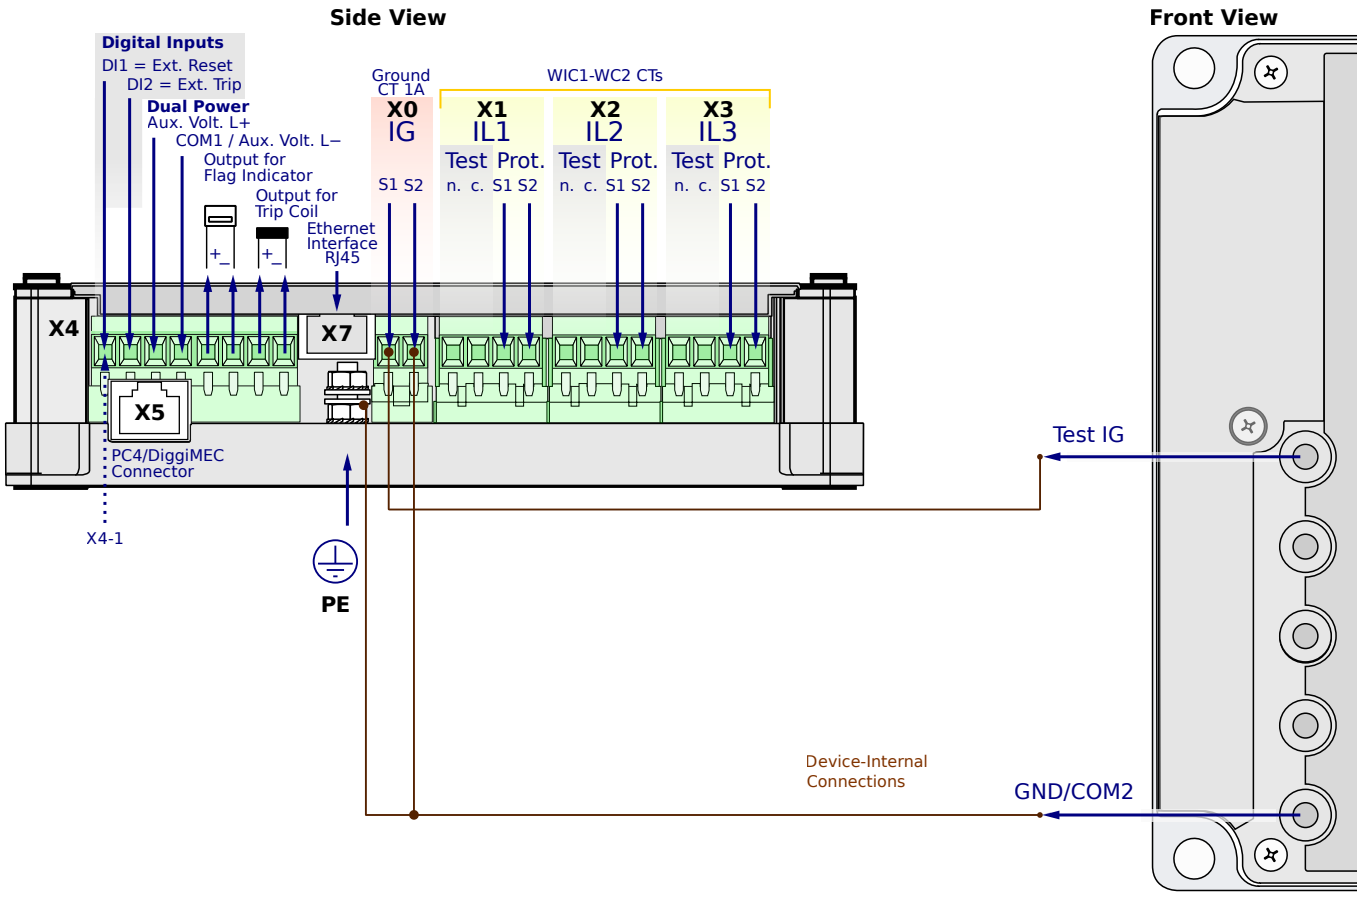


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1SL0

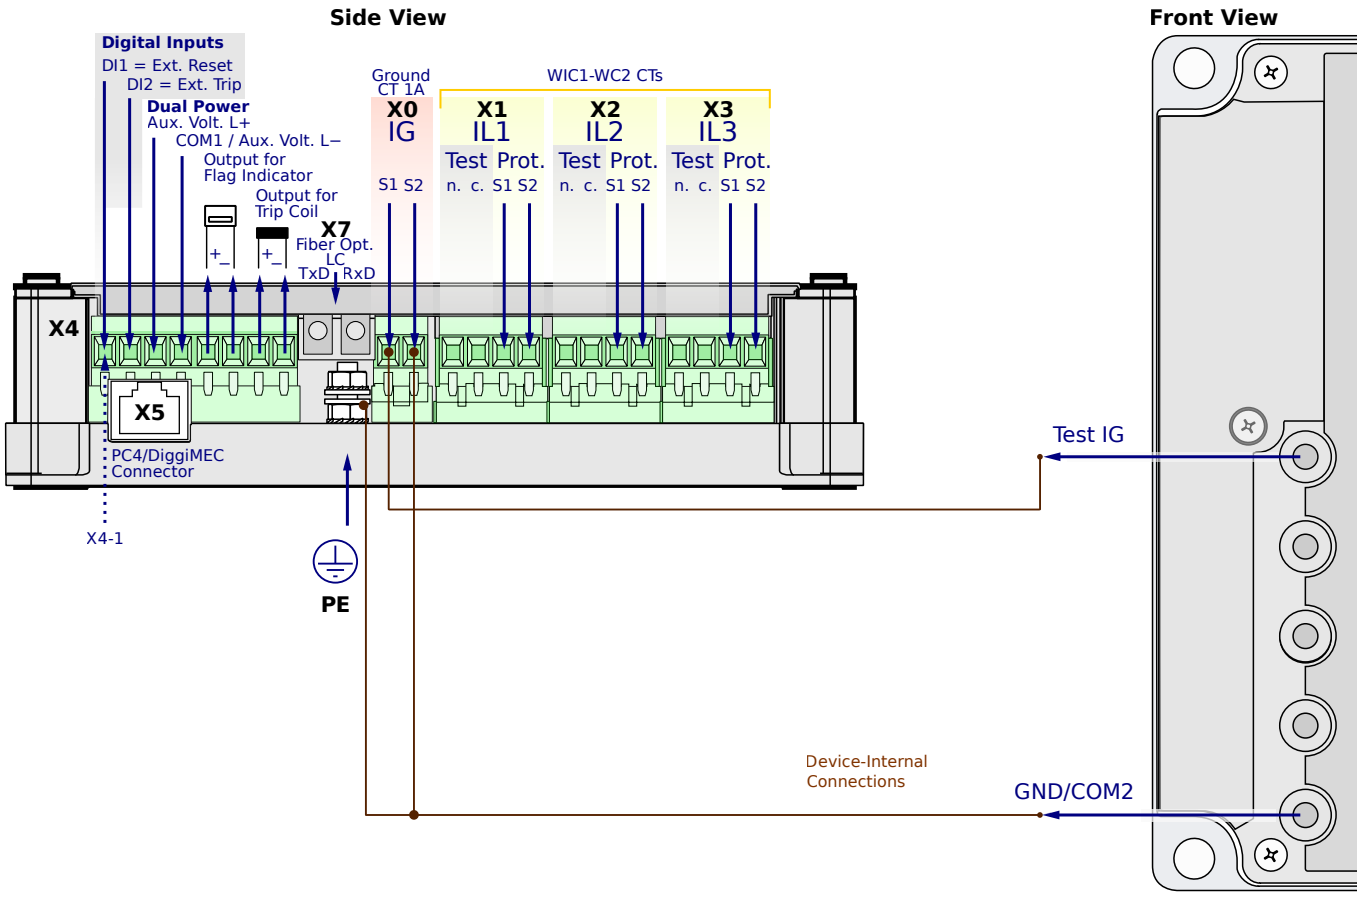


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1SLH

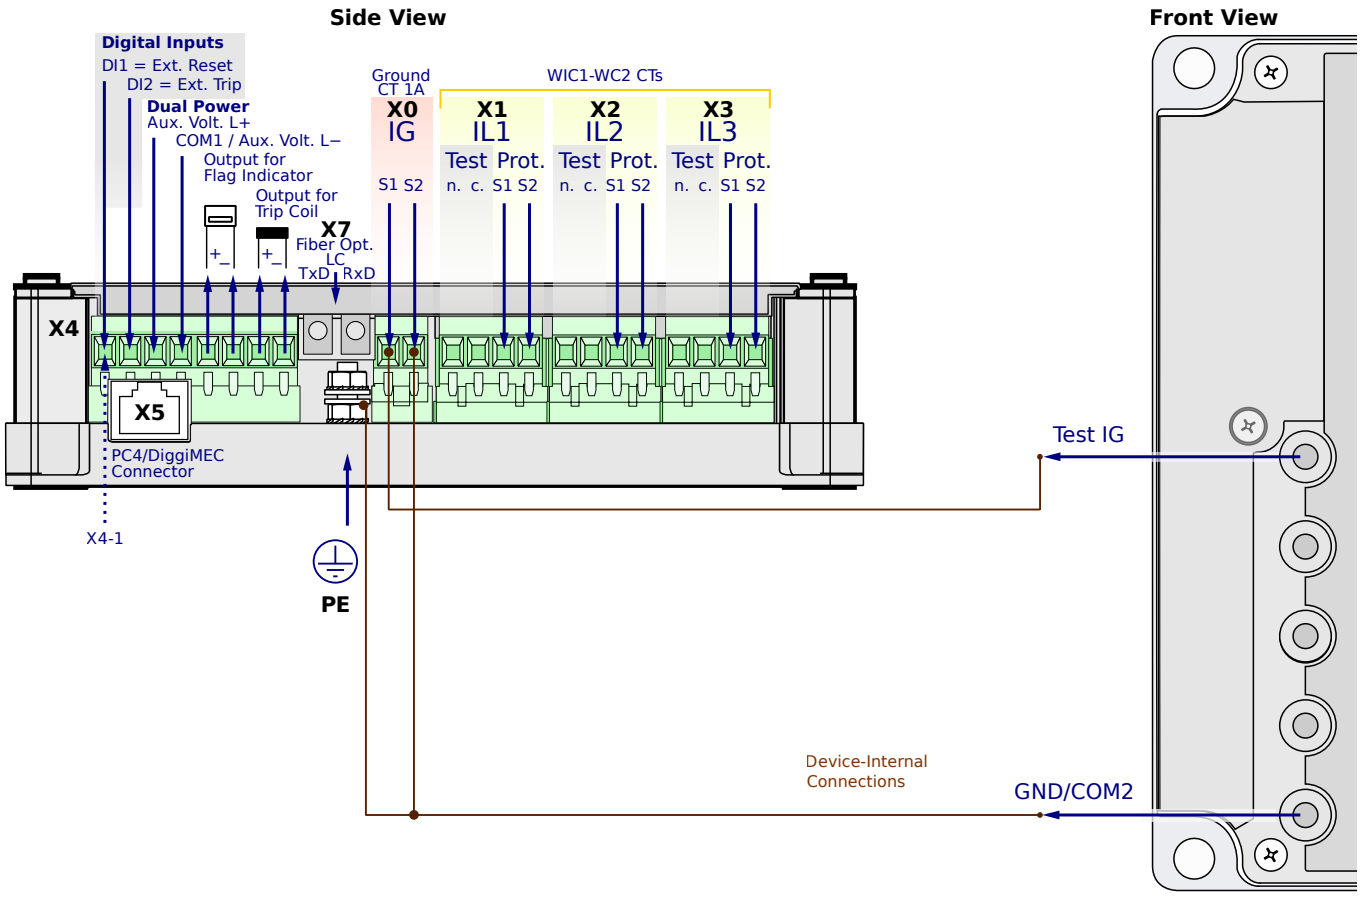


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1AA0

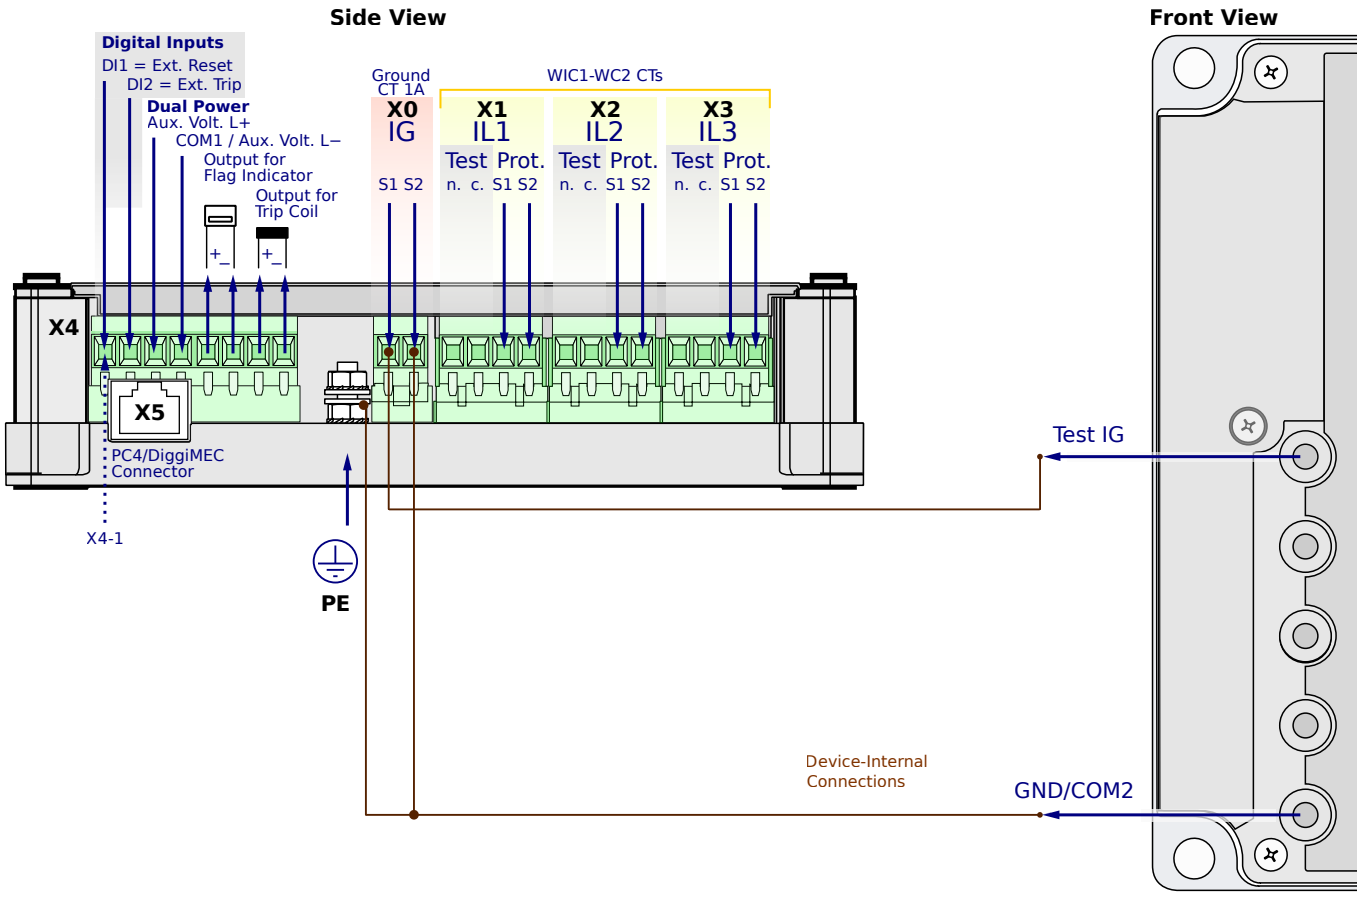


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1AAH

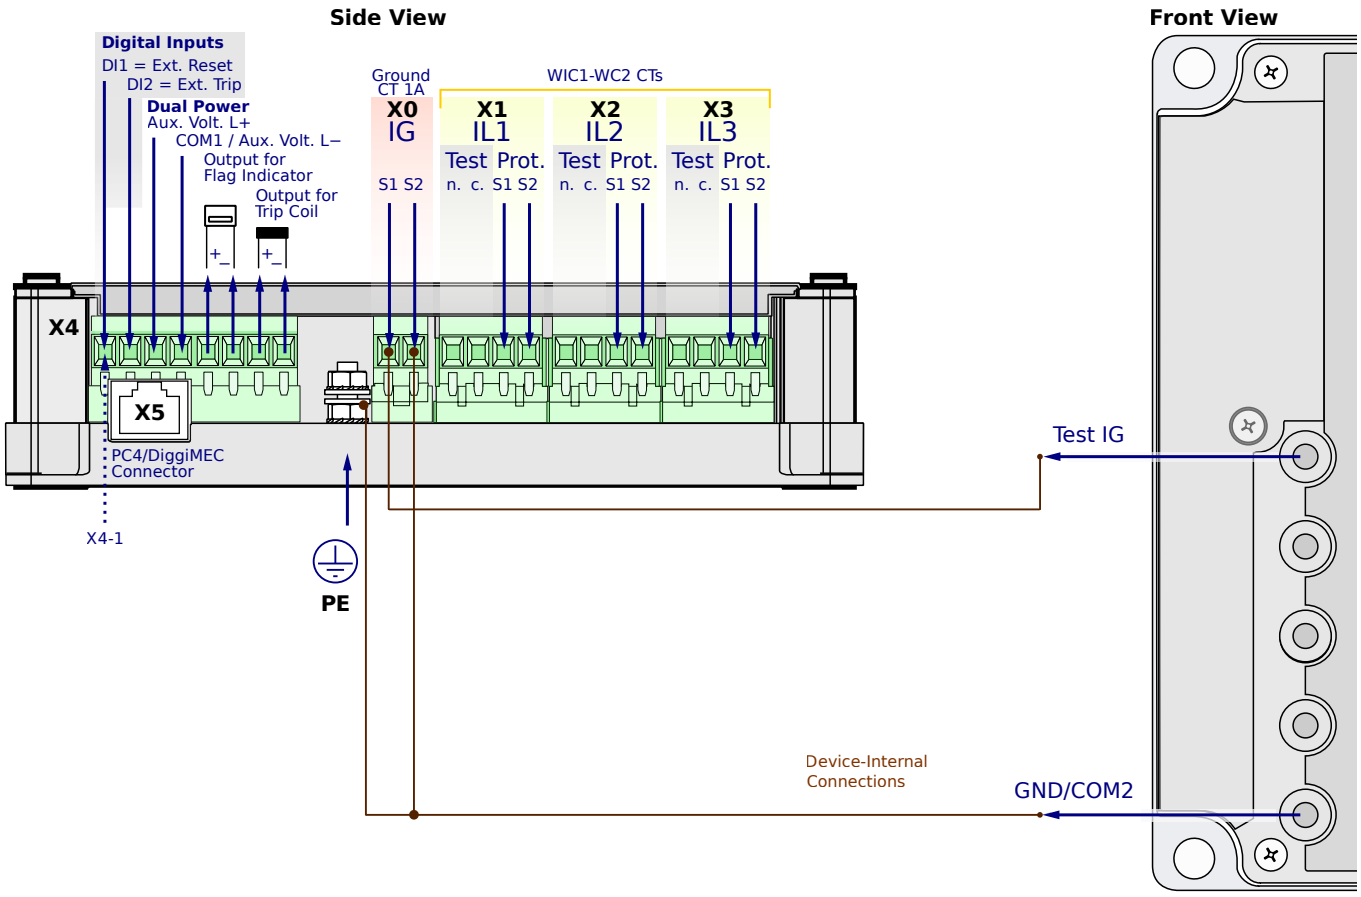


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1AB0

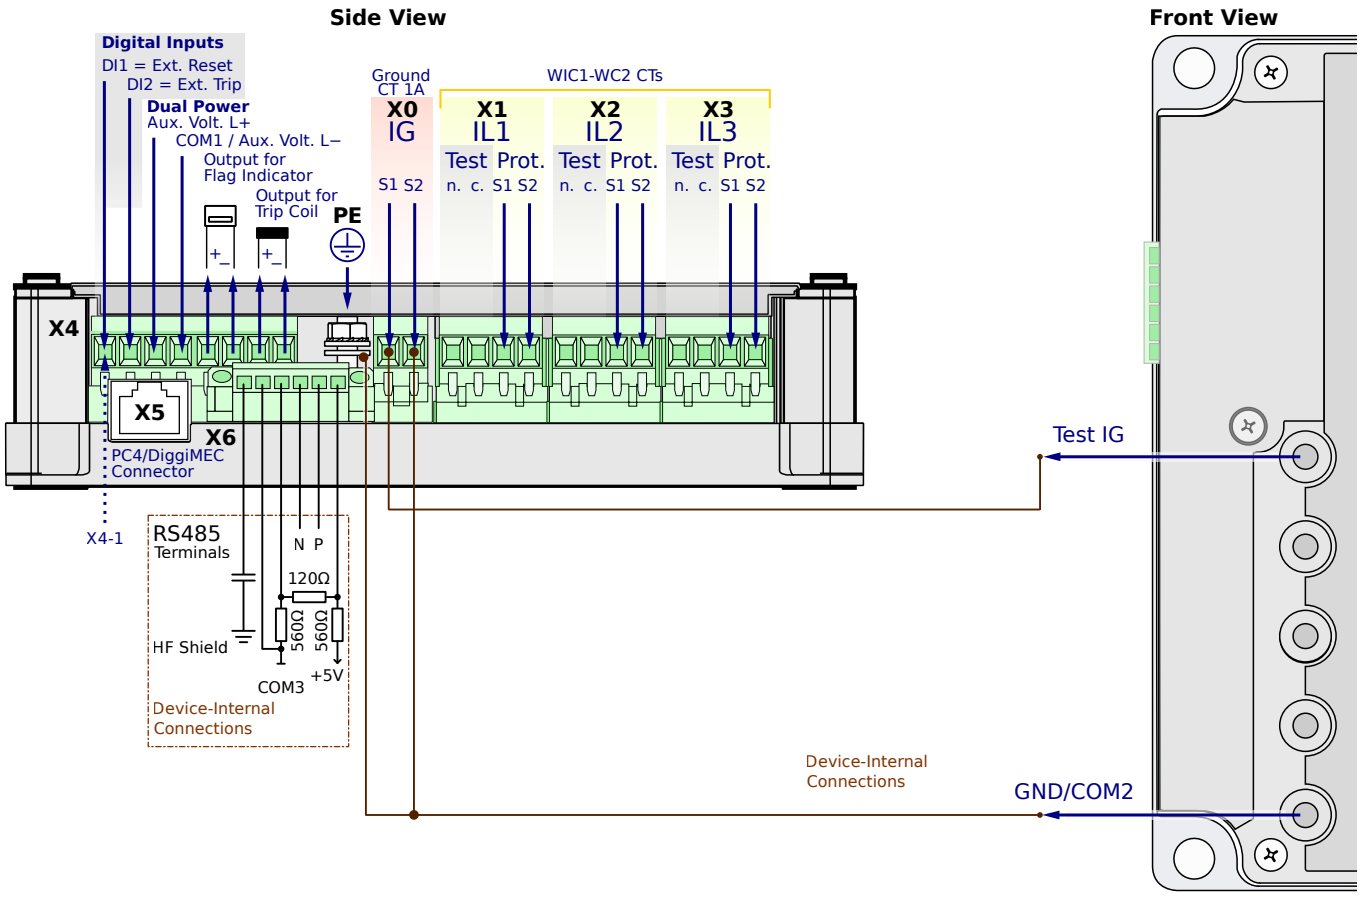


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1ABH

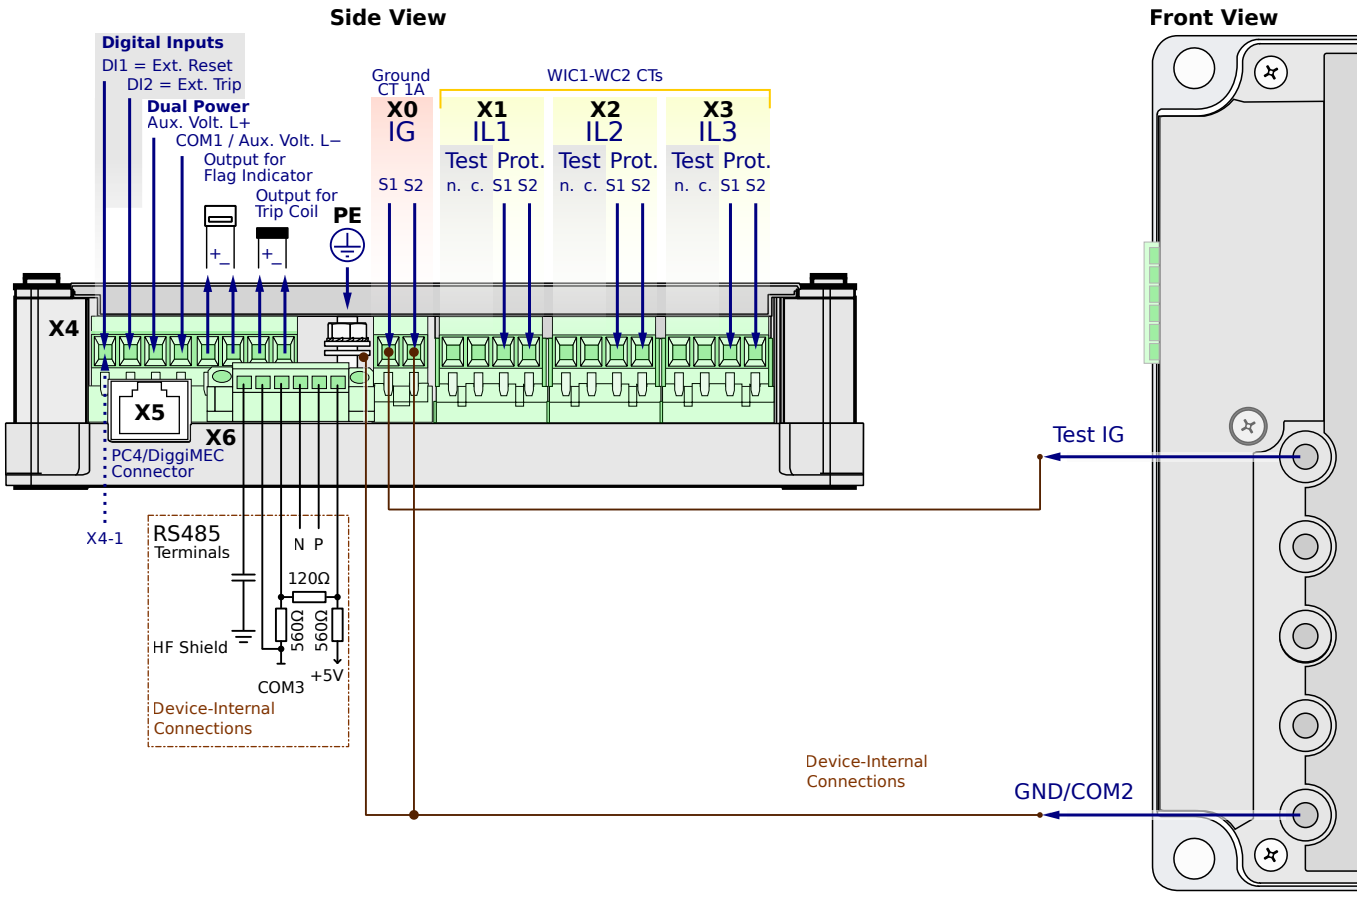


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1AC0

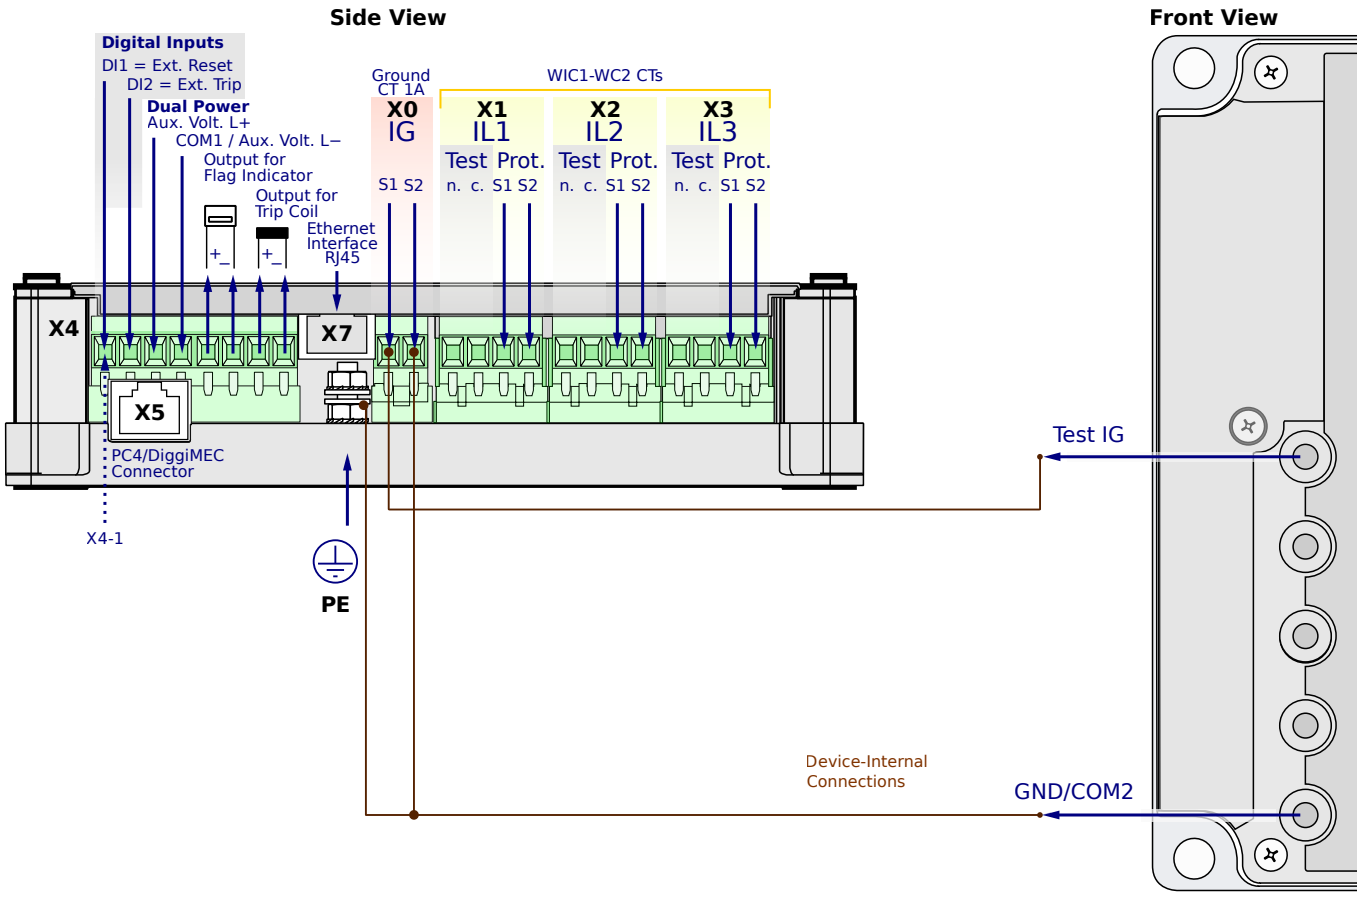


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1ACH

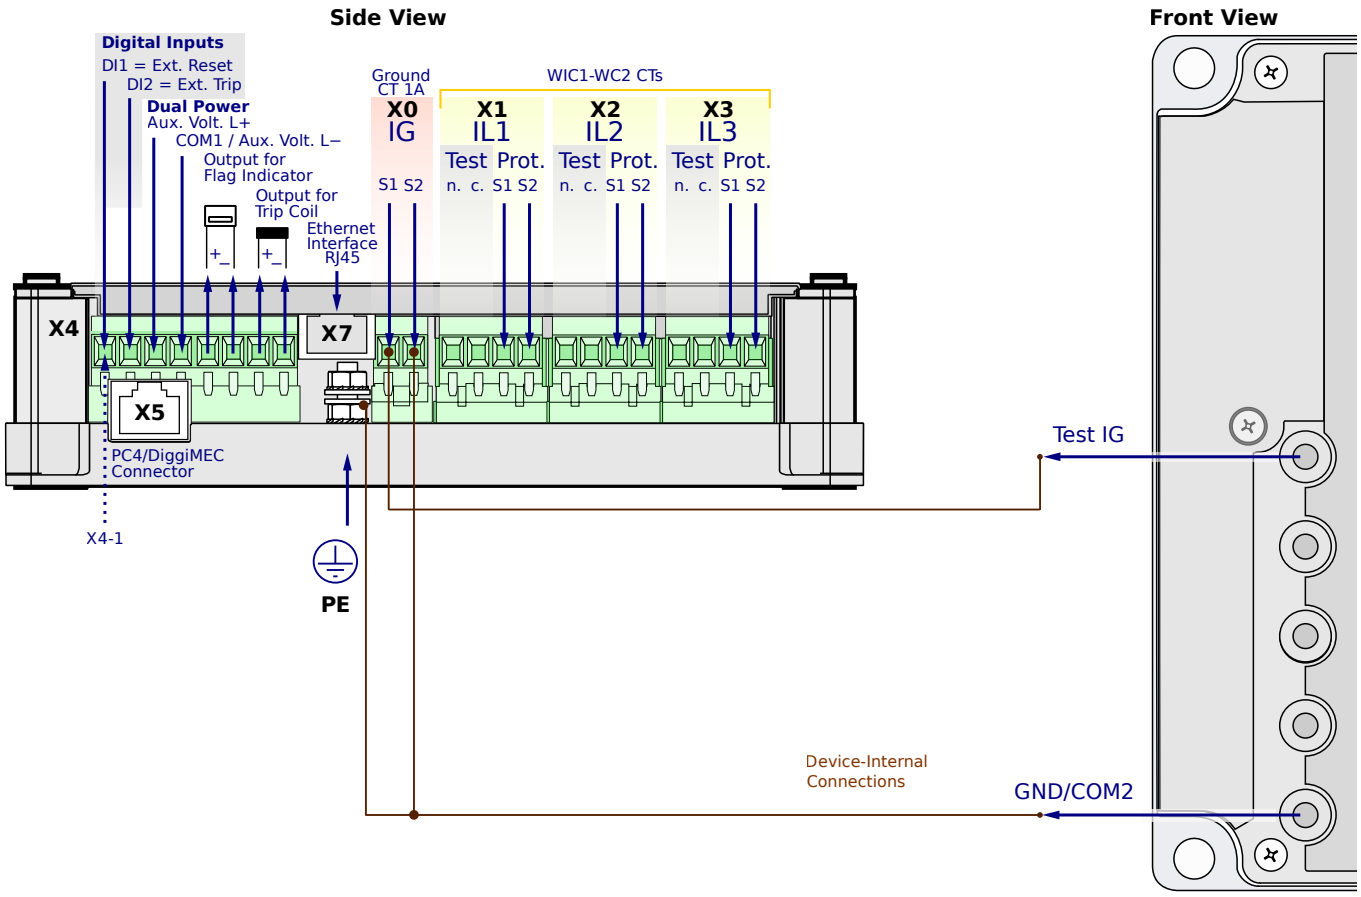


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1AL0

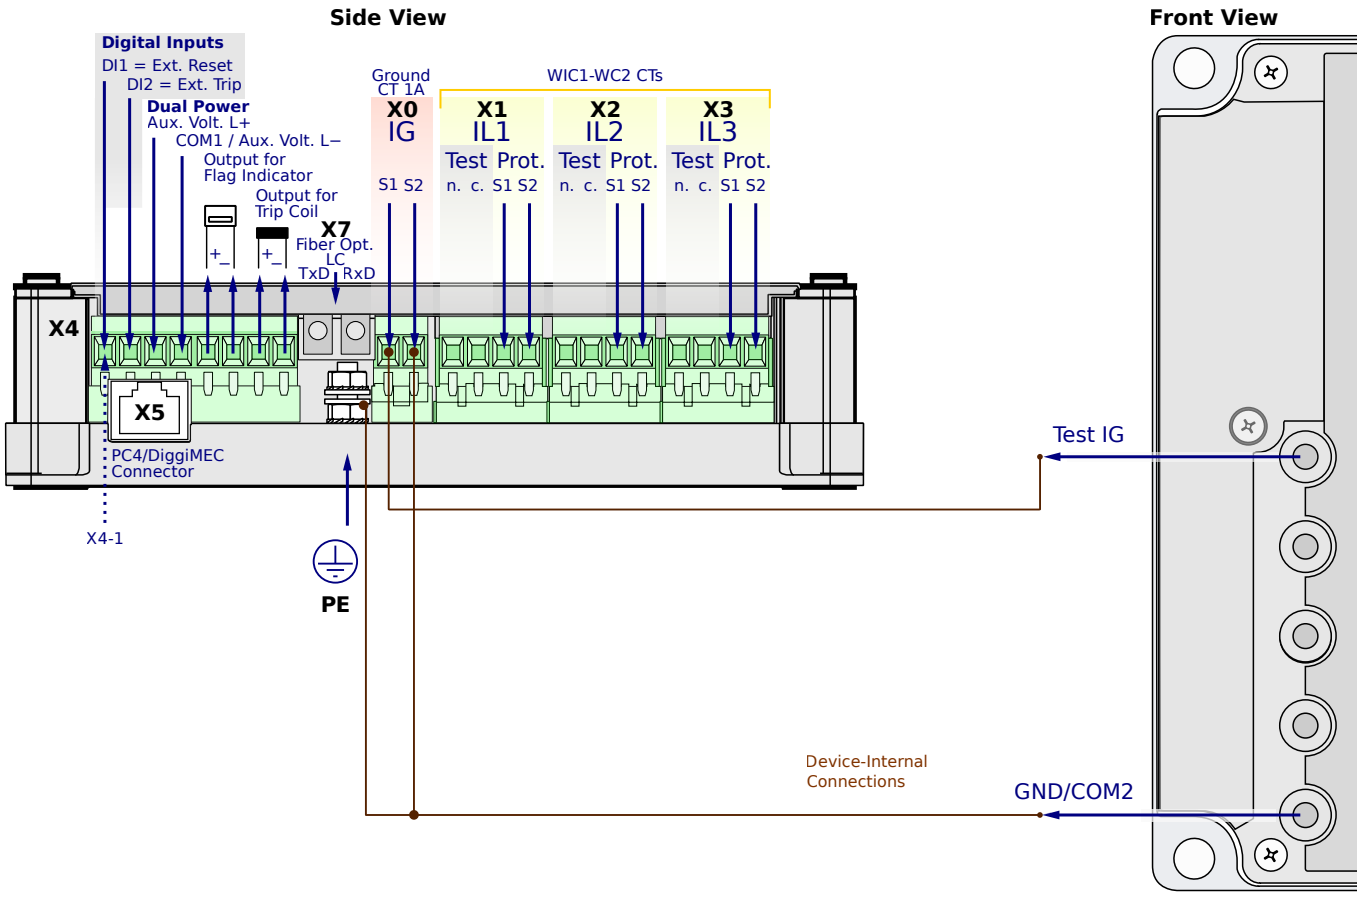


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1ALH

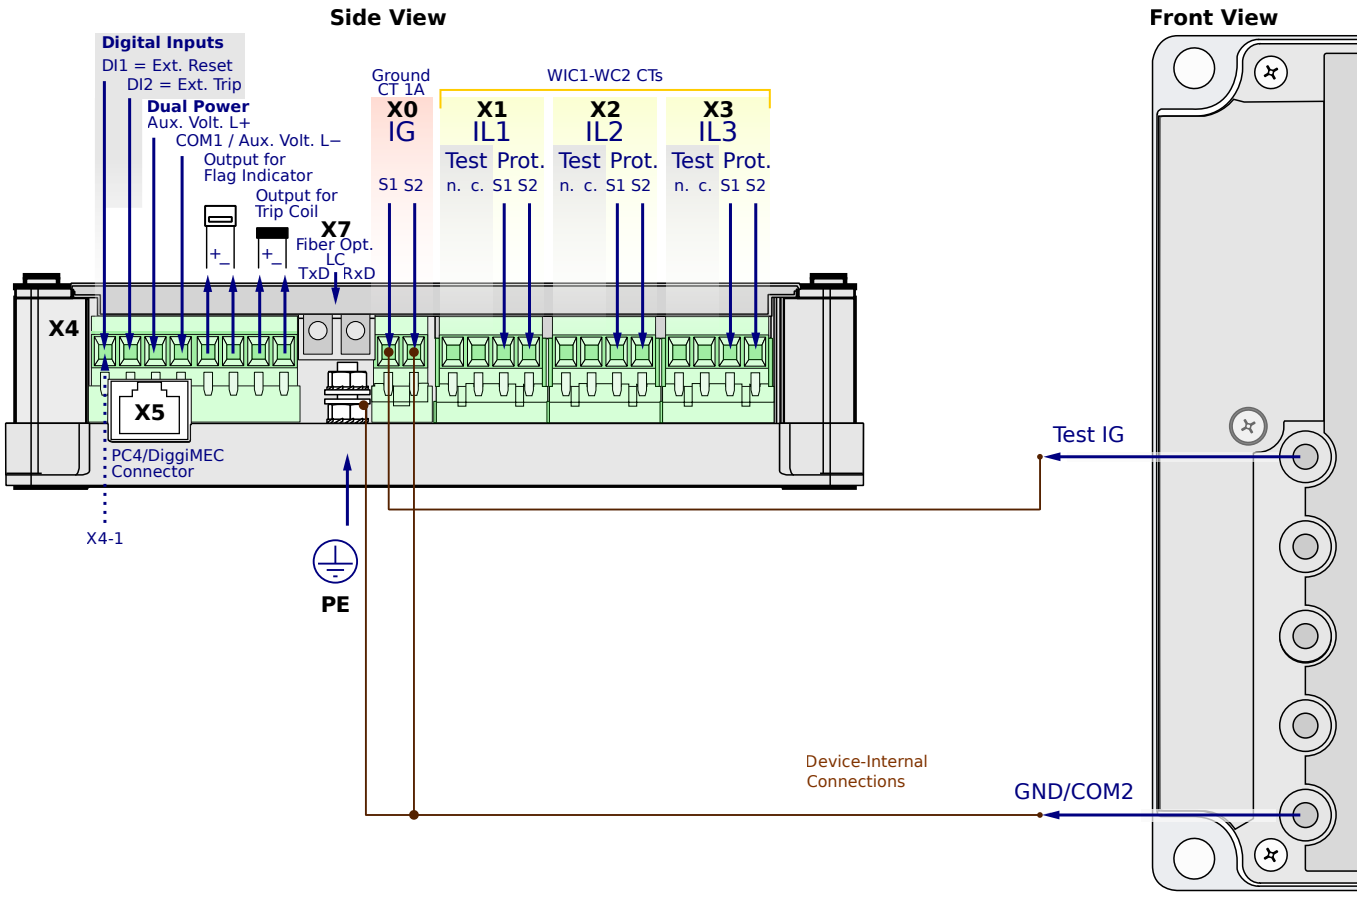


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1PA0

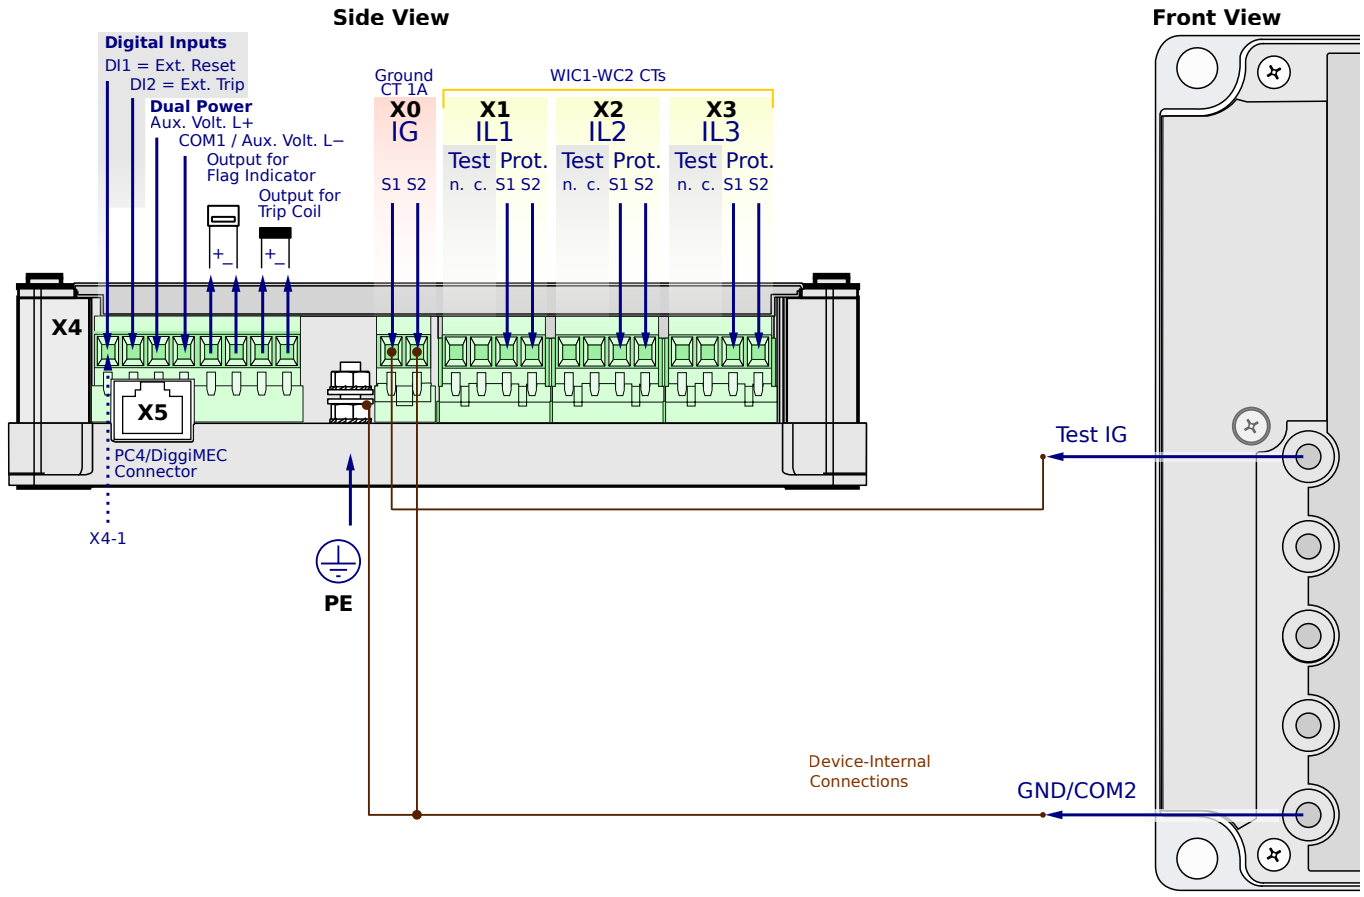


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1PAH

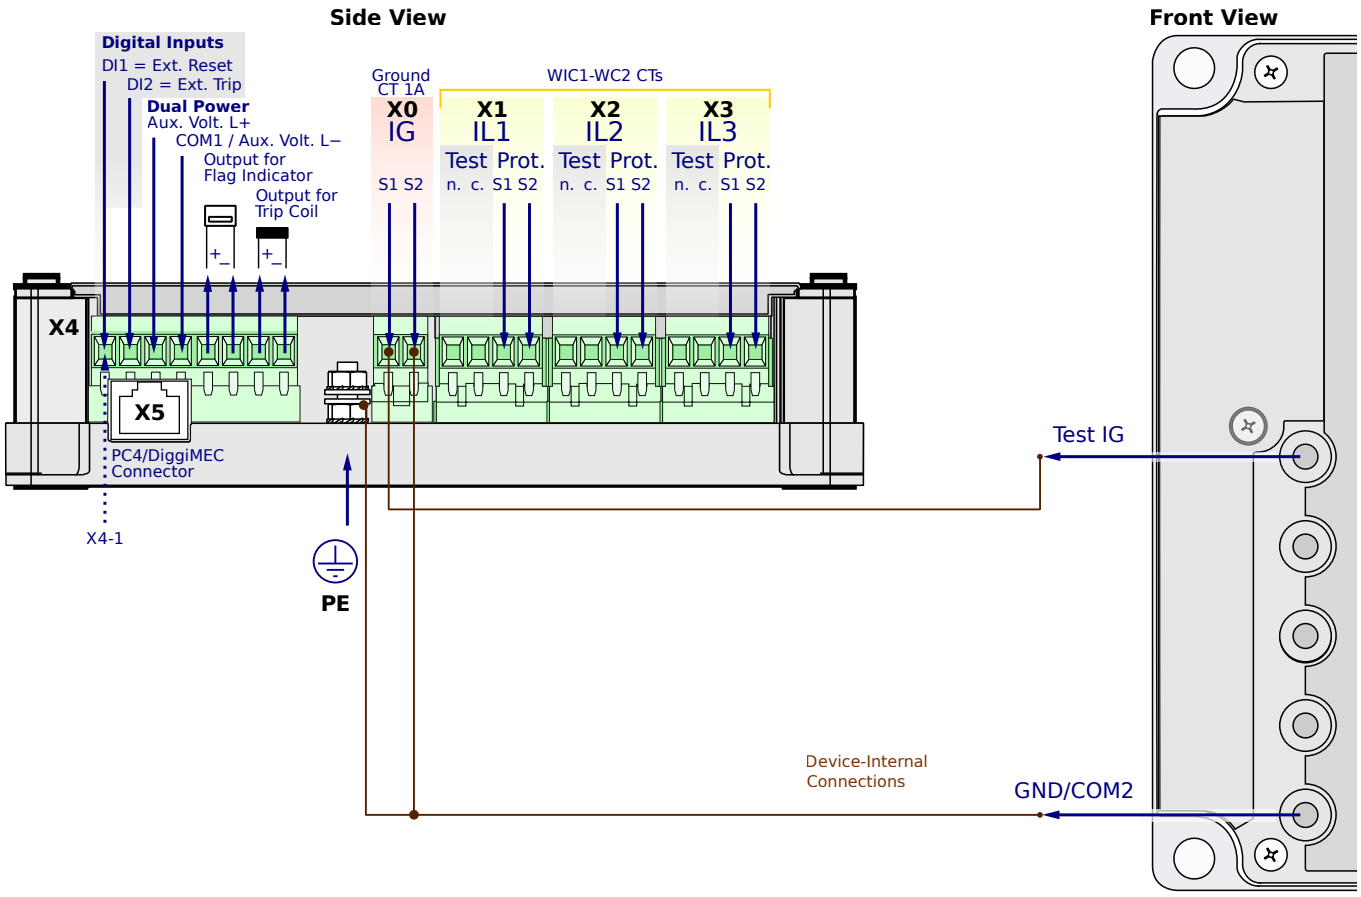


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG1PB0

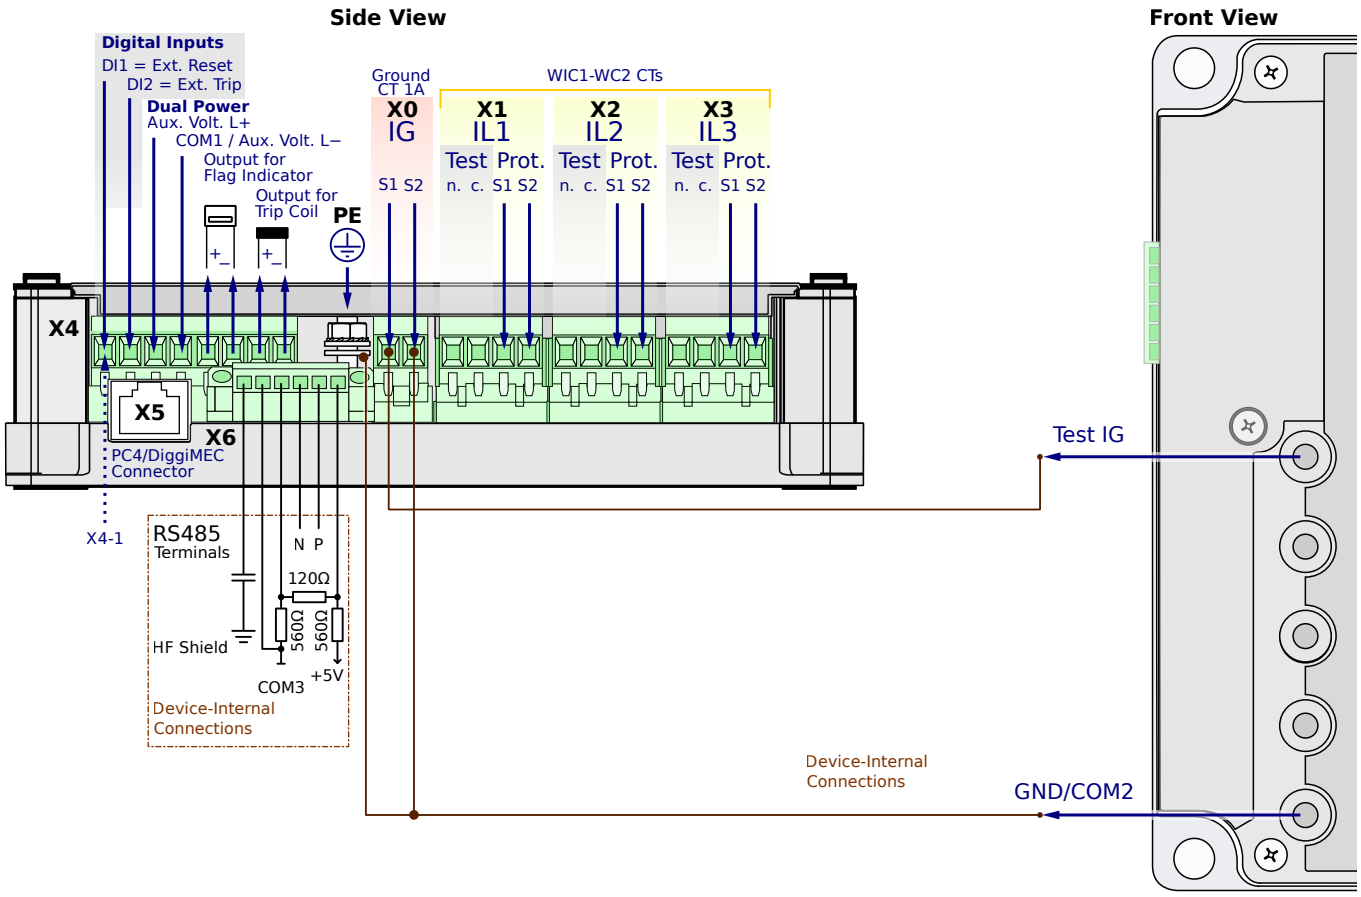


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1PBH

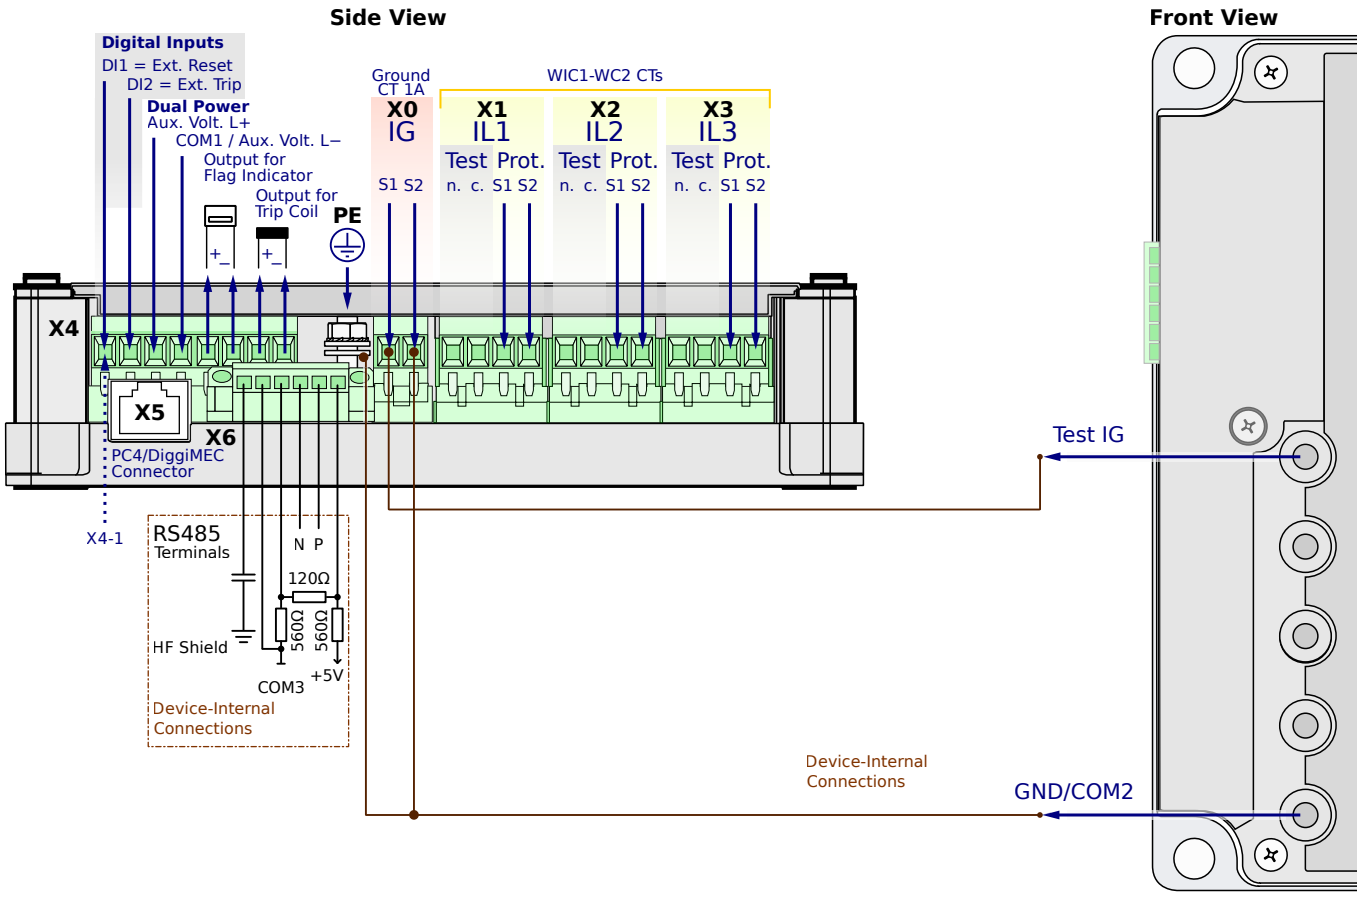


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG1PC0

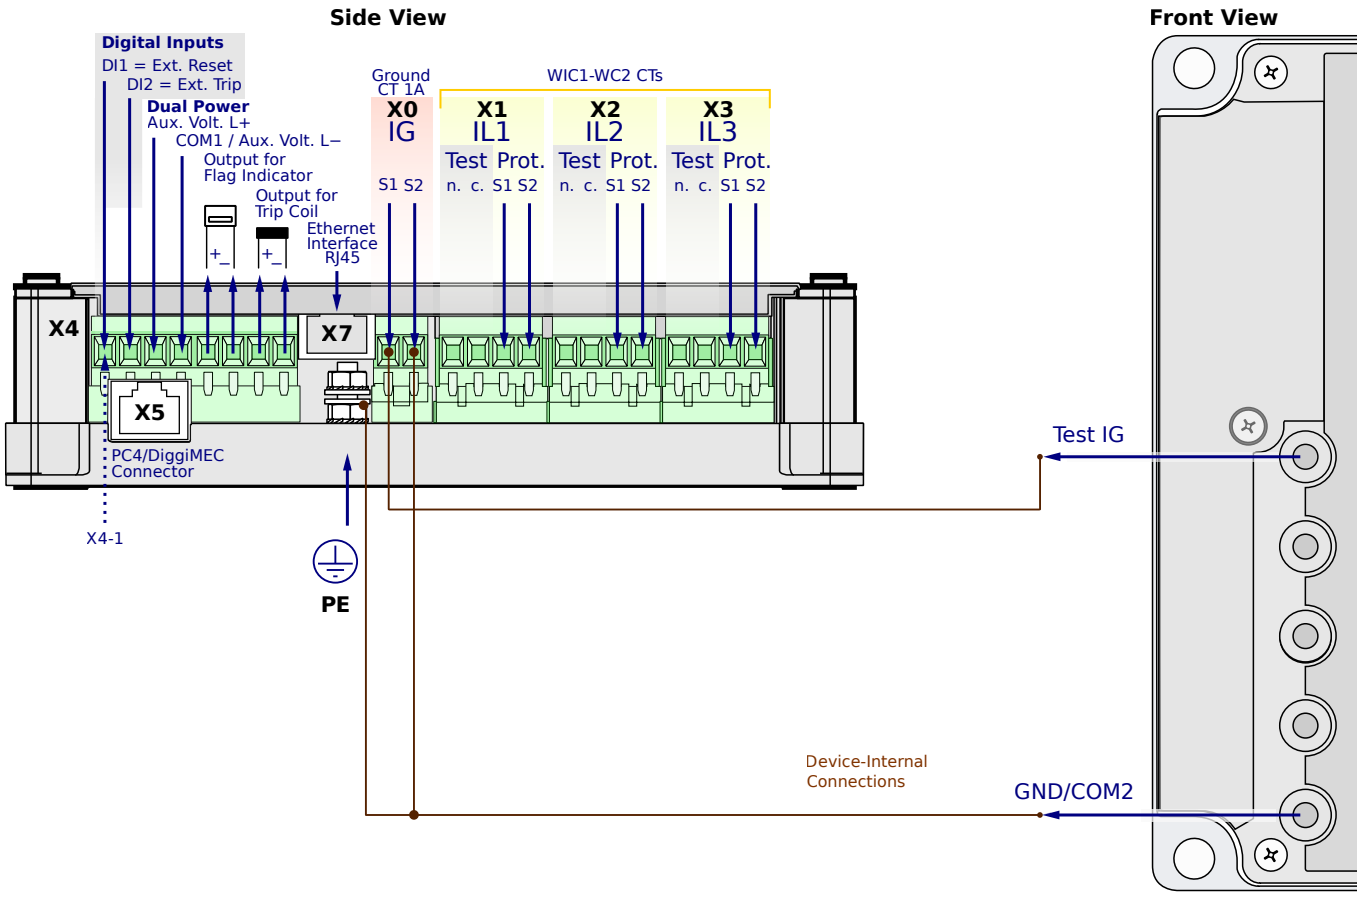


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1PCH

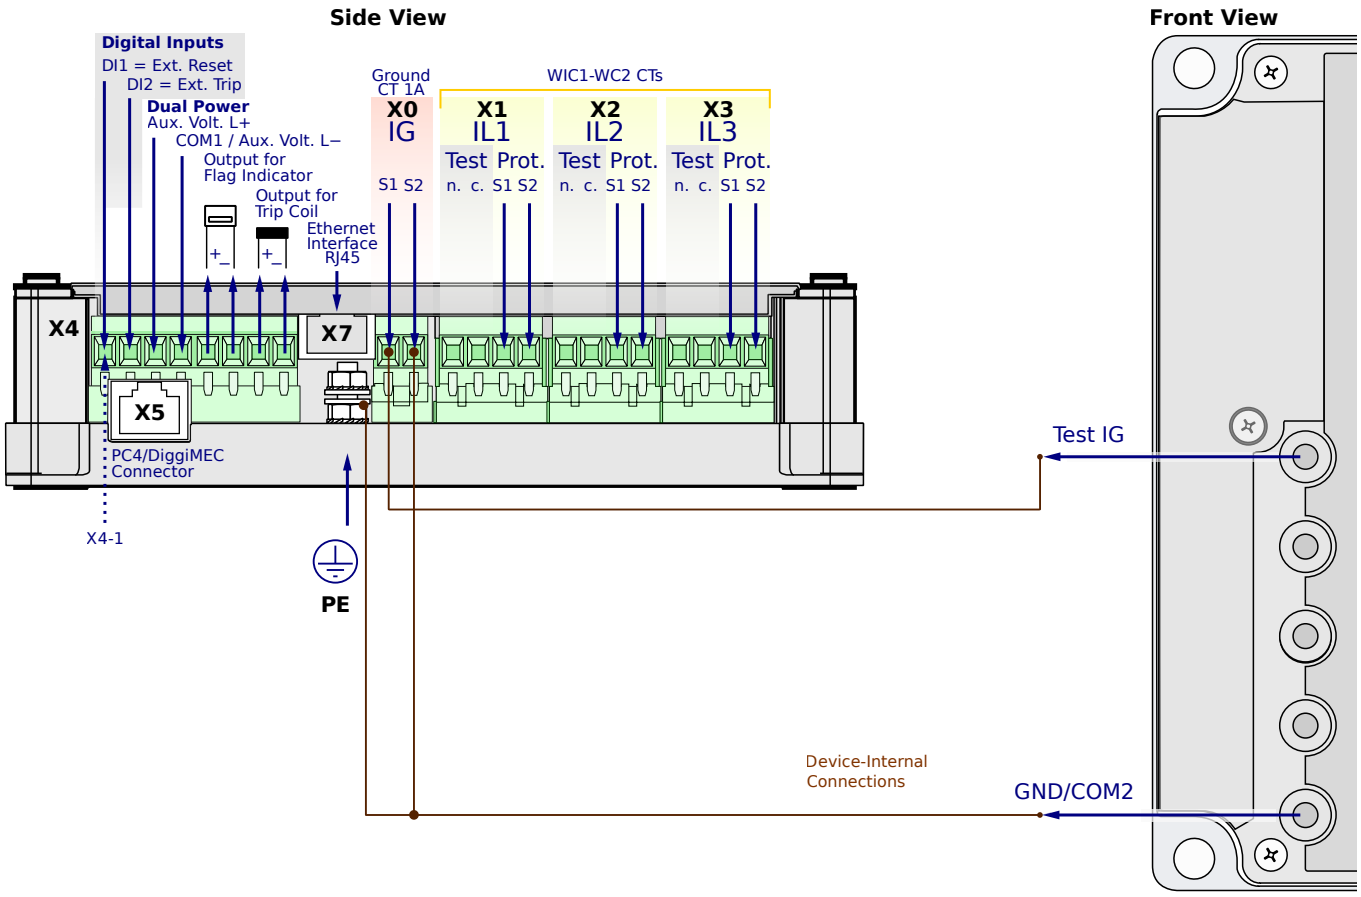


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG1PL0

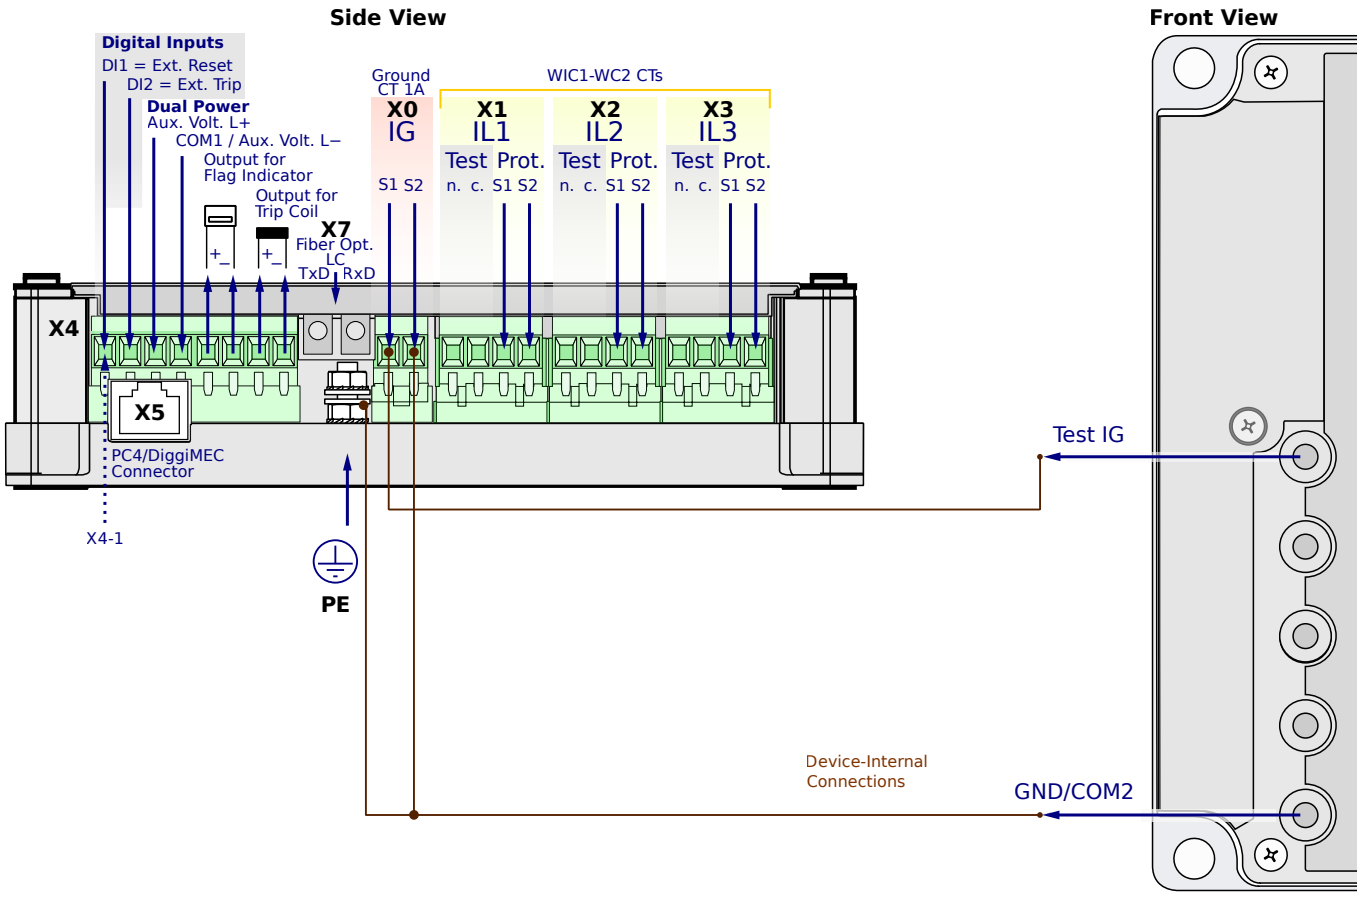


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG1PLH

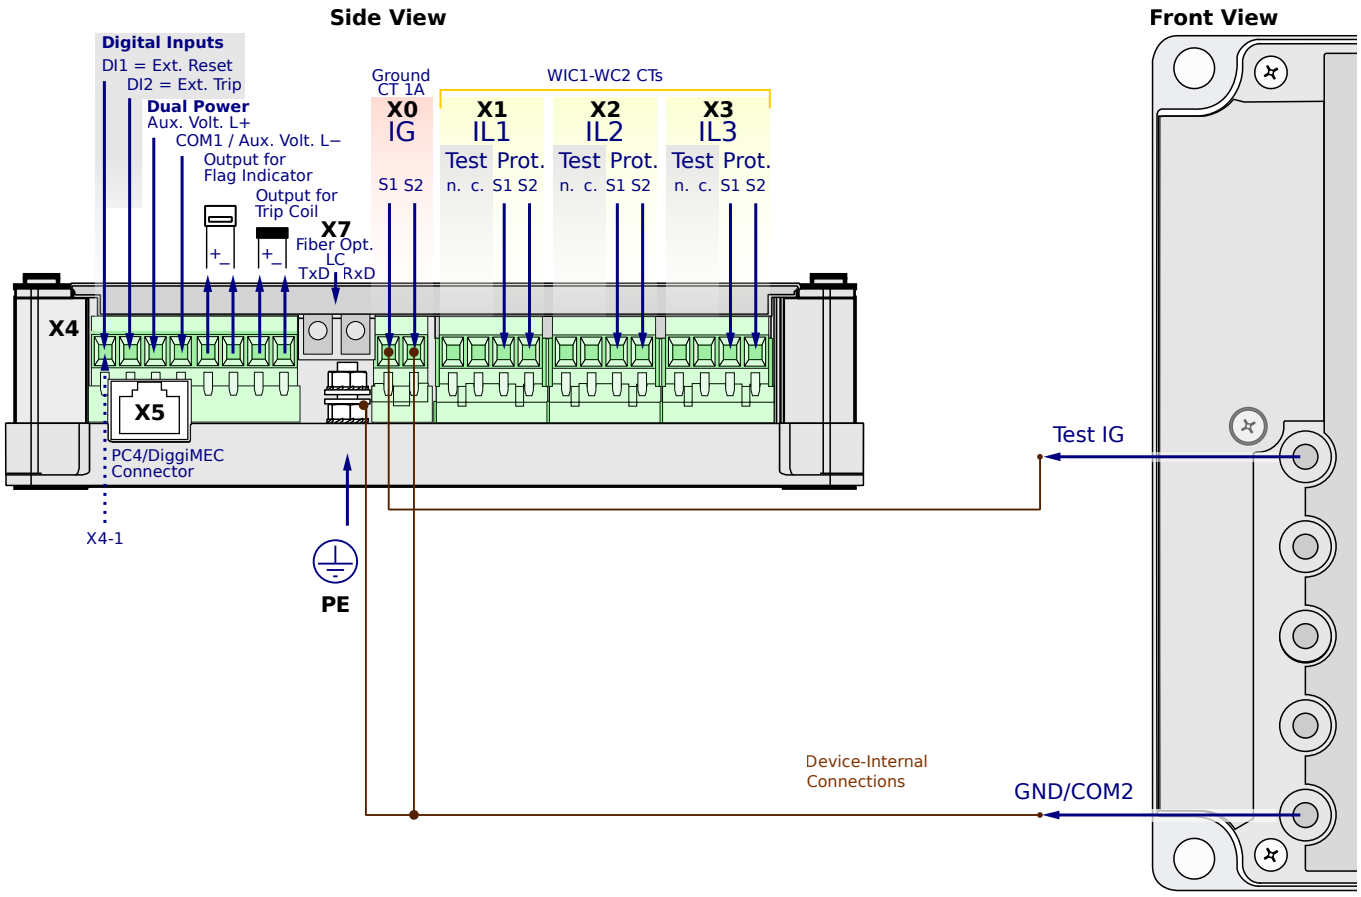


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2SA0

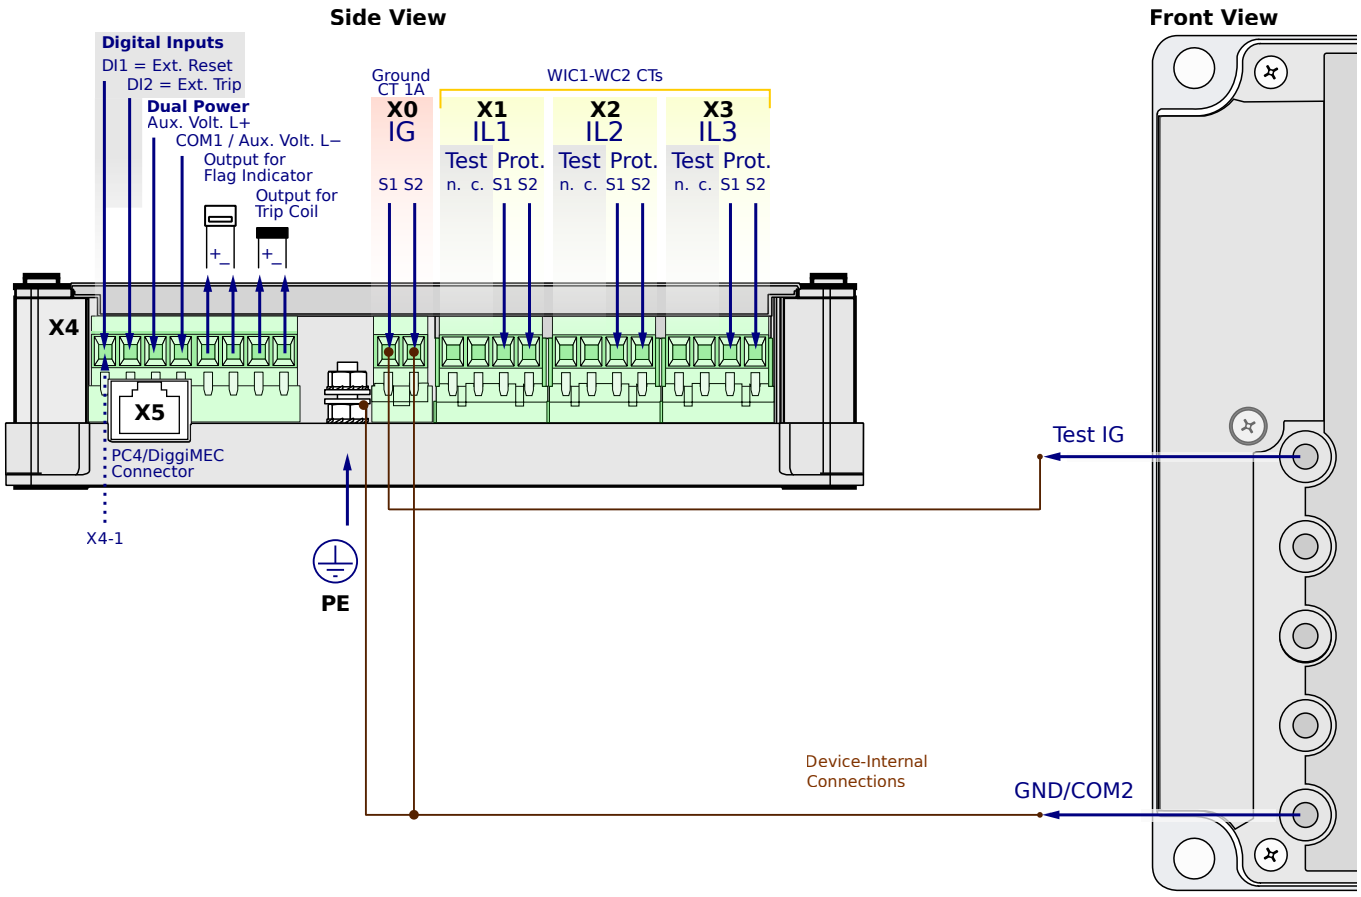


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2SAH

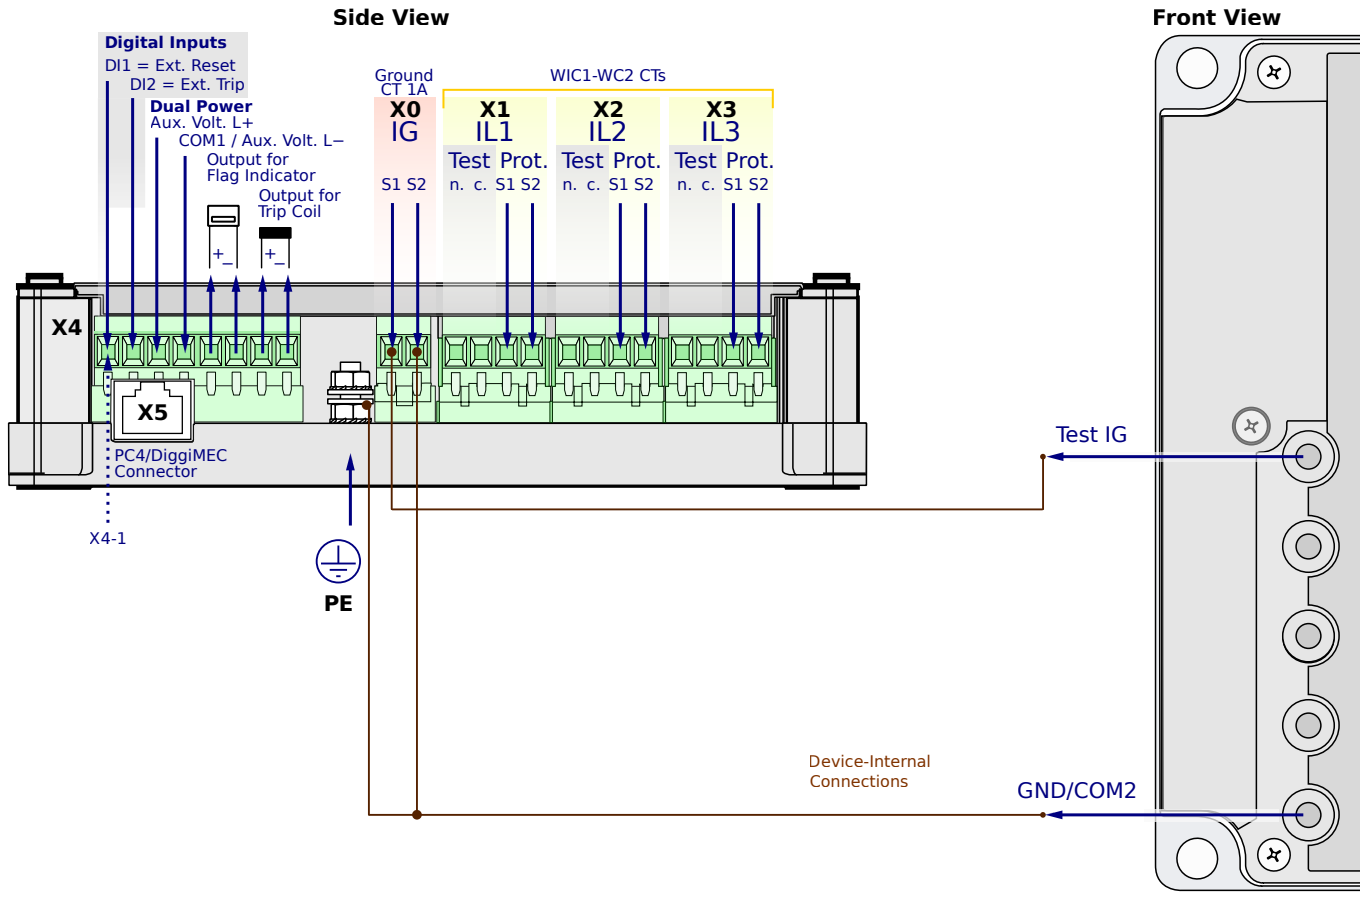


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2SB0

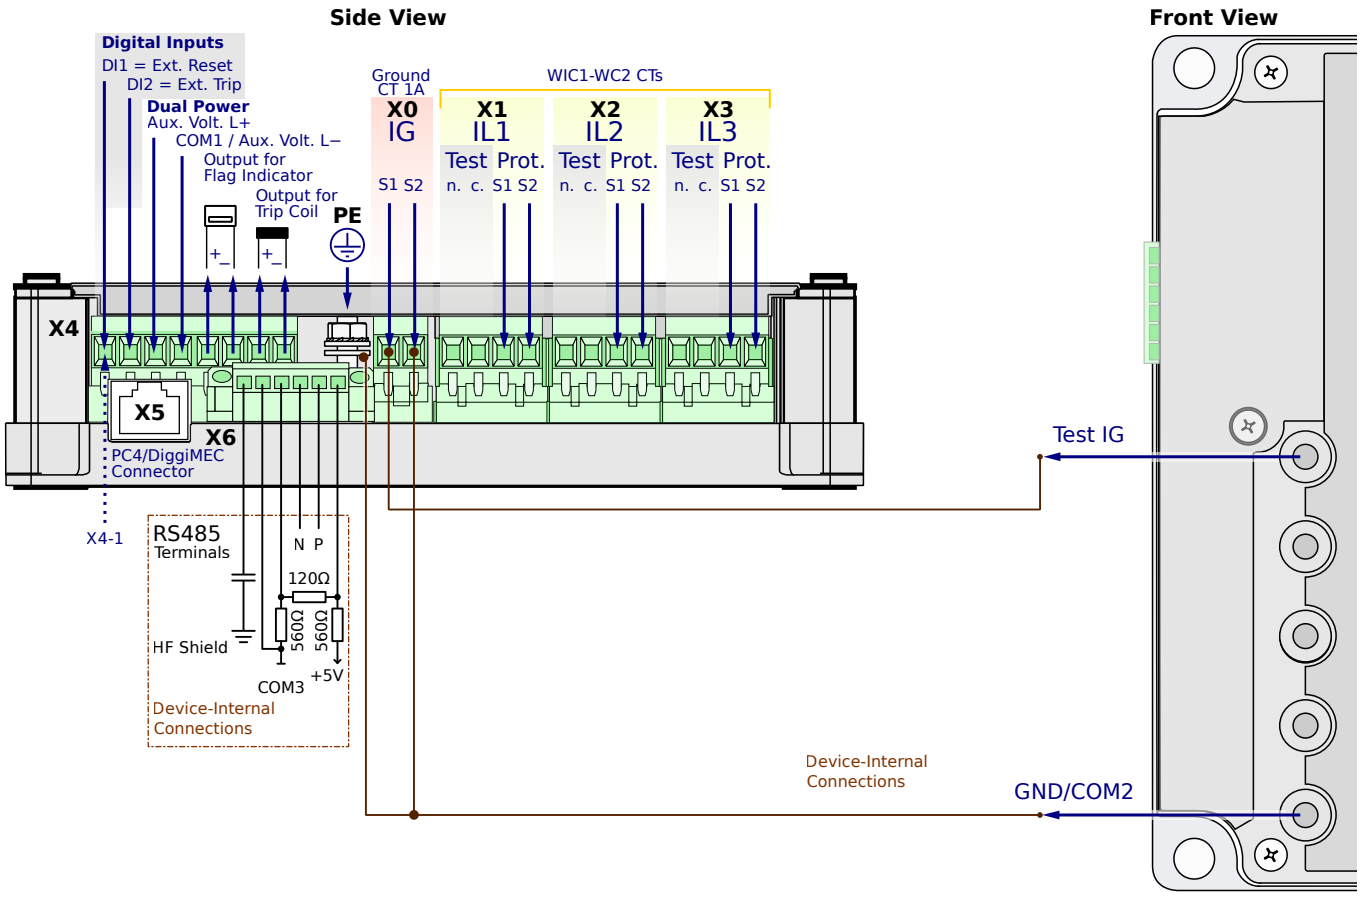


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2SBH

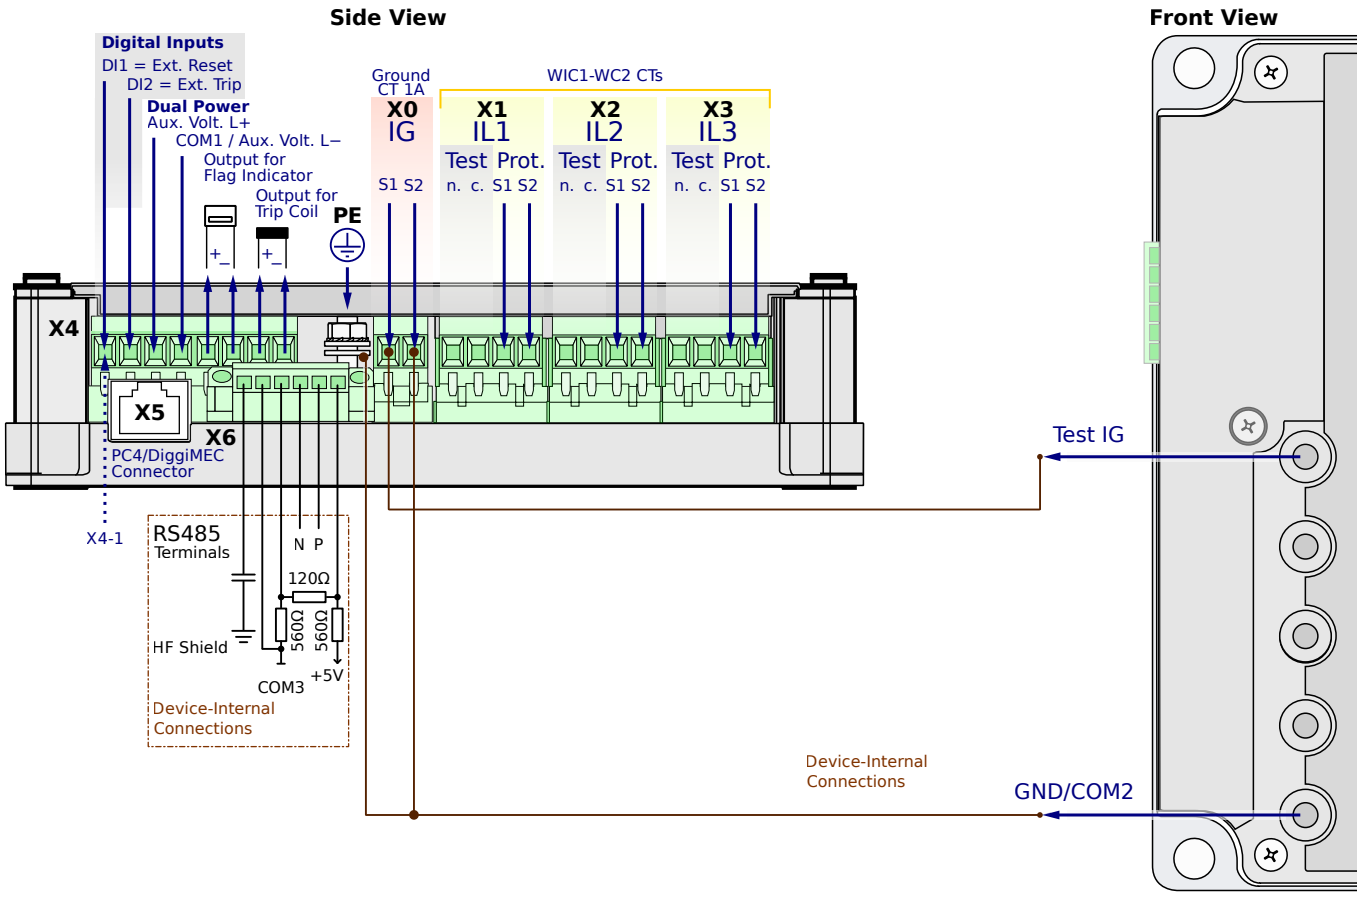


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2SC0

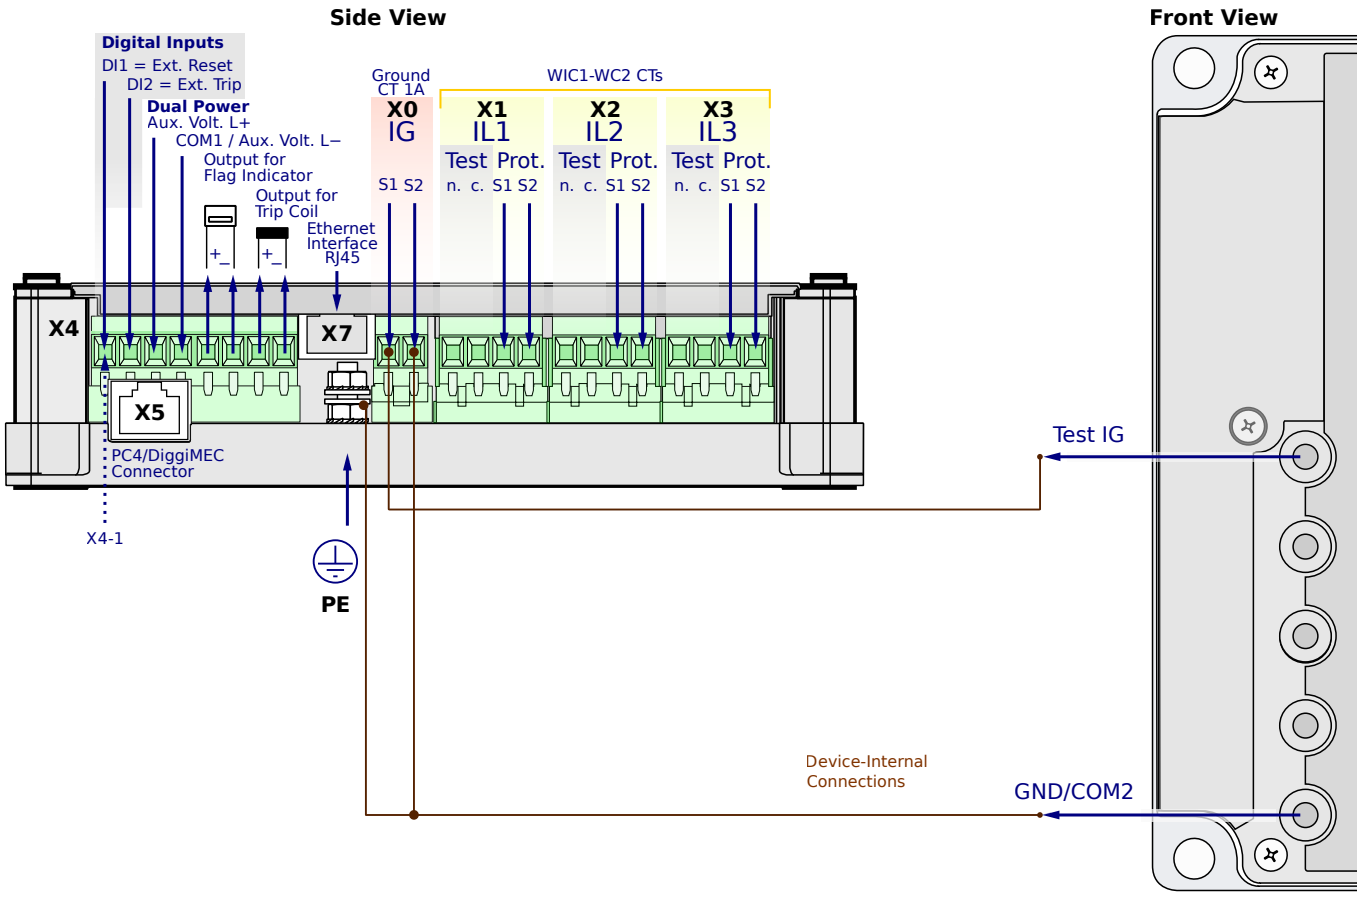


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2SCH

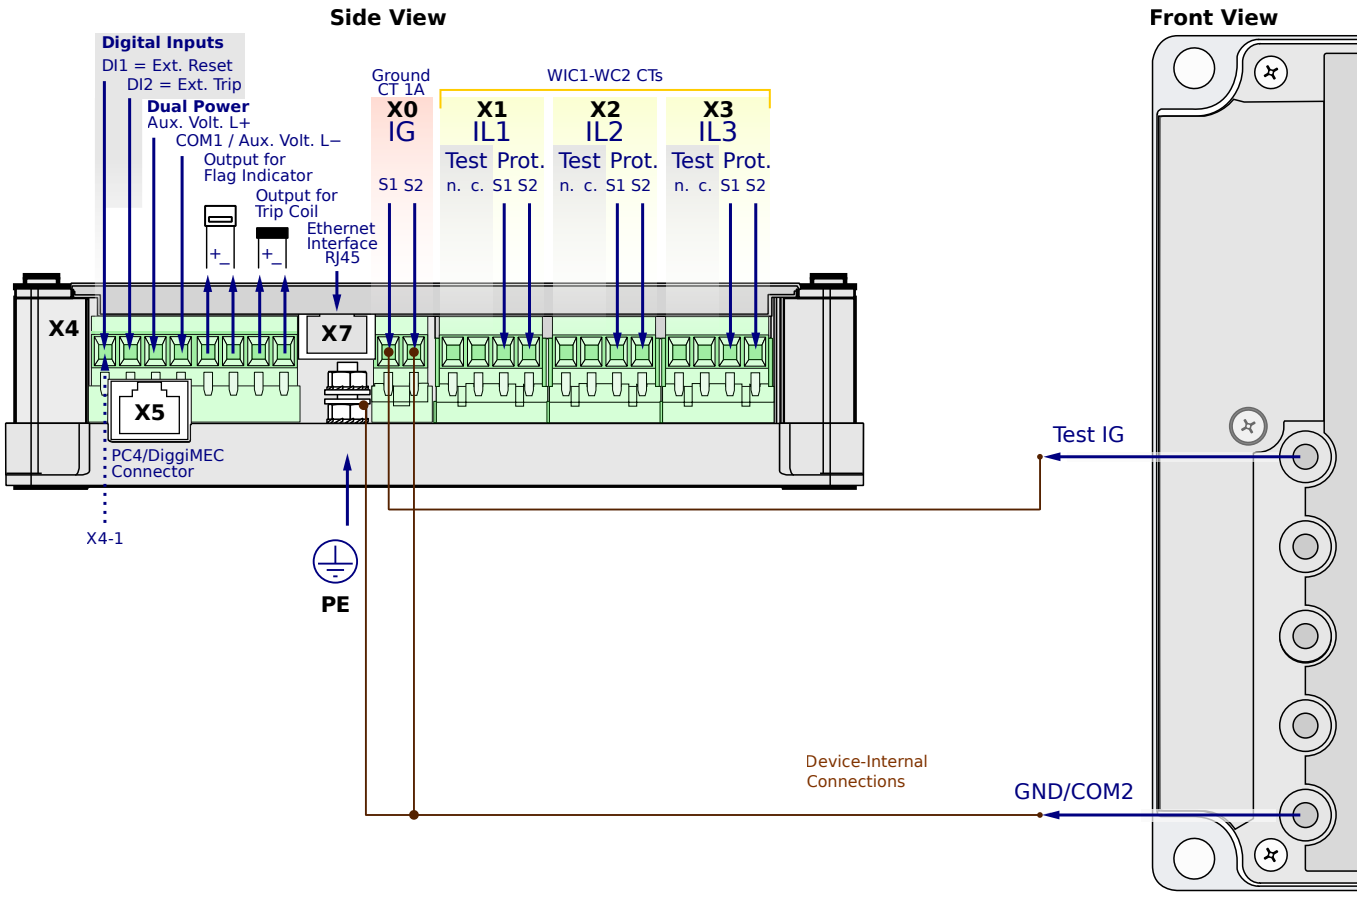


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2SL0

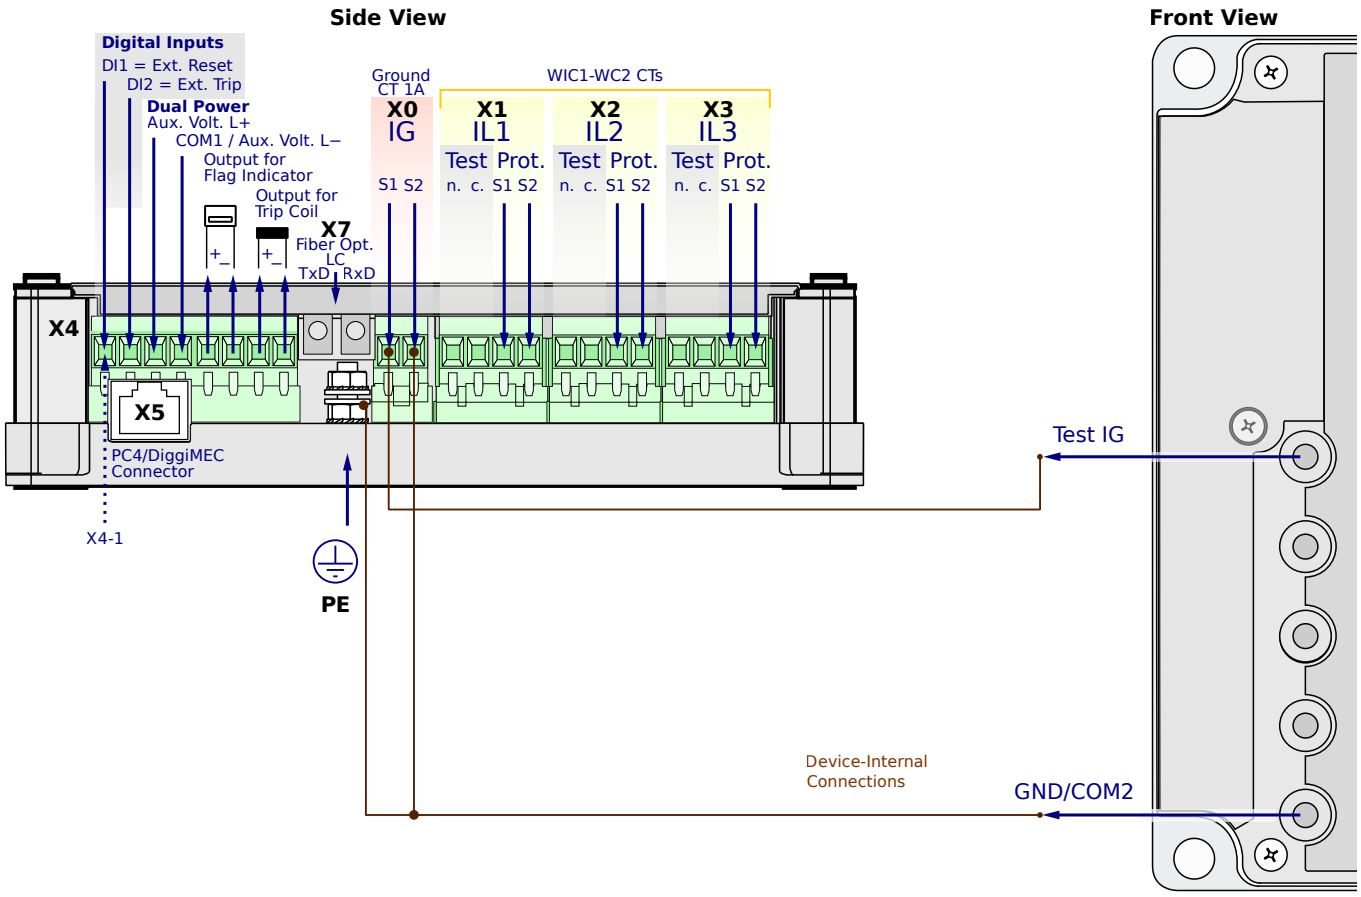


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2SLH

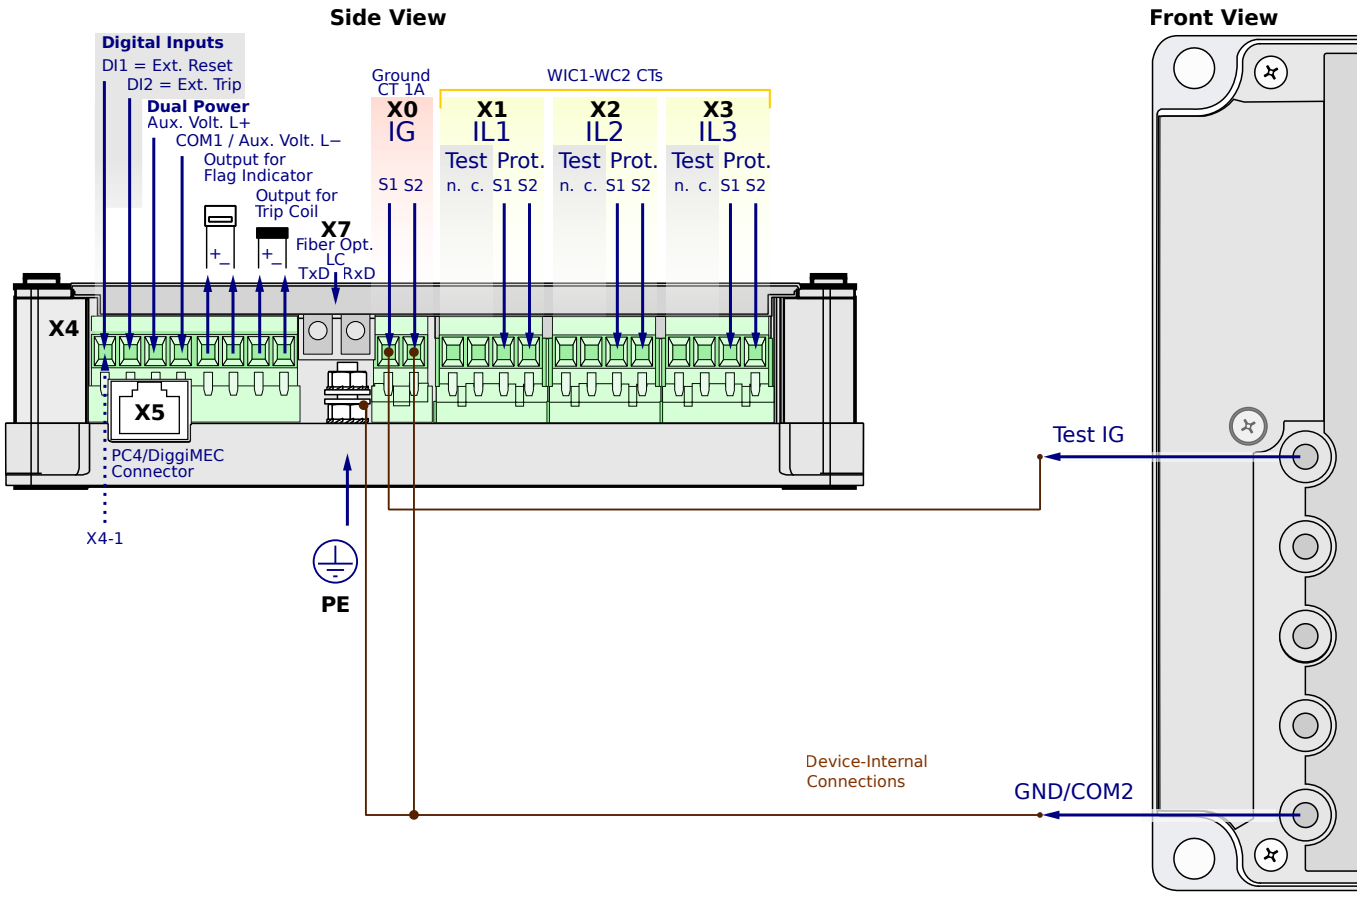


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2AA0

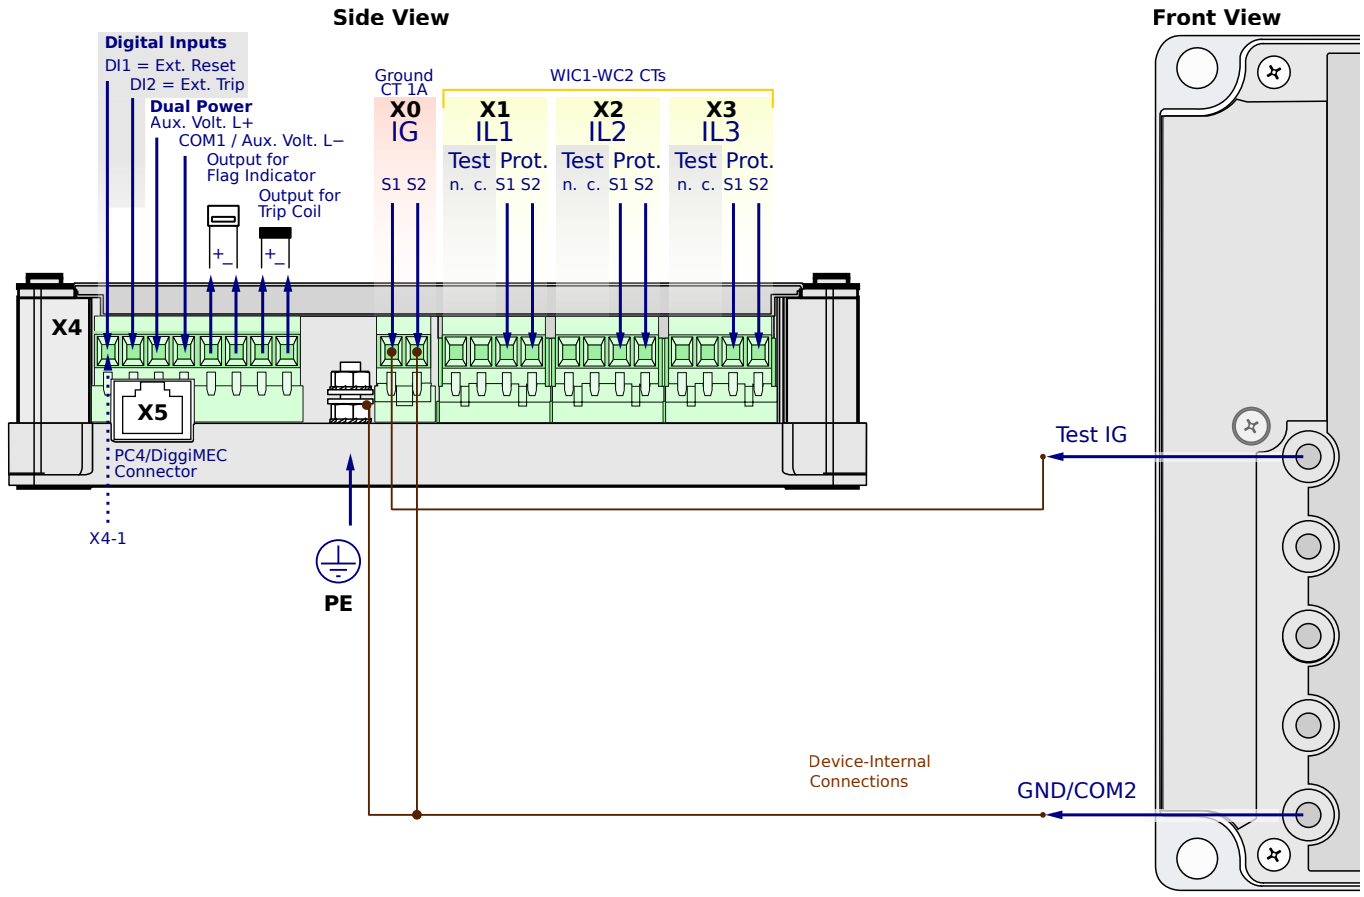


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2AAH

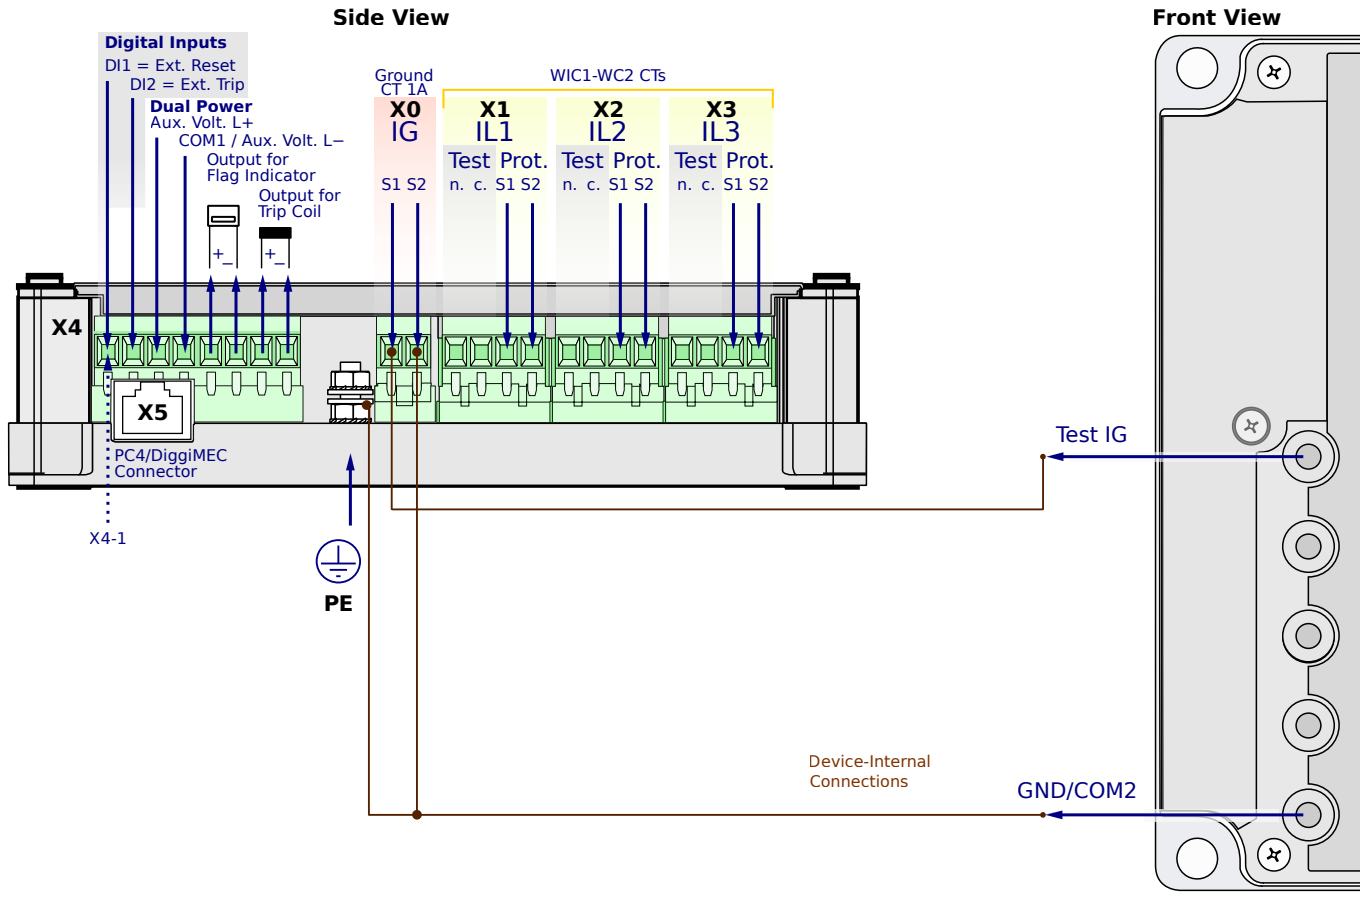


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2AB0

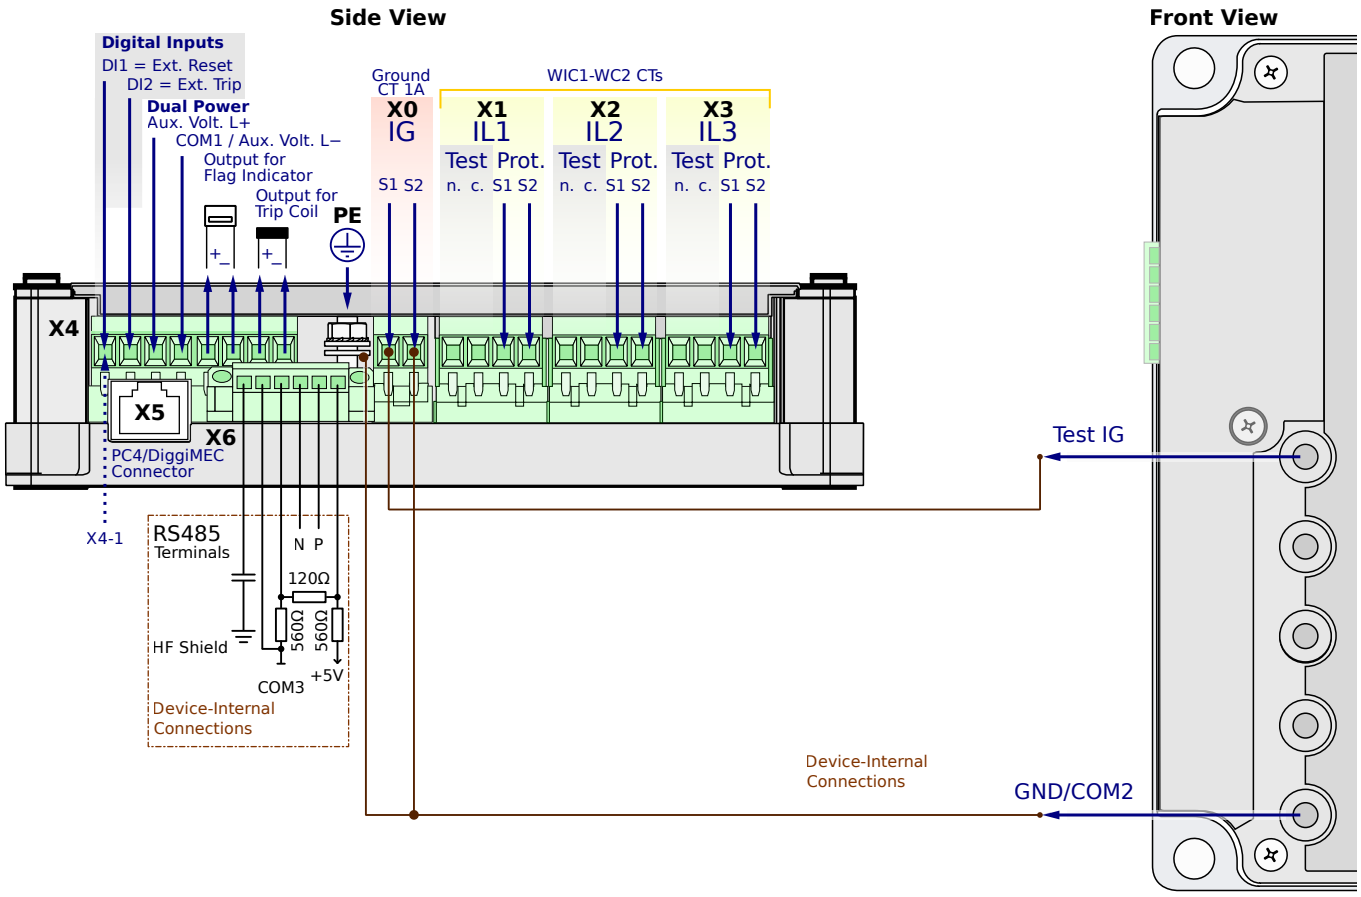


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2ABH

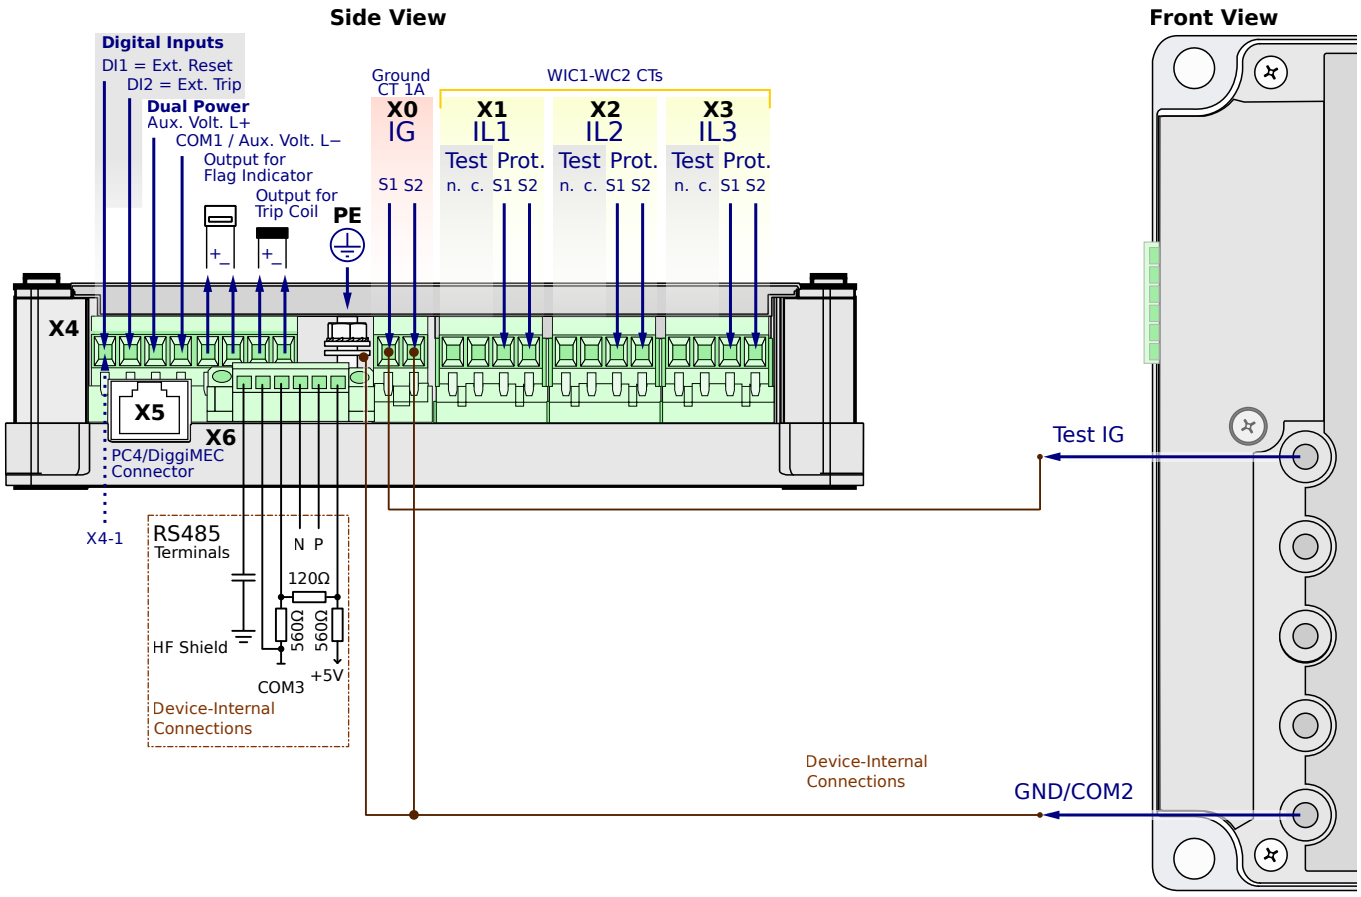


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2AC0

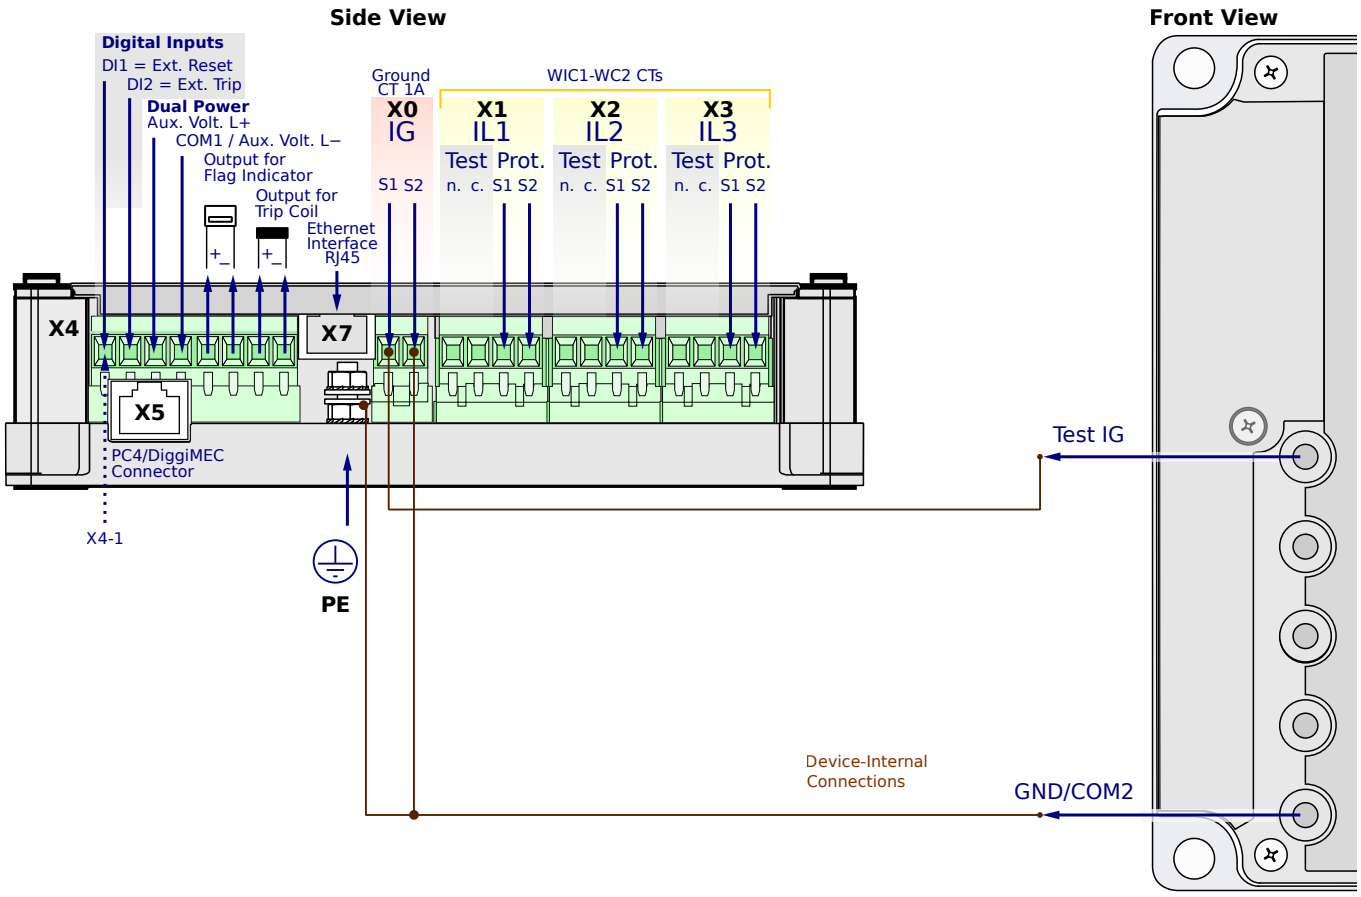


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2ACH

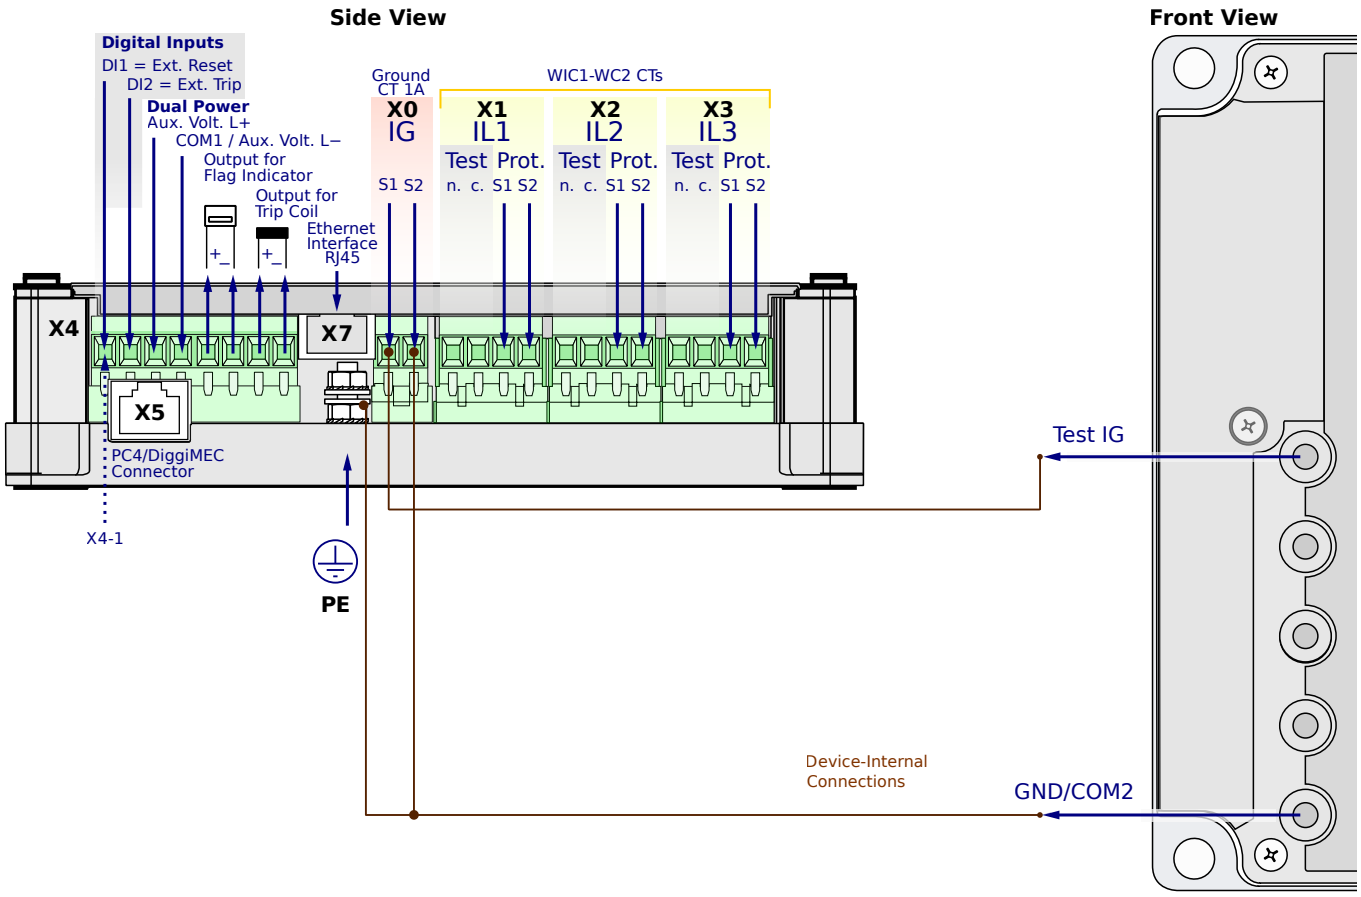


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2AL0

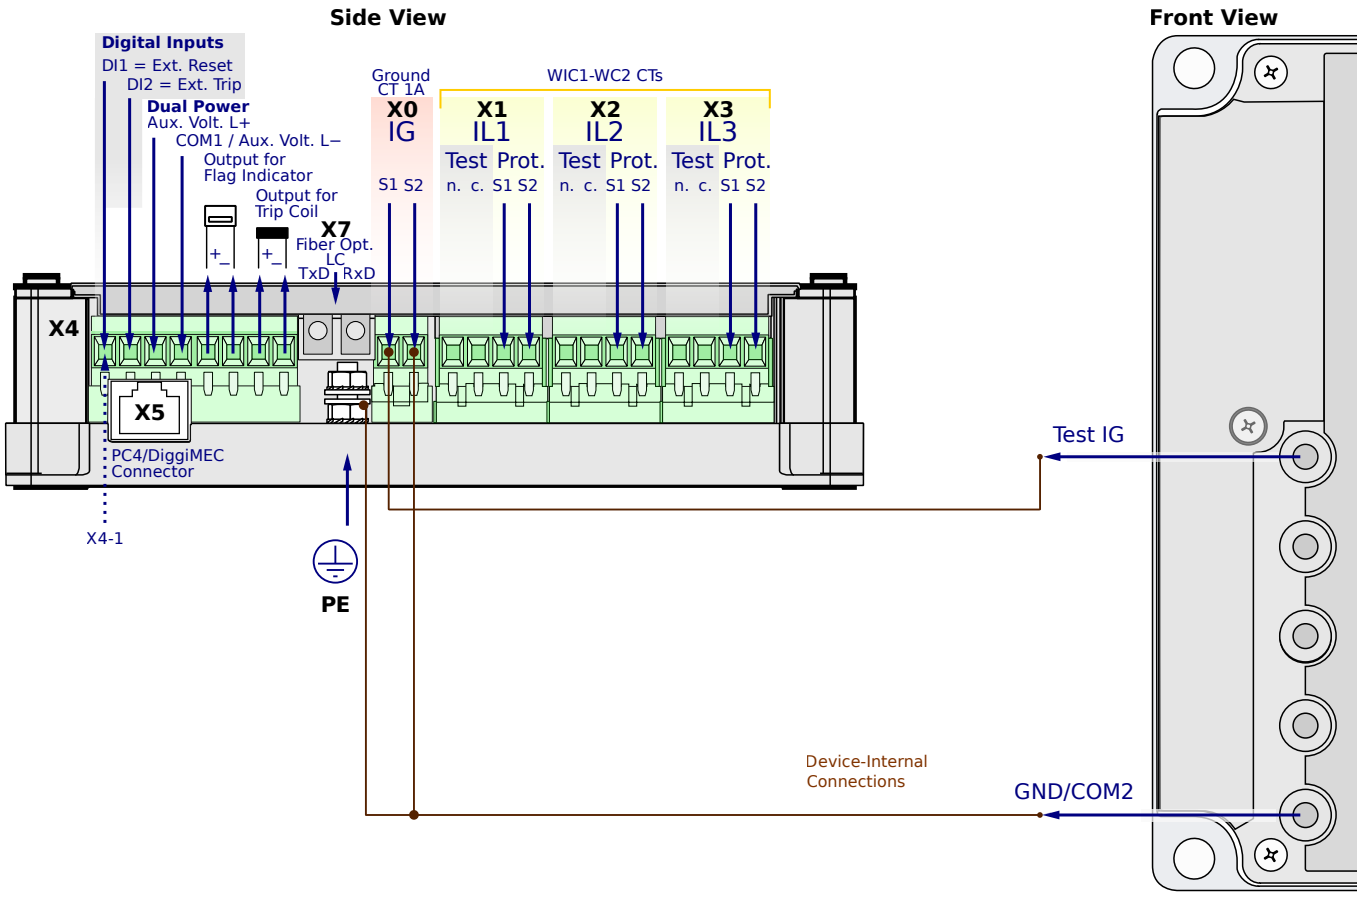


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2ALH

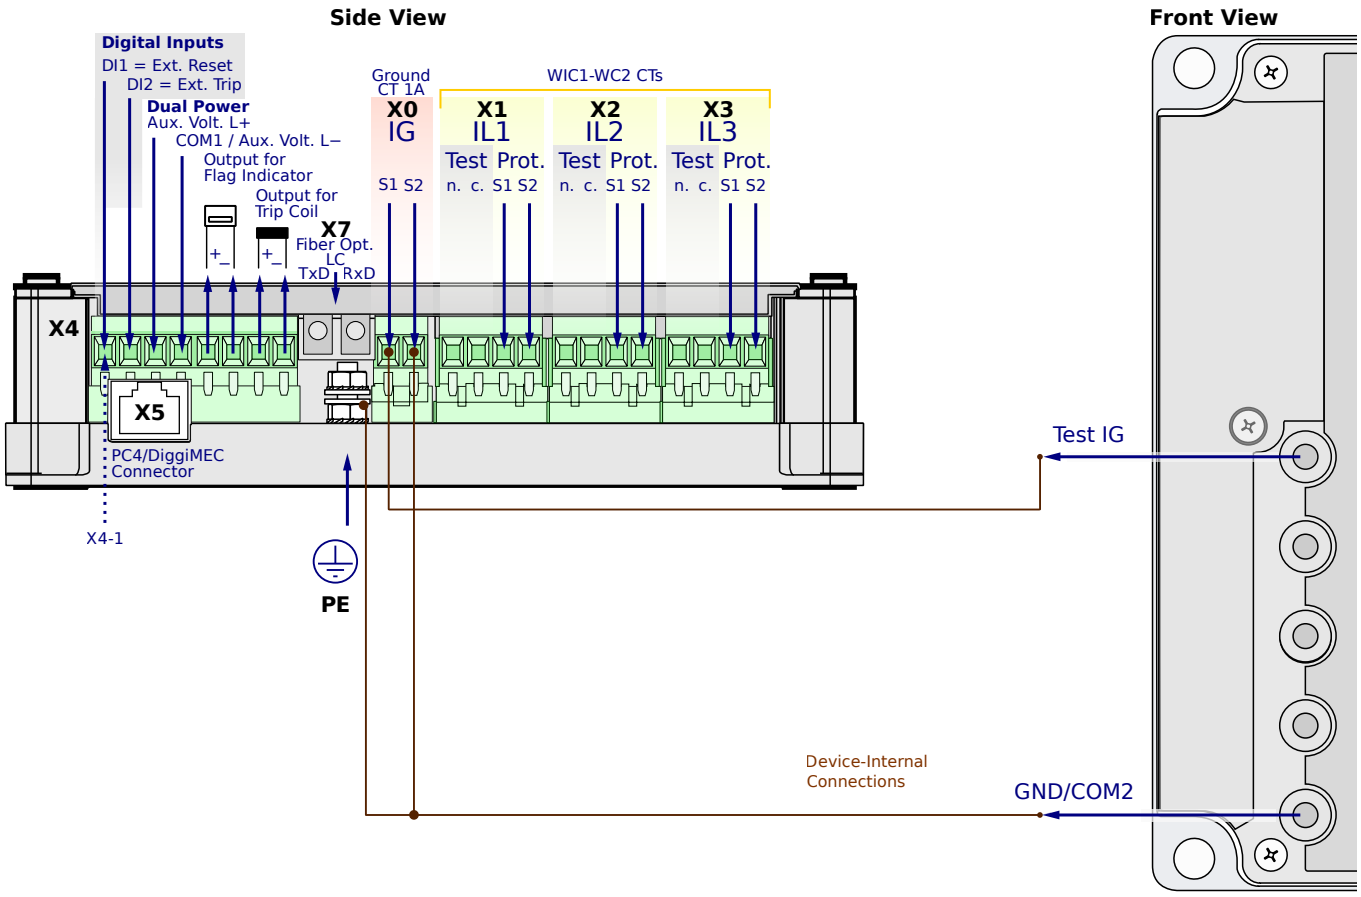


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2PA0

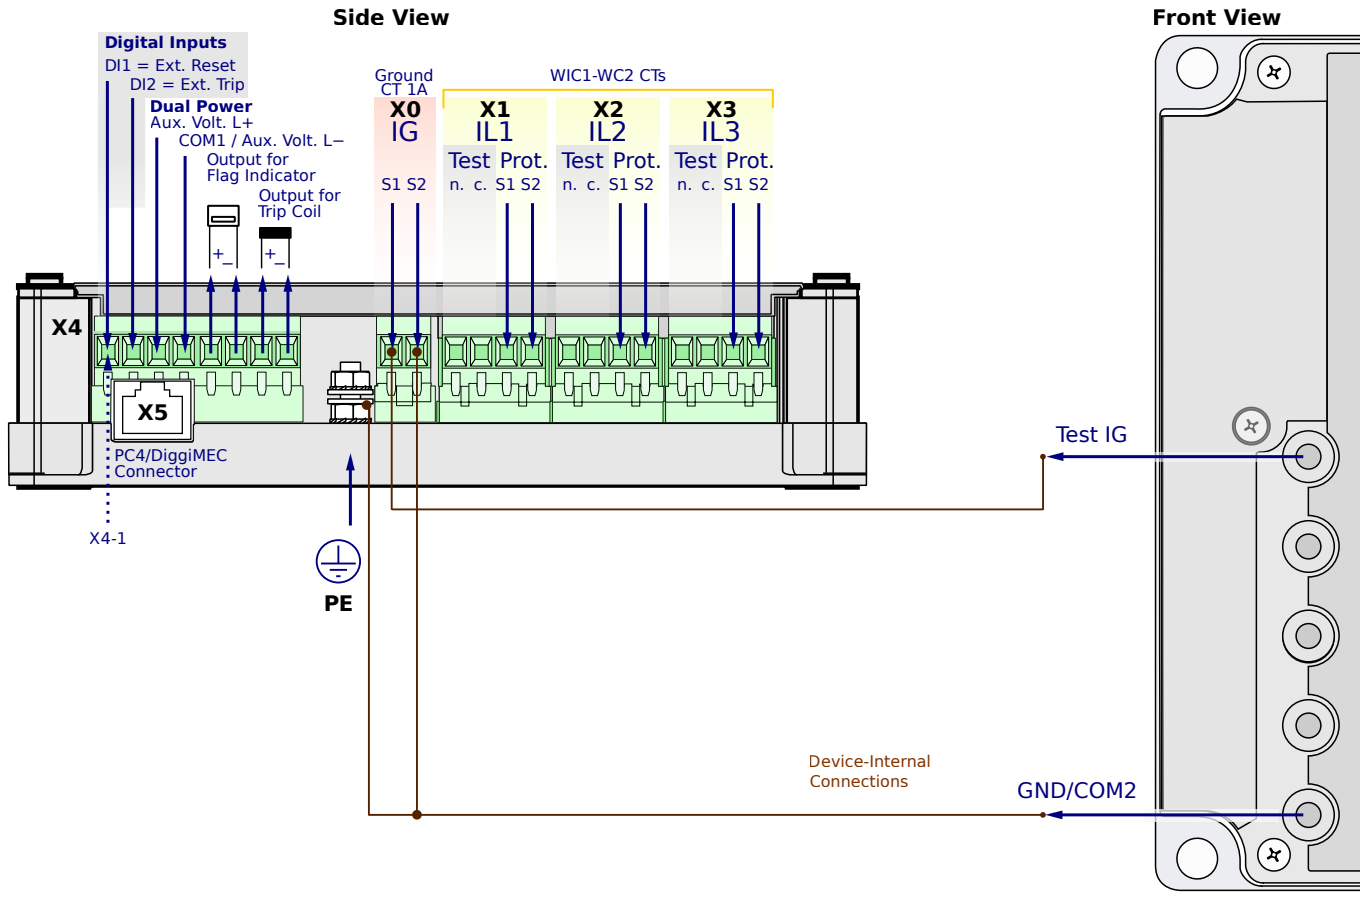


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2PAH

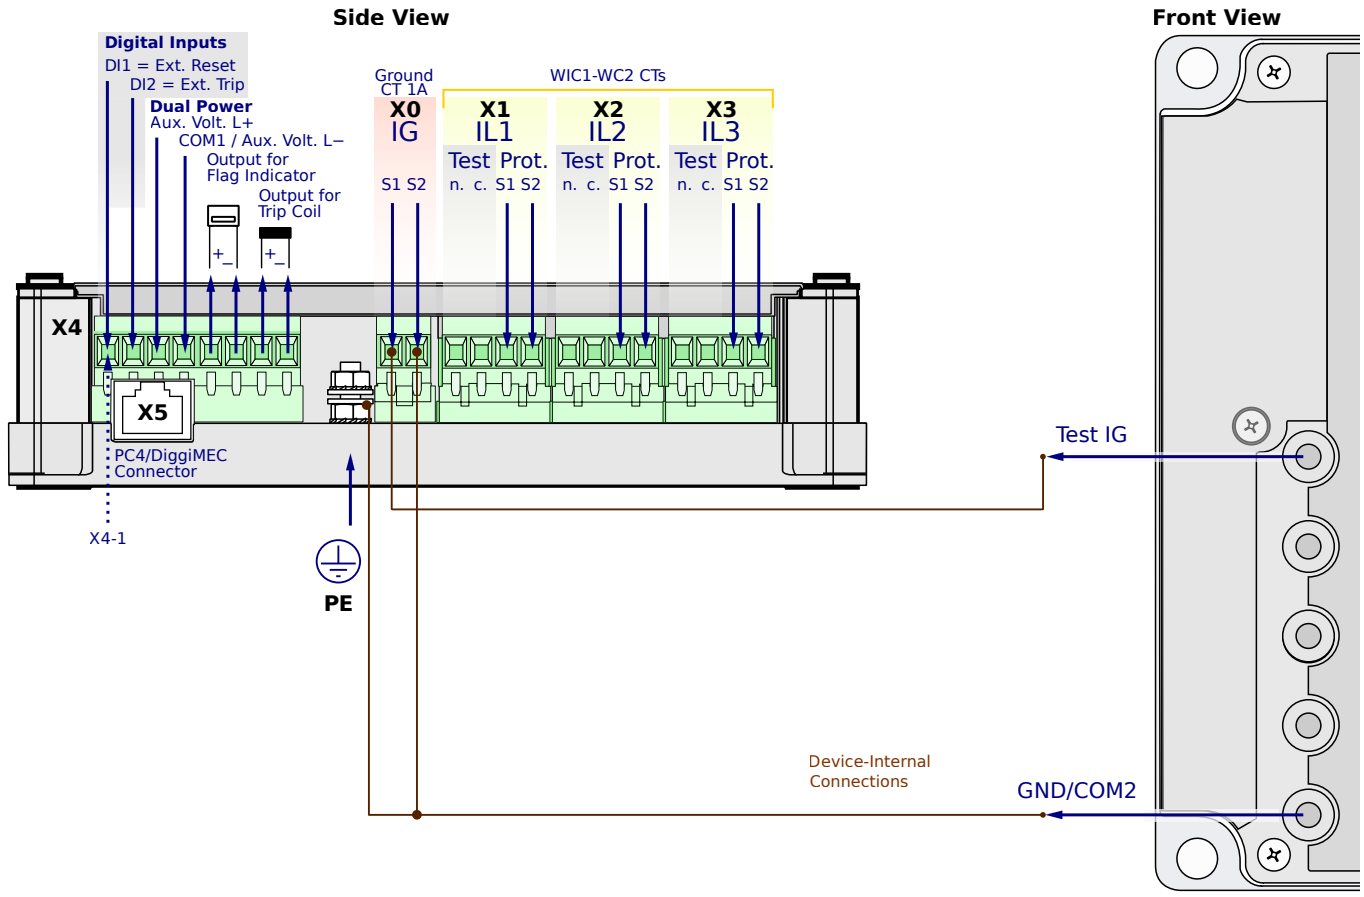


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0NG2PB0

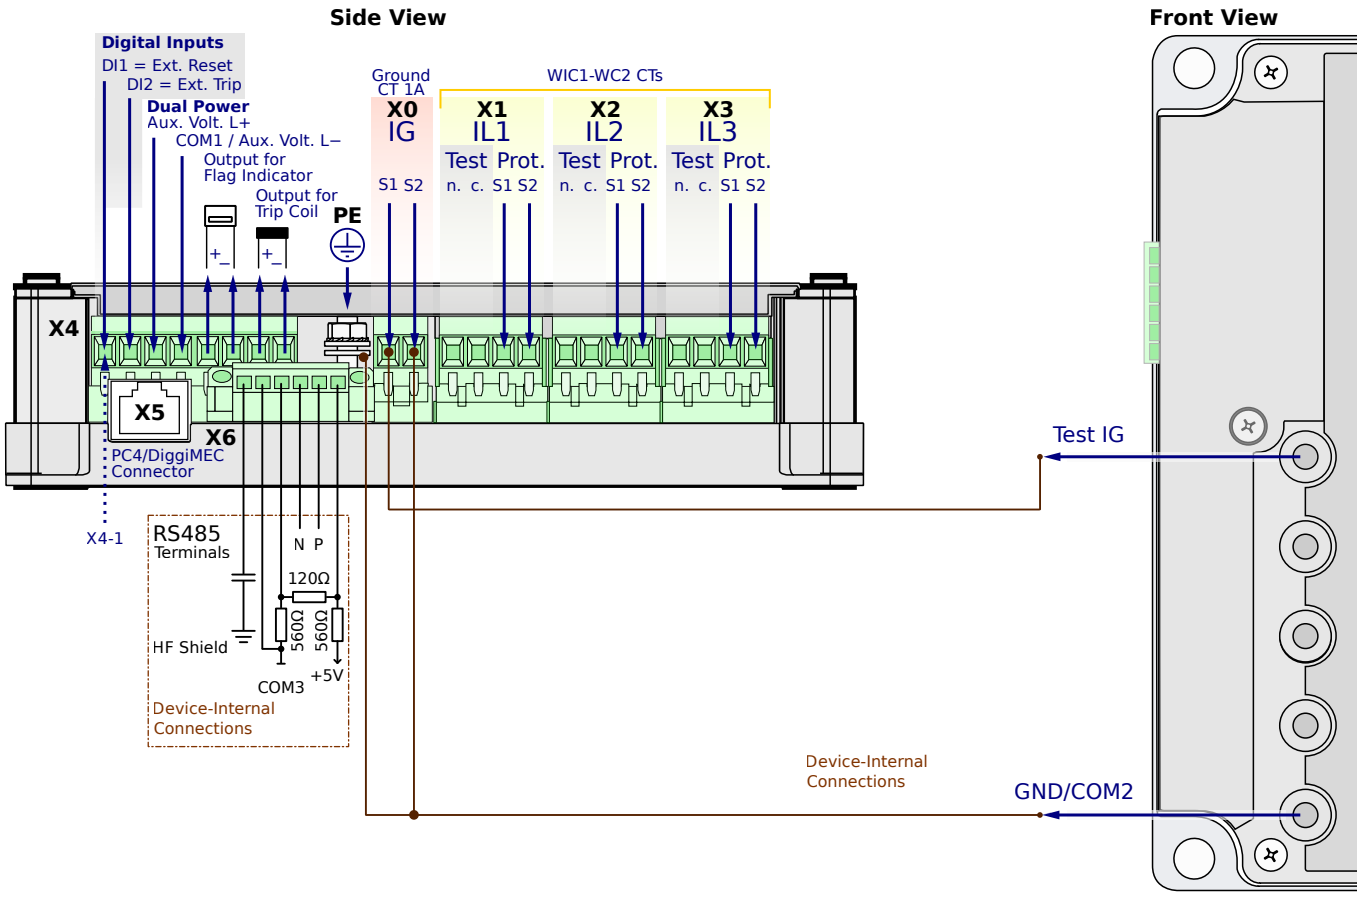


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2PBH

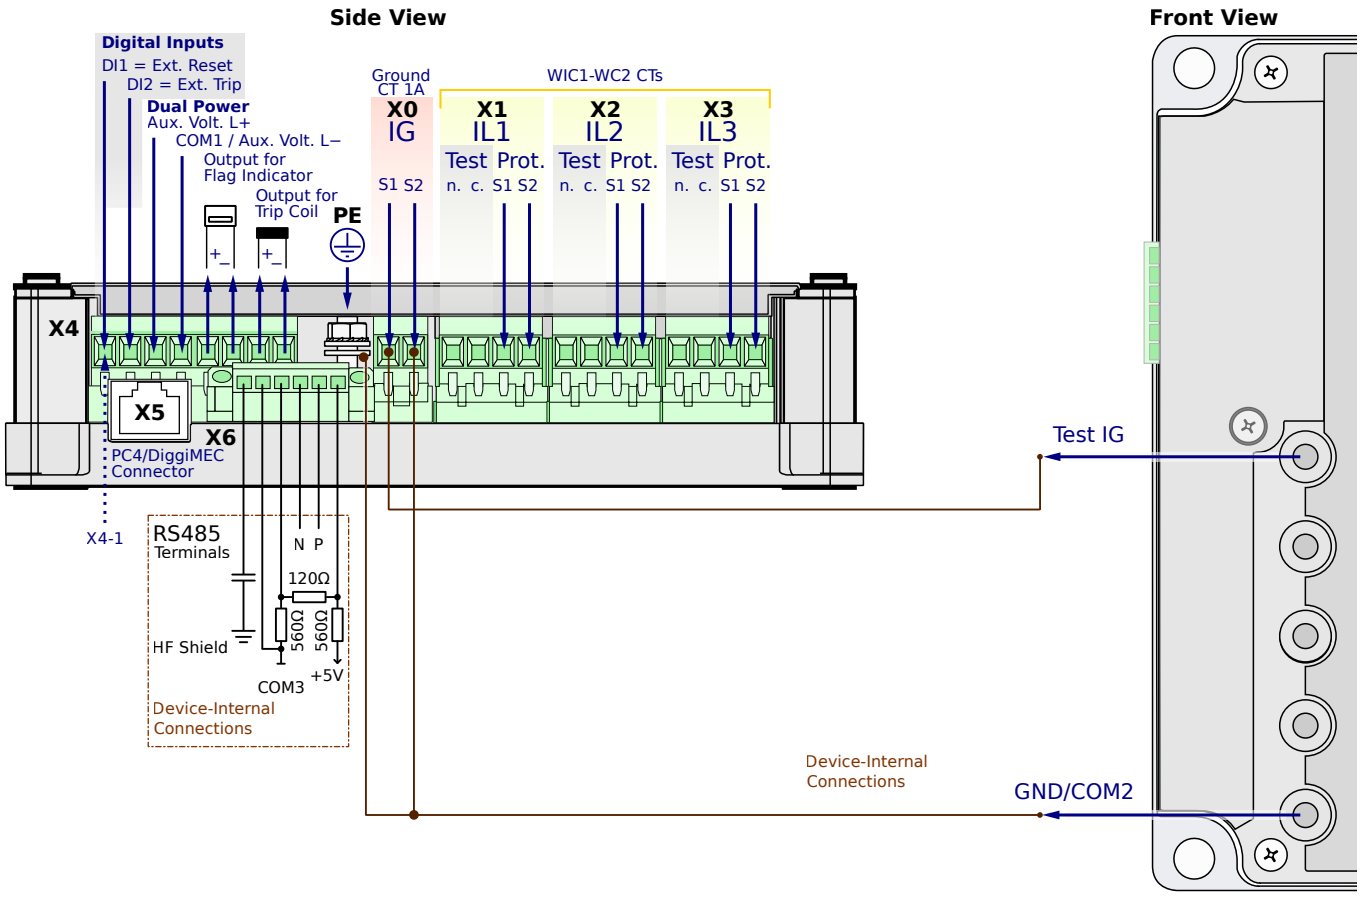


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0NG2PC0

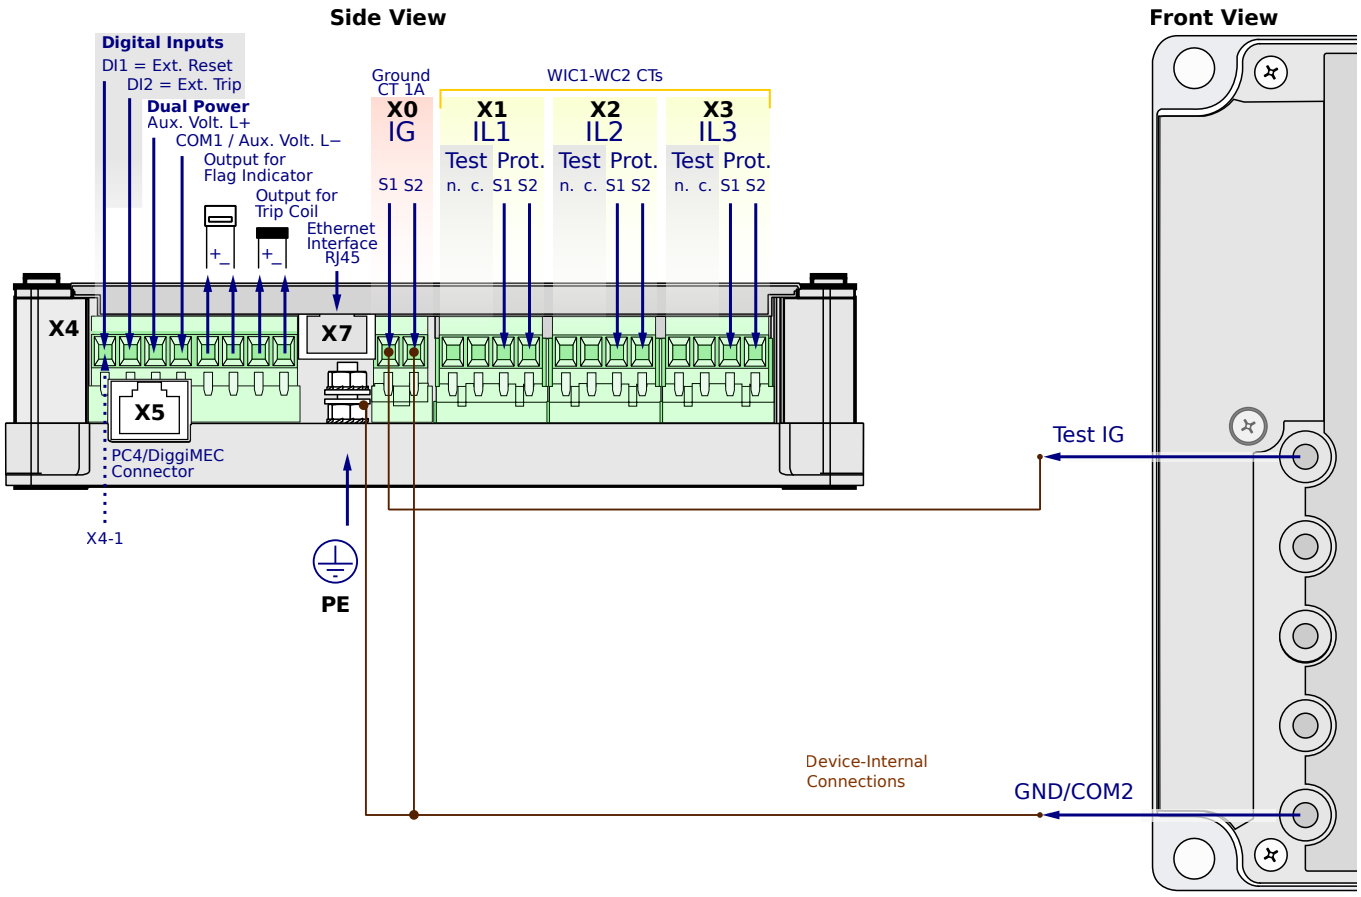


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2PCH

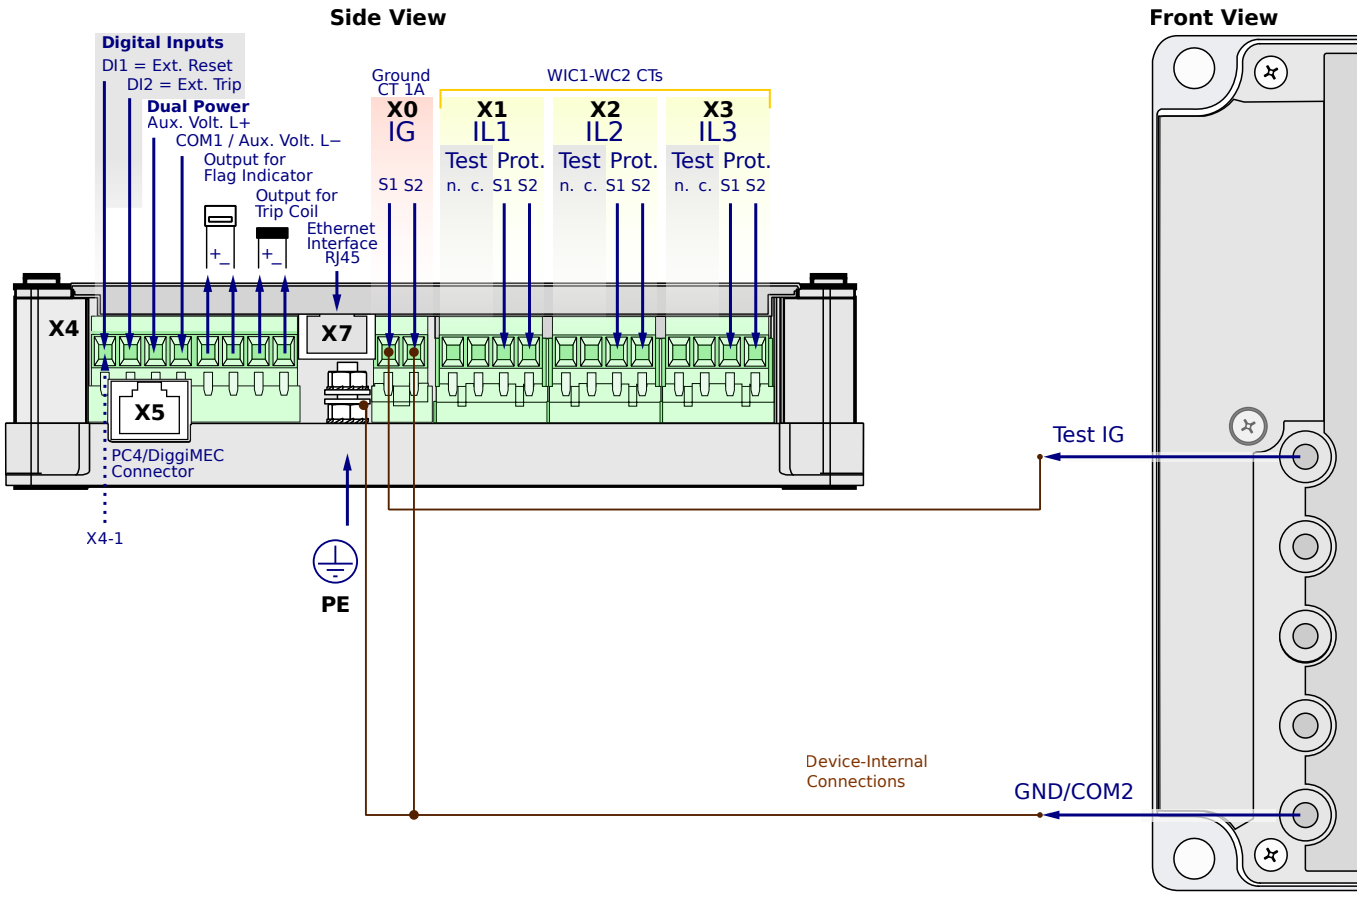


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0NG2PL0

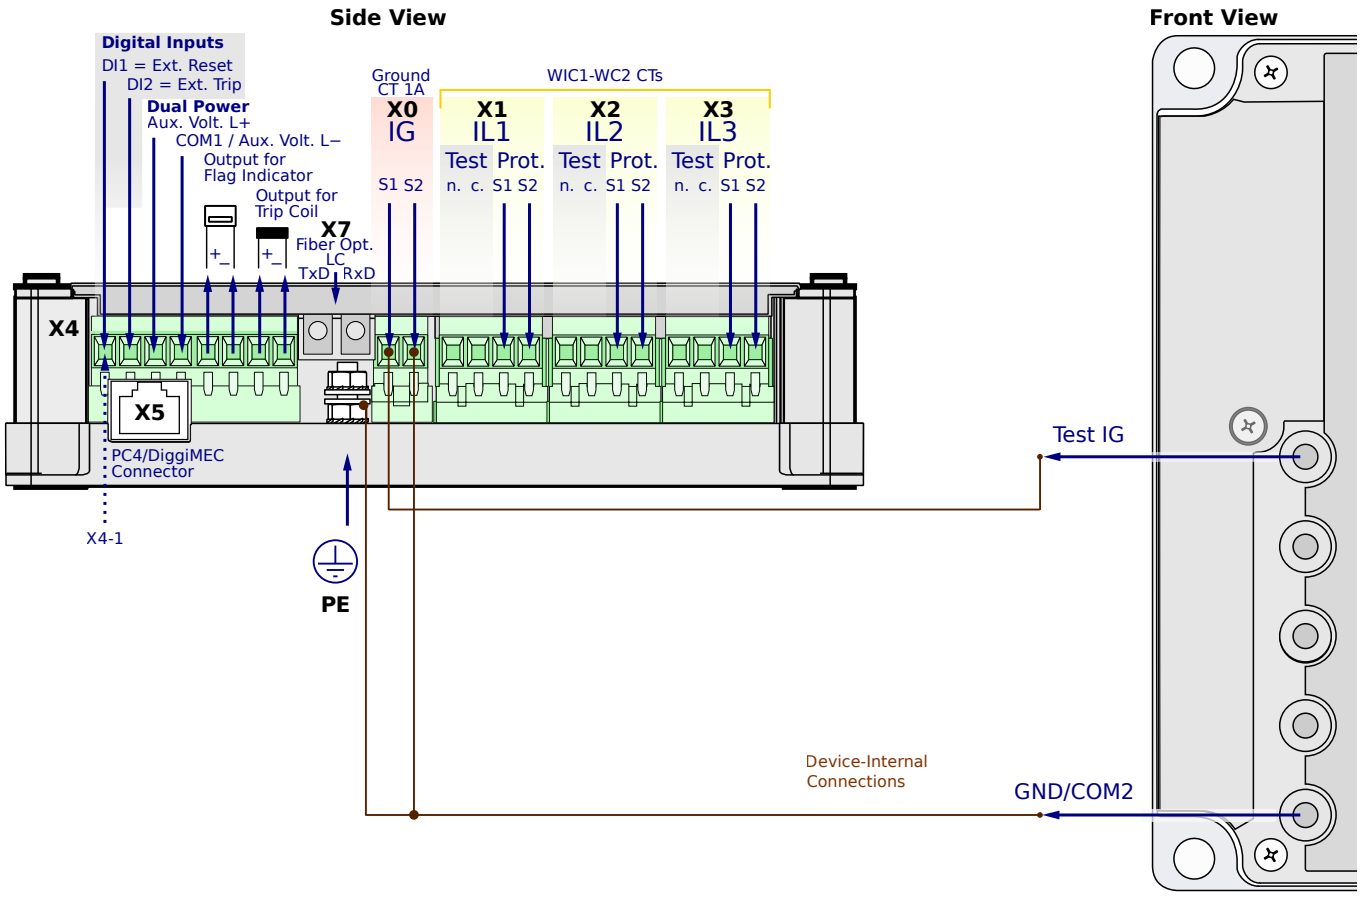


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0NG2PLH

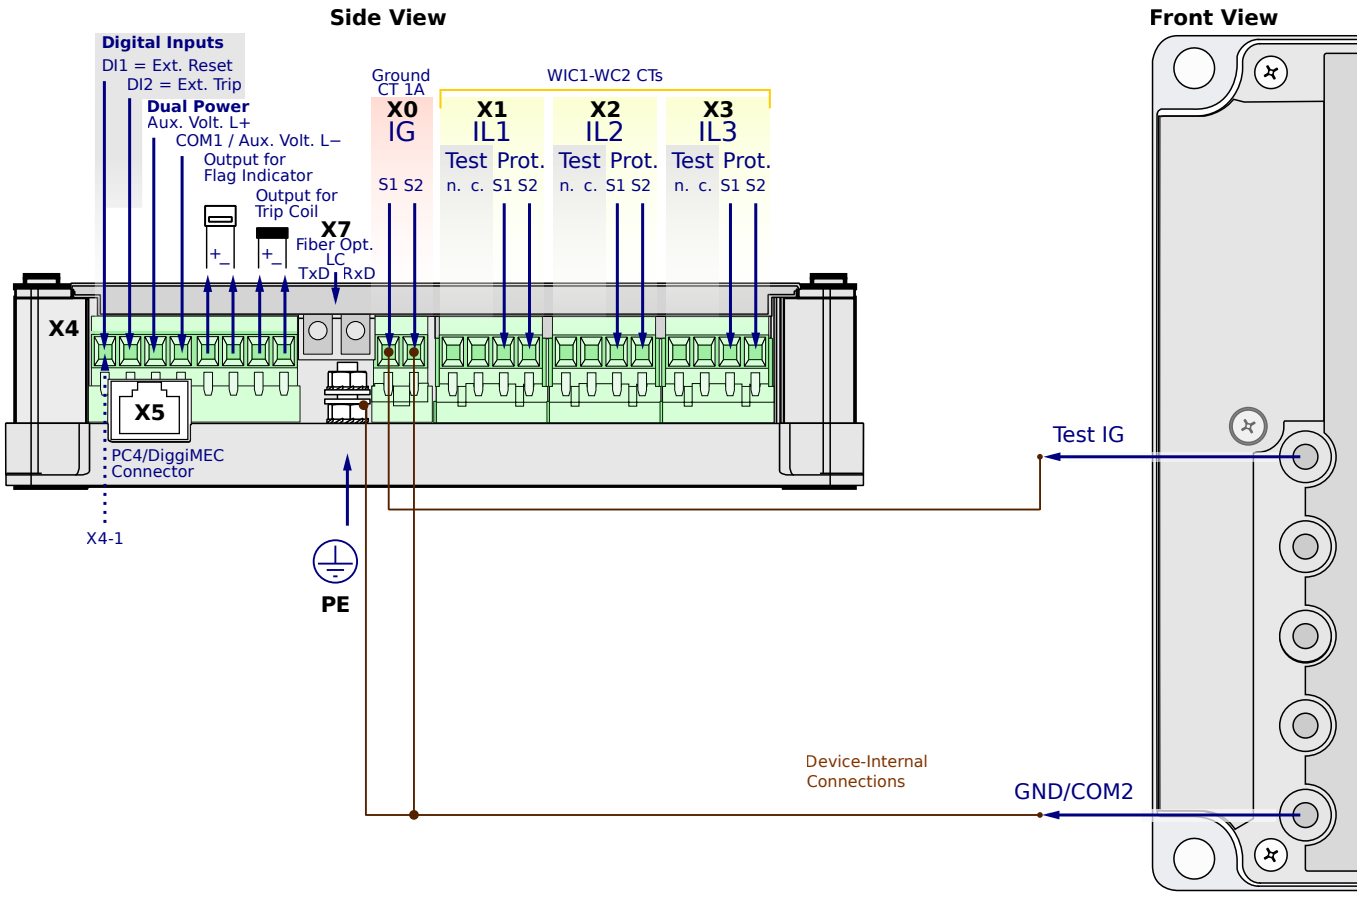


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0SA0

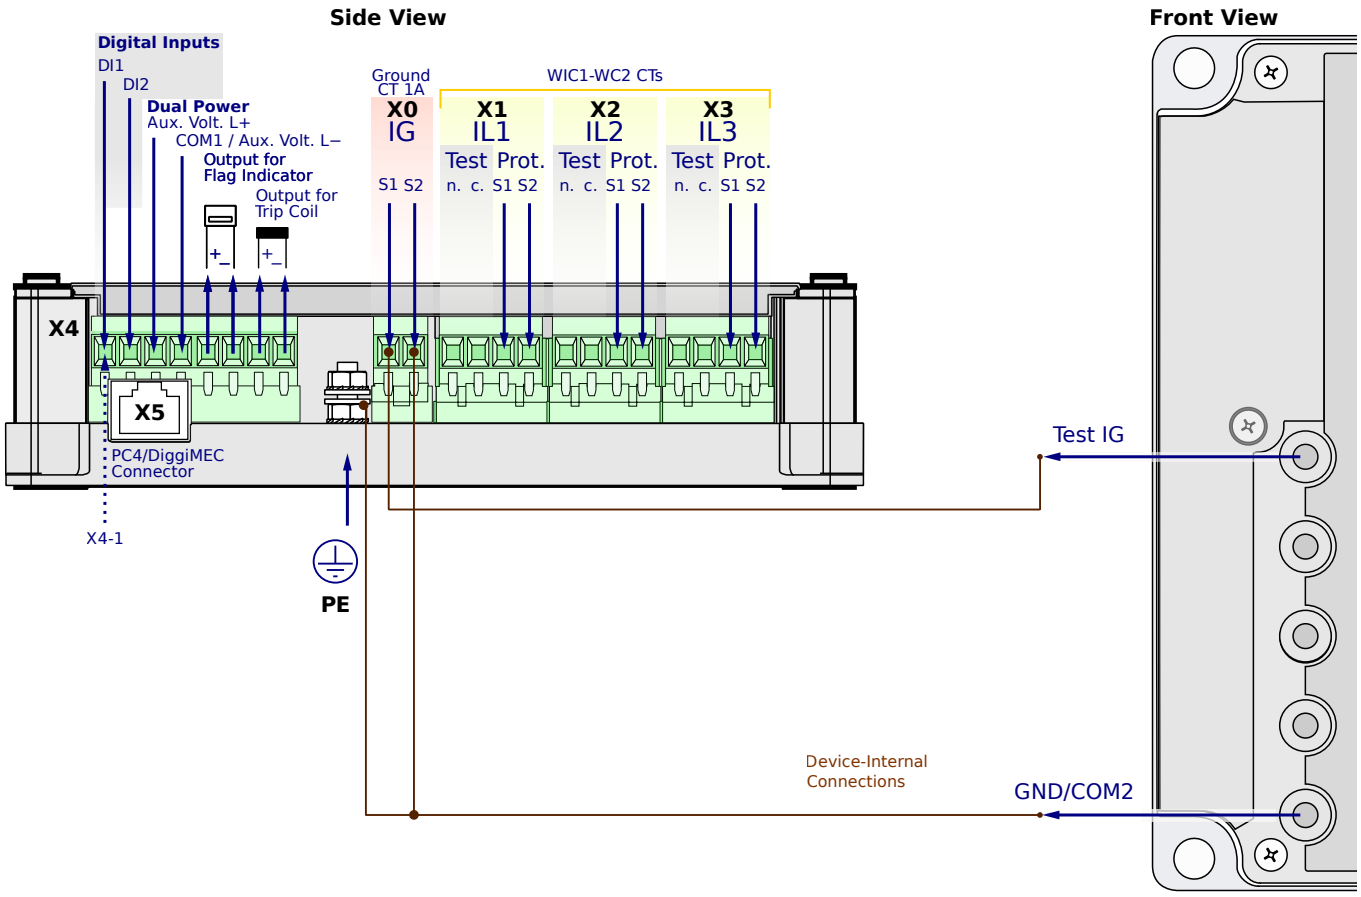


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0SAH

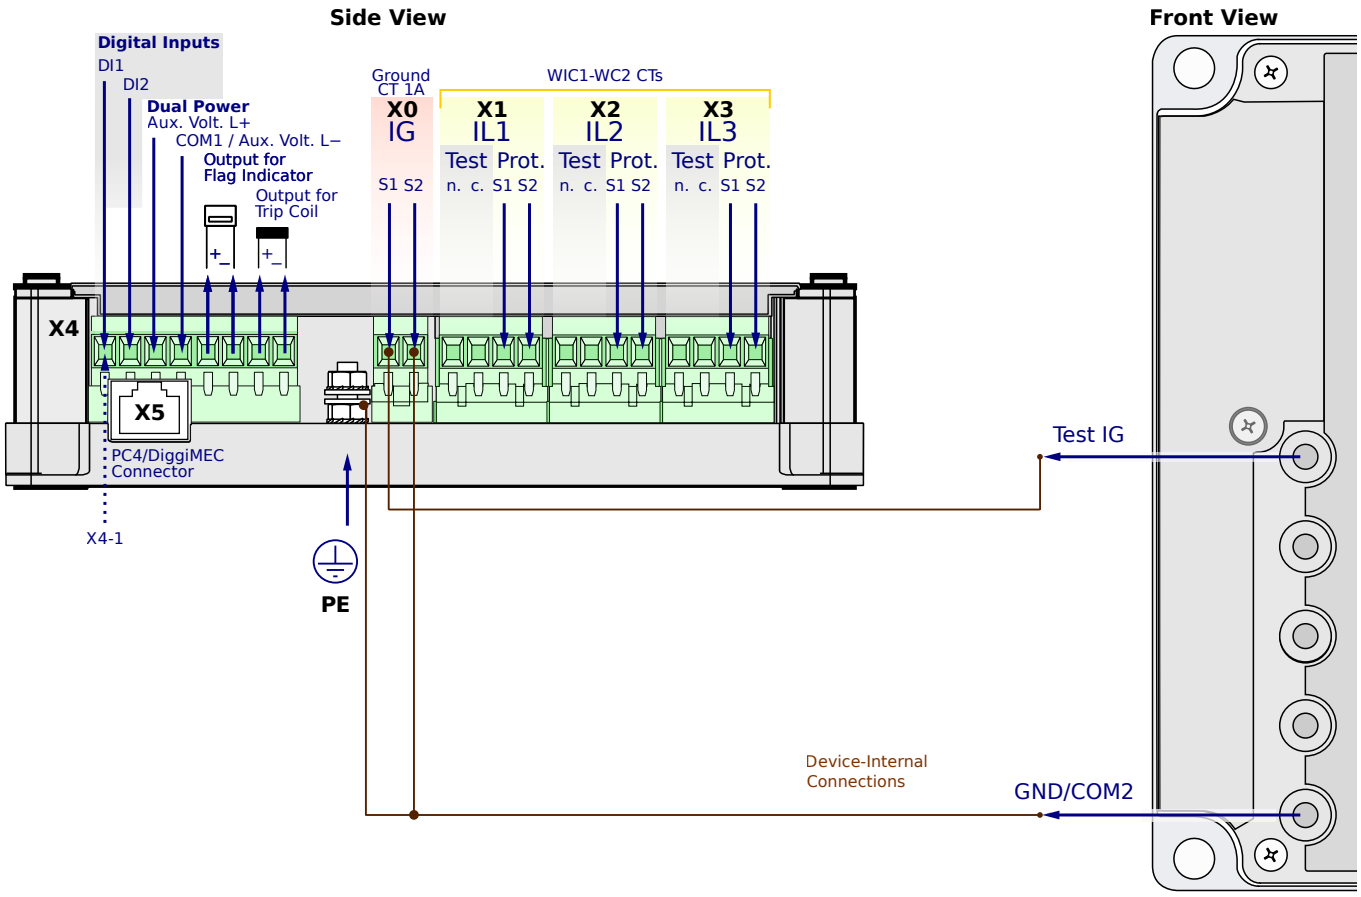


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0SB0

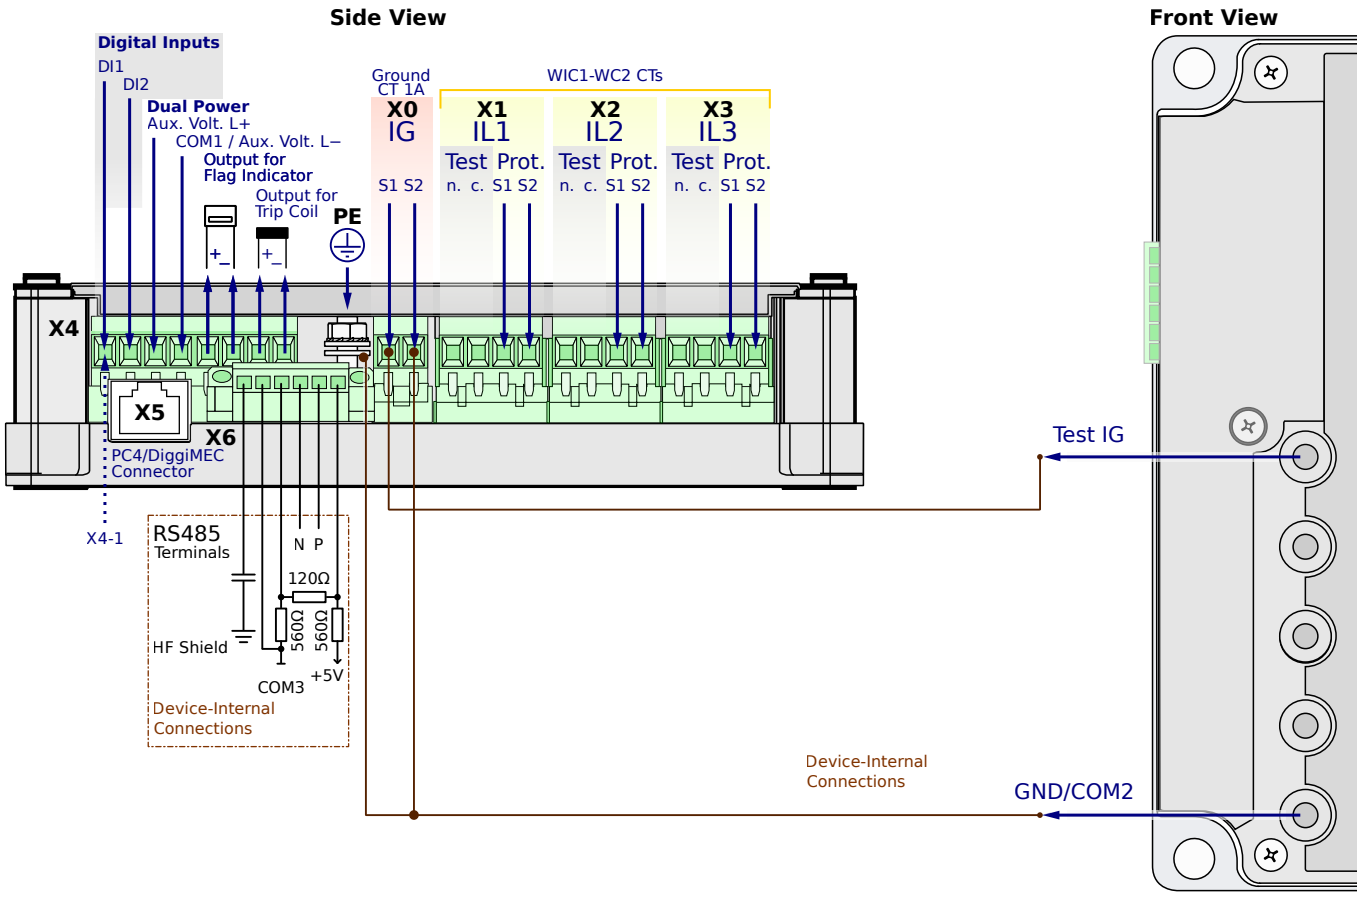


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0SBH

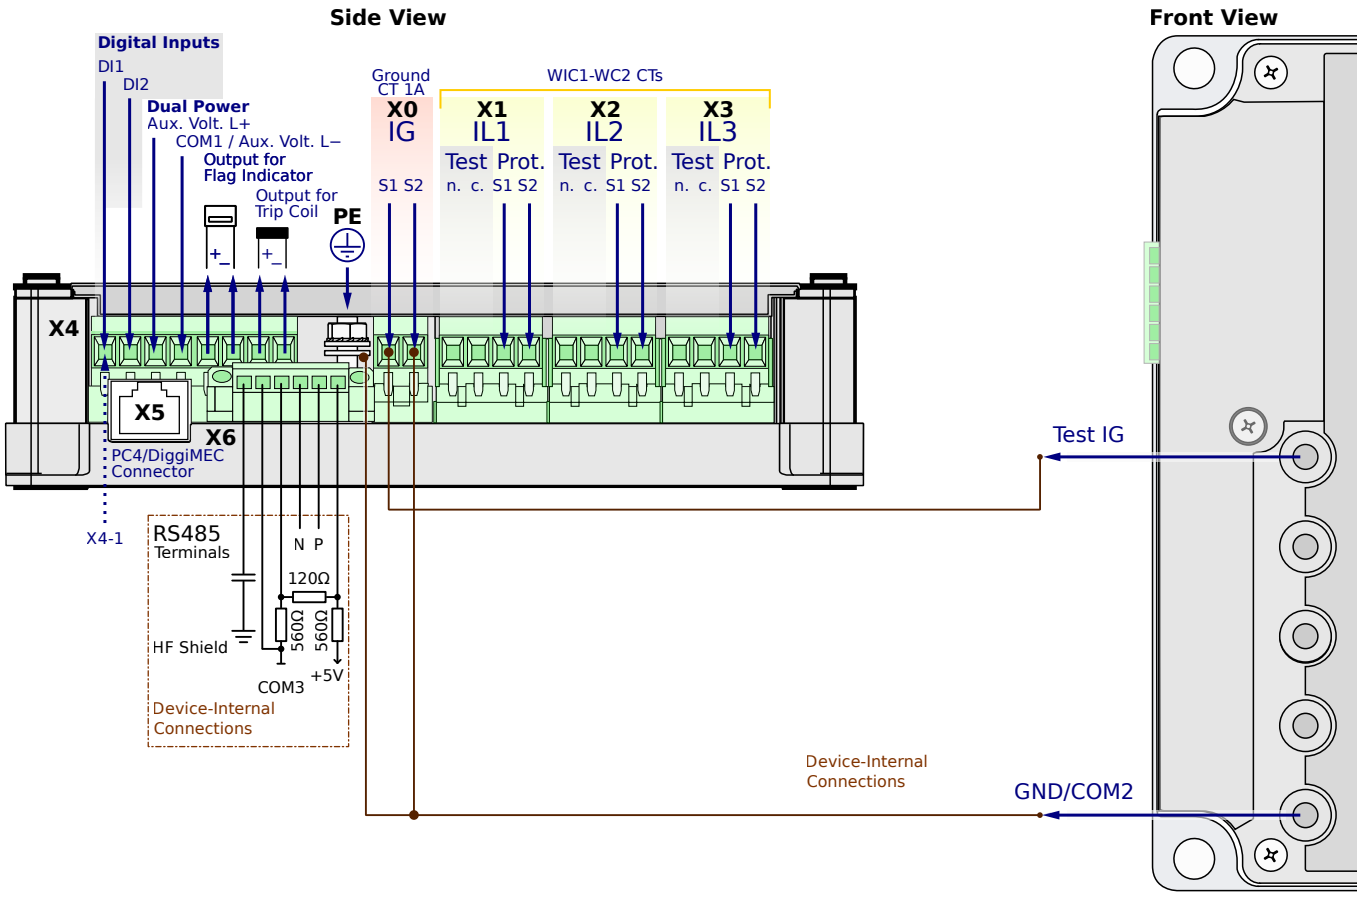


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0SC0

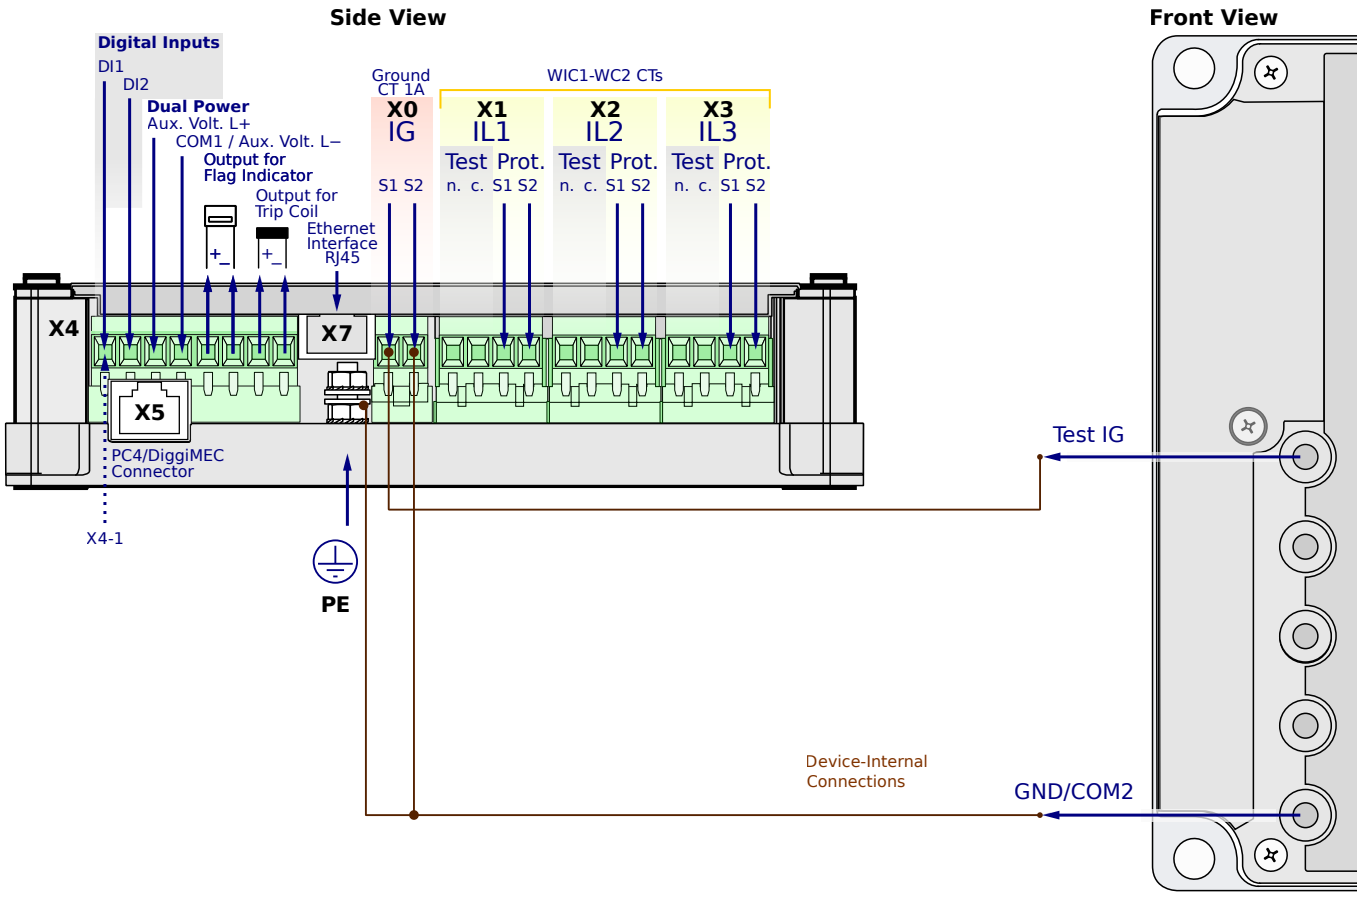


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0SCH

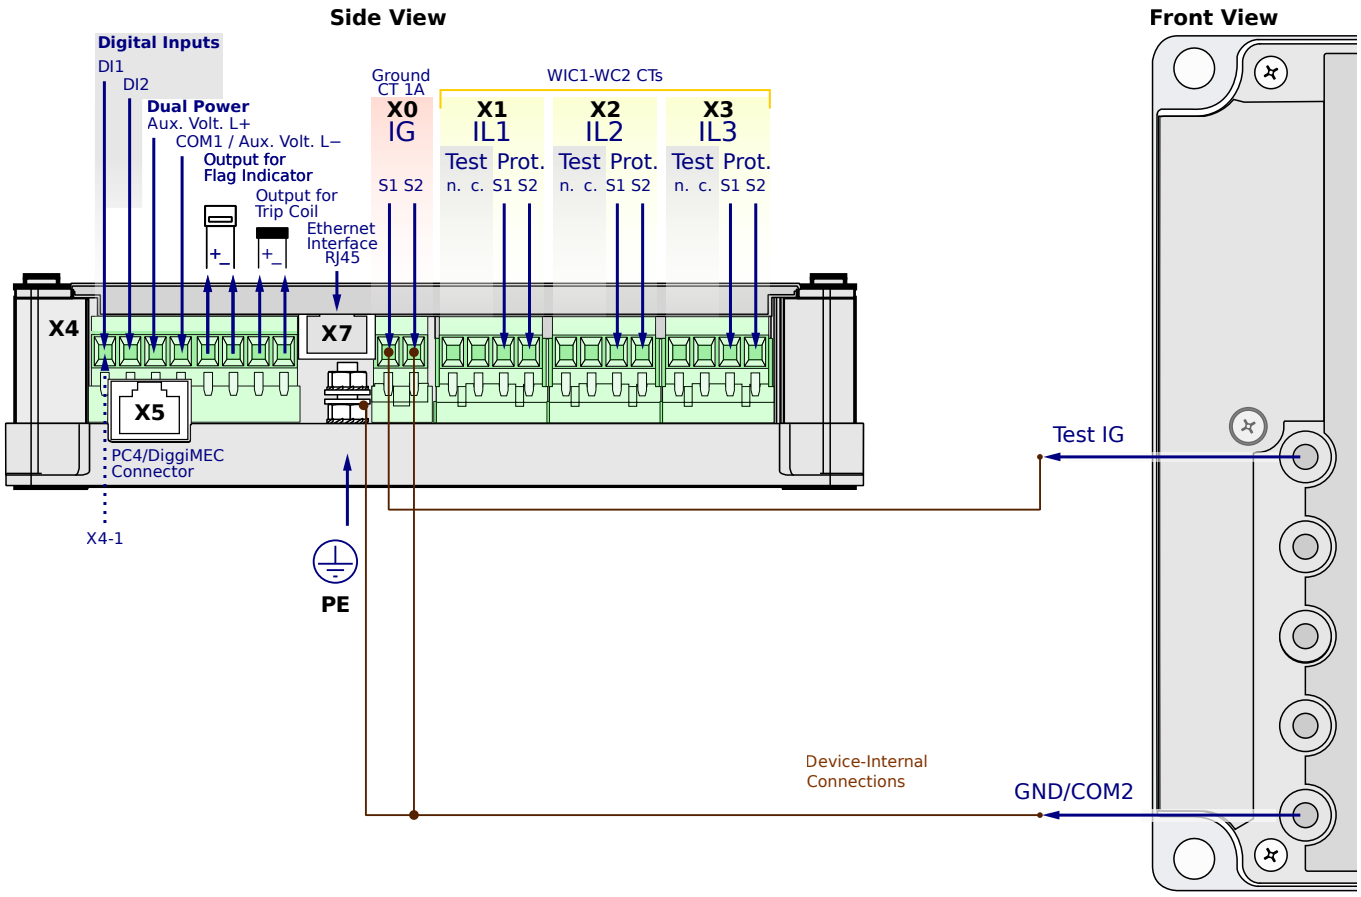


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0SL0

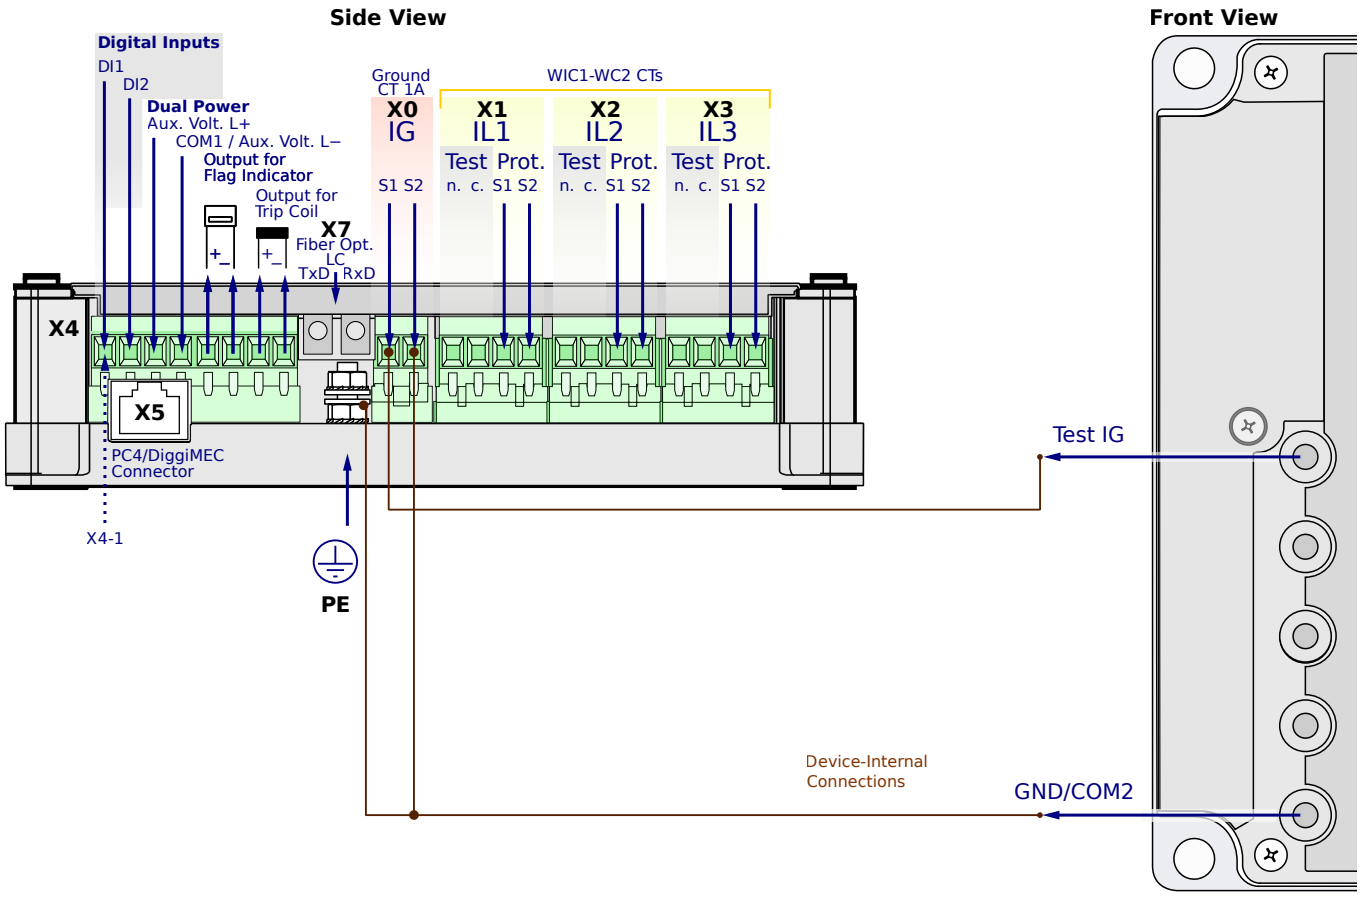


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0SLH

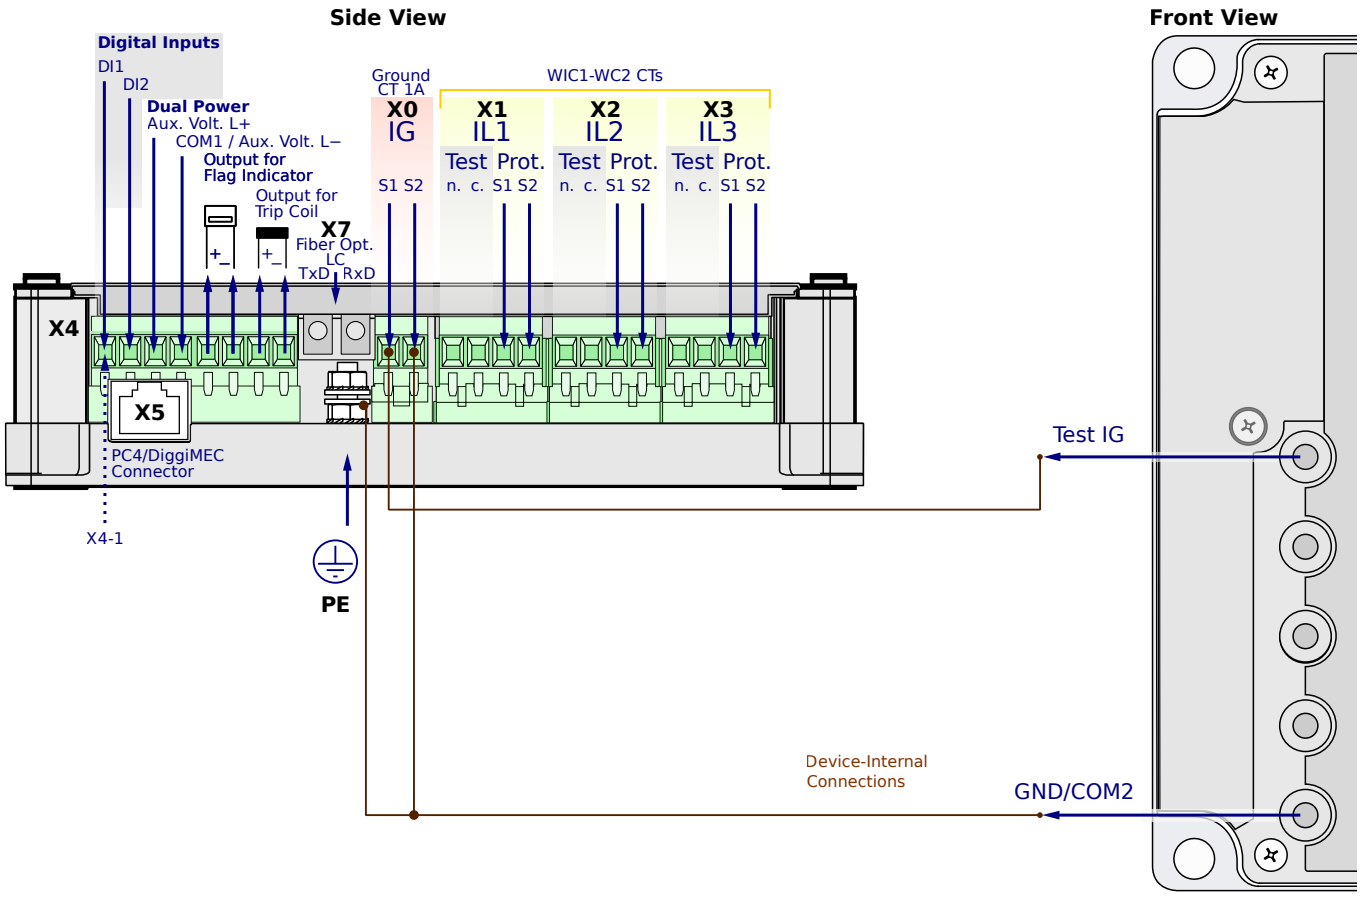


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0AA0

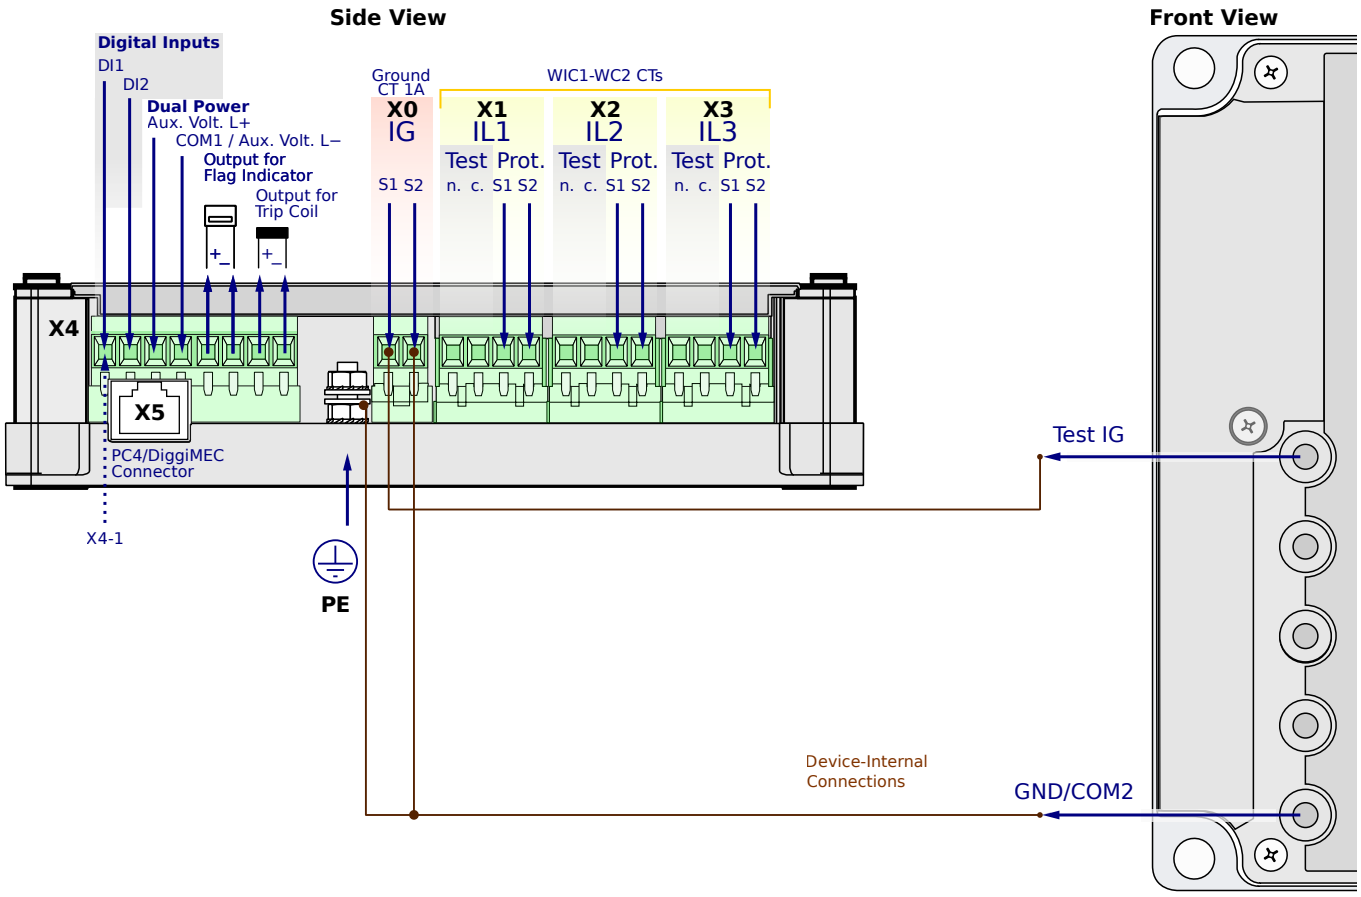


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0AAH

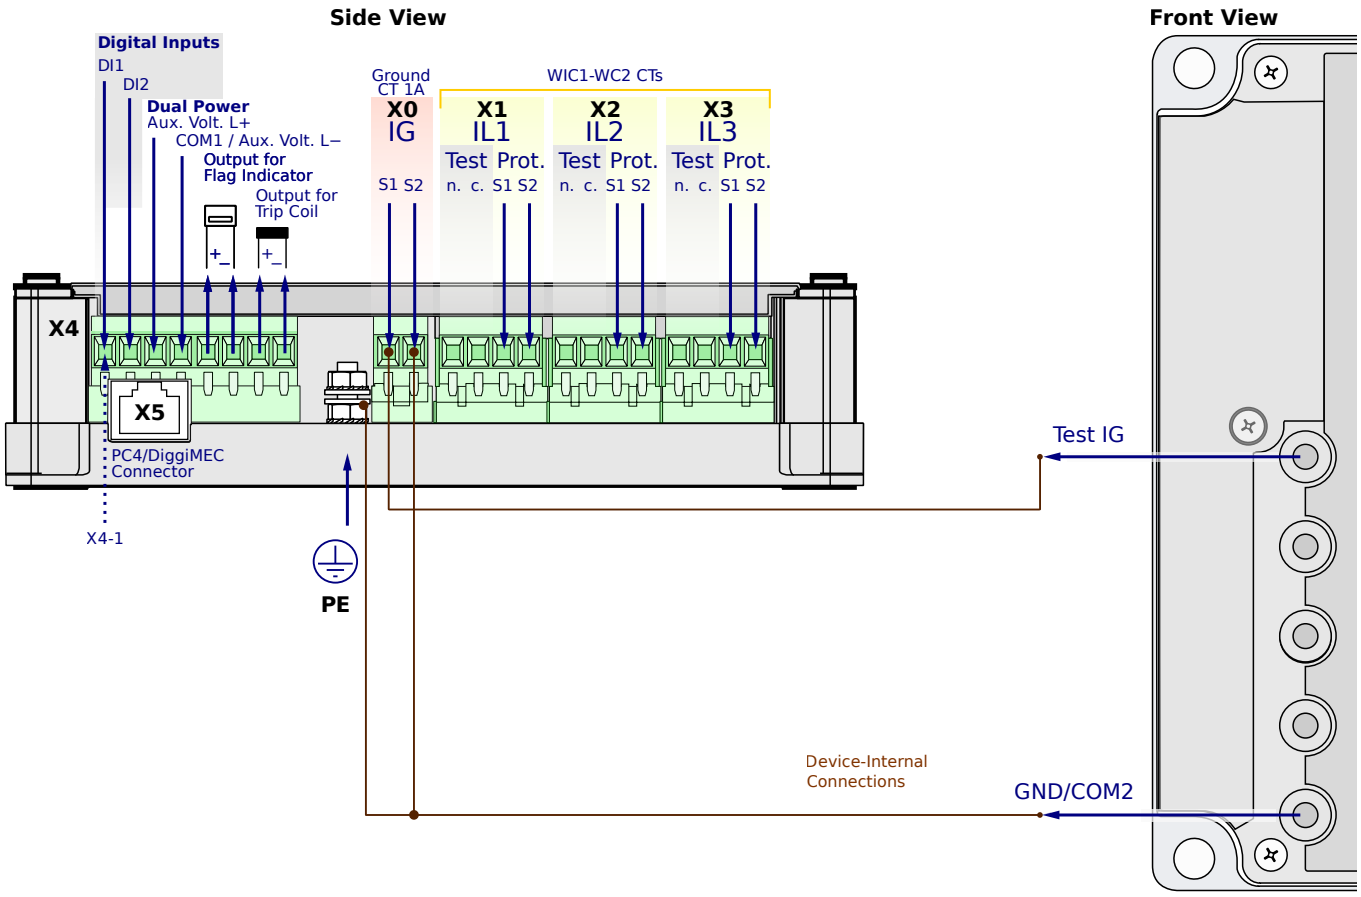


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0AB0

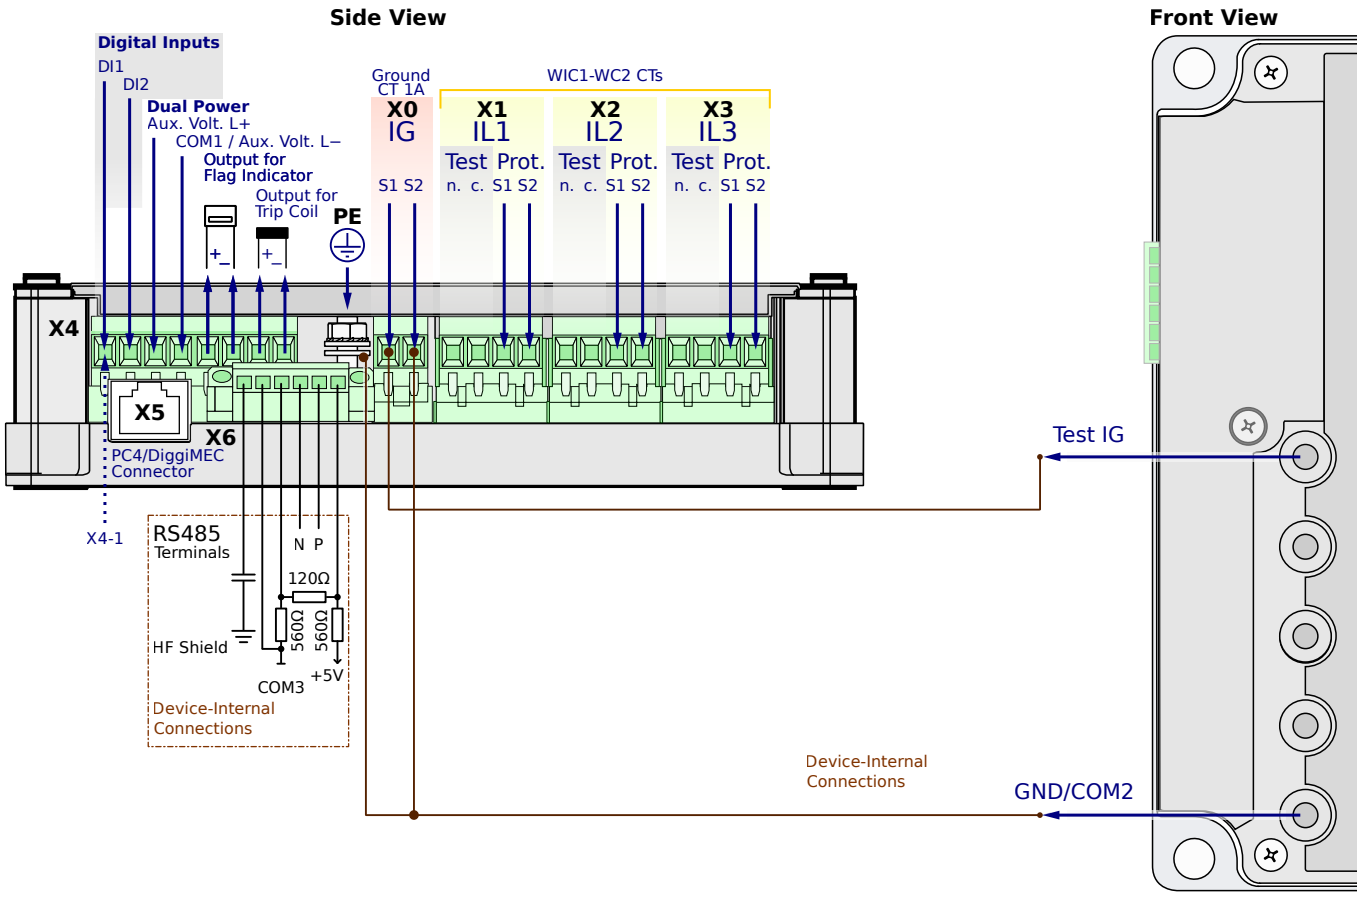


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0ABH

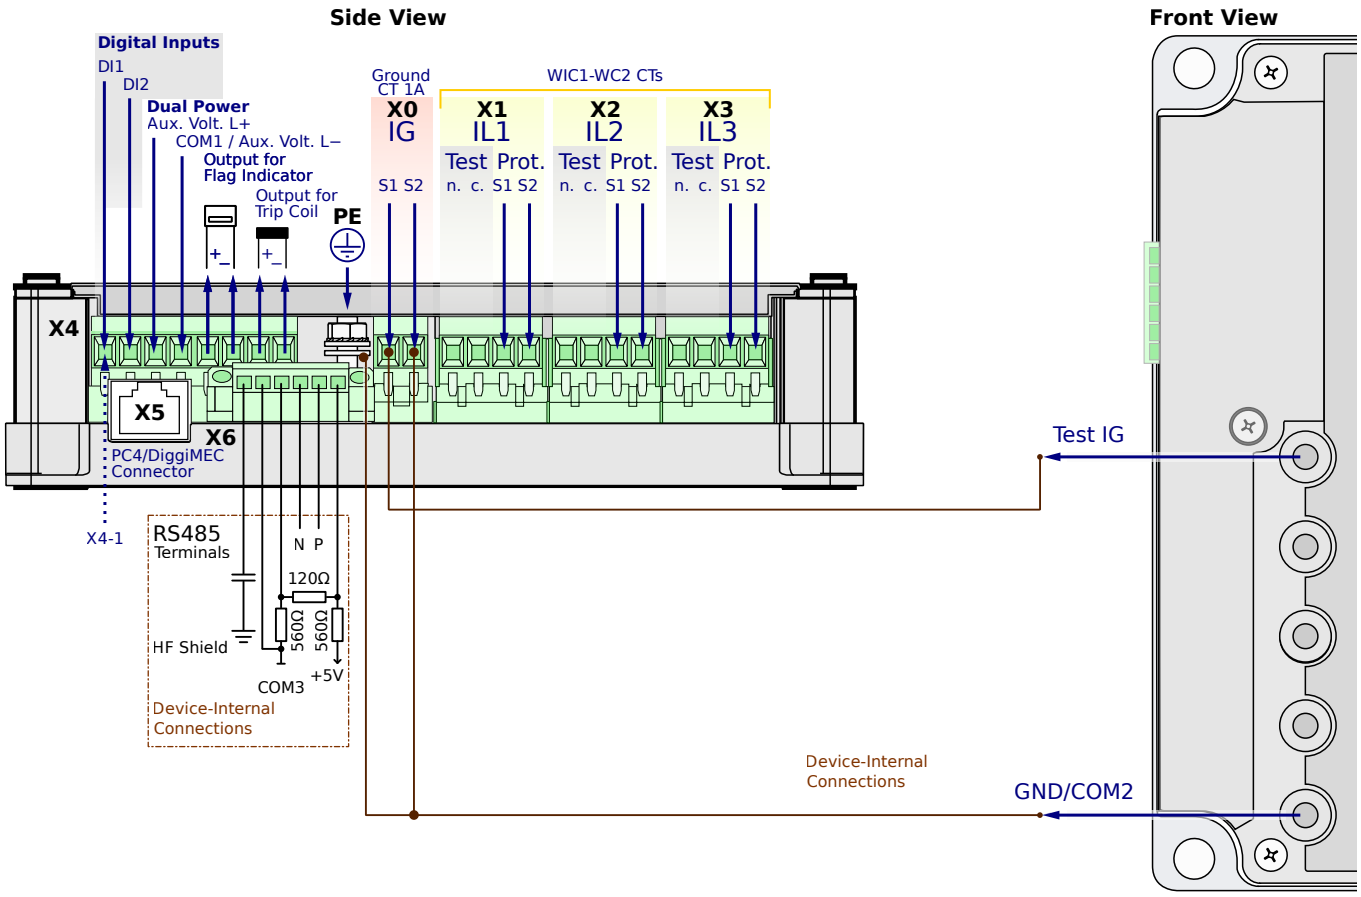


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0AC0

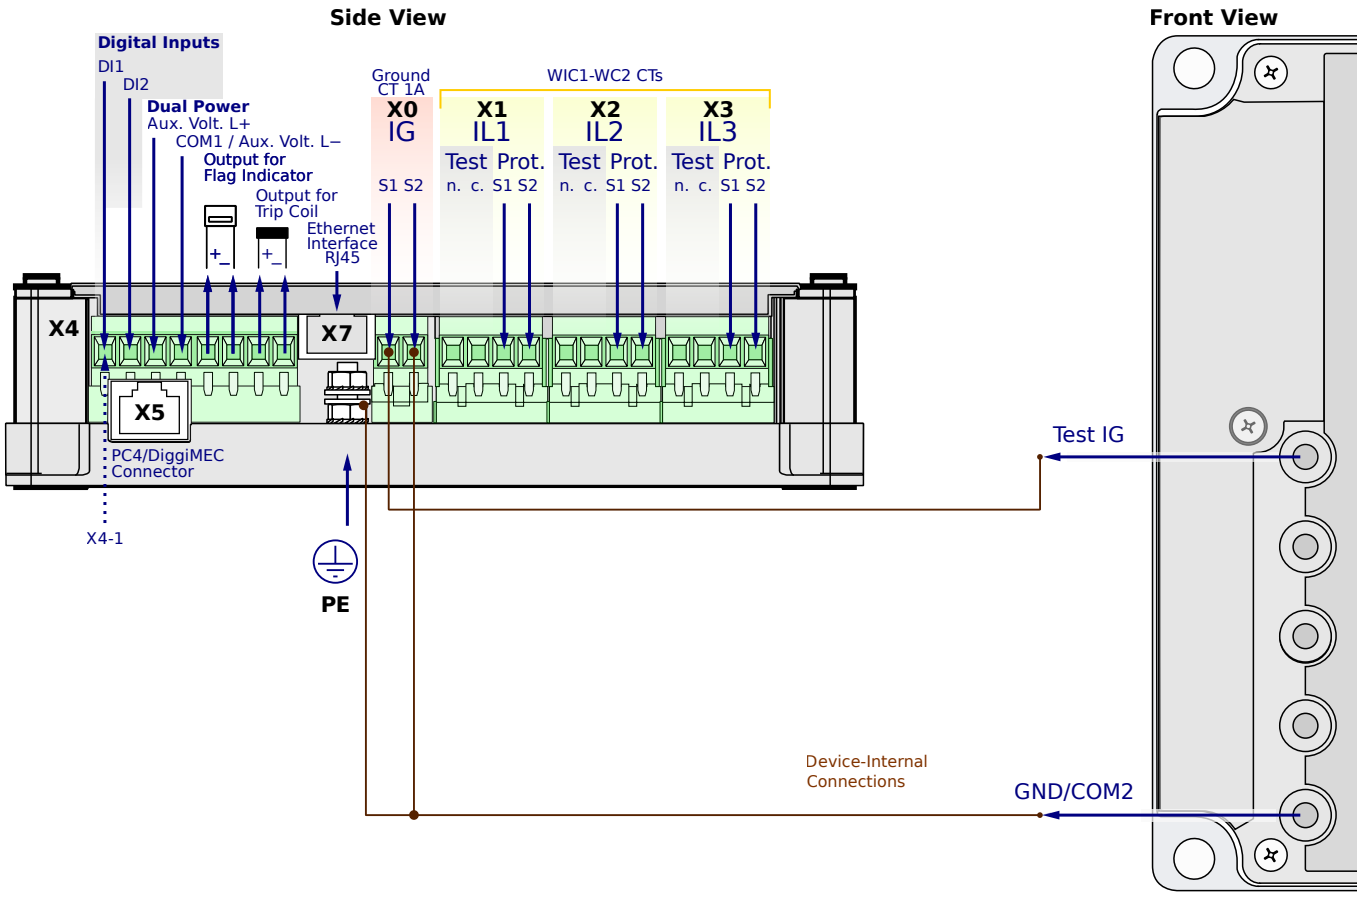


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0ACH

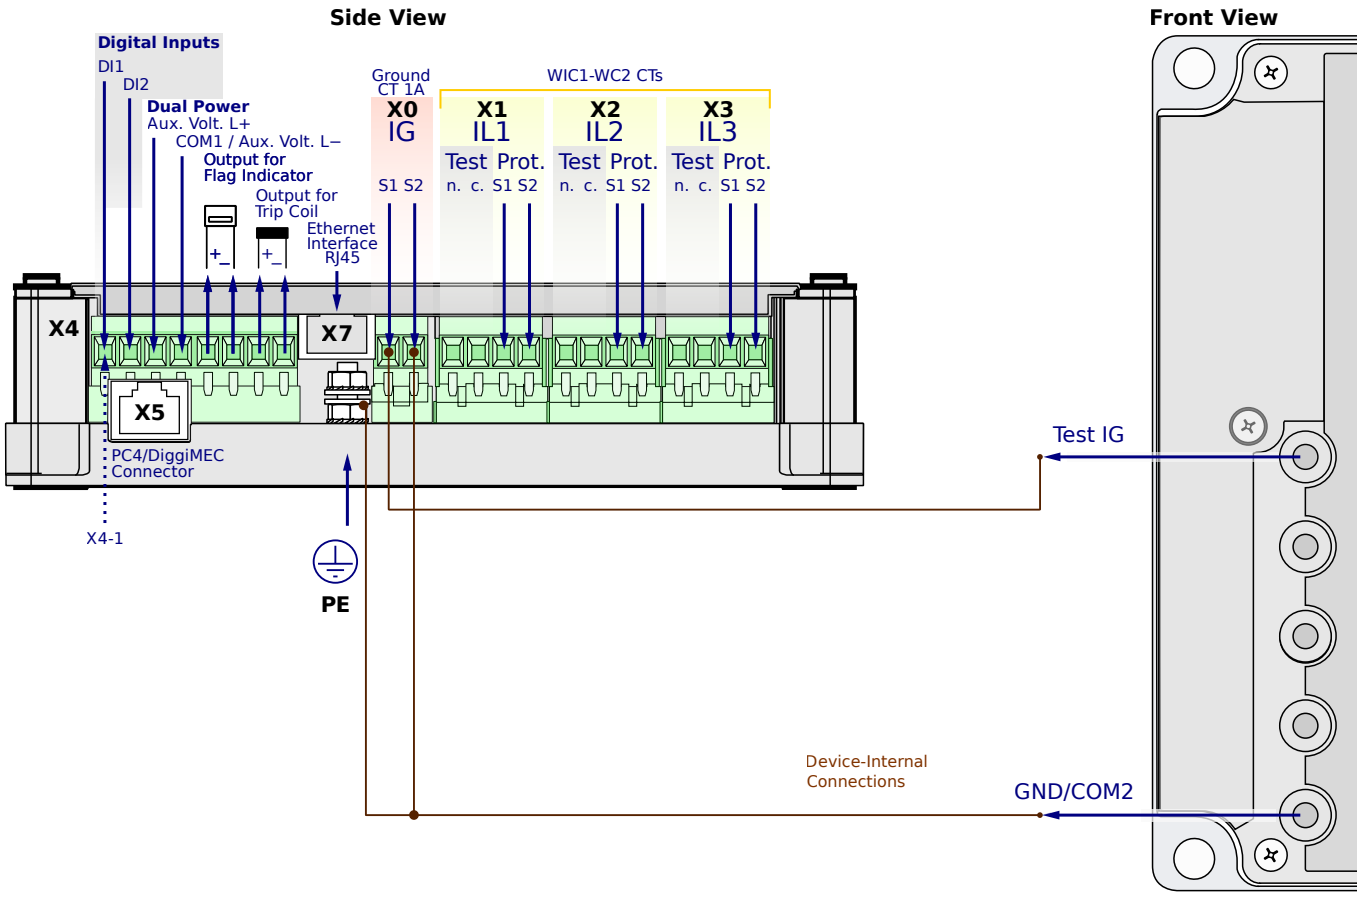


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0AL0

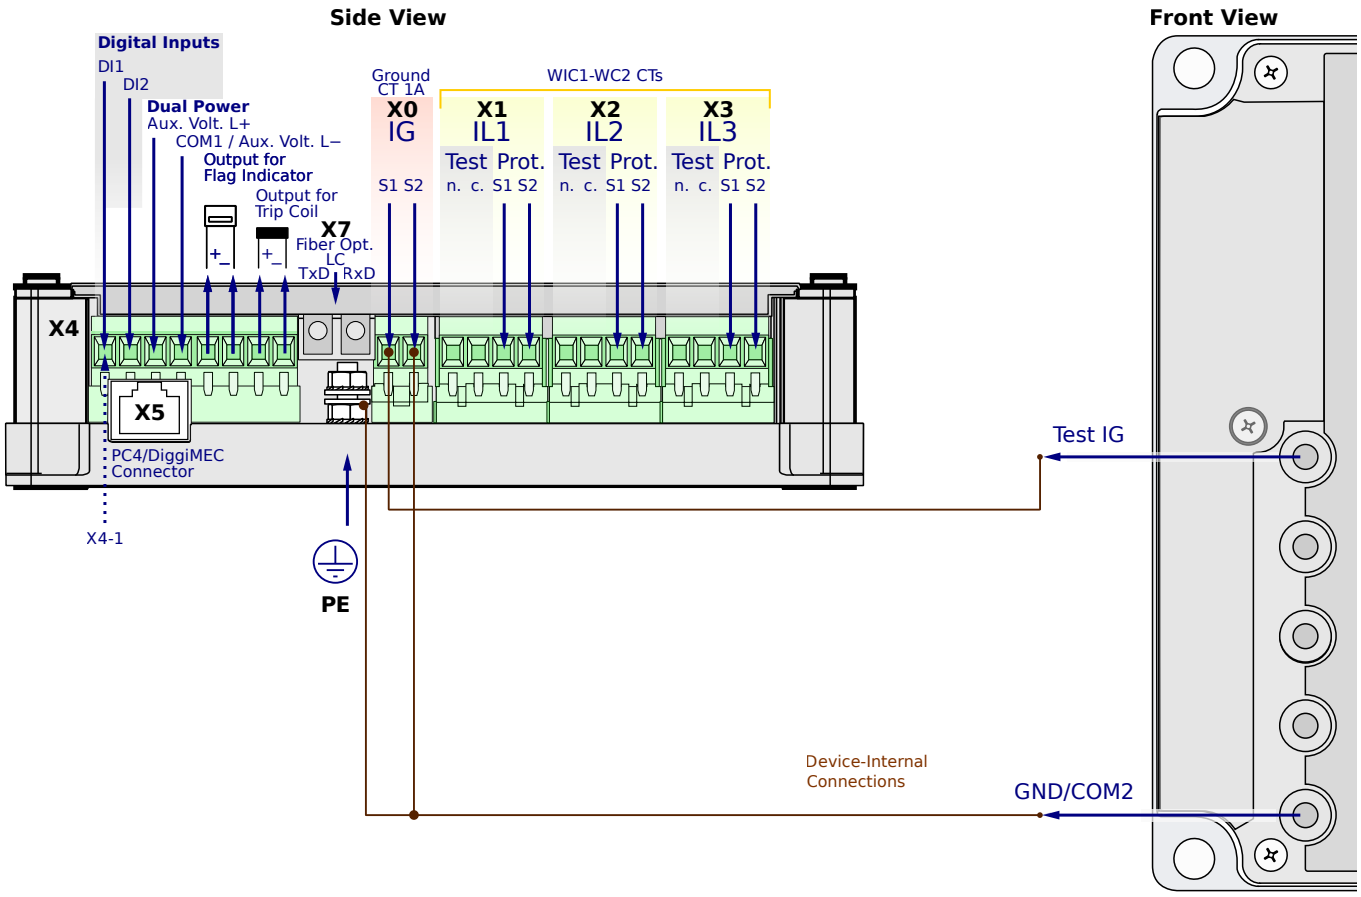


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0ALH

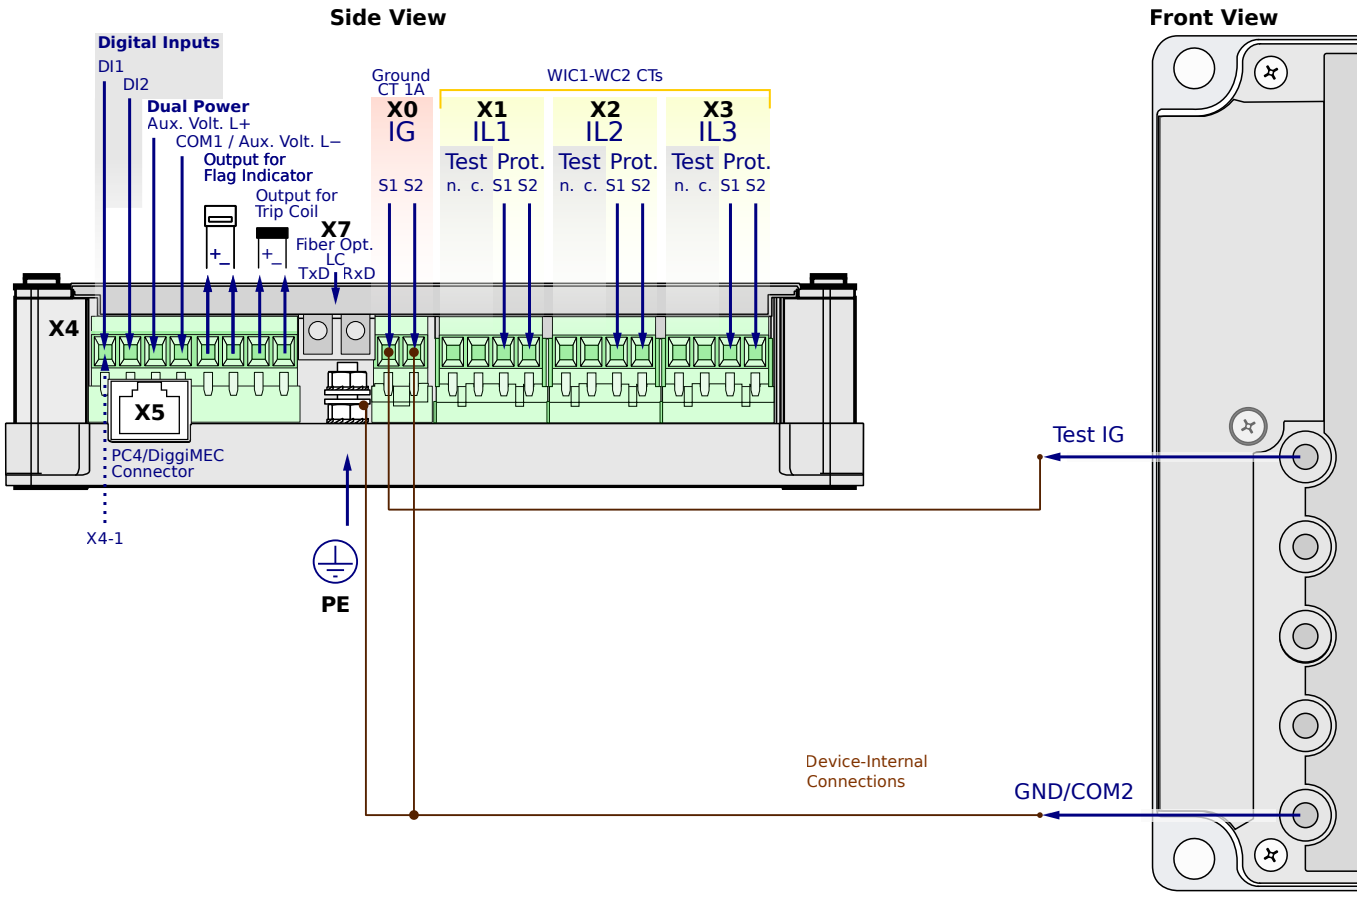


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0PA0

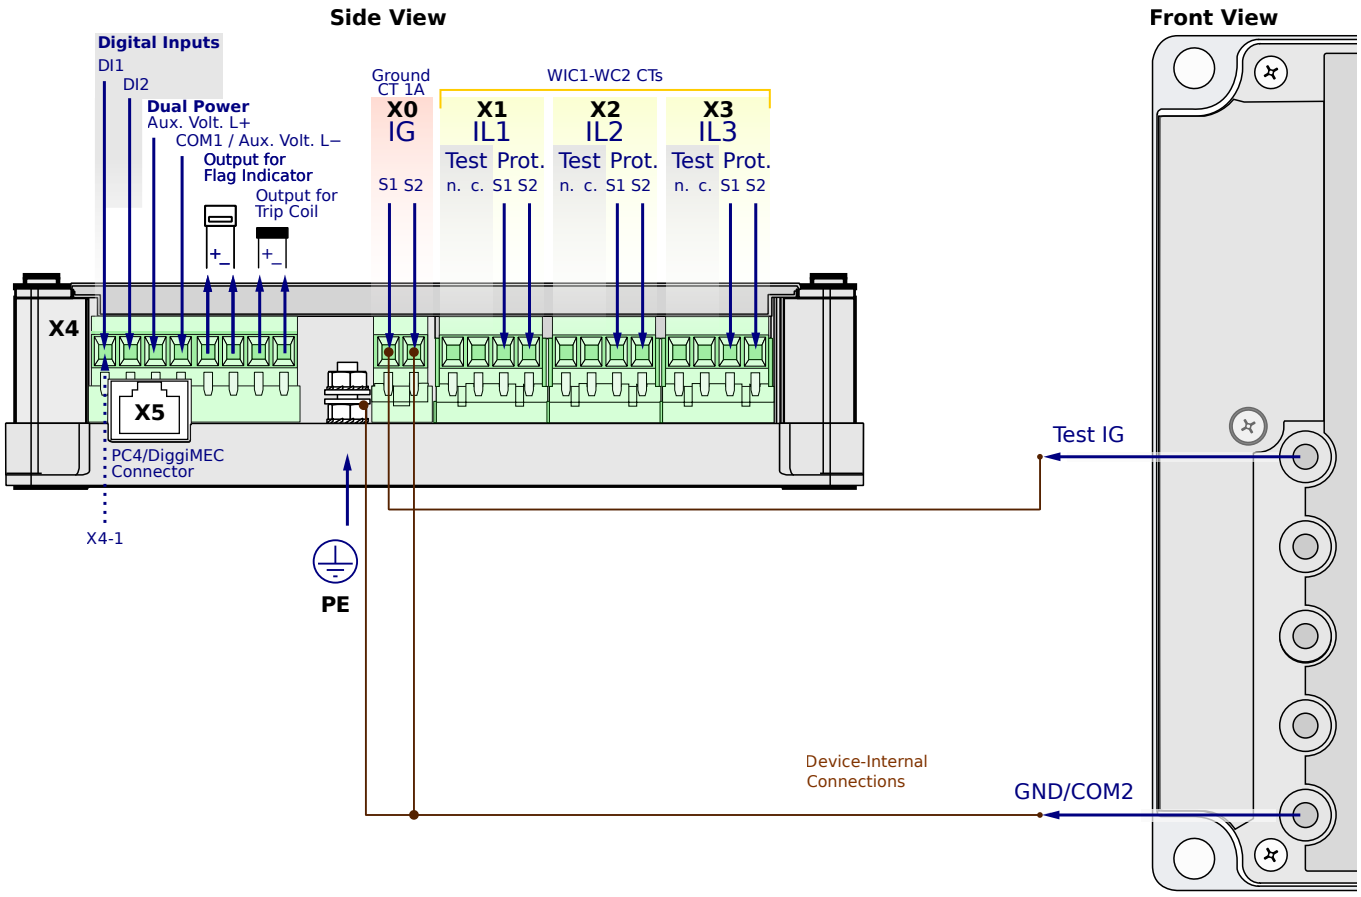


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0PAH

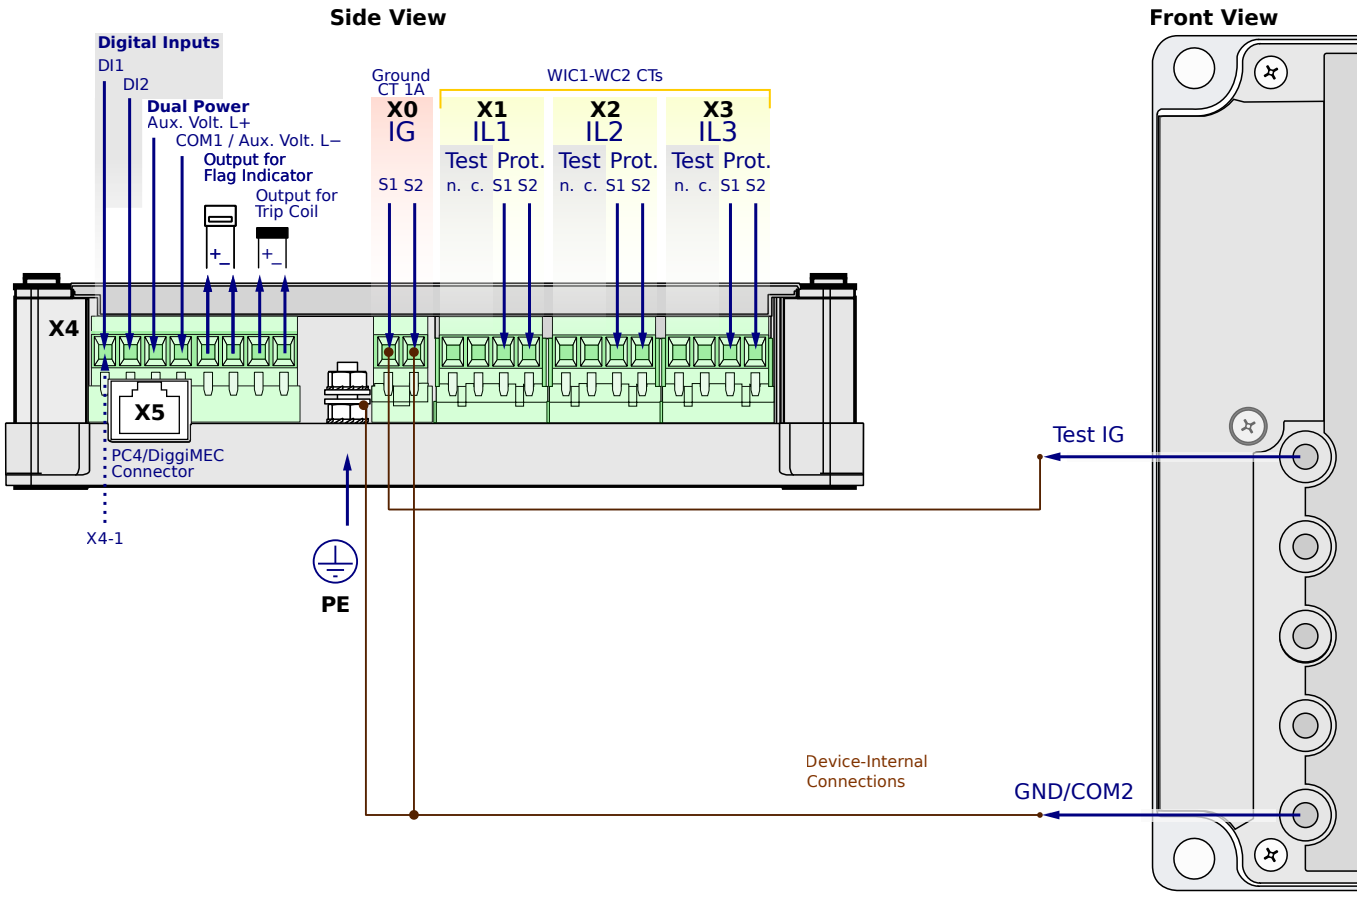


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND0PB0

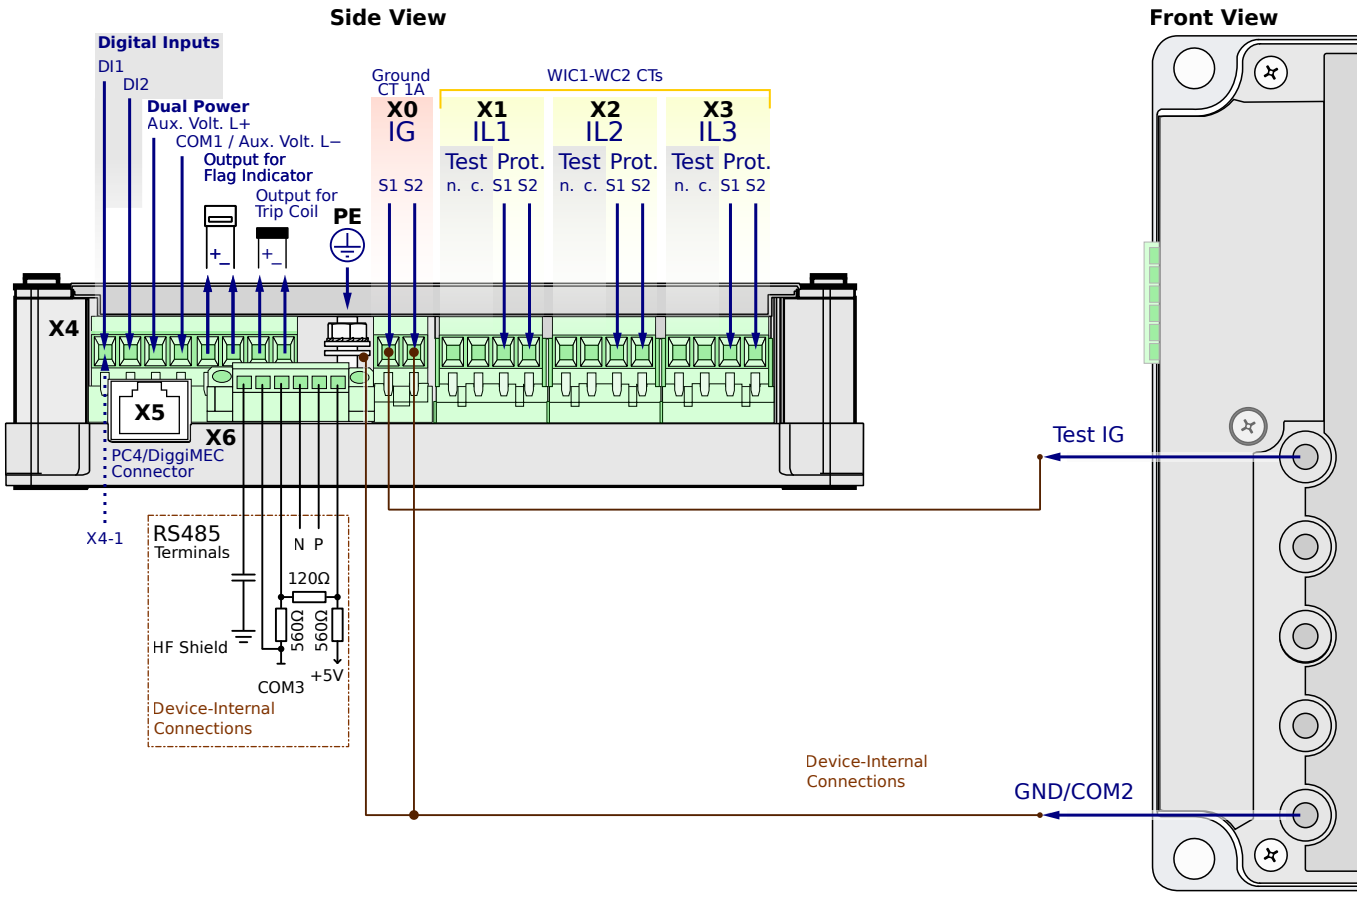


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0PBH

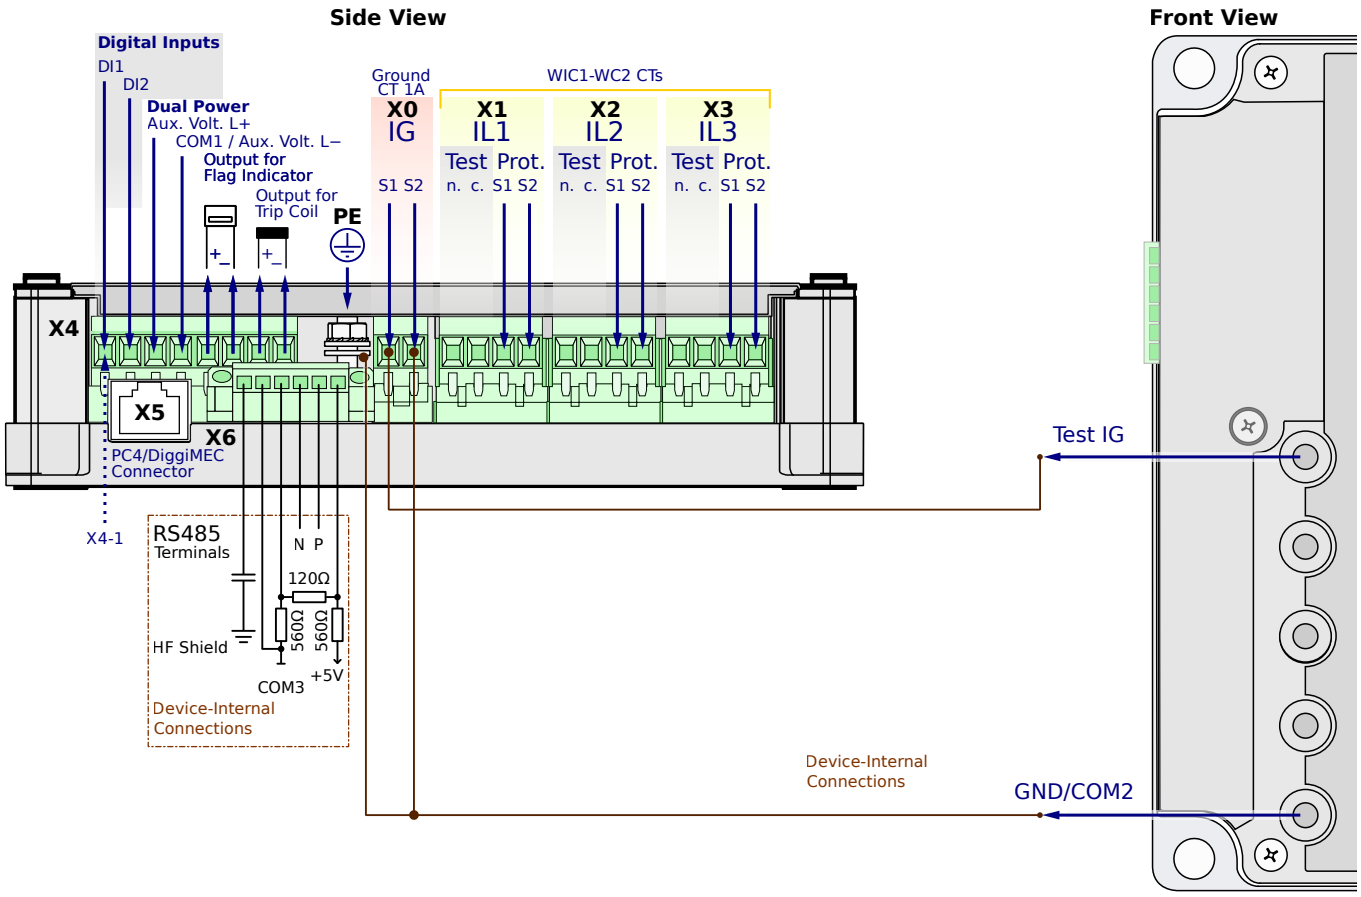


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND0PC0

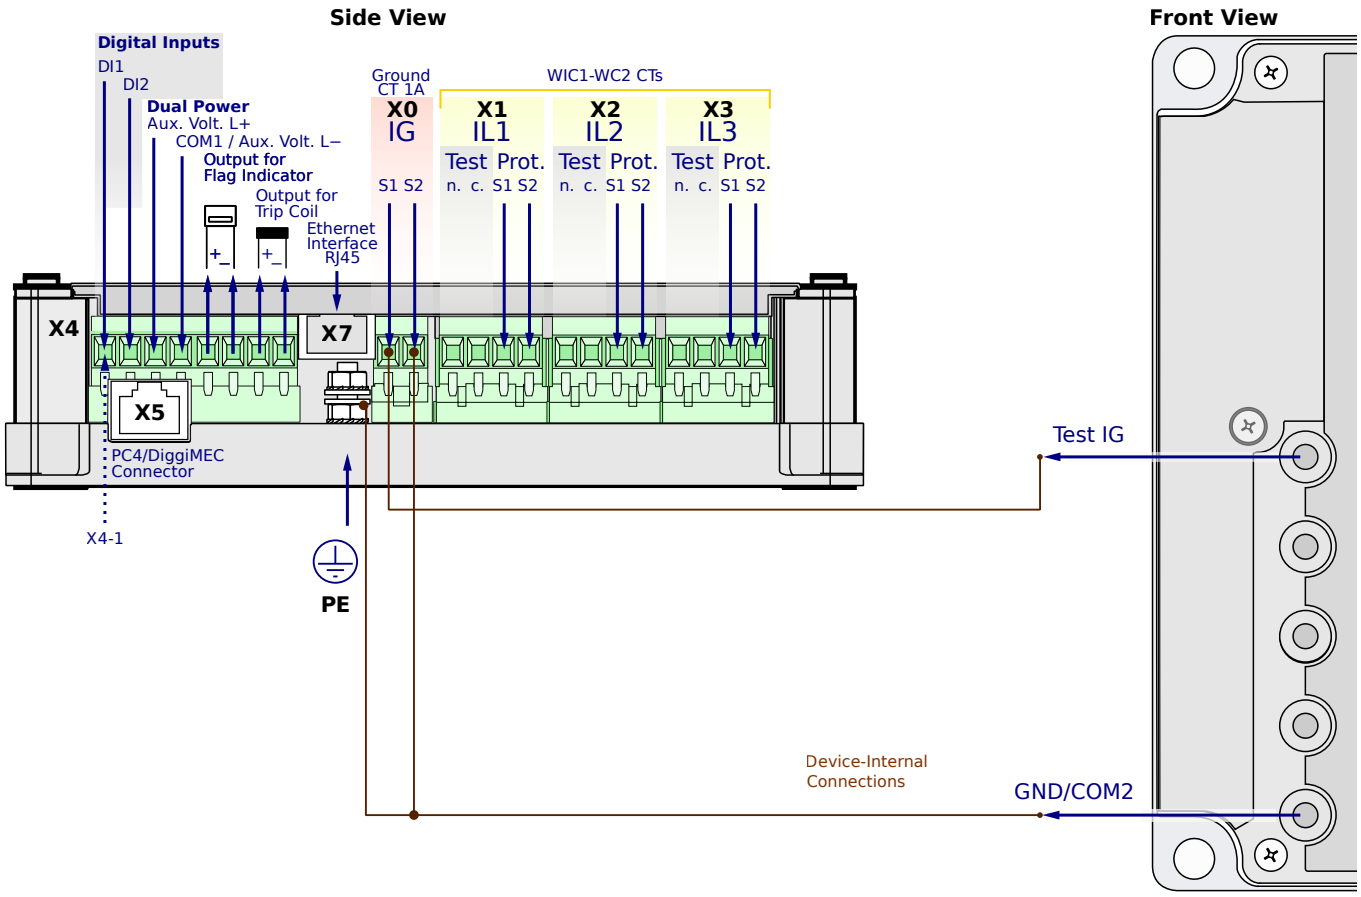


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0PCH

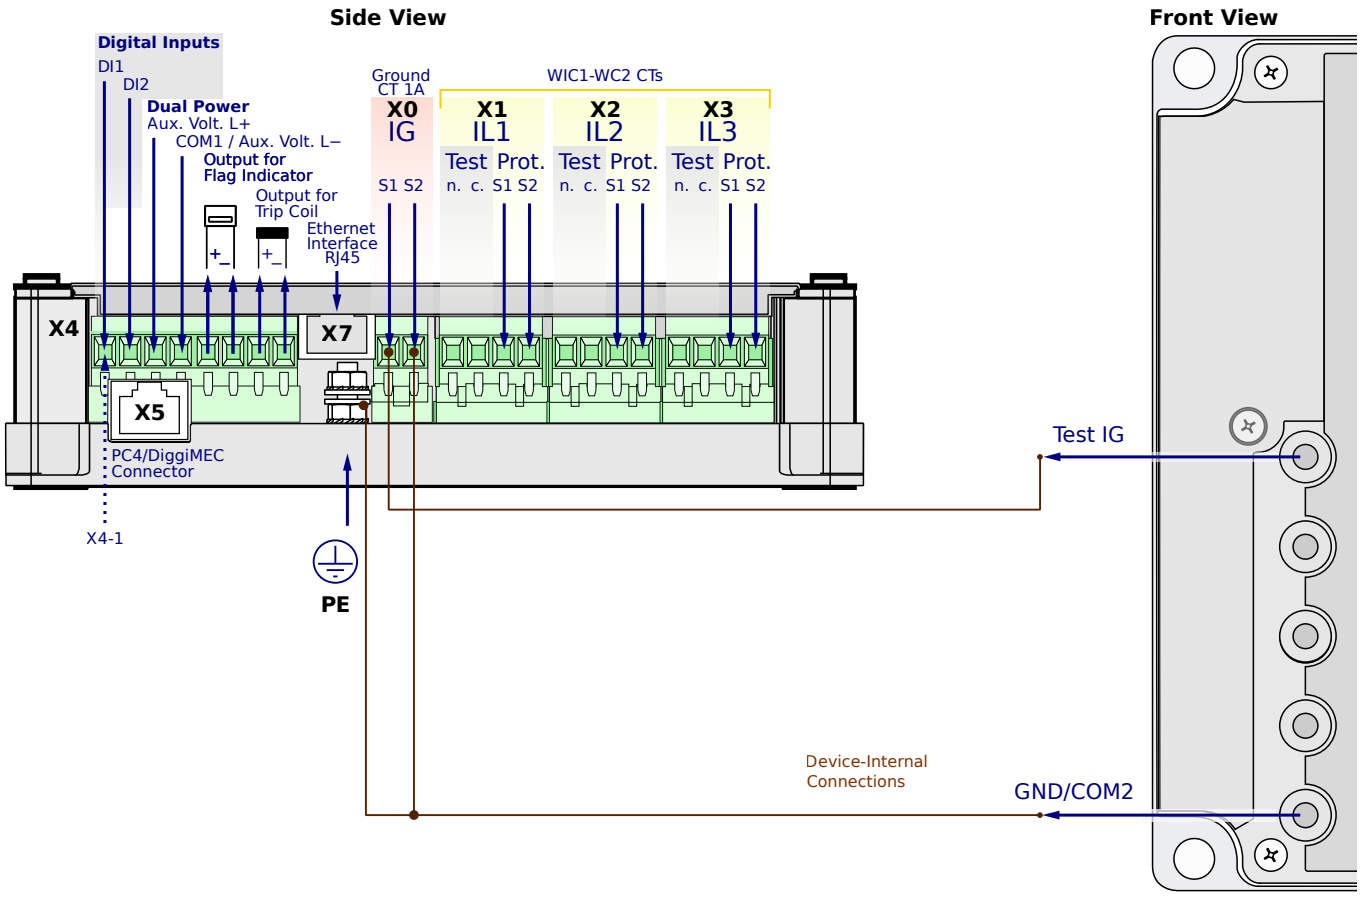


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND0PL0

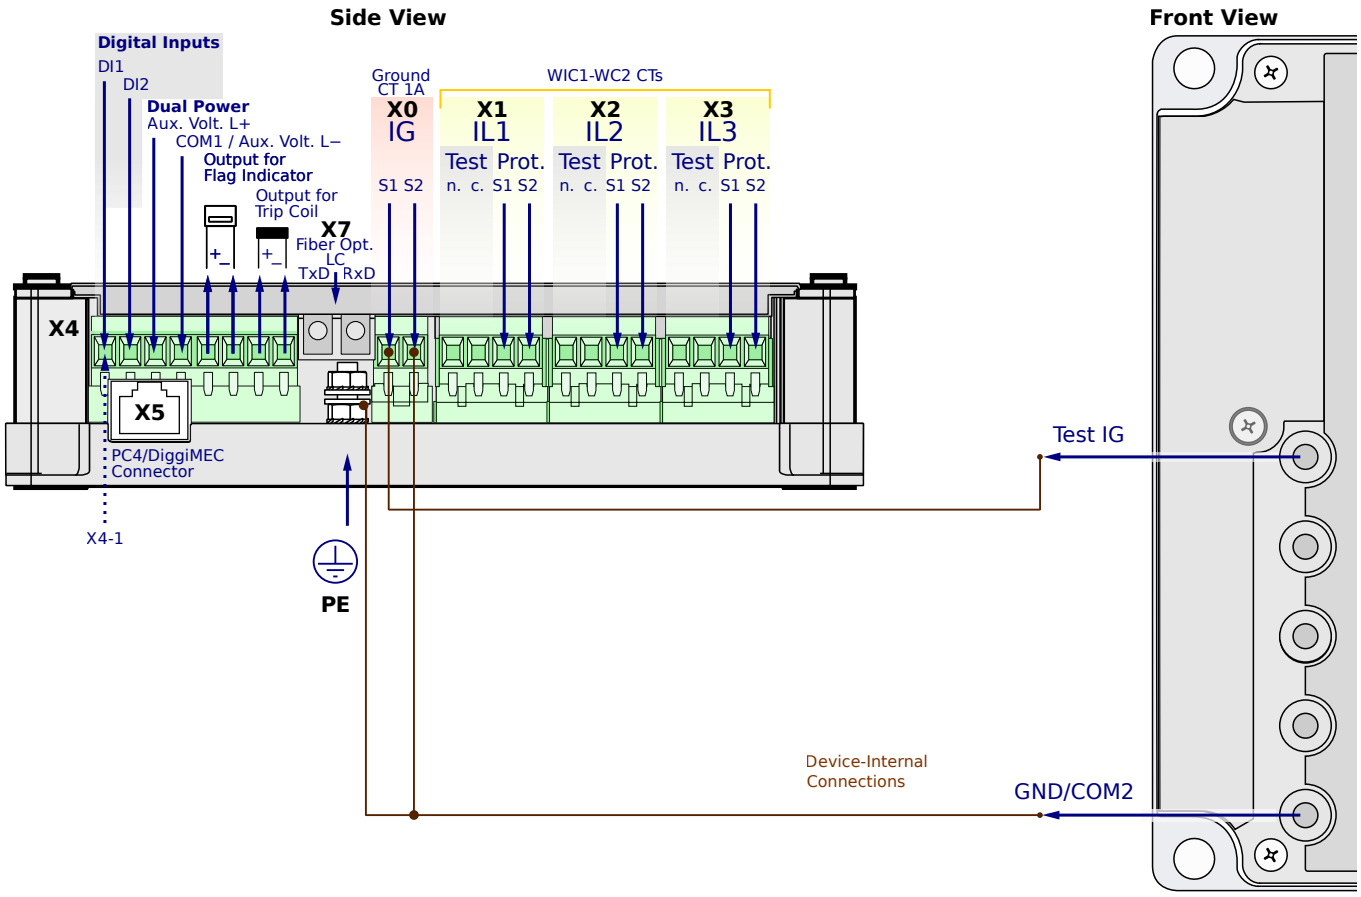


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND0PLH

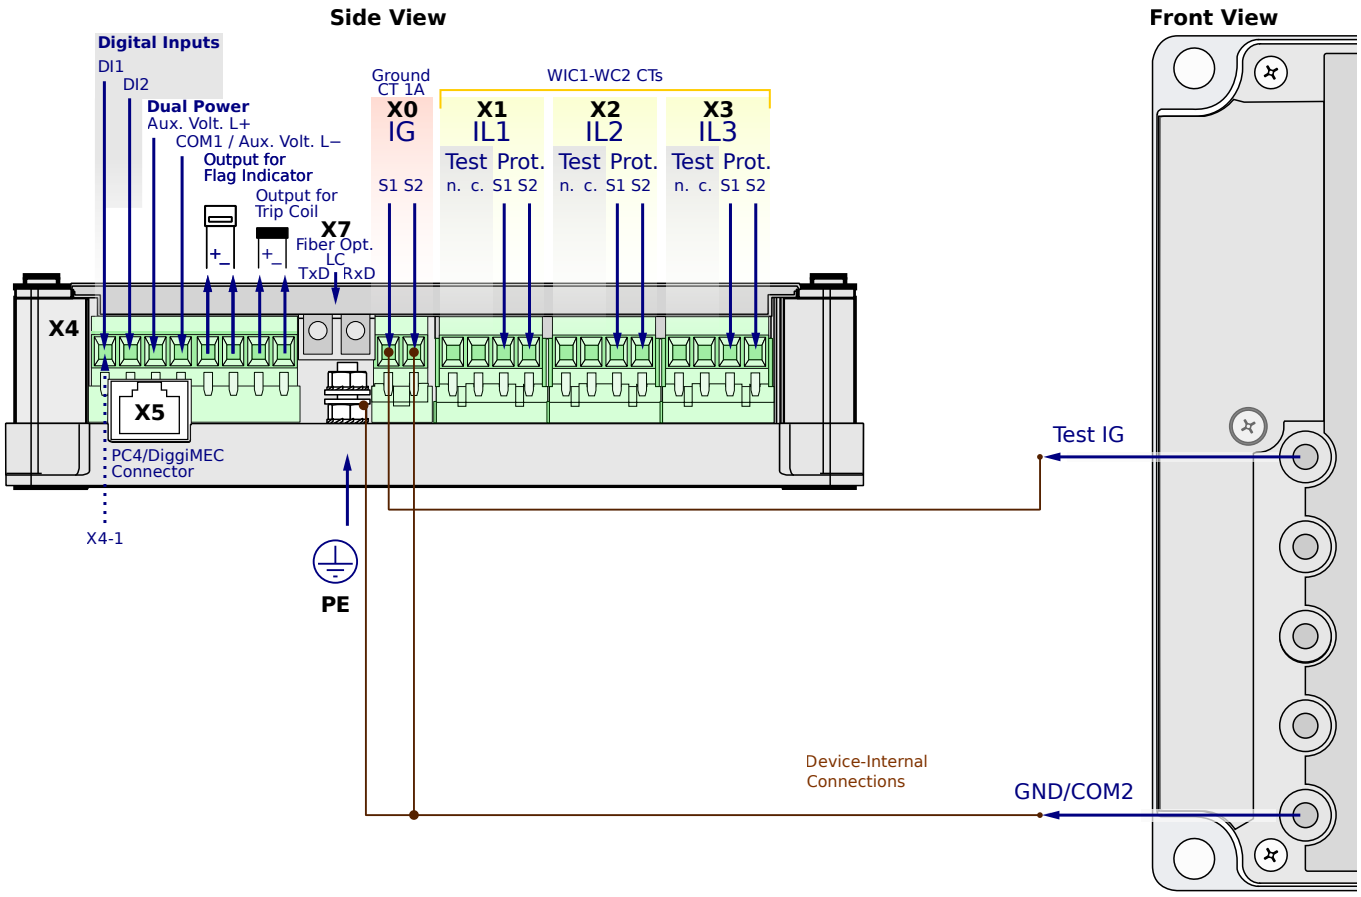


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Self-Supervision operates "FI"-output
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-5,6 – "FI"-Output is used for Self-Supervision Alarm
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1SA0

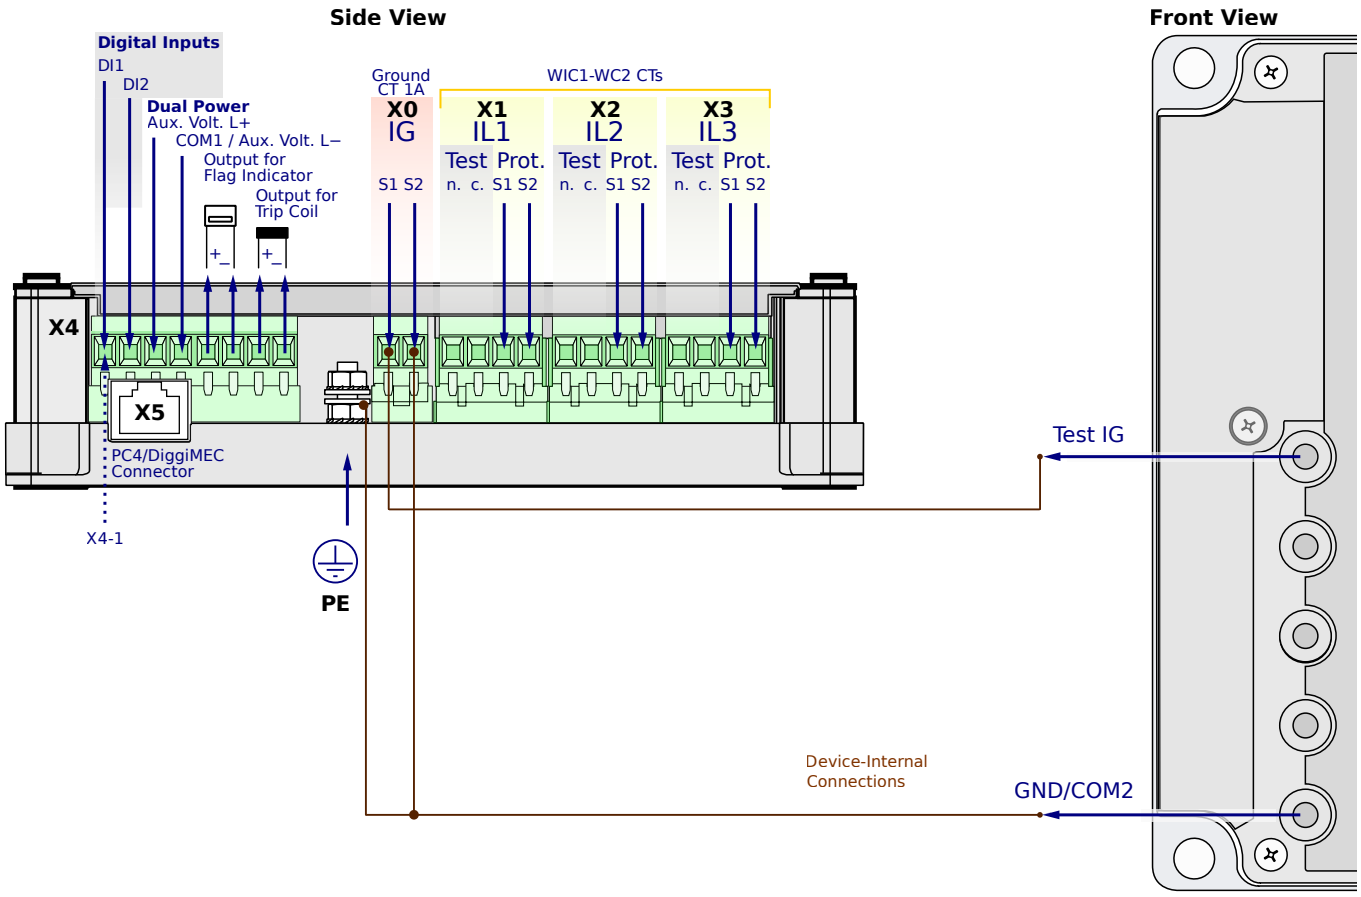


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1SAH

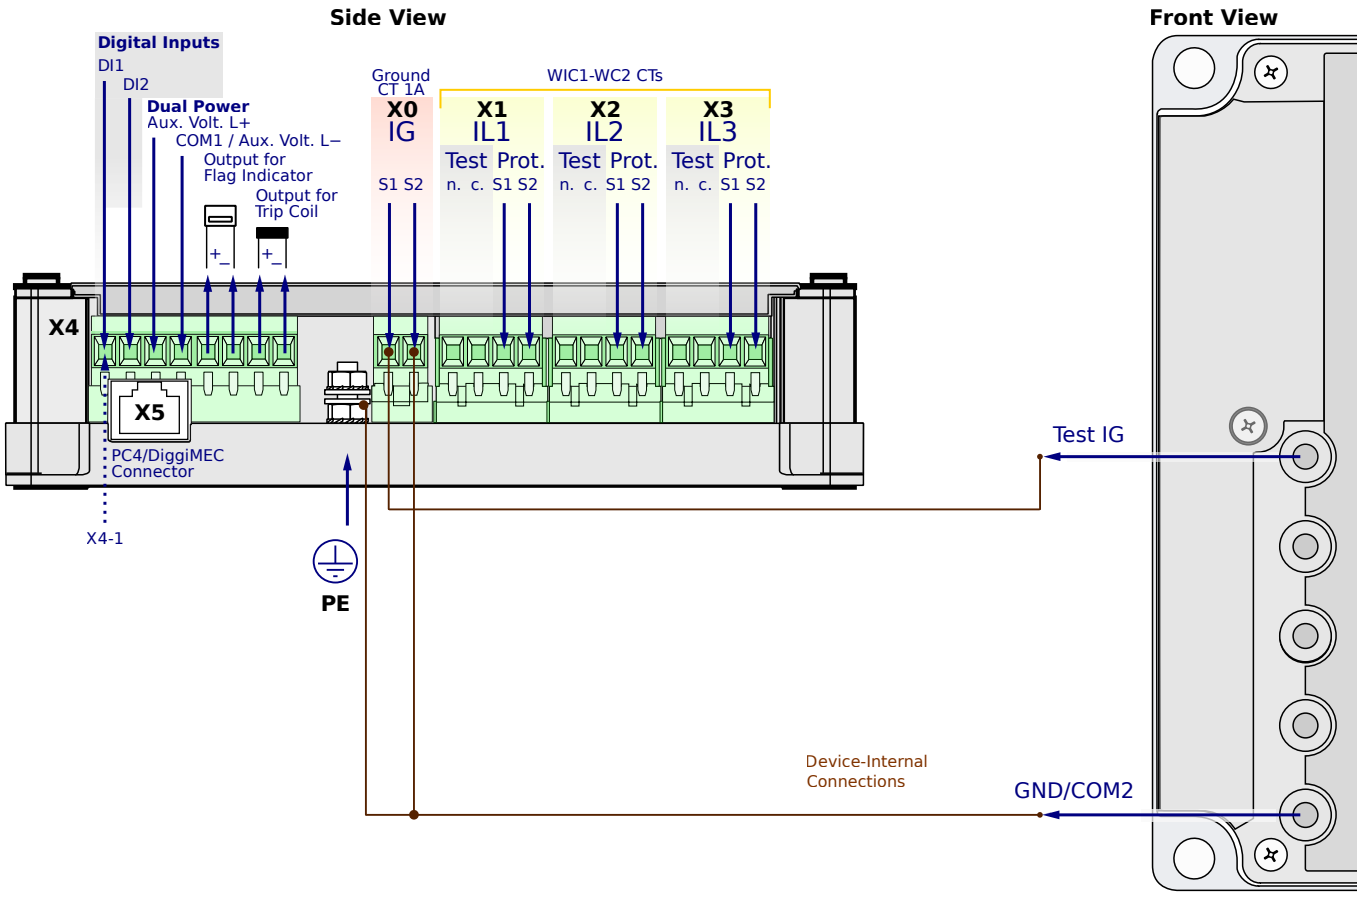


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1SB0

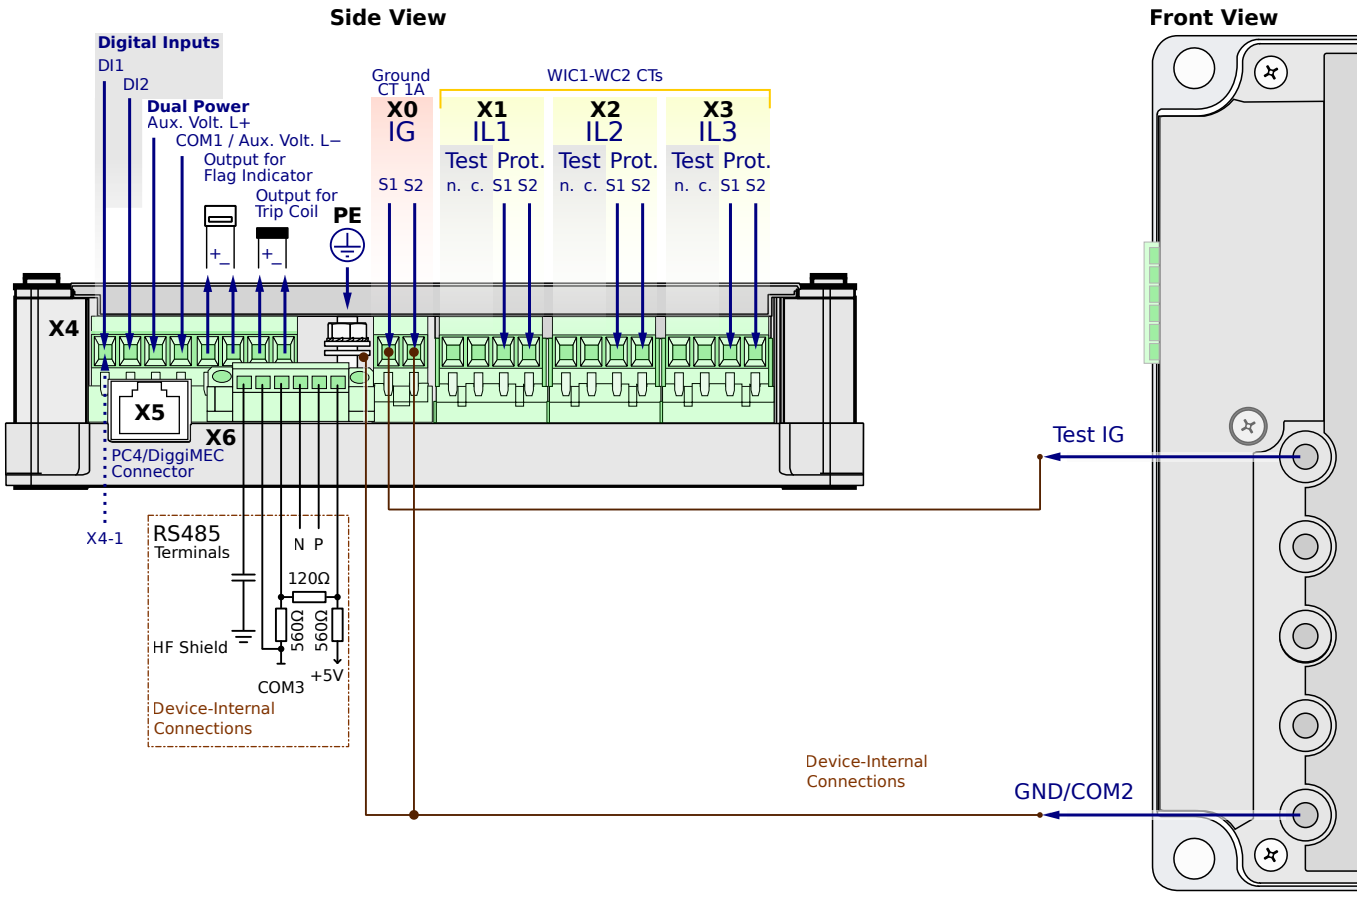


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1SBH

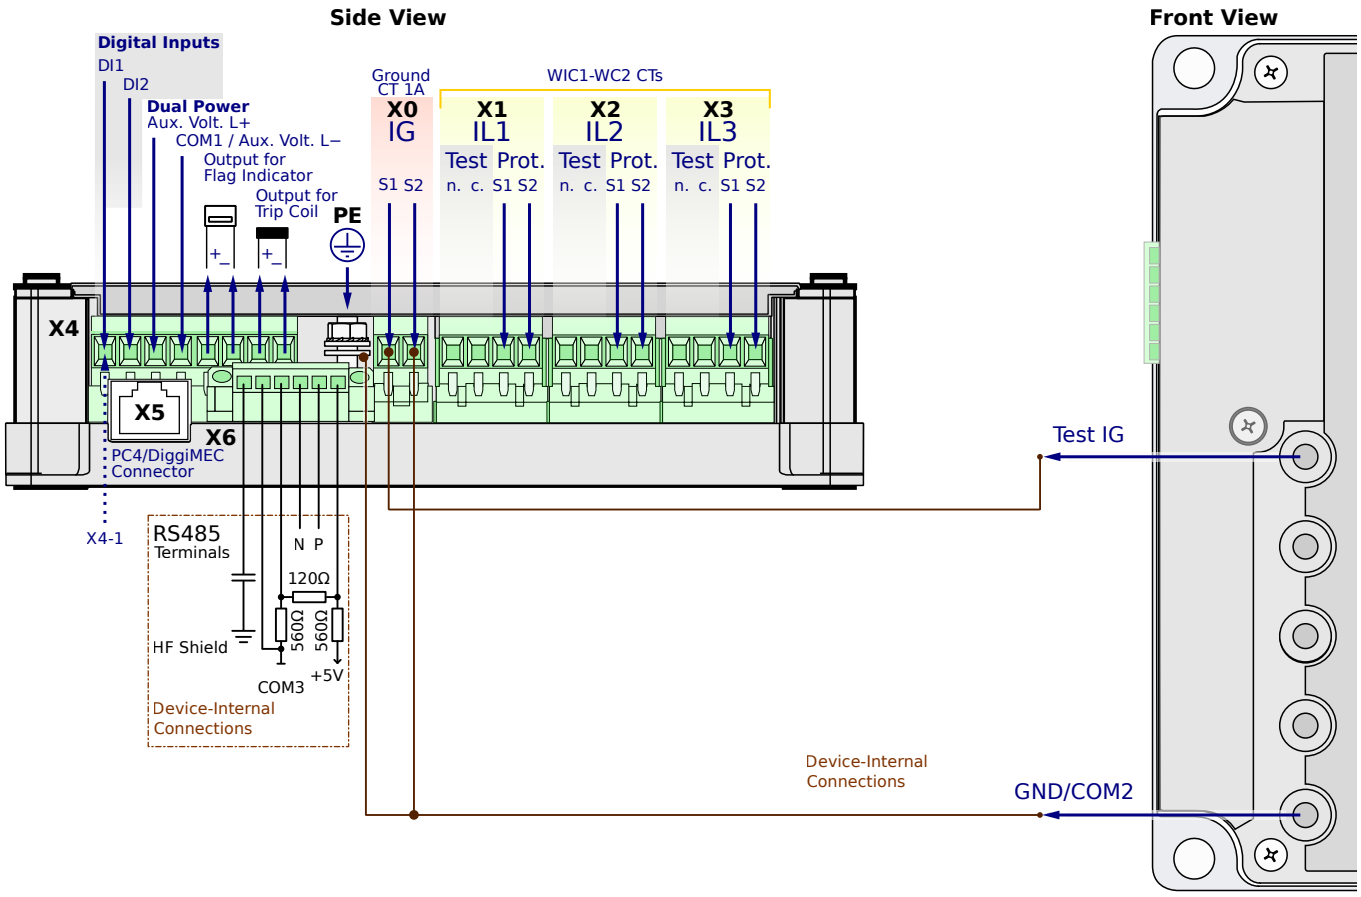


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1SC0

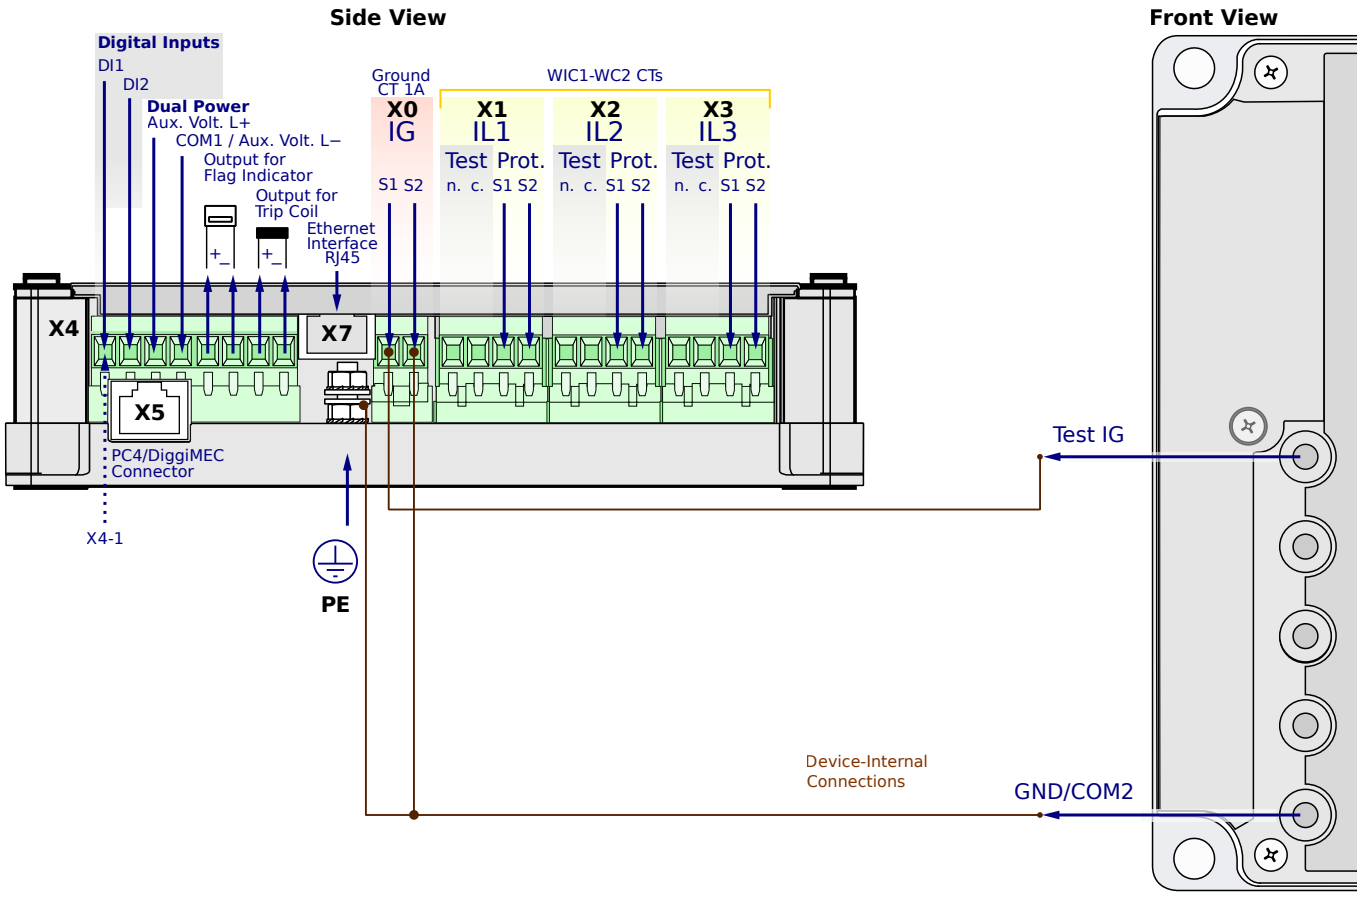


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1SCH

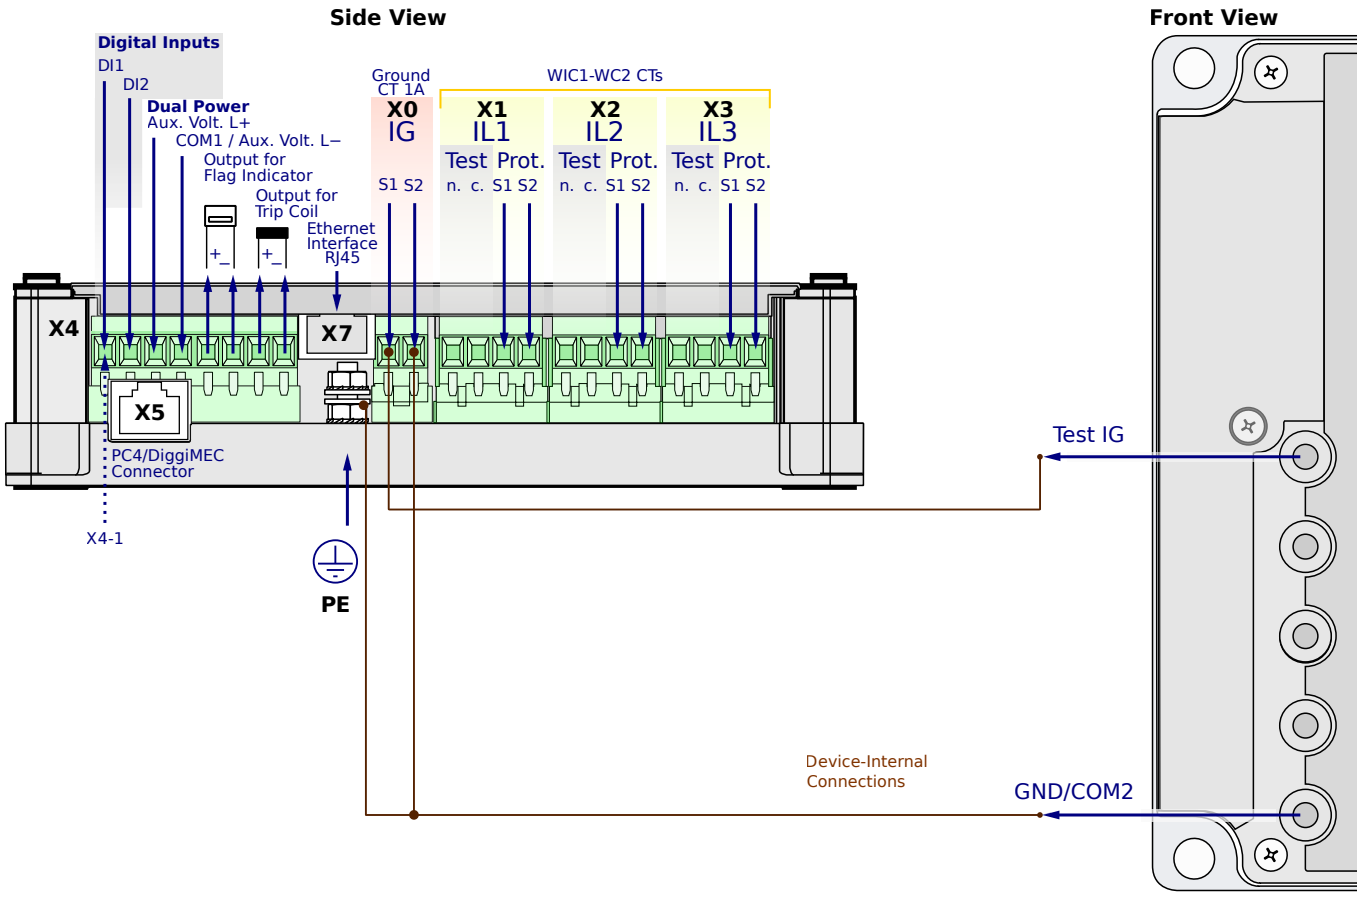


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1SL0

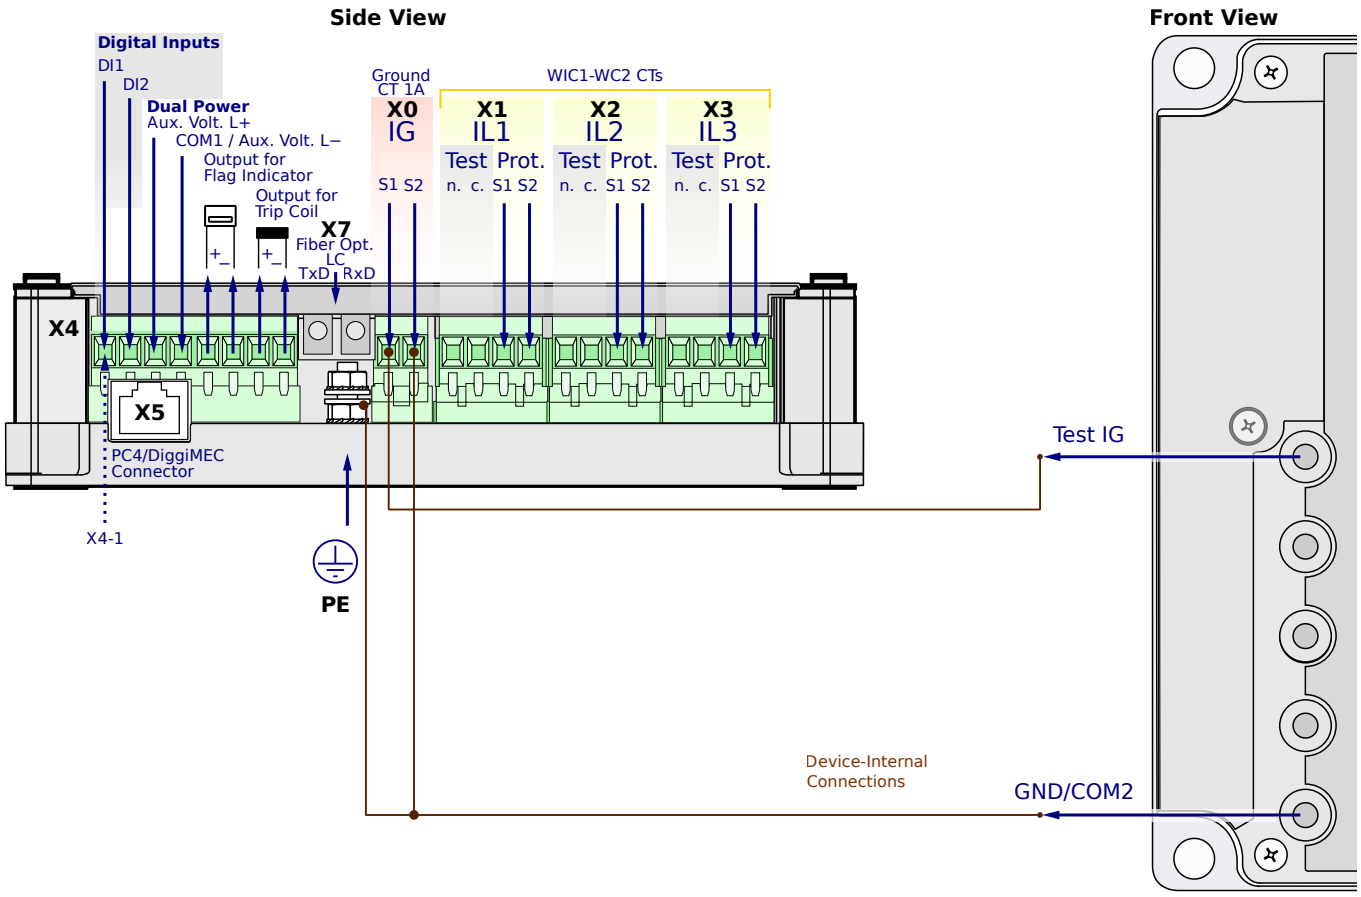


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1SLH

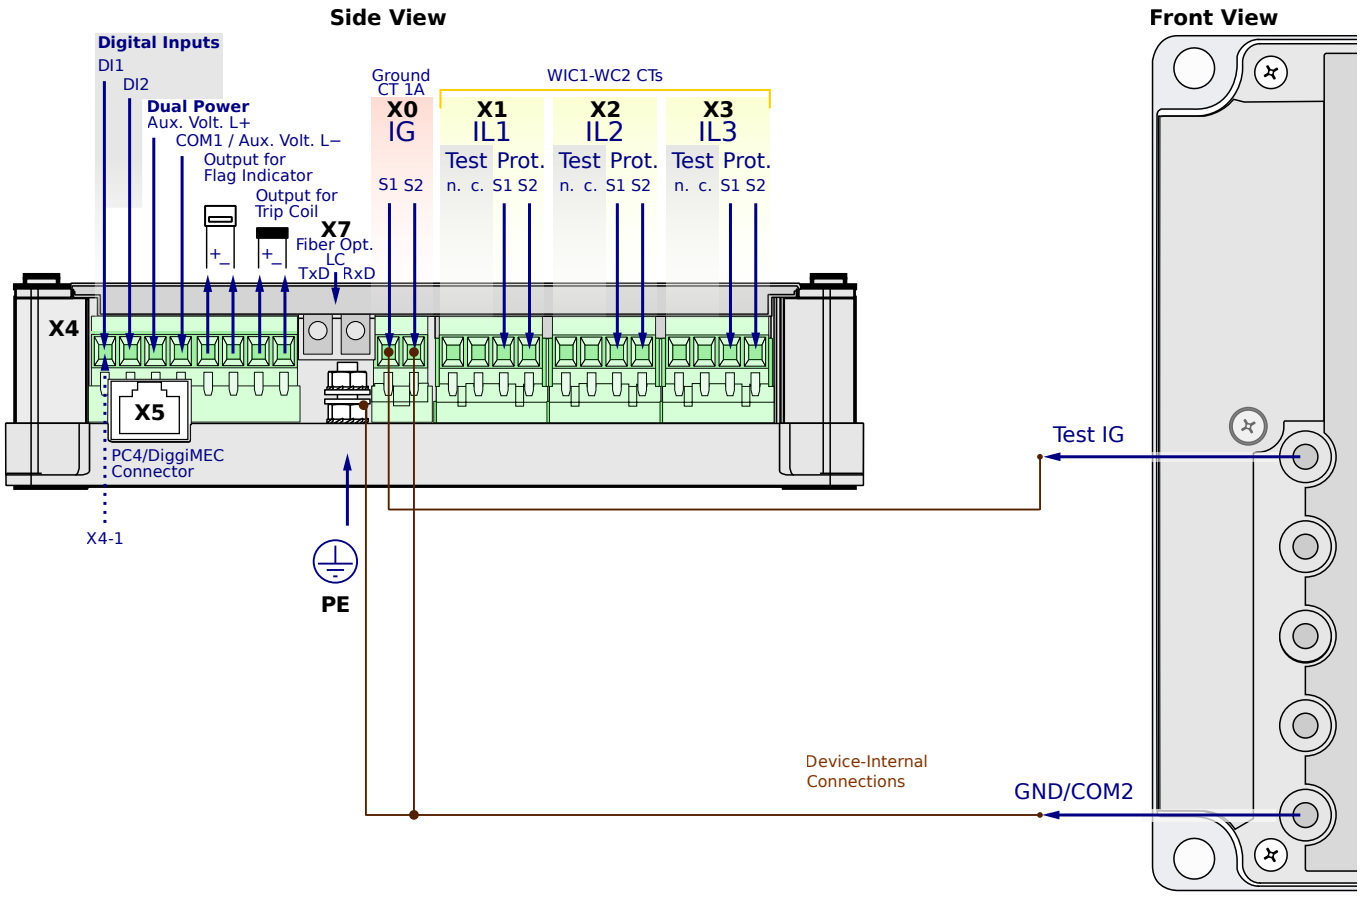


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1AA0

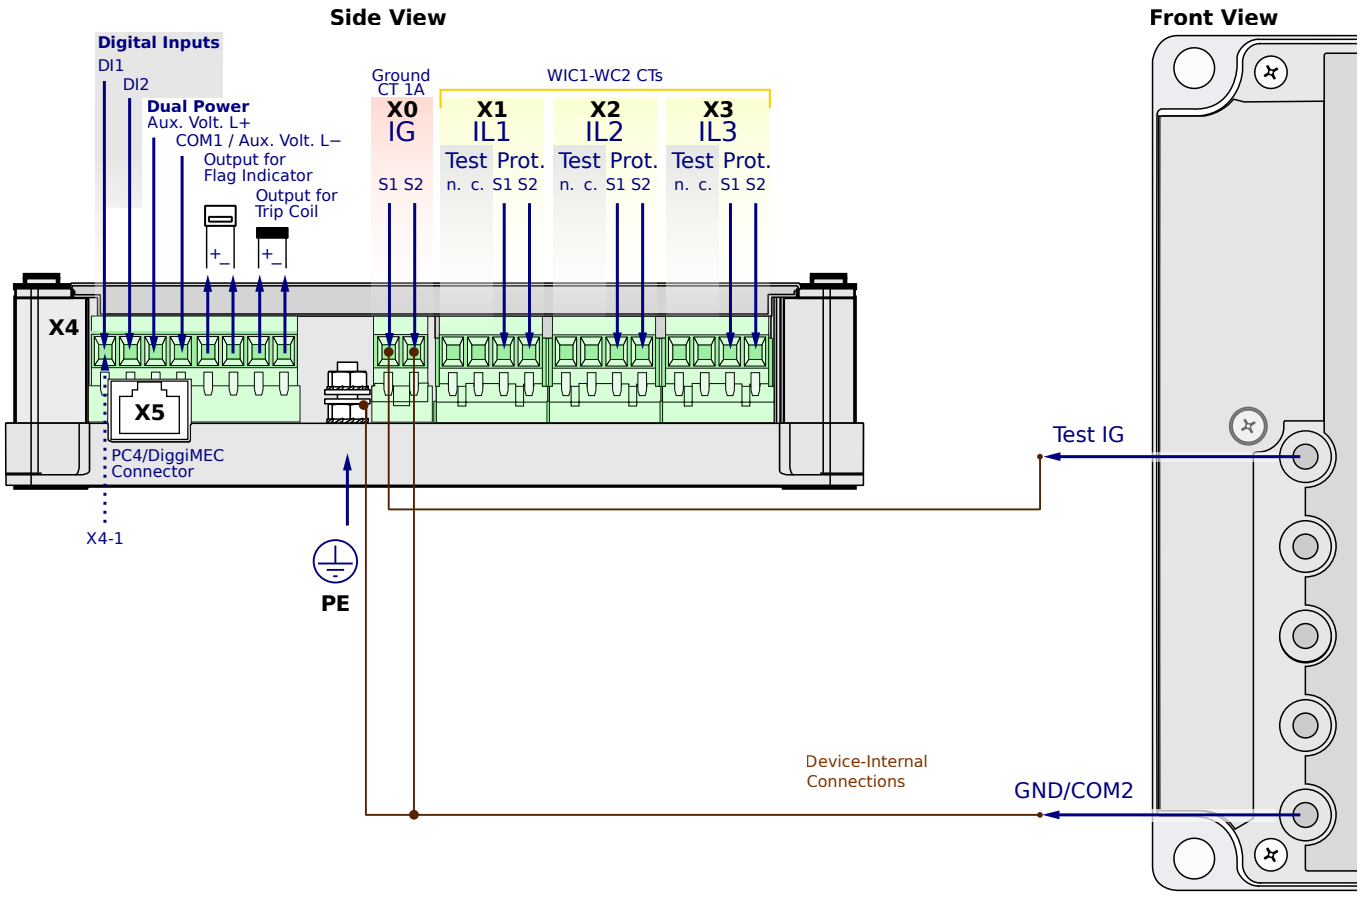


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1AAH

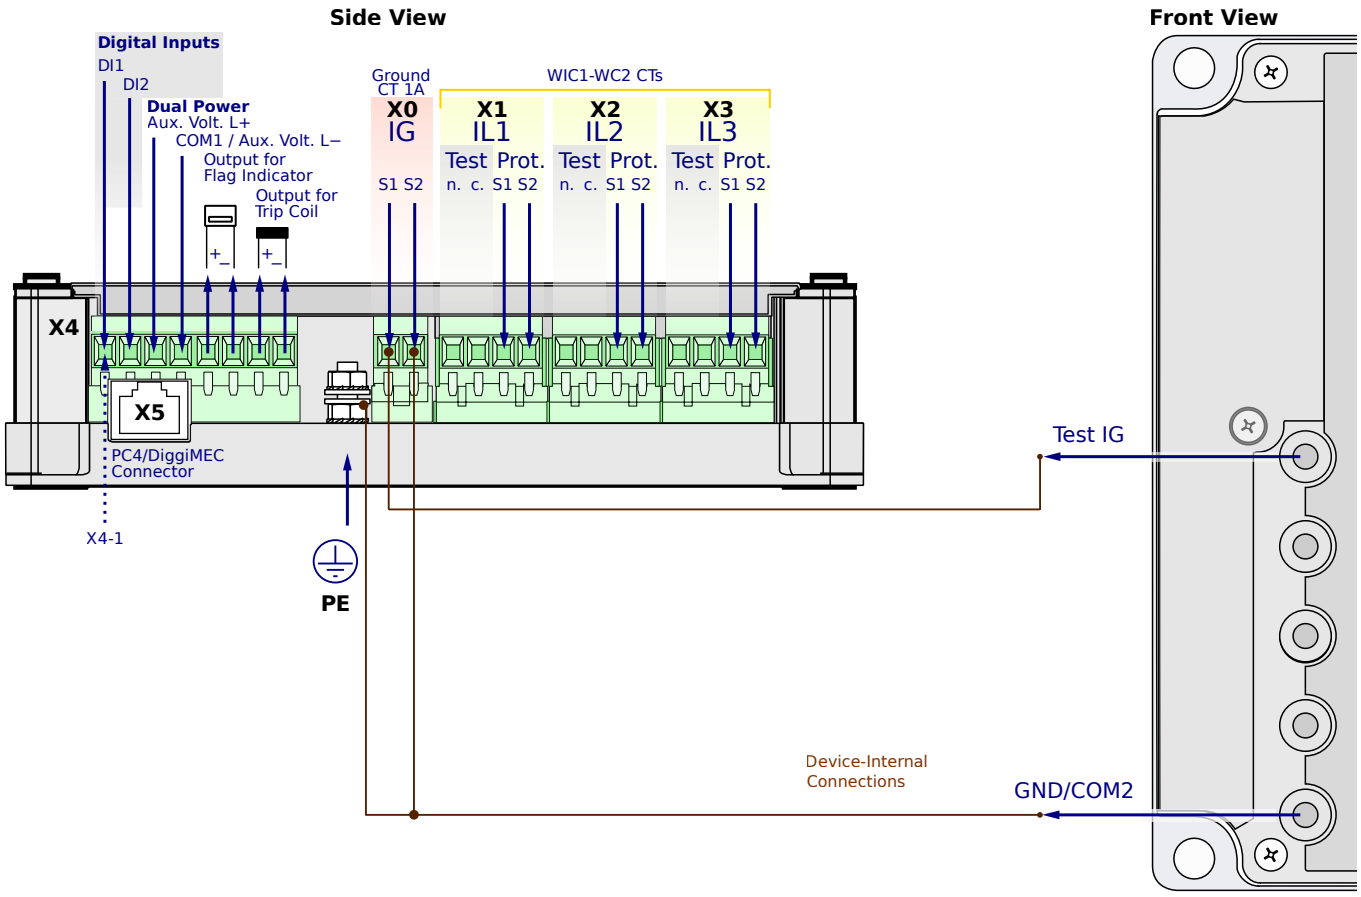


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1AB0

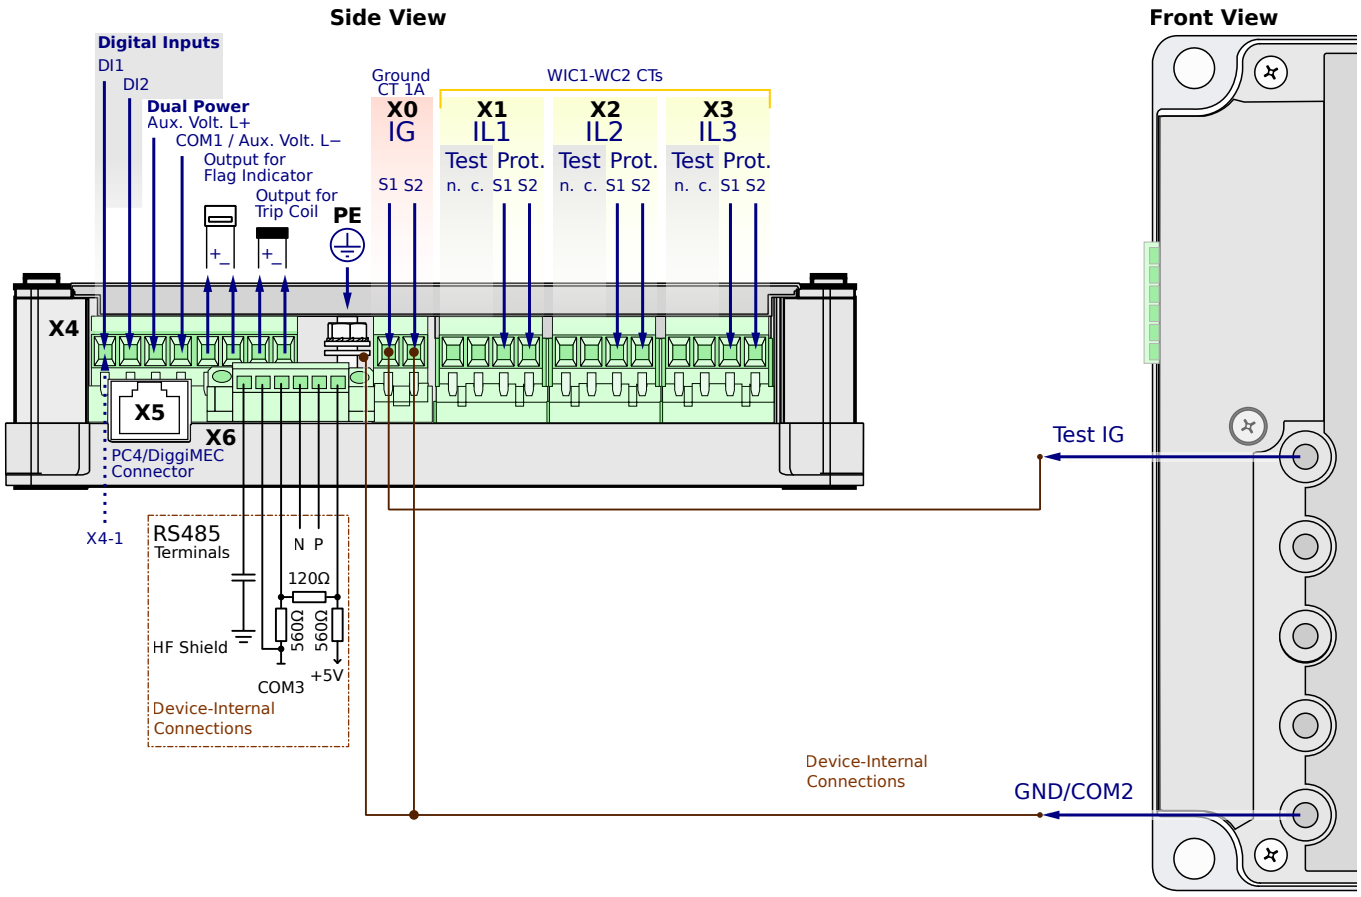


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1ABH

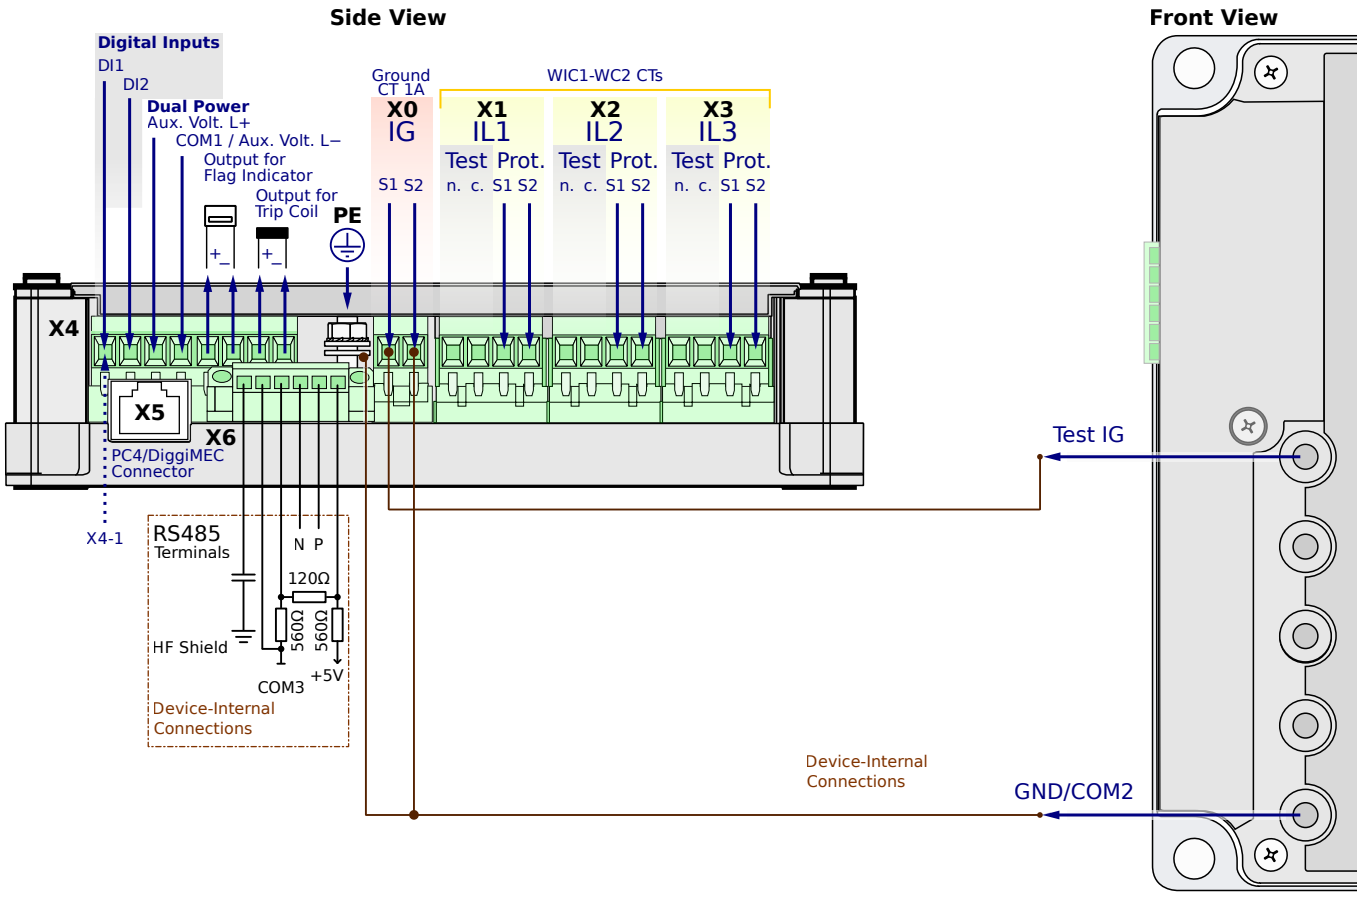


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1AC0

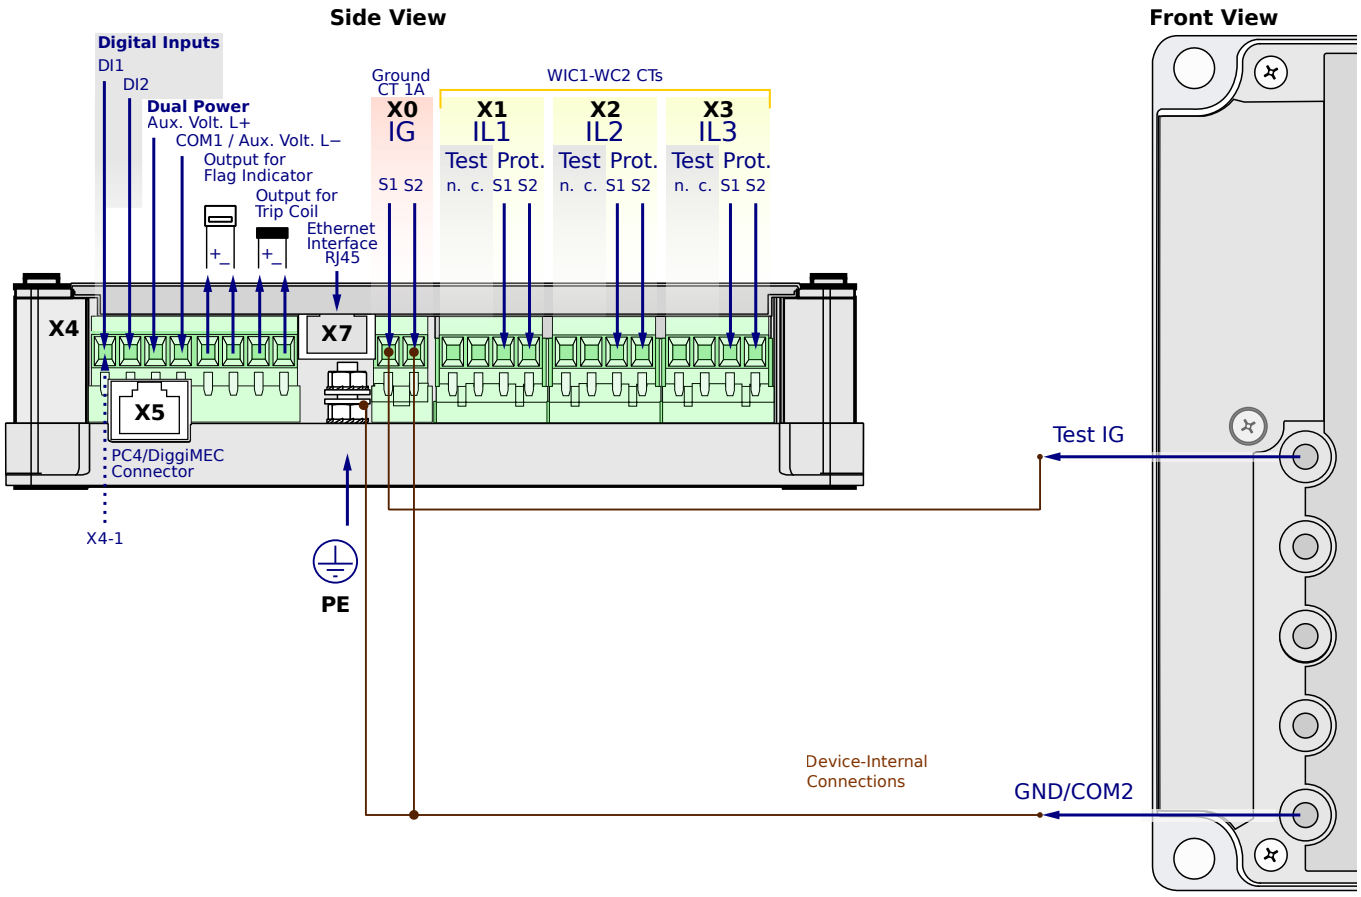


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1ACH

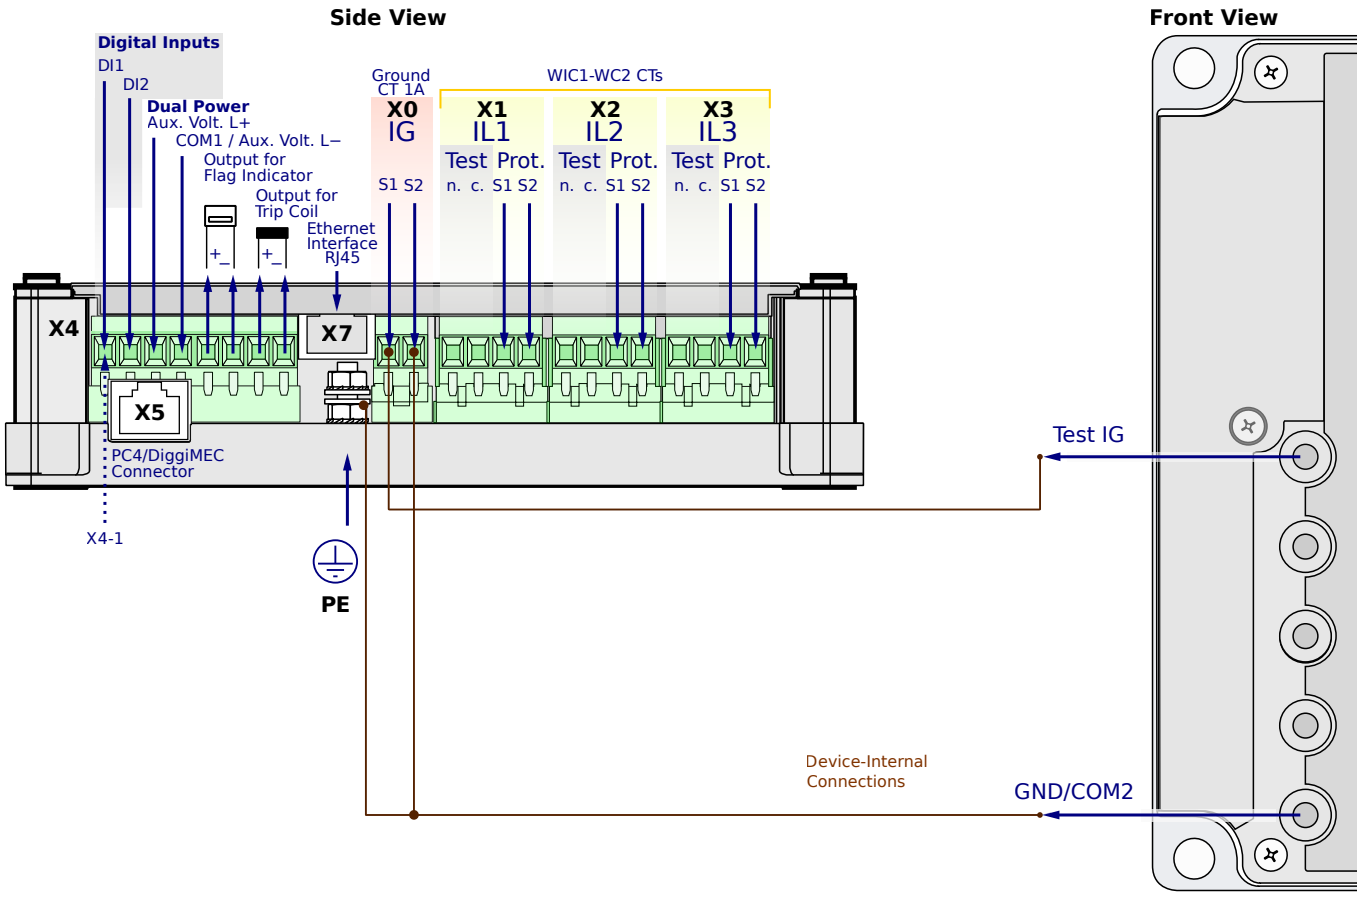


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1AL0

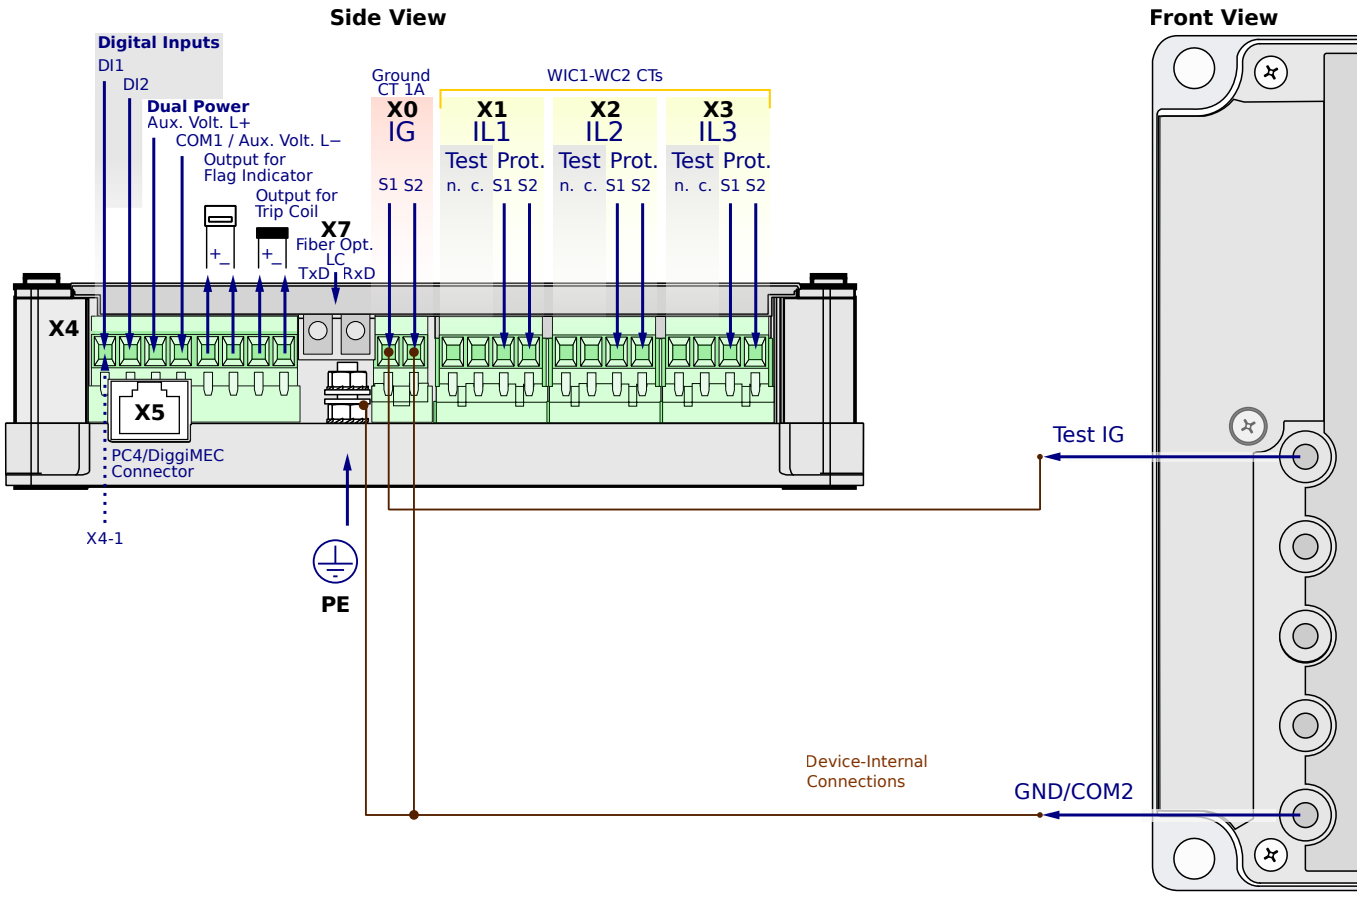


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1ALH

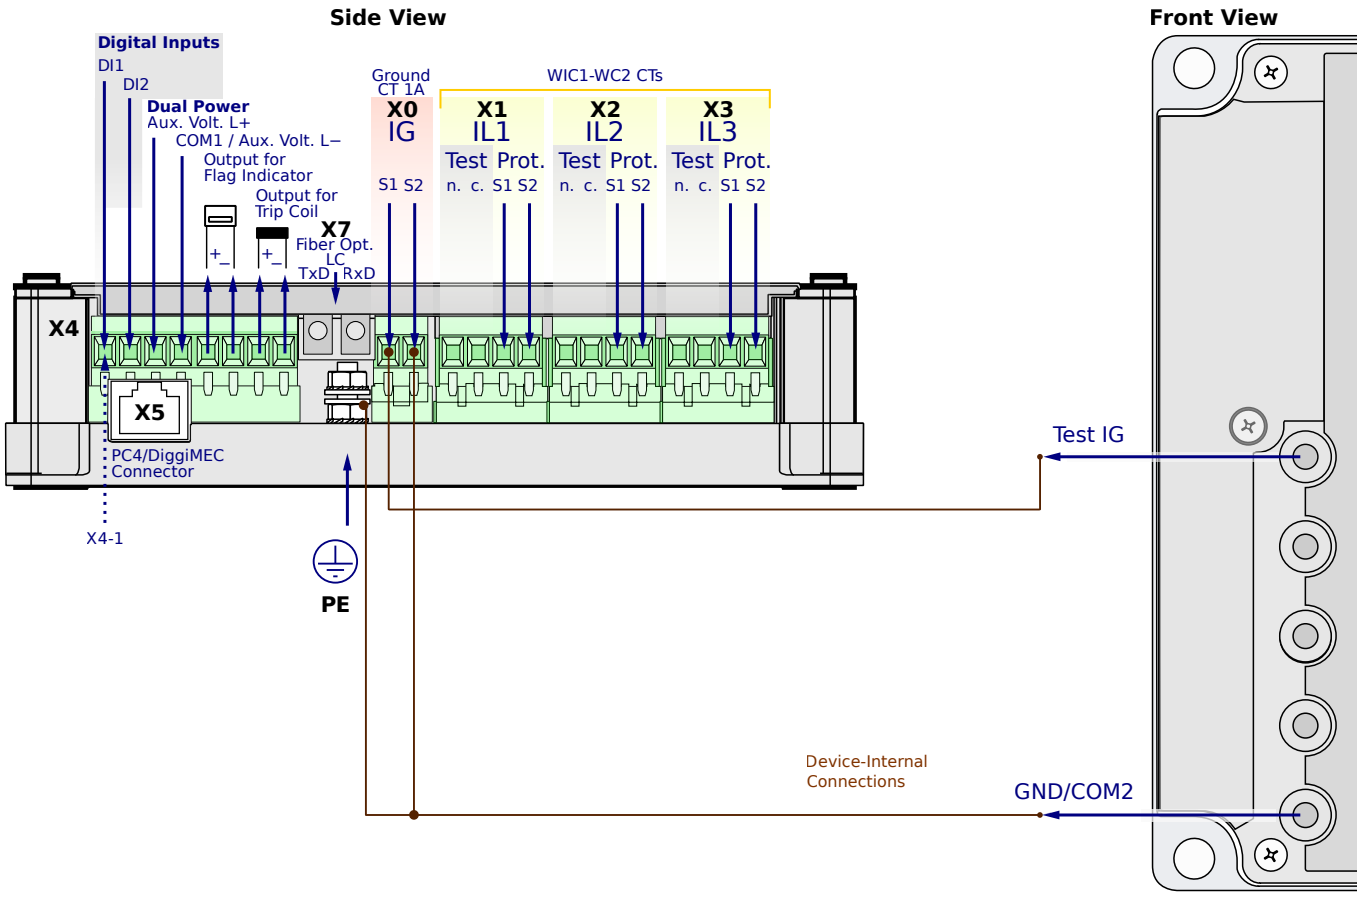


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1PA0

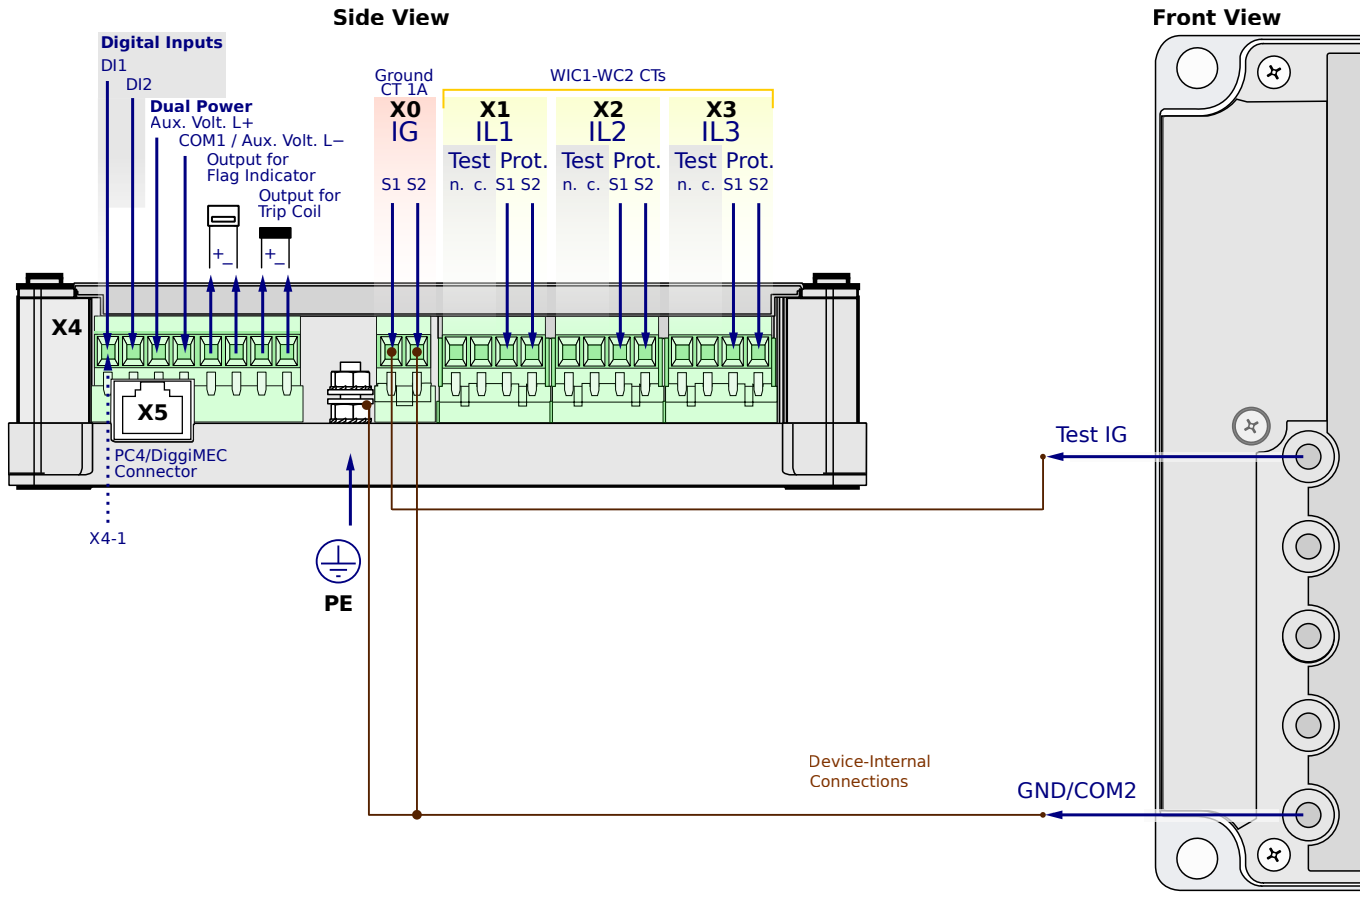


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1PAH

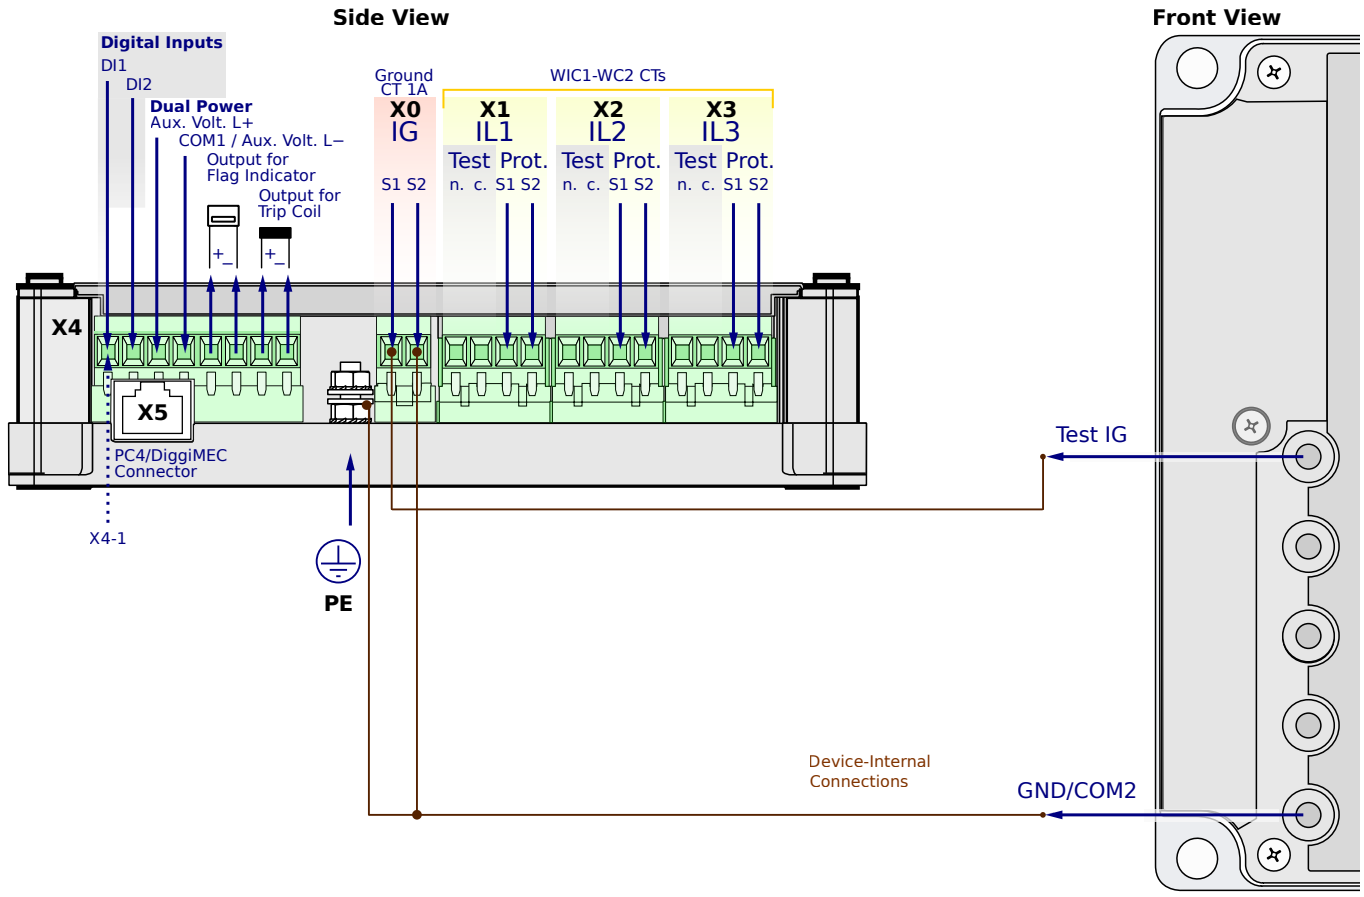


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND1PB0

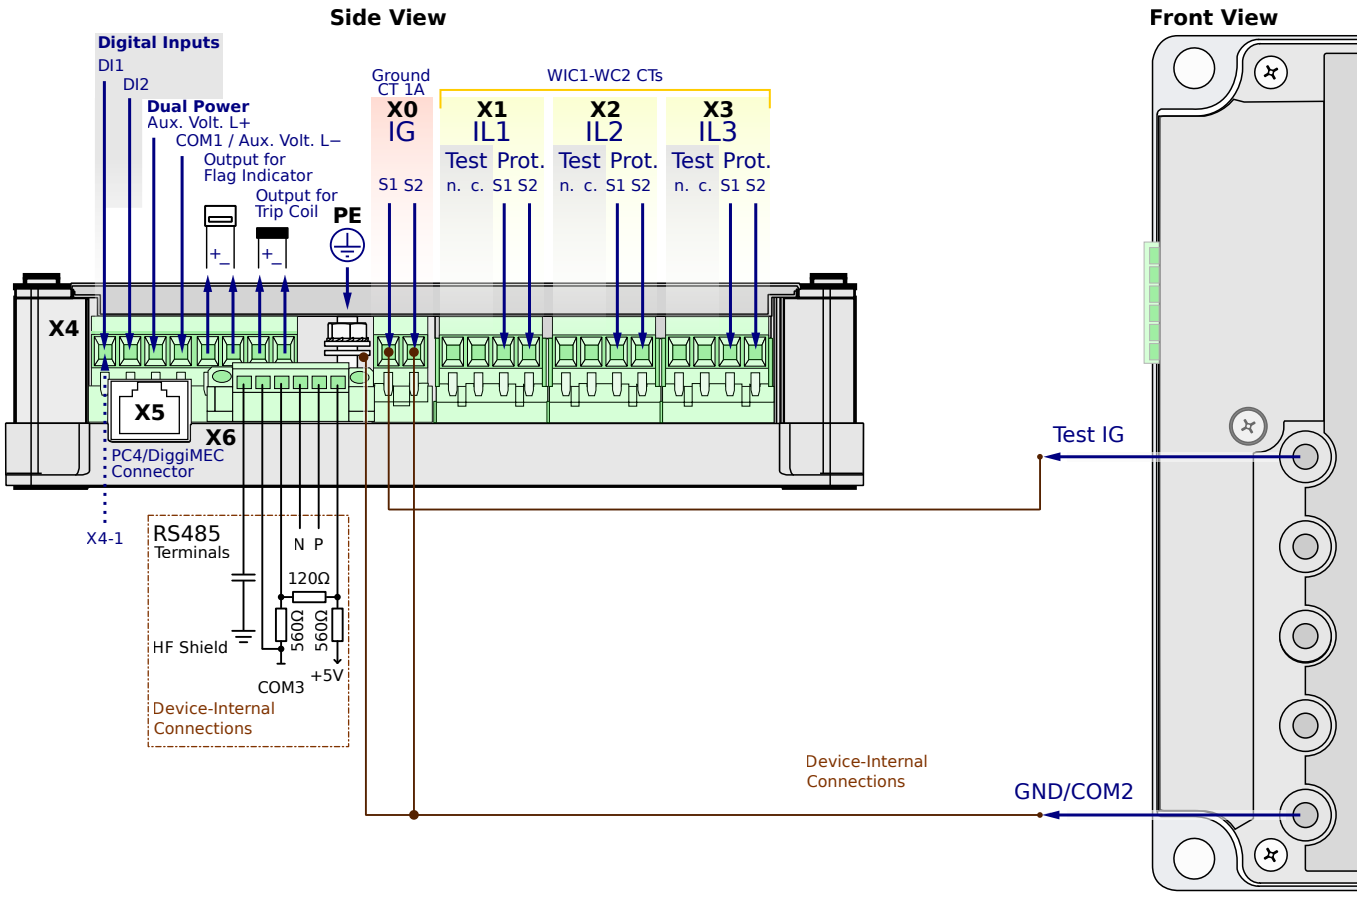


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1PBH

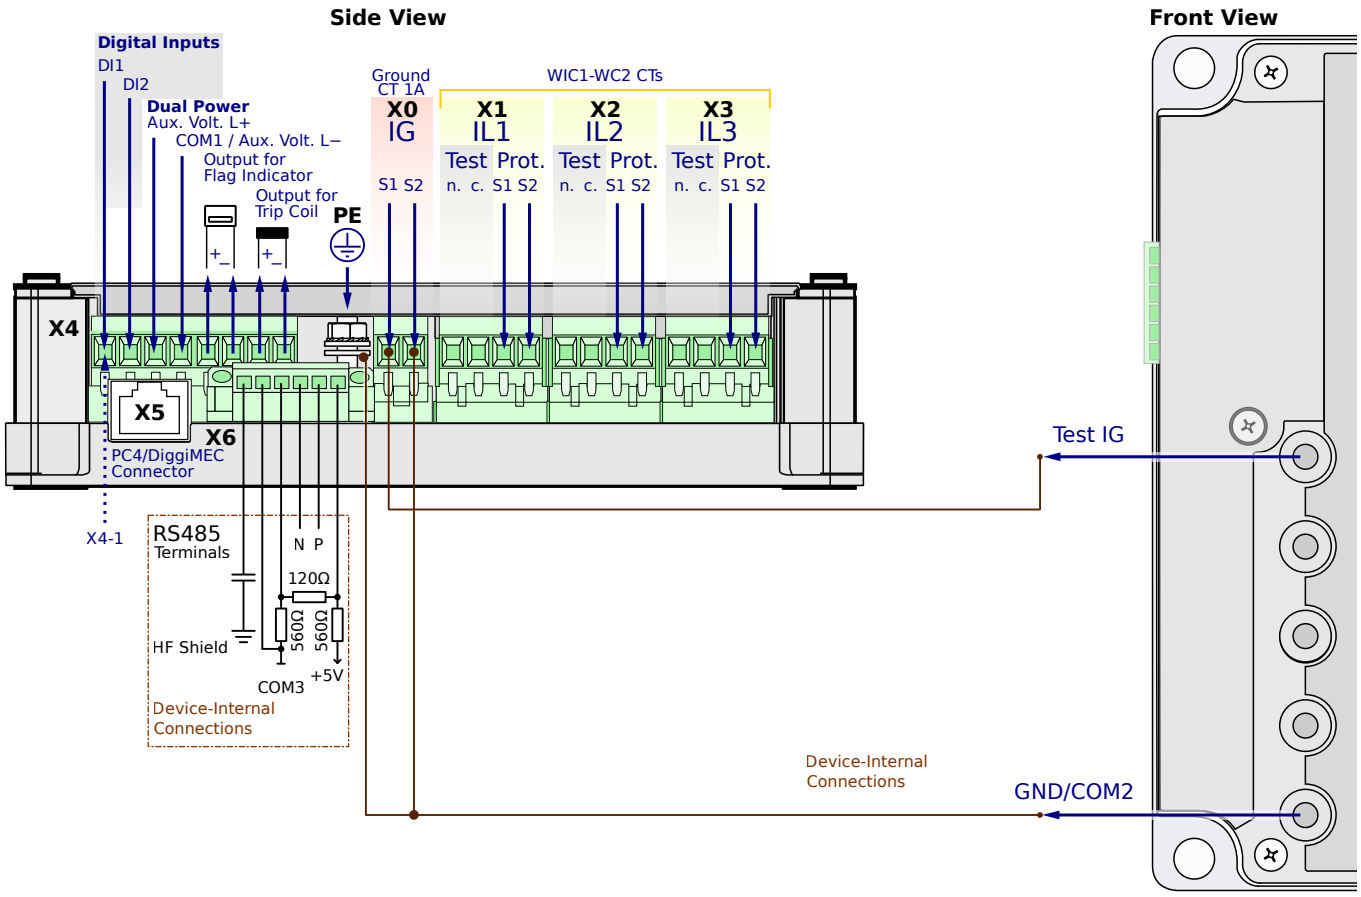


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND1PC0

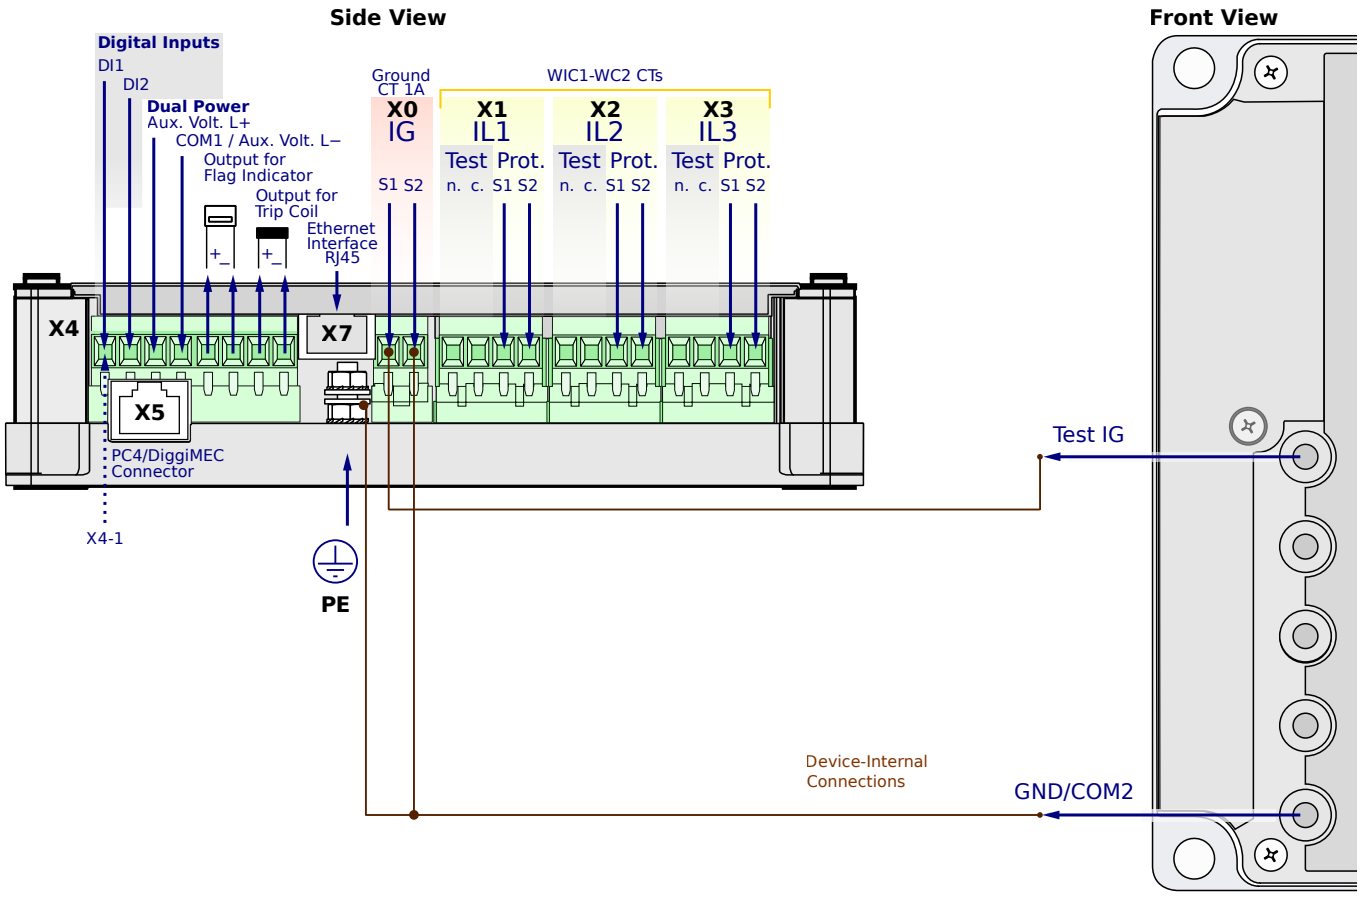


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1PCH

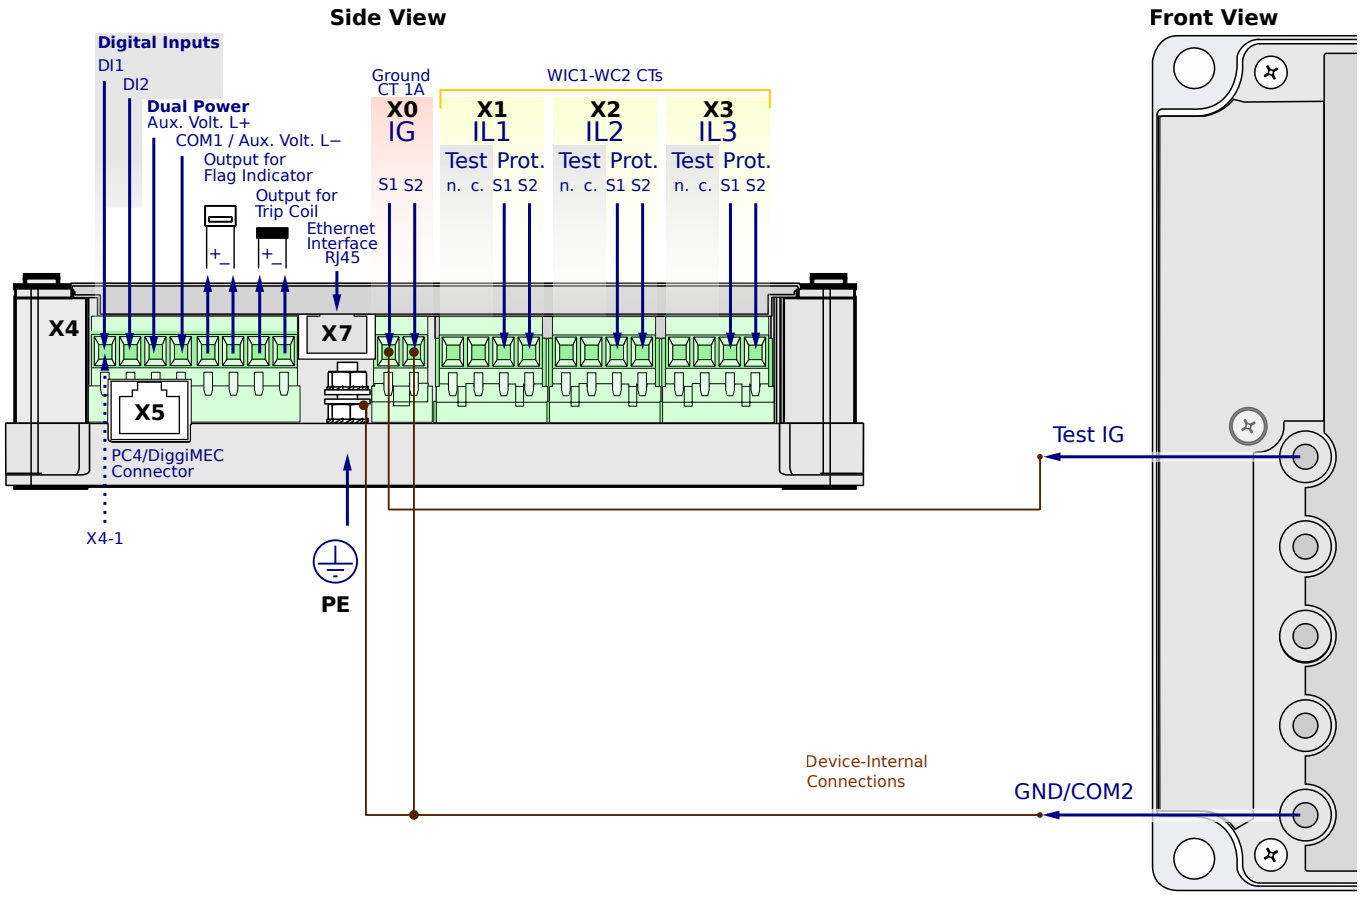


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND1PL0

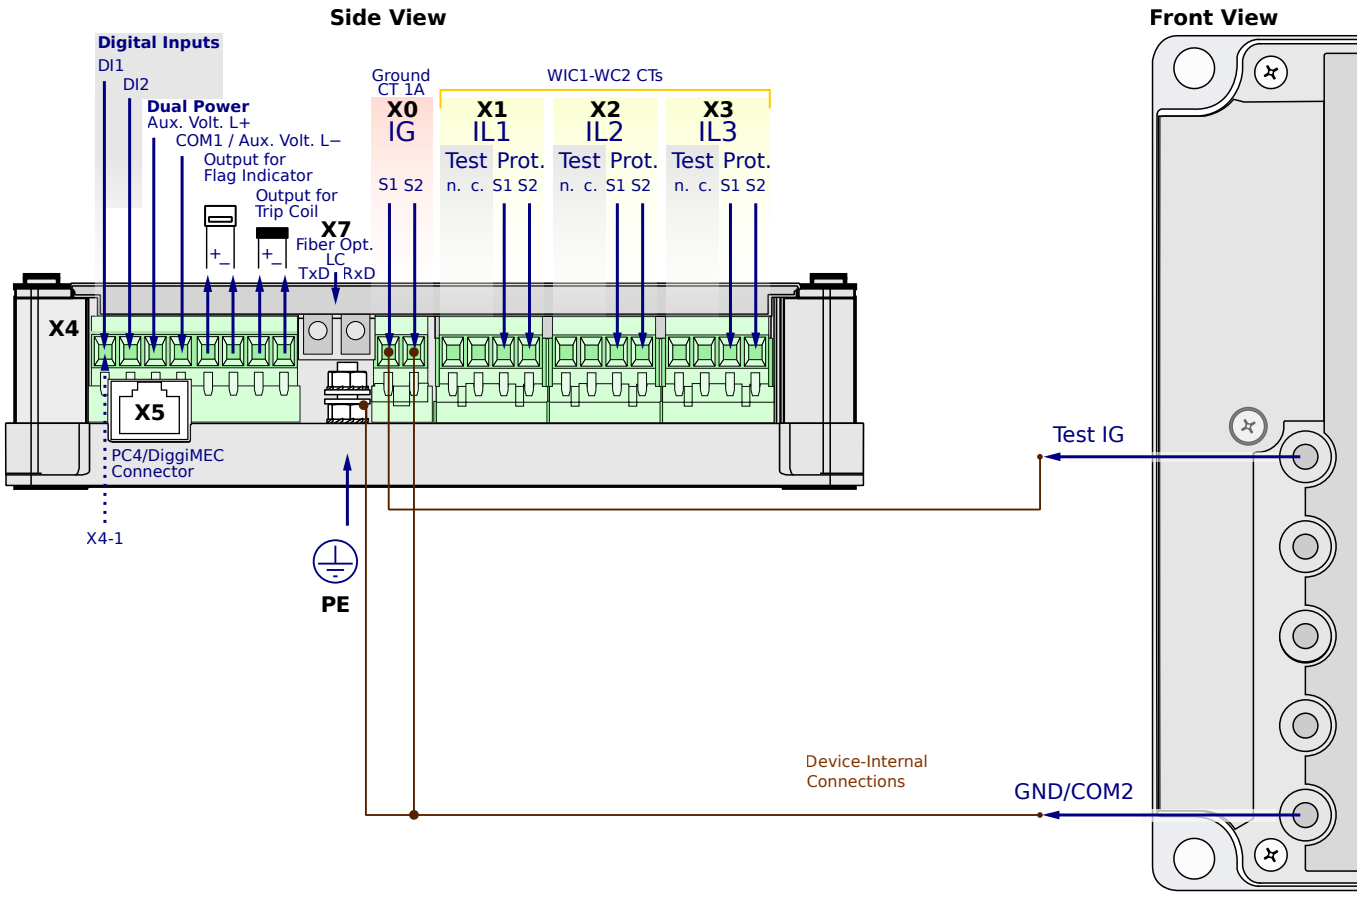


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND1PLH

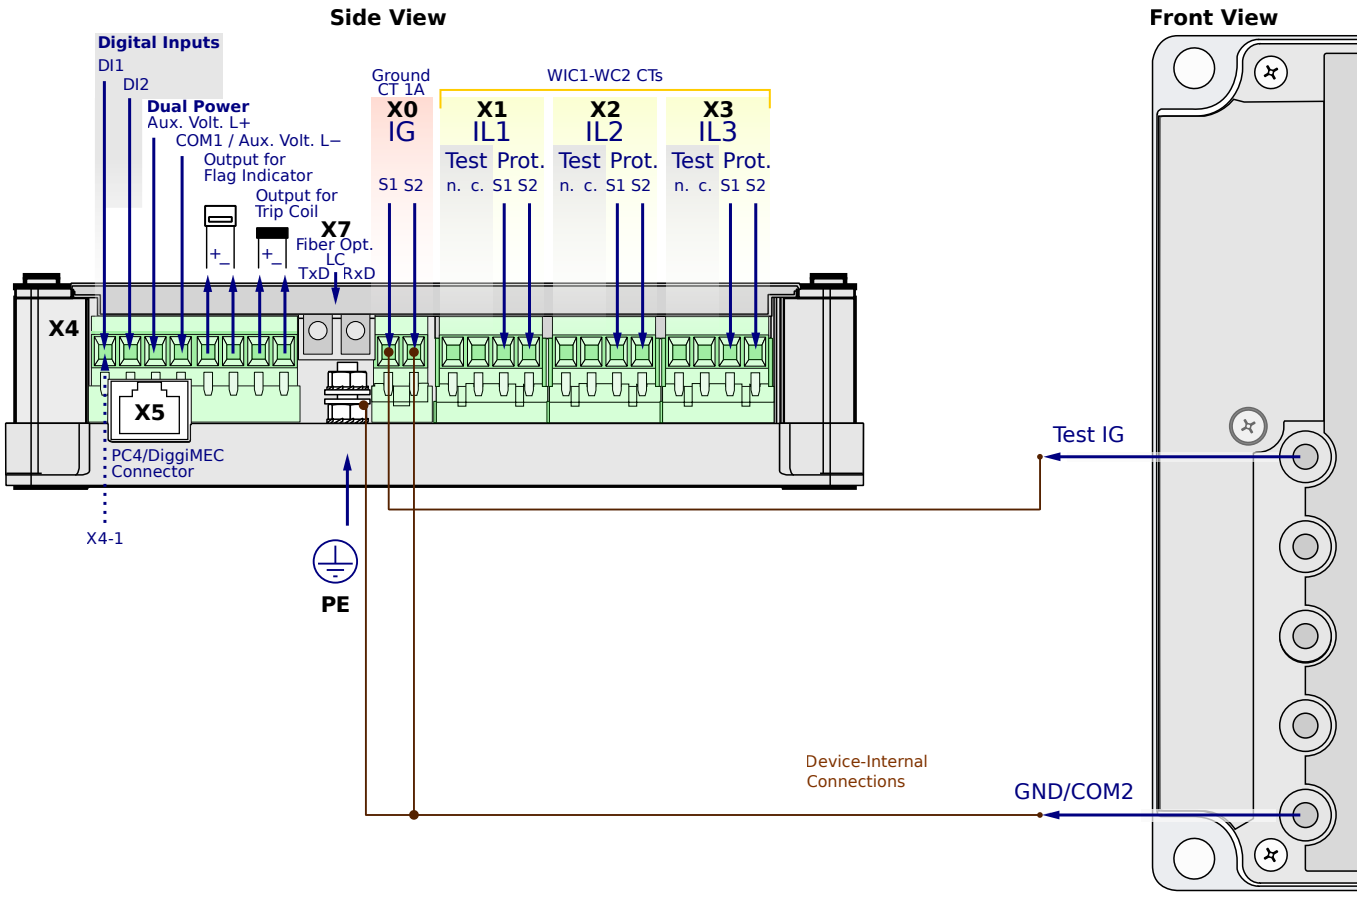


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2SA0

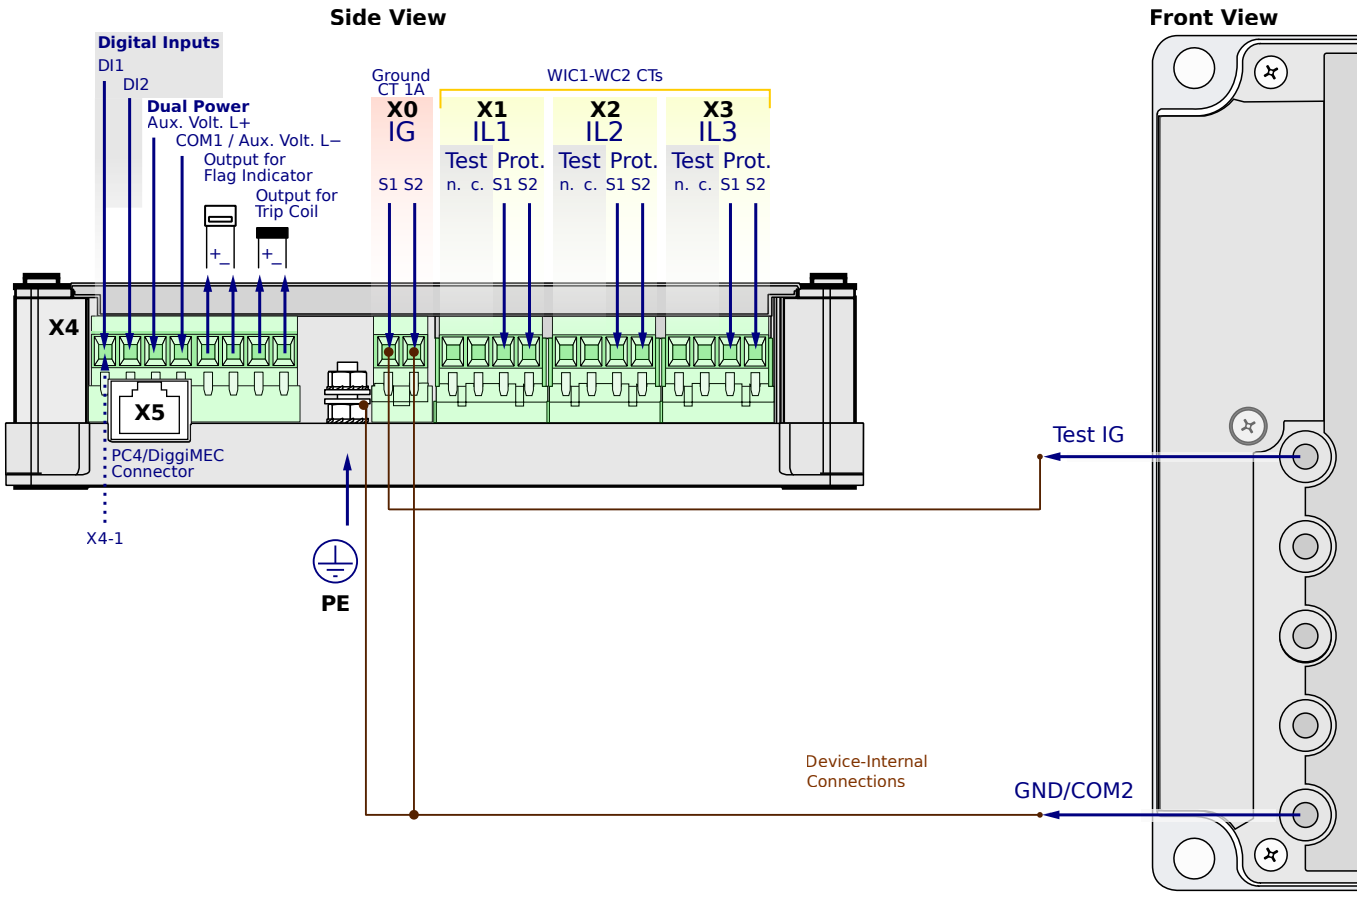


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2SAH

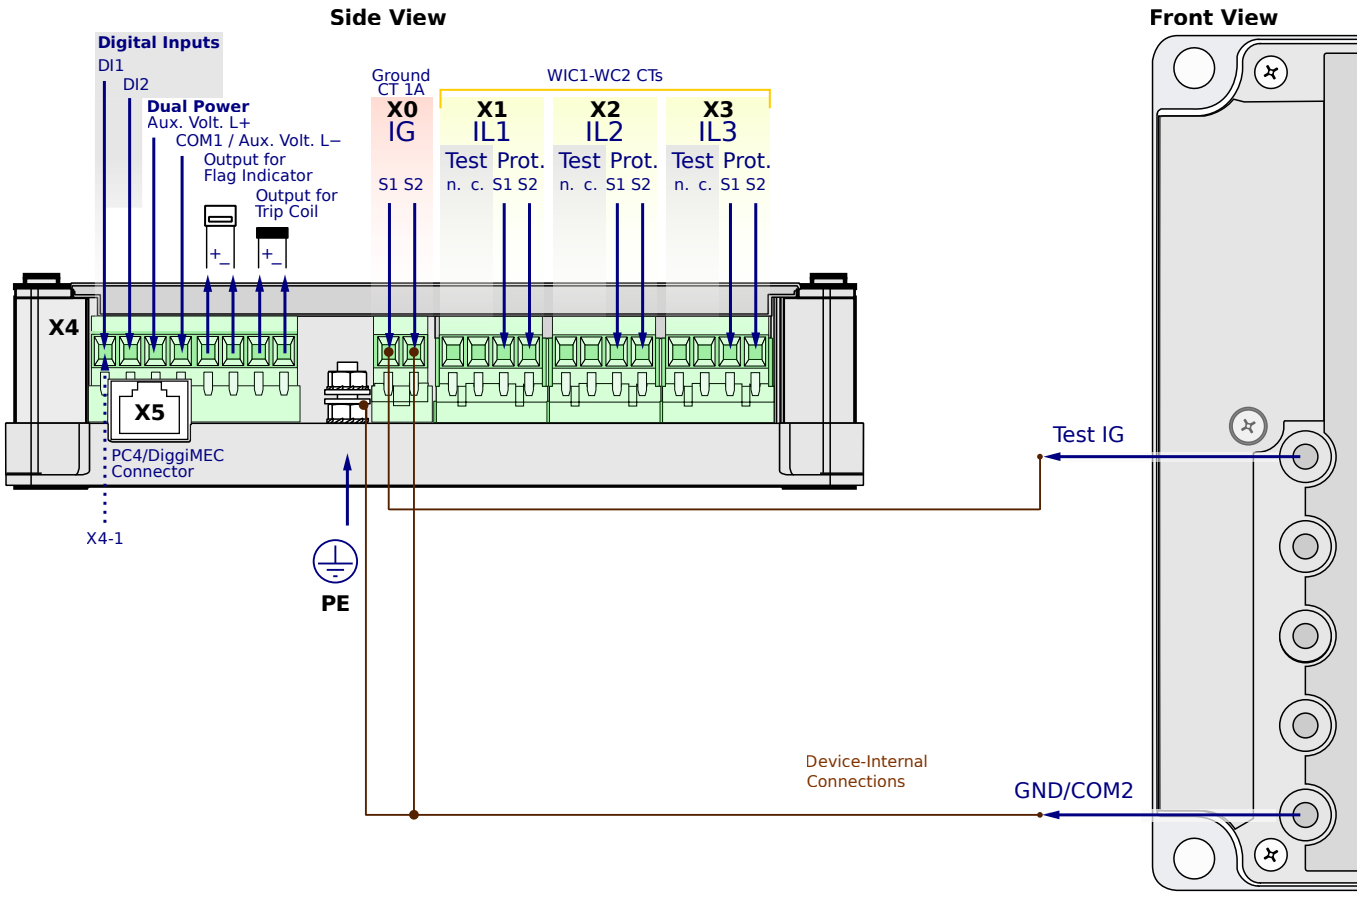


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2SB0

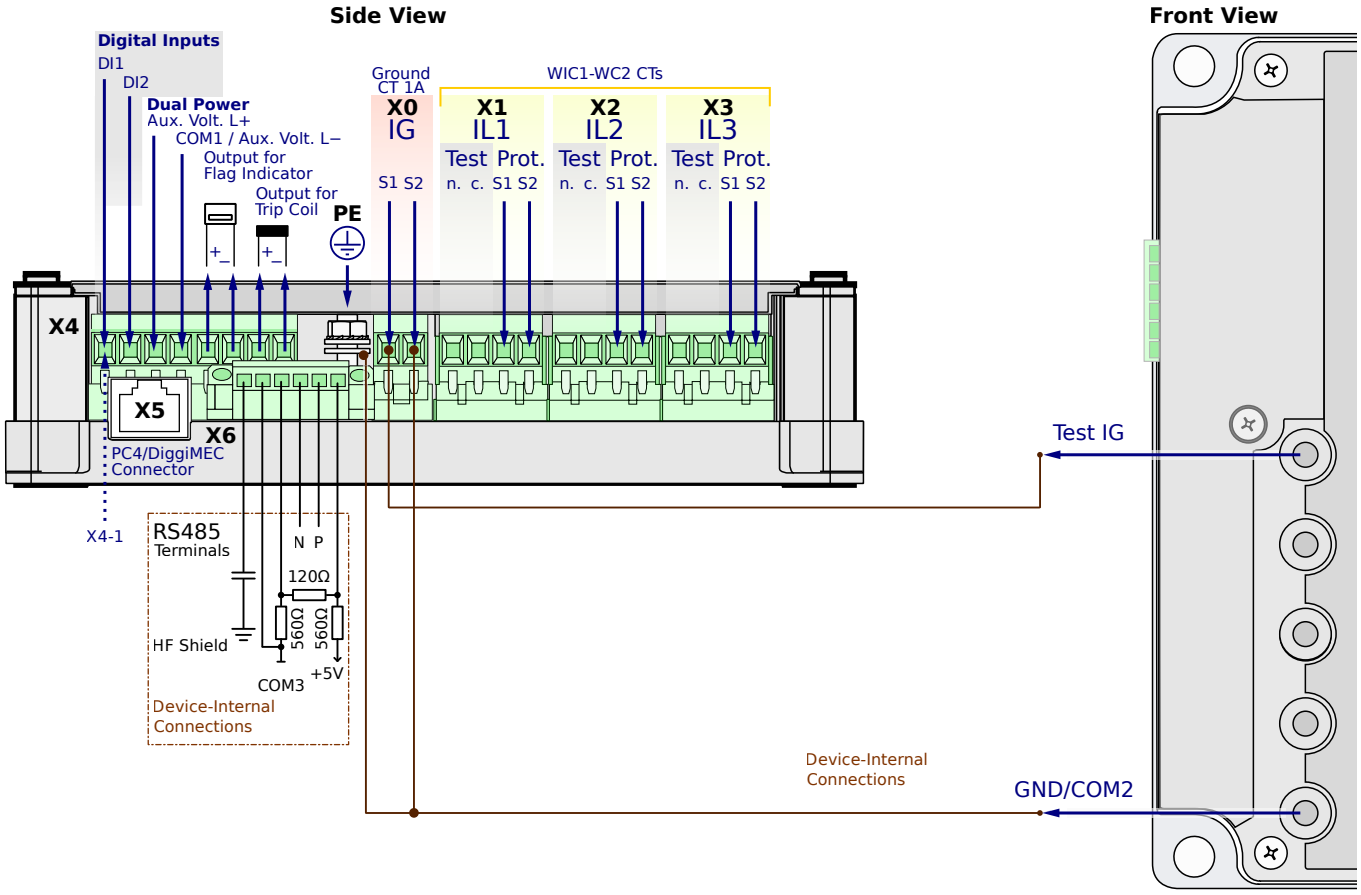


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2SBH

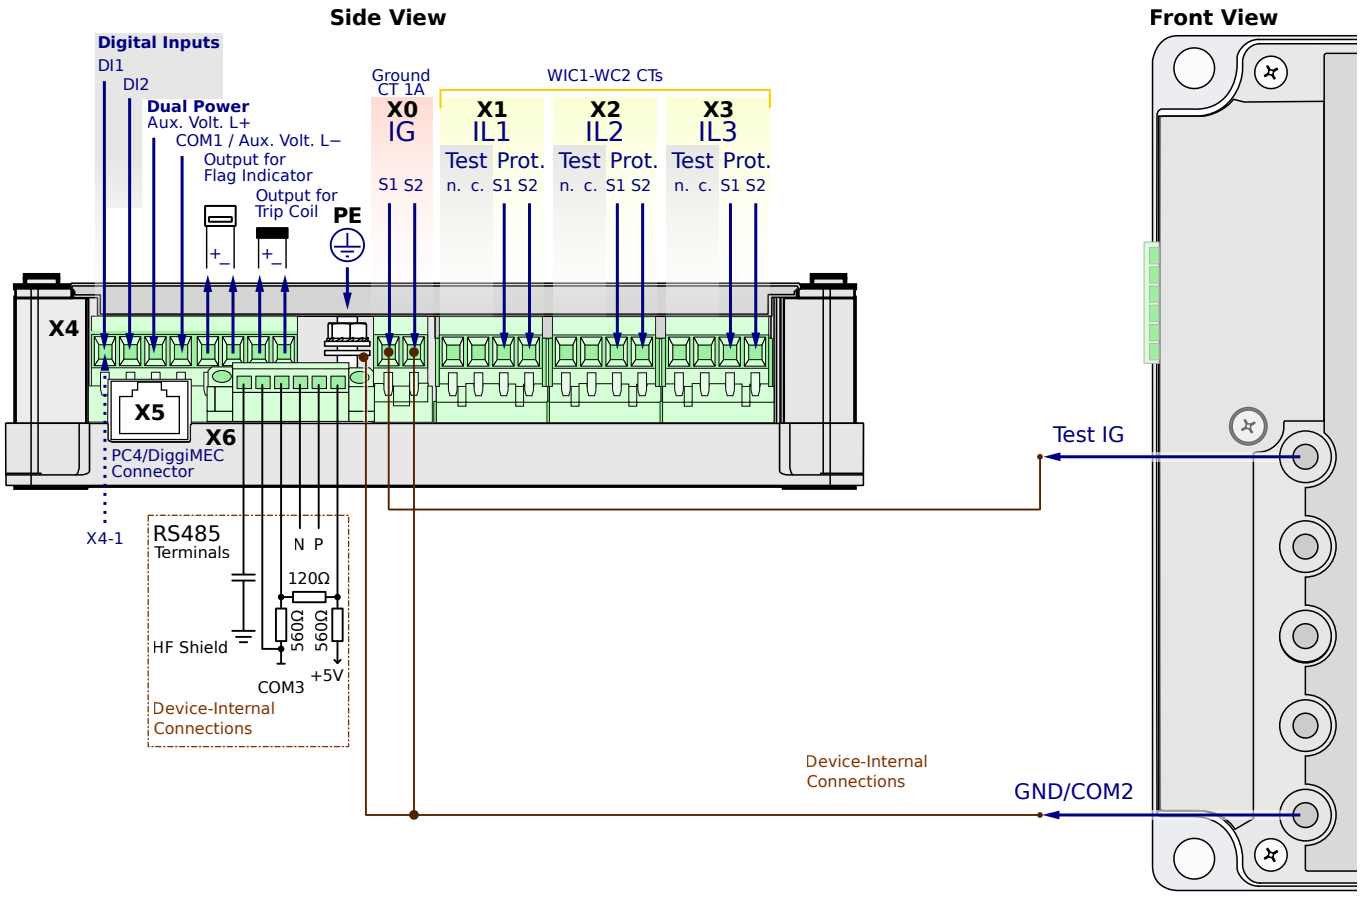


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2SC0

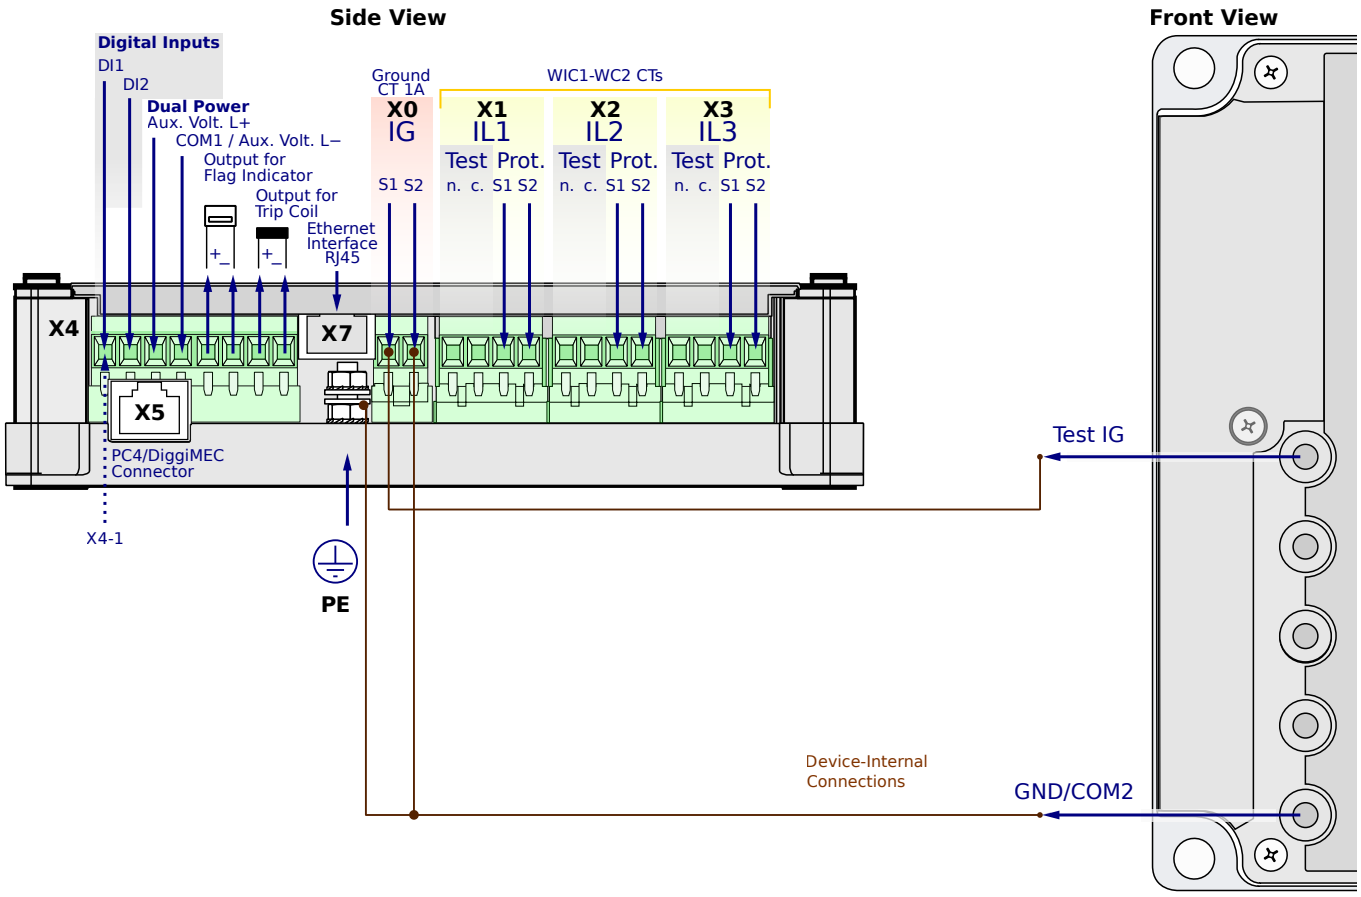


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2SCH

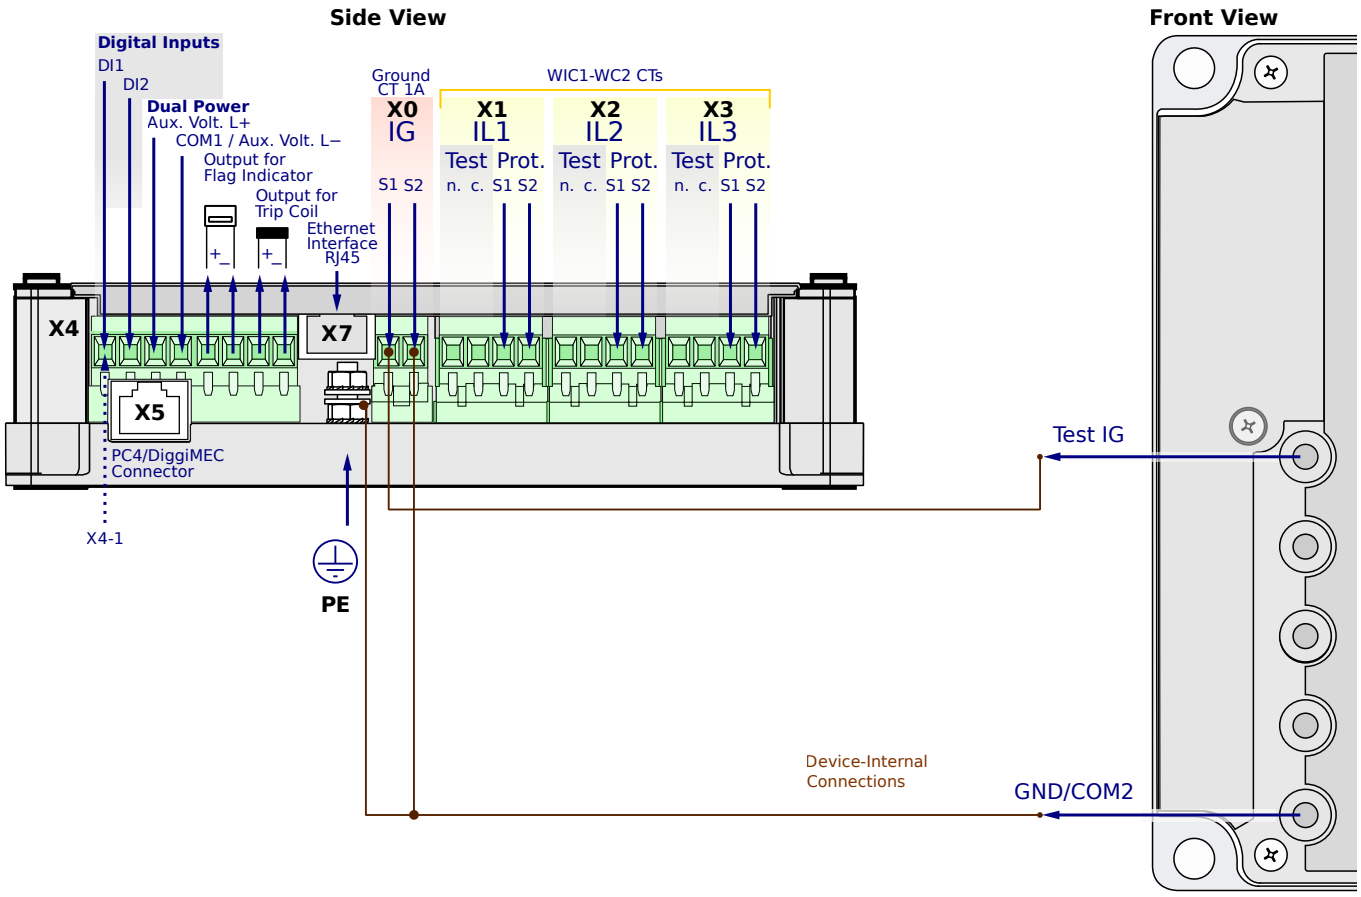


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2SL0

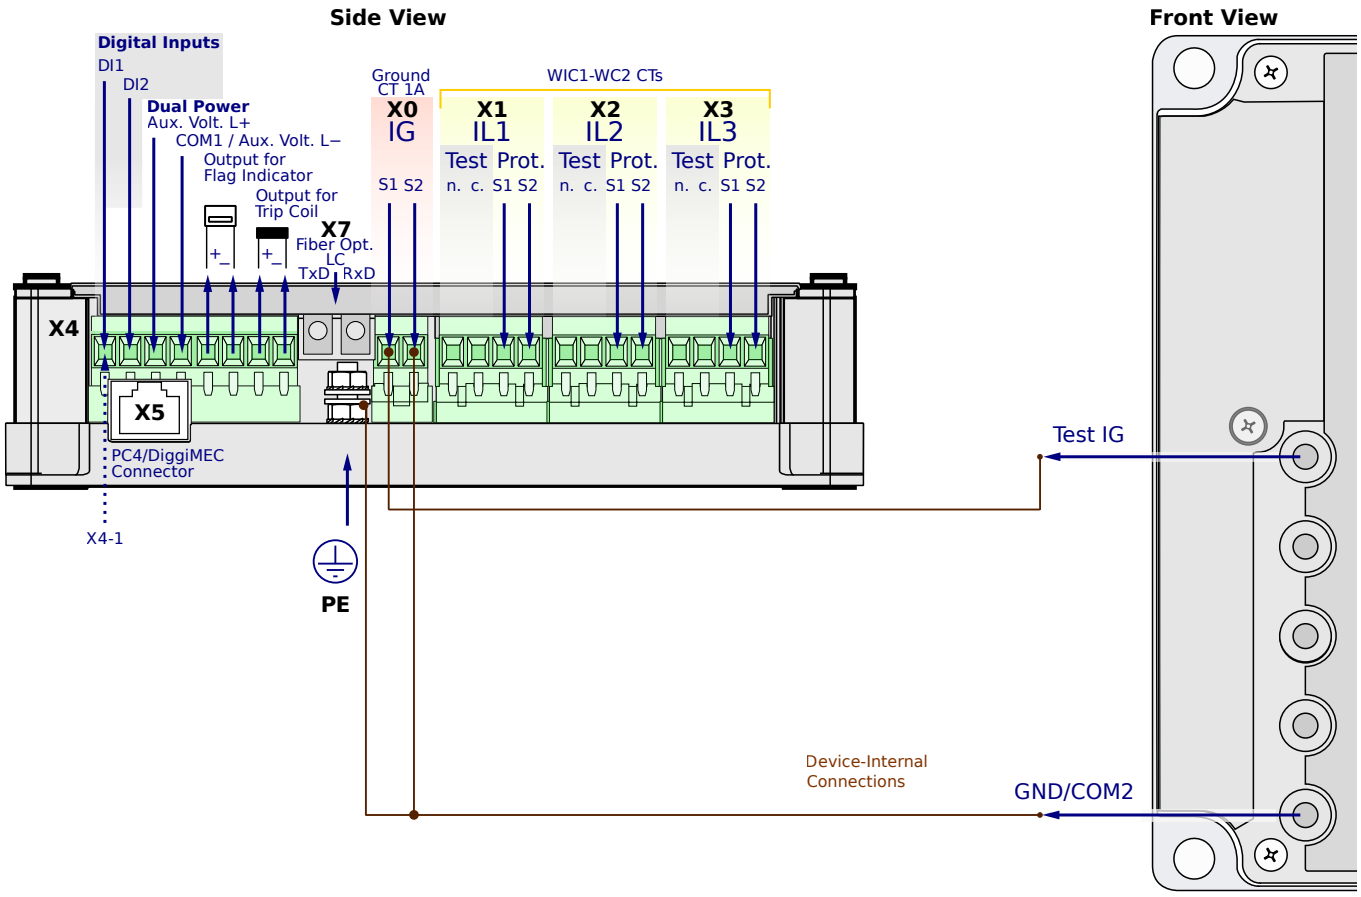


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2SLH

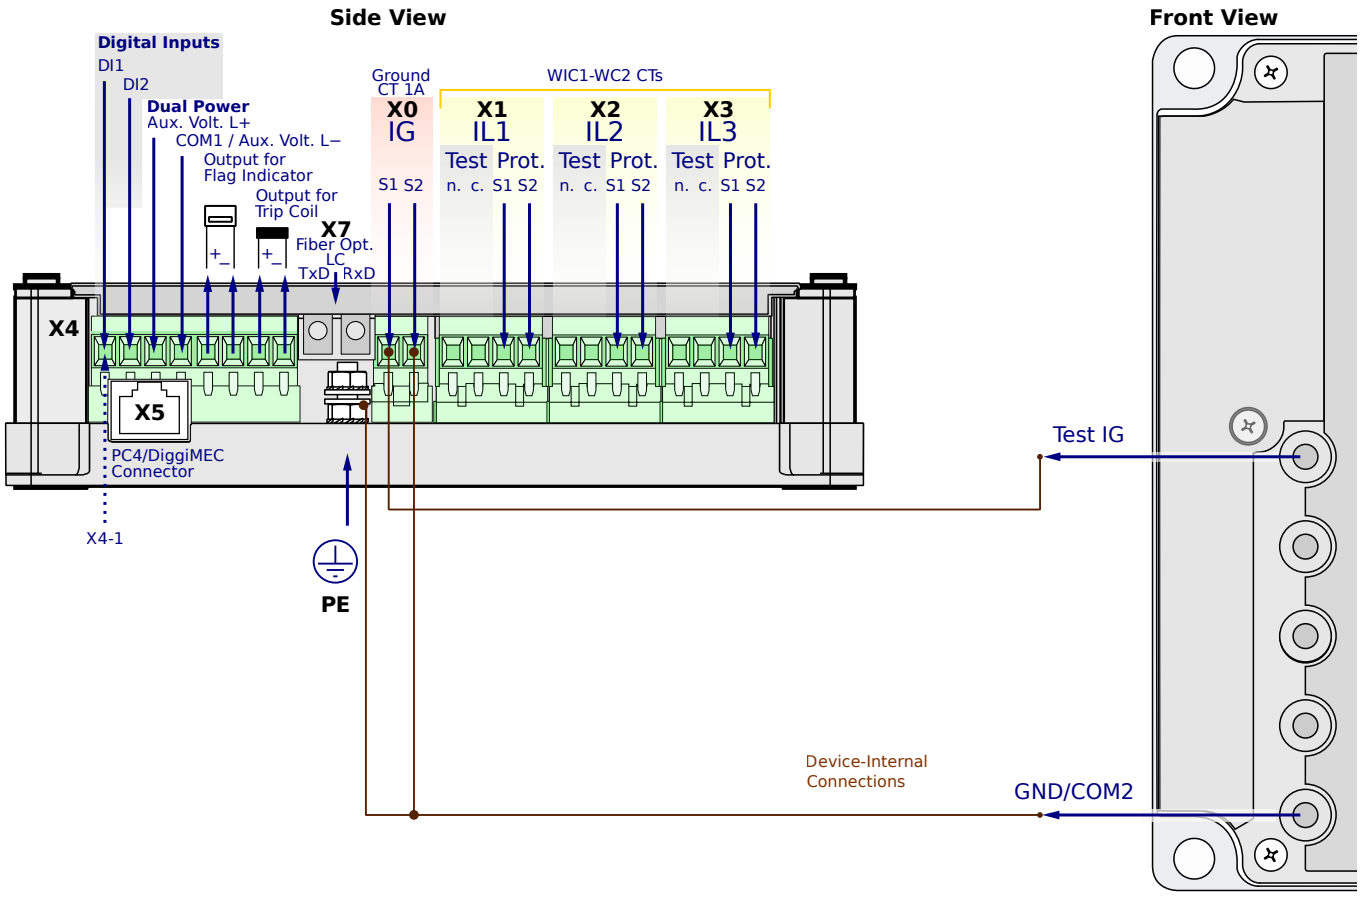


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2AA0

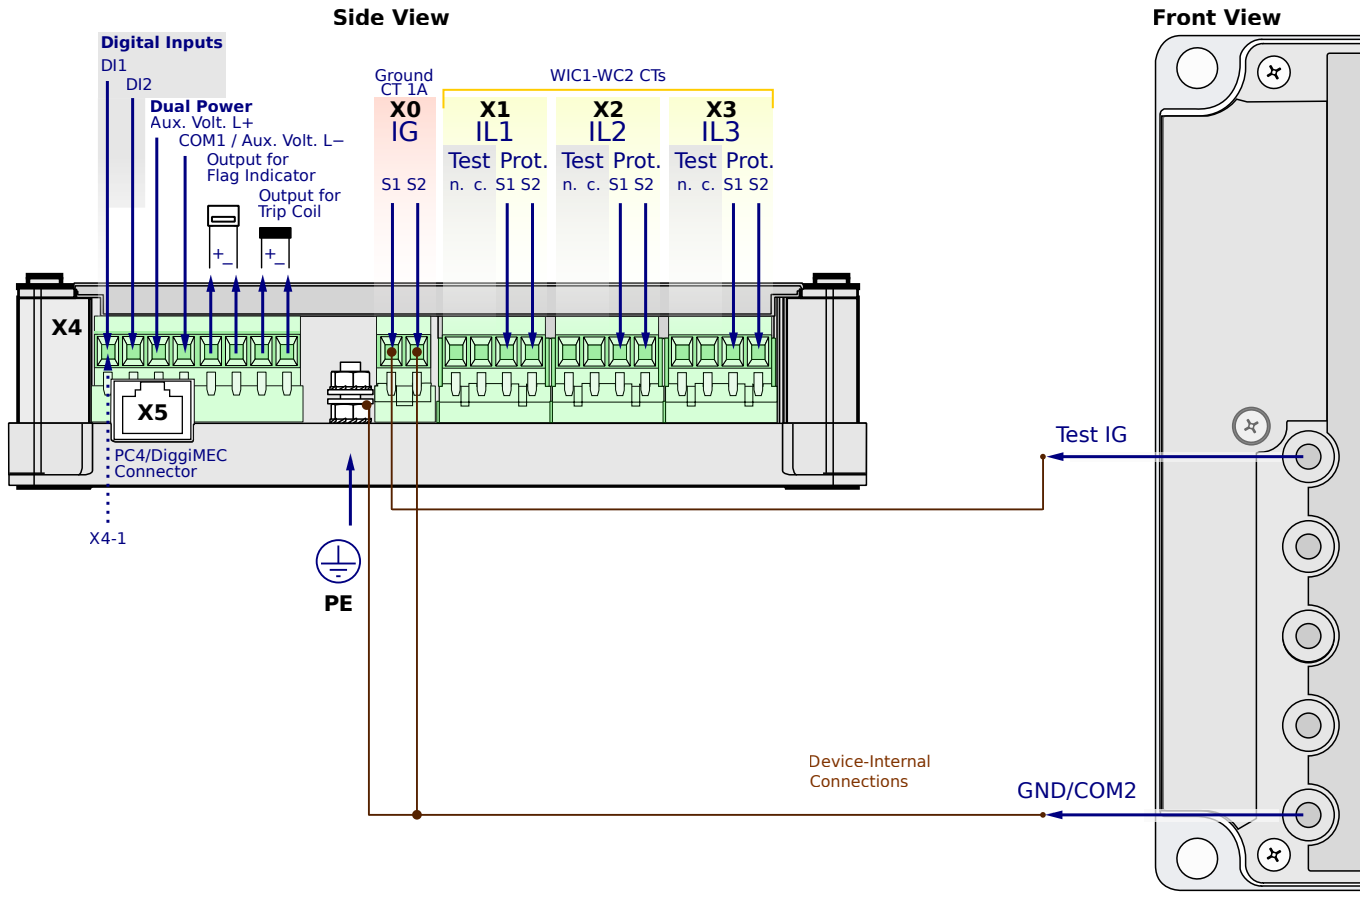


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2AAH

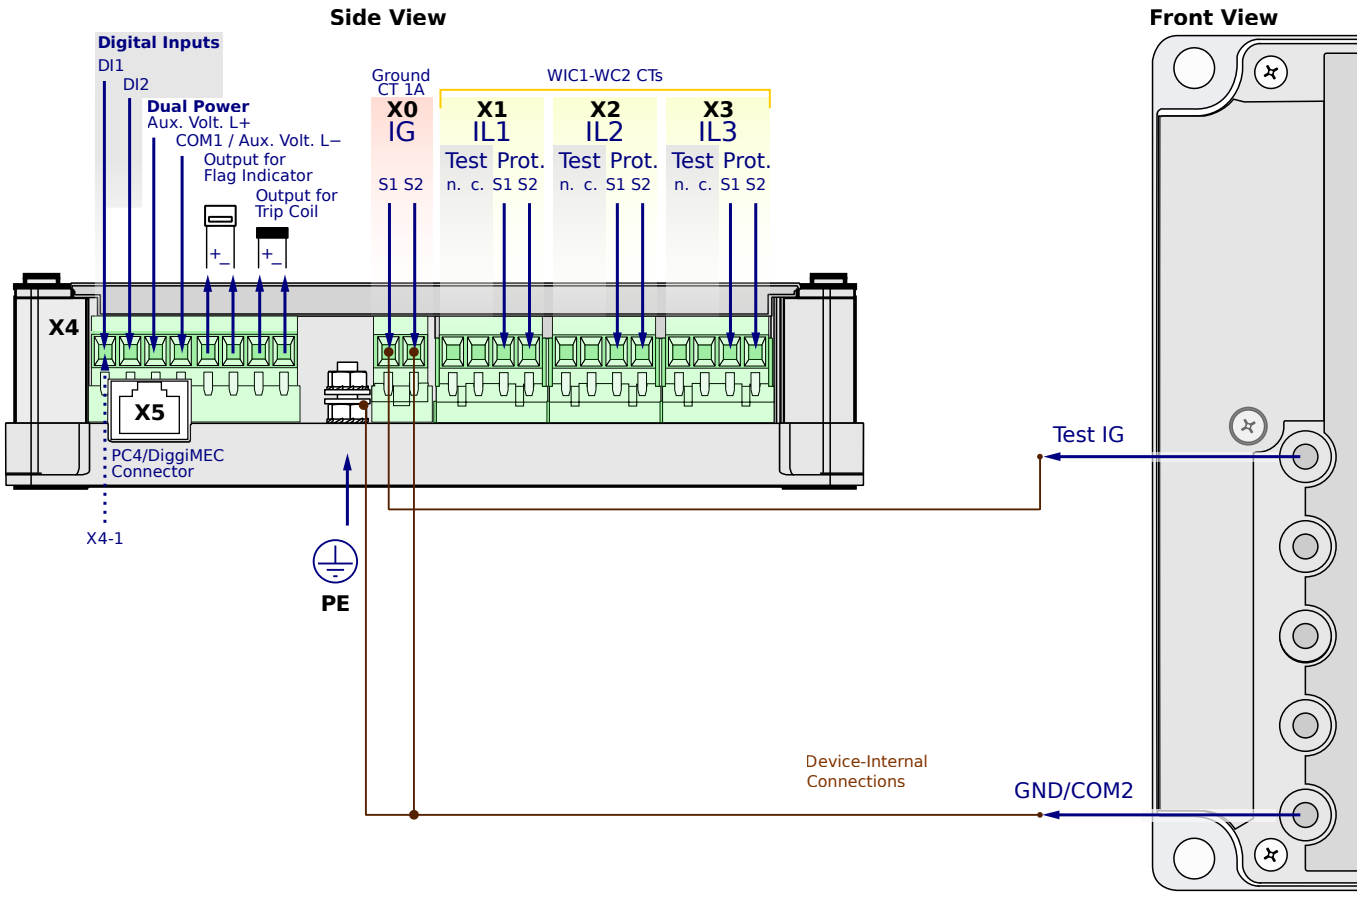


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2AB0

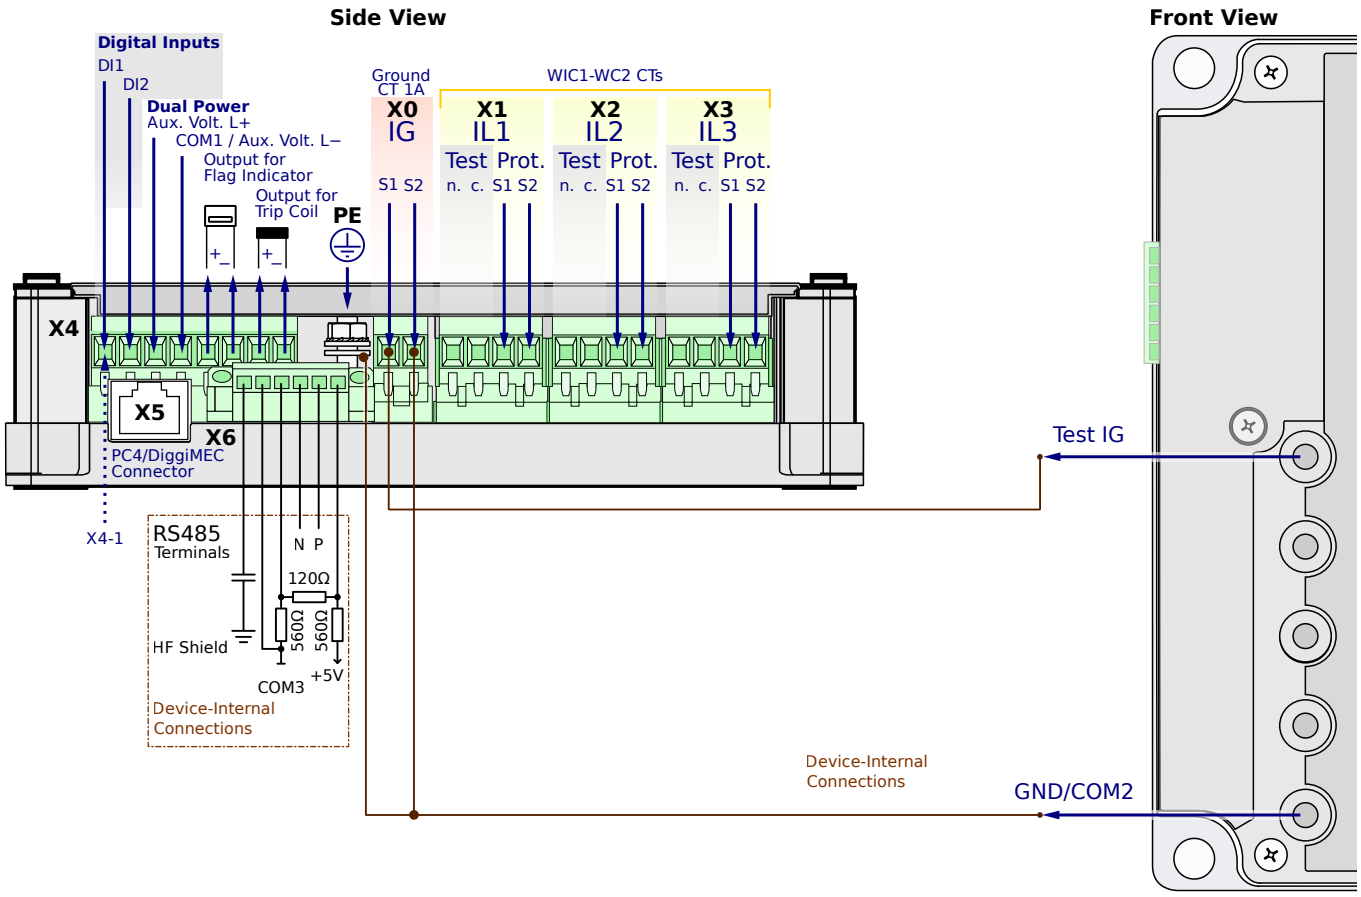


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2ABH

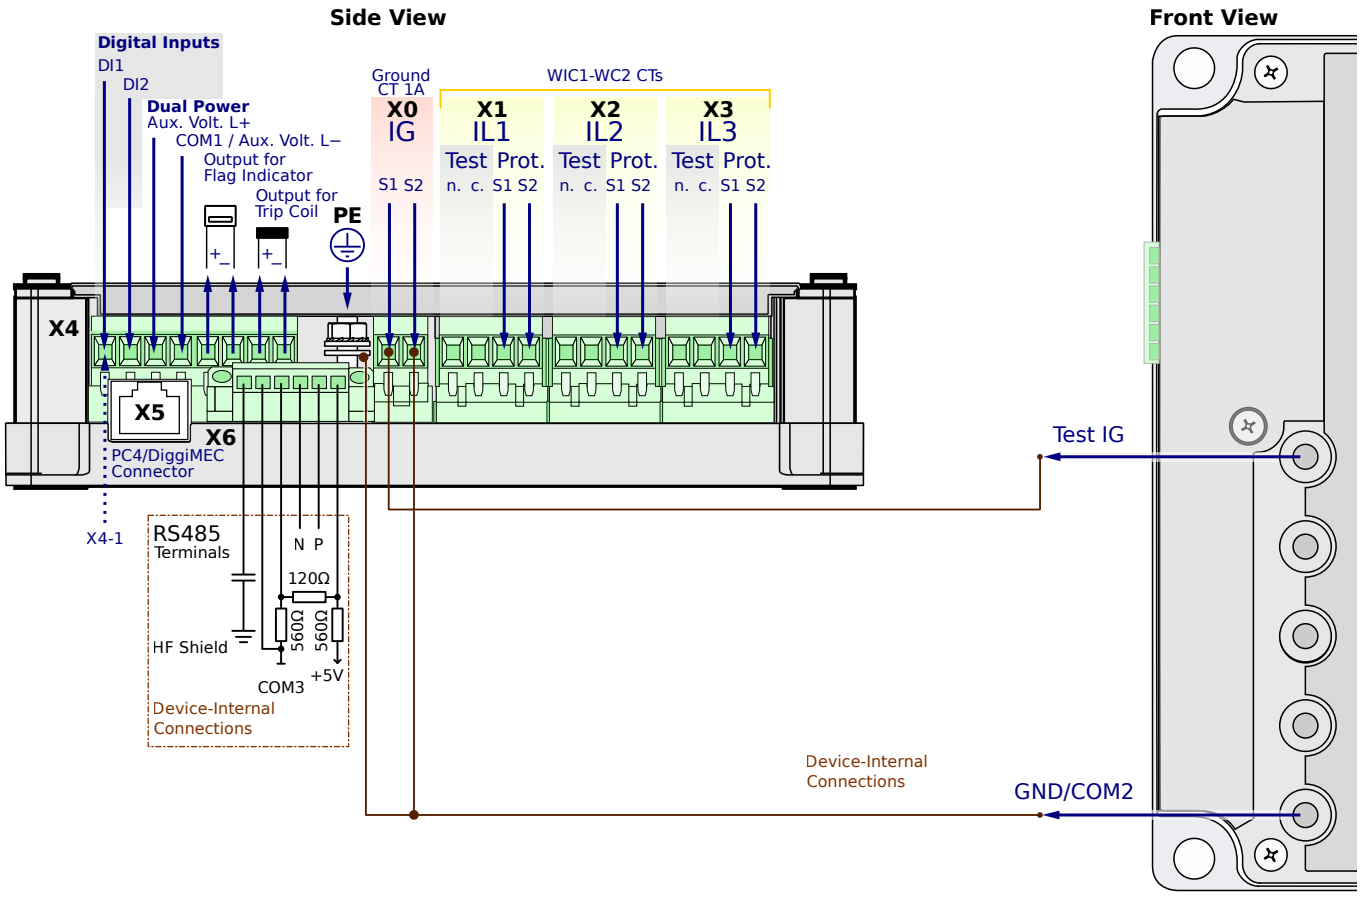


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2AC0

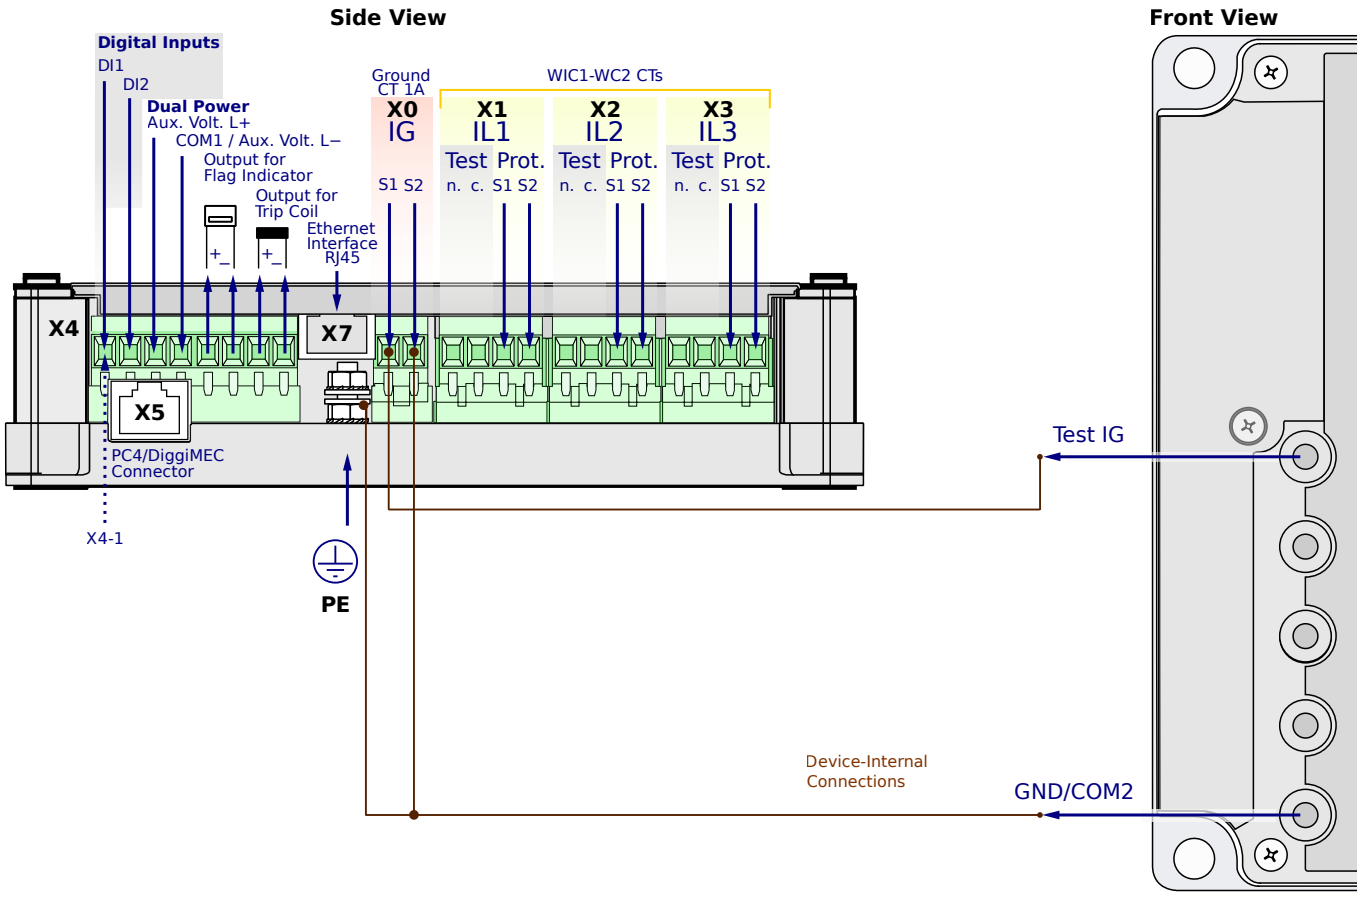


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2ACH

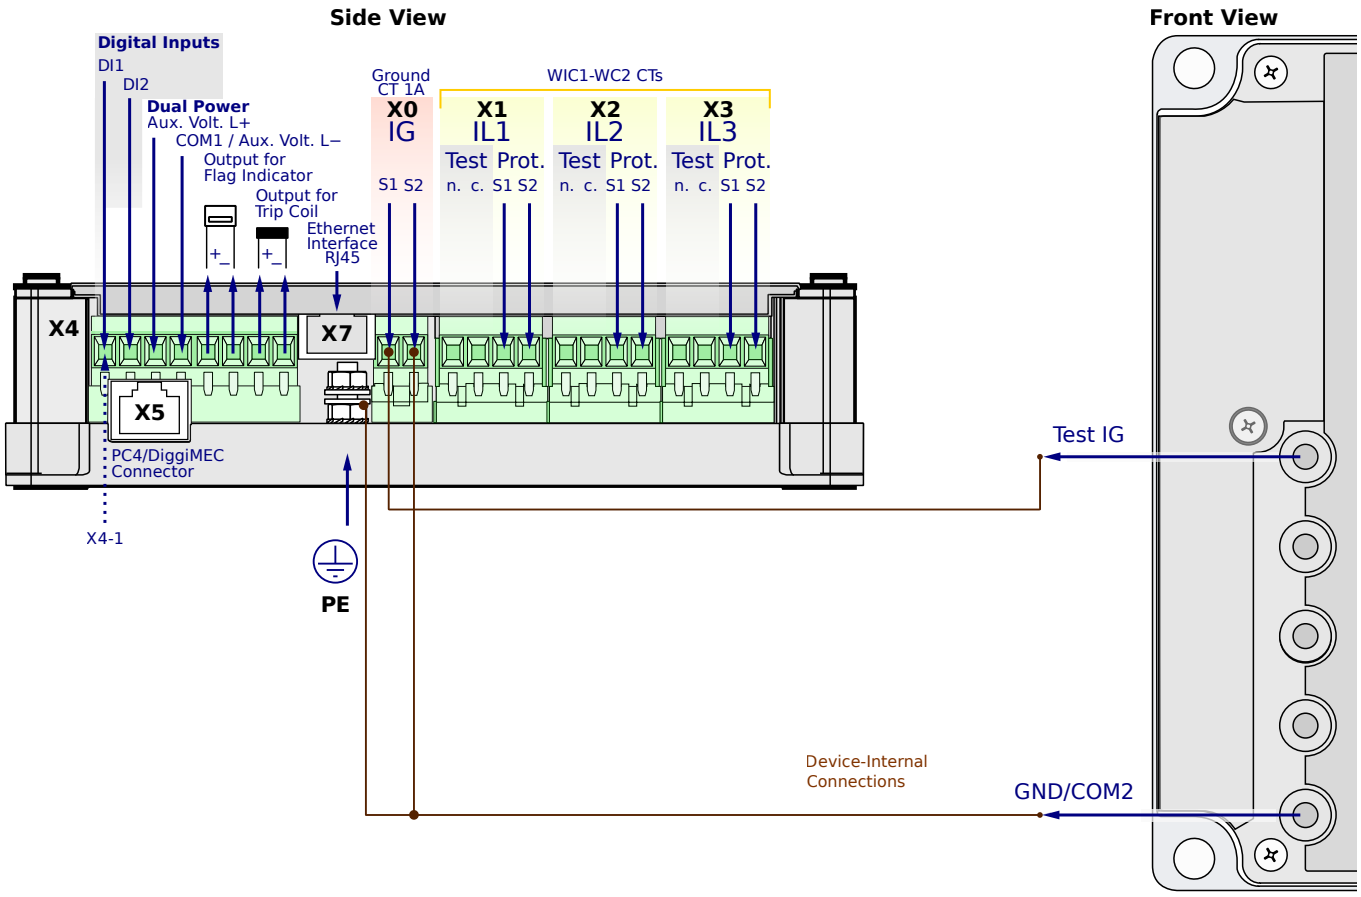


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2AL0

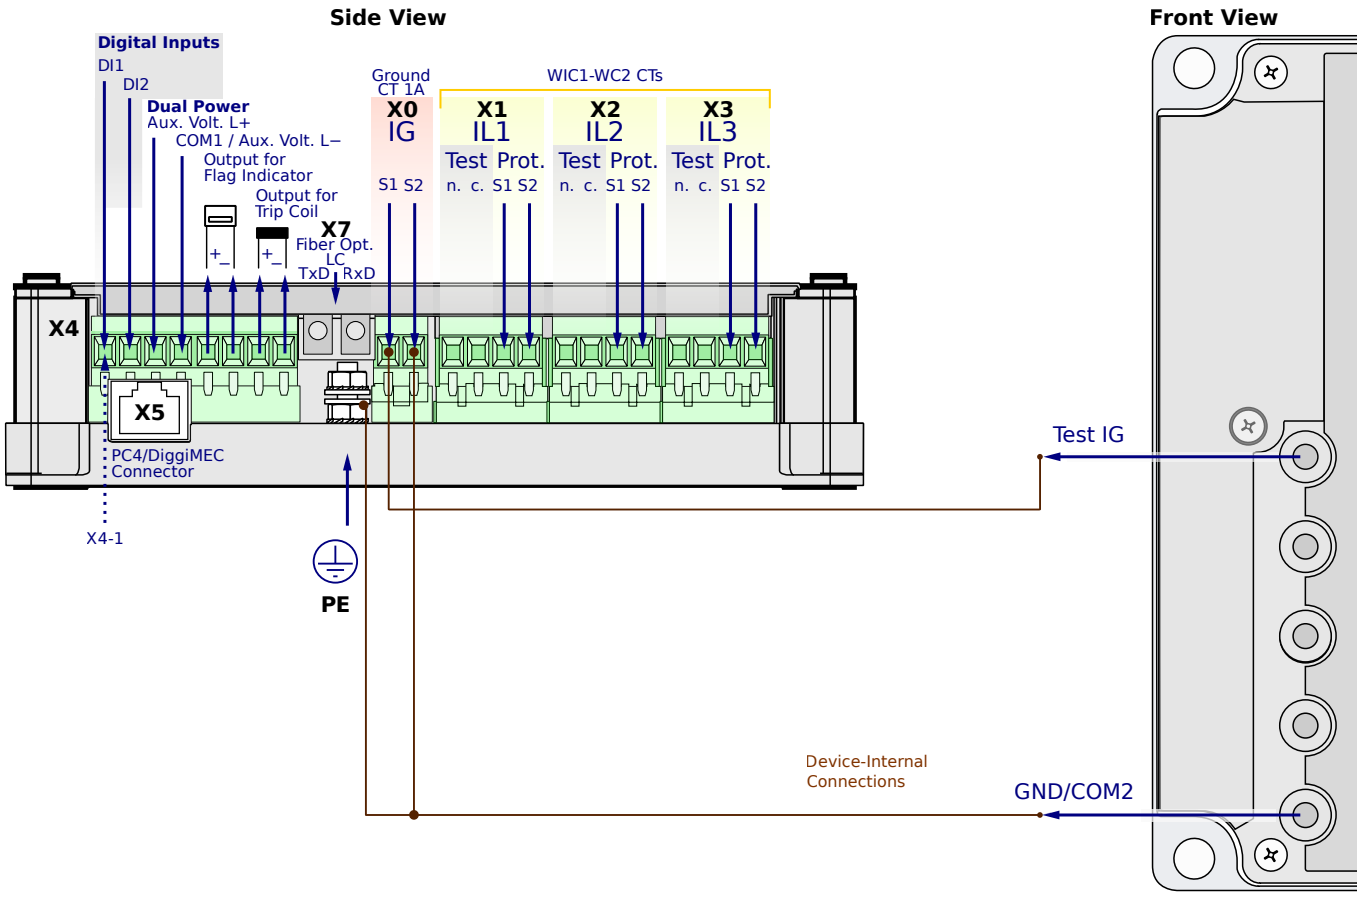


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2ALH

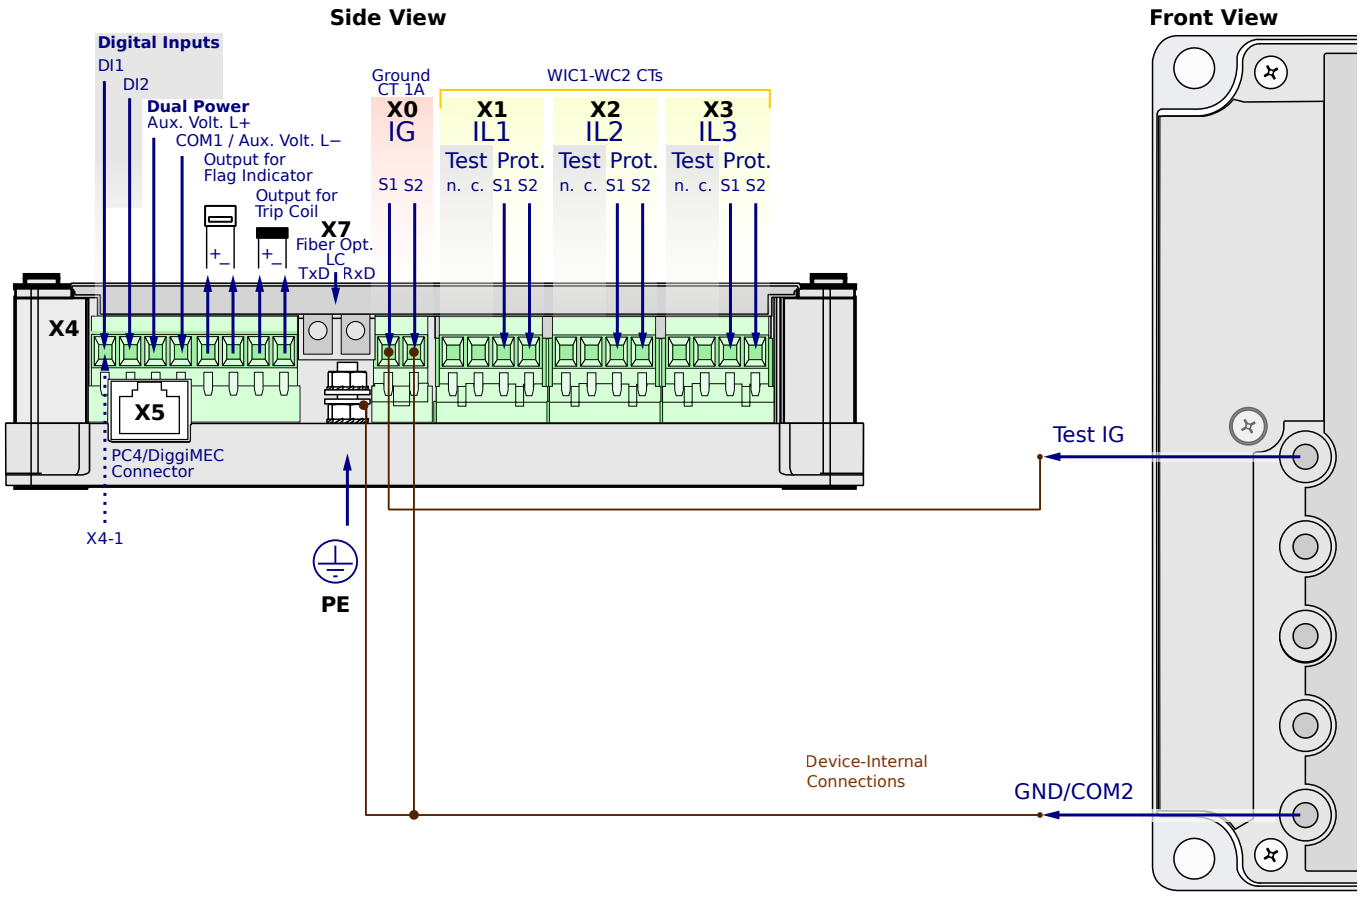


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2PA0

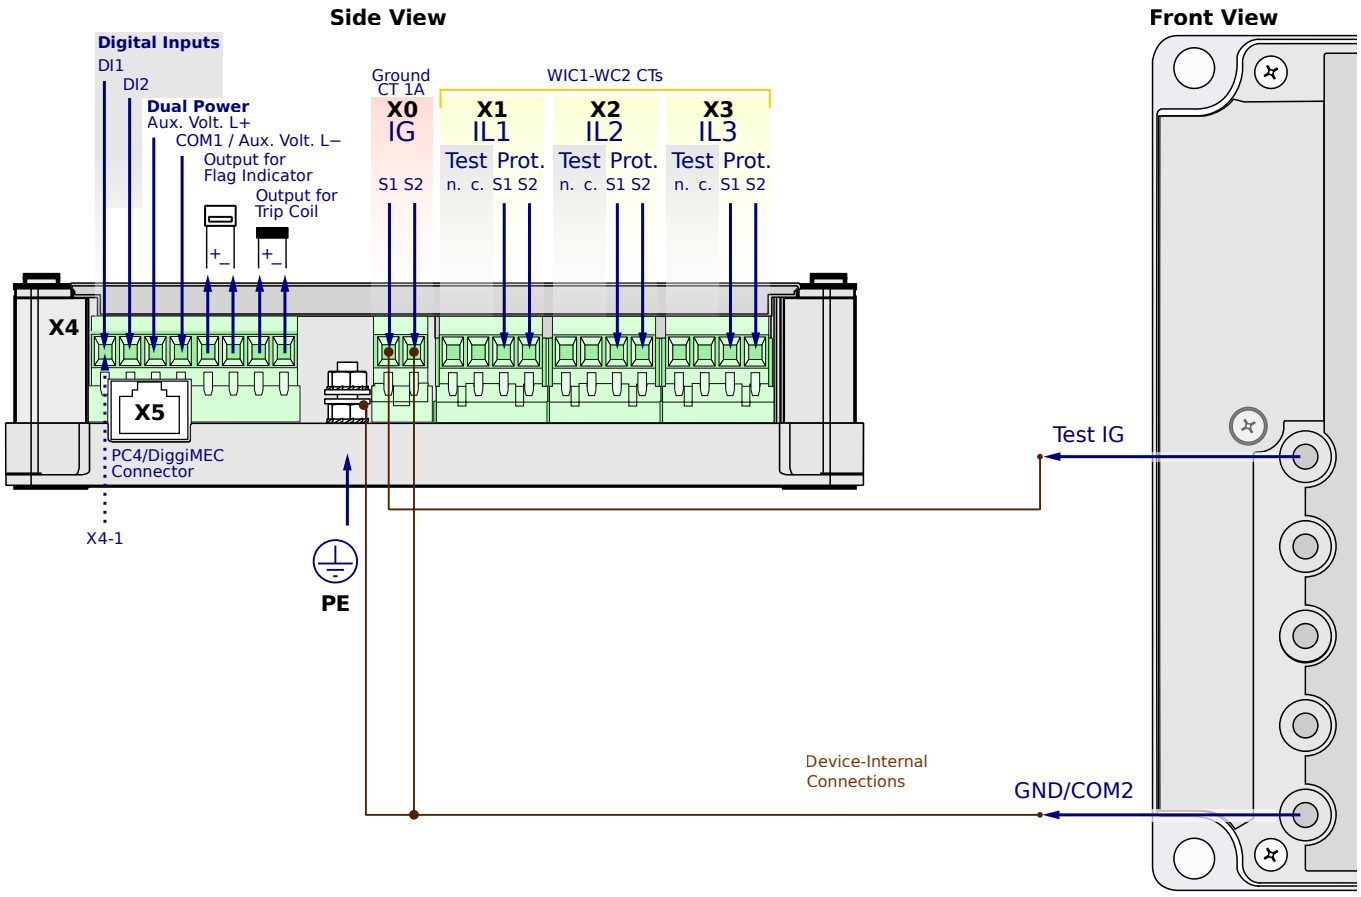


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2PAH

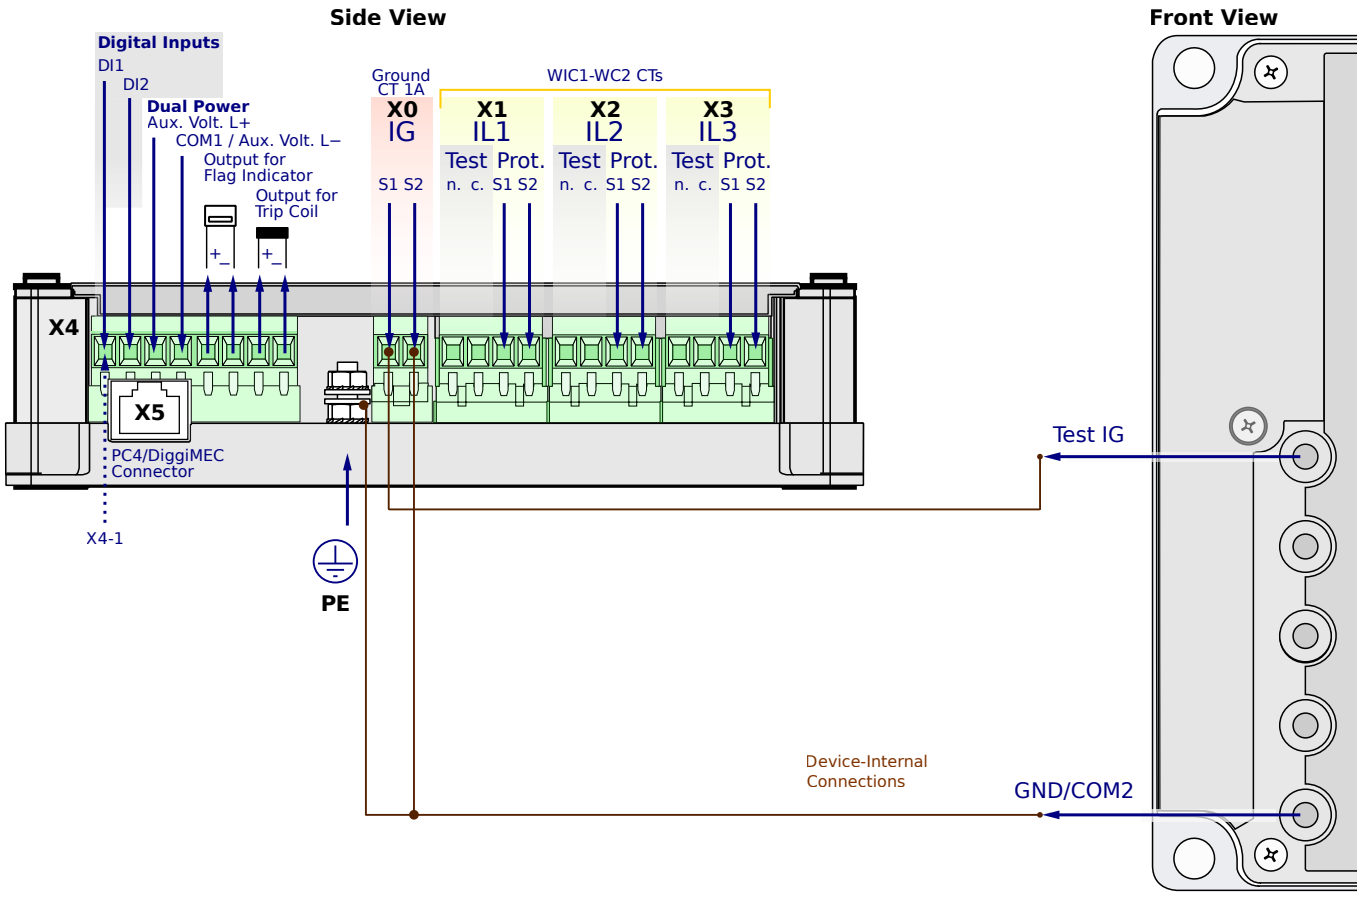


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0ND2PB0

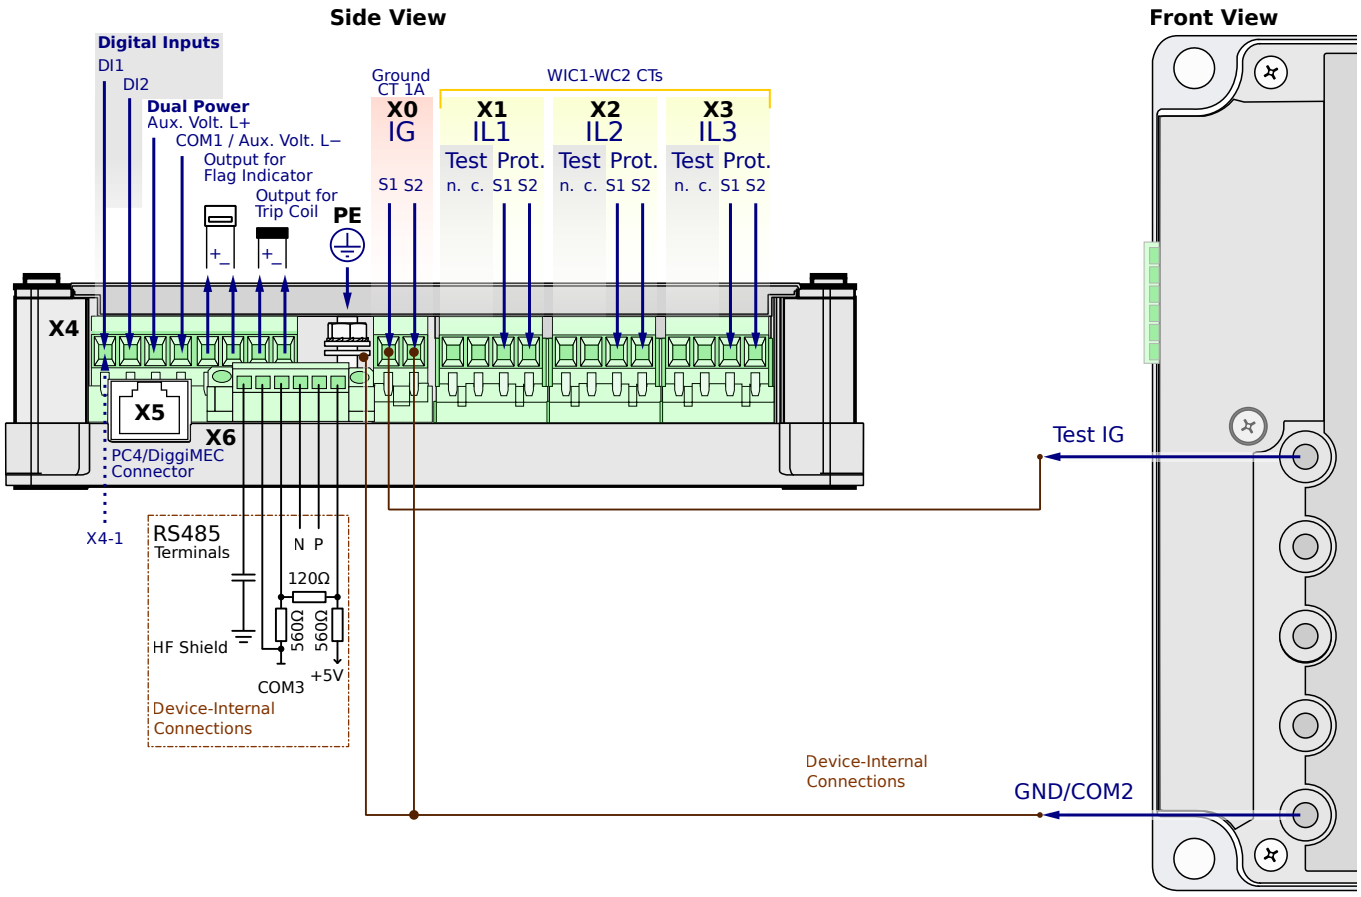


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2PBH

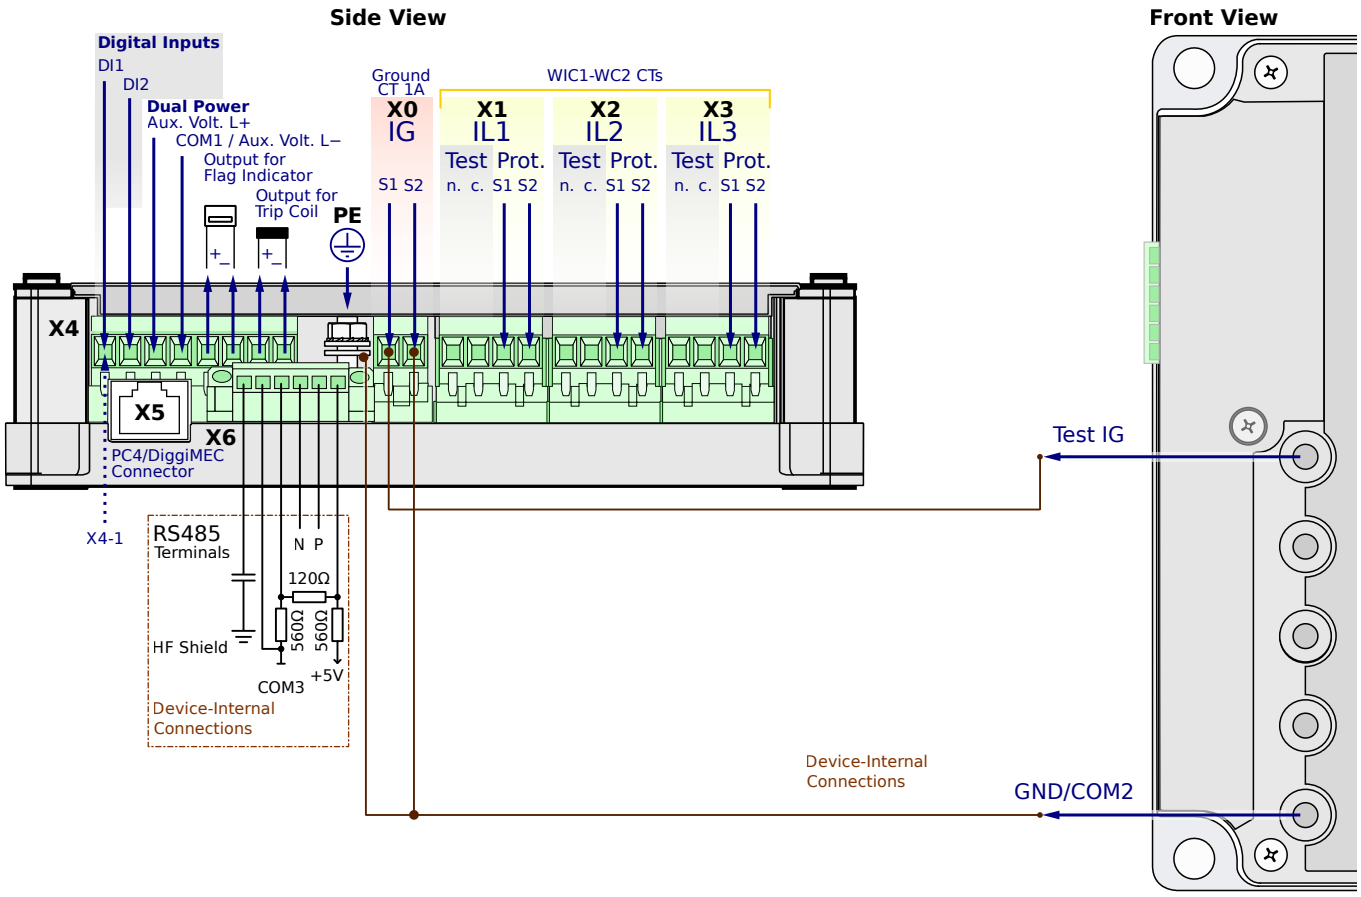


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0ND2PC0

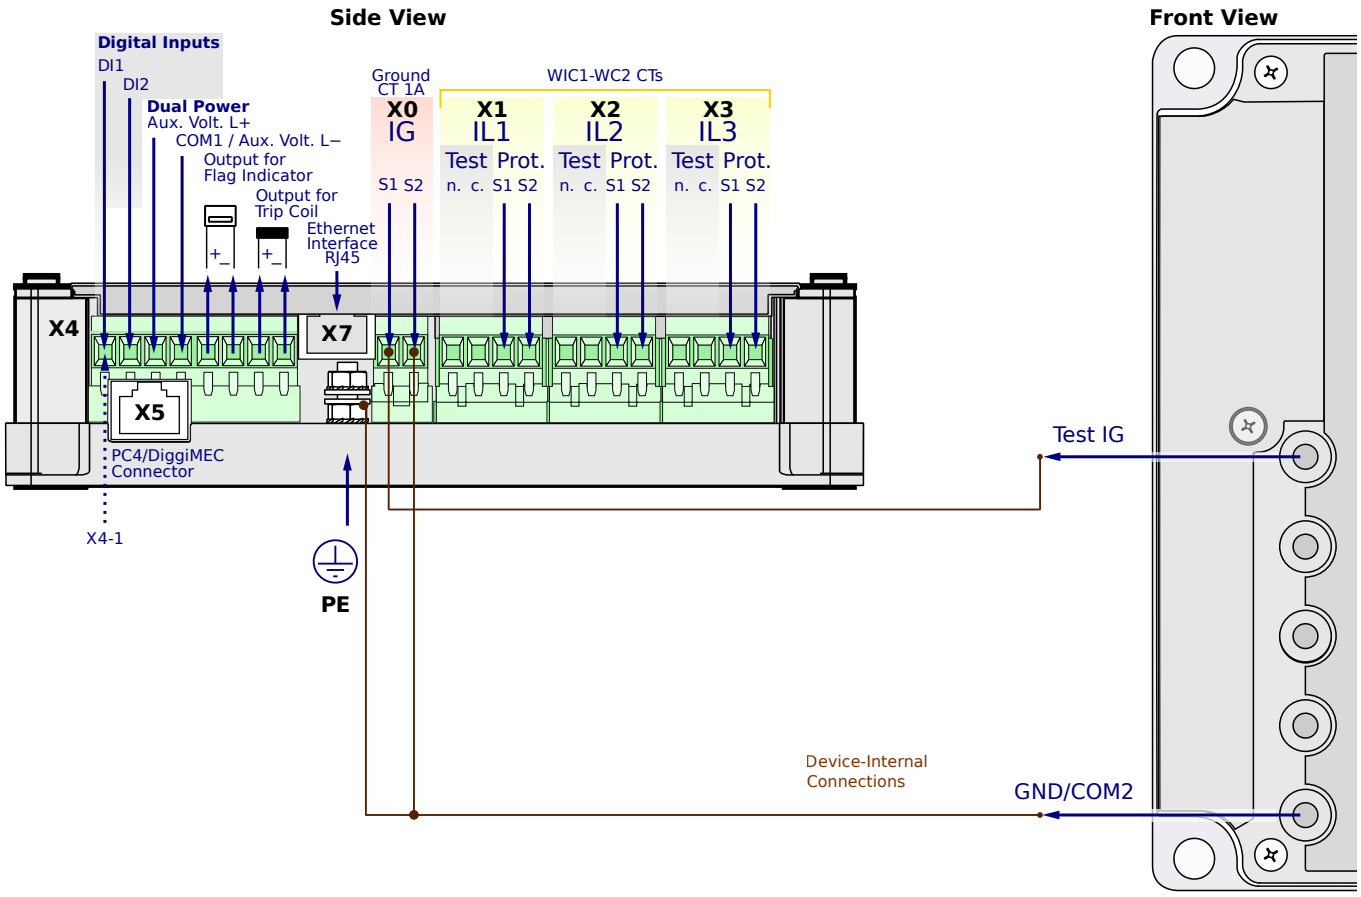


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2PCH

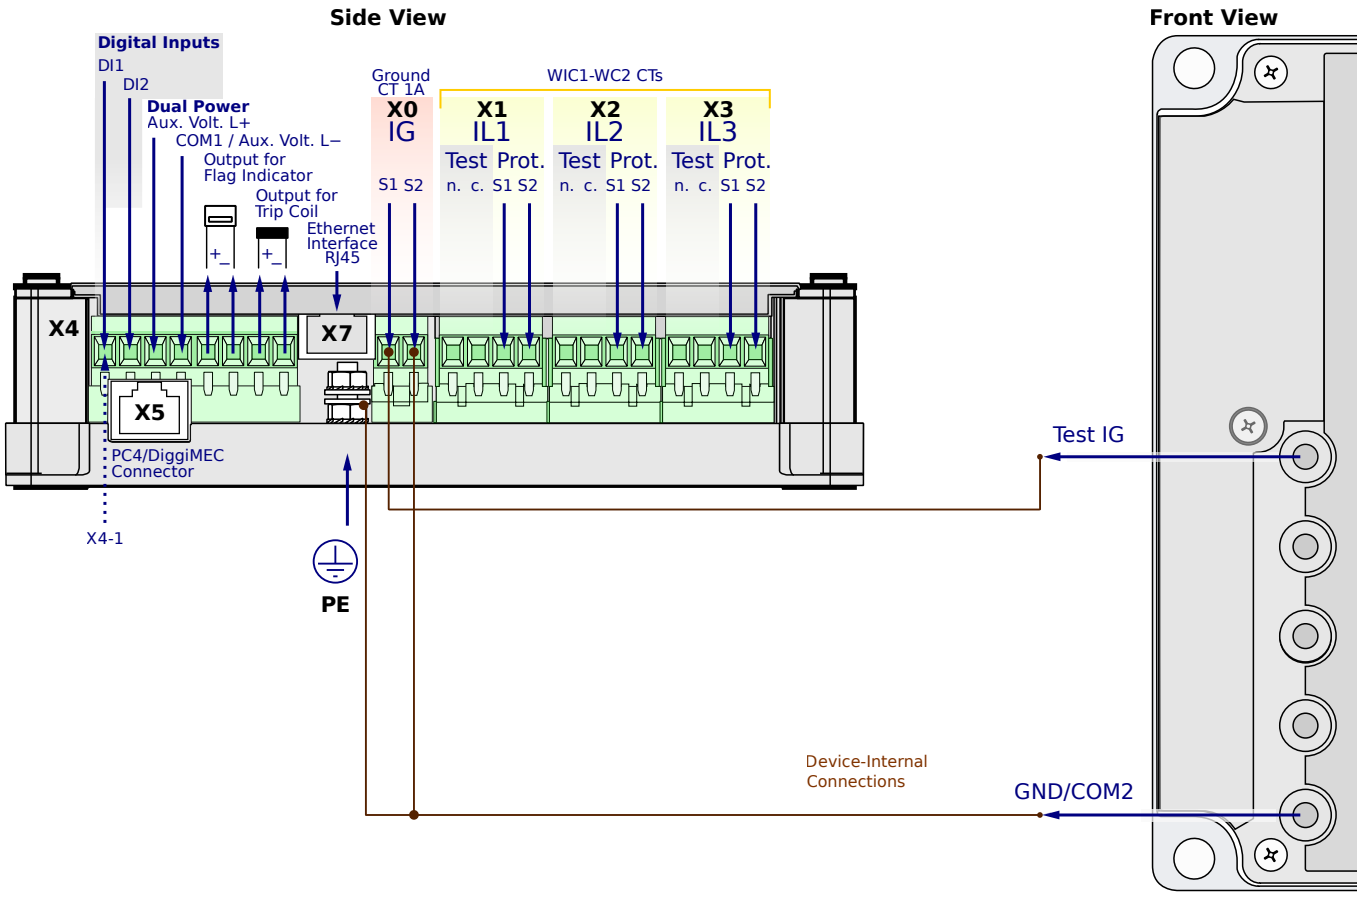


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0ND2PL0

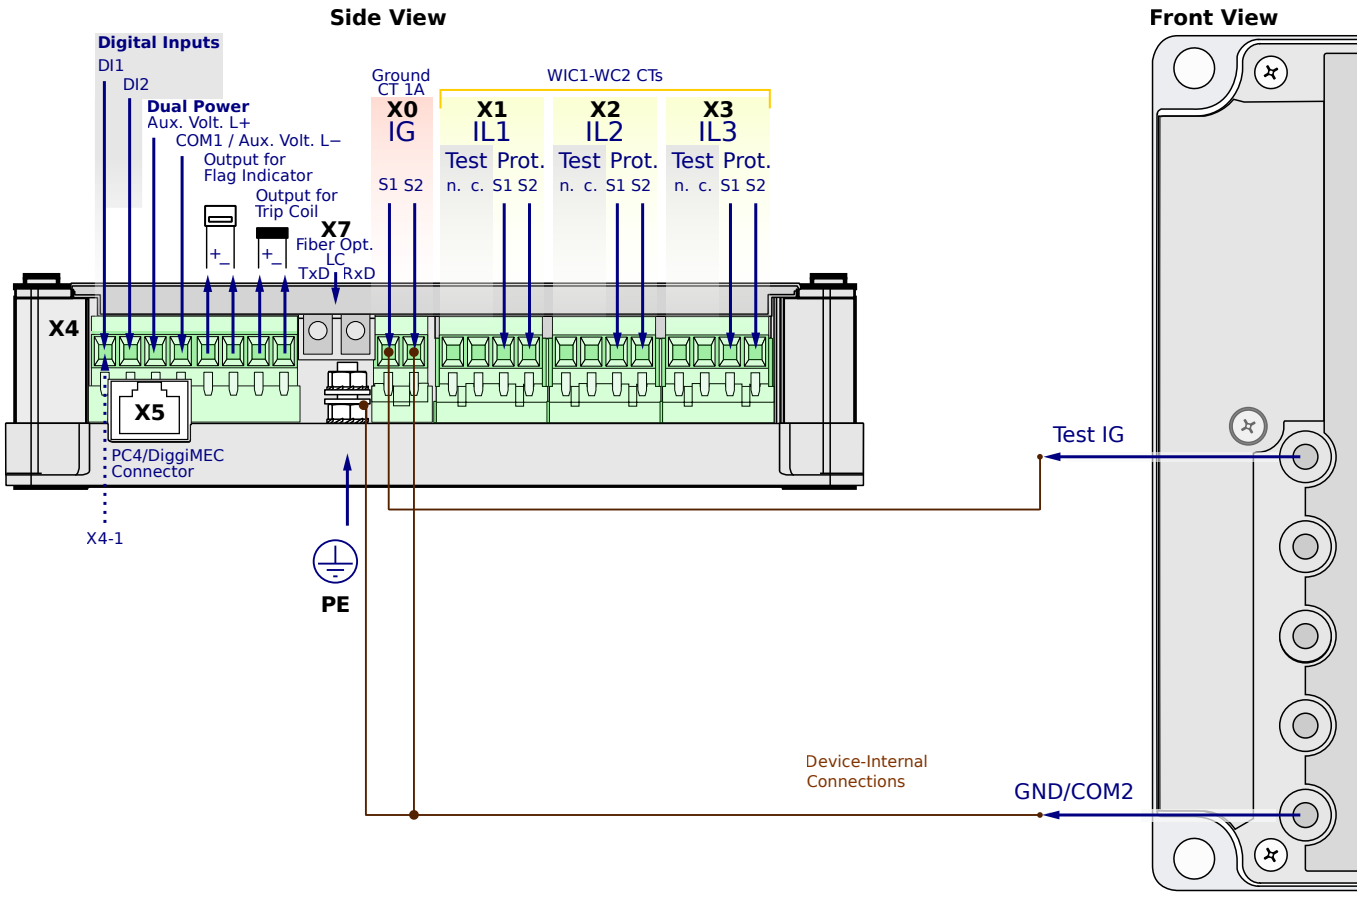


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0ND2PLH

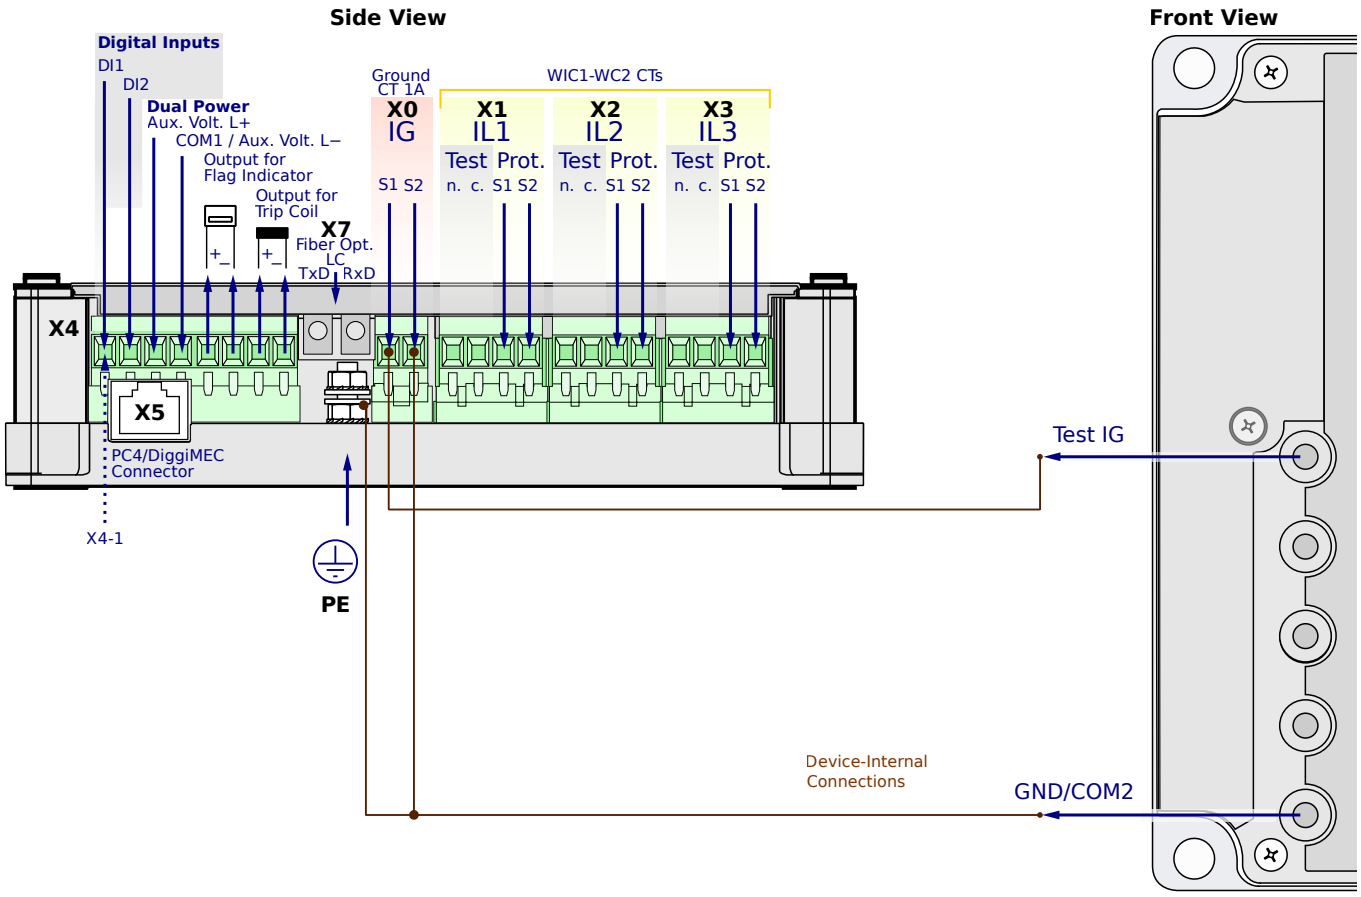


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Inactive Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1SA0

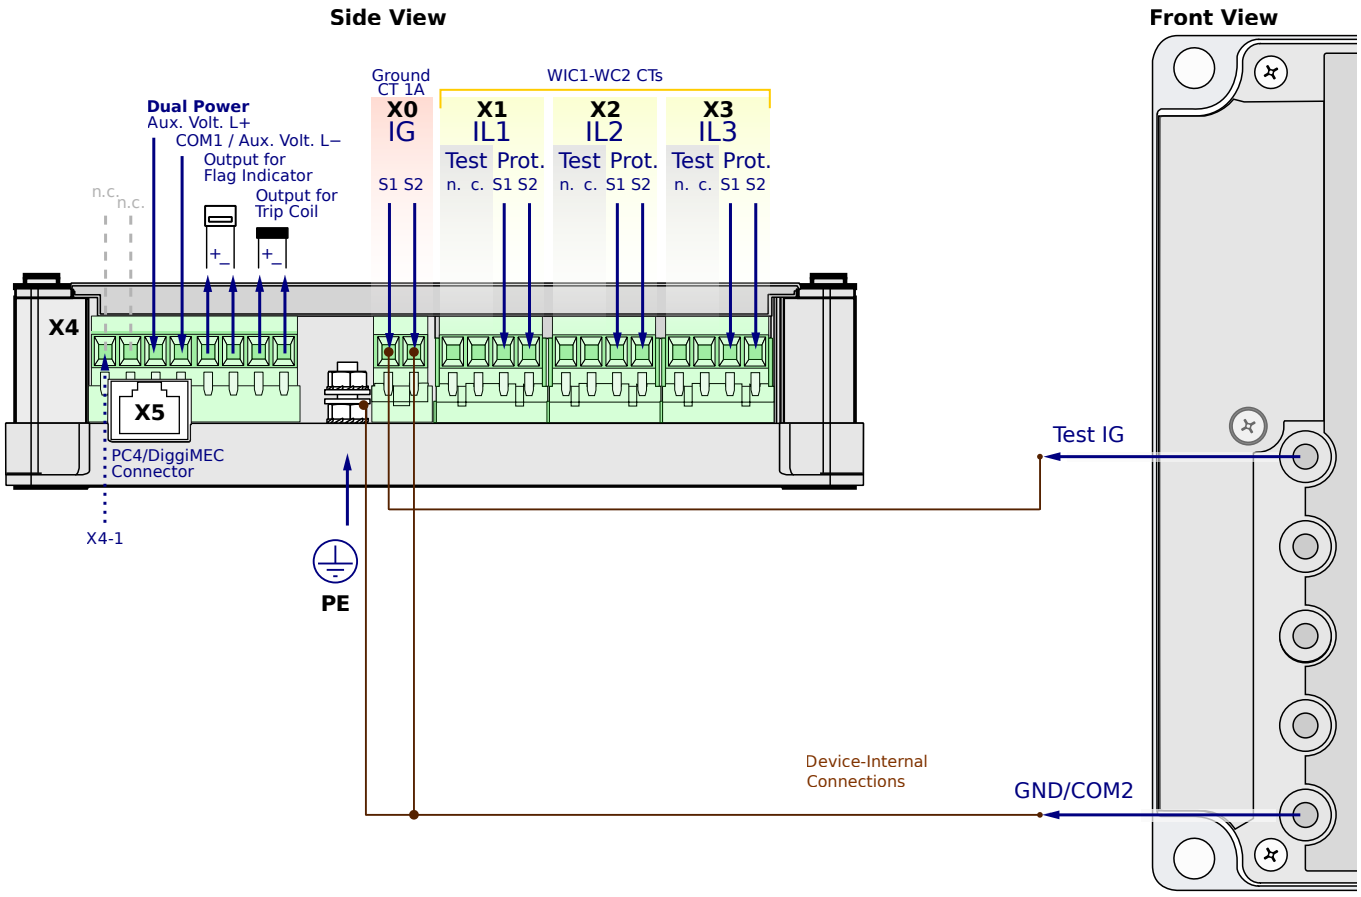


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1SAH

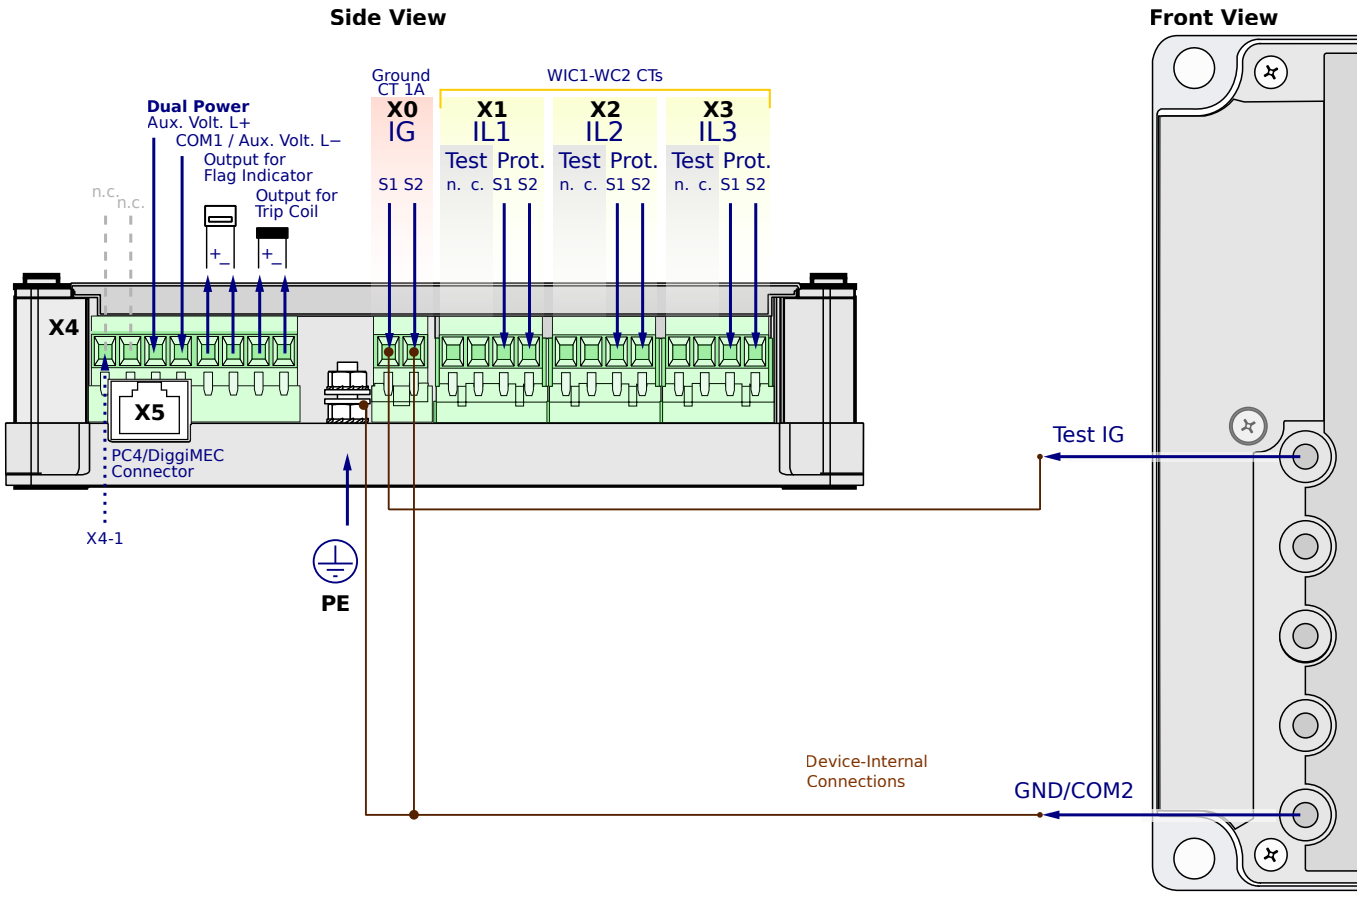


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1SB0

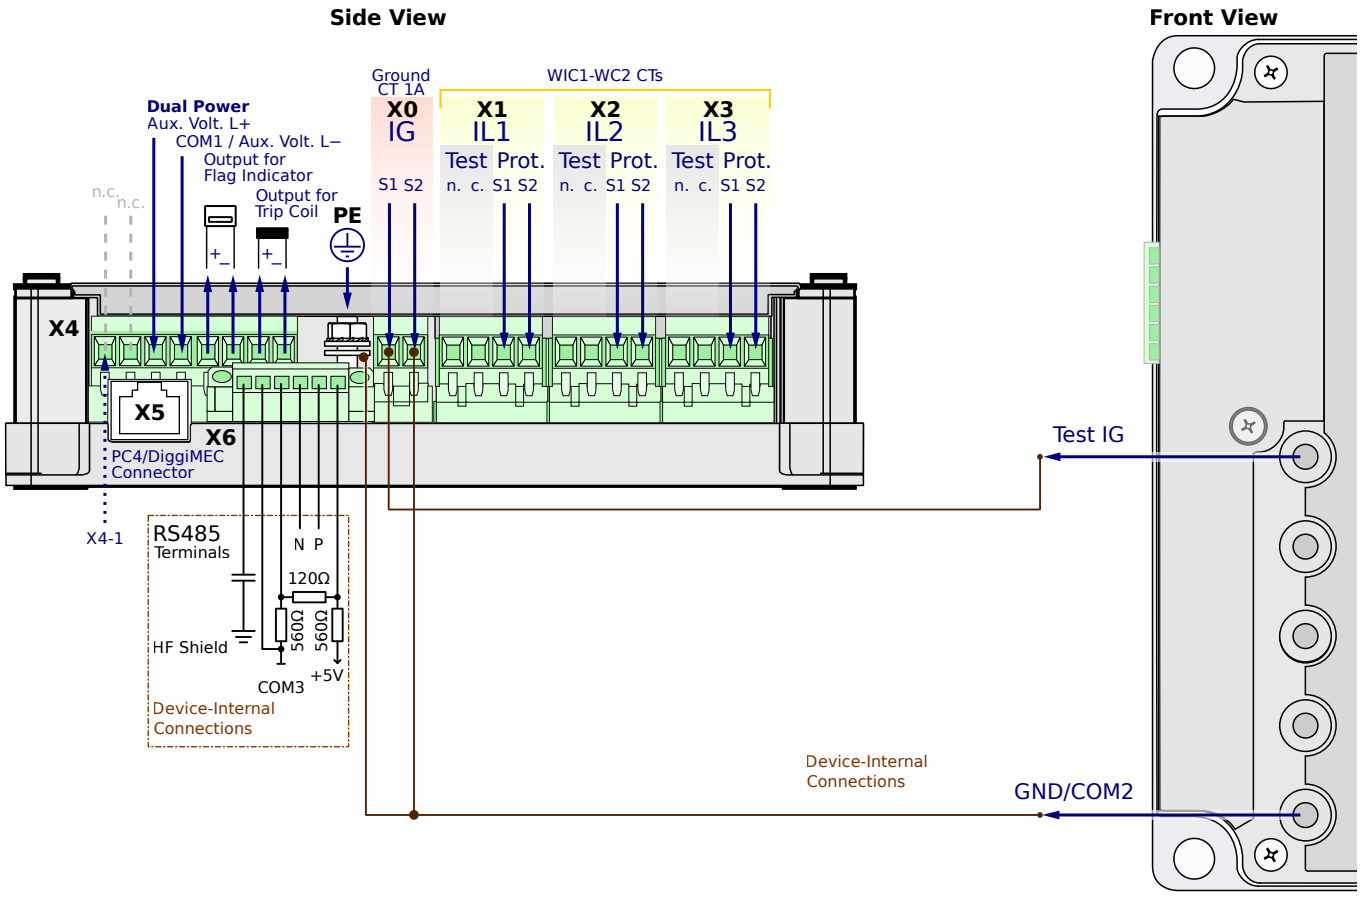


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1SBH

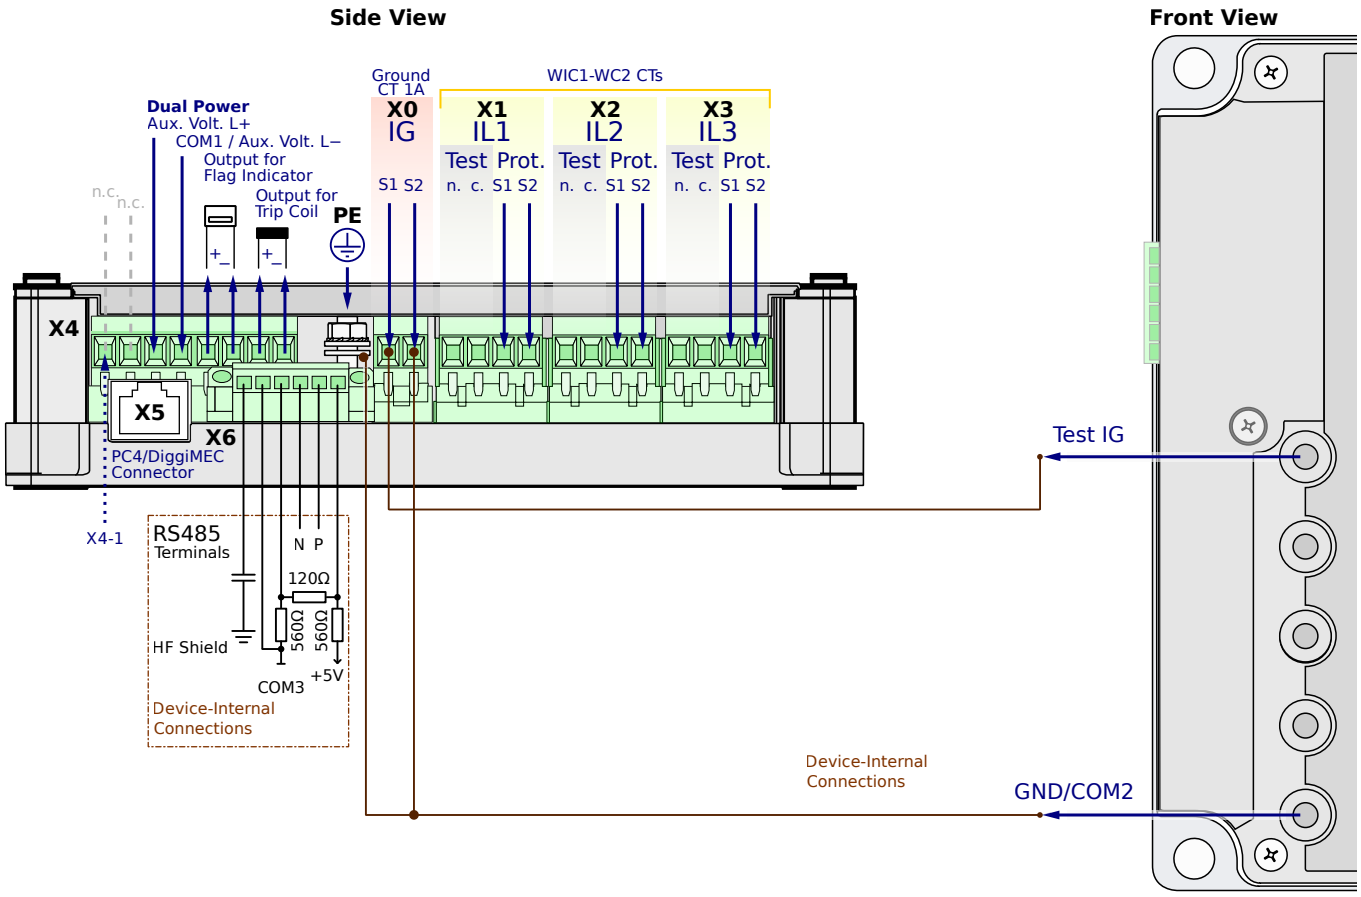


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1SC0

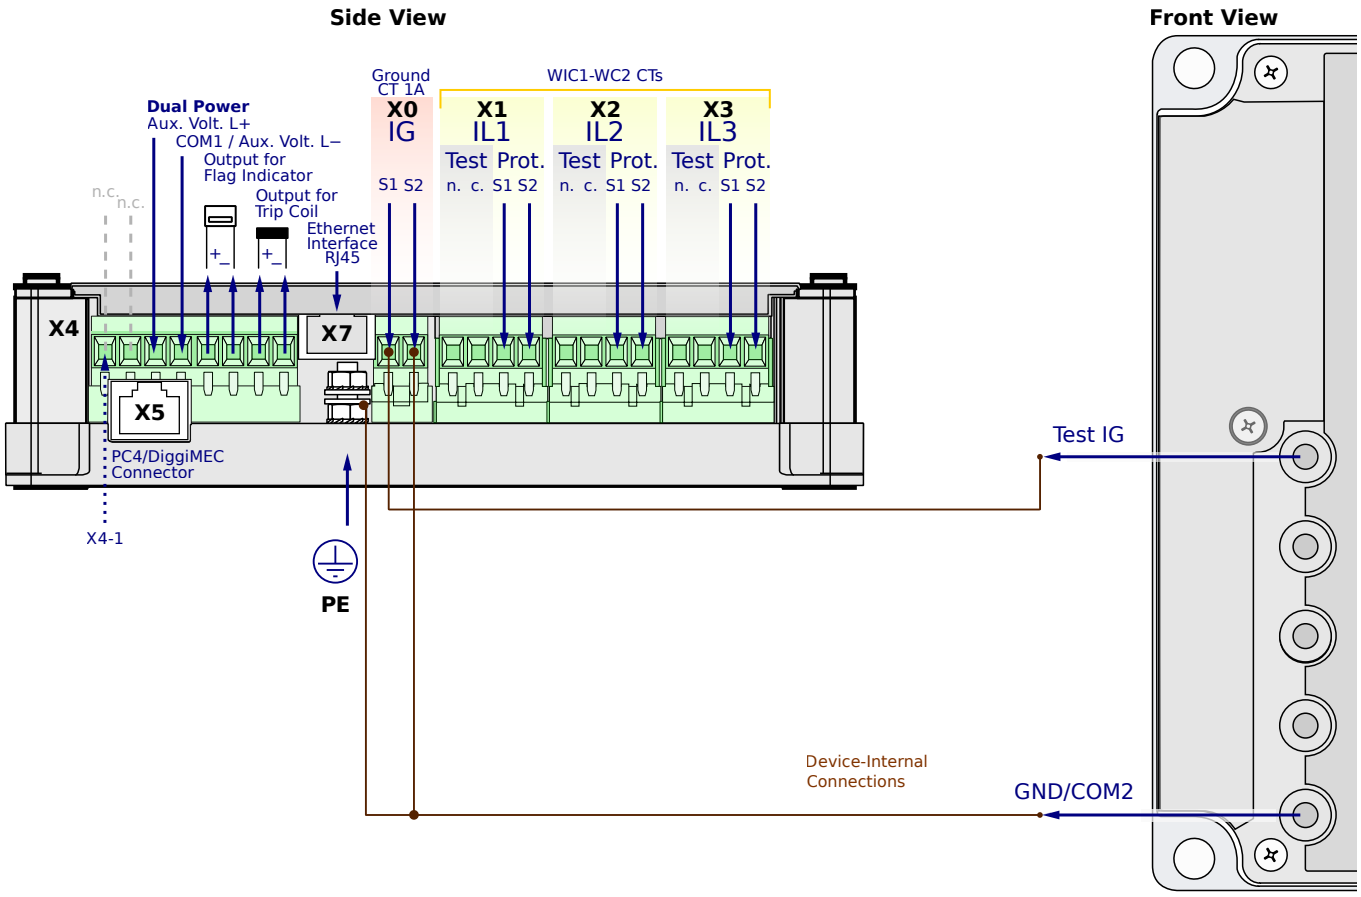


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1SCH

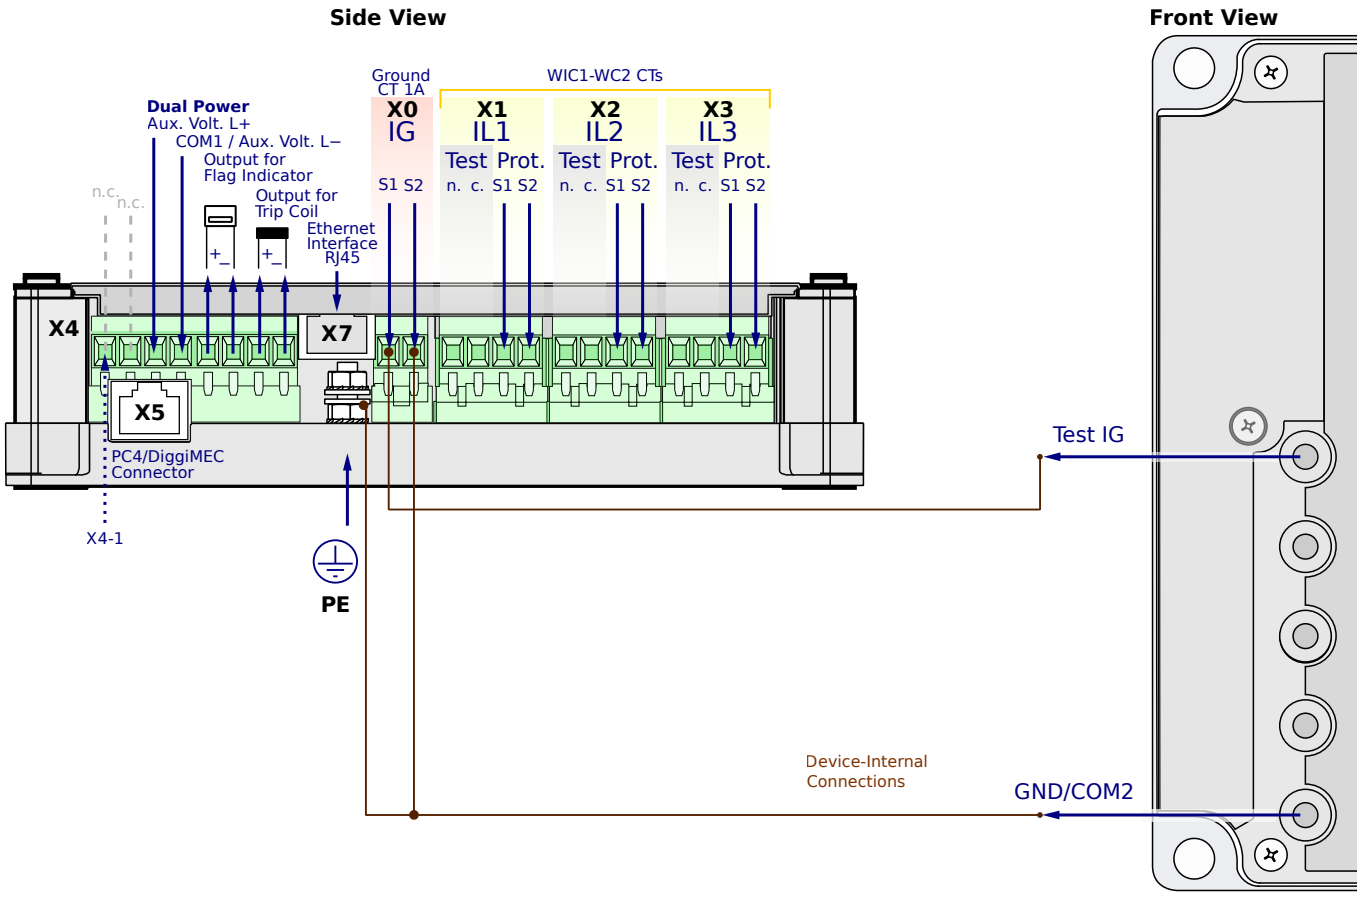


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1SL0

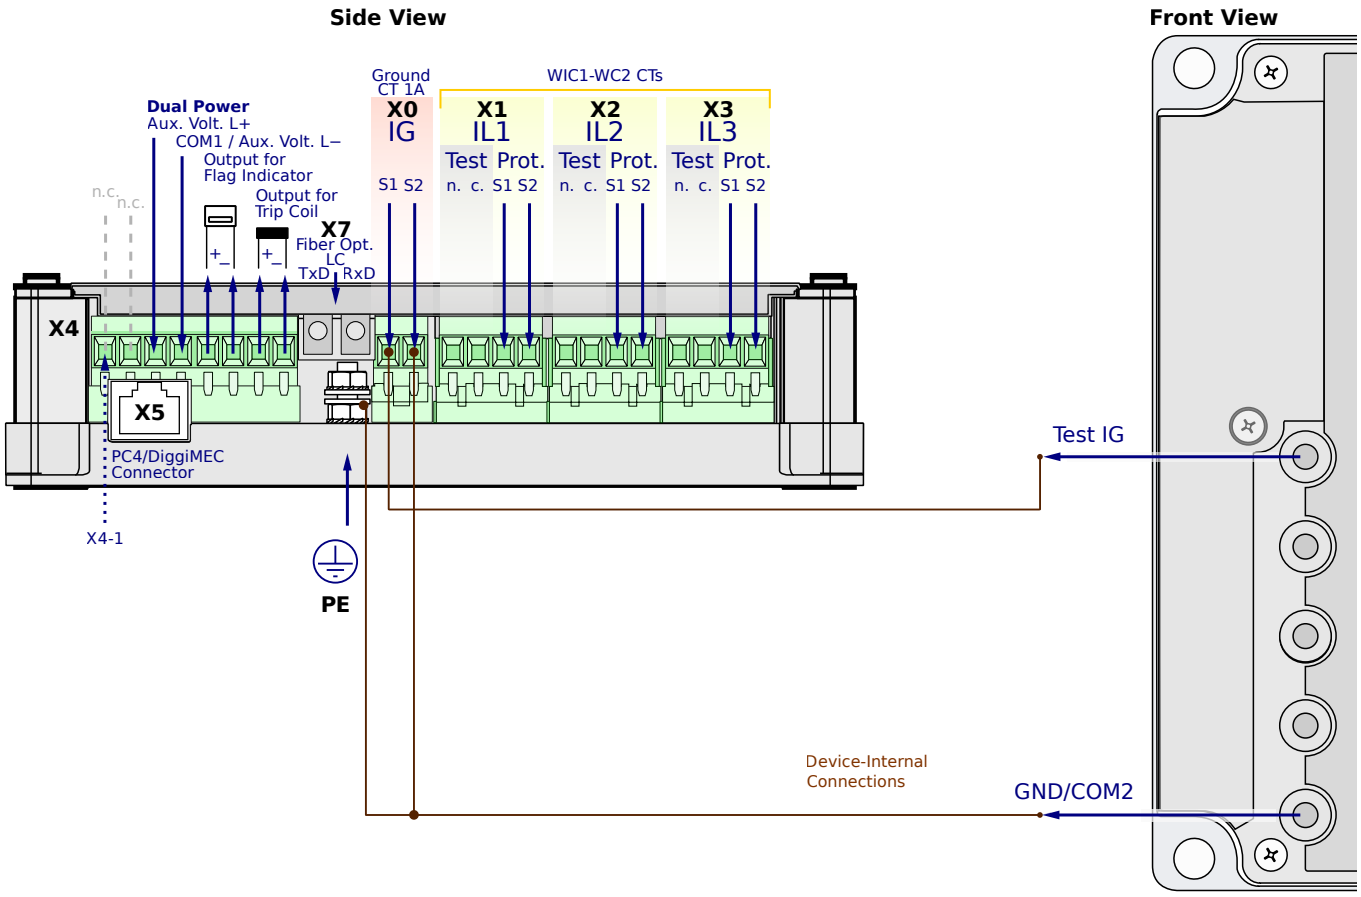


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1SLH

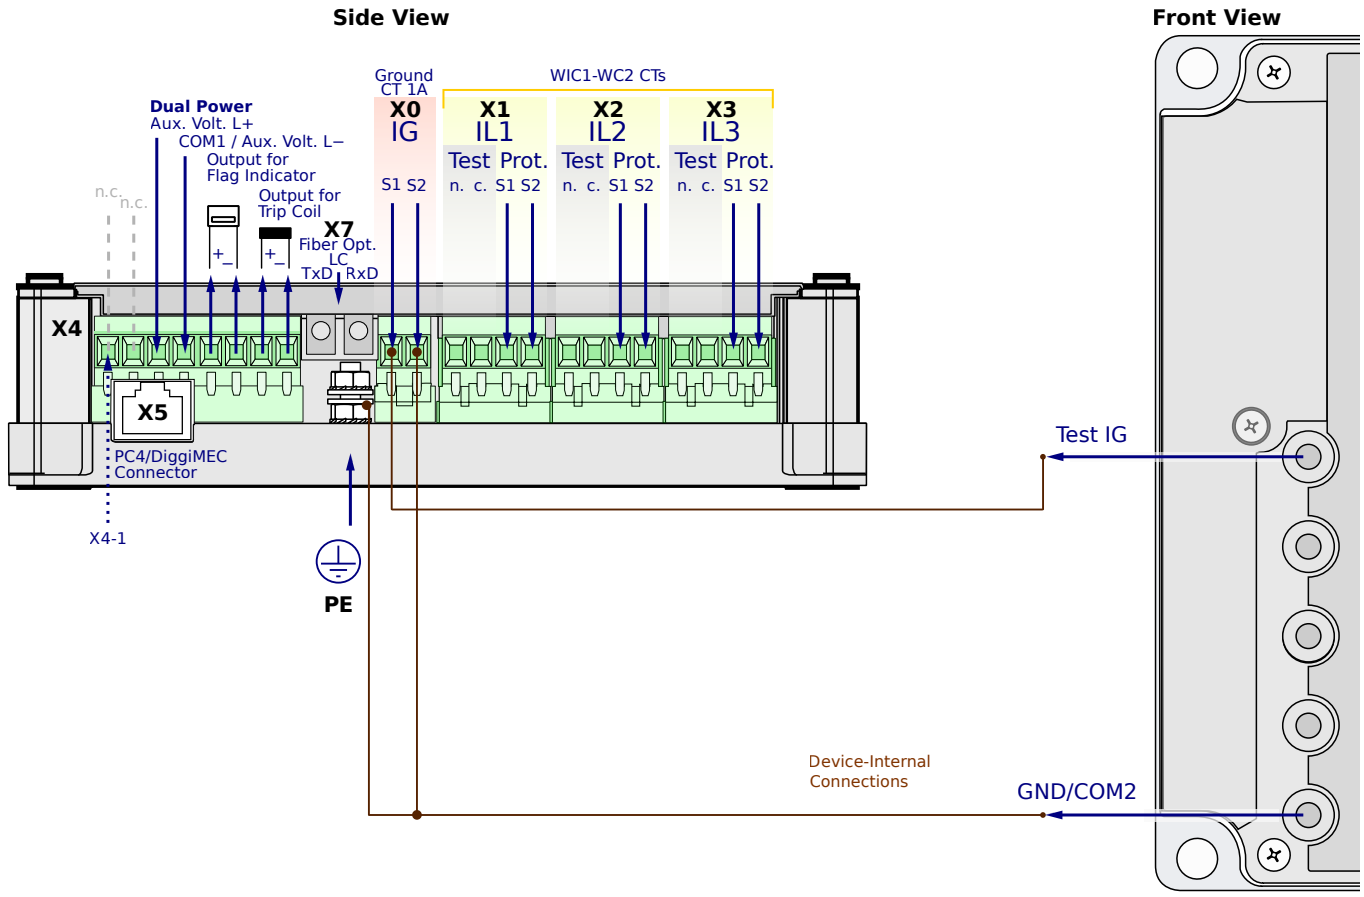


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1AA0

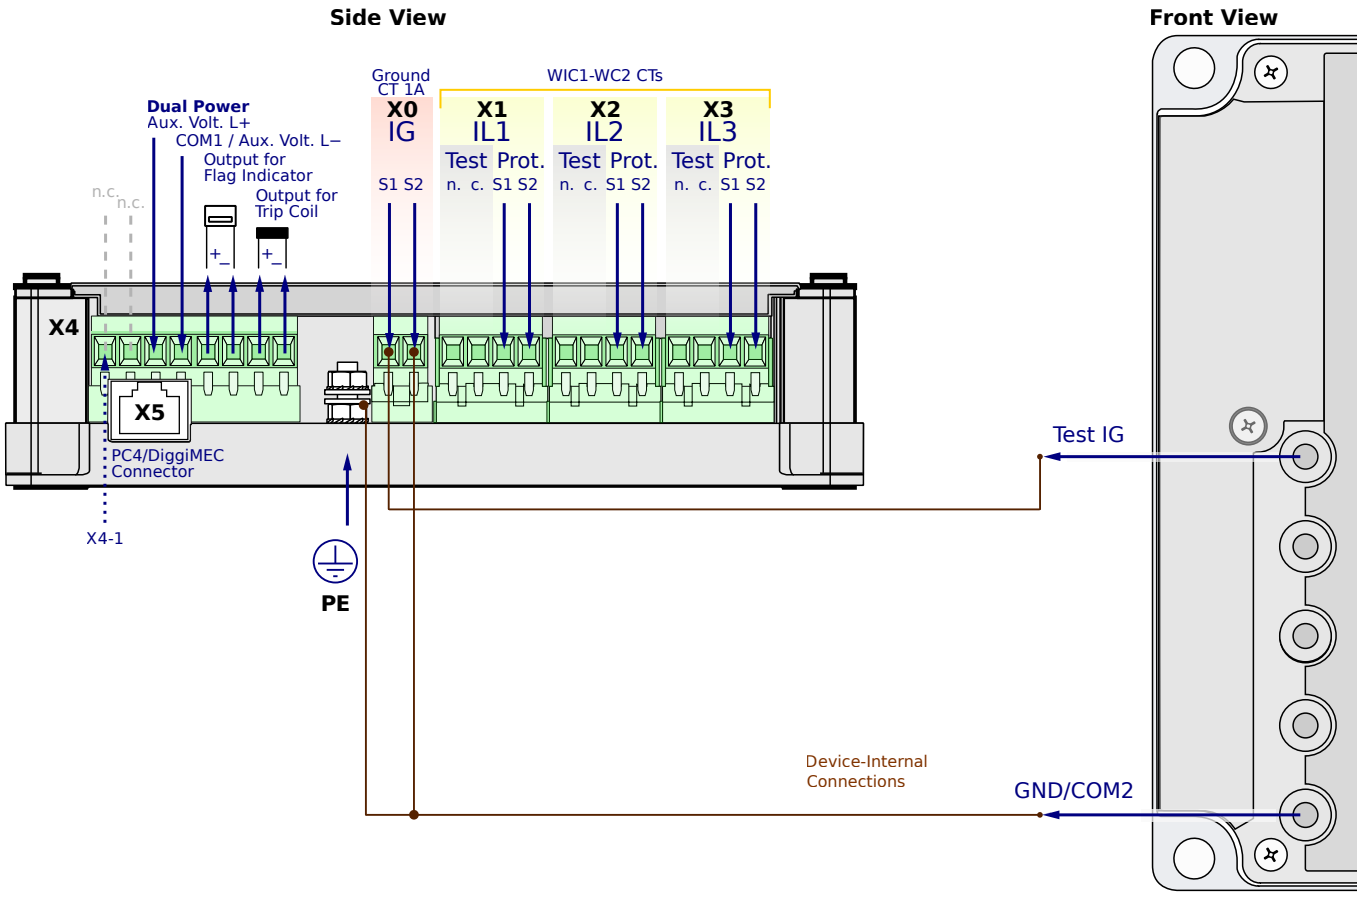


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1AAH

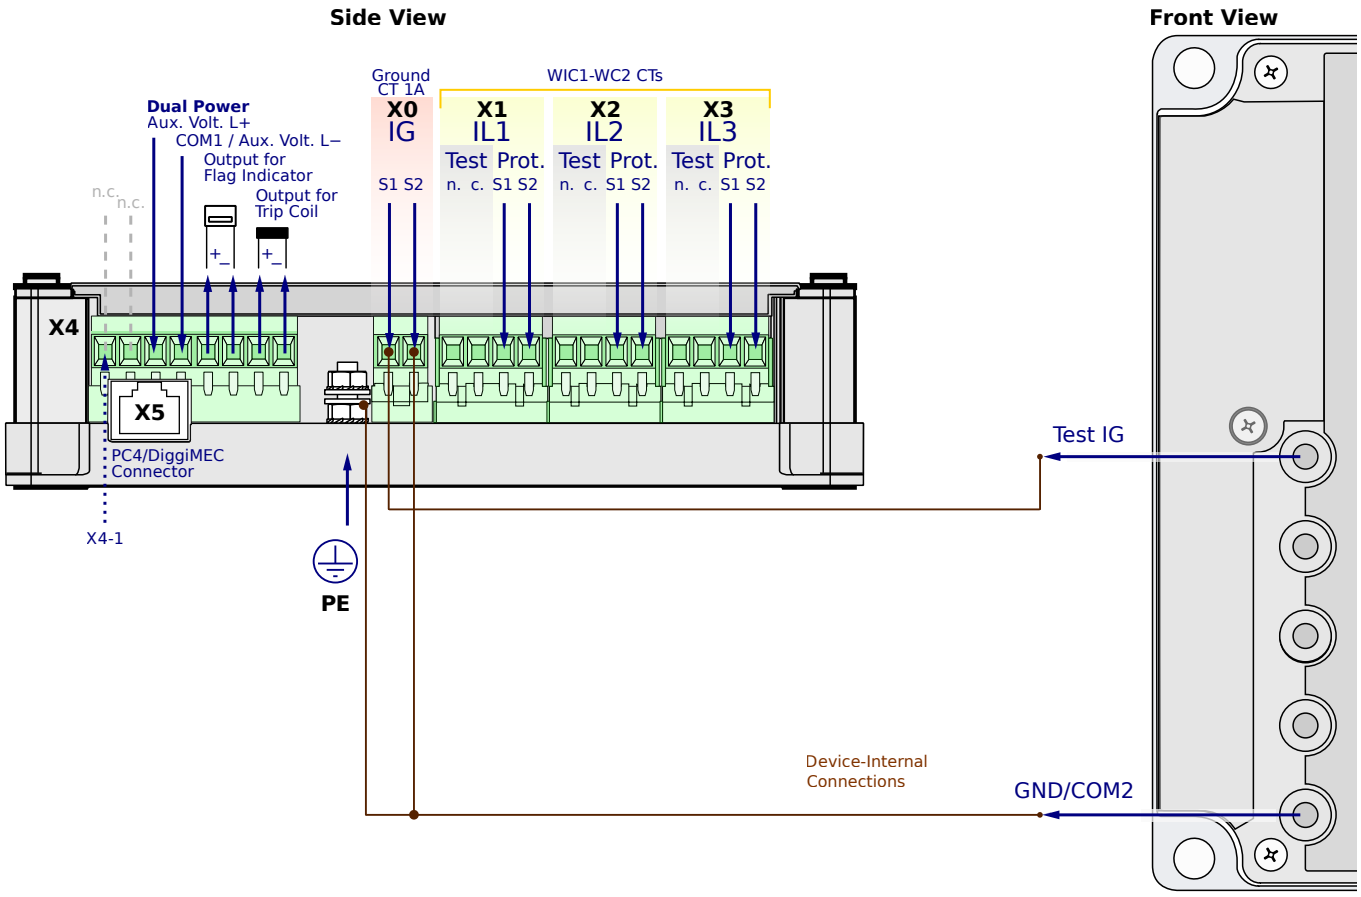


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1AB0

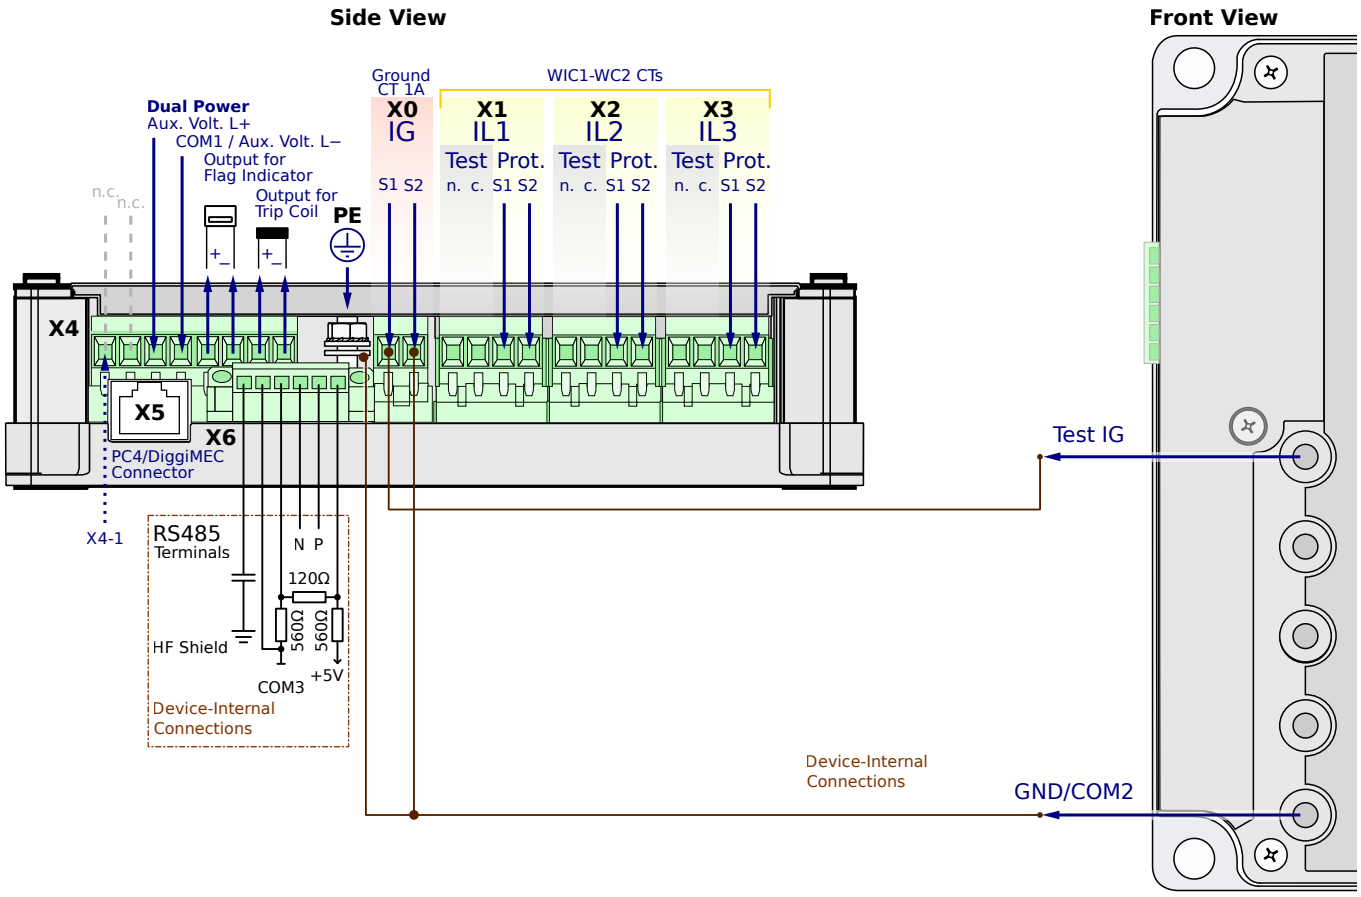


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1ABH

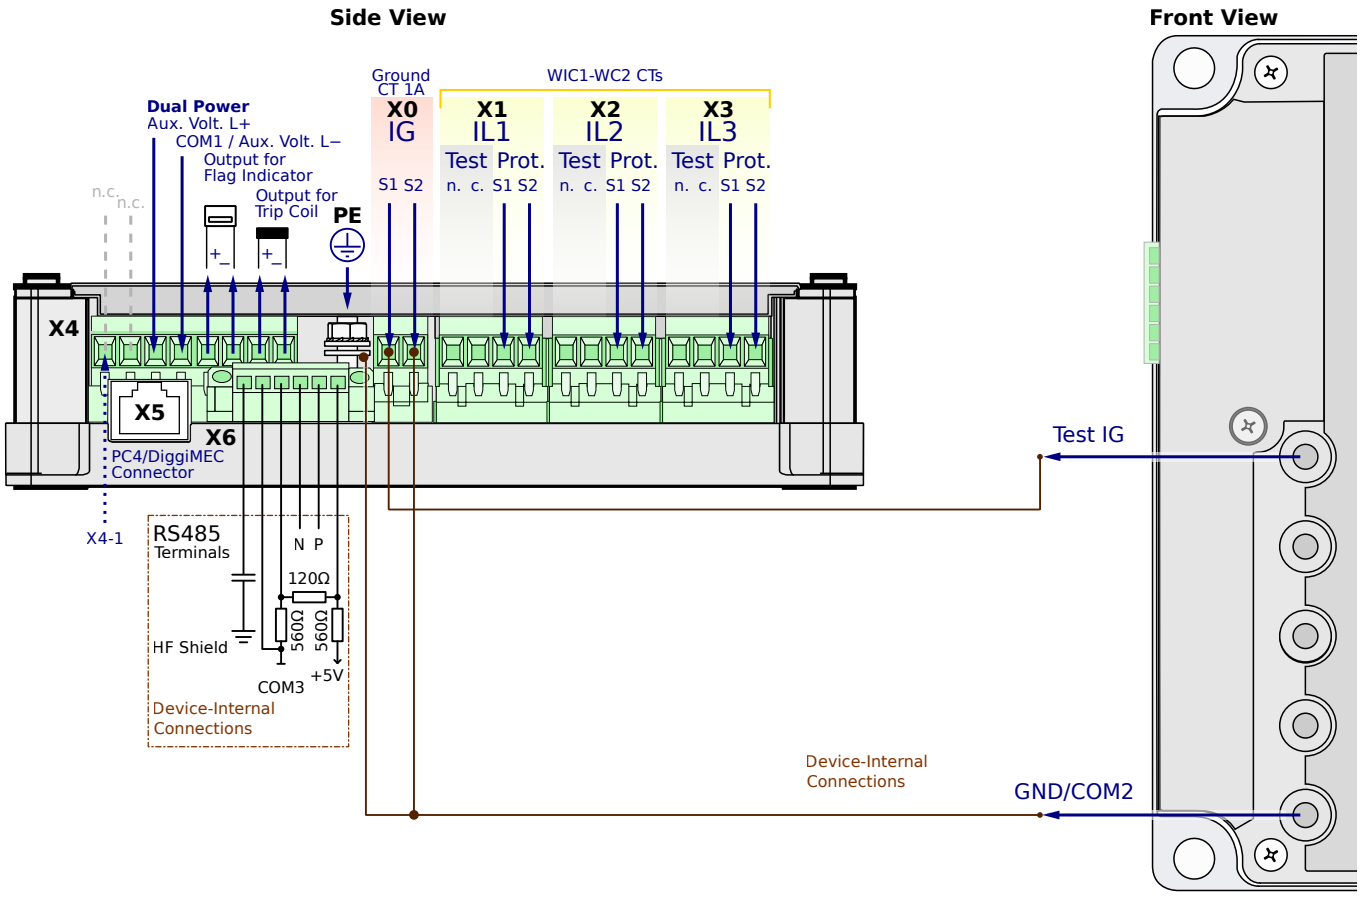


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1AC0

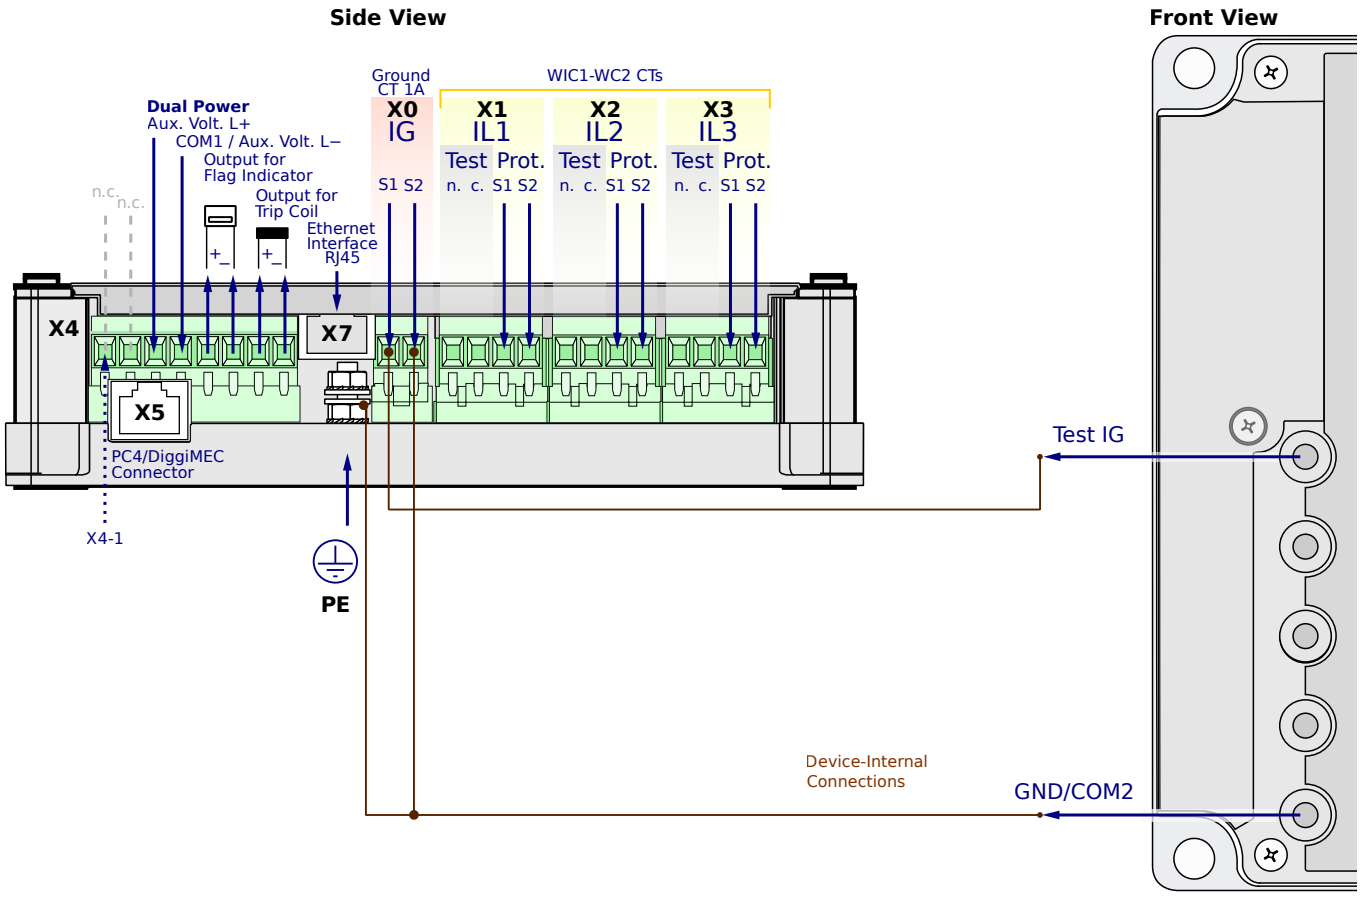


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1ACH

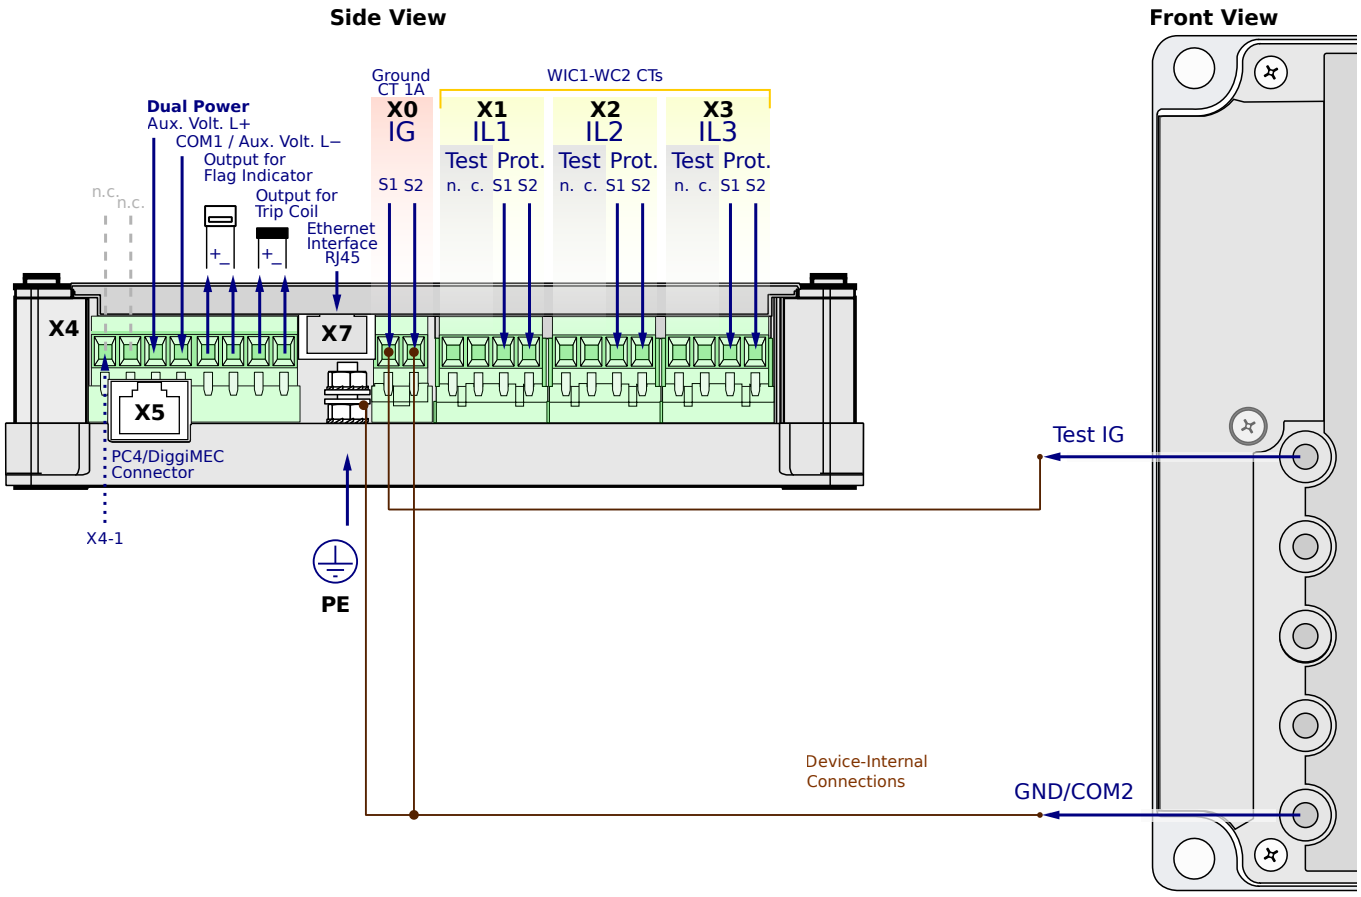


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1AL0

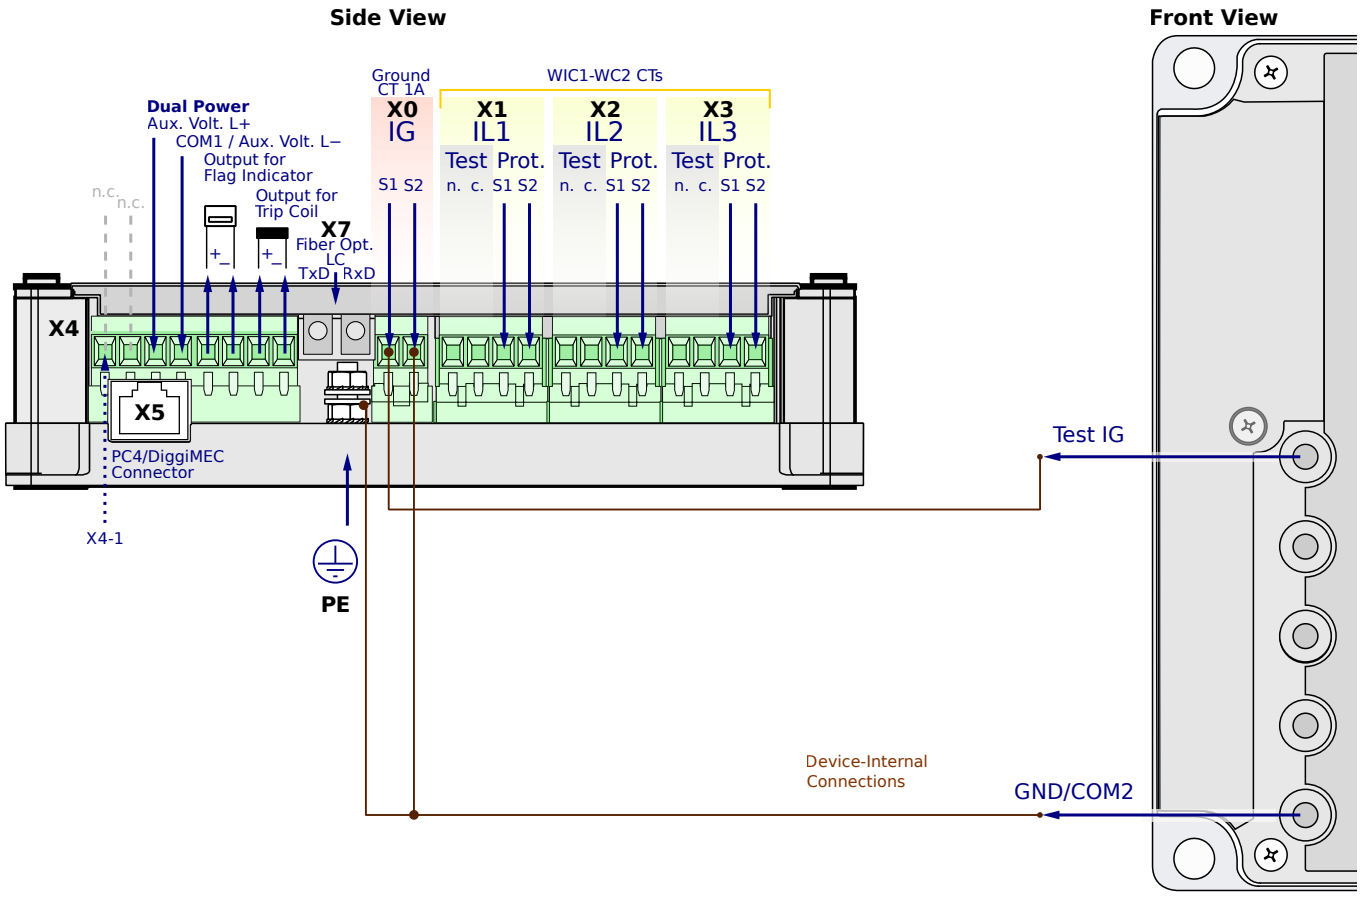


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1ALH

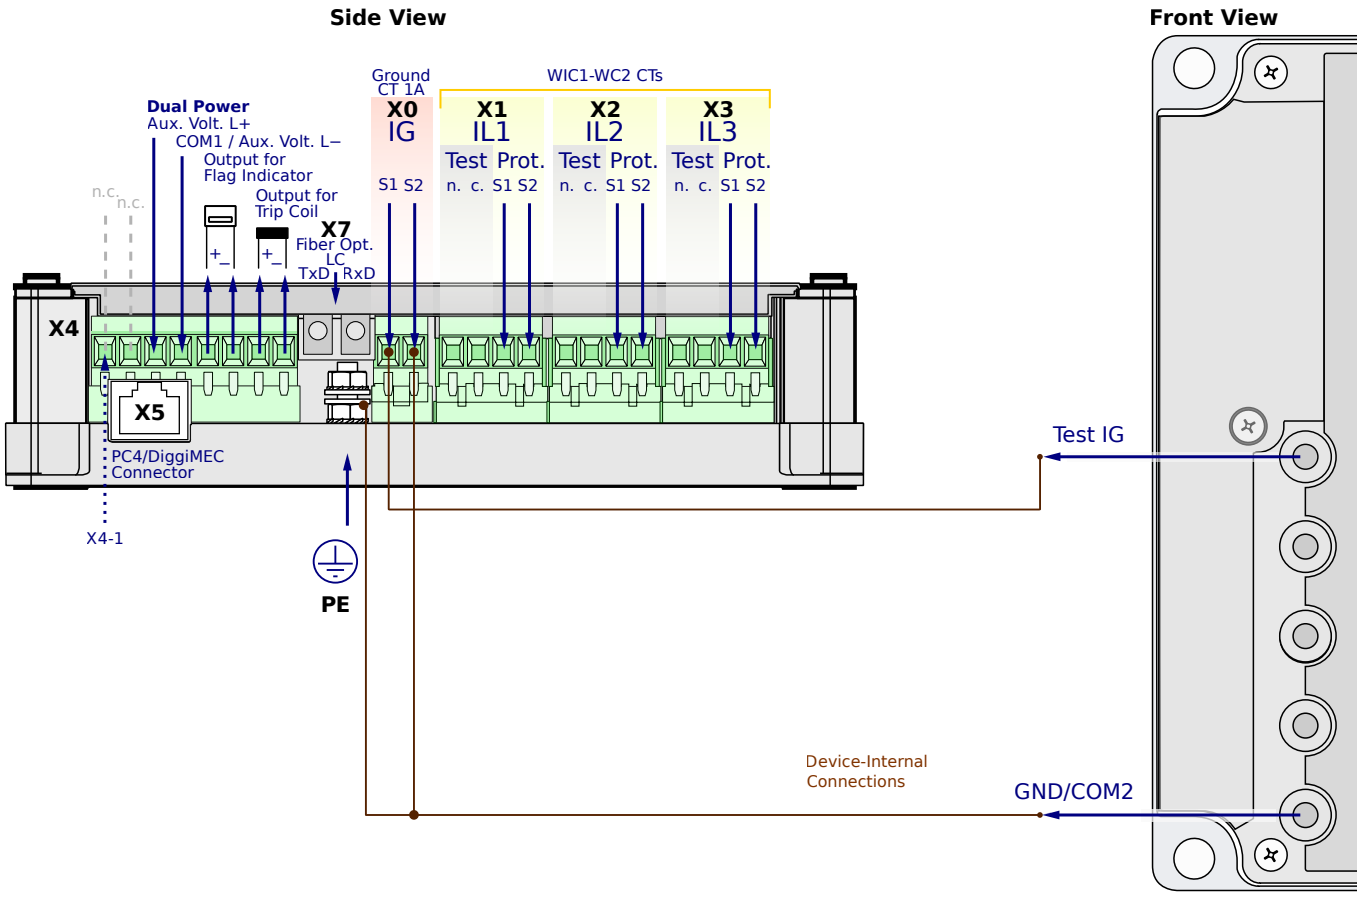


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1PA0

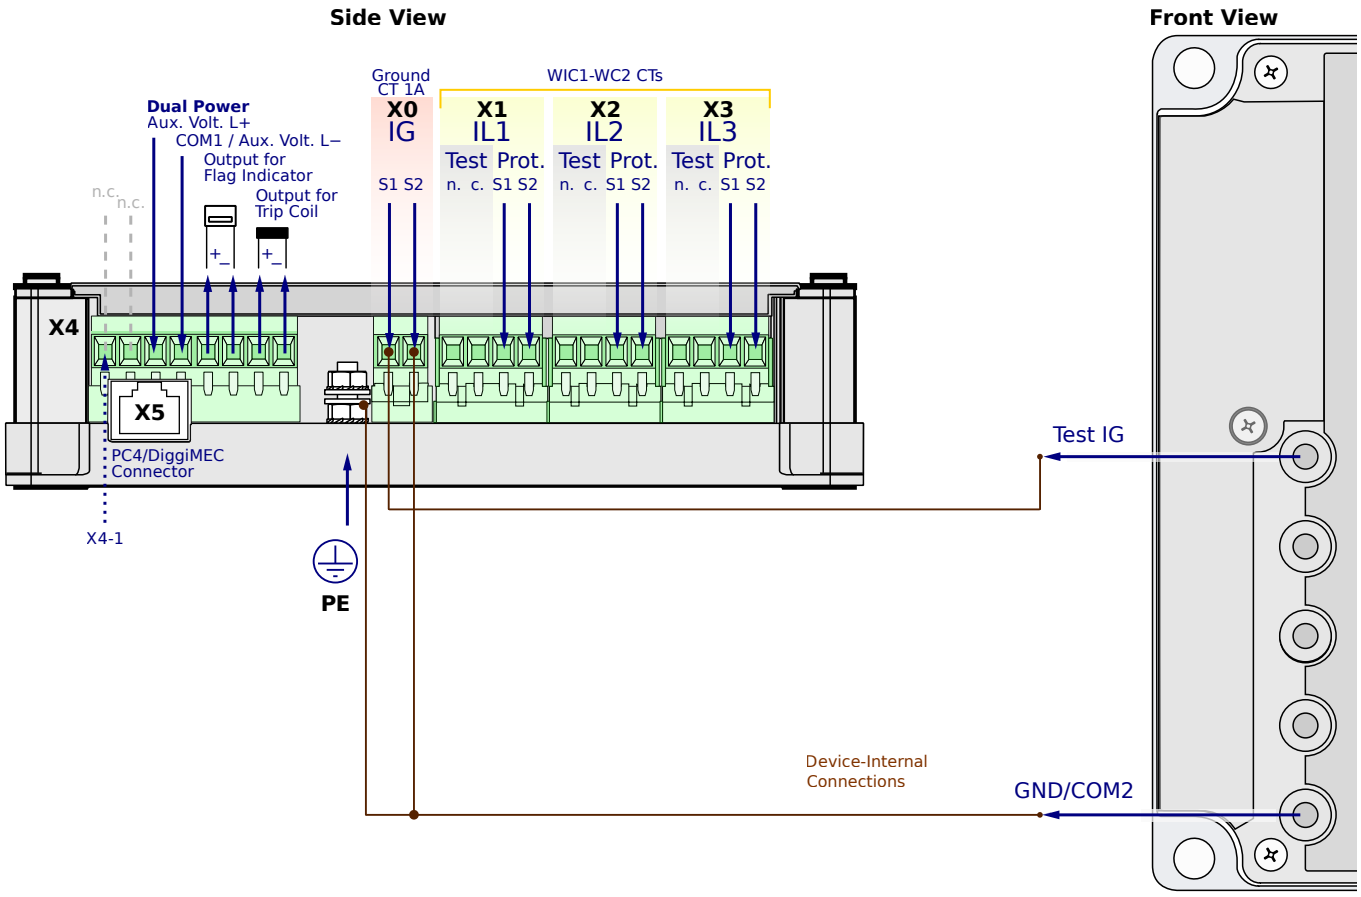


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1PAH

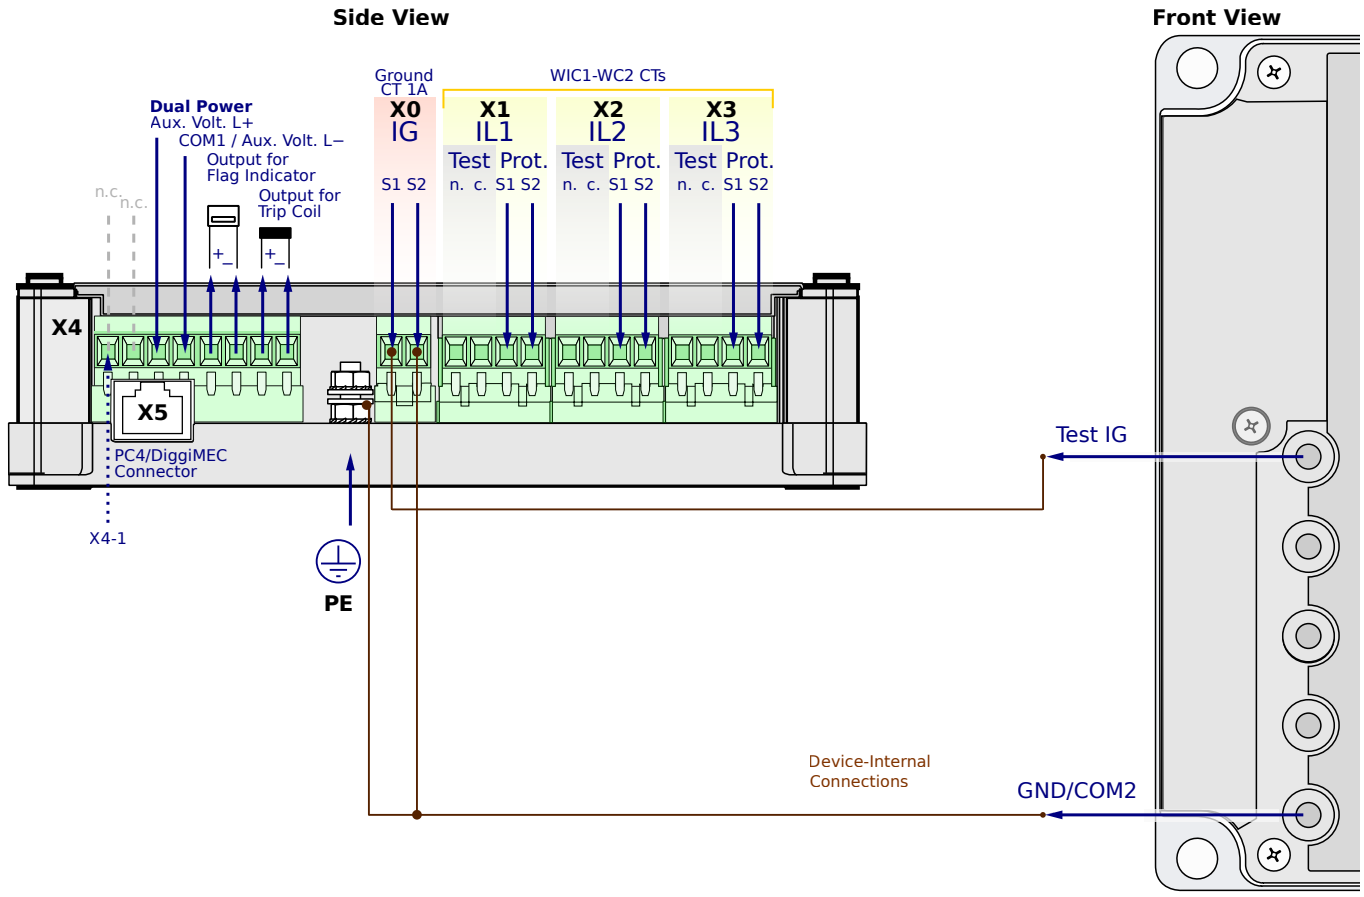


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM1PB0

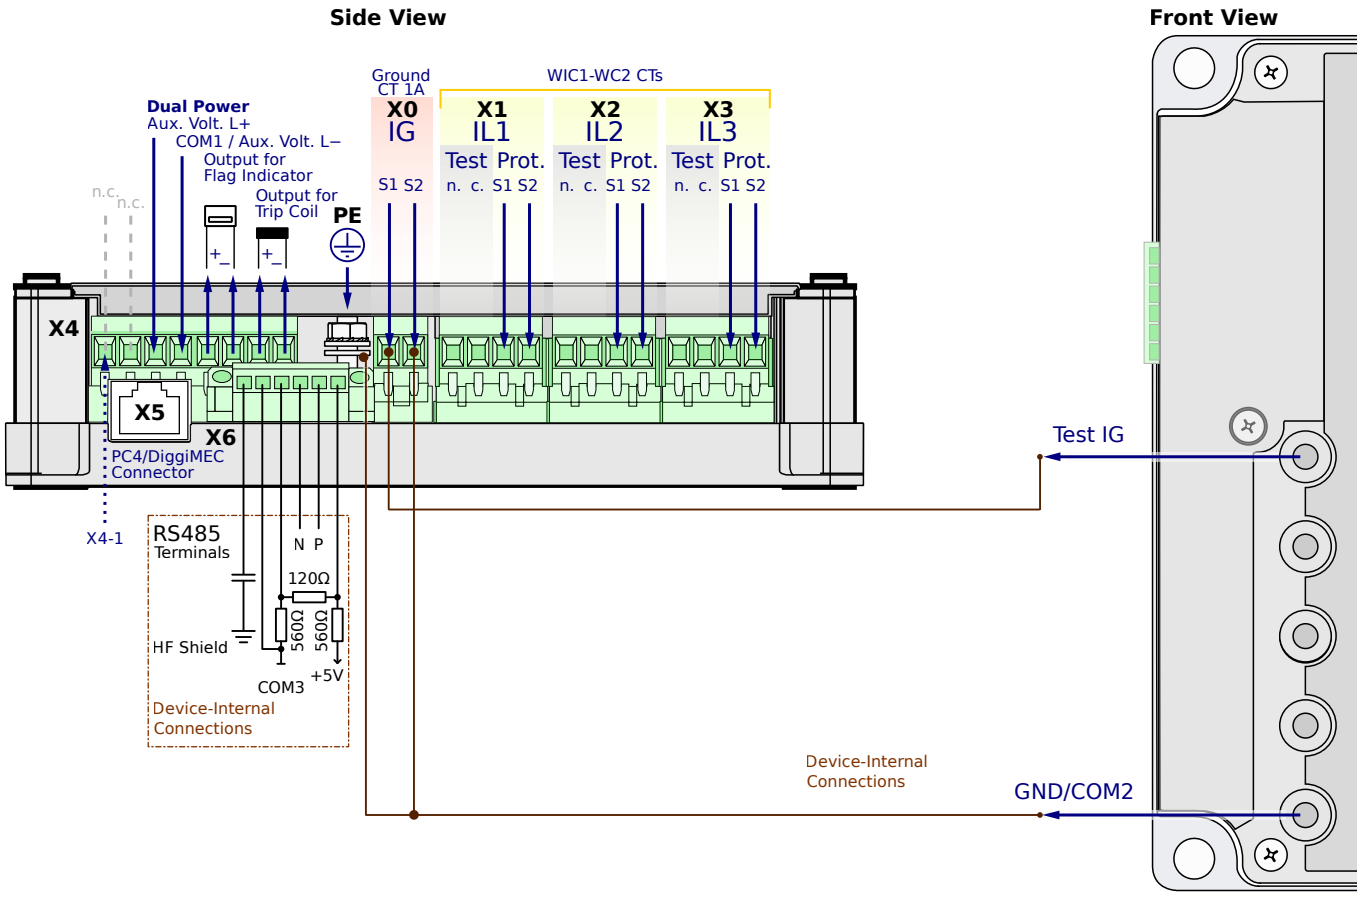


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1PBH

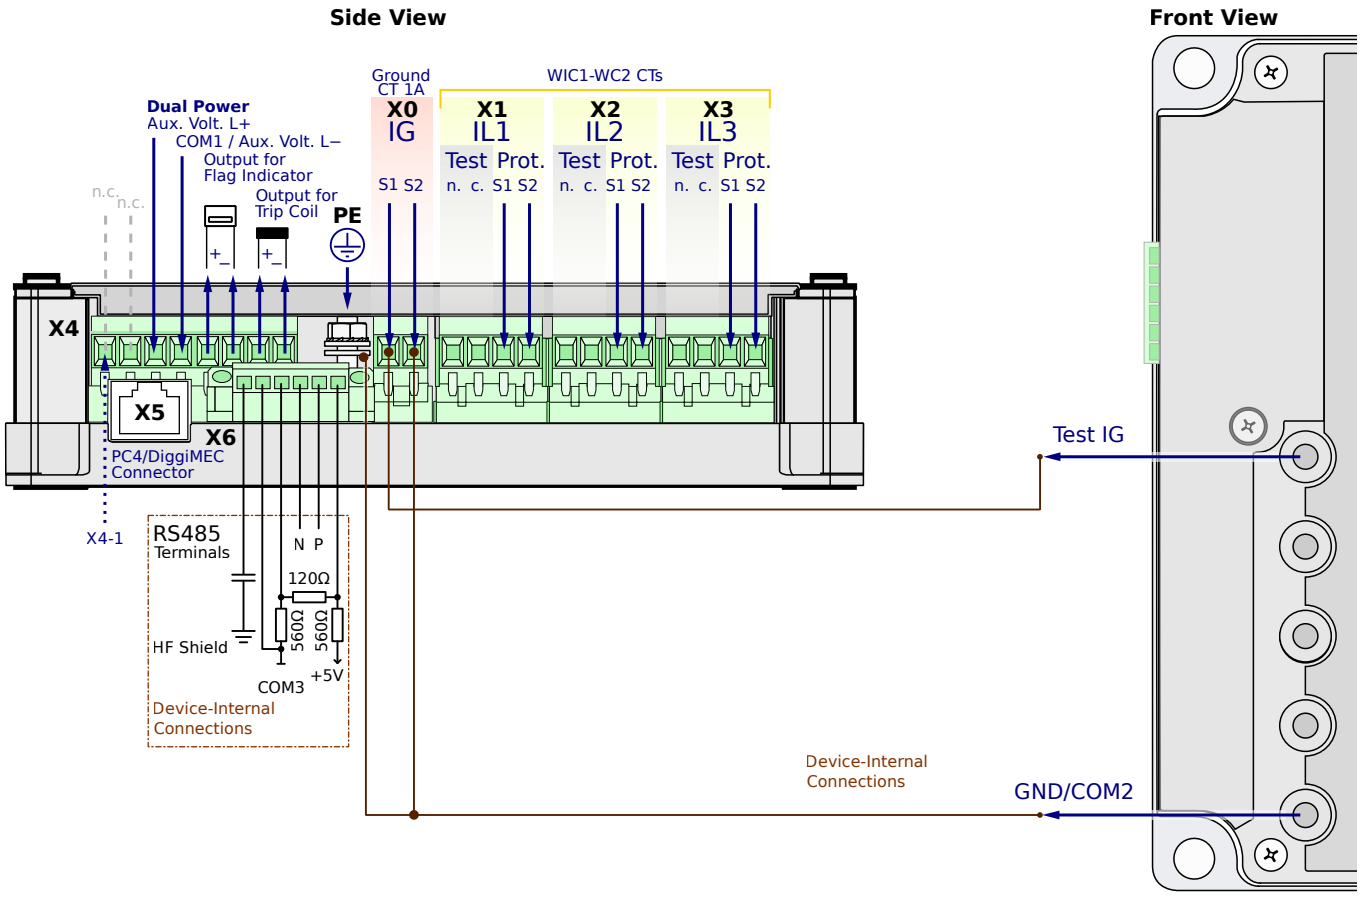


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM1PC0

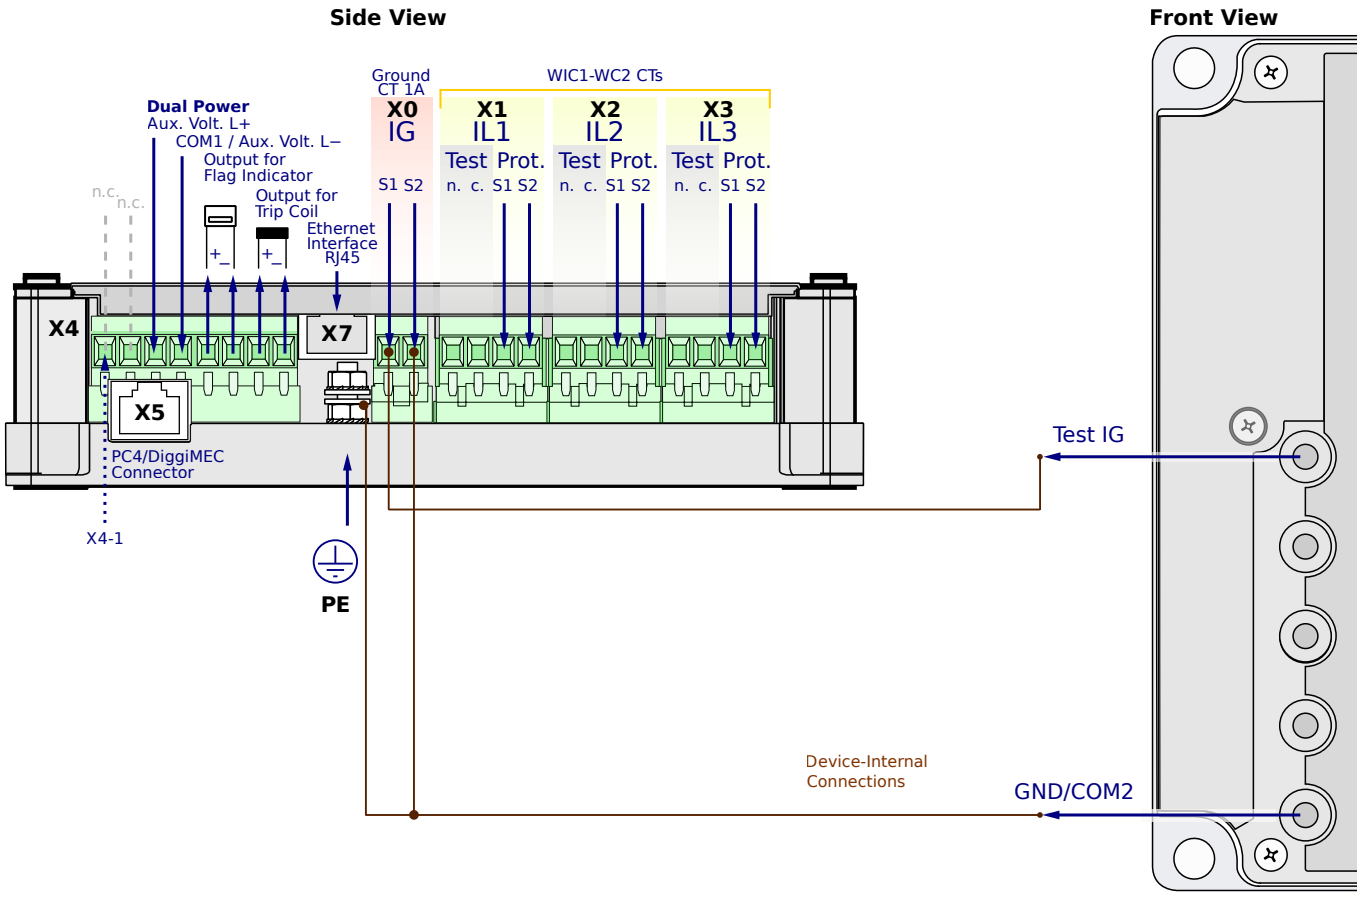


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1PCH

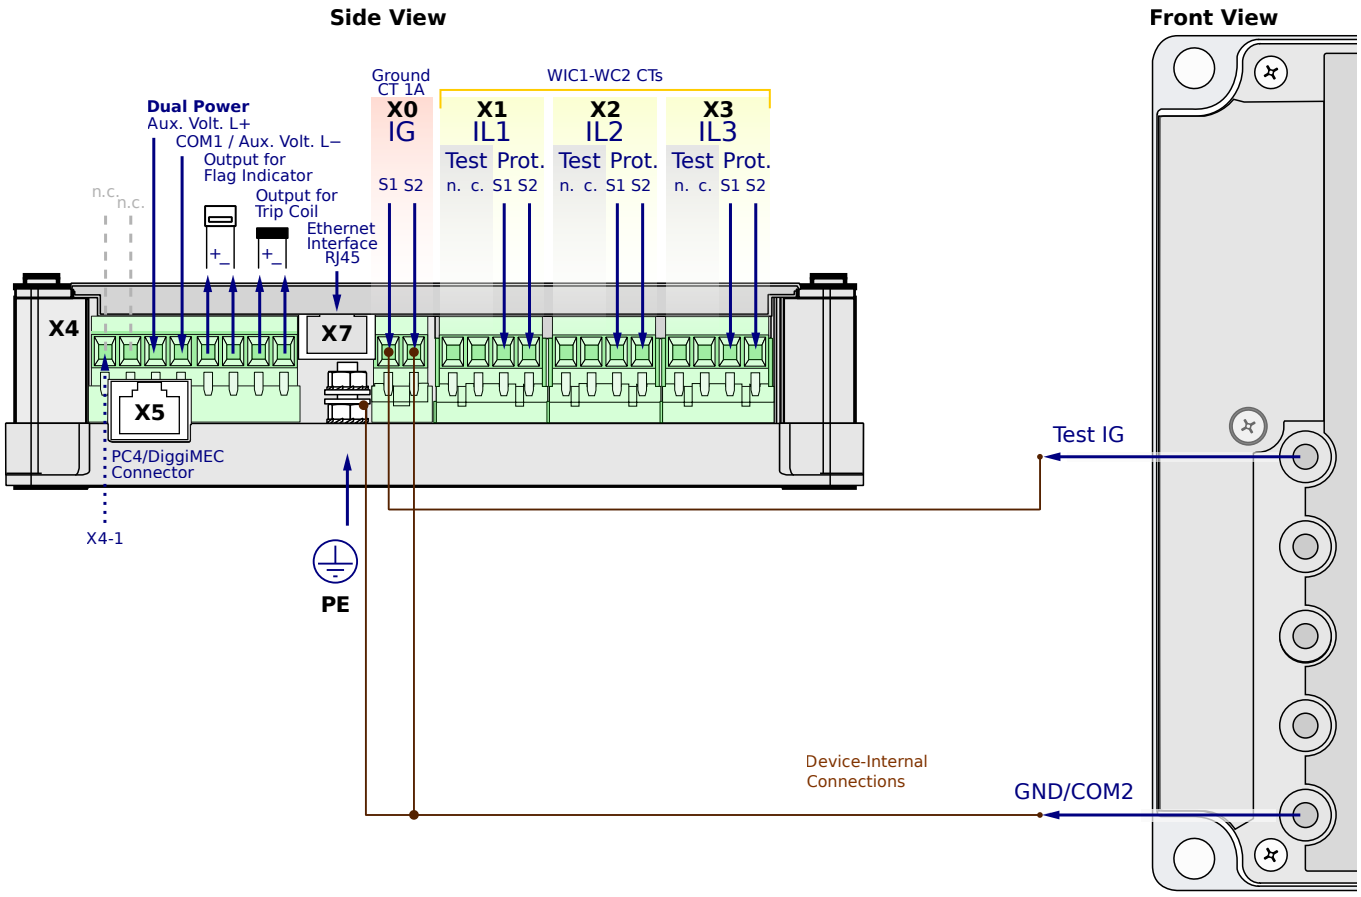


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM1PL0

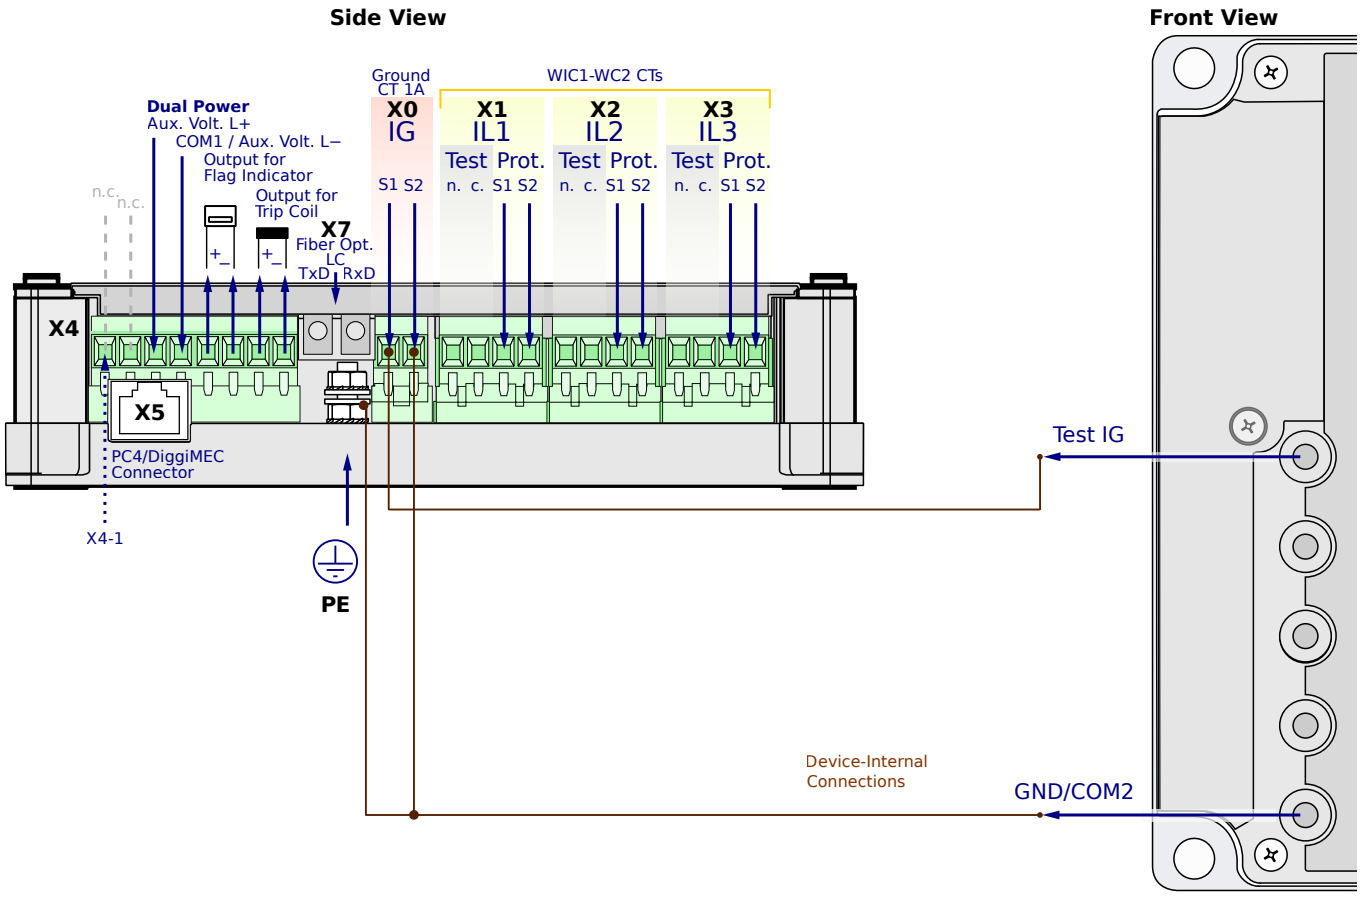


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM1PLH

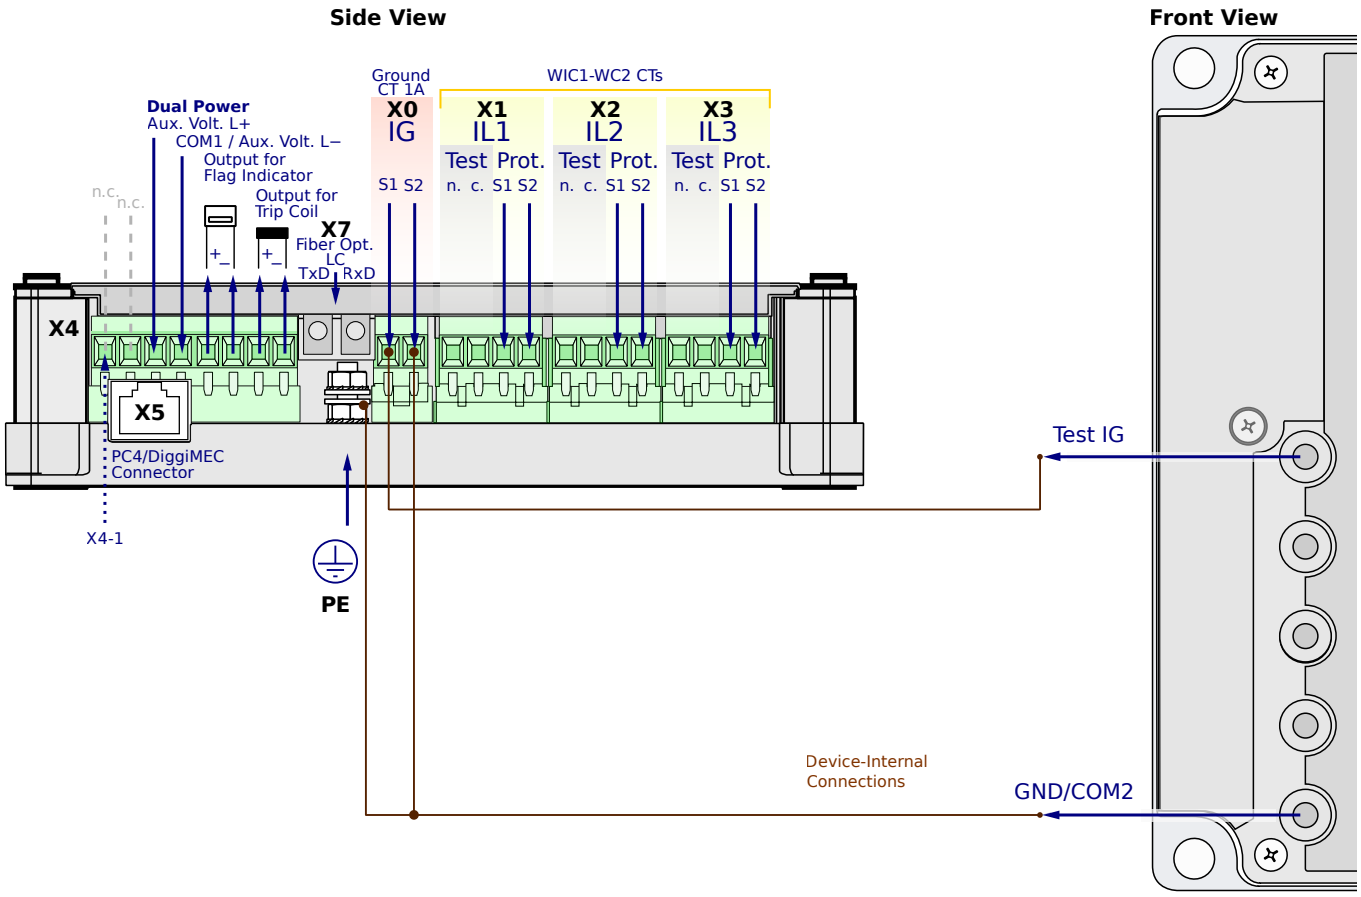


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2SA0

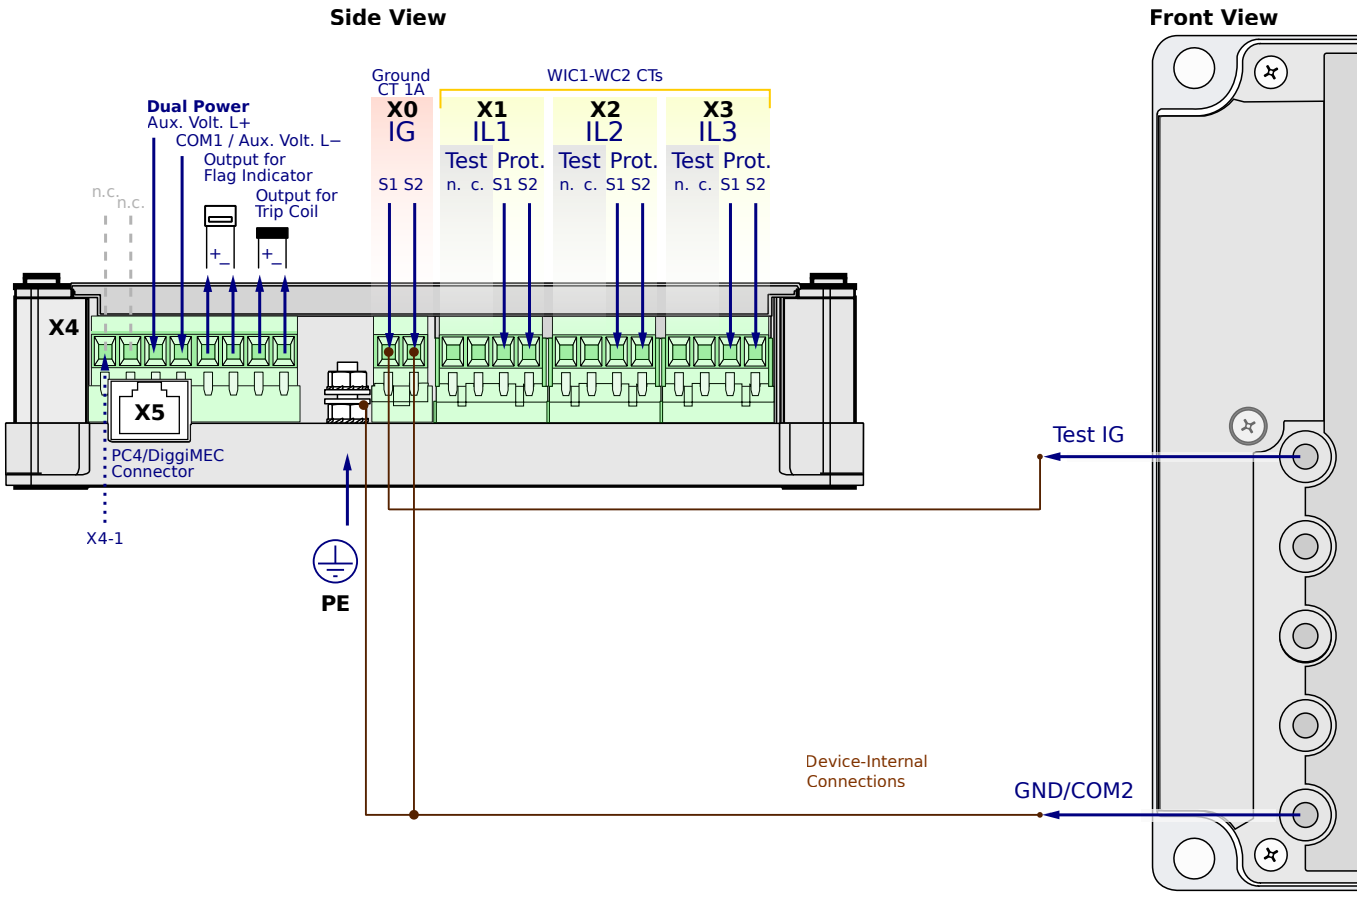


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2SAH

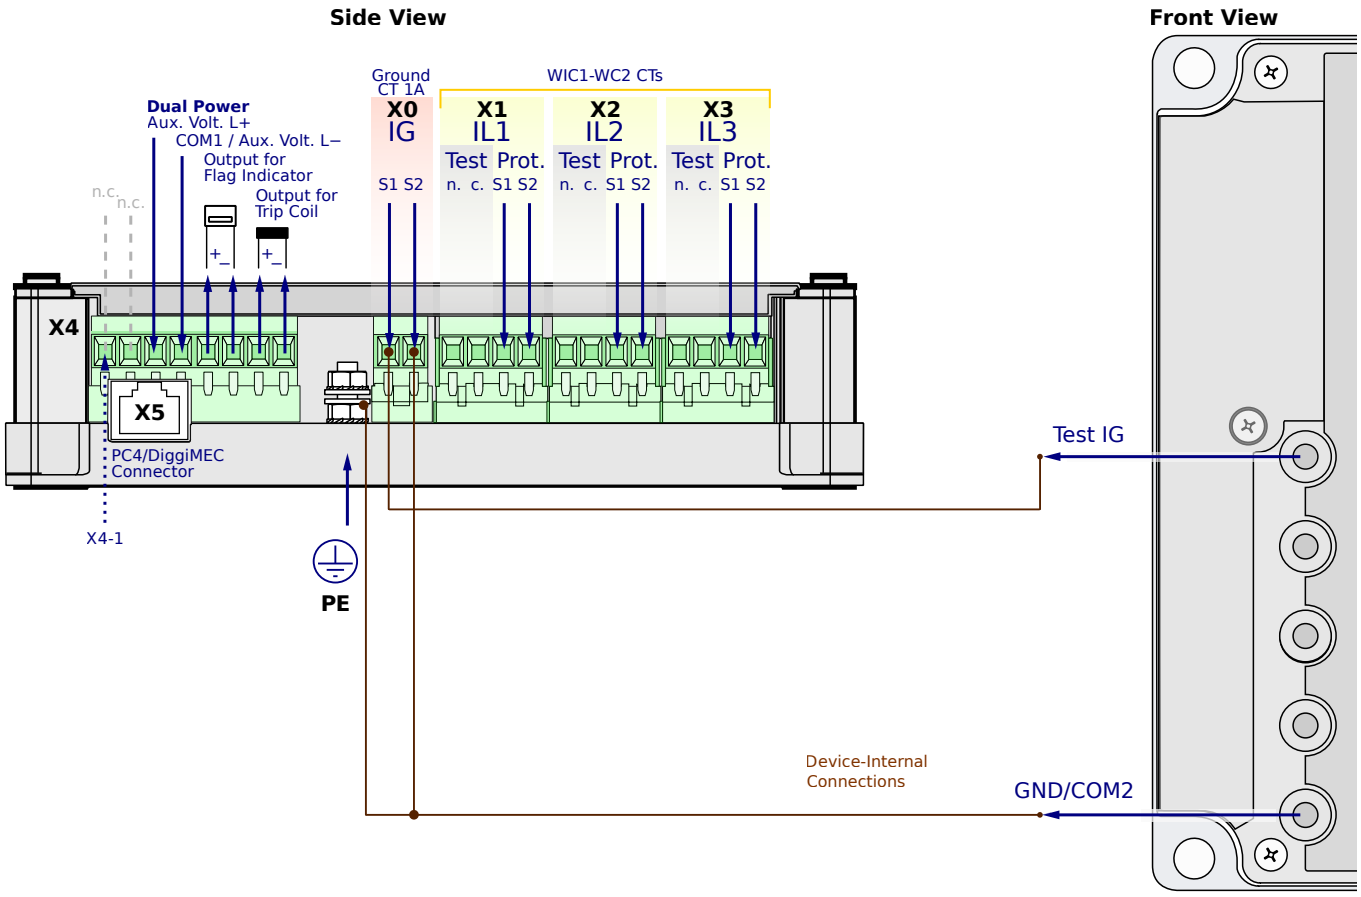


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2SB0

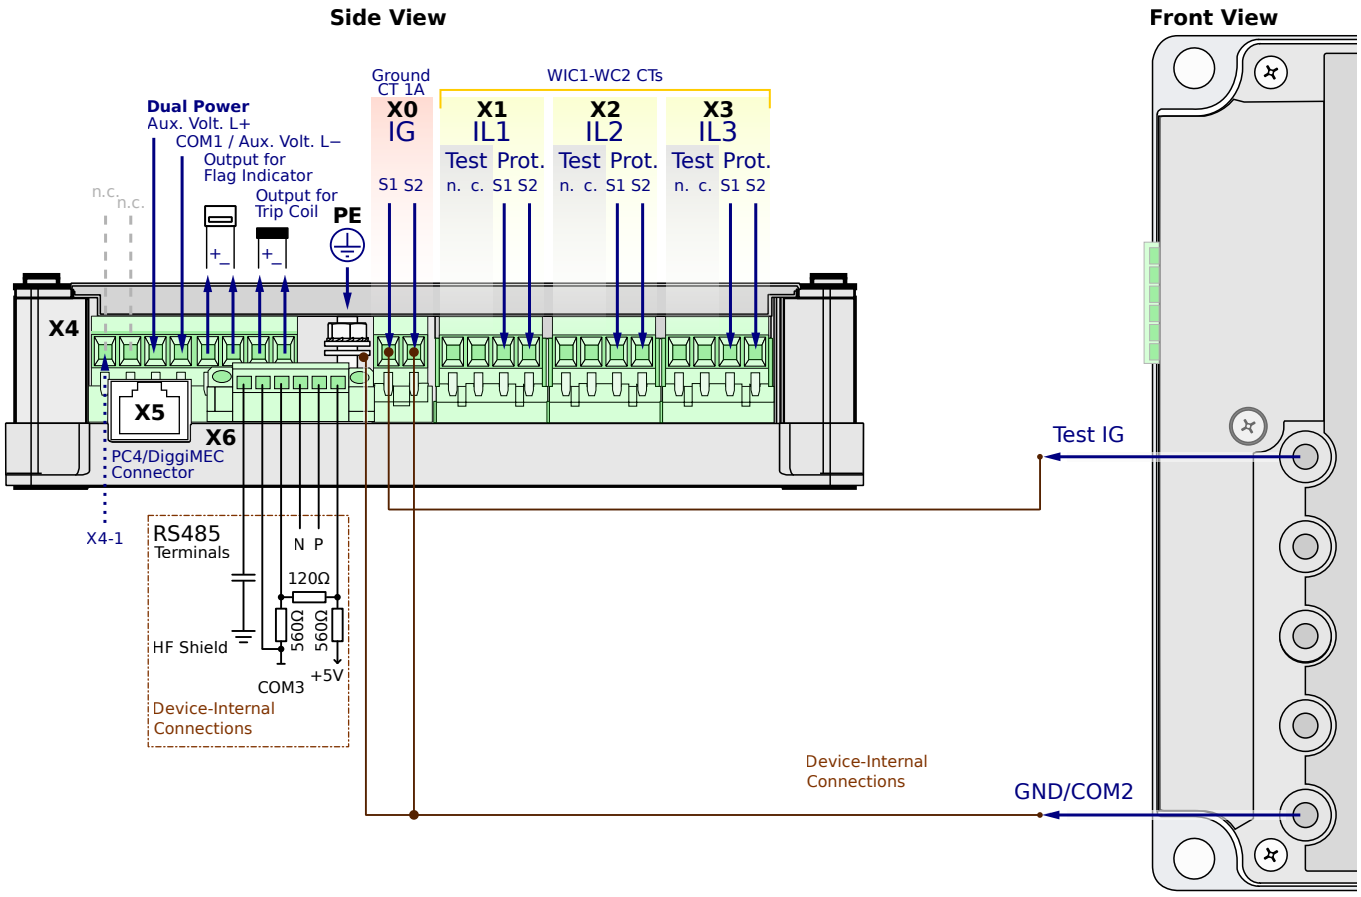


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2SBH

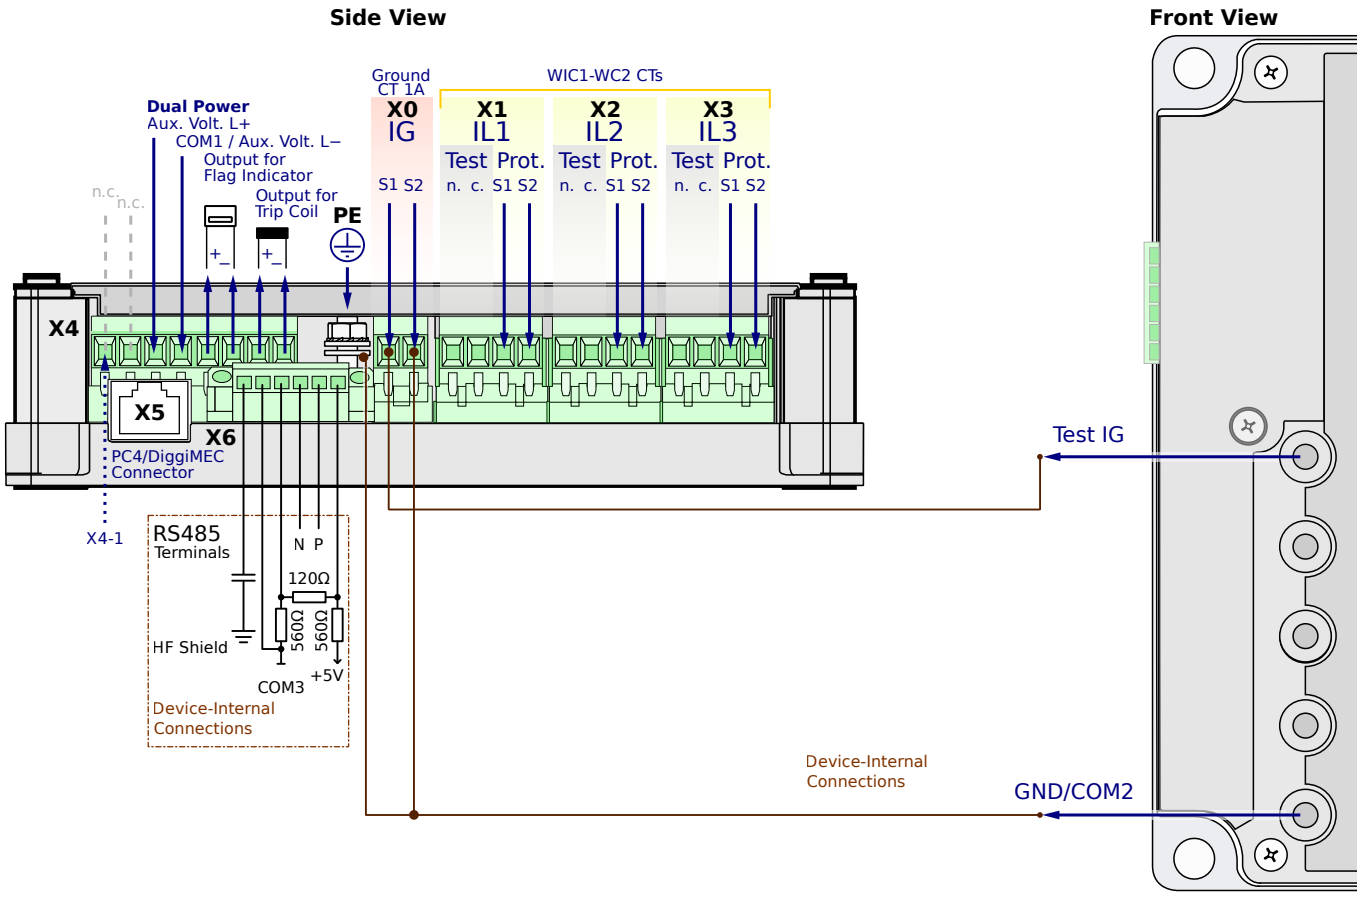


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2SC0

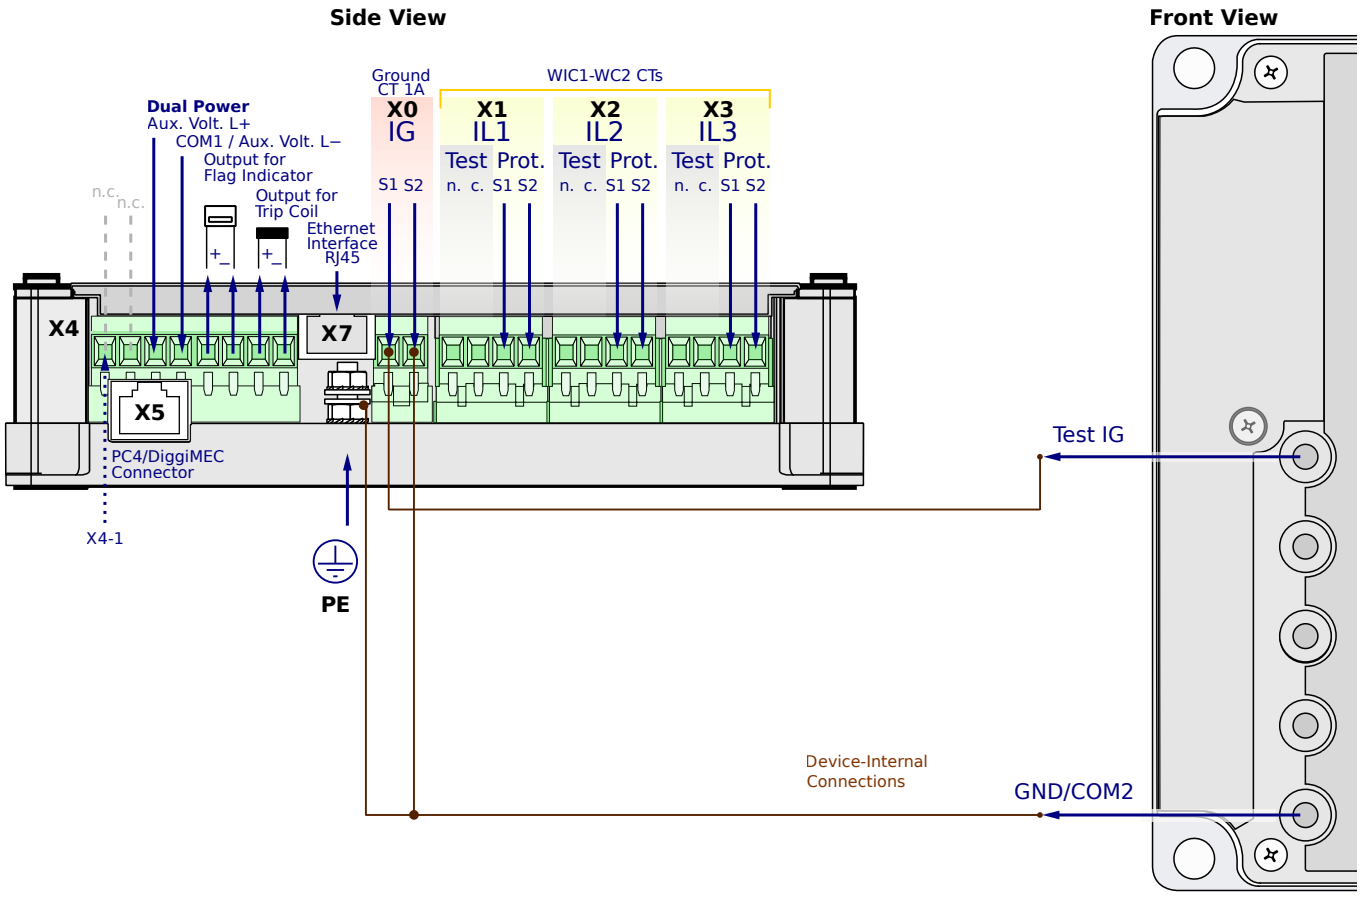


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2SCH

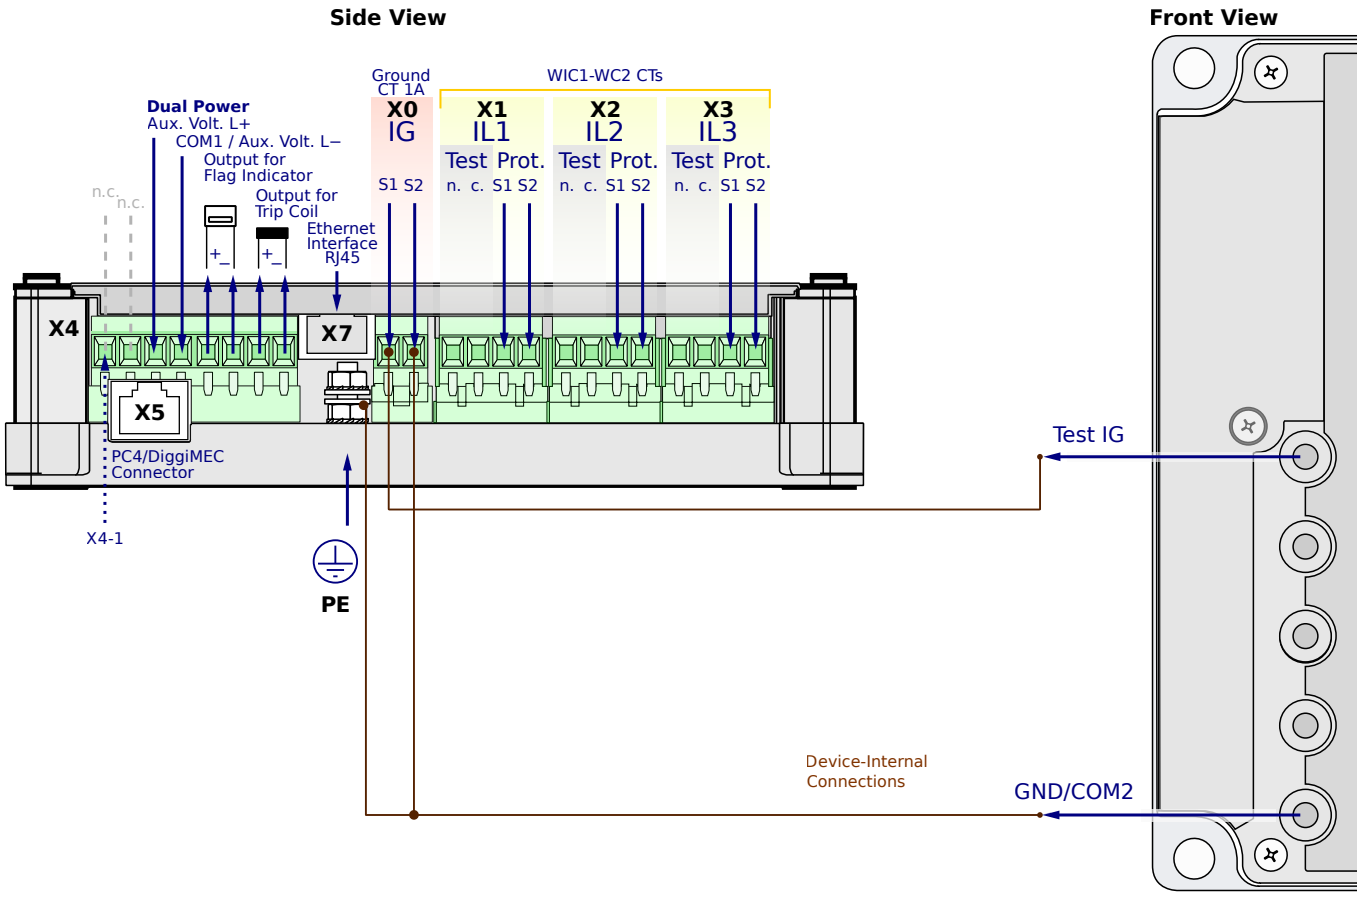


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2SL0

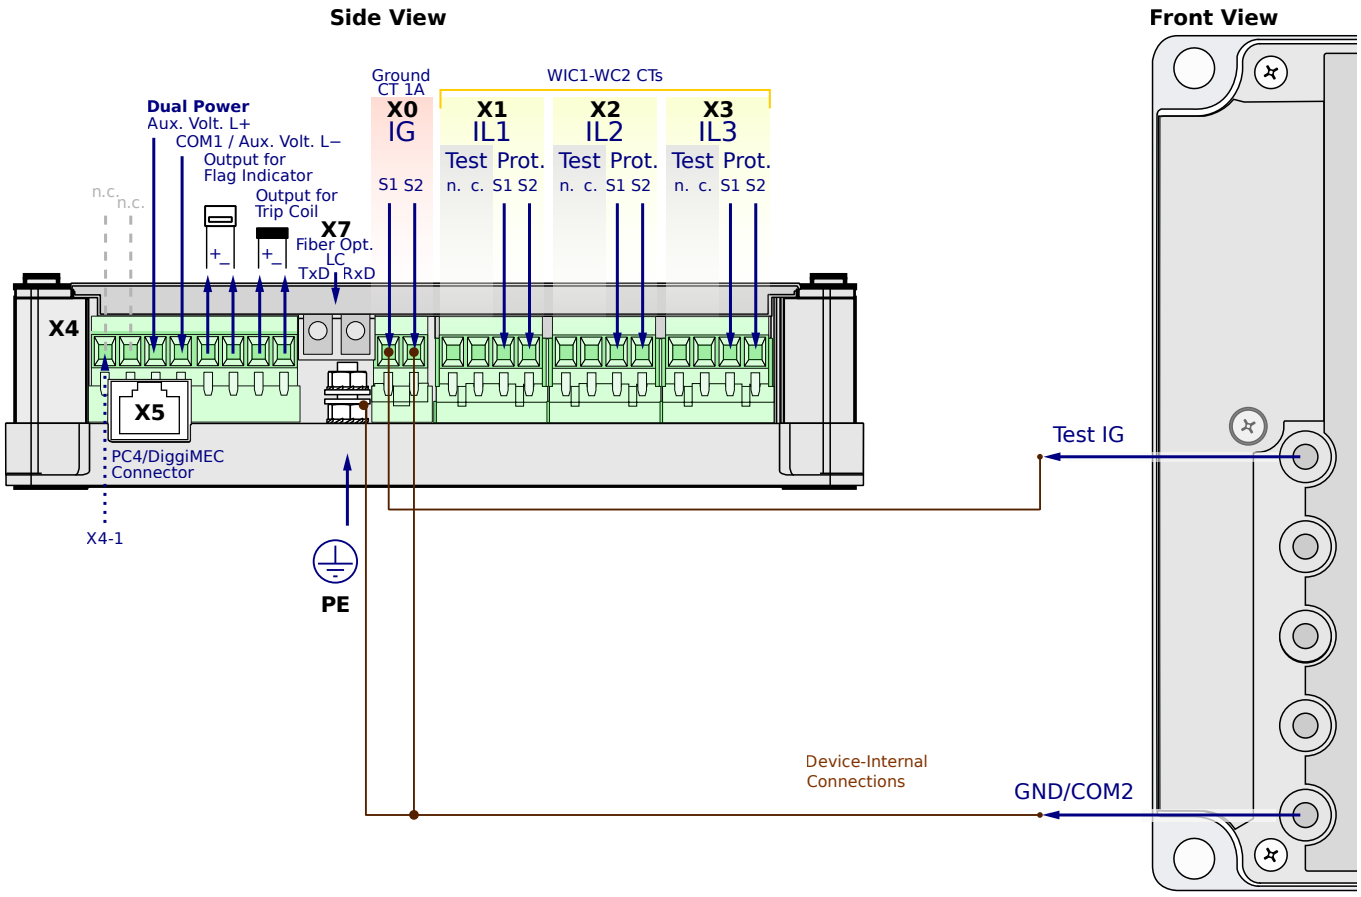


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2SLH

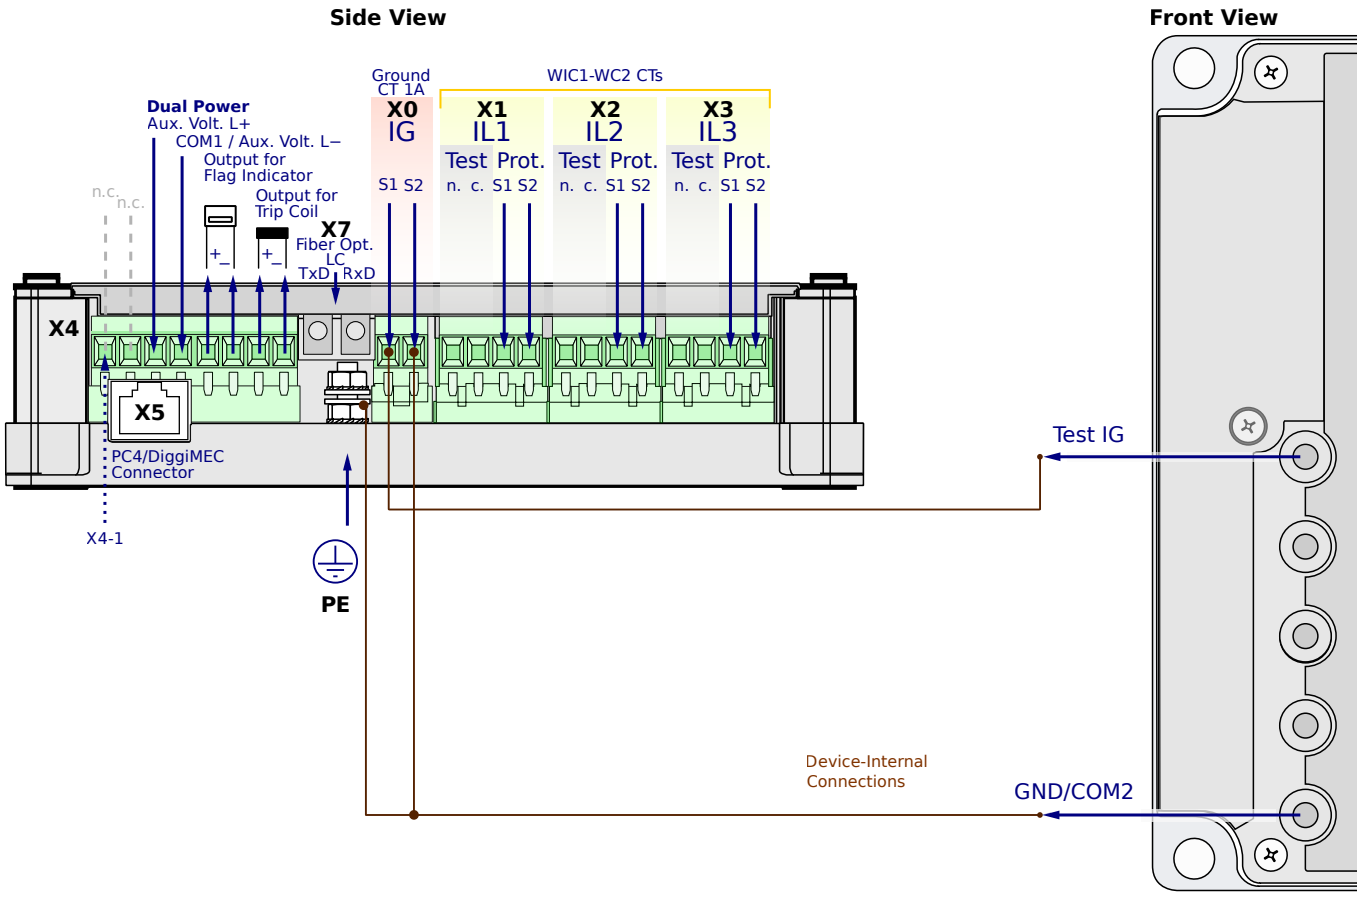


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2AA0

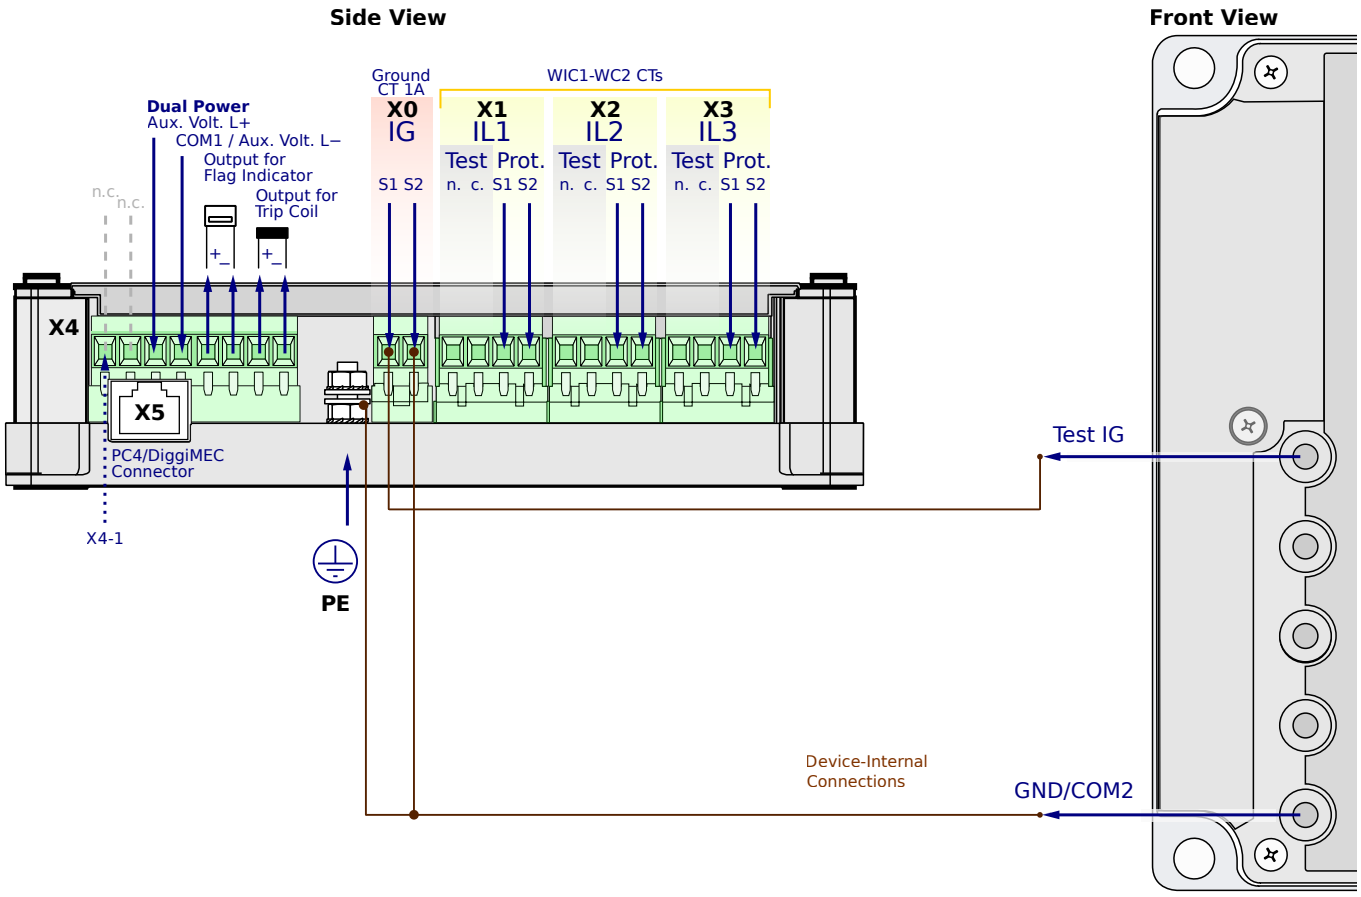


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2AAH

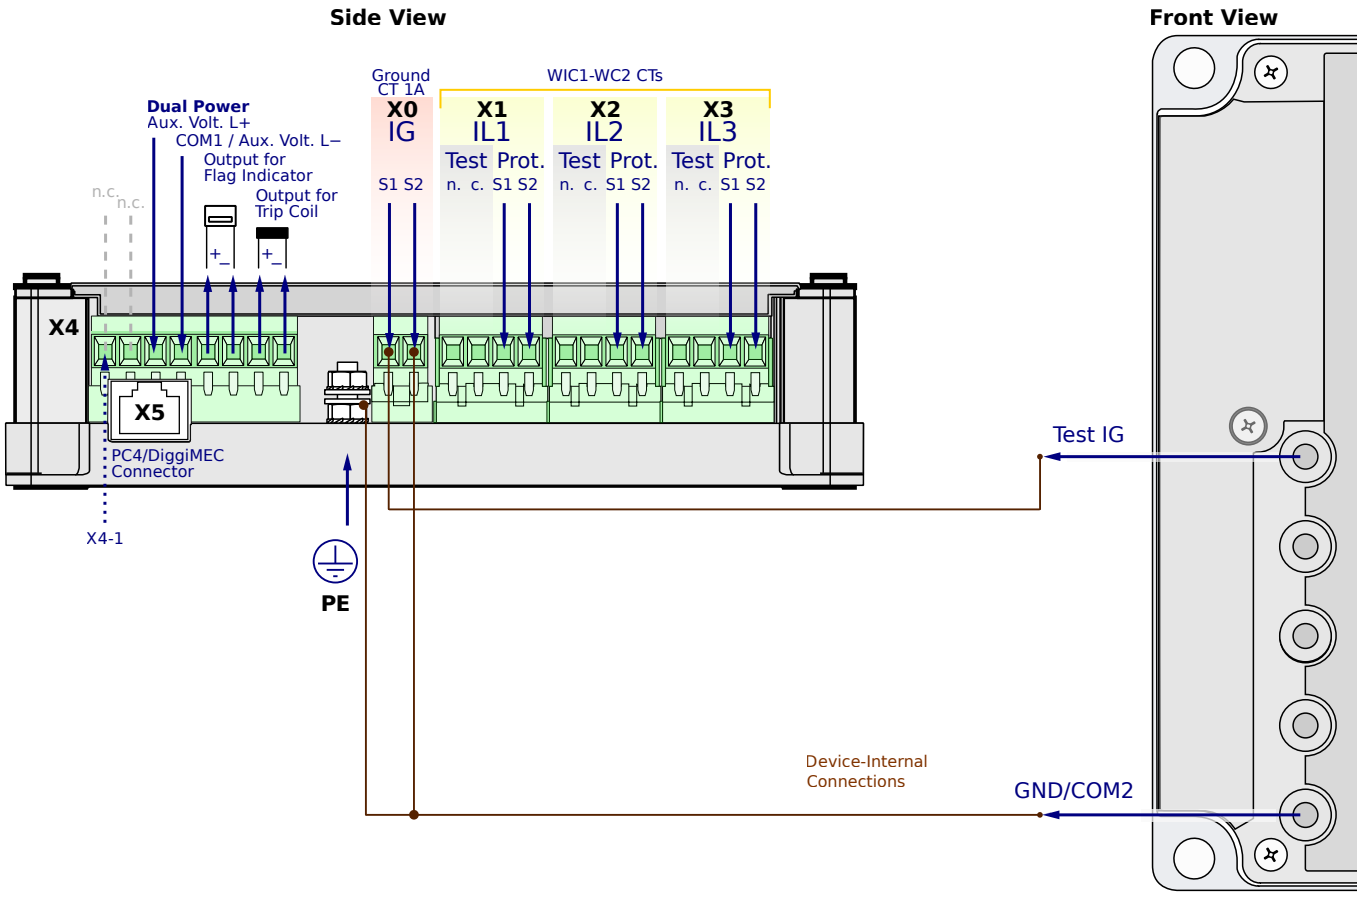


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2AB0

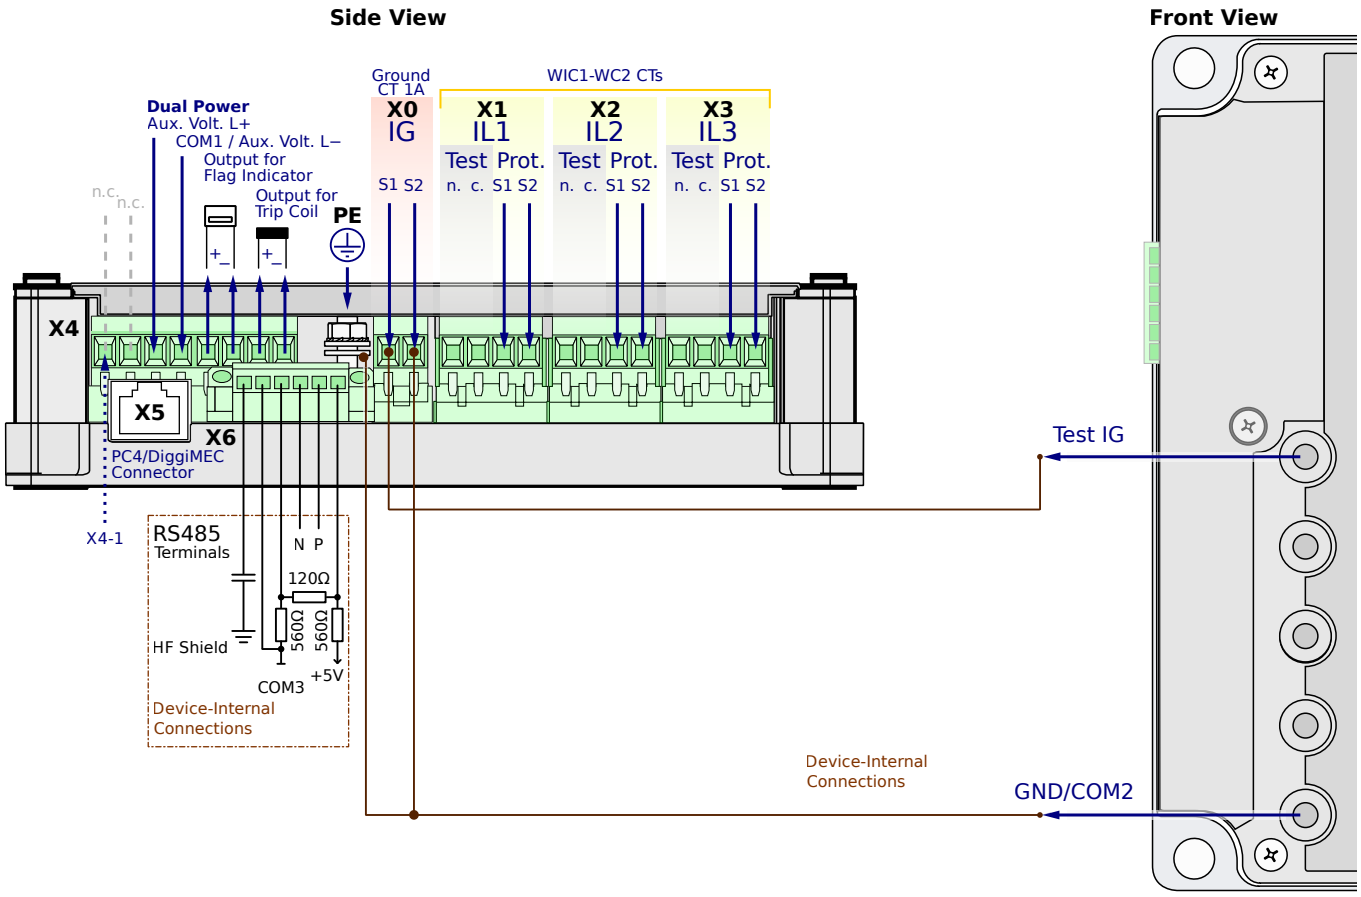


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2ABH

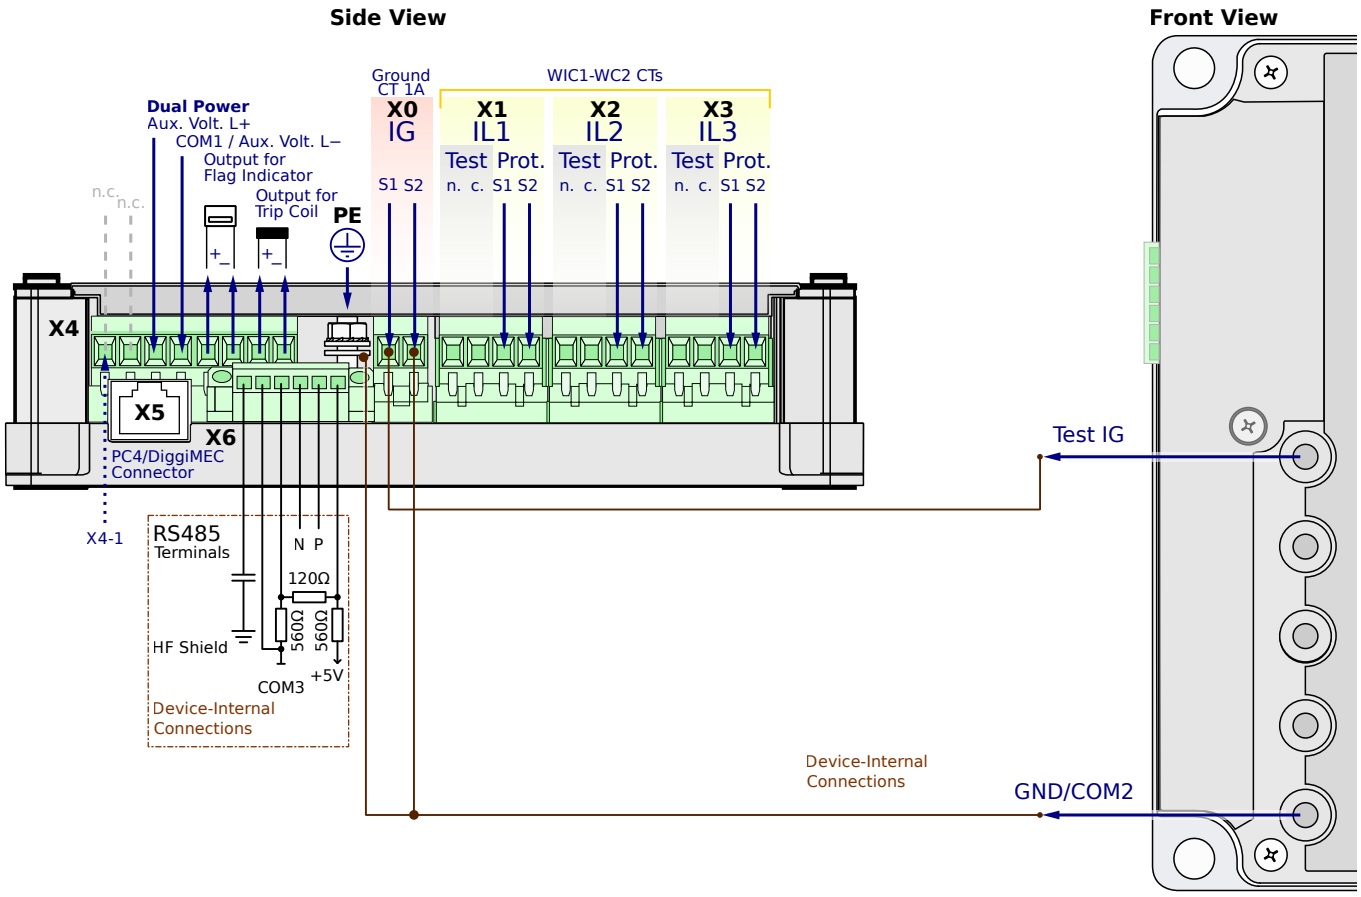


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2AC0

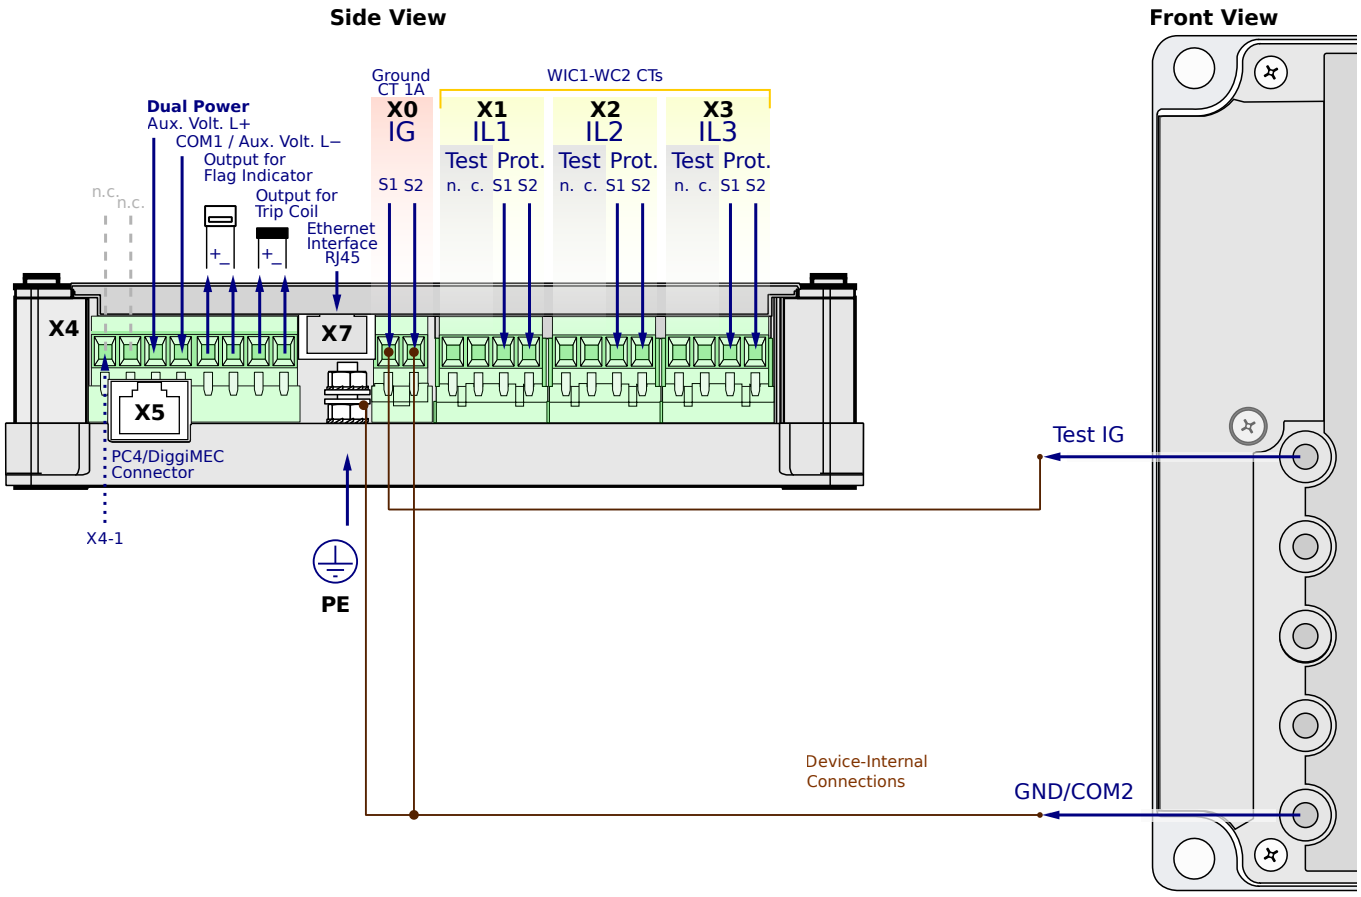


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2ACH

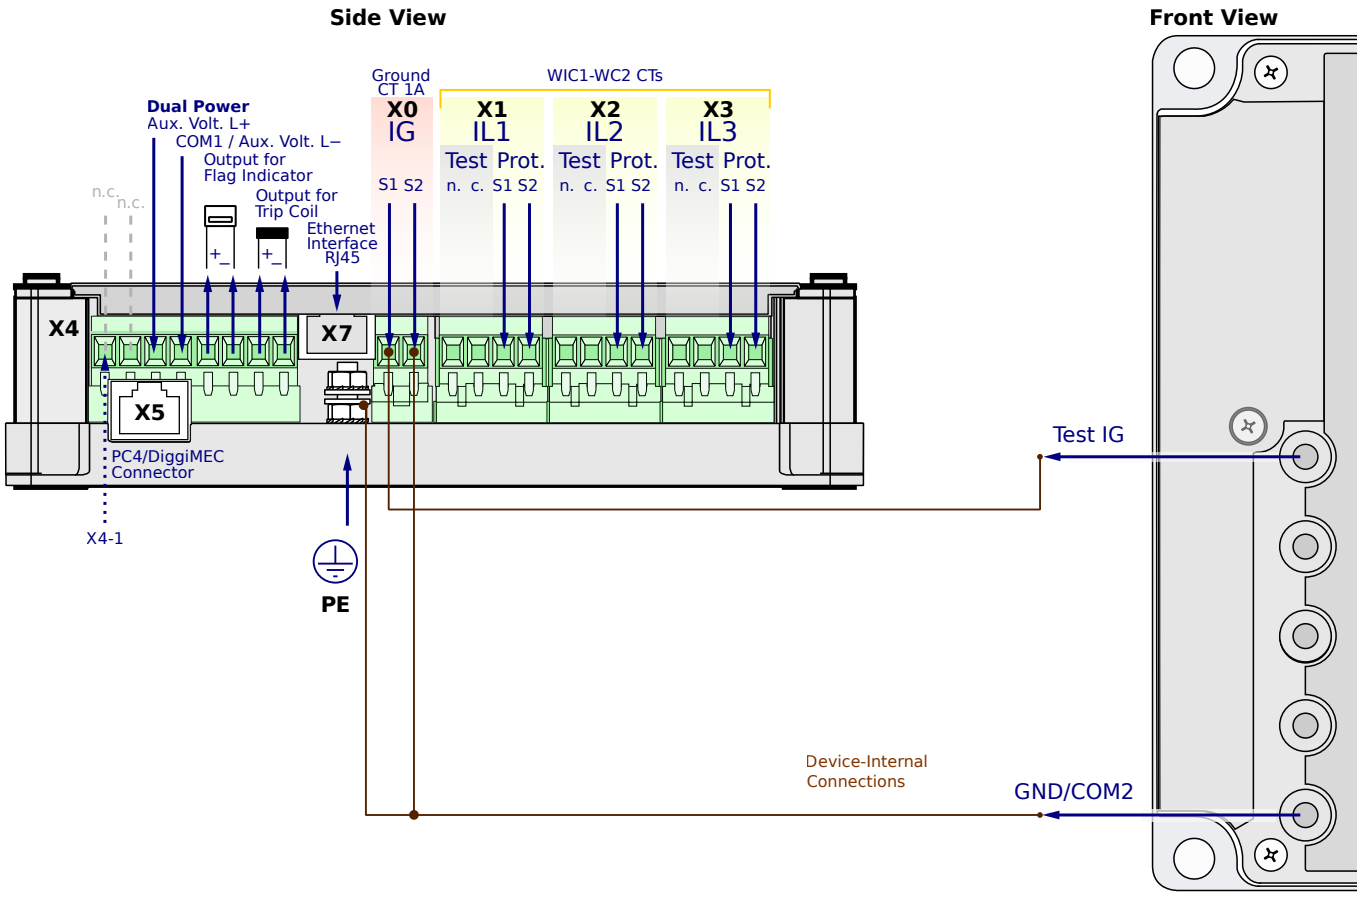


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2AL0

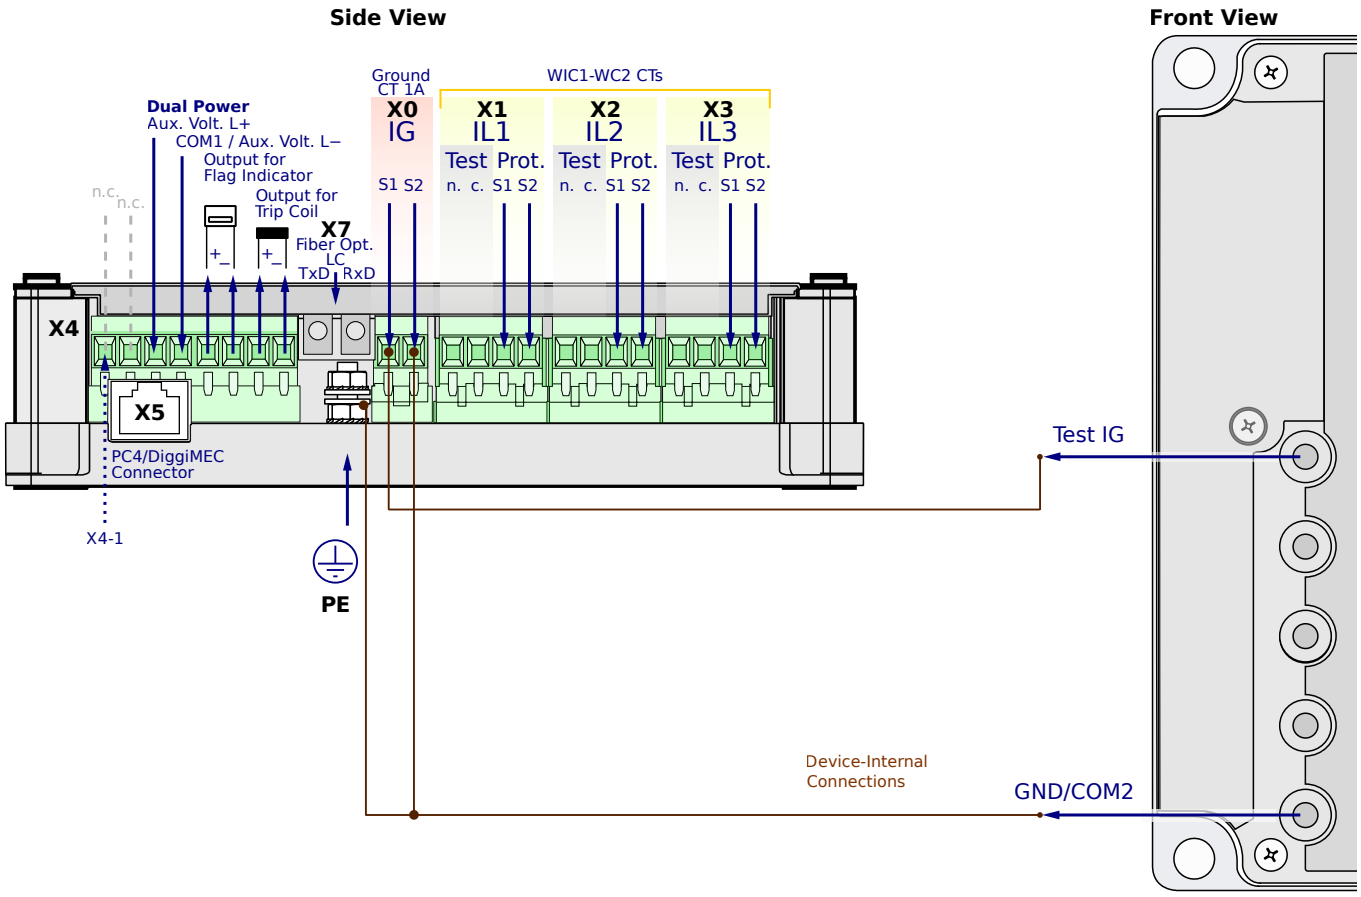


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2ALH

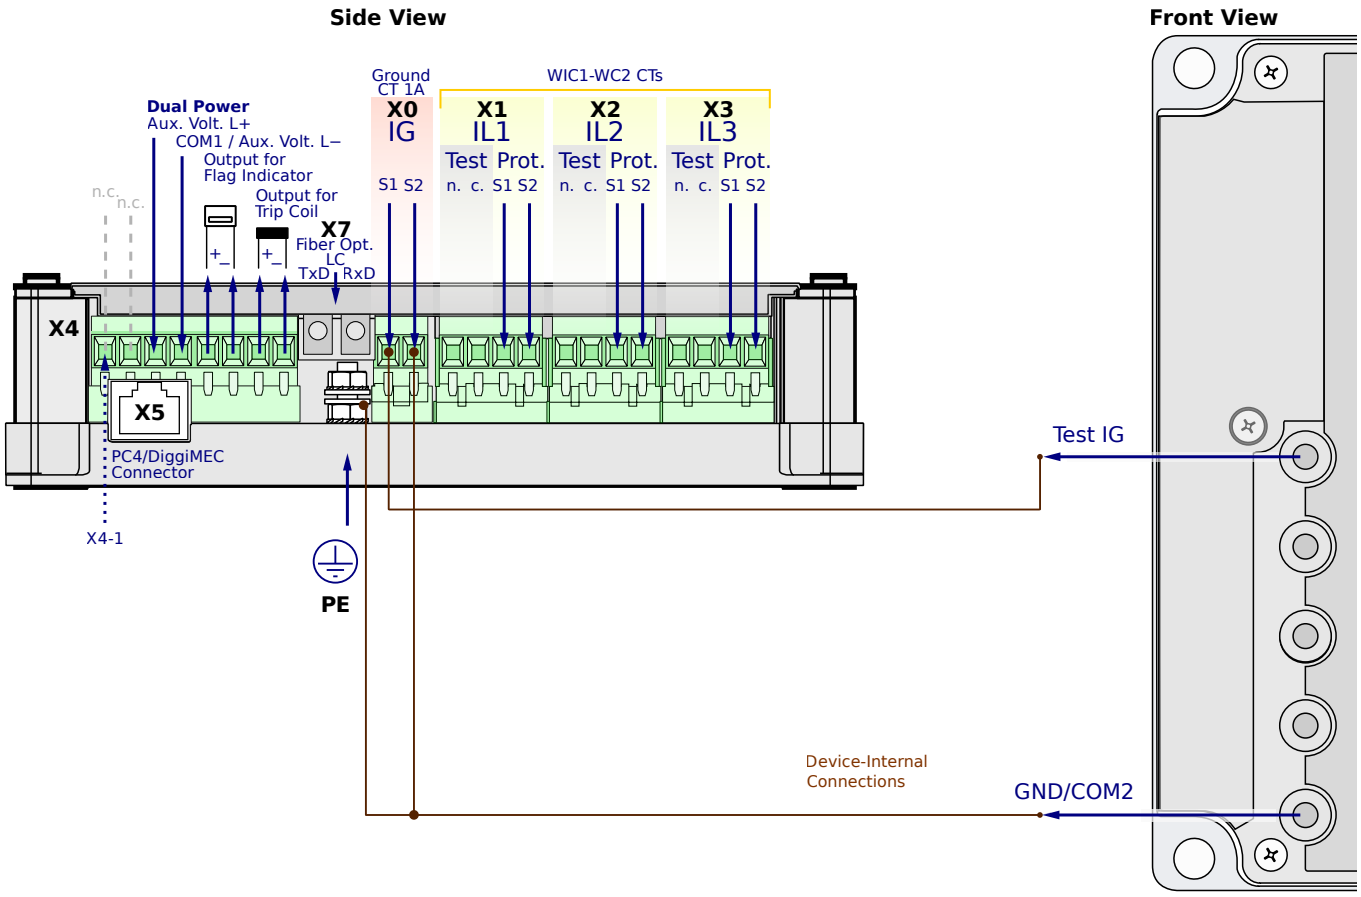


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2PA0

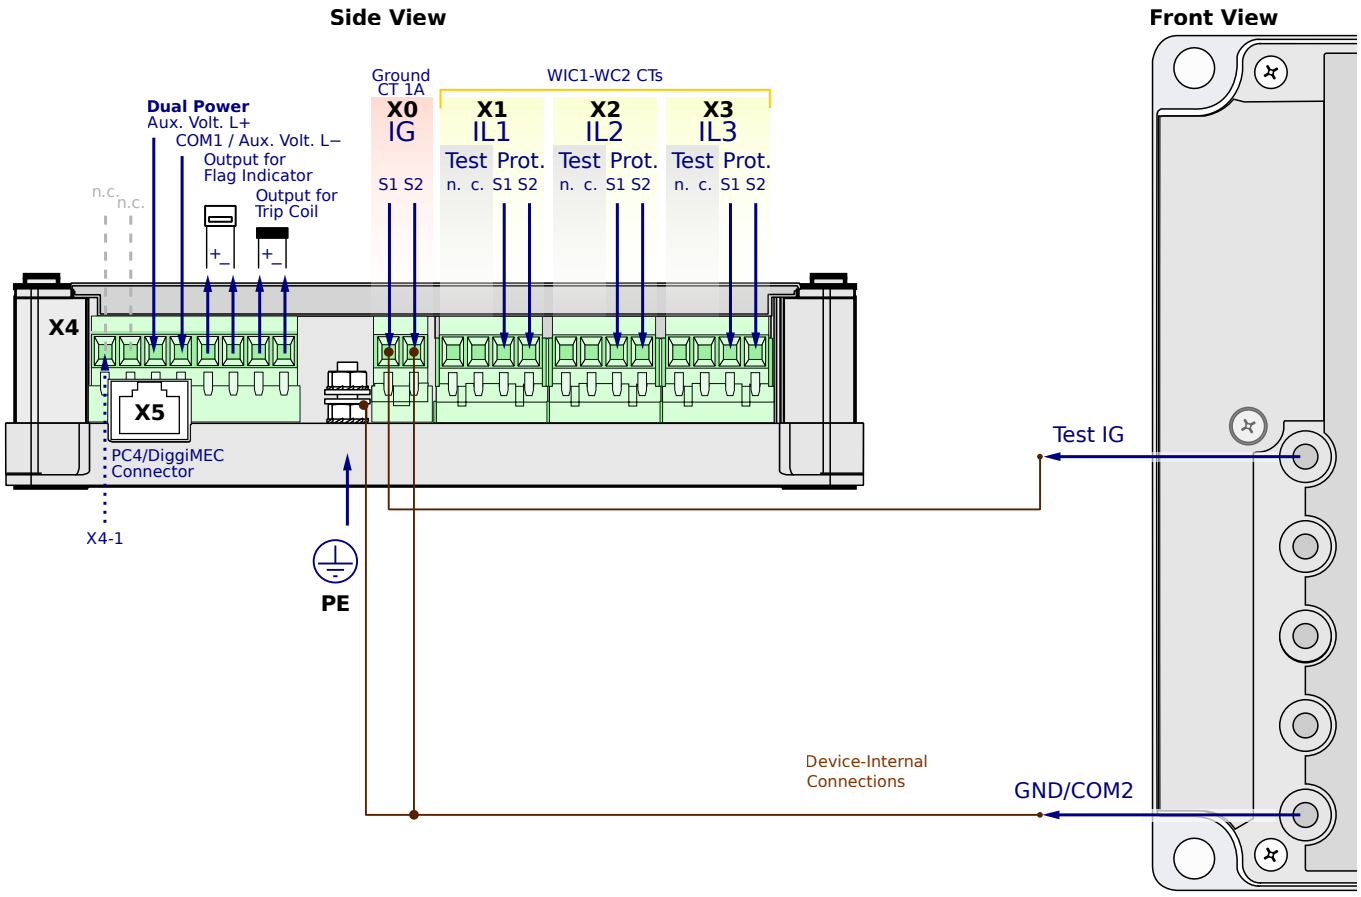


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2PAH

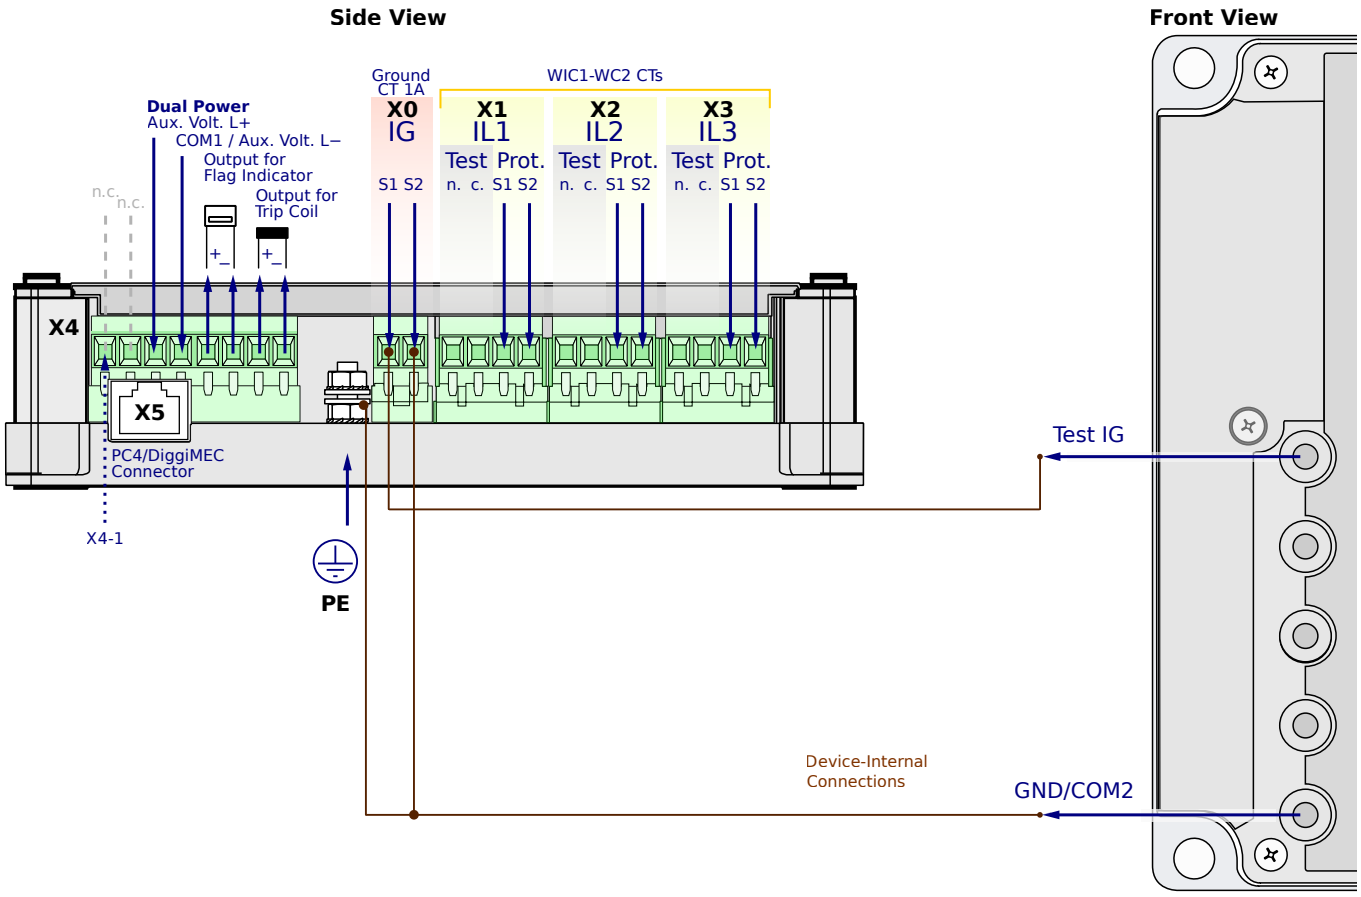


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FM2PB0

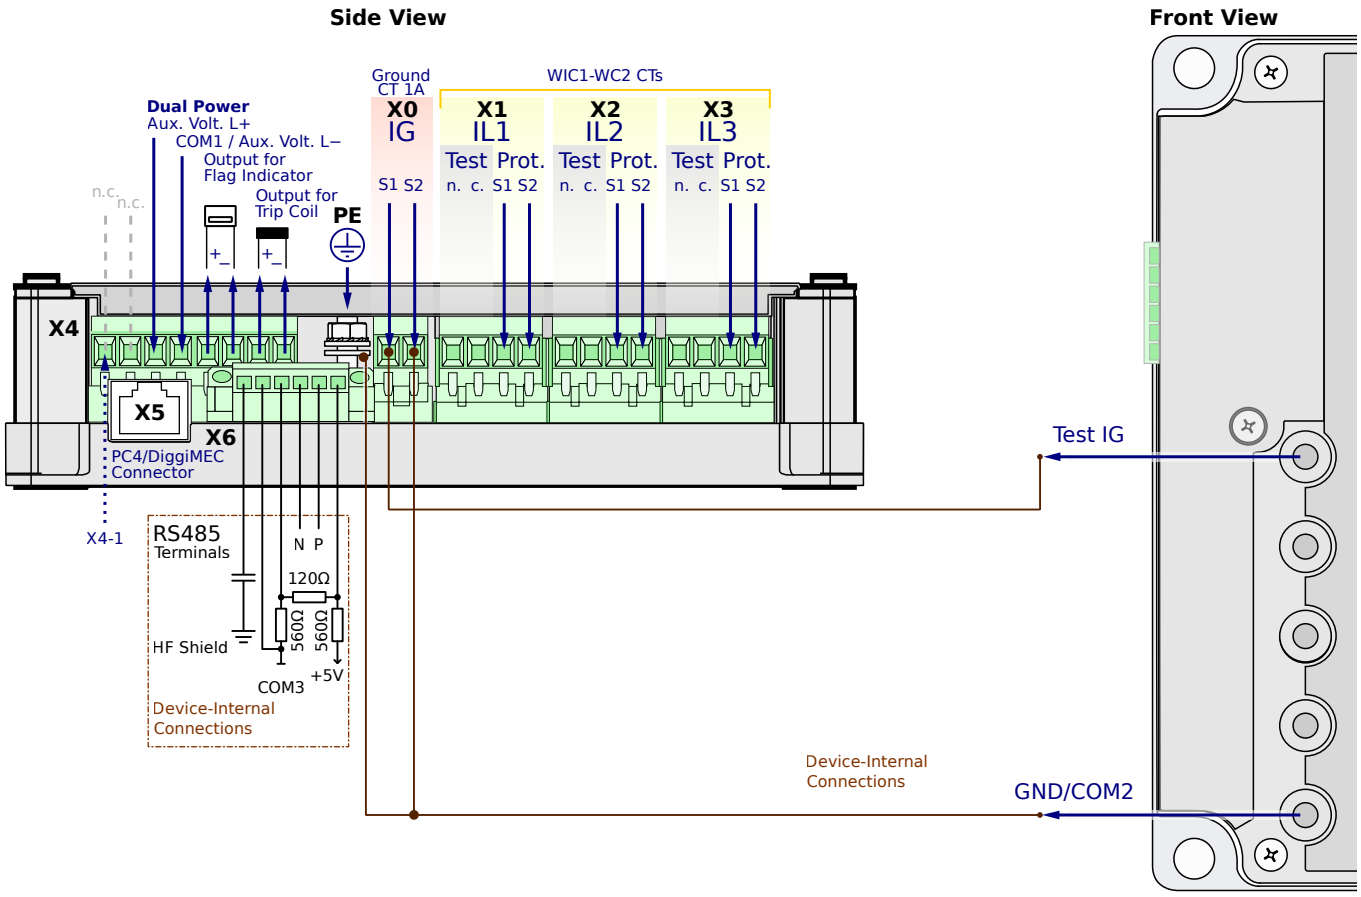


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2PBH

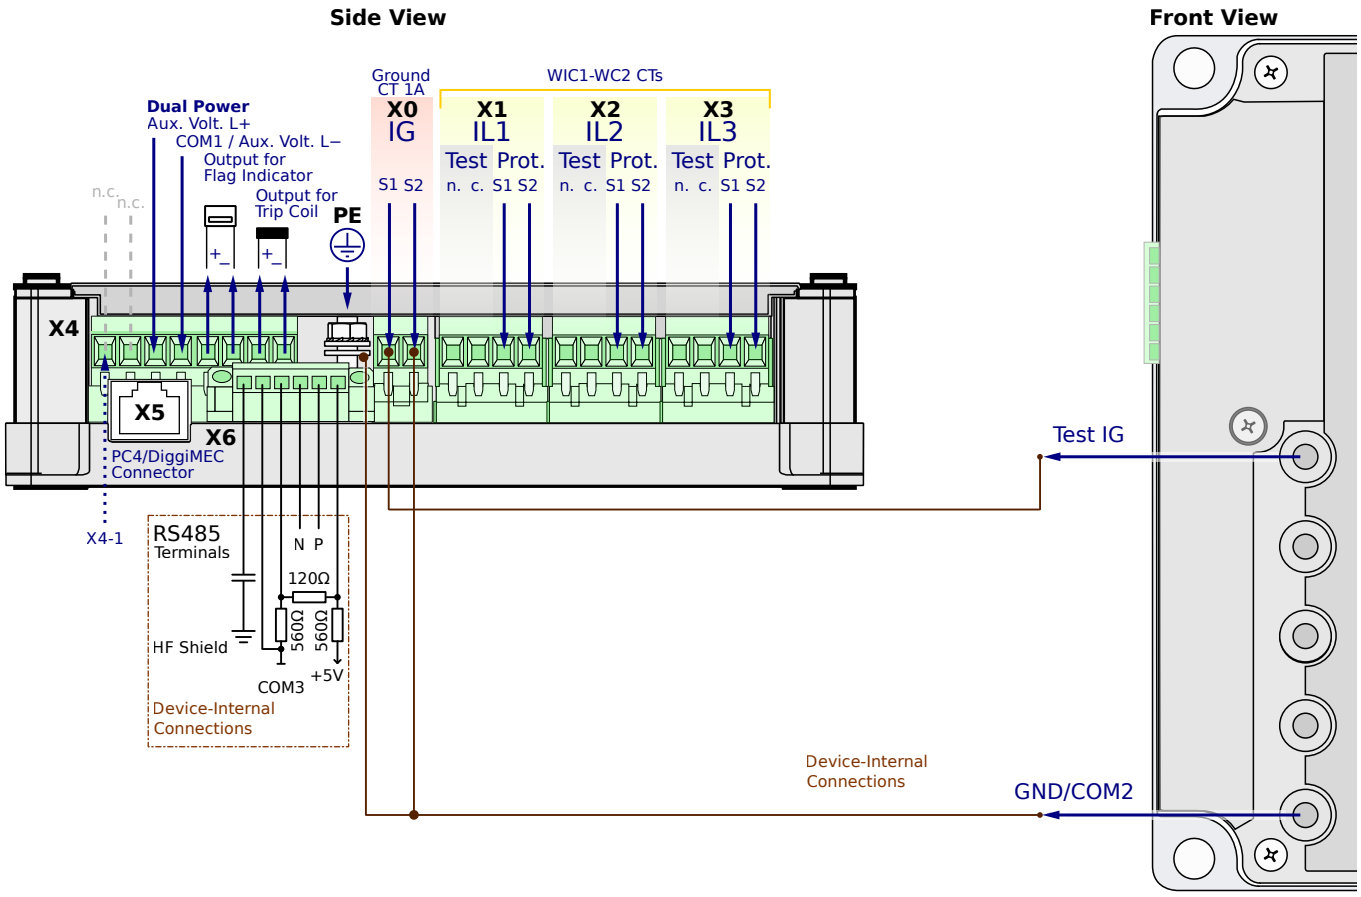


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FM2PC0

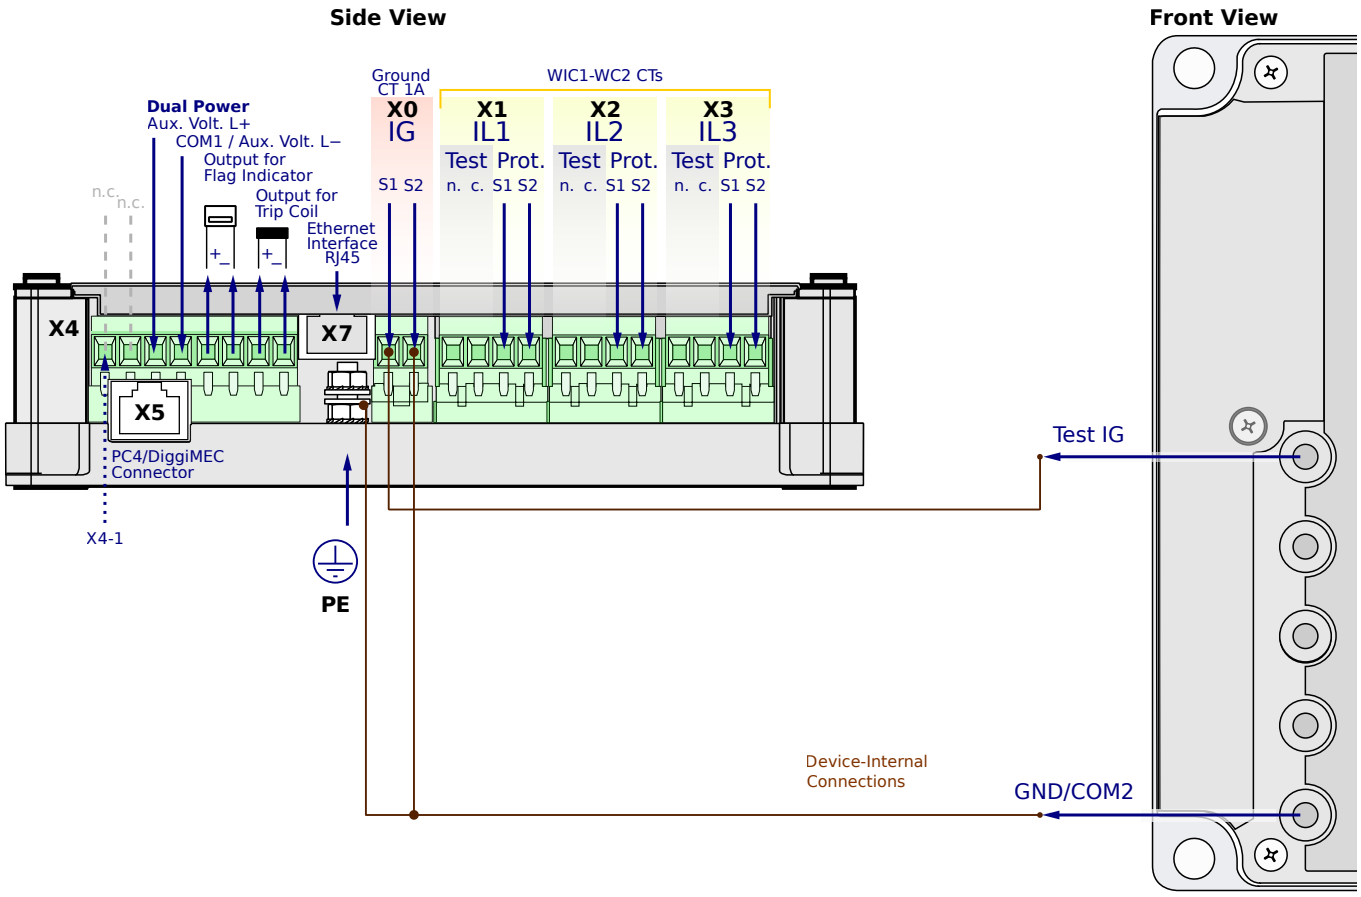


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2PCH

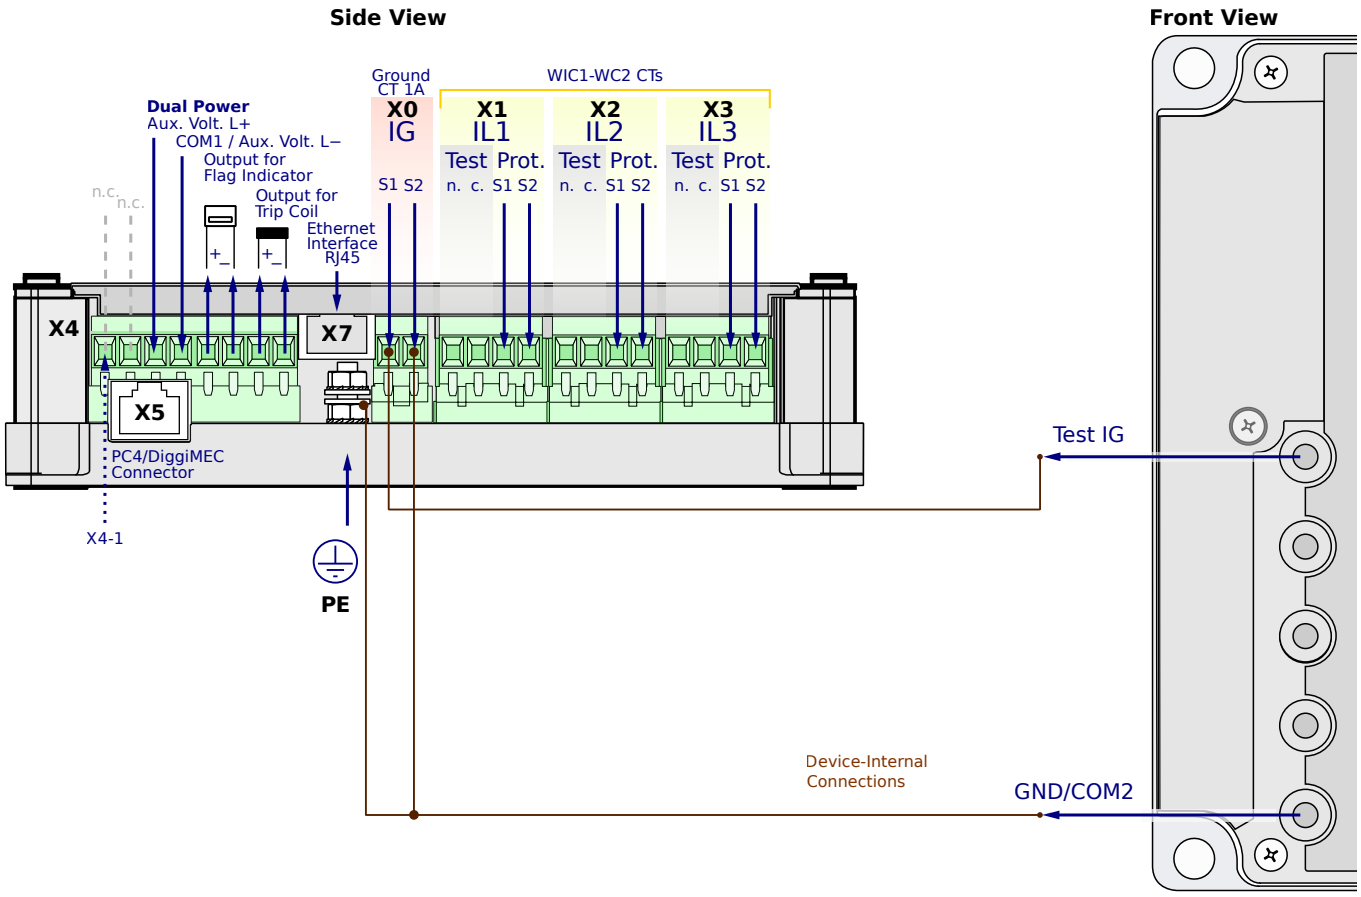


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FM2PL0

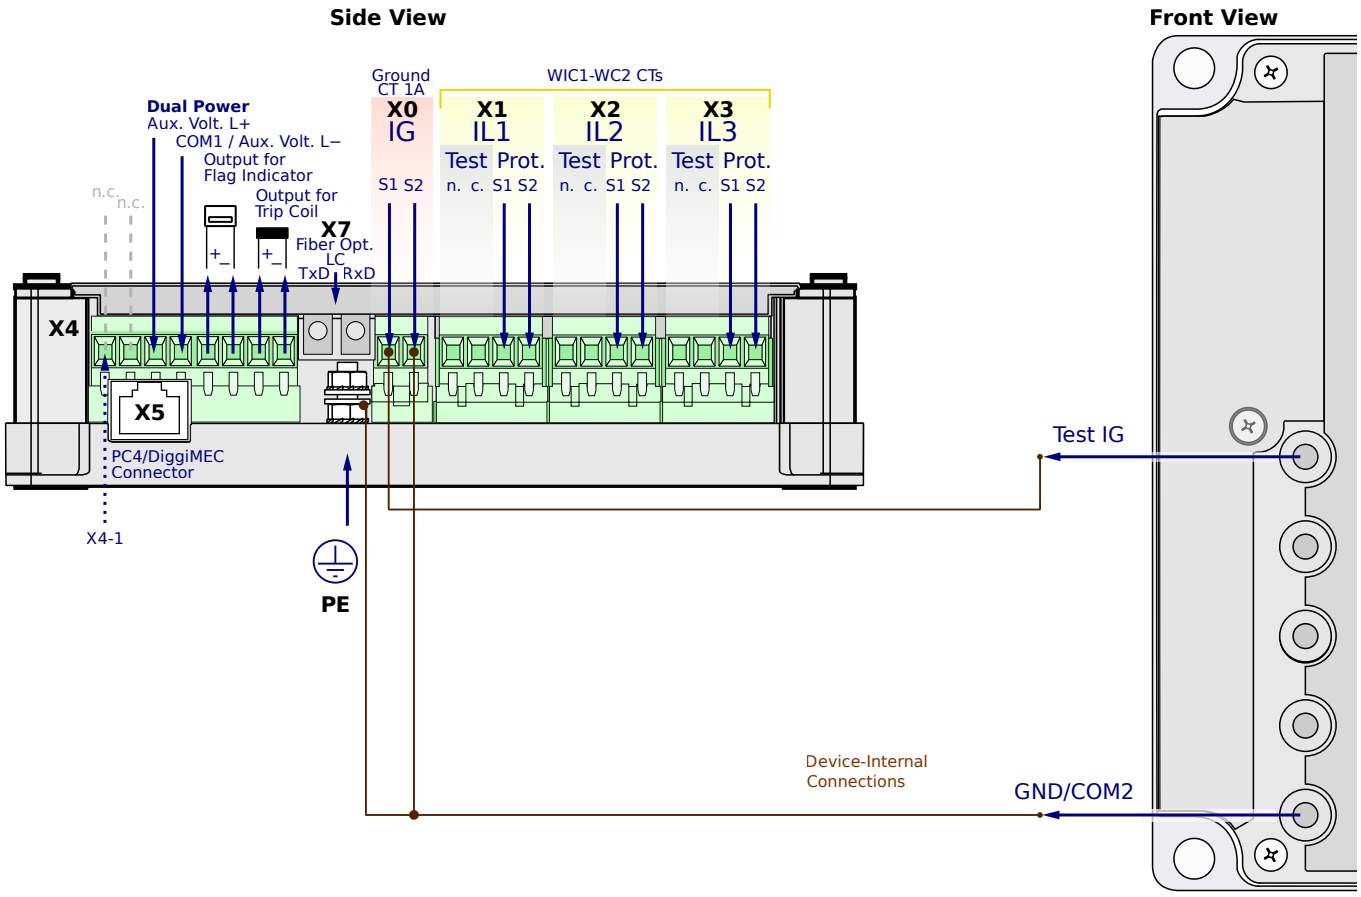


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FM2PLH

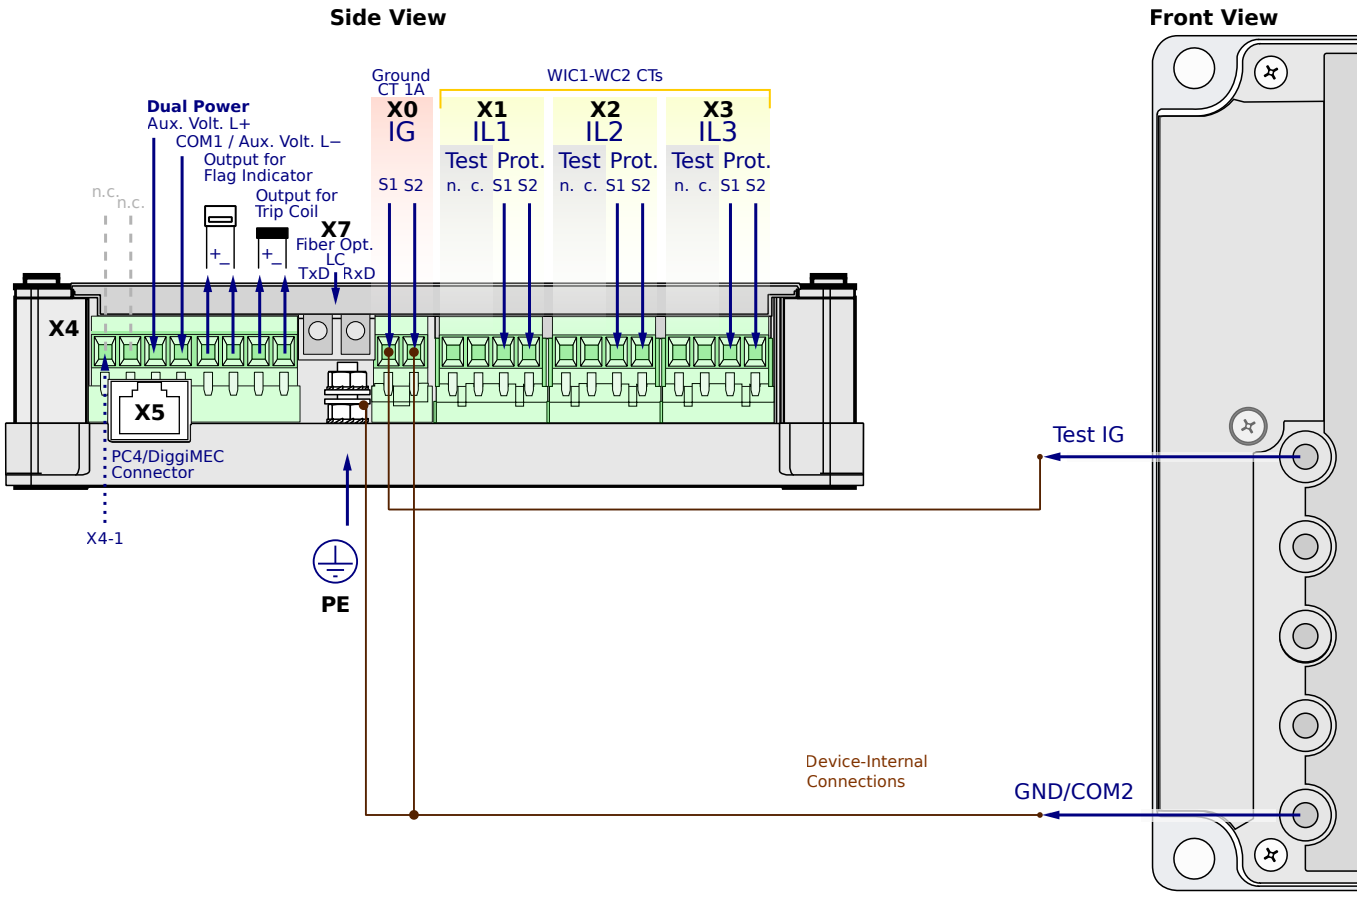


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1SA0

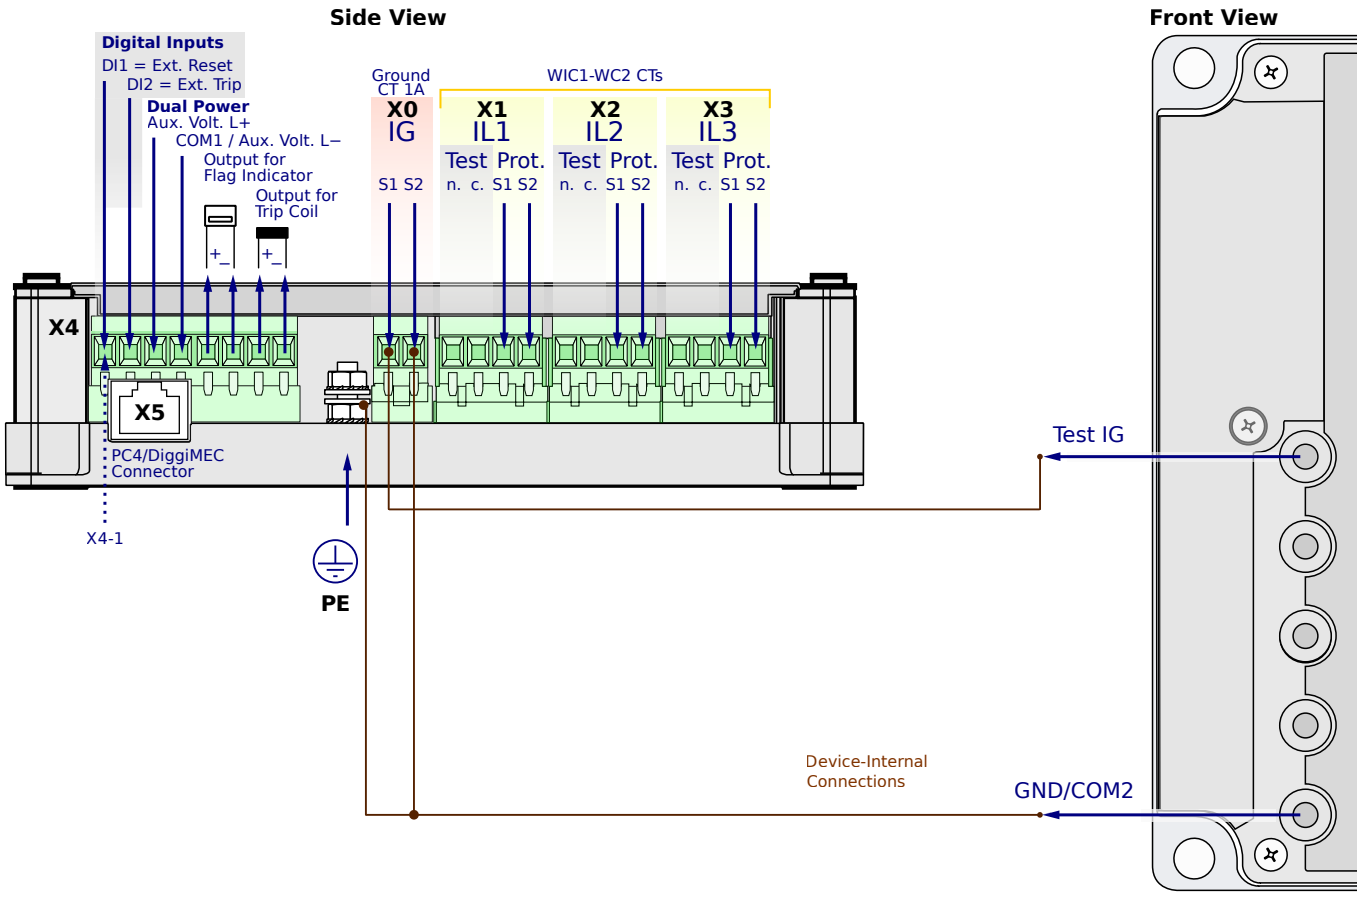


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1SAH

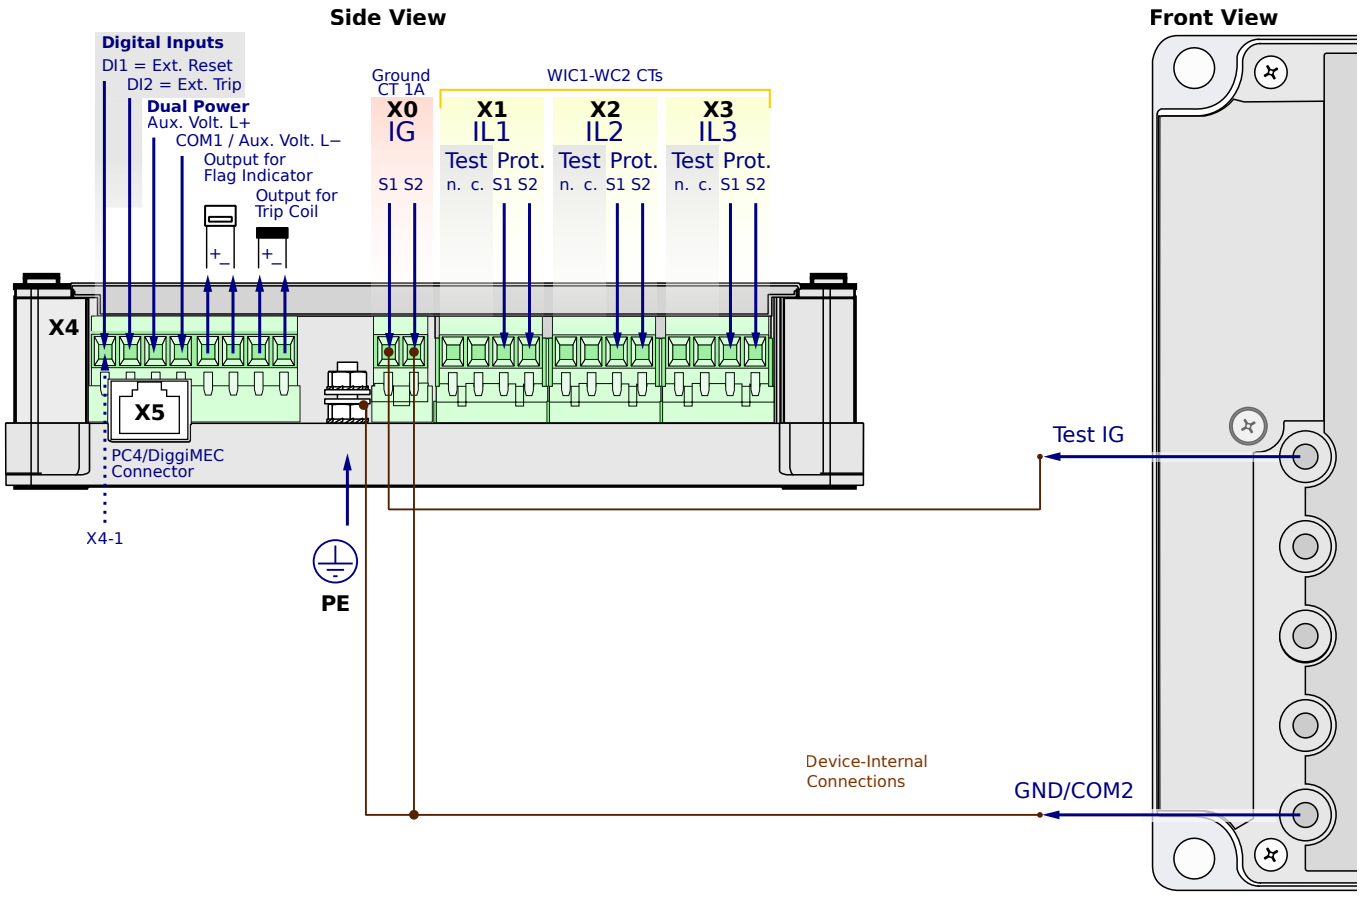


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1SB0

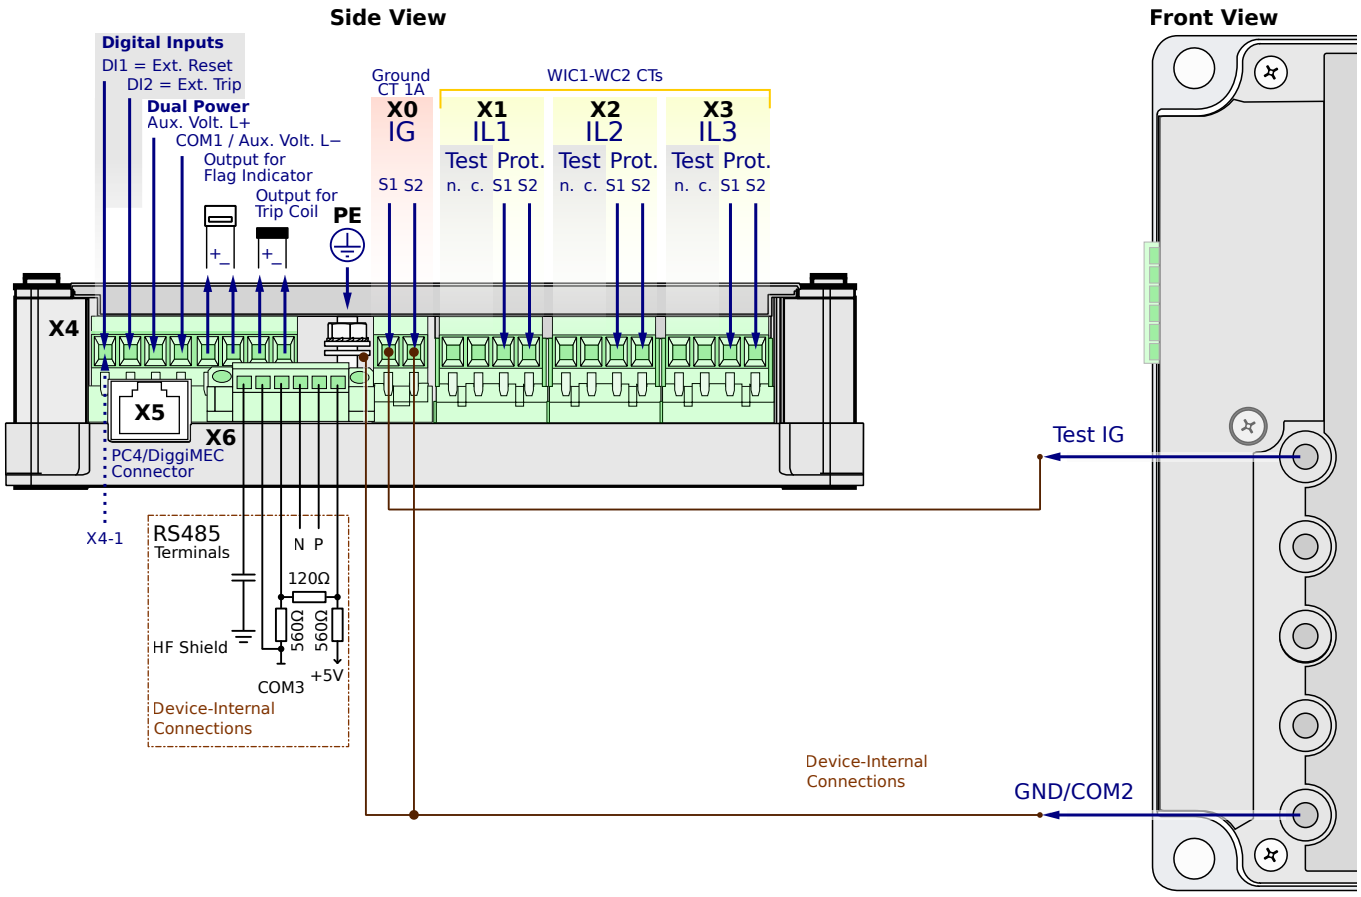


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1SBH

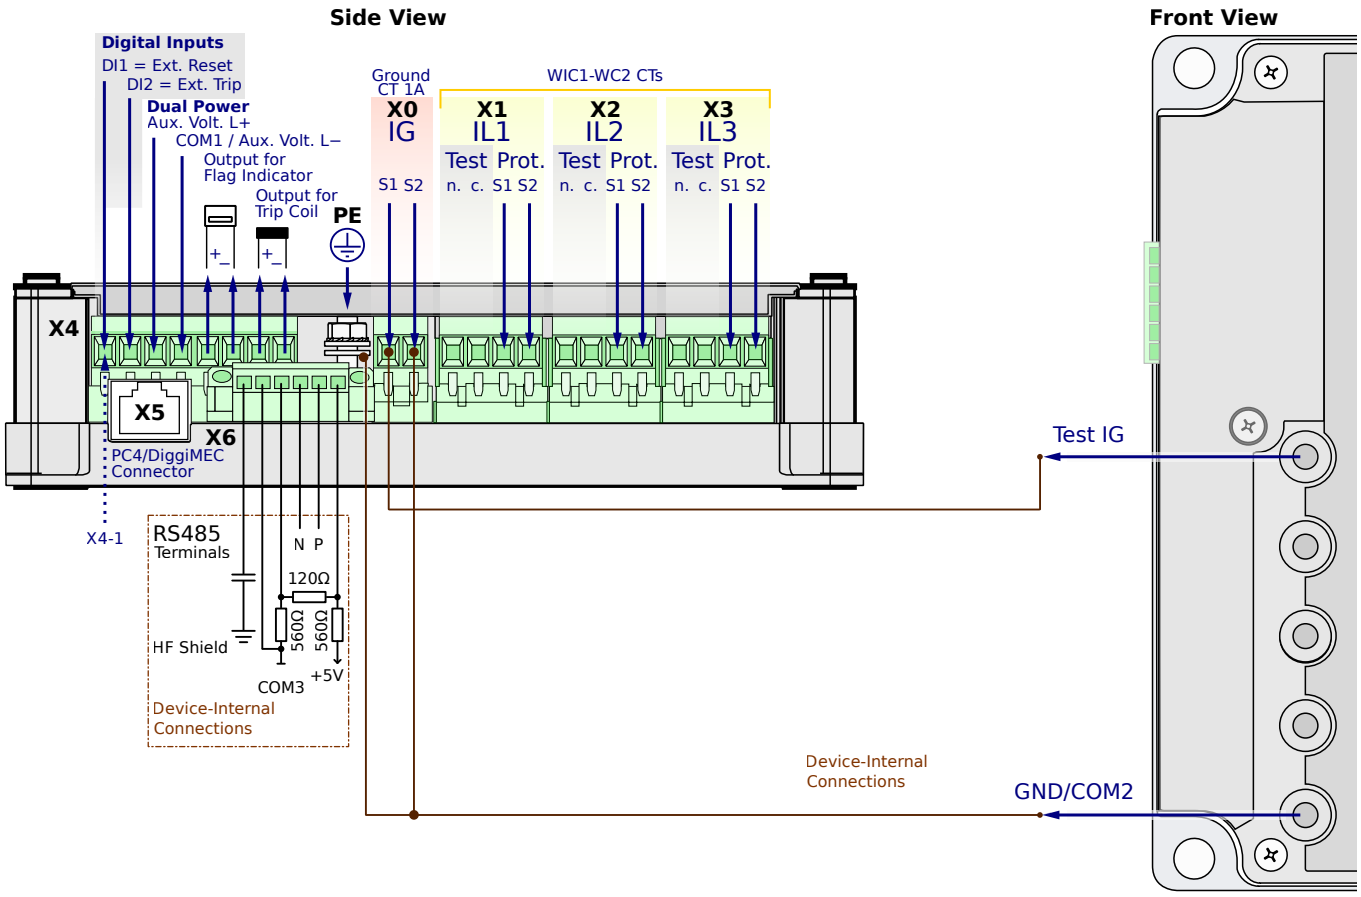


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1SC0

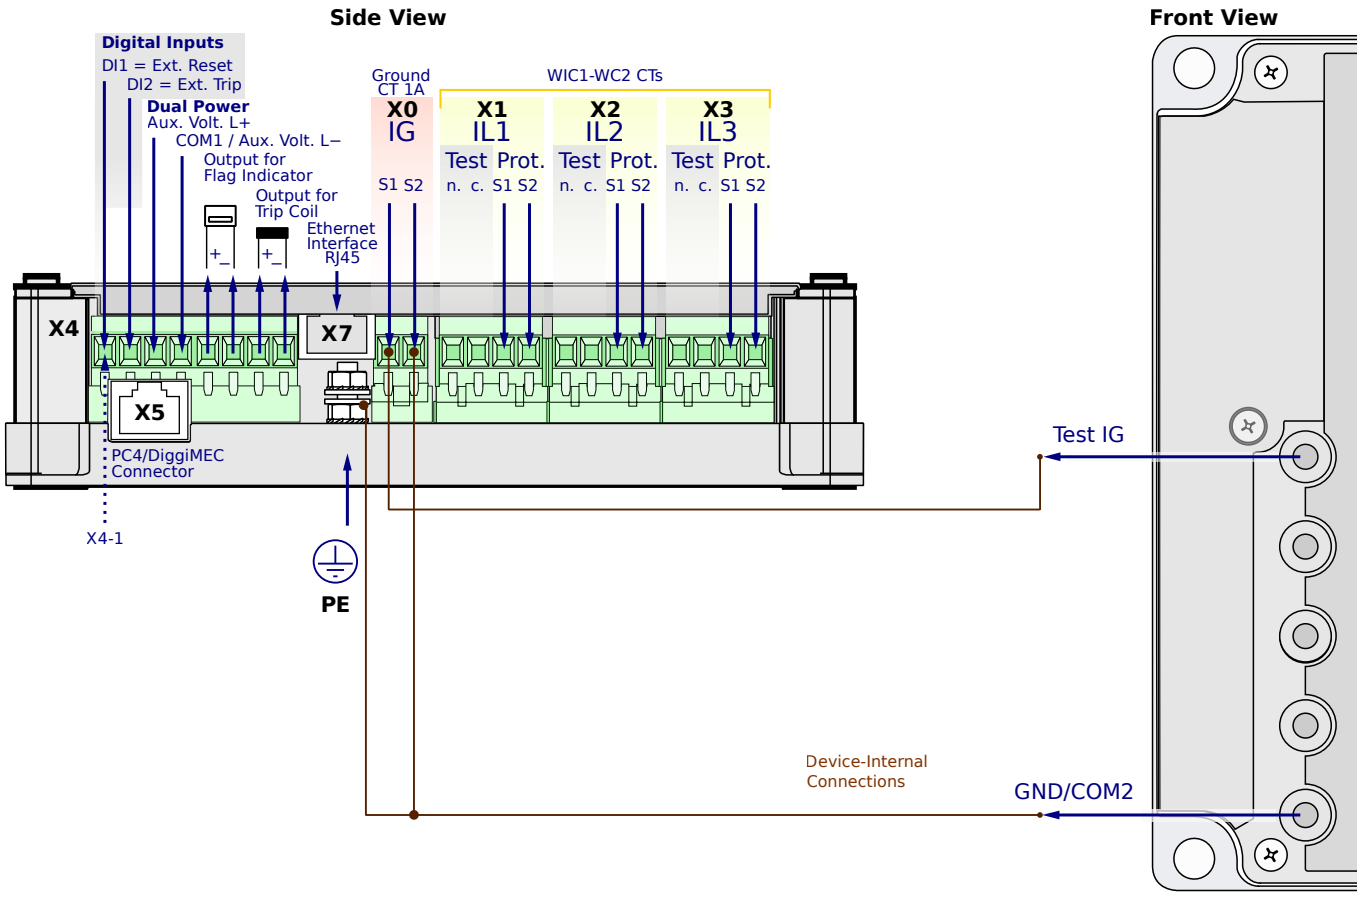


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1SCH

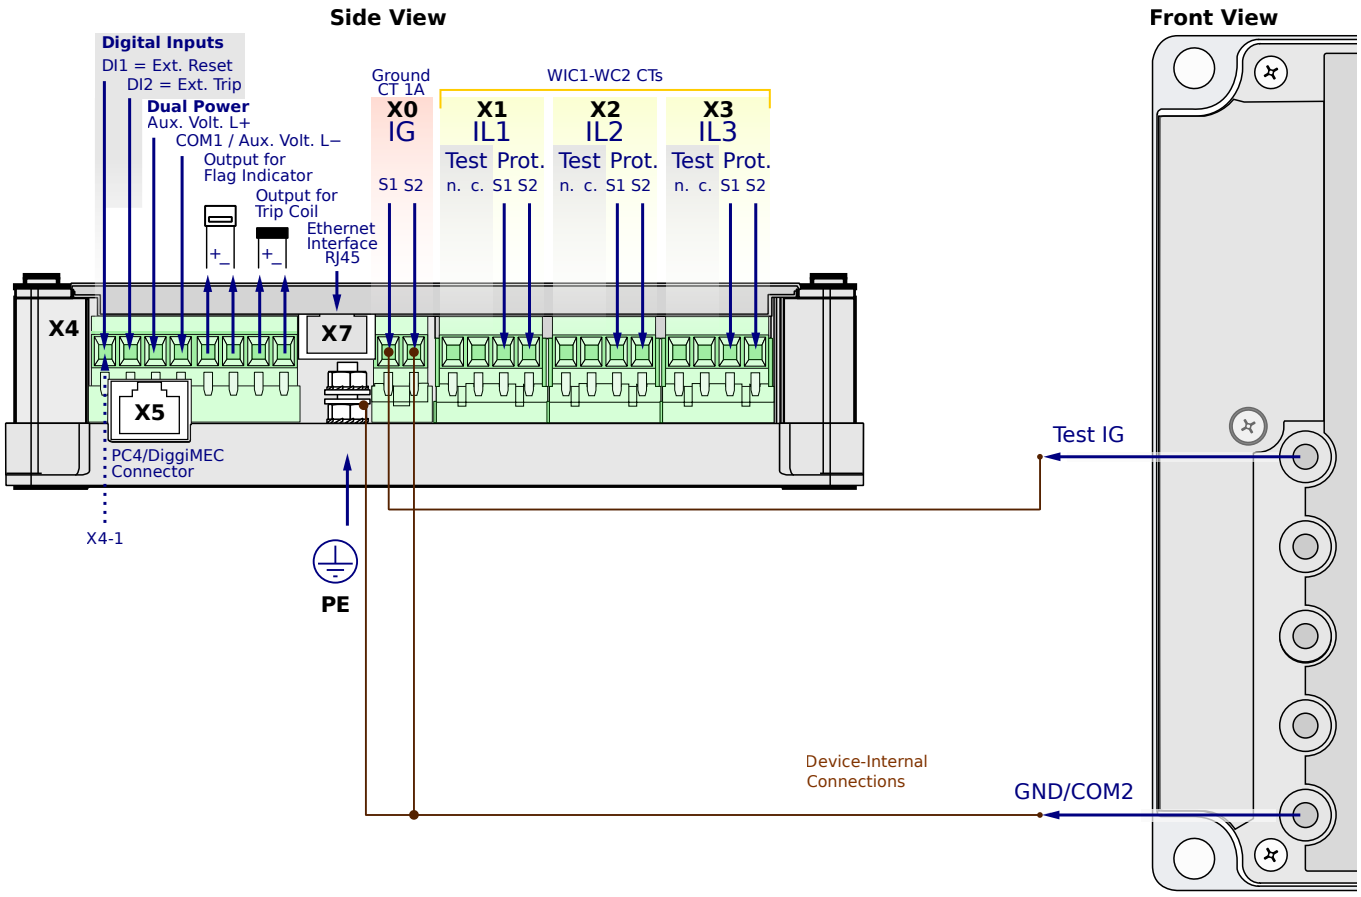


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1SL0

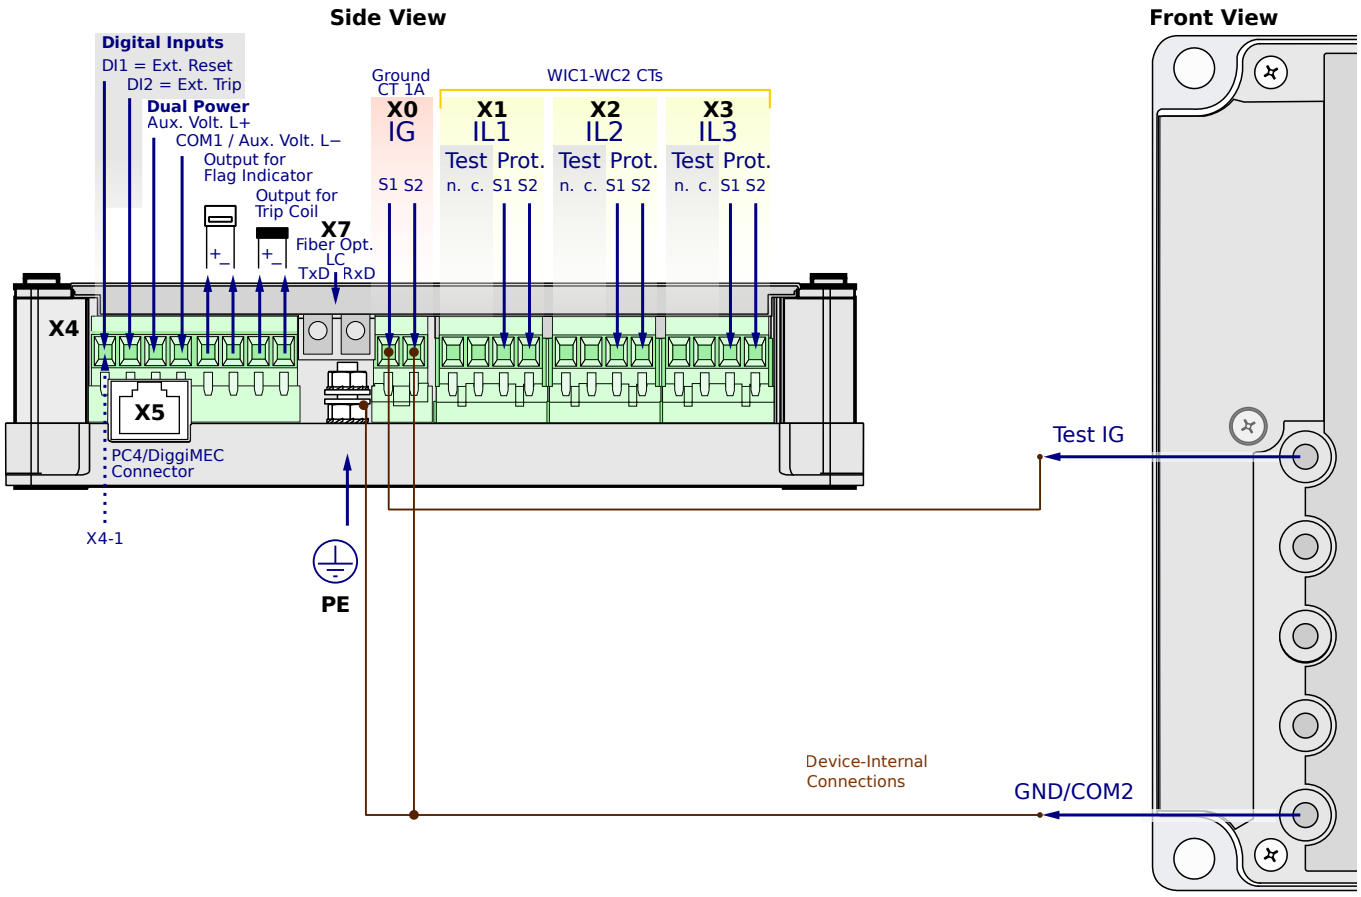


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1SLH

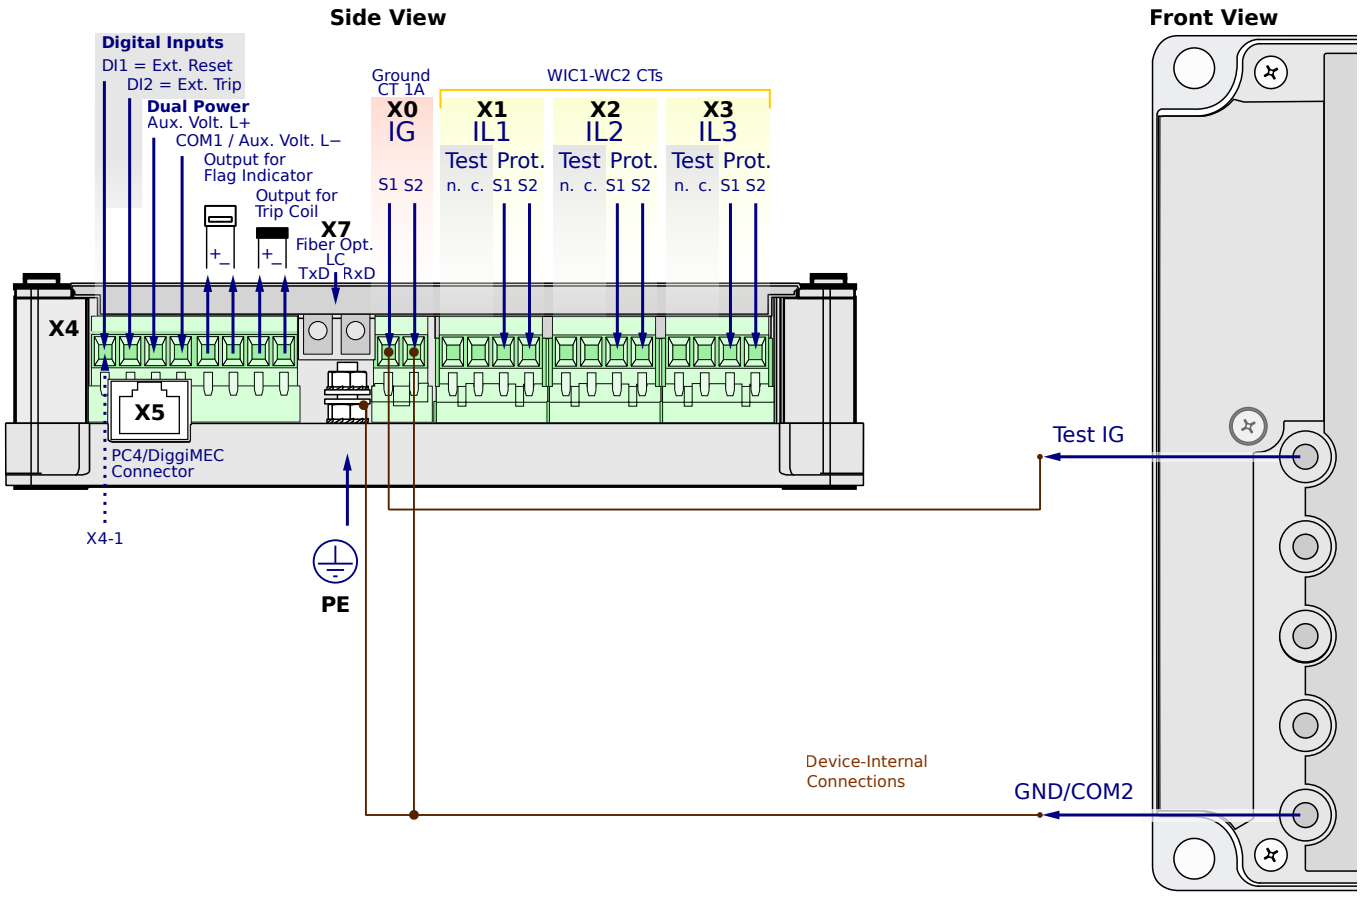


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1AA0

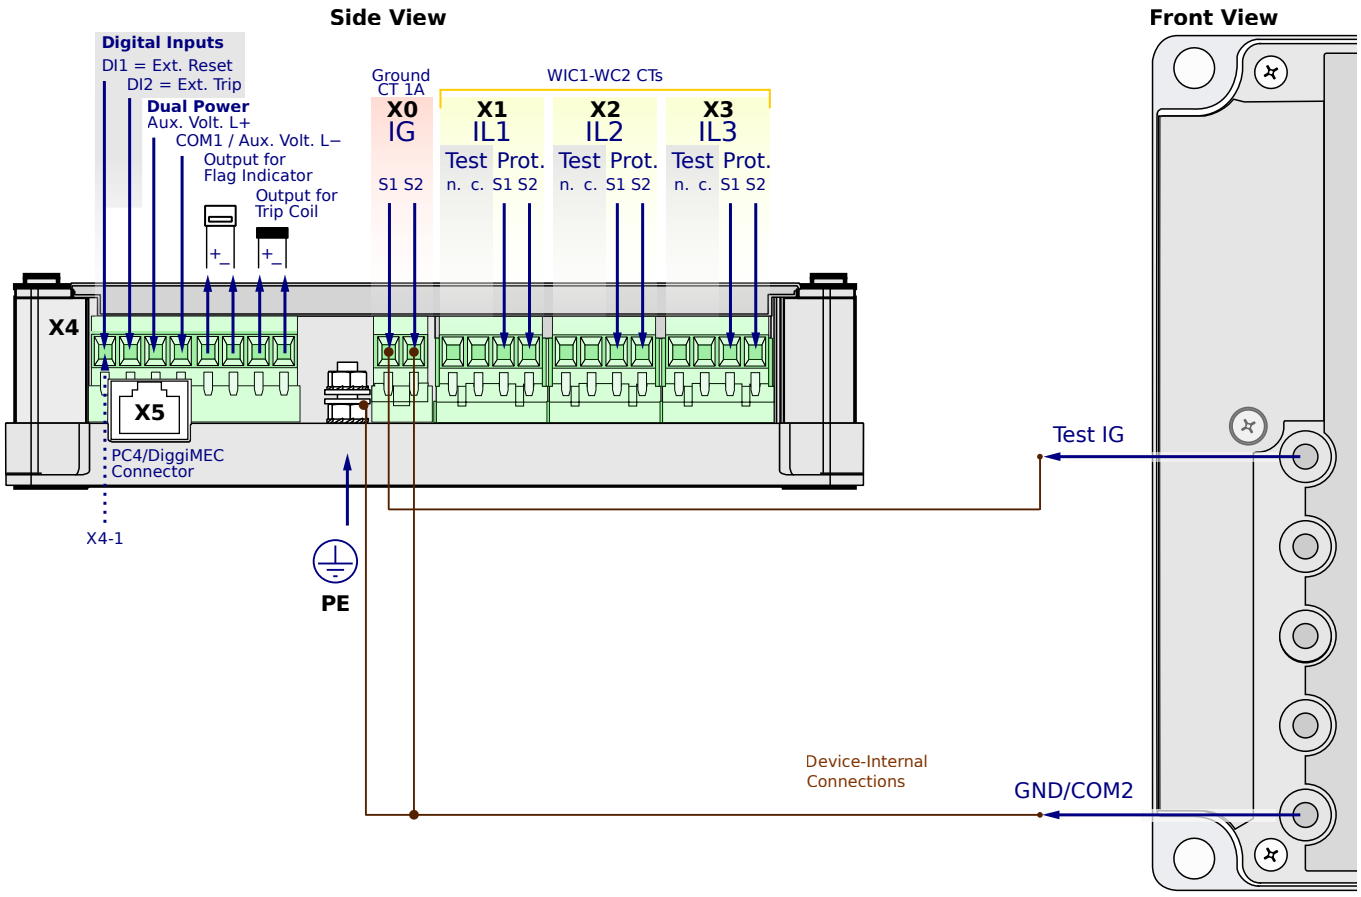


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1AAH

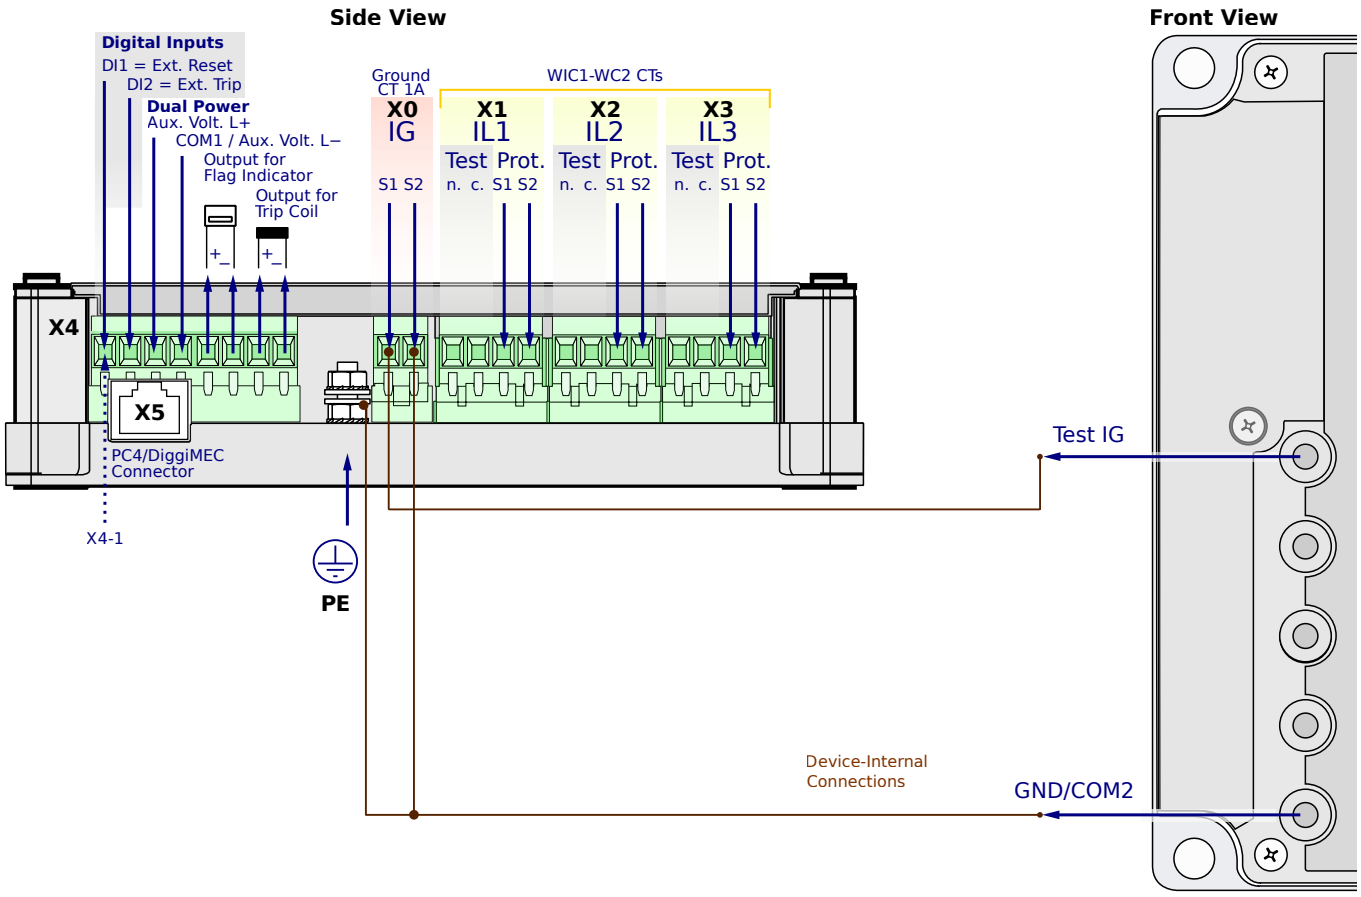


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1AB0

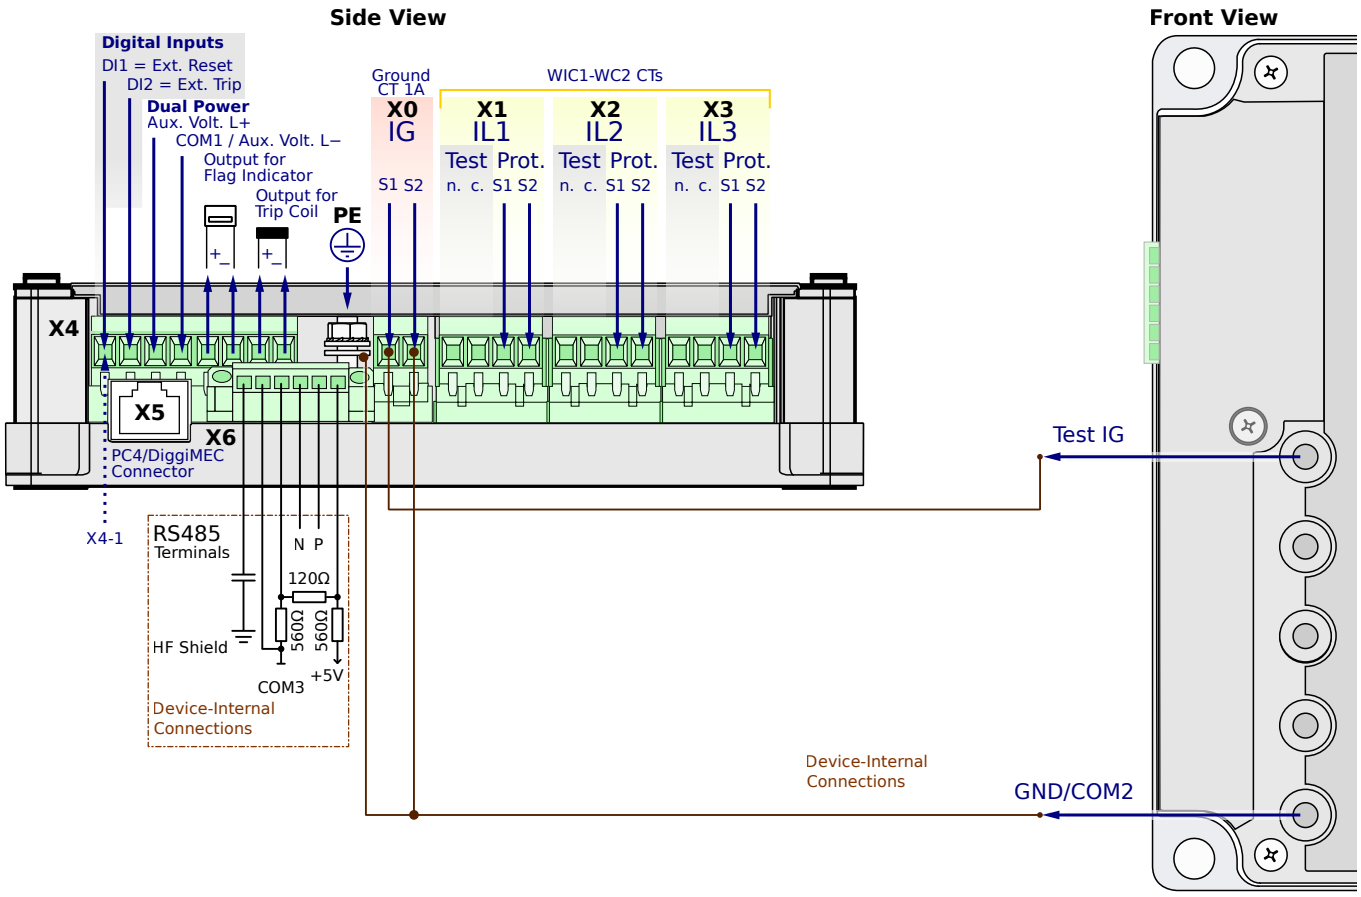


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1ABH

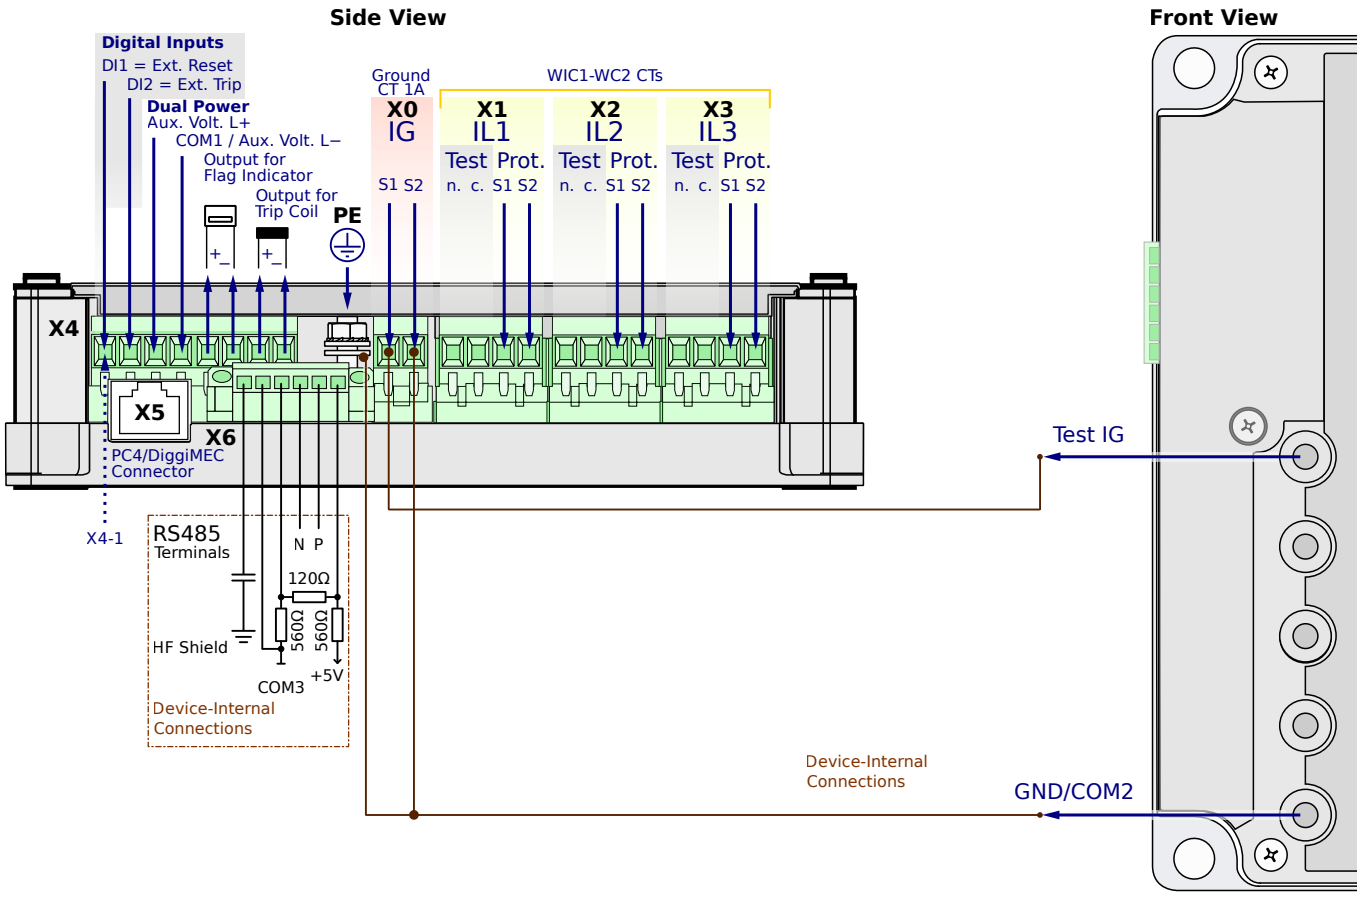


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1AC0

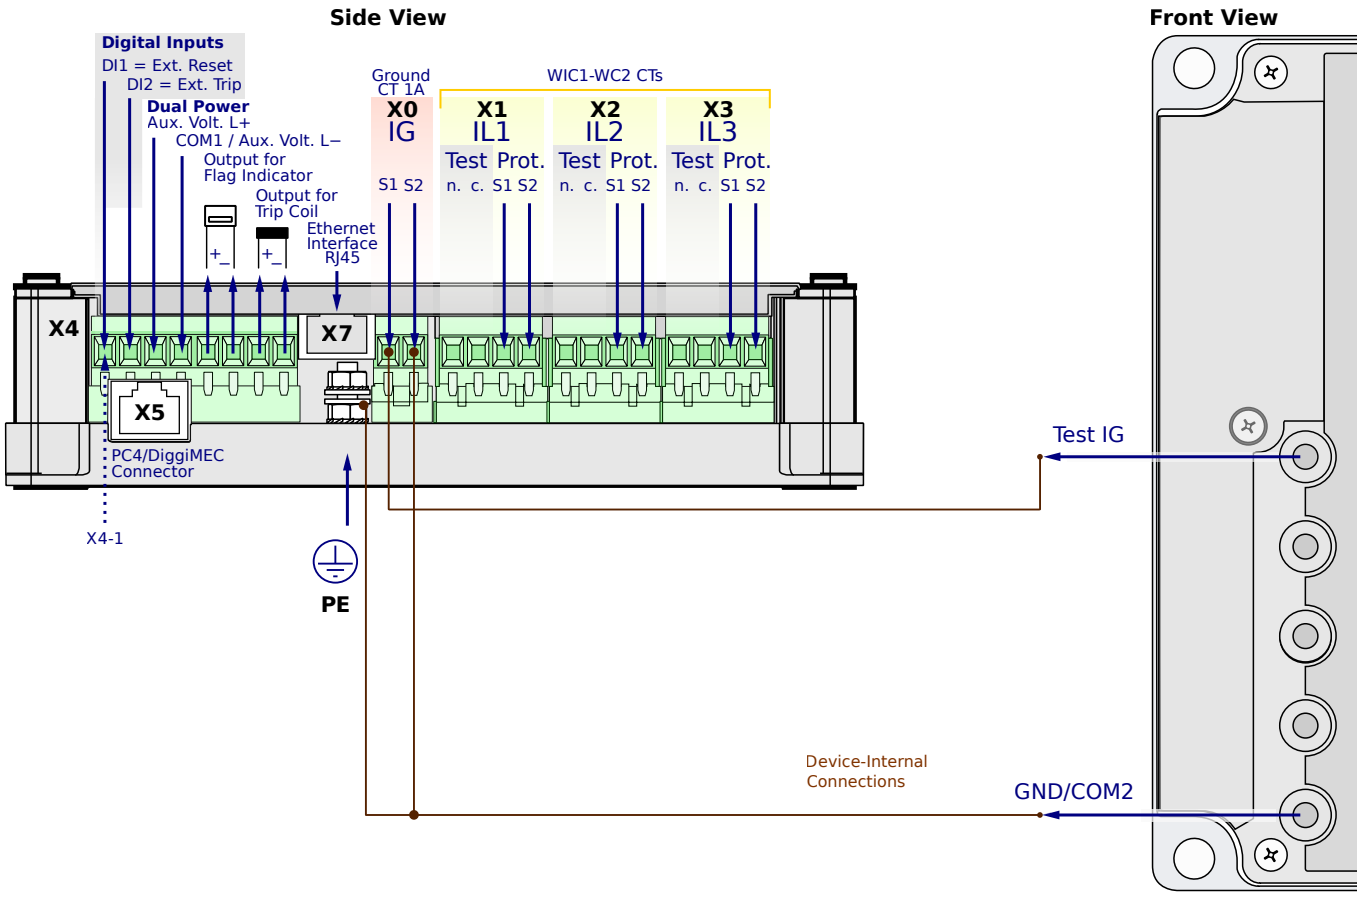


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1ACH

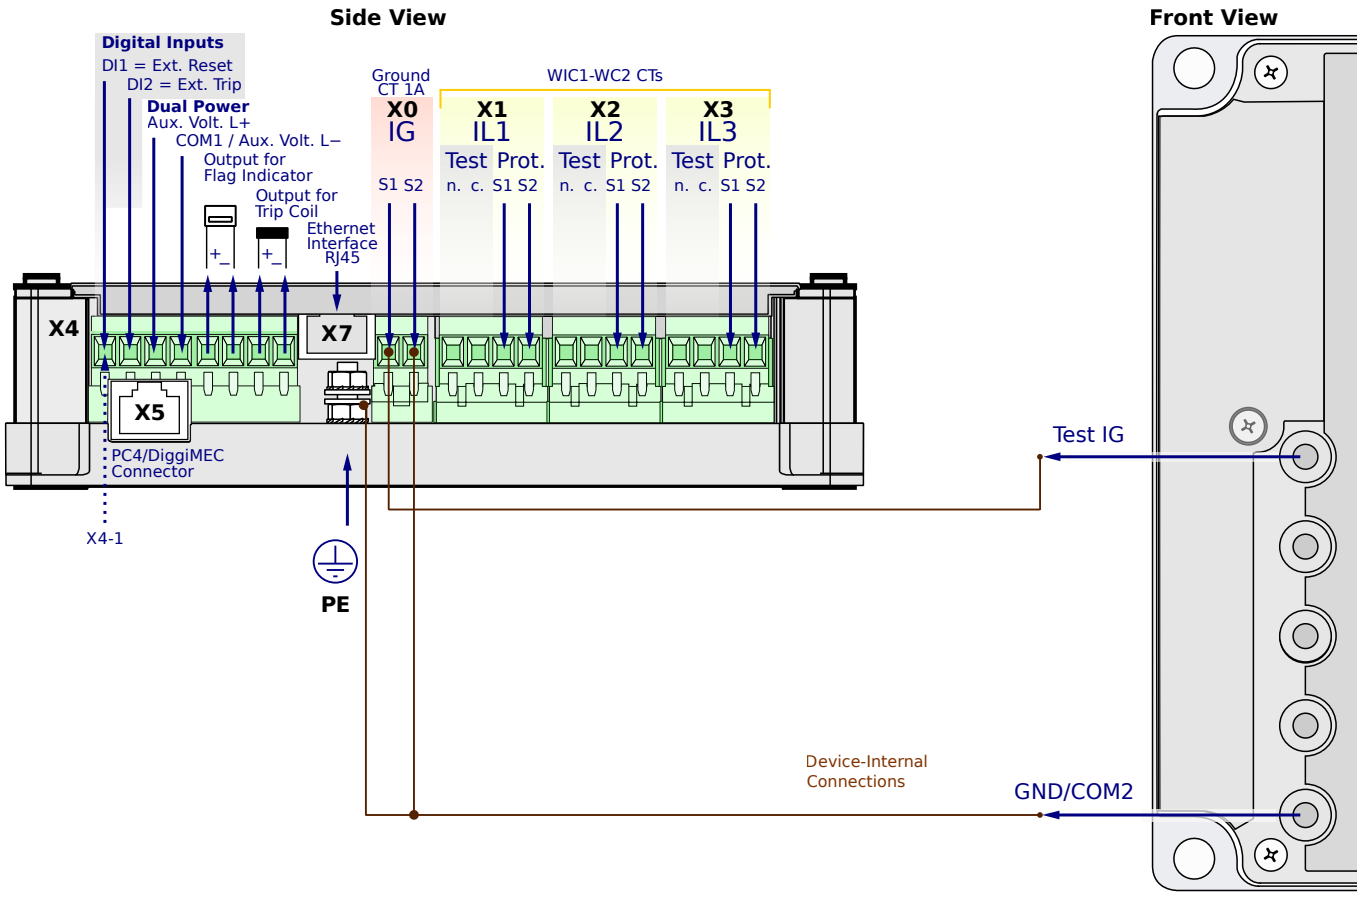


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1AL0

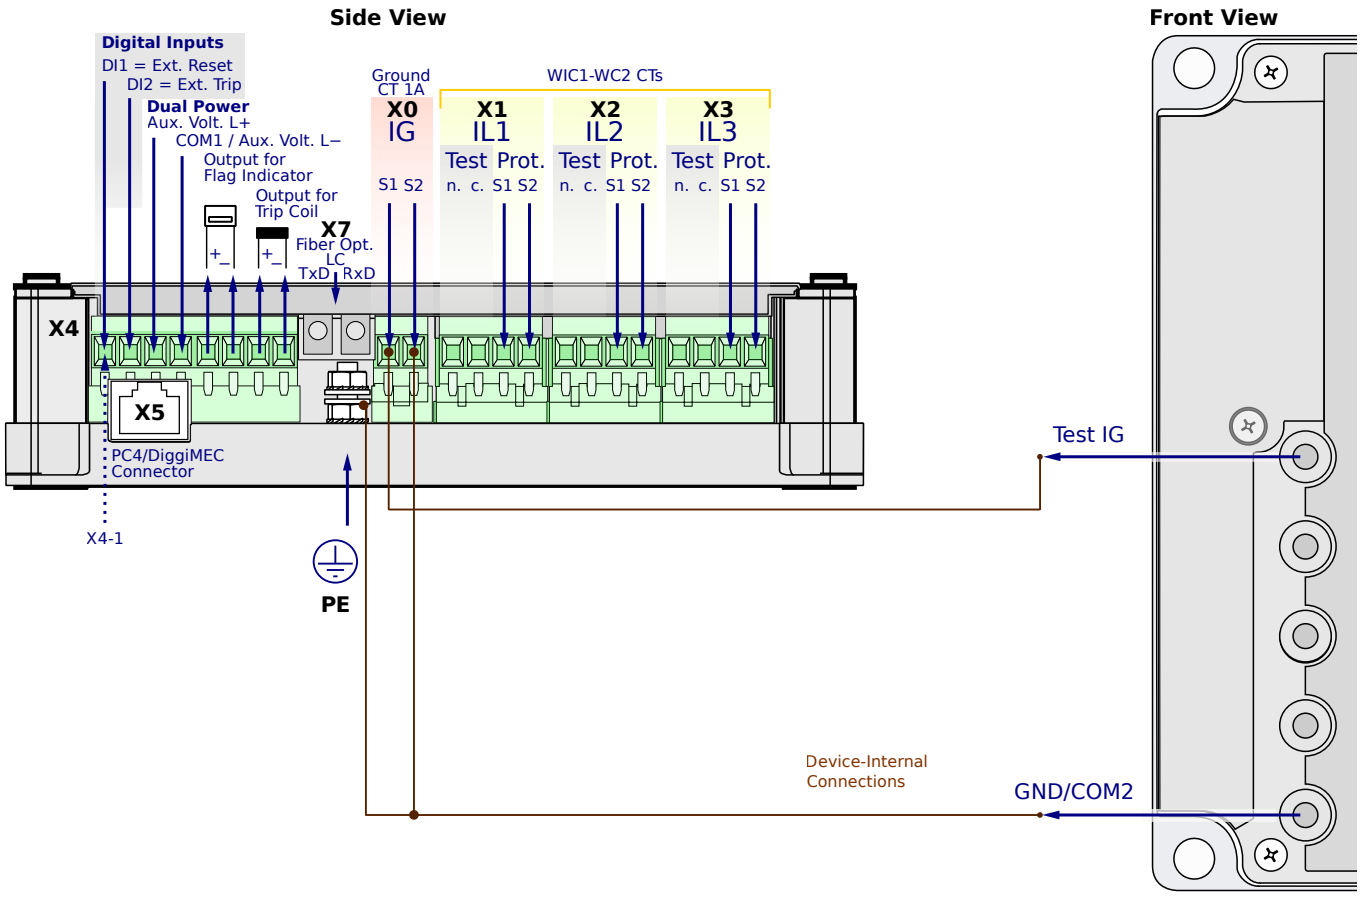


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1ALH

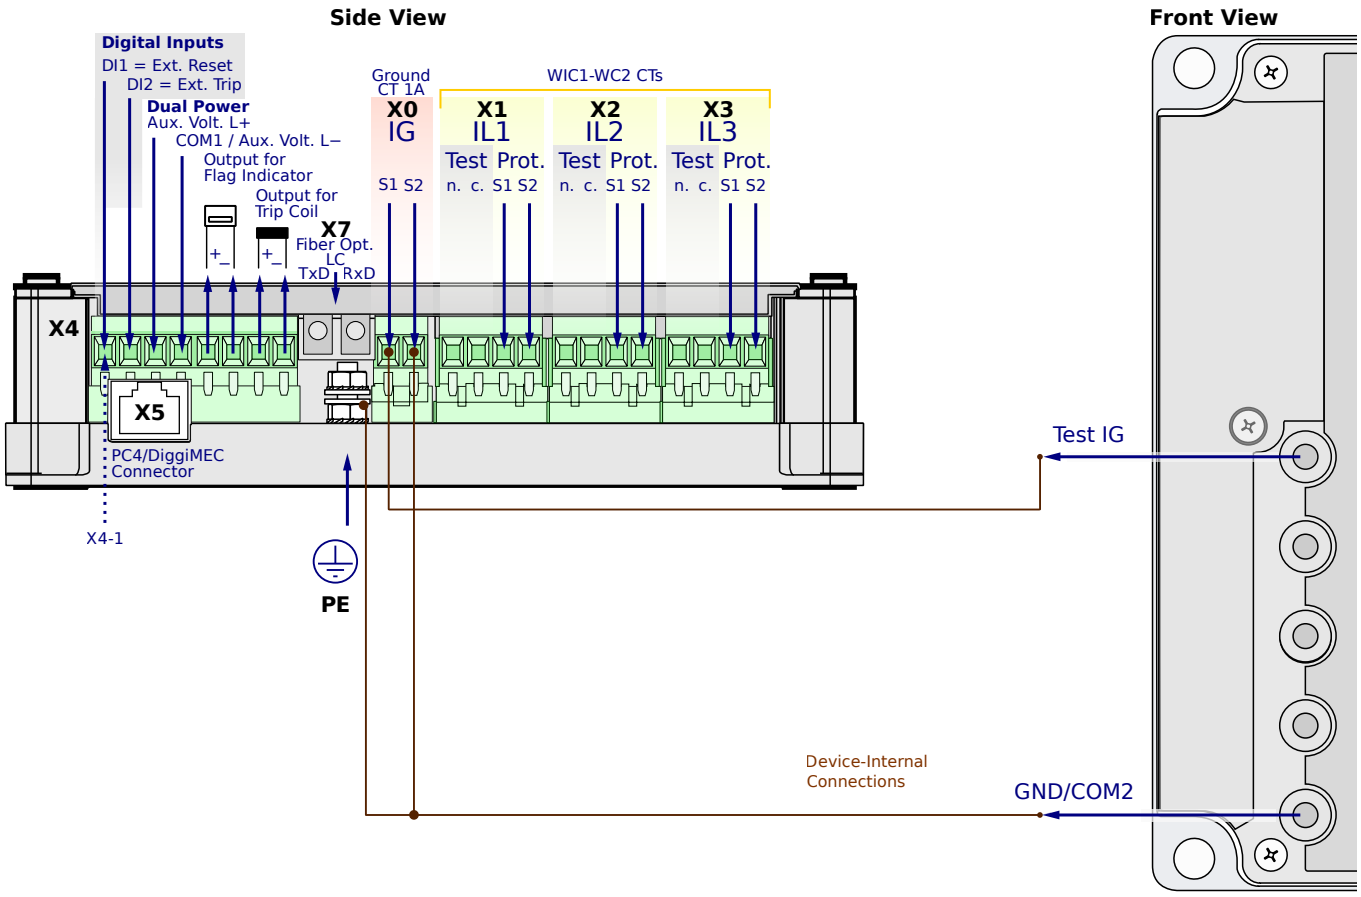


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1PA0

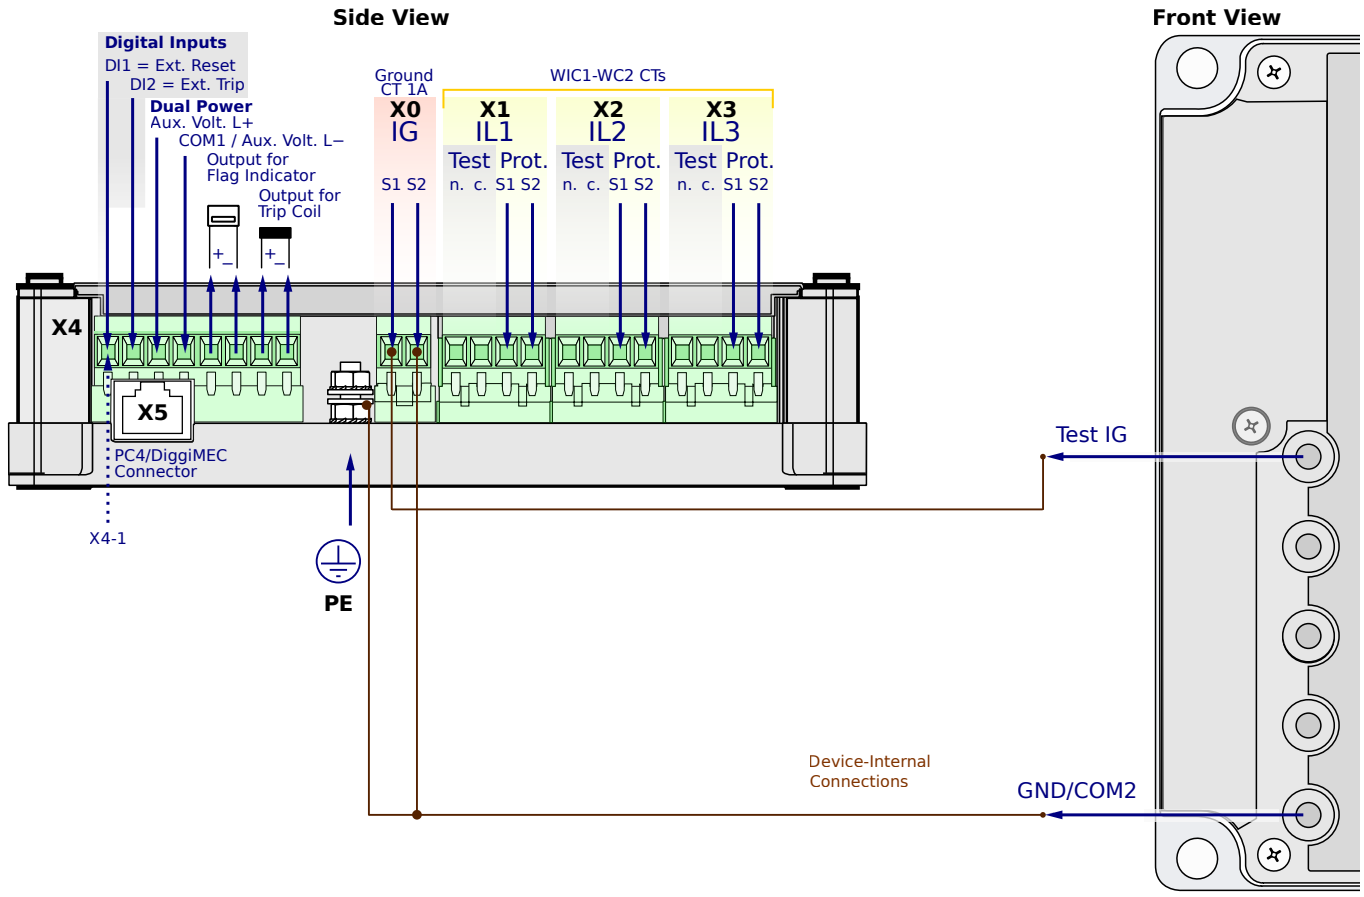


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1PAH

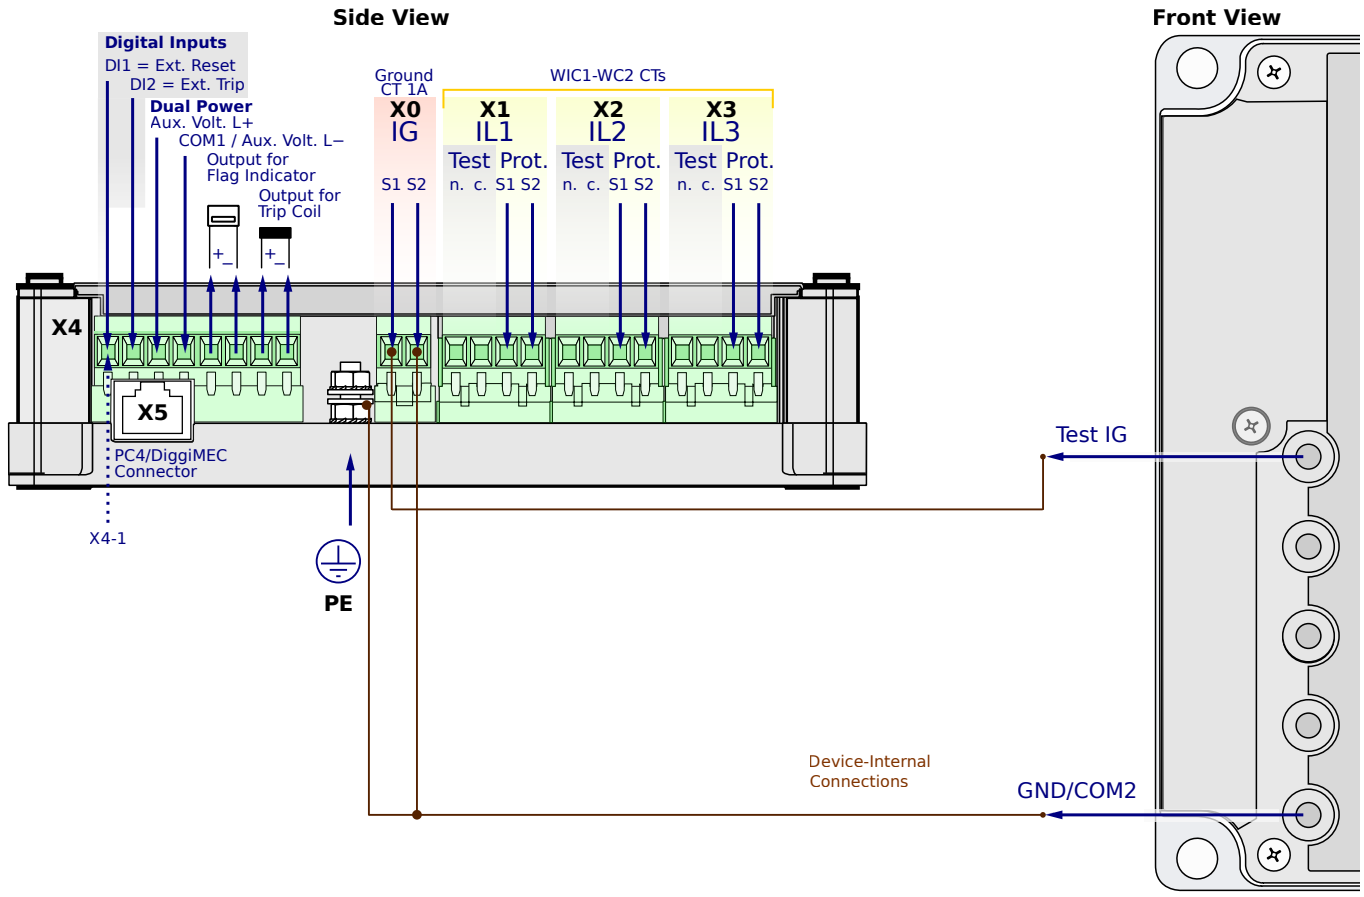


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG1PB0

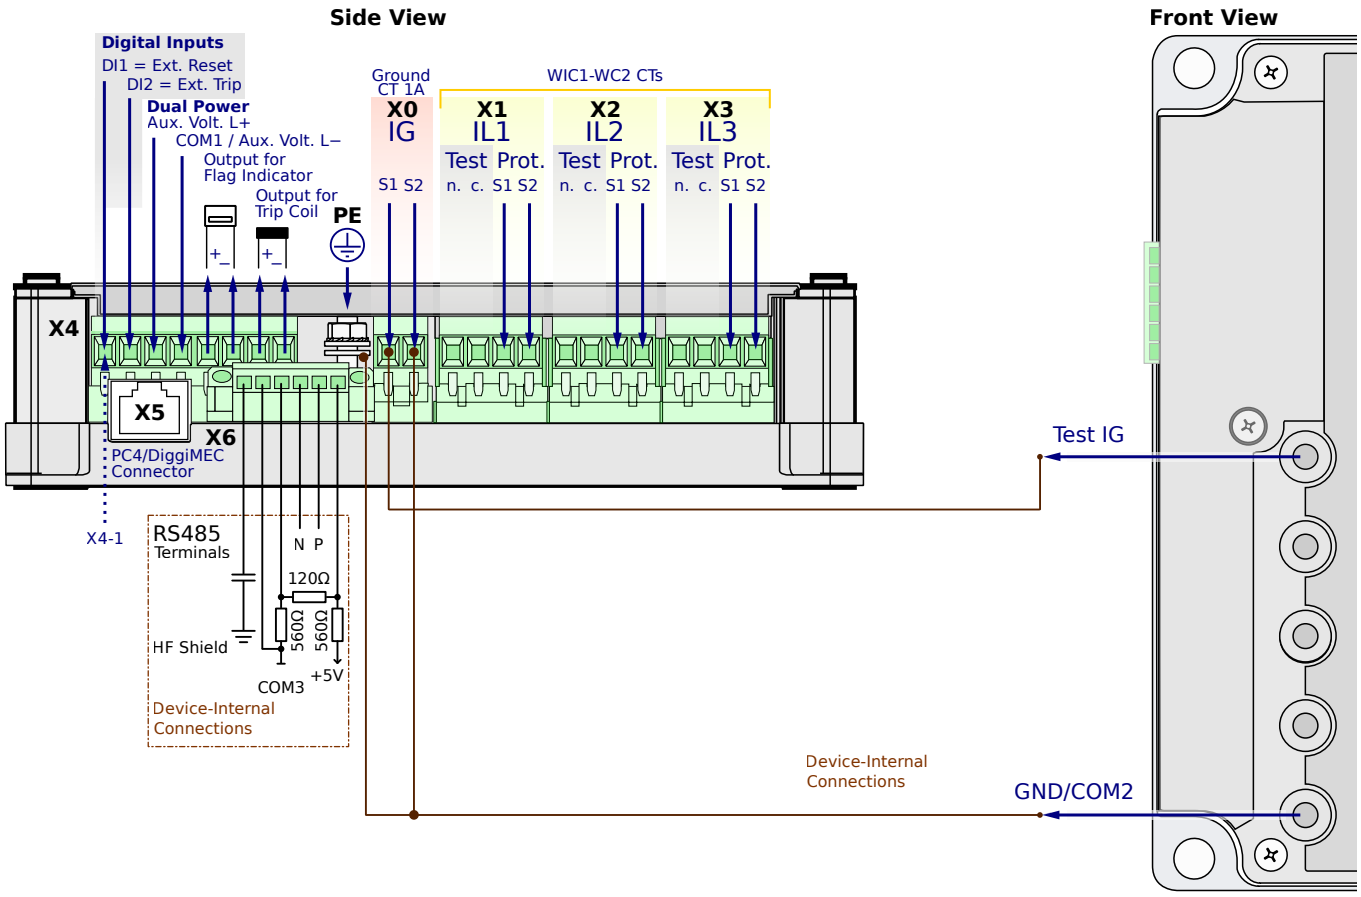


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1PBH

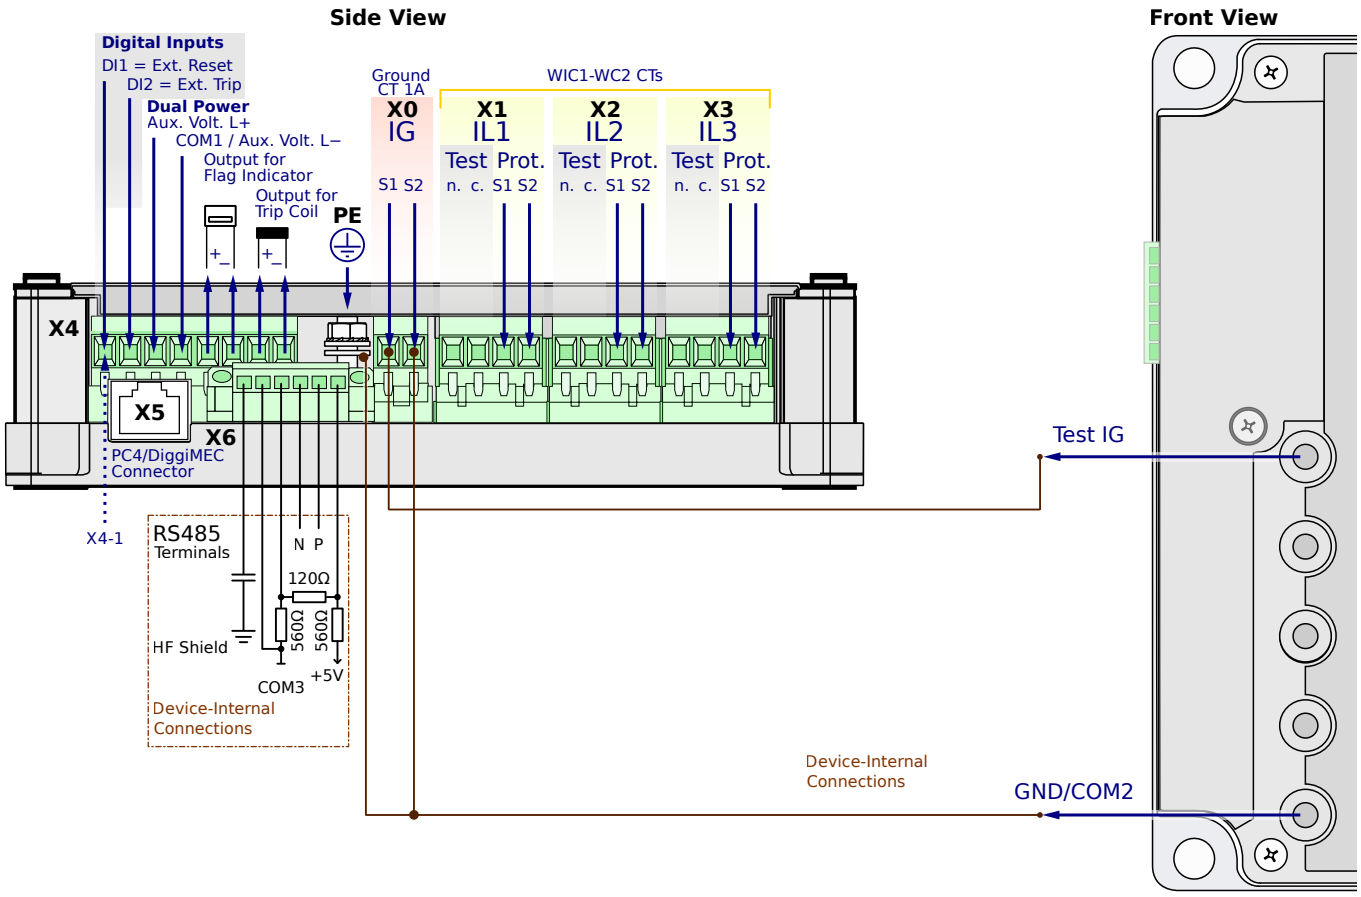


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG1PC0

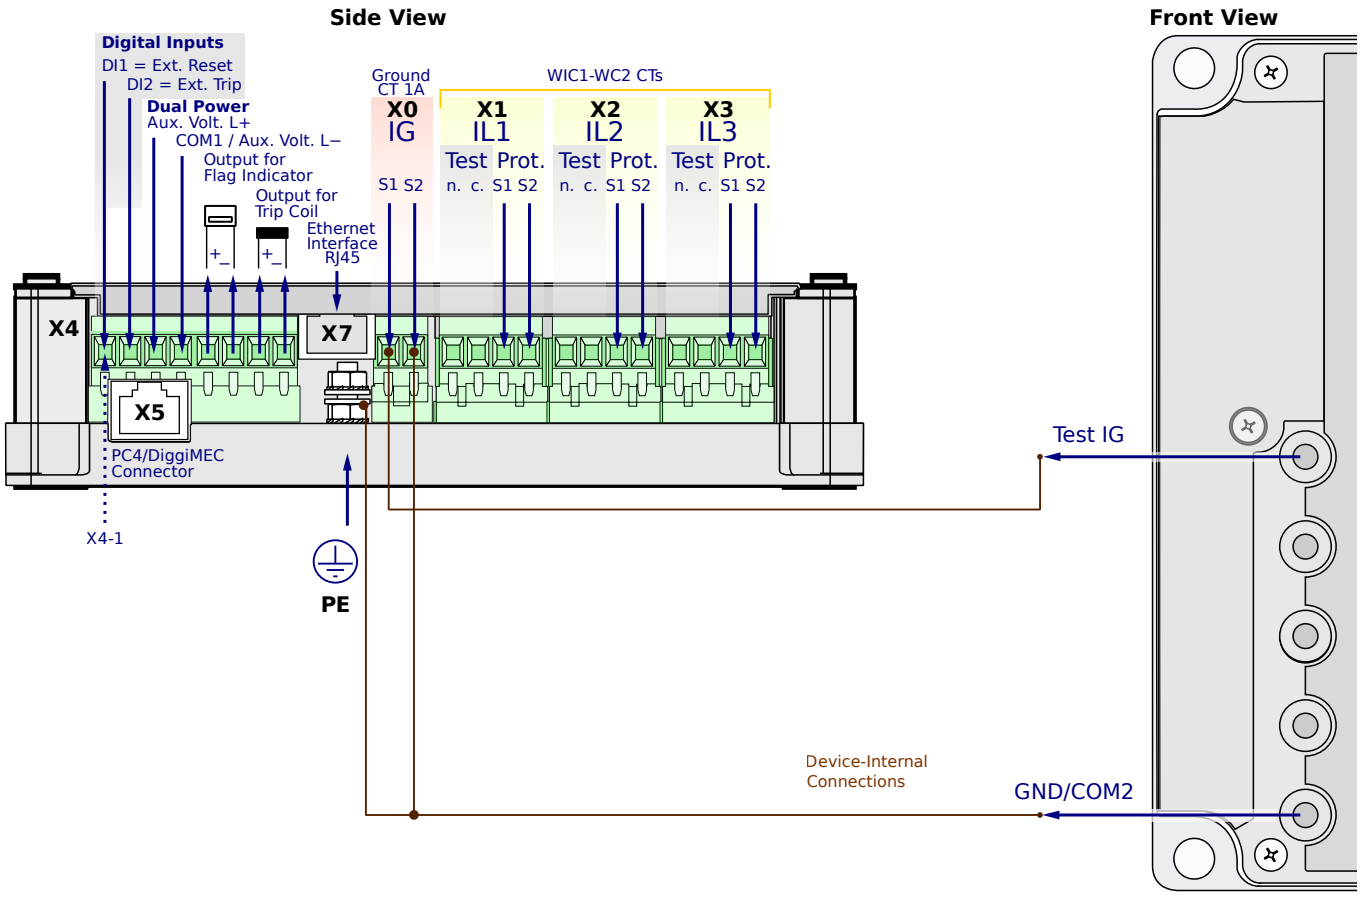


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1PCH

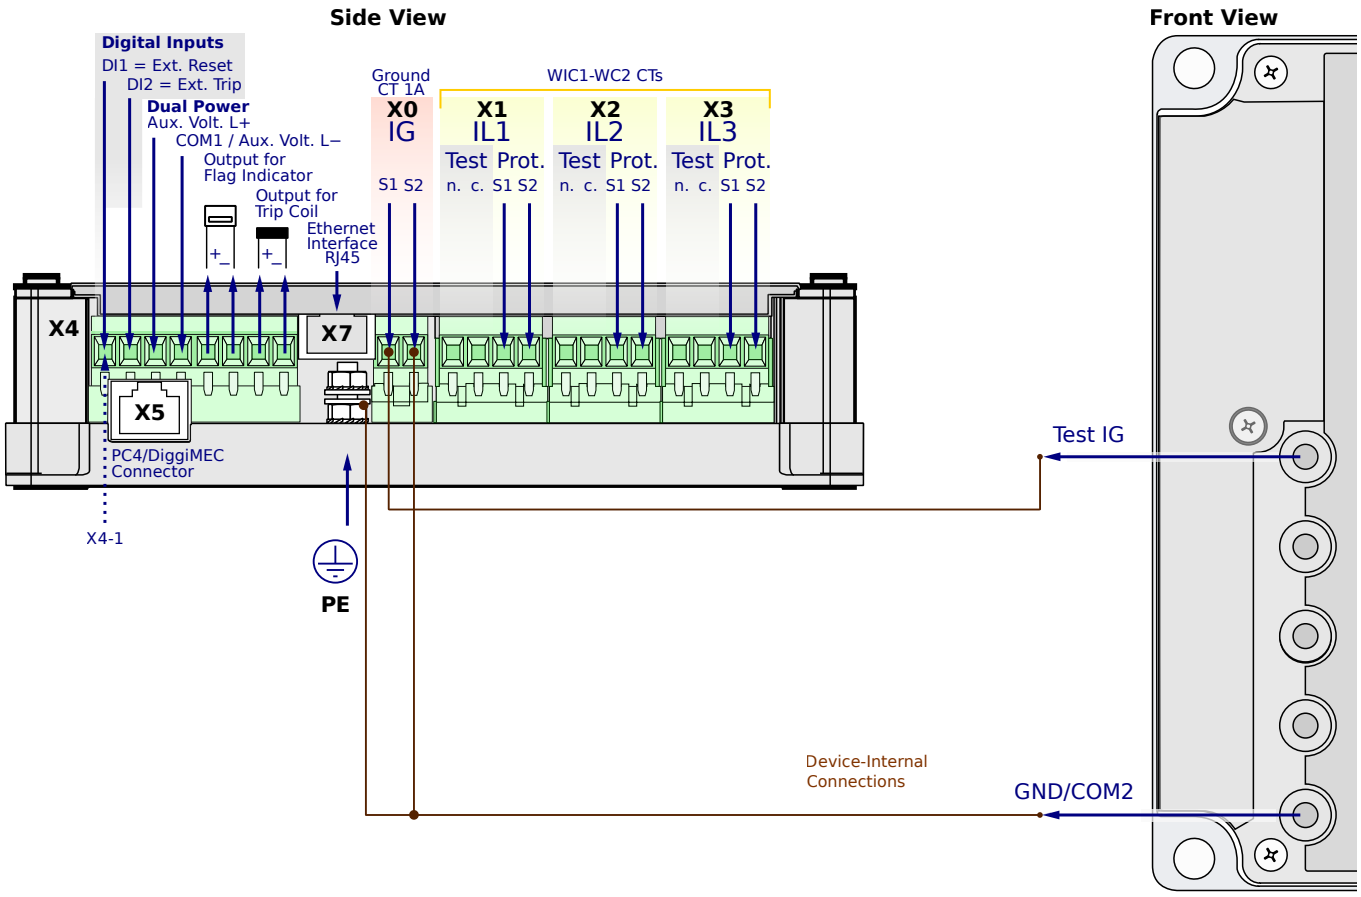


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG1PL0

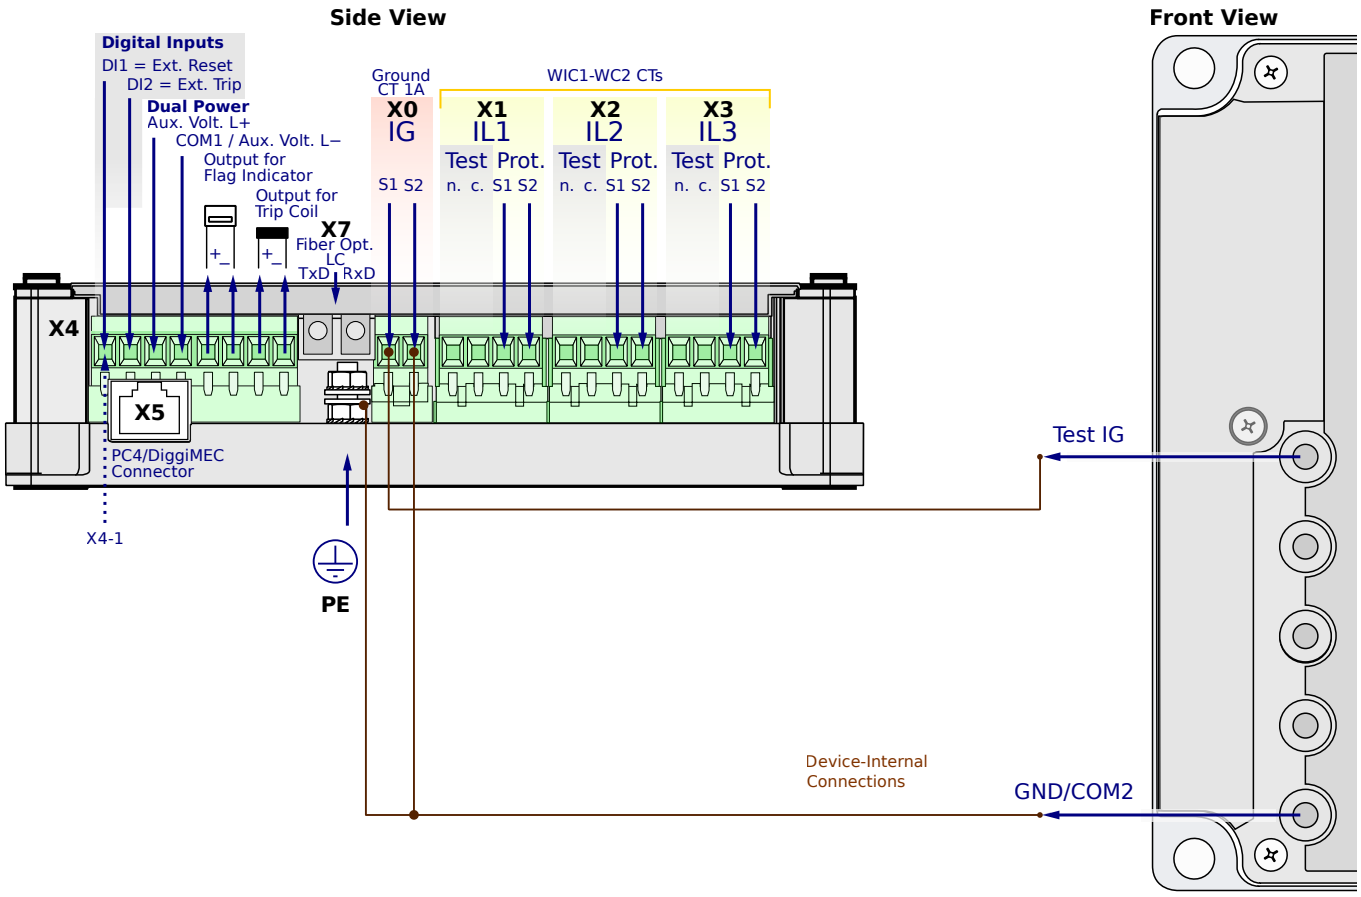


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG1PLH

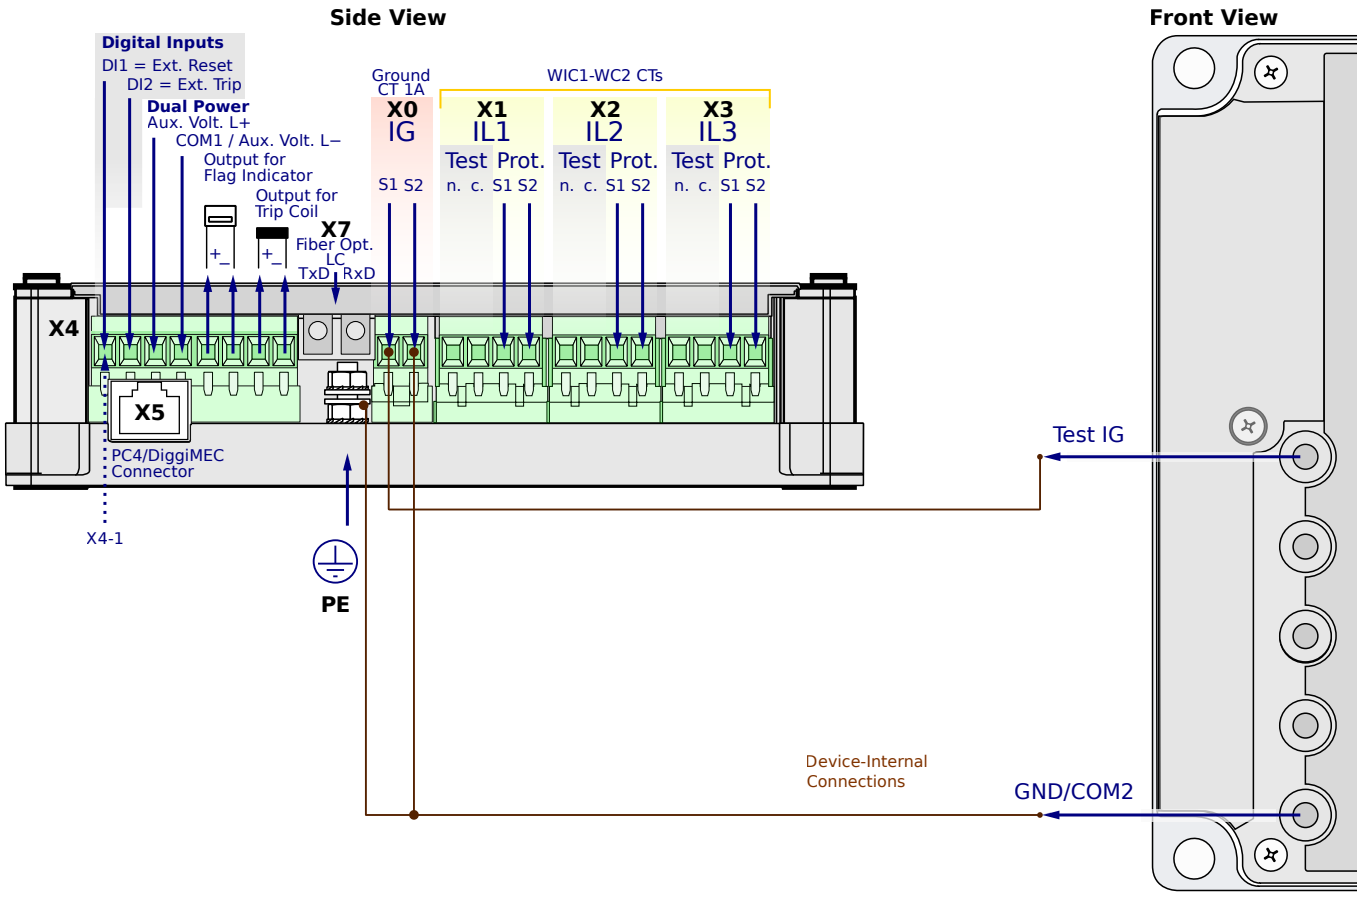


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2SA0

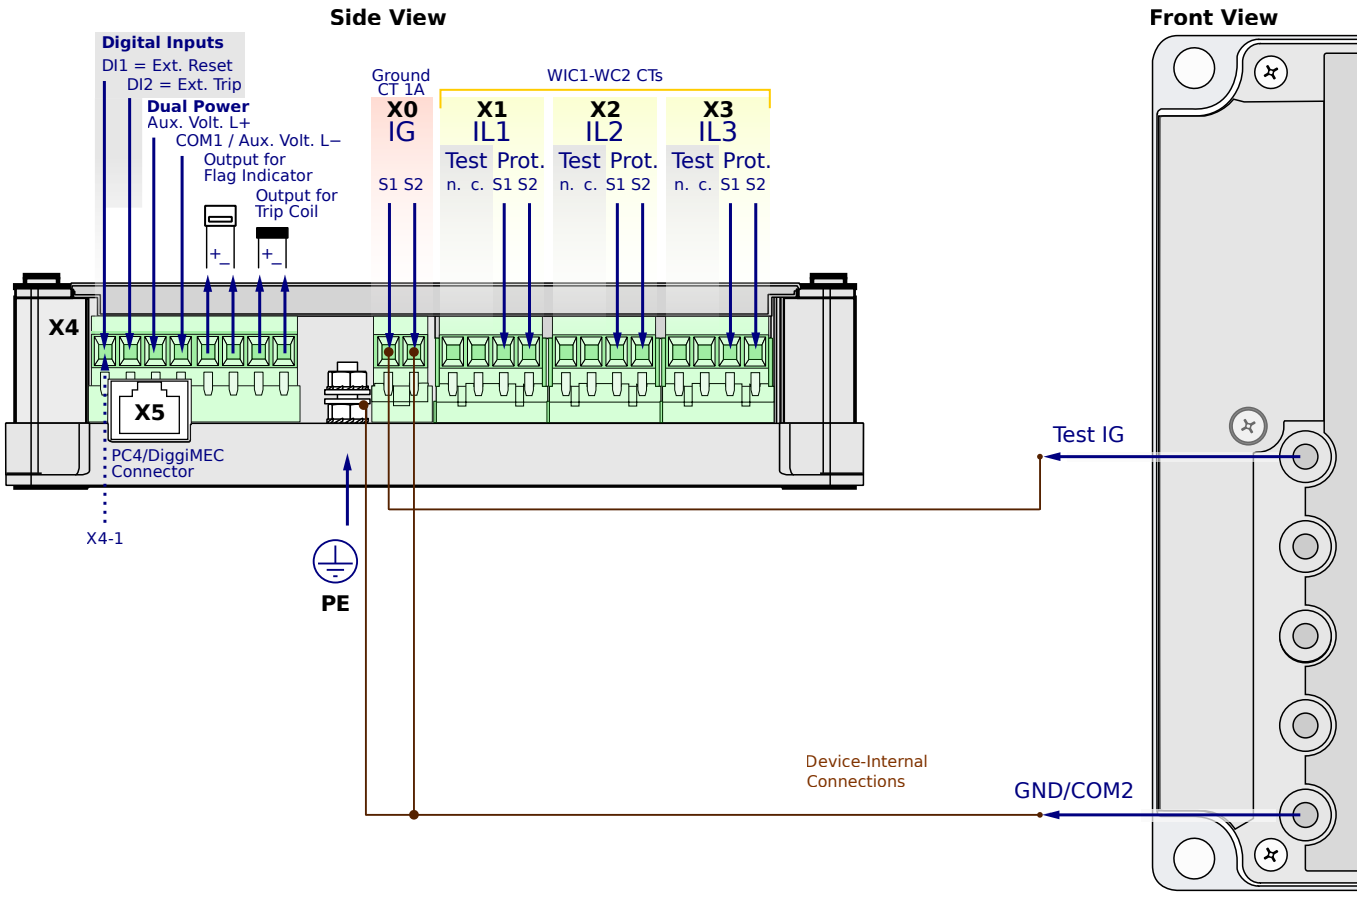


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2SAH

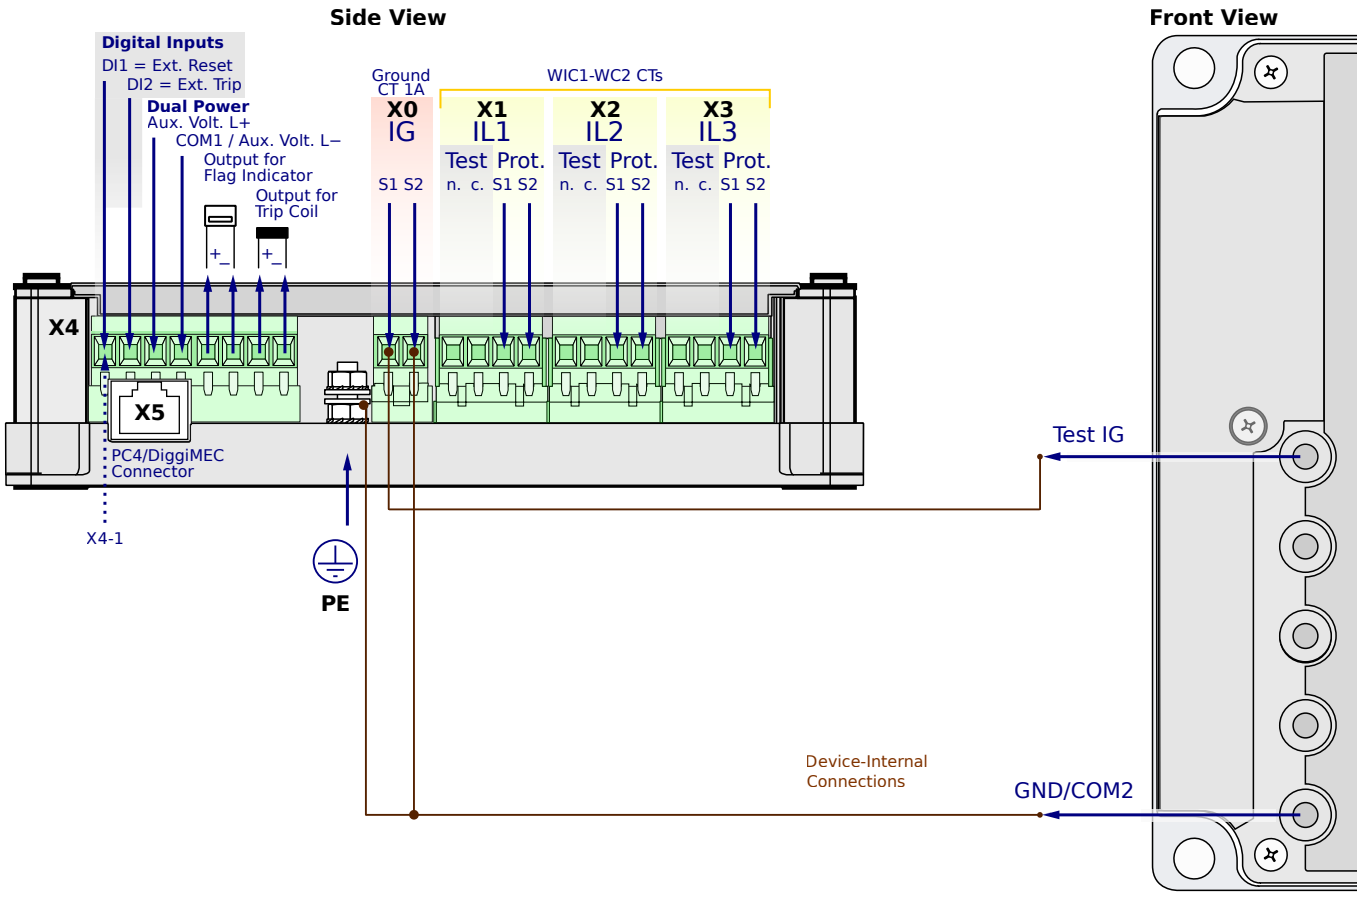


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2SB0

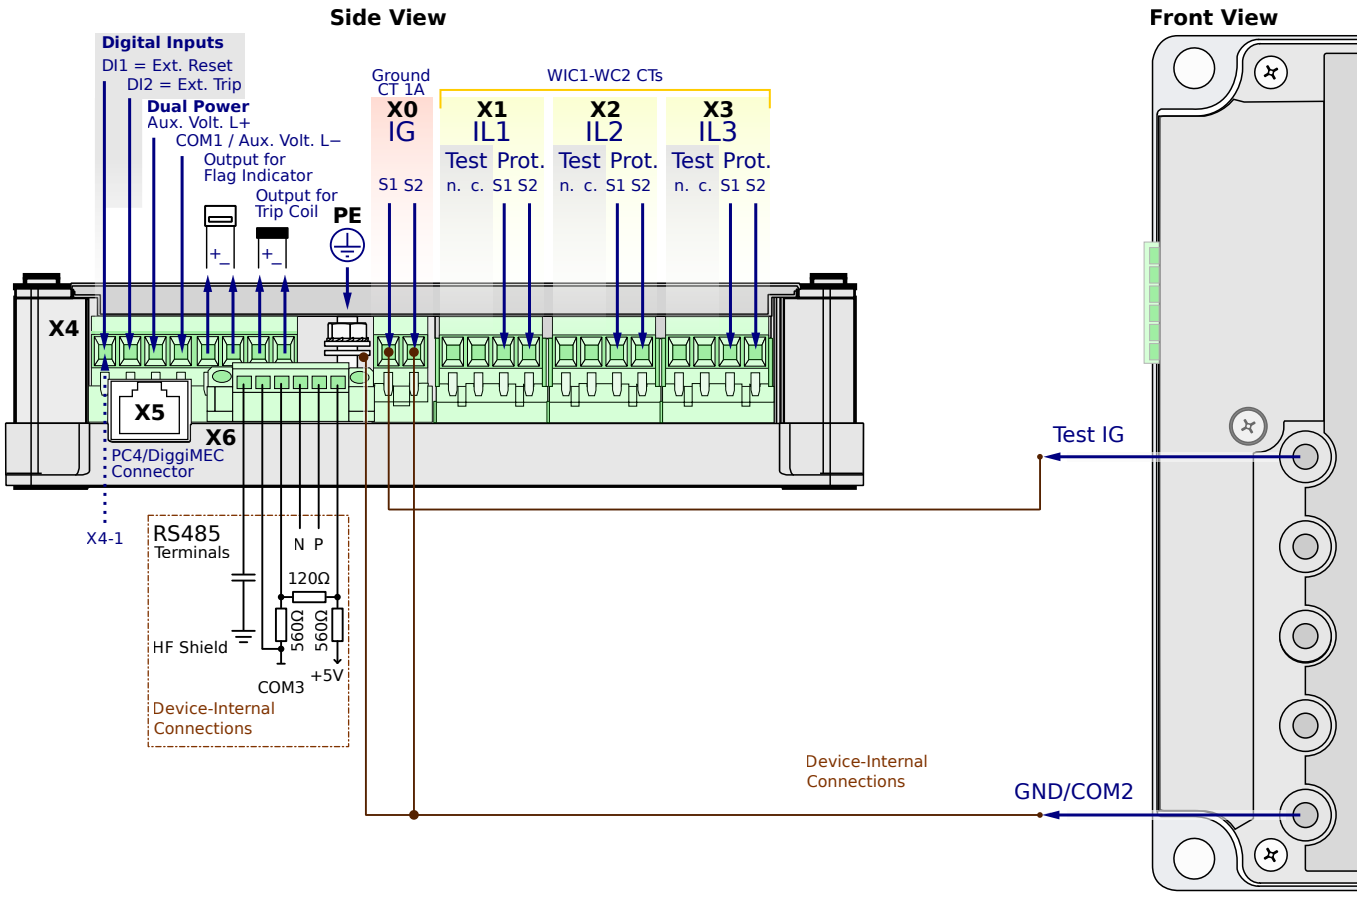


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2SBH

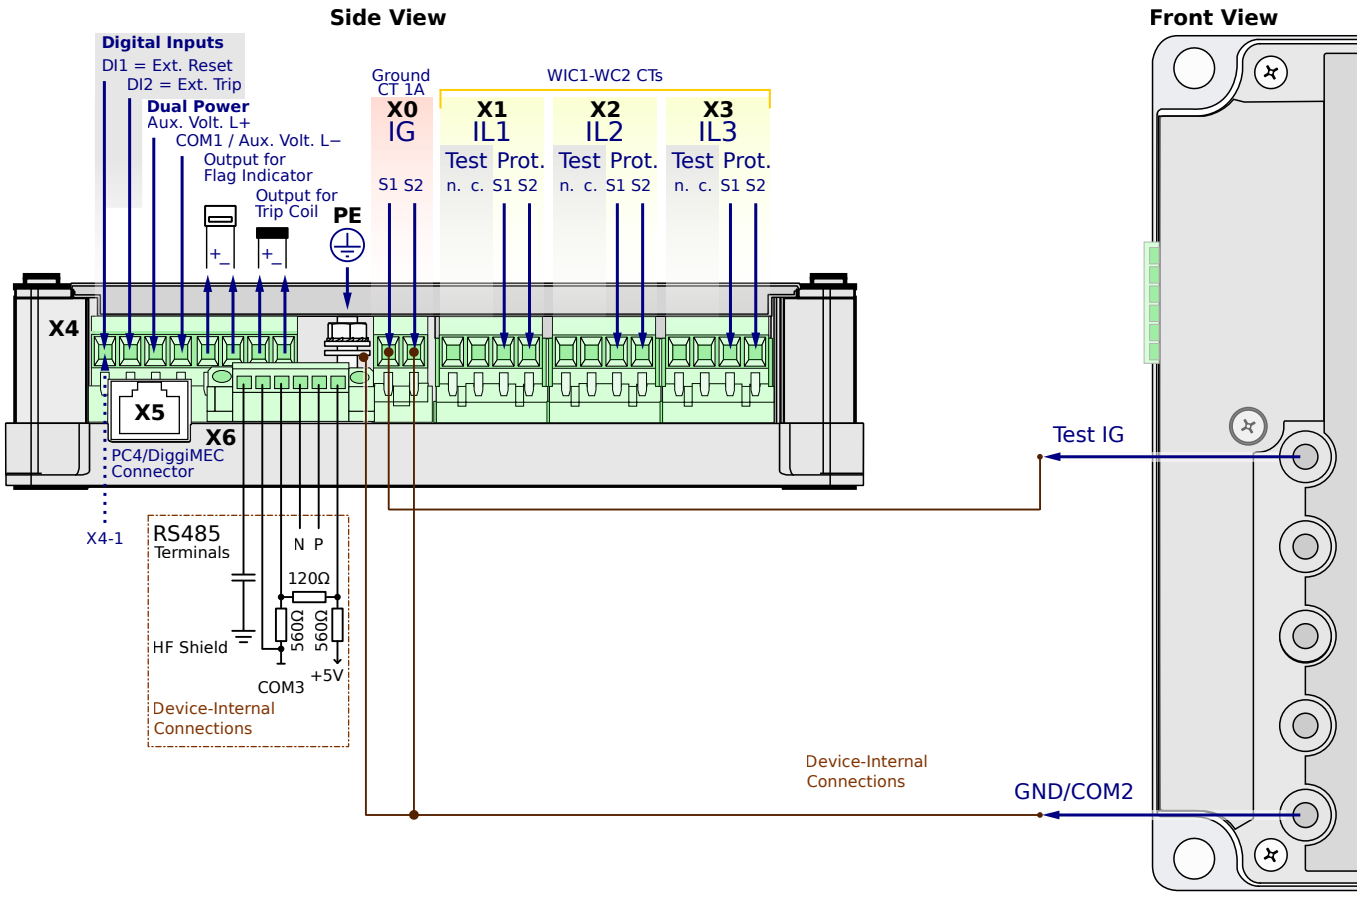


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2SC0

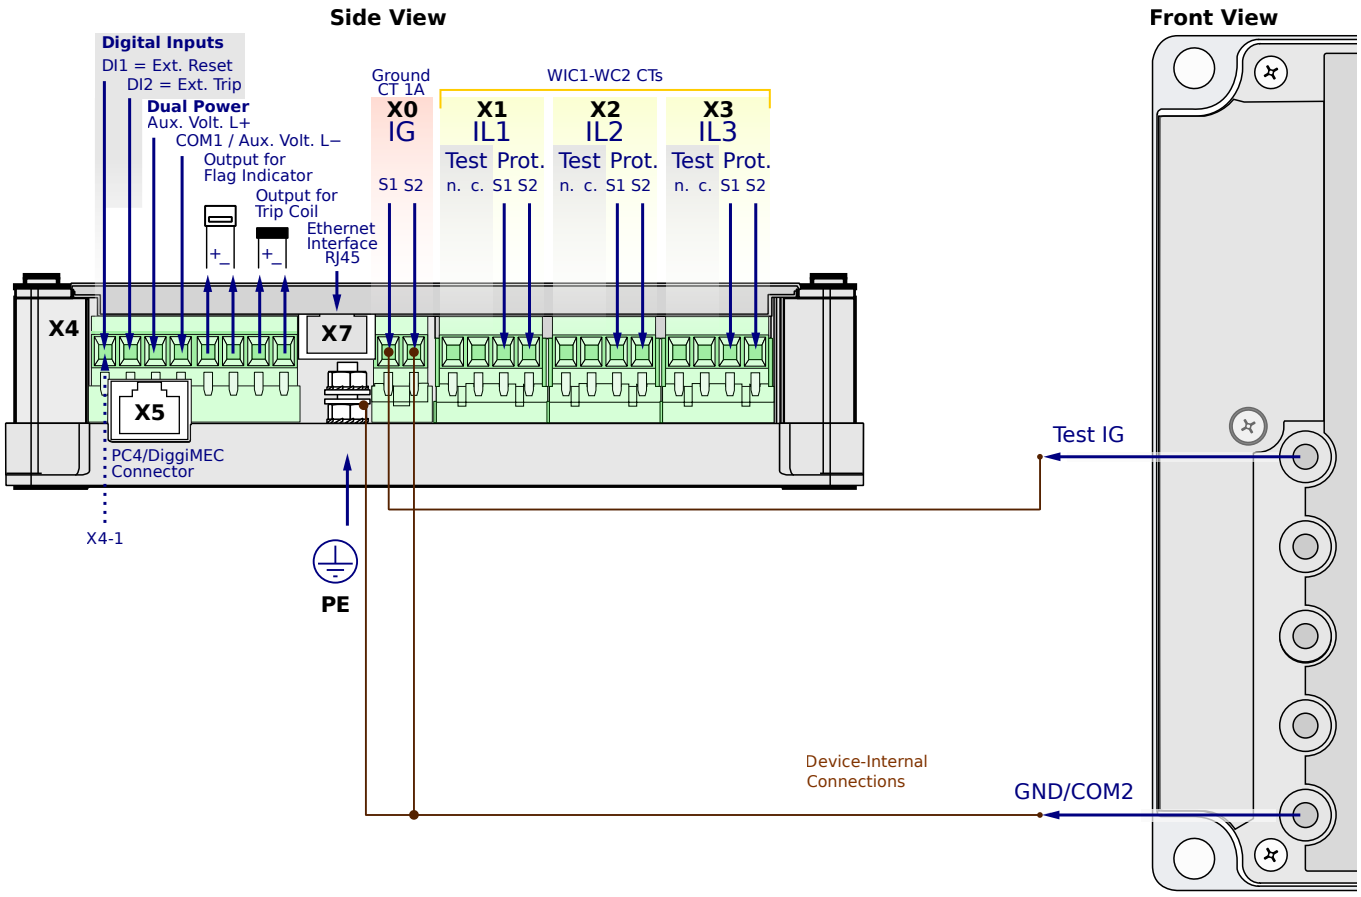


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2SCH

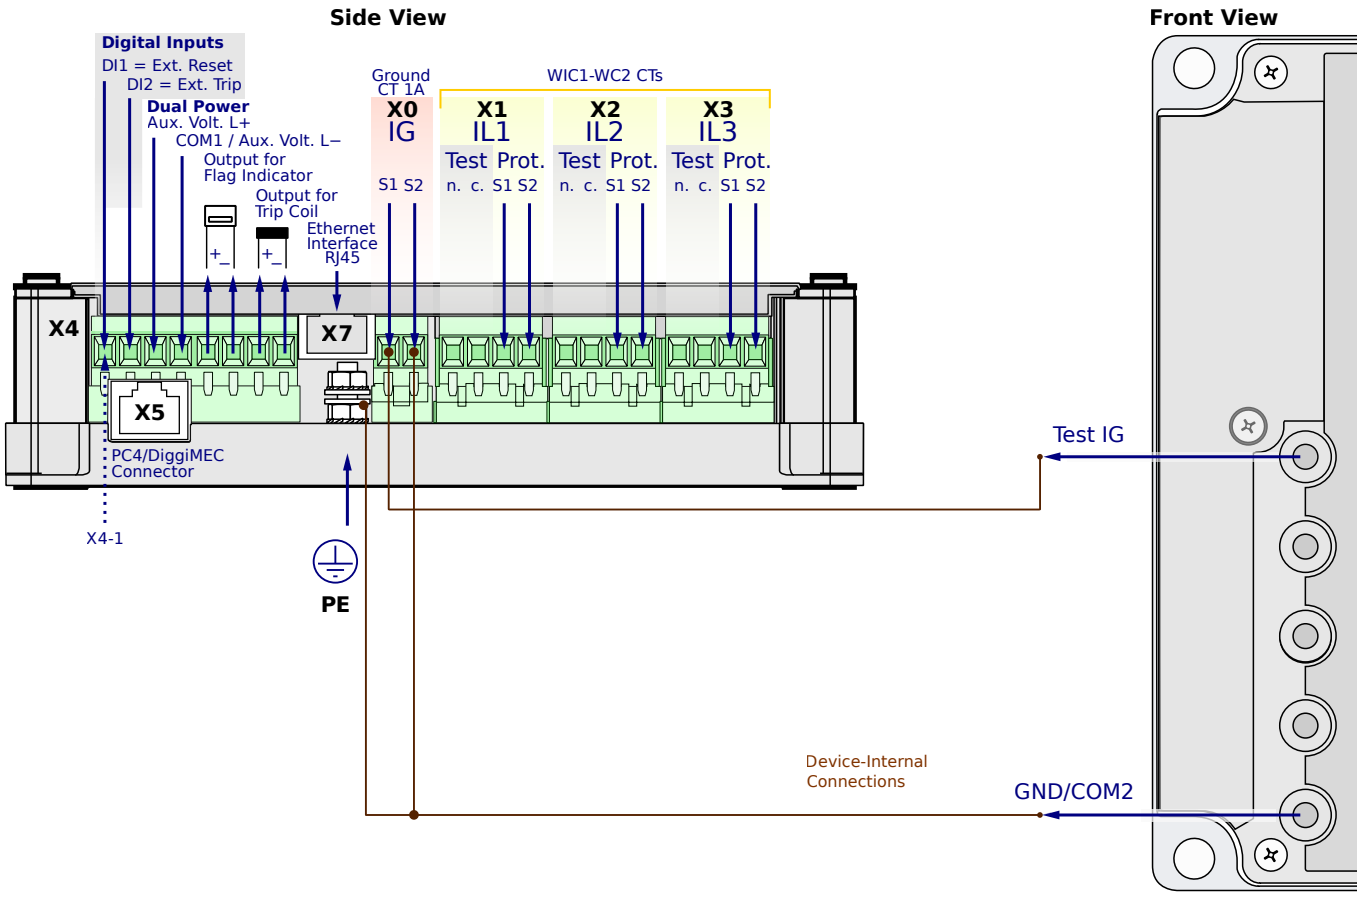


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2SL0

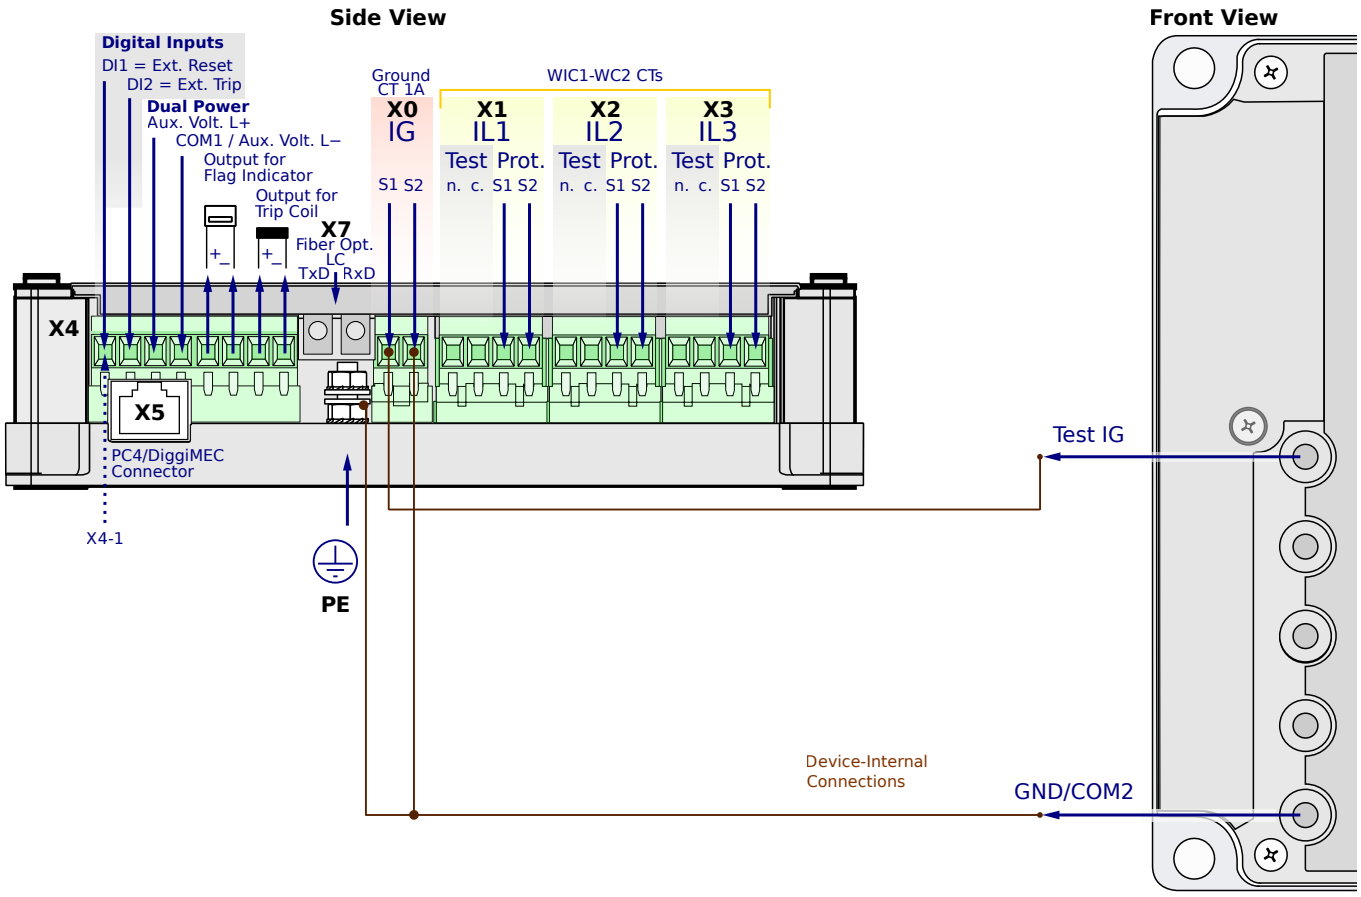


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2SLH

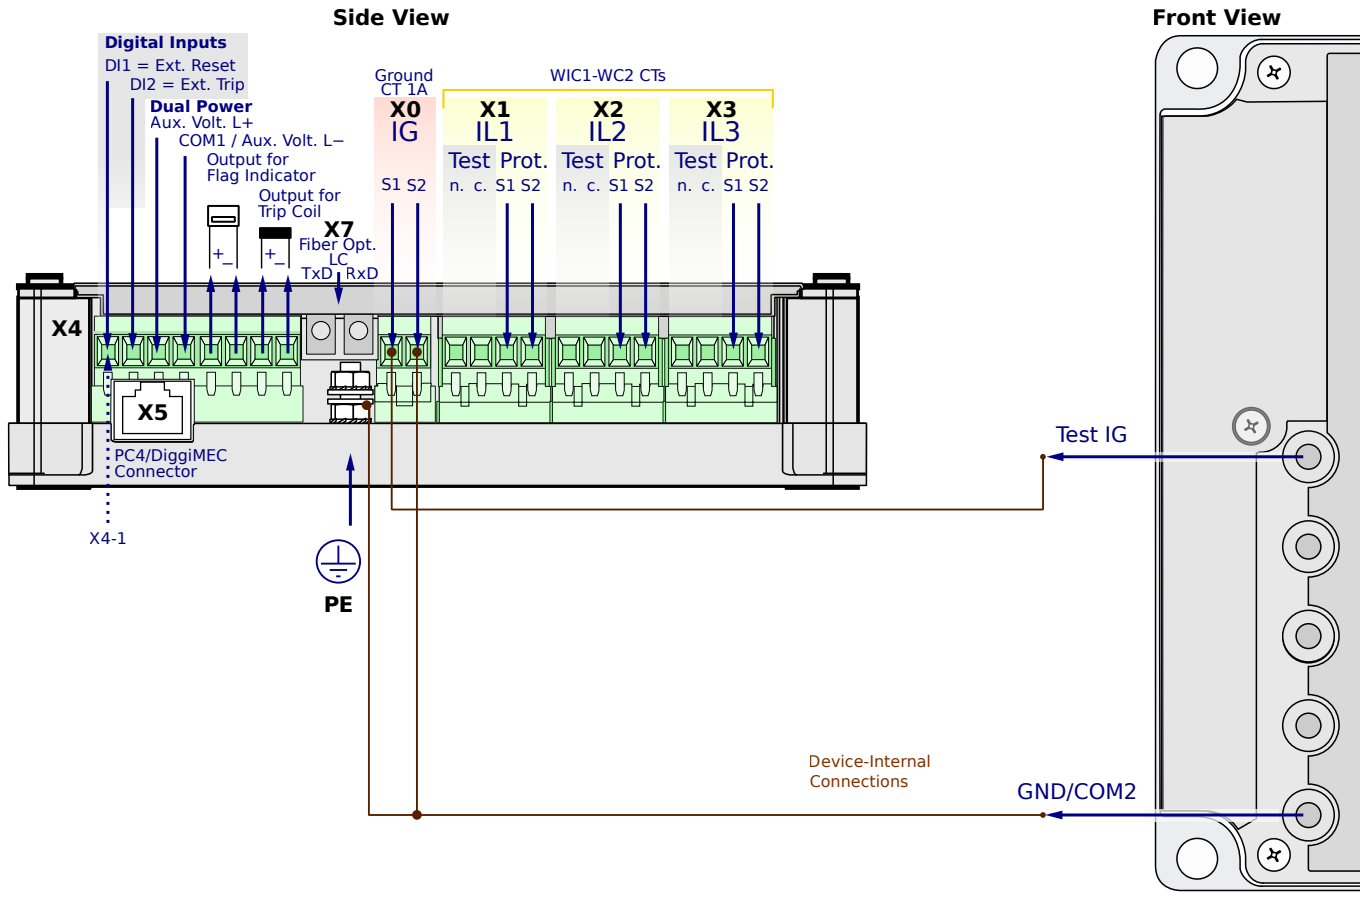


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2AA0

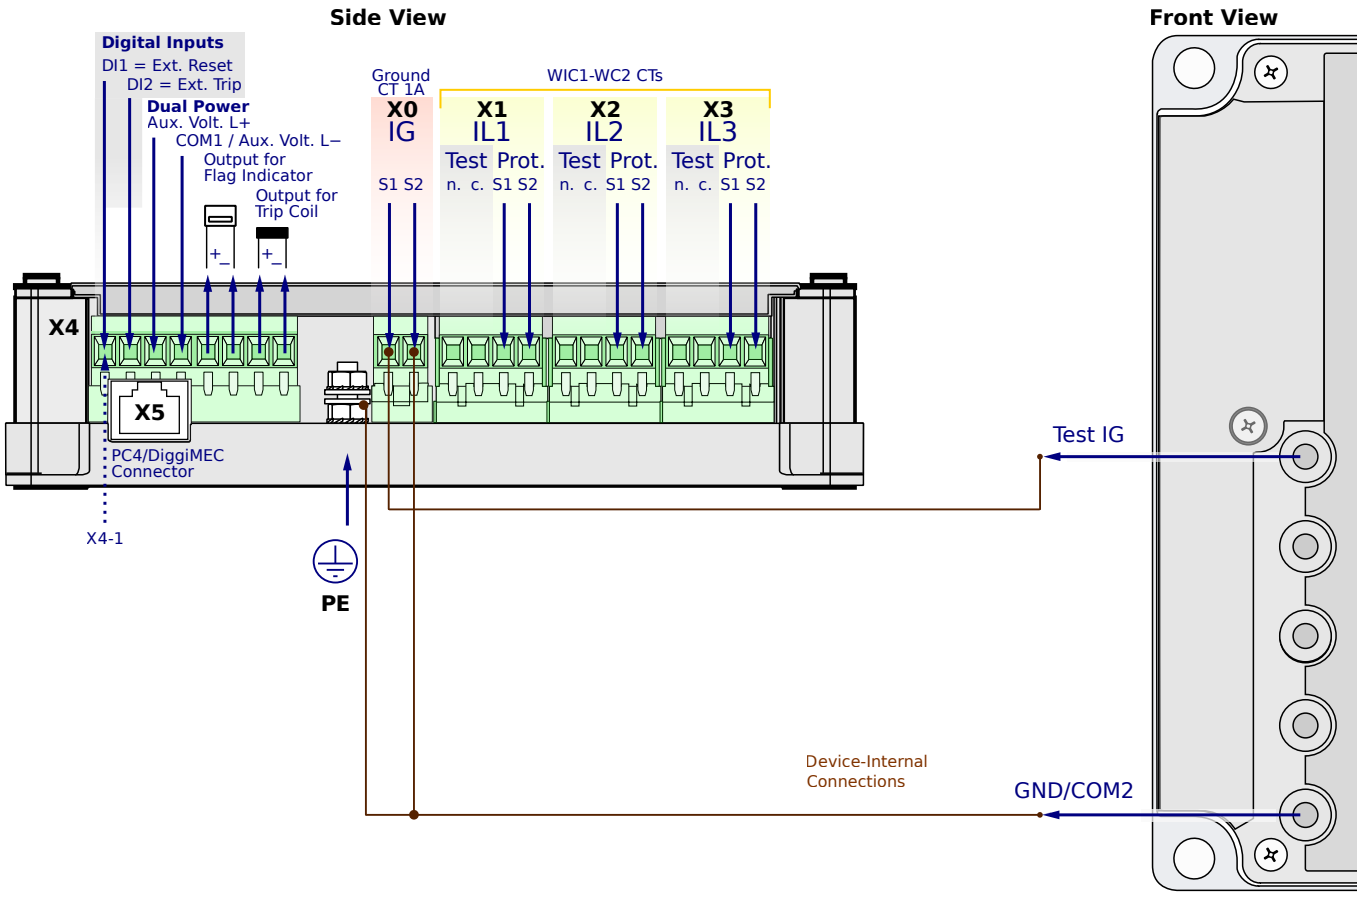


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2AAH

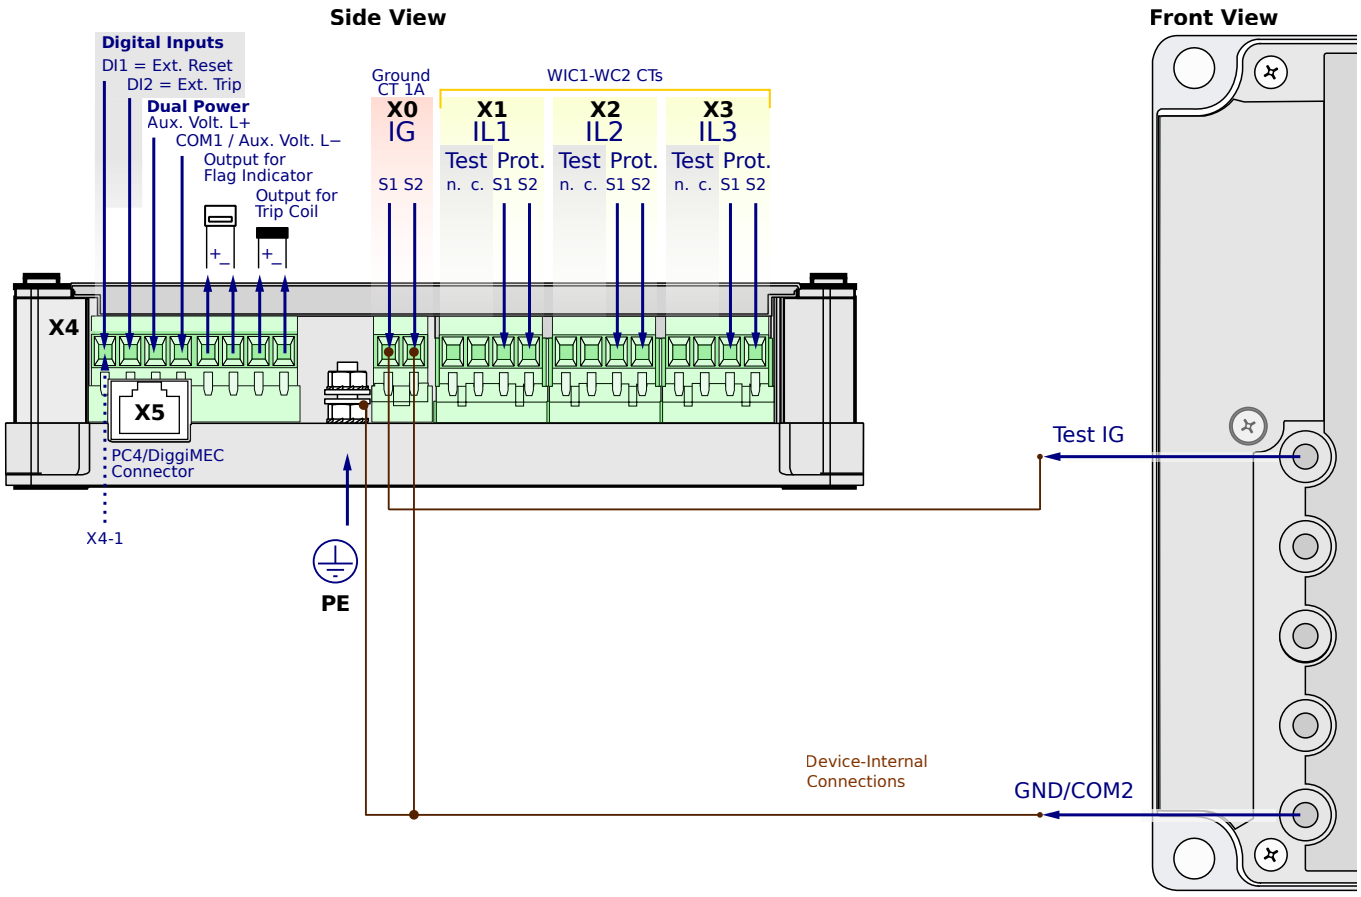


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2AB0

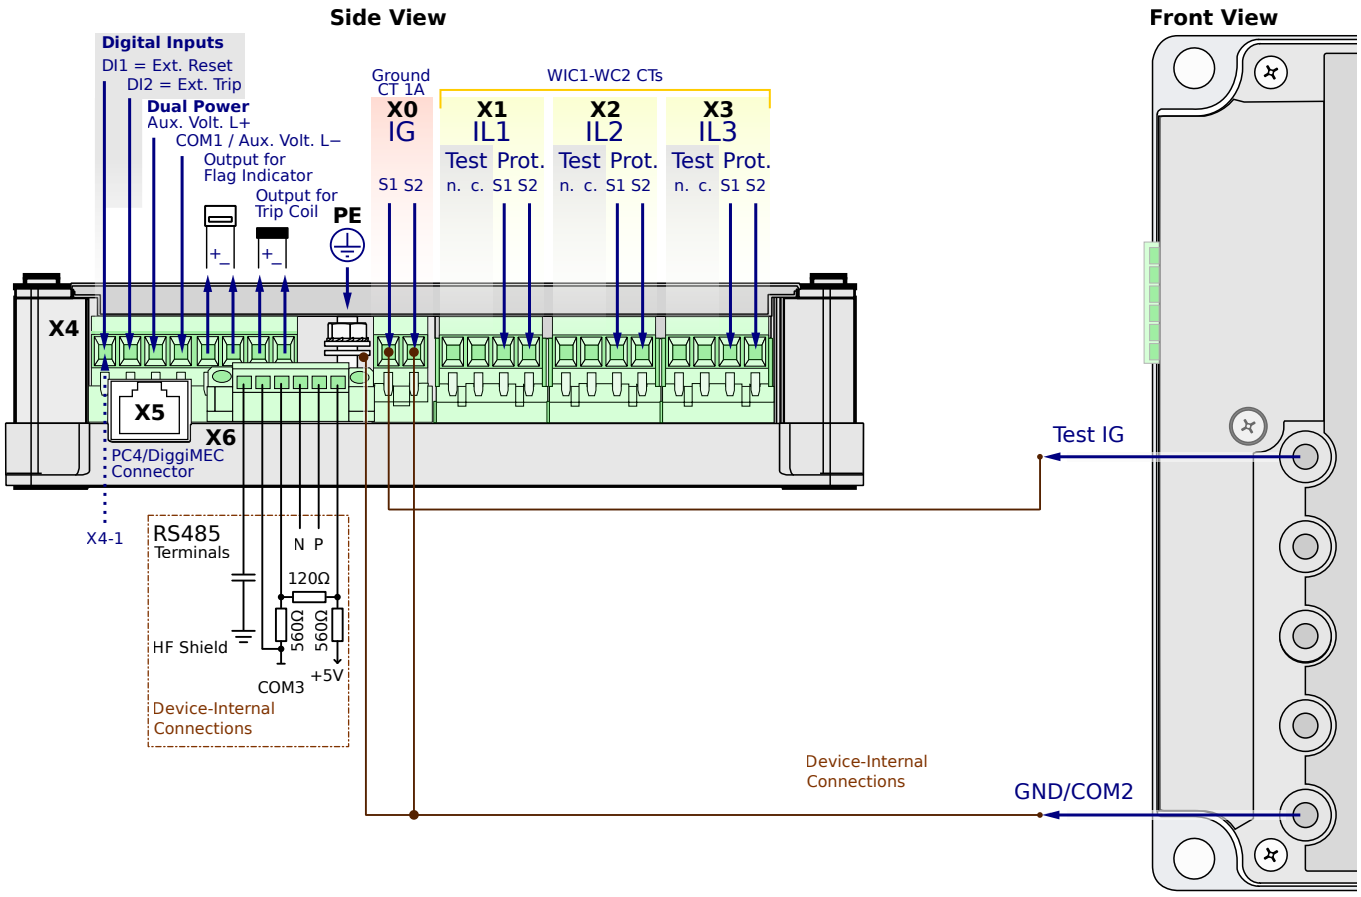


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2ABH

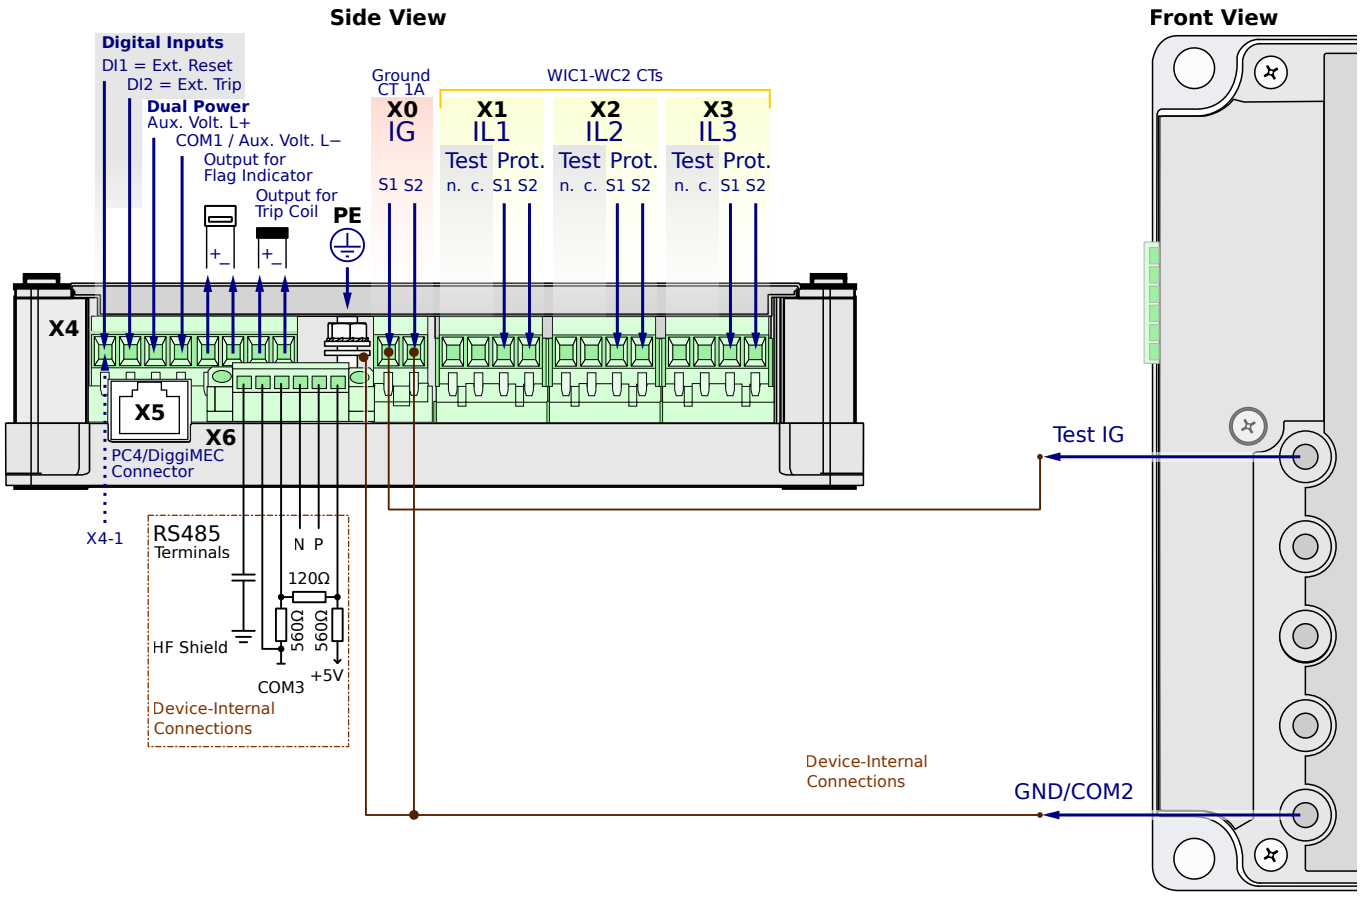


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2AC0

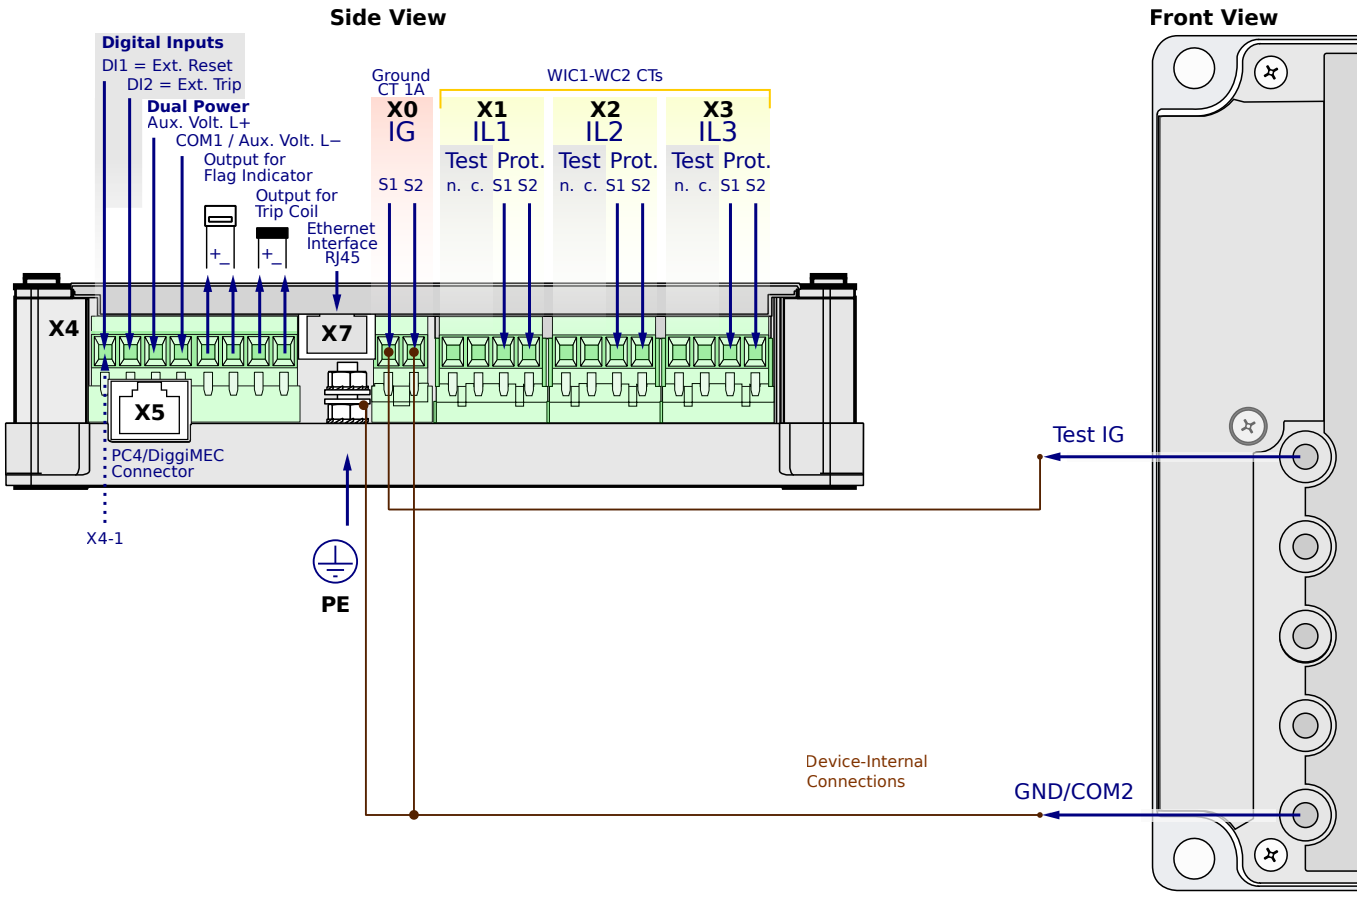


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2ACH

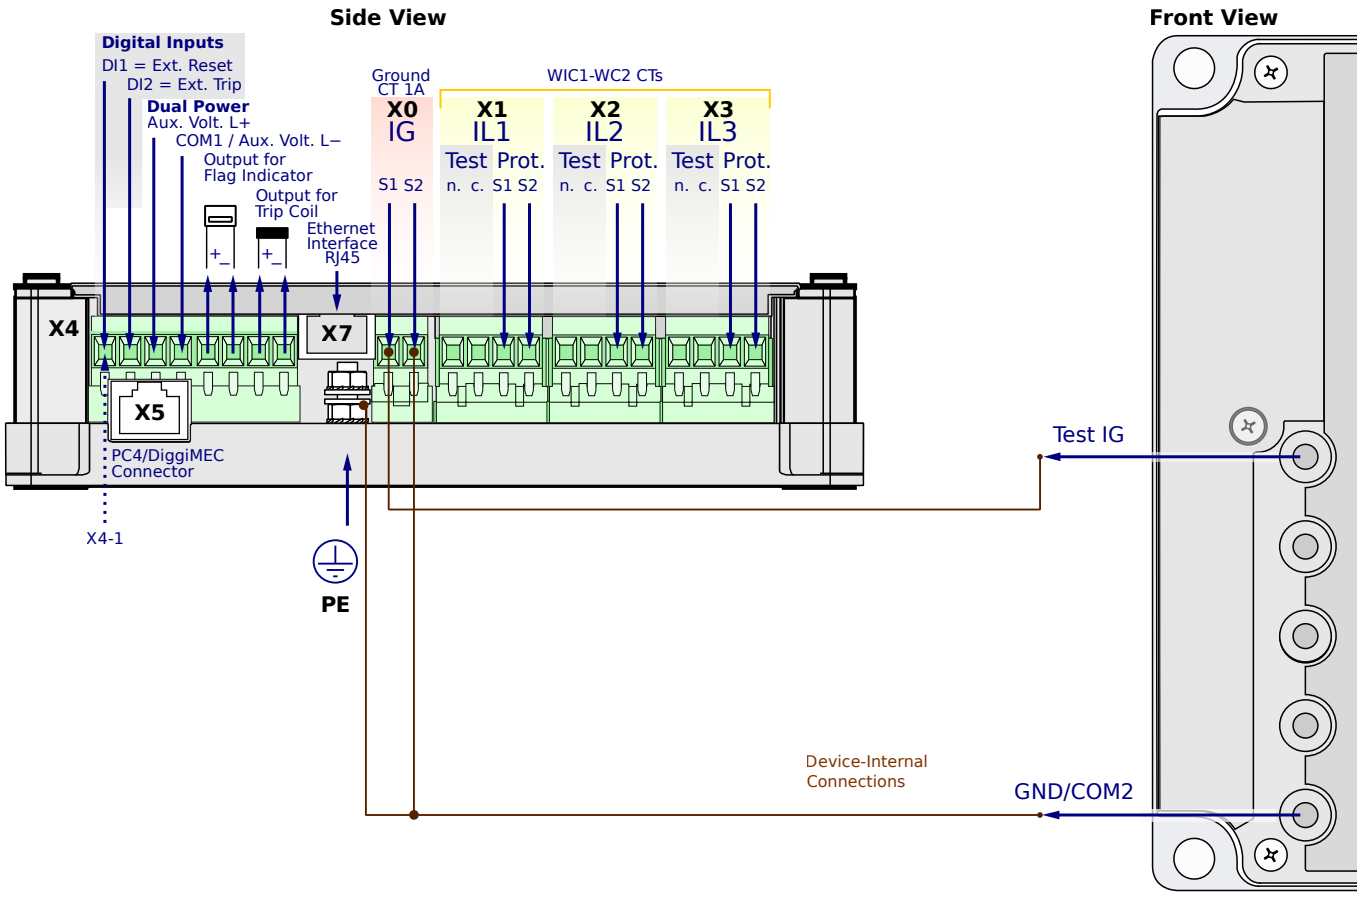


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2AL0

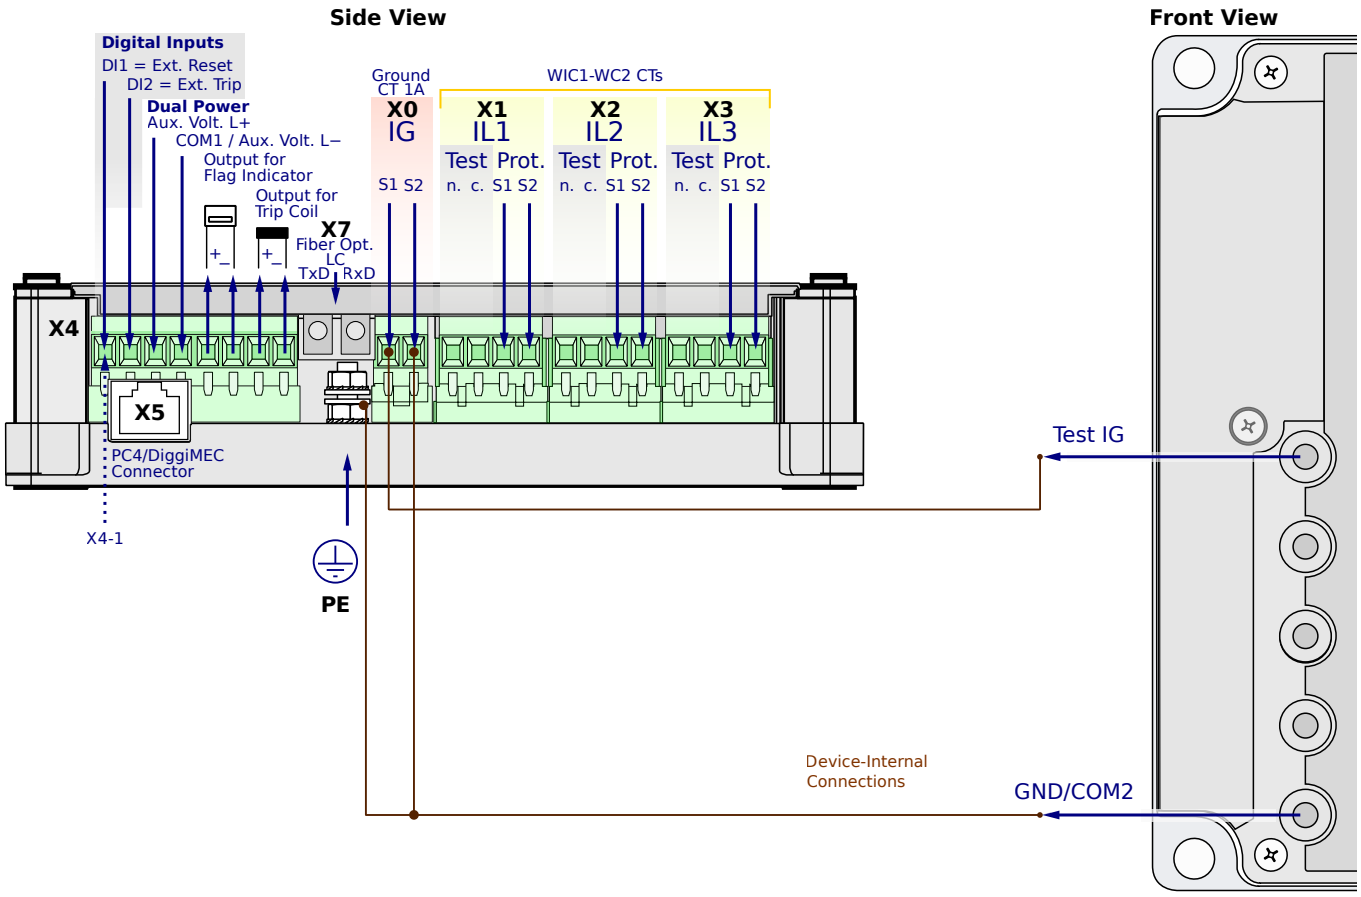


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2ALH

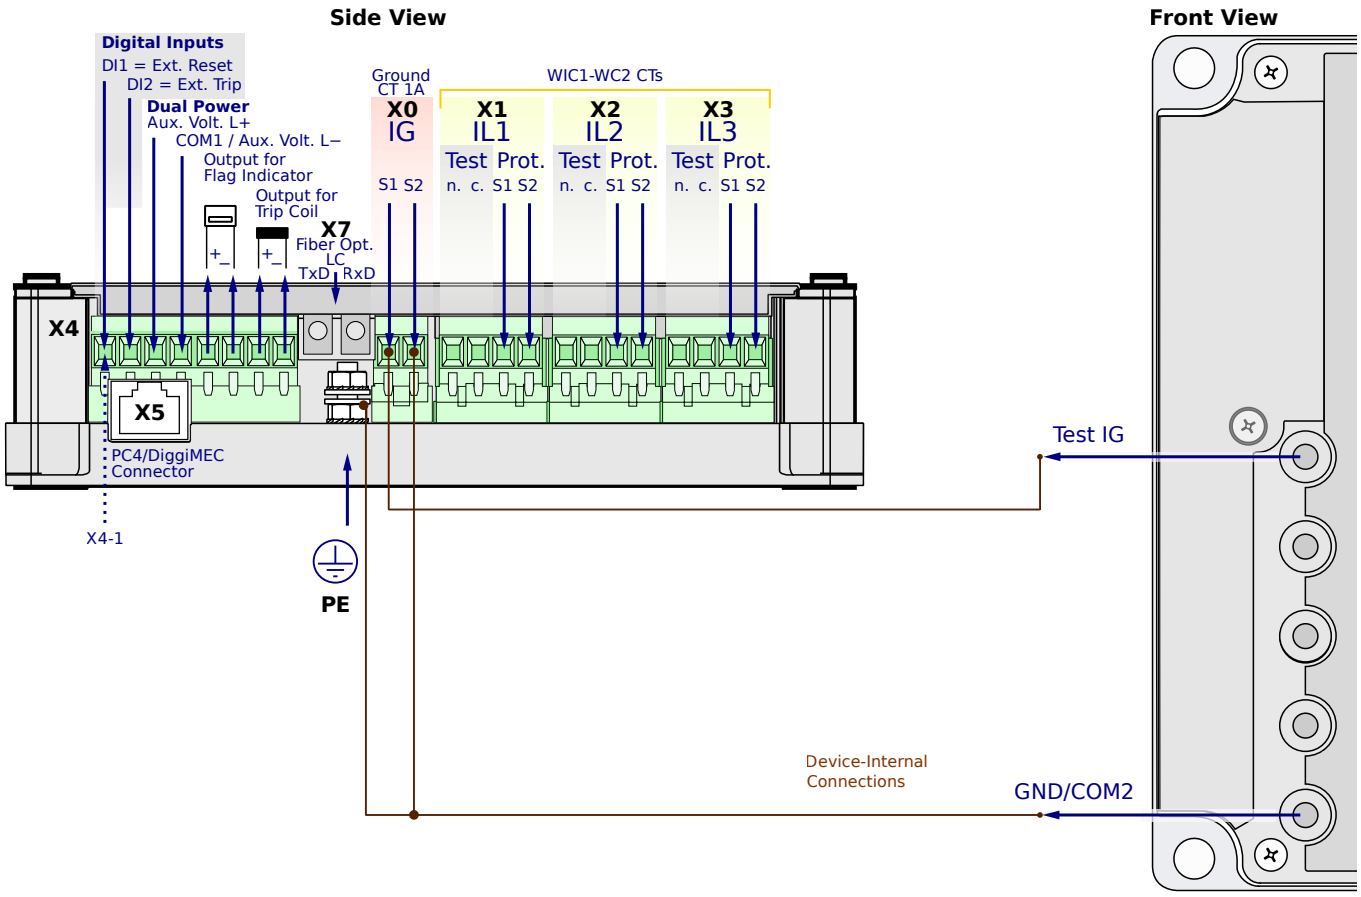


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2PA0

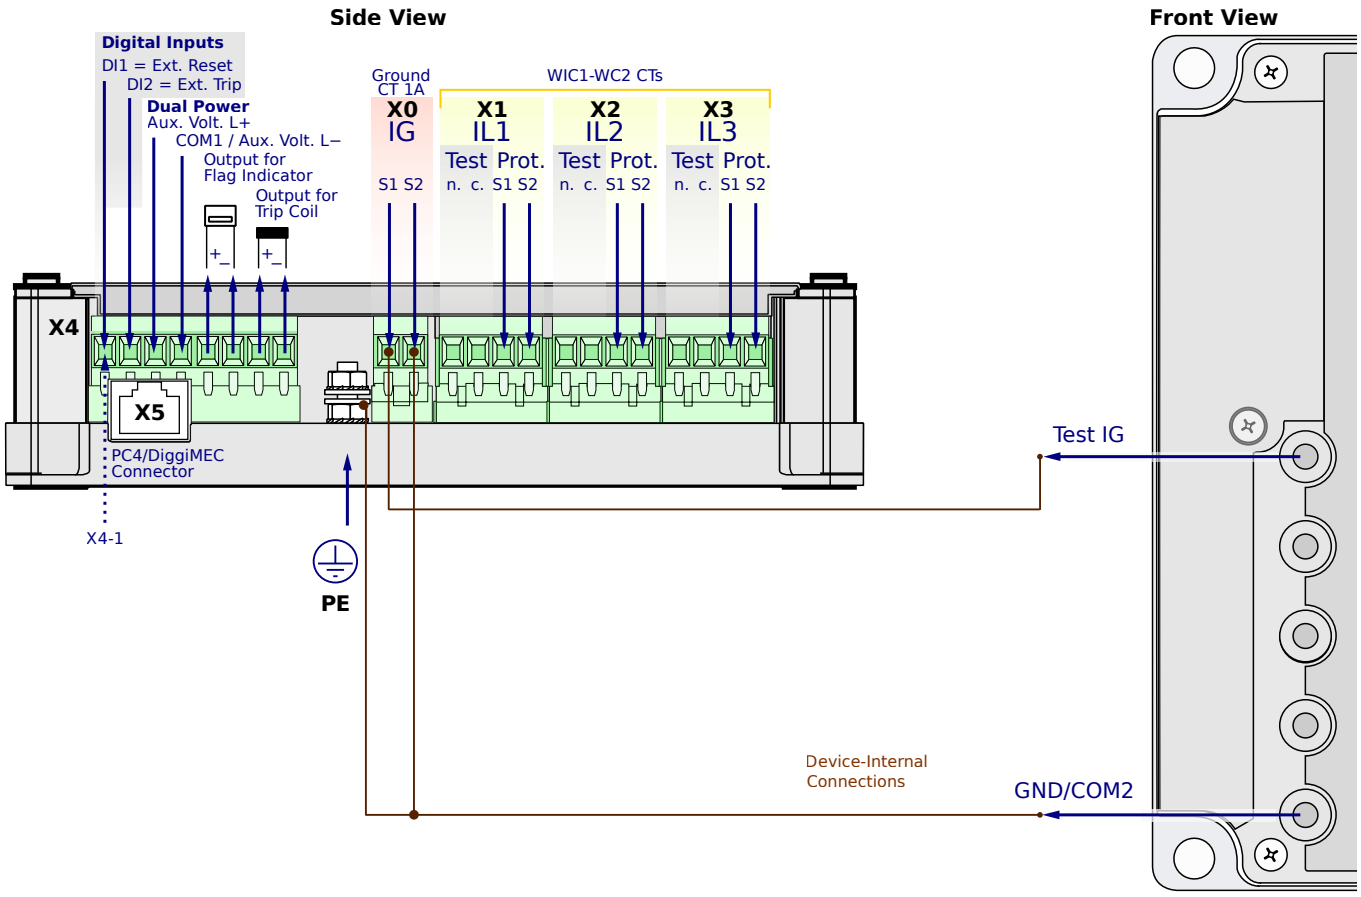


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2PAH

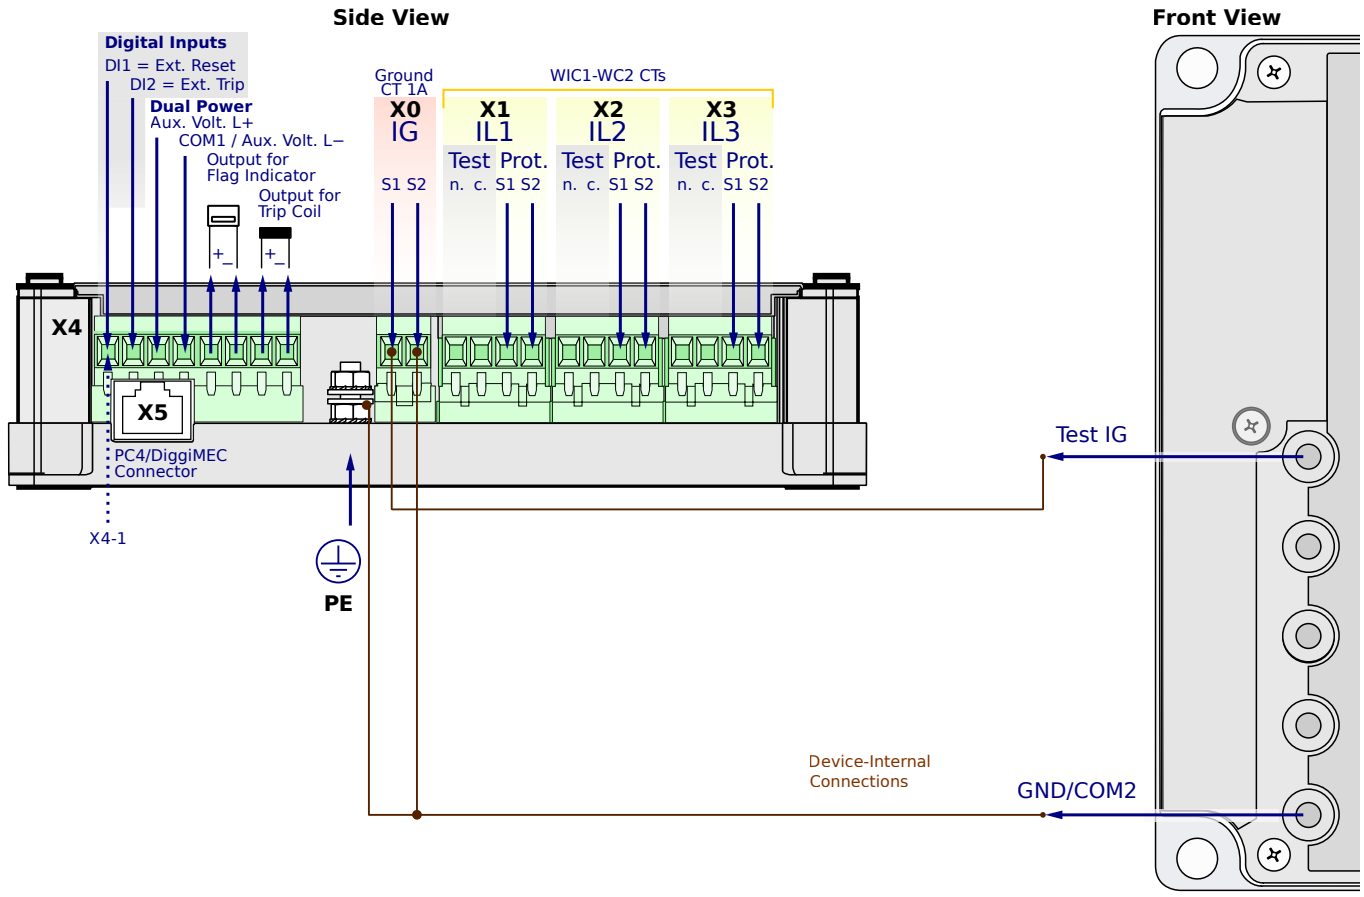


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FG2PB0

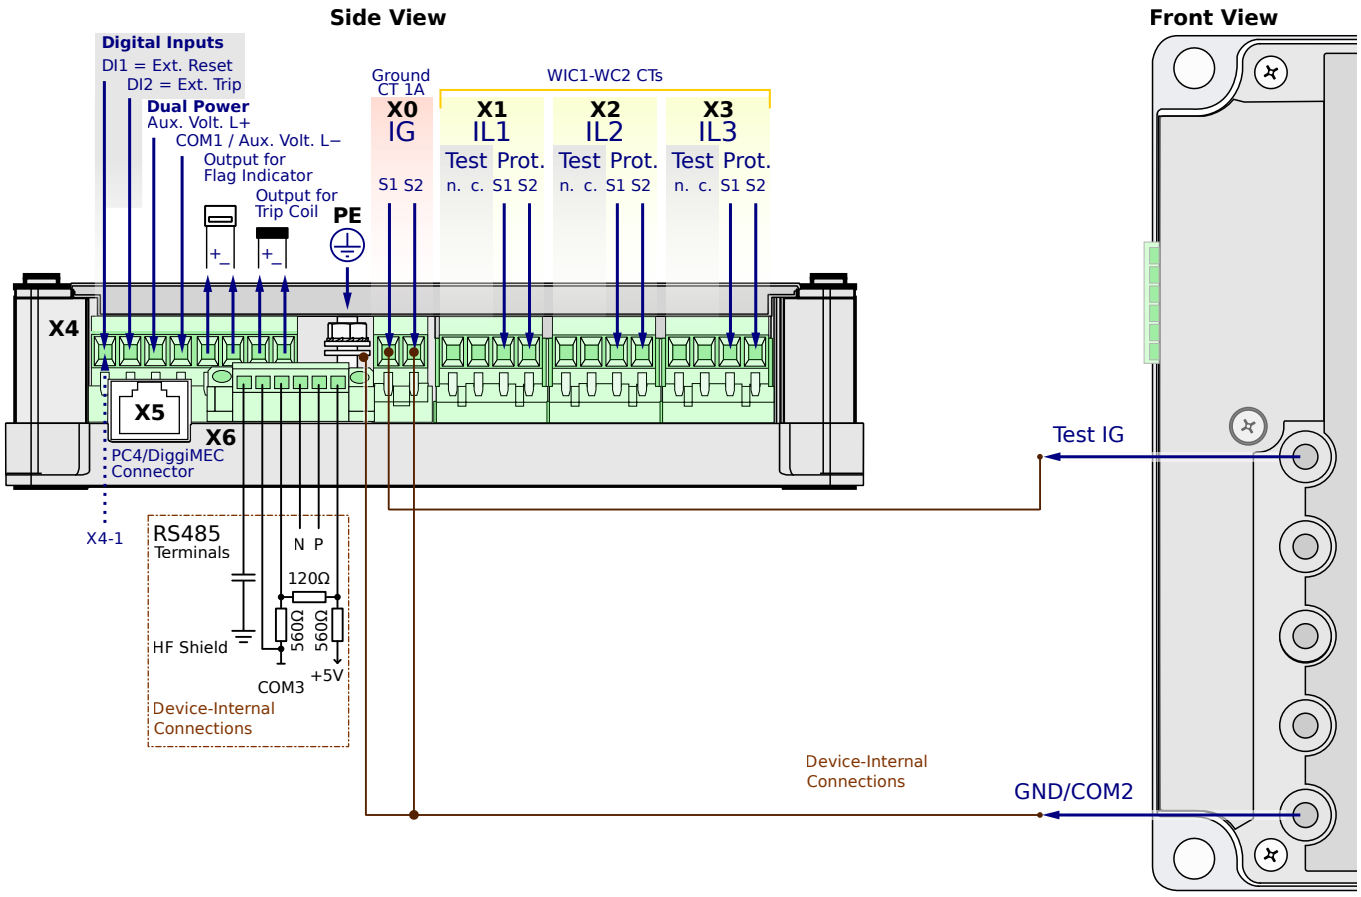


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2PBH

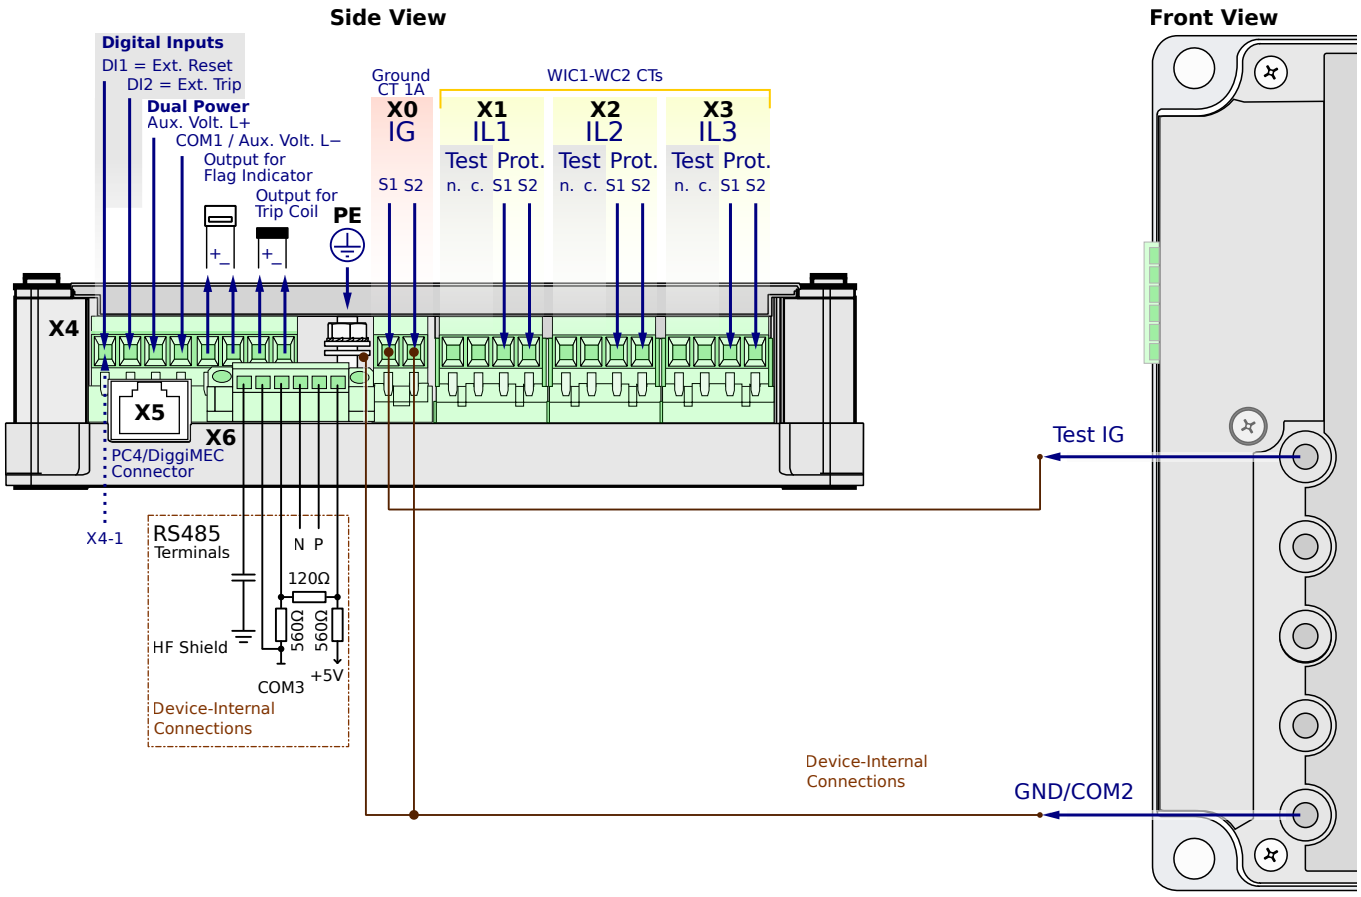


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FG2PC0

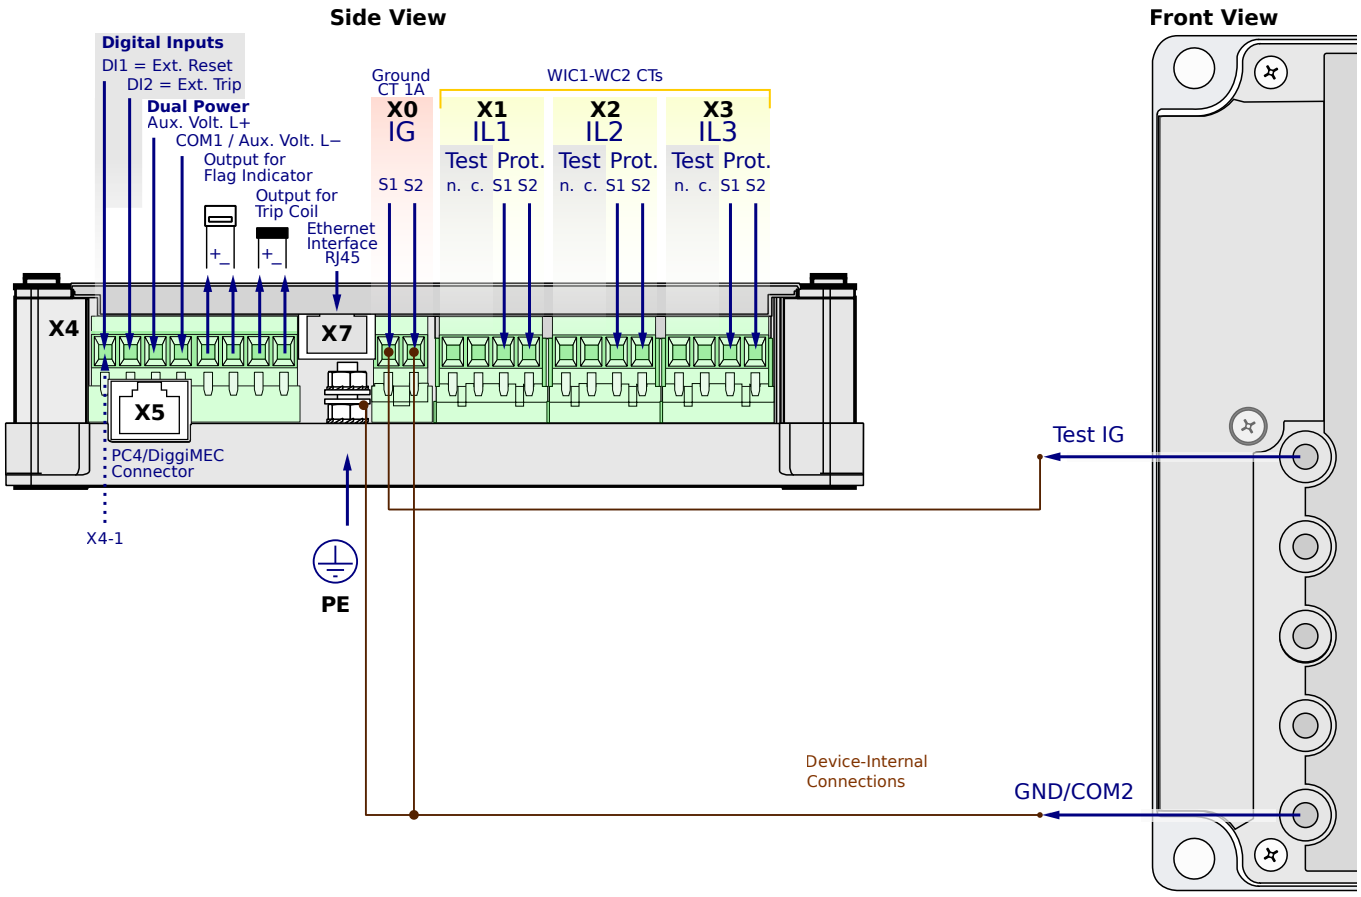


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2PCH

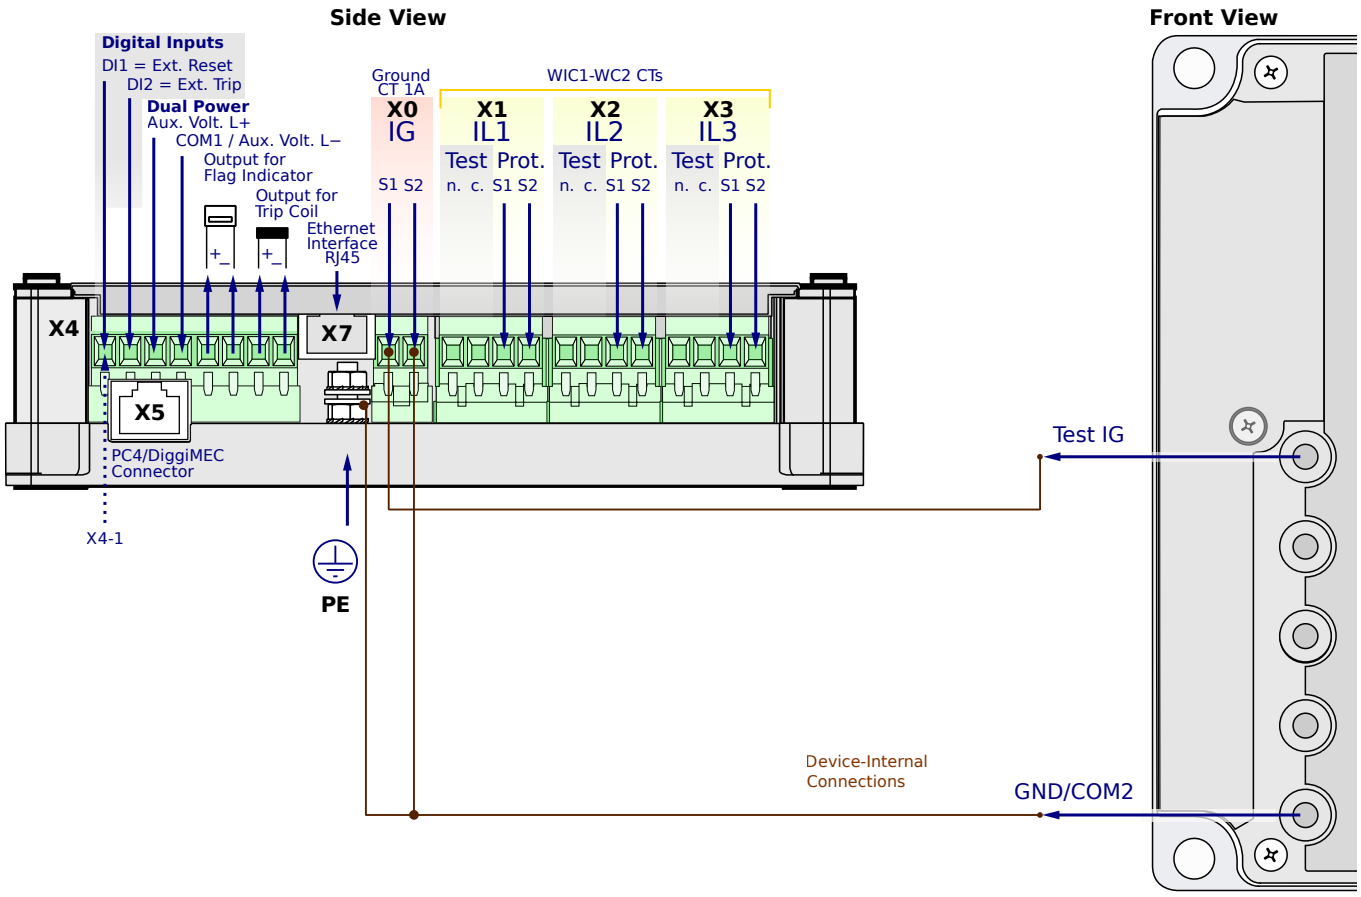


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FG2PL0

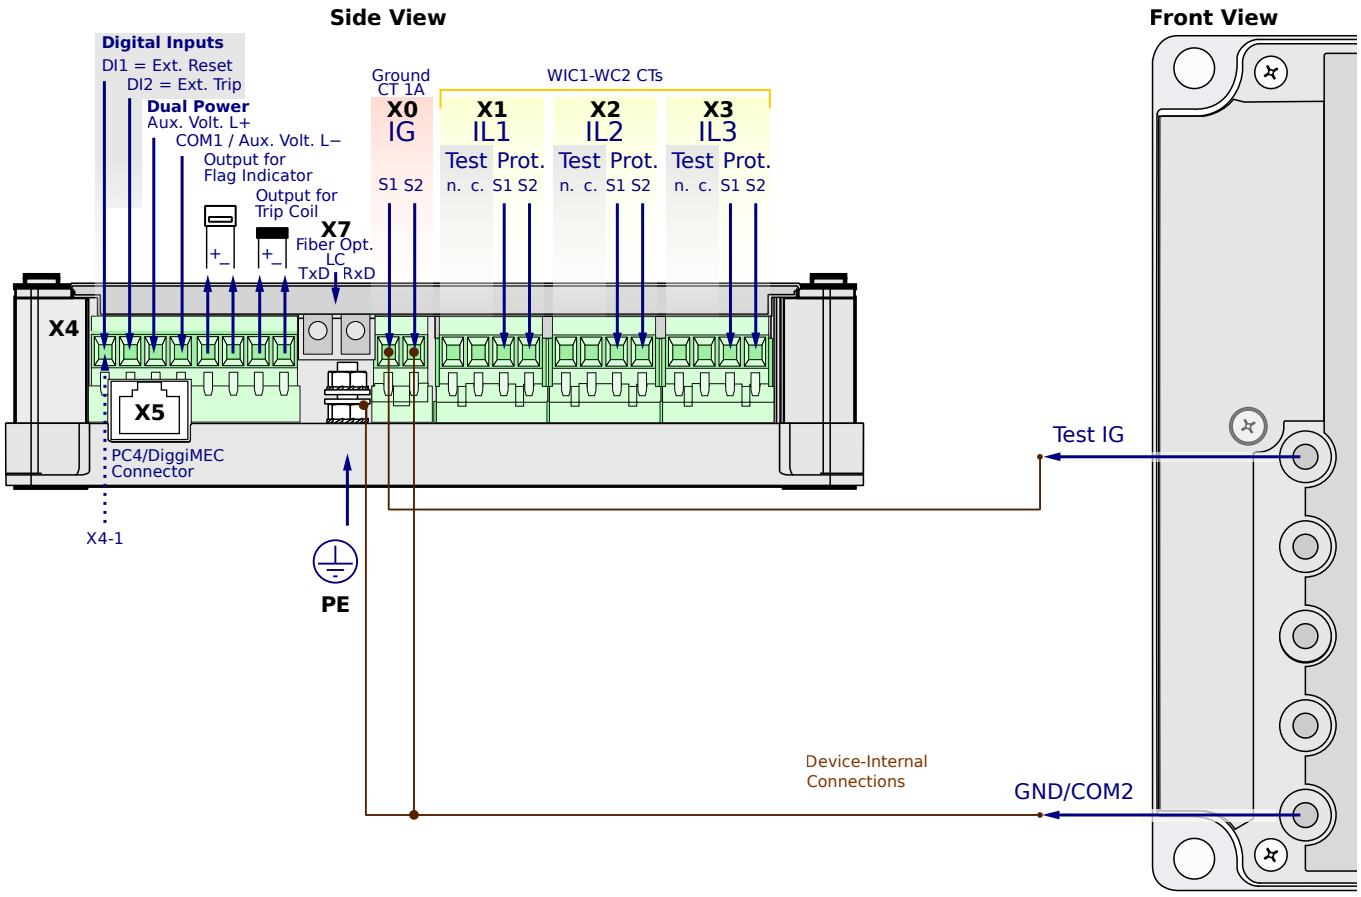


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FG2PLH

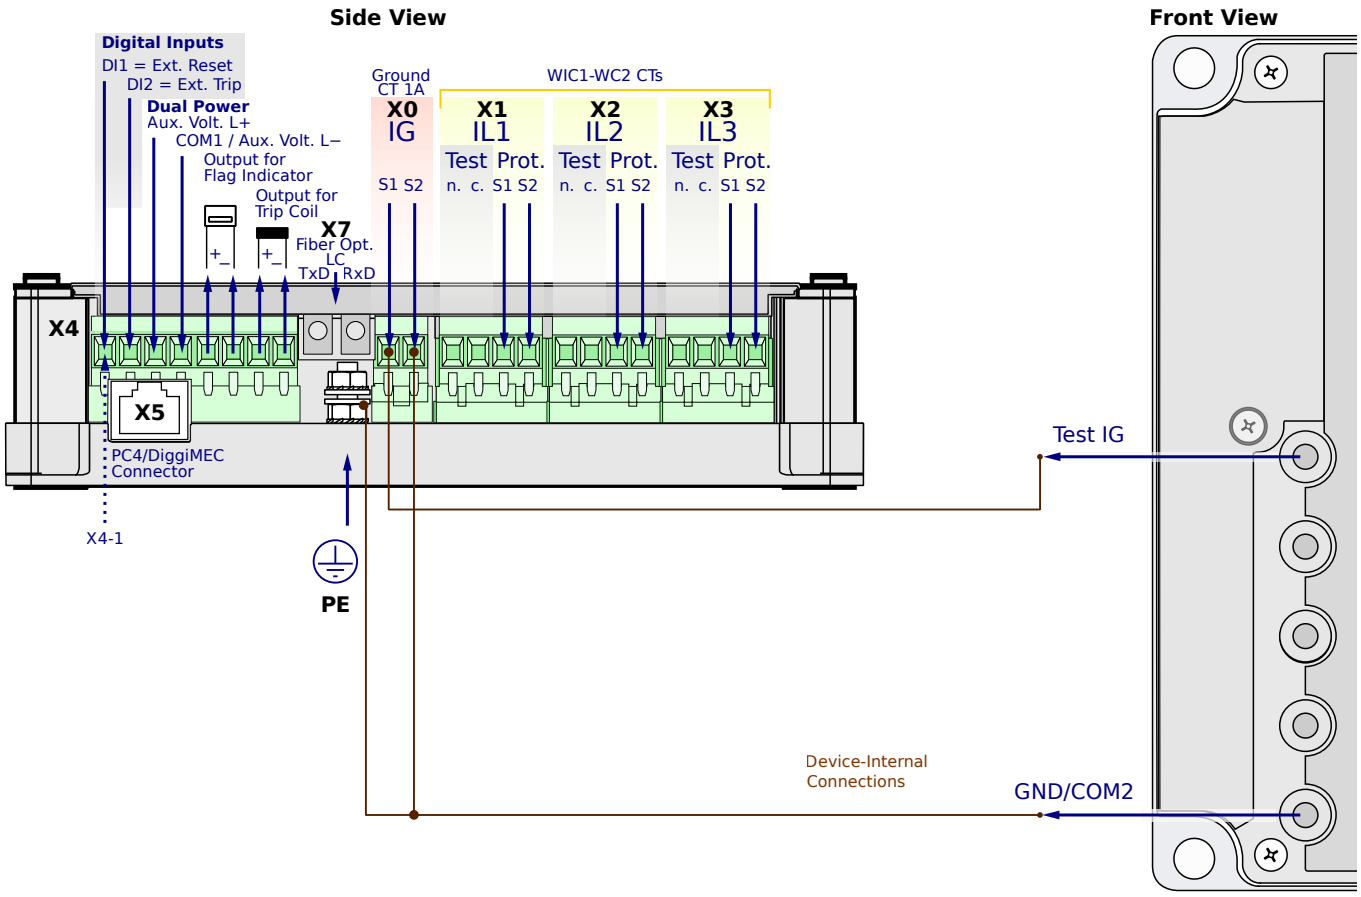


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1SA0

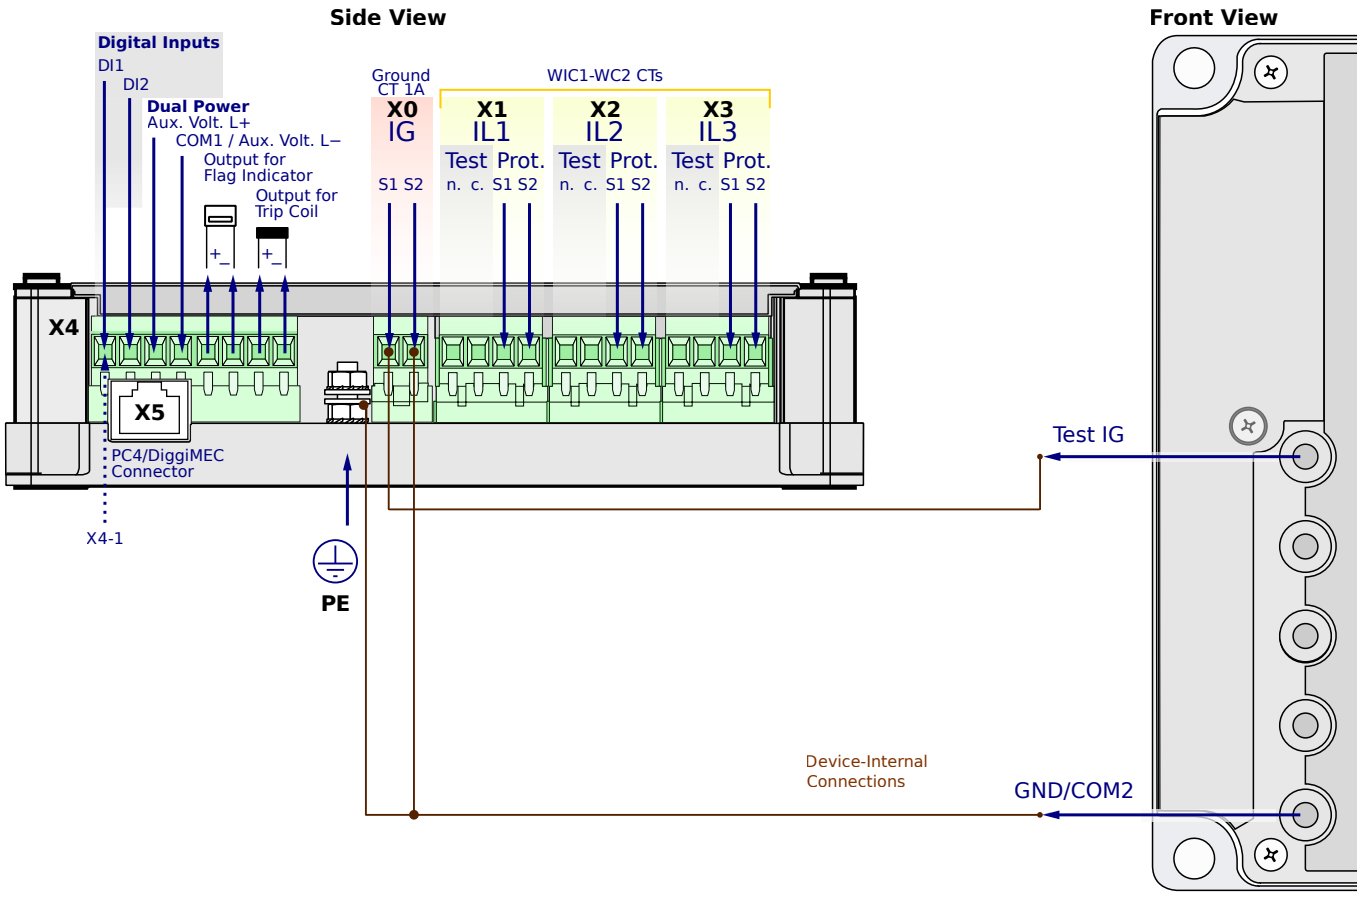


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1SAH

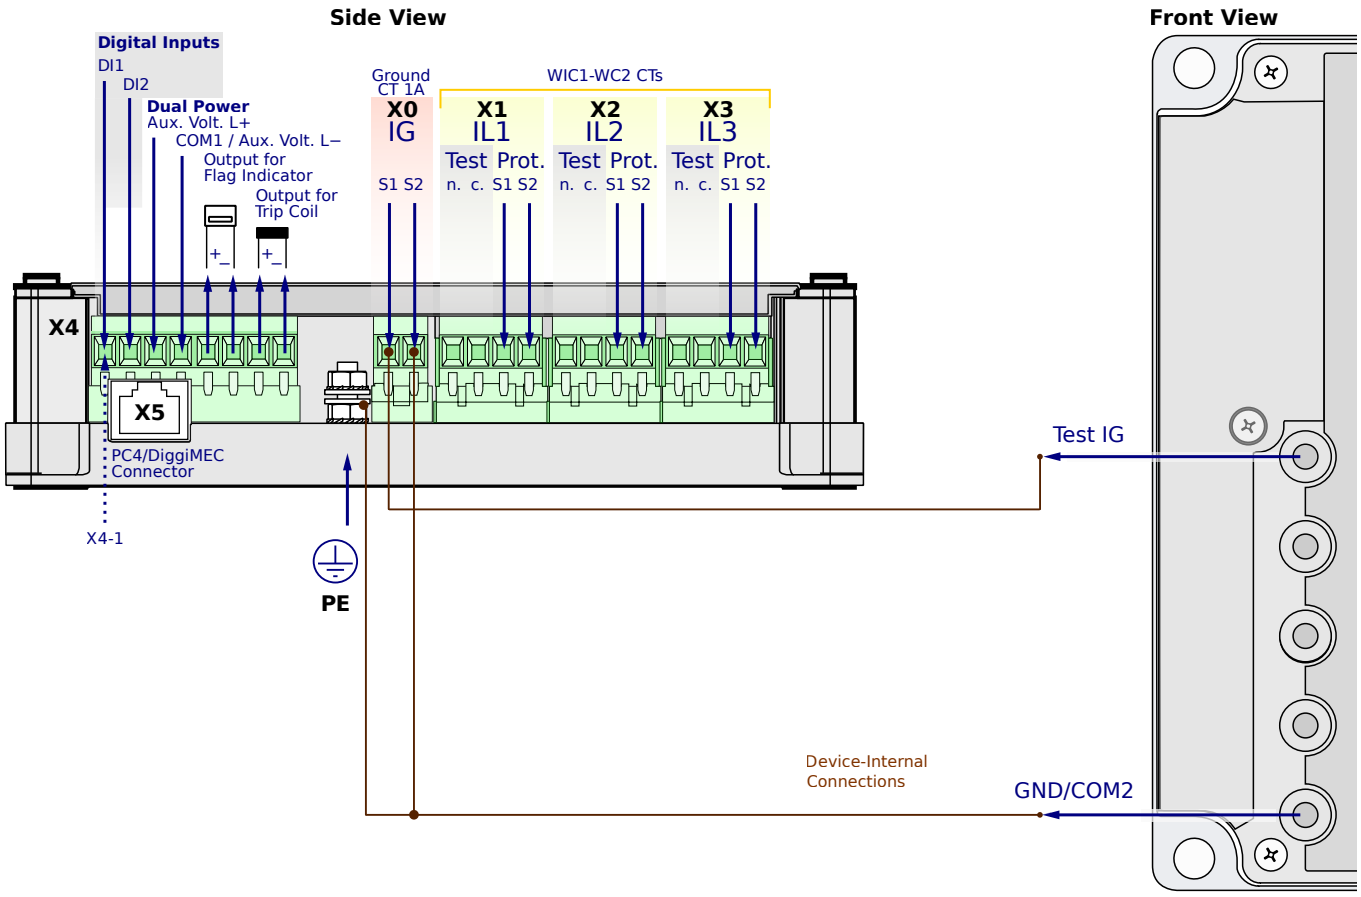


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1SB0

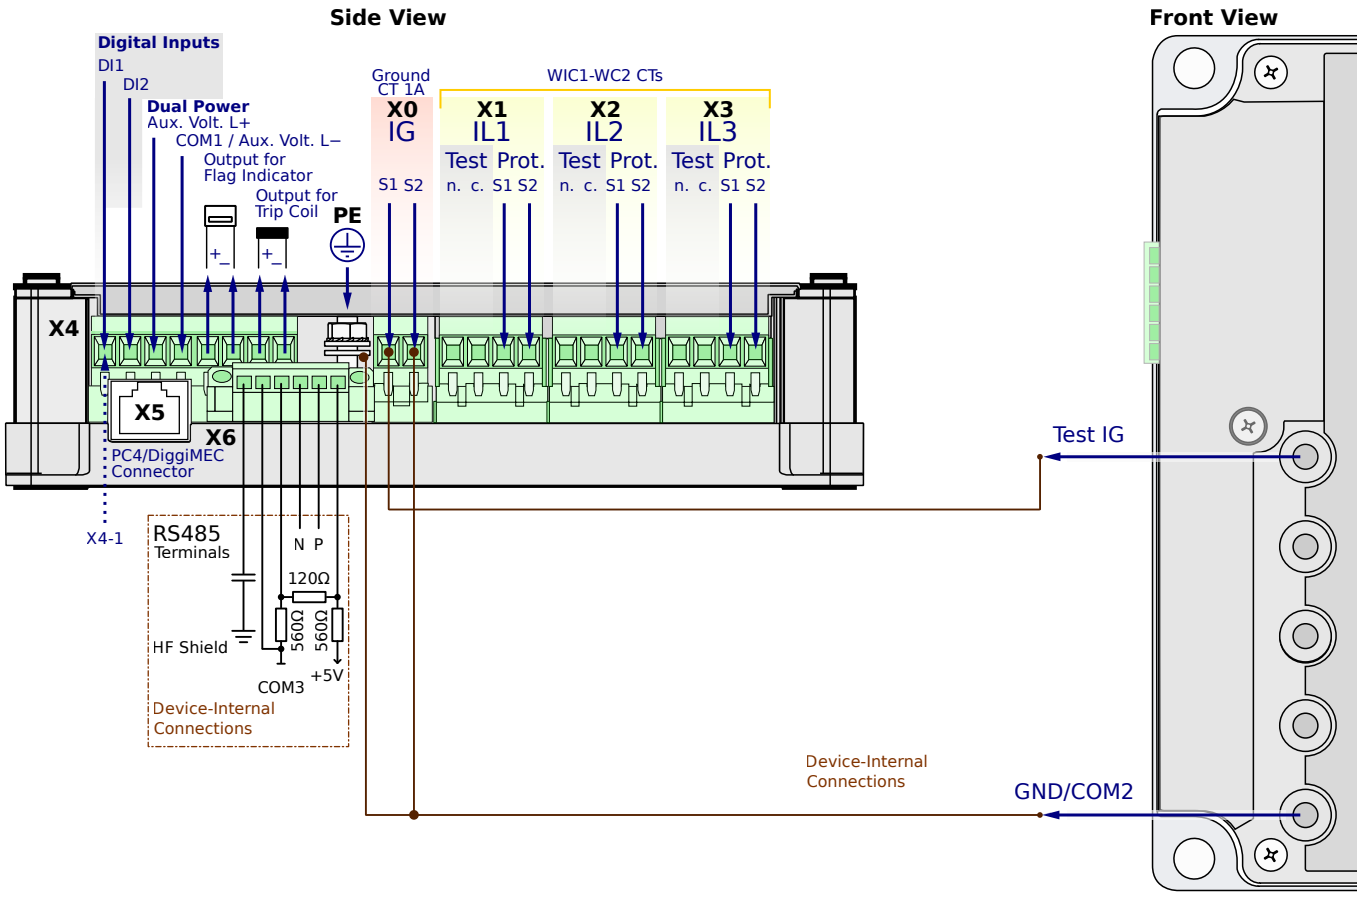


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1SBH

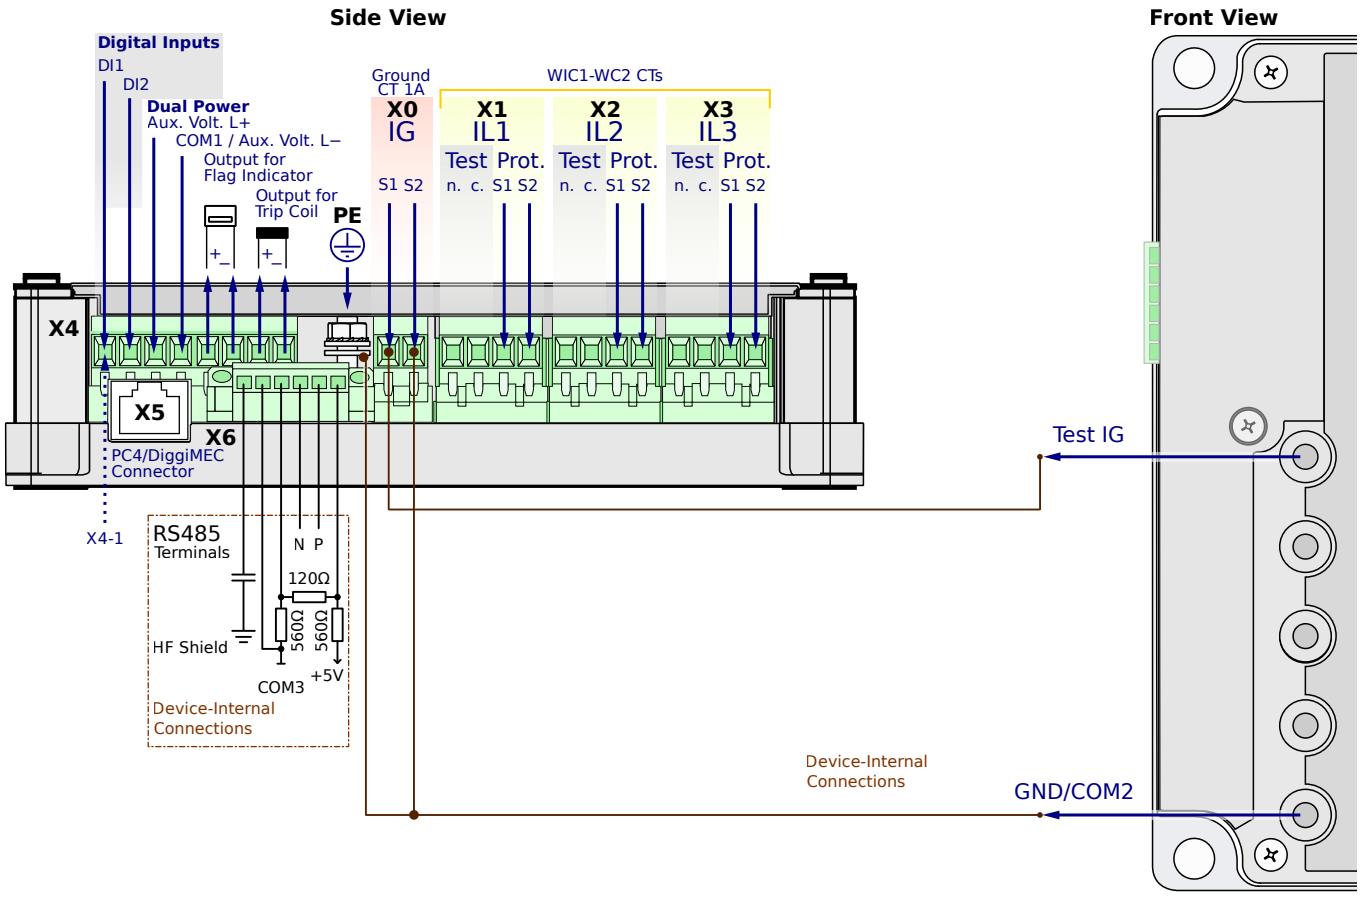


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1SC0

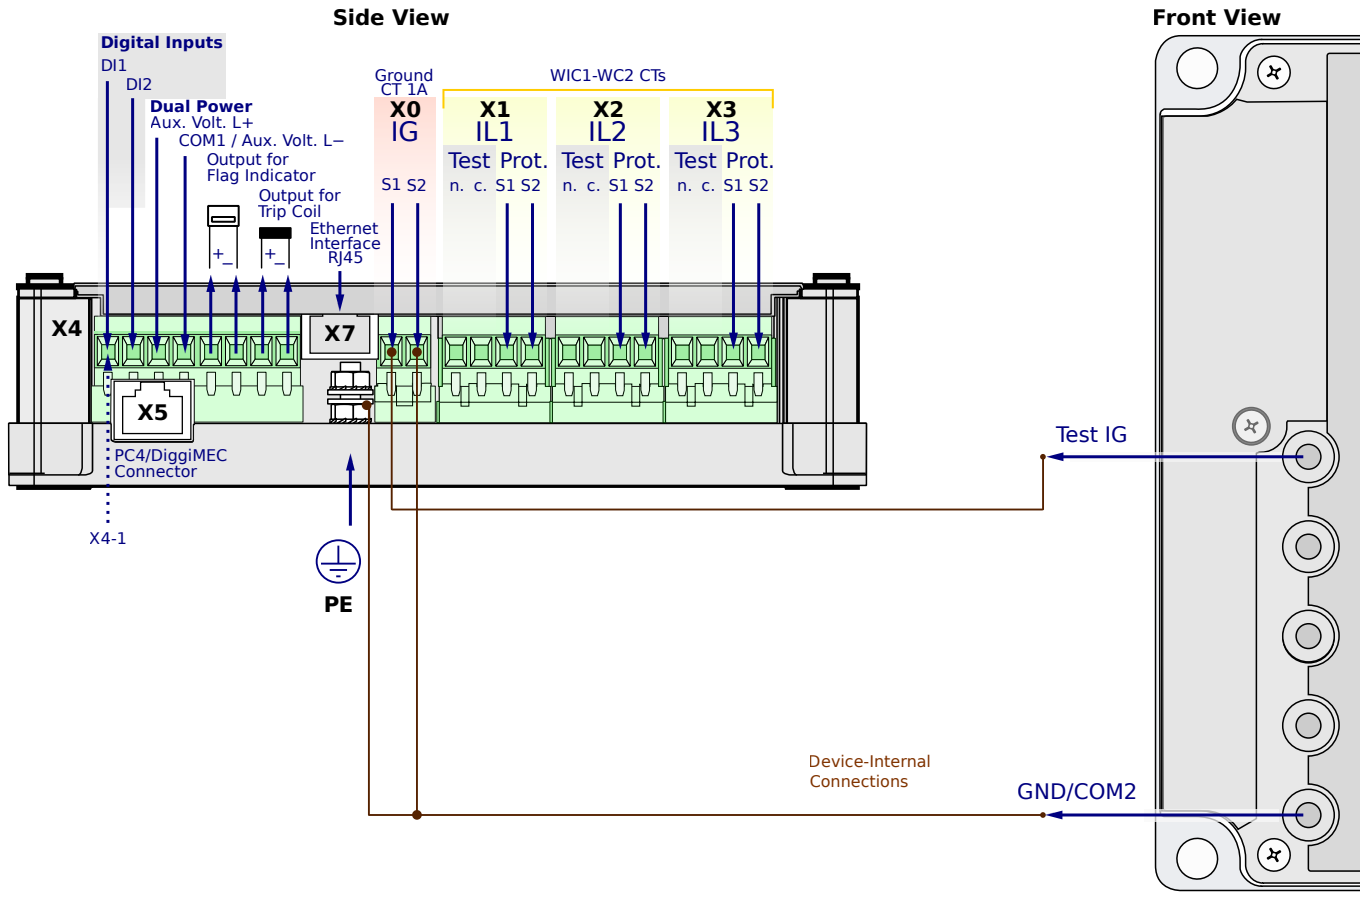


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1SCH

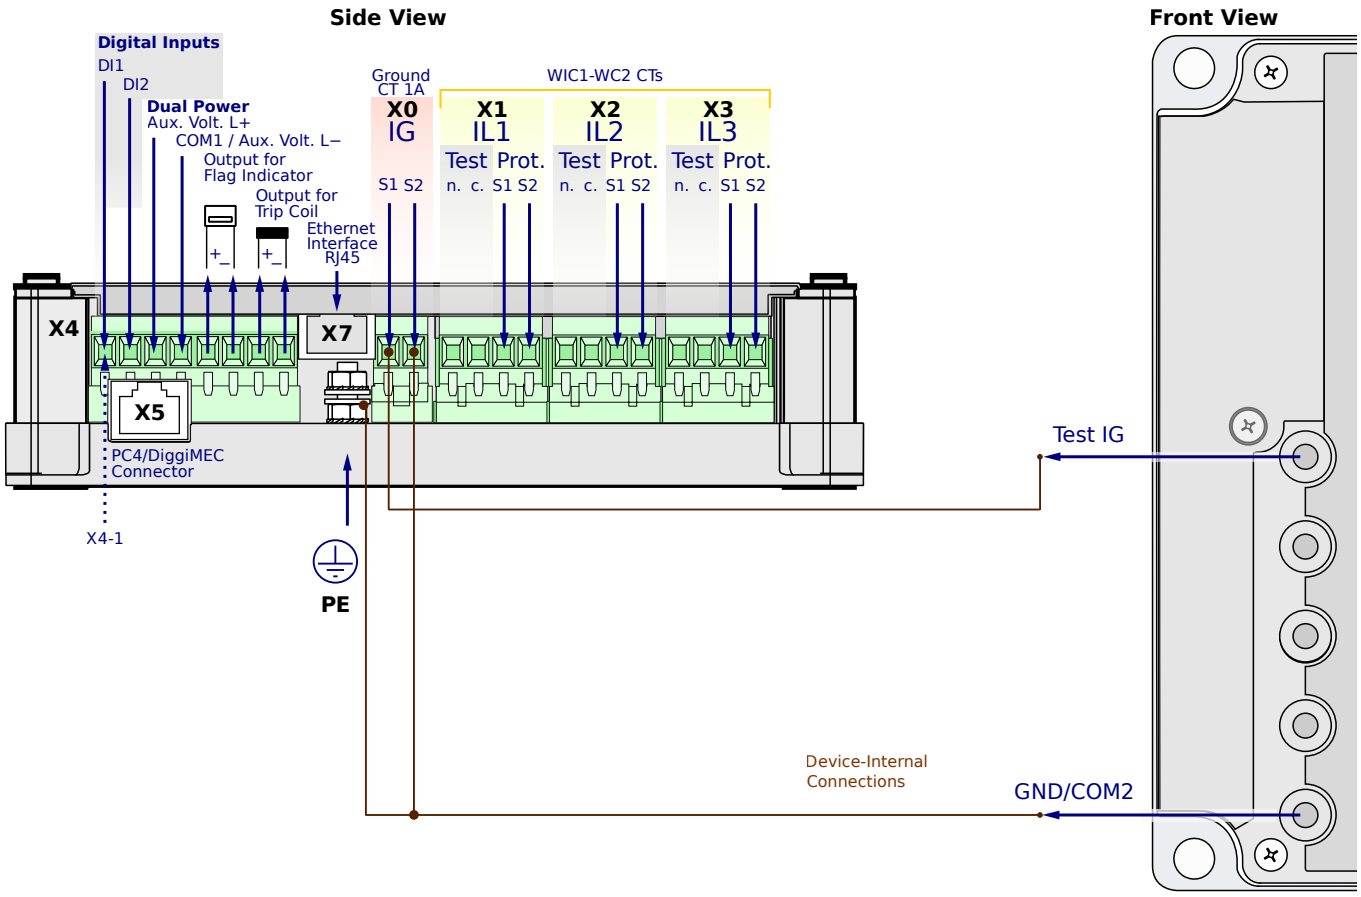


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1SL0

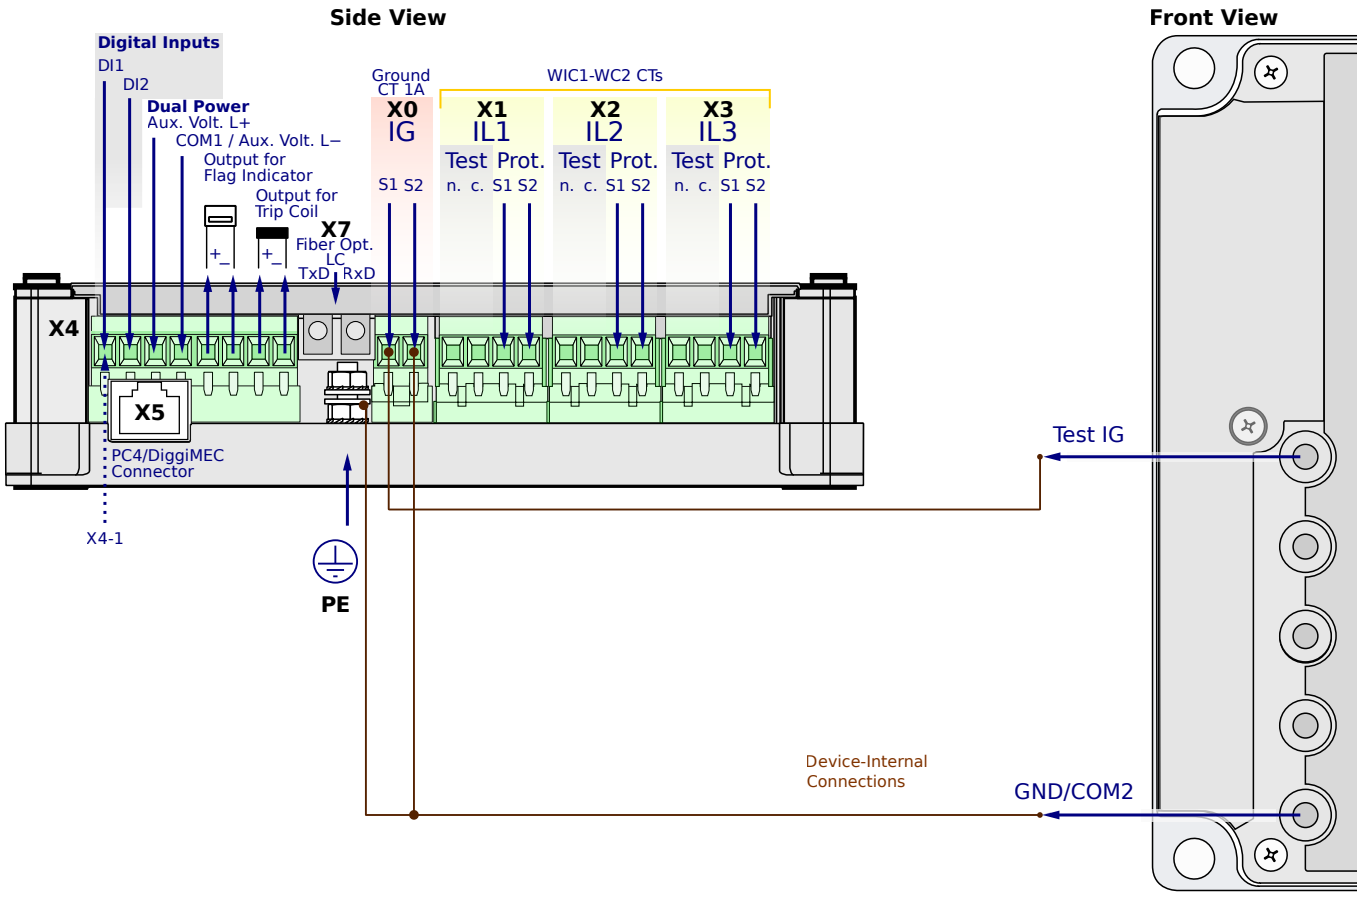


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1SLH

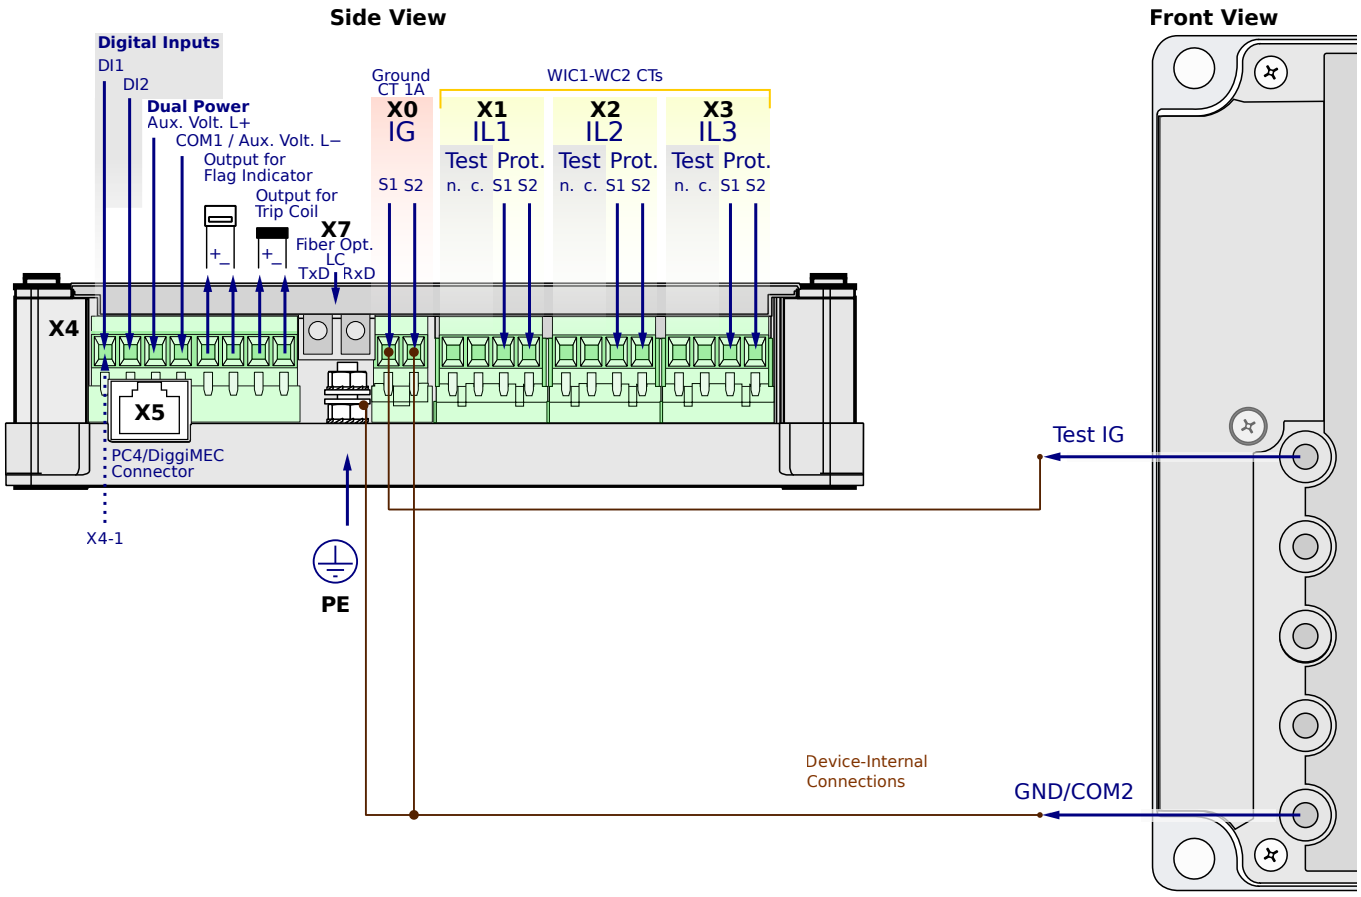


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1AA0

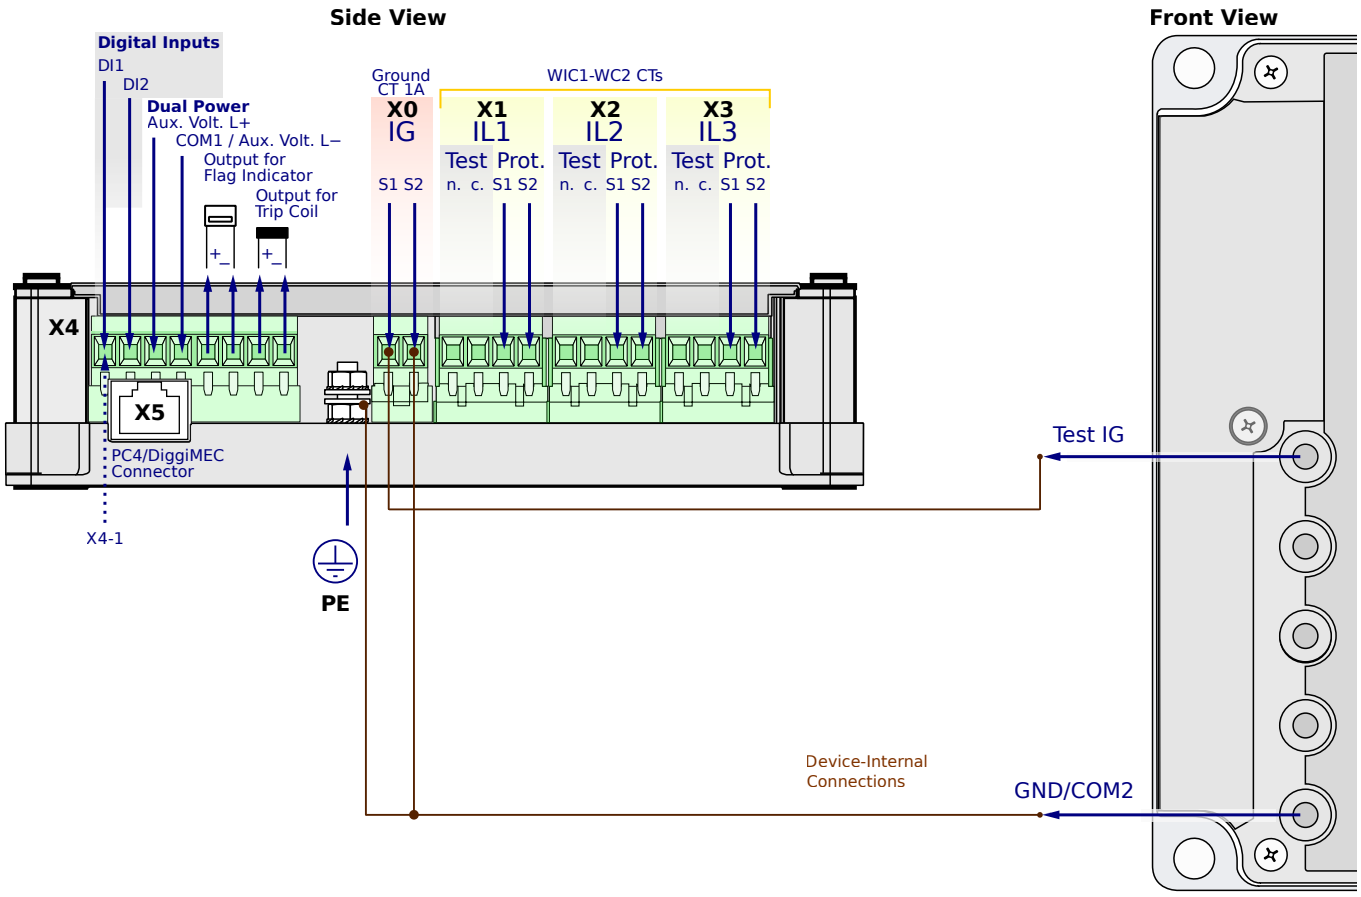


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1AAH

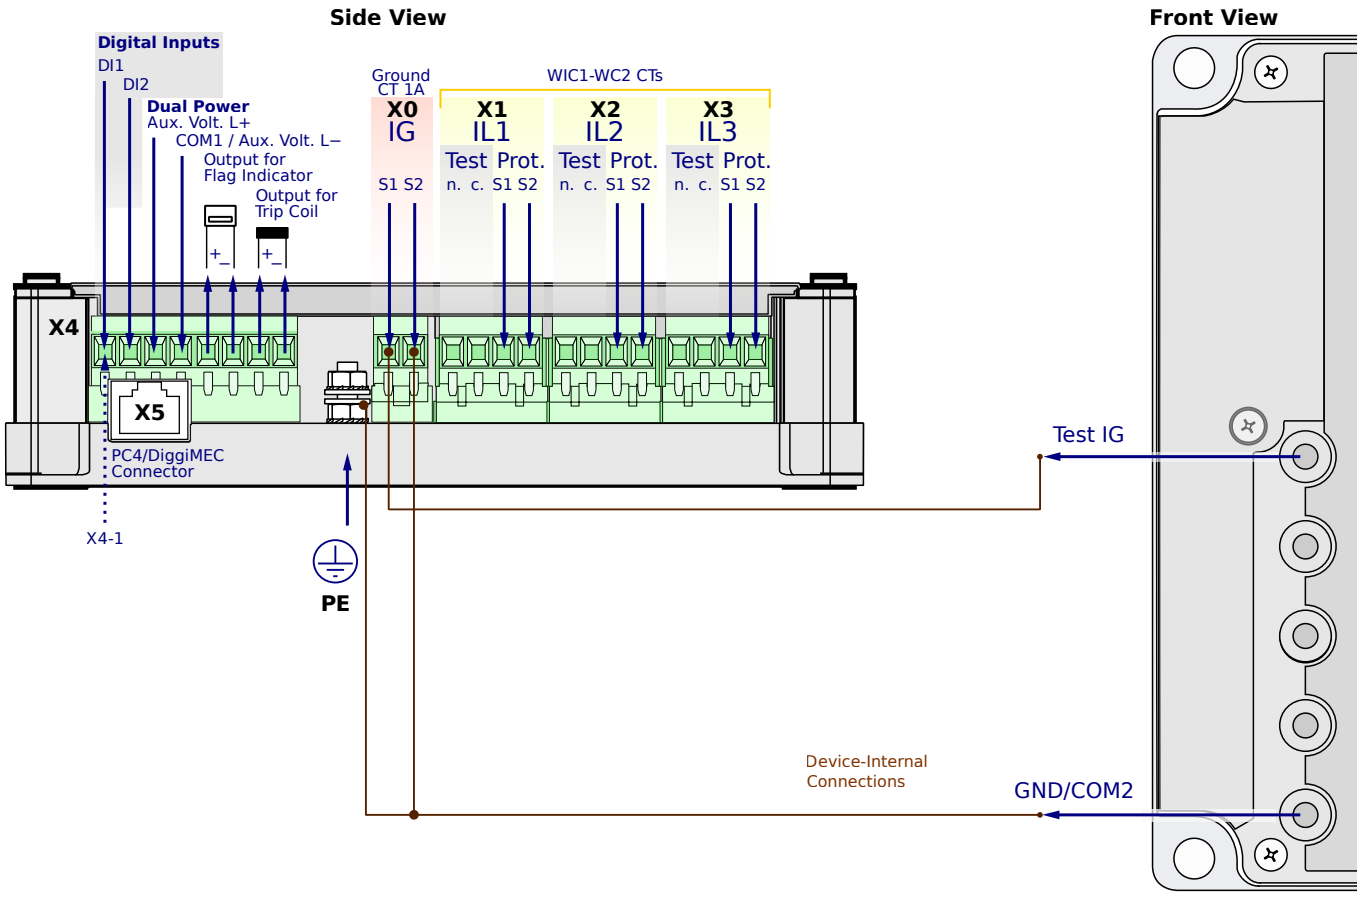


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1AB0

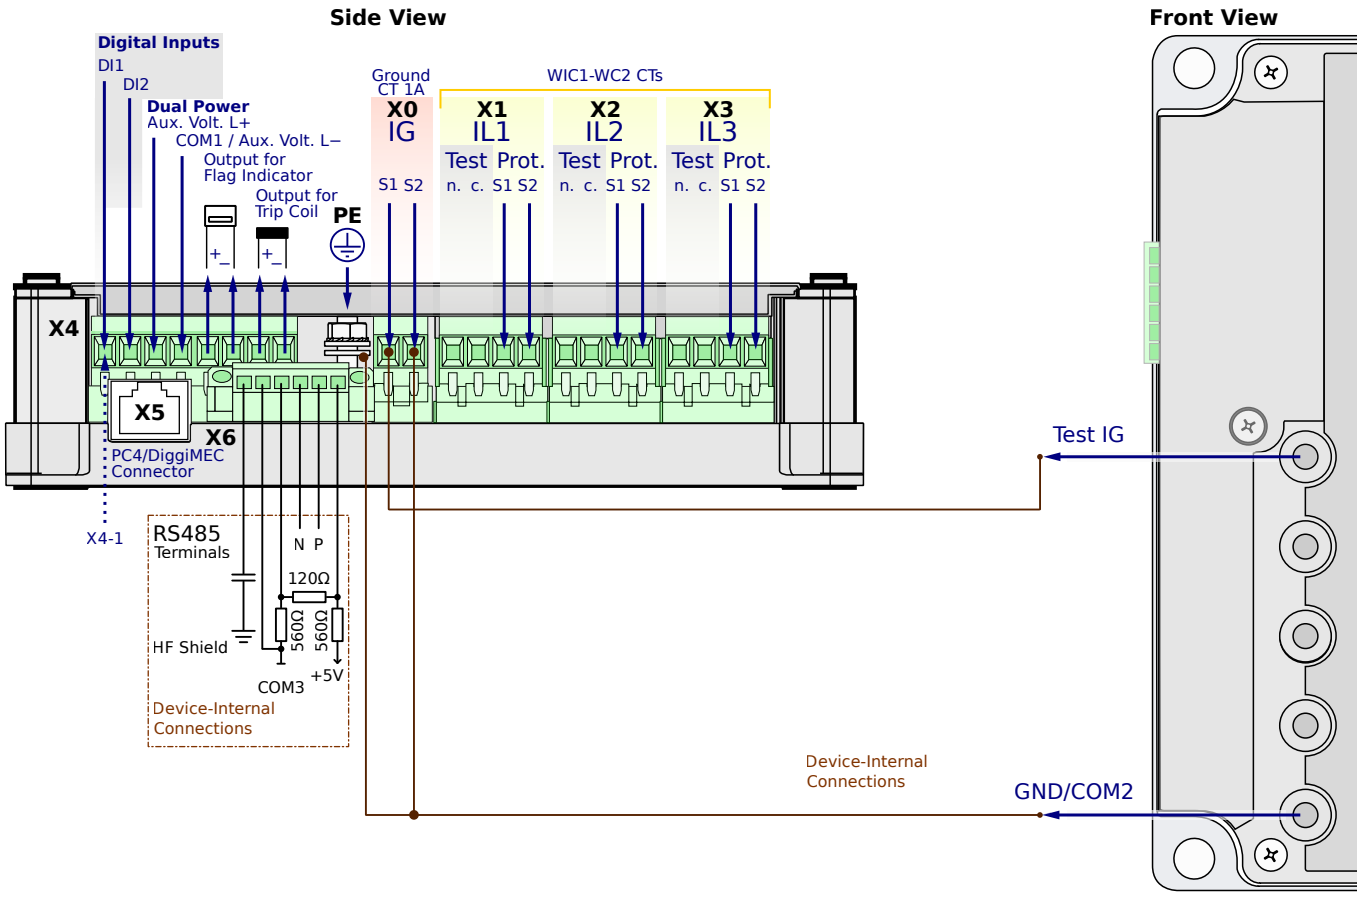


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1ABH

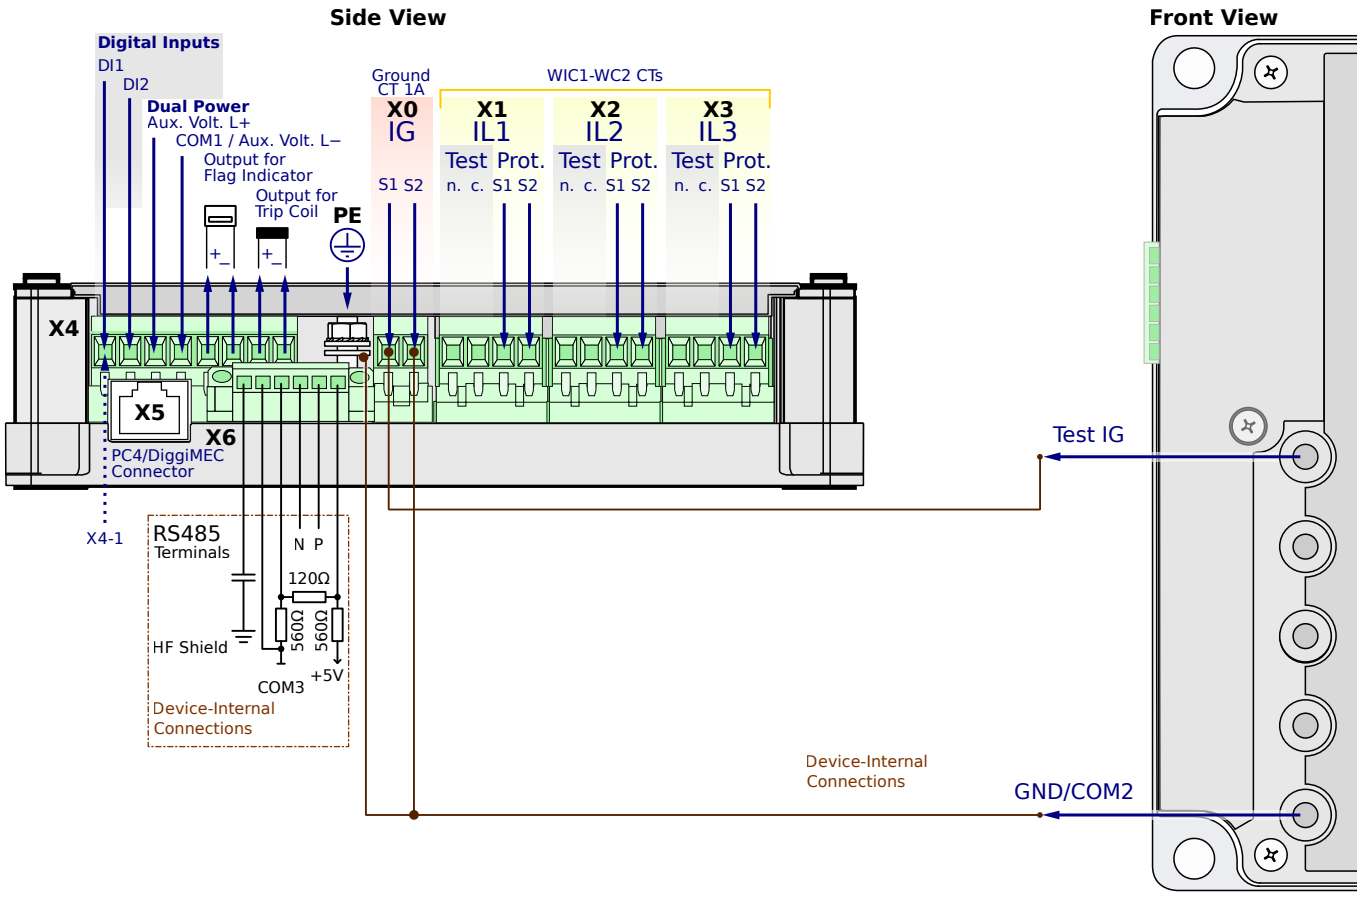


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1AC0

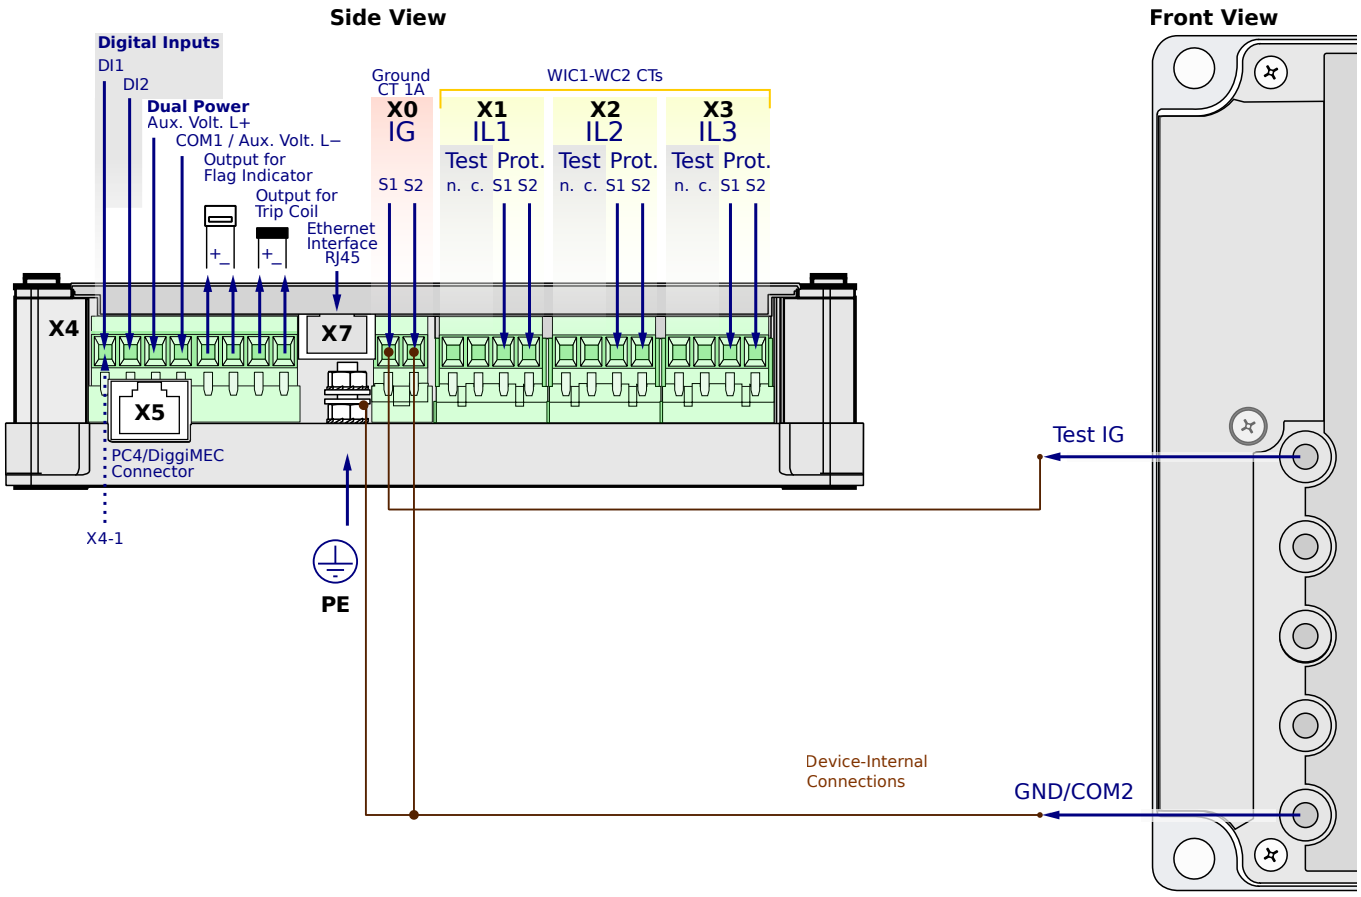


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1ACH

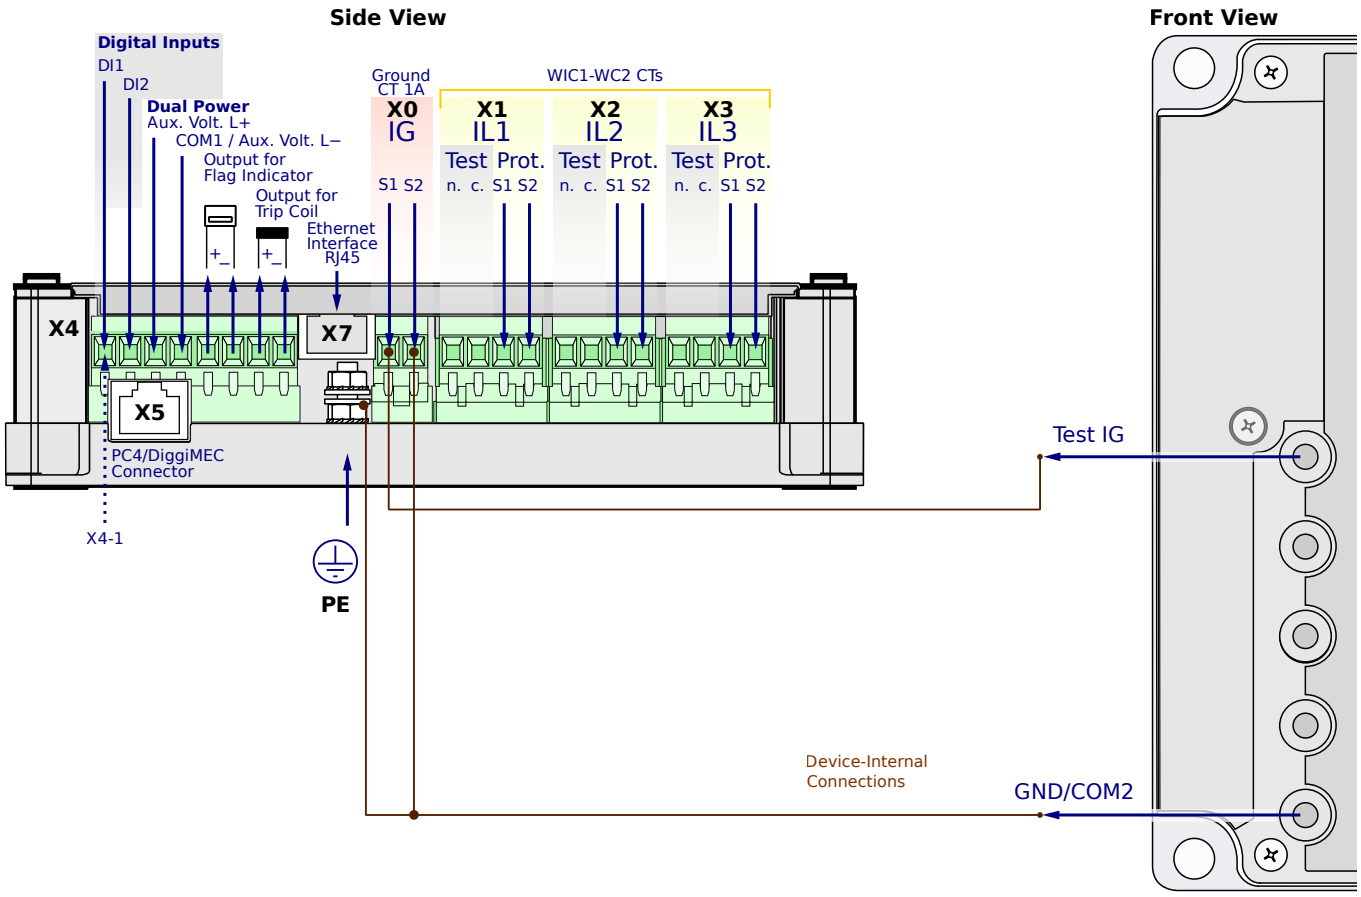


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1AL0

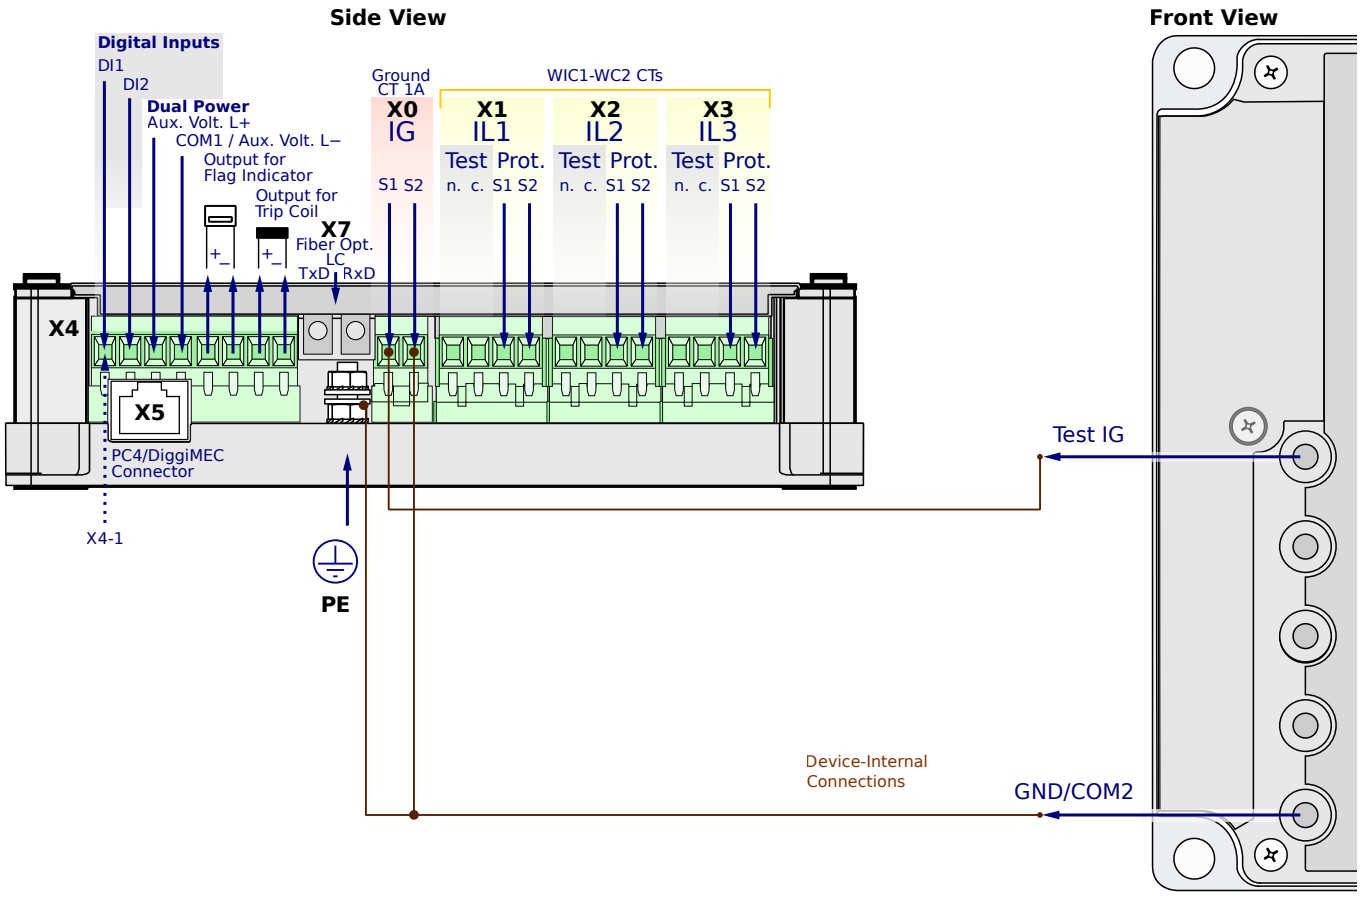


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1ALH

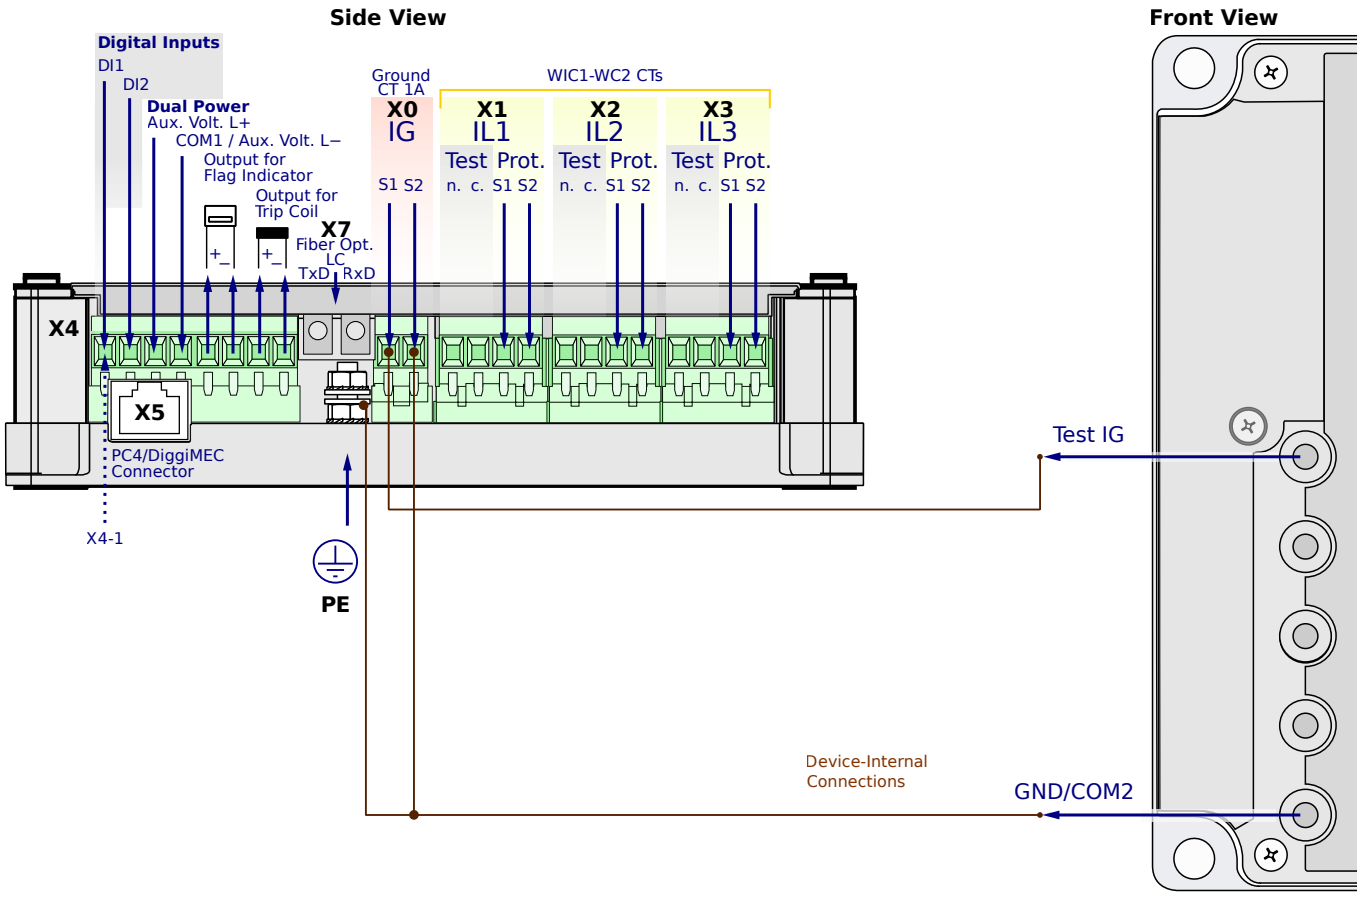


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1PA0

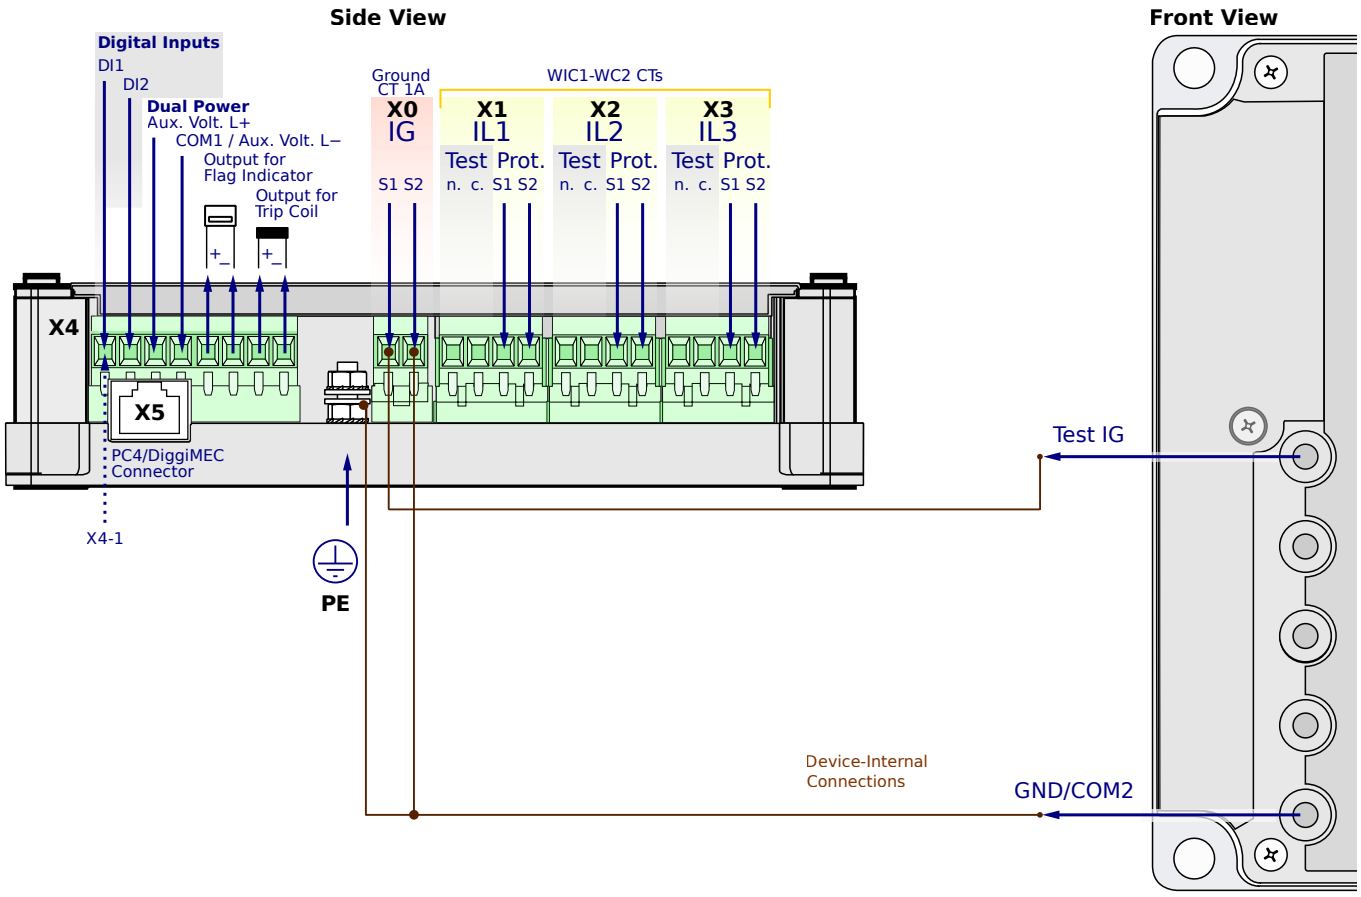


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1PAH

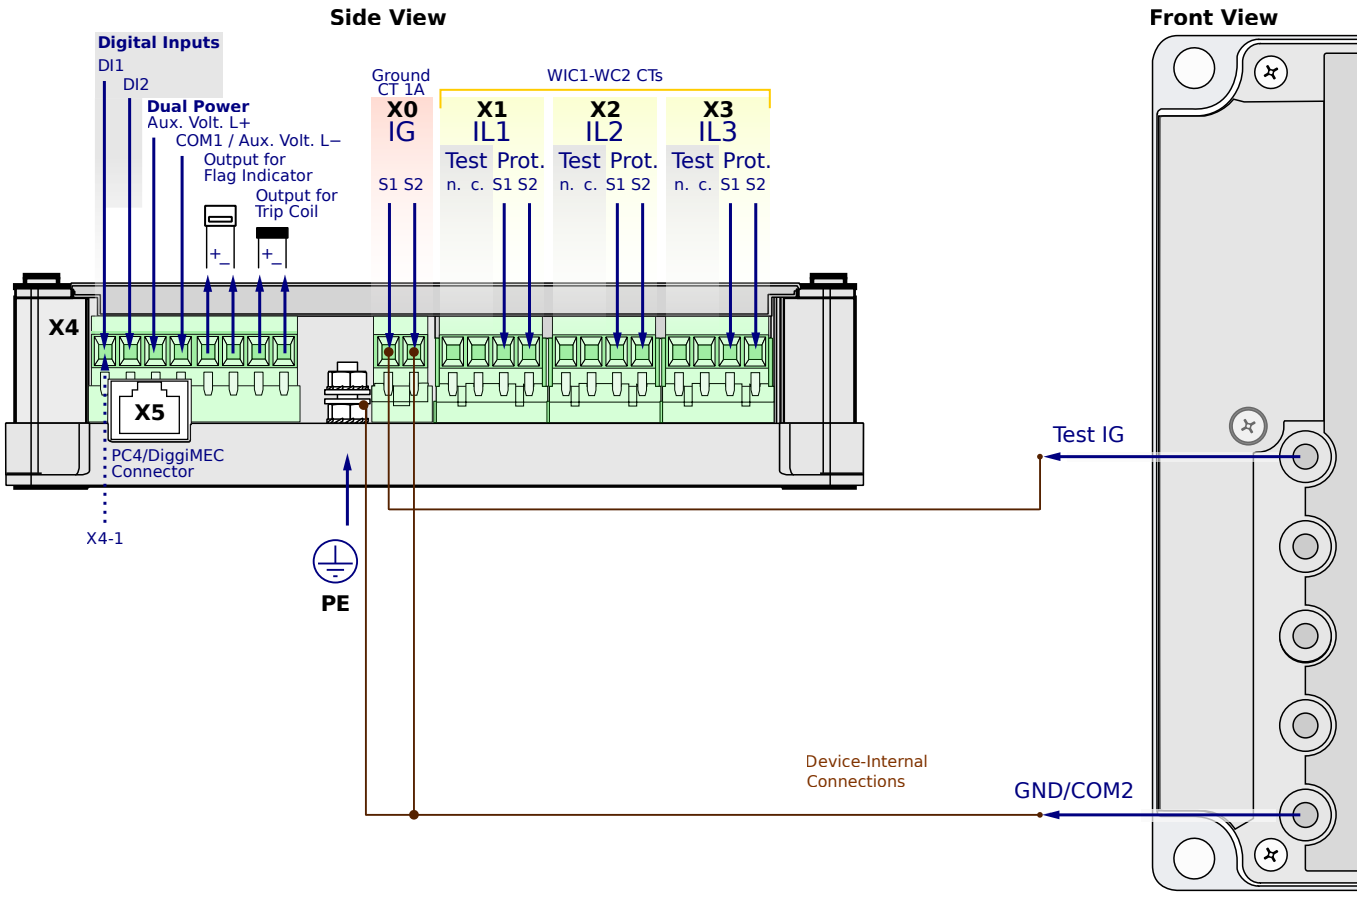


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD1PB0

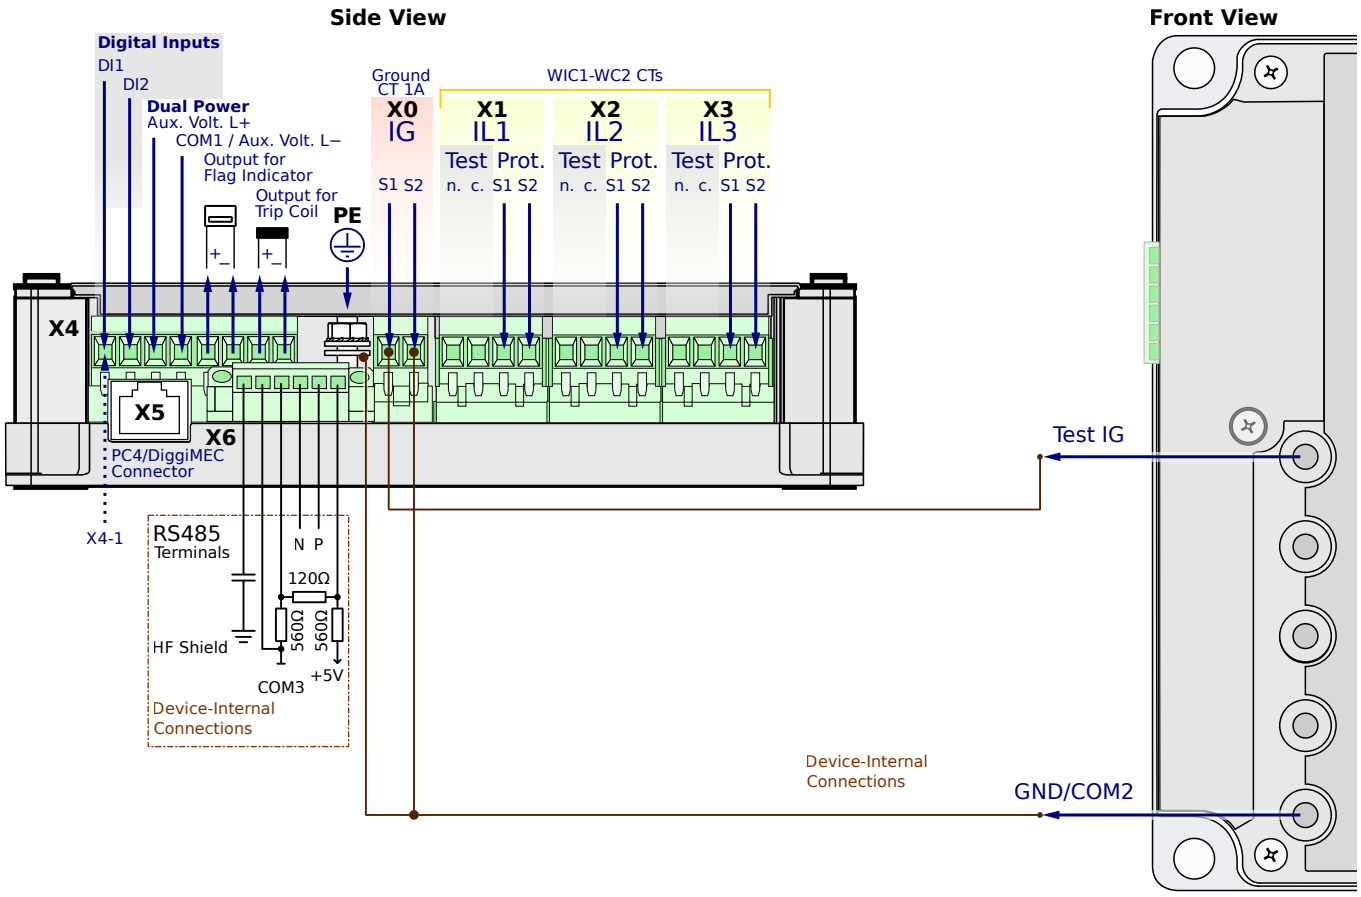


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1PBH

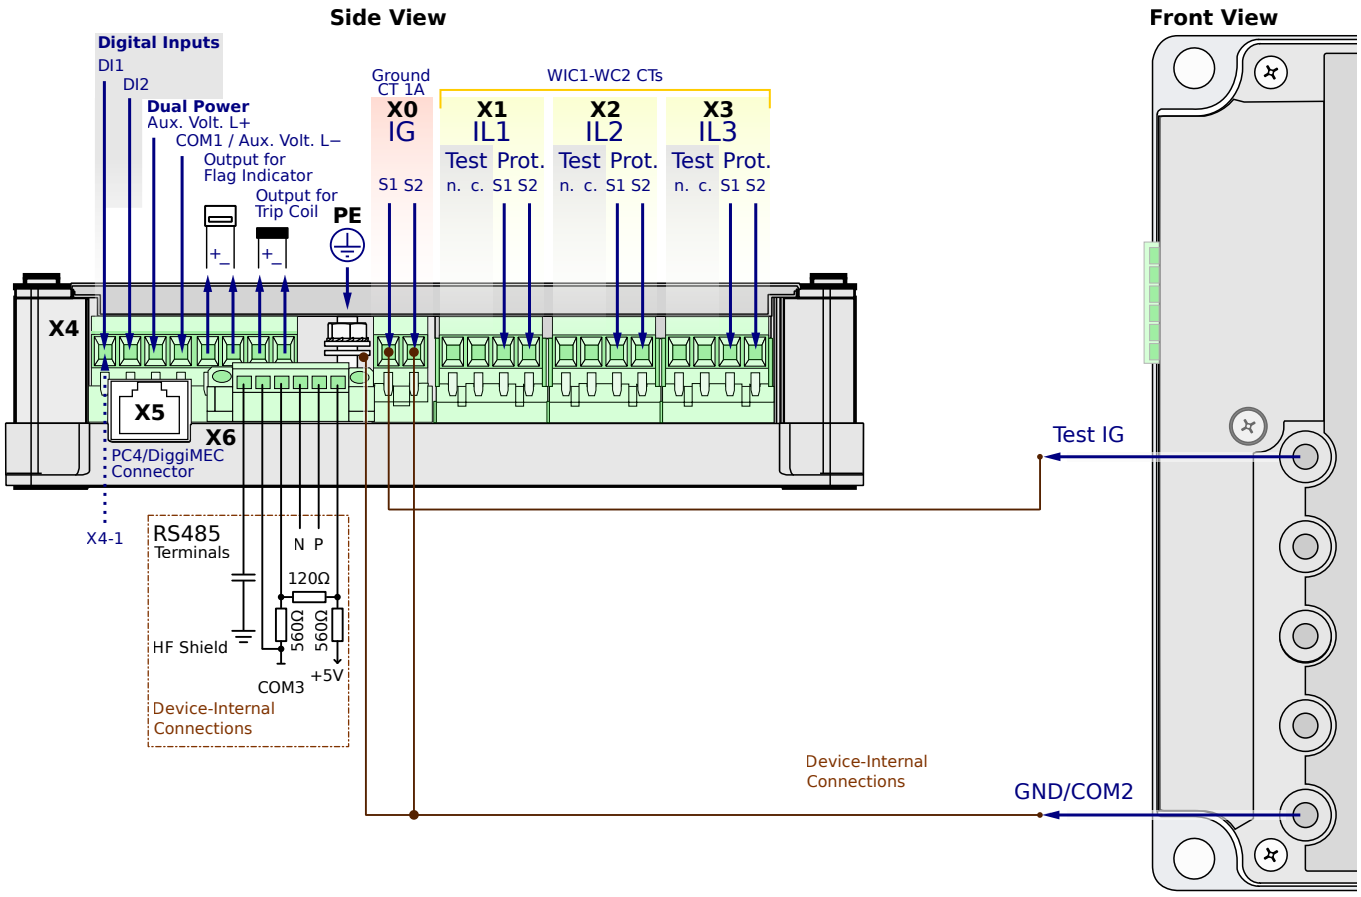


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD1PC0

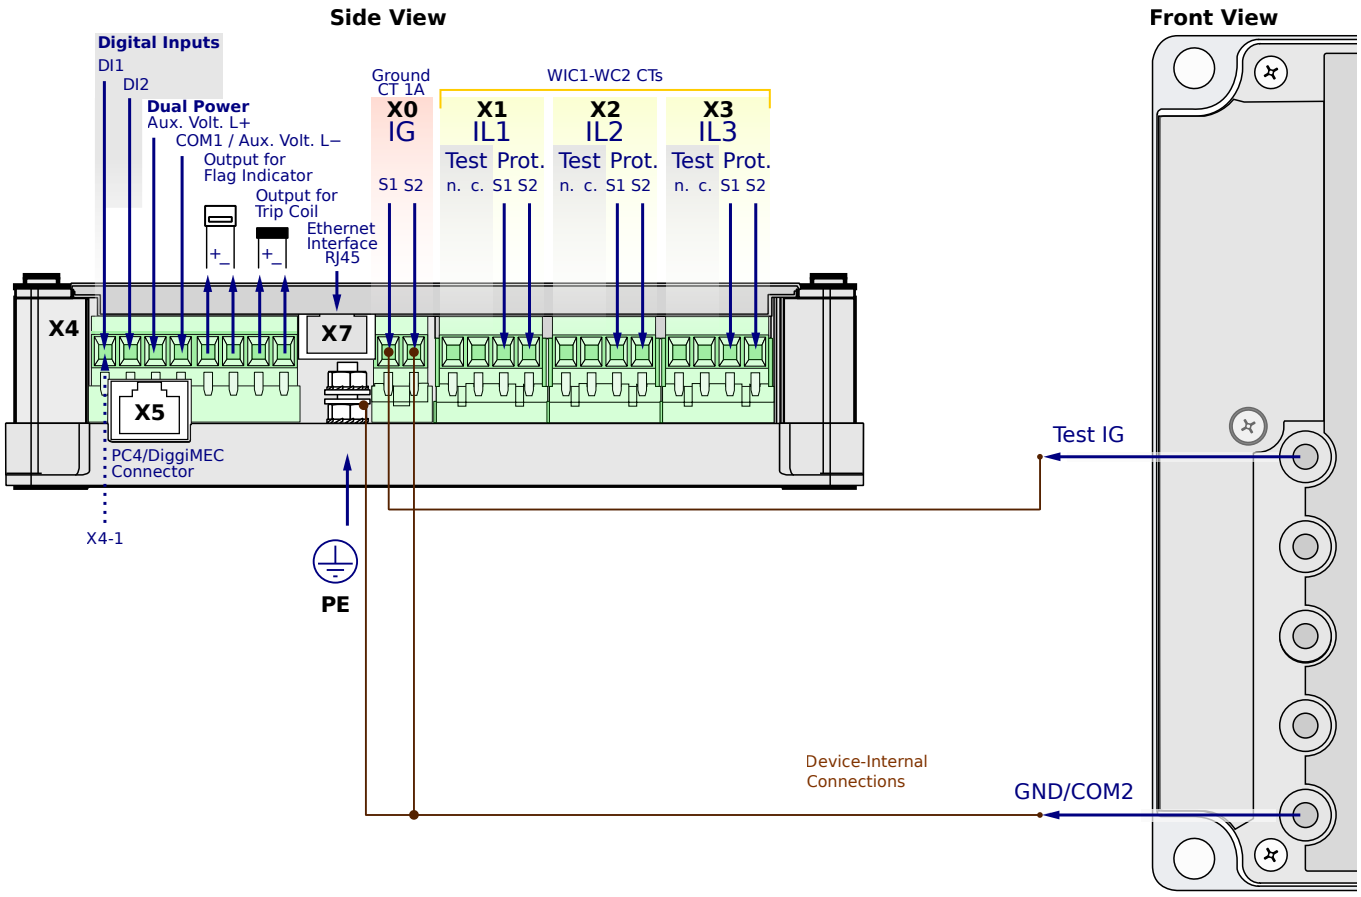


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1PCH

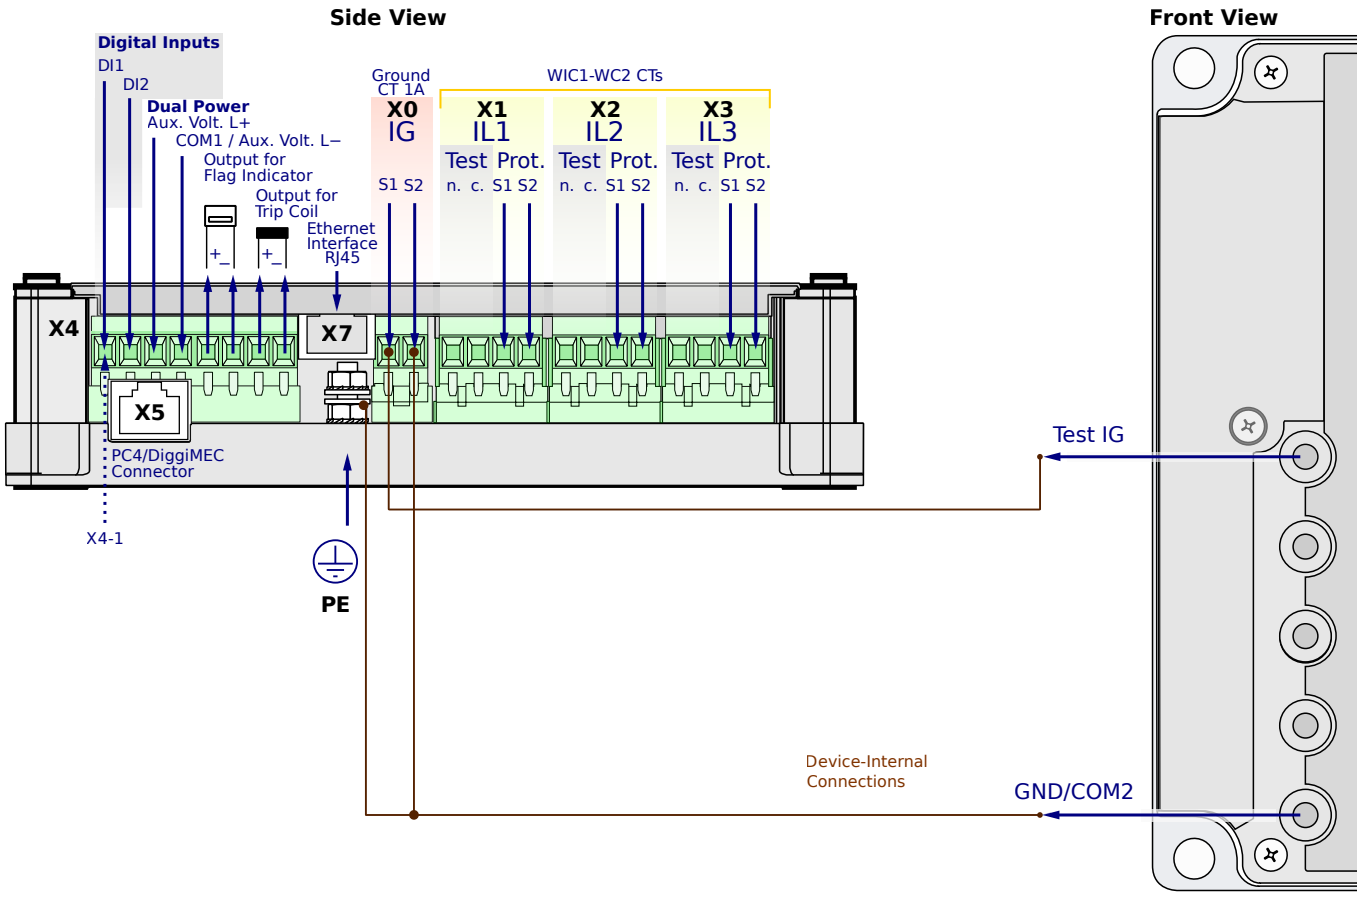


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD1PL0

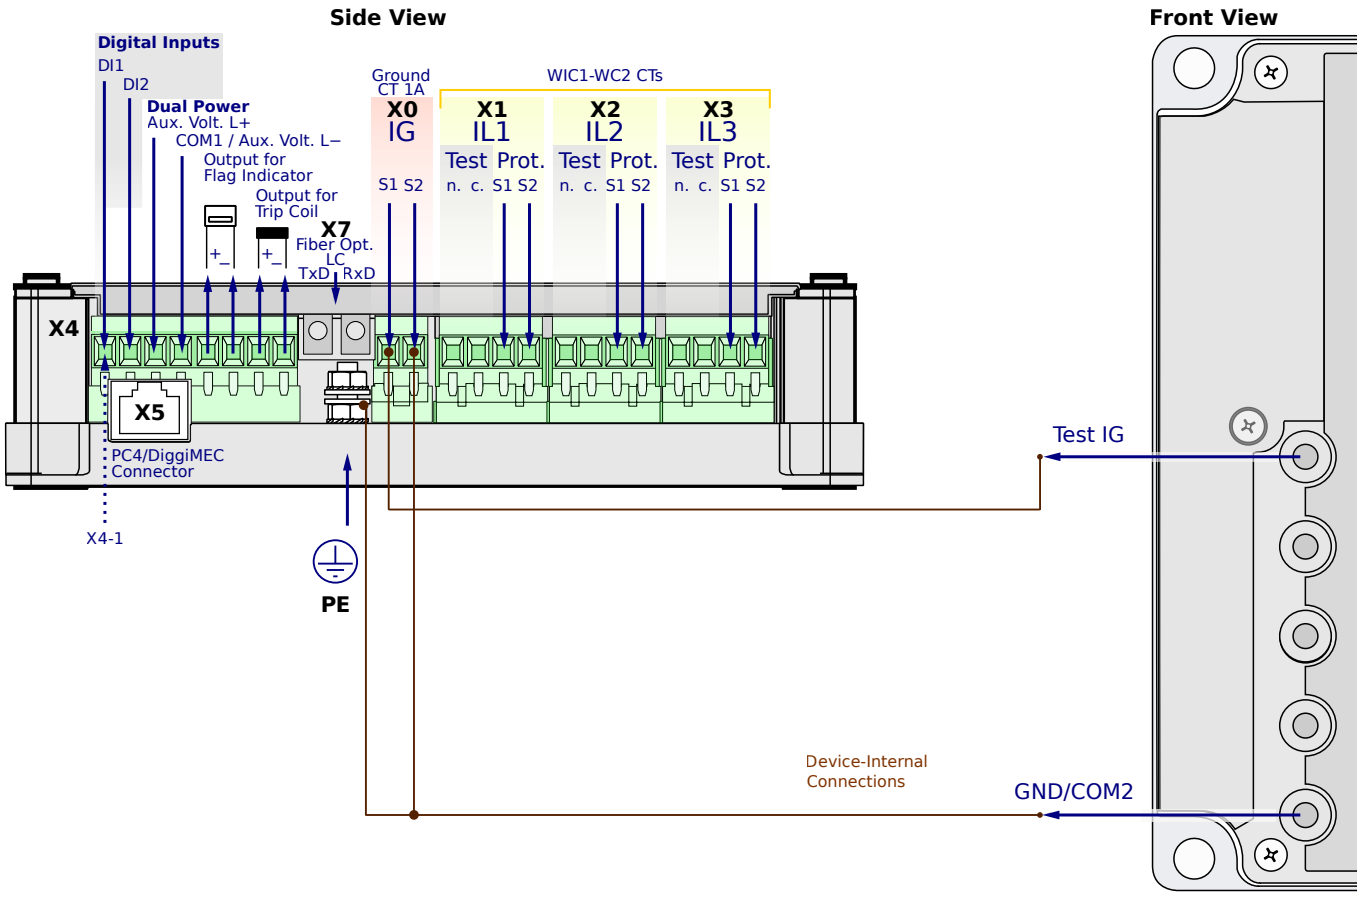


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD1PLH

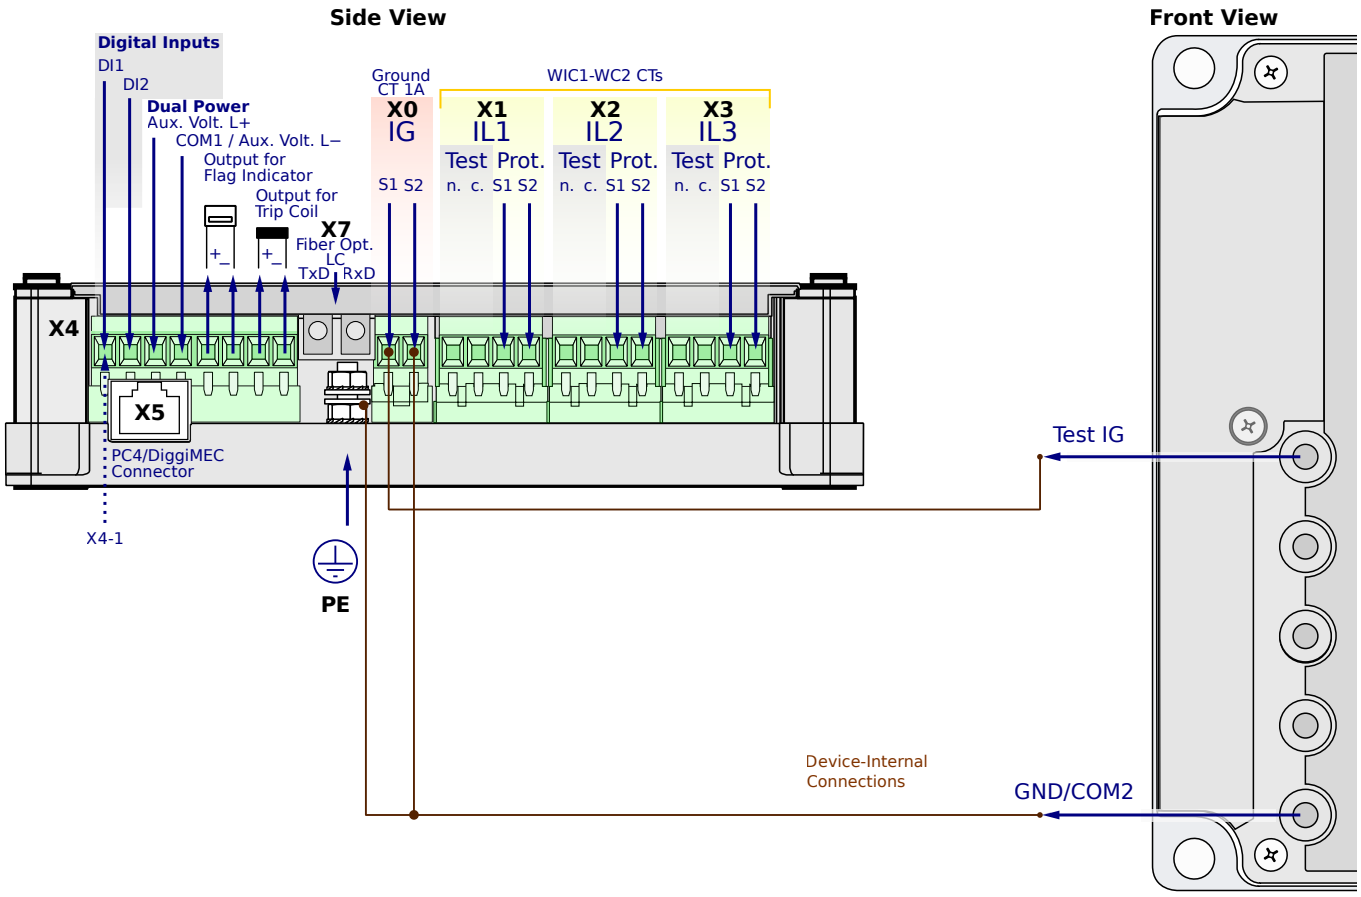


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2SA0

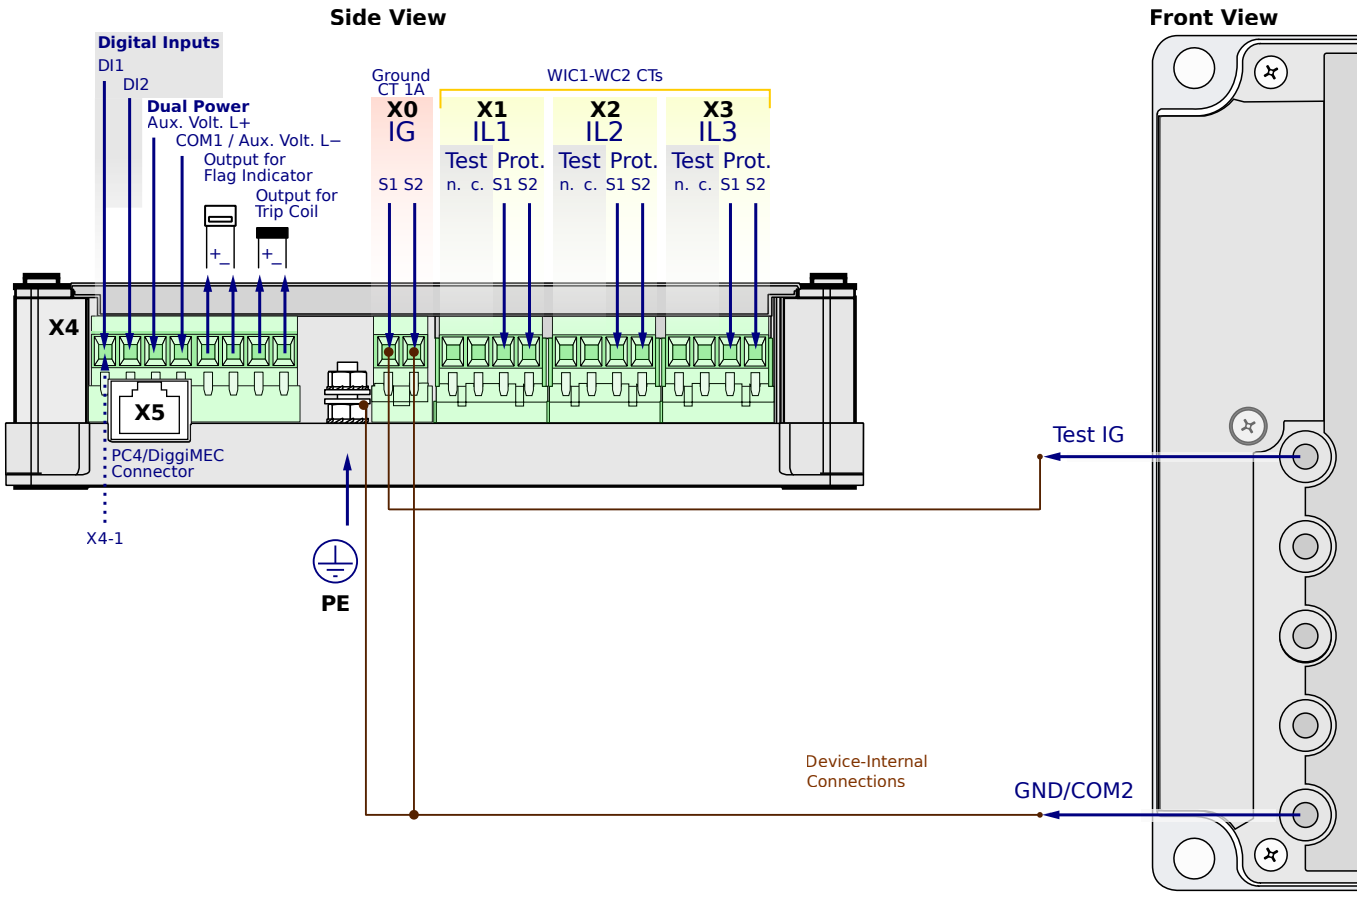


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2SAH

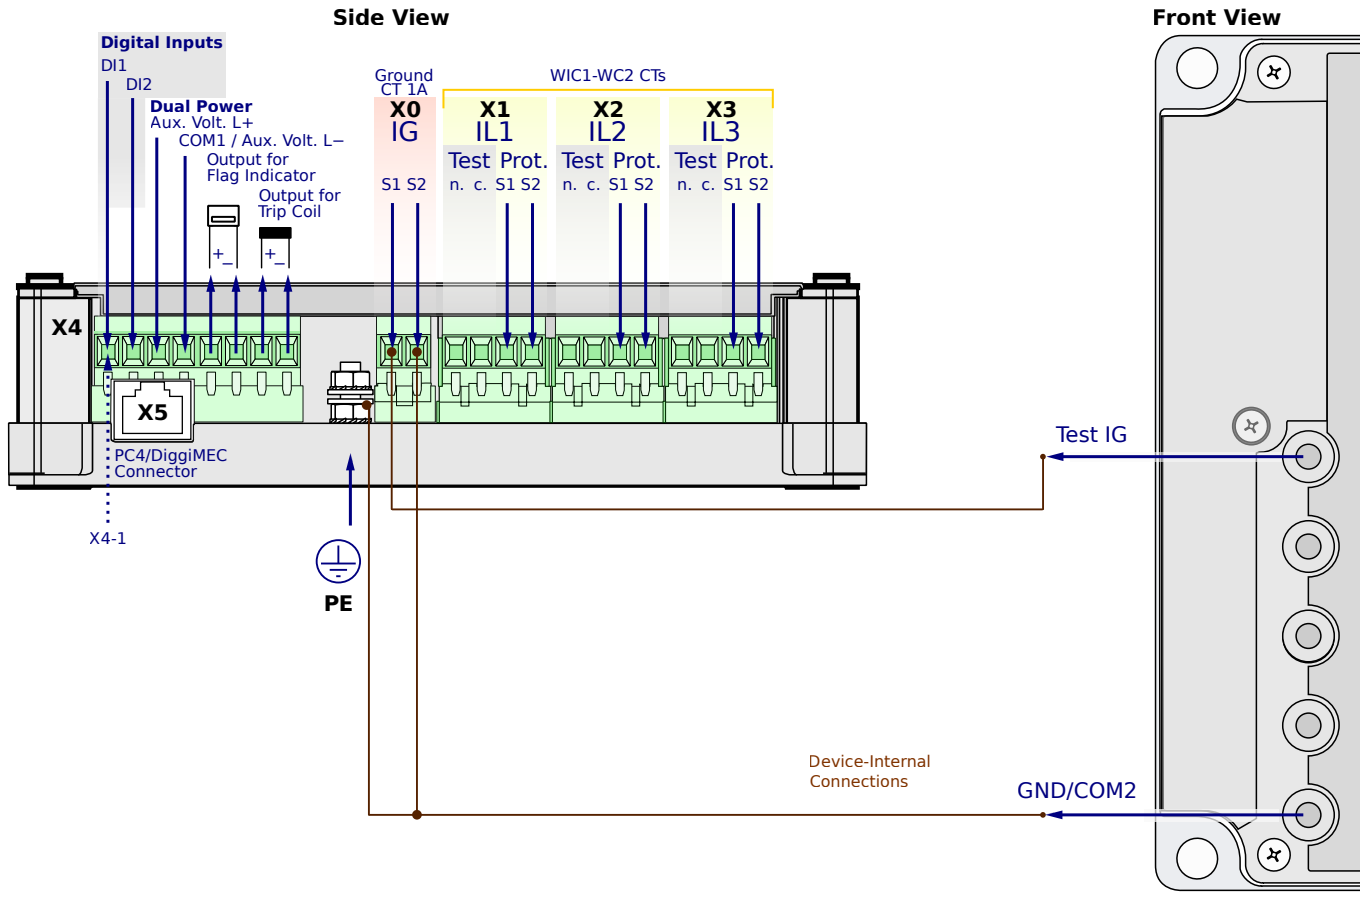


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2SB0

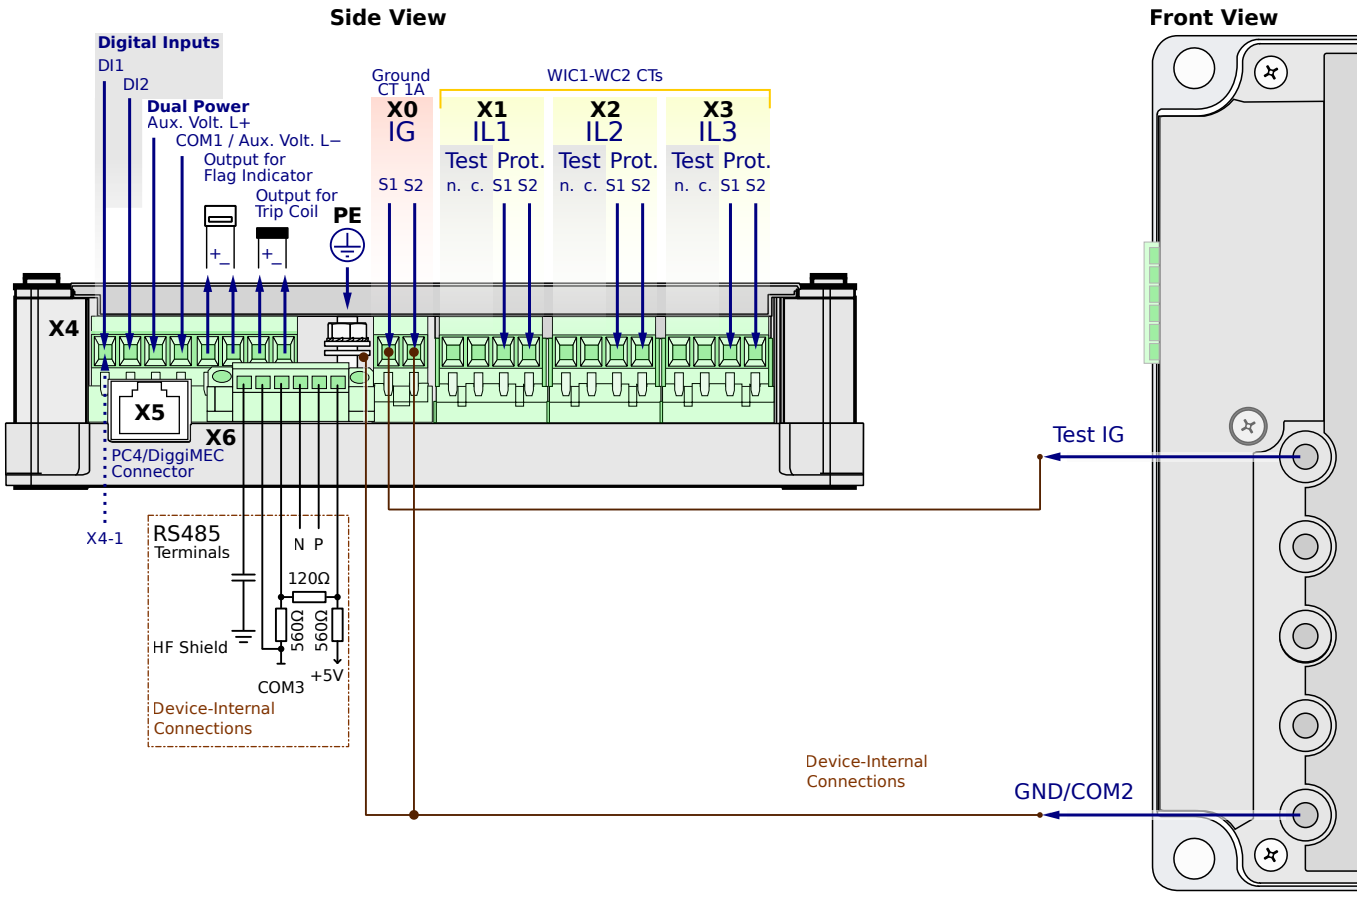


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2SBH

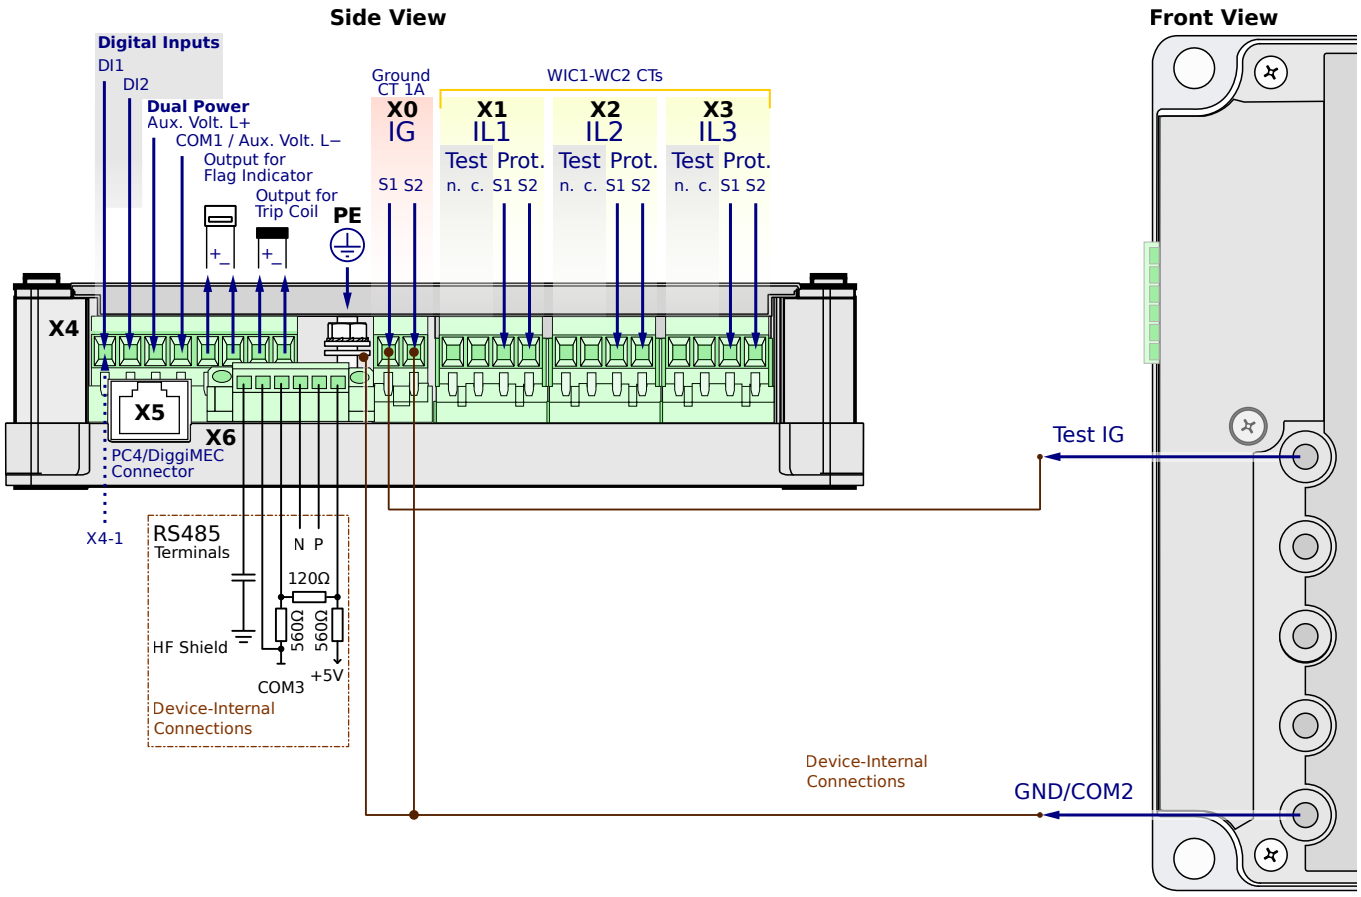


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2SC0

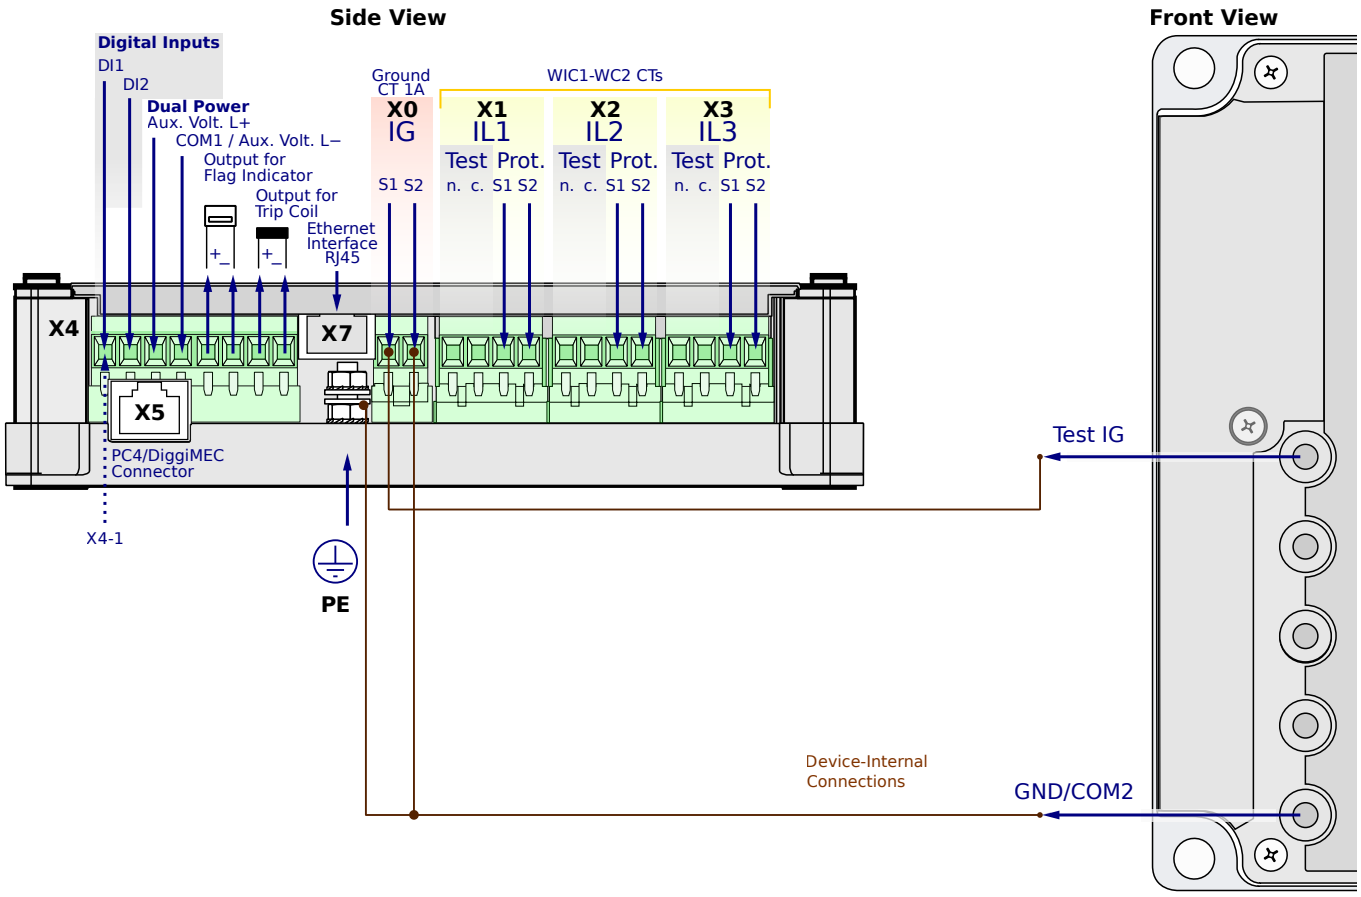


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2SCH

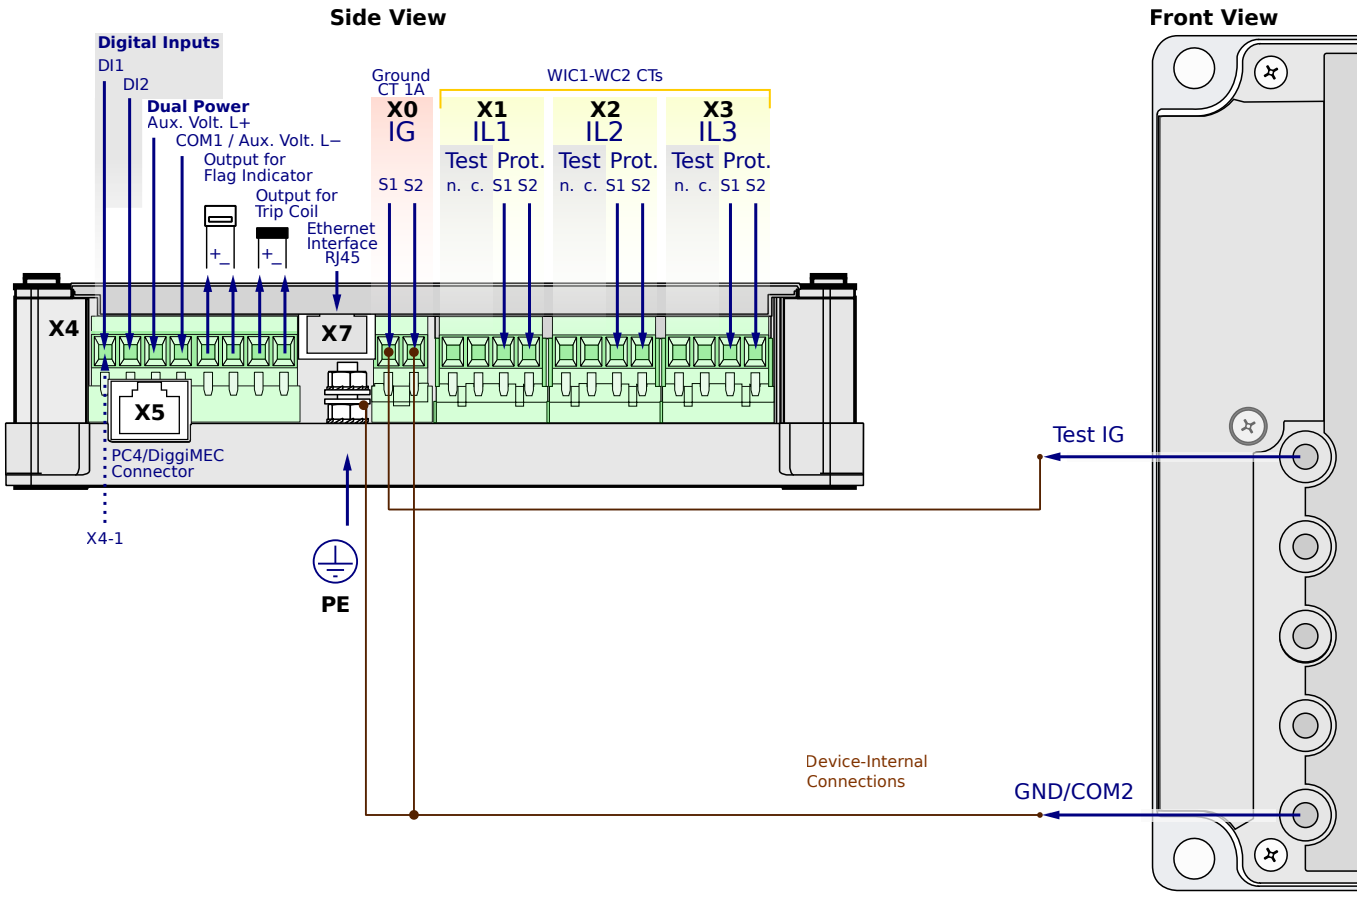


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2SL0

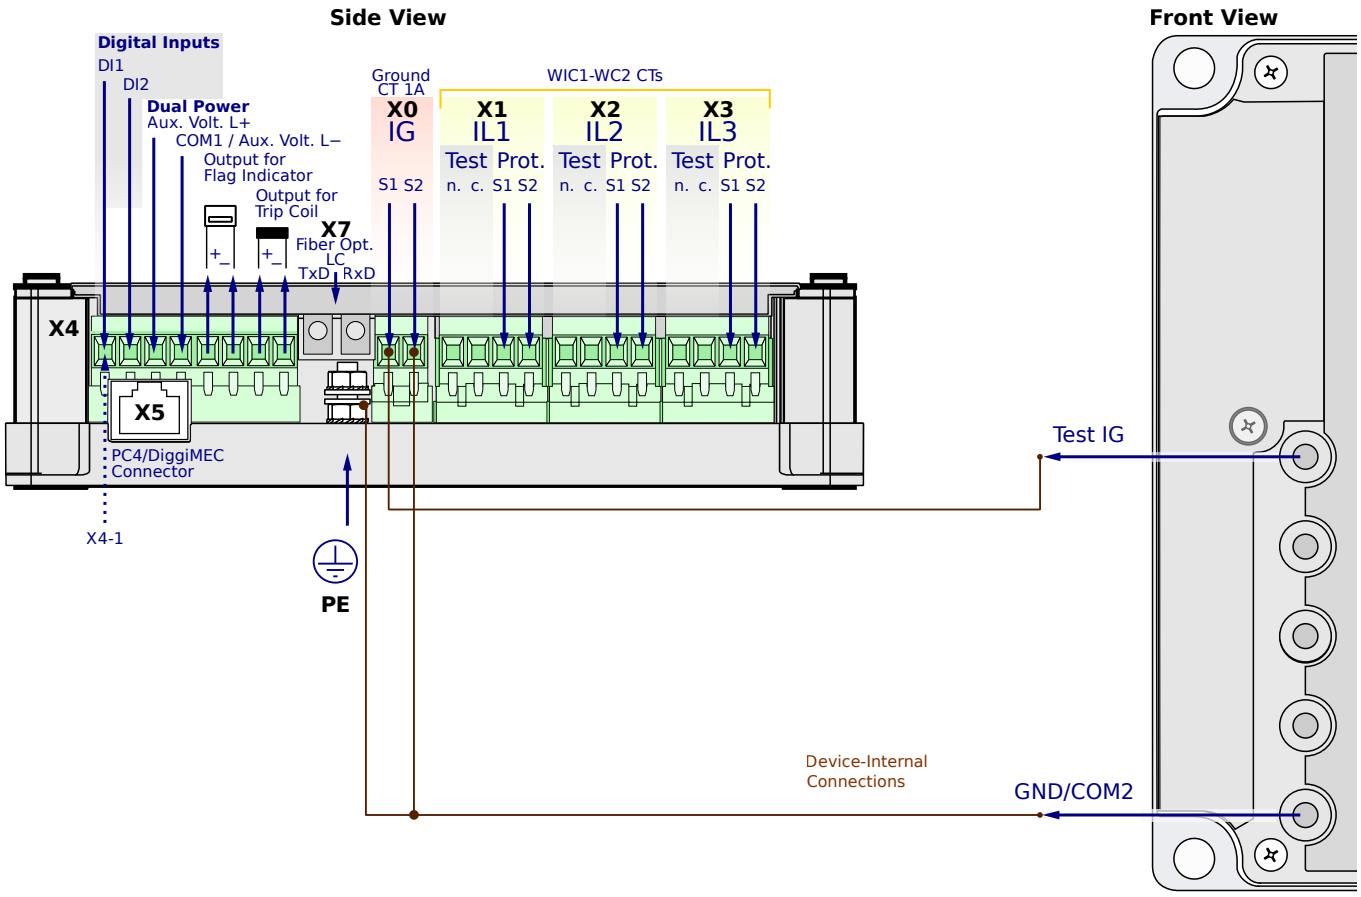


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2SLH

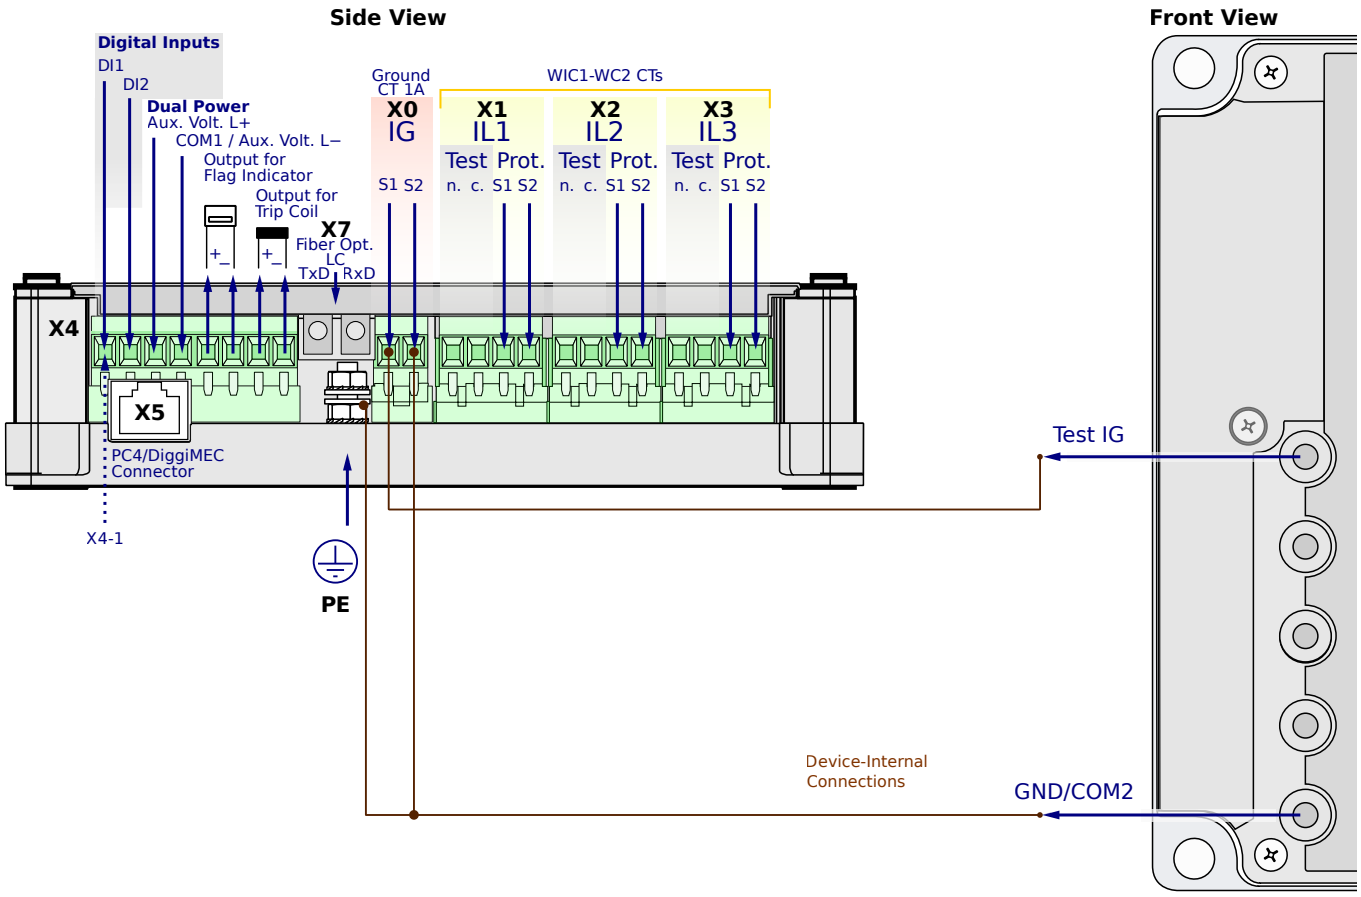


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2AA0

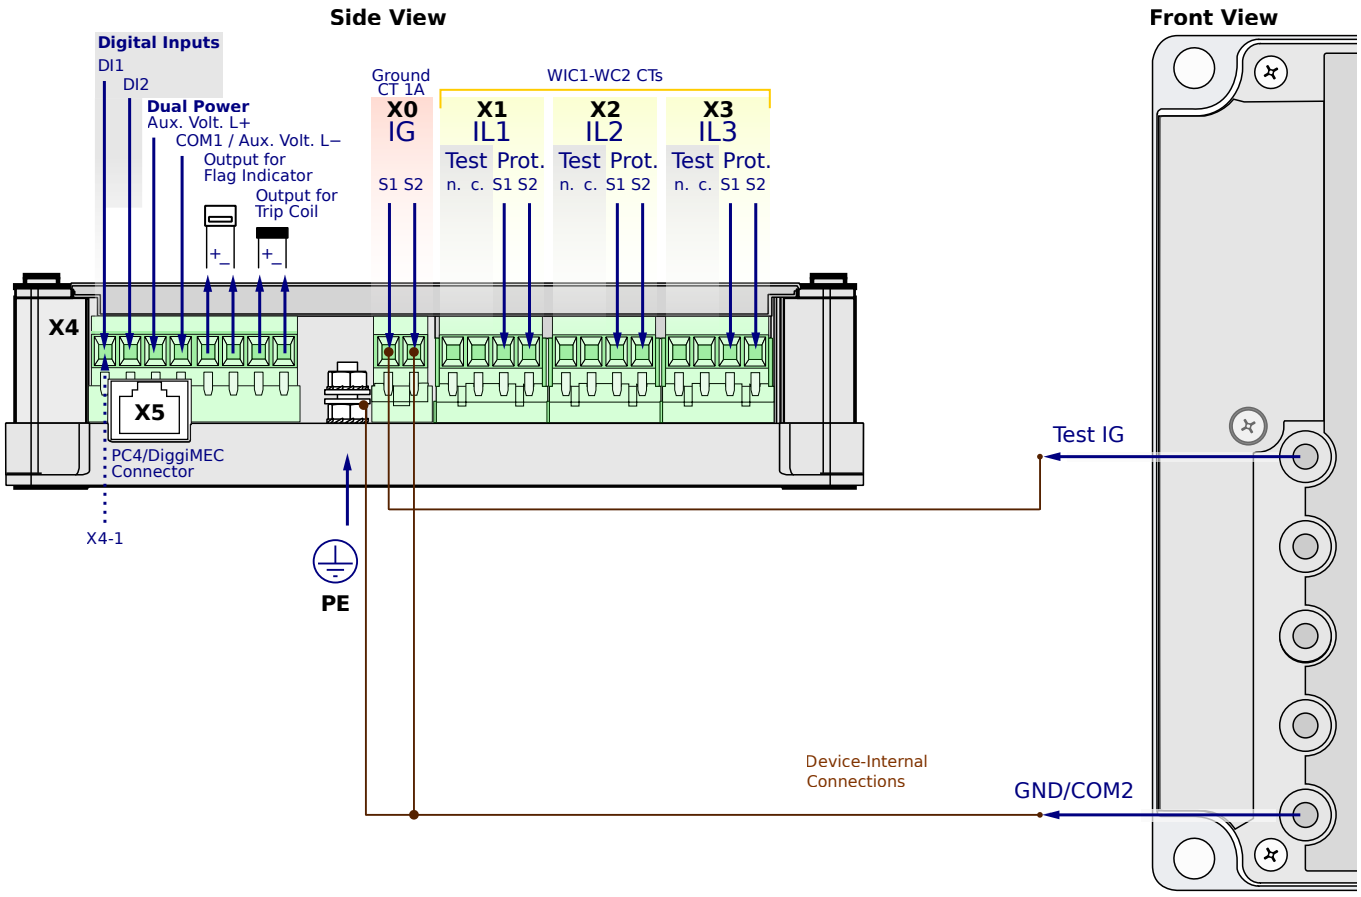


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2AAH

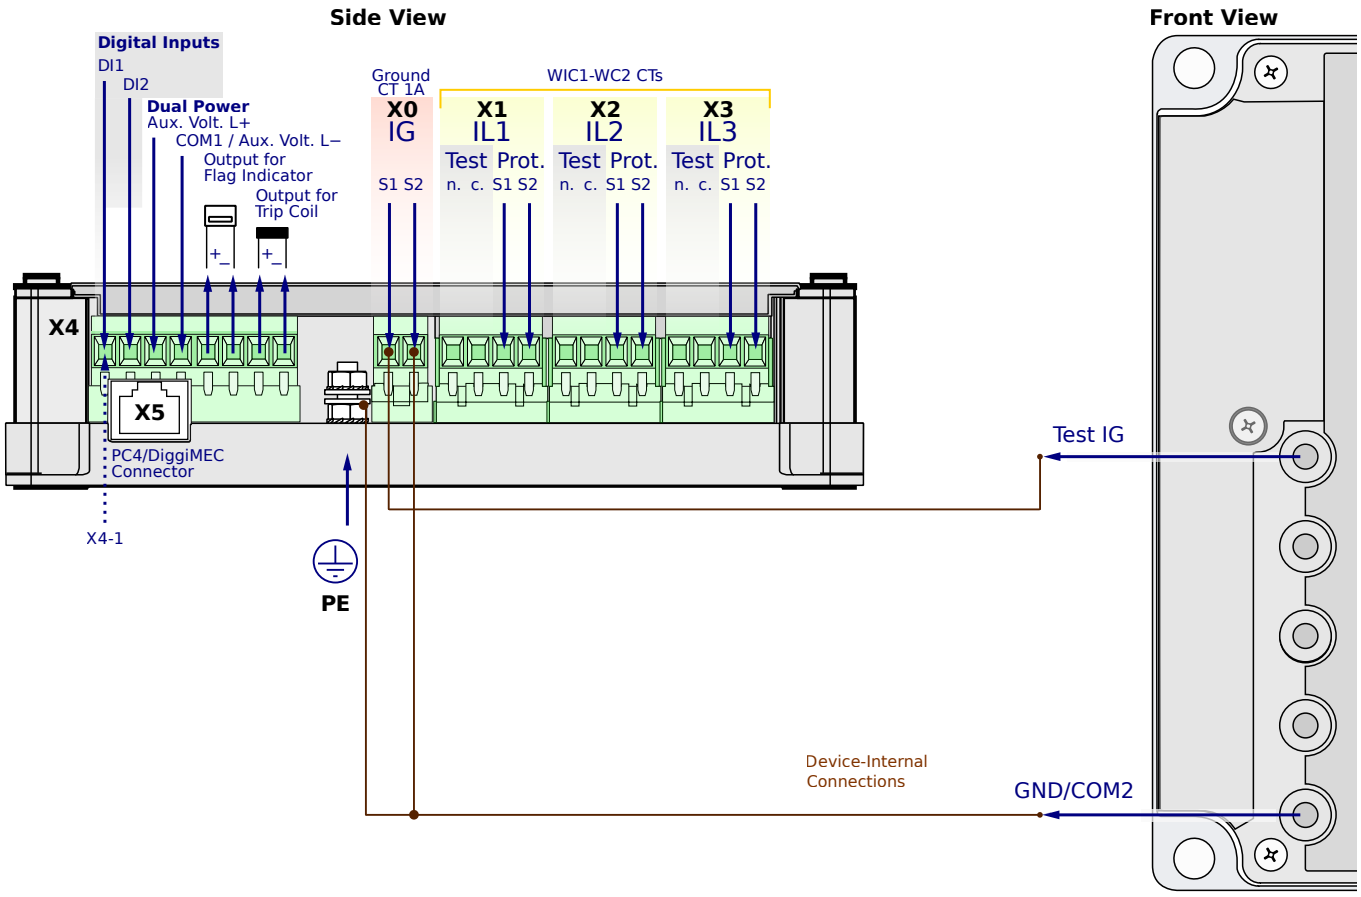


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2AB0

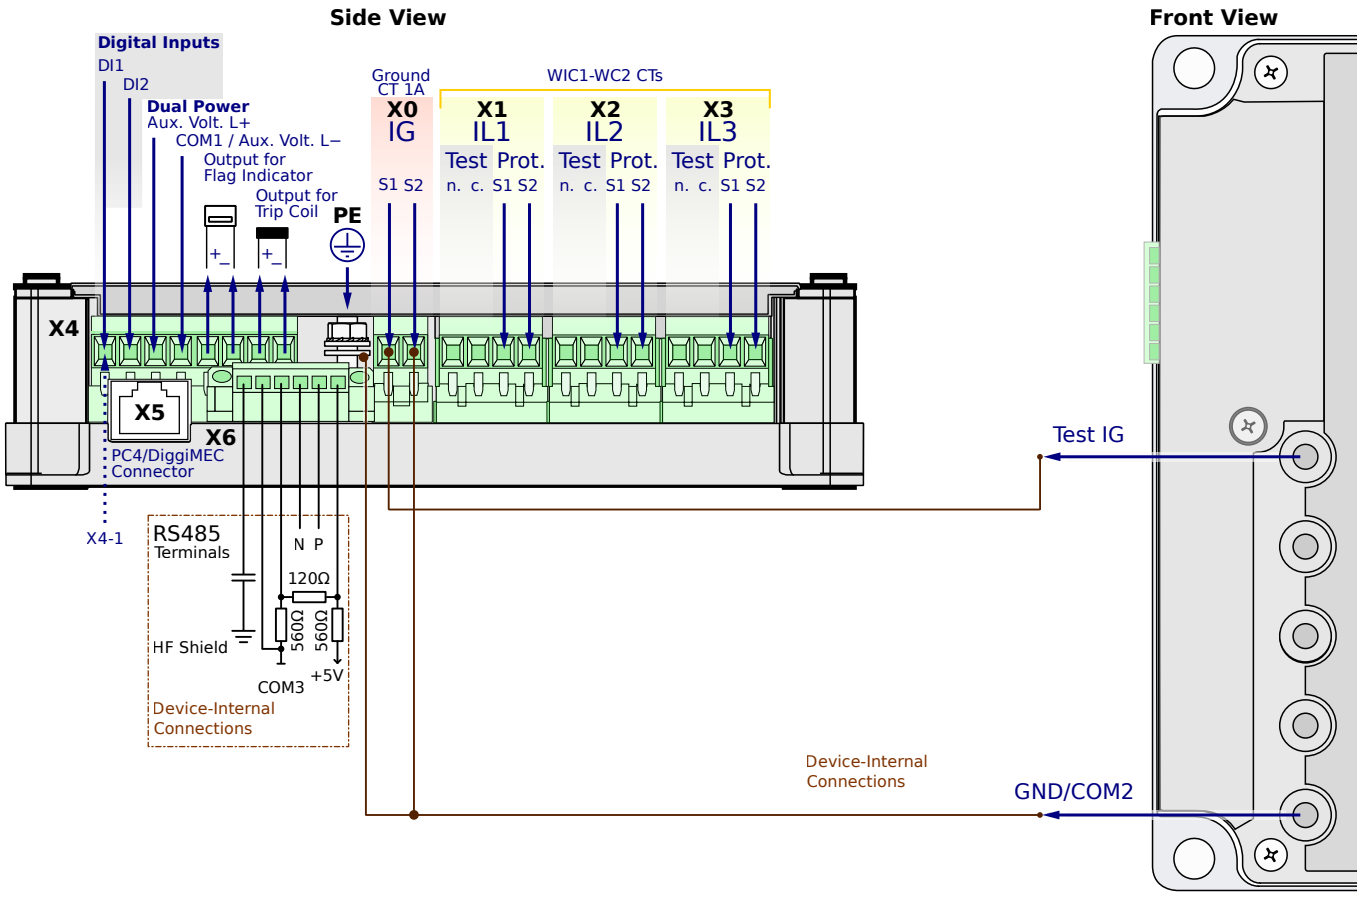


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2ABH

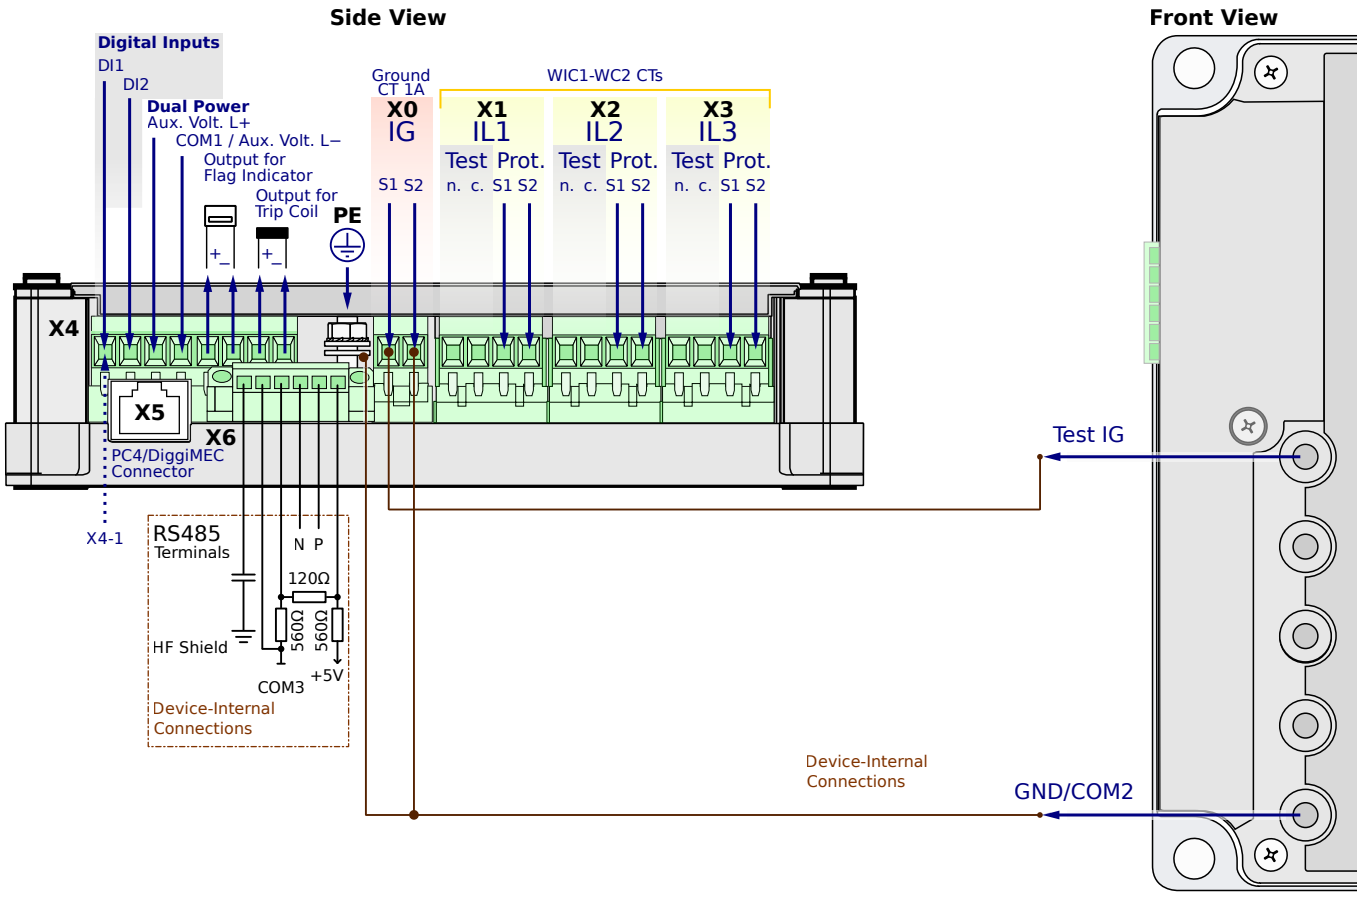


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2AC0

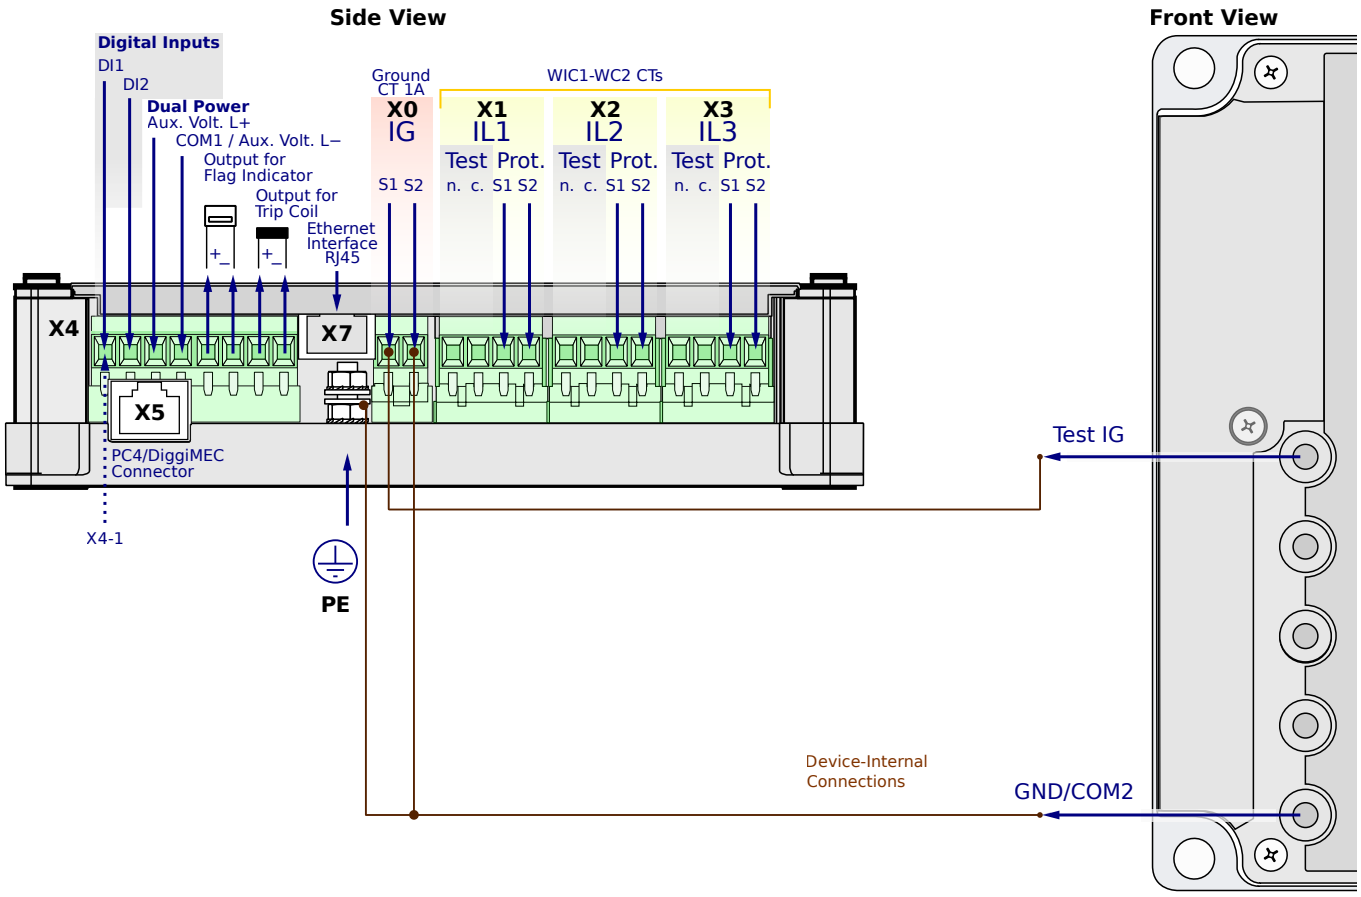


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2ACH

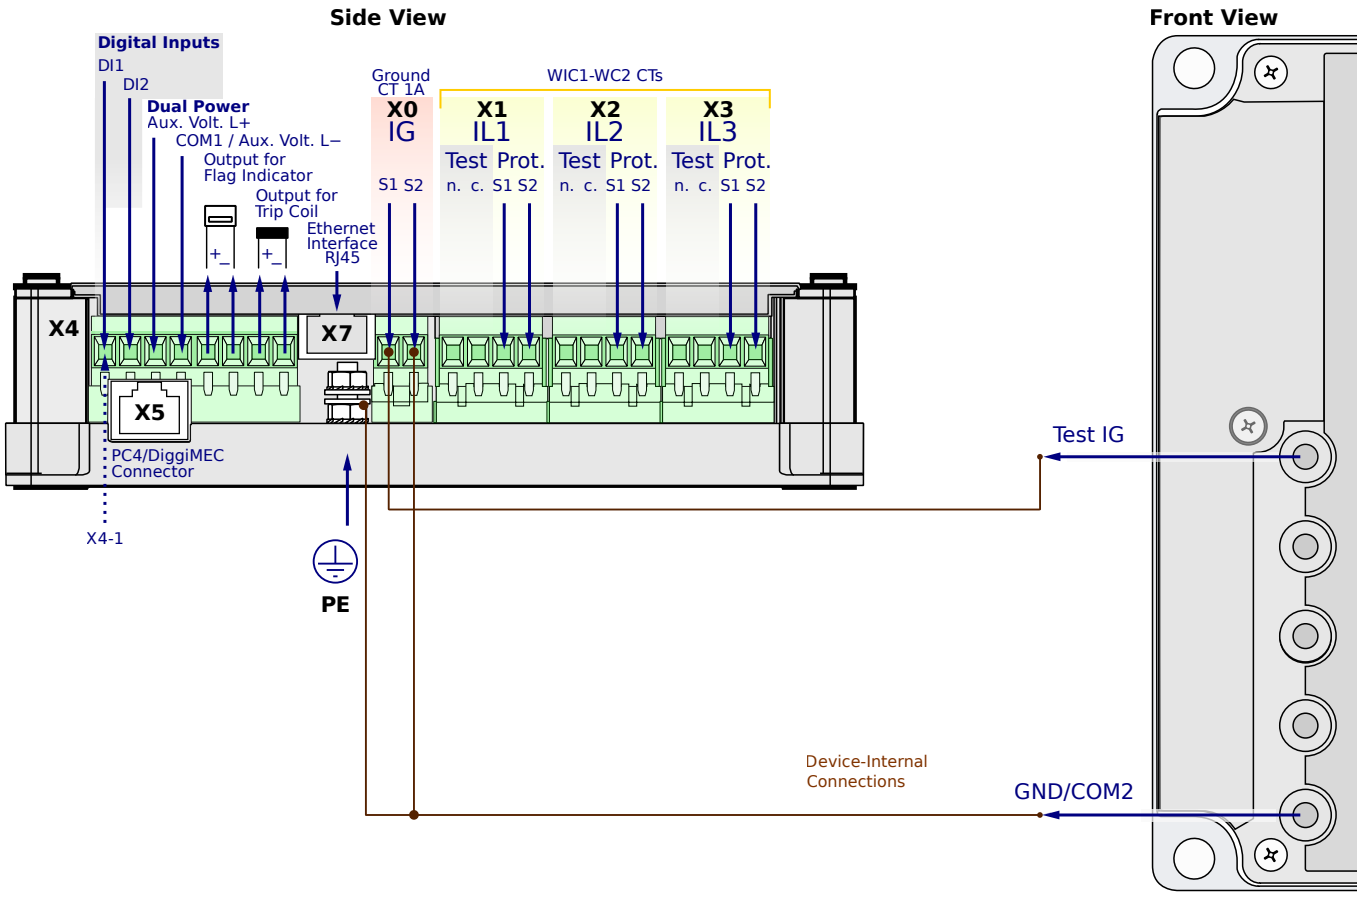


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2AL0

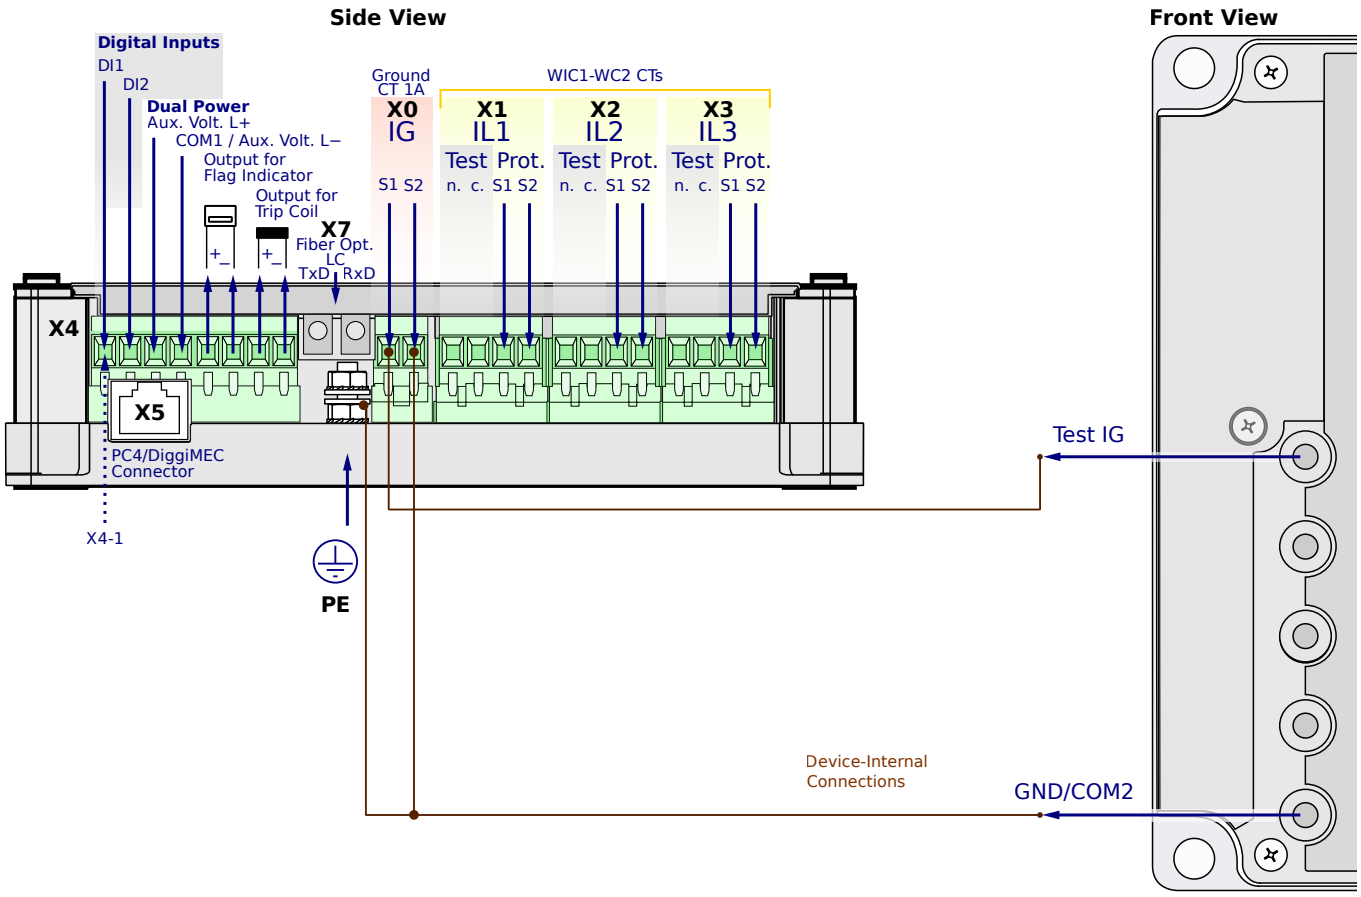


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2ALH

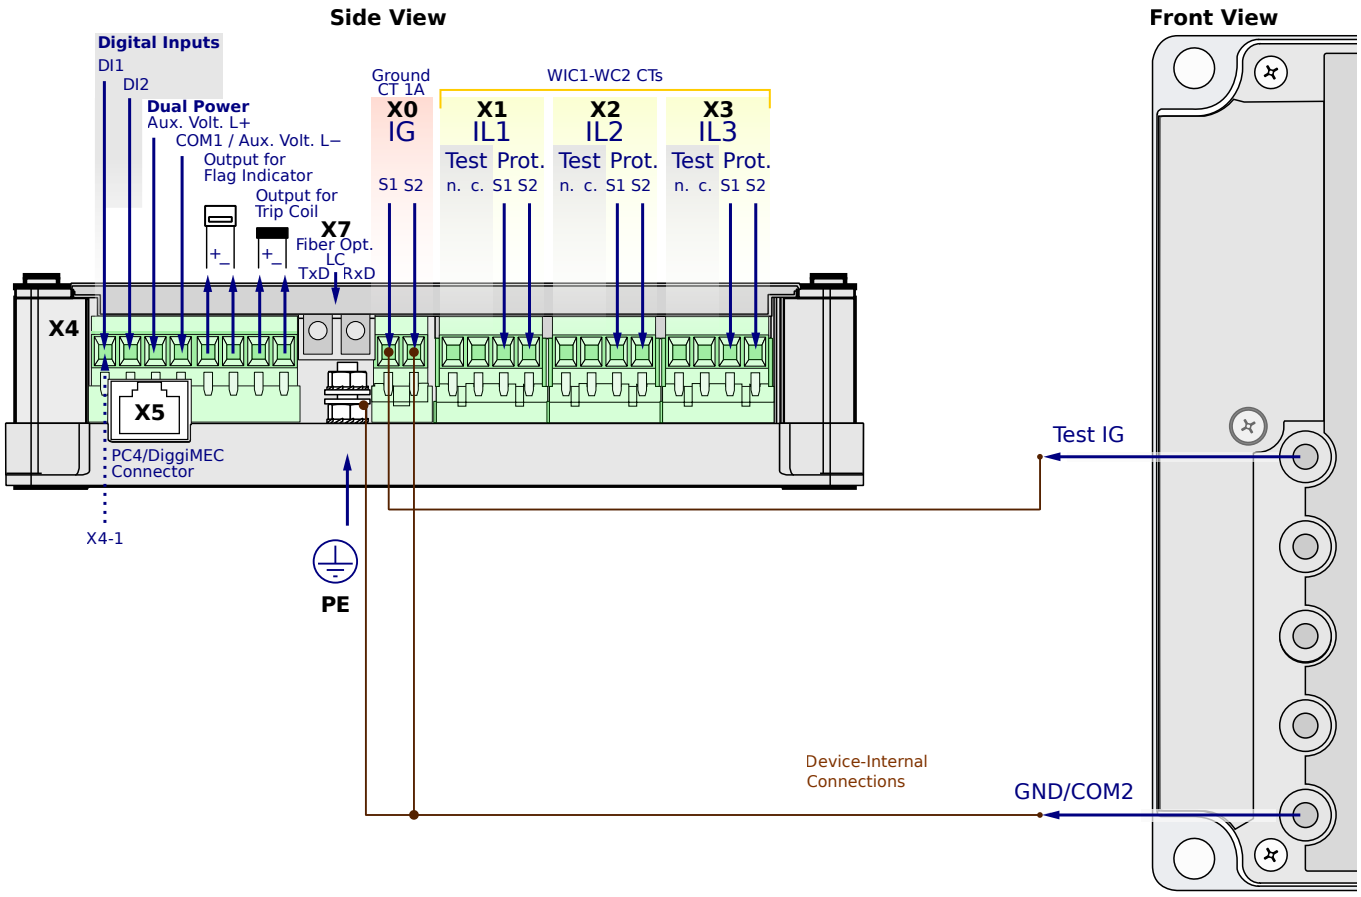


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2PA0

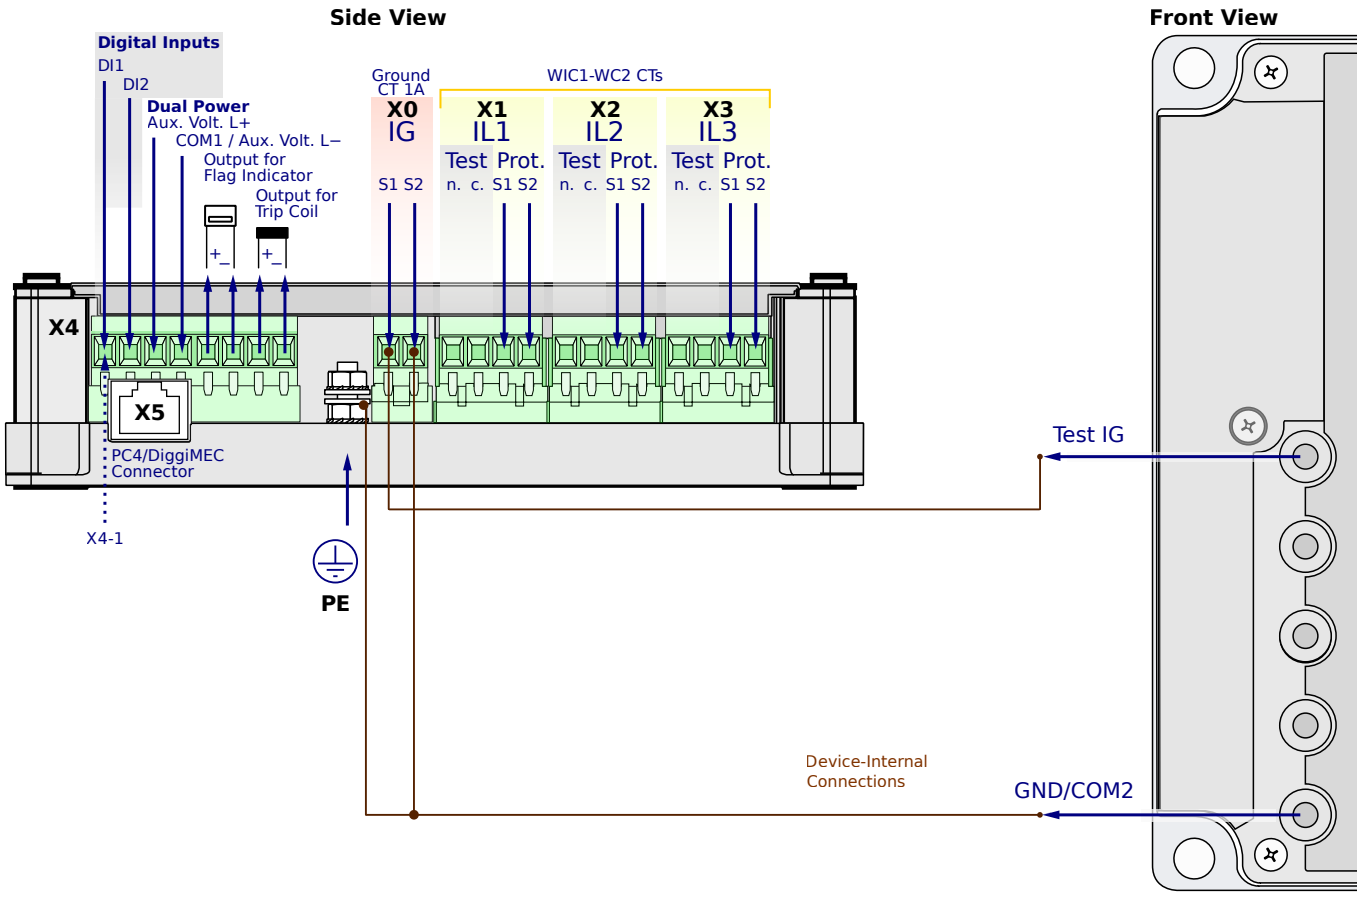


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2PAH

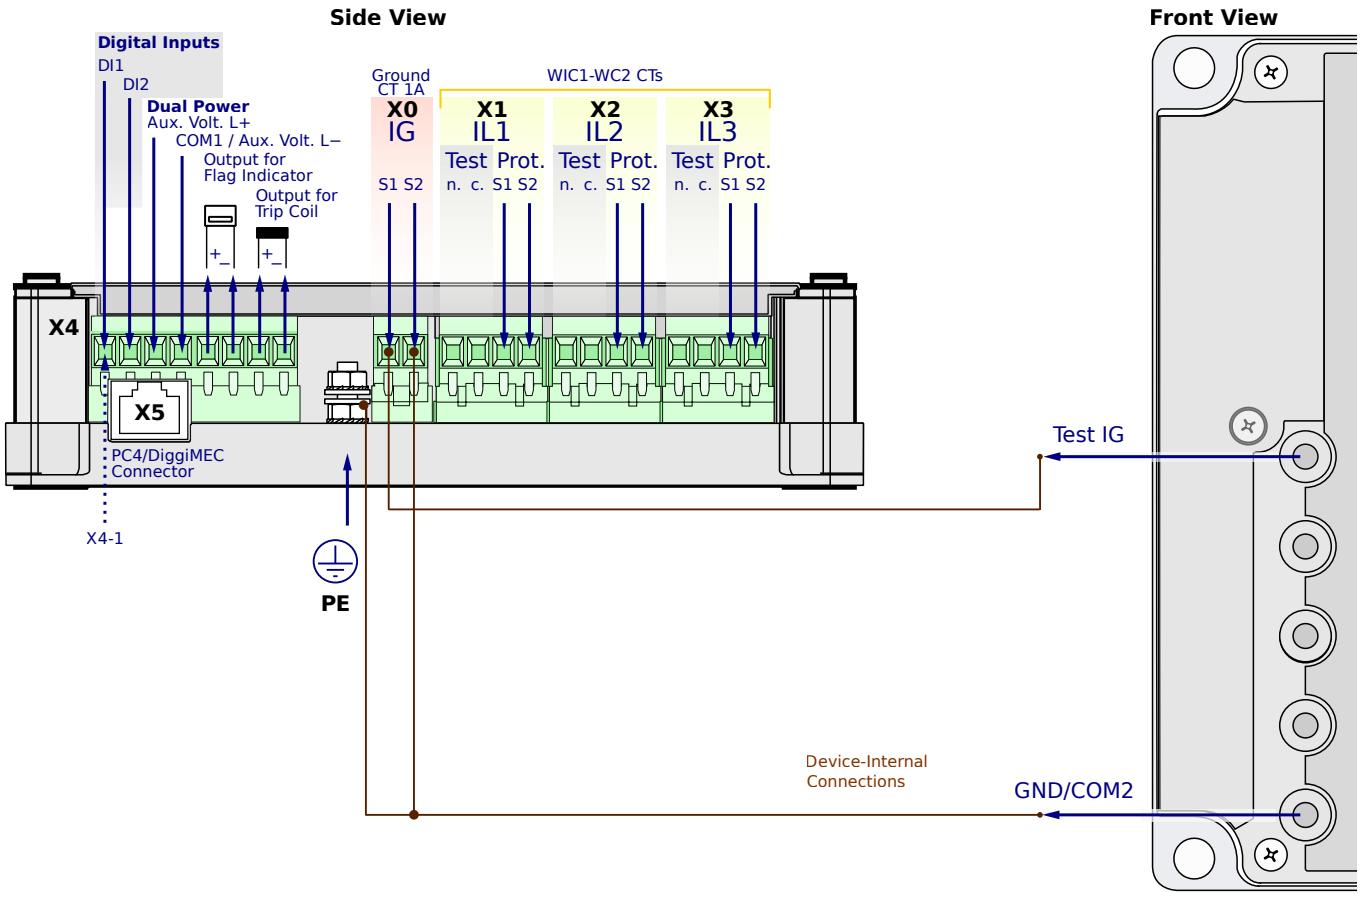


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0FD2PB0

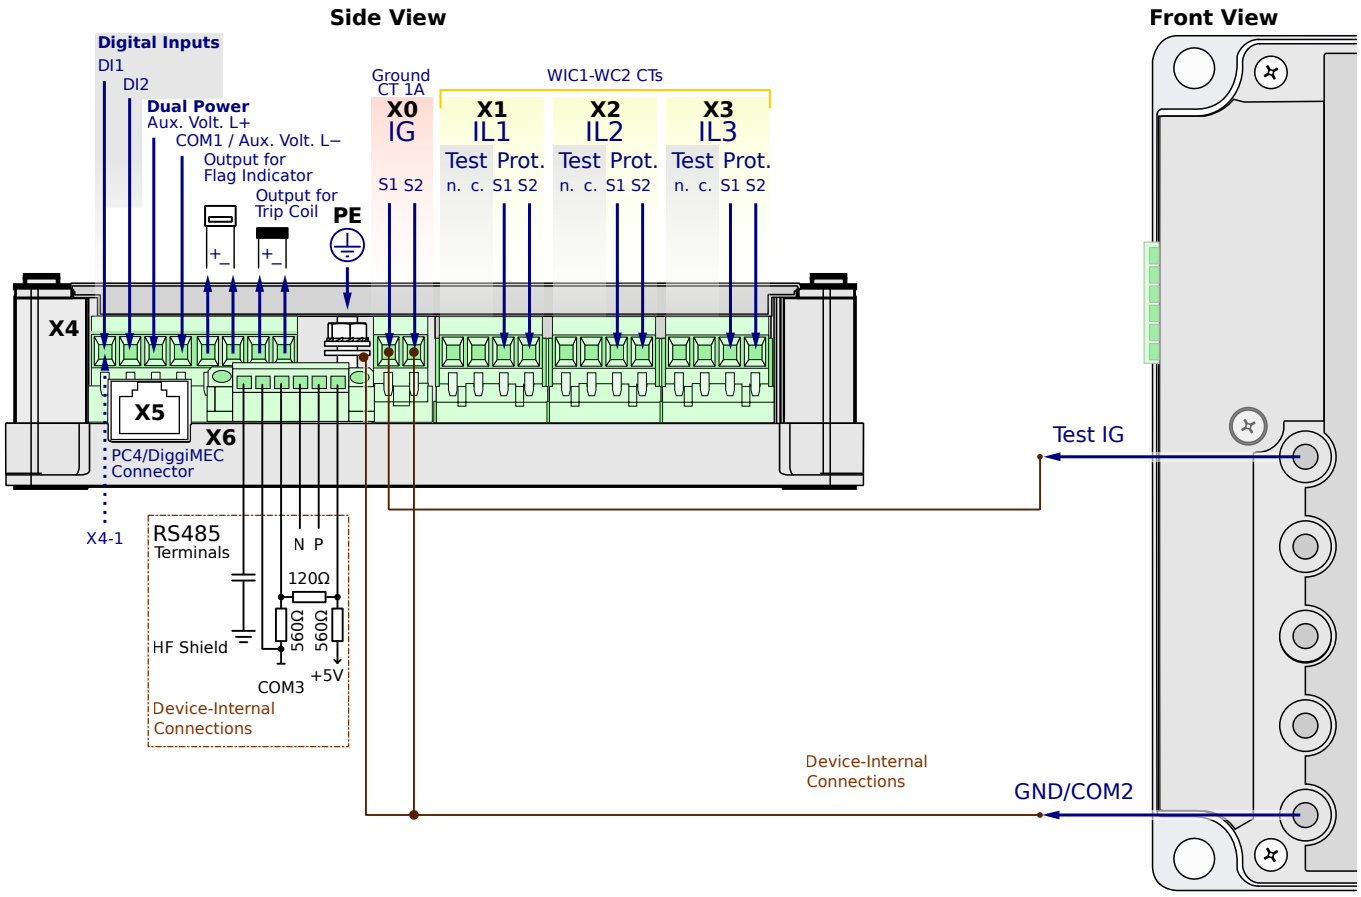


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2PBH

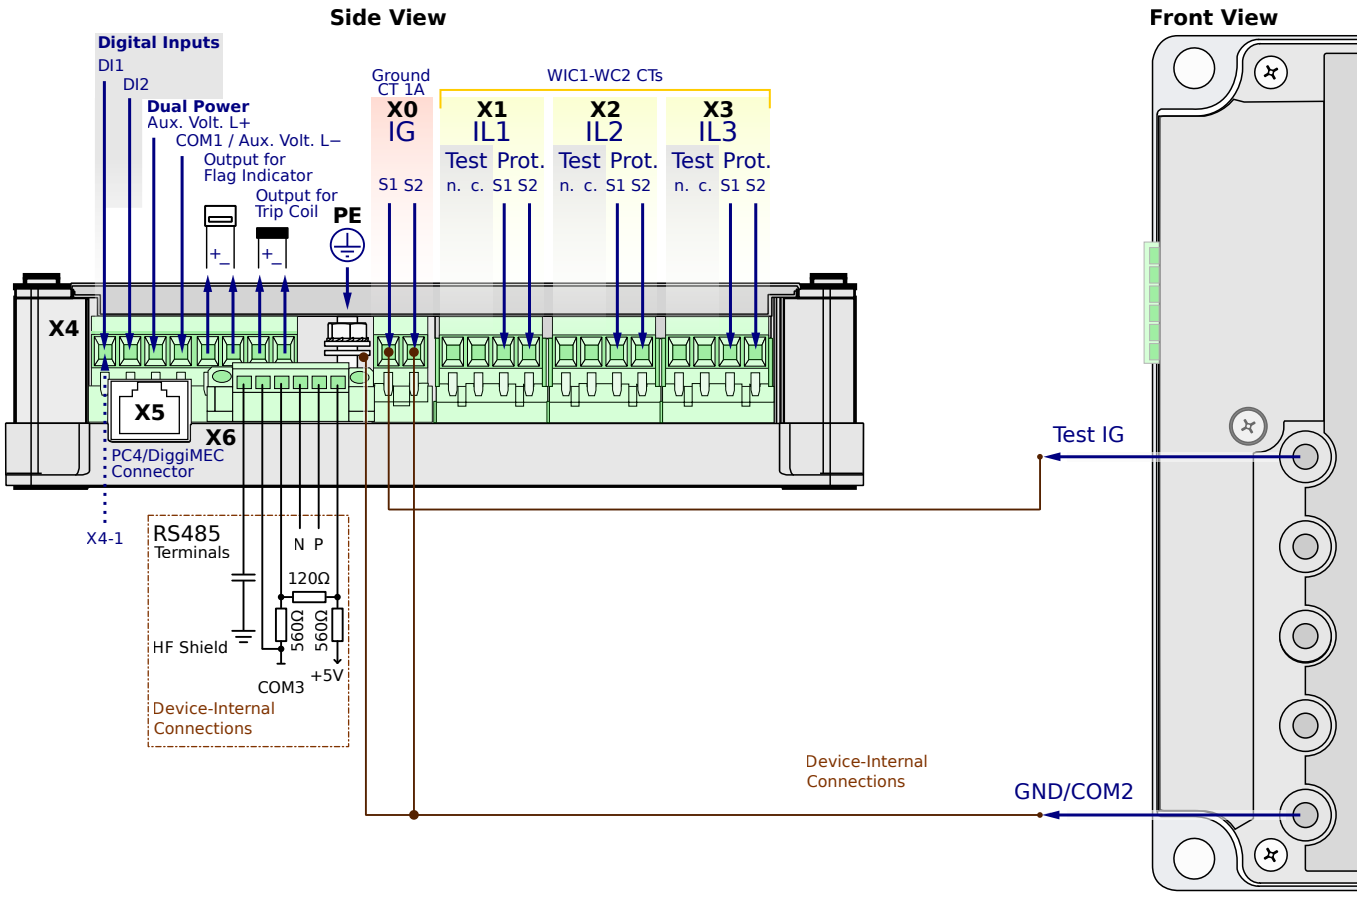


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0FD2PC0

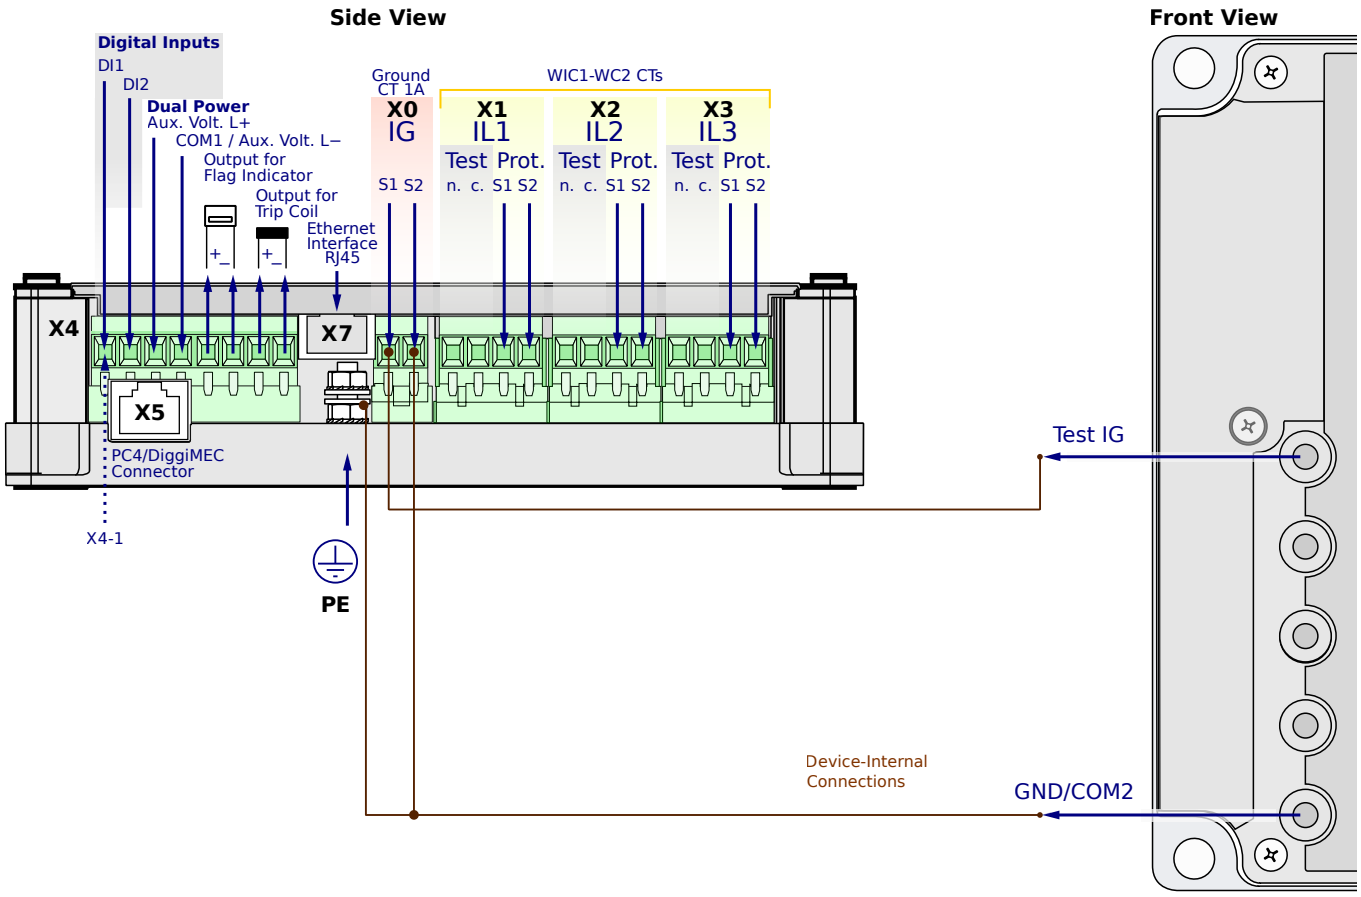


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2PCH

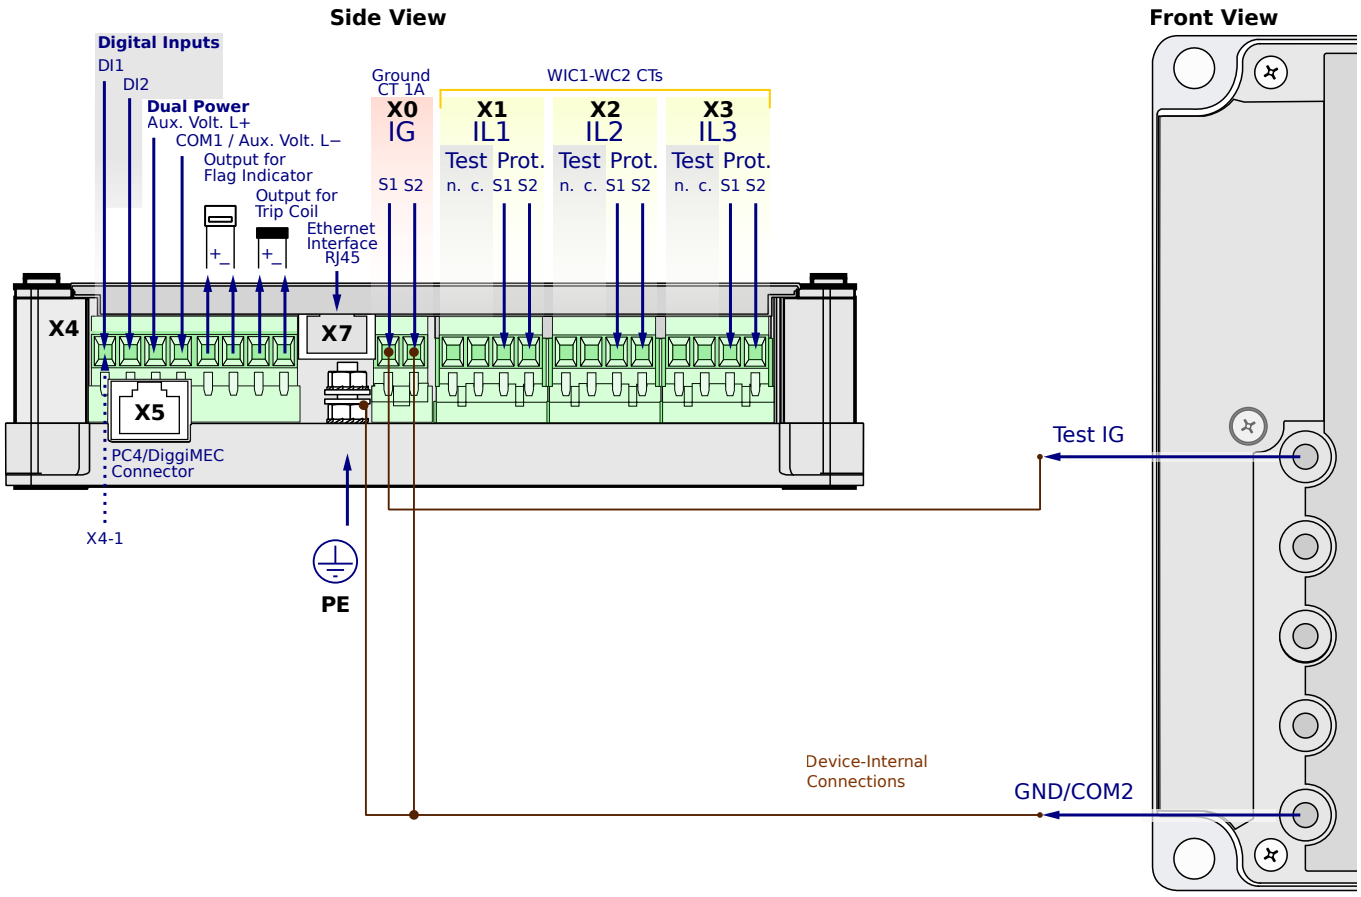


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0FD2PL0

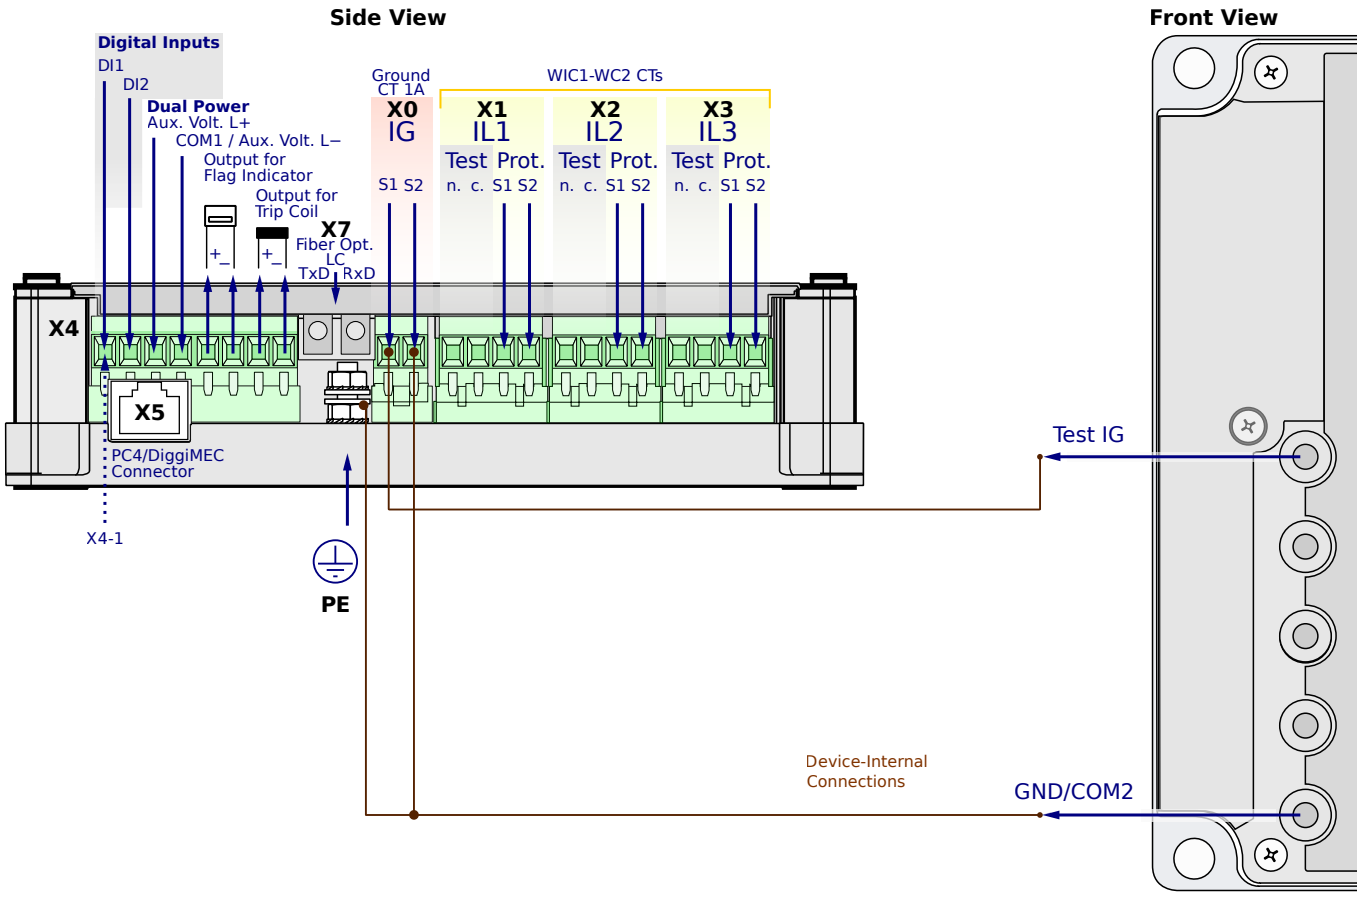


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0FD2PLH

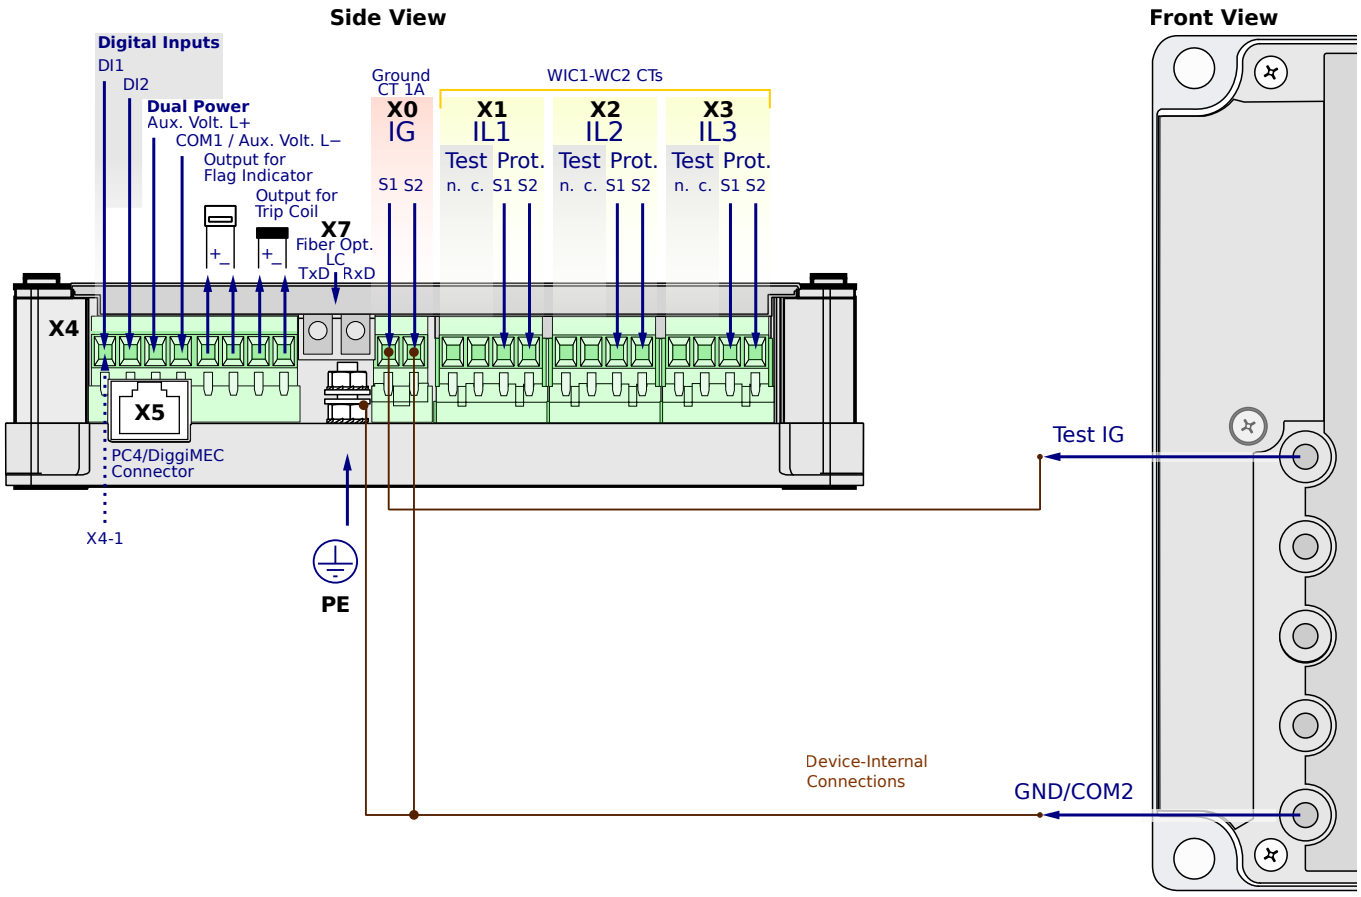


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Trip on Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1SA0

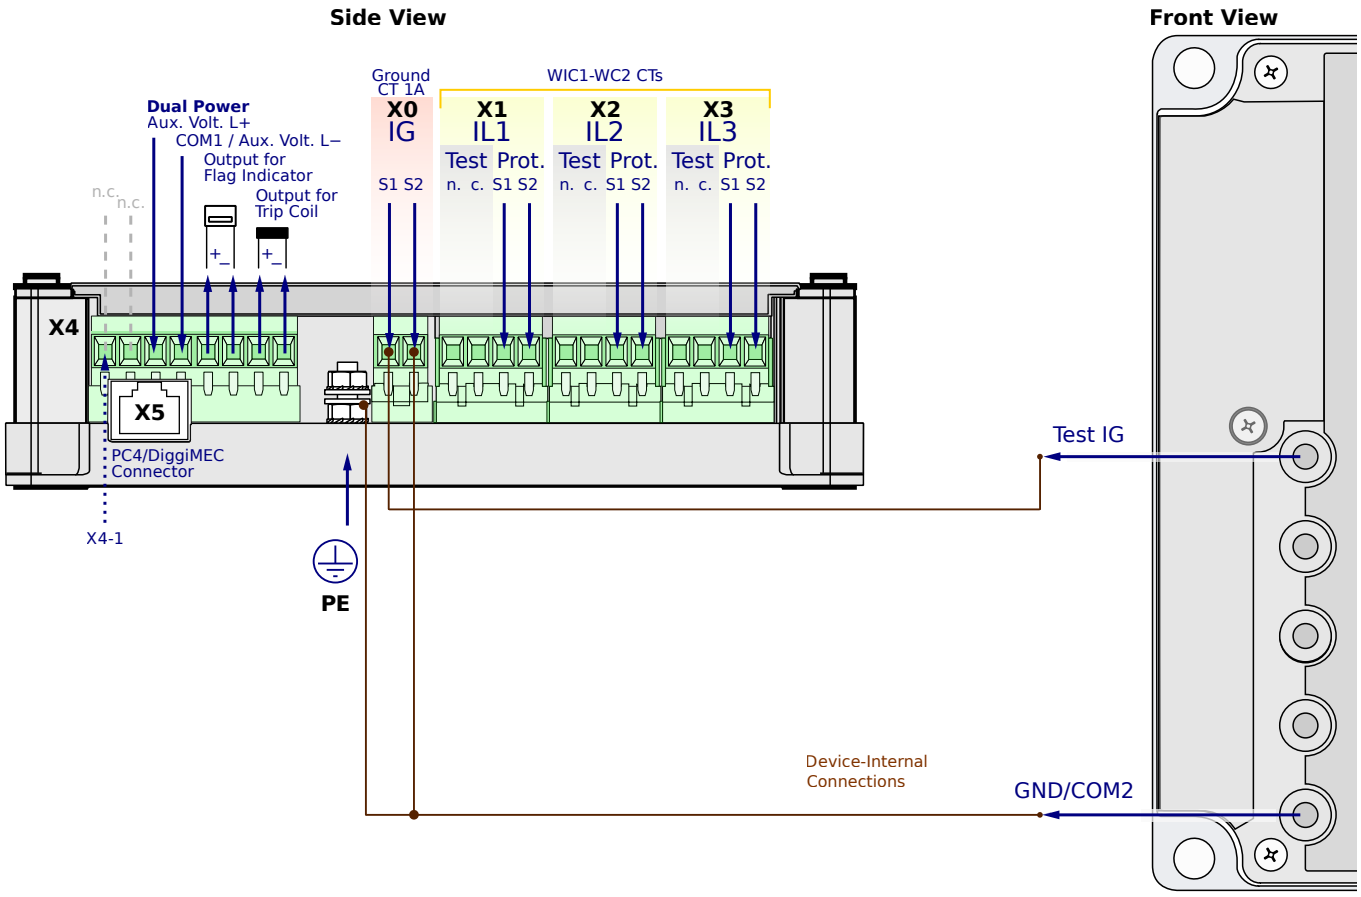


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1SAH

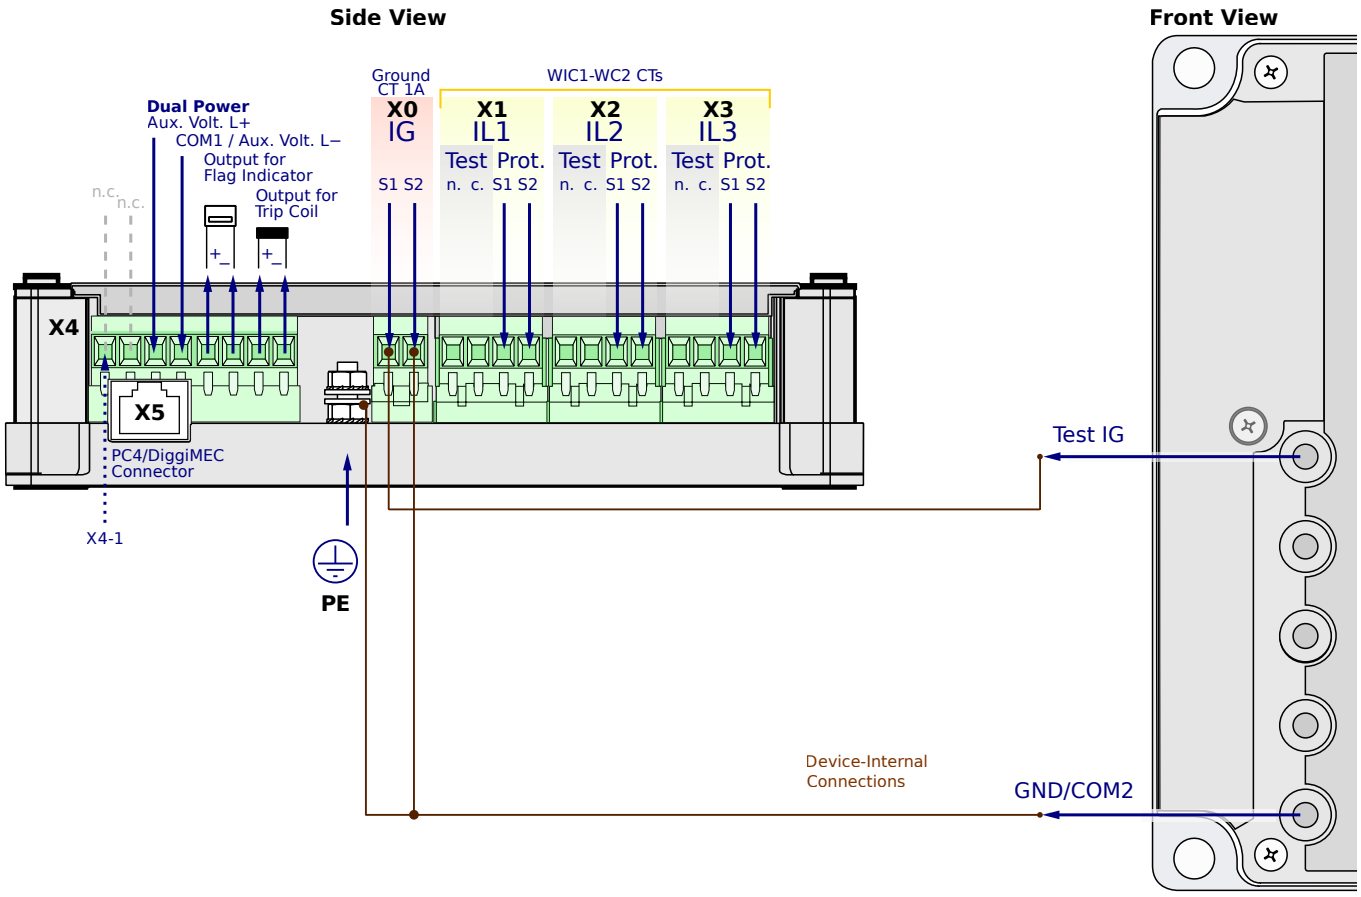


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1SB0

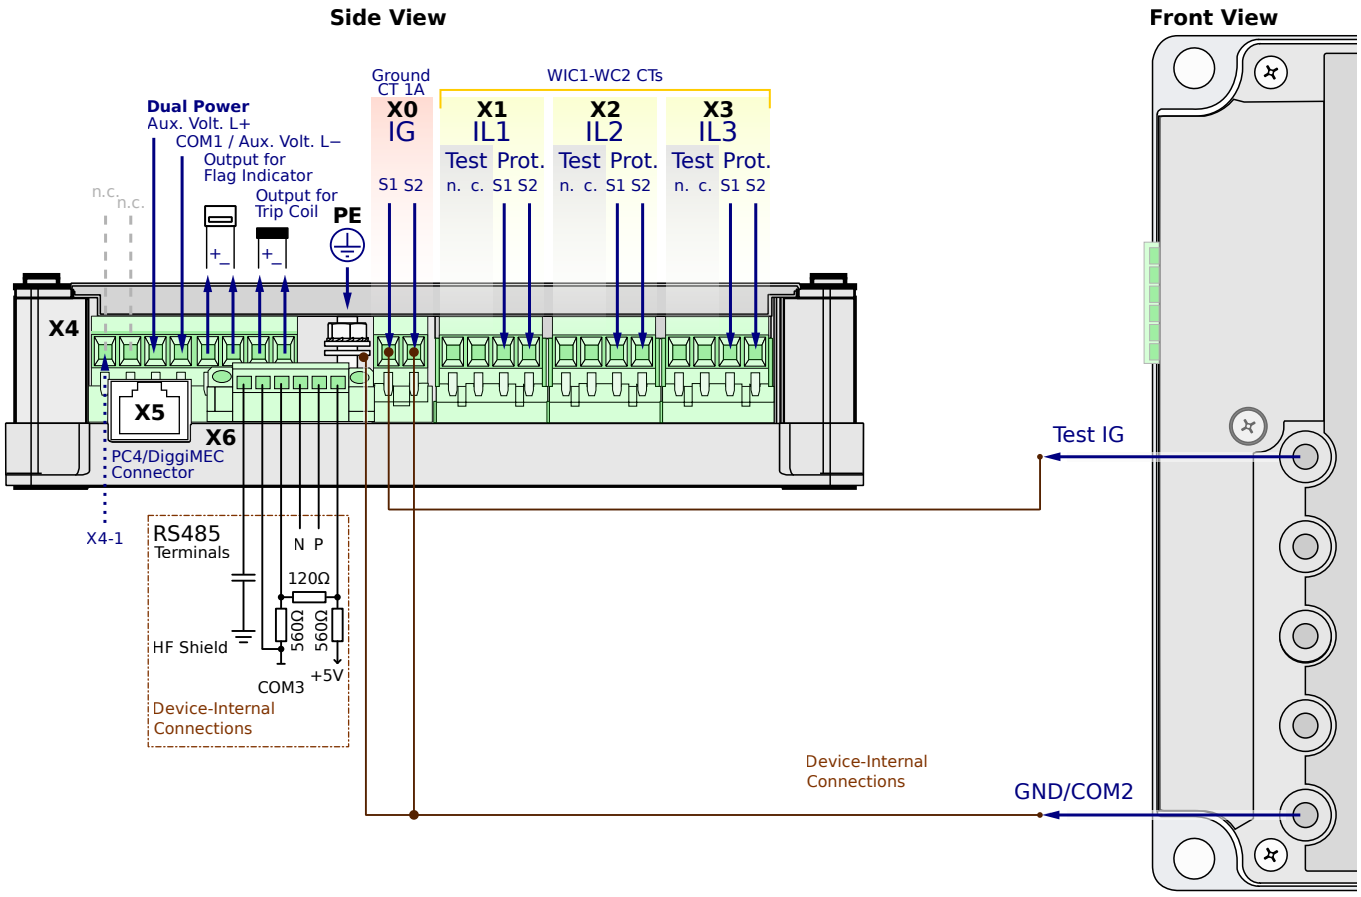


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1SBH

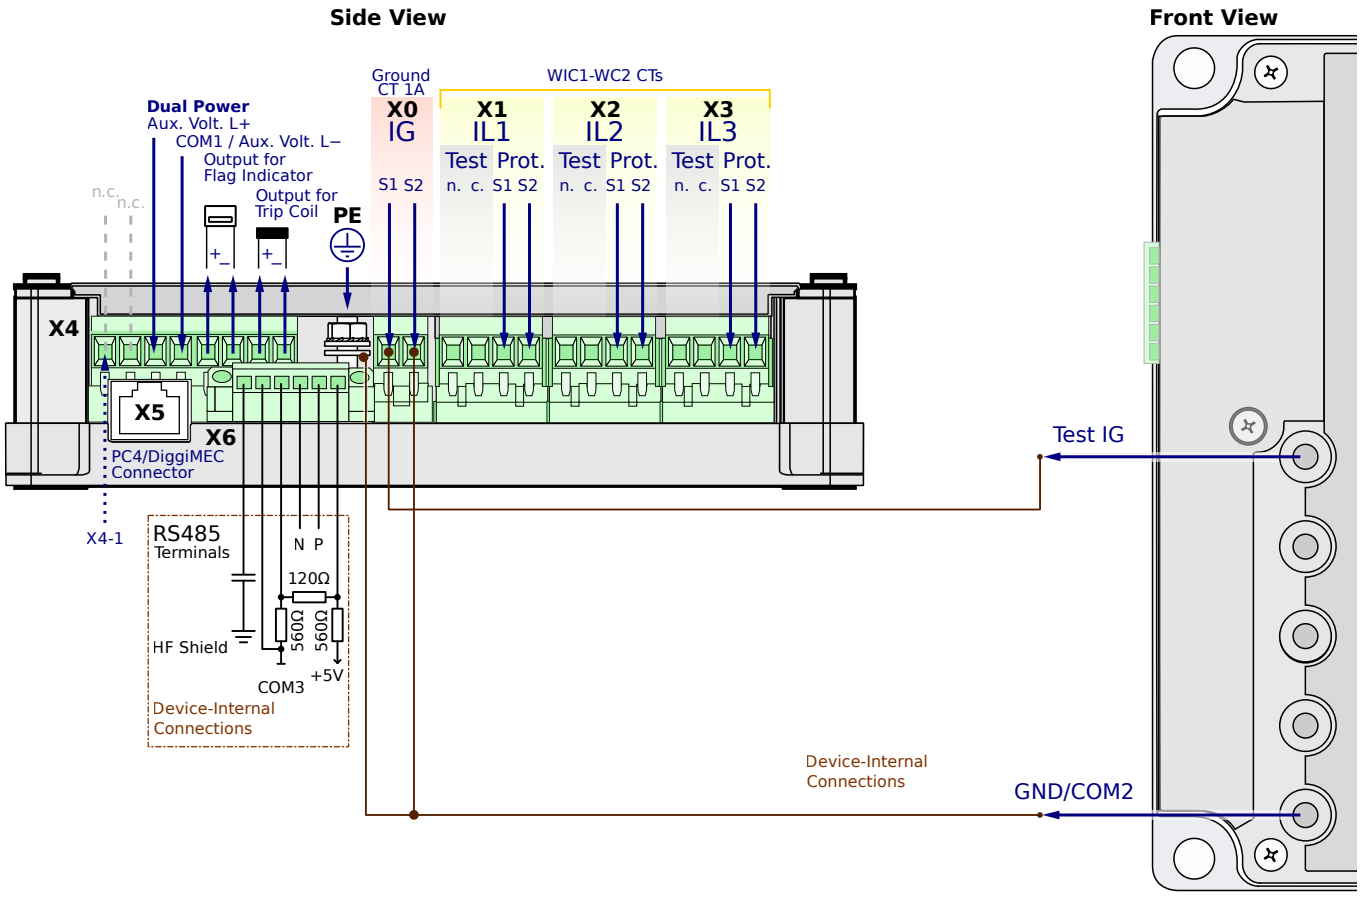


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1SC0

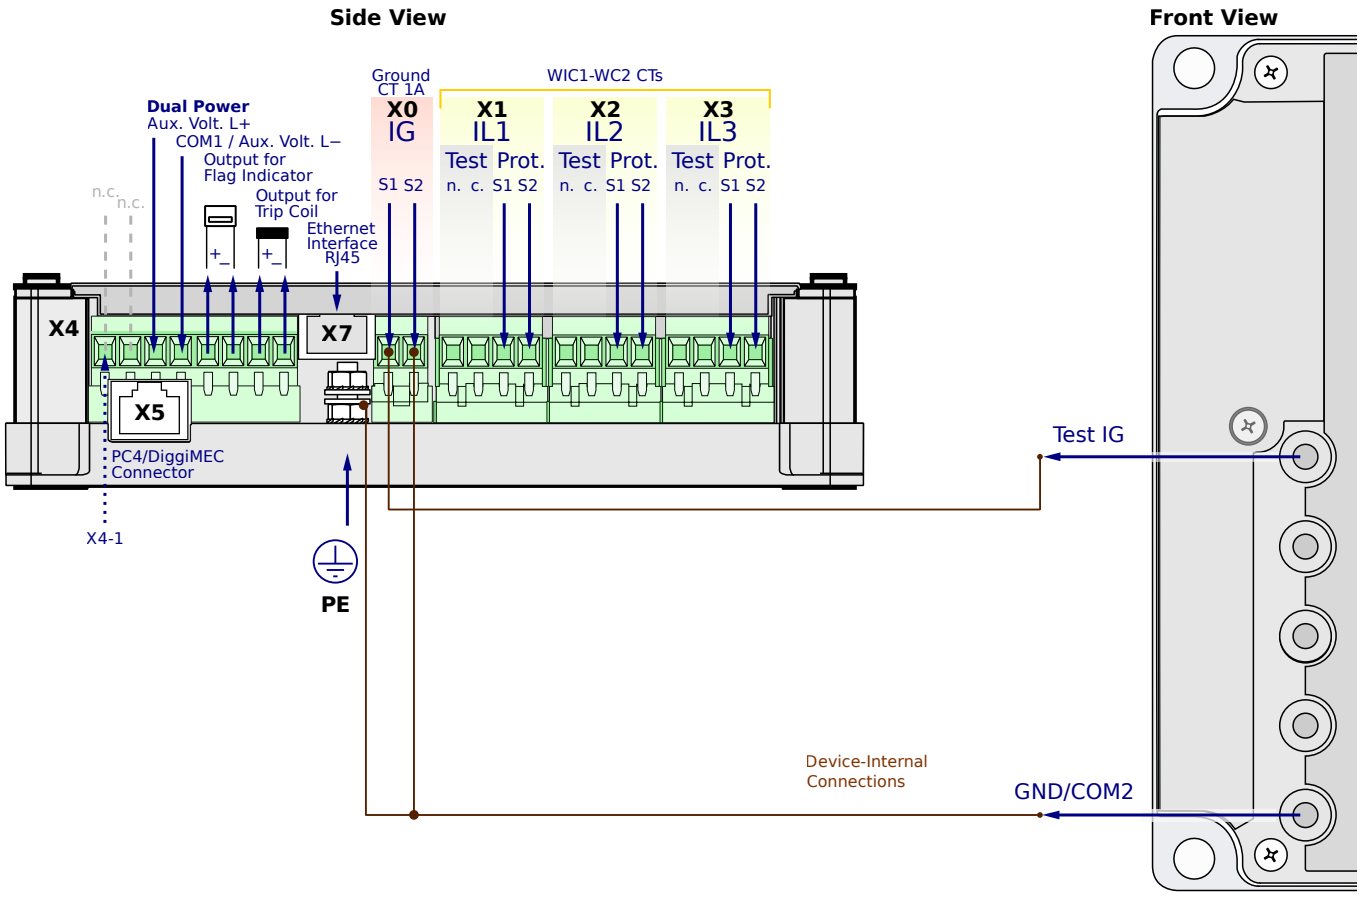


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1SCH

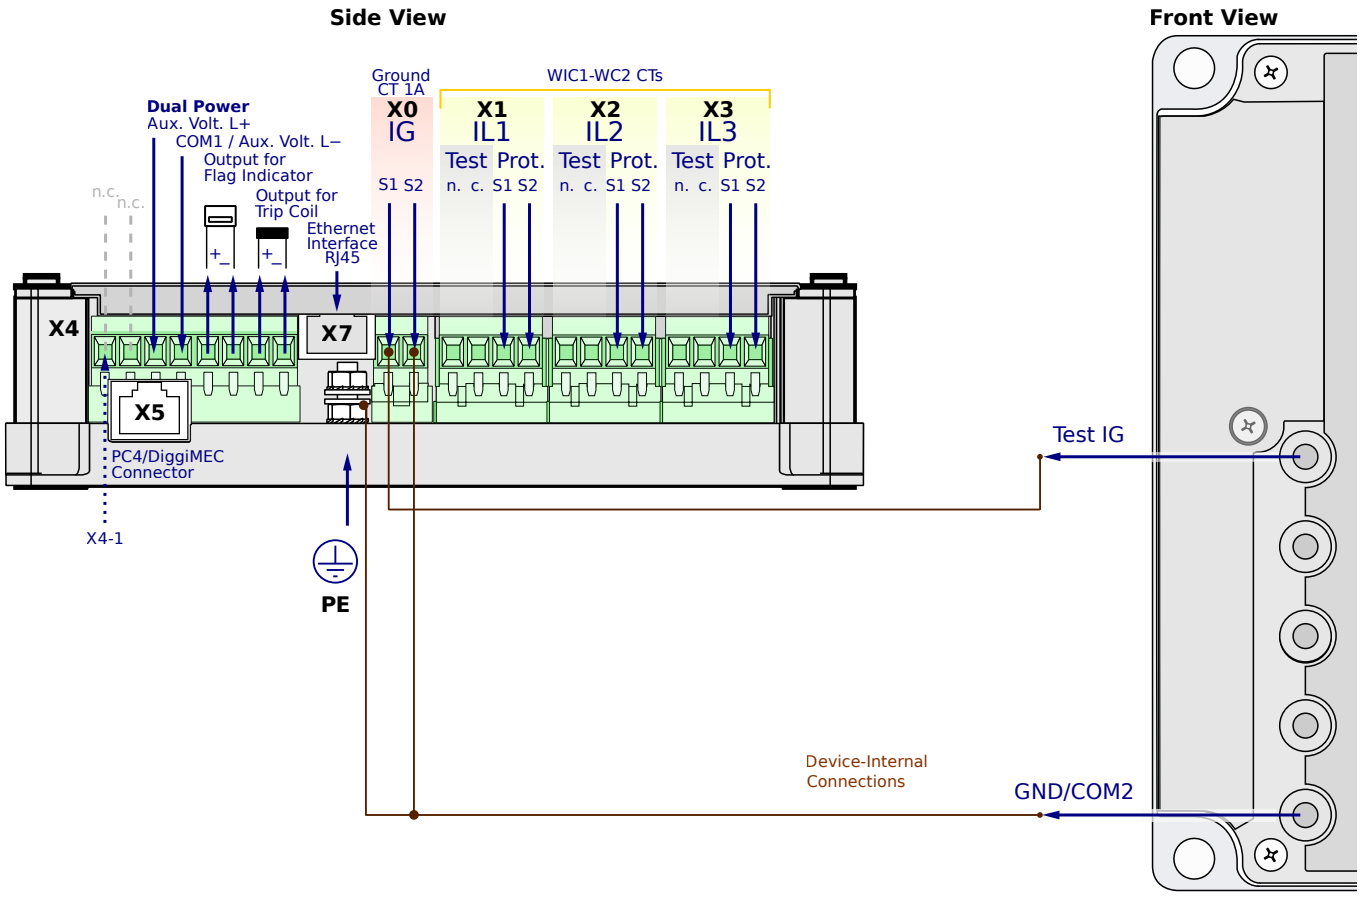


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1SL0

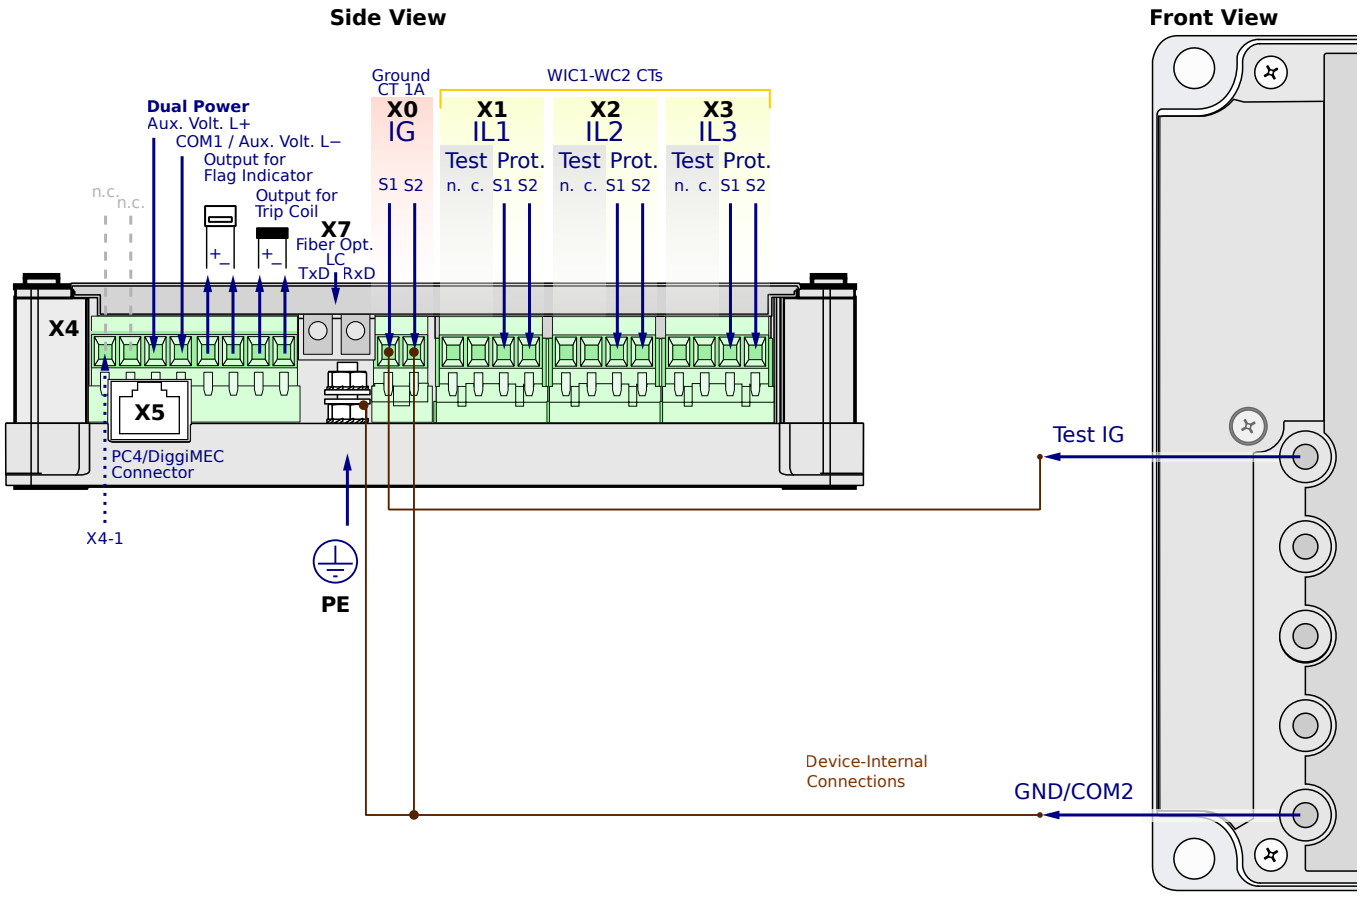


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1SLH

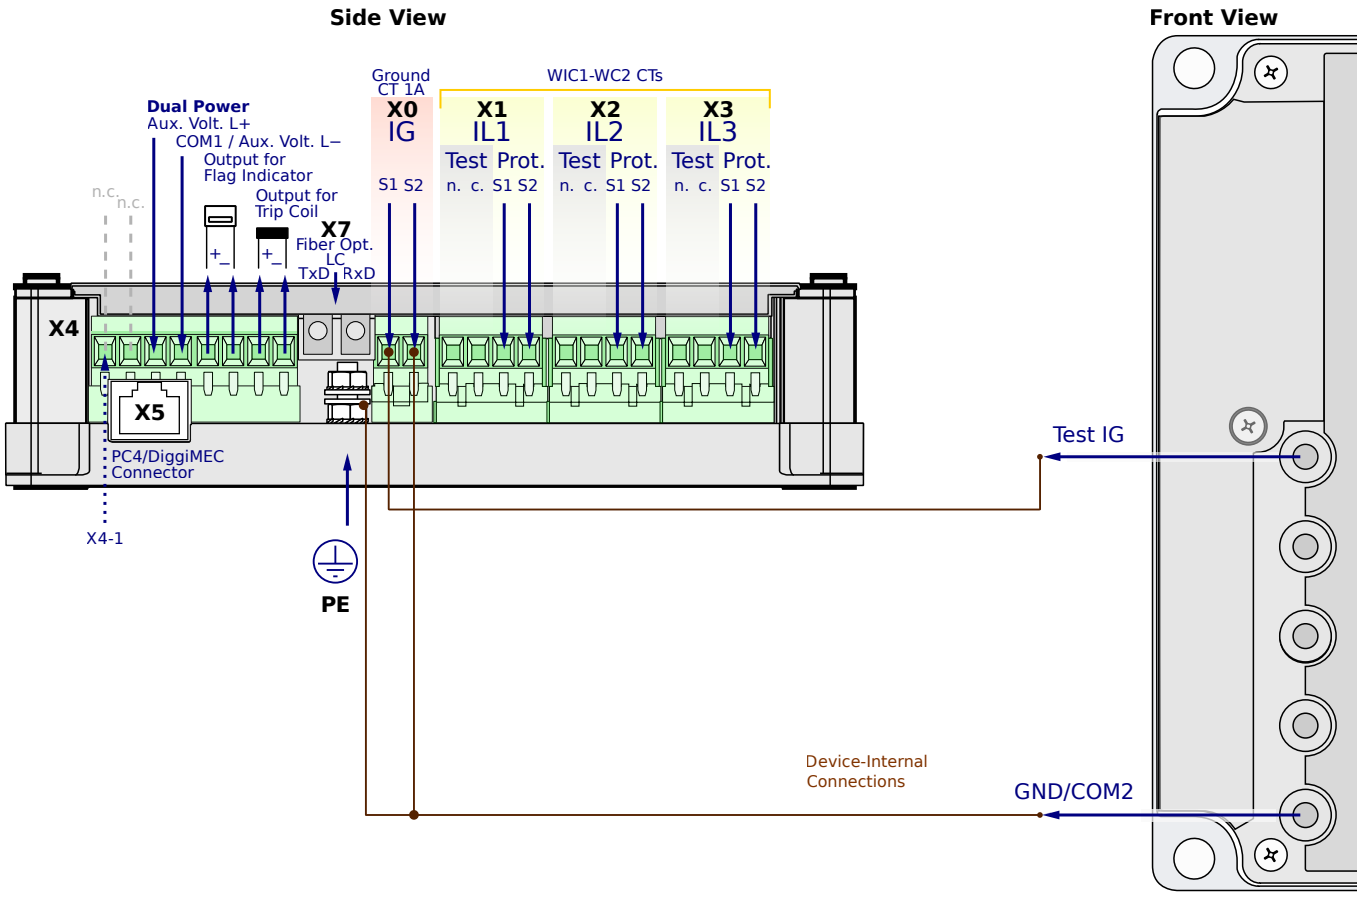


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1AA0

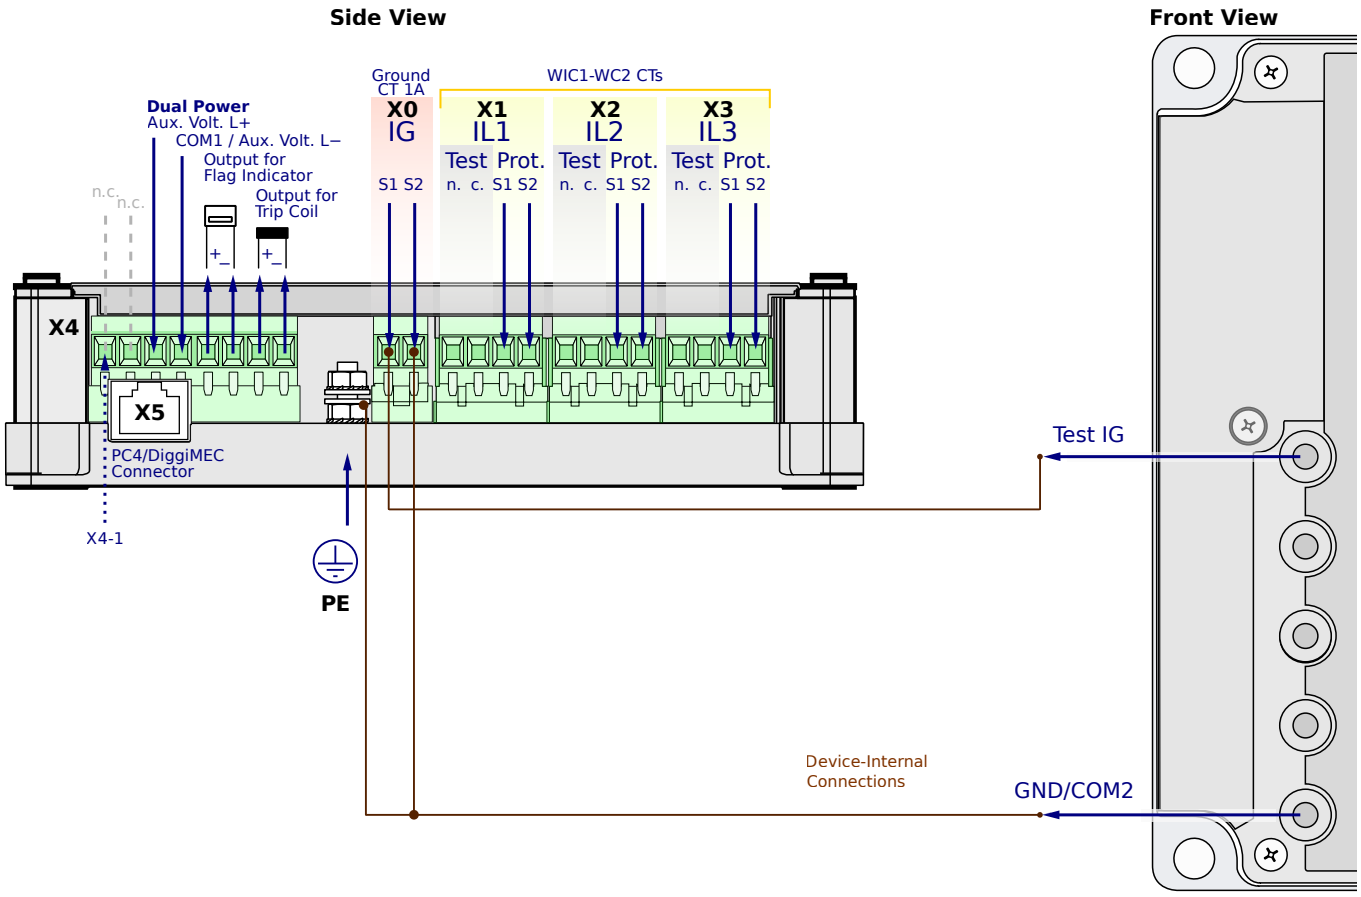


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1AAH

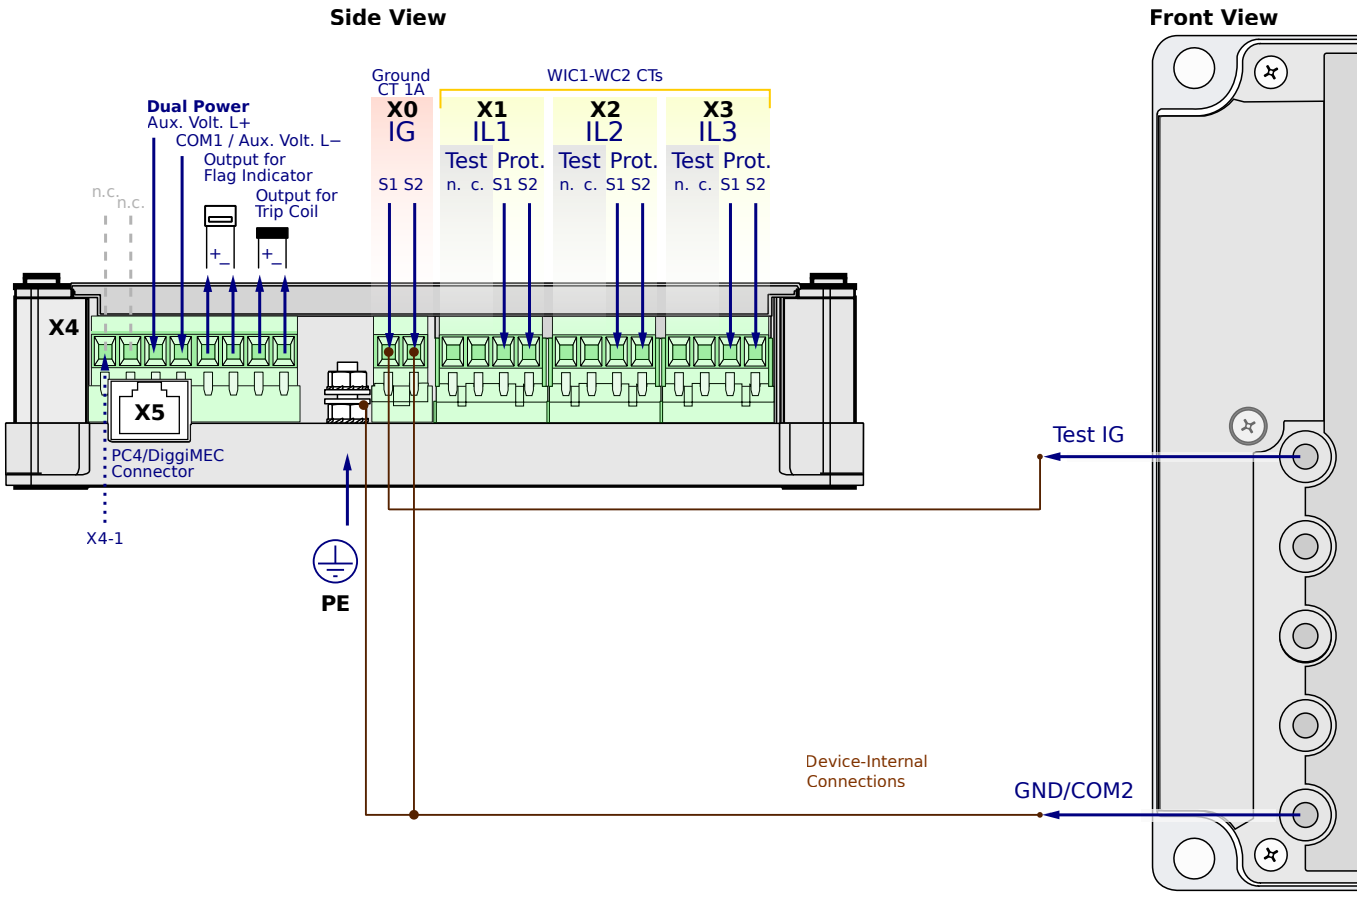


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1AB0

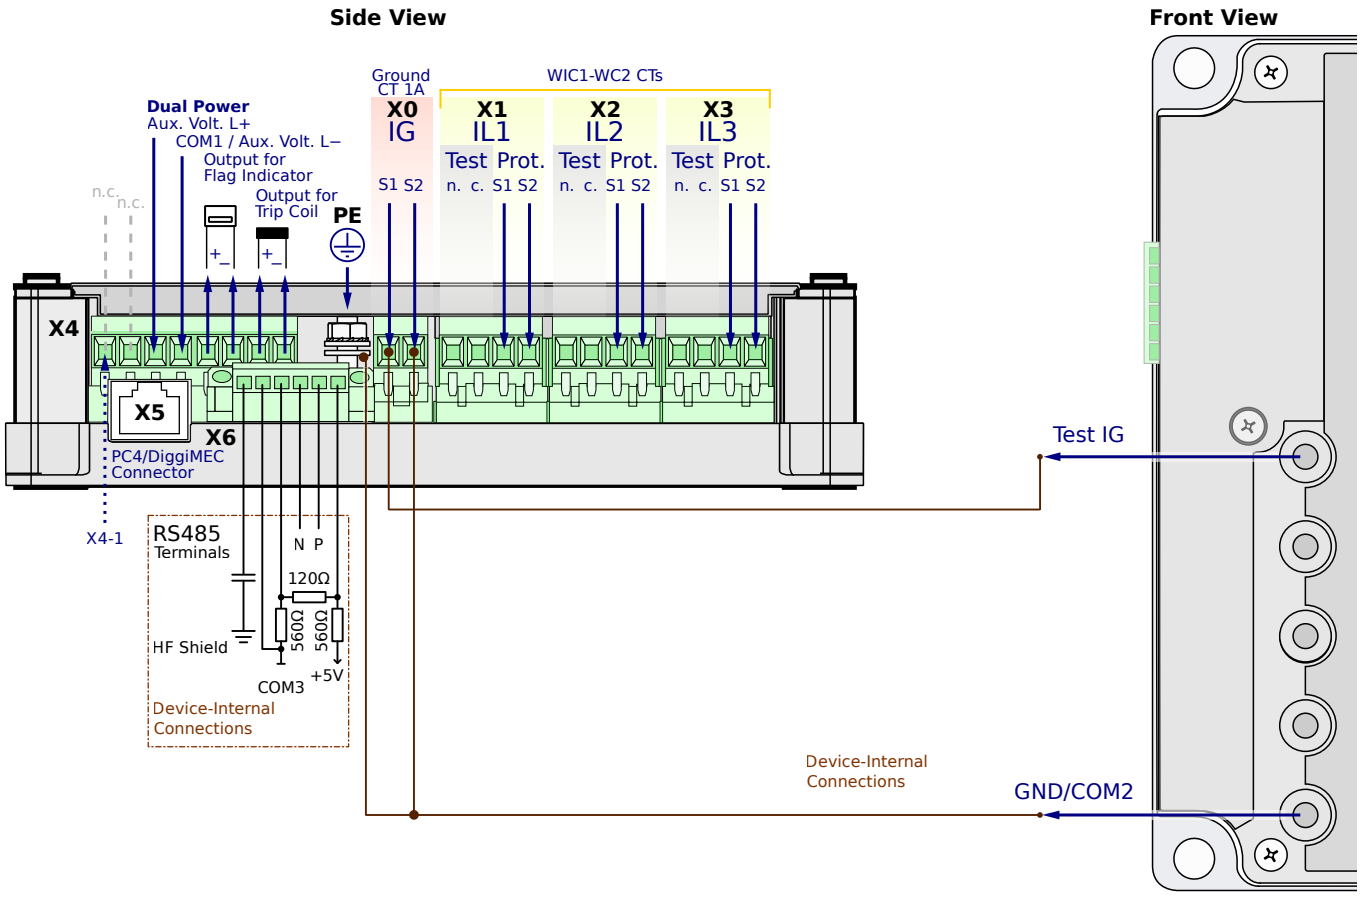


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1ABH

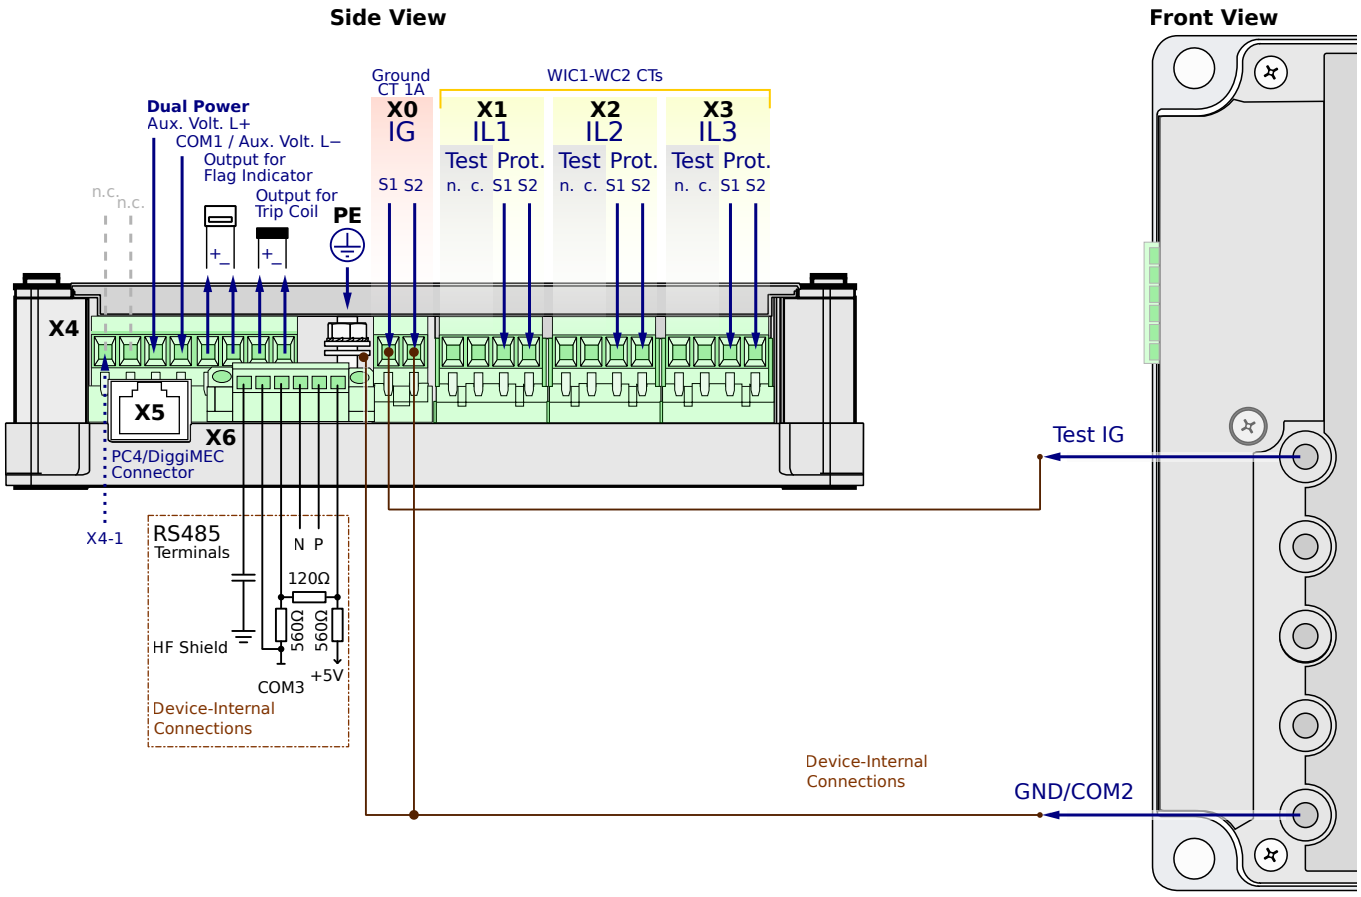


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1AC0

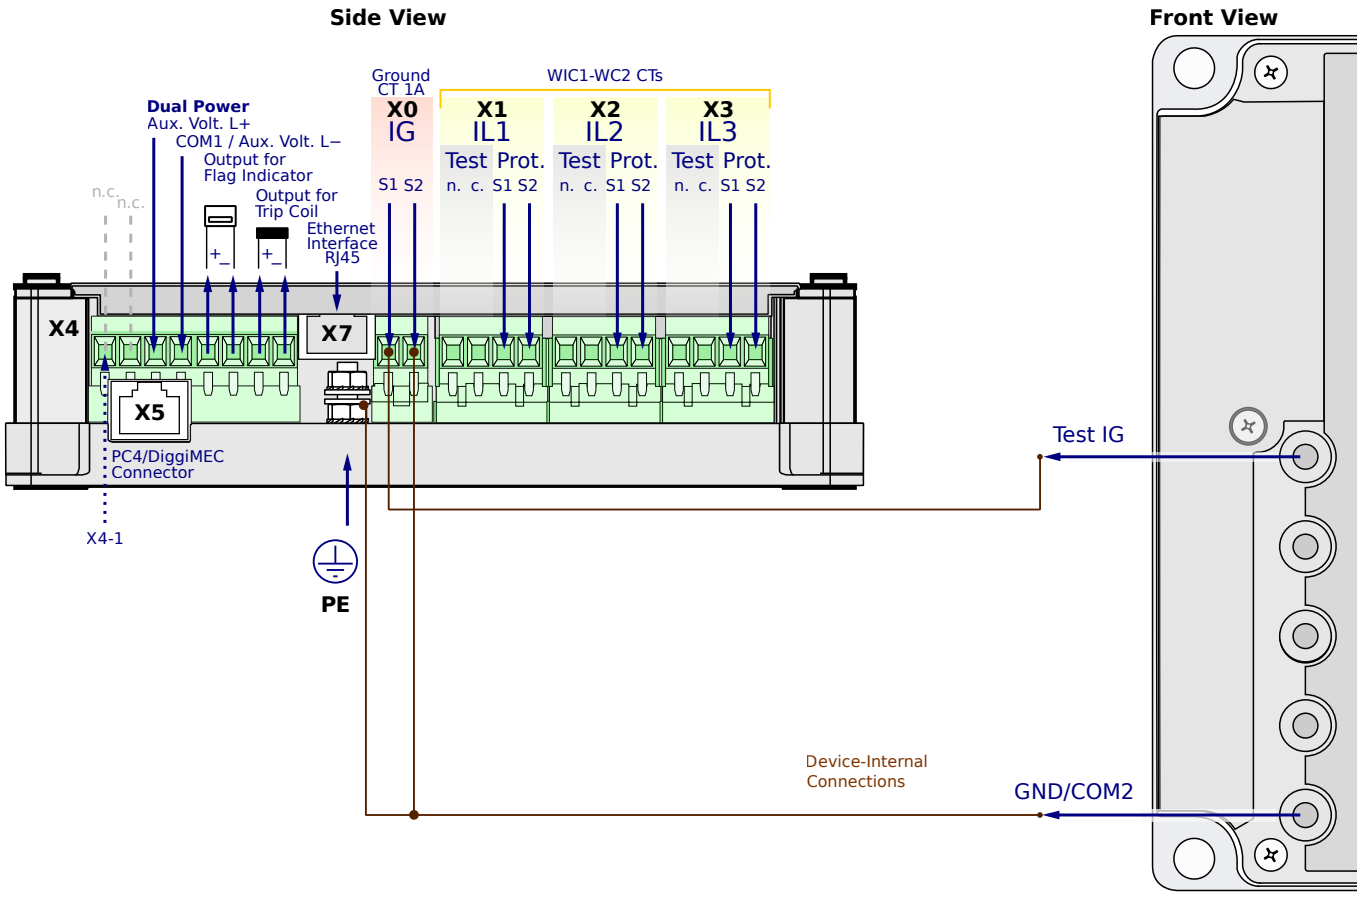


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1ACH

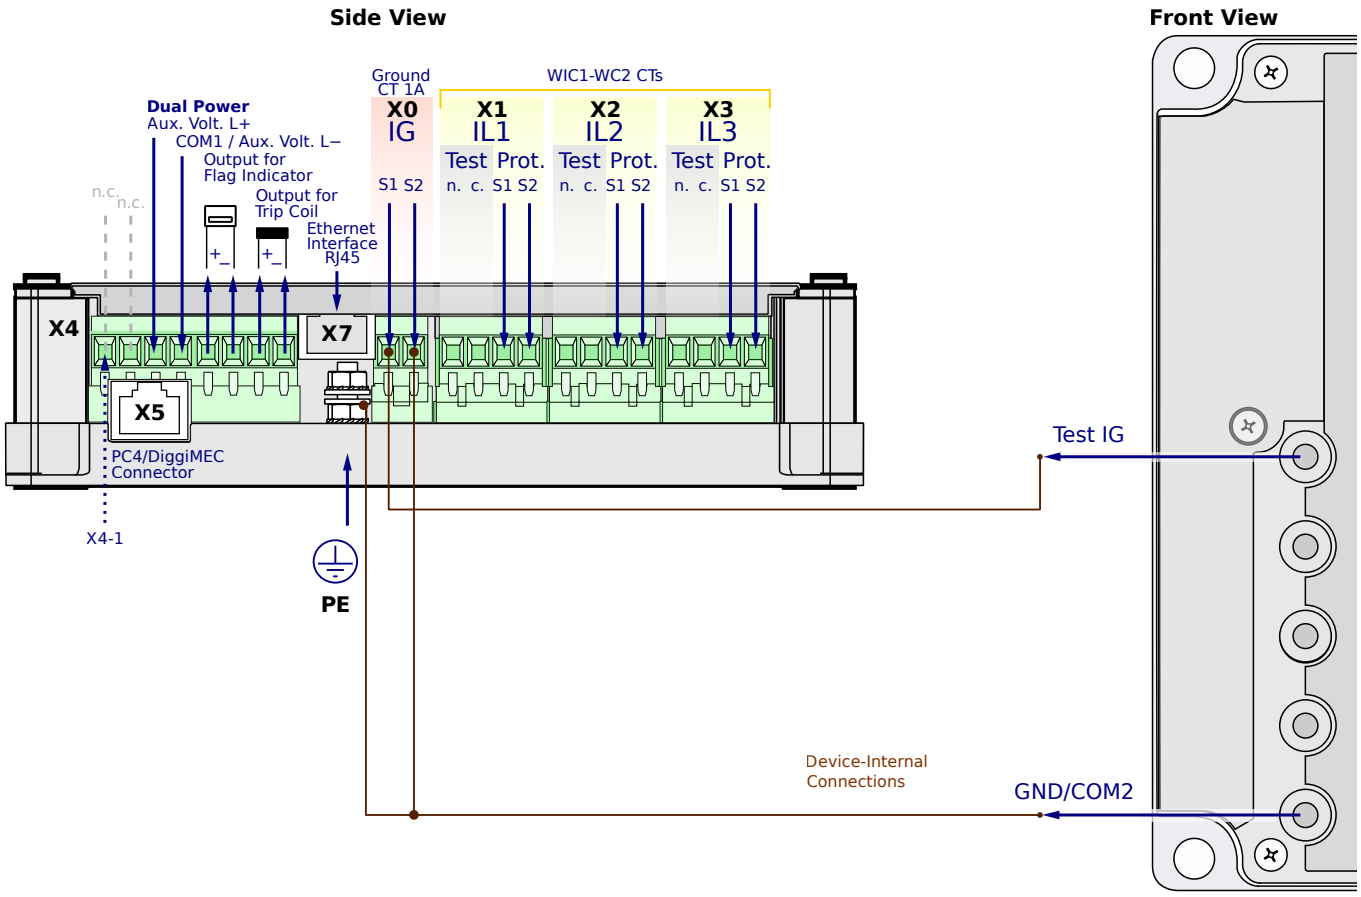


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1AL0

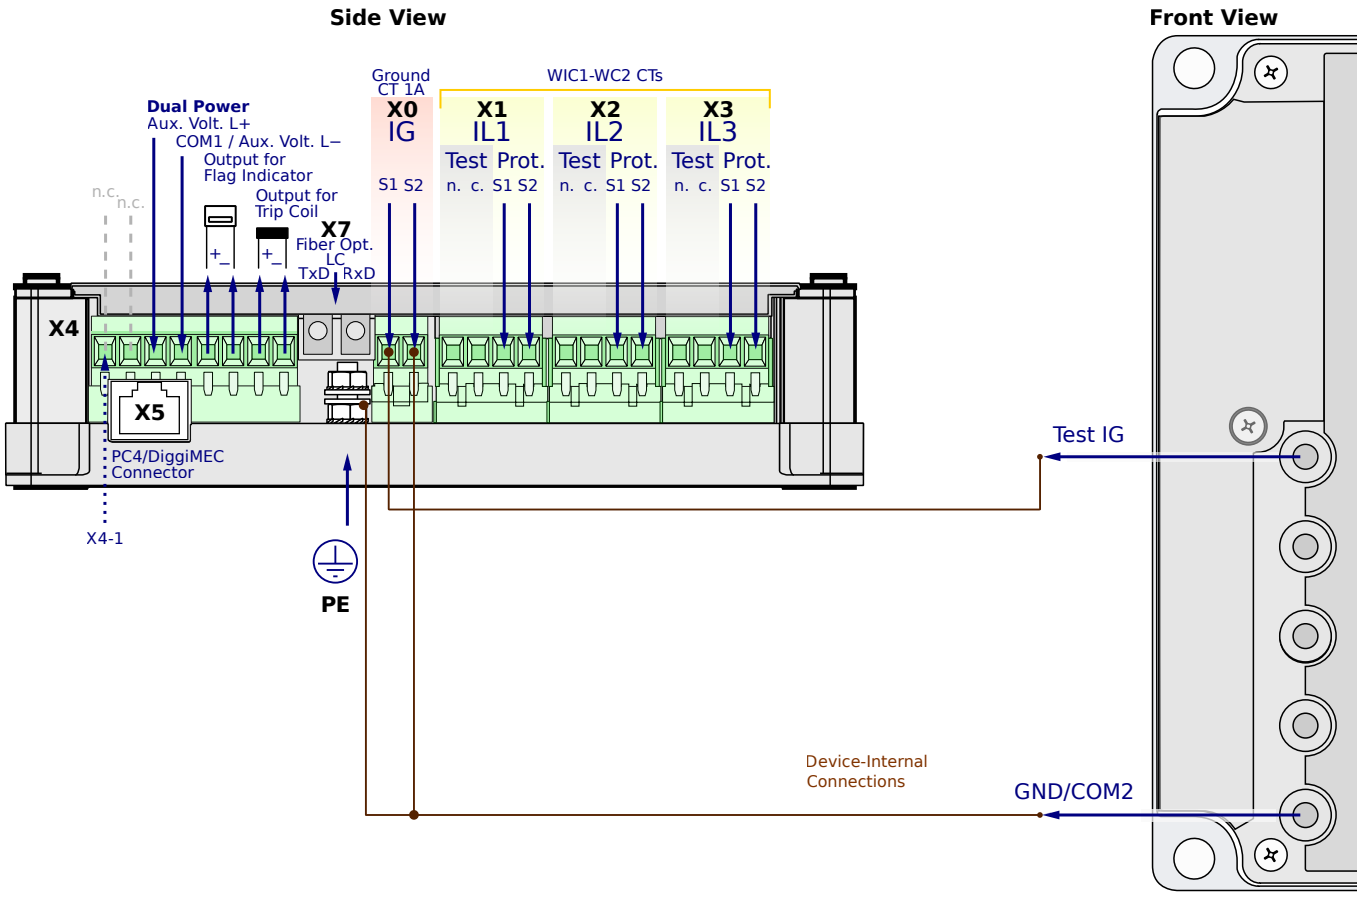


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1ALH

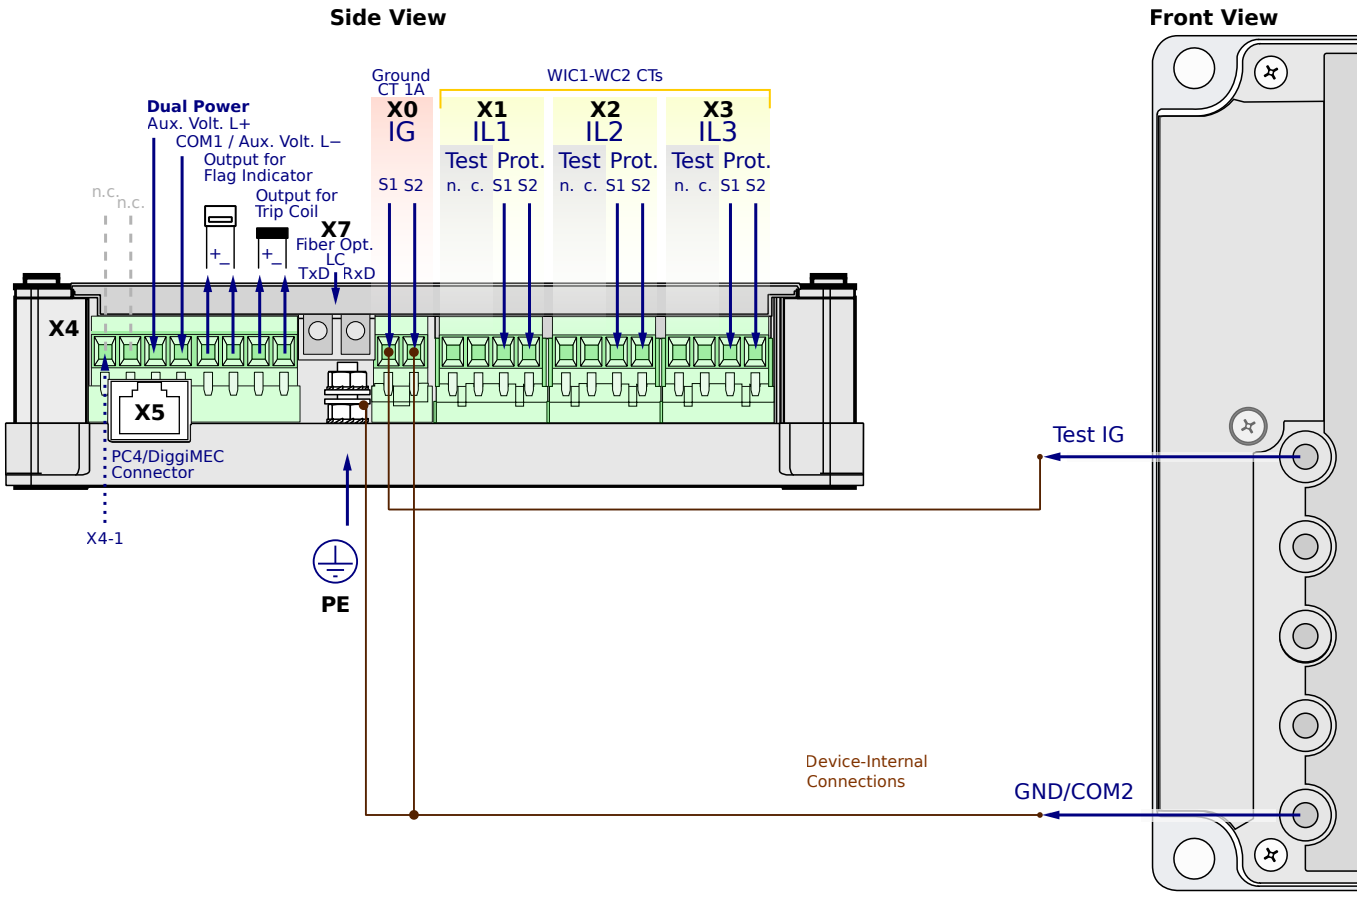


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1PA0

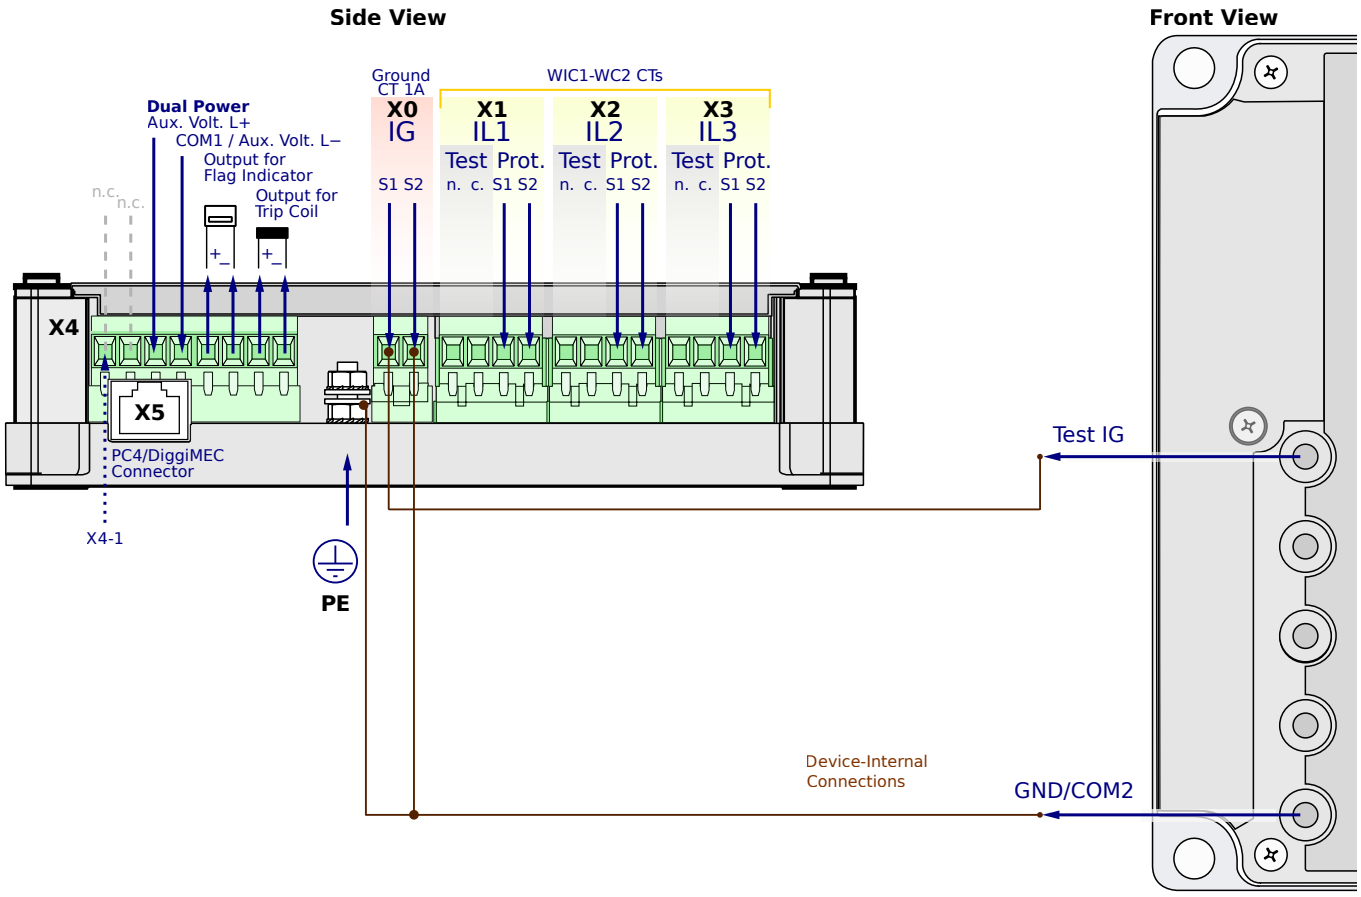


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1PAH

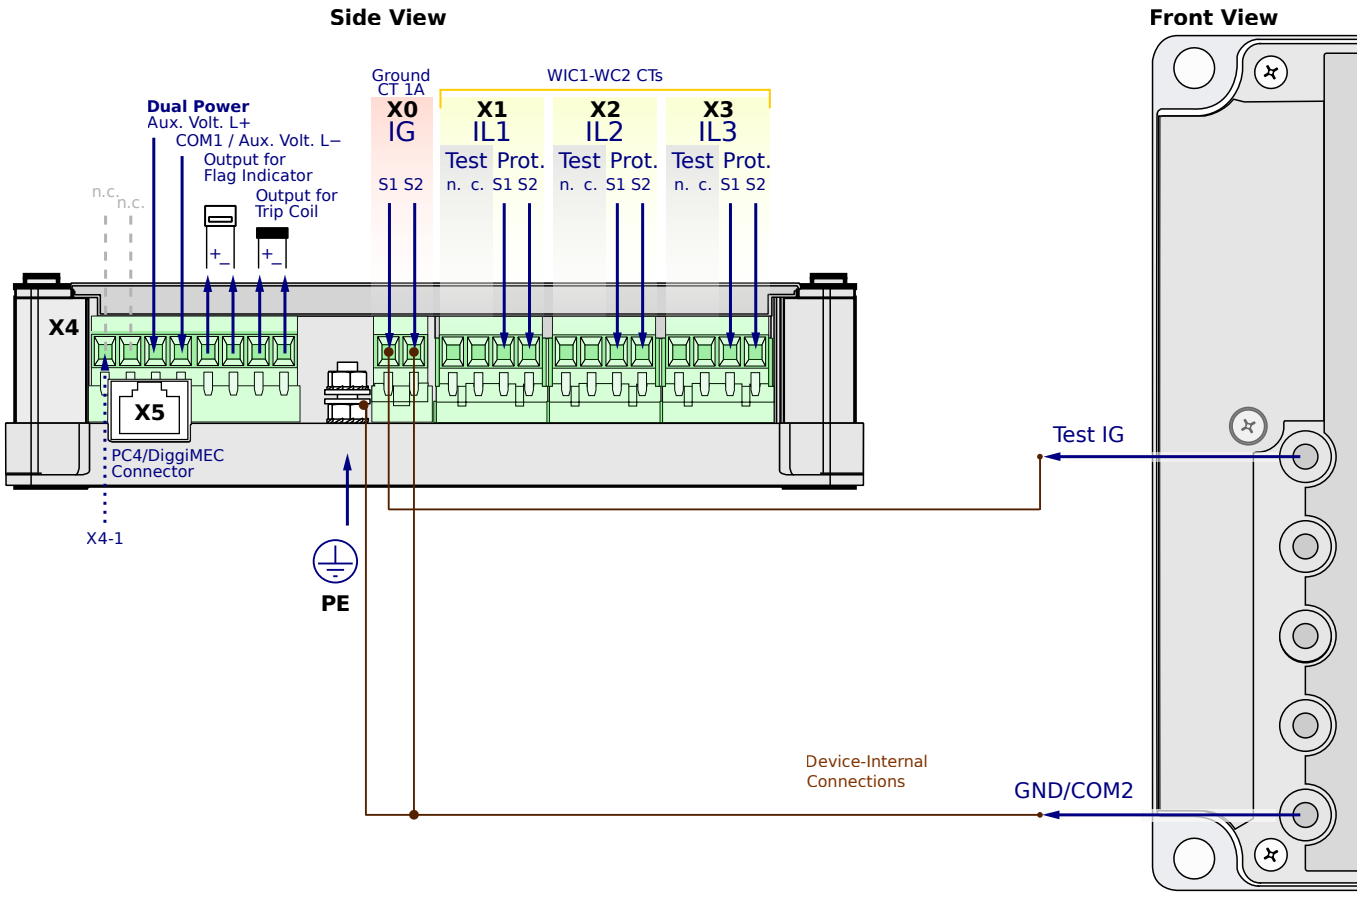


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM1PB0

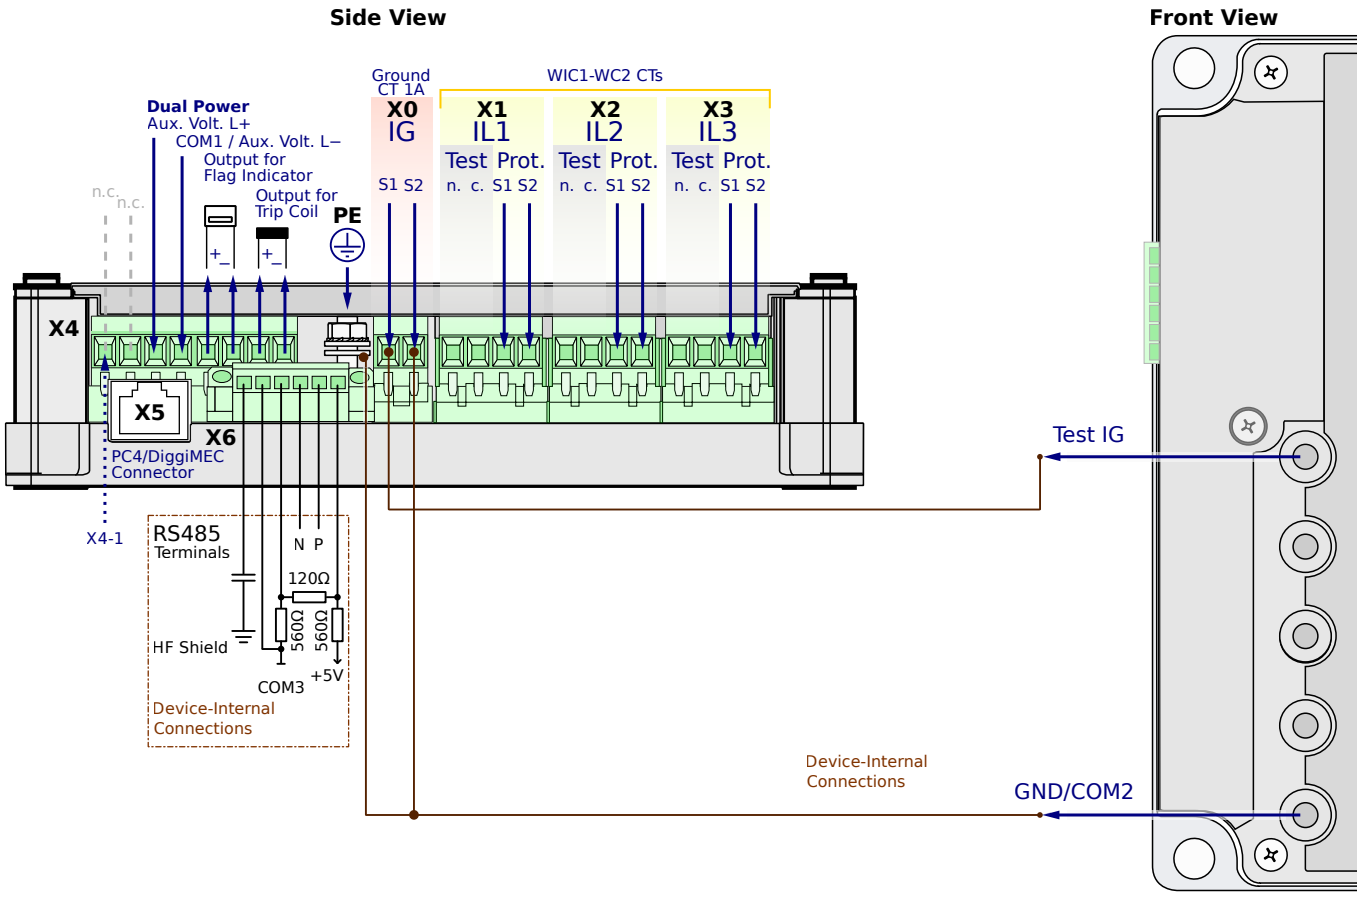


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1PBH

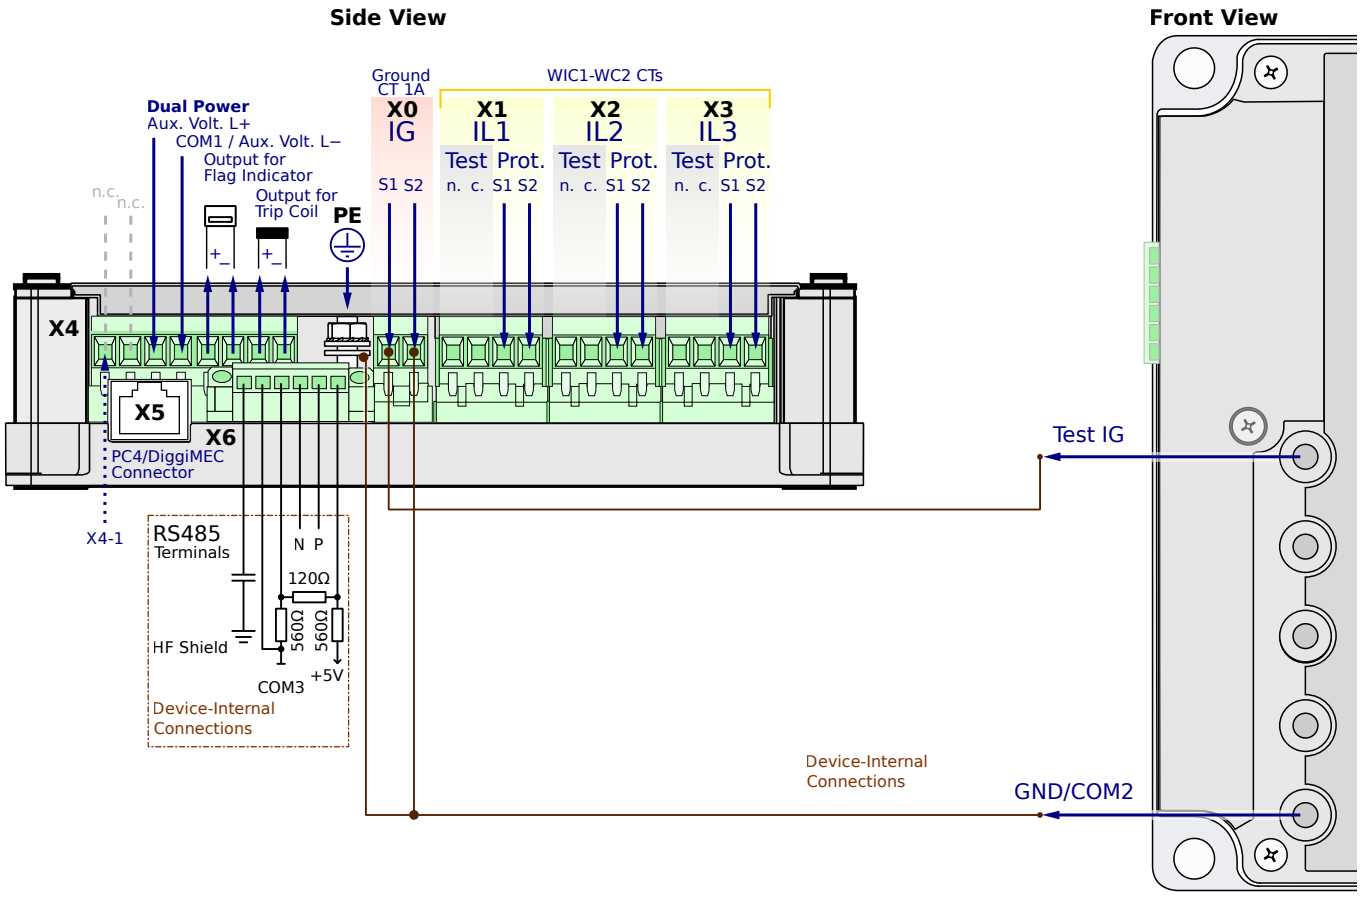


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM1PC0

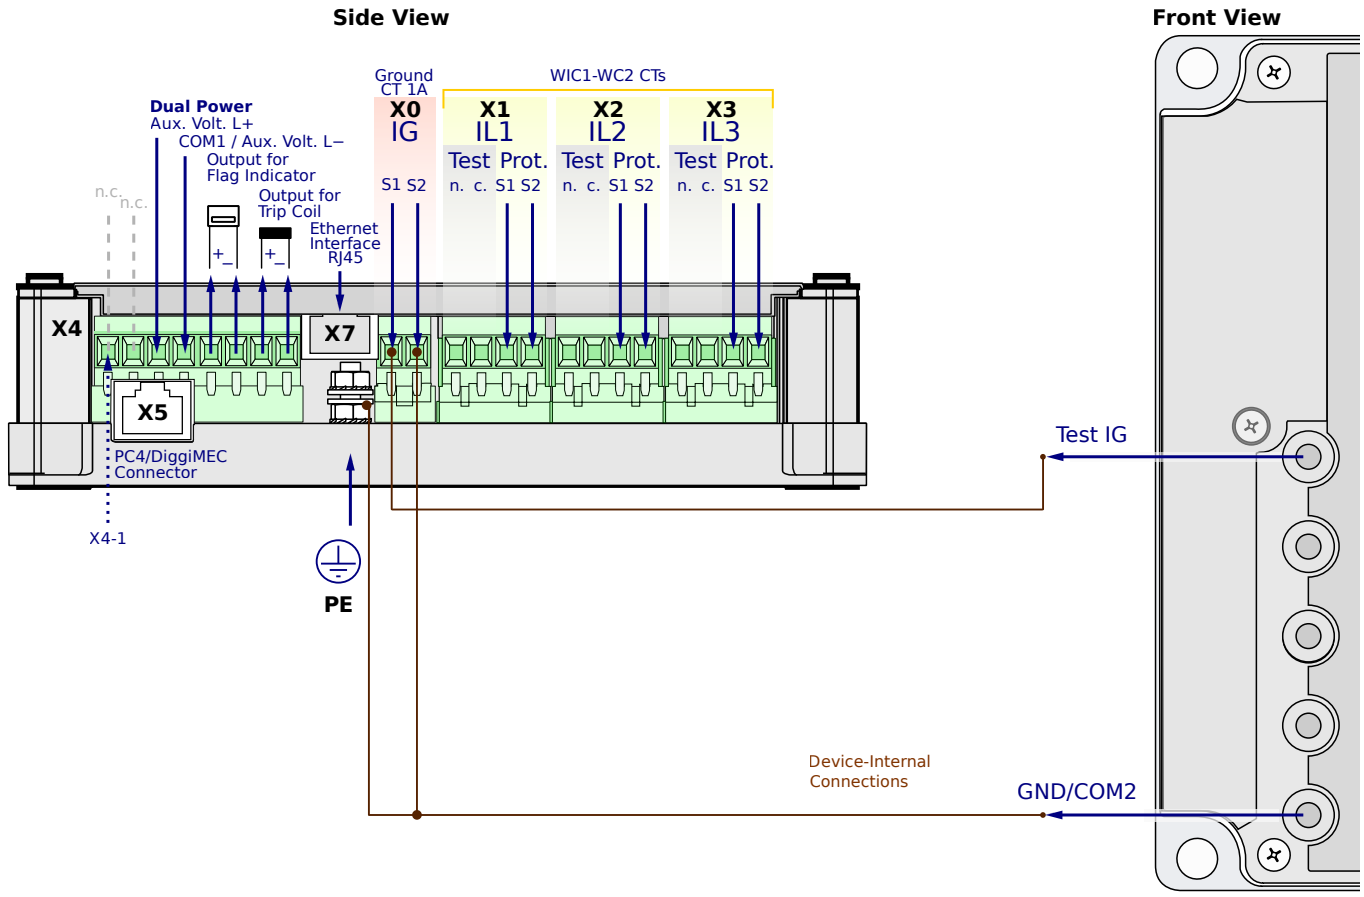


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1PCH

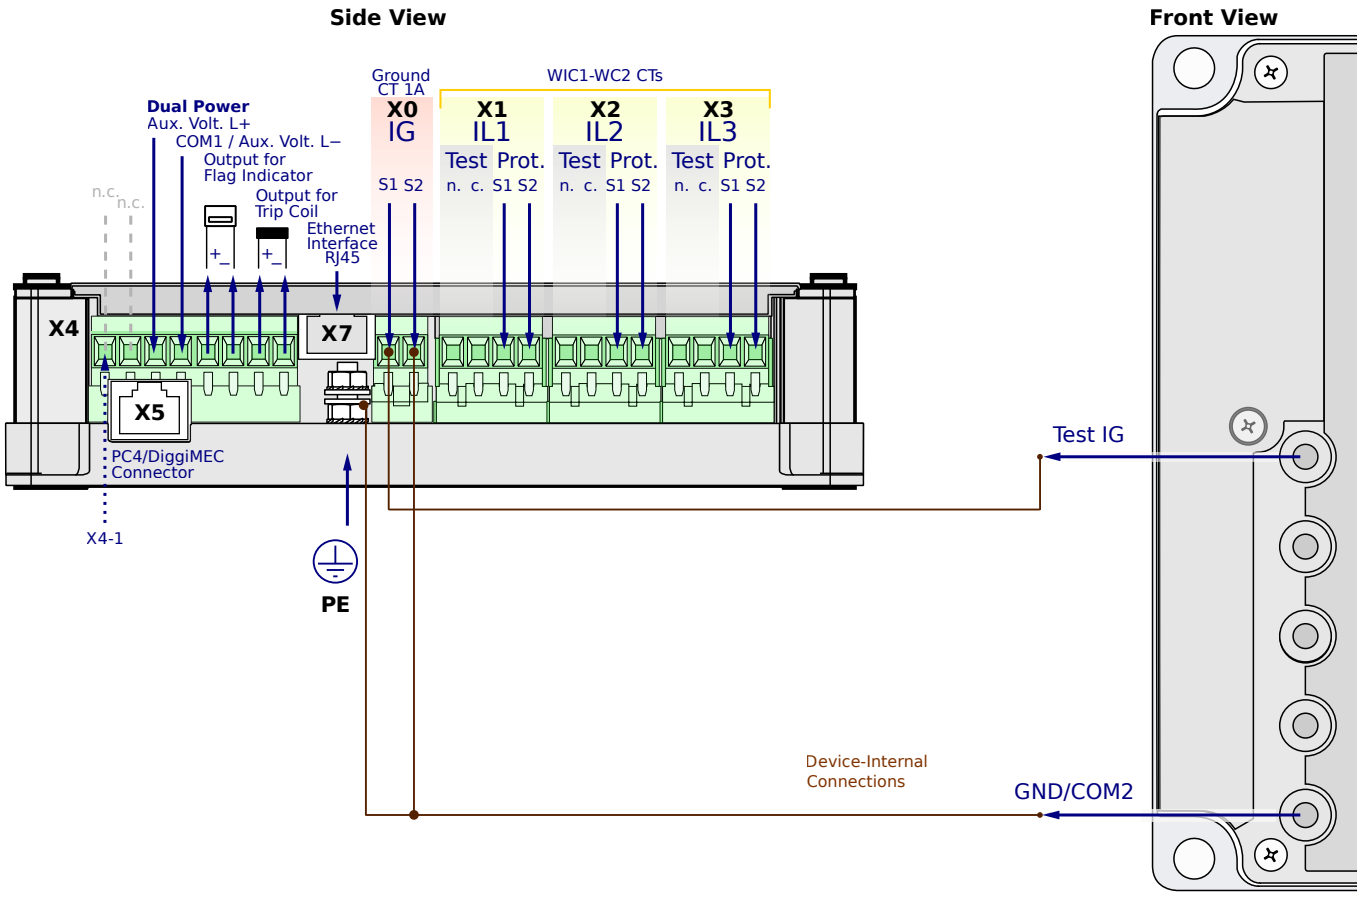


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM1PL0

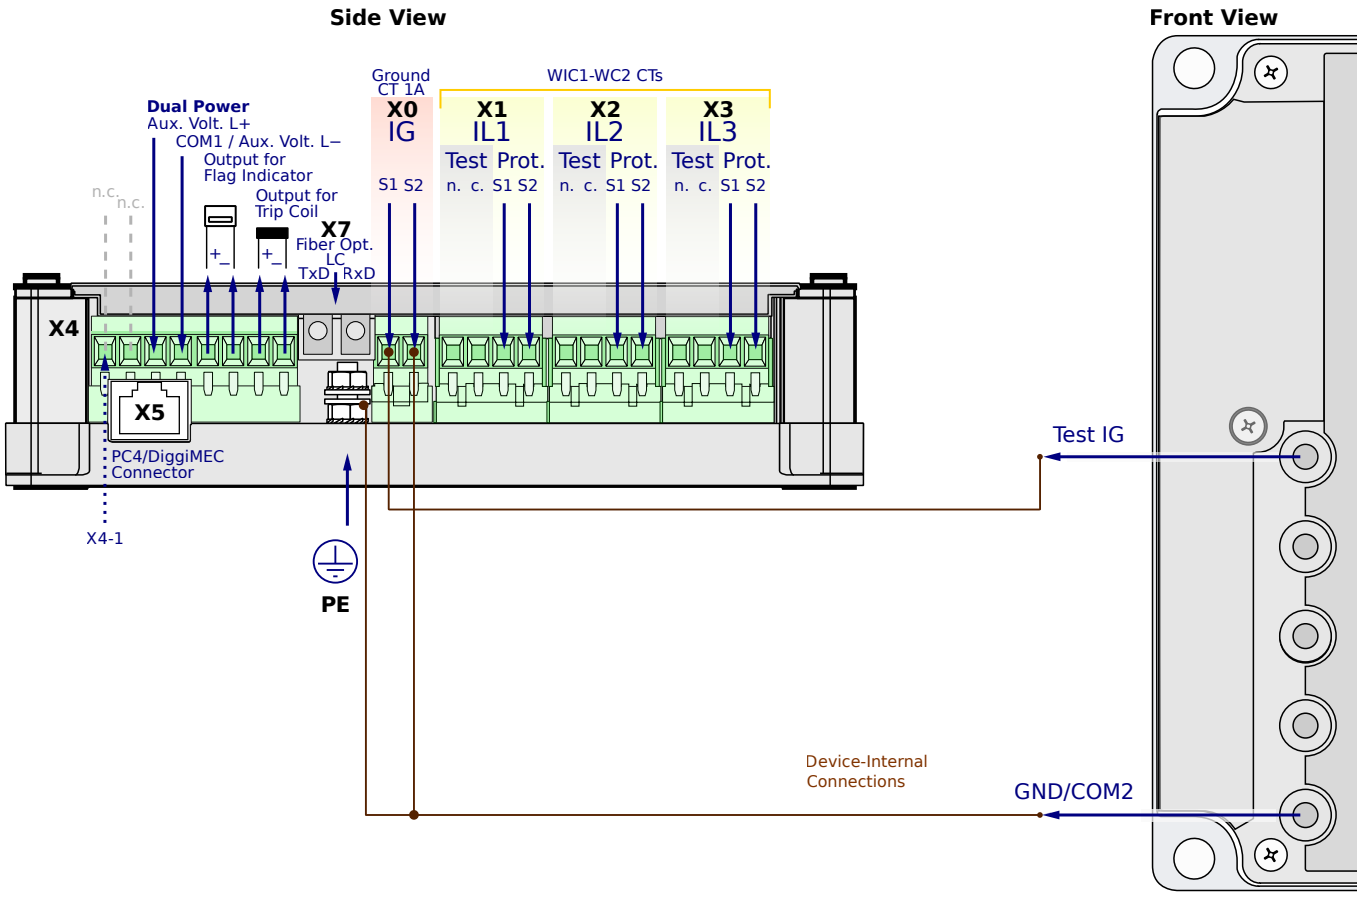


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM1PLH

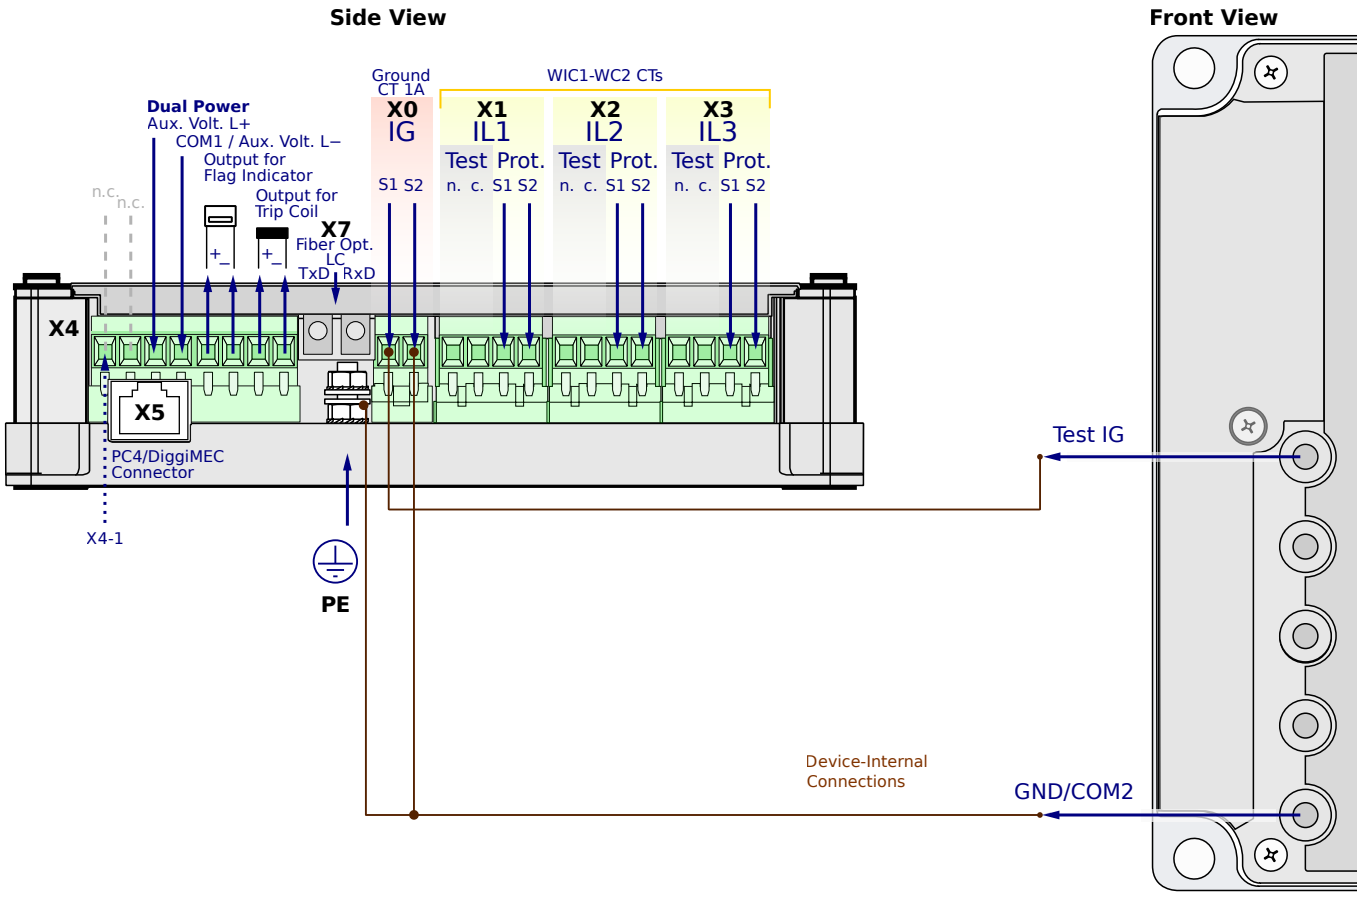


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2SA0

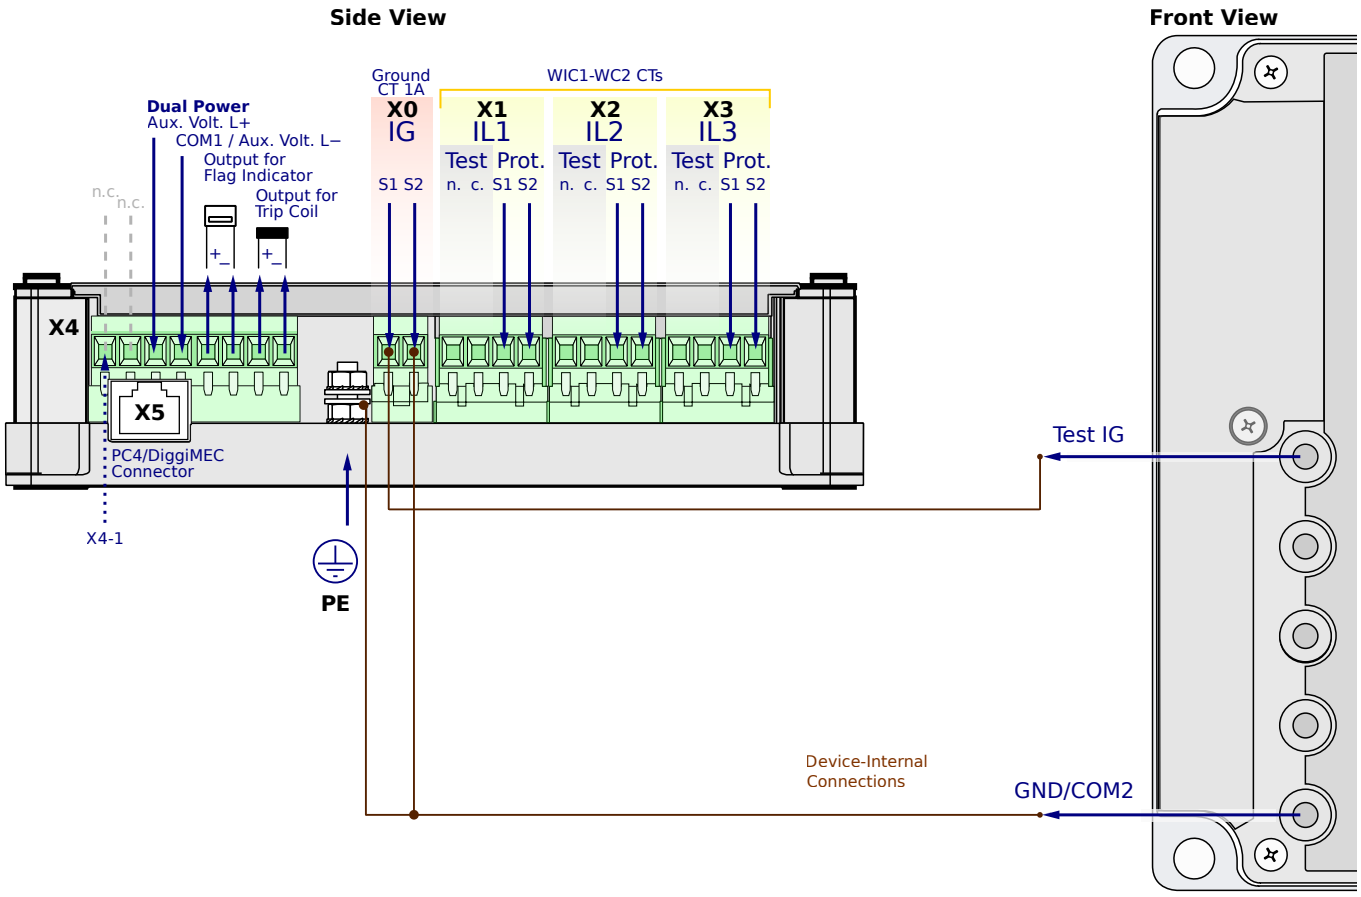


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2SAH

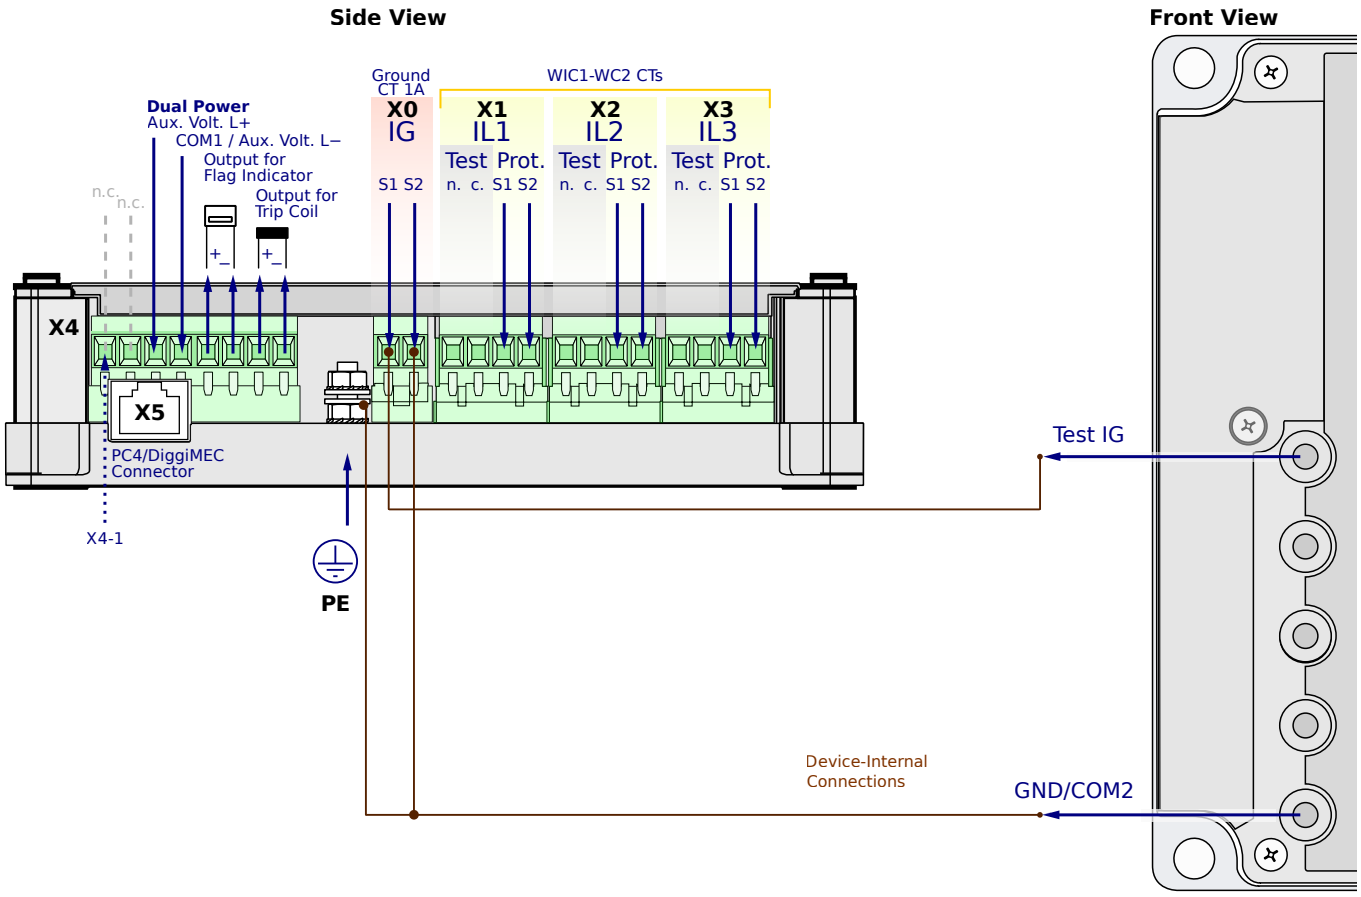


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2SB0

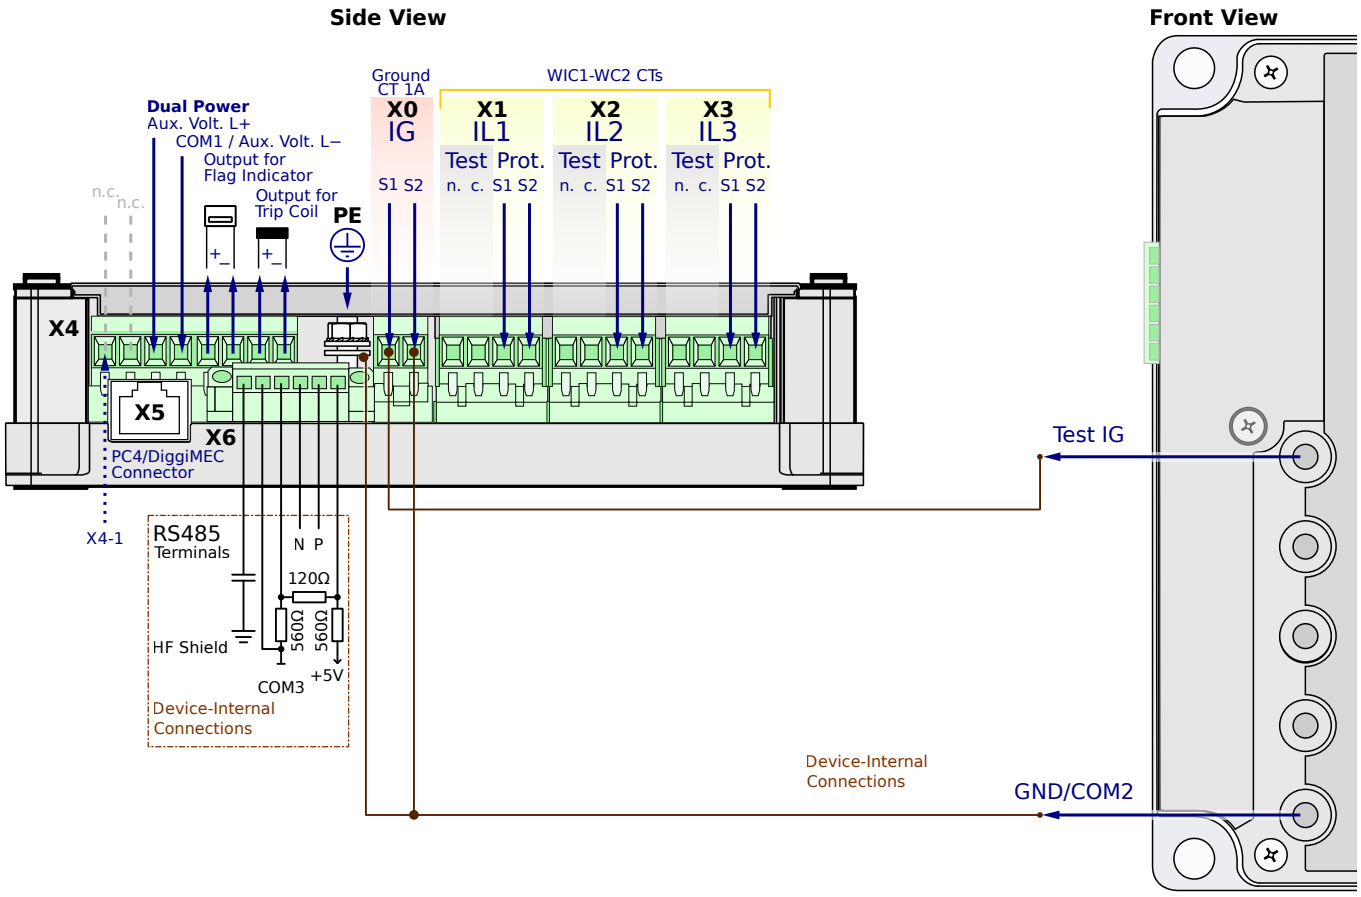


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2SBH

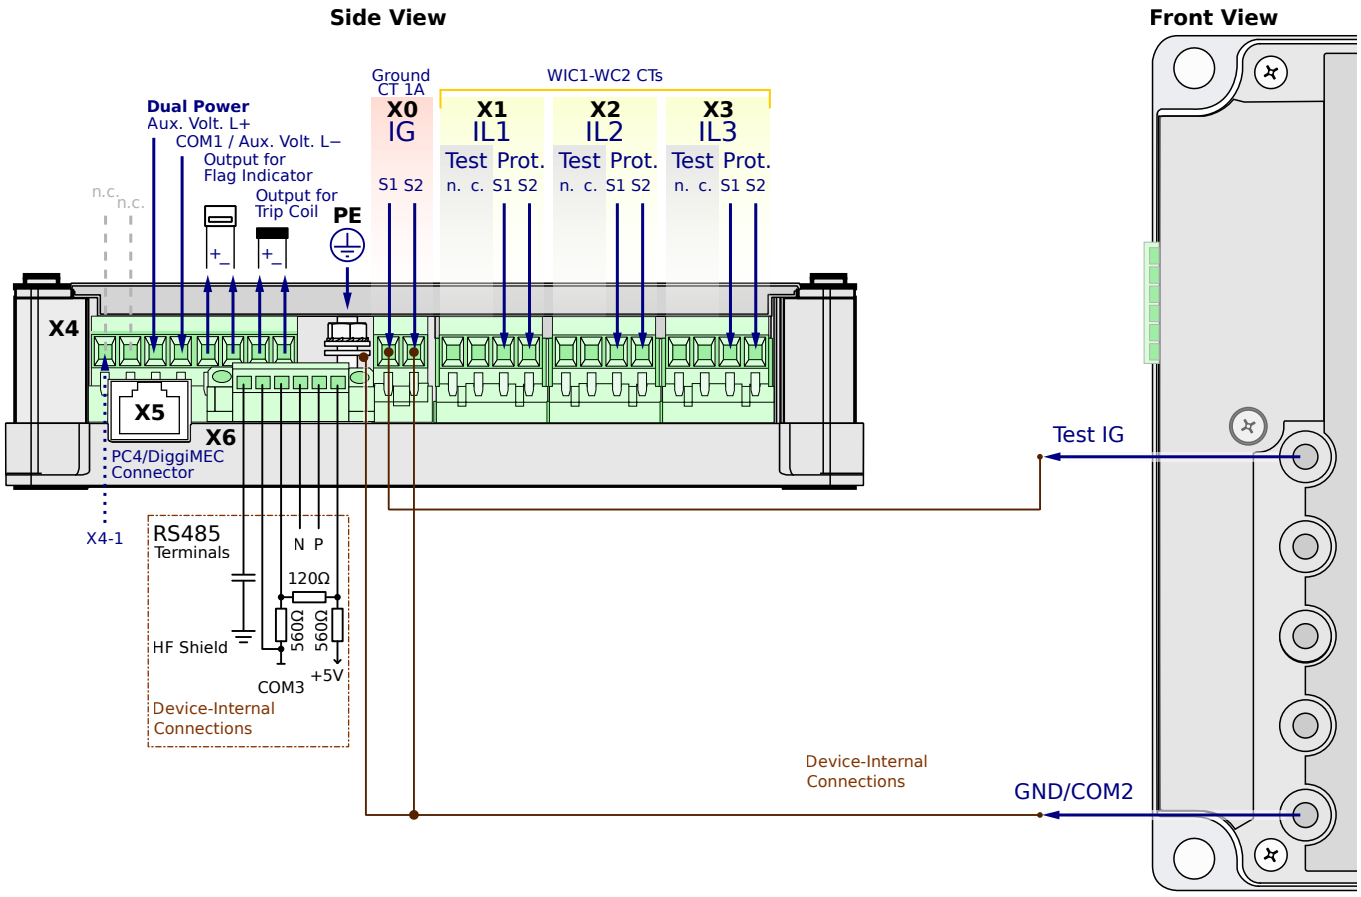


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2SC0

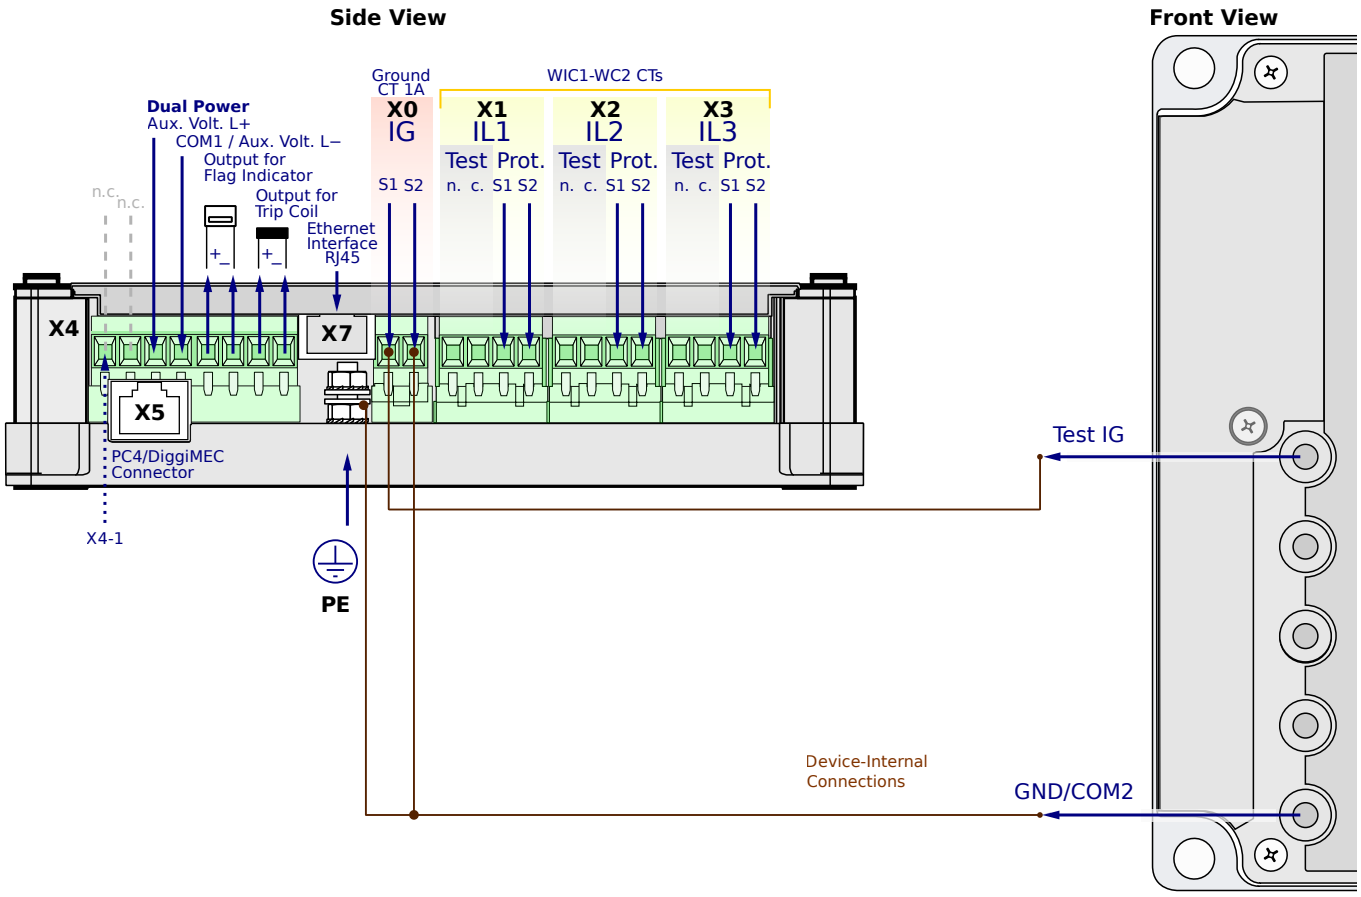


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2SCH

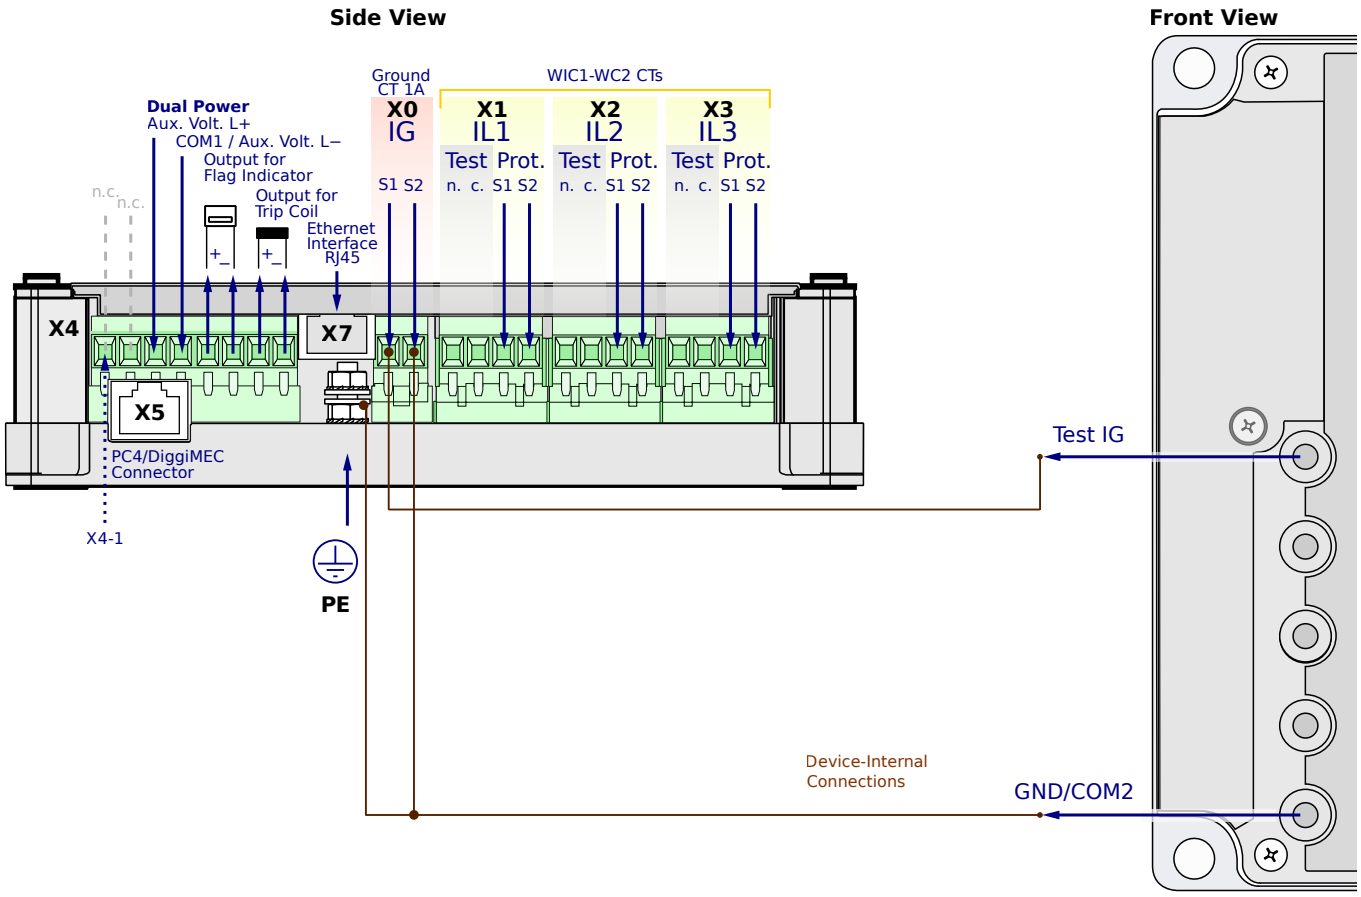


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2SL0

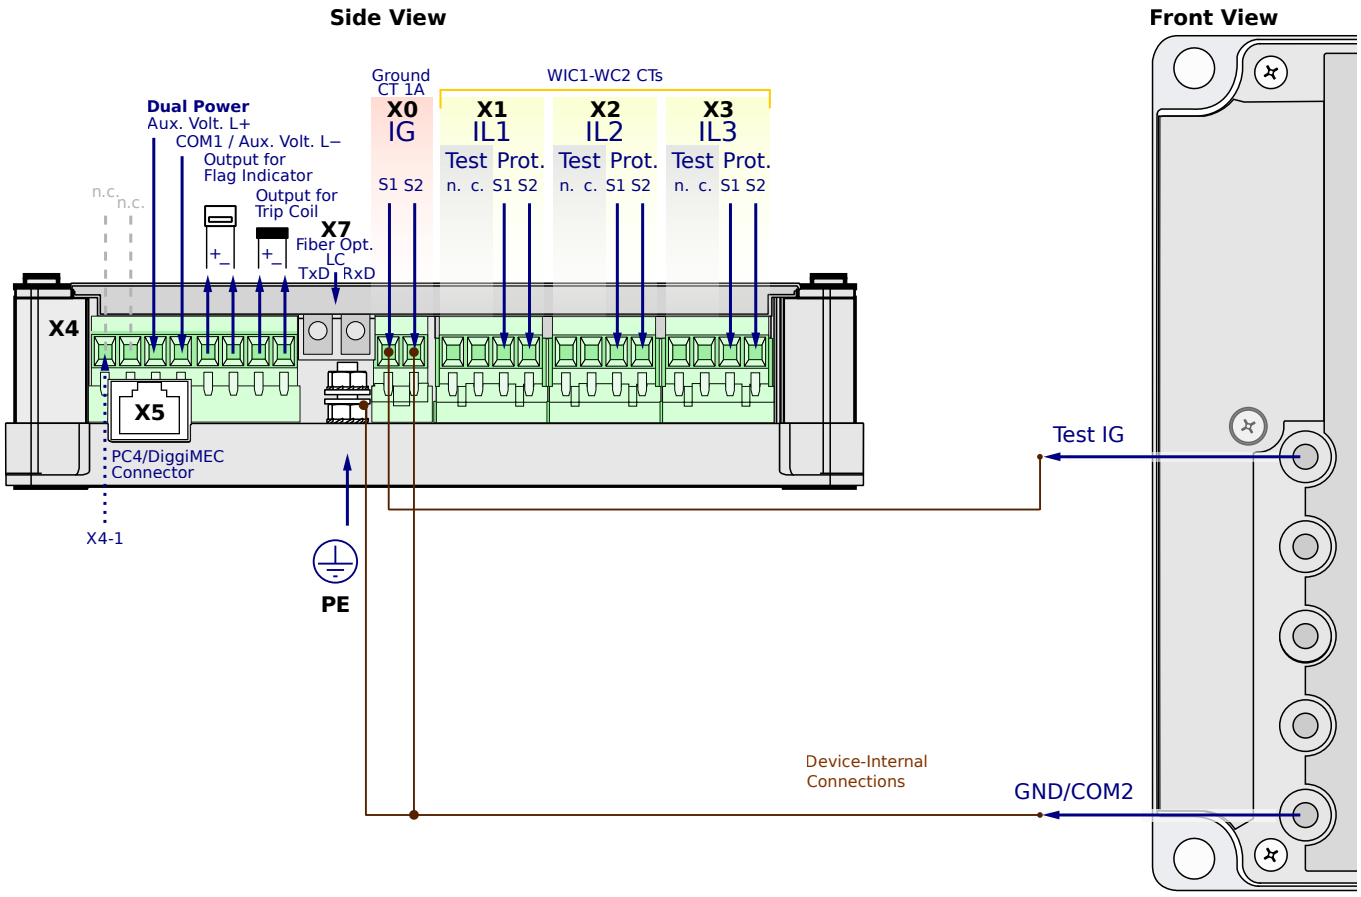


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2SLH

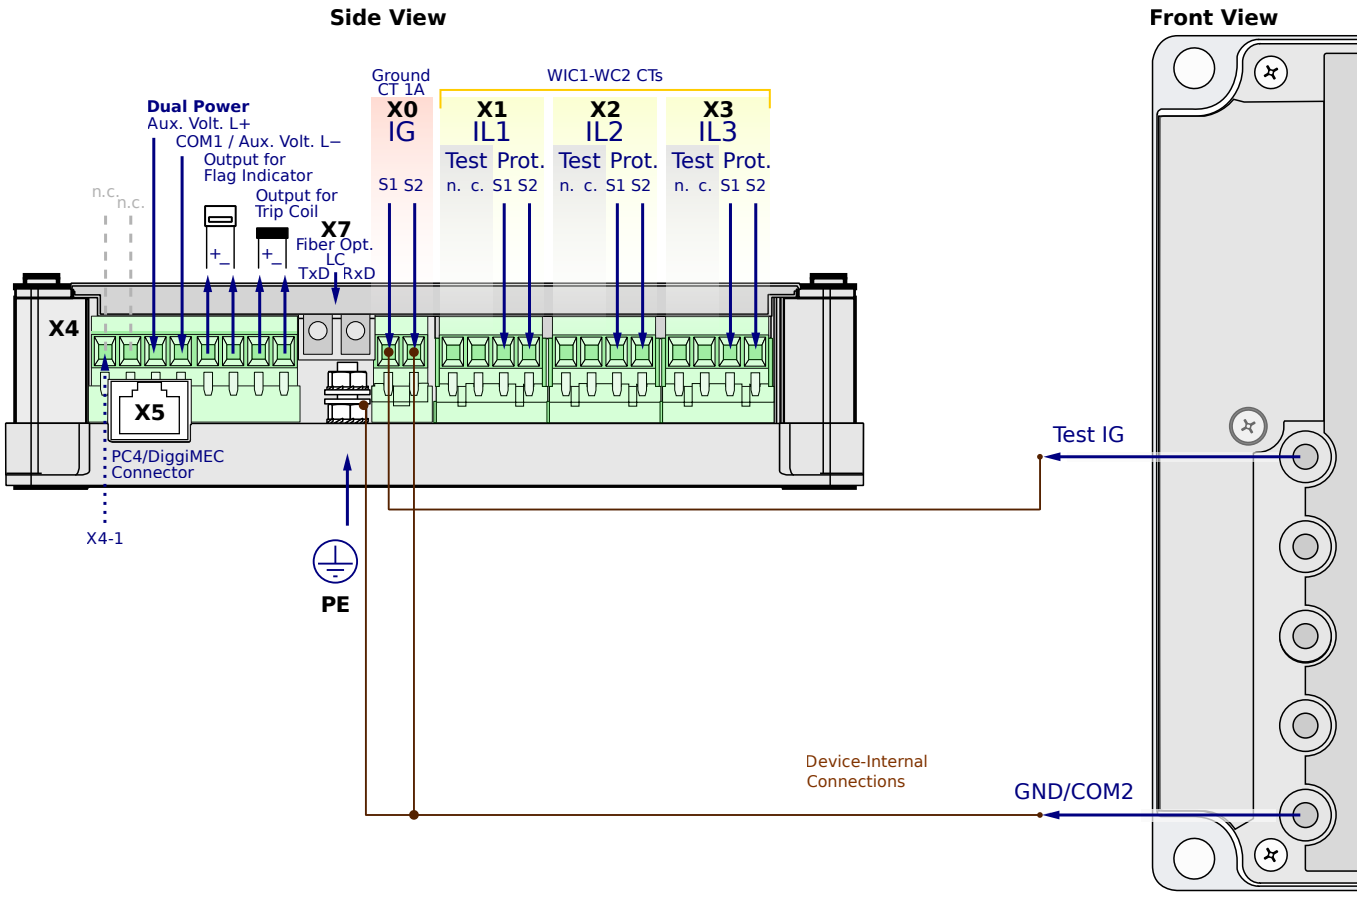


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2AA0

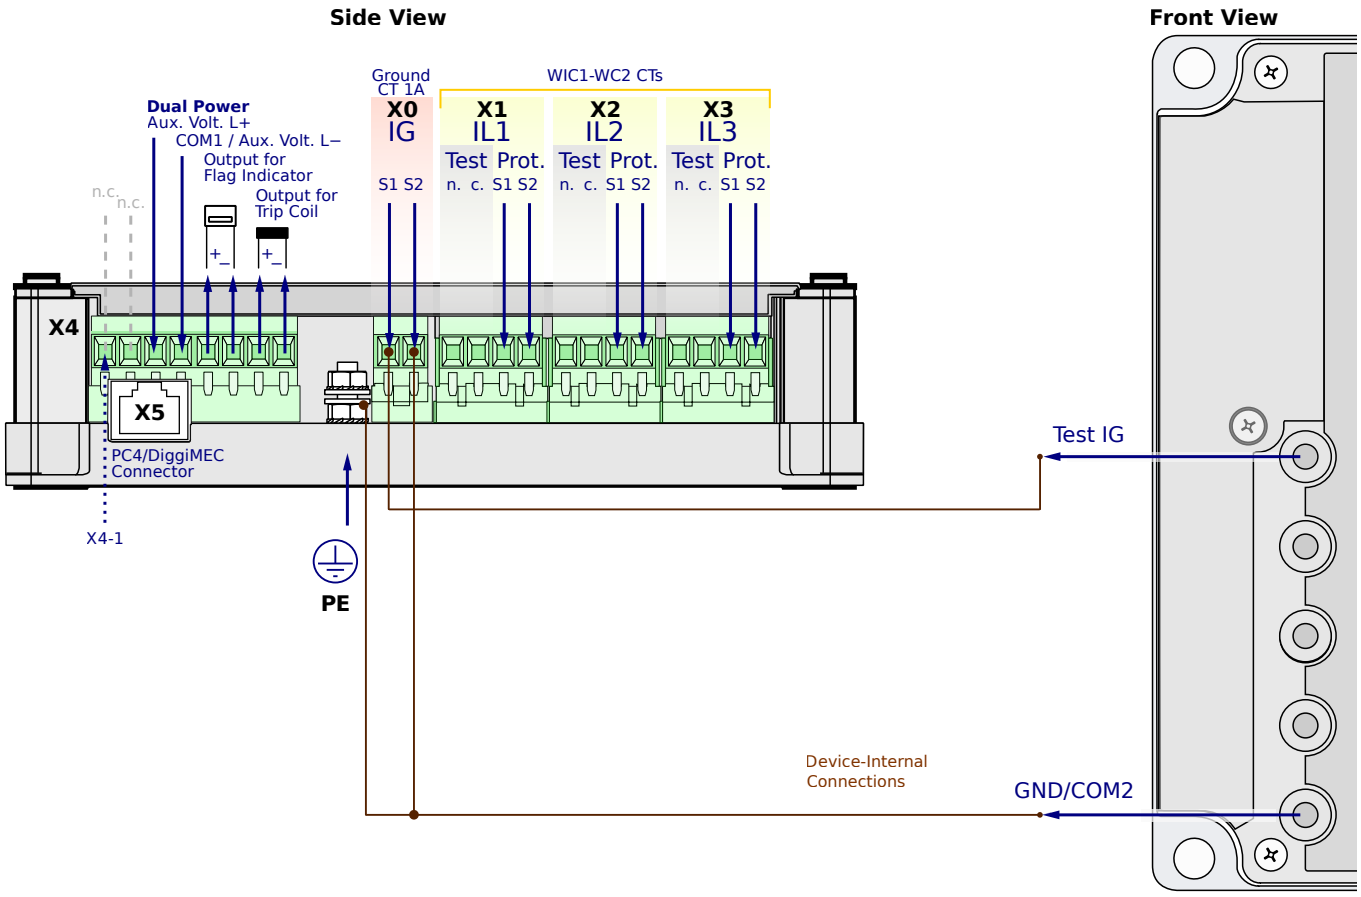


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2AAH

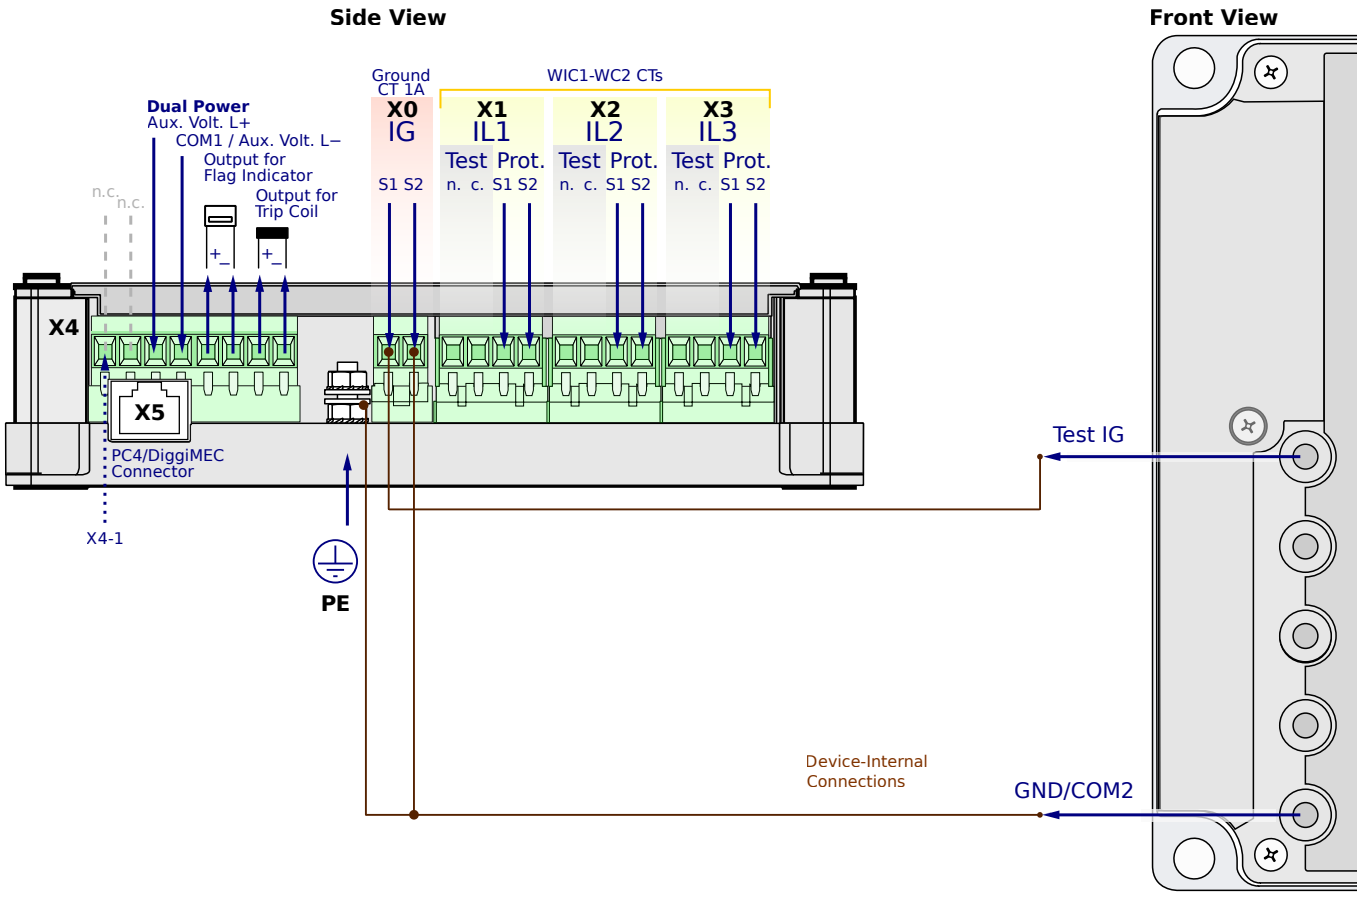


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2AB0

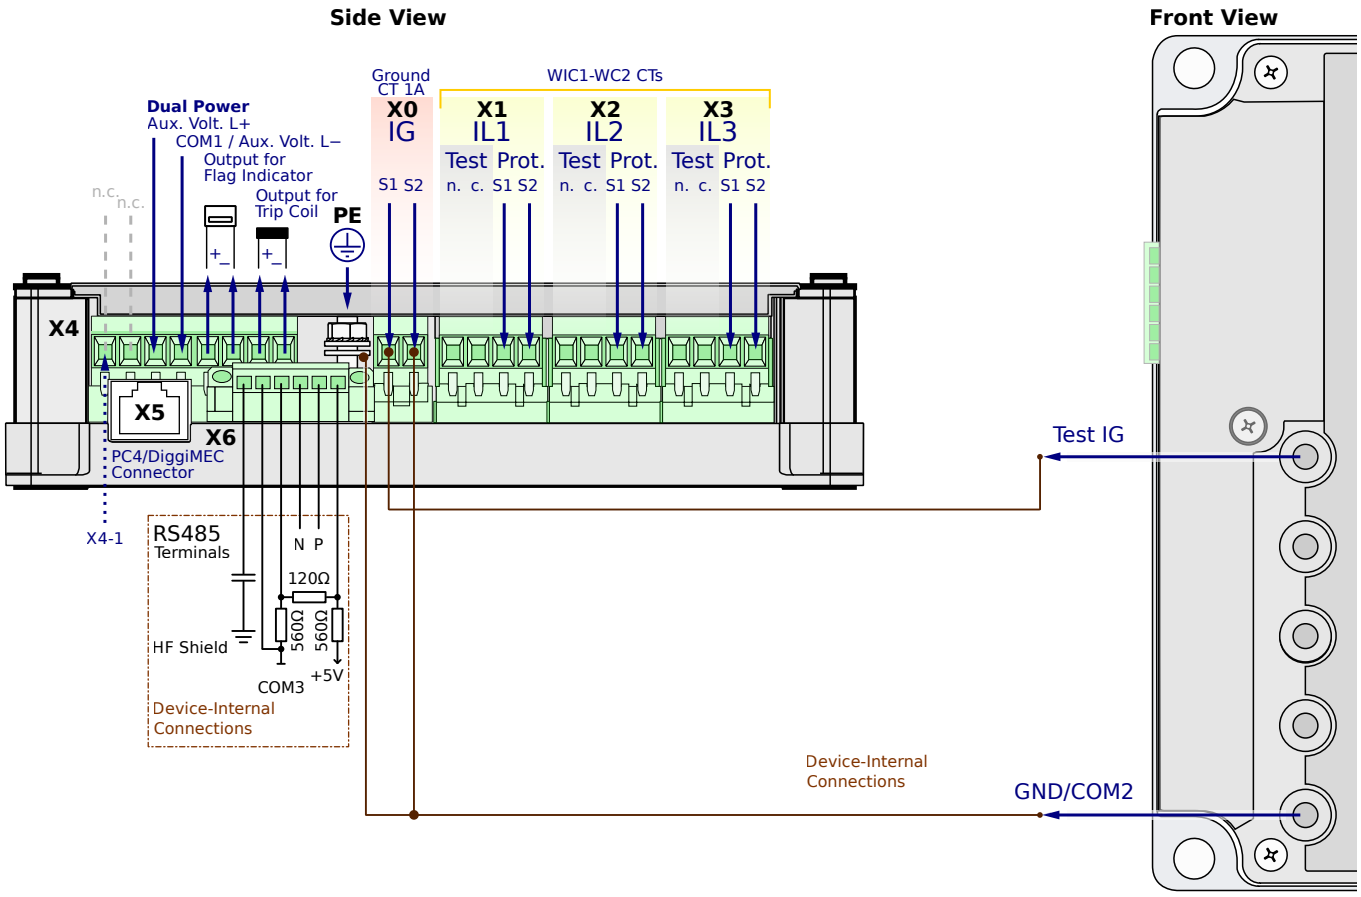


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2ABH

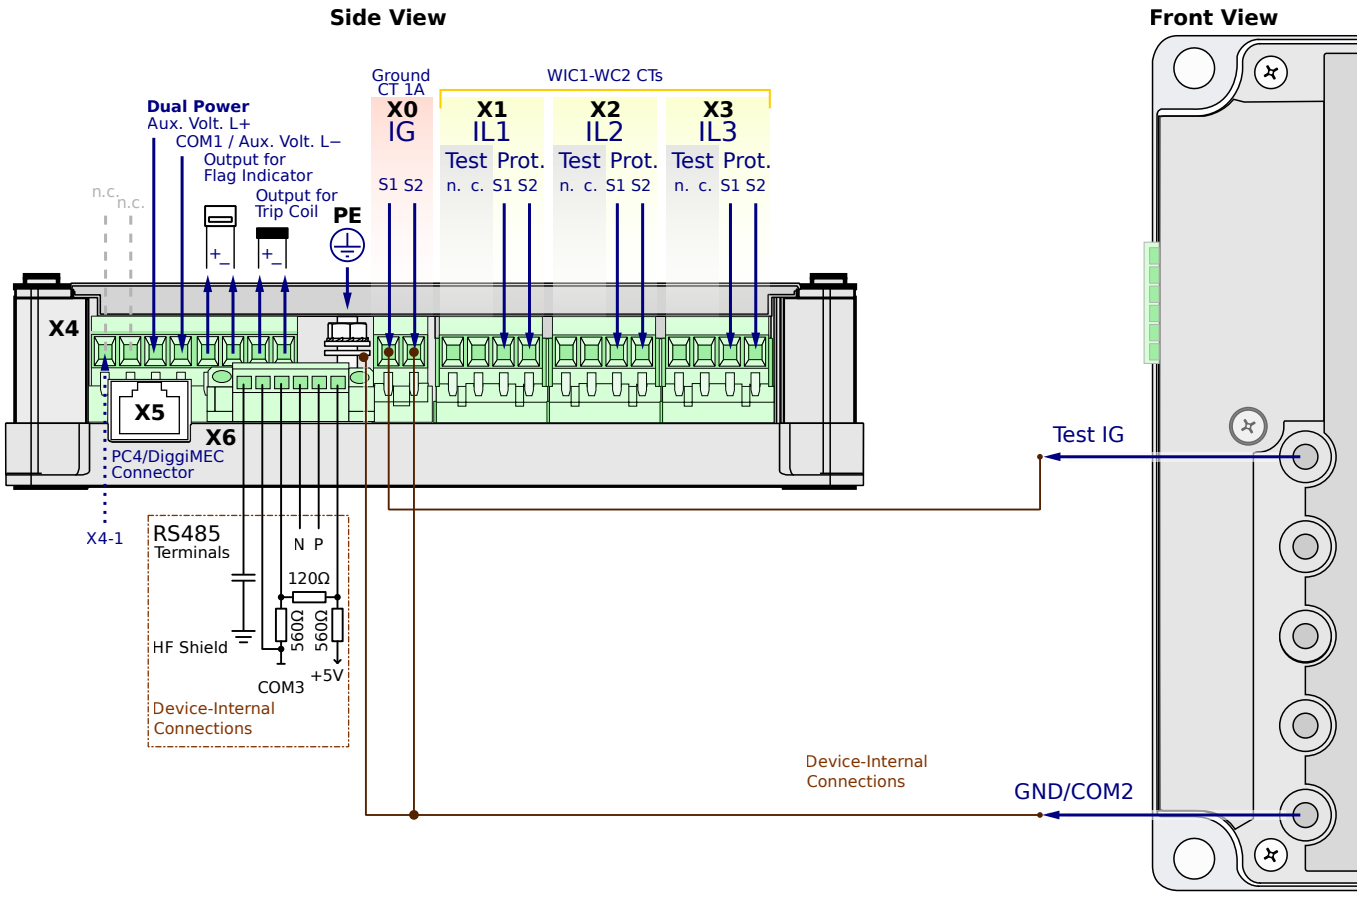


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2AC0

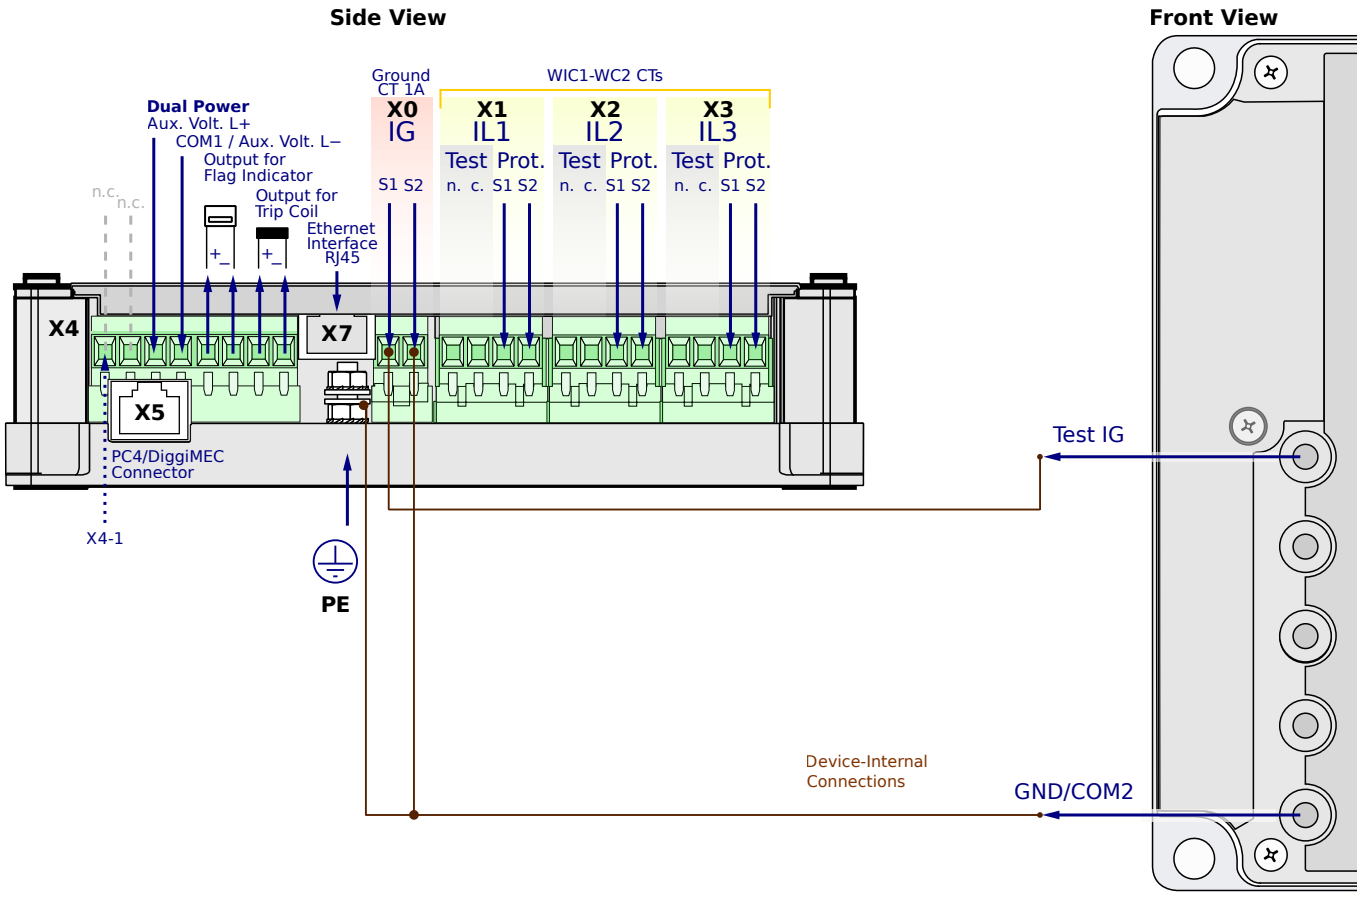


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2ACH

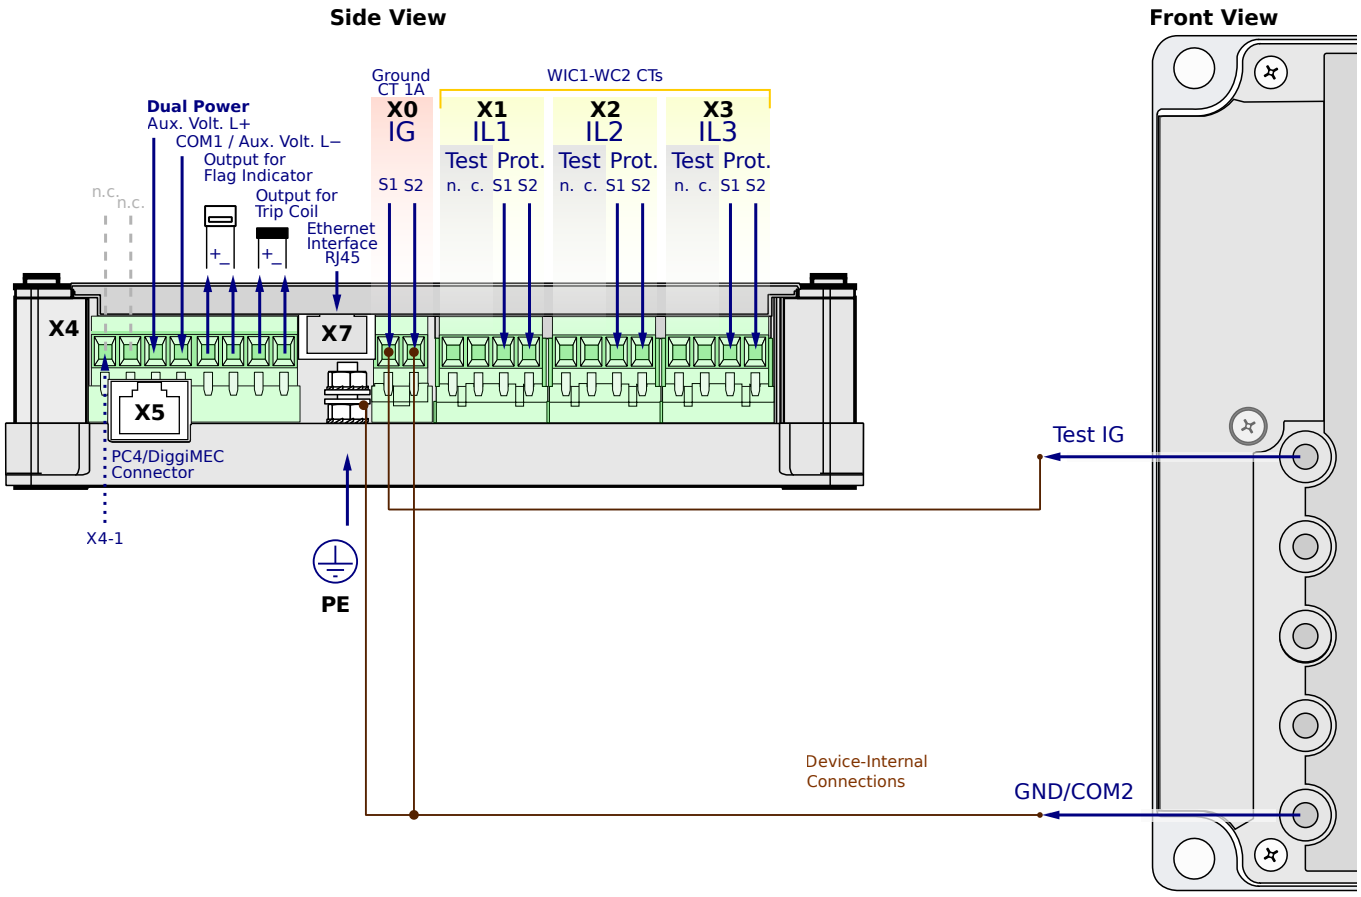


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2AL0

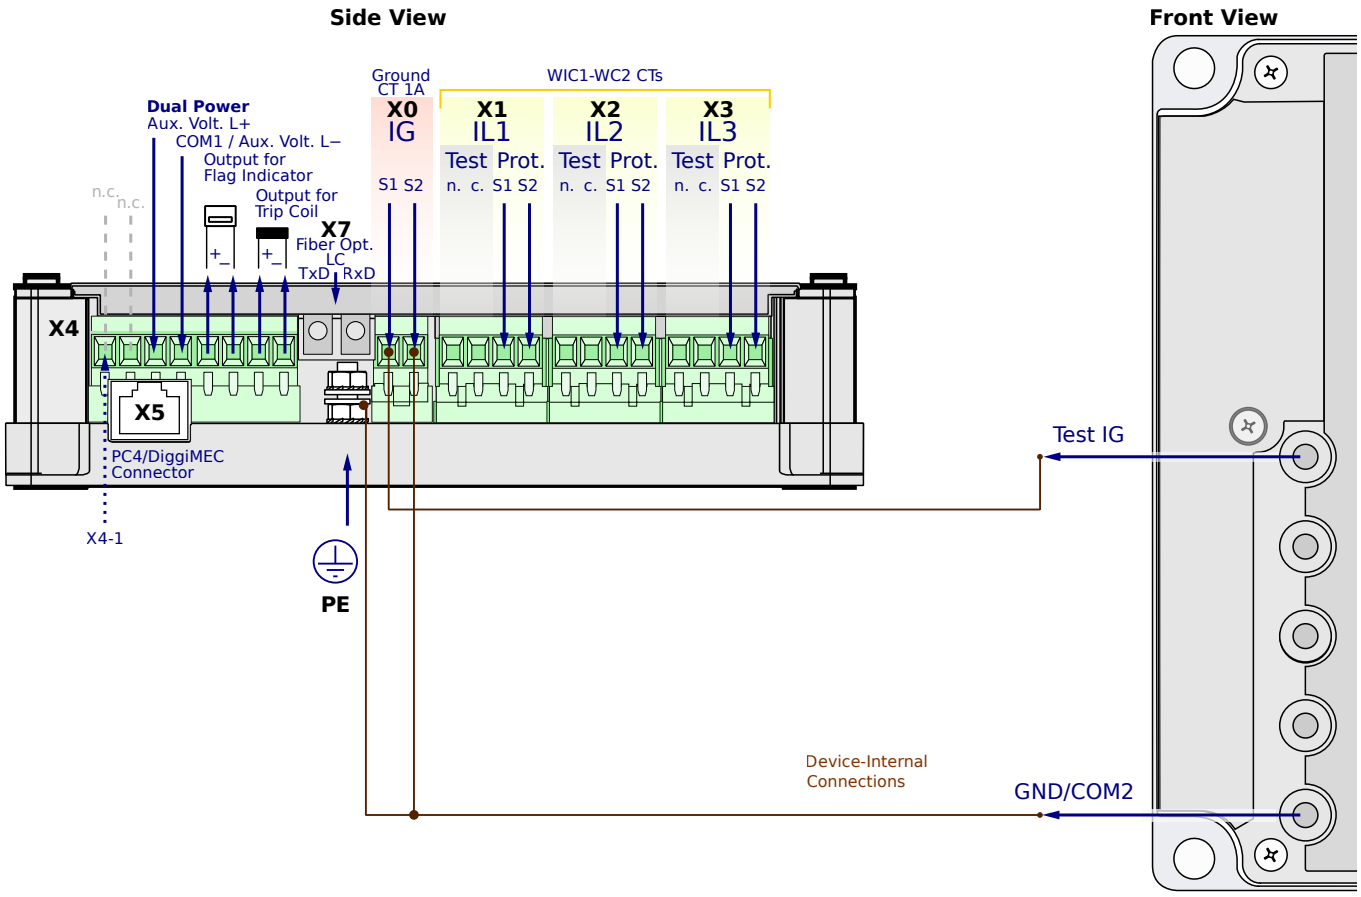


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2ALH

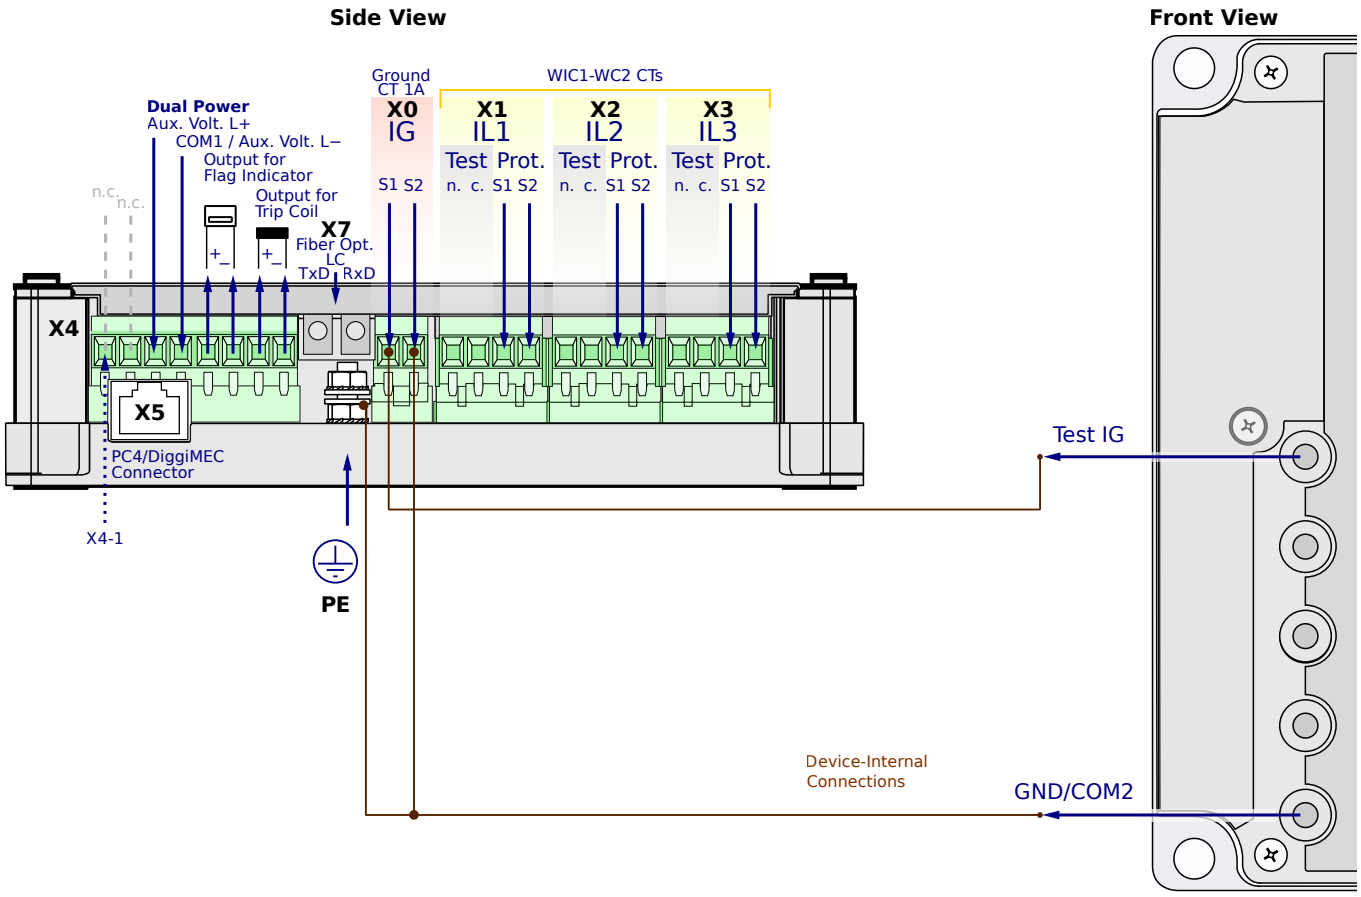


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2PA0

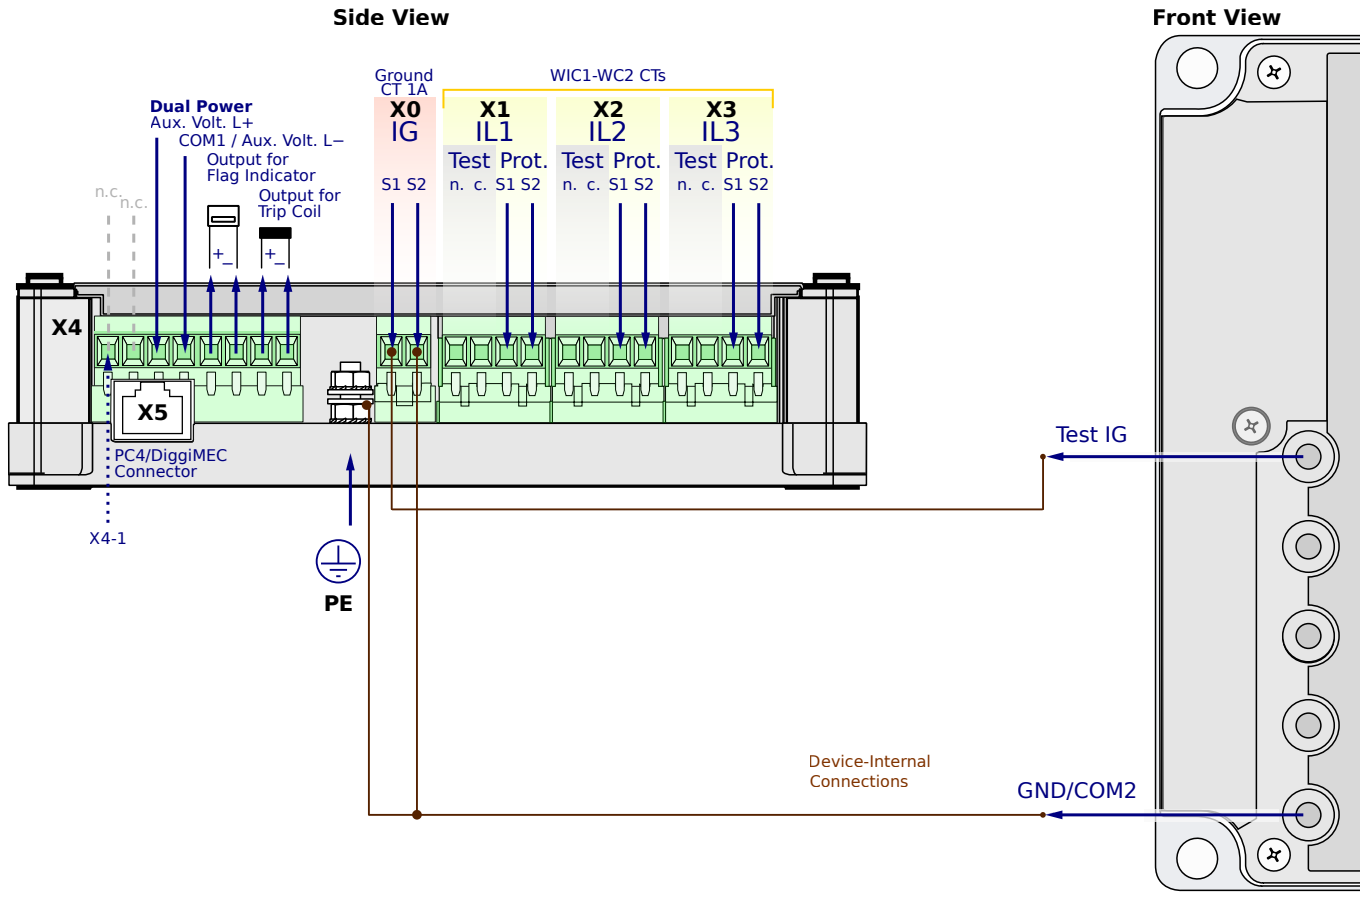


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2PAH

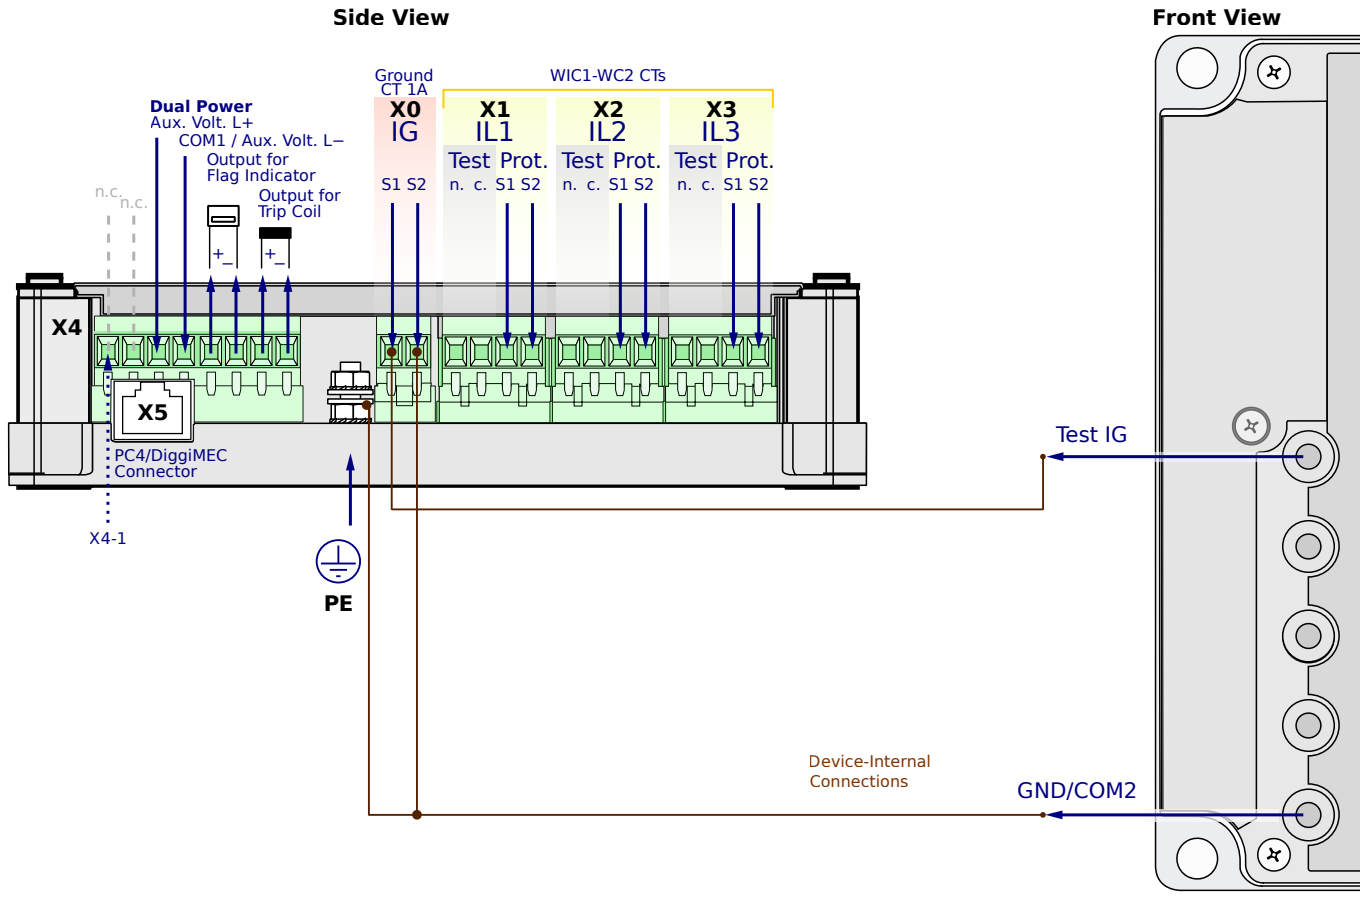


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CM2PB0

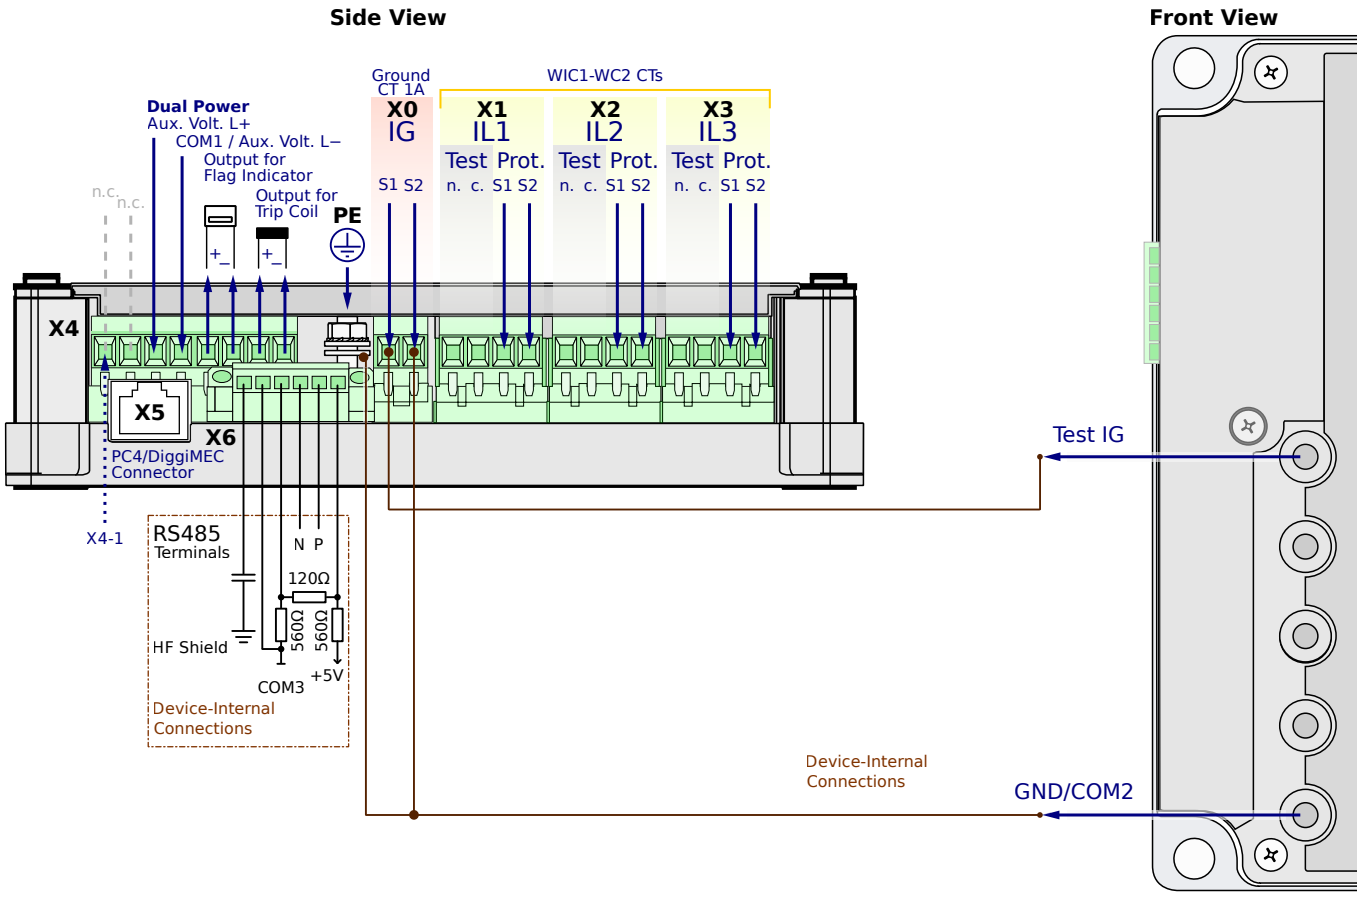


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2PBH

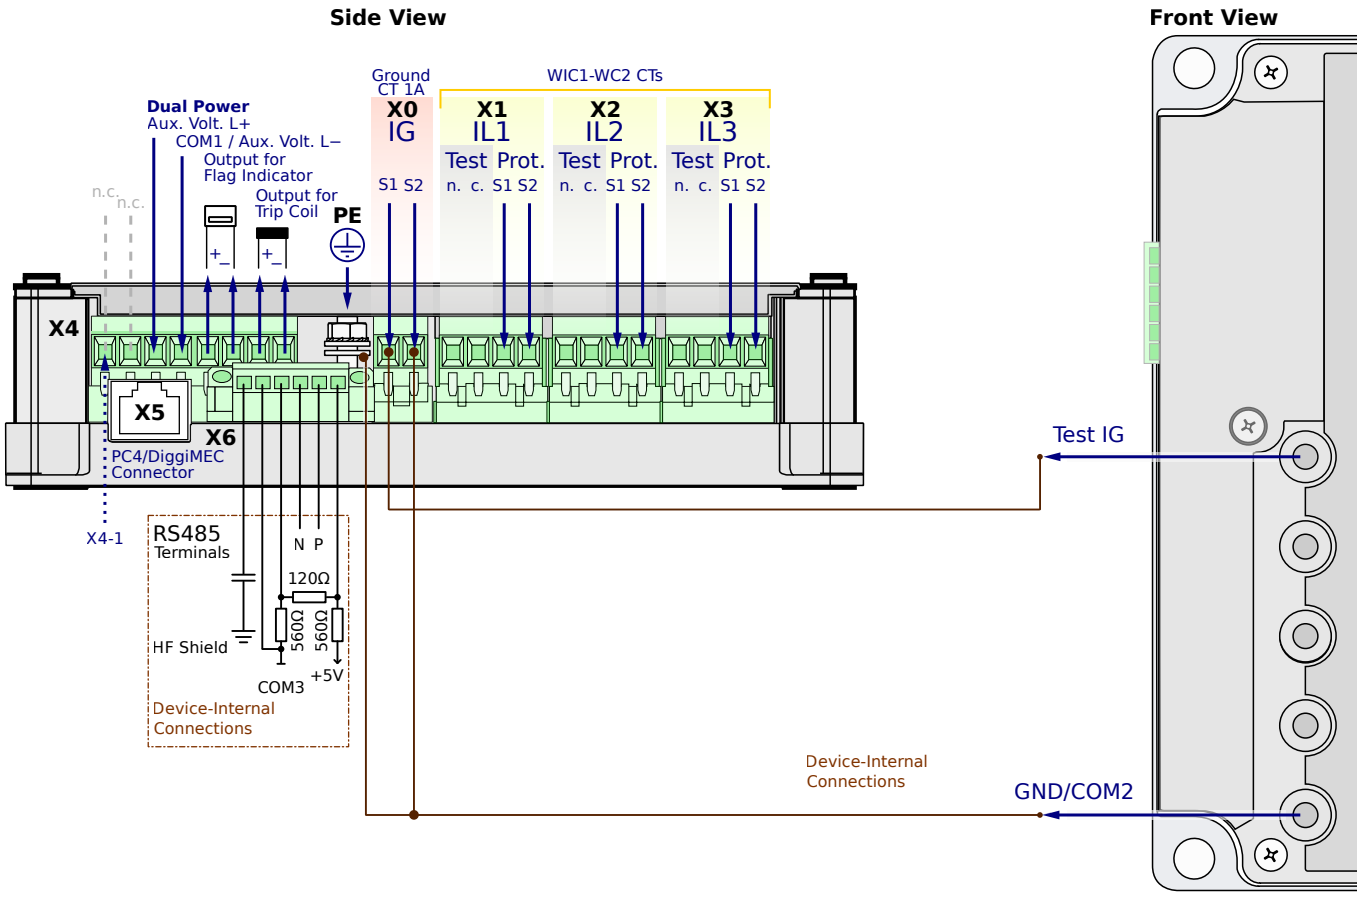


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CM2PC0

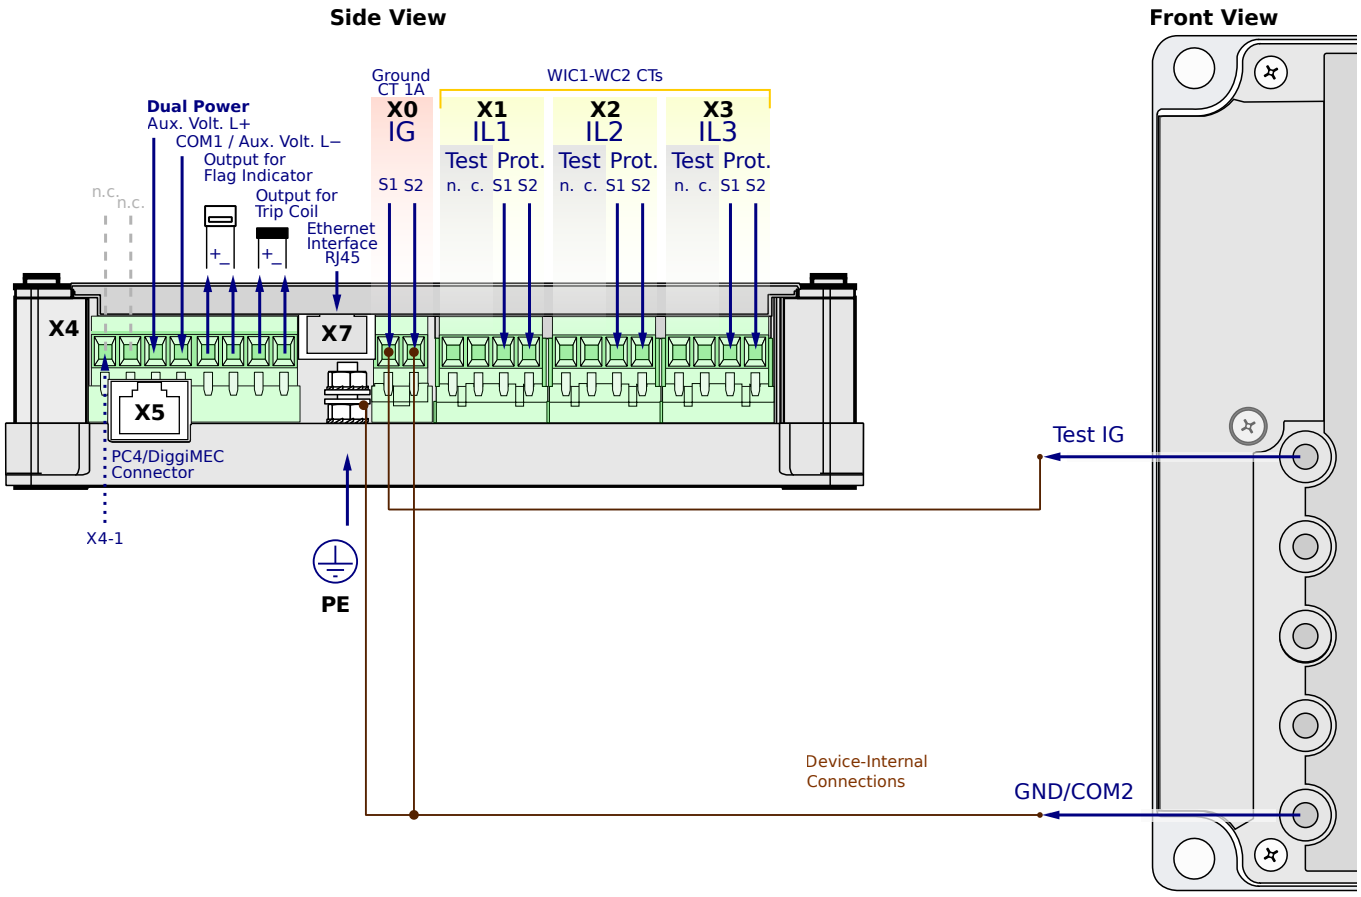


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2PCH

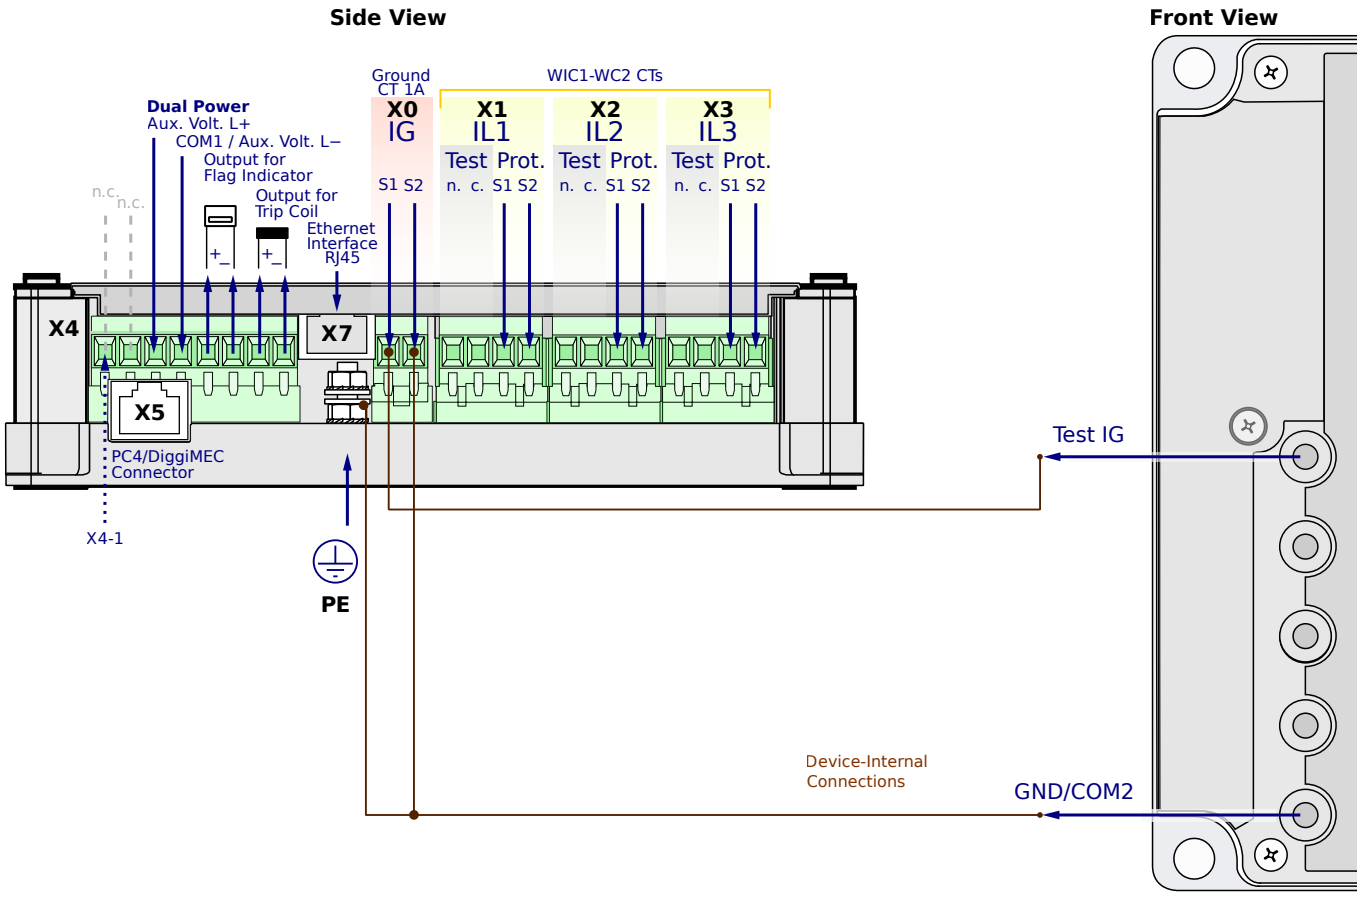


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CM2PL0

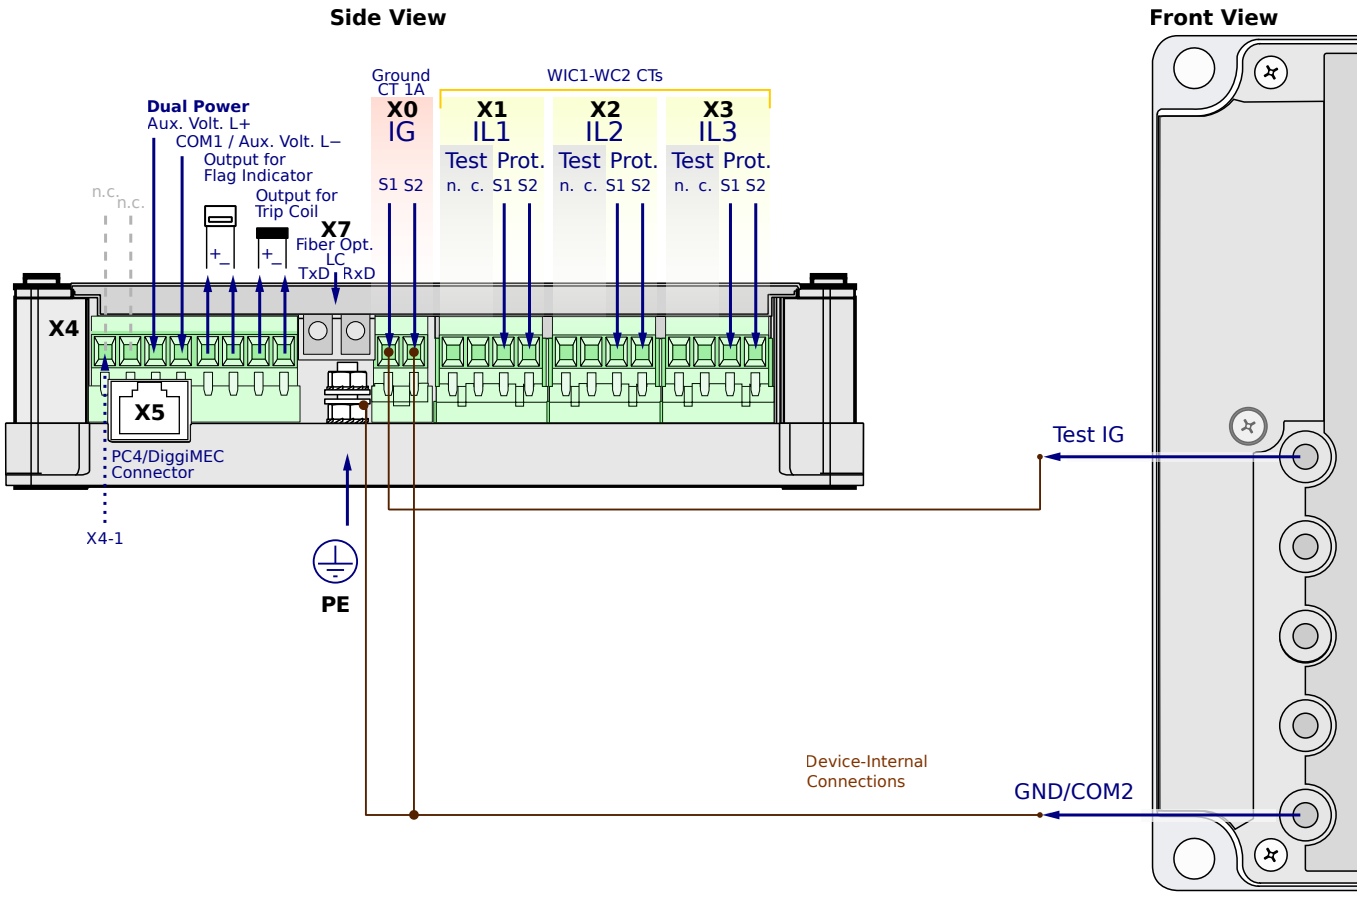


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CM2PLH

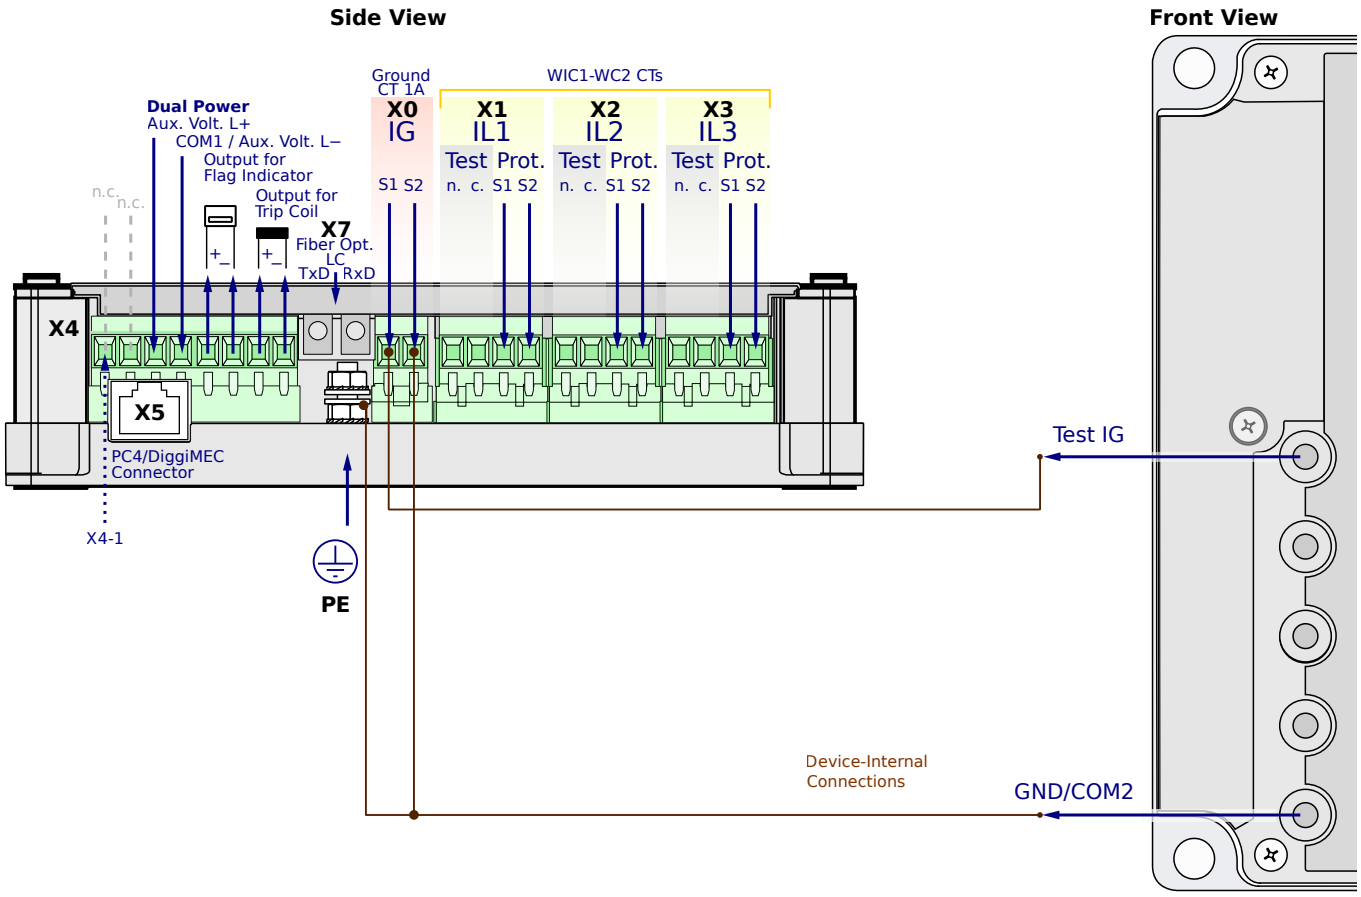


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1SA0

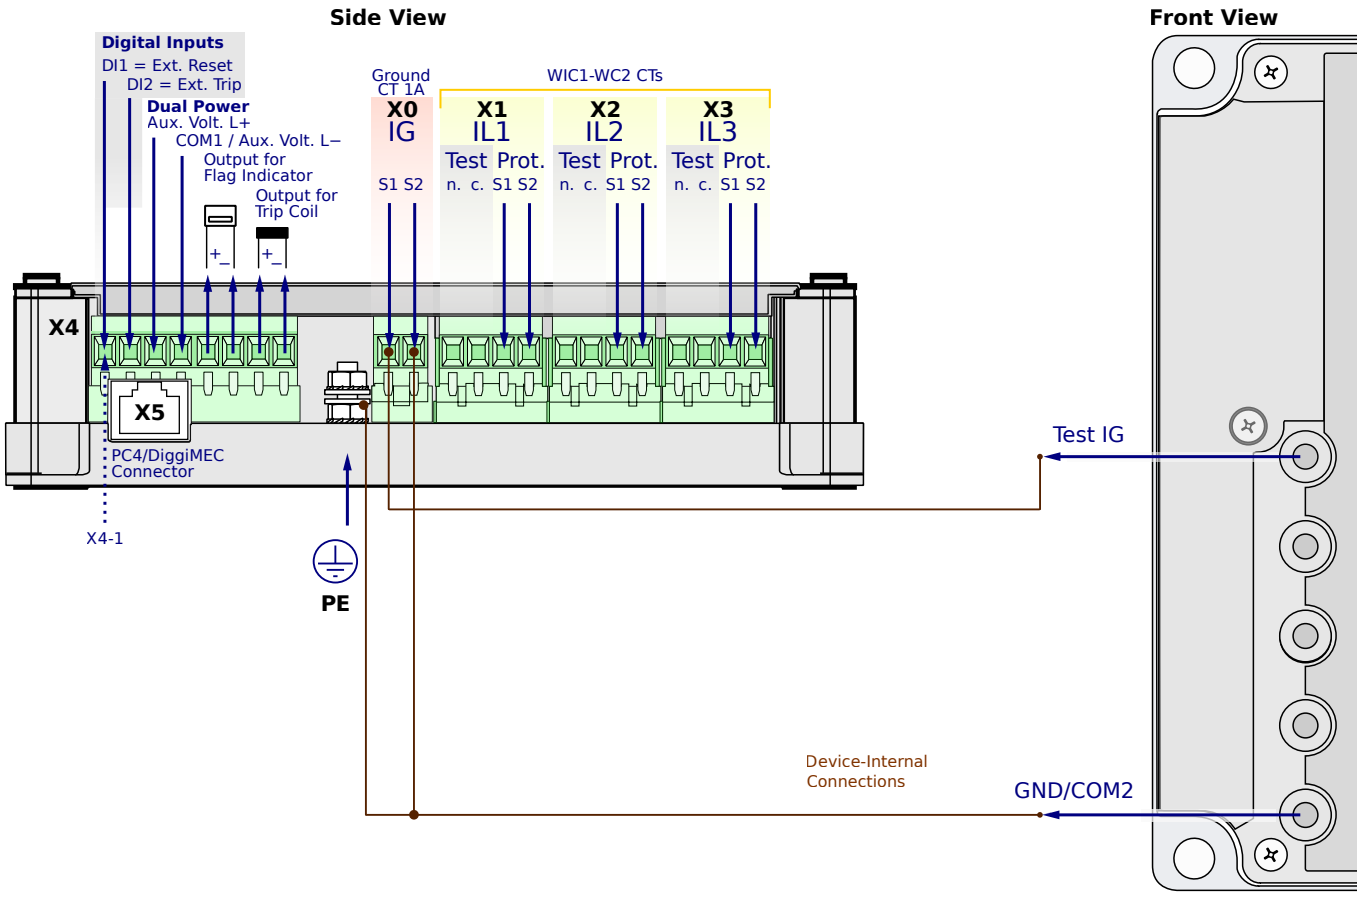


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1SAH

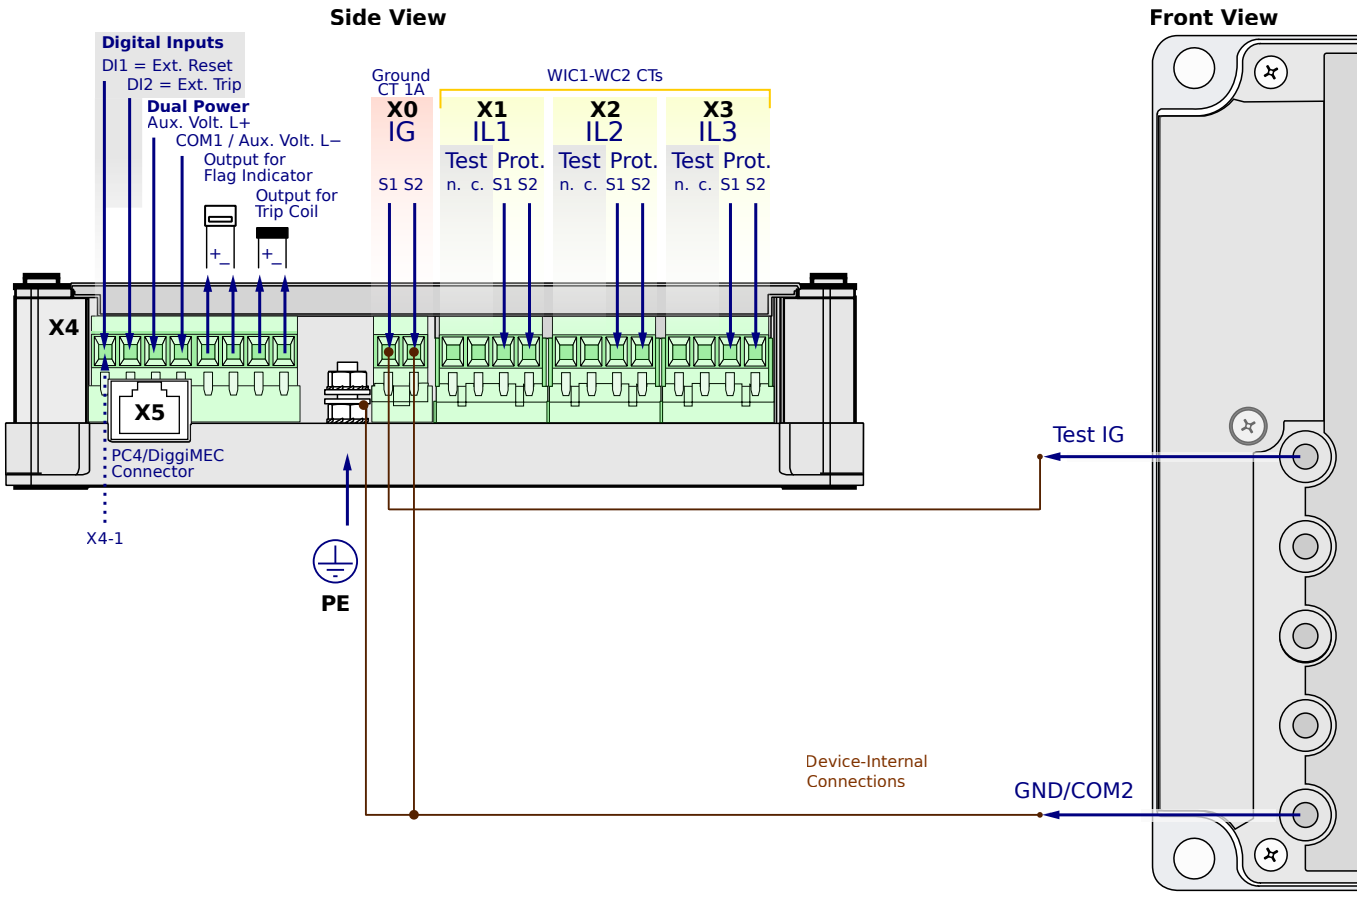


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1SB0

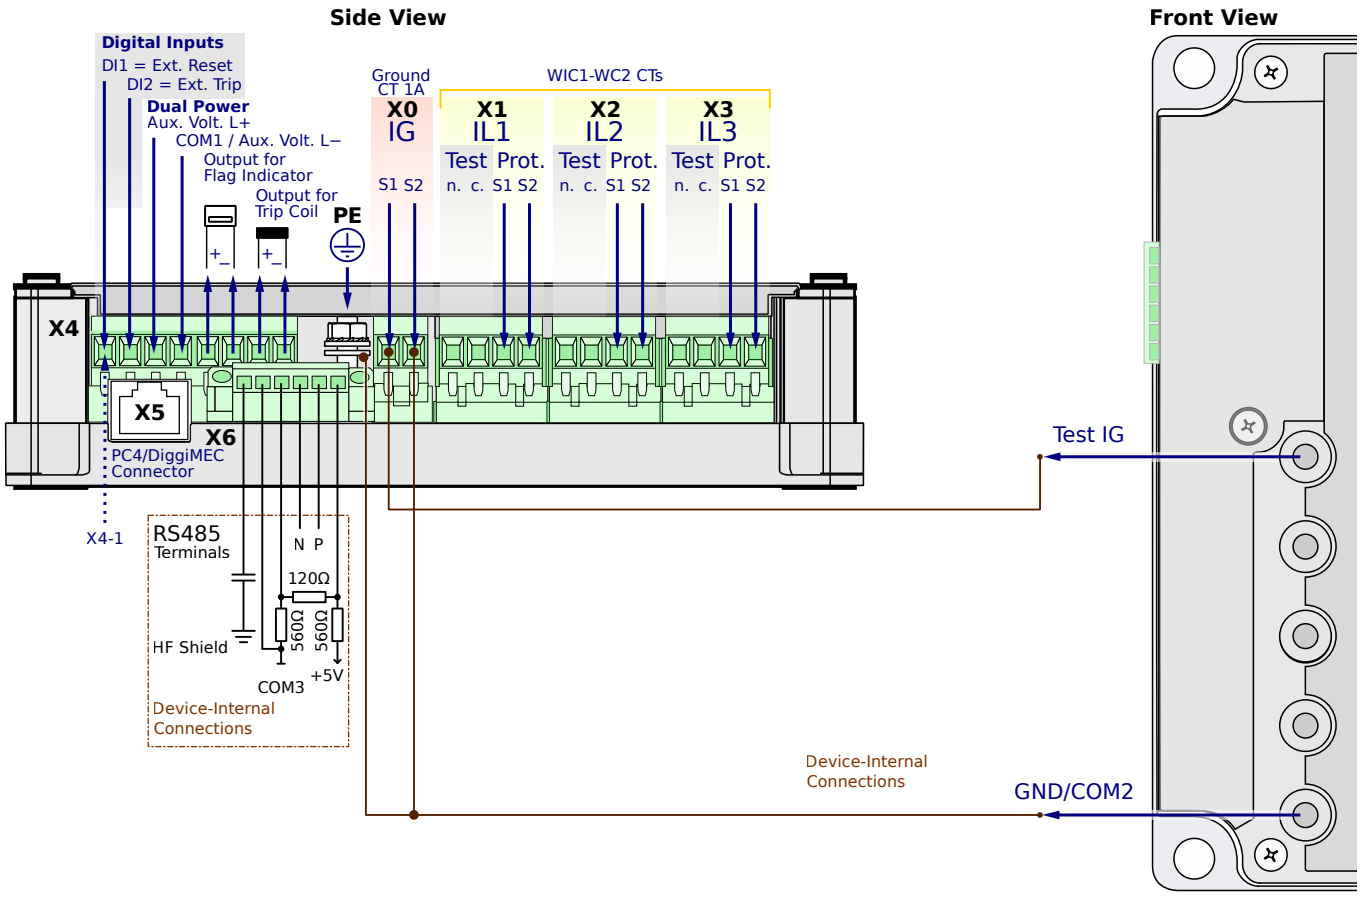


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1SBH

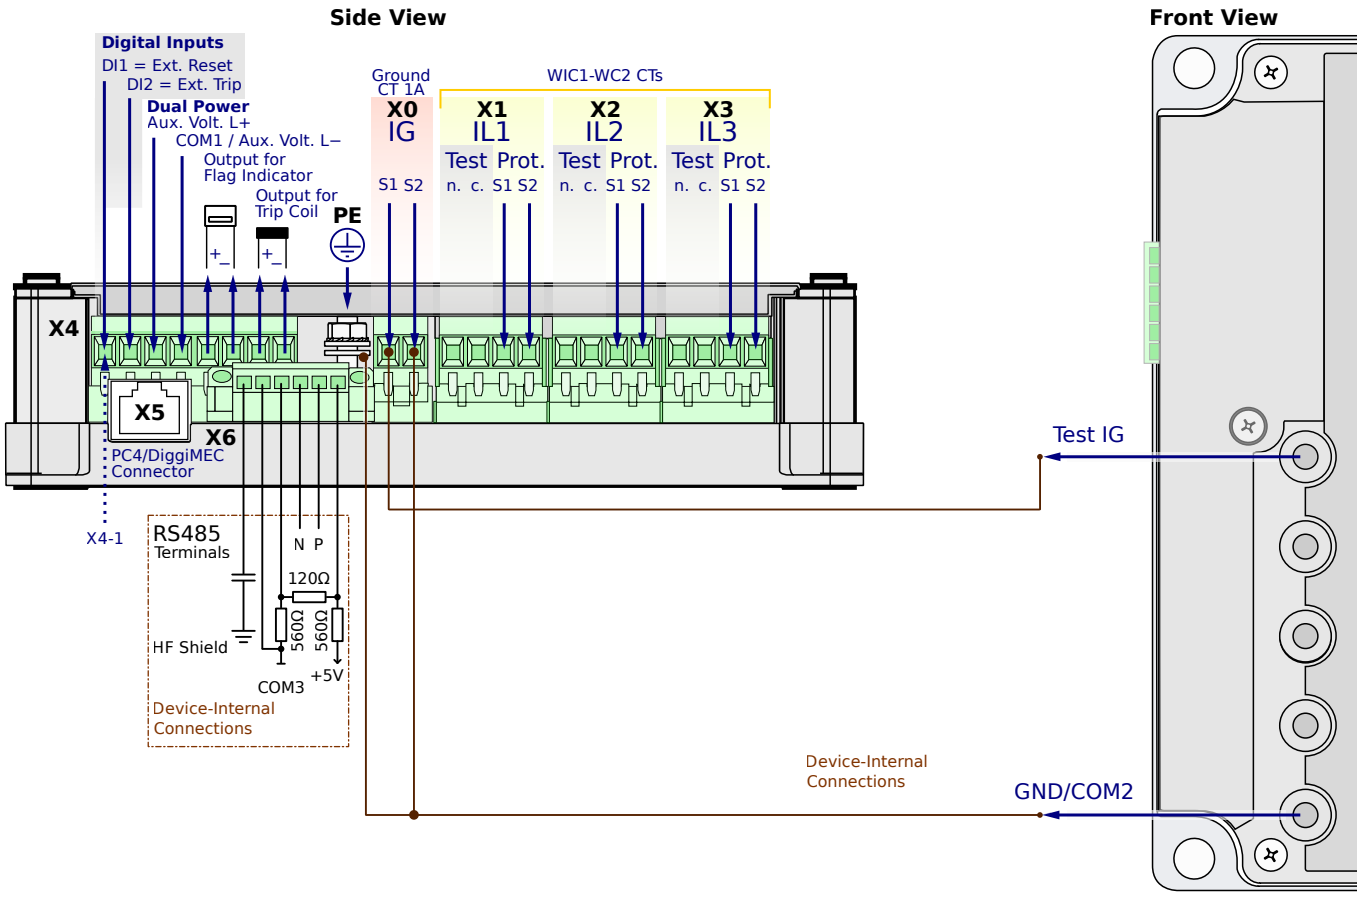


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1SC0

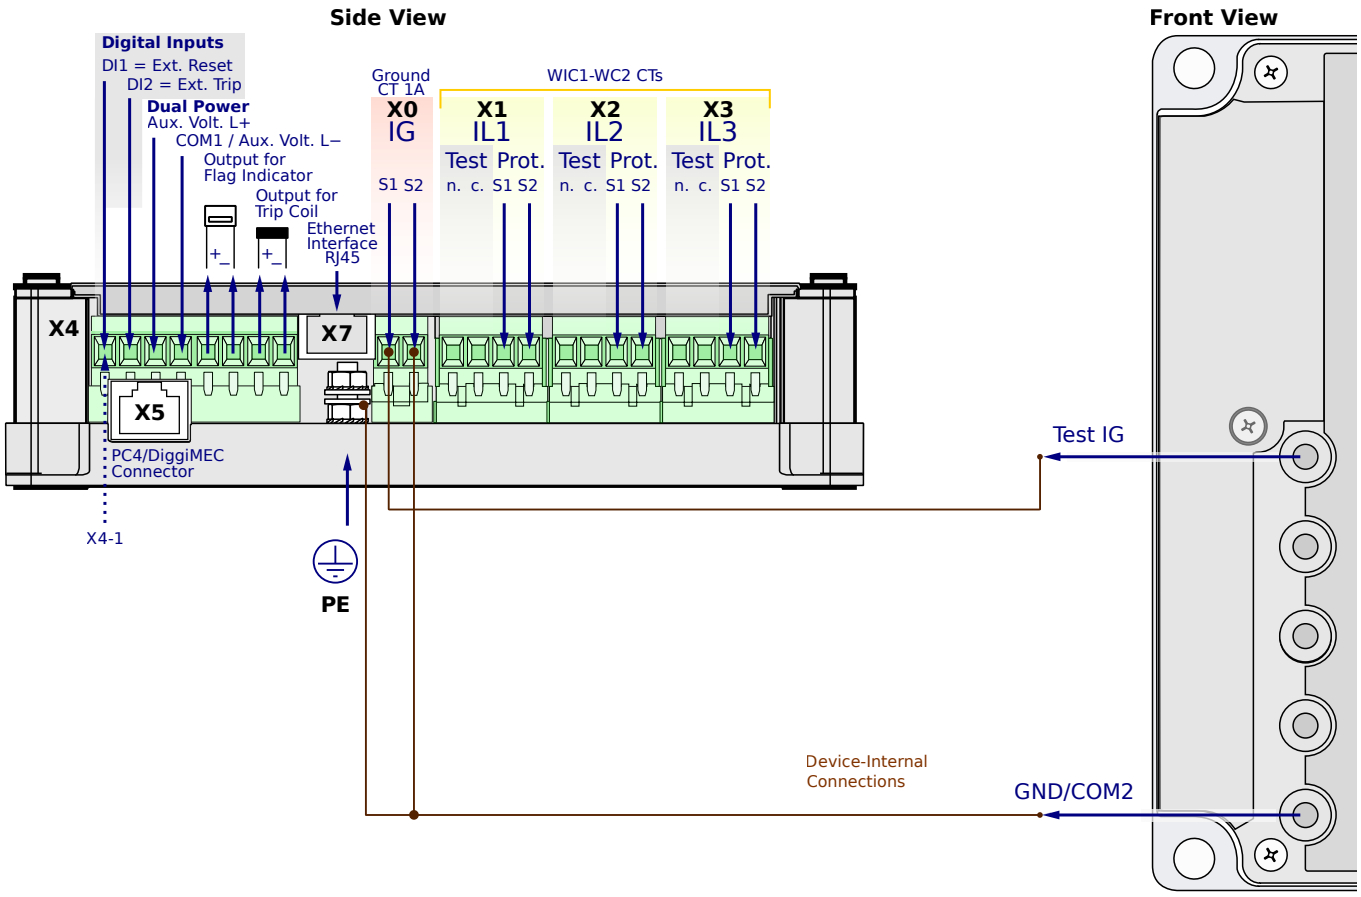


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1SCH

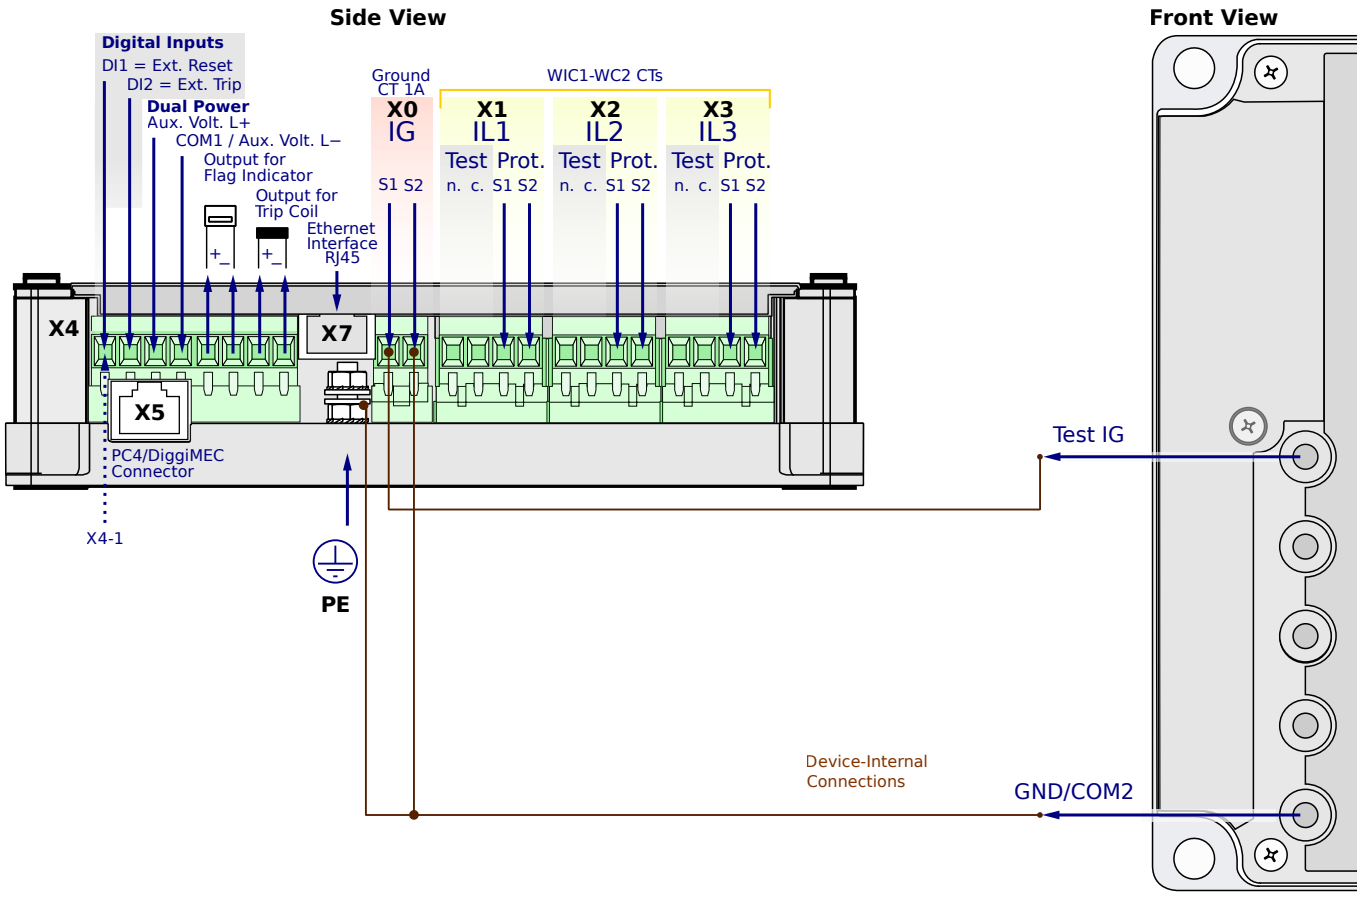


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1SL0

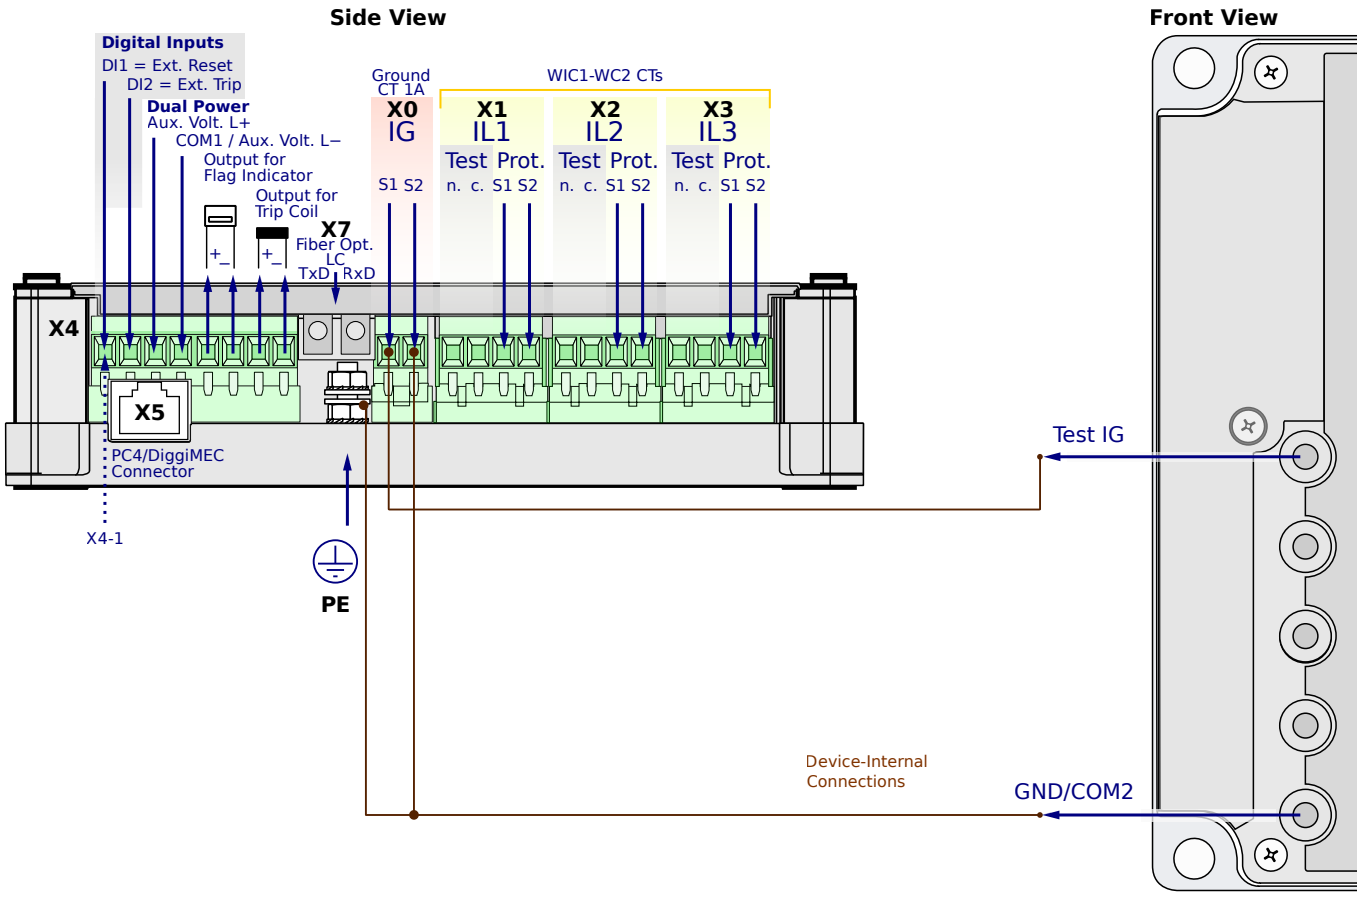


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1SLH

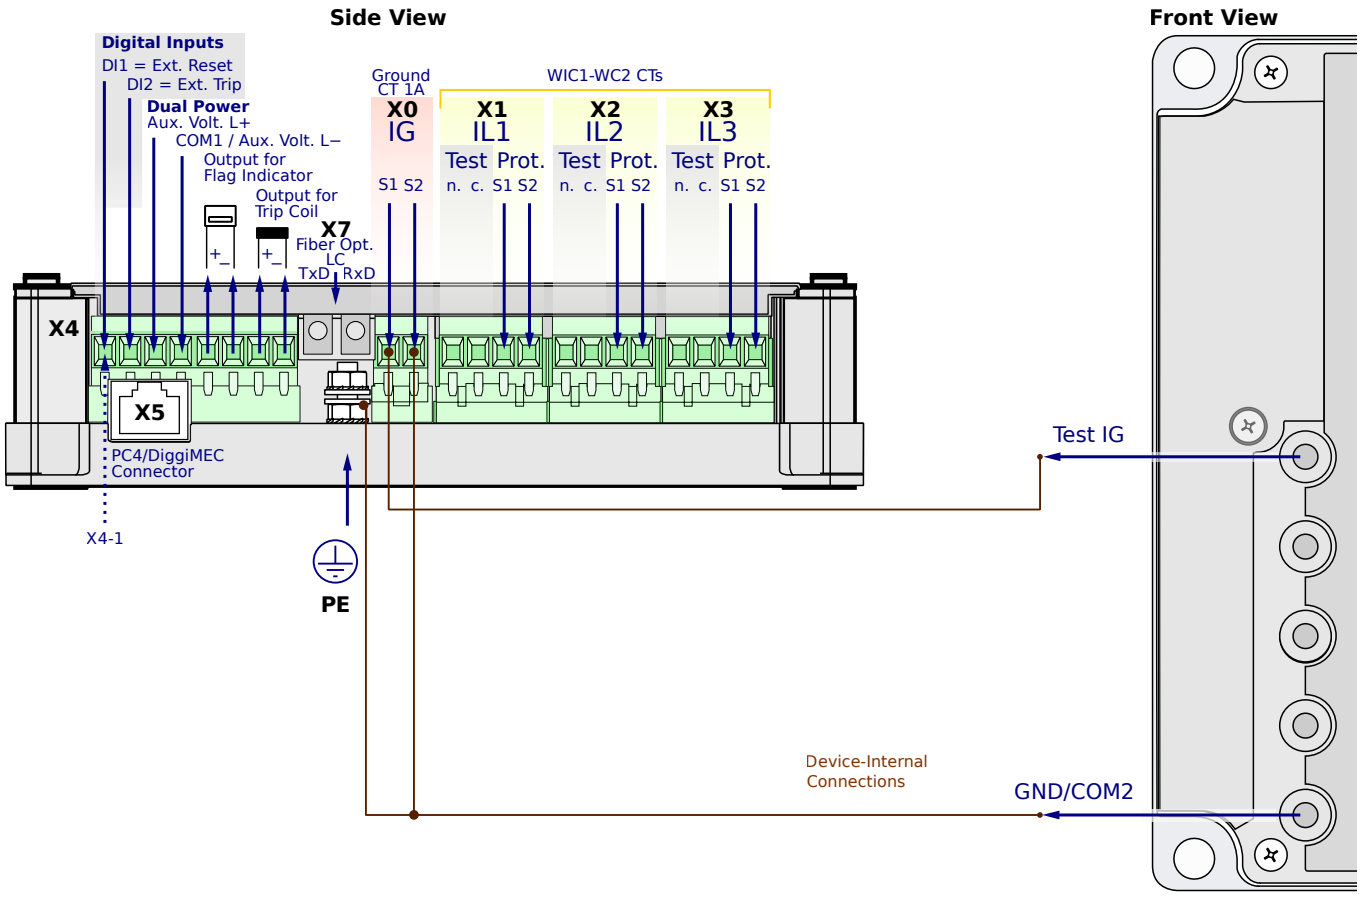


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1AA0

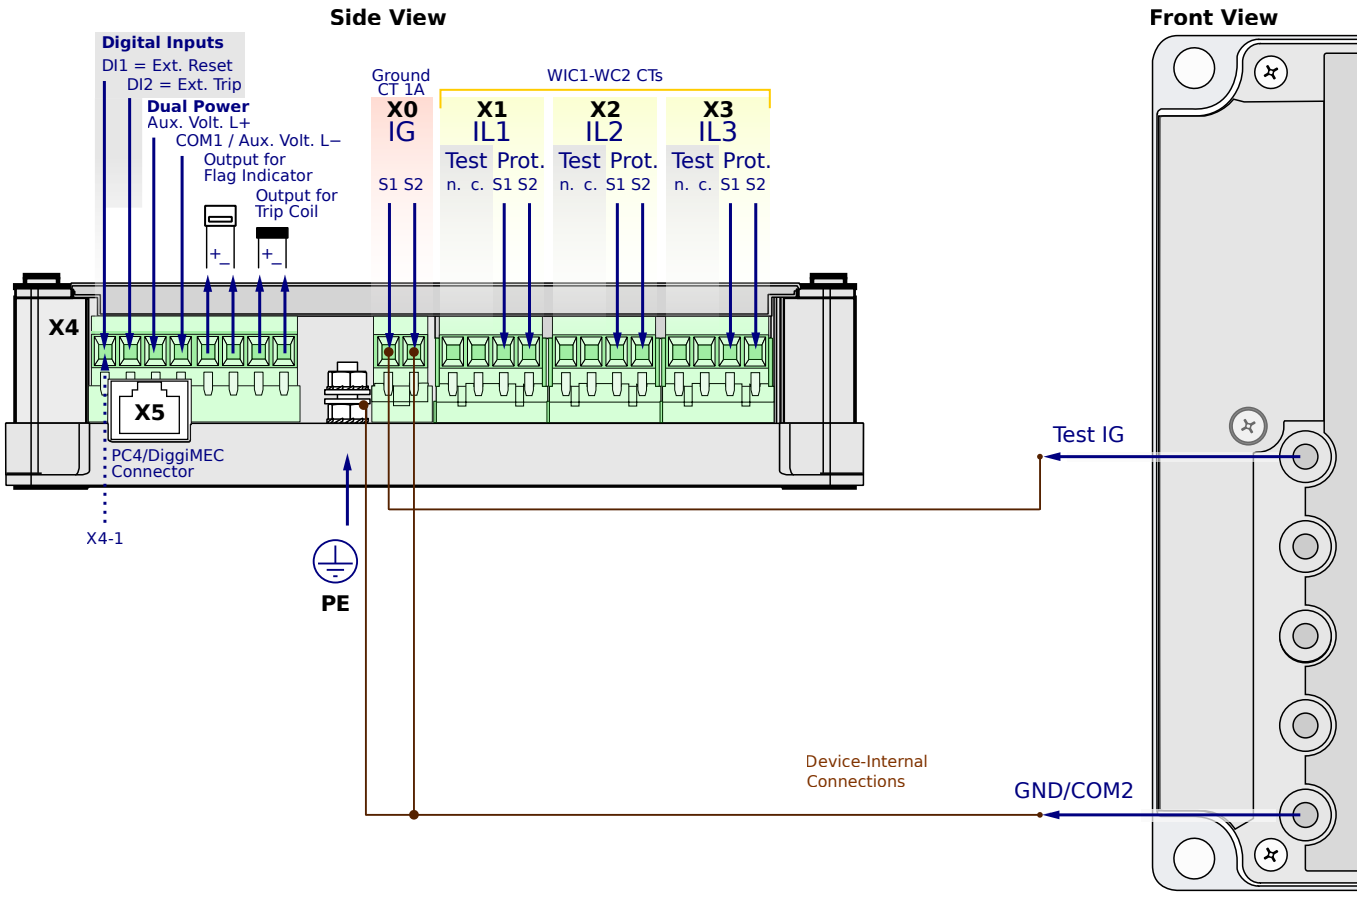


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1AAH

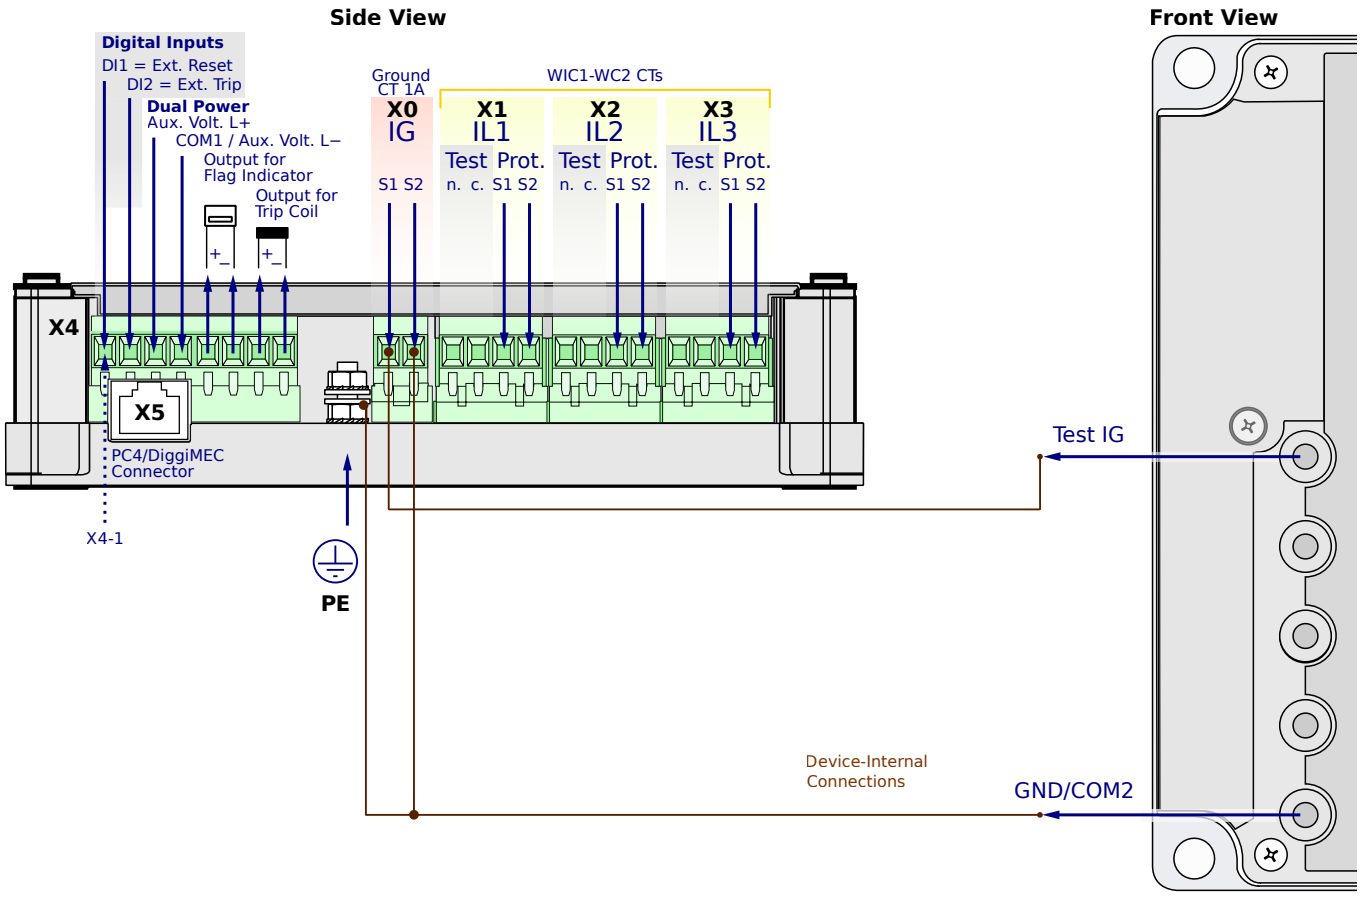


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1AB0

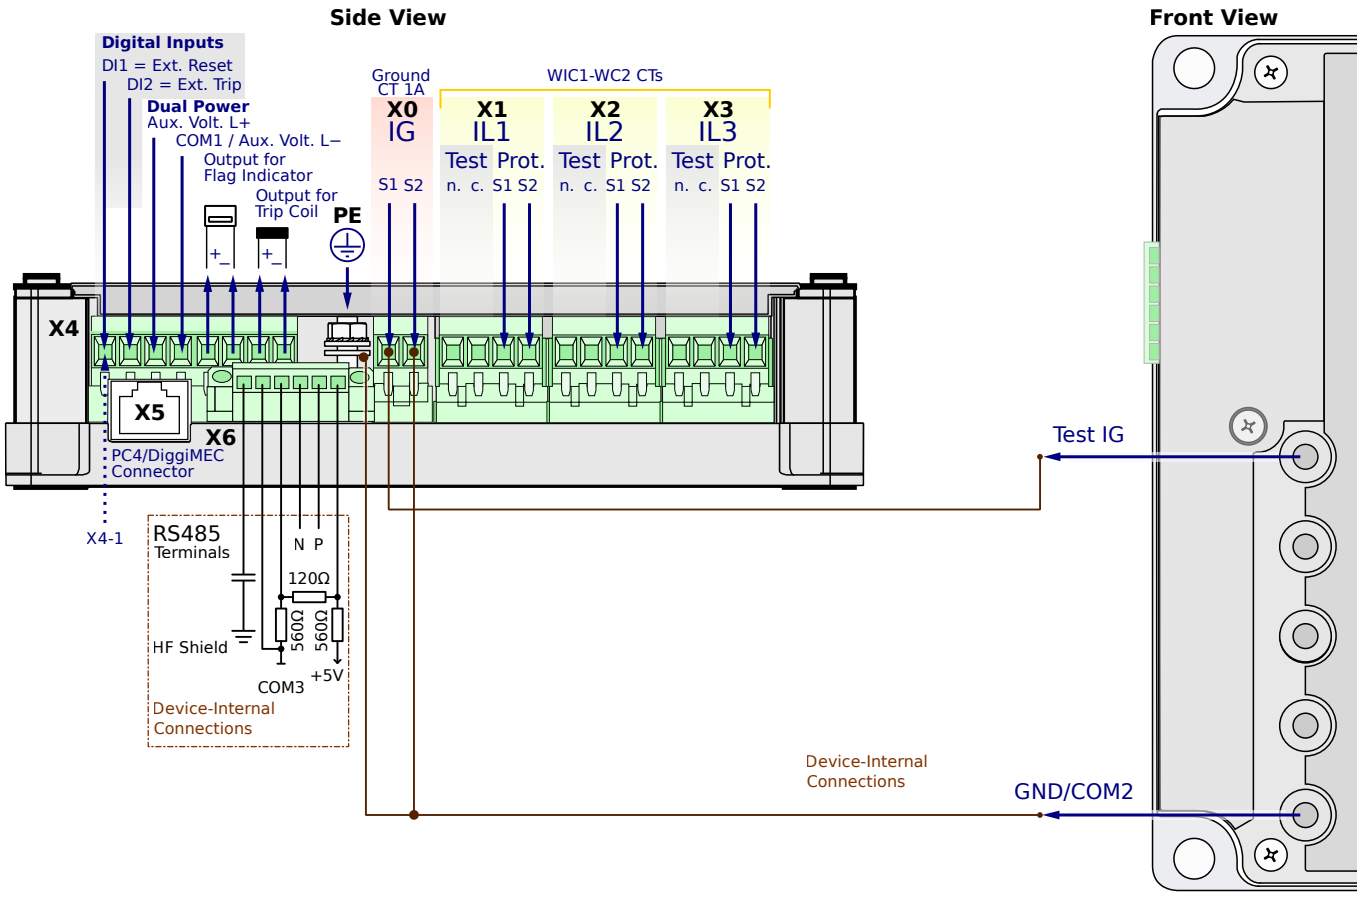


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1ABH

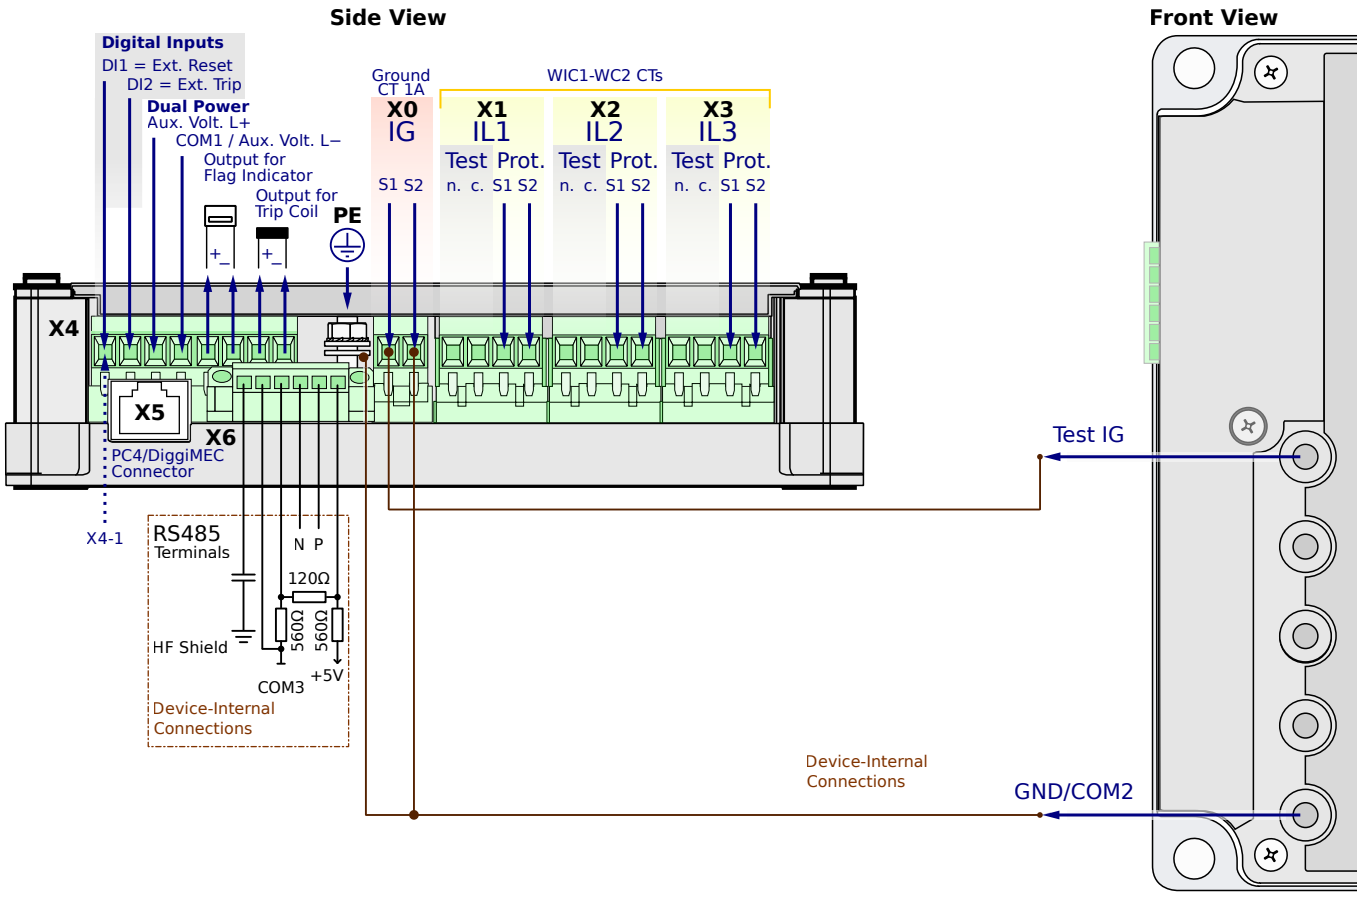


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1AC0

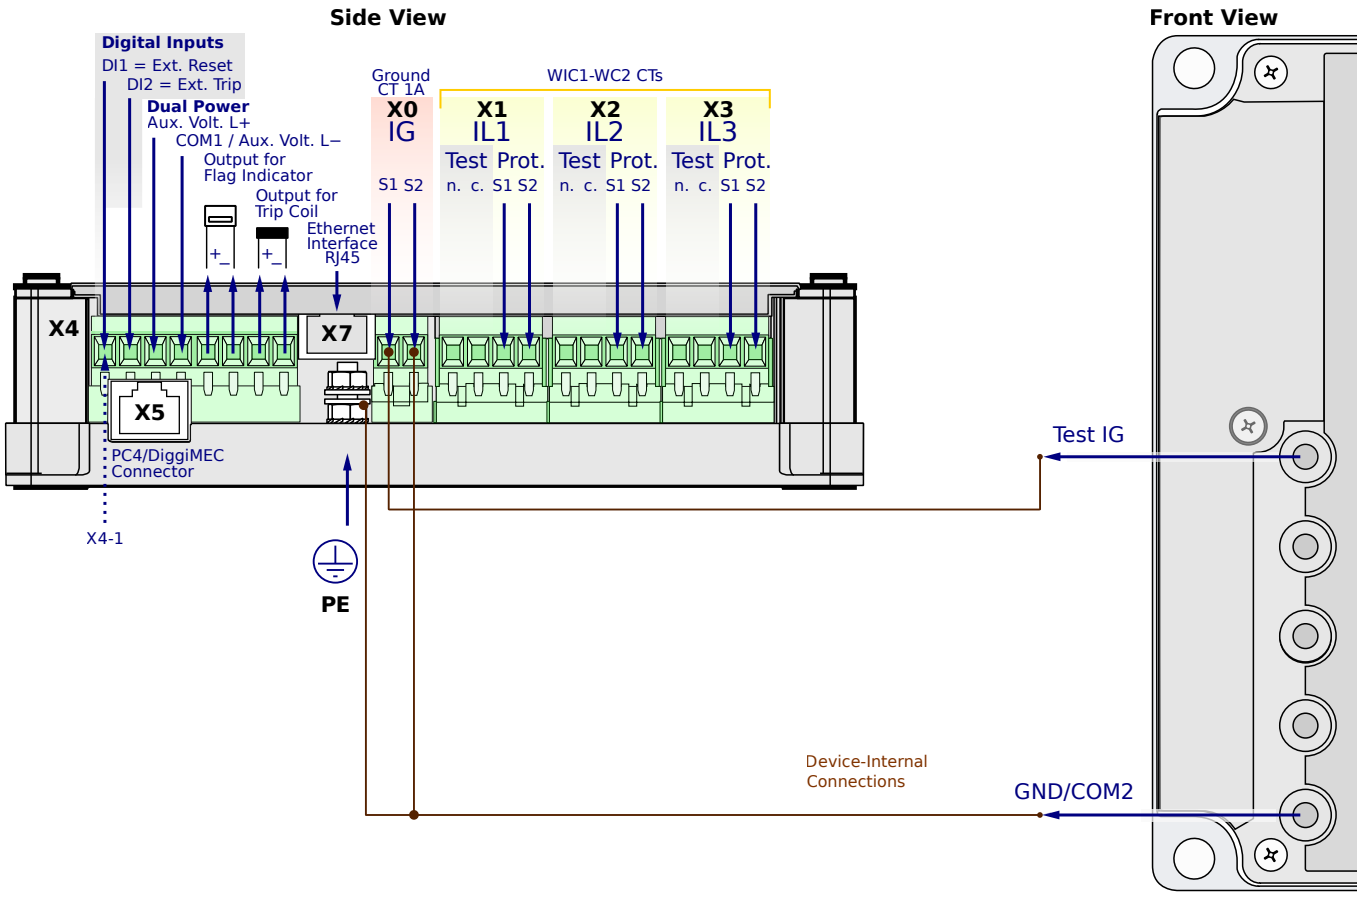


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1ACH

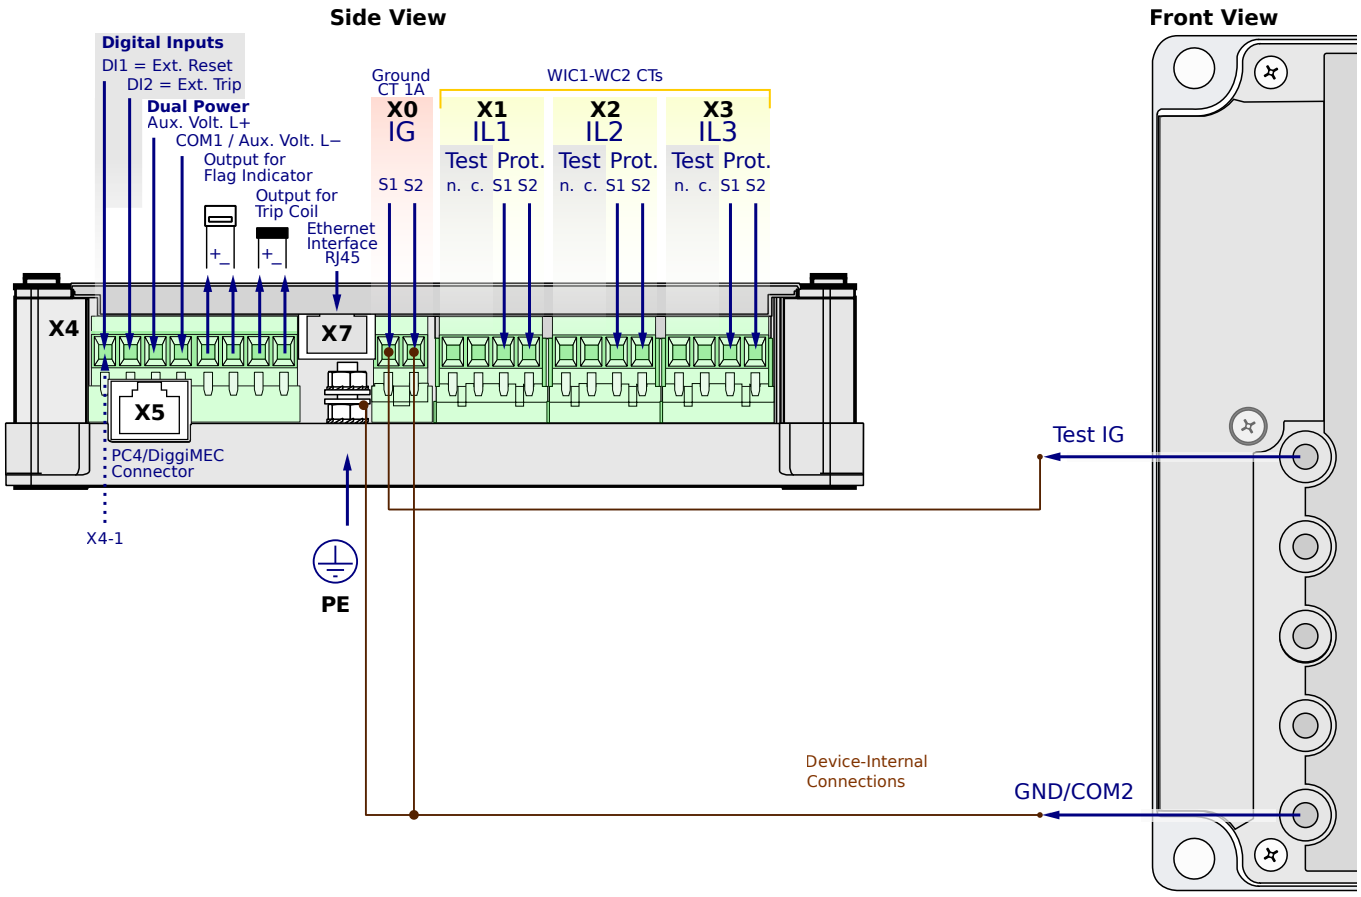


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1AL0

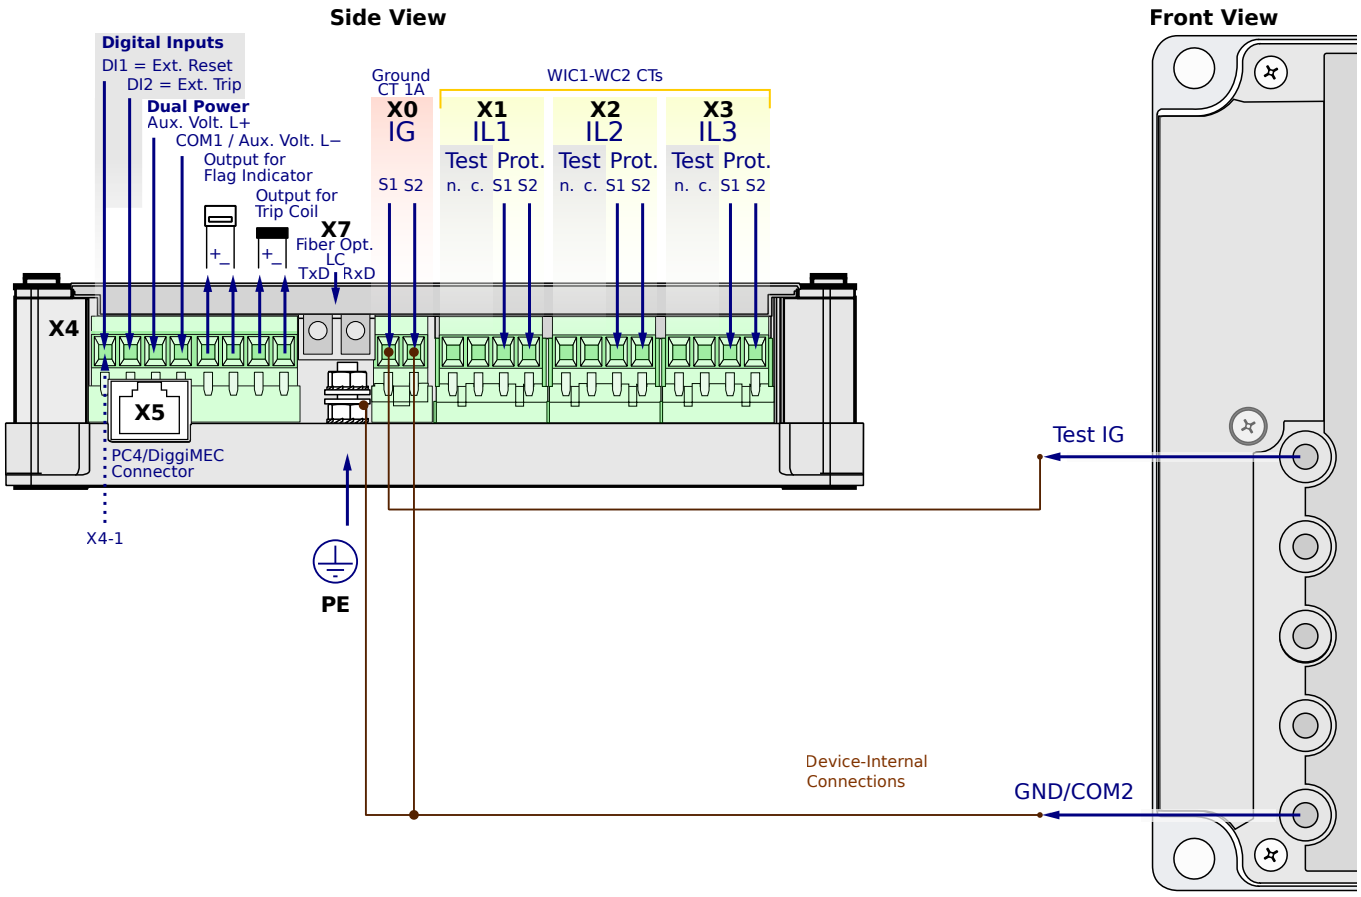


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1ALH

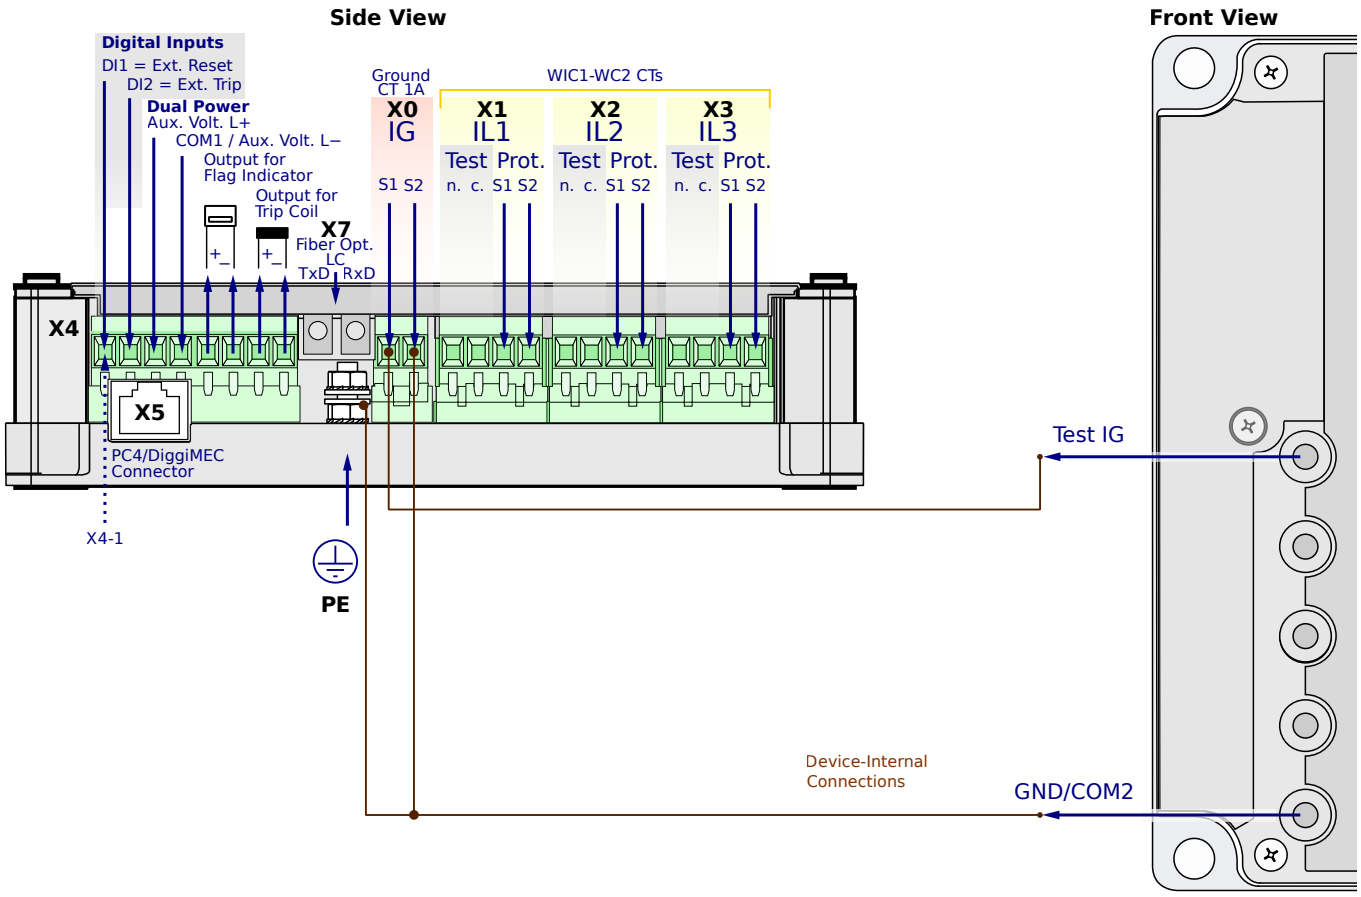


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1PA0

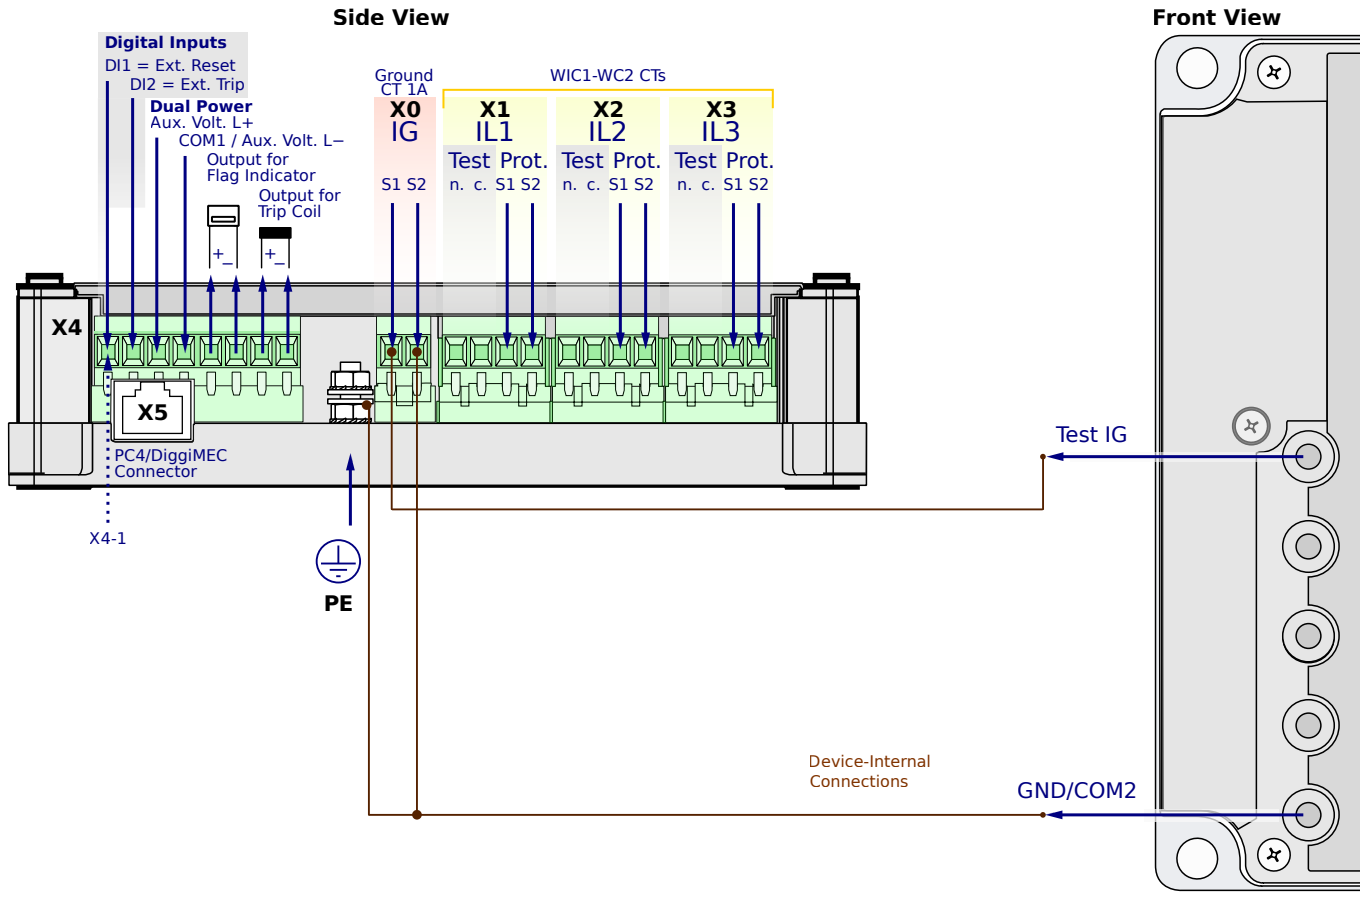


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1PAH

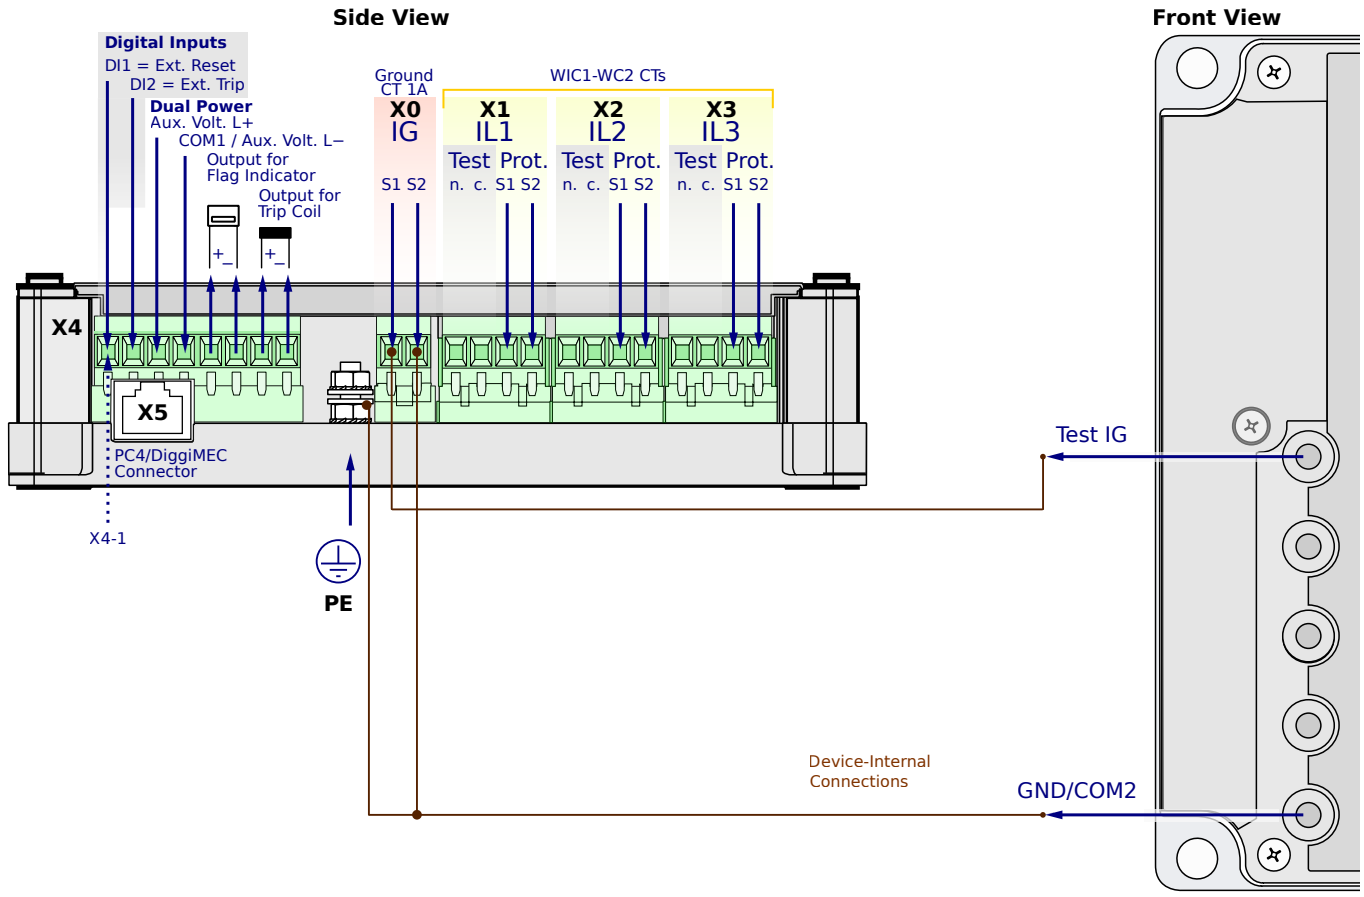


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates directly ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG1PB0

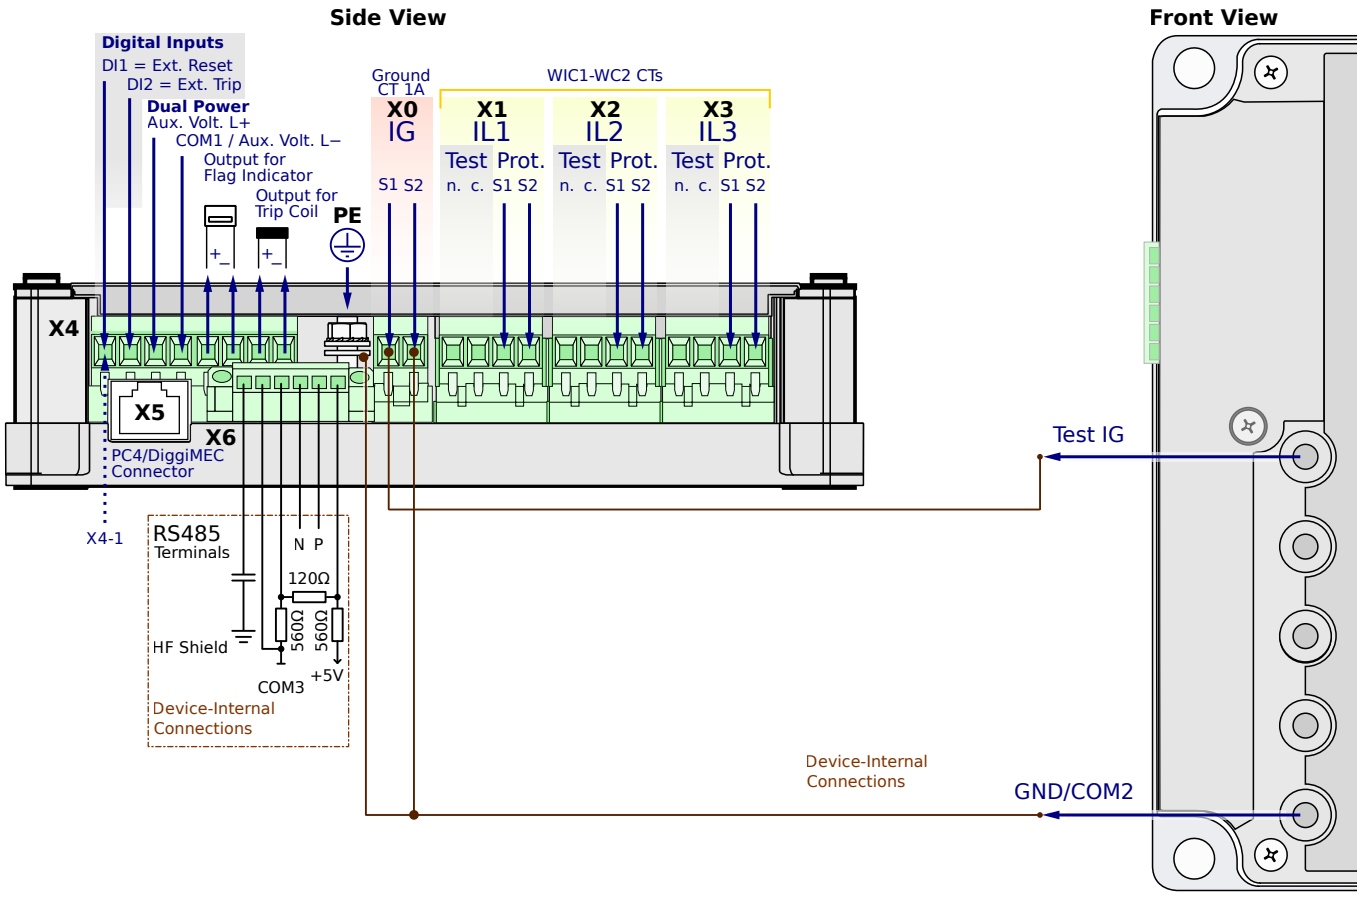


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1PBH

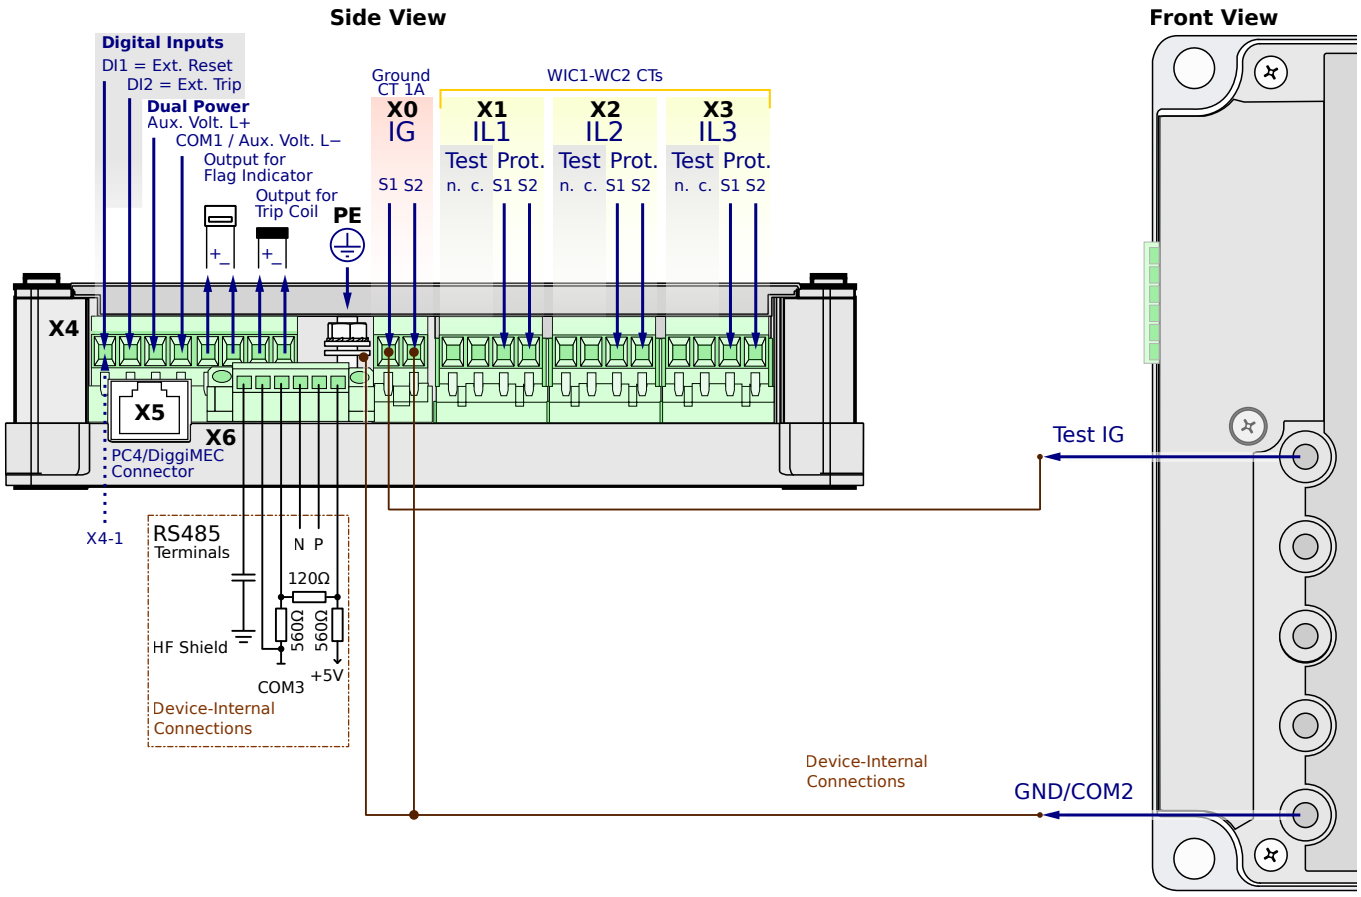


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG1PC0

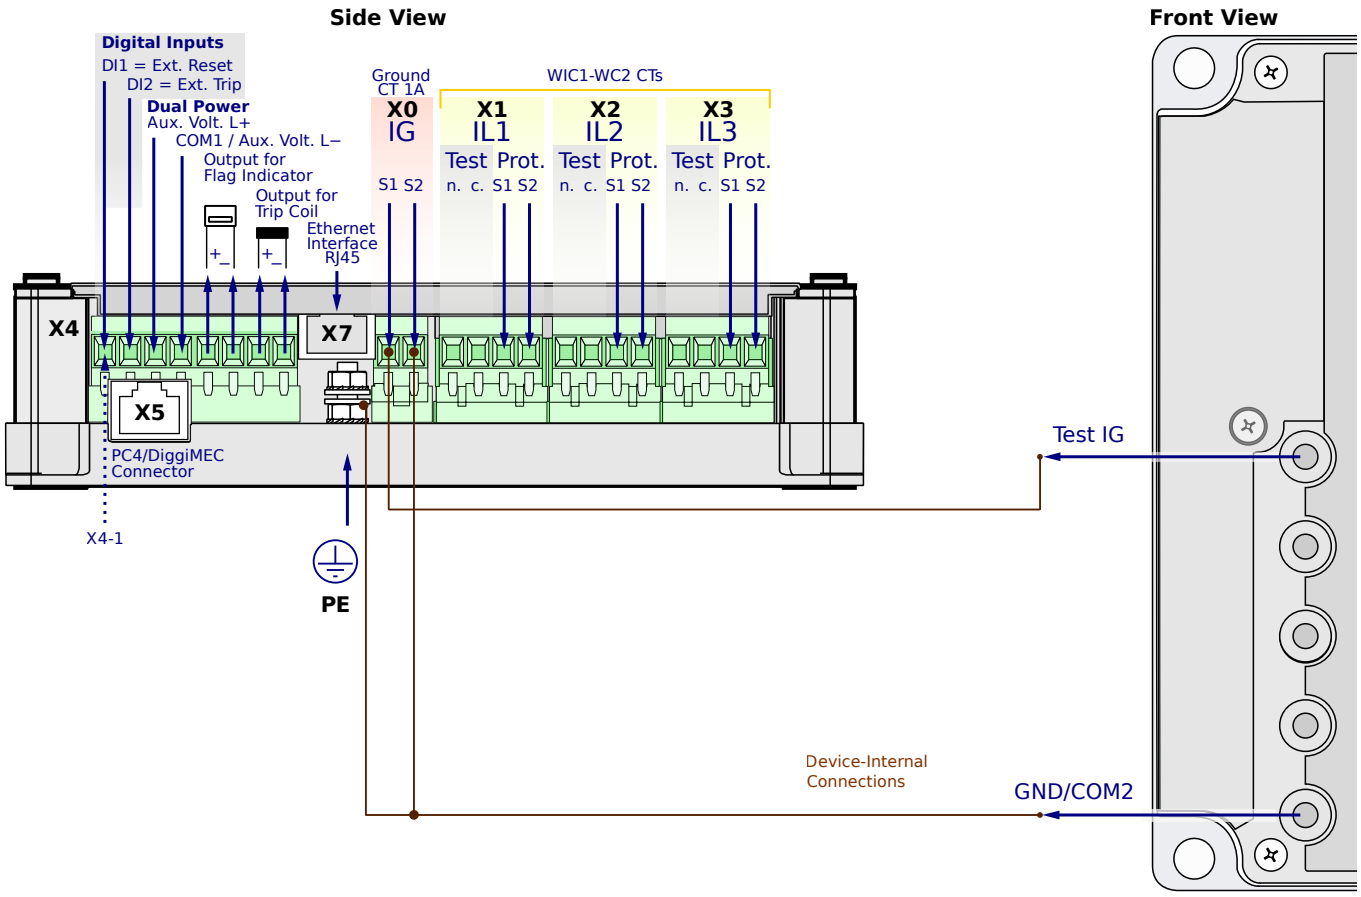


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1PCH

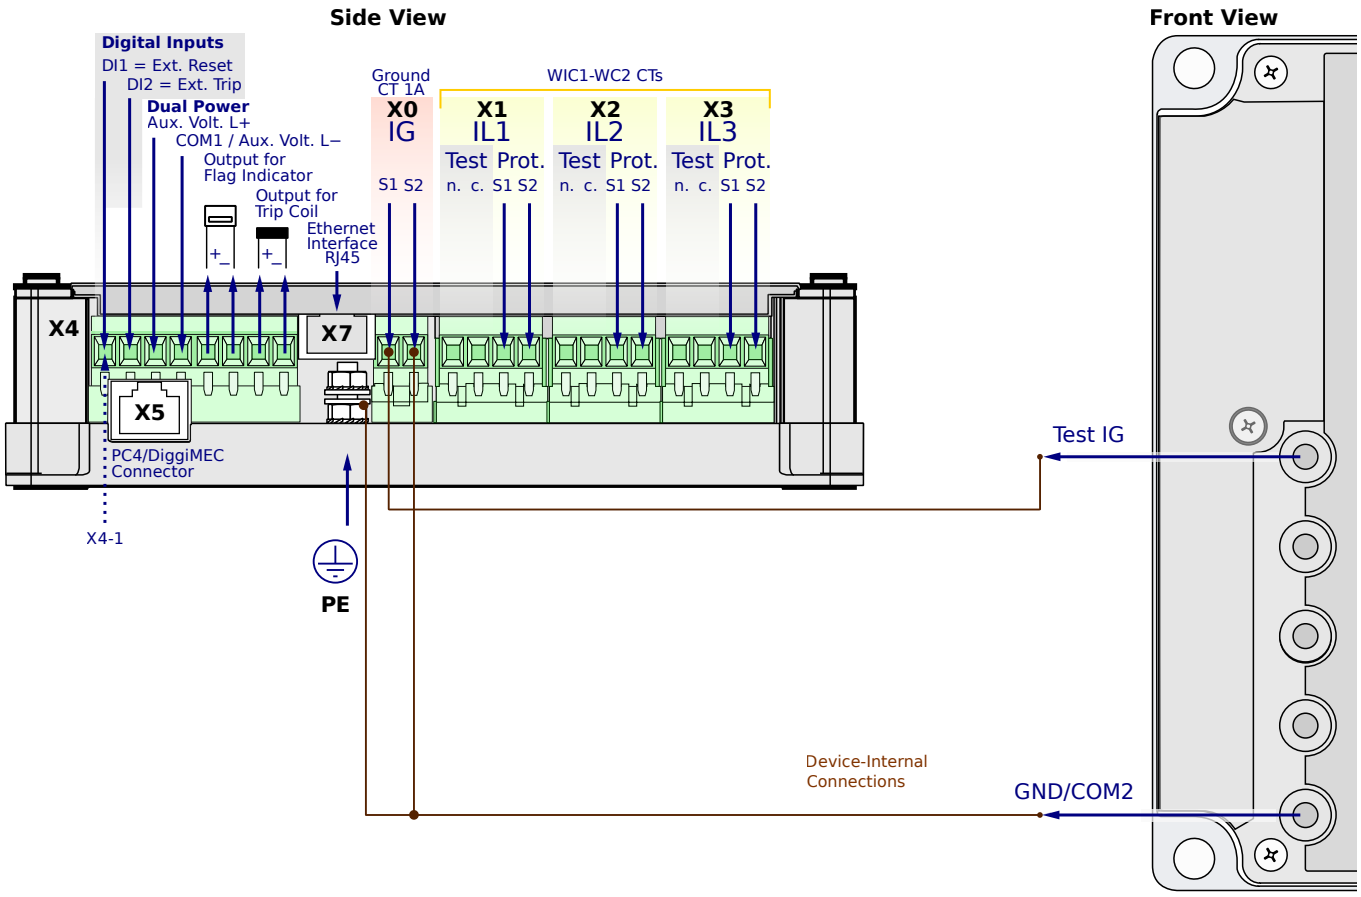


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG1PL0

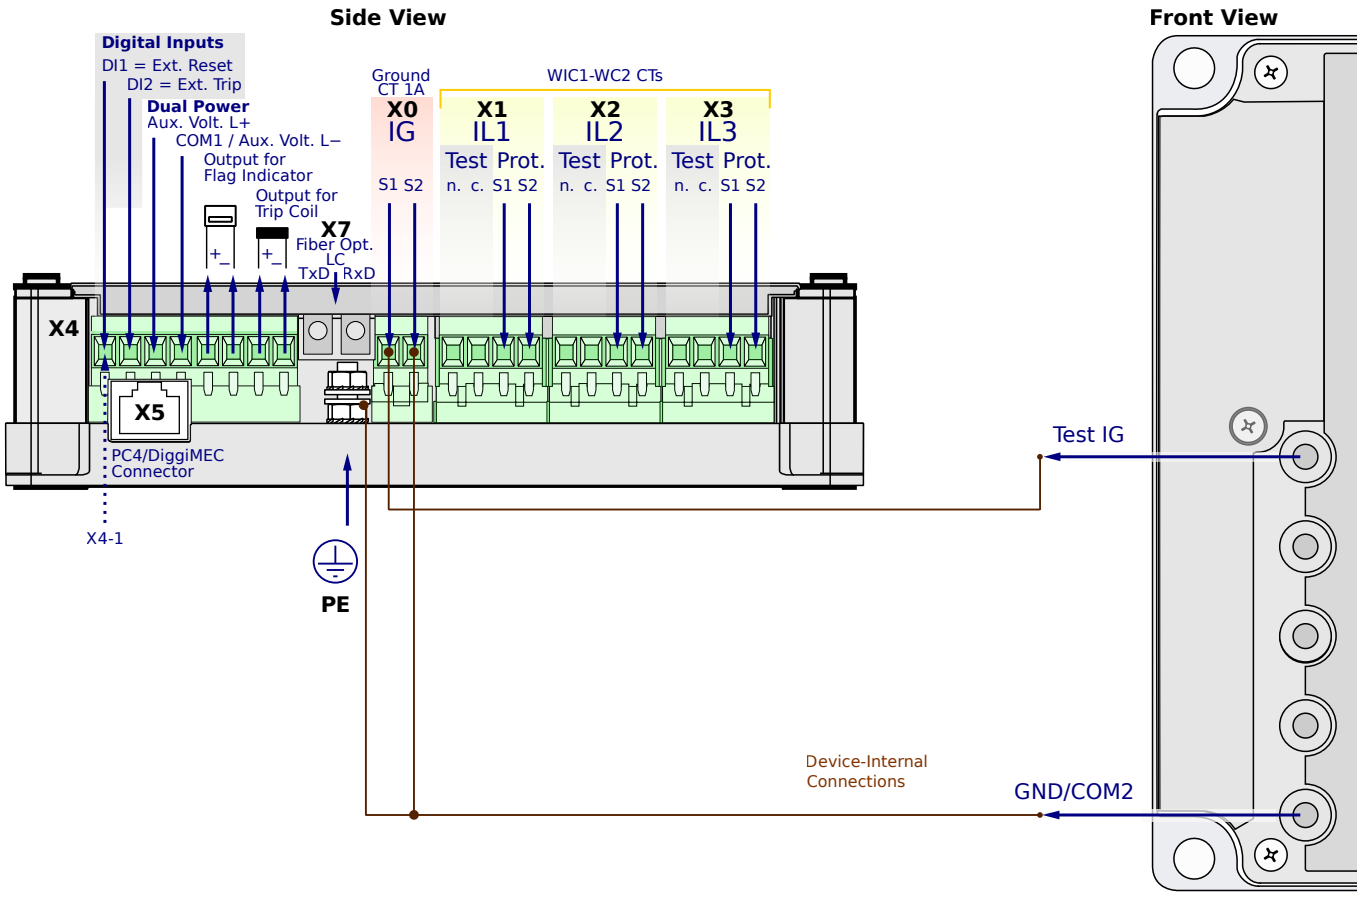


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG1PLH

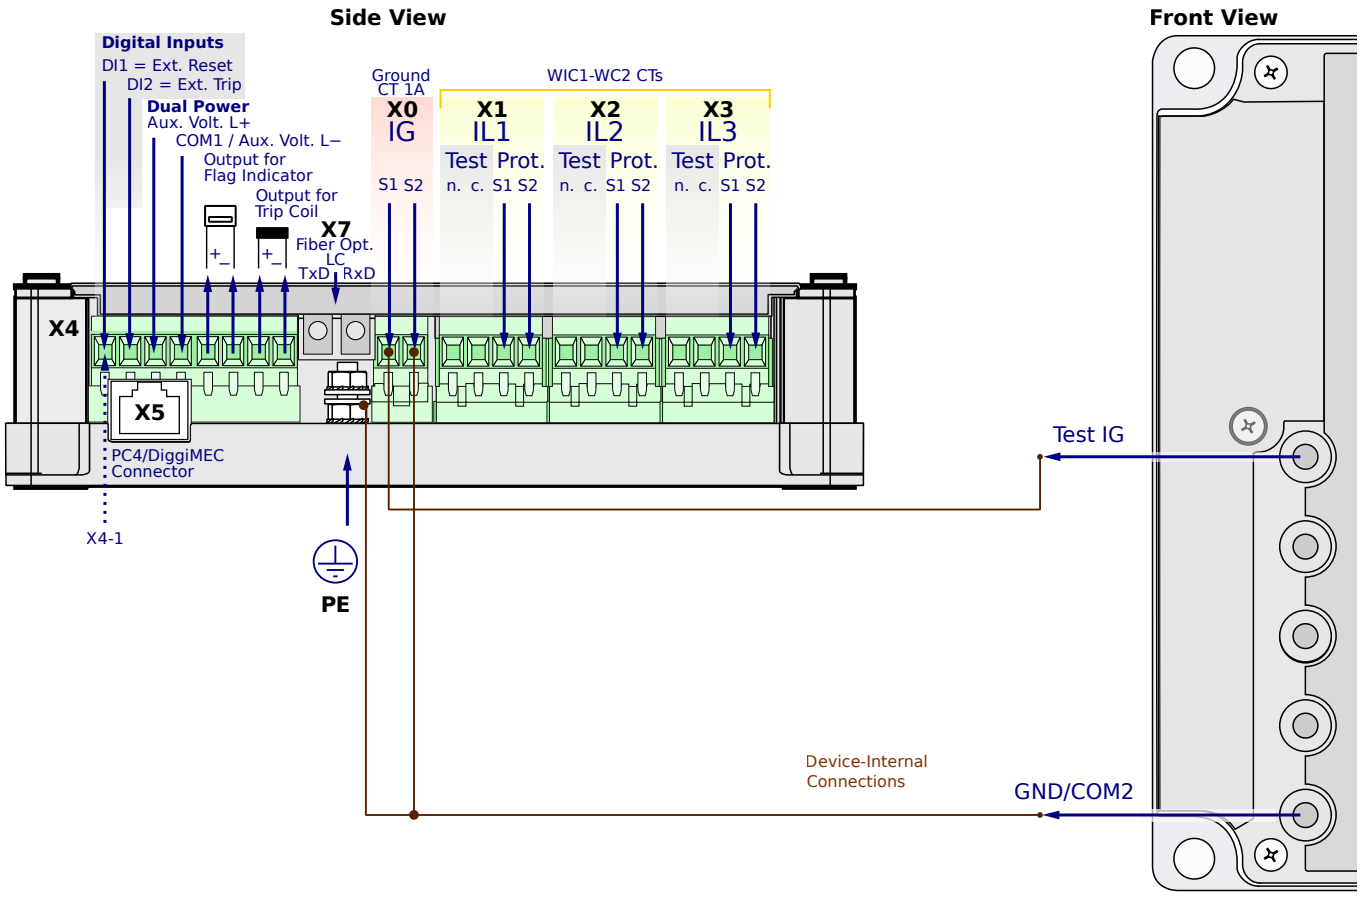


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2SA0

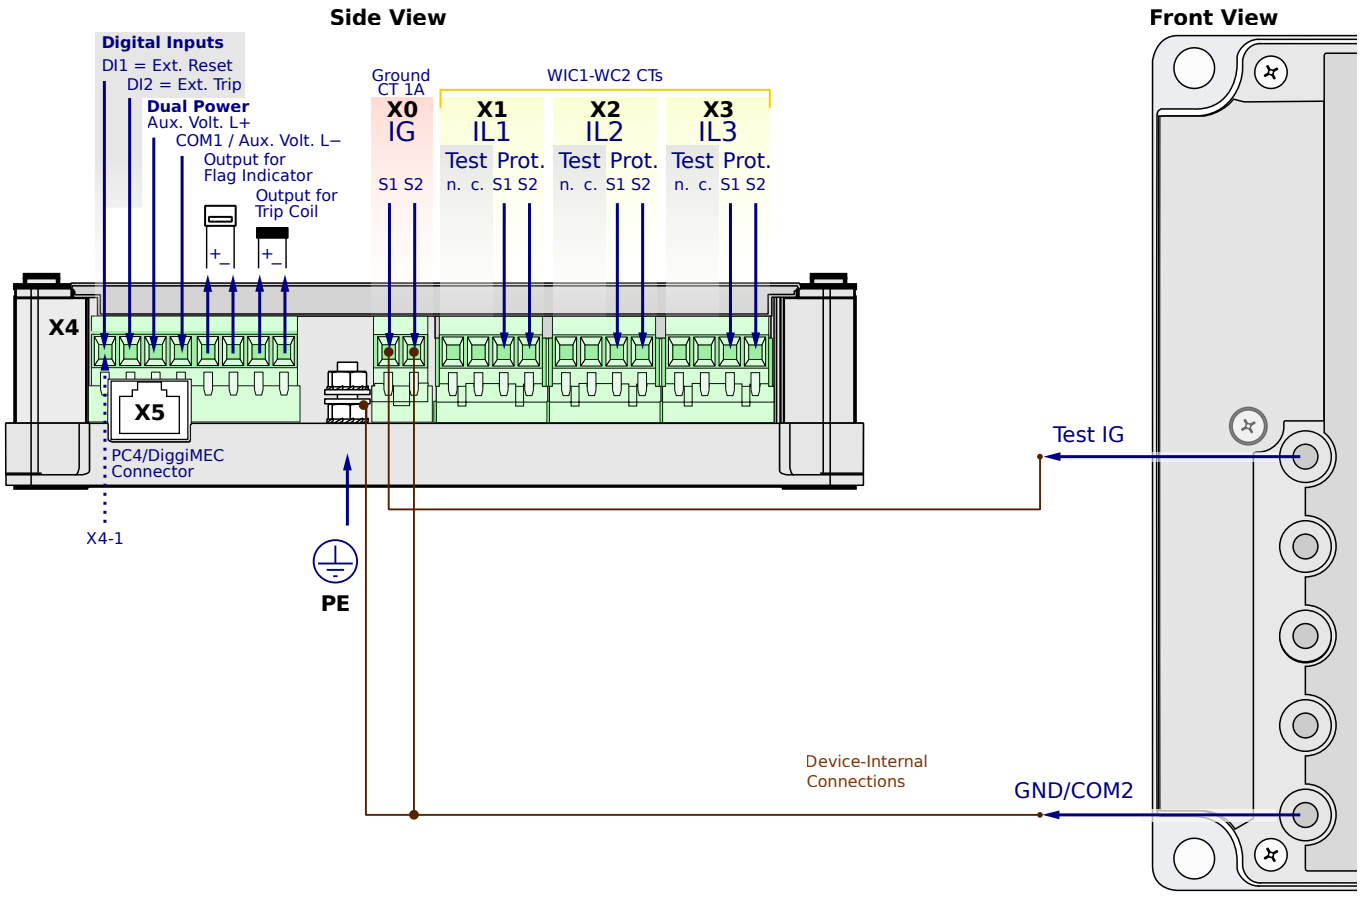


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2SAH

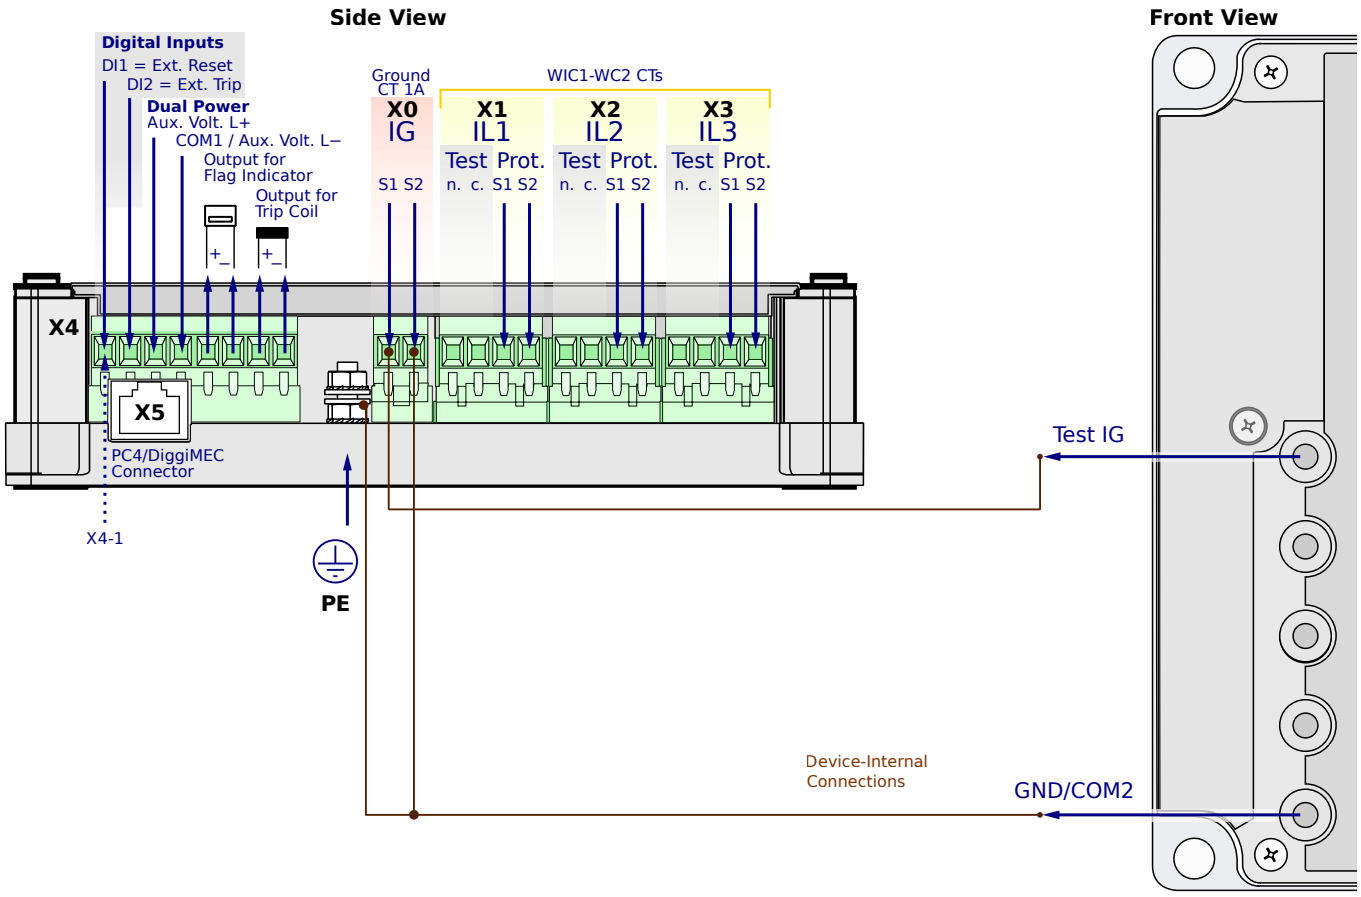


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2SB0

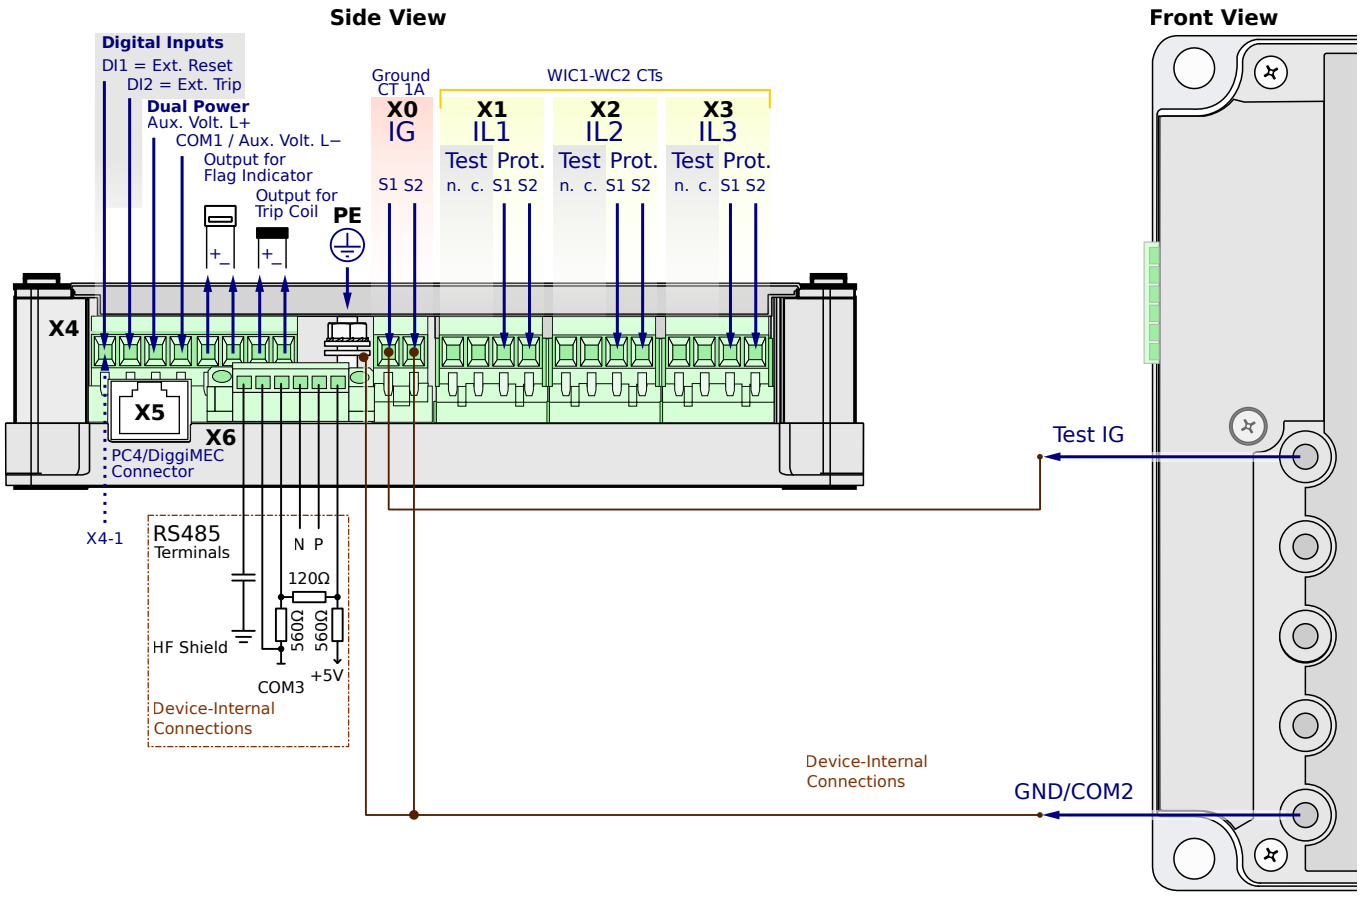


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2SBH

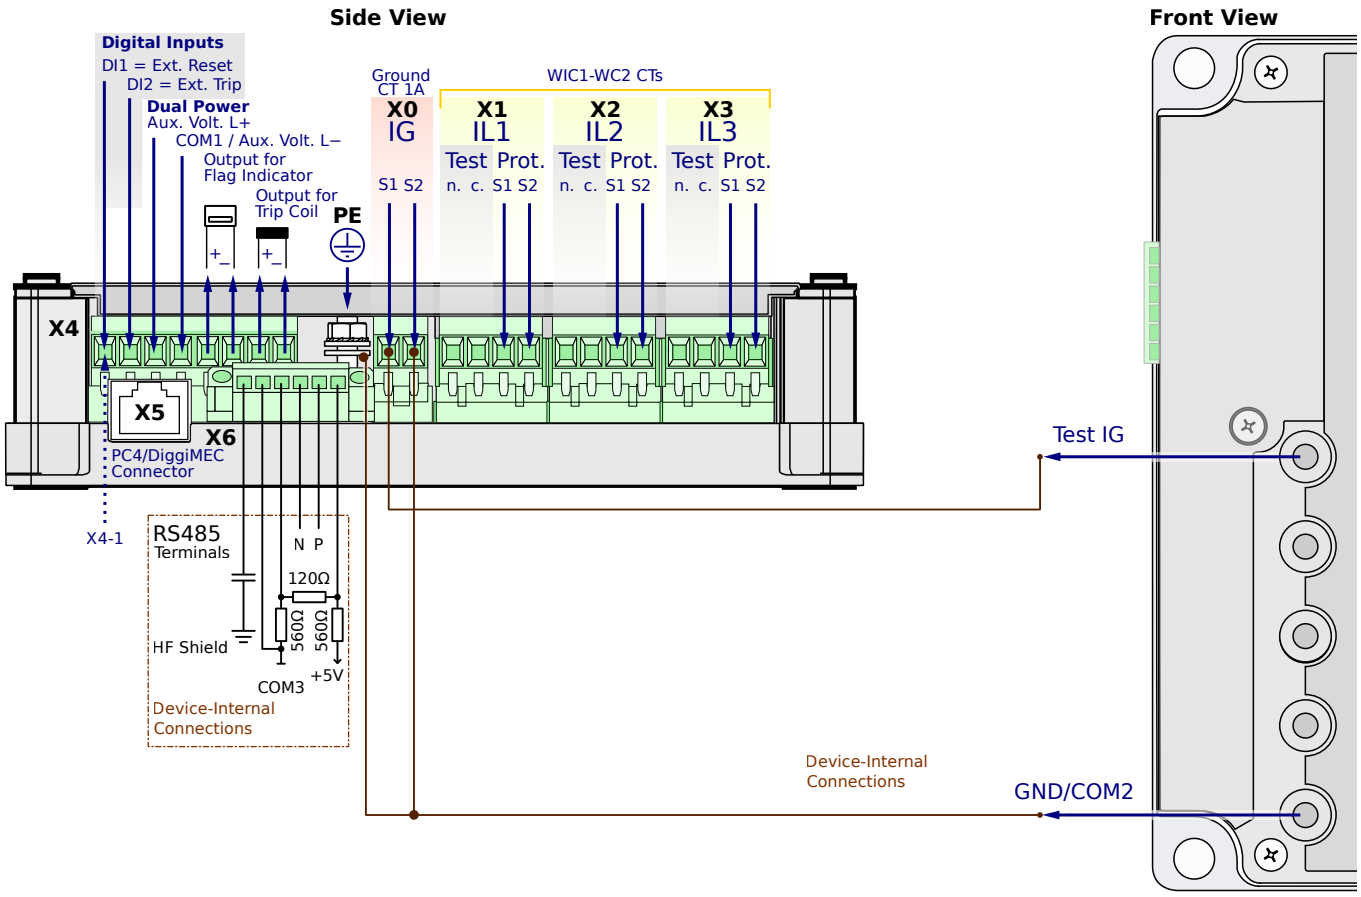


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2SC0

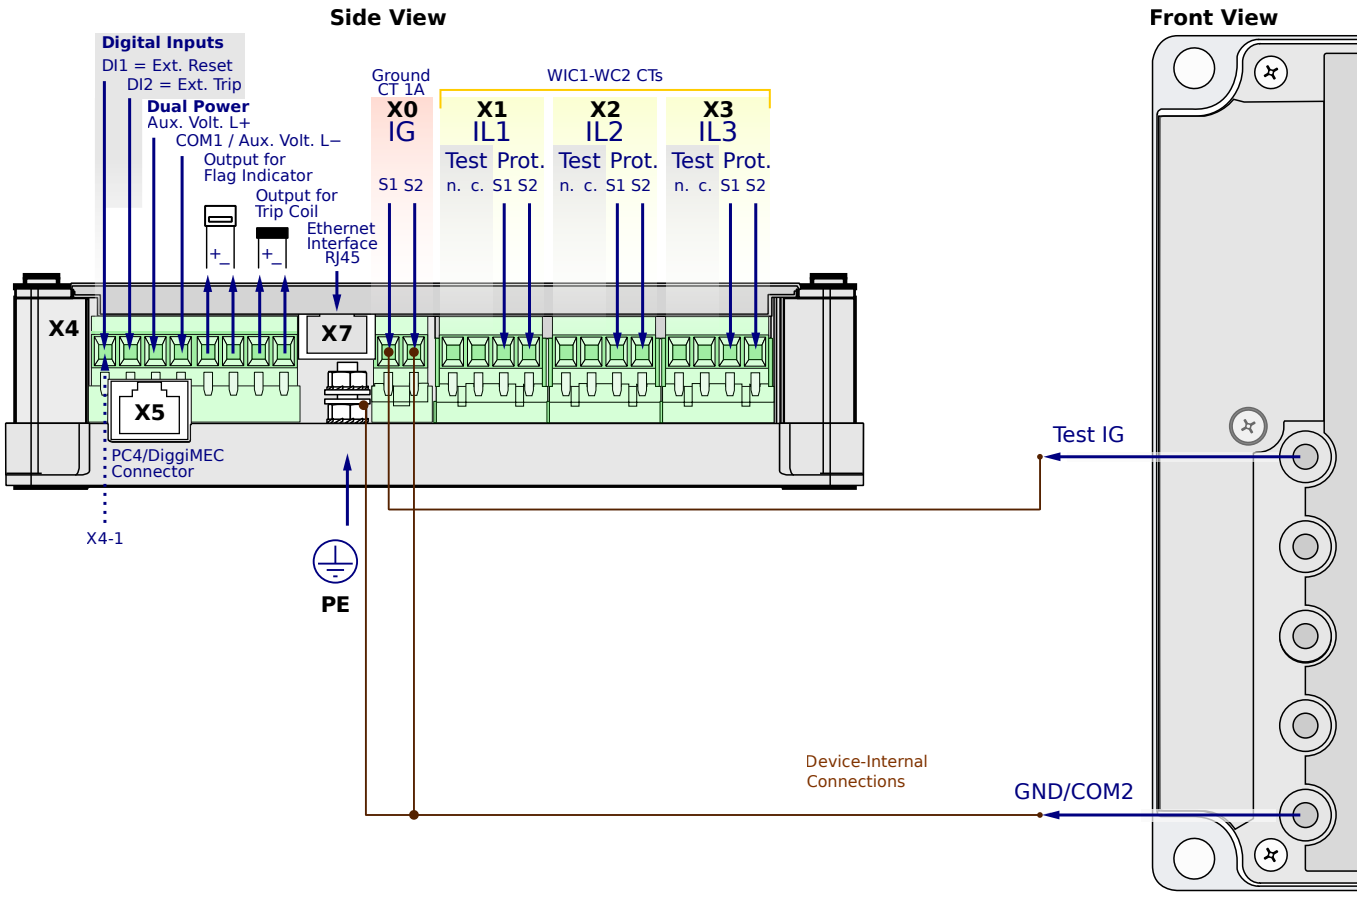


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2SCH

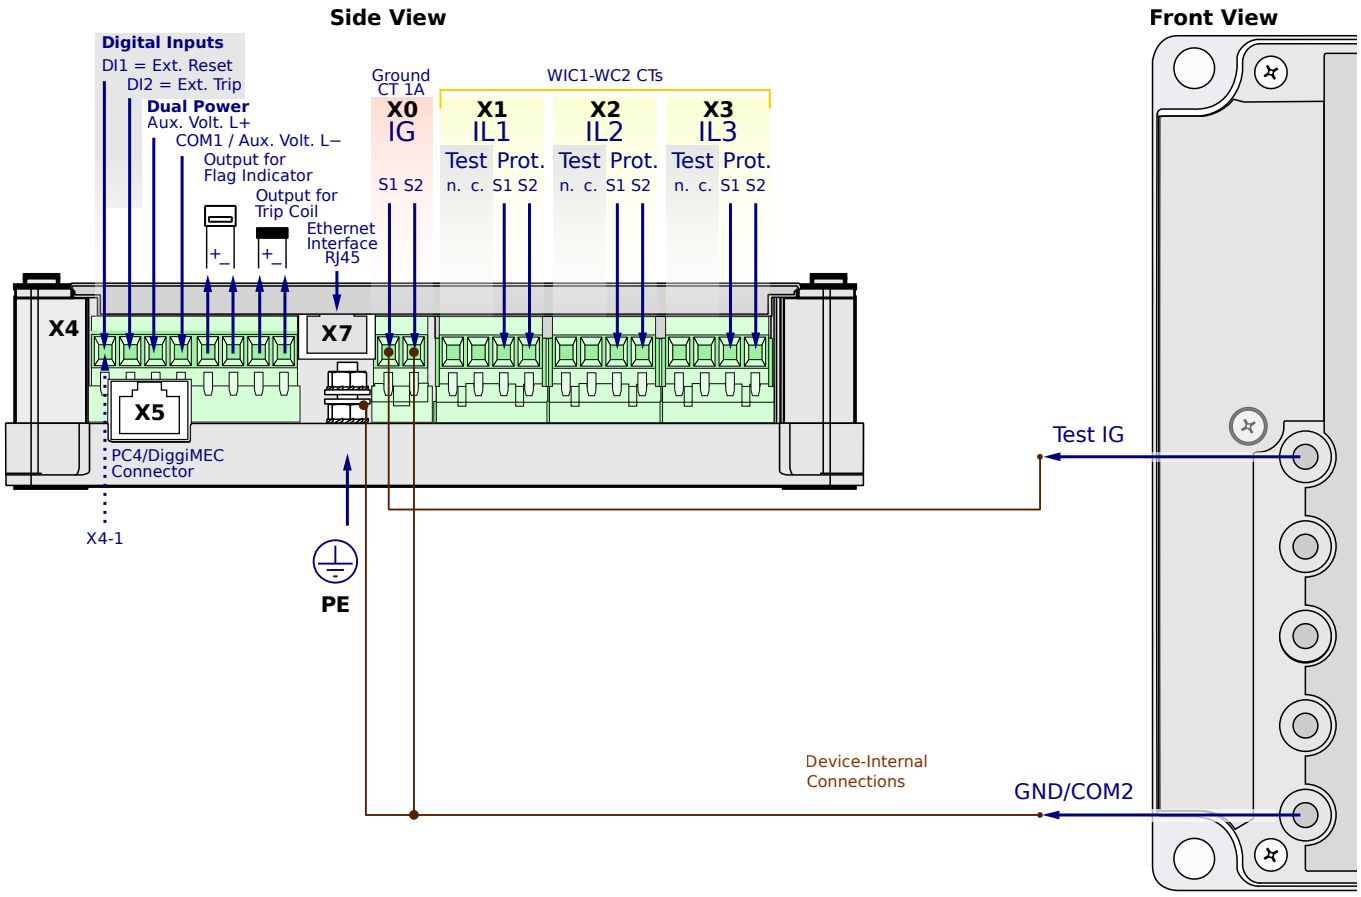


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2SL0

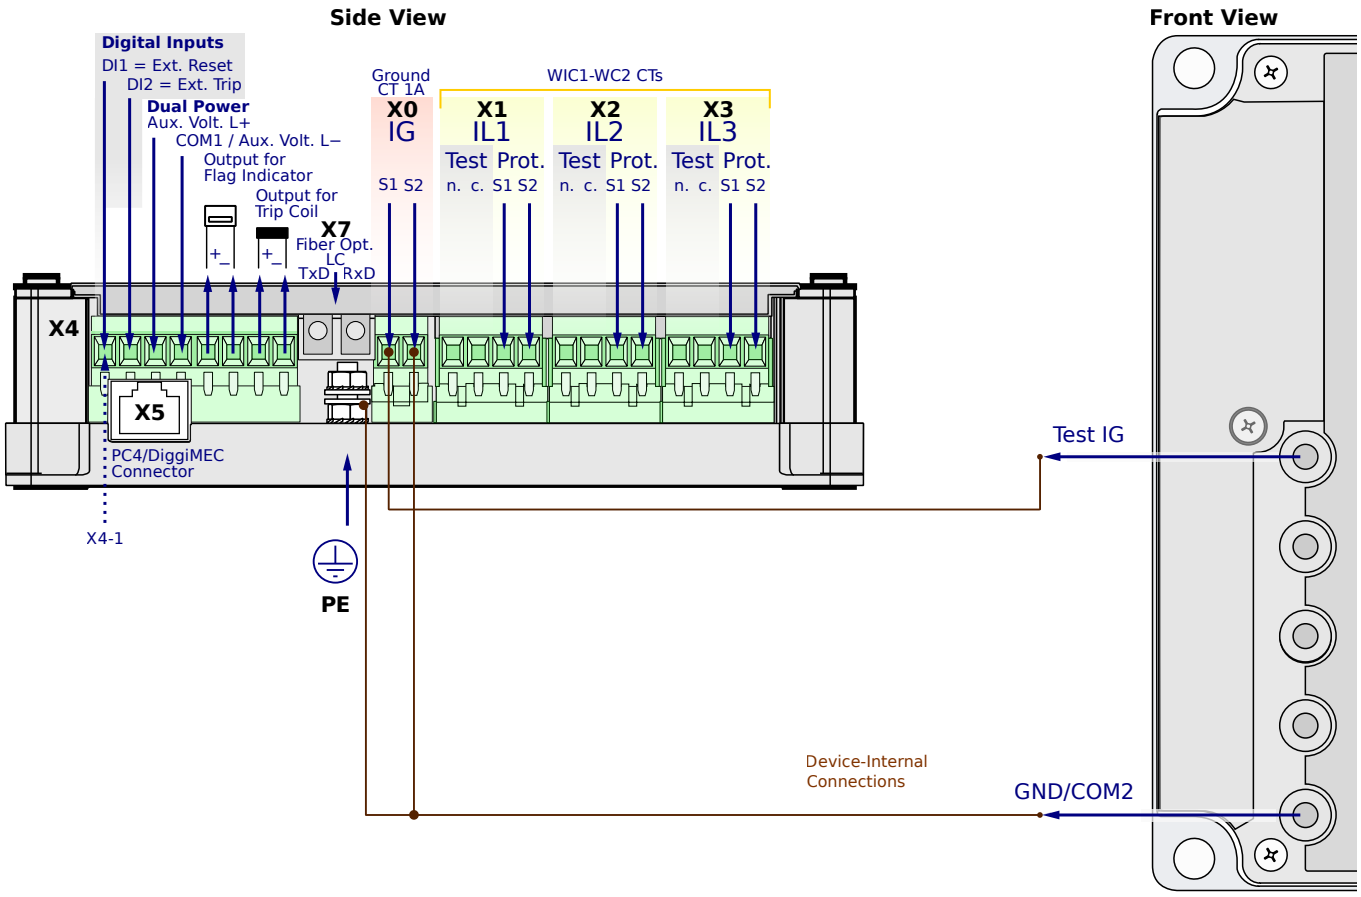


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2SLH

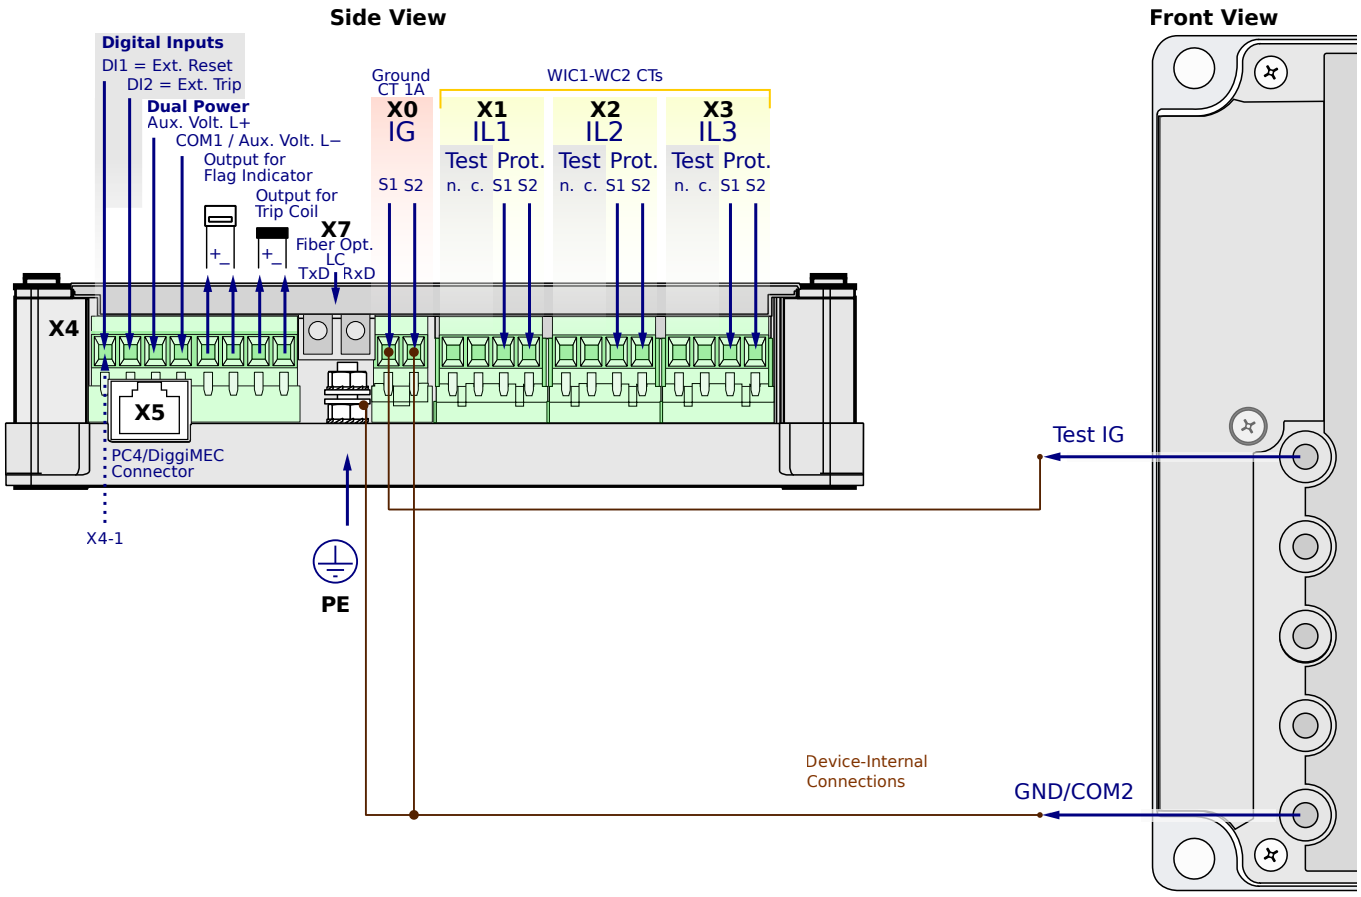


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2AA0

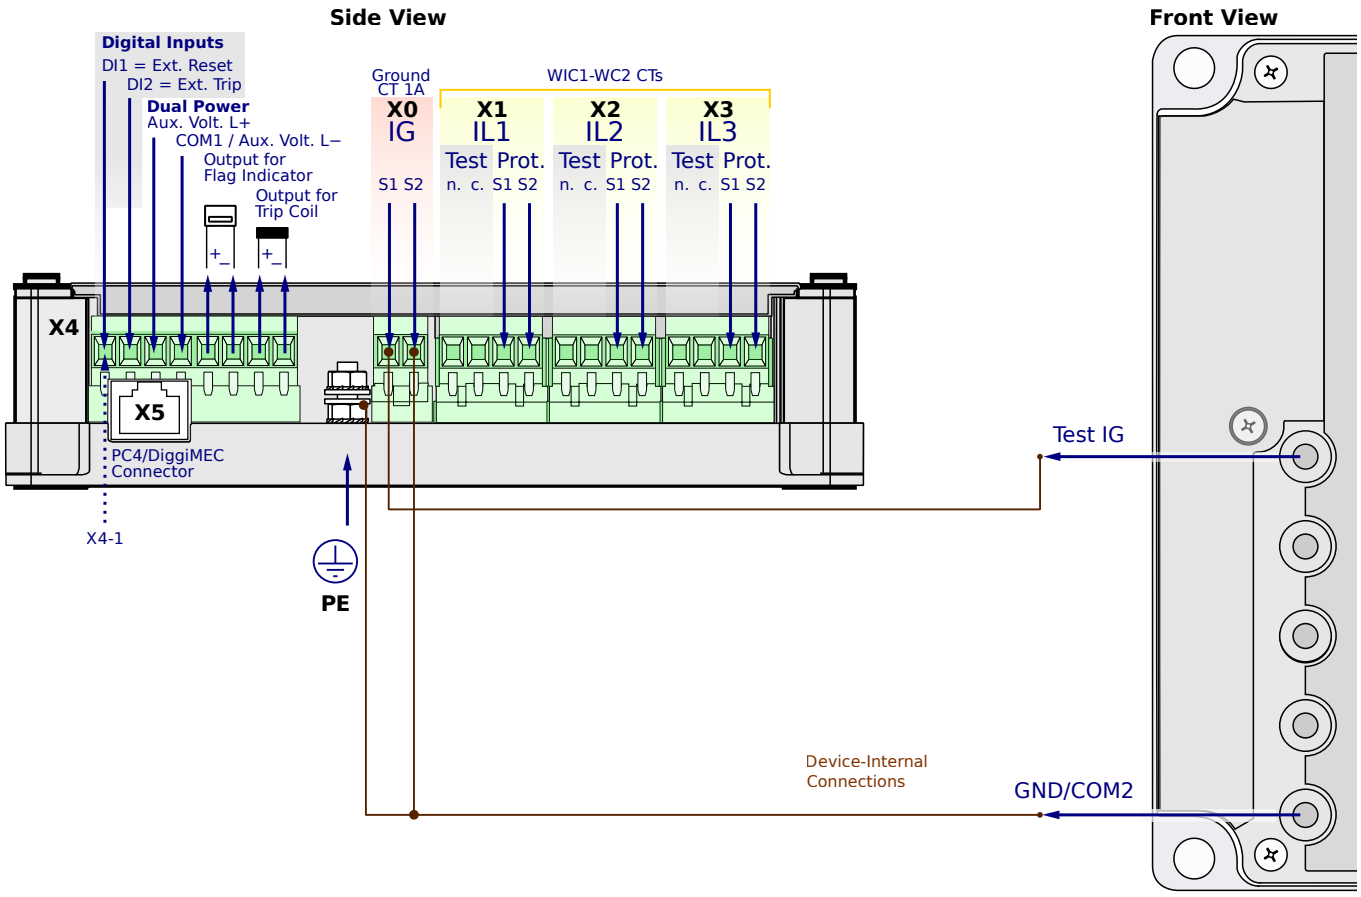


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2AAH

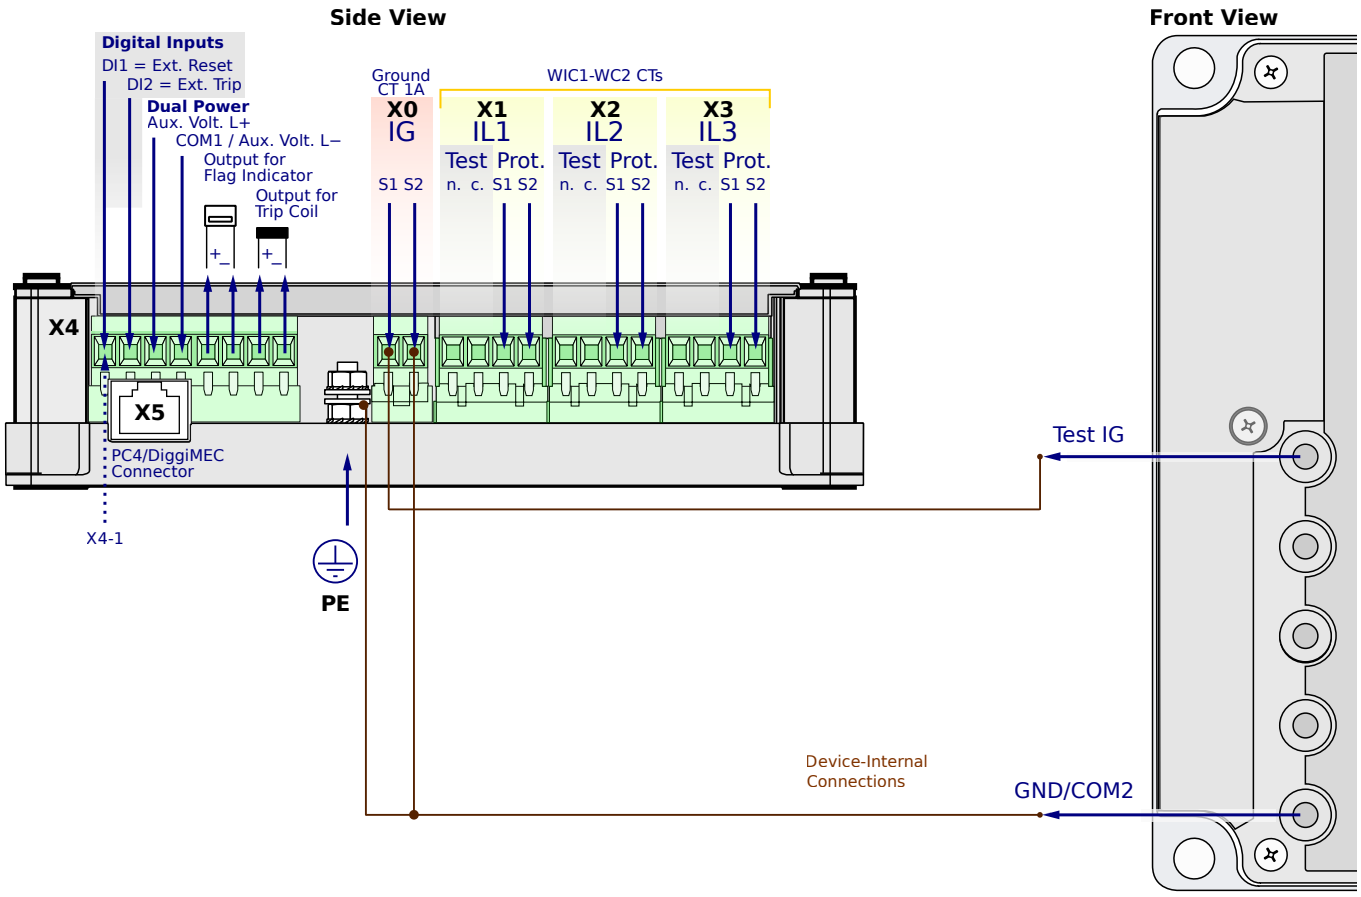


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2AB0

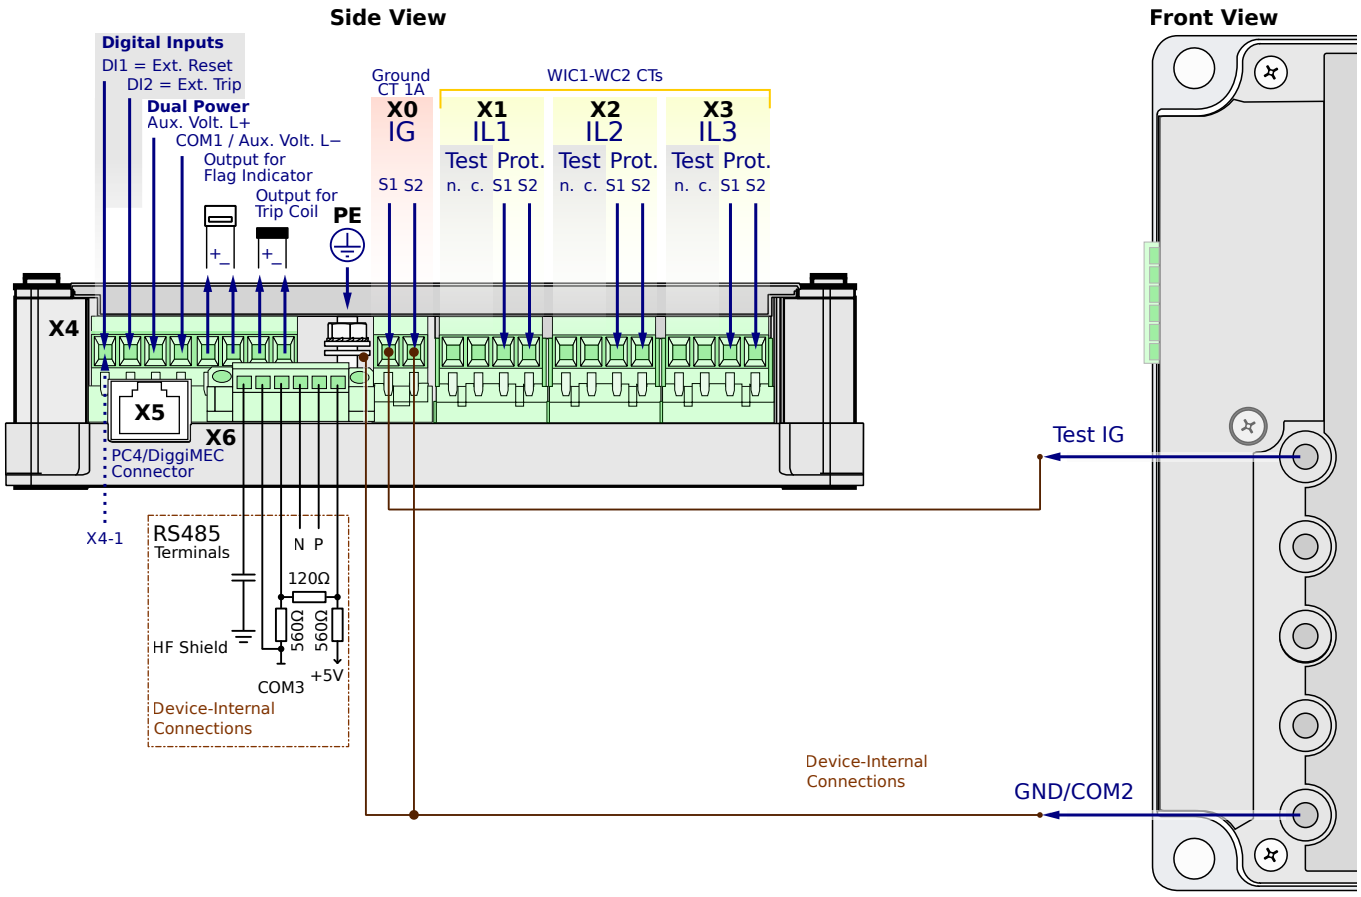


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2ABH

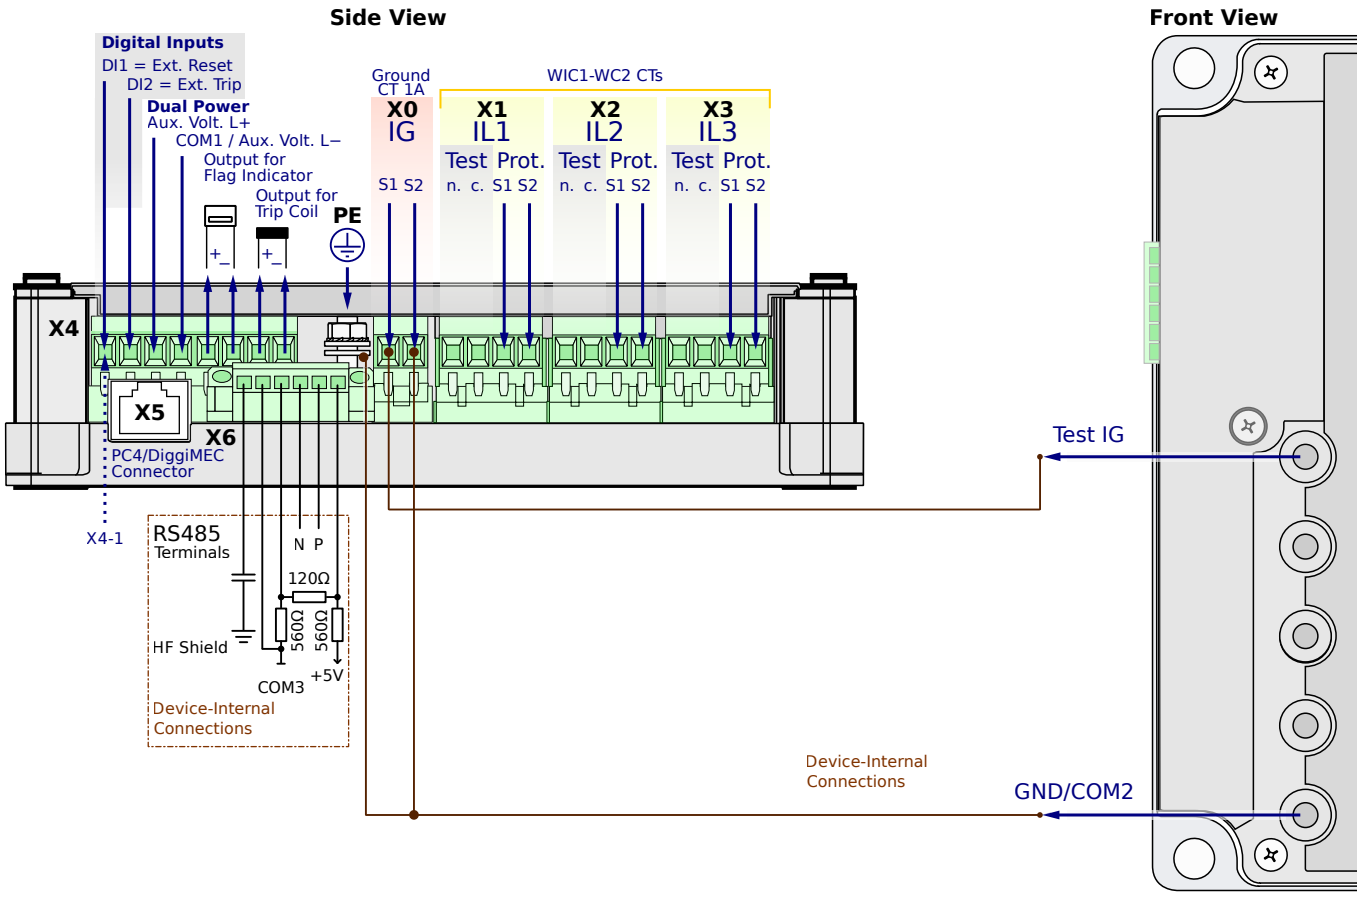


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2AC0

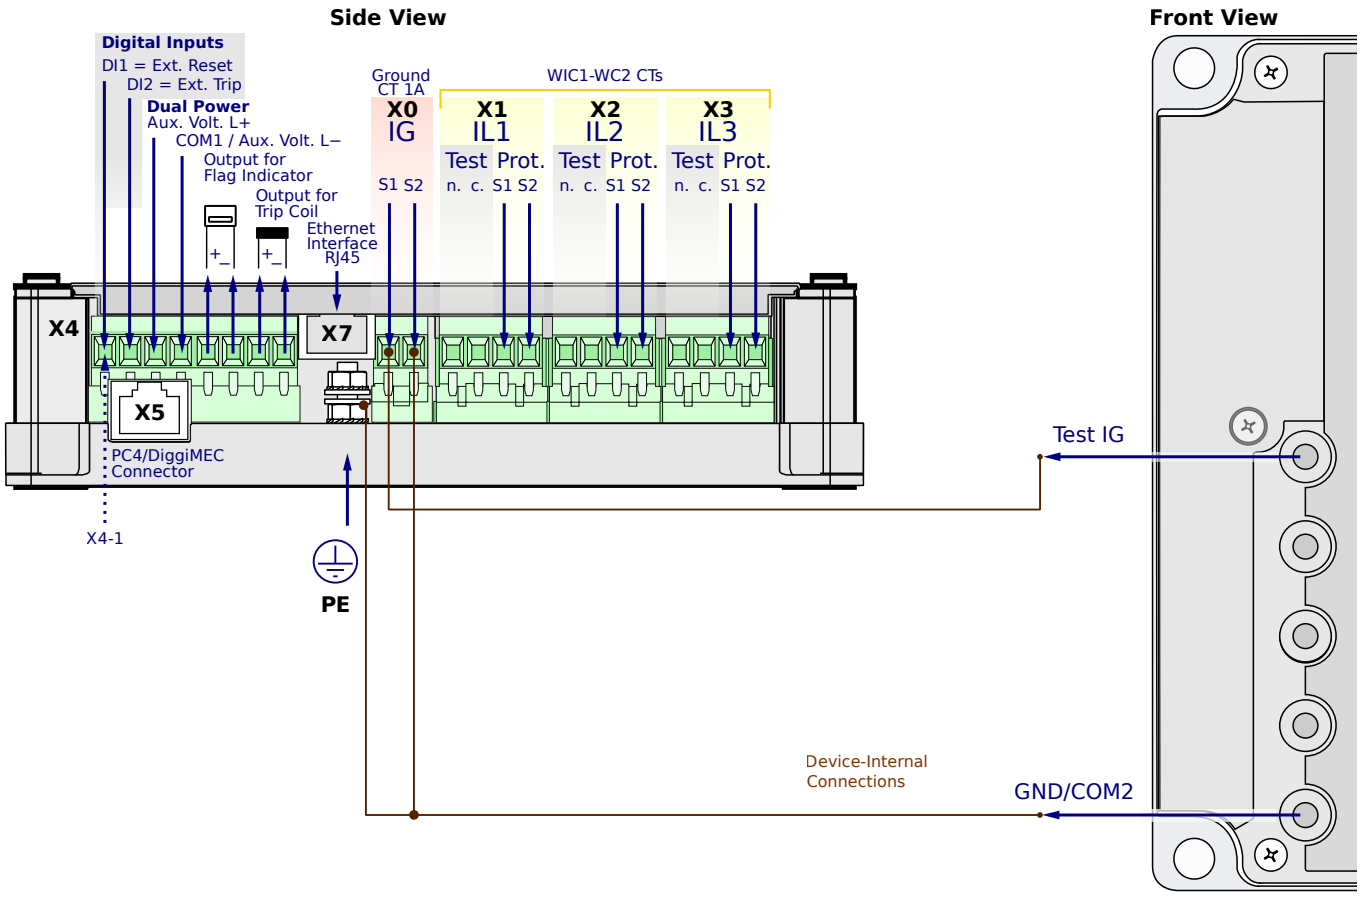


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2ACH

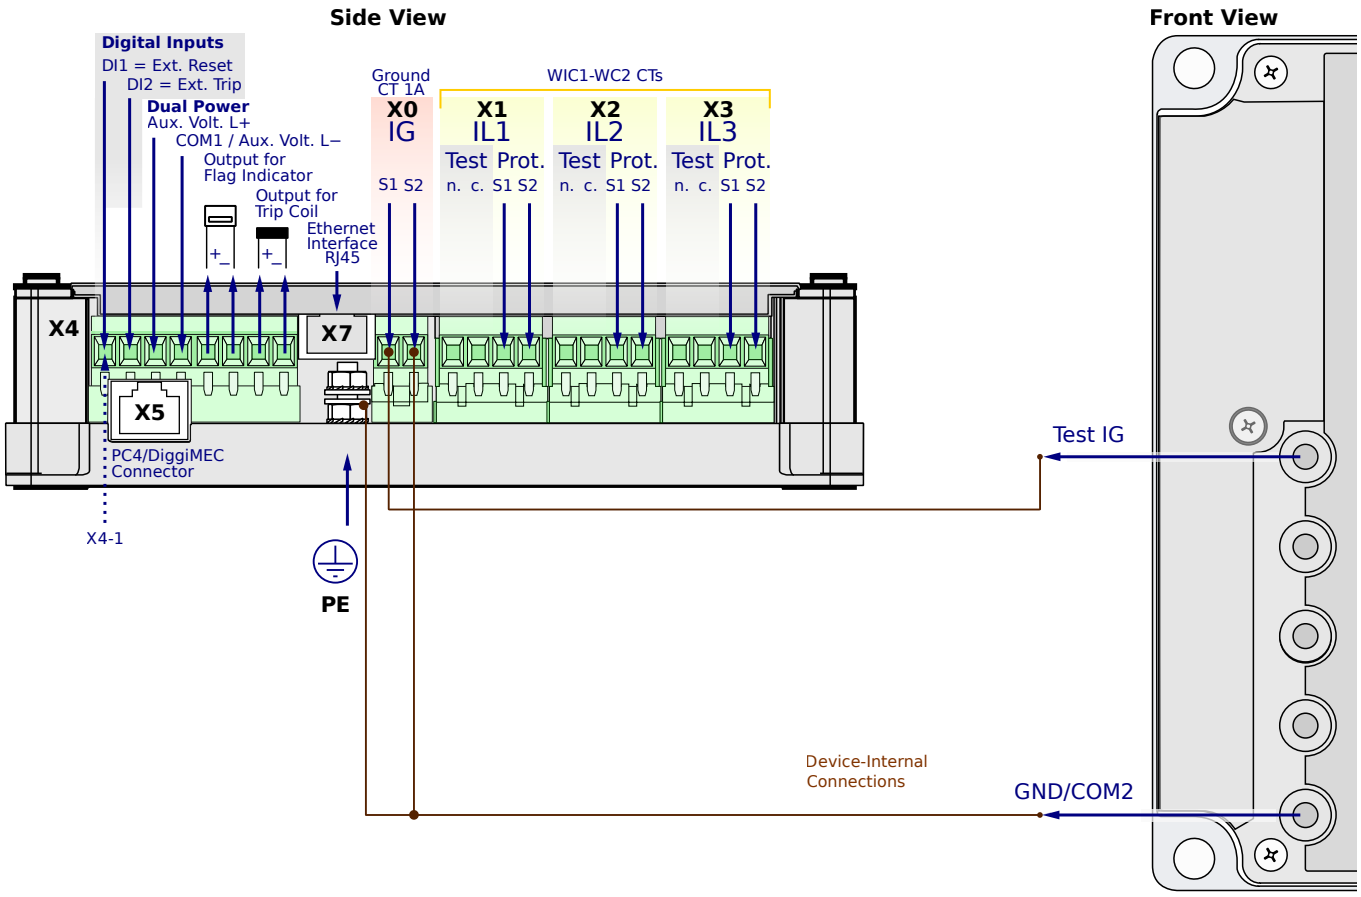


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2AL0

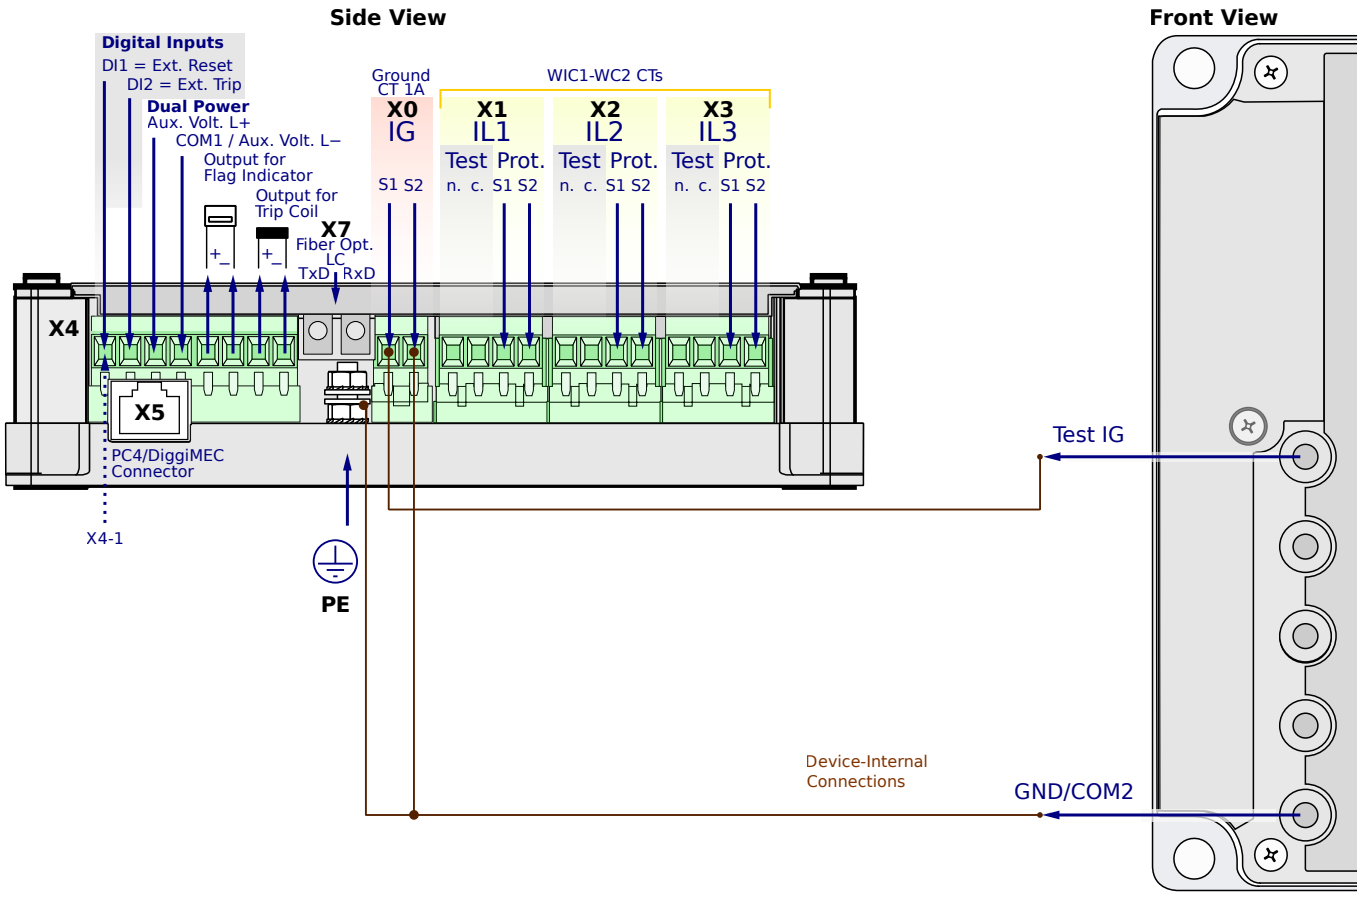


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2ALH

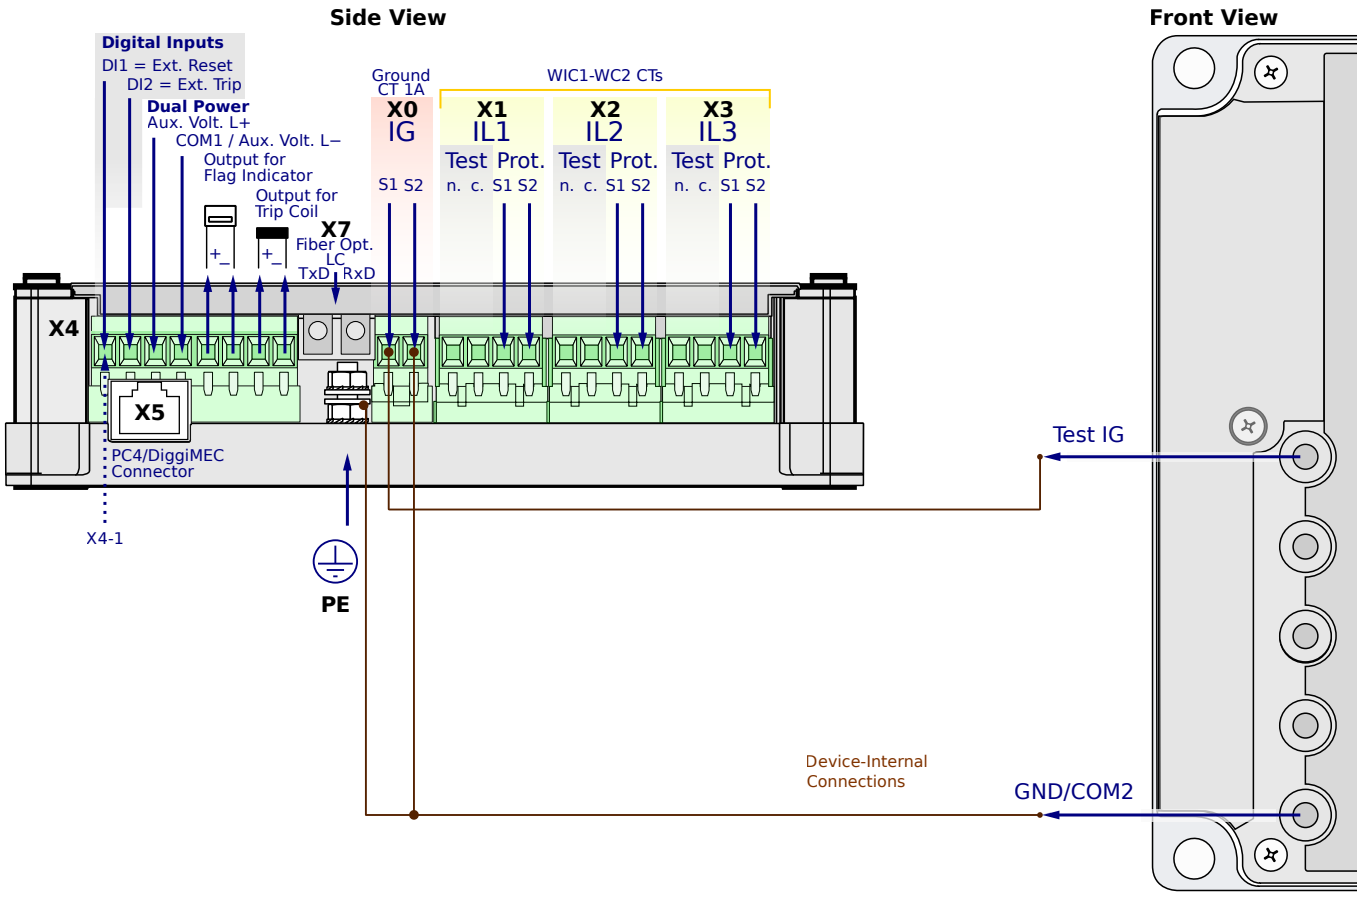


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2PA0

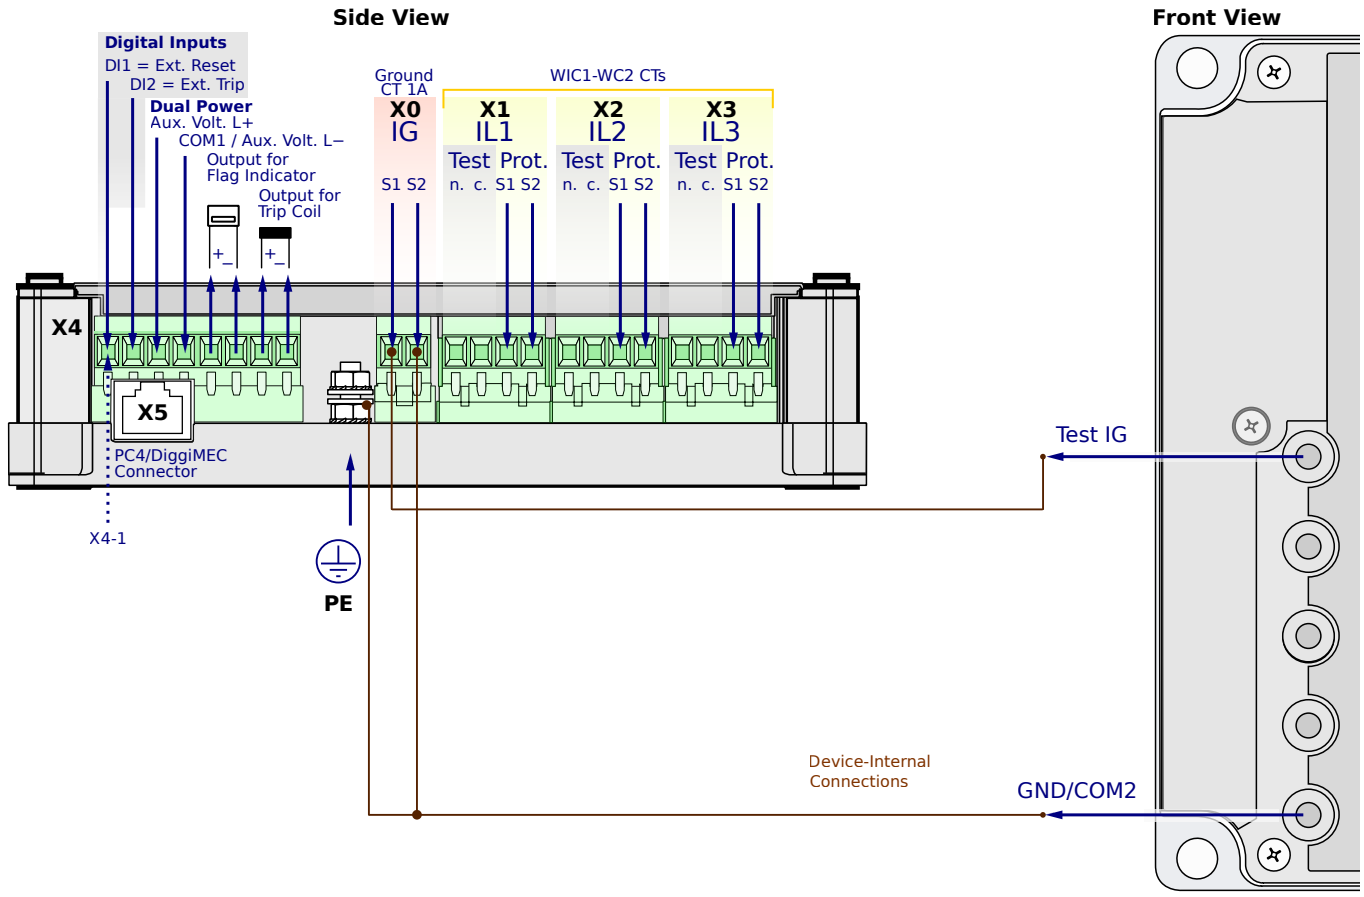


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2PAH

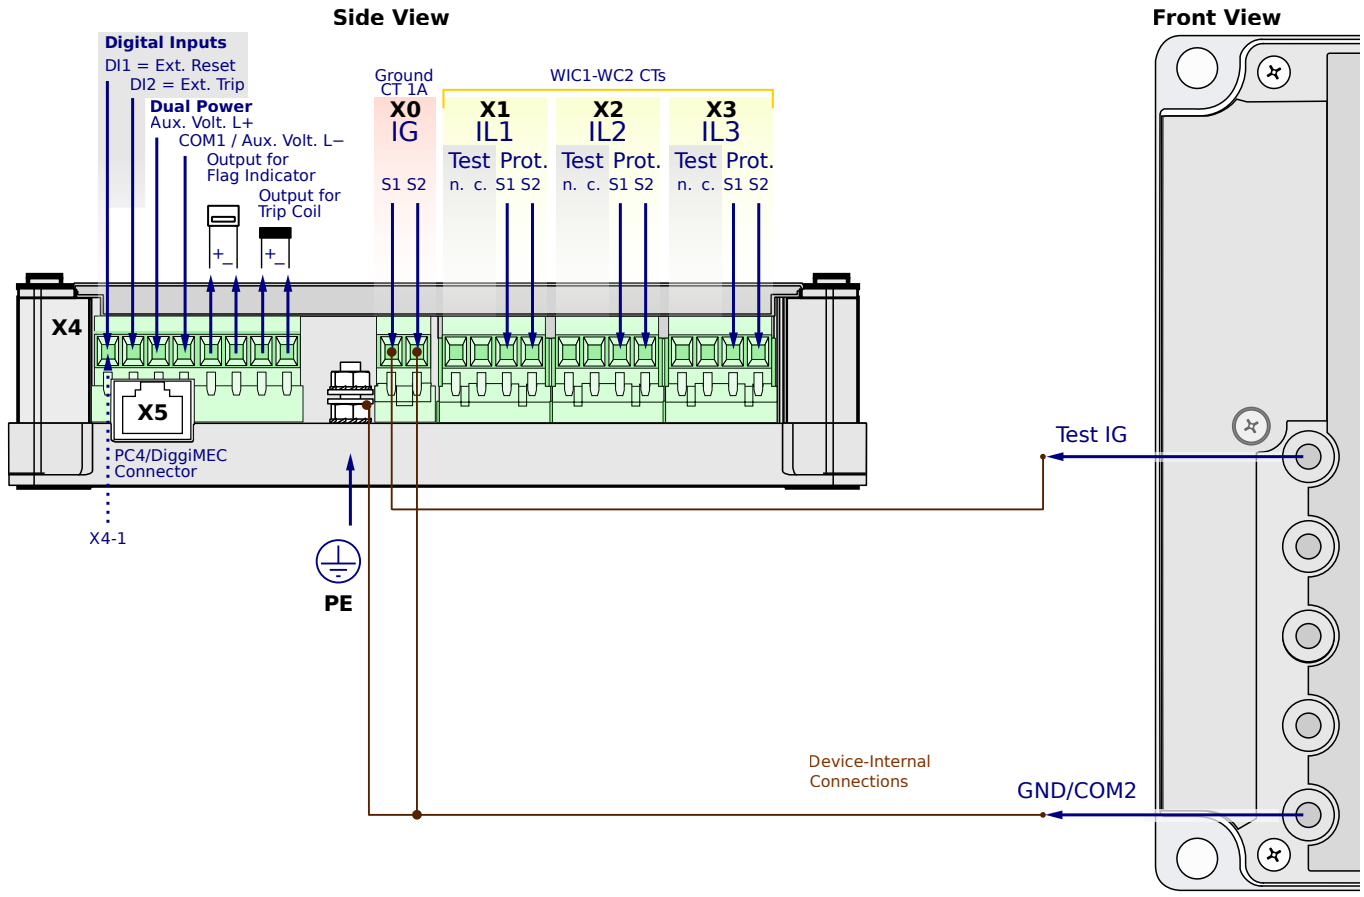


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CG2PB0

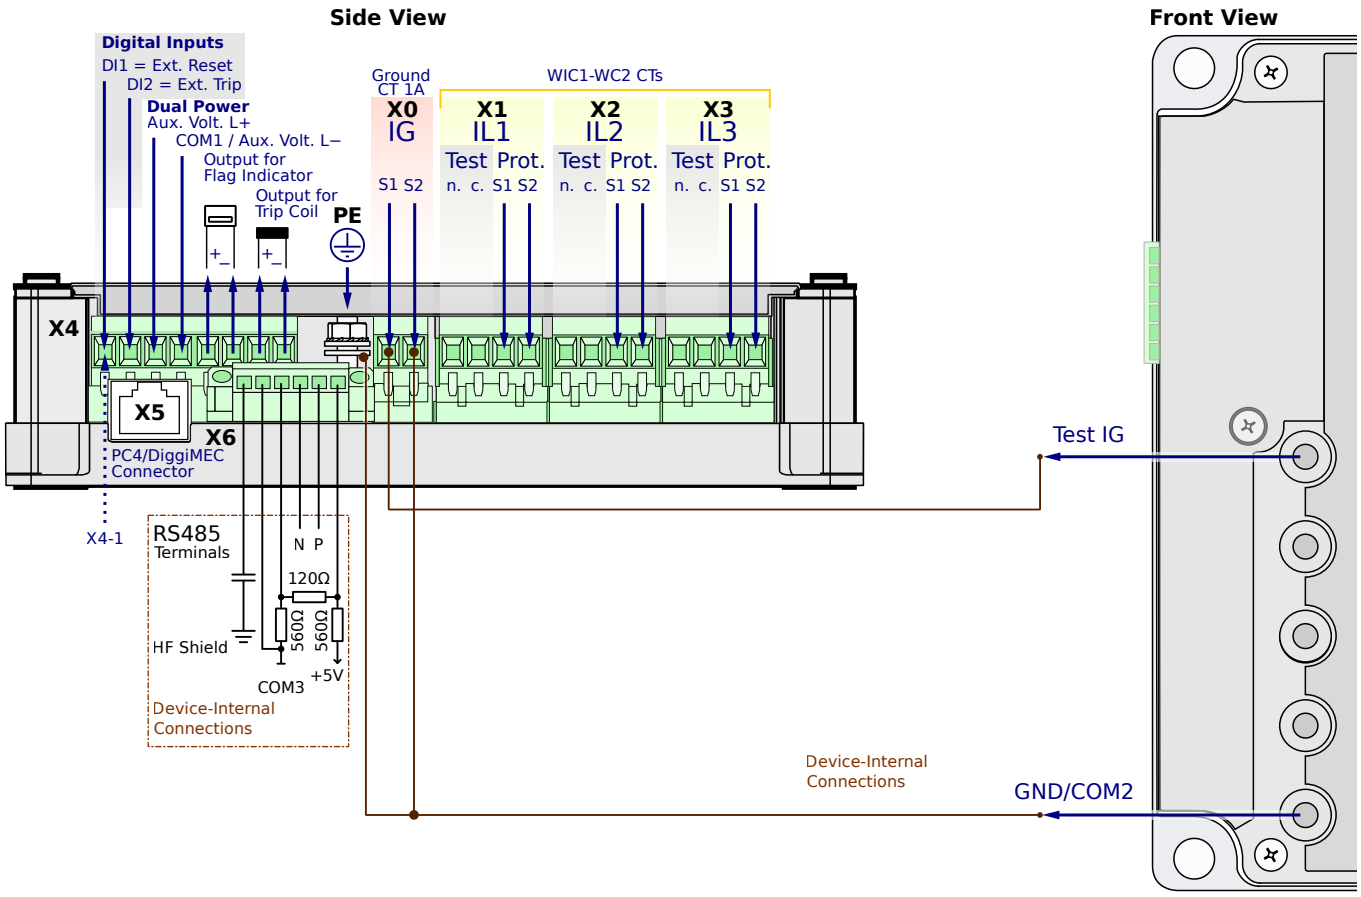


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2PBH

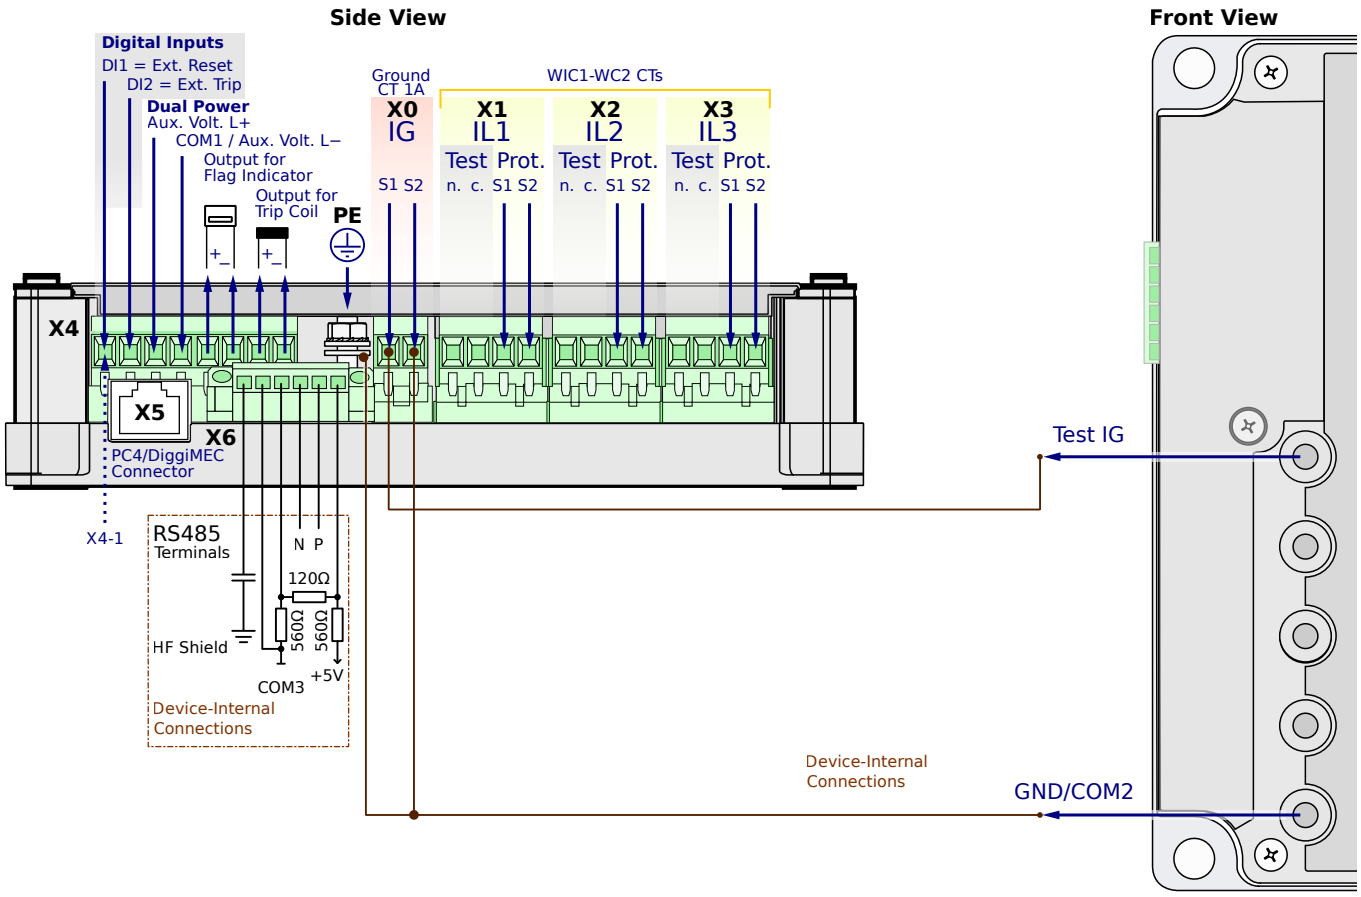


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CG2PC0

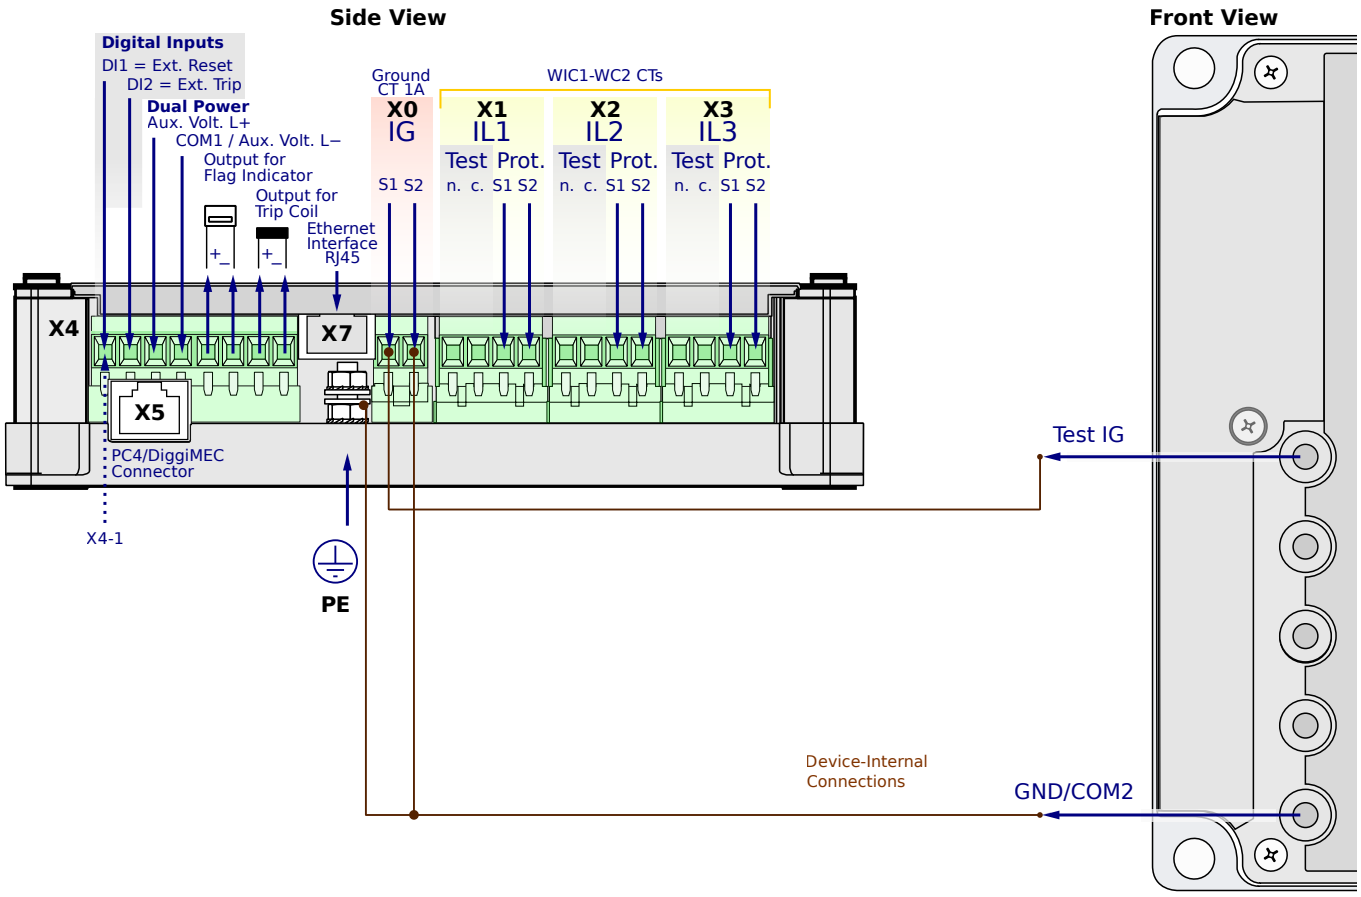


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2PCH

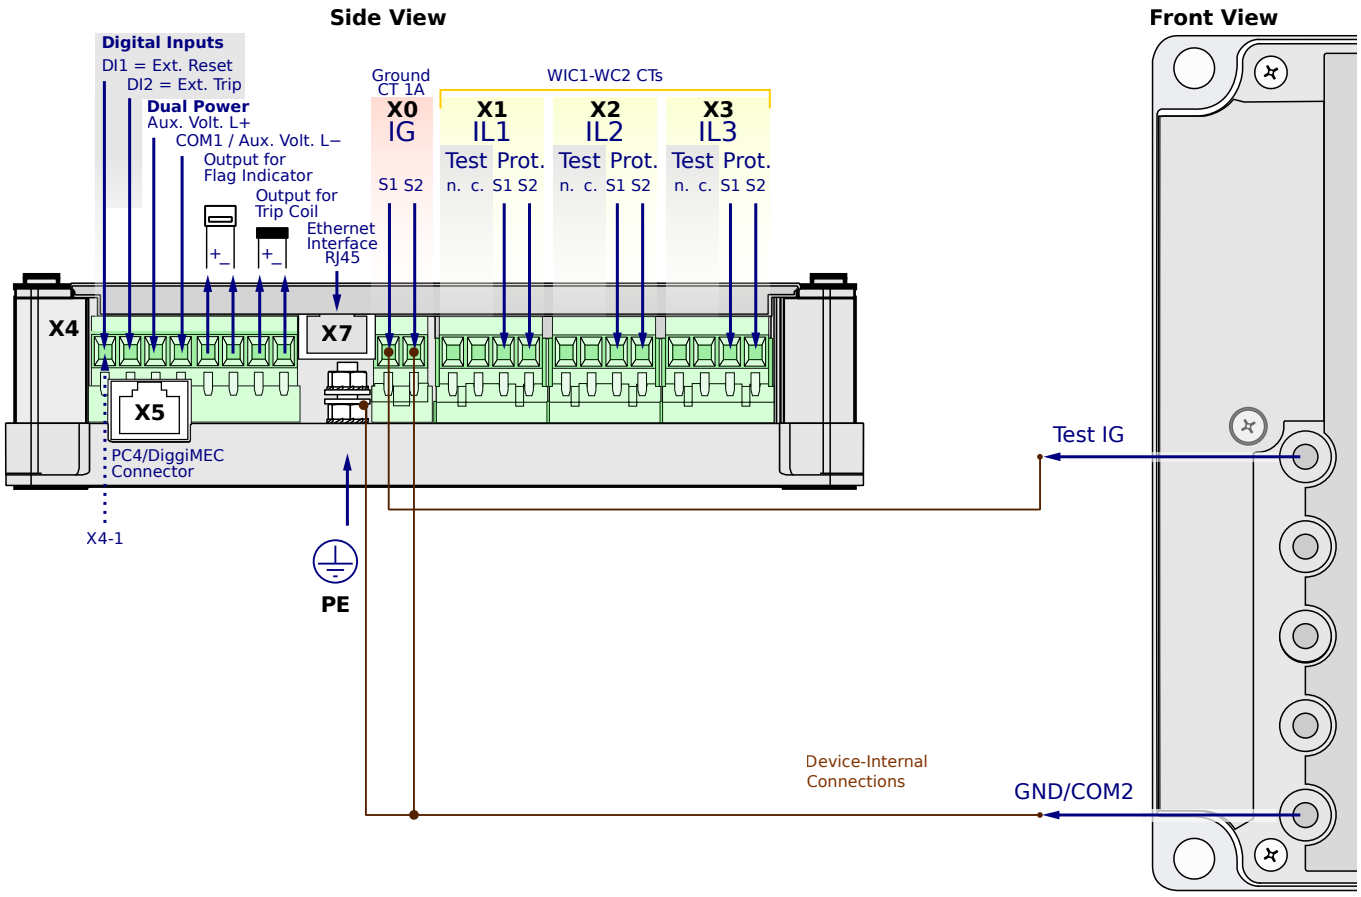


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CG2PL0

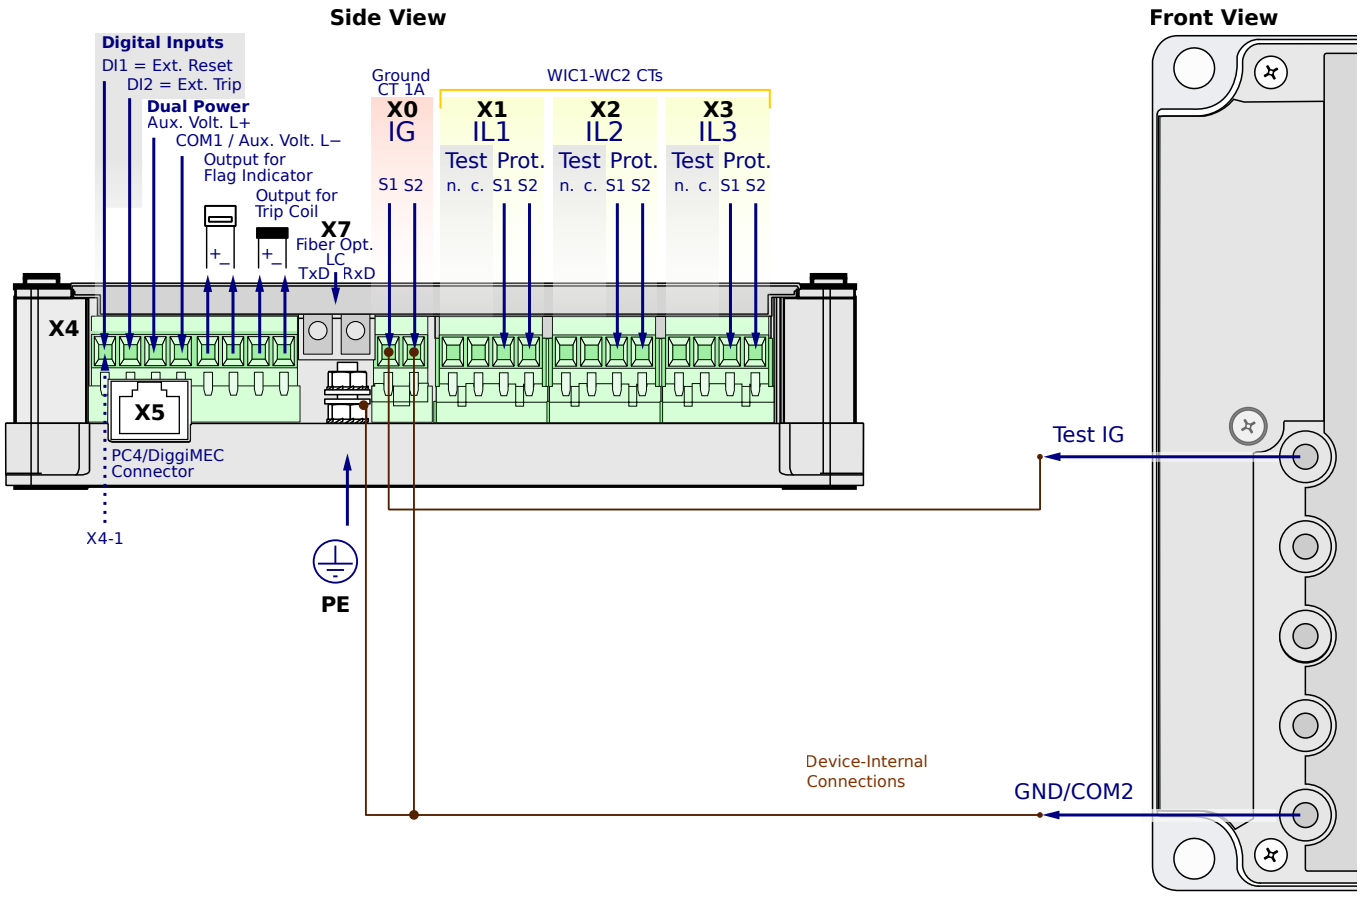


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CG2PLH

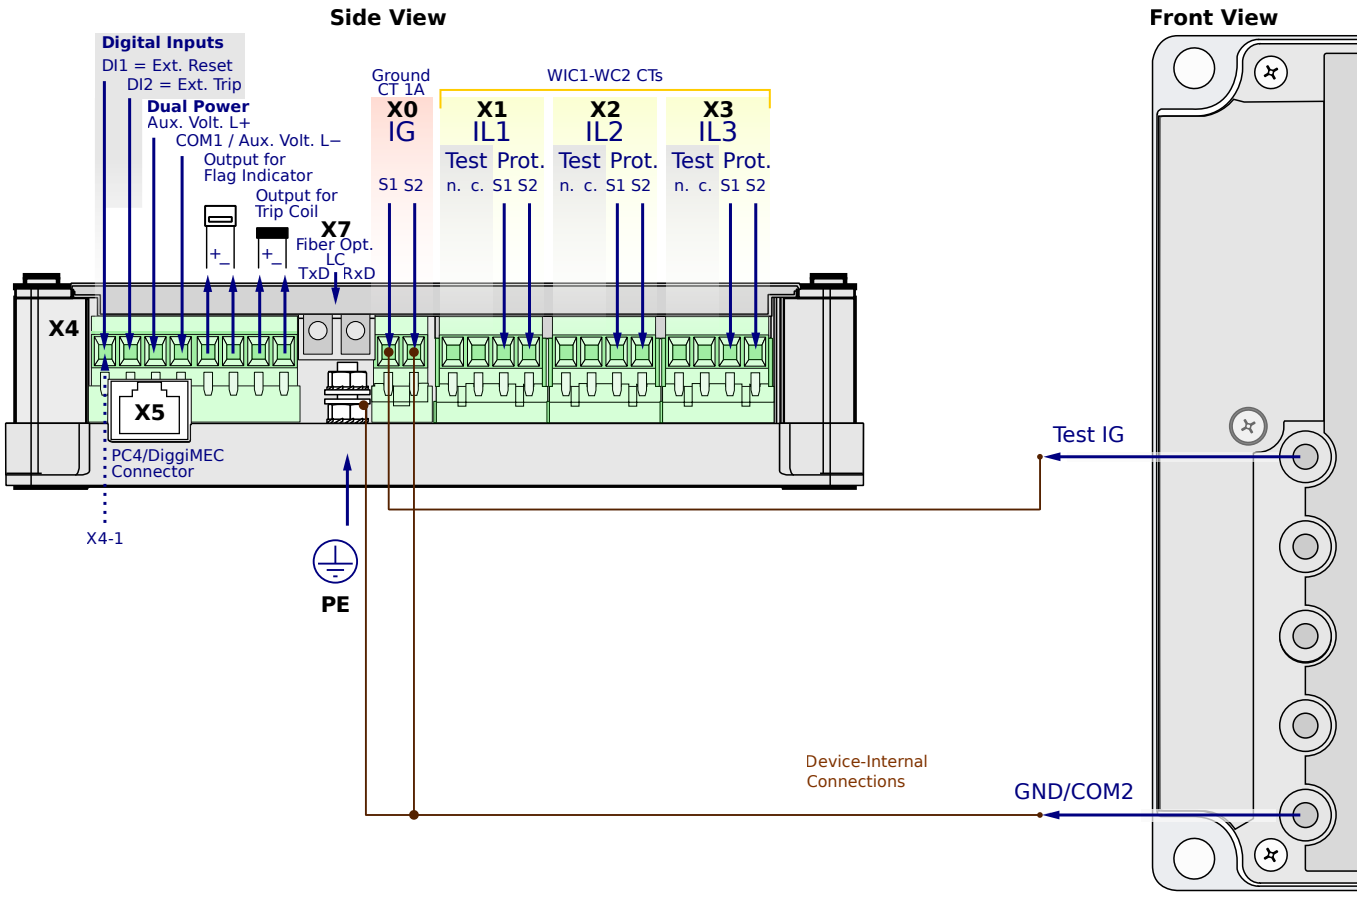


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – Digital Inputs, fixed to: DI1=ext. reset, DI2=ext. trip
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1SA0

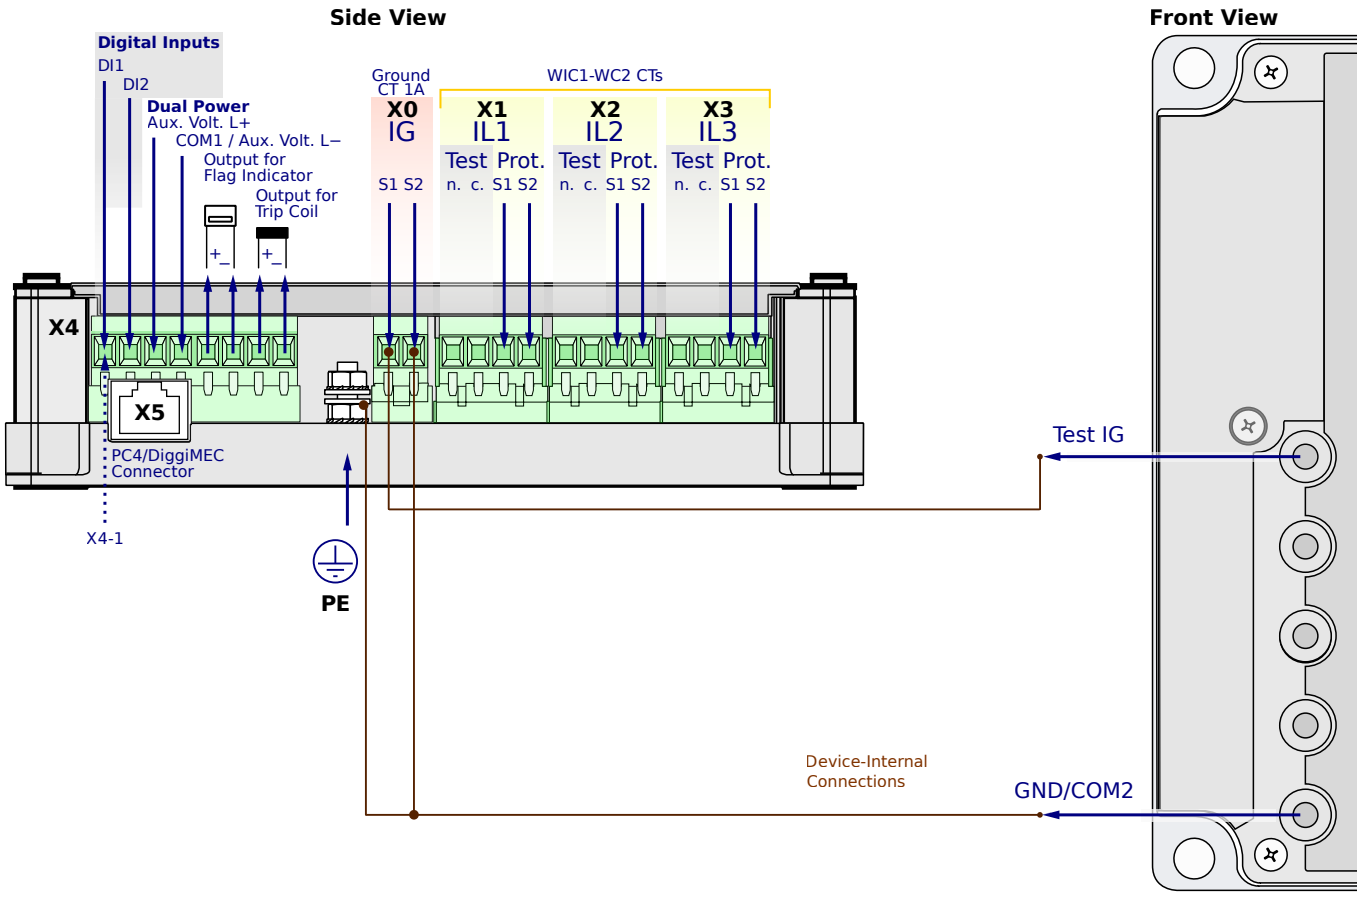


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1SAH

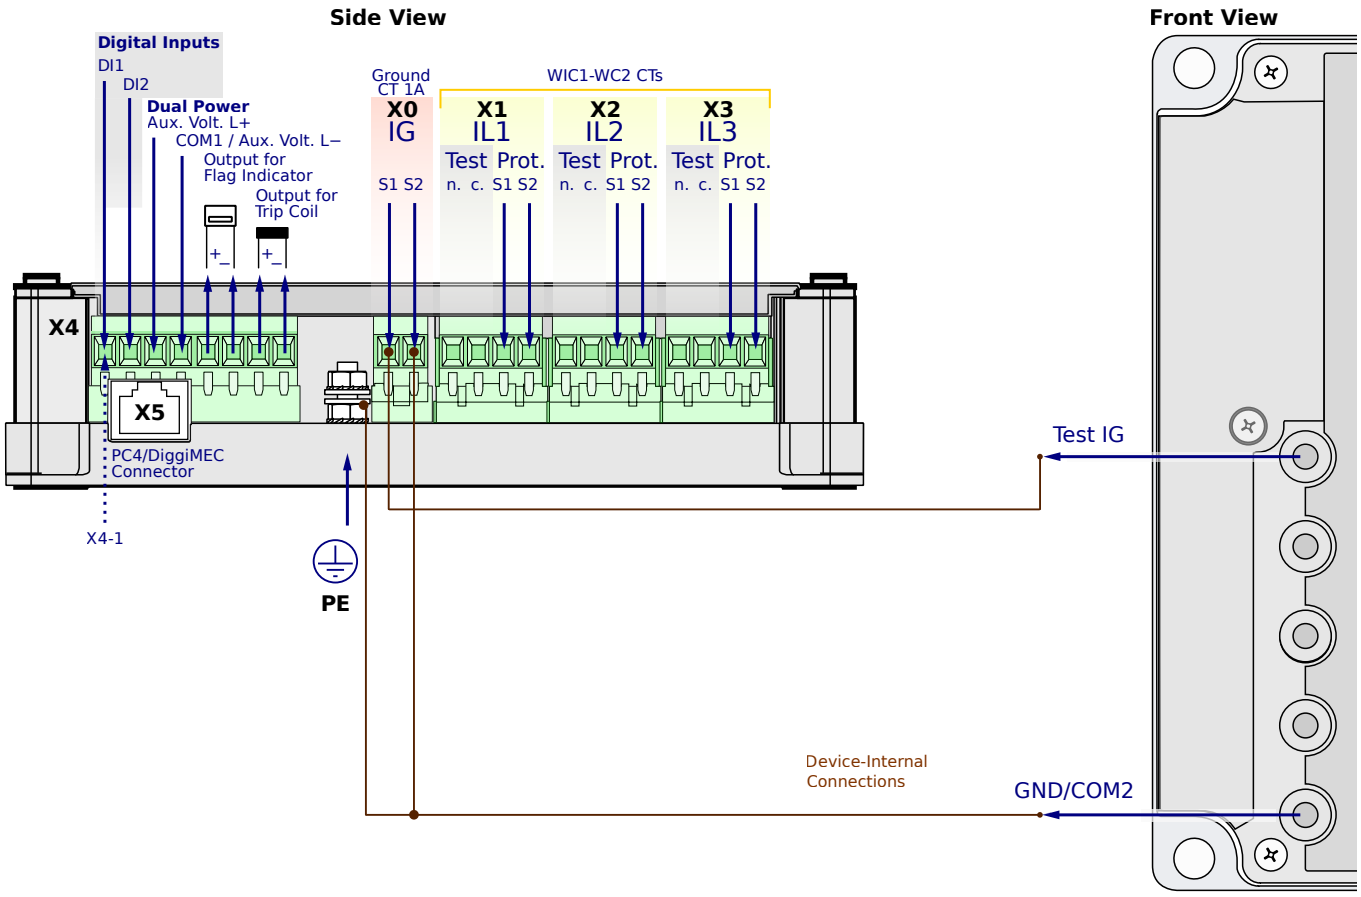


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1SB0

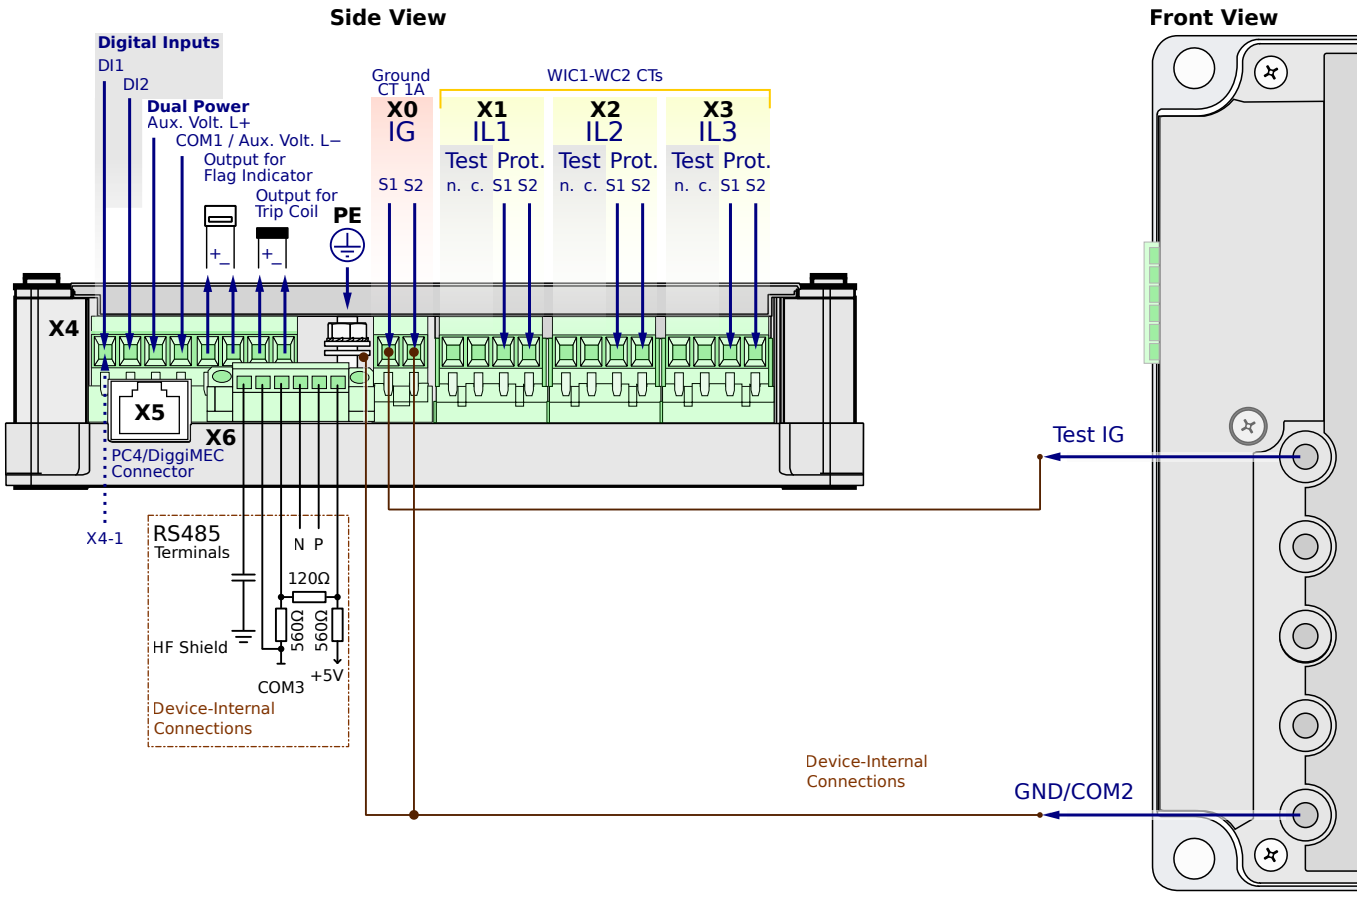


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1SBH

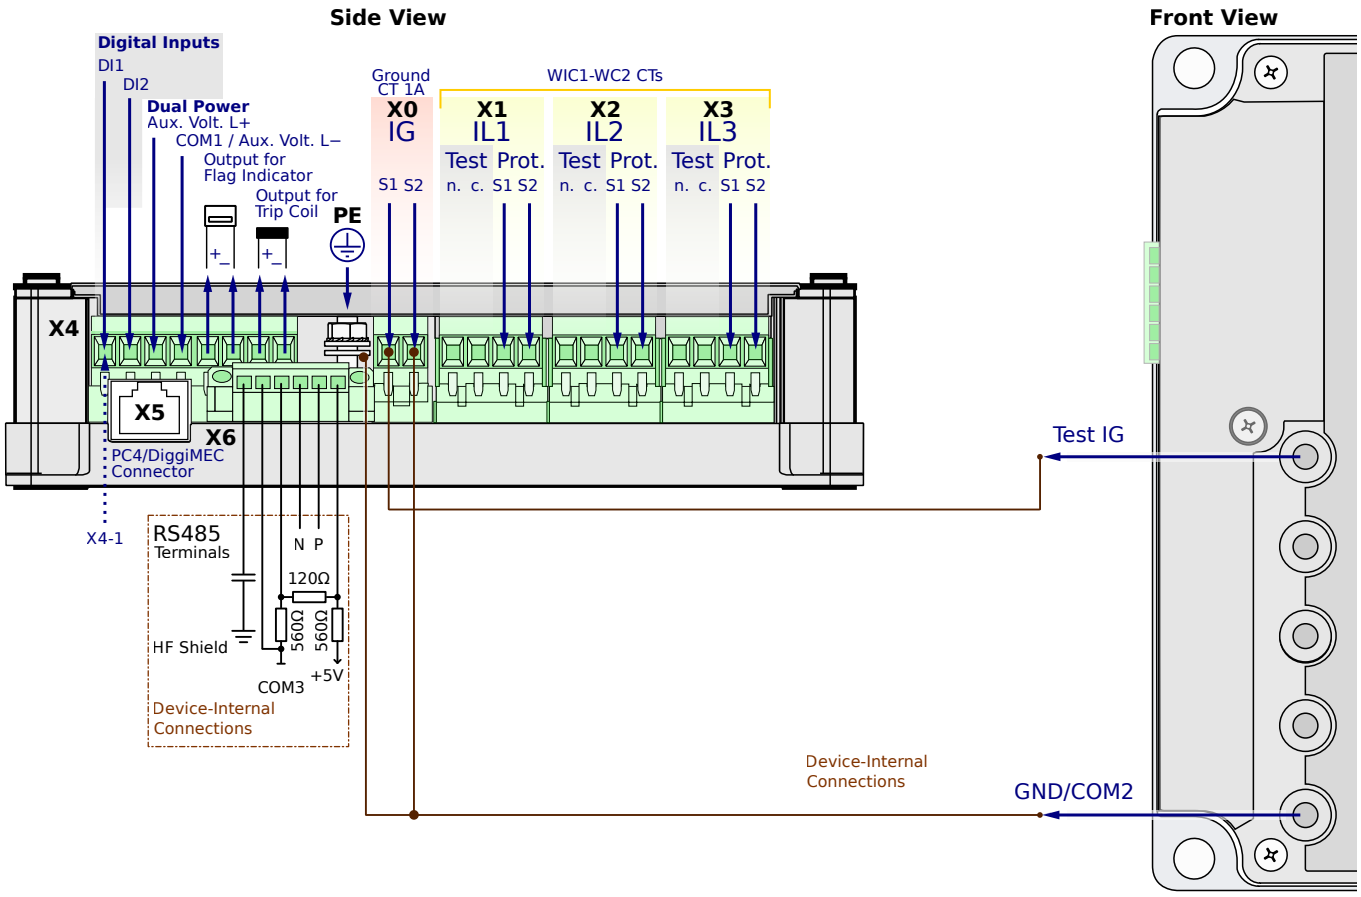


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1SC0

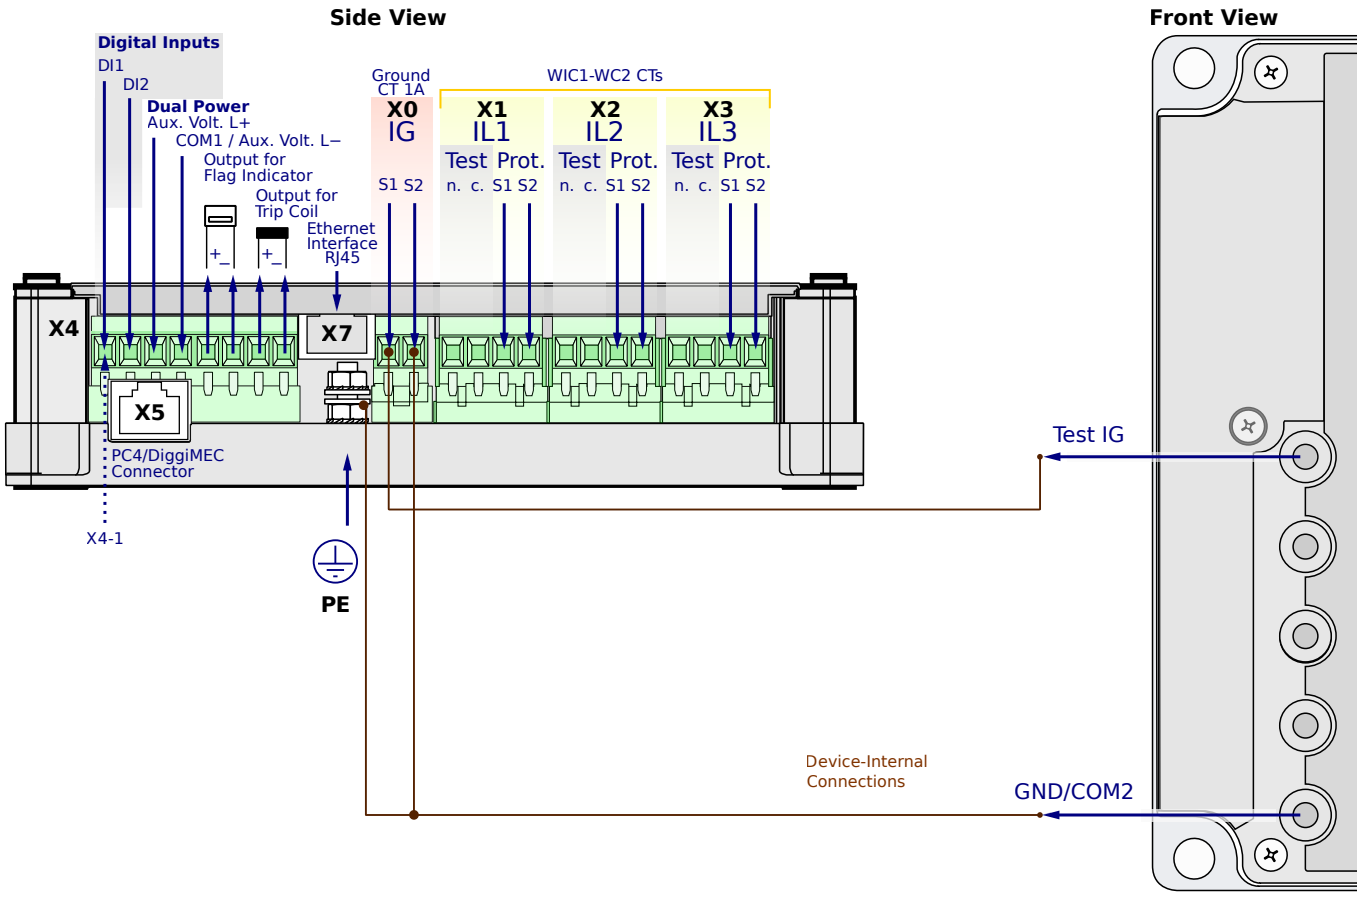


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1SCH

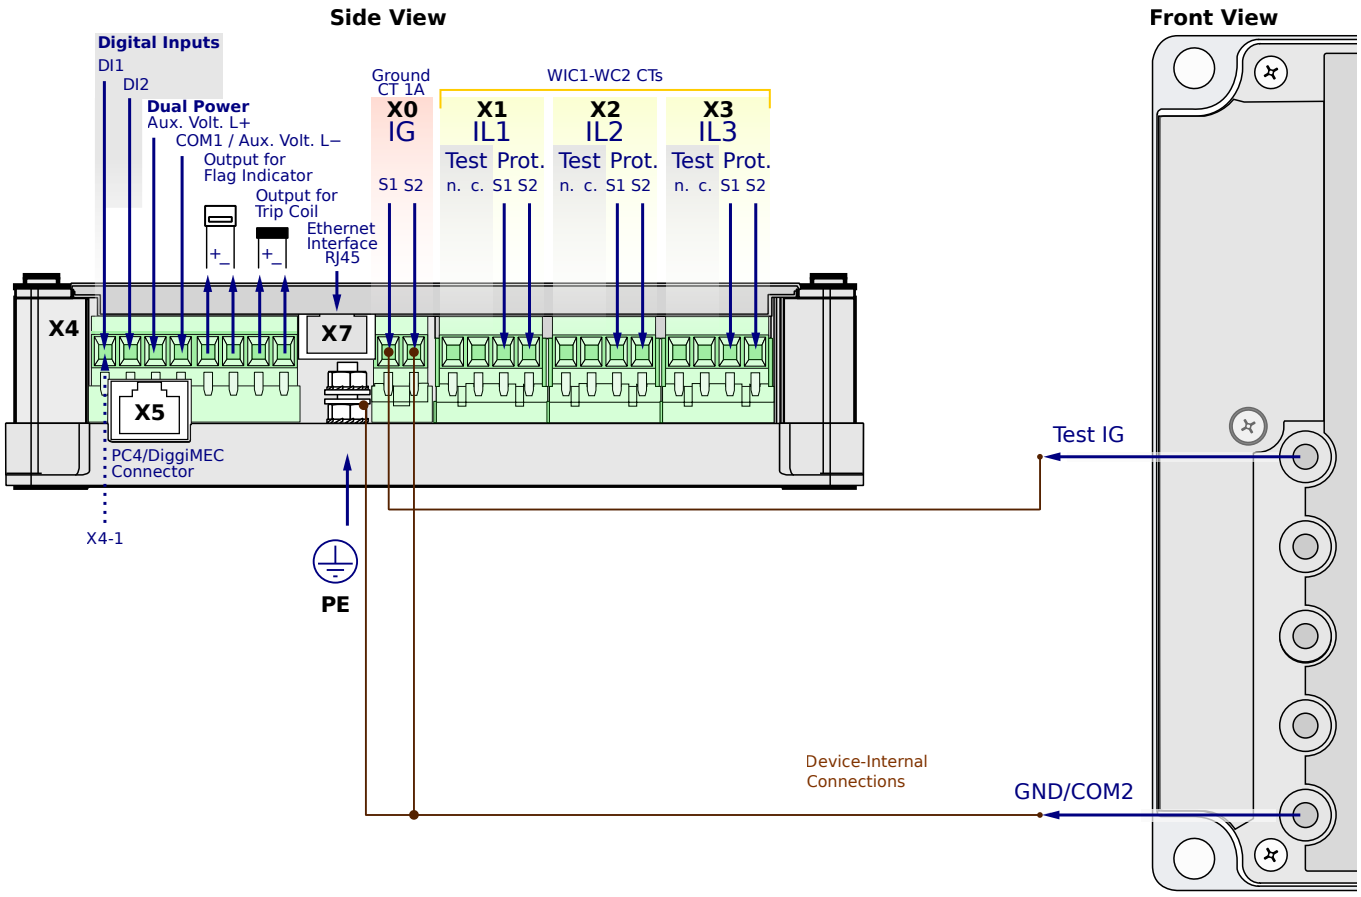


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1SL0

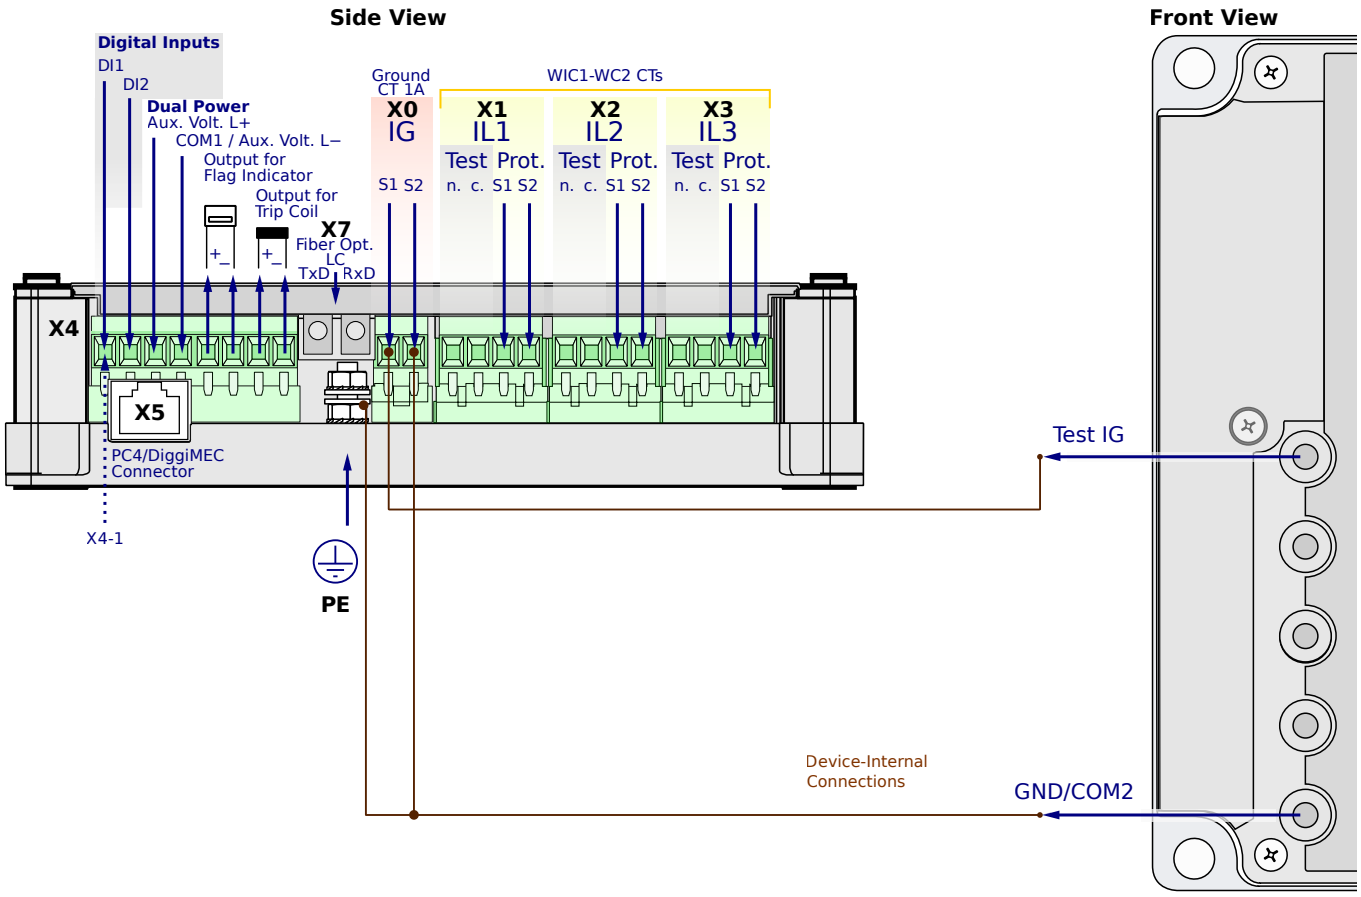


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1SLH

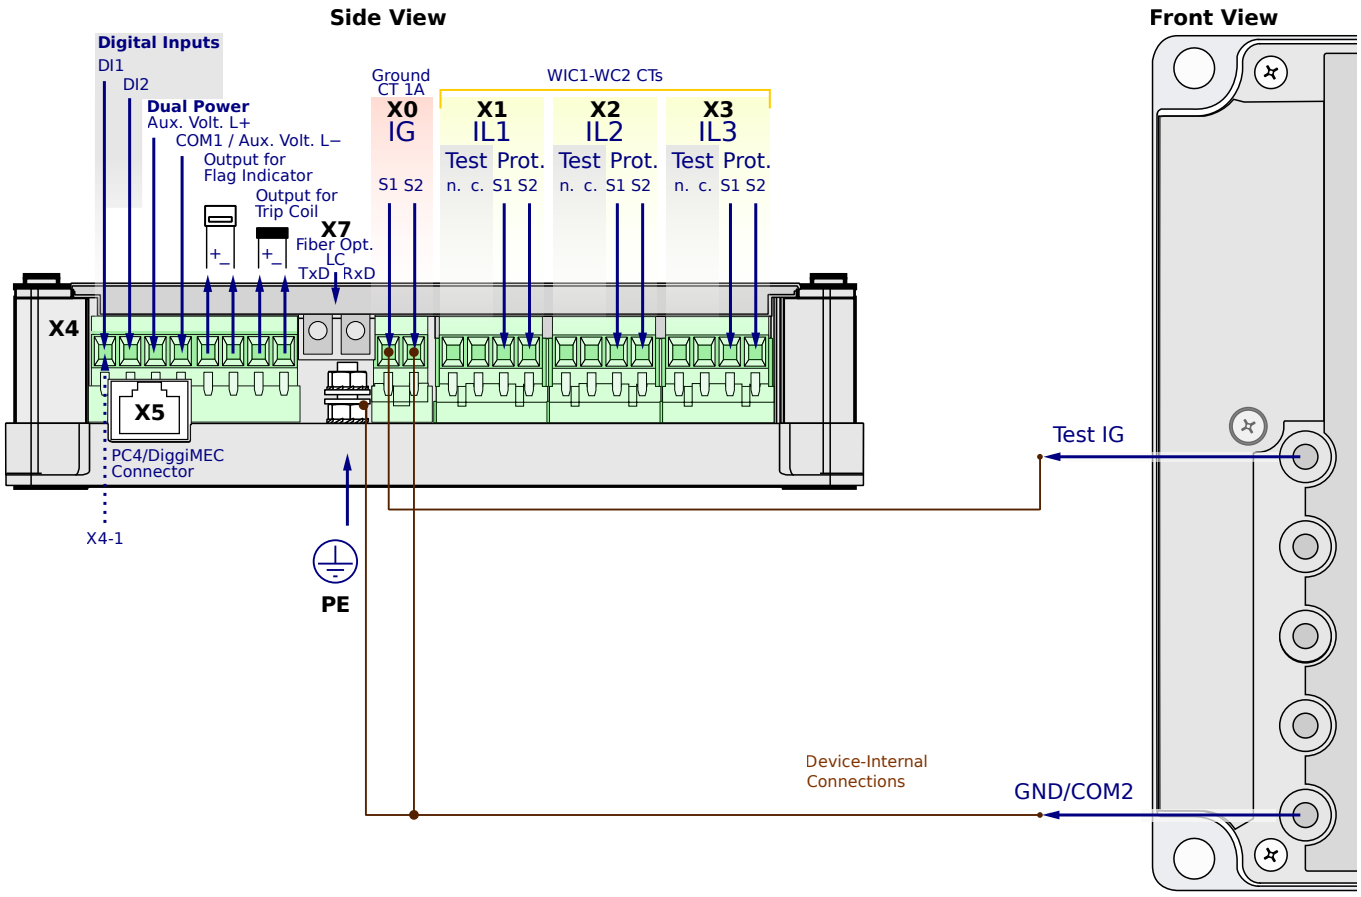


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1AA0

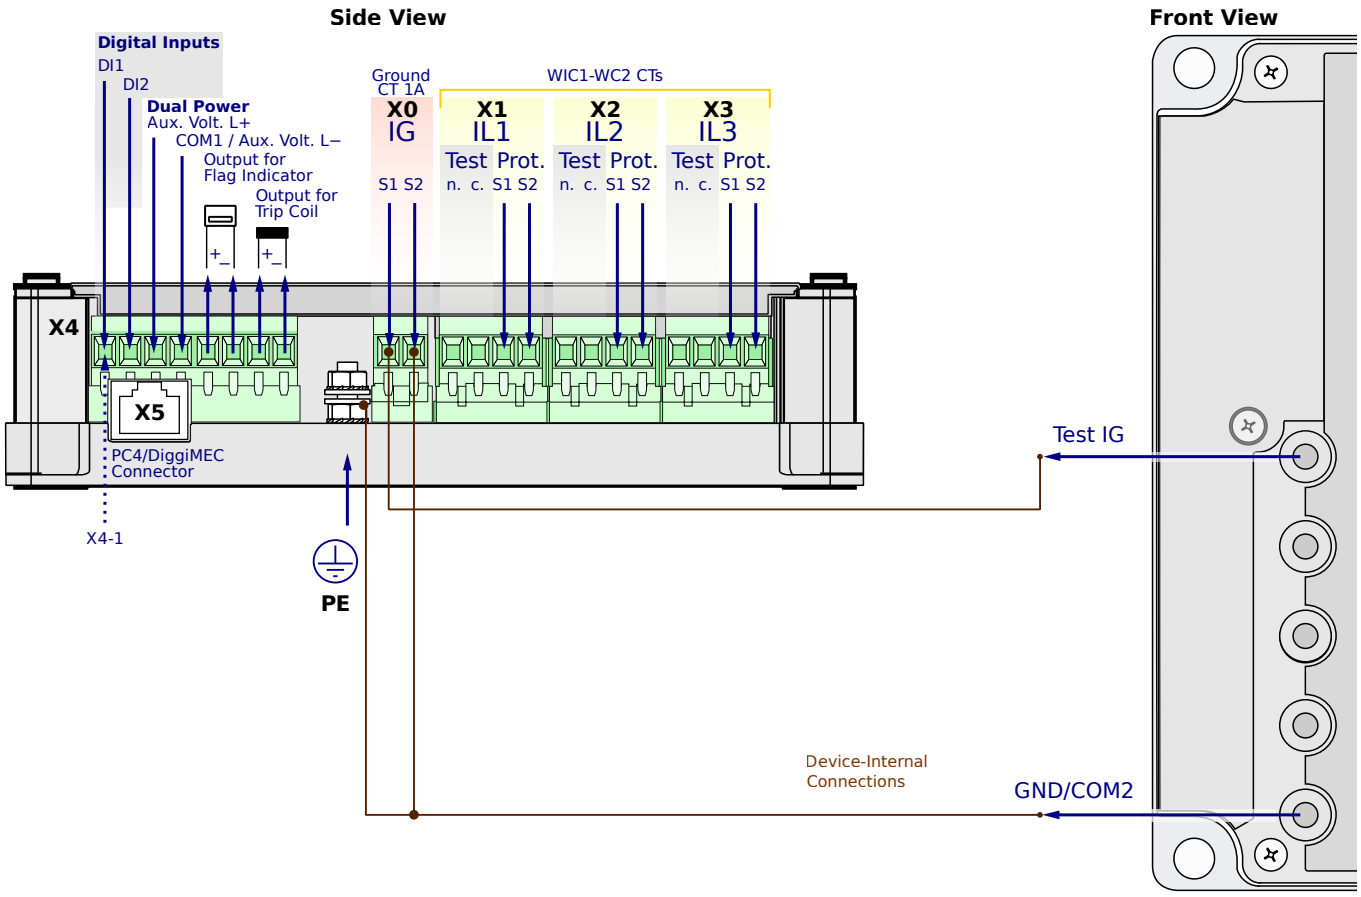


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1AAH

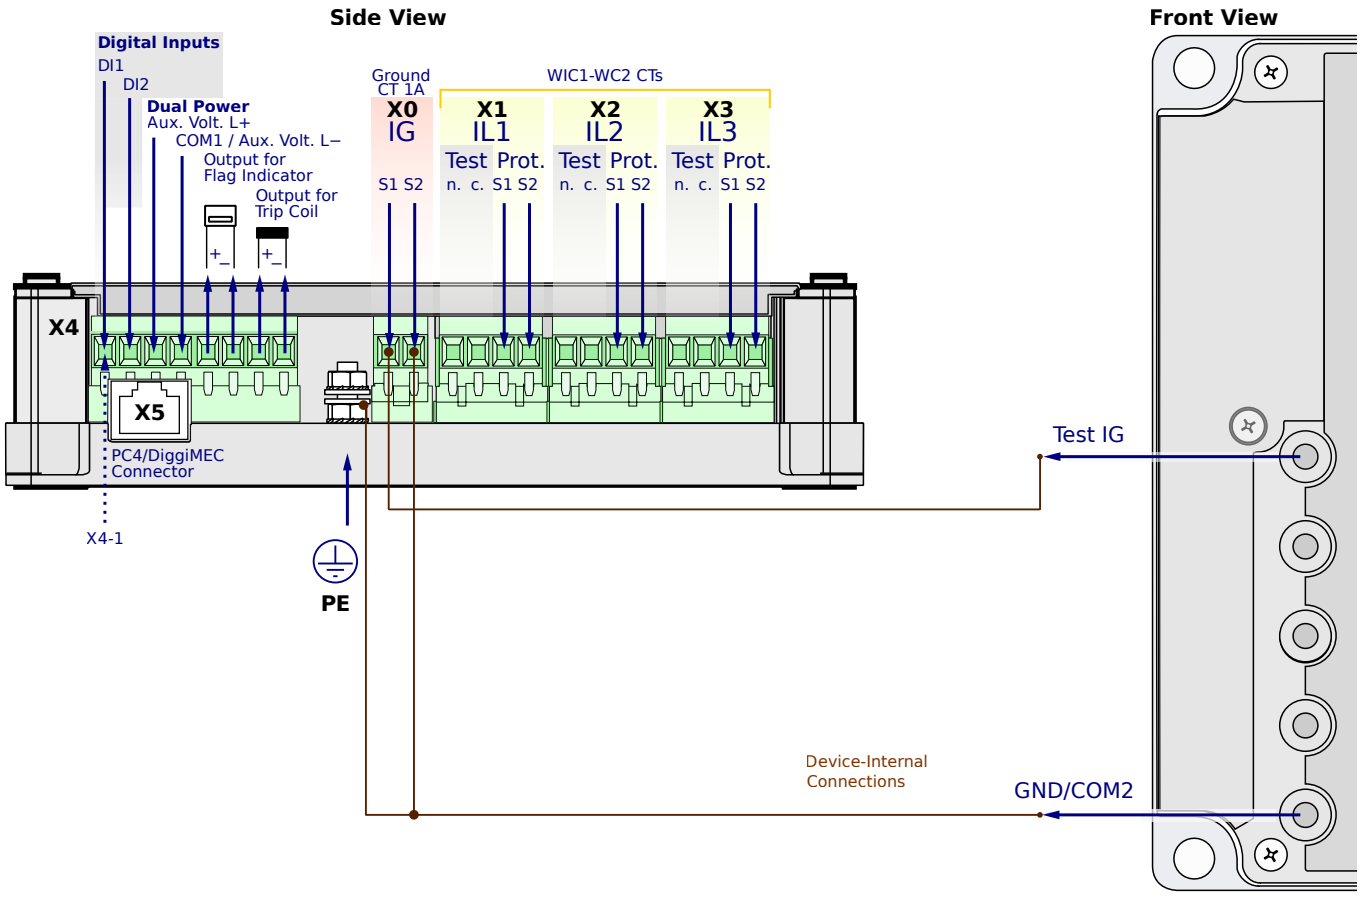


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1AB0

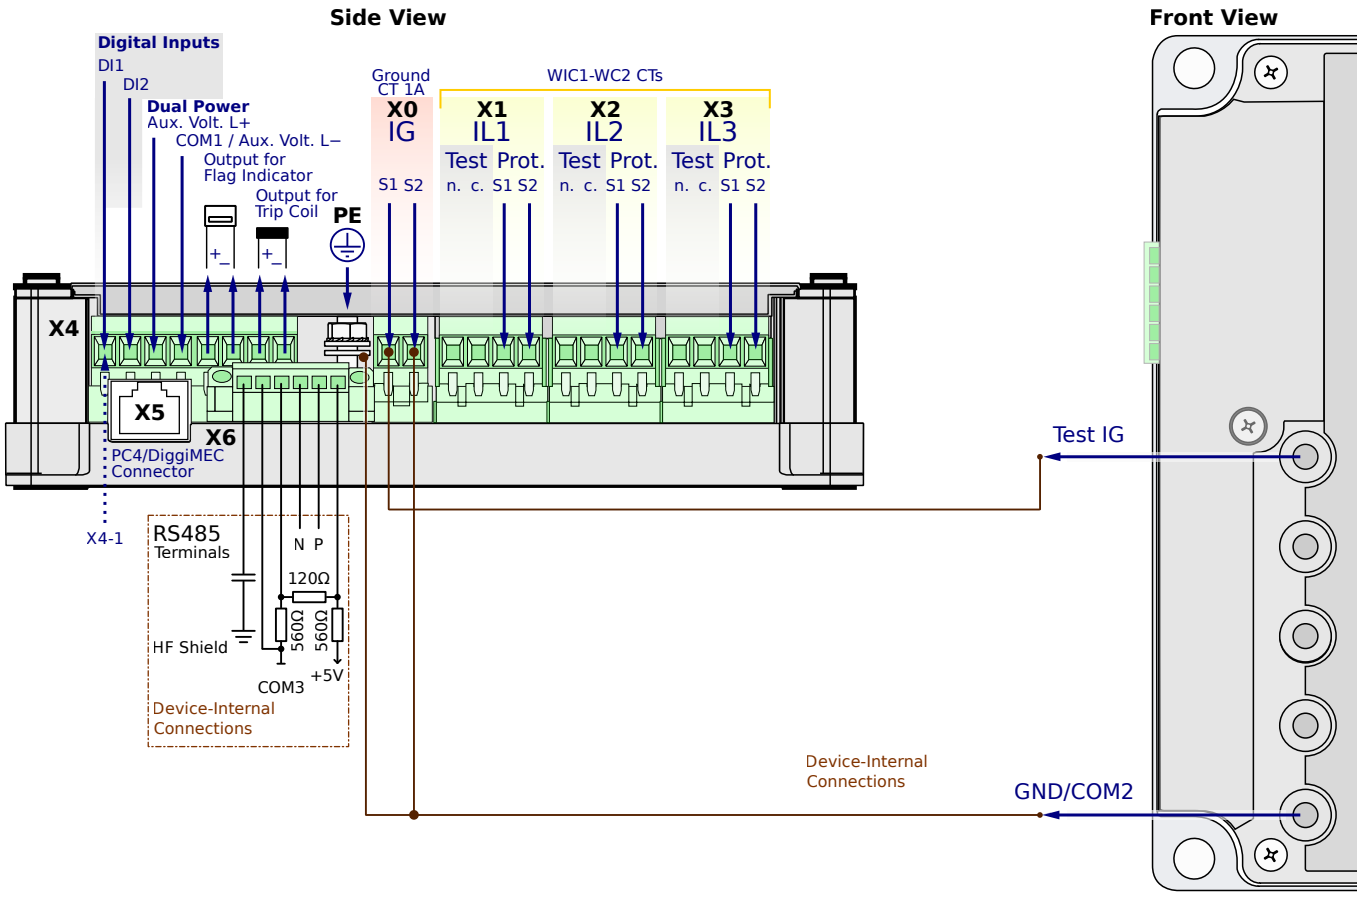


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1ABH

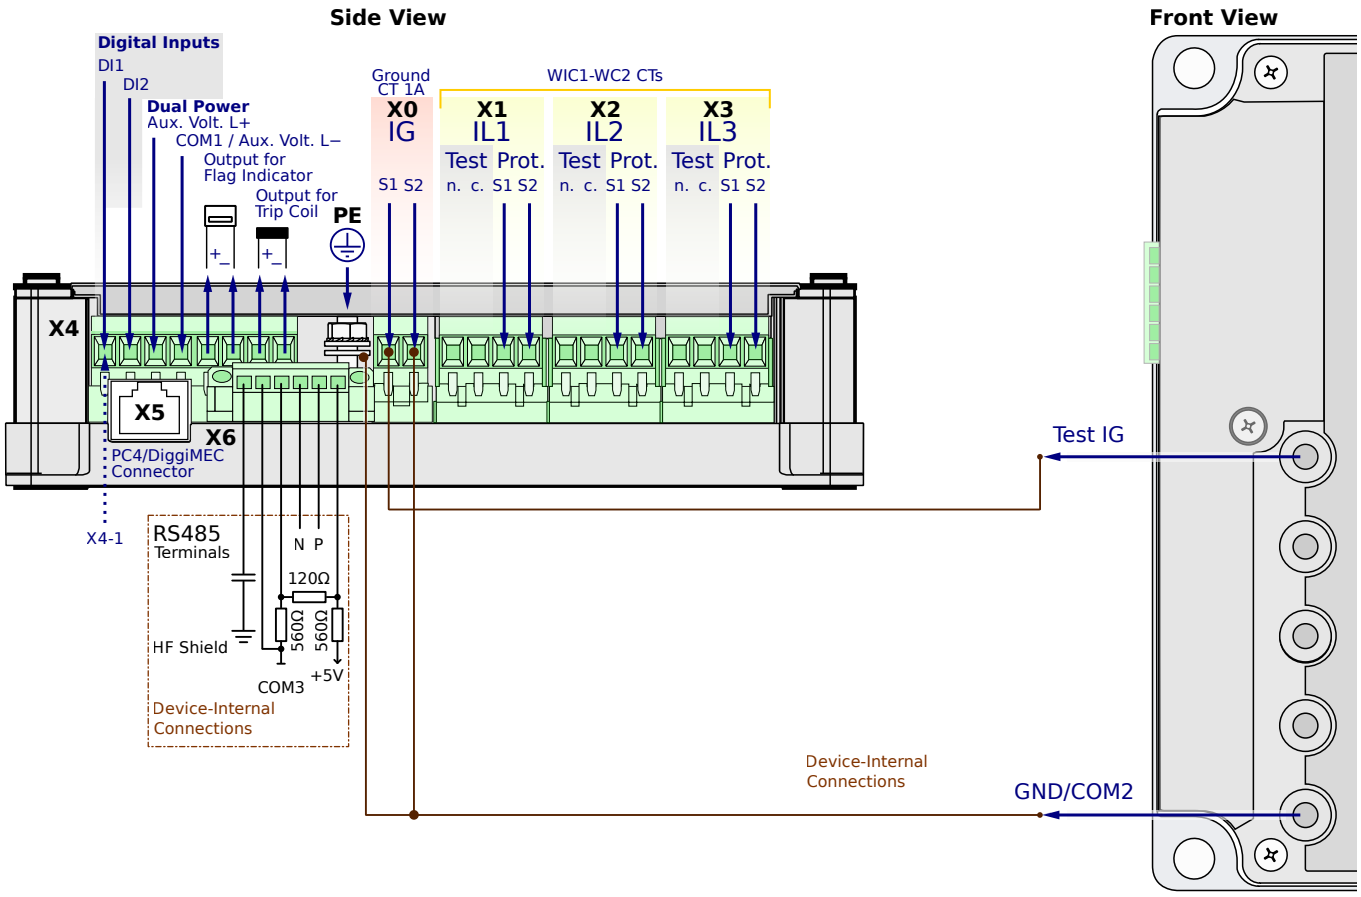


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1AC0

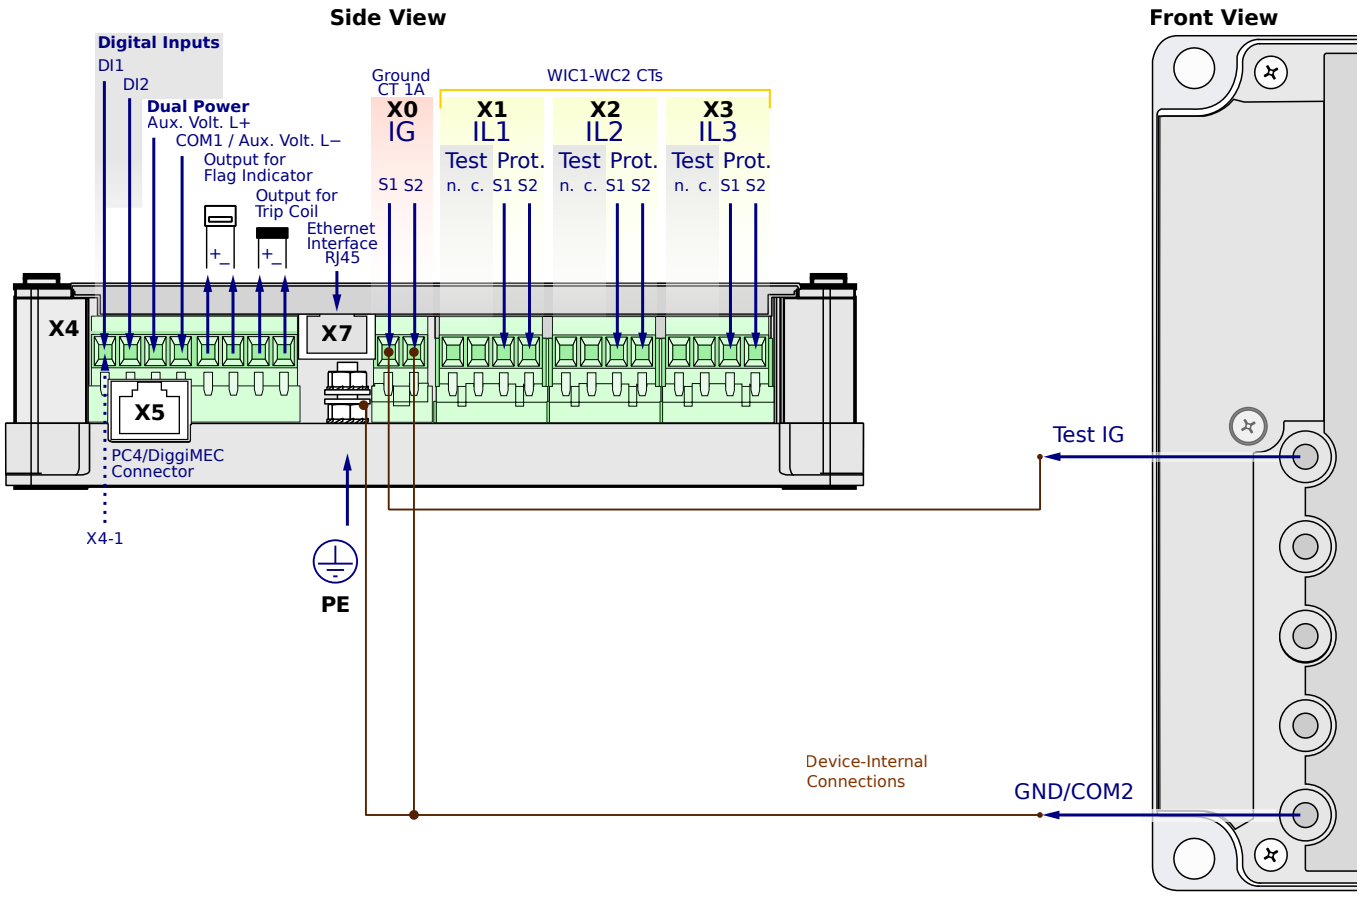


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1ACH

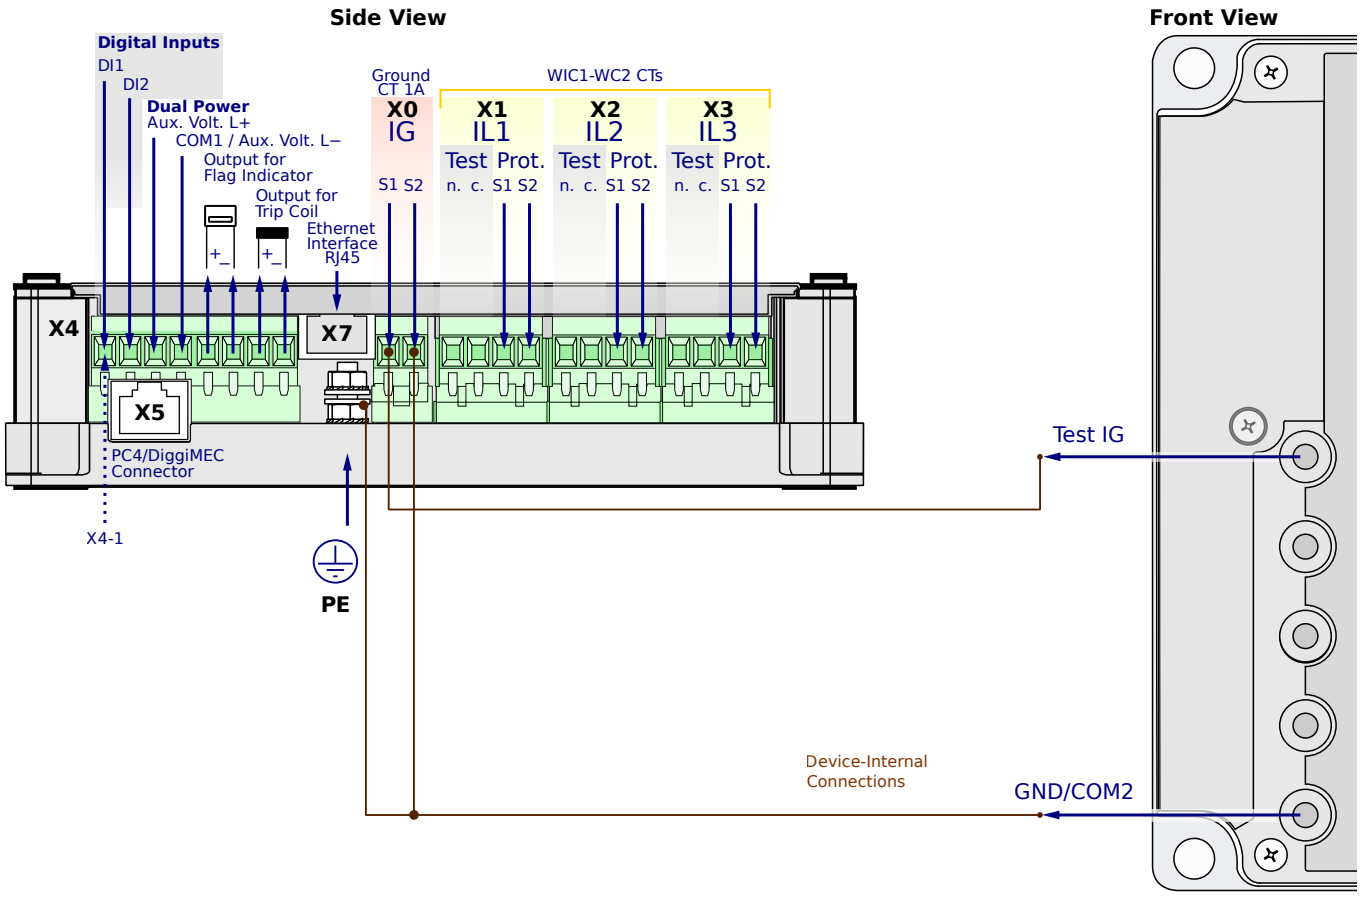


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1AL0

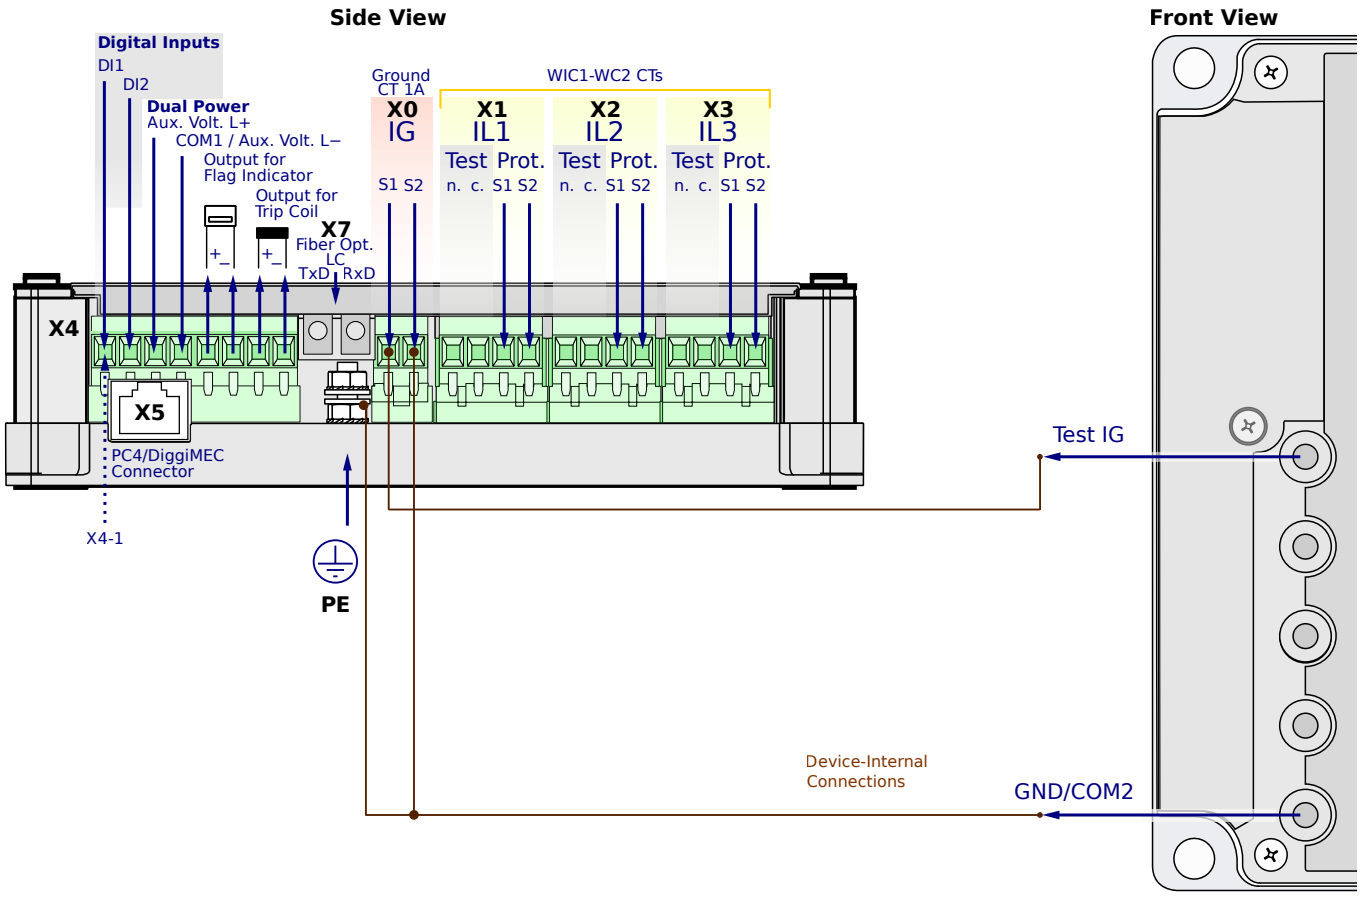


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1ALH

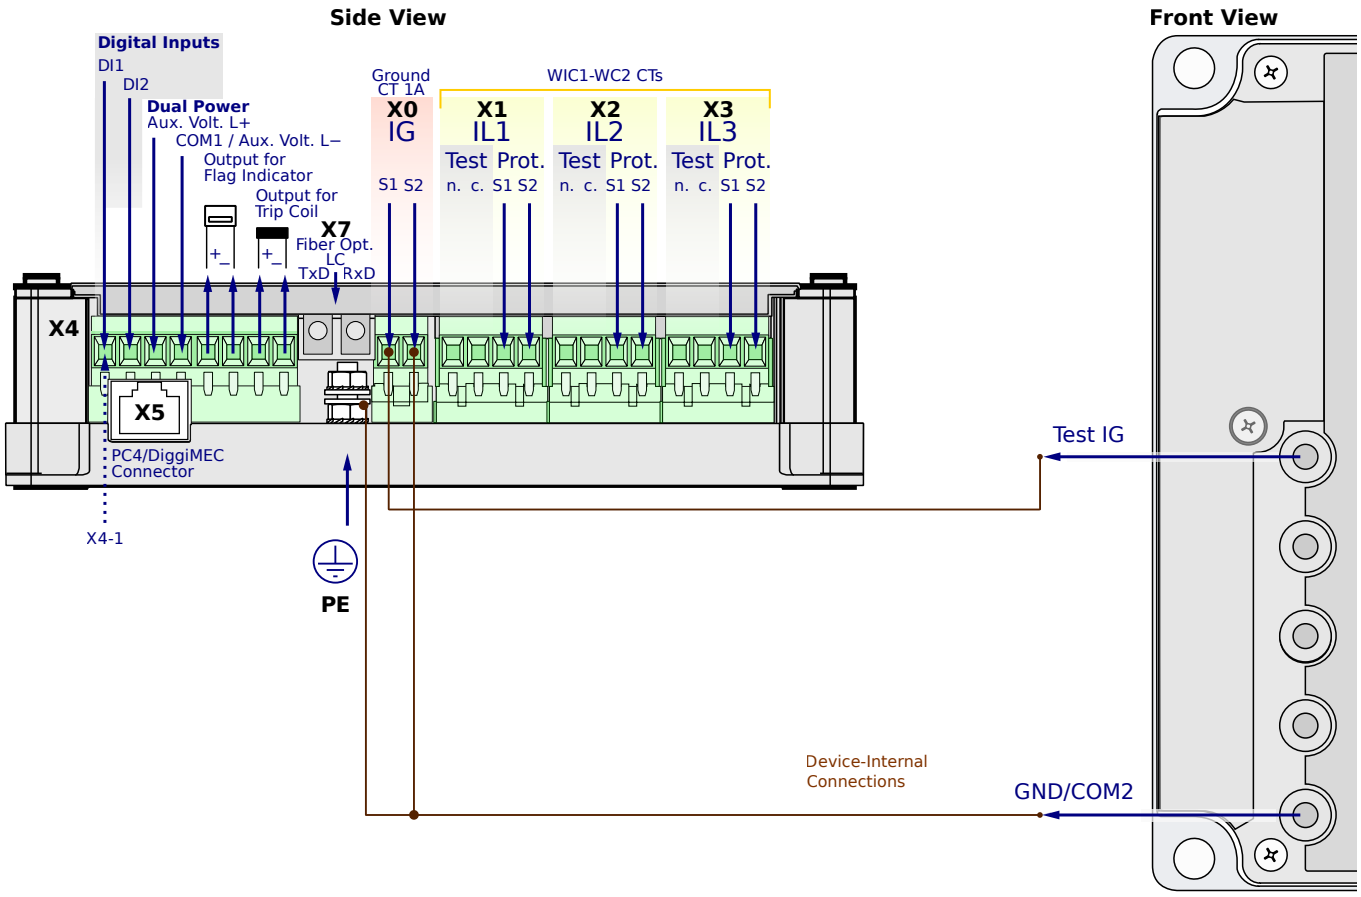


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1PA0

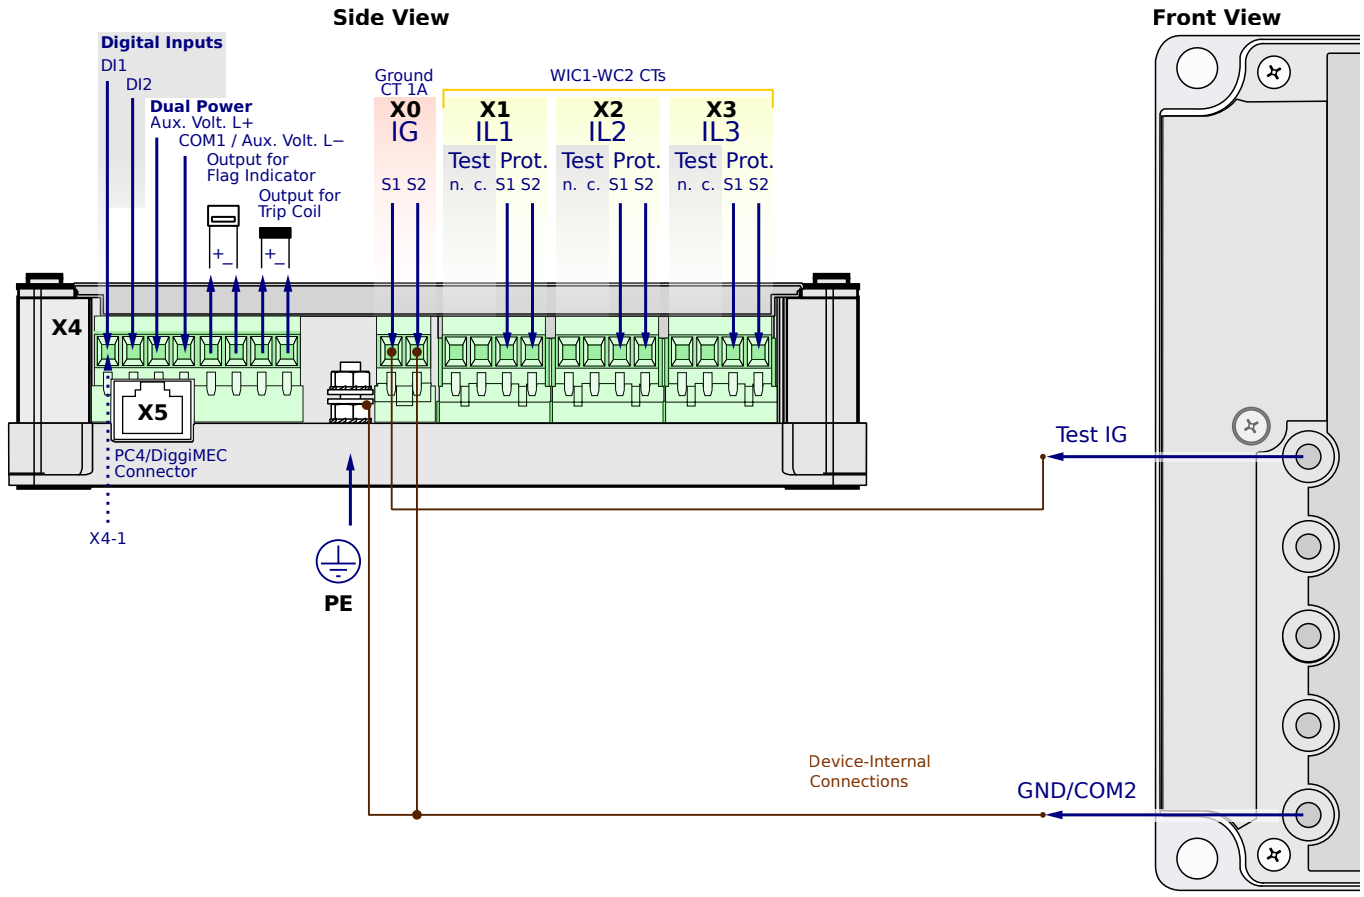


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1PAH

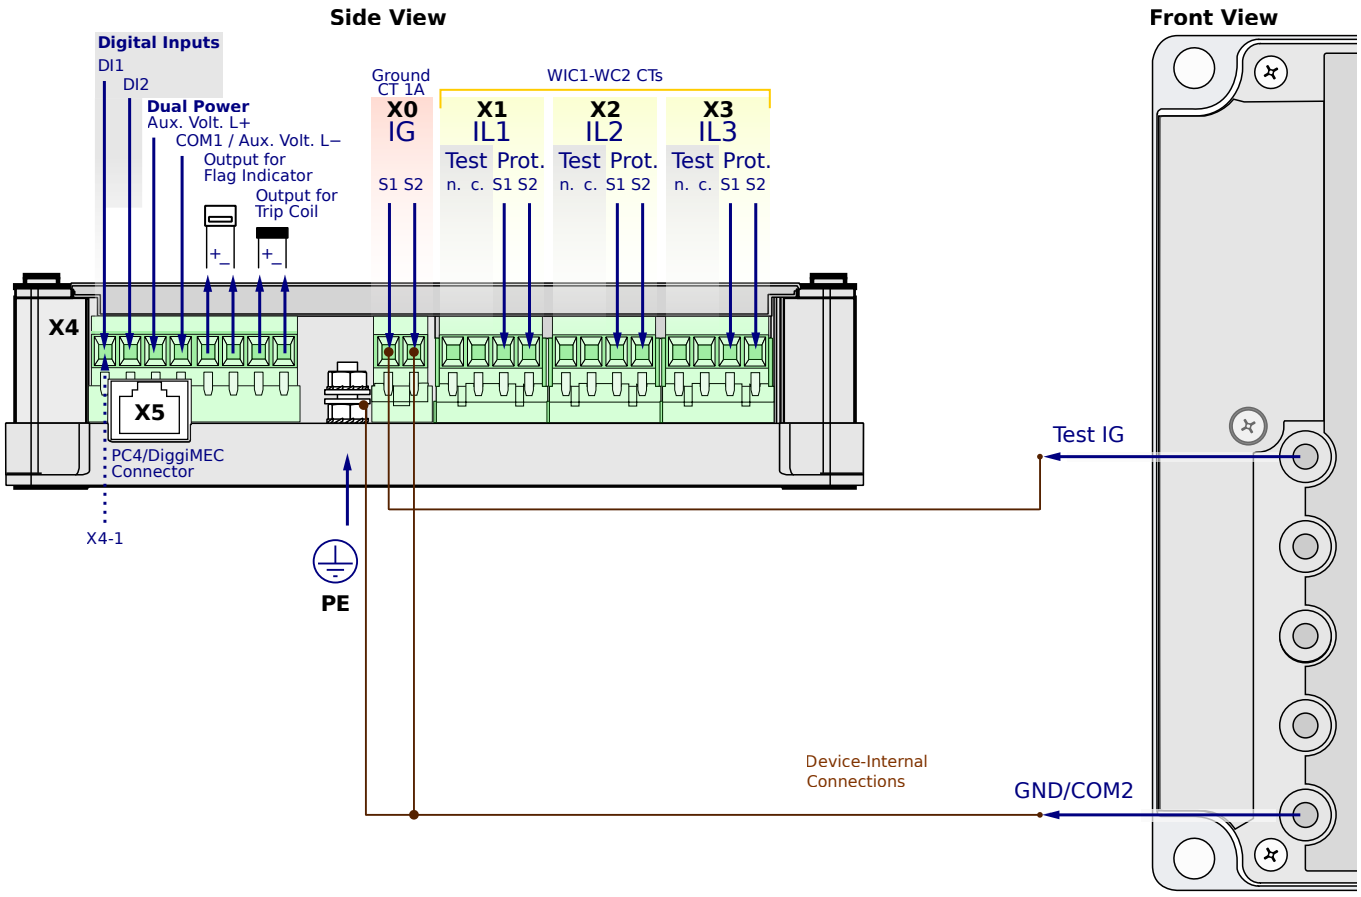


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD1PB0

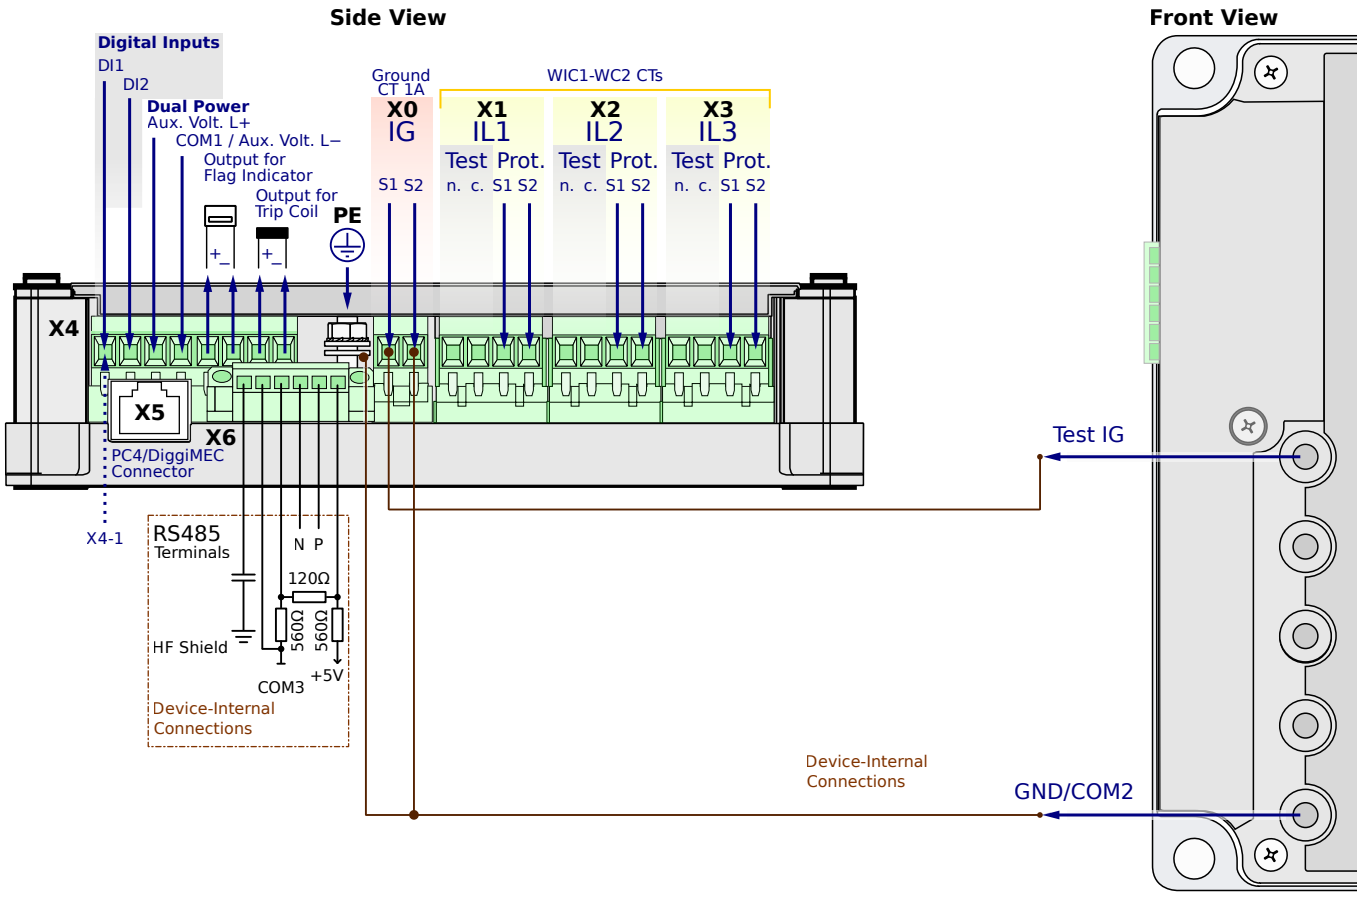


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1PBH

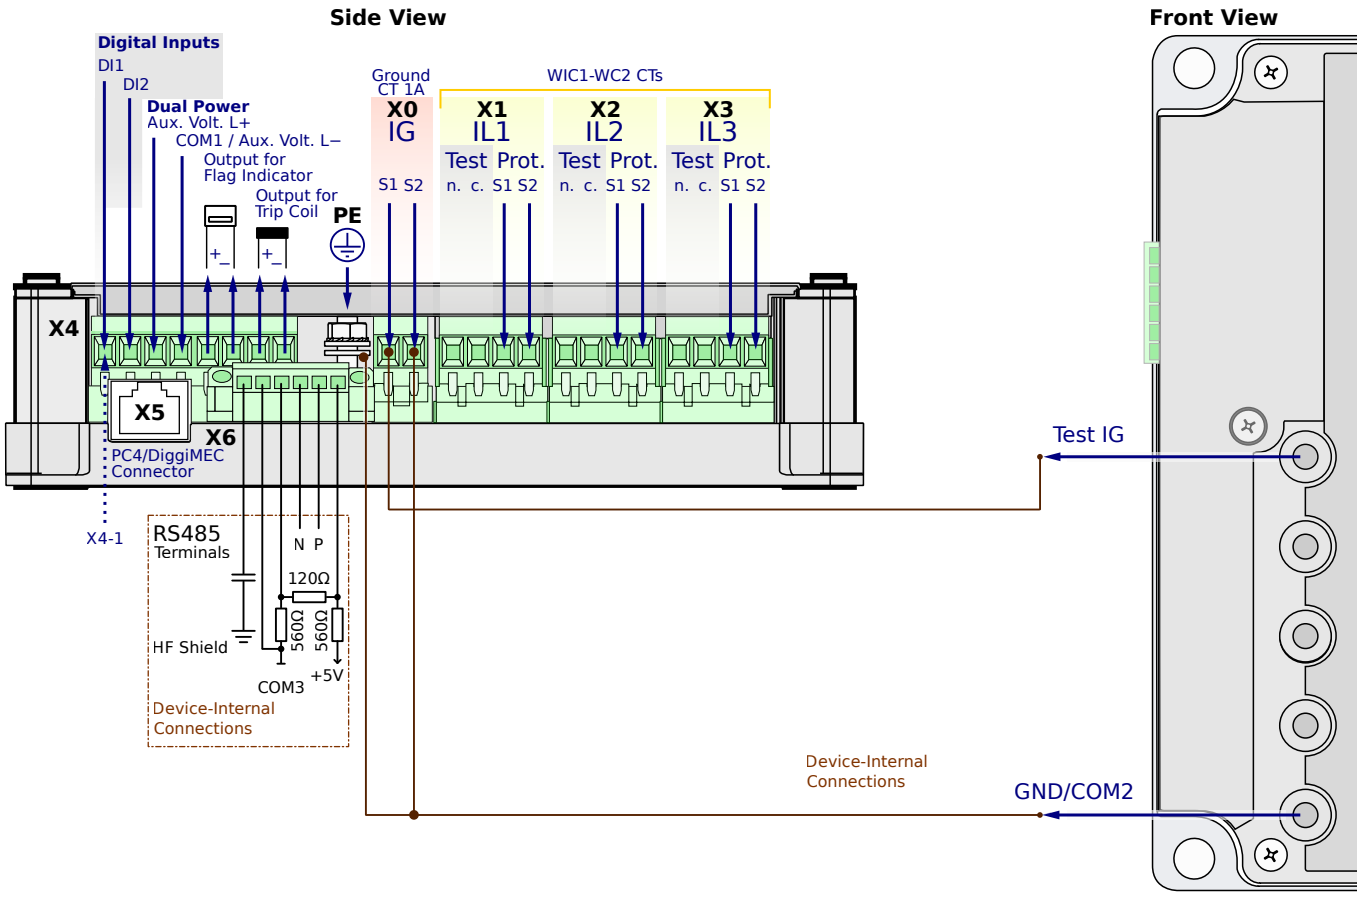


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD1PC0

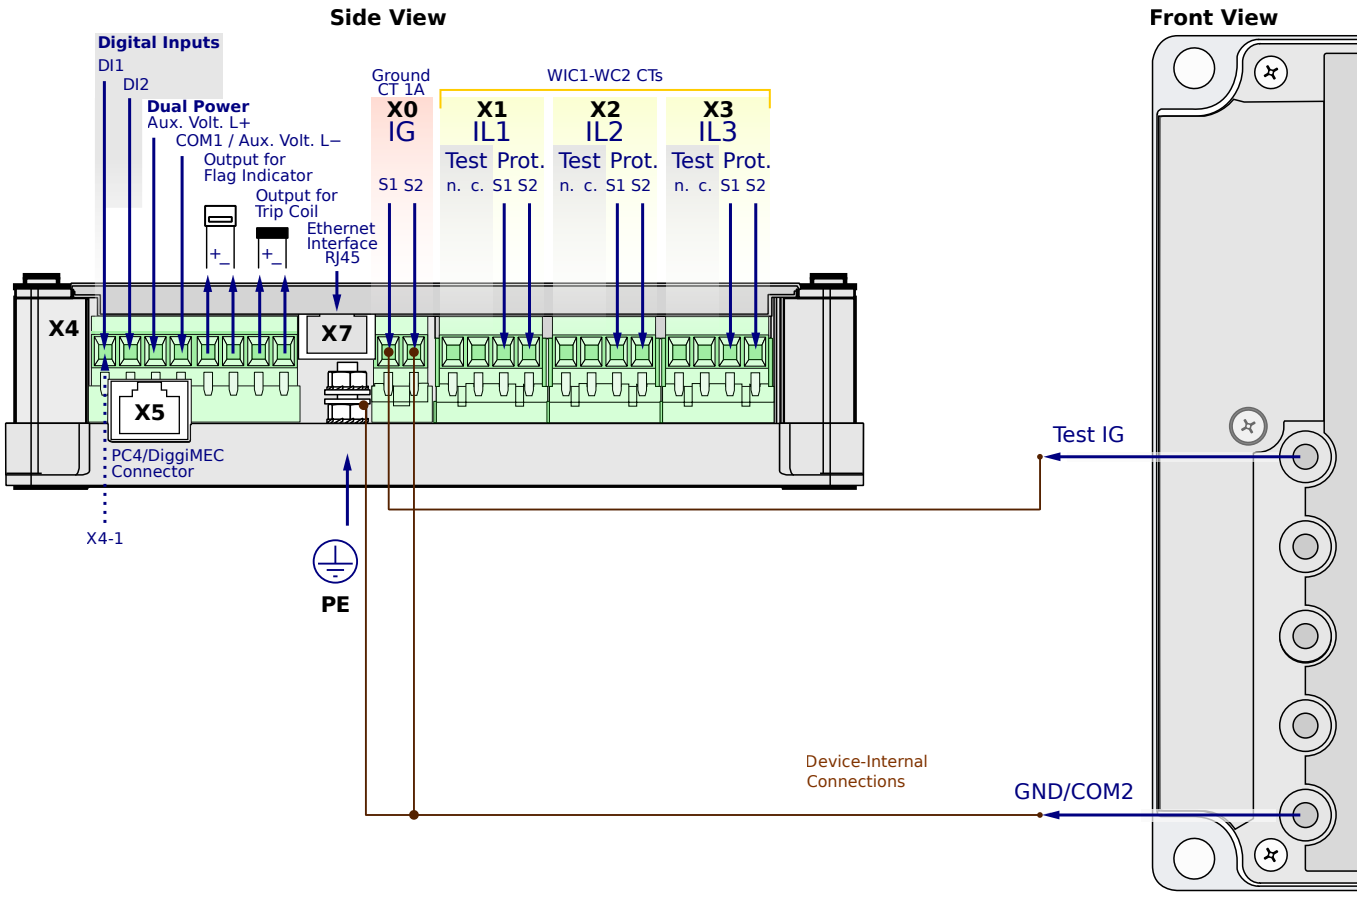


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1PCH

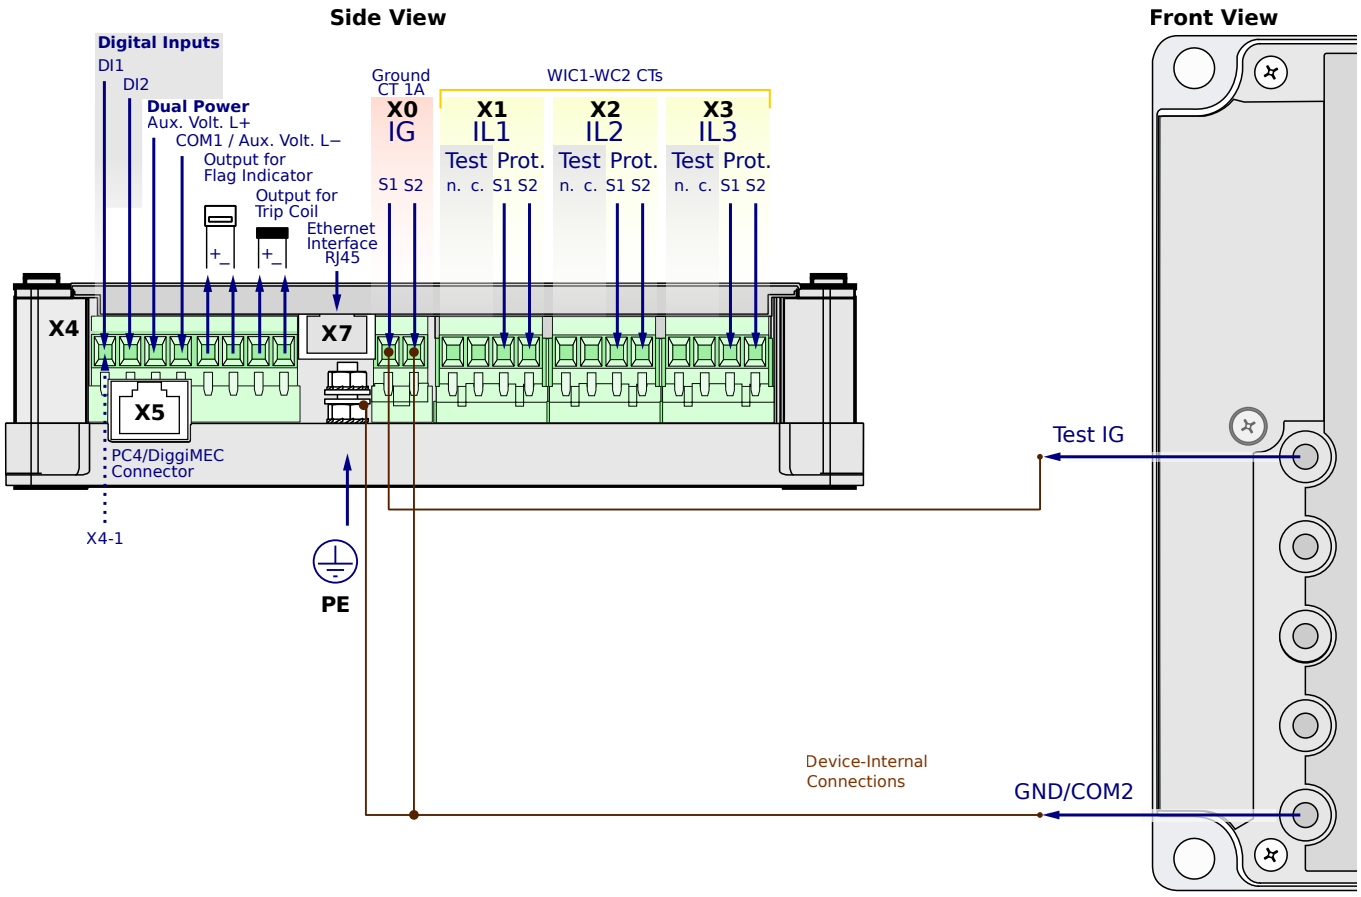


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates directly ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD1PL0

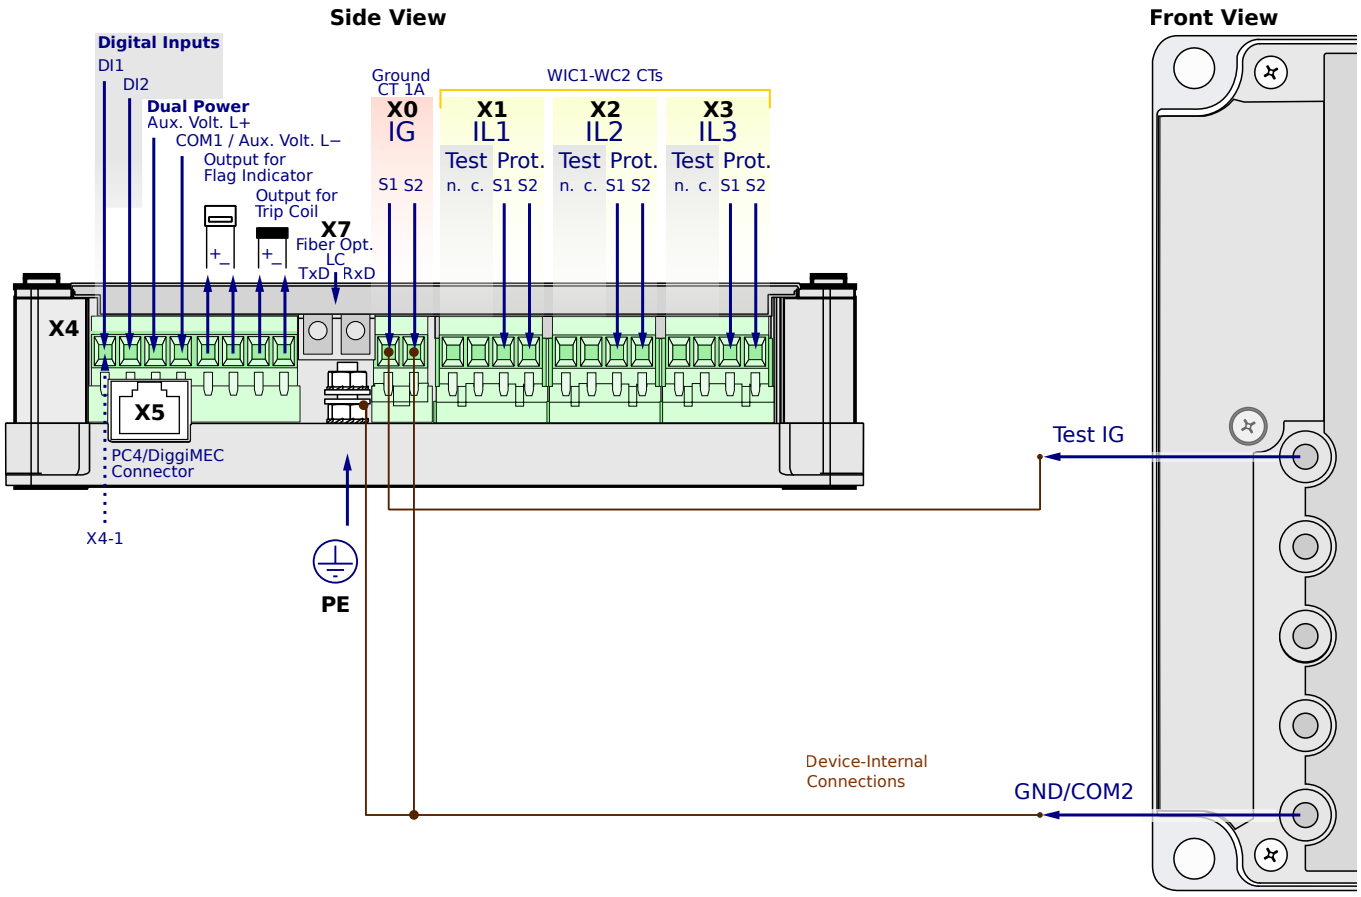


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD1PLH

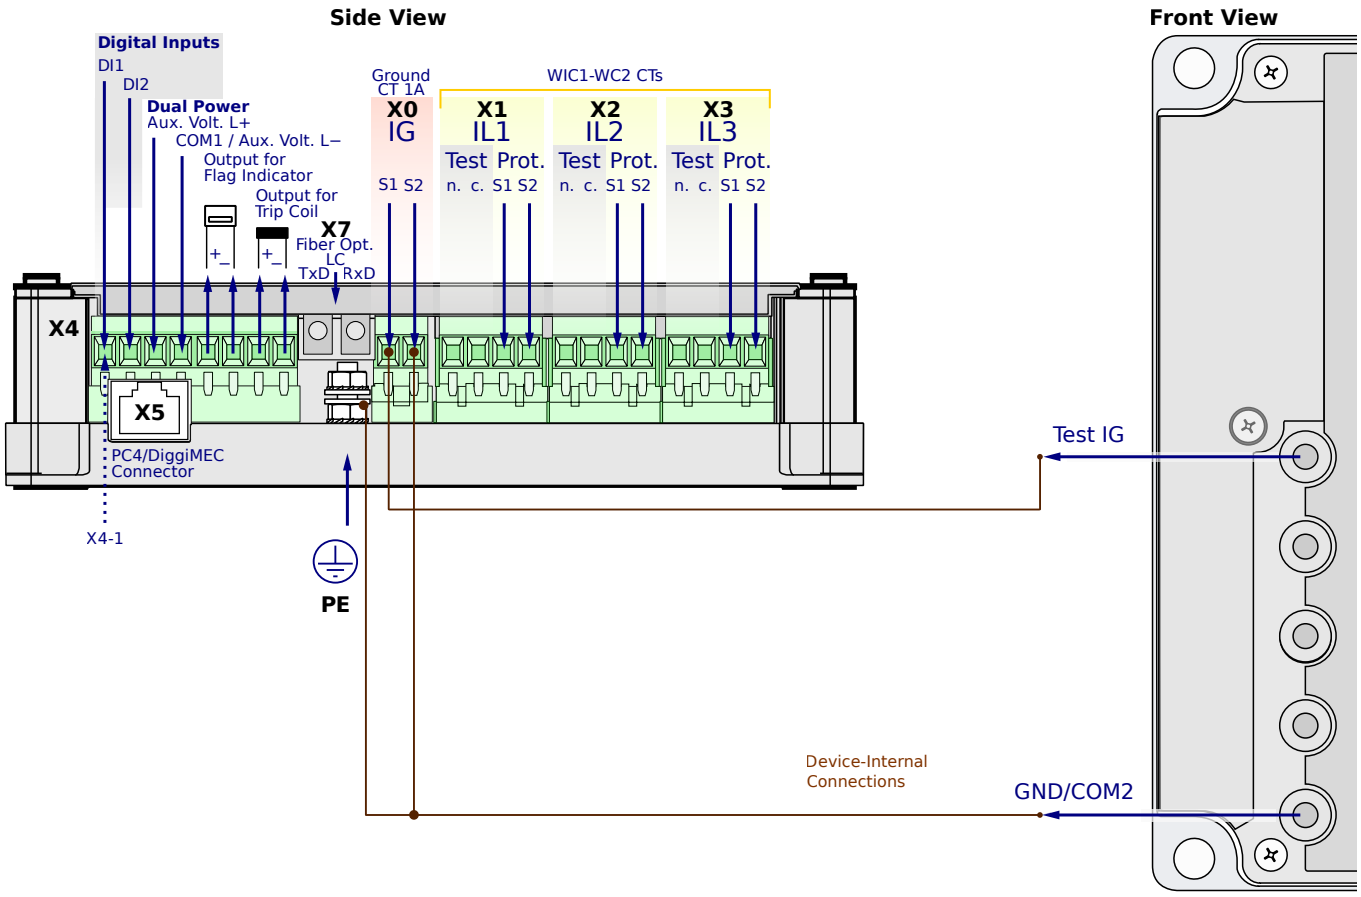


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates directly ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2SA0

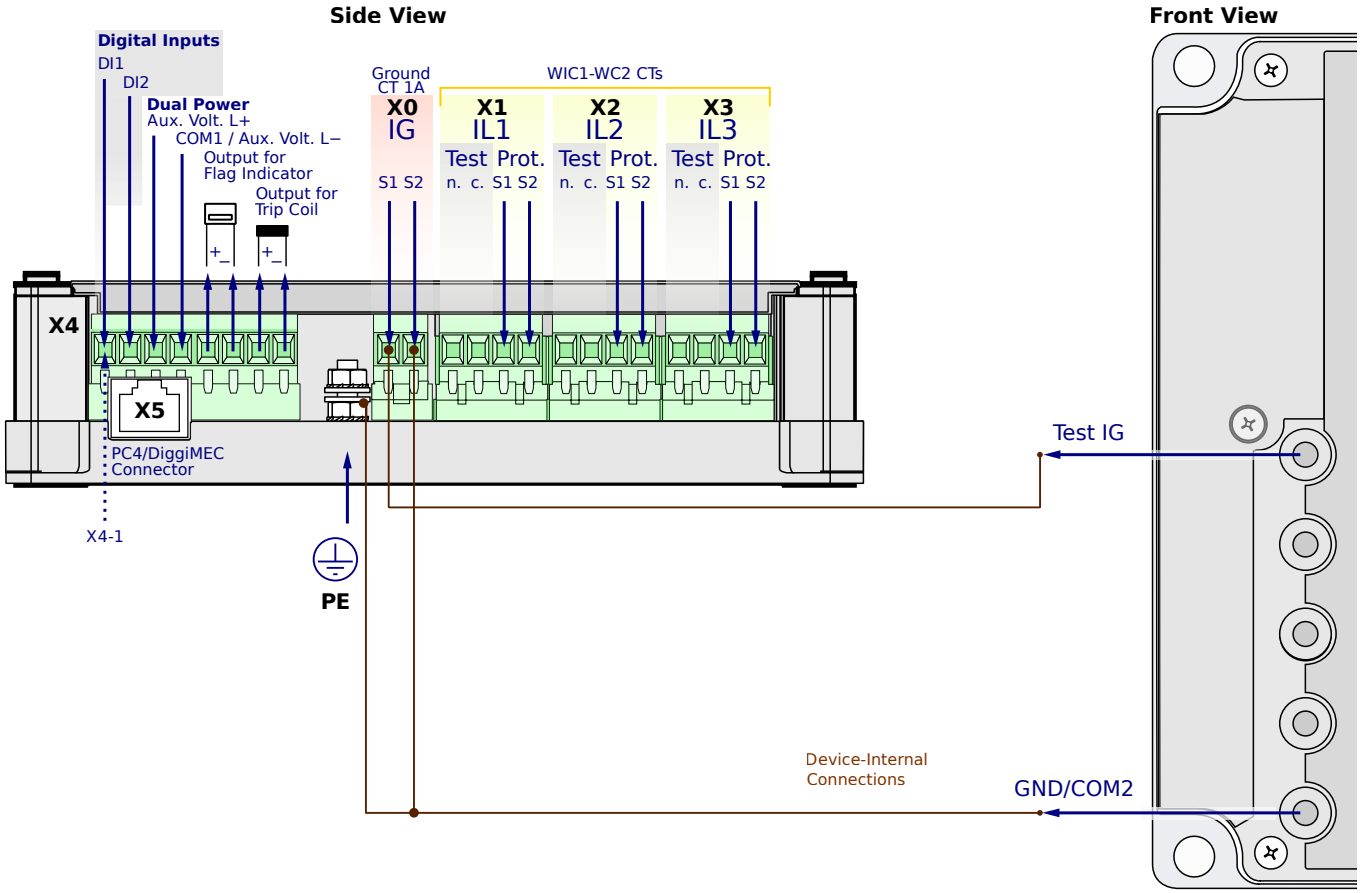


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2SAH

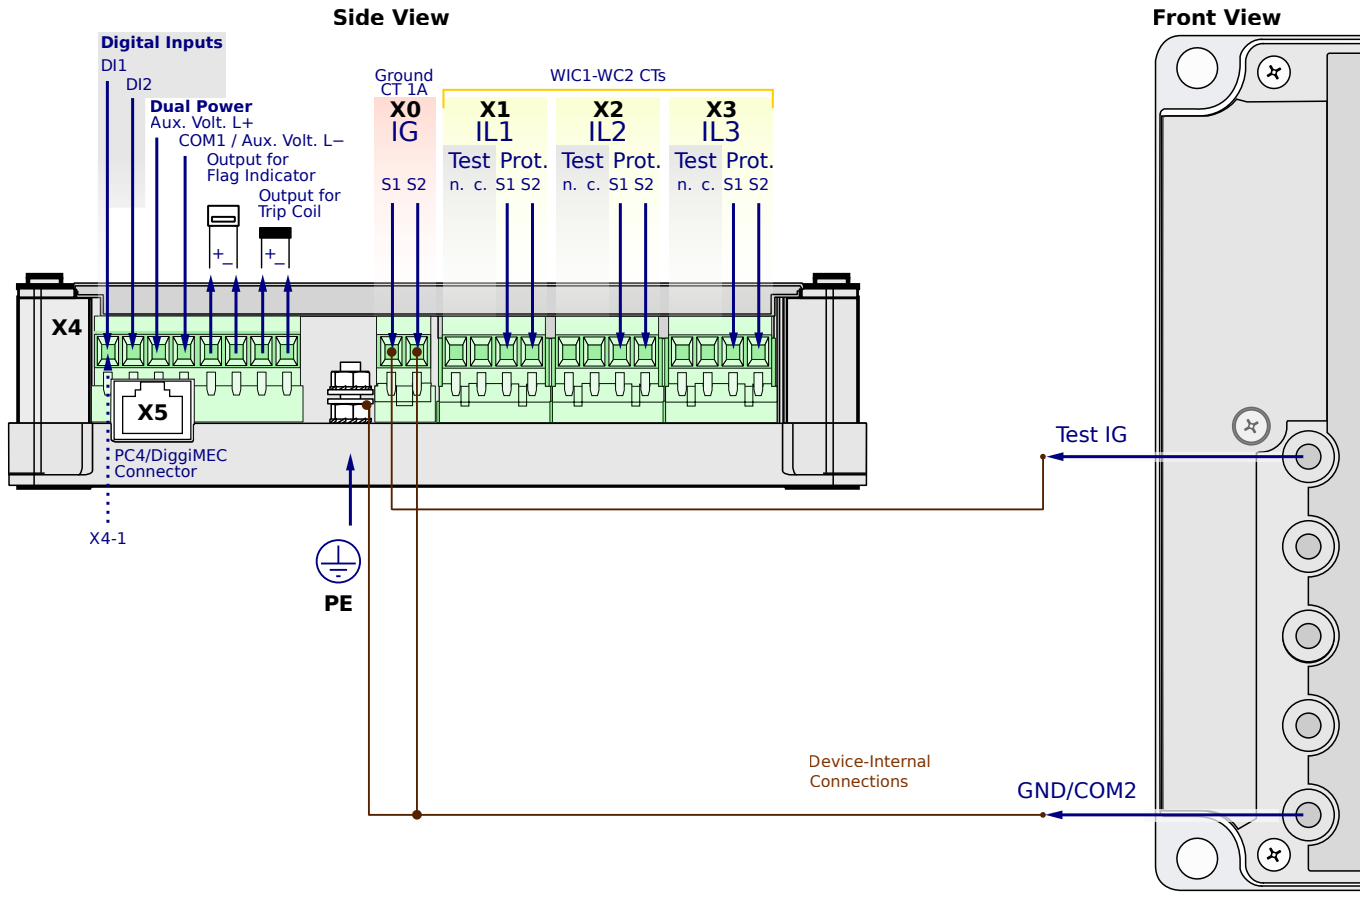


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2SB0

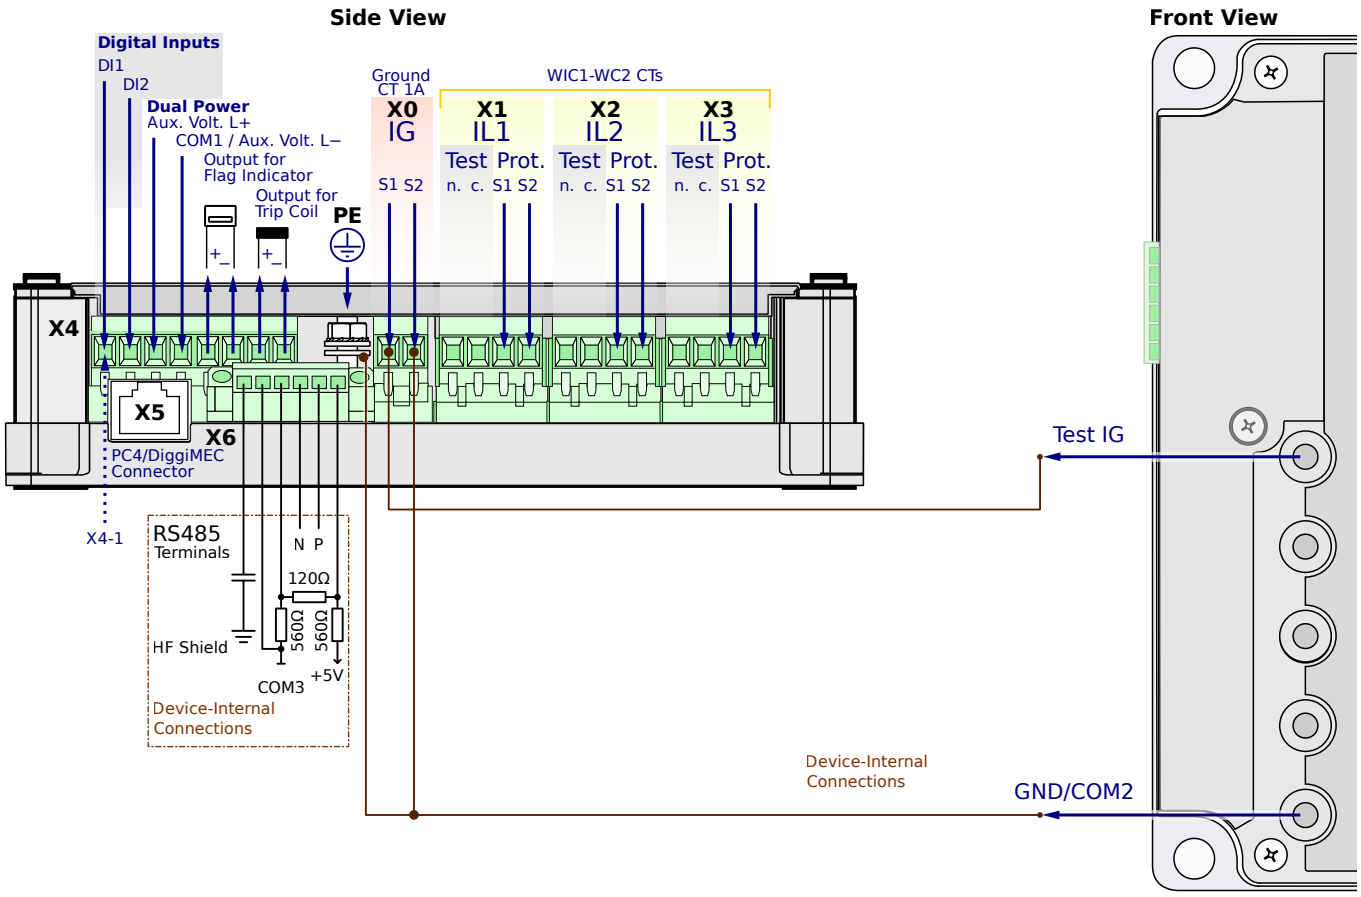


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2SBH

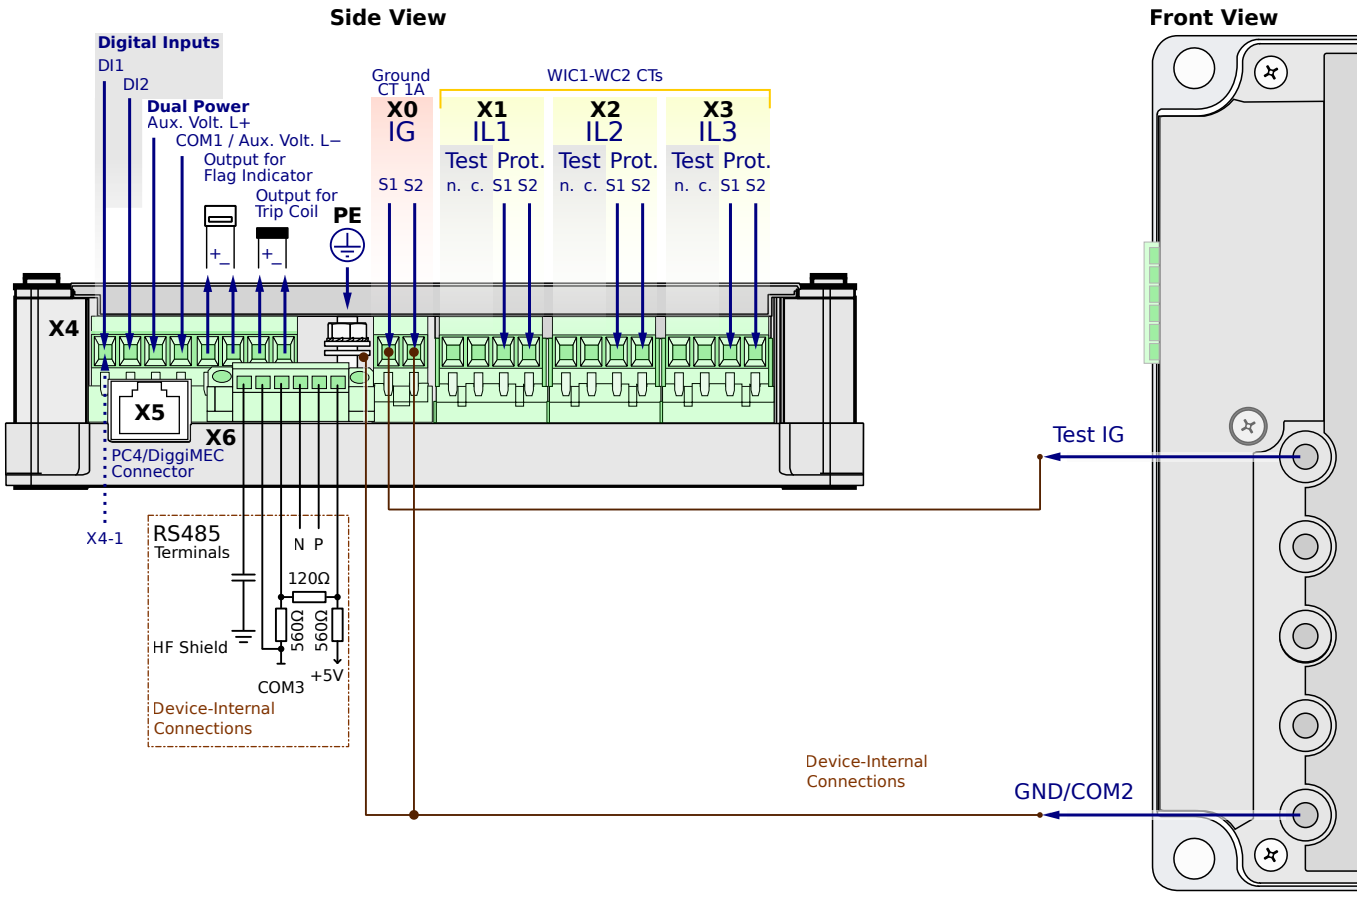


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2SC0

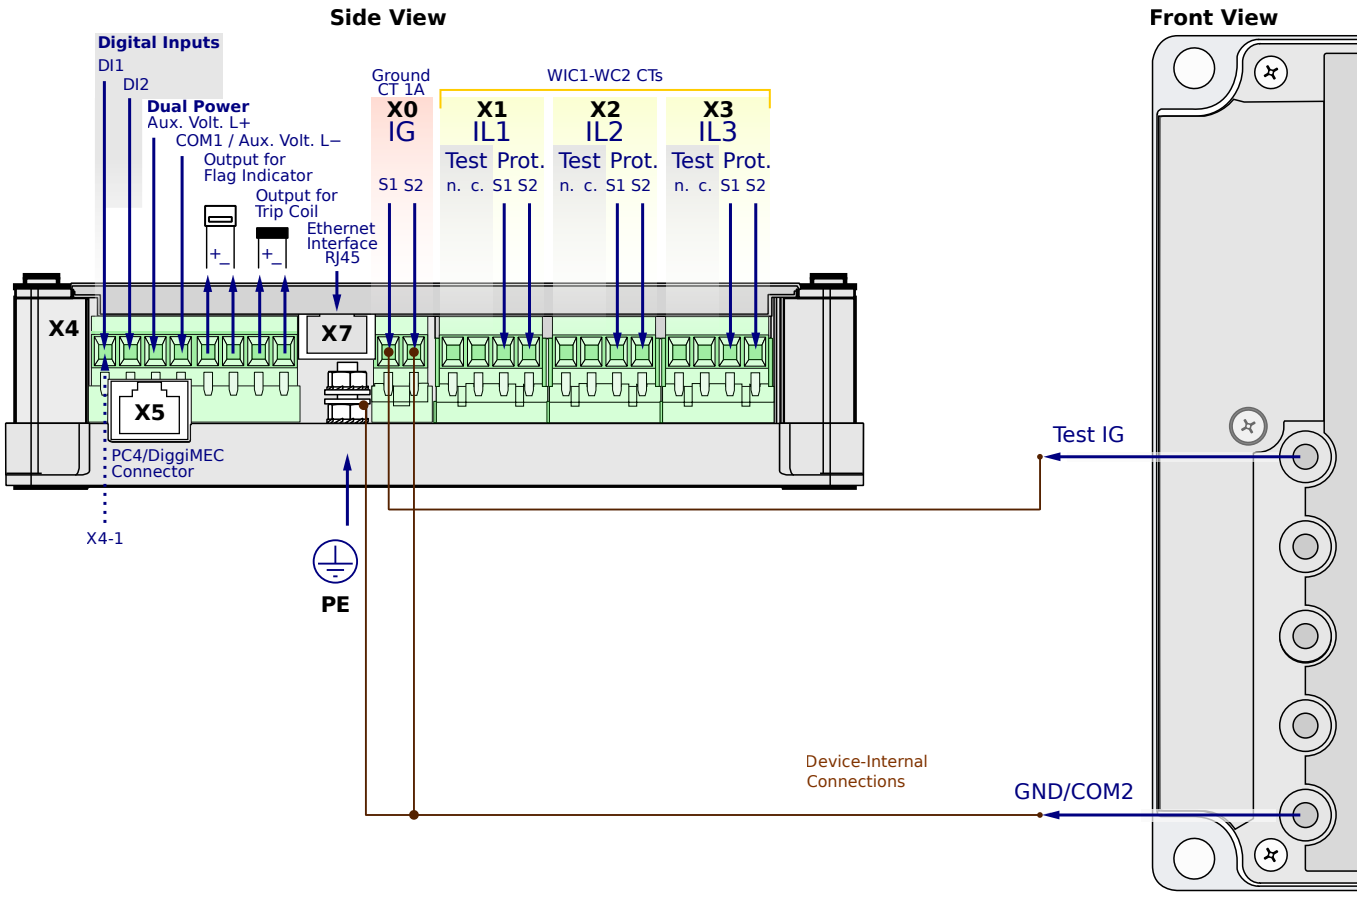


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2SCH

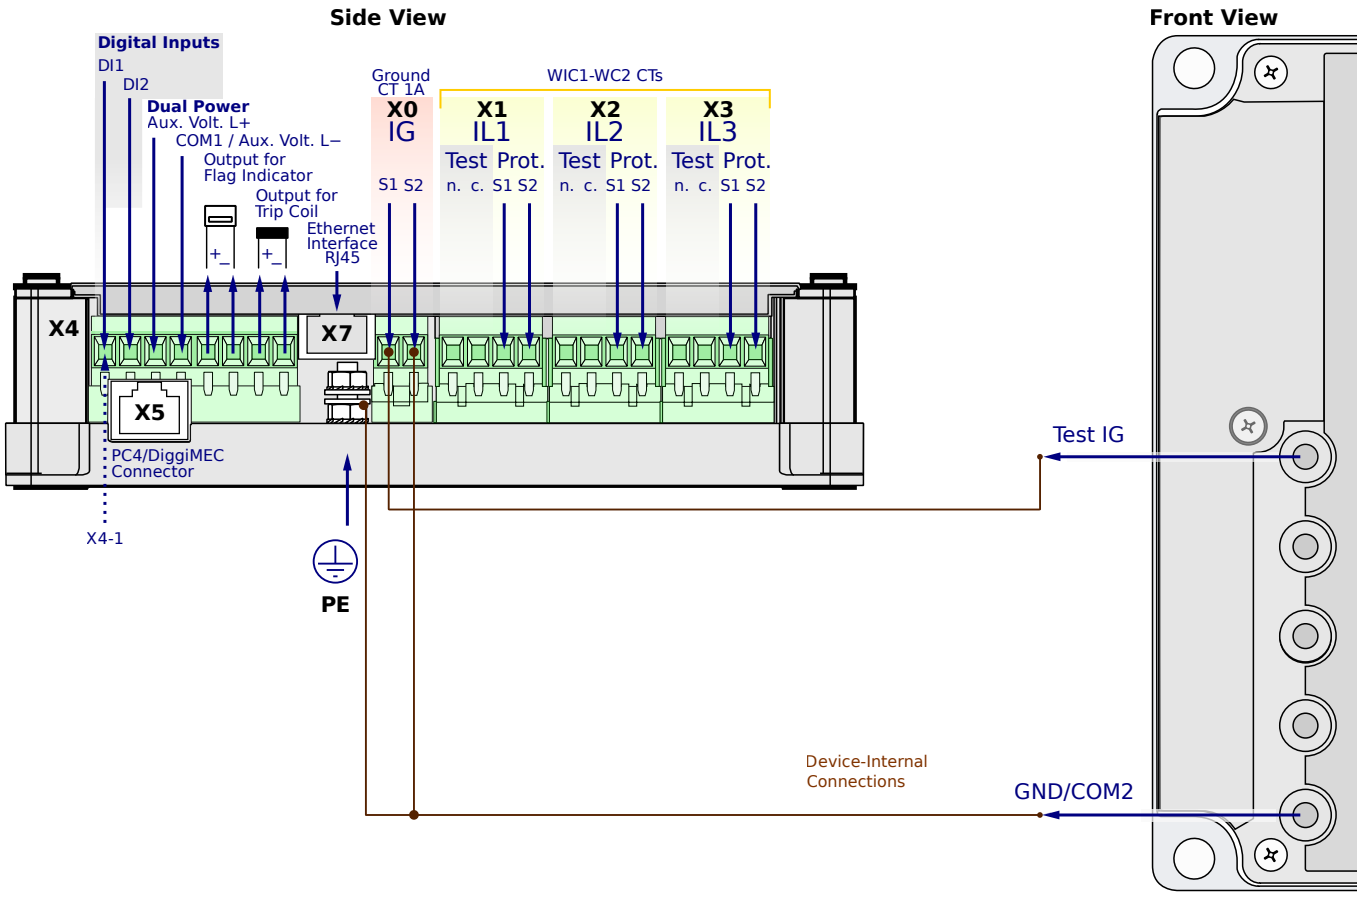


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2SL0

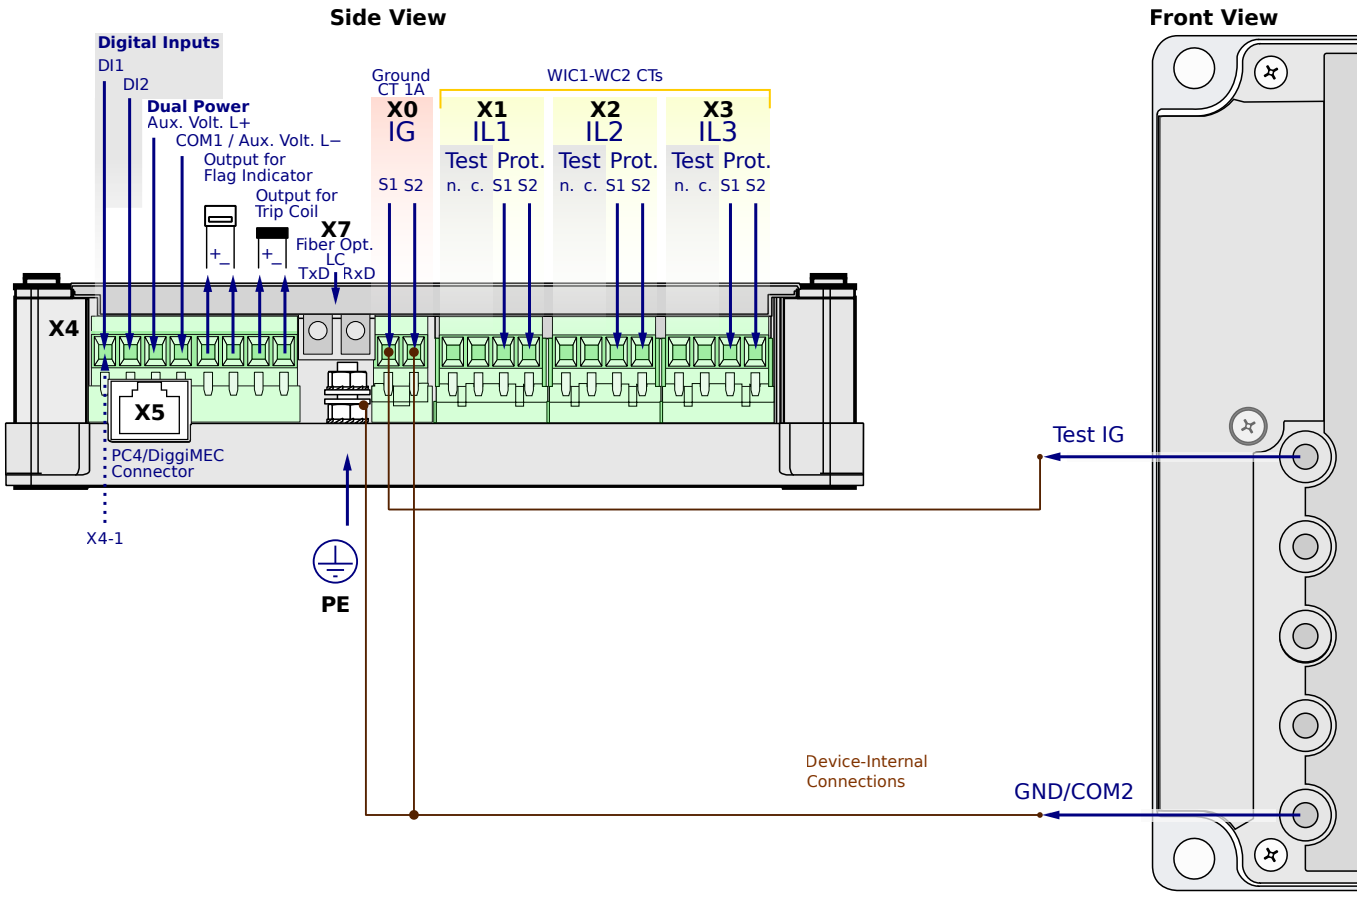


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2SLH

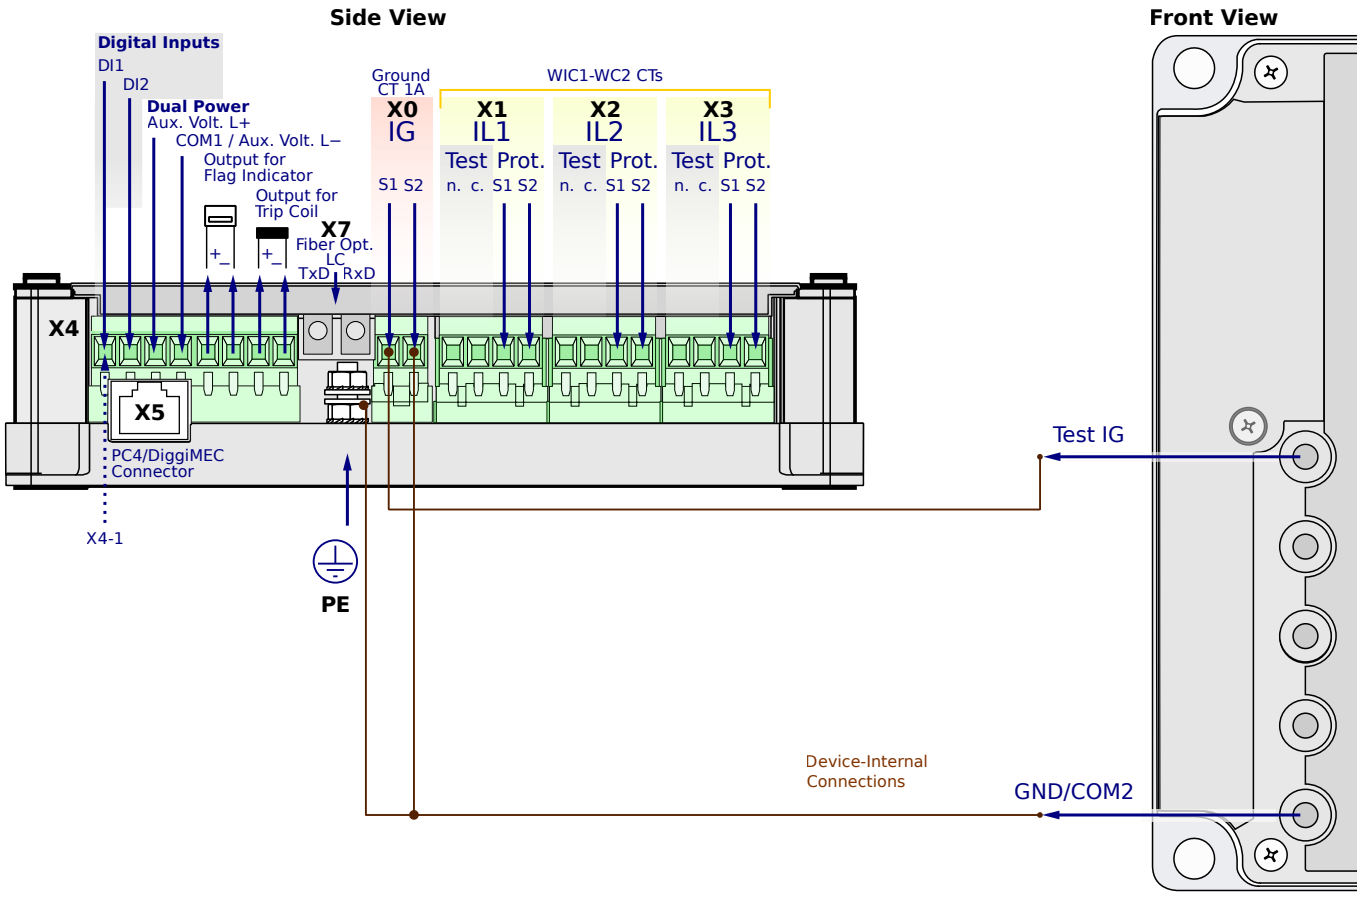


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "S" = ANSI 50, 50G/N, 51, 51G/N, inrush, 50BF, 74TC
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2AA0

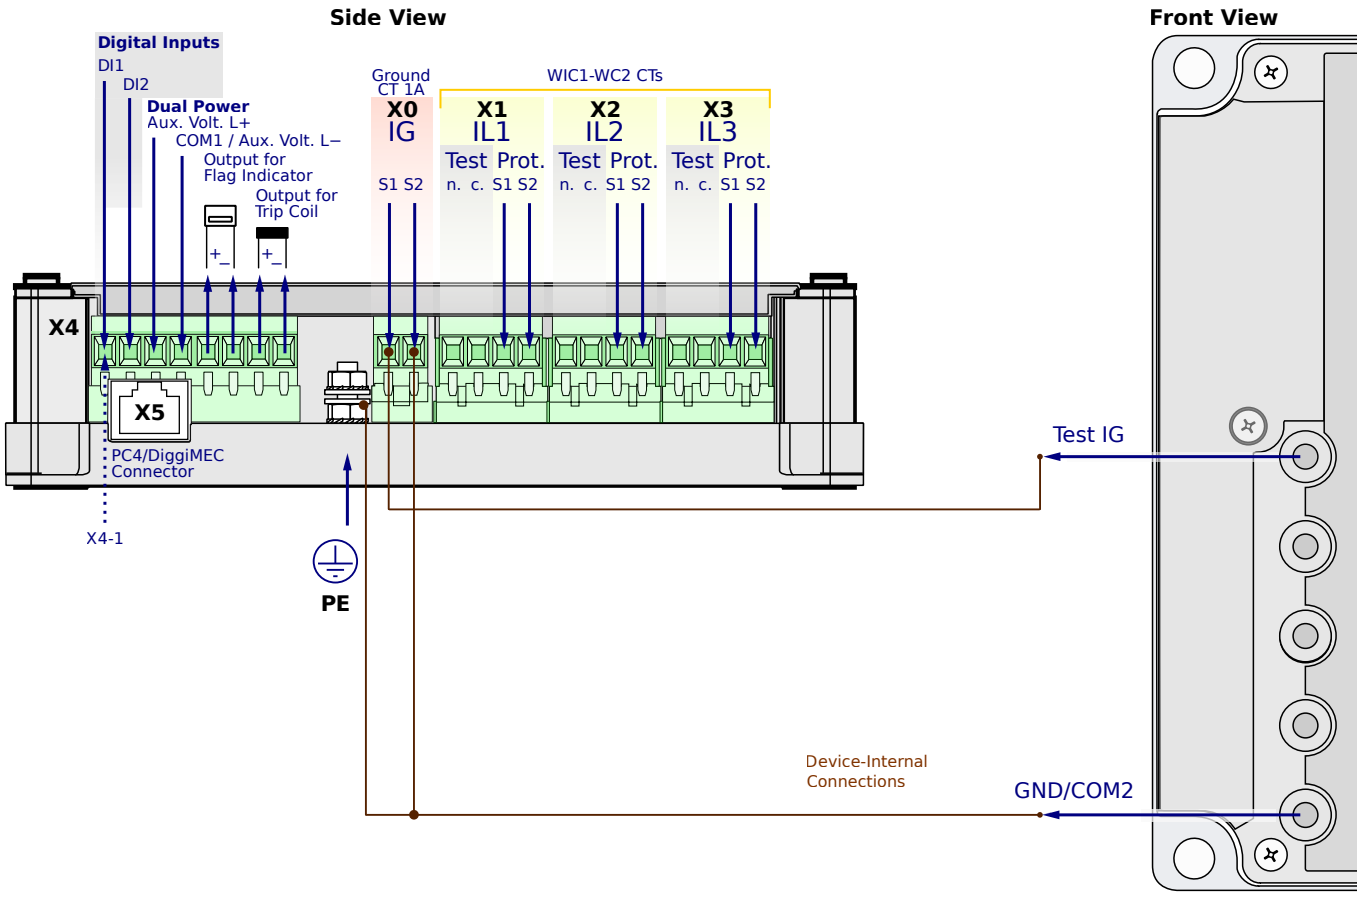


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2AAH

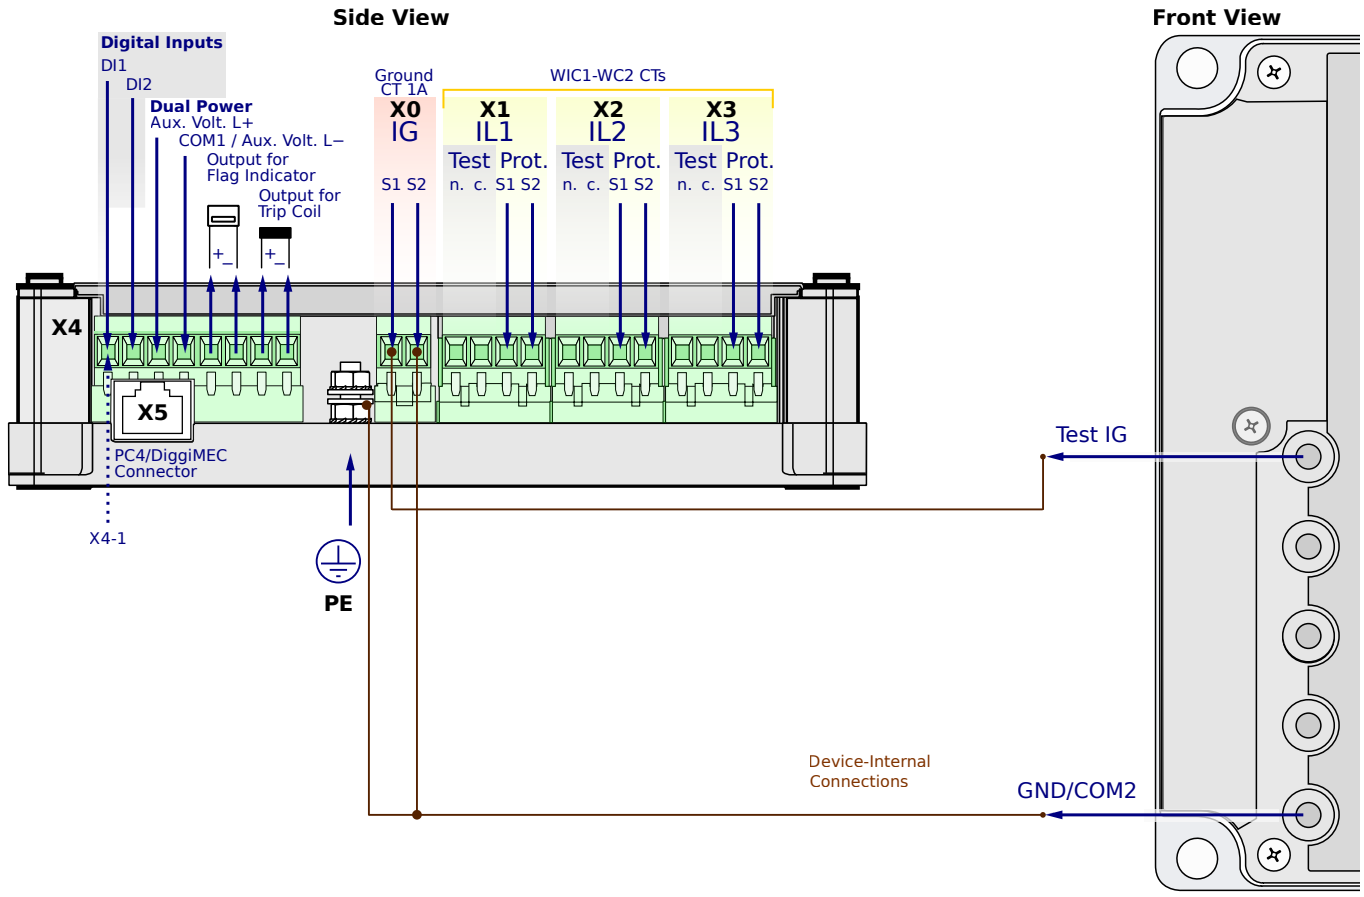


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- – Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- – Backup protection operates at 20·In,max ("TC"-output)
- – Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
- – Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2AB0

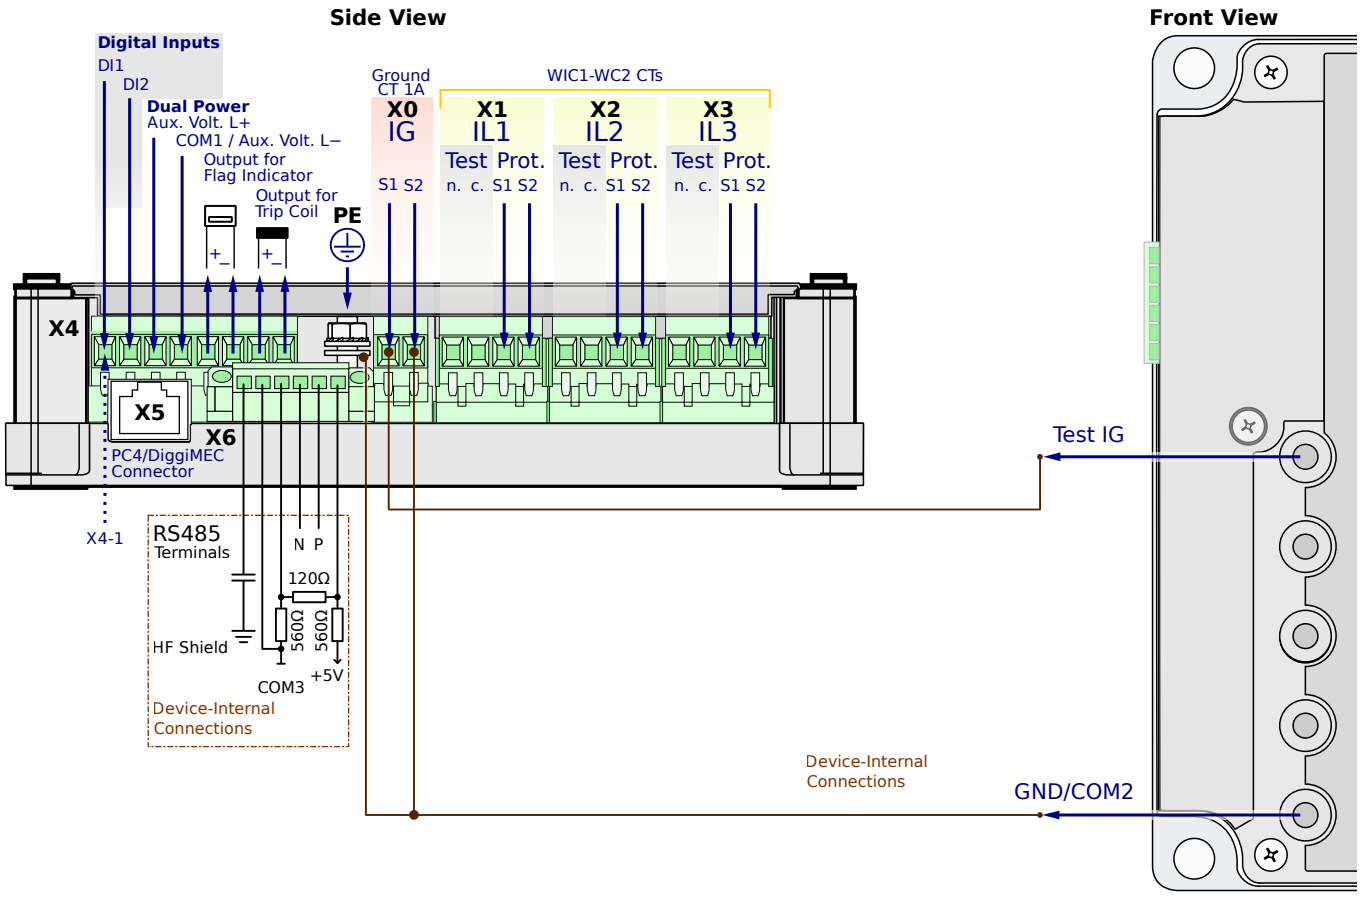


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2ABH

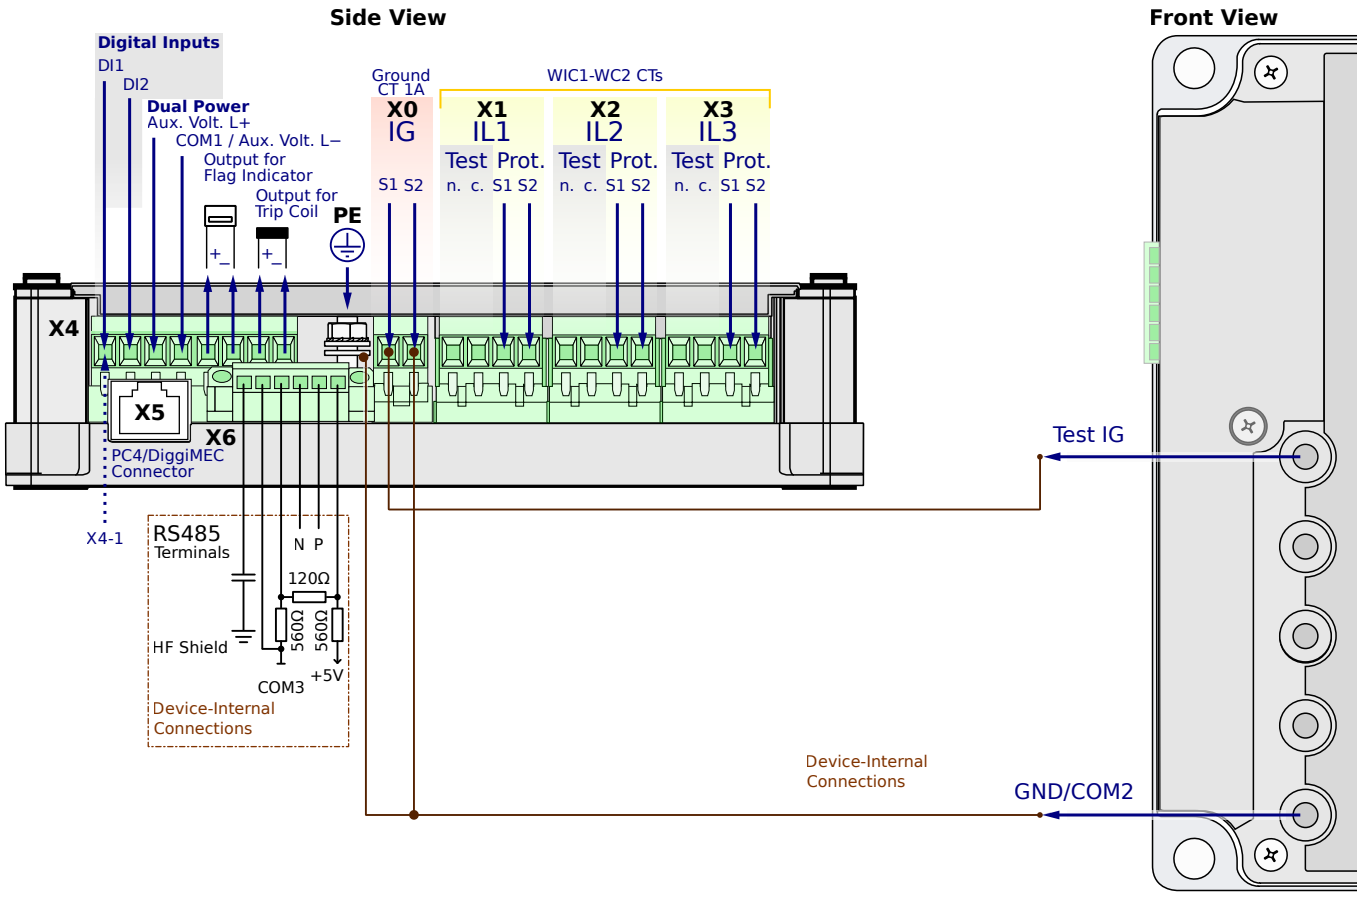


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2AC0

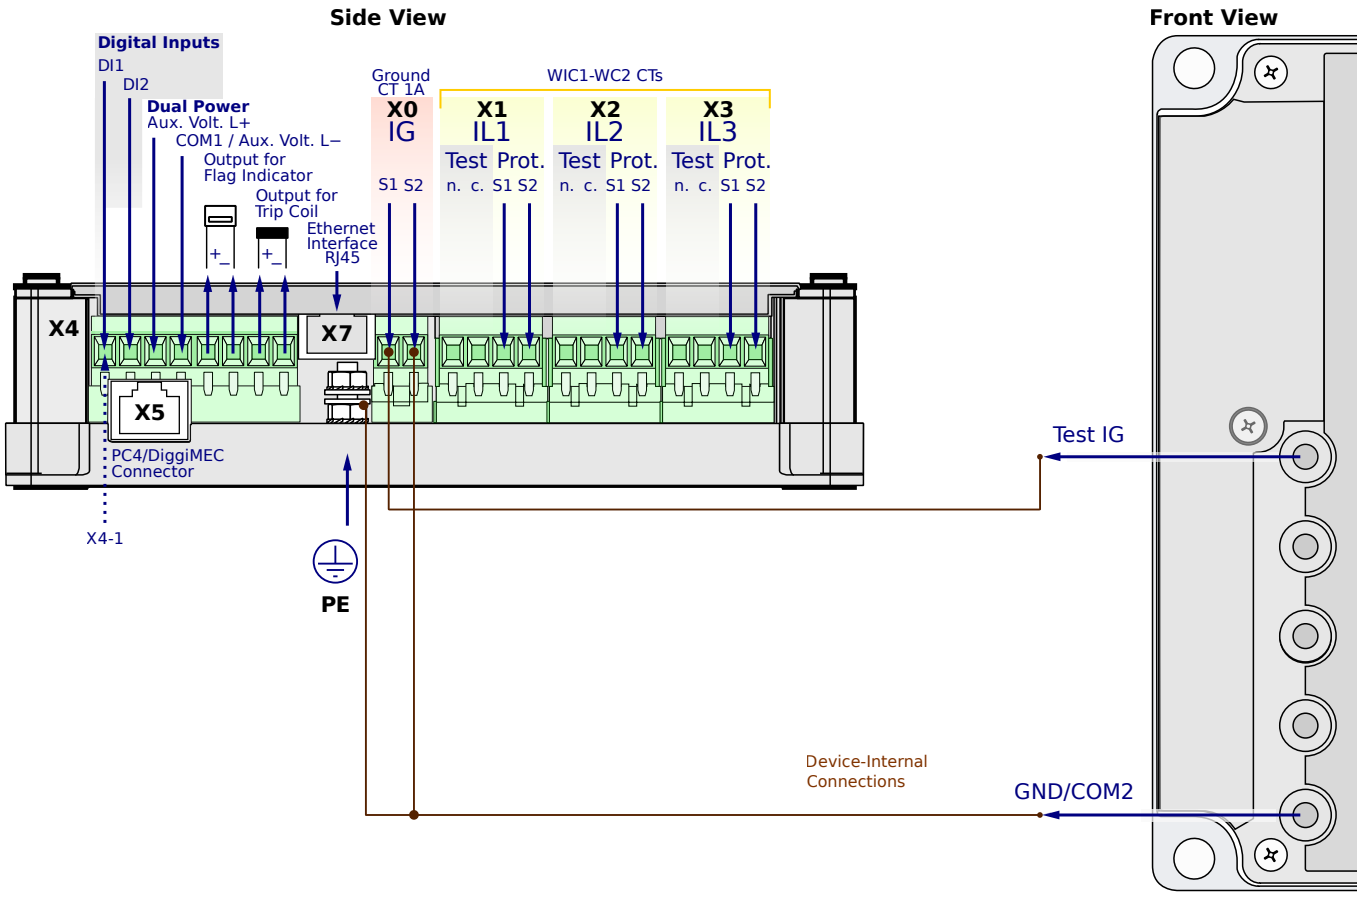


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2ACH

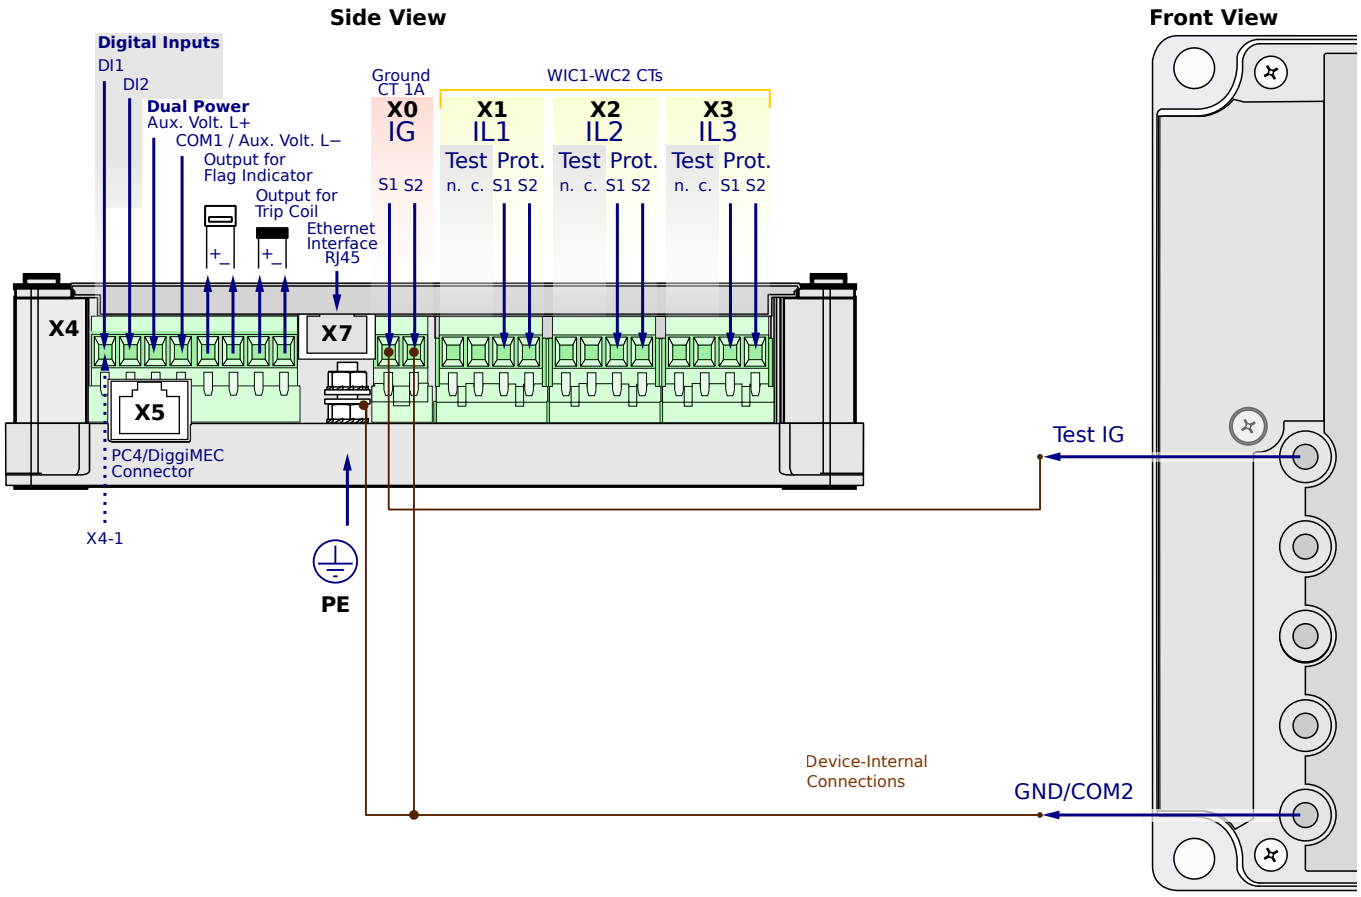


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2AL0

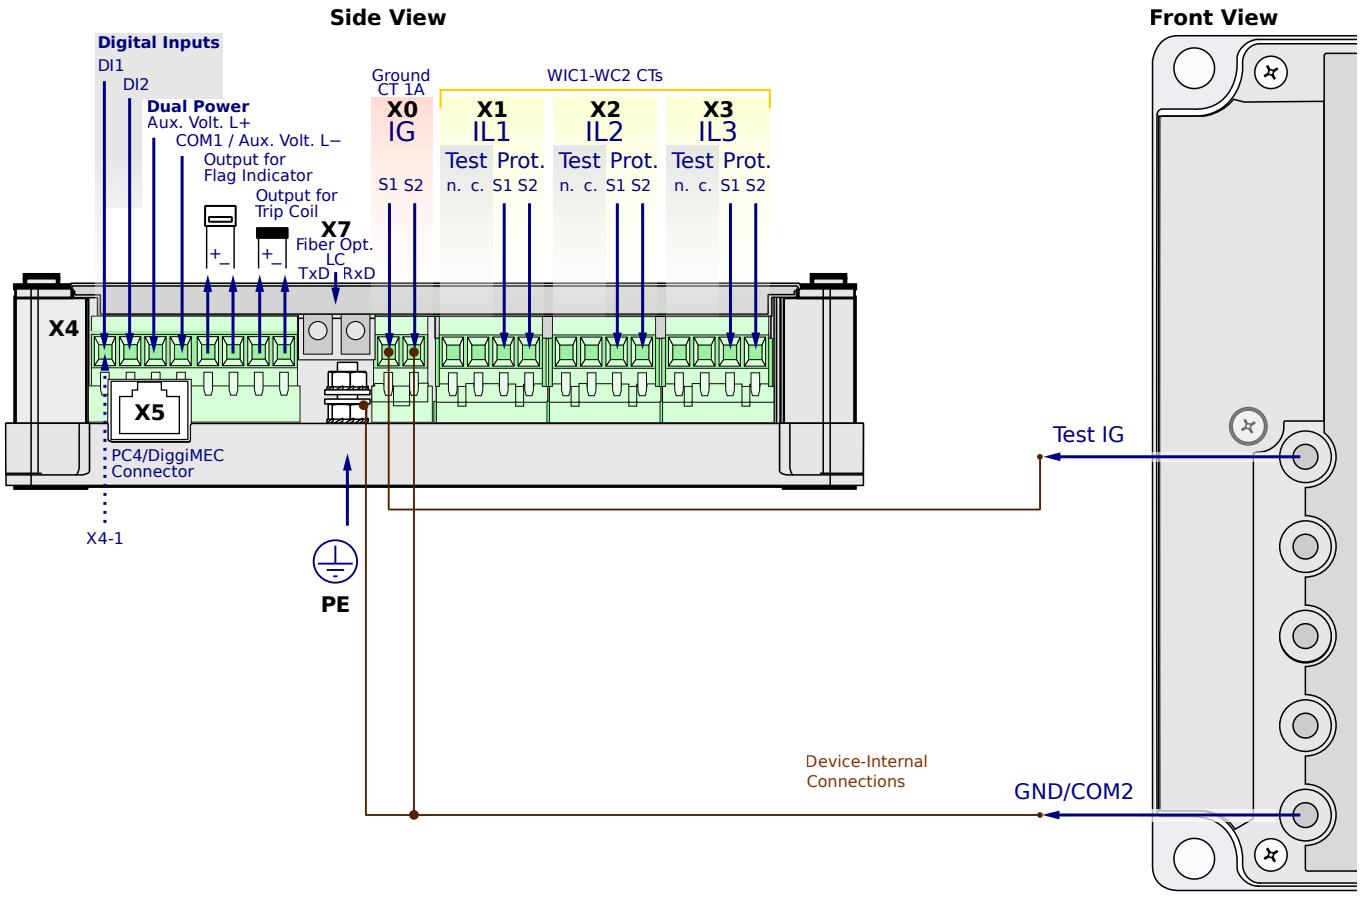


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2ALH

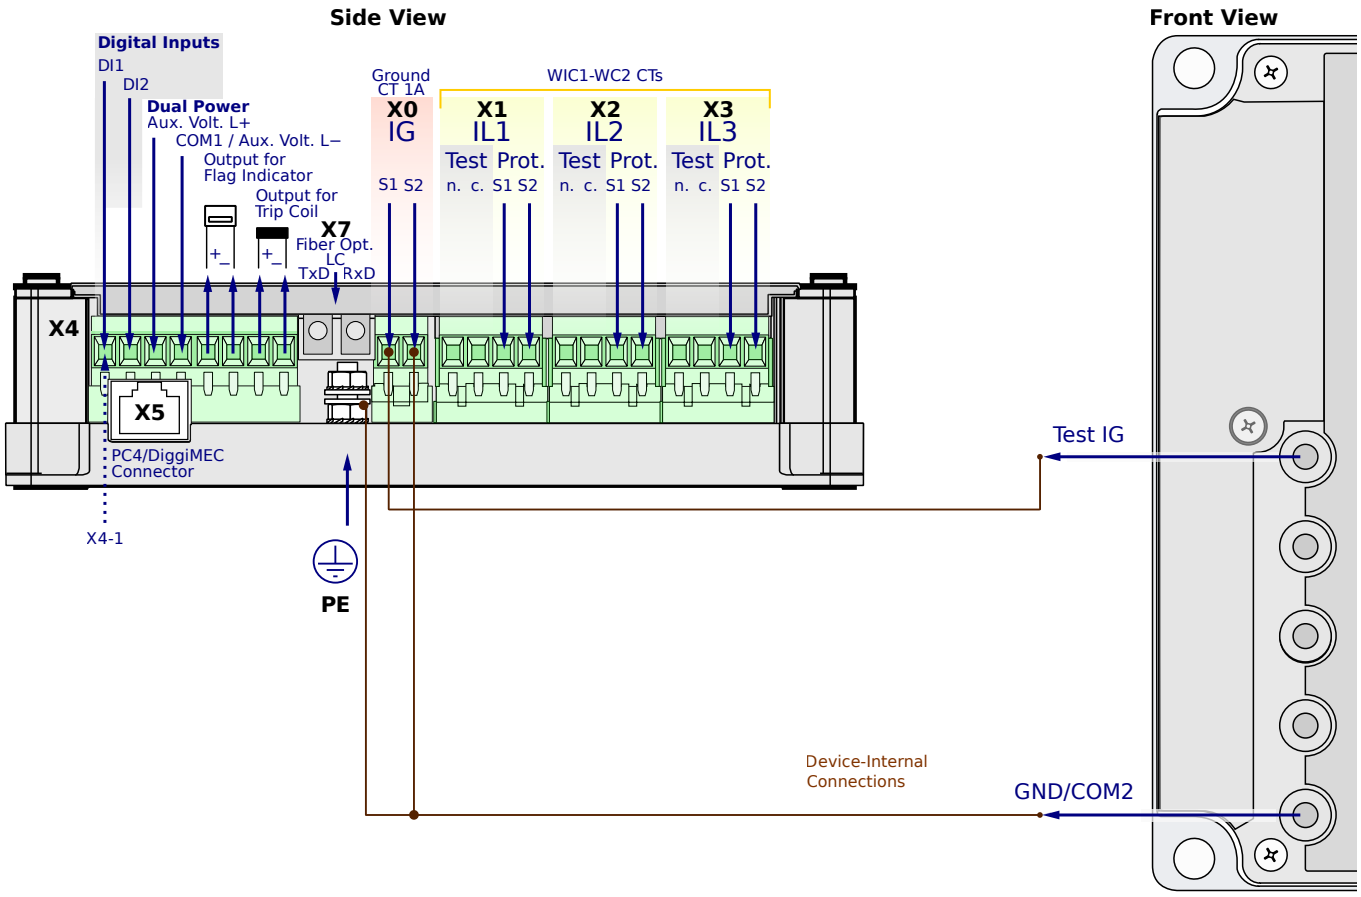


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "A" = Package "S" + ANSI 46, 49, 51Q, Breaker Wear, Condition Monitoring (= Life Load, Drag Indicator)
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2PA0

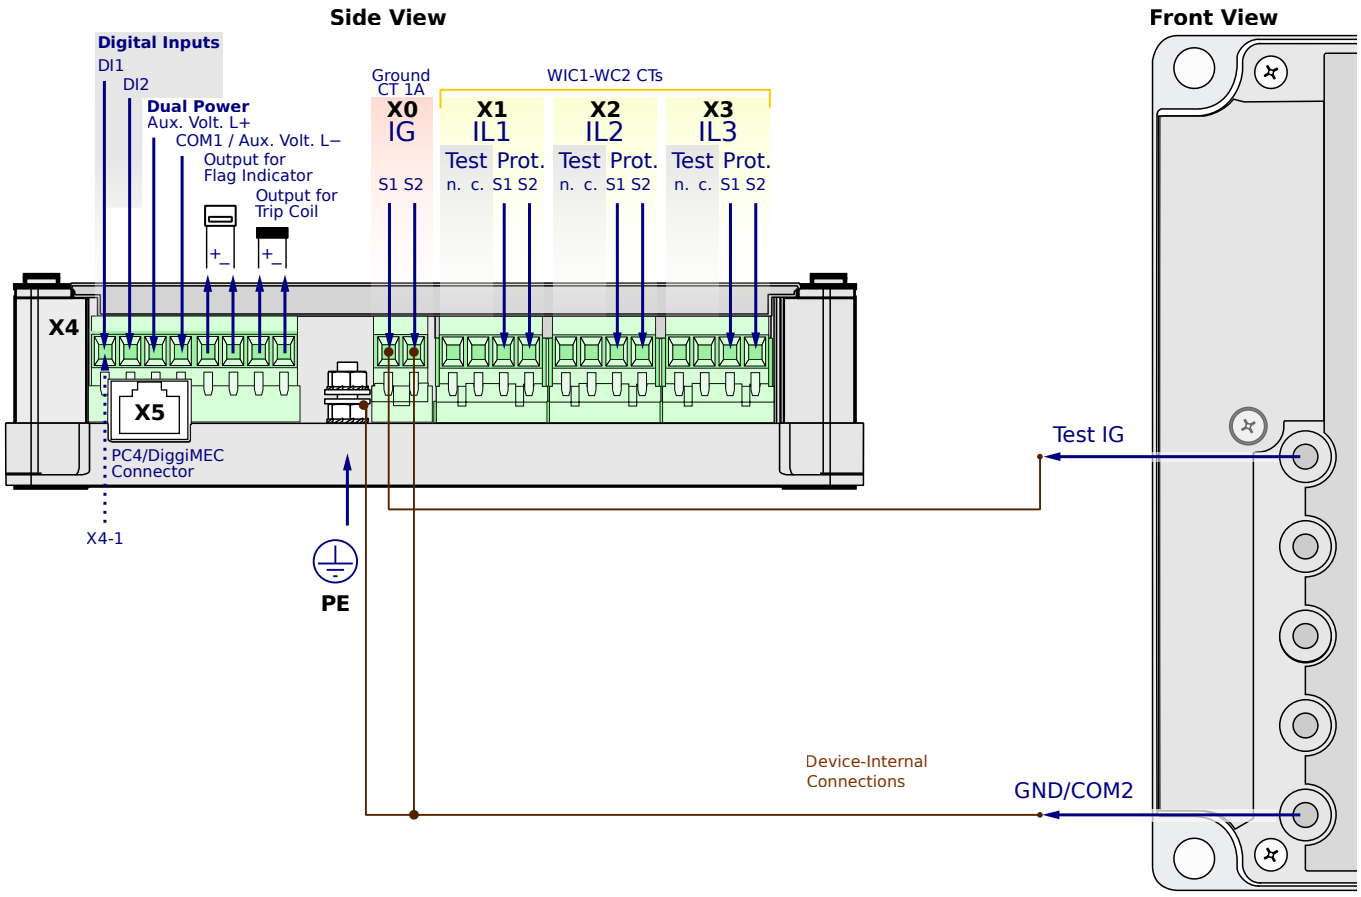


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2PAH

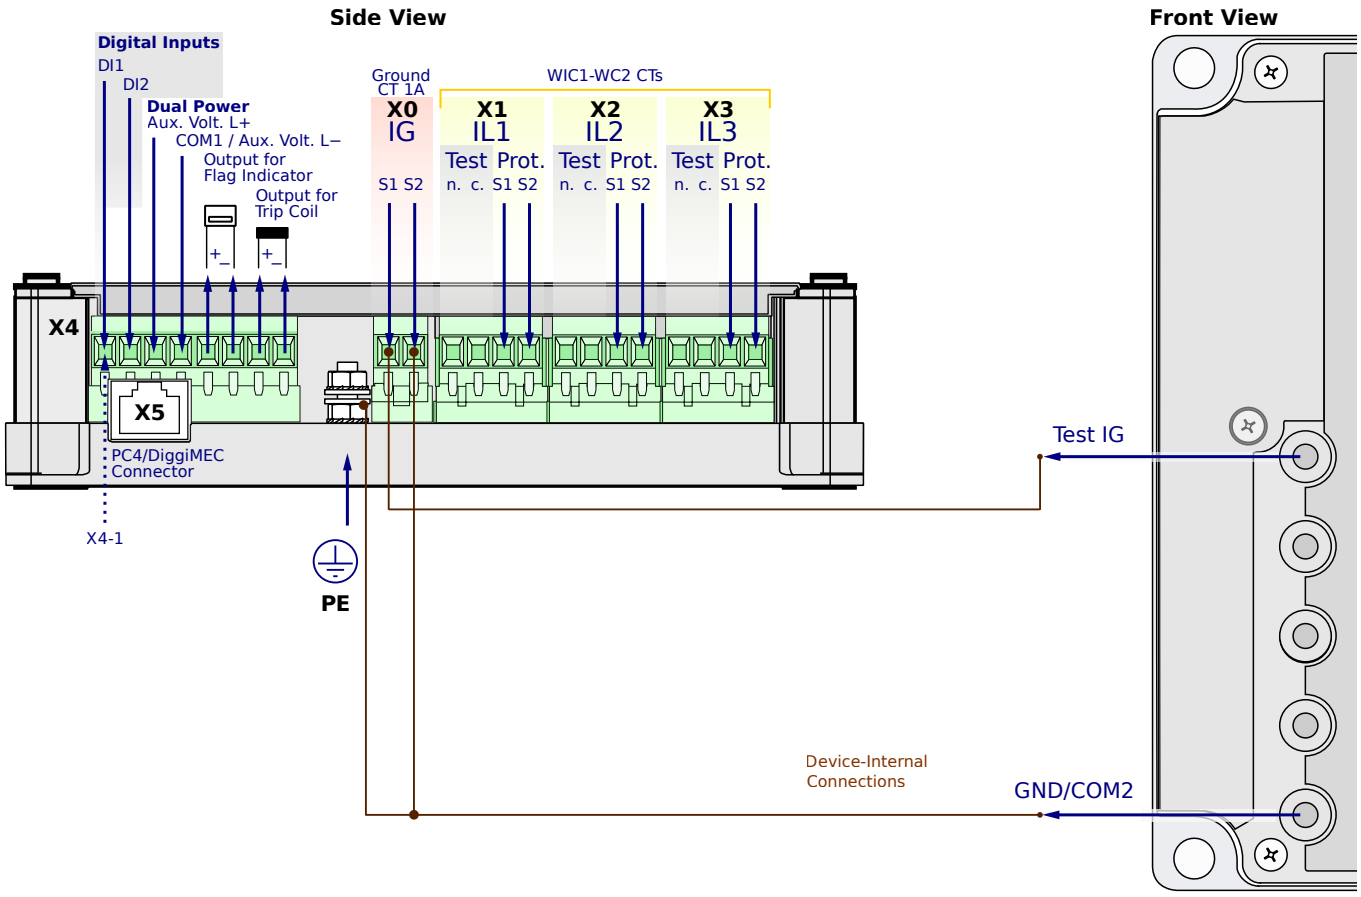


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

- Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
- Backup protection operates at 20·In,max ("TC"-output)
- Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
- Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!

WIC1-4DG0CD2PB0

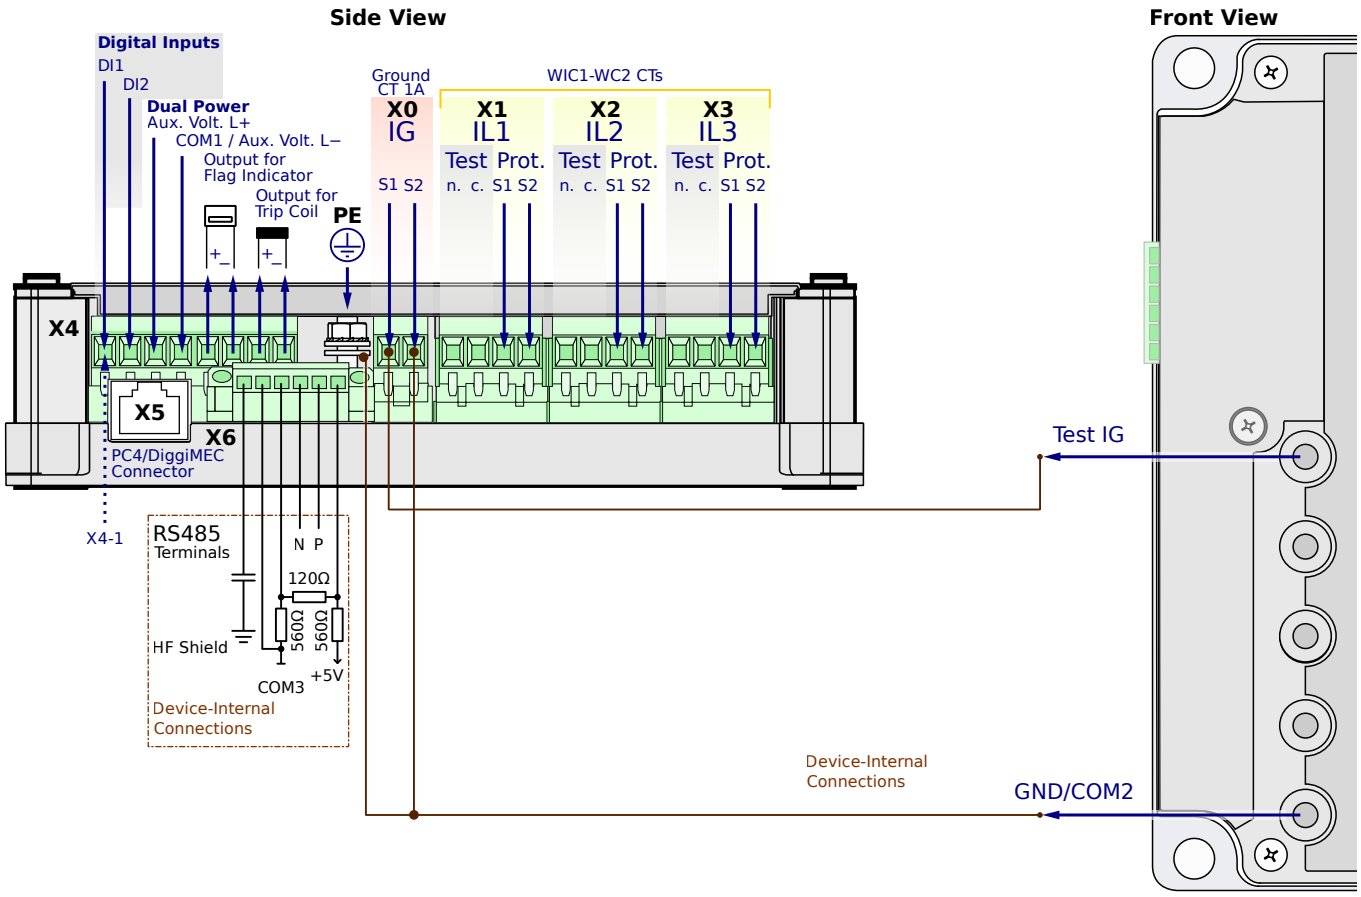


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2PBH

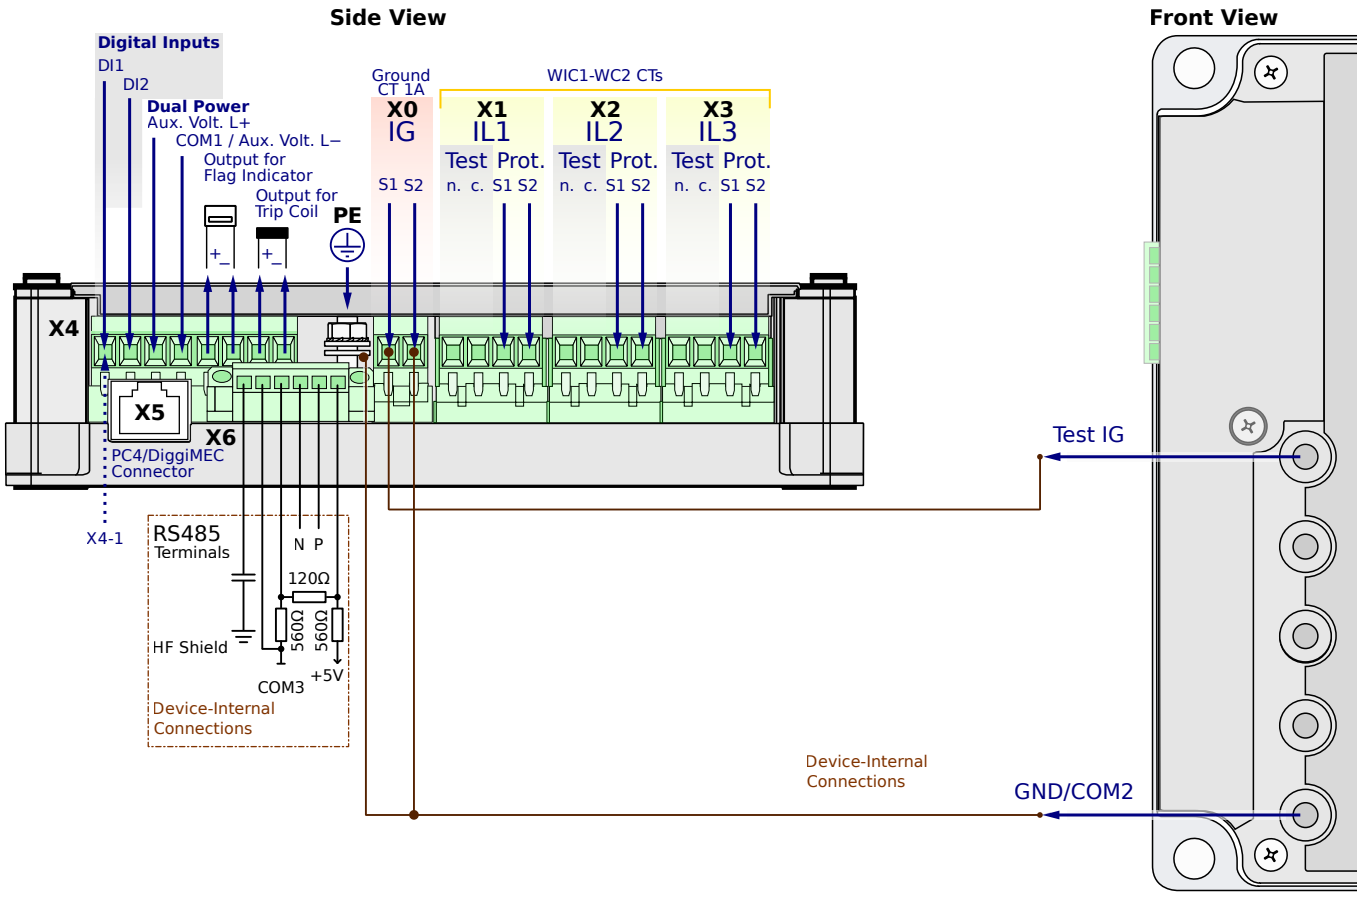


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X6 – Modbus RTU — RS485 / terminals

WIC1-4DG0CD2PC0

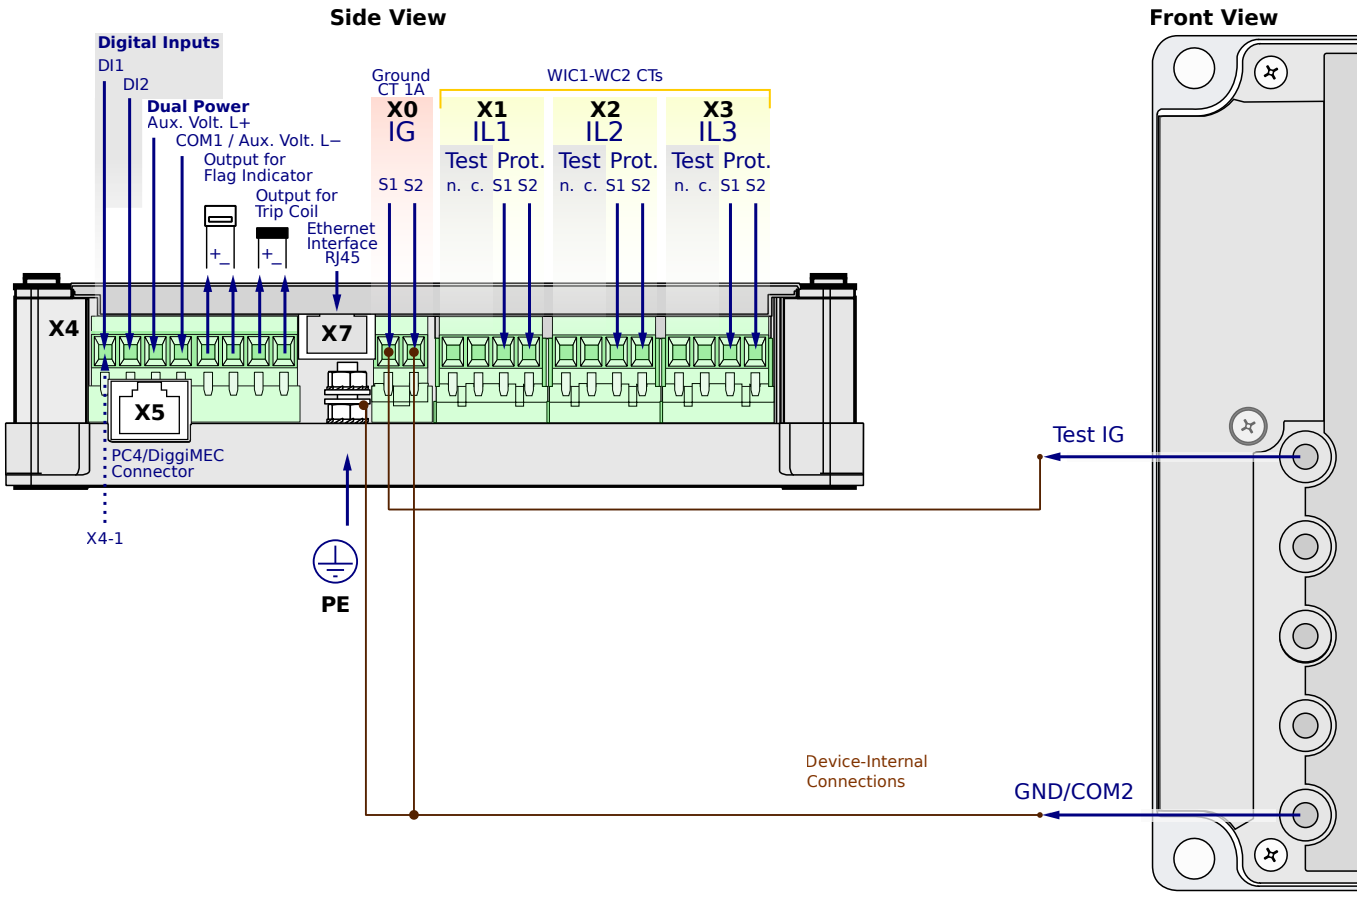


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2PCH

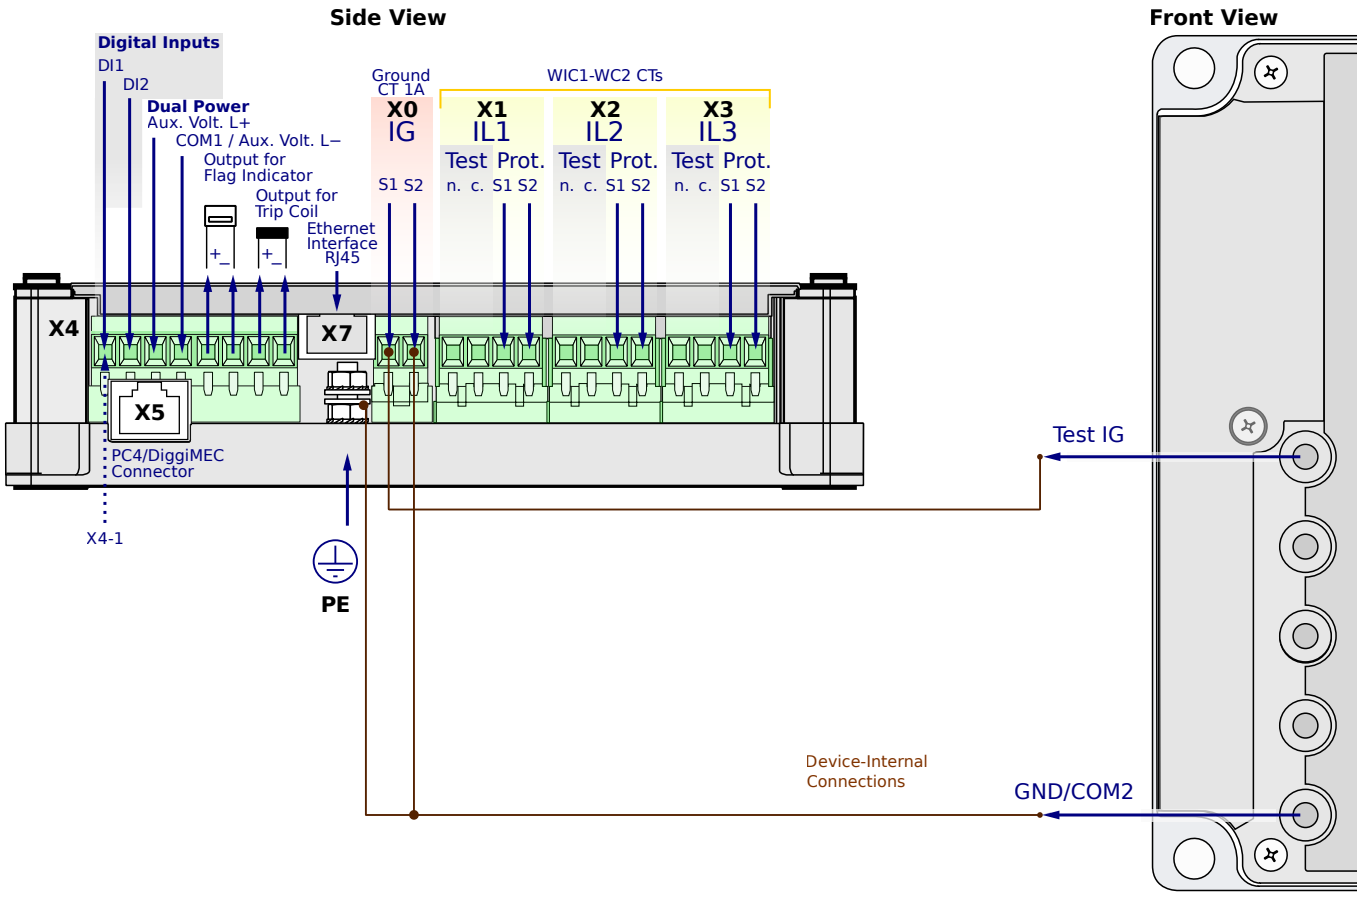


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP, Ethernet RJ45, 100 Mbit/s (BASE100-FX) for cable CAT5 (or better)

WIC1-4DG0CD2PL0

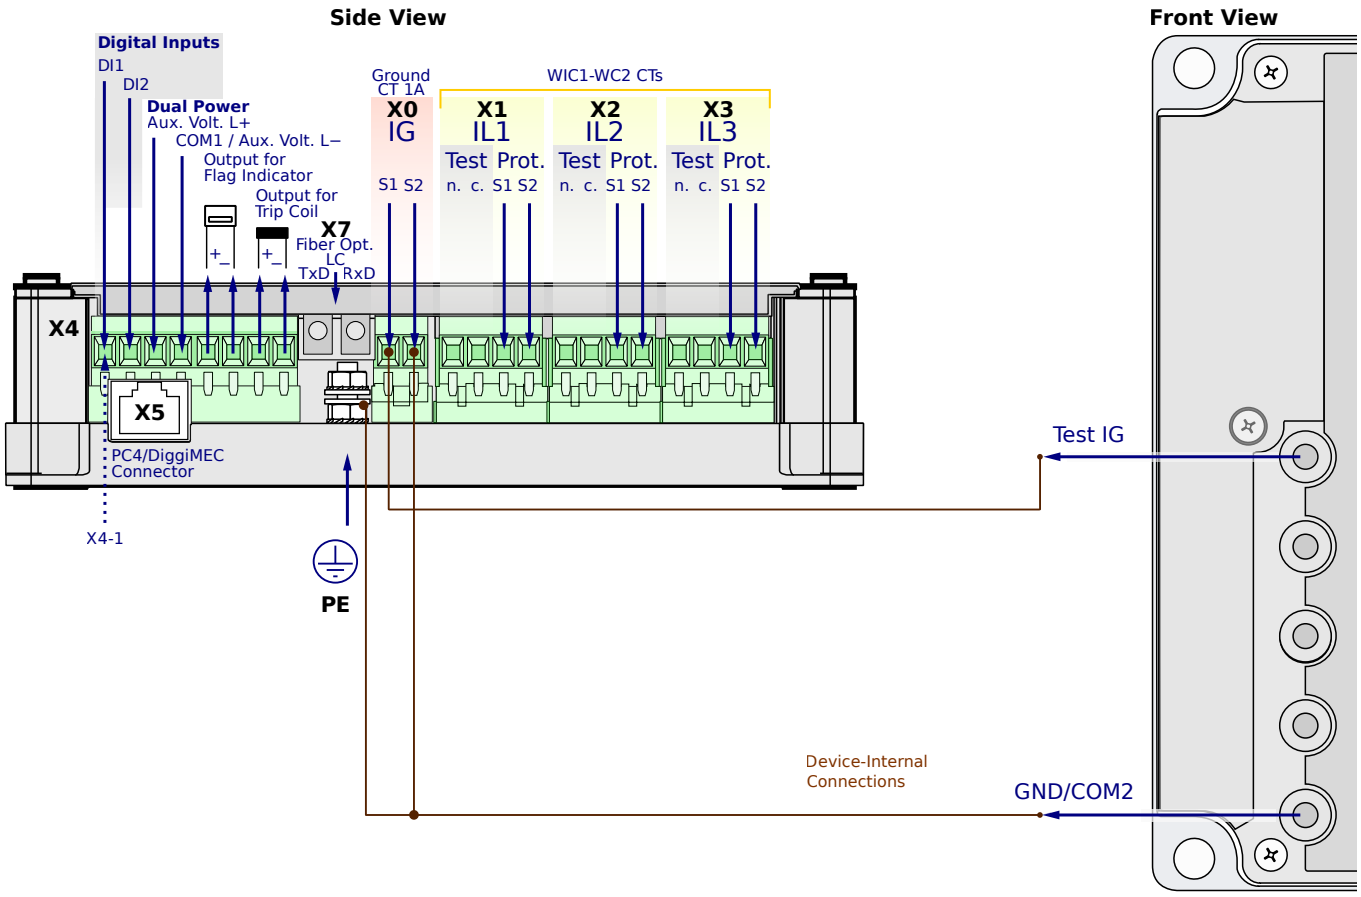


Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Standard

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

WIC1-4DG0CD2PLH

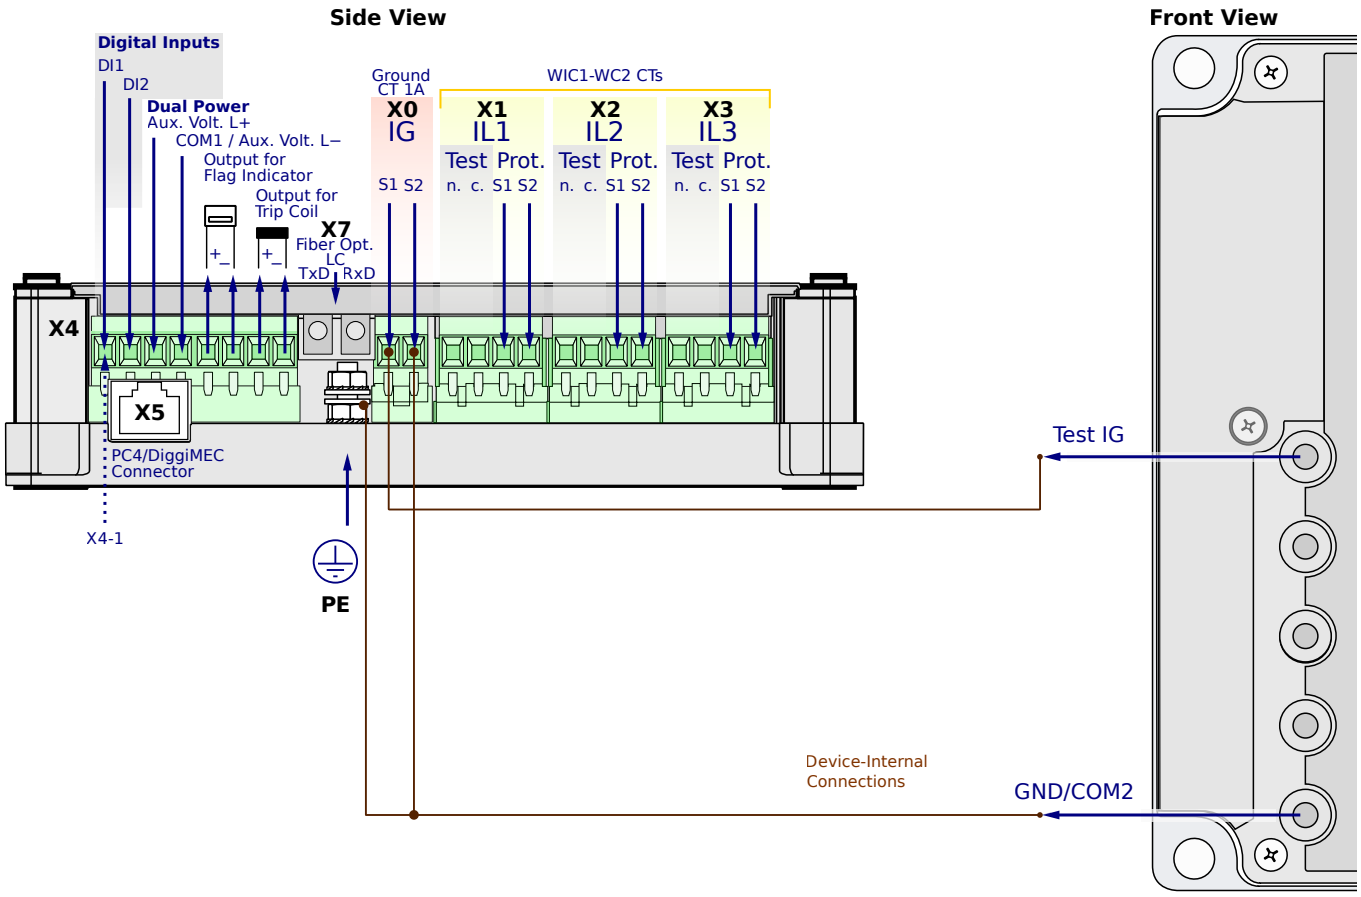

Dual-Powered Protection Device, configuration via Smart view (PC) / DiggiMEC

– Nominal frequency is 50 Hz or 60 Hz. (Setting via Smart view (PC) / DiggiMEC.)
– Backup protection operates at 20·In,max ("TC"-output)
– Package "P" = Package "A" + SOTF, CLPU, external protection, ultra-fast overcurrent protection
– Customized Version 1

PE – Protective Earth
X0 – Measured ground (earth) current via 1 A CT input. (Calc. IG is also possible.)
X1...X3 – WIC1-WC2 CTs
X4-1,2 – 2 assignable Digital Inputs
X4-3,4 – Dual Power (Optional auxiliary power supply)
X4-5,6 – Configurable Flag Indicator "FI"-Output
X4-7,8 – Trip Coil "TC"-Output
X5 – PC4/DiggiMEC-WIC1 connection. Use network cable CAT3 (or better). No crossover cable!
X7 – Modbus TCP — Optical Ethernet 100 MB / LC duplex connector

Appendix – Legend

In this legend designations of various device types are listed, e.g. transformer protection, motor protection, generator protection, etc. Therefore it can occur that not every designation actually appears on the wiring diagram of your device.

PE – Connection of protective earth (see chapter Grounding in the Technical Manual).
FE – Connection of functional earth (see chapter Grounding in the Technical Manual).
Power Supply – Connection for auxiliary power supply.
IL1 – Phase current input L1 (in some countries designated as IA).
IL2 – Phase current input L2 (in some countries designated as IB).
IL3 – Phase current input L3 (in some countries designated as IC).
ILx C–D – WIC1 Test windings.
ILx S1–S2 – WIC1 phase current inputs.
IL1 W1 ... IL3 W1 – Phase current input L1...L3, winding side 1.
IL1 W2 ... IL3 W2 – Phase current input L1...L3, winding side 2.
IG – Ground (earth) current input.
IG W1, IG W2 – Ground (earth) current input, winding side 1 / 2.
VL1 – Phase-to-neutral voltage L1 (in some countries designated as VA).
VL2 – Phase-to-neutral voltage L2 (in some countries designated as VB).
VL3 – Phase-to-neutral voltage L3 (in some countries designated as VC).
VL12 – Phase-to-phase voltage V12 (in some countries designated as VAB).
VL23 – Phase-to-phase voltage V23 (in some countries designated as VBC).
VL31 – Phase-to-phase voltage V31 (in some countries designated as VCA).
VX – 4th voltage measuring input for measuring residual voltage or synchro-check.
BO – Binary output relay.
NO / NC – Contact output, normally open (Form A) / closed (Form B).
DI – Digital input.
COM – Common connection of digital inputs.
Out+, AnOut – Analog output + (0/4...20 mA or 0...10 V).
In−, AnIn – Analog input + (0/4...20 mA or 0...10 V).
n.c. – Not connected.
DO NOT USE – Do not use. (Caution: Non-usable internal wiring may exist.)
SC – Self-supervision contact.
HF SHIELD – Connection cable shield.
Fiber Optics / LWL – Fiber optic connection.

PROTECTION MADE SIMPLE.

WI Line

WIC1

WIRING DIAGRAMS

docs.SEGelectronics.de/wic1

SEG Electronics GmbH reserves the right to update any portion of this publication at any time.
Information provided by SEG Electronics GmbH is believed to be correct and reliable.
However, SEG Electronics GmbH assumes no responsibility unless otherwise expressly undertaken.

SEG Electronics GmbH
Krefelder Weg 47 • D–47906 Kempen (Germany)
Telephone: +49 (0) 21 52 145 1
Internet: www.SEGelectronics.de

Sales
Telephone: +49 (0) 21 52 145 331
Fax: +49 (0) 21 52 145 354
E-mail: sales@SEGelectronics.de

Service
Telephone: +49 (0) 21 52 145 600
Fax: +49 (0) 21 52 145 354
E-mail: support@SEGelectronics.de

Complete address / phone / fax / email information for all locations is available on our website.