

# IEC 61850 – TICS

High **PROTEC** | PROTECTION TECHNOLOGY  
MADE SIMPLE

MRI4 |

Tissue Implementation Conformance Statement (TICS)

UCA International Users Group Testing Sub Committee

Version: 3.7

Original document

English

Original reference manual

**SEG Electronics GmbH**

Krefelder Weg 47 • D-47906 Kempen (Germany)

Telephone: +49 (0) 21 52 145 1

Internet: [www.SEGelectronics.de](http://www.SEGelectronics.de)

Sales

Telephone: +49 (0) 21 52 145 331

Fax: +49 (0) 21 52 145 354

E-mail: [info@SEGelectronics.de](mailto:info@SEGelectronics.de)

Service

Telephone: +49 (0) 21 52 145 614

Fax: +49 (0) 21 52 145 354

E-mail: [info@SEGelectronics.de](mailto:info@SEGelectronics.de)

© 2020 SEG Electronics GmbH. All rights reserved.

# Table of Contents

<b>1</b>	<b>Introduction</b> .....	<b>4</b>
<b>2</b>	<b>Mandatory Intop Tissues</b> .....	<b>5</b>
<b>3</b>	<b>Optional IntOp Tissues</b> .....	<b>7</b>

# 1 Introduction

This document provides a template for the tissues conformance statement. According to the UCA IUG QAP the tissue conformance statement is required to perform a conformance test and is referenced on the certificate.

This document is applicable for MRI4 Version 3.7.

## 2 Mandatory Intop Tissues

During the October 2006 meeting IEC TC57 working group 10 decided that:

- green Tissues with the category “IntOp” are mandatory for IEC 61850 edition 1
- Tissues with the category “Ed.2” Tissues should not be implemented.

Below table gives an overview of the implemented IntOp Tissues.

Part	Tissue No.	Description	Implemented (Y/na)
8-1	<b>116</b>	GetNameList with empty response?	Y
	<b>165</b>	Improper Error Response for GetDataSetValues	Y
	<b>183</b>	GetNameList error handling	Y
7-4	None		
7-3	<b>28</b>	Definition of APC	na
	<b>54</b>	Point def xVal, not cVal	na
	<b>55</b>	Ineut = Ires ?	Y
	<b>60</b>	Services missing in tables	na
	<b>63</b>	mag in CDC CMV	Y
	<b>65</b>	Deadband calculation of a Vector and trigger option	na
	<b>219</b>	operTm in ACT	na
	<b>270</b>	WYE and DEL rms values	na
7-2	<b>30</b>	control parameter T	Y
	<b>31</b>	Typo	Y
	<b>32</b>	Typo in syntax	Y
	<b>35</b>	Typo Syntax Control time	Y
	<b>36</b>	Syntax parameter DSet-Ref missing	Y
	<b>37</b>	Syntax GOOSE "T" type	Y
	<b>39</b>	Add DstAddr to GoCB	Y
	<b>40</b>	GOOSE Message “AppID” to “GoID”	Y
	<b>41</b>	GsCB “AppID” to “GsID”	Y
	<b>42</b>	SV timestamp: “EntryTime” to “TimeStamp”	na
	<b>43</b>	Control "T" semantic	Y
	<b>44</b>	AddCause - Object not sel	Y
<b>45</b>	Missing AddCauses (neg range)	na	

Part	Tissue No.	Description	Implemented (Y/na)
	<b>46</b>	Synchro check cancel	na
	<b>47</b>	"." in LD Name?	Y
	<b>49</b>	BRCB TimeOfEntry (part of #453)	Y
	<b>50</b>	LNName start with number?	Y
	<b>51</b>	ARRAY [0..num] missing	na
	<b>52</b>	Ambiguity GOOSE SqNum	Y
	<b>53</b>	Add DstAddr to GsCB, SV	Y
	<b>151</b>	Name constraint for control blocks etc.	Y
	<b>166</b>	DataRef attribute in Log	na
	<b>185</b>	Logging - Integrity periode	na
	<b>189</b>	SV Format	na
	<b>190</b>	BRCB: EntryId and TimeOfEntry (part of #453)	Y
	<b>191</b>	BRCB: Integrity and buffering reports (part of #453)	Y
	<b>234</b>	New type CtxInt (Enums are mapped to 8 bit integer)	Y
	<b>275</b>	Confusing statement on GI usage (part of #453)	Y
Part 6	<b>1</b>	Syntax	Y
	<b>5</b>	tExtensionAttributeNameEnum is restricted	Y
	<b>8</b>	SIUnit enumeration for W	Y
	<b>10</b>	Base type for bitstring usage	na
	<b>17</b>	DAI/SDI elements syntax	Y
	<b>169</b>	Ordering of enum differs from 7-3	na

NOTE: Tissue 49, 190, 191, 275 and 278 are part of the optional tissue #453, all other technical tissues in the table are mandatory if applicable.

NOTE: Editorial tissues are marked as "na".

NOTE: Final proposal on tissue 45 is not defined yet


### 3 Optional IntOp Tissues

After the approval of the server conformance test procedures version 2.2 the following IntOp tissues were added or changed. It is optional to implement these tissues.

<b>Part</b>	<b>Tissue No.</b>	<b>Description</b>	<b>Implemented (Y/N/na)</b>
8-1	<b>235</b>	Extension of Name length	Y
8-1	<b>246</b>	Control negative response (SBOs) with LastApplError	na
8-1	<b>545</b>	Skip file directories with no files	na
7-2	<b>333</b>	Enabling of an incomplete GoCB	na
7-2	<b>453</b>	Combination of all reporting and logging tissues	Y
6	<b>245</b>	Attribute RptId in SCL	N
6	<b>529</b>	Replace sev - Unknown by unknown	na

**High PROTEC**

docs.SEGelectronics.de/HighPROTEC

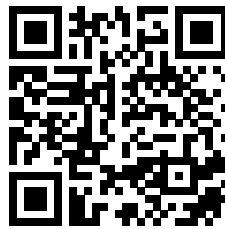

SEG Electronics GmbH reserves the right to update any portion of this publication at any time. Information provided by SEG Electronics GmbH is believed to be correct and reliable. However, SEG Electronics GmbH assumes no responsibility unless otherwise expressly undertaken.



SEG Electronics GmbH  
Krefelder Weg 47 • D-47906 Kempen (Germany)  
Telephone: +49 (0) 21 52 145 1

Internet: [www.SEGelectronics.de](http://www.SEGelectronics.de)

Sales  
Telephone: +49 (0) 21 52 145 331  
Fax: +49 (0) 21 52 145 354

Service  
Telephone: +49 (0) 21 52 145 614  
Fax: +49 (0) 21 52 145 354

Complete address / phone / fax / email information for all locations is available on our website.