

REFERENCE MANUAL

High **PROTEC** | PROTECTION TECHNOLOGY
MADE SIMPLE

MRI4 |



DM version: 3.7.b

English (Original document)

Original reference manual

SEG Electronics GmbH

Krefelder Weg 47 • D-47906 Kempen (Germany)

Postfach 10 07 55 (P.O.Box) • D-47884 Kempen (Germany)

Telephone: +49 (0) 21 52 145 1

Internet: www.SEGelectronics.de

Sales

Telephone: +49 (0) 21 52 145 331

Fax: +49 (0) 21 52 145 354

E-mail: SalesPGD_EMEA@SEGelectronics.de

Service

Telephone: +49 (0) 21 52 145 614

Fax: +49 (0) 21 52 145 354

E-mail: industrial.support@SEGelectronics.de

© 2020 SEG Electronics GmbH. All rights reserved.

Table of Contents

1	About This Reference Manual	11
2	Hardware	14
2.1	Device Configuration	14
2.2	Digital Inputs	16
2.2.1	“DI8-X1”	16
2.3	Binary Outputs	18
2.3.1	6 Binary Outputs	18
2.4	LEDs	29
2.4.1	LEDs group A: Settings	29
2.5	HMI – front-panel	46
2.5.1	HMI: Settings	46
2.5.2	HMI: Direct Controls	47
2.5.3	HMI: Values	47
3	Security	48
4	Field settings	50
4.1	Field Para: Settings	50
4.2	CT – Current Transformer	51
4.2.1	CT: Settings	51
4.2.2	CT: Signals (Output States)	52
4.2.3	CT: Values	53
4.2.4	CT: Statistical Values	56
5	System	60
5.1	Sys: Settings	60
5.2	Sys: Direct Controls	61
5.3	Sys: Input States	62
5.4	Sys: Signals (Output States)	63
5.5	Sys: Values	66
6	Measured Values	67

- 7 **Statistics** **68****
- 7.1 Statistics: Settings 68
- 7.2 Statistics: Direct Controls 69
- 7.3 Statistics: Input States 70
- 7.4 Statistics: Signals (Output States) 70
- 7.5 Statistics: Counters 70

- 8 **Communication** **71****
- 8.1 Scada: Device Planning Parameters 71
- 8.2 Scada: Signals (Output States) 71
- 8.3 Tcplp 72
- 8.3.1 Tcplp: Settings 72
- 8.4 DNP3 – Distributed Network Protocol 73
- 8.4.1 DNP3: Settings 73
- 8.4.2 DNP3: Direct Controls 78
- 8.4.3 DNP3: Input States 78
- 8.4.4 DNP3: Signals (Output States) 79
- 8.4.5 DNP3: Counters 79
- 8.5 Modbus 81
- 8.5.1 Modbus: Settings 81
- 8.5.2 Modbus: Direct Controls 84
- 8.5.3 Modbus: Input States 84
- 8.5.4 Modbus: Signals (Output States) 84
- 8.5.5 Modbus: Values 85
- 8.5.6 Modbus: Counters 86
- 8.6 IEC 61850 – IEC 61850 communication 88
- 8.6.1 IEC 61850: Settings 88
- 8.6.2 IEC 61850: Direct Controls 88
- 8.6.3 IEC 61850: Signals (Output States) 88
- 8.6.4 IEC 61850: Values 89
- 8.6.5 IEC 61850: Counters 90
- 8.6.6 IEC 61850 – Virt.Outp. 92
- 8.7 IEC103 – IEC 60870-5-103 communication 93

8.7.1	IEC103: Settings	93
8.7.2	IEC103: Direct Controls	95
8.7.3	IEC103: Signals (Output States)	95
8.7.4	IEC103: Values	96
8.7.5	IEC103: Counters	96
8.8	IEC104 – IEC 60870-5-104 communication	98
8.8.1	IEC104: Settings	98
8.8.2	IEC104: Direct Controls	101
8.8.3	IEC104: Signals (Output States)	101
8.8.4	IEC104: Values	101
8.8.5	IEC104: Counters	102
8.9	Profibus – Profibus Module	103
8.9.1	Profibus: Settings	103
8.9.2	Profibus: Direct Controls	104
8.9.3	Profibus: Input States	104
8.9.4	Profibus: Signals (Output States)	104
8.9.5	Profibus: Values	105
8.9.6	Profibus: Counters	106
8.10	IRIG-B – IRIG-B-Module	108
8.10.1	IRIG-B: Device Planning Parameters	108
8.10.2	IRIG-B: Settings	108
8.10.3	IRIG-B: Direct Controls	108
8.10.4	IRIG-B: Signals (Output States)	108
8.10.5	IRIG-B: Counters	109
8.11	SNTP – SNTP-Module	110
8.11.1	SNTP: Device Planning Parameters	110
8.11.2	SNTP: Settings	110
8.11.3	SNTP: Direct Controls	111
8.11.4	SNTP: Signals (Output States)	111
8.11.5	SNTP: Values	111
8.11.6	SNTP: Counters	112
8.12	TimeSync – Time synchronisation	114

8.12.1	TimeSync: Settings	114
8.12.2	TimeSync: Signals (Output States)	116
9	Protection Parameter	117
9.1	Prot: Settings	117
9.2	Prot: Direct Controls	118
9.3	Prot: Input States	118
9.4	Prot: Signals (Output States)	118
9.5	IH2 – Module Inrush	121
9.5.1	IH2: Device Planning Parameters	121
9.5.2	IH2: Global Parameters	121
9.5.3	IH2: Setting Group Parameters	121
9.5.4	IH2: Input States	122
9.5.5	IH2: Signals (Output States)	122
9.6	I[1] . . . I[6] – Phase Overcurrent Stage	124
9.6.1	I[1]: Device Planning Parameters	124
9.6.2	I[1]: Global Parameters	124
9.6.3	I[1]: Setting Group Parameters	125
9.6.4	I[1]: Input States	127
9.6.5	I[1]: Signals (Output States)	128
9.7	IG[1] . . . IG[4] – Earth current protection - Stage	131
9.7.1	IG[1]: Device Planning Parameters	131
9.7.2	IG[1]: Global Parameters	131
9.7.3	IG[1]: Setting Group Parameters	132
9.7.4	IG[1]: Input States	135
9.7.5	IG[1]: Signals (Output States)	136
9.8	ThR – Thermal replica module	138
9.8.1	ThR: Device Planning Parameters	138
9.8.2	ThR: Global Parameters	138
9.8.3	ThR: Setting Group Parameters	138
9.8.4	ThR: Direct Controls	140
9.8.5	ThR: Input States	140
9.8.6	ThR: Signals (Output States)	140

9.8.7	ThR: Values	141
9.8.8	ThR: Statistical Values	141
9.9	I2>[1] . . . I2>[2] - Unbalanced Load-Stage	142
9.9.1	I2>[1]: Device Planning Parameters	142
9.9.2	I2>[1]: Global Parameters	142
9.9.3	I2>[1]: Setting Group Parameters	142
9.9.4	I2>[1]: Input States	144
9.9.5	I2>[1]: Signals (Output States)	145
9.10	AR - Automatic Reclosure	146
9.10.1	AR: Device Planning Parameters	146
9.10.2	AR: Global Parameters	146
9.10.3	AR: Setting Group Parameters	147
9.10.4	AR: Direct Controls	151
9.10.5	AR: Input States	151
9.10.6	AR: Signals (Output States)	152
9.10.7	AR: Counters	154
9.10.8	AWE abort	156
9.11	SOTF - Switch Onto Fault - Module	157
9.11.1	SOTF: Device Planning Parameters	157
9.11.2	SOTF: Global Parameters	157
9.11.3	SOTF: Setting Group Parameters	158
9.11.4	SOTF: Input States	159
9.11.5	SOTF: Signals (Output States)	159
9.12	CLPU - Cold Load Pickup Module	161
9.12.1	CLPU: Device Planning Parameters	161
9.12.2	CLPU: Global Parameters	161
9.12.3	CLPU: Setting Group Parameters	162
9.12.4	CLPU: Input States	163
9.12.5	CLPU: Signals (Output States)	163
9.13	Exp[1] . . . Exp[4] - External Protection - Module	165
9.13.1	Exp[1]: Device Planning Parameters	165
9.13.2	Exp[1]: Global Parameters	165

9.13.3	ExP[1]: Setting Group Parameters	166
9.13.4	ExP[1]: Input States	167
9.13.5	ExP[1]: Signals (Output States)	167
9.14	Supervision	169
9.14.1	CBF – Circuit breaker failure protection module	169
9.14.2	TCS – Trip circuit supervision	173
9.14.3	CTS – CT Supervision	176
10	Control	179
10.1	Ctrl: Device Planning Parameters	179
10.2	Ctrl: Settings	179
10.3	Ctrl: Direct Controls	179
10.4	Ctrl: Input States	180
10.5	Ctrl: Signals (Output States)	180
10.6	Ctrl: Values	181
10.7	SG[1] – Switchgear	182
10.7.1	SG[1]: Settings	182
10.7.2	SG[1]: Direct Controls	185
10.7.3	SG[1]: Input States	186
10.7.4	SG[1]: Signals (Output States)	187
10.7.5	Breaker Wear	191
11	System Alarms	197
11.1	SysA: Device Planning Parameters	197
11.2	SysA: Settings	197
11.3	SysA: Input States	198
11.4	SysA: Signals (Output States)	198
12	Records	199
12.1	Event rec – The event recorder logs all events like switching operations, change of parameters, alarms, trips, operating mode selections, blockings and state transitions of inputs and outputs.	199
12.1.1	Event rec: Direct Controls	199
12.1.2	Event rec: Signals (Output States)	199

12.2	Disturb rec – After a trigger event has become true, the disturbance recorder writes analogue and digital tracks	200
12.2.1	Disturb rec: Settings	200
12.2.2	Disturb rec: Direct Controls	201
12.2.3	Disturb rec: Input States	201
12.2.4	Disturb rec: Signals (Output States)	201
12.2.5	Disturb rec: Values	202
12.3	Fault rec – The values measured at the time of tripping are saved by the Fault Recorder.	203
12.3.1	Fault rec: Settings	203
12.3.2	Fault rec: Direct Controls	203
12.3.3	Fault rec: Signals (Output States)	203
12.4	Trend rec – Trend Recorder	204
12.4.1	Trend rec: Settings	204
12.4.2	Trend rec: Direct Controls	206
12.4.3	Trend rec: Signals (Output States)	206
12.4.4	Trend rec: Counters	206
13	Logic	207
13.1	Logics – Logic	207
13.1.1	Logics: Device Planning Parameters	207
13.1.2	Logics . . . Logics – Logic	208
14	Self-Supervision	211
14.1	SSV: Direct Controls	211
14.2	SSV: Signals (Output States)	211
14.3	SSV: Counters	211
15	Service	212
15.1	Sgen – Sine wave generator	213
15.1.1	Sgen: Device Planning Parameters	213
15.1.2	Sgen: Settings	213
15.1.3	Sgen: Direct Controls	214
15.1.4	Sgen: Input States	214
15.1.5	Sgen: Signals (Output States)	215

Table of Contents

15.1.6	Sgen: Values	216
15.1.7	Sgen - Sine wave generator	217
16	Selection Lists	221
17	Index	424

1 About This Reference Manual

This document is a reference of all the Setting Values, Direct Commands and Signals of the MRI4. In other words, it lists all parameters that are available (or can be made available) with the (optionally) full featured versions of the MRI4 protection device.

CAUTION!



This document does not intend to give long and/or detailed description, nor does it intend to replace the full Technical Manual in any way. Only a quite short description is given for each parameter.

This document is a reference of all the Setting Values, Direct Commands and Signals of the MRI4.

Every HighPROTEC protection device operates using a lot of digital values of various types. Throughout our Technical Documentation, we are talking of “settings” (or “parameters”) or “signals” or “(measured) values”, depending on the type.

Please consult the Technical Manual, in particular Chapter “Modules, Settings, Signals and Values”, for details of the existing data types.

Modules

The firmware of every HighPROTEC protection device can be thought of being sub-divided in several independent function blocks, the so-called “modules”. Every protection function, for example, is a module of its own. But one of the fundamental concepts of a HighPROTEC protection device is to implement this with great consequence: The functionality of calculating statistical data is a module (named »Statistics«), every communication protocol is a module, the control of switchgear devices is a module (named »Ctrl«), but the properties of the switchgear itself is part of another module. There is even a general protection module (named »Prot«) that interacts all specific protection modules.

Every parameter, every value and every signal is therefore a member of some module.

But note that the settings dialogs (on the panel (HMI) or in the *Smart view* operating software) often omit the module name whenever it is clear from the menu branch. This means the parameters are often displayed only with their individual parameter names, i. e. simply »Function« instead of the full-blown »I[1] . Function«. This increases the overview and simplifies all configuration and operation work; however, it is good to know that the writing »Function« is just an abbreviation. In fact, **every** parameter **always** belongs to a module, and therefore – to make this concept absolutely clear – the reference tables have always the module name added in front of every parameter name

Especially for protection functions it is often required to have several instances active. For example, overcurrent protection usually has several “stages”, and all of these are running at the same time (using their individual setting values). Therefore it is an important feature of every HighPROTEC protection device that a lot of modules exist in several “instances”, which are numbered (in brackets): For the overcurrent protection, for example: »I[1]«, I[2]«, ...

In the reference tables, usually every module has its own dedicated chapter, which lists the available number of instances at the beginning. Then, however, in the sub-chapters listing the various parameter types, only the first instance (e. g. »I[1]«) is mentioned, because all the other instances are identical anyway.









Structure of a Reference Table

Since (almost) every module can be activated or deactivated independently of the other modules and all parameters of an inactive module disappear from the menu branch it would not be helpful if this Reference Manual would list parameters sorted according to the menu structure. Instead, we list categories of modules (e. g. "Protection Functions") and all the modules within a category.

For each parameter, there is a table with its properties, looking like this:

Module . Parameter	[Menu Path to This Parameter]	
Default Value	Value Range	Perm.
For some parameters: <ul style="list-style-type: none"> • Availability restrictions 		
Type <i>Short descriptive text explaining the functionality of this parameter.</i>		

"Type" is the data type of the parameter, which is denoted by a small icon. The following types are possible:



-  Setting Parameter
-  Direct Control
-  Input State
-  Signal (Output State)
-  Statistical Value
-  Counter
-  (Measuring) Value
-  Dialog — Such a dialog can feature several data objects using a special representation and/or functionality.

"Perm." means "permission", i. e. the access level and password that is required to modify the parameter. (Please refer to the "Security" chapter in the full Technical Manual for details.)

" Adapt. Param." means that this parameter supports Adaptive Parameter Sets. (See the "Adaptive Parameter Sets" section in the User Manual.)

For some parameter types (e. g. Input and Output States), the second row (default, value range, permission) is useless and therefore omitted.

Example of a parameter:

I[1] . Mode	[Device planning]	
non directional	Selection List  Mode: -, non directional, forward, reverse	S.3
 <i>general operation mode</i>		

This means that one can find the parameter in the menu [Device planning], and its values are picked from a selection list named "Mode". The "↔" arrow indicates a cross-reference (hyperlink) into the "Selection Lists" chapter, and a click takes you to a table that lists all available choices. The access level "S.3" means the access level "Supervisor-Lv3", which is required to modify the parameter.

Audience of This Manual

The manual serves as working basis for:

- Engineers in the protection field,
- commissioning engineers,
- people dealing with setting, testing and maintenance of protection and control devices,
- as well as trained personnel for electrical installations and power stations.

All functions concerning the MRI4 are listed. Should there be a description of any functions, parameters or inputs/outputs which do not apply to the device in use, please ignore that information.

This manual describes the (optionally) full featured versions of the devices.

All technical information and data included in this manual reflect their state at the time this document was issued. We reserve the right to carry out technical modifications in line with further development without changing this manual and without previous notice. Hence no claim can be brought based on the information and descriptions this manual includes.

We do not accept any liability for damage and operational failures caused by operating errors or disregarding the directions of this manual.

No part of this manual is allowed to be reproduced or passed on to others in any form, unless *SEG* have approved in writing.

This Reference Manual is part of the delivery scope when purchasing the device. In case the device is passed on (sold) to a third party, the manual has to be handed over as well.

Information Concerning Liability and Warranty

SEG does not accept any liability for damage resulting from conversions or changes carried out on the device or planning (projecting) work, parameter setting or adjustment changes done by the customer.

The warranty expires after a device has been opened by others than *SEG* specialists.

Warranty and liability conditions stated in *SEG* General Terms and Conditions are not supplemented by the above mentioned explanations.

2 Hardware

2.1 Device Configuration


MRI4	-2	#	#	#	#	#
Hardware Variant 1						
8 digital inputs 6 binary output relays		A				
Hardware Variant 2						
Phase Current 5A/1A, Ground Current 5A/1A			0			
Phase Current 5A/1A, Sensitive Ground Current 5A/1A			1			
Housing						
Flush mounting				A		
19 inch mounting (semi-flush)				B		
Customized Version 1				H		
Customized Version 2				K		
Communication						
Without					A	
RS 485: Modbus RTU IEC 60870-5-103 DNP3 RTU					B	
Ethernet: Modbus TCP DNP3 UDP/TCP IEC 60870-5-104					C	
Fiber Optics: Profibus-DP					D	
D-SUB: Profibus-DP					E	
Fiber Optics: Modbus RTU IEC 60870-5-103 DNP3 RTU					F	
RS 485/D-SUB: Modbus RTU IEC 60870-5-103 DNP3 RTU					G	
Ethernet: IEC 61850 communication Modbus TCP DNP3 UDP/TCP IEC 60870-5-104					H	
RS 485, Ethernet: Modbus TCP/RTU IEC 60870-5-103 IEC 60870-5-104 DNP3 UDP/TCP/RTU					I	
Ethernet/Fiber Optics: IEC 61850 communication Modbus TCP DNP3 UDP/TCP IEC 60870-5-104					K	
Ethernet/Fiber Optics: Modbus TCP DNP3 UDP/TCP IEC 60870-5-104					L	
RS 485, Ethernet: IEC 61850 Modbus TCP/RTU IEC 60870-5-103 IEC 60870-5-104 DNP3 UDP/TCP/RTU					T	
Printed Circuit Board						
Standard						A


MRI4	-2	#	#	#	#	#
printed circuit boards are conformal coated						B


2.2 Digital Inputs

2.2.1 “DI8-X1”


2.2.1.1 DI Slot X1: Settings

DI Slot X1 . Nom voltage	[Device Para / Digital Inputs / DI Slot X1 / Group 1] [Device Para / Digital Inputs / DI Slot X1 / Group 2] [Device Para / Digital Inputs / DI Slot X1 / Group 3]	
24 VDC	24 VDC, 48 VDC, 60 VDC, 110 VDC, 230 VDC, 110 VAC, 230 VAC ↳ Nom voltage.	S.3
 <i>Nominal voltage of the digital inputs</i>		

DI Slot X1 . Inverting 1 ... DI Slot X1 . Inverting 8	[Device Para / Digital Inputs / DI Slot X1 / Group 1] [Device Para / Digital Inputs / DI Slot X1 / Group 2] [Device Para / Digital Inputs / DI Slot X1 / Group 3]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting the input signals.</i>		

DI Slot X1 . Debouncing time 1 ... DI Slot X1 . Debouncing time 8	[Device Para / Digital Inputs / DI Slot X1 / Group 1] [Device Para / Digital Inputs / DI Slot X1 / Group 2] [Device Para / Digital Inputs / DI Slot X1 / Group 3]	
no debouncing time	no debouncing time, 20 ms, 50 ms, 100 ms ↳ Debouncing time.	S.3
 <i>A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.</i>		


2.2.1.2 DI Slot X1: Signals (Output States)


DI Slot X1 . DI 1	[Operation / Status Display / DI Slot X1]
...	
DI Slot X1 . DI 8	
 <i>Signal: Digital Input</i>	


2.3 Binary Outputs


2.3.1 6 Binary Outputs


2.3.1.1 BO Slot X2: Settings



BO Slot X2 . Operating Mode	[Device Para / Binary Outputs / BO Slot X2 / BO 1]	
Normally open (NO)	Normally open (NO), Normally closed (NC)	S.3
	↳ 1...n Operating Modes.	
 <i>Operating Mode</i>		



BO Slot X2 . t-hold	[Device Para / Binary Outputs / BO Slot X2 / BO 1]	
0.00s	0.00s ... 300.00s	S.3
 <i>To clearly identify the state transition of a binary output relay, the "new state" is being hold, at least for the duration of the hold time.</i>		



BO Slot X2 . t-Off Delay	[Device Para / Binary Outputs / BO Slot X2 / BO 1]	
0.00s	0.00s ... 300.00s	S.3
 <i>Switch Off Delay</i>		



BO Slot X2 . Latched	[Device Para / Binary Outputs / BO Slot X2 / BO 1]	
active	inactive, active	S.3
	↳ Mode.	
 <i>Defines whether the Relay Output will be latched when it picks up.</i>		



BO Slot X2 . Acknowledgement	[Device Para / Binary Outputs / BO Slot X2 / BO 1]	
"_"	"_" ... Sys . Internal test state	S.3
<i>Only available if:</i>	↳ 1..n, Assignment List.	
 <i>Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.</i>		


BO Slot X2 . Inverting		[Device Para / Binary Outputs / BO Slot X2 / BO 1]
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the collective signal (OR-gate/disjunction). In combination with inverted input signals an AND-gate can be programmed (Conjunction).</i>	


BO Slot X2 . Assignment 1		[Device Para / Binary Outputs / BO Slot X2 / BO 1]
SG[1] . TripCmd	"-" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


BO Slot X2 . Inverting 1		[Device Para / Binary Outputs / BO Slot X2 / BO 1]
...		
BO Slot X2 . Inverting 7		
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


BO Slot X2 . Assignment 2		[Device Para / Binary Outputs / BO Slot X2 / BO 1]
...		
BO Slot X2 . Assignment 7		
"-"	"-" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


BO Slot X2 . Operating Mode		[Device Para / Binary Outputs / BO Slot X2 / BO 2]
Normally open (NO)	Normally open (NO), Normally closed (NC)	S.3
	 1...n Operating Modes.	
	<i>Operating Mode</i>	


BO Slot X2 . t-hold	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
0.00s	0.00s ... 300.00s	S.3
	<i>To clearly identify the state transition of a binary output relay, the "new state" is being hold, at least for the duration of the hold time.</i>	


BO Slot X2 . t-Off Delay	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
0.00s	0.00s ... 300.00s	S.3
	<i>Switch Off Delay</i>	


BO Slot X2 . Latched	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Defines whether the Relay Output will be latched when it picks up.</i>	


BO Slot X2 . Acknowledgement	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
"-"	"-" ... Sys . Internal test state	S.3
<i>Only available if:</i>	↳ 1..n, Assignment List.	
	<i>Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.</i>	


BO Slot X2 . Inverting	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Inverting of the collective signal (OR-gate/disjunction). In combination with inverted input signals an AND-gate can be programmed (Conjunction).</i>	


BO Slot X2 . Assignment 1	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
Prot . Alarm	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


BO Slot X2 . Inverting 1	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
...		
BO Slot X2 . Inverting 7		
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		

BO Slot X2 . Assignment 2	[Device Para / Binary Outputs / BO Slot X2 / BO 2]	
...		
BO Slot X2 . Assignment 7		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		

BO Slot X2 . Operating Mode	[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
Normally open (NO)	Normally open (NO), Normally closed (NC) ↳ 1...n Operating Modes.	S.3
 <i>Operating Mode</i>		

BO Slot X2 . t-hold	[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
0.00s	0.00s ... 300.00s	S.3
 <i>To clearly identify the state transition of a binary output relay, the "new state" is being hold, at least for the duration of the hold time.</i>		

BO Slot X2 . t-Off Delay	[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
0.00s	0.00s ... 300.00s	S.3
 <i>Switch Off Delay</i>		

BO Slot X2 . Latched	[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Defines whether the Relay Output will be latched when it picks up.</i>		


BO Slot X2 . Acknowledgement		[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
“-”	“-” ... Sys . Internal test state		S.3
Only available if:	1..n, Assignment List.		
	<i>Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.</i>		


BO Slot X2 . Inverting		[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
inactive	inactive, active		S.3
	Mode.		
	<i>Inverting of the collective signal (OR-gate/disjunction). In combination with inverted input signals an AND-gate can be programmed (Conjunction).</i>		


BO Slot X2 . Assignment 1		[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
SG[1] . ON Cmd	“-” ... Sys . Internal test state		S.3
	1..n, Assignment List.		
	<i>Assignment</i>		


BO Slot X2 . Inverting 1		[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
...			
BO Slot X2 . Inverting 7			
inactive	inactive, active		S.3
	Mode.		
	<i>Inverting of the state of the assigned signal.</i>		


BO Slot X2 . Assignment 2		[Device Para / Binary Outputs / BO Slot X2 / BO 3]	
...			
BO Slot X2 . Assignment 7			
“-”	“-” ... Sys . Internal test state		S.3
	1..n, Assignment List.		
	<i>Assignment</i>		


BO Slot X2 . Operating Mode		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
Normally open (NO)	Normally open (NO), Normally closed (NC)	S.3
	↳ 1...n Operating Modes.	
	<i>Operating Mode</i>	

BO Slot X2 . t-hold		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
0.00s	0.00s ... 300.00s	S.3
	<i>To clearly identify the state transition of a binary output relay, the "new state" is being hold, at least for the duration of the hold time.</i>	


BO Slot X2 . t-Off Delay		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
0.00s	0.00s ... 300.00s	S.3
	<i>Switch Off Delay</i>	


BO Slot X2 . Latched		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Defines whether the Relay Output will be latched when it picks up.</i>	


BO Slot X2 . Acknowledgement		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
"_"	"-" ... Sys . Internal test state	S.3
<i>Only available if:</i>	↳ 1..n, Assignment List.	
	<i>Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.</i>	


BO Slot X2 . Inverting		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the collective signal (OR-gate/disjunction). In combination with inverted input signals an AND-gate can be programmed (Conjunction).</i>	


BO Slot X2 . Assignment 1		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
SG[1] . OFF Cmd	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
BO Slot X2 . Inverting 1		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
...		
BO Slot X2 . Inverting 7		
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
BO Slot X2 . Assignment 2		[Device Para / Binary Outputs / BO Slot X2 / BO 4]
...		
BO Slot X2 . Assignment 7		
“-”	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
BO Slot X2 . Operating Mode		[Device Para / Binary Outputs / BO Slot X2 / BO 5]
Normally open (NO)	Normally open (NO), Normally closed (NC) ↳ 1...n Operating Modes.	S.3
 <i>Operating Mode</i>		
BO Slot X2 . t-hold		[Device Para / Binary Outputs / BO Slot X2 / BO 5]
0.00s	0.00s ... 300.00s	S.3
 <i>To clearly identify the state transition of a binary output relay, the "new state" is being hold, at least for the duration of the hold time.</i>		
BO Slot X2 . t-Off Delay		[Device Para / Binary Outputs / BO Slot X2 / BO 5]
0.00s	0.00s ... 300.00s	S.3
 <i>Switch Off Delay</i>		









BO Slot X2 . Latched	[Device Para / Binary Outputs / BO Slot X2 / BO 5]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Defines whether the Relay Output will be latched when it picks up.</i>		

BO Slot X2 . Acknowledgement	[Device Para / Binary Outputs / BO Slot X2 / BO 5]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
<i>Only available if:</i>		
 <i>Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.</i>		

BO Slot X2 . Inverting	[Device Para / Binary Outputs / BO Slot X2 / BO 5]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the collective signal (OR-gate/disjunction). In combination with inverted input signals an AND-gate can be programmed (Conjunction).</i>		

BO Slot X2 . Assignment 1 ... BO Slot X2 . Assignment 7	[Device Para / Binary Outputs / BO Slot X2 / BO 5]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		

BO Slot X2 . Inverting 1 ... BO Slot X2 . Inverting 7	[Device Para / Binary Outputs / BO Slot X2 / BO 5]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		

BO Slot X2 . DISARMED Ctrl		[Service / Test (Prot inhibit) / DISARMED / BO Slot X2]
inactive	inactive, active  active/inactive.	S.3
	<i>Enables and disables the disarming of the relay outputs. This is the first step of a two step process, to inhibit the operation or the relay outputs. Please refer to "DISARMED" for the second step.</i>	
BO Slot X2 . Disarm Mode		[Service / Test (Prot inhibit) / DISARMED / BO Slot X2]
permanent	permanent, timeout  Mode.	S.3
	<i>CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance.</i>	
BO Slot X2 . t-Timeout DISARM		[Service / Test (Prot inhibit) / DISARMED / BO Slot X2]
0.03s	0.00s ... 300.00s	S.3
Only available if:		
	<i>The relays will be armed again after expiring of this time.</i>	
BO Slot X2 . Force Mode		[Service / Test (Prot inhibit) / Force OR / BO Slot X2]
permanent	permanent, timeout  Mode.	S.3
	<i>By means of this function the normal Output Relay States can be overwritten (forced) in case that the Relay is not in a disarmed state. The relays can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force de-energized" state.</i>	
BO Slot X2 . t-Timeout Force		[Service / Test (Prot inhibit) / Force OR / BO Slot X2]
0.03s	0.00s ... 300.00s	S.3
Only available if:		
	<i>The Output State will be set by force for the duration of this time. That means for the duration of this time the Output Relay does not show the state of the signals that are assigned on it.</i>	

2.3.1.2 BO Slot X2: Direct Controls

BO Slot X2 . DISARMED	[Service / Test (Prot inhibit) / DISARMED / BO Slot X2]	
inactive	inactive, active ↳ active/inactive.	S.3
<p>☉ <i>This is the second step, after the "DISARMED Ctrl" has been activated, that is required to DISARM the relay outputs. This will DISARM those output relays that are currently not latched and that are not on "hold" by a pending minimum hold time. CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: Zone Interlocking and Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance.</i></p>		

BO Slot X2 . Force all Outs	[Service / Test (Prot inhibit) / Force OR / BO Slot X2]	
Normal	Normal, De-Energized, Energized ↳ Relay operating modes.	S.3
<p>☉ <i>By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force de-energized" state. Forcing all outputs relays of an entire assembly group is superior to forcing a single output relay.</i></p>		

BO Slot X2 . Force OR1	[Service / Test (Prot inhibit) / Force OR / BO Slot X2]	
...		
BO Slot X2 . Force OR5		
Normal	Normal, De-Energized, Energized ↳ Relay operating modes.	S.3
<p>☉ <i>By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force de-energized" state.</i></p>		

2.3.1.3 BO Slot X2: Signals (Output States)

BO Slot X2 . BO 1	[Operation / Status Display / BO Slot X2]	
...		
BO Slot X2 . BO 5		
↑	Signal: Binary Output Relay	

BO Slot X2 . DISARMED!	[Operation / Status Display / BO Slot X2]
-------------------------------	---



↑	<i>Signal: CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Self Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance</i>
---	--



BO Slot X2 . Outs forced	[Operation / Status Display / BO Slot X2]
---------------------------------	---



↑	<i>Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.</i>
---	---



2.4 LEDs



2.4.1 LEDs group A: Settings


LEDs group A . Latched		[Device Para / LEDs / LED 1]
inactive	inactive, active, active, ack. by alarm	S.3
	 Mode.	
	<i>Defines whether the LED will be latched when it picks up.</i>	


LEDs group A . Ack signal		[Device Para / LEDs / LED 1]
"-"	"-" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>	


LEDs group A . LED active color		[Device Para / LEDs / LED 1]
green	green, red, red flash, green flash, "-"	S.3
	 LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>	


LEDs group A . LED inactive color		[Device Para / LEDs / LED 1]
"-"	green, red, red flash, green flash, "-"	S.3
	 LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	


LEDs group A . Assignment 1		[Device Para / LEDs / LED 1]
Prot . active	"-" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 1]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		

LEDs group A . Assignment 2		[Device Para / LEDs / LED 1]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		


LEDs group A . Inverting 2		[Device Para / LEDs / LED 1]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		


LEDs group A . Assignment 3		[Device Para / LEDs / LED 1]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		


LEDs group A . Inverting 3		[Device Para / LEDs / LED 1]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		


LEDs group A . Assignment 4		[Device Para / LEDs / LED 1]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		


LEDs group A . Inverting 4		[Device Para / LEDs / LED 1]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Assignment 5		[Device Para / LEDs / LED 1]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
LEDs group A . Inverting 5		[Device Para / LEDs / LED 1]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Latched		[Device Para / LEDs / LED 2]
active	inactive, active, active, ack. by alarm ↳ Mode.	S.3
 <i>Defines whether the LED will be latched when it picks up.</i>		
LEDs group A . Ack signal		[Device Para / LEDs / LED 2]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>		
LEDs group A . LED active color		[Device Para / LEDs / LED 2]
red	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
 <i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>		


LEDs group A . LED inactive color		[Device Para / LEDs / LED 2]
"_"	green, red, red flash, green flash, "-"	S.3
	↳ LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	



LEDs group A . Assignment 1		[Device Para / LEDs / LED 2]
SG[1] . TripCmd	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	



LEDs group A . Inverting 1		[Device Para / LEDs / LED 2]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	



LEDs group A . Assignment 2		[Device Para / LEDs / LED 2]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	



LEDs group A . Inverting 2		[Device Para / LEDs / LED 2]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	



LEDs group A . Assignment 3		[Device Para / LEDs / LED 2]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	



LEDs group A . Inverting 3		[Device Para / LEDs / LED 2]
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 4		[Device Para / LEDs / LED 2]
"_"	"_" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 4		[Device Para / LEDs / LED 2]
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 5		[Device Para / LEDs / LED 2]
"_"	"_" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 5		[Device Para / LEDs / LED 2]
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Latched		[Device Para / LEDs / LED 3]
inactive	inactive, active, active, ack. by alarm	S.3
	 Mode.	
	<i>Defines whether the LED will be latched when it picks up.</i>	


LEDs group A . Ack signal		[Device Para / LEDs / LED 3]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>	


LEDs group A . LED active color		[Device Para / LEDs / LED 3]
red flash	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>	


LEDs group A . LED inactive color		[Device Para / LEDs / LED 3]
"_"	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	


LEDs group A . Assignment 1		[Device Para / LEDs / LED 3]
Prot . Alarm	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 3]
inactive	inactive, active ↳ Mode.	S.3
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 2		[Device Para / LEDs / LED 3]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


LEDs group A . Inverting 2		[Device Para / LEDs / LED 3]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	

LEDs group A . Assignment 3		[Device Para / LEDs / LED 3]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 3		[Device Para / LEDs / LED 3]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 4		[Device Para / LEDs / LED 3]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 4		[Device Para / LEDs / LED 3]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 5		[Device Para / LEDs / LED 3]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 5		[Device Para / LEDs / LED 3]
inactive	inactive, active ↳ Mode.	S.3
	<i>Inverting of the state of the assigned signal.</i>	
LEDs group A . Latched		[Device Para / LEDs / LED 4]
inactive	inactive, active, active, ack. by alarm ↳ Mode.	S.3
	<i>Defines whether the LED will be latched when it picks up.</i>	
LEDs group A . Ack signal		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>	
LEDs group A . LED active color		[Device Para / LEDs / LED 4]
red	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>	
LEDs group A . LED inactive color		[Device Para / LEDs / LED 4]
"_"	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	
LEDs group A . Assignment 1		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 4]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		

LEDs group A . Assignment 2		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		


LEDs group A . Inverting 2		[Device Para / LEDs / LED 4]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		


LEDs group A . Assignment 3		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		


LEDs group A . Inverting 3		[Device Para / LEDs / LED 4]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		


LEDs group A . Assignment 4		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		


LEDs group A . Inverting 4		[Device Para / LEDs / LED 4]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Assignment 5		[Device Para / LEDs / LED 4]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
LEDs group A . Inverting 5		[Device Para / LEDs / LED 4]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Latched		[Device Para / LEDs / LED 5]
inactive	inactive, active, active, ack. by alarm ↳ Mode.	S.3
 <i>Defines whether the LED will be latched when it picks up.</i>		
LEDs group A . Ack signal		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>		
LEDs group A . LED active color		[Device Para / LEDs / LED 5]
red	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
 <i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>		


LEDs group A . LED inactive color		[Device Para / LEDs / LED 5]
"_"	green, red, red flash, green flash, "-"	S.3
	↳ LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	

LEDs group A . Assignment 1		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 5]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 2		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 2		[Device Para / LEDs / LED 5]
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 3		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 3		[Device Para / LEDs / LED 5]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Assignment 4		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
LEDs group A . Inverting 4		[Device Para / LEDs / LED 5]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Assignment 5		[Device Para / LEDs / LED 5]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Assignment</i>		
LEDs group A . Inverting 5		[Device Para / LEDs / LED 5]
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting of the state of the assigned signal.</i>		
LEDs group A . Latched		[Device Para / LEDs / LED 6]
inactive	inactive, active, active, ack. by alarm ↳ Mode.	S.3
 <i>Defines whether the LED will be latched when it picks up.</i>		


LEDs group A . Ack signal		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>	


LEDs group A . LED active color		[Device Para / LEDs / LED 6]
red	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>	


LEDs group A . LED inactive color		[Device Para / LEDs / LED 6]
"_"	green, red, red flash, green flash, "-" ↳ LED active color.	S.3
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	


LEDs group A . Assignment 1		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 6]
inactive	inactive, active ↳ Mode.	S.3
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Assignment 2		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Assignment</i>	


LEDs group A . Inverting 2		[Device Para / LEDs / LED 6]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		



LEDs group A . Assignment 3		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		



LEDs group A . Inverting 3		[Device Para / LEDs / LED 6]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		



LEDs group A . Assignment 4		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		



LEDs group A . Inverting 4		[Device Para / LEDs / LED 6]
inactive	inactive, active	S.3
	↳ Mode.	
 <i>Inverting of the state of the assigned signal.</i>		



LEDs group A . Assignment 5		[Device Para / LEDs / LED 6]
"_"	"_" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
 <i>Assignment</i>		



LEDs group A . Inverting 5		[Device Para / LEDs / LED 6]
inactive	inactive, active	S.3
	 Mode.	
	<i>Inverting of the state of the assigned signal.</i>	


LEDs group A . Latched		[Device Para / LEDs / LED 7]
inactive	inactive, active, active, ack. by alarm	S.3
	 Mode.	
	<i>Defines whether the LED will be latched when it picks up.</i>	


LEDs group A . Ack signal		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.</i>	


LEDs group A . LED active color		[Device Para / LEDs / LED 7]
red	green, red, red flash, green flash, "-"	S.3
	 LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is true.</i>	


LEDs group A . LED inactive color		[Device Para / LEDs / LED 7]
"_"	green, red, red flash, green flash, "-"	S.3
	 LED active color.	
	<i>The LED lights up in this color if the state of the OR-assignment of the signals is untrue.</i>	


LEDs group A . Assignment 1		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Assignment</i>	


LEDs group A . Inverting 1		[Device Para / LEDs / LED 7]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		



LEDs group A . Assignment 2		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		



LEDs group A . Inverting 2		[Device Para / LEDs / LED 7]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		



LEDs group A . Assignment 3		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		

LEDs group A . Inverting 3		[Device Para / LEDs / LED 7]
inactive	inactive, active	S.3
		↳ Mode.
 <i>Inverting of the state of the assigned signal.</i>		


LEDs group A . Assignment 4		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
		↳ 1..n, Assignment List.
 <i>Assignment</i>		


LEDs group A . Inverting 4		[Device Para / LEDs / LED 7]
inactive	inactive, active	S.3
		 Mode.
 <i>Inverting of the state of the assigned signal.</i>		

LEDs group A . Assignment 5		[Device Para / LEDs / LED 7]
"_"	"_" ... Sys . Internal test state	S.3
		 1..n, Assignment List.
 <i>Assignment</i>		


LEDs group A . Inverting 5		[Device Para / LEDs / LED 7]
inactive	inactive, active	S.3
		 Mode.
 <i>Inverting of the state of the assigned signal.</i>		

2.5 HMI - front-panel



Password	[Device Para / Security / Password]
 This item represents a special dialog. (See the Technical Manual for details.)	
	<i>Changing the password</i>


Access Level	[Device Para / Security / Access Level]
 This item represents a special dialog. (See the Technical Manual for details.)	
	<i>Access Level</i>

2.5.1 HMI: Settings

HMI . Display Off	[Device Para / HMI]	
180s	20s ... 3600s	S.3
 <i>The display back light will be turned off when this timer has expired.</i>		

HMI . Menu language	[Device Para / HMI]	
English	English ... Romanian	S.3
	 Selection.	
 <i>Selection of the language</i>		

HMI . Display ANSI Device No.	[Device Para / HMI]	
active	inactive, active	S.3
	 Mode.	
 <i>Display ANSI Device Numbers</i>		

HMI . t-max Edit/Access	[Device Para / Security / General Settings]	
180s	20s ... 3600s	S.3
 <i>If no other key(s) is pressed at the panel, after expiration of this time, all cached (changed) parameters are canceled. The device access will be locked by falling back into Read-only level Lv0.</i>		

2.5.2 HMI: Direct Controls


HMI . Contrast		[Device Para / HMI]
50%	0% ... 100%	S.3
☉	<i>Contrast</i>	
HMI . Config. Device Reset		[Device Para / Security / General Settings]
"Fact.def.", "PW rst"	"Fact.def.", "PW rst", Only "Fact.defaults", Reset deact. ↳ Config. Device Reset.	S.3
☉	<i>If the »C« key is pressed while the device is performing a cold restart a general Reset Dialog appears on the screen. Select which options shall be available with this dialog.</i>	


2.5.3 HMI: Values


HMI . Config. Device Reset		[Operation / Security / Security States]
"Fact.def.", "PW rst"	"Fact.def.", "PW rst", Only "Fact.defaults", Reset deact. ↳ Config. Device Reset.	
✎	<i>If the »C« key is pressed while the device is performing a cold restart a general Reset Dialog appears on the screen. Select which options shall be available with this dialog.</i>	


3 Security


- Ctrl . Switching Authority: [↩️➤ Table](#)
- HMI . Config. Device Reset: [↩️➤ Table](#)
- HMI . t-max Edit/Access: [↩️➤ Table](#)
- HMI . Config. Device Reset: [↩️➤ Table](#)
- Password: [↩️➤ Table](#)
- Access Level: [↩️➤ Table](#)


Sys . Smart view via USB	[Operation / Security / Security States]
active	inactive, active ↩️➤ Mode.
 <i>Information whether or not the Smart view access via the USB interface is activated (allowed).</i>	


Sys . Smart view via Eth	[Operation / Security / Security States]
active <i>Avail. depends on HW</i>	inactive, active ↩️➤ Mode.
 <i>Information whether or not the Smart view access via the Ethernet interface is activated (allowed).</i>	


Sys . Passw. for USB conn.	[Operation / Security / Security States]
disabled	disabled, default, def. by user ↩️➤ Type of passw. def..
 <i>Type / Security-level of the connection password that is used for a USB connection.</i>	

Sys . Passw.remote net.conn.	[Operation / Security / Security States]
disabled <i>Avail. depends on HW</i>	disabled, default, def. by user ↩️➤ Type of passw. def..
 <i>Type / Security-level of the connection password that is used for a Smart view connection via some network interface.</i>	

Sys . TLS Certificate	[Operation / Security / Security States]	
Device-specific	Device-specific, Basic, Corrupt ↳ TLS Certificate.	
	<i>Type of certificate that the device uses for the encrypted communication. This value is directly related to the security-level of the communication.</i>	


Security Logger	[Operation / Security / Security Logger]	
	This item represents a special dialog. (See the Technical Manual for details.) <i>Security-related messages</i>	


Sys . Smart view via USB	[Device Para / Security / Communication]	
active	inactive, active ↳ Mode.	S.3
	<i>Activate (allow) or inactivate (disallow) the Smart view access via the USB interface.</i>	

Sys . Smart view via Eth	[Device Para / Security / Communication]	
active <i>Avail. depends on HW</i>	inactive, active ↳ Mode.	S.3
	<i>Activate (allow) or inactivate (disallow) the Smart view access via the Ethernet interface.</i>	

4 Field settings


4.1 Field Para: Settings


Field Para . Phase Sequence	[Field Para / General Settings]	
ABC	ABC, ACB ↳ Phase Sequence.	S.3
 <i>Phase Sequence</i>		


Field Para . f	[Field Para / General Settings]	
50Hz	50Hz, 60Hz ↳ fN.	S.3
 <i>Nominal frequency</i>		


4.2 CT - Current Transformer


4.2.1 CT: Settings



CT . IL1, IL2, IL3 Cutoff Level	[Device Para / Measur em Display / Current]	
0.005In	0.0In ... 0.100In	S.3
	<i>The Current shown in the Display or within the PC Software will be displayed as zero, if the Current falls below this Cutoff Level. This parameter has no impact on recorders.</i>	



CT . IG meas Cutoff Level	[Device Para / Measur em Display / Current]	
0.005In	0.0In ... 0.100In	S.3
	<i>The measured Earth Current shown in the Display or within the PC Software will be displayed as zero, if the measured Earth Current falls below this Cutoff Level. This parameter has no impact on recorders.</i>	


CT . IG calc Cutoff Level	[Device Para / Measur em Display / Current]	
0.005In	0.0In ... 0.100In	S.3
	<i>The calculated Earth Current shown in the Display or within the PC Software will be displayed as zero, if the calculated Earth Current falls below this Cutoff Level. This parameter has no impact on recorders.</i>	



CT . I012 Cutoff Level	[Device Para / Measur em Display / Current]	
0.005In	0.0In ... 0.100In	S.3
	<i>The Symmetrical Component shown in the Display or within the PC Software will be displayed as zero, if the Symmetrical Component falls below this Cutoff Level. This parameter has no impact on recorders.</i>	



CT . CT pri	[Field Para / CT]	
1000A	1A ... 50000A	S.3
	<i>Nominal current of the primary side of the current transformers.</i>	

CT . CT sec	[Field Para / CT]	
1A	1A, 5A	S.3
	 Ratio prim/sec.	
	<i>Nominal current of the secondary side of the current transformers.</i>	


CT . CT dir		[Field Para / CT]
0°	0°, 180°	S.3
 Polarity.		
 <i>Protection functions with directional feature can only work properly if the connection of the current transformers is free of wiring errors. If all current transformers are connected to the device with an incorrect polarity, the wiring error can be compensated by this parameter. This parameter turns the current vectors by 180 degrees.</i>		

CT . ECT pri		[Field Para / CT]
1000A	1A ... 50000A	S.3
 <i>This parameter defines the primary nominal current of the connected earth current transformer. If the earth current is measured via the Holmgreen connection, the primary value of the phase current transformer must be entered here.</i>		












CT . ECT sec		[Field Para / CT]
1A	1A, 5A	S.3
 Ratio prim/sec.		
 <i>This parameter defines the secondary nominal current of the connected earth current transformer. If the earth current is done via the Holmgreen connection, the primary value of the phase current transformer must be entered here.</i>		








CT . ECT dir		[Field Para / CT]
0°	0°, 180°	S.3
 Polarity.		
 <i>Earth fault protection with directional feature depends also on the correct wiring of the earth current transformer. An incorrect polarity/wiring can be corrected by means of the settings "0°" or "180°". The operator has the possibility of turning the current vector by 180 degrees (change of sign) without modification of the wiring. This means, that - in terms of figures - the determined current indicator was turned by 180° by the device.</i>		


4.2.2 CT: Signals (Output States)


CT . Phase seq. wrong		[Operation / Status Display / Supervision / Phase Sequence]
	<i>Signal that the device has detected a phase sequence (L1-L2-L3 / L1-L3-L2) that is different from the one that had been set at [Field settings / General Settings] »Phase Sequence«.</i>	


4.2.3 CT: Values


CT . IL1	[Operation / Measured Values / Current]
 <i>Measured value: Phase current (fundamental)</i>	
CT . IL2	[Operation / Measured Values / Current]
 <i>Measured value: Phase current (fundamental)</i>	
CT . IL3	[Operation / Measured Values / Current]
 <i>Measured value: Phase current (fundamental)</i>	
CT . IG meas	[Operation / Measured Values / Current]
 <i>Measured value (measured): IG (fundamental)</i>	
CT . IG calc	[Operation / Measured Values / Current]
 <i>Measured value (calculated): IG (fundamental)</i>	
CT . IO	[Operation / Measured Values / Current]
 <i>Measured value (calculated): Zero current (fundamental)</i>	
CT . I1	[Operation / Measured Values / Current]
 <i>Measured value (calculated): Positive phase sequence current (fundamental)</i>	
CT . I2	[Operation / Measured Values / Current]
 <i>Measured value (calculated): Unbalanced load current (fundamental)</i>	
CT . IL1 H2	[Operation / Measured Values / Current]
 <i>Measured value: 2nd harmonic/1st harmonic of IL1</i>	
CT . IL2 H2	[Operation / Measured Values / Current]
 <i>Measured value: 2nd harmonic/1st harmonic of IL2</i>	
CT . IL3 H2	[Operation / Measured Values / Current]
 <i>Measured value: 2nd harmonic/1st harmonic of IL3</i>	


CT . IG H2 meas	[Operation / Measured Values / Current]
 Measured value: 2nd harmonic/1st harmonic of IG (measured)	
CT . IG H2 calc	[Operation / Measured Values / Current]
 Measured value (calculated): 2nd harmonic/1st harmonic of IG (calculated)	
CT . %(I2/I1)	[Operation / Measured Values / Current]
 Measured value (calculated): I2/I1, phase sequence will be taken into account automatically.	
CT . phi IL1	[Operation / Measured Values / Current]
 Measured value (calculated): Angle of Phasor IL1	
	Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.
CT . phi IL2	[Operation / Measured Values / Current]
 Measured value (calculated): Angle of Phasor IL2	
	Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.
CT . phi IL3	[Operation / Measured Values / Current]
 Measured value (calculated): Angle of Phasor IL3	
	Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.
CT . phi IG meas	[Operation / Measured Values / Current]
 Measured value (calculated): Angle of Phasor IG meas	
	Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.
CT . phi IG calc	[Operation / Measured Values / Current]
 Measured value (calculated): Angle of Phasor IG calc	
	Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.


CT . phi I0	[Operation / Measured Values / Current]
 <i>Measured value (calculated): Angle Zero Sequence System</i>	
	<i>Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.</i>


CT . phi I1	[Operation / Measured Values / Current]
 <i>Measured value (calculated): Angle of Positive Sequence System</i>	
	<i>Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.</i>


CT . phi I2	[Operation / Measured Values / Current]
 <i>Measured Value (calculated): Angle of Negative Sequence System</i>	
	<i>Reference phasor is required to calculate the angle. This is the first measured voltage (or current) channel with sufficiently high amplitude.</i>


CT . IL1 RMS	[Operation / Measured Values / Current RMS]
 <i>Measured value: Phase current (RMS)</i>	


CT . IL2 RMS	[Operation / Measured Values / Current RMS]
 <i>Measured value: Phase current (RMS)</i>	





CT . IL3 RMS	[Operation / Measured Values / Current RMS]
 <i>Measured value: Phase current (RMS)</i>	

CT . IG meas RMS	[Operation / Measured Values / Current RMS]
 <i>Measured value (measured): IG (RMS)</i>	

CT . IG calc RMS	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IG (RMS)</i>	

CT . %IL1 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL1 Total Harmonic Distortion</i>	

CT . %IL2 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL2 Total Harmonic Distortion</i>	

CT . %IL3 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL3 Total Harmonic Distortion</i>	
CT . IL1 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL1 Total Harmonic Current</i>	
CT . IL2 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL2 Total Harmonic Current</i>	
CT . IL3 THD	[Operation / Measured Values / Current RMS]
 <i>Measured value (calculated): IL3 Total Harmonic Current</i>	

4.2.4 CT: Statistical Values

CT . IL1 avg RMS	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL1 average value (RMS)</i>	
CT . IL2 avg RMS	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL2 average value (RMS)</i>	
CT . IL3 avg RMS	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL3 average value (RMS)</i>	
CT . IL1 Peak (Demand)	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL1 Peak value, RMS value</i>	
CT . IL2 Peak (Demand)	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL2 Peak value, RMS value</i>	
CT . IL3 Peak (Demand)	[Operation / Statistics / Demand / Current Demand]
<input checked="" type="checkbox"/> <i>IL3 Peak value, RMS value</i>	
CT . IL1 max RMS	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>IL1 maximum value (RMS)</i>	

CT . IL2 max RMS	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>IL2 maximum value (RMS)</i>	
CT . IL3 max RMS	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>IL3 maximum value (RMS)</i>	
CT . IG meas max RMS	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Measured value: IG maximum value (RMS)</i>	
CT . IG calc max RMS	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Measured value (calculated):IG maximum value (RMS)</i>	
CT . I1 max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Maximum value positive phase sequence current (fundamental)</i>	
CT . I2 max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Maximum value negative sequence current (fundamental)</i>	
CT . %(I2/I1) max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Measured value (calculated): I2/I1 maximum value, phase sequence will be taken into account automatically</i>	
CT . IL1 H2 max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Maximum ratio of 2nd harmonic over fundamental of IL1</i>	
CT . IL2 H2 max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Maximum ratio of 2nd harmonic over fundamental of IL2</i>	
CT . IL3 H2 max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Maximum ratio of 2nd harmonic over fundamental of IL3</i>	
CT . IG H2 meas max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Measured value: Maximum ratio of 2nd harmonic over fundamental of IG (measured)</i>	
CT . IG H2 calc max	[Operation / Statistics / Max / Current]
<input checked="" type="checkbox"/> <i>Measured value (calculated): Maximum ratio of 2nd harmonic over fundamental of IG (calculated)</i>	

4 Field settings

4.2.4 CT: Statistical Values

CT . IL1 min RMS	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>IL1 minimum value (RMS)</i>	
CT . IL2 min RMS	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>IL2 minimum value (RMS)</i>	
CT . IL3 min RMS	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>IL3 minimum value (RMS)</i>	
CT . IG meas min RMS	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Measured value: IG minimum value (RMS)</i>	
CT . IG calc min RMS	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Measured value (calculated):IG minimum value (RMS)</i>	
CT . I1 min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Minimum value positive phase sequence current (fundamental)</i>	
CT . I2 min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Minimum value unbalanced load current (fundamental)</i>	
CT . %(I2/I1) min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Measured value (calculated): I2/I1 minimum value, phase sequence will be taken into account automatically</i>	
CT . IL1 H2 min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Minimum ratio of 2nd harmonic over fundamental of IL1</i>	
CT . IL2 H2 min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Minimum ratio of 2nd harmonic over fundamental of IL2</i>	
CT . IL3 H2 min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Minimum ratio of 2nd harmonic/1st harmonic minimum value of IL3</i>	
CT . IG H2 meas min	[Operation / Statistics / Min / Current]
<input checked="" type="checkbox"/> <i>Measured value: Minimum ratio of 2nd harmonic over fundamental of IG (measured)</i>	

CT . IG H2 calc min

[Operation / Statistics / Min / Current]

IG H2 calc min

5 System

5.1 Sys: Settings


Sys . Scaling		[Device Para / Measurment Display / General Settings]
Per unit values	Per unit values, Primary values, Secondary values	S.3
↳ Scaling.		
🔗 <i>Display of the measured values as primary, secondary or per unit values</i>		


Sys . Ack via »C« key		[Device Para / Acknowledge]
Ack LEDs w/o passw.	Nothing, Ack LEDs w/o passw., Ack LEDs, Ack LEDs and relays, Ack Everything	P.2
↳ Ack via »C« key.		
🔗 <i>Select which acknowledgeable elements can be reset via pressing the »C« key.</i>		


Sys . Remote Reset		[Device Para / Acknowledge]
active	inactive, active	P.2
↳ Mode.		
🔗 <i>Enables or disables the option to acknowledge from external/remote via signals (assignments) and SCADA.</i>		


Sys . Ack LED		[Device Para / Acknowledge]
"_"	"_" ... Sys . Internal test state	S.3
Only available if:	↳ 1..n, Assignment List.	
🔗 <i>All acknowledgeable LEDs will be acknowledged if the state of the assigned signal becomes true.</i>		

Sys . Ack BO		[Device Para / Acknowledge]
"_"	"_" ... Sys . Internal test state	S.3
Only available if:	↳ 1..n, Assignment List.	
🔗 <i>All acknowledgeable binary output relays will be acknowledged if the state of the assigned signal becomes true.</i>		


Sys . Ack Scada		[Device Para / Acknowledge]
"_"	"_" ... Sys . Internal test state	S.3
Only available if:		↳ 1..n, Assignment List.
	<i>Latched SCADA signals are acknowledged if the state of the assigned signal becomes true.</i>	

Sys . Setting Lock		[Field Para / General Settings]
"_"	"_" ... Sys . Internal test state	P.2
		↳ 1..n, Assignment List.
	<i>No parameters can be changed as long as this input is true. The parameter settings are locked.</i>	

Sys . PSet-Switch		[Protection Para / PSet-Switch]
PS1	PS1, PS2, PS3, PS4, PSS via Inp fct, PSS via Scada	P.2
		↳ PSet-Switch.
	<i>Switching Parameter Set</i>	

Sys . PS1: activated by		[Protection Para / PSet-Switch]
...		
Sys . PS4: activated by		
"_"	"_" ... Logics . LE80.Out inverted	P.2
		↳ 1..n, PSS.
	<i>This Setting Group will be the active one if: The Parameter Setting Group Switch is set to "Switch via Input" and the other three input functions are inactive at the same time. In case that there is more than one input function active, no Parameter Setting Group Switch will be executed. In case all input functions are inactive, the device will keep working with the Setting Group that was activated lastly.</i>	

5.2 Sys: Direct Controls

Sys . Ack BO LED Scd Trips		[Operation / Acknowledge]
inactive	inactive, active	P.1
		↳ Mode.
	<i>Acknowledge (reset) latched binary output relays, LEDs, SCADA and Trips.</i>	

Sys . Ack LED	[Operation / Acknowledge]	
inactive	inactive, active ↳ Mode.	P.1
<p>☉ <i>All acknowledgeable LEDs will be acknowledged.</i></p>		

Sys . Ack BO	[Operation / Acknowledge]	
inactive	inactive, active ↳ Mode.	P.1
<p>☉ <i>All acknowledgeable binary output relays are acknowledged.</i></p>		

Sys . Ack Scada	[Operation / Acknowledge]	
inactive	inactive, active ↳ Mode.	P.1
<p>☉ <i>Latched SCADA signals are acknowledged.</i></p>		

Sys . Setting Lock Bypass	[Field Para / General Settings]	
inactive	inactive, active ↳ Mode.	P.1
<p>☉ <i>Short-period unlock of the Setting Lock</i></p>		

Sys . Reboot	[Service / General]	
no	no, yes ↳ yes/no.	S.3
<p>☉ <i>Rebooting the device.</i></p>		

5.3 Sys: Input States

Sys . Ack LED-I	[Operation / Status Display / Sys]	
<p>↓ <i>Module input state: LEDs acknowledgement by digital input</i></p>		

Sys . Ack BO-I	[Operation / Status Display / Sys]	
<p>↓ <i>Module input state: Acknowledgement of the binary Output Relays</i></p>		

Sys . Ack Scada-I	[Operation / Status Display / Sys]
↓	<i>Module input state: Acknowledge latched SCADA signals.</i>

Sys . PS1-I	[Operation / Status Display / Sys]
...	
Sys . PS4-I	
↓	<i>State of the module input respectively of the signal, that should activate this Parameter Setting Group.</i>

Sys . Setting Lock-I	[Operation / Status Display / Sys]
↓	<i>State of the module input: No parameters can be changed as long as this input is true. The parameter settings are locked.</i>

5.4 Sys: Signals (Output States)

Sys . Reboot	[Operation / Status Display / Sys]
↓	<i>Signal: Rebooting the device.</i>
	<i>Device Start-up Codes: 1=Normal Start-up; 2=Reboot by the Operator; 3=Reboot by means of Super Reset; 4=outdated; 5=outdated; 6=Unknown Error Source; 7=Forced Reboot (initiated by the main processor); 8=Exceeded Time Limit of the Protection Cycle; 9= Forced Reboot (initiated by the digital signal processor); 10=Exceeded Time Limit of the Measured Value Processing; 11=Sags of the Supply Voltage; 12=Illegal Memory Access.</i>

Sys . Act Set	[Operation / Status Display / Sys]
	[Protection Para / PSet-Switch]
↓	<i>Signal: Active Parameter Set</i>

Sys . PS 1	[Operation / Status Display / Sys]
↓	<i>Signal: The currently active Parameter Set is PS 1</i>










Sys . PS 2	[Operation / Status Display / Sys]
↓	<i>Signal: The currently active Parameter Set is PS 2</i>

Sys . PS 3	[Operation / Status Display / Sys]
↓	<i>Signal: The currently active Parameter Set is PS 3</i>

Sys . PS 4	[Operation / Status Display / Sys]
↑	<i>Signal: The currently active Parameter Set is PS 4</i>
Sys . PSS manual	[Operation / Status Display / Sys]
↑	<i>Signal: Manual Switch over of a Parameter Set</i>
Sys . PSS via Scada	[Operation / Status Display / Sys]
↑	<i>Signal: Parameter Set Switch via Scada. Write into this output byte the integer of the parameter set that should become active (e.g. 4 => Switch onto parameter set 4).</i>
Sys . PSS via Inp fct	[Operation / Status Display / Sys]
↑	<i>Signal: Parameter Set Switch via input function</i>
Sys . min 1 param changed	[Operation / Status Display / Sys]
↑	<i>Signal: At least one parameter has been changed</i>
Sys . Setting Lock Bypass	[Operation / Status Display / Sys]
↑	<i>Signal: Short-period unlock of the Setting Lock</i>
Sys . Ack LED	[Operation / Status Display / Sys]
↑	<i>Signal: LEDs acknowledgement</i>
Sys . Ack BO	[Operation / Status Display / Sys]
↑	<i>Signal: Acknowledgement of the Binary Outputs</i>
Sys . Ack Scada	[Operation / Status Display / Sys]
↑	<i>Signal: Acknowledge latched SCADA signals</i>
Sys . Ack TripCmd	[Operation / Status Display / Sys]
↑	<i>Signal: Reset Trip Command</i>
Sys . Ack LED-HMI	[Operation / Status Display / Sys]
↑	<i>Signal: LEDs acknowledgement, triggered at the HMI</i>
Sys . Ack BO-HMI	[Operation / Status Display / Sys]
↑	<i>Signal: Acknowledgement of the Binary Outputs, triggered at the HMI</i>

Sys . Ack Scada-HMI	[Operation / Status Display / Sys]
⤴	<i>Signal: Acknowledge latched SCADA signals, triggered at the HMI</i>
Sys . Ack TripCmd-HMI	[Operation / Status Display / Sys]
⤴	<i>Signal: Reset Trip Command, triggered at the HMI</i>
Sys . Ack LED-Sca	[Operation / Status Display / Sys]
⤴	<i>Signal: LEDs acknowledgement, triggered via SCADA</i>
Sys . Ack BO-Sca	[Operation / Status Display / Sys]
⤴	<i>Signal: Acknowledgement of the Binary Outputs, triggered via SCADA</i>
Sys . Ack Counter-Sca	[Operation / Status Display / Sys]
⤴	<i>Signal: Reset of all Counters, triggered via SCADA</i>
Sys . Ack Scada-Sca	[Operation / Status Display / Sys]
⤴	<i>Signal: Acknowledge latched SCADA signals, triggered via SCADA</i>
Sys . Ack TripCmd-Sca	[Operation / Status Display / Sys]
⤴	<i>Signal: Reset Trip Command, triggered via SCADA</i>
Sys . Res OperationsCr	[Operation / Status Display / Sys]
⤴	<i>Signal:: Res OperationsCr</i>
Sys . Res AlarmCr	[Operation / Status Display / Sys]
⤴	<i>Signal:: Res AlarmCr</i>
Sys . Res TripCmdCr	[Operation / Status Display / Sys]
⤴	<i>Signal:: Res TripCmdCr</i>
Sys . Res TotalCr	[Operation / Status Display / Sys]
⤴	<i>Signal:: Res TotalCr</i>

5.5 Sys: Values

Sys . Operating hours Cr	[Operation / Count and RevData / Sys]
 <i>Operating hours counter of the protective device</i>	
Sys . DM version	[Device Para / Version]
3.7.b	3.7.b 
 <i>Version of the device model</i>	
Sys . SW version	[Device Para / Version]
 <i>Version of the device firmware</i>	
Sys . Build	[Device Para / Version]
 <i>Build Number</i>	
Sys . CAT No	[Device Para / Version]
 <i>»CAT No.«, Order Code as printed on the nameplate of the device.</i>	
Sys . REV.	[Device Para / Version]
 <i>Revision (as printed on the nameplate of the device).</i>	
Sys . S/N	[Device Para / Version]
 <i>The serial number of the device.</i>	
Sys . Bootloader Build	[Device Para / Version]
 <i>Build number of the bootloader</i>	

6 Measured Values


- HMI - front-panel: [↪](#) “2.5.3 HMI: Values”
- CT - Current Transformer: [↪](#) “4.2.3 CT: Values”
- System: [↪](#) “5.5 Sys: Values”
- Modbus: [↪](#) “8.5.5 Modbus: Values”
- IEC 61850 - IEC 61850 communication: [↪](#) “8.6.4 IEC 61850: Values”
- IEC103 - IEC 60870-5-103 communication: [↪](#) “8.7.4 IEC103: Values”
- IEC104 - IEC 60870-5-104 communication: [↪](#) “8.8.4 IEC104: Values”
- Profibus - Profibus Module: [↪](#) “8.9.5 Profibus: Values”
- SNTP - SNTP-Module: [↪](#) “8.11.5 SNTP: Values”
- ThR - Thermal replica module: [↪](#) “9.8.7 ThR: Values”
- Control: [↪](#) “10.6 Ctrl: Values”
- Breaker Wear: [↪](#) “10.7.5.4 SG[1]: Values”
- Disturb rec - After a trigger event has become true, the disturbance recorder writes analogue and digital tracks: [↪](#) “12.2.5 Disturb rec: Values”
- Sgen - Sine wave generator: [↪](#) “15.1.6 Sgen: Values”


7 Statistics

- CT - Current Transformer: [↳ “4.2.4 CT: Statistical Values”](#)
- ThR - Thermal replica module: [↳ “9.8.8 ThR: Statistical Values”](#)


7.1 Statistics: Settings


Statistics . Start I Demand via:		[Device Para / Statistics / Demand / Current Demand]
Duration	Duration, StartFct	S.3
	↳ Duration.	
	<i>Statistics/Demand Management: Start Current demand by the set trigger.</i>	
Statistics . Start I Demand Fc		[Device Para / Statistics / Demand / Current Demand]
“-”	“-” ... Sys . Internal test state	S.3
<i>Only available if:</i>	↳ 1..n, Assignment List.	
	<i>If the trigger for Current Demand has been set to “StartFct”: Start of the calculation as soon as the assigned signal becomes true.</i>	
Statistics . ResFc I Demand		[Device Para / Statistics / Demand / Current Demand]
“-”	“-” ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Resetting of Statistics - Current Demand (avg, peak avg)</i>	
Statistics . Duration I Demand		[Device Para / Statistics / Demand / Current Demand]
15 s	2 s ... 30 d	S.3
<i>Only available if:</i>	↳ Duration.	
	<i>Recording time</i>	
Statistics . Window I Demand		[Device Para / Statistics / Demand / Current Demand]
sliding	sliding, fixed	S.3
	↳ Window configuration.	
	<i>Window configuration</i>	


Statistics . ResFc Max	[Device Para / Statistics / Min / Max]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Resetting of all Maximum values</i>		


Statistics . ResFc Min	[Device Para / Statistics / Min / Max]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Resetting of all Minimum values</i>		

7.2 Statistics: Direct Controls

Statistics . ResFc all	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)</i>		

Statistics . ResFc Max	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Resetting of all Maximum values</i>		

Statistics . ResFc Min	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Resetting of all Minimum values</i>		

Statistics . ResFc I Demand	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Resetting of Statistics - Current Demand (avg, peak avg)</i>		

7.3 Statistics: Input States

Statistics . StartFc I Demand-I	[Operation / Status Display / Statistics]
↓	<i>State of the module input: Start of the Statistics of the Current Demand</i>

7.4 Statistics: Signals (Output States)

Statistics . ResFc all	[Operation / Status Display / Statistics]
↑	<i>Signal: Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)</i>

Statistics . ResFc I Demand	[Operation / Status Display / Statistics]
↑	<i>Signal: Resetting of Statistics - Current Demand (avg, peak avg)</i>

Statistics . ResFc Max	[Operation / Status Display / Statistics]
↑	<i>Signal: Resetting of all Maximum values</i>

Statistics . ResFc Min	[Operation / Status Display / Statistics]
↑	<i>Signal: Resetting of all Minimum values</i>

7.5 Statistics: Counters


Statistics . Res Cr I Demand	[Operation / Statistics / Demand / Current Demand]
#	<i>Number of resets since the last device restart. The timestamp shows date and time of the last reset.</i>

Statistics . Res Cr Max values	[Operation / Statistics / Max / Current]
#	<i>Number of resets since the last device restart. The timestamp shows date and time of the last reset.</i>



Statistics . Res Cr Min values	[Operation / Statistics / Min / Current]
#	<i>Number of resets since the last device restart. The timestamp shows date and time of the last reset.</i>

8 Communication


8.1 Scada: Device Planning Parameters

Scada . Protocol	[Device planning]	
"-"	"-" ... Profibus ↳ Used Protocol.	S.3
 <i>Select the SCADA protocol to be used.</i>		


8.2 Scada: Signals (Output States)


Scada . SCADA connected	[Operation / Status Display / Scada]
 <i>At least one SCADA System is connected to the device.</i>	
Scada . SCADA not connected	[Operation / Status Display / Scada]
 <i>No SCADA System is connected to the device</i>	


8.3 Tcplp

TCP/IP config	[Device Para / TCP/IP / TCP/IP config]
	This item represents a special dialog. (See the Technical Manual for details.) <i>configuration of the TCP/IP protocol</i>

8.3.1 Tcplp: Settings



Tcplp . Keep Alive Time	[Device Para / TCP/IP / Advanced Settings]
720s	1s ... 7200s S.3
	<i>Keep Alive Time is the duration between two keep alive transmissions in idle condition</i>



Tcplp . Keep Alive Interval	[Device Para / TCP/IP / Advanced Settings]
15s	1s ... 60s S.3
	<i>Keep Alive Interval is the duration between two successive keep alive retransmissions, if the acknowledgement to the previous keepalive transmission was not received.</i>



Tcplp . Keep Alive Retry	[Device Para / TCP/IP / Advanced Settings]
3	3 ... 3 S.3
	<i>Keep alive retry is the number of retransmissions to be carried out before declaring that the remote end is not available.</i>



8.4 DNP3 – Distributed Network Protocol



8.4.1 DNP3: Settings


DNP3 . Function	[Device Para / DNP3 / Communication]	
inactive	inactive, active  Mode.	S.3
	<i>Permanent activation or deactivation of module/stage.</i>	


DNP3 . IP Port Number	[Device Para / DNP3 / Communication]	
20000	0 ... 65535 	S.3
	<i>IP Port Number.</i> <i>In general it is recommended to keep the default value. If this is not possible then select a number out of the private range 49152-52151 or 52164-65535 that is not yet in use within your network.</i>	


DNP3 . Baud rate	[Device Para / DNP3 / Communication]	
19200	1200 ... 115200 	S.3
	<i>Baud rate for communication</i>	


DNP3 . Frame Layout	[Device Para / DNP3 / Communication]	
8E1	8E1, 8O1, 8N1, 8N2 	S.3
	<i>Frame Layout</i>	


DNP3 . Optical rest position	[Device Para / DNP3 / Communication]	
Light on <i>Avail. depends on HW</i>	Light off, Light on 	S.3
	<i>Optical rest position</i>	


DNP3 . SelfAddress	[Device Para / DNP3 / Communication]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Support of self (automatic) addresses</i>	


DNP3 . DataLink confirm	[Device Para / DNP3 / Communication]	
Never	Never, Always, On_Large ↳ Communication Start Variants.	S.3
	<i>Enables or disables the data layer confirmation (ack).</i>	


DNP3 . t-DataLink confirm	[Device Para / DNP3 / Communication]	
1s	0.1s ... 10.0s	S.3
	<i>Data layer confirmation timeout</i>	


DNP3 . DataLink num retries	[Device Para / DNP3 / Communication]	
3	0 ... 255	S.3
	<i>Number of repetition of data link packet sending after failing</i>	


DNP3 . Direction Bit	[Device Para / DNP3 / Communication]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Enables Direction Bit functionality. The Direction Bit is 0 for SlaveStation and 1 for MasterStation</i>	


DNP3 . Max Frame Size	[Device Para / DNP3 / Communication]	
255	64 ... 255	S.3
	<i>This value is used to limit the net Frame Size</i>	


DNP3 . Test Link Period	[Device Para / DNP3 / Communication]	
0s	0.0s ... 120.0s	S.3
	<i>This value specifies the time period when to send a Test Link-Frame</i>	


DNP3 . AppLink confirm	[Device Para / DNP3 / Communication]	
Always	Never, Always, Event	S.3
	↳ _AL_ResponseType_k.	
	<i>Determines if the device will request that the Application Layer response be confirmed or not</i>	


DNP3 . t-AppLink confirm	[Device Para / DNP3 / Communication]	
5s	0.1s ... 10.0s	S.3
	<i>Application layer response timeout</i>	

DNP3 . AppLink num retries	[Device Para / DNP3 / Communication]	
0	0 ... 255	S.3
	<i>The number of times the device will retransmit an Application Layer fragment</i>	


DNP3 . Unsol Reporting	[Device Para / DNP3 / Communication]	
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Enables unsolicited reporting. This is available only for DNP3 TCP connections, and for DNP3 RTU in case of a peer-to-peer connection.</i>	


DNP3 . Unsol Reporting Timeout	[Device Para / DNP3 / Communication]	
10s	1.0s ... 60.0s	S.3
	<i>Set the amount of time that the outstation will wait for an Application Layer confirmation back from the master indicating that the master received the unsolicited response message.</i>	


DNP3 . Unsol Reporting Retry	[Device Para / DNP3 / Communication]	
2	0 ... 255	S.3
	<i>Set the number of retries that an outstation transmits in each unsolicited response series if it does not receive confirmation back from the master.</i>	


DNP3 . TestSeqNo	[Device Para / DNP3 / Communication]	
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Test if sequence number of request is incremented. If it is not correctly incremented the request will be ignored. It is recommended to have it inactive but some older DNP implementations need it activated.</i>	


DNP3 . TestSBO		[Device Para / DNP3 / Communication]	
active	inactive, active		S.3
	Mode.		
	<i>It enables a stricter comparing of SBO and operate command. For older DNP versions it is recommended to deactivated it.</i>		
DNP3 . Timeout SBO		[Device Para / DNP3 / Communication]	
30s	1.0s ... 60.0s		S.3
	<i>DNP Outputs can be controlled in a two stage procedure (SBO: Select Before Operate). These outputs are to be selected first by a Select command. After this the bit is reserved for this Operate request. This setting defines the timer for this reservation: After the timer has elapsed the bit is released.</i>		
DNP3 . ColdRestart		[Device Para / DNP3 / Communication]	
inactive	inactive, active		S.3
	Mode.		
	<i>Enables support for Cold Restart function.</i>		
DNP3 . Deadb integr time		[Device Para / DNP3 / Communication]	
1	0 ... 300		S.3
	<i>Deadband integration time.</i>		
DNP3 . BinaryInput 0		[Device Para / DNP3 / Point map / Binary Inputs]	
...			
DNP3 . BinaryInput 63			
"_"	"_" ... Sys . Internal test state		S.3
	1..n, Assignment List.		
	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>		

DNP3 . DoubleBitInput 0	[Device Para / DNP3 / Point map / Double Bit Inputs]	
...		
DNP3 . DoubleBitInput 5		
"_"	"-", SG[1] . Pos ↳ 1..n, Assignment List.	S.3
 Double Bit Digital Input (DNP). This corresponds to a double bit binary output of the protective device.		



DNP3 . BinaryCounter 0	[Device Para / DNP3 / Point map / BinaryCounter]	
...		
DNP3 . BinaryCounter 7		
"_"	"-" ... Sys . Operating hours Cr ↳ 1..n, Assignment List.	S.3
 Counter can be used to report counter values to the DNP master.		


DNP3 . Analog value 0	[Device Para / DNP3 / Point map / Analog Input]	
...		
DNP3 . Analog value 31		
"_"	"-" ... ThR . Thermal Cap Used ↳ 1..n, TrendReclList.	S.3
 Analog value can be used to report values to the master (DNP)		


DNP3 . Scale Factor 0	[Device Para / DNP3 / Point map / Analog Input]	
...		
DNP3 . Scale Factor 31		
1	0.001 ... 1000000 ↳ Scale Factor.	S.3
 The scale factor is used to convert the measured value in an integer format		

DNP3 . Dead Band 0	[Device Para / DNP3 / Point map / Analog Input]	
...		
DNP3 . Dead Band 31		
1%	0.01% ... 100.00%	S.3
	<i>If a change of measured value is greater than the deadband value it will be reported to the master.</i>	


8.4.2 DNP3: Direct Controls

DNP3 . Res all Diag Cr	[Operation / Count and RevData / DNP3] [Operation / Reset]	
inactive	inactive, active  Mode.	S.3
	<i>Reset all diagnosis counters</i>	

DNP3 . Slave Id	[Device Para / DNP3 / Communication]	
1	0 ... 65519	S.3
	<i>SlaveId defines the DNP3 address of this device (Outstation)</i>	

DNP3 . Master Id	[Device Para / DNP3 / Communication]	
65500	0 ... 65519	S.3
	<i>MasterId defines the DNP3 address of master (SCADA)</i>	

8.4.3 DNP3: Input States

DNP3 . BinaryInput0-I	[Operation / Status Display / DNP3 / Binary Inputs]	
...		
DNP3 . BinaryInput63-I		
	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>	

DNP3 . DoubleBitInput0-I	[Operation / Status Display / DNP3 / Double Bit Inputs]
...	
DNP3 . DoubleBitInput5-I	
↓	<i>Double Bit Digital Input (DNP). This corresponds to a double bit binary output of the protective device.</i>

8.4.4 DNP3: Signals (Output States)

DNP3 . busy	[Operation / Status Display / DNP3 / State]
↓	<i>This message is set if the protocol is started. It will be reset if the protocol is shut down.</i>

DNP3 . ready	[Operation / Status Display / DNP3 / State]
↓	<i>The message will be set if the protocol is successfully started and ready for data exchange.</i>

DNP3 . active	[Operation / Status Display / DNP3 / State]
↓	<i>The communication with the Master (SCADA) is active.</i>
	<i>Note that for TCP/UDP, this state is permanently "Low" unless »DataLink confirm« is set to "Always".</i>

8.4.5 DNP3: Counters

DNP3 . NReceived	[Operation / Count and RevData / DNP3]
#	<i>Diagnostic counter: Number of received characters</i>

DNP3 . NSent	[Operation / Count and RevData / DNP3]
#	<i>Diagnostic counter: Number of sent characters</i>

DNP3 . NBadFramings	[Operation / Count and RevData / DNP3]
#	<i>Diagnostic counter: Number of bad framings. A large number indicates a disturbed serial connection.</i>

DNP3 . NBadParities	[Operation / Count and RevData / DNP3]
#	<i>Diagnostic counter: Number of parity errors. A large number indicates a disturbed serial connection.</i>

DNP3 . NBreakSignals

[Operation / Count and RevData / DNP3]

Diagnostic counter: Number of break signals. A large number indicates a disturbed serial connection.


DNP3 . NBadChecksum



[Operation / Count and RevData / DNP3]



Diagnostic counter: Number of frames received with bad checksum.



8.5 Modbus



8.5.1 Modbus: Settings



Modbus . t-call		[Device Para / Modbus / Communication / General Settings]
10s	1s ... 3600s	S.3
	<i>If there is no request telegram sent from Scada to the device after expiry of this time - the device concludes a communication failure within the Scada system.</i>	


Modbus . Scada CmdBlo		[Device Para / Modbus / Communication / General Settings]
inactive	inactive, active  Mode.	S.3
	<i>Activating (allowing)/ Deactivating (disallowing) the blocking of the Scada Commands</i>	


Modbus . Disable Latching		[Device Para / Modbus / Communication / General Settings]
inactive	inactive, active  Mode.	S.3
	<i>Disable Latching: If this parameter is active (true), none of the Modbus states will be latched. That means that trip signals wont be latched by Modbus.</i>	



Modbus . AllowGap		[Device Para / Modbus / Communication / General Settings]
inactive	inactive, active  Mode.	S.3
	<i>If this parameter is active (True), the user can request a set of modbus register without getting an exception, because of invalid address in the requested array. The invalid addresses have a special value 0xFAFA, but the user is responsible for ignoring invalid addresses. Attention: This special value can be valid, if address is valid.</i>	



Modbus . Optical rest position		[Device Para / Modbus / Communication / General Settings]
Light on Avail. depends on HW	Light off, Light on  Optical rest position.	S.3
	<i>Optical rest position</i>	


Modbus . TCP Port Config		[Device Para / Modbus / Communication / TCP]
Default	Default, Private	S.3
		 Port selection.
	<i>TCP Port Configuration. This parameter needs to be set to "Private" only if another TCP Port than the default one shall be used.</i>	


Modbus . Port		[Device Para / Modbus / Communication / TCP]
502	If: Modbus . TCP Port Config = Default	S.3
		• 502 ... 502
		If: Modbus . TCP Port Config = Private
		• 49152 ... 65535
	<i>IP Port Number.</i>	
<i>In general it is recommended to keep the default value. if this is not possible then select a number out of the private range 49152-52151 or 52164-65535 that is not yet in use within your network.</i>		


Modbus . t-timeout		[Device Para / Modbus / Communication / RTU]
1s	0.01s ... 10.00s	S.3
	<i>Within this time the answer has to be received by the SCADA system, otherwise the request will be disregarded. In that case the Scada system detects a communication failure and the Scada System has to send a new request.</i>	


Modbus . Baud rate		[Device Para / Modbus / Communication / RTU]
19200	1200, 2400, 4800, 9600, 19200, 38400	S.3
		 Baud rate.
	<i>Baud rate</i>	

Modbus . Physical Settings		[Device Para / Modbus / Communication / RTU]
8E1	8E1, 8O1, 8N1, 8N2	S.3
		 Byte Frame.
	<i>Digit 1: Number of bits. Digit 2: E=even parity, O=odd parity, N=no parity. Digit 3: Number of stop bits. More information on the parity: It is possible that the last data bit is followed by a parity bit which is used for recognition of communication errors. The parity bit ensures that with even parity ("EVEN") always an even number of bits with valence "1" or with odd parity ("ODD") an odd number of "1" valence bits are transmitted. But it is also possible to transmit no parity bits (here the setting is "Parity = None"). More information on the stop-bits: The end of a data byte is terminated by the stop-bits.</i>	

Modbus . Config Bin Inp1 ... Modbus . Config Bin Inp32	[Device Para / Modbus / Configb Registers / States]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Virtual Digital Input. This corresponds to a virtual binary output of the protective device.</i>		

Modbus . Latched Config Bin Inp1 ... Modbus . Latched Config Bin Inp32	[Device Para / Modbus / Configb Registers / States]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Latched Configurable Binary Input</i>		

Modbus . Mapped Meas 1 ... Modbus . Mapped Meas 16	[Device Para / Modbus / Configb Registers / Measured Values]	
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendReclList.	S.3
 <i>Mapped Measured Values. They can be used to provide measured values to the Modbus Master.</i>		

Modbus . Type of SCADA mapping	[Device Para / Modbus / Config. Data Obj.]	
Standard	Standard, User-defined ↳ Type of SCADA mapping.	S.3
 <i>This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.</i>		

8.5.2 Modbus: Direct Controls

Modbus . Res Diagn Cr	[Operation / Reset]	
inactive	inactive, active ↩ Mode.	P.1
<p>☉ <i>All Modbus Diagnosis Counters will be reset.</i></p>		

Modbus . Unit ID	[Device Para / Modbus / Communication / TCP]	
255	1 ... 255	P.1
<p>☉ <i>The Unit Identifier is used for routing. This parameter is to be set, if a Modbus RTU and a Modbus TCP network should be coupled.</i></p>		

Modbus . Slave ID	[Device Para / Modbus / Communication / RTU]	
1	1 ... 247	P.1
<p>☉ <i>Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.</i></p>		

8.5.3 Modbus: Input States

Modbus . Config Bin Inp1-I ... Modbus . Config Bin Inp32-I	[Operation / Status Display / Modbus / Config Registers]	
<p>⬇ <i>State of the module input: Config Bin Inp</i></p>		

8.5.4 Modbus: Signals (Output States)

Modbus . Transmission RTU	[Operation / Status Display / Modbus / State]	
<p>⬆ <i>Signal: SCADA active</i></p>		
Modbus . Transmission TCP	[Operation / Status Display / Modbus / State]	
<p>⬆ <i>Signal: SCADA active</i></p>		

Modbus . Device Type		[Operation / Status Display / Modbus / State]
↑	<i>Device Type: Device type code for relationship between device name and its Modbus code.</i>	
	<i>Woodward:</i>	
	<i>MRI4 - 1000</i>	
	<i>MRU4 - 1001</i>	
	<i>MRA4 - 1002</i>	
	<i>MCA4 - 1003</i>	
	<i>MRDT4 - 1005</i>	
	<i>MCDTV4 - 1006</i>	
	<i>MCDGV4 - 1007</i>	
	<i>MRM4 - 1009</i>	
	<i>MRMV4 - 1010</i>	
	<i>MCDLV4 - 1011</i>	



Modbus . Comm Version		[Operation / Status Display / Modbus / State]
↑	<i>Modbus Communication version. This version number changes if something becomes incompatible between different Modbus releases.</i>	

Modbus . Scada Cmd 1		[Operation / Status Display / Modbus / Commands]
	...	
Modbus . Scada Cmd 16		
↑	<i>Scada Command</i>	






8.5.5 Modbus: Values

Modbus . Mapped Meas 1		[Operation / Count and RevData / Modbus / Measured Values]
	...	
Modbus . Mapped Meas 16		
✎	<i>Mapped Measured Values. They can be used to provide measured values to the Modbus Master.</i>	

Modbus . Config info		[Device Para / Modbus / Config. Data Obj.]
✎	<i>Configuration comment (entered by the user during SCADA configuration)</i>	

Modbus . Config version	[Device Para / Modbus / Config. Data Obj.]
 <i>Version of the user-defined SCADA configuration</i>	
Modbus . Config status	[Device Para / Modbus / Config. Data Obj.]
Changing	Changing, OK, Config. not avail., Error ↳ Config status.
 <i>Status of the user-defined SCADA configuration.</i>	
<i>Possible values:</i>	
- <i>New SCADA configuration is being loaded, but not active yet.</i>	
- <i>The SCADA configuration is active.</i>	
- <i>The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>	
- <i>Unexpected error. Please contact our service-team.</i>	


8.5.6 Modbus: Counters


Modbus . NoOfRequestsTotal	[Operation / Count and RevData / Modbus / TCP] [Operation / Count and RevData / Modbus / RTU]
 <i>Total number of requests. Includes requests for other slaves.</i>	
Modbus . NoOfRequestsForMe	[Operation / Count and RevData / Modbus / TCP] [Operation / Count and RevData / Modbus / RTU]
 <i>Total Number of requests for this slave.</i>	
Modbus . NoOfResponse	[Operation / Count and RevData / Modbus / TCP] [Operation / Count and RevData / Modbus / RTU]
 <i>Total number of requests having been responded.</i>	
Modbus . NoOfQueryInvalid	[Operation / Count and RevData / Modbus / TCP]
 <i>Total number of Request errors. Request could not be interpreted</i>	
Modbus . NoOfInternalError	[Operation / Count and RevData / Modbus / TCP]
 <i>Total Number of Internal errors while interpreting the request.</i>	

Modbus . NoOfFrameErrors	[Operation / Count and RevData / Modbus / RTU]
#	<i>Total Number of Frame Errors. Physically corrupted Frame.</i>
Modbus . NoOfParityErrors	[Operation / Count and RevData / Modbus / RTU]
#	<i>Total number of parity errors. Physically corrupted Frame.</i>
Modbus . NoOfResponseTimeOverruns	[Operation / Count and RevData / Modbus / RTU]
#	<i>Total number of requests with exceeded response time. Physically corrupted Frame.</i>
Modbus . NoOfOverrunErrors	[Operation / Count and RevData / Modbus / RTU]
#	<i>Total Number of Overrun Failures. Physically corrupted Frame.</i>
Modbus . NoOfBreaks	[Operation / Count and RevData / Modbus / RTU]
#	<i>Number of detected communication aborts</i>


8.6 IEC 61850 - IEC 61850 communication

8.6.1 IEC 61850: Settings


IEC 61850 . Function	[Device Para / IEC 61850 / Communication]	
inactive	inactive, active ↳ 1..n, OnOffList.	S.3
	<i>Permanent activation or deactivation of module/stage.</i>	


IEC 61850 . Deadb integr time	[Device Para / IEC 61850 / Communication]	
0	0 ... 300	S.3
	<i>Deadband integration time.</i>	


8.6.2 IEC 61850: Direct Controls


IEC 61850 . ResetStatistic	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
	<i>Reset of all IEC61850 diagnostic counters</i>	


8.6.3 IEC 61850: Signals (Output States)

IEC 61850 . MMS Client connected	[Operation / Status Display / IEC 61850 / State]	
	<i>At least one MMS client is connected to the device</i>	



IEC 61850 . All Goose Subscriber active	[Operation / Status Display / IEC 61850 / State]	
	<i>All Goose subscriber in the device are working</i>	



IEC 61850 . SPCSO1 ... IEC 61850 . SPCSO32	[Operation / Status Display / IEC 61850 / ControllInputs]	
	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>	



IEC 61850 . GOSINGGIO1.Ind1.stVal	[Operation / Status Display / IEC 61850 / Virtual Inputs 1]
...	[Operation / Status Display / IEC 61850 / Virtual Inputs 2]
IEC 61850 . GOSINGGIO2.Ind32.stVal	
 <i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>	

IEC 61850 . GOSINGGIO1.Ind1.q	[Operation / Status Display / IEC 61850 / Virtual Inputs 1]
...	[Operation / Status Display / IEC 61850 / Virtual Inputs 2]
IEC 61850 . GOSINGGIO2.Ind32.q	
 <i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>	

8.6.4 IEC 61850: Values

IEC 61850 . GoosePublisherState	[Operation / Status Display / IEC 61850 / State]
Off	Off, On, Error  State.
 <i>State of the GOOSE Publisher (on or off)</i>	

IEC 61850 . GooseSubscriberState	[Operation / Status Display / IEC 61850 / State]
Off	Off, On, Error  State.
 <i>State of the GOOSE Subscriber (on or off)</i>	

IEC 61850 . MmsServerState	[Operation / Status Display / IEC 61850 / State]
Off	Off, On, Error  State.
 <i>State of MMS Server (on or off)</i>	

8.6.5 IEC 61850: Counters

IEC 61850 . NoOfGooseRxAll	[Operation / Count and RevData / IEC 61850]
#	<i>Total number of received GOOSE messages including messages for other devices (subscribed and not subscribed messages).</i>
IEC 61850 . NoOfGooseRxSubscribed	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of subscribed GOOSE messages including messages with incorrect content.</i>
IEC 61850 . NoOfGooseRxCorrect	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of subscribed and correctly received GOOSE messages.</i>
IEC 61850 . NoOfGooseRxNew	[Operation / Count and RevData / IEC 61850]
#	<i>Number of subscribed and correctly received GOOSE messages with new content.</i>
IEC 61850 . NoOfGooseTxAll	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of GOOSE messages that have been published by this device.</i>
IEC 61850 . NoOfGooseTxNew	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of new GOOSE messages (modified content) that have been published by this device.</i>
IEC 61850 . NoOfServerRequestsAll	[Operation / Count and RevData / IEC 61850]
#	<i>Total number of MMS Server requests including incorrect requests.</i>
IEC 61850 . NoOfDataReadAll	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of values read from this device including incorrect requests.</i>
IEC 61850 . NoOfDataReadCorrect	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of correctly read values from this device.</i>
IEC 61850 . NoOfDataWrittenAll	[Operation / Count and RevData / IEC 61850]
#	<i>Total Number of values written by this device including incorrect ones.</i>

IEC 61850 .
NoOfDataWrittenCorrect

[Operation / Count and RevData / IEC 61850]

Total Number of correctly written values by this device.

IEC 61850 .
NoOfDataChangeNotification

[Operation / Count and RevData / IEC 61850]

Number of detected changes within the datasets that are published with GOOSE messages.


IEC 61850 . **No of Client
Connections**

[Operation / Count and RevData / IEC 61850]


Number of active MMS client connections

8.6.6 IEC 61850 - Virt.Outp.

8.6.6.1 IEC 61850: Settings



IEC 61850 . COU_TGGIO1.Ind1.stVal ... IEC 61850 . COU_TGGIO1.Ind32.stVal	[Device Para / IEC 61850 / Virtual Outputs 1]	
“-”	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.</i>		



8.6.6.2 IEC 61850: Input States



IEC 61850 . COU_TGGIO1.Ind1.stVal-I ... IEC 61850 . COU_TGGIO1.Ind32.stVal-I	[Operation / Status Display / IEC 61850 / Virtual Outputs 1]	
	<i>Module input state: Binary state of the Virtual Output (GGIO)</i>	



8.7 IEC103 - IEC 60870-5-103 communication



8.7.1 IEC103: Settings


IEC103 . Function	[Device Para / IEC103 / General Settings]	
inactive	inactive, active  Mode.	S.3
	<i>Activation or deactivation of the IEC103 communication.</i>	


IEC103 . Baud rate	[Device Para / IEC103 / General Settings]	
19200	1200, 2400, 4800, 9600, 19200, 38400, 57600  Baud rate.	S.3
	<i>Baud rate</i>	



IEC103 . Physical Settings	[Device Para / IEC103 / General Settings]	
8E1	8E1, 8O1, 8N1, 8N2  Byte Frame.	S.3
	<i>Digit 1: Number of bits. Digit 2: E=even parity, O=odd parity, N=no parity. Digit 3: Number of stop bits. More information on the parity: It is possible that the last data bit is followed by a parity bit which is used for recognition of communication errors. The parity bit ensures that with even parity ("EVEN") always an even number of bits with valence "1" or with odd parity ("ODD") an odd number of "1" valence bits are transmitted. But it is also possible to transmit no parity bits (here the setting is "Parity = None"). More information on the stop-bits: The end of a data byte is terminated by the stop-bits.</i>	



IEC103 . Timezone	[Device Para / IEC103 / General Settings]	
UTC	UTC, Local Time  Timezone.	S.3
	<i>Selection whether the timestamps in IEC103 messages shall be given as UTC or local time. ("Local time" always includes the actual daylight saving settings.)</i>	



IEC103 . Transfer Disturb Rec	[Device Para / IEC103 / General Settings]	
inactive	inactive, active  Mode.	S.3
	<i>Activates the transmission of disturbance records</i>	



IEC103 . Energy Pulse Rate		[Device Para / IEC103 / General Settings]
0	0 ... 0	S.3
	<i>The energy values are always transmitted as counter values (i.e. as integer numbers). This setting defines the unit: If "1" is set then each counter increment is 1 kWh, if "2" is set then each counter increment is 2 kWh, etc. The setting "0" has the effect that no energy values are transmitted.</i>	

IEC103 . t-call		[Device Para / IEC103 / General Settings]
60s	1s ... 3600s	S.3
	<i>If there is no request telegram sent from Scada to the device after expiry of this time - the device concludes a communication failure within the Scada system.</i>	


IEC103 . DFC-Compat.		[Device Para / IEC103 / General Settings]
inactive	inactive, active  Mode.	S.3
	<i>This setting is only required for certain substation implementations. If there should be communication problems related to the Command Response Queue this setting switches the device over to a different behavior.</i>	

IEC103 . Type of SCADA mapping		[Device Para / IEC103 / Config. Data Obj.]
Standard	Standard, User-defined  Type of SCADA mapping.	S.3
	<i>This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.</i>	


IEC103 . Ex activate test mode		[Service / Test (Prot inhibit) / Scada / IEC103]
Sgen . Running	"-" ... Sys . Internal test state  1..n, Assignment List.	S.3
	<i>The signal assigned to this parameter switches the IEC103 communication into Test Mode.</i>	


IEC103 . Ex activate Block MD		[Service / Test (Prot inhibit) / Scada / IEC103]
"_"	"_" ... Sys . Internal test state  1..n, Assignment List.	S.3
	<i>The signal assigned to this parameter activates the blocking of IEC103 transmission in monitor direction.</i>	

8.7.2 IEC103: Direct Controls


IEC103 . Res all Diag Cr		[Operation / Reset]
inactive	inactive, active	S.3
		 Mode.
<input checked="" type="radio"/> <i>Reset all diagnosis counters</i>		


IEC103 . Slave ID		[Device Para / IEC103 / General Settings]
1	1 ... 247	S.3
<input checked="" type="radio"/> <i>Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.</i>		




IEC103 . Activate test mode		[Service / Test (Prot inhibit) / Scada / IEC103]
inactive	inactive, active	S.3
		 Mode.
<input checked="" type="radio"/> <i>This Direct Control parameter switches the IEC103 communication into Test Mode (or back to normal mode).</i>		

IEC103 . Activate Block MD		[Service / Test (Prot inhibit) / Scada / IEC103]
inactive	inactive, active	S.3
		 Mode.
<input checked="" type="radio"/> <i>This Direct Control parameter activates (or deactivates) the blocking of IEC103 transmission in monitor direction.</i>		





8.7.3 IEC103: Signals (Output States)

IEC103 . Scada Cmd 1		[Operation / Status Display / IEC103]
...		
IEC103 . Scada Cmd 10		
	<i>Scada Command</i>	


IEC103 . Transmission		[Operation / Status Display / IEC103]
	<i>Signal: SCADA active</i>	

IEC103 . Failure Event lost	[Operation / Status Display / IEC103]
 <i>Failure event lost</i>	
IEC103 . Test mode active	[Operation / Status Display / IEC103]
 <i>Signal: IEC103 communication has been switched over into Test Mode.</i>	
IEC103 . Block MD active	[Operation / Status Display / IEC103]
 <i>Signal: The blocking of IEC103 transmission in monitor direction has been activated.</i>	

8.7.4 IEC103: Values

IEC103 . Config info	[Device Para / IEC103 / Config. Data Obj.]
 <i>Configuration comment (entered by the user during SCADA configuration)</i>	
IEC103 . Config version	[Device Para / IEC103 / Config. Data Obj.]
 <i>Version of the user-defined SCADA configuration</i>	
IEC103 . Config status	[Device Para / IEC103 / Config. Data Obj.]
Changing	Changing, OK, Config. not avail., Error  Config status.
 <i>Status of the user-defined SCADA configuration.</i>	
<i>Possible values:</i>	
<i>- Changing: New SCADA configuration is being loaded, but not active yet.</i>	
<i>- OK: The SCADA configuration is active.</i>	
<i>- Config. not avail.: The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>	
<i>- Error: Unexpected error. Please contact our service-team.</i>	



8.7.5 IEC103: Counters



IEC103 . NReceived	[Operation / Count and RevData / IEC103]
 <i>Total Number of received Messages</i>	


IEC103 . NSent	[Operation / Count and RevData / IEC103]
#	<i>Total Number of sent Messages</i>
IEC103 . NBadFramings	[Operation / Count and RevData / IEC103]
#	<i>Number of bad Messages</i>
IEC103 . NBadParities	[Operation / Count and RevData / IEC103]
#	<i>Number of Parity Errors</i>
IEC103 . NBreakSignals	[Operation / Count and RevData / IEC103]
#	<i>Number of Communication Interrupts</i>
IEC103 . NInternalError	[Operation / Count and RevData / IEC103]
#	<i>Number of Internal Errors</i>
IEC103 . NBadCharChecksum	[Operation / Count and RevData / IEC103]
#	<i>Number of Checksum Errors</i>



8.8 IEC104 - IEC 60870-5-104 communication


8.8.1 IEC104: Settings


IEC104 . Function		[Device Para / IEC104 / General Settings]
inactive	inactive, active	S.3
		 Mode.
 <i>Activation or deactivation of the IEC104 communication.</i>		


IEC104 . TCP Port Config		[Device Para / IEC104 / General Settings]
Default	Default, Private	S.3
		 Port selection.
 <i>TCP Port Configuration. This parameter needs to be set to "Private" only if another TCP Port than the default one shall be used.</i>		


IEC104 . Port		[Device Para / IEC104 / General Settings]
2404	If: IEC104 . TCP Port Config = Default <ul style="list-style-type: none"> • 2404 ... 2404 If: IEC104 . TCP Port Config = Private <ul style="list-style-type: none"> • 49152 ... 65535 	S.3
 <i>IP Port Number.</i> <i>In general it is recommended to keep the default value. if this is not possible then select a number out of the private range 49152-52151 or 52164-65535 that is not yet in use within your network.</i>		


IEC104 . Timezone		[Device Para / IEC104 / General Settings]
UTC	UTC, Local Time	S.3
		 Timezone.
 <i>Selection whether the timestamps in the transmitted communication telegrams shall be given as UTC or local time. ("Local time" always includes the actual daylight saving settings.)</i>		


IEC104 . Deadb integr time		[Device Para / IEC104 / General Settings]
1s	0s ... 1000s	S.3
 <i>Deadband integration time.</i>		


IEC104 . Timeout SBE	[Device Para / IEC104 / General Settings]	
30s	1s ... 60s	S.3
	<i>The communication outputs can be controlled in a two-stage procedure (SBE: Select Before Execute). These outputs have to be selected first by a Select command. After this the bit is reserved for this Execute request. This setting defines the timer for this reservation: After the timer has elapsed the bit is released.</i>	


IEC104 . Timeout t0	[Device Para / IEC104 / Advanced]	
30s	30s ... 30s	S.3
	<i>Timeout of connection establishment</i>	


IEC104 . Timeout t1	[Device Para / IEC104 / Advanced]	
15s	15s ... 15s	S.3
	<i>Timeout of send or test APDUs</i>	


IEC104 . Timeout t2	[Device Para / IEC104 / Advanced]	
10s	10s ... 10s	S.3
	<i>Timeout for acknowledges in case of no data messages</i>	


IEC104 . Timeout t3	[Device Para / IEC104 / Advanced]	
20s	20s ... 20s	S.3
	<i>Timeout for sending test frames in case of a long idle state</i>	


IEC104 . Param k	[Device Para / IEC104 / Advanced]	
12	12 ... 12	S.3
	<i>Protocol parameter k</i>	



IEC104 . Param w	[Device Para / IEC104 / Advanced]	
8	8 ... 8	S.3
	<i>Protocol parameter w</i>	



IEC104 . Length of address	[Device Para / IEC104 / Advanced]	
2	2 ... 2	S.3
	<i>Number of bytes of the Common Address of the ASDU</i>	



IEC104 . Length of CoT	[Device Para / IEC104 / Advanced]	
2	2 ... 2	S.3
	<i>Number of bytes of the Cause of Transmission</i>	

IEC104 . Length of Inf Obj addr	[Device Para / IEC104 / Advanced]	
3	3 ... 3	S.3
	<i>Number of bytes of the address of the Information Object</i>	


IEC104 . Update time	[Device Para / IEC104 / Advanced]	
1s	1s ... 60s	S.3
	<i>This setting specifies the time after which measurement values are refreshed. If cyclic transmission is selected new values are reported after this time has elapsed.</i>	

IEC104 . Transmit Int. State	[Device Para / IEC104 / Advanced]	
active	inactive, active  Mode.	S.3
	<i>If this parameter is set to "active" (default) then the intermediate position of a switchgear, too, is transmitted. This needs to be changed to "inactive" only in the rare case that the substation communication does not support the reporting of intermediate positions.</i>	

IEC104 . Trans. Cmd. State	[Device Para / IEC104 / Advanced]	
active	inactive, active  Mode.	S.3
	<i>_ If false it suppress change events for command states (Same address as cmd)</i>	

IEC104 . Type of SCADA mapping	[Device Para / IEC104 / Config. Data Obj.]	
Standard	Standard, User-defined  Type of SCADA mapping.	S.3
	<i>This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.</i>	

8.8.2 IEC104: Direct Controls

IEC104 . Res all Diag Cr	[Operation / Reset]	
inactive	inactive, active  Mode.	S.3
<input checked="" type="radio"/> <i>Reset all diagnosis counters</i>		

IEC104 . Common address	[Device Para / IEC104 / General Settings]	
1	1 ... 65535	S.3
<input checked="" type="radio"/> <i>Common Address of the ASDU</i>		

8.8.3 IEC104: Signals (Output States)

IEC104 . Scada Cmd 1	[Operation / Status Display / IEC104]	
...		
IEC104 . Scada Cmd 16		
<input type="checkbox"/> <i>Scada Command</i>		

IEC104 . busy	[Operation / Status Display / IEC104]	
<input type="checkbox"/> <i>This message is set if the protocol is started. It will be reset if the protocol is shut down.</i>		



IEC104 . ready	[Operation / Status Display / IEC104]	
<input type="checkbox"/> <i>The message will be set if the protocol is successfully started and ready for data exchange.</i>		

IEC104 . Transmission	[Operation / Status Display / IEC104]	
<input type="checkbox"/> <i>Signal: SCADA active</i>		





IEC104 . Failure Event lost	[Operation / Status Display / IEC104]	
<input type="checkbox"/> <i>Failure event lost</i>		

8.8.4 IEC104: Values

IEC104 . Config info	[Device Para / IEC104 / Config. Data Obj.]	
<input type="checkbox"/> <i>Configuration comment (entered by the user during SCADA configuration)</i>		

IEC104 . Config version	[Device Para / IEC104 / Config. Data Obj.]
 <i>Version of the user-defined SCADA configuration</i>	
IEC104 . Config status	[Device Para / IEC104 / Config. Data Obj.]
Changing	Changing, OK, Config. not avail., Error ↪ Config status.
 <i>Status of the user-defined SCADA configuration.</i>	
<i>Possible values:</i>	
- <i>Changing: New SCADA configuration is being loaded, but not active yet.</i>	
- <i>OK: The SCADA configuration is active.</i>	
- <i>Config. not avail.: The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>	
- <i>Error: Unexpected error. Please contact our service-team.</i>	

8.8.5 IEC104: Counters

IEC104 . NReceived	[Operation / Count and RevData / IEC104]
 <i>Diagnostic counter: Number of received characters</i>	
IEC104 . NSent	[Operation / Count and RevData / IEC104]
 <i>Diagnostic counter: Number of sent characters</i>	
IEC104 . Num. of lost conn.	[Operation / Count and RevData / IEC104]
 <i>Diagnostic counter: Number of lost connections</i>	
IEC104 . NBadChecksum	[Operation / Count and RevData / IEC104]
 <i>Diagnostic counter: Number of frames received with bad checksum.</i>	

8.9 Profibus – Profibus Module

8.9.1 Profibus: Settings

Profibus . Little Endian	[Device Para / Profibus / Bus parameters]	
active	inactive, active  Mode.	S.3
	<i>If this setting is “active” all numbers are transmitted with the byte order Little Endian, otherwise the byte order Big Endian is used. (If all numbers received by your SCADA system should be completely wrong, changing this setting might help.)</i>	
Profibus . Config Bin Inp 1 ... Profibus . Config Bin Inp 32	[Device Para / Profibus / Config Bin Inp 1-16] [Device Para / Profibus / Config Bin Inp 17-32]	
“-”	“-” ... Sys . Internal test state  1..n, Assignment List.	S.3
	<i>Virtual Digital Input. This corresponds to a virtual binary output of the protective device.</i>	
Profibus . Latched 1 ... Profibus . Latched 32	[Device Para / Profibus / Config Bin Inp 1-16] [Device Para / Profibus / Config Bin Inp 17-32]	
inactive	inactive, active  Mode.	S.3
	<i>Defines whether the Input is latched.</i>	
Profibus . Type of SCADA mapping	[Device Para / Profibus / Config. Data Obj.]	
Standard	Standard, User-defined  Type of SCADA mapping.	S.3
	<i>This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.</i>	

8.9.2 Profibus: Direct Controls

Profibus . Slave ID	[Operation / Status Display / Profibus / State] [Device Para / Profibus / Bus parameters]	
2	2 ... 125	P.1
☉	<i>Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.</i>	

Profibus . Reset Comds	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
☉	<i>All Profibus Commands will be reset.</i>	

8.9.3 Profibus: Input States


Profibus . Assignment 1-I	[Operation / Status Display / Profibus / Config Bin Inp 1-16]	
...	[Operation / Status Display / Profibus / Config Bin Inp 17-32]	
Profibus . Assignment 32-I		
↓	<i>Module input state: Scada Assignment</i>	

8.9.4 Profibus: Signals (Output States)



Profibus . Data OK	[Operation / Status Display / Profibus / State]	
↑	<i>Data within the Input field are OK (Yes=1)</i>	



Profibus . SubModul Err	[Operation / Status Display / Profibus / State]	
↑	<i>Assignable Signal, Failure in Sub-Module, Communication Failure.</i>	



Profibus . Connection active	[Operation / Status Display / Profibus / State]	
↑	<i>Connection active</i>	


Profibus . Scada Cmd 1	[Operation / Status Display / Profibus / Commands]
...	
Profibus . Scada Cmd 16	
 Scada Command	


8.9.5 Profibus: Values


Profibus . Slave State	[Operation / Status Display / Profibus / State]
Baud Search	Baud Search ... Data exchange  State.
 Communication State between Slave and Master.	

Profibus . Baud rate	[Operation / Status Display / Profibus / State]
--	12 Mb/s ... --  Baud rate.
 The baud rate that has been detected lastly, will still be shown after a connection issue.	


Profibus . PNO Id	[Operation / Status Display / Profibus / State]
0C50h	0C50h  PNO Id.
 PNO Identification Number. GSD Identification Number.	


Profibus . Config info	[Operation / Status Display / Profibus / State] [Device Para / Profibus / Config. Data Obj.]
 Configuration comment (entered by the user during SCADA configuration)	


Profibus . Config version	[Operation / Status Display / Profibus / State] [Device Para / Profibus / Config. Data Obj.]
 Version of the user-defined SCADA configuration	


Profibus . Config status	[Operation / Status Display / Profibus / State] [Device Para / Profibus / Config. Data Obj.]
Changing	Changing, OK, Config. not avail., Error ↪ Config status.
	<i>Status of the user-defined SCADA configuration.</i> <i>Possible values:</i>


8.9.6 Profibus: Counters


Profibus . Master ID	[Operation / Status Display / Profibus / State]
	<i>Device address (Master ID) within the bus system. Each device address has to be unique within a bus system.</i>


Profibus . HO Id PSub	[Operation / Status Display / Profibus / State]
	<i>Handoff Id of PbSub</i>

Profibus . t-WatchDog	[Operation / Status Display / Profibus / State]
	<i>The Profibus Chip detects a communication issue if this timer is expired without any communication (Parameterising telegram).</i>

Profibus . Fr Sync Err	[Operation / Count and RevData / Profibus]
	<i>Frames, that were sent from the Master to the Slave are faulty.</i>

Profibus . Num. CRC err.	[Operation / Count and RevData / Profibus]
	<i>Number of CRC errors that the subsystem manager has recognized in the received response frames from the subsystem. (Each error caused a subsystem reset.)</i>

Profibus . Num. frame loss err.	[Operation / Count and RevData / Profibus]
	<i>Number of frame loss errors that the subsystem manager has recognized in the received response frames from the subsystem. (Each error caused a subsystem reset.)</i>

Profibus . Num. trig. CRC err.	[Operation / Count and RevData / Profibus]
	<i>Number of CRC errors that the subsystem has recognized in the received trigger frames from the host.</i>



Profibus . **Num. subsys. res.**

[Operation / Count and RevData / Profibus]



Number of subsystem restarts or resets that the subsystem manager has caused.



8.10 IRIG-B - IRIG-B-Module

8.10.1 IRIG-B: Device Planning Parameters

IRIG-B . Mode	[Device planning]	
"_"	"_", use  Mode.	S.3
 IRIG-B-Module, general operation mode		

8.10.2 IRIG-B: Settings


IRIG-B . Function	[Device Para / Time / TimeSync / IRIG-B]	
inactive	inactive, active  Mode.	S.3
 Permanent activation or deactivation of module/stage.		

IRIG-B . IRIG-B00X	[Device Para / Time / TimeSync / IRIG-B]	
IRIGB-000	IRIGB-000 ... IRIGB-007  IRIG-B00X.	S.3
 Determination of the Type: IRIG-B00X. IRIG-B types differ in types of included "Coded Expressions" (year, control-functions, straight-binary-seconds).		

8.10.3 IRIG-B: Direct Controls

IRIG-B . Res IRIG-B Cr	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
 Resetting of the Diagnosis Counters: IRIG-B		

8.10.4 IRIG-B: Signals (Output States)

IRIG-B . IRIG-B active	[Operation / Status Display / TimeSync / IRIG-B]	
 Signal: If there is no valid IRIG-B signal for 60 sec, IRIG-B is regarded as inactive.		

IRIG-B . High-Low Invert	[Operation / Status Display / TimeSync / IRIG-B]
⬇	<i>Signal: The High and Low signals of the IRIG-B are inverted. This does NOT mean that the wiring is faulty. If the wiring is faulty no IRIG-B signal will be detected.</i>

IRIG-B . Control Signal1	[Operation / Status Display / TimeSync / IRIG-B]
...	
IRIG-B . Control Signal18	
⬇	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>

8.10.5 IRIG-B: Counters



IRIG-B . NoOfFramesOK	[Operation / Count and RevData / TimeSync / IRIG-B]
#	<i>Total Number valid Frames.</i>

IRIG-B . NoOfFrameErrors	[Operation / Count and RevData / TimeSync / IRIG-B]
#	<i>Total Number of Frame Errors. Physically corrupted Frame.</i>



IRIG-B . Edges	[Operation / Count and RevData / TimeSync / IRIG-B]
#	<i>Edges: Total number of rising and falling edges. This signal indicates if a signal is available at the IRIG-B input.</i>


8.11 SNTP - SNTP-Module



8.11.1 SNTP: Device Planning Parameters

SNTP . Mode	[Device planning]	
"_"	"_", use  Mode.	S.3
 <i>SNTP-Module, general operation mode</i>		


8.11.2 SNTP: Settings

SNTP . Server1	[Device Para / Time / TimeSync / SNTP]	
inactive	inactive, active  Mode.	S.3
 <i>Server 1</i>		


SNTP . IP Byte1	[Device Para / Time / TimeSync / SNTP]	
...		
SNTP . IP Byte4		
0	0 ... 255	S.3
 <i>IP1.IP2.IP3.IP4</i>		

SNTP . Server2	[Device Para / Time / TimeSync / SNTP]	
inactive	inactive, active  Mode.	S.3
 <i>Server 2</i>		


8.11.3 SNTP: Direct Controls


SNTP . Res Counter	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
	<i>Reset all Counters.</i>	


8.11.4 SNTP: Signals (Output States)


SNTP . SNTP active	[Operation / Status Display / TimeSync / SNTP]	
	<i>Signal: If there is no valid SNTP signal for 120 sec, SNTP is regarded as inactive.</i>	


8.11.5 SNTP: Values

SNTP . Used Server	[Operation / Status Display / TimeSync / SNTP]	
None	Server1, Server2, None ↳ Server State.	
	<i>Which Server is used for SNTP synchronization.</i>	

SNTP . PrecServer1	[Operation / Status Display / TimeSync / SNTP]	
	<i>Precision of Server 1</i>	

SNTP . PrecServer2	[Operation / Status Display / TimeSync / SNTP]	
	<i>Precision of Server 2</i>	

SNTP . ServerQlty	[Operation / Status Display / TimeSync / SNTP]	
"_"	GOOD, SUFFICIENT, BAD, "-" ↳ State.	
	<i>Quality of Server used for Synchronization (GOOD, SUFFICIENT, BAD)</i>	

SNTP . NetConn	[Operation / Status Display / TimeSync / SNTP]
"_"	GOOD, SUFFICIENT, BAD, "-" ↪ State.
	<i>Quality of Network Connection (GOOD, SUFFICIENT, BAD).</i>

8.11.6 SNTP: Counters

SNTP . StratumServer1	[Operation / Status Display / TimeSync / SNTP]
#	<i>Stratum of Server 1</i>

SNTP . StratumServer2	[Operation / Status Display / TimeSync / SNTP]
#	<i>Stratum of Server 2</i>

SNTP . NoOfSyncs	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Total Number of Synchronizations.</i>

SNTP . NoOfConnectLost	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Total Number of lost SNTP Connections (no sync for 120 sec).</i>

SNTP . NoOfSmallSyncs	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Service counter: Total Number of very small Time Corrections.</i>

SNTP . NoOfNormSyncs	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Service counter: Total Number of normal Time Corrections</i>

SNTP . NoOfBigSyncs	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Service counter: Total Number of big Time Corrections</i>

SNTP . NoOfFiltSyncs	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Service counter: Total Number of filtered Time Corrections</i>

SNTP . NoOfSlowTrans	[Operation / Count and RevData / TimeSync / SNTP]
#	<i>Service counter: Total Number of slow Transfers.</i>


SNTP . NoOfHighOffs	[Operation / Count and RevData / TimeSync / SNTP]
----------------------------	---

#	<i>Service counter: Total Number of high Offsets.</i>
---	---



SNTP . NoOfIntTimeouts	[Operation / Count and RevData / TimeSync / SNTP]
-------------------------------	---

#	<i>Service counter: Total Number of internal timeouts.</i>
---	--



8.12 TimeSync - Time synchronisation



Date and Time		[Device Para / Time / Date and Time]
	This item represents a special dialog. (See the Technical Manual for details.) <i>(Re-)setting Date and Time</i>	



8.12.1 TimeSync: Settings


TimeSync . Time Zones		[Device Para / Time / Timezone]
UTC+0 London	UTC+14 Kiritimati ... UTC-11 Midway Islands	S.3
	 Time Zones.	
	<i>Time Zones</i>	


TimeSync . DST offset		[Device Para / Time / Timezone]
60min	-180min ... 180min	S.3
	<i>Difference to wintertime</i>	

TimeSync . DST manual		[Device Para / Time / Timezone]
active	inactive, active	S.3
	 Mode.	
	<i>Manual setting of the Daylight Saving Time</i>	

TimeSync . Summertime		[Device Para / Time / Timezone]
inactive	inactive, active	S.3
	 Mode.	
	<i>Daylight Saving Time</i>	


TimeSync . Summertime m		[Device Para / Time / Timezone]
March	January ... December	S.3
	 Month of clock change.	
	<i>Month of clock change summertime</i>	


TimeSync . Summertime d		[Device Para / Time / Timezone]
Sunday	Sunday ... General day	S.3
	↳ Date.	
	<i>Day of clock change summertime</i>	


TimeSync . Summertime w		[Device Para / Time / Timezone]
Last	First, Second, Third, Fourth, Last	S.3
	↳ Day of clock change.	
	<i>Place of selected day in month (for clock change summertime)</i>	

TimeSync . Summertime h		[Device Para / Time / Timezone]
2h	0h ... 23h	S.3
	<i>Hour of clock change summertime</i>	

TimeSync . Summertime min		[Device Para / Time / Timezone]
0min	0min ... 59min	S.3
	<i>Minute of clock change summertime</i>	


TimeSync . Wintertime m		[Device Para / Time / Timezone]
October	January ... December	S.3
	↳ Month of clock change.	
	<i>Month of clock change wintertime</i>	

TimeSync . Wintertime d		[Device Para / Time / Timezone]
Sunday	Sunday ... General day	S.3
	↳ Date.	
	<i>Day of clock change wintertime</i>	


TimeSync . Wintertime w		[Device Para / Time / Timezone]
Last	First, Second, Third, Fourth, Last	S.3
	↳ Day of clock change.	
	<i>Place of selected day in month (for clock change wintertime)</i>	

TimeSync . Wintertime h	[Device Para / Time / Timezone]	
3h	0h ... 23h	S.3
	<i>Hour of clock change wintertime</i>	

TimeSync . Wintertime min	[Device Para / Time / Timezone]	
0min	0min ... 59min	S.3
	<i>Minute of clock change wintertime</i>	


TimeSync . TimeSync	[Device Para / Time / TimeSync / TimeSync]	
"_"	"_", IRIG-B . IRIG-B, SNTP . SNTP, Modbus . Modbus, IEC103 . IEC 60870-5-103, IEC104 . IEC104, DNP3 . DNP3  Used Protocol.	S.3
	<i>Time synchronisation</i>	

8.12.2 TimeSync: Signals (Output States)


TimeSync . synchronized	[Operation / Status Display / TimeSync / TimeSync]	
	<i>Clock is synchronized.</i>	


9 Protection Parameter


9.1 Prot: Settings


Prot . Function	[Protection Para / Global Prot Para / Prot]	
active	inactive, active ↳ Mode.	P.2
 <i>Permanent activation or deactivation of module/stage.</i>		

Prot . ExBlo Fc	[Protection Para / Global Prot Para / Prot]	
inactive	inactive, active ↳ active/inactive.	P.2
 <i>Activate (allow) the external blocking of the global protection functionality of the device.</i>		


Prot . ExBlo1	[Protection Para / Global Prot Para / Prot]	
Prot . ExBlo2		
"-"	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 <i>If external blocking of this module is activated (allowed), the global protection functionality of the device will be blocked if the state of the assigned signal becomes true.</i>		

Prot . Blo TripCmd	[Protection Para / Global Prot Para / Prot]	
inactive	inactive, active ↳ Mode.	P.2
 <i>Permanent blocking of the Trip Command of the entire Protection.</i>		




Prot . ExBlo TripCmd Fc	[Protection Para / Global Prot Para / Prot]	
inactive	inactive, active ↳ active/inactive.	P.2
 <i>Activate (allow) the external blocking of the trip command of the entire device.</i>		

Prot . ExBlo TripCmd	[Protection Para / Global Prot Para / Prot]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>If external blocking of the tripping command is activated (allowed), the tripping command of the entire device will be blocked if the state of the assigned signal becomes true.</i>	



9.2 Prot: Direct Controls

Prot . Res FaultNo a GridFaultNo	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
	<i>Resetting of fault number and grid fault number.</i>	

9.3 Prot: Input States

Prot . ExBlo1-I	[Operation / Status Display / Prot]	
	<i>Module input state: External blocking1</i>	
Prot . ExBlo2-I	[Operation / Status Display / Prot]	
	<i>Module input state: External blocking2</i>	
Prot . ExBlo TripCmd-I	[Operation / Status Display / Prot]	
	<i>Module input state: External Blocking of the Trip Command</i>	

9.4 Prot: Signals (Output States)


Prot . active	[Operation / Status Display / All Actives] [Operation / Status Display / Prot]	
	<i>Signal: active</i>	
Prot . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / Prot]	
	<i>Signal: General Alarm</i>	

Prot . Trip	[Operation / Status Display / Trips] [Operation / Status Display / Prot]
⬆️	<i>Signal: General Trip</i>
Prot . available	[Operation / Status Display / Prot]
⬆️	<i>Signal: Protection is available</i>
Prot . ExBlo	[Operation / Status Display / Prot]
⬆️	<i>Signal: External Blocking</i>
Prot . Blo TripCmd	[Operation / Status Display / Prot]
⬆️	<i>Signal: Trip Command blocked</i>
Prot . ExBlo TripCmd	[Operation / Status Display / Prot]
⬆️	<i>Signal: External Blocking of the Trip Command</i>
Prot . Alarm L1	[Operation / Status Display / Prot]
⬆️	<i>Signal: General-Alarm L1</i>
Prot . Alarm L2	[Operation / Status Display / Prot]
⬆️	<i>Signal: General-Alarm L2</i>
Prot . Alarm L3	[Operation / Status Display / Prot]
⬆️	<i>Signal: General-Alarm L3</i>
Prot . Alarm G	[Operation / Status Display / Prot]
⬆️	<i>Signal: General-Alarm - Earth fault</i>
Prot . Trip L1	[Operation / Status Display / Prot]
⬆️	<i>Signal: General Trip L1</i>
Prot . Trip L2	[Operation / Status Display / Prot]
⬆️	<i>Signal: General Trip L2</i>


Prot . Trip L3	[Operation / Status Display / Prot]
⬆	<i>Signal: General Trip L3</i>
Prot . Trip G	[Operation / Status Display / Prot]
⬆	<i>Signal: General Trip Ground fault</i>
Prot . Res FaultNo a GridFaultNo	[Operation / Status Display / Prot]
⬆	<i>Signal: Resetting of fault number and grid fault number.</i>
Prot . Fault No.	[Operation / Count and RevData / Prot]
⬆	<i>Fault number</i>
Prot . No. of Grid Faults	[Operation / Count and RevData / Prot]
⬆	<i>Number of grid faults: This is a counter for all faults (i.e. General Alarms »Prot . Alarm«), but except faults during a running cycle of the Automatic Reclosure module (signal »AR . running«). (Remark: The »Fault No.« counts every new fault independent of AR cycles. This means that for protective devices without AR module these two counters are equivalent.)</i>

9.5 IH2 - Module Inrush


9.5.1 IH2: Device Planning Parameters


IH2 . Mode	[Device planning]	
"-"	"-", use ↳ Device planning.	S.3
	<i>Module Inrush, general operation mode</i>	


9.5.2 IH2: Global Parameters



IH2 . ExBlo1	[Protection Para / Global Prot Para / I-Prot / IH2]	
IH2 . ExBlo2		
"-"	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	

9.5.3 IH2: Setting Group Parameters


IH2 . Function	[Protection Para / Set 1...4 / I-Prot / IH2]	
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


IH2 . ExBlo Fc	[Protection Para / Set 1...4 / I-Prot / IH2]	
inactive	inactive, active ↳ active/inactive.	P.2
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	

IH2 . IH2 / IH1	[Protection Para / Set 1...4 / I-Prot / IH2]	
15%	10% ... 40%	P.2
	<i>Maximum permissible percentage of the 2nd harmonic of the 1st harmonic.</i>	


IH2 . block mode	[Protection Para / Set 1...4 / I-Prot / IH2]	
1-ph Blo	1-ph Blo, 3-ph Blo  block mode.	P.2
	<i>1-ph Blo: If an inrush is detected in one phase, the corresponding phase of those modules will be blocked, where inrush blocking is set to active./3-ph Blo: If an inrush is detected in at least one phase, all three phases of those modules where inrush blocking is set to active will be blocked (cross blocking).</i>	


9.5.4 IH2: Input States


IH2 . ExBlo1-I	[Operation / Status Display / I-Prot / IH2]	
	<i>Module input state: External blocking1</i>	


IH2 . ExBlo2-I	[Operation / Status Display / I-Prot / IH2]	
	<i>Module input state: External blocking2</i>	

9.5.5 IH2: Signals (Output States)

IH2 . active	[Operation / Status Display / All Actives] [Operation / Status Display / I-Prot / IH2]	
	<i>Signal: active</i>	

IH2 . ExBlo	[Operation / Status Display / I-Prot / IH2]	
	<i>Signal: External Blocking</i>	



IH2 . Blo L1	[Operation / Status Display / I-Prot / IH2]	
	<i>Signal: Blocked L1</i>	

IH2 . Blo L2	[Operation / Status Display / I-Prot / IH2]	
	<i>Signal: Blocked L2</i>	



IH2 . Blo L3	[Operation / Status Display / I-Prot / IH2]
⬆	<i>Signal: Blocked L3</i>
IH2 . Blo IG meas	[Operation / Status Display / I-Prot / IH2]
⬆	<i>Signal: Blocking of the ground (earth) protection module (measured ground current)</i>
IH2 . Blo IG calc	[Operation / Status Display / I-Prot / IH2]
⬆	<i>Signal: Blocking of the ground (earth) protection module (calculated ground current)</i>
IH2 . 3-ph Blo	[Operation / Status Display / I-Prot / IH2]
⬆	<i>Signal: Inrush was detected in at least one phase - trip command blocked.</i>



9.6 I[1] ... I[6] - Phase Overcurrent Stage



9.6.1 I[1]: Device Planning Parameters


I[1] . Mode	[Device planning]	
non directional	"-", non directional  I>.	S.3
	<i>Phase Overcurrent Stage, general operation mode</i>	


9.6.2 I[1]: Global Parameters


I[1] . ExBlo1	[Protection Para / Global Prot Para / I-Prot / I[1]]	
I[1] . ExBlo2		
"-"	"-" ... Sys . Internal test state  1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


I[1] . ExBlo TripCmd	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"-"	"-" ... Sys . Internal test state  1..n, Assignment List.	P.2
	<i>External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	

I[1] . Ex rev Interl	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"-"	"-" ... Sys . Internal test state  1..n, Assignment List.	P.2
	<i>External blocking of the module by external reverse interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


I[1] . AdaptSet 1	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"-"	"-" ... Logics . LE80.Out inverted  AdaptSet.	P.2
	<i>Assignment Adaptive Parameter 1</i>	


I[1] . AdaptSet 2	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
 <i>Assignment Adaptive Parameter 2</i>		

I[1] . AdaptSet 3	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
 <i>Assignment Adaptive Parameter 3</i>		

I[1] . AdaptSet 4	[Protection Para / Global Prot Para / I-Prot / I[1]]	
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
 <i>Assignment Adaptive Parameter 4</i>		

9.6.3 I[1]: Setting Group Parameters

I[1] . Function	[Protection Para / Set 1...4 / I-Prot / I[1]]	
active	inactive, active ↳ Mode.	P.2
 <i>Permanent activation or deactivation of module/stage.</i>		

I[1] . ExBlo Fc	[Protection Para / Set 1...4 / I-Prot / I[1]]	
inactive	inactive, active ↳ active/inactive.	P.2
 <i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>		

I[1] . Ex rev Interl Fc		[Protection Para / Set 1...4 / I-Prot / I[1]]
inactive	inactive, active	P.2
	active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".</i>	


I[1] . Blo TripCmd		[Protection Para / Set 1...4 / I-Prot / I[1]]
inactive	inactive, active	P.2
	Mode.	
	<i>Permanent blocking of the Trip Command of the module/stage.</i>	


I[1] . ExBlo TripCmd Fc		[Protection Para / Set 1...4 / I-Prot / I[1]]
inactive	inactive, active	P.2
	active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".</i>	


I[1] . Measuring method		[Protection Para / Set 1...4 / I-Prot / I[1]]
Fundamental	Fundamental, True RMS, I2	P.2
	Measuring method.	
	<i>Measuring method: fundamental or rms or 3rd harmonic (only generator protection relays)</i>	


I[1] . I>		[Protection Para / Set 1...4 / I-Prot / I[1]]
1.00In	0.02In ... 40.00In	P.2
	<i>If the pickup value is exceeded, the module/element starts to time out to trip.</i>	


I[1] . Char		[Protection Para / Set 1...4 / I-Prot / I[1]]
DEFT	DEFT ... I4T	P.2
	<i>Characteristic</i>	

I[1] . t	[Protection Para / Set 1...4 / I-Prot / I[1]]
1.00s ⊕ Adapt. Param.	0.00s ... 300.00s P.2
 <i>Tripping delay</i>	


I[1] . tchar	[Protection Para / Set 1...4 / I-Prot / I[1]]
1 ⊕ Adapt. Param.	0.02 ... 20.00 P.2
 <i>Time multiplier/tripping characteristic factor. The setting range depends on the selected tripping curve.</i>	

I[1] . Reset Mode	[Protection Para / Set 1...4 / I-Prot / I[1]]
instantaneous ⊕ Adapt. Param.	instantaneous, definite time, inverse time P.2 ↪ Reset Mode.
 <i>Reset Mode</i>	

I[1] . t-reset delay	[Protection Para / Set 1...4 / I-Prot / I[1]]
0s <i>Only available if:</i> ⊕ Adapt. Param.	0.00s ... 60.00s P.2
 <i>Reset delay for intermittent phase failures (INV characteristics only)</i>	

I[1] . IH2 Blo	[Protection Para / Set 1...4 / I-Prot / I[1]]
Sys . inactive ⊕ Adapt. Param.	Sys . inactive, IH2 . active P.2 ↪ IH2 Blo.
 <i>Blocking the trip command, if an inrush is detected.</i>	

9.6.4 I[1]: Input States

I[1] . ExBlo1-I	[Operation / Status Display / I-Prot / I[1]]
 <i>Module input state: External blocking1</i>	

I[1] . ExBlo2-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: External blocking2</i>
I[1] . ExBlo TripCmd-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: External Blocking of the Trip Command</i>
I[1] . Ex rev Interl-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: External reverse interlocking</i>
I[1] . AdaptSet1-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: Adaptive Parameter1</i>
I[1] . AdaptSet2-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: Adaptive Parameter2</i>
I[1] . AdaptSet3-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: Adaptive Parameter3</i>
I[1] . AdaptSet4-I	[Operation / Status Display / I-Prot / I[1]]
↓	<i>Module input state: Adaptive Parameter4</i>

9.6.5 I[1]: Signals (Output States)


I[1] . active	[Operation / Status Display / All Actives] [Operation / Status Display / I-Prot / I[1]]
↓	<i>Signal: active</i>
I[1] . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / I-Prot / I[1]]
↓	<i>Signal: Alarm</i>
I[1] . Trip	[Operation / Status Display / Trips] [Operation / Status Display / I-Prot / I[1]]
↓	<i>Signal: Trip</i>


I[1] . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Trip Command</i>	
I[1] . ExBlo	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: External Blocking</i>	
I[1] . Ex rev Interl	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: External reverse Interlocking</i>	
I[1] . Blo TripCmd	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Trip Command blocked</i>	
I[1] . ExBlo TripCmd	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: External Blocking of the Trip Command</i>	
I[1] . IH2 Blo	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Blocking the trip command by an inrush</i>	
I[1] . Alarm L1	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Alarm L1</i>	
I[1] . Alarm L2	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Alarm L2</i>	
I[1] . Alarm L3	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Alarm L3</i>	
I[1] . Trip L1	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: General Trip Phase L1</i>	
I[1] . Trip L2	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: General Trip Phase L2</i>	

I[1] . Trip L3	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: General Trip Phase L3</i>	
I[1] . DefaultSet	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Default Parameter Set</i>	
I[1] . AdaptSet 1	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Adaptive Parameter 1</i>	
I[1] . AdaptSet 2	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Adaptive Parameter 2</i>	
I[1] . AdaptSet 3	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Adaptive Parameter 3</i>	
I[1] . AdaptSet 4	[Operation / Status Display / I-Prot / I[1]]
 <i>Signal: Adaptive Parameter 4</i>	


9.7 IG[1] ... IG[4] - Earth current protection - Stage


9.7.1 IG[1]: Device Planning Parameters


IG[1] . Mode	[Device planning]	
"_"	"_", non directional ↳ Earth overcurrent.	S.3
	<i>Earth current protection - Stage, general operation mode</i>	

IG[1] . Superv. only	[Device planning]	
no	no, yes ↳ yes/no.	S.3
	<i>Earth current protection - Stage, if set to "Yes": Restriction of the function to a supervision functionality, i.e. there is no general alarm, no general trip and no trip command.</i>	


9.7.2 IG[1]: Global Parameters


IG[1] . ExBlo1	[Protection Para / Global Prot Para / I-Prot / IG[1]]	
IG[1] . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


IG[1] . ExBlo TripCmd	[Protection Para / Global Prot Para / I-Prot / IG[1]]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
Only available if:		
	<i>External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	

IG[1] . Ex rev Interl		[Protection Para / Global Prot Para / I-Prot / IG[1]]
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module by external reverse interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


IG[1] . AdaptSet 1		[Protection Para / Global Prot Para / I-Prot / IG[1]]
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
	<i>Assignment Adaptive Parameter 1</i>	



IG[1] . AdaptSet 2		[Protection Para / Global Prot Para / I-Prot / IG[1]]
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
	<i>Assignment Adaptive Parameter 2</i>	



IG[1] . AdaptSet 3		[Protection Para / Global Prot Para / I-Prot / IG[1]]
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
	<i>Assignment Adaptive Parameter 3</i>	



IG[1] . AdaptSet 4		[Protection Para / Global Prot Para / I-Prot / IG[1]]
"_"	"_" ... Logics . LE80.Out inverted ↳ AdaptSet.	P.2
	<i>Assignment Adaptive Parameter 4</i>	



9.7.3 IG[1]: Setting Group Parameters



IG[1] . Function		[Protection Para / Set 1...4 / I-Prot / IG[1]]
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


IG[1] . ExBlo Fc		[Protection Para / Set 1...4 / I-Prot / IG[1]]
inactive	inactive, active	P.2
	 active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	


IG[1] . Ex rev Interl Fc		[Protection Para / Set 1...4 / I-Prot / IG[1]]
inactive	inactive, active	P.2
	 active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".</i>	



IG[1] . Blo TripCmd		[Protection Para / Set 1...4 / I-Prot / IG[1]]
inactive	inactive, active	P.2
Only available if:	 Mode.	
	<i>Permanent blocking of the Trip Command of the module/stage.</i>	



IG[1] . ExBlo TripCmd Fc		[Protection Para / Set 1...4 / I-Prot / IG[1]]
inactive	inactive, active	P.2
Only available if:	 active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".</i>	


IG[1] . IG Source		[Protection Para / Set 1...4 / I-Prot / IG[1]]
CT . calculated	CT . sensitive measurement, CT . measured, CT . calculated	P.2
	 Measuring Channel.	
	<i>Selection if measured or calculated ground current should be used.</i>	



IG[1] . Measuring method		[Protection Para / Set 1...4 / I-Prot / IG[1]]
Fundamental	Fundamental, True RMS	P.2
	↳ Measuring method.	
	<i>Measuring method: fundamental or rms or 3rd harmonic (only generator protection relays)</i>	

IG[1] . Meas Circuit Superv		[Protection Para / Set 1...4 / I-Prot / IG[1]]
Sys . inactive	Sys . inactive	P.2
	↳ VTS Block.	
	<i>Activates the use of the measuring circuit supervision. In this case the module will be blocked if a measuring circuit supervision module (e.g. LOP, VTS) signals a disturbed measuring circuit (e.g. caused by a fuse failure).</i>	

IG[1] . IG>		[Protection Para / Set 1...4 / I-Prot / IG[1]]
0.02In	0.02In ... 20.00In	P.2
	Adapt. Param.	
	<i>If the pickup value is exceeded, the module/stage will be started.</i>	

IG[1] . IGs>		[Protection Para / Set 1...4 / I-Prot / IG[1]]
0.02In	0.002In ... 2.000In	P.2
	Adapt. Param.	
	<i>If the pickup value is exceeded, the module/stage will be started.</i>	

IG[1] . Char		[Protection Para / Set 1...4 / I-Prot / IG[1]]
DEFT	DEFT ... RXIDG	P.2
	Adapt. Param.	
	<i>Characteristic</i>	

IG[1] . t		[Protection Para / Set 1...4 / I-Prot / IG[1]]
0.00s	0.00s ... 300.00s	P.2
	Adapt. Param.	
	<i>Tripping delay</i>	

IG[1] . tchar		[Protection Para / Set 1...4 / I-Prot / IG[1]]
1	0.02 ... 20.00	P.2
⊕ Adapt. Param.		
🔗 <i>Time multiplier/tripping characteristic factor. The setting range depends on the selected tripping curve.</i>		

IG[1] . Reset Mode		[Protection Para / Set 1...4 / I-Prot / IG[1]]
instantaneous	instantaneous, definite time, inverse time	P.2
⊕ Adapt. Param.		
↳ Reset Mode.		
🔗 <i>Reset Mode</i>		

IG[1] . t-reset delay		[Protection Para / Set 1...4 / I-Prot / IG[1]]
0.00s	0.00s ... 60.00s	P.2
<i>Only available if:</i>		
⊕ Adapt. Param.		
🔗 <i>Reset delay for intermittent phase failures (INV characteristics only)</i>		

IG[1] . IH2 Blo		[Protection Para / Set 1...4 / I-Prot / IG[1]]
Sys . inactive	Sys . inactive, IH2 . active	P.2
⊕ Adapt. Param.		
↳ IH2 Blo.		
🔗 <i>Blocking the trip command, if an inrush is detected.</i>		

9.7.4 IG[1]: Input States

IG[1] . ExBlo1-I		[Operation / Status Display / I-Prot / IG[1]]
📄 <i>Module input state: External blocking1</i>		

IG[1] . ExBlo2-I		[Operation / Status Display / I-Prot / IG[1]]
📄 <i>Module input state: External blocking2</i>		

IG[1] . ExBlo TripCmd-I		[Operation / Status Display / I-Prot / IG[1]]
📄 <i>Only available if:</i>		
<i>Module input state: External Blocking of the Trip Command</i>		

IG[1] . Ex rev Interl-I	[Operation / Status Display / I-Prot / IG[1]]
↓	<i>Module input state: External reverse interlocking</i>
IG[1] . AdaptSet1-I	[Operation / Status Display / I-Prot / IG[1]]
↓	<i>Module input state: Adaptive Parameter1</i>
IG[1] . AdaptSet2-I	[Operation / Status Display / I-Prot / IG[1]]
↓	<i>Module input state: Adaptive Parameter2</i>
IG[1] . AdaptSet3-I	[Operation / Status Display / I-Prot / IG[1]]
↓	<i>Module input state: Adaptive Parameter3</i>
IG[1] . AdaptSet4-I	[Operation / Status Display / I-Prot / IG[1]]
↓	<i>Module input state: Adaptive Parameter4</i>


9.7.5 IG[1]: Signals (Output States)

IG[1] . active	[Operation / Status Display / All Actives] [Operation / Status Display / I-Prot / IG[1]]
↓	<i>Signal: active</i>
IG[1] . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / I-Prot / IG[1]]
↓	<i>Signal: The alarm threshold has been exceeded.</i>
IG[1] . Trip	[Operation / Status Display / Trips] [Operation / Status Display / I-Prot / IG[1]]
↓	<i>Signal: Trip</i>
IG[1] . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / I-Prot / IG[1]]
↓	<i>Only available if:</i> <i>Signal: Trip Command</i>


IG[1] . ExBlo	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: External Blocking</i>
IG[1] . Ex rev Interl	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: External reverse Interlocking</i>
IG[1] . Blo TripCmd	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Only available if:</i> <i>Signal: Trip Command blocked</i>
IG[1] . ExBlo TripCmd	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Only available if:</i> <i>Signal: External Blocking of the Trip Command</i>
IG[1] . IGH2 Blo	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: blocked by an inrush</i>
IG[1] . DefaultSet	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: Default Parameter Set</i>
IG[1] . AdaptSet 1	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: Adaptive Parameter 1</i>
IG[1] . AdaptSet 2	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: Adaptive Parameter 2</i>
IG[1] . AdaptSet 3	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: Adaptive Parameter 3</i>
IG[1] . AdaptSet 4	[Operation / Status Display / I-Prot / IG[1]]
↑	<i>Signal: Adaptive Parameter 4</i>


9.8 ThR - Thermal replica module

9.8.1 ThR: Device Planning Parameters


ThR . Mode	[Device planning]	
"_"	"_" , use ↳ Device planning.	S.3
	<i>Thermal replica module, general operation mode</i>	



9.8.2 ThR: Global Parameters



ThR . ExBlo1	[Protection Para / Global Prot Para / I-Prot / ThR]	
ThR . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	



ThR . ExBlo TripCmd	[Protection Para / Global Prot Para / I-Prot / ThR]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


9.8.3 ThR: Setting Group Parameters


ThR . Function	[Protection Para / Set 1...4 / I-Prot / ThR]	
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


ThR . ExBlo Fc		[Protection Para / Set 1...4 / I-Prot / ThR]
inactive	inactive, active	P.2
	 active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	


ThR . Blo TripCmd		[Protection Para / Set 1...4 / I-Prot / ThR]
inactive	inactive, active	P.2
	 Mode.	
	<i>Permanent blocking of the Trip Command of the module/stage.</i>	


ThR . ExBlo TripCmd Fc		[Protection Para / Set 1...4 / I-Prot / ThR]
inactive	inactive, active	P.2
	 active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".</i>	

ThR . Ib		[Protection Para / Set 1...4 / I-Prot / ThR]
1.00In	0.01In ... 4.00In	P.2
	<i>Base current: Maximum permissible thermal continuous current.</i>	



ThR . K		[Protection Para / Set 1...4 / I-Prot / ThR]
1.00	0.80 ... 1.50	P.2
	<i>Overload Factor: The maximum thermal limit is defined as $k \cdot I_B$, the product of the overload factor and the base current.</i>	

ThR . Alarm Theta		[Protection Para / Set 1...4 / I-Prot / ThR]
80%	50% ... 100%	P.2
	<i>Pickup value</i>	


ThR . τ-warm		[Protection Para / Set 1...4 / I-Prot / ThR]
10s	1s ... 60000s	P.2
	<i>Warming-up time constant</i>	


ThR . τ-cool	[Protection Para / Set 1...4 / I-Prot / ThR]	
10s	1s ... 60000s	P.2
 <i>Cooling time constant</i>		


9.8.4 ThR: Direct Controls

ThR . Reset	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
 <i>Reset the Thermal Replica</i>		


9.8.5 ThR: Input States


ThR . ExBlo1-I	[Operation / Status Display / I-Prot / ThR]	
 <i>Module input state: External blocking1</i>		

ThR . ExBlo2-I	[Operation / Status Display / I-Prot / ThR]	
 <i>Module input state: External blocking2</i>		

ThR . ExBlo TripCmd-I	[Operation / Status Display / I-Prot / ThR]	
 <i>Module input state: External Blocking of the Trip Command</i>		

9.8.6 ThR: Signals (Output States)

ThR . active	[Operation / Status Display / All Actives] [Operation / Status Display / I-Prot / ThR]	
 <i>Signal: active</i>		

ThR . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / I-Prot / ThR]	
 <i>Signal: Alarm Thermal Overload</i>		

ThR . Trip	[Operation / Status Display / Trips] [Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: Trip</i>	

ThR . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: Trip Command</i>	

ThR . ExBlo	[Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: External Blocking</i>	

ThR . Blo TripCmd	[Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: Trip Command blocked</i>	

ThR . ExBlo TripCmd	[Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: External Blocking of the Trip Command</i>	

ThR . Res Thermal Cap	[Operation / Status Display / I-Prot / ThR]
<input type="checkbox"/> <i>Signal: Resetting Thermal Replica</i>	

9.8.7 ThR: Values

ThR . Thermal Cap Used	[Operation / Measured Values / ThR]
<input type="checkbox"/> <i>Measured value: Thermal Capacity Used</i>	


ThR . Time To Trip	[Operation / Measured Values / ThR]
<input type="checkbox"/> <i>Measured value (calculated/measured): Remaining time until the thermal overload module will trip</i>	

9.8.8 ThR: Statistical Values


ThR . Thermal Cap max	[Operation / Statistics / Max / ThR]
<input checked="" type="checkbox"/> <i>Thermal Capacity maximum value</i>	


9.9 I2>[1] ... I2>[2] - Unbalanced Load-Stage

9.9.1 I2>[1]: Device Planning Parameters


I2>[1] . Mode	[Device planning]	
"_"	"_" , use ↳ Device planning.	S.3
	<i>Unbalanced Load-Stage, general operation mode</i>	


9.9.2 I2>[1]: Global Parameters


I2>[1] . ExBlo1	[Protection Para / Global Prot Para / I-Prot / I2>[1]]	
I2>[1] . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


I2>[1] . ExBlo TripCmd	[Protection Para / Global Prot Para / I-Prot / I2>[1]]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


9.9.3 I2>[1]: Setting Group Parameters


I2>[1] . Function	[Protection Para / Set 1...4 / I-Prot / I2>[1]]	
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


I2>[1] . ExBlo Fc		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
inactive	inactive, active	P.2
	↳ active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	


I2>[1] . Blo TripCmd		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
inactive	inactive, active	P.2
	↳ Mode.	
	<i>Permanent blocking of the Trip Command of the module/stage.</i>	


I2>[1] . ExBlo TripCmd Fc		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
inactive	inactive, active	P.2
	↳ active/inactive.	
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".</i>	


I2>[1] . I2>		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
0.01In	0.01In ... 4.00In	P.2
	<i>The Threshold setting defines a minimum operating current magnitude of I2 for the 46 function to operate, which ensures that the relay has a solid basis for initiating a current unbalance trip. This is a supervisory function and not a trip level.</i>	


I2>[1] . %(I2/I1)		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
inactive	inactive, active	P.2
	↳ Mode.	
	<i>The %(I2/I1) setting is the unbalance trip pickup setting. It is defined by the ratio of negative sequence current to positive sequence current (% Unbalance=I2/I1). Phase sequence will be taken into account automatically.</i>	

I2>[1] . %(I2/I1)		[Protection Para / Set 1...4 / I-Prot / I2>[1]]
20%	2% ... 40%	P.2
	<i>The %(I2/I1) setting is the unbalance trip pickup setting. It is defined by the ratio of negative sequence current to positive sequence current (% Unbalance=I2/I1). Phase sequence will be taken into account automatically.</i>	


I2>[1] . Char	[Protection Para / Set 1...4 / I-Prot / I2>[1]]	
DEFT	DEFT, INV ↳ Char.	P.2
 <i>Characteristic</i>		


I2>[1] . t	[Protection Para / Set 1...4 / I-Prot / I2>[1]]	
0.00s	0.00s ... 300.00s	P.2
 <i>Tripping delay</i>		


I2>[1] . K	[Protection Para / Set 1...4 / I-Prot / I2>[1]]	
10.0s	1.00s ... 200.00s	P.2
 <i>This setting is the negative sequence capability constant. This value is normally provided by the generator manufacturer.</i>		

I2>[1] . τ-cool	[Protection Para / Set 1...4 / I-Prot / I2>[1]]	
0.0s	0.0s ... 60000.0s	P.2
 <i>If the unbalanced load current falls below the pickup value, the cooling-off time is taken into account. If the unbalanced load exceeds the pickup value again, than the saved heat within the electrical equipment will lead to an accelerated trip.</i>		

9.9.4 I2>[1]: Input States

I2>[1] . ExBlo1-I	[Operation / Status Display / I-Prot / I2>[1]]	
 <i>Module input state: External blocking1</i>		

I2>[1] . ExBlo2-I	[Operation / Status Display / I-Prot / I2>[1]]	
 <i>Module input state: External blocking2</i>		


I2>[1] . ExBlo TripCmd-I	[Operation / Status Display / I-Prot / I2>[1]]	
 <i>Module input state: External Blocking of the Trip Command</i>		

9.9.5 I2>[1]: Signals (Output States)


I2>[1] . active	[Operation / Status Display / All Actives] [Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: active</i>	
I2>[1] . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: Alarm Negative Sequence</i>	
I2>[1] . Trip	[Operation / Status Display / Trips] [Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: Trip</i>	
I2>[1] . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: Trip Command</i>	
I2>[1] . ExBlo	[Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: External Blocking</i>	
I2>[1] . Blo TripCmd	[Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: Trip Command blocked</i>	
I2>[1] . ExBlo TripCmd	[Operation / Status Display / I-Prot / I2>[1]]
⬆️ <i>Signal: External Blocking of the Trip Command</i>	


9.10 AR - Automatic Reclosure


9.10.1 AR: Device Planning Parameters

AR . Mode	[Device planning]	
"_"	"_", use ↳ Device planning.	S.3
 <i>general operation mode</i>		


9.10.2 AR: Global Parameters


AR . CB	[Protection Para / Global Prot Para / AR / General Settings]	
SG[1] .	"_", SG[1] . ↳ CB List.	P.2
 <i>Circuit Breaker Module</i>		

AR . ExBlo1	[Protection Para / Global Prot Para / AR / General Settings]	
AR . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 <i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


AR . Ex Shot Inc	[Protection Para / Global Prot Para / AR / General Settings]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	P.2
 <i>The AR Shot counter will be incremented by this external Signal. This can be used for Zone Coordination (of upstream Auto Reclosure devices).</i>		


AR . Ex Lock	[Protection Para / Global Prot Para / AR / General Settings]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	P.2
 <i>The auto reclosure will locked out by this external Signal (set into the lockout state).</i>		


AR . DI Reset Ex Lock	[Protection Para / Global Prot Para / AR / General Settings]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	P.2
	<i>The Lockout State of the AR can be reset by a digital input.</i>	











AR . Scada Reset Ex Lock	[Protection Para / Global Prot Para / AR / General Settings]	
"_"	"_" ... Profibus . Scada Cmd 16 ↳ Communication Commands.	P.2
	<i>The Lockout State of the AR can be reset by Scada.</i>	


9.10.3 AR: Setting Group Parameters


AR . Function	[Protection Para / Set 1...4 / AR / General Settings]	
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


AR . ExBlo Fc	[Protection Para / Set 1...4 / AR / General Settings]	
inactive	inactive, active ↳ active/inactive.	P.2
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	


AR . Zone coordination	[Protection Para / Set 1...4 / AR / General Settings]	
inactive	inactive, active ↳ active/inactive.	P.2
	<i>Zone coordination: Sequence coordination is to keep upstream reclosers in step with the downstream ones for fast and delay curve operation, thus avoiding overtripping.</i>	


AR . Ex Shot Inc Fc		[Protection Para / Set 1...4 / AR / General Settings]	
inactive	inactive, active		P.2
	 active/inactive.		
	<i>The AR Shot counter will be incremented by this external Signal. This can be used for Zone Coordination (of upstream Auto Reclosure devices). Note: This parameter enables the functionality only. The assignment has to be set within the global parameters.</i>		
AR . Ex Lock Fc		[Protection Para / Set 1...4 / AR / General Settings]	
inactive	inactive, active		P.2
	 active/inactive.		
	<i>The auto reclosure will locked out by this external Signal. Note: This parameter enables the functionality only. The assignment has to be set within the global parameters.</i>		
AR . Reset Mode		[Protection Para / Set 1...4 / AR / General Settings]	
auto	auto ... HMI And DI		P.2
	 Res Lock via:.		
	<i>Reset Mode</i>		
AR . Shots		[Protection Para / Set 1...4 / AR / General Settings]	
1	1 ... 6		P.2
	<i>Maximum number of permitted reclosure attempts.</i>		
AR . Initiate Mode		[Protection Para / Set 1...4 / AR / General Settings]	
Alarm	Alarm, TripCmd		P.2
	 Initiate Mode.		
	<i>Initiate Mode</i>		
AR . t-start		[Protection Para / Set 1...4 / AR / General Settings]	
1s	0.01s ... 9999.00s		P.2
<i>Only available if:</i>			
	<i>Start timer - While the start timer runs down, an AR attempt can be started. Only if the trip command is given within the start time/duration an AR attempt could be started. The location and the resistance of the fault have a big influence on the tripping time. The start time has an impact on whether an AR attempt should be started when the fault is far away or high resistance.</i>		



AR . t-Blo after CB man ON	[Protection Para / Set 1...4 / AR / General Settings]	
10.0s	0.01s ... 9999.00s	P.2
	<i>This timer will be started if the circuit breaker was switched on manually. While this timer is running, AR cannot be started.</i>	


AR . t-Lock2Ready	[Protection Para / Set 1...4 / AR / General Settings]	
10.0s	0.01s ... 9999.00s	P.2
	<i>This timer is started by the lockout reset signal, and before the timer expire the AR cannot go to any other state.</i>	


AR . t-Run2Ready	[Protection Para / Set 1...4 / AR / General Settings]	
10.0s	0.01s ... 9999.00s	P.2
	<i>Examination Time: If the Circuit Breaker remains after an reclosure attempt for the duration of this timer in the Closed position, the AR has been successful and the AR module returns into the ready state.</i>	



AR . t-Blo2Ready	[Protection Para / Set 1...4 / AR / General Settings]	
10.0s	0.01s ... 9999.00s	P.2
	<i>The release (de-blocking) of the AR will be delayed for this time, if there is no blocking signal anymore.</i>	


AR . t-AR Supervision	[Protection Para / Set 1...4 / AR / General Settings]	
100.0s	1.00s ... 9999.00s	P.2
	<i>AR Overall supervision time (> sum of all the timers used by AR)</i>	


AR . Initiate AR: InitiateFc1	[Protection Para / Set 1...4 / AR / Shot Manager / Pre Shot Ctrl]	
...		
AR . Initiate AR: InitiateFc4		
"_"	"_" Exp[4]	P.2
	 Start fct.	
	<i>Initiate Auto Reclosure : Initiate Function</i>	


AR . t-DP1	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl1]	
...	...	
AR . t-DP6	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl6]	
1s	0.01s ... 9999.00s	P.2
Only available if:		
	<i>Dead time between trip and reclosure attempt for phase faults.</i>	

AR . t-DE1	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl1]	
...	...	
AR . t-DE6	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl6]	
1s	0.01s ... 9999.00s	P.2
Only available if:		
	<i>Dead time between trip and reclosure attempt for earth faults</i>	



AR . Shot 1: InitiateFc1	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl1]	
...	...	
AR . Shot 6: InitiateFc4	[Protection Para / Set 1...4 / AR / Shot Manager / Shot Ctrl6]	
"_"	"_" Exp[4]	P.2
Only available if:	 Start fct.	
	<i>Automatic Reclosure Attempt : Initiate Function</i>	



AR . Service Alarm 1	[Protection Para / Set 1...4 / AR / Wear Monitor]	
1000	1 ... 65535	P.2
	<i>As soon as the AR-Counter exceeds this number of reclosure attempts an alarm will be given out (overhauling of the CB)</i>	



AR . Service Alarm 2	[Protection Para / Set 1...4 / AR / Wear Monitor]	
65535	1 ... 65535	P.2
	<i>Too many auto reclosure attempts. If the parameterized number of AR cycles is reached, an alarm will be given out.</i>	



AR . Max AR/h	[Protection Para / Set 1...4 / AR / Wear Monitor]	
10	1 ... 20	P.2
	<i>Maximum Number of permitted Auto Reclosure Cycles per hour.</i>	

9.10.4 AR: Direct Controls


AR . Res TotNo suc unsuc	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
	<i>Reset all statistic AR counters: Total number of AR, successful and unsuccessful no of AR.</i>	


AR . Res Service Cr	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
	<i>Reset the Service Counters</i>	

AR . Reset Lock via HMI	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
	<i>Reset the AR Lockout via the panel.</i>	

AR . Res Max Shots / h Cr	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
	<i>Resetting the Counter for the maximum allowed shots per hour.</i>	

9.10.5 AR: Input States

AR . ExBlo1-I	[Operation / Status Display / AR]	
	<i>Module input state: External blocking1</i>	

AR . ExBlo2-I	[Operation / Status Display / AR]	
	<i>Module input state: External blocking2</i>	

AR . Ex Shot Inc-I	[Operation / Status Display / AR]
↓	<i>Module input state: The AR Shot counter will be incremented by this external Signal. This can be used for Zone Coordination (of upstream Auto Reclosure devices). Note: This parameter enables the functionality only. The assignment has to be set within the global parameters.</i>
AR . Ex Lock-I	[Operation / Status Display / AR]
↓	<i>Module input state: External AR lockout.</i>
AR . DI Reset Ex Lock-I	[Operation / Status Display / AR]
↓	<i>Module input state: Resetting the lockout state of the AR (if the resetting via digital inputs has been selected).</i>
AR . Scada Reset Ex Lock-I	[Operation / Status Display / AR]
↓	<i>Module input state: Resetting the Lockout State of the AR by Communication.</i>

9.10.6 AR: Signals (Output States)

AR . active	[Operation / Status Display / All Actives] [Operation / Status Display / AR]
↑	<i>Signal: active</i>
AR . ExBlo	[Operation / Status Display / AR]
↑	<i>Signal: External Blocking</i>
AR . Standby	[Operation / Status Display / AR]
↑	<i>Signal: Standby</i>
AR . t-Blo after CB man ON	[Operation / Status Display / AR]
↑	<i>Signal: AR blocked after circuit breaker was switched on manually. This timer will be started if the circuit breaker was switched on manually. While this timer is running, AR cannot be started.</i>
AR . Ready	[Operation / Status Display / AR]
↑	<i>Signal: Ready to shoot</i>
AR . running	[Operation / Status Display / AR]
↑	<i>Signal: Auto Reclosing running</i>

AR . t-dead	[Operation / Status Display / AR]
⬆	<i>Signal: Dead time between trip and reclosure attempt</i>
AR . CB ON Cmd	[Operation / Status Display / AR]
⬆	<i>Signal: CB switch ON Command</i>
AR . t-Run2Ready	[Operation / Status Display / AR]
⬆	<i>Signal: Examination Time: If the Circuit Breaker remains after a reclosure attempt for the duration of this timer in the Closed position, the AR has been successful and the AR module returns into the ready state.</i>
AR . Lock	[Operation / Status Display / AR]
⬆	<i>Signal: Auto Reclosure is locked out</i>
AR . t-Reset Lockout	[Operation / Status Display / AR]
⬆	<i>Signal: Delay Timer for resetting the AR lockout. The reset of the AR lockout state will be delayed for this time, after the reset signal (e.g digital input or Scada) has been detected .</i>
AR . Blo	[Operation / Status Display / AR]
⬆	<i>Signal: Auto Reclosure is blocked</i>
AR . t-Blo Reset	[Operation / Status Display / AR]
⬆	<i>Signal: Delay Timer for resetting the AR blocking. The release (de-blocking) of the AR will be delayed for this time, if there is no blocking signal anymore.</i>
AR . successful	[Operation / Status Display / AR]
⬆	<i>Signal: Auto Reclosing successful</i>
AR . failed	[Operation / Status Display / AR]
⬆	<i>Signal: Auto Reclosing failure</i>
AR . t-AR Supervision	[Operation / Status Display / AR]
⬆	<i>Signal: AR Supervision</i>
AR . Pre Shot	[Operation / Status Display / AR]
⬆	<i>Pre Shot Control</i>

AR . Shot 1	[Operation / Status Display / AR]
...	
AR . Shot 6	
⬆	<i>Shot Control</i>

AR . Service Alarm 1	[Operation / Status Display / AR]
⬆	<i>Signal: AR - Service Alarm 1, too many switching operations</i>

AR . Service Alarm 2	[Operation / Status Display / AR]
⬆	<i>Signal: AR - Service Alarm 2 - too many switching operations</i>

AR . Max Shots / h exceeded	[Operation / Status Display / AR]
⬆	<i>Signal: The maximum allowed number of shots per hour has been exceeded.</i>

AR . Res Statistics Cr	[Operation / Status Display / AR]
⬆	<i>Signal: Reset all statistic AR counters: Total number of AR, successful and unsuccessful no of AR.</i>

AR . Res Service Cr	[Operation / Status Display / AR]
⬆	<i>Signal: Reset the Service Counters for Alarm and Blocking</i>

AR . Reset Lockout	[Operation / Status Display / AR]
⬆	<i>Signal: The AR Lockout has been reset via the panel.</i>

AR . Res Max Shots / h	[Operation / Status Display / AR]
⬆	<i>Signal: The Counter for the maximum allowed shots per hour has been reset.</i>

9.10.7 AR: Counters


AR . AR Shot No.	[Operation / Count and RevData / AR]
#	<i>Counter - Auto Reclosure Attempts</i>

AR . Total number Cr	[Operation / Count and RevData / AR]
#	<i>Total number of all executed Automatic Reclosures Attempts</i>


AR . Cr successfl	[Operation / Count and RevData / AR]
#	<i>Total number of successfully executed Automatic Reclosures</i>
AR . Cr failed	[Operation / Count and RevData / AR]
#	<i>Total number of unsuccessfully executed automatic reclosure attempts</i>
AR . Cr Service Alarm1	[Operation / Count and RevData / AR]
#	<i>Remaining numbers of ARs until Service Alarm 1</i>
AR . Cr Service Alarm2	[Operation / Count and RevData / AR]
#	<i>Remaining numbers of ARs until Service Alarm 2</i>
AR . Max Shots / h Cr	[Operation / Count and RevData / AR]
#	<i>Counter for the maximum allowed shots per hour.</i>

9.10.8 AWE abort

9.10.8.1 AR: Settings


AR . abort: 1 ... AR . abort: 6	[Protection Para / Global Prot Para / AR / Block Fc]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>	

9.10.8.2 AR: Input States


AR . abort: 1 ... AR . abort: 6	[Operation / Status Display / AR]	
	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>	


9.11 SOTF - Switch Onto Fault - Module


9.11.1 SOTF: Device Planning Parameters


SOTF . Mode	[Device planning]	
"_"	"_", use Mode.	S.3
 <i>general operation mode</i>		

9.11.2 SOTF: Global Parameters


SOTF . Mode	[Protection Para / Global Prot Para / SOTF]	
CB Pos	CB Pos, I<, CB Pos And I<, CB manual ON, Ext SOTF Mode.	P.2
 <i>general operation mode</i>		


SOTF . ExBlo1	[Protection Para / Global Prot Para / SOTF]	
SOTF . ExBlo2		
"_"	"_" ... Sys . Internal test state 1..n, Assignment List.	P.2
 <i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


SOTF . Ex rev Interl	[Protection Para / Global Prot Para / SOTF]	
"_"	"_" ... Sys . Internal test state 1..n, Assignment List.	P.2
 <i>External blocking of the module by external reverse interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


SOTF . Ext SOTF	[Protection Para / Global Prot Para / SOTF]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	P.2
 External Switch Onto Fault		


9.11.3 SOTF: Setting Group Parameters

SOTF . Function	[Protection Para / Set 1...4 / SOTF]	
inactive	inactive, active ↳ Mode.	P.2
 Permanent activation or deactivation of module/stage.		


SOTF . ExBlo Fc	[Protection Para / Set 1...4 / SOTF]	
inactive	inactive, active ↳ active/inactive.	P.2
 Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".		


SOTF . Ex rev Interl Fc	[Protection Para / Set 1...4 / SOTF]	
inactive	inactive, active ↳ active/inactive.	P.2
 Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".		


SOTF . I<	[Protection Para / Set 1...4 / SOTF]	
0.01In	0.01In ... 1.00In	P.2
 The CB is in the OFF Position, if the measured current is less than this parameter.		

SOTF . t-enable	[Protection Para / Set 1...4 / SOTF]
2s	0.10s ... 10.00s P.2
	<i>While this timer is running, and while the module is not blocked, the Switch Onto Fault Module is effective (SOTF is armed).</i>


9.11.4 SOTF: Input States


SOTF . ExBlo1-I	[Operation / Status Display / SOTF]
SOTF . ExBlo2-I	
	<i>Module input state: External blocking</i>


SOTF . Ex rev Interl-I	[Operation / Status Display / SOTF]
	<i>Module input state: External reverse interlocking</i>


SOTF . Ext SOTF-I	[Operation / Status Display / SOTF]
	<i>Module input state: External Switch Onto Fault Alarm</i>


9.11.5 SOTF: Signals (Output States)

SOTF . active	[Operation / Status Display / All Actives] [Operation / Status Display / SOTF]
	<i>Signal: active</i>

SOTF . ExBlo	[Operation / Status Display / SOTF]
	<i>Signal: External Blocking</i>

SOTF . Ex rev Interl	[Operation / Status Display / SOTF]
	<i>Signal: External reverse Interlocking</i>

SOTF . enabled	[Operation / Status Display / SOTF]
	<i>Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.</i>

SOTF . AR Blo	[Operation / Status Display / SOTF]
	<i>Signal: Blocked by AR</i>

9 Protection Parameter

9.11.5 SOTF: Signals (Output States)


SOTF . I<

[Operation / Status Display / SOTF]


↑ Signal: No Load Current.


9.12 CLPU – Cold Load Pickup Module


9.12.1 CLPU: Device Planning Parameters

CLPU . Mode	[Device planning]	
"_"	"_", use Mode.	S.3
 <i>general operation mode</i>		



9.12.2 CLPU: Global Parameters



CLPU . Mode	[Protection Para / Global Prot Para / CLPU]	
CB Pos	CB Pos, I<, CB Pos Or I<, CB Pos And I< Mode.	P.2
 <i>general operation mode</i>		



CLPU . ExBlo1	[Protection Para / Global Prot Para / CLPU]	
CLPU . ExBlo2		
"_"	"_" ... Sys . Internal test state 1..n, Assignment List.	P.2
 <i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


CLPU . Ex rev Interl	[Protection Para / Global Prot Para / CLPU]	
"_"	"_" ... Sys . Internal test state 1..n, Assignment List.	P.2
 <i>External blocking of the module by external reverse interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


9.12.3 CLPU: Setting Group Parameters


CLPU . Function	[Protection Para / Set 1...4 / CLPU]	
inactive	inactive, active  Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	


CLPU . ExBlo Fc	[Protection Para / Set 1...4 / CLPU]	
inactive	inactive, active  active/inactive.	P.2
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	


CLPU . Ex rev Interl Fc	[Protection Para / Set 1...4 / CLPU]	
inactive	inactive, active  active/inactive.	P.2
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".</i>	

CLPU . t-Load Off	[Protection Para / Set 1...4 / CLPU]	
1.00s	0.00s ... 7200.00s	P.2
	<i>Select the outage time required for a load to be considered cold. If the Pickup Timer (Delay) has run out, a Cold Load Signal will be issued.</i>	


CLPU . t-Max Block	[Protection Para / Set 1...4 / CLPU]	
1.00s	0.00s ... 300.00s	P.2
	<i>Select the amount of time for the cold load inrush. If the Release Time (Delay) has run out, a Warm Load Signal will be issued.</i>	


CLPU . I<	[Protection Para / Set 1...4 / CLPU]	
0.01In	0.01In ... 1.00In	P.2
	<i>The CB is in the OFF Position, if the measured current is less than this parameter.</i>	

CLPU . Threshold	[Protection Para / Set 1...4 / CLPU]	
1.2In	0.10In ... 4.00In	P.2
	<i>Set the load current inrush threshold.</i>	


CLPU . Settle Time	[Protection Para / Set 1...4 / CLPU]	
1.00s	0.00s ... 300.00s	P.2
	<i>Select the time for the cold load inrush</i>	


9.12.4 CLPU: Input States


CLPU . ExBlo1-I	[Operation / Status Display / CLPU]	
CLPU . ExBlo2-I		
	<i>Module input state: External blocking</i>	


CLPU . Ex rev Interl-I	[Operation / Status Display / CLPU]	
	<i>Module input state: External reverse interlocking</i>	


9.12.5 CLPU: Signals (Output States)

CLPU . active	[Operation / Status Display / All Actives]	
	[Operation / Status Display / CLPU]	
	<i>Signal: active</i>	

CLPU . ExBlo	[Operation / Status Display / CLPU]	
	<i>Signal: External Blocking</i>	

CLPU . Ex rev Interl	[Operation / Status Display / CLPU]	
	<i>Signal: External reverse Interlocking</i>	


CLPU . enabled	[Operation / Status Display / CLPU]	
	<i>Signal: Cold Load enabled</i>	

CLPU . detected	[Operation / Status Display / CLPU]	
	<i>Signal: Cold Load detected</i>	


CLPU . AR Blo	[Operation / Status Display / CLPU]
⬆️ <i>Signal: Blocked by AR</i>	
CLPU . I<	[Operation / Status Display / CLPU]
⬆️ <i>Signal: No Load Current.</i>	
CLPU . Load Inrush	[Operation / Status Display / CLPU]
⬆️ <i>Signal: Load Inrush</i>	
CLPU . Settle Time	[Operation / Status Display / CLPU]
⬆️ <i>Signal: Settle Time</i>	


9.13 ExP[1] ... ExP[4] - External Protection - Module


9.13.1 ExP[1]: Device Planning Parameters


ExP[1] . Mode	[Device planning]	
"_"	"_" , use ↳ Device planning.	S.3
	<i>External Protection - Module, general operation mode</i>	

9.13.2 ExP[1]: Global Parameters


ExP[1] . ExBlo1	[Protection Para / Global Prot Para / ExP / ExP[1]]	
ExP[1] . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


ExP[1] . ExBlo TripCmd	[Protection Para / Global Prot Para / ExP / ExP[1]]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


ExP[1] . Alarm	[Protection Para / Global Prot Para / ExP / ExP[1]]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>Assignment for External Alarm</i>	


ExP[1] . Trip	[Protection Para / Global Prot Para / ExP / ExP[1]]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 External trip of the CB if the state of the assigned signal is true.		

9.13.3 ExP[1]: Setting Group Parameters

ExP[1] . Function	[Protection Para / Set 1...4 / ExP / ExP[1]]	
inactive	inactive, active ↳ Mode.	P.2
 Permanent activation or deactivation of module/stage.		

ExP[1] . ExBlo Fc	[Protection Para / Set 1...4 / ExP / ExP[1]]	
inactive	inactive, active ↳ active/inactive.	P.2
 Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".		

ExP[1] . Blo TripCmd	[Protection Para / Set 1...4 / ExP / ExP[1]]	
inactive	inactive, active ↳ Mode.	P.2
 Permanent blocking of the Trip Command of the module/stage.		

ExP[1] . ExBlo TripCmd Fc	[Protection Para / Set 1...4 / ExP / ExP[1]]	
inactive	inactive, active ↳ active/inactive.	P.2
 Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".		

9.13.4 ExP[1]: Input States

ExP[1] . ExBlo1-I	[Operation / Status Display / ExP / ExP[1]]
↓	<i>Module input state: External blocking1</i>
ExP[1] . ExBlo2-I	[Operation / Status Display / ExP / ExP[1]]
↓	<i>Module input state: External blocking2</i>
ExP[1] . ExBlo TripCmd-I	[Operation / Status Display / ExP / ExP[1]]
↓	<i>Module input state: External Blocking of the Trip Command</i>
ExP[1] . Alarm-I	[Operation / Status Display / ExP / ExP[1]]
↓	<i>Module input state: Alarm</i>
ExP[1] . Trip-I	[Operation / Status Display / ExP / ExP[1]]
↓	<i>Module input state: Trip</i>

9.13.5 ExP[1]: Signals (Output States)


ExP[1] . active	[Operation / Status Display / All Actives] [Operation / Status Display / ExP / ExP[1]]
↑	<i>Signal: active</i>
ExP[1] . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / ExP / ExP[1]]
↑	<i>Signal: Alarm</i>
ExP[1] . Trip	[Operation / Status Display / Trips] [Operation / Status Display / ExP / ExP[1]]
↑	<i>Signal: Trip</i>
ExP[1] . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / ExP / ExP[1]]
↑	<i>Signal: Trip Command</i>

ExP[1] . ExBlo	[Operation / Status Display / ExP / ExP[1]]
⬆	<i>Signal: External Blocking</i>
ExP[1] . Blo TripCmd	[Operation / Status Display / ExP / ExP[1]]
⬆	<i>Signal: Trip Command blocked</i>
ExP[1] . ExBlo TripCmd	[Operation / Status Display / ExP / ExP[1]]
⬆	<i>Signal: External Blocking of the Trip Command</i>


9.14 Supervision


9.14.1 CBF - Circuit breaker failure protection module


9.14.1.1 CBF: Device Planning Parameters


CBF . Mode	[Device planning]	
"-"	"-", use ↳ Device planning.	S.3
 <i>Module Circuit Breaker Failure protection, general operation mode</i>		

9.14.1.2 CBF: Global Parameters


CBF . Scheme	[Protection Para / Global Prot Para / Supervision / CBF]	
50BF	50BF, CB Pos, 50BF and CB Pos ↳ Scheme.	P.2
 <i>Scheme</i>		


CBF . ExBlo1	[Protection Para / Global Prot Para / Supervision / CBF]	
CBF . ExBlo2		
"-"	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 <i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


CBF . Trigger	[Protection Para / Global Prot Para / Supervision / CBF]	
All Trips	- . -, All Trips, External Trips, Current Trips ↳ Trigger.	P.2
 <i>Determining the trigger mode for the Breaker Failure.</i>		


CBF . Trigger1	[Protection Para / Global Prot Para / Supervision / CBF]	
CBF . Trigger2		
CBF . Trigger3		
"-"	"-" ... Logics . LE80.Out inverted ↳ Trigger.	P.2
 Trigger that will start the CBF		

9.14.1.3 CBF: Setting Group Parameters

CBF . Function	[Protection Para / Set 1...4 / Supervision / CBF]	
inactive	inactive, active ↳ Mode.	P.2
 Permanent activation or deactivation of module/stage.		

CBF . ExBlo Fc	[Protection Para / Set 1...4 / Supervision / CBF]	
inactive	inactive, active ↳ active/inactive.	P.2
 Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".		

CBF . I-CBF >	[Protection Para / Set 1...4 / Supervision / CBF]	
0.02In	0.02In ... 4.00In	P.2
 Breaker Failure Alarm will be initiated if this threshold is still exceeded after the timer has expired (50 BF).		

CBF . t-CBF	[Protection Para / Set 1...4 / Supervision / CBF]	
0.20s	0.00s ... 10.00s	P.2
 If the delay time is expired, an CBF alarm is given out.		

9.14.1.4 CBF: Direct Controls

CBF . Res Lockout	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
<input checked="" type="radio"/> <i>Reset Lockout</i>		

9.14.1.5 CBF: Input States

CBF . ExBlo1-I	[Operation / Status Display / Supervision / CBF]
↓ <i>Module input state: External blocking1</i>	

CBF . ExBlo2-I	[Operation / Status Display / Supervision / CBF]
↓ <i>Module input state: External blocking2</i>	

CBF . Trigger1-I	[Operation / Status Display / Supervision / CBF]
CBF . Trigger2-I	
CBF . Trigger3-I	
↓ <i>Module Input: Trigger that will start the CBF</i>	

9.14.1.6 CBF: Signals (Output States)

CBF . active	[Operation / Status Display / All Actives]
	[Operation / Status Display / Supervision / CBF]
↑ <i>Signal: active</i>	

CBF . Alarm	[Operation / Status Display / Alarms]
	[Operation / Status Display / Supervision / CBF]
↑ <i>Signal: Circuit Breaker Failure</i>	

CBF . ExBlo	[Operation / Status Display / Supervision / CBF]
↑ <i>Signal: External Blocking</i>	

CBF . Waiting for Trigger	[Operation / Status Display / Supervision / CBF]
⬆	<i>Waiting for Trigger</i>


CBF . running	[Operation / Status Display / Supervision / CBF]
⬆	<i>Signal: CBF-Module started</i>

CBF . Lockout	[Operation / Status Display / Supervision / CBF]
⬆	<i>Signal: Lockout</i>


CBF . Res Lockout	[Operation / Status Display / Supervision / CBF]
⬆	<i>Signal: Reset Lockout</i>


9.14.2 TCS – Trip circuit supervision


9.14.2.1 TCS: Device Planning Parameters


TCS . Mode	[Device planning]	
"_"	"_", use ↳ Device planning.	S.3
 <i>Trip circuit supervision, general operation mode</i>		

9.14.2.2 TCS: Global Parameters


TCS . Mode	[Protection Para / Global Prot Para / Supervision / TCS]	
Closed	Closed, Either ↳ Mode.	P.2
 <i>Select if trip circuit is going to be monitored when the breaker is closed or when the breaker is either open or close.</i>		


TCS . Input 1	[Protection Para / Global Prot Para / Supervision / TCS]	
"_"	"_" ... DI Slot X1 . DI 8 ↳ 1..n, Dig Inputs.	P.2
 <i>Select the input configured to monitor the trip coil when the breaker is closed.</i>		


TCS . Input 2	[Protection Para / Global Prot Para / Supervision / TCS]	
"_"	"_" ... DI Slot X1 . DI 8	P.2
Only available if:	↳ 1..n, Dig Inputs.	
 <i>Select the input configured to monitor the trip coil when the breaker is open. Only available if Mode set to "Either".</i>		

TCS . ExBlo1	[Protection Para / Global Prot Para / Supervision / TCS]	
TCS . ExBlo2		
"-"	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>	


9.14.2.3 TCS: Setting Group Parameters


TCS . Function	[Protection Para / Set 1...4 / Supervision / TCS]	
inactive	inactive, active ↳ Mode.	P.2
	<i>Permanent activation or deactivation of module/stage.</i>	

TCS . ExBlo Fc	[Protection Para / Set 1...4 / Supervision / TCS]	
inactive	inactive, active ↳ active/inactive.	P.2
	<i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>	

TCS . t-TCS	[Protection Para / Set 1...4 / Supervision / TCS]	
0.2s	0.10s ... 10.00s	P.2
	<i>Delay time of the Trip Circuit Supervision</i>	

9.14.2.4 TCS: Input States

TCS . Aux ON-I	[Operation / Status Display / Supervision / TCS]	
	<i>Module Input State: Position indicator/check-back signal of the CB (52a)</i>	

TCS . Aux OFF-I	[Operation / Status Display / Supervision / TCS]	
	<i>Module input state: Position indicator/check-back signal of the CB (52b)</i>	

TCS . ExBlo1-I	[Operation / Status Display / Supervision / TCS]
↓	<i>Module input state: External blocking1</i>

TCS . ExBlo2-I	[Operation / Status Display / Supervision / TCS]
↓	<i>Module input state: External blocking2</i>

9.14.2.5 TCS: Signals (Output States)

TCS . active	[Operation / Status Display / All Actives] [Operation / Status Display / Supervision / TCS]
↑	<i>Signal: active</i>


TCS . Alarm	[Operation / Status Display / Alarms] [Operation / Status Display / Supervision / TCS]
↑	<i>Signal: Alarm Trip Circuit Supervision</i>

TCS . ExBlo	[Operation / Status Display / Supervision / TCS]
↑	<i>Signal: External Blocking</i>


TCS . Not Possible	[Operation / Status Display / Supervision / TCS]
↑	<i>Not possible because no state indicator assigned to the breaker.</i>

9.14.3 CTS - CT Supervision


9.14.3.1 CTS: Device Planning Parameters


CTS . Mode	[Device planning]	
"_"	"_", use ↳ Device planning.	S.3
 <i>CT Supervision, general operation mode</i>		


9.14.3.2 CTS: Global Parameters


CTS . ExBlo1	[Protection Para / Global Prot Para / Supervision / CTS]	
CTS . ExBlo2		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 <i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.</i>		


9.14.3.3 CTS: Setting Group Parameters

CTS . Function	[Protection Para / Set 1...4 / Supervision / CTS]	
inactive	inactive, active ↳ Mode.	P.2
 <i>Permanent activation or deactivation of module/stage.</i>		


CTS . ExBlo Fc	[Protection Para / Set 1...4 / Supervision / CTS]	
inactive	inactive, active ↳ active/inactive.	P.2
 <i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>		


CTS . ΔI	[Protection Para / Set 1...4 / Supervision / CTS]	
0.50In	0.10In ... 1.00In	P.2
	<i>In order to prevent faulty tripping of phase selective protection functions that use the current as tripping criterion. If the difference of the measured earth current and the calculated value I_0 is higher than the pick up value ΔI, an alarm event is generated after expiring of the excitation time. In such a case, a fuse failure, a broken wire or a faulty measuring circuit can be assumed.</i>	

CTS . Alarm delay	[Protection Para / Set 1...4 / Supervision / CTS]	
1.0s	0.0s ... 9999.0s	P.2
	<i>Alarm delay</i>	


CTS . Kd	[Protection Para / Set 1...4 / Supervision / CTS]	
0.00	0.00 ... 0.99	P.2
	<i>Dynamic correction factor for the evaluation of the difference between calculated and measured earth current. This correction factor allows transformer faults, caused by higher currents, to be compensated.</i>	


9.14.3.4 CTS: Input States

CTS . ExBlo1-I	[Operation / Status Display / Supervision / CTS]	
	<i>Module input state: External blocking1</i>	

CTS . ExBlo2-I	[Operation / Status Display / Supervision / CTS]	
	<i>Module input state: External blocking2</i>	

9.14.3.5 CTS: Signals (Output States)

CTS . active	[Operation / Status Display / All Actives]
	[Operation / Status Display / Supervision / CTS]
	<i>Signal: active</i>


CTS . Alarm	[Operation / Status Display / Alarms]
	[Operation / Status Display / Supervision / CTS]
	<i>Signal: Alarm Current Transformer Measuring Circuit Supervision</i>

CTS . **ExBlo**

[Operation / Status Display / Supervision / CTS]


↕ *Signal: External Blocking*


10 Control


Control Page	[Control / Control Page]
 This item represents a special dialog. (See the Technical Manual for details.)	
	<i>Control Page</i>

10.1 Ctrl: Device Planning Parameters


10.2 Ctrl: Settings

Ctrl . Res NonIL	[Control / General Settings]
single Operation	single Operation, timeout, permanent C.2 ↳ NonIL ResetMode.
 <i>Resetmode Non-Interlocking</i>	

Ctrl . Timeout NonIL	[Control / General Settings]
60s	2s ... 3600s C.2
 <i>Timeout Non-Interlocking</i>	

Ctrl . NonIL Assign	[Control / General Settings]
"-"	"-" ... Sys . Internal test state C.2 ↳ 1..n, Assignment List.
 <i>Assignment Non-Interlocking</i>	

10.3 Ctrl: Direct Controls

Ctrl . Switching Authority	[Control / General Settings]
Local	None, Local, Remote, Local and Remote C.2 ↳ Switching Authority.
 <i>Switching Authority</i>	

Ctrl . NonInterl	[Control / General Settings]	
inactive	inactive, active ↳ Mode.	C.2
<input checked="" type="radio"/> <i>DC for Non-Interlocking</i>		

10.4 Ctrl: Input States

Ctrl . NonInterl-I	[Operation / Status Display / Control / General Control]
↳ <i>Non-Interlocking</i>	

10.5 Ctrl: Signals (Output States)

Ctrl . Local	[Operation / Status Display / Control / General Control]
↳ <i>Switching Authority: Local</i>	

Ctrl . Remote	[Operation / Status Display / Control / General Control]
↳ <i>Switching Authority: Remote</i>	

Ctrl . NonInterl	[Operation / Status Display / Control / General Control]
↳ <i>Non-Interlocking is active</i>	


Ctrl . SG Indeterm	[Operation / Status Display / Control / General Control]
↳ <i>(At least one) Switchgear is moving (Position cannot be determined).</i>	

Ctrl . SG Disturb	[Operation / Status Display / Control / General Control]
↳ <i>(At least one) Switchgear is disturbed.</i>	

Ctrl . CES SAauthority	[Operation / Status Display / Control / General Control]
↳ <i>Command Execution Supervision: Number of rejected Commands because of missing switching authority.</i>	











Ctrl . CES DoubleOperating	[Operation / Status Display / Control / General Control]
↳ <i>Command Execution Supervision: Number of rejected Commands because a second switch command is in conflict with a pending one.</i>	


10.6 Ctrl: Values


Ctrl . Switching Authority	[Operation / Security / Security States]
Local	None, Local, Remote, Local and Remote ↪ Switching Authority.
 <i>Switching Authority</i>	


10.7 SG[1] - Switchgear


10.7.1 SG[1]: Settings


SG[1] . ON incl Prot ON		[Control / SG / SG[1] / General Settings]
active	inactive, active	C.2
		 Mode.
 <i>The ON Command includes the ON Command issued by the Protection module.</i>		
SG[1] . OFF incl TripCmd		[Control / SG / SG[1] / General Settings]
active	inactive, active	C.2
		 Mode.
 <i>The OFF Command includes the OFF Command issued by the Protection module.</i>		
SG[1] . t-Move ON		[Control / SG / SG[1] / General Settings]
0.1s	0.01s ... 100.00s	C.2
 <i>Time to move to the ON Position</i>		
SG[1] . t-Move OFF		[Control / SG / SG[1] / General Settings]
0.1s	0.01s ... 100.00s	C.2
 <i>Time to move to the OFF Position</i>		
SG[1] . t-Dwell		[Control / SG / SG[1] / General Settings]
0s	0s ... 100.00s	C.2
 <i>Dwell time</i>		
SG[1] . t-TripCmd		[Control / SG / SG[1] / Trip Manager]
0.2s	0s ... 300.00s	P.2
 <i>Minimum hold time of the OFF-command (circuit breaker, load break switch)</i>		
SG[1] . Latched		[Control / SG / SG[1] / Trip Manager]
inactive	inactive, active	P.2
		 Mode.
 <i>Defines whether the Trip Command is latched.</i>		


SG[1] . Ack TripCmd		[Control / SG / SG[1] / Trip Manager]	
"_"	"_" ... Sys . Internal test state		P.2
	↳ 1..n, Assignment List.		
 Ack TripCmd			

SG[1] . Off Cmd1		[Control / SG / SG[1] / Trip Manager]	
I[1] . TripCmd	"_" ... ExP[4] . TripCmd		P.2
	↳ 1..n, Trip Cmds.		
 Off Command to the Circuit Breaker if the state of the assigned signal becomes true.			


SG[1] . Off Cmd2		[Control / SG / SG[1] / Trip Manager]	
...			
SG[1] . Off Cmd20			
"_"	"_" ... ExP[4] . TripCmd		P.2
	↳ 1..n, Trip Cmds.		
 Off Command to the Circuit Breaker if the state of the assigned signal becomes true.			


SG[1] . Aux ON		[Control / SG / SG[1] / Pos Indicatr Wirng]	
DI Slot X1 . DI 1	"_" ... Logics . LE80.Out inverted		C.2
	↳ 1..n, DI-LogicList.		
 The CB is in ON-position if the state of the assigned signal is true (52a).			


SG[1] . Aux OFF		[Control / SG / SG[1] / Pos Indicatr Wirng]	
DI Slot X1 . DI 2	"_" ... Logics . LE80.Out inverted		C.2
	↳ 1..n, DI-LogicList.		
 The CB is in OFF-position if the state of the assigned signal is true (52b).			


SG[1] . Ready	[Control / SG / SG[1] / Pos Indicatr Wirng]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	C.2
	<i>Circuit breaker is ready for operation if the state of the assigned signal is true. This digital input can be used by some protective elements (if they are available within the device) like Auto Reclosure (AR), e.g. as a trigger signal.</i>	


SG[1] . Removed	[Control / SG / SG[1] / Pos Indicatr Wirng]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	C.2
	<i>The withdrawable circuit breaker is Removed</i>	


SG[1] . SCmd ON	[Control / SG / SG[1] / Ex ON/OFF Cmd]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	C.2
	<i>Switching ON Command, e.g. the state of the Logics or the state of the digital input</i>	

SG[1] . SCmd OFF	[Control / SG / SG[1] / Ex ON/OFF Cmd]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, DI-LogicList.	C.2
	<i>Switching OFF Command, e.g. the state of the Logics or the state of the digital input</i>	


SG[1] . Interl ON1	[Control / SG / SG[1] / Interlockings]	
SG[1] . Interl ON2		
SG[1] . Interl ON3		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	C.2
	<i>Interlocking of the ON command</i>	


SG[1] . Interl OFF1	[Control / SG / SG[1] / Interlockings]	
SG[1] . Interl OFF2		
SG[1] . Interl OFF3		
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	C.2
 <i>Interlocking of the OFF command</i>		

SG[1] . Synchronism	[Control / SG / SG[1] / Synchron Switchg]	
"_"	"_" ... Logics . LE80.Out inverted ↳ 1..n, In-SyncList.	C.2
 <i>Synchronism</i>		

SG[1] . t-MaxSyncSuperv	[Control / SG / SG[1] / Synchron Switchg]	
0.2s	0s ... 3000.00s	C.2
 <i>Synchron-Run timer: Max. time allowed for synchronizing process after a close initiate. Only used for GENERATOR2SYSTEM working mode.</i>		


10.7.2 SG[1]: Direct Controls


SG[1] . Ack TripCmd	[Operation / Acknowledge]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Acknowledge Trip Command</i>		


SG[1] . Res SGwear SI SG	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
 <i>Resetting the slow Switchgear Alarm</i>		


SG[1] . Manipulate Position	[Control / SG / SG[1] / General Settings]	
inactive	inactive, Pos OFF, Pos ON ↳ Manipulate Position.	C.2
 WARNING! Fake Position - Manual Position Manipulation		


10.7.3 SG[1]: Input States


SG[1] . Interl ON1-I	[Operation / Status Display / Control / SG[1]]	
SG[1] . Interl ON2-I		
SG[1] . Interl ON3-I		
	<i>State of the module input: Interlocking of the ON command</i>	


SG[1] . Interl OFF1-I	[Operation / Status Display / Control / SG[1]]	
SG[1] . Interl OFF2-I		
SG[1] . Interl OFF3-I		
	<i>State of the module input: Interlocking of the OFF command</i>	

SG[1] . SCmd ON-I	[Operation / Status Display / Control / SG[1]]	
	<i>State of the module input: Switching ON Command, e.g. the state of the Logics or the state of the digital input</i>	

SG[1] . SCmd OFF-I	[Operation / Status Display / Control / SG[1]]	
	<i>State of the module input: Switching OFF Command, e.g. the state of the Logics or the state of the digital input</i>	

SG[1] . Aux ON-I	[Operation / Status Display / Control / SG[1]]	
	<i>Module Input State: Position indicator/check-back signal of the CB (52a)</i>	

SG[1] . Aux OFF-I	[Operation / Status Display / Control / SG[1]]	
	<i>Module input state: Position indicator/check-back signal of the CB (52b)</i>	

SG[1] . Ready-I	[Operation / Status Display / Control / SG[1]]	
	<i>Module input state: CB ready</i>	

SG[1] . Sys-in-Sync-I	[Operation / Status Display / Control / SG[1]]
↓	<i>State of the module input: This signals has to become true within the synchronization time. If not, switching is unsuccessful.</i>

SG[1] . Removed-I	[Operation / Status Display / Control / SG[1]]
↓	<i>State of the module input: The withdrawable circuit breaker is Removed</i>

SG[1] . Ack TripCmd-I	[Operation / Status Display / Control / SG[1]]
↓	<i>State of the module input: Acknowledgement Signal (for the Trip Command) Module input signal</i>

10.7.4 SG[1]: Signals (Output States)

SG[1] . TripCmd	[Operation / Status Display / TripCmds] [Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Trip Command</i>

SG[1] . SI SingleContactInd	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: The Position of the Switchgear is detected by one auxiliary contact (pole) only. Thus indeterminate and disturbed Positions cannot be detected.</i>

SG[1] . Pos not ON	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Pos not ON</i>

SG[1] . Pos ON	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Circuit Breaker is in ON-Position</i>

SG[1] . Pos OFF	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Circuit Breaker is in OFF-Position</i>

SG[1] . Pos Indeterm	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Circuit Breaker is in Indeterminate Position</i>

SG[1] . Pos Disturb	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Circuit Breaker Disturbed - Undefined Breaker Position. The Position Indicators contradict themselves. After expiring of a supervision timer this signal becomes true.</i>









SG[1] . Pos	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Circuit Breaker Position (0 = Indeterminate, 1 = OFF, 2 = ON, 3 = Disturbed)</i>
SG[1] . Ready	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Circuit breaker is ready for operation.</i>
SG[1] . t-Dwell	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Dwell time</i>
SG[1] . Removed	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: The withdrawable circuit breaker is Removed</i>
SG[1] . Interl ON	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: One or more IL_On inputs are active.</i>
SG[1] . Interl OFF	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: One or more IL_Off inputs are active.</i>
SG[1] . CES succesf	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switching command executed successfully.</i>
SG[1] . CES Disturbed	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switching Command unsuccessful. Switchgear in disturbed position.</i>
SG[1] . CES Fail TripCmd	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Command execution failed because trip command is pending.</i>
SG[1] . CES SwitchDir	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision respectively Switching Direction Control: This signal becomes true, if a switch command is issued even though the switchgear is already in the requested position. Example: A switchgear that is already OFF should be switched OFF again (doubly). The same applies to CLOSE commands.</i>
SG[1] . CES ON d OFF	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: On Command during a pending OFF Command.</i>

SG[1] . CES SG not ready	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switchgear not ready</i>
SG[1] . CES Fiel Interl	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switching Command not executed because of field interlocking.</i>
SG[1] . CES SyncTimeout	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switching Command not executed. No Synchronization signal while t-sync was running.</i>
SG[1] . CES SG removed	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Command Execution Supervision: Switching Command unsuccessful, Switchgear removed.</i>
SG[1] . Prot ON	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: ON Command issued by the Prot module</i>
SG[1] . Ack TripCmd	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Acknowledge Trip Command</i>
SG[1] . ON incl Prot ON	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: The ON Command includes the ON Command issued by the Protection module.</i>
SG[1] . OFF incl TripCmd	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: The OFF Command includes the OFF Command issued by the Protection module.</i>
SG[1] . Position Ind manipul	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Position Indicators faked</i>
SG[1] . SGwear Slow SG	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Alarm, the circuit breaker (load-break switch) becomes slower</i>
SG[1] . Res SGwear SI SG	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Resetting the slow Switchgear Alarm</i>


SG[1] . ON Cmd	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: ON Command issued to the switchgear. Depending on the setting the signal may include the ON command of the Prot module.</i>
SG[1] . OFF Cmd	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: OFF Command issued to the switchgear. Depending on the setting the signal may include the OFF command of the Prot module.</i>
SG[1] . ON Cmd manual	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: ON Cmd manual</i>
SG[1] . OFF Cmd manual	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: OFF Cmd manual</i>
SG[1] . Sync ON request	[Operation / Status Display / Control / SG[1]]
↑	<i>Signal: Synchronous ON request</i>

10.7.5 Breaker Wear

10.7.5.1 SG[1]: Settings

SG[1] . Operations Alarm		[Control / SG / SG[1] / SG Wear]
9999	1 ... 100000	C.2
	<i>Maximum number of operations. If the operations counter »TripCmd Cr« exceeds this limit then the signal »Operations Alarm« is set.</i>	
SG[1] . Isum Intr Alarm		[Control / SG / SG[1] / SG Wear]
100.00kA	0.00kA ... 2000.00kA	C.2
	<i>Alarm, the Sum (Limit) of interrupting currents has been exceeded.</i>	
SG[1] . Isum Intr ph Alm		[Control / SG / SG[1] / SG Wear]
100.00kA	0.00kA ... 2000.00kA	C.2
	<i>Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.</i>	
SG[1] . SGwear Curve Fc		[Control / SG / SG[1] / SG Wear]
inactive	inactive, active  active/inactive.	C.2
	<i>The Circuit Breaker (load-break switch) Wear Curve defines the maximum allowed CLOSE/ OPEN cycles depending on the brake currents. If the circuit breaker maintenance curve is exceeded, an alarm will be issued. The breaker maintenance curve is to be taken from the technical data sheet of the breaker manufacturer. By means of the available points this curve is to be replicated.</i>	
SG[1] . WearLevel Alarm		[Control / SG / SG[1] / SG Wear]
80.00%	0.00% ... 100.00%	C.2
	<i>Threshold for the Alarm</i>	
SG[1] . WearLevel Lockout		[Control / SG / SG[1] / SG Wear]
95.00%	0.00% ... 100.00%	C.2
	<i>Threshold for the Lockout Level</i>	
SG[1] . Current1		[Control / SG / SG[1] / SG Wear]
0.00kA	0.00kA ... 2000.00kA	C.2
	<i>Interrupted Current Level #1</i>	


SG[1] . Count1	[Control / SG / SG[1] / SG Wear]	
10000	1 ... 32000	C.2
 <i>Open Counts Allowed #1</i>		

SG[1] . Current2	[Control / SG / SG[1] / SG Wear]	
1.20kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #2</i>		


SG[1] . Count2	[Control / SG / SG[1] / SG Wear]	
10000	1 ... 32000	C.2
 <i>Open Counts Allowed #2</i>		

SG[1] . Current3	[Control / SG / SG[1] / SG Wear]	
8.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #3</i>		

SG[1] . Count3	[Control / SG / SG[1] / SG Wear]	
150	1 ... 32000	C.2
 <i>Open Counts Allowed #3</i>		

SG[1] . Current4	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #4</i>		


SG[1] . Count4	[Control / SG / SG[1] / SG Wear]	
12	1 ... 32000	C.2
 <i>Open Counts Allowed #4</i>		

SG[1] . Current5	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #5</i>		


SG[1] . Count5	[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000	C.2
 <i>Open Counts Allowed #5</i>		

SG[1] . Current6	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #6</i>		


SG[1] . Count6	[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000	C.2
 <i>Open Counts Allowed #6</i>		


SG[1] . Current7	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #7</i>		

SG[1] . Count7	[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000	C.2
 <i>Open Counts Allowed #7</i>		

SG[1] . Current8	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #8</i>		

SG[1] . Count8	[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000	C.2
 <i>Open Counts Allowed #8</i>		


SG[1] . Current9	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #9</i>		


SG[1] . Count9	[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000	C.2
 <i>Open Counts Allowed #9</i>		


SG[1] . Current10	[Control / SG / SG[1] / SG Wear]	
20.00kA	0.00kA ... 2000.00kA	C.2
 <i>Interrupted Current Level #10</i>		


SG[1] . Count10		[Control / SG / SG[1] / SG Wear]	
1	1 ... 32000		C.2
	<i>Open Counts Allowed #10</i>		

10.7.5.2 SG[1]: Direct Controls


SG[1] . Res TripCmd Cr		[Operation / Reset]	
inactive	inactive, active		P.1
	 Mode.		
<input checked="" type="radio"/>	<i>Resetting of the Counter: Total number of trips of the switchgear</i>		

SG[1] . Res Sum trip		[Operation / Reset]	
inactive	inactive, active		P.1
	 Mode.		
<input checked="" type="radio"/>	<i>Reset summation of the tripping currents</i>		

SG[1] . Res CB OPEN capacity		[Operation / Reset]	
inactive	inactive, active		P.1
	 Mode.		
<input checked="" type="radio"/>	<i>Reset the CB OPEN capacity.</i> <i>(Remark: A »CB OPEN capacity« value of 100% means that the circuit breaker has to be maintained.)</i>		


SG[1] . Res Isum Intr per hour		[Operation / Reset]	
inactive	inactive, active		P.1
	 Mode.		
<input checked="" type="radio"/>	<i>Reset of the Sum per hour of interrupting currents.</i>		


10.7.5.3 SG[1]: Signals (Output States)


SG[1] . Operations Alarm		[Operation / Status Display / Control / SG[1]]	
	<i>Signal: Too many Operations. (The operations counter »TripCmd Cr« has exceeded the limit set at »Operations Alarm«.)</i>		

SG[1] . Isum Intr trip: IL1	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL1</i>
SG[1] . Isum Intr trip: IL2	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL2</i>
SG[1] . Isum Intr trip: IL3	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL3</i>
SG[1] . Isum Intr trip	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded in at least one phase.</i>
SG[1] . Res TripCmd Cr	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Resetting of the Counter: Total number of trips of the switchgear</i>
SG[1] . Res Sum trip	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Reset summation of the tripping currents</i>
SG[1] . WearLevel Alarm	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Threshold for the Alarm</i>
SG[1] . WearLevel Lockout	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Threshold for the Lockout Level</i>
SG[1] . Res CB OPEN capacity	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Reset of the wear maintenance curve (i. e. of the counter for the Circuit Breaker OPEN capacity.</i>
SG[1] . Isum Intr ph Alm	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.</i>
SG[1] . Res Isum Intr ph Alm	[Operation / Status Display / Control / SG[1]]
⤴	<i>Signal: Reset of the Alarm, "the per hour Sum (Limit) of interrupting currents has been exceeded".</i>


10.7.5.4 SG[1]: Values

SG[1] . Sum trip IL1	[Operation / Count and RevData / Control / SG[1]]
SG[1] . Sum trip IL2	
SG[1] . Sum trip IL3	
 <i>Summation of the tripping currents phase</i>	

SG[1] . Isum Intr per hour	[Operation / Count and RevData / Control / SG[1]]
 <i>Sum per hour of interrupting currents.</i>	


SG[1] . CB OPEN capacity	[Operation / Count and RevData / Control / SG[1]]
 <i>Used capacity of the circuit breaker. (100% means that the circuit breaker has to be maintained.)</i>	

10.7.5.5 SG[1]: Counters


SG[1] . TripCmd Cr	[Operation / Count and RevData / Control / SG[1]]
 <i>Counter: Total number of trips of the switchgear.</i>	


11 System Alarms


11.1 SysA: Device Planning Parameters


SysA . Mode	[Device planning]	
"-"	"-", use ↳ Mode.	S.3
 <i>general operation mode</i>		

11.2 SysA: Settings

SysA . Function	[SysA / General Settings]	
inactive	inactive, active ↳ Mode.	P.2
 <i>Permanent activation or deactivation of module/stage.</i>		


SysA . ExBlo Fc	[SysA / General Settings]	
"-"	"-" ... Sys . Internal test state ↳ 1..n, Assignment List.	P.2
 <i>Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".</i>		

SysA . Alarm	[SysA / Demand / Current Demand] [SysA / THD / I THD]	
inactive	inactive, active ↳ active/inactive.	P.2
 <i>Alarm</i>		


SysA . Threshold	[SysA / Demand / Current Demand] [SysA / THD / I THD]	
500A	10A ... 500000A	P.2
 <i>Threshold (to be entered as primary value)</i>		


SysA . t-Delay	[SysA / Demand / Current Demand] [SysA / THD / I THD]	
0min	0min ... 60min	P.2
 <i>Tripping Delay</i>		


11.3 SysA: Input States


SysA . ExBlo-I	[Operation / Status Display / SysA]
 <i>Module input state: External blocking</i>	


11.4 SysA: Signals (Output States)


SysA . active	[Operation / Status Display / SysA]
 <i>Signal: active</i>	

SysA . ExBlo	[Operation / Status Display / SysA]
 <i>Signal: External Blocking</i>	

SysA . Alm Current avg (Demd)	[Operation / Status Display / SysA]
 <i>Signal: Alarm: Averaged demand current exceeded</i>	

SysA . Alarm I THD	[Operation / Status Display / SysA]
 <i>Signal: Alarm Total Harmonic Distortion Current</i>	


SysA . Trip Current avg (Demd)	[Operation / Status Display / SysA]
 <i>Signal: Trip: Averaged demand current exceeded</i>	

SysA . Trip I THD	[Operation / Status Display / SysA]
 <i>Signal: Trip Total Harmonic Distortion Current</i>	



12.1 Event rec - The event recorder logs all events like switching operations, change of parameters, alarms, trips, operating mode selections, blockings and state transitions of inputs and outputs.

12 Records


12.1 Event rec - The event recorder logs all events like switching operations, change of parameters, alarms, trips, operating mode selections, blockings and state transitions of inputs and outputs.

Event rec	[Operation / Recorders / Event rec]
	This item represents a special dialog. (See the Technical Manual for details.) <i>The event recorder logs all events like switching operations, change of parameters, alarms, trips, operating mode selections, blockings and state transitions of inputs and outputs.</i>


12.1.1 Event rec: Direct Controls

Event rec . Res all rec	[Operation / Reset]
inactive	inactive, active  Mode.
	<i>Reset all records</i>
	P.1



12.1.2 Event rec: Signals (Output States)



Event rec . Res all records	[Operation / Status Display / Recorders / Event rec]
	<i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>



12.2 Disturb rec - After a trigger event has become true, the disturbance recorder writes analogue and digital tracks


Disturb rec	[Operation / Recorders / Disturb rec]	
	This item represents a special dialog. (See the Technical Manual for details.)	
	<i>After a trigger event has become true, the disturbance recorder writes analogue and digital tracks</i>	


12.2.1 Disturb rec: Settings


Disturb rec . Start: 1	[Device Para / Recorders / Disturb rec]	
Prot . Trip	“-” ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Start recording if the assigned signal is true.</i>	

Disturb rec . Start: 2	[Device Para / Recorders / Disturb rec]	
...		
Disturb rec . Start: 8		
“-”	“-” ... Sys . Internal test state	S.3
	 1..n, Assignment List.	
	<i>Start recording if the assigned signal is true.</i>	


Disturb rec . Auto overwriting	[Device Para / Recorders / Disturb rec]	
active	inactive, active	S.3
	 Mode.	
	<i>If there is no more free memory capacity left, the oldest file will be overwritten.</i>	


Disturb rec . Pre-trigger time	[Device Para / Recorders / Disturb rec]	
20%	0% ... 99%	S.3
	<i>The pre trigger time is set in percent of the »Max file size« value. It corresponds to the part of recording before the onset of the trigger event.</i>	

Disturb rec . Post-trigger time	[Device Para / Recorders / Disturb rec]	
20%	0% ... 99%	S.3
	<i>The post trigger time is set in percent of the »Max file size« value. It is the remaining time of the »Max file size«, depending on the »Pre-trigger time« setting and the duration of the trigger event, but at maximum the »Post-trigger time« set here.</i>	


Disturb rec . Max file size	[Device Para / Recorders / Disturb rec]	
2s	0.1s ... 15.0s	S.3
	<i>The maximum storage capacity per record, including pre-trigger and post-trigger time. The amount of records depends on the size of each record, on the max. file size (set here), and on the total storage capacity.</i>	

12.2.2 Disturb rec: Direct Controls


Disturb rec . Man Trigger	[Operation / Recorders / Man Trigger]	
False	False, True  true or not true.	P.1
<input checked="" type="radio"/>	<i>Manual Trigger</i>	






Disturb rec . Res all rec	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
<input checked="" type="radio"/>	<i>Reset all records</i>	

12.2.3 Disturb rec: Input States




Disturb rec . Start1-I	[Operation / Status Display / Recorders / Disturb rec]	
...		
Disturb rec . Start8-I		
	<i>State of the module input:: Trigger event / start recording</i>	

12.2.4 Disturb rec: Signals (Output States)


Disturb rec . recording	[Operation / Status Display / Recorders / Disturb rec]	
	<i>Signal: Recording</i>	

Disturb rec . memory full		[Operation / Status Display / Recorders / Disturb rec]
	<i>Signal: Memory full</i>	
Disturb rec . Clear fail		[Operation / Status Display / Recorders / Disturb rec]
	<i>Signal: Clear failure in memory</i>	
Disturb rec . Res all records		[Operation / Status Display / Recorders / Disturb rec]
	<i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>	
Disturb rec . Res record		[Operation / Status Display / Recorders / Disturb rec]
	<i>Signal: Delete record</i>	
Disturb rec . Man Trigger		[Operation / Status Display / Recorders / Disturb rec]
	<i>Signal: Manual Trigger</i>	


12.2.5 Disturb rec: Values


Disturb rec . Rec state		[Operation / Status Display / Recorders / Disturb rec]
Ready	Ready, Recording, Writing file, Trigger Blo	
	 Rec state.	
	<i>Recording state</i>	
Disturb rec . Error code		[Operation / Status Display / Recorders / Disturb rec]
OK	OK, Write err, Clear fail, Calculation err, File not found, Auto overwriting off	
	 Fault.	
	<i>Error code</i>	

12.3 Fault rec - The values measured at the time of tripping are saved by the Fault Recorder.


Fault rec	[Operation / Recorders / Fault rec]	
	This item represents a special dialog. (See the Technical Manual for details.) <i>The values measured at the time of tripping are saved by the Fault Recorder.</i>	

12.3.1 Fault rec: Settings


Fault rec . Record-Mode	[Device Para / Recorders / Fault rec]	
Trips only	Alarms and Trips, Trips only ↳ Record-Mode.	S.3
	<i>Recorder Mode (Set the behaviour of the recorder)</i>	

Fault rec . t-meas-delay	[Device Para / Recorders / Fault rec]	
0ms	0ms ... 60ms	S.3
	<i>After the Trip, the measurement will be delayed for this time.</i>	


12.3.2 Fault rec: Direct Controls

Fault rec . Res all rec	[Operation / Reset]	
inactive	inactive, active ↳ Mode.	P.1
	<i>Reset all records</i>	


12.3.3 Fault rec: Signals (Output States)


Fault rec . Res record	[Operation / Status Display / Recorders / Fault rec]	
	<i>Signal: Delete record</i>	


12.4 Trend rec - Trend Recorder

Trend rec	[Operation / Recorders / Trend rec]
 This item represents a special dialog. (See the Technical Manual for details.)	
<i>Trend Recorder</i>	

12.4.1 Trend rec: Settings

Trend rec . Resolution	[Device Para / Recorders / Trend rec]
15 min	60 min, 30 min, 15 min, 10 min, 5 min S.3
↳ Resolution.	
 <i>Resolution (recording frequency)</i>	

Trend rec . Trend1	[Device Para / Recorders / Trend rec]
CT . IL1 RMS	"-" ... ThR . Thermal Cap Used S.3
↳ 1..n, TrendRecList.	
 <i>Observed Value1</i>	

Trend rec . Trend2	[Device Para / Recorders / Trend rec]
CT . IL2 RMS	"-" ... ThR . Thermal Cap Used S.3
↳ 1..n, TrendRecList.	
 <i>Observed Value2</i>	


Trend rec . Trend3	[Device Para / Recorders / Trend rec]
CT . IL3 RMS	"-" ... ThR . Thermal Cap Used S.3
↳ 1..n, TrendRecList.	
 <i>Observed Value3</i>	

Trend rec . Trend4	[Device Para / Recorders / Trend rec]
CT . IG meas RMS	"-" ... ThR . Thermal Cap Used S.3
↳ 1..n, TrendRecList.	
 <i>Observed Value4</i>	

Trend rec . Trend5		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value5</i>	

Trend rec . Trend6		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value6</i>	


Trend rec . Trend7		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value7</i>	

Trend rec . Trend8		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value8</i>	


Trend rec . Trend9		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value9</i>	

Trend rec . Trend10		[Device Para / Recorders / Trend rec]
"_"	"_" ... ThR . Thermal Cap Used ↳ 1..n, TrendRecList.	S.3
	<i>Observed Value10</i>	


12.4.2 Trend rec: Direct Controls

Trend rec . Res all rec	[Operation / Reset]	
inactive	inactive, active  Mode.	P.1
<input checked="" type="radio"/> <i>Reset all records</i>		

12.4.3 Trend rec: Signals (Output States)

Trend rec . Res all records	[Operation / Status Display / Recorders / Trend rec]	
 <i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>		


12.4.4 Trend rec: Counters

Trend rec . Max avail Entries	[Operation / Count and RevData / Trend rec]	
 <i>Maximum available entries in the current configuration</i>		

13 Logic


13.1 Logics - Logic


13.1.1 Logics: Device Planning Parameters


Logics . No of Equations:	[Device planning]	
20	0, 5, 10, 20, 40, 80 ↳ No of Equations:.	S.3
 <i>Number of required Logic Equations:</i>		


13.1.2 Logics ... Logics - Logic


13.1.2.1 Logics: Settings


Logics . LE1.Gate		[Logics / LE 1]
AND	AND, OR, NAND, NOR	S.3
	↳ LE1.Gate.	
	<i>Logic gate</i>	


Logics . LE1.Input1		[Logics / LE 1]
...		
Logics . LE1.Input4		
"-"	"-" ... Sys . Internal test state	S.3
	↳ 1..n, Assignment List.	
	<i>Assignment of the Input Signal</i>	


Logics . LE1.Inverting1		[Logics / LE 1]
...		
Logics . LE1.Inverting4		
inactive	inactive, active	S.3
	↳ Mode.	
	<i>Inverting the input signals.</i>	

Logics . LE1.t-On Delay		[Logics / LE 1]
0.00s	0.00s ... 36000.00s	S.3
	<i>Switch On Delay</i>	


Logics . LE1.t-Off Delay		[Logics / LE 1]
0.00s	0.00s ... 36000.00s	S.3
	<i>Switch Off Delay</i>	


Logics . LE1.Reset Latched	[Logics / LE 1]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
 <i>Reset Signal for the Latching</i>		

Logics . LE1.Inverting Reset	[Logics / LE 1]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting Reset Signal for the Latching</i>		


Logics . LE1.Inverting Set	[Logics / LE 1]	
inactive	inactive, active ↳ Mode.	S.3
 <i>Inverting the Setting Signal for the Latching</i>		


13.1.2.2 Logics: Input States

Logics . LE1.Gate In1-I	[Operation / Status Display / Logics]	
...		
Logics . LE1.Gate In4-I		
 <i>State of the module input: Assignment of the Input Signal</i>		

Logics . LE1.Reset Latch-I	[Operation / Status Display / Logics]	
 <i>State of the module input: Reset Signal for the Latching</i>		

13.1.2.3 Logics: Signals (Output States)

Logics . LE1.Gate Out	[Operation / Status Display / Logics]	
 <i>Signal: Output of the logic gate</i>		

Logics . LE1.Timer Out	[Operation / Status Display / Logics]	
 <i>Signal: Timer Output</i>		

13 Logic

13.1.2.3 Logics: Signals (Output States)


Logics . LE1.Out	[Operation / Status Display / Logics]
-------------------------	---------------------------------------

⬆	<i>Signal: Latched Output (Q)</i>
---	-----------------------------------



Logics . LE1.Out inverted	[Operation / Status Display / Logics]
----------------------------------	---------------------------------------

⬆	<i>Signal: Negated Latched Output (Q NOT)</i>
---	---


14 Self-Supervision


Messages	[Operation / Self-Supervision / Messages]
 This item represents a special dialog. (See the Technical Manual for details.)	
	<i>Internal messages</i>


14.1 SSV: Direct Controls


SSV . Ack System LED	[Operation / Acknowledge]	
False	False, True	P.1
	 true or not true.	
 <i>Acknowledge System LED (red/green flashing LED)</i>		

14.2 SSV: Signals (Output States)


SSV . System Error	[Operation / Self-Supervision / System State]
 <i>Signal: Device Failure</i>	

SSV . SelfSuperVision Contact	[Operation / Self-Supervision / System State]
 <i>Signal: SelfSuperVision Contact</i>	


SSV . New error	[Operation / Self-Supervision / System State]
 <i>Signal: A new error message has been issued.</i>	

SSV . New warning	[Operation / Self-Supervision / System State]
 <i>Signal: A new warning message has been issued.</i>	

14.3 SSV: Counters


SSV . Cr No of free sockets	[Operation / Self-Supervision / System State]
 <i>Counter for network diagnosis. Number of free sockets.</i>	

15 Service


- Sys . Reboot:  [Table](#)


15.1 Sgen - Sine wave generator


15.1.1 Sgen: Device Planning Parameters


Sgen . Mode	[Device planning]	
use	“-”, use ↳ Mode.	S.3
	<i>Sine wave generator, general operation mode</i>	


15.1.2 Sgen: Settings


Sgen . TripCmd Mode	[Service / Test (Prot inhibit) / Sgen / Process]	
No TripCmd	No TripCmd, With TripCmd ↳ TripCmd Mode.	S.3
	<i>Trip Command Mode: Select between two operating modes for the Fault Simulator: "cold simulation" (without tripping the circuit breaker), or "hot simulation" (i.e. the simulation is authorized to trip the circuit breaker)</i>	


Sgen . Ex Start Simulation	[Service / Test (Prot inhibit) / Sgen / Process]	
“-”	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>External Start of Fault Simulation (Using the test parameters)</i>	


Sgen . ExBlo1	[Service / Test (Prot inhibit) / Sgen / Process]	
SG[1] . Pos ON	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.1</i>	

Sgen . ExBlo2	[Service / Test (Prot inhibit) / Sgen / Process]	
“-”	“-” ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.2</i>	


Sgen . Ex ForcePost	[Service / Test (Prot inhibit) / Sgen / Process]	
"_"	"_" ... Sys . Internal test state ↳ 1..n, Assignment List.	S.3
	<i>Force Post state. Abort simulation.</i>	


Sgen . PreFault	[Service / Test (Prot inhibit) / Sgen / Configuration / Times]	
0.0s	0.00s ... 300.00s	S.3
	<i>Pre Fault Duration</i>	

Sgen . FaultSimulation	[Service / Test (Prot inhibit) / Sgen / Configuration / Times]	
0.0s	0.00s ... 10800.00s	S.3
	<i>Duration of Fault Simulation</i>	


Sgen . PostFault	[Service / Test (Prot inhibit) / Sgen / Configuration / Times]	
0.0s	0.00s ... 300.00s	S.3
	<i>Post Fault Duration</i>	

15.1.3 Sgen: Direct Controls

Sgen . Start Simulation	[Service / Test (Prot inhibit) / Sgen / Process]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Start Fault Simulation (Using the test parameters)</i>	

Sgen . Stop Simulation	[Service / Test (Prot inhibit) / Sgen / Process]	
inactive	inactive, active ↳ Mode.	S.3
	<i>Stopp Fault Simulation (Using the test parameters)</i>	

15.1.4 Sgen: Input States

Sgen . Ex Start Simulation-I	[Operation / Status Display / Sgen]	
	<i>State of the module input:External Start of Fault Simulation (Using the test parameters)</i>	

Sgen . ExBlo1-I	[Operation / Status Display / Sgen] [Service / Test (Prot inhibit) / Sgen / State]
↓	<i>Module input state: External blocking1</i>

Sgen . ExBlo2-I	[Operation / Status Display / Sgen] [Service / Test (Prot inhibit) / Sgen / State]
↓	<i>Module input state: External blocking2</i>

Sgen . Ex ForcePost-I	[Operation / Status Display / Sgen] [Service / Test (Prot inhibit) / Sgen / State]
↓	<i>State of the module input:Force Post state. Abort simulation.</i>

15.1.5 Sgen: Signals (Output States)

Sgen . Manual Start	[Operation / Status Display / Sgen]
↓	<i>Fault Simulation has been started manually.</i>

Sgen . Manual Stop	[Operation / Status Display / Sgen]
↓	<i>Fault Simulation has been stopped manually.</i>


Sgen . Running	[Operation / Status Display / Sgen] [Service / Test (Prot inhibit) / Sgen / State]
↓	<i>Signal; Measuring value simulation is running</i>

Sgen . Started	[Operation / Status Display / Sgen]
↓	<i>Fault Simulation has been started</i>

Sgen . Stopped	[Operation / Status Display / Sgen]
↓	<i>Fault Simulation has been stopped</i>


Sgen . State	[Operation / Status Display / Sgen]
↓	<i>Signal: Wave generation states: 0=Off, 1=PreFault, 2=Fault, 3=PostFault, 4=InitReset</i>


15.1.6 Sgen: Values


Sgen . State	[Service / Test (Prot inhibit) / Sgen / State]
Off	Off, PreFault, FaultSimulation, PostFault, Init Res ↪ State.
 <i>Wave generation states: 0=Off, 1=PreFault, 2=Fault, 3=PostFault, 4=InitReset</i>	


15.1.7 Sgen - Sine wave generator


15.1.7.1 Sgen: Settings


Sgen . IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Pre State: phase L1</i>	


Sgen . IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Pre State: phase L2</i>	


Sgen . IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Pre State: phase L3</i>	


Sgen . IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0.0In	If: slot 3 = Current measuring inputs2 <ul style="list-style-type: none"> • 0.00In ... 2.500In If: slot 3 ≠ Current measuring inputs2 <ul style="list-style-type: none"> • 0.00In ... 25.00In 	S.3
	<i>Current Fundamental Magnitude in Pre State: IG</i>	


Sgen . phi IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Pre-Phase:phase L1</i>	


Sgen . phi IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
240°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Pre-Phase:phase L2</i>	


Sgen . phi IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
120°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Pre-Phase:phase L3</i>	


Sgen . phi IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / PreFault / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Pre-Phase: IG</i>	

Sgen . IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Fault State: phase L1</i>	





Sgen . IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Fault State: phase L2</i>	

Sgen . IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude in Fault State: phase L3</i>	

Sgen . IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0.0In	If: slot 3 = Current measuring inputs2 • 0.00In ... 2.500In If: slot 3 ≠ Current measuring inputs2 • 0.00In ... 25.00In	S.3
	<i>Current Fundamental Magnitude in Fault State: IG</i>	

Sgen . phi IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Fault-Phase:phase L1</i>	

Sgen . phi IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
240°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Fault-Phase:phase L2</i>	
Sgen . phi IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
120°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Fault-Phase:phase L3</i>	
Sgen . phi IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / FaultSimulation / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Fault-Phase: IG</i>	
Sgen . IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude during Post phase: phase L1</i>	
Sgen . IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude during Post phase: phase L2</i>	
Sgen . IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0.0In	0.00In ... 40.00In	S.3
	<i>Current Fundamental Magnitude during Post phase: phase L3</i>	
Sgen . IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0.0In	If: slot 3 = Current measuring inputs2 <ul style="list-style-type: none"> • 0.00In ... 2.500In If: slot 3 ≠ Current measuring inputs2 <ul style="list-style-type: none"> • 0.00In ... 25.00In 	S.3
	<i>Current Fundamental Magnitude during Post phase: IG</i>	

Sgen . phi IL1	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Post phase: phase L1</i>	
Sgen . phi IL2	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
240°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Post phase: phase L2</i>	
Sgen . phi IL3	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
120°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Post phase: phase L3</i>	
Sgen . phi IG meas	[Service / Test (Prot inhibit) / Sgen / Configuration / PostFault / CT]	
0°	-360° ... 360°	S.3
	<i>Start Position respectively Start Angle of the Current Phasor during Post phase: IG</i>	

16 Selection Lists

Rec state

Recording state

Selection list referenced by the following parameters:

-  Disturb rec . Rec state

Rec state	Description
Ready	<i>Ready</i>
Recording	<i>Recording</i>
Writing file	<i>Signal: Writing file</i>
Trigger Blo	<i>Trigger signal is still active - wait for fallback. A new record can only be started if and only the trigger signal that started the previous record has fallen back once. Therewith endless records are prevented.</i>

Fault




Selection list referenced by the following parameters:

-  Disturb rec . Error code

Fault	Description
OK	<i>OK</i>
Write err	<i>Signal: Writing error in memory</i>
Clear fail	<i>Signal: Clear failure in memory</i>
Calculation err	<i>Calculation error</i>
File not found	<i>File not found</i>
Auto overwriting off	<i>If there is no more memory available the record is being stopped.</i>

State

Selection list referenced by the following parameters:

-  IEC 61850 . GoosePublisherState
-  IEC 61850 . GooseSubscriberState
-  IEC 61850 . MmsServerState

State	Description
Off	Off
On	On
Error	Error

State

Selection list referenced by the following parameters:

-  Profibus . Slave State

State	Description
Baud Search	No connection to the PROFIBUS-DP Master
Baud Found	The PROFIBUS DP Slave is connected to the bus. The Slave has not yet been addressed by the Master Device (and it was not yet addressed since the last break of the connection).
PRM OK	The slave was addressed by the master, the parameter setting message was received and is OK, a configuration message is expected from the master.
PRM REQ	The slave is no longer addressed by the master (modified parameters within the master without having the connection stopped, master software is tuned off but lower PROFIBUS layer is still active)
PRM Fault	An Error in the parameter setting message (e.g. wrong PNO identification number)
CFG Fault	Configuration error the number of input/output bytes parameterised in the master does not match the number parametrised in the device (slave).
Clear Data	Master sends a General Control command to clear the data.
Data exchange	Master and slave exchange data.

Baud rate

Selection list referenced by the following parameters:

-  Profibus . Baud rate

Baud rate	Description
12 Mb/s	12 Mb/s

Baud rate	Description
6 Mb/s	6 Mb/s
3 Mb/s	3 Mb/s
1.5 Mb/s	1.5 Mb/s
0.5 Mb/s	0.5 Mb/s
187500 baud	187500 baud
93750 baud	93750 baud
45450 baud	45450 baud
19200 baud	19200 baud
9600 baud	9600 baud
--	--

PNO Id

PNO Identification Number. GSD Identification Number.

Selection list referenced by the following parameters:

-  Profibus . PNO Id

PNO Id	Description
0C50h	<i>ProdiD for the Config file.</i>

Config status

Status of the user-defined SCADA configuration.\nPossible values:

Selection list referenced by the following parameters:

-  Profibus . Config status

Config status	Description
Changing	<i>New SCADA configuration is being loaded, but not active yet.</i>
OK	<i>The SCADA configuration is active.</i>
Config. not avail.	<i>The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>
Error	<i>Unexpected error. Please contact our service-team.</i>

Server State

Server State.



Selection list referenced by the following parameters:

-  [SNTP . Used Server](#)

Server State	Description
Server1	<i>Server1 used.</i>
Server2	<i>Server2 used.</i>
None	<i>No Server used.</i>

State

Selection list referenced by the following parameters:

-  [SNTP . ServerQty](#)
-  [SNTP . NetConn](#)



State	Description
GOOD	<i>GOOD</i>
SUFFICIENT	<i>SUFFICIENT</i>
BAD	<i>BAD</i>
"_"	<i>NO CONNECTION</i>

Mode

general operation mode

Selection list referenced by the following parameters:



-  [DI Slot X1 . Inverting 1](#)
-  [BO Slot X2 . Latched](#)
-  [BO Slot X2 . Inverting](#)
-  [BO Slot X2 . Inverting 1](#)

-  BO Slot X2 . Latched
-  BO Slot X2 . Inverting
- [...]

Mode	Description
inactive	<i>inactive</i>
active	<i>active</i>

true or not true

Selection list referenced by the following parameters:



-  Disturb rec . Man Trigger
-  SSV . Ack System LED

true or not true	Description
False	<i>False</i>
True	<i>True</i>

Type of passw. def.

Type of the password definition. This value is directly related to the security-level of the access to the device.

Selection list referenced by the following parameters:

-  Sys . Passw. for USB conn.
-  Sys . Passw.remote net.conn.

Type of passw. def.	Description
disabled	<i>The password disabled.</i>
default	<i>The password is the same as the factory default, i.e. it has not been altered by the user. (However, for devices with a disabled default password the password type is displayed as "disabled", not as "default".)</i>
def. by user	<i>The password has been defined by the user. This corresponds to the highest security-level of the access to the device.</i>

TLS Certificate

Type of certificate that the device uses for the encrypted communication. This value is directly related to the security-level of the communication.




Selection list referenced by the following parameters:

-  Sys . TLS Certificate

TLS Certificate	Description
Device-specific	<i>The device uses a device-specific certificate for the encrypted communication. This corresponds to the highest security-level of the communication.</i>
Basic	<i>The device uses a basic certificate for the encrypted communication. Compared with a device-specific certificate, this means a slightly reduced security level.</i>
Corrupt	<i>The certificate for the encrypted communication is corrupt and therefore unusable.</i>

Switching Authority

Selection list referenced by the following parameters:

-  Ctrl . Switching Authority
-  Ctrl . Switching Authority
-  Ctrl . Switching Authority

Switching Authority	Description
None	<i>None</i>
Local	<i>Local</i>
Remote	<i>Remote</i>
Local and Remote	<i>Local and Remote</i>

Config. Device Reset

If the »C« key is pressed while the device is performing a cold restart a general Reset Dialog appears on the screen. Select which options shall be available with this dialog.

Selection list referenced by the following parameters:

-  HMI . Config. Device Reset

-  HMI . Config. Device Reset
-  HMI . Config. Device Reset
-  HMI . Config. Device Reset

Config. Device Reset	Description
"Fact.def.", "PW rst"	<p>Two Reset Options shall be available:</p> <ul style="list-style-type: none"> - "Reset to factory defaults", - "Reset passwords".
Only "Fact.defaults"	<p>Only one Reset Option shall be available:</p> <ul style="list-style-type: none"> - "Reset to factory defaults". <p><i>CAUTION: If this option has been chosen and the password should ever get lost then the only chance to recover control is to reset the protection device to factory defaults.</i></p>
Reset deact.	<p>The Reset Options shall be deactivated.</p> <p><i>CAUTION: If this option has been chosen and the password should ever get lost, then the protection device has to be sent to the manufacturer as a service request.</i></p>

Device planning

Selection list referenced by the following parameters:

-  IH2 . Mode

Device planning	Description
"_"	<i>do not use</i>
use	<i>use</i>

I>

If the pickup value is exceeded, the module/element starts to time out to trip.

Selection list referenced by the following parameters:

-  I[1] . Mode

I>	Description
“_”	<i>do not use</i>
non directional	<i>non directional</i>

Earth overcurrent




Selection list referenced by the following parameters:

-  IG[1] . Mode

Earth overcurrent	Description
“_”	<i>do not use</i>
non directional	<i>non directional</i>

yes/no

Selection list referenced by the following parameters:

-  Sys . Reboot
-  IG[1] . Superv. only
-  Sys . Reboot

yes/no	Description
no	<i>no</i>
yes	<i>yes</i>

Device planning

Selection list referenced by the following parameters:

-  ThR . Mode

Device planning	Description
“_”	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  I2>[1] . Mode

Device planning	Description
"_"	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  AR . Mode

Device planning	Description
"_"	<i>do not use</i>
use	<i>use</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  SOTF . Mode

Mode	Description
"_"	<i>do not use</i>
use	<i>use</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  CLPU . Mode

Mode	Description
“_”	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  Exp[1] . Mode

Device planning	Description
“_”	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  CBF . Mode

Device planning	Description
“_”	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  TCS . Mode

Device planning	Description
“_”	<i>do not use</i>
use	<i>use</i>

Device planning

Selection list referenced by the following parameters:

-  CTS . Mode

Device planning	Description
"_"	<i>do not use</i>
use	<i>use</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  SysA . Mode

Mode	Description
"_"	<i>do not use</i>
use	<i>use</i>

Used Protocol

Used SCADA Protocol

Selection list referenced by the following parameters:

-  Scada . Protocol

Used Protocol	Description
"_"	<i>do not use</i>
Modbus RTU	<i>Modbus Protocol RTU</i>
Modbus TCP	<i>Modbus Protocol TCP</i>
Modbus TCP/RTU	<i>Modbus Protocol TCP/RTU</i>
DNP3 RTU	<i>Distributed Network Protocol RTU</i>
DNP3 TCP	<i>Distributed Network Protocol TCP</i>

Used Protocol	Description
DNP3 UDP	<i>Distributed Network Protocol UDP</i>
IEC 60870-5-103	<i>IEC 60870-5-103 Protocol</i>
IEC 60870-5-104	<i>IEC 60870-5-104 Protocol</i>
IEC 61850	<i>IEC 61850 communication</i>
Profibus	<i>Profibus Module</i>

Mode

general operation mode

Selection list referenced by the following parameters:

- [IRIG-B . Mode](#)

Mode	Description
"_"	<i>do not use</i>
use	<i>use</i>

Mode

general operation mode

Selection list referenced by the following parameters:

- [SNTP . Mode](#)

Mode	Description
"_"	<i>do not use</i>
use	<i>use</i>

No of Equations:

Number of required Logic Equations:

Selection list referenced by the following parameters:

- [Logics . No of Equations:](#)

No of Equations:	Description
0	0
5	5
10	10
20	20
40	40
80	80

Mode

general operation mode

Selection list referenced by the following parameters:

-  Sgen . Mode

Mode	Description
"_"	<i>do not use</i>
use	<i>use</i>

Scaling

Display of the measured values as primary, secondary or per unit values

Selection list referenced by the following parameters:

-  Sys . Scaling

Scaling	Description
Per unit values	<i>Per unit values</i>
Primary values	<i>Primary values</i>
Secondary values	<i>Secondary values</i>

Nom voltage

Nominal voltage of the digital inputs

Selection list referenced by the following parameters:

-  DI Slot X1 . Nom voltage

Nom voltage	Description
24 VDC	24 VDC
48 VDC	48 VDC
60 VDC	60 VDC
110 VDC	110 VDC
230 VDC	230 VDC
110 VAC	110 VAC
230 VAC	230 VAC

Debouncing time

A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.





Selection list referenced by the following parameters:

-  DI Slot X1 . Debouncing time 1

Debouncing time	Description
no debouncing time	no debouncing time
20 ms	20 ms
50 ms	50 ms
100 ms	100 ms

1...n Operating Modes

Selection list referenced by the following parameters:

-  BO Slot X2 . Operating Mode
-  BO Slot X2 . Operating Mode
-  BO Slot X2 . Operating Mode
-  BO Slot X2 . Operating Mode







-  BO Slot X2 . Operating Mode

1...n Operating Modes	Description
Normally open (NO)	<i>The working principle of the relay corresponds to a normally open contact.</i>
Normally closed (NC)	<i>The working principle of the relay corresponds to a normally closed contact.</i>

1..n, Assignment List

Assignment List

Selection list referenced by the following parameters:

-  BO Slot X2 . Acknowledgement
-  BO Slot X2 . Assignment 1
-  BO Slot X2 . Assignment 2
-  BO Slot X2 . Acknowledgement
-  BO Slot X2 . Assignment 1
-  BO Slot X2 . Assignment 2
- [...]

1..n, Assignment List	Description
"_"	<i>No assignment</i>
Prot . available	<i>Signal: Protection is available</i>
Prot . active	<i>Signal: active</i>
Prot . ExBlo	<i>Signal: External Blocking</i>
Prot . Blo TripCmd	<i>Signal: Trip Command blocked</i>
Prot . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
Prot . Alarm L1	<i>Signal: General-Alarm L1</i>
Prot . Alarm L2	<i>Signal: General-Alarm L2</i>
Prot . Alarm L3	<i>Signal: General-Alarm L3</i>
Prot . Alarm G	<i>Signal: General-Alarm - Earth fault</i>
Prot . Alarm	<i>Signal: General Alarm</i>
Prot . Trip L1	<i>Signal: General Trip L1</i>
Prot . Trip L2	<i>Signal: General Trip L2</i>

1..n, Assignment List	Description
Prot . Trip L3	<i>Signal: General Trip L3</i>
Prot . Trip G	<i>Signal: General Trip Ground fault</i>
Prot . Trip	<i>Signal: General Trip</i>
Prot . Res FaultNo a GridFaultNo	<i>Signal: Resetting of fault number and grid fault number.</i>
Prot . ExBlo1-I	<i>Module input state: External blocking1</i>
Prot . ExBlo2-I	<i>Module input state: External blocking2</i>
Prot . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
CT . Phase seq. wrong	<i>Signal that the device has detected a phase sequence (L1-L2-L3 / L1-L3-L2) that is different from the one that had been set at [Field settings / General Settings] »Phase Sequence«.</i>
Ctrl . Local	<i>Switching Authority: Local</i>
Ctrl . Remote	<i>Switching Authority: Remote</i>
Ctrl . NonInterl	<i>Non-Interlocking is active</i>
Ctrl . SG Indeterm	<i>(At least one) Switchgear is moving (Position cannot be determined).</i>
Ctrl . SG Disturb	<i>(At least one) Switchgear is disturbed.</i>
Ctrl . NonInterl-I	<i>Non-Interlocking</i>
SG[1] . SI SingleContactInd	<i>Signal: The Position of the Switchgear is detected by one auxiliary contact (pole) only. Thus indeterminate and disturbed Positions cannot be detected.</i>
SG[1] . Pos not ON	<i>Signal: Pos not ON</i>
SG[1] . Pos ON	<i>Signal: Circuit Breaker is in ON-Position</i>
SG[1] . Pos OFF	<i>Signal: Circuit Breaker is in OFF-Position</i>
SG[1] . Pos Indeterm	<i>Signal: Circuit Breaker is in Indeterminate Position</i>
SG[1] . Pos Disturb	<i>Signal: Circuit Breaker Disturbed - Undefined Breaker Position. The Position Indicators contradict themselves. After expiring of a supervision timer this signal becomes true.</i>
SG[1] . Ready	<i>Signal: Circuit breaker is ready for operation.</i>
SG[1] . t-Dwell	<i>Signal: Dwell time</i>
SG[1] . Removed	<i>Signal: The withdrawable circuit breaker is Removed</i>
SG[1] . Interl ON	<i>Signal: One or more IL_On inputs are active.</i>
SG[1] . Interl OFF	<i>Signal: One or more IL_Off inputs are active.</i>
SG[1] . CES succesf	<i>Signal: Command Execution Supervision: Switching command executed successfully.</i>
SG[1] . CES Disturbed	<i>Signal: Command Execution Supervision: Switching Command unsuccessful. Switchgear in disturbed position.</i>

1..n, Assignment List	Description
SG[1] . CES Fail TripCmd	<i>Signal: Command Execution Supervision: Command execution failed because trip command is pending.</i>
SG[1] . CES SwitchDir	<i>Signal: Command Execution Supervision respectively Switching Direction Control: This signal becomes true, if a switch command is issued even though the switchgear is already in the requested position. Example: A switchgear that is already OFF should be switched OFF again (doubly). The same applies to CLOSE commands.</i>
SG[1] . CES ON d OFF	<i>Signal: Command Execution Supervision: On Command during a pending OFF Command.</i>
SG[1] . CES SG not ready	<i>Signal: Command Execution Supervision: Switchgear not ready</i>
SG[1] . CES Fiel Interl	<i>Signal: Command Execution Supervision: Switching Command not executed because of field interlocking.</i>
SG[1] . CES SyncTimeout	<i>Signal: Command Execution Supervision: Switching Command not executed. No Synchronization signal while t-sync was running.</i>
SG[1] . CES SG removed	<i>Signal: Command Execution Supervision: Switching Command unsuccessful, Switchgear removed.</i>
SG[1] . Prot ON	<i>Signal: ON Command issued by the Prot module</i>
SG[1] . TripCmd	<i>Signal: Trip Command</i>
SG[1] . Ack TripCmd	<i>Signal: Acknowledge Trip Command</i>
SG[1] . ON incl Prot ON	<i>Signal: The ON Command includes the ON Command issued by the Protection module.</i>
SG[1] . OFF incl TripCmd	<i>Signal: The OFF Command includes the OFF Command issued by the Protection module.</i>
SG[1] . Position Ind manipul	<i>Signal: Position Indicators faked</i>
SG[1] . SGwear Slow SG	<i>Signal: Alarm, the circuit breaker (load-break switch) becomes slower</i>
SG[1] . Res SGwear SI SG	<i>Signal: Resetting the slow Switchgear Alarm</i>
SG[1] . ON Cmd	<i>Signal: ON Command issued to the switchgear. Depending on the setting the signal may include the ON command of the Prot module.</i>
SG[1] . OFF Cmd	<i>Signal: OFF Command issued to the switchgear. Depending on the setting the signal may include the OFF command of the Prot module.</i>
SG[1] . ON Cmd manual	<i>Signal: ON Cmd manual</i>
SG[1] . OFF Cmd manual	<i>Signal: OFF Cmd manual</i>
SG[1] . Sync ON request	<i>Signal: Synchronous ON request</i>

1..n, Assignment List	Description
SG[1] . Aux ON-I	<i>Module Input State: Position indicator/check-back signal of the CB (52a)</i>
SG[1] . Aux OFF-I	<i>Module input state: Position indicator/check-back signal of the CB (52b)</i>
SG[1] . Ready-I	<i>Module input state: CB ready</i>
SG[1] . Sys-in-Sync-I	<i>State of the module input: This signals has to become true within the synchronization time. If not, switching is unsuccessful.</i>
SG[1] . Removed-I	<i>State of the module input: The withdrawable circuit breaker is Removed</i>
SG[1] . Ack TripCmd-I	<i>State of the module input: Acknowledgement Signal (for the Trip Command) Module input signal</i>
SG[1] . Interl ON1-I	<i>State of the module input: Interlocking of the ON command</i>
SG[1] . Interl ON2-I	<i>State of the module input: Interlocking of the ON command</i>
SG[1] . Interl ON3-I	<i>State of the module input: Interlocking of the ON command</i>
SG[1] . Interl OFF1-I	<i>State of the module input: Interlocking of the OFF command</i>
SG[1] . Interl OFF2-I	<i>State of the module input: Interlocking of the OFF command</i>
SG[1] . Interl OFF3-I	<i>State of the module input: Interlocking of the OFF command</i>
SG[1] . SCmd ON-I	<i>State of the module input: Switching ON Command, e.g. the state of the Logics or the state of the digital input</i>
SG[1] . SCmd OFF-I	<i>State of the module input: Switching OFF Command, e.g. the state of the Logics or the state of the digital input</i>
SG[1] . Operations Alarm	<i>Signal: Too many Operations. (The operations counter »TripCmd Cr« has exceeded the limit set at »Operations Alarm«.)</i>
SG[1] . Isum Intr trip: IL1	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL1</i>
SG[1] . Isum Intr trip: IL2	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL2</i>
SG[1] . Isum Intr trip: IL3	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL3</i>
SG[1] . Isum Intr trip	<i>Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded in at least one phase.</i>
SG[1] . Res TripCmd Cr	<i>Signal: Resetting of the Counter: Total number of trips of the switchgear</i>
SG[1] . Res Sum trip	<i>Signal: Reset summation of the tripping currents</i>
SG[1] . WearLevel Alarm	<i>Signal: Threshold for the Alarm</i>
SG[1] . WearLevel Lockout	<i>Signal: Threshold for the Lockout Level</i>

1..n, Assignment List	Description
SG[1] . Res CB OPEN capacity	<i>Signal: Reset of the wear maintenance curve (i. e. of the counter for the Circuit Breaker OPEN capacity).</i>
SG[1] . Isum Intr ph Alm	<i>Signal: Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.</i>
SG[1] . Res Isum Intr ph Alm	<i>Signal: Reset of the Alarm, "the per hour Sum (Limit) of interrupting currents has been exceeded".</i>
IH2 . active	<i>Signal: active</i>
IH2 . ExBlo	<i>Signal: External Blocking</i>
IH2 . Blo L1	<i>Signal: Blocked L1</i>
IH2 . Blo L2	<i>Signal: Blocked L2</i>
IH2 . Blo L3	<i>Signal: Blocked L3</i>
IH2 . Blo IG meas	<i>Signal: Blocking of the ground (earth) protection module (measured ground current)</i>
IH2 . Blo IG calc	<i>Signal: Blocking of the ground (earth) protection module (calculated ground current)</i>
IH2 . 3-ph Blo	<i>Signal: Inrush was detected in at least one phase - trip command blocked.</i>
IH2 . ExBlo1-I	<i>Module input state: External blocking1</i>
IH2 . ExBlo2-I	<i>Module input state: External blocking2</i>
I[1] . active	<i>Signal: active</i>
I[1] . ExBlo	<i>Signal: External Blocking</i>
I[1] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
I[1] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
I[1] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
I[1] . IH2 Blo	<i>Signal: Blocking the trip command by an inrush</i>
I[1] . Alarm L1	<i>Signal: Alarm L1</i>
I[1] . Alarm L2	<i>Signal: Alarm L2</i>
I[1] . Alarm L3	<i>Signal: Alarm L3</i>
I[1] . Alarm	<i>Signal: Alarm</i>
I[1] . Trip L1	<i>Signal: General Trip Phase L1</i>
I[1] . Trip L2	<i>Signal: General Trip Phase L2</i>
I[1] . Trip L3	<i>Signal: General Trip Phase L3</i>
I[1] . Trip	<i>Signal: Trip</i>
I[1] . TripCmd	<i>Signal: Trip Command</i>

1..n, Assignment List	Description
I[1] . DefaultSet	Signal: Default Parameter Set
I[1] . AdaptSet 1	Signal: Adaptive Parameter 1
I[1] . AdaptSet 2	Signal: Adaptive Parameter 2
I[1] . AdaptSet 3	Signal: Adaptive Parameter 3
I[1] . AdaptSet 4	Signal: Adaptive Parameter 4
I[1] . ExBlo1-I	Module input state: External blocking1
I[1] . ExBlo2-I	Module input state: External blocking2
I[1] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[1] . Ex rev Interl-I	Module input state: External reverse interlocking
I[1] . AdaptSet1-I	Module input state: Adaptive Parameter1
I[1] . AdaptSet2-I	Module input state: Adaptive Parameter2
I[1] . AdaptSet3-I	Module input state: Adaptive Parameter3
I[1] . AdaptSet4-I	Module input state: Adaptive Parameter4
I[2] . active	Signal: active
I[2] . ExBlo	Signal: External Blocking
I[2] . Ex rev Interl	Signal: External reverse Interlocking
I[2] . Blo TripCmd	Signal: Trip Command blocked
I[2] . ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[2] . IH2 Blo	Signal: Blocking the trip command by an inrush
I[2] . Alarm L1	Signal: Alarm L1
I[2] . Alarm L2	Signal: Alarm L2
I[2] . Alarm L3	Signal: Alarm L3
I[2] . Alarm	Signal: Alarm
I[2] . Trip L1	Signal: General Trip Phase L1
I[2] . Trip L2	Signal: General Trip Phase L2
I[2] . Trip L3	Signal: General Trip Phase L3
I[2] . Trip	Signal: Trip
I[2] . TripCmd	Signal: Trip Command
I[2] . DefaultSet	Signal: Default Parameter Set
I[2] . AdaptSet 1	Signal: Adaptive Parameter 1
I[2] . AdaptSet 2	Signal: Adaptive Parameter 2
I[2] . AdaptSet 3	Signal: Adaptive Parameter 3

1..n, Assignment List	Description
I[2] . AdaptSet 4	Signal: Adaptive Parameter 4
I[2] . ExBlo1-I	Module input state: External blocking1
I[2] . ExBlo2-I	Module input state: External blocking2
I[2] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[2] . Ex rev Interl-I	Module input state: External reverse interlocking
I[2] . AdaptSet1-I	Module input state: Adaptive Parameter1
I[2] . AdaptSet2-I	Module input state: Adaptive Parameter2
I[2] . AdaptSet3-I	Module input state: Adaptive Parameter3
I[2] . AdaptSet4-I	Module input state: Adaptive Parameter4
I[3] . active	Signal: active
I[3] . ExBlo	Signal: External Blocking
I[3] . Ex rev Interl	Signal: External reverse Interlocking
I[3] . Blo TripCmd	Signal: Trip Command blocked
I[3] . ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[3] . IH2 Blo	Signal: Blocking the trip command by an inrush
I[3] . Alarm L1	Signal: Alarm L1
I[3] . Alarm L2	Signal: Alarm L2
I[3] . Alarm L3	Signal: Alarm L3
I[3] . Alarm	Signal: Alarm
I[3] . Trip L1	Signal: General Trip Phase L1
I[3] . Trip L2	Signal: General Trip Phase L2
I[3] . Trip L3	Signal: General Trip Phase L3
I[3] . Trip	Signal: Trip
I[3] . TripCmd	Signal: Trip Command
I[3] . DefaultSet	Signal: Default Parameter Set
I[3] . AdaptSet 1	Signal: Adaptive Parameter 1
I[3] . AdaptSet 2	Signal: Adaptive Parameter 2
I[3] . AdaptSet 3	Signal: Adaptive Parameter 3
I[3] . AdaptSet 4	Signal: Adaptive Parameter 4
I[3] . ExBlo1-I	Module input state: External blocking1
I[3] . ExBlo2-I	Module input state: External blocking2
I[3] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command

1..n, Assignment List	Description
I[3] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
I[3] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
I[3] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
I[3] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
I[3] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
I[4] . active	<i>Signal: active</i>
I[4] . ExBlo	<i>Signal: External Blocking</i>
I[4] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
I[4] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
I[4] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
I[4] . IH2 Blo	<i>Signal: Blocking the trip command by an inrush</i>
I[4] . Alarm L1	<i>Signal: Alarm L1</i>
I[4] . Alarm L2	<i>Signal: Alarm L2</i>
I[4] . Alarm L3	<i>Signal: Alarm L3</i>
I[4] . Alarm	<i>Signal: Alarm</i>
I[4] . Trip L1	<i>Signal: General Trip Phase L1</i>
I[4] . Trip L2	<i>Signal: General Trip Phase L2</i>
I[4] . Trip L3	<i>Signal: General Trip Phase L3</i>
I[4] . Trip	<i>Signal: Trip</i>
I[4] . TripCmd	<i>Signal: Trip Command</i>
I[4] . DefaultSet	<i>Signal: Default Parameter Set</i>
I[4] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
I[4] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
I[4] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
I[4] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
I[4] . ExBlo1-I	<i>Module input state: External blocking1</i>
I[4] . ExBlo2-I	<i>Module input state: External blocking2</i>
I[4] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
I[4] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
I[4] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
I[4] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
I[4] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>

1..n, Assignment List	Description
I[4] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
I[5] . active	<i>Signal: active</i>
I[5] . ExBlo	<i>Signal: External Blocking</i>
I[5] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
I[5] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
I[5] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
I[5] . IH2 Blo	<i>Signal: Blocking the trip command by an inrush</i>
I[5] . Alarm L1	<i>Signal: Alarm L1</i>
I[5] . Alarm L2	<i>Signal: Alarm L2</i>
I[5] . Alarm L3	<i>Signal: Alarm L3</i>
I[5] . Alarm	<i>Signal: Alarm</i>
I[5] . Trip L1	<i>Signal: General Trip Phase L1</i>
I[5] . Trip L2	<i>Signal: General Trip Phase L2</i>
I[5] . Trip L3	<i>Signal: General Trip Phase L3</i>
I[5] . Trip	<i>Signal: Trip</i>
I[5] . TripCmd	<i>Signal: Trip Command</i>
I[5] . DefaultSet	<i>Signal: Default Parameter Set</i>
I[5] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
I[5] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
I[5] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
I[5] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
I[5] . ExBlo1-I	<i>Module input state: External blocking1</i>
I[5] . ExBlo2-I	<i>Module input state: External blocking2</i>
I[5] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
I[5] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
I[5] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
I[5] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
I[5] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
I[5] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
I[6] . active	<i>Signal: active</i>
I[6] . ExBlo	<i>Signal: External Blocking</i>
I[6] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>

I..n, Assignment List	Description
I[6] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
I[6] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
I[6] . IH2 Blo	<i>Signal: Blocking the trip command by an inrush</i>
I[6] . Alarm L1	<i>Signal: Alarm L1</i>
I[6] . Alarm L2	<i>Signal: Alarm L2</i>
I[6] . Alarm L3	<i>Signal: Alarm L3</i>
I[6] . Alarm	<i>Signal: Alarm</i>
I[6] . Trip L1	<i>Signal: General Trip Phase L1</i>
I[6] . Trip L2	<i>Signal: General Trip Phase L2</i>
I[6] . Trip L3	<i>Signal: General Trip Phase L3</i>
I[6] . Trip	<i>Signal: Trip</i>
I[6] . TripCmd	<i>Signal: Trip Command</i>
I[6] . DefaultSet	<i>Signal: Default Parameter Set</i>
I[6] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
I[6] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
I[6] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
I[6] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
I[6] . ExBlo1-I	<i>Module input state: External blocking1</i>
I[6] . ExBlo2-I	<i>Module input state: External blocking2</i>
I[6] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
I[6] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
I[6] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
I[6] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
I[6] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
I[6] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
IG[1] . active	<i>Signal: active</i>
IG[1] . ExBlo	<i>Signal: External Blocking</i>
IG[1] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
IG[1] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
IG[1] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
IG[1] . Alarm	<i>Signal: The alarm threshold has been exceeded.</i>
IG[1] . Trip	<i>Signal: Trip</i>

1..n, Assignment List	Description
IG[1] . TripCmd	<i>Signal: Trip Command</i>
IG[1] . IGH2 Blo	<i>Signal: blocked by an inrush</i>
IG[1] . DefaultSet	<i>Signal: Default Parameter Set</i>
IG[1] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
IG[1] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
IG[1] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
IG[1] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
IG[1] . ExBlo1-I	<i>Module input state: External blocking1</i>
IG[1] . ExBlo2-I	<i>Module input state: External blocking2</i>
IG[1] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
IG[1] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
IG[1] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
IG[1] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
IG[1] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
IG[1] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
IG[2] . active	<i>Signal: active</i>
IG[2] . ExBlo	<i>Signal: External Blocking</i>
IG[2] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
IG[2] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
IG[2] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
IG[2] . Alarm	<i>Signal: The alarm threshold has been exceeded.</i>
IG[2] . Trip	<i>Signal: Trip</i>
IG[2] . TripCmd	<i>Signal: Trip Command</i>
IG[2] . IGH2 Blo	<i>Signal: blocked by an inrush</i>
IG[2] . DefaultSet	<i>Signal: Default Parameter Set</i>
IG[2] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
IG[2] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
IG[2] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
IG[2] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
IG[2] . ExBlo1-I	<i>Module input state: External blocking1</i>
IG[2] . ExBlo2-I	<i>Module input state: External blocking2</i>
IG[2] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>

1..n, Assignment List	Description
IG[2] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
IG[2] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
IG[2] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
IG[2] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
IG[2] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
IG[3] . active	<i>Signal: active</i>
IG[3] . ExBlo	<i>Signal: External Blocking</i>
IG[3] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
IG[3] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
IG[3] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
IG[3] . Alarm	<i>Signal: The alarm threshold has been exceeded.</i>
IG[3] . Trip	<i>Signal: Trip</i>
IG[3] . TripCmd	<i>Signal: Trip Command</i>
IG[3] . IGH2 Blo	<i>Signal: blocked by an inrush</i>
IG[3] . DefaultSet	<i>Signal: Default Parameter Set</i>
IG[3] . AdaptSet 1	<i>Signal: Adaptive Parameter 1</i>
IG[3] . AdaptSet 2	<i>Signal: Adaptive Parameter 2</i>
IG[3] . AdaptSet 3	<i>Signal: Adaptive Parameter 3</i>
IG[3] . AdaptSet 4	<i>Signal: Adaptive Parameter 4</i>
IG[3] . ExBlo1-I	<i>Module input state: External blocking1</i>
IG[3] . ExBlo2-I	<i>Module input state: External blocking2</i>
IG[3] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
IG[3] . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
IG[3] . AdaptSet1-I	<i>Module input state: Adaptive Parameter1</i>
IG[3] . AdaptSet2-I	<i>Module input state: Adaptive Parameter2</i>
IG[3] . AdaptSet3-I	<i>Module input state: Adaptive Parameter3</i>
IG[3] . AdaptSet4-I	<i>Module input state: Adaptive Parameter4</i>
IG[4] . active	<i>Signal: active</i>
IG[4] . ExBlo	<i>Signal: External Blocking</i>
IG[4] . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
IG[4] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
IG[4] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>

1..n, Assignment List	Description
IG[4] . Alarm	Signal: The alarm threshold has been exceeded.
IG[4] . Trip	Signal: Trip
IG[4] . TripCmd	Signal: Trip Command
IG[4] . IGH2 Blo	Signal: blocked by an inrush
IG[4] . DefaultSet	Signal: Default Parameter Set
IG[4] . AdaptSet 1	Signal: Adaptive Parameter 1
IG[4] . AdaptSet 2	Signal: Adaptive Parameter 2
IG[4] . AdaptSet 3	Signal: Adaptive Parameter 3
IG[4] . AdaptSet 4	Signal: Adaptive Parameter 4
IG[4] . ExBlo1-I	Module input state: External blocking1
IG[4] . ExBlo2-I	Module input state: External blocking2
IG[4] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IG[4] . Ex rev Interl-I	Module input state: External reverse interlocking
IG[4] . AdaptSet1-I	Module input state: Adaptive Parameter1
IG[4] . AdaptSet2-I	Module input state: Adaptive Parameter2
IG[4] . AdaptSet3-I	Module input state: Adaptive Parameter3
IG[4] . AdaptSet4-I	Module input state: Adaptive Parameter4
ThR . active	Signal: active
ThR . ExBlo	Signal: External Blocking
ThR . Blo TripCmd	Signal: Trip Command blocked
ThR . ExBlo TripCmd	Signal: External Blocking of the Trip Command
ThR . Alarm	Signal: Alarm Thermal Overload
ThR . Trip	Signal: Trip
ThR . TripCmd	Signal: Trip Command
ThR . Res Thermal Cap	Signal: Resetting Thermal Replica
ThR . ExBlo1-I	Module input state: External blocking1
ThR . ExBlo2-I	Module input state: External blocking2
ThR . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I2>[1] . active	Signal: active
I2>[1] . ExBlo	Signal: External Blocking
I2>[1] . Blo TripCmd	Signal: Trip Command blocked
I2>[1] . ExBlo TripCmd	Signal: External Blocking of the Trip Command

1..n, Assignment List	Description
I2>[1] . Alarm	Signal: Alarm Negative Sequence
I2>[1] . Trip	Signal: Trip
I2>[1] . TripCmd	Signal: Trip Command
I2>[1] . ExBlo1-I	Module input state: External blocking1
I2>[1] . ExBlo2-I	Module input state: External blocking2
I2>[1] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I2>[2] . active	Signal: active
I2>[2] . ExBlo	Signal: External Blocking
I2>[2] . Blo TripCmd	Signal: Trip Command blocked
I2>[2] . ExBlo TripCmd	Signal: External Blocking of the Trip Command
I2>[2] . Alarm	Signal: Alarm Negative Sequence
I2>[2] . Trip	Signal: Trip
I2>[2] . TripCmd	Signal: Trip Command
I2>[2] . ExBlo1-I	Module input state: External blocking1
I2>[2] . ExBlo2-I	Module input state: External blocking2
I2>[2] . ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
AR . active	Signal: active
AR . ExBlo	Signal: External Blocking
AR . Standby	Signal: Standby
AR . t-Blo after CB man ON	Signal: AR blocked after circuit breaker was switched on manually. This timer will be started if the circuit breaker was switched on manually. While this timer is running, AR cannot be started.
AR . Ready	Signal: Ready to shoot
AR . running	Signal: Auto Reclosing running
AR . t-dead	Signal: Dead time between trip and reclosure attempt
AR . CB ON Cmd	Signal: CB switch ON Command
AR . t-Run2Ready	Signal: Examination Time: If the Circuit Breaker remains after a reclosure attempt for the duration of this timer in the Closed position, the AR has been successful and the AR module returns into the ready state.
AR . Lock	Signal: Auto Reclosure is locked out
AR . t-Reset Lockout	Signal: Delay Timer for resetting the AR lockout. The reset of the AR lockout state will be delayed for this time, after the reset signal (e.g digital input or Scada) has been detected .

1..n, Assignment List	Description
AR . Blo	<i>Signal: Auto Reclosure is blocked</i>
AR . t-Blo Reset	<i>Signal: Delay Timer for resetting the AR blocking. The release (de-blocking) of the AR will be delayed for this time, if there is no blocking signal anymore.</i>
AR . successful	<i>Signal: Auto Reclosing successful</i>
AR . failed	<i>Signal: Auto Reclosing failure</i>
AR . t-AR Supervision	<i>Signal: AR Supervision</i>
AR . Pre Shot	<i>Pre Shot Control</i>
AR . Shot 1	<i>Shot Control</i>
AR . Shot 2	<i>Shot Control</i>
AR . Shot 3	<i>Shot Control</i>
AR . Shot 4	<i>Shot Control</i>
AR . Shot 5	<i>Shot Control</i>
AR . Shot 6	<i>Shot Control</i>
AR . Service Alarm 1	<i>Signal: AR - Service Alarm 1, too many switching operations</i>
AR . Service Alarm 2	<i>Signal: AR - Service Alarm 2 - too many switching operations</i>
AR . Max Shots / h exceeded	<i>Signal: The maximum allowed number of shots per hour has been exceeded.</i>
AR . Res Statistics Cr	<i>Signal: Reset all statistic AR counters: Total number of AR, successful and unsuccessful no of AR.</i>
AR . Res Service Cr	<i>Signal: Reset the Service Counters for Alarm and Blocking</i>
AR . Reset Lockout	<i>Signal: The AR Lockout has been reset via the panel.</i>
AR . Res Max Shots / h	<i>Signal: The Counter for the maximum allowed shots per hour has been reset.</i>
AR . ExBlo1-I	<i>Module input state: External blocking1</i>
AR . ExBlo2-I	<i>Module input state: External blocking2</i>
AR . Ex Shot Inc-I	<i>Module input state: The AR Shot counter will be incremented by this external Signal. This can be used for Zone Coordination (of upstream Auto Reclosure devices). Note: This parameter enables the functionality only. The assignment has to be set within the global parameters.</i>
AR . Ex Lock-I	<i>Module input state: External AR lockout.</i>
AR . DI Reset Ex Lock-I	<i>Module input state: Resetting the lockout state of the AR (if the resetting via digital inputs has been selected).</i>
AR . Scada Reset Ex Lock-I	<i>Module input state: Resetting the Lockout State of the AR by Communication.</i>

1..n, Assignment List	Description
AR . abort: 1	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
AR . abort: 2	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
AR . abort: 3	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
AR . abort: 4	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
AR . abort: 5	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
AR . abort: 6	<i>Abort the AR-cycle, if the state of the assigned signal is true. If the state of this function is true the AR will be aborted.</i>
SOTF . active	<i>Signal: active</i>
SOTF . ExBlo	<i>Signal: External Blocking</i>
SOTF . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
SOTF . enabled	<i>Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.</i>
SOTF . AR Blo	<i>Signal: Blocked by AR</i>
SOTF . I<	<i>Signal: No Load Current.</i>
SOTF . ExBlo1-I	<i>Module input state: External blocking</i>
SOTF . ExBlo2-I	<i>Module input state: External blocking</i>
SOTF . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>
SOTF . Ext SOTF-I	<i>Module input state: External Switch Onto Fault Alarm</i>
CLPU . active	<i>Signal: active</i>
CLPU . ExBlo	<i>Signal: External Blocking</i>
CLPU . Ex rev Interl	<i>Signal: External reverse Interlocking</i>
CLPU . enabled	<i>Signal: Cold Load enabled</i>
CLPU . detected	<i>Signal: Cold Load detected</i>
CLPU . AR Blo	<i>Signal: Blocked by AR</i>
CLPU . I<	<i>Signal: No Load Current.</i>
CLPU . Load Inrush	<i>Signal: Load Inrush</i>
CLPU . Settle Time	<i>Signal: Settle Time</i>
CLPU . ExBlo1-I	<i>Module input state: External blocking</i>
CLPU . ExBlo2-I	<i>Module input state: External blocking</i>
CLPU . Ex rev Interl-I	<i>Module input state: External reverse interlocking</i>

1..n, Assignment List	Description
ExP[1] . active	<i>Signal: active</i>
ExP[1] . ExBlo	<i>Signal: External Blocking</i>
ExP[1] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
ExP[1] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
ExP[1] . Alarm	<i>Signal: Alarm</i>
ExP[1] . Trip	<i>Signal: Trip</i>
ExP[1] . TripCmd	<i>Signal: Trip Command</i>
ExP[1] . ExBlo1-I	<i>Module input state: External blocking1</i>
ExP[1] . ExBlo2-I	<i>Module input state: External blocking2</i>
ExP[1] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
ExP[1] . Alarm-I	<i>Module input state: Alarm</i>
ExP[1] . Trip-I	<i>Module input state: Trip</i>
ExP[2] . active	<i>Signal: active</i>
ExP[2] . ExBlo	<i>Signal: External Blocking</i>
ExP[2] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
ExP[2] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
ExP[2] . Alarm	<i>Signal: Alarm</i>
ExP[2] . Trip	<i>Signal: Trip</i>
ExP[2] . TripCmd	<i>Signal: Trip Command</i>
ExP[2] . ExBlo1-I	<i>Module input state: External blocking1</i>
ExP[2] . ExBlo2-I	<i>Module input state: External blocking2</i>
ExP[2] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
ExP[2] . Alarm-I	<i>Module input state: Alarm</i>
ExP[2] . Trip-I	<i>Module input state: Trip</i>
ExP[3] . active	<i>Signal: active</i>
ExP[3] . ExBlo	<i>Signal: External Blocking</i>
ExP[3] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
ExP[3] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
ExP[3] . Alarm	<i>Signal: Alarm</i>
ExP[3] . Trip	<i>Signal: Trip</i>
ExP[3] . TripCmd	<i>Signal: Trip Command</i>

1..n, Assignment List	Description
Exp[3] . ExBlo1-I	<i>Module input state: External blocking1</i>
Exp[3] . ExBlo2-I	<i>Module input state: External blocking2</i>
Exp[3] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
Exp[3] . Alarm-I	<i>Module input state: Alarm</i>
Exp[3] . Trip-I	<i>Module input state: Trip</i>
Exp[4] . active	<i>Signal: active</i>
Exp[4] . ExBlo	<i>Signal: External Blocking</i>
Exp[4] . Blo TripCmd	<i>Signal: Trip Command blocked</i>
Exp[4] . ExBlo TripCmd	<i>Signal: External Blocking of the Trip Command</i>
Exp[4] . Alarm	<i>Signal: Alarm</i>
Exp[4] . Trip	<i>Signal: Trip</i>
Exp[4] . TripCmd	<i>Signal: Trip Command</i>
Exp[4] . ExBlo1-I	<i>Module input state: External blocking1</i>
Exp[4] . ExBlo2-I	<i>Module input state: External blocking2</i>
Exp[4] . ExBlo TripCmd-I	<i>Module input state: External Blocking of the Trip Command</i>
Exp[4] . Alarm-I	<i>Module input state: Alarm</i>
Exp[4] . Trip-I	<i>Module input state: Trip</i>
CBF . active	<i>Signal: active</i>
CBF . ExBlo	<i>Signal: External Blocking</i>
CBF . Waiting for Trigger	<i>Waiting for Trigger</i>
CBF . running	<i>Signal: CBF-Module started</i>
CBF . Alarm	<i>Signal: Circuit Breaker Failure</i>
CBF . Lockout	<i>Signal: Lockout</i>
CBF . Res Lockout	<i>Signal: Reset Lockout</i>
CBF . ExBlo1-I	<i>Module input state: External blocking1</i>
CBF . ExBlo2-I	<i>Module input state: External blocking2</i>
CBF . Trigger1-I	<i>Module Input: Trigger that will start the CBF</i>
CBF . Trigger2-I	<i>Module Input: Trigger that will start the CBF</i>
CBF . Trigger3-I	<i>Module Input: Trigger that will start the CBF</i>
TCS . active	<i>Signal: active</i>

1..n, Assignment List	Description
TCS . ExBlo	<i>Signal: External Blocking</i>
TCS . Alarm	<i>Signal: Alarm Trip Circuit Supervision</i>
TCS . Not Possible	<i>Not possible because no state indicator assigned to the breaker.</i>
TCS . Aux ON-I	<i>Module Input State: Position indicator/check-back signal of the CB (52a)</i>
TCS . Aux OFF-I	<i>Module input state: Position indicator/check-back signal of the CB (52b)</i>
TCS . ExBlo1-I	<i>Module input state: External blocking1</i>
TCS . ExBlo2-I	<i>Module input state: External blocking2</i>
CTS . active	<i>Signal: active</i>
CTS . ExBlo	<i>Signal: External Blocking</i>
CTS . Alarm	<i>Signal: Alarm Current Transformer Measuring Circuit Supervision</i>
CTS . ExBlo1-I	<i>Module input state: External blocking1</i>
CTS . ExBlo2-I	<i>Module input state: External blocking2</i>
SysA . active	<i>Signal: active</i>
SysA . ExBlo	<i>Signal: External Blocking</i>
SysA . Alm Current avg (Demd)	<i>Signal: Alarm: Averaged demand current exceeded</i>
SysA . Alarm I THD	<i>Signal: Alarm Total Harmonic Distortion Current</i>
SysA . Trip Current avg (Demd)	<i>Signal: Trip: Averaged demand current exceeded</i>
SysA . Trip I THD	<i>Signal: Trip Total Harmonic Distortion Current</i>
SysA . ExBlo-I	<i>Module input state: External blocking</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
BO Slot X2 . BO 1	<i>Signal: Binary Output Relay</i>
BO Slot X2 . BO 2	<i>Signal: Binary Output Relay</i>

1..n, Assignment List	Description
BO Slot X2 . BO 3	<i>Signal: Binary Output Relay</i>
BO Slot X2 . BO 4	<i>Signal: Binary Output Relay</i>
BO Slot X2 . BO 5	<i>Signal: Binary Output Relay</i>
BO Slot X2 . DISARMED!	<i>Signal: CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Self Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance</i>
BO Slot X2 . Outs forced	<i>Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.</i>
Event rec . Res all records	<i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>
Disturb rec . recording	<i>Signal: Recording</i>
Disturb rec . memory full	<i>Signal: Memory full</i>
Disturb rec . Clear fail	<i>Signal: Clear failure in memory</i>
Disturb rec . Res all records	<i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>
Disturb rec . Res record	<i>Signal: Delete record</i>
Disturb rec . Man Trigger	<i>Signal: Manual Trigger</i>
Disturb rec . Start1-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start2-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start3-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start4-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start5-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start6-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start7-I	<i>State of the module input:: Trigger event / start recording</i>
Disturb rec . Start8-I	<i>State of the module input:: Trigger event / start recording</i>
Fault rec . Res record	<i>Signal: Delete record</i>
Trend rec . Res all records	<i>Signal: All records are being deleted. (Remark: Immediately afterwards, this signal becomes inactive again.)</i>
SSV . System Error	<i>Signal: Device Failure</i>
SSV . SelfSuperVision Contact	<i>Signal: SelfSuperVision Contact</i>
SSV . New error	<i>Signal: A new error message has been issued.</i>
SSV . New warning	<i>Signal: A new warning message has been issued.</i>

1..n, Assignment List	Description
Syslog . active	<i>Signal: active</i>
Sys . Smart view via USB	<i>Information whether or not the Smart view access via the USB interface is activated (allowed).</i>
Sys . Smart view via Eth	<i>Information whether or not the Smart view access via the Ethernet interface is activated (allowed).</i>
Scada . SCADA connected	<i>At least one SCADA System is connected to the device.</i>
Scada . SCADA not connected	<i>No SCADA System is connected to the device</i>
DNP3 . busy	<i>This message is set if the protocol is started. It will be reset if the protocol is shut down.</i>
DNP3 . ready	<i>The message will be set if the protocol is successfully started and ready for data exchange.</i>
DNP3 . active	<i>The communication with the Master (SCADA) is active.</i> <i>Note that for TCP/UDP, this state is permanently "Low" unless »DataLink confirm« is set to "Always".</i>
DNP3 . BinaryOutput0	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput1	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput2	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput3	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput4	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput5	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput6	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput7	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput8	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput9	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput10	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput11	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>

1..n, Assignment List	Description
DNP3 . BinaryOutput12	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput13	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput14	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput15	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput16	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput17	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput18	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput19	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput20	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput21	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput22	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput23	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput24	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput25	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput26	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput27	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput28	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput29	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput30	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput31	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>

1..n, Assignment List	Description
DNP3 . BinaryInput0-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput1-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput2-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput3-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput4-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput5-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput6-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput7-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput8-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput9-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput10-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput11-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput12-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput13-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput14-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput15-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput16-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput17-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput18-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput19-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>

1..n, Assignment List	Description
DNP3 . BinaryInput20-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput21-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput22-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput23-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput24-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput25-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput26-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput27-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput28-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput29-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput30-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput31-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput32-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput33-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput34-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput35-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput36-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput37-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput38-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput39-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>

1..n, Assignment List	Description
DNP3 . BinaryInput40-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput41-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput42-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput43-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput44-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput45-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput46-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput47-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput48-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput49-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput50-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput51-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput52-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput53-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput54-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput55-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput56-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput57-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput58-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput59-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>

1..n, Assignment List	Description
DNP3 . BinaryInput60-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput61-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput62-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
DNP3 . BinaryInput63-I	<i>Virtual Digital Input (DNP). This corresponds to a virtual binary output of the protective device.</i>
Modbus . Transmission RTU	<i>Signal: SCADA active</i>
Modbus . Transmission TCP	<i>Signal: SCADA active</i>
Modbus . Scada Cmd 1	<i>Scada Command</i>
Modbus . Scada Cmd 2	<i>Scada Command</i>
Modbus . Scada Cmd 3	<i>Scada Command</i>
Modbus . Scada Cmd 4	<i>Scada Command</i>
Modbus . Scada Cmd 5	<i>Scada Command</i>
Modbus . Scada Cmd 6	<i>Scada Command</i>
Modbus . Scada Cmd 7	<i>Scada Command</i>
Modbus . Scada Cmd 8	<i>Scada Command</i>
Modbus . Scada Cmd 9	<i>Scada Command</i>
Modbus . Scada Cmd 10	<i>Scada Command</i>
Modbus . Scada Cmd 11	<i>Scada Command</i>
Modbus . Scada Cmd 12	<i>Scada Command</i>
Modbus . Scada Cmd 13	<i>Scada Command</i>
Modbus . Scada Cmd 14	<i>Scada Command</i>
Modbus . Scada Cmd 15	<i>Scada Command</i>
Modbus . Scada Cmd 16	<i>Scada Command</i>
Modbus . Config Bin Inp1-I	<i>State of the module input: Config Bin Inp</i>

1..n, Assignment List	Description
Modbus . Config Bin Inp2-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp3-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp4-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp5-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp6-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp7-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp8-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp9-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp10-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp11-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp12-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp13-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp14-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp15-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp16-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp17-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp18-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp19-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp20-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp21-I	<i>State of the module input: Config Bin Inp</i>

1..n, Assignment List	Description
Modbus . Config Bin Inp22-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp23-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp24-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp25-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp26-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp27-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp28-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp29-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp30-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp31-I	<i>State of the module input: Config Bin Inp</i>
Modbus . Config Bin Inp32-I	<i>State of the module input: Config Bin Inp</i>
IEC 61850 . MMS Client connected	<i>At least one MMS client is connected to the device</i>
IEC 61850 . All Goose Subscriber active	<i>All Goose subscriber in the device are working</i>
IEC 61850 . GOSINGGIO1.Ind1.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind2.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind3.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind4.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind5.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind6.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind7.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO1.Ind8.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind9.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind10.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind11.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind12.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind13.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind14.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind15.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind16.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind17.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind18.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind19.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind20.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind21.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind22.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind23.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind24.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind25.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind26.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind27.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO1.Ind28.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind29.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind30.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind31.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind32.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind1.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind2.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind3.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind4.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind5.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind6.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind7.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind8.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind9.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind10.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind11.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind12.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind13.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind14.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind15.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO2.Ind16.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind17.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind18.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind19.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind20.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind21.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind22.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind23.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind24.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind25.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind26.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind27.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind28.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind29.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind30.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind31.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO2.Ind32.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind1.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind2.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind3.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO1.Ind4.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind5.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind6.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind7.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind8.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind9.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind10.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind11.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind12.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind13.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind14.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind15.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind16.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind17.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind18.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind19.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind20.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind21.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind22.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind23.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO1.Ind24.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind25.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind26.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind27.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind28.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind29.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind30.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind31.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO1.Ind32.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind1.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind2.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind3.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind4.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind5.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind6.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind7.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind8.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind9.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind10.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind11.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO2.Ind12.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind13.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind14.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind15.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind16.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind17.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind18.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind19.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind20.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind21.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind22.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind23.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind24.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind25.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind26.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind27.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind28.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind29.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind30.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . GOSINGGIO2.Ind31.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>

1..n, Assignment List	Description
IEC 61850 . GOSINGGIO2.Ind32.q	<i>Signal: Virtual Input (IEC61850 GGIO Ind): Self-Supervision of the GGIO Input</i>
IEC 61850 . SPCSO1	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO2	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO3	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO4	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO5	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO6	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO7	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO8	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO9	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO10	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO11	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO12	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO13	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO14	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO15	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO16	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO17	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO18	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO19	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>

1..n, Assignment List	Description
IEC 61850 . SPCSO20	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO21	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO22	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO23	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO24	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO25	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO26	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO27	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO28	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO29	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO30	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO31	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO32	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC103 . Scada Cmd 1	<i>Scada Command</i>
IEC103 . Scada Cmd 2	<i>Scada Command</i>
IEC103 . Scada Cmd 3	<i>Scada Command</i>
IEC103 . Scada Cmd 4	<i>Scada Command</i>
IEC103 . Scada Cmd 5	<i>Scada Command</i>
IEC103 . Scada Cmd 6	<i>Scada Command</i>
IEC103 . Scada Cmd 7	<i>Scada Command</i>
IEC103 . Scada Cmd 8	<i>Scada Command</i>
IEC103 . Scada Cmd 9	<i>Scada Command</i>
IEC103 . Scada Cmd 10	<i>Scada Command</i>
IEC103 . Transmission	<i>Signal: SCADA active</i>

1..n, Assignment List	Description
IEC103 . Failure Event lost	<i>Failure event lost</i>
IEC103 . Test mode active	<i>Signal: IEC103 communication has been switched over into Test Mode.</i>
IEC103 . Block MD active	<i>Signal: The blocking of IEC103 transmission in monitor direction has been activated.</i>
IEC103 . Ex activate test mode-I	<i>Module input state: Test Mode of the IEC103 communication.</i>
IEC103 . Ex activate Block MD-I	<i>Module input state: Activation of the blocking of IEC103 transmission in monitor direction.</i>
IEC104 . busy	<i>This message is set if the protocol is started. It will be reset if the protocol is shut down.</i>
IEC104 . ready	<i>The message will be set if the protocol is successfully started and ready for data exchange.</i>
IEC104 . Transmission	<i>Signal: SCADA active</i>
IEC104 . Failure Event lost	<i>Failure event lost</i>
IEC104 . Scada Cmd 1	<i>Scada Command</i>
IEC104 . Scada Cmd 2	<i>Scada Command</i>
IEC104 . Scada Cmd 3	<i>Scada Command</i>
IEC104 . Scada Cmd 4	<i>Scada Command</i>
IEC104 . Scada Cmd 5	<i>Scada Command</i>
IEC104 . Scada Cmd 6	<i>Scada Command</i>
IEC104 . Scada Cmd 7	<i>Scada Command</i>
IEC104 . Scada Cmd 8	<i>Scada Command</i>
IEC104 . Scada Cmd 9	<i>Scada Command</i>
IEC104 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 11	<i>Scada Command</i>
IEC104 . Scada Cmd 12	<i>Scada Command</i>
IEC104 . Scada Cmd 13	<i>Scada Command</i>
IEC104 . Scada Cmd 14	<i>Scada Command</i>
IEC104 . Scada Cmd 15	<i>Scada Command</i>
IEC104 . Scada Cmd 16	<i>Scada Command</i>
Profibus . Data OK	<i>Data within the Input field are OK (Yes=1)</i>
Profibus . SubModul Err	<i>Assignable Signal, Failure in Sub-Module, Communication Failure.</i>

1..n, Assignment List	Description
Profibus . Connection active	<i>Connection active</i>
Profibus . Scada Cmd 1	<i>Scada Command</i>
Profibus . Scada Cmd 2	<i>Scada Command</i>
Profibus . Scada Cmd 3	<i>Scada Command</i>
Profibus . Scada Cmd 4	<i>Scada Command</i>
Profibus . Scada Cmd 5	<i>Scada Command</i>
Profibus . Scada Cmd 6	<i>Scada Command</i>
Profibus . Scada Cmd 7	<i>Scada Command</i>
Profibus . Scada Cmd 8	<i>Scada Command</i>
Profibus . Scada Cmd 9	<i>Scada Command</i>
Profibus . Scada Cmd 10	<i>Scada Command</i>
Profibus . Scada Cmd 11	<i>Scada Command</i>
Profibus . Scada Cmd 12	<i>Scada Command</i>
Profibus . Scada Cmd 13	<i>Scada Command</i>
Profibus . Scada Cmd 14	<i>Scada Command</i>
Profibus . Scada Cmd 15	<i>Scada Command</i>
Profibus . Scada Cmd 16	<i>Scada Command</i>
IRIG-B . IRIG-B active	<i>Signal: If there is no valid IRIG-B signal for 60 sec, IRIG-B is regarded as inactive.</i>
IRIG-B . High-Low Invert	<i>Signal: The High and Low signals of the IRIG-B are inverted. This does NOT mean that the wiring is faulty. If the wiring is faulty no IRIG-B signal will be detected.</i>
IRIG-B . Control Signal1	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal2	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal3	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>

1..n, Assignment List	Description
IRIG-B . Control Signal4	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal5	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal6	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal7	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal8	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal9	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal10	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal11	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal12	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal13	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal14	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal15	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal16	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal17	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>
IRIG-B . Control Signal18	<i>Signal: IRIG-B Control Signal. The external IRIG-B generator can set these signals. They can be used for further control procedures inside the device (e.g. logic funtions).</i>

1..n, Assignment List	Description
SNTP . SNTP active	<i>Signal: If there is no valid SNTP signal for 120 sec, SNTP is regarded as inactive.</i>
TimeSync . synchronized	<i>Clock is synchronized.</i>
Statistics . ResFc all	<i>Signal: Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)</i>
Statistics . ResFc I Demand	<i>Signal: Resetting of Statistics - Current Demand (avg, peak avg)</i>
Statistics . ResFc Max	<i>Signal: Resetting of all Maximum values</i>
Statistics . ResFc Min	<i>Signal: Resetting of all Minimum values</i>
Statistics . StartFc I Demand-I	<i>State of the module input: Start of the Statistics of the Current Demand</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE1.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE1.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE1.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE1.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE1.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE2.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE2.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE2.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE2.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>

1..n, Assignment List	Description
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE3.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE3.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE3.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE3.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE4.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE4.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE4.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE4.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE5.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE5.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE5.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE5.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>

1..n, Assignment List	Description
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE6.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE6.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE6.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE6.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE7.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE7.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE7.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE7.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE8.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE8.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE8.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE8.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, Assignment List	Description
Logics . LE9.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE9.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE9.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE9.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE9.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE10.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE10.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE10.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE10.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE11.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE11.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE11.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE11.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>

1..n, Assignment List	Description
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE12.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE12.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE12.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE12.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE12.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE13.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE13.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE13.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE13.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, Assignment List	Description
Logics . LE14.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE14.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE14.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE14.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE14.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE15.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE15.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE15.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE15.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE16.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE16.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE16.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE16.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE17.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE17.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE17.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE17.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE18.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE18.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE18.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE18.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>

1..n, Assignment List	Description
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE19.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE19.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE19.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE19.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE20.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE20.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE20.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE20.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE21.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE21.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE21.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE21.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE21.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE22.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE22.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE22.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE22.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE23.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE23.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE23.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE23.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE23.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>

1..n, Assignment List	Description
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE24.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE24.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE24.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE24.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE25.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE25.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE25.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE25.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE26.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE26.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE26.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE26.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE27.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE27.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE27.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE27.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE28.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE28.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE28.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE28.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, Assignment List	Description
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE29.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE29.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE29.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE29.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE29.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE30.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE30.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE30.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE30.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE31.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE31.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE31.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE31.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE31.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE32.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE32.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE32.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE32.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE33.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE33.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE33.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE33.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>

1..n, Assignment List	Description
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE34.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE34.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE34.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE34.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE35.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE35.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE35.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE35.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, Assignment List	Description
Logics . LE36.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE36.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE36.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE36.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE36.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE37.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE37.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE37.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE37.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE37.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE38.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE38.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE38.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE38.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE39.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE39.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE39.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE39.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE40.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE40.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE40.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE40.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>

1..n, Assignment List	Description
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE41.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE41.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE41.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE41.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE42.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE42.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE42.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE42.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE43.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE43.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE43.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE43.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE44.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE44.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE44.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE44.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE45.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE45.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE45.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE45.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>

1..n, Assignment List	Description
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE46.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE46.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE46.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE46.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE46.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE47.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE47.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE47.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE47.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE48.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE48.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE48.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE48.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE48.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE49.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE49.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE49.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE49.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE50.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE50.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE50.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE50.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, Assignment List	Description
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE51.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE51.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE51.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE51.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE52.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE52.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE52.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE52.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE53.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE53.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE53.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE53.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE54.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE54.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE54.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE54.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE54.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE55.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE55.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE55.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE55.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>

1..n, Assignment List	Description
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE56.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE56.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE56.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE56.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE56.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE57.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE57.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE57.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE57.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, Assignment List	Description
Logics . LE58.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE58.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE58.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE58.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE58.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE59.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE59.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE59.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE59.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE60.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE60.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE60.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE60.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE61.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE61.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE61.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE61.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE62.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE62.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE62.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE62.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE62.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>

1..n, Assignment List	Description
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE63.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE63.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE63.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE63.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE64.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE64.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE64.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE64.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE65.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE65.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE65.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE65.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE66.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE66.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE66.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE66.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE67.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE67.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE67.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE67.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>

1..n, Assignment List	Description
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE68.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE68.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE68.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE68.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE69.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE69.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE69.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE69.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE70.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE70.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE70.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE70.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE71.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE71.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE71.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE71.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE71.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE72.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE72.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE72.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE72.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, Assignment List	Description
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE73.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE73.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE73.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE73.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE73.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE74.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE74.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE74.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE74.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>

1..n, Assignment List	Description
Logics . LE75.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE75.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE75.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE75.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE76.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE76.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE76.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE76.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE77.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE77.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE77.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE77.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>

1..n, Assignment List	Description
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE78.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE78.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE78.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE78.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE79.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE79.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE79.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE79.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE79.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, Assignment List	Description
Logics . LE80.Gate In1-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE80.Gate In2-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE80.Gate In3-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE80.Gate In4-I	<i>State of the module input: Assignment of the Input Signal</i>
Logics . LE80.Reset Latch-I	<i>State of the module input: Reset Signal for the Latching</i>
Sgen . Manual Start	<i>Fault Simulation has been started manually.</i>
Sgen . Manual Stop	<i>Fault Simulation has been stopped manually.</i>
Sgen . Running	<i>Signal; Measuring value simulation is running</i>
Sgen . Started	<i>Fault Simulation has been started</i>
Sgen . Stopped	<i>Fault Simulation has been stopped</i>
Sgen . Ex Start Simulation-I	<i>State of the module input:External Start of Fault Simulation (Using the test parameters)</i>
Sgen . ExBlo1-I	<i>Module input state: External blocking1</i>
Sgen . ExBlo2-I	<i>Module input state: External blocking2</i>
Sgen . Ex ForcePost-I	<i>State of the module input:Force Post state. Abort simulation.</i>
Sys . PS 1	<i>Signal: The currently active Parameter Set is PS 1</i>
Sys . PS 2	<i>Signal: The currently active Parameter Set is PS 2</i>
Sys . PS 3	<i>Signal: The currently active Parameter Set is PS 3</i>
Sys . PS 4	<i>Signal: The currently active Parameter Set is PS 4</i>
Sys . PSS manual	<i>Signal: Manual Switch over of a Parameter Set</i>
Sys . PSS via Scada	<i>Signal: Parameter Set Switch via Scada. Write into this output byte the integer of the parameter set that should become active (e.g. 4 => Switch onto parameter set 4).</i>
Sys . PSS via Inp fct	<i>Signal: Parameter Set Switch via input function</i>
Sys . min 1 param changed	<i>Signal: At least one parameter has been changed</i>
Sys . Setting Lock Bypass	<i>Signal: Short-period unlock of the Setting Lock</i>
Sys . Ack LED	<i>Signal: LEDs acknowledgement</i>
Sys . Ack BO	<i>Signal: Acknowledgement of the Binary Outputs</i>
Sys . Ack Scada	<i>Signal: Acknowledge latched SCADA signals</i>

1..n, Assignment List	Description
Sys . Ack TripCmd	<i>Signal: Reset Trip Command</i>
Sys . Ack LED-HMI	<i>Signal: LEDs acknowledgement, triggered at the HMI</i>
Sys . Ack BO-HMI	<i>Signal: Acknowledgement of the Binary Outputs, triggered at the HMI</i>
Sys . Ack Scada-HMI	<i>Signal: Acknowledge latched SCADA signals, triggered at the HMI</i>
Sys . Ack TripCmd-HMI	<i>Signal: Reset Trip Command, triggered at the HMI</i>
Sys . Ack LED-Sca	<i>Signal: LEDs acknowledgement, triggered via SCADA</i>
Sys . Ack BO-Sca	<i>Signal: Acknowledgement of the Binary Outputs, triggered via SCADA</i>
Sys . Ack Counter-Sca	<i>Signal: Reset of all Counters, triggered via SCADA</i>
Sys . Ack Scada-Sca	<i>Signal: Acknowledge latched SCADA signals, triggered via SCADA</i>
Sys . Ack TripCmd-Sca	<i>Signal: Reset Trip Command, triggered via SCADA</i>
Sys . Res OperationsCr	<i>Signal:: Res OperationsCr</i>
Sys . Res AlarmCr	<i>Signal:: Res AlarmCr</i>
Sys . Res TripCmdCr	<i>Signal:: Res TripCmdCr</i>
Sys . Res TotalCr	<i>Signal:: Res TotalCr</i>
Sys . Ack LED-I	<i>Module input state: LEDs acknowledgement by digital input</i>
Sys . Ack BO-I	<i>Module input state: Acknowledgement of the binary Output Relays</i>
Sys . Ack Scada-I	<i>Module input state: Acknowledge latched SCADA signals.</i>
Sys . PS1-I	<i>State of the module input respectively of the signal, that should activate this Parameter Setting Group.</i>
Sys . PS2-I	<i>State of the module input respectively of the signal, that should activate this Parameter Setting Group.</i>
Sys . PS3-I	<i>State of the module input respectively of the signal, that should activate this Parameter Setting Group.</i>
Sys . PS4-I	<i>State of the module input respectively of the signal, that should activate this Parameter Setting Group.</i>
Sys . Setting Lock-I	<i>State of the module input: No parameters can be changed as long as this input is true. The parameter settings are locked.</i>
Sys . Internal test state	<i>Auxiliary state for testing purposes.</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  LEDs group A . Latched
-  LEDs group A . Latched
-  LEDs group A . Latched
-  LEDs group A . Latched
-  LEDs group A . Latched
-  LEDs group A . Latched
- [...]

Mode	Description
inactive	<i>inactive</i>
active	<i>active</i>
active, ack. by alarm	<i>Latching of LEDs is active, but will be acknowledged (reset) automatically (by a protection function) in case of a new alarm.</i>

LED active color

Selection list referenced by the following parameters:

-  LEDs group A . LED active color
-  LEDs group A . LED inactive color
-  LEDs group A . LED active color
-  LEDs group A . LED inactive color
-  LEDs group A . LED active color
-  LEDs group A . LED inactive color
- [...]

LED active color	Description
green	<i>green</i>
red	<i>red</i>
red flash	<i>red flashing</i>
green flash	<i>green blinking</i>
"_"	<i>No assignment</i>

Ack via »C« key

Select which acknowledgeable elements can be reset via pressing the »C« key.

Selection list referenced by the following parameters:

-  Sys . Ack via »C« key

Ack via »C« key	Description
Nothing	<i>No elements can be simply reset via pressing the »C« key for a long time (ca. 1 second). This has the consequence that pressing the »C« key is only a shortcut to the Acknowledge menu, from which the user has to select the elements to be reset.</i>
Ack LEDs w/o passw.	<i>All LEDs are acknowledged (reset) via pressing the »C« key for ca. 1 second. No password has to be entered for this. The reset activity can be recognized from the fact that it always includes an LED test, i.e. all LEDs flash in red color for a second, then flash in green color for a second.</i>
Ack LEDs	<i>All LEDs are reset via pressing the »C« key (for ca. 1 second). The reset activity can be recognized from the fact that it always includes an LED test, i.e. all LEDs flash in red color for a second, then flash in green color for a second.</i>
Ack LEDs and relays	<i>All LEDs and all acknowledgeable binary output relays are reset via pressing the »C« key (for ca. 1 second). The reset activity can be recognized from the fact that it always includes an LED test, i.e. all LEDs flash in red color for a second, then flash in green color for a second.</i>
Ack Everything	<p><i>All acknowledgeable elements are reset via pressing the »C« key (for ca. 1 second):</i></p> <ul style="list-style-type: none"> - All LEDs, and - all binary output relays, and - all latched SCADA signals, and - the Trip command. <p><i>The reset activity can be recognized from the fact that it always includes an LED test, i.e. all LEDs flash in red color for a second, then flash in green color for a second.</i></p>

Duration

Recording time

Selection list referenced by the following parameters:

-  Statistics . Start I Demand via:

Duration	Description
Duration	<i>Recording time</i>
StartFct	<i>Start function</i>

Duration

Recording time

Selection list referenced by the following parameters:

-  [Statistics . Duration I Demand](#)

Duration	Description
2 s	<i>s</i>
5 s	<i>s</i>
10 s	<i>s</i>
15 s	<i>seconds</i>
30 s	<i>seconds</i>
1 min	<i>minute</i>
5 min	<i>minute</i>
10 min	<i>minute</i>
15 min	<i>minute</i>
30 min	<i>minute</i>
1 h	<i>Hours</i>
2 h	<i>Hours</i>
6 h	<i>Hours</i>
12 h	<i>Hours</i>
1 d	<i>days</i>
2 d	<i>days</i>
5 d	<i>days</i>
7 d	<i>days</i>
10 d	<i>days</i>
30 d	<i>days</i>

Window configuration

Selection list referenced by the following parameters:

- [Statistics . Window I Demand](#)

Window configuration	Description
sliding	<i>Moving mean: Continuously the newest measuring value is added and the oldest measuring value is removed from the moving mean (average value).</i>
fixed	<i>The average value is calculated for a fixed window.</i>

Selection

Selection list referenced by the following parameters:

- [HMI . Menu language](#)

Selection	Description
English	<i>English</i>
German	<i>German</i>
Russian	<i>Russian</i>
Polish	<i>Polish</i>
French	<i>French</i>
Portuguese	<i>Portuguese</i>
Spanish	<i>Spanish</i>
Romanian	<i>Romanian</i>

Record-Mode

Recorder Mode (Set the behaviour of the recorder)

Selection list referenced by the following parameters:

- [Fault rec . Record-Mode](#)

Record-Mode	Description
Alarms and Trips	<i>A recording is started in case of an alarm or a trip.</i>

Record-Mode	Description
Trips only	<i>A recording is started only in case of a trip.</i>

Resolution

Resolution (recording frequency)




Selection list referenced by the following parameters:

-  Trend rec . Resolution

Resolution	Description
60 min	<i>Add next entry: 60 min</i>
30 min	<i>Add next entry: 30 min</i>
15 min	<i>Add next entry: 15 min</i>
10 min	<i>Add next entry: 10 min</i>
5 min	<i>Add next entry: 5 min</i>

1..n, TrendRecList

Selection list referenced by the following parameters:

-  DNP3 . Analog value 0
-  Modbus . Mapped Meas 1
-  Trend rec . Trend1
-  Trend rec . Trend2
-  Trend rec . Trend3
-  Trend rec . Trend4
- [...]

1..n, TrendRecList	Description
“_”	<i>No assignment</i>
CT . IL1	<i>Measured value: Phase current (fundamental)</i>
CT . IL2	<i>Measured value: Phase current (fundamental)</i>
CT . IL3	<i>Measured value: Phase current (fundamental)</i>

1..n, TrendRecList	Description
CT . IG meas	<i>Measured value (measured): IG (fundamental)</i>
CT . IG calc	<i>Measured value (calculated): IG (fundamental)</i>
CT . IL1 RMS	<i>Measured value: Phase current (RMS)</i>
CT . IL2 RMS	<i>Measured value: Phase current (RMS)</i>
CT . IL3 RMS	<i>Measured value: Phase current (RMS)</i>
CT . IG meas RMS	<i>Measured value (measured): IG (RMS)</i>
CT . IG calc RMS	<i>Measured value (calculated): IG (RMS)</i>
CT . I0	<i>Measured value (calculated): Zero current (fundamental)</i>
CT . I1	<i>Measured value (calculated): Positive phase sequence current (fundamental)</i>
CT . I2	<i>Measured value (calculated): Unbalanced load current (fundamental)</i>
CT . %(I2/I1)	<i>Measured value (calculated): I2/I1, phase sequence will be taken into account automatically.</i>
CT . IL1 avg RMS	<i>IL1 average value (RMS)</i>
CT . IL2 avg RMS	<i>IL2 average value (RMS)</i>
CT . IL3 avg RMS	<i>IL3 average value (RMS)</i>
CT . IL1 THD	<i>Measured value (calculated): IL1 Total Harmonic Current</i>
CT . IL2 THD	<i>Measured value (calculated): IL2 Total Harmonic Current</i>
CT . IL3 THD	<i>Measured value (calculated): IL3 Total Harmonic Current</i>
ThR . Thermal Cap Used	<i>Measured value: Thermal Capacity Used</i>

1..n, OnOffList

Selection list referenced by the following parameters:

-  IEC 61850 . Function

1..n, OnOffList	Description
inactive	<i>inactive</i>
active	<i>active</i>

Baud rate

Selection list referenced by the following parameters:

- [DNP3 . Baud rate](#)

Baud rate	Description
1200	1200
2400	2400
4800	4800
9600	9600
19200	19200
38400	38400
57600	57600
115200	115200

Byte Frame

Selection list referenced by the following parameters:

- [DNP3 . Frame Layout](#)

Byte Frame	Description
8E1	8 data bits, even parity, 1 stopbit.
8O1	8 data bits, odd, 1 stopbit.
8N1	8 data bits, no parity, 1 stopbit.
8N2	8 data bits, no parity, 2 stopbits.

Optical rest position

Selection list referenced by the following parameters:

- [DNP3 . Optical rest position](#)

Optical rest position	Description
Light off	Light off
Light on	Light on

Communication Start Variants

Selection list referenced by the following parameters:

-  DNP3 . DataLink confirm

Communication Start Variants	Description
Never	<i>Option Never is recommended</i>
Always	<i>If this variable is set to Always then LinkLayer needs to establish a connection before sending any Frame.</i>
On_Large	<i>If set to On_Large then a connection needs to be established before sending the first Frame of a multi Term Message</i>

_AL_ResponseType_k

_AL_ResponseType_h

Selection list referenced by the following parameters:

-  DNP3 . AppLink confirm

<u>_AL_ResponseType_k</u>	Description
Never	<i>Never</i>
Always	<i>Always</i>
Event	<i>Event</i>

1..n, Assignment List

Assignment List

Selection list referenced by the following parameters:

-  DNP3 . DoubleBitInput 0

1..n, Assignment List	Description
"_"	<i>No assignment</i>
SG[1] . Pos	<i>Signal: Circuit Breaker Position (0 = Indeterminate, 1 = OFF, 2 = ON, 3 = Disturbed)</i>

1..n, Assignment List

Assignment List

Selection list referenced by the following parameters:

-  DNP3 . BinaryCounter 0

1..n, Assignment List	Description
"_"	<i>No assignment</i>
Prot . Fault No.	<i>Fault number</i>
Prot . No. of Grid Faults	<i>Number of grid faults: This is a counter for all faults (i.e. General Alarms »Prot . Alarm«), but except faults during a running cycle of the Automatic Reclosure module (signal »AR . running«). (Remark: The »Fault No.« counts every new fault independent of AR cycles. This means that for protective devices without AR module these two counters are equivalent.)</i>
SG[1] . TripCmd Cr	<i>Counter: Total number of trips of the switchgear.</i>
AR . AR Shot No.	<i>Counter - Auto Reclosure Attempts</i>
AR . Total number Cr	<i>Total number of all executed Automatic Reclosures Attempts</i>
AR . Cr successfl	<i>Total number of successfully executed Automatic Reclosures</i>
AR . Cr failed	<i>Total number of unsuccessfully executed automatic reclosure attempts</i>
AR . Cr Service Alarm1	<i>Remaining numbers of ARs until Service Alarm 1</i>
AR . Cr Service Alarm2	<i>Remaining numbers of ARs until Service Alarm 2</i>
AR . Max Shots / h Cr	<i>Counter for the maximum allowed shots per hour.</i>
Sys . Operating hours Cr	<i>Operating hours counter of the protective device</i>

Scale Factor

Multiplier in order to convert float values into integer.

Selection list referenced by the following parameters:

-  DNP3 . Scale Factor 0

Scale Factor	Description
0.001	<i>0.001</i>
0.01	<i>0.01</i>

Scale Factor	Description
0.1	<i>0.1</i>
1	<i>1</i>
10	<i>10</i>
100	<i>100</i>
1000	<i>1000</i>
10000	<i>10000</i>
100000	<i>100000</i>
1000000	<i>1000000</i>

Optical rest position

Selection list referenced by the following parameters:

-  [Modbus . Optical rest position](#)

Optical rest position	Description
Light off	<i>Light off</i>
Light on	<i>Light on</i>

Port selection

Selection list referenced by the following parameters:

-  [Modbus . TCP Port Config](#)

Port selection	Description
Default	<i>Default Port</i>
Private	<i>Private Port</i>

Baud rate

Selection list referenced by the following parameters:

-  [Modbus . Baud rate](#)

Baud rate	Description
1200	1200
2400	2400
4800	4800
9600	9600
19200	19200
38400	38400

Byte Frame

Selection list referenced by the following parameters:

- [↳ Modbus . Physical Settings](#)

Byte Frame	Description
8E1	8 data bits, even parity, 1 stopbit.
8O1	8 data bits, odd, 1 stopbit.
8N1	8 data bits, no parity, 1 stopbit.
8N2	8 data bits, no parity, 2 stopbits.

Type of SCADA mapping

This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.

Selection list referenced by the following parameters:

- [↳ Modbus . Type of SCADA mapping](#)

Type of SCADA mapping	Description
Standard	Default mapping of data objects
User-defined	User-defined mapping of data objects

Config status

Status of the user-defined SCADA configuration.\nPossible values:

Selection list referenced by the following parameters:

- [↳ Modbus . Config status](#)

Config status	Description
Changing	<i>New SCADA configuration is being loaded, but not active yet.</i>
OK	<i>The SCADA configuration is active.</i>
Config. not avail.	<i>The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>
Error	<i>Unexpected error. Please contact our service-team.</i>

Baud rate

Selection list referenced by the following parameters:

- [↳ IEC103 . Baud rate](#)

Baud rate	Description
1200	<i>1200</i>
2400	<i>2400</i>
4800	<i>4800</i>
9600	<i>9600</i>
19200	<i>19200</i>
38400	<i>38400</i>
57600	<i>57600</i>

Byte Frame

Selection list referenced by the following parameters:

- [↳ IEC103 . Physical Settings](#)

Byte Frame	Description
8E1	<i>8 data bits, even parity, 1 stopbit.</i>
8O1	<i>8 data bits, odd, 1 stopbit.</i>

Byte Frame	Description
8N1	<i>8 data bits, no parity, 1 stopbit.</i>
8N2	<i>8 data bits, no parity, 2 stopbits.</i>

Timezone

Selection whether the timestamps in IEC103 messages shall be given as UTC or local time. ("Local time" always includes the actual daylight saving settings.)

Selection list referenced by the following parameters:

-  IEC103 . Timezone

Timezone	Description
UTC	<i>UTC</i>
Local Time	<i>Local time according to the »Time Zones« setting (in Device Parameters) (incl. daylight saving settings).</i>

Type of SCADA mapping

This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.

Selection list referenced by the following parameters:

-  IEC103 . Type of SCADA mapping

Type of SCADA mapping	Description
Standard	<i>Default mapping of data objects</i>
User-defined	<i>User-defined mapping of data objects</i>

Config status

Status of the user-defined SCADA configuration.\nPossible values:

Selection list referenced by the following parameters:

-  IEC103 . Config status

Config status	Description
Changing	<i>New SCADA configuration is being loaded, but not active yet.</i>
OK	<i>The SCADA configuration is active.</i>
Config. not avail.	<i>The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).</i>
Error	<i>Unexpected error. Please contact our service-team.</i>

Port selection

Selection list referenced by the following parameters:

- [IEC104 . TCP Port Config](#)

Port selection	Description
Default	<i>Default Port</i>
Private	<i>Private Port</i>

Timezone

Selection whether the timestamps in the transmitted communication telegrams shall be given as UTC or local time. ("Local time" always includes the actual daylight saving settings.)

Selection list referenced by the following parameters:

- [IEC104 . Timezone](#)

Timezone	Description
UTC	<i>UTC</i>
Local Time	<i>Local time according to the »Time Zones« setting (in Device Parameters) (incl. daylight saving settings).</i>

Type of SCADA mapping

This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.

Selection list referenced by the following parameters:

- [IEC104 . Type of SCADA mapping](#)

Type of SCADA mapping	Description
Standard	Default mapping of data objects
User-defined	User-defined mapping of data objects

Config status

Status of the user-defined SCADA configuration.\nPossible values:

Selection list referenced by the following parameters:

- [IEC104 . Config status](#)

Config status	Description
Changing	New SCADA configuration is being loaded, but not active yet.
OK	The SCADA configuration is active.
Config. not avail.	The user-defined SCADA configuration is not available (e.g. has not been loaded into the device).
Error	Unexpected error. Please contact our service-team.

Type of SCADA mapping

This setting decides whether the communication protocol shall use the default mapping of data objects, or some user-defined mapping that has been loaded from a *.HptSMap file.

Selection list referenced by the following parameters:

- [Profibus . Type of SCADA mapping](#)

Type of SCADA mapping	Description
Standard	Default mapping of data objects
User-defined	User-defined mapping of data objects

Time Zones

Selection list referenced by the following parameters:



-  TimeSync . Time Zones

Time Zones	Description
UTC+14 Kiritimati	<i>UTC+14 Kiritimati</i>
UTC+13 Rawaki	<i>UTC+13 Rawaki</i>
UTC+12.75 Chatham Island	<i>UTC+12.75 Chatham Island</i>
UTC+12 Wellington	<i>UTC+12 Wellington</i>
UTC+11.5 Kingston	<i>UTC+11.5 Kingston</i>
UTC+11 Port Vila	<i>UTC+11 Port Vila</i>
UTC+10.5 Lord Howe Island	<i>UTC+10.5 Lord Howe Island</i>
UTC+10 Sydney	<i>UTC+10 Sydney</i>
UTC+9.5 Adelaide	<i>UTC+9.5 Adelaide</i>
UTC+9 Tokyo	<i>UTC+9 Tokyo</i>
UTC+8 Hong Kong	<i>UTC+8 Hong Kong</i>
UTC+7 Bangkok	<i>UTC+7 Bangkok</i>
UTC+6.5 Rangoon	<i>UTC+6.5 Rangoon</i>
UTC+6 Colombo	<i>UTC+6 Colombo</i>
UTC+5.75 Kathmandu	<i>UTC+5.75 Kathmandu</i>
UTC+5.5 New Delhi	<i>UTC+5.5 New Delhi</i>
UTC+5 Islamabad	<i>UTC+5 Islamabad</i>
UTC+4.5 Kabul	<i>UTC+4.5 Kabul</i>
UTC+4 Abu Dhabi	<i>UTC+4 Abu Dhabi</i>
UTC+3.5 Tehran	<i>UTC+3.5 Tehran</i>
UTC+3 Moscow	<i>UTC+3 Moscow</i>
UTC+2 Athens	<i>UTC+2 Athens</i>
UTC+1 Berlin	<i>UTC+1 Berlin</i>
UTC+0 London	<i>UTC+0 London</i>
UTC-1 Azores	<i>UTC-1 Azores</i>
UTC-2 Fern. d. Noronha	<i>UTC-2 Fern. d. Noronha</i>
UTC-3 Buenos Aires	<i>UTC-3 Buenos Aires</i>

Time Zones	Description
UTC-3.5 St. John's	<i>UTC-3.5 St. John's</i>
UTC-4 Santiago	<i>UTC-4 Santiago</i>
UTC-5 New York	<i>UTC-5 New York</i>
UTC-6 Chicago	<i>UTC-6 Chicago</i>
UTC-7 Salt Lake City	<i>UTC-7 Salt Lake City</i>
UTC-8 Los Angeles	<i>UTC-8 Los Angeles</i>
UTC-9 Anchorage	<i>UTC-9 Anchorage</i>
UTC-9.5 Taiohae	<i>UTC-9.5 Taiohae</i>
UTC-10 Honolulu	<i>UTC-10 Honolulu</i>
UTC-11 Midway Islands	<i>UTC-11 Midway Islands</i>

Month of clock change

Selection list referenced by the following parameters:

-  TimeSync . Summertime m
-  TimeSync . Wintertime m

Month of clock change	Description
January	<i>January</i>
February	<i>February</i>
March	<i>March</i>
April	<i>April</i>
May	<i>May</i>
June	<i>June</i>
July	<i>July</i>
August	<i>August</i>
September	<i>September</i>
October	<i>October</i>
November	<i>November</i>
December	<i>December</i>

Date

Selection list referenced by the following parameters:

- [TimeSync . Summertime d](#)
- [TimeSync . Wintertime d](#)

Date	Description
Sunday	<i>Sunday</i>
Monday	<i>Monday</i>
Tuesday	<i>Tuesday</i>
Wednesday	<i>Wednesday</i>
Thursday	<i>Thursday</i>
Friday	<i>Friday</i>
Saturday	<i>Saturday</i>
General day	<i>General day: Examples: first day of month, last day of month</i>

Day of clock change

Day of Time Saving change

Selection list referenced by the following parameters:

- [TimeSync . Summertime w](#)
- [TimeSync . Wintertime w](#)

Day of clock change	Description
First	<i>First week of the month</i>
Second	<i>Second week of the month</i>
Third	<i>Third week of the month</i>
Fourth	<i>Fourth week of the month</i>
Last	<i>Last week of the month</i>

Used Protocol

Selection list referenced by the following parameters:

-  TimeSync . TimeSync

Used Protocol	Description
"_"	-
IRIG-B . IRIG-B	<i>IRIG-B-Module</i>
SNTP . SNTP	<i>SNTP-Module</i>
Modbus . Modbus	<i>Modbus Protocol</i>
IEC103 . IEC 60870-5-103	<i>IEC 60870-5-103 Protocol</i>
IEC104 . IEC104	<i>IEC 60870-5-104 communication</i>
DNP3 . DNP3	<i>Distributed Network Protocol</i>

IRIG-B00X

Determination of the Type: IRIG-B00X. IRIG-B types differ in types of included "Coded Expressions" (year, control-functions, straight-binary-seconds).

Selection list referenced by the following parameters:

-  IRIG-B . IRIG-B00X

IRIG-B00X	Description
IRIGB-000	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-001	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-002	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-003	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-004	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-005	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-006	<i>Please refer to: IRIG STANDARD 200-04</i>
IRIGB-007	<i>Please refer to: IRIG STANDARD 200-04</i>

Selection list referenced by the following parameters:

-  Sys . DM version

	Description
3.7.b	Version

Phase Sequence

Selection list referenced by the following parameters:

-  Field Para . Phase Sequence

Phase Sequence	Description
ABC	rotating clockwise
ACB	Counter-clockwise phase sequence. Positive and negative phase sequence are exchanged and MTA is turned for 180°.

fN

Selection list referenced by the following parameters:



-  Field Para . f

fN	Description
50	Rated frequency
60	Rated frequency

Ratio prim/sec

w_prim/w_sec

Selection list referenced by the following parameters:

-  CT . CT sec
-  CT . ECT sec

Ratio prim/sec	Description
1	Rated value of the secondary side of the current transformers.
5	Rated value of the secondary side of the current transformers.

Polarity







Selection list referenced by the following parameters:

-  CT . CT dir
-  CT . ECT dir

Polarity	Description
0	<i>0</i>
180	<i>180 degree polarity correction (wiring faults)</i>

active/inactive

Selection list referenced by the following parameters:



-  BO Slot X2 . DISARMED Ctrl
-  Prot . ExBlo Fc
-  Prot . ExBlo TripCmd Fc
-  IH2 . ExBlo Fc
-  I[1] . ExBlo Fc
-  I[1] . Ex rev Interl Fc
- [...]





active/inactive	Description
inactive	<i>inactive</i>
active	<i>active</i>

AdaptSet

Adaptive Parameters

Selection list referenced by the following parameters:

-  I[1] . AdaptSet 1
-  I[1] . AdaptSet 2

-  I[1] . AdaptSet 3
-  I[1] . AdaptSet 4
-  IG[1] . AdaptSet 1
-  IG[1] . AdaptSet 2
- [...]

AdaptSet	Description
"_"	<i>No assignment</i>
IH2 . Blo L1	<i>Signal: Blocked L1</i>
IH2 . Blo L2	<i>Signal: Blocked L2</i>
IH2 . Blo L3	<i>Signal: Blocked L3</i>
IH2 . Blo IG meas	<i>Signal: Blocking of the ground (earth) protection module (measured ground current)</i>
IH2 . Blo IG calc	<i>Signal: Blocking of the ground (earth) protection module (calculated ground current)</i>
IH2 . 3-ph Blo	<i>Signal: Inrush was detected in at least one phase - trip command blocked.</i>
AR . running	<i>Signal: Auto Reclosing running</i>
AR . Pre Shot	<i>Pre Shot Control</i>
AR . Shot 1	<i>Shot Control</i>
AR . Shot 2	<i>Shot Control</i>
AR . Shot 3	<i>Shot Control</i>
AR . Shot 4	<i>Shot Control</i>
AR . Shot 5	<i>Shot Control</i>
AR . Shot 6	<i>Shot Control</i>
SOTF . enabled	<i>Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.</i>
CLPU . enabled	<i>Signal: Cold Load enabled</i>
Exp[1] . Alarm	<i>Signal: Alarm</i>
Exp[2] . Alarm	<i>Signal: Alarm</i>
Exp[3] . Alarm	<i>Signal: Alarm</i>
Exp[4] . Alarm	<i>Signal: Alarm</i>
CTS . Alarm	<i>Signal: Alarm Current Transformer Measuring Circuit Supervision</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>

AdaptSet	Description
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
Modbus . Scada Cmd 1	<i>Scada Command</i>
Modbus . Scada Cmd 2	<i>Scada Command</i>
Modbus . Scada Cmd 3	<i>Scada Command</i>
Modbus . Scada Cmd 4	<i>Scada Command</i>
Modbus . Scada Cmd 5	<i>Scada Command</i>
Modbus . Scada Cmd 6	<i>Scada Command</i>
Modbus . Scada Cmd 7	<i>Scada Command</i>
Modbus . Scada Cmd 8	<i>Scada Command</i>
Modbus . Scada Cmd 9	<i>Scada Command</i>
Modbus . Scada Cmd 10	<i>Scada Command</i>
Modbus . Scada Cmd 11	<i>Scada Command</i>
Modbus . Scada Cmd 12	<i>Scada Command</i>
Modbus . Scada Cmd 13	<i>Scada Command</i>
Modbus . Scada Cmd 14	<i>Scada Command</i>
Modbus . Scada Cmd 15	<i>Scada Command</i>
Modbus . Scada Cmd 16	<i>Scada Command</i>
IEC 61850 . GOSINGGIO1.Ind1.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind2.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind3.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind4.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

AdaptSet	Description
IEC 61850 . GOSINGGIO1.Ind5.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind6.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind7.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind8.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind9.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind10.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind11.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind12.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind13.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind14.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind15.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind16.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind17.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind18.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind19.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind20.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind21.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind22.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind23.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind24.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

AdaptSet	Description
IEC 61850 . GOSINGGIO1.Ind25.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind26.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind27.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind28.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind29.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind30.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind31.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind32.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . SPCSO1	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO2	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO3	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO4	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO5	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO6	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO7	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO8	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO9	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO10	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO11	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO12	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>

AdaptSet	Description
IEC 61850 . SPCSO13	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO14	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO15	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO16	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC103 . Scada Cmd 1	<i>Scada Command</i>
IEC103 . Scada Cmd 2	<i>Scada Command</i>
IEC103 . Scada Cmd 3	<i>Scada Command</i>
IEC103 . Scada Cmd 4	<i>Scada Command</i>
IEC103 . Scada Cmd 5	<i>Scada Command</i>
IEC103 . Scada Cmd 6	<i>Scada Command</i>
IEC103 . Scada Cmd 7	<i>Scada Command</i>
IEC103 . Scada Cmd 8	<i>Scada Command</i>
IEC103 . Scada Cmd 9	<i>Scada Command</i>
IEC103 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 1	<i>Scada Command</i>
IEC104 . Scada Cmd 2	<i>Scada Command</i>
IEC104 . Scada Cmd 3	<i>Scada Command</i>
IEC104 . Scada Cmd 4	<i>Scada Command</i>
IEC104 . Scada Cmd 5	<i>Scada Command</i>
IEC104 . Scada Cmd 6	<i>Scada Command</i>
IEC104 . Scada Cmd 7	<i>Scada Command</i>
IEC104 . Scada Cmd 8	<i>Scada Command</i>
IEC104 . Scada Cmd 9	<i>Scada Command</i>
IEC104 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 11	<i>Scada Command</i>
IEC104 . Scada Cmd 12	<i>Scada Command</i>
IEC104 . Scada Cmd 13	<i>Scada Command</i>
IEC104 . Scada Cmd 14	<i>Scada Command</i>
IEC104 . Scada Cmd 15	<i>Scada Command</i>

AdaptSet	Description
IEC104 . Scada Cmd 16	<i>Scada Command</i>
Profibus . Scada Cmd 1	<i>Scada Command</i>
Profibus . Scada Cmd 2	<i>Scada Command</i>
Profibus . Scada Cmd 3	<i>Scada Command</i>
Profibus . Scada Cmd 4	<i>Scada Command</i>
Profibus . Scada Cmd 5	<i>Scada Command</i>
Profibus . Scada Cmd 6	<i>Scada Command</i>
Profibus . Scada Cmd 7	<i>Scada Command</i>
Profibus . Scada Cmd 8	<i>Scada Command</i>
Profibus . Scada Cmd 9	<i>Scada Command</i>
Profibus . Scada Cmd 10	<i>Scada Command</i>
Profibus . Scada Cmd 11	<i>Scada Command</i>
Profibus . Scada Cmd 12	<i>Scada Command</i>
Profibus . Scada Cmd 13	<i>Scada Command</i>
Profibus . Scada Cmd 14	<i>Scada Command</i>
Profibus . Scada Cmd 15	<i>Scada Command</i>
Profibus . Scada Cmd 16	<i>Scada Command</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>

AdaptSet	Description
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>

AdaptSet	Description
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>

AdaptSet	Description
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>

AdaptSet	Description
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

AdaptSet	Description
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>

AdaptSet	Description
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>

AdaptSet	Description
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>

AdaptSet	Description
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

AdaptSet	Description
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>

AdaptSet	Description
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>

AdaptSet	Description
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>

AdaptSet	Description
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

AdaptSet	Description
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

CB List

Selection list referenced by the following parameters:

-  AR . CB

CB List	Description
“_”	<i>No assignment</i>
SG[1] .	

1..n, DI-LogicList

Selection list referenced by the following parameters:

-  AR . Ex Shot Inc
-  AR . Ex Lock
-  AR . DI Reset Ex Lock
-  SOTF . Ext SOTF
-  SG[1] . Aux ON
-  SG[1] . Aux OFF
- *[...]*

1..n, DI-LogicList	Description
"_"	<i>No assignment</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
DNP3 . BinaryOutput0	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput1	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput2	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput3	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput4	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput5	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput6	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput7	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput8	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput9	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput10	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput11	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput12	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput13	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>

1..n, DI-LogicList	Description
DNP3 . BinaryOutput14	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput15	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput16	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput17	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput18	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput19	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput20	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput21	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput22	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput23	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput24	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput25	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput26	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput27	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput28	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput29	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput30	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput31	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
IEC104 . Scada Cmd 1	<i>Scada Command</i>
IEC104 . Scada Cmd 2	<i>Scada Command</i>
IEC104 . Scada Cmd 3	<i>Scada Command</i>
IEC104 . Scada Cmd 4	<i>Scada Command</i>

1..n, DI-LogicList	Description
IEC104 . Scada Cmd 5	<i>Scada Command</i>
IEC104 . Scada Cmd 6	<i>Scada Command</i>
IEC104 . Scada Cmd 7	<i>Scada Command</i>
IEC104 . Scada Cmd 8	<i>Scada Command</i>
IEC104 . Scada Cmd 9	<i>Scada Command</i>
IEC104 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 11	<i>Scada Command</i>
IEC104 . Scada Cmd 12	<i>Scada Command</i>
IEC104 . Scada Cmd 13	<i>Scada Command</i>
IEC104 . Scada Cmd 14	<i>Scada Command</i>
IEC104 . Scada Cmd 15	<i>Scada Command</i>
IEC104 . Scada Cmd 16	<i>Scada Command</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, DI-LogicList	Description
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, DI-LogicList	Description
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, DI-LogicList	Description
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>

1..n, DI-LogicList	Description
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>

1..n, DI-LogicList	Description
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, DI-LogicList	Description
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, DI-LogicList	Description
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>

1..n, DI-LogicList	Description
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>

1..n, DI-LogicList	Description
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, DI-LogicList	Description
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, DI-LogicList	Description
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>

1..n, DI-LogicList	Description
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>

1..n, DI-LogicList	Description
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

Communication Commands

Selection list referenced by the following parameters:

-  AR . Scada Reset Ex Lock

Communication Commands	Description
"_"	<i>No assignment</i>
DNP3 . BinaryOutput0	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput1	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput2	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput3	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput4	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput5	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput6	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput7	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput8	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput9	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput10	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput11	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput12	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput13	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>

Communication Commands	Description
DNP3 . BinaryOutput14	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput15	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput16	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput17	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput18	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput19	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput20	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput21	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput22	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput23	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput24	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput25	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput26	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput27	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput28	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput29	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput30	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
DNP3 . BinaryOutput31	<i>Virtual Digital Output (DNP). This corresponds to a virtual binary input of the protective device.</i>
Modbus . Scada Cmd 1	<i>Scada Command</i>
Modbus . Scada Cmd 2	<i>Scada Command</i>
Modbus . Scada Cmd 3	<i>Scada Command</i>

Communication Commands	Description
Modbus . Scada Cmd 4	<i>Scada Command</i>
Modbus . Scada Cmd 5	<i>Scada Command</i>
Modbus . Scada Cmd 6	<i>Scada Command</i>
Modbus . Scada Cmd 7	<i>Scada Command</i>
Modbus . Scada Cmd 8	<i>Scada Command</i>
Modbus . Scada Cmd 9	<i>Scada Command</i>
Modbus . Scada Cmd 10	<i>Scada Command</i>
Modbus . Scada Cmd 11	<i>Scada Command</i>
Modbus . Scada Cmd 12	<i>Scada Command</i>
Modbus . Scada Cmd 13	<i>Scada Command</i>
Modbus . Scada Cmd 14	<i>Scada Command</i>
Modbus . Scada Cmd 15	<i>Scada Command</i>
Modbus . Scada Cmd 16	<i>Scada Command</i>
IEC 61850 . GOSINGGIO1.Ind1.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind2.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind3.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind4.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind5.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind6.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind7.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind8.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind9.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

Communication Commands	Description
IEC 61850 . GOSINGGIO1.Ind10.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind11.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind12.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind13.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind14.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind15.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind16.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind17.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind18.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind19.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind20.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind21.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind22.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind23.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind24.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind25.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind26.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind27.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind28.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind29.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>

Communication Commands	Description
IEC 61850 . GOSINGGIO1.Ind30.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind31.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . GOSINGGIO1.Ind32.stVal	<i>Signal: Virtual Input (IEC61850 GGIO Ind): State</i>
IEC 61850 . SPCSO1	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO2	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO3	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO4	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO5	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO6	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO7	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO8	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO9	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO10	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO11	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO12	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO13	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO14	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO15	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC 61850 . SPCSO16	<i>Status bit that can be set by clients like e.g. SCADA (Single Point Controllable Status Output).</i>
IEC103 . Scada Cmd 1	<i>Scada Command</i>
IEC103 . Scada Cmd 2	<i>Scada Command</i>

Communication Commands	Description
IEC103 . Scada Cmd 3	<i>Scada Command</i>
IEC103 . Scada Cmd 4	<i>Scada Command</i>
IEC103 . Scada Cmd 5	<i>Scada Command</i>
IEC103 . Scada Cmd 6	<i>Scada Command</i>
IEC103 . Scada Cmd 7	<i>Scada Command</i>
IEC103 . Scada Cmd 8	<i>Scada Command</i>
IEC103 . Scada Cmd 9	<i>Scada Command</i>
IEC103 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 1	<i>Scada Command</i>
IEC104 . Scada Cmd 2	<i>Scada Command</i>
IEC104 . Scada Cmd 3	<i>Scada Command</i>
IEC104 . Scada Cmd 4	<i>Scada Command</i>
IEC104 . Scada Cmd 5	<i>Scada Command</i>
IEC104 . Scada Cmd 6	<i>Scada Command</i>
IEC104 . Scada Cmd 7	<i>Scada Command</i>
IEC104 . Scada Cmd 8	<i>Scada Command</i>
IEC104 . Scada Cmd 9	<i>Scada Command</i>
IEC104 . Scada Cmd 10	<i>Scada Command</i>
IEC104 . Scada Cmd 11	<i>Scada Command</i>
IEC104 . Scada Cmd 12	<i>Scada Command</i>
IEC104 . Scada Cmd 13	<i>Scada Command</i>
IEC104 . Scada Cmd 14	<i>Scada Command</i>
IEC104 . Scada Cmd 15	<i>Scada Command</i>
IEC104 . Scada Cmd 16	<i>Scada Command</i>
Profibus . Scada Cmd 1	<i>Scada Command</i>
Profibus . Scada Cmd 2	<i>Scada Command</i>
Profibus . Scada Cmd 3	<i>Scada Command</i>
Profibus . Scada Cmd 4	<i>Scada Command</i>
Profibus . Scada Cmd 5	<i>Scada Command</i>
Profibus . Scada Cmd 6	<i>Scada Command</i>
Profibus . Scada Cmd 7	<i>Scada Command</i>

Communication Commands	Description
Profibus . Scada Cmd 8	<i>Scada Command</i>
Profibus . Scada Cmd 9	<i>Scada Command</i>
Profibus . Scada Cmd 10	<i>Scada Command</i>
Profibus . Scada Cmd 11	<i>Scada Command</i>
Profibus . Scada Cmd 12	<i>Scada Command</i>
Profibus . Scada Cmd 13	<i>Scada Command</i>
Profibus . Scada Cmd 14	<i>Scada Command</i>
Profibus . Scada Cmd 15	<i>Scada Command</i>
Profibus . Scada Cmd 16	<i>Scada Command</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  SOTF . Mode

Mode	Description
CB Pos	<i>The CB Pos Indicator starts the Timer.</i>
I<	<i>The CB is in the OFF Position, if the measured current is less than this parameter.</i>
CB Pos And I<	<i>(The CB Pos Indicator starts the Timer.) And (The CB is in the OFF Position, if the measured current is less than this parameter.)</i>
CB manual ON	<i>Circuit breaker was switched on manually</i>
Ext SOTF	<i>External Switch Onto Fault</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  CLPU . Mode

Mode	Description
CB Pos	<i>The CB Pos Indicator starts the Timer.</i>
I<	<i>The Pickup Timer will be started, if the measured current is less than parameter "I<".</i>
CB Pos Or I<	<i>(The CB Pos Indicator starts the Timer.) Or (The Pickup Timer will be started, if the measured current is less than parameter "I<".)</i>
CB Pos And I<	<i>(The CB Pos Indicator starts the Timer.) And (The Pickup Timer will be started, if the measured current is less than parameter "I<".)</i>

Scheme

Via this selection menu, the BF supervision scheme is to be selected.

Selection list referenced by the following parameters:

-  CBF . Scheme

Scheme	Description
50BF	<i>A Breaker Failure is detected, if the measured currents do not fall below a settable threshold within a settable time interval.</i>
CB Pos	<i>A Circuit Breaker Failure is detected after a CB open command, if the Position Contacts of the Circuit Breaker do not allow the conclusion that the Breaker is now in the Open Position within a settable time interval.</i>
50BF and CB Pos	<i>A Circuit Breaker Failure is detected if the evaluation of the Position Indicators or the evaluation of the current measurement indicate that the CB Off-Command was not executed. This scheme is called "Minimal Current Scheme" according to IEEE C37.119.</i>

Trigger

Determining the trigger mode for the Breaker Failure. The selection will pickup the Breaker Failure as well as the assignments (Trigger 1, Trigger 2, Trigger 3). They are OR connected.

Selection list referenced by the following parameters:

-  CBF . Trigger

Trigger	Description
- . -	<i>no assignment</i>
All Trips	<i>All trip signals that are assigned to this breaker (within the trip manager) will start the BF module.</i>
External Trips	<i>All external trips that are assigned to this breaker (within the trip manager) will start the BF module.</i>
Current Trips	<i>All current trips that are assigned to this breaker (within the trip manager) will start the BF module.</i>

External Trips

All external trips that are assigned to this breaker (within the trip manager) will start the BF module.

External Trips	Description
"_"	<i>No assignment</i>
ExP[1] . TripCmd	<i>Signal: Trip Command</i>
ExP[2] . TripCmd	<i>Signal: Trip Command</i>
ExP[3] . TripCmd	<i>Signal: Trip Command</i>
ExP[4] . TripCmd	<i>Signal: Trip Command</i>

Current Trips

All current trips that are assigned to this breaker (within the trip manager) will start the BF module.

Current Trips	Description
"_"	<i>No assignment</i>
I[1] . TripCmd	<i>Signal: Trip Command</i>
I[2] . TripCmd	<i>Signal: Trip Command</i>
I[3] . TripCmd	<i>Signal: Trip Command</i>
I[4] . TripCmd	<i>Signal: Trip Command</i>
I[5] . TripCmd	<i>Signal: Trip Command</i>
I[6] . TripCmd	<i>Signal: Trip Command</i>

Current Trips	Description
IG[1] . TripCmd	<i>Signal: Trip Command</i>
IG[2] . TripCmd	<i>Signal: Trip Command</i>
IG[3] . TripCmd	<i>Signal: Trip Command</i>
IG[4] . TripCmd	<i>Signal: Trip Command</i>
ThR . TripCmd	<i>Signal: Trip Command</i>
I2>[1] . TripCmd	<i>Signal: Trip Command</i>
I2>[2] . TripCmd	<i>Signal: Trip Command</i>

Trigger

Determining the trigger mode for the Breaker Failure. The selection will pickup the Breaker Failure as well as the assignments (Trigger 1, Trigger 2, Trigger 3). They are OR connected.

Selection list referenced by the following parameters:

-  CBF . Trigger1

Trigger	Description
"-"	<i>No assignment</i>
I[1] . TripCmd	<i>Signal: Trip Command</i>
I[2] . TripCmd	<i>Signal: Trip Command</i>
I[3] . TripCmd	<i>Signal: Trip Command</i>
I[4] . TripCmd	<i>Signal: Trip Command</i>
I[5] . TripCmd	<i>Signal: Trip Command</i>
I[6] . TripCmd	<i>Signal: Trip Command</i>
IG[1] . TripCmd	<i>Signal: Trip Command</i>
IG[2] . TripCmd	<i>Signal: Trip Command</i>
IG[3] . TripCmd	<i>Signal: Trip Command</i>
IG[4] . TripCmd	<i>Signal: Trip Command</i>
ThR . TripCmd	<i>Signal: Trip Command</i>
I2>[1] . TripCmd	<i>Signal: Trip Command</i>
I2>[2] . TripCmd	<i>Signal: Trip Command</i>
ExP[1] . TripCmd	<i>Signal: Trip Command</i>

Trigger	Description
Exp[2] . TripCmd	<i>Signal: Trip Command</i>
Exp[3] . TripCmd	<i>Signal: Trip Command</i>
Exp[4] . TripCmd	<i>Signal: Trip Command</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>

Trigger	Description
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>

Trigger	Description
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>

Trigger	Description
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>

Trigger	Description
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

Trigger	Description
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>

Trigger	Description
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>

Trigger	Description
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>

Trigger	Description
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

Trigger	Description
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>

Trigger	Description
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>

Trigger	Description
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>

Trigger	Description
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

Mode

general operation mode

Selection list referenced by the following parameters:



-  TCS . Mode

Mode	Description
Closed	<i>Selects that the breaker is going to be monitored when the breaker is closed.</i>
Either	<i>Selects that the breaker is going to be monitored when the breaker is either closed or open.</i>

1..n, Dig Inputs

List of Digital Inputs that are available for the detection of the Circuit Breaker Position.

Selection list referenced by the following parameters:

-  TCS . Input 1
-  TCS . Input 2

1..n, Dig Inputs	Description
"_"	<i>No assignment</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>

PSet-Switch

Switching Parameter Set

Selection list referenced by the following parameters:

-  Sys . PSet-Switch

PSet-Switch	Description
PS1	<i>The currently active Parameter Set is PS1</i>
PS2	<i>The currently active Parameter Set is PS2</i>
PS3	<i>The currently active Parameter Set is PS3</i>
PS4	<i>The currently active Parameter Set is PS4</i>
PSS via Inp fct	<i>Parameter Set Switch via input function</i>
PSS via Scada	<i>Parameter Set Switch via Scada. Write into this output byte the integer of the parameter set that should become active (e.g. 4 => Switch onto parameter set 4).</i>

1..n, PSS

List of the available Parameter Setting Group Switching Signals

Selection list referenced by the following parameters:

-  Sys . PS1: activated by

1..n, PSS	Description
"_"	<i>No assignment</i>
CTS . Alarm	<i>Signal: Alarm Current Transformer Measuring Circuit Supervision</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>

1..n, PSS	Description
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>

1..n, PSS	Description
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>

1..n, PSS	Description
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, PSS	Description
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, PSS	Description
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>

1..n, PSS	Description
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>

1..n, PSS	Description
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, PSS	Description
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, PSS	Description
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>

1..n, PSS	Description
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>

1..n, PSS	Description
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, PSS	Description
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, PSS	Description
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

Measuring method

Measuring method: fundamental or rms or 3rd harmonic (only generator protection relays)

Selection list referenced by the following parameters:

-  I[1] . Measuring method

Measuring method	Description
Fundamental	<i>Protection is based on Fundamental (1st. Harmonic)</i>
True RMS	<i>Protection is based on root-mean-square value (True RMS)</i>
I2	<i>Protection is based on negative phase sequence current</i>

Char

Characteristic

Selection list referenced by the following parameters:

-  I[1] . Char

Char	Description
DEFT	<i>DEFT</i>
IEC NINV	<i>IEC Normal Inverse</i>
IEC VINV	<i>IEC Very Inverse [VINV]</i>
IEC EINV	<i>IEC Extremely Inverse - Characteristic</i>
IEC LINV	<i>IEC Long Time Inverse - Characteristic [LINV]</i>
RINV	<i>R Inverse [RINV] - Characteristic</i>
ANSI MINV	<i>ANSI Moderately Inverse [MINV] - Characteristic</i>
ANSI VINV	<i>ANSI Very Inverse [VINV]</i>
ANSI EINV	<i>ANSI Extremely Inverse - Characteristic</i>
Therm Flat	<i>Therm Flat [TF] - Characteristic</i>
IT	<i>IT - Characteristic</i>
I2T	<i>I2T - Characteristic</i>
I4T	<i>I4T - Characteristic</i>

Reset Mode

Selection list referenced by the following parameters:



-  I[1] . Reset Mode

Reset Mode	Description
instantaneous	<i>Instantaneous reset: when the current drops below the pickup setting, the TOC time resets to zero within 2 cycles.</i>
definite time	<i>Reset after a fixed time. (Remark: This delay is then defined by the parameter »t-reset delay«.)</i>
inverse time	<i>Calculated reset, based on the selected characteristic.</i>

IH2 Blo

Blocking the trip command, if an inrush is detected.

Selection list referenced by the following parameters:

-  I[1] . IH2 Blo
-  IG[1] . IH2 Blo

IH2 Blo	Description
Sys . inactive	<i>inactive</i>
IH2 . active	<i>active</i>

Measuring Channel

Selection list referenced by the following parameters:

-  IG[1] . IG Source

Measuring Channel	Description
CT . sensitive measurement	<i>sensitive measurement</i>
CT . measured	<i>measured</i>
CT . calculated	<i>calculated</i>

Measuring method

Measuring method: fundamental or rms or 3rd harmonic (only generator protection relays)

Selection list referenced by the following parameters:

-  IG[1] . Measuring method

Measuring method	Description
Fundamental	<i>Protection is based on Fundamental (1st. Harmonic)</i>
True RMS	<i>Protection is based on root-mean-square value (True RMS)</i>

VTS Block

Blocking of the module if the voltage transformer supervision detects a fault.

Selection list referenced by the following parameters:

-  IG[1] . Meas Circuit Superv

VTS Block	Description
Sys . inactive	<i>inactive</i>

Char

Characteristic

Selection list referenced by the following parameters:

-  IG[1] . Char

Char	Description
DEFT	<i>DEFT</i>
IEC NINV	<i>IEC Normal Inverse</i>
IEC VINV	<i>IEC Very Inverse [VINV]</i>
IEC EINV	<i>IEC Extremely Inverse - Characteristic</i>
IEC LINV	<i>IEC Long Time Inverse - Characteristic [LINV]</i>
RINV	<i>R Inverse [RINV] - Characteristic</i>
ANSI MINV	<i>ANSI Moderately Inverse [MINV] - Characteristic</i>
ANSI VINV	<i>ANSI Very Inverse [VINV]</i>
ANSI EINV	<i>ANSI Extremely Inverse - Characteristic</i>
Therm Flat	<i>Therm Flat [TF] - Characteristic</i>
IT	<i>IT - Characteristic</i>
I2T	<i>I2T - Characteristic</i>
I4T	<i>I4T - Characteristic</i>
RXIDG	<i>Special Overcurrent Curve</i>

Reset Mode

Selection list referenced by the following parameters:

-  IG[1] . Reset Mode

Reset Mode	Description
instantaneous	<i>Instantaneous reset: when the current drops below the pickup setting, the TOC time resets to zero within 2 cycles.</i>
definite time	<i>Reset after a fixed time. (Remark: This delay is then defined by the parameter »t-reset delay«.)</i>
inverse time	<i>Calculated reset, based on the selected characteristic.</i>

Char

Characteristic

Selection list referenced by the following parameters:

-  I2>[1] . Char

Char	Description
DEFT	<i>DEFT</i>
INV	<i>INV</i>

block mode

Selection list referenced by the following parameters:

-  IH2 . block mode

block mode	Description
1-ph Blo	<i>1-ph Blo: If an inrush is detected in one phase, the corresponding phase of those modules will be blocked, where inrush blocking is set to active.</i>
3-ph Blo	<i>3-ph Blo: If an inrush is detected in at least one phase, all three phases of those modules where inrush blocking is set to active will be blocked (cross blocking).</i>

Res Lock via:

Reset Options for the AR Lockout

Selection list referenced by the following parameters:

-  AR . Reset Mode

Res Lock via:	Description
auto	<i>If the Circuit Breaker is switched on manually, the Lockout state of the AR Module will be reset automatically.</i>
HMI	<i>Panel</i>
DI	<i>Digital Input</i>
Scada	<i>Scada</i>
HMI And Scada	<i>Panel And Scada</i>
HMI And DI	<i>Panel And Digital Input</i>
Scada And DI	<i>Scada And Digital Input</i>
HMI And DI	<i>Panel And Digital Input</i>

Initiate Mode

Selection list referenced by the following parameters:



-  AR . Initiate Mode

Initiate Mode	Description
Alarm	<i>Using Alarm signals from the assigned initiate protective functions to initiate (start) autoreclosure (fault timer supervision used)</i>
TripCmd	<i>Using Trip command signals from the assigned initiate protective functions to initiate (start) autoreclosure (fault timer NOT used!)</i>

Start fct

AR starts, if the assigned protection function is activated/trips:

Selection list referenced by the following parameters:

-  AR . Initiate AR: InitiateFc1
-  AR . Shot 1: InitiateFc1

Start fct	Description
“_”	<i>No assignment</i>
. I[1]	<i>Phase Overcurrent Stage</i>
. I[2]	<i>Phase Overcurrent Stage</i>
. I[3]	<i>Phase Overcurrent Stage</i>
. I[4]	<i>Phase Overcurrent Stage</i>
. I[5]	<i>Phase Overcurrent Stage</i>
. I[6]	<i>Phase Overcurrent Stage</i>
. IG[1]	<i>Earth current protection - Stage</i>
. IG[2]	<i>Earth current protection - Stage</i>
. IG[3]	<i>Earth current protection - Stage</i>
. IG[4]	<i>Earth current protection - Stage</i>
. I2>[1]	<i>Unbalanced Load-Stage</i>
. I2>[2]	<i>Unbalanced Load-Stage</i>
. ExP[1]	<i>External Protection - Module</i>
. ExP[2]	<i>External Protection - Module</i>
. ExP[3]	<i>External Protection - Module</i>
. ExP[4]	<i>External Protection - Module</i>

NonIL ResetMode

Non-Interlocking ResetMode

Selection list referenced by the following parameters:

-  Ctrl . Res NonIL

NonIL ResetMode	Description
single Operation	<i>single Operation</i>
timeout	<i>timeout</i>
permanent	<i>permanent</i>

Manipulate Position

WARNING! Fake Position - Manual Position Manipulation

Selection list referenced by the following parameters:



-  SG[1] . Manipulate Position

Manipulate Position	Description
inactive	<i>inactive</i>
Pos OFF	<i>Signal: Circuit Breaker is in OFF-Position</i>
Pos ON	<i>Signal: Circuit Breaker is in ON-Position</i>

1..n, Trip Cmds

List of available Trip Commands

Selection list referenced by the following parameters:

-  SG[1] . Off Cmd1
-  SG[1] . Off Cmd2

1..n, Trip Cmds	Description
"_"	<i>No assignment</i>
I[1] . TripCmd	<i>Signal: Trip Command</i>
I[2] . TripCmd	<i>Signal: Trip Command</i>
I[3] . TripCmd	<i>Signal: Trip Command</i>
I[4] . TripCmd	<i>Signal: Trip Command</i>
I[5] . TripCmd	<i>Signal: Trip Command</i>
I[6] . TripCmd	<i>Signal: Trip Command</i>
IG[1] . TripCmd	<i>Signal: Trip Command</i>
IG[2] . TripCmd	<i>Signal: Trip Command</i>
IG[3] . TripCmd	<i>Signal: Trip Command</i>
IG[4] . TripCmd	<i>Signal: Trip Command</i>
ThR . TripCmd	<i>Signal: Trip Command</i>
I2>[1] . TripCmd	<i>Signal: Trip Command</i>
I2>[2] . TripCmd	<i>Signal: Trip Command</i>
ExP[1] . TripCmd	<i>Signal: Trip Command</i>

1..n, Trip Cmds	Description
ExP[2] . TripCmd	<i>Signal: Trip Command</i>
ExP[3] . TripCmd	<i>Signal: Trip Command</i>
ExP[4] . TripCmd	<i>Signal: Trip Command</i>

1..n, In-SyncList

Selection list referenced by the following parameters:

-  SG[1] . Synchronism

1..n, In-SyncList	Description
"_"	<i>No assignment</i>
DI Slot X1 . DI 1	<i>Signal: Digital Input</i>
DI Slot X1 . DI 2	<i>Signal: Digital Input</i>
DI Slot X1 . DI 3	<i>Signal: Digital Input</i>
DI Slot X1 . DI 4	<i>Signal: Digital Input</i>
DI Slot X1 . DI 5	<i>Signal: Digital Input</i>
DI Slot X1 . DI 6	<i>Signal: Digital Input</i>
DI Slot X1 . DI 7	<i>Signal: Digital Input</i>
DI Slot X1 . DI 8	<i>Signal: Digital Input</i>
Logics . LE1.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE1.Timer Out	<i>Signal: Timer Output</i>
Logics . LE1.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE1.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE2.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE2.Timer Out	<i>Signal: Timer Output</i>
Logics . LE2.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE2.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE3.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE3.Timer Out	<i>Signal: Timer Output</i>
Logics . LE3.Out	<i>Signal: Latched Output (Q)</i>

1..n, In-SyncList	Description
Logics . LE3.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE4.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE4.Timer Out	<i>Signal: Timer Output</i>
Logics . LE4.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE4.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE5.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE5.Timer Out	<i>Signal: Timer Output</i>
Logics . LE5.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE5.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE6.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE6.Timer Out	<i>Signal: Timer Output</i>
Logics . LE6.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE6.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE7.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE7.Timer Out	<i>Signal: Timer Output</i>
Logics . LE7.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE7.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE8.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE8.Timer Out	<i>Signal: Timer Output</i>
Logics . LE8.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE8.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE9.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE9.Timer Out	<i>Signal: Timer Output</i>
Logics . LE9.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE9.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE10.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE10.Timer Out	<i>Signal: Timer Output</i>

1..n, In-SyncList	Description
Logics . LE10.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE10.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE11.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE11.Timer Out	<i>Signal: Timer Output</i>
Logics . LE11.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE11.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE12.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE12.Timer Out	<i>Signal: Timer Output</i>
Logics . LE12.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE12.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE13.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE13.Timer Out	<i>Signal: Timer Output</i>
Logics . LE13.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE13.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE14.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE14.Timer Out	<i>Signal: Timer Output</i>
Logics . LE14.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE14.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE15.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE15.Timer Out	<i>Signal: Timer Output</i>
Logics . LE15.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE15.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE16.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE16.Timer Out	<i>Signal: Timer Output</i>
Logics . LE16.Out	<i>Signal: Latched Output (Q)</i>

1..n, In-SyncList	Description
Logics . LE16.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE17.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE17.Timer Out	<i>Signal: Timer Output</i>
Logics . LE17.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE17.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE18.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE18.Timer Out	<i>Signal: Timer Output</i>
Logics . LE18.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE18.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE19.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE19.Timer Out	<i>Signal: Timer Output</i>
Logics . LE19.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE19.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE20.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE20.Timer Out	<i>Signal: Timer Output</i>
Logics . LE20.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE20.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE21.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE21.Timer Out	<i>Signal: Timer Output</i>
Logics . LE21.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE21.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE22.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE22.Timer Out	<i>Signal: Timer Output</i>
Logics . LE22.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE22.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, In-SyncList	Description
Logics . LE23.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE23.Timer Out	<i>Signal: Timer Output</i>
Logics . LE23.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE23.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE24.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE24.Timer Out	<i>Signal: Timer Output</i>
Logics . LE24.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE24.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE25.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE25.Timer Out	<i>Signal: Timer Output</i>
Logics . LE25.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE25.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE26.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE26.Timer Out	<i>Signal: Timer Output</i>
Logics . LE26.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE26.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE27.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE27.Timer Out	<i>Signal: Timer Output</i>
Logics . LE27.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE27.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE28.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE28.Timer Out	<i>Signal: Timer Output</i>
Logics . LE28.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE28.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE29.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, In-SyncList	Description
Logics . LE29.Timer Out	<i>Signal: Timer Output</i>
Logics . LE29.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE29.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE30.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE30.Timer Out	<i>Signal: Timer Output</i>
Logics . LE30.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE30.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE31.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE31.Timer Out	<i>Signal: Timer Output</i>
Logics . LE31.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE31.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE32.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE32.Timer Out	<i>Signal: Timer Output</i>
Logics . LE32.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE32.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE33.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE33.Timer Out	<i>Signal: Timer Output</i>
Logics . LE33.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE33.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE34.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE34.Timer Out	<i>Signal: Timer Output</i>
Logics . LE34.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE34.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE35.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE35.Timer Out	<i>Signal: Timer Output</i>

1..n, In-SyncList	Description
Logics . LE35.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE35.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE36.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE36.Timer Out	<i>Signal: Timer Output</i>
Logics . LE36.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE36.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE37.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE37.Timer Out	<i>Signal: Timer Output</i>
Logics . LE37.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE37.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE38.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE38.Timer Out	<i>Signal: Timer Output</i>
Logics . LE38.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE38.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE39.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE39.Timer Out	<i>Signal: Timer Output</i>
Logics . LE39.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE39.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE40.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE40.Timer Out	<i>Signal: Timer Output</i>
Logics . LE40.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE40.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE41.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE41.Timer Out	<i>Signal: Timer Output</i>
Logics . LE41.Out	<i>Signal: Latched Output (Q)</i>

1..n, In-SyncList	Description
Logics . LE41.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE42.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE42.Timer Out	<i>Signal: Timer Output</i>
Logics . LE42.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE42.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE43.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE43.Timer Out	<i>Signal: Timer Output</i>
Logics . LE43.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE43.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE44.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE44.Timer Out	<i>Signal: Timer Output</i>
Logics . LE44.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE44.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE45.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE45.Timer Out	<i>Signal: Timer Output</i>
Logics . LE45.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE45.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE46.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE46.Timer Out	<i>Signal: Timer Output</i>
Logics . LE46.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE46.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE47.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE47.Timer Out	<i>Signal: Timer Output</i>
Logics . LE47.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE47.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, In-SyncList	Description
Logics . LE48.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE48.Timer Out	<i>Signal: Timer Output</i>
Logics . LE48.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE48.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE49.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE49.Timer Out	<i>Signal: Timer Output</i>
Logics . LE49.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE49.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE50.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE50.Timer Out	<i>Signal: Timer Output</i>
Logics . LE50.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE50.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE51.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE51.Timer Out	<i>Signal: Timer Output</i>
Logics . LE51.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE51.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE52.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE52.Timer Out	<i>Signal: Timer Output</i>
Logics . LE52.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE52.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE53.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE53.Timer Out	<i>Signal: Timer Output</i>
Logics . LE53.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE53.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE54.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, In-SyncList	Description
Logics . LE54.Timer Out	<i>Signal: Timer Output</i>
Logics . LE54.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE54.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE55.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE55.Timer Out	<i>Signal: Timer Output</i>
Logics . LE55.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE55.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE56.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE56.Timer Out	<i>Signal: Timer Output</i>
Logics . LE56.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE56.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE57.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE57.Timer Out	<i>Signal: Timer Output</i>
Logics . LE57.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE57.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE58.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE58.Timer Out	<i>Signal: Timer Output</i>
Logics . LE58.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE58.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE59.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE59.Timer Out	<i>Signal: Timer Output</i>
Logics . LE59.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE59.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE60.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE60.Timer Out	<i>Signal: Timer Output</i>

1..n, In-SyncList	Description
Logics . LE60.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE60.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE61.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE61.Timer Out	<i>Signal: Timer Output</i>
Logics . LE61.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE61.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE62.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE62.Timer Out	<i>Signal: Timer Output</i>
Logics . LE62.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE62.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE63.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE63.Timer Out	<i>Signal: Timer Output</i>
Logics . LE63.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE63.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE64.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE64.Timer Out	<i>Signal: Timer Output</i>
Logics . LE64.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE64.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE65.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE65.Timer Out	<i>Signal: Timer Output</i>
Logics . LE65.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE65.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE66.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE66.Timer Out	<i>Signal: Timer Output</i>
Logics . LE66.Out	<i>Signal: Latched Output (Q)</i>

1..n, In-SyncList	Description
Logics . LE66.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE67.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE67.Timer Out	<i>Signal: Timer Output</i>
Logics . LE67.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE67.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE68.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE68.Timer Out	<i>Signal: Timer Output</i>
Logics . LE68.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE68.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE69.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE69.Timer Out	<i>Signal: Timer Output</i>
Logics . LE69.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE69.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE70.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE70.Timer Out	<i>Signal: Timer Output</i>
Logics . LE70.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE70.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE71.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE71.Timer Out	<i>Signal: Timer Output</i>
Logics . LE71.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE71.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE72.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE72.Timer Out	<i>Signal: Timer Output</i>
Logics . LE72.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE72.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

1..n, In-SyncList	Description
Logics . LE73.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE73.Timer Out	<i>Signal: Timer Output</i>
Logics . LE73.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE73.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE74.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE74.Timer Out	<i>Signal: Timer Output</i>
Logics . LE74.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE74.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE75.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE75.Timer Out	<i>Signal: Timer Output</i>
Logics . LE75.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE75.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE76.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE76.Timer Out	<i>Signal: Timer Output</i>
Logics . LE76.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE76.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE77.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE77.Timer Out	<i>Signal: Timer Output</i>
Logics . LE77.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE77.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE78.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE78.Timer Out	<i>Signal: Timer Output</i>
Logics . LE78.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE78.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE79.Gate Out	<i>Signal: Output of the logic gate</i>

1..n, In-SyncList	Description
Logics . LE79.Timer Out	<i>Signal: Timer Output</i>
Logics . LE79.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE79.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>
Logics . LE80.Gate Out	<i>Signal: Output of the logic gate</i>
Logics . LE80.Timer Out	<i>Signal: Timer Output</i>
Logics . LE80.Out	<i>Signal: Latched Output (Q)</i>
Logics . LE80.Out inverted	<i>Signal: Negated Latched Output (Q NOT)</i>

LE1.Gate

Logic gate

Selection list referenced by the following parameters:



-  Logics . LE1.Gate

LE1.Gate	Description
AND	<i>AND Gate</i>
OR	<i>OR Gate</i>
NAND	<i>NAND Gate</i>
NOR	<i>NOR Gate</i>

Mode

general operation mode

Selection list referenced by the following parameters:

-  BO Slot X2 . Disarm Mode
-  BO Slot X2 . Force Mode

Mode	Description
permanent	<i>permanent</i>

Mode	Description
timeout	<i>timeout</i>

active/inactive



Selection list referenced by the following parameters:

-  BO Slot X2 . DISARMED

active/inactive	Description
inactive	<i>inactive</i>
active	<i>active</i>

Relay operating modes

Selection list referenced by the following parameters:

-  BO Slot X2 . Force all Outs
-  BO Slot X2 . Force OR1

Relay operating modes	Description
Normal	<i>Normal</i>
De-Energized	<i>De-Energized</i>
Energized	<i>Energized</i>

State

Selection list referenced by the following parameters:

-  Sgen . State

State	Description
Off	<i>Off</i>
PreFault	<i>Pre Fault Duration</i>
FaultSimulation	<i>Duration of Fault Simulation</i>

State	Description
PostFault	<i>Post Fault Duration</i>
Init Res	<i>Init Reset</i>

TripCmd Mode

Trip Command Mode: Select between two operating modes for the Fault Simulator: "cold simulation" (without tripping the circuit breaker), or "hot simulation" (i.e. the simulation is authorized to trip the circuit breaker)

Selection list referenced by the following parameters:

-  Sgen . TripCmd Mode

TripCmd Mode	Description
No TripCmd	<i>No Trip Command: The TripCmd of all protection functions is blocked. The protection function will possibly trip but not generate a TripCmd.</i>
With TripCmd	<i>With Trip Command: The trip of a protection function generates a TripCmd, that can open the circuit breaker.</i>

Index

.....	326
I	
1...n Operating Modes	234
1..n, Assignment List	235, 315, 316
1..n, DI-LogicList	347
1..n, Dig Inputs	386
1..n, In-SyncList	408
1..n, OnOffList	313
1..n, PSS	387
1..n, TrendRecList	312
1..n, Trip Cmds	407
A	
AR	146, 146, 147, 151, 151, 152, 154, . 156, 156
Ack via »C« key	309
AdaptSet	328
active/inactive	328, 422
B	
BO Slot X2	18, 27, 27
Baud rate	222, 314, 317, 319
Byte Frame	314, 318, 319
block mode	404
C	
CB List	347
CBF	169, 169, 170, 171, 171, 171
CLPU	161, 161, 162, 163, 163
CT	51, 52, 53, 56
CTS	176, 176, 176, 177, 177

Char	401, 403, 404
Communication Commands	363
Communication Start Variants	315
Config status	223, 319, 320, 322
Config. Device Reset	226
Ctrl	179, 179, 179, 180, 180, 181
Current Trips	371
D	
DI Slot X1	16, 17
DNP3	73, 78, 78, 79, 79
Date	325
Day of clock change	325
Debouncing time	234
Device planning	227, 228, 229, 229, 230, 230, 230, . 231
Disturb rec	200, 201, 201, 201, 202
Duration	309, 310
E	
Earth overcurrent	228
Event rec	199, 199
Exp[1]	165, 165, 166, 167, 167
External Trips	371
F	
Fault	221
Fault rec	203, 203, 203
Field Para	50
fN	327
H	
HMI	46, 47, 47

I

I2>[1]	142, 142, 142, 144, 145
I>	227
IEC 61850	88, 88, 88, 89, 90, 92, 92
IEC103	93, 95, 95, 96, 96
IEC104	98, 101, 101, 101, 102
IG[1]	131, 131, 132, 135, 136
IH2	121, 121, 121, 122, 122
IH2 Blo	402
IRIG-B	108, 108, 108, 108, 109
IRIG-B00X	326
I[1]	124, 124, 125, 127, 128
Initiate Mode	405

L

LE1.Gate	421
LED active color	308
LEDs group A	29
Logics	207, 208, 209, 209

M

Manipulate Position	407
Measuring Channel	402
Measuring method	400, 402
Modbus	81, 84, 84, 84, 85, 86
Mode	224, 229, 230, 231, 232, 232, 233, 307, 369, 370, 386, 421
Month of clock change	324

N

No of Equations:	232
Nom voltage	234
NonIL ResetMode	406

O

Optical rest position 314, 317

P

PNO Id 223

PSet-Switch 387

Phase Sequence 327

Polarity 328

Port selection 317, 321

Profibus 103, 104, 104, 104, 105, 106

Prot 117, 118, 118, 118

R

Ratio prim/sec 327

Rec state 221

Record-Mode 311

Relay operating modes 422

Res Lock via: 405

Reset Mode 401, 404

Resolution 312

S

SG[1] 182, 185, 186, 187, 191, 194, 194,
196, 196

SNTP 110, 110, 111, 111, 111, 112

SOTF 157, 157, 158, 159, 159

SSV 211, 211, 211

Scada 71, 71

Scale Factor 316

Scaling 233

Scheme 370

Selection 311

Server State 224

Sgen	213, 213, 214, 214, 215, 216, 217
Start fct	405
State	221, 222, 224, 422
Statistics	68, 69, 70, 70, 70
Switching Authority	226
Sys	60, 61, 62, 63, 66
SysA	197, 197, 198, 198

T

TCS	173, 173, 174, 174, 175
TLS Certificate	226
Tcplp	72
ThR	138, 138, 138, 140, 140, 140, 141, . 141
Time Zones	323
TimeSync	114, 116
Timezone	320, 321
Trend rec	204, 206, 206, 206
Trigger	370, 372
TripCmd Mode	423
Type of SCADA mapping	318, 320, 322, 322
Type of passw. def.	225
true or not true	225

U

Used Protocol	231, 326
---------------------	----------

V

VTS Block	403
-----------------	-----

W

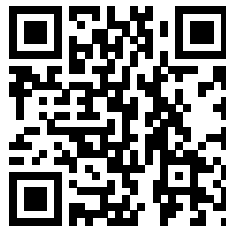
Window configuration	311
----------------------------	-----

Y

yes/no	228
-	
_AL_ResponseType_k	315

High PROTEC

docs.SEGelectronics.de/mri4-2



SEG Electronics GmbH reserves the right to update any portion of this publication at any time. Information provided by SEG Electronics GmbH is believed to be correct and reliable. However, SEG Electronics GmbH assumes no responsibility unless otherwise expressly undertaken.



SEG Electronics GmbH
Krefelder Weg 47 • D-47906 Kempen (Germany)
Postfach 10 07 55 (P.O.Box) • D-47884 Kempen (Germany)
Telephone: +49 (0) 21 52 145 1

Internet: www.SEGelectronics.de

Sales
Telephone: +49 (0) 21 52 145 331
Fax: +49 (0) 21 52 145 354

Service
Telephone: +49 (0) 21 52 145 614
Fax: +49 (0) 21 52 145 354

SEG Electronics has company-owned plants, subsidiaries, and branches, as well as authorized distributors and other authorized service and sales facilities throughout the world.

Complete address / phone / fax / email information for all locations is available on our website.